

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

CHAPTER 11

REQUIRED PLACARDS

TABLE OF CONTENTS

SECTION

FIGURE

11-01 INTERIOR

BEAM ASSY, CENTER LIFE RAFT COMPARTMENT	82
BEAM ASSY, FORWARD LIFE RAFT COMPARTMENT	82A
BIN ASSY, STOWAGE	191
BOX ASSY, GALLEY	130
BOX ASSY, GALLEY	130A
BOX ASSY, GALLEY	131
CHANNEL ASSY, CREW COMPARTMENT FLOOR SUPPORT	106
CHASSIS ASSY, AFT TOILET E PASSENGER SERVICE UNIT	49Y
CHASSIS ASSY, PASSENGER TOILET SERVICE UNIT	49Z
CHASSIS ASSY, SERVICE UNIT	49X
CLOSET INSTL, AFT COAT	192B
CLOSET INSTL, FORWARD COAT	192
CLOSET INSTL, MID CABIN COAT	192C
CLOSET INSTL, STATION 1382.75 LH AFT	164
COMPARTMENT ASSY, DOOR MOUNTED ESCAPE SLIDE	103
COMPARTMENT ASSY, PASSENGER CABIN AFT LIFE RAFT	59
COVER ASSY, COMPARTMENT E LAVATORY SERVICES BOX	137A
COVER ASSY, EMERGENCY EXIT LIGHT	19J
COVER ASSY, LAVATORY ELECTRICAL SERVICES	91
COVER ASSY, WINDOW PANEL	184
DOOR ASSY, MANUAL AIR SHUTOFF	106
DOOR ASSY, TOILET A	23F
DOOR ASSY, TOILET B	23A
DOOR ASSY, TOILET COMPARTMENT FOLDING	24
DRAIN INSTL, AFT TOILET FLOOR	114
DRAIN INSTL, AFT TOILETS	111
DRAIN INSTL, AFT TOILETS	115
DRAIN INSTL, FORWARD TOILETS	110
EQUIPMENT INSTL, EMERGENCY	19
FLOOR MARKING INSTL, HEATED FLOOR PANEL	78
HANDLE ASSY, LIFE RAFT DOOR	150
LATCH ASSY, LIFE RAFT DOOR	68
LAVATORY INSTL, TOILET A	107
LAVATORY INSTL, TOILET C	107
LAVATORY INSTL, TOILET D	107
LIGHT ASSY, EMERGENCY EXIT	19J
LIGHT INSTL, CONTROL CABIN EMERGENCY EXIT	20A
MARKING INSTL, BIN AND PANEL	186
MARKING INSTL, BIN STRUCTURE, CEILING SUPPORTS AND SIDEWALL INSULATION	187
MARKING INSTL, PASSENGER SERVICE UNIT	187
MARKING INSTL, PASSENGER SERVICE UNIT	188
MASK AND CONTAINER ASSY, AFT ATTENDANTS OXYGEN	26T
MASK AND CONTAINER INSTL, FORWARD ATTENDANTS OXYGEN	121
METAL-CAL INSTL, STATION 301 RH CEILING PANEL	70
PANEL ASSY, AFT LIFE RAFT COMPARTMENT FORWARD TRIM	59D
PANEL ASSY, AFT LOWERED CEILING GALLEY	185
PANEL ASSY, CABIN SIDEWALL PROTECTOR	57D
PANEL ASSY, CENTER LIFE RAFT COMPARTMENT AFT END TRIM	58D
PANEL ASSY, CENTER LIFE RAFT COMPARTMENT FORWARD END TRIM	58D
PANEL ASSY, FORWARD LOWERED CEILING GALLEY	185
PANEL ASSY, STATION 494 END	57
PANEL INSTL, CARGO ATTENDANTS	122
PANEL INSTL, STATION 259.5 TO 302 LOWER SIDEWALL	119
PANEL INSTL, STATION 990 EMERGENCY EXIT	60
PARTITION ASSY, CARGO-PASSENGER MOVABLE	516
PLACARD INSTL, CABIN INTERIOR	188
PLACARD INSTL, CABIN INTERIOR	17R
PLACARD INSTL, LAVATORY WATER HEATER RESET	25F
PLACARD INSTL, SECTION 51	85
PLACARD INSTL, TOILET SYSTEM CAUTIONARY SYMBOLIC	25G
PLACARD INSTL, UPPER CARGO COMPARTMENT	62
SERVICE UNIT INSTL, PASSENGER	45B
SERVICE UNIT INSTL, PASSENGER	48Z
SIGN ASSY, EMERGENCY EXIT	19J
SIGN INSTL, FASTEN SEAT BELT NO SMOKING	56
SUPPORT ASSY, OXYGEN BOTTLE PLACARD	95
SUPPORT INSTL, EMERGENCY EXIT LIGHT	19J
SWITCH INSTL, CARGO VIEWING HOLE	100
TOILET INSTL, AFT COMPARTMENT C AND D	88C
TOILET INSTL, AFT COMPARTMENT E	88H

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

SECTION

FIGURE

TOILET INSTL, FORWARD COMPARTMENT A	88D
TOILET INSTL, FORWARD TOILET COMPARTMENT B.	88E
TRANSFORMER INSTL, STATION 367.75	140

11-02 FUSELAGE/TAIL

ACTUATOR ASSY, STABILIZER TRIM.	84
ANTENNA AND COMPONENTS INSTL, FIN HF COMMUNICATION.	55
ANTENNA INSTL, WEATHER RADAR.	35
BALLAST INSTL, NAVIGATORS TABLE FLUORESCENT LIGHTS.	133
BOTTLE INSTL, STATION 1100 TO 1140 PASSENGER OXYGEN	79
BOX ASSY, STATION 350 J26 TRANSFORMER RECTIFIER	164
BOX INSTL, RJ3 AUTOPILOT JUNCTION	165
BOX INSTL, WEATHER RADAR JUNCTION	36
BRACKET ASSY, EMERGENCY BRAKE	59B
BRACKET ASSY, RUDDER PEDAL ADJUSTMENT	51
BULKHEAD ASSY, STATION 380.	194
CLAMP INSTL, VERTICAL GYROS WIRE.	135
COMPARTMENT ASSY, MAIN AND AUXILIARY FLYAWAY KIT STOWAGE.	239
COMPRESSOR INSTL, POTABLE WATER SYSTEM.	76
CONTROL AND DECLUTCH INSTL, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE	8
CONTROL ASSY, MASTER WARNING LIGHT.	89
COVER ASSY, ATTITUDE WARNING AND DIMMING BALLAST RJ9 SHIELD	186
COVER INSTL, STATION 294.5 TO 312 RJ20 SHIELD	164A
CRANK INSTL, STABILIZER ELEVATOR CONTROL RH	217
CYLINDER INSTL, STATION 586.40 TO 6000 CREW OXYGEN.	46
DAMPER ASSY, RUDDER CONTROL TAB	211
DAMPER ASSY, RUDDER FLUTTER	212
DOOR AND FAIRING INSTL, STATION 310 TO 360 NOSE WHEEL WELL.	18
DOOR ASSY, AFT CARGO.	230
DOOR ASSY, CENTER CARGO	229
DOOR ASSY, SECTION 41 WHEEL WELL.	18A
DOOR ASSY, STATION 554.15 FORWARD CARGO	228
DOOR INSTL, AFT ENTRY	59
DOOR INSTL, AFT GALLEY.	233
DOOR INSTL, FORWARD ENTRY	59
DOOR INSTL, STATION 400 ELECTRONIC COMPARTMENT.	163
EQUIPMENT INSTL, CONTROL CAB EMERGENCY.	22
EQUIPMENT INSTL, CREW OXYGEN.	124
EQUIPMENT INSTL, PASSENGER OXYGEN	226
EQUIPMENT INSTL, POTABLE WATER PNEUMATIC SYSTEM	73
EQUIPMENT INSTL, STATION 335 J5 ELECTRICAL RACK	136
FEEL MECHANISM INSTL, RUDDER.	204
FILTER INSTL, AUXILIARY PRESSURE HYDRAULIC.	110
FILTER INSTL, AUXILIARY RETURN HYDRAULIC.	224
FILTER INSTL, DC PUMP HYDRAULIC PRESSURE.	223
FITTING INSTL, CABIN LEAKAGE TEST PRESSURIZATION.	80
FRAME INSTL, STATION 480 STRINGER 5 RH TO STRINGER 25 LH.	74
FRAME INSTL, STATION 6000 STRINGER 5 RH TO STRINGER 25 LH	74
GYRO INSTL, DIRECTIONAL	37
HYDRAULIC INSTL, CARGO DOOR	140
HYDRAULIC INSTL, SECTION 41	121
HYDRAULIC INSTL, SECTION 41	121A
HYDRAULIC INSTL, SECTION 43	107
HYDRAULIC INSTL, SECTION 43	109
HYDRAULIC INSTL, SECTION 43	117
HYDRAULIC INSTL, SECTION 43	120
HYDRAULIC INSTL, SECTION 43	122
HYDRAULIC INSTL, SECTION 43 CARGO DOOR SYSTEM	141A
HYDRAULIC INSTL, SECTION 43 CARGO DOOR SYSTEM	141B
INDICATOR INSTL, COPILOT EYE POSITION	40
INDICATOR INSTL, PILOT EYE POSITION	40
LIGHT INSTL, SECTION 53 AND 56 OVERWING ESCAPE ILLUMINATION	82
MARKER INSTL-ALUMINUM FOIL, LH MAIN WHEEL WELL DRAIN.	179
MARKER INSTL-ALUMINUM FOIL, PALLETIZED CARGO SYSTEM BRAKE	85
MARKER INSTL-ALUMINUM FOIL, SECTION 41 LOWER PITOT- STATIC DRAIN.	179
MARKER INSTL-ALUMINUM FOIL, STATIC DRAIN	176
MARKER INSTL-ALUMINUM FOIL, STATIC DRAIN.	177
MARKER INSTL, NOSE GEAR POSITION AND LOCK SWITCH.	43
MARKER INSTL, PITOT-STATIC TEST FITTING	178
MARKING INSTL KIT, MAIN DECK PALLETIZED CARGO	101
MARKING INSTL, AIRPLANE MAINTENANCE EXTERIOR	1A
MARKING INSTL, PALLETIZED SYSTEM FLOOR.	104
MARKING INSTL, SECTION 57 AFT CARGO COMPARTMENT	106B
METAL-CAL INSTL, PITOT-STATIC DRAIN	179C
PANEL ASSY, STATION 360 J2 RELAY.	137
PANEL INSTL, SECTION 41, 43 AND 46 PASSENGER FLOOR.	24
PLACARD INSTL, EXTERIOR DOOR AND EMERGENCY HATCH	1

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

SECTION

FIGURE

PLATE ASSY, FORWARD CARGO COMPARTMENT AUXILIARY HEATER DAMPER COVER	23
POWER UNIT ASSY, INBOARD AND FILLET FLAP DRIVE.	202
POWER UNIT INSTL, INBOARD AND FILLET FLAP DRIVE	201
PUMP INSTL, MAIN CARGO DOOR HYDRAULIC HAND.	25
QUADRANT ASSY, ELEVATOR CONTROL	115
RACK ASSY, STATION 328 INERTIAL NAVIGATION SYSTEM RJ28.	184
RACK INSTL, LOW RANGE RADIO ALTIMETER UNIT.	170
RECEPTACLE INSTL, EXTERNAL POWER.	181A
ROD ASSY, CARGO DOOR MECHANISM PUSH	58
SCALE INSTL, LEVELING PROVISION	237
SCOTCH-CAL INSTL, PITOT-STATIC DRAIN.	179B
SCOTCH-CAL INSTL, PNEUMATIC START AND GROUND AIR CONDITIONING DOORS AIR CYCLE	13
SCOTCH-CAL INSTL, RJ-11 AND RJ-14	20
SCOTCH-CAL INSTL, STATION 1320 PITOT-STATIC DRAIN	179
SCOTCH-CAL INSTL, STATION 312 PITOT-STATIC DRAIN.	179
SCOTCH-CAL INSTL, STATION 380 PITOT-STATIC DRAIN	176
SCOTCH-CAL INSTL, STATION 380 PITOT-STATIC DRAIN.	179
SENSOR INSTL, SECTION 54 BULLNOSE HAT RACK TEMPERATURE.	10
SENSOR INSTL, SECTION 57 OVERHEAD STOWAGE TEMPERATURE	11
SHELF INSTL, STATION 1440 VOICE RECORDER.	167
SHIELD ASSY	126
SHIELD ASSY, J9 GROUND POWER.	128A
SHIELD ASSY, STATION 243 J23 RELAY.	182
SHIELD ASSY, STATION 300 J1 RELAY	131
SHIELD ASSY, STATION 335 J27 ELECTRICAL EQUIPMENT	127
SHIELD INSTL, J9 GROUND POWER	128
SHIELD INSTL, STATION 294 J28 ELECTRICAL EQUIPMENT LH	134
SHIELD INSTL, STATION 294.5 J-1 RELAY	130
SHIELD INSTL, STATION 344 AND 360 TRANSFORMER	129
SKIN INSTL, RUDDER NOSE	206
SNUBBER ASSY, ENTRY DOOR.	232
SNUBBER ASSY, GALLEY DOOR	231
STAND ASSY, PILOT AND COPILOT CONTROL	2C
STAND ASSY, PILOT AND COPILOT CONTROL	2E
SUPPORT INSTL, AFT POTABLE WATER TANK	64
SUPPORT INSTL, FORWARD POTABLE WATER TANK	63
SWITCH INSTL, SECTION 53 CARGO LIGHTS	71
SWITCH INSTL, SECTION 56 CARGO LIGHTS	71
SWITCH INSTL, STATION 400 CARGO DOOR.	227
SWITCH INSTL, WEATHER RADAR SCAN.	36
SYSTEM INSTL, RAIN REPELLENT.	44
TAB ASSY, ELEVATOR CONTROL.	208
TAB ASSY, RUDDER CONTROL.	205
TAB ASSY, STABILIZER ACTUATED ELEVATOR.	218
TORQUE CONTROL INSTL, STABILIZER.	219
TRAY INSTL, STATION 330 RJ29 SWITCHING RELAYS	183
TUBE INSTL, ELEVATOR TAB CONTROL TORQUE	220
TUBING INSTL, SECTION 43 OXYGEN	157
TUBING INSTL, SECTION 46 OXYGEN	173
VALVE ASSY, BRAKE METERING.	234
VALVE INSTL, AFT PASSENGER WATER FILL AND DRAIN	70
VALVE INSTL, CREW OXYGEN HIGH PRESSURE.	48
VALVE INSTL, ENGINE START SYSTEM REGULATOR AND SOLENOID	15
VALVE INSTL, FORWARD PASSENGER WATER FILL AND DRAIN	27
VALVE INSTL, FORWARD POTABLE WATER SYSTEM DRAIN	69
VALVE INSTL, MAIN CARGO DOOR HYDRAULIC 4 WAY.	25
VALVE INSTL, MOTOR OPERATED HYDRAULIC	112
VALVE INSTL, NOSE GEAR DOOR CONTROL	30
VALVE INSTL, PNEUMATIC PRESSURE GAGE AND CHARGING	49
VALVE INSTL, RUDDER SHUTOFF MANUALLY OPERATED	214

11-03 WING/POWER PLANT	
ACCUMULATOR INSTL, TRAILING EDGE BEAM	16
ACTION INSTL, OUTBOARD COVE LIP DOOR	75
ACTUATOR ASSY, FAN REVERSER	64
ANTENNA AND COMPONENTS INSTL, WING HF COMMUNICATION	2
BRACKET INSTL, CONSTANT SPEED DRIVE OIL FILTER.	49
DRIVE INSTL, SECTION 26 FLAP LH	5
DRIVE INSTL, SECTION 26 FLAP RH	5
FILTER INSTL, AUXILIARY PRESSURE HYDRAULIC.	42A
GEAR BOX ASSY, FILLET FLAP DRIVE ANGLE.	9
GEAR BOX ASSY, FILLET FLAP DRIVE TEE.	6
GEAR BOX ASSY, INBOARD FLAP DRIVE ANGLE	9
GEAR BOX ASSY, INBOARD FLAP DRIVE ELL	8
GEAR BOX ASSY, INBOARD FLAP DRIVE TEE	8
GEAR BOX ASSY, OUTBOARD AILERON LOCKOUT MECHANISM	55
GEAR BOX ASSY, OUTBOARD FLAP DRIVE ANGLE.	8

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

SECTION

FIGURE

GEAR BOX ASSY, OUTBOARD FLAP DRIVE ANGLE.	9
HYDRAULIC INSTL.	36
HYDRAULIC INSTL, WING	33
HYDRAULIC INSTL, WING	35
HYDRAULIC INSTL, WING	38
HYDRAULIC INSTL, WING	40
HYDRAULIC INSTL, WING FILLET.	41
HYDRAULIC INSTL, WING FILLET.	42
LIGHT INSTL, PRESSURE FUELING CONTROL	61
MANIFOLD INSTL, WING STATION 501 TO 529.50 PRESSURE FUELING CONTROL LH.	10
MANIFOLD INSTL, WING STATION 501 TO 529.50 PRESSURE FUELING CONTROL RH.	10
MARKER INSTL, ENGINE AND ACCESSORIES.	23
MARKING INSTL, SECTION 22 LH FUEL SYSTEM INTERIOR	29
MARKING INSTL, SECTION 22 RH FUEL SYSTEM INTERIOR	29
MODULAR PACKAGE INSTL, SPOILER SYSTEM	52
NUTPLATE INSTL, TRANSMITTER MOUNT	20
PUMP INSTL, FUEL BOOSTER OVERRIDE	60
QUADRANT ASSY, ELEVATOR CONTROL	80
RECEPTACLE AND SEAL INSTL, WING BOOST PUMP LH	66
RECEPTACLE AND SEAL INSTL, WING BOOST PUMP RH	66
RECEPTACLE AND SEAL INSTL, WING OVERRIDE PUMP LH.	67
RECEPTACLE AND SEAL INSTL, WING OVERRIDE PUMP RH.	67
RESERVOIR INSTL, HYDRAULIC.	15
RETAINER ASSY, LANDING LIGHT.	19
SNUBBER INSTL, AILERON CONTROL SURFACE.	63
TRANSMISSION ASSY, FLAP DRIVE BALL SCREW.	8
VALVE INSTL, BRAKE DEBOOST.	17
VALVE INSTL, BRAKE INTERCONNECT	18B
VALVE INSTL, CONSTANT SPEED DRIVE PRESSURE SENSING RELIEF	51
VALVE INSTL, HYDRAULIC SUPPLY LH.	45
VALVE INSTL, HYDRAULIC SUPPLY RH.	45
VALVE INSTL, INBOARD SPOILER CONTROL.	43
VALVE INSTL, OUTBOARD SPOILER CONTROL LH.	44
VALVE INSTL, OUTBOARD SPOILER CONTROL RH.	44
VALVE INSTL, WING COMPASS FLUX.	20A

11-04 LANDING GEAR

BEAM INSTL, STATION 820 TO 960 KEEL	6
CONTROL INSTL, LANDING GEAR GROUND DOOR RELEASE	7
COVER INSTL, NOSE WHEEL STEERING MECHANISM.	21
CYLINDER ASSY, NOSE WHEEL STEERING.	22
DEFLECTOR INSTL, NOSE GEAR AIR.	20
DOOR INSTL, EMERGENCY MAIN AND NOSE GEAR EXTENSION.	11
DRUM INSTL, EMERGENCY NOSE GEAR EXTENSION RELEASE	10
ELECTRICAL INSTL, MAIN LANDING GEAR	3
HYDRAULIC INSTL, NOSE GEAR STEERING	18
NAMEPLATE INSTL, NOSE GEAR WHEEL WELL	23
WHEEL INSTL, NOSE GEAR STEERING	8
WHEEL INSTL, NOSE WHEEL STEERING LH	8
WHEEL INSTL, NOSE WHEEL STEERING RH	8

11-06 INSTRUMENT AND CONTROL PANELS

GAUGE INSTL, EMERGENCY BRAKE PRESSURE RH.	14
INDICATOR ASSY, FUEL QUANTITY	10A
INTERPHONE INSTL, FLIGHT ENGINEER	25
MODULE INSTL, CAPTAINS AND FIRST OFFICERS	13A
MODULE INSTL, P13 PILOTS OVERHEAD	11
PANEL INSTL, COPILOTS AUXILIARY EQUIPMENT	3
PANEL INSTL, FLIGHT ENGINEERS AUXILIARY	26
PANEL INSTL, FLIGHT ENGINEERS LOWER	10
PANEL INSTL, NAVIGATORS	20
PANEL INSTL, OBSERVER AUXILIARY EQUIPMENT	7
PANEL INSTL, PILOTS AUXILIARY EQUIPMENT	3
PANEL INSTL, P18 PILOTS AUXILIARY EQUIPMENT	3A
PANEL INSTL, P19 COPILOTS AUXILIARY EQUIPMENT	21A
PANEL INSTL, P8 PILOTS MAIN INSTRUMENT.	18
PANEL INSTL, P8 PILOTS MAIN INSTRUMENTS	18
PANEL INSTL, RADIO RADAR AND AUTOPILOT CONTROL.	18
PANEL INSTL, RADIO, RADAR AND AUTOPILOT CONTROL	1
PLACARD INSTL, AIRPLANE LICENSE REGISTRATION AND SELCAL	4
PLACARD INSTL, AIRPLANE LICENSE REGISTRATION AND SELCAL	5
PLACARD INSTL, FLIGHT ENGINEERS FUEL DUMP	12

11-07 CIRCUIT BREAKER PANELS

PANEL ASSY, P4 CIRCUIT BREAKER FORWARD.	6

CHAPTER TABLE OF CONTENTS

11-0

PAGE 4

RAF
NOV 21/01

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

SECTION	FIGURE
PANEL ASSY, P6 CIRCUIT BREAKER	7
PANEL ASSY, RADIO AND T-R CIRCUIT BREAKER	1
11-08 DECORATIVE EXTERIOR MARKINGS	
MARKING INSTL, DECORATIVE EXTERIOR	72
MARKING INSTL, QANTAS DECORATIVE EXTERIOR	39
MARKING INSTL, SAUDI ARABIA	72F
MARKING INSTL, SECTION 54 FORWARD CARGO COMPARTMENT	41
MARKING INSTL, TAROM DECORATIVE EXTERIOR.	72B

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

SECTION 01 INTERIOR

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

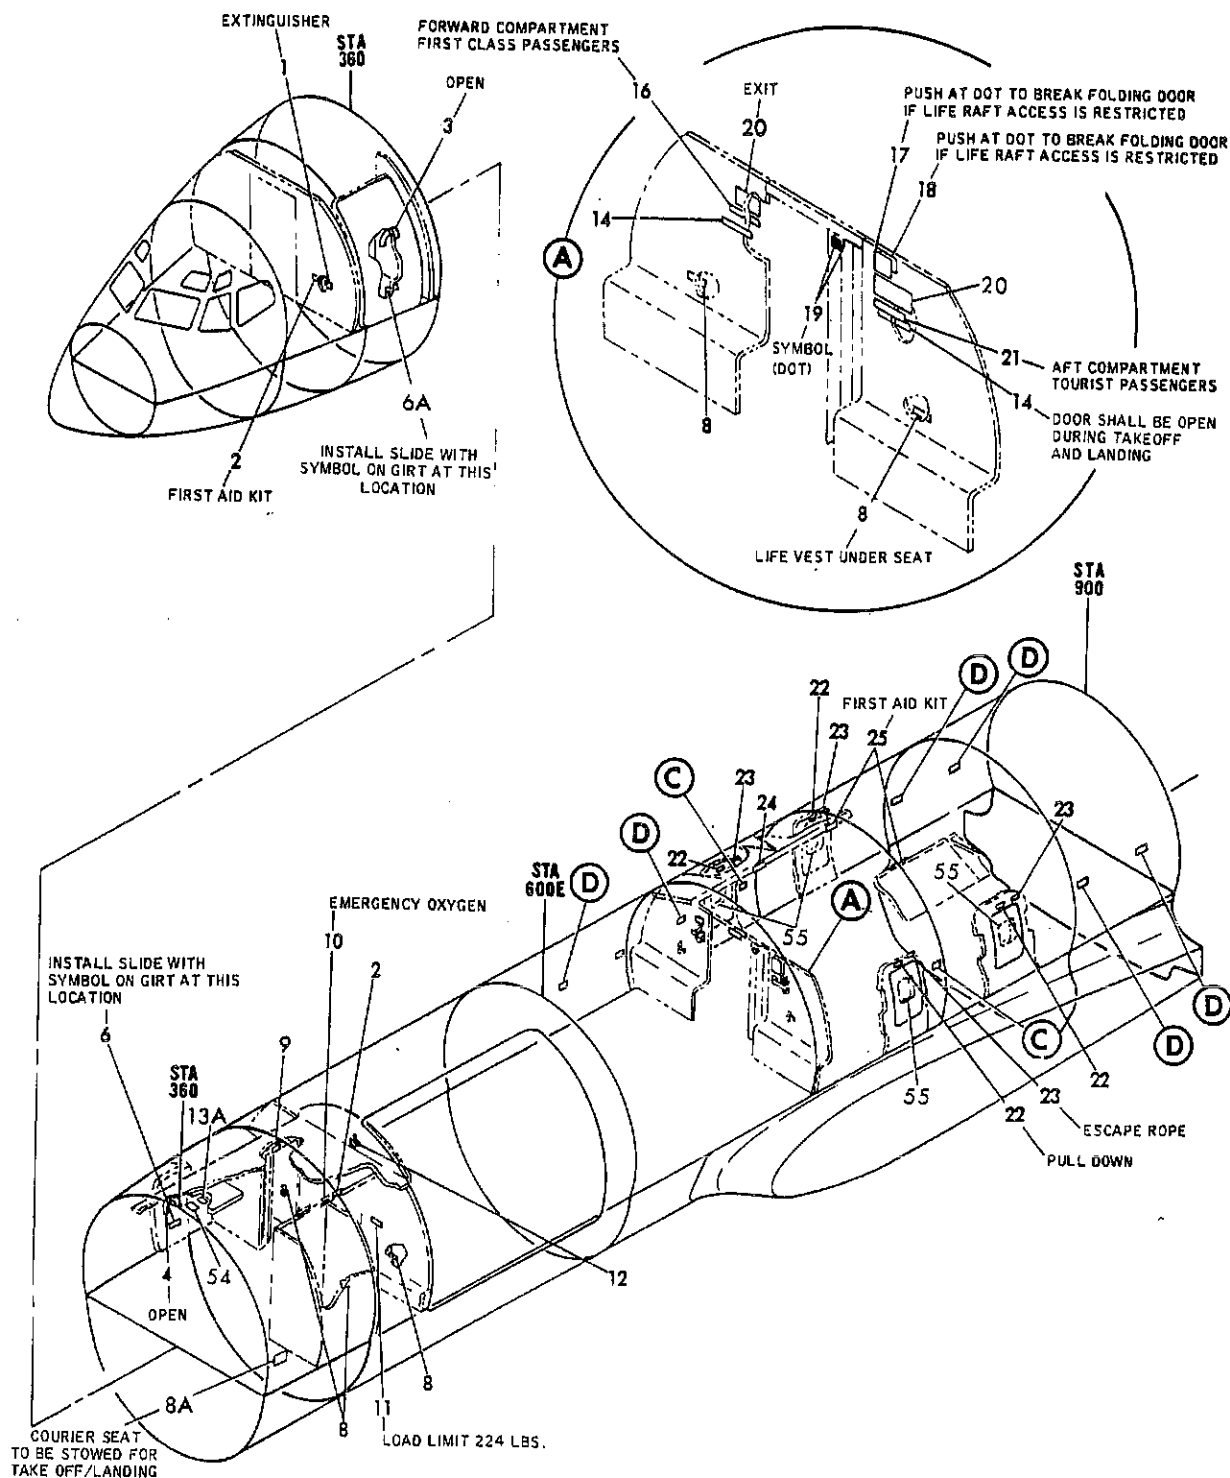 


FIGURE 17R. PLACARD INSTL, CABIN INTERIOR (SHEET 1)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

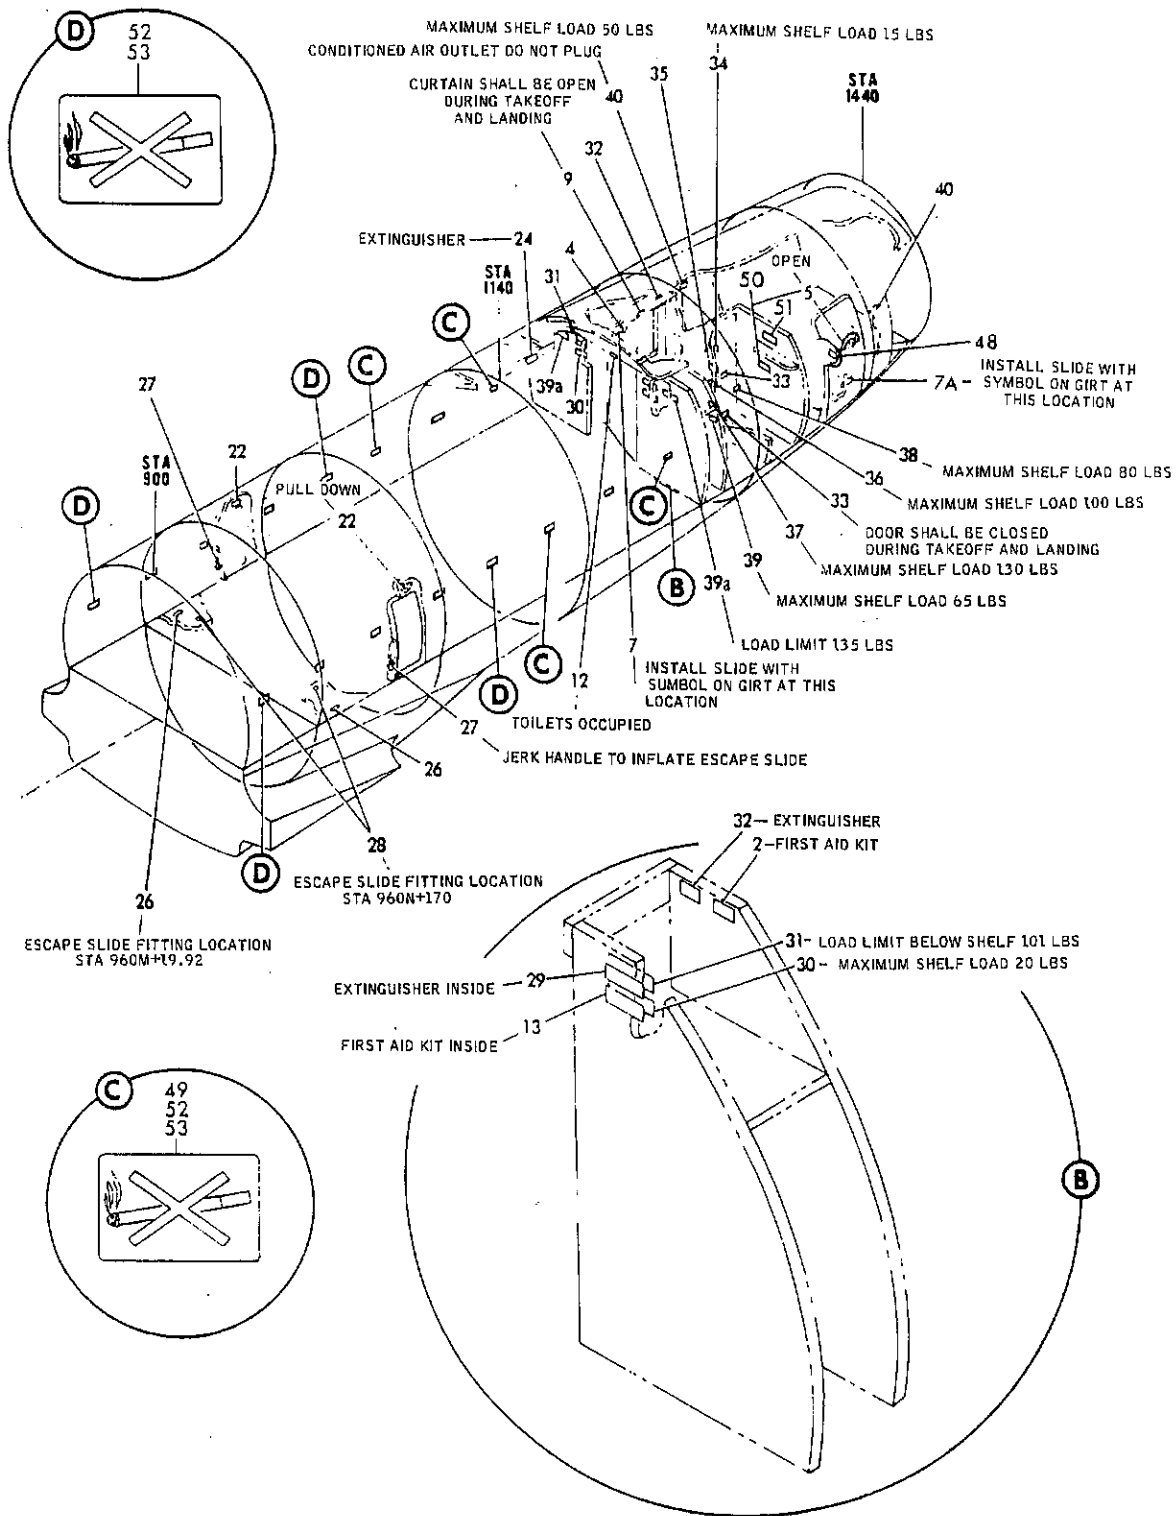 


FIGURE 17R. PLACARD INSTL, CABIN INTERIOR (SHEET 2)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
17R	65-7264-161AM	PLACARD INSTL, CABIN INTERIOR (SEE 25-1, FIG. 23D, ITEM 9)	0150	RF
1	65-7264-15	. PLACARD, EXTINGUISHER	0150	1
2	65-7264-77	. PLACARD, FIRST AID KIT.	0150	3
	65-33827-1	. PLACARD INSTL, ENTRY AND GALLEY DOOR DIRECTIONAL.	0150	1
		OPENING		
3	65-33827-11	. . PLACARD, FORWARD ENTRY DOOR OPEN.	0150	1
4	65-33827-28	. . PLACARD, FORWARD AND AFT NORMAL GALLEY DOOR OPEN.	0150	2
5	65-33827-19	. . PLACARD, AFT ENTRY DOOR OPEN.	0150	1
6	65-7264-333	. PLACARD, INSTALL SLIDE INSTRUCTIONS	0150	1
6A	65-7264-333	. PLACARD, INSTALL SLIDE INSTRUCTIONS	0150	1
7	65-7264-334	. PLACARD, INSTALL SLIDE INSTRUCTIONS	0150	1
7A	65-7264-334	. PLACARD, INSTALL SLIDE INSTRUCTIONS	0150	1
8	65-7264-12	. PLACARD, LIFE VEST UNDER SEAT	0150	5
9	65-7264-13	. PLACARD, CURTAIN SHALL BE OPEN DURING TAKE OFF AND.	0150	2
		LANDING		
10	65-7264-78	. PLACARD, EMERGENCY OXYGEN	0150	1
11	8AC27CPA10	. VINYL-CAL, LOAD LIMIT 224 LBS	0150	1
12	65-7264-373	. PLACARD, TOILETS OCCUPIED	0150	2
13	65-7264-185	. PLACARD, FIRST AID KIT INSIDE	0150	1
14	65-7264-17	. PLACARD, DOOR SHALL BE OPEN DURING TAKE OFF AND	0150	2
		LANDING (MULTI-LANGUAGE)		
16	65-7264-183	. PLACARD, FORWARD COMPARTMENT FIRST CLASS PASSENGERS	0150	1
17	65-7264-48	. PLACARD, PUSH AT DOT TO BREAK FOLDING DOOR IF LIFE.	0150	1
		RAFT ACCESS IS RESTRICTED		
18	65-7264-47	. PLACARD, PUSH AT DOT TO BREAK FOLDING DOOR IF LIFE.	0150	1
		RAFT ACCESS IS RESTRICTED		
19	65-7264-49	. PLACARD, SYMBOL	0150	2
	65-33806-1	. SIGN INSTL, EMERGENCY EXIT.	0150	1
	65-33806-2	. SIGN INSTL, EMERGENCY EXIT.	0150	1
20	LAB600-1B1S1	. . PLACARD, SELF-ILLUMINATED EXIT (V02006) (USED ON.	0150	1
		65-33806-1 AND -2)		
		(OPTIONAL LAB733S1 (V02006))		
20	LAB733S1	. . PLACARD, SELF-ILLUMINATED EXIT (V02006) (USED ON.	0150	1
		65-33806-1 AND -2)		
		(OPTIONAL TO LAB600-1B1S1 (V02006))		
		ATTACHING PARTS		
	NAS601-11	. . SCREW	0150	4
		-----*		
21	65-7264-184	. PLACARD, AFT COMPARTMENT TOURIST PASSENGERS	0150	1
22	BACM10L50-1BUX	. MARKER-ALUMINUM FOIL, PULL DOWN	0150	6
23	BACM9L30-10X	. SCOTCH-CAL, ESCAPE ROPE	0150	4
24	65-7264-14	. PLACARD, EXTINGUISHER	0150	2
25	65-7264-25	. PLACARD, FIRST AID KIT.	0150	2
26	BACM10F13HH	. MARKER-ALUMINUM FOIL, ESCAPE SLIDE FITTING LOCATION	0150	2
27	BACM10L1DGU	. MARKER-ALUMINUM FOIL, STEP 4 JERK HANDLE TO INFLATE	0150	2
		ESCAPE SLIDE		
28	BACM10L1DMR	. MARKER-ALUMINUM FOIL, ESCAPE SLIDE FITTING LOCATION	0150	2
29	65-7264-209	. PLACARD, EXTINGUISHER INSIDE.	0150	1
32	65-7264-7	. PLACARD, EXTINGUISHER	0150	2
39A	BAC27CPA20	. VINYL-CAL, LOAD LIMIT 135 LBS	0150	2
40	BACM10L1DLG	. MARKER-ALUMINUM FOIL, CONDITIONED AIR OUTLET DO NOT	0150	2
		PLUG		
48	65-7264-434	. PLACARD, EMERGENCY LIGHTS SWITCH TO BE IN NORMAL.	0150	1
		POSITION EXCEPT FOR TEST OR MANUAL OPERATION		
		(ADDED BY SB 2719)		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

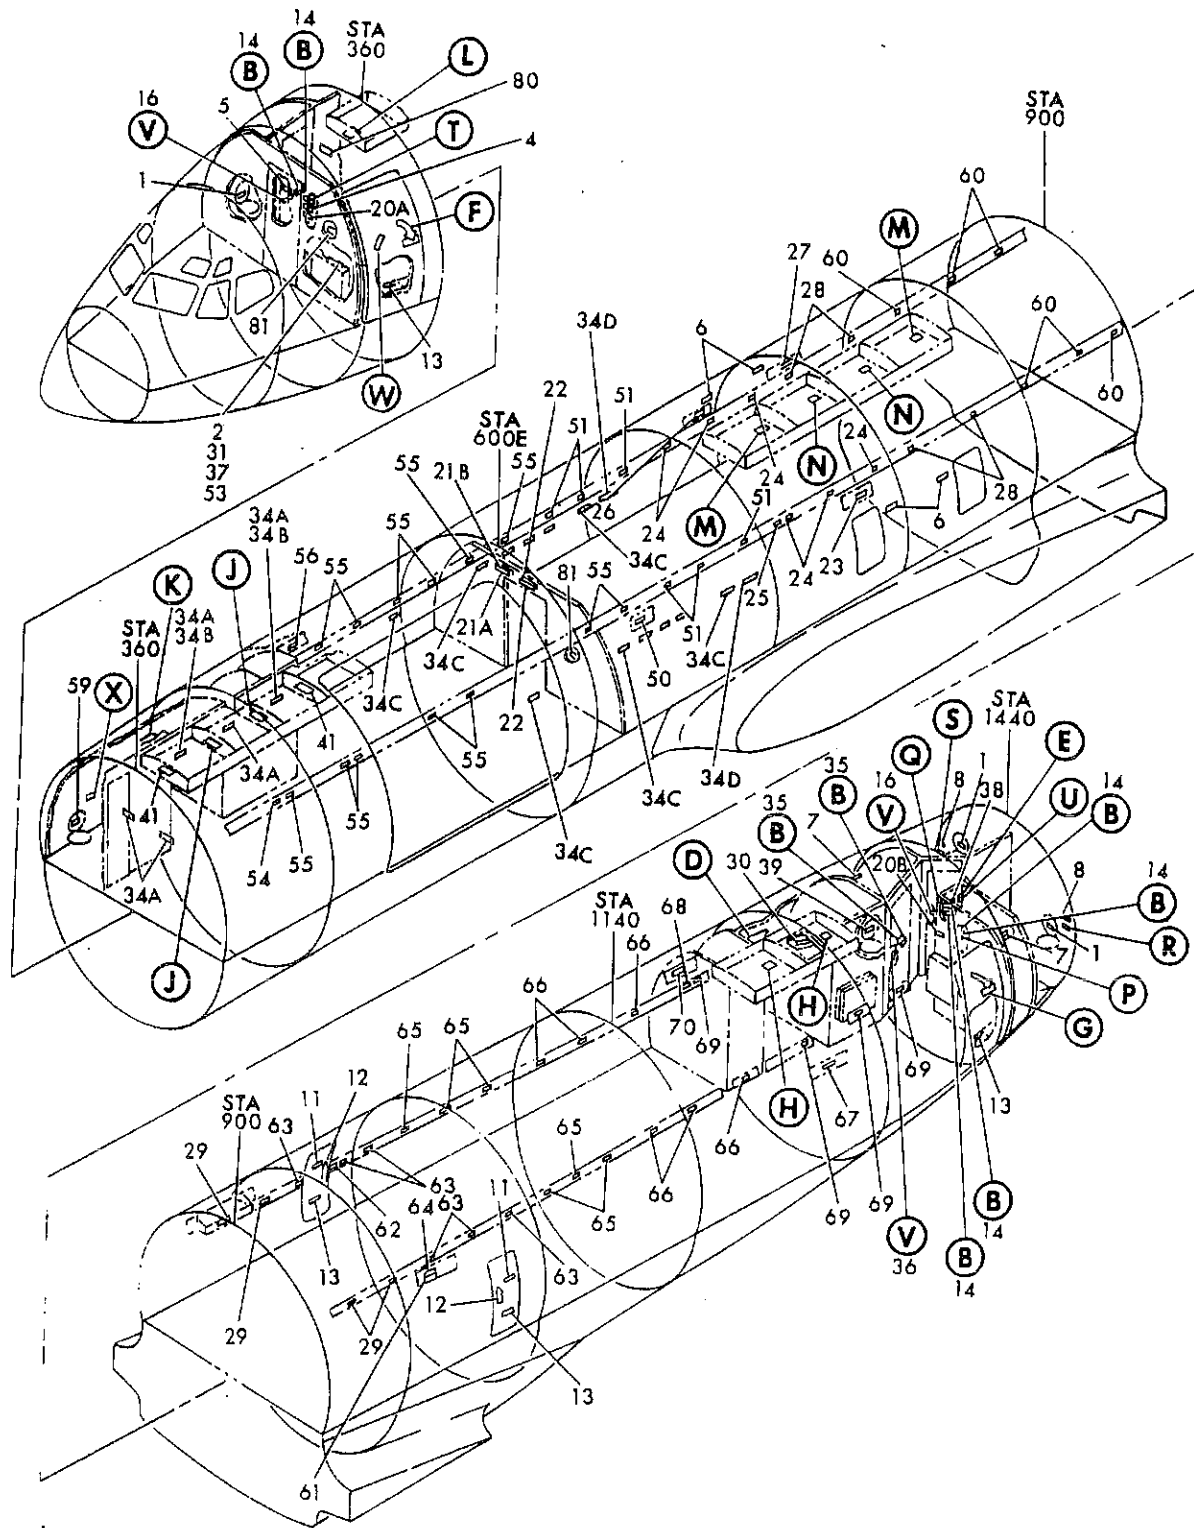 


FIGURE 18B. PLACARD INSTL, CABIN INTERIOR (SHEET 1)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)



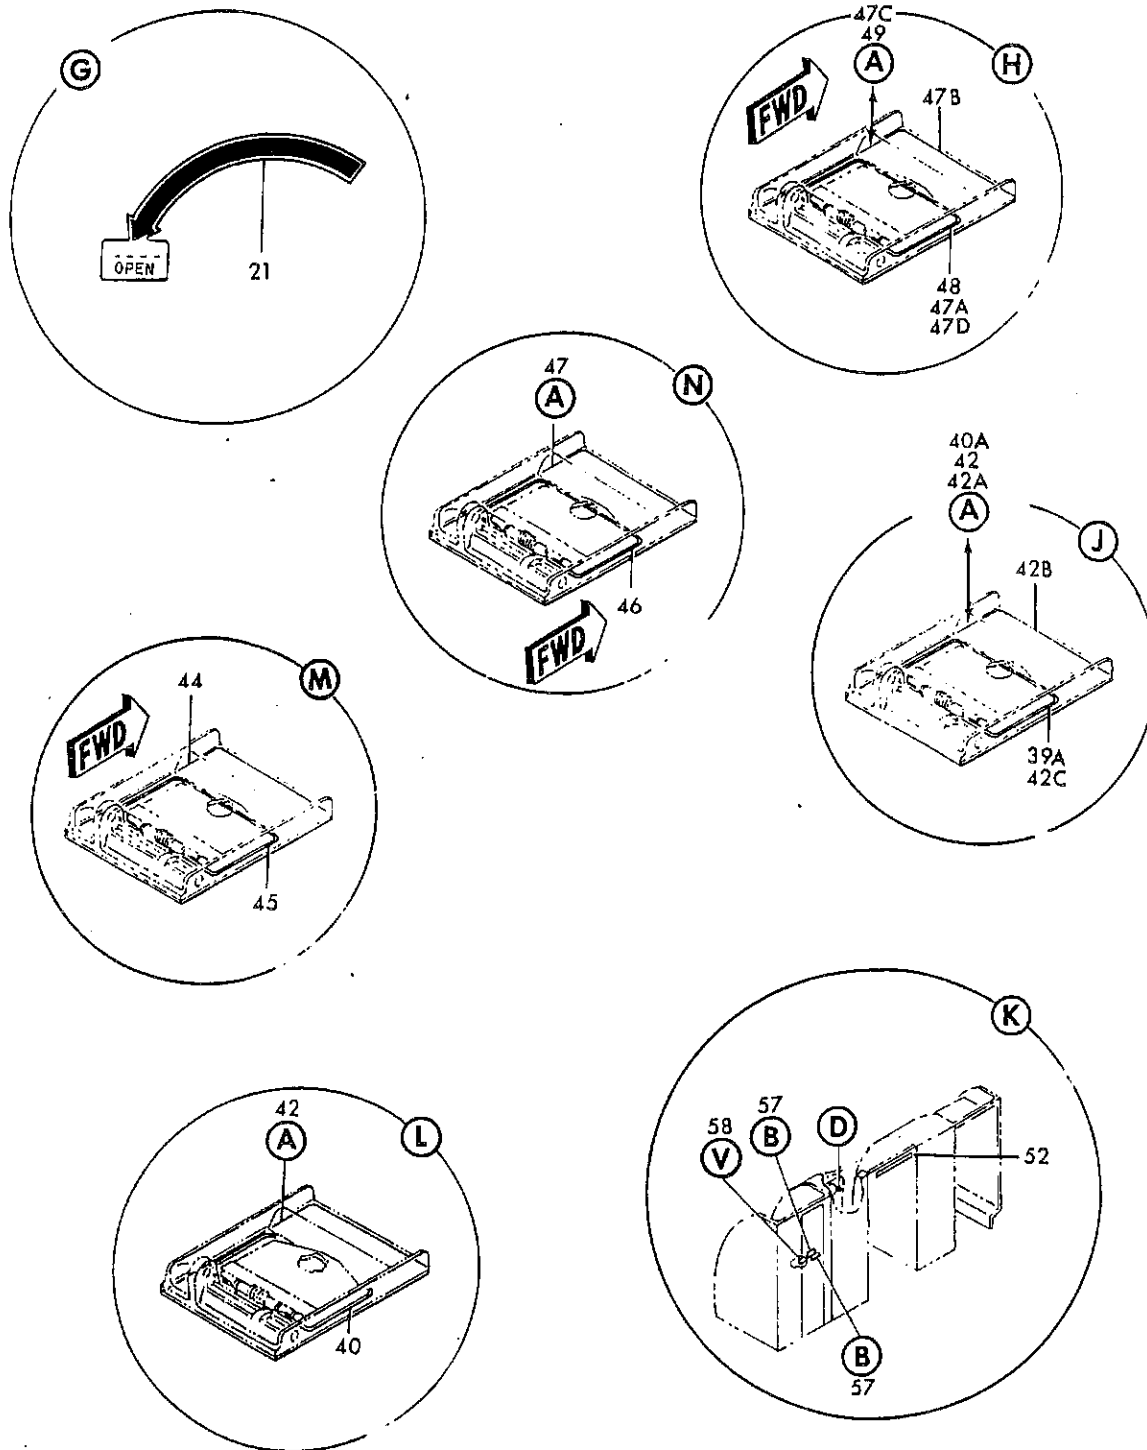 


FIGURE 18B. PLACARD INSTL, CABIN INTERIOR (SHEET 3)

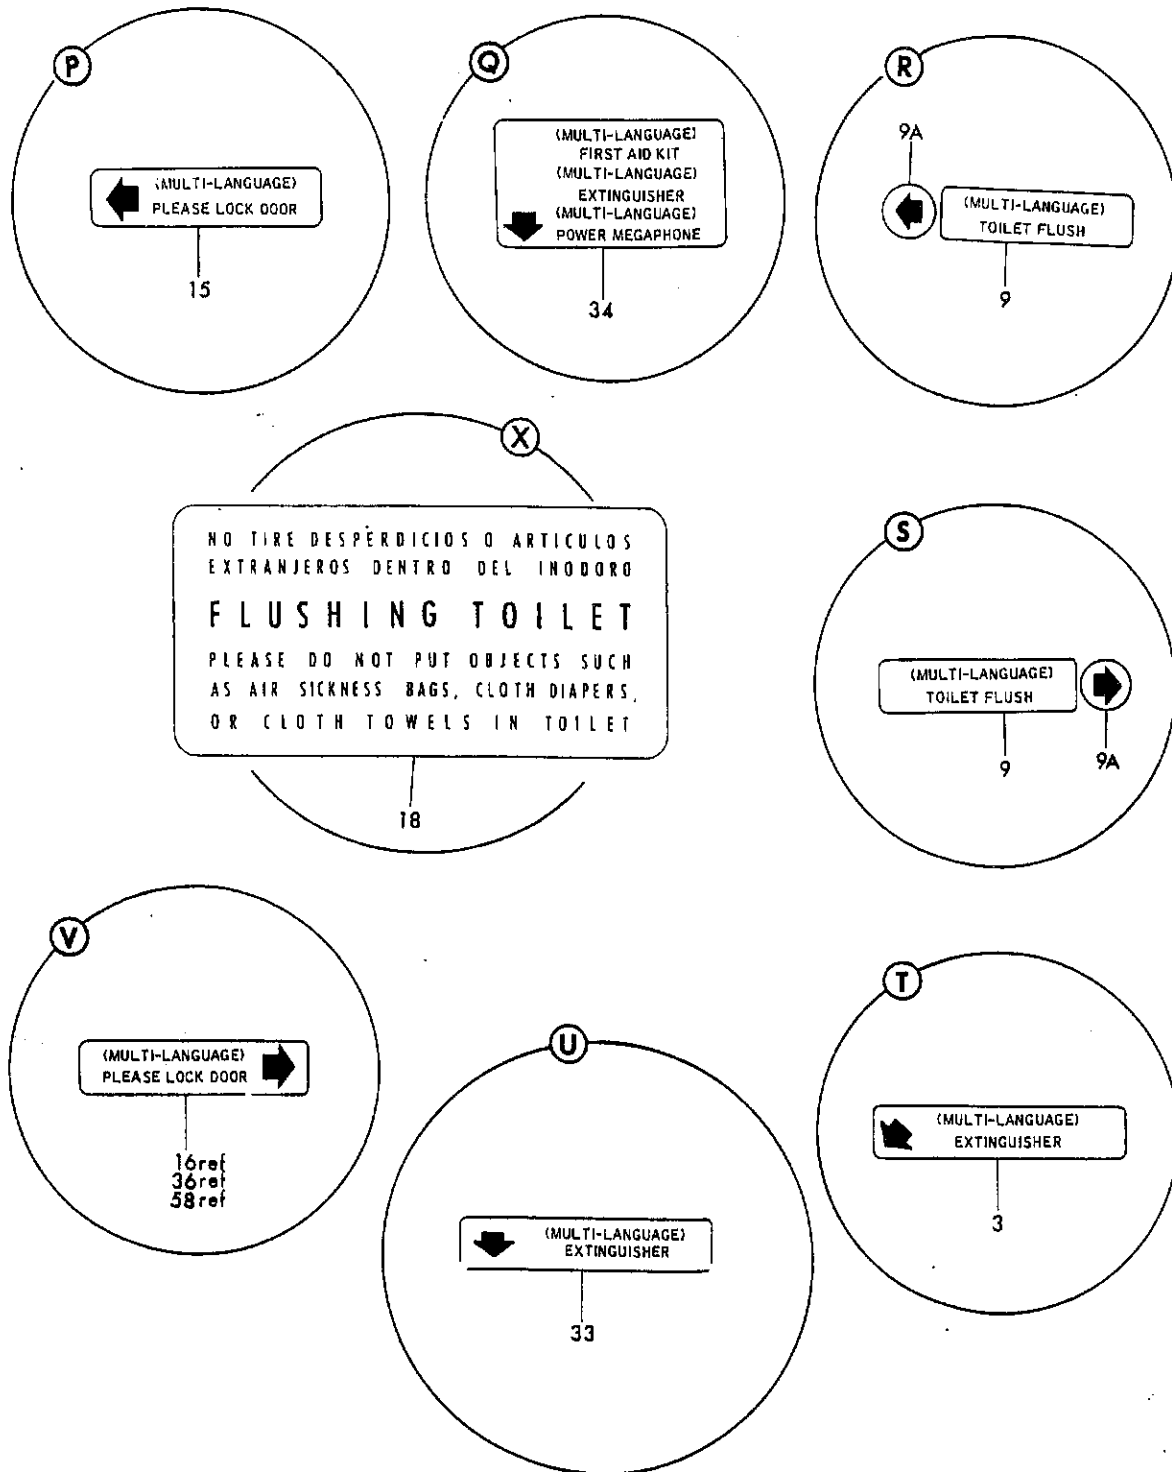 


FIGURE 18B. PLACARD INSTL, CABIN INTERIOR (SHEET 4)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
18B	65-88954-4	PLACARD INSTL, CABIN INTERIOR	5199	
		. PLACARD INSTL, CABIN INTERIOR (NON CONVERSION).	5151	RF
		(VARIABLE DWG;65-88954-5017) (SEE 25-1, FIG. 174C, ITEM 40B)		
	65-88954-4	. PLACARD INSTL, CABIN INTERIOR (NON CONVERSION).	5299	RF
		(VARIABLE DWG;65-88954-5018) (SEE 25-1, FIG. 174C, ITEM 40B)		
1	BAC27DPA1113	. . . PLACARD, FLUSHING TOILET (MULTI-LANGUAGE)	5199	3
2	BAC27DPA952	. . . PLACARD, LIFE VEST UNDER YOUR SEAT (MULTI-LANGUAGE)	5199	1
3	BAC27DPA1055	. . . PLACARD, EXTINGUISHER (MULTI-LANGUAGE).	5199	1
4	BAC27DPA953	. . . PLACARD, POWER MEGAPHONE (MULTI-LANGUAGE)	5199	1
5	BAC27DPA1068	. . . PLACARD, NO ADMITTANCE (MULTI-LANGUAGE)	5199	1
6	BAC27DPA951	. . . PLACARD, ESCAPE ROPE (MULTI-LANGUAGE)	5199	4
7	BAC27CPA205	. . . MARKER, ALUMINUM FOIL LOAD LIMIT 15 LBS	5199	2
8	65-88954-22	. . . PLACARD, SEAT COVERS (MULTI-LANGUAGE)	5199	2
9	65-88954-23	. . . PLACARD, TOILET FLUSH (MULTI-LANGUAGE).	5199	2
9A	66-37017	. . . PLACARD, SYMBOL	5199	2
11	BAC27DPA983	. . . PLACARD, LIFT HANDLE TO OPEN PUSH DOOR (MULTI-LANGUAGE)	5199	2
12	BAC27DPA982	. . . PLACARD, LIFT TO OPEN (MULTI-LANGUAGE).	5199	2
13	BAC27DPA1395	. . . PLACARD, OPEN AIRPLANE DOOR SLIDE INFLATS	5199	6
		AUTOMATICALLY (MULTI-LANGUAGE)		
14	BAC27DPA700	. . . PLACARD, NO SMOKING IN LAVATORY (MULTI-LANGUAGE).	5199	6
15	BAC27DPA947	. . . PLACARD, PLEASE LOCK DOOR (MULTI-LANGUAGE).	5199	1
16	BAC27DPA946	. . . PLACARD, PLEASE LOCK DOOR (MULTI-LANGUAGE).	5199	2
17	BAC27DPA192	. . . DECAL, (FRENCH)	5199	2
18	BAC27DPA194	. . . DECAL, FLUSHING TOILET INSTRUCTIONS	5199	1
		(MULTI-LANGUAGE)		
19	BAC27DPA979	. . . PLACARD, OPEN (MULTI-LANGUAGE).	5199	1
20	BAC27DPA980	. . . PLACARD, OPEN (MULTI-LANGUAGE).	5151	2
20A	BAC27DPA845	. . . PLACARD, CARGO DOOR INACTIVE.	5199	1
20B	BAC27DPA1115	. . . PLACARD, LIFE VEST INSIDE (MULTI-LANGUAGE).	5199	1
20C	BAC27DPA1022	. . . DECAL, DOOR INDICATOR (MULTI-LANGUAGE).	5299	2
20D	BAC27DPA1552	. . . PLACARD, OPEN (MULTI-LANGUAGE).	5299	2
21	BAC27DPA981	. . . PLACARD, OPEN (MULTI-LANGUAGE).	5199	1
	65-88954-5	. PLACARD INSTL, CABIN INTERIOR (CONVERSION).	5151	RF
		(VARIABLE DWG;65-88954-5011) (SEE 25-1, FIG. 180C, ITEM 108)		
	65-88954-5	. PLACARD INSTL, CABIN INTERIOR (CONVERSION).	5299	RF
		(VARIABLE DWG;65-88954-5012) (SEE 25-1, FIG. 180C, ITEM 108 AND 25-1, FIG. 180H, ITEM 573)		
21A	BAC27DPA1550	. . . PLACARD, AFT TOURIST COMPARTMENT.	5299	1
21B	BAC27DPA1551	. . . PLACARD, FIRST-CLASS COMPARTMENT.	5299	1
22	BAC27DPA950	. . . PLACARD, CURTAIN SHALL BE FASTENED OPEN DURING TAKE OFF AND LANDING (MULTI-LANGUAGE)	5199	2
	65-88954-6	. PLACARD INSTL, CABIN INTERIOR (CONVERSION).	5151	RF
		(VARIABLE DWG;65-88954-5013) (SEE 25-1, FIG. 180C, ITEM 32)		
	65-88954-6	. PLACARD INSTL, CABIN INTERIOR (CONVERSION).	5299	RF
		(VARIABLE DWG;65-88954-5014) (SEE 25-1, FIG. 180C, ITEM 32 AND 25-1, FIG. 180H, ITEM 485)		
24	BAC27DPA985	. . . DECAL, STOWAGE BIN MUST BE CLOSED AND LATCHED	5199	6
		(MULTI-LANGUAGE)		
25	BAC27DPA984	. . . DECAL, SOFT ARTICLE STOWAGE ONLY (MULTI-LANGUAGE)	5199	1
26	BAC27DPA989	. . . PLACARD, EMERGENCY OXYGEN INSIDE (MULTI-LANGUAGE)	5199	1
	65-88954-7	. PLACARD INSTL, CABIN INTERIOR (CONVERSION) (SEE 25-1, FIG. 180C, ITEM 38 AND 25-1, FIG. 180H, ITEM 491)	5199	RF
28	BAC27DPA985	. . . DECAL, STOWAGE BIN MUST BE CLOSED AND LATCHED	5199	4
		(MULTI-LANGUAGE)		
	65-88954-8	. PLACARD INSTL, CABIN INTERIOR (CONVERSION) (SEE 25-1, FIG. 180C, ITEM 50 AND 25-1, FIG. 180H, ITEM 503)	5199	RF
29	BAC27DPA985	. . . DECAL, STOWAGE BIN MUST BE CLOSED AND LATCHED	5199	4
		(MULTI-LANGUAGE)		
	65-88954-9	. PLACARD INSTL, CABIN INTERIOR (CONVERSION).	5151	RF
		(VARIABLE DWG;65-88954-5015) (SEE 25-1, FIG. 180C, ITEM 77)		
	65-88954-9	. PLACARD INSTL, CABIN INTERIOR (CONVERSION).	5299	RF
		(VARIABLE DWG;65-88954-5016) (SEE 25-1, FIG. 180C, ITEM 77 AND 25-1, FIG. 180H, ITEM 538)		
30	BAC27DPA950	. . . PLACARD, CURTAIN SHALL BE FASTENED OPEN DURING TAKE OFF AND LANDING (MULTI-LANGUAGE)	5199	1
31	BAC27DPA952	. . . PLACARD, LIFE VEST UNDER YOUR SEAT (MULTI-LANGUAGE)	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				


STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE						EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7		
18B	65-88954-10	. PLACARD INSTL, CABIN INTERIOR (CONVERSION). (VARIABLE DWG;65-88954-5001) (SEE 25-1, FIG. 180C, ITEM 86)						5151	RF	
	65-88954-10	. PLACARD INSTL, CABIN INTERIOR (CONVERSION). (VARIABLE DWG;65-88954-5002) (SEE 25-1, FIG. 180C, ITEM 86 AND 25-1, FIG. 180H, ITEM 550)						5299	RF	
32	BAC27DPA1065	. . PLACARD, FIRST AID KIT (MULTI-LANGUAGE)						5151	1	
32	BAC27DPA1762	. . PLACARD, FIRST AID KIT (MULTI-LANGUAGE)						5299	1	
33	BAC27DPA1066	. . PLACARD, EXTINGUISHER (MULTI-LANGUAGE)						5151	1	
33	BAC27DPA1763	. . PLACARD, EXTINGUISHER (MULTI-LANGUAGE)						5299	1	
34	BAC27DPA1067	. . PLACARD, FIRST AID KIT, EXTINGUISHER, POWER						5151	1	
		MEGAPHONE (MULTI-LANGUAGE)								
34	BAC27DPA1764	. . PLACARD, FIRST AID KIT, EXTINGUISHER, POWER						5299	1	
		MEGAPHONE (MULTI-LANGUAGE)								
34A	81778-1	. . PLACARD, NO SMOKING (V0563B) (ADDED BY SVA E.O. . .						5199	5	
		82360)								
34B	81778-2	. . PLACARD, NO SMOKING (V0563B) (ADDED BY SVA E.O. . .						5199	2	
		82360)								
34C	81511-1	. . PLACARD, NO SMOKING (V0563B) (ADDED BY SVA E.O. . .						5199	12	
		81511)								
34D	81511-2	. . PLACARD, NO SMOKING (V0563B) (ADDED BY SVA E.O. . .						5199	2	
		81511)								
35	BAC27DPA700	. . PLACARD, NO SMOKING IN LAVATORY (MULTI-LANGUAGE) . .						5199	2	
36	BAC27DPA946	. . PLACARD, PLEASE LOCK DOOR (MULTI-LANGUAGE)						5199	1	
37	BAC27DPA952	. . PLACARD, LIFE VEST UNDER YOUR SEAT (MULTI-LANGUAGE)						5199	1	
38	BAC27DPA976	. . PLACARD, COAT ROD MUST BE RETRACTED AND LOCKED. . .						5199	1	
		DURING TAKE OFF AND LANDING (MULTI-LANGUAGE)								
39	BAC27DPA1113	. . PLACARD, FLUSHING TOILET (MULTI-LANGUAGE)						5199	1	
	65-88954-11	. PLACARD INSTL, CABIN INTERIOR (CONVERSION) (SEE 25-1, FIG. 180C, ITEM 89)						5151	RF	
	65-88954-24	. PLACARD INSTL, CABIN INTERIOR (CONVERSION) (SEE 25-1, FIG. 180C, ITEM 89 AND 25-1, FIG. 180H, ITEM 554)						5299	RF	
39A	BAC27DPA1054	. . PLACARD, LIFE RAFT (MULTI-LANGUAGE)						5199	2	
40	BAC27DPA986	. . PLACARD, LIFE VEST, TRANSMITTER (MULTI-LANGUAGE) . .						5199	1	
40A	BAC27DPA956	. . PLACARD, EXTINGUISHER (MULTI-LANGUAGE)						5199	1	
41	BAC27DPA961	. . PLACARD, FIRST AID KIT INSIDE (MULTI-LANGUAGE) . . .						5199	1	
42	BAC27DPA962	. . PLACARD, PULL (MULTI-LANGUAGE)						5199	2	
42A	BAC27DPA962	. . PLACARD, PULL (MULTI-LANGUAGE)						5151	1	
42B	69-29035-21	. . PLACARD, BLANK HANDLE						5299	1	
42C	69-29035-22	. . PLACARD, BLANK HANDLE						5299	1	
	65-88954-12	. PLACARD INSTL, CABIN INTERIOR (CONVERSION) (SEE 25-1, FIG. 180C, ITEM 92 AND 25-1, FIG. 180H, ITEM 557)						5199	RF	
44	69-29035-21	. . PLACARD, BLANK HANDLE						5199	2	
45	69-29035-22	. . PLACARD, BLANK HANDLE						5199	2	
46	BAC27DPA1054	. . PLACARD, LIFE RAFT (MULTI-LANGUAGE)						5199	2	
47	BAC27DPA962	. . PLACARD, PULL (MULTI-LANGUAGE)						5199	2	
	65-88954-13	. PLACARD INSTL, CABIN INTERIOR (CONVERSION) (SEE 25-1, FIG. 180C, ITEM 95)						5151	RF	
	65-88954-25	. PLACARD INSTL, CABIN INTERIOR (CONVERSION) (SEE 25-1, FIG. 180C, ITEM 95 AND 25-1, FIG. 180H, ITEM 560)						5299	RF	
47A	69-29035-22	. . PLACARD, BLANK HANDLE						5299	1	
47B	69-29035-21	. . PLACARD, BLANK HANDLE						5299	1	
47C	BAC27DPA962	. . PLACARD, PULL (MULTI-LANGUAGE)						5151	1	
47D	BAC27DPA1054	. . PLACARD, LIFE RAFT (MULTI-LANGUAGE)						5151	1	
48	BAC27DPA1054	. . PLACARD, LIFE RAFT (MULTI-LANGUAGE)						5199	1	
49	BAC27DPA962	. . PLACARD, PULL (MULTI-LANGUAGE)						5199	1	
	65-88954-14	. PLACARD INSTL, CABIN INTERIOR (CONVERSION) (SEE 25-1, FIG. 180C, ITEM 26 AND 25-1, FIG. 180H, ITEM 479)						5199	RF	
51	BAC27DPA985	. . DECAL, STOWAGE BIN MUST BE CLOSED AND LATCHED . .						5199	6	
		(MULTI-LANGUAGE)								
	65-88954-15	. PLACARD INSTL, CABIN INTERIOR (CONVERSION). (VARIABLE DWG;65-88954-5005) (SEE 25-1, FIG. 180C, ITEM 20)						5151	RF	
	65-88954-15	. PLACARD INSTL, CABIN INTERIOR (CONVERSION). (VARIABLE DWG;65-88954-5006) (SEE 25-1, FIG. 180C, ITEM 20 AND 25-1, FIG. 180H, ITEM 473)						5299	RF	
52	BAC27DPA950	. . PLACARD, CURTAIN SHALL BE FASTENED OPEN DURING TAKE OFF AND LANDING (MULTI-LANGUAGE)						5199	1	
53	BAC27DPA952	. . PLACARD, LIFE VEST UNDER YOUR SEAT (MULTI-LANGUAGE)						5199	1	
54	BAC27DPA984	. . DECAL, SOFT ARTICLE STOWAGE ONLY (MULTI-LANGUAGE) .						5199	1	
55	BAC27DPA985	. . DECAL, STOWAGE BIN MUST BE CLOSED AND LATCHED . .						5199	13	
		(MULTI-LANGUAGE)								
56	BAC27DPA989	. . PLACARD, EMERGENCY OXYGEN INSIDE (MULTI-LANGUAGE) .						5199	1	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
18B	65-88954-16	. PLACARD INSTL, CABIN INTERIOR (CONVERSION). (VARIABLE DWG;65-88954-5007) (SEE 25-1, FIG. 180C, ITEM 6)							5151	RF
	65-88954-16	. PLACARD INSTL, CABIN INTERIOR (CONVERSION). (VARIABLE DWG;65-88954-5008) (SEE 25-1, FIG. 180C, ITEM 6 AND 25-1, FIG. 180H, ITEM 457)							5299	RF
57	BAC27DPA700	. . PLACARD, NO SMOKING IN LAVATORY (MULTI-LANGUAGE).							5199	2
58	BAC27DPA946	. . PLACARD, PLEASE LOCK DOOR (MULTI-LANGUAGE).							5199	1
59	BAC27DPA1113	. . PLACARD, FLUSHING TOILET (MULTI-LANGUAGE).							5199	1
	65-88954-17	. PLACARD INSTL, CABIN INTERIOR (CONVERSION) (SEE 25-1, FIG. 180C, ITEM 44 AND 25-1, FIG. 18H, ITEM 497)							5199	RF
60	BAC27DPA985	. . DECAL, STOWAGE BIN MUST BE CLOSED AND LATCHED . . . (MULTI-LANGUAGE)							5199	6
	65-88954-18	. PLACARD INSTL, CABIN INTERIOR (CONVERSION). (VARIABLE DWG;65-88954-5009) (SEE 25-1, FIG. 180C, ITEM 57 AND 25-1, FIG. 180H, ITEM 515)							5151	RF
	65-88954-18	. PLACARD INSTL, CABIN INTERIOR (CONVERSION). (VARIABLE DWG;65-88954-5010) (SEE 25-1, FIG. 180C, ITEM 57)							5299	RF
61	BAC27DPA961	. . PLACARD, FIRST AID KIT INSIDE (MULTI-LANGUAGE).							5199	1
62	BAC27DPA984	. . DECAL, SOFT ARTICLE STOWAGE ONLY (MULTI-LANGUAGE).							5199	1
63	BAC27DPA985	. . DECAL, STOWAGE BIN MUST BE CLOSED AND LATCHED . . . (MULTI-LANGUAGE)							5199	6
64	BAC27DPA989	. . PLACARD, EMERGENCY OXYGEN INSIDE (MULTI-LANGUAGE).							5199	1
	65-88954-19	. PLACARD INSTL, CABIN INTERIOR (CONVERSION) (SEE 25-1, FIG. 180C, ITEM 63 AND 25-1, FIG. 180H, ITEM 521)							5199	RF
65	BAC27DPA985	. . DECAL, STOWAGE BIN MUST BE CLOSED AND LATCHED . . . (MULTI-LANGUAGE)							5199	6
	65-88954-20	. PLACARD INSTL, CABIN INTERIOR (CONVERSION) (25-1, . . . FIG. 180C, ITEM 68 AND 25-1, FIG. 180H, ITEM 526)							5199	RF
66	BAC27DPA985	. . DECAL, STOWAGE BIN MUST BE CLOSED AND LATCHED . . . (MULTI-LANGUAGE)							5199	6
	65-88954-21	. PLACARD INSTL, CABIN INTERIOR (CONVERSION). (VARIABLE DWG;65-88954-5003) (SEE 25-1, FIG. 180C, ITEM 72)							5151	RF
	65-88954-21	. PLACARD INSTL, CABIN INTERIOR (CONVERSION). (VARIABLE DWG;65-88954-5004) (SEE 25-1, FIG. 180C, ITEM 72 AND 25-1, FIG. 180H, ITEM 530)							5299	RF
68	BAC27DPA984	. . DECAL, SOFT ARTICLE STOWAGE ONLY (MULTI-LANGUAGE).							5199	1
69	BAC27DPA985	. . DECAL, STOWAGE BIN MUST BE CLOSED AND LATCHED . . . (MULTI-LANGUAGE)							5199	4
70	BAC27DPA989	. . PLACARD, EMERGENCY OXYGEN INSIDE (MULTI-LANGUAGE).							5199	1
75	730-1152	. SCOTCH-CAL, MULTI LANGUAGE (V05638) (ADDED BY SVA . . . E.O. 80979)							5299	1
80	730-0375	. PLACARD, WASTE CONTAINERS MUST BE INSTALLED AT ALL . . . TIMES (V05638) (ADDED BY SVA E.O. 80930)							5199	AR
81	81632-6	. PLACARD, DO NOT USE SEAT DURING T/O AND LANDING . . . (V05638) (ADDED BY SVA E.O. 81632)							5199	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

 STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

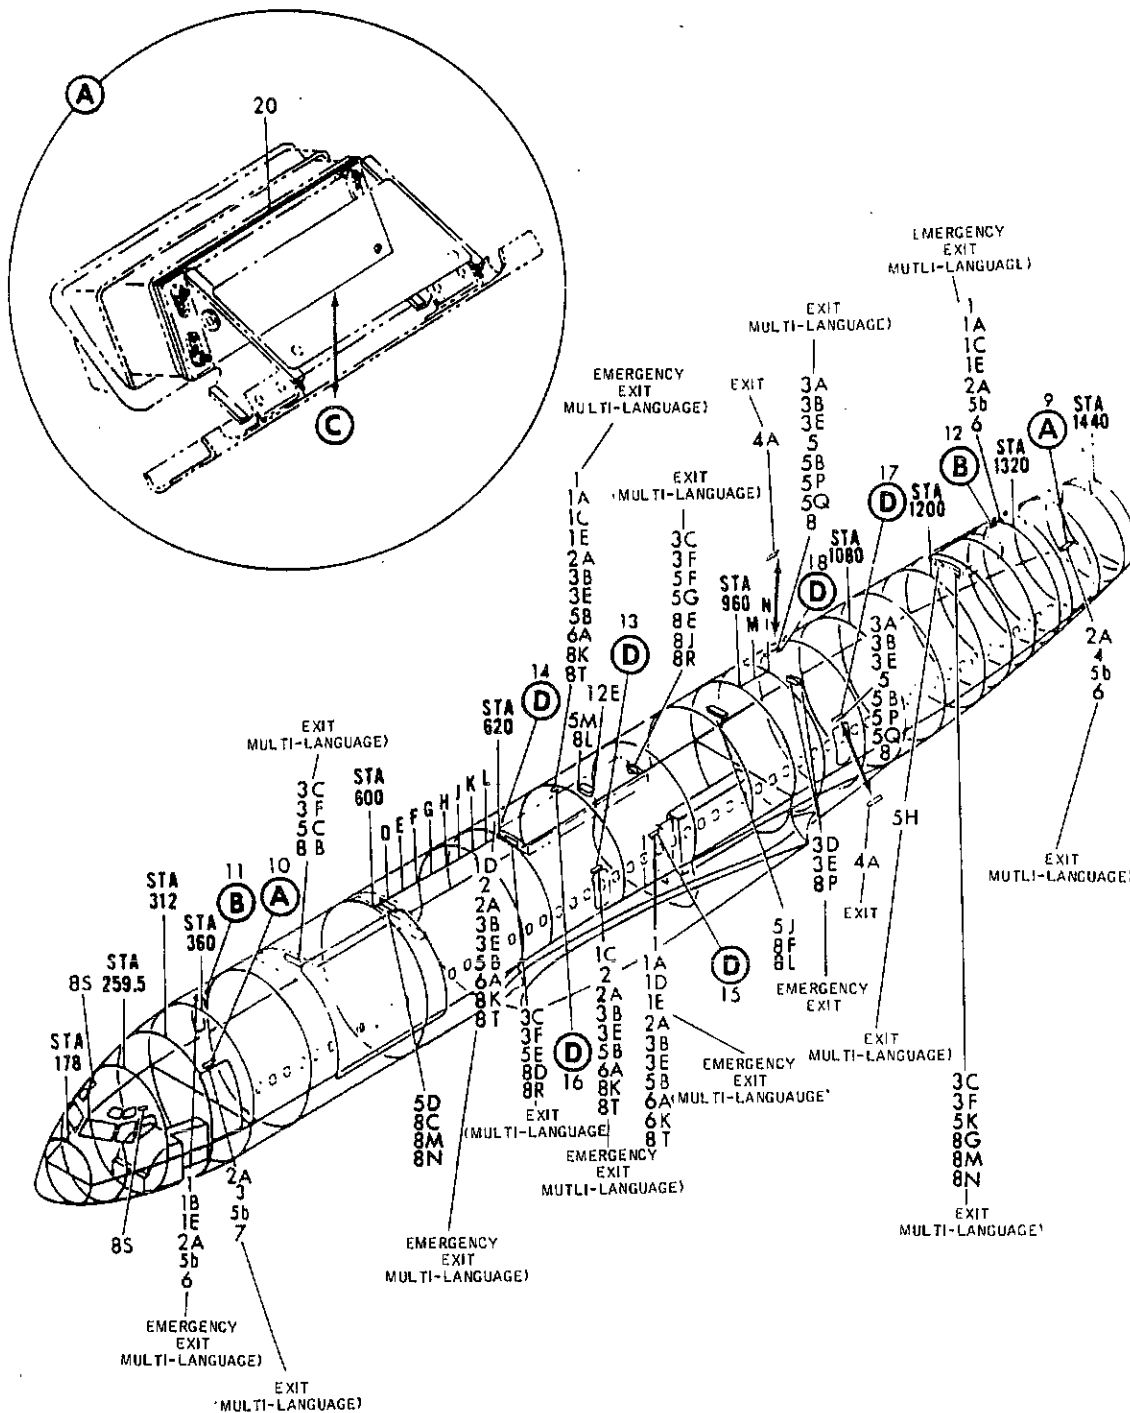

COVER ASSY, EMERGENCY EXIT LIGHT
LIGHT ASSY, EMERGENCY EXIT
FIGURE 19. SUPPORT ASSY, EMERGENCY EXIT LIGHT (SHEET 1)

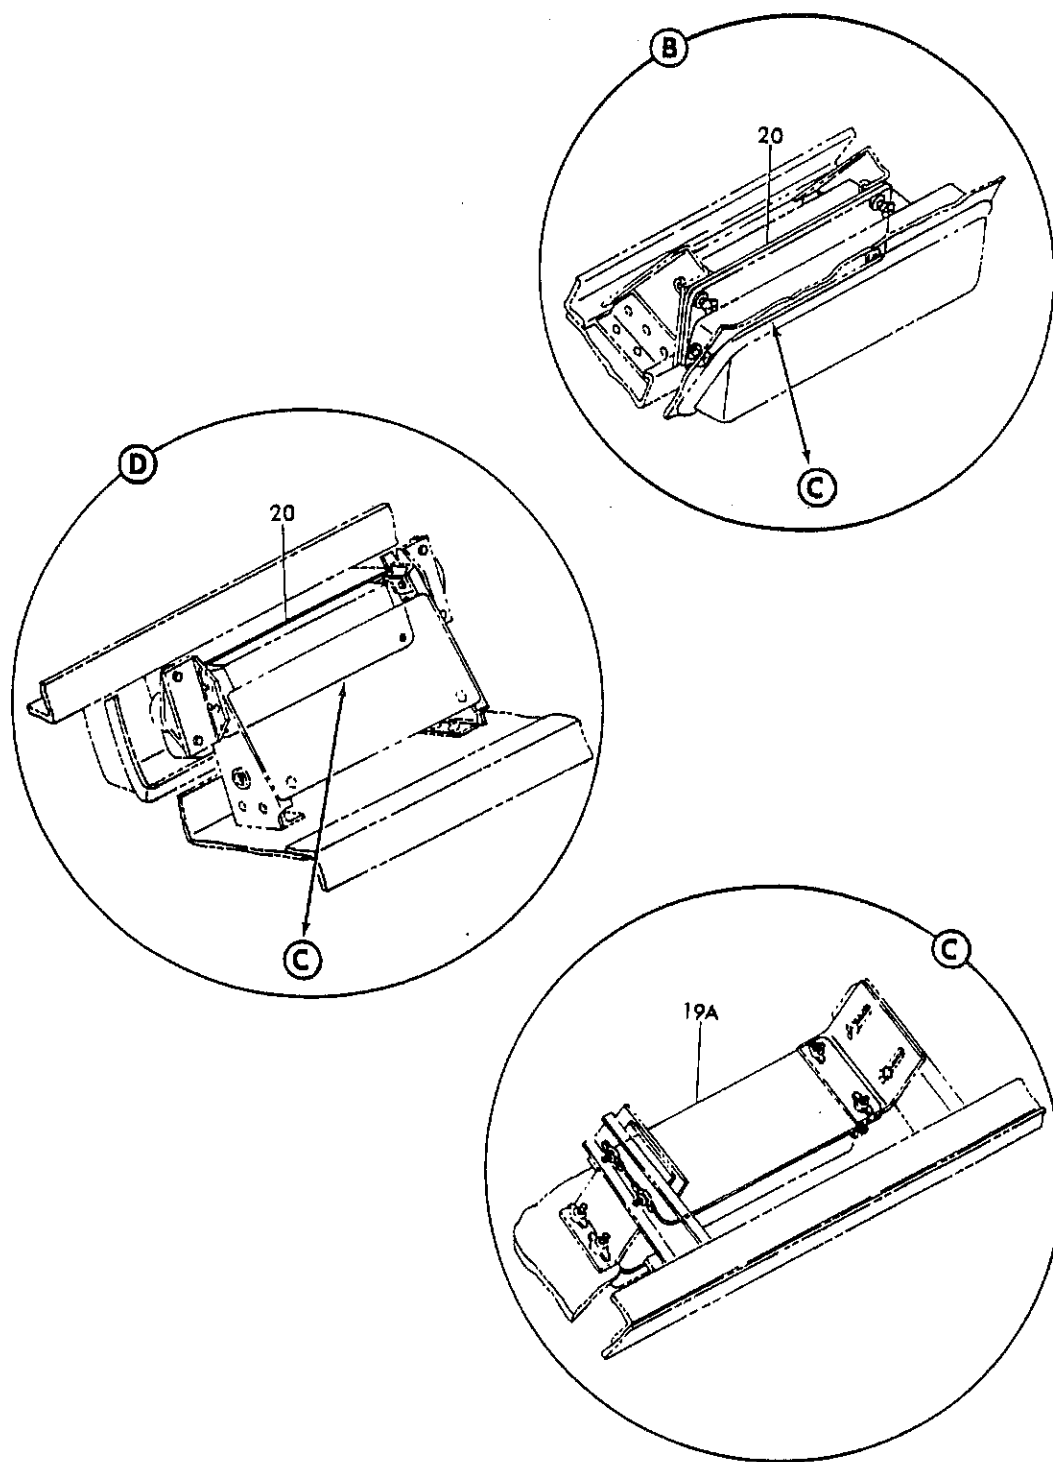 


FIGURE 19. EQUIPMENT INSTL, EMERGENCY (REQUIRED PLACARDS ONLY) (SHEET 2)


RAF
NOV 21/91

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)


FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
19	10	65-56538-1		. SUPPORT INSTL, FORWARD ENTRY EXIT LIGHT (REQUIRED PLACARDS ONLY) (SEE 25-18, FIG. 14L, ITEM 5, 25-18, FIG. 14N, ITEM 69, 25-18, FIG. 15, ITEM 6, 25-18, FIG. 15A, ITEM 142, 25-18, FIG. 15G, ITEM 3, 25-18, FIG. 15H, ITEM 3, 25-18, FIG. 16, ITEM 6, 25-18, FIG. 16H, ITEM 3, 25-18, FIG. 17, ITEM 3, 25-18, FIG. 17C, ITEM 6, 25-18, FIG. 17D, ITEM 6, 25-18, FIG. 17F, ITEM 5, 25-18, FIG. 17G, ITEM 5, 25-18, FIG. 17H, ITEM 4, 25-18, FIG. 17J, ITEM 4, 25-18, FIG. 17L, ITEM 4, 25-18, FIG. 17M, ITEM 4, 25-18, FIG. 17N, ITEM 4, 25-18, FIG. 17P, ITEM 3, 25-18, FIG. 17Q, ITEM 3, 25-18, FIG. 17S, ITEM 3, 25-18, FIG. 17T, ITEM 3, 25-18, FIG. 17U, ITEM 5, 25-18, FIG. 17V, ITEM 5, 25-18, FIG. 17W, ITEM 6, 25-18, FIG. 17X, ITEM 3, 25-18, FIG. 17Y, ITEM 5 AND 25-18, FIG. 17Z, ITEM 5)	0150	RF
	11	65-56538-2		. SUPPORT INSTL, FORWARD GALLEY EXIT LIGHT. (REQUIRED PLACARDS ONLY) (SEE 25-18, FIG. 14L, ITEM 6, 25-18, FIG. 14N, ITEM 70, 25-18, FIG. 15, ITEM 7, 25-18, FIG. 15A, ITEM 143, 25-18, FIG. 15G, ITEM 4, 25-18, FIG. 15H, ITEM 4, 25-18, FIG. 16, ITEM 7, 25-18, FIG. 16H, ITEM 4, 25-18, FIG. 17C, ITEM 7, 25-18, FIG. 17D, ITEM 7, 25-18, FIG. 17F, ITEM 6, 25-18, FIG. 17G, ITEM 6, 25-18, FIG. 17H, ITEM 5, 25-18, FIG. 17J, ITEM 5, 25-18, FIG. 17L, ITEM 5, 25-18, FIG. 17M, ITEM 5, 25-18, FIG. 17N, ITEM 5, 25-18, FIG. 17P, ITEM 4, 25-18, FIG. 17Q, ITEM 4, 25-18, FIG. 17S, ITEM 4, 25-18, FIG. 17T, ITEM 4, 25-18, FIG. 17V, ITEM 6, 25-18, FIG. 17W, ITEM 7, 25-18, FIG. 17X, ITEM 4, 25-18, FIG. 17Y, ITEM 6 AND 25-18, FIG. 17Z, ITEM 6)	0150	RF
	13	65-56538-5		. SUPPORT INSTL, STATION 690.45 LH SIDE EXIT LIGHT. . . (REQUIRED PLACARDS ONLY) (SEE 25-18, FIG. 14L, ITEM 7, 25-18, FIG. 14N, ITEM 71, 25-18, FIG. 15, ITEM 8, 25-18, FIG. 15A, ITEM 144, 25-18, FIG. 15G, ITEM 5, 25-18, FIG. 15H, ITEM 7, 25-18, FIG. 16, ITEM 8, 25-18, FIG. 16H, ITEM 5, 25-18, FIG. 17C, ITEM 8, 25-18, FIG. 17D, ITEM 8, 25-18, FIG. 17F, ITEM 7, 25-18, FIG. 17G, ITEM 7, 25-18, FIG. 17H, ITEM 6, 25-18, FIG. 17J, ITEM 6, 25-18, FIG. 17L, ITEM 6, 25-18, FIG. 17M, ITEM 6, 25-18, FIG. 17N, ITEM 6, 25-18, FIG. 17P, ITEM 5, 25-18, FIG. 17Q, ITEM 5, 25-18, FIG. 17S, ITEM 5, 25-18, FIG. 17T, ITEM 5, 25-18, FIG. 17V, ITEM 7, 25-18, FIG. 17W, ITEM 8, 25-18, FIG. 17X, ITEM 5, 25-18, FIG. 17Y, ITEM 7 AND 25-18, FIG. 17Z, ITEM 7)	0150	RF
	14	65-56538-6		. SUPPORT INSTL, STATION 690.45 RH SIDE EXIT LIGHT. . . (REQUIRED PLACARDS ONLY) (SEE 25-18, FIG. 14L, ITEM 8, 25-18, FIG. 14N, ITEM 72, 25-18, FIG. 15, ITEM 9, 25-18, FIG. 15A, ITEM 145, 25-18, FIG. 15G, ITEM 6, 25-18, FIG. 15H, ITEM 8, 25-18, FIG. 16, ITEM 9, 25-18, FIG. 16H, ITEM 6, 25-18, FIG. 17C, ITEM 9, 25-18, FIG. 17D, ITEM 9, 25-18, FIG. 17F, ITEM 8, 25-18, FIG. 17G, ITEM 8, 25-18, FIG. 17H, ITEM 7, 25-18, FIG. 17J, ITEM 7, 25-18, FIG. 17L, ITEM 7, 25-18, FIG. 17M, ITEM 7, 25-18, FIG. 17N, ITEM 7, 25-18, FIG. 17P, ITEM 6, 25-18, FIG. 17Q, ITEM 6, 25-18, FIG. 17S, ITEM 6, 25-18, FIG. 17T, ITEM 6, 25-18, FIG. 17V, ITEM 8, 25-18, FIG. 17W, ITEM 9, 25-18, FIG. 17X, ITEM 6, 25-18, FIG. 17Y, ITEM 8 AND 25-18, FIG. 17Z, ITEM 8)	0150	RF
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)


FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE														EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7									
19	15	65-56538-7	. SUPPORT INSTL, STATION 770.45 LH SIDE EXIT LIGHT. . . (REQUIRED PLACARDS ONLY) (SEE 25-18, FIG. 14L, ITEM 9, 25-18, FIG. 14N, ITEM 73, 25-18, FIG. 15, ITEM 10, 25-18, FIG. 15A, ITEM 146, 25-18, FIG. 15G, ITEM 7, 25-18, FIG. 15H, ITEM 9, 25-18, FIG. 16, ITEM 10, 25-18, FIG. 16H, ITEM 7, 25-18, FIG. 17C, ITEM 10, 25-18, FIG. 17D, ITEM 10, 25-18, FIG. 17F, ITEM 9, 25-18, FIG. 17G, ITEM 9, 25-18, FIG. 17H, ITEM 8, 25-18, FIG. 17J, ITEM 8, 25-18, FIG. 17L, ITEM 8, 25-18, FIG. 17M, ITEM 8, 25-18, FIG. 17N, ITEM 8, 25-18, FIG. 17P, ITEM 7, 25-18, FIG. 17Q, ITEM 7, 25-18, FIG. 17S, ITEM 7, 25-18, FIG. 17T, ITEM 7, 25-18, FIG. 17V, ITEM 9, 25-18, FIG. 17W, ITEM 10, 25-18, FIG. 17X, ITEM 7, 25-18, FIG. 17Y, ITEM 9 AND 25-18, FIG. 17Z, ITEM 9)														0150	RF
	16	65-56538-8	. SUPPORT INSTL, STATION 770.45 RH SIDE EXIT LIGHT. . . (REQUIRED PLACARDS ONLY) (SEE 25-18, FIG. 14L, ITEM 10, 25-18, FIG. 14N, ITEM 74, 25-18, FIG. 15, ITEM 11, 25-18, FIG. 15A, ITEM 147, 25-18, FIG. 15G, ITEM 8, 25-18, FIG. 15H, ITEM 10, 25-18, FIG. 16, ITEM 11, 25-18, FIG. 16H, ITEM 8, 25-18, FIG. 17C, ITEM 11, 25-18, FIG. 17D, ITEM 11, 25-18, FIG. 17F, ITEM 10, 25-18, FIG. 17G, ITEM 10, 25-18, FIG. 17H, ITEM 9, 25-18, FIG. 17J, ITEM 9, 25-18, FIG. 17L, ITEM 9, 25-18, FIG. 17M, ITEM 9, 25-18, FIG. 17N, ITEM 9, 25-18, FIG. 17P, ITEM 8, 25-18, FIG. 17Q, ITEM 8, 25-18, FIG. 17S, ITEM 8, 25-18, FIG. 17T, ITEM 8, 25-18, FIG. 17V, ITEM 10, 25-18, FIG. 17W, ITEM 11, 25-18, FIG. 17X, ITEM 8, 25-18, FIG. 17Y, ITEM 10 AND 25-18, FIG. 17Z, ITEM 10)														0150	RF
	17	65-56538-9	. SUPPORT INSTL, STATION 990.4 LH SIDE EXIT LIGHT. . . (REQUIRED PLACARDS ONLY) (SEE 25-18, FIG. 15, ITEM 13, 25-18, FIG. 15A, ITEM 149, 25-18, FIG. 15G, ITEM 9, 25-18, FIG. 15H, ITEM 11, 25-18, FIG. 16, ITEM 13, 25-18, FIG. 16H ITEM 9, 25-18, FIG. 17C, ITEM 13, 25-18, FIG. 17D, ITEM 13, 25-18, FIG. 17F, ITEM 12, 25-18, FIG. 17G, ITEM 12, 25-18, FIG. 17H, ITEM 11, 25-18, FIG. 17J, ITEM 11, 25-18, FIG. 17L, ITEM 11, 25-18, FIG. 17M, ITEM 11, 25-18, FIG. 17N, ITEM 11, 25-18, FIG. 17P, ITEM 9, 25-18, FIG. 17Q, ITEM 9, 25-18, FIG. 17S, ITEM 9, 25-18, FIG. 17T, ITEM 9, 25-18, FIG. 17V, ITEM 11, 25-18, FIG. 17W, ITEM 12, 25-18, FIG. 17X, ITEM 9, 25-18, FIG. 17Y, ITEM 11 AND 25-18, FIG. 17Z, ITEM 11)														0150	RF
	18	65-56538-10	. SUPPORT INSTL, STATION 990.4 RH SIDE EXIT LIGHT. . . (REQUIRED PLACARDS ONLY) (SEE (SEE 25-18, FIG. 15, ITEM 14, 25-18, FIG. 15A, ITEM 150, 25-18, FIG. 15G, ITEM 10, 25-18, FIG. 15H, ITEM 12, 25-18, FIG. 16, ITEM 14, 25-18, FIG. 16H, ITEM 10, 25-18, FIG. 17C, ITEM 14, 25-18, FIG. 17D, ITEM 14, 25-18, FIG. 17F, ITEM 13, 25-18, FIG. 17G, ITEM 13, 25-18, FIG. 17H, ITEM 12, 25-18, FIG. 17J, ITEM 12, 25-18, FIG. 17L, ITEM 12, 25-18, FIG. 17M, ITEM 12, 25-18, FIG. 17N, ITEM 12, 25-18, FIG. 17P, ITEM 10, 25-18, FIG. 17Q, ITEM 10, 25-18, FIG. 17S, ITEM 10, 25-18, FIG. 17T, ITEM 10, 25-18, FIG. 17V, ITEM 12, 25-18, FIG. 17W, ITEM 13, 25-18, FIG. 17X, ITEM 10, 25-18, FIG. 17Y, ITEM 12 AND 25-18, FIG. 17Z, ITEM 12)														0150	RF
	19A	10-60091-100	. . PLATE, MOUNTING FOR REFERENCE TO OTHER EQUIPMENT DETAILS, SEE NHA . .														0150 0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE																		

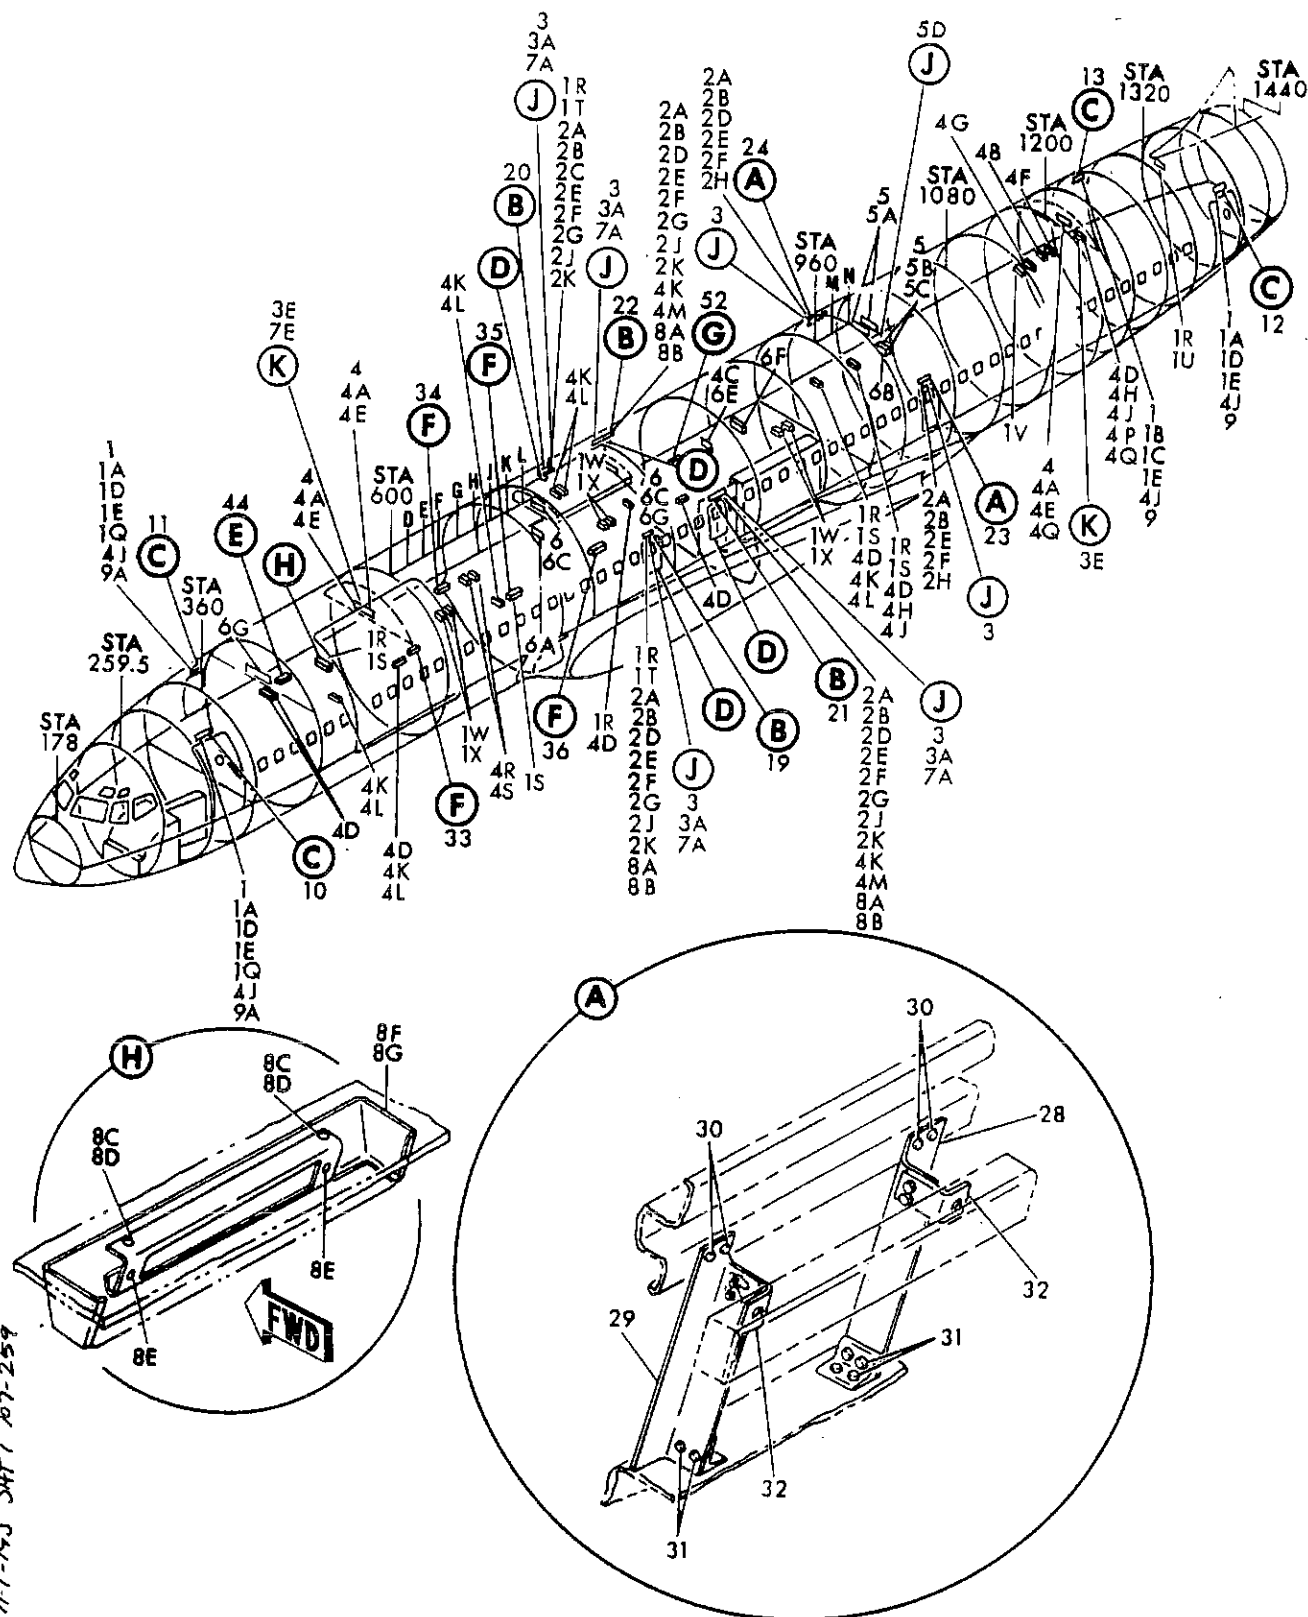 

 
COVER ASSY, EMERGENCY EXIT
LIGHT ASSY, EMERGENCY EXIT
FIGURE 19). SUPPORT INSTL, EMERGENCY EXIT LIGHT (SHEET 1)

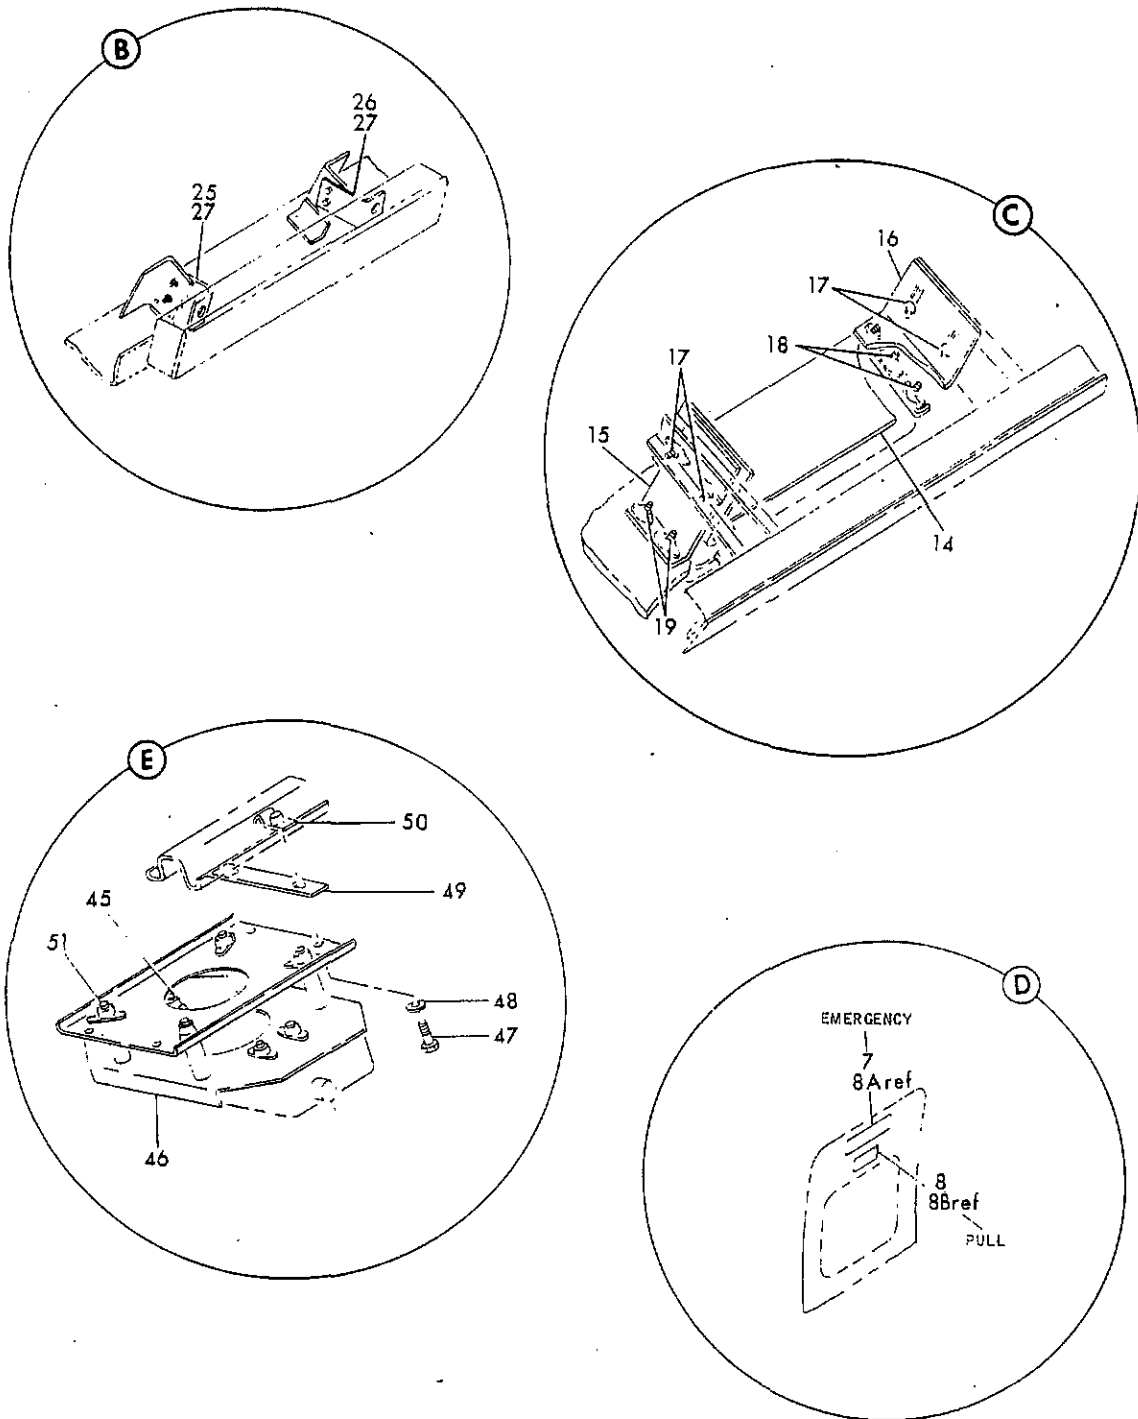

 
COVER ASSY, EMERGENCY EXIT
LIGHT ASSY, EMERGENCY EXIT
FIGURE 19J. SUPPORT INSTL, EMERGENCY EXIT LIGHT (SHEET 2)

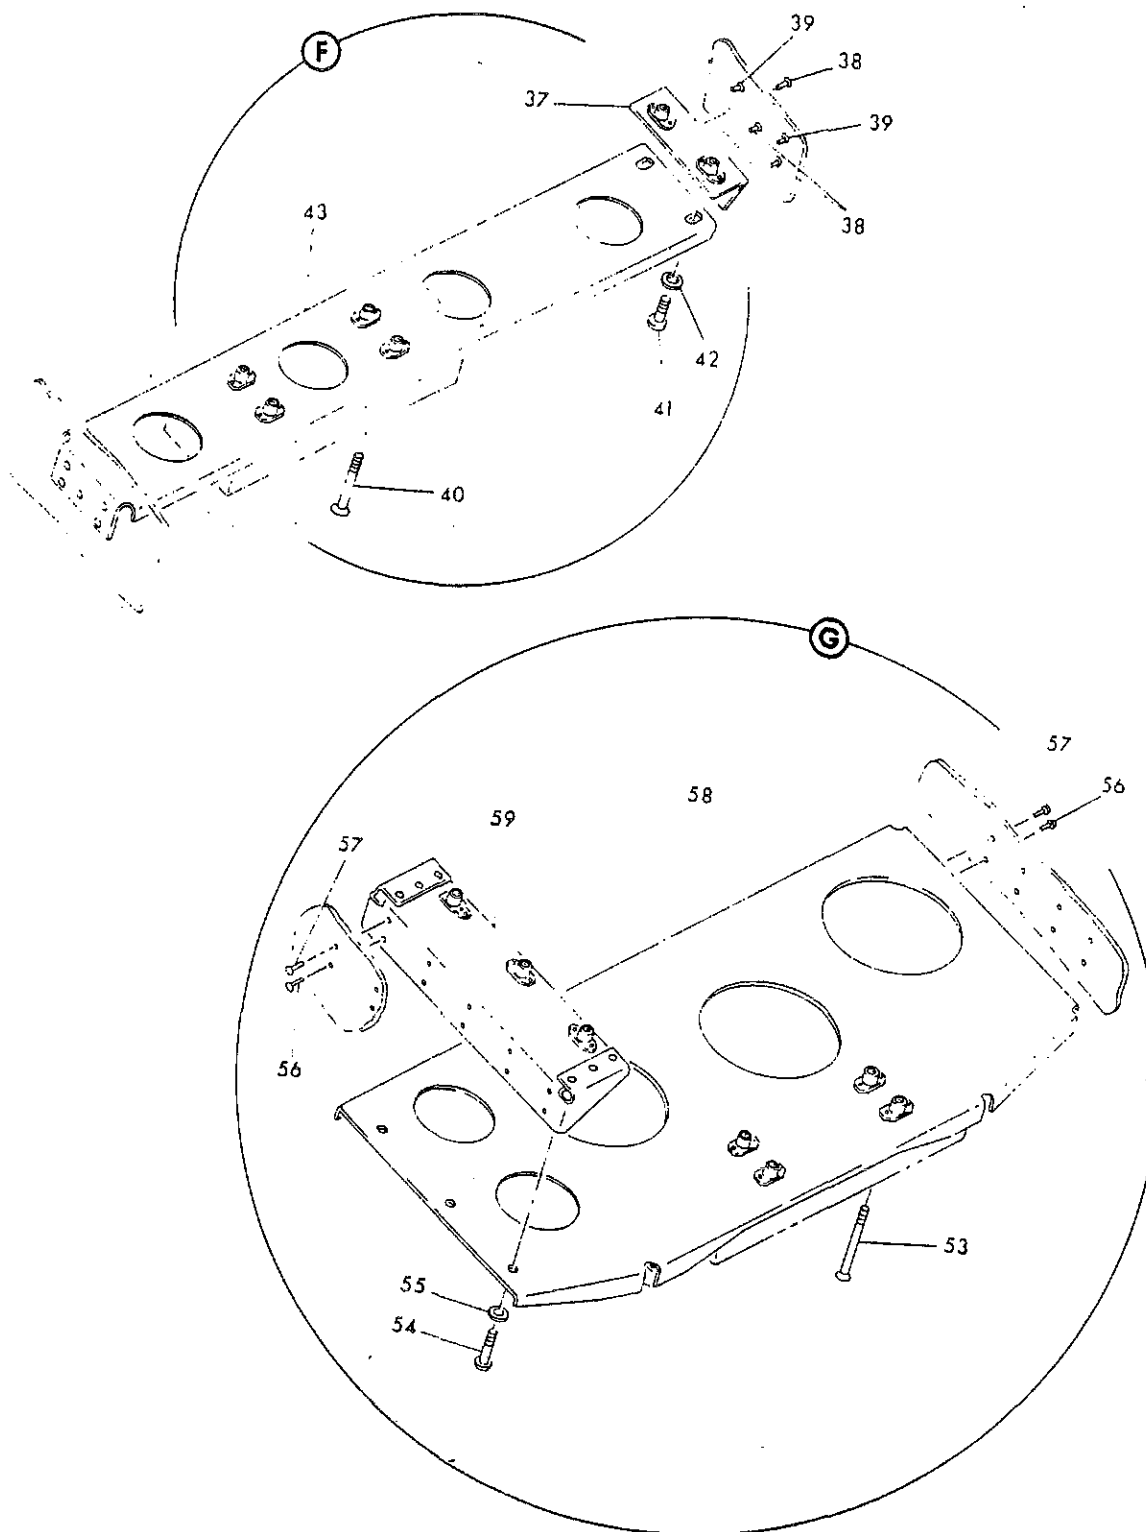

 COVER ASSY, EMERGENCY EXIT
LIGHT ASSY, EMERGENCY EXIT
FIGURE 19J. SUPPORT INSTL, EMERGENCY EXIT LIGHT (SHEET 3)

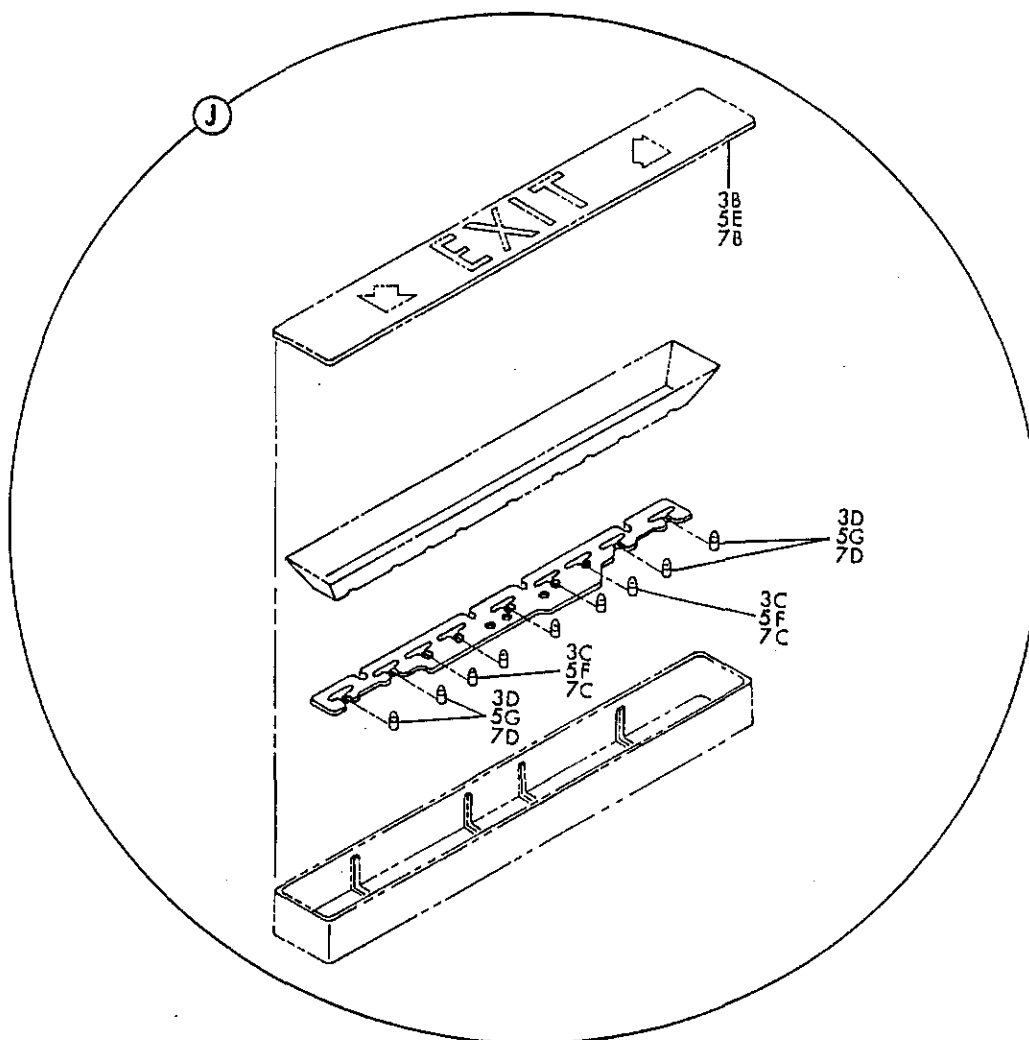

 COVER ASSY, EMERGENCY
EXIT LIGHT ASSY, EMERGENCY
FIGURE 19J, EXIT SUPPORT INSTL, EMERGENCY EXIT LIGHT (SHEET 4)

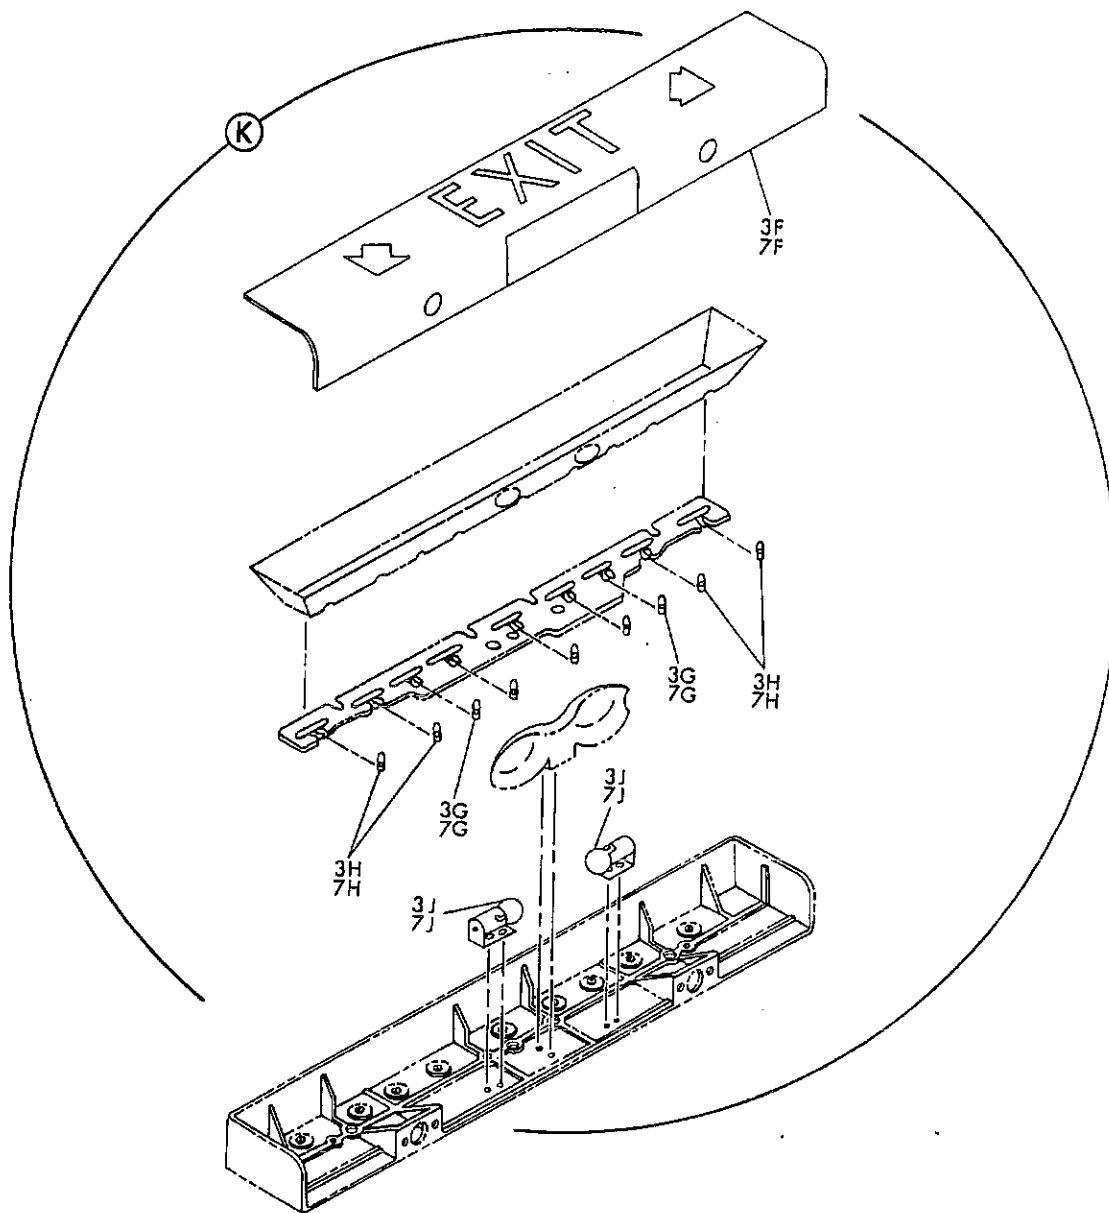

COVER ASSY, EMERGENCY
EXIT LIGHT ASSY, EMERGENCY
FIGURE 19J, EXIT SUPPORT INSTL, EMERGENCY EXIT LIGHT (SHEET 5)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
19J		COVER ASSY, EMERGENCY EXIT LIGHT.							5199	
		SIGN ASSY, EMERGENCY EXIT							5199	
		LIGHT ASSY, EMERGENCY EXIT.							5199	
		SUPPORT INSTL, EMERGENCY EXIT LIGHT							5199	
1	10-60091-289	. COVER ASSY, EMERGENCY EXIT LIGHT (SEE 25-18, FIG. . .							5199	RF
		18C, ITEM 31)								
2B	10-61783-106	. SIGN ASSY, EMERGENCY EXIT LIGHT (SEE 25-18, FIG. 18C,							5199	RF
		ITEM 32) (OPTIONAL TO 10-61783-1106 USED WITH								
		10-61783-201)								
2B	10-61783-1106	. LENS, (SEE 25-18, FIG. 18C, ITEM 32).							5199	RF
		(OPTIONAL 10-61783-106 USED WITH 10-61783-201)								
4A	10-61783-202	. HOUSING ASSY (SEE 25-18, FIG. 18H, ITEMS 13,.							5199	RF
		34)								
4B	10-61783-107	. SIGN ASSY, EMERGENCY EXIT LIGHT (SEE 25-18, FIG. 18C,							5199	RF
		ITEM 33) (OPTIONAL TO 10-61783-1107 USED WITH								
		10-61783-202)								
4B	10-61783-1107	. LENS, (SEE 25-18, FIG. 18C, ITEM 33).							5199	RF
		(OPTIONAL 10-61783-107 USED WITH 10-61783-202)								
4E	10-61783-1008	. LENS.							5199	2
4F	10-61783-107	. SIGN ASSY, EMERGENCY EXIT LIGHT (DELETED BY SVA . . .							5199	RF
		REQUEST) (SEE 25-18, FIG. 18C, ITEM 33A)								
4G	10-61783-107	. SIGN ASSY, EMERGENCY EXIT LIGHT (ADDED BY SVA							5199	RF
		REQUEST) (SEE 25-18, FIG. 18C, ITEM 33B)								
5C	10-61783-1009	. LENS.							5199	2
6A	10-61783-109	. SIGN ASSY, EMERGENCY EXIT LIGHT (SEE 25-18, FIG. 18C,							5199	RF
		ITEM 35) (OPTIONAL TO 10-61783-1109 USED WITH								
		10-61783-202)								
6A	10-61783-1109	. LENS, (SEE 25-18, FIG. 18C, ITEM 35).							5199	RF
		(OPTIONAL 10-61783-109 USED WITH 10-61783-202)								
6B	10-61783-108	. SIGN ASSY, EMERGENCY EXIT LIGHT (SEE 25-18, FIG. 18C,							5199	RF
		ITEM 34) (OPTIONAL TO 10-61783-1108 USED WITH								
		10-61783-201)								
		TOTAL QTY IS 2								
6B	10-61783-1108	. LENS, (SEE 25-18, FIG. 18C, ITEM 34).							5199	RF
		(OPTIONAL 10-61783-108 USED WITH 10-61783-201)								
6E	10-61783-109	. SIGN ASSY, EMERGENCY EXIT LIGHT (DELETED BY SVA . . .							5199	RF
		REQUEST) (SEE 25-18, FIG. 18C, ITEM 35A)								
6F	10-61783-109	. SIGN ASSY, EMERGENCY EXIT LIGHT (ADDED BY SVA							5199	RF
		REQUEST) (SEE 25-18, FIG. 18C, ITEM 35B)								
7	10-61789-48	. SIGN ASSY, EMERGENCY EXIT LIGHT (SEE 25-18, FIG. 18C,							5199	RF
		ITEM 36)								
		TOTAL QTY IS 4								
8	10-61789-49	. SIGN, SELF LUMINOUS EMERGENCY (SEE 25-18, FIG. 18C, .							5199	RF
		ITEM 37)								
9	10-60091-101	. LIGHT ASSY, EMERGENCY EXIT (SEE 25-18, FIG. 16R, ITEM							5199	RF
		2, 25-18, FIG. 16S, ITEM 2, 25-18, FIG. 16Y, ITEM								
		3, 25-18, FIG. 16Z, ITEM 2, 25-18, FIG. 18A, ITEM								
		2, 25-18, FIG. 18B, ITEM 2, 25-18, FIG. 18C,								
		ITEM 38 AND 25-18, FIG. 221, ITEM 2)								
10	65-56538-1	. SUPPORT INSTL, FORWARD ENTRY EMERGENCY EXIT LIGHT . .							5199	RF
		(SEE 25-18, FIG. 16C, ITEM 4, 25-18, FIG. 16R,								
		ITEM 3, 25-18, FIG. 16S, ITEM 3, 25-18, FIG. 16Y,								
		ITEM 4, 25-18, FIG. 16Z, ITEM 3, 25-18, FIG. 18A,								
		ITEM 4, 25-18, FIG. 18B, ITEM 3, 25-18, FIG.								
		18C, ITEM 39 AND 25-18, FIG. 221, ITEM 3)								
11	65-56538-2	. SUPPORT INSTL, FORWARD GALLEY EMERGENCY EXIT LIGHT. .							5199	RF
		(SEE 25-18, FIG. 16C, ITEM 5, 25-18, FIG. 16R,								
		ITEM 4, 25-18, FIG. 16S, ITEM 4, 25-18, FIG. 16Y,								
		ITEM 5, 25-18, FIG. 16Z, ITEM 4, 25-18, FIG. 18A,								
		ITEM 5, 25-18, FIG. 18B, ITEM 3A, 25-18, FIG.								
		TOTAL QTY IS 1								
12	65-56538-3	. SUPPORT INSTL, AFT ENTRY EMERGENCY EXIT LIGHT (SEE. .							5199	RF
		25-18, FIG. 16C, ITEM 6, 25-18, FIG. 16R, ITEM								
		5, 25-18, FIG. 16S, ITEM 5, 25-18, FIG. 16Y, ITEM								
		6, 25-18, FIG. 16Z, ITEM 5, 25-18, FIG. 18A, ITEM								
		6, 25-18, FIG. 18B, ITEM 4, 25-18, FIG. 18C,								
		ITEM 41 AND 25-18, FIG. 221, ITEM 5)								
13	65-56538-4	. SUPPORT INSTL, AFT GALLEY EMERGENCY EXIT LIGHT (SEE .							5199	RF
		25-18, FIG. 16C, ITEM 7, 25-18, FIG. 16R, ITEM 6,								
		25-18, FIG. 16S, ITEM 6, 25-18, FIG. 16Y, ITEM 7,								
		25-18, FIG. 16Z, ITEM 6, 25-18, FIG. 18A, ITEM 7,								
		25-18, FIG. 18B, ITEM 5, 25-18, FIG. 18C, ITEM								
		42 AND 25-18, FIG. 221, ITEM 6)								
14	10-60091-100	. . PLATE, MOUNTING							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
19J	NAS514P1032-7	..	ATTACHING PARTS SCREW	5199	16
15	65-56538-18	..	BRACKET	5199	1
16	65-56538-19	..	BRACKET	5199	1
17	NAS602-6	..	ATTACHING PARTS SCREW	5199	16
18	BACSI2CB3-6	..	SCREW	5199	16
19	65-81157-1	.	SUPPORT INSTL, LH SIDE EMERGENCY EXIT LIGHT (SEE. . . 25-18, FIG. 16C, ITEM 12, 25-18, FIG. 16R, ITEM 8, 25-18, FIG. 16S, ITEM 8, 25-18, FIG. 16Y, ITEM 9, 25-18, FIG. 16Z, ITEM 8, 25-18, FIG. 18A, ITEM 10, 25-18, FIG. 18B, ITEM 7, 25-18, FIG. 18C, ITEM 43 AND 25-18, FIG. 221, ITEM 9)	5199	RF
20	65-81157-2	.	SUPPORT INSTL, RH SIDE EMERGENCY EXIT LIGHT (SEE. . . 25-18, FIG. 16C, ITEM 18, 25-18, FIG. 16R, ITEM 9, 25-18, FIG. 16S, ITEM 9, 25-18, FIG. 16Y, ITEM 10, 25-18, FIG. 16Z, ITEM 9, 25-18, FIG. 18A, ITEM 11, 25-18, FIG. 18B, ITEM 8, 25-18, FIG. 18C, ITEM 44 AND 25-18, FIG. 221, ITEM 10)	5199	RF
21	65-81157-3	.	SUPPORT INSTL, LH SIDE EMERGENCY EXIT LIGHT (SEE. . . 25-18, FIG. 16C, ITEM 13, 25-18, FIG. 16R, ITEM 10, 25-18, FIG. 16S, ITEM 10, 25-18, FIG. 16Y, ITEM 11, 25-18, FIG. 16Z, ITEM 10, 25-18, FIG. 18A, ITEM 12, 25-18, FIG. 18B, ITEM 9, 25-18, FIG. 18C, ITEM 45 AND 25-18, FIG. 221, ITEM 11)	5199	RF
22	65-81157-4	.	SUPPORT INSTL, RH SIDE EMERGENCY EXIT LIGHT (SEE. . . 25-18, FIG. 16C, ITEM 14, 25-18, FIG. 16R, ITEM 11, 25-18, FIG. 16S, ITEM 11, 25-18, FIG. 16Y, ITEM 12, 25-18, FIG. 16Z, ITEM 11, 25-18, FIG. 18A, ITEM 13, 25-18, FIG. 18B, ITEM 10, 25-18, FIG. 18C, ITEM 46 AND 25-18, FIG. 221, ITEM 12)	5199	RF
23	65-81157-19	.	SUPPORT INSTL, LH SIDE EMERGENCY EXIT LIGHT (SEE. . . 25-18, FIG. 16S, ITEM 12, 25-18, FIG. 16Y, ITEM 13, 25-18, FIG. 16Z, ITEM 12, 25-18, FIG. 18A, ITEM 14, 25-18, FIG. 18B, ITEM 11, 25-18, FIG. 18C, ITEM 47 AND 25-18, FIG. 221, ITEM 13)	5199	RF
24	65-81157-20	.	SUPPORT INSTL, RH SIDE EMERGENCY EXIT LIGHT (SEE. . . 25-18, FIG. 16S, ITEM 13, 25-18, FIG. 16Y, ITEM 14, 25-18, FIG. 16Z, ITEM 13, 25-18, FIG. 18A, ITEM 15, 25-18, FIG. 18B, ITEM 12, 25-18, FIG. 18C, ITEM 48 AND 25-18, FIG. 221, ITEM 14)	5199	RF
25	65-81157-13	..	SUPPORT ASSY, (USED ON 65-81157-1, -2, -3 AND -4)	5199	1
26	65-81157-14	..	SUPPORT ASSY, (USED ON 65-81157-1, -2, -3 AND -4)	5199	1
	BACR1586AD	..	ATTACHING PARTS RIVET	5199	16
27	69-62115-5	..	ANGLE ASSY, SUPPORT	5199	2
	BACSI2CB3-7	..	ATTACHING PARTS SCREW	5199	16
	AN960D10L	..	WASHER	5199	16
28	65-81157-21	..	SUPPORT ASSY, (USED ON 65-81157-19 AND -20)	5199	1
29	65-81157-22	..	SUPPORT ASSY, (USED ON 65-81157-19 AND -20)	5199	1
30	BACR15B4AD	..	ATTACHING PARTS RIVET	5199	16
31	BACR1586AD	..	RIVET	5199	16
32	69-64846-5	..	ANGLE ASSY.	5199	2
	BACSI2BC3-7	..	SCREW	5199	8
	AN960D10L	..	WASHER	5199	8
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

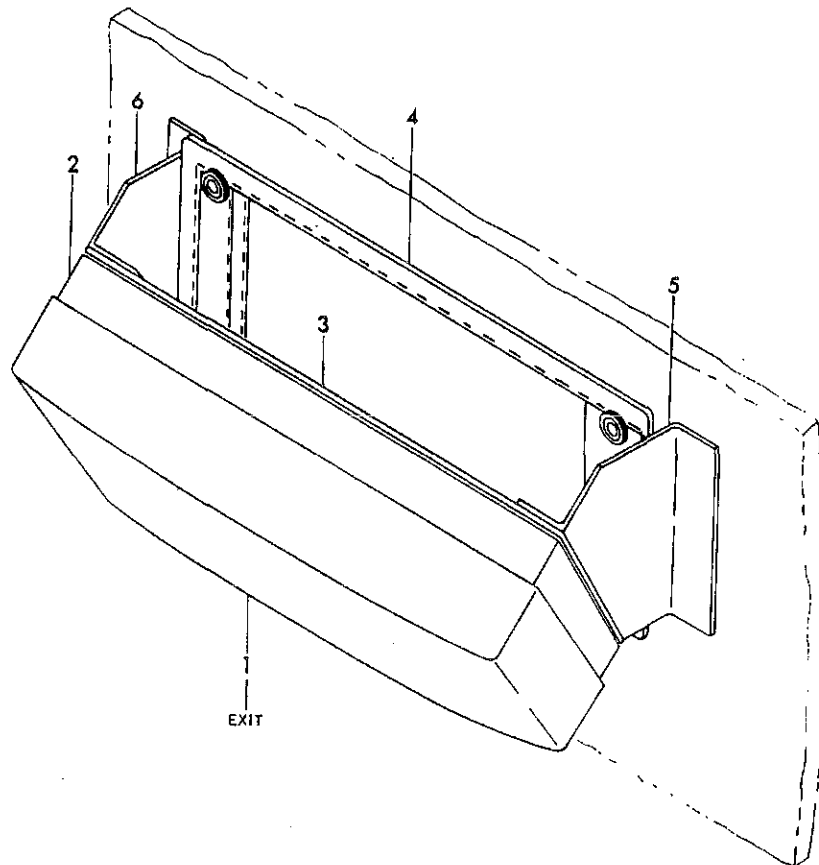 
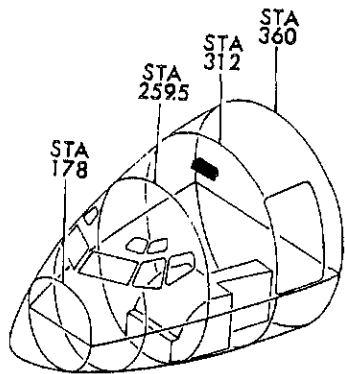 


FIGURE 20A. LIGHT INSTL, CONTROL CABIN IN EMERGENCY EXIT

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
20A	69-3644		LIGHT INSTL, CONTROL CABIN EMERGENCY EXIT (SEE 25-1, . . . FIG. 1, ITEM 98, 25-1, FIG. 1B, ITEM 88, 25-1, FIG. 1C, ITEM 102, 25-1, FIG. 1D, ITEM 98, 25-1, FIG. 1E, ITEM 94, 25-1, FIG. 1F, ITEM 75, 25-1, FIG. 1G, ITEM 82, 25-1, FIG. 1H, ITEM 91, 25-1, FIG. 1J, ITEM 86, 25-1, FIG. 1K, ITEM 84, 25-1, FIG. 2B, ITEM 89, 25-1, FIG. 2C, ITEM 80, 25-1, FIG. 2D, ITEM 71, 25-1, FIG. 2E, ITEM 50, 25-1, FIG. 2F, ITEM 98, 25-1, FIG. 2G, ITEM 78 AND 25-1, FIG. 2H, ITEM 87)		RF
1	10-60091-49		. COVER ASSY.		1
2	10-60091-101		. LIGHT ASSY. (OPTIONALS BAC SPEC NO. 10-60091-32, -222)		1
2	10-60091-32		. LIGHT ASSY. (OPTIONAL TO BAC SPEC NO. 10-60091-101)		1
2	10-60091-222		. LIGHT ASSY. (OPTIONAL TO BAC SPEC NO. 10-60091-101)		1
3	10-60091-100		. RACK, MOUNTING. (OPTIONALS BAC SPEC NO. 10-60091-1, -31)		1
3	10-60091-1		. RACK. (OPTIONAL TO BAC SPEC NO. 10-60091-100)		1
3	10-60091-31		. RACK. (OPTIONAL TO BAC SPEC NO. 10-60091-100)		1
	NAS623-3-5		ATTACHING PARTS . SCREW		4
4	69-20061		. HOLDER ASSY, PLACARD.		1
5	69-3644-3		. BRACKET ASSY.		1
6	69-3644-4		. BRACKET ASSY.		1
	NAS514P1032-10		ATTACHING PARTS . SCREW		4
	BACS18P3B8S		. SPACER.		4
	BACS18P3C5P		. SPACER.		4
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

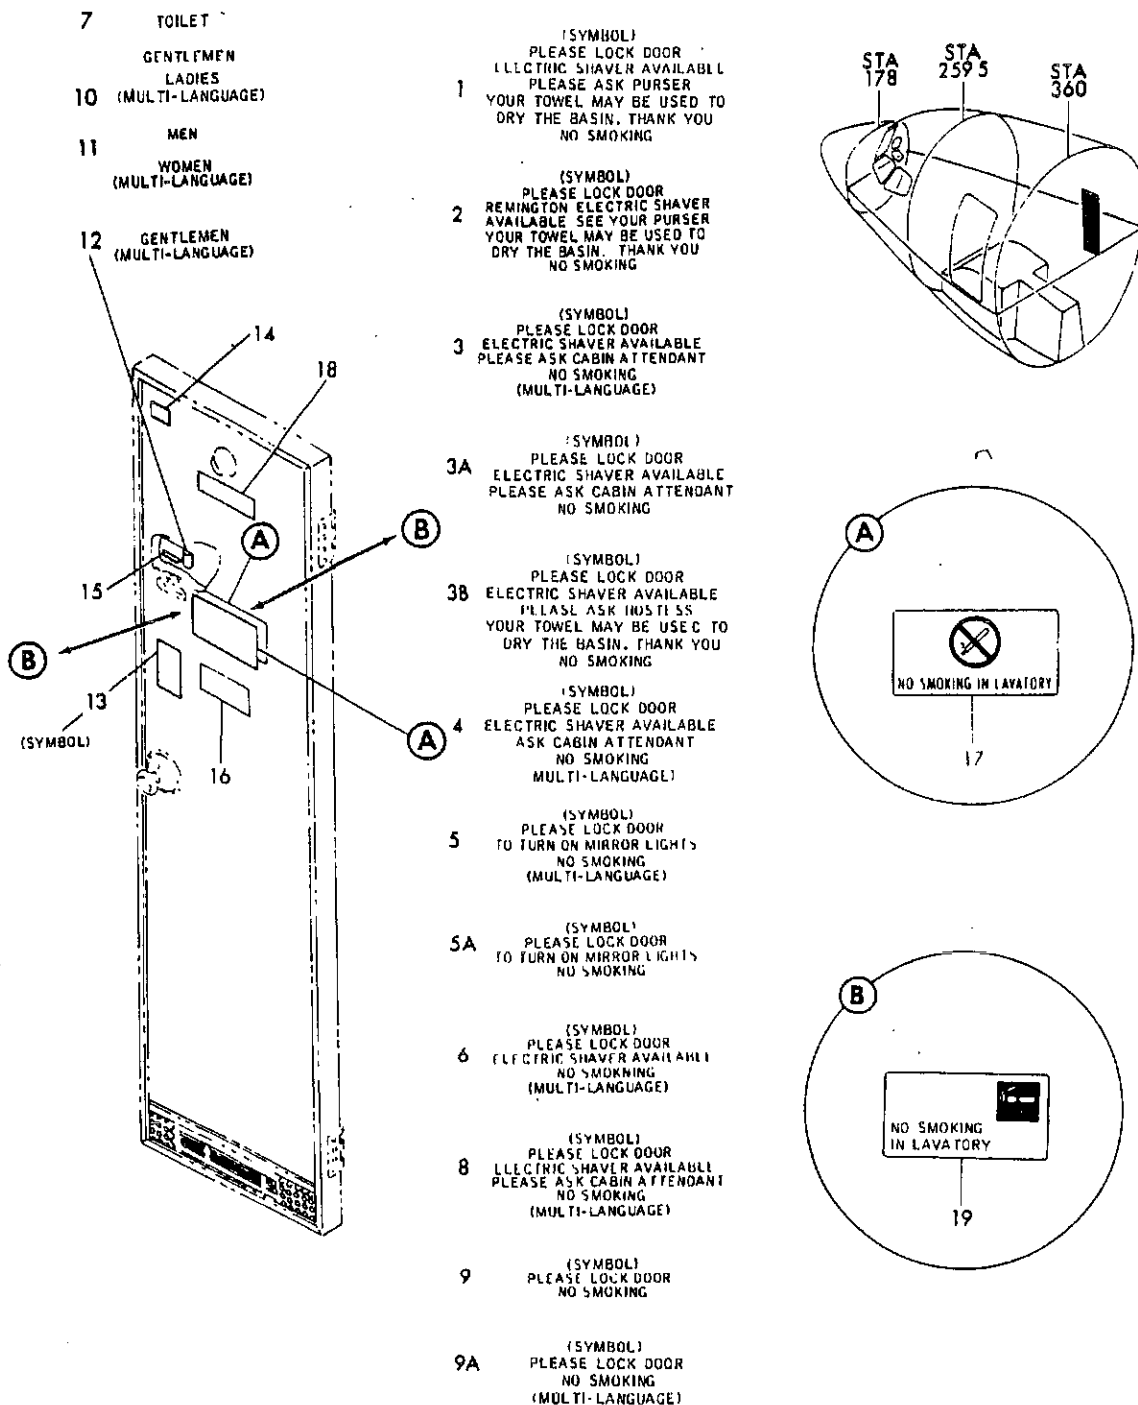 


FIGURE 23A. DOOR ASSY, TOILET B (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
23A	65-4741-408	DOOR ASSY, TOILET B (REQUIRED PLACARDS ONLY) (REWORKED BY SB 3159 AND SB 3161) (SEE 52-4, FIG. 17G, ITEM 6)	0150	RF
8	69-45560-3	. PLACARD, INSTRUCTIONS (MULTI-LANGUAGE)	0150	1
17	8AC27CPA662	. PLACARD, NO SMOKING (ADDED BY SB 3159 AND SB 3161)	0150	2
		. FOR REFERENCE TO OTHER DOOR DETAILS, SEE NHA.	0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

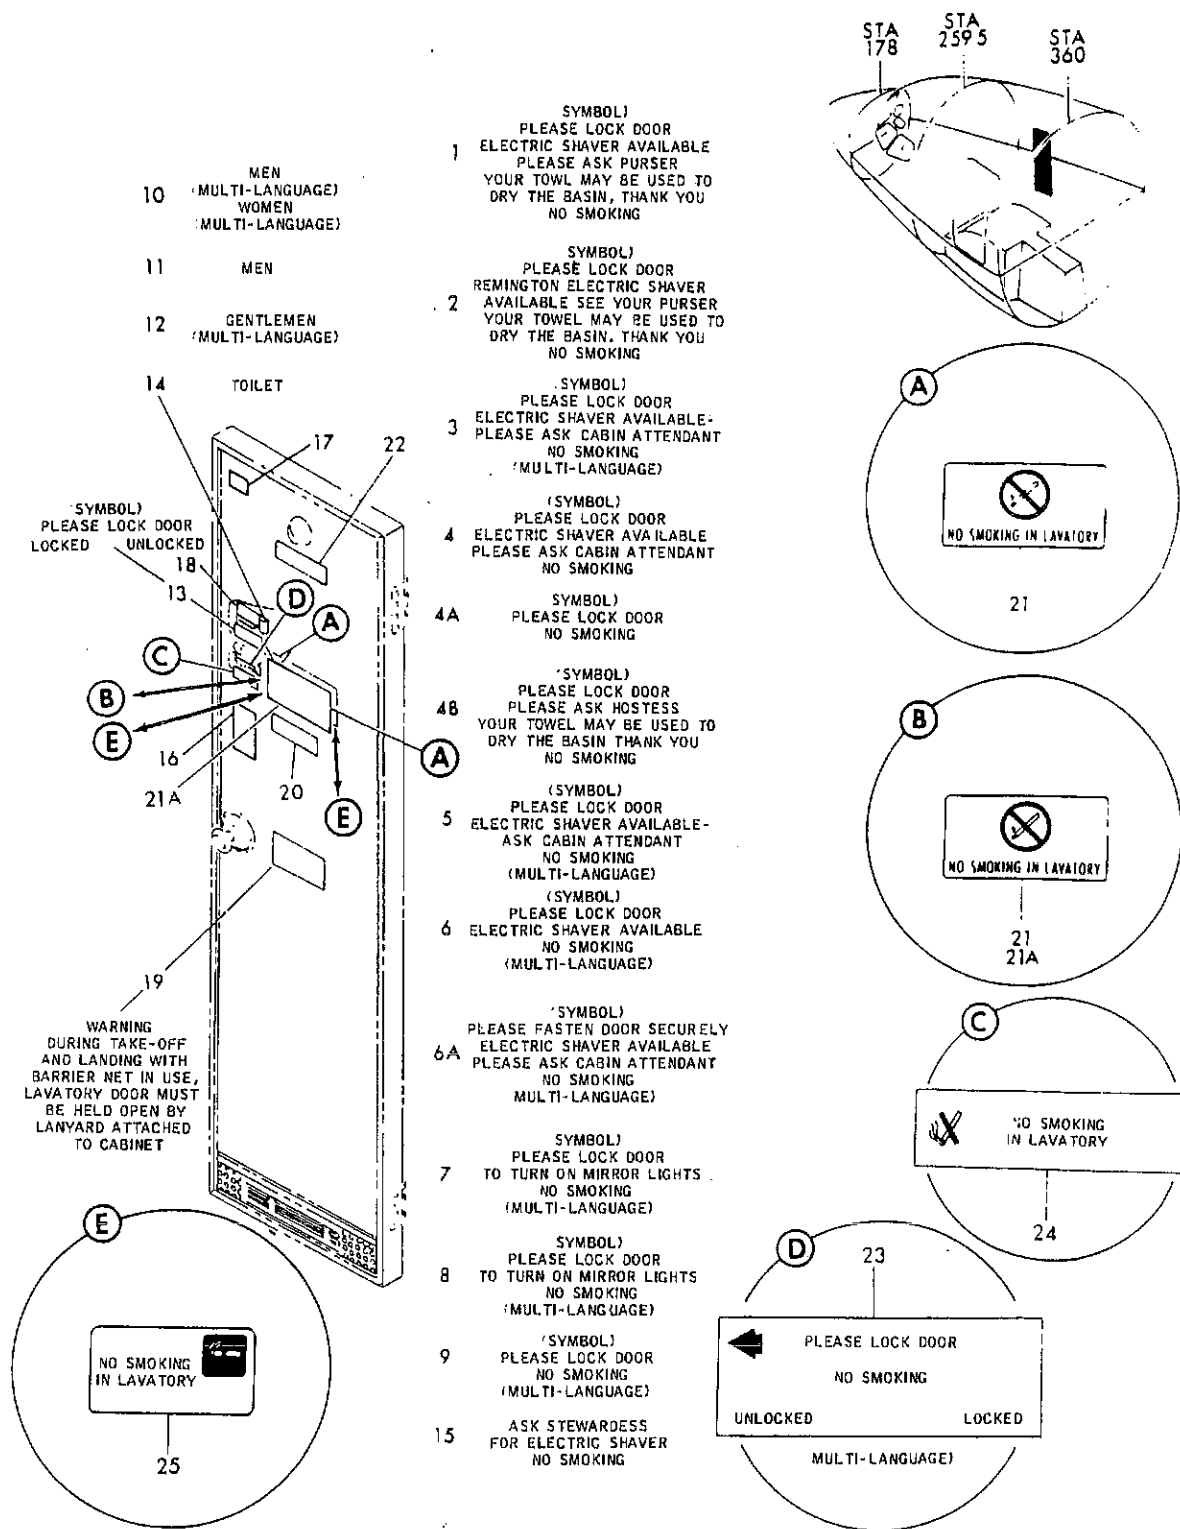 


FIGURE 23F, DOOR ASSY, TOILET A (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
23F	65-4741-408	DOOR ASSY, TOILET A (REQUIRED PLACARDS ONLY) (SEE . . .							0150	RF
		25-17, FIG. 91, ITEM 3)								
6A	69-45560-3	. PLACARD, INSTRUCTIONS (MULTI-LANGUAGE).							0150	1
14	69-45560-1	. PLACARD, TOILET							0150	1
		. FOR REFERENCE TO OTHER DOOR DETAILS, SEE NHA.							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										



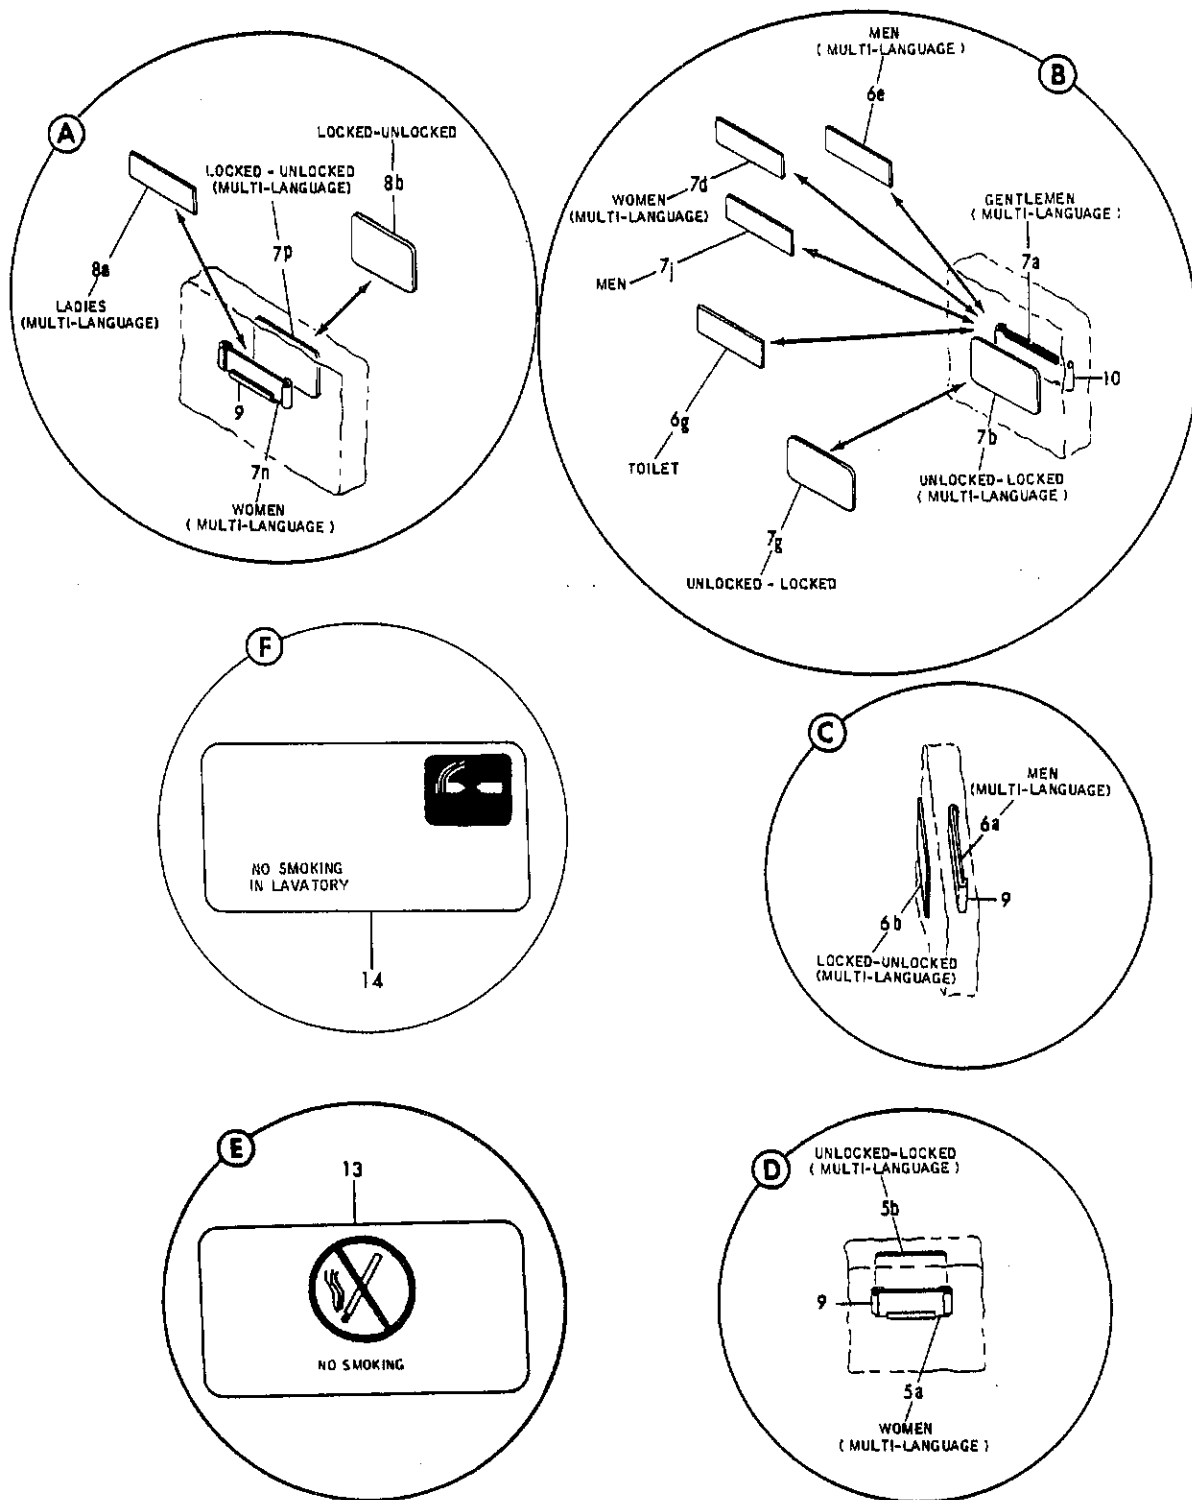 


FIGURE 24. DOOR ASSY, TOILET COMPARTMENT FOLDING (REQUIRED PLACARDS ONLY) (SHEET 2)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
			1	2	3	4	5	6	7			
R R R R R R R R	24	3	65-22029-3F	DOOR ASSY, TOILET COMPARTMENT FOLDING (TOILET E). . . . (REQUIRED PLACARDS ONLY) (SEE 52-4, FIG. 17A, ITEM 2)							0150	RF
		6F	69-45560-2	. PLACARD, PLEASE FASTEN DOOR SECURELY - NO SMOKING - SHAVER AVAILABLE INSTRUCTIONS (MULTI-LANGUAGE) (TOILET E)							0150	1
		6G	69-45560-1	. PLACARD, TOILET (TOILET E).							0150	1
		7B	66-10954	. PLACARD, UNLOCKED - LOCKED (MULTI-LANGUAGE) (TOILET E)							0150	1
		7G	66-11135	. PLACARD, UNLOCKED - LOCKED (TOILET E)							0150	1
		13	BAC27CPA66Z	. PLACARD, NO SMOKING (TOILET E) (ADDED BY SB 3159) . . . FOR REFERENCE TO OTHER DOOR DETAILS, SEE NHA. . . .							0150	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE												

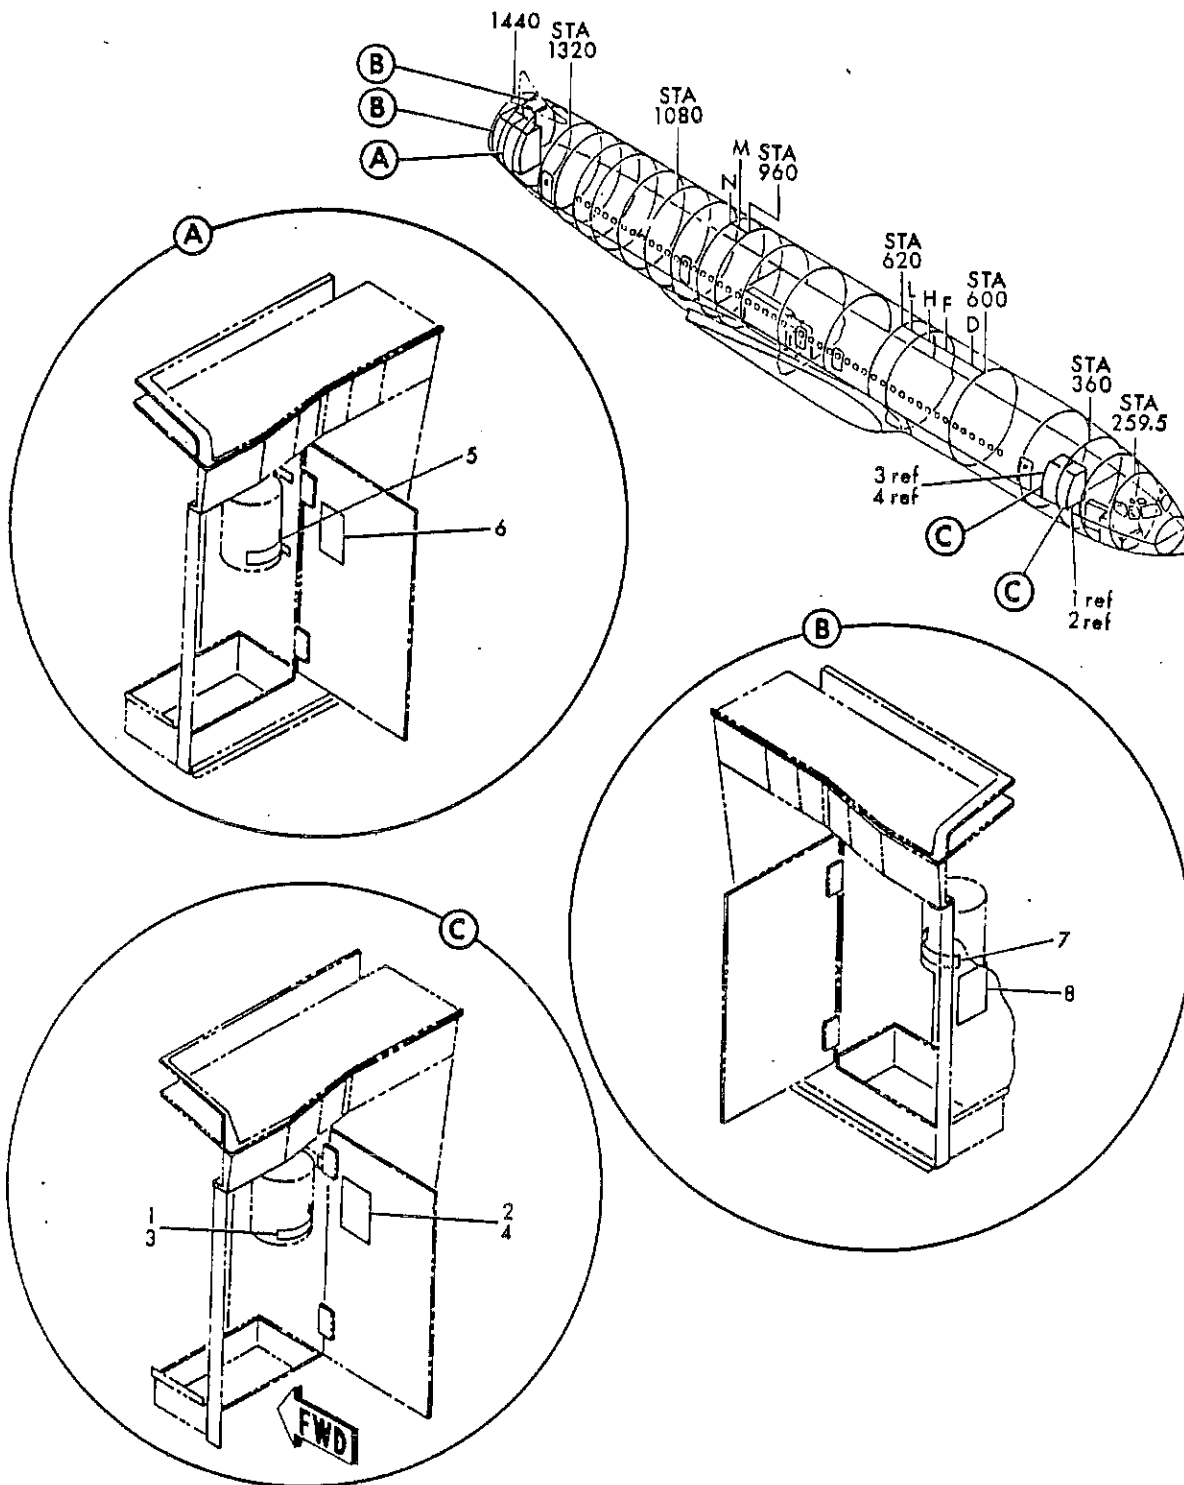 


FIGURE 25F. PLACARD INSTL, LAVATORY WATER HEATER RESET

11-01-25F

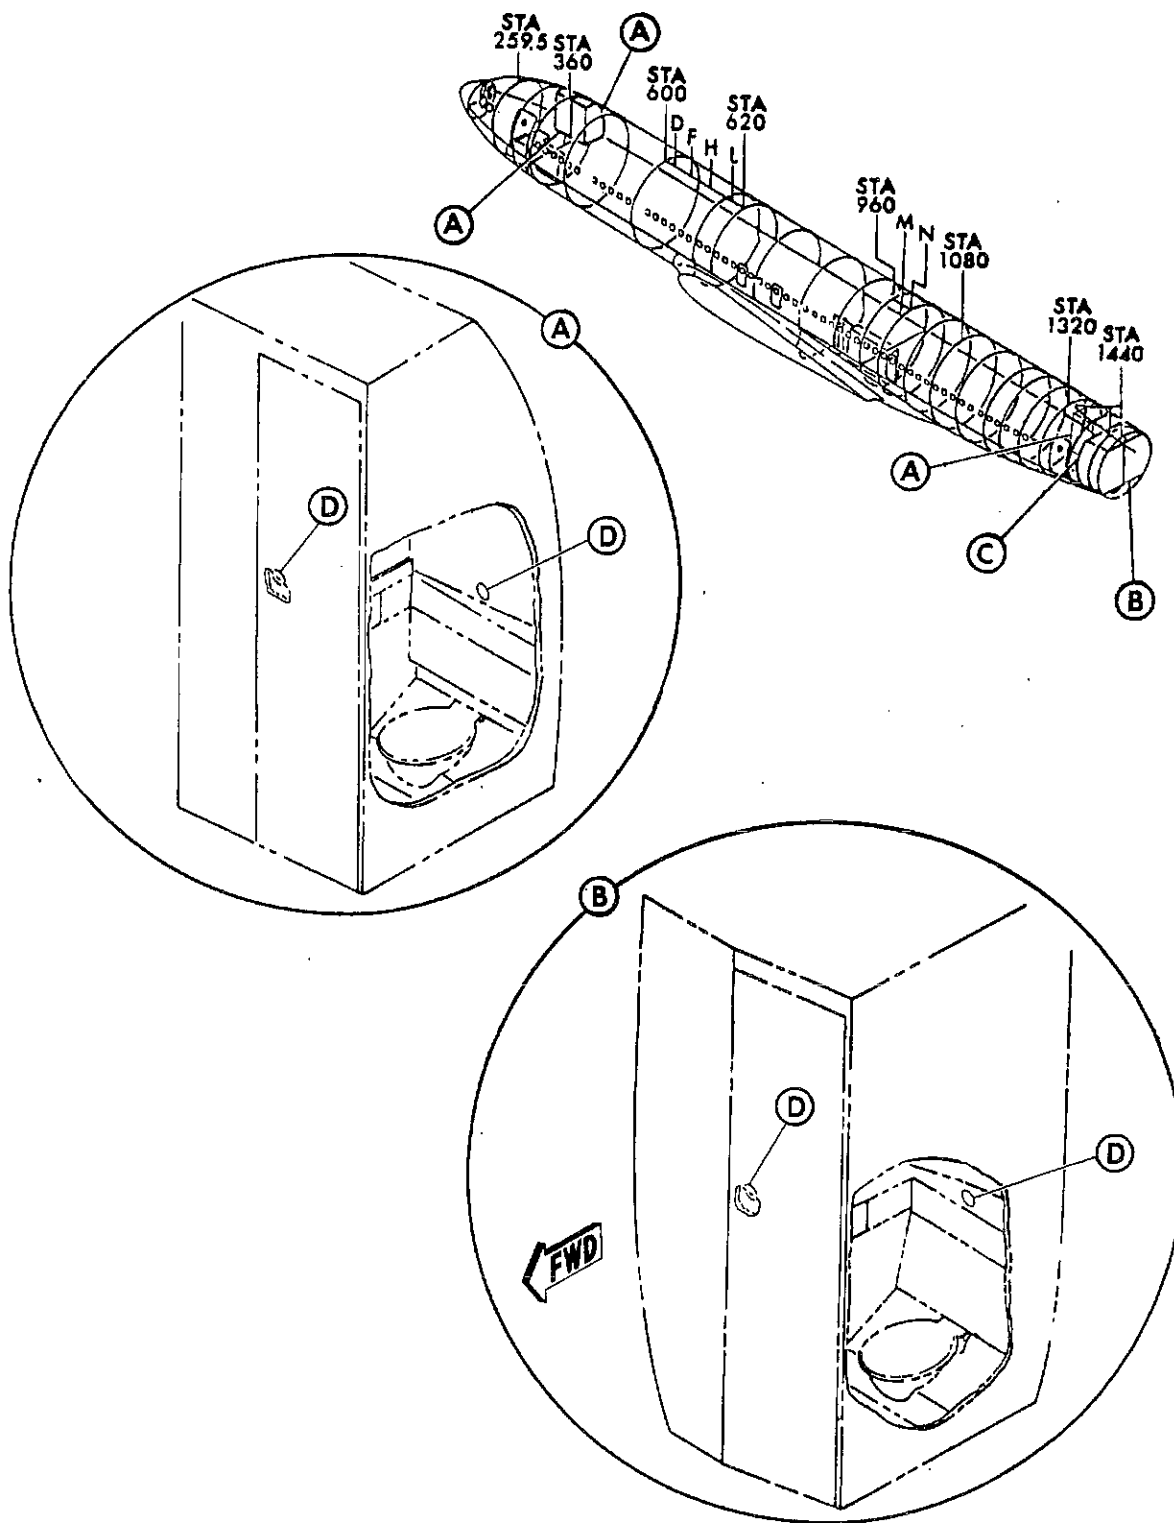 


FIGURE 25G. PLACARD INSTL, TOILET SYSTEM CAUTIONARY SYMBOLIC (LAVATORY A, B, C, D, AND E) (SHEET 1)

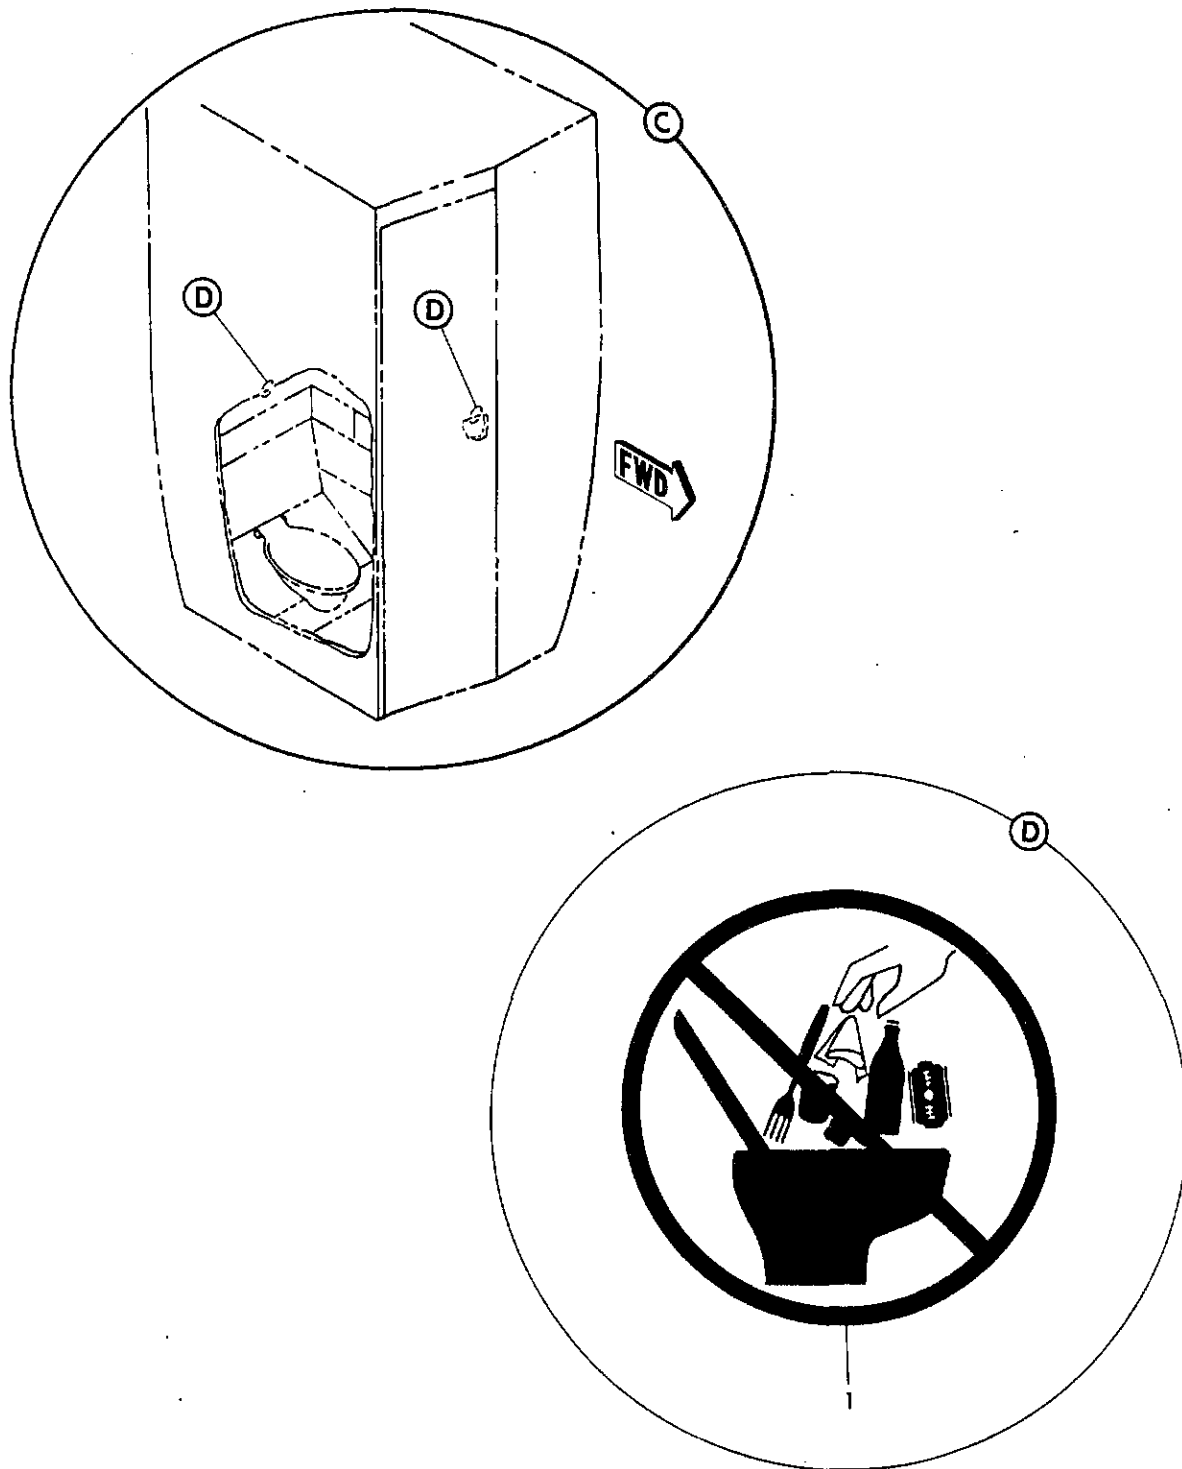 


FIGURE 25G. PLACARD INSTL, TOILET SYSTEM CAUTIONARY SYMBOLIC (LAVATORY A, B, C, D, AND E) (SHEET 2)

707

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
25G	82458	PLACARD INSTL, TOILET SYSTEM CAUTIONARY SYMBOLIC. . . .							5199	1
		(LAV A, B, C, D AND E) (V0563B) (ADDED BY SVA								
		E.O. 82458)								
1	82458-1	. PLACARD, SYMBOLIC (V0563B).							5199	10
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

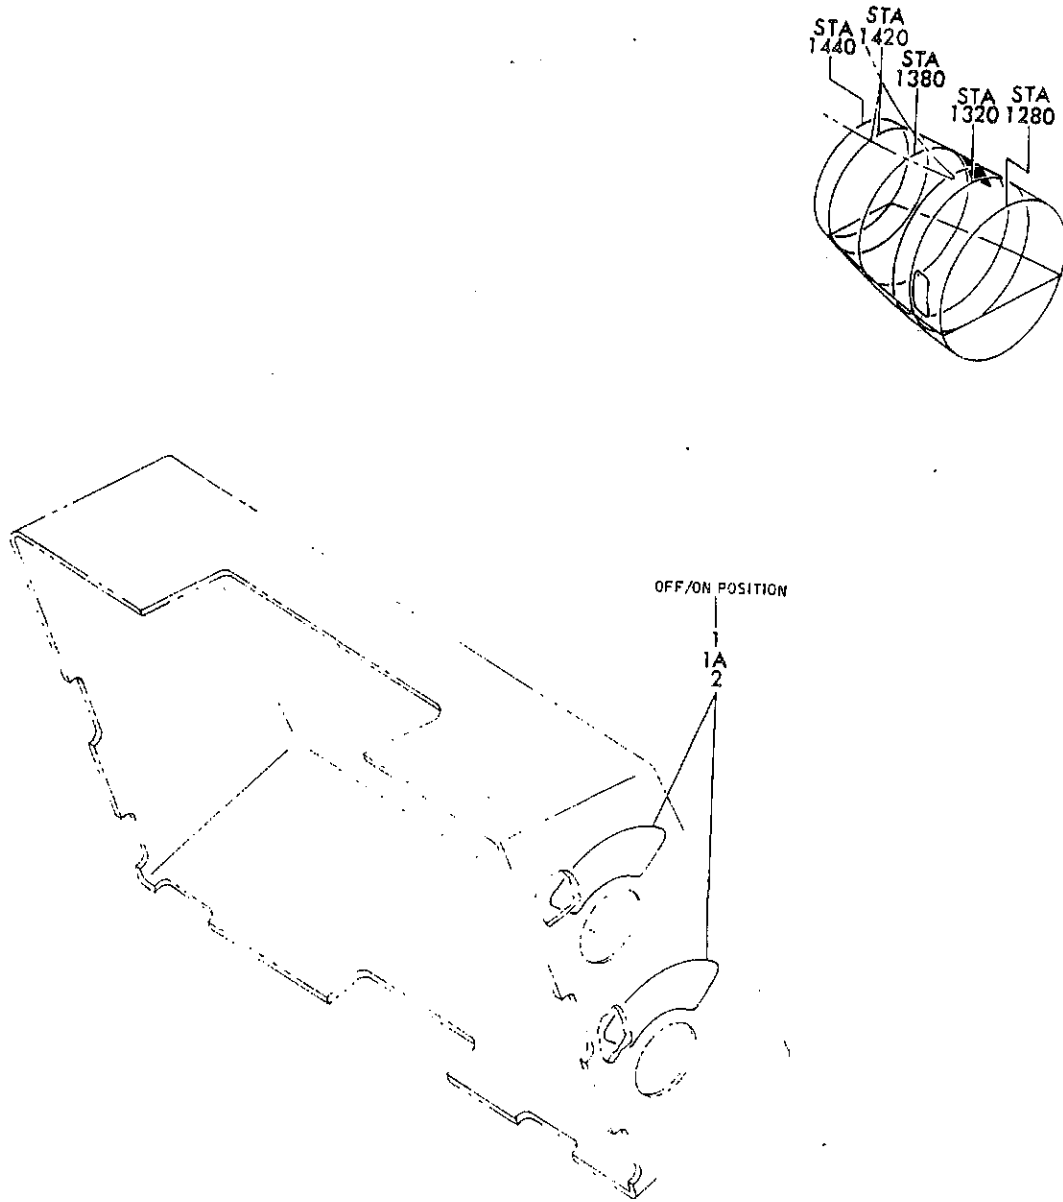 


FIGURE 26T. MASK AND CONTAINER ASSY, AFT ATTENDANTS OXYGEN (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
26T 1	65-31928-2	MASK AND CONTAINER ASSY, AFT ATTENDANTS OXYGEN. (REQUIRED PLACARDS ONLY) (SEE 35-2, FIG. 14, ITEM 26)	5199	RF
26T 2	BACM9P21-4A	. SCOTCH-CAL, OFF/ON POSITION FOR REFERENCE TO OTHER MASK AND CONTAINER DETAILS,. . . SEE NHA	5199 5199	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

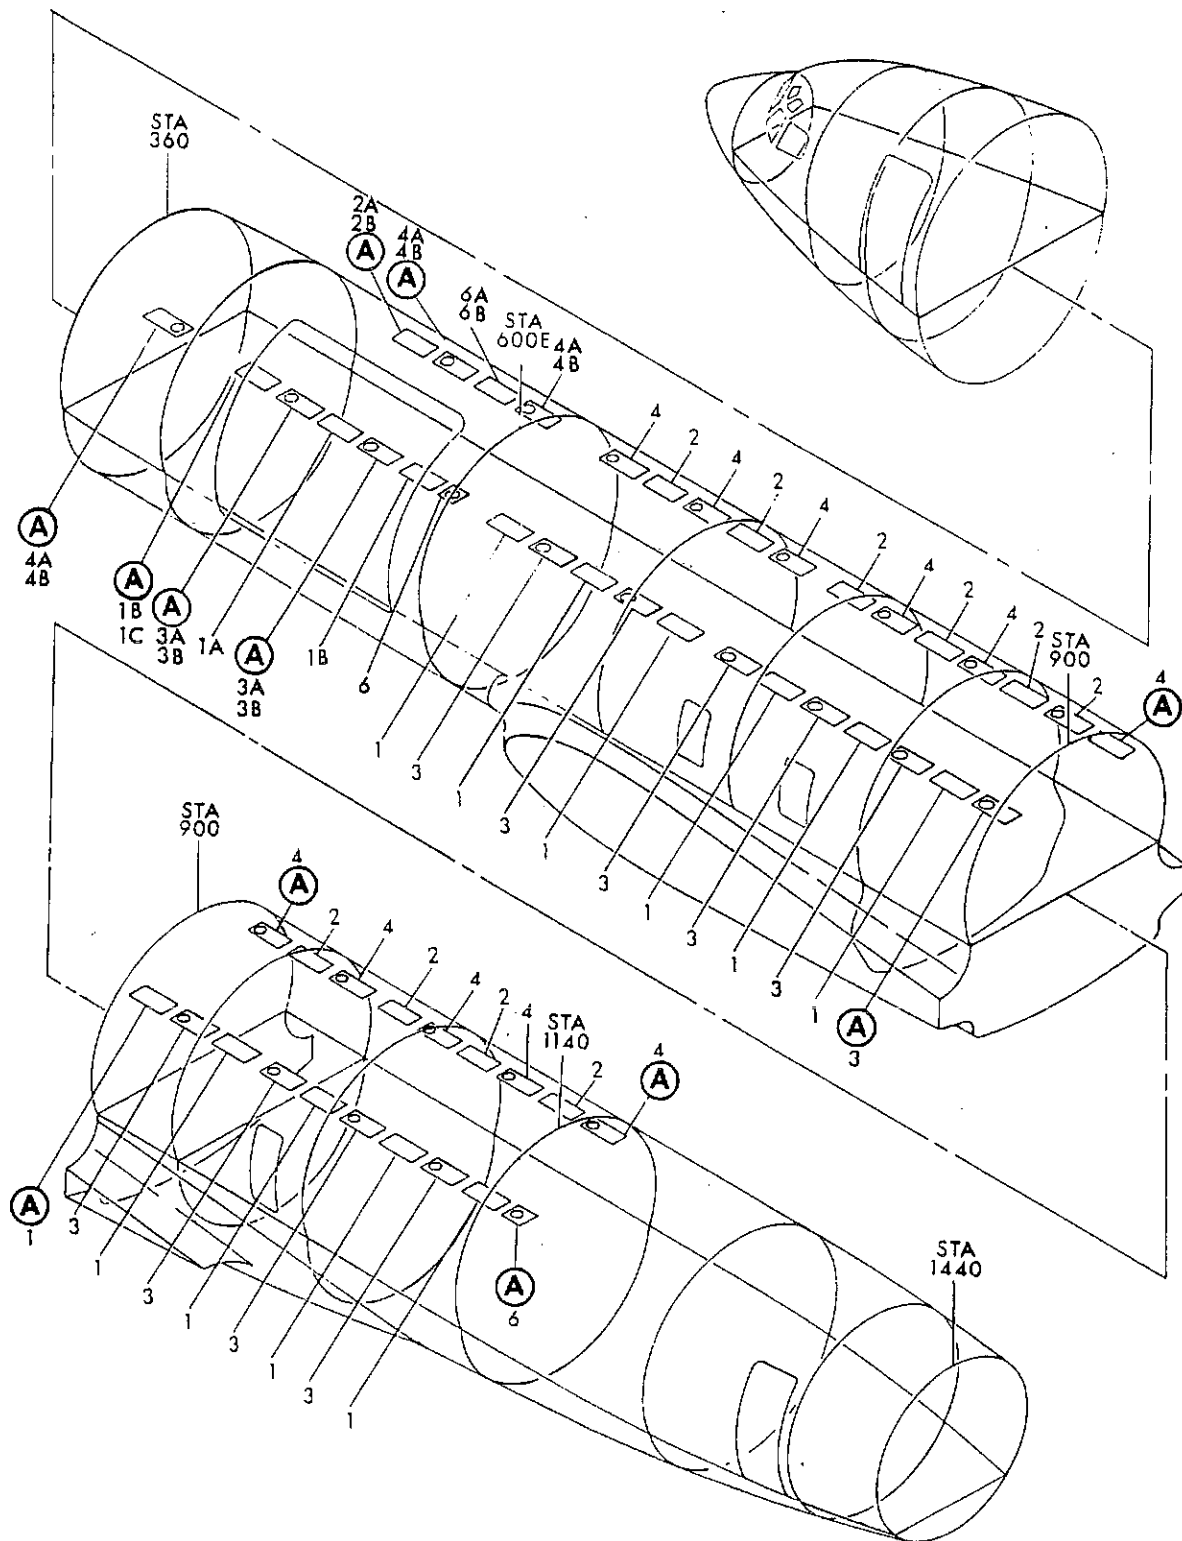 


FIGURE 45B. SERVICE UNIT INSTL, PASSENGER (REQUIRED PLACARDS ONLY) (SHEET 1)

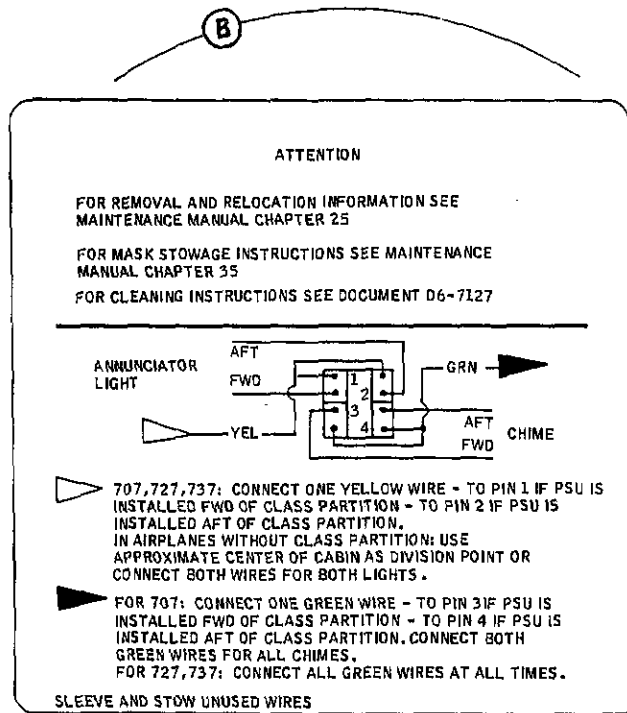 
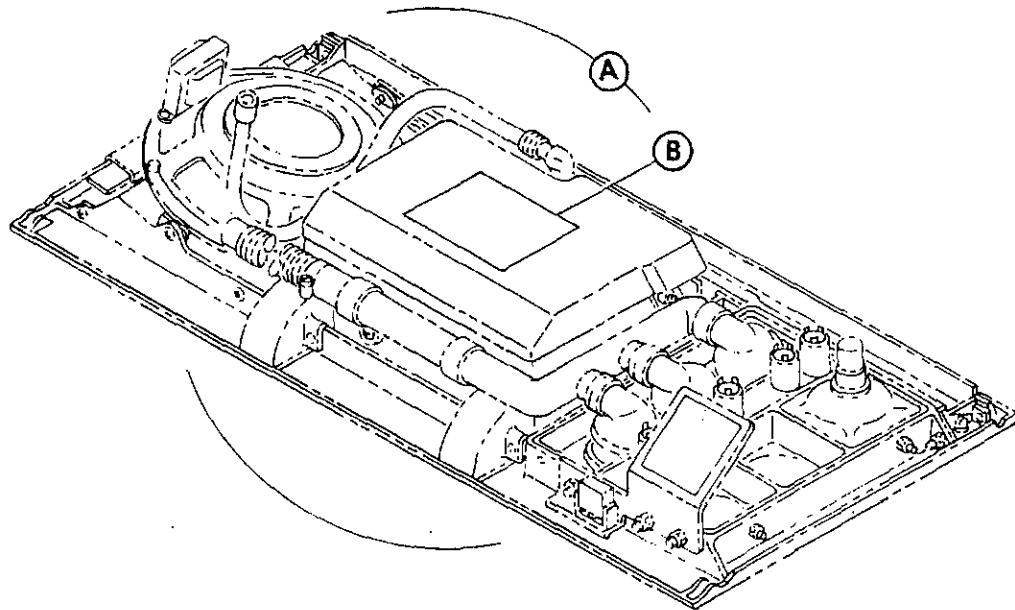 


FIGURE 45B. SERVICE UNIT INSTL, PASSENGER (REQUIRED PLACARDS ONLY) (SHEET 2)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
45B	65-86409-42	SERVICE UNIT INSTL, PASSENGER (REQUIRED PLACARDS ONLY) (SEE 25-1, FIG. 174C, ITEM 3)							5151	RF
	65-86409-43	SERVICE UNIT INSTL, PASSENGER (REQUIRED PLACARDS ONLY) (SEE 25-1, FIG. 174C, ITEM 3)							5299	RF
1	65-79164-129AV	. SERVICE UNIT ASSY, (REQUIRED PLACARDS ONLY)							5199	RF
1A	65-79164-129AV	. SERVICE UNIT ASSY, (REQUIRED PLACARDS ONLY)							5199	RF
1B	65-79164-129AV	. SERVICE UNIT ASSY, (REQUIRED PLACARDS ONLY)							5199	RF
2	65-79164-130AV	. SERVICE UNIT ASSY, (REQUIRED PLACARDS ONLY)							5199	RF
2A	65-79164-130AV	. SERVICE UNIT ASSY, (REQUIRED PLACARDS ONLY)							5199	RF
3	65-79164-131AV	. SERVICE UNIT ASSY, (REQUIRED PLACARDS ONLY)							5199	RF
3A	65-79164-131AV	. SERVICE UNIT ASSY, (REQUIRED PLACARDS ONLY)							5199	RF
4	65-79164-132AV	. SERVICE UNIT ASSY, (REQUIRED PLACARDS ONLY)							5199	RF
4A	65-79164-132AV	. SERVICE UNIT ASSY, (REQUIRED PLACARDS ONLY)							5199	RF
5	BAC27DPA465	. . PLACARD, INSTRUCTIONS							5199	1
6	65-86413-77G	. SERVICE UNIT ASSY, (REQUIRED PLACARDS ONLY)							5199	RF
7	BAC27DPA465	. . PLACARD, INSTRUCTIONS							5199	1
8	BAC27DPA465	. . PLACARD, INSTRUCTIONS							5199	1
		. FOR REFERENCE TO OTHER SERVICE UNIT DETAILS, SEE NHA							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

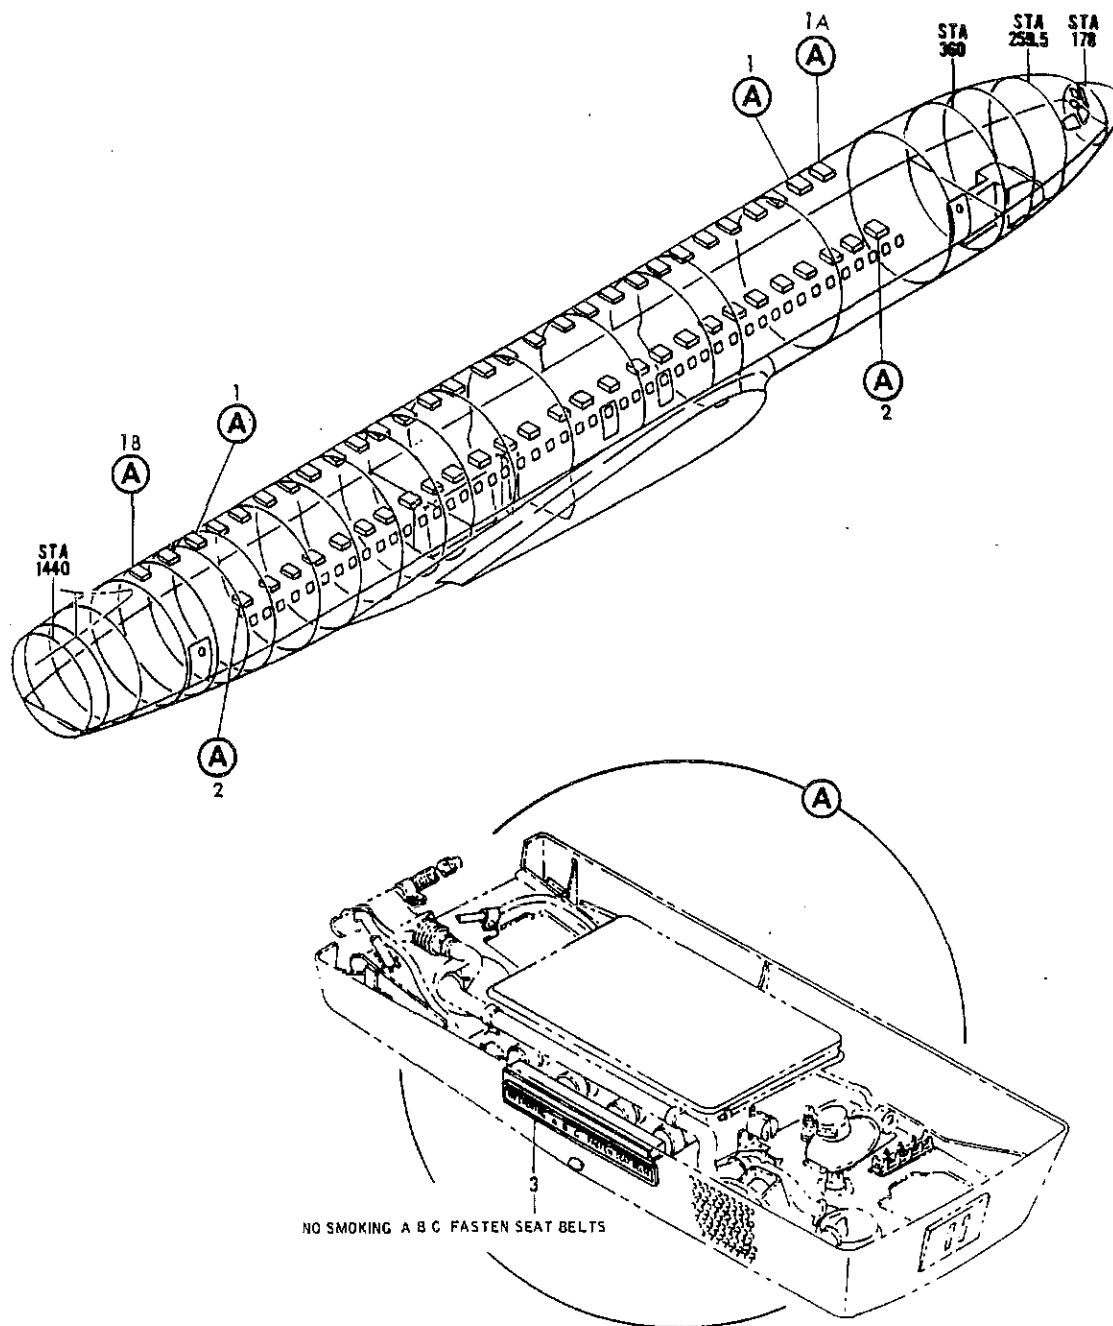 


FIGURE 48Z. SERVICE UNIT INSTALLATION

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF	UNITS
				FROM TO	PER ASSY
R R R R R R R R	48Z	65-42148-110	SERVICE UNIT INSTL, PASSENGER (REQUIRED PLACARDS ONLY) (SEE 25-1, FIG. 127, ITEM 46)	0150	RF
	1	65-42148-169	. SERVICE UNIT ASSY, FINAL (LH) (REQUIRED PLACARDS. . . ONLY)	0150	RF
	1A	65-42148-169	. SERVICE UNIT ASSY, FINAL (LH) (REQUIRED PLACARDS. . . ONLY)	0150	RF
	2	65-42148-32	. SERVICE UNIT ASSY, FINAL (RH) (REQUIRED PLACARDS. . . ONLY)	0150	RF
	3	10-60277-7	. . SIGN, NO SMOKING FASTEN SEAT BELT ILLUMINATED (LH . ONLY)	0150	1
	3	10-60277-8	. . SIGN, NO SMOKING FASTEN SEAT BELT ILLUMINATED (RH . ONLY)	0150	1
			. FOR REFERENCE TO OTHER SERVICE UNIT DETAILS, SEE NHA	0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

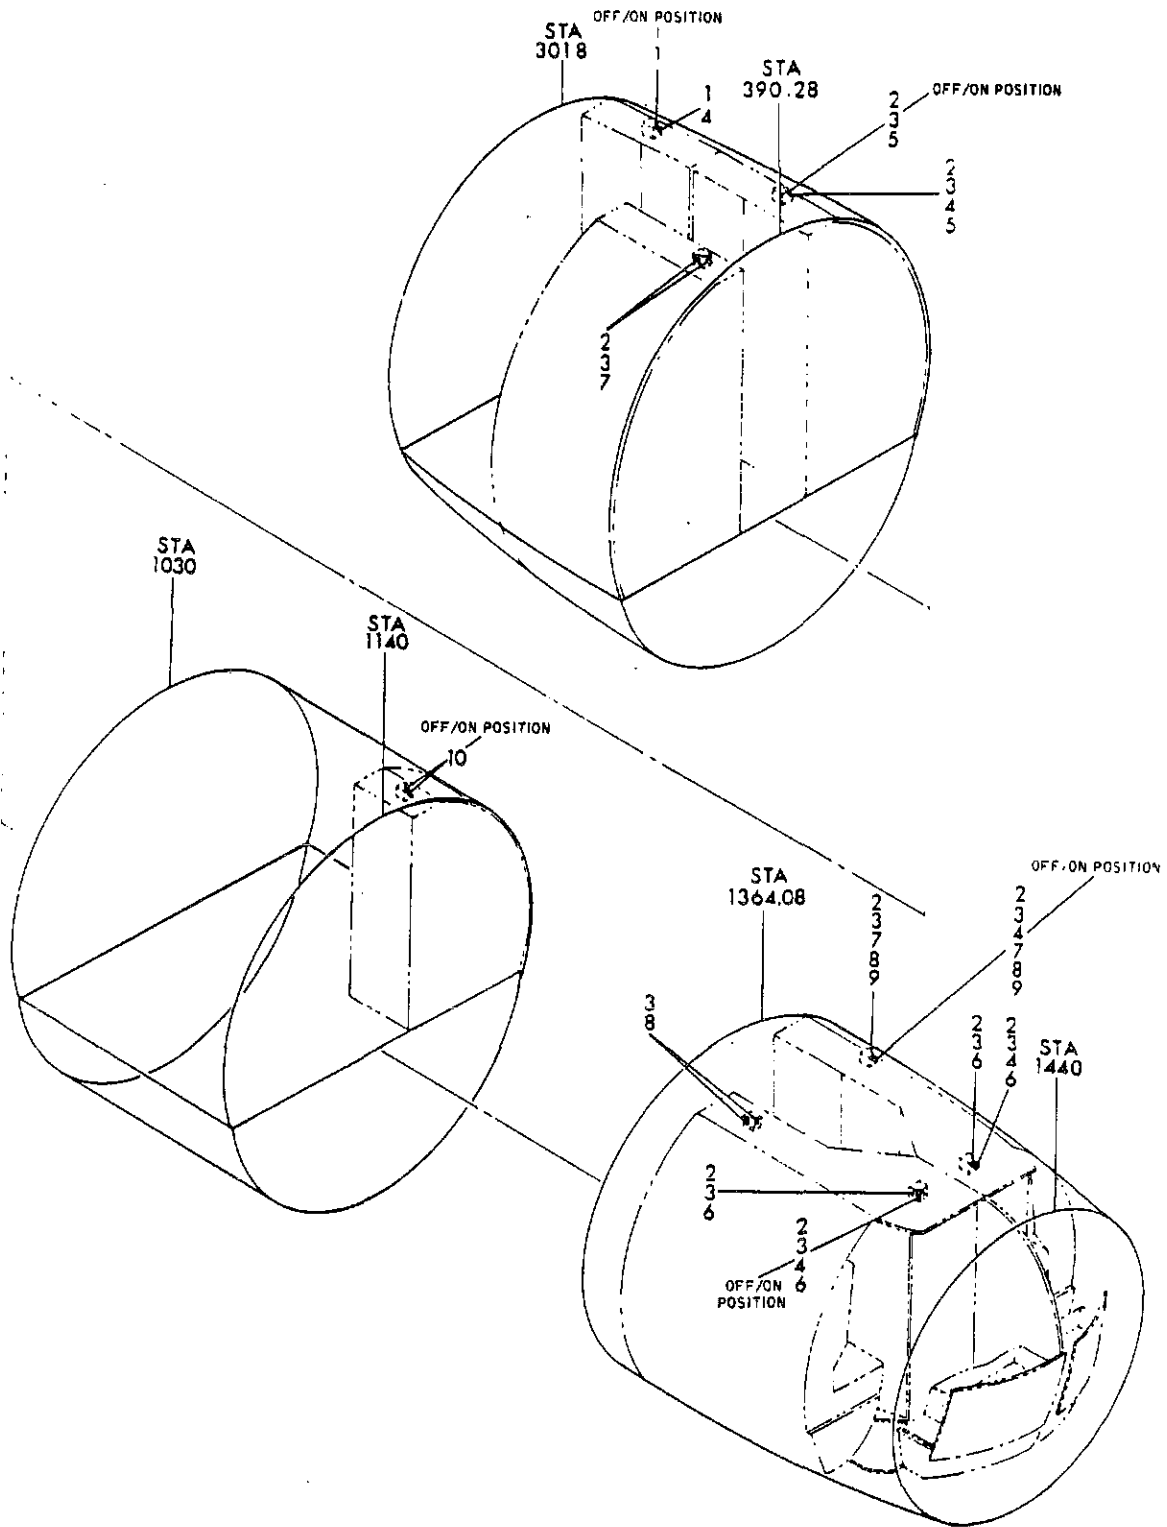 


FIGURE 49X. CHASSIS ASSY, SERVICE UNIT (REQUIRED PLACARDS ONLY)

DETAILED PARTS LIST
11-01-49X
PAGE 0

11-01-49X

NOV 21/90

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

R R R R	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	49X	65-14515-4		CHASSIS ASSY, SERVICE UNIT (REQUIRED PLACARDS ONLY) . .	0150	RF
		65-14515-5		(SEE 25-21, FIG. 10, ITEM 27)		
				CHASSIS ASSY, SERVICE UNIT (REQUIRED PLACARDS ONLY) . .	5199	RF
				(SEE 25-21, FIG. 10, ITEM 27)		
	6	BACM9P21-4A		. SCOTCH-CAL, OFF/ON POSITION		2
				. FOR REFERENCE TO OTHER CHASSIS DETAILS, SEE NHA . . .		
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

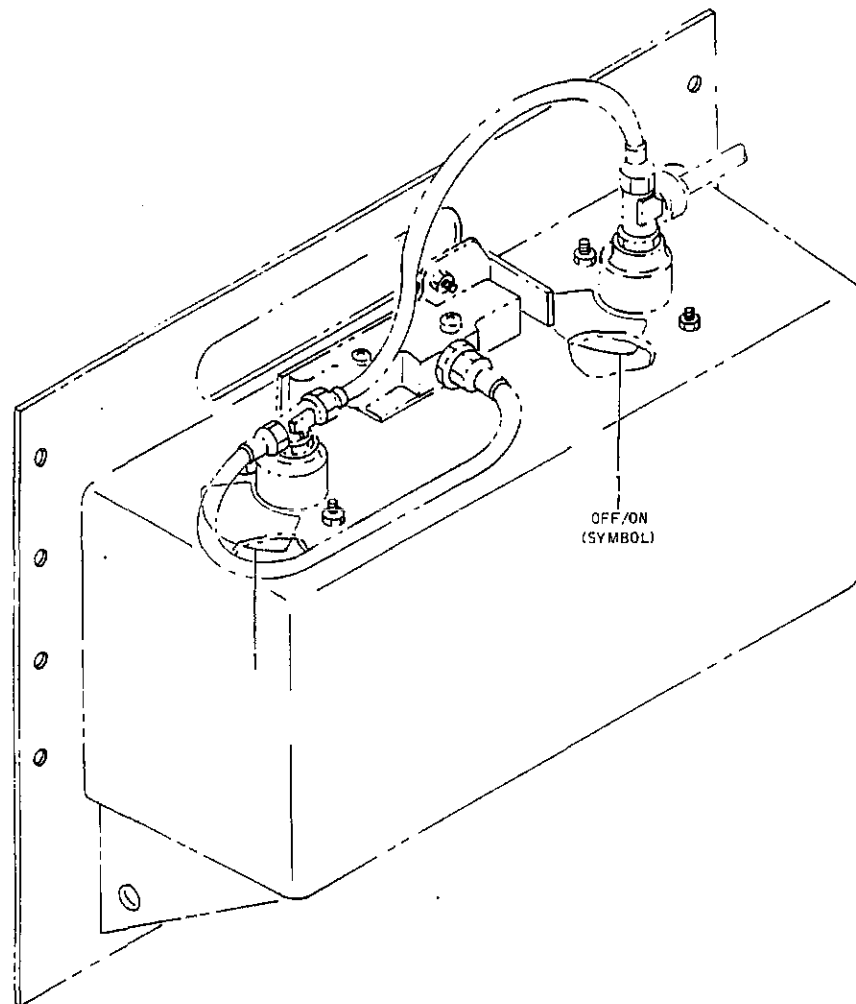 
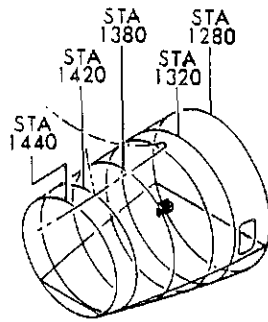 


FIGURE 49Y. CHASSIS ASSY, SERVICE UNIT (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R	49Y	65-32237-2C	CHASSIS ASSY, AFT TOILET E PASSENGER SERVICE UNIT . . . (REQUIRED PLACARDS ONLY) (SEE 25-21, FIG. 6, ITEM 1)							0150	RF
		65-32237-4M	CHASSIS ASSY, AFT TOILET E PASSENGER SERVICE UNIT . . . (REQUIRED PLACARDS ONLY) (SEE 25-21, FIG. 6, ITEM 1)							5199	RF
	1	BACM9P21-4A	. SCOTCH-CAL, OFF/DN POSITIONS. FOR REFERENCE TO OTHER CHASSIS DETAILS, SEE NHA . . .								2
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

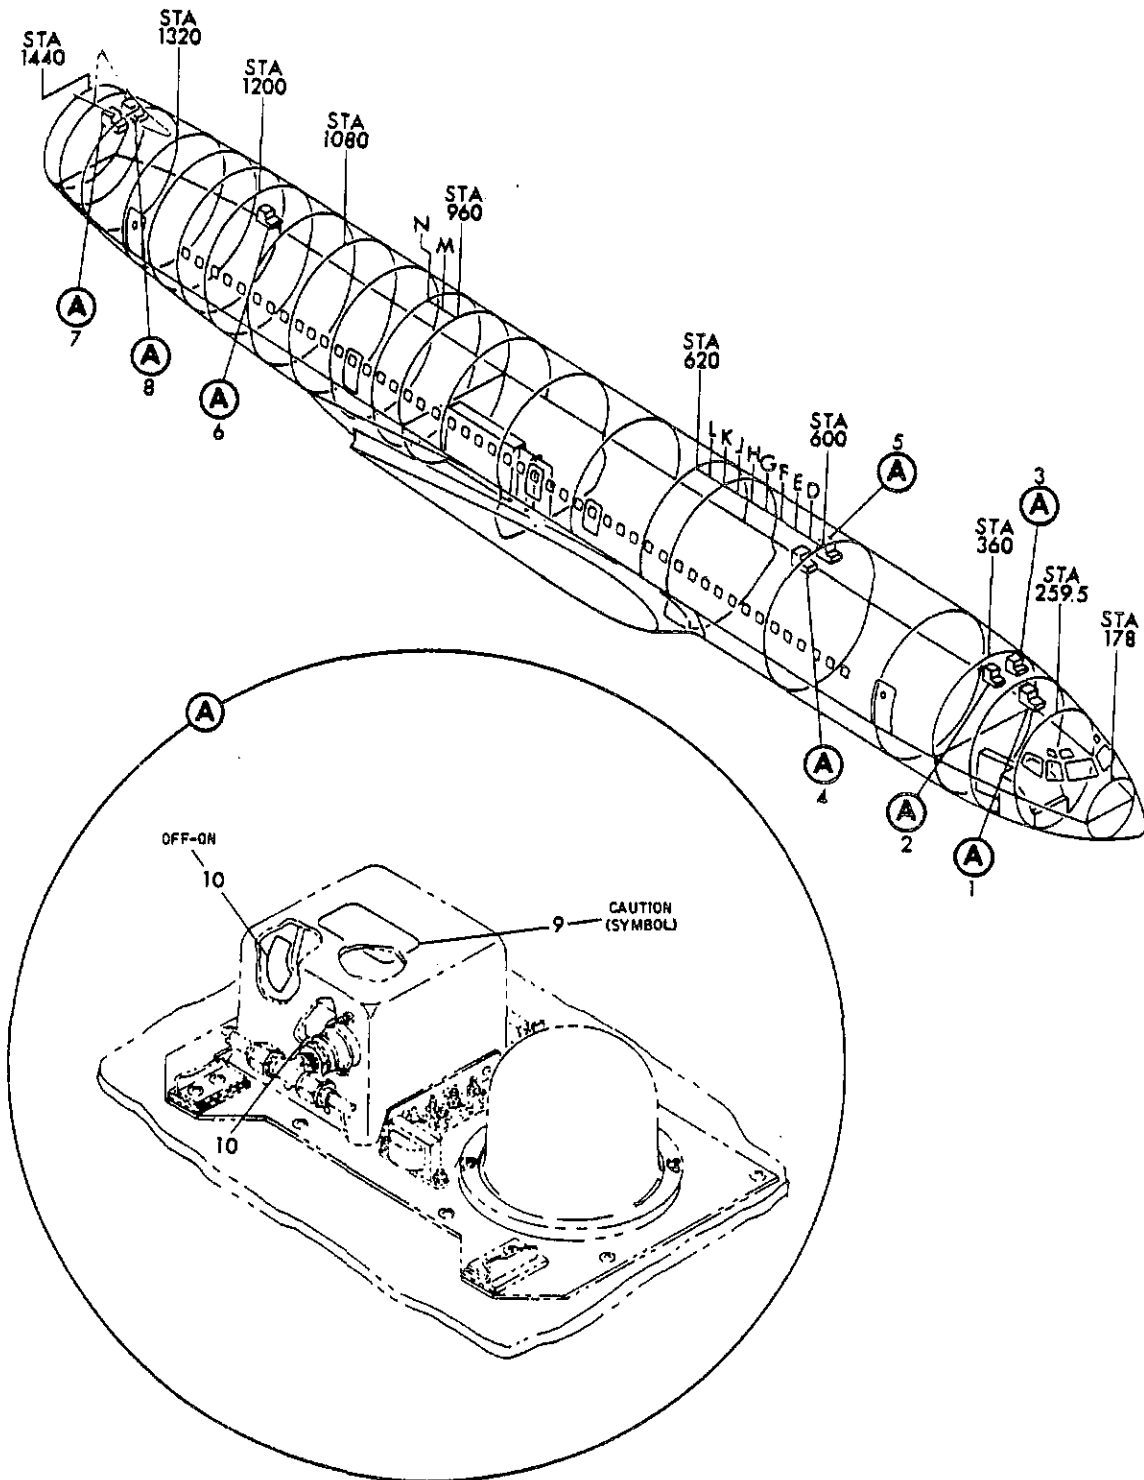 


FIGURE 49Z. CHASSIS ASSY, PASSENGER TOILET SERVICE UNIT (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
49Z 1	65-24128-3	CHASSIS ASSY, PASSENGER TOILET SERVICE UNIT (TOILET A) (REQUIRED PLACARDS ONLY) (SEE 25-21, FIG. 11, ITEM 27)	0103	RF
R 1	65-24128-6	CHASSIS ASSY, PASSENGER TOILET SERVICE UNIT (TOILET A) (REQUIRED PLACARDS ONLY) (SEE 25-21, FIG. 11, ITEM 27)	0450	RF
R 1	65-24128-11	CHASSIS ASSY, PASSENGER TOILET SERVICE UNIT (TOILET A) (REQUIRED PLACARDS ONLY) (SEE 25-21, FIG. 11, ITEM 27)	5199	RF
R 2	65-24128-2	CHASSIS ASSY, PASSENGER TOILET SERVICE UNIT (TOILET B) (REQUIRED PLACARDS ONLY) (SEE 25-21, FIG. 11, ITEM 27)	0150	RF
R 2	65-24128-8	CHASSIS ASSY, PASSENGER TOILET SERVICE UNIT (TOILET B) (REQUIRED PLACARDS ONLY) (SEE 25-21, FIG. 11, ITEM 27)	5199	RF
R 9	BAC27CPA52	. PLACARD, CAUTION (USED ON 65-24128-6 AND -11)	0499	1
R 10	BACM9P21-4A	. SCOTCH-CAL, OFF/ON POSITION		2
		. FOR REFERENCE TO OTHER CHASSIS DETAILS, SEE NHA		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)




STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
51G		PARTITION ASSY, CARGO-PASSENGER MOVABLE (REQUIRED . . . PLACARDS ONLY)	0150	
	65-44409-106A	. PARTITION ASSY, CARGO-PASSENGER MOVABLE LH (REQUIRED PLACARDS ONLY) (SEE 25-17, FIG. 130C, ITEM 3)	0150	RF
2	65-7264-12	. . PLACARD, LIFE VEST UNDER SEAT	0150	1
2E	65-7264-15	. . PLACARD, EXTINGUISHER	0150	1
		. . FOR REFERENCE TO OTHER PARTITION DETAILS, SEE NHA .	0150	
	65-44409-88A	. PARTITION ASSY, CARGO-PASSENGER MOVABLE RH (REQUIRED PLACARDS ONLY) (SEE 25-17, FIG. 130C, ITEM 43)	0150	RF
5	65-7264-12	. . PLACARD, LIFE VEST UNDER SEAT	0150	1
		. . FOR REFERENCE TO OTHER PARTITION DETAILS, SEE NHA .	0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

707

 STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

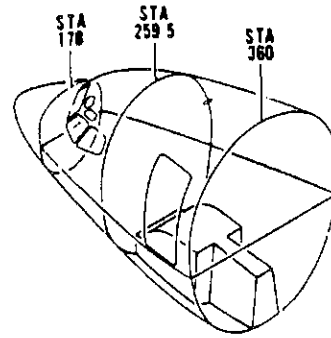

NO SMOKING-FASTEN SEAT BELT

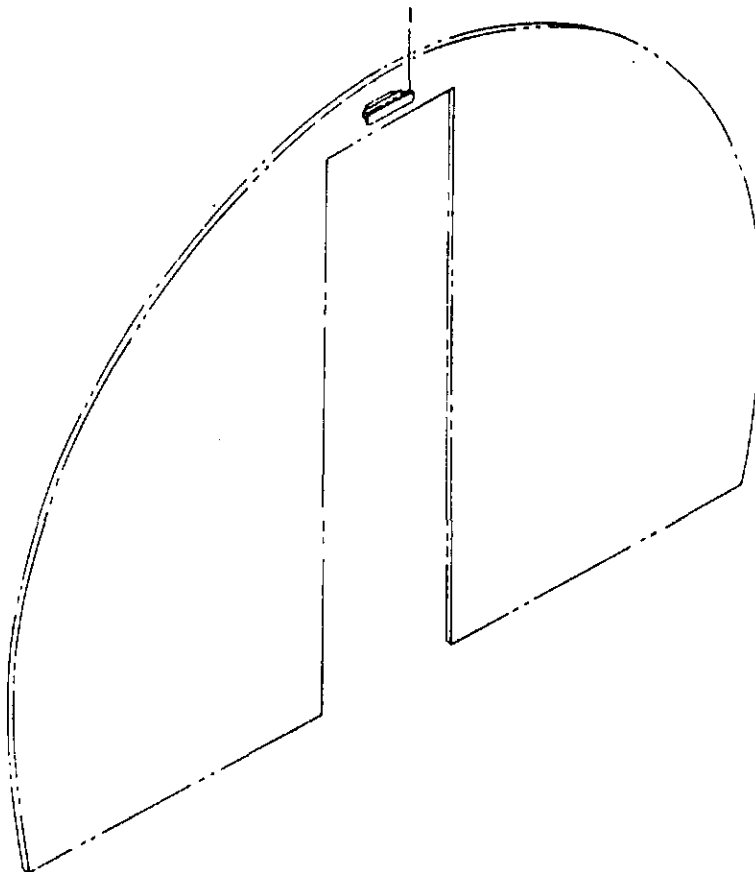 


FIGURE 56. SIGN INSTL, FASTEN SEAT BELT NO SMOKING

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
56	69-25498-1	SIGN INSTL, FASTEN SEAT BELT NO SMOKING (SEE NUMERICAL INDEX FOR APPLICABLE NHA)								RF
1	10-60217-10	. SIGN ASSY, NO SMOKING FASTEN SEAT BELT.							0150	1
1	10-60217-3	. SIGN ASSY, NO SMOKING FASTEN SEAT BELT.							5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

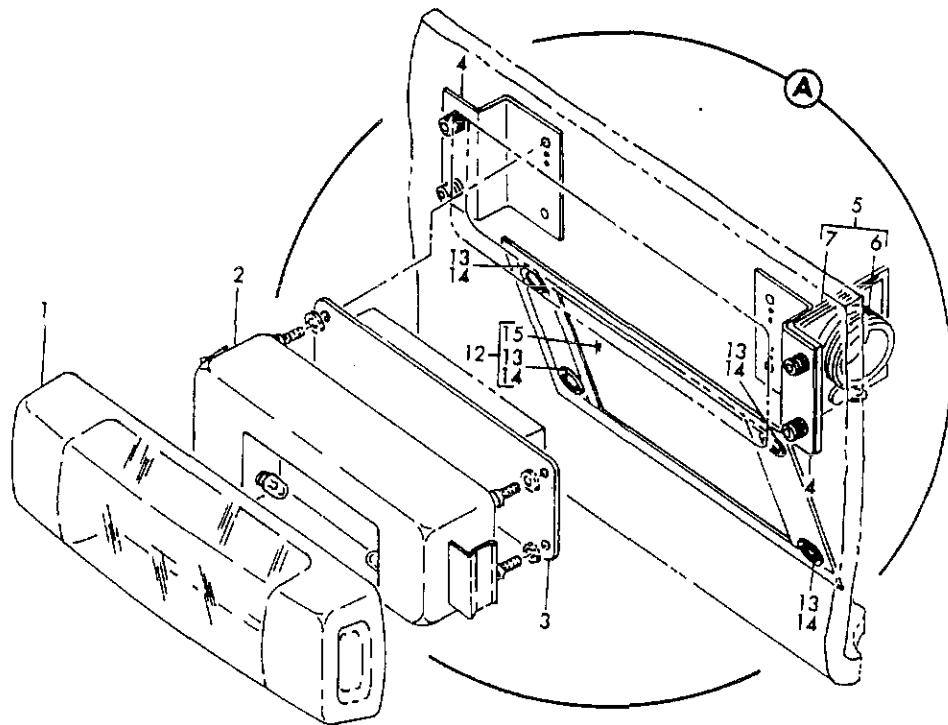 
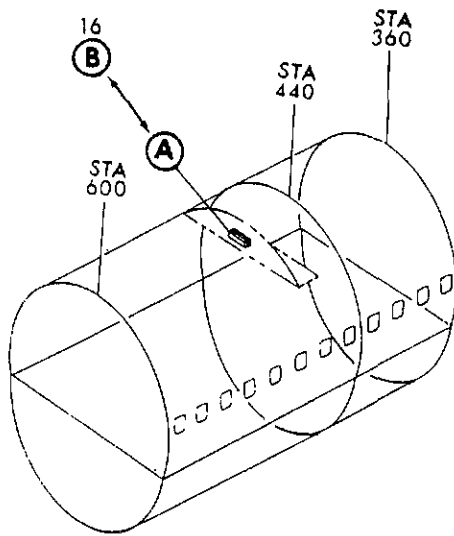 


FIGURE 57. PANEL ASSY, STATION 494 END (REQUIRED PLACARDS ONLY) (SHEET 1)

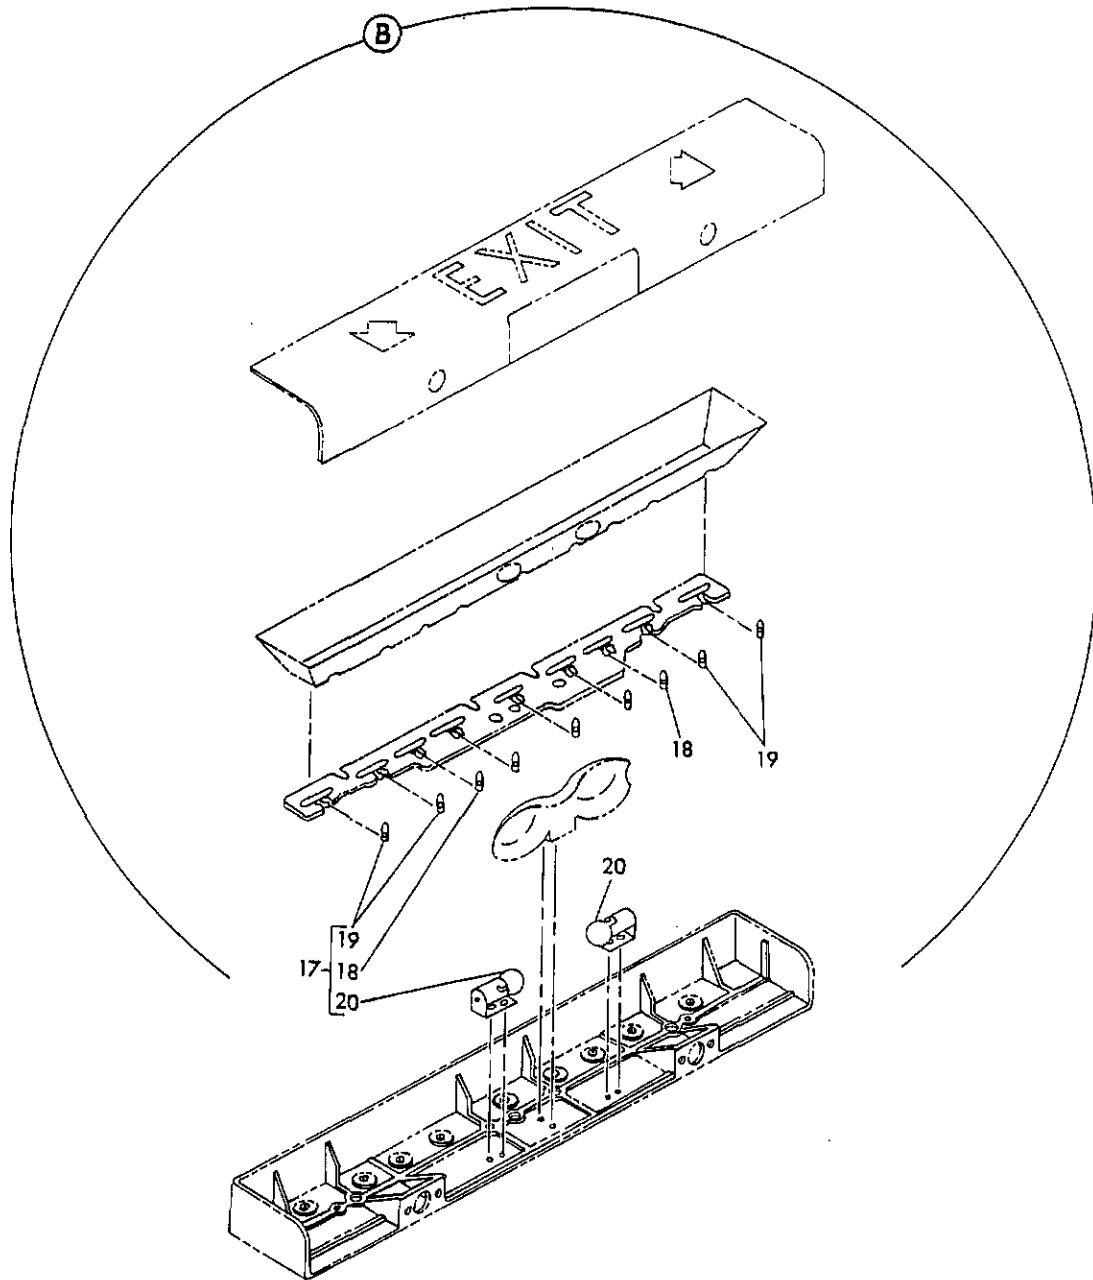 


FIGURE 57. PANEL ASSY, STATION 494 END (REQUIRED PLACARDS ONLY) (SHEET 2)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
57	65-31934-48A	PANEL ASSY, STATION 494 END (REQUIRED PLACARDS ONLY). (SEE 25-1, FIG. 127, ITEM 9)							0150	RF
1	10-60091-41	. COVER ASSY, EMERGENCY EXIT LIGHT.							0150	1
2	10-60091-126	. LIGHT ASSY, EMERGENCY EXIT. (OPTIONAL BAC SPEC NO. 10-60091-38)							0150	1
2	10-60091-38	. LIGHT ASSY, EMERGENCY EXIT. (OPTIONAL TO BAC SPEC NO. 10-60091-126)							0150	1
5	69-26464-3	. BRACKET ASSY, RECEPTACLE.							0150	1
6	BACRIAD28	. . RECEPTACLE.							0150	1
7	69-26464-4	. . ANGLE, RECEPTACLE BRACKET							0150	1
		. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

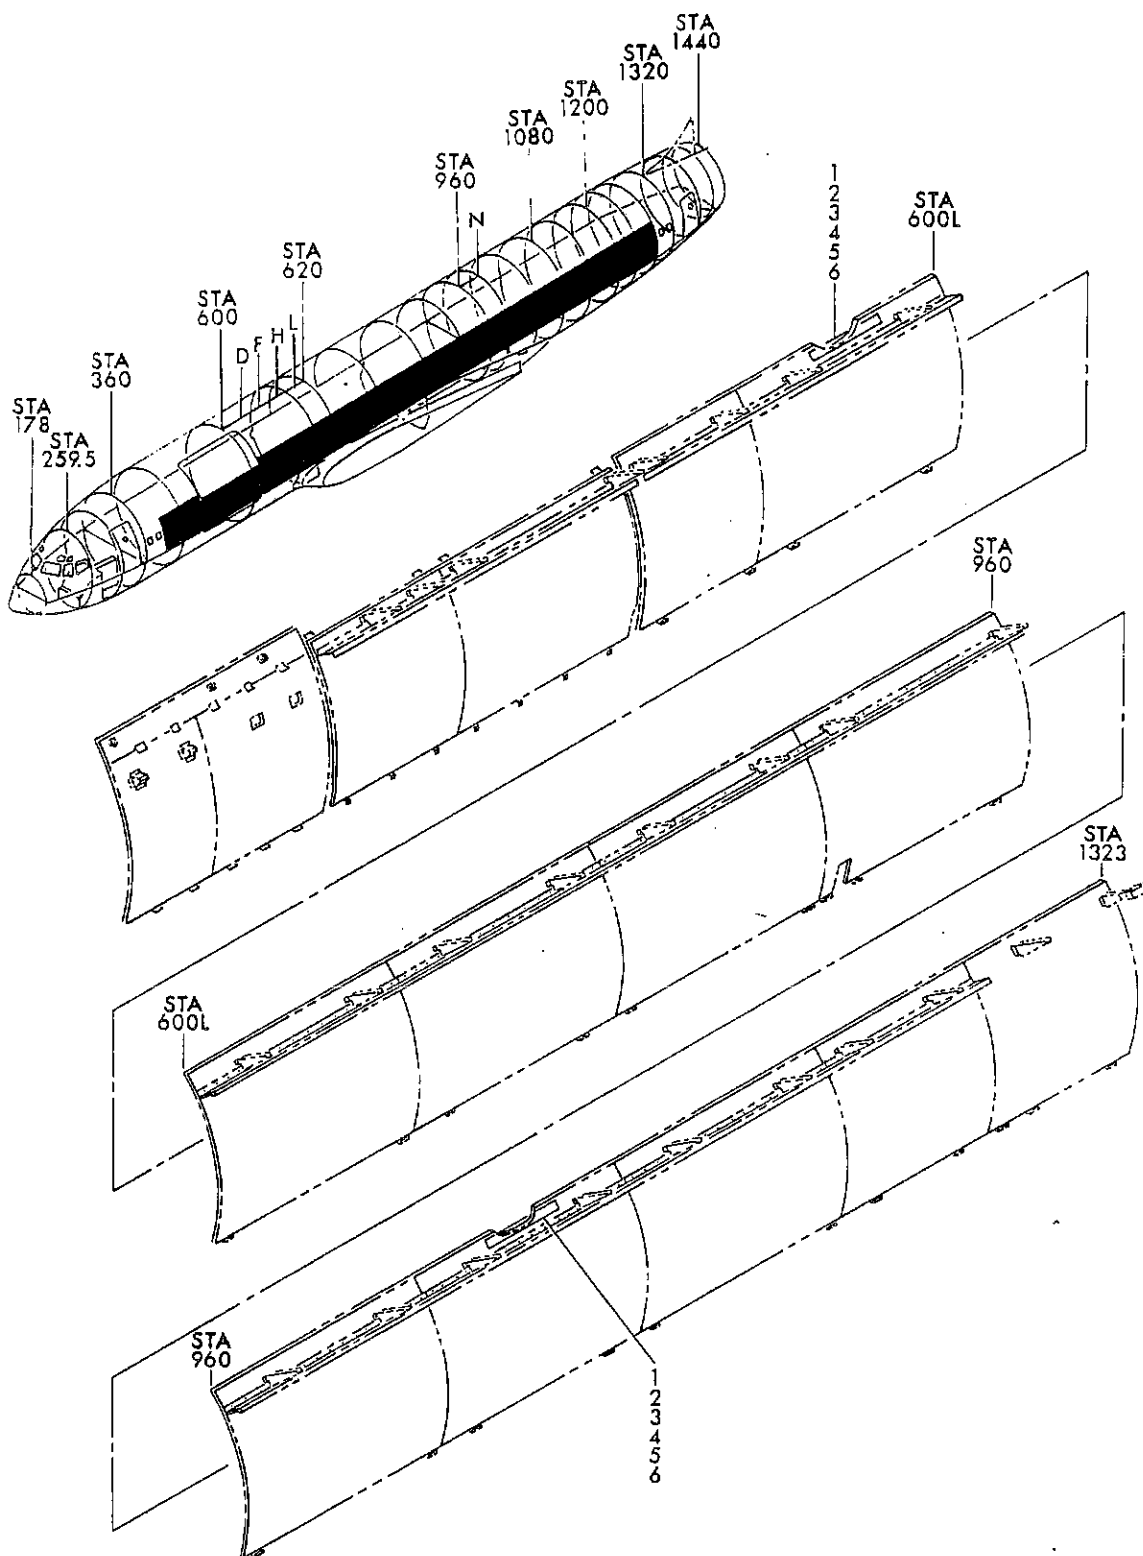 


FIGURE 57D. PANEL ASSY, CABIN SIDEWALL PROTECTOR (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R R R R R	57D	PANEL ASSY, CABIN SIDEWALL PROTECTOR.							0150	
	65-69867-2A	. PANEL ASSY, CABIN SIDEWALL PROTECTOR (REQUIRED.							0150	RF
	65-69867-8A	PLACARDS ONLY) (SEE 25-10, FIG. 80C, ITEM 19)								
	65-69867-8A	. PANEL ASSY, CABIN SIDEWALL PROTECTOR (REQUIRED.							0150	RF
R R	2	PLACARDS ONLY) (SEE 25-10, FIG. 80C, ITEM 25)								
	BACM10C34CL	. . MARKER, ALUMINUM FOIL							0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

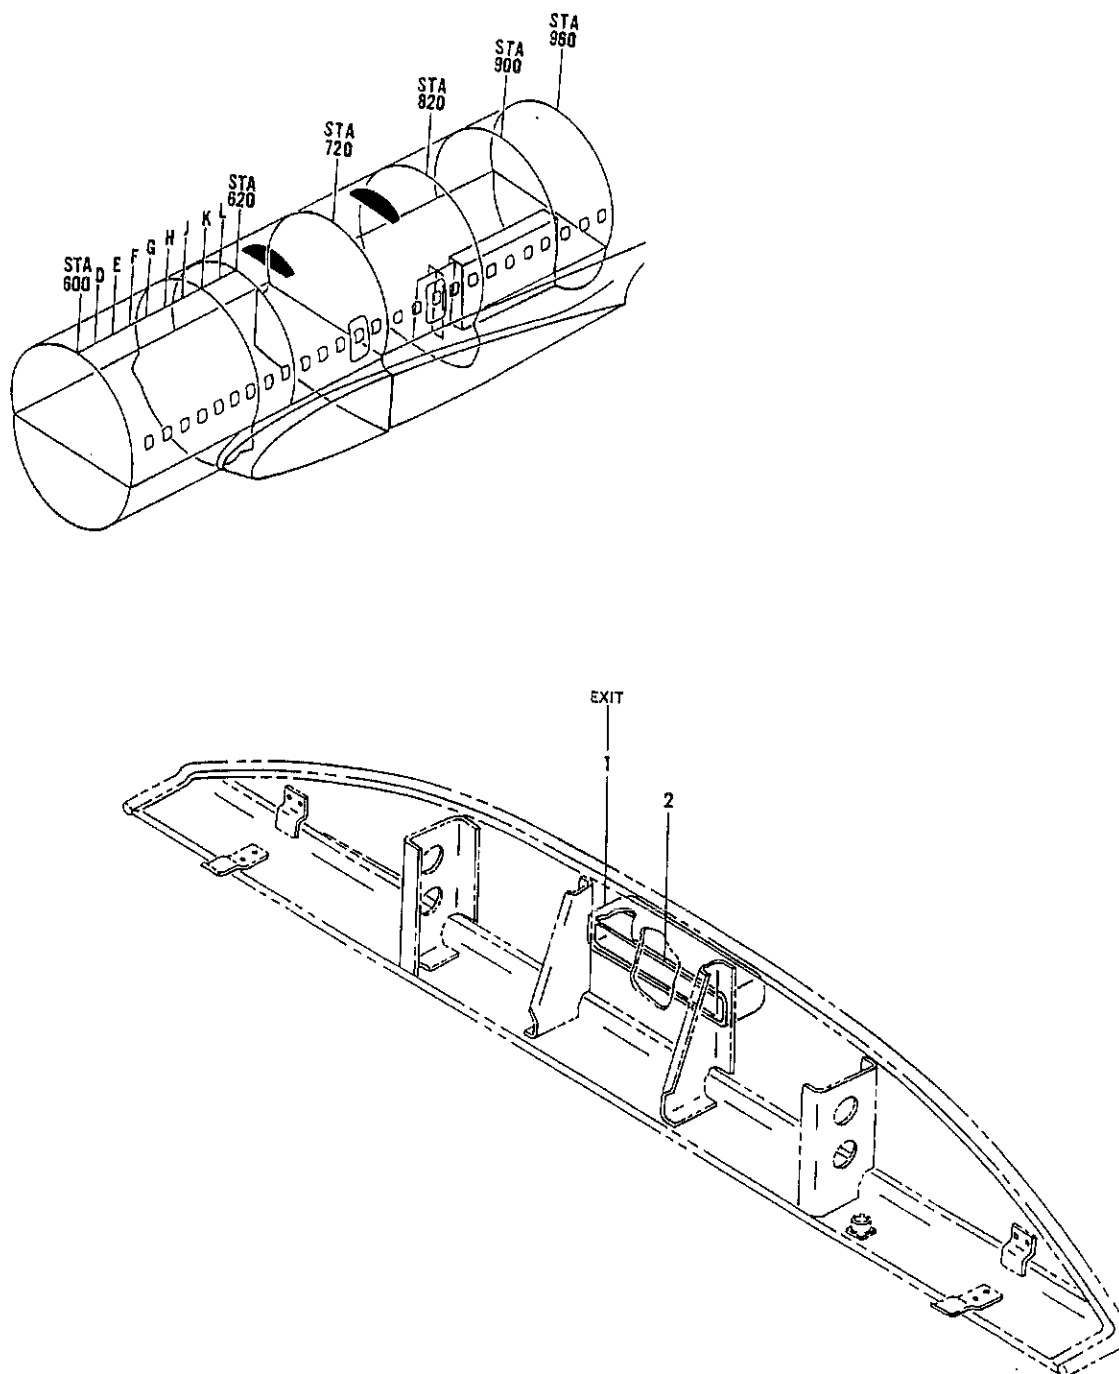 


FIGURE 58D. PANEL ASSY, CENTER LIFE RAFT COMPARTMENT AFT END TRIM (REQUIRED PLACARDS ONLY)

DETAILED PARTS LIST
11-01-58D
PAGE 0

11-01-58D

NOV 21/90

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	58D	65-57968-53A	PANEL ASSY, CENTER LIFE RAFT COMPARTMENT FORWARD END. .							0101	RF
R			TRIM (REQUIRED PLACARDS ONLY) (SEE 25-18, FIG. 25, .							0450	
R			ITEM 55A)								
R		65-57968-53A	PANEL ASSY, CENTER LIFE RAFT COMPARTMENT FORWARD END. .							0203	RF
R			TRIM (REQUIRED PLACARDS ONLY) (REWORKED BY RAF								
R		65-57968-55A	MOD 7211.019-148) (SEE 25-18, FIG. 25, ITEM 55A)								
R			PANEL ASSY, CENTER LIFE RAFT COMPARTMENT AFT END TRIM .							0101	RF
R			(REQUIRED PLACARDS ONLY) (SEE 25-18, FIG. 25, ITEM							0450	
		65-57968-55A	55)								
			PANEL ASSY, CENTER LIFE RAFT COMPARTMENT AFT END TRIM .							0203	RF
			(REQUIRED PLACARDS ONLY) (REWORKED BY RAF MOD								
			7211.019-148) (SEE 25-18, FIG. 25 ITEM 55)								
R	1	10-60091-55	. COVER ASSY, EMERGENCY EXIT LIGHT.							0150	1
R	2	10-60091-126	. LIGHT ASSY, EMERGENCY EXIT (USED ON 65-57968-53A AND							0150	1
R			-55A)								
R			(OPTIONAL 10-60091-38)								
R	2	10-60091-38	. LIGHT ASSY, EMERGENCY EXIT (USED ON 65-57968-53A AND							0150	1
R			-55A)								
R			(OPTIONAL TO 10-60091-126)								
			ATTACHING PARTS								
R		NAS623-3-18	. SCREW							0150	2
			-----*								
R			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA							0150	
R											

MISSING ITEM NUMBERS ARE NOT APPLICABLE

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

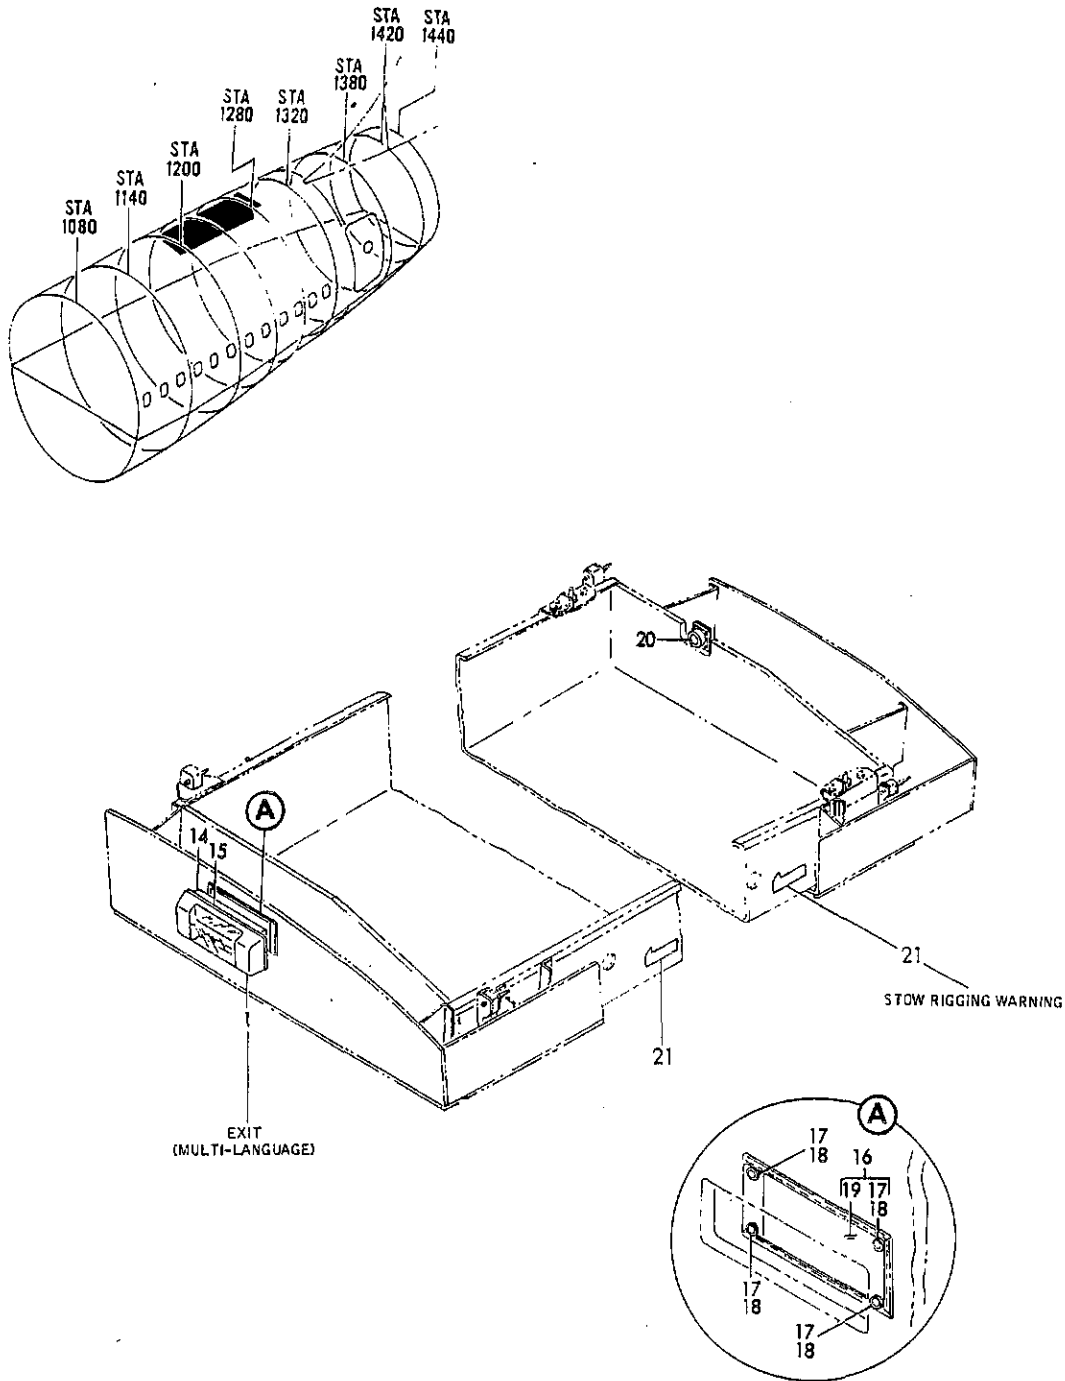 


FIGURE 59. COMPARTMENT ASSY, PASSENGER CABIN AFT LIFE RAFT (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF	UNITS
				FROM TO	PER ASSY
R R R R R R R	59		COMPARTMENT ASSY, PASSENGER CABIN AFT LIFE RAFT (REQUIRED PLACARDS ONLY) (SEE 25-1, FIG. 127, ITEM 11)	0150	RF
			. BEAM ASSY, AFT LIFE RAFT COMPARTMENT LH (REQUIRED . . PLACARDS ONLY)	0150	RF
			. BEAM ASSY, AFT LIFE RAFT COMPARTMENT RH (REQUIRED . . PLACARDS ONLY)	0150	RF
	21		. . MARKER, STOW RIGGING WARNING ALUMINUM FOIL. FOR REFERENCE TO OTHER COMPARTMENT DETAILS, SEE NHA .	0150 0150	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

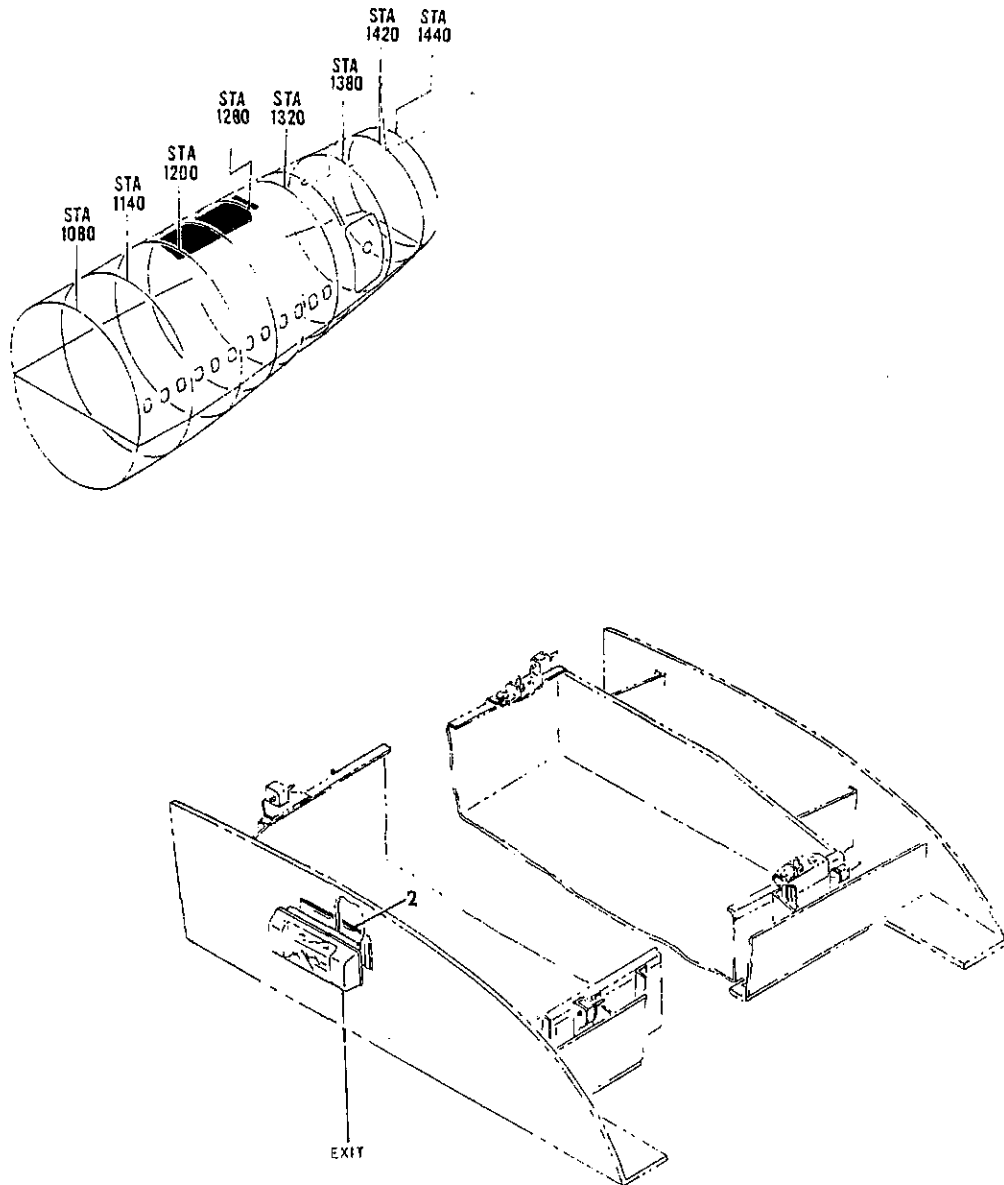 


FIGURE 59D. PANEL ASSY, AFT LIFE RAFT COMPARTMENT FORWARD TRIM EXTENDED (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R	59D	65-57970-2A	PANEL ASSY, AFT LIFE RAFT COMPARTMENT FORWARD TRIM. (REQUIRED PLACARDS ONLY) (SEE 25-1, FIG. 127, ITEM 118)	0150	RF
	1	10-60091-41	. COVER ASSY, EMERGENCY EXIT LIGHT.	0150	1
	2	10-60091-38	. LIGHT ASSY, EMERGENCY EXIT.	0150	1
		NAS623-3-18	ATTACHING PARTS		
		SL1650-10-2S	. SCREW	0150	2
			. INSERT, (V97393).	0150	2
			-----*		
			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

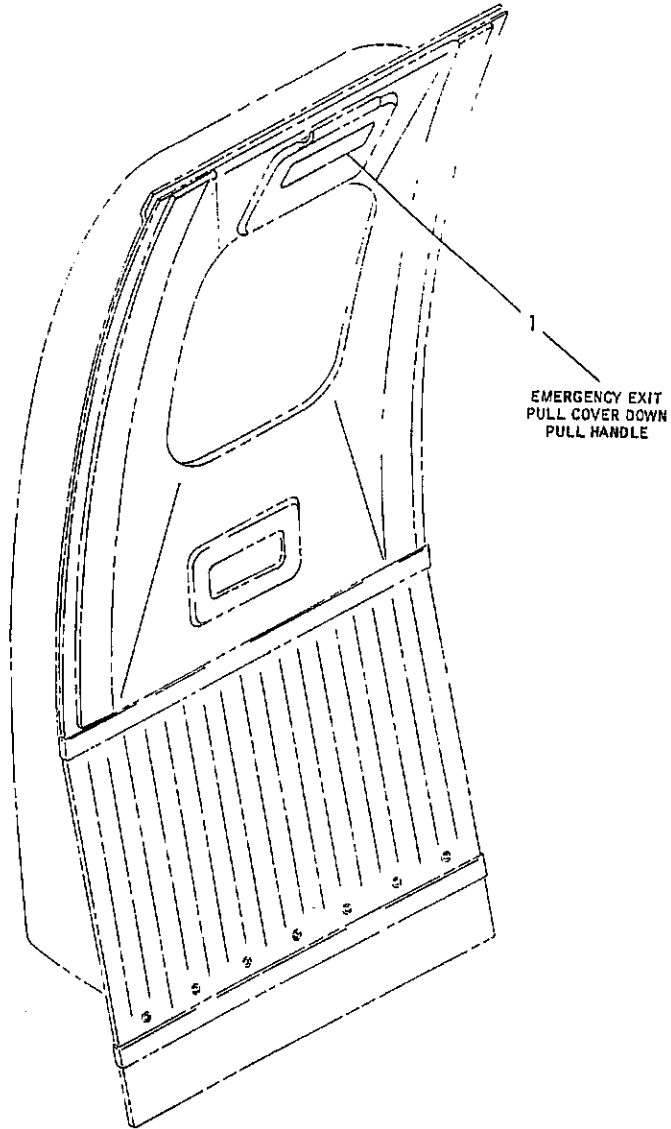 
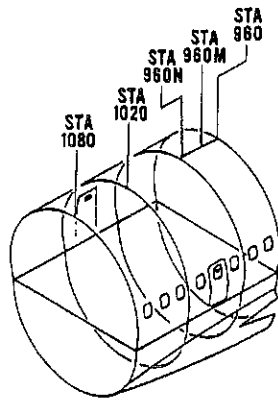 


FIGURE 60. PANEL INSTL, STATION 990 EMERGENCY EXIT (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

R R R R R	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
	60	65-29951-1	PANEL INSTL, STATION 990 EMERGENCY EXIT (REQUIRED . . .							0150	RF
			PLACARDS ONLY) (SEE NUMERICAL PARTS LIST ITEM FOR								
			APPLICABLE NHA)								
	1	66-18505-1A	. PLACARD ASSY, EMERGENCY EXIT VINYL LAMINATED. . . .							0150	1
			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA							0150	
		</									

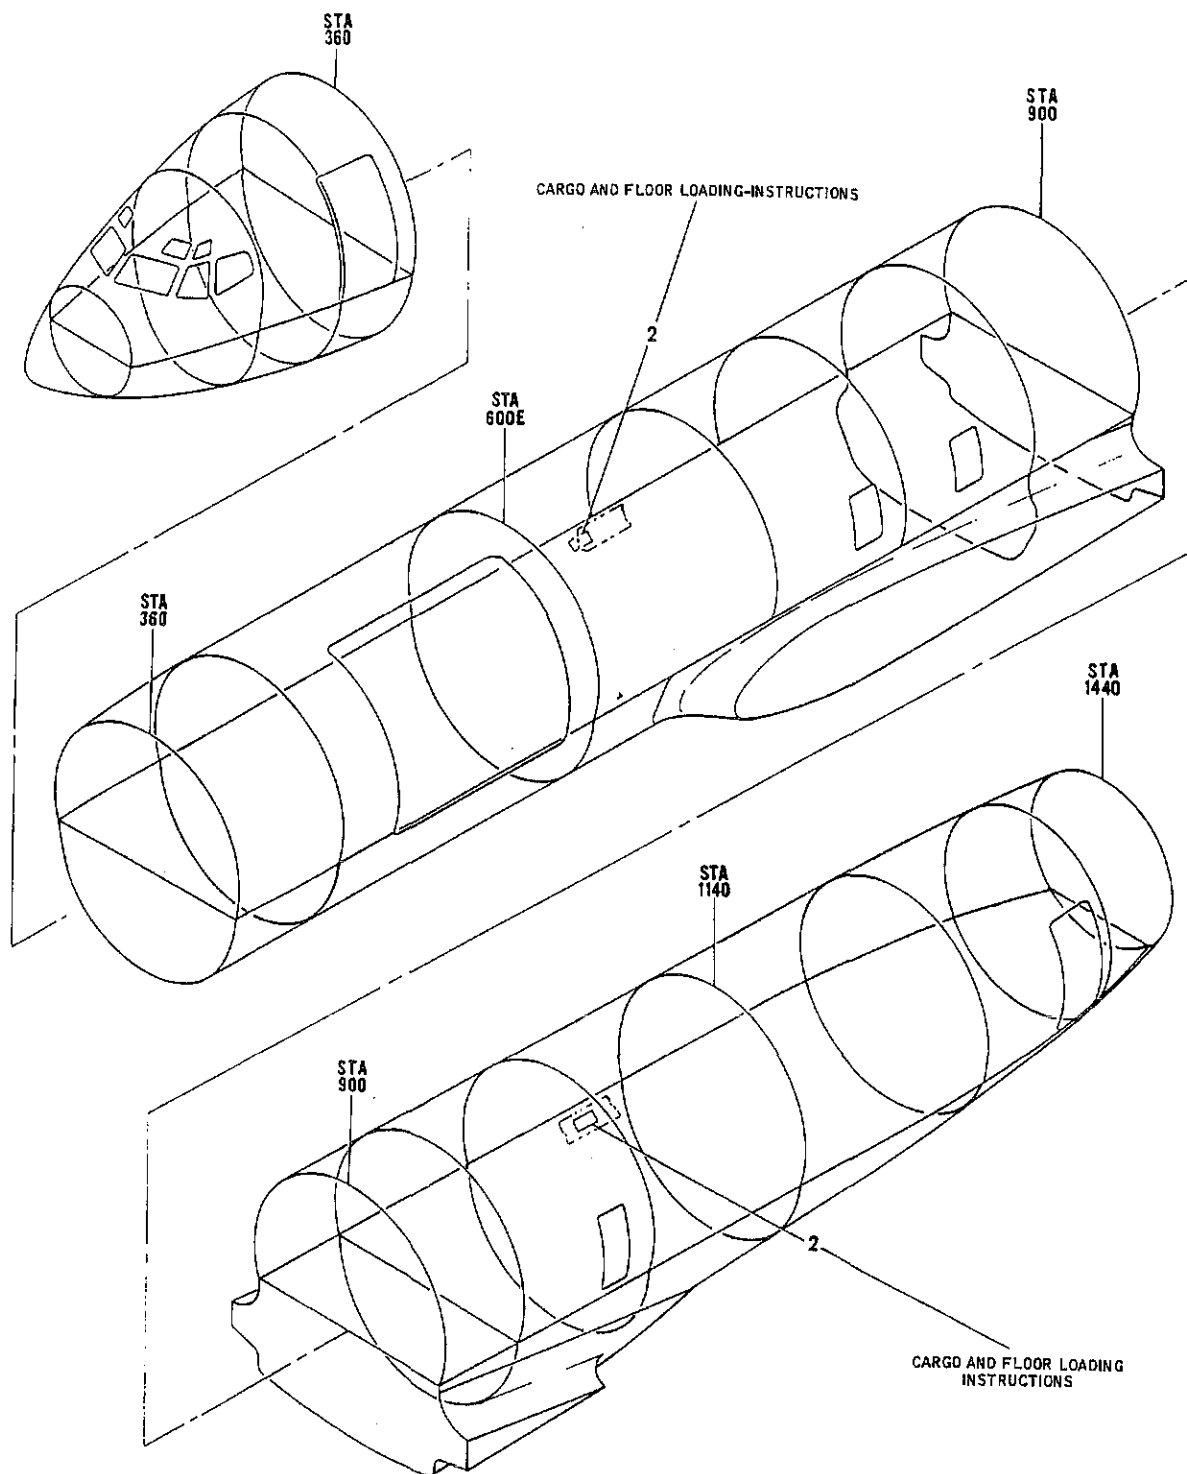 


FIGURE 62. PLACARD INSTL, UPPER CARGO COMPARTMENT

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

R R R	FIGURE & ITEM NO.		NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		MANUFACTURER'S PART NUMBER	1	2	3	4	5	6	7		
	62	65-33530-6	PLACARD INSTL, UPPER CARGO COMPARTMENT.							0150	1
	2	BACM10C34CL	. MARKER-ALUMINUM FOIL, CARGO AND FLOOR LOADING							0150	2
			INSTRUCTIONS								
			MISSING ITEM NUMBERS ARE NOT APPLICABLE								



STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R R R R R R R	68 65-4733-22	LATCH ASSY, LIFE RAFT DOOR (REQUIRED PLACARDS ONLY) . . (SEE 25-18, FIG. 29, ITEM 14 AND 25-18, FIG. 33, ITEM 7) (OPTIONAL 65-4733-39)	0150	RF
	65-4733-39	LATCH ASSY, LIFE RAFT DOOR (REQUIRED PLACARDS ONLY) . . (SEE 25-18, FIG. 29, ITEM 14 AND 25-18, FIG. 33, ITEM 7) (OPTIONAL TO 65-4733-21, -22, -23, -25, -26, -27, -29, -30, -33, -35, -36, -37, -38)	0150	RF
	65-4733-39	LATCH ASSY, LIFE RAFT DOOR (REQUIRED PLACARDS ONLY) . . (SEE 25-18, FIG. 29, ITEM 14, 25-18, FIG. 33, ITEM 7 AND 25-18, FIG. 33A, ITEM 23)	5199	RF
	1 BACM10L61-1CHW	. MARKER-ALUMINUM FOIL, CAUTION CLOSE DOOR TIGHTLY. . . BEFORE CLOSING HANDLE		1
	69-27051-1	. HANDLE ASSY, (REQUIRED PLACARDS ONLY) (OPTIONAL 69-27051-49 WITH 69-29035, -2)	0150	RF
	69-27051-49	. HANDLE ASSY, (REQUIRED PLACARDS ONLY)	5199	RF
	69-27051-49	. HANDLE ASSY, (REQUIRED PLACARDS ONLY) (USED WITH. . . 69-29035, -17, -4, -24, -28, -13, -35, -46, -47, -38, -2, -19, -6, -26, -30, -33, -14, -37, -48, -49, -51 AND -52) (OPTIONAL TO 69-27051-1, -17, -5, -20, -23, -14, -27, -11, -30, -41, -44, -45, -46)	0150	RF
	2 69-29035	. . SIGN, HANDLE, LIFE RAFT DOOR PULL (USED ON. 69-27051-1 AND -41)	0150	1
	3 69-29035-52	. . SIGN, (NO PRINTING) (USED ON 69-27051-49)		1
	4 69-29035-2	. . SIGN, LIFE RAFT (USED ON 69-27051-1).	0150	1
R R R R R	6 69-29035-51	. . SIGN, (NO PRINTING) (USED ON 69-27051-49)		1
	7 69-29035	. SIGN, HANDLE, LIFE RAFT DOOR PULL (USED WITH. 69-27051-49)	0150	1
	8 69-29035-2	. SIGN, LIFE RAFT (USED WITH 69-27051-49)	0150	1
		. FOR REFERENCE TO OTHER LATCH DETAILS, SEE NHA		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

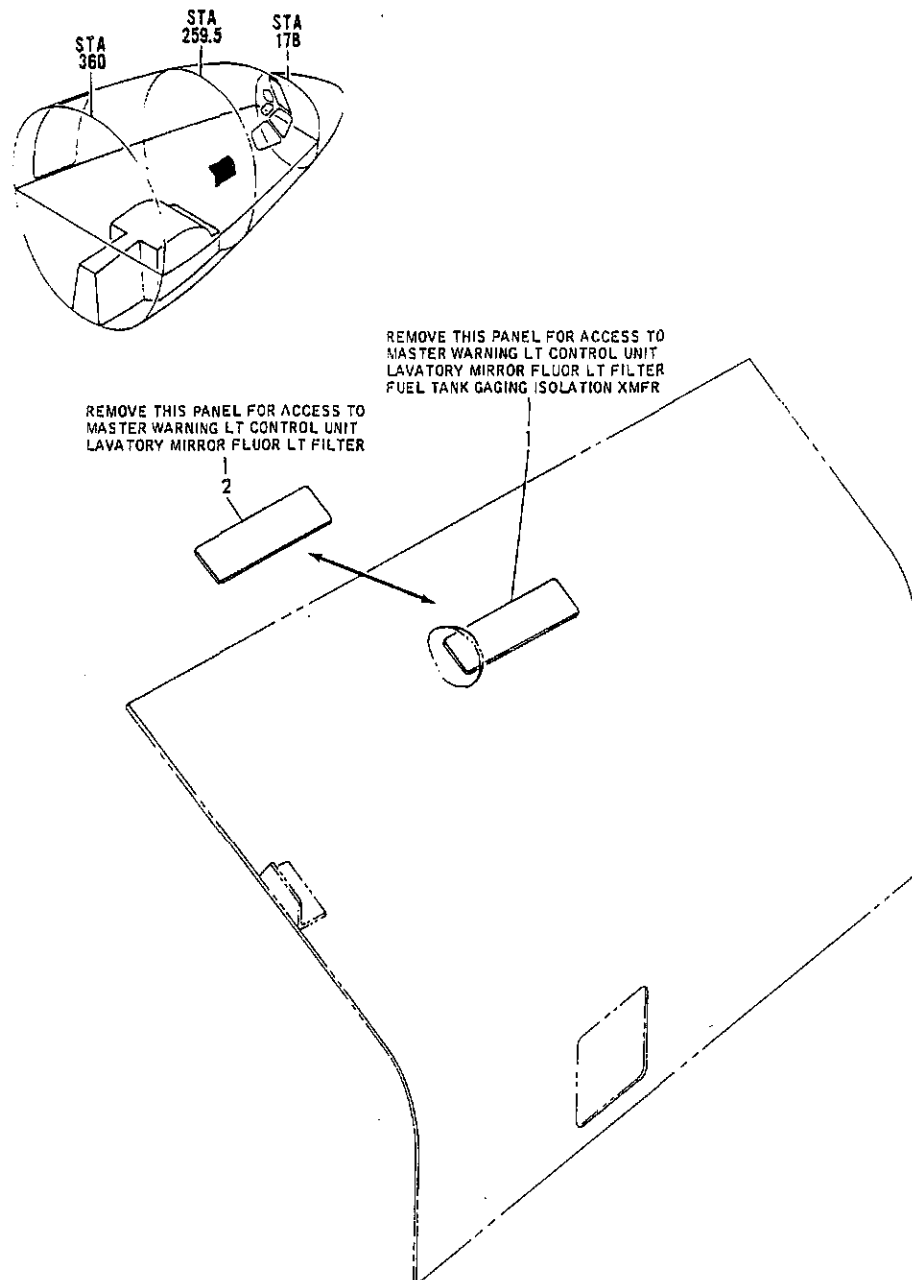 


FIGURE 70. METAL-CAL INSTL, STATION 301RH CEILING PANEL

707

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
70	69-34837-1	METAL-CAL INSTL, STATION 301 RH CEILING PANEL (SEE. . . 24-3, FIG. 1A, ITEM 71, 24-3, FIG. 1B, ITEM 62 AND 24-3, FIG. 1C, ITEM 59)								RF
2	BACM10A11HS	. METAL-CAL, REMOVE THIS PANEL FOR ACCESS TO MASTER . . WARNING LT CONTROL UNIT LAVATORY MIRROR FLUOR LT FILTER								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

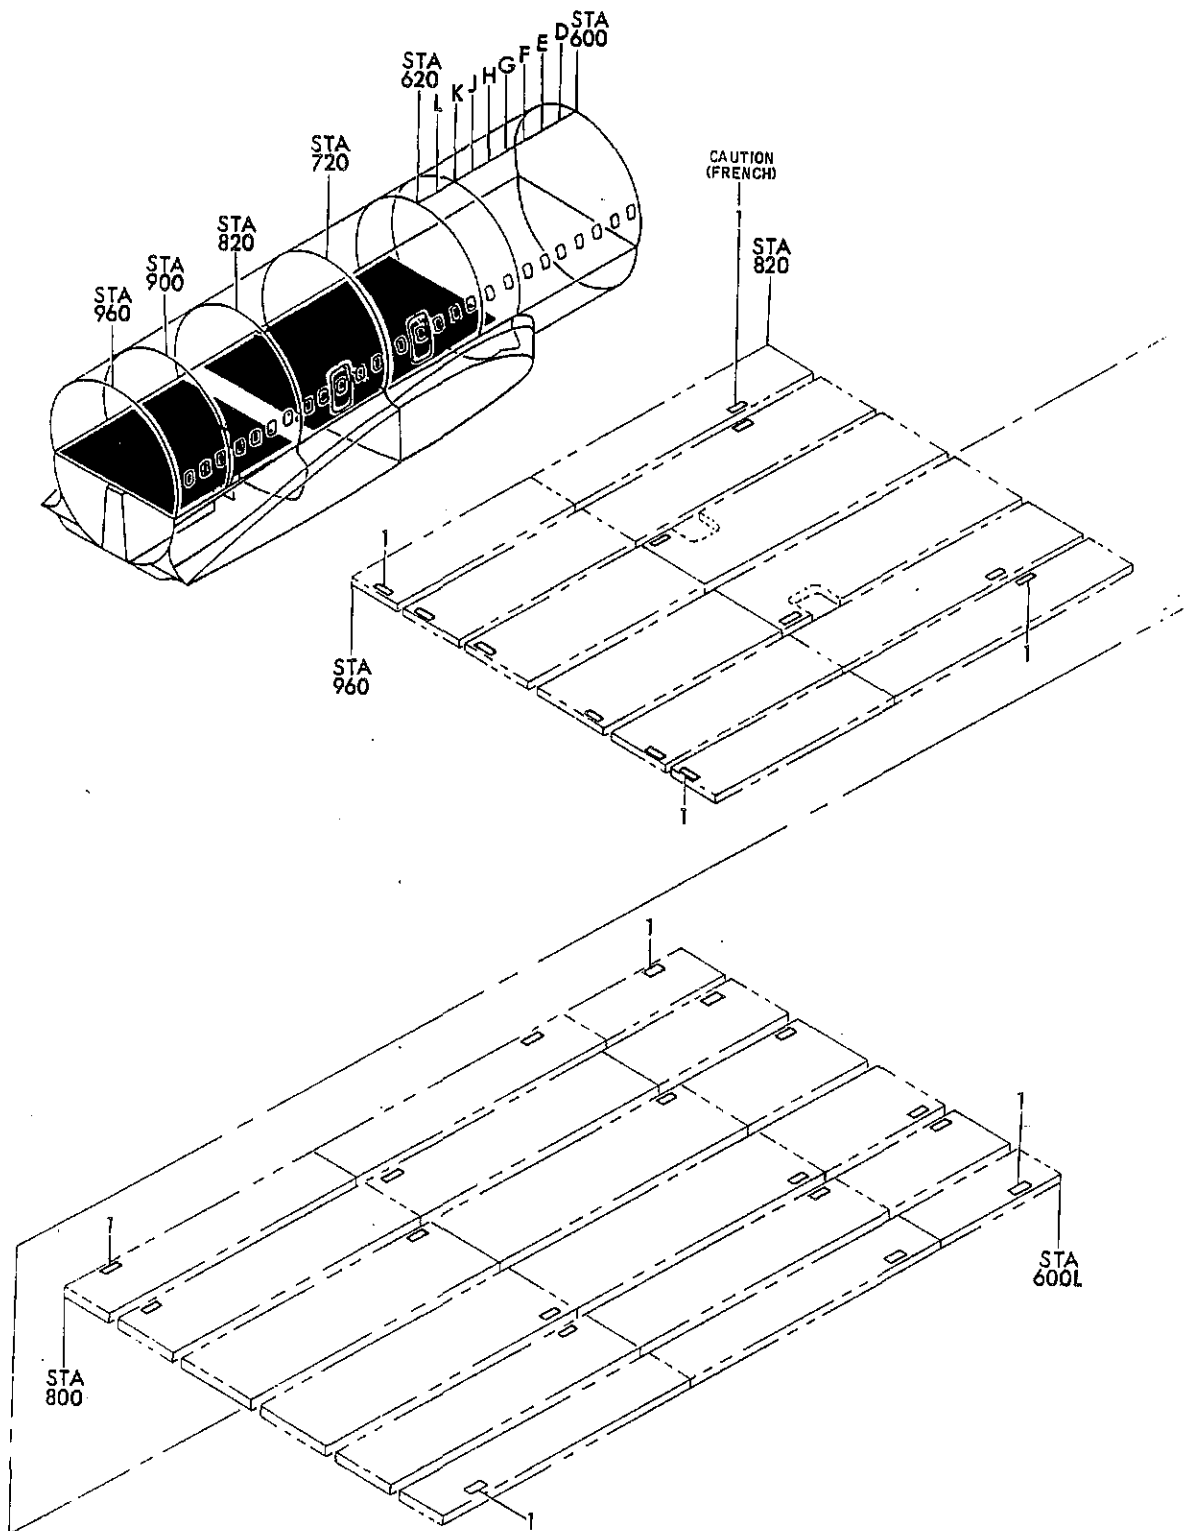 


FIGURE 78. FLOOR MARKING INSTL, HEATED FLOOR PANEL

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
78	1	65-75152-1 BAC27CEE547	FLOOR MARKING INSTL, HEATED FLOOR PANEL							5199	1
			. METAL-CAL, CAUTION.							5199	30
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

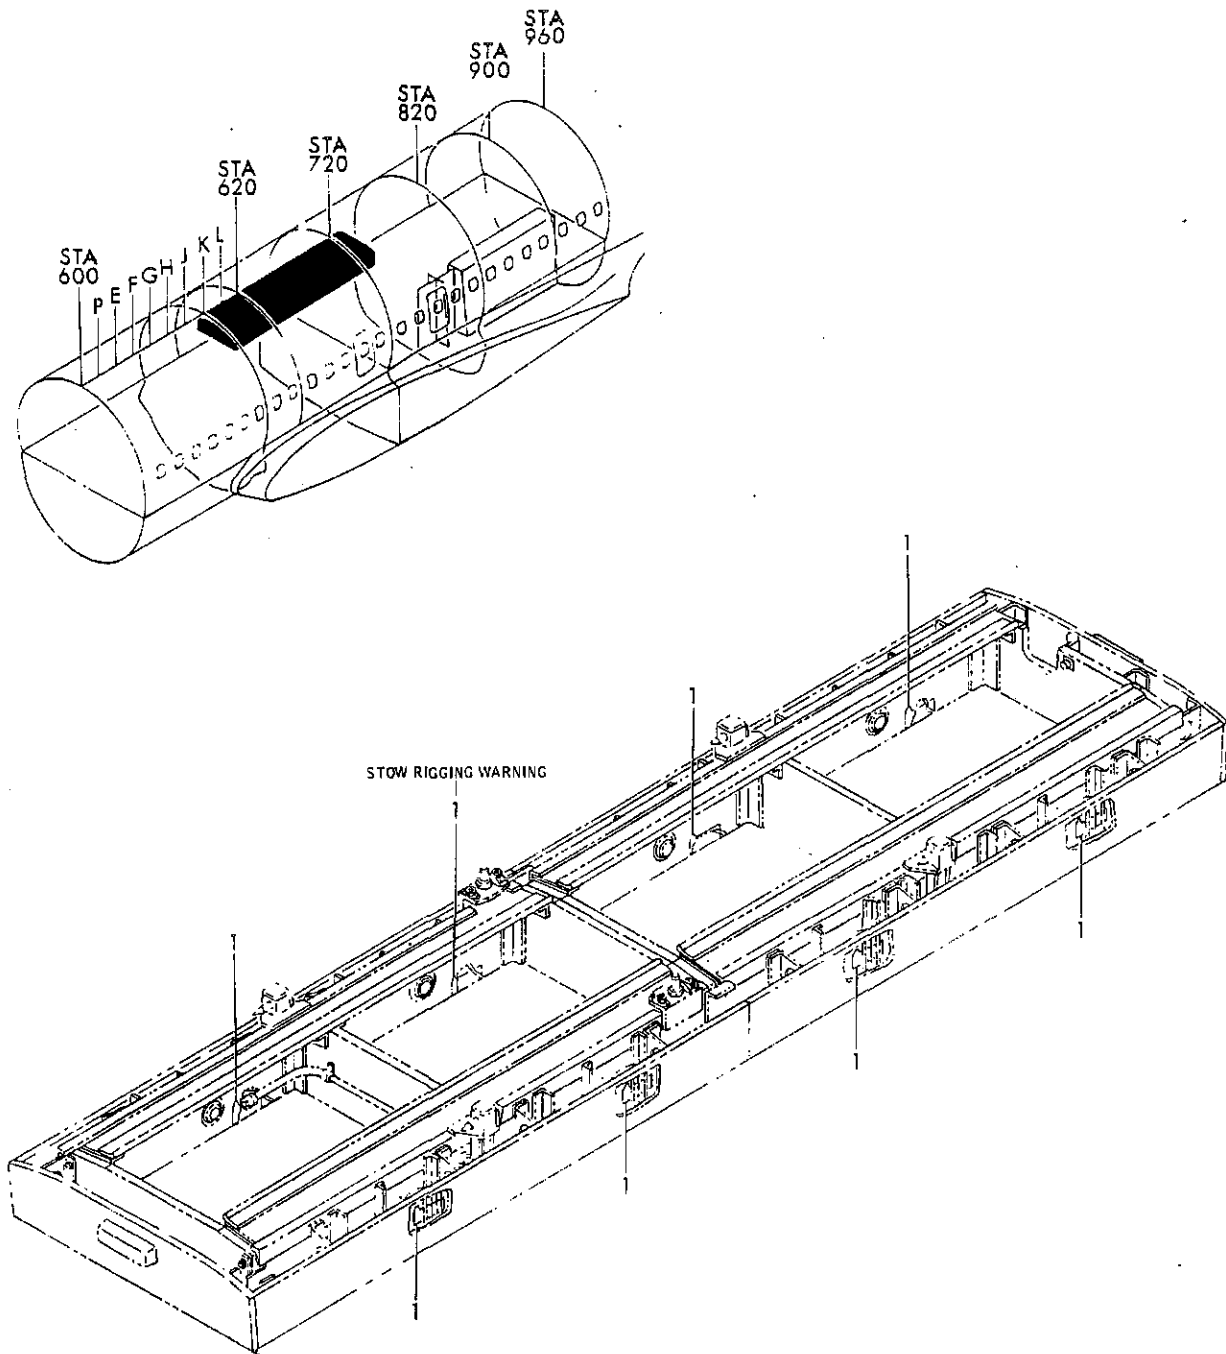 


FIGURE 82. BEAM ASSY, CENTER LIFE RAFT COMPARTMENT (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R R R R R R	82	65-29940-1	BEAM ASSY, CENTER LIFE RAFT COMPARTMENT (REQUIRED . . . PLACARDS ONLY) (SEE 25-18, FIG. 25, ITEM 33 AND 25-18, FIG. 108F, ITEM 20)	0150 RF
		65-29940-2	BEAM ASSY, CENTER LIFE RAFT COMPARTMENT (REQUIRED . . . PLACARDS ONLY) (SEE 25-18, FIG. 25, ITEM 34 AND 25-18, FIG. 108F, ITEM 20)	0150 RF
		65-29940-3	BEAM ASSY, CENTER LIFE RAFT COMPARTMENT (REQUIRED . . . PLACARDS ONLY) (SEE 25-18, FIG. 25, ITEM 35)	0150 RF
		65-29940-4	BEAM ASSY, CENTER LIFE RAFT COMPARTMENT (REQUIRED . . . PLACARDS ONLY) (SEE 25-18, FIG. 25, ITEM 36)	0150 RF
	1	BACM10W31-2WJ	. MARKER-ALUMINUM FOIL, STOW RIGGING WARNING. FOR REFERENCE TO OTHER BEAM DETAILS, SEE NHA	0150 2 0150
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

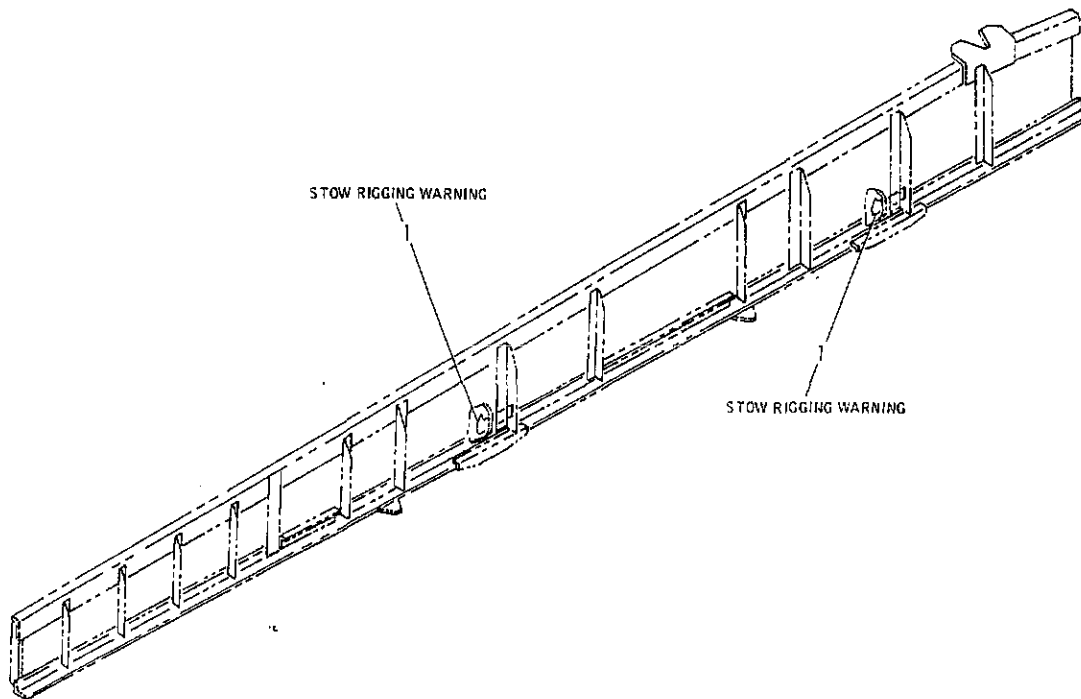 
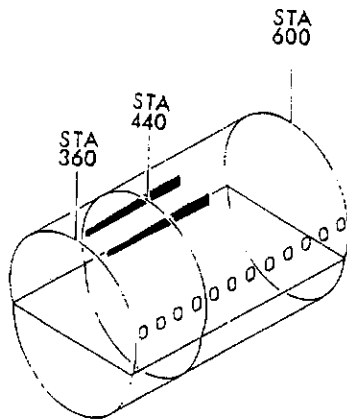 


FIGURE 82A. BEAM ASSY, FORWARD LIFE RAFT COMPARTMENT (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R	82A	65-31497-1	BEAM ASSY, FORWARD LIFE RAFT COMPARTMENT (LH) (REQUIRED PLACARDS ONLY) (SEE 25-18, FIG. 21, ITEM 44)	0150 RF
		65-31497-2	BEAM ASSY, FORWARD LIFE RAFT COMPARTMENT (RH) (REQUIRED PLACARDS ONLY) (SEE 25-18, FIG. 21, ITEM 45)	0150 RF
	1	BACM10W31-2WJ	. MARKER ALUMINUM FOIL, STOW RIGGING WARNING.	0150 2
			. FOR REFERENCE TO OTHER BEAM DETAILS, SEE NHA.	0150
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

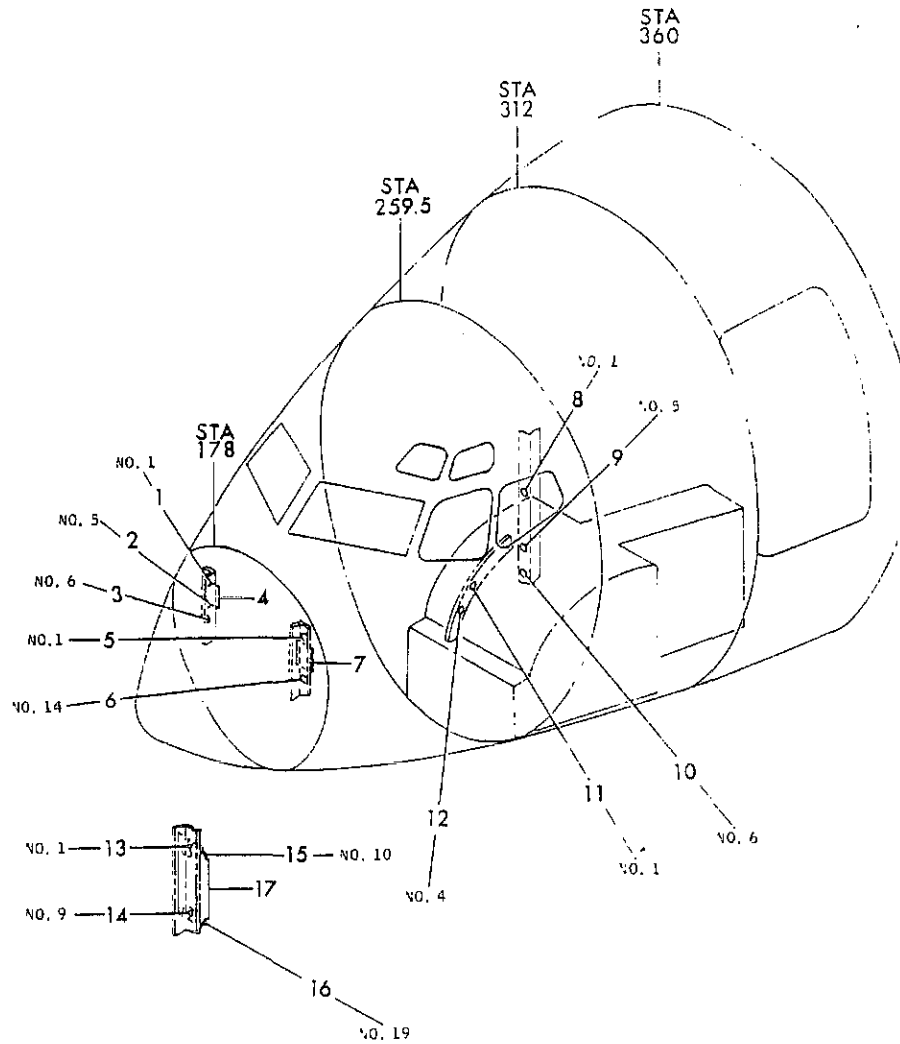 


FIGURE 85. PLACARD INSTL, SECTION 51

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
85	65-56061	PLACARD INSTL, SECTION 51 (SEE 24-3, FIG. 1A, ITEM 133, 24-3, FIG. 1B, ITEM 115 AND 24-3, FIG. 1C, ITEM 114)	0150	RF
	65-56061-1	. PLACARD INSTL, BULKHEAD STATION 178 GROUND STUDS RH .	0150	1
1	BACM10N00-2PP	. . MARKER-ALUMINUM FOIL, 1	0150	1
2	BACM10N00-2AAV	. . MARKER-ALUMINUM FOIL, 5	0150	1
4	65-56061-5	. . PLATE ASSY, PLACARD SUPPORT	0150	1
	65-56061-2	. PLACARD INSTL, BULKHEAD STATION 178 GROUND STUDS LH .	0150	1
5	BACM10N00-2PP	. . MARKER-ALUMINUM FOIL, 1	0150	1
6	BACM10N00-2HA	. . MARKER-ALUMINUM FOIL, 14.	0150	1
7	63-9312-2	. . PLATE ASSY, PLACARD SUPPORT	0150	1
	65-56061-3	. PLACARD INSTL, J1 SHIELD GROUND STUDS	0150	1
8	BACM10N00-2PP	. . MARKER-ALUMINUM FOIL, 1	0150	1
9	BACM10N00-2AAV	. . MARKER-ALUMINUM FOIL, 5	0150	1
	65-56061-4	. PLACARD INSTL, J9 SHIELD GROUND STUDS	0150	1
11	BACM10N00-2PP	. . MARKER-ALUMINUM FOIL, 1	0150	1
12	BACM10N00-2AAU	. . MARKER-ALUMINUM FOIL, 4	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

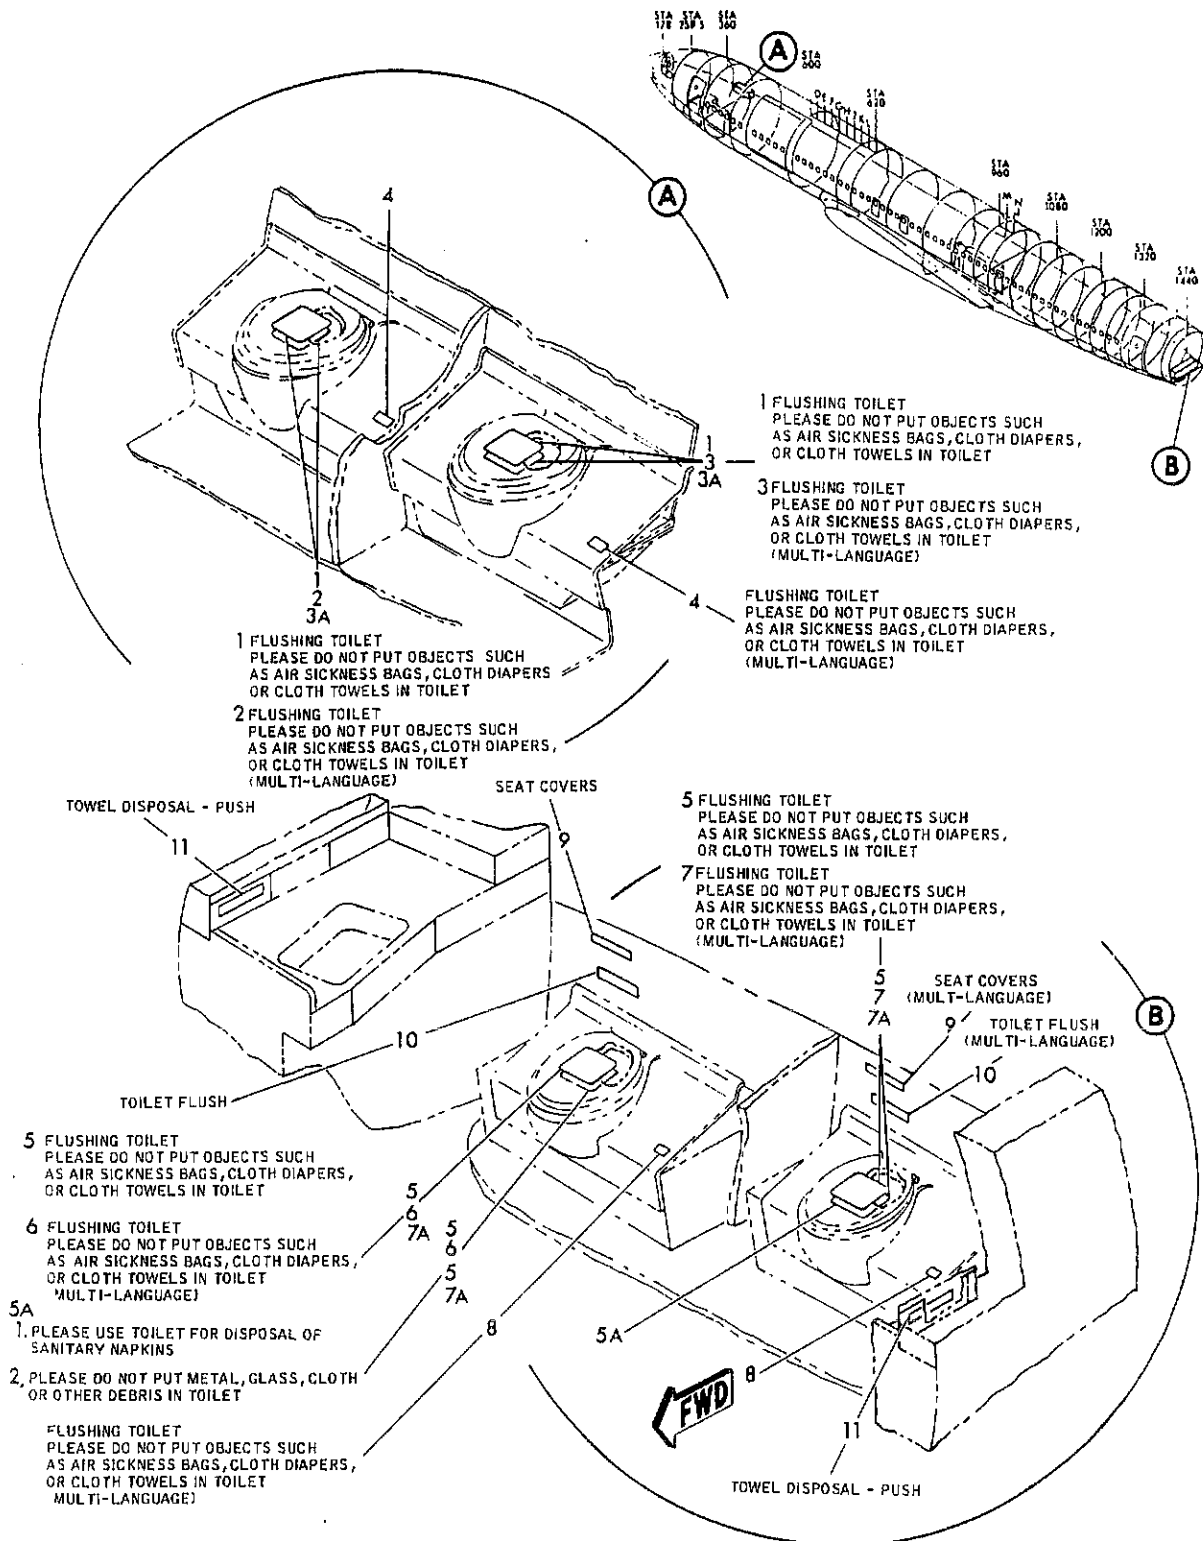 


FIGURE 88C. TOILET INSTL, FORWARD COMPARTMENT A AND B (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
88C	50-10855	TOILET INSTL, AFT COMPARTMENT C AND D (REQUIRED PLACARDS ONLY)							0150	RF
		. TOILET INSTL, AFT COMPARTMENT C AND D (REQUIRED PLACARDS ONLY) (SEE 25-15, FIG. 1, ITEM 4, 25-15, FIG. 2, ITEM 21, 25-15, FIG. 3, ITEM 19, 25-15, FIG. 4, ITEM 21, 25-15, FIG. 5, ITEM 19, 25-15, FIG. 6, ITEM 22, 25-15, FIG. 7, ITEM 21, 25-15, FIG. 8, ITEM 24, 25-15, FIG. 9, ITEM 24, 25-15, FIG. 10, ITEM 25, 25-15, FIG. 12, ITEM 19, 25-15, FIG. 12A, ITEM 19, 25-15, FIG. 12B, ITEM 19, 25-15, FIG. 12E, ITEM 7, 25-15, FIG. 12G, ITEM 7, 25-15, FIG. 12H, ITEM 7, 25-15, FIG. 12J, ITEM 6, 25-15, FIG. 13, ITEM 14, 25-15, FIG. 13M, ITEM 15, 25-15, FIG. 14A, ITEM 15, 25-15, FIG. 14B, ITEM 5, 25-15, FIG. 14C, ITEM 15, 25-15, FIG. 14D, ITEM 21, 25-15, FIG. 14E, ITEM 21, 25-15, FIG. 14H, ITEM 14, 25-15, FIG. 14J, ITEM 21, 25-15, FIG. 14K, ITEM 19, 25-15, FIG. 14L, ITEM 5, 25-15, FIG. 14M, ITEM 12, 25-15, FIG. 14N, ITEM 12, 25-15, FIG. 14P, ITEM 2, 25-15, FIG. 14Q, ITEM 20, 25-15, FIG. 14R, ITEM 11, AND 25-15, FIG. 144, ITEM 1)								
	50-10855	. TOILET INSTL, AFT COMPARTMENT C AND D (REQUIRED PLACARDS ONLY) (VARIABLE DWG NO.;50-10855-5001) (SEE 25-15, FIG. 13M, ITEM 15)							5199	RF
	5	BACM9L52-10C	. . SCOTCH-CAL, FLUSHING TOILET PLEASE DO NOT PUT . . . OBJECTS IN TOILET . . FOR REFERENCE TO OTHER TOILET DETAILS, SEE NHA. . .							0150
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

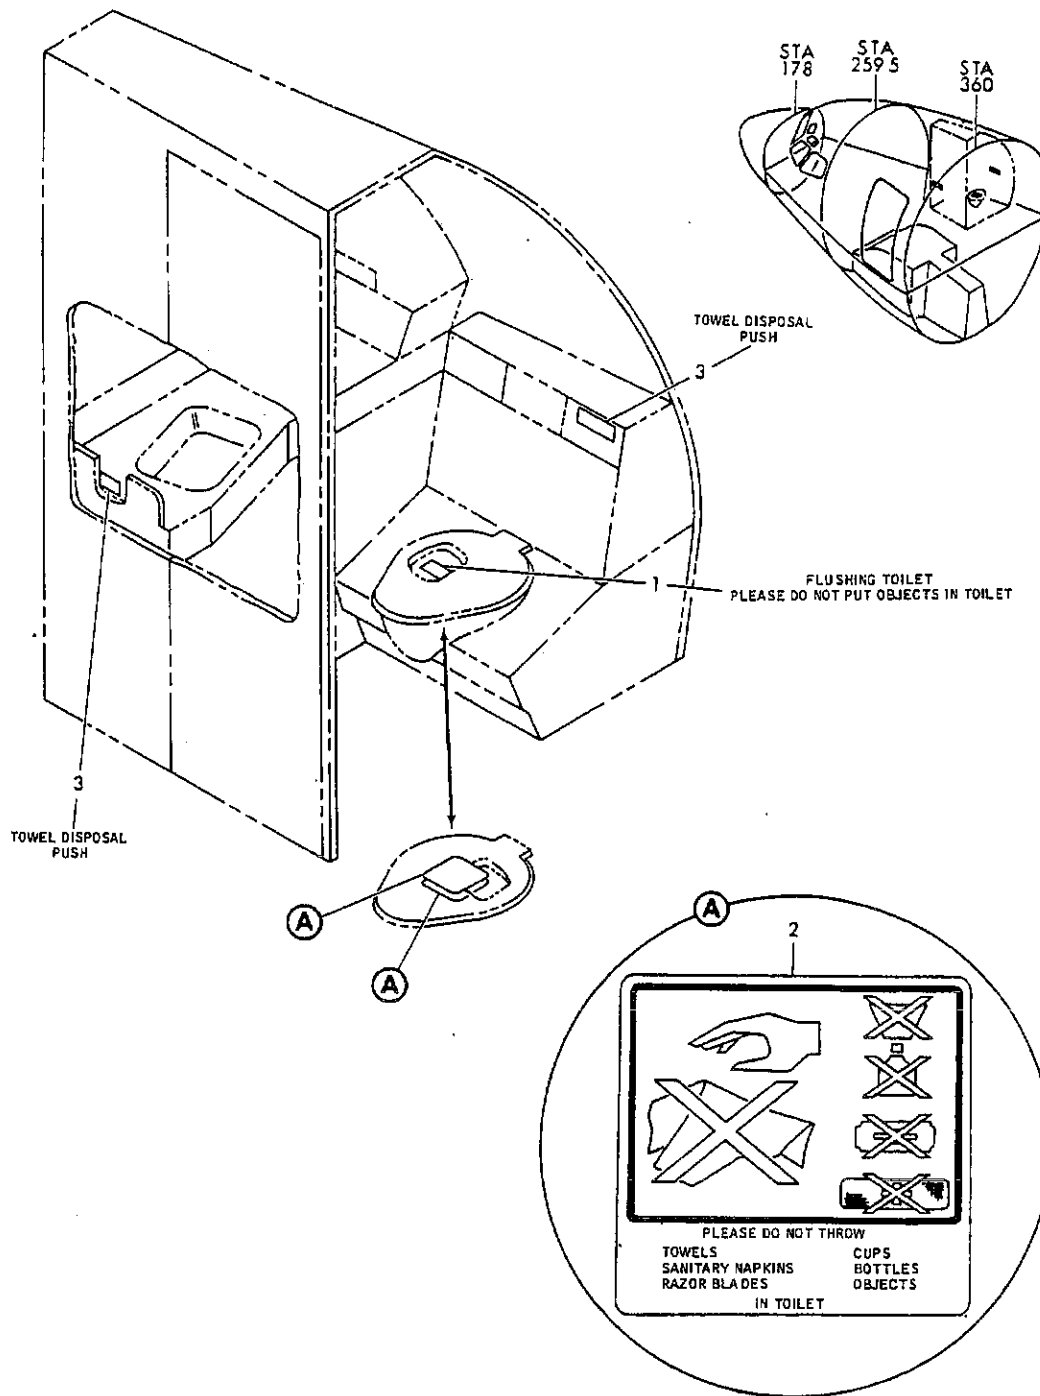 


FIGURE 88D. TOILET INSTL, FORWARD COMPARTMENT A (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R R R R R R R R R R	880	50-10853-6							0150	RF
		TOILET INSTL, FORWARD COMPARTMENT A (REQUIRED PLACARDS ONLY) (SEE 25-15, FIG. 1, ITEM 3A, 25-15, FIG. 4, ITEM 20A, 25-15, FIG. 6, ITEM 21A, 25-15, FIG. 8, ITEM 22A, 25-15, FIG. 9, ITEM 23A, 25-15, FIG. 13, ITEM 13, 25-15, FIG. 13M, ITEM 13, 25-15, FIG. 14, ITEM 7, 25-15, FIG. 14A, ITEM 13, 25-15, FIG. 14B, ITEM 4, 25-15, FIG. 14C, ITEM 14, 25-15, FIG. 14D, ITEM 20, 25-15, FIG. 14H, ITEM 13, 25-15, FIG. 14J, ITEM 20, 25-15, FIG. 14K, ITEM 18, 25-15, FIG. 14L, ITEM 4, 25-15, FIG. 14M, ITEM 11, 25-15, FIG. 14N, ITEM 11 AND 25-15, FIG. 14P, ITEM 11)								
	1	BACM9L52-10C							0150	1
		. SCOTCH-CAL, FLUSHING TOILET PLEASE DO NOT PUT OBJECTS IN TOILET							0150	
		. FOR REFERENCE TO OTHER TOILET DETAILS, SEE NHA. . .							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

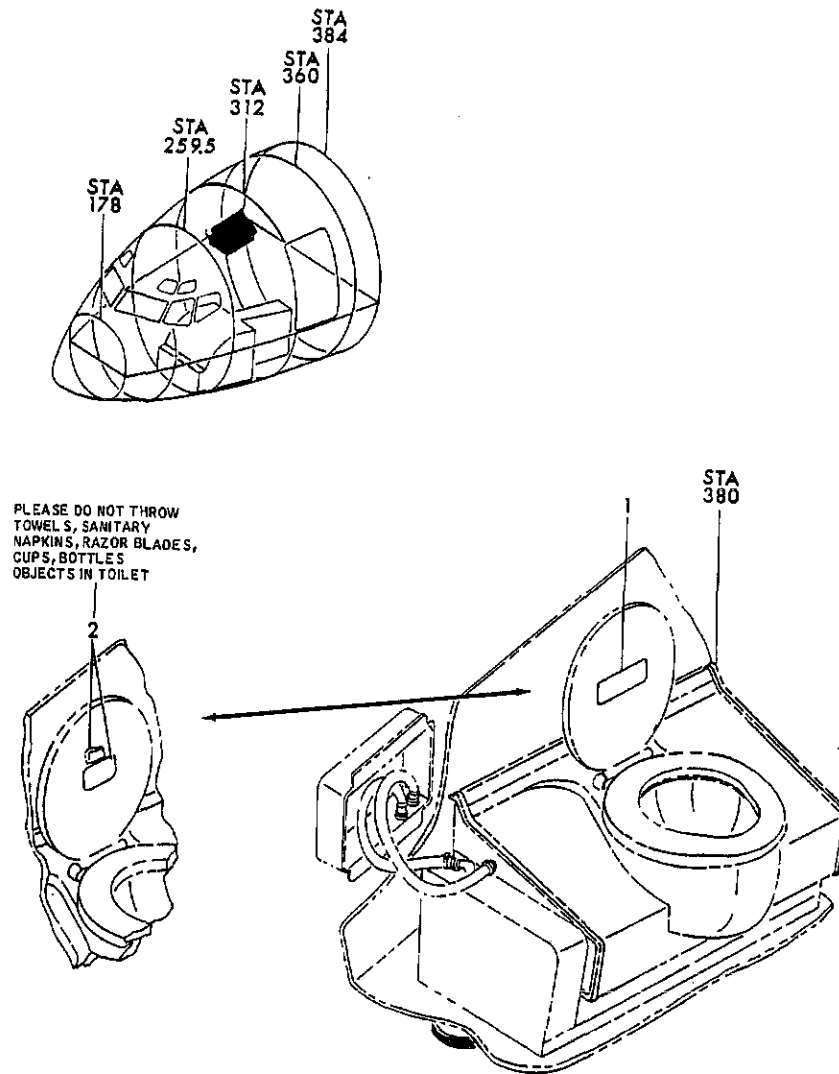 


FIGURE 88E. TOILET INSTL. FORWARD TOILET COMPARTMENT B (REQUIRED PLACARDS ONLY)

MISSING ITEM NUMBERS ARE NOT APPLICABLE

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

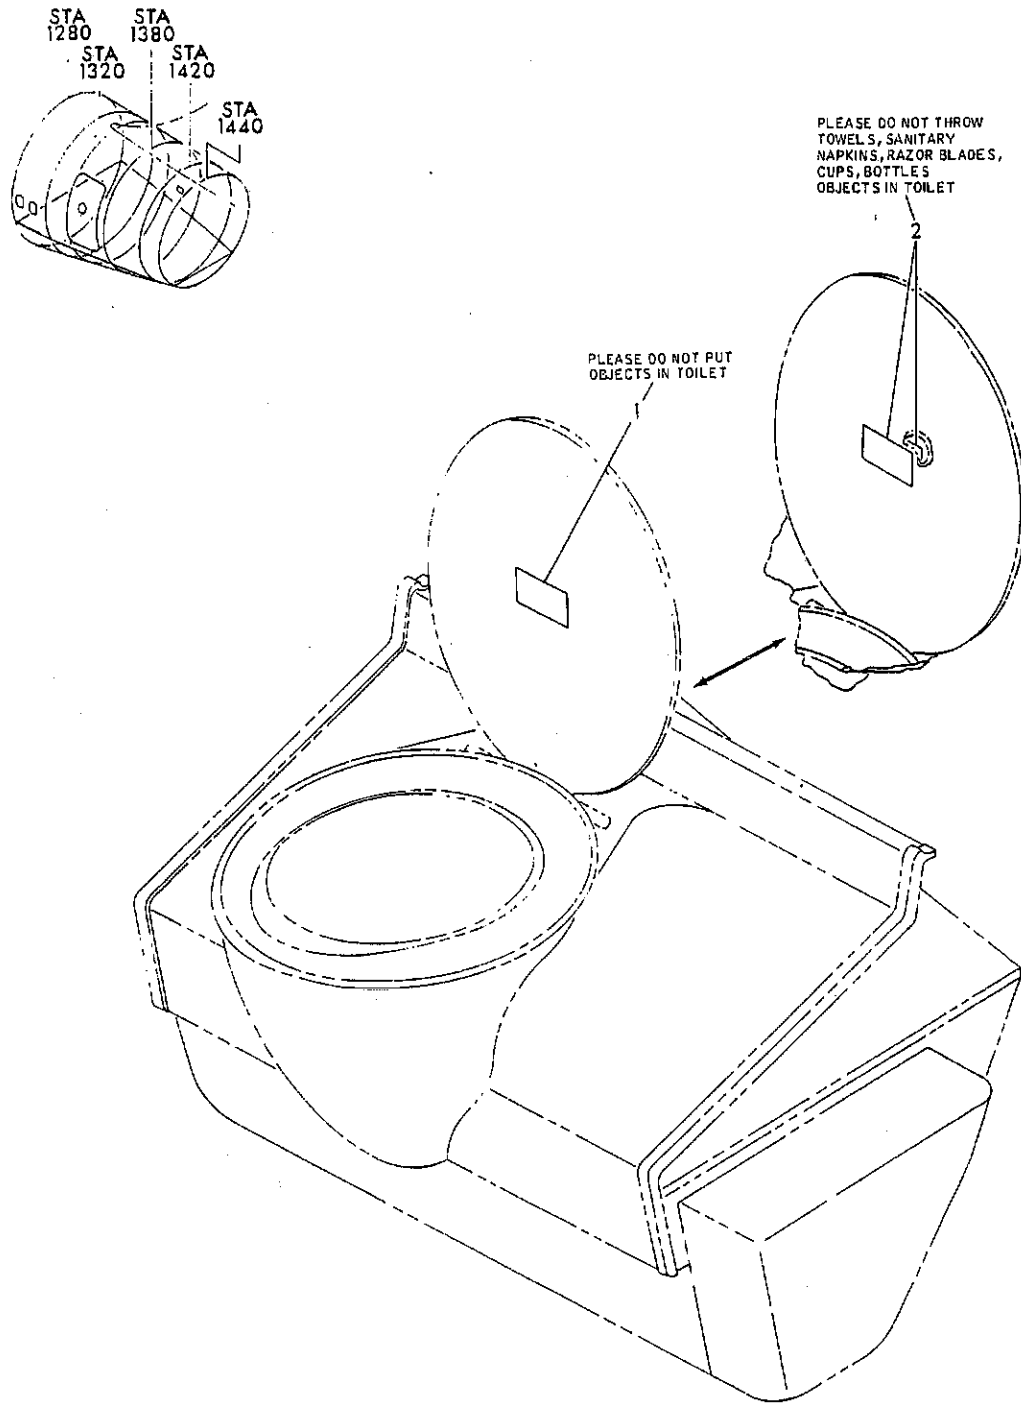 


FIGURE 88H. TOILET INSTL, AFT COMPARTMENT E (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R R R R R R R R R R R R R R R	88H	65-29979-6	TOILET INSTL, AFT COMPARTMENT E (REQUIRED PLACARDS. . . ONLY) (SEE 25-1, FIG. 34A, ITEM 13, 25-1, FIG. 34B, ITEM 18, 25-1, FIG. 35, ITEM 16, 25-1, FIG. 35A, ITEM 18, 25-1, FIG. 35C, ITEM 18, 25-1, FIG. 35D, ITEM 18, 25-1, FIG. 35E, ITEM 16, 25-1, FIG. 35F, ITEM 17, 25-1, FIG. 35G, ITEM 18, 25-1, FIG. 35H, ITEM 18, 25-1, FIG. 77, ITEM 18, 25-1, FIG. 87, ITEM 17, 25-1, FIG. 97, ITEM 17, 25-1, FIG. 107, ITEM 19, 25-1, FIG. 127, ITEM 16, 25-1, FIG. 129, ITEM 22, 25-1, FIG. 149, ITEM 19, 25-1, FIG. 149A, ITEM 29, 25-1, FIG. 159, ITEM 15, 25-1, FIG. 161, ITEM 20, 25-1, FIG. 171, ITEM 22, 25-1, FIG. 172, ITEM 25, 25-1, FIG. 173, ITEM 34, 25-1, FIG. 175, ITEM 17, 25-1, FIG. 176, ITEM 41, 25-1, FIG. 177, ITEM 48, 25-1, FIG. 178, ITEM 26, 25-1, FIG. 181, ITEM 20, 25-1, FIG. 183, ITEM 22, 25-1, FIG. 195, ITEM 23, 25-1, FIG. 204, ITEM 103, 25-1, FIG. 22D, ITEM 26, 25-1, FIG. 233, ITEM 33, 25-1, FIG. 265, ITEM 32 AND 25-15, FIG. 14A, ITEM 16)							0150	RF
		65-29979-6	TOILET INSTL, AFT COMPARTMENT E (REQUIRED PLACARDS. . . ONLY) (VARIABLE DWG: 65-29979-5004) (SEE 25-1, FIG. 180, ITEM 76 AND 25-1, FIG. 180C, ITEM 82 AND . SCOTCH-CAL, PLEASE DO NOT PUT OBJECTS IN TOILET . . . FOR REFERENCE TO OTHER TOILET DETAILS, SEE NHA. . .							5199	RF
	1	BACM9L52-10C								0150	L
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

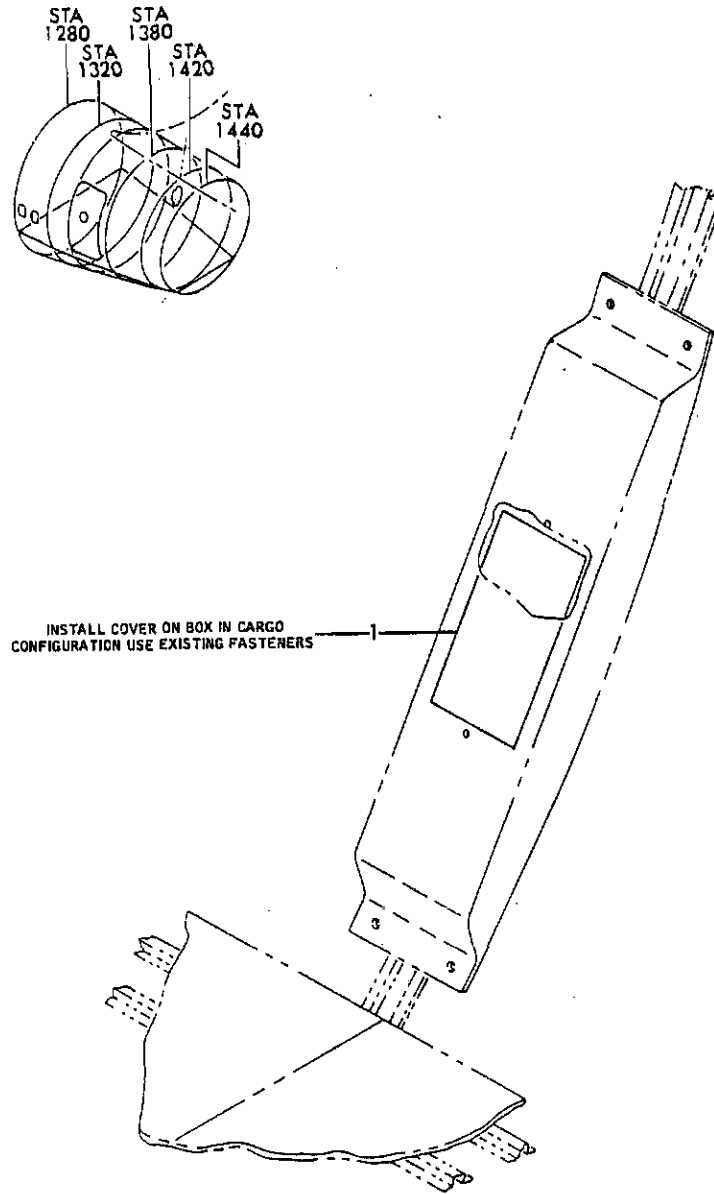 


FIGURE 9L. COVER ASSY, LAVATORY ELECTRICAL SERVICES (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
91	65-38915-1	COVER ASSY, LAVATORY ELECTRICAL SERVICES (REQUIRED. . . PLACARDS ONLY) (SEE NUMERICAL ITEM FOR APPLICABLE NHA)								RF
1	BACM10C34BW	. MARKER-ALUMINUM FOIL, INSTALL COVER ON BOX IN CARGO . CONFIGURATION USE EXISTING FASTENERS . FOR REFERENCE TO OTHER COVER DETAILS, SEE NHA								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

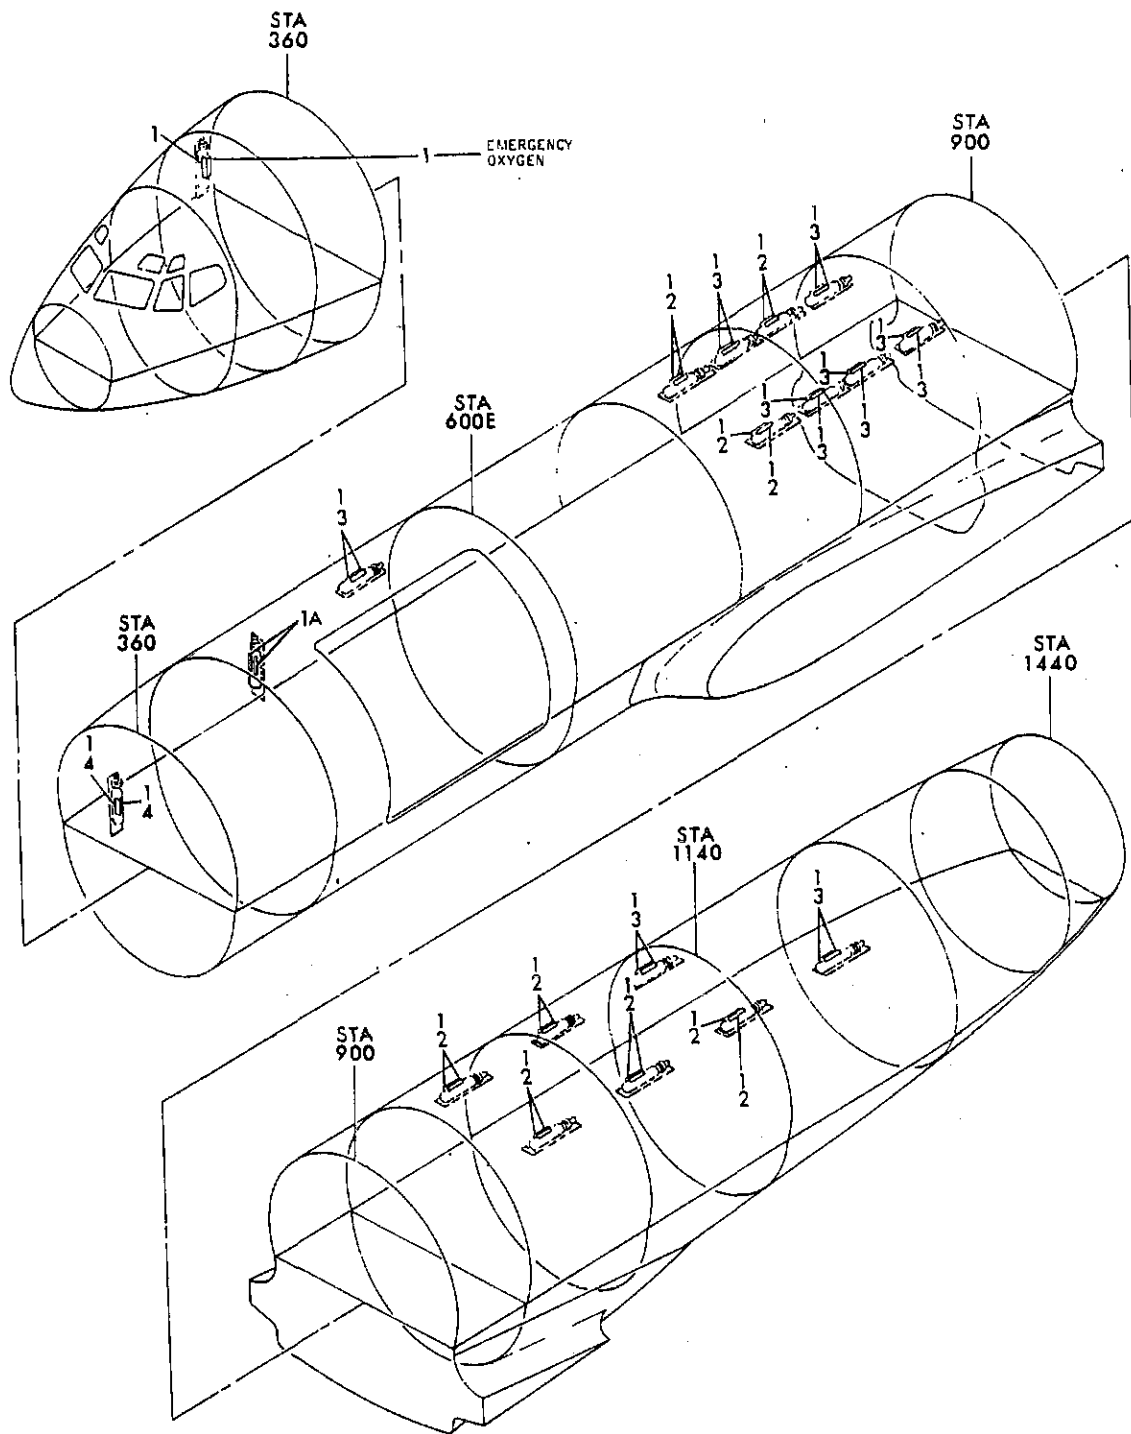 


FIGURE 95. SUPPORT ASSY, OXYGEN BOTTLE PLACARD (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R R	95	65-31944-22	SUPPORT ASSY, OXYGEN BOTTLE PLACARD (REQUIRED PLACARDS ONLY) (SEE 35-2, FIG. 28, ITEM 9, 35-2, FIG. 28A, ITEM 1, 35-2, FIG. 28B, ITEM 13, 35-2, FIG. 42, ITEM 2 AND 35-2, FIG. 43, ITEM 2)							0150	RF
		65-42526-3	SUPPORT ASSY, OXYGEN BOTTLE PLACARD (REQUIRED PLACARDS ONLY) (SEE 35-2, FIG. 37, ITEM 1)							0150	RF
	1	65-7264-6	. PLACARD, EMERGENCY OXYGEN							0150	2
	1	65-7264-6	. PLACARD, EMERGENCY OXYGEN							0150	2
			. FOR REFERENCE TO OTHER SUPPORT DETAILS, SEE NHA . . .							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

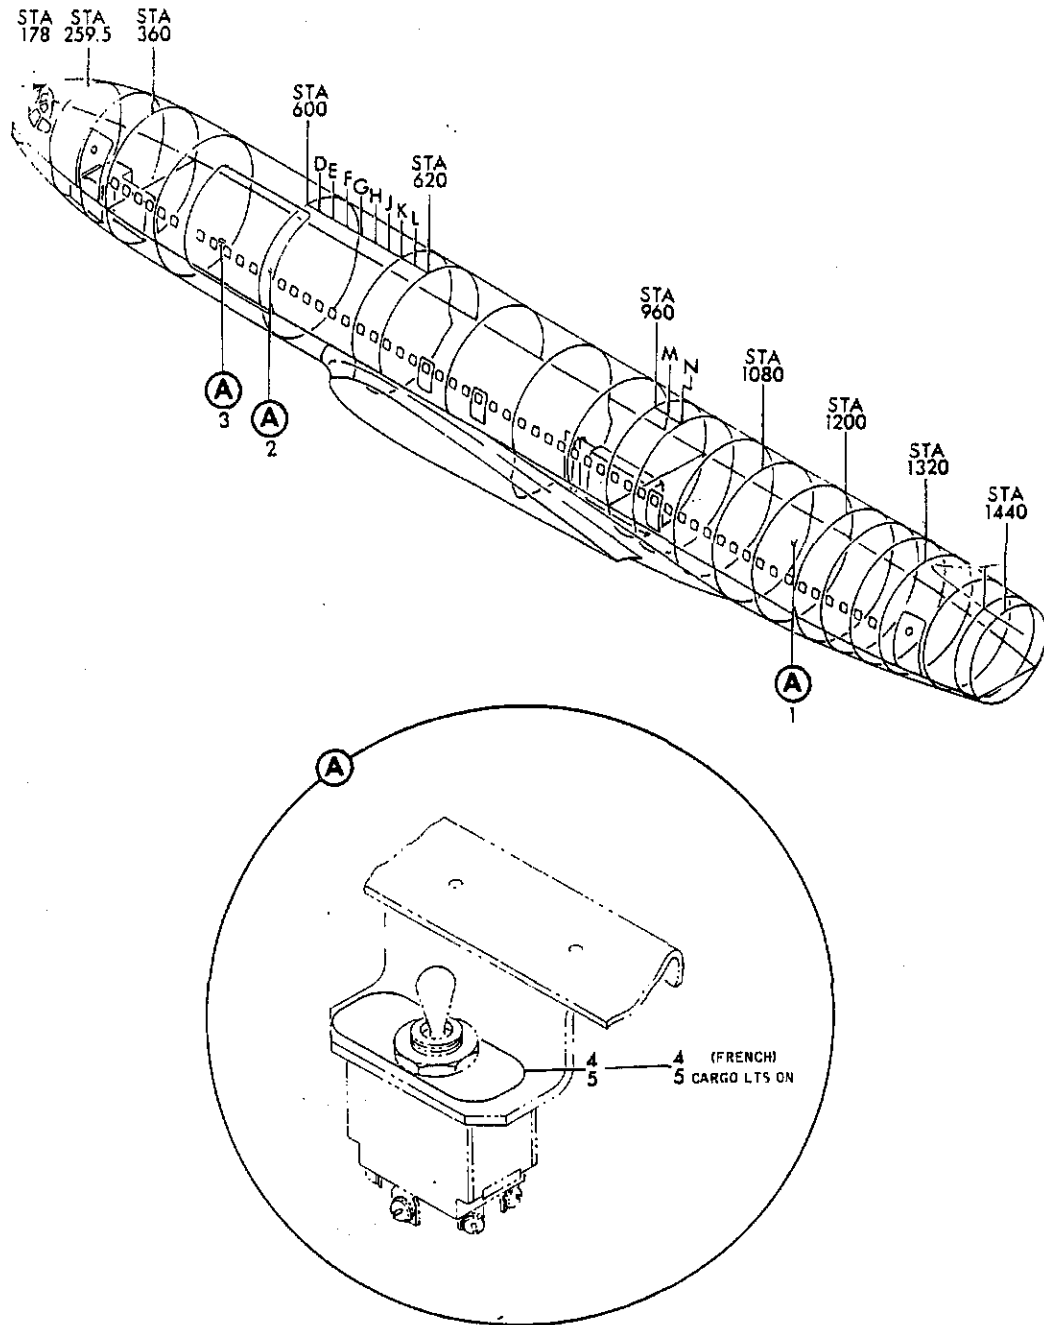 


FIGURE 100. SWITCH INSTL, CARGO VIEWING HOLE (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
100	1	66-2541	SWITCH INSTL, CARGO VIEWING HOLE (REQUIRED PLACARDS . . ONLY) (SEE 24-3, FIG. 3, ITEM 9)								RF
	5	BACM10L10-4PA	. METAL-CAL, CARGO LTS ON (USED ON 66-2541) FOR REFERENCE TO OTHER SWITCH DETAILS, SEE NHA. . . .								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											


 
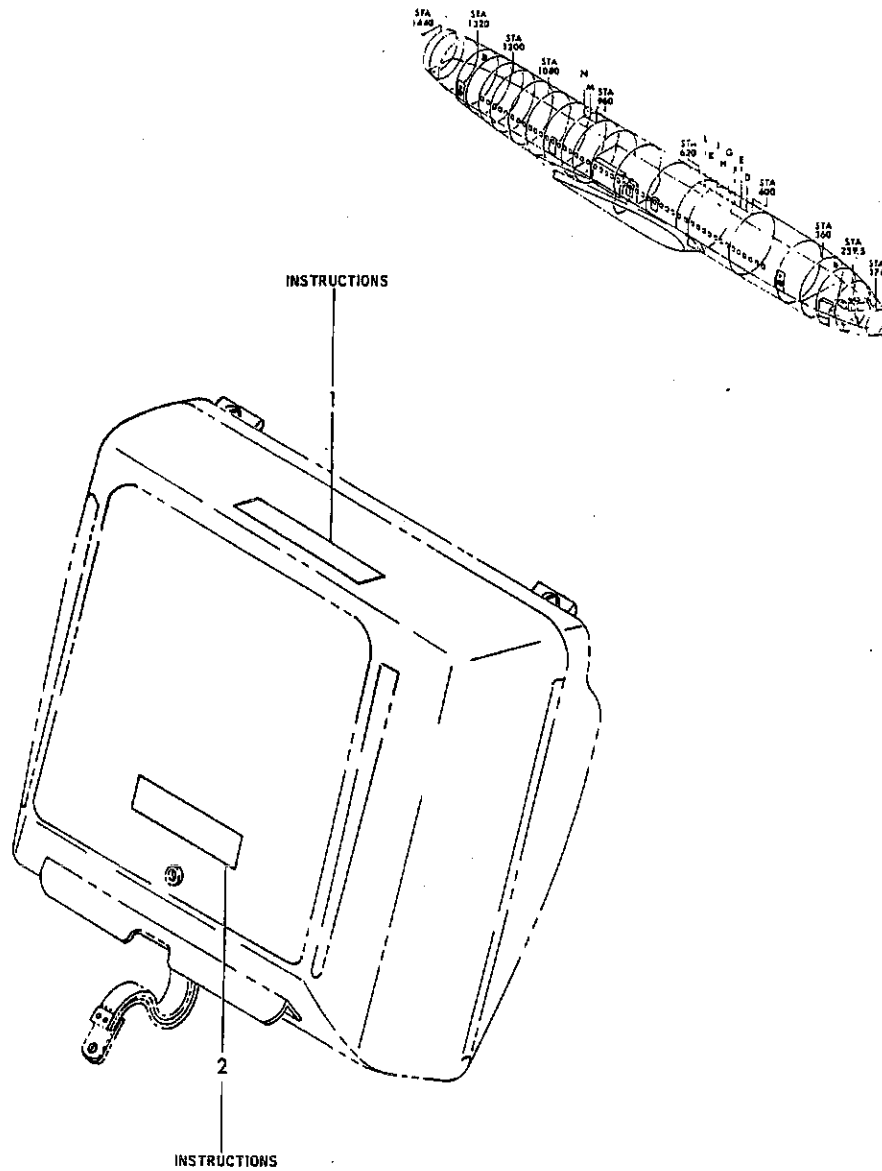 


FIGURE 103. COMPARTMENT ASSY, DOOR MOUNTED ESCAPE SLIDE (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE					EFF FROM TO	UNITS PER ASSY		
			1	2	3	4	5	6	7		
R	103	65-51152-1A	COMPARTMENT ASSY, DOOR MOUNTED ESCAPE SLIDE (REQUIRED . PLACARDS ONLY) (DELETED BY SB 2827) (SEE 25-18, FIG. 63E, ITEM 1, 25-18, FIG. 63F, ITEM 1, 25-18 FIG. 63G, ITEM 1 AND 25-18, FIG. 63H, ITEM 1)							0450	RF
R		65-51152-2	COMPARTMENT ASSY, DOOR MOUNTED ESCAPE SLIDE (REQUIRED . PLACARDS ONLY) (DELETED BY SB 2827) (SEE 25-18, FIG. 63E, ITEM 1, 25-18, FIG. 63F, ITEM 1, 25-18, FIG. 63G, ITEM 1 AND 25-18, FIG. 63H, ITEM 1)							0450	RF
R		65-51152-33	COMPARTMENT ASSY, DOOR MOUNTED ESCAPE SLIDE (REQUIRED . PLACARDS ONLY) (ADDED BY SB 2827) (SEE 25-18, FIG. 63E, ITEM 1, 25-18, FIG. 63F, ITEM 1 25-18, FIG. 63G, ITEM 1 AND 25-18, FIG. 63H, ITEM 1)							0150	RF
R		65-51152-2C	COMPARTMENT ASSY, DOOR MOUNTED ESCAPE SLIDE (REQUIRED . PLACARDS ONLY) (DELETED BY SB 2827) (SEE 25-18, FIG. 63E, ITEM 1, 25-18, FIG. 63F, ITEM 1, 25-18, FIG. 63G, ITEM 1 AND 25-18, FIG. 63H, ITEM 1)							0103	RF
R		65-51152-78	COMPARTMENT ASSY, DOOR MOUNTED ESCAPE SLIDE (REQUIRED . PLACARDS ONLY) (SEE 25-18, FIG. 63E, ITEM 1, 25-18, FIG. 63F, ITEM 1, 25-18, FIG. 63G, ITEM 1 AND 25-18, FIG. 63H, ITEM 1)							5199	RF
R	1	69-39715-5	. PLACARD, INSTRUCTIONS (DELETED BY SB 2827).							0450	1
R	1	69-55015-1	. PLACARD, INSTRUCTIONS (ADDED BY SB 2827).							0450	1
R	1	69-55015-1	. PLACARD, INSTRUCTIONS (ADDED BY SB 2730).							0150	1
R	1	69-55015-1	. PLACARD, INSTRUCTIONS (USED ON 65-51152-17, -21, -29, -51, -57, -60 AND ALL SUFFIX LETTERS, -27A, -33E, -35A, -36A, -62A, -63A AND -66A)							5199	1
R	2	69-39715-2	. PLACARD, INSTRUCTIONS							0150	1
R			. FOR REFERENCE TO OTHER COMPARTMENT DETAILS, SEE NHA .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

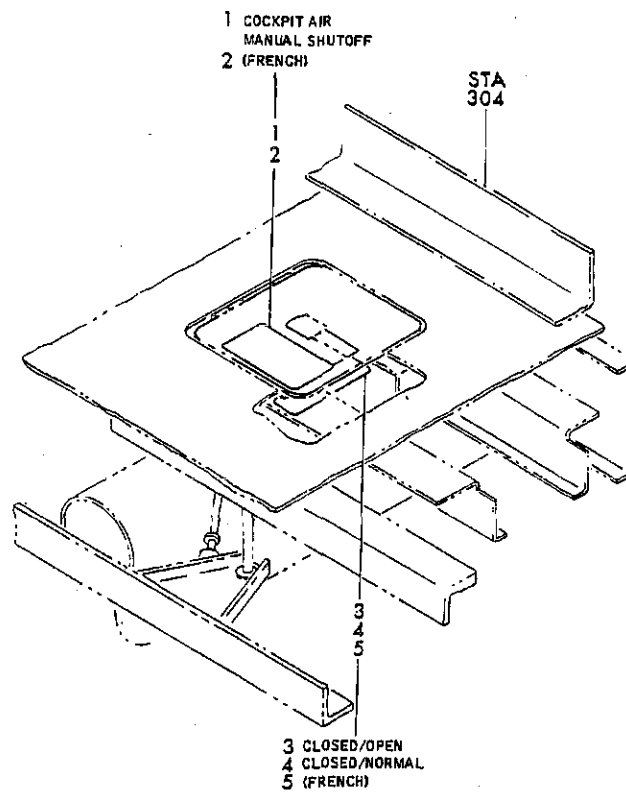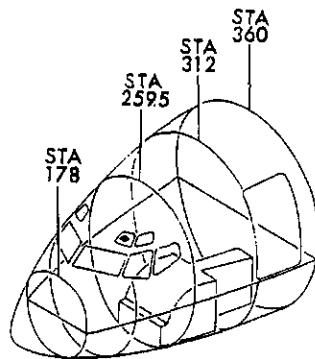 

DOOR ASSY, MANUAL AIR SHUT OFF (REQUIRED PLACARDS ONLY)
FIGURE 106. CHANNEL ASSY, CREW COMPARTMENT FLOOR SUPPORT (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
106		DOOR ASSY, MANUAL AIR SHUTOFF (REQUIRED PLACARDS ONLY)								
	66-4963	CHANNEL ASSY, CREW COMPARTMENT FLOOR SUPPORT (REQUIRED PLACARDS ONLY)								RF
1	BACM10A21-7CJ	. DOOR ASSY, MANUAL AIR SHUTOFF (REQUIRED PLACARDS. . . ONLY) (SEE 53-3, FIG. 2, ITEM 2)								1
	69-5477	. . METAL-CAL, COCKPIT AIR MANUAL SHUTOFF								RF
		. . FOR REFERENCE TO OTHER DOOR DETAILS, SEE NHA. . . .								
3	BACM10L33-7BZ	. CHANNEL ASSY, CREW COMPARTMENT FLOOR SUPPORT. (REQUIRED PLACARDS ONLY) (SEE 53-3, FIG. 2, ITEM 3)								1
		. . METAL-CAL, CLOSED/OPEN.								
		. . FOR REFERENCE TO OTHER CHANNEL DETAILS, SEE NHA . .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										


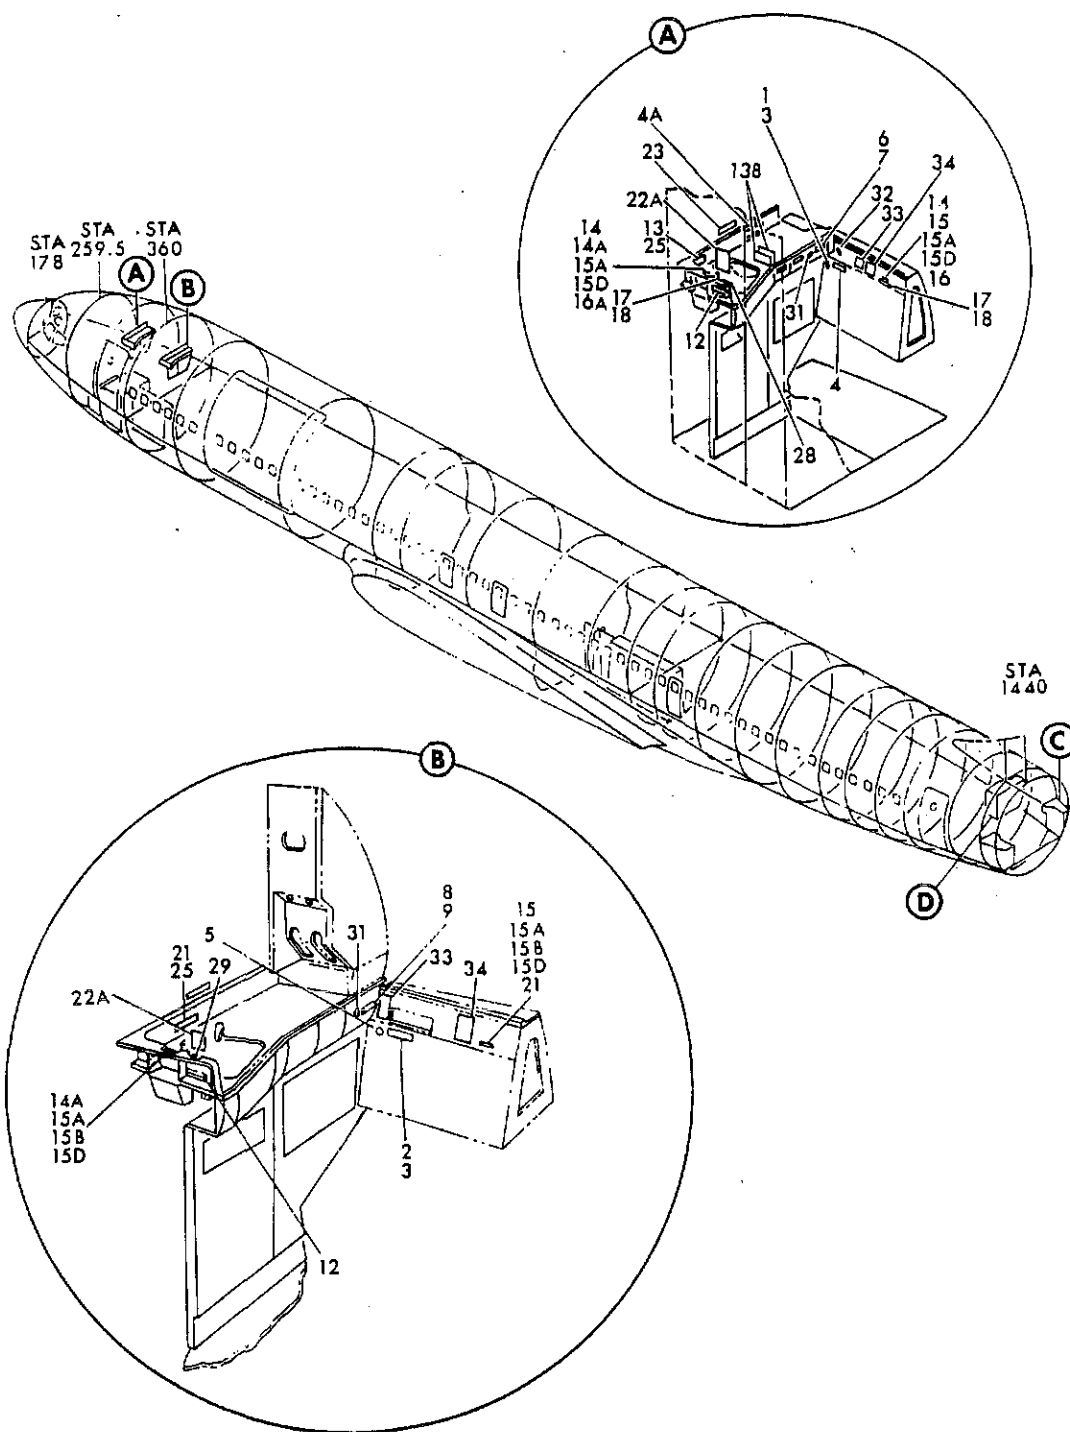 


FIGURE 107. LAVATORY INSTL, TOILET A, B, C, D AND E (REQUI(REG PLACARDS ONLY) (SHEET 1)

 

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
107	65-6333-41	LAVATORY INSTL, TOILET A (REQUIRED PLACARDS ONLY) . . . (REWORKED BY SB 3146 AND SB 3159) (SEE 25-15, FIG. 14A, ITEM 30)	0450	RF
	65-6333-105	LAVATORY INSTL, TOILET A (REQUIRED PLACARDS ONLY) (SEE 25-15, FIG. 13M, ITEM 30)	5151	RF
	65-6109-63	LAVATORY INSTL, TOILET C (REQUIRED PLACARDS ONLY) . . . (REWORKED BY SB 3146 AND SB 3159) (SEE 25-15, FIG. 14A, ITEM 32)	0450	RF
	65-6109-121	LAVATORY INSTL, TOILET C (REQUIRED PLACARDS ONLY) (SEE 25-15, FIG. 13M, ITEM 31)	5151	RF
	65-6109-64	LAVATORY INSTL, TOILET D (REQUIRED PLACARDS ONLY) . . . (REWORKED BY SB 3146 AND SB 3159) (SEE 25-15, FIG. 14A, ITEM 33)	0450	RF
	65-6109-122	LAVATORY INSTL, TOILET D (REQUIRED PLACARDS ONLY) (SEE 25-15, FIG. 13M, ITEM 32)	5151	RF
13B	BAC27CPA662	. PLACARD, NO SMOKING (ADDED BY SB 3159)	0450	2
14A	BAC27CPA664	. PLACARD, NO CIGARETTE DISPOSAL (ADDED BY SB 3146 . . . AND SB 3159)	0450	1
16	BAC27CPA664	. PLACARD, NO CIGARETTE DISPOSAL (ADDED BY SB 3159) . .	0450	1
23	719-1415	. PLACARD, AS A COURTESY TO THE NEXT PASSENGER MAY WE SUGGEST THAT YOU USE YOUR TOWEL TO WIPE OFF WASH BASIN. THANK YOU. (TOILETS A, C AND D) (V0563B) (ADDED BY SVA E.O. 80891)	5151	1
		. FOR REFERENCE TO OTHER LAVATORY DETAILS, SEE NHA. . .	0451	
MISSING ITEM NUMBERS ARE NOT APPLICABLE				


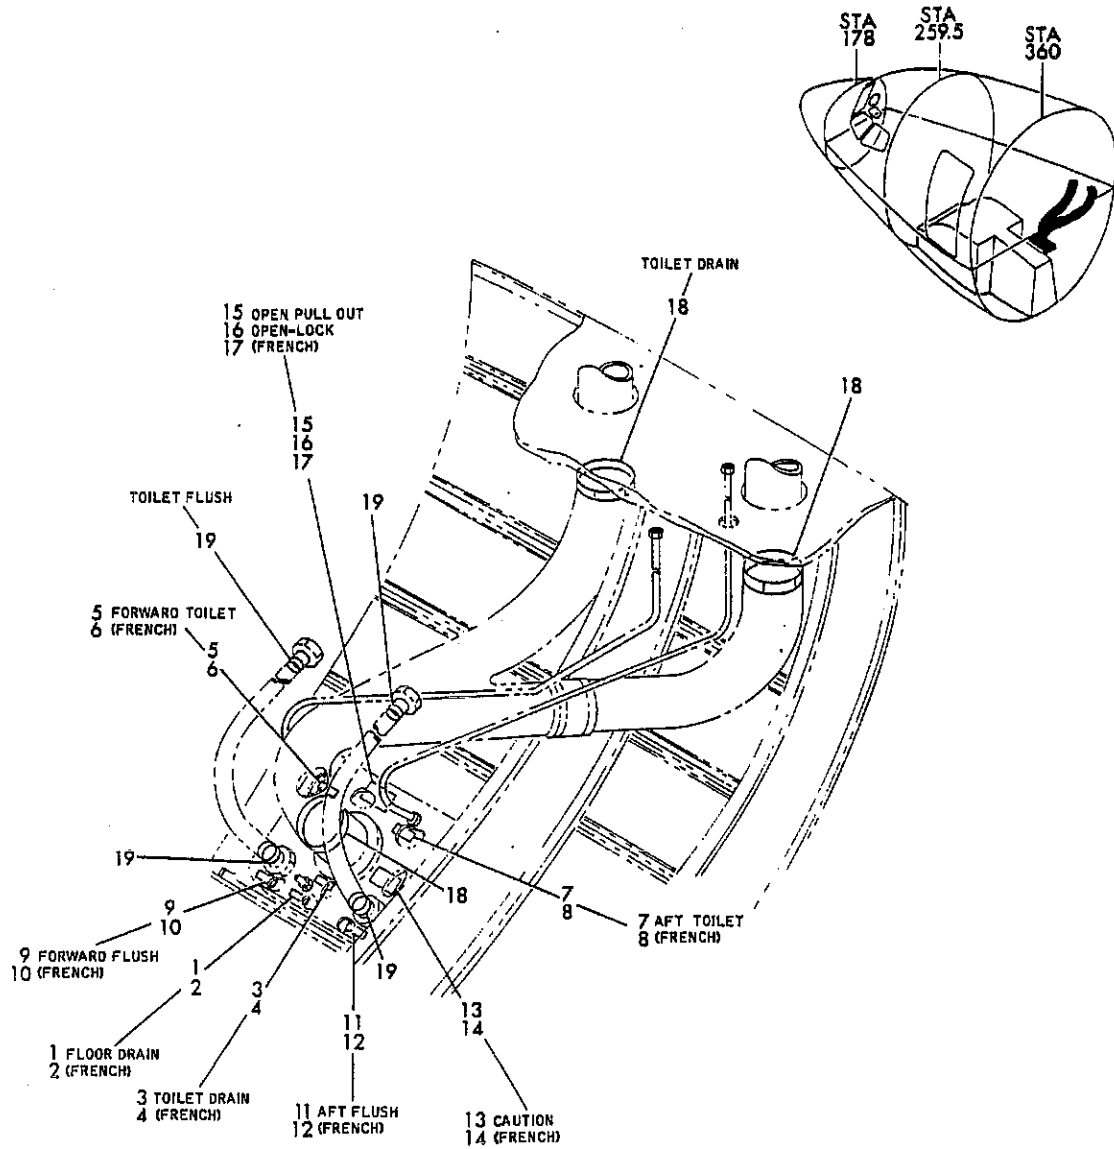 


FIGURE 110. DRAIN INSTL, FORWARD TOILETS (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER		1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R R R R R	110	65-6958			DRAIN INSTL, FORWARD TOILETS (REQUIRED PLACARDS ONLY) . (SEE 25-15, FIG. 1, ITEM 14, 25-15, FIG. 2, ITEM 29, 25-15, FIG. 3, ITEM 26, 25-15, FIG. 4, ITEM 29, 25-15, FIG. 5, ITEM 26, 25-15, FIG. 6, ITEM 30, 25-15, FIG. 7, ITEM 32, 25-15, FIG. 8, ITEM 32, 25-15, FIG. 9, ITEM 33, 25-15, FIG. 10, ITEM 35, 25-15, FIG. 12, ITEM 28, 25-15, FIG. 12A, ITEM 28, 25-15, FIG. 12E, ITEM 20, 25-15, FIG. 12G, ITEM 20, 25-15, FIG. 12H, ITEM 19, 25-15, FIG. 13, ITEM 22, 25-15, FIG. 13M, ITEM 23, 25-15, FIG. 14A, ITEM 24, 25-15, FIG. 14B, ITEM 30, 25-15, FIG. 14C, ITEM 23, 25-15, FIG. 14D, ITEM 22, 25-15, FIG. 14E, ITEM 22, 25-15, FIG. 14H, ITEM 22, 25-15, FIG. 14J, ITEM 22, 25-15, FIG. 14K, ITEM 20, 25-15, FIG. 14L, ITEM 13, 25-15, FIG. 14M, ITEM 20, 25-15, FIG. 14P, ITEM 20 AND 25-15, FIG. 14Q, ITEM 28)	0150	RF
		65-6958-32			DRAIN INSTL, FORWARD TOILETS (REQUIRED PLACARDS ONLY) . (SEE 25-15, FIG. 13M, ITEM 23)	5199	RF
	1	BACM10D20-1JP			. MARKER-ALUMINUM FOIL, FLOOR DRAIN		1
	3	BACM10D20-1JE			. MARKER-ALUMINUM FOIL, TOILET DRAIN.		1
	5	BACM10L10-1BMA			. MARKER-ALUMINUM FOIL, FORWARD TOILET.		1
	7	BACM10L10-1BMB			. MARKER-ALUMINUM FOIL, AFT TOILET.		1
	9	BACM10L10-1BLZ			. MARKER-ALUMINUM FOIL, FORWARD FLUSH		1
	11	BACM10L10-1BLY			. MARKER-ALUMINUM FOIL, AFT FLUSH		1
	13	BACM10L1DSV			. MARKER-ALUMINUM FOIL, CAUTION		1
	16	BACM9L30-10AK			. SCOTCH-CAL, OPEN-LOCK		1
					. FOR REFERENCE TO OTHER DRAIN DETAILS, SEE NHA		
	MISSING ITEM NUMBERS ARE NOT APPLICABLE						

 

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	111	65-14007-43	DRAIN INSTL, AFT TOILETS (REQUIRED PLACARDS ONLY) (SEE 25-15, FIG. 13M, ITEM 24 AND 25-15, FIG. 14N, ITEM 21)							5199	RF
R											
R	1	8ACM10D20-1JE	. MARKER-ALUMINUM FOIL, TOILET DRAIN.							5199	1
R	2	BACM10L10-1BMT	. MARKER-ALUMINUM FOIL, AFT RH FLUSH.							5199	1
R	3	BACM10L10-1BLZ	. MARKER-ALUMINUM FOIL, FWD RH FLUSH.							5199	1
R	4	BACM10L10-1BLY	. MARKER-ALUMINUM FOIL, AFT LH FLUSH.							5199	1
R	4	BACM10L10-1BMS	. MARKER-ALUMINUM FOIL, AFT LH FLUSH.							5199	1
R	5	BACM10L10-1BLZ	. MARKER-ALUMINUM FOIL, AFT RH TOILET							5199	1
R	6	BACM10L10-1BMA	. MARKER-ALUMINUM FOIL, FWD RH TOILET							5199	1
R	7	BACM10L10-1BMB	. MARKER-ALUMINUM FOIL, AFT LH TOILET							5199	1
R	7	BACM10L10-1BMU	. MARKER-ALUMINUM FOIL, AFT LH TOILET							5199	1
R	8	BACM10L1DSW	. MARKER-ALUMINUM FOIL, CAUTION							5199	1
R	12	BACMBL20-9A	. SCOTCH-CAL, OPEN-CLOSE.							5199	1
			. FOR REFERENCE TO OTHER DRAIN DETAILS, SEE NHA							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

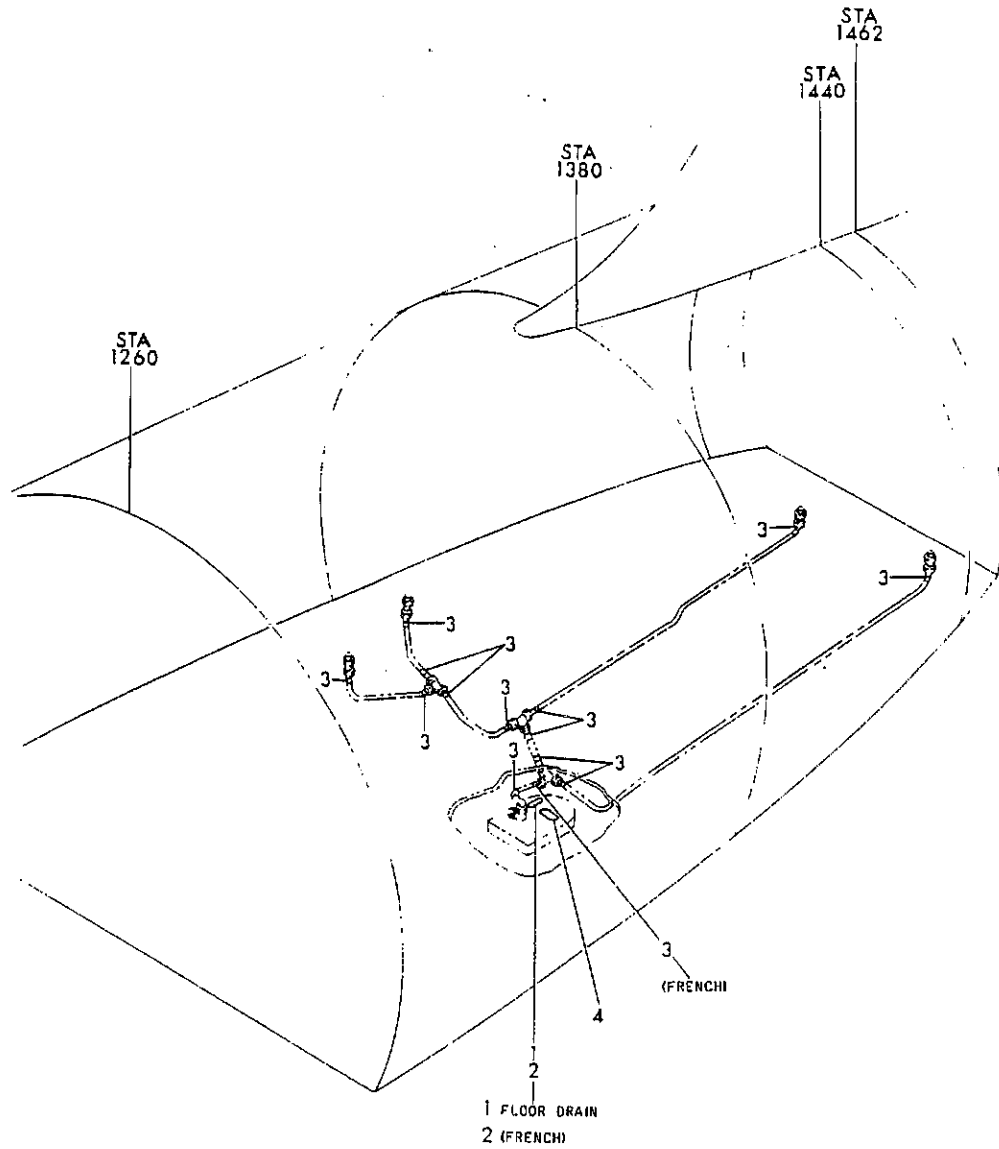 


FIGURE 114. DRAIN INSTL, AFT TOILET FLOOR (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R R R R R R R R	114	69-44030-11	DRAIN INSTL, AFT TOILET FLOOR (REQUIRED PLACARDS ONLY) (SEE 25-15, FIG. 1, ITEM 36, 25-15, FIG. 4, ITEM 31, 25-15, FIG. 6, ITEM 32, 25-15, FIG. 8, ITEM 35, 25-15, FIG. 9, ITEM 34A, 25-15, FIG. 13, ITEM 24, 25-15, FIG. 13M, ITEM 25, 25-15, FIG. 14A, ITEM 26, 25-15, FIG. 14B, ITEM 29, 25-15, FIG. 14C, ITEM 25, 25-15, FIG. 14D, ITEM 24, 25-15, FIG. 14E, ITEM 24, 25-15, FIG. 14H, ITEM 24, 25-15, FIG. 14J, ITEM 24, 25-15, FIG. 14K, ITEM 22, 25-15, FIG. 14L, ITEM 27, 25-15, FIG. 14M, ITEM 22, 25-15, FIG. 14P, ITEM 22, 25-15, FIG. 14R, ITEM 42 AND 25-15, FIG. 14U, ITEM								1
	1	BACM10D20-1JP	. MARKER-ALUMINUM FOIL, FLOOR DRAIN FOR REFERENCE TO OTHER DRAIN DETAILS, SEE NHA								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

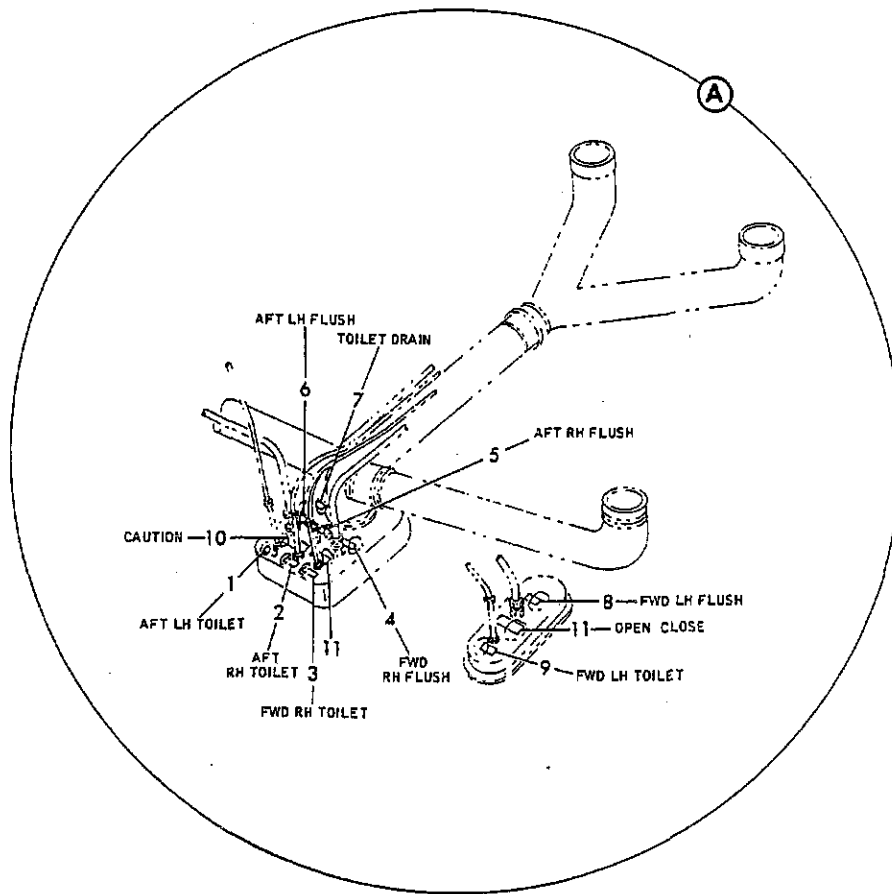 
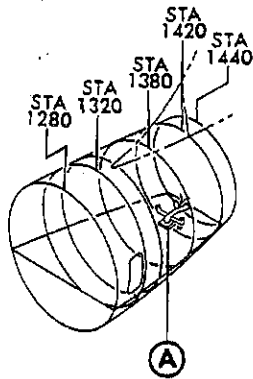 


FIGURE 115. DRAIN INSTL, AFT TOILETS (REQUIRED PLACARDS ONLY)

MISSING ITEM NUMBERS ARE NOT APPLICABLE

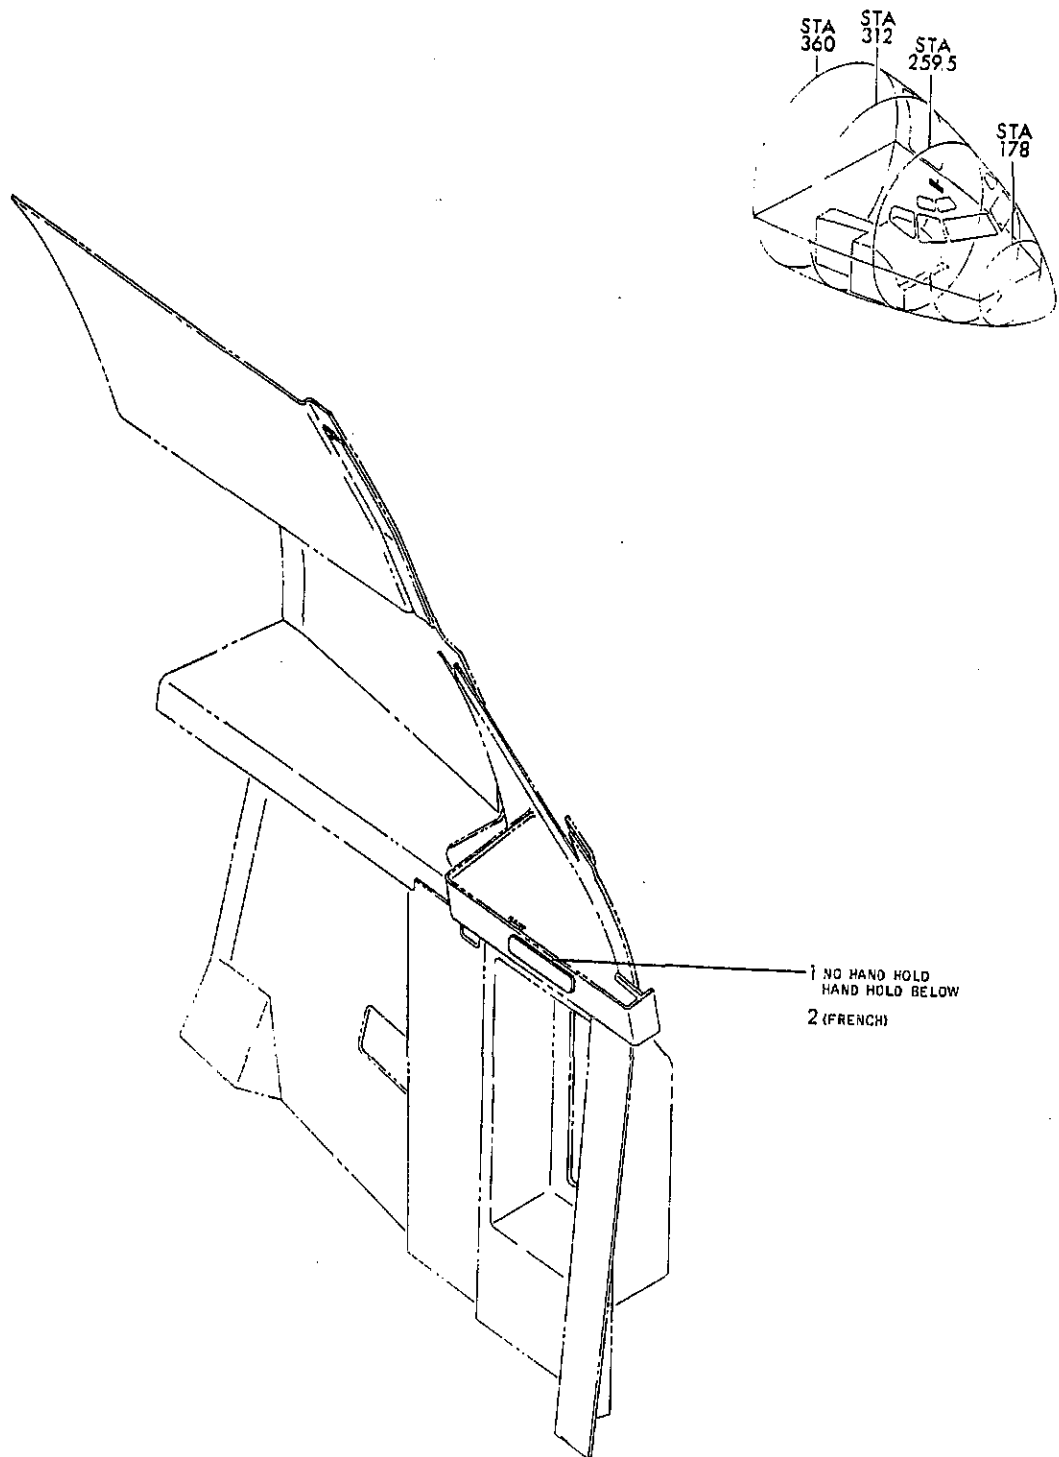 


FIGURE 119. PANEL INSTL, STATION 259.5 TO 302 LOWER SIDEWALL (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
119	65-1911	PANEL INSTL, STATION 259.5 TO 302 LOWER SIDEWALL. . . .								RF
		(REQUIRED PLACARDS ONLY) (SEE 25-5, FIG. 14, ITEM								
		52)								
1	BACM10H62-5K	. MARKER-ALUMINUM FOIL, NO HAND HOLD HAND HOLD BELOW. .								1
		. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

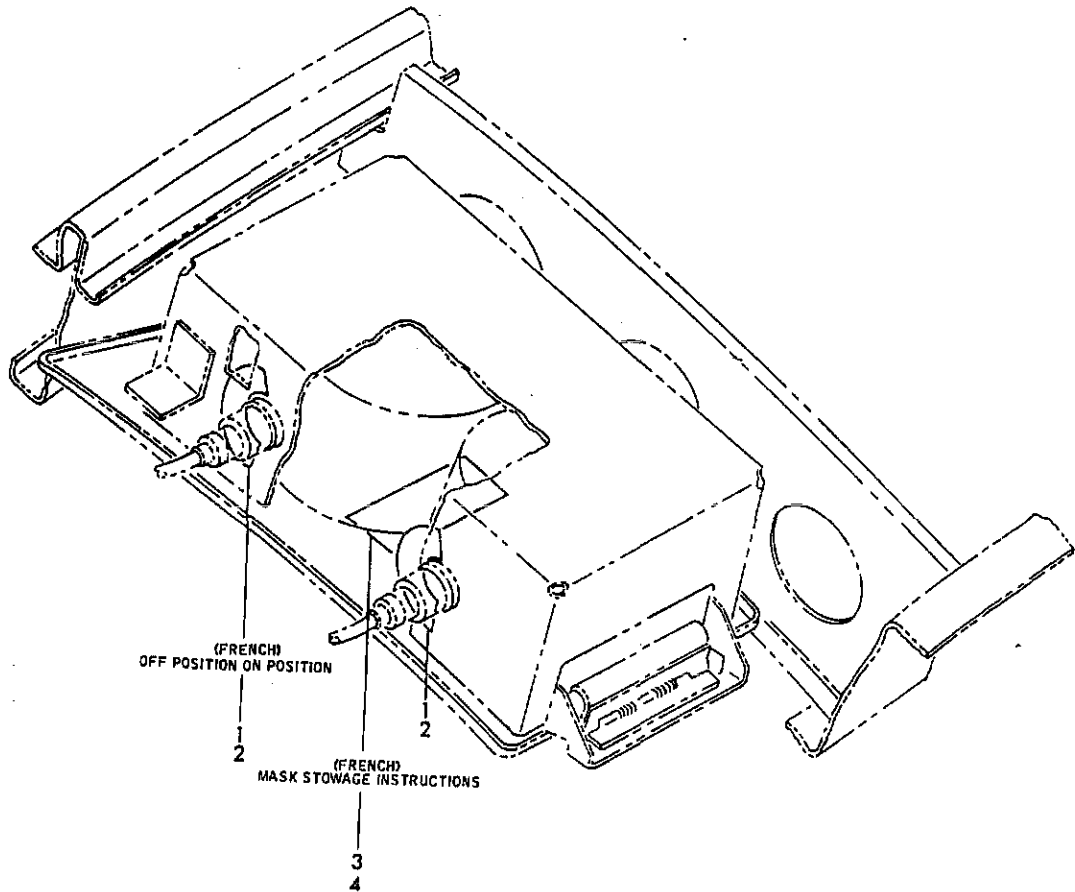 
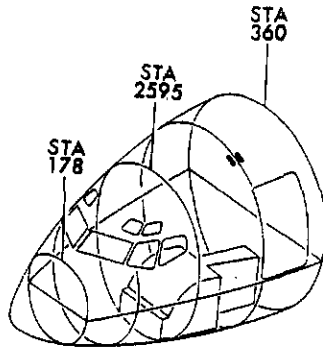 


FIGURE 121. MASK AND AIR CONTAINER INSTL, FORWARD ATTENDANTS OXYGEN (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R	121	65-6577-1C	MASK AND CONTAINER INSTL, FORWARD ATTENDANTS OXYGEN . . (REQUIRED PLACARDS ONLY) (SEE 25-18, FIG. 17E, ITEM 33 AND 25-18, FIG. 17Q, ITEM 27)							0150	RF
		65-6577-1AD	MASK AND CONTAINER INSTL, FORWARD ATTENDANTS OXYGEN . . (REQUIRED PLACARDS ONLY) (SEE 25-18, FIG. 16L, ITEM 34, 25-18, FIG. 16R, ITEM 43, 25-18, FIG. 16S, ITEM 36, 25-18, FIG. 18A, ITEM 34, 25-18, FIG. 18C, ITEM 55 AND 25-18, FIG. 221, ITEM 39)							5199	RF
	2	BACM9P21-4A	. SCOTCH-CAL, OFF POSITION ON POSITION.								2
	4	BACM9M21-1B	. SCOTCH-CAL, MASK STOWAGE INSTRUCTIONS FOR REFERENCE TO OTHER MASK AND CONTAINER DETAILS,. . SEE NHA								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

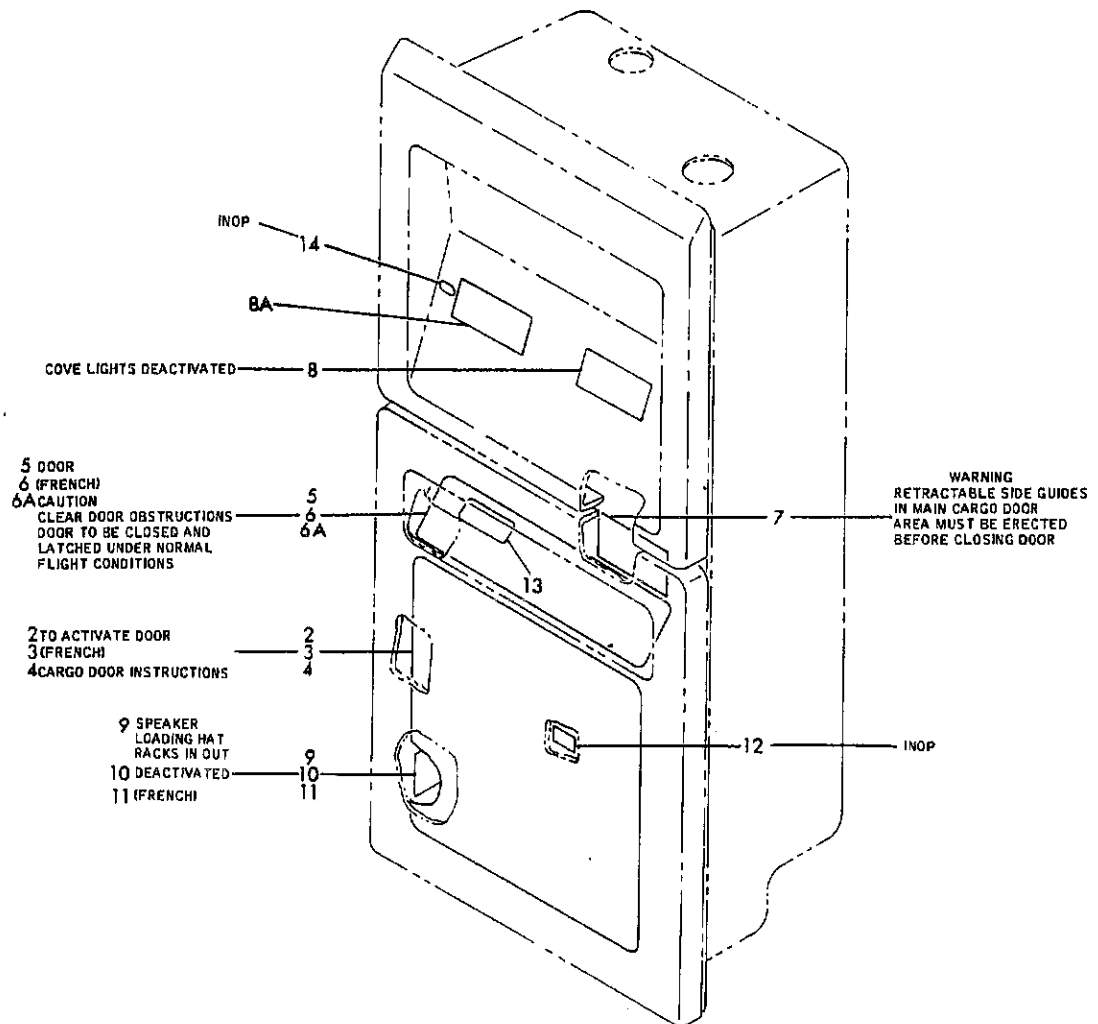 
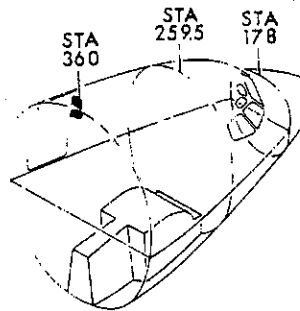 


FIGURE 122. PANEL INSTL, CARGO ATTENDANTS (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R R R R R R R	122	65-36748-19		PANEL INSTL, CARGO ATTENDANTS (REQUIRED PLACARDS ONLY) (SEE 25-18, FIG. 11B, ITEM 30, 25-18, FIG. 14M, ITEM 47, 25-18, FIG. 15, ITEM 45, 25-18, FIG. 15A, ITEM 50, 25-18, FIG. 15G, ITEM 48, 25-18, FIG. 15H, ITEM 40, 25-18, FIG. 16, ITEM 46, 25-18, FIG. 16G, ITEM 47, 25-18, FIG. 16H, ITEM 50, 25-18, FIG. 16K, ITEM 50, 25-18, FIG. 16M, ITEM 49, 25-18, FIG. 16N, ITEM 49, 25-18, FIG. 17C, ITEM 54, 25-18, FIG. 17D, ITEM 58, 25-18, FIG. 17F, ITEM 52, 25-18, FIG. 17H, ITEM 40, 25-18, FIG. 17J, ITEM 41, 25-18, FIG. 17K, ITEM 52, 25-18, FIG. 17L, ITEM 52, 25-18, FIG. 17M, ITEM 54, 25-18, FIG. 17N, ITEM 40, 25-18, FIG. 17P, ITEM 50, 25-18, FIG. 17Q, ITEM 38, 25-18, FIG. 17R, ITEM 38, 25-18, FIG. 17S, ITEM 47, 25-18, FIG. 17T, ITEM 47, 25-18, FIG. 17V, ITEM 50, 25-18, FIG. 17W, ITEM 42, 25-18, FIG. 17X, ITEM 47, 25-18, FIG. 17Y, ITEM 55 AND 25-18, FIG. 17Z, ITEM 47)	0150	RF
		65-36748-30		PANEL INSTL, CARGO ATTENDANTS (REQUIRED PLACARDS ONLY) (SEE 25-10, FIG. 330, ITEM 47)	5199	RF
		69-29207-16		. DOOR ASSY, (REQUIRED PLACARDS ONLY) (OPTIONALS 69-29207-13, -14)	0150	RF
		69-29207-14		. DOOR ASSY, (REQUIRED PLACARDS ONLY) (OPTIONAL TO 69-29207-16)	0150	RF
		69-29207-13		. DOOR ASSY, (REQUIRED PLACARDS ONLY) (OPTIONAL TO 69-29207-16)	0150	RF
		69-29207-20		. DOOR ASSY, (REQUIRED PLACARDS ONLY)	5199	RF
	2	BACM10L1EHG		. . MARKER, ALUMINUM FOIL (USED ON 69-29207-13)	0150	1
	2	BACM10D4NK		. . MARKER, ALUMINUM FOIL (USED ON 69-29207-14)	0150	1
	4	BAC27CHY5		. . MARKER, ALUMINUM FOIL		1
	5	BACM10D4MW		. . MARKER, ALUMINUM FOIL		1
	9	BACM10L1DZP		. MARKER, ALUMINUM FOIL	0150	1
	9	BAC27CPAL29		. MARKER, ALUMINUM FOIL	5199	1
	13	BACM10D4MX		. MARKER-ALUMINUM FOIL		1
	14	BAC27DCC351		. MARKER-ALUMINUM FOIL, (ADDED BY SB 3311)	0103 5199	1
			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA			
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

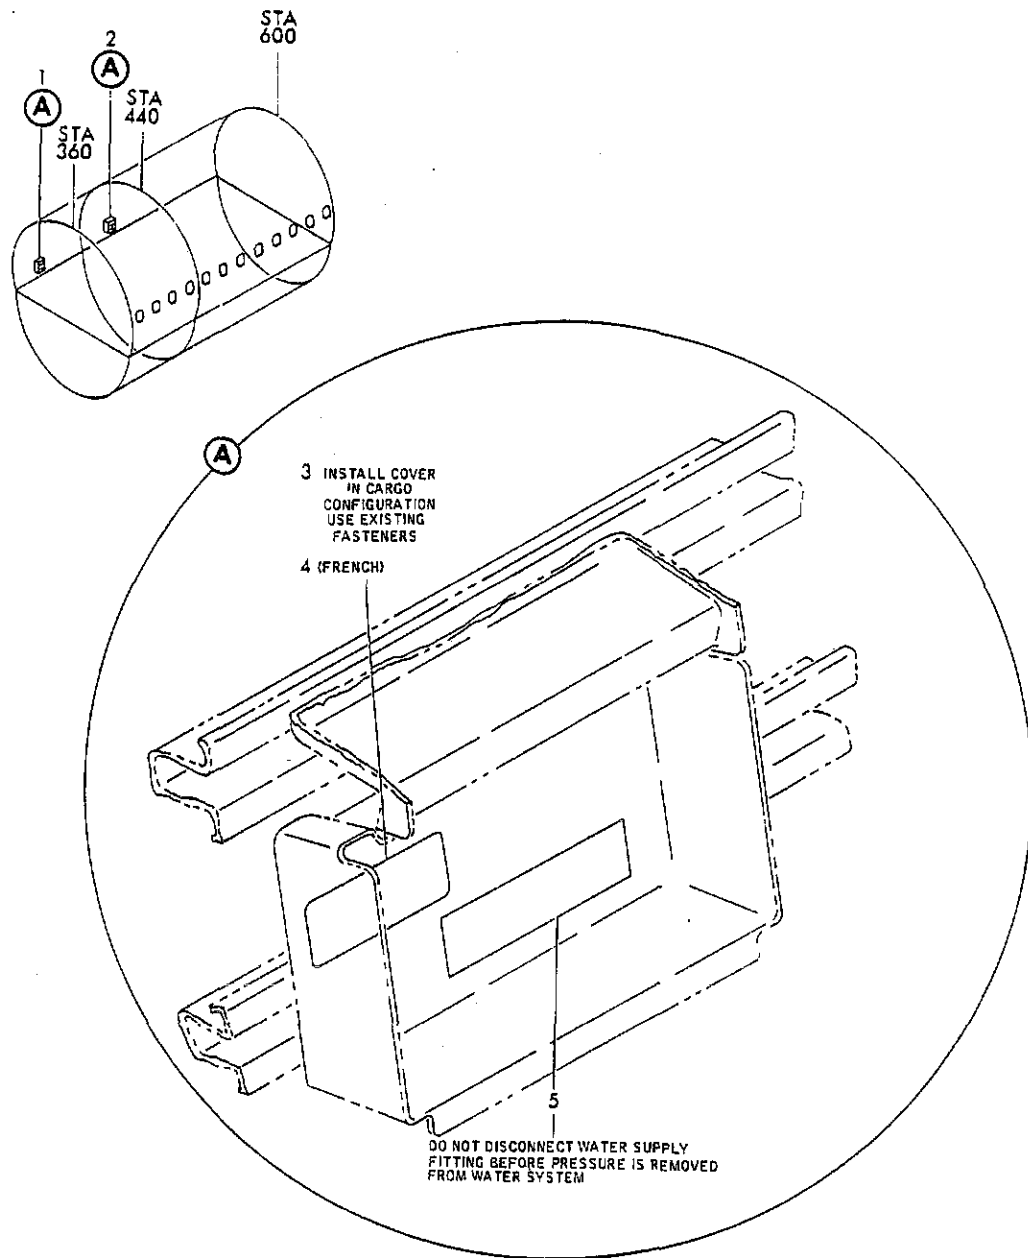 


FIGURE 130. BOX ASSY, GALLEY (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R R R R R R	130	2	65-33164-19 BOX ASSY, GALLEY (REQUIRED PLACARDS ONLY) (SEE 38-2, . . . FIG. 25, ITEM 32)							0150	RF
		2	65-33164-44 BOX ASSY, GALLEY (REQUIRED PLACARDS ONLY) (SEE 38-2, . . . FIG. 25, ITEM 32 AND 38-2, FIG. 25D, ITEM 39)							5199	RF
		3	BACMIOLIDER . MARKER-ALUMINUM FOIL, INSTALL COVER IN CARGO. CONFIGURATION							5199	1
		3	BACMIOLIDER . MARKER-ALUMINUM FOIL, INSTALL COVER IN CARGO. CONFIGURATION . FOR REFERENCE TO OTHER BOX DETAILS, SEE NHA							0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

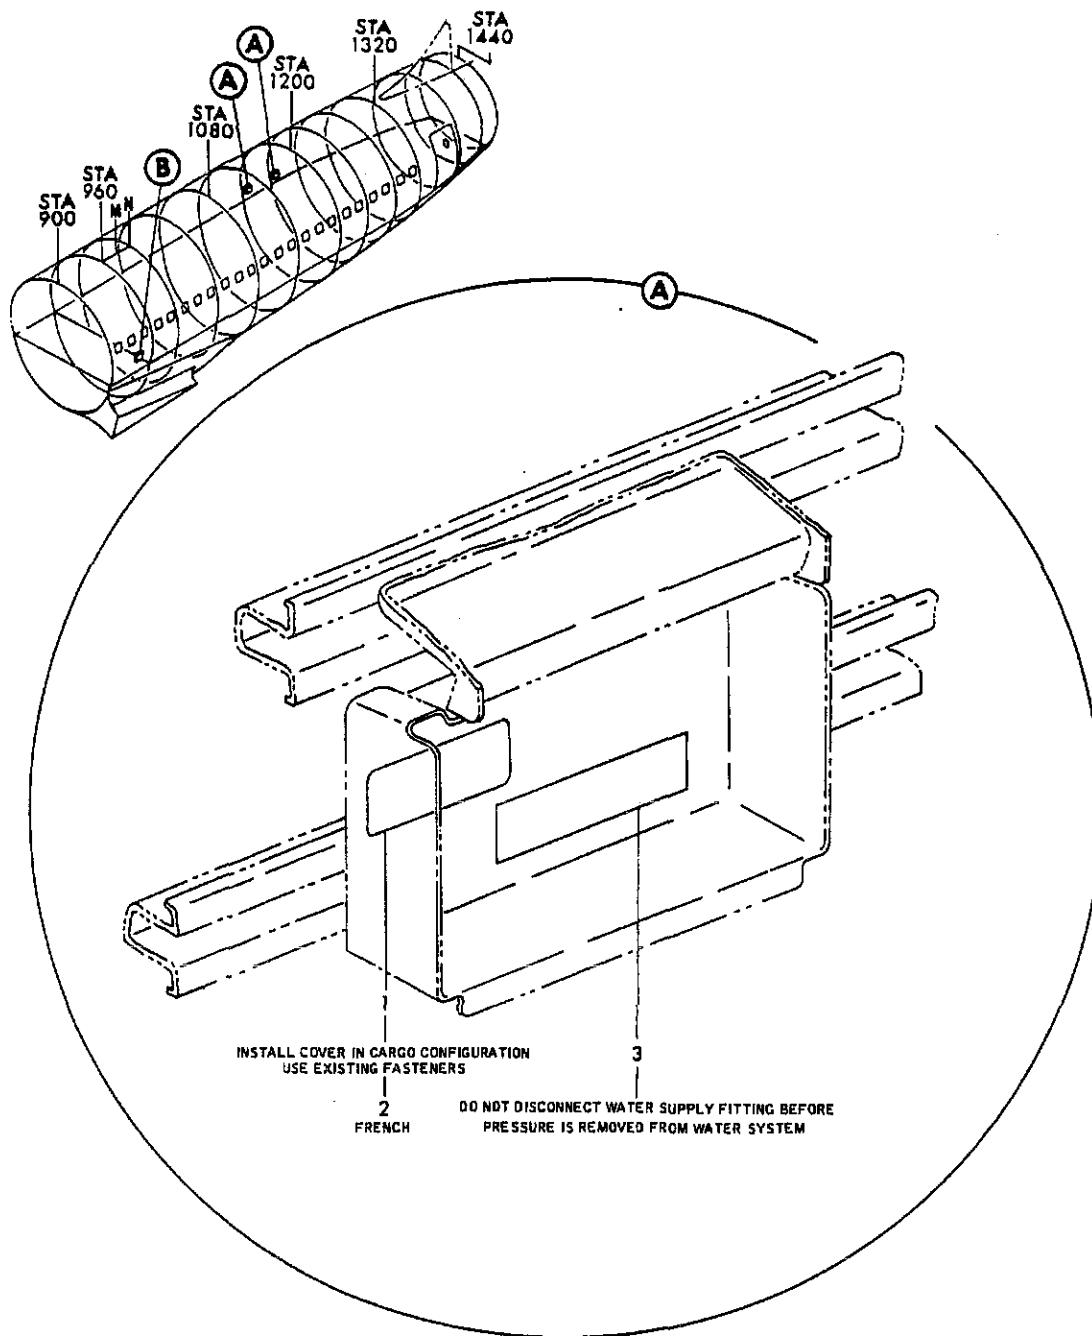 


FIGURE 130A. BOX ASSY, GALLEY (REQUIRED PLACARDS ONLY) (SHEET 1)

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

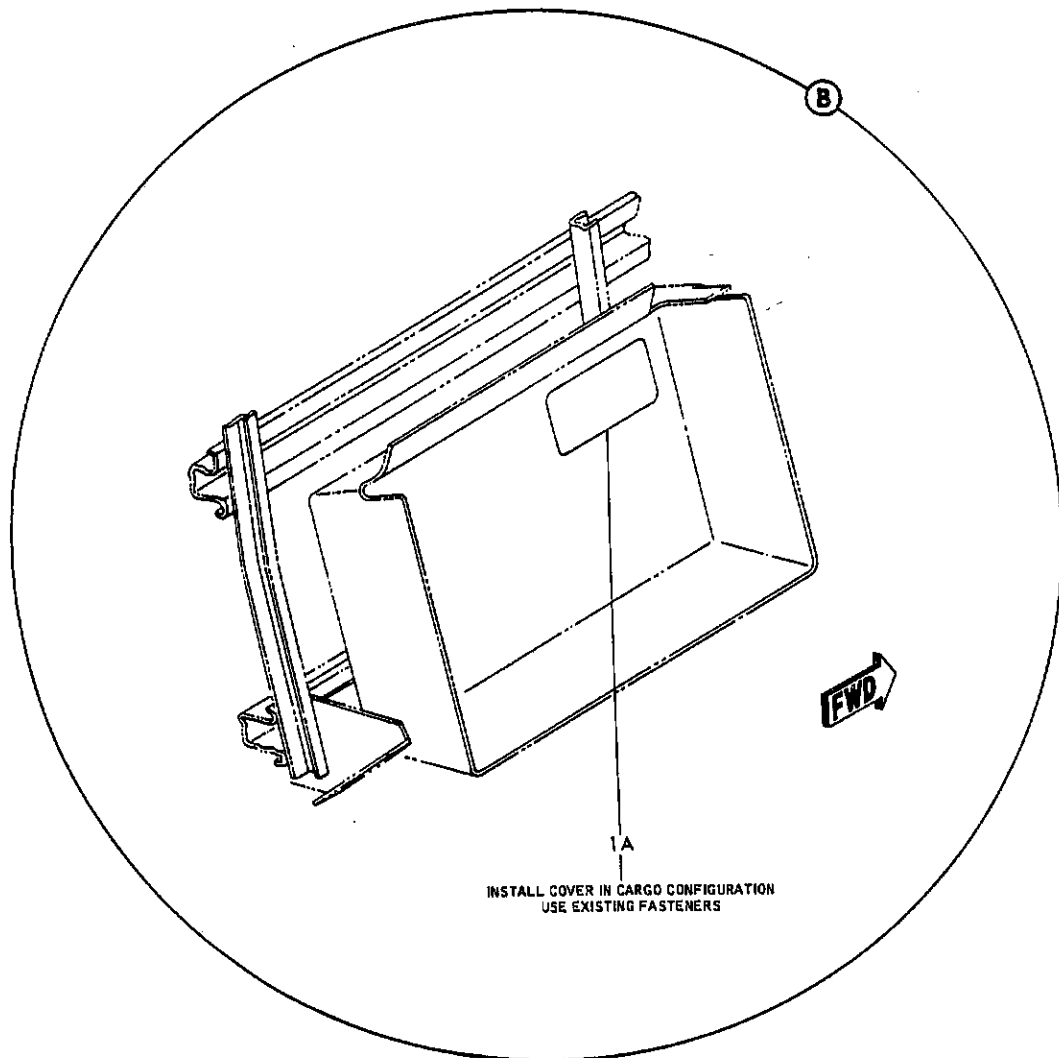 


FIGURE 130A. BOX ASSY, GALLEY (REQUIRED PLACARDS ONLY) (SHEET 2)

NOV 21/90

11-01-130A

DETAILED PARTS LIST
11-01-130A
PAGE 1

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R 1	130A	65-33164-19	BOX ASSY, GALLEY (REQUIRED PLACARDS ONLY) (SEE 38-2, . . . FIG. 25D, ITEM 39)							0150	RF
		65-33164-44	BOX ASSY, GALLEY (REQUIRED PLACARDS ONLY) (SEE 38-2, . . . FIG. 25D, ITEM 39)							5199	RF
		BACMIOLIDER	. MARKER-ALUMINUM FOIL, INSTALL COVER IN CARGO. CONFIGURATION . FOR REFERENCE TO OTHER BOX DETAILS, SEE NHA								L
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

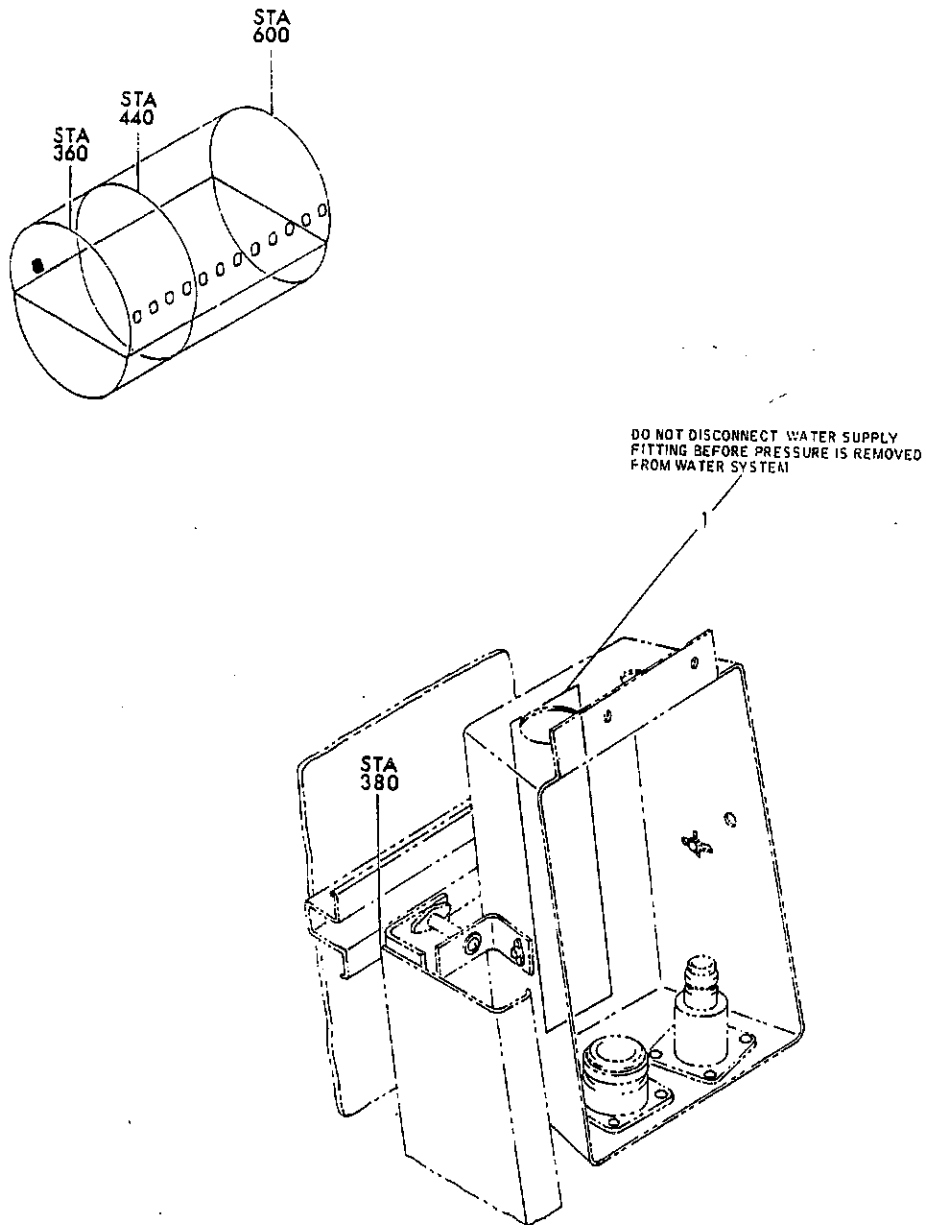 


FIGURE 131. BOX ASSY, GALLEY (REQUIRED PLACARDS ONLY)

707

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
131	65-34713-11	BOX ASSY, GALLEY (REQUIRED PLACARDS ONLY) (SEE 38-2, . . .							5199	RF
1	BACM10L1EJK	FIG. 25A, ITEM 36)							5199	1
		. MARKER-ALUMINUM FOIL, DO NOT DISCONNECT WATER SUPPLY FITTING BEFORE PRESSURE IS REMOVED FROM WATER SYSTEM							5199	
		. FOR REFERENCE TO OTHER BOX DETAILS, SEE NHA							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

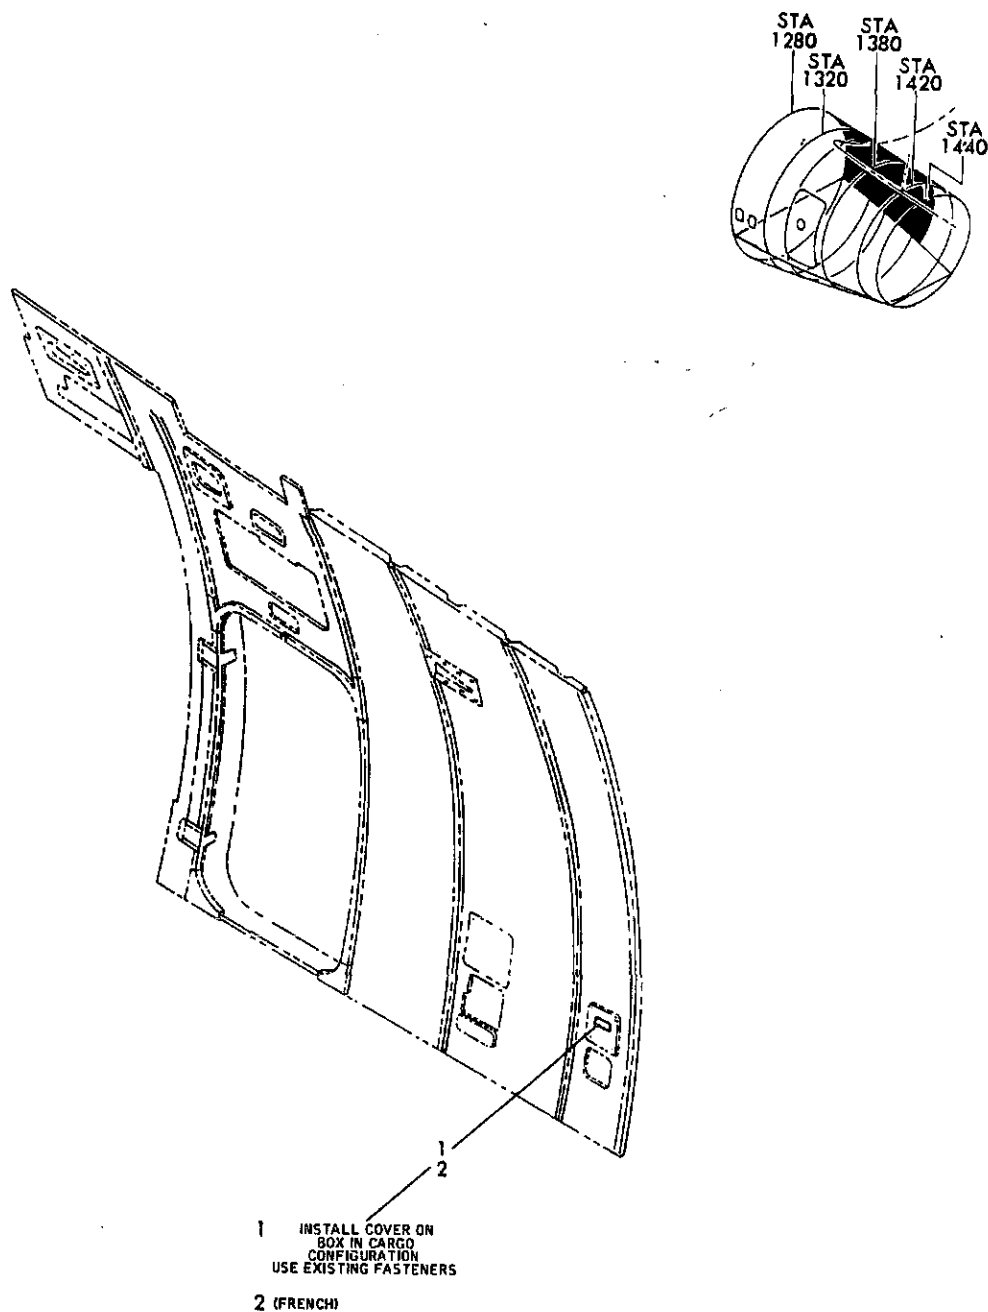 


FIGURE 137A. COVER ASSY, COMPARTMENT LAVATORY SERVICES BOX (REQUIRED PLACARDS ONLY)

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R R R R R R	137A	69-27346-1A	COVER ASSY, COMPARTMENT E LAVATORY SERVICES BOX							0150	RF
			(REQUIRED PLACARDS ONLY) (SEE 25-10, FIG. 46, ITEM 91, 25-10, FIG. 46D, ITEM 118, 25-10, FIG. 46E, ITEM 118 AND 25-10, FIG. 46F, ITEM 114)								
	1	BACM10C348W	. MARKER-ALUMINUM FOIL, INSTALL COVER ON BOX.							0150	1
			INSTRUCTIONS . FOR REFERENCE TO OTHER COVER DETAILS, SEE NHA							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

RAF
NOV 21/91

11-01-137A

DETAILED PARTS LIST
11-01-137A
PAGE 1

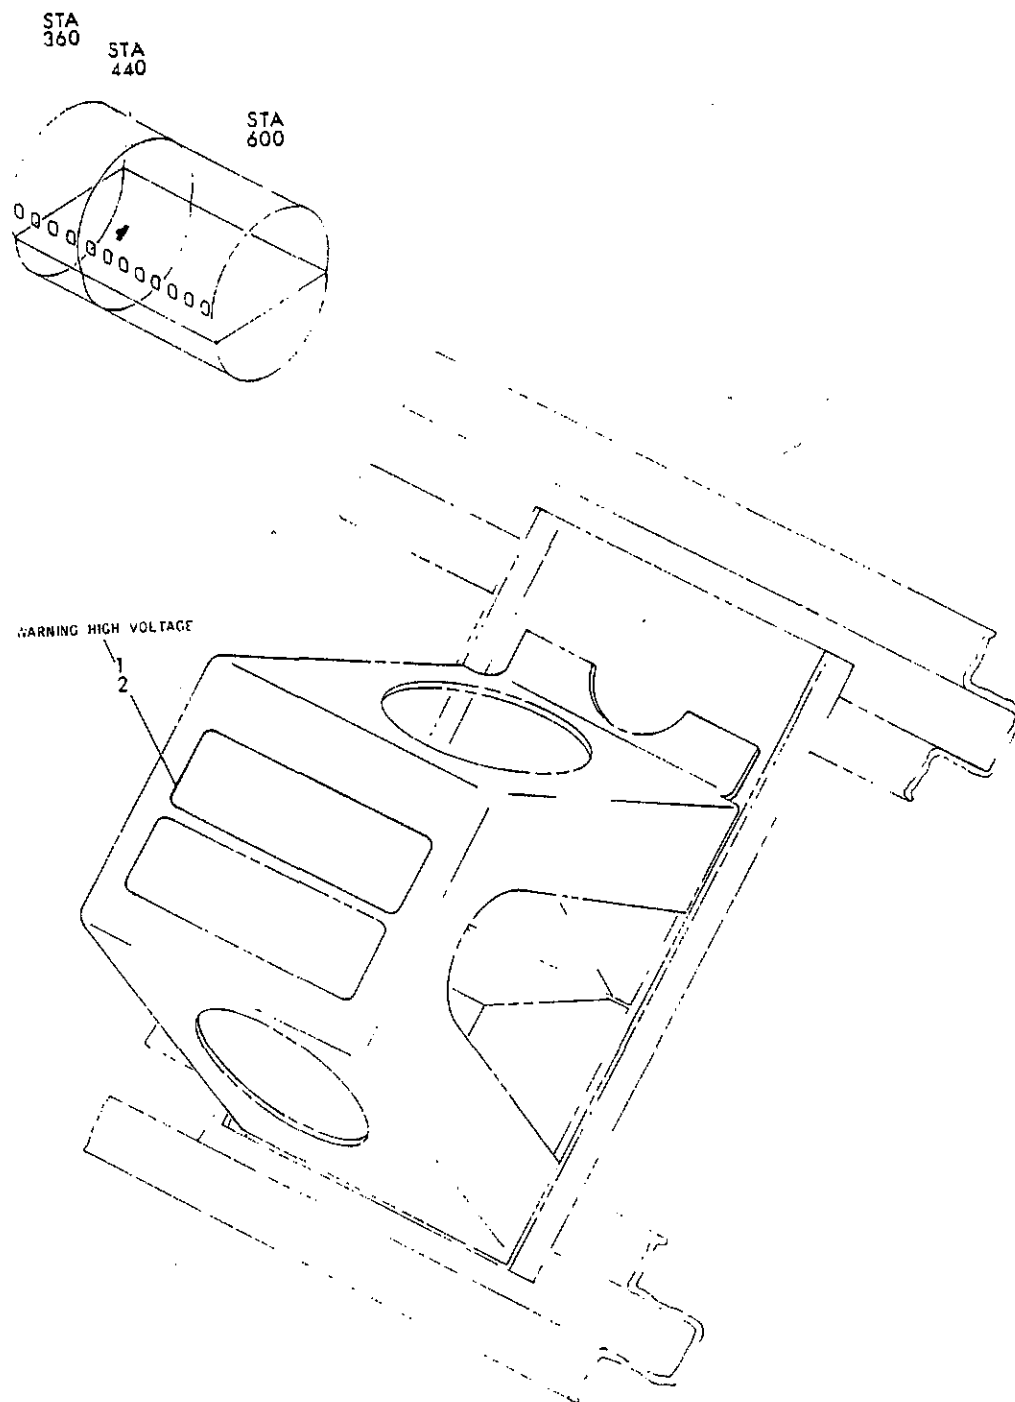 


FIGURE 140. TRANSFORMER INSTL. STATION 363.64 AND 367.75 (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
140	65-65179-1	TRANSFORMER INSTL, STATION 367.75 (REQUIRED PLACARDS. . ONLY) (SEE 24-3, FIG. 6B, ITEM 102, 24-3, FIG. 6C, ITEM 86, 24-3, FIG. 6D, ITEM 50, 24-3, FIG. 6E, ITEM 58 AND 24-3, FIG. 6F, ITEM 38)								RF
1	BACM10W31-25N	. MARKER-ALUMINUM FOIL, WARNING HIGH VOLTAGE. FOR REFERENCE TO OTHER TRANSFORMER DETAILS, SEE NHA .								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

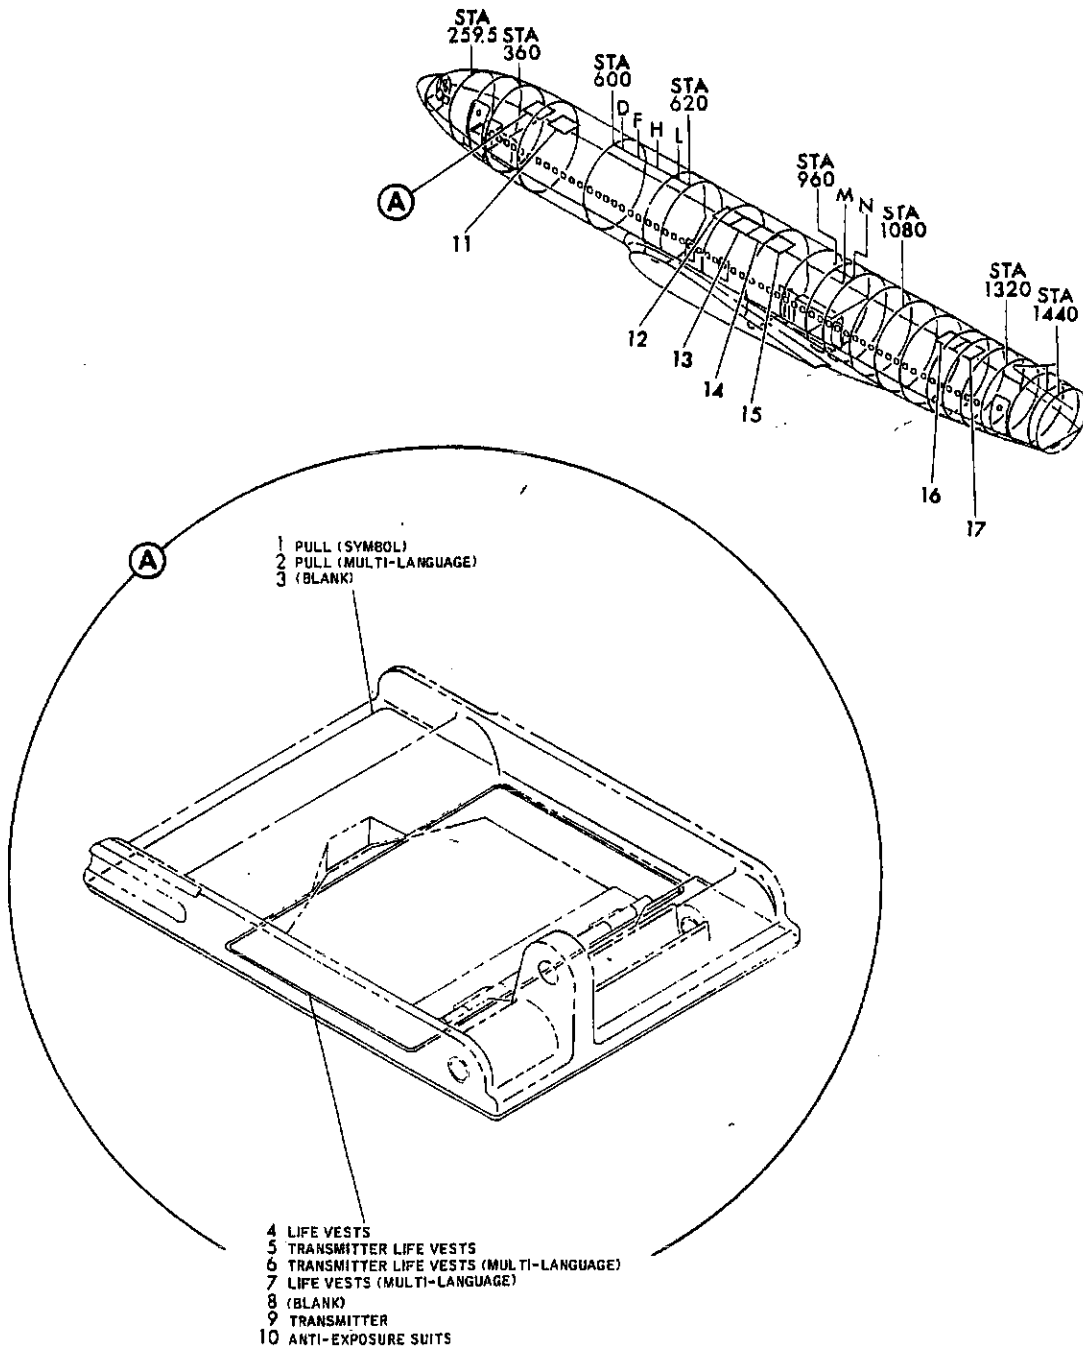 


FIGURE 150. HANDLE ASSY, LIFE RAFT DOOR (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R R R R R R R	150	69-27051	HANDLE ASSY, LIFE RAFT DOOR (REQUIRED PLACARDS ONLY). (SEE 25-18, FIG. 65A, ITEM 48 AND 25-18, FIG. 65B, ITEM 46)							0150	RF
		69-27051-49	HANDLE ASSY, LIFE RAFT DOOR (REQUIRED PLACARDS ONLY). (SEE 25-18, FIG. 128, ITEM 25)							5199	RF
	1	69-29035	. SIGN, LIFE RAFT DOOR HANDLE PULL (USED ON 69-27051. AND 69-27051-2)							0150	1
	3	69-29035-51	. SIGN, (BLANK)							5199	1
	4	69-29035-1	. SIGN, LIFE VESTS.							0150	1
	8	69-29035-52	. SIGN, (BLANK)							5199	1
			. FOR REFERENCE TO OTHER HANDLE DETAILS, SEE NHA.								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

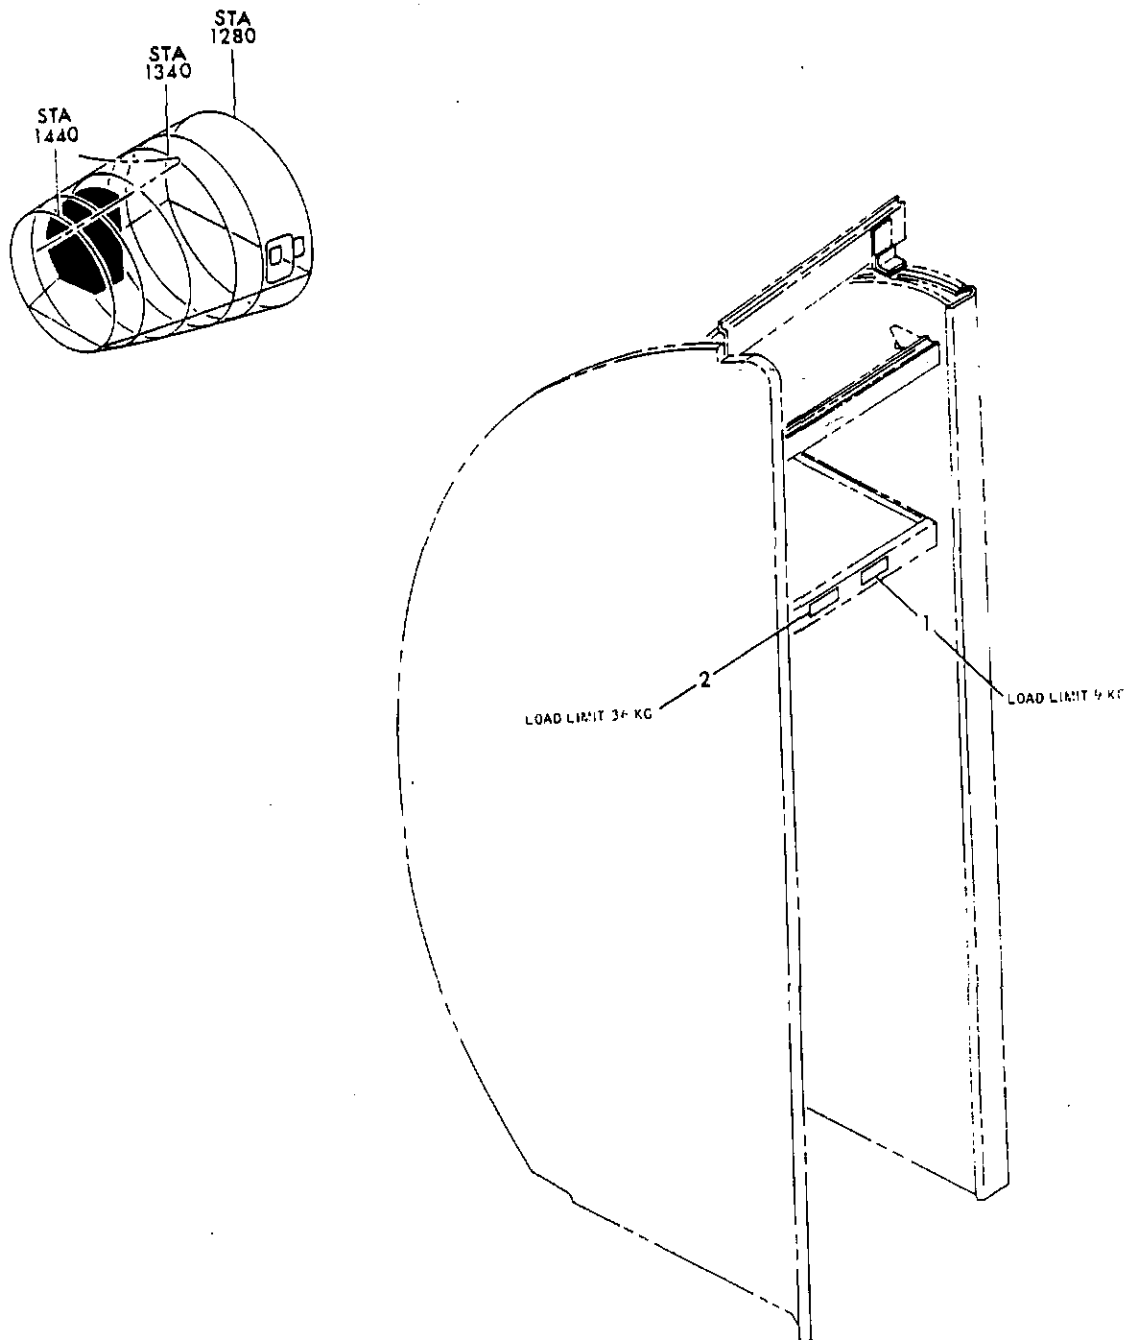 


FIGURE 164. CLOSET INSTL, STATION 1382.75 LH AFT (REQUIRED PLACARDS ONLY)

DETAILED PARTS LIST
11-01-164
PAGE 0

11-01-164

NOV 21/90

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
164	65-73526-13B	CLOSET INSTL, STATION 1382.75 LH AFT (REQUIRED PLACARDS ONLY) (SEE 25-1, FIG. 180C, ITEM 84 AND							5199	RF
	65-73526-13B	CLOSET INSTL, STATION 1382.75 LH AFT (REQUIRED PLACARDS ONLY) (SEE 25-1, FIG. 180C, ITEM 84)							5299	RF
	1 BAC27CPA556	. PLACARD, (LOAD LIMIT 22LB/10KG)							5199	1
	2 BAC27CPA557	. PLACARD, (LOAD LIMIT 75LB/34KG)							5199	1
		. FOR REFERENCE TO OTHER CLOSET DETAILS, SEE NHA. . . .							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

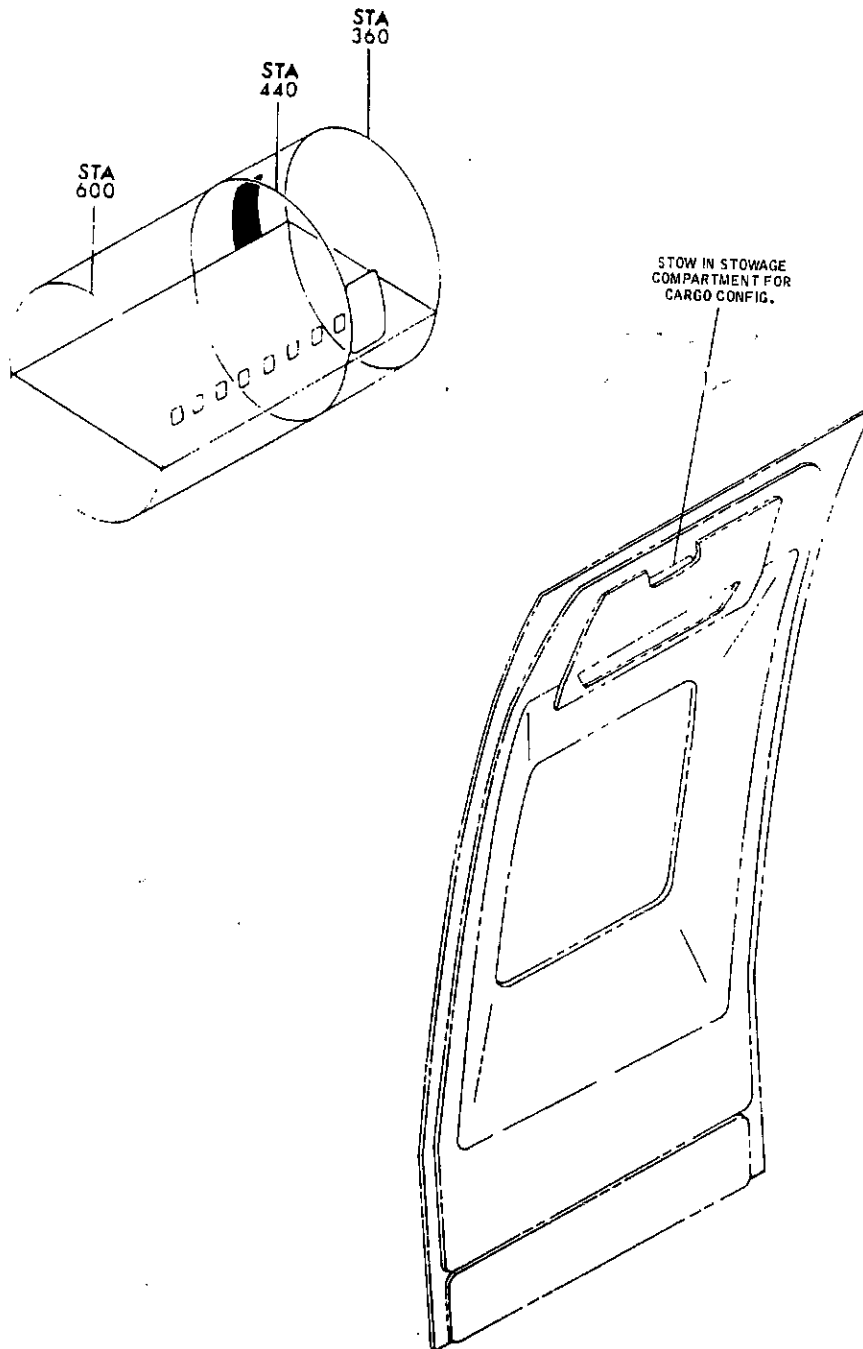 


FIGURE 184. COVER ASSY, WINDOW PANEL (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
184	65-85750-1M	COVER ASSY, WINDOW PANEL (REQUIRED PLACARDS ONLY) (SEE							5199	RF
1	BAC27CPA155	25-10, FIG. 61Y, ITEM 1)								
		. MARKER-ALUMINUM FOIL, STOW IN STOWAGE COMPARTMENT FOR							5199	1
		CARGO CONFIG								
		. FOR REFERENCE TO OTHER COVER DETAILS, SEE NHA							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

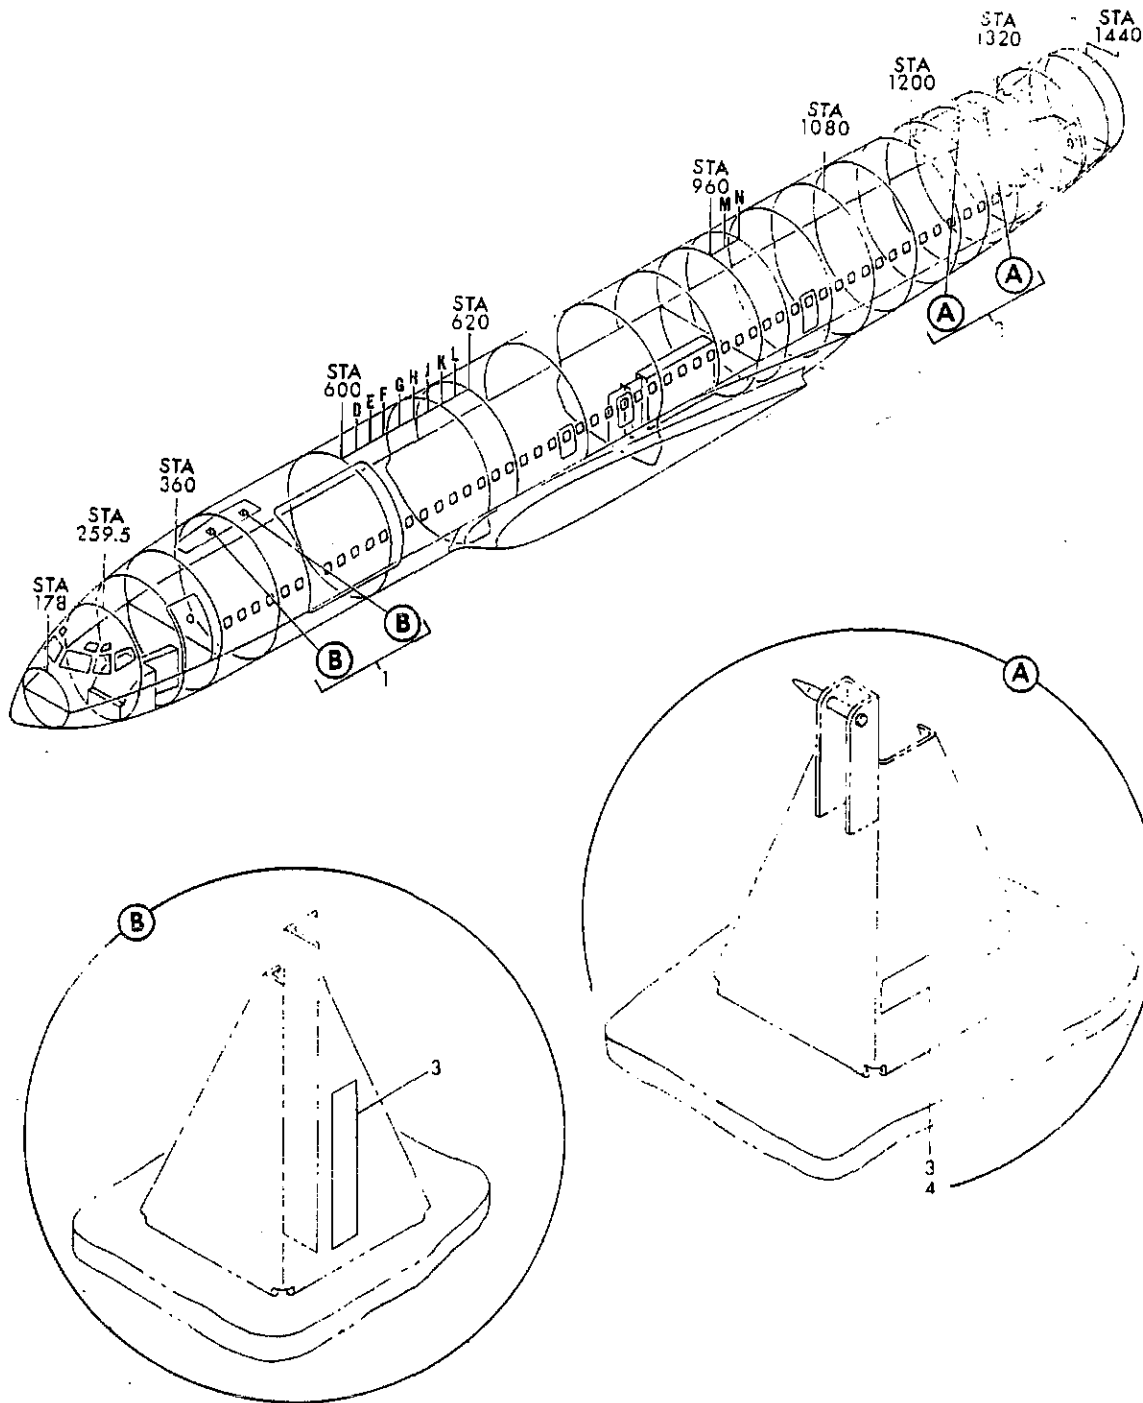 


FIGURE 185. PANEL ASSY, FOREARD LOWERED CEILING GALLEY (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF	UNITS
				FROM TO	PER ASSY
185	1 65-85711-2		PANEL ASSY, FORWARD LOWERED CEILING GALLEY (REQUIRED. . . PLACARDS ONLY) (SEE 25-11, FIG. 205, ITEM 6)	5199	RF
	2 65-85728-238		PANEL ASSY, AFT LOWERED CEILING GALLEY (REQUIRED. . . . PLACARDS ONLY) (SEE 25-11, FIG. 201F, ITEM 66)	5199	RF
	3 BACM10L1DRT		. MARKER-ALUMINUM FOIL, DISCONNECT GALLEY VENT TUBE . . BEFORE REMOVING COMPARTMENT . FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	5199 5199	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

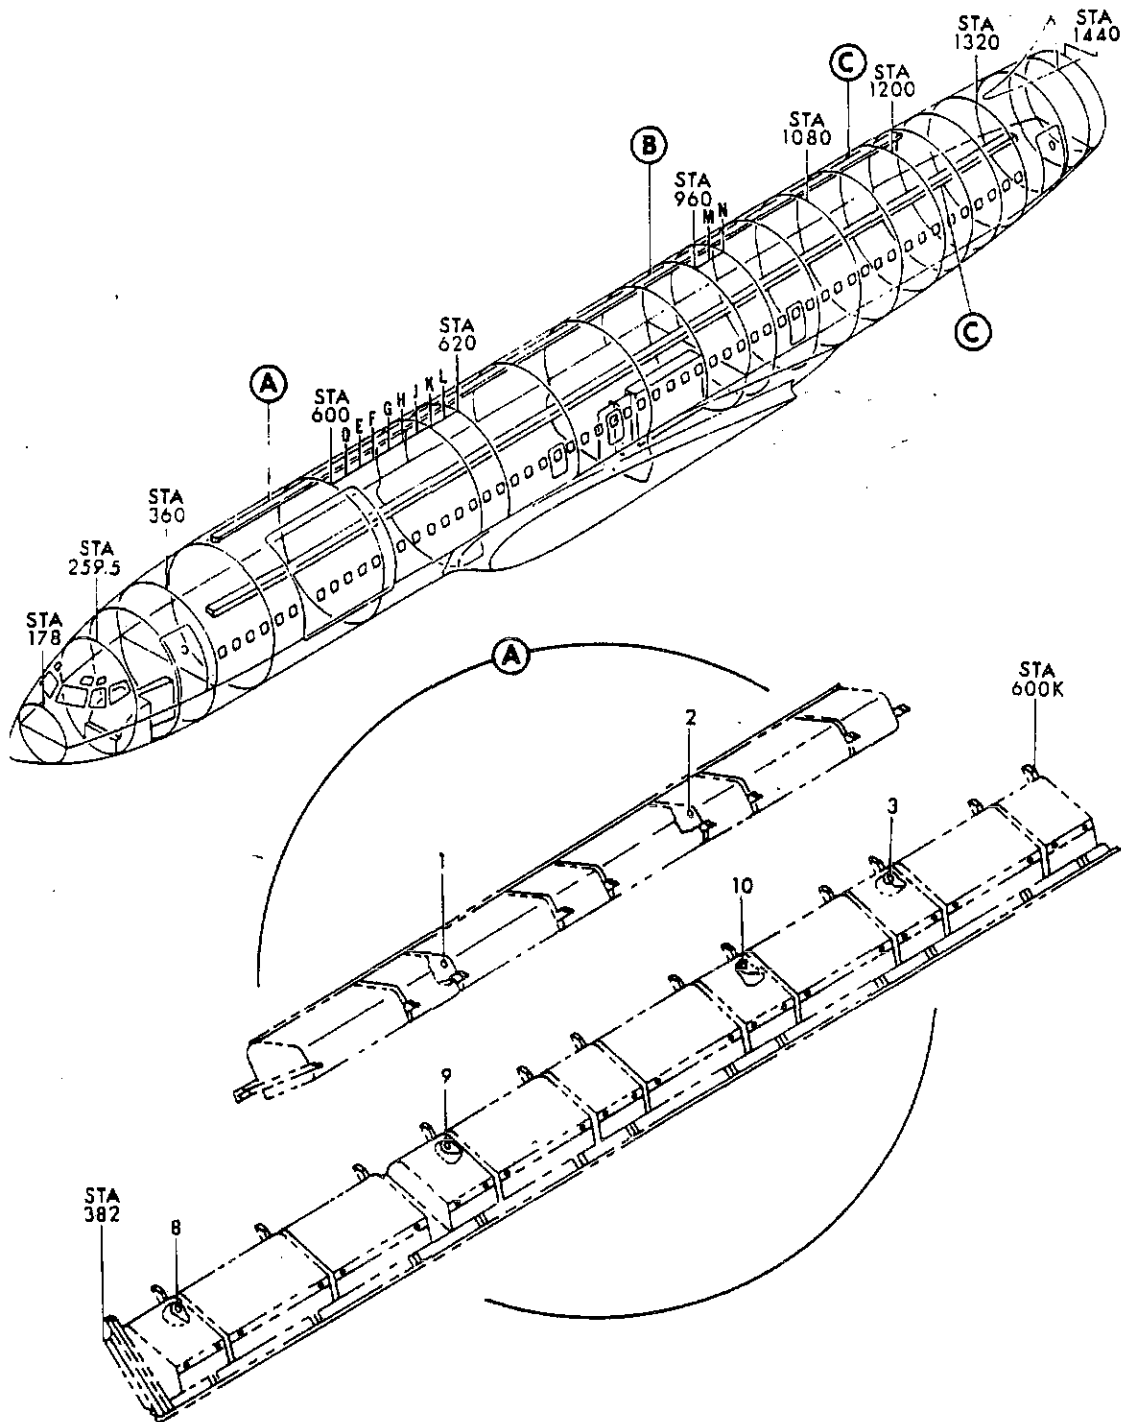 


FIGURE 186. MARKING INST., BIN AND PANEL (SHEET 1)

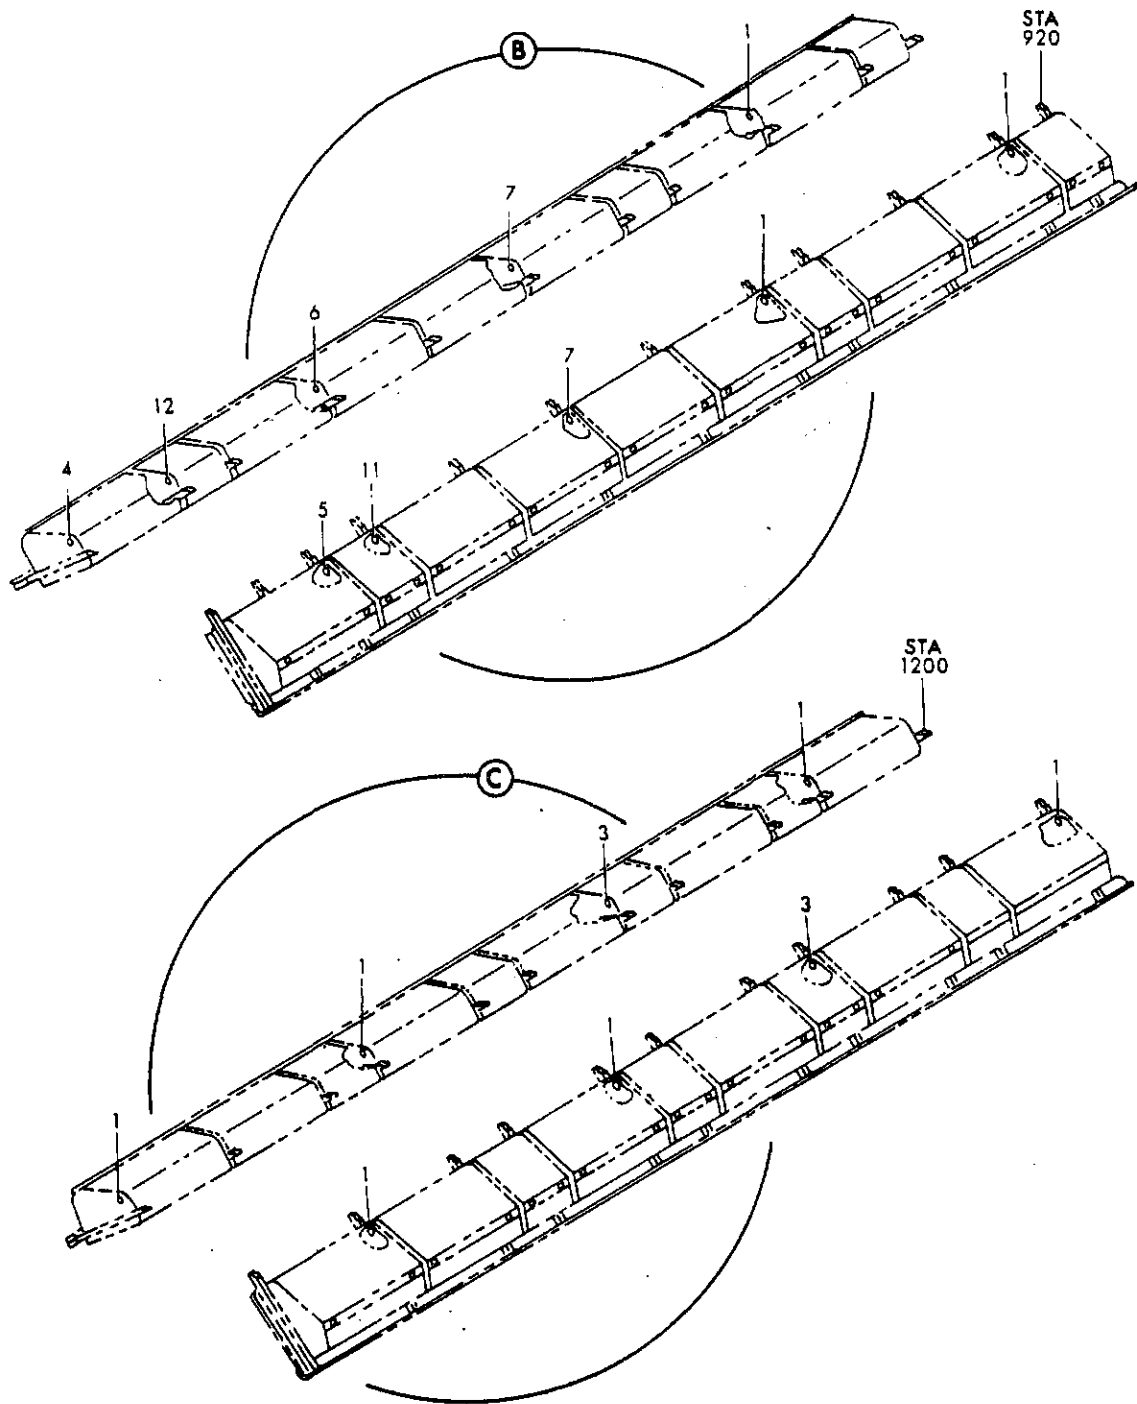 


FIGURE 186. MARKING INSTL, 8IN AND PANEL (SHEET 2)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
186	65-88295-1	MARKING INSTL, BIN AND PANEL (SEE 25-1, FIG. 30J, . . . ITEM 153, 25-1, FIG. 178, ITEM 56, 25-1, FIG. 178B, ITEM 54, 25-1, FIG. 178D, ITEM 102, 25-1, FIG. 178E, ITEM 94, 25-1, FIG. 180, ITEM 95, 25-1, FIG. 180C, ITEM 98)	5199	RF
1	BAC27CPA-342	. MARKER-ALUMINUM FOIL, 1	5199	10
2	BAC27CPA-343	. MARKER-ALUMINUM FOIL, 2	5199	1
3	BAC27CPA-344	. MARKER-ALUMINUM FOIL, 3	5199	3
4	BAC27CPA-345	. MARKER-ALUMINUM FOIL, 4	5199	1
5	BAC27CPA-346	. MARKER-ALUMINUM FOIL, 5	5199	1
6	BAC27CPA-347	. MARKER-ALUMINUM FOIL, 6	5199	1
7	BAC27CPA-348	. MARKER-ALUMINUM FOIL, 7	5199	2
8	BAC27CPA-352	. MARKER-ALUMINUM FOIL, 11.	5199	1
9	BAC27CPA-353	. MARKER-ALUMINUM FOIL, 12.	5199	1
10	BAC27CPA-354	. MARKER-ALUMINUM FOIL, 13.	5199	1
11	BAC27CPA-355	. MARKER-ALUMINUM FOIL, 21.	5199	1
12	BAC27CPA-356	. MARKER-ALUMINUM FOIL, 22.	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

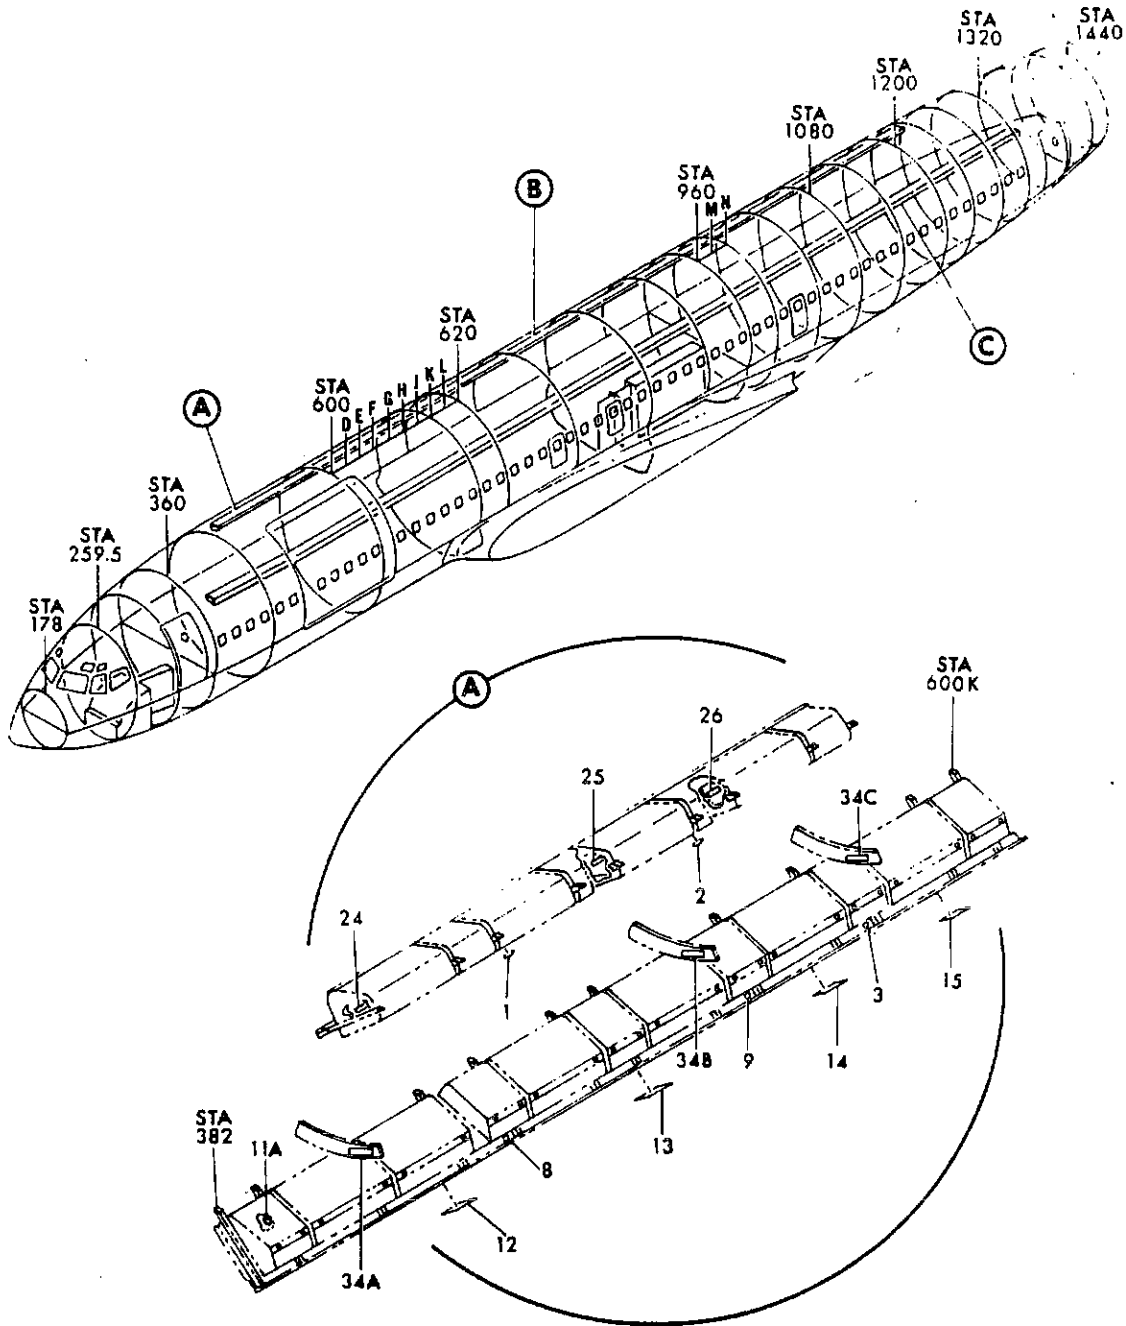 


FIGURE 187. MARKING INSTL, BIN STRUCTURE (SHEET 1)

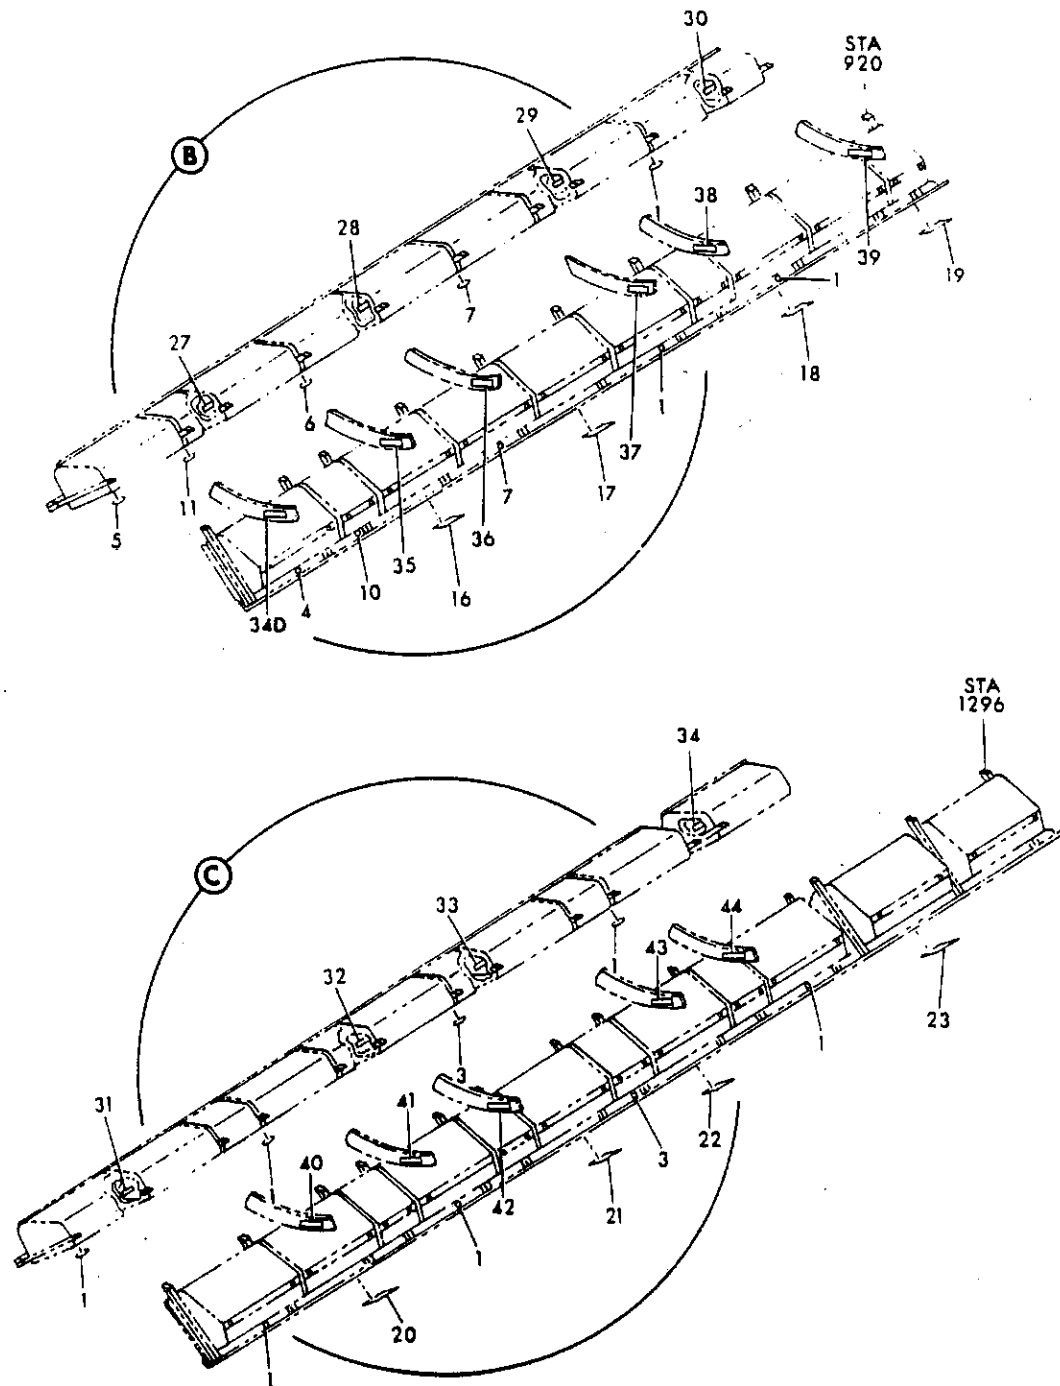 


FIGURE 187. MARKING INSTL. BIN STRUCTURE (SHEET 2)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
187		MARKING INSTL, BIN STRUCTURE, CEILING	5199	
		SUPPORTS AND SIDEWALL INSULATION	5199	
		MARKING INSTL, PASSENGER SERVICE UNIT	5199	
	65-88295-2	. MARKING INSTL, BIN STOWAGE (SEE 25-1, FIG. 30J, ITEM 154, 25-1, FIG. 178, ITEM 57, 25-1, FIG. 178B, ITEM 55, 25-1, FIG. 178D, ITEM 103, 25-1, FIG. 178E, ITEM 95 25-1, FIG. 180, ITEM 96, 25-1, FIG. 180A, ITEM 94, 25-1, FIG. 180C, ITEM 99)	5199	RF
1	BAC27CPA342	. . MARKER-ALUMINUM FOIL, 1	5199	10
2	BAC27CPA343	. . MARKER-ALUMINUM FOIL, 2	5199	1
3	BAC27CPA344	. . MARKER-ALUMINUM FOIL, 3	5199	3
4	BAC27CPA345	. . MARKER-ALUMINUM FOIL, 4	5199	1
5	BAC27CPA346	. . MARKER-ALUMINUM FOIL, 5	5199	1
6	BAC27CPA347	. . MARKER-ALUMINUM FOIL, 6	5199	1
7	BAC27CPA348	. . MARKER-ALUMINUM FOIL, 7	5199	2
8	BAC27CPA353	. . MARKER-ALUMINUM FOIL, 12	5199	1
9	BAC27CPA354	. . MARKER-ALUMINUM FOIL, 13	5199	1
10	BAC27CPA355	. . MARKER-ALUMINUM FOIL, 21	5199	1
11	BAC27CPA356	. . MARKER-ALUMINUM FOIL, 22	5199	1
	65-88295-3	. MARKING INSTL, BIN STOWAGE (SEE 25-1, FIG. 30J, ITEM 155, 25-1, FIG. 178, ITEM 58, 25-1, FIG. 178B, ITEM 56 25-1, FIG. 178D, ITEM 104, 25-1, FIG. 178E, ITEM 96, 25-1, FIG. 180, ITEM 97, 25-1, FIG. 180A, ITEM 95, 25-1, FIG. 180C, ITEM 100)	5199	RF
12	BAC27CPA305	. . MARKER-ALUMINUM FOIL, 18L	5199	1
13	BAC27CPA306	. . MARKER-ALUMINUM FOIL, 28L	5199	1
14	BAC27CPA307	. . MARKER-ALUMINUM FOIL, 38L	5199	1
15	BAC27CPA308	. . MARKER-ALUMINUM FOIL, 48L	5199	2
16	BAC27CPA309	. . MARKER-ALUMINUM FOIL, 58L	5199	1
17	BAC27CPA310	. . MARKER-ALUMINUM FOIL, 68L	5199	1
18	BAC27CPA311	. . MARKER-ALUMINUM FOIL, 78L	5199	1
19	BAC27CPA312	. . MARKER-ALUMINUM FOIL, 88L	5199	1
20	BAC27CPA313	. . MARKER-ALUMINUM FOIL, 98L	5199	1
21	BAC27CPA314	. . MARKER-ALUMINUM FOIL, 108L	5199	1
22	BAC27CPA315	. . MARKER-ALUMINUM FOIL, 118L	5199	1
23	BAC27CPA316	. . MARKER-ALUMINUM FOIL, 128L	5199	1
24	BAC27CPA317	. . MARKER-ALUMINUM FOIL, 28R	5199	1
25	BAC27CPA318	. . MARKER-ALUMINUM FOIL, 38R	5199	1
26	BAC27CPA319	. . MARKER-ALUMINUM FOIL, 48R	5199	1
27	BAC27CPA320	. . MARKER-ALUMINUM FOIL, 58R	5199	1
28	BAC27CPA321	. . MARKER-ALUMINUM FOIL, 68R	5199	1
29	BAC27CPA322	. . MARKER-ALUMINUM FOIL, 78R	5199	1
30	BAC27CPA323	. . MARKER-ALUMINUM FOIL, 88R	5199	1
31	BAC27CPA324	. . MARKER-ALUMINUM FOIL, 98R	5199	1
32	BAC27CPA325	. . MARKER-ALUMINUM FOIL, 108R	5199	1
33	BAC27CPA326	. . MARKER-ALUMINUM FOIL, 118R	5199	1
34	BAC27CPA327	. . MARKER-ALUMINUM FOIL, 128R	5199	1
	65-88295-6	. MARKING INSTL, CEILING INSULATION (SEE 25-1, FIG. 174, ITEM 68, 25-1, FIG. 174C, ITEM 39 AND 25-1, FIG. 174E, ITEM 39)	5199	RF
	65-88295-5	. MARKING INSTL, CEILING SUPPORTS (SEE 25-1, FIG. 30J, ITEM 156, 25-1, FIG. 30K, ITEM 19, 25-1, FIG. 178, ITEM 58A, 25-1, FIG. 178C, ITEM 48 25-1, FIG. 180, ITEM 98, 25-1, FIG. 180A, ITEM 96, 25-1, FIG. 180C, ITEM 101)	5199	RF
34D	BAC27CPA381	. . MARKER-ALUMINUM FOIL, 1S	5199	1
34D	BAC27CPA382	. . MARKER-ALUMINUM FOIL, 1S	5199	1
34E	BAC27CPA382	. . MARKER-ALUMINUM FOIL, 2S	5199	1
34E	BAC27CPA329	. . MARKER-ALUMINUM FOIL, 2S	5199	1
34F	BAC27CPA383	. . MARKER-ALUMINUM FOIL, 3S	5199	1
34F	BAC27CPA330	. . MARKER-ALUMINUM FOIL, 3S	5199	1
34G	BAC27CPA384	. . MARKER-ALUMINUM FOIL, 4S	5199	1
34G	BAC27CPA331	. . MARKER-ALUMINUM FOIL, 4S	5199	1
35	BAC27CPA392	. . MARKER-ALUMINUM FOIL, 21S	5199	1
36	BAC27CPA393	. . MARKER-ALUMINUM FOIL, 22S	5199	1
37	BAC27CPA394	. . MARKER-ALUMINUM FOIL, 23S	5199	1
38	BAC27CPA385	. . MARKER-ALUMINUM FOIL, 5S	5199	1
38	BAC27CPA332	. . MARKER-ALUMINUM FOIL, 5S	5199	1
39	BAC27CPA386	. . MARKER-ALUMINUM FOIL, 6S	5199	1
39	BAC27CPA333	. . MARKER-ALUMINUM FOIL, 6S	5199	1
40	BAC27CPA387	. . MARKER-ALUMINUM FOIL, 7S	5199	1
40	BAC27CPA334	. . MARKER-ALUMINUM FOIL, 7S	5199	1
41	BAC27CPA388	. . MARKER-ALUMINUM FOIL, 8S	5199	1
41	BAC27CPA335	. . MARKER-ALUMINUM FOIL, 8S	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
187	42	BAC27CPA389	. . . MARKER-ALUMINUM FOIL, 9S.	5199	1
	42	BAC27CPA336	. . . MARKER-ALUMINUM FOIL, 9S.	5199	1
	43	BAC27CPA390	. . . MARKER-ALUMINUM FOIL, 10S.	5199	1
	43	BAC27CPA337	. . . MARKER-ALUMINUM FOIL, 10S.	5199	1
	44	BAC27CPA391	. . . MARKER-ALUMINUM FOIL, 11S.	5199	1
	44	BAC27CPA338	. . . MARKER-ALUMINUM FOIL, 11S.	5199	1
		65-88295-4	. . . MARKER INSTL, SIDEWALL INSULATION (SEE 25-1, FIG. 174, ITEM 67, 25-1, FIG. 174C, ITEM 40 AND 25-1, FIG. 174E, ITEM 38)	5199	RF
	45	BAC27CPA352	. . . MARKER-ALUMINUM FOIL, ...	5199	1
	46	BAC27CPA358	. . . MARKER-ALUMINUM FOIL, 1BL.	5199	1
	47	BAC27CPA359	. . . MARKER-ALUMINUM FOIL, 2BL.	5199	1
	48	BAC27CPA360	. . . MARKER-ALUMINUM FOIL, 3BL.	5199	1
	49	BAC27CPA361	. . . MARKER-ALUMINUM FOIL, 4BL.	5199	1
	50	BAC27CPA362	. . . MARKER-ALUMINUM FOIL, 5BL.	5199	1
	51	BAC27CPA363	. . . MARKER-ALUMINUM FOIL, 6BL.	5199	1
	52	BAC27CPA364	. . . MARKER-ALUMINUM FOIL, 7BL.	5199	1
	53	BAC27CPA365	. . . MARKER-ALUMINUM FOIL, 8BL.	5199	1
	54	BAC27CPA366	. . . MARKER-ALUMINUM FOIL, 9BL.	5199	1
	55	BAC27CPA367	. . . MARKER-ALUMINUM FOIL, 10BL.	5199	1
	56	BAC27CPA368	. . . MARKER-ALUMINUM FOIL, 11BL.	5199	1
	57	BAC27CPA369	. . . MARKER-ALUMINUM FOIL, 12BL.	5199	1
	58	BAC27CPA370	. . . MARKER-ALUMINUM FOIL, 2BR.	5199	1
	59	BAC27CPA371	. . . MARKER-ALUMINUM FOIL, 3BR.	5199	1
	60	BAC27CPA372	. . . MARKER-ALUMINUM FOIL, 4BR.	5199	1
	61	BAC27CPA373	. . . MARKER-ALUMINUM FOIL, 5BR.	5199	1
	62	BACP27CPA374	. . . MARKER-ALUMINUM FOIL, 6BR.	5199	1
	63	BAC27CPA375	. . . MARKER-ALUMINUM FOIL, 7BR.	5199	1
	64	BAC27CPA376	. . . MARKER-ALUMINUM FOIL, 8BR.	5199	1
	65	BAC27CPA377	. . . MARKER-ALUMINUM FOIL, 9BR.	5199	1
	66	BAC27CPA378	. . . MARKER-ALUMINUM FOIL, 10BR.	5199	1
	67	BAC27CPA379	. . . MARKER-ALUMINUM FOIL, 11BR.	5199	1
	68	BAC27CPA380	. . . MARKER-ALUMINUM FOIL, 12BR.	5199	1
		65-88295-1	. . . MARKING INSTL, BINS AND PANELS (SEE 25-1, FIG. 180A, ITEM 93)	5199	RF
	69	BAC27CPA342	. . . MARKER-ALUMINUM FOIL, 1.	5199	10
	70	BAC27CPA343	. . . MARKER-ALUMINUM FOIL, 2.	5199	1
	71	BAC27CPA344	. . . MARKER-ALUMINUM FOIL, 3.	5199	3
	72	BAC27CPA345	. . . MARKER-ALUMINUM FOIL, 4.	5199	1
	73	BAC27CPA346	. . . MARKER-ALUMINUM FOIL, 5.	5199	1
	74	BAC27CPA347	. . . MARKER-ALUMINUM FOIL, 6.	5199	1
	75	BAC27CPA348	. . . MARKER-ALUMINUM FOIL, 7.	5199	2
	76	BAC27CPA352	. . . MARKER-ALUMINUM FOIL, 11.	5199	1
	77	BAC27CPA353	. . . MARKER-ALUMINUM FOIL, 12.	5199	1
	78	BAC27CPA354	. . . MARKER-ALUMINUM FOIL, 13.	5199	1
	79	BAC27CPA355	. . . MARKER-ALUMINUM FOIL, 21.	5199	1
	80	BAC27CPA356	. . . MARKER-ALUMINUM FOIL, 22.	5199	1
		65-88295-14	. . . MARKING INSTL, PASSENGER SERVICE UNIT (SEE 25-1, FIG. 174C, ITEM 39A)	5199	RF
	81	BAC27CPA357	. . . MARKER-ALUMINUM FOIL, 1.	5199	54
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

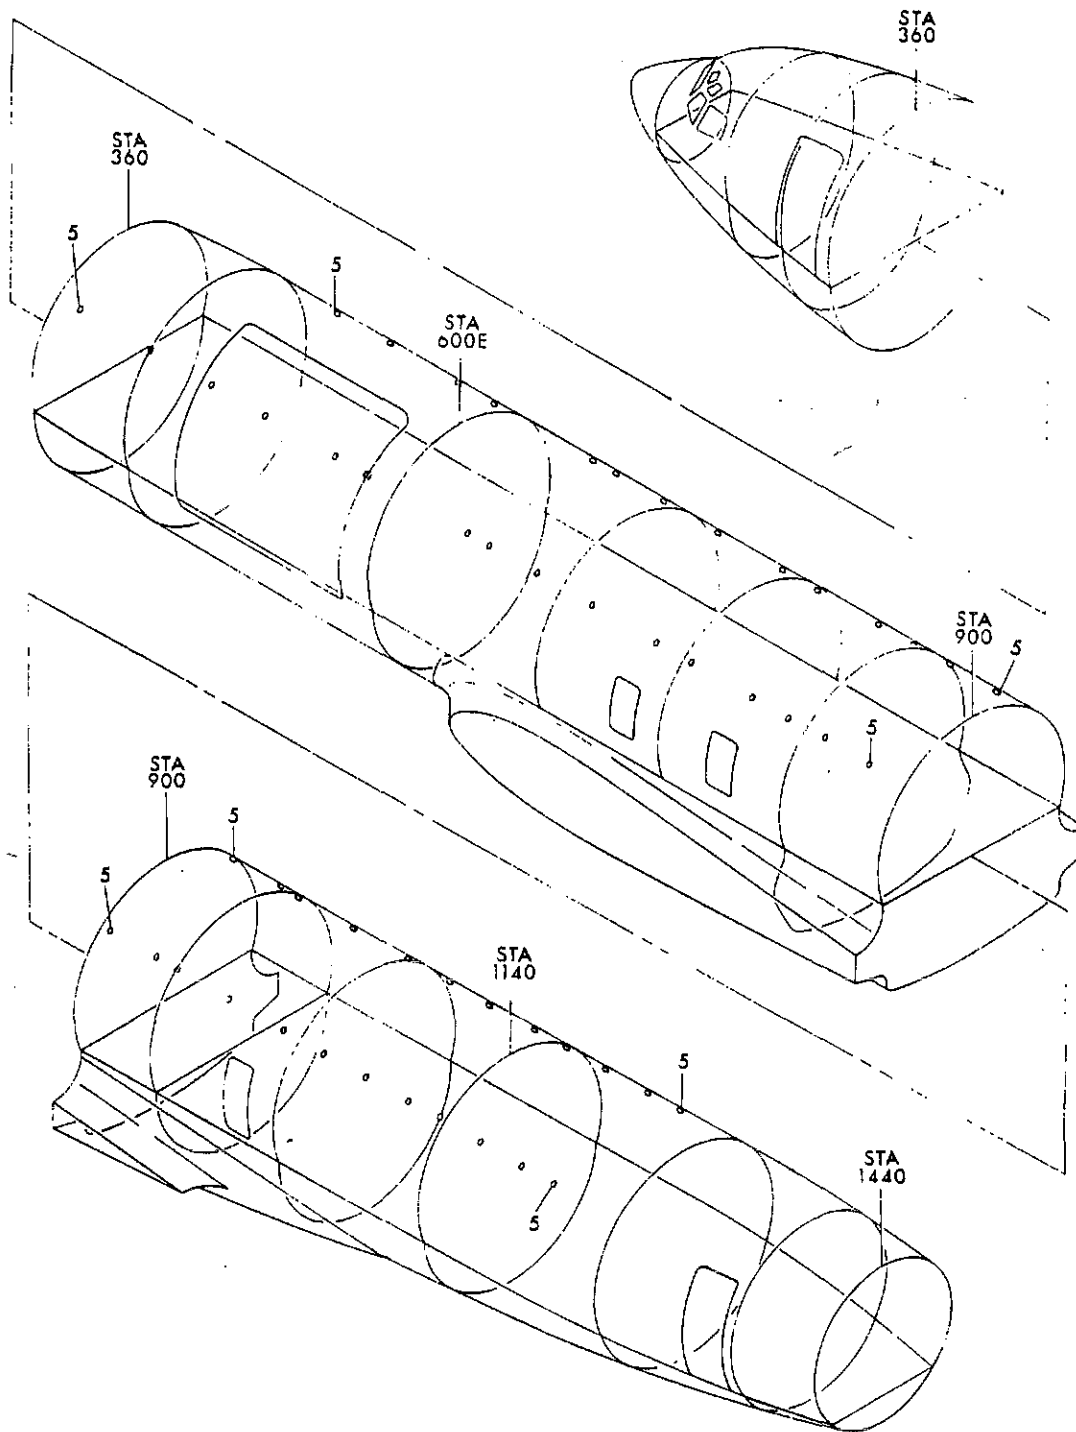 


FIGURE 188. MARKING INSTL, PASSENGER SERVICE UNIT

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
188	65-88295-14	MARKING INSTL, PASSENGER SERVICE UNIT (SEE 25-1, FIG. .							5199	RF
1	BAC27CPA357	174C, ITEM 39A) . MARKER, ALUMINUM FOIL							5199	54
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

RAF
NOV 21/90

11-01-188

DETAILED PARTS LIST
11-01-188
PAGE 1

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

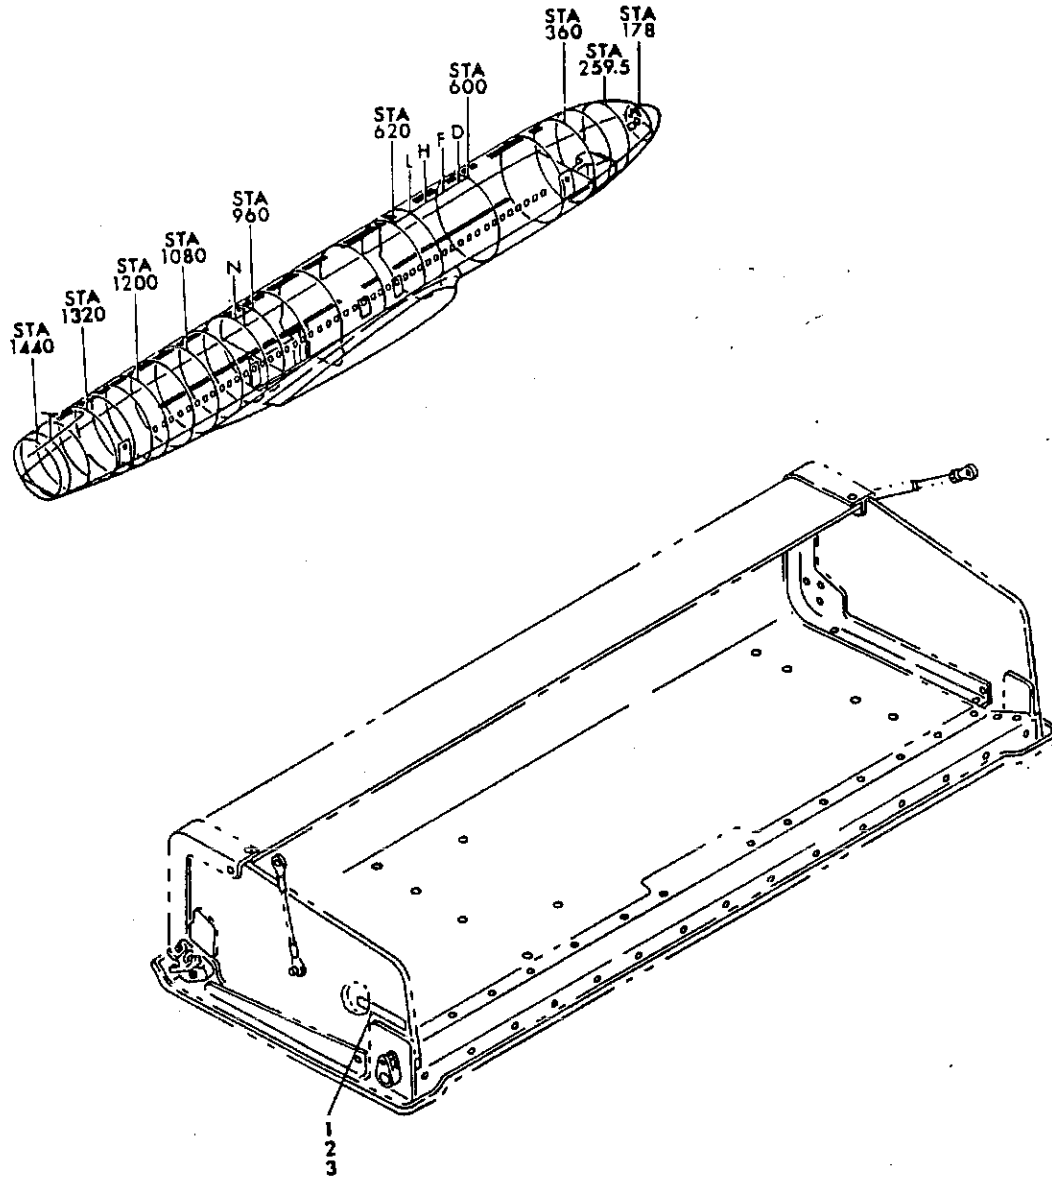 


FIGURE 191. BIN ASSY, STOWAGE (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
191	65-86651-1		BIN ASSY, STOWAGE (REQUIRED PLACARDS ONLY) (SEE 25-27, FIG. 79, ITEMS 53, 70, 86, 88, 92, 94, 100, 101, 113, 121, 128, 144, 159, 177 AND FIG. 104, ITEM 18)	5151	RF
	65-86651-1A		BIN ASSY, STOWAGE (REQUIRED PLACARDS ONLY) (SEE 25-27, FIG. 79, ITEMS 53, 70, 86, 92, 100, 113, 121, 128, 144, 159, 177, 199, FIG. 104, ITEM 18 AND 20)	5299	RF
	65-86651-2		BIN ASSY, STOWAGE (REQUIRED PLACARDS ONLY) (SEE 25-27, FIG. 79, ITEMS 54, 70A, 71, 87, 93, 114, 122, 129, 145 AND 160)	5151	RF
	65-86651-2A		BIN ASSY, STOWAGE (REQUIRED PLACARDS ONLY) (SEE 25-27, FIG. 79, ITEMS 54, 70B, 70C, 71, 87, 93, 114, 122, 129, 145, 159A, 160 AND 200)	5299	RF
	65-86651-3		BIN ASSY, STOWAGE (REQUIRED PLACARDS ONLY) (SEE 25-27, FIG. 79, ITEM 178)	5151	RF
	65-86651-3A		BIN ASSY, STOWAGE (REQUIRED PLACARDS ONLY) (SEE 25-27, FIG. 79, ITEM 178)	5299	RF
	65-86651-4		BIN ASSY, STOWAGE (REQUIRED PLACARDS ONLY) (SEE 25-27, FIG. 79, ITEM 55)	5151	RF
	65-86651-4A		BIN ASSY, STOWAGE (REQUIRED PLACARDS ONLY) (SEE 25-27, FIG. 79, ITEM 55 AND 25-27, FIG. 105C, ITEM 50)	5299	RF
	65-86651-6A		BIN ASSY, STOWAGE (REQUIRED PLACARDS ONLY) (SEE 25-27, FIG. 79, ITEM 186 AND 25-27, FIG. 105C ITEM 51)	5299	RF
	65-86651-8		BIN ASSY, STOWAGE (REQUIRED PLACARDS ONLY) (SEE 25-27, FIG. 79, ITEM 72, 115 AND 161)	5151	RF
	65-86651-8A		BIN ASSY, STOWAGE (REQUIRED PLACARDS ONLY) (SEE 25-27, FIG. 79, ITEM 71A, 72, 115 AND 161)	5299	RF
1	BAC27DPA268		. MARKER-ALUMINUM FOIL, LOAD LIMIT TO 75 LBS (USED ON 65-86651-1, -4) (OPTIONAL BAC27DPA510)	5199	1
1	BAC27DPA510		. MARKER-ALUMINUM FOIL, LOAD LIMIT TO 75 LBS (USED ON 65-86651-1, -4) (OPTIONAL TO BAC27DPA268)	5199	1
2	BAC27DPA207		. MARKER-ALUMINUM FOIL, LOAD LIMIT TO 40 LBS (USED ON 65-86651-2, -8) (OPTIONAL BAC27DPA508)	5199	1
2	BAC27DPA508		. MARKER-ALUMINUM FOIL, LOAD LIMIT TO 40 LBS (USED ON 65-86651-2, -8) (OPTIONAL TO BAC27DPA207)	5199	1
3	BAC27DPA208		. MARKER-ALUMINUM FOIL, LOAD LIMIT TO 50 LBS (USED ON 65-86651-3, -6) (OPTIONAL BAC27DPA509)	5199	1
3	BAC27DPA509		. MARKER-ALUMINUM FOIL, LOAD LIMIT TO 50 LBS (USED ON 65-86651-3, -6) (OPTIONAL TO BAC27DPA208)	5199	1
			. FOR REFERENCE TO OTHER STOWAGE BIN DETAILS, SEE NHA	5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

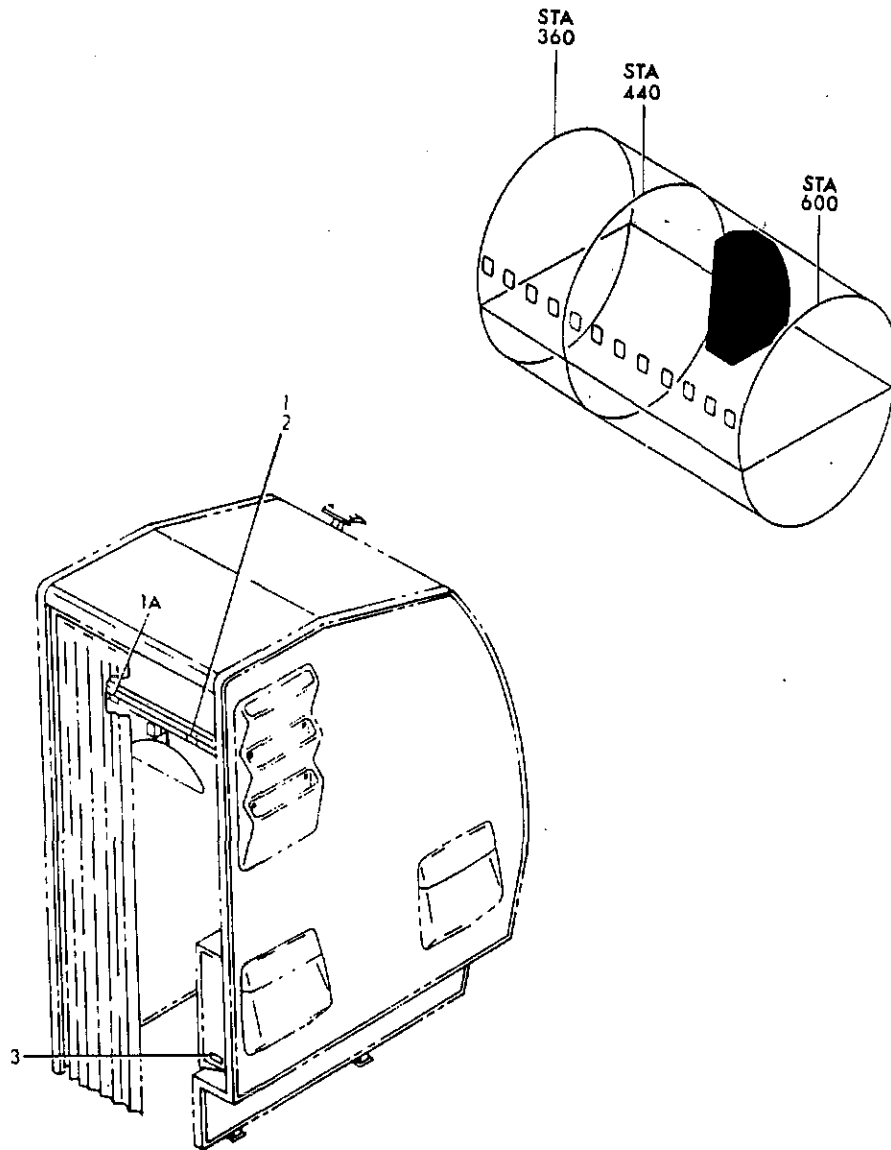 


FIGURE 192. CLOSET INSTL, FORWARD COAT (REQUIRED PLACARDS ONLY)

DETAILED PARTS LIST
11-01-192
PAGE 0

11-01-192

NOV 21/90

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
192		65-87632-1	CLOSET INSTL, FORWARD COAT (REQUIRED PLACARDS ONLY) . .							5299	RF
1		65-64579-222XXX	. SHELF ASSY, (REQUIRED PLACARDS ONLY).							5299	RF
1A		BAC27CPA196	. . PLACARD, SHELF LOAD LIMIT 15 LBS.							5299	1
2		BAC27CPA430	. PLACARD, LOAD LIMIT BELOW SHELF 100 LB/45 KILO. . . .							5299	1
3		BAC27CPA431	. PLACARD, LOAD LIMIT 5 LBS/2 KILOS							5299	1
4		BAC27DPA556	. PLACARD, MAXIMUM SHELF LOAD LIMIT 22 LB/10 KILO . . .							5299	1
			. FOR REFERENCE TO OTHER CLOSET DETAILS, SEE NHA. . . .							5299	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

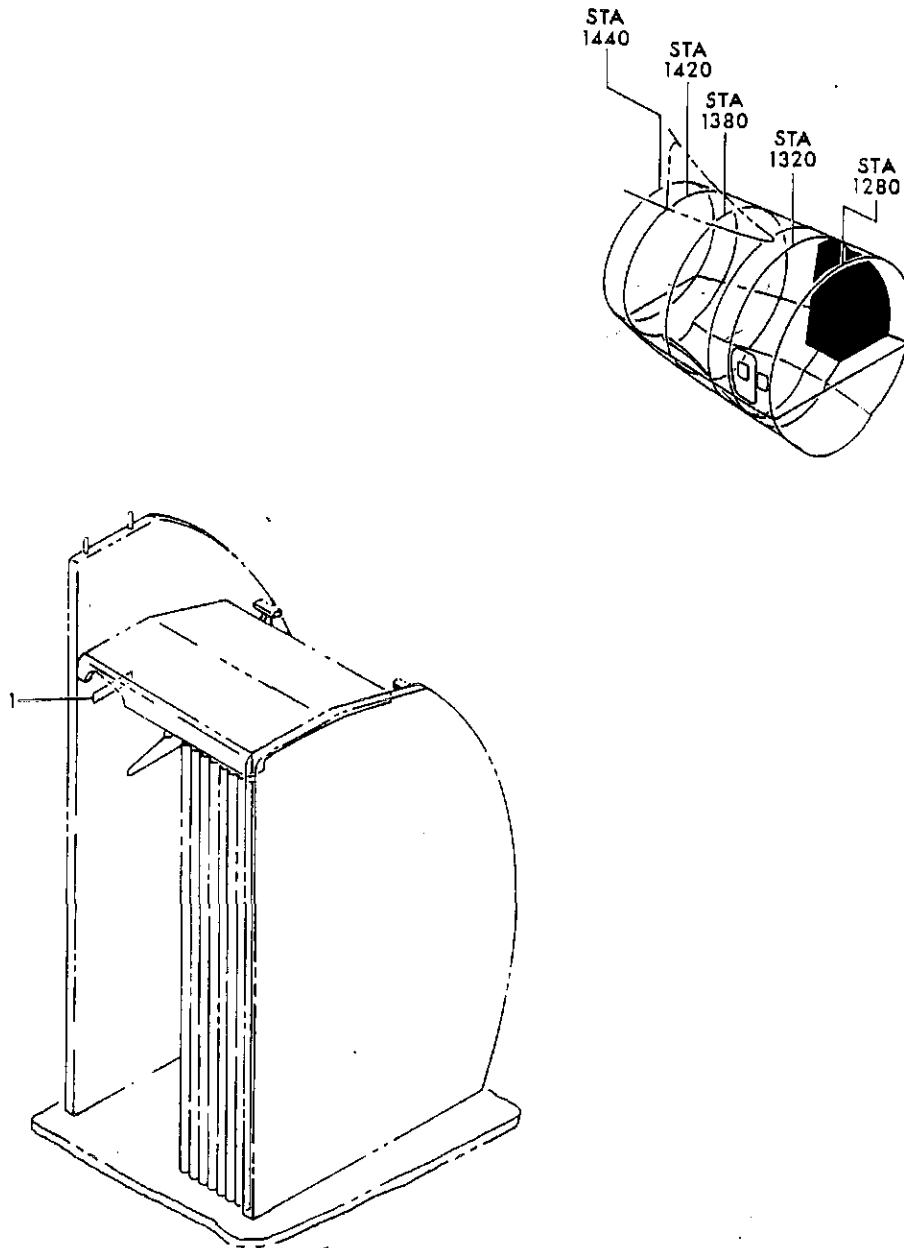 


FIGURE 192B. CLOSET INSTL, AFT COAT (REQUIRED PLACARDS ONLY)

DETAILED PARTS LIST
11-01-192B
PAGE 0

11-01-192B

NOV 21/90

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
192B	1	65-87632-2 BAC27DPA613	CLOSET INSTL, AFT COAT (REQUIRED PLACARDS ONLY)							5299	RF
			. PLACARD, LOAD LIMIT 180 LBS/81 KILOS.							5299	1
			. FOR REFERENCE TO OTHER CLOSET DETAILS, SEE NHA.							5299	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

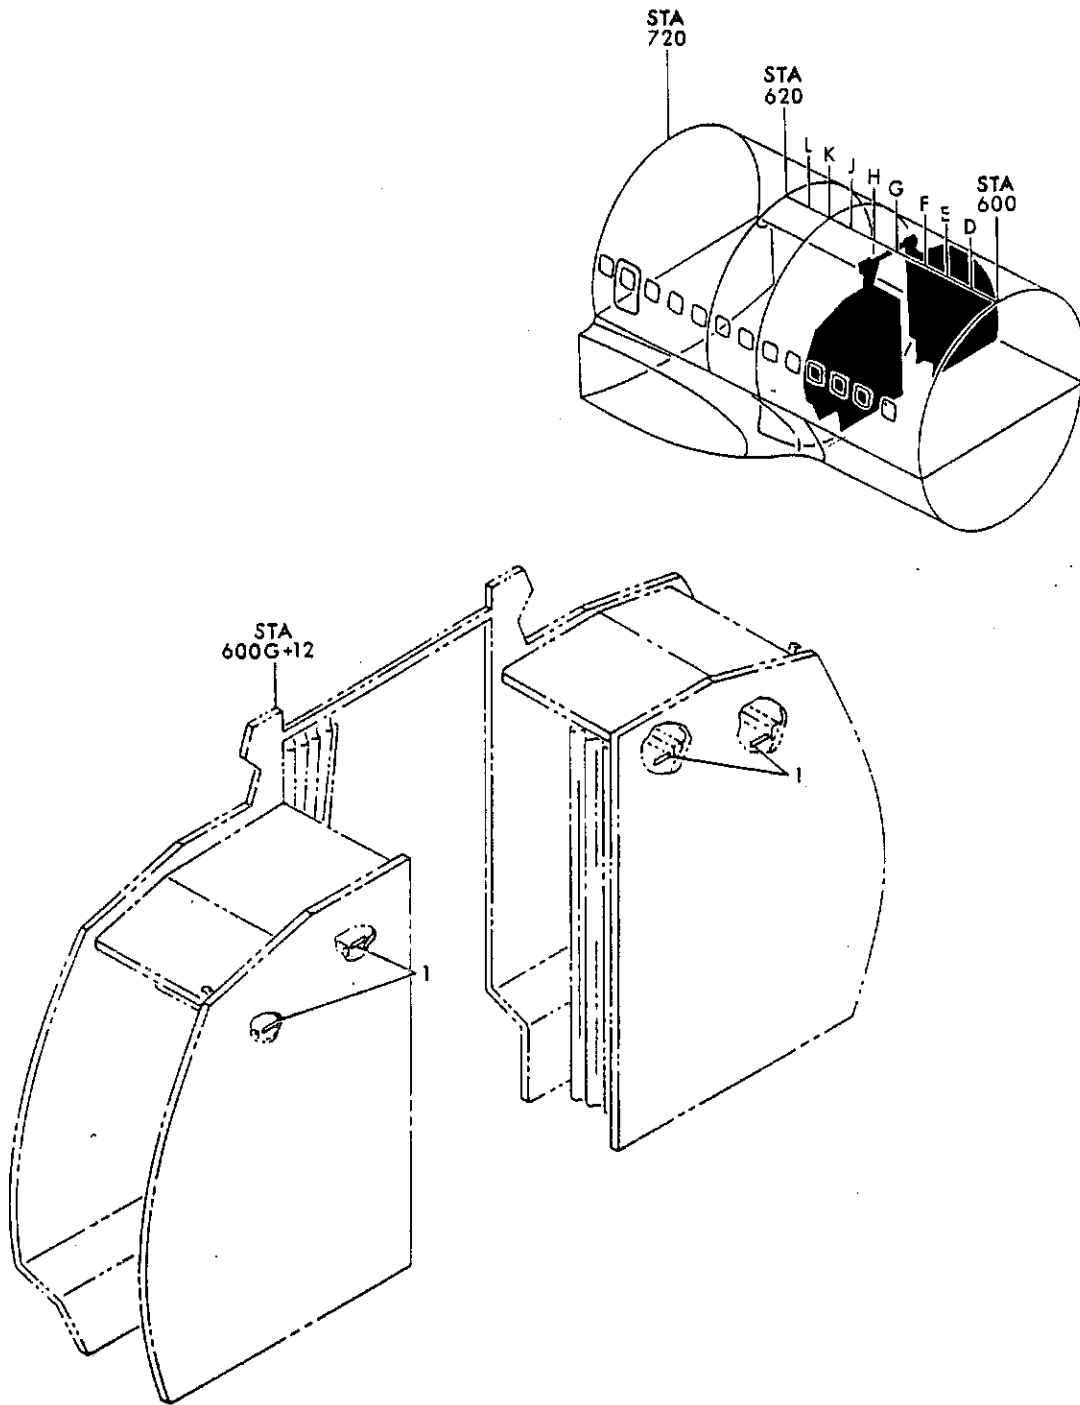 


FIGURE 19C. CLOSET INSTL, MID-CABIN COAT (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

MISSING ITEM NUMBERS ARE NOT APPLICABLE

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

 
SECTION 02 FUSELAGE/TAIL



MISSING ITEM NUMBERS ARE NOT APPLICABLE

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

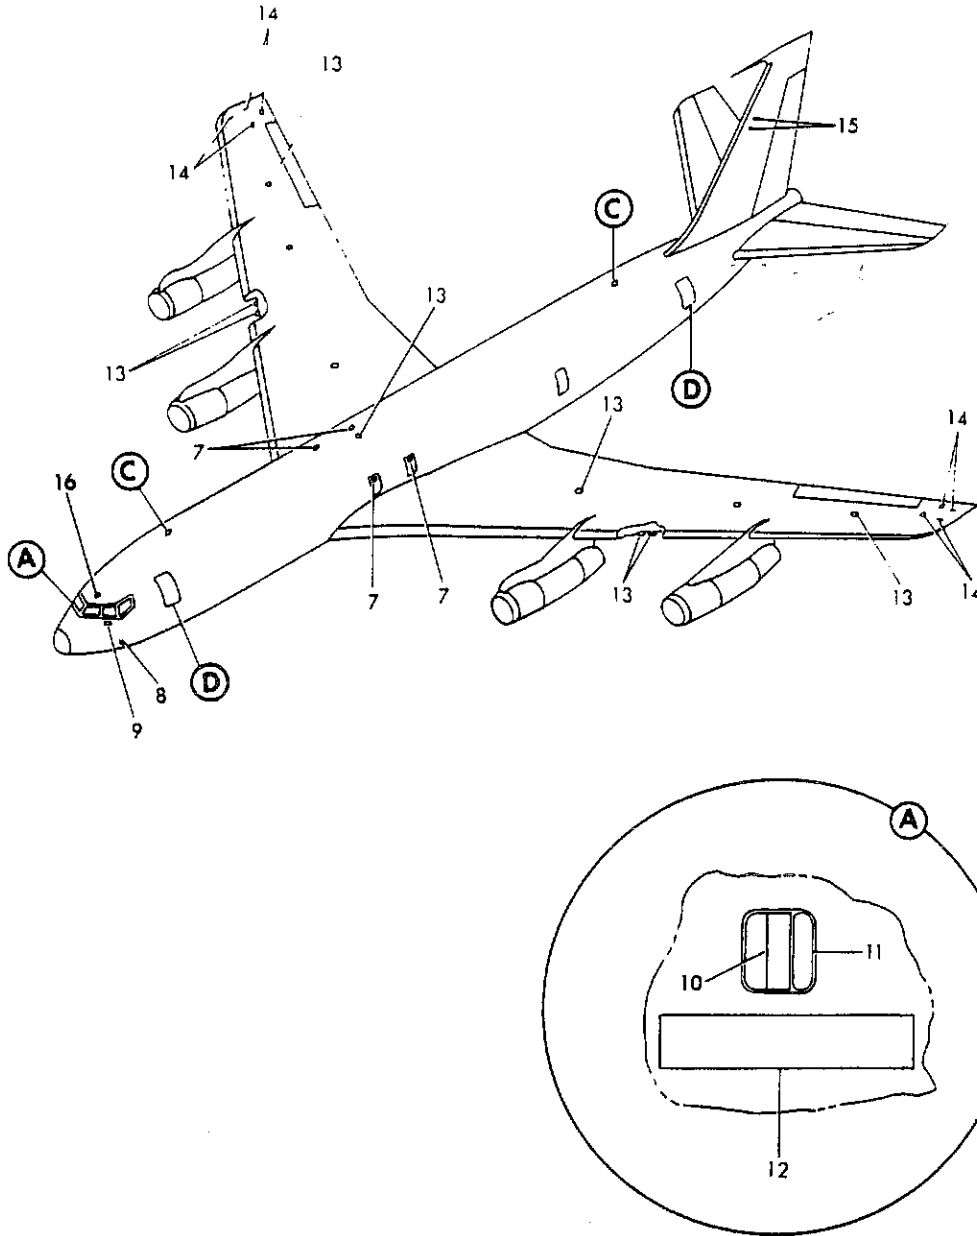

11-02-00/A 707-257

FIGURE 1A. MARKING INSTL, AIRPLANE MAINTENANCE EXTERIOR (SHEET 1)

DETAILED PARTS LIST
11-02-1A
PAGE 0

11-02-1A

NOV 21/90

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

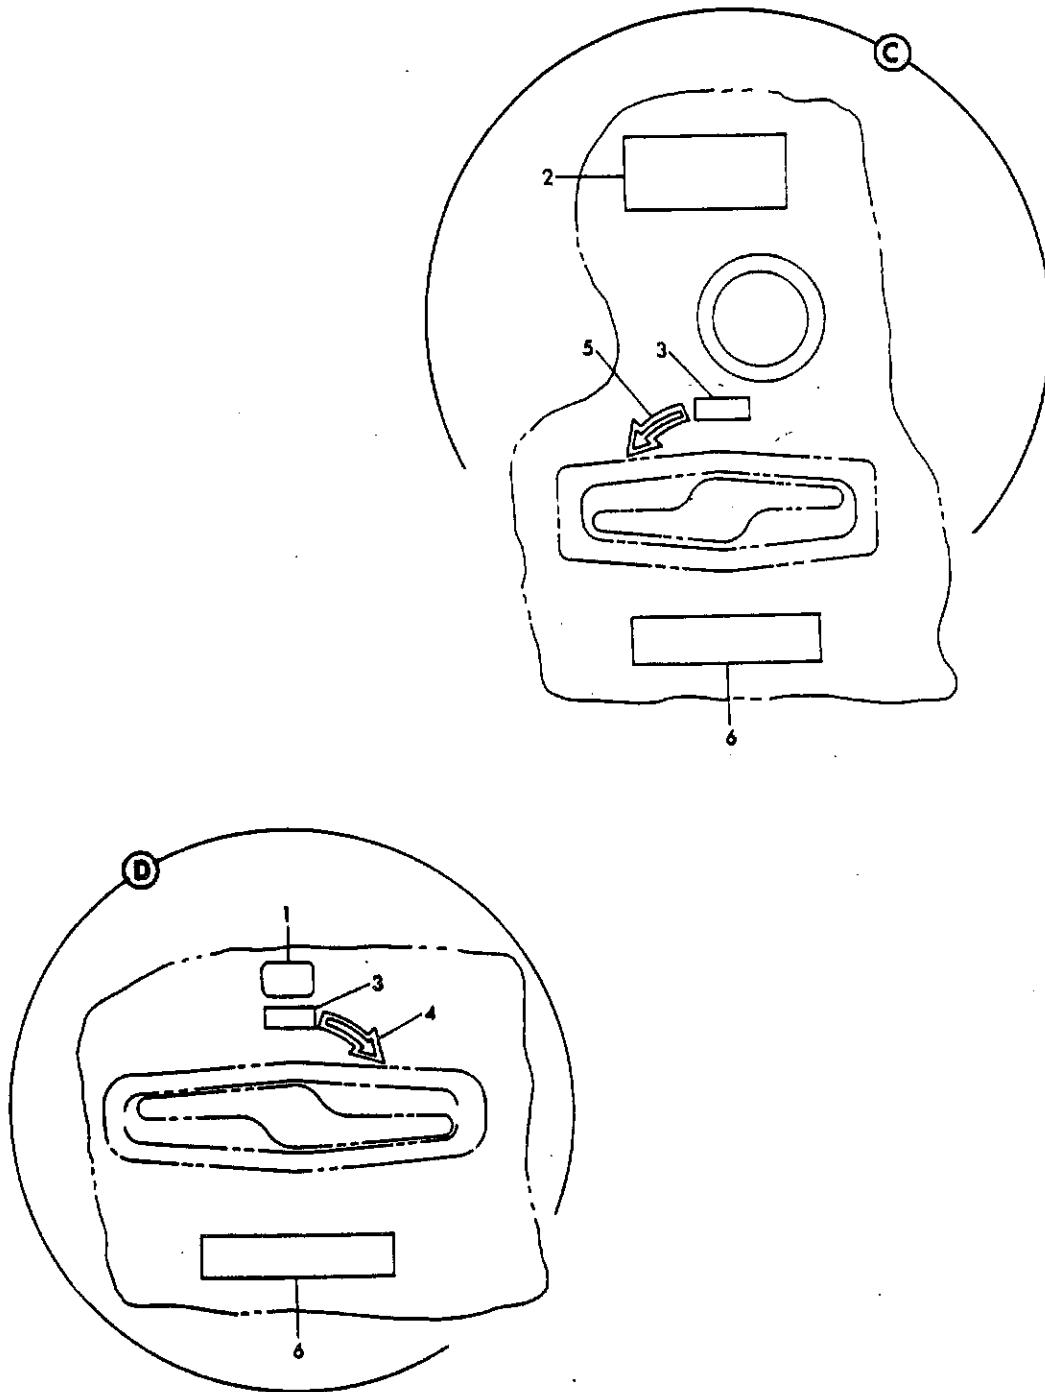 


FIGURE 1A. MARKING INSTL, AIRPLANE MAINTENANCE EXTERIOR (SHEET 2)

NOV 21/90

11-02-1A

DETAILED PARTS LIST
11-02-1A
PAGE 1

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
1A	65-2000-8001	MARKING INSTL, AIRPLANE MAINTENANCE EXTERIOR.								1
1	BACM9L2BN	. MARKER-ALUMINUM FOIL, EXIT.								2
2	BACM9E2AA	. MARKER-ALUMINUM FOIL, EMERGENCY EXIT.								2
3	BACM9L2AZ	. MARKER-ALUMINUM FOIL, OPEN.								4
4	BACM9S1AU	. MARKER-ALUMINUM FOIL, SYMBOL.								2
5	BACM9S1AR	. MARKER-ALUMINUM FOIL, SYMBOL.								2
6	BACM9L10AAV	. MARKER-ALUMINUM FOIL, DOOR HANDLE INSTRUCTIONS.								4
7	BACM9E2AB	. MARKER-ALUMINUM FOIL, EMERGENCY EXIT DOOR RELEASE								4
		INSTRUCTIONS								
8	BACM8L9BP	. MARKER-ALUMINUM FOIL, NOSE WHEEL LIGHT SWITCH								1
		INSTRUCTIONS								
9	BACM9L10ALP	. MARKER-ALUMINUM FOIL, WINDOW ENTRY INSTRUCTIONS								1
10	BACM9L2BM	. MARKER-ALUMINUM FOIL, PUSH.								1
11	BACM9L2BL	. MARKER-ALUMINUM FOIL, PULL.								1
12	BACM9E2AJ	. MARKER-ALUMINUM FOIL, WINDOW EMERGENCY EXIT								1
		INSTRUCTIONS								
13	BACM8L9BL	. MARKER-ALUMINUM FOIL, GROUND HERE								11
14	BAC27DPA448	. MARKER-ALUMINUM FOIL, USE ONLY NON-MAGNETIC FASTENERS WITHIN 36 INCHES OF FLUX VALVE								8
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

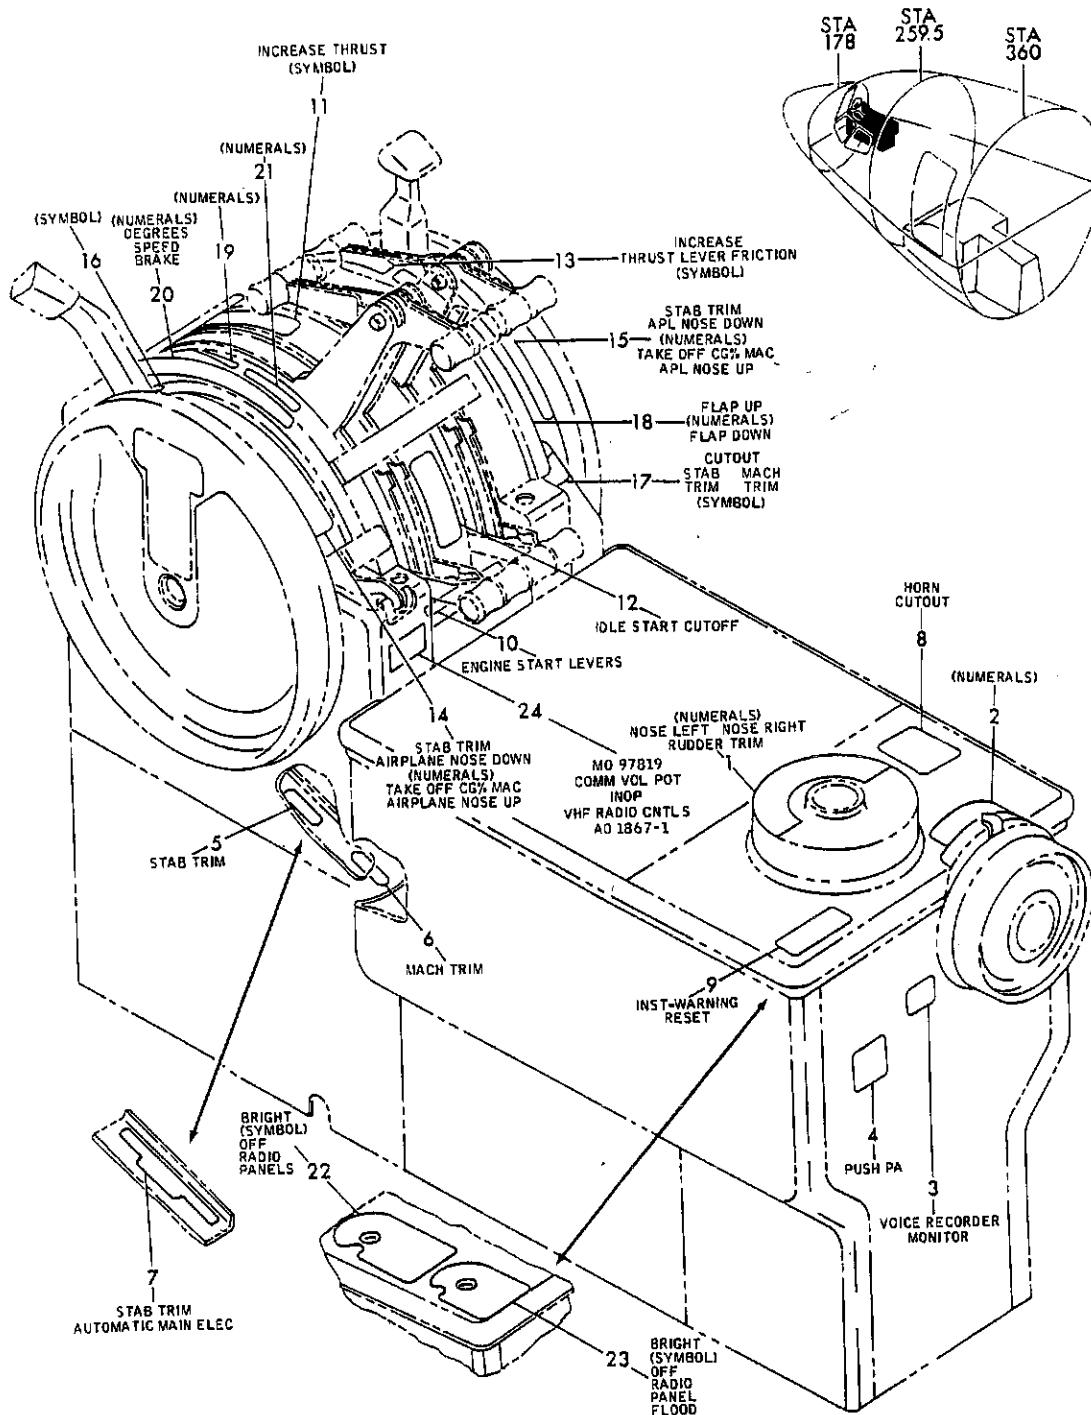 


FIGURE 2C. STAND ASSY, PILOT AND COPILOT CONTROL (REQUIRED PLACARDS ONLY)


STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	2C	50-5561-94	STAND ASSY, PILOT AND COPILOT CONTROL (REQUIRED							0150	RF
R			PLACARDS ONLY) (SEE 25-2, FIG. 15, ITEM 12)								
R	1	BACM10R42-1AM	. MARKER-ALUMINUM FOIL, RUDDER TRIM							0150	1
R	2	BACM10N30-2DUY	. MARKER-ALUMINUM FOIL, AILERON TRIM							0150	1
R	3	BACM10R25AV	. MARKER-ALUMINUM FOIL, VOICE RECORDER MONITOR							0250	1
R	7	BACM10T30-21L	. MARKER-ALUMINUM FOIL, STABILIZER TRIM							0150	1
R	9	BACM10W2YS	. MARKER-ALUMINUM FOIL, WARNING RESET INSTRUCTIONS							0150	1
R	10	BACM10E20-2EA	. MARKER-ALUMINUM FOIL, ENGINE START LEVERS							0150	1
R	11	BACM10L40-18JW	. MARKER-ALUMINUM FOIL, INCREASE THRUST							0150	1
	12	BACM10M40-1APA	. MARKER-ALUMINUM FOIL, IDLE START CUTOFF (DELETED BY							0103	1
			SB 2875)								
R	12	BACM10L1DGK	. MARKER-ALUMINUM FOIL, IDLE START CUTOFF (ADDED BY							0150	1
R			SB 2875)								
R	14	69-2335-45	. MARKER-ALUMINUM FOIL, STABILIZER TRIM							0150	1
R	15	69-2335-46	. MARKER-ALUMINUM FOIL, STABILIZER TRIM							0150	1
R	16	BACM10L00-18JV	. MARKER-ALUMINUM FOIL, SPEED BRAKE							0150	1
R	17	BACM10S21-23AJ	. MARKER-ALUMINUM FOIL, MACH TRIM AND STA8 TRIM CUTOUT							0150	1
R	18	BACM10F2CY	. MARKER-ALUMINUM FOIL, FLAPS							0150	1
R	19	BACM10N2DVM	. MARKER-ALUMINUM FOIL, SPEED BRAKE							0150	1
R	20	BACM10B4CV	. MARKER-ALUMINUM FOIL, SPEED BRAKE							0150	1
R	21	BACM10N10-2CRH	. MARKER-ALUMINUM FOIL, SPEED BRAKE							0150	1
R	22	BACM10P22-9NA	. MARKER-ALUMINUM FOIL, RADIO PANELS							0150	1
			. FOR REFERENCE TO OTHER STAND DETAILS, SEE NHA							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2E	50-5561-149		STAND ASSY, PILOT AND COPILOT CONTROL (REQUIRED PLACARDS ONLY) (REWORKED BY DWG NO. 65C10044-1) (SEE 25-2, FIG. 15, ITEM 12)	5199	RF
1	BACM10R42-1AM		. MARKER-ALUMINUM FOIL, NOSE LEFT NOSE RIGHT RUDDER . . TRIM	5199	1
2	BACM10R25AV		. MARKER-ALUMINUM FOIL, VOICE RECORDER MONITOR.	5199	1
2A	BACM10R25AV		. MARKER-ALUMINUM FOIL, VOICE RECORDER MONITOR.	5199	1
2B	BACM10L11-1BYV		. MARKER-ALUMINUM FOIL, PUSH PA	5199	1
3	BACM10L11-1BYV		. MARKER-ALUMINUM FOIL, PUSH PA	5199	1
4	BACM10T30-21L		. MARKER-ALUMINUM FOIL, STAB TRIM AUTOMATIC MAIN ELEC .	5199	1
6	BACM10E20-2EA		. MARKER-ALUMINUM FOIL, ENGINE START LEVERS	5199	1
7	BACM10L40-1BJW		. MARKER-ALUMINUM FOIL, INCREASE THRUST	5199	1
8	BACM10M40-1APA		. MARKER-ALUMINUM FOIL, IDLE START CUTOFF	5199	1
9	BACM10B30-4BY		. MARKER-ALUMINUM FOIL, INCREASE THRUST LEVER FRICTION	5199	1
10	69-2335-45		. MARKER-ALUMINUM FOIL, STABILIZER TRIM AIRPLANE NOSE . DOWN TAKE OFF CG PCT MAC AIRPLANE NOSE UP	5199	1
11	69-2335-46		. MARKER-ALUMINUM FOIL, STABILIZER TRIM AIRPLANE NOSE . DOWN TAKE OFF CG PCT MAC AIRPLANE NOSE UP	5199	1
12	BACM10L00-1BJV		. MARKER-ALUMINUM FOIL, SPEED BRAKE	5199	1
13	BACM10S21-23AJ		. MARKER-ALUMINUM FOIL, STAB-TRIM MACH TRIM CUTOUT. . .	5199	1
14	BACM10F2CY		. MARKER-ALUMINUM FOIL, FLAP UP FLAP DOWN	5199	1
15	BACM10N2DVW		. MARKER-ALUMINUM FOIL, SPEED BRAKE	5199	1
16	BACM10B4CV		. MARKER-ALUMINUM FOIL, SPEED BRAKE	5199	1
17	BACM10N10-2CRH		. MARKER-ALUMINUM FOIL, SPEED BRAKE	5199	1
18	BACM10P22-9NA		. MARKER-ALUMINUM FOIL, RADIO PANELS.	5199	1
19	BAC27CCT1		. MARKER-ALUMINUM FOIL, RADIO PANEL FLOOD	5199	1
22	BACM10N30-2DUY		. MARKER-ALUMINUM FOIL, AILERON TRIM.	5199	1
			. FOR REFERENCE TO OTHER STAND DETAILS, SEE NHA	5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

 STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

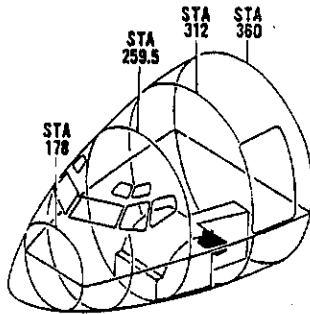

MAIN CABIN

MANUAL TEMP CONTROL

1. MOVE ELECT SWITCH TO "OFF"
 2. LIFT BRAKE - ROTATE TO "LOCK"
 3. DISENGAGE CLUTCH AND INSERT TAPER LOCKING KEY
 4. INSERT CRANK AND HOLD
 5. PLACE "BRAKE" TO "NORMAL"
 6. ROTATE CRANK AS DESIRED
 7. PLACE "BRAKE" TO "LOCK" AND RELEASE CRANK
- WARNING: DO NOT EXCEED 160°F SUPPLY AIR TEMP ON FLIGHT ENGR. PANEL

RE-ENGAGE AUTO CONTROL

1. HOLD CLUTCH KNOB - REMOVE TAPER LOCKING KEY AND STOW.
2. RELEASE CLUTCH KNOB
3. INSERT CRANK AND HOLD
4. PLACE "BRAKE" TO "NORMAL"
5. ROTATE CRANK TO "COOL" LIMIT, THEN, IF NECESSARY, TOWARD "HEAT." SUDDEN RESISTANCE IS FELT WHEN ENGAGEMENT OCCURS.
6. REMOVE CRANK
7. MOVE ELECT. SWITCH TO "NORMAL"

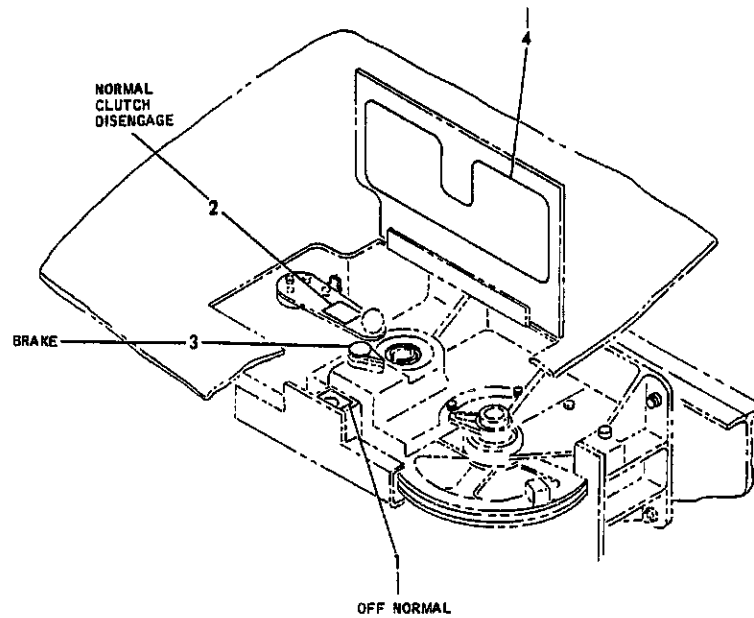 


FIGURE 8. CONTROL AND DECLUTCH INSTL, CABIN TEMPERATURE CONTROL VALVE
MANUAL OVERRIDE (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8	65-18301-1		CONTROL AND DECLUTCH INSTL, CABIN TEMPERATURE CONTROL . VALVE MANUAL OVERRIDE (REQUIRED PLACARDS ONLY) (SEE 21-5, FIG. 43, ITEM 1)		RF
1	BACM10L1CWP		. MARKER-ALUMINUM FOIL, SWITCH BOX.		1
2	BACM10C5M		. MARKER-ALUMINUM FOIL, CLUTCH POSITION INDICATOR . . .		1
3	BACM10L13CB		. MARKER-ALUMINUM FOIL, BRAKE IDENTIFICATION.		1
4	BACM10C2ALK		. MARKER-ALUMINUM FOIL, MANUAL OVERRIDE INSTRUCTIONS. .		1
			. FOR REFERENCE TO OTHER CONTROL AND DECLUTCH DETAILS, SEE NHA		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

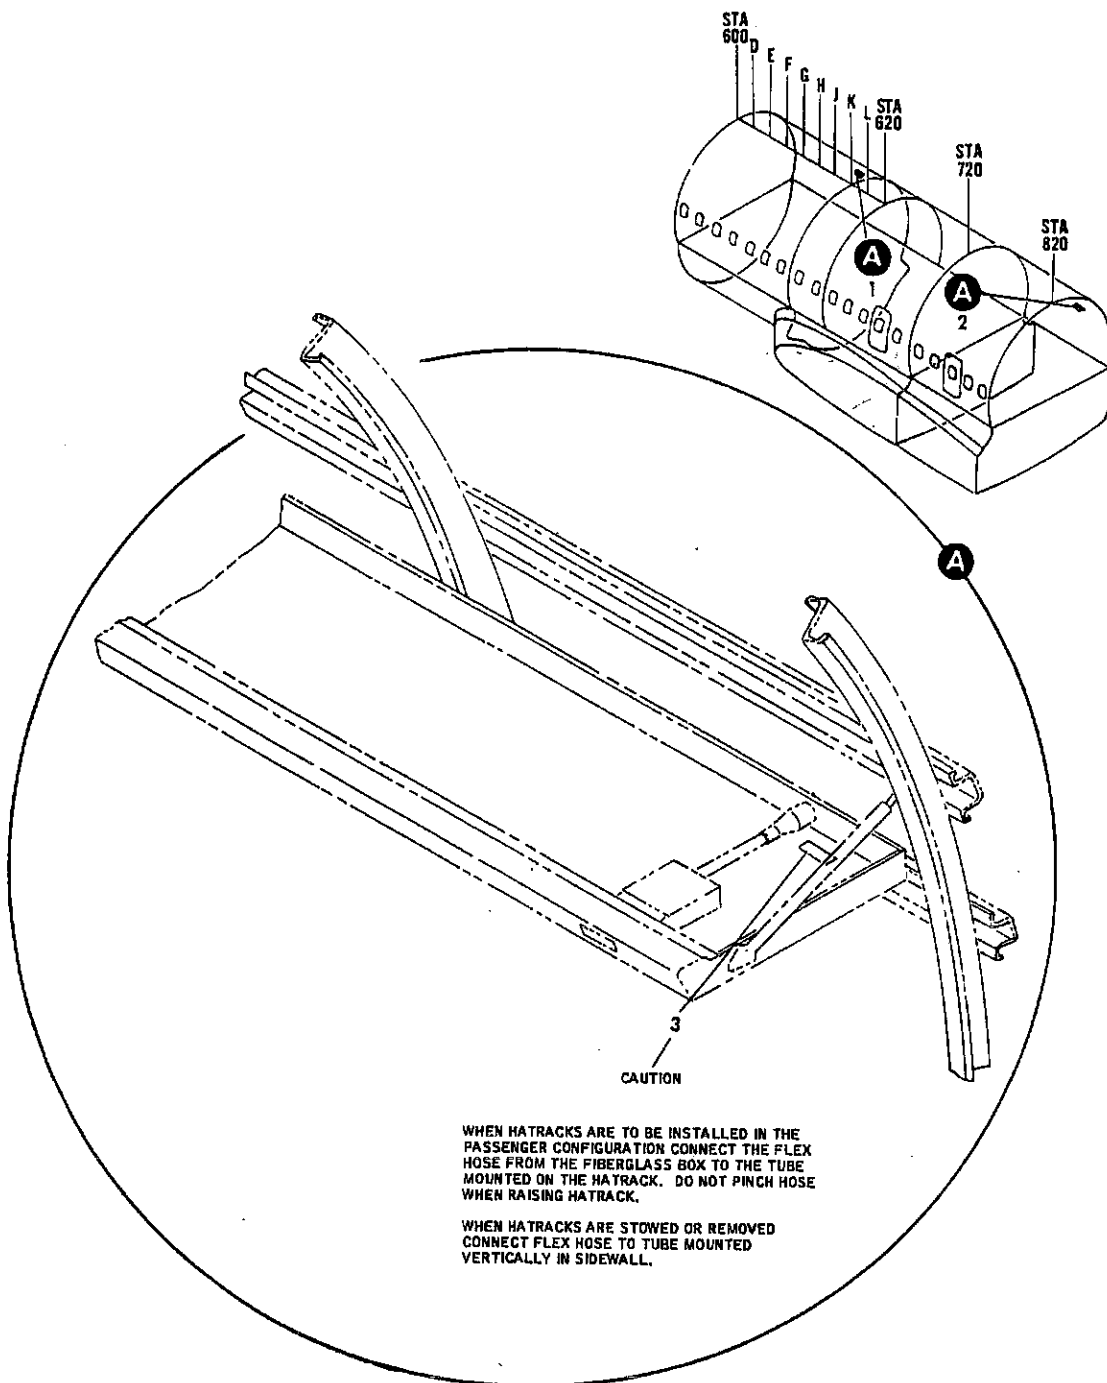 


FIGURE 10. SENSOR INSTL, SECTION 54 BULLNOSE HATRACK TEMPERATURE (REQUIRE RED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R R	10 1	65-33184-35	SENSOR INSTL, SECTION 54 BULLNOSE HAT RACK TEMPERATURE (REQUIRED PLACARDS ONLY) (SEE 21-2, FIG. 2, ITEM 31)							0150	RF
	2	65-33184-36	SENSOR INSTL, SECTION 54 BULLNOSE HAT RACK TEMPERATURE (REQUIRED PLACARDS ONLY) (SEE 21-2, FIG. 2, ITEM 31B)							0150	RF
	3	BACM10C37H	. MARKER-ALUMINUM FOIL, CAUTION INSTALLATION. INSTRUCTIONS . FOR REFERENCE TO OTHER SENSOR DETAILS, SEE NHA. . . .							0150 0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

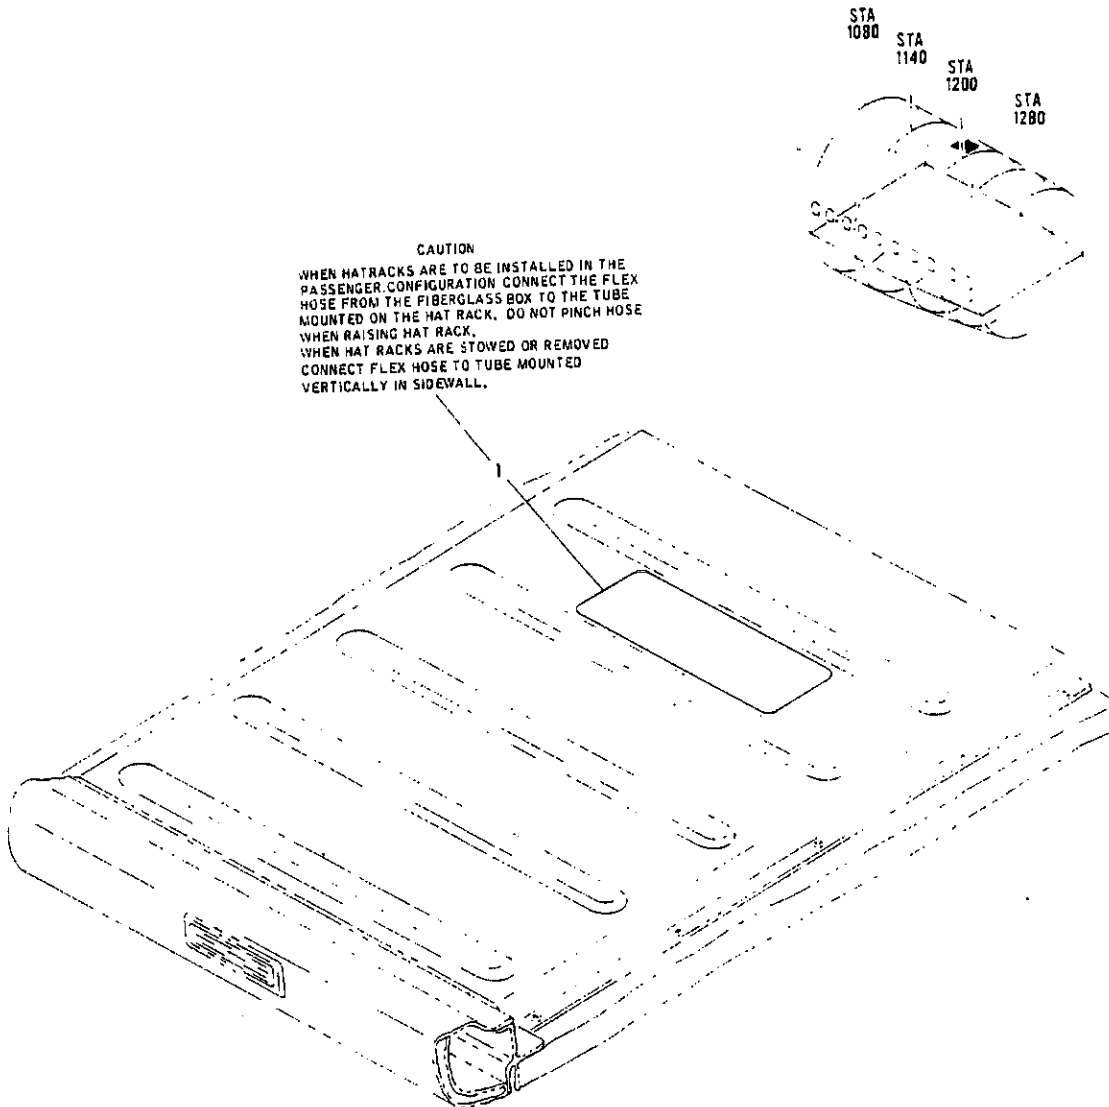 


FIGURE 11. SENSOR INSTL, SECTION 57 BULLNOSE HATRACK TEMPERATURE (REQUIRED PLACARDS ONLY)

707

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R R R R	11	65-33184-23							0150	RF
		SENSOR INSTL, SECTION 57 OVERHEAD STOWAGE TEMPERATURE . (REQUIRED PLACARDS ONLY) (SEE 21-2, FIG. 3, ITEM 10)								
	1	BACM10C37H							0150	1
		. MARKER-ALUMINUM FOIL, CAUTION FOR REFERENCE TO OTHER SENSOR DETAILS, SEE NHA. . . .							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

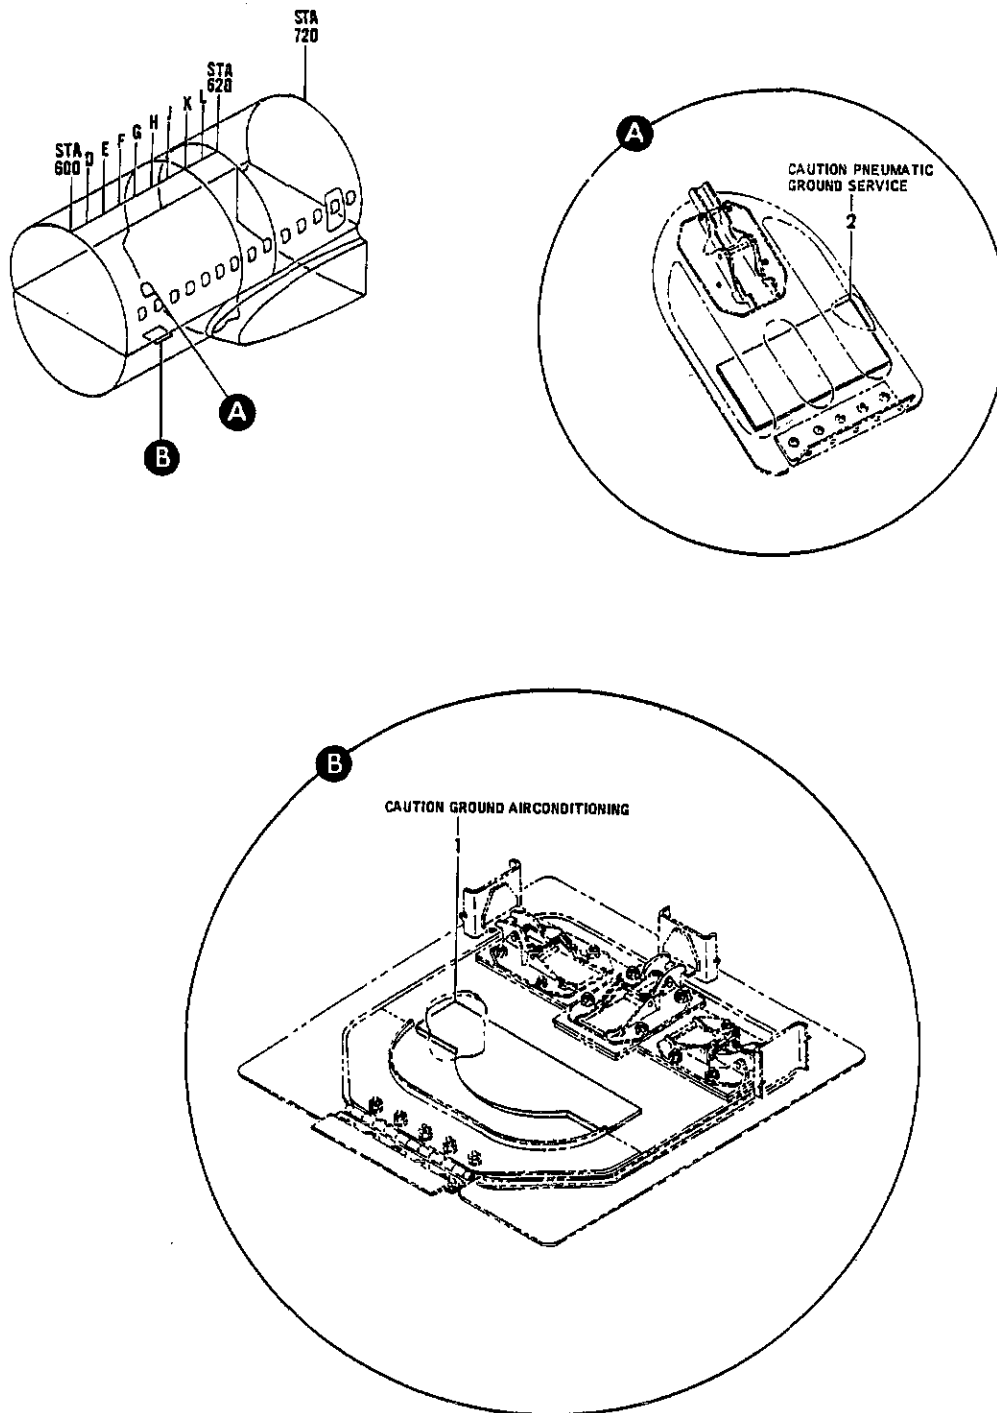 


FIGURE 13. SCOTCH-CAL INSTL. PNEUMATIC START AND GROUND AIR CONDITIONING DOORS

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
13	69-36986-1	SCOTCH-CAL INSTL, PNEUMATIC START AND GROUND AIR. . . . CONDITIONING DOORS AIR CYCLE (SEE 21-2, FIG. 2, ITEM 34)								RF
1	BACM9C5BG	. SCOTCH-CAL, CAUTION GROUND AIR CONDITIONING								1
2	BACM9C62-5R	. SCOTCH-CAL, CAUTION PNEUMATIC GROUND SERVICE. . . .								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

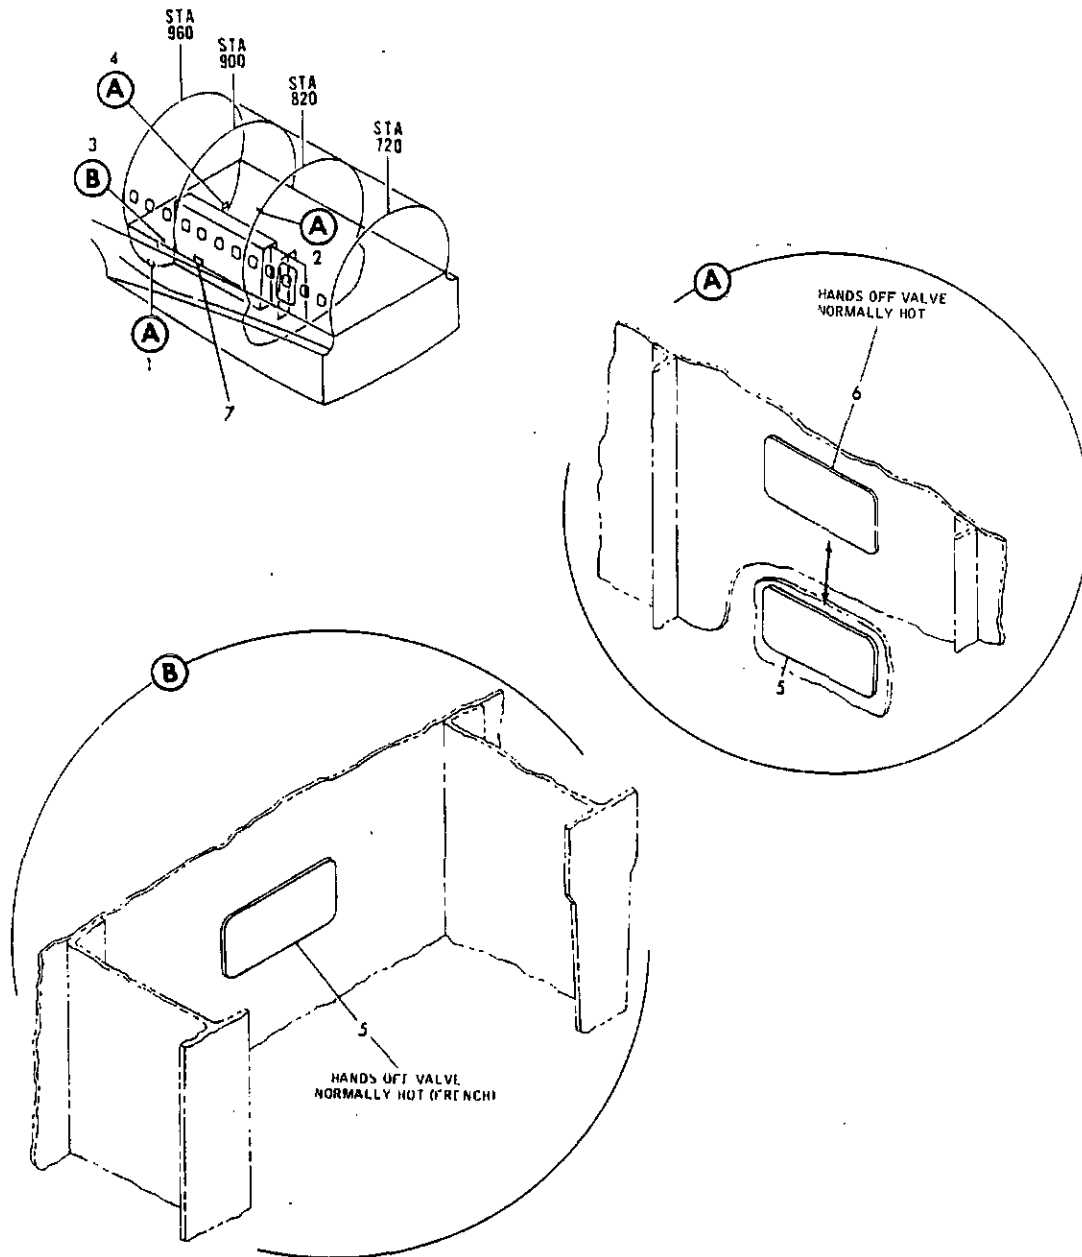 


FIGURE 15. VALVE INSTL, ENGINE START SYSTEM REGULATOR AND SOLENOID (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
15	4	65-18985-1	VALVE INSTL, ENGINE START SYSTEM REGULATOR AND SOLENOID (RH) (REQUIRED PLACARDS ONLY) (SEE 71-4, FIG. 1, ITEM 7)							5199	RF
	6	BACMBV31-2A	. SCOTCH-CAL, HANDS OFF-VALVE-NORMALLY HOT.							5199	1
			. FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

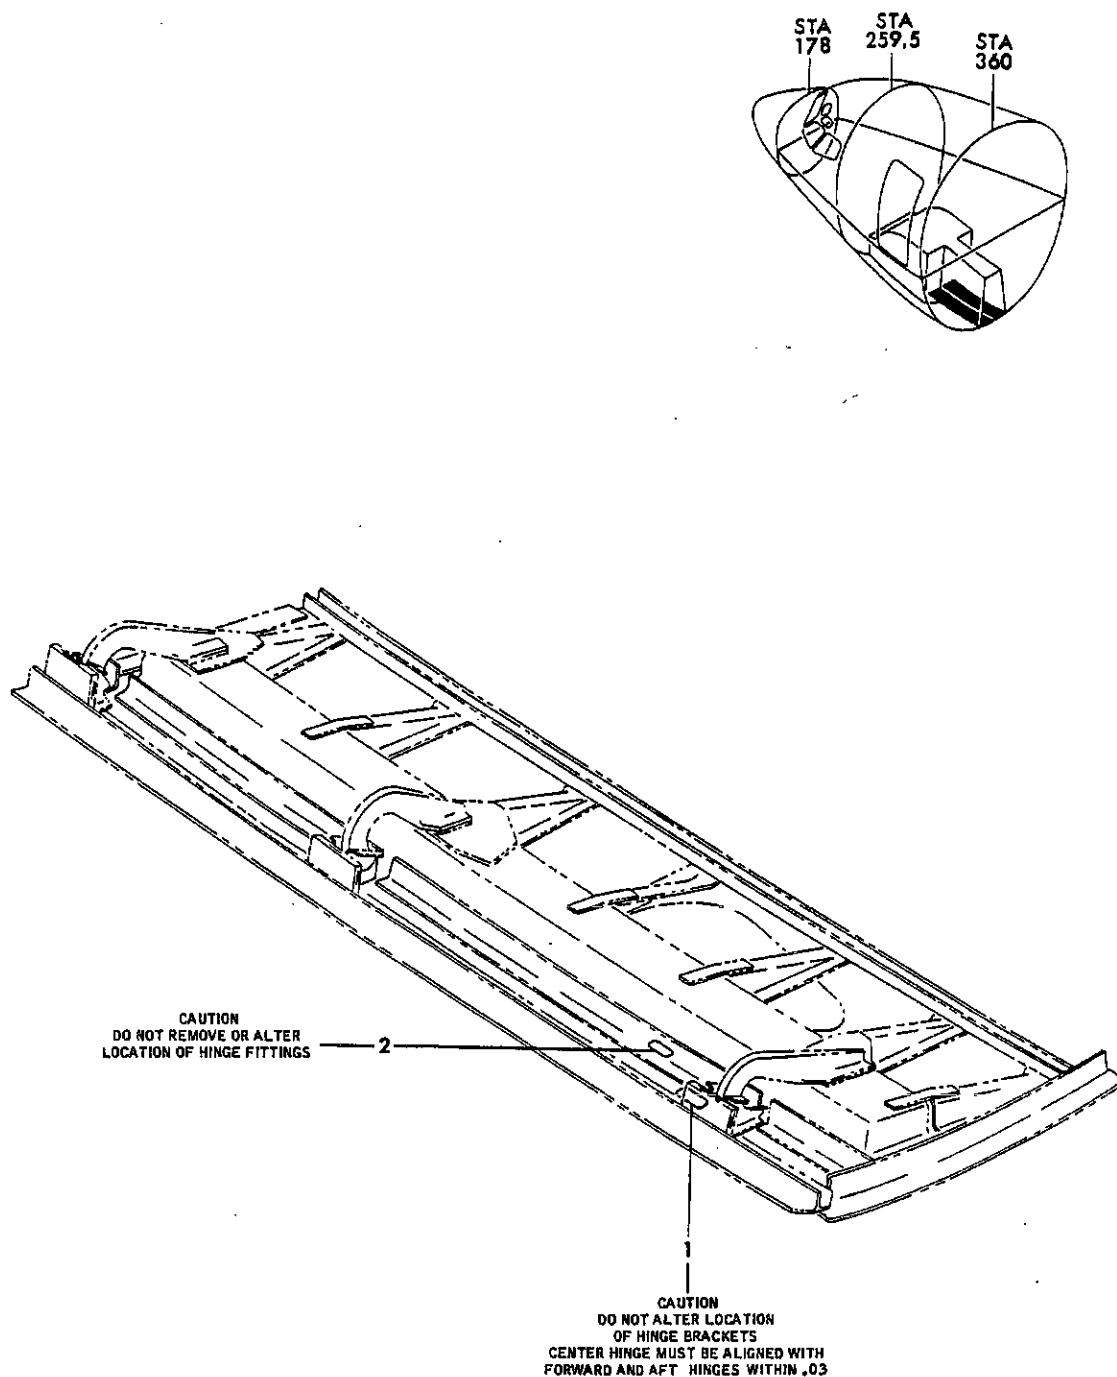 


FIGURE 18. DOOR AND FAIRING INSTL, STATION 310 TO 360 NOSE WHEEL WELL (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
18	65-31480-1	DOOR AND FAIRING INSTL, STATION 310 TO 360 NOSE WHEEL .								RF
		WELL (LH) (REQUIRED PLACARDS ONLY) (SEE 53-1, FIG.								
		1, ITEM 29 AND 53-2, FIG. 6, ITEM 30)								
	65-31480-2	DOOR AND FAIRING INSTL, STATION 310 TO 360 NOSE WHEEL .								RF
		WELL (RH) (REQUIRED PLACARDS ONLY) (SEE 53-1, FIG.								
		1, ITEM 29 AND 53-2, FIG. 6, ITEM 30)								
1	BACM10C37D	. MARKER-ALUMINUM FOIL, DO NOT ALTER LOCATION OF HINGE								1
		BRACKETS INSTRUCTIONS								
	65-31480-119	. DOOR ASSY, (REQUIRED PLACARDS ONLY) (LH ONLY)								RF
	65-31480-120	. DOOR ASSY, (REQUIRED PLACARDS ONLY) (RH ONLY)								RF
2	BACM10C37C	. . MARKER-ALUMINUM FOIL, CAUTION DO NOT REMOVE OR. . .								1
		ALTER LOCATION OF HINGE FITTINGS								
		. FOR REFERENCE TO OTHER DOOR AND FAIRING DETAILS, SEE								
		NHA								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

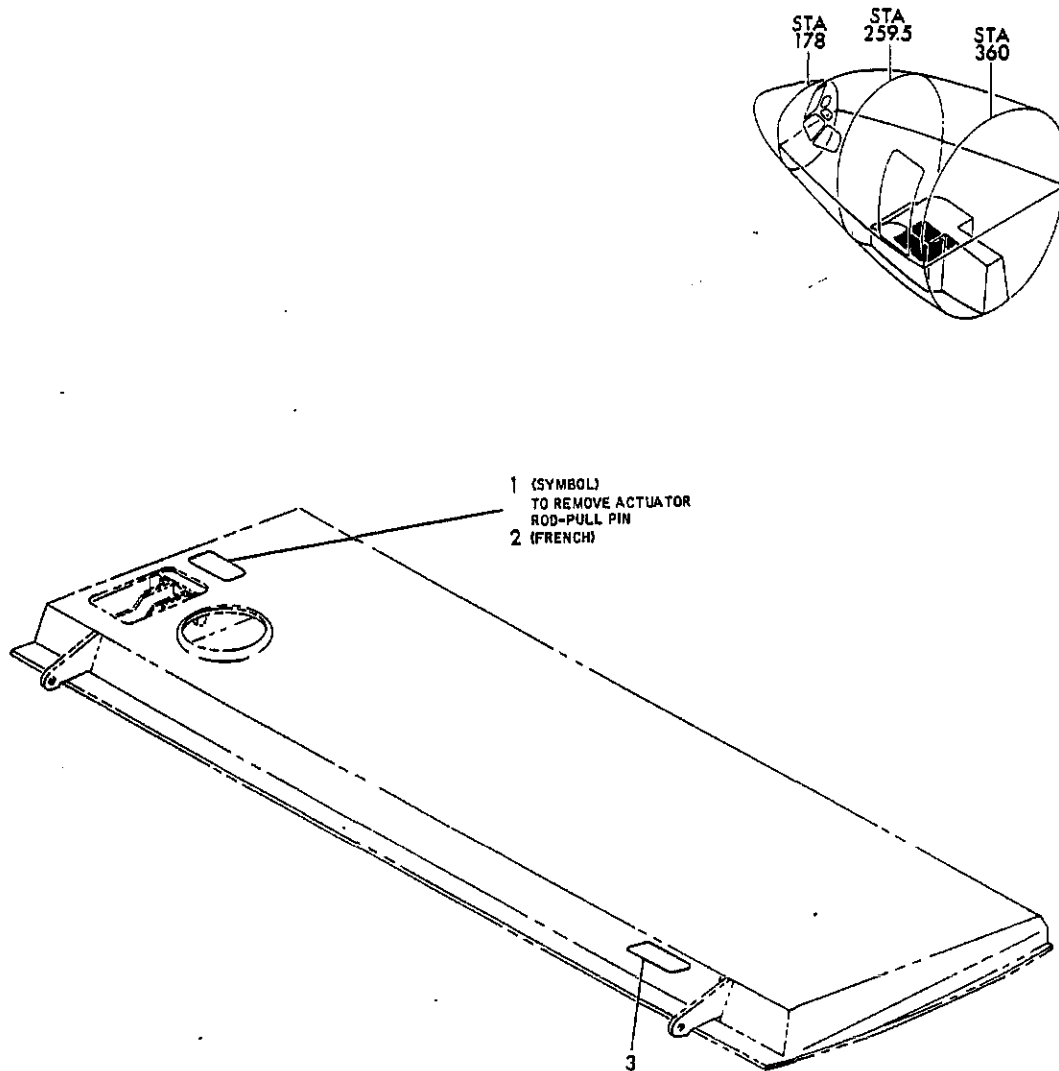 


FIGURE 18A. DOOR ASSY, SECTION 41 WHEEL WELL (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

MISSING ITEM NUMBERS ARE NOT APPLICABLE

11-02-10A

DETAILED PARTS LIST
11-02-18A
PAGE 1

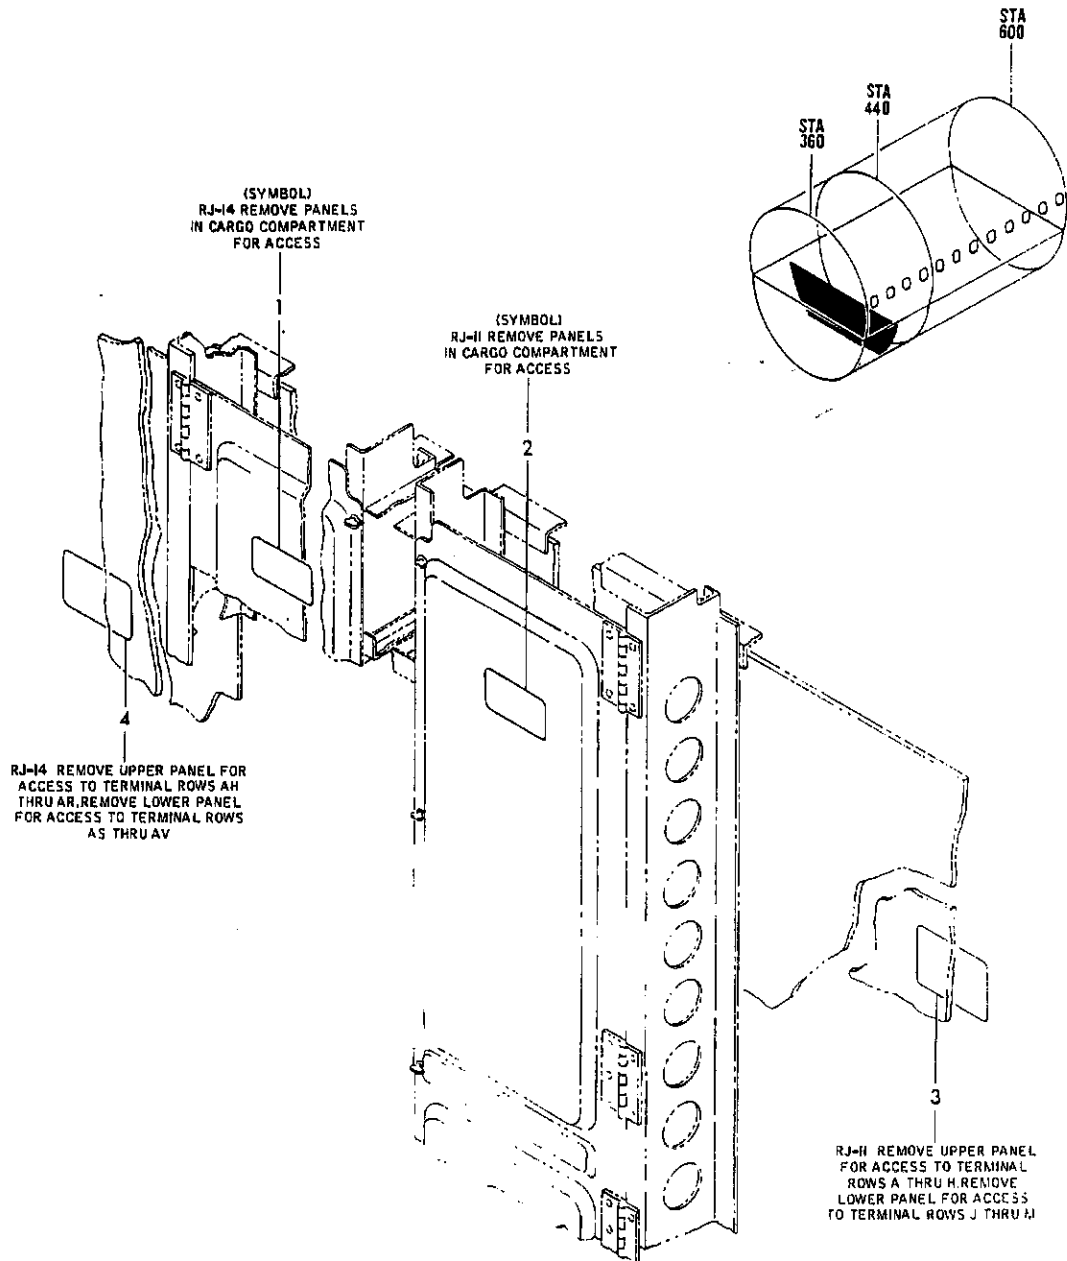 


FIGURE 20. SCOTCH-CAL INSTL, RJ-11 AND RJ-14

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
20	65-25307-1	SCOTCH-CAL INSTL, RJ-11 AND RJ-14 (SEE 24-3, FIG. 6A, . ITEM 12, 24-3, FIG. 6B, ITEM 10, 24-3, FIG. 6C, ITEM 10, 24-3, FIG. 6D, ITEM 14, 24-3, FIG. 6E, ITEM 17 AND 24-3, FIG. 6F, ITEM 11)								RF
1	BACM9P12F	. SCOTCH-CAL, RJ-14 REMOVE PANELS IN CARGO COMPARTMENT FOR ACCESS								1
2	BACM9P12G	. SCOTCH-CAL, RJ-11 REMOVE PANELS IN CARGO COMPARTMENT FOR ACCESS								1
3	BACM9P12H	. SCOTCH-CAL, RJ-11 REMOVE UPPER PANEL FOR ACCESS TO. . TERMINAL ROWS A THRU H REMOVE LOWER PANEL FOR ACCESS TO TERMINAL ROWS J THRU M								1
4	BACM9P12J	. SCOTCH-CAL, RJ-14 REMOVE UPPER PANEL FOR ACCESS TO. . TERMINAL ROWS AH THRU AR REMOVE LOWER PANEL FOR ACCESS TO TERMINAL ROWS AS THRU AV								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

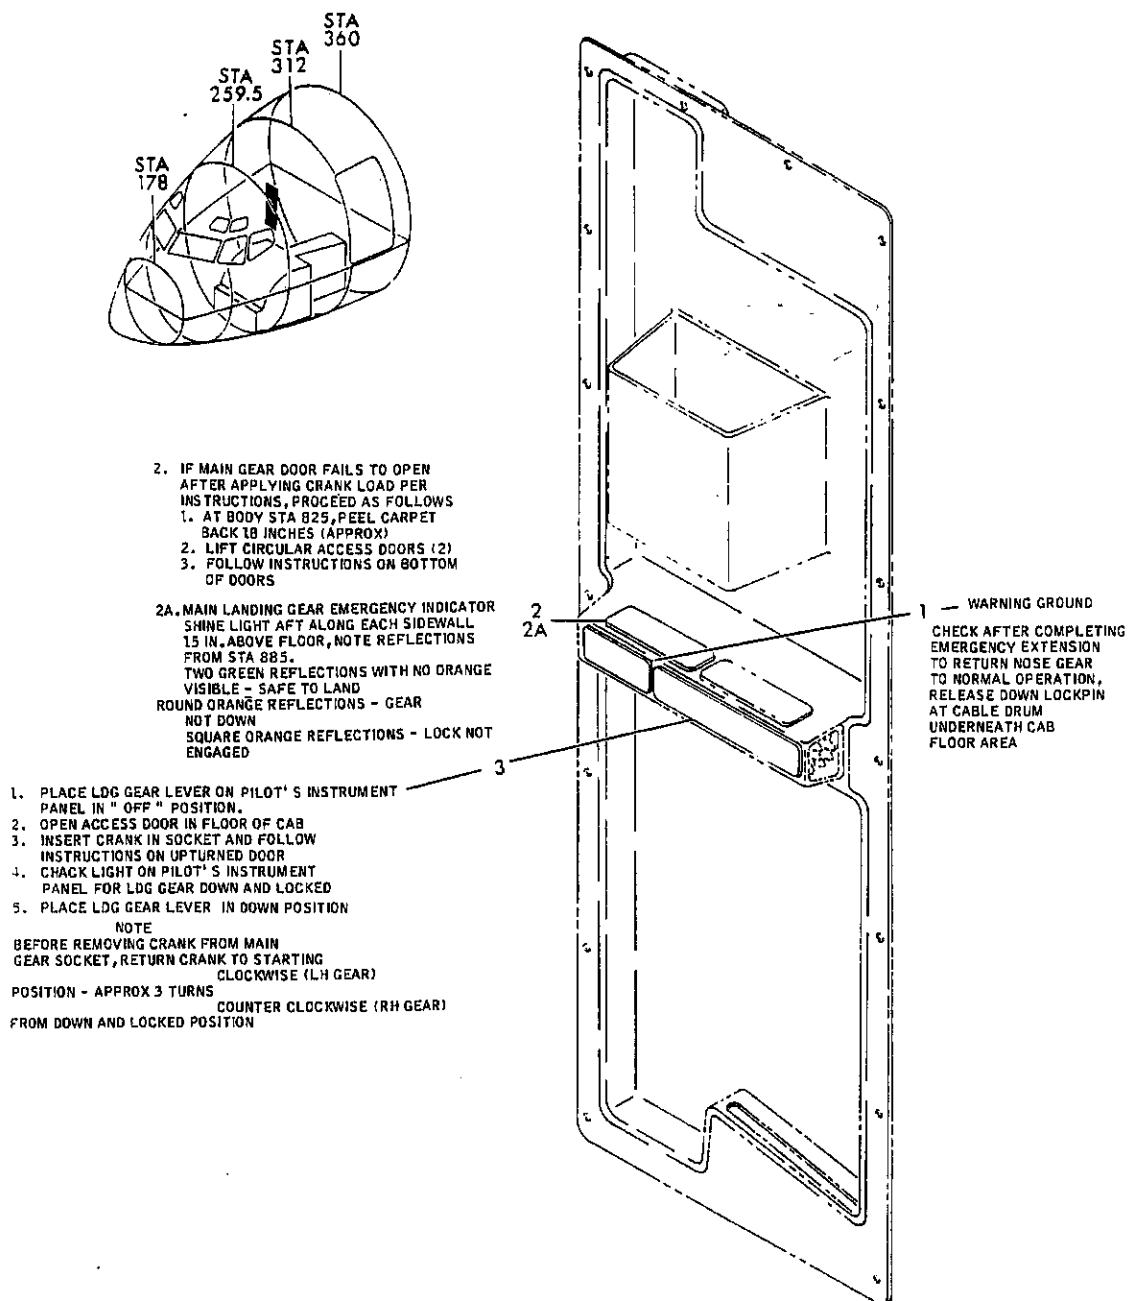 


FIGURE 22. EQUIPMENT INSTL, CONTROL CAB EMERGENCY (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
22	50-9385-27	EQUIPMENT INSTL, CONTROL CAB EMERGENCY (REQUIRED. . . . PLACARDS ONLY) (SEE 25-1, FIG. 1B, ITEM 76, 25-1, FIG. 1C, ITEM 89, 25-1, FIG. 1D, ITEM 82, 25-1, FIG. 1E, ITEM 79, 25-1, FIG. 1F, ITEM 65, 25-1, FIG. 1G, ITEM 69, 25-1, FIG. 1H, ITEM 78, 25-1, FIG. 1J, ITEM 74, 25-1, FIG. 1K, ITEM 71, 25-1, FIG. 2B, ITEM 72, 25-1, FIG. 2C, ITEM 67, 25-1, FIG. 2D, ITEM 60, 25-1, FIG. 2E, ITEM 40, 25-1, FIG. 2F, ITEM 69, 25-1, FIG. 2G, ITEM 66 AND 25-1, FIG. 2H, ITEM 73)								RF
	1 BACM10W32-2UR	. MARKER-ALUMINUM FOIL, LANDING GEAR EMERGENCY. . . . OPERATION								1
	2A BACM10G1HG	. MARKER-ALUMINUM FOIL, MAIN LANDING GEAR EMERGENCY . . INDICATOR INSTRUCTIONS								1
	3 BACM10G92-1FJ	. MARKER-ALUMINUM FOIL, LANDING GEAR EMERGENCY RELEASE INSTRUCTIONS							0103 5199	1
	3 BACM10G92-1FJ	. MARKER-ALUMINUM FOIL, LANDING GEAR EMERGENCY RELEASE INSTRUCTIONS (DELETED BY SB 3061)							0450	1
	3A BAC27CCT21	. MARKER-ALUMINUM FOIL, LANDING GEAR EMERGENCY RELEASE INSTRUCTIONS (ADDED BY SB 3061)							0450	1
		. FOR REFERENCE TO OTHER EQUIPMENT DETAILS, SEE NHA . .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

R
R
R
R
R

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

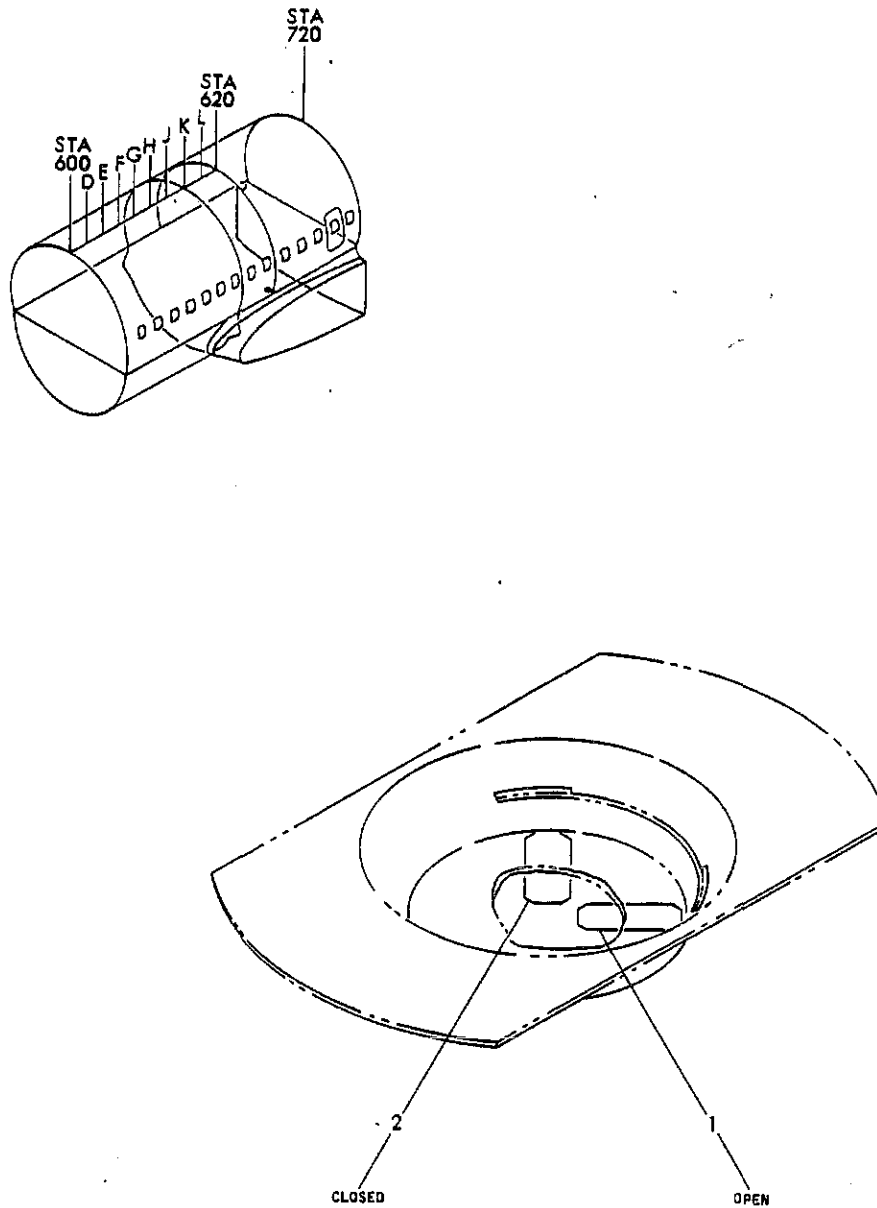 


FIGURE 23. PLATE ASSY, FORWARD CARGO COMPARTMENT AUXILIARY HEATER DAMPER (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
23	69-13390-1	PLATE ASSY, FORWARD CARGO COMPARTMENT AUXILIARY HEATER DAMPER COVER (REQUIRED PLACARDS ONLY) (SEE 21-4, FIG. 25, ITEM 32)							5199	RF
1	BACM10L00-1SC	. MARKER-ALUMINUM FOIL, OPEN.							5199	1
2	BACM10L00-1SE	. MARKER-ALUMINUM FOIL, CLOSED.							5199	1
		. FOR REFERENCE TO OTHER PLATE DETAILS, SEE NHA							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

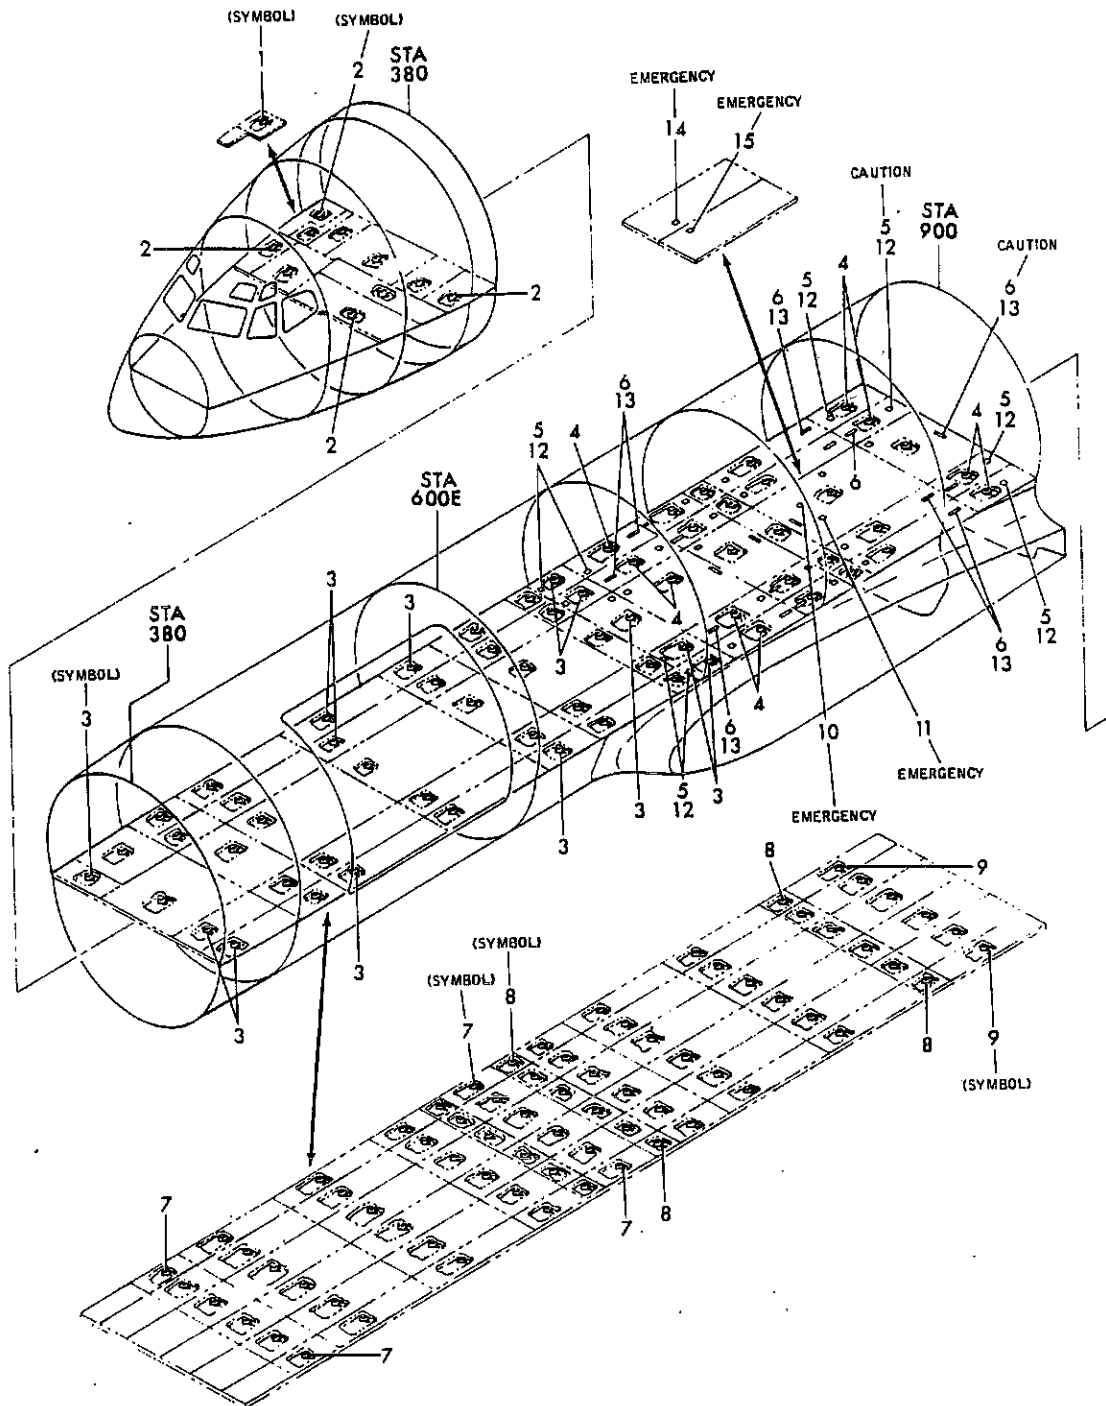 


FIGURE 24. PANEL INSTL, SECTION 41, 43 AND 46 PASSENGER FLOOR (REQUIRED PLACARDS ONLY) (SHEET 1)

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

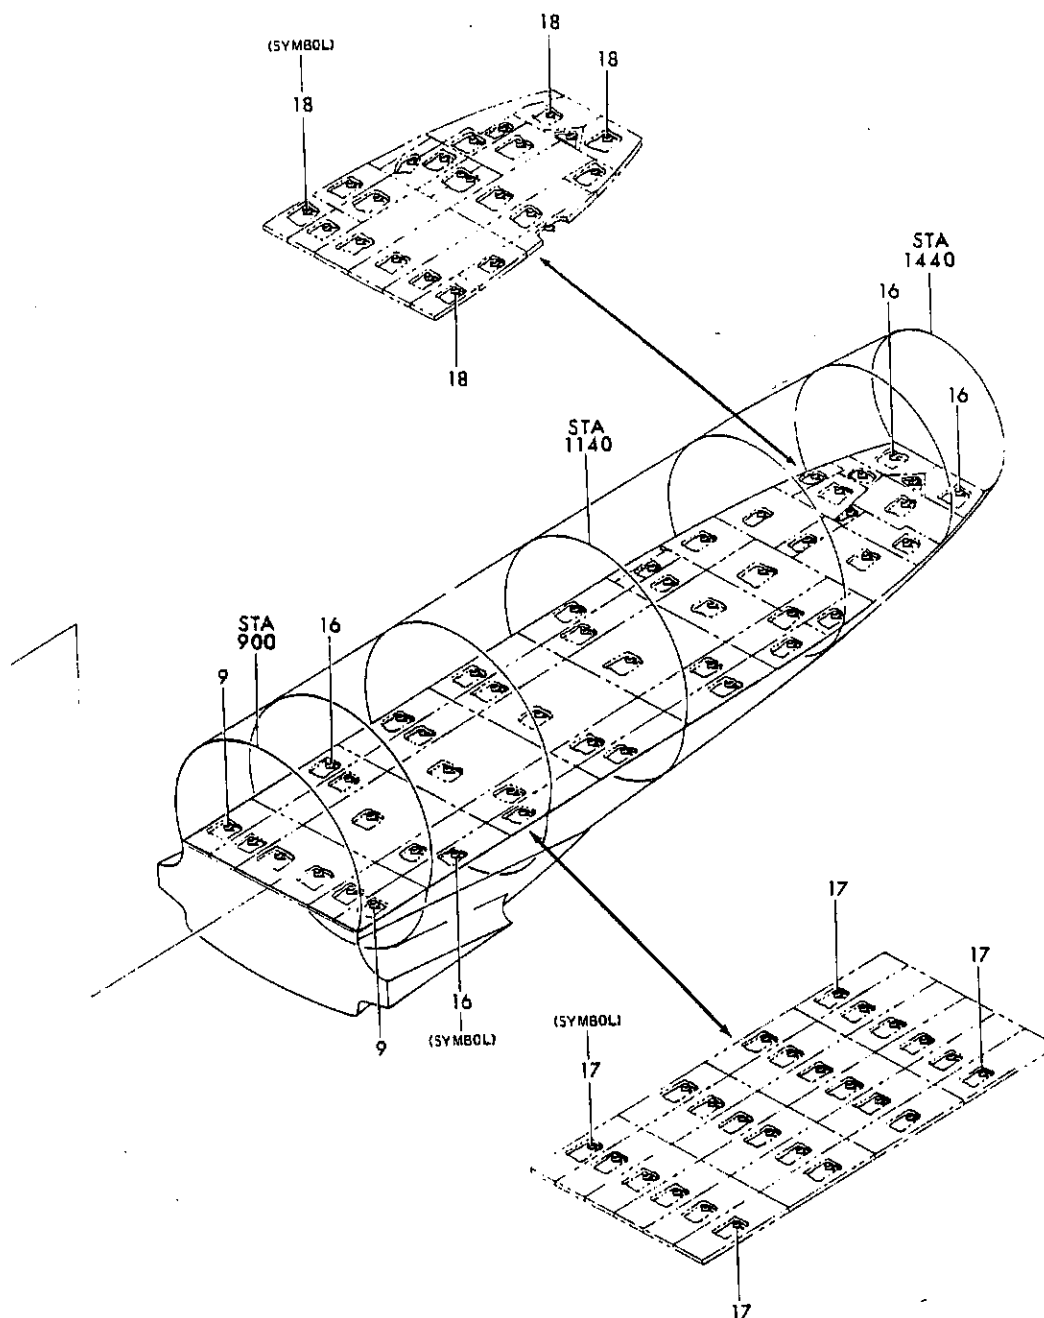 


FIGURE 24. PANEL INSTL, SECTION 41, 43 AND 46 PASSENGER FLOOR (REQUIRED PLACARDS ONLY) (SHEET 2)

NOV 21/90

11-02-24

DETAILED PARTS LIST
11-02-24
PAGE 1

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
24		PANEL INSTL, SECTION 41, 43 AND 46 PASSENGER FLOOR. . . (REQUIRED PLACARDS ONLY)								
	65-26323-1	. PANEL INSTL, STATION 820 TO 960 SECTION 43 FLOOR. . . (REQUIRED PLACARDS ONLY) (SEE 53-2, FIG. 2, ITEM 86C)								RF
	65-26344-16	. . PANEL ASSY, CENTER WHEEL WELL AREA (REQUIRED. . . . PLACARDS ONLY) (OPTIONAL 65-26344-2)							0150	RF
	65-26344-2	. . PANEL ASSY, CENTER WHEEL WELL AREA (REQUIRED. . . . PLACARDS ONLY) (OPTIONAL TO 65-26344-16)							0150	RF
14	BACM9E2G	. . . SCOTCH-CAL, EMERGENCY								I
	65-26344-1	. . PANEL ASSY, CENTER WHEEL WELL AREA (REQUIRED. . . . PLACARDS ONLY)							0150	RF
15	BACM9E2G	. . . SCOTCH-CAL, EMERGENCY								I
		. . FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA . . .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

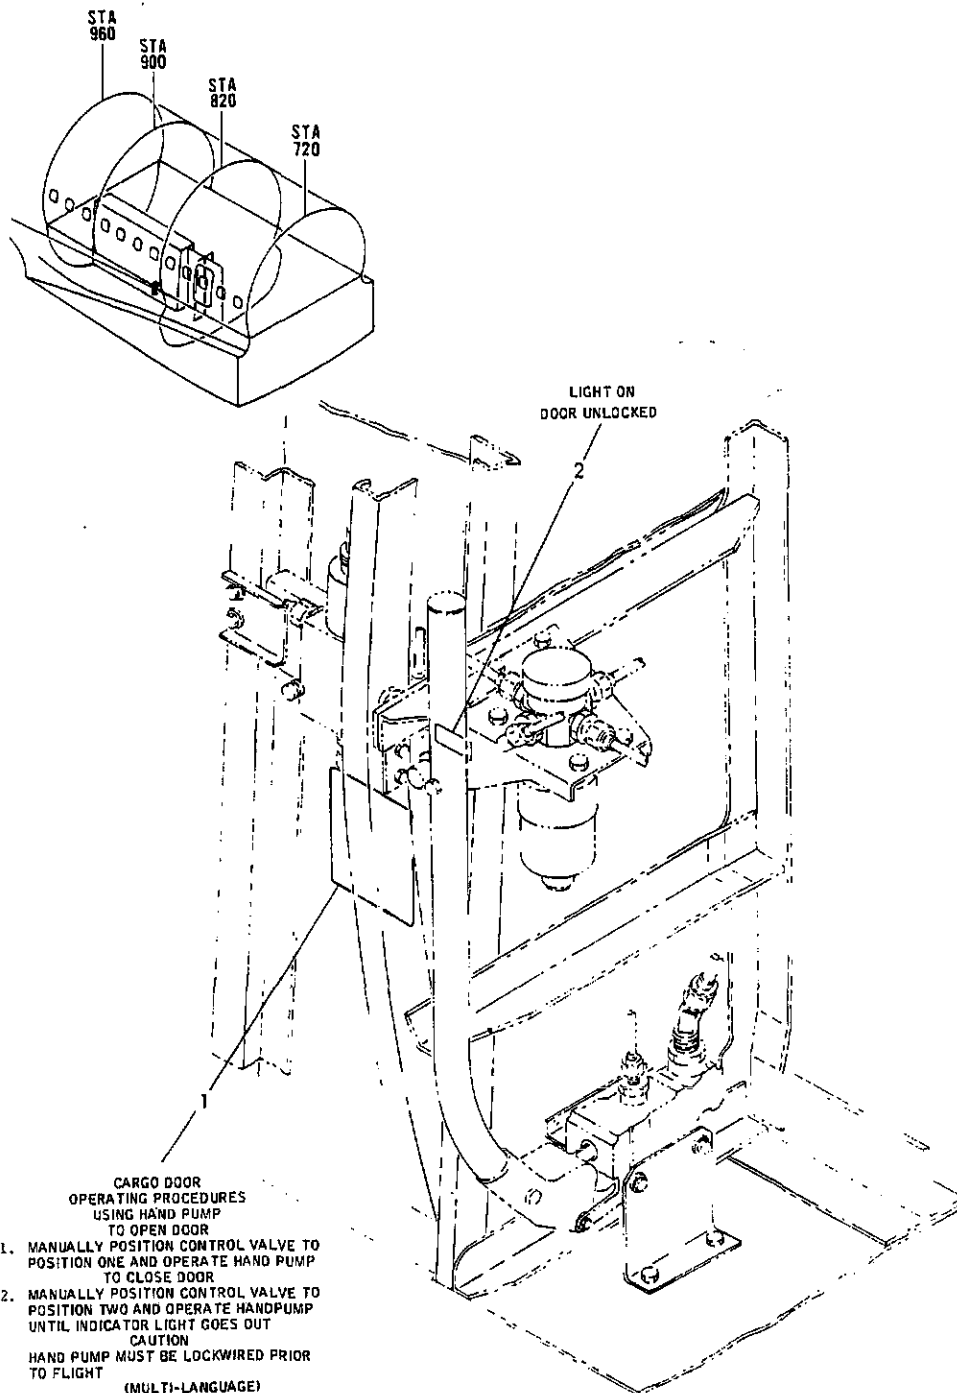 


FIGURE 25. PUMP INSTL, MAIN CARGO DOOR HYDRAULIC HAND (REQUIRED PLACARDS ONLY)

DETAILED PARTS LIST
11-02-25
PAGE 0

11-02-25

NOV 21/90

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
25			PUMP INSTL, MAIN CARGO DOOR HYDRAULIC HAND (REQUIRED. . PLACARDS ONLY)		
	65-43719-1		VALVE INSTL, MAIN CARGO DOOR HYDRAULIC 4 WAY (REQUIRED PLACARDS ONLY)		
			. PUMP INSTL, MAIN CARGO DOOR HYDRAULIC HAND (REQUIRED PLACARDS ONLY) (SEE 29-4, FIG. 28B, ITEM 51 AND 29-4, FIG. 28C, ITEM 34)		RF
1	BACM10D4NL 65-43719-2		. . MARKER, ALUMINUM FOIL		1
			. VALVE INSTL, MAIN CARGO DOOR HYDRAULIC 4-WAY. (REQUIRED PLACARDS ONLY) (SEE 29-4, FIG. 28B, ITEM 52 AND 29-4, FIG. 28C, ITEM 35)		RF
2	BACM9L11BE		. . MARKER, ALUMINUM FOIL		1
			. . FOR REFERENCE TO OTHER PUMP AND VALVE DETAILS, SEE NHA		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

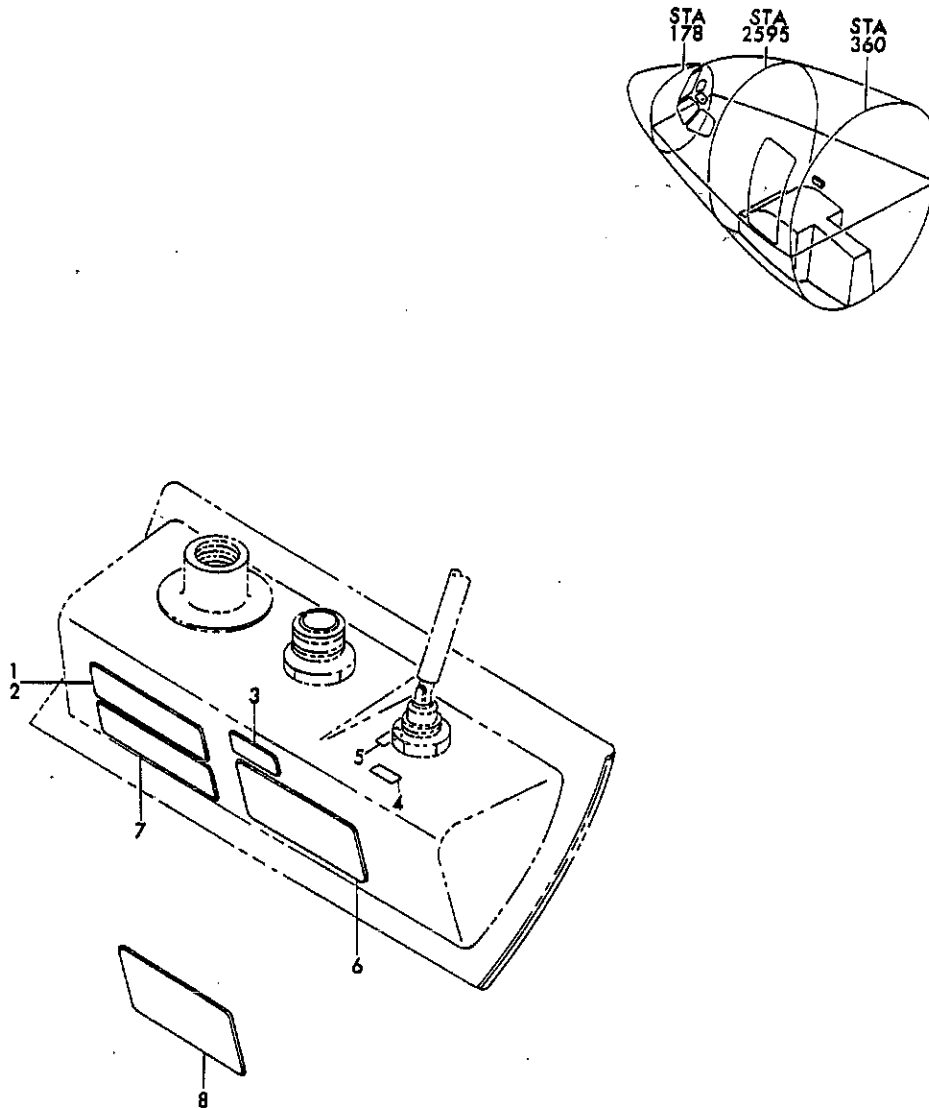 


FIGURE 27. VALVE INSTL, FORWARD PASSENGER WATER FILL AND DRAIN (REQUIRED PLACARDS ONLY)

DETAILED PARTS LIST
11-02-27
PAGE 2

11-02-27

NOV 21/90

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE						EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7		
27	65-7203	VALVE INSTL, FORWARD PASSENGER WATER FILL AND DRAIN . . (REQUIRED PLACARDS ONLY) (SEE 38-1, FIG. 1E, ITEM 56, 38-1, FIG. 2, ITEM 40, 38-1, FIG. 2A, ITEM 41, 38-1, FIG. 3, ITEM 42, 38-1, FIG. 3A, ITEM 36, 38-1, FIG. 4, ITEM 32, 38-1, FIG. 5, ITEM 30 AND 38-1, FIG. 5A, ITEM 37)								RF
2	BACMIOW31-1AF	. MARKER-ALUMINUM FOIL, POTABLE WATER FILL CONNECTION .								1
3	BACMIOL10-13A	. MARKER-ALUMINUM FOIL, OVERFLOW.								1
4	BACMIOL00-1SC	. MARKER-ALUMINUM FOIL, OPEN.								1
5	BACMIOL00-1SE	. MARKER-ALUMINUM FOIL, CLOSED.								1
7	BACMIOP31-6FN	. MARKER-ALUMINUM FOIL, CAUTION DO NOT EXCEED 85 PSI. . INLET PRESSURE								1
8	BACMIOL31-1CAF	. MARKER-ALUMINUM FOIL, CAUTION REMOVE BOTH CAPS BEFORE SERVICING . FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

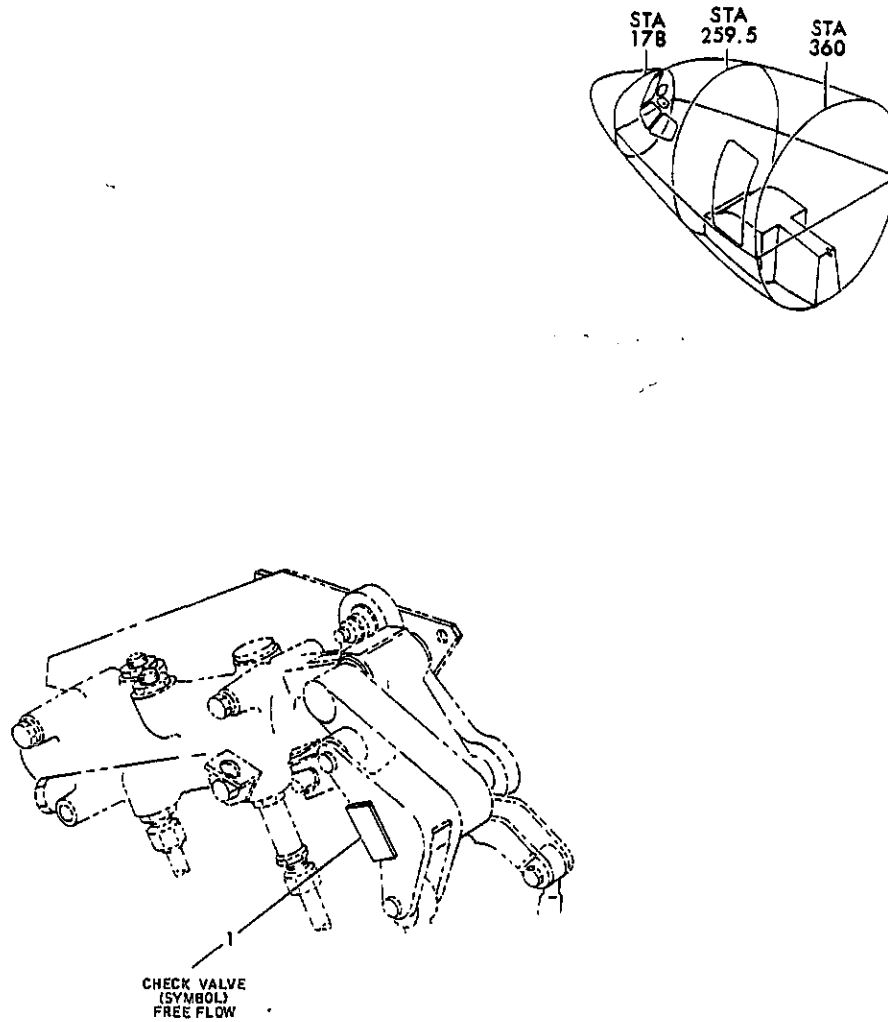 


FIGURE 30. VALVE INSTL, NOSE GEAR DOOR CONTROL (REQUIRED PLACARDS ONLY)

DETAILED PARTS LIST
11-02-30
PAGE 0

11-02-30

NOV 21/90

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
30	5-86575-3001	VALVE INSTL, NOSE GEAR DOOR CONTROL (REQUIRED PLACARDS ONLY) (SEE 29-3, FIG. 3, ITEM 51)								RF
1	BACM10V21-2JG	. MARKER-ALUMINUM FOIL, SYMBOL CHECK VALVE FREE FLOW. . . FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

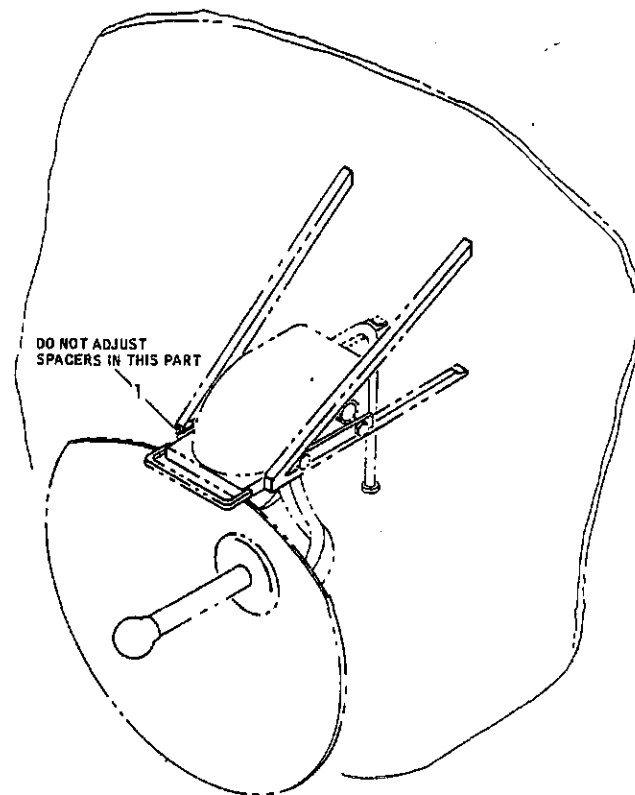 
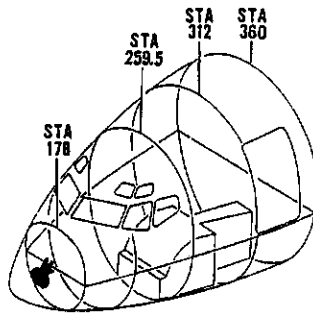 


FIGURE 35. ANTENNA INSTL, WEATHER RADAR (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R	35	65-2911	ANTENNA INSTL, WEATHER RADAR (REQUIRED PLACARDS ONLY) .							0150	RF
			(DELETED BY RAF MOD 7211.019-119) (SEE 24-3, FIG. 5B, ITEM 1)								
	1	BACMIOL20-18JX	. METAL-CAL, DO NOT ADJUST SPACERS IN THIS PART							0150	1
			. FOR REFERENCE TO OTHER ANTENNA DETAILS, SEE NHA . . .							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

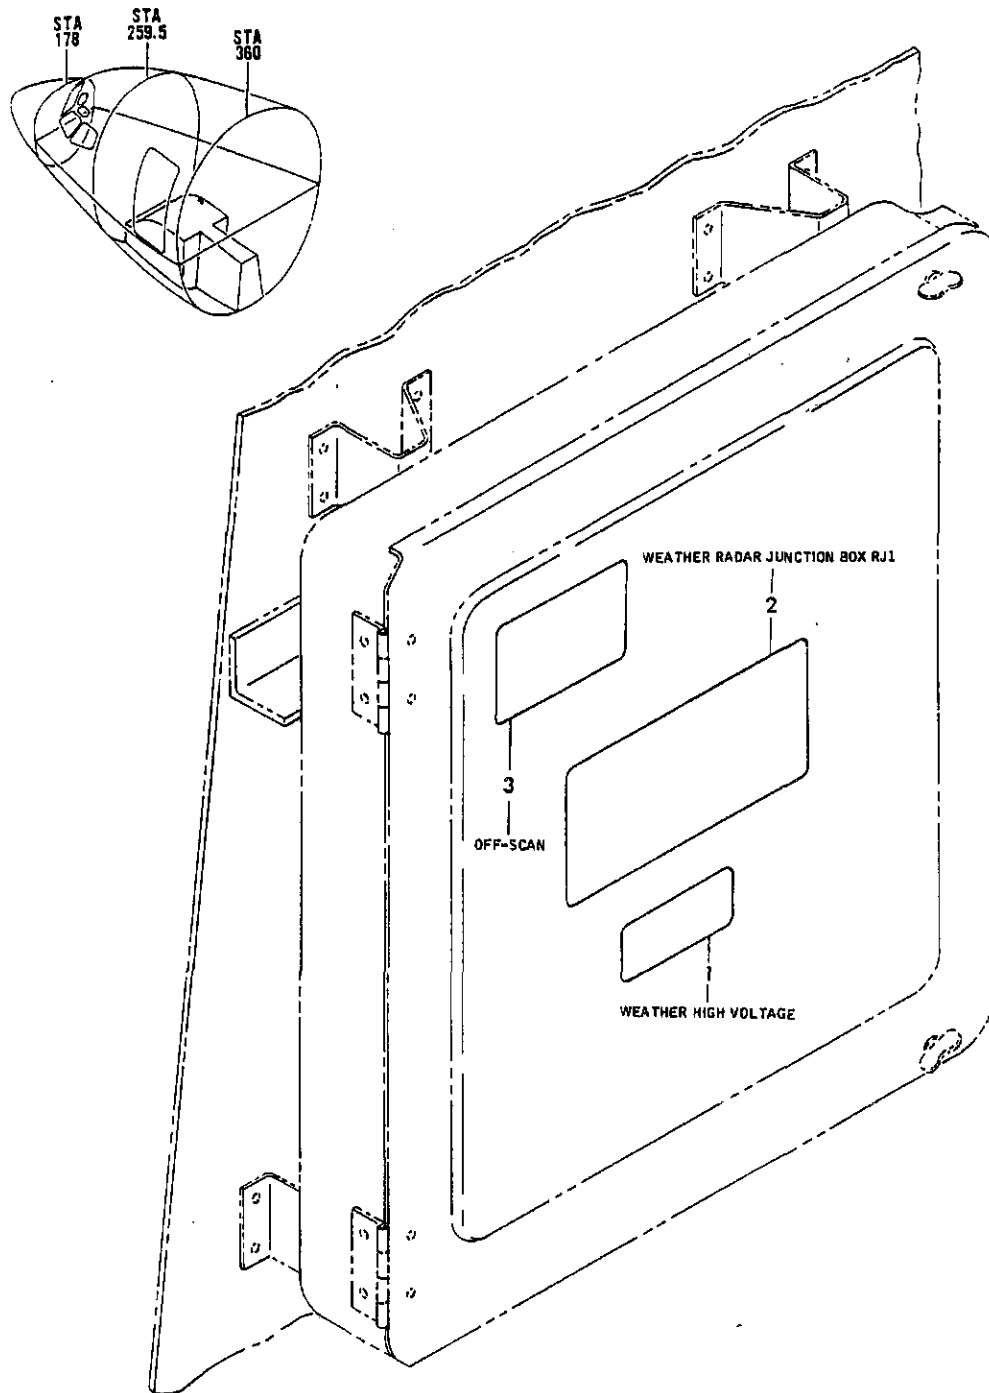 



FIGURE 36. BOX INSTL, WEATHER RADAR JUNCTION (REQUIRED PLACARDS ONLY)
SWITCH INSTL, WEATHER RADAR SCAN (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R R R R R	36								BOX INSTL, WEATHER RADAR JUNCTION (REQUIRED PLACARDS . . ONLY)	0150	
									SWITCH INSTL, WEATHER RADAR SCAN (REQUIRED PLACARDS . . ONLY)	0150	
		50-10801							. BOX INSTL, WEATHER RADAR JUNCTION (REQUIRED PLACARDS ONLY) (SEE 24-3, FIG. 5, ITEM 27, 24-3, FIG. 5A, ITEM 27, 24-3, FIG. 5B, ITEM 27, 24-3, FIG. 5C, ITEM 44, 24-3, FIG. 5D, ITEM 43A, 24-3, FIG. 5E, ITEM 18, AND 24-3, FIG. 5F, ITEM 18)	0150	RF
	1	BACM10W31-2SN							. . METAL-CAL, WARNING HIGH VOLTAGE	0150	1
	2	BACM9862-2C							. . SCOTCH-CAL, WEATHER RADAR JUNCTION BOX.	0150	1
		69-12743-1							. . FOR REFERENCE TO OTHER BOX DETAILS, SEE NHA	0150	
									. SWITCH INSTL, WEATHER RADAR SCAN (REQUIRED PLACARDS . . ONLY) (SEE 24-3, FIG. 5, ITEM 26, 24-3, FIG. 5A, ITEM 26, 24-3, FIG. 5B, ITEM 26, 24-3, FIG. 5C, ITEM 43, 24-3, FIG. 5D, ITEM 5, 24-3, FIG. 5E, ITEM 17 AND 24-3, FIG. 5F, ITEM 17)	0150	RF
									. . SCOTCH-CAL, OFF-SCAN.	0150	
									. . FOR REFERENCE TO OTHER SWITCH DETAILS, SEE NHA.	0150	
	3	BACM9S42-3AA									1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

707

 STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

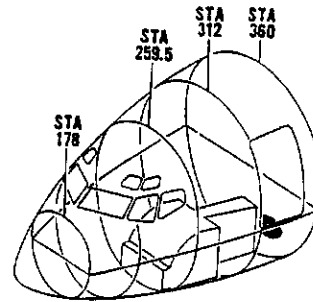

ON BAC 707-331B A/C

IF DG CHANGE IS REQUIRED USE DG R&R 37861. IF NOT AVAILABLE DG, R&R 37800, MAY BE TEMPORARILY USED PROVIDED AIRCRAFT IS NOT SCHEDULED FOR POLAR ROUTE FLIGHT. REFERENCE MSL 63-117-C34 1-66925-4

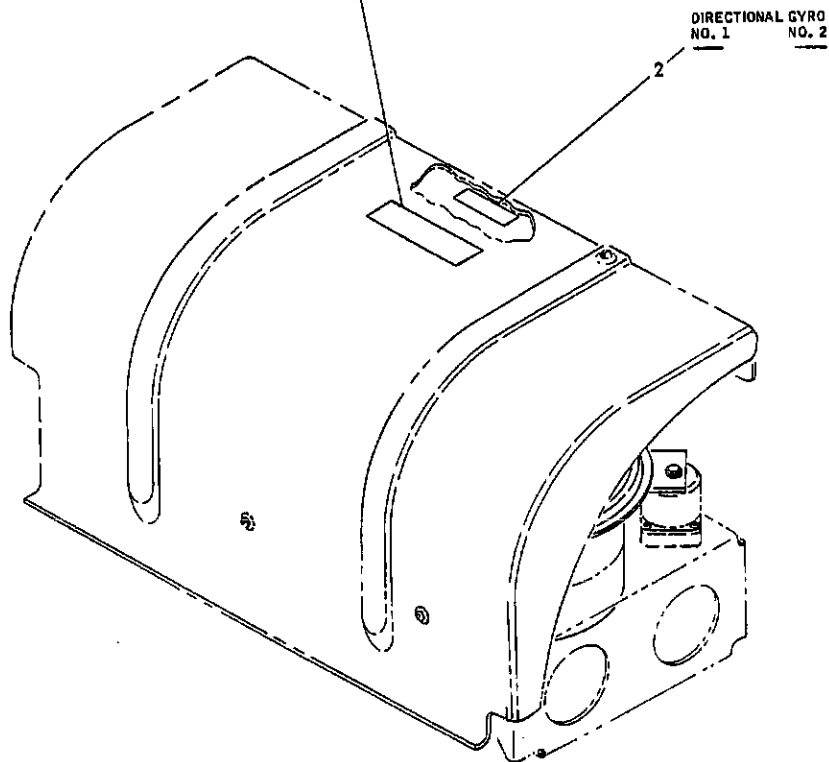 


FIGURE 37. GYRO INSTL, DIRECTIONAL (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R R R R R R	37	65-5391							0150	RF
	2	BACM10G31-6AX							0150 0150	L
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

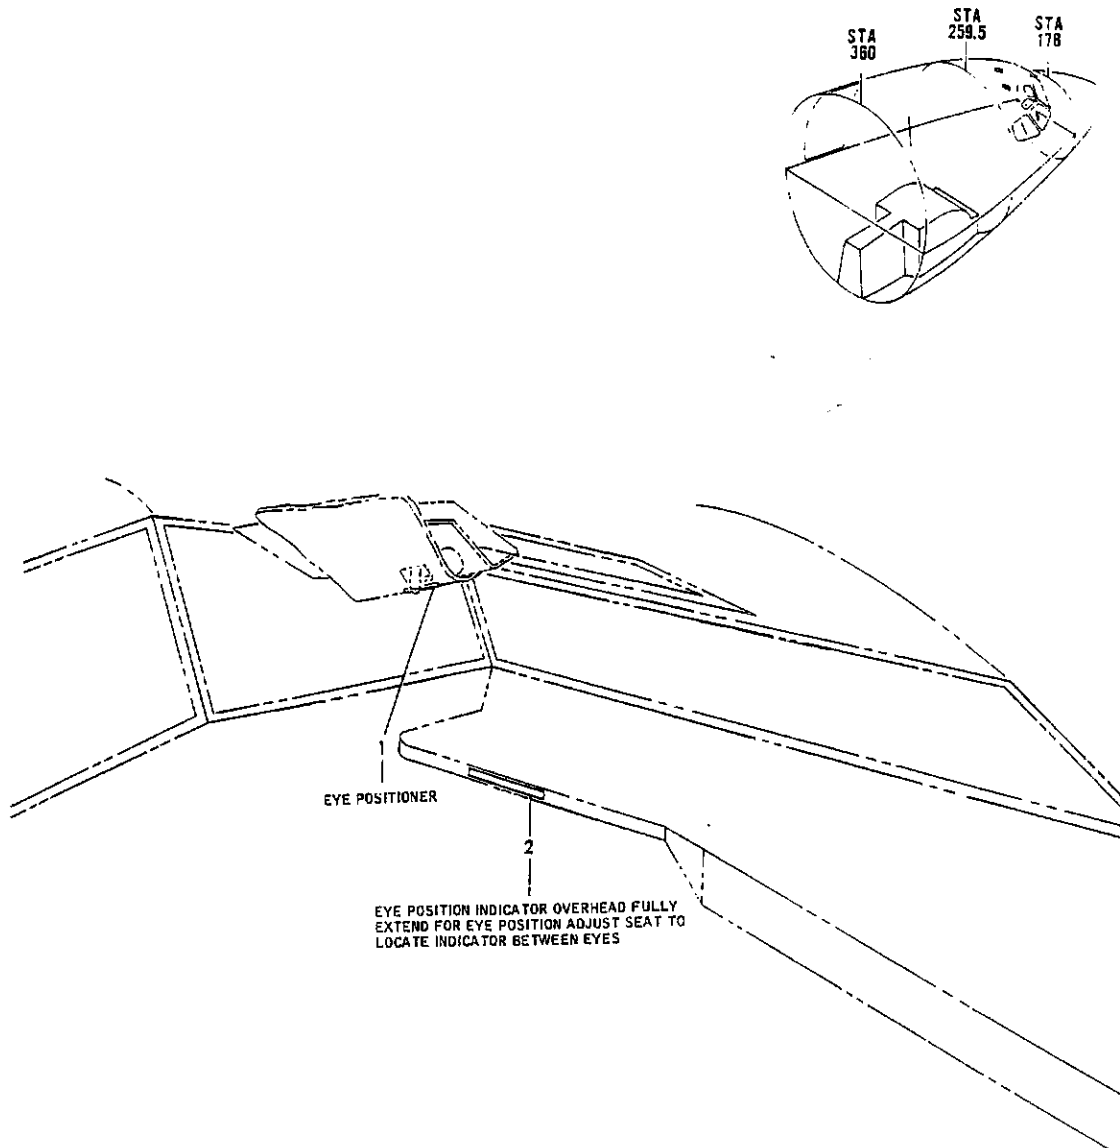 


FIGURE 40. INDICATOR INSTL, PILOT AND COPILOT EYE POSITION (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE										EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7						
R R R R R R R R R R R R R	40	65-60376-1	INDICATOR INSTL, PILOT EYE POSITION (REQUIRED PLACARDS ONLY) (SEE 25-1, FIG. 1B, ITEM 37A, 25-1, FIG. 1E, ITEM 149, 25-1, FIG. 1F, ITEM 119, 25-1, FIG. 1K, ITEM 129, 25-1, FIG. 2B, ITEM 149, 25-1, FIG. 2C, ITEM 122, 25-1, FIG. 2D, ITEM 105 AND 25-1, FIG. 2E, ITEM 72)										0150	RF
		65-60376-2	INDICATOR INSTL, COPILOT EYE POSITION (REQUIRED PLACARDS ONLY) (SEE 25-1, FIG. 1B, ITEM 37B, 25-1, FIG. 1E, ITEM 150, 25-1, FIG. 1F, ITEM 120, 25-1, FIG. 1K, ITEM 130, 25-1, FIG. 2B, ITEM 150, 25-1, FIG. 2C, ITEM 123, 25-1, FIG. 2D, ITEM 106 AND 25-1, FIG. 2E, ITEM 73)										0150	RF
		65-60376-5	INDICATOR INSTL, PILOT EYE POSITION (REQUIRED PLACARDS ONLY) (SEE 25-1, FIG. 1B, ITEM 37A, 25-1, FIG. 1E, ITEM 149, 25-1, FIG. 1F, ITEM 119, 25-1, FIG. 1K, ITEM 129, 25-1, FIG. 2B, ITEM 149, 25-1, FIG. 2C, ITEM 122, 25-1, FIG. 2D, ITEM 105 AND 25-1, FIG. 2E, ITEM 72)										5199	RF
		65-60376-6	INDICATOR INSTL, COPILOT EYE POSITION (REQUIRED PLACARDS ONLY) (SEE 25-1, FIG. 1B, ITEM 37A, 25-1, FIG. 1E, ITEM 149, 25-1, FIG. 1F, ITEM 120, 25-1, FIG. 1K, ITEM 130, 25-1, FIG. 2B, ITEM 149, 25-1, FIG. 2C, ITEM 122, 25-1, FIG. 2D, ITEM 105 AND 25-1, FIG. 2E, ITEM 72)										5199	RF
	1	BAC27CEQ15	. SCOTCH-CAL, EYE POSITIONER.											1
	2	BAC27CEQ16	. SCOTCH-CAL, EYE POSITION INDICATOR INSTRUCTIONS FOR REFERENCE TO OTHER INDICATOR DETAILS, SEE NHA . .											1
MISSING ITEM NUMBERS ARE NOT APPLICABLE														

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

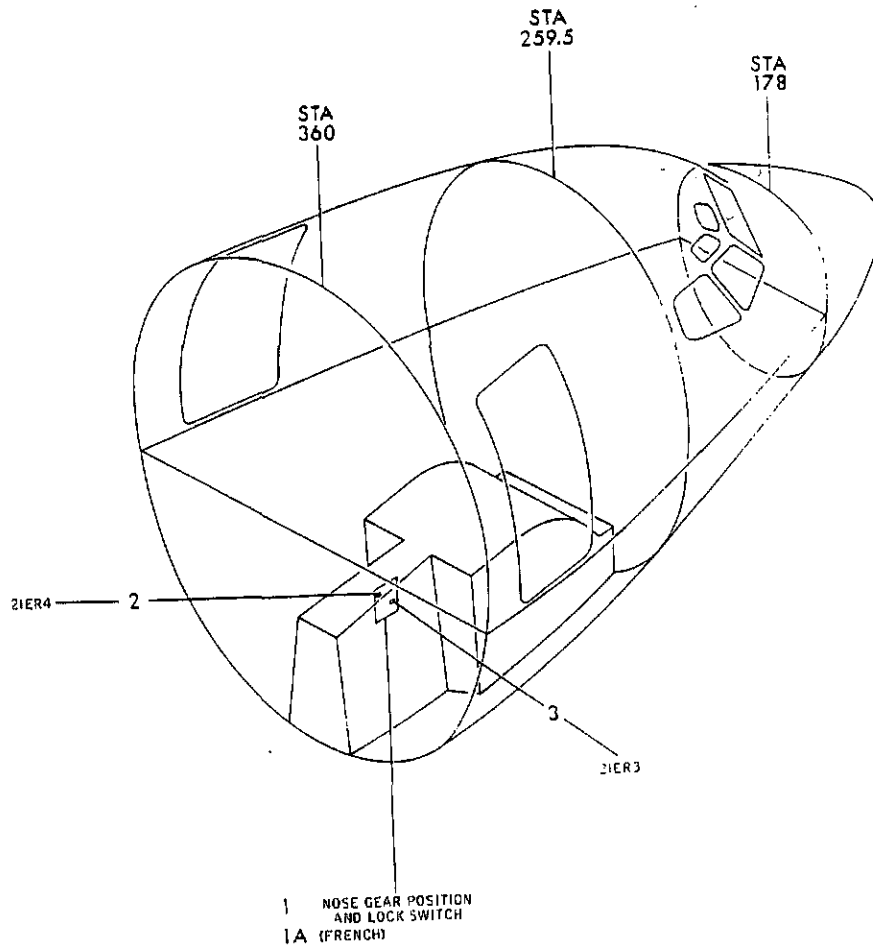 


FIGURE 43. METAL-CAL INSTL, NOSE GEAR POSITION AND LOCK SWITCH

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
43	66-1368-1	MARKER INSTL, NOSE GEAR POSITION AND LOCK SWITCH. . . . (SEE 24-3, FIG. 1A, ITEM 12, 24-3, FIG. 1B, ITEM 11 AND 24-3, FIG. 1C, ITEM 10)								RF
1	BACM10S54-3TT	. MARKER-ALUMINUM FOIL, NOSE GEAR POSITION AND. . . . LOCK SWITCH								1
2	BACMBL00-9D	. SCOTCH-CAL, 21ER3								1
3	BACMBL00-9E	. SCOTCH-CAL, 21ER4								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

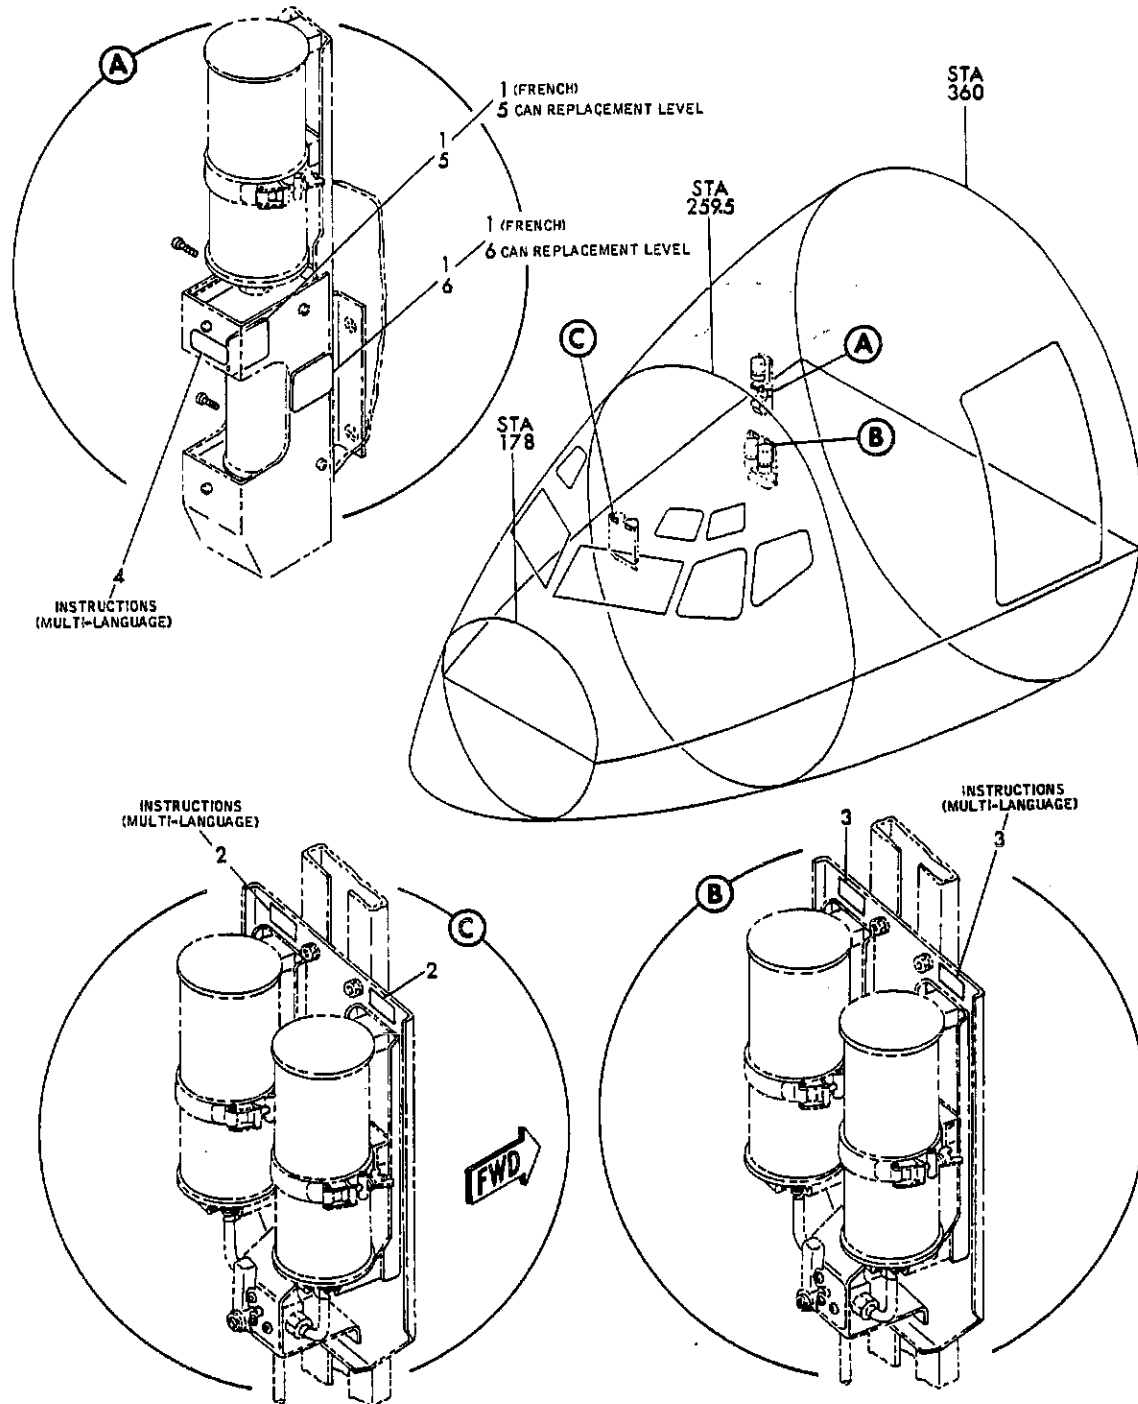 


FIGURE 44. SYSTEM INSTL, RAIN REPELLENT (REQUIRED PLACARD ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
44	69-30437-5	SYSTEM INSTL, RAIN REPELLENT (REQUIRED PLACARDS ONLY) . (SEE 25-1, FIG. 1B, ITEM 125, 25-1, FIG. 1C, ITEM 146, 25-1, FIG. 1D, ITEM 139, 25-1, FIG. 1E, ITEM 126, 25-1, FIG. 1F, ITEM 103, 25-1, FIG. 1G, ITEM 110, 25-1, FIG. 1H, ITEM 131, 25-1, FIG. 1J, ITEM 133, 25-1, FIG. 1K, ITEM 123, 25-1, FIG. 2B, ITEM 127, 25-1, FIG. 2C, ITEM 115, 25-1, FIG. 2D, ITEM 96, 25-1, FIG. 2E, ITEM 68 AND 25-1, FIG. 2H, ITEM 123)								RF
	65-43497-7	. BRACKET AND VISUAL RESERVOIR INSTL, (REQUIRED PLACARDS ONLY)								RF
	69-34533-5	. . COVER ASSY, (REQUIRED PLACARDS ONLY).								RF
	5 BACM10LIEBD	. . . MARKER-ALUMINUM FOIL, CAN REPLACEMENT LEVEL . . .								1
	6 BACM10LIEBD	. . . MARKER-ALUMINUM FOIL, CAN REPLACEMENT LEVEL FOR REFERENCE TO OTHER SYSTEM DETAILS, SEE NHA. . . .								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

CAUTION
TO REMOVE THERMAL
COMPENSATORS

1. DISCONNECT "B" NUT
AT TUBE END.
2. LOOSEN IF NECESSARY
BUT DO NOT DISCONNECT
"B" NUT FROM UNION AT PART.
3. REMOVE THERMAL
COMPENSATOR AND UNION
INTACT BY UNSCREWING
UNION FROM PART.

HIGH PRESSURE OXYGEN
OPEN VALVE SLOWLY (MULTI-LANGUAGE)

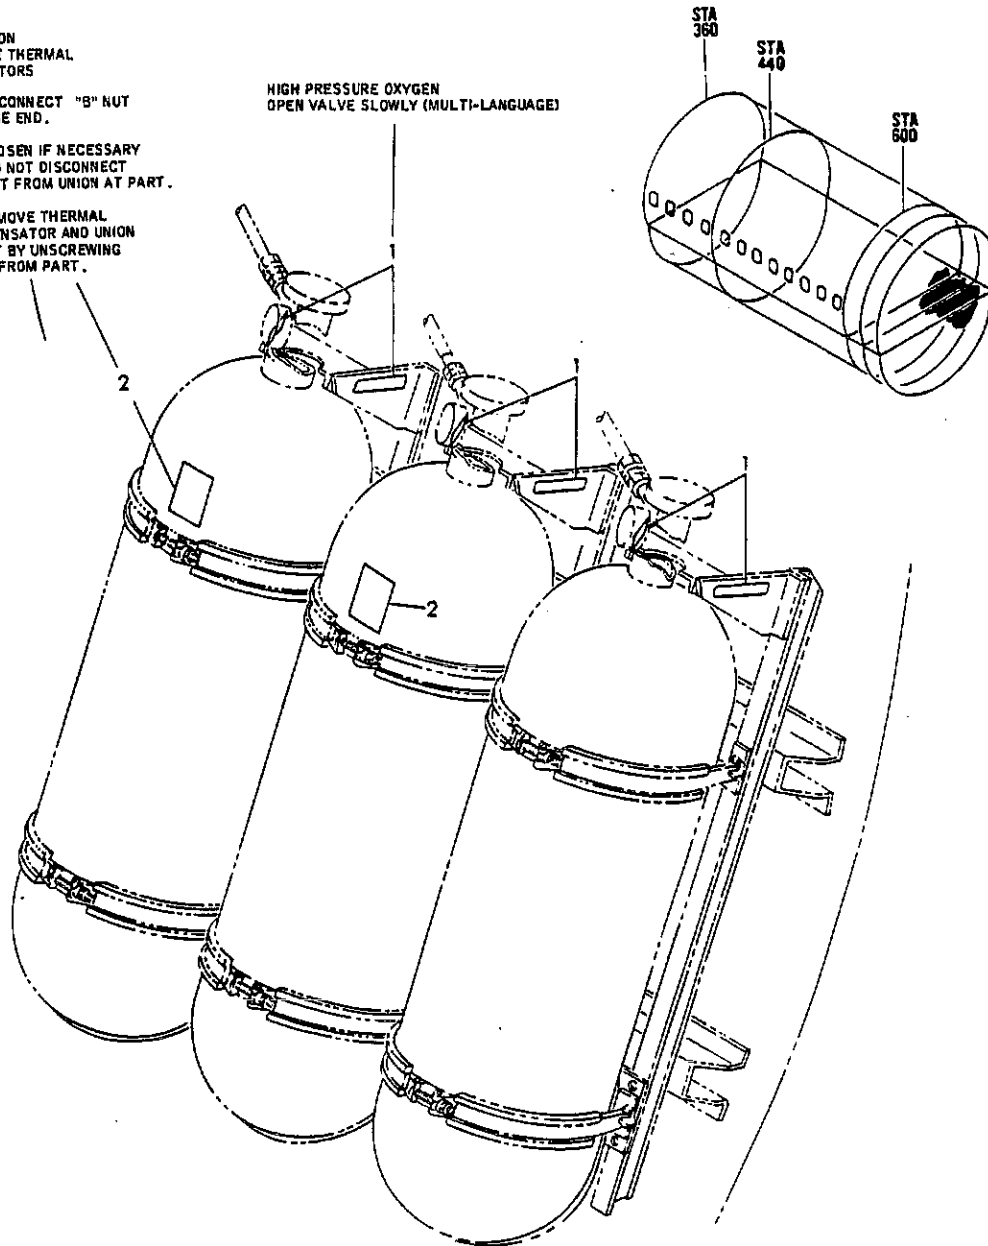 


FIGURE 46. CYLINDER INSTL, STATION 586.40 TO 600D CREW OXYGEN (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
46	65-20674-15	CYLINDER INSTL, STATION 586.40 TO 600D CREW OXYGEN. . . (REQUIRED PLACARDS ONLY) (SEE 35-1, FIG. 13A, ITEM 114, 35-1, FIG. 14, ITEM 88A, 35-1, FIG. 14A, ITEM 60, 35-1, FIG. 14C, ITEM 107, 35-1, FIG. 14G, ITEM 152, 35-1, FIG. 14K, ITEM 60, 35-1, FIG. 14L, ITEM 100 AND 35-1, FIG. 14P, ITEM 110)								RF
1	BACM10V20-2AJV	. MARKER-ALUMINUM FOIL, HIGH PRESSURE OXYGEN OPEN VALVE SLOWLY . FOR REFERENCE TO OTHER CYLINDER DETAILS, SEE NHA. . .								6
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

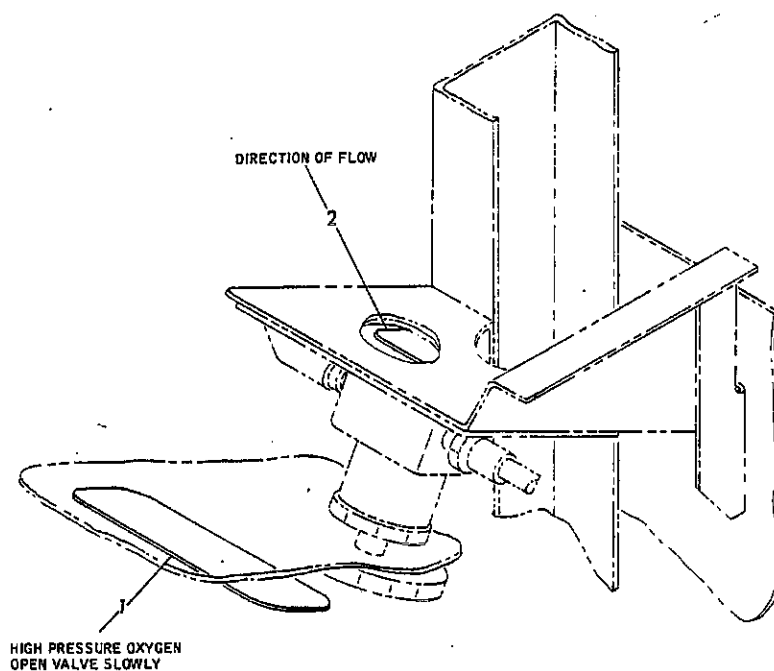 
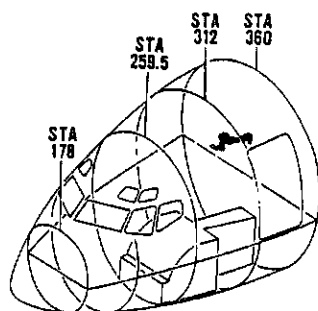 


FIGURE 48. VALVE INSTL, CREW OXYGEN HIGH AND LOW PRESSURE (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
48	69-9753-2	VALVE INSTL, CREW OXYGEN HIGH PRESSURE (REQUIRED. . . . PLACARDS ONLY) (SEE 35-1, FIG. 1, ITEM 30B, 35-1, FIG. 2A, ITEM 40, 35-1, FIG. 2B, ITEM 52, 35-1, FIG. 2C, ITEM 39, 35-1, FIG. 2D, ITEM 46, 35-1, FIG. 2E, ITEM 40, 35-1, FIG. 2G, ITEM 41, 35-1, FIG. 2H, ITEM 38, 35-1, FIG. 2J, ITEM 41 AND 35-1, FIG. 2K, ITEM 40) . MARKER, CREW OXYGEN OPEN VALVE SLOWLY MARKER, DIRECTION OF FLOW SYMBOL. FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA								RF
1	BACM10V2APL									1
2	BACM10L20-1DZ									1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

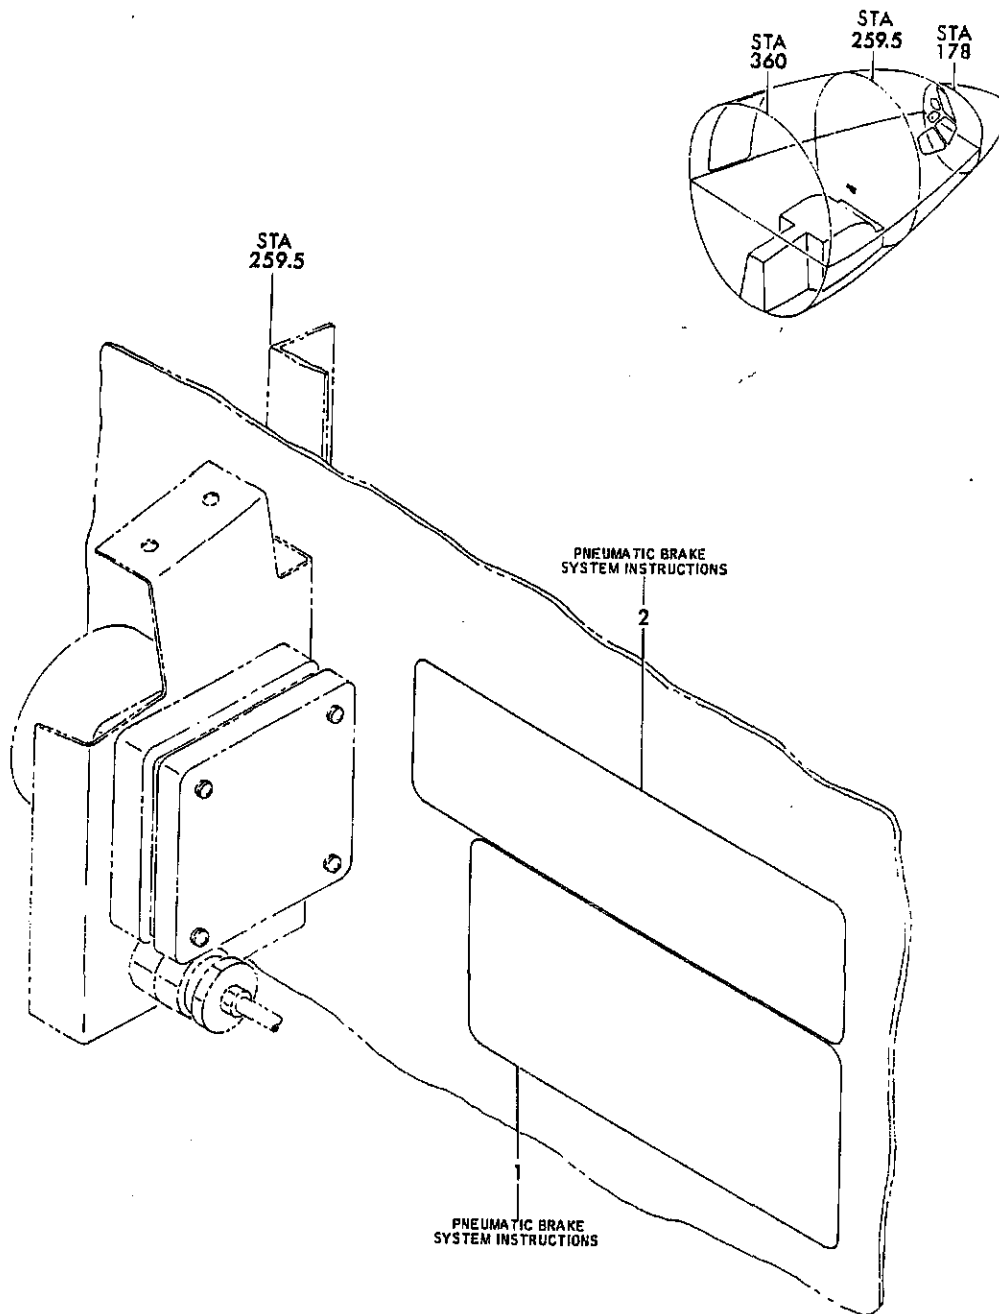 


FIGURE 49, VALVE INSTL, PNEUMATIC PRESSURE GAGE AND CHARGING (REQUIRED PLACARDS ONLY)

DETAILED PARTS LIST
11-02-49
PAGE 0

11-02-49

NOV 21/90

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
49	65-43724-2	VALVE INSTL, PNEUMATIC PRESSURE GAGE AND CHARGING . . . (REQUIRED PLACARDS ONLY) (SEE 29-3, FIG. 1, ITEM 68 AND 29-3, FIG. 2, ITEM 71)								RF
1	BACM10P52-6FV	. MARKER-ALUMINUM FOIL, PNEUMATIC BRAKE SYSTEM. . . . INSTRUCTIONS								1
2	BACM10B4DG	. MARKER-ALUMINUM FOIL, PNEUMATIC BRAKE SYSTEM. . . . INSTRUCTIONS							5199	1
		. FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

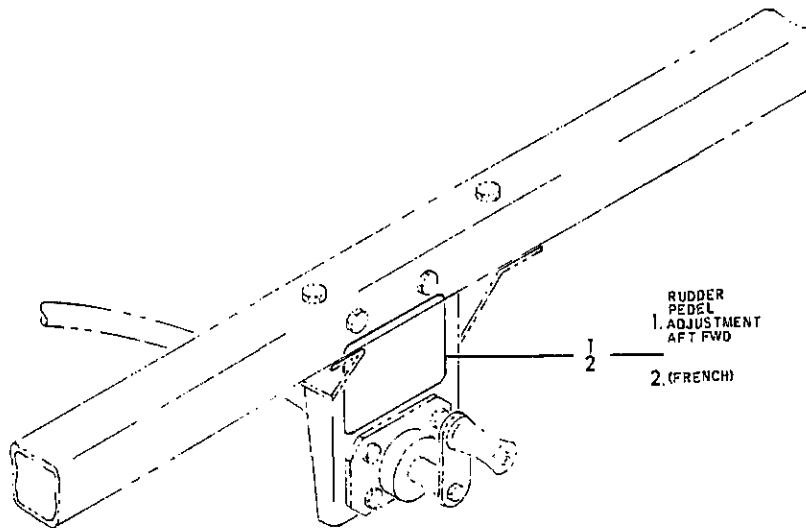 
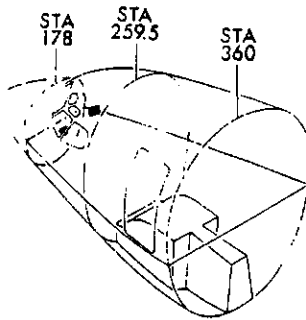 


FIGURE 51. BRACKET ASSY, RUDDER PEDAL ADJUSTMENT (REQUIRED PLACARDS ONLY)

707

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R	51	60-1563	BRACKET ASSY, RUDDER PEDAL ADJUSTMENT (REQUIRED							0150	RF
			PLACARDS ONLY) (SEE 27-9, FIG. 4, ITEM 12)								
		69-52004-1	BRACKET ASSY, RUDDER PEDAL ADJUSTMENT (REQUIRED							5199	RF
			PLACARDS ONLY) (SEE 27-9, FIG. 4, ITEM 12)								
	1	BACM10P21-2J	. MARKER-ALUMINUM FOIL, RUDDER PEDAL ADJUSTMENT							0150	1
	1	BACM10RIAS	. MARKER-ALUMINUM FOIL, RUDDER PEDAL ADJUSTMENT							5199	1
			. FOR REFERENCE TO OTHER BRACKET DETAILS, SEE NHA								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

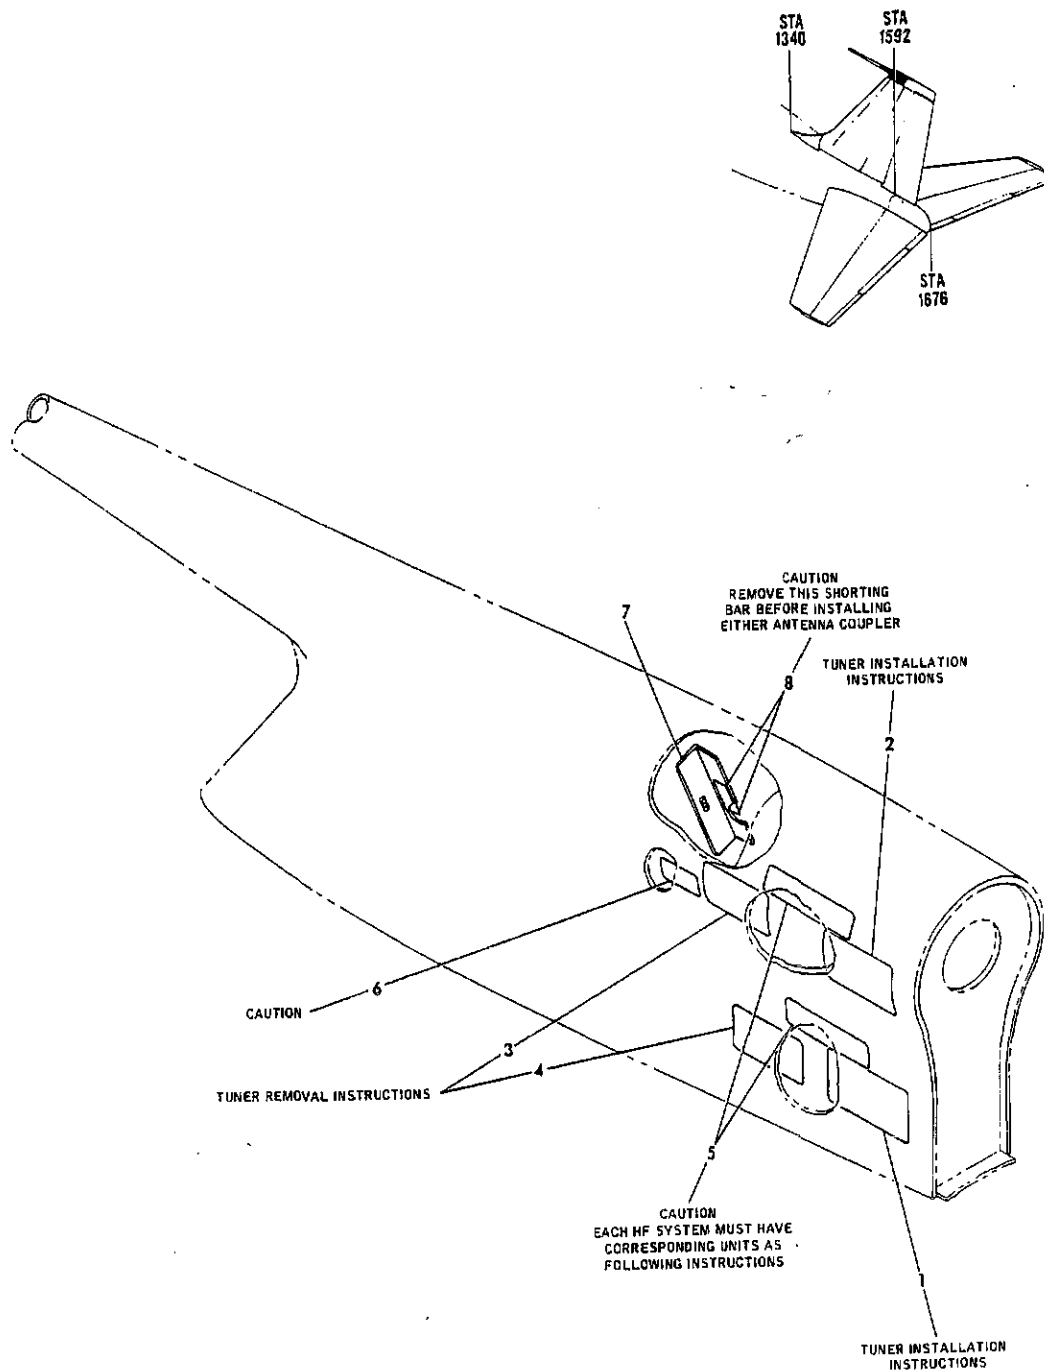 


FIGURE 55. ANTENNA AND COMPONENTS INSTL, FIN HF COMMUNICATION (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R	55	65-1389	ANTENNA AND COMPONENTS INSTL, FIN HF COMMUNICATION. . . (REQUIRED PLACARDS ONLY) (SEE 55-1, FIG. 1, ITEM 44, 55-1, FIG. 2, ITEM 54 AND 55-1, FIG. 3, ITEM 54)							0150	RF
		65-1389	ANTENNA AND COMPONENTS INSTL, FIN HF COMMUNICATION. . . (VARIABLE DWG:65-1389-5003) (REQUIRED PLACARDS ONLY) (SEE 55-1, FIG. 2, ITEM 54)							5199	RF
	1	BACM9T63-6B	. SCOTCH-CAL, TUNER INSTALLATION INSTRUCTIONS								1
	2	BACM9T63-6B	. SCOTCH-CAL, TUNER INSTALLATION INSTRUCTIONS								1
	3	BACM9T63-6A	. SCOTCH-CAL, TUNER REMOVAL INSTRUCTIONS.								1
	4	BACM9T63-6A	. SCOTCH-CAL, TUNER REMOVAL INSTRUCTIONS. FOR REFERENCE TO OTHER ANTENNA AND COMPONENTS DETAILS, SEE NHA								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

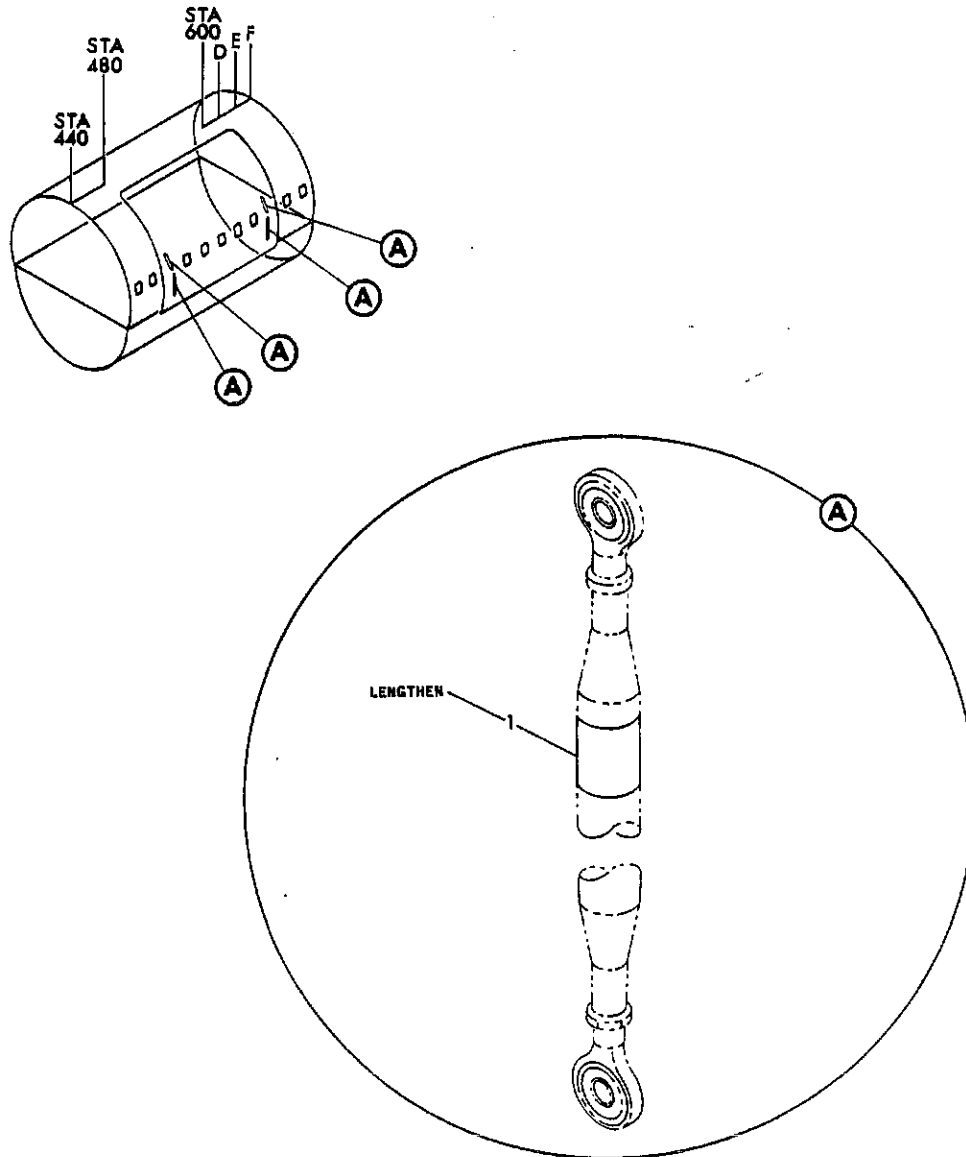 


FIGURE 58. ROD ASSY, CARGO DOOR MECHANISM PUSH (REQUIRED PLACARDS ONLY)

707

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
58	69-22948-1	ROD ASSY, CARGO DOOR MECHANISM PUSH (REQUIRED PLACARDS ONLY) (DELETED BY SB 2628) (SEE 52-3, FIG. 20B, ITEM 10)							0102	RF
1	BACM10L21-1ATN	. MARKER-ALUMINUM FOIL, LENGTHEN.							0102	1
		. FOR REFERENCE TO OTHER ROD DETAILS, SEE NHA							0102	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

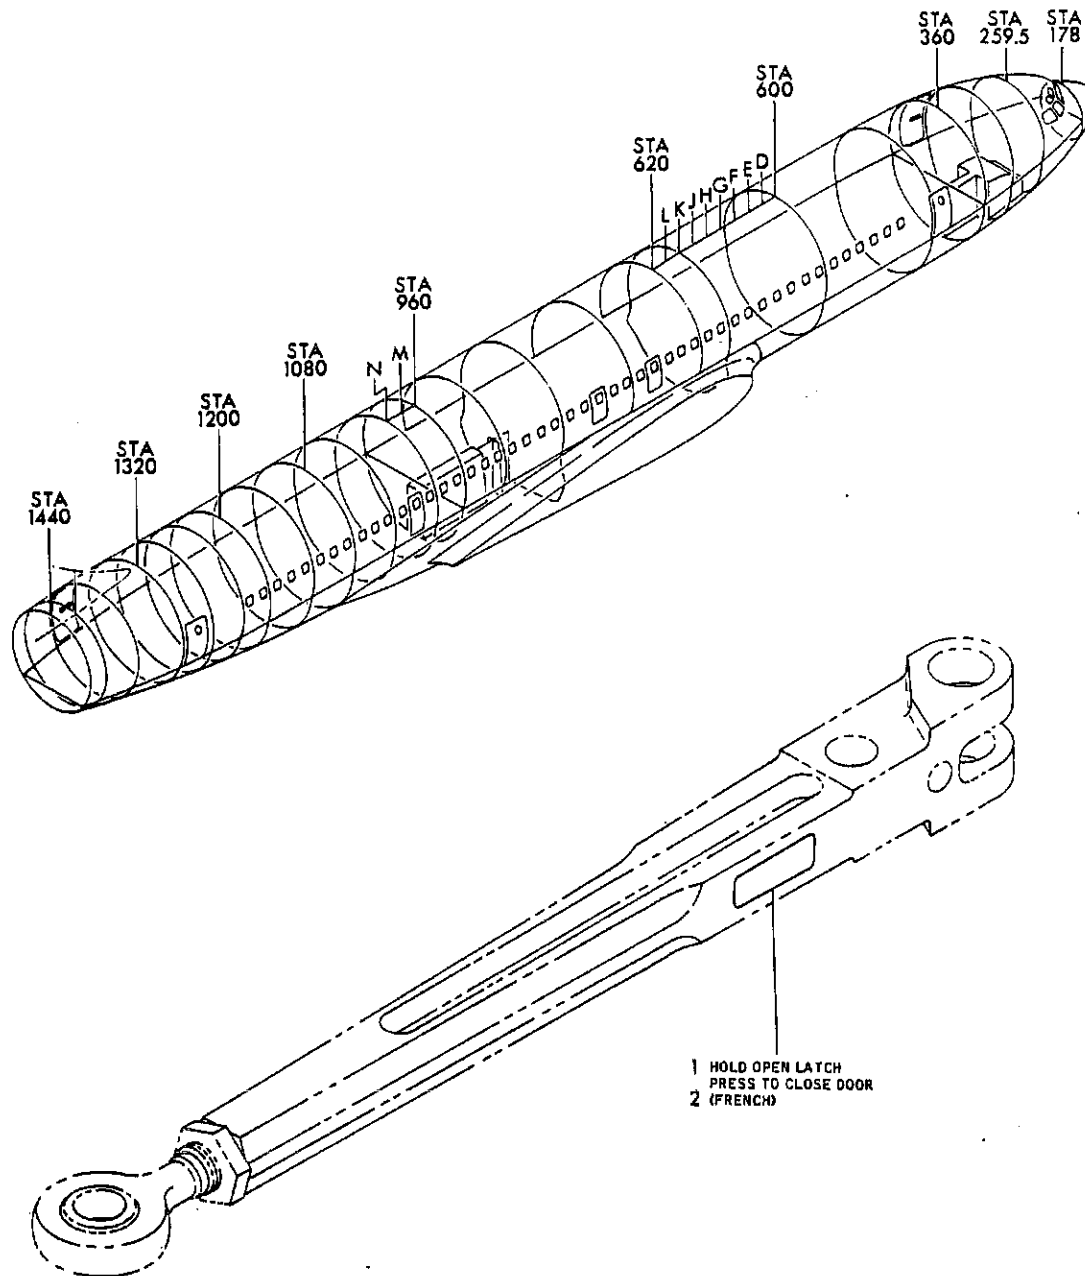 


FIGURE 59. DOOR INSTL, FORWARD AND AFT ENTRY (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	59	50-7945	DOOR INSTL, FORWARD ENTRY (REQUIRED PLACARDS ONLY) (SEE 53-2, FIG. 1, ITEM 18)							0150	RF
R		50-7988	DOOR INSTL, AFT ENTRY (REQUIRED PLACARDS ONLY) (SEE 53-2, FIG. 3, ITEM 36 AND 53-2, FIG. 7A, ITEM 36)								RF
R		50-7945-149	DOOR INSTL, FORWARD ENTRY (REQUIRED PLACARDS ONLY) (SEE 53-2, FIG. 1, ITEM 18)							5199	RF
R	L	BACMIOLICNH	. MARKER-ALUMINUM FOIL, HOLD OPEN LATCH PRESS TO CLOSE DOOR (USED ON 50-7945)							0150	1
R	1	BACMIOLICNH	. MARKER-ALUMINUM FOIL, HOLD OPEN LATCH PRESS TO CLOSE DOOR (USED ON 50-7988 AND 50-7988-207)								1
R	1	BACMIOLICNH	. MARKER-ALUMINUM FOIL, HOLD OPEN LATCH PRESS TO CLOSE DOOR (USED ON 50-7945-123)							5199	1
R			. FOR REFERENCE TO OTHER DOOR DETAILS, SEE NHA. . . .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

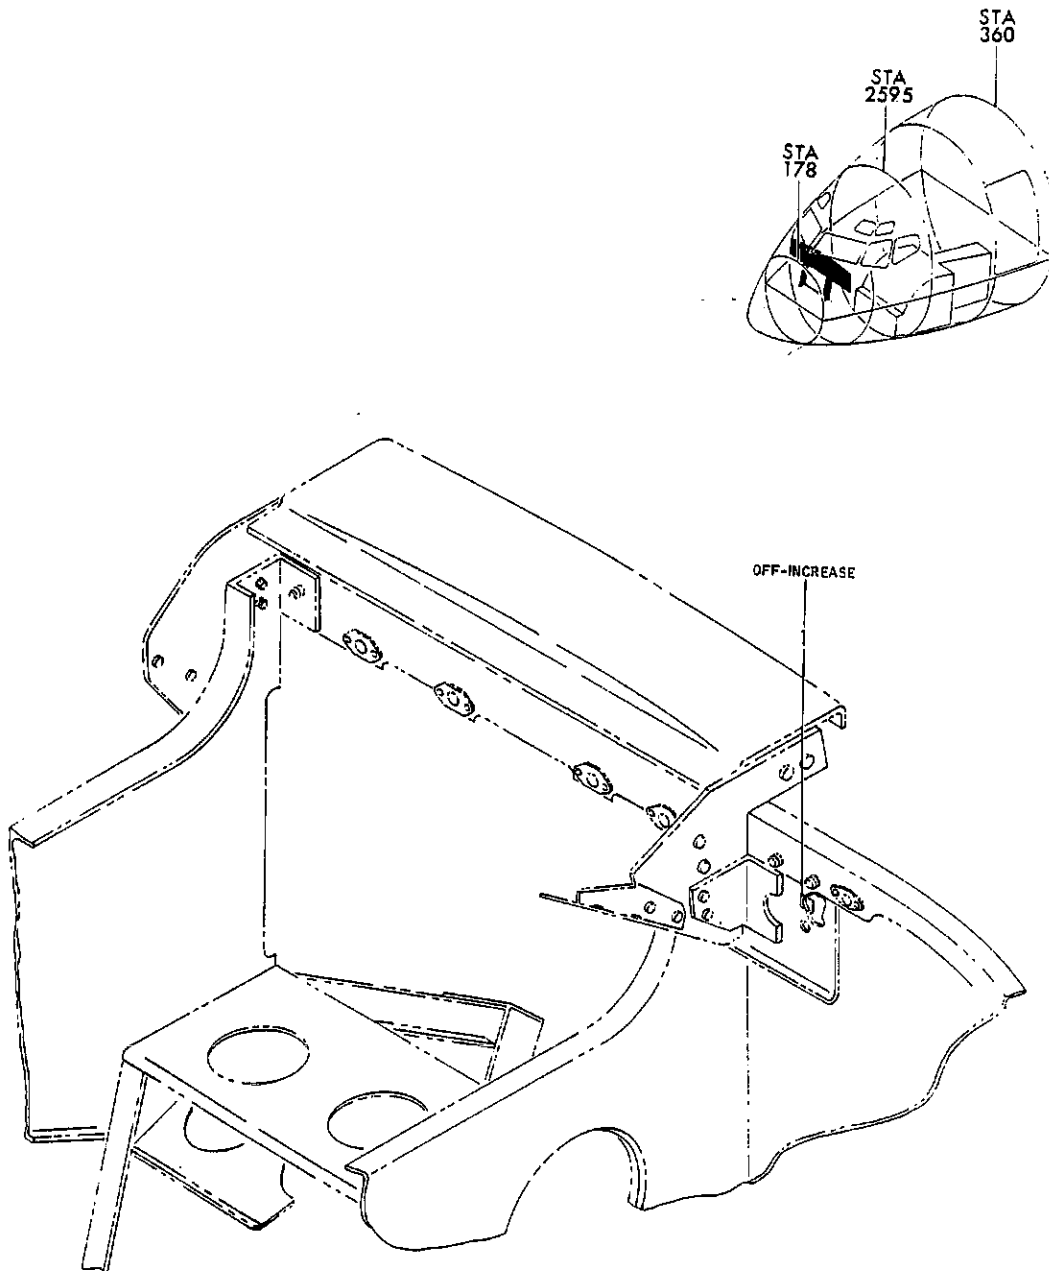 


FIGURE 59B. BRACKET ASSY, EMERGENCY BRAKE (REQUIRED PLACARDS ONLY)

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
59B	69-46771-4	BRACKET ASSY, EMERGENCY BRAKE (REQUIRED PLACARDS ONLY)							5199	RF
1	BAC27CEQ18	(SEE 31-1, FIG. 1A, ITEM 11)								
		. DECAL, OFF INCREASE							5199	1
		. FOR REFERENCE TO OTHER BRACKET DETAILS, SEE NHA . . .							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

RAF
NOV 21/90

11-02-59B

DETAILED PARTS LIST
11-02-59B
PAGE 1

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

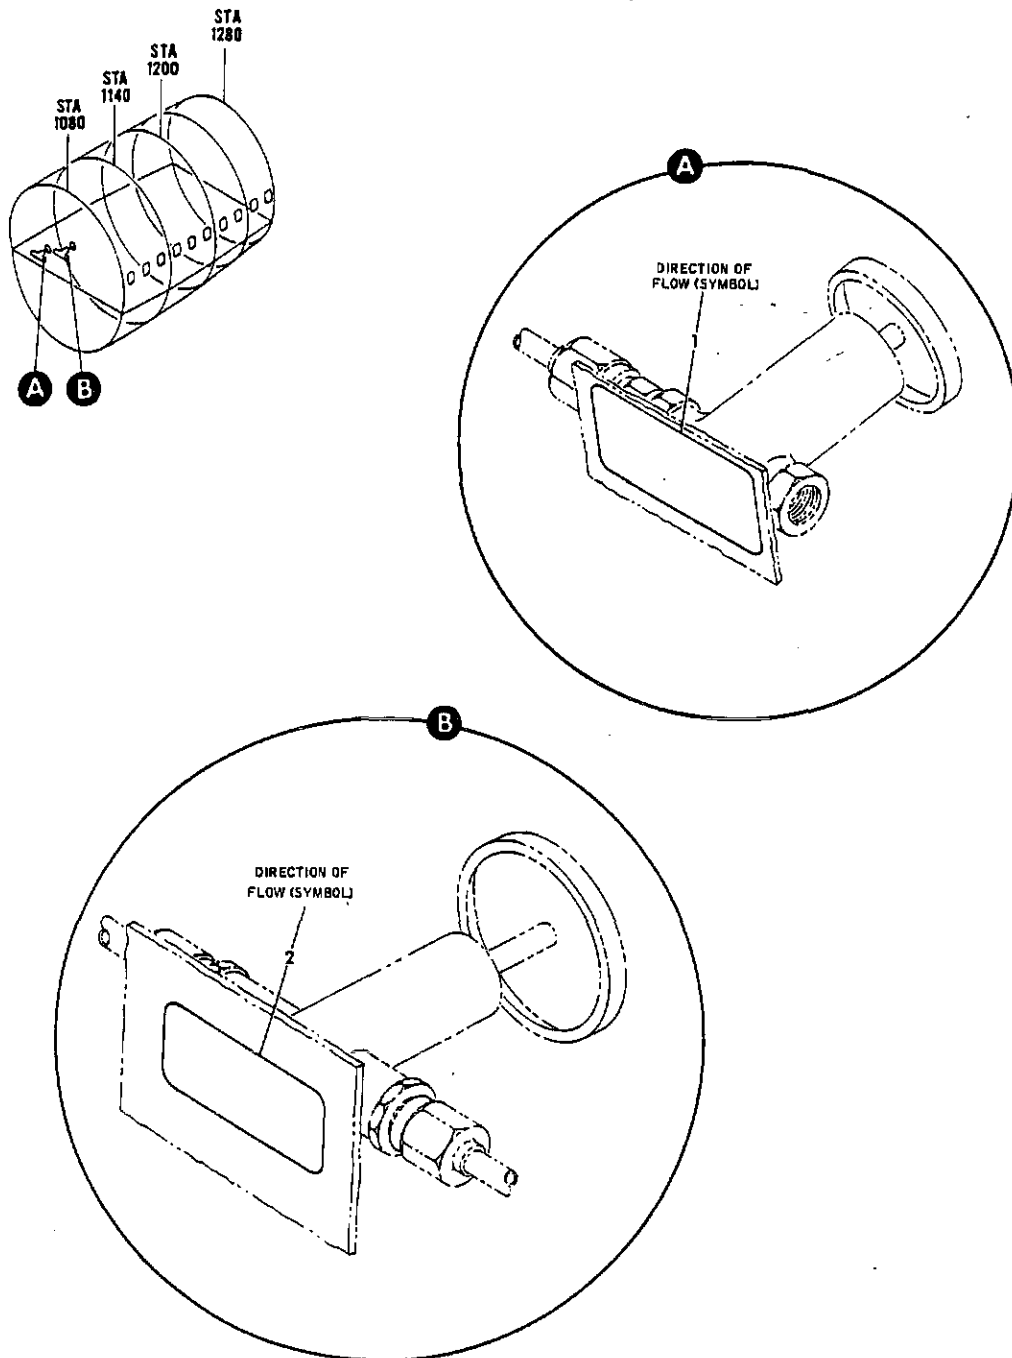 


FIGURE 63. VALVE INSTL, HIGH PRESSURE OXYGEN (REQUIRED PLACARDS ONLY)
VALVE INSTL, HIGH PRESSURE OXYGEN BLEED (REQUIRED PLACARDS ONLY)

707

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
63	65-32169-1	SUPPORT INSTL, FORWARD POTABLE WATER TANK (REQUIRED . . PLACARD ONLY) (SEE 38-1, FIG. 20, ITEM 65 AND 38-1, FIG. 21, ITEM 49)								RF
1	BACM10V21-2JH	. MARKER, ALUMINUM FOIL, SYMBOL CHECK VALVE FREE FLOW . . FOR REFERENCE TO OTHER SUPPORT DETAILS, SEE NHA . . .								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

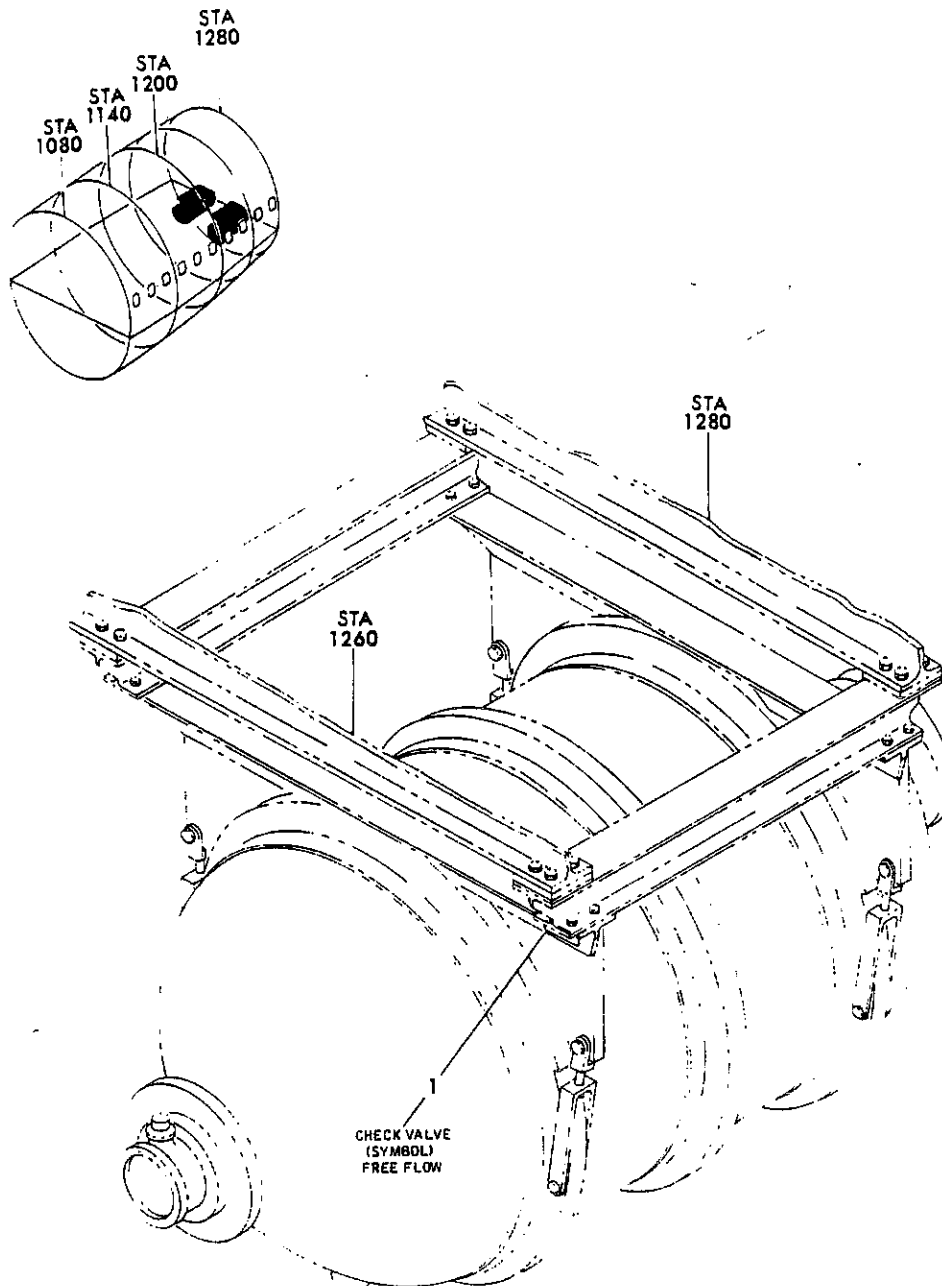 


FIGURE 64. SUPPORT INSTL, AFT POTABLE WATER TANK (REQUIRED PLACARDS ONLY)

707

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
64	65-32233-1	SUPPORT INSTL, AFT POTABLE WATER TANK (REQUIRED								RF
1	BACM10V21-2JH	PLACARDS ONLY) (SEE 38-1, FIG. 40, ITEM 74)								1
		. MARKER, ALUMINUM FOIL, SYMBOL CHECK VALVE FREE FLOW .								
		. FOR REFERENCE TO OTHER SUPPORT DETAILS, SEE NHA . . .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

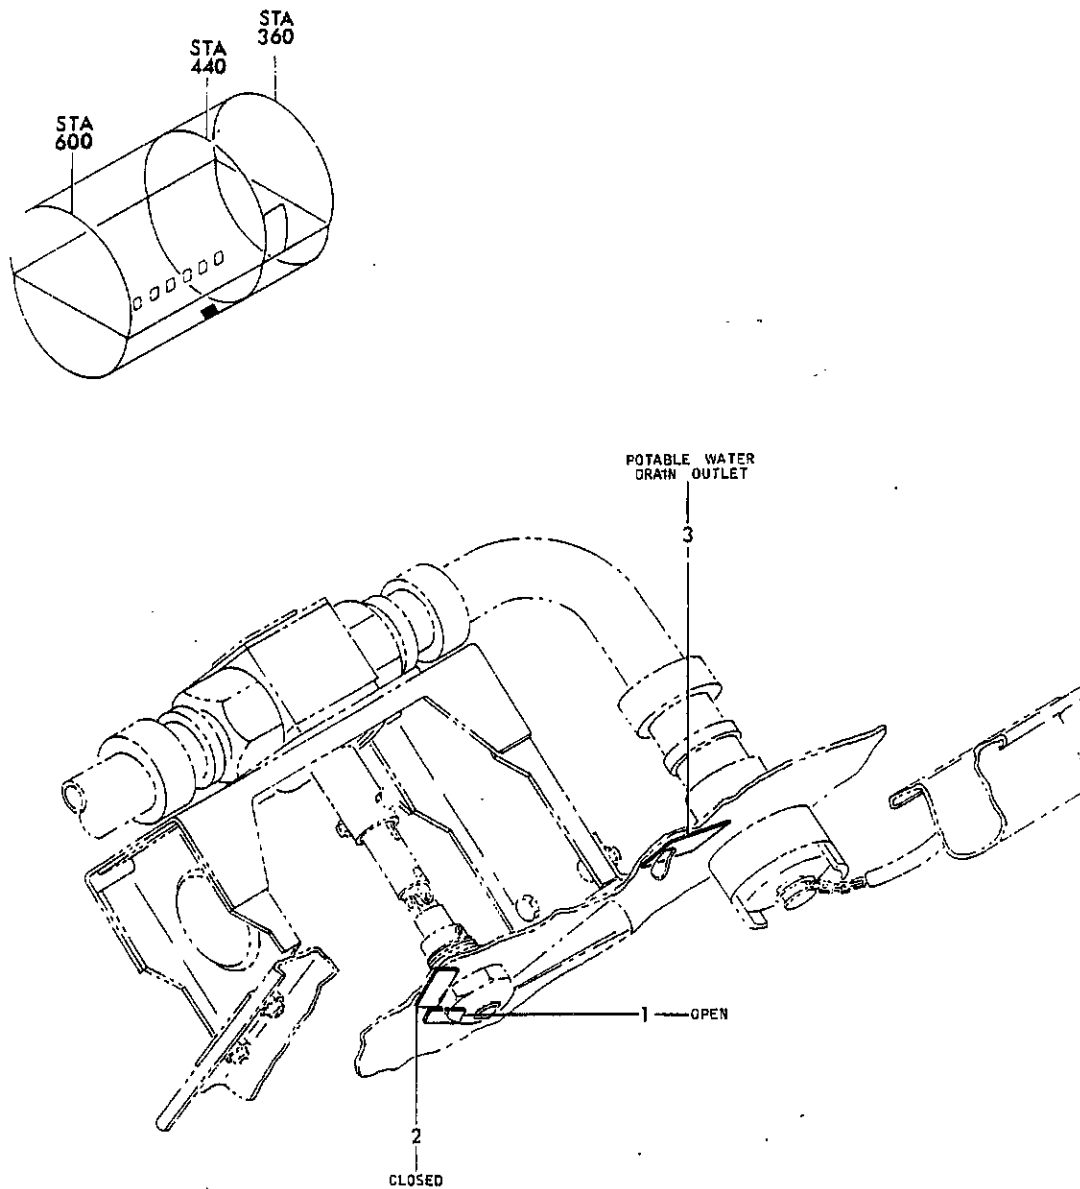 


FIGURE 69. VALVE INSTL, FORWARD POTABLE WATER SYSTEM DRAIN (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
69	65-31984-1	VALVE INSTL, FORWARD POTABLE WATER SYSTEM DRAIN (REQUIRED PLACARDS ONLY) (SEE 38-1, FIG. 20, ITEM 67 AND 38-1, FIG. 21, ITEM 51)								RF
1	BACM10L00-1SC	. MARKER-ALUMINUM FOIL, OPEN.								1
2	BACM10L00-1SE	. MARKER-ALUMINUM FOIL, CLOSED.								1
3	BACM10W31-1AY	. MARKER-ALUMINUM FOIL, POTABLE WATER DRAIN OUTLET . FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

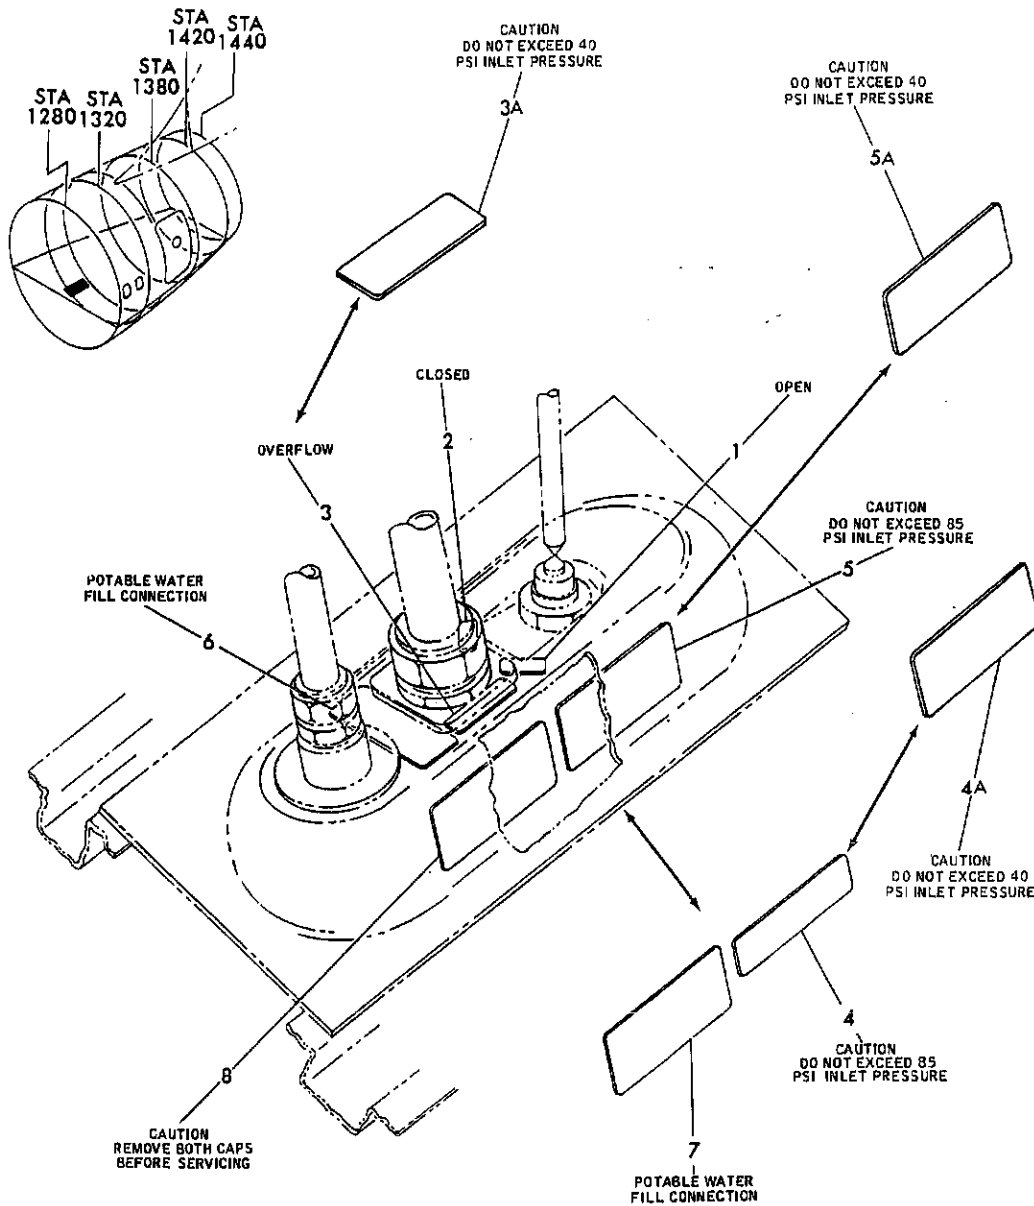 


FIGURE 70. VALVE INSTL, AFT PASSENGER WATER FILL AND DRAIN (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
70	65-6127	VALVE INSTL, AFT PASSENGER WATER FILL AND DRAIN (REQUIRED PLACARDS ONLY) (SEE 38-1, FIG. 30, ITEM 80, 38-1, FIG. 31, ITEM 73, 38-1, FIG. 32, ITEM 67, 38-1, FIG. 33, ITEM 74, 38-1, FIG. 34, ITEM 88, 38-1, FIG. 35, ITEM 79, 38-1, FIG. 36, ITEM 73, 38-1, FIG. 37, ITEM 77, 38-1, FIG. 38, ITEM 78, 38-1, FIG. 39, ITEM 83, 38-1, FIG. 39A, ITEM 1 AND 38-1, FIG. 40, ITEM 70)								RF
1	BACMI0L00-1SC	. MARKER-ALUMINUM FOIL, OPEN.								1
2	BACMI0L00-1SE	. MARKER-ALUMINUM FOIL, CLOSED.								1
3	BACMI0L10-13A	. MARKER-ALUMINUM FOIL, OVERFLOW.								1
5	BACMI0P31-6FN	. MARKER-ALUMINUM FOIL, CAUTION DO NOT EXCEED 85 PSI. . INLET PRESSURE								1
7	BACMI0W31-1AF	. MARKER-ALUMINUM FOIL, POTABLE WATER FILL CONNECTION .								1
8	BACMI0L31-1CAF	. MARKER-ALUMINUM FOIL, CAUTION REMOVE BOTH CAPS BEFORE SERVICING								1
		. FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

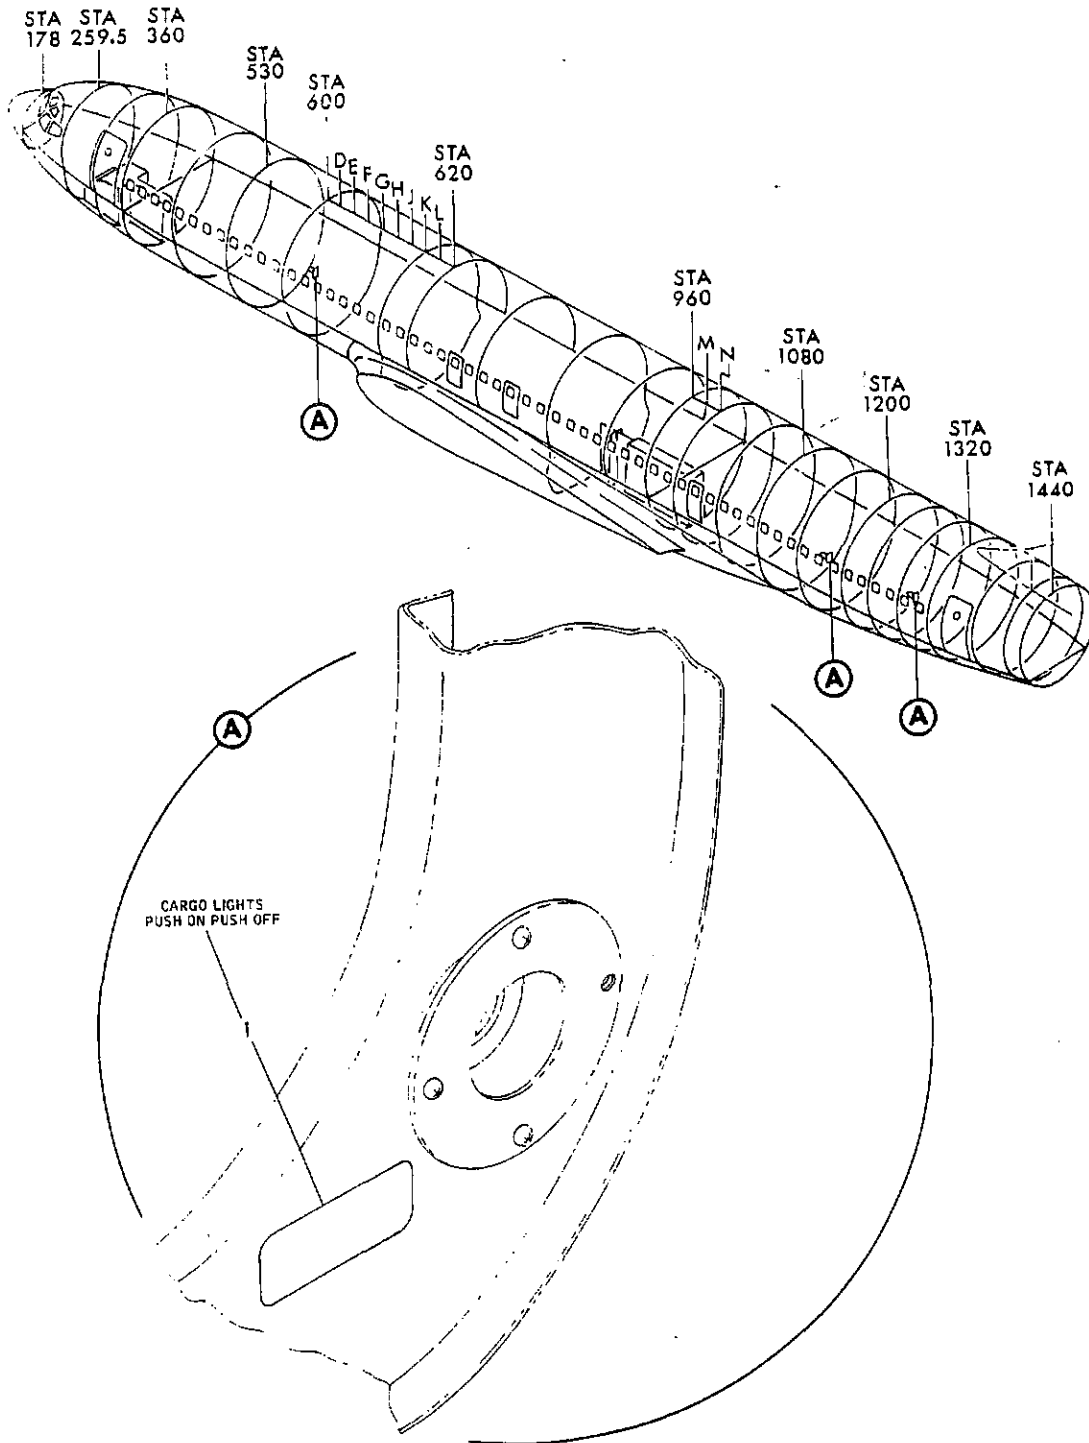 


FIGURE 71. SWITCH INSTL, SECTION 53 AND 56 CARGO LIGHTS (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
71	69-1346	SWITCH INSTL, SECTION 53 CARGO LIGHTS (REQUIRED								RF
		PLACARDS ONLY) (SEE 24-3, FIG. 2, ITEM 47)								
	69-1346-1	SWITCH INSTL, SECTION 56 CARGO LIGHTS (REQUIRED								RF
		PLACARDS ONLY) (SEE 24-3, FIG. 3, ITEM 3)								
1	69-1346-2	SWITCH INSTL, SECTION 56 CARGO LIGHTS (REQUIRED								RF
		PLACARDS ONLY) (SEE 24-3, FIG. 3, ITEM 4)								
	BACM10L20-4NE	. MARKER-ALUMINUM FOIL, CARGO LIGHTS PUSH ON PUSH OFF .								1
		. FOR REFERENCE TO OTHER SWITCH DETAILS, SEE NHA. . . .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

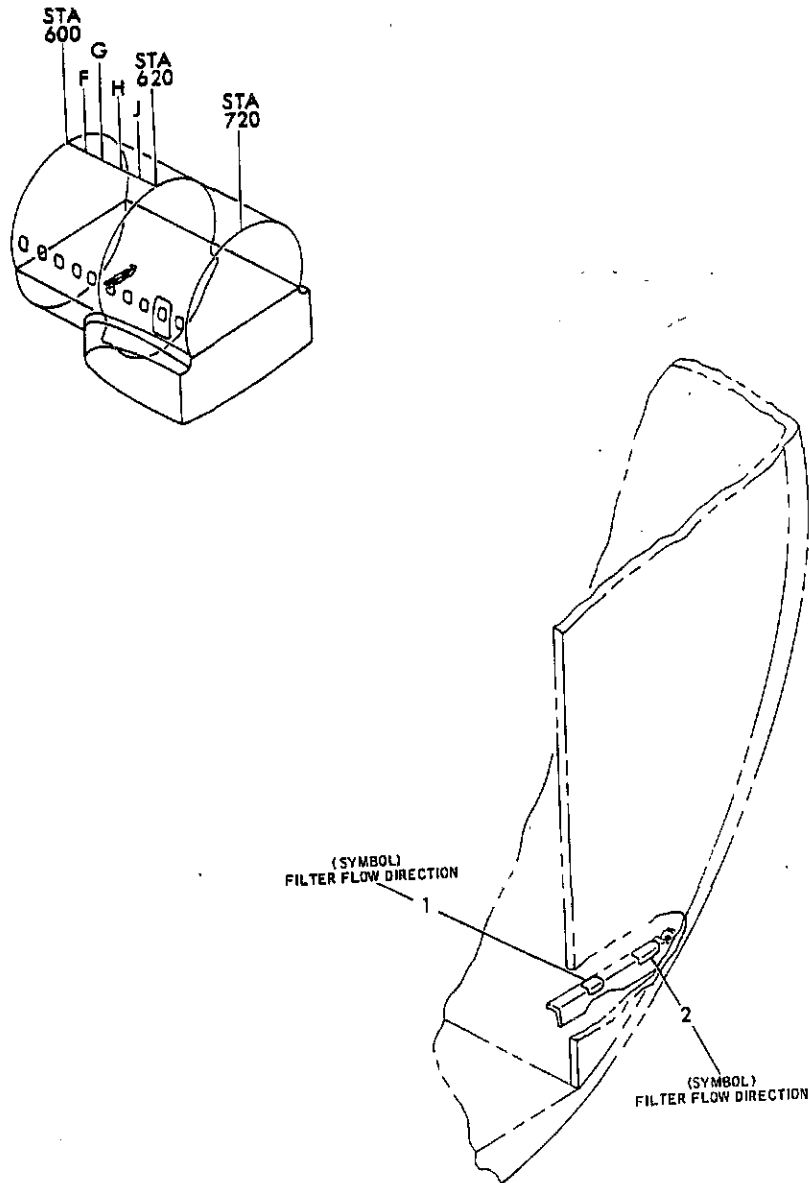 


FIGURE 73. EQUIPMENT INSTL, POTABLE WATER PNEUMATIC SYSTEM (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
73	65-31978-1	EQUIPMENT INSTL, POTABLE WATER PNEUMATIC SYSTEM (REQUIRED PLACARDS ONLY) (SEE 38-1, FIG. 20, ITEM 62 AND 38-1, FIG. 21, ITEM 46)								RF
1	BACM10F11-3AH	. MARKER, ALUMINUM FOIL, SYMBOL (FILTER FLOW DIRECTION)								1
2	BACM10V21-ZJH	. MARKER, ALUMINUM FOIL, SYMBOL (FILTER FLOW DIRECTION)								1
		. FOR REFERENCE TO OTHER EQUIPMENT DETAILS, SEE NHA . .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

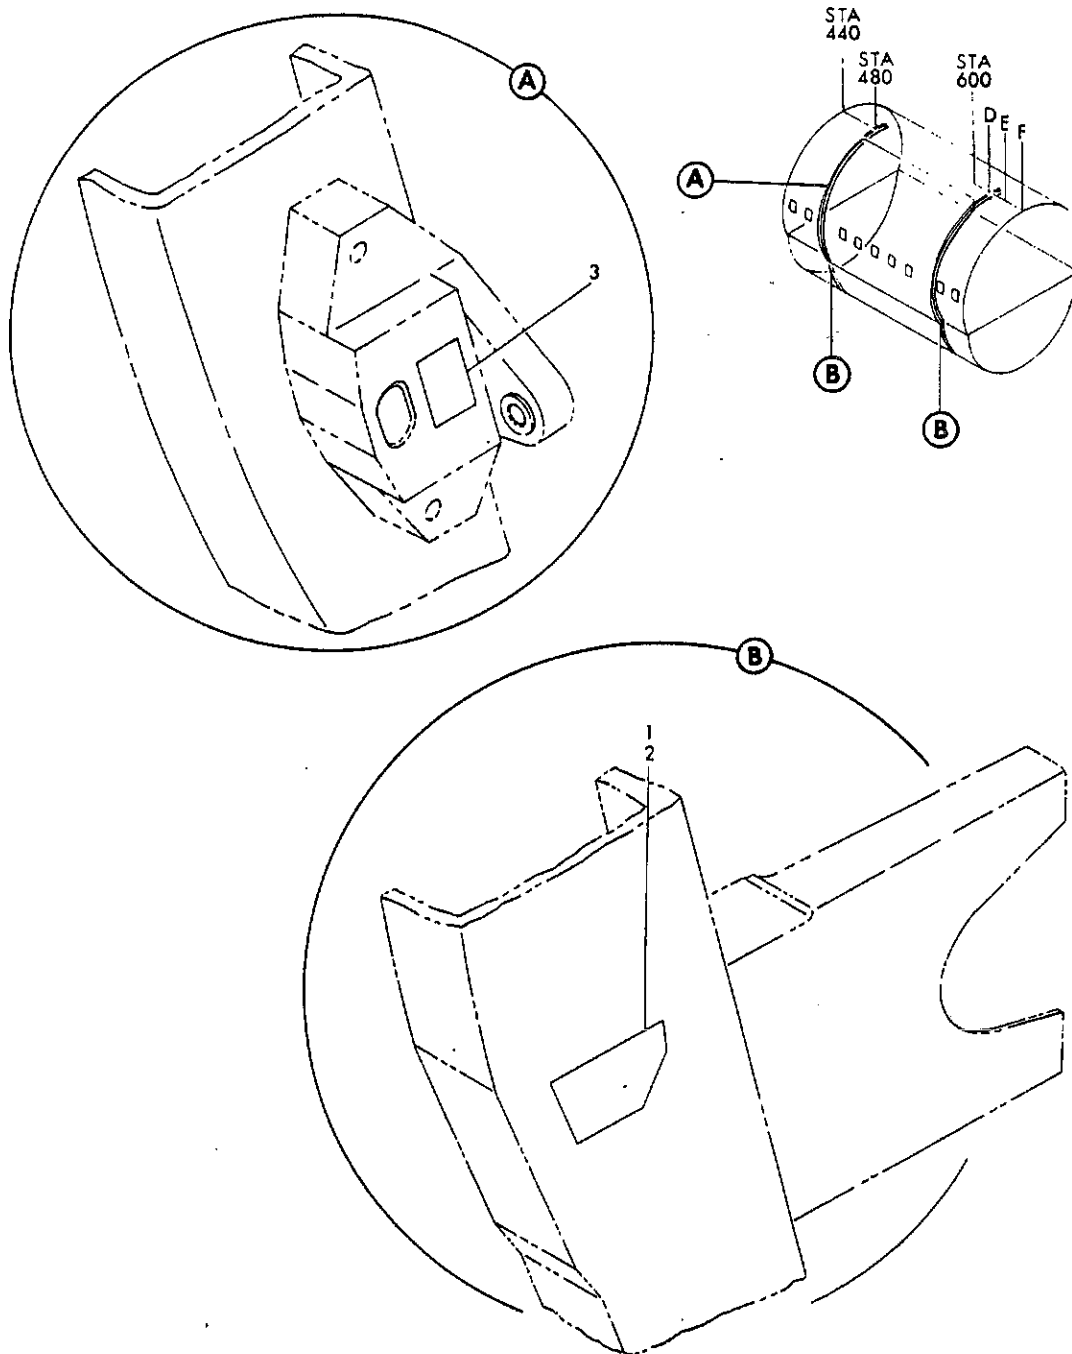 


FIGURE 74. FRAME INSTL. STATION 480 AND 600D STRINGER 5 RH
TO STRINGER 25 LH (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
74	65-25345-1	FRAME INSTL, STATION 480 STRINGER 5 RH TO STRINGER 25 . LH (REQUIRED PLACARDS ONLY) (SEE 52-3, FIG. 32, ITEM 18)								RF	
	65-25346-1	FRAME INSTL, STATION 600D STRINGER 5 RH TO STRINGER 25 LH (REQUIRED PLACARDS ONLY) (SEE 52-3, FIG. 32, ITEM 19)								RF	
	1	BACM1089DM	. MARKER-ALUMINUM FOIL, USE AN6-23 BOLT ONLY THRU THIS ROLLER (USED ON 65-25345-1)								1
	2	BACM1089DN	. MARKER-ALUMINUM FOIL, USE AN6-23 BOLT ONLY THRU THIS ROLLER (USED ON 65-25346-1)								1
	3	BAC27CPA529	. MARKER-ALUMINUM FOIL, (USED ON 65-25345-1). FOR REFERENCE TO OTHER FRAME DETAILS, SEE NHA							5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

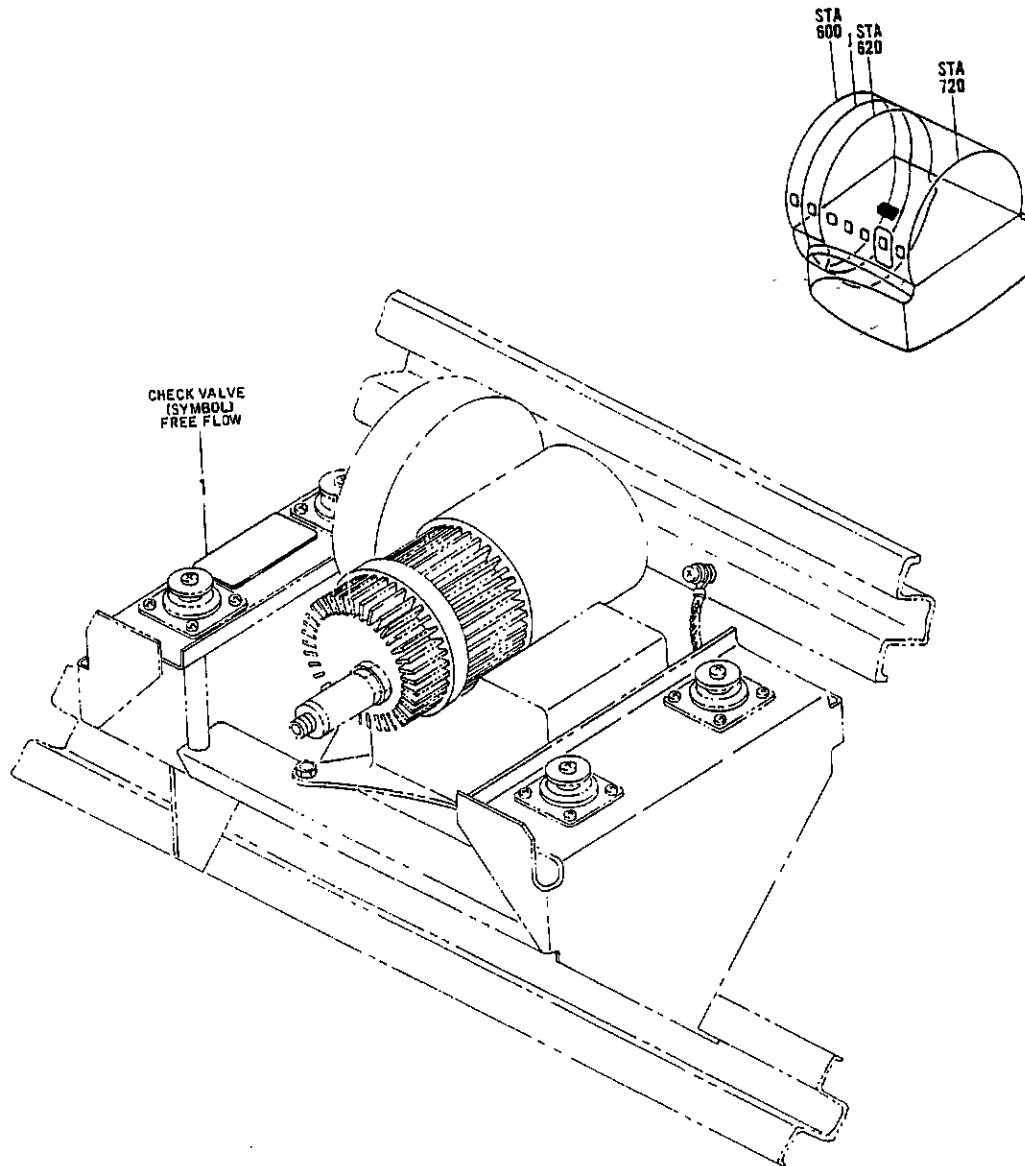 


FIGURE 76. COMPRESSOR INSTL, POTABLE WATER SYSTEM (REQUIRED PLACARDS ONLY)

707

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
76	65-32219-1	COMPRESSOR INSTL, POTABLE WATER SYSTEM (REQUIRED. . . .							0150	RF
		PLACARDS ONLY) (SEE 38-1, FIG. 20, ITEM 63 AND								
1	BACM10VZ1-2JG	38-1, FIG. 21, ITEM 47)							0150	1
		. MARKER, ALUMINUM FOIL, SYMBOL CHECK VALVE FREE FLOW .							0150	
		. FOR REFERENCE TO OTHER COMPRESSOR DETAILS, SEE NHA. .							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

RAF
NOV 21/91

11-02-76

DETAILED PARTS LIST
11-02-76
PAGE 1

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

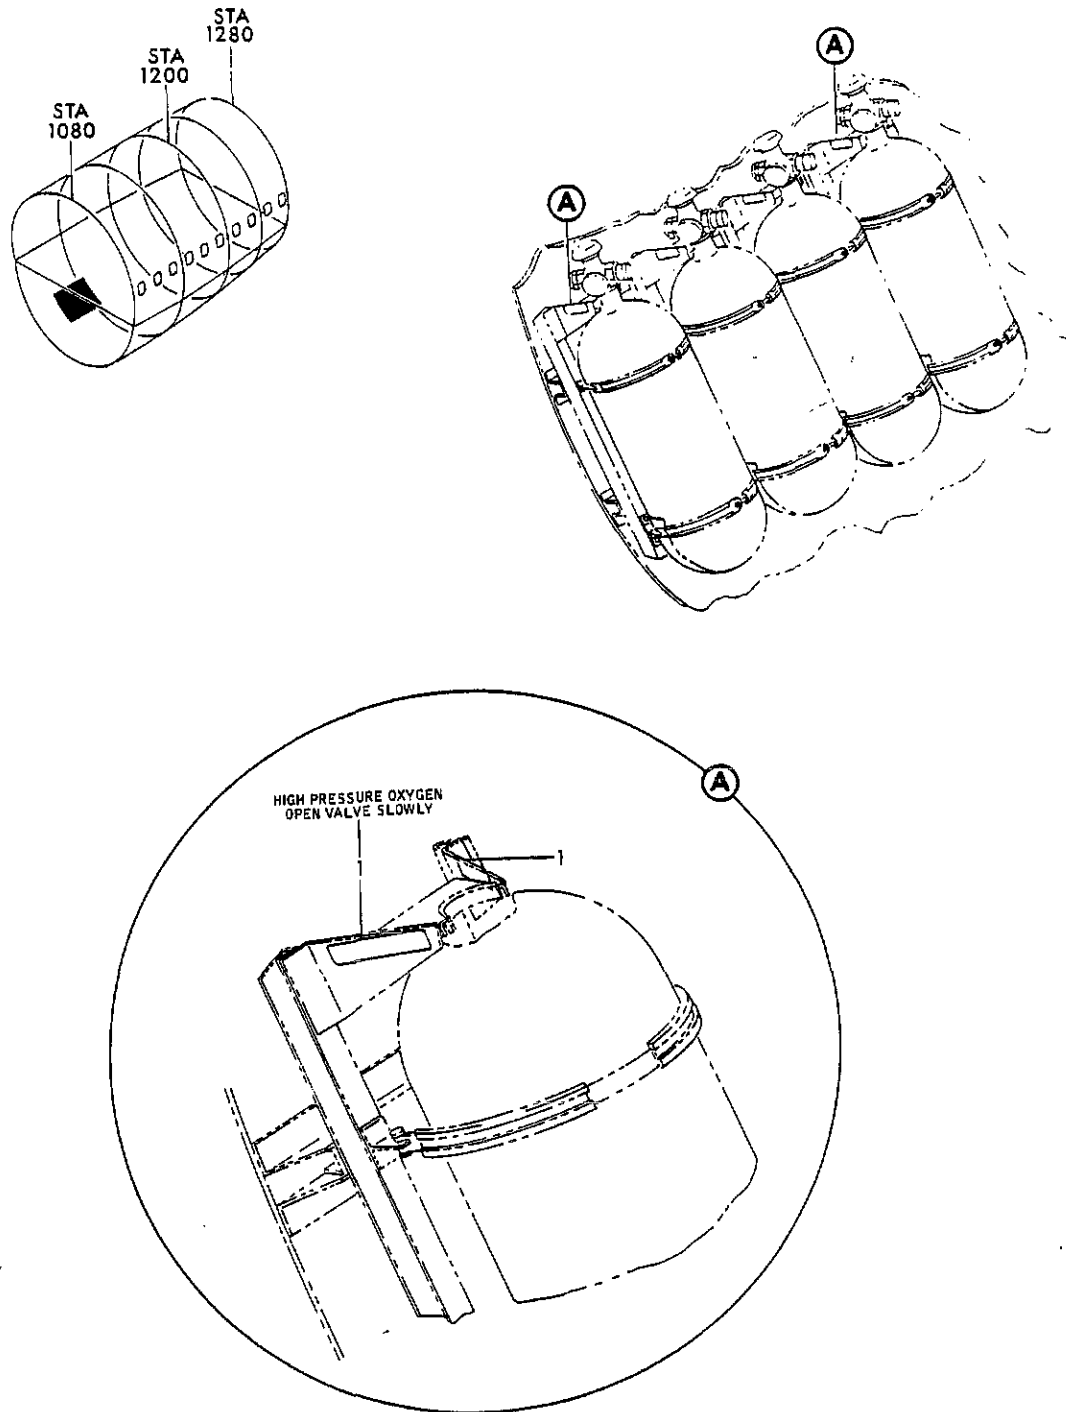 


FIGURE 79. BOTTLE INSTL., STATION 1100 TO 1140 PASSENGER OXYGEN (REQUIRED PLACARDS ONLY)

707

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R R R R R	79	65-8658	BOTTLE INSTL, STATION 1100 TO 1140 PASSENGER OXYGEN . . (REQUIRED PLACARDS ONLY) (SEE 35-1, FIG. 21, ITEM 105, 35-1, FIG. 22, ITEM 110, 35-1, FIG. 25, ITEM 106, 35-1, FIG. 26, ITEM 99, 35-1, FIG. 308, ITEM 57, 35-1, FIG. 30E, ITEM 65, 35-1, FIG. 30F, ITEM 67, 35-1, FIG. 30H, ITEM 63 AND 35-1, FIG. 30L, ITEM 66)							5299	RF
		65-8658-16	BOTTLE INSTL, STATION 1100 TO 1140 PASSENGER OXYGEN . . (REQUIRED PLACARDS ONLY) (SEE 35-1, FIG. 23, ITEM 91, 35-1, FIG. 30, ITEM 70, 35-1, FIG. 30D, ITEM 60, 35-1, FIG. 30G, ITEM 72, 35-1, FIG. 30H, ITEM 63 AND 35-1, FIG. 30J, ITEM 65)							0151	RF
	1	BACM10V20-2AJV	. MARKER-ALUMINUM FOIL, HIGH PRESSURE OXYGEN OPEN VALVE SLOWLY . FOR REFERENCE TO OTHER BOTTLE DETAILS, SEE NHA. . . .							0151	8
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

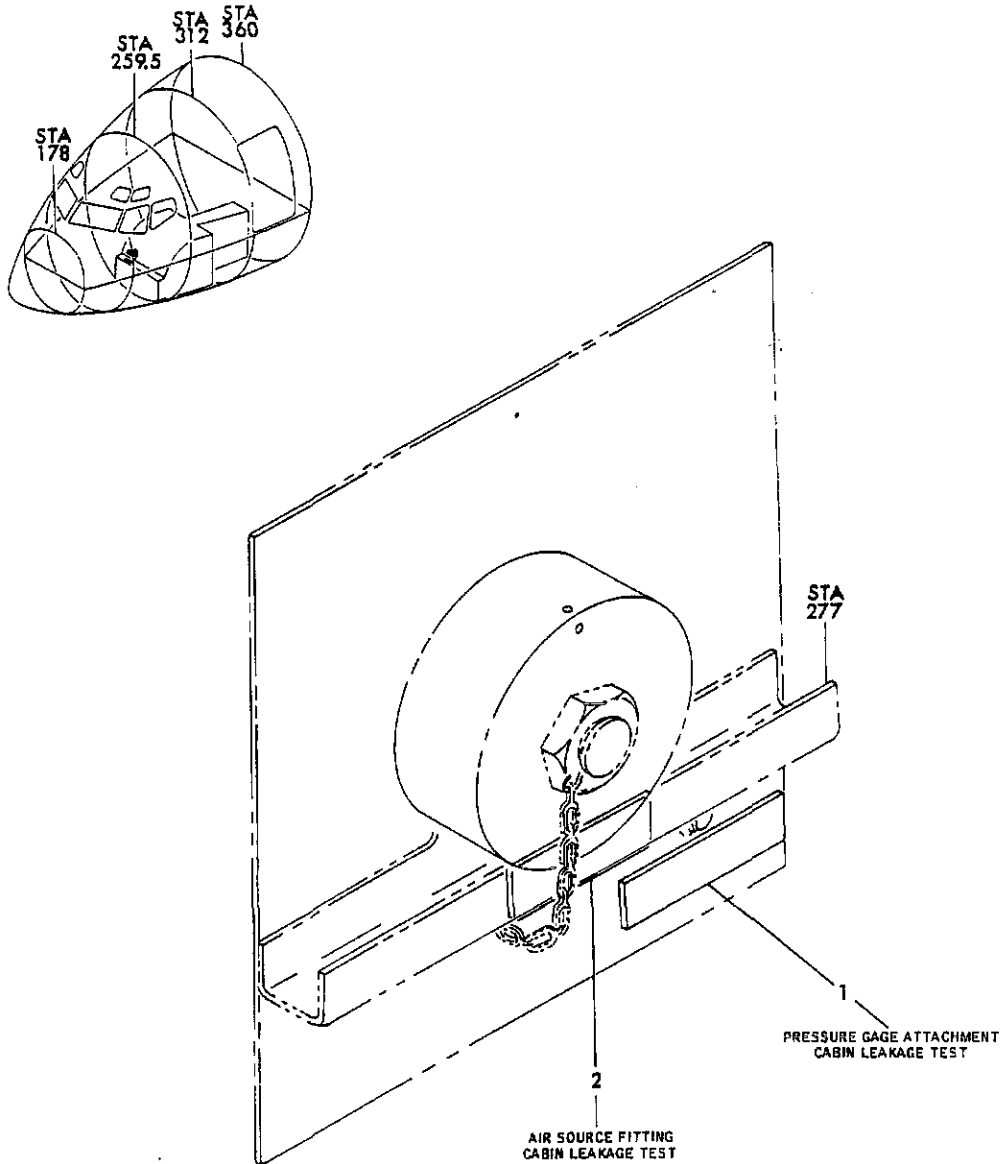 


FIGURE 80. FITTING INSTL, CABIN LEAKAGE TEST PRESSURIZATION (REQUIRED PLACARDS ONLY)

707

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
80	5-87872-3000	FITTING INSTL, CABIN LEAKAGE TEST PRESSURIZATION. . . . (REQUIRED PLACARDS ONLY) (SEE 21-2, FIG. 1, ITEM 6 AND 21-5, FIG. 90, ITEM 3)								RF
1	BACM10T50-168D	. MARKER-ALUMINUM FOIL, PRESSURE GAGE ATTACHMENT CABIN LEAKAGE TEST								2
2	BACM10T40-168E	. MARKER-ALUMINUM FOIL, AIR SOURCE FITTING CABIN. . . . LEAKAGE TEST								1
		. FOR REFERENCE TO OTHER FITTING DETAILS, SEE NHA . . .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

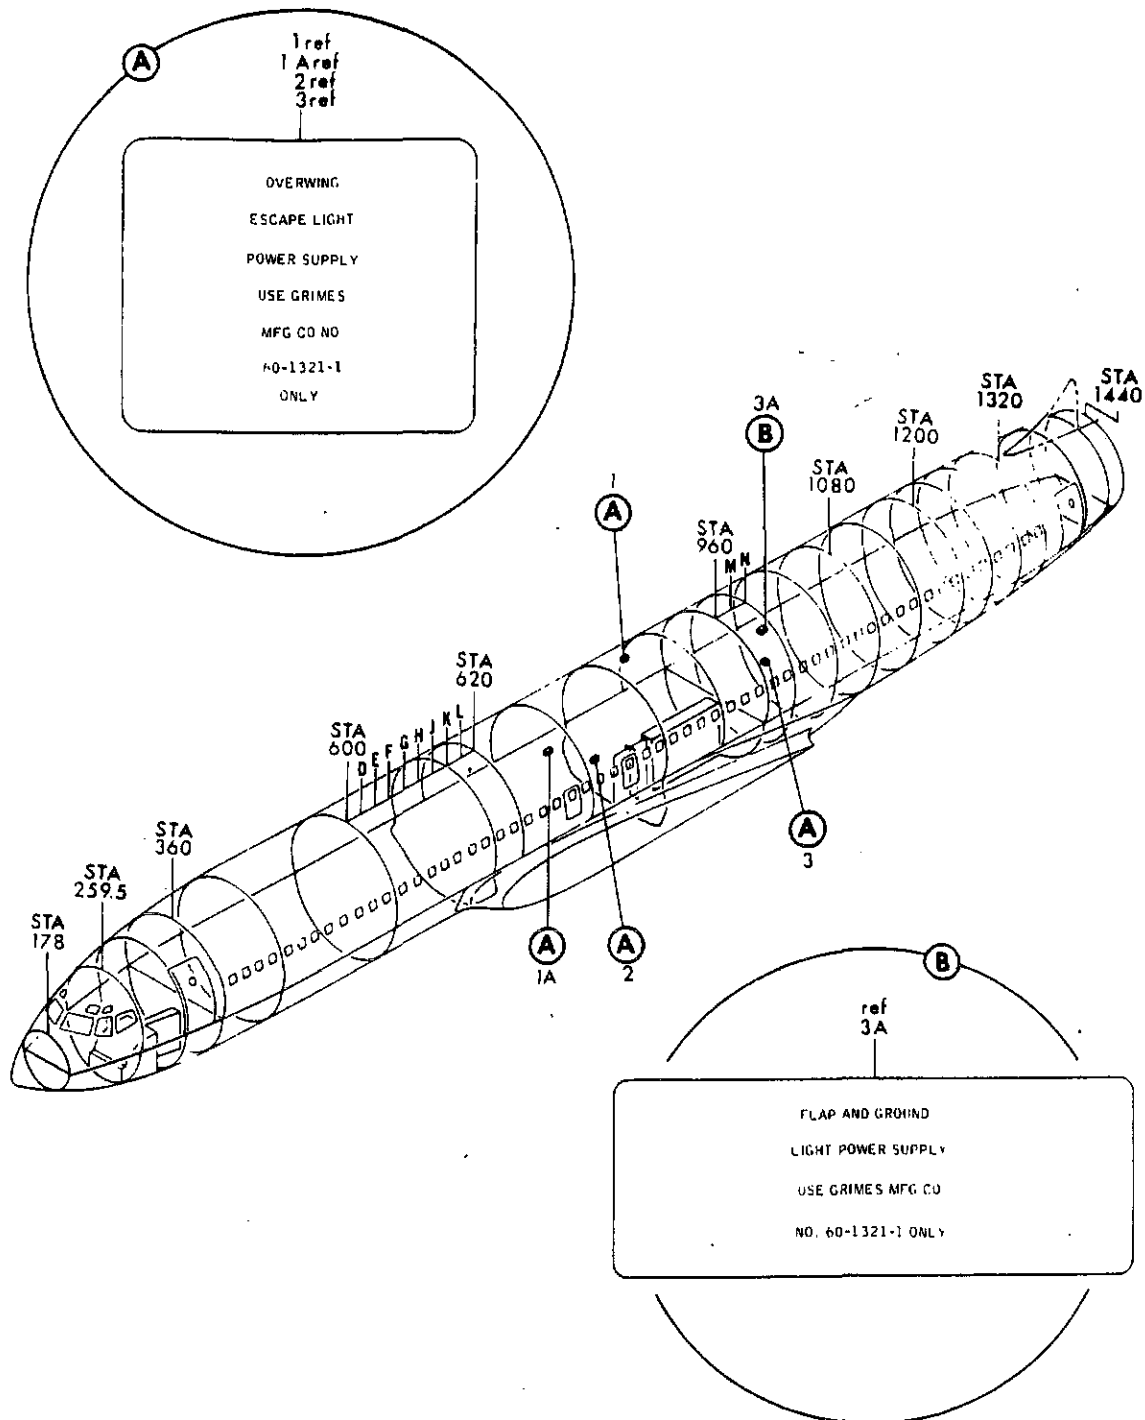 


FIGURE 82. LIGHT INSTL, SECTION 53 AND 56 OVERWING ESCAPE ILLUMINATION (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE										EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7					
82		LIGHT INSTL, SECTION 53 AND 56 OVERWING ESCAPE.											
		ILLUMINATION (REQUIRED PLACARDS ONLY)											
	65-71727-23	. LIGHT INSTL, SECTION 53 OVERWING ESCAPE ILLUMINATION										5199	RF
		(REQUIRED PLACARDS ONLY) (SEE 24-3, FIG. 2, ITEM											
		17)											
	65-71727-13	. LIGHT INSTL, SECTION 53 OVERWING ESCAPE ILLUMINATION										0150	RF
		(REQUIRED PLACARDS ONLY) (ADDED BY SB 2754) (SEE											
		24-3, FIG. 2, ITEM 17)											
	65-71727-11	. . POWER SUPPLY INSTL, STATION 866.44 RH										0150	RF
		(REQUIRED PLACARDS ONLY)											
	65-71727-25	. . POWER SUPPLY INSTL, STATION 850 RH (REQUIRED. . . .										5199	RF
		PLACARDS ONLY)											
	1 BAC27CEE478	. . . MARKER-ALUMINUM FOIL, OVERWING ESCAPE LIGHT POWER										0150	1
		SUPPLY INSTRUCTIONS											
	1A BAC27CEE478	. . . MARKER-ALUMINUM FOIL, OVERWING ESCAPE LIGHT POWER										5199	1
		SUPPLY INSTRUCTIONS											
		. FOR REFERENCE TO OTHER LIGHT DETAILS, SEE NHA											
	65-81513-5	. LIGHT INSTL, SECTION 53 OVERWING ESCAPE SLIDE										5199	RF
		ILLUMINATION (REQUIRED PLACARDS ONLY) (SEE 24-3,											
		FIG. 2, ITEM 18)											
2	BAC27CEE478	. . MARKER-ALUMINUM FOIL, STA 730 OVERWING ESCAPE LIGHT										5199	1
		POWER SUPPLY INSTRUCTIONS											
		. . FOR REFERENCE TO OTHER LIGHT DETAILS, SEE NHA										5199	
	65-71727-24	. LIGHT INSTL, SECTION 56 OVERWING ESCAPE ILLUMINATION										5199	RF
		(REQUIRED PLACARDS ONLY) (SEE 24-3, FIG. 3, ITEM											
		41)											
	65-71727-13	. LIGHT INSTL, SECTION 56 OVERWING ESCAPE ILLUMINATION										0150	RF
		(REQUIRED PLACARDS ONLY) (ADDED BY SB 2754) (SEE											
		24-3, FIG. 3, ITEM 41)											
	65-71727-12	. . POWER SUPPLY INSTL, STATION 960 PLUS 28.65 LH . . .										0150	RF
3		(REQUIRED PLACARDS ONLY)											
	65-71727-26	. . POWER SUPPLY INSTL, STATION 960M PLUS 10 LH										5199	RF
	BAC27CEE478	. . . MARKER-ALUMINUM FOIL, OVERWING ESCAPE LIGHT POWER										0150	1
		SUPPLY INSTRUCTIONS											
3A	BAC27CEE615	. . . MARKER-ALUMINUM FOIL, FLAP AND GROUND LIGHT POWER										5199	1
		SUPPLY INSTRUCTIONS											
		. . FOR REFERENCE TO OTHER LIGHT DETAILS, SEE NHA . . .											

MISSING ITEM NUMBERS ARE NOT APPLICABLE

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

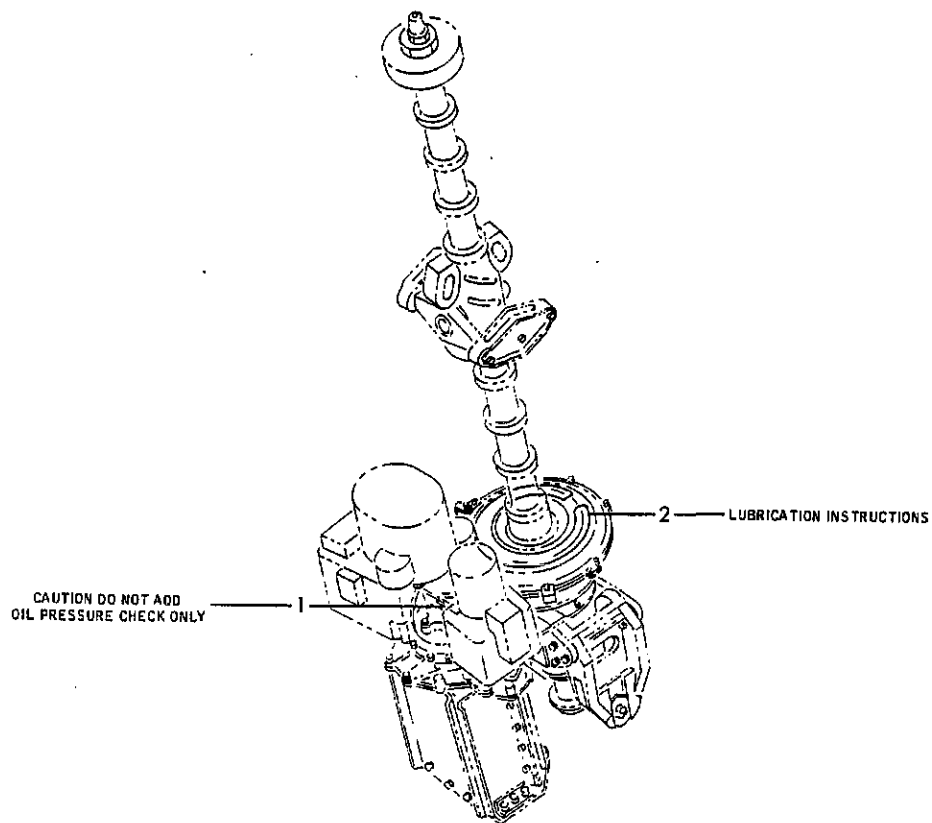 
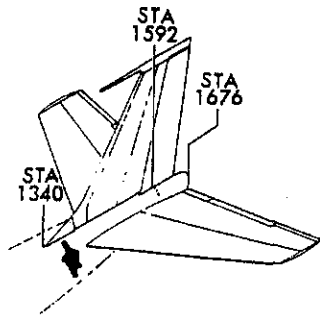 


FIGURE 84. ACTUATOR ASSY, STABILIZER TRIM (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R	84	65-6456-16	ACTUATOR ASSY, STABILIZER TRIM (REQUIRED PLACARDS ONLY) (DELETED BY SB 2619) (SEE 27-12, FIG. 9, ITEM 30)							0102	RF
		65-6456-20	ACTUATOR ASSY, STABILIZER TRIM (REQUIRED PLACARDS ONLY) (SEE 27-12, FIG. 9, ITEM 30) (OPTIONAL TO 65-6456-21)							5199	RF
		65-6456-21	ACTUATOR ASSY, STABILIZER TRIM (REQUIRED PLACARDS ONLY) (SEE 27-12, FIG. 9, ITEM 30) (OPTIONAL 65-6456-20)							5199	RF
		65-6456-17	ACTUATOR ASSY, STABILIZER TRIM (REQUIRED PLACARDS ONLY) (SEE 27-12, FIG. 9, ITEM 30)							0350	RF
		65-6456-17	ACTUATOR ASSY, STABILIZER TRIM (REQUIRED PLACARDS ONLY) (ADDED BY SB 2619) (SEE 27-12, FIG. 9, ITEM 30)							0102	RF
	2	BACM10L6N	. MARKER-ALUMINUM FOIL, LUBRICATION INSTRUCTIONS (USED ON 65-6456-9, -10, -12, -14, -16, -17, -18, -19, -20) . FOR REFERENCE TO OTHER ACTUATOR DETAILS, SEE NHA. . .								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

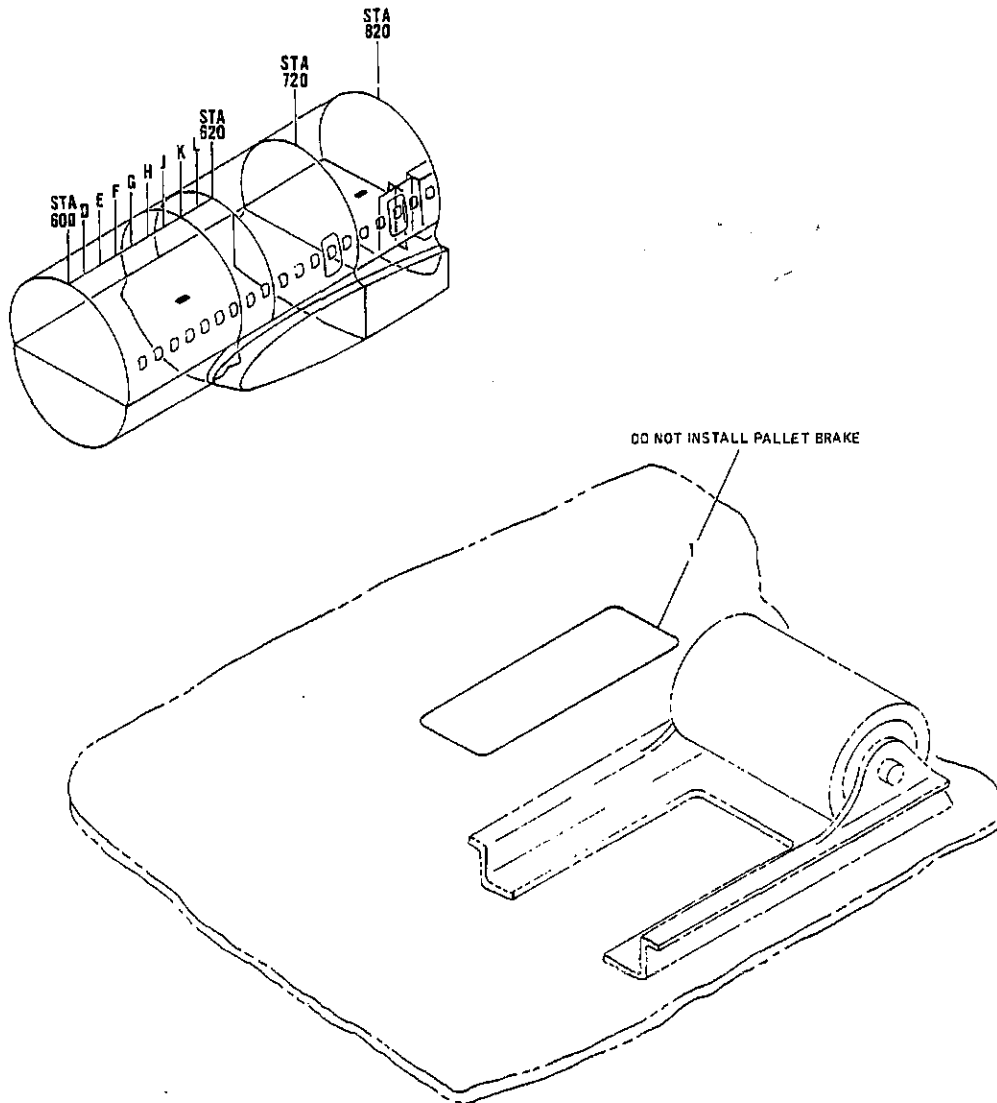 


FIGURE 85. MARKER INSTL, ALUMINUM FOIL, PALLETIZED CARGO SYSTEM BRAKE

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
85	65-37283-4	MARKER INSTL-ALUMINUM FOIL, PALLETIZED CARGO SYSTEM . .								RF
1	BACM10W4AD	. BRAKE MARKER-ALUMINUM FOIL, WING LINK-DO NOT INSTALL PALLET BRAKE								2
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

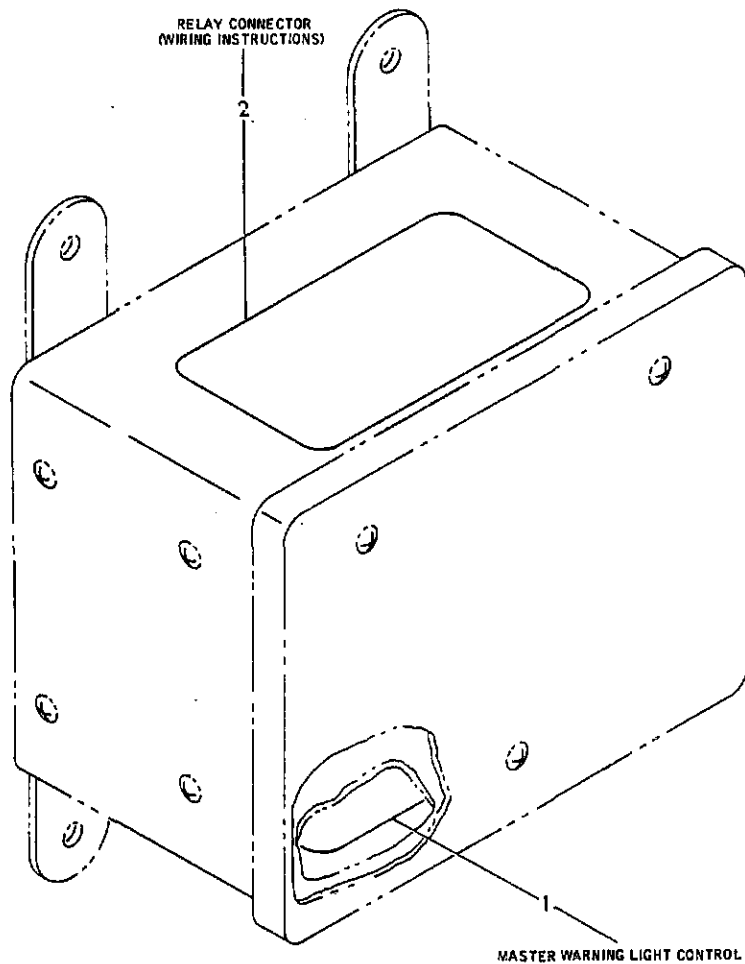 
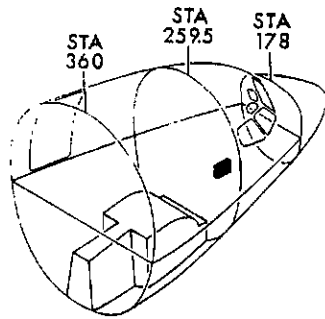 


FIGURE 89. CONTROL ASSY, MASTER WARNING LIGHT (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
89	65-45378-1	CONTROL ASSY, MASTER WARNING LIGHT (REQUIRED PLACARDS . ONLY) (SEE 33-3, FIG. 36, ITEM 6)								RF
1	BACM10M18KB	. METAL-CAL, MASTER WARNING LIGHT CONTROL								1
2	BACM10D21AC	. METAL-CAL, RELAY CONNECTOR (WIRING INSTRUCTIONS). . .								1
		. FOR REFERENCE TO OTHER CONTROL DETAILS, SEE NHA . . .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

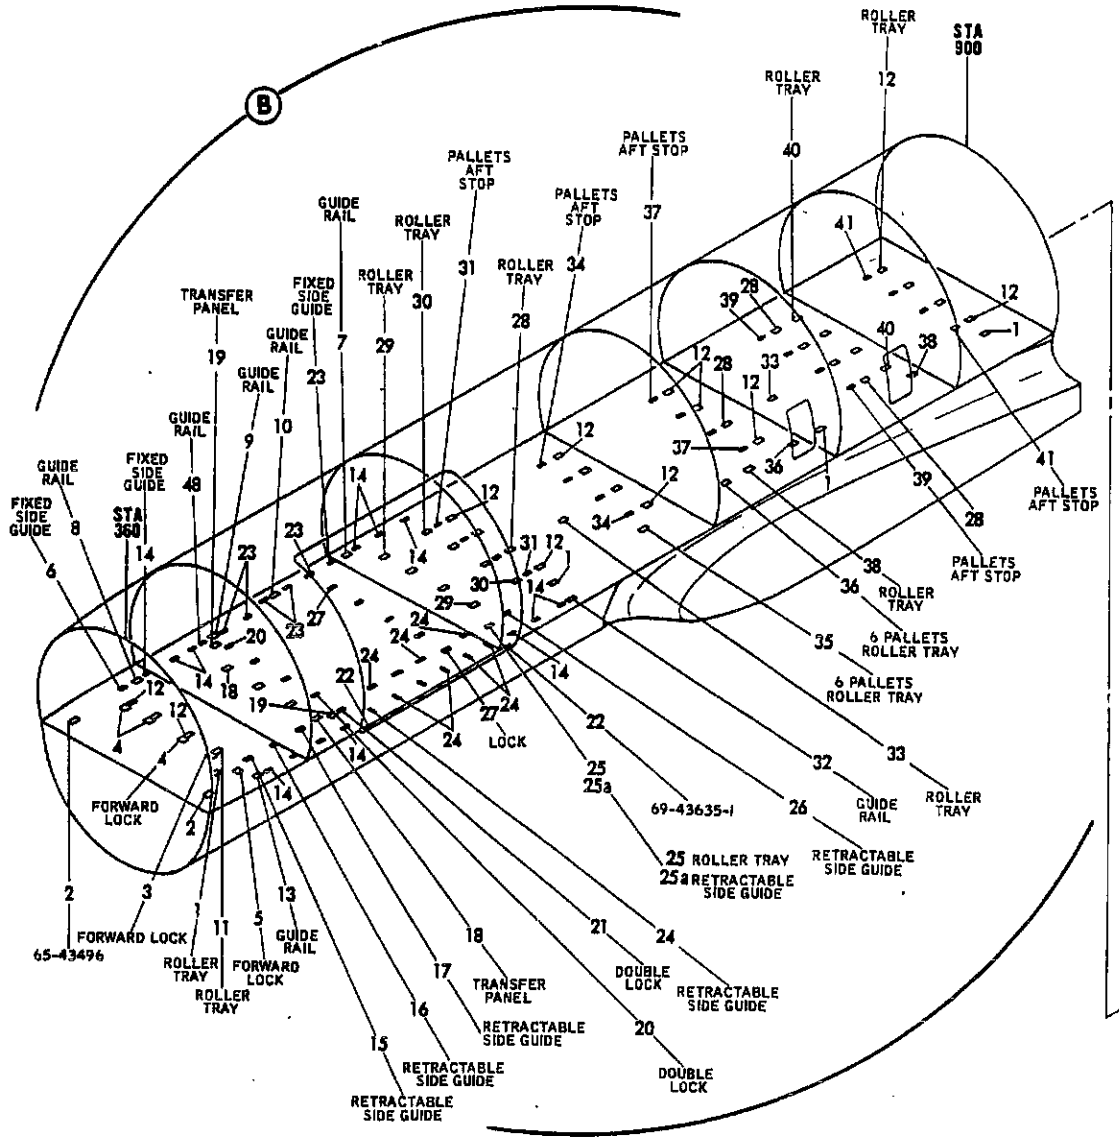 


FIGURE 101. MARKING INSTL, PALLETIZED SYSTEM FLOOR (SHEET 1)

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

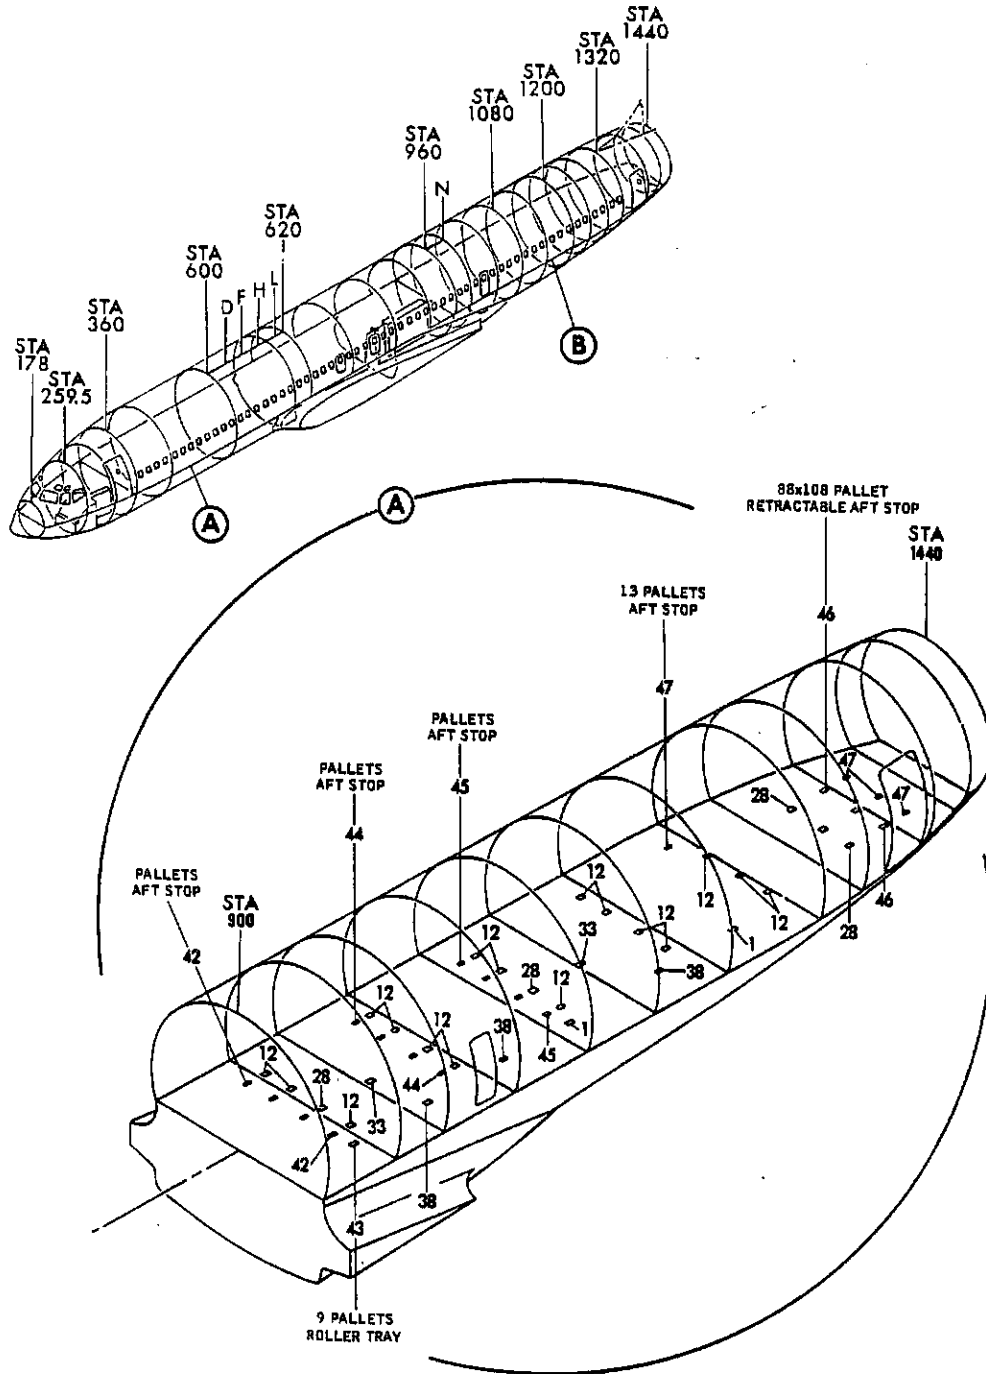 


FIGURE 101. MARKING INSTL, PALLETIZED SYSTEM FLOOR (SHEET 2)

NOV 21/90

11-02-101

DETAILED PARTS LIST
11-02-101
PAGE 1

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 101	65-77243-2	MARKING INSTL KIT, MAIN DECK PALLETIZED CARGO (ADDED BY MOD 6-7200-3983)	0150	1
R 1	BACM10L1ECM	. MARKER-ALUMINUM FOIL, ROLLER TRAY	0150	6
R 2	BACM10L1EFC	. MARKER-ALUMINUM FOIL, 65-43496.	0150	2
R 3	BACM10L7D8	. MARKER-ALUMINUM FOIL, FWD LOCK.	0150	1
R 4	BACM10L7DA	. MARKER-ALUMINUM FOIL, FWD LOCK.	0150	3
R 5	BACM10L7DG	. MARKER-ALUMINUM FOIL, FWD LOCK.	0150	1
R 6	BACM10L1EHE	. MARKER-ALUMINUM FOIL, FIXED SIDE GUIDE.	0150	1
R 7	BAC27CCH29	. MARKER-ALUMINUM FOIL, GUIDE RAIL.	0150	1
R 9	BACM10L1EGZ	. MARKER-ALUMINUM FOIL, GUIDE RAIL.	0150	1
R 10	BACM10L1EHA	. MARKER-ALUMINUM FOIL, GUIDE RAIL.	0150	1
R 11	BACM10L1ECN	. MARKER-ALUMINUM FOIL, ROLLER TRAY	0150	1
R 12	BACM10L1ECH	. MARKER-ALUMINUM FOIL, ROLLER TRAY	0150	34
R 13	BACM10L1EGW	. MARKER-ALUMINUM FOIL, GUIDE RAIL.	0150	1
R 15	BACM10L1EEC	. MARKER-ALUMINUM FOIL, RETRACTABLE SIDE GUIDE.	0150	1
R 16	BACM10L1EEB	. MARKER-ALUMINUM FOIL, RETRACTABLE SIDE GUIDE.	0150	1
R 17	BACM10L1EEA	. MARKER-ALUMINUM FOIL, RETRACTABLE SIDE GUIDE.	0150	1
R 18	BACM10P9UC	. MARKER-ALUMINUM FOIL, TRANSFER PANEL.	0150	4
R 20	BAC27CCH28	. MARKER-ALUMINUM FOIL, DOUBLE LOCK	0150	4
R 21	BAC27CCH27	. MARKER-ALUMINUM FOIL, DOUBLE LOCK	0150	1
R 22	BACM10N2EUS	. MARKER-ALUMINUM FOIL, 69-43635-1.	0150	8
R 24	BAC27CCH30	. MARKER-ALUMINUM FOIL, RETRACTABLE SIDE GUIDE.	0150	10
R 25A	BAC27CCH30	. MARKER-ALUMINUM FOIL, RETRACTABLE SIDE GUIDE.	0150	1
R 26	BAC27CCH30	. MARKER-ALUMINUM FOIL, RETRACTABLE SIDE GUIDE.	0150	1
R 27	BAC27CCH24	. MARKER-ALUMINUM FOIL, LOCK.	0150	5
R 28	BACM10L1ECC	. MARKER-ALUMINUM FOIL, ROLLER TRAY	0150	11
R 31	BACM10P23AJ	. MARKER-ALUMINUM FOIL, PALLETS AFT STOP.	0150	4
R 32	BAC27CCH37	. MARKER-ALUMINUM FOIL, GUIDE RAIL.	0150	1
R 33	BACM10L1ECD	. MARKER-ALUMINUM FOIL, ROLLER TRAY	0150	4
R 34	BACM10P23AK	. MARKER-ALUMINUM FOIL, PALLETS AFT STOP.	0150	4
R 35	BACM10P23AE	. MARKER-ALUMINUM FOIL, 6 PALLETS ROLLER TRAY	0150	1
R 36	BACM10P23AF	. MARKER-ALUMINUM FOIL, 6 PALLETS ROLLER TRAY	0150	2
R 37	BACM10P23AL	. MARKER-ALUMINUM FOIL, PALLETS AFT STOP.	0150	4
R 38	BACM10L1ECL	. MARKER-ALUMINUM FOIL, ROLLER TRAY	0150	5
R 39	BACM10P23AM	. MARKER-ALUMINUM FOIL, PALLETS AFT STOP.	0150	4
R 40	BACM10L1ECF	. MARKER-ALUMINUM FOIL, ROLLER TRAY	0150	4
R 41	BACM10P23AN	. MARKER-ALUMINUM FOIL, PALLETS AFT STOP.	0150	4
R 42	BACM10P23AP	. MARKER-ALUMINUM FOIL, PALLETS AFT STOP.	0150	4
R 43	BACM10P23BF	. MARKER-ALUMINUM FOIL, 9 PALLETS ROLLER TRAY	0150	1
R 44	BACM10P23AR	. MARKER-ALUMINUM FOIL, PALLETS AFT STOP.	0150	4
R 45	BACM10P23AS	. MARKER-ALUMINUM FOIL, PALLETS AFT STOP.	0150	4
R 46	BACM10P23BE	. MARKER-ALUMINUM FOIL, 88 X 108 PALLET	0150	3
R 47	BACM10P23BC	RETRACTABLE AFT STOP . MARKER-ALUMINUM FOIL, 13 PALLETS AFT STOP	0150	4
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

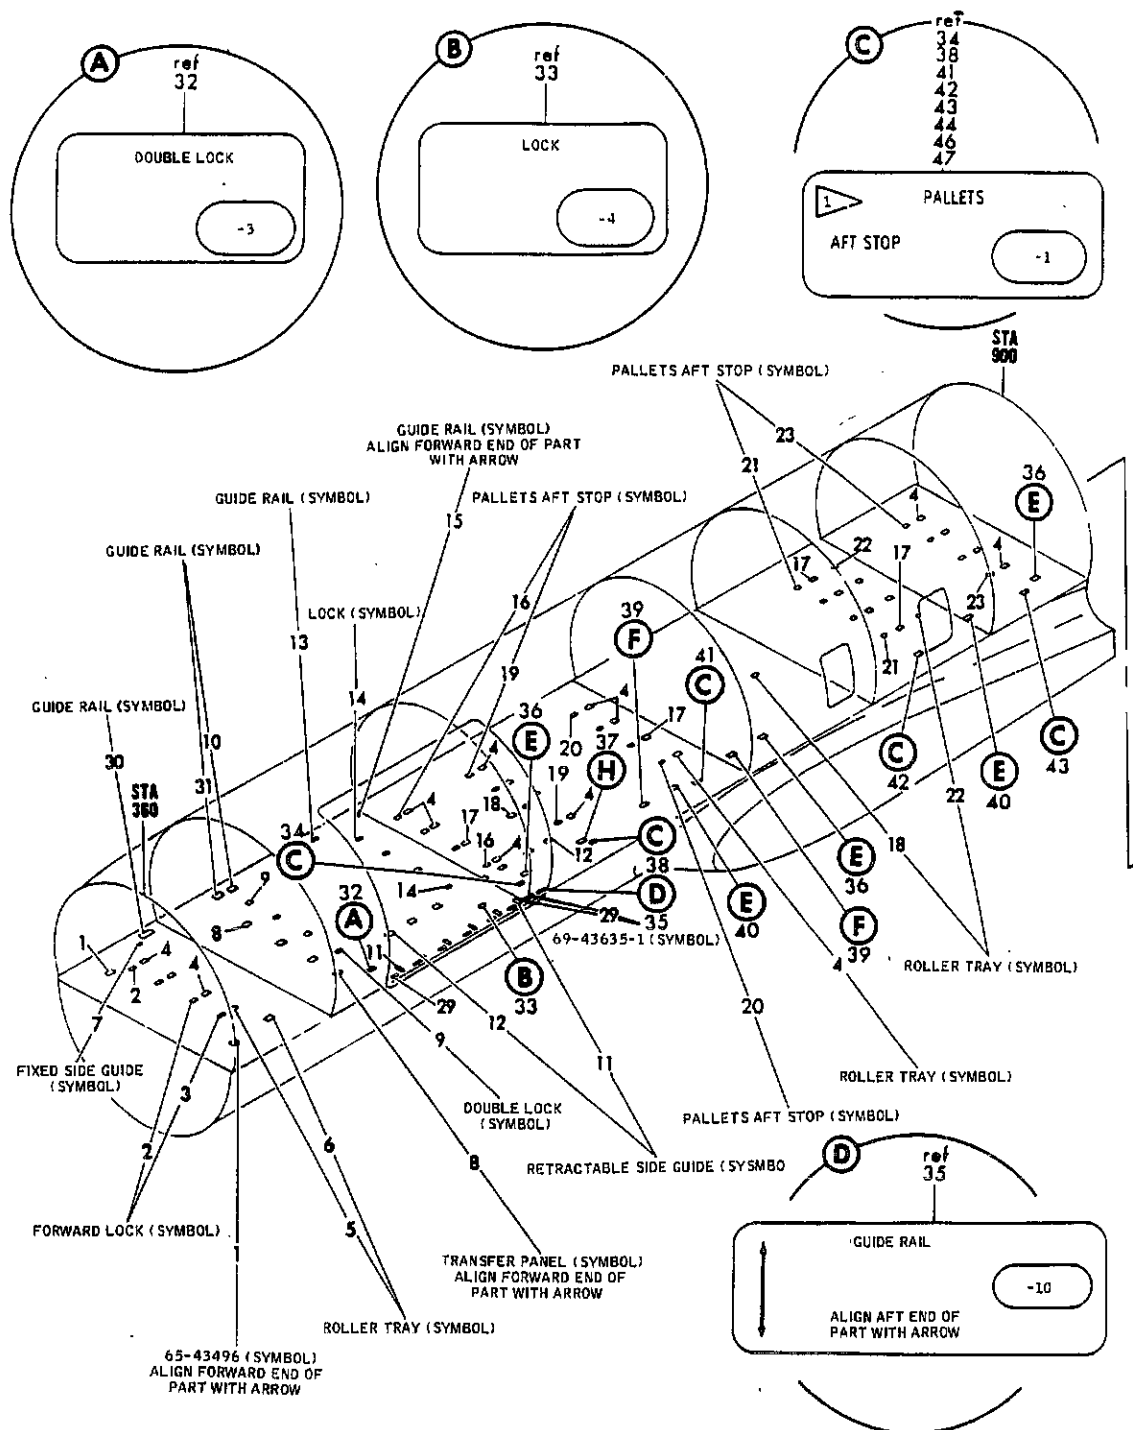 


FIGURE 104. MARKING INSTL, PALLETIZED SYSTEM FLOOR (SHEET 1)

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

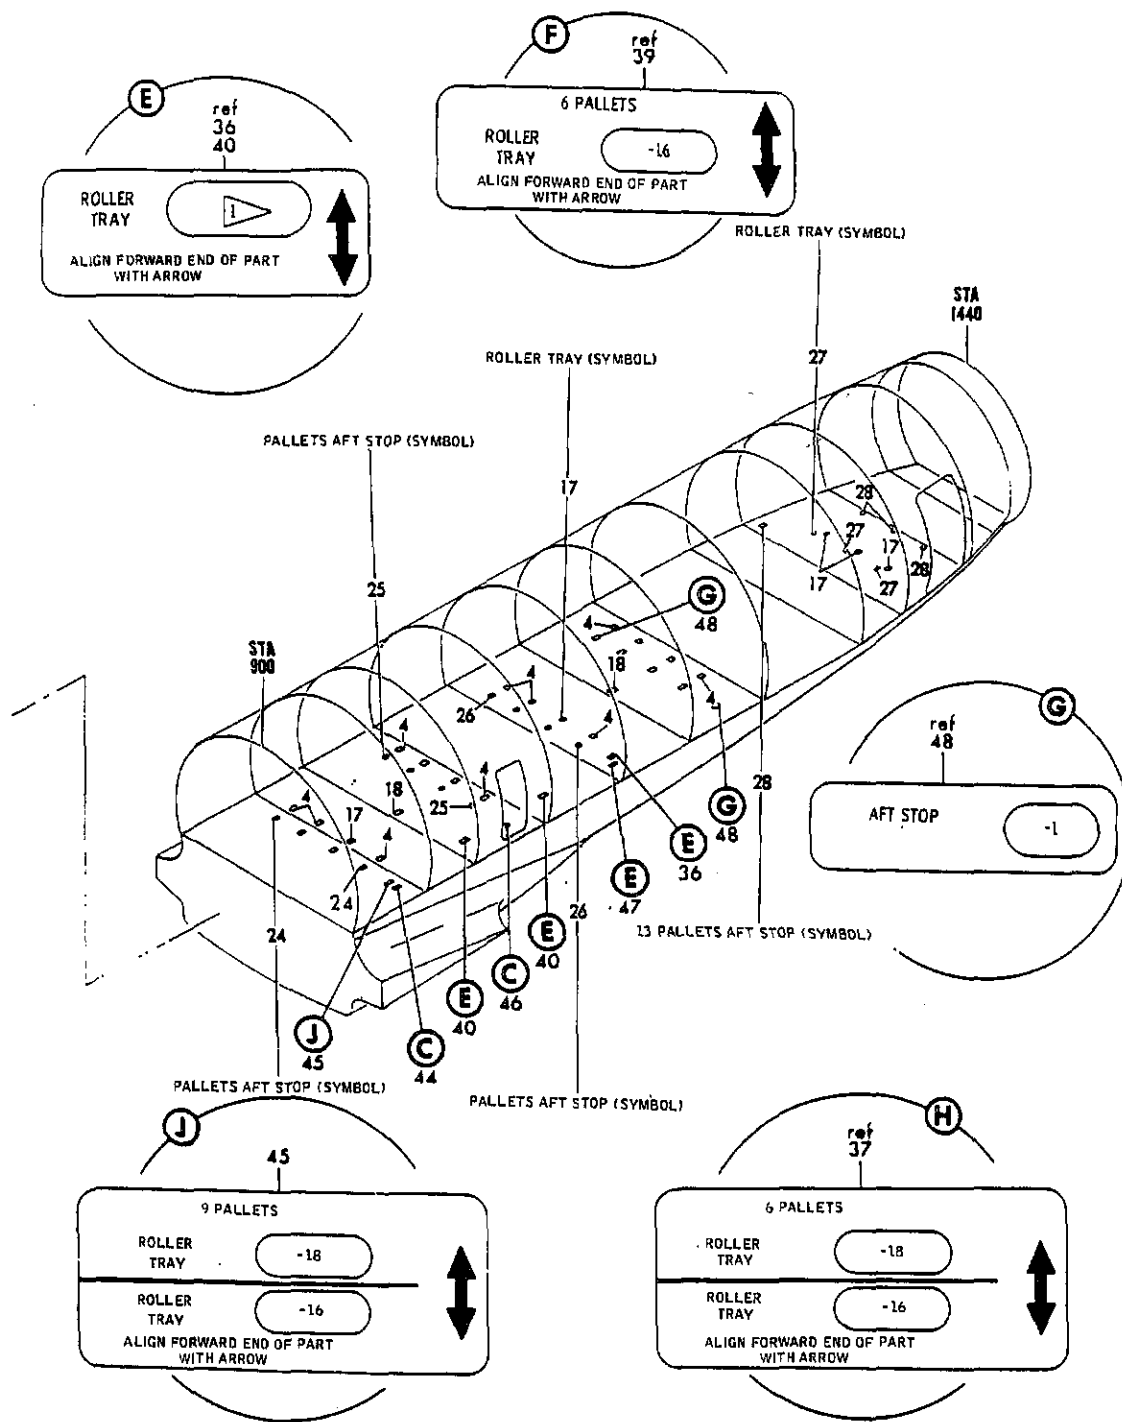 


FIGURE 104. MARKING INSTL, PALLETIZED SYSTEM FLOOR (SHEET 2)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	104	65-43663-14	MARKING INSTL, PALLETIZED SYSTEM FLOOR (DELETED BY. . . MOD 6-7200-3983)							0150	1
R											
R	1	BACM10L1EFC	. MARKER-ALUMINUM FOIL, 65-43496.							0150	2
R	2	BACM10L7DA	. MARKER-ALUMINUM FOIL, FORWARD LOCK.							0150	3
R	3	BACM10L7DB	. MARKER-ALUMINUM FOIL, FORWARD LOCK.							0150	1
R	4	BACM10L1ECH	. MARKER-ALUMINUM FOIL, ROLLER TRAY							0150	31
R	5	BACM10L1ECN	. MARKER-ALUMINUM FOIL, ROLLER TRAY							0150	1
R	6	BACM10L1EHC	. MARKER-ALUMINUM FOIL, ROLLER TRAY							0150	1
R	7	BACM10L1EHE	. MARKER-ALUMINUM FOIL, FIXED SIDE GUIDE.							0150	1
R	8	BACM10P9UC	. MARKER-ALUMINUM FOIL, ALIGN FORWARD END OF TRANSFER							0150	4
R			PANEL WITH ARROW								
R	9	BAC27CCH28	. MARKER-ALUMINUM FOIL, DOUBLE LOCK-3							0150	4
R	10	BACM10L1EGZ	. MARKER-ALUMINUM FOIL, GUIDE RAIL.							0150	1
R	11	BAC27CCH31	. MARKER-ALUMINUM FOIL, RETRACTABLE SIDE GUIDE-7.							0150	6
R	12	BAC27CCH30	. MARKER-ALUMINUM FOIL, RETRACTABLE SIDE GUIDE-1.							0150	7
R	13	BACM10L1EHA	. MARKER-ALUMINUM FOIL, GUIDE RAIL.							0150	1
R	14	BAC27CCH24	. MARKER-ALUMINUM FOIL, LOCK-4.							0150	4
R	15	BAC27CCH29	. MARKER-ALUMINUM FOIL, GUIDE RAIL-9.							0150	1
R	16	BACM10P23AJ	. MARKER-ALUMINUM FOIL, 3 PALLETS AFT STOP.							0150	4
R	17	BACM10L1ECC	. MARKER-ALUMINUM FOIL, ROLLER TRAY							0150	11
R	18	BACM10L1ECD	. MARKER-ALUMINUM FOIL, ROLLER TRAY							0150	4
R	19	BACM10P23AK	. MARKER-ALUMINUM FOIL, 4 PALLETS AFT STOP.							0150	4
R	20	BACM10P23AL	. MARKER-ALUMINUM FOIL, 5 PALLETS AFT STOP.							0150	4
R	21	BACM10P23AM	. MARKER-ALUMINUM FOIL, 6 PALLETS AFT STOP.							0150	4
R	22	BACM10L1ECF	. MARKER-ALUMINUM FOIL, ROLLER TRAY							0150	4
R	23	BACM10P23AN	. MARKER-ALUMINUM FOIL, 7 PALLETS AFT STOP.							0150	4
R	24	BACM10P23AP	. MARKER-ALUMINUM FOIL, 8 PALLETS AFT STOP.							0150	4
R	25	BACM10P23AR	. MARKER-ALUMINUM FOIL, 9 PALLETS AFT STOP.							0150	4
R	26	BACM10P23AS	. MARKER-ALUMINUM FOIL, 10 PALLETS AFT STOP.							0150	4
R	27	BACM10L1ECR	. MARKER-ALUMINUM FOIL, ROLLER TRAY							0150	3
R	28	BACM10P23BC	. MARKER-ALUMINUM FOIL, 13 PALLETS AFT STOP.							0150	4
R	29	BACM10N2EUS	. MARKER-ALUMINUM FOIL, 69-43635-1.							0150	8
R	31	BACM10L1EGH	. MARKER-ALUMINUM FOIL, GUIDE RAIL.							0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

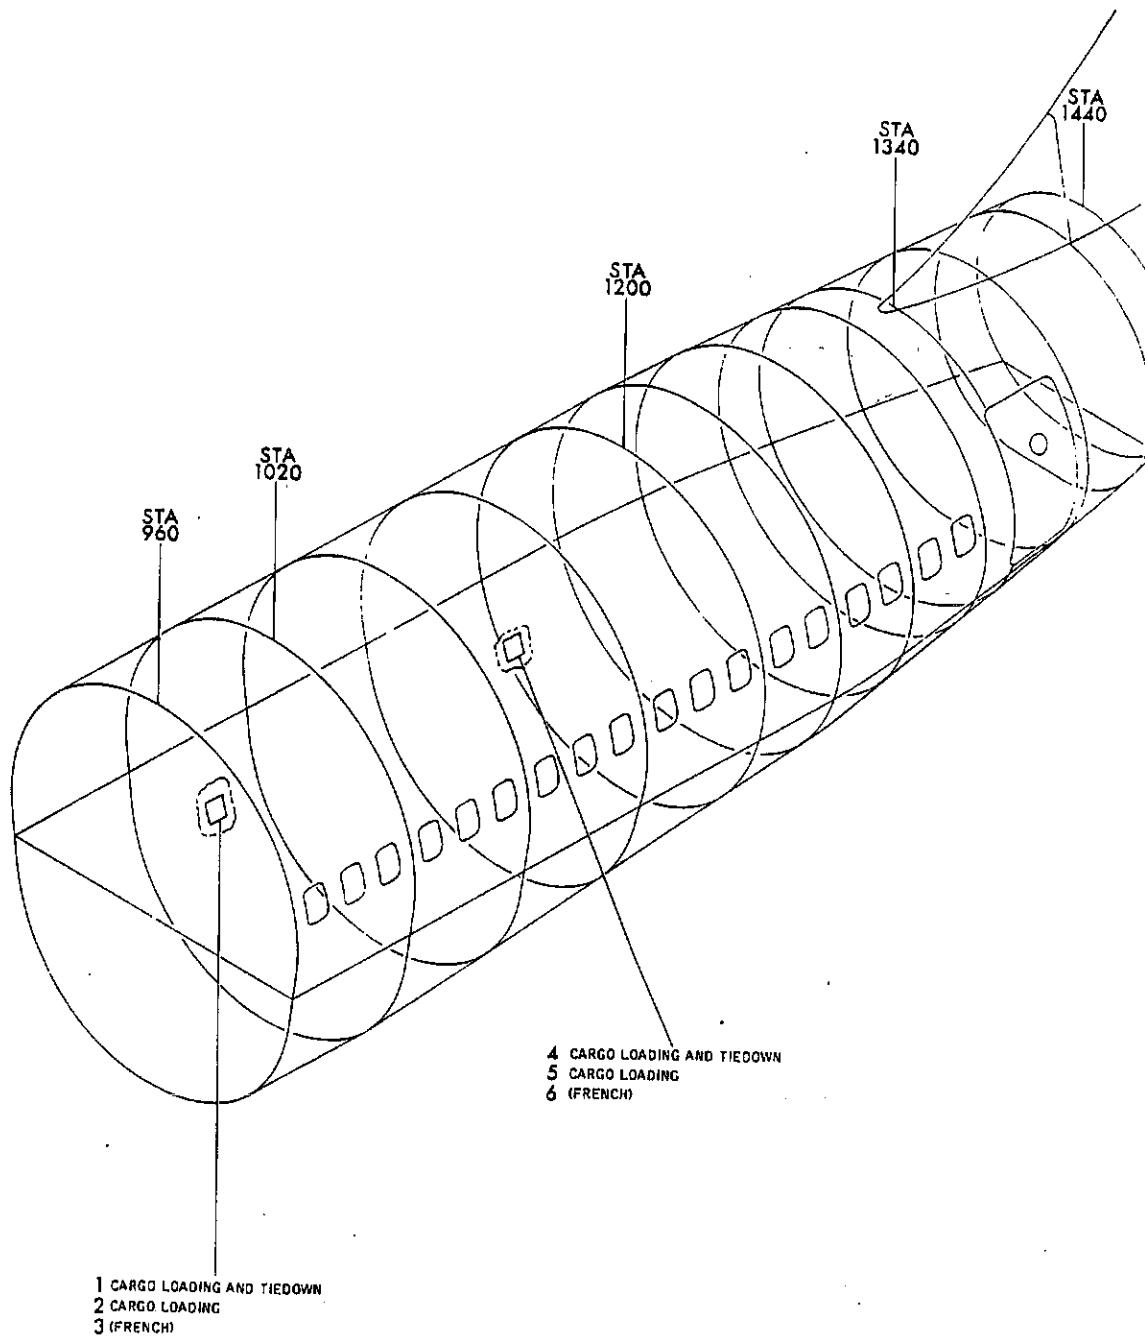 


FIGURE 1068. MARKING INSTL, SECTION 57 AFT CARGO COMPARTMENT

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
106B	50-10323	MARKING INSTL, SECTION 57 AFT CARGO COMPARTMENT (SEE. . 25-1, FIG. 4, ITEM 1)								RF
R	2	BACM10C34CL	.	MARKER, ALUMINUM FOIL	.	.	.	.	0150	1
R	2	BAC27CCH69	.	MARKER, ALUMINUM FOIL	.	.	.	.	5199	1
R	5	BACM10C34CL	.	MARKER, ALUMINUM FOIL	.	.	.	.	0150	1
R	5	BAC27CCH69	.	MARKER, ALUMINUM FOIL	.	.	.	.	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

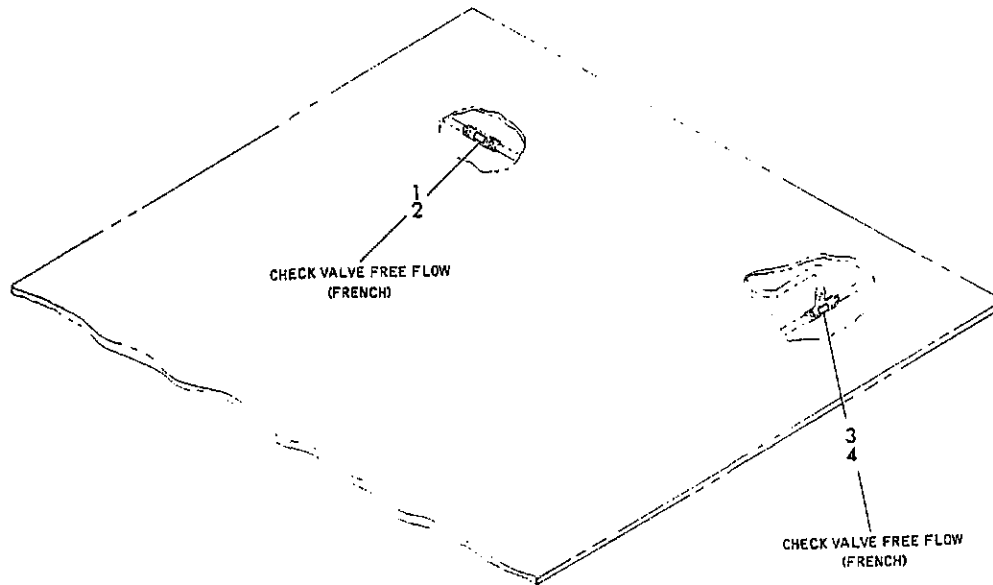 
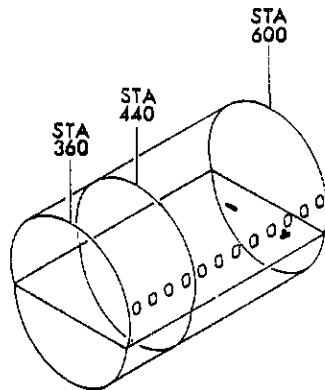 


FIGURE 107. HYDRAULIC INSTL, SECTION 43 (STATION 320 TO 620) (REQUIRED PLACARDS ONLY)

707

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
107	50-6847	1 2 3 4 5 6 7 HYDRAULIC INSTL, SECTION 43 (STATION 320 TO 620). . . . (REQUIRED PLACARDS ONLY) (FOR ADDITIONAL DETAILS SEE FIG. 108, 109, 116, 117, 119, 120 AND 122) (SEE 29-4, FIG. 1, ITEM 38 AND 29-4, FIG. 2, ITEM 23) . METAL CAL, CHECK VALVE FREE FLOW. FOR REFERENCE TO OTHER HYDRAULIC DETAILS, SEE NHA . .		RF
1	BACM10V21-2JG			1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/90

11-02-107

DETAILED PARTS LIST
11-02-107
PAGE 1

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

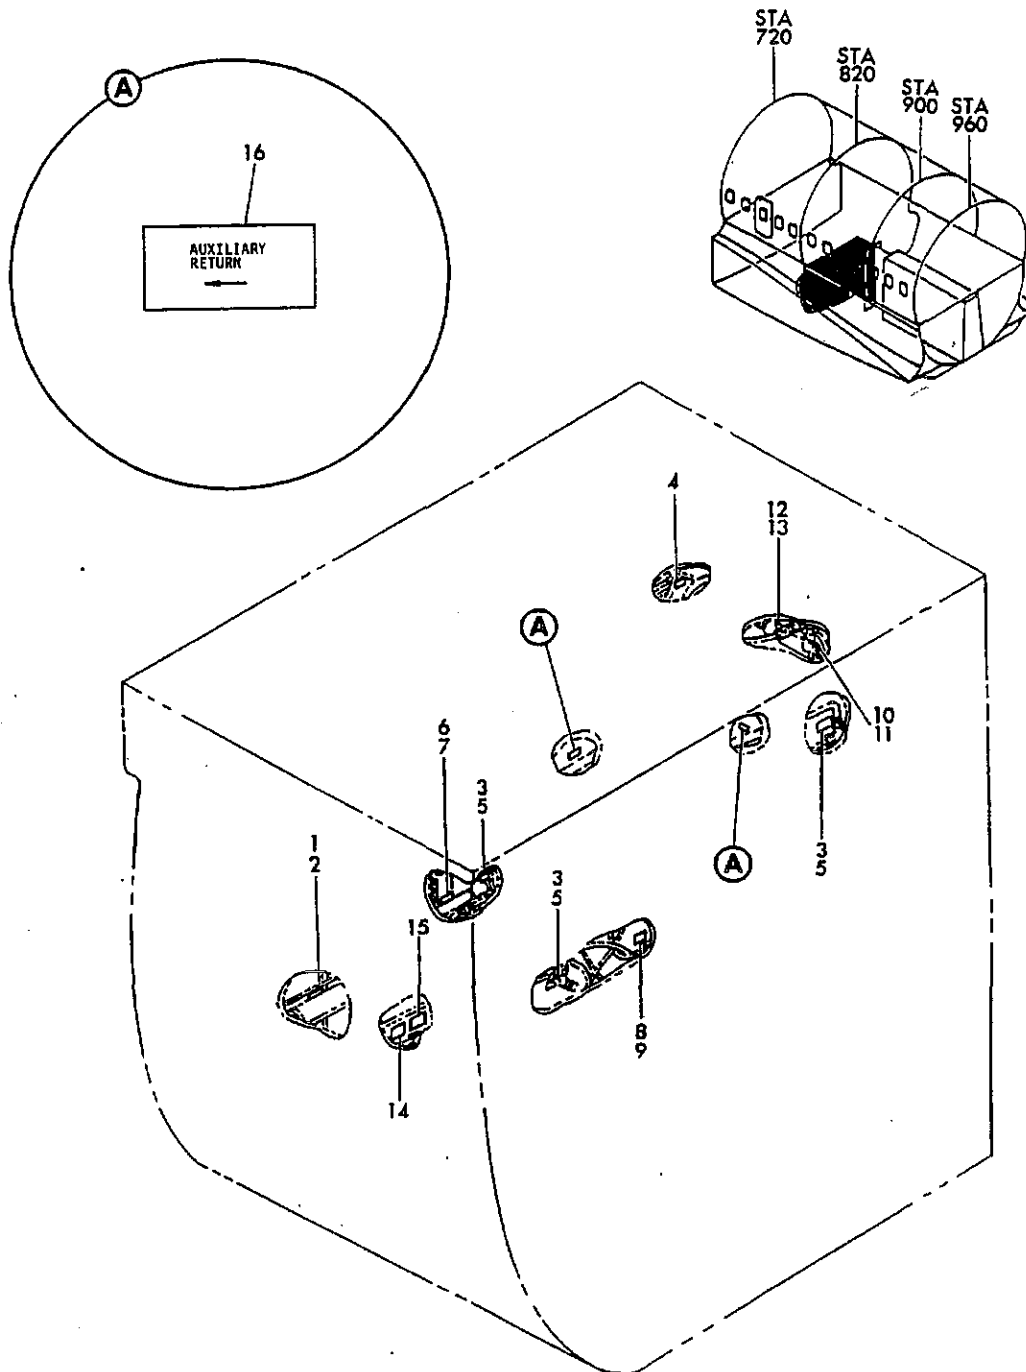 


FIGURE 109. HYDRAULIC INSTL, SECT 43 (STA 820 TO 840 LH)(REQUIRED PLACARDS ONLY)

DETAILED PARTS LIST
11-02-109
PAGE 0

11-02-109

NOV 21/94

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
109	50-6B47	HYDRAULIC INSTL, SECTION 43 (STATION 820 TO 840 LH) . . (REQUIRED PLACARDS ONLY) (FOR ADDITIONAL DETAILS SEE FIG. 107, 108, 116, 117, 119, 120 AND 122) (SEE 53-1, FIG. 2, ITEM 12)								RF
1	BACM10V21-2AGU	. MARKER-ALUMINUM FOIL, RELIEF VALVE RET PRESS)								1
3	BACM10V21-2JH	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW).								3
8	BACM10V21-2JG	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW).								1
10	BACM10V32-2FC	. MARKER-ALUMINUM FOIL, CAUTION INSTRUCTIONS)								1
12	BACM10V2APU	. MARKER-ALUMINUM FOIL, OUT IN)								1
13	BACM10L16SH	. MARKER-ALUMINUM FOIL, (FRENCH))								1
		. FOR REFERENCE TO OTHER HYDRAULIC DETAILS, SEE NHA . .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

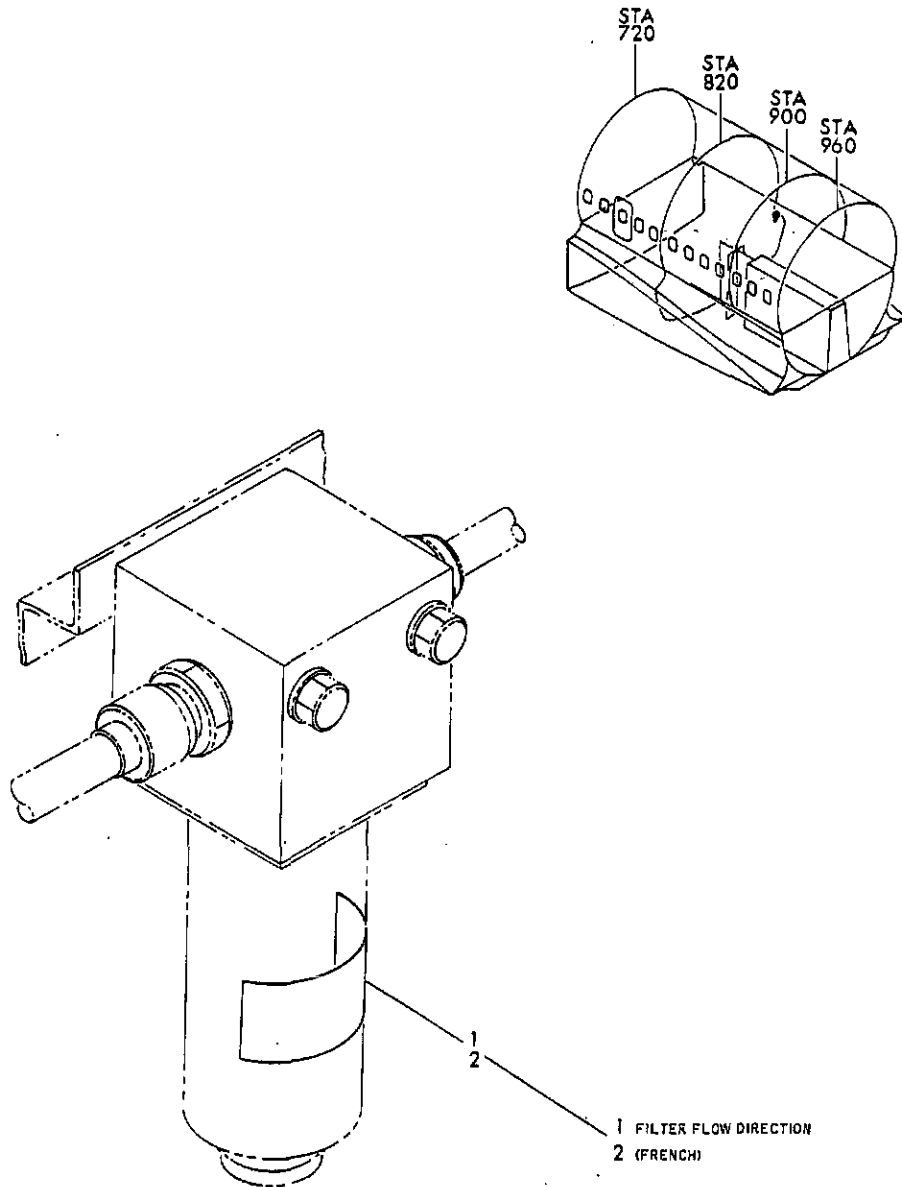 


FIGURE 110. FILTER INSTL, AUXILIARY PRESSURE HYDRAULIC (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
110	69-11471	FILTER INSTL, AUXILIARY PRESSURE HYDRAULIC (REQUIRED. . PLACARDS ONLY) (SEE 29-2, FIG. 22, ITEM 147, 29-2, FIG. 22A, ITEM 184, 29-2, FIG. 22B, ITEM 176, 29-2, FIG. 22D, ITEM 171, 29-2, FIG. 23, ITEM 120, 29-2, FIG. 24, ITEM 131, 29-2, FIG. 25, ITEM 139, 29-2, FIG. 26, ITEM 141 AND 29-2, FIG. 27, ITEM 150) . MARKER-ALUMINUM FOIL, FILTER FLOW DIRECTION FOR REFERENCE TO OTHER FILTER DETAILS, SEE NHA. . . .								RF
1	BACM10F11-3AG									1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

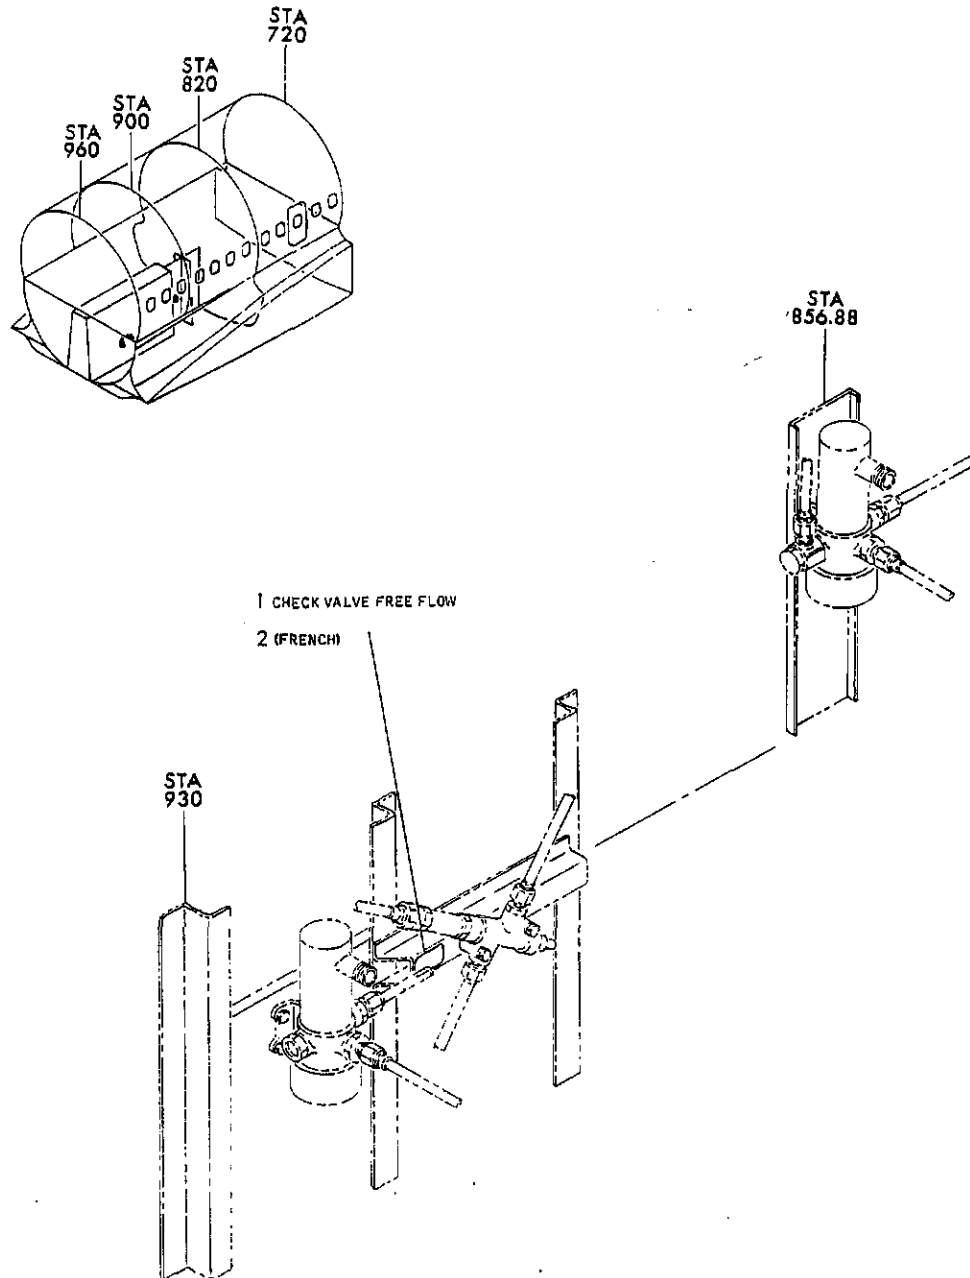 


FIGURE 112, VALVE INSTL, MOTOR OPERATED HYDRAULIC (REQUIRED PLACARDS ONLY)

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
112	65-23419-1	VALVE INSTL, MOTOR OPERATED HYDRAULIC (REQUIRED								RF
		PLACARDS ONLY) (SEE 53-1, FIG. 2, ITEM 12A)								
1	BACM10V21-2JH	. APPLIQUE, CHECK VALVE FREE FLOW								1
		. FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

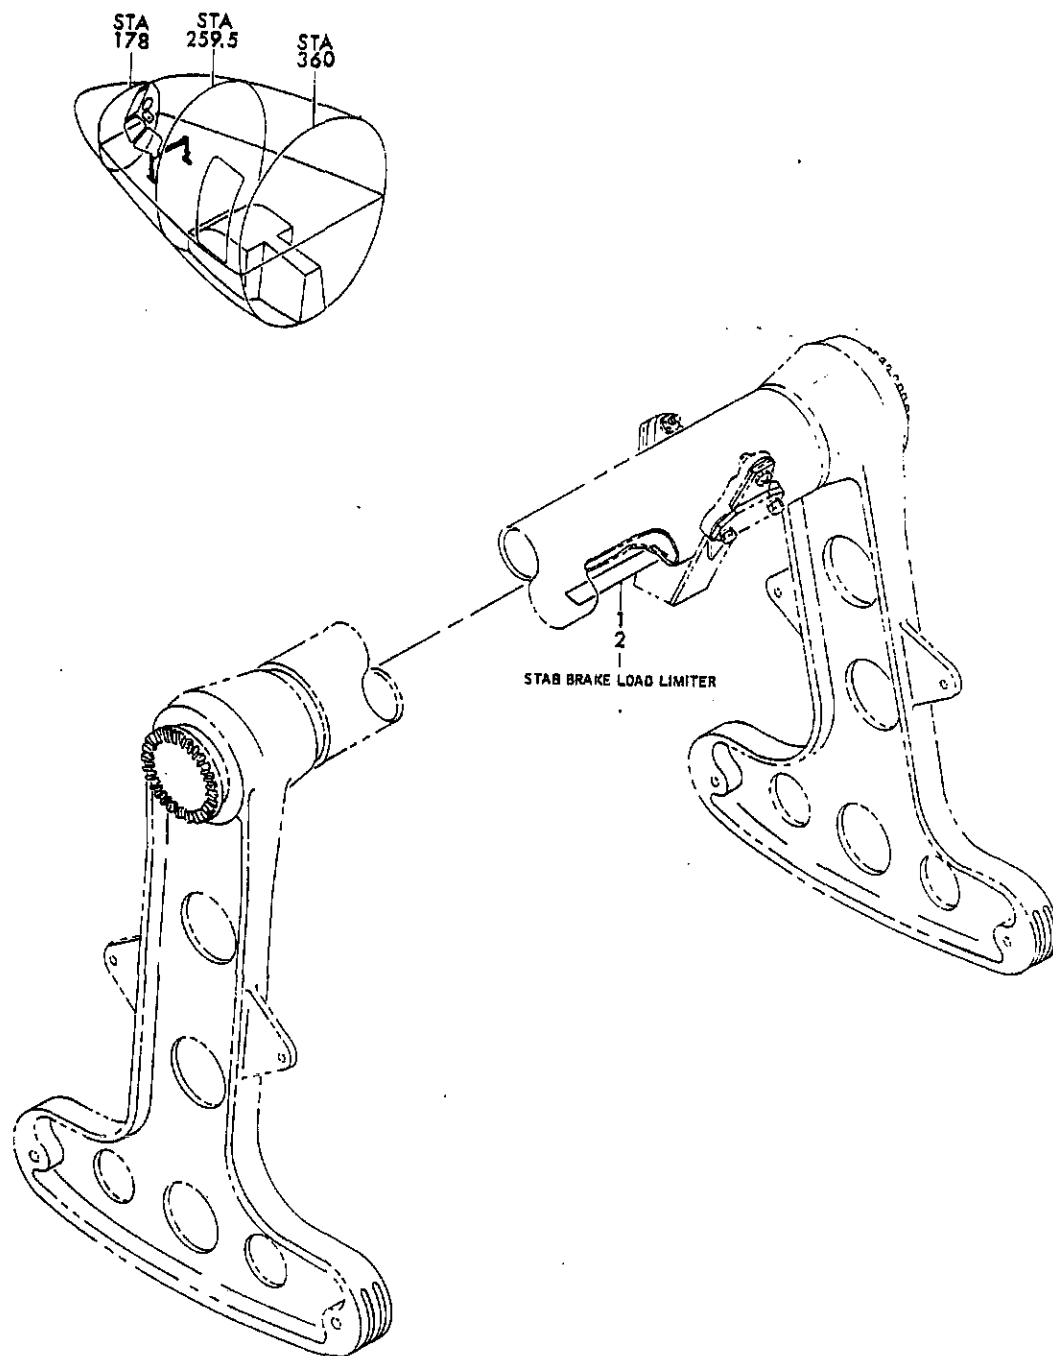 


FIGURE 115. QUADRANT ASSY, ELEVATOR CONTROL (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R R R R R	115	5-97801-3004							5199	RF
	1	BACM10L8X							5199	1
		QUADRANT ASSY, ELEVATOR CONTROL (REQUIRED PLACARDS. . . ONLY) (SEE 27-1, FIG. 2, ITEM 5)							5199	
		. MARKER-ALUMINUM FOIL, STAB BRAKE LOAD LIMITER . . . INSTRUCTIONS							5199	
		. FOR REFERENCE TO OTHER QUADRANT DETAILS, SEE NHA. . .							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

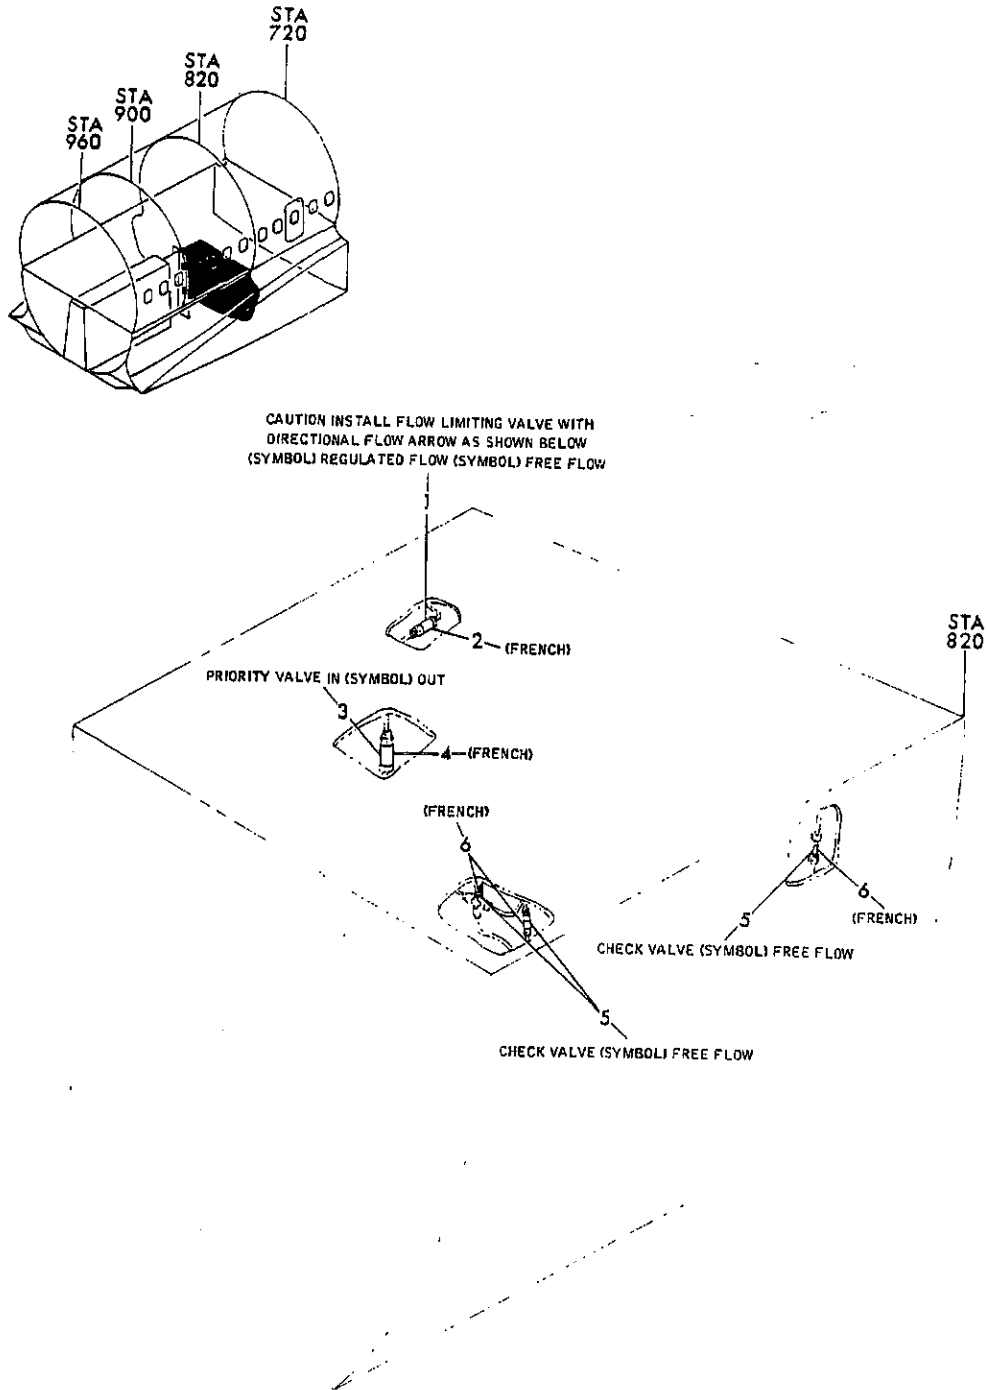 


FIGURE 117. HYDRAULIC INSTL. SECTION 43 (STATION 820 TO 840) (RH) (REQUIRED PLACARDS ONLY)

DETAILED PARTS LIST
11-02-117
PAGE 2

11-02-117

NOV 21/90

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
117	50-6847		HYDRAULIC INSTL, SECTION 43 (STATION 820 TO 840) (RH) . (REQUIRED PLACARDS ONLY) (FOR ADDITIONAL DETAILS SEE FIG. 107, 108, 109, 116, 119, 120 AND 122) (SEE 53-1, FIG. 2, ITEM 12)		RF
1	BACM10V32-2RJ		. METAL-CAL, CAUTION INSTRUCTIONS		1
3	BACM10V2APT		. METAL-CAL, PRIORITY IN OUT.		1
5	BACM10V21-2JG		. METAL-CAL, CHECK VALVE FREE FLOW.		3
			. FOR REFERENCE TO OTHER HYDRAULIC DETAILS, SEE NHA . .		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					


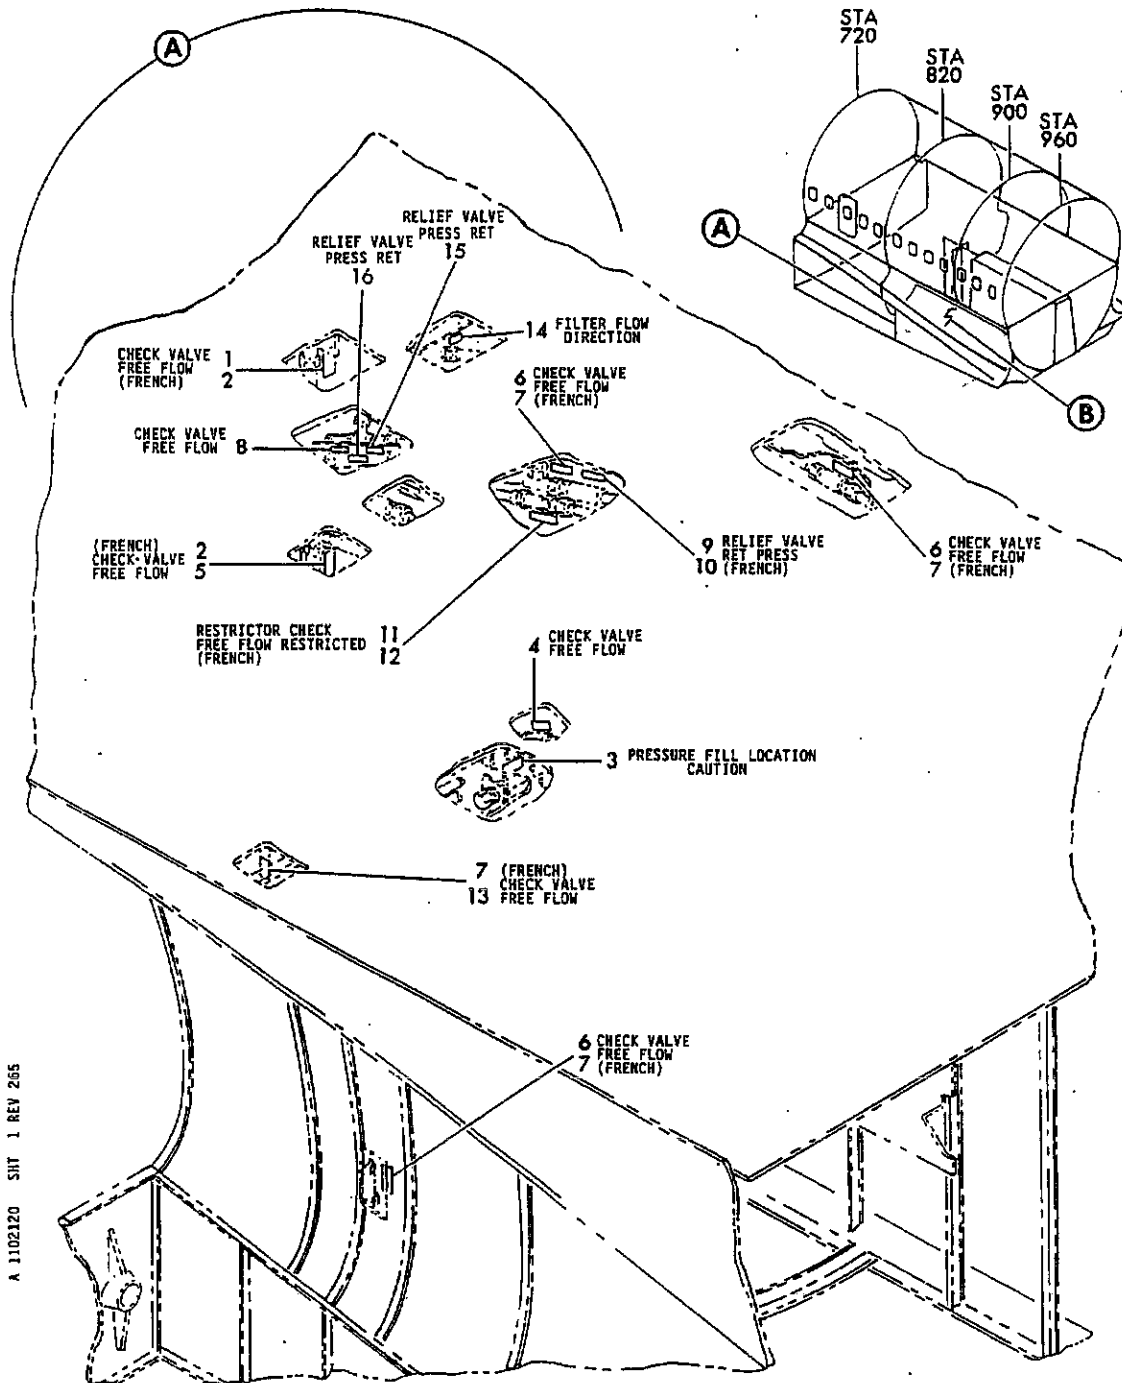 


FIGURE 120. HYDRAULIC INSTL, SECT 43 (STA 840 TO 960 LH) (REQUIRED PLACARDS ONLY) (SHEET 1)

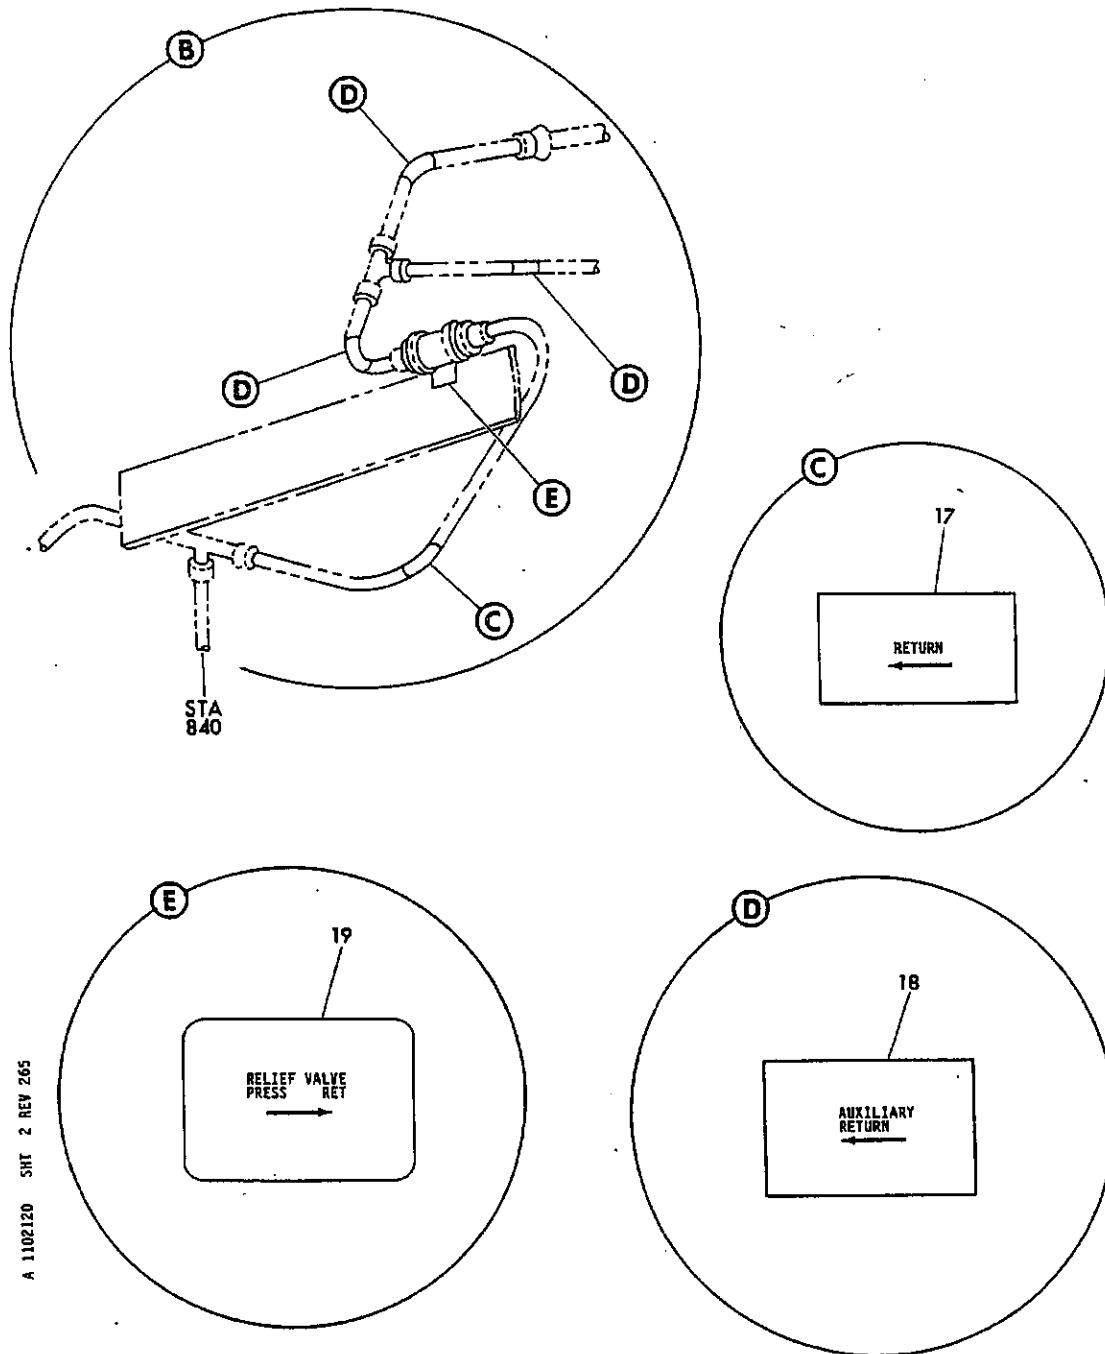 

A 1102120 SHT 2 REV 265

FIGURE 120. HYDRAULIC INSTL, SECT 43 (STA 840 TO 960 LH)(REQUIRED PLACARDS ONLY) (SHEET 2)

NOV 21/94

11-02-120

DETAILED PARTS LIST
11-02-120
PAGE 1

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
120	50-6847	HYDRAULIC INSTL, SECTION 43 (STATION 840 TO 960 LH) . . (REQUIRED PLACARDS ONLY) (FOR ADDITIONAL DETAILS SEE FIG. 107, 108, 109, 116, 117, 119 AND 122) (SEE 53-1, FIG. 2, ITEM 12)								RF
1	BACM10V21-2JG	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW								1
3	BACM10P6HJ	. MARKER-ALUMINUM FOIL, PRESSURE FILL LOCATION CAUTION								1
4	BACM10V21-2JH	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW								1
5	BACM10V21-2JG	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW								2
6	BACM10V21-2JH	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW								3
8	BACM10V21-2JH	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW								1
9	BACM10V21-2AGT	. MARKER-ALUMINUM FOIL, RELIEF VALVE RET PRESS.								1
11	BACM10R21-22B	. MARKER-ALUMINUM FOIL, RESTRICTOR CHECK FREE FLOW. . . RESTRICTED								1
15	BACM10V21-2AGU	. MARKER-ALUMINUM FOIL, RELIEF VALVE PRESS RET.							5199	1
16	BACM10V21-2AGU	. MARKER-ALUMINUM FOIL, RELIEF VALVE PRESS RET. FOR REFERENCE TO OTHER HYDRAULIC DETAILS, SEE NHA . .								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

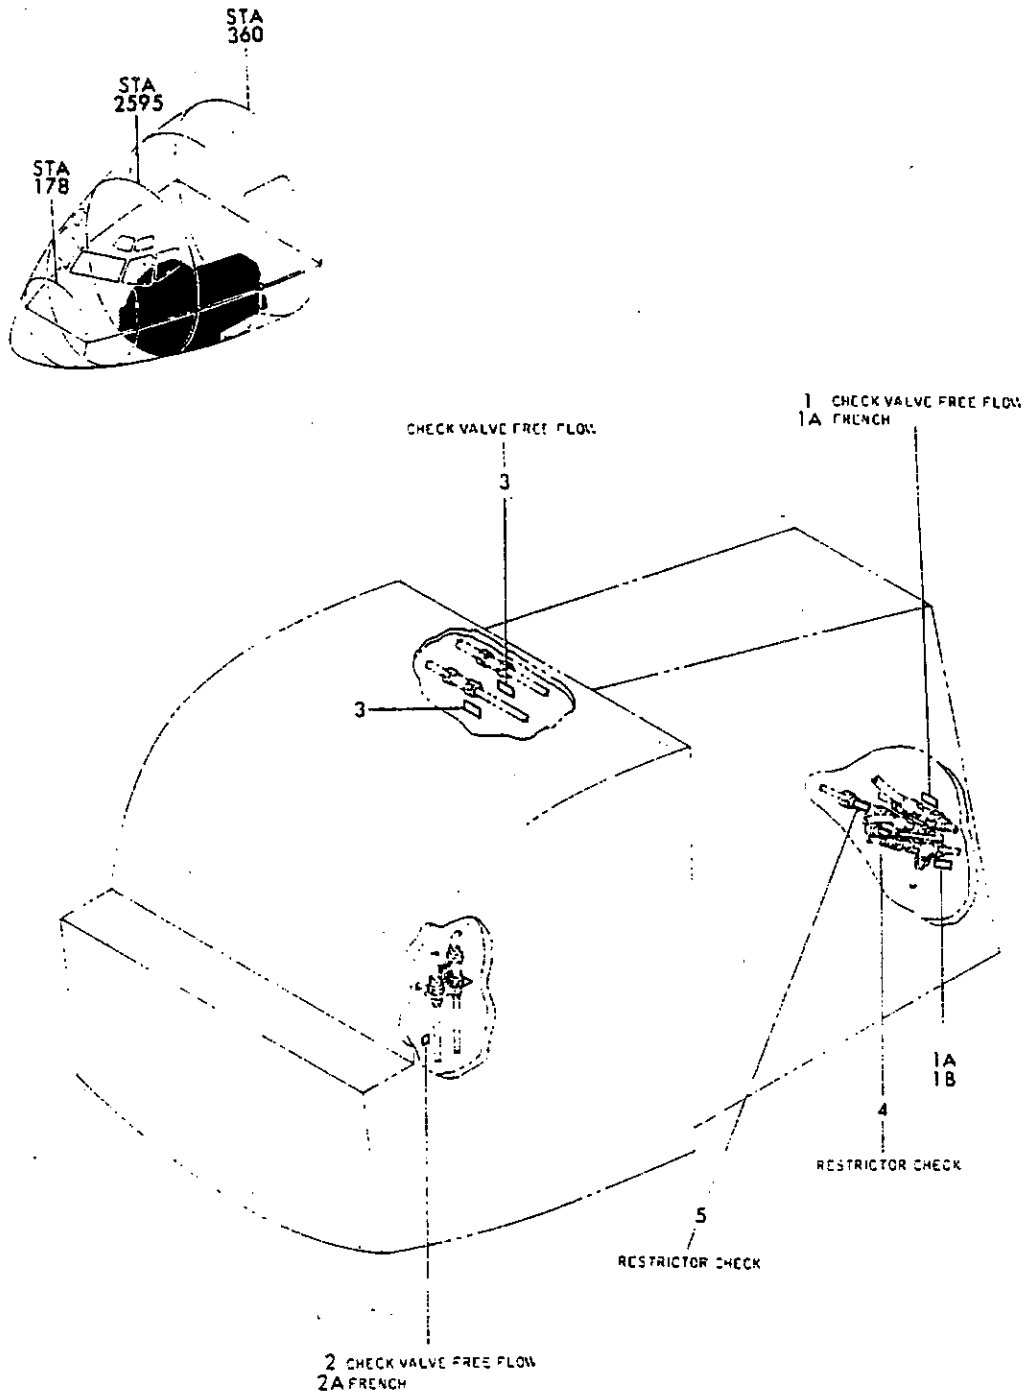 


FIGURE 12L HYDRAULIC INSTL. SECTION 41 (REQUIRED PLACARDS ONLY) (FORWARD AND LH WHEEL WELL AREA)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
121	50-6846	HYDRAULIC INSTL, SECTION 41 (REQUIRED PLACARDS ONLY). . (FORWARD AND LH WHEEL WELL AREA) (SEE 53-1, FIG. 1, ITEM 18)								RF
1	BACM10V21-2JH	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW								1
1B	BACM10V21-2JH	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW								1
2	BACM10V21-2JH	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW								1
3	BACM10V21-2JG	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW								2
4	BACM10R21-2ZC	. MARKER-ALUMINUM FOIL, RESTRICTOR CHECK.								1
5	BACM10R21-2ZC	. MARKER-ALUMINUM FOIL, RESTRICTOR CHECK.								1
		. FOR REFERENCE TO OTHER HYDRAULIC DETAILS, SEE NHA . .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

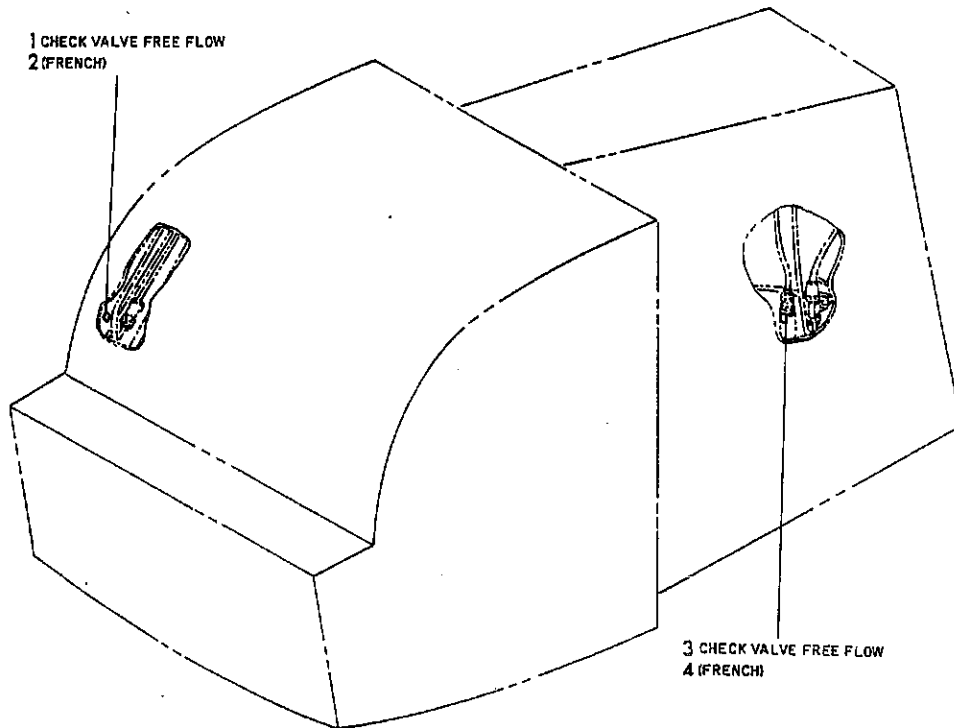 
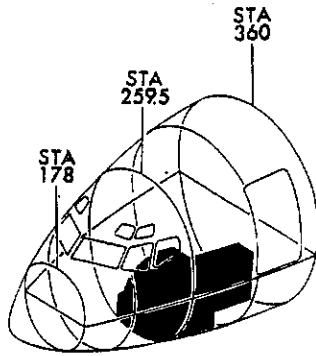 


FIGURE 121A. HYDRAULIC INSTL, SECTION 41 (REQUIRED PLACARDS ONLY) (RH WHEEL WELL AREA)

DETAILED PARTS LIST
11-02-121A
PAGE 2

11-02-121A

NOV 21/90

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
121A	50-6846	HYDRAULIC INSTL, SECTION 41 (REQUIRED PLACARDS ONLY). . (RH WHEEL WELL AREA) (SEE 53-1, FIG. 1, ITEM 18)								RF
1	BACM10V21-2JG	. METAL-CAL, CHECK VALVE FREE FLOW.								1
3	BACM10V21-2JG	. METAL-CAL, CHECK VALVE FREE FLOW. (OPTIONAL TO BACM10V21-2JH)								1
3	BACM10V21-2JH	. METAL-CAL, CHECK VALVE FREE FLOW. (OPTIONAL BACM10V21-2JG)								1
		. FOR REFERENCE TO OTHER HYDRAULIC DETAILS, SEE NHA . .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)


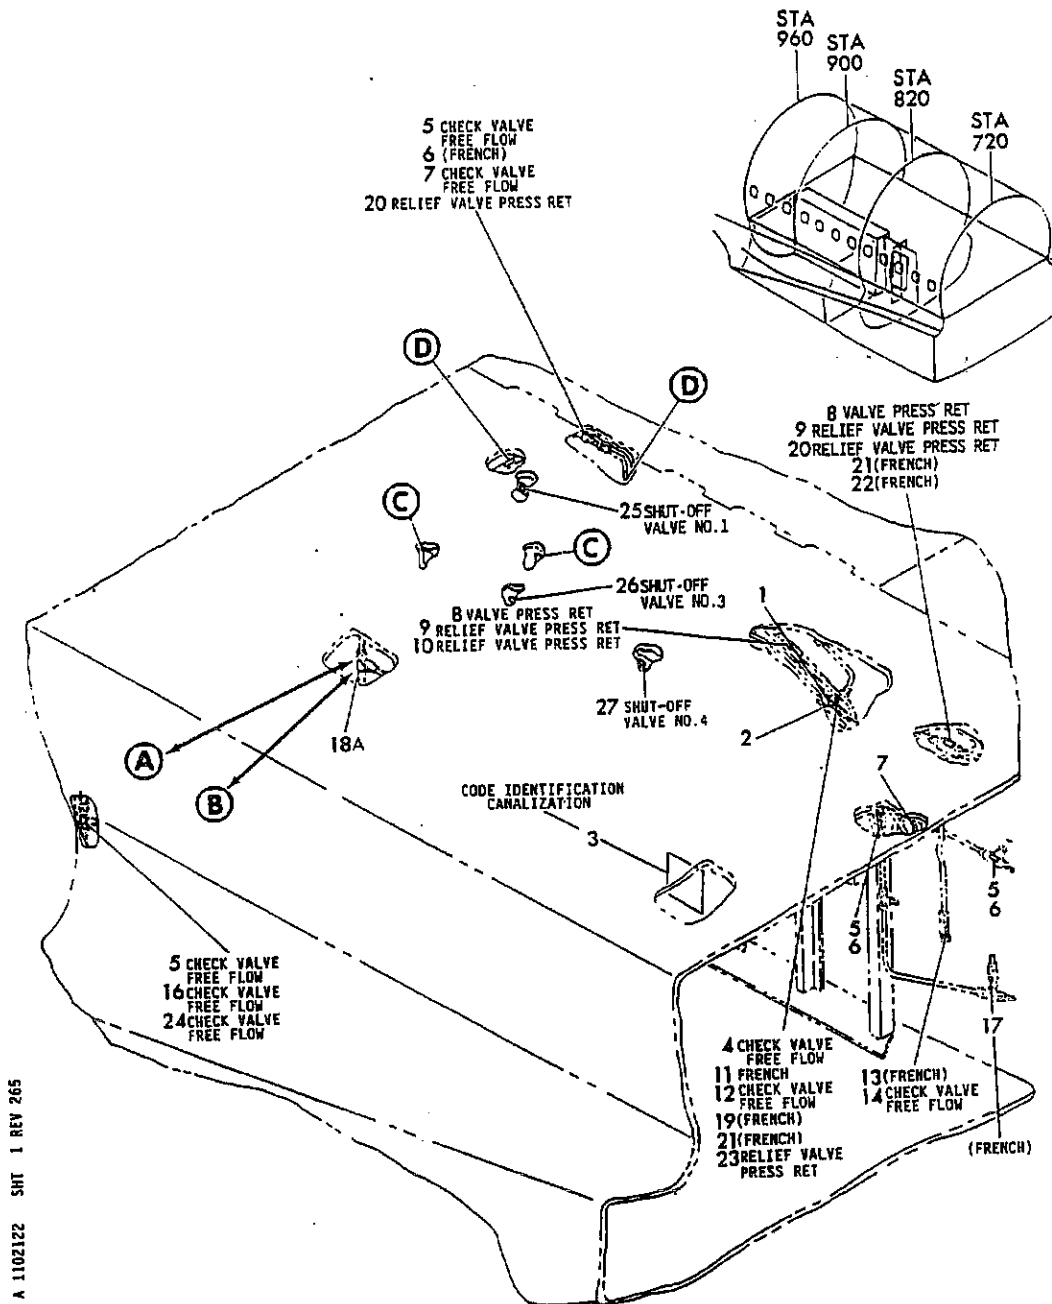 


FIGURE 122. HYDRAULIC INSTL, SECT 43 (STA 840 TO 960 RH) (REQUIRED PLACARDS ONLY) (SHEET 1)

DETAILED PARTS LIST
11-02-122
PAGE 0

11-02-122

 NOV 21/94

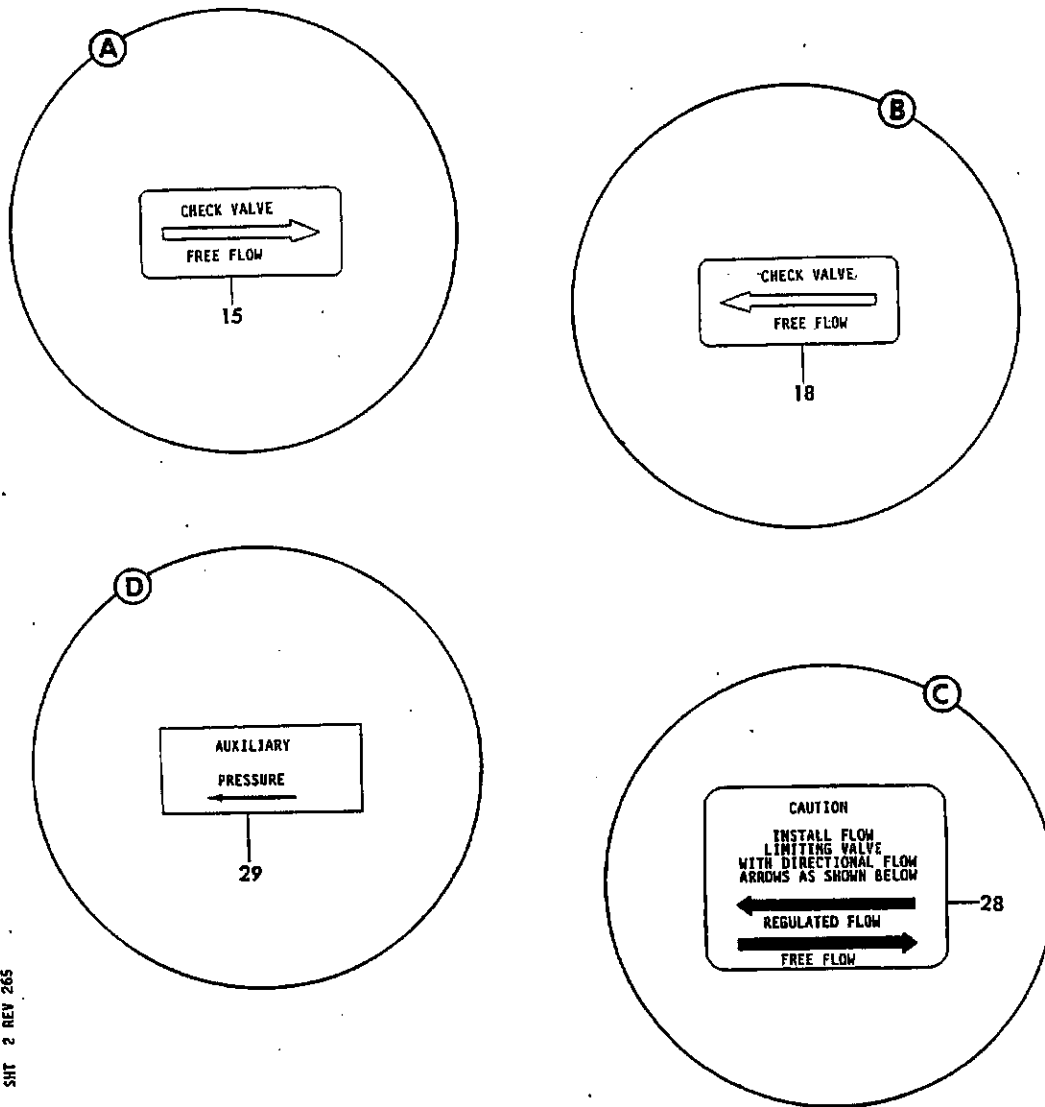

A 1102122 SHT 2 REV 265

FIGURE 122. HYDRAULIC INSTL. SECT 43 (STA 840 TO 960 RH)(REQUIRED PLACARDS ONLY) (SHEET 2)

707

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
122	50-6847	HYDRAULIC INSTL, SECTION 43 (STATION 840 TO 960 RH) . . (REQUIRED PLACARDS ONLY) (FOR ADDITIONAL DETAILS SEE FIG. 107, 108, 109, 116, 117, 119 AND 120) (SEE 53-1, FIG. 2, ITEM 12)								RF
1	BACM10R21-22C	. MARKER-ALUMINUM FOIL, RESTRICTOR CHECK FREE FLOW. . . RESTRICTED								1
5	BACM10V21-2JG	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW								4
12	BACM10V21-2JG	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW								1
18	BACM10V21-2JH	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW								1
20	BACM10V21-2AGU	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW FOR REFERENCE TO OTHER HYDRAULIC DETAILS, SEE NHA . .								2
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

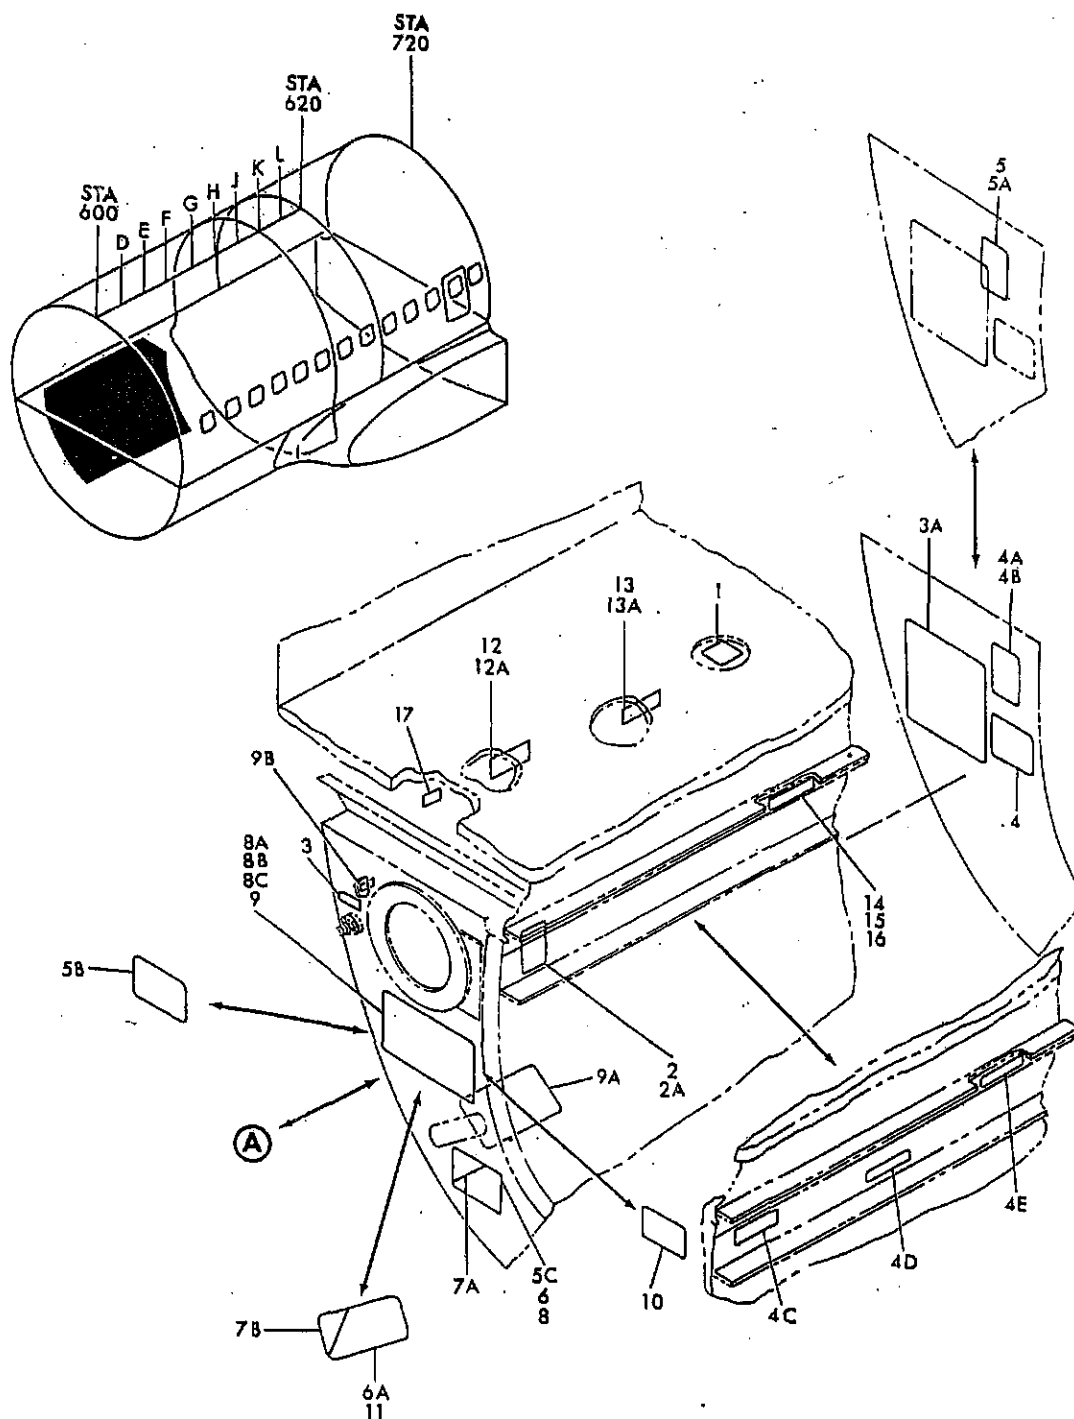 


FIGURE 124. EQUIPMENT INSTL, CREW OXYGEN (REQUIRED PLACARDS ONLY) (SHEET 1)

DETAILED PARTS LIST
11-02-124
PAGE 0

11-02-124

NOV 21/90

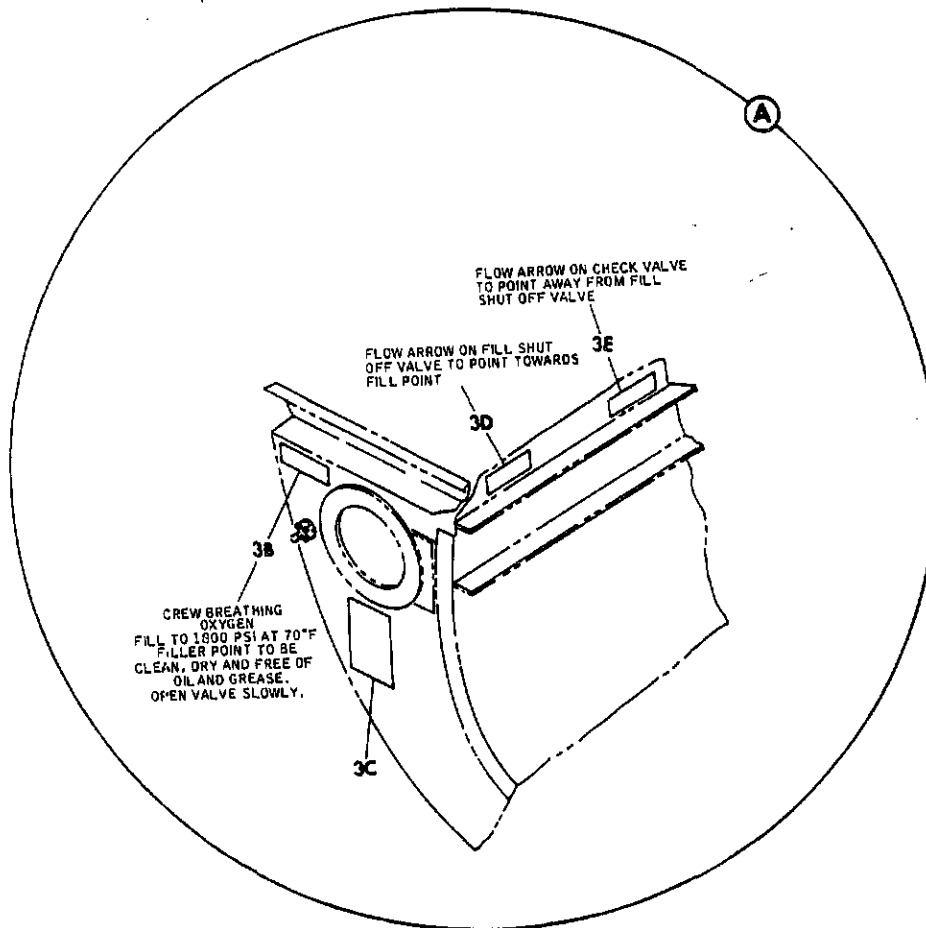 


FIGURE 124. EQUIPMENT INSTL, CREW OXYGEN (REQUIRED PLACARDS ONLY) (SHEET 2)

NOV 21/90

11-02-124

DETAILED PARTS LIST
11-02-124
PAGE 1

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
124		65-18981-4	EQUIPMENT INSTL, CREW OXYGEN (REQUIRED PLACARDS ONLY) . (SEE 35-1, FIG. 13A, ITEM 115, 35-1, FIG. 14, ITEM 89, 35-1, FIG. 14A, ITEM 61, 35-1, FIG. 14C, ITEM 108, 35-1, FIG. 14G, ITEM 153, 35-1, FIG. 14K, ITEM 91, 35-1, FIG. 14L, ITEM 102 AND 35-1, FIG. 14P, ITEM 111)								RF
	1	BACM10C4BP	. MARKER-ALUMINUM FOIL, OXYGEN ACCESS								1
	2	BACM9C5BS	. SCOTCH-CAL, TO REMOVE THERMAL COMPENSATORS CAUTION . .							5199	1
	3A	BAC27DPA4711	INSTRUCTIONS								1
	3A	BAC27CHY40	. DECAL, OXYGEN CYLINDER REPLACEMENT PROCEDURE								1
			WARNING (ADDED BY SB 3416)								
	3A	BAC27CHY40	. SCOTCH-CAL, OXYGEN CYLINDER REPLACEMENT PROCEDURE . .							0150	1
			WARNING (ADDED BY SB 2919 AND DELETED BY SB 3416)								
	3A	BAC27CHY40	. SCOTCH-CAL, OXYGEN CYLINDER REPLACEMENT PROCEDURE . .							5199	1
			WARNING (DELETED BY SB 3416)								
	4	BAC27CHY41	. SCOTCH-CAL, TEST CONNECTION CAUTION INSTRUCTIONS . .							0150	1
			(ADDED BY SB 2919)								
	4A	65-18981-12	. SUPPORT INSTL, (REQUIRED PLACARDS ONLY)								RF
		BACM9C5BS	. . SCOTCH-CAL, TO REMOVE THERMAL COMPENSATORS CAUTION							0150	1
			INSTRUCTIONS (ADDED BY SB 2919)								
	5	BACM9C5BS	. . SCOTCH-CAL, TO REMOVE THERMAL COMPENSATORS CAUTION								1
			INSTRUCTIONS								
	6A	65-18981-6	. ADAPTER INSTL, (REQUIRED PLACARDS ONLY)							0150	RF
		BACM10C65-4BN	. . MARKER-ALUMINUM FOIL, CYLINDER							0150	1
	7B	BACM10S43-35C	. . MARKER-ALUMINUM FOIL, SYMBOLS							0103	1
	9A	BAC27CHY44	. . DECAL, OXYGEN CYLINDER CHARGING PROCEDURE (ADDED BY SB 2924)							0450	1
	9B	BACM10V21-2JG	. . DECAL, CHECK VALVE FREE FLOW (ADDED BY SB 2924) . .							0450	1
		65-18981-15	. CONTROL UNIT INSTL, (REQUIRED PLACARDS ONLY)								RF
	12	BACM10L1DTP	. . MARKER-ALUMINUM FOIL, RESET OFF ON (USED ON								1
			65-18981-15, -24 AND -39)								
	13	BACM10L1DTP	. . MARKER-ALUMINUM FOIL, RESET OFF ON (USED ON								1
			65-18981-15, -25 AND -39)								
		65-18981-17	. FITTING INSTL, BLEED (REQUIRED PLACARDS ONLY)								RF
	15	BACM10W2ABM	. . MARKER-ALUMINUM FOIL, WARNING (INSTALL CAP TO SEAL FITTING ONLY DURING SYSTEM TESTING)								1
			. FOR REFERENCE TO OTHER EQUIPMENT DETAILS, SEE NHA . .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

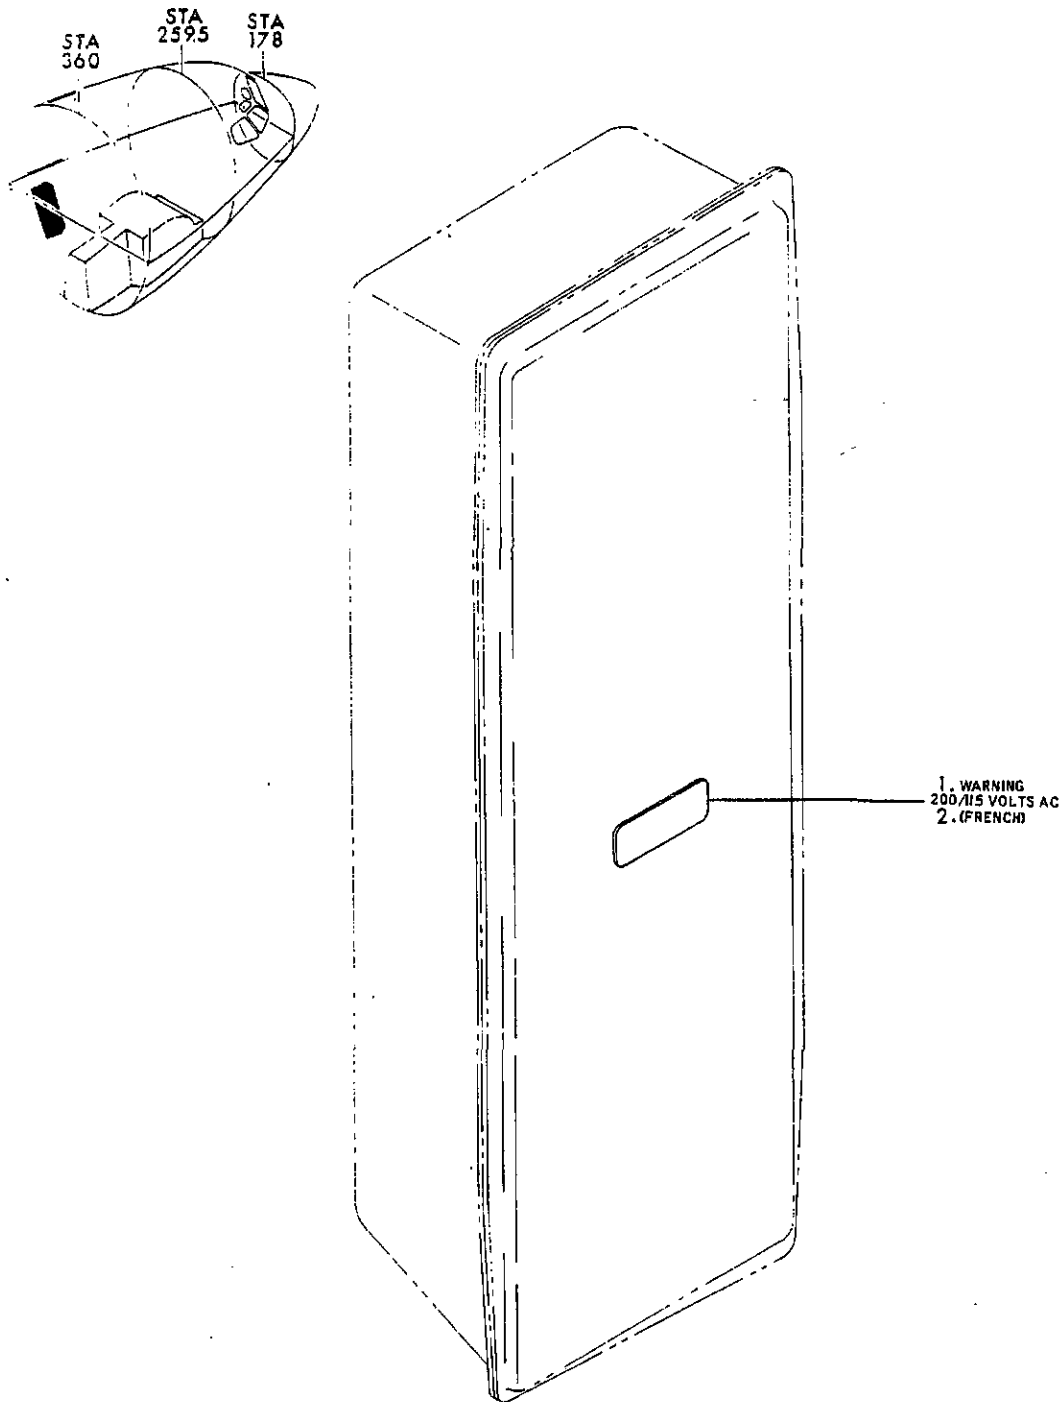 


FIGURE 126. SHIELD ASSY, STATION 336 J4 RELAY (REQUIRED PLACARDS ONLY)

707

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
126	50-8248-4	SHIELD ASSY, (REQUIRED PLACARDS ONLY) (SEE 24-6, FIG. .							0150	RF
1	BACM10W31-2UT	11B, ITEM 2)							0150	1
		. MARKER, WARNING 200/115 VOLTS AC ALUMINUM FOIL. . . .							0150	
		. FOR REFERENCE TO OTHER SHIELD DETAILS, SEE NHA. . . .							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

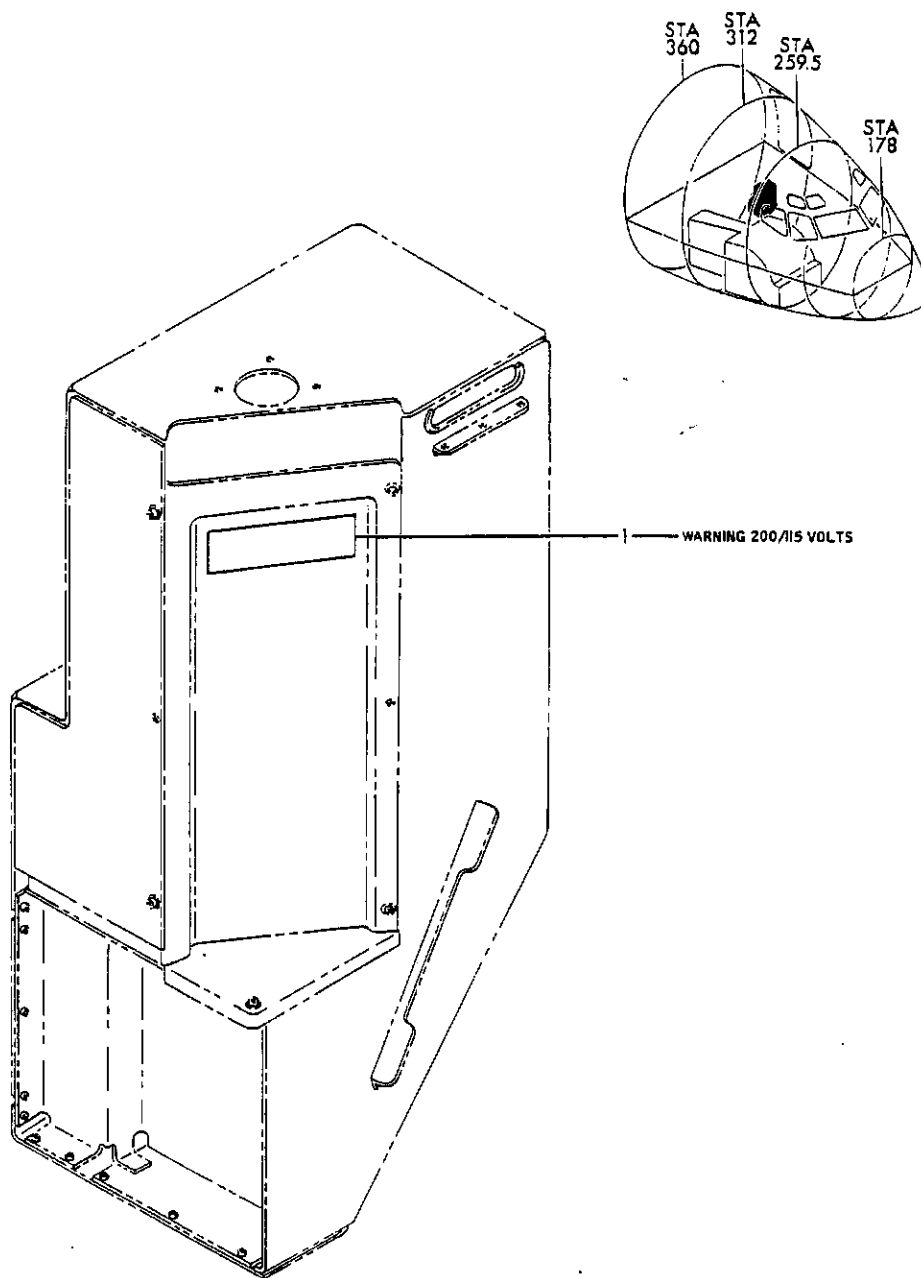 


FIGURE 127. SHIELD ASSY, STATION 355 J27 ELECTRICAL EQUIPMENT (REQUIRED PLACARDS ONLY)

707

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
127	65-58627-18	SHIELD ASSY, STATION 335 J27 ELECTRICAL EQUIPMENT							5199	RF
		(REQUIRED PLACARDS ONLY) (SEE 24-6, FIG. 11N, ITEM								
		4)								
1	BACM10W31-2UT	. MARKER-ALUMINUM FOIL, WARNING 200/115 VOLTS							5199	1
		. FOR REFERENCE TO OTHER SHIELD DETAILS, SEE NHA. . . .							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

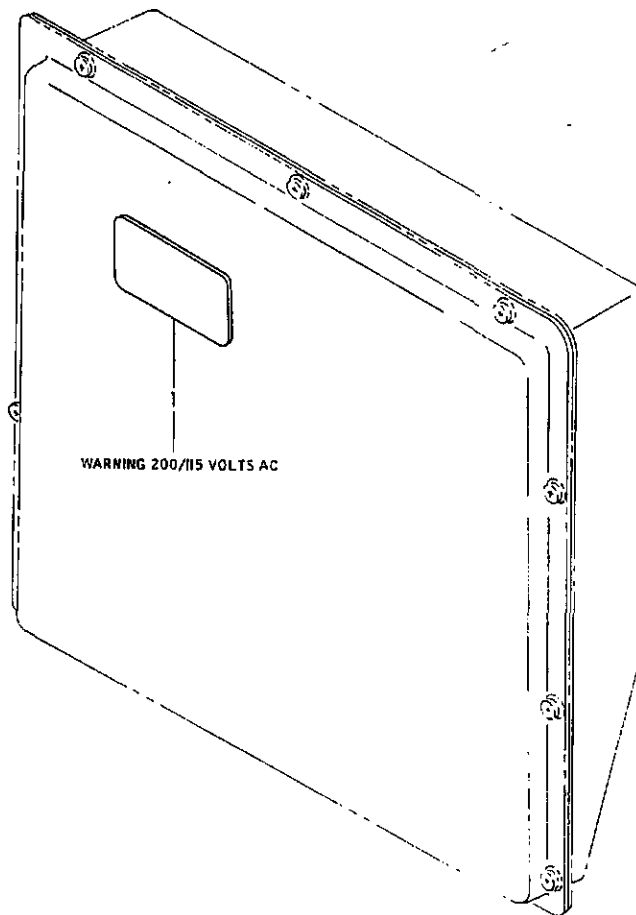 
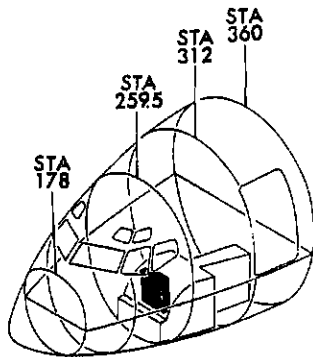 


FIGURE 128. SHIELD INSTL. J9 GROUND POWER (REQUIRED PLACARDS ONLY)

707

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R R R R	128	65-3356							0150	RF
		SHIELD INSTL, J9 GROUND POWER (REQUIRED PLACARDS ONLY) (SEE 24-3, FIG. 1A, ITEM 21, 24-3, FIG. 1B, ITEM 20 AND 24-3, FIG. 1C, ITEM 19)								
	1	BACM10W31-2UT							0150	1
		. MARKER-ALUMINUM FOIL, WARNING 200/115 VOLTS AC. FOR REFERENCE TO OTHER SHIELD DETAILS, SEE NHA. . . .							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

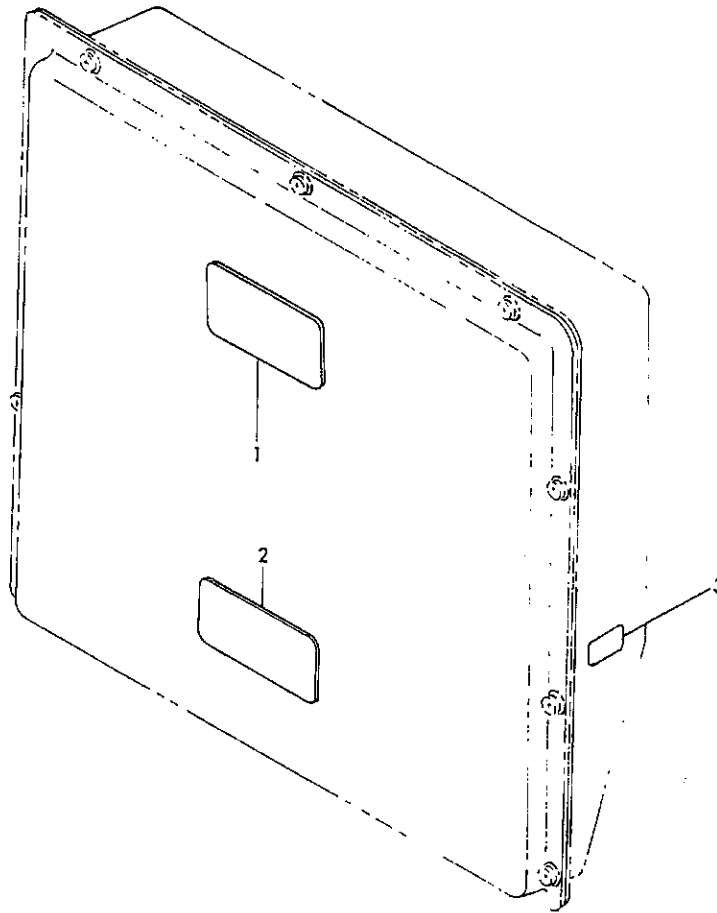 
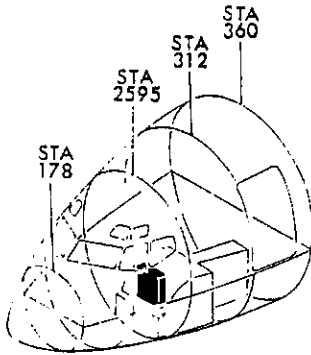 


FIGURE 128A. SHIELD ASSY, J9 GROUND POWER (REQUIRED PLACARDS ONLY)

DETAILED PARTS LIST
11-02-128A
PAGE 0

11-02-128A

NOV 21/90

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
128A	65-58619-12	SHIELD ASSY, J9 GROUND POWER (REQUIRED PLACARDS ONLY) .							5199	RF
		(SEE 24-11, FIG. 35, ITEM 1)								
1	BACM10W31-2UT	. MARKER-ALUMINUM FOIL, WARNING 200/115 VOLTS AC. . . .							5199	1
3	BAC27CEE731	. MARKER-ALUMINUM FOIL, BAT BUS DC POWER AC POWER . . .							5199	1
		INSTRUCTIONS								
		. FOR REFERENCE TO OTHER SHIELD DETAILS, SEE NHA. . . .							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

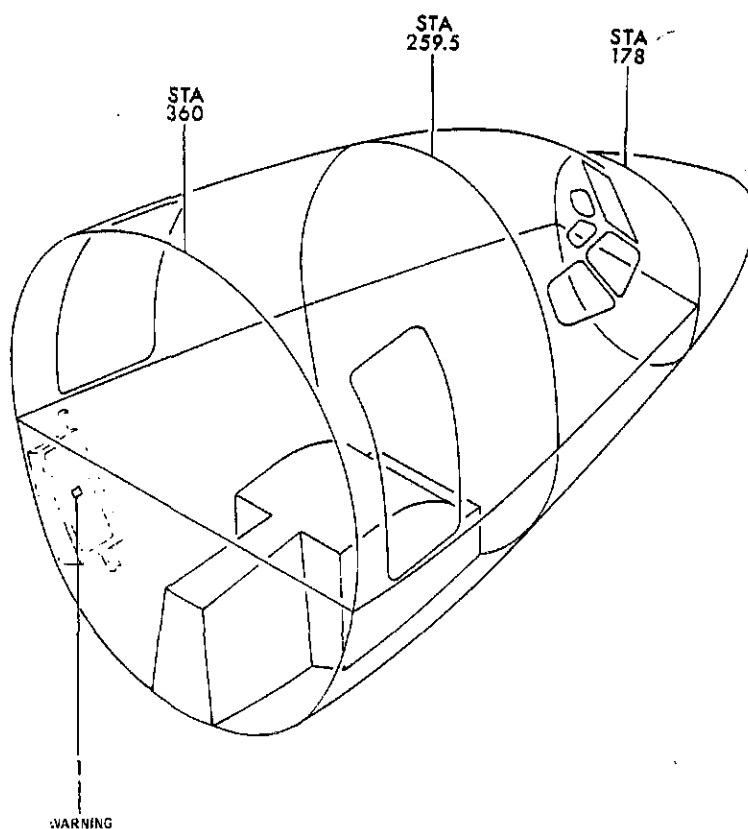 


FIGURE 129. SHIELD INSTL, STATION 344 AND 360 TRANSFORMER (REQUIRED PLACARDS ONLY)

DETAILED PARTS LIST
11-02-129
PAGE 0

11-02-129

NOV 21/90

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R R R R	129	SHIELD INSTL, STATION 344 AND 360 TRANSFORMER (REQUIRED							0150	RF
		PLACARDS ONLY) (SEE 24-3, FIG. 1A, ITEM 10, 24-3,								
	1	FIG. 1B, ITEM 9 AND 24-3, FIG. 1C, ITEM 8)							0150	1
		. MARKER-ALUMINUM FOIL, WARNING							0150	
		. FOR REFERENCE TO OTHER SHIELD DETAILS, SEE NHA. . . .							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

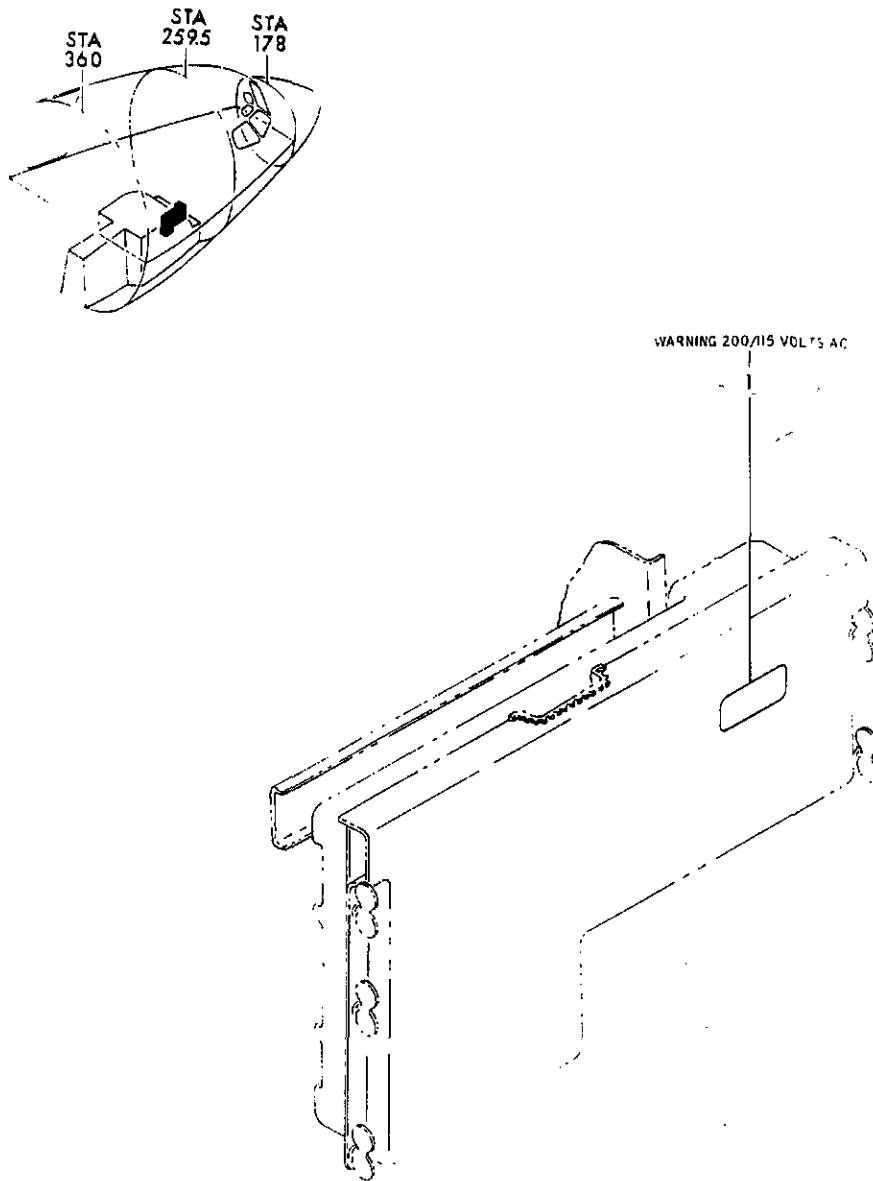 


FIGURE 130. SHIELD INSTL, STATION 294.5 J-1 RELAY (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R	130	65-7221							0150	RF	
	1	BACM10W31-2UT	SHIELD INSTL, STATION 294.5 J-1 RELAY (REQUIRED								
			PLACARDS ONLY) (SEE 24-3, FIG. 1A, ITEM 57, 24-3,								
			FIG. 1B, ITEM 52 AND 24-3, FIG. 1C, ITEM 48)								
									0150	1	
									0150		
									0150		
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

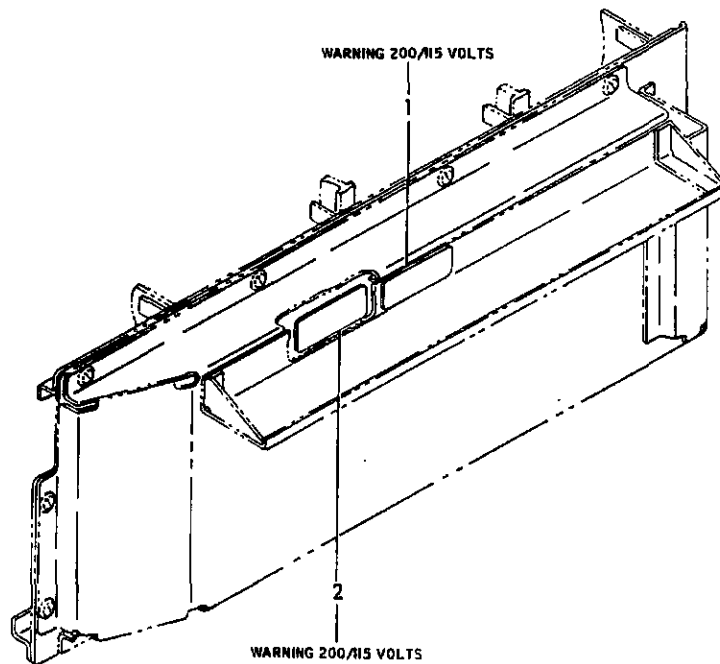 
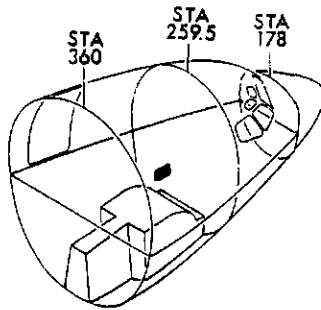 


FIGURE 131. SHIELD ASSY, STATION 300 J1 RELAY (REQUIRED PLACARDS ONLY)

DETAILED PARTS LIST
11-02-131
PAGE 0

11-02-131

NOV 21/90

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
131	65-58611-13	SHIELD ASSY, STATION 300 J1 RELAY (REQUIRED PLACARDS. .							5199	RF
		ONLY) (SEE 24-6, FIG. 36C, ITEM 1)								
1	BACM10W31-2UT	. MARKER-ALUMINUM FOIL, WARNING 200/115 VOLTS AC. . . .							5199	1
		. FOR REFERENCE TO OTHER SHIELD DETAILS, SEE NHA. . . .							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

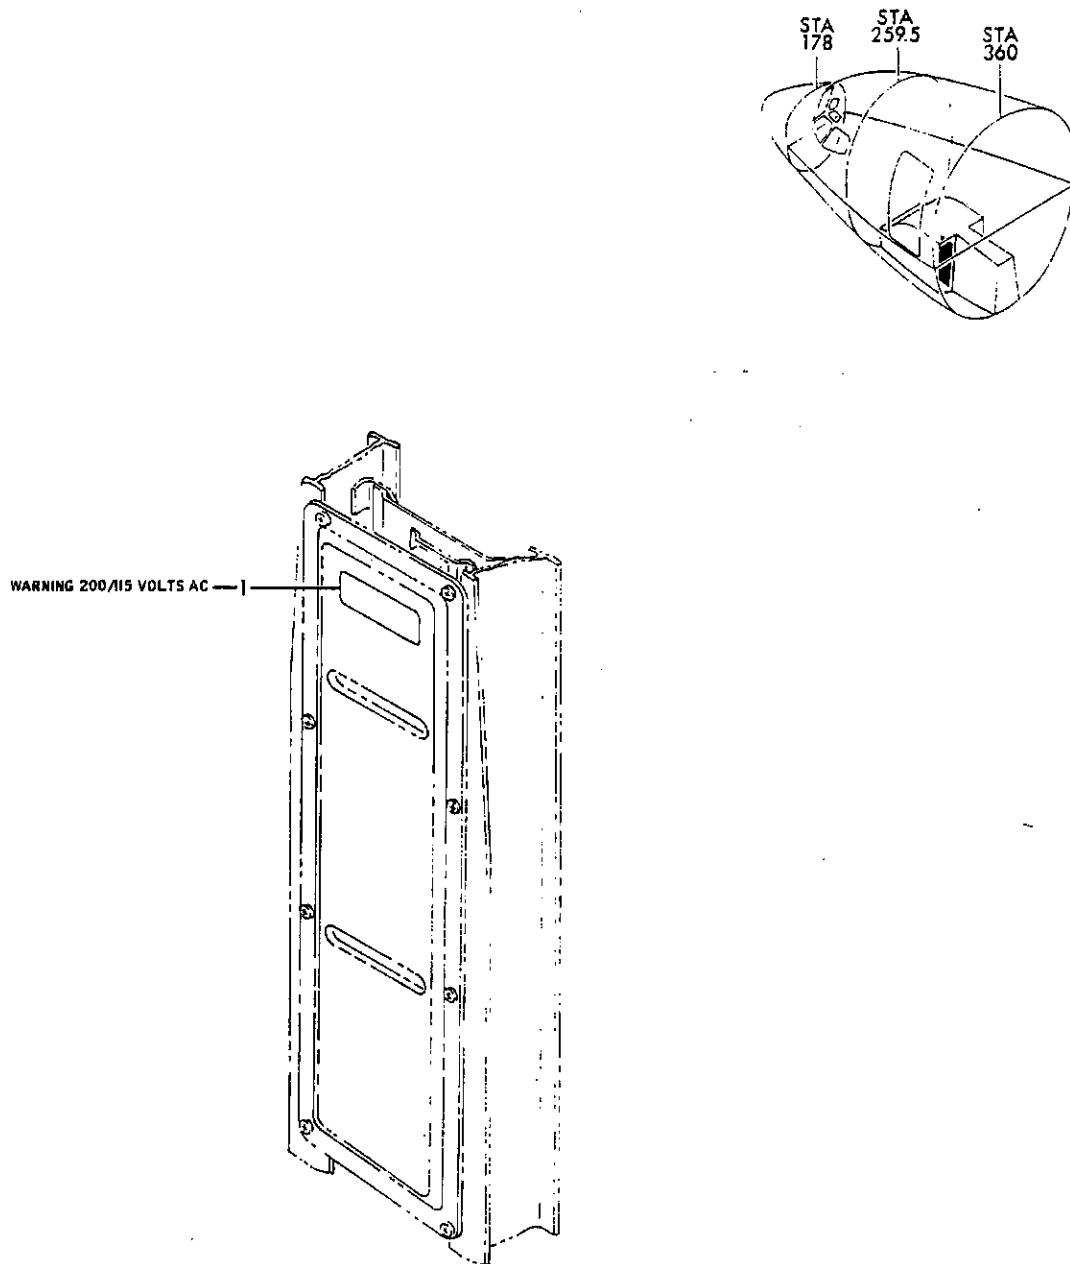 


FIGURE 133. BALLAST INSTL, NAVIGATOR'S TABLE FLUORESCENT LIGHTS (REQUIRED PLACARDS ONLY)

DETAILED PARTS LIST
11-02-133
PAGE 0

11-02-133

NOV 21/90

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R R R R R	133	65-51373-1							0150	RF
		BALLAST INSTL, NAVIGATORS TABLE FLUORESCENT LIGHTS. . . (REQUIRED PLACARDS ONLY) (SEE 24-3, FIG. 1A, ITEM 62, 24-3, FIG. 1B, ITEM 55 AND 24-3, FIG. 1C, ITEM 51)							0150	1
	1	BACMIOW31-2UT							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

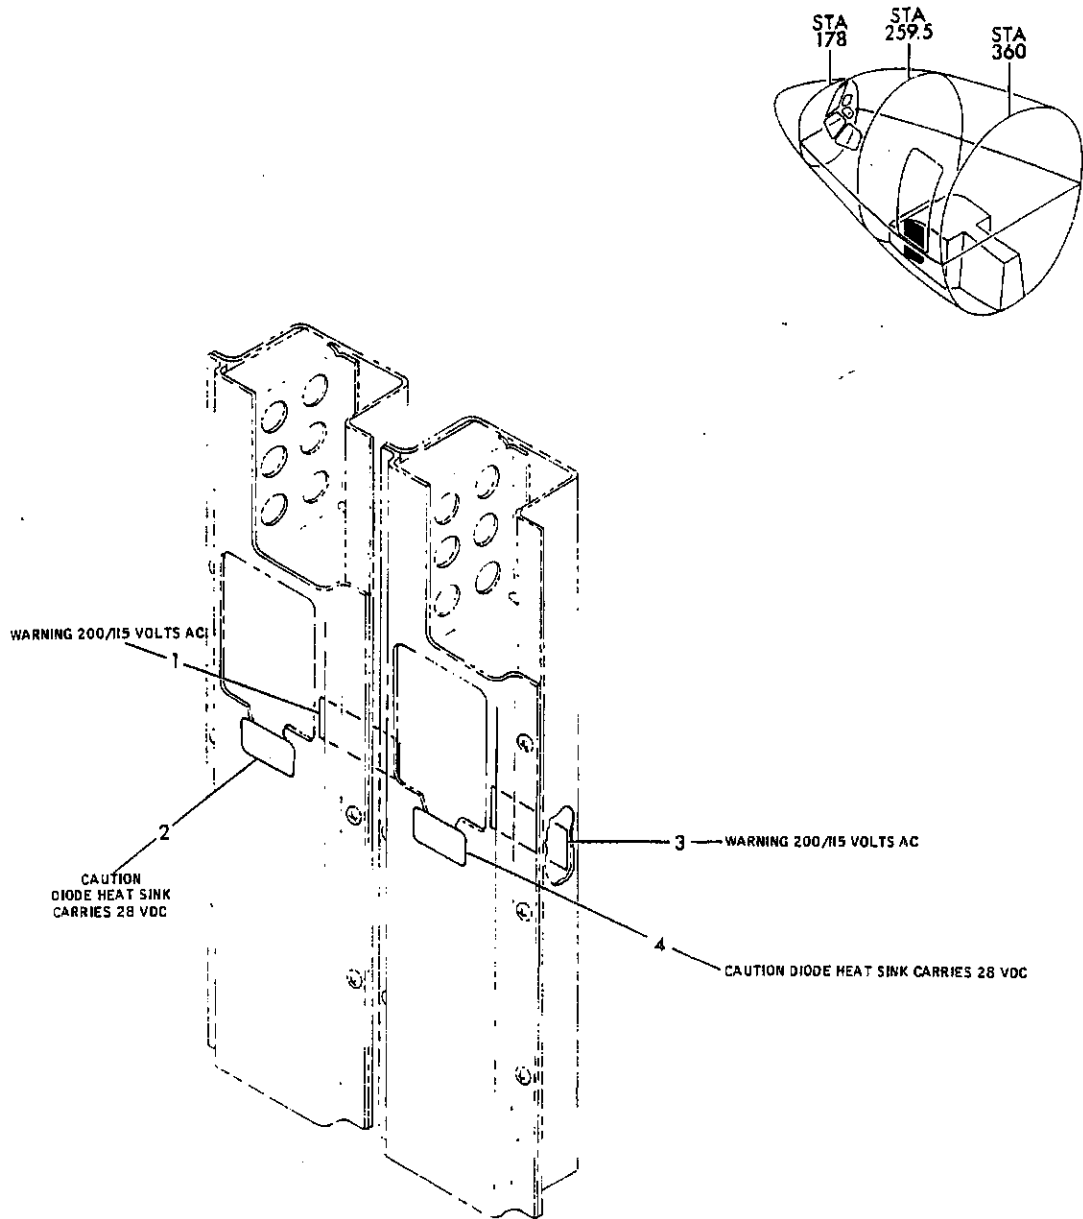 


FIGURE 134. SHIELD INSTL., STATION 294 J28 ELECTRICAL EQUIPMENT LH (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
134	65-58618-1	SHIELD INSTL, STATION 294 J28 ELECTRICAL EQUIPMENT LH . (REQUIRED PLACARDS ONLY) (VARIABLE DWG;65-58618-5004) (SEE 24-3, FIG. 1A, ITEM 74 AND 24-3, FIG. 1C, ITEM 63)							5199	RF
1	65-58618-77 BACM10W31-2UT	. SHIELD ASSY, FORWARD (REQUIRED PLACARDS ONLY)							5199	RF
3	65-58618-78 BACM10W31-2UT	. . MARKER-ALUMINUM FOIL, WARNING 200/115 VOLTS AC. . .							5199	1
4	BAC27CEE554	. SHIELD ASSY, AFT (REQUIRED PLACARDS ONLY)							5199	RF
		. . MARKER-ALUMINUM FOIL, WARNING 200/115 VOLTS AC. . .							5199	1
		. . MARKER-ALUMINUM FOIL, CAUTION DIODE HEAT SINK . . .							5199	1
		CARRIES 28V DC								
		. FOR REFERENCE TO OTHER SHIELD DETAILS, SEE NHA. . . .							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

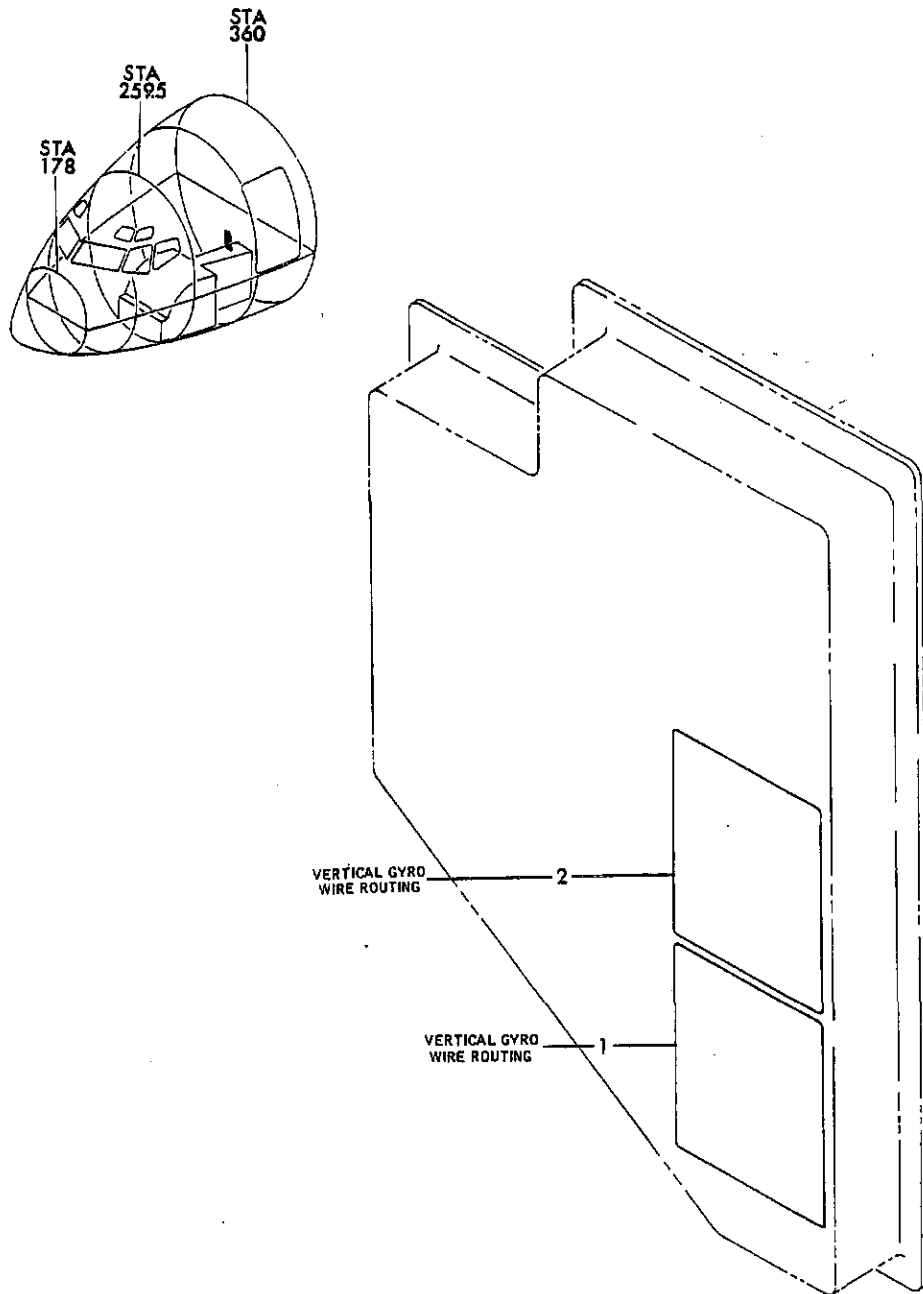 


FIGURE 135. CLAMP INSTL, VERTICAL GYROS WIRE (BENDIX) (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R R	135	65-15558	CLAMP INSTL, VERTICAL GYROS WIRE (BENDIX) (REQUIRED . .							0150	RF
		65-15558	PLACARDS ONLY) (SEE 24-3, FIG. 5, ITEM 155, 24-3, FIG. 5A, ITEM 232, 24-3, FIG. 5B, ITEM 230, 24-3, FIG. 5C, ITEM 219, 24-3, FIG. 5D, ITEM 201, 24-3, FIG. 5E, ITEM 180 AND 24-3, FIG. 5F, ITEM 170)							5199	RF
	1	BAC27CEE549	CLAMP INSTL, VERTICAL GYROS WIRE (BENDIX) (VARIABLE . . DWG;65-15558-5002) (REQUIRED PLACARDS ONLY) (SEE 24-3, FIG. 5D, ITEM 201 AND 24-3, FIG. 5F, ITEM 170) . DECAL, VERTICAL GYRO WIRE ROUTING FOR REFERENCE TO OTHER CLAMP DETAILS, SEE NHA								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

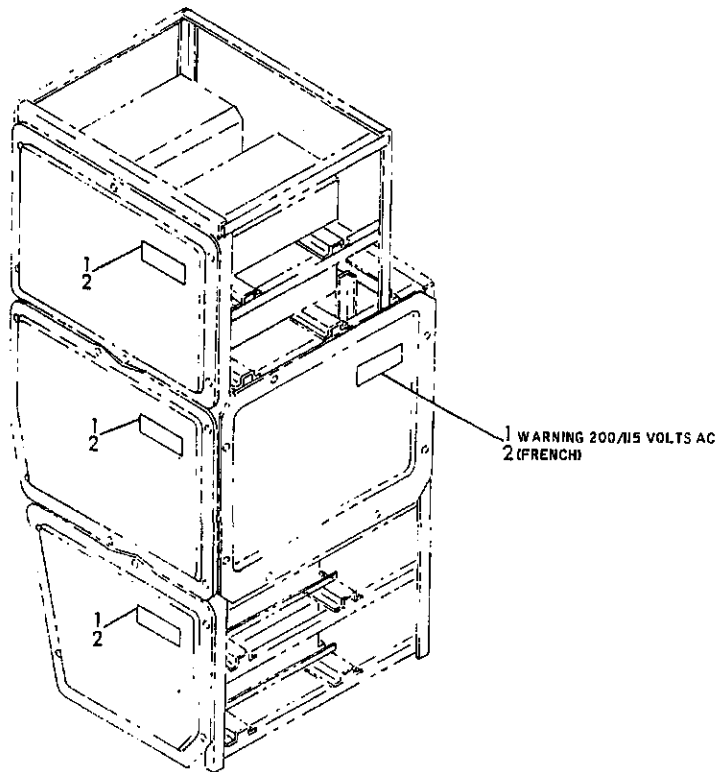 
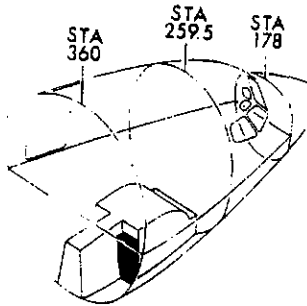 


FIGURE 136. EQUIPMENT INSTL, STATION 335 J5 ELECTRICAL RACK (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R R R R R	136	EQUIPMENT INSTL, STATION 335 J5 ELECTRICAL RACK							0150	RF
		(REQUIRED PLACARDS ONLY) (SEE 24-3, FIG. 1A, ITEM								
		4, 24-3, FIG. 1B, ITEM 4 AND 24-3, FIG. 1C, ITEM								
		4)								
	1	BACM10W31-2UT	. MARKER-ALUMINUM FOIL, WARNING 200/115 VOLTS AC. . . .							0150
		. FOR REFERENCE TO OTHER EQUIPMENT DETAILS, SEE NHA . .							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

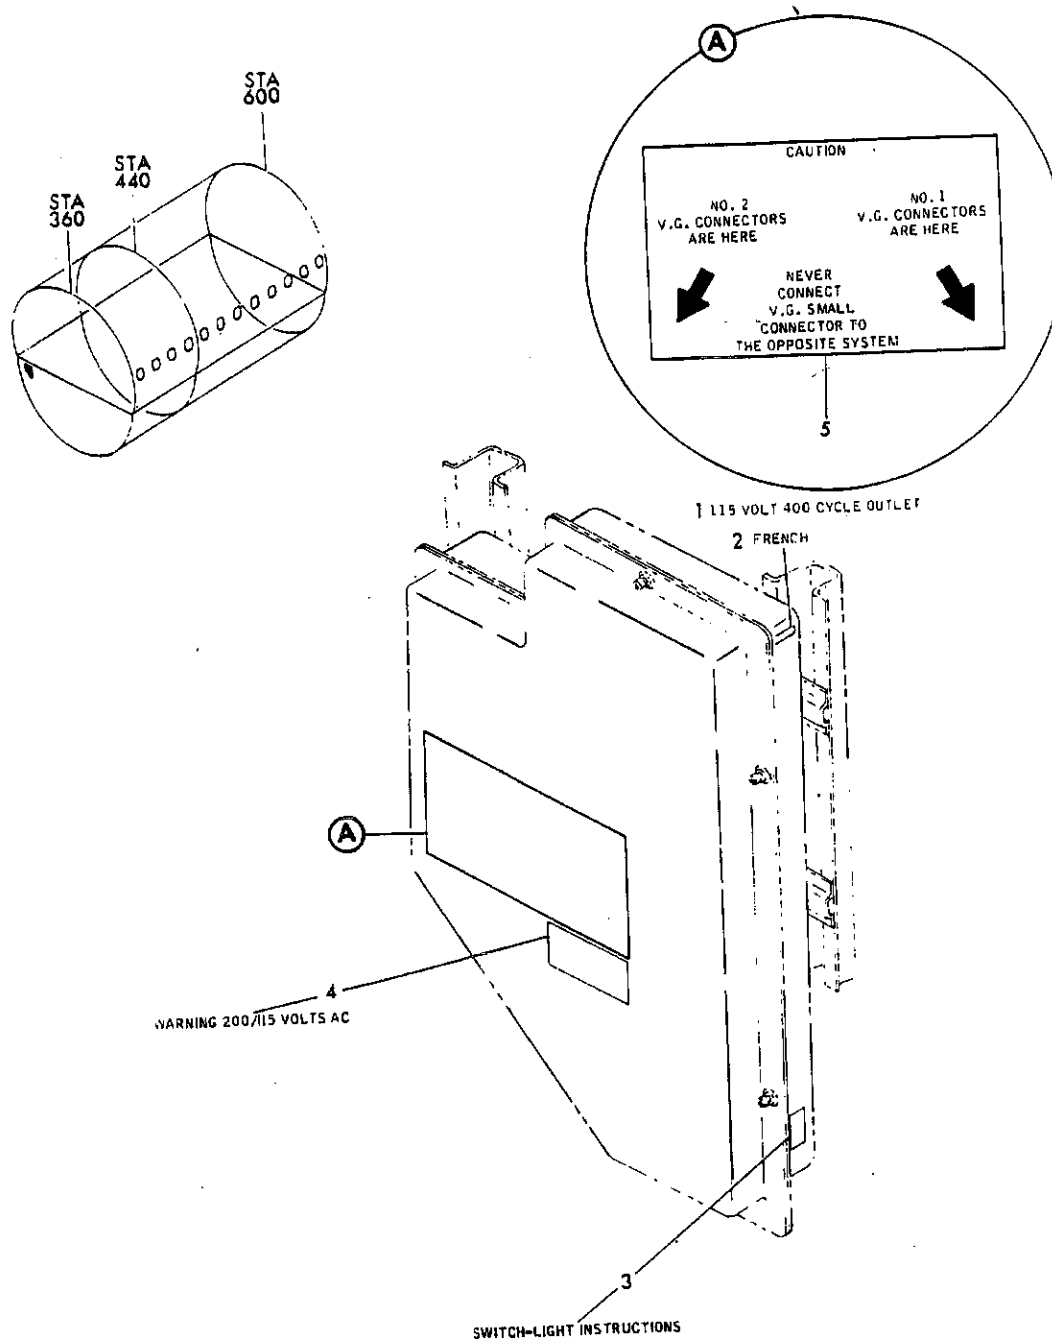 


FIGURE 137. PANEL ASSY, STATION 360 J2 RELAY (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF	UNITS
				FROM TO	PER ASSY
137	50-8784-1		PANEL ASSY, STATION 360 J2 RELAY (REQUIRED PLACARDS . . ONLY) (SEE 24-6, FIG. 16, ITEM 1, 24-6, FIG. 17, ITEM 1, 24-6, FIG. 18, ITEM 1, 24-6, FIG. 18A, ITEM 1, 24-6, FIG. 19, ITEM 1, 24-6, FIG. 20, ITEM 1, 24-6, FIG. 20B, ITEM 1, 24-6, FIG. 21, ITEM 1, 24-6, FIG. 22, ITEM 1, 24-6, FIG. 23, ITEM 1, 24-6, FIG. 23A, ITEM 1 AND 24-6, FIG. 23B, ITEM 1)	0150	RF
	65-58612-16		PANEL ASSY, STATION 360 J2 RELAY (REQUIRED PLACARDS . . ONLY) (SEE 24-6, FIG. 18E, ITEM 1)	5199	RF
	1	BACM10L20-18PF		. MARKER-ALUMINUM FOIL, 115 VOLT 400 CYCLE OUTLET FOR REFERENCE TO OTHER PANEL DETAILS SEE NHA. . . .	5199
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

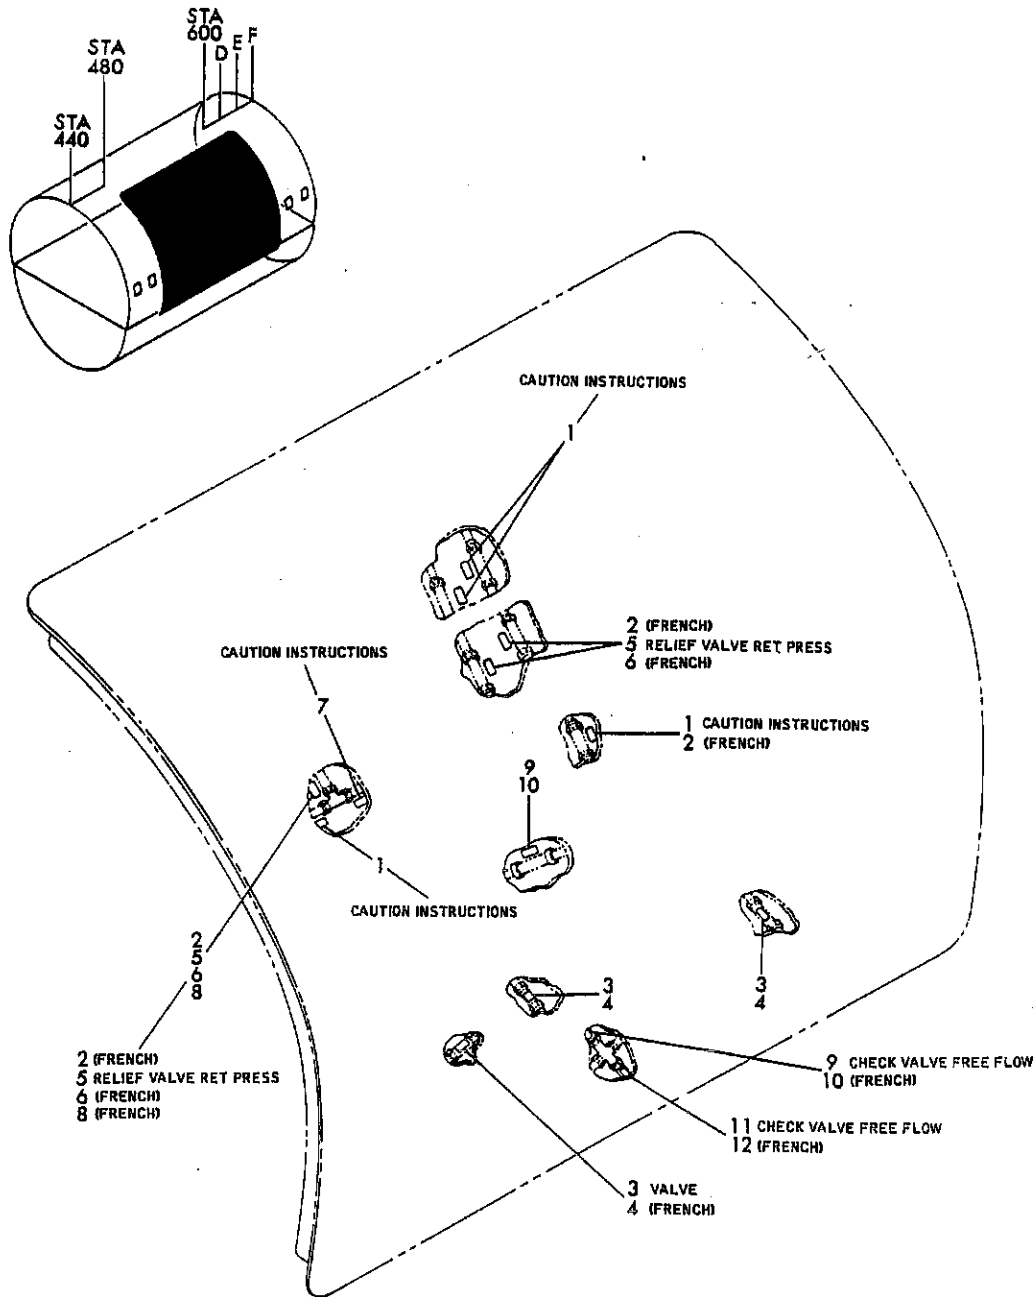 


FIGURE 140. HYDRAULIC INSTL, CARGO DOOR (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

RAF
NOV 21/90

DETAILED PARTS LIST
11-02-140
PAGE 1

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

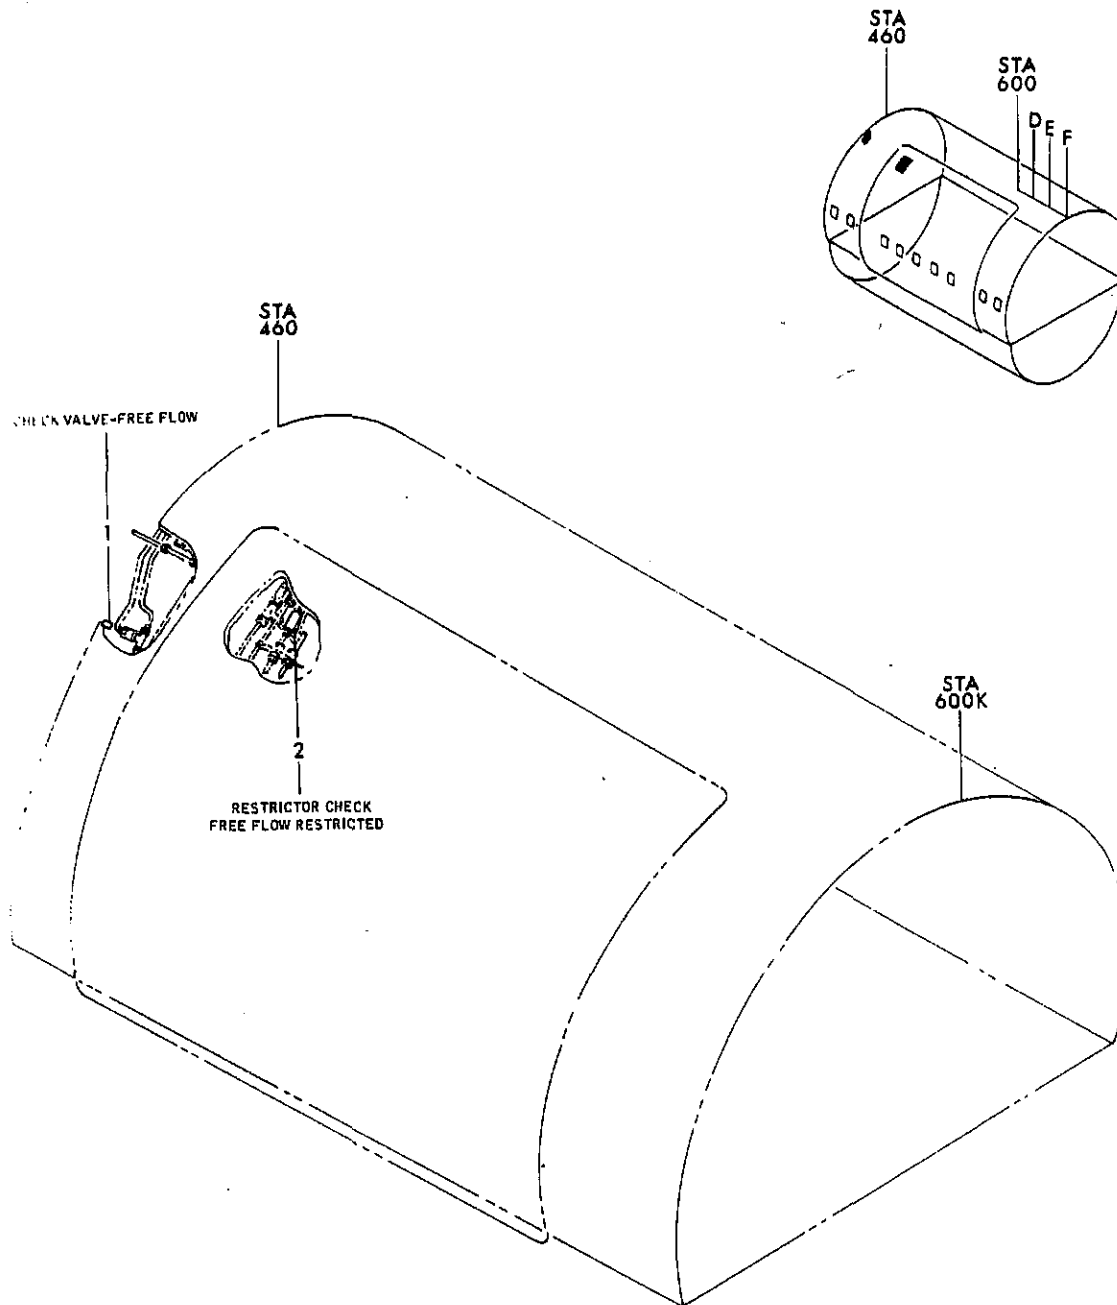 


FIGURE 141A. HYDRAULIC INSTL, SECTION 43 CARGO DOOR SYSTEM (STATION 460 TO 600K) (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
141A	65-29982-85	HYDRAULIC INSTL, SECTION 43 CARGO DOOR SYSTEM (STATION 460 TO 600K) (REQUIRED PLACARDS ONLY) (SEE 29-4, FIG. 2, ITEM 39)								RF
1	BACM9V21-1C	. SCOTCH-CAL, CHECK VALVE-FREE FLOW								1
		. FOR REFERENCE TO OTHER HYDRAULIC DETAILS, SEE NHA . .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

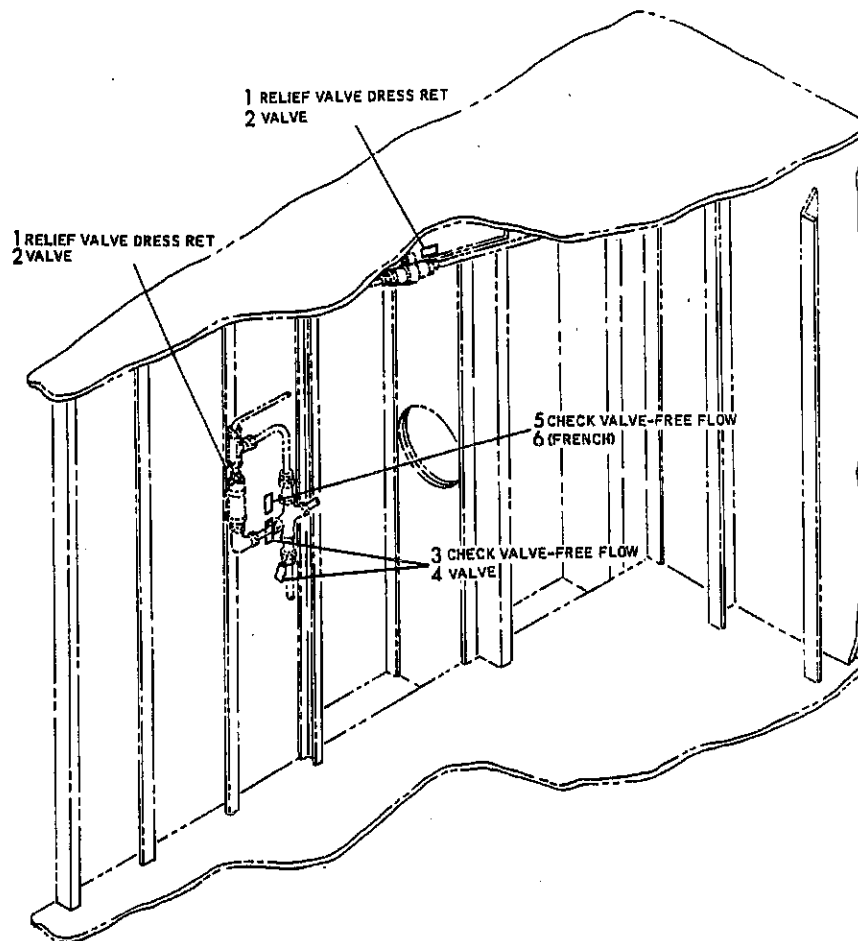 
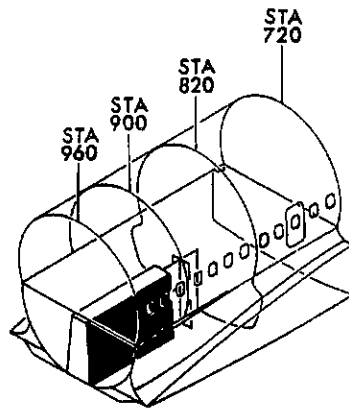 


FIGURE 141B. HYDRAULIC INSTL, SECTION 43 CARGO DOOR SYSTEM (STATION 820 TO 960) (REQUIRED PLACARDS ONLY)

DETAILED PARTS LIST
11-02-141B
PAGE 0

11-02-141B

NOV 21/90

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
141B	65-29982-85	HYDRAULIC INSTL, SECTION 43 CARGO DOOR SYSTEM (STATION 820 TO 960) (REQUIRED PLACARDS ONLY) (SEE 24-4, FIG. 2, ITEM 39 AND 29-4, FIG. 16A, ITEM 249)								RF
1	BACM1OV21-2AGU	. MARKER-ALUMINUM FOIL, RELIEF VALVE DRESS RET.								2
3	BACM1OV21-2JG	. MARKER-ALUMINUM FOIL, CHECK VALVE-FREE FLOW								2
5	BACM1OV21-2JH	. MARKER-ALUMINUM FOIL, CHECK VALVE-FREE FLOW								1
. FOR REFERENCE TO OTHER HYDRAULIC DETAILS, SEE NHA . .										
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

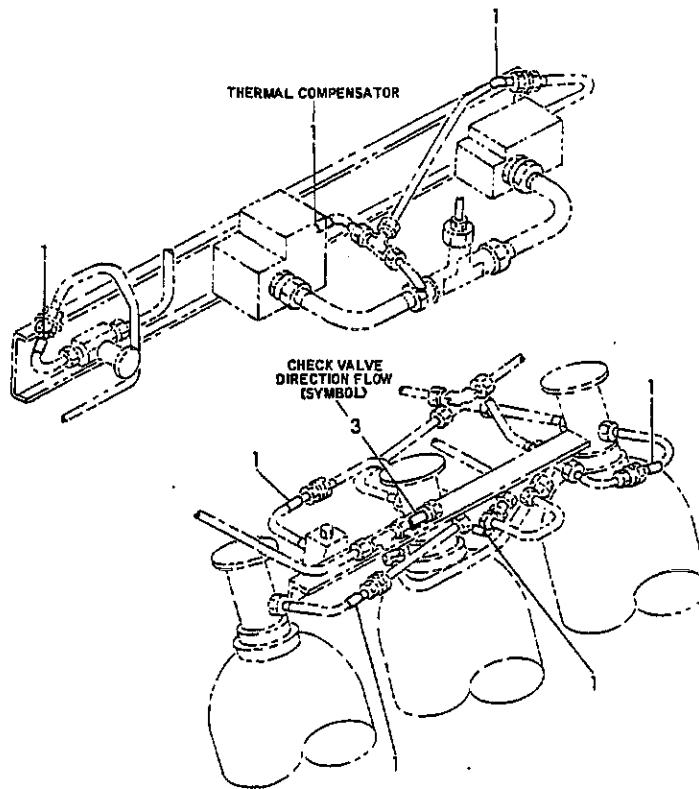 
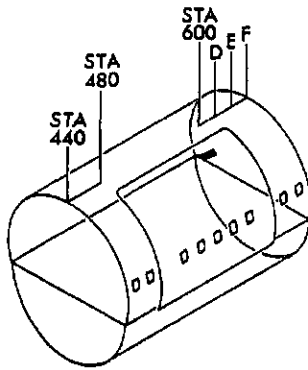 




FIGURE 157. TUBING INSTL, SECTION 43 OXYGEN (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R R R	157	65-4738	TUBING INSTL, SECTION 43 OXYGEN (REQUIRED PLACARDS. . . ONLY) (SEE 53-1, FIG. 2, ITEM 16)								RF
	1	BACM9C2G	. SCOTCH-CAL, THERMAL COMPENSATOR							0150	5
	3	BACM9V21-18	. SCOTCH-CAL, CHECK VALVE DIRECTION FLOW.								1
	5	BACM9C2G	. SCOTCH-CAL, THERMAL COMPENSATOR							0150	1
	6	BACM9C2G	. SCOTCH-CAL, THERMAL COMPENSATOR							0150	1
			. FOR REFERENCE TO OTHER TUBING DETAILS, SEE NHA. . . .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

707

  STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

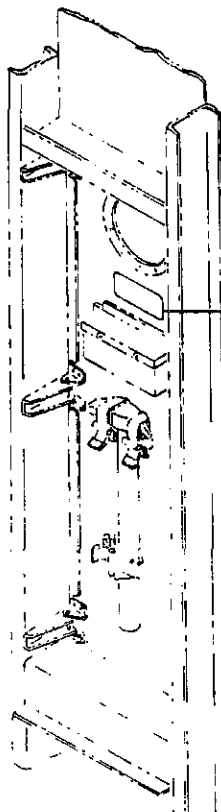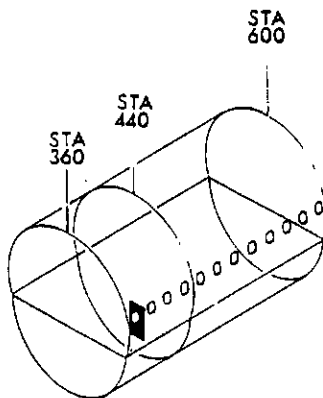

- 1 WARNING THIS DOOR TO BE CLOSED
PRIOR TO FLIGHT
- 2 WARNING (FRENCH)

FIGURE 163. DOOR INSTL, STATION 400 ELECTRONIC COMPARTMENT (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R R	163	65-1995	DOOR INSTL, STATION 400 ELECTRONIC COMPARTMENT. (REQUIRED PLACARDS ONLY) (SEE 24-3, FIG. 6A, ITEM 16, 24-3, FIG. 6B, ITEM 13, 24-3, FIG. 6C, ITEM 13, 24-3, FIG. 6D, ITEM 20, 24-3, FIG. 6E, ITEM 24 AND 24-3, FIG. 6F, ITEM 16)							0150	RF
		65-1995-18	DOOR INSTL, STATION 400 ELECTRONIC COMPARTMENT. (REQUIRED PLACARDS ONLY) (SEE 24-1, FIG. 6B, ITEM 13, 24-3, FIG. 6C, ITEM 13 AND 24-3, FIG. 6E, ITEM 24)							5199	RF
	1	BACM10W51-2NG	. MARKER-ALUMINUM FOIL, WARNING THIS DOOR TO BE CLOSED PRIOR TO FLIGHT . FOR REFERENCE TO OTHER DOOR DETAILS, SEE NHA.								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

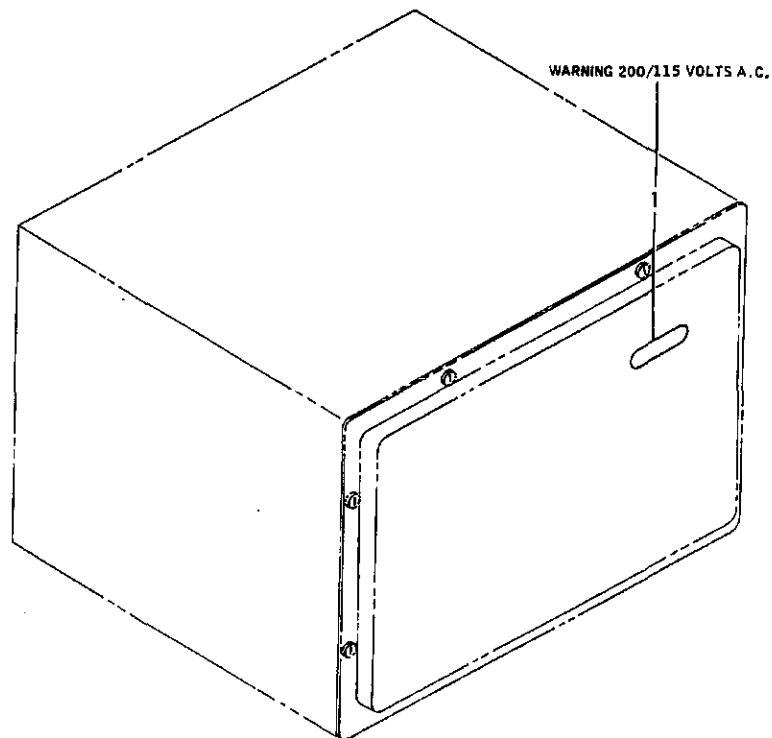 
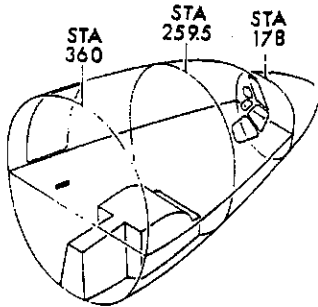 


FIGURE 164. BOX ASSY, STATION 350 J26 TRANSFORMER RECTIFIER (REQUIRED PLACARDS ONLY)

DETAILED PARTS LIST
11-02-164
PAGE 3

11-02-164

NOV 21/90

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
164	65-58626-18	BOX ASSY, STATION 350 J26 TRANSFORMER RECTIFIER							5199	RF
1	BACM10W31-2UT	(REQUIRED PLACARDS ONLY) (SEE 24-5, FIG. 3, ITEM 1)								
		. MARKER-ALUMINUM FOIL, WARNING 200/115 VOLTS AC.							5199	1
		. FOR REFERENCE TO OTHER BOX DETAILS, SEE NHA							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

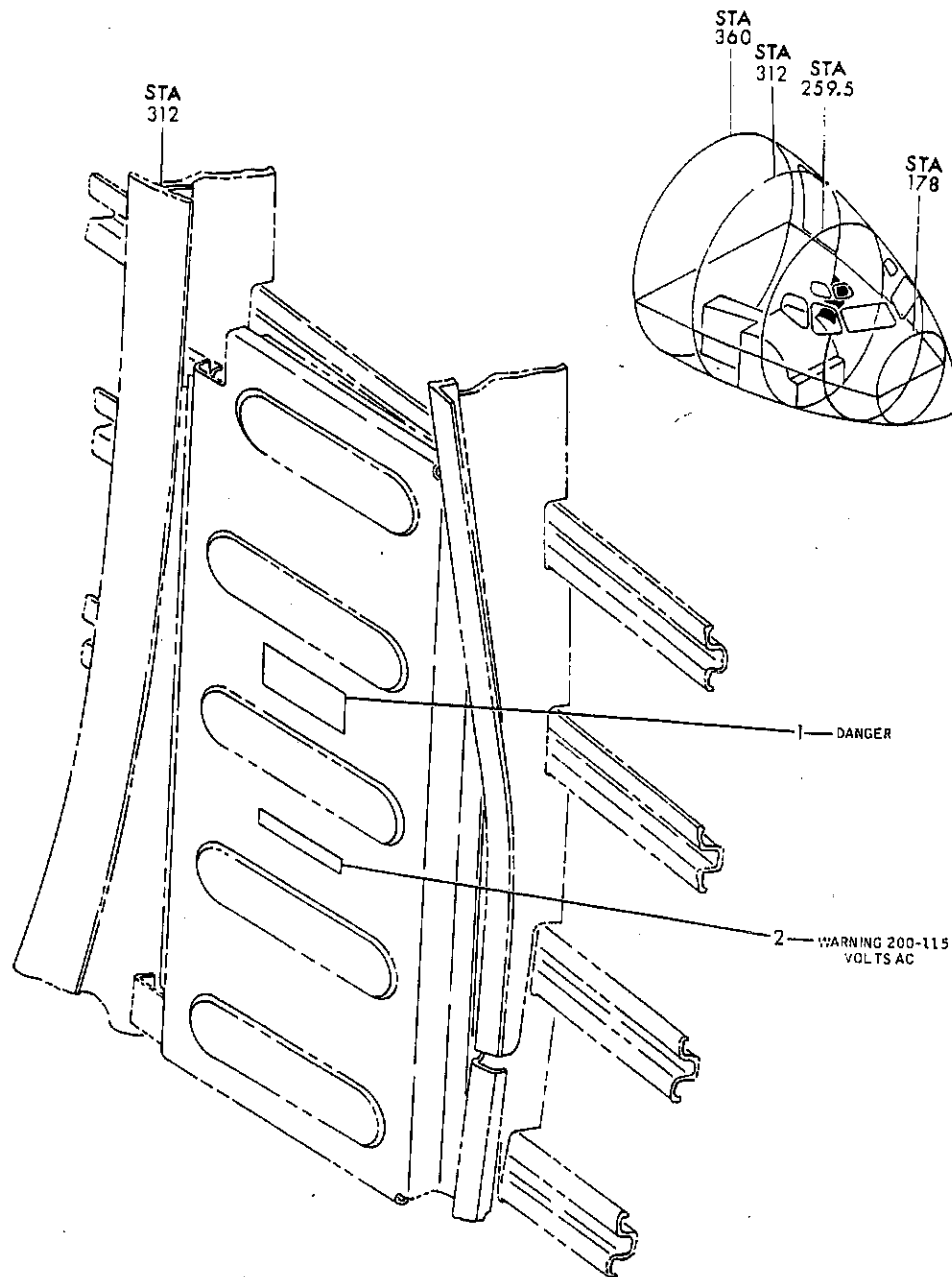 


FIGURE 164A, COVER INSTL, STATION 294.5 TO 312 RJ20 SHIELD (REQUIRED PLACARDS ONLY)

DETAILED PARTS LIST
11-02-164A
PAGE 0

11-02-164A

NOV 21/90

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
164A	65-37656-18	COVER INSTL, STATION 294.5 TO 312 RJ20 SHIELD (REQUIRED PLACARDS ONLY) (SEE 24-3, FIG. 5A, ITEM 101, 24-3, FIG. 5B, ITEM 101, 24-3, FIG. 5C, ITEM 123, 24-3, FIG. 5D, ITEM 106, 24-3, FIG. 5E, ITEM 64 AND 24-3, FIG. 5F, ITEM 62)								RF
	65-40342-11	. COVER ASSY, RJ20 JUNCTION BOX (REQUIRED PLACARDS. . . ONLY)								RF
2	BACM10W31-2UT	. . MARKER, ALUMINUM FOIL								1
		. FOR REFERENCE TO OTHER COVER DETAILS, SEE NHA								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

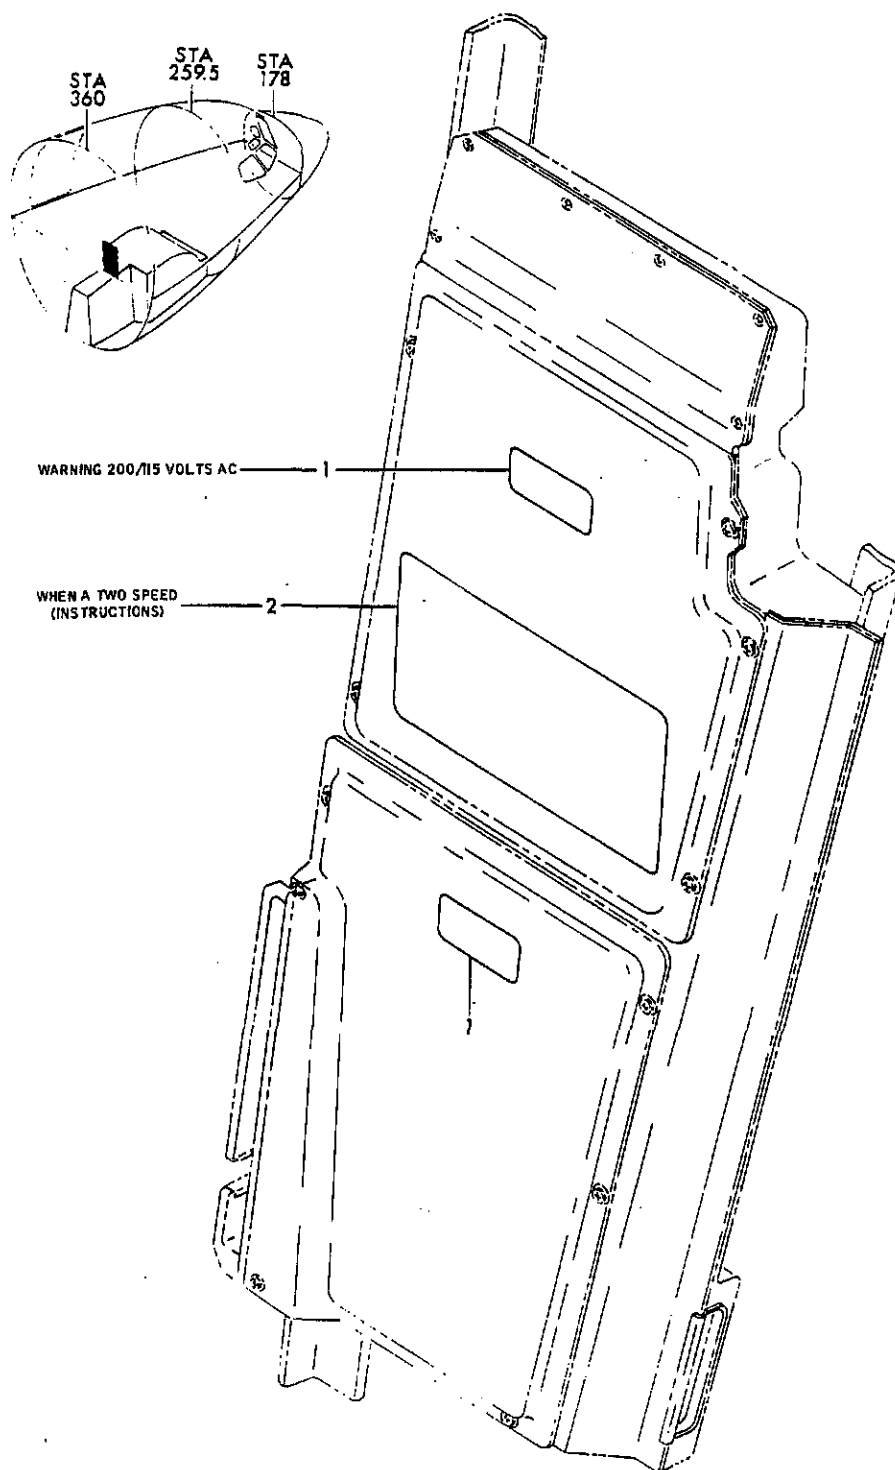 



FIGURE 165. BOX INSTL, RJ 23 AUTOPILOT JUNCTION (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
165	65-59523-1		BOX INSTL, RJ3 AUTOPILOT JUNCTION (REQUIRED PLACARDS. ONLY) (VARIABLE DWG; 65-59523-5004) (SEE 24-3, FIG. 5D, ITEM 116 AND 24-3, FIG. 5F, ITEM 21A)	5199	RF
1	BACM10W31-2UT		. MARKER-ALUMINUM FOIL, WARNING INSTRUCTIONS.	5199	2
2	BACM9A136-5J		. MARKER-ALUMINUM FOIL, WHEN A TWO SPEED INSTRUCTIONS	5199	1
			. FOR REFERENCE TO OTHER BOX DETAILS, SEE NHA	5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

707

 STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

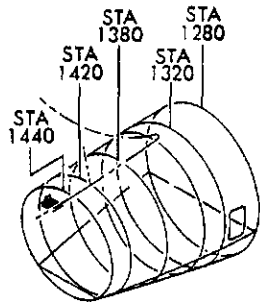

TRAY INSTL INSTRUCTIONS 1. DISCARD THIS BRACKET WHEN TRAY INSTALLED 2. U-CHANNELS, SECURED TO UNDERSIDE OF MITG SURFACE, TO BE RELOCATED AS REQUIRED AND SECURED DIRECTLY UNDER TRAY ISOLATORS WITH ISOLATOR BOLTS. SEE MOUNTING SURFACE FOR TYPICAL INSTL.

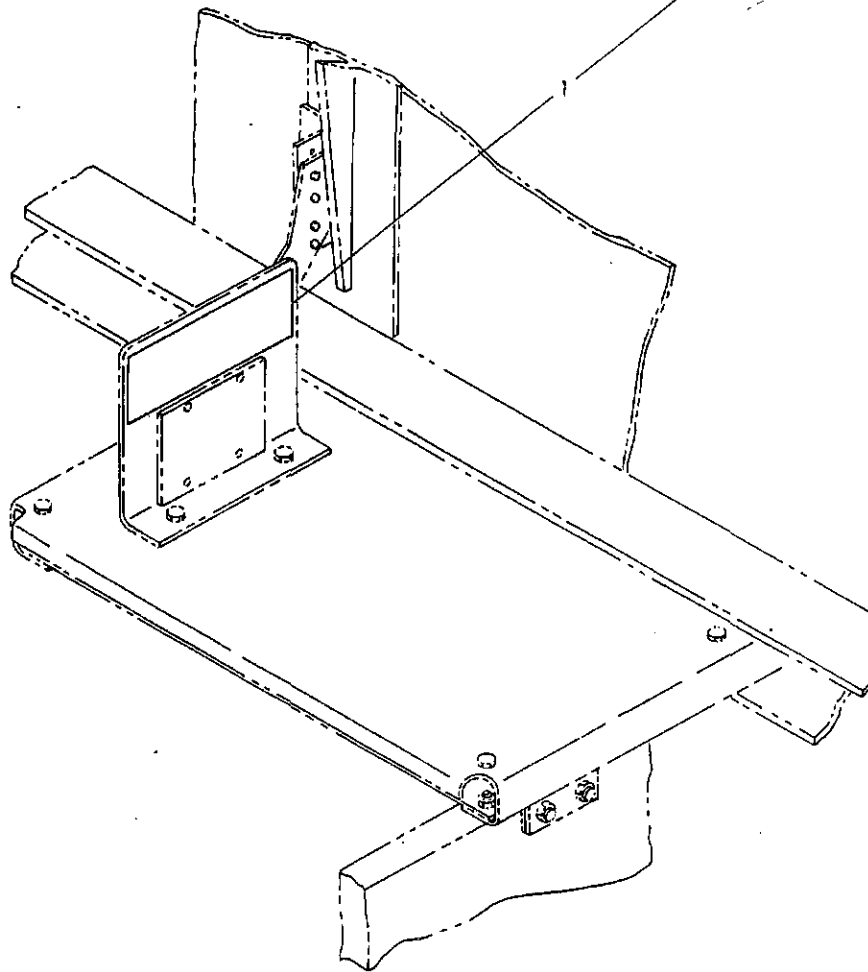 



FIGURE 167. SHELF INSTL, STATION 1440 VOICE RECORDER (REQUIRED PLACARDS ONLY)
VOICE RECORDER INSTL, STATION 1440 (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R R R R	167	65-46627-1							0250	RF
	1	BACM9L10ALE								
		SHELF INSTL, STATION 1440 VOICE RECORDER (REQUIRED. . .							0250	1
		PLACARDS ONLY) (SEE 24-3, FIG. 7, ITEM 168)							0250	
		. SCOTCH-CAL, TRAY INSTL INSTRUCTIONS							0250	
		. FOR REFERENCE TO OTHER SHELF AND VOICE RECORDER . . .							0250	
		DETAILS, SEE NHA								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										


707

 STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

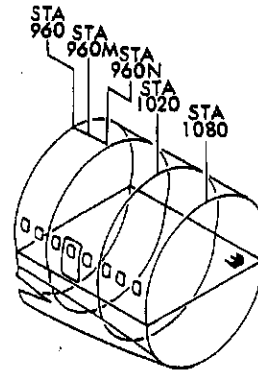

NOTE: PROVISIONS ARE MADE
FOR INSTL OF LITTON, COLLINS
OR BENDIX TRAYS PER ABOVE
MOUNTING HOLE PATTERN.
(USE 2 SCREWS PER SHOCKMOUNT)
(SYMBOL)

 2

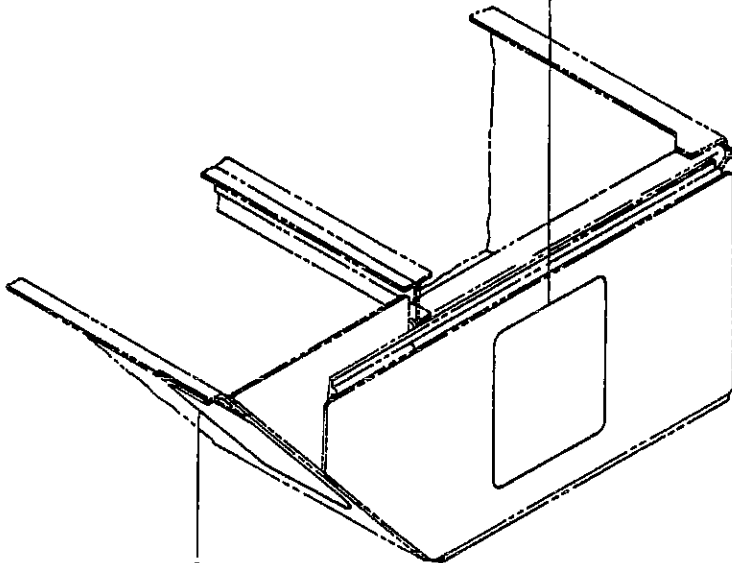

NOTE: PROVISIONS ARE MADE
FOR INSTL OF LITTON, COLLINS
OR BENDIX TRAYS PER ABOVE
MOUNTING HOLE PATTERN.
(USE 2 SCREWS PER SHOCKMOUNT)
(SYMBOL)

FIGURE 170. RACK INSTL, LOW RANGE RADIO ALTIMETER UNIT (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R	170	65-36741-3	RACK INSTL, LOW RANGE RADIO ALTIMETER UNIT (REQUIRED. .							0150	RF
			PLACARDS ONLY) (SEE 24-3, FIG. 7, ITEM 1D)								
		65-36741-13	RACK INSTL, LOW RANGE RADIO ALTIMETER UNIT (VARIABLE. .							5199	RF
			DWG;65-36741-5006) (REQUIRED PLACARDS ONLY) (SEE								
			24-3, FIG. 7, ITEM 1D)								
		65-37647-45	. RACK ASSY, (REQUIRED PLACARDS ONLY)								RF
		65-37647-47	. . RACK ASSY, (REQUIRED PLACARDS ONLY)								RF
		BACM9L10APL	. . . SCOTCH-CAL, TRAYS MOUNTING INSTRUCTIONS								1
	1		. FOR REFERENCE TO OTHER RACK DETAILS, SEE NHA.								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

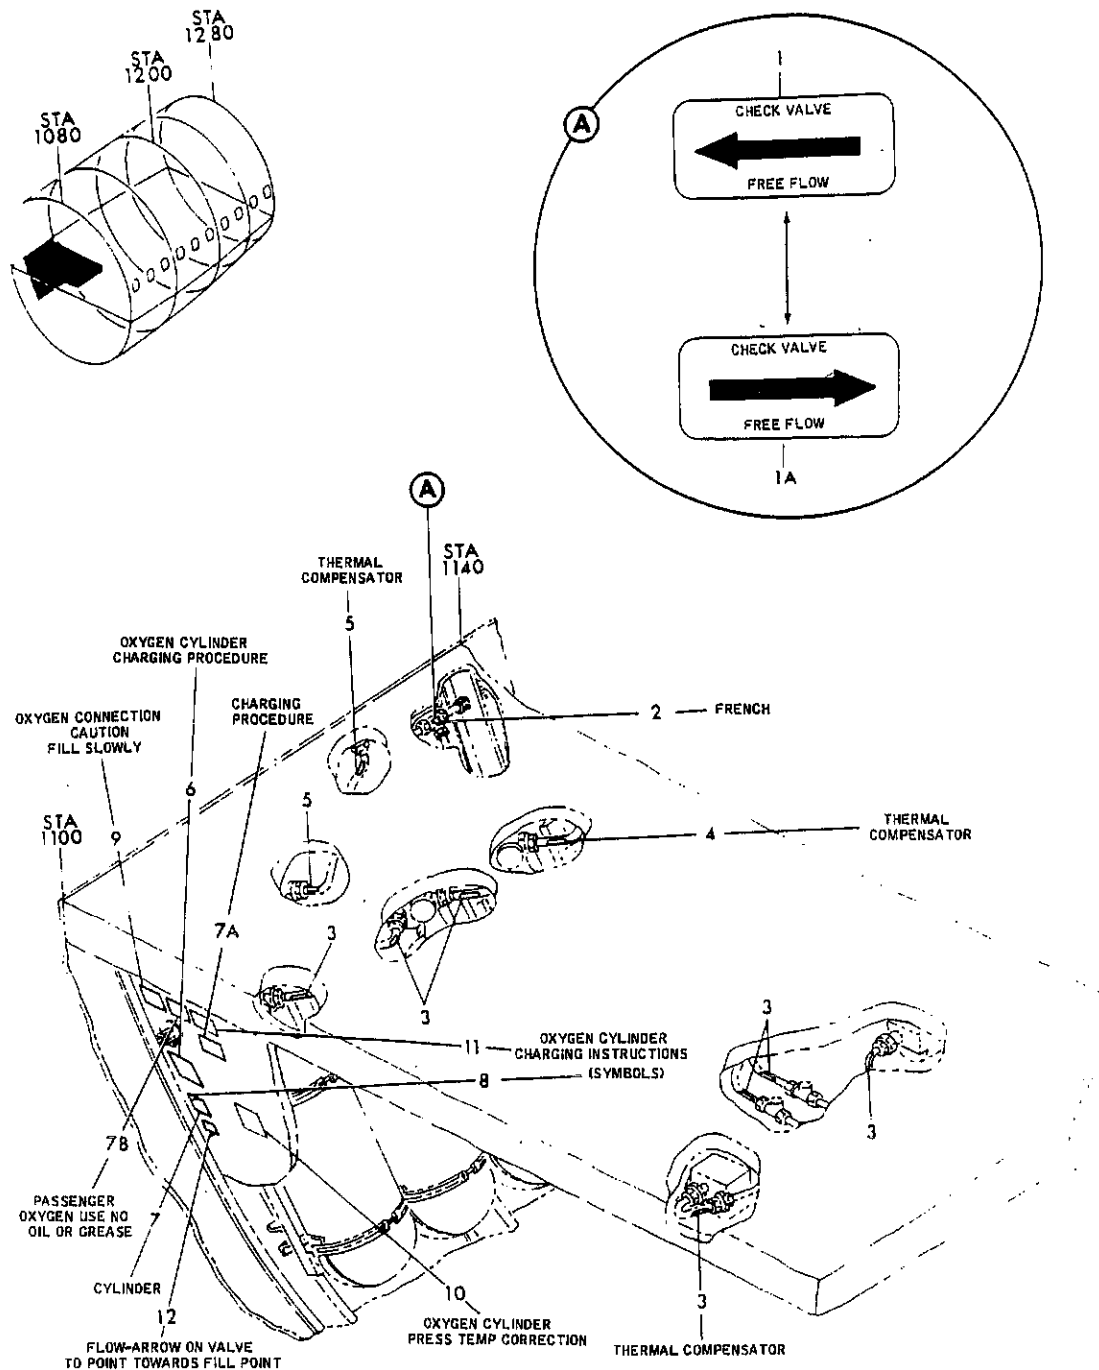 


FIGURE 173. TUBING INSTL, SECTION 46 OXYGEN (REQUIRED PLACARDS ONLY)

707

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
173	65-3779	TUBING INSTL, SECTION 46 OXYGEN (REQUIRED PLACARDS. . . ONLY) (SEE 53-1, FIG. 3, ITEM 9)								RF
1	BACM10V21-2JH	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW								1
		. FOR REFERENCE TO OTHER TUBING DETAILS, SEE NHA.								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

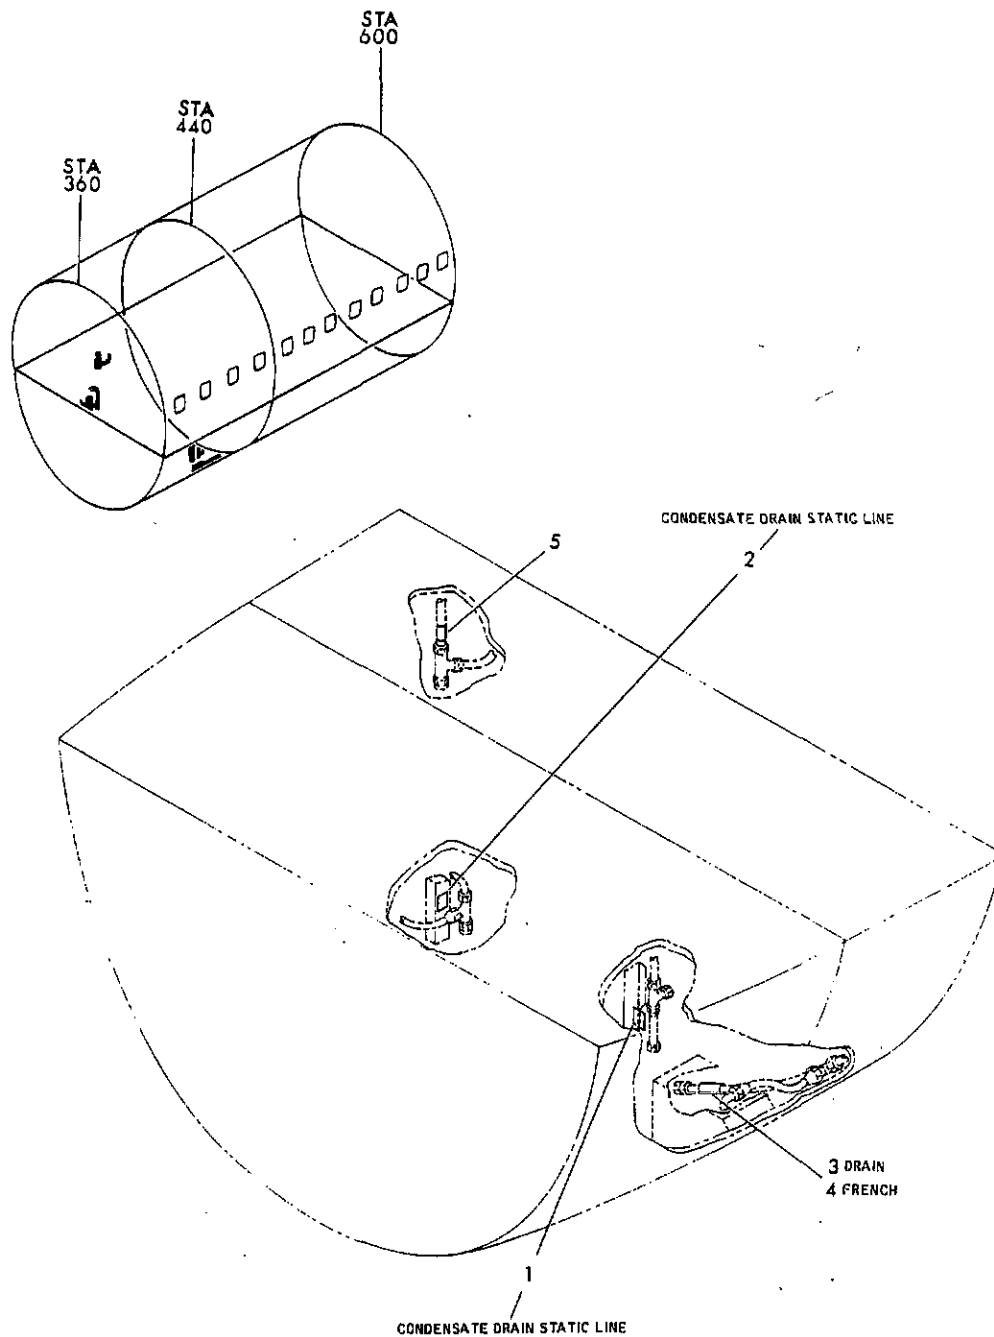 


FIGURE 176. METAL-CAL INSTL, STATION 380 PITOT-STATIC DRAIN

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R R R R R R R	176	MARKER INSTL-ALUMINUM FOIL, STATIC DRAIN.							0150	RF
		SCOTCH-CAL INSTL, STATION 380 PITOT-STATIC DRAIN.							5199	
		. MARKER INSTL-ALUMINUM FOIL, STATIC DRAIN RH (SEE.							0150	
		34-6, FIG. 39, ITEM 44)								
	2	. . MARKER-ALUMINUM FOIL, CONDENSATE DRAIN STATIC LINE							0150	
		. SCOTCH-CAL INSTL, STATION 380 PITOT-STATIC DRAIN (SEE							5199	
		34-6, FIG. 39, ITEM 43 AND 34-6, FIG. 40D, ITEM								1
		42)								
	3	. . SCOTCH-CAL, DRAIN							5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

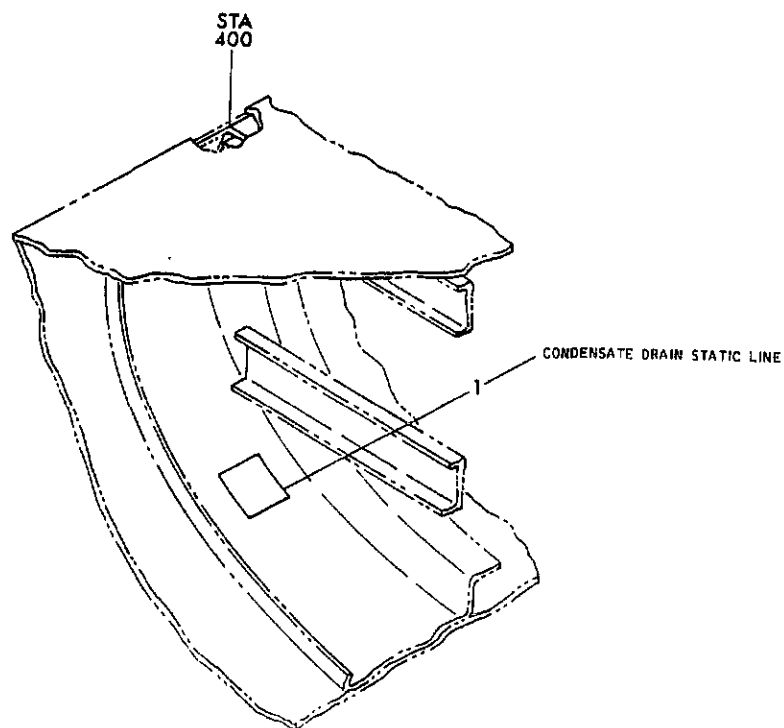 
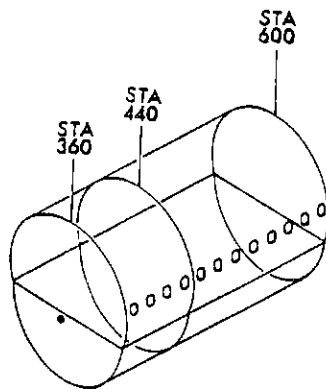 


FIGURE 177. METAL-CAL INSTL, STATIC DRAIN

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R R R	177	69-9046-1							5199	RF
	1	BACM10L21-2AD							5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

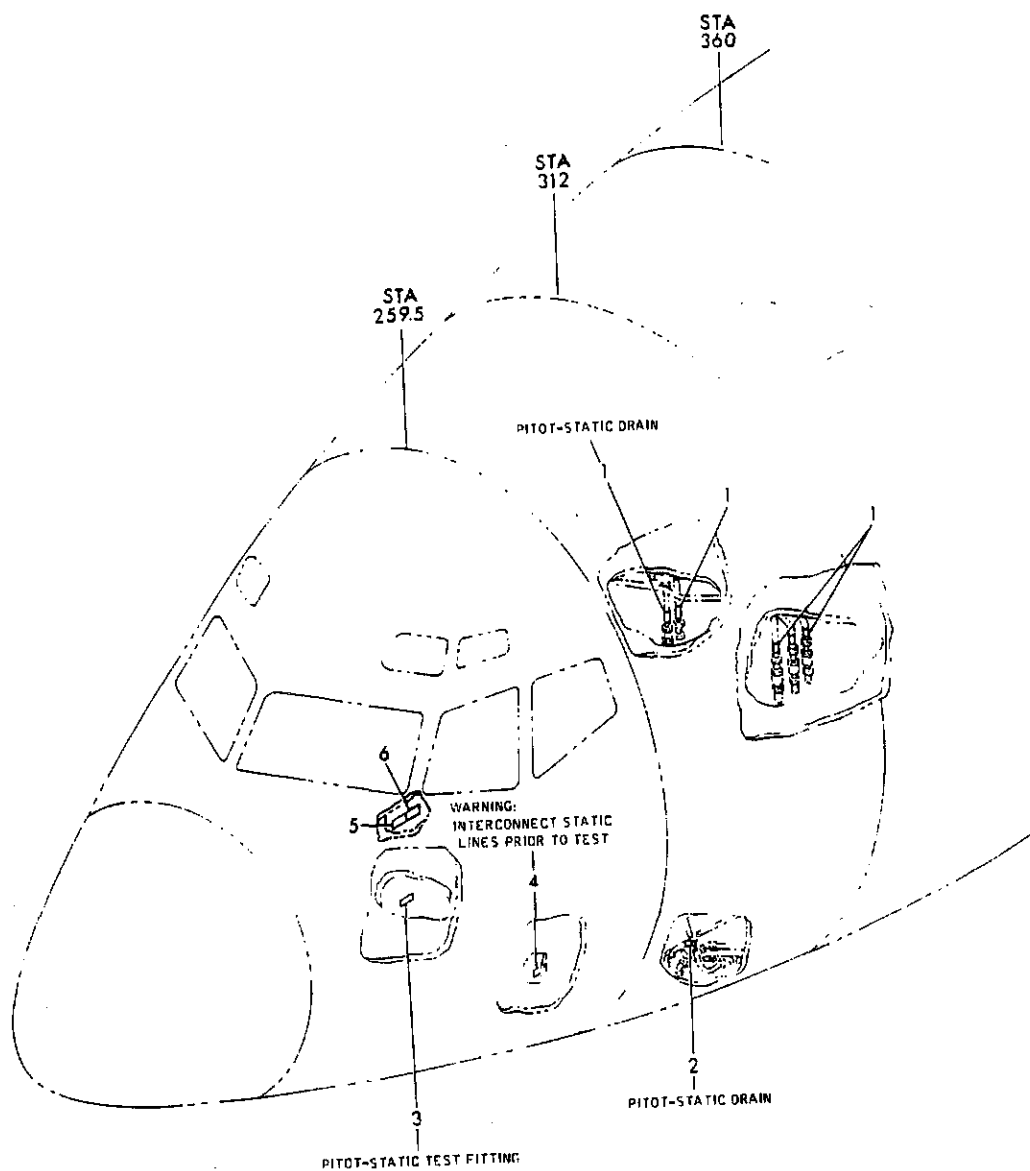 


FIGURE 178. METAL-CAL INSTL. PITOT STATIC TEST FITTING

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
178	65-23382-5	MARKER INSTL, PITOT-STATIC TEST FITTING							5199	RF
		. MARKER INSTL, PITOT-STATIC TEST FITTING (SEE 34-6, . .							5199	
		FIG. 29E, ITEM 236A)								
		. . MARKER-ALUMINUM FOIL, CAPT. STATIC DRAIN.							5199	
5	BAC27DCC345	. . MARKER-ALUMINUM FOIL, F/O. DRAIN.							5199	1
6	BAC27DCC346								5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

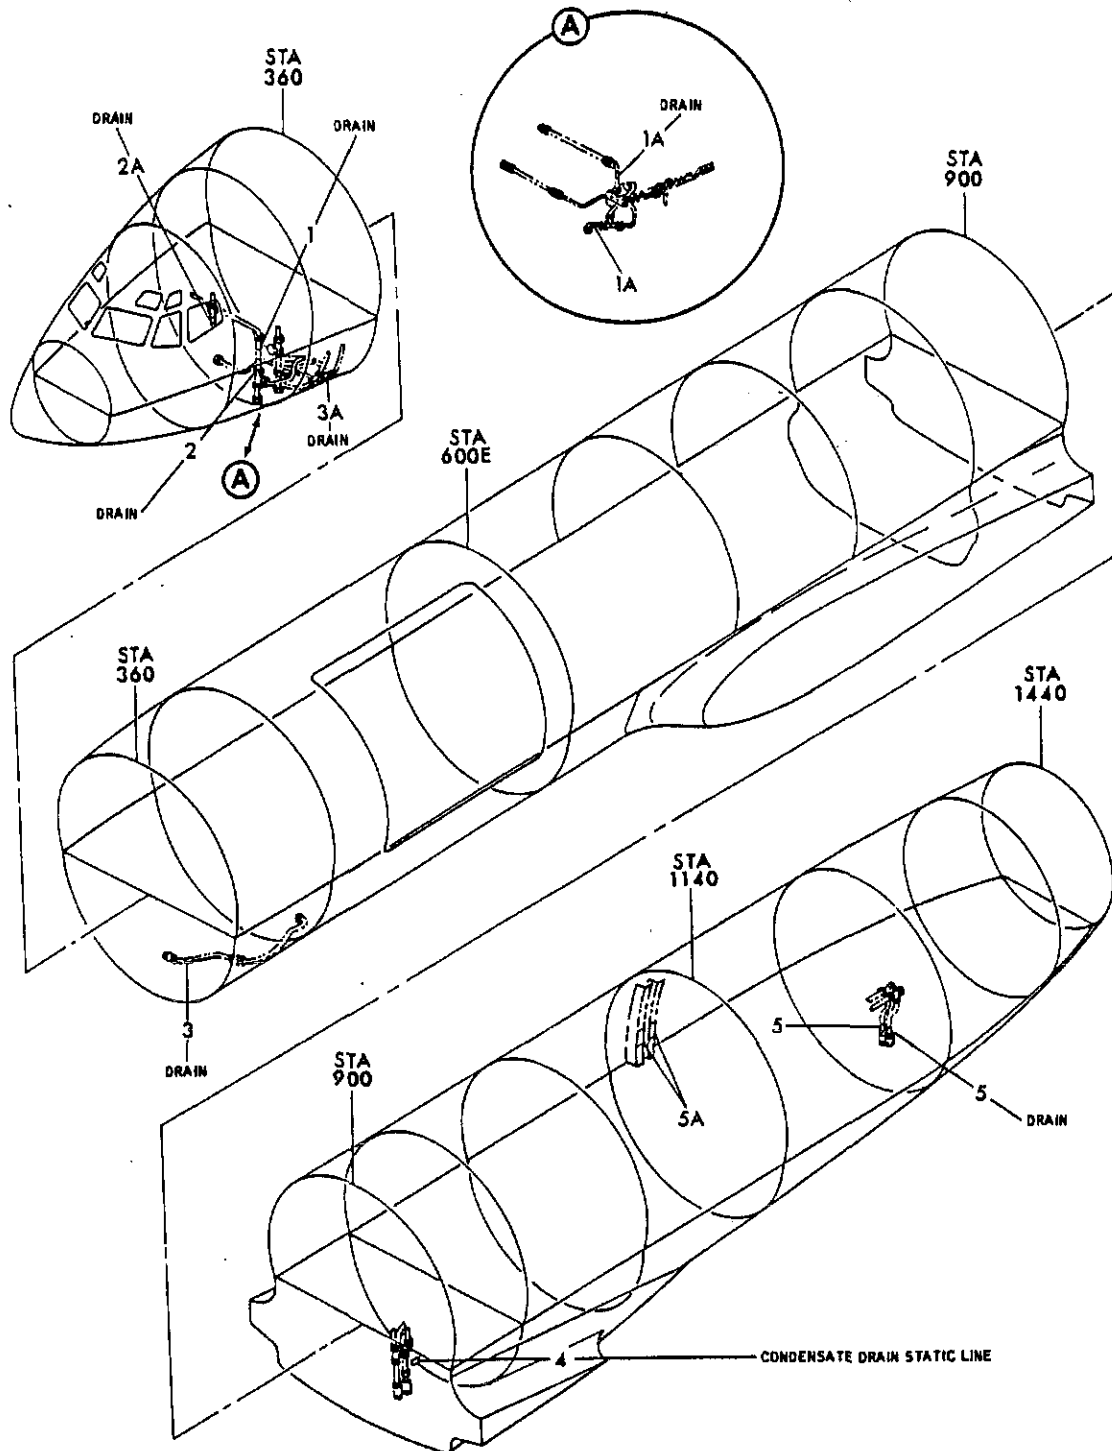 


FIGURE 179. SCOTCH-CAL INSTL, STATION 312, 380 AND 1320 PITOT-STATIC DRAIN
METAL-CAL INSTL, SECTION 41 LOWER PITOT-STATIC DRAIN
METAL-CAL INSTL, LH MAIN WHEEL WELL PITOT-STATIC DRAIN

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 179	69-47924-3	SCOTCH-CAL INSTL, STATION 312 PITOT-STATIC DRAIN (SEE . 34-6, FIG. 29E, ITEM 233A, 34-6, FIG. 25A, ITEM 100 AND 34-7, FIG. 11B, ITEM 1)	5199	RF
R	69-47924-5	SCOTCH-CAL INSTL, STATION 380 PITOT-STATIC DRAIN (SEE . 34-7, FIG. 11B, ITEM 32 AND 34-7, FIG. 11C, ITEM 58)		RF
R	69-47924-6	SCOTCH-CAL INSTL, STATION 1320 PITOT-STATIC DRAIN (SEE 34-7, FIG. 11B, ITEM 88 AND 34-7, FIG. 11C, ITEM 126)	0150	RF
R	69-47924-7	SCOTCH-CAL INSTL, STATION 312 PITOT-STATIC DRAIN (SEE . 34-7, FIG. 11C, ITEM 1)	0150	RF
R	69-17953-2	MARKER INSTL-ALUMINUM FOIL, LH MAIN WHEEL WELL DRAIN. . (SEE 34-7, FIG. 11B, ITEM 32 AND 34-7, FIG. 11C, ITEM 59)	0150	RF
R	69-17953-5	MARKER INSTL-ALUMINUM FOIL, SECTION 41 LOWER PITOT- . STATIC DRAIN (SEE 34-7, FIG. 11C, ITEM 2)	0150	RF
R	1 BACM906J	. SCOTCH-CAL, DRAIN (USED ON 69-17953-5).	0150	1
R	1A BACM906J	. SCOTCH-CAL, DRAIN (USED ON 69-47924-3).	5199	1
R	2 BACM906J	. SCOTCH-CAL, DRAIN (USED ON 69-47924-7).	0150	1
R	3 BACM10L21-2AD	. MARKER-ALUMINUM FOIL, DRAIN (USED ON 69-47924-5). . .		1
R	4 BACM10L21-2AD	. MARKER-ALUMINUM FOIL, CONDENSATE DRAIN STATIC LINE. . (USED ON 69-17953-2, -17)		1
R	5 BACM906J	. SCOTCH-CAL, DRAIN (USED ON 69-47924-6).	0150	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

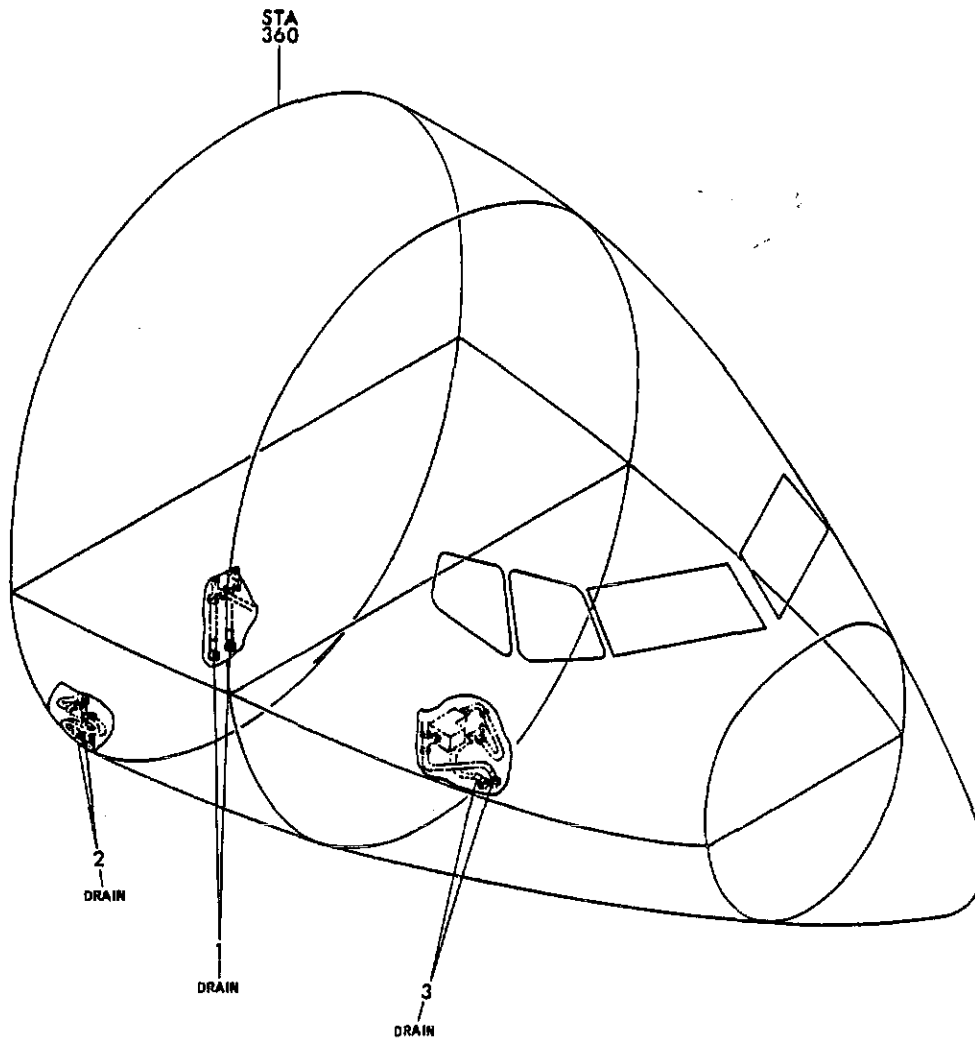 


FIGURE 179B. SCOTCH-CAL INSTL, STATIC DRAIN

DETAILED PARTS LIST
11-02-1798
PAGE 0

11-02-1798

NOV 21/90

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
1798	69-47924-9	SCOTCH-CAL INSTL, PITOT-STATIC DRAIN (SEE 34-6, FIG.. . 29E, ITEM 233B)							5199	1
	69-47924-10	SCOTCH-CAL INSTL, PITOT-STATIC DRAIN (SEE 34-6, FIG.. . 29E, ITEM 235)							5199	1
	1 BACM9D6J	. SCOTCH-CAL, DRAIN (USED ON 69-47924-9).							5199	2
	2 BACM9D6J	. SCOTCH-CAL, DRAIN (USED ON 69-47924-10 AND -12) . . .							5199	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

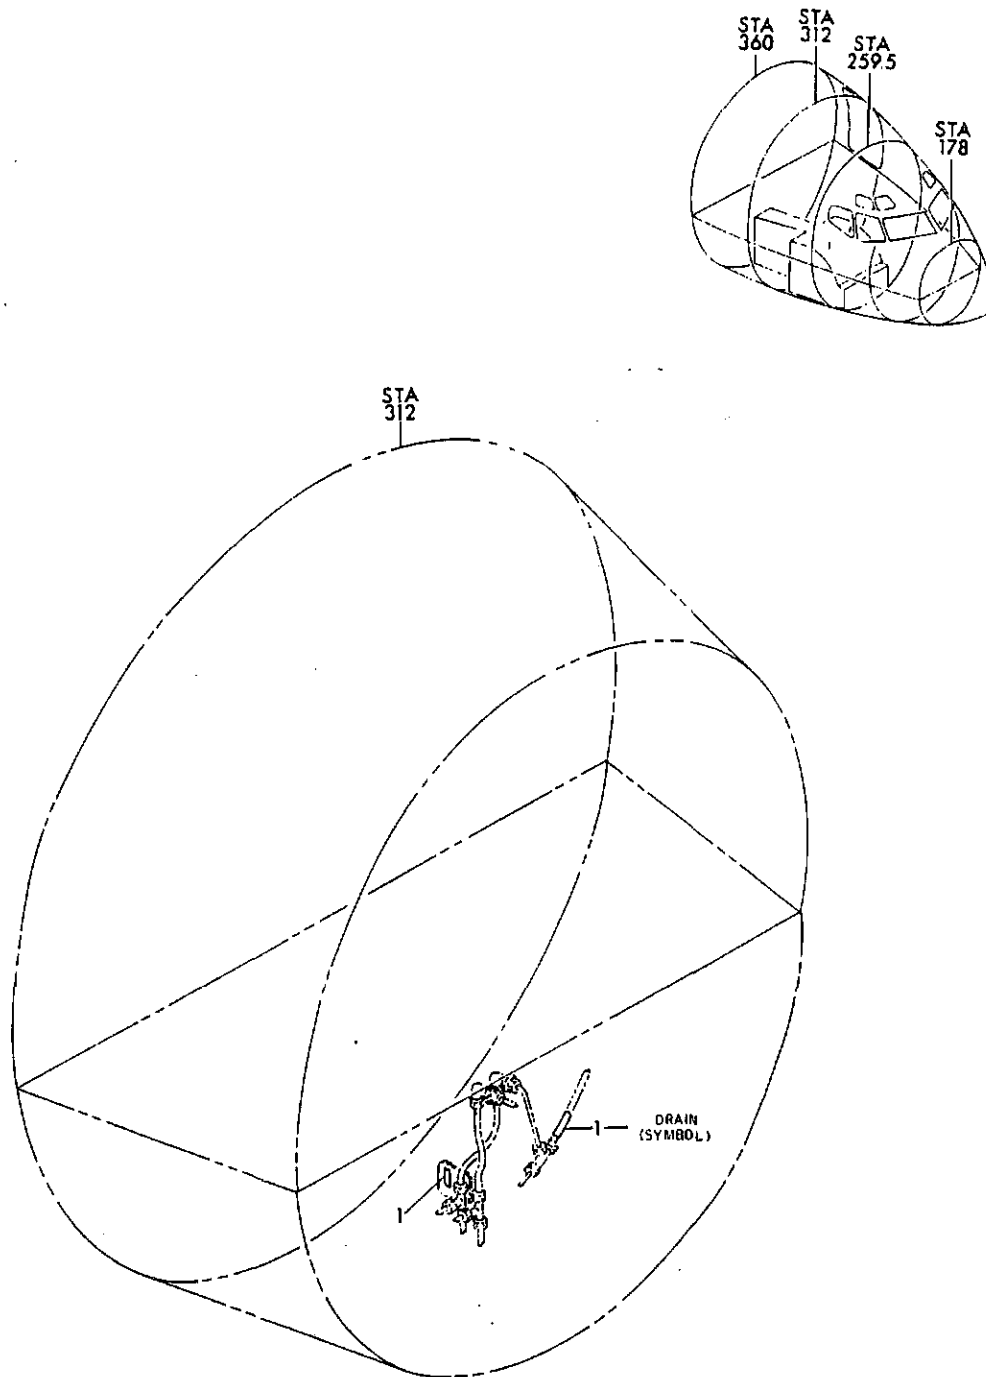 


FIGURE 179C. METAL-CAL INSTL, PITOT-STATIC DRAIN

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R	179C	69-17953-4	METAL-CAL INSTL, PITOT-STATIC DRAIN (SEE 34-6, FIG.							0150	RF
		69-17953-1	30E, ITEM 114A) METAL-CAL INSTL, PITOT-STATIC DRAIN (SEE 34-6, FIG.							0150	RF
	1	BACM9D6J	30E, ITEM 114) . SCOTCH-CAL, DRAIN							0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

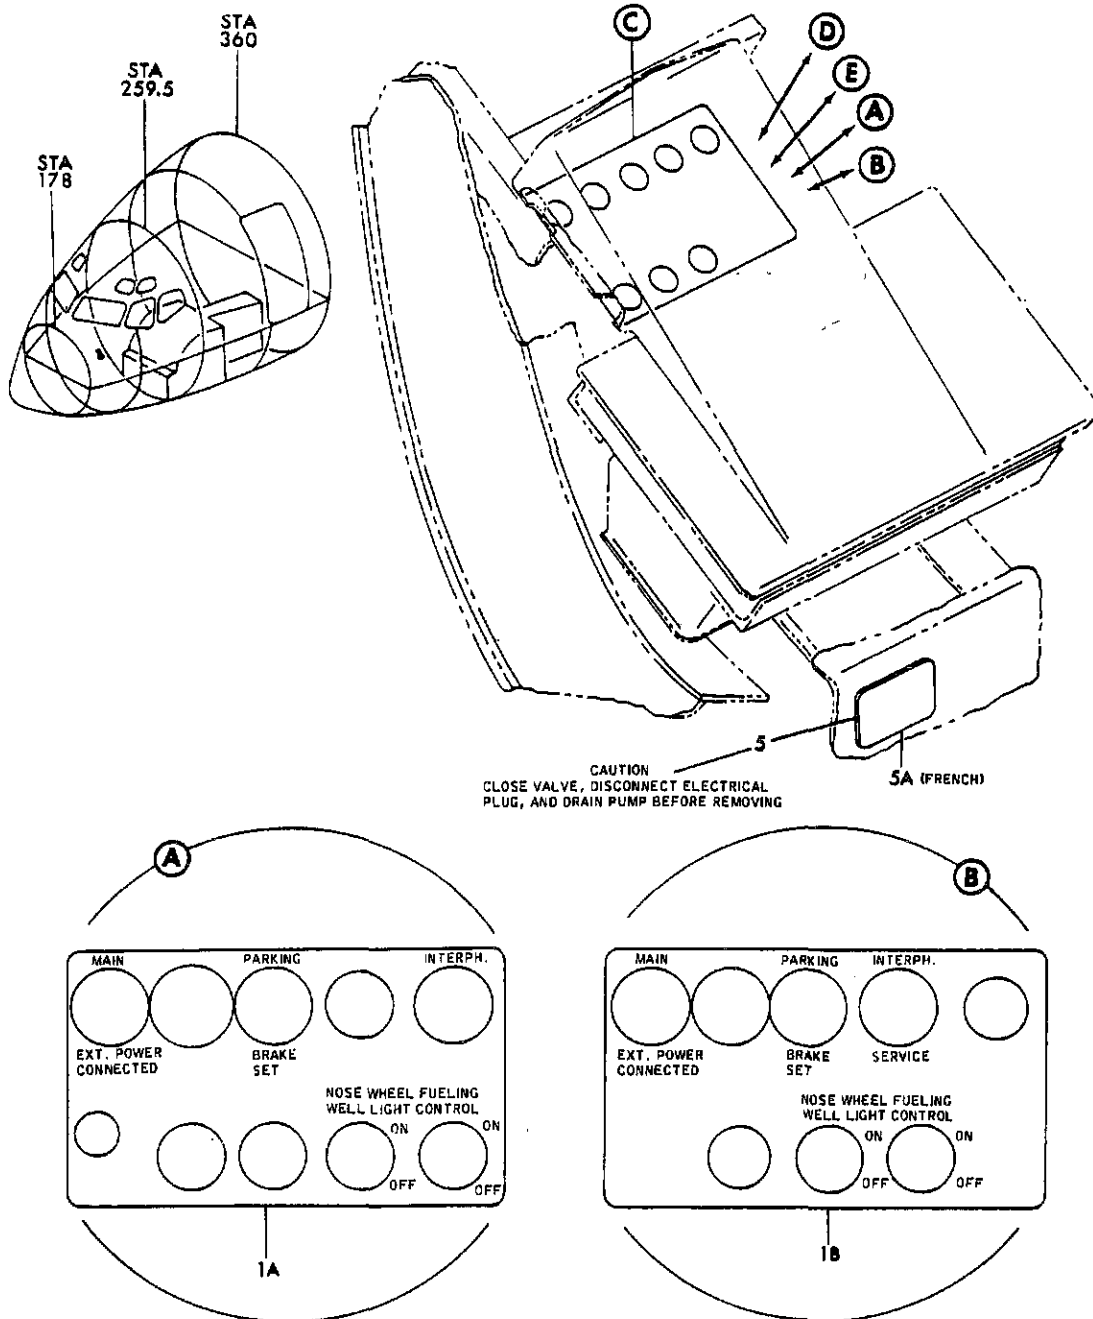 


FIGURE 181A. RECEPTACLE INSTL, EXTERNAL POWER (REQUIRED PLACARDS ONLY) (SHEET 1)

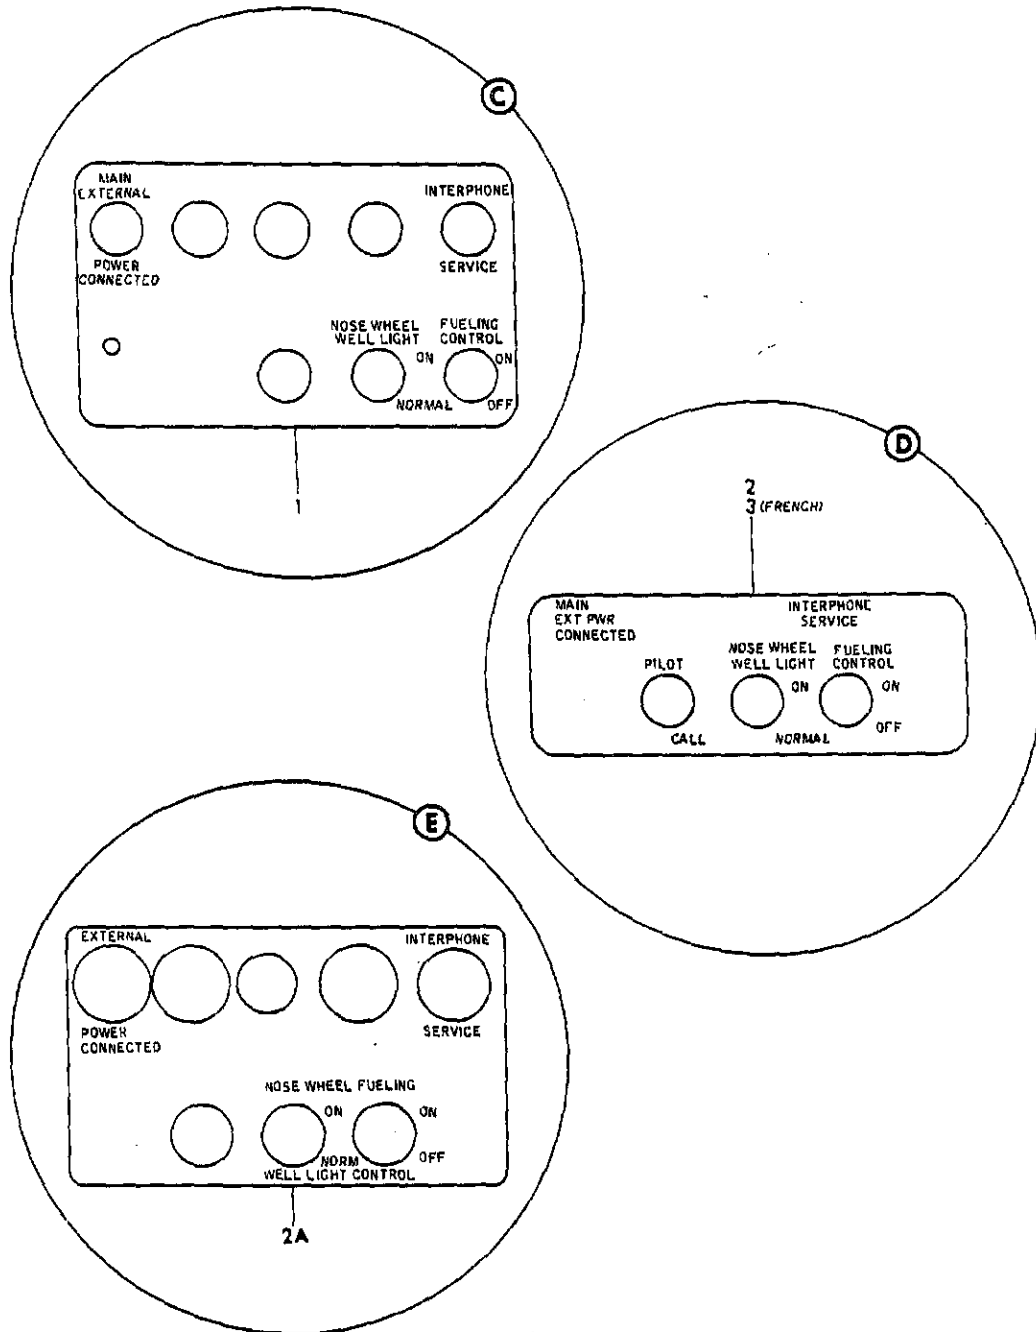 


FIGURE 181A RECEPTACLE INSTL, EXTERNAL POWER (REQUIRED PLACARDS ONLY) (SHEET 2)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1234567	NOMENCLATURE	EFF	UNITS
				FROM TO	PER ASSY
R R R R R R	181A	65-45088	RECEPTACLE INSTL, EXTERNAL POWER (REQUIRED PLACARDS . . ONLY (SEE 24-3, FIG. 1A, ITEM 27, 24-3, FIG. 1B, ITEM 26 AND 24-3, FIG. 1C, ITEM 23)	0150	RF
		65-45088	RECEPTACLE INSTL, EXTERNAL POWER (REQUIRED PLACARDS . . ONLY) (VARIABLE DWG; 65-45088-5001) (SEE 24-3, FIG. 1A, ITEM 27, 24-3, FIG. 1B, ITEM 26 AND 24-3, FIG. 1C, ITEM 23)	5199	RF
	2	BACMIOM1BBW	. MARKER-ALUMINUM FOIL, INSTRUCTIONS. FOR REFERENCE TO OTHER RECEPTACLE DETAILS, SEE NHA. .		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

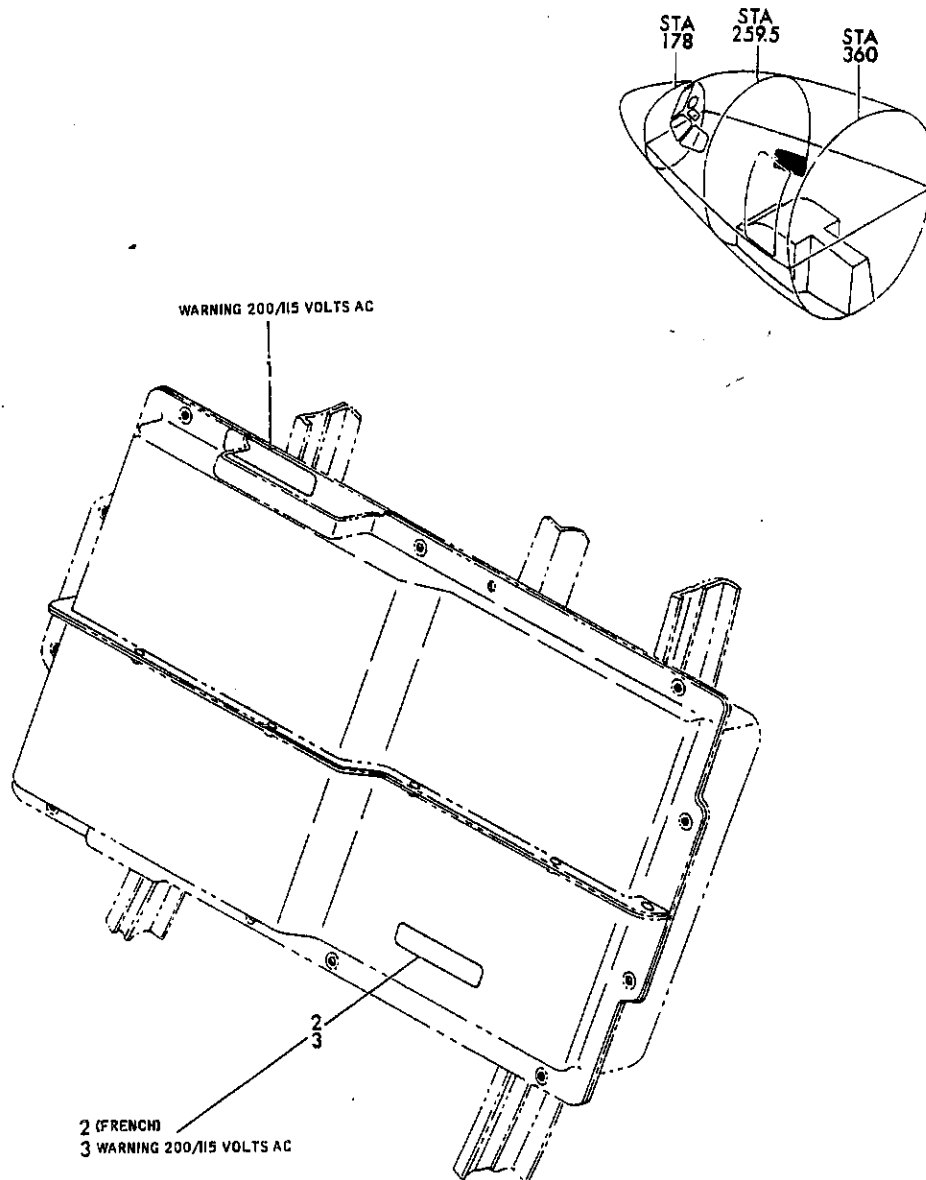 


FIGURE 182. SHIELD ASSY, STATION 243 J23 RELAY (REQUIRED PLACARDS ONLY)

707

STUDENT TRAINING OVERHAUL MANUAL (UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R R R R	182	SHIELD ASSY, STATION 243 J23 RELAY (REQUIRED PLACARDS .							0150	RF
		ONLY) (SEE 24-6, FIG. 42B, ITEM 1)								
	1	. MARKER-ALUMINUM FOIL, WARNING 200/115 VOLTS AC. . . .							0150	1
		. FOR REFERENCE TO OTHER SHIELD DETAILS, SEE NHA. . . .							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

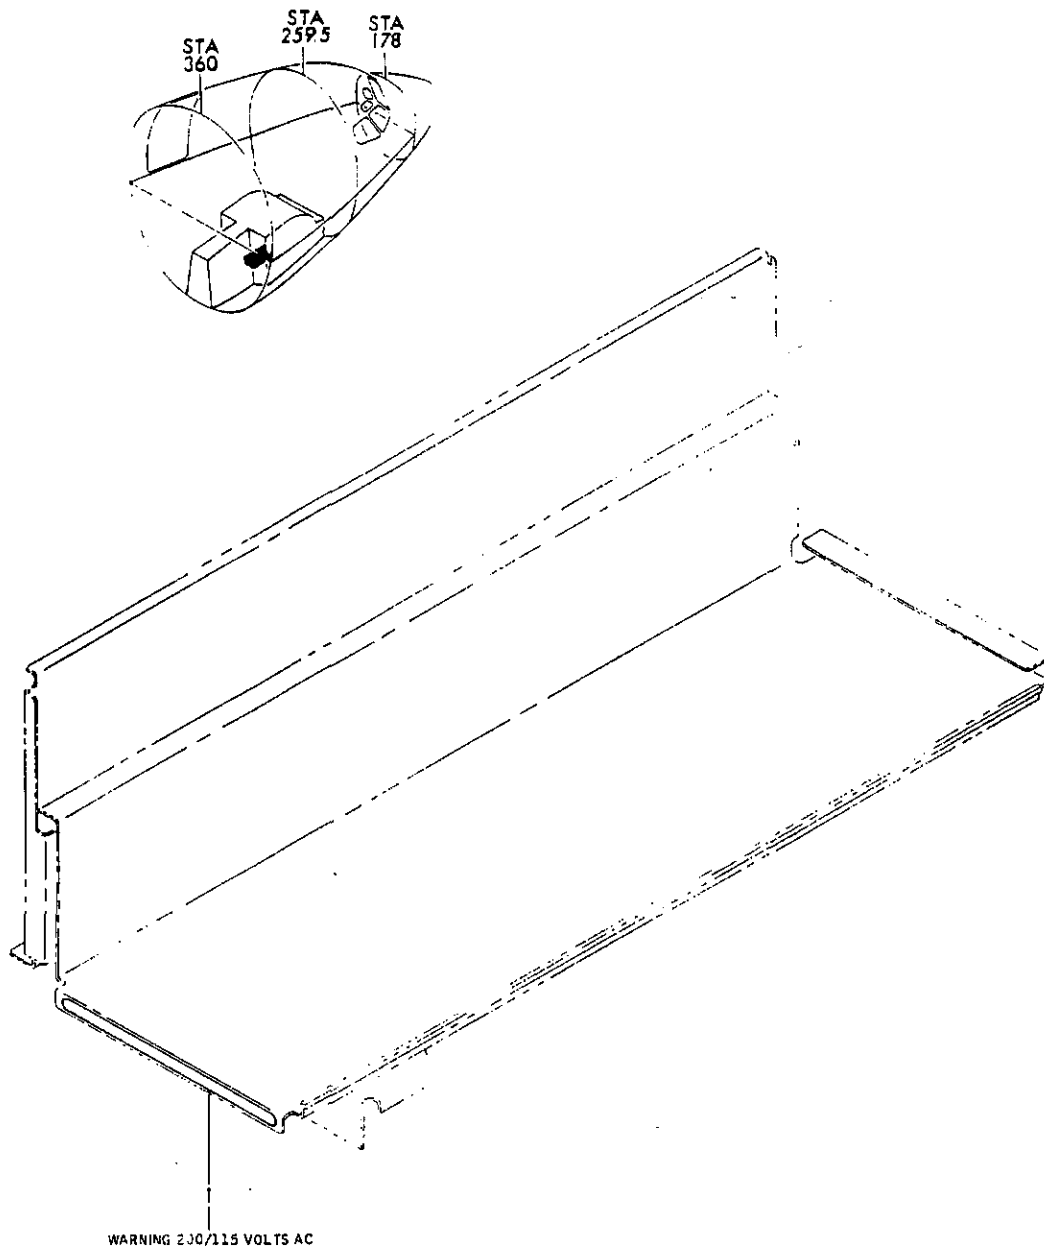 


FIGURE 183. TRAY INSTL, STATION 330 RJ29 SWITCHING RELAYS (REQUIRED PLACARDS ONLY)

DETAILED PARTS LIST
11-02-183
PAGE 0

11-02-183

NOV 21/90

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
183	65-77233-1	TRAY INSTL, STATION 330 RJ29 SWITCHING RELAYS (REQUIRED PLACARDS ONLY) (VARIABLE DWG;65-77233-5013) (SEE 24-3, FIG. 1C, ITEM 31)							5199	RF
1	65-77233-27	. TRAY ASSY, (REQUIRED PLACARDS ONLY)							5199	RF
	65-77233-18	. . TRAY ASSY, (REQUIRED PLACARDS ONLY)							5199	RF
	BAC27CEE576	. . . MARKER-ALUMINUM FOIL, WARNING 200/115 VOLTS AC.							5199	1
		. FOR REFERENCE TO OTHER TRAY DETAILS, SEE NHA.							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

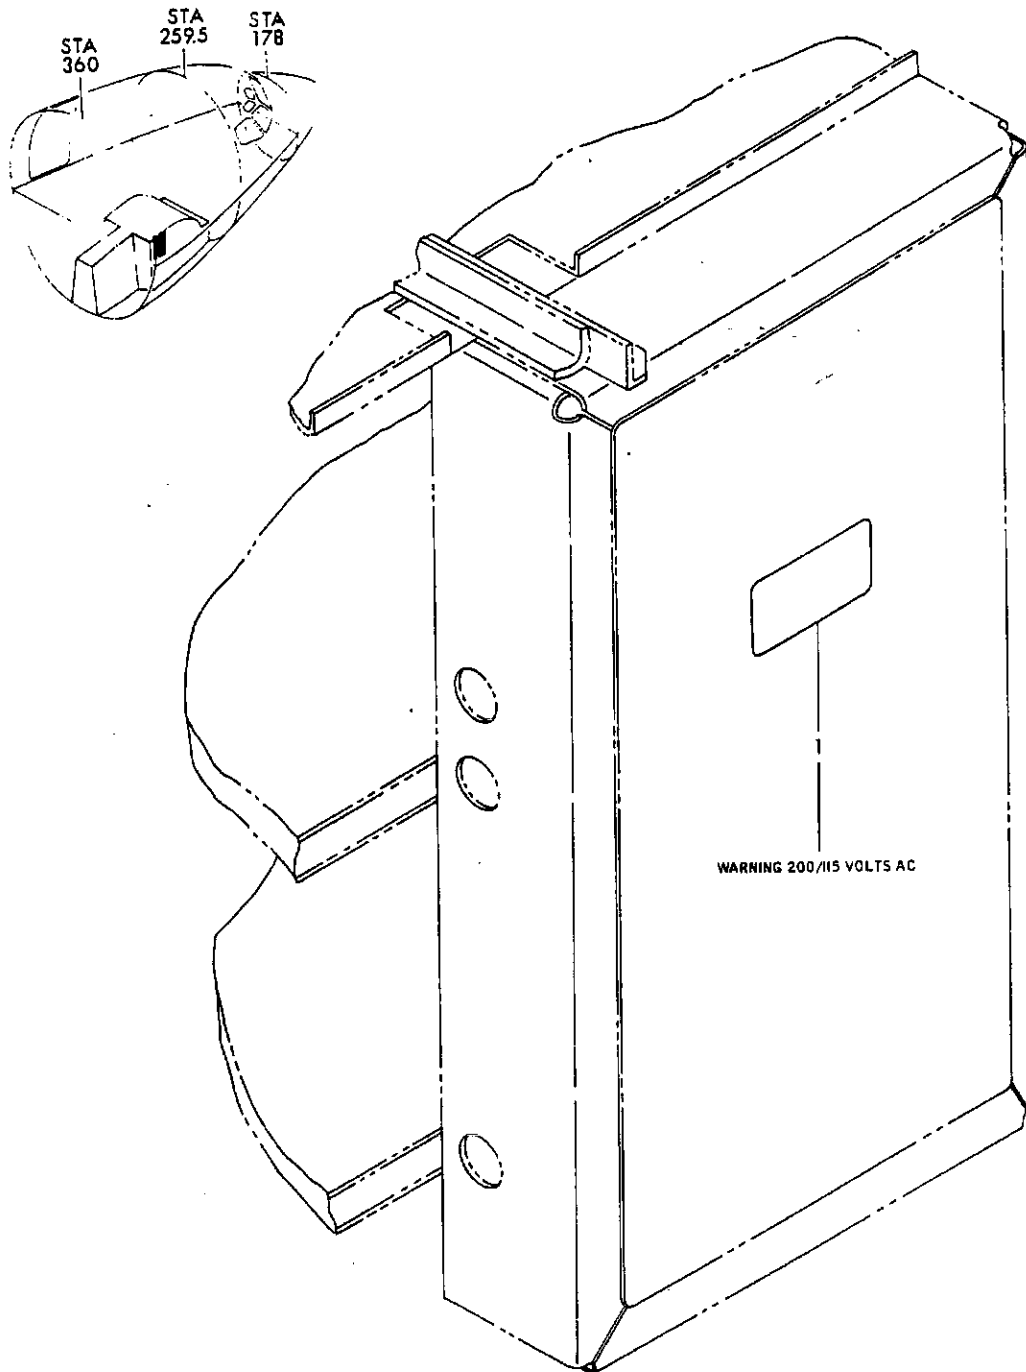 


FIGURE 184. RACK ASSY, STATION 328 INERTIAL NAVIGATION SYSTEM RJ28 (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
184	65-69909-38	RACK ASSY, STATION 328 INERTIAL NAVIGATION SYSTEM RJ28 (REQUIRED PLACARDS ONLY) (SEE 34-8, FIG. 32, ITEM 24)							5199	RF
1	BACM10W31-2UT	. MARKER-ALUMINUM FOIL, WARNING 200/115 VOLTS AC. . . .							5199	1
		. FOR REFERENCE TO OTHER RACK DETAIL, SEE NHA							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

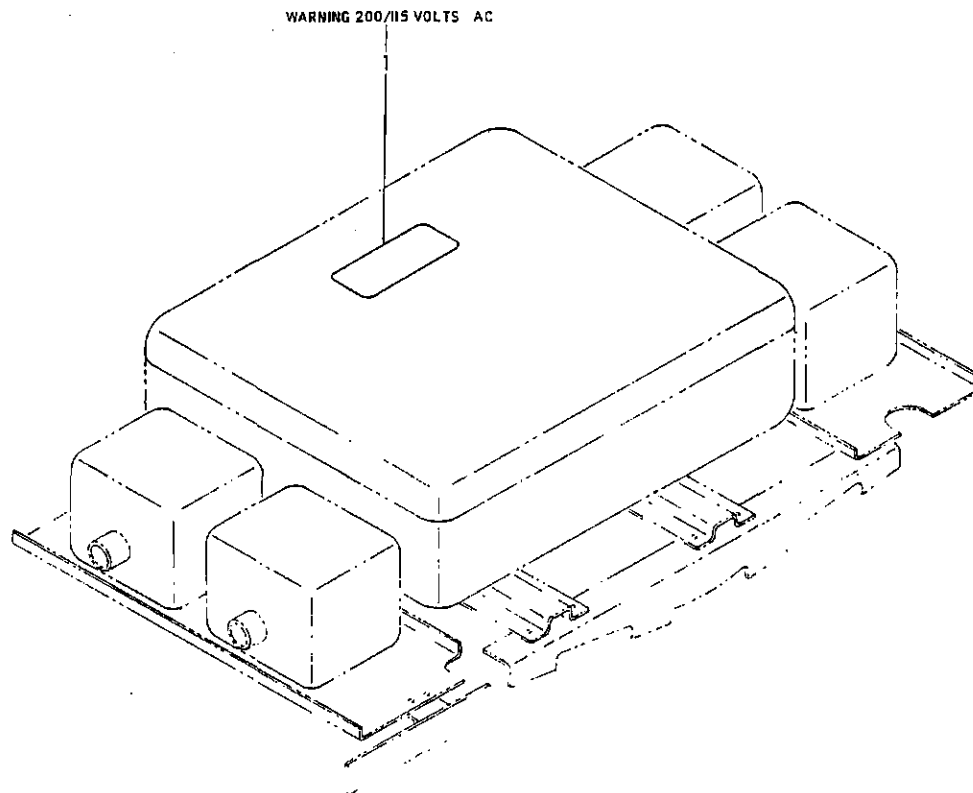 
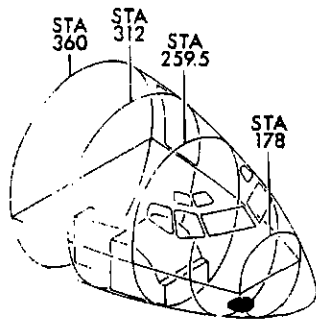 


FIGURE 186. COVER ASSY, ATTITUDE WARNING AND DIMMING PALLAST RJ9 SHEILD (REQUIRED PLACARDS ONLY)

DETAILED PARTS LIST
11-02-186
PAGE 0

11-02-186

NOV 21/90

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
186	65-51837-2	COVER ASSY, ATTITUDE WARNING AND DIMMING BALLAST RJ9. . SHIELD (REQUIRED PLACARDS ONLY) (SEE 34-10, FIG. 16B, ITEM 8, 34-10, FIG. 16C, ITEM 8, 34-10, FIG. 16D, ITEM 7, 34-10, FIG. 16E, ITEM 8, 34-10, FIG. 16F, ITEM 8 AND 34-10, FIG. 16G, ITEM 8) . MARKER-ALUMINUM FOIL, WARNING 200/115 VOLTS AC. FOR REFERENCE TO OTHER COVER DETAILS, SEE NHA								RF
1	BACM10W31-2UT									1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

707

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

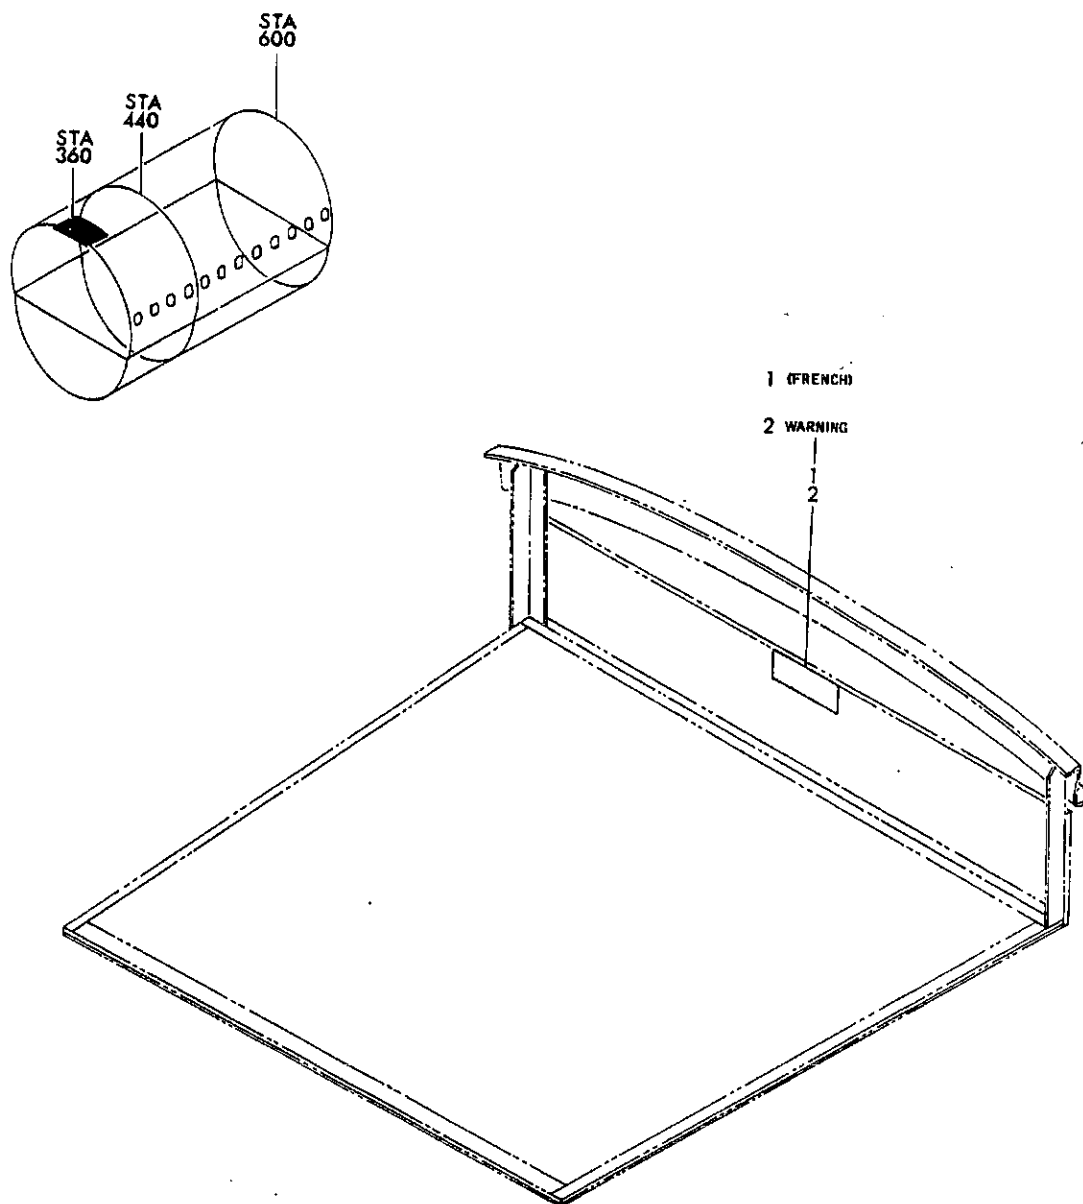 


FIGURE 194. BULKHEAD ASSY, STATION 380 (REQUIRED PLACARDS ONLY)

STUDENT TRAINING OVERHAUL MANUAL
(UNCONTROLLED - USE ON LIVE AIRCRAFT PROHIBITED)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
194	65-11064-13	BULKHEAD ASSY, STATION 380 (REQUIRED PLACARDS ONLY) . .							0101	RF
		(ADDED BY SB 2564) (SEE 25-18, FIG. 65, ITEM 1D AND 65B, ITEM 5)								
	65-11064-26	BULKHEAD ASSY, STATION 380 (REQUIRED PLACARDS ONLY) . .							0101	RF
2		(DELETED BY SB 2564) (SEE 25-18, FIG. 65, ITEM 1D AND 65, ITEM 5)								
	BAC27CPA29	. DECAL, WARNING (ADDED BY SB 2564)							0101	1
		. FOR REFERENCE TO OTHER BULKHEAD DETAILS, SEE NHA. . .							0101	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										


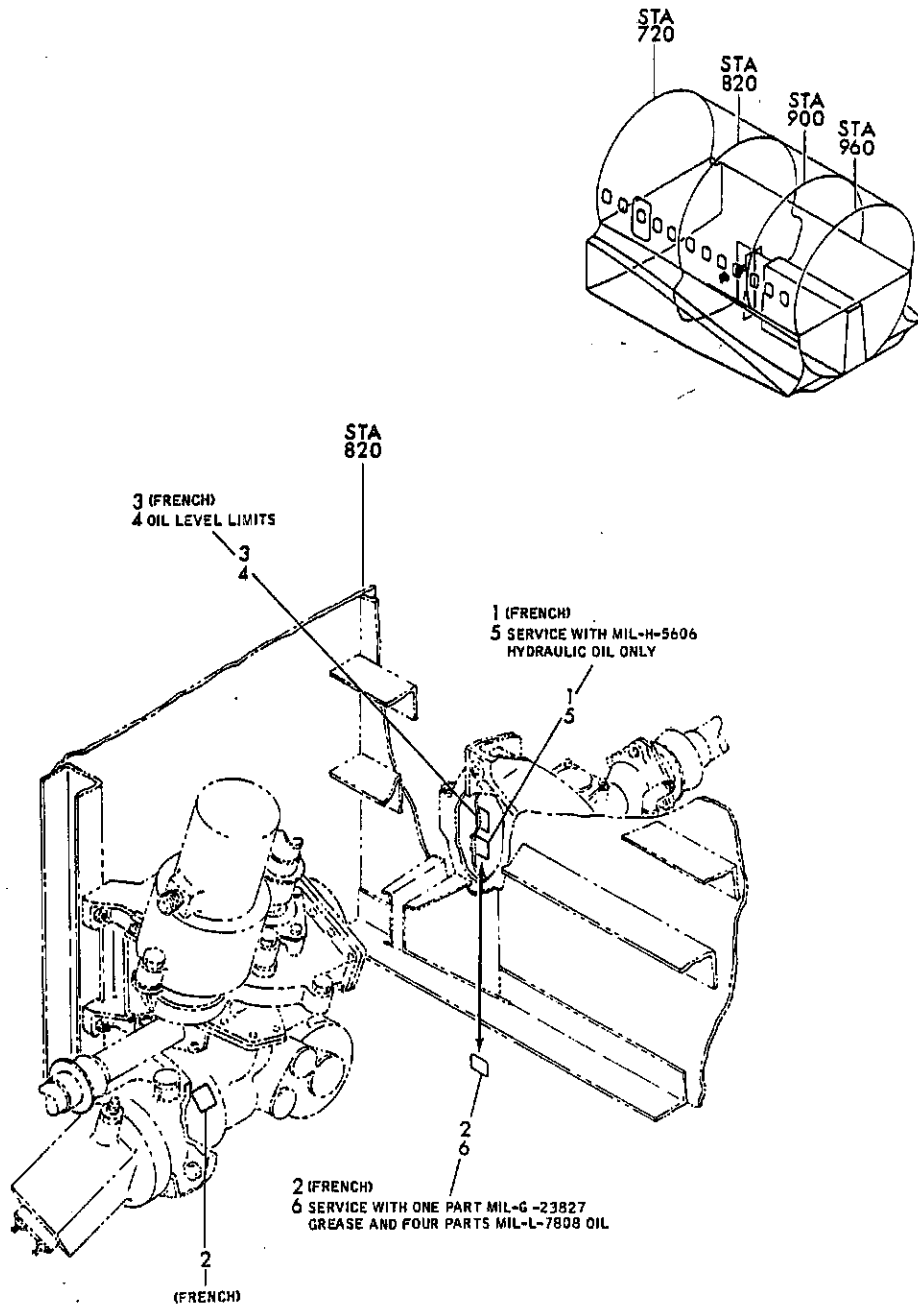 


FIGURE 201. POWER UNIT INSTL. INBOARD AND FILLET FLAP DRIVE (REQUIRED PLACARDS ONLY)

 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE						EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6			7
201	65-20847-1	POWER UNIT INSTL, INBOARD AND FILLET FLAP DRIVE (REQUIRED PLACARDS ONLY) (SEE 27-7, FIG. 29, ITEM 29)								RF
	5-87448-3007	. POWER UNIT ASSY, SECTION 53 (REQUIRED PLACARDS ONLY)								RF
4	BACM10L11-1AXT	. . MARKER-ALUMINUM FOIL, OIL LEVEL LIMITS.								1
6	BACM10L6R	. . MARKER-ALUMINUM FOIL, SERVICE WITH ONE PART MIL-G-23827 GREASE AND FOUR PARTS MIL-L-7808 OIL								1
		. FOR REFERENCE TO OTHER POWER UNIT DETAILS, SEE NHA. .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

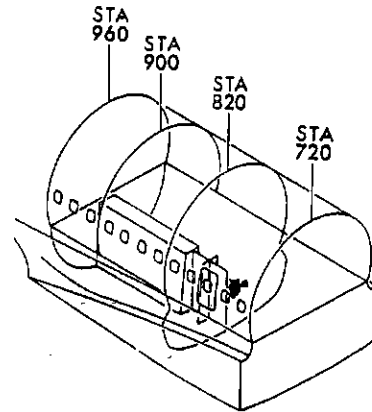

2 SERVICE WITH MIL-H-5606 HYDRAULIC OIL ONLY
3 SERVICE WITH ONE PART MIL-G-23827
GREASE AND FOUR PARTS MIL-L-7808 OIL

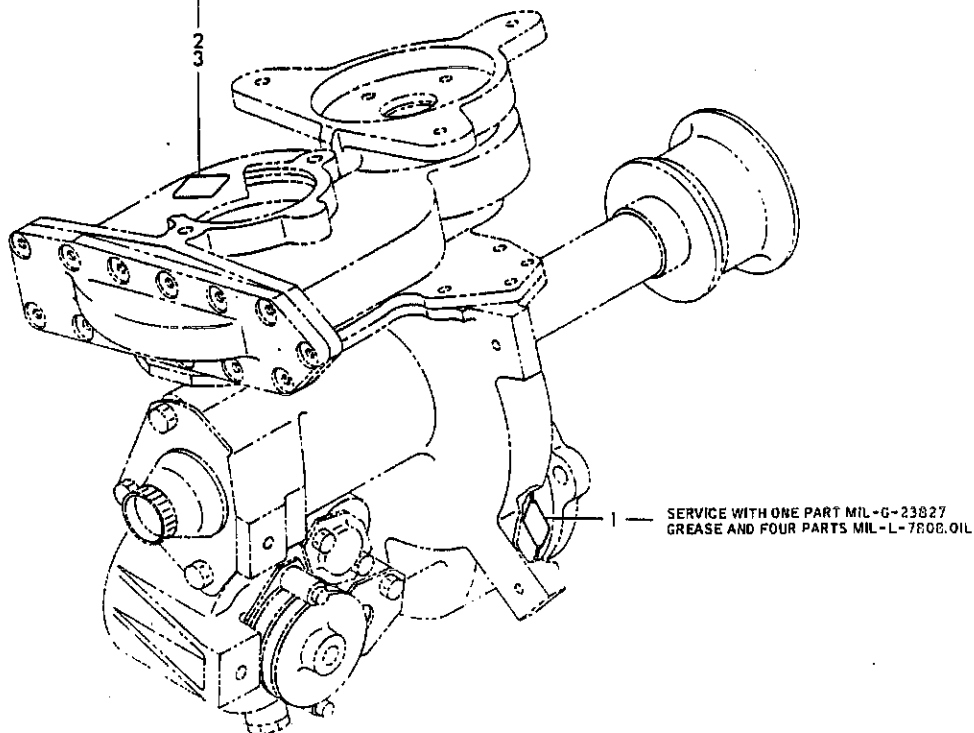 


FIGURE 202. POWER UNIT ASSY, INBOARD AND FILLET FLAP DRIVE (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R R	202	65-20846-4	POWER UNIT ASSY, INBOARD AND FILLET FLAP DRIVE. (REQUIRED PLACARDS ONLY) (SEE 27-7, FIG. 35, ITEM 19) (OPTIONAL 65-20846-8)	0150 RF
		65-20846-8	POWER UNIT ASSY, INBOARD AND FILLET FLAP DRIVE. (REQUIRED PLACARDS ONLY) (SEE 27-7, FIG. 35, ITEM 19) (OPTIONAL TO 65-20846-4)	0150 RF
		65-20846-10	POWER UNIT ASSY, INBOARD AND FILLET FLAP DRIVE. (OPTIONAL 65-20846-8)	5199 1
		65-20846-8	POWER UNIT ASSY, INBOARD AND FILLET FLAP DRIVE. (REQUIRED PLACARDS ONLY) (SEE 27-7, FIG. 35, ITEM 19) (OPTIONAL TO 65-20846-10)	5199 RF
	1	BACM10L6R	. MARKER-ALUMINUM FOIL, SERVICE WITH ONE PART MIL-G-23827 GREASE AND FOUR PARTS MIL-L-7808 OIL	1
	3	BACM10L6R	. MARKER-ALUMINUM FOIL, SERVICE WITH ONE PART MIL-G-23827 GREASE AND FOUR PARTS MIL-L-7808 OIL . FOR REFERENCE TO OTHER POWER UNIT DETAILS, SEE NHA. .	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

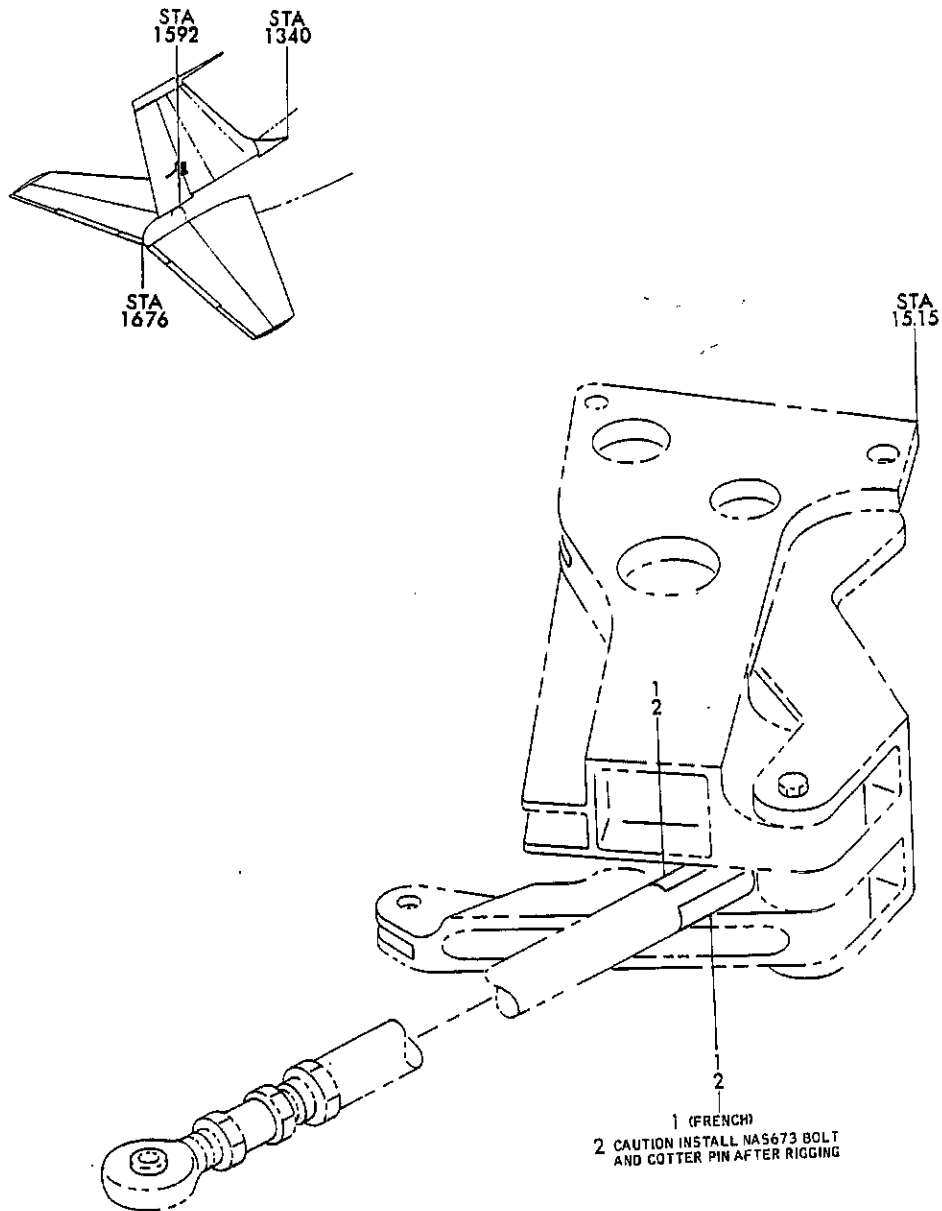 


FIGURE 204. FEEL MECHANISM INSTL, RUDDER (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
204	65-41101-3	FEEL MECHANISM INSTL, RUDDER (REQUIRED PLACARDS ONLY) .								RF
		(SEE 27-9, FIG. 14A, ITEM 24)								
2	69-47929-1	. ROD ASSY, (REQUIRED PLACARDS ONLY).								RF
	BACM10C378	. . MARKER-ALUMINUM-FOIL, CAUTION								2
		. . FLIGHT CONTROL, (SEE 27-9, FIG. 14B).								
		. FOR REFERENCE TO OTHER FEEL MECHANISM DETAILS, SEE. .								
		NHA								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

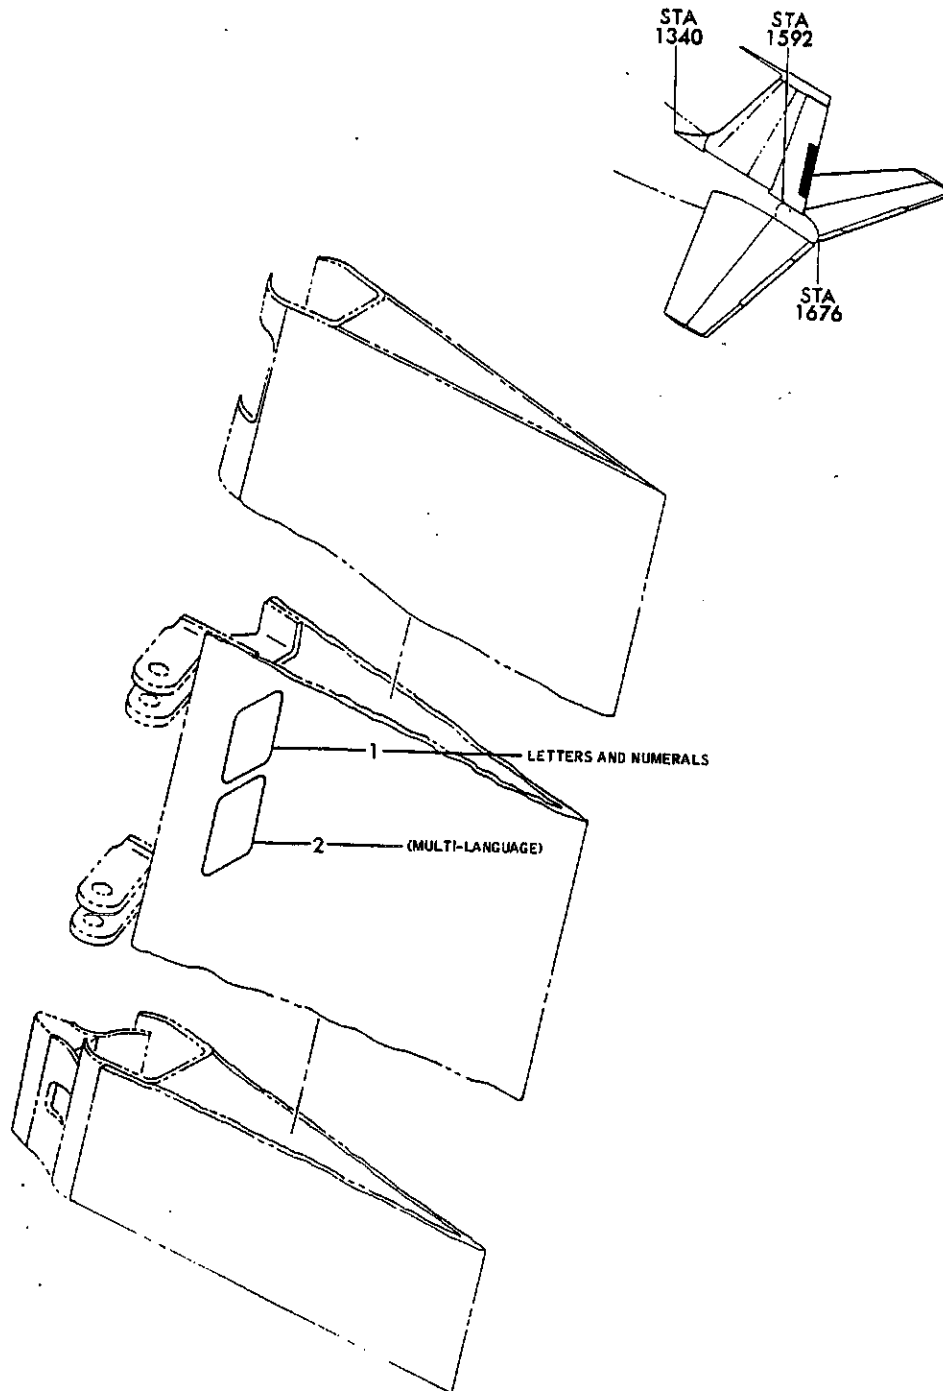 


FIGURE 205. TAB INSTL. RUDDER CONTROL (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
R R R R R	205	65-5345-12	TAB ASSY, RUDDER CONTROL (FOR OPTIONAL PAINTED SPARE. . SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (SEE 27-8, FIG. 3, ITEM 1F AND 27-8, FIG. 3A, ITEM 5)	0151 RF
		65-5345-19	TAB ASSY, RUDDER CONTROL (FOR OPTIONAL PAINTED SPARE. . SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (SEE 27-8, FIG. 3, ITEM 1F)	5299 RF
	1	BACM10M11-1AZN	. MARKER-ALUMINUM FOIL, LETTERS AND NUMERALS.	1
	2	BACM10L20-1CFZ	. MARKER-ALUMINUM FOIL, (MULTI-LANGUAGE). FOR REFERENCE TO OTHER TAB DETAILS, SEE NHA	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/91

11-02-205

DETAILED PARTS LIST
11-02-205
PAGE 1

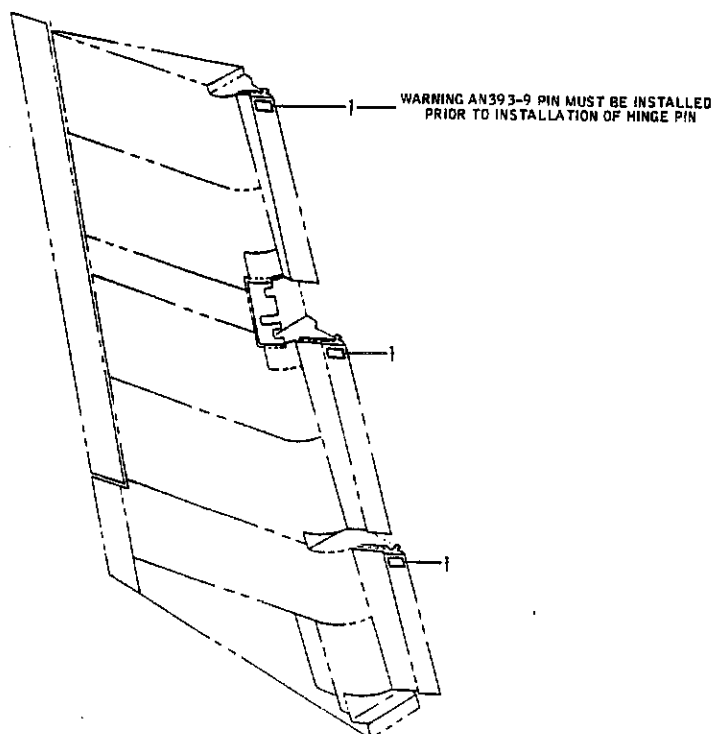 
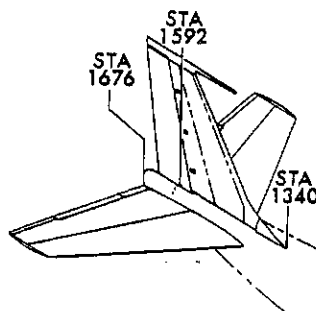 


FIGURE 206. SKIN INSTL. RUDDER NOSE (REQUIRED PLACARDS ONLY)

BOEING

707
Intercontinental

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
206	65-4043	SKIN INSTL, RUDDER NOSE (REQUIRED PLACARDS ONLY) (SEE .								RF
		27-8, FIG. 3, ITEM 36 AND FIG. 3A, ITEM 53)								
1	BACM10W31-2WY	. MARKER-ALUMINUM FOIL, WARNING AN393-9 PIN MUST BE . .								3
		INSTALLED PRIOR TO INSTALLATION OF HINGE PIN (RH)								
		. FOR REFERENCE TO OTHER SKIN DETAILS, SEE NHA.								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										


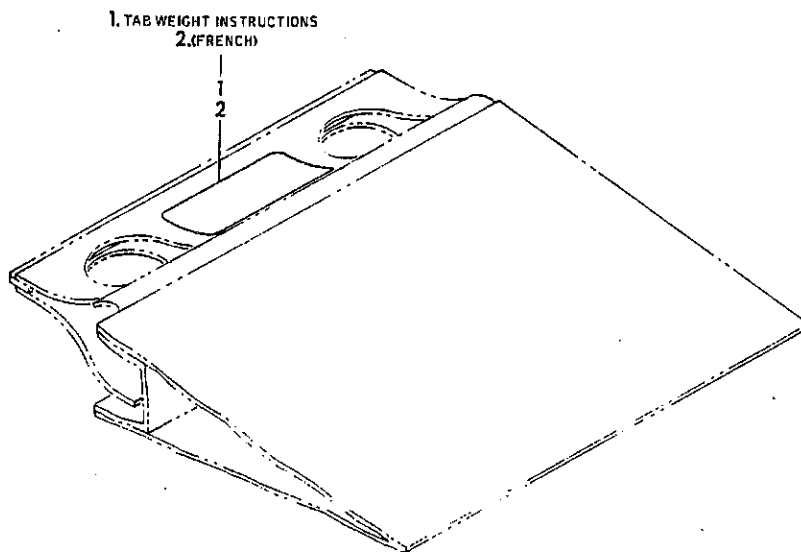 


FIGURE 208. TAB ASSY, ELEVATOR CONTROL (REQUIRED PLACARDS ONLY)

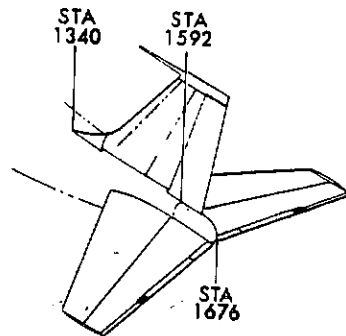 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
208	65-5347-15	TAB ASSY, ELEVATOR CONTROL (REQUIRED PLACARDS ONLY) . . (SEE 27-10, FIG. 9, ITEM 11)								RF
1	BACM10L21-1BSR	. METAL-CAL, TAB WEIGHT INSTRUCTIONS. FOR REFERENCE TO OTHER TAB DETAILS, SEE NHA								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										


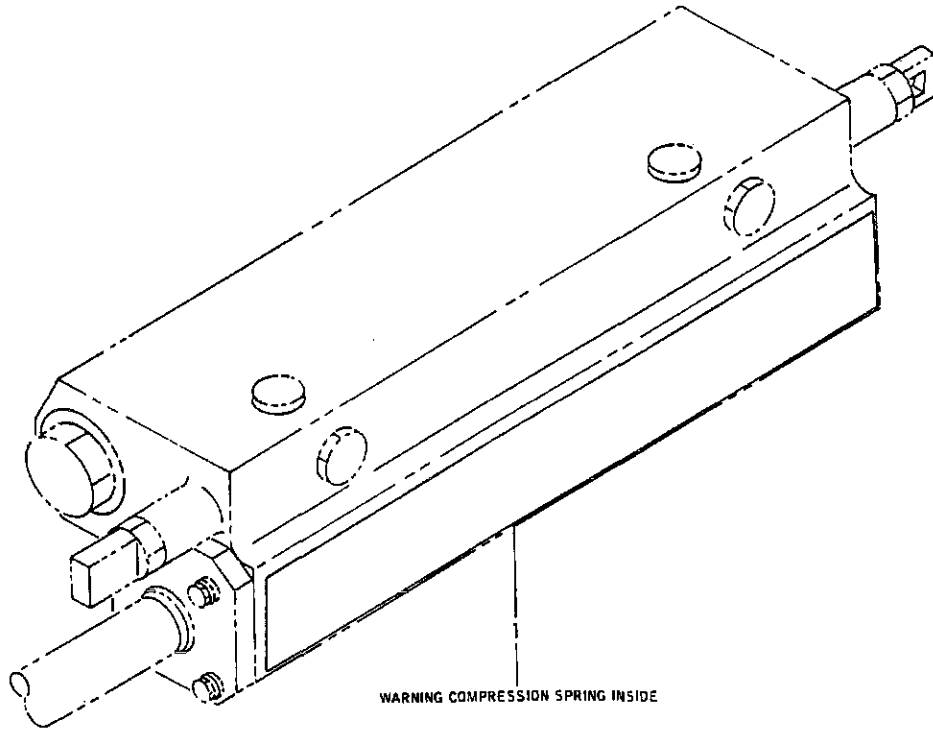 


FIGURE 211. DAMPER ASSY, RUDDER CONTROL TAB (REQUIRED PLACARDS ONLY)

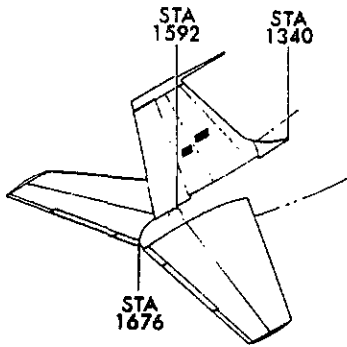 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE						EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6		
211	65-8353-7	DAMPER ASSY, RUDDER CONTROL TAB (REQUIRED PLACARDS. . .							RF
		ONLY) (SEE 27-9, FIG. 30A, ITEM 77)							
1	BACM10W21-2RY	. MARKER-ALUMINUM FOIL, WARNING COMPRESSION SPRING. . .							1
		INSIDE							
		. FOR REFERENCE TO OTHER DAMPER DETAILS, SEE NHA. . .							
MISSING ITEM NUMBERS ARE NOT APPLICABLE									


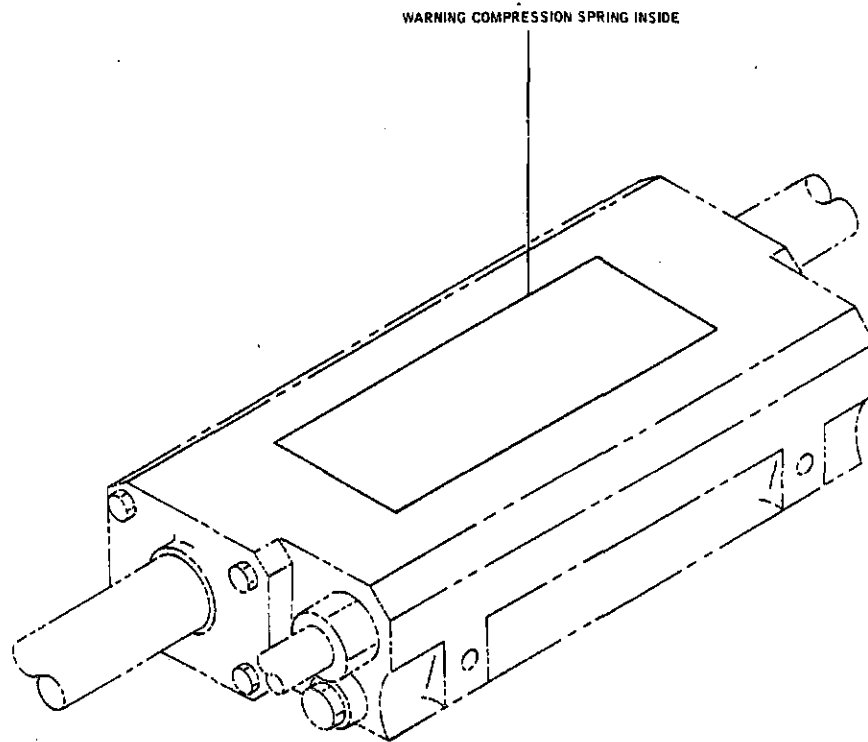 


FIGURE 212. DAMPER ASSY, RUDDER FLUTTER (REQUIRED PLACARDS ONLY)

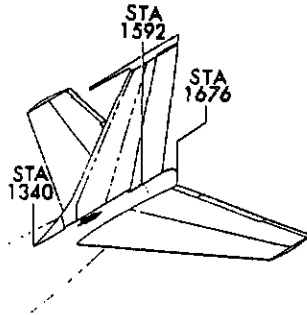 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
212	65-5947-2	DAMPER ASSY, RUDDER FLUTTER (REQUIRED PLACARDS ONLY). . (SEE 27-9, FIG. 35, ITEM 3)								RF
1	BACM10W21-2RY	. MARKER-ALUMINUM FOIL, WARNING COMPRESSION SPRING. . . INSIDE								1
		. FOR REFERENCE TO OTHER DAMPER DETAILS, SEE NHA. . . .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

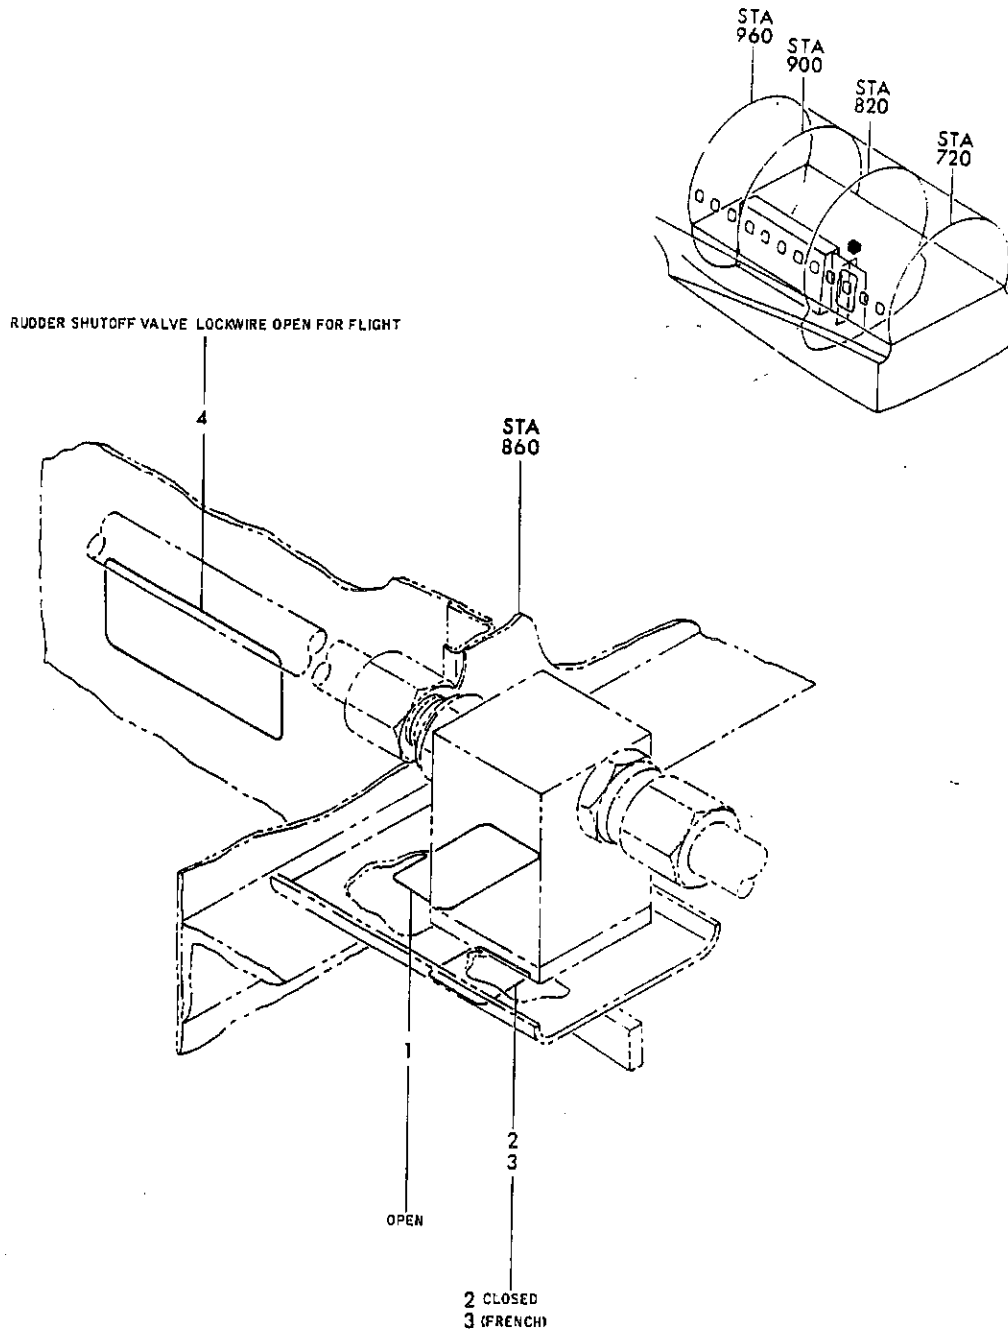 


FIGURE 214. VALVE INSTL, RUDDER SHUTOFF MANUALLY OPERATED (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
214	69-12378	VALVE INSTL, RUDDER SHUTOFF MANUALLY OPERATED (REQUIRED PLACARDS ONLY) (SEE 29-4, FIG. 13, ITEM 169, 24-9, FIG. 16, ITEM 118, 29-4, FIG. 14, ITEM 126, 29-4, FIG. 15, ITEM 133 AND 29-4, FIG. 17, ITEM 117) . MARKER-ALUMINUM FOIL, OPEN. MARKER-ALUMINUM FOIL, OPEN. MARKER-ALUMINUM FOIL, RUDDER SHUTOFF VALVE LOCKWIRE . OPEN FOR FLIGHT . FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA								RF
1	BACMIOL10-13BU									1
2	BACMIOL10-1BEC									1
4	BACMIOVZ1-2ANR									1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

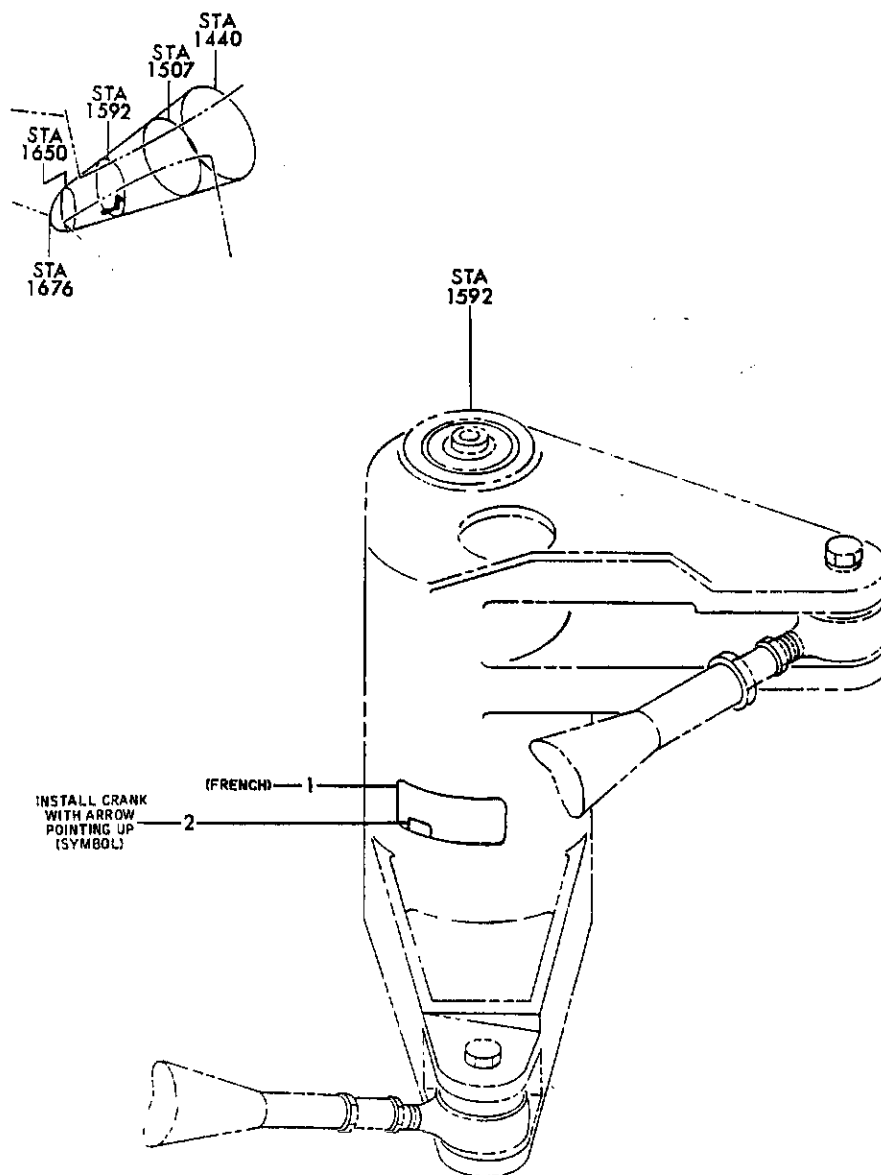 


FIGURE 217. CRANK INSTL, STABILIZER ELEVATOR CONTROL RH (REQUIRED PLACARDS ONLY)




 
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
217	65-7476-2	CRANK INSTL, STABILIZER ELEVATOR CONTROL RH (REQUIRED . PLACARDS ONLY) (SEE 27-11, FIG. 14, ITEM 2)								RF	
R R	65-11034-3	. CRANK ASSY, RH (REQUIRED PLACARDS ONLY)							0150	RF	
	65-11034-4	. CRANK ASSY, RH (REQUIRED PLACARDS ONLY)							5199	RF	
	2	BACM9L10AEB	. . SCOTCH-CAL, INSTALL CRANK WITH ARROW POINTING UP. .								1
			. FOR REFERENCE TO OTHER CRANK DETAILS, SEE NHA								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

RAF
NOV 21/91

11-02-217

 DETAILED PARTS LIST
11-02-217
PAGE 1

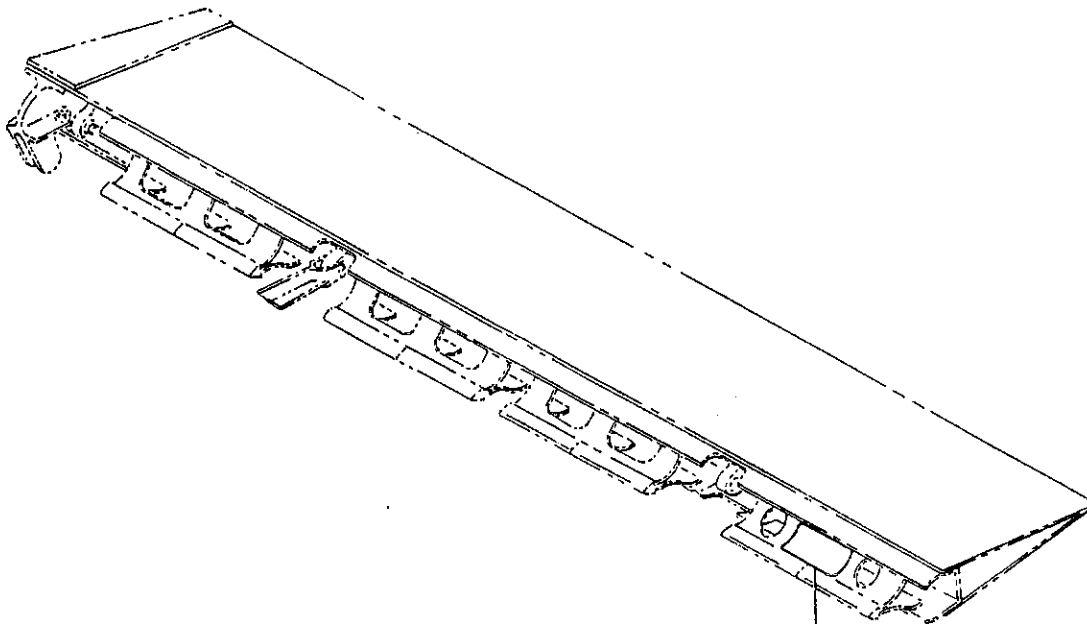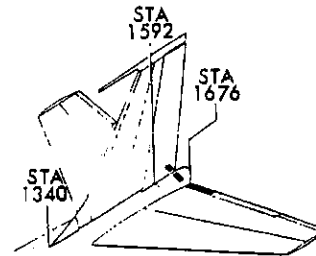


- 1 TAB WEIGHT INSTRUCTIONS
- 2 (FRENCH)

FIGURE 218. TAB ASSY, STABILIZER ACTUATED ELEVATOR (REQUIRED PLACARDS ONLY)




PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
218	65-5346-19	TAB ASSY, STABILIZER ACTUATED ELEVATOR (LH ONLY). (REQUIRED PLACARDS ONLY) (SEE 27-10, FIG. 10, ITEM 12)								RF
	65-5346-20	TAB ASSY, STABILIZER ACTUATED ELEVATOR (RH ONLY). (REQUIRED PLACARDS ONLY) (SEE 27-10, FIG. 10, ITEM 12)								RF
	1	BACM10L21-1BSR	. METAL-CAL, TAB WEIGHT INSTRUCTIONS. FOR REFERENCE TO OTHER TAB DETAILS, SEE NHA							
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

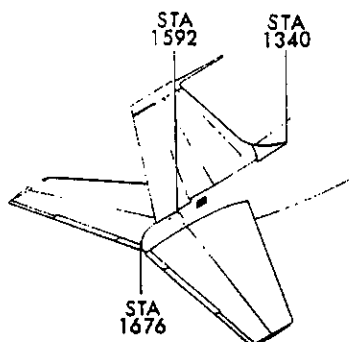 

 - 1 CAUTION THESE SWITCHES ARE INDEXED TO PROVIDE PROPER SWITCHING SEQUENCE. DO NOT ATTEMPT TO INTERCHANGE SWITCHES.
- 2 CAUTION THESE ELECTRICAL RECEPTACLES ARE INDEXED TO PROVIDE CORRECT SWITCHING SEQUENCE. DO NOT INTERCHANGE POSITION OR CROSS WIRE SWITCHES.
- 3 (FRENCH)

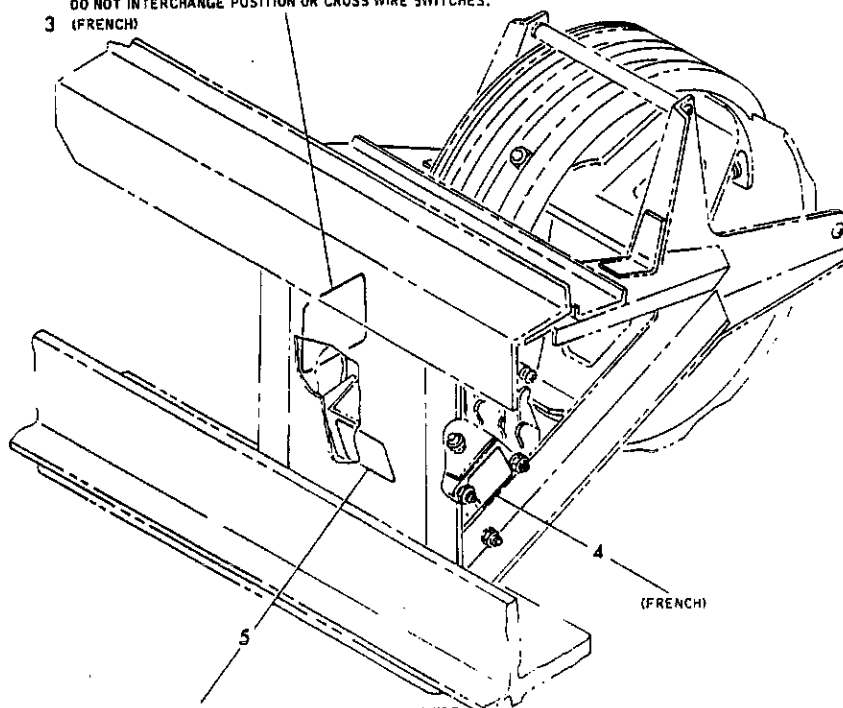

CAUTION THESE ELECTRICAL RECEPTACLES ARE INDEXED TO PROVIDE CORRECT SWITCHING SEQUENCE. DO NOT INTERCHANGE POSITION OR CROSS WIRE SWITCHES.

FIGURE 219. TORQUE CONTROL INSTL, STABILIZER (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R R R	219	65-46676-2	TORQUE CONTROL INSTL, STABILIZER (REQUIRED PLACARDS . . ONLY) (SEE 27-12, FIG. 9, ITEM 53 AND 27-12, FIG. 9A, ITEM 45)	0150	RF
		65-46676-1	(OPTIONAL TO 65-46676-4) TORQUE CONTROL INSTL, STABILIZER (REQUIRED PLACARDS . . ONLY) (SEE 27-12, FIG. 9, ITEM 53 AND 27-12, FIG. 9A, ITEM 45)	0150	RF
		65-46676-4	(OPTIONAL TO 65-46676-4) TORQUE CONTROL INSTL, STABILIZER (REQUIRED PLACARDS . . ONLY) (SEE 27-12, FIG. 9, ITEM 53 AND 27-12, FIG. 9A, ITEM 45)	0150	RF
		65-46676-4	(OPTIONAL 65-46676-1, -2) TORQUE CONTROL INSTL, STABILIZER (REQUIRED PLACARDS . . ONLY) (SEE 27-12, FIG. 9, ITEM 53)	5199	RF
	1	BACM10C37F	. MARKER-ALUMINUM FOIL, SWITCHING SEQUENCE INSTRUCTIONS (USED ON 65-46676-2, -4 AND -5)		1
	2	BACM10C37G	. MARKER-ALUMINUM FOIL, ELECTRICAL INSTRUCTIONS (USED ON 65-46676-1)	0150	1
		69-36130-1	. BRACKET ASSY, STABILIZER TORQUE SWITCH SUPPORT. . . . (REQUIRED PLACARDS ONLY) (USED ON 65-46676-1)	0150	RF
	5	BACM10C37G	. . . MARKER-ALUMINUM FOIL, ELECTRICAL INSTRUCTIONS . . . FOR REFERENCE TO OTHER TORQUE CONTROL DETAILS, SEE . . NHA	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

RAF
NOV 21/91

11-02-219

DETAILED PARTS LIST
11-02-219
PAGE 1


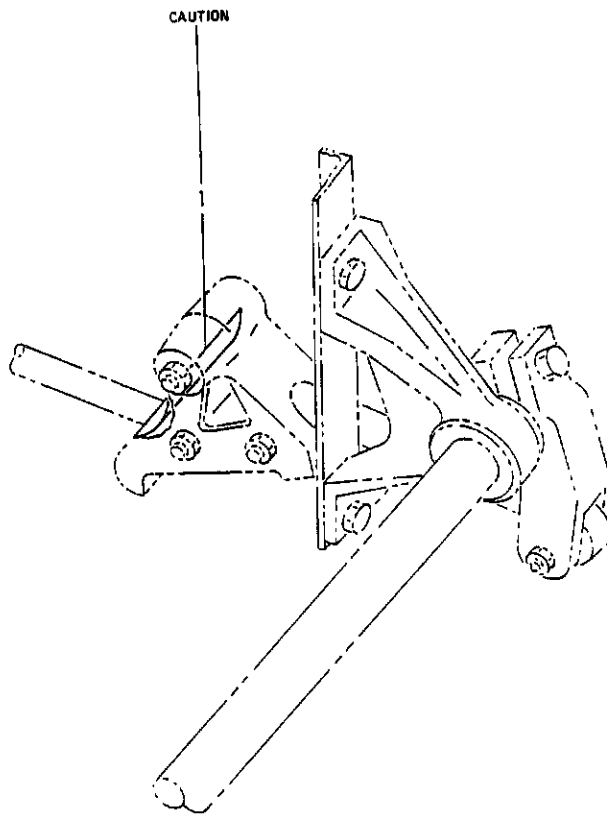 


FIGURE 220. TUBE INSTL, ELEVATOR TAB CONTROL TORQUE (REQUIRED PLACARDS ONLY)

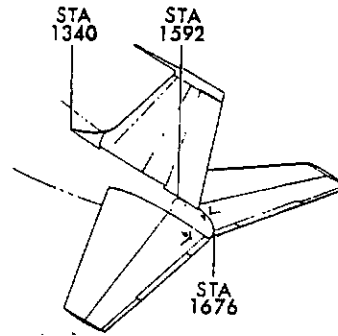 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
220	65-8351	TUBE INSTL, ELEVATOR TAB CONTROL TORQUE (LH ONLY) . . . (REQUIRED PLACARDS ONLY) (SEE 27-11, FIG. 17)		RF
	65-11035	TUBE INSTL, ELEVATOR TAB CONTROL TORQUE (RH ONLY) . . . (REQUIRED PLACARDS ONLY) (SEE 27-11, FIG. 17)		RF
	BACM9C5AL	. SCOTCH-CAL, CAUTION FOR REFERENCE TO OTHER TUBE DETAILS, SEE NHA.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/90

11-02-220

DETAILED PARTS LIST
11-02-220
PAGE 1

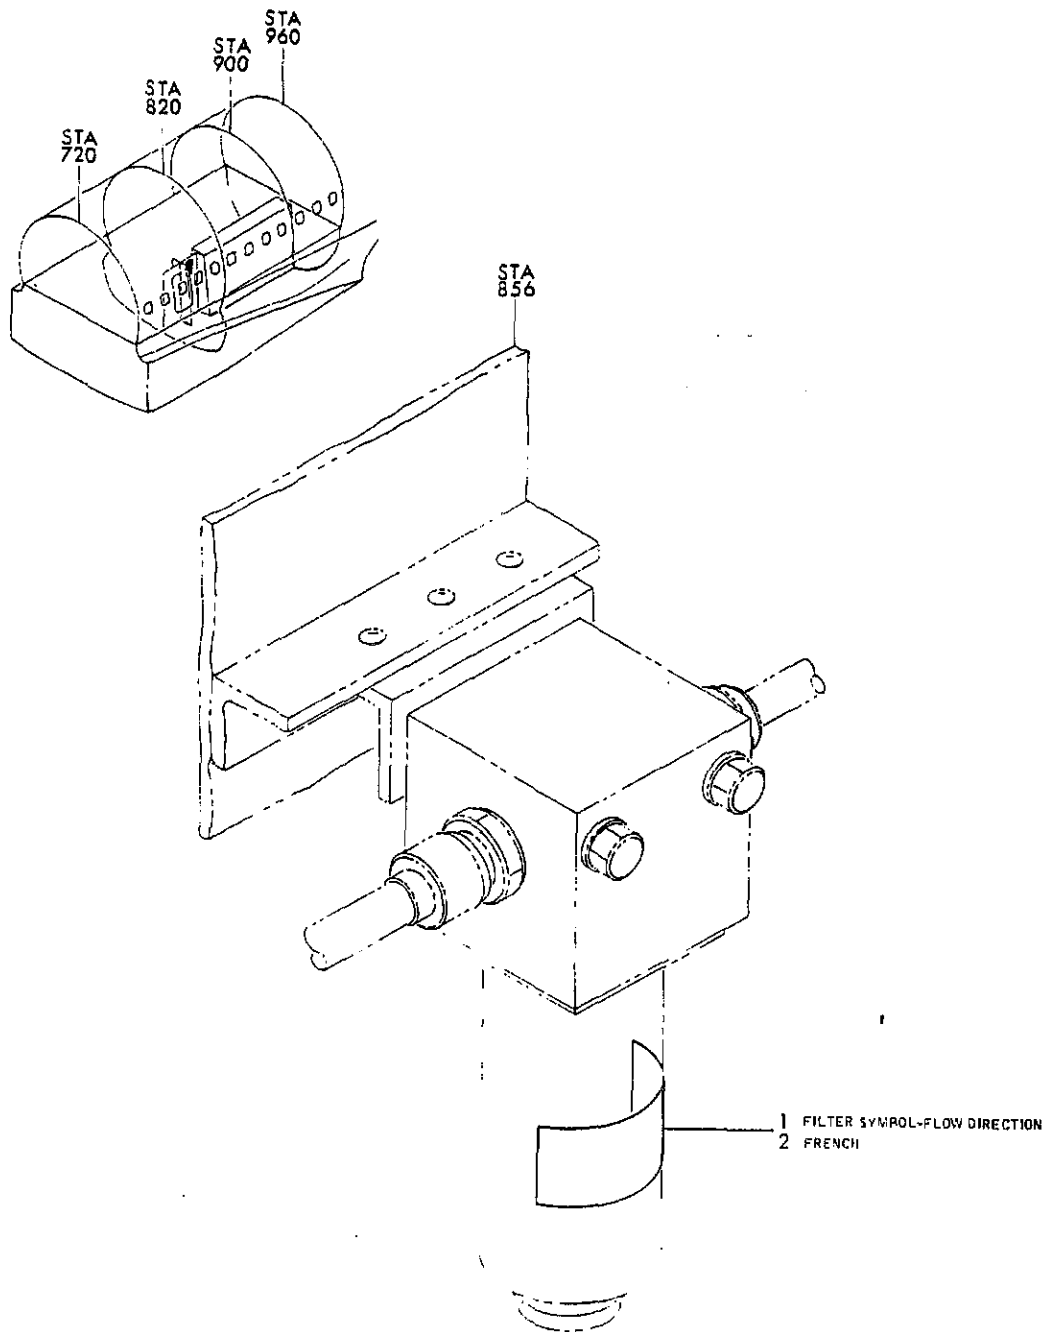 


FIGURE 223. FILTER INSTL, DC PUMP HYDRAULIC PRESSURE (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE						EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6 7		
223	69-47253-1	FILTER INSTL, DC PUMP HYDRAULIC PRESSURE (REQUIRED. . .						0150	RF
		PLACARDS ONLY) (SEE 29-4, FIG. 12, ITEM 98)							
1	BACM10F11-3AH	. MARKER-ALUMINUM FOIL, FILTER-SYMBOL-FLOW DIRECTION. .						0150	1
		. FOR REFERENCE TO OTHER FILTER DETAILS, SEE NHA. . . .						0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE									

RAF
NOV 21/91

11-02-223

DETAILED PARTS LIST
11-02-223
PAGE 1


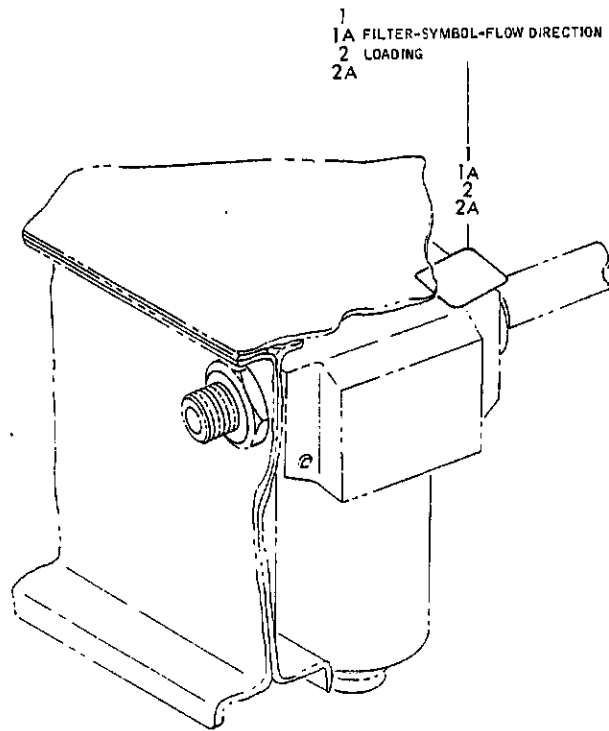 


FIGURE 224, FILTER INSTL, AUXILIARY RETURN HYDRAULIC (REQUIRED PLACARDS ONLY)

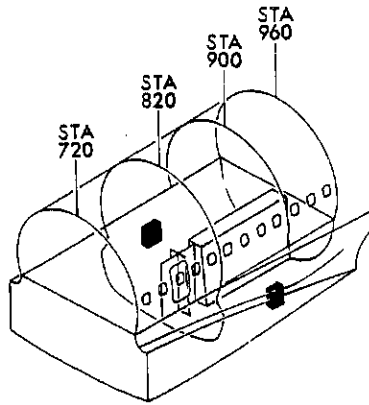 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
224	65-37063	FILTER INSTL, AUXILIARY RETURN HYDRAULIC (LH) (REQUIRED PLACARDS ONLY) (SEE 29-2, FIG. 19, ITEM 151, 29-2, FIG. 20, ITEM 122, 29-2, FIG. 20A, ITEM 131 AND 29-2, FIG. 21, ITEM 129)								RF	
	65-37063-1	FILTER INSTL, AUXILIARY RETURN HYDRAULIC (RH) (REQUIRED PLACARDS ONLY) (SEE 29-2, FIG. 22, ITEM 153, 29-2, FIG. 22A, ITEM 189, 29-2, FIG. 22B, ITEM 131, 29-2, FIG. 22C, ITEM 185, 29-2, FIG. 22D, ITEM 176, 29-2, FIG. 23, ITEM 122, 29-2, FIG. 24, ITEM 135, 29-2, FIG. 25, ITEM 144, 29-2, FIG. 26, ITEM 146 AND 29-2, FIG. 27, ITEM 155)								RF	
	1	BACM10F11-3AG	. MARKER-ALUMINUM FOIL, FILTER-SYMBOL-FLOW DIRECTION. . (LH ONLY) (USED ON 65-37063)								1
	1	BACM10F11-3AG	. MARKER-ALUMINUM FOIL, FILTER-SYMBOL-FLOW DIRECTION. . (RH ONLY) (USED ON 65-37063-1) . FOR REFERENCE TO OTHER FILTER DETAILS, SEE NHA. . .								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

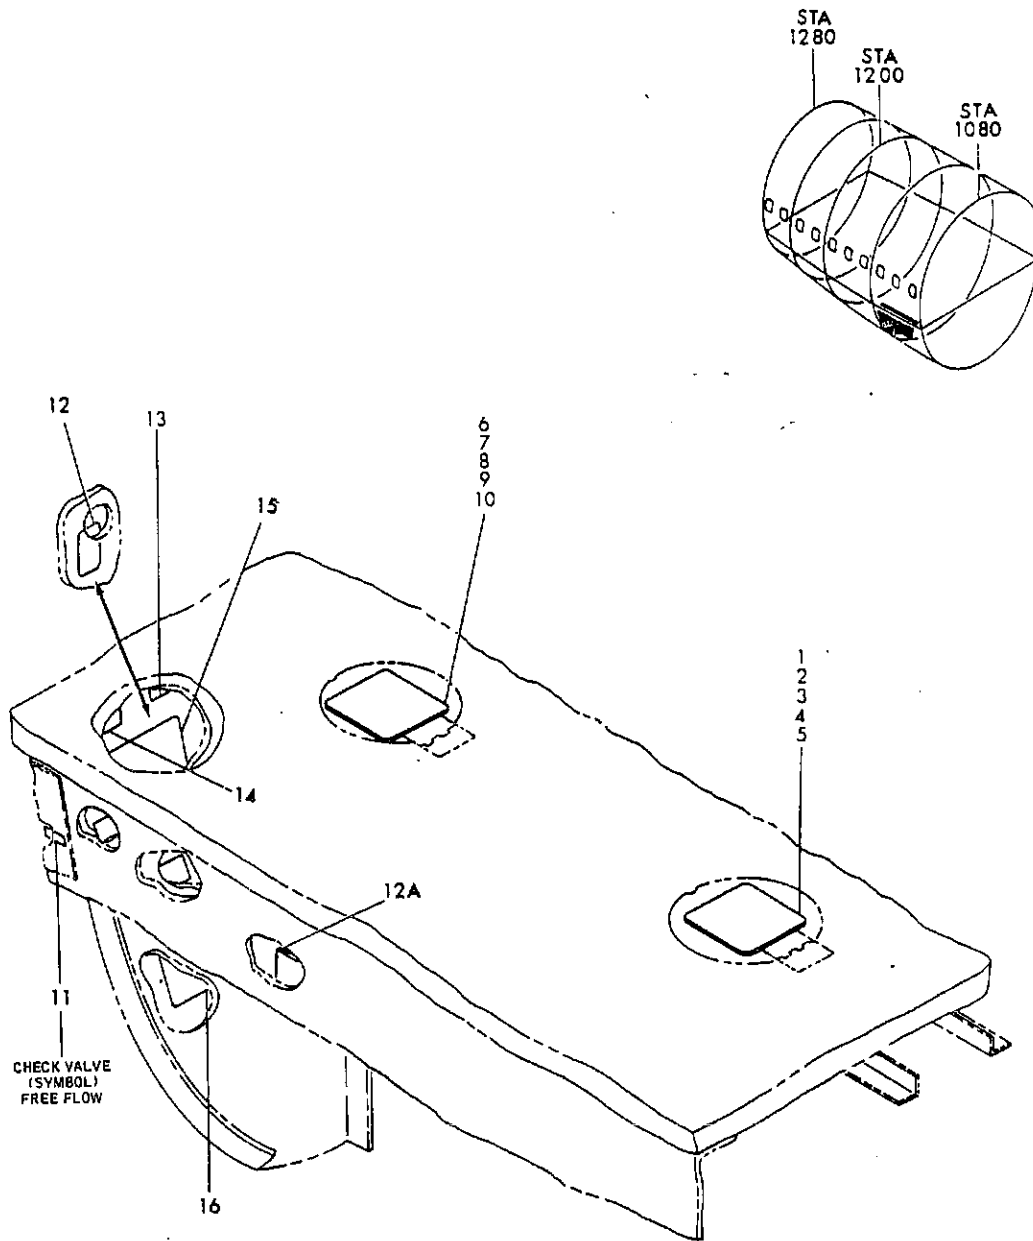 


FIGURE 226. EQUIPMENT INSTL, PASSENGER OXYGEN (REQUIRED PLACARDS ONLY)

MISSING ITEM NUMBERS ARE NOT APPLICABLE

11-02-226

DETAILED PARTS LIST
11-02-226
PAGE 1

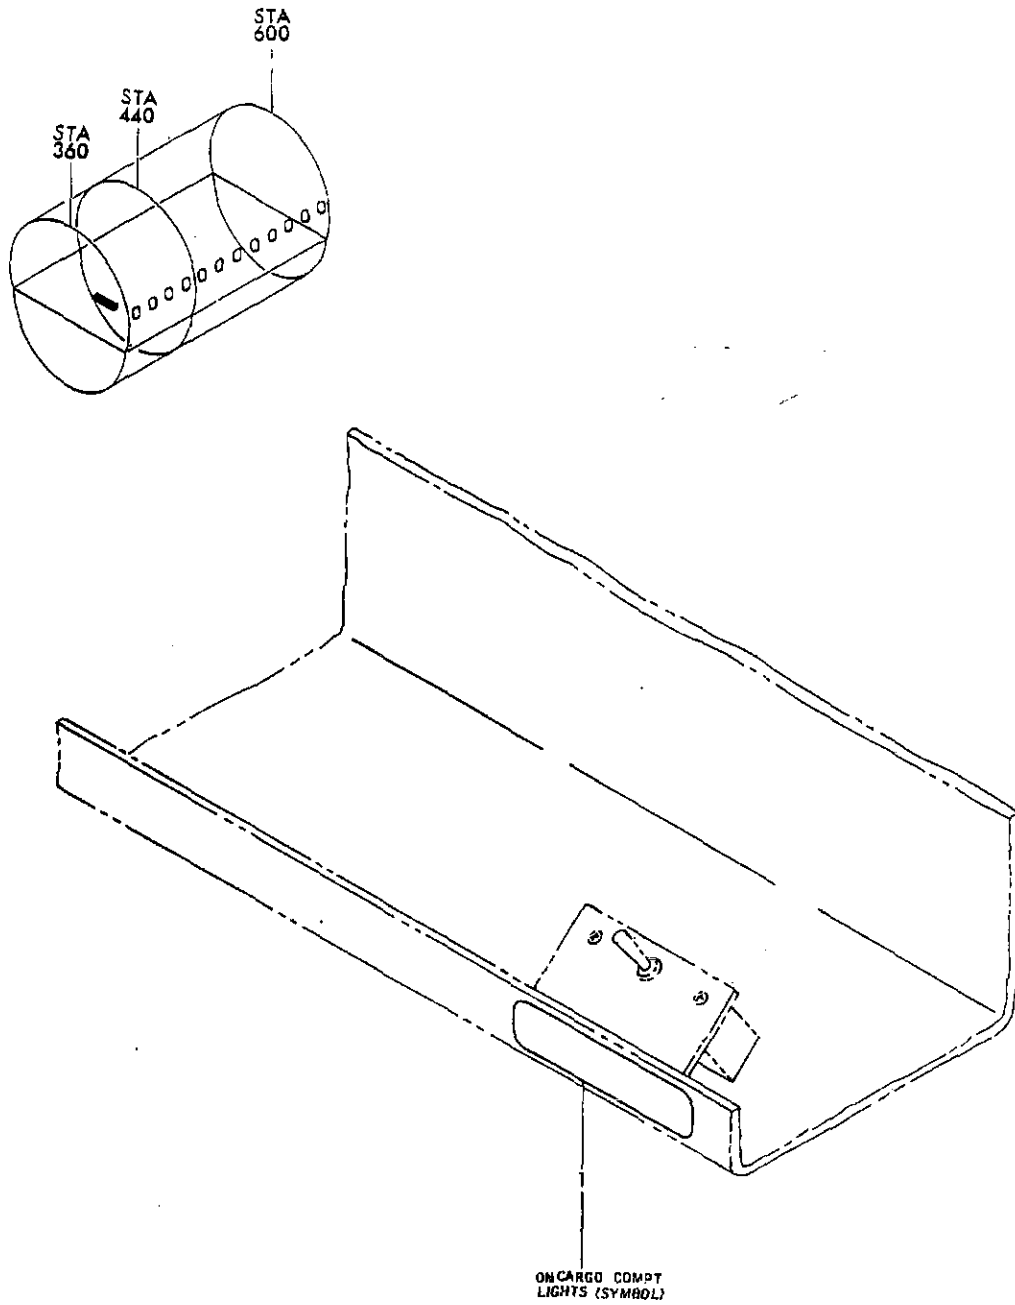 


FIGURE 227. SWITCH INSTL, STATION 400 CARGO (REQUIRED PLACARDS ONLY)

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R	227 65-3782-5	SWITCH INSTL, STATION 400 CARGO DOOR (REQUIRED PLACARDS ONLY) (SEE 24-3, FIG. 2, ITEM 9A)	5199	RF
	65-3782-4	SWITCH INSTL, STATION 400 CARGO DOOR (REQUIRED PLACARDS ONLY) (SEE 24-3, FIG. 2, ITEM 9A)	0150	RF
	1 BACM10L20-4PG	. MARKER-ALUMINUM FOIL, CARGO COMPARTMENT LIGHTS. FOR REFERENCE TO OTHER SWITCH DETAILS, SEE NHA. . . .		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

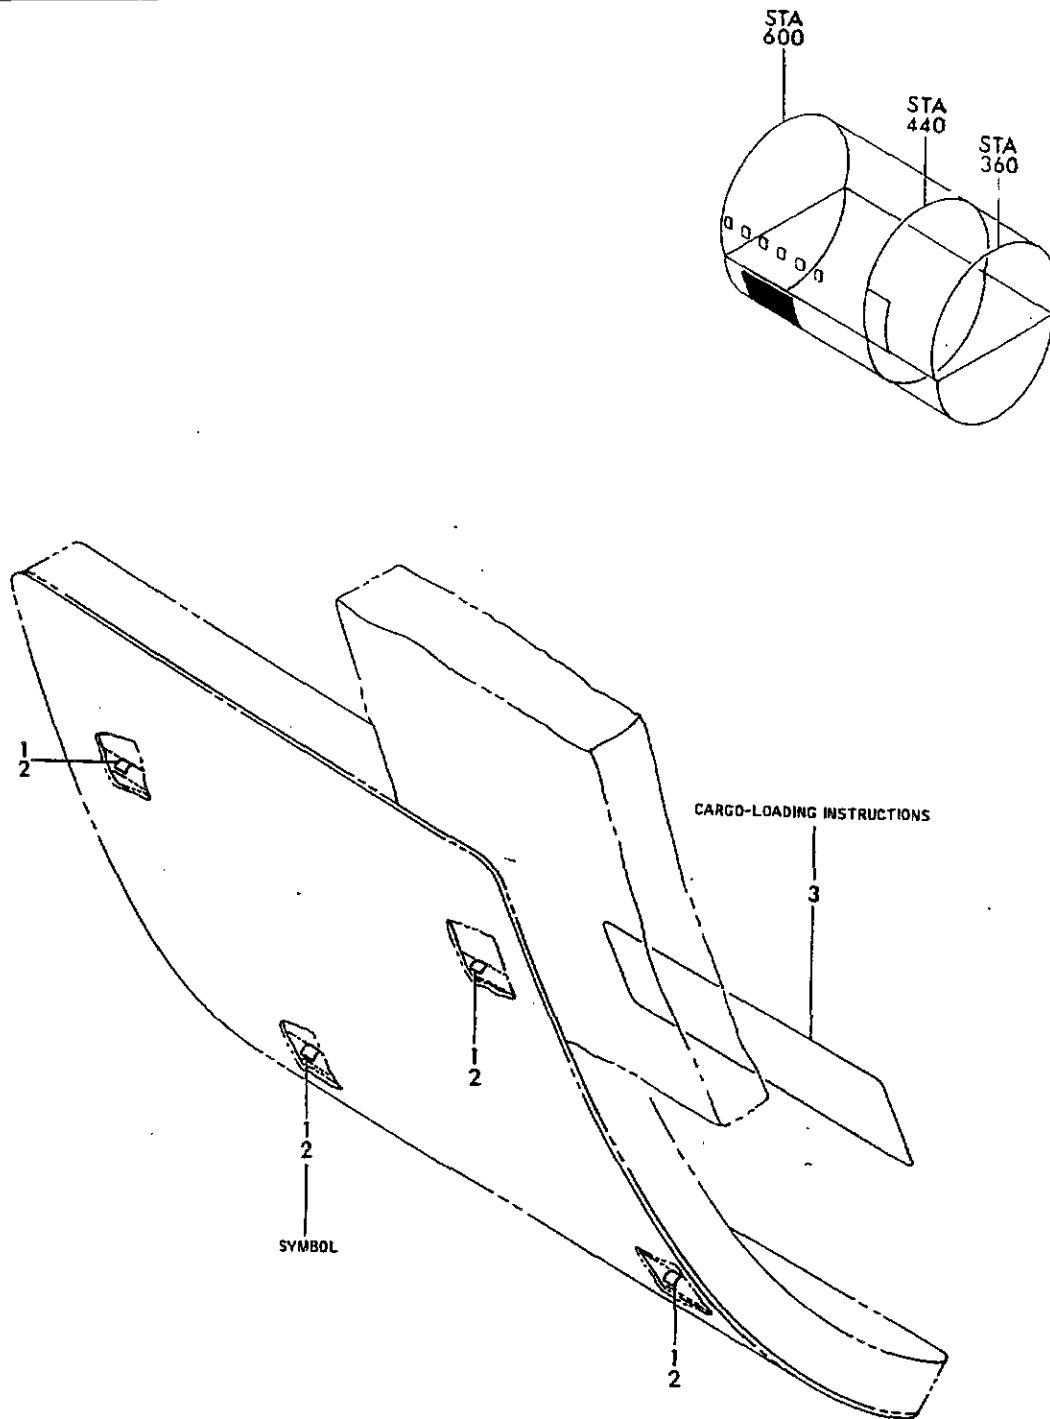 


FIGURE 228. DOOR ASSY, STATION 554.15 FORWARD CARGO (REQUIRED PLACARDS ONLY)

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFP FROM TO	UNITS PER ASSY		
			1	2	3	4	5	6	7				
R R R	228	50-7944-92	DOOR ASSY, STATION 554.15 FORWARD CARGO (REQUIRED . . . PLACARDS ONLY) (REWORKED BY SB 3322) (SEE 52-3, FIG. 1, ITEM 30)										RF
	1	BACM10L10-IGC	. MARKER-ALUMINUM FOIL, SYMBOL. FOR REFERENCE TO OTHER DOOR DETAILS, SEE NHA.										4
MISSING ITEM NUMBERS ARE NOT APPLICABLE													

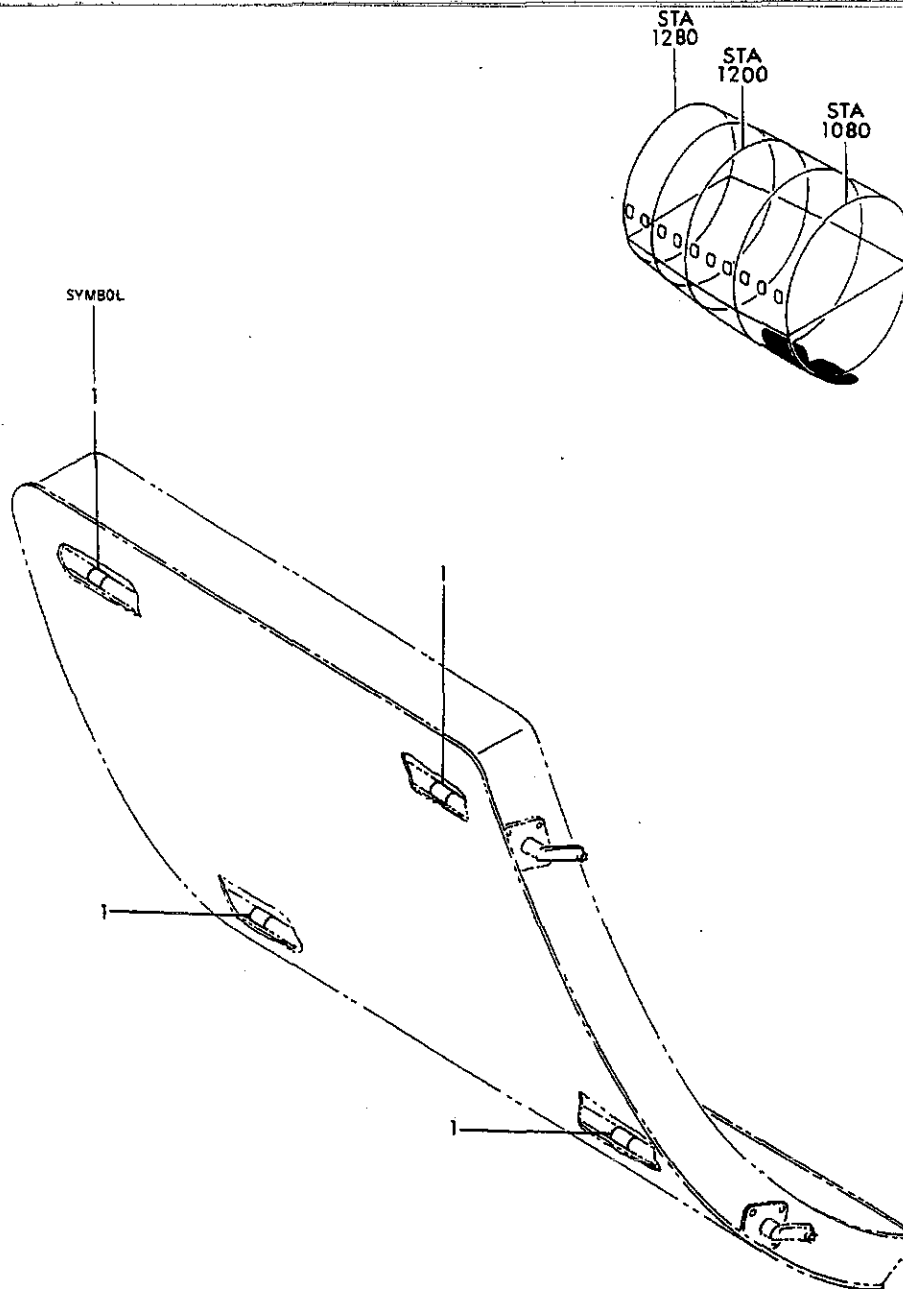 


FIGURE 229. DOOR ASSY, CENTER CARGO (REQUIRED PLACARDS ONLY)

BOEING
Intercontinental

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
229	50-7990-156	DOOR ASSY, CENTER CARGO (REQUIRED PLACARDS ONLY). . . .								RF
		(REWORKED BY SB 3322) (SEE 52-3, FIG. 6, ITEM 2)								
1	BACM10L10-1GC	. MARKER-ALUMINUM FOIL, SYMBOL.								4
		. FOR REFERENCE TO OTHER DOOR DETAILS, SEE NHA.								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

RAF
NOV 21/91

11-02-229

DETAILED PARTS LIST
11-02-229
PAGE 1

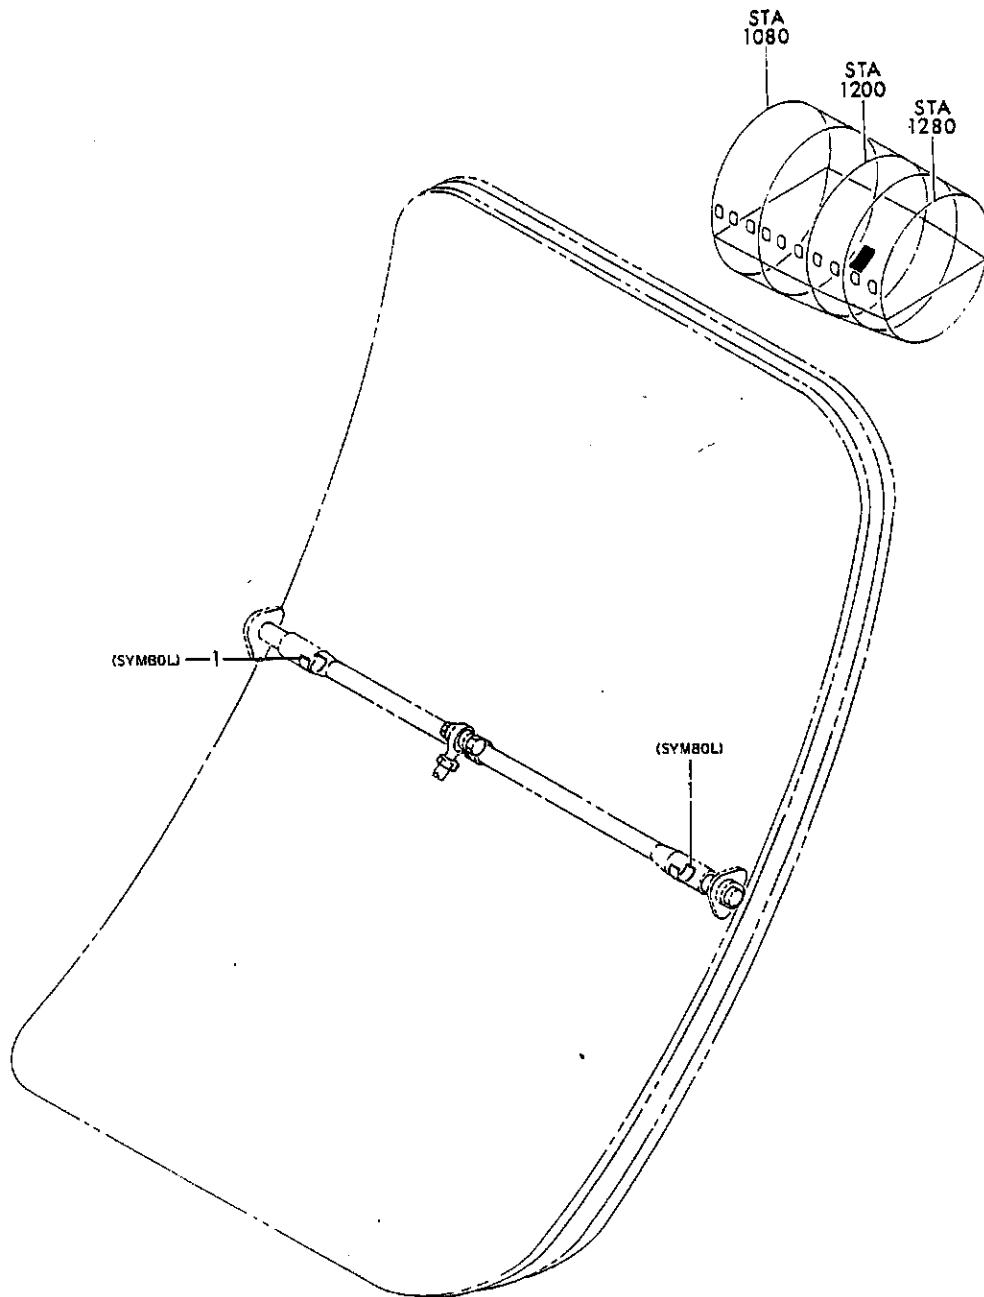 


FIGURE 230. DOOR ASSY, AFT CARGO (REQUIRED PLACARDS ONLY)

MISSING ITEM NUMBERS ARE NOT APPLICABLE

11-02-230

DETAILED PARTS LIST
11-02-230
PAGE 1

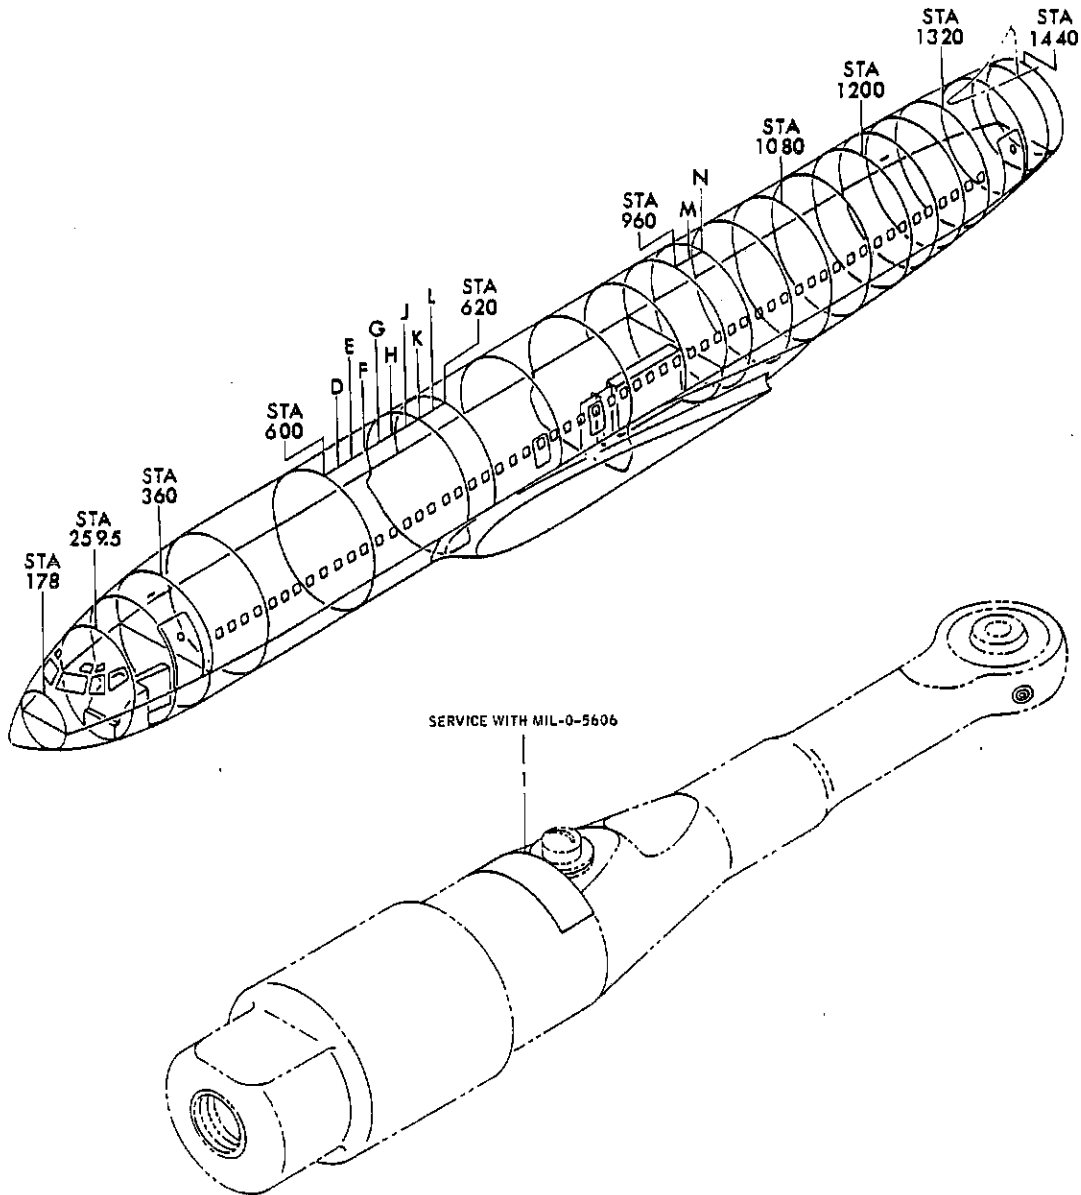 


FIGURE 231. SNUBBER ASSY, GALLEY DOOR (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF	UNITS
			FROM TO	PER ASSY
231	65-2346-3	SNUBBER ASSY, GALLEY DOOR (REQUIRED PLACARDS ONLY) (SEE 52-2, FIG. 1, ITEM 7 AND 52-2, FIG. 4, ITEM 54) (OPTIONALS 65-2346-1, -4)	0101	RF
	65-2346-1	SNUBBER ASSY, GALLEY DOOR (REQUIRED PLACARDS ONLY) (SEE 52-2, FIG. 1, ITEM 7 AND 52-2, FIG. 4, ITEM 54) (OPTIONAL TO 65-2346-3)	0101	RF
	65-2346-4	SNUBBER ASSY, GALLEY DOOR (REQUIRED PLACARDS ONLY) (SEE 52-2, FIG. 1, ITEM 7 AND 52-2, FIG. 4, ITEM 54) (OPTIONAL TO 65-2346-3)	0101	RF
	65-2346-4	SNUBBER ASSY, GALLEY DOOR (REQUIRED PLACARDS ONLY) (SEE 52-2, FIG. 1, ITEM 7 AND 52-2, FIG. 4, ITEM 54) (OPTIONALS 65-2346-1, -3)	0299	RF
	65-2346-1	SNUBBER ASSY, GALLEY DOOR (REQUIRED PLACARDS ONLY) (SEE 52-2, FIG. 1, ITEM 7 AND 52-2, FIG. 4, ITEM 54) (OPTIONAL TO 65-2346-4)	0299	RF
	65-2346-3	SNUBBER ASSY, GALLEY DOOR (REQUIRED PLACARDS ONLY) (SEE 52-2, FIG. 1, ITEM 7 AND 52-2, FIG. 4, ITEM 54) (OPTIONAL TO 65-2346-4)	0299	RF
	1 BACM10L10-1BXK	. MARKER, ALUMINUM FOIL, SERVICE WITH MIL-0-5606. FOR REFERENCE TO OTHER SNUBBER DETAILS, SEE NHA . . .		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/90

11-02-231

DETAILED PARTS LIST
11-02-231
PAGE 1


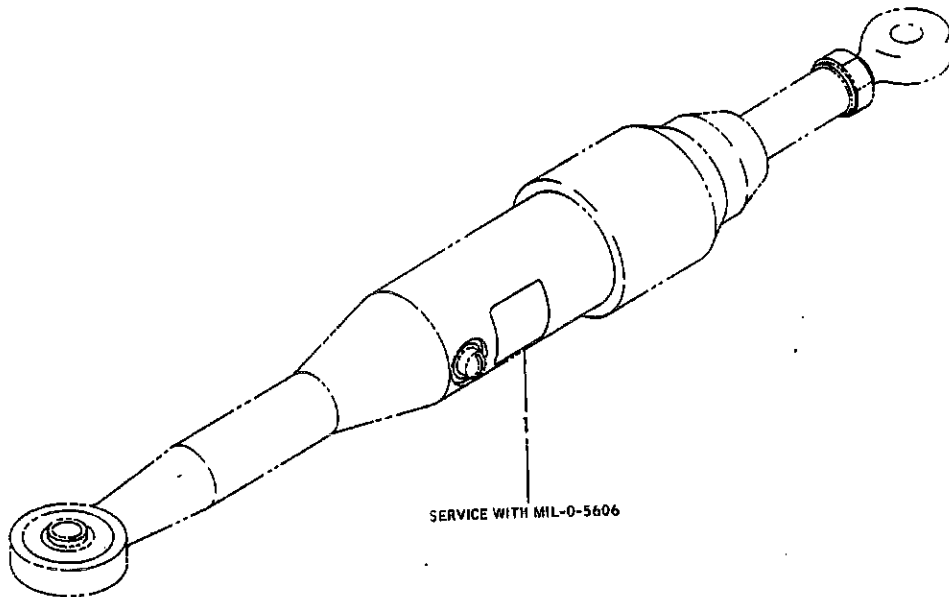 


FIGURE 232. SNUBBER ASSY, ENTRY DOOR (REQUIRED PLACARDS ONLY)

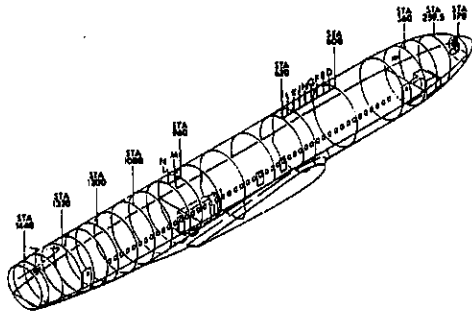 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
232	90-10072-1	SNUBBER ASSY, ENTRY DOOR (REQUIRED PLACARDS ONLY) (SEE 52-1, FIG. 1, ITEM 50 AND 52-1, FIG. 5, ITEM 5) (OPTIONAL 90-10072)							0101	RF
	90-10072	SNUBBER ASSY, ENTRY DOOR (REQUIRED PLACARDS ONLY) (SEE 52-1, FIG. 1, ITEM 50 AND 52-1, FIG. 5, ITEM 5) (OPTIONAL TO 90-10072-1)							0101	RF
	90-10072-2	SNUBBER ASSY, ENTRY DOOR (REQUIRED PLACARDS ONLY) (SEE 52-1, FIG. 1, ITEM 50, 52-1, FIG. 1A, ITEM 41 AND 52-1, FIG. 5, ITEM 5)							0299	RF
	1	BACM10L10-18XK	. MARKER-ALUMINUM FOIL, SERVICE WITH MIL-0-5606 FOR REFERENCE TO OTHER SNUBBER DETAILS, SEE NHA							
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

RAF
NOV 21/90

11-02-232

DETAILED PARTS LIST
11-02-232
PAGE 1


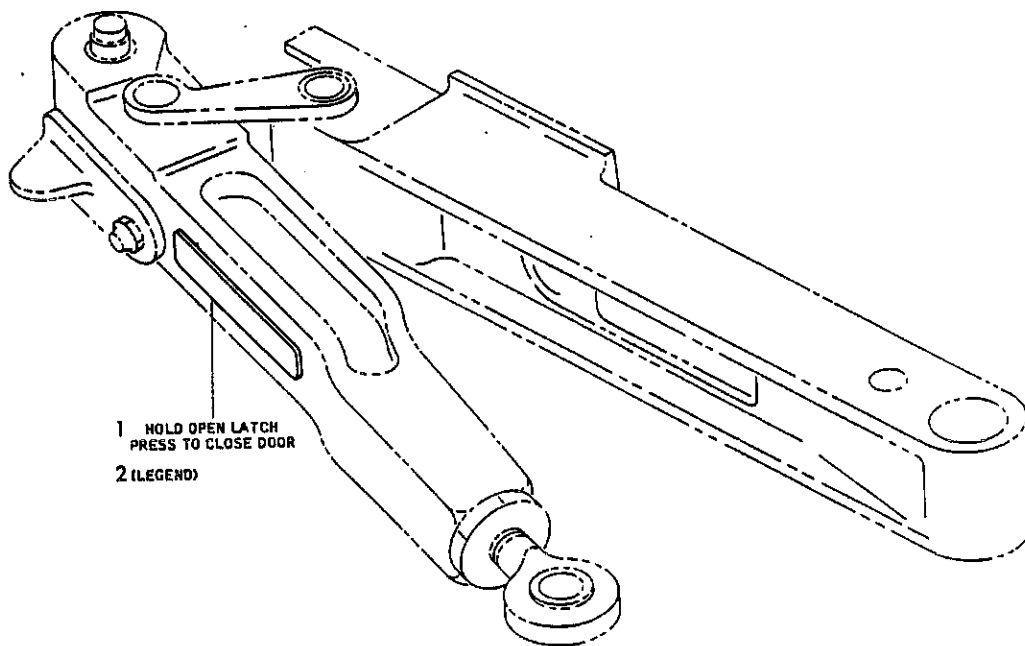 


FIGURE 233. DOOR INSTL, AFT GALLEY (REQUIRED PLACARDS ONLY)

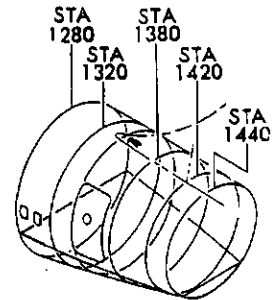 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R	233	50-7983-1	DOOR INSTL, AFT GALLEY (REQUIRED PLACARDS ONLY) (SEE . . .							0150	RF
		50-7983-1	53-2, FIG. 3, ITEM 51 AND 53-2, FIG. 7A, ITEM 34)							5199	RF
			DOOR INSTL, AFT GALLEY (REQUIRED PLACARDS ONLY)								
			(VARIABLE DWG;50-7983-5001) (SEE 53-2, FIG. 3, ITEM 51)								
	1	BACMIOLICNH	. MARKER-ALUMINUM FOIL, HOLD OPEN LATCH PRESS								1
			TO CLOSE DOOR								
			. FOR REFERENCE TO OTHER DOOR DETAILS, SEE NHA. . . .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

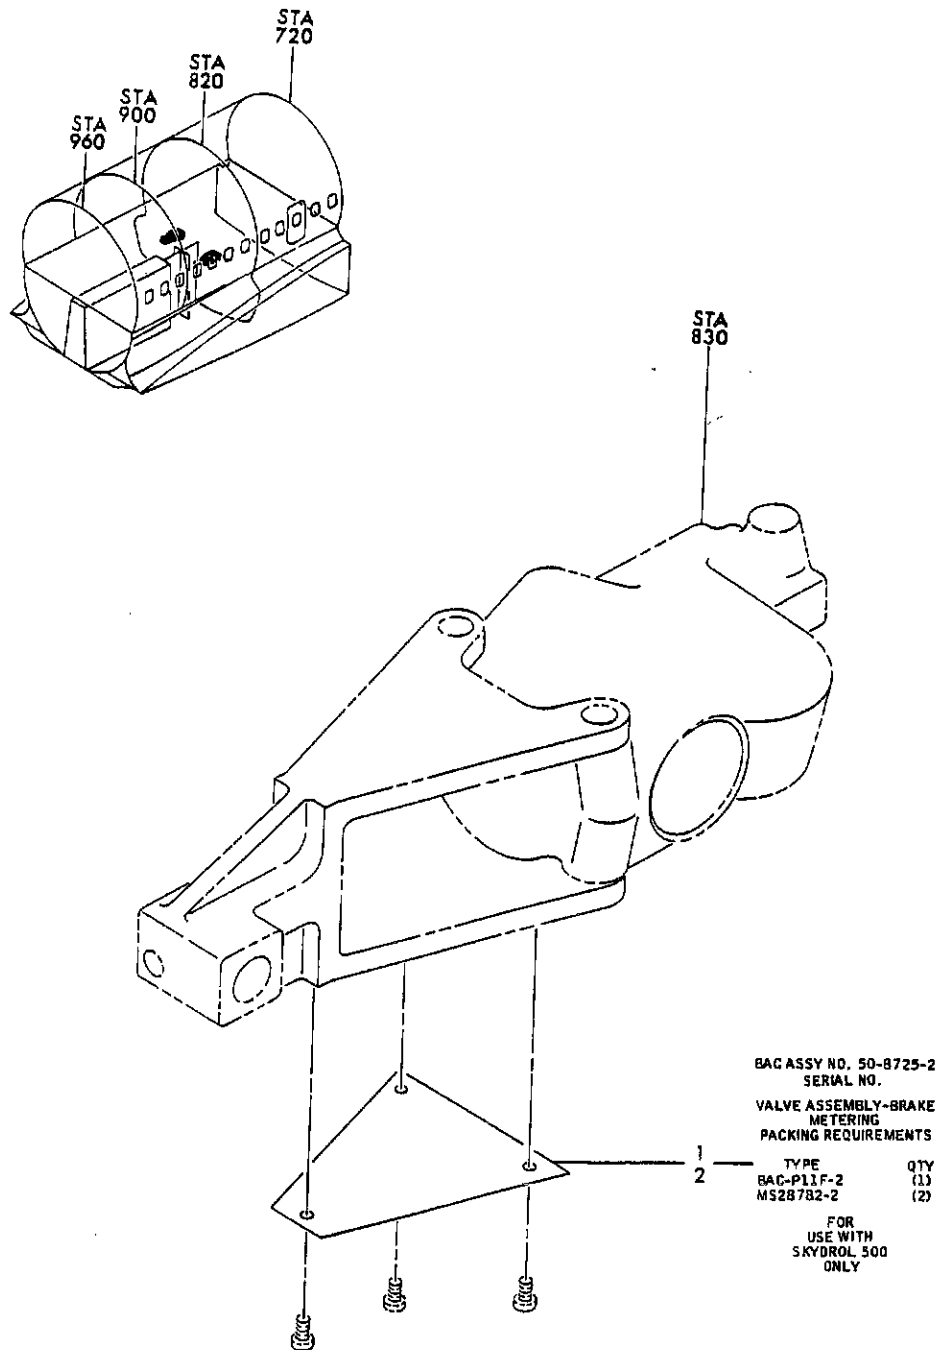 


FIGURE 234. VALVE ASSY, BRAKE METERING (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
234	50-8725-4	VALVE ASSY, BRAKE METERING (REQUIRED PLACARDS ONLY) . . (SEE 32-8, FIG. 6, ITEM 33 AND 32-8, FIG. 7, ITEM 45)								RF
1	BACN12V22-1AE	. NAMEPLATE (OPTIONAL BACN12V22-1W)								1
1	BACN12V22-1W	. NAMEPLATE, VALVE ASSY-BRAKE METERING INSTRUCTIONS . . (OPTIONAL TO BACN12V22-1AE)								1
	MS21318-7	ATTACHING PARTS . SCREW								3
		----- FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

RAF
NOV 21/90

11-02-234

DETAILED PARTS LIST
11-02-234
PAGE 1


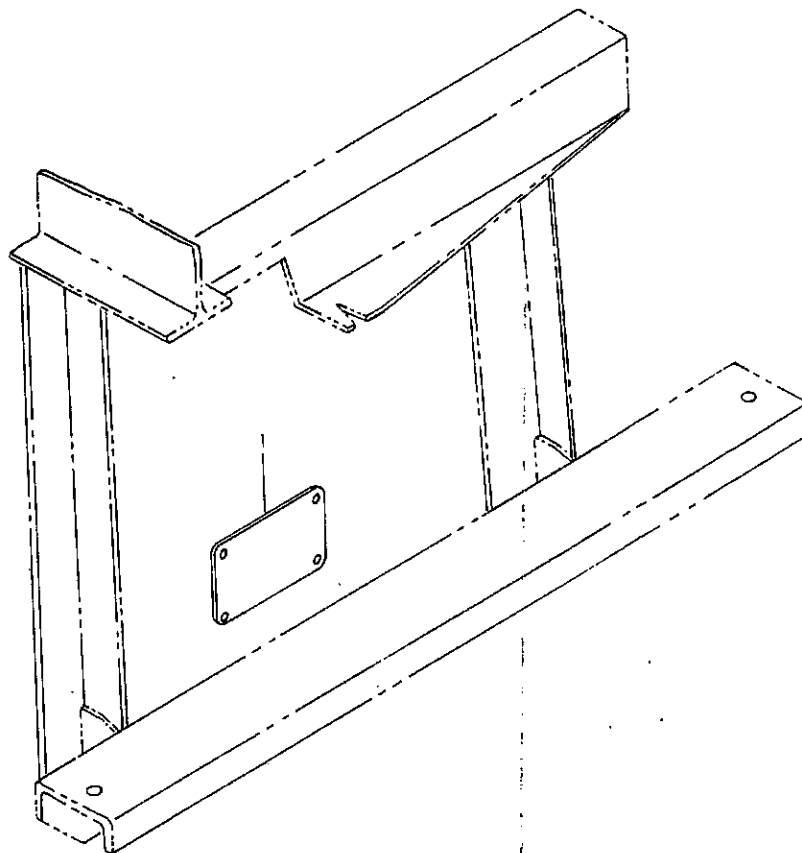 


FIGURE 237. SCALE INSTL. LEVELING PROVISION (REQUIRED PLACARDS ONLY)

DETAILED PARTS LIST
11-02-237
PAGE 1 OF 1
REV. 1-1-67
B2-4

11-02-237

 NOV 21/90

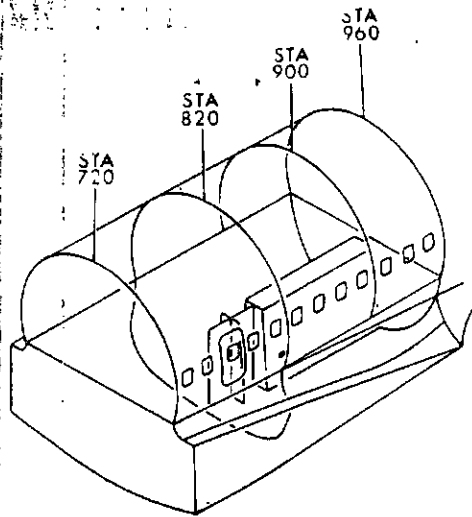

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
237	50-4633-3000	SCALE INSTL, LEVELING PROVISION (REQUIRED PLACARDS. . .							5199	RF
1	BAC27DBY34	ONLY) (SEE 53-2, FIG. 2, ITEM 103A)							5199	1
		. MARKER-ALUMINUM FOIL, NO STEP							5199	
		. FOR REFERENCE TO OTHER SCALE DETAILS, SEE NHA							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

RAF
NOV 21/90

11-02-237

DETAILED PARTS LIST
11-02-237
PAGE 1

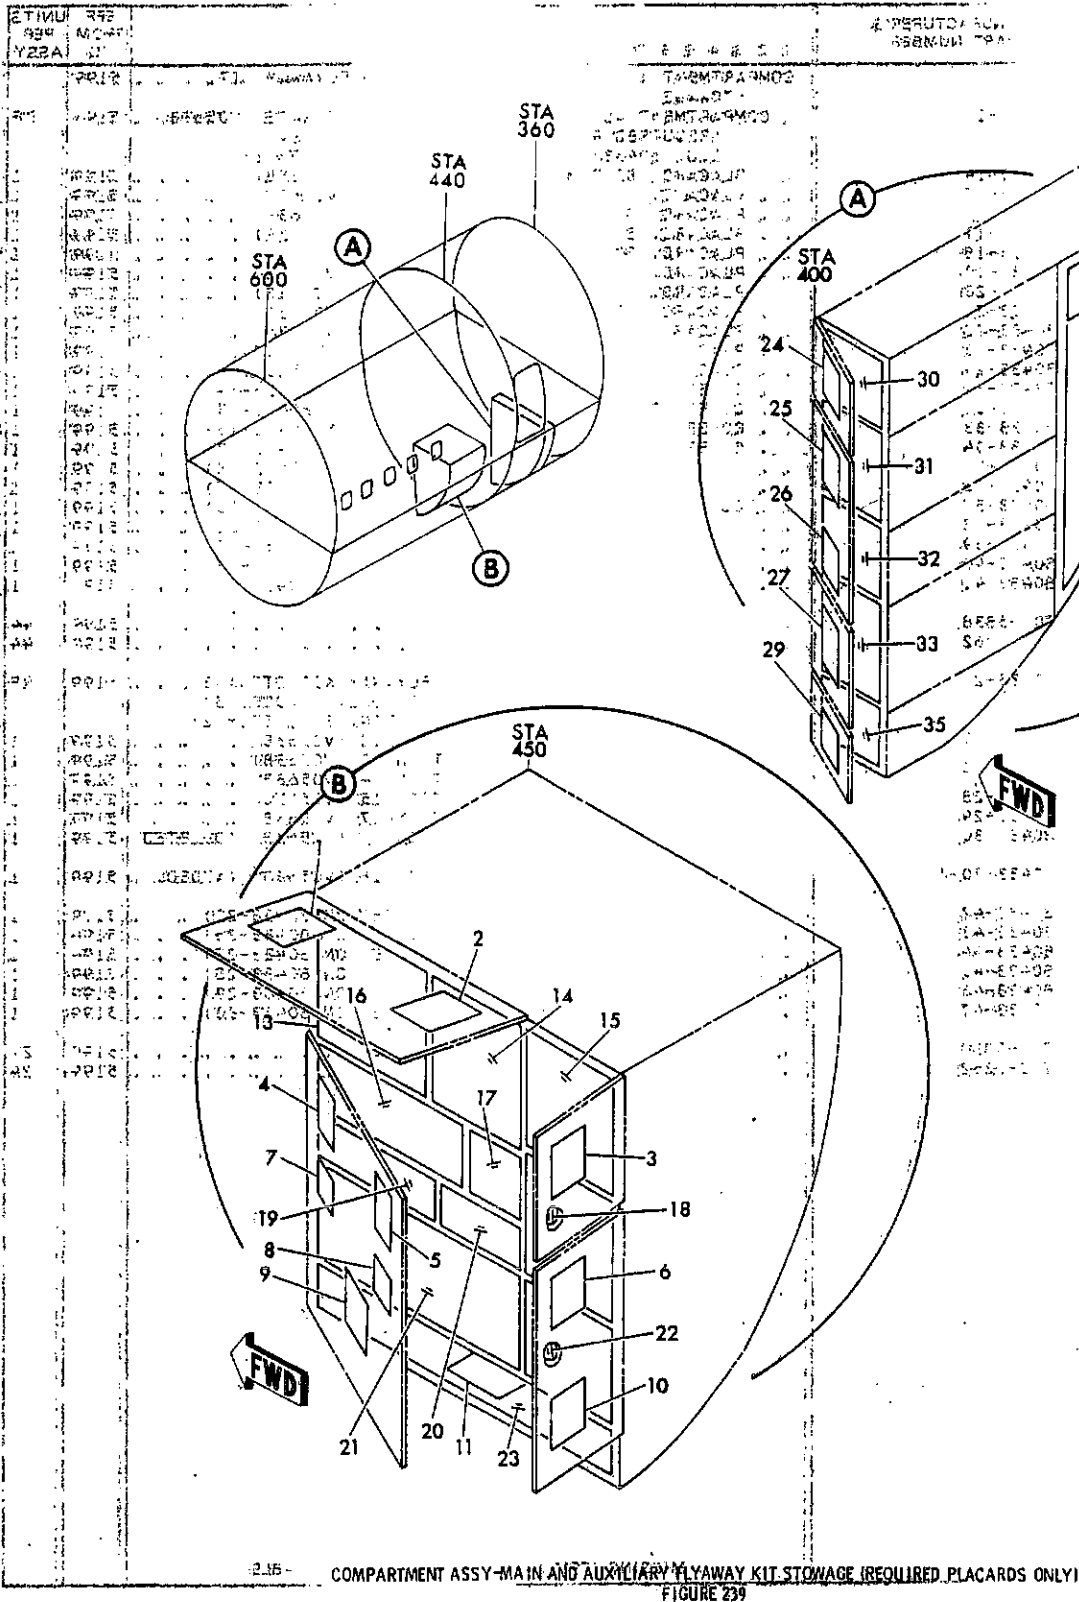 


FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
239			COMPARTMENT ASSY, MAIN AND AUXILIARY FLYAWAY KIT.	5199	
	80433-1		STOWAGE (REQUIRED PLACARDS ONLY)		
			COMPARTMENT ASSY, MAIN FLYAWAY KIT STOWAGE (V0563B)	5199	RF
			(REQUIRED PLACARDS ONLY) (ADDED BY SVA		
			E.O. 80433) (SEE 25-1, FIG. 31Y, ITEM 1)		
1	80433-14		PLACARD, B707 MAIN FAK SECTION 1 (V0563B)	5199	1
2	80433-15		PLACARD, B707 MAIN FAK SECTION 2 (V0563B)	5199	1
3	80433-16		PLACARD, B707 MAIN FAK SECTION 3 (V0563B)	5199	1
4	80433-17		PLACARD, B707 MAIN FAK SECTION 4 (V0563B)	5199	1
5	80433-18		PLACARD, B707 MAIN FAK SECTION 5 (V0563B)	5199	1
6	80433-19		PLACARD, B707 MAIN FAK SECTION 6 (V0563B)	5199	1
7	80433-20		PLACARD, B707 MAIN FAK SECTION 7 (V0563B)	5199	1
8	80433-21		PLACARD, B707 MAIN FAK SECTION 8 (V0563B)	5199	1
9	80433-22		PLACARD, B707 MAIN FAK SECTION 9 (V0563B)	5199	1
10	80433-23		PLACARD, B707 MAIN FAK SECTION 10 (V0563B)	5199	1
11	80433-24		PLACARD, B707 MAIN FAK SECTION 11 (V0563B)	5199	1
13	80433-31		COVER, PLEXIGLASS (V0563B) (USED ON 80433-14)	5199	1
14	80433-32		COVER, PLEXIGLASS (V0563B) (USED ON 80433-15)	5199	1
15	80433-33		COVER, PLEXIGLASS (V0563B) (USED ON 80433-16)	5199	1
16	80433-34		COVER, PLEXIGLASS (V0563B) (USED ON 80433-17)	5199	1
17	80433-35		COVER, PLEXIGLASS (V0563B) (USED ON 80433-18)	5199	1
18	80433-36		COVER, PLEXIGLASS (V0563B) (USED ON 80433-19)	5199	1
19	80433-37		COVER, PLEXIGLASS (V0563B) (USED ON 80433-20)	5199	1
20	80433-38		COVER, PLEXIGLASS (V0563B) (USED ON 80433-21)	5199	1
21	80433-39		COVER, PLEXIGLASS (V0563B) (USED ON 80433-22)	5199	1
22	80433-40		COVER, PLEXIGLASS (V0563B) (USED ON 80433-23)	5199	1
23	80433-41		COVER, PLEXIGLASS (V0563B) (USED ON 80433-24)	5199	1
			ATTACHING PARTS		
	701-5838		SCREW, (V0563B)	5199	44
	702-5262		NUT, (V0563B)	5199	44
	80433-2		COMPARTMENT ASSY, AUXILIARY FLYAWAY KIT STOWAGE	5199	RF
			(V0563B) (REQUIRED PLACARDS ONLY) (ADDED BY		
			SVA E.O. 80433) (SEE 25-1, FIG. 31Y, ITEM 2)		
24	80433-25		PLACARD, B707 AUX FAK SECTION 12 (V0563B)	5199	1
25	80433-26		PLACARD, B707 AUX FAK SECTION 13 (V0563B)	5199	1
26	80433-27		PLACARD, B707 AUX FAK SECTION 14 (V0563B)	5199	1
27	80433-28		PLACARD, B707 AUX FAK SECTION 15 (V0563B)	5199	1
28	80433-29		PLACARD, B707 AUX FAK SECTION 17 (V0563B)	5199	1
29	80433-30		PLACARD, B707 AUX FAK SECTION 18 (V0563B) (DELETED	5199	1
			BY SVA E.O. 80433)		
29	80433-30-1		PLACARD, B707 AUX FAK SECTION 18 (V0563B) (ADDED	5199	1
			BY SVA F.O. 80433)		
30	80433-42		COVER, PLEXIGLASS (V0563B) (USED ON 80433-25)	5199	1
31	80433-43		COVER, PLEXIGLASS (V0563B) (USED ON 80433-26)	5199	1
32	80433-44		COVER, PLEXIGLASS (V0563B) (USED ON 80433-27)	5199	1
33	80433-45		COVER, PLEXIGLASS (V0563B) (USED ON 80433-28)	5199	1
34	80433-46		COVER, PLEXIGLASS (V0563B) (USED ON 80433-29)	5199	1
35	80433-47		COVER, PLEXIGLASS (V0563B) (USED ON 80433-30)	5199	1
			ATTACHING PARTS		
	701-5838		SCREW, (V0563B)	5199	24
	702-5262		NUT, (V0563B)	5199	24

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 03
WING/POWER PLANT

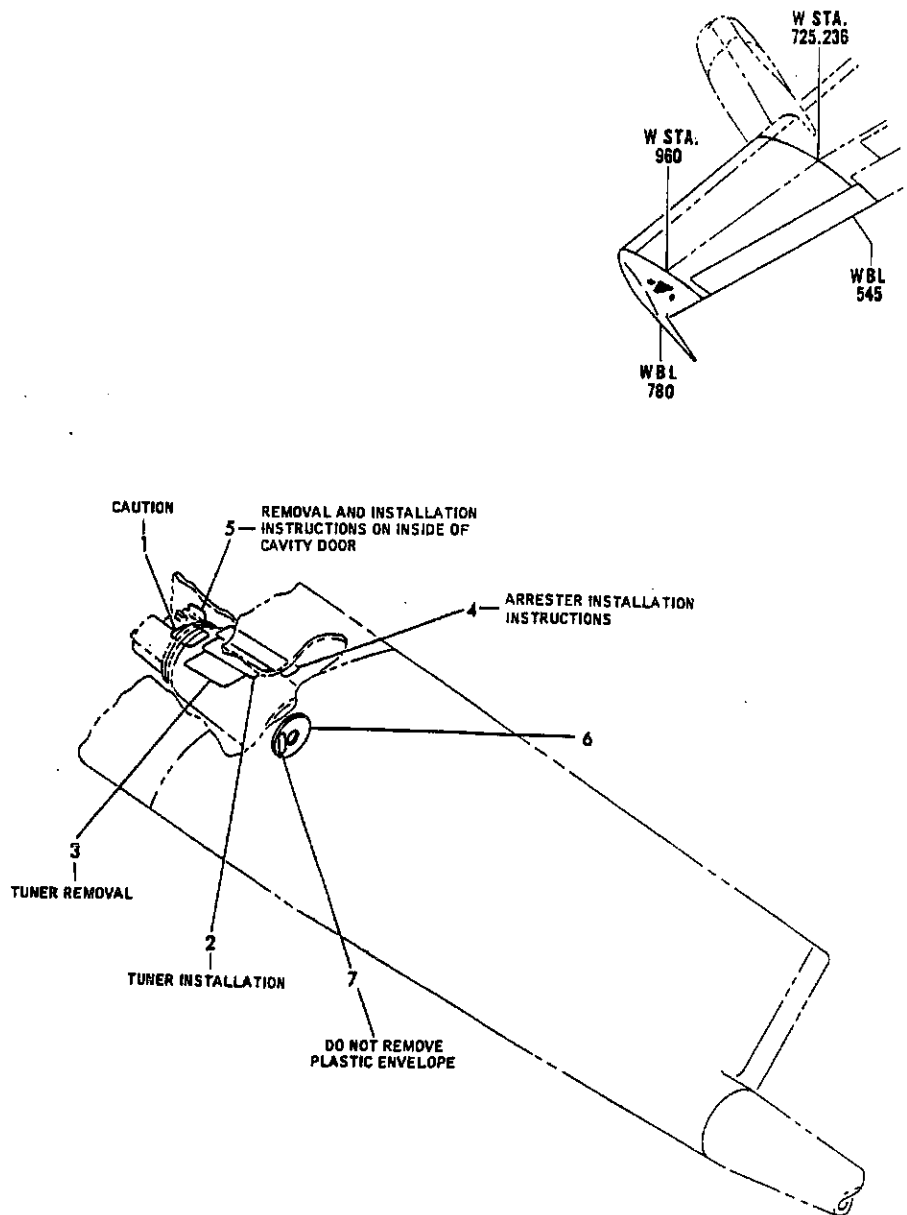 


FIGURE 2. ANTENNA AND COMPONENTS INSTL, WING HF COMMUNICATION (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2	65-8611-7		ANTENNA AND COMPONENTS INSTL, WING HF COMMUNICATION . . (RH) (REQUIRED PLACARDS ONLY) (ADDED BY SB 3392) (SEE 24-2, FIG. 12, ITEM 32)	0203	RF
2	BACM9T6C		. DECAL, TUNER INSTALLATION	0203	1
3	BACM9T6D		. DECAL, TUNER REMOVAL.	0203	1
4	BACM10A61-49A		. MARKER, ALUMINUM FOIL, ARRESTER INSTL INSTRUCTIONS. .	0203	1
5	BACM10L21-18WA		. MARKER, ALUMINUM FOIL, REMOVAL AND INSTALLATION . . .	0203	1
			INSTRUCTIONS ON INSIDE OF CAVITY DOOR		
6	66-2856		. GASKET ASSY, DISK INSULATOR (REQUIRED PLACARDS ONLY)	0203	RF
7	BACM9L30-10WA		. . DECAL, DO NOT REMOVE PLASTIC ENVELOPE	0203	1
			. . COMMUNICATIONS, (SEE 23-01, FIG. 10).	0203	
			. FOR REFERENCE TO OTHER COMPONENTS DETAILS, SEE NHA. .	0203	
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

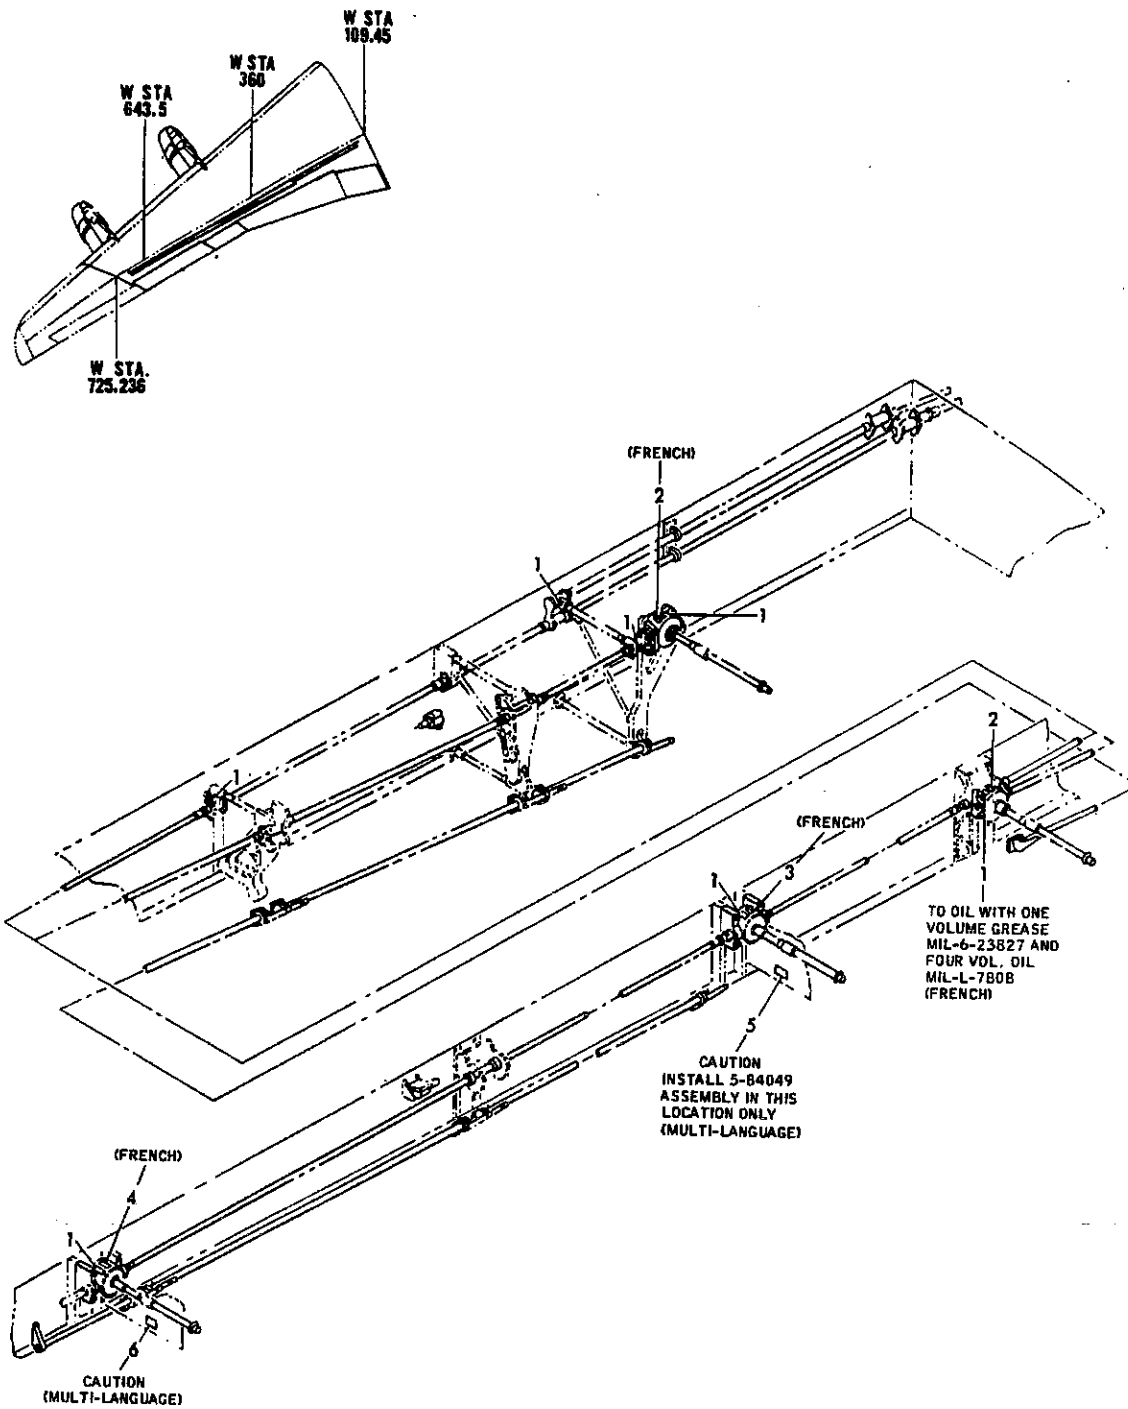 


FIGURE 5. DRIVE INSTL, SECTION 26 FLAP (REQUIRED PLACARDS ONLY)

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5	50-8708-326	DRIVE INSTL, SECTION 26 FLAP LH (REQUIRED PLACARDS. . . ONLY) (SEE 57-3, FIG. 1, ITEM 15)		RF
	50-8708-426	DRIVE INSTL, SECTION 26 FLAP RH (REQUIRED PLACARDS. . . ONLY) (SEE 57-3, FIG. 1, ITEM 15)		RF
5	BAC27CCT2	. MARKER, ALUMINUM FOIL		1
6	BAC27CCT3	. MARKER, ALUMINUM FOIL		1
		. FOR REFERENCE TO OTHER DRIVE DETAILS, SEE NHA		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

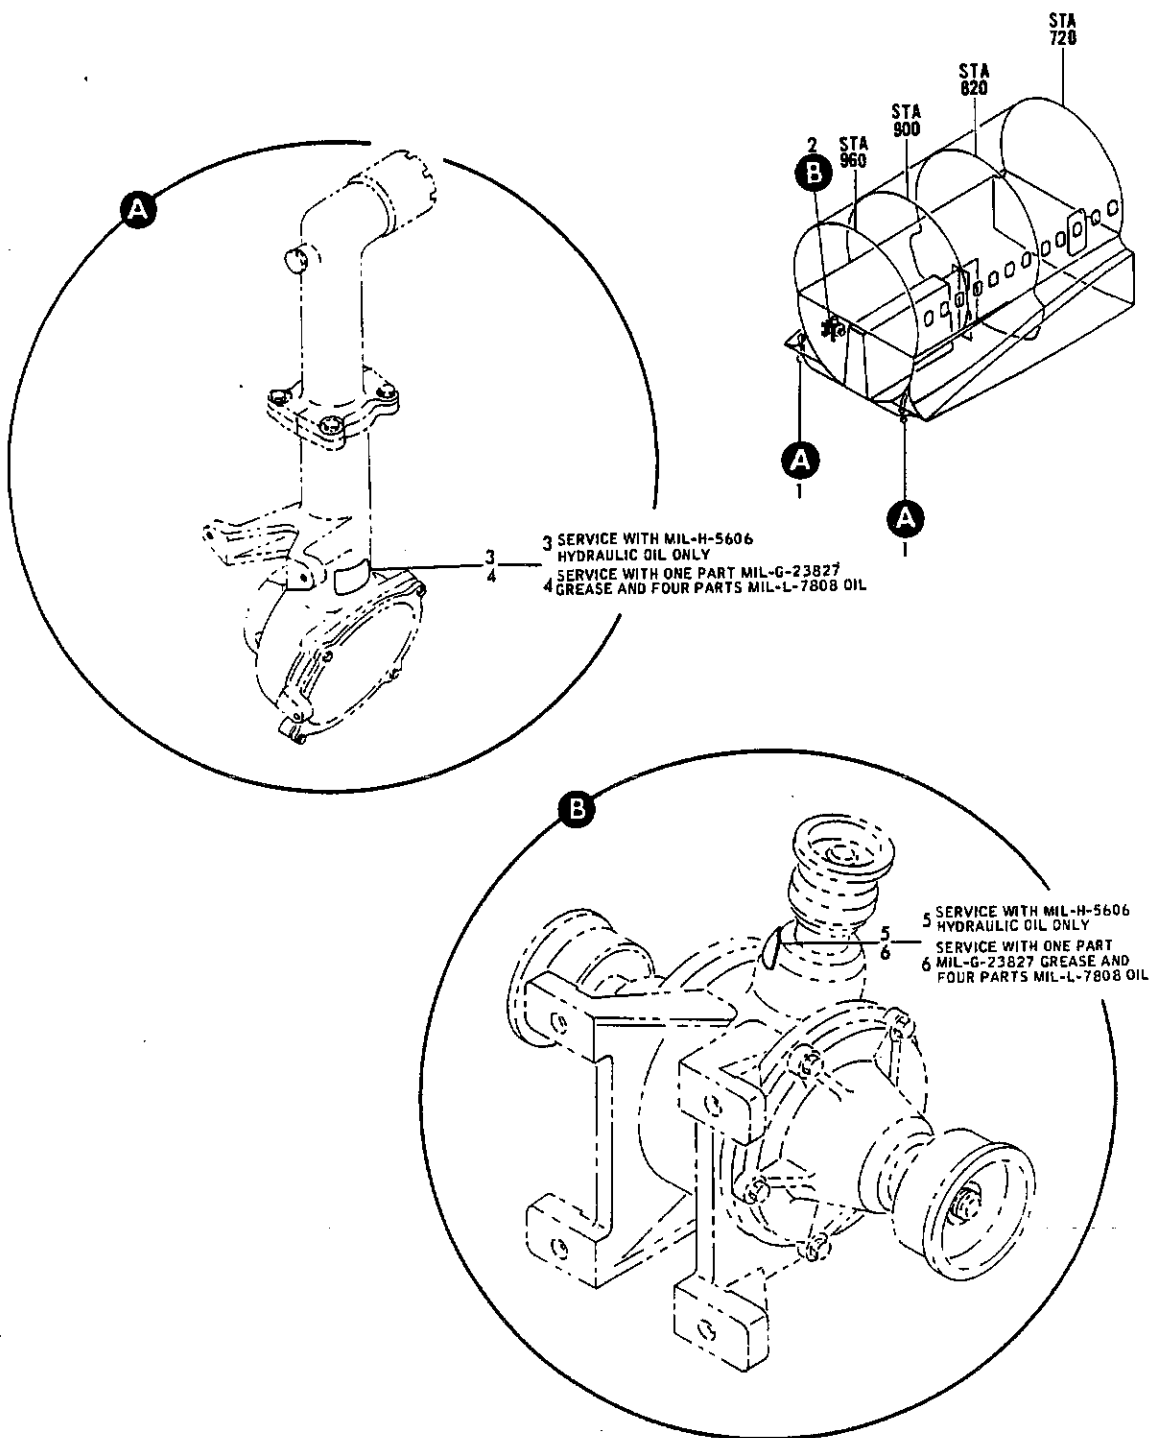 


FIGURE 6. GEAR BOX INSTL, FIGURE 6. GEAR BOX ASSY, FILLET FLAP DRIVE (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R	6 2	65-20845-7	GEAR BOX ASSY, FILLET FLAP DRIVE TEE (REQUIRED PLACARDS ONLY) (SEE 27-7, FIG. 29, ITEM 32) (OPTIONAL 65-20845-5)	0150 RF
	2	65-20845-5	GEAR BOX ASSY, FILLET FLAP DRIVE TEE (REQUIRED PLACARDS ONLY) (SEE 27-7, FIG. 29, ITEM 32) (OPTIONAL TO 65-20845-7)	0150 RF
	2	65-20845-7	GEAR BOX ASSY, FILLET FLAP DRIVE TEE (REQUIRED PLACARDS ONLY) (SEE 27-7, FIG. 29, ITEM 32)	5199 RF
	6	BACM10L6R	. MARKER-ALUMINUM FOIL, SERVICE WITH ONE PART MIL-G . . 23827 GREASE AND FOUR PARTS MIL-L 7808 OIL . FOR REFERENCE TO OTHER GEAR BOX DETAILS, SEE NHA. . .	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				


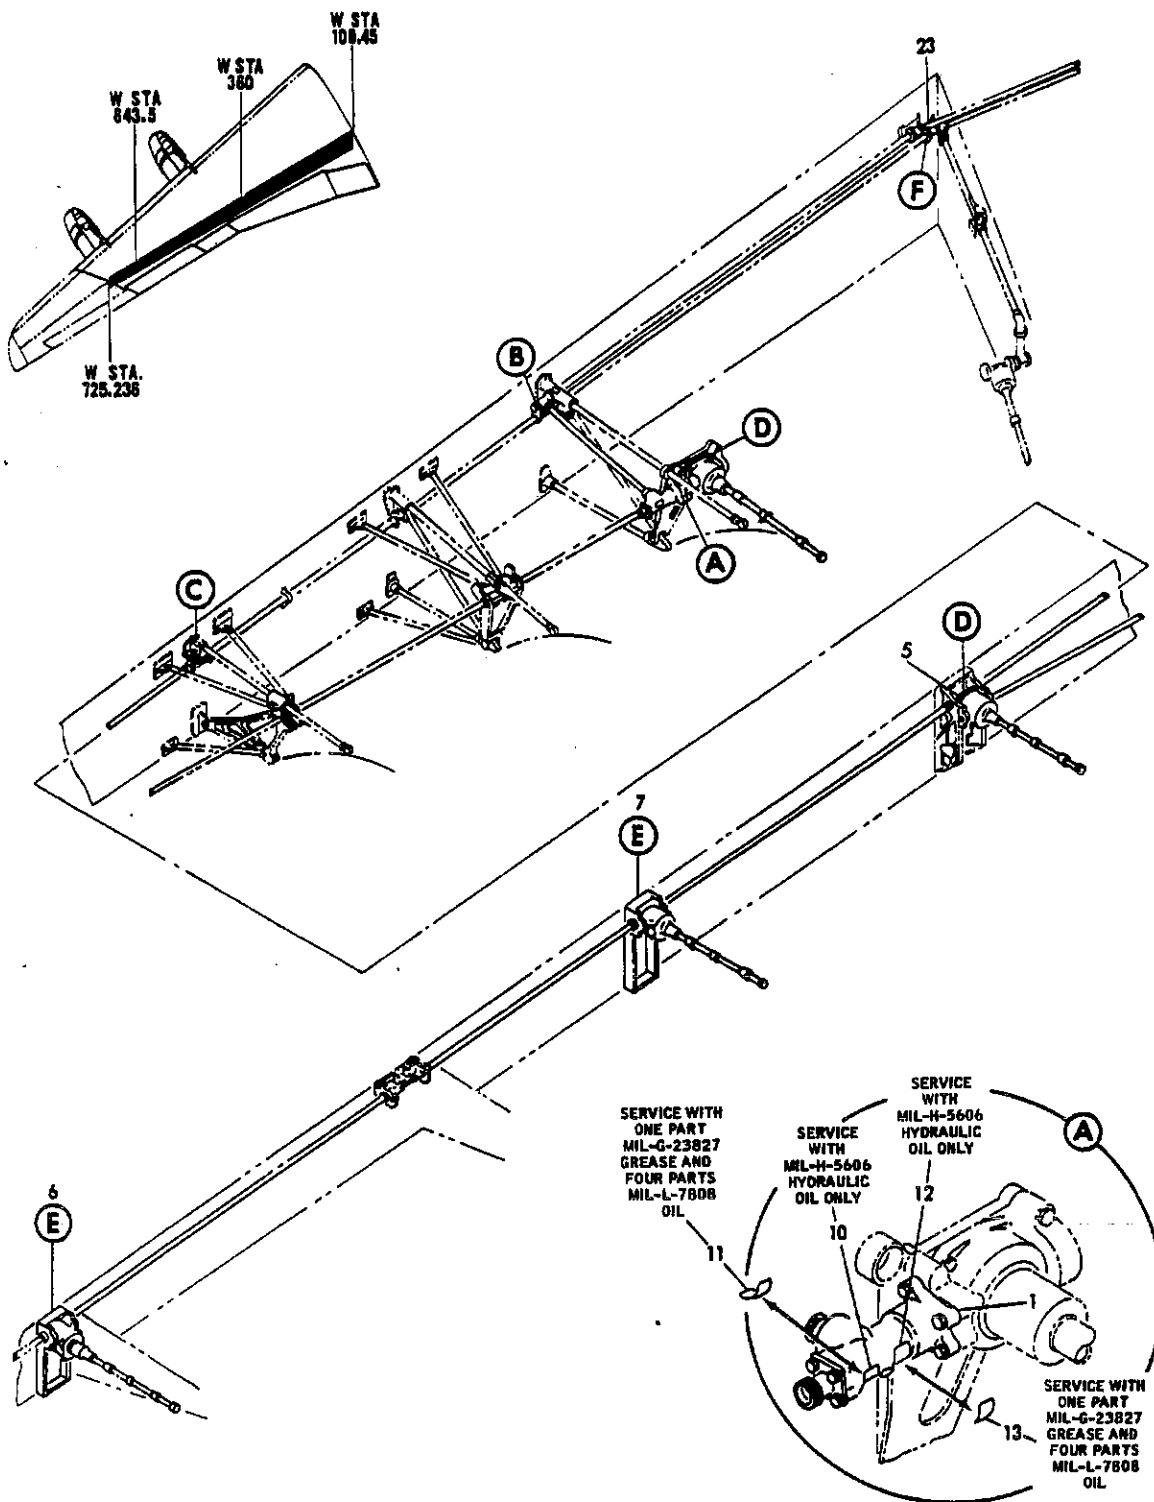 


FIGURE 8. GEAR BOX ASSY, FLAP DRIVE (REQUIRED PLACARDS ONLY)
GEAR BOX INSTL, WING STATION 122 FLAP DRIVE ANGLE (REQUIRED PLACARDS ONLY)
TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (REQUIRED PLACARDS ONLY) (SHEET 1)

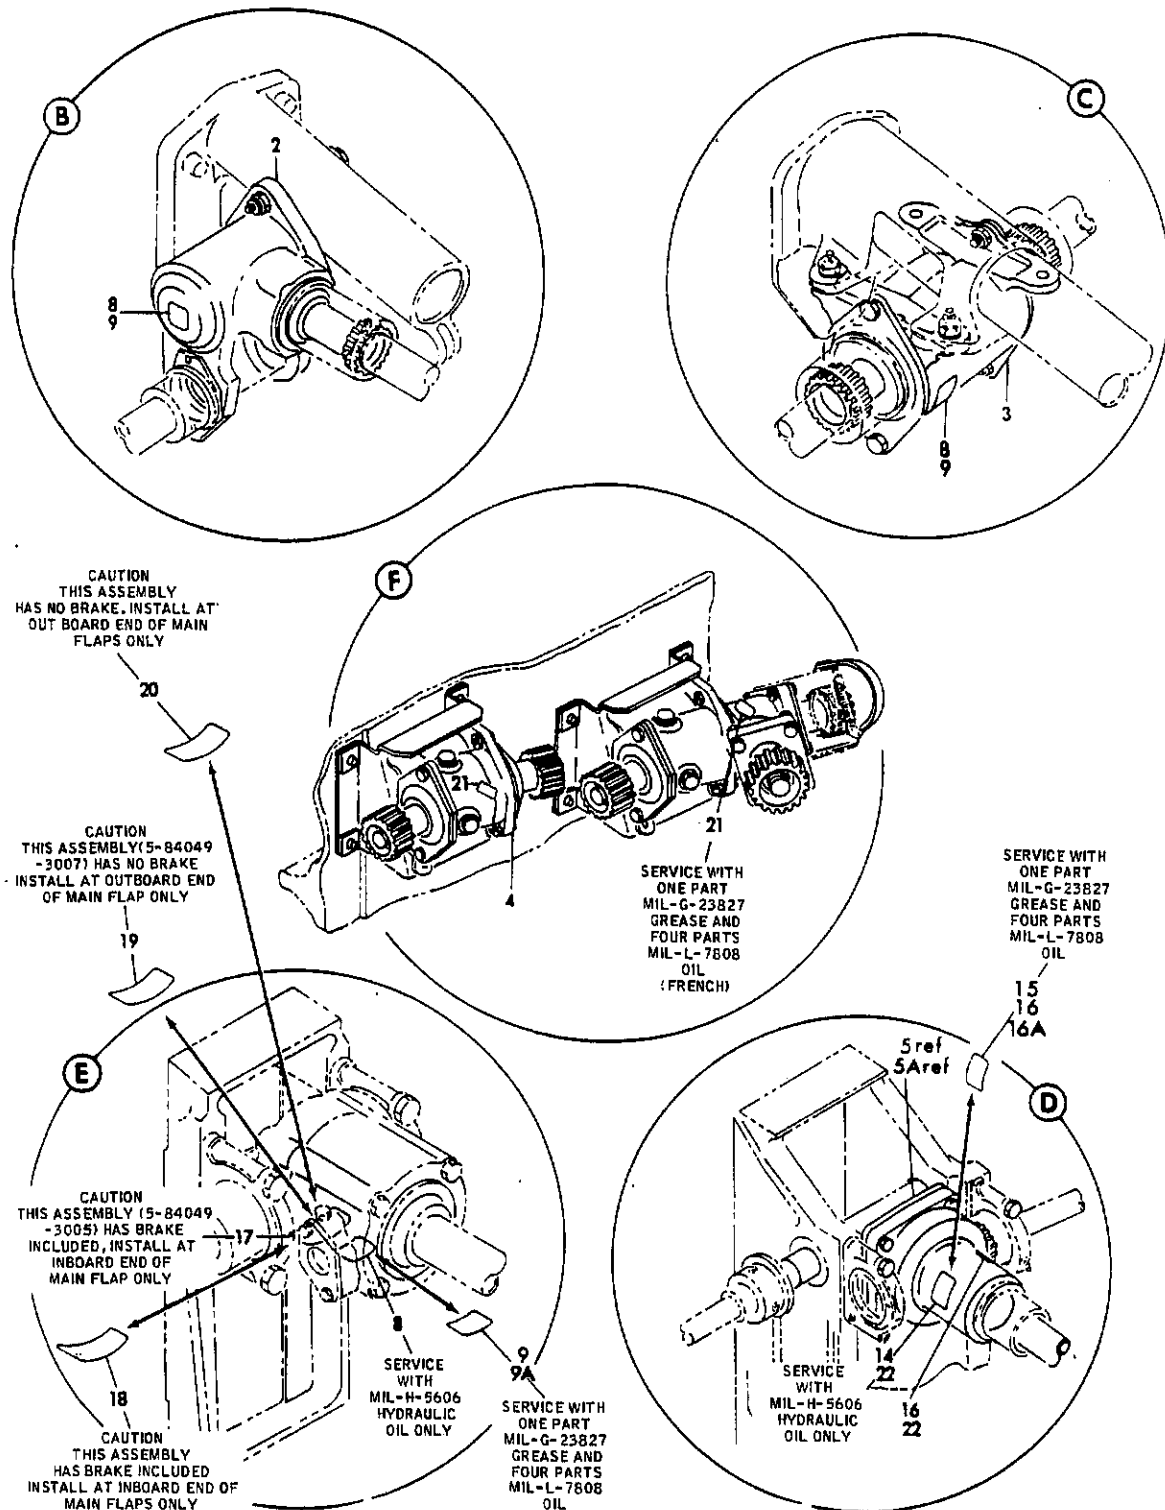 

GEAR BOX ASSY, FLAP DRIVE (REQUIRED PLACARDS ONLY)
GEAR BOX INSTL, WING STATION 122 FLAP DRIVE ANGLE (REQUIRED PLACARDS ONLY)
FIGURE 8. TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (REQUIRED PLACARDS ONLY) (SHEET 2)

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE					EFF FROM TO	UNITS PER ASSY		
			1	2	3	4	5	6	7		
R	8	6	5-84049-3034	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (REQUIRED. . .					0450	RF	
R			PLACARDS ONLY) (SEE 27-7, FIG. 36, ITEM 87 AND								
R		6	5-84049-3040	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (REQUIRED. . .					5151	RF	
R			PLACARDS ONLY) (SEE 27-7, FIG. 37, ITEM 92)								
R		6	5-84049-3046	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (REQUIRED. . .					5151	RF	
R			PLACARDS ONLY) (SEE 27-7, FIG. 37, ITEM 92)								
R		6	5-84049-3046	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (REQUIRED. . .					5299	RF	
R			PLACARDS ONLY) (SEE 27-7, FIG. 37, ITEM 92)								
R		7	5-84049-3028	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (REQUIRED. . .					0102	RF	
R			PLACARDS ONLY) (SEE 27-7, FIG. 37, ITEM 91)								
R		7	5-84049-3032	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (REQUIRED. . .					0303	RF	
R			PLACARDS ONLY) (SEE 27-7, FIG. 37, ITEM 91).								
R		7	5-84049-3028	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (REQUIRED. . .					0303	RF	
R			PLACARDS ONLY) (SEE 27-7, FIG. 37, ITEM 91)								
R		7	5-84049-3032	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (REQUIRED. . .					0450	RF	
R			PLACARDS ONLY) (SEE 27-7, FIG. 36, ITEM 88 AND								
R		7	5-84049-3038	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (REQUIRED. . .					5151	RF	
R			PLACARDS ONLY) (SEE 27-7, FIG. 37, ITEM 91)								
R		7	5-84049-3045	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (REQUIRED. . .					5151	RF	
R			PLACARDS ONLY) (SEE 27-7, FIG. 37, ITEM 91)								
R		7	5-84049-3045	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (REQUIRED. . .					5299	RF	
R			PLACARDS ONLY) (SEE 27-7, FIG. 37, ITEM 91)								
R		9	BACM10L6R	. MARKER-ALUMINUM FOIL, SERVICE INSTRUCTIONS (NOT USED						1	
R			ON 65-7095-1, 65-20852-2, 65-8620-1, -2,								
R		9A	BAC27CCT24	. MARKER-ALUMINUM FOIL, SERVICE INSTRUCTIONS.					5151	2	
R			(FRENCH) (USED ON 5-84049-3032, -3034, -3028,								
R			-3038 AND -3040)								
R		13	BACM10L6R	. MARKER-ALUMINUM FOIL, SERVICE INSTRUCTIONS (USED ON .					0150	1	
R			65-20852-1)								
R		16	BACM10L6R	. MARKER-ALUMINUM FOIL, SERVICE INSTRUCTIONS (USED ON .						2	
R			65-20679-6, -7, -8, -10, -14)								
R		18	BACM10A21-168P	. MARKER-ALUMINUM FOIL, CAUTION-INSTALLATION.						1	
R			INSTRUCTIONS (USED ON 5-84049-3012, -3016, -3028,								
R			-3032, -3038, 3041, 3045)								
R		18	BAC27CWG7	. MARKER-ALUMINUM FOIL, CAUTION-INSTALLATION.					5151	1	
R			INSTRUCTIONS (FRENCH) (USED ON 5-84049-3032								
R			AND -3038)								
R		20	BACM10A21-168N	. MARKER-ALUMINUM FOIL, CAUTION-INSTALLATION.						1	
R			INSTRUCTIONS (USED ON 5-84049-3014, -3018, -3030,								
R			3034, -3040, -3042, -3046)								
R		20	BAC27CWG8	. MARKER-ALUMINUM FOIL, CAUTION-INSTALLATION.					5151	1	
R			INSTRUCTIONS (FRENCH) (USED ON 5-84049-3034								
R			AND -3040)								
R			. FOR REFERENCE TO OTHER GEAR BOX AND TRANSMISSION. . .								
R			DETAILS, SEE NHA								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											


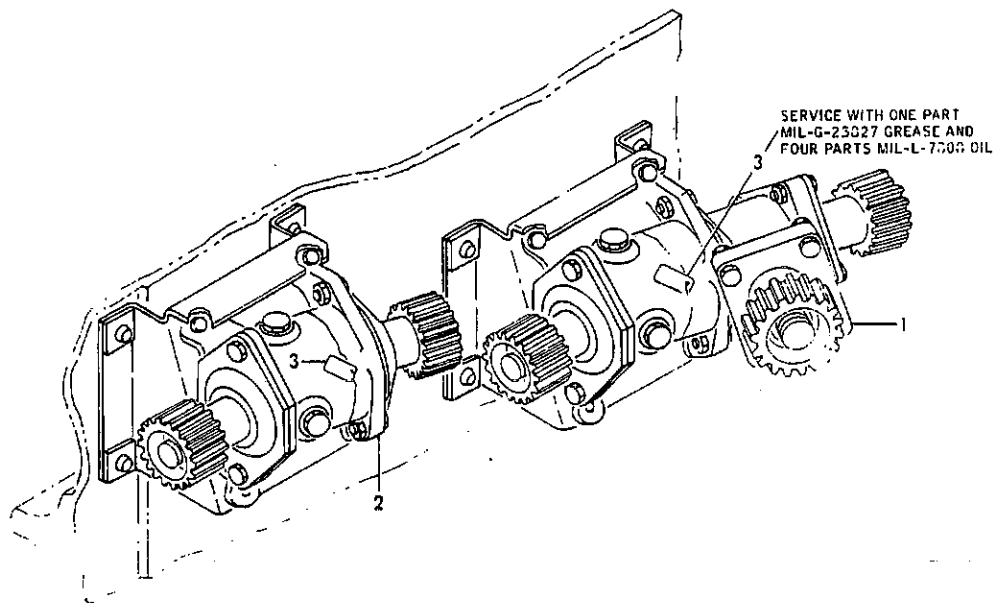 


FIGURE 9. GEAR BOX ASSY, FLAP (REQUIRED PLACARDS ONLY)

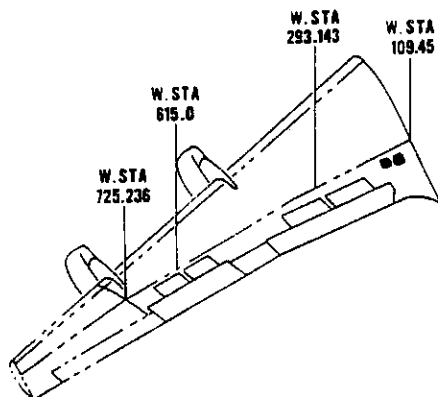 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R R R R R R R	9 1 65-6373-13	GEAR BOX ASSY, OUTBOARD FLAP DRIVE ANGLE (LH) (REQUIRED PLACARDS ONLY) (SEE 27-7, FIG. 39, ITEM 2) (OPTIONAL 65-6373-7)	0150	RF
	1 65-6373-7	GEAR BOX ASSY, OUTBOARD FLAP DRIVE ANGLE (LH) (REQUIRED PLACARDS ONLY) (SEE 27-7, FIG. 39, ITEM 2) (OPTIONAL TO 65-6373-13)	0150	RF
	1 65-6373-13	GEAR BOX ASSY, OUTBOARD FLAP DRIVE ANGLE (LH) (REQUIRED PLACARDS ONLY) (SEE 27-7, FIG. 39, ITEM 2)	5199	RF
	1 65-6373-14	GEAR BOX ASSY, OUTBOARD FLAP DRIVE ANGLE (RH) (REQUIRED PLACARDS ONLY) (SEE 27-7, FIG. 39, ITEM 2) (OPTIONAL 65-6373-8)	0150	RF
	1 65-6373-8	GEAR BOX ASSY, OUTBOARD FLAP DRIVE ANGLE (RH) (REQUIRED PLACARDS ONLY) (SEE 27-7, FIG. 39, ITEM 2) (OPTIONAL TO 65-6373-14)	0150	RF
	1 65-6373-14	GEAR BOX ASSY, OUTBOARD FLAP DRIVE ANGLE (RH) (REQUIRED PLACARDS ONLY) (SEE 27-7, FIG. 39, ITEM 2) FIG. 39, ITEM 2)	5199	RF
	2 65-20841-3	GEAR BOX ASSY, INBOARD FLAP DRIVE ANGLE (REQUIRED . . . PLACARDS ONLY) (SEE 27-7, FIG. 39, ITEM 1A) (OPTIONAL AND FOR REPLACEMENT ORDER 65-20841-5)	0151	RF
	2 65-20841-5	GEAR BOX ASSY, INBOARD FLAP DRIVE ANGLE (REQUIRED . . . PLACARDS ONLY) (SEE 27-7, FIG. 39, ITEM 1A) (OPTIONAL TO AND REPLACEMENT FOR 65-20841-3)	0151	RF
	2 65-20841-5	GEAR BOX ASSY, INBOARD FLAP DRIVE ANGLE (REQUIRED . . . PLACARDS ONLY) (SEE 27-7, FIG. 39, ITEM 1A)	5299	RF
	2 65-20843-5	GEAR BOX ASSY, FILLET FLAP DRIVE ANGLE (REQUIRED . . . PLACARDS ONLY) (SEE 27-7, FIG. 31, ITEM 1) (OPTIONAL 65-20843-3)	0151	RF
	2 65-20843-3	GEAR BOX ASSY, FILLET FLAP DRIVE ANGLE (REQUIRED . . . PLACARDS ONLY) (SEE 27-7, FIG. 31, ITEM 1) (OPTIONAL TO 65-20843-5)	0151	RF
	2 65-20843-5	GEAR BOX ASSY, FILLET FLAP DRIVE ANGLE (REQUIRED . . . PLACARDS ONLY) (SEE 27-7, FIG. 31, ITEM 1)	5299	RF
	3 BACM10L6R	. MARKER-ALUMINUM FOIL SERVICE INSTRUCTIONS FOR REFERENCE TO OTHER GEAR BOX DETAILS, SEE NHA. . .		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

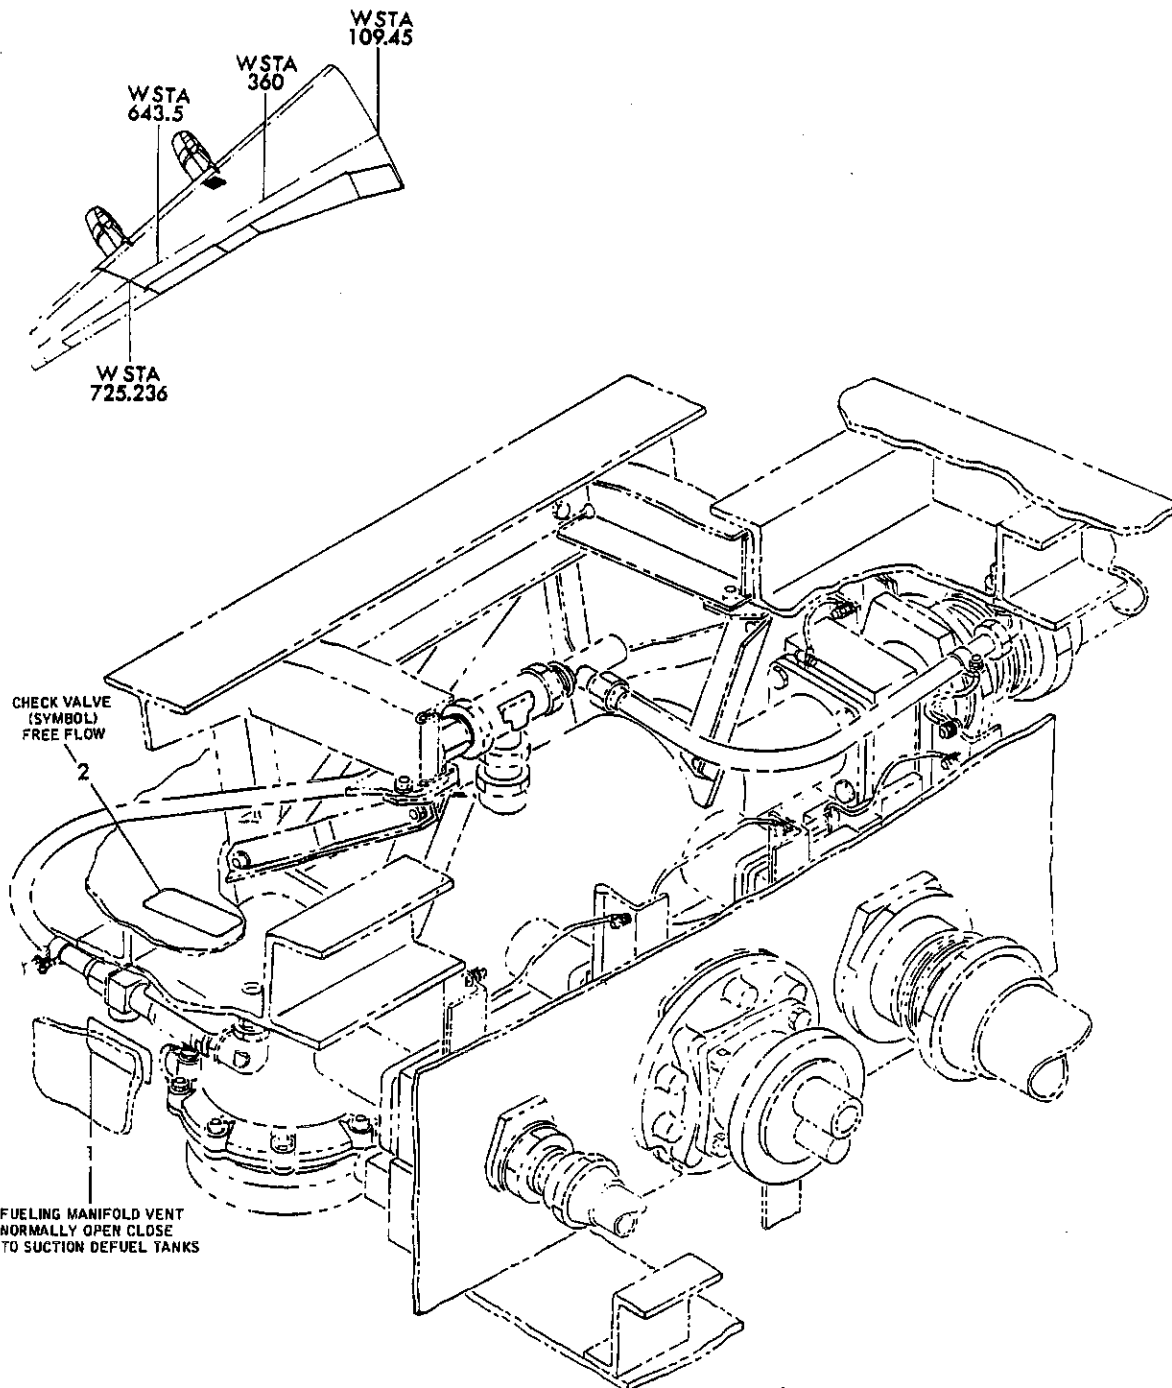 


FIGURE 10. MANIFOLD INSTL, WING STATION 501 TO 529.50 PRESSURE FUELING CONTROL (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
10	50-6878-9	MANIFOLD INSTL, WING STATION 501 TO 529.50 PRESSURE . .								RF
		FUELING CONTROL LH (REQUIRED PLACARDS ONLY) (SEE								
		28-1, FIG. 14, ITEM 120 AND 28-1, FIG. 15, ITEM 90)								
	50-6878-10	MANIFOLD INSTL, WING STATION 501 TO 529.50 PRESSURE . .								RF
		FUELING CONTROL RH (REQUIRED PLACARDS ONLY) (SEE								
		28-1, FIG. 14, ITEM 120 AND 28-1, FIG. 15, ITEM 90)								
1	BACM10F5FN	. METAL-CAL, FUELING MANIFOLD VENT VALVE NORMALLY OPEN								1
		CLOSE TO SUCTION DEFUEL TANKS								
2	BACM10V21-2JH	. METAL-CAL, CHECK VALVE FREE FLOW (LH ONLY).								1
2	BACM10V21-2JG	. METAL-CAL, CHECK VALVE FREE FLOW (RH ONLY).								1
		. FOR REFERENCE TO OTHER MANIFOLD DETAILS, SEE NHA. . .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

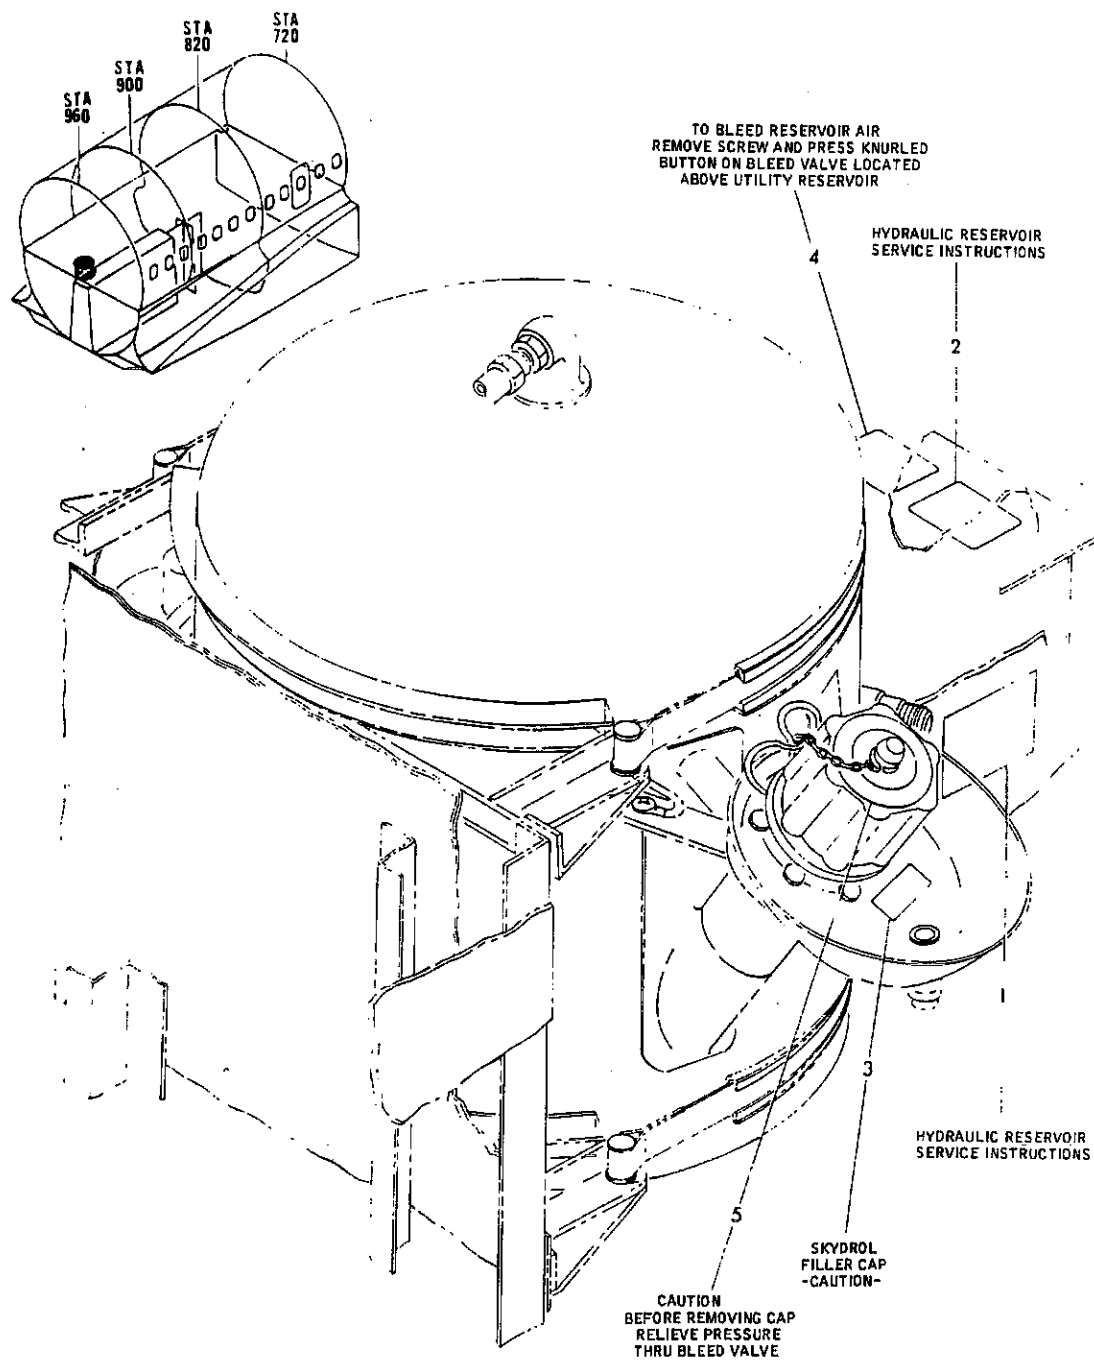 


FIGURE 15. RESERVOIR INSTL, HYDRAULIC (REQUIRED PLACARDS ONLY)

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R R R R R R R R	15	50-11317-15		RESERVOIR INSTL, HYDRAULIC (REQUIRED PLACARDS ONLY) . . . (SEE 29-2, FIG. 20, ITEM 125, 29-2, FIG. 20A, ITEM 134 AND 29-2, FIG. 21, ITEM 132)		RF
	2	BACM10H6CW		. MARKER-ALUMINUM FOIL	0150	1
	2	BAC27CHY51		. MARKER, ALUMINUM FOIL	5199	1
	4	BACM10L10ZG		. MARKER, ALUMINUM FOIL (ADDED BY SB 2787)	0150	1
		50-11317-16		. RESERVOIR ASSY, (REQUIRED PLACARDS ONLY) (DELETED BY SB 2787)	0150	RF
		50-11317-22		. RESERVOIR ASSY, (REQUIRED PLACARDS ONLY) (ADDED BY SB 2787)	0150	RF
		50-11317-22		. RESERVOIR ASSY, (REQUIRED PLACARDS ONLY)	5199	RF
		50-10397-4		. . CAP ASSY, FILLER (REQUIRED PLACARDS ONLY) (DELETED BY SB 2787)	0150	RF
		50-10397-7		. . CAP ASSY, FILLER (REQUIRED PLACARDS ONLY) (ADDED BY SB 2787)	0150	RF
		50-10397-7		. . CAP ASSY, FILLER (REQUIRED PLACARDS ONLY)	5199	RF
	5	BACN12P22-2G		. . . NAMEPLATE, CAUTION INSTRUCTIONS (DELETED BY SB 2787)	0150	1
	5	BAC27CHY31		. . . NAMEPLATE, CAUTION INSTRUCTIONS (ADDED BY SB 2787)	0150	1
	5	BAC27CHY31		. . . NAMEPLATE, CAUTION INSTRUCTIONS	5199	3
		AN535-0-3		ATTACHING PARTS		
		AN535-0-3		. . . SCREW	5199	3
		MS21318-8		. . . SCREW, (DELETED BY SB 2787)	0150	3
				. . . SCREW, (ADDED BY SB 2787)	0150	3
				-----*		
				. FOR REFERENCE TO OTHER RESERVOIR DETAILS, SEE NHA . .		
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

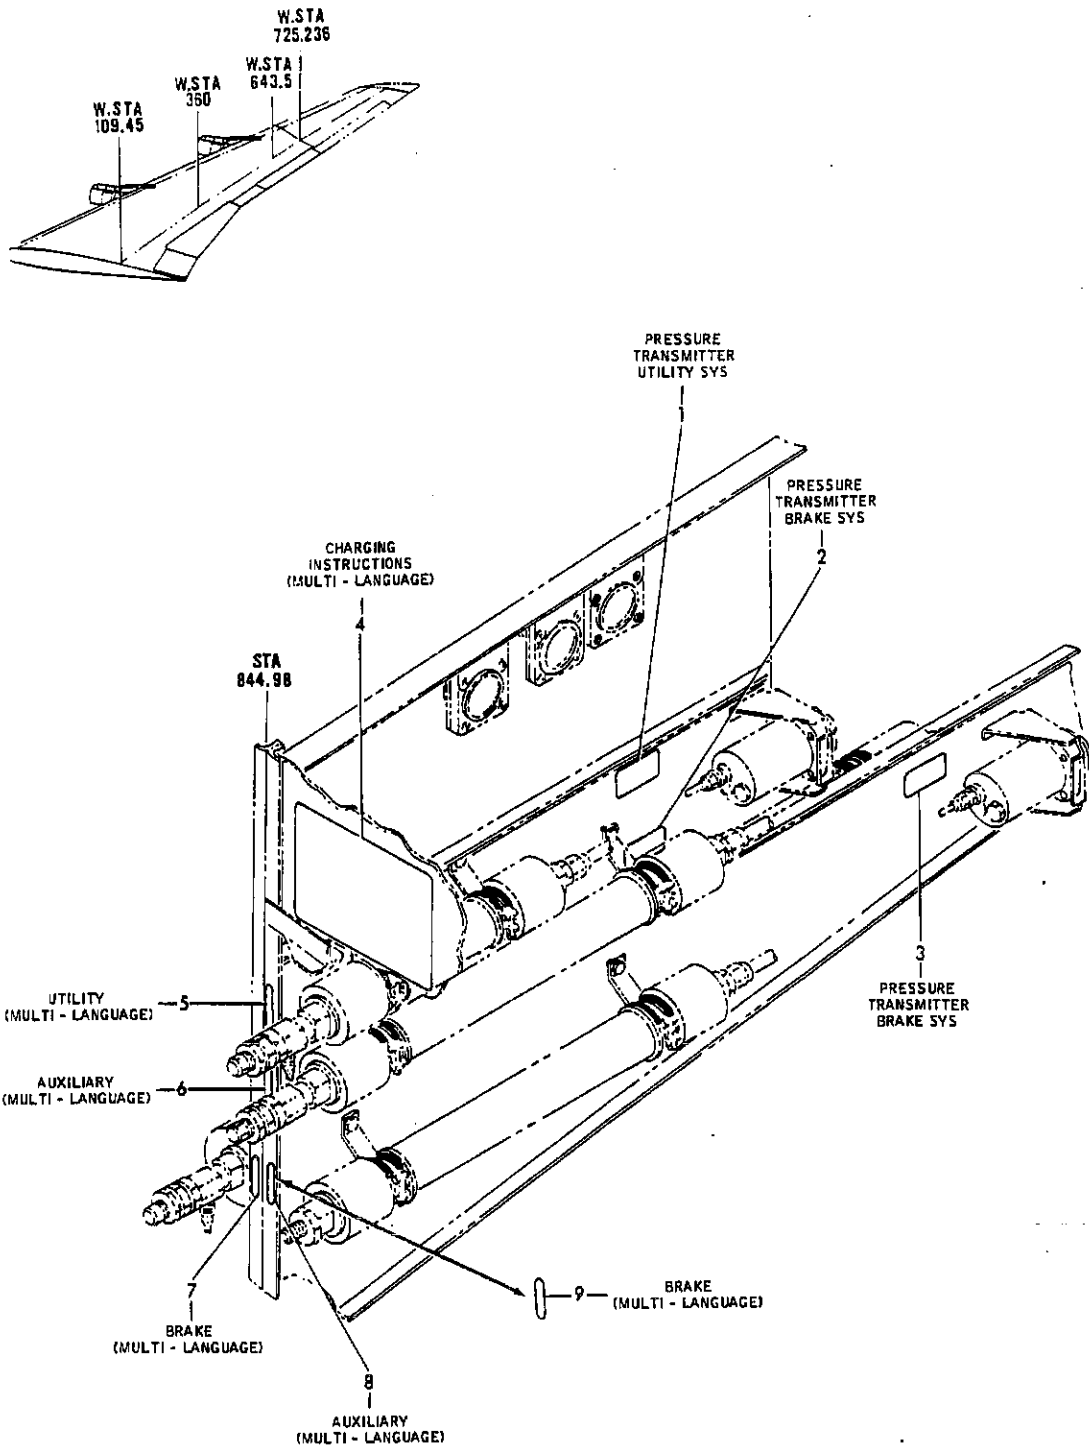 


FIGURE 16. ACCUMULATOR INSTL, TRAILING EDGE BEAM (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R	16	65-1341-7		ACCUMULATOR INSTL, TRAILING EDGE BEAM (REQUIRED PLACARDS ONLY) (SEE 29-2, FIG. 26, ITEM 142 AND 29-2, FIG. 27, ITEM 151)		RF
	1	BACMI0S11-338X		. MARKER-ALUMINUM FOIL, PRESSURE TRANSMITTER UTILITY. SYSTEM	5199	1
	3	BACMI0S11-338Y		. MARKER-ALUMINUM FOIL, PRESSURE TRANSMITTER SYSTEM . .		1
	4	BACMI0A3BN		. MARKER-ALUMINUM FOIL, CHARGING INSTRUCTIONS		1
	5	BACMI0L20-18GU		. MARKER-ALUMINUM FOIL, UTILITY		1
	6	BACMI0L20-18GV		. MARKER-ALUMINUM FOIL, AUXILIARY		1
	8	BACMI0L20-18GV		. MARKER-ALUMINUM FOIL, AUXILIARY	5199	1
	9	BACMI0B10-4BT		. MARKER-ALUMINUM FOIL, BRAKE	5199	1
				. FOR REFERENCE TO OTHER ACCUMULATOR DETAILS, SEE NHA .		
MISSING ITEM NUMBERS ARE NOT APPLICABLE						


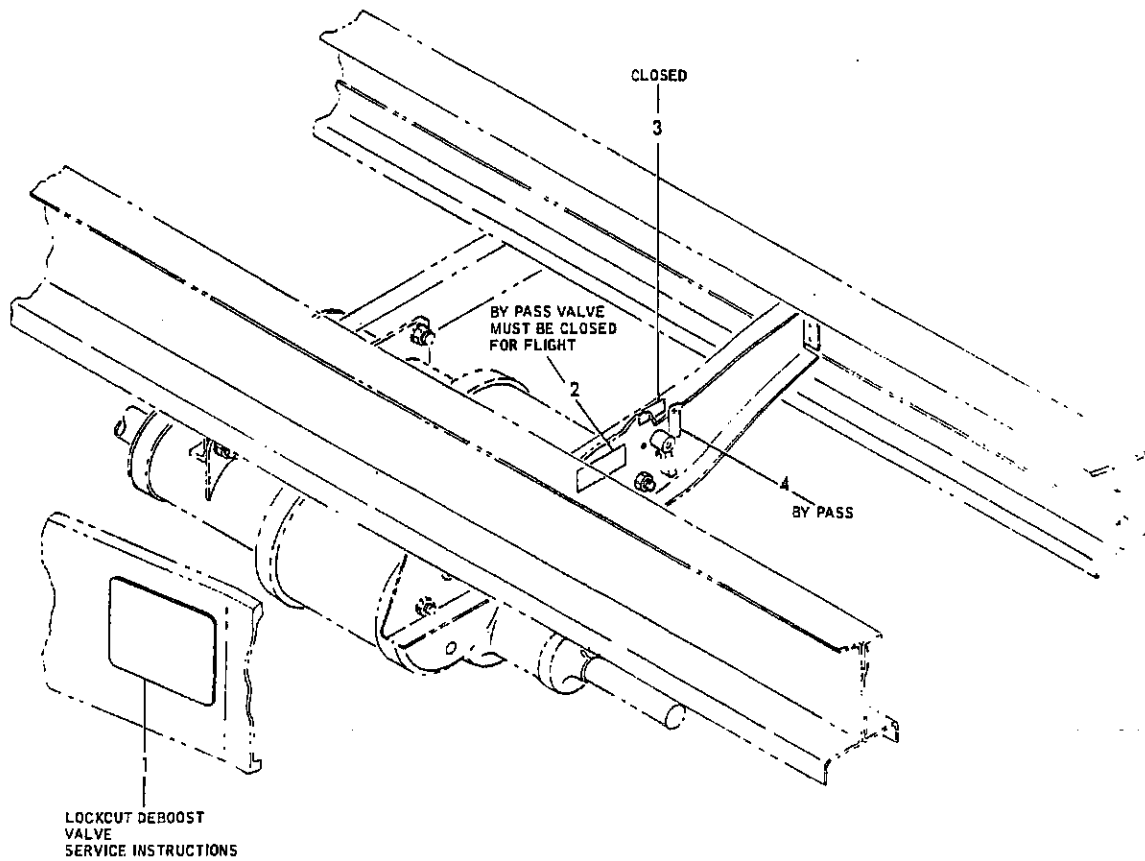 


FIGURE 17. VALVE INSTL. BRAKE DEBOOST (REQUIRED PLACARDS ONLY)

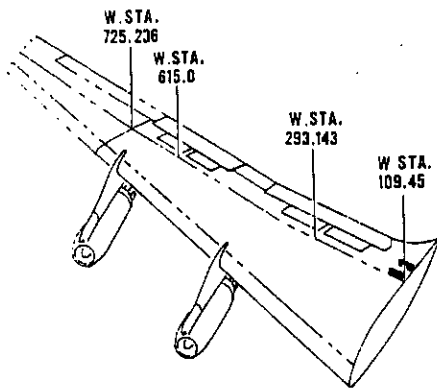 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R	17	65-45098-3	VALVE INSTL, BRAKE DEBOOST (LH) (REQUIRED PLACARDS. . . ONLY) (SEE 29-2, FIG. 25, ITEM 137, 29-2, FIG. 26, ITEM 139 AND 29-2, FIG. 27, ITEM 146)								RF
		65-45098-4	VALVE INSTL, BRAKE DEBOOST (RH) (REQUIRED PLACARDS. . . ONLY) (SEE 29-2, FIG. 25, ITEM 137, 29-2, FIG. 26, ITEM 139 AND 29-2, FIG. 27, ITEM 146)								RF
	1	BACM10V2APS	. MARKER, VALVE ALUMINUM FOIL (DELETED BY SB 3223). . .							0151	1
	1	BAC27CHY76	. MARKER-ALUMINUM FOIL LOCKOUT DEBOOST VALVE SERVICE. . . INSTRUCTIONS (ADDED BY SB 3223)							0151	1
	1	BAC27CHY76	. MARKER-ALUMINUM FOIL LOCKOUT DEBOOST VALVE SERVICE. . . INSTRUCTIONS (USED WITH 10-60264-5)							5299	1
	2	BACM10V21-2AFH	. MARKER, BY-PASS VALVE MUST BE CLOSED FOR FLIGHT . . . ALUMINUM FOIL (RH ONLY)								1
	3	BACM10L10-1BEC	. MARKER, CLOSED ALUMINUM FOIL (RH ONLY). . .								1
	4	BACM10L10-1BEA	. MARKER, BY-PASS ALUMINUM FOIL (RH ONLY) . . .								1
			. FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA . . .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

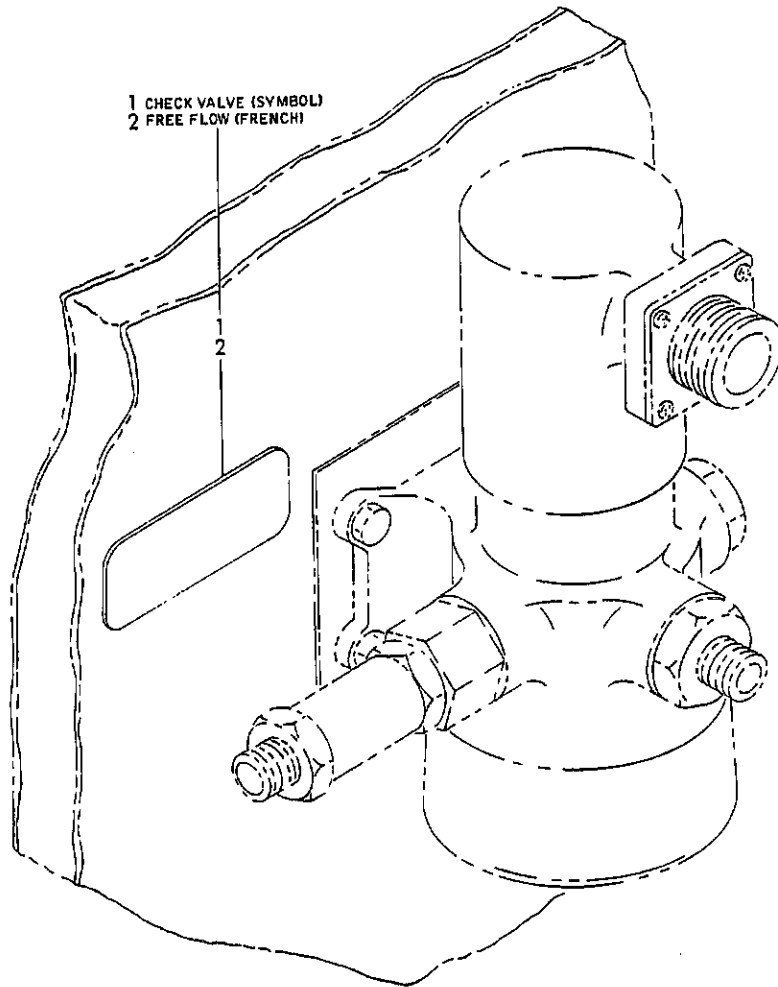 
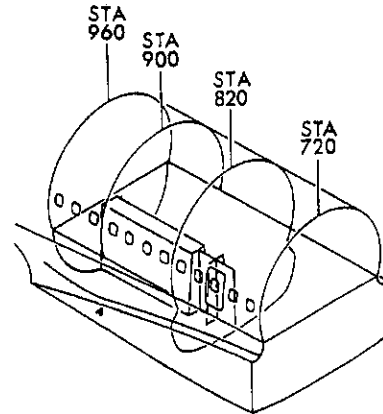 


FIGURE 18B. VALVE INSTL, BRAKE INTERCONNECT (REQUIRED PLACARDS ONLY)

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
18B	69-16794-1	VALVE INSTL, BRAKE INTERCONNECT (REQUIRED PLACARDS. . . ONLY) (SEE 29-2, FIG. 22, ITEM 151A, 29-2, FIG. 22A, ITEM 187, 29-2, FIG. 22B, ITEM 179, 29-2, FIG. 22C, ITEM 183, 29-2, FIG. 22D, ITEM 174, 29-2, FIG. 23, ITEM 125, 29-2, FIG. 24, ITEM 136, 29-2, FIG. 25, ITEM 142, 29-2, FIG. 26, ITEM 144 AND 29-2, FIG. 27, ITEM 153)								RF
1	BACM10V21-2JH	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										


 
 
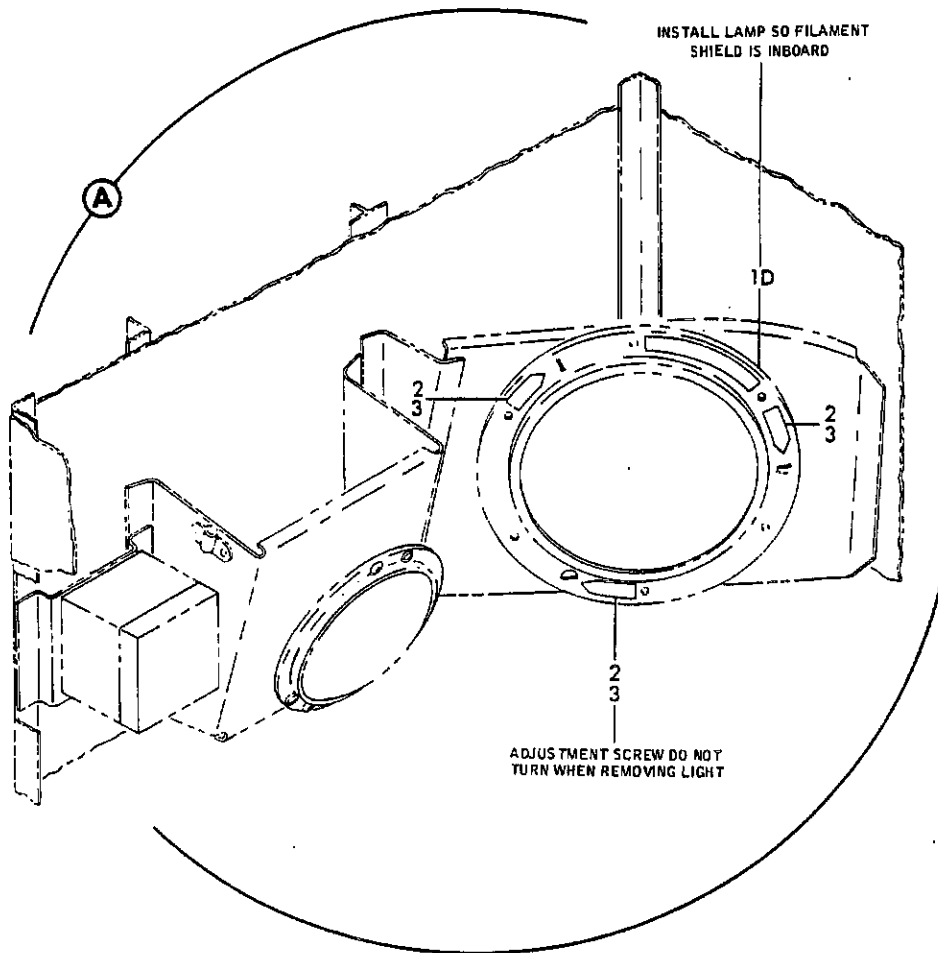 


FIGURE 19. RETAINER ASSY, LANDING LIGHT (REQUIRED PLACARDS ONLY)

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
19	1A	9-64386-4		RETAINER ASSY, LANDING LIGHT (REQUIRED PLACARDS ONLY) . (SEE 33-1, FIG. 13, ITEM 2)		RF
	2	BACM10S10-15AG		. MARKER-ALUMINUM FOIL, ADJUSTMENT SCREW DO NOT TURN. . WHEN REMOVING LAMP . FOR REFERENCE TO OTHER RETAINER DETAILS, SEE NHA. . .		3
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

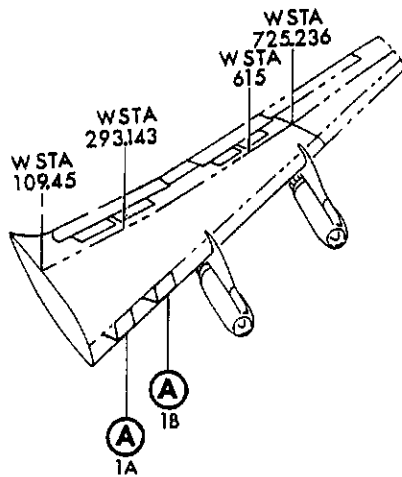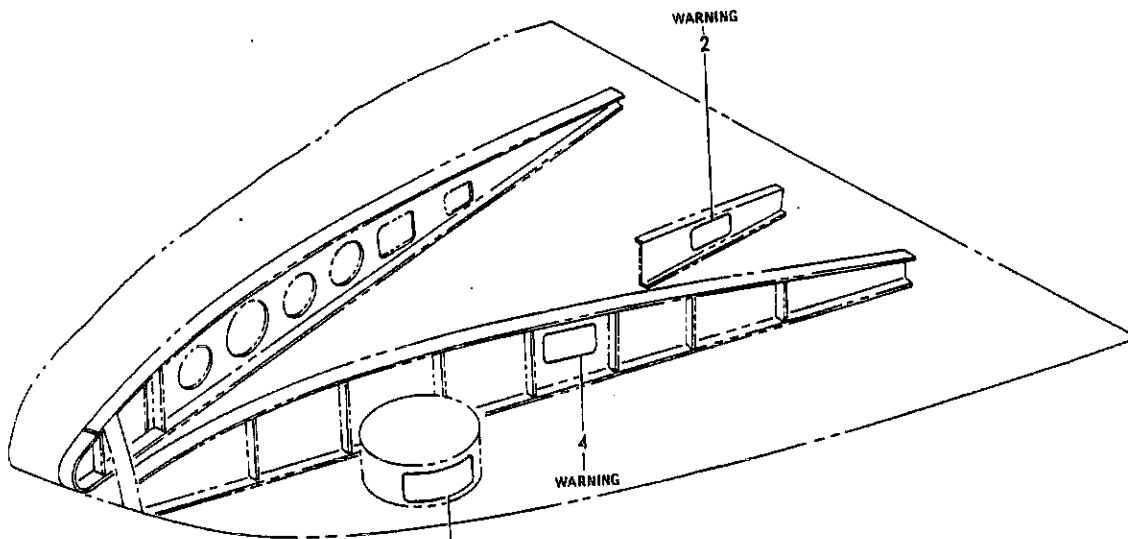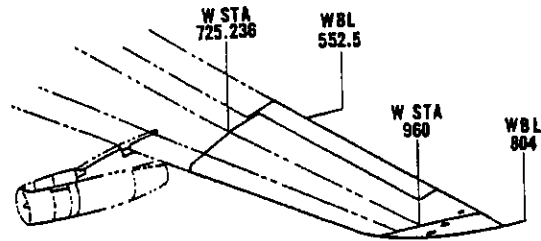 

NOTICE
THIS LIGHT ASSY. IS TO BE INSTALLED
IN 707-320 AIRPLANES ONLY

CAUTION
STAINLESS STEEL SCREWS MUST BE
USED FOR MOUNTING

LIGHT INSTL, RETRACTABLE LANDING (REQUIRED PLACARDS ONLY)
NUTPLATE INSTL, TRANSMITTER MOUNT
FIGURE 20. STRUCTURE INSTL, OUTBOARD WING FLUXGATE TRANSMITTER SUPPORT LH

MISSING ITEM NUMBERS ARE NOT APPLICABLE

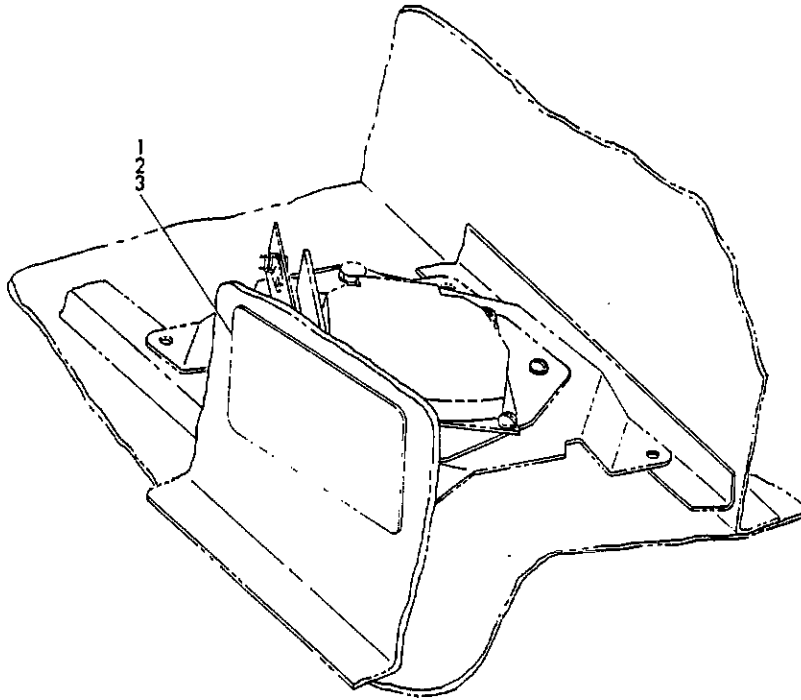 
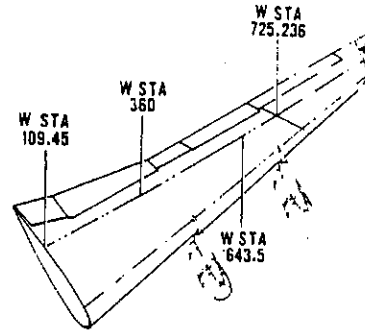 


FIGURE 20A. VALVE INSTL. WING COMPASS FLUX (REQUIRED PLACARDS ONLY)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
20A	65-7460-1	VALVE INSTL, WING COMPASS FLUX (LH) (REQUIRED PLACARDS ONLY) (VARIABLE DWG;65-7460-5001) (SEE 57-1, FIG. 1, ITEM 26)							5199	RF	
	65-7460-2	VALVE INSTL, WING COMPASS FLUX (RH) (REQUIRED PLACARDS ONLY) (VARIABLE DWG;65-7460-5002) (SEE 57-1, FIG. 1, ITEM 26)							5199	RF	
	1	BACM9W53-25	. SCOTCH-CAL, WARNING INFORMATION							5199	1
	2	BACM9W53-25	. SCOTCH-CAL, WARNING INFORMATION							5199	1
			. FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

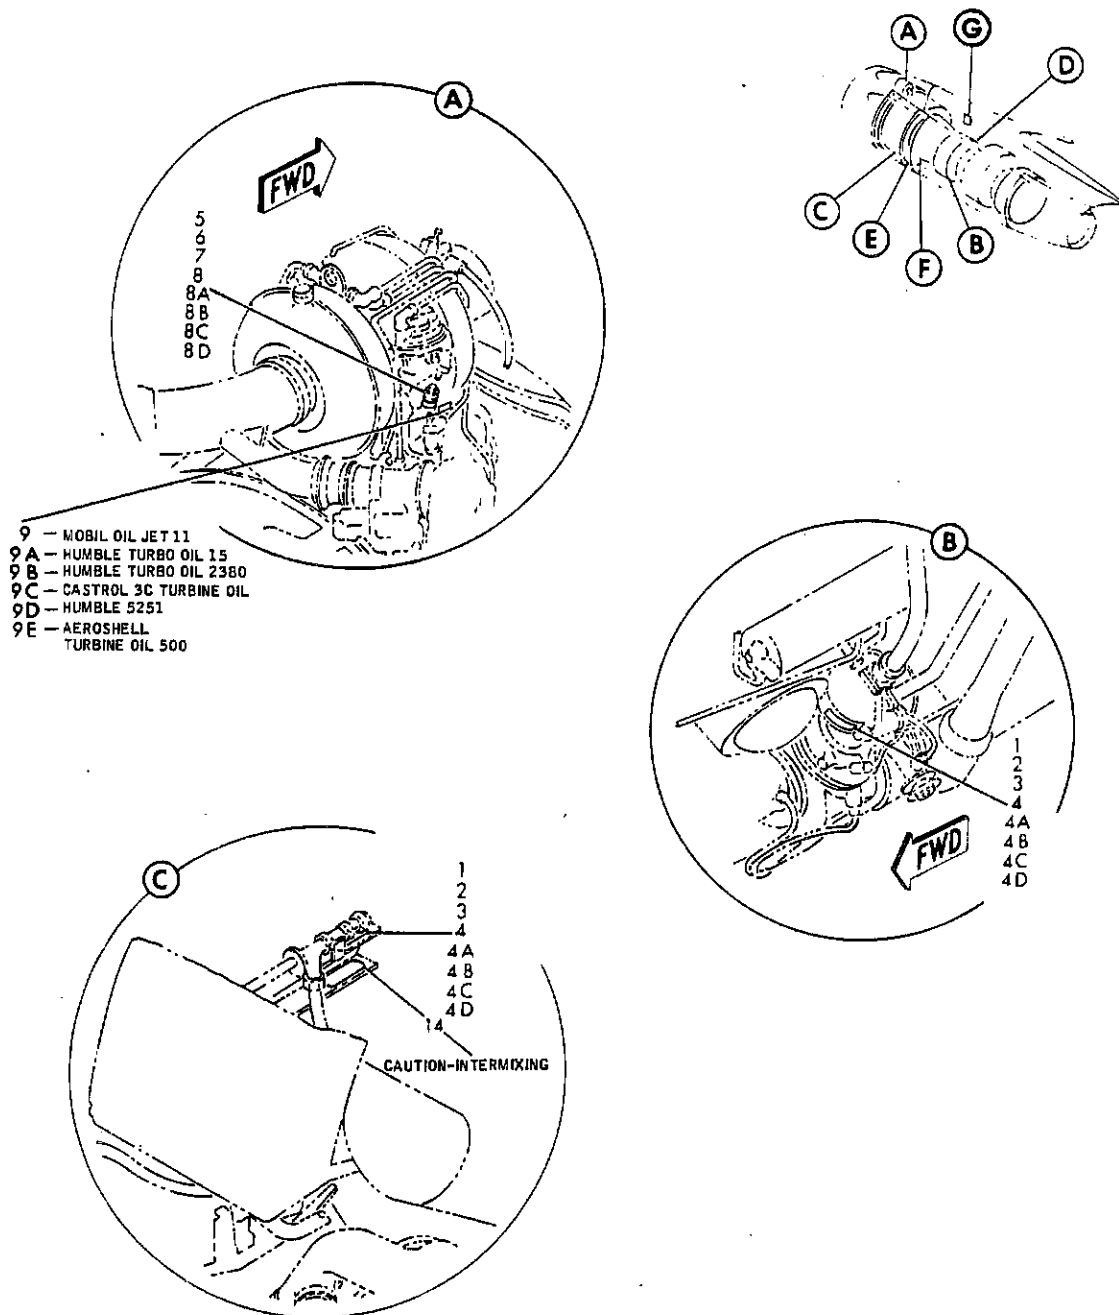 


FIGURE 23. MARKER INSTL, ENGINE AND ACCESSORIES (SHEET 1)



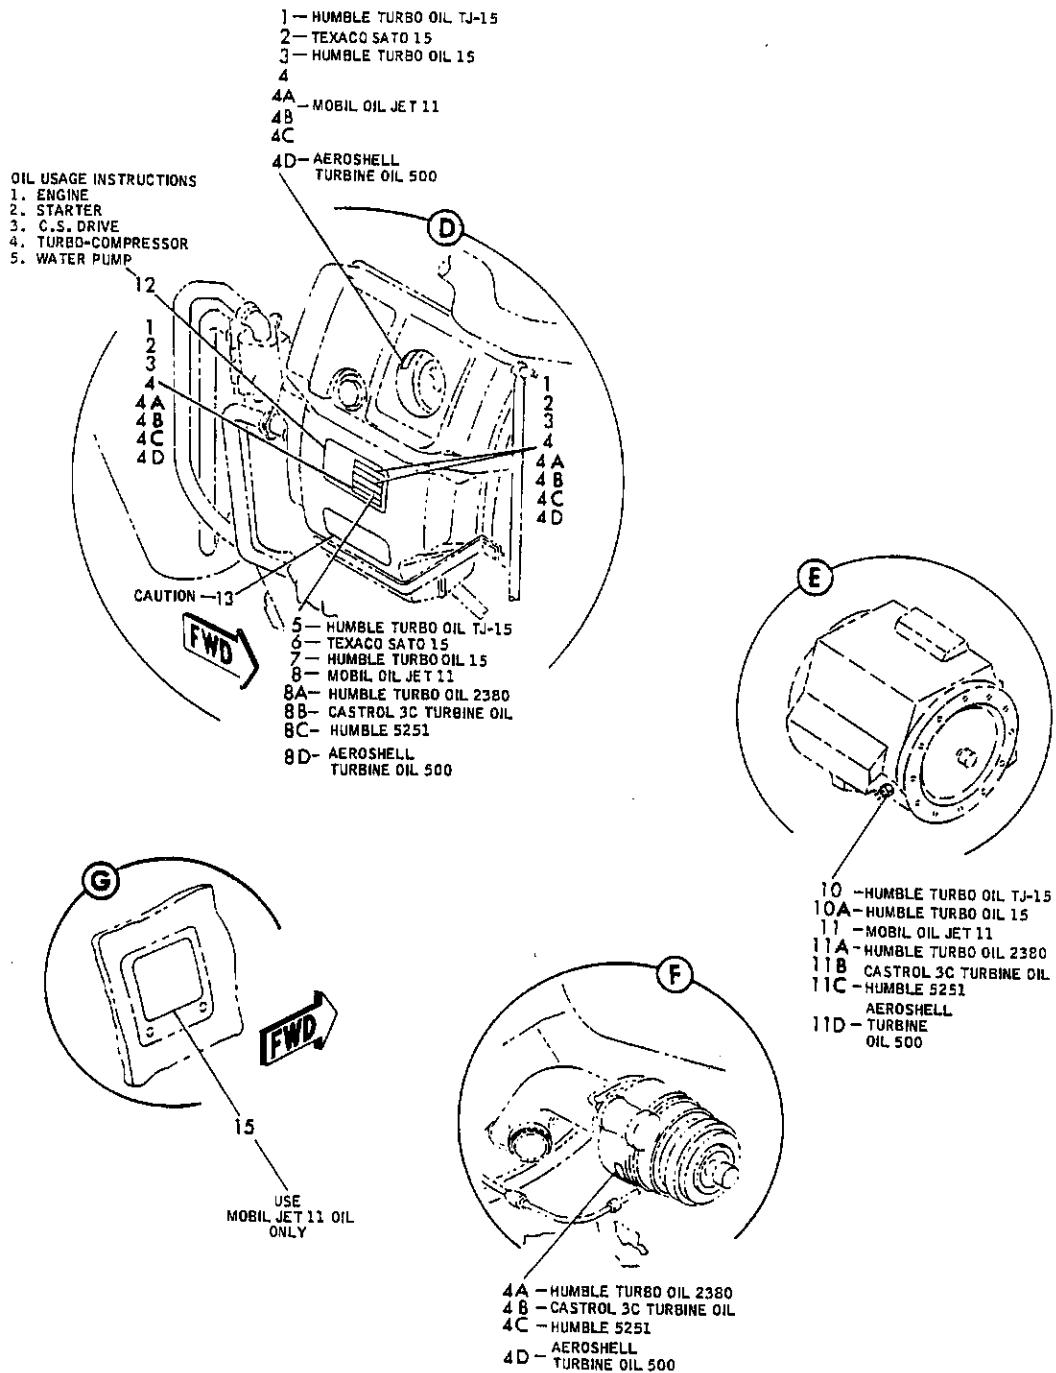 


FIGURE 23. MARKER INSTL, ENGINE AND ACCESSORIES (SHEET 2)

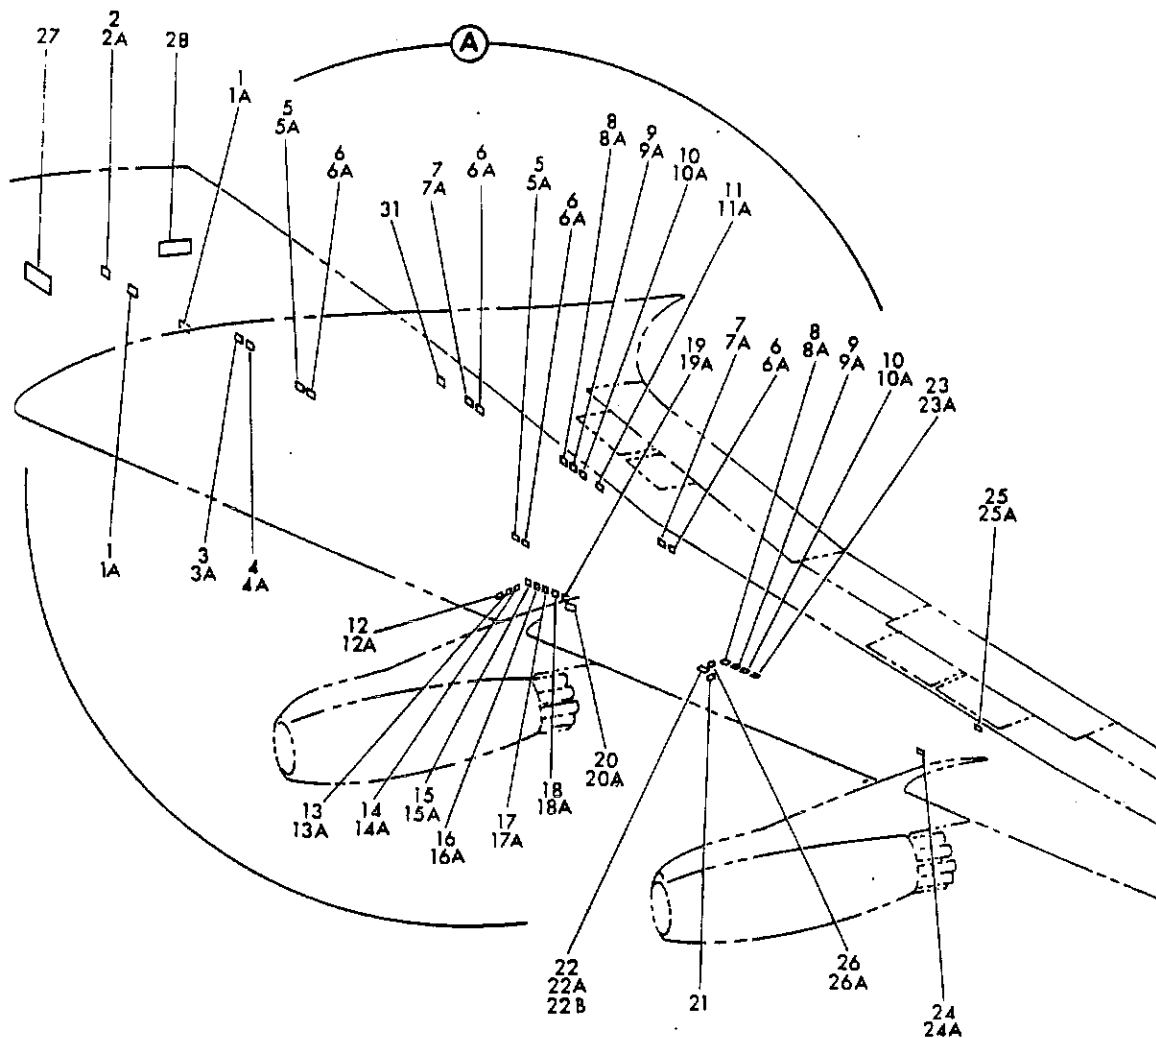 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
23	65-19878-12	MARKER INSTL, ENGINE AND ACCESSORIES (SEE 71-1, FIG. 3, ITEM 6A)								RF
4	BACMI0L1EAB	. MARKER, ALUMINUM FOIL								8
8	BACMI0L1EAB	. MARKER, ALUMINUM FOIL (ENGINES NO. 2, 3 AND 4).								2
11	BACMI0L1EBZ	. MARKER, ALUMINUM FOIL								1
12	BACMI0L1CPV	. MARKER, ALUMINUM FOIL							5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

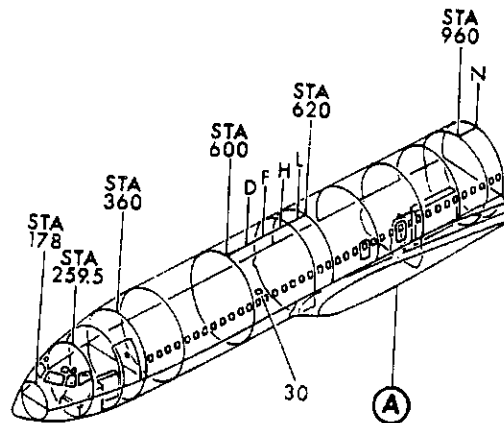 

MARKING INSTL, SECTION 22 FUEL SYSTEM INTERIOR
FIGURE 29. MARKING INSTL, WING FUEL SYSTEM INTERIOR

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
29	65-8355-1	MARKING INSTL, SECTION 22 LH FUEL SYSTEM INTERIOR (SEE 28-7, FIG. 20, ITEM 29)								RF
	65-8355-2	MARKING INSTL, SECTION 22 RH FUEL SYSTEM INTERIOR (SEE 28-7, FIG. 20, ITEM 29)								RF
1	BACM10F41-13GW	. MARKER-ALUMINUM FOIL, EQUIPMENT SUPPORT FITTING NK4-5 BOLT AN960D416 WASHER								2
2	BACM10F41-13GW	. MARKER-ALUMINUM FOIL, EQUIPMENT SUPPORT FITTING NK4-5 BOLT AN960P416 WASHER (LH ONLY)								1
3	BACM10B71-9CK	. MARKER-ALUMINUM FOIL, OVERRIDE BOOST PUMP ATTACHMENT. (2) AN4H7A BOLTS								1
4	BACM10L41-1BKM	. MARKER-ALUMINUM FOIL, CAUTION CLOSE VALVE, DISCONNECT ELECTRICAL PLUG AND DRAIN PUMP BEFORE REMOVING								1
5	BACM10B61-9DB	. MARKER-ALUMINUM FOIL, (1) AN76A47 BOLT TORQUE 120 TO 160 INCH POUNDS (8) AN47A BOLTS TORQUE 50 TO 70 INCH POUND								2
6	BACM10L51-1BKN	. MARKER-ALUMINUM FOIL, CAUTION DISCONNECT ELECTRICAL PLUG AND DRAIN PUMP BEFORE REMOVING								4
7	BACM10B61-9DB	. MARKER-ALUMINUM FOIL, (1) AN76A47 BOLT TORQUE 120 TO 160 INCH POUNDS (8) AN47A BOLTS TORQUE 50 TO 70 INCH POUND								2
8	BACM10T20-3ME	. MARKER-ALUMINUM FOIL, WING CENTER SECTION TANK. . . .								2
9	BACM10T10-3MJ	. MARKER-ALUMINUM FOIL, MAIN TANK NO. 2 (LH ONLY) . . .								2
9	BACM10T10-3MK	. MARKER-ALUMINUM FOIL, MAIN TANK NO. 3 (RH ONLY) . . .								2
10	BACM10T10-3MH	. MARKER-ALUMINUM FOIL, MAIN TANK NO. 1 (LH ONLY) . . .								2
10	BACM10T10-3ML	. MARKER-ALUMINUM FOIL, MAIN TANK NO. 4 (RH ONLY) . . .								2
11	BACM10D21-1HU	. MARKER-ALUMINUM FOIL, GROUNDING RECEPTACLE DRAIN. . .								1
12	BACM10V11-2AGS	. MARKER-ALUMINUM FOIL, MANUAL DEFUELING VALVE. . . .								1
13	BACM10V31-2ABJ	. MARKER-ALUMINUM FOIL, NO. 2 TANK TO ENGINE MANIFOLD VALVE (LH ONLY)								1
13	BACM10V31-2ABK	. MARKER-ALUMINUM FOIL, NO. 3 TANK TO ENGINE MANIFOLD VALVE (RH ONLY)								1
14	BACM10V21-2AGX	. MARKER-ALUMINUM FOIL, FUEL SHUT-OFF VALVE ENGINE NO. 2 (LH ONLY)								1
14	BACM10V21-2AGY	. MARKER-ALUMINUM FOIL, FUEL SHUT-OFF VALVE ENGINE NO. 3								1
15	BACM10S21-3PY	. MARKER-ALUMINUM FOIL, FUEL PRESSURE SWITCH WCS PUMP .								1
16	BACM10S21-3RL	. MARKER-ALUMINUM FOIL, FUEL PRESSURE SWITCH FORWARD. PUMP TANK NO. 2 (LH ONLY)								1
16	BACM10S21-3RM	. MARKER-ALUMINUM FOIL, FUEL PRESSURE SWITCH FORWARD. PUMP TANK NO. 3 (RH ONLY)								1
17	BACM10S21-3RR	. MARKER-ALUMINUM FOIL, FUEL PRESSURE SWITCH AFT PUMP TANK NO. 2 (LH ONLY)								1
17	BACM10S21-3RS	. MARKER-ALUMINUM FOIL, FUEL PRESSURE SWITCH AFT PUMP TANK NO. 3 (RH ONLY)								1
18	BACM10S21-3RK	. MARKER-ALUMINUM FOIL, FUEL PRESSURE SWITCH FORWARD. PUMP TANK NO. 1 (LH ONLY)								1
18	BACM10S21-3RN	. MARKER-ALUMINUM FOIL, FUEL PRESSURE SWITCH FORWARD. PUMP TANK NO. 4 (RH ONLY)								1
19	BACM10S21-3RP	. MARKER-ALUMINUM FOIL, FUEL PRESSURE SWITCH AFT PUMP TANK NO. 1 (LH ONLY)								1
19	BACM10S21-3RT	. MARKER-ALUMINUM FOIL, FUEL PRESSURE SWITCH AFT PUMP TANK NO. 4, (RH ONLY)								1
20	BACM10V31-2ABH	. MARKER-ALUMINUM FOIL, NO. 1 TANK TO ENGINE MANIFOLD VALVE (LH ONLY)								1
20	BACM10V31-2ABL	. MARKER-ALUMINUM FOIL, NO. 4 TANK TO ENGINE MANIFOLD VALVE (RH ONLY)								1
21	BACM10F5FX	. MARKER-ALUMINUM FOIL, FUELING SYSTEM OPERATING. . . . INSTRUCTIONS								1
23	BACM10T20-3MM	. MARKER-ALUMINUM FOIL, RESERVE TANK NO. 1 (LH ONLY). .								1
23	BACM10T20-3MN	. MARKER-ALUMINUM FOIL, RESERVE TANK NO. 4 (RH ONLY). .								1
24	BACM10V21-2AGW	. MARKER-ALUMINUM FOIL, FUEL SHUT-OFF VALVE ENGINE NO. 1 (LH ONLY)								1
24	BACM10V21-2AGZ	. MARKER-ALUMINUM FOIL, FUEL SHUT-OFF VALVE ENGINE NO. .								1
25	BACM10V31-2ACF	. MARKER-ALUMINUM FOIL, RESERVE TANK NO. 1 TO MAIN. . . TANK NO. 1 TRANSFER VALVE (LH ONLY)								1
25	BACM10V31-2ACG	. MARKER-ALUMINUM FOIL, RESERVE TANK NO. 4 TO MAIN. . . TANK NO. 4 TRANSFER VALVE (RH ONLY)								1
26	BACM10L52-1CCJ	. MARKER-ALUMINUM FOIL, CAUTION DO NOT EXCEED 50 PSI. FUELING PRESSURE, SERVICE THIS AIRPLANE WITH JET FUEL								1

MISSING ITEM NUMBERS ARE NOT APPLICABLE


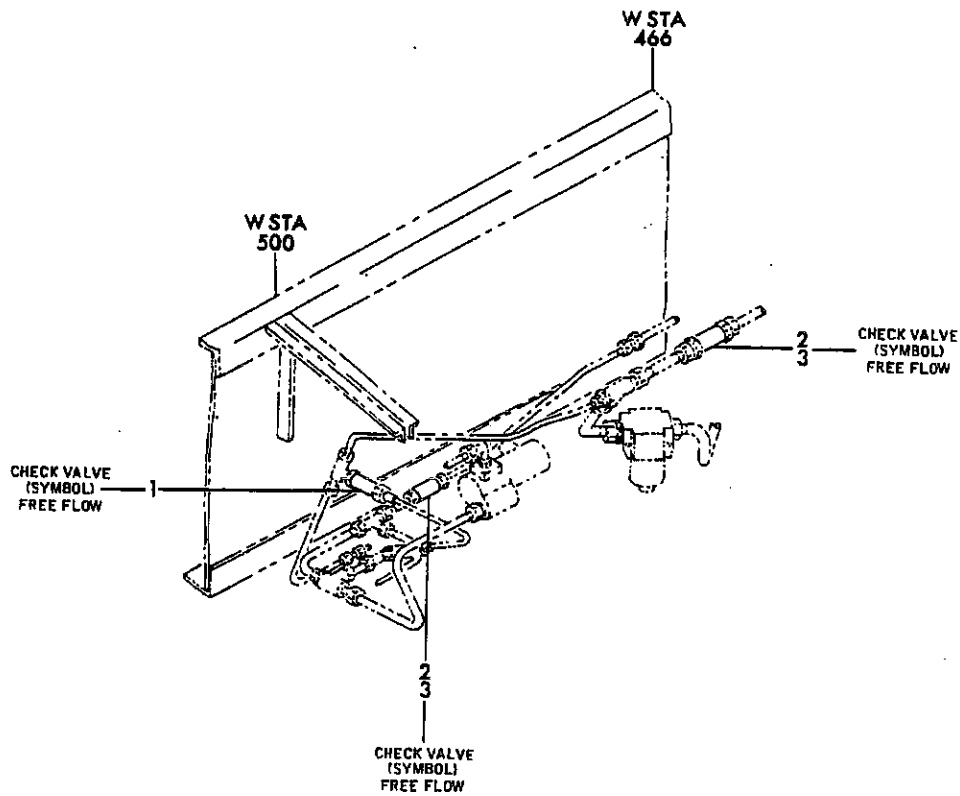 


FIGURE 33. HYDRAULIC INSTL, WING (WING STATION 500 TO 725) (REQUIRED PLACARDS ONLY)

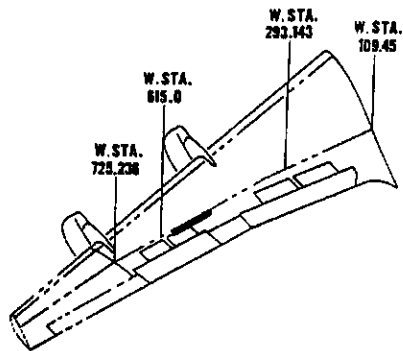 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
33	50-6848	HYDRAULIC INSTL, WING (WING STATION 500 TO 725) (REQUIRED PLACARDS ONLY) (FOR ADDITIONAL DETAILS SEE FIG. 35, 36, 38 AND 40) (SEE 57-1, FIG. 1, ITEM 28) . MARKER, ALUMINUM FOIL (LH ONLY) MARKER, ALUMINUM FOIL (RH ONLY) MARKER, ALUMINUM FOIL (LH ONLY) MARKER, ALUMINUM FOIL (RH ONLY) FOR REFERENCE TO OTHER HYDRAULIC DETAILS, SEE NHA . .		RF
1	BACM10V21-2JG			1
1	BACM10V21-2JH			1
2	BACM10V21-2JH			2
2	BACM10V21-2JG			2
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

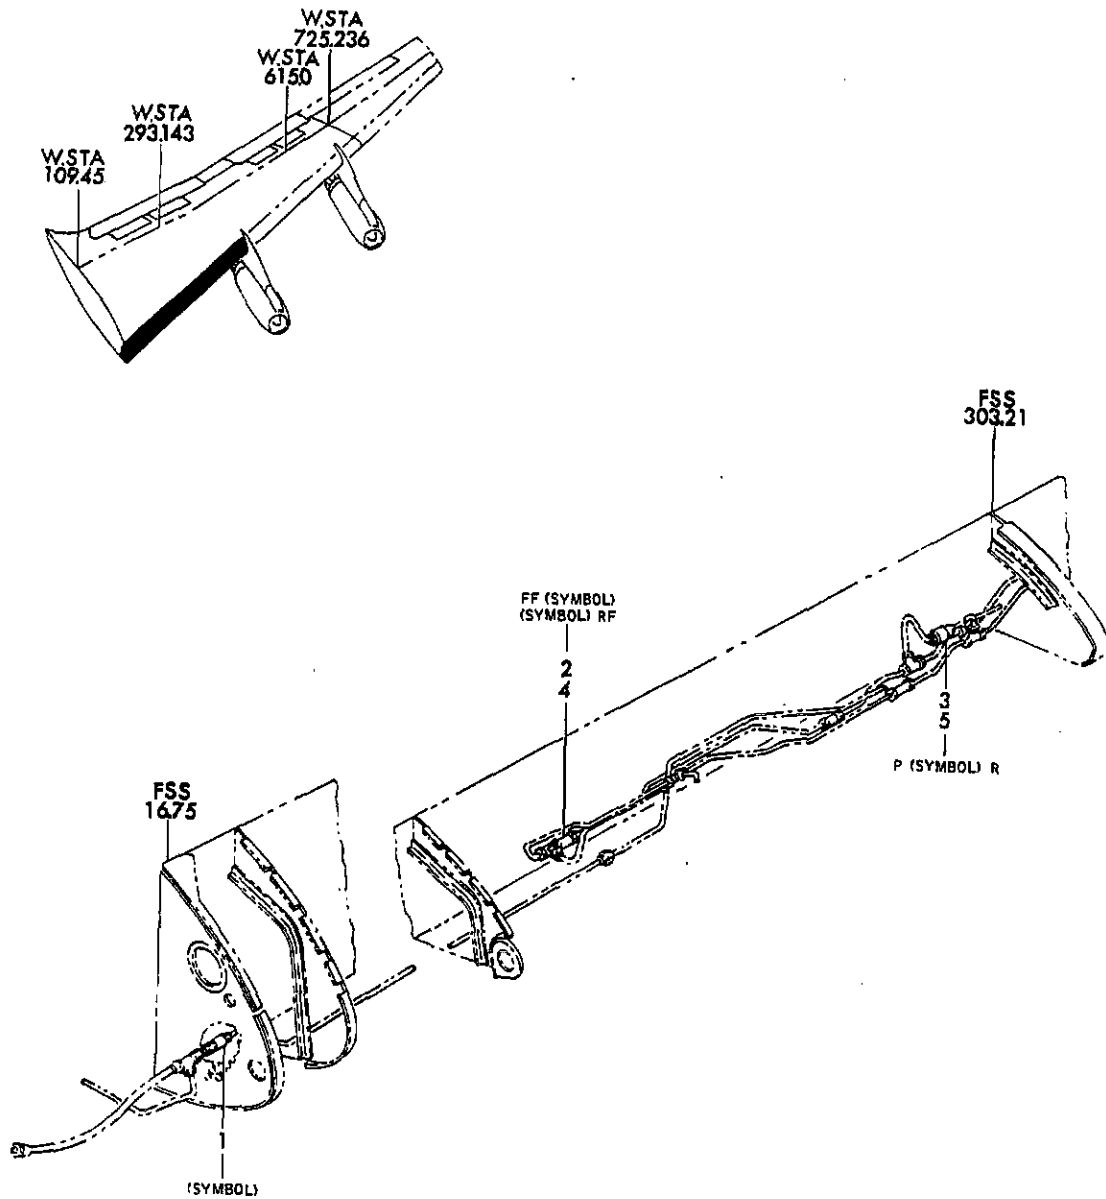 


FIGURE 35. HYDRAULIC INSTL, WING (BODY SEAL TO FRONT SPAR STATION 382.65) (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
35	50-6848	HYDRAULIC INSTL, WING (BODY SEAL TO FRONT SPAR STATION 382.65) (REQUIRED PLACARDS ONLY) (FOR ADDITIONAL DETAILS SEE FIG. 33, 36, 38 AND 40) (SEE 57-1, FIG. 1, ITEM 28)								RF
1	BACM10V21-2JH	. METAL-CAL, CHECK VALVE FREE FLOW (LH ONLY).								1
2	BACM10R21-22B	. METAL-CAL, RESTRICTOR CHECK FREE FLOW RESTRICTED (LH ONLY)								1
2	BACM10R21-22C	. METAL-CAL, RESTRICTOR CHECK FREE FLOW RESTRICTED (RH ONLY)								1
		. FOR REFERENCE TO OTHER HYDRAULIC DETAILS, SEE NHA . .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										


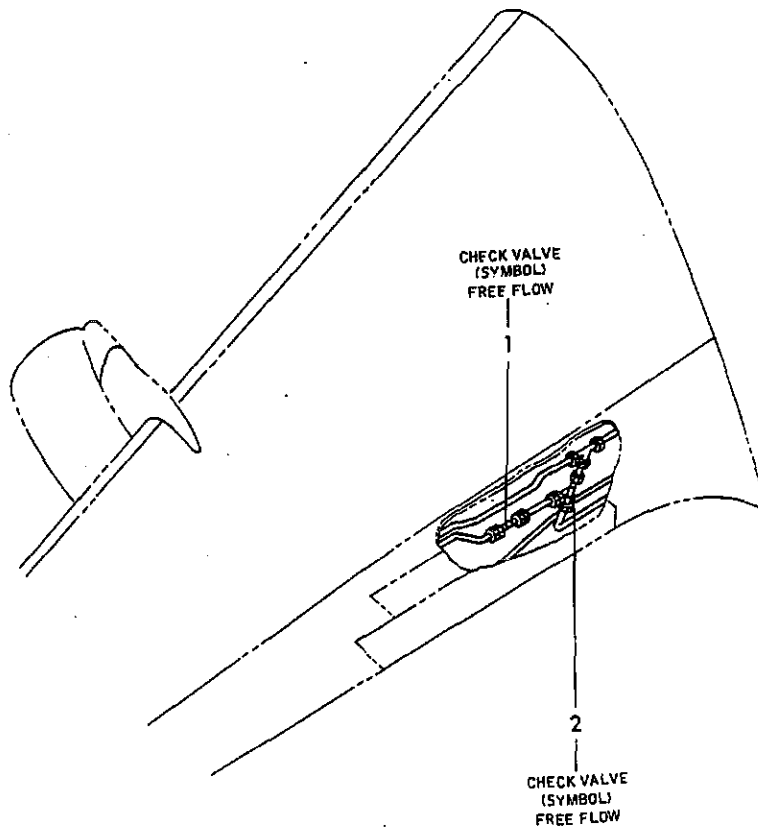 


FIGURE 36. HYDRAULIC INSTL, WING (BODY SEAL TO WING STATION 434) (REQUIRED PLACARDS ONLY)

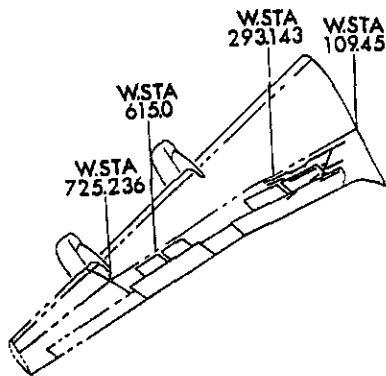 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
36	50-6848		HYDRAULIC INSTL, (BODY SEAL TO WING STATION 434). . . . (REQUIRED PLACARDS ONLY) (FOR ADDITIONAL DETAILS SEE FIG. 32, 33, 34, 35, 37, 38, 39 AND 40) (SEE 57-1, FIG. 1, ITEM 28)		RF
1	BACM10V21-2JH		. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW (LH ONLY) . FOR REFERENCE TO OTHER HYDRAULIC DETAILS, SEE NHA . .		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					


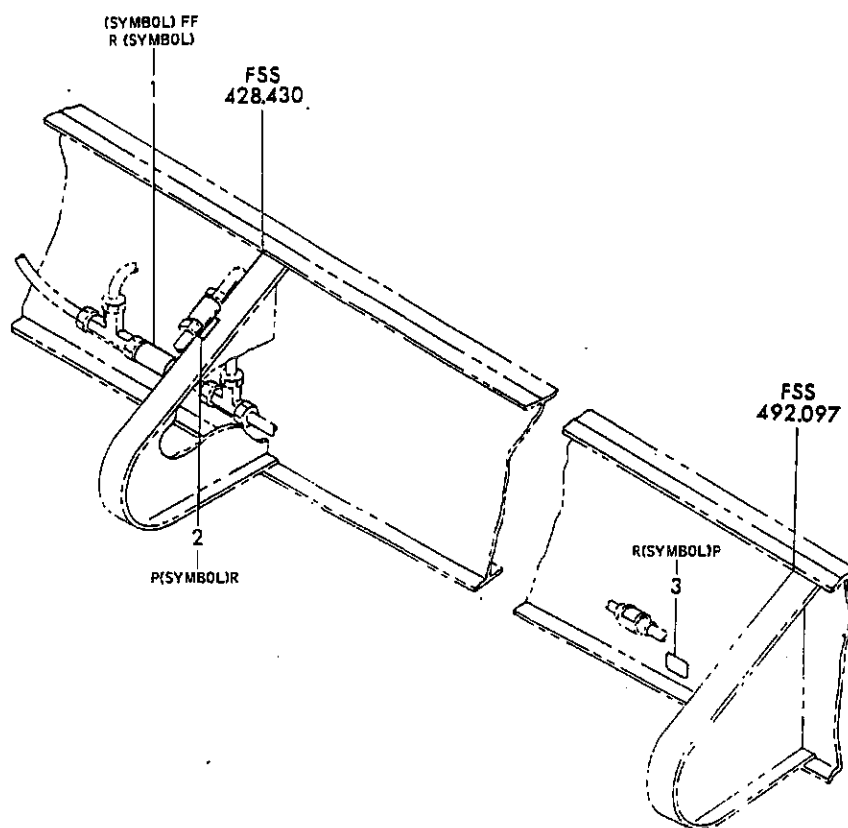 


FIGURE 38. HYDRAULIC INSTL, WING (FRONT SPAR STATION 382.65 TO 666.14) (REQUIRED PLATE ARDS ONLY)

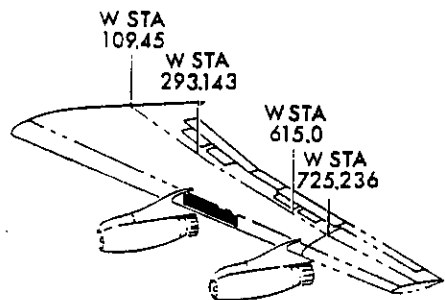 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
38	50-6848		HYDRAULIC INSTL, WING (FRONT SPAR STATION 382.65 TO . . 666.14) (REQUIRED PLACARDS ONLY) (FOR ADDITIONAL DETAILS SEE FIG. 33, 35, 36 AND 40) (SEE 57-1, FIG. 1, ITEM 28)		RF
1	BACM10R21-22C		. METAL-CAL, RESTRICTOR CHECK FREE FLOW RESTRICTED (LH ONLY)		1
1	BACM10R21-22B		. METAL-CAL, RESTRICTOR CHECK FREE FLOW RESTRICTED (RH ONLY)		1
2	BACM10V21-2AGT		. METAL-CAL, RELIEF VALVE RET PRESS (LH ONLY)		1
2	BACM10V21-2AGU		. METAL-CAL, RELIEF VALVE PRESS RET (RH ONLY) FOR REFERENCE TO OTHER HYDRAULIC DETAILS, SEE NHA . .		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

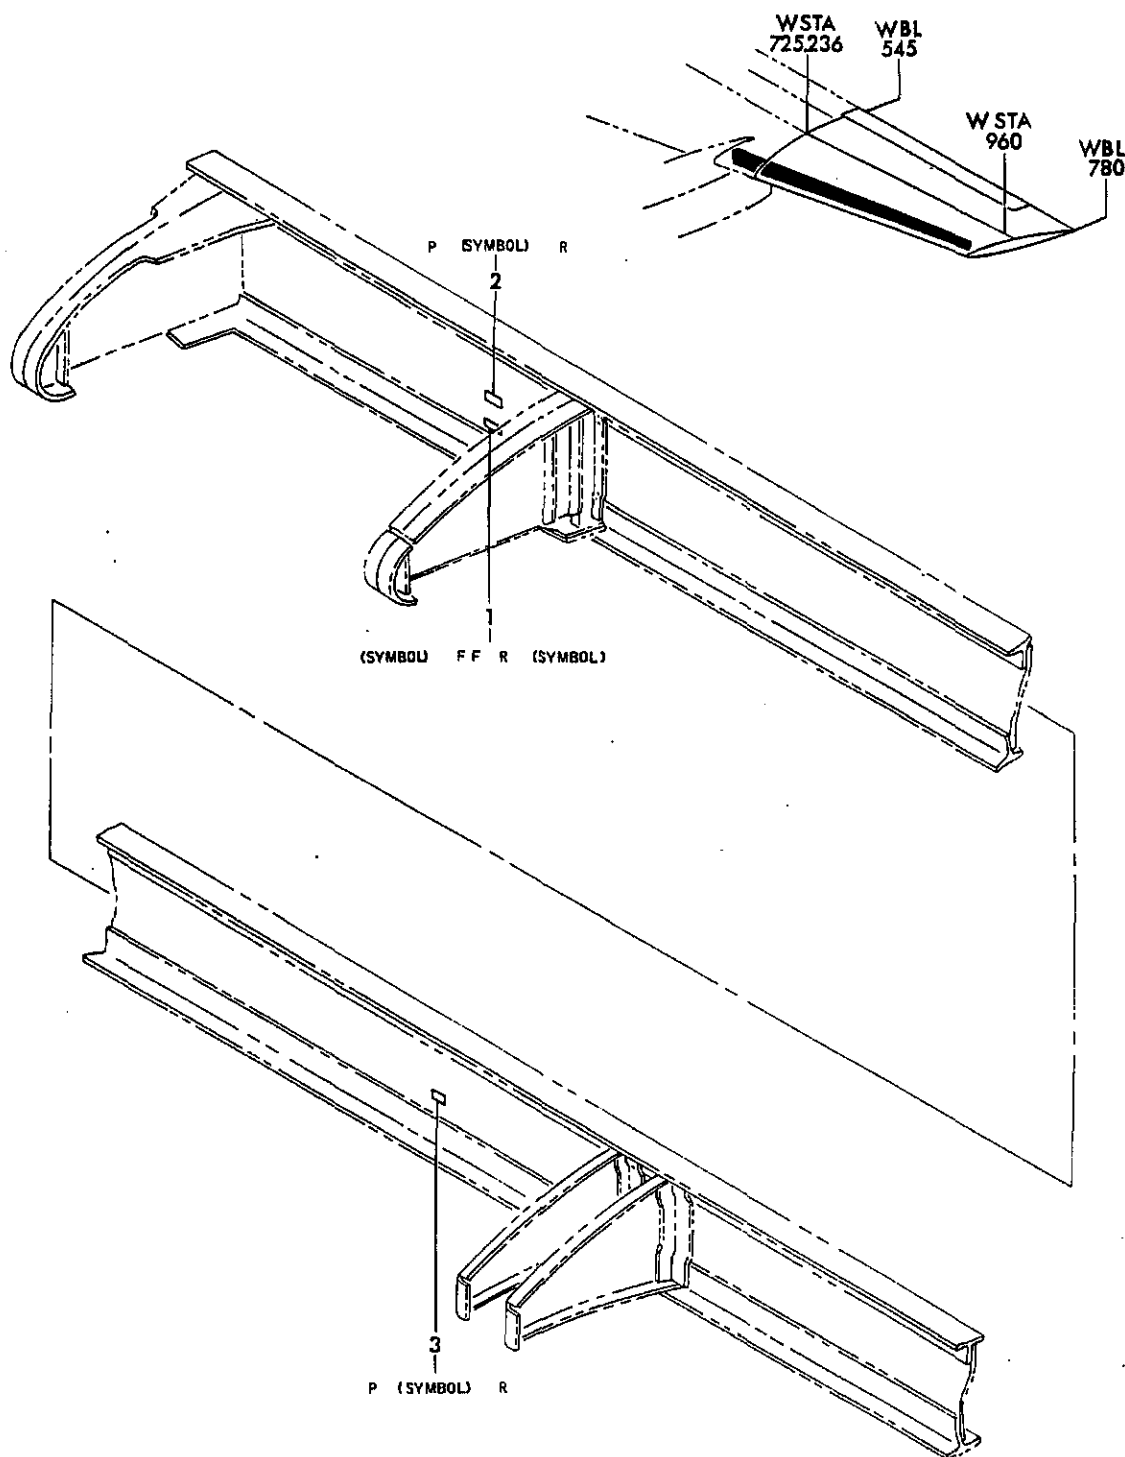 


FIGURE 40. HYDRAULIC INSTL, WING (FRONT SPAR STATION 666.14 TO 960) (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
40	50-6848		HYDRAULIC INSTL, WING (FRONT SPAR STATION 666.14 TO . . 960) (REQUIRED PLACARDS ONLY) (FOR ADDITIONAL DETAILS SEE FIG. 33, 35, 36 AND 38) (SEE 57-1, FIG. 1, ITEM 28)		RF
1	BACM10R21-22C		. MARKER-ALUMINUM FOIL, RESTRICTOR CHECK-FREE FLOW. . . RESTRICTED (LH ONLY)		1
1	BACM10R21-22B		. MARKER-ALUMINUM FOIL, RESTRICTOR CHECK-FREE FLOW. . . RESTRICTED (RH ONLY)		1
2	BACM10V21-2AGT		. MARKER-ALUMINUM FOIL, RELIEF VALVE PRESS. RETURN (LH ONLY)		1
2	BACM10V21-2AGU		. MARKER-ALUMINUM FOIL, RELIEF VALVE PRESS. RETURN (RH ONLY)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

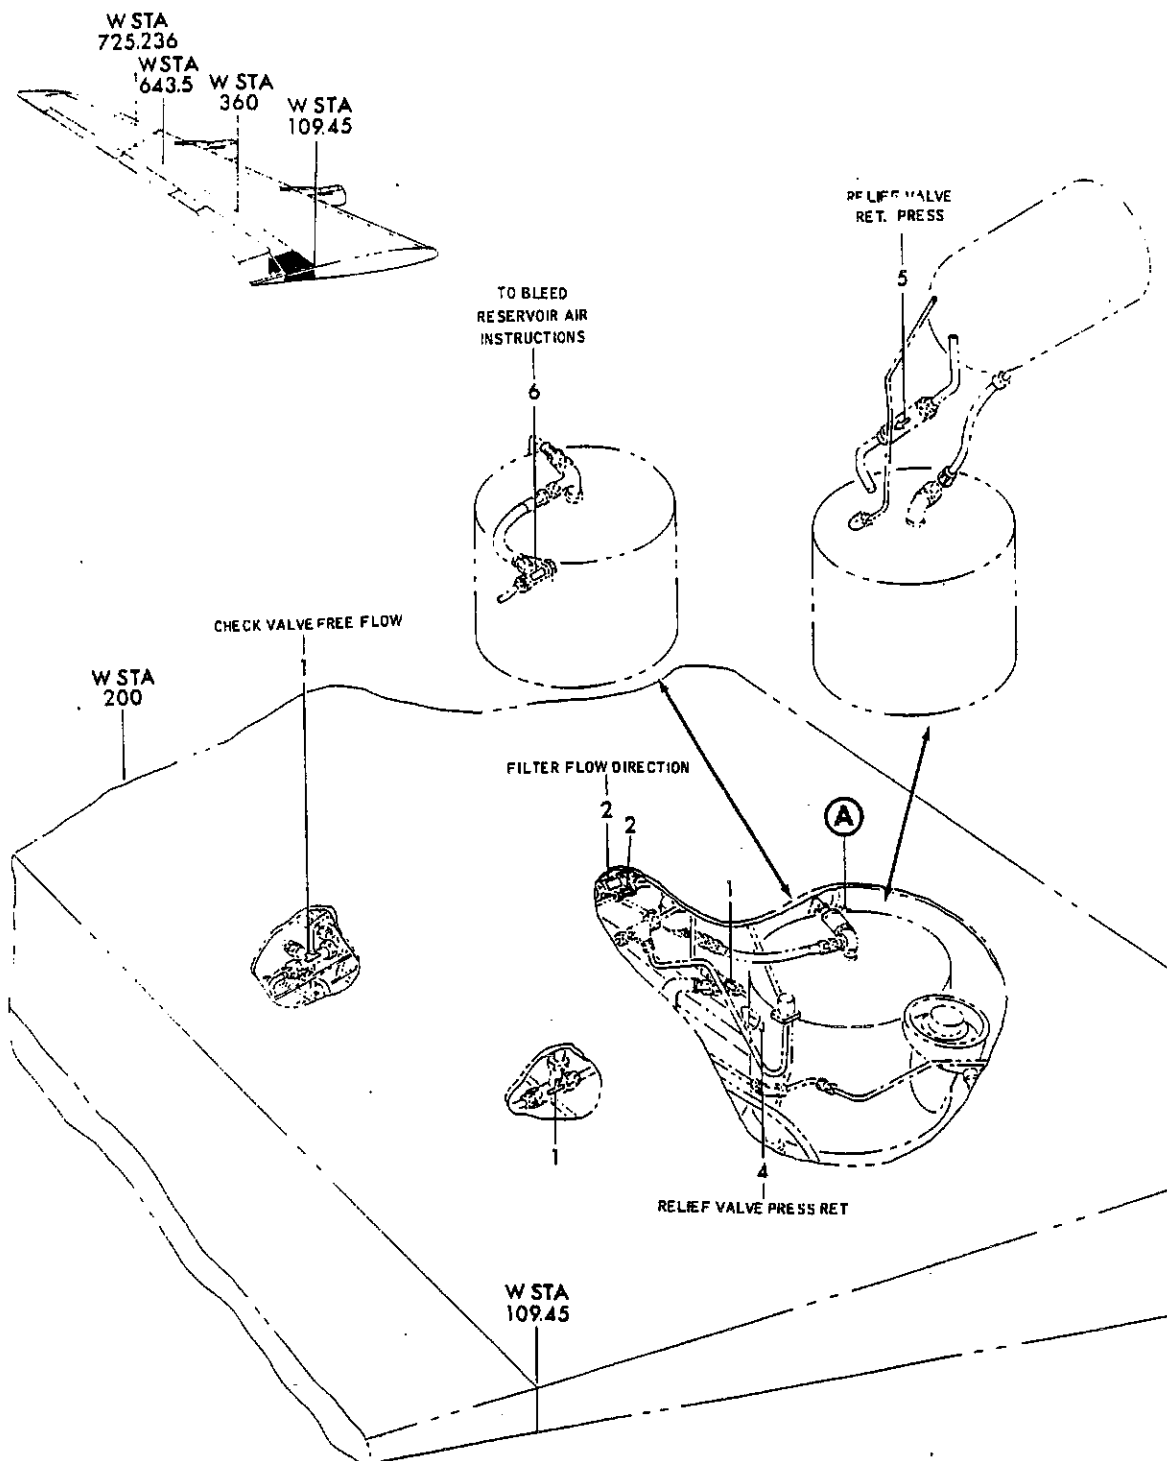 


FIGURE 41. HYDRAULIC INSTL, WING FILLET (LH) REQUIRED PLACARDS ONLY) (SHEET 1)

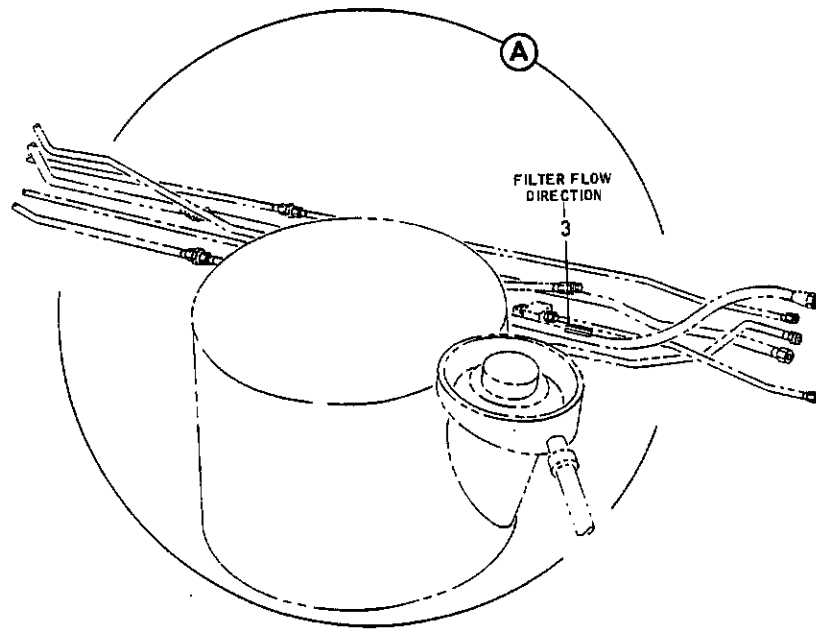 


FIGURE 41. HYDRAULIC INSTL, WING FILLET (LH) (REQUIRED PLACARDS ONLY) (SHEET 2)

NOV 21/90

11-03-41

DETAILED PARTS LIST
11-03-41
PAGE 1

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
41	50-6849	HYDRAULIC INSTL, WING FILLET (LH) (REQUIRED PLACARDS. . ONLY) (SEE FIG. 42 FOR RH) (SEE 29-2, FIG. 2, ITEM 75)								RF
1	BACM10V21-2JG	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW								3
2	BACM10V21-2JH	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW								2
3	BACM10F11-3AH	. MARKER-ALUMINUM FOIL, FILTER FLOW DIRECTION								1
6	BACM10L1DZG	. MARKER-ALUMINUM FOIL, TO BLEED RESERVOIR AIR.							5199	1
		INSTRUCTIONS								
		. FOR REFERENCE TO OTHER HYDRAULIC INSTL DETAILS, SEE .								
		NHA								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

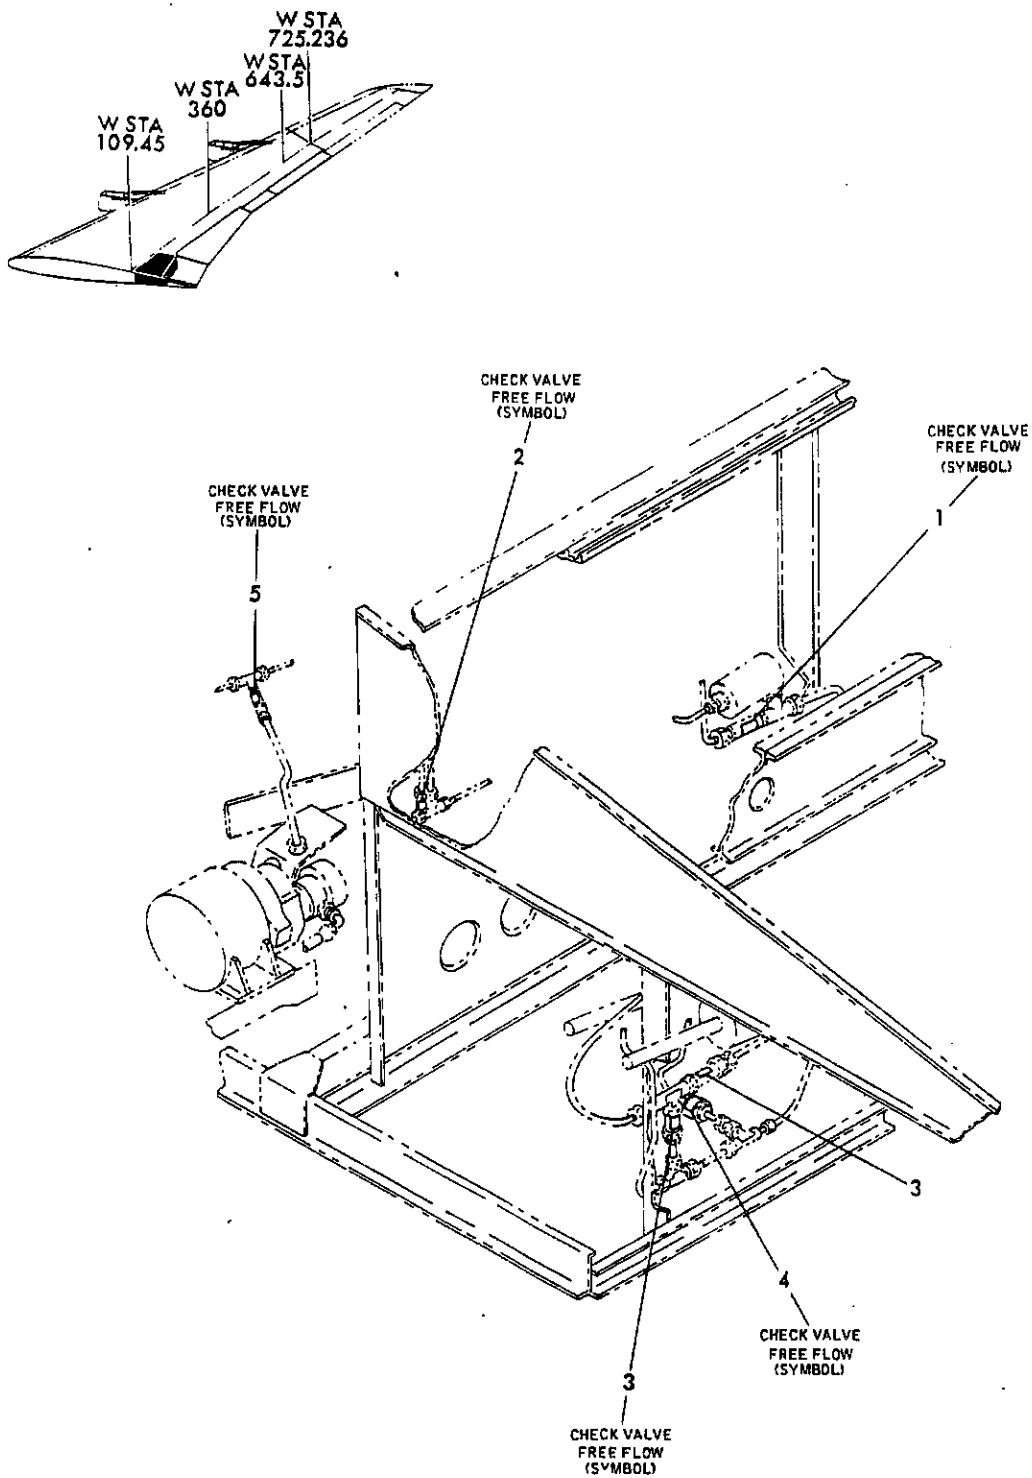 


FIGURE 42. HYDRAULIC INSTL, WING FILLET (RH) (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
42	50-6849	HYDRAULIC INSTL, WING FILLET (RH) (REQUIRED PLACARDS, . ONLY) (SEE FIG. 41 FOR LH) (SEE 29-2, FIG. 2, ITEM 75)		RF
1	BACM10V21-2JH	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW		1
2	BACM10V21-2JG	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW		1
3	BACM10V21-2JH	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW		2
4	BACM10V21-2JG	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW		1
5	BACM10V21-2JH	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW		1
		. FOR REFERENCE TO OTHER HYDRAULIC DETAILS, SEE NHA . .		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				


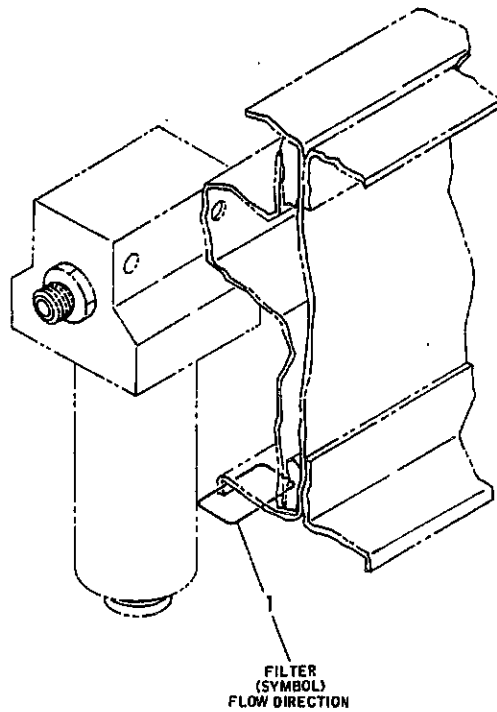 


FIGURE 42A. FILTER INSTL, AUXILIARY PRESSURE HYDRAULIC (REQUIRED PLACARDS ONLY)

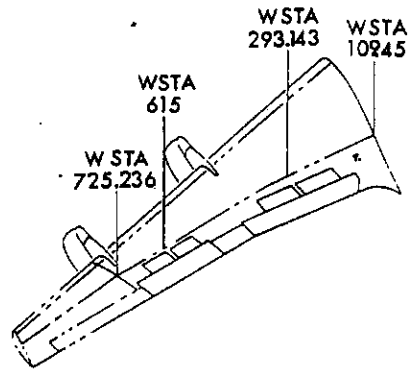 

11-03-42A


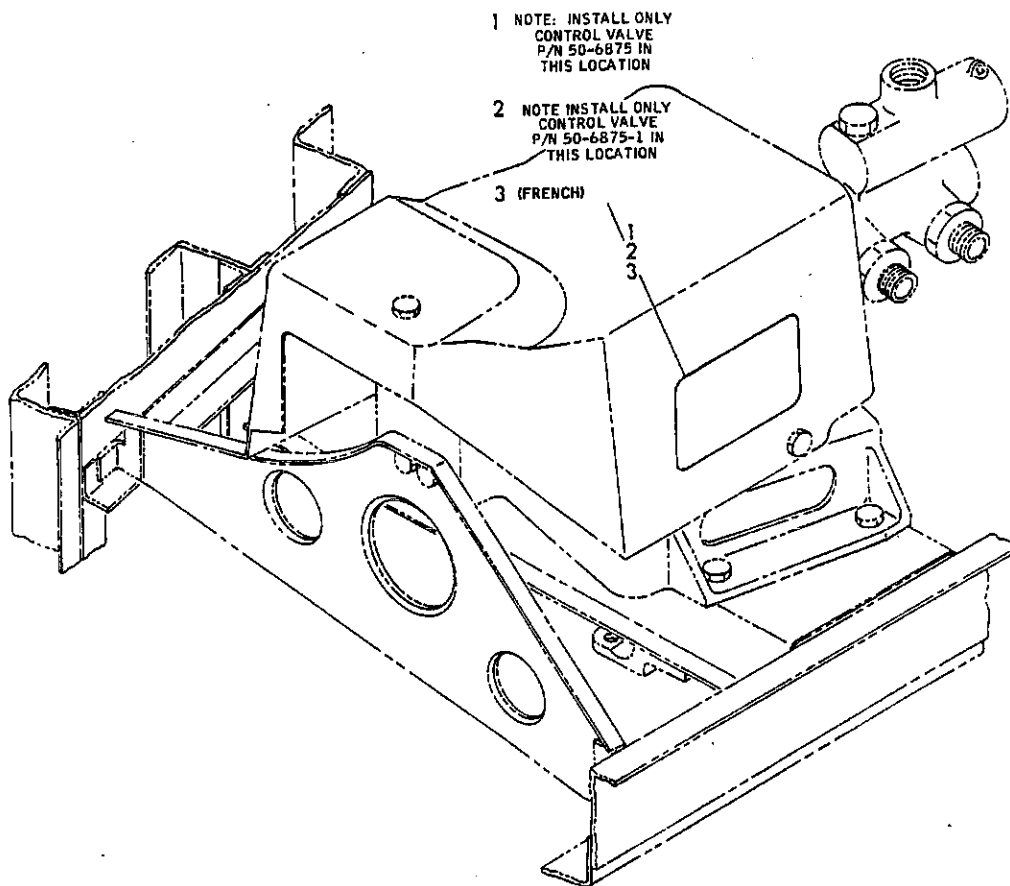 


FIGURE 43. VALVE INSTL, INBOARD SPOILER CONTROL (REQUIRED PLACARDS ONLY)

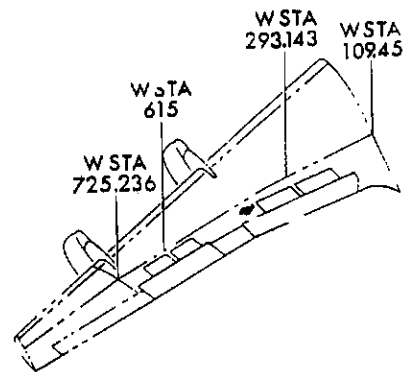 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
43	65-19001-1	VALVE INSTL, INBOARD SPOILER CONTROL (LH) (REQUIRED . . PLACARDS ONLY) (SEE 27-3, FIG. 7, ITEM 9)		RF
	65-19001-2	VALVE INSTL, INBOARD SPOILER CONTROL (RH) (REQUIRED . . PLACARDS ONLY) (SEE 27-3, FIG. 7, ITEM 9)		RF
2	BACM10VZAUM	. MARKER-ALUMINUM FOIL, NOTE-INSTALL ONLY CONTROL VALVE P/N 50-6875-1 IN THIS LOCATION . FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

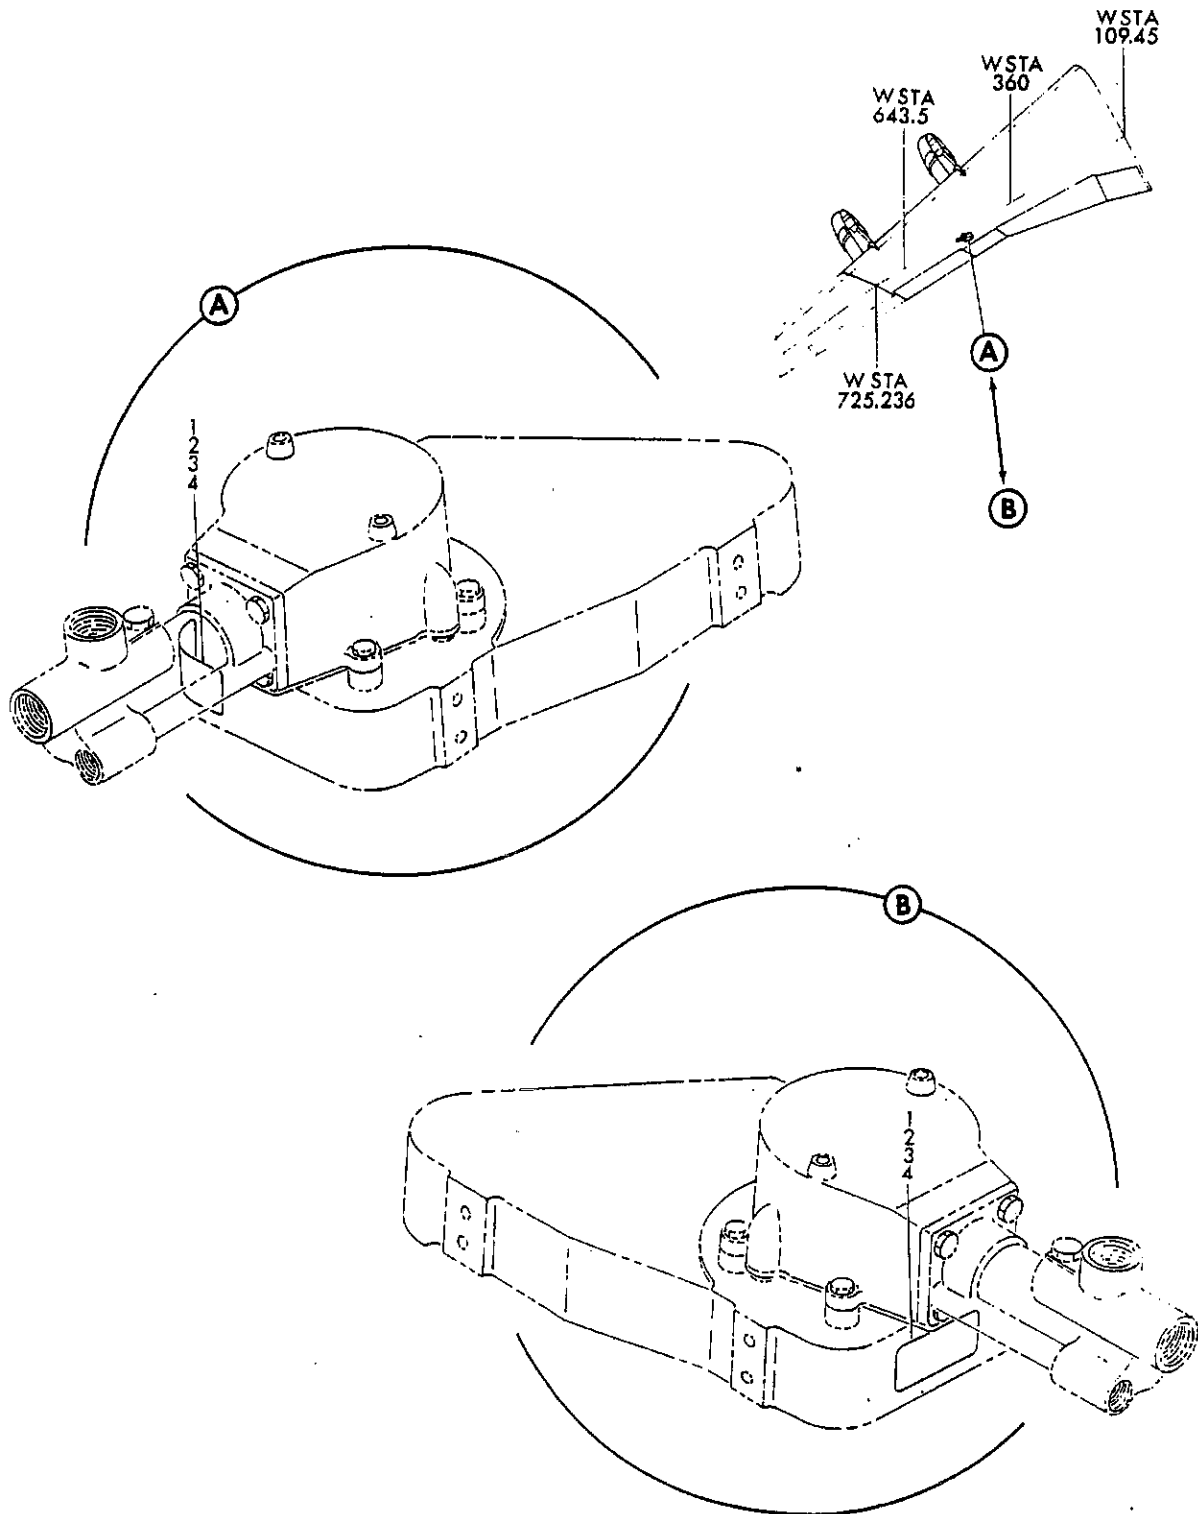 


FIGURE 44. VALVE INSTL, OUTBOARD SPOILER CONTROL (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
44		VALVE INSTL, OUTBOARD SPOILER CONTROL LH (REQUIRED. . . PLACARDS ONLY)		
		VALVE INSTL, OUTBOARD SPOILER CONTROL RH (REQUIRED. . . PLACARDS ONLY)		
	5-98386-3001	. VALVE INSTL, OUTBOARD SPOILER CONTROL LH (REQUIRED. . . PLACARDS ONLY) (SEE 27-3, FIG. 7, ITEM 12)		RF
	2 BACM10V2AUW	. . MARKER-ALUMINUM FOIL, NOTE-INSTALL ONLY CONTROL . . VALVE P/N 50-6875-1 IN THIS LOCATION		1
	5-98386-3002	. VALVE INSTL, OUTBOARD SPOILER CONTROL RH (REQUIRED. . . PLACARDS ONLY) (SEE 27-3, FIG. 7, ITEM 12)		RF
3	BACM10V2AUW	. . MARKER-ALUMINUM FOIL, NOTE-INSTALL ONLY CONTROL . . VALVE P/N 50-6875-1 IN THIS LOCATION		1
		. FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

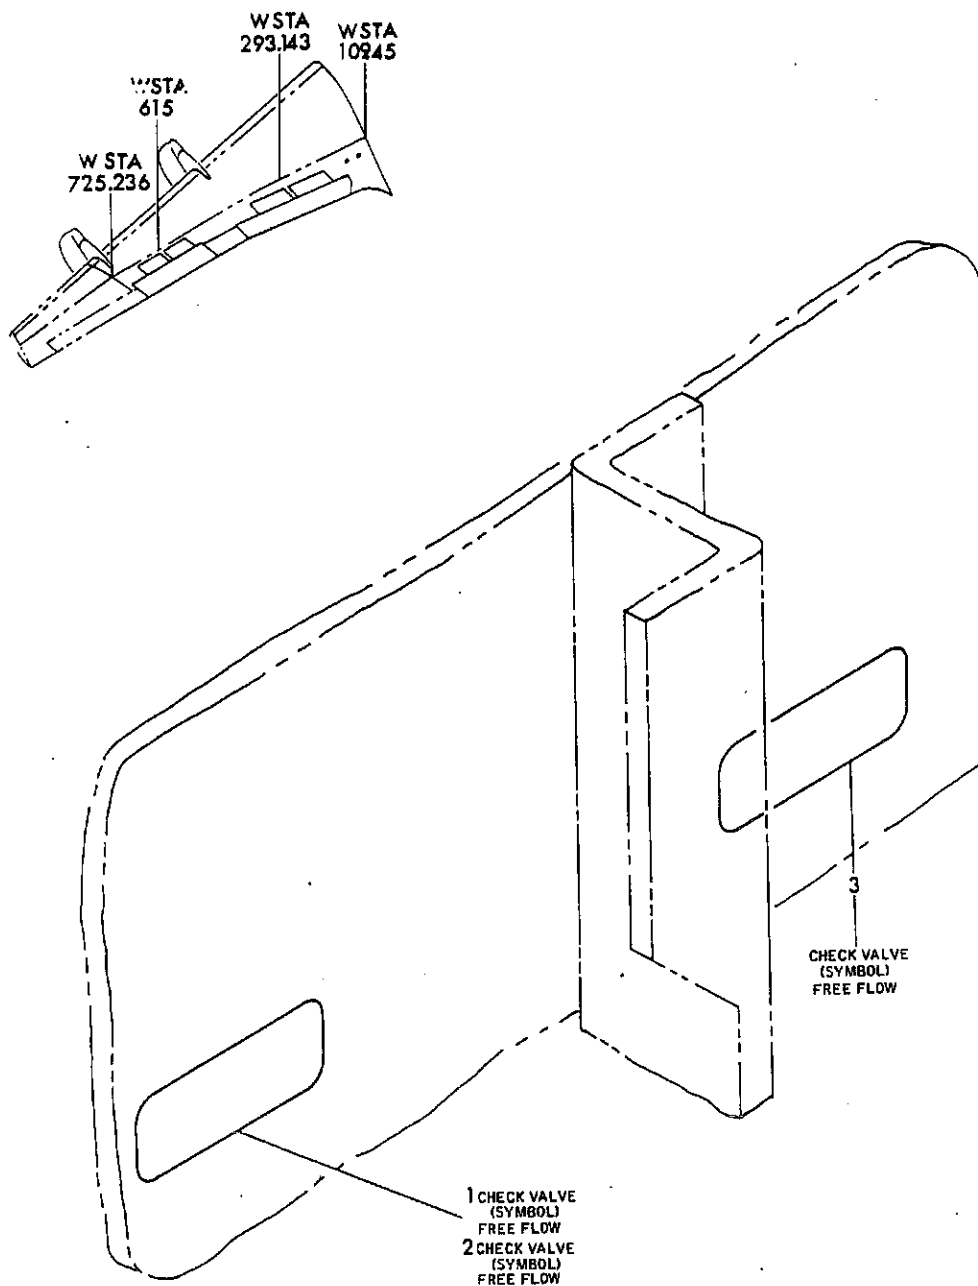 


FIGURE 45. VALVE INSTL, HYDRAULIC SUPPLY (REQUIRED PLACARDS ONLY)

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
45	50-10851-1	VALVE INSTL, HYDRAULIC SUPPLY LH (REQUIRED PLACARDS . . ONLY) (SEE 29-2, FIG. 19, ITEM 152, 29-2, FIG. 20, ITEM 123, 29-2, FIG. 20A, ITEM 132 AND 29-2, FIG. 21, ITEM 130)								RF
	50-10851-5	VALVE INSTL, HYDRAULIC SUPPLY RH (REQUIRED PLACARDS . . ONLY) (SEE 29-2, FIG. 22, ITEM 149, 29-2, FIG. 22A, ITEM 185, 29-2, FIG. 22B, ITEM 177, 29-2, FIG. 22C, ITEM 181, 29-2, FIG. 22D, ITEM 172, 29-2, FIG. 23, ITEM 116, 29-2, FIG. 24, ITEM 137, 29-2, FIG. 25, ITEM 136, 29-2, FIG. 26, ITEM 138 AND 29-2, FIG. 27, ITEM 145)								RF
	1 BACM10V21-2JH	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW (LH ONLY)								1
	1 BACM10V21-2JG	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW (RH ONLY) . FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										


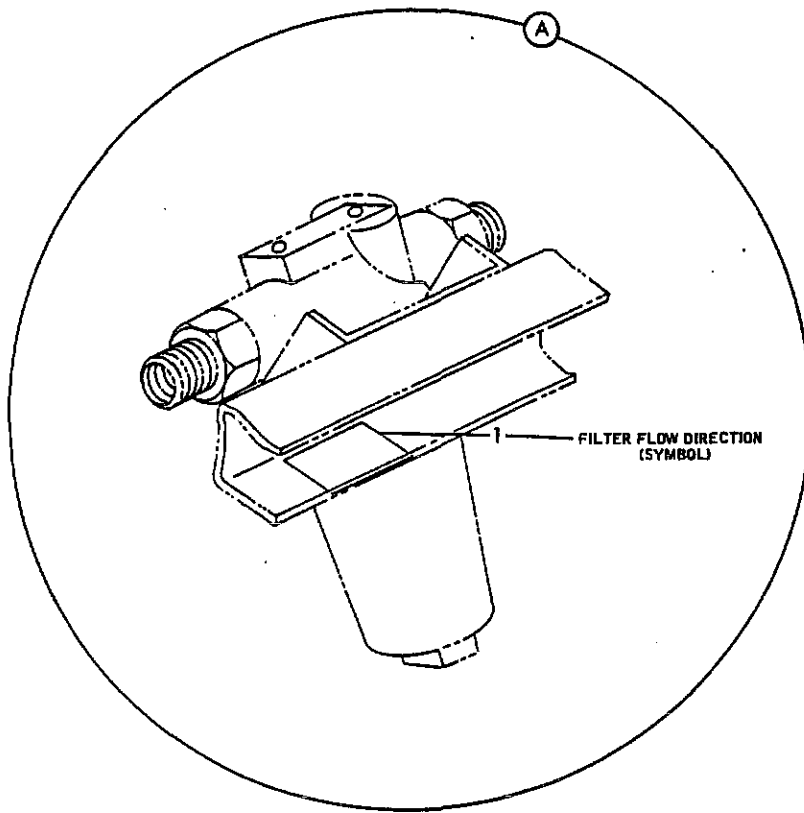 


FIGURE 49. BRACKET INSTL, CONSTANT SPEED DRIVE OIL FILTER (REQUIRED PLACARDS ONLY)

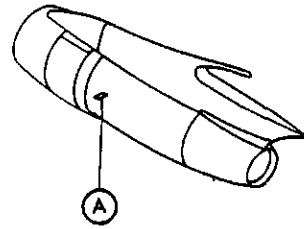 

MISSING ITEM NUMBERS ARE NOT APPLICABLE


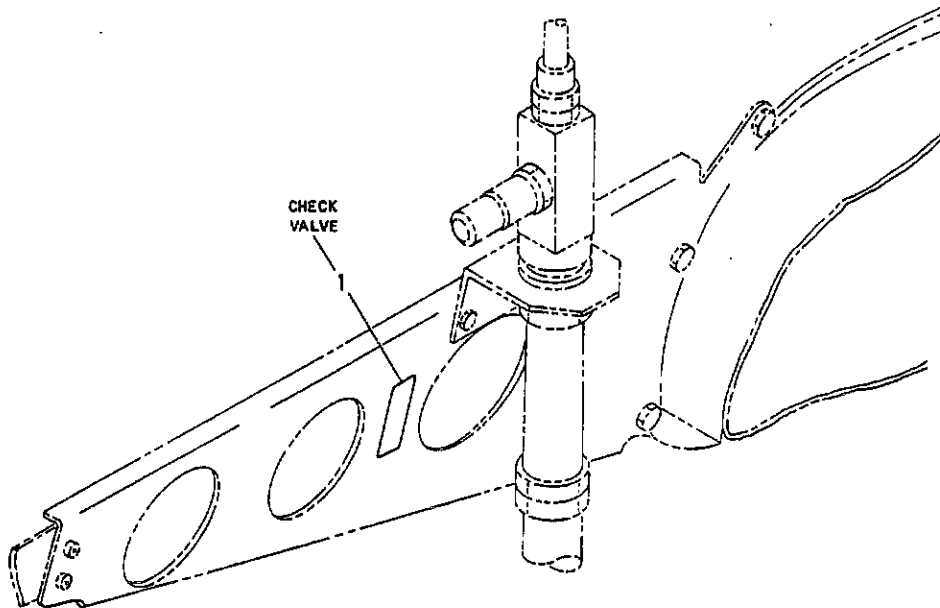 


FIGURE 5L. VALVE INSTL, CONSTANT SPEED DRIVE PRESSURE SENSING RELIEF (REQUIRED PLACARDS ONLY)

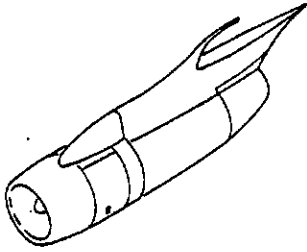 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R R R R R	51	69-11175-3							0150	RF
		VALVE INSTL, CONSTANT SPEED DRIVE PRESSURE SENSING. . . RELIEF (REQUIRED PLACARDS ONLY) (DELETED BY SB 3109) (SEE 71-1, FIG. 5G, ITEM 29 AND 71-1, FIG. 5H, ITEM 24)								
	1	BACM10V2AUJ							0150	1
									0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										


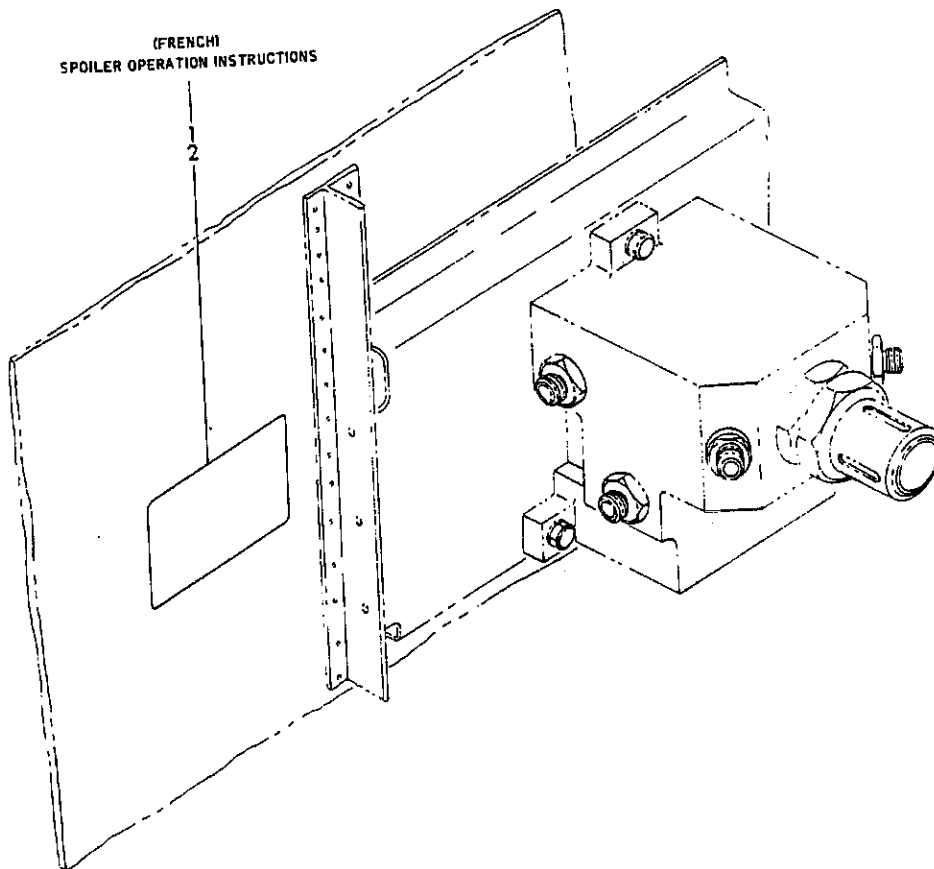 


FIGURE 52. MODULAR PACKAGE INSTL, SPOILER SYSTEM (REQUIRED PLACARDS ONLY)

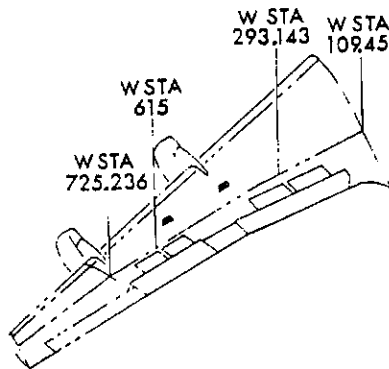 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
52	65-57982-1	MODULAR PACKAGE INSTL, SPOILER SYSTEM (REQUIRED PLACARDS ONLY) (SEE 29-2, FIG. 2A, ITEM 71A AND 29-2, FIG. 6A, ITEM 66)		RF
1	BAC27CHY13	. MARKER-ALUMINUM FOIL, SPOILER OPERATION INSTRUCTIONS . FOR REFERENCE TO OTHER MODULAR PACKAGE DETAILS, SEE NHA		4
MISSING ITEM NUMBERS ARE NOT APPLICABLE				


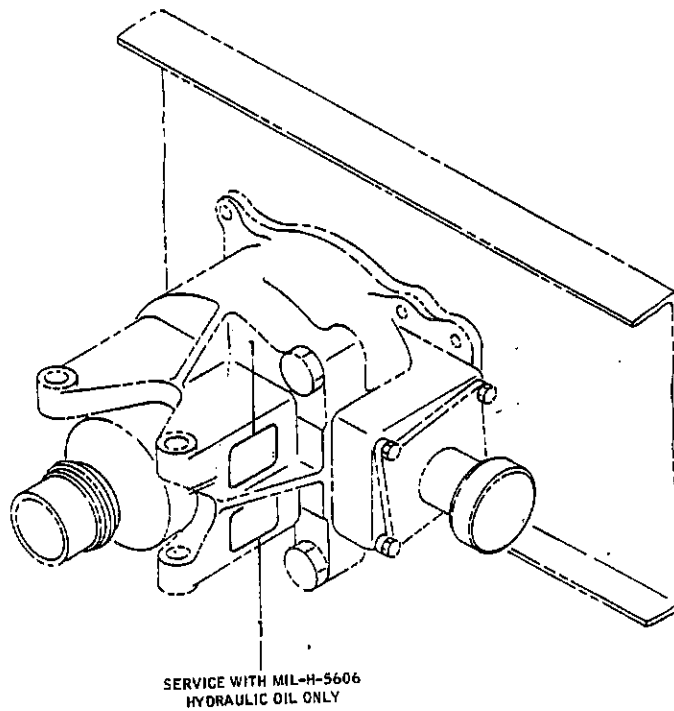 


FIGURE 55. GEAR BOX INSTL, OUTBOARDAILERON LOCKOUT MECHANISM (REQUIRED PLACARDS ONLY)

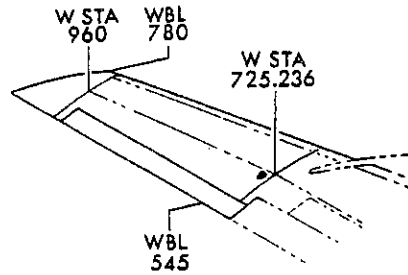 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
55	5-87199-3003	GEAR BOX ASSY, OUTBOARD AILERON LOCKOUT MECHANISM . . . (REQUIRED PLACARDS ONLY) (SEE 27-3, FIG. 24, ITEM 25) (OPTIONAL 5-87199-3002)							0150	RF	
	5-87199-3002	GEAR BOX ASSY, OUTBOARD AILERON LOCKOUT MECHANISM . . . (REQUIRED PLACARDS ONLY) (SEE 27-3, FIG. 24, ITEM 25) (OPTIONAL TO 5-87199-3003)							0150	RF	
	5-87199-3004	GEAR BOX ASSY, OUTBOARD AILERON LOCKOUT MECHANISM . . . (REQUIRED PLACARDS ONLY) (SEE 27-3, FIG. 24, ITEM 25)							5199	RF	
	1	BACM10L6R	. MARKER-ALUMINUM FOIL, SERVICE WITH MIL-H-5606 . . . HYDRAULIC OIL ONLY . FOR REFERENCE TO OTHER GEAR BOX DETAILS, SEE NHA. . .								2
MISSING ITEM NUMBERS ARE NOT APPLICABLE											


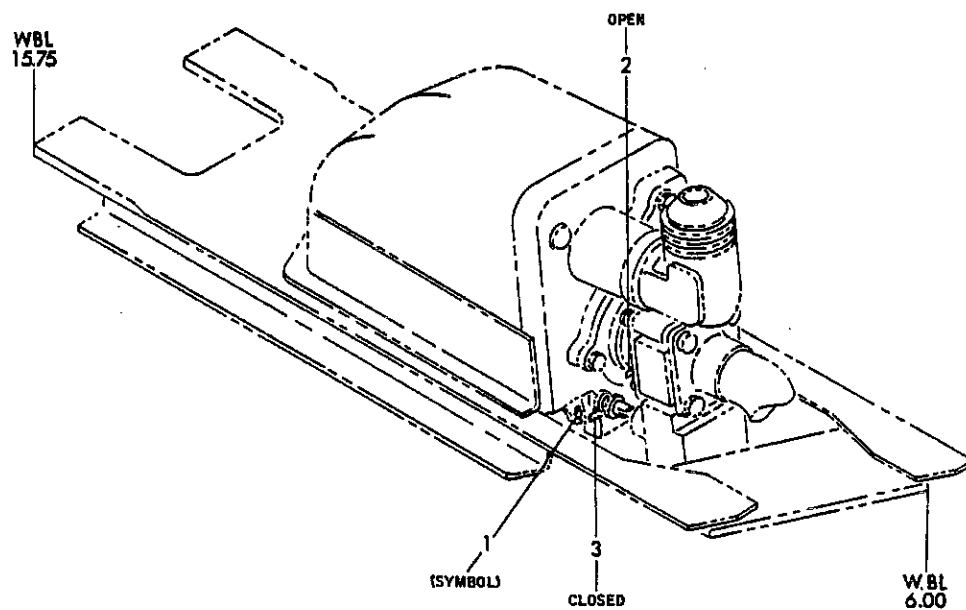 


FIGURE 60. PUMP INSTL, FUEL BOOSTER OVERRIDE (LH) (REQUIRED PLACARDS ONLY)

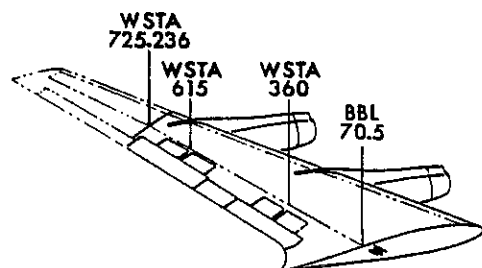 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
60	65-7104-1	PUMP INSTL, FUEL BOOSTER OVERRIDE (LH) (REQUIRED. . . .								RF
		PLACARDS ONLY) (SEE 28-1, FIG. 21, ITEM 85)								
	65-7104-2	PUMP INSTL, FUEL BOOSTER OVERRIDE (RH) (REQUIRED. . . .								RF
		PLACARDS ONLY) (SEE 28-1, FIG. 21, ITEM 85)								
		66-12088-6	. HANDLE ASSY, SHUT-OFF (REQUIRED PLACARDS ONLY). . . .							
1	66-12088-8	. . METAL-CAL, FUEL SHUT-OFF HANDLE								1
2	BACM10L00-1SC	. METAL-CAL, OPEN								1
3	BACM10L00-1SE	. METAL-CAL, CLOSED								1
		. FOR REFERENCE TO OTHER PUMP DETAILS, SEE NHA.								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										


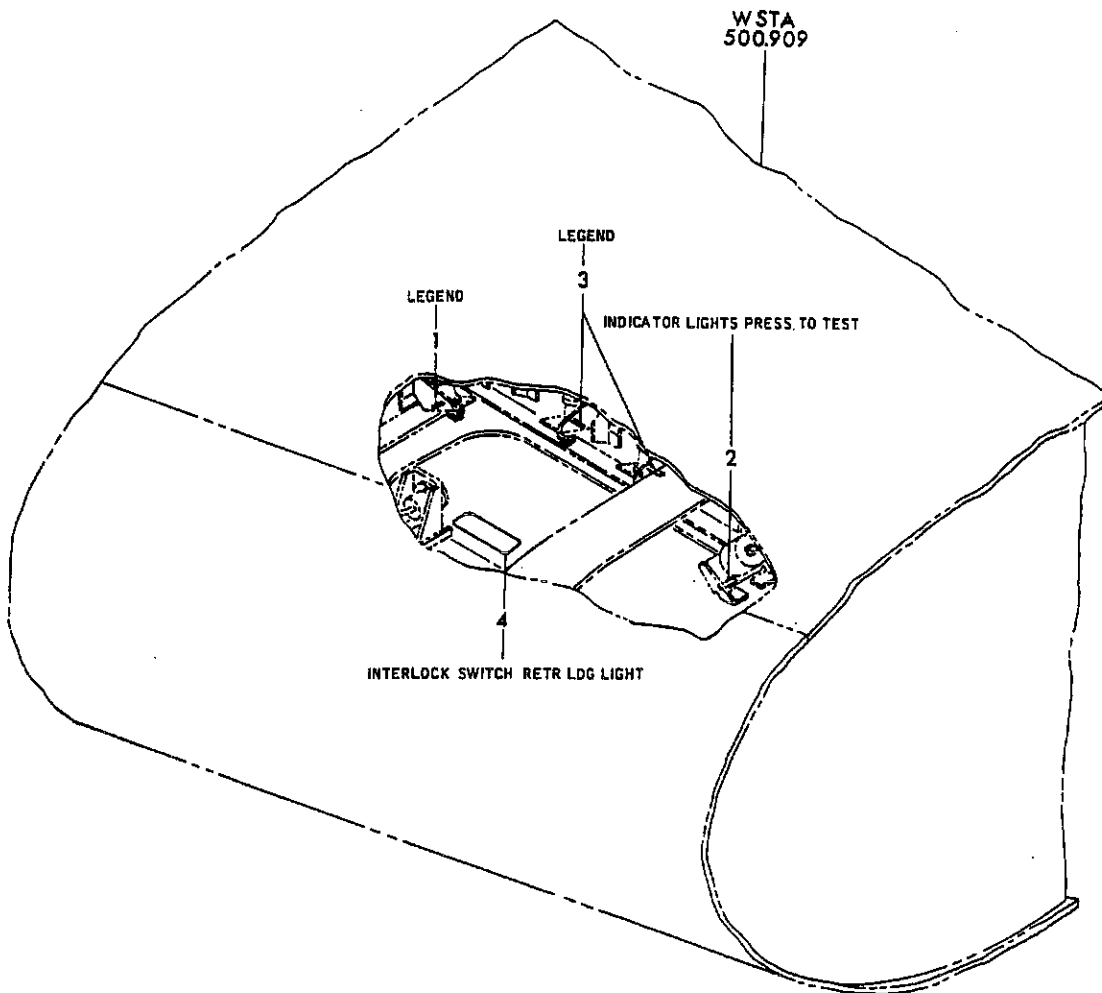 


FIGURE 61. LIGHT INSTL, PRESSURE FUELING CONTROL (REQUIRED PLACARDS ONLY)

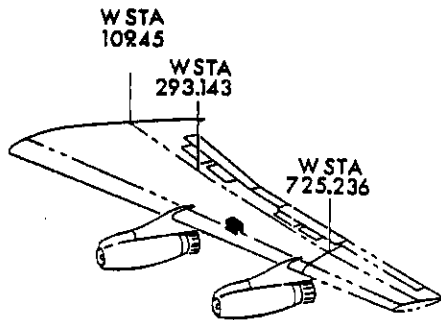 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
61	65-2982-1	LIGHT INSTL, PRESSURE FUELING CONTROL (REQUIRED PLACARDS ONLY) (LH) (SEE 24-2, FIG. 11, ITEM 4 AND 24-2, FIG. 12, ITEM 3A)									RF
	65-2982-2	LIGHT INSTL, PRESSURE FUELING CONTROL (REQUIRED PLACARDS ONLY) (RH) (SEE 24-2, FIG. 11, ITEM 4 AND 24-2, FIG. 12, ITEM 3A)									RF
	4	BACM10S3ZA	. METAL-CAL, INTERLOCK SWITCH RETR LDG LIGHT. FOR REFERENCE TO OTHER LIGHT DETAILS, SEE NHA								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											


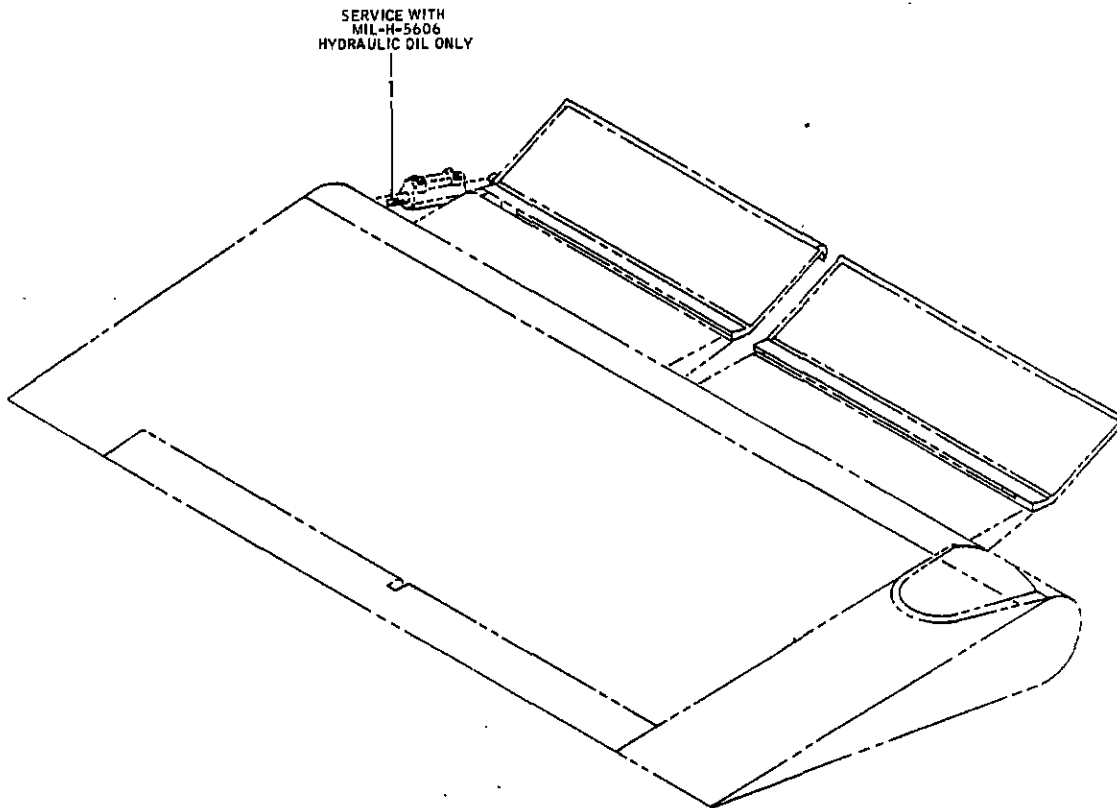 


FIGURE 63. SNUBBER INSTL, AILERON CONTROL SURFACE (REQUIRED PLACARDS ONLY)

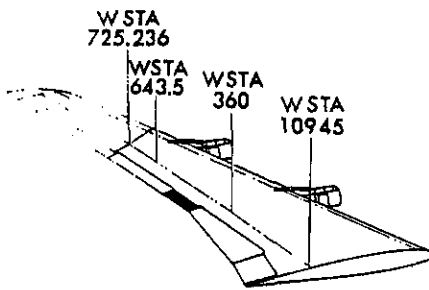 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
63 1	5-87412-3000 BACMIOLICRU		SNUBBER INSTL, AILERON CONTROL SURFACE (REQUIRED. . . . PLACARDS ONLY) (SEE 27-2, FIG. 8, ITEM 7) . MARKER-ALUMINUM FOIL, SERVICE WITH MIL-H-5606 HYDRAULIC OIL ONLY . FOR REFERENCE TO OTHER SNUBBER DETAILS, SEE NHA		RF 1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					


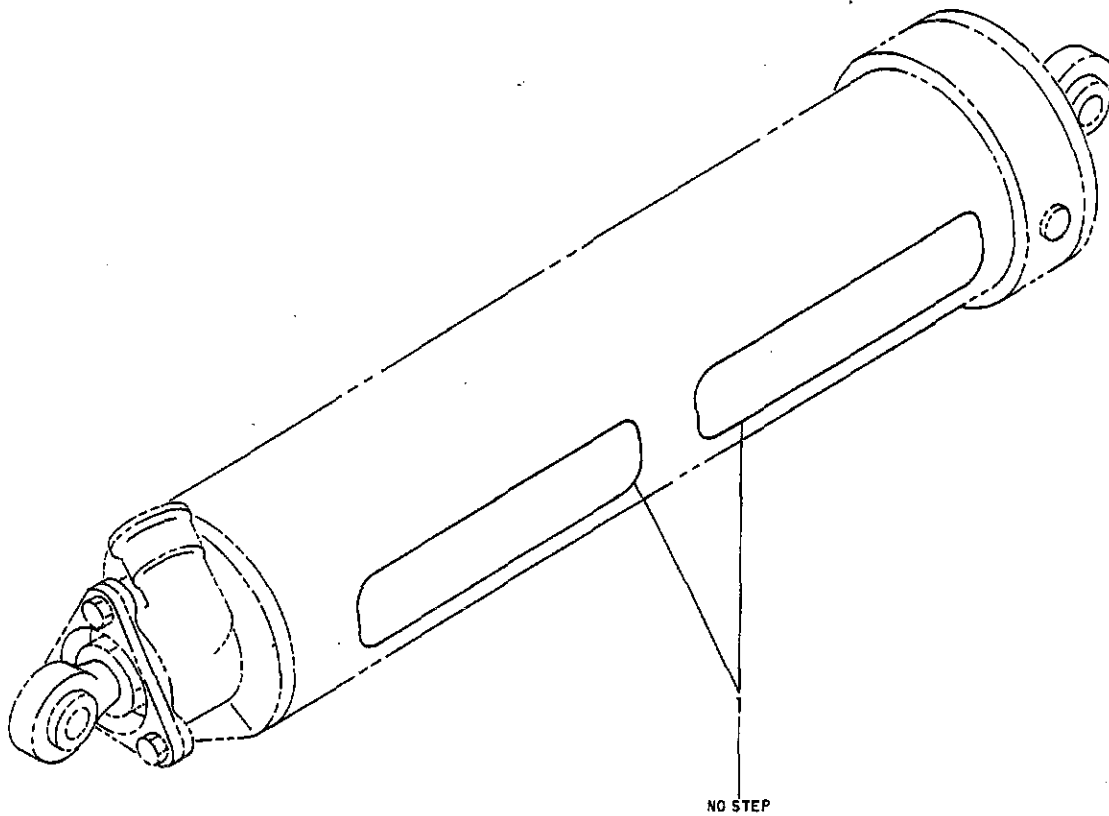 


FIGURE 64. ACTUATOR ASSY, FAN REVERSE (REQUIRED PLACARDS ONLY)

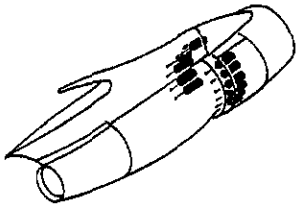 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
64	65-20892-13	ACTUATOR ASSY, FAN REVERSER (REQUIRED PLACARDS ONLY). (SEE 78-4, FIG. 1, ITEM 6, 78-4, FIG. 1D, ITEM 9 AND 78-4, FIG. 1E, ITEM 9)							0150	RF
	65-20892-15	ACTUATOR ASSY, FAN REVERSER (REQUIRED PLACARDS ONLY). (SEE 78-4, FIG. 1B, ITEM 11) (OPTIONAL TO 65-20892-17)							5199	RF
	65-20892-17	ACTUATOR ASSY, FAN REVERSER (REQUIRED PLACARDS ONLY). (SEE 78-4, FIG. 1B, ITEM 11) (OPTIONAL 65-20892-15)							5199	RF
	1	BACM10S41-5E	. MARKER-ALUMINUM FOIL, NO STEP FOR REFERENCE TO OTHER ACTUATOR DETAILS, SEE NHA. . .							
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

CAUTION
DO NOT ALLOW
BRACKET ATTACH
SCREWS TO BOTTOM
IN SEALED NUTPLATE

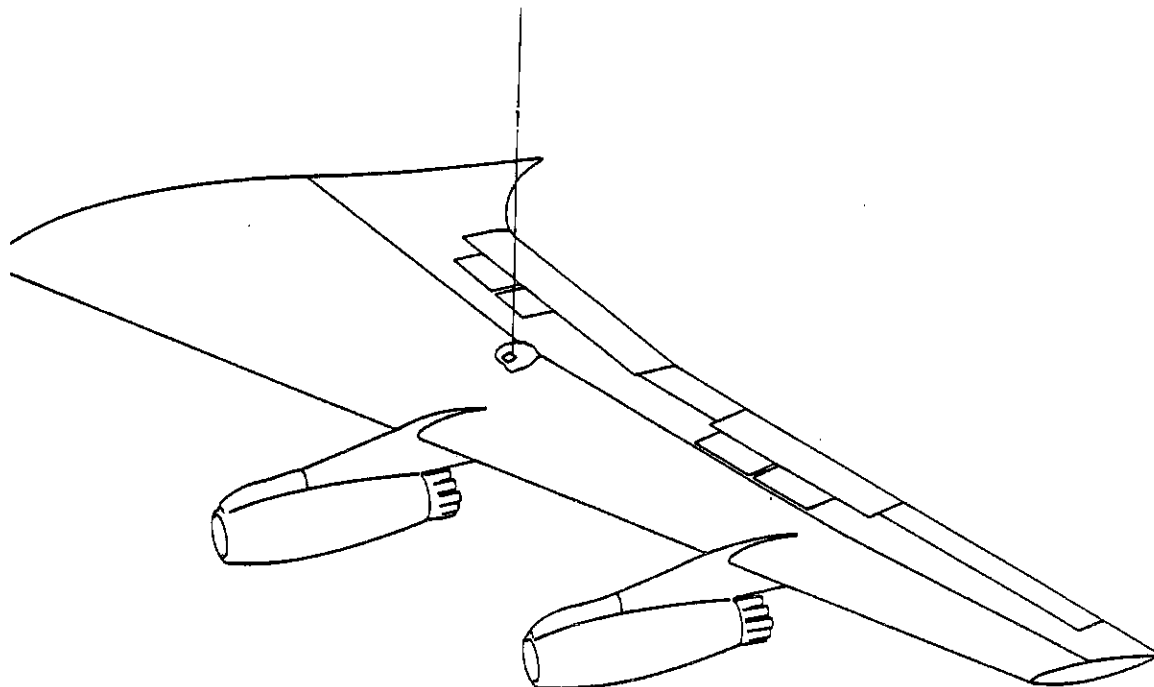 


FIGURE 66. RECEPTACLE INSTL, WING STATION 360 BOOST PUMP AFT (REQUIRED PLACARDS ONLY);
RECEPTACLE AND SEAL INSTL, WING BOOST PUMP (REQUIRED PLACARDS ONLY)



MISSING ITEM NUMBERS ARE NOT APPLICABLE

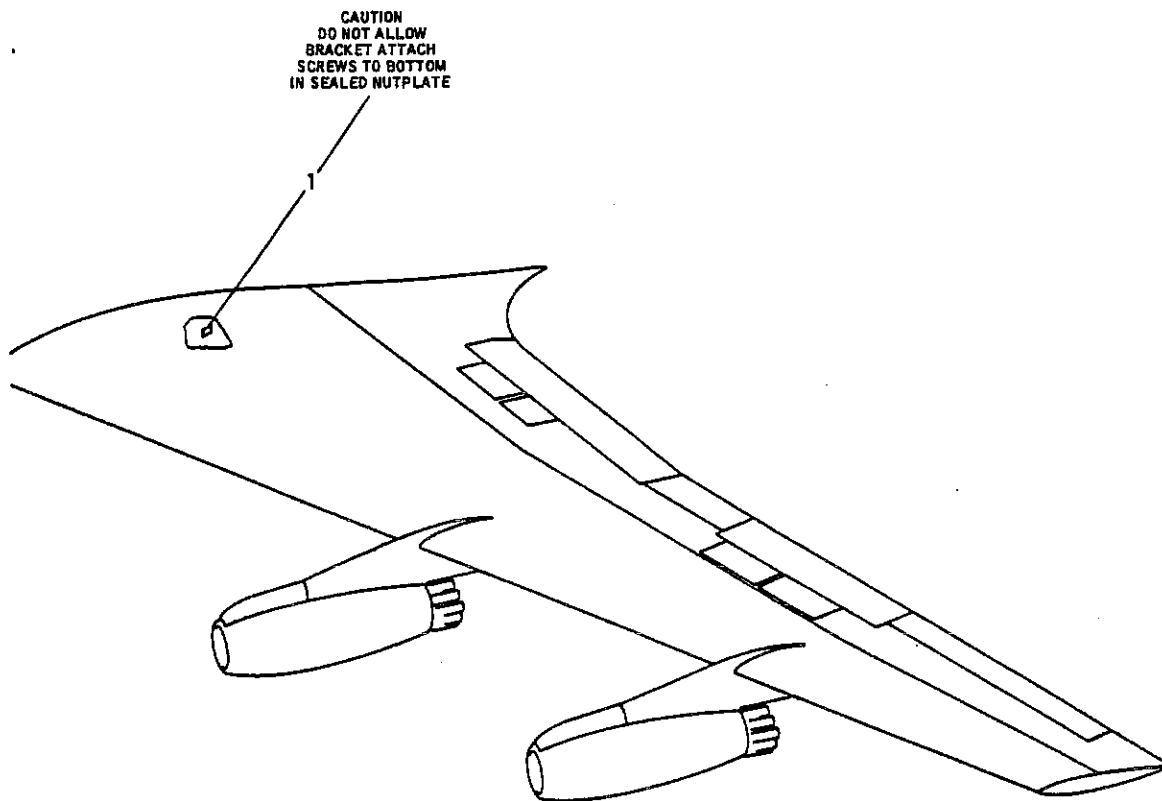 


FIGURE 67. RECEPTACLE INSTL, OVERRIDE PUMP (REQUIRED PLACARDS ONLY)
RECEPTACLE AND SEAL INSTL, WING OVERRIDE PUMP (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE						EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6 7		
67	65-19840-1	RECEPTACLE AND SEAL INSTL, WING OVERRIDE PUMP LH. . . . (REQUIRED PLACARDS ONLY) (SEE 24-2, FIG. 12, ITEM 30)							RF
	65-19840-2	RECEPTACLE AND SEAL INSTL, WING OVERRIDE PUMP RH. . . . (REQUIRED PLACARDS ONLY) (SEE 24-2, FIG. 12, ITEM 30)							RF
	1	BACM9C21-5F	. MARKER, CAUTION DO NOT ALLOW BRACKET ATTACH SCREWS TO BOTTOM IN SEALED NUTPLATE . FOR REFERENCE TO OTHER RECEPTACLE AND RECEPTACLE AND SEAL DETAILS, SEE NHA						
MISSING ITEM NUMBERS ARE NOT APPLICABLE									


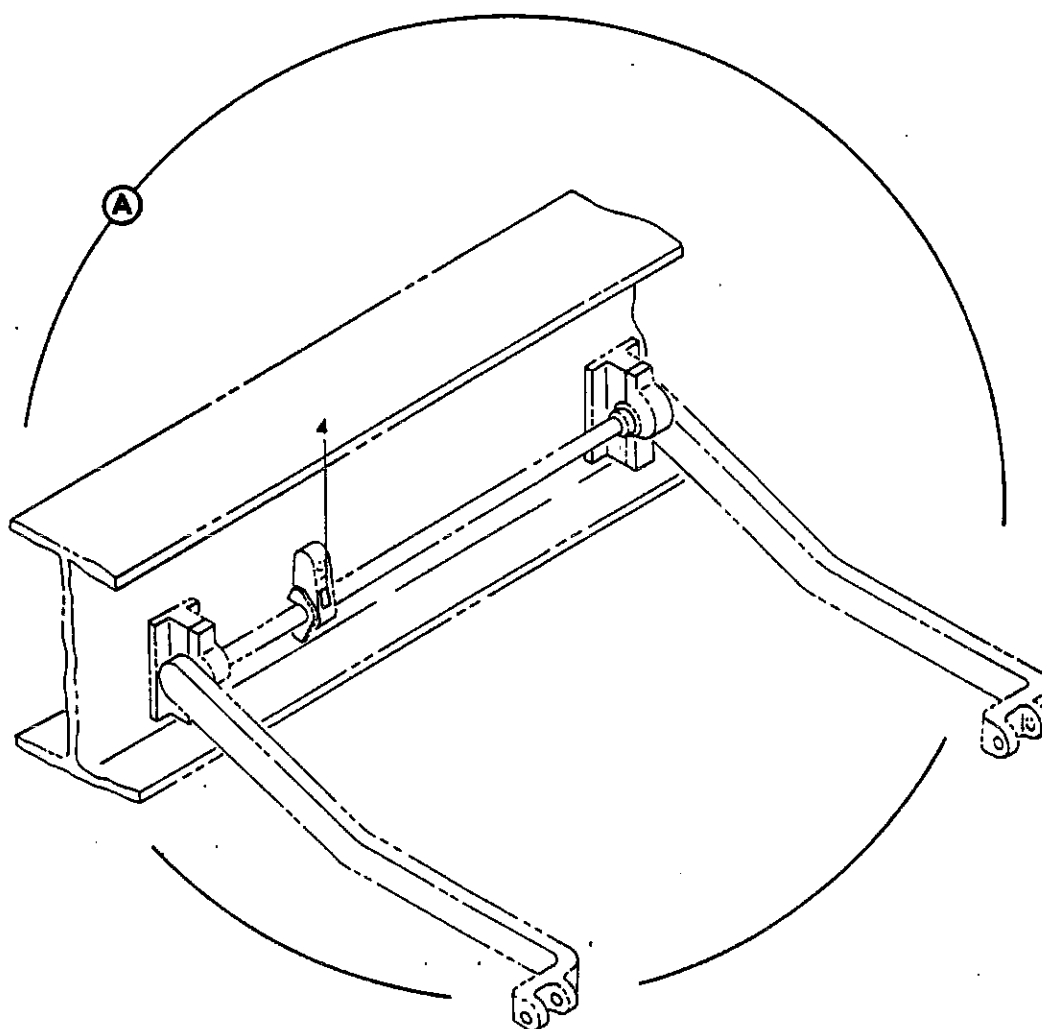 


FIGURE 75. ACTUATION INSTL, OUTBOARD COVE LIP DOOR (REQUIRED PLACARDS ONLY)

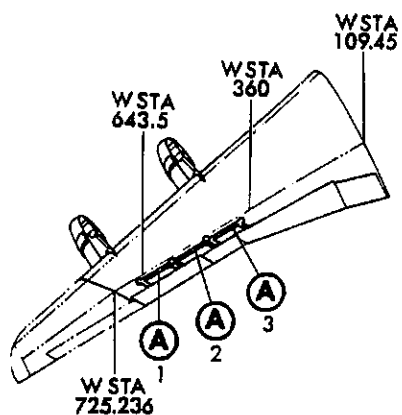 

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
75	1	65-18940-5	ACTUATION INSTL, OUTBOARD COVE LIP DOOR (REQUIRED . . . PLACARDS ONLY) (LH) (SEE 27-7, FIG. 37, ITEM 101)								RF
	1	65-18940-6	ACTUATION INSTL, OUTBOARD COVE LIP DOOR (REQUIRED . . . PLACARDS ONLY) (RH) (SEE 27-7, FIG. 37, ITEM 101)								RF
	2	65-18940-3	ACTUATION INSTL, OUTBOARD COVE LIP DOOR (REQUIRED . . . PLACARDS ONLY) (LH) (SEE 27-7, FIG. 37, ITEM 102)								RF
	2	65-18940-4	ACTUATION INSTL, OUTBOARD COVE LIP DOOR (REQUIRED . . . PLACARDS ONLY) (RH) (SEE 27-7, FIG. 37, ITEM 102)								RF
	3	65-18940-1	ACTUATION INSTL, OUTBOARD COVE LIP DOOR (REQUIRED . . . PLACARDS ONLY) (LH) (SEE 27-7, FIG. 37, ITEM 103)								RF
	3	65-18940-2	ACTUATION INSTL, OUTBOARD COVE LIP DOOR (REQUIRED . . . PLACARDS ONLY) (RH) (SEE 27-7, FIG. 37, ITEM 103)								RF
	4	BACM10L1CWK	. MARKER-ALUMINUM FOIL, CAUTION PRELOADED FOR REFERENCE TO OTHER ACTUATION DETAILS, SEE NHA . .								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											


 
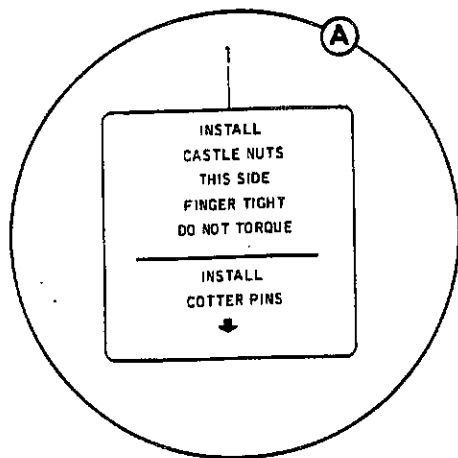 


FIGURE 80. QUADRANT ASSY, ELEVATOR CONTROL (REQUIRED PLACARDS ONLY)

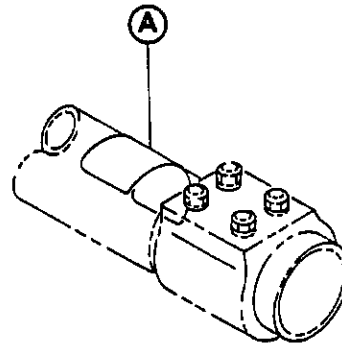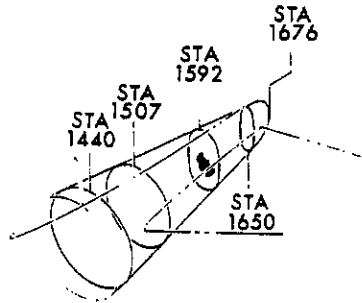 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
80	5-89537-3007	QUADRANT ASSY, ELEVATOR CONTROL (REQUIRED PLACARDS. . . ONLY) (SEE 27-11, FIG. 10, ITEM 62)	5199	RF
	5-89537-3007	QUADRANT ASSY, ELEVATOR CONTROL (REQUIRED PLACARDS. . . ONLY) (ADDED BY SB 3050) (SEE 27-11, FIG. 10, ITEM 62)	0150	RF
	1 BAC27CCT18	. MARKER-ALUMINUM FOIL, INSTALL CASTLE NUTS INSTRUCTIONS . FOR REFERENCE TO OTHER QUADRANT DETAILS, SEE NHA. . .		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 04
LANDING GEAR

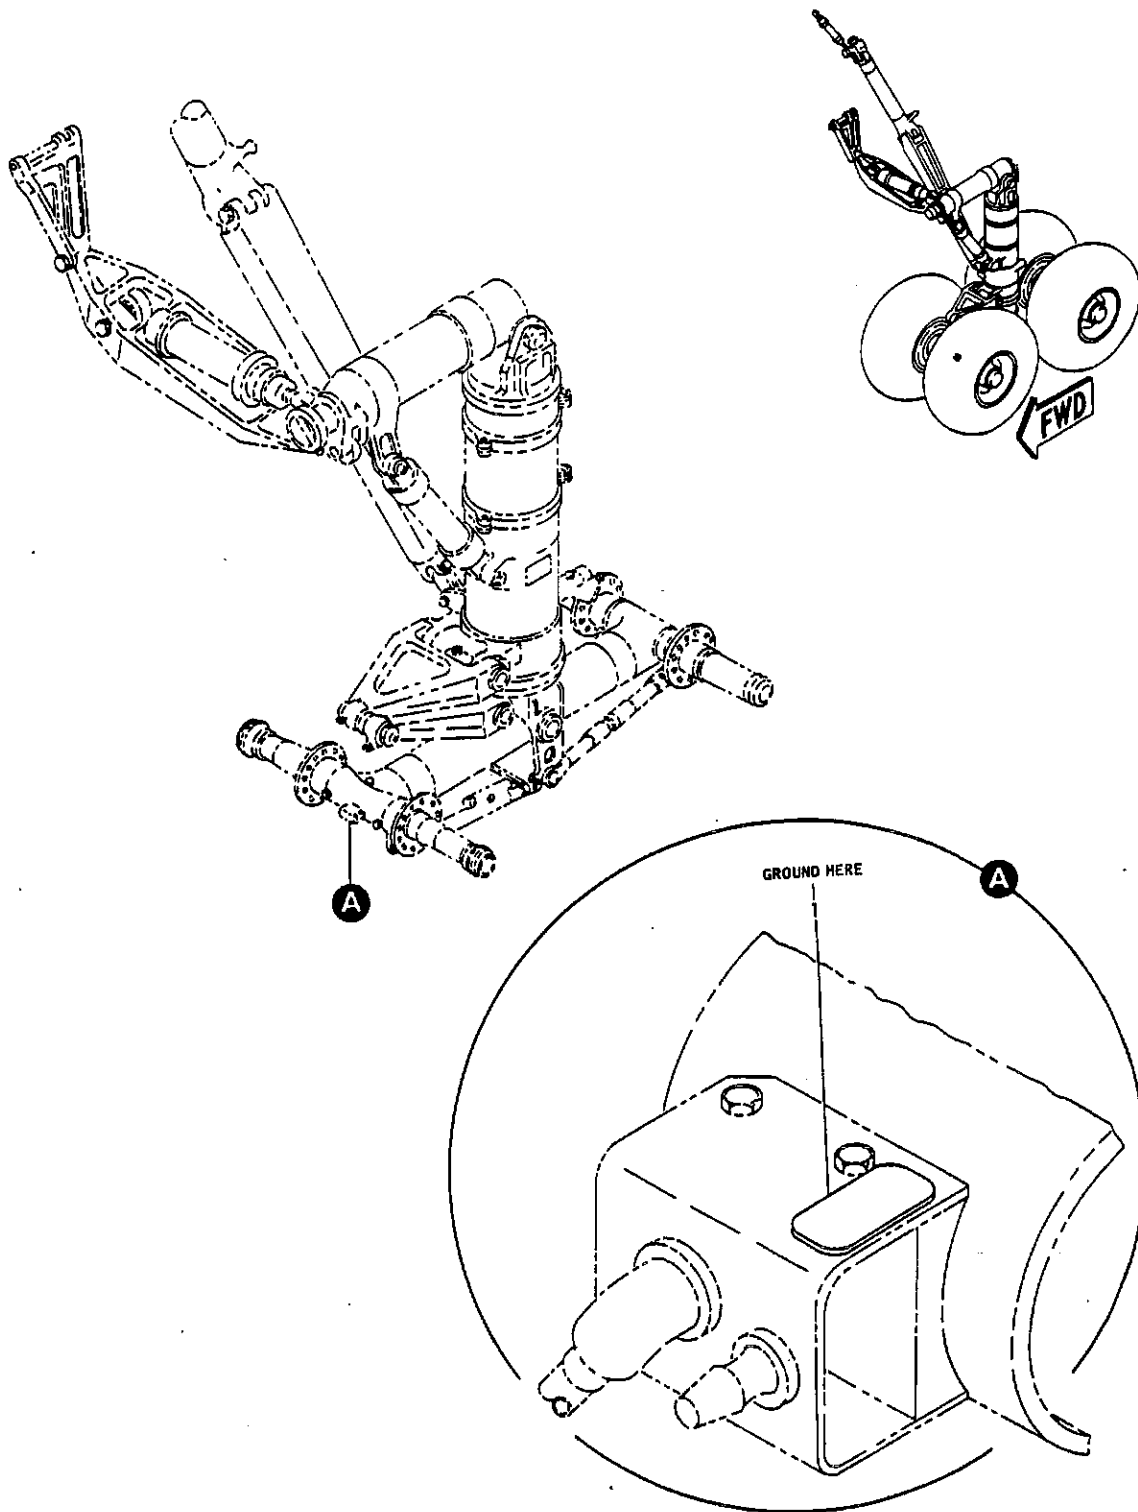 


FIGURE 3. ELECTRICAL INSTL. MAIN LANDING GEAR (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R	3	50-5567-18	ELECTRICAL INSTL, MAIN LANDING GEAR (LH) (REQUIRED. . .							0150	RF
			PLACARDS ONLY) (SEE 32-1, FIG. 1E, ITEM 73, 32-1,								
		50-5567-19	FIG. 2, ITEM 66 AND 32-1, FIG. 2A, ITEM 66)							0150	RF
			ELECTRICAL INSTL, MAIN LANDING GEAR (RH) (REQUIRED. . .								
	1	BACM10G10-5AV	PLACARDS ONLY) (SEE 32-1, FIG. 1F, ITEM 75, 32-1,							0150	1
			FIG. 2A, ITEM 66 AND 32-1, FIG. 2B, ITEM 81)							0150	
			. MARKER, GROUND HERE ALUMINUM FOIL							0150	
			. FOR REFERENCE TO OTHER ELECTRICAL DETAILS, SEE NHA. .							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											


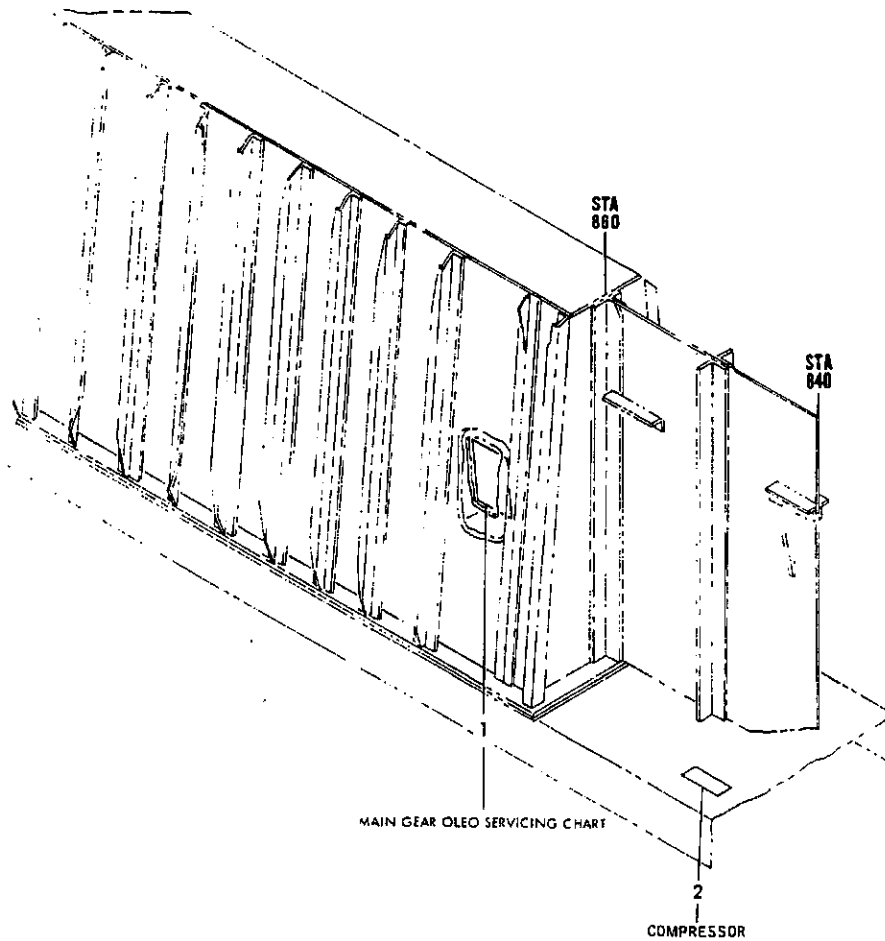 


FIGURE 6. BEAM INSTL. STATION 820 TO 960 KEEL (REQUIRED PLACARDS ONLY)

DETAILED PARTS LIST
11-04-6
AGE)

11-04-6

 NOV 21/90

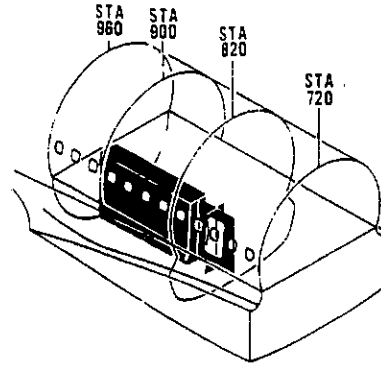

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R R R R	6	65-5630-126	0150	RF
		65-5630-204	5199	RF
		65-5629-35		1
		90-5235-1		1
		90-5235-2		1
R	1	BACM8C76-1C		1
	2	BACM10C62-32D	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

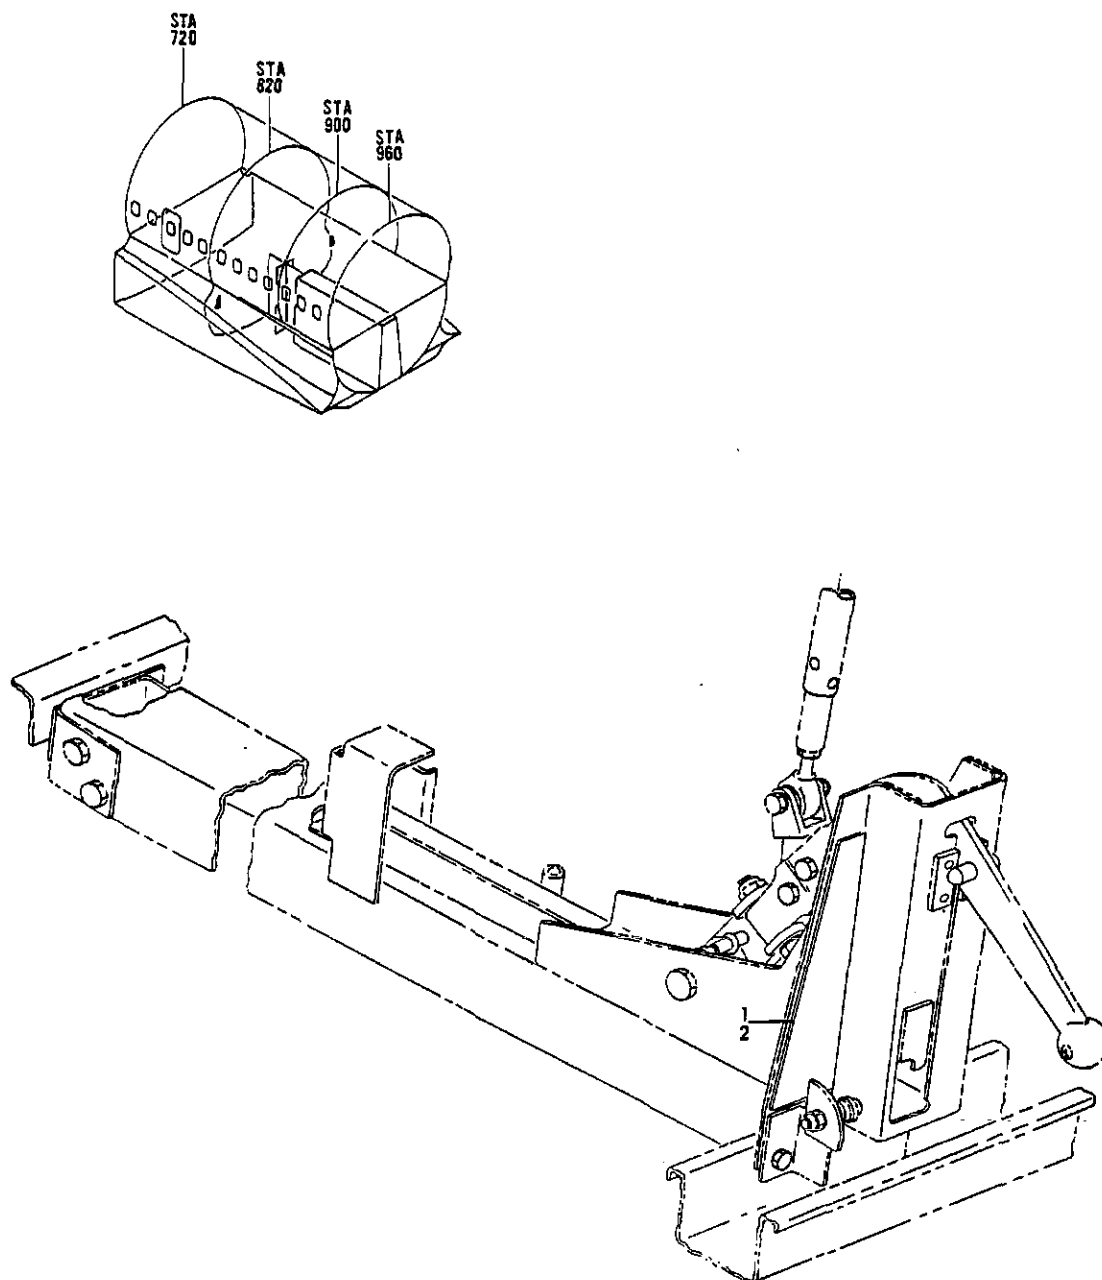 


FIGURE 7. CONTROL INSTL. LANDING GEAR GROUND DOOR RELEASE (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
7	65-22061-3	CONTROL INSTL, LANDING GEAR GROUND DOOR RELEASE (LH). . (REQUIRED PLACARDS ONLY) (SEE 32-2, FIG. 18, ITEM 5)								RF
	65-22061-4	CONTROL INSTL, LANDING GEAR GROUND DOOR RELEASE (RH). . (REQUIRED PLACARDS ONLY) (SEE 32-2, FIG. 18, ITEM 6)								RF
2	BACMIOW61-2VR	. MARKER-ALUMINUM FOIL, WARNING (LH ONLY)								1
2	BACMIOW61-2SL	. MARKER-ALUMINUM FOIL, WARNING (RH ONLY)								1
		. FOR REFERENCE TO OTHER CONTROL DETAILS, SEE NHA . . .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

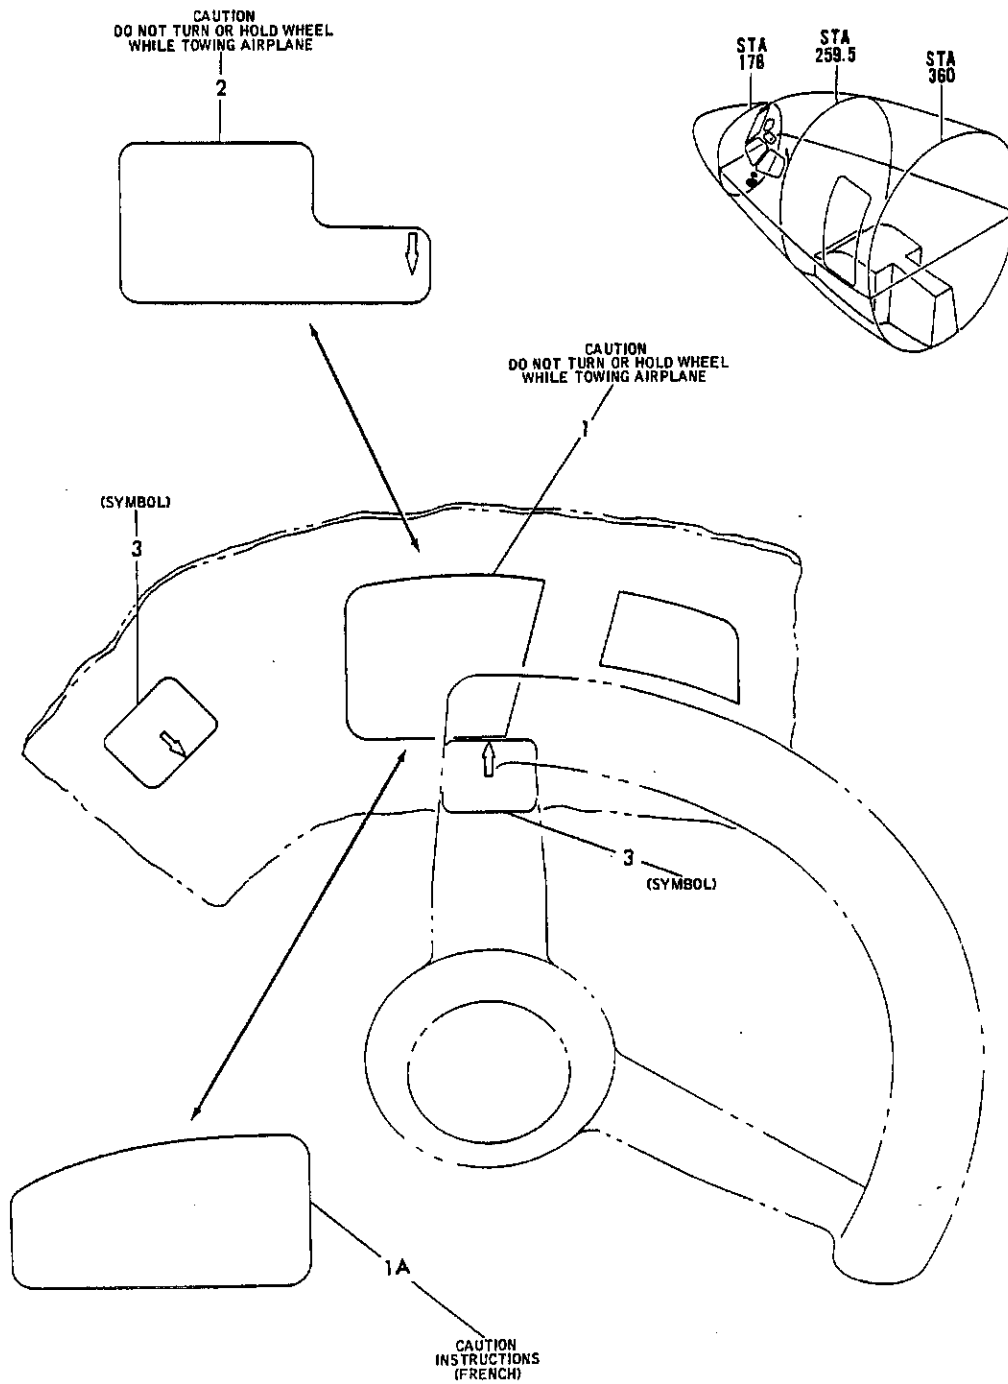 


FIGURE 8. WHEEL INSTL, NOSE WHEEL STEERING (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R	8	65-28008-1	WHEEL INSTL, NOSE WHEEL STEERING LH (REQUIRED PLACARDS ONLY) (SEE 32-6, FIG. 4, ITEM 67)	0150	RF
		65-28008-2	WHEEL INSTL, NOSE WHEEL STEERING RH (REQUIRED PLACARDS ONLY) (SEE 32-6, FIG. 4, ITEM 68)	0150	RF
		5-87878-3012	WHEEL INSTL, NOSE GEAR STEERING (LH) (REQUIRED PLACARDS ONLY) (SEE 32-6, FIG. 3, ITEM 3)	5199	RF
	1	BACM10G31-1DW	. MARKER, TO CENTER NOSE GEAR INSTRUCTIONS, CAUTION . . INSTRUCTIONS ALUMINUM FOIL (LH ONLY)		1
	2	BACM10C37M	. MARKER-ALUMINUM FOIL, CAUTION INSTRUCTIONS, TO CENTER NOSE GEAR INSTRUCTIONS (RH ONLY)	0150	1
			. FOR REFERENCE TO OTHER WHEEL DETAILS, SEE NHA		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

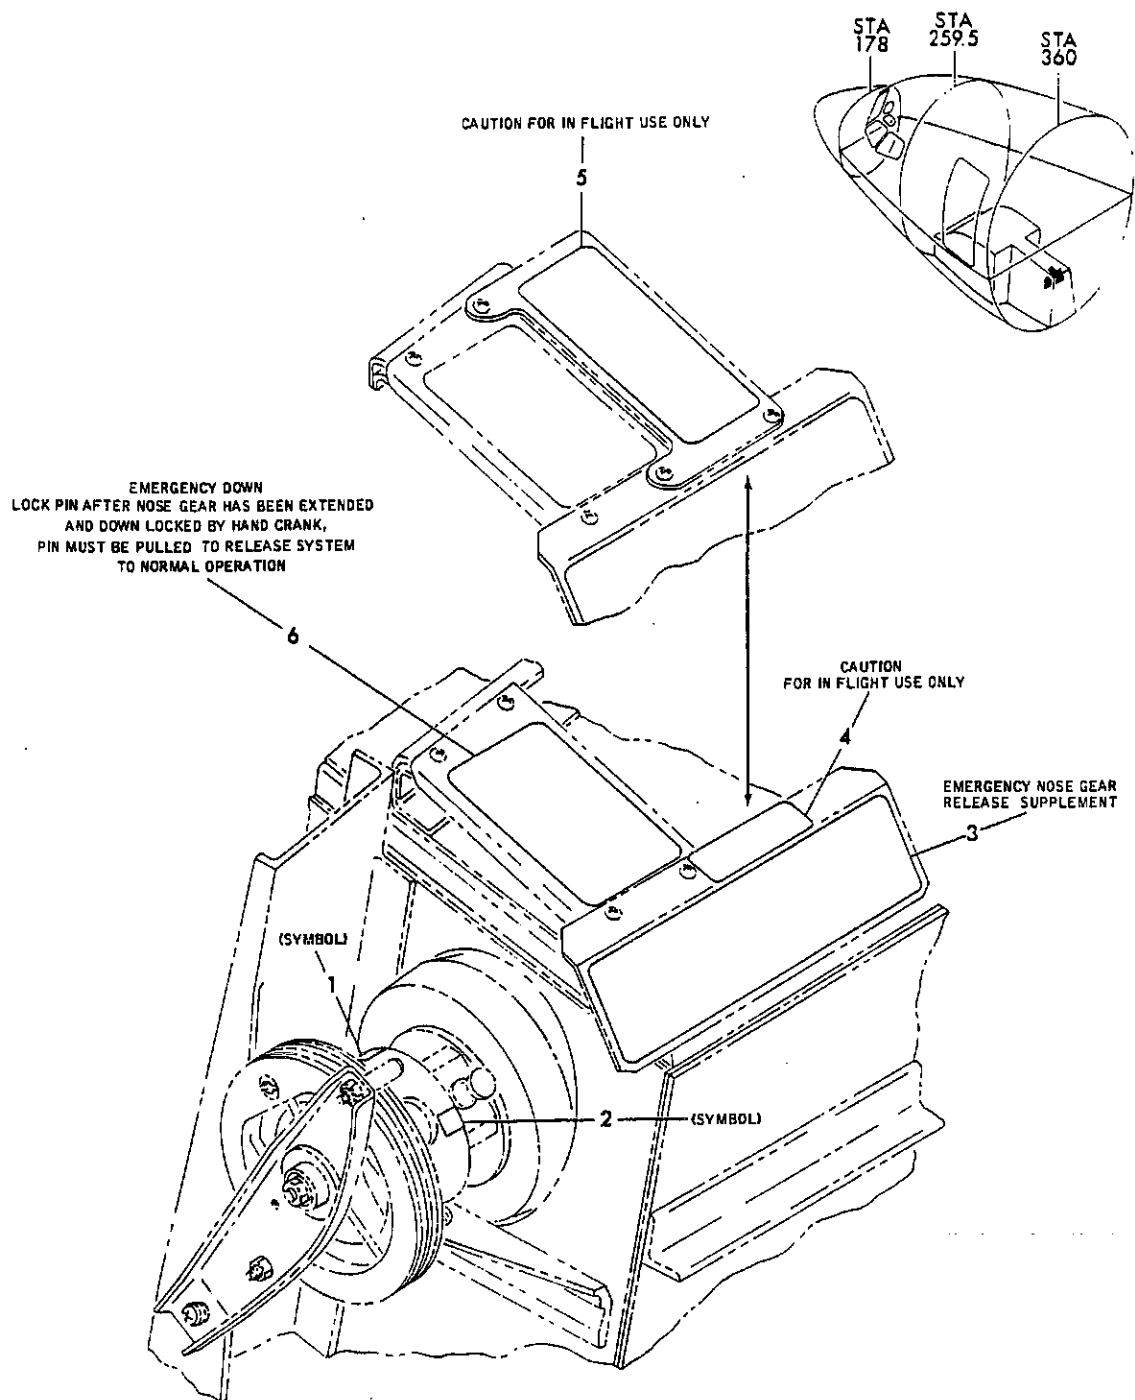 


FIGURE 10. DRUM INSTL, EMERGENCY NOSE GEAR EXTENSION RELEASE (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
10	65-36011		DRUM INSTL, EMERGENCY NOSE GEAR EXTENSION RELEASE . . . (REQUIRED PLACARDS ONLY) (SEE 32-5, FIG. 1, ITEM 34)		RF
1	BACM9N1DS		. SCOTCH-CAL, 1		1
2	BACM9N1DT		. SCOTCH-CAL, 2		1
3	BACM10L1ECV		. MARKER, ALUMINUM FOIL		1
4	BACM10C37L		. MARKER, ALUMINUM FOIL		1
6	BACM10P42-BBZ		. MARKER, ALUMINUM FOIL		1
			. FOR REFERENCE TO OTHER DRUM DETAILS, SEE NHA.		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

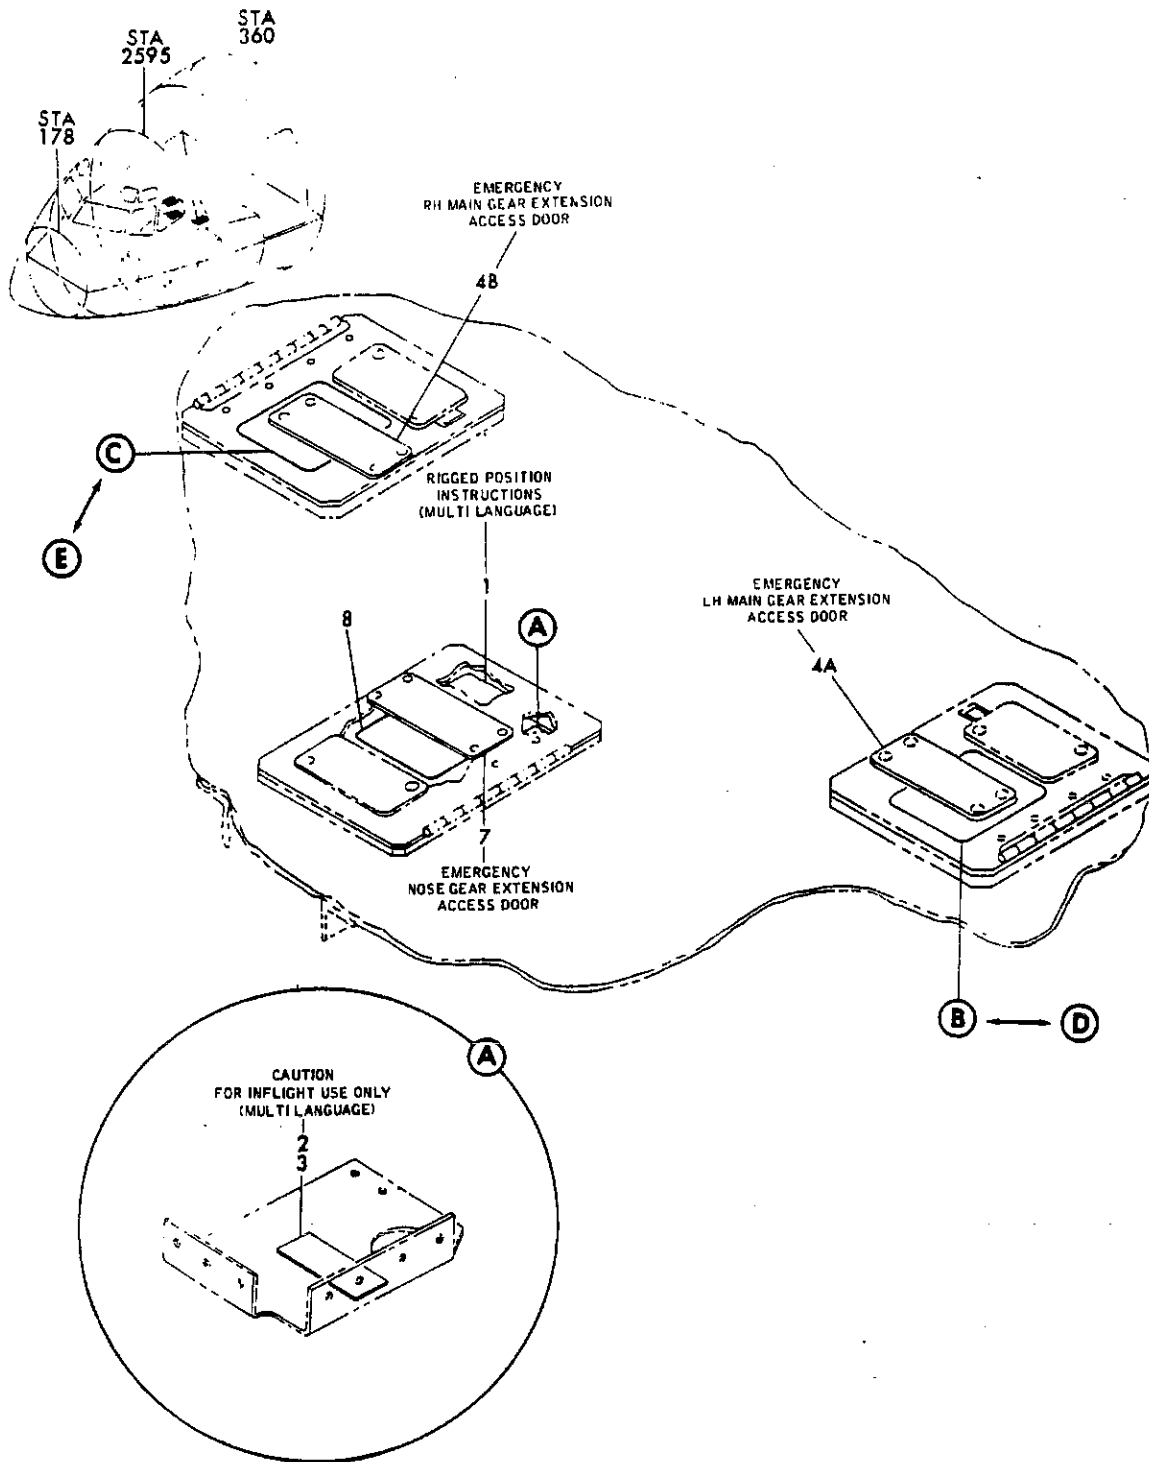 


FIGURE 11. DOOR INSTL. MAIN AND NOSE GEAR EXTENSION (REQUIRED PLACARDS ONLY) (SHEET 1)

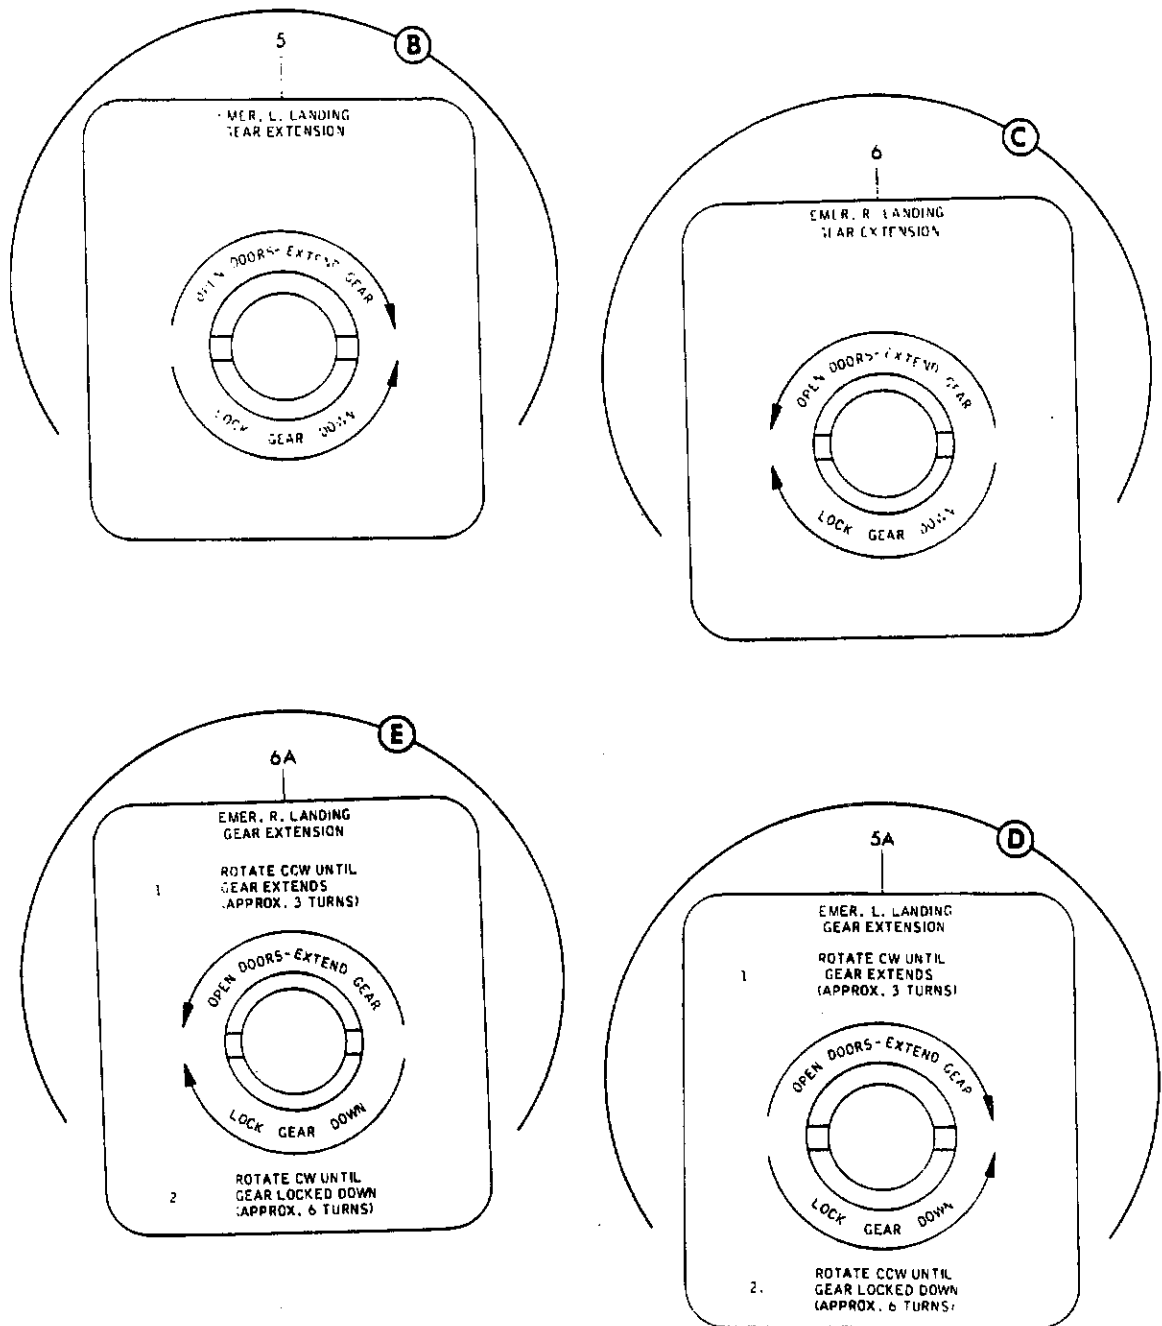 


FIGURE 11 DOOR INSTL, MAIN AND NOSE GEAR EXTENSION (REQUIRED PLACARDS ONLY) (SHEET 2)

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
11	65-2304-1	DOOR INSTL, EMERGENCY MAIN AND NOSE GEAR EXTENSION. . . (REQUIRED PLACARDS ONLY) (SEE 32-5, FIG. 1, ITEM 35)	0150	RF
	65-2304-2	DOOR INSTL, EMERGENCY MAIN AND NOSE GEAR EXTENSION. . . (REQUIRED PLACARDS ONLY) (SEE 32-5, FIG. 1, ITEM 35)	5199	RF
1	BACM10G32-1FK	. MARKER-ALUMINUM FOIL.		1
2	BACM10C37L	. MARKER, ALUMINUM FOIL.		1
	65-2304-3	. DOOR ASSY, EMERGENCY NOSE GEAR EXTENSION LH (REQUIRED PLACARDS ONLY)	0150	RF
	65-2304-60	. DOOR ASSY, EMERGENCY NOSE GEAR EXTENSION LH (REQUIRED PLACARDS ONLY)	5199	RF
	65-2304-4	. DOOR ASSY, EMERGENCY NOSE GEAR EXTENSION RH (REQUIRED PLACARDS ONLY)	0150	RF
	65-2304-61	. DOOR ASSY, EMERGENCY NOSE GEAR EXTENSION RH (REQUIRED PLACARDS ONLY)	5199	RF
4A	65-2304-30	. . PLACARD, EMERGENCY MAIN GEAR EXTENSION DOOR (LH . . ONLY)		1
4B	65-2304-31	. . PLACARD, EMERGENCY MAIN GEAR EXTENSION DOOR (RH . . ONLY)		1
5	BACM10G22-1EL	. . MARKER-ALUMINUM FOIL, (LH ONLY)	0103	1
5	BACM10G22-1EL	. . MARKER-ALUMINUM FOIL, (LH) (DELETED BY SB 3061) . .	0450	1
5A	BAC27CCT19	. . MARKER-ALUMINUM FOIL, EMER. L. LANDING GEAR EXTENSION (LH) (ADDED BY SB 3061)	0450	1
5A	BAC27CCT19	. . MARKER-ALUMINUM FOIL, EMER. L. LANDING GEAR EXTENSION (LH ONLY)	5199	1
6	BACM10G22-1EM	. . MARKER-ALUMINUM FOIL, (RH ONLY)	0103	1
6	BACM10G22-1EM	. . MARKER-ALUMINUM FOIL, (RH) (DELETED BY SB 3061) . .	0450	1
6A	BAC27CCT20	. . MARKER-ALUMINUM FOIL, EMER. R. LANDING GEAR EXTENSION (RH ONLY)	5199	1
6A	BAC27CCT20	. . MARKER-ALUMINUM FOIL, EMER. R. LANDING GEAR EXTENSION (RH) (ADDED BY SB 3061)	0450	1
	65-2304-7	. DOOR ASSY (OPTIONAL AND FOR REPLACEMENT ORDER 65-2304-55)	0150	1
	65-2304-55	. DOOR ASSY (OPTIONAL TO AND REPLACEMENT FOR 65-2304-7)	0150	1
	65-2304-64	. DOOR ASSY	5199	1
	65-2304-32	. . PLACARD		1
8	BACM10G22-1GG	. . MARKER-ALUMINUM FOIL, (USED ON 65-2304-55 -56 AND -64)		1
8	BACM10G22-1FH	. . MARKER-ALUMINUM FOIL, (USED ON 65-2304-7, -8 AND -63)	0150	1
		. FOR REFERENCE TO OTHER DOOR DETAILS, SEE NHA.		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				


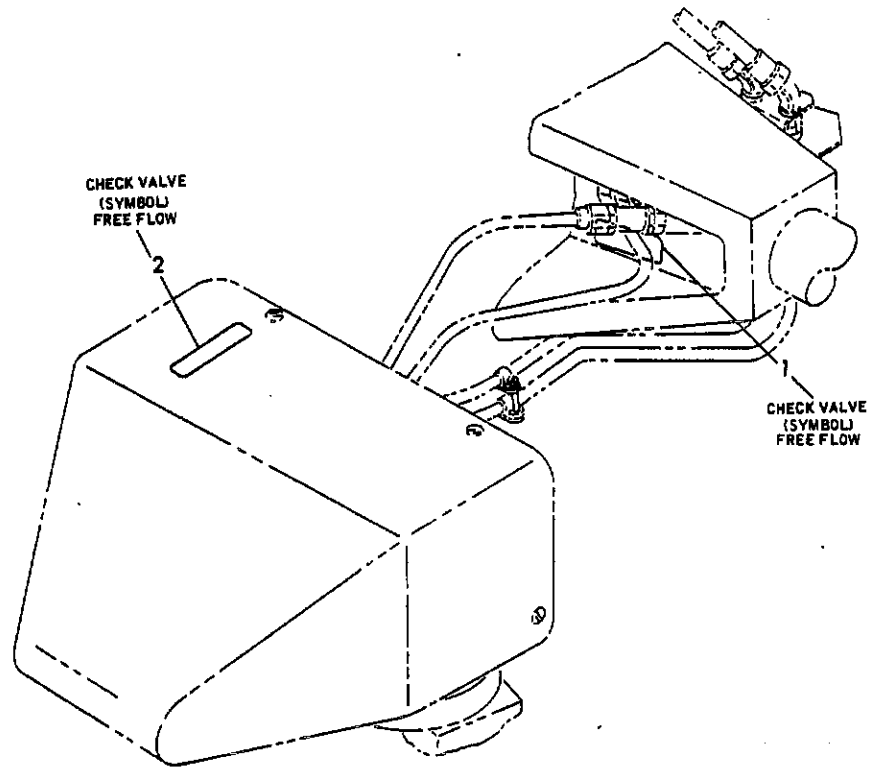 


FIGURE 18. HYDRAULIC INSTL, NOSE GEAR STEERING (REQUIRE PLACARDS ONLY)

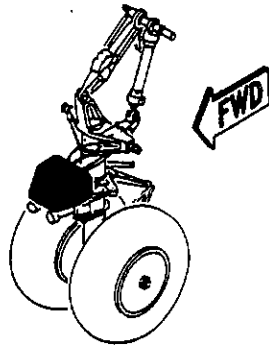 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
18	65-29305-1	HYDRAULIC INSTL, NOSE GEAR STEERING (REQUIRED PLACARDS ONLY) (SEE 32-3, FIG. 2, ITEM 70 AND 32-3, FIG. 2, ITEM 75 FOR SPARES ONLY)		RF
2	BACM10V21-2JH	. MARKER-ALUMINUM FOIL, CHECK VALVE FREE FLOW FOR REFERENCE TO OTHER HYDRAULIC DETAILS, SEE NHA . .		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				


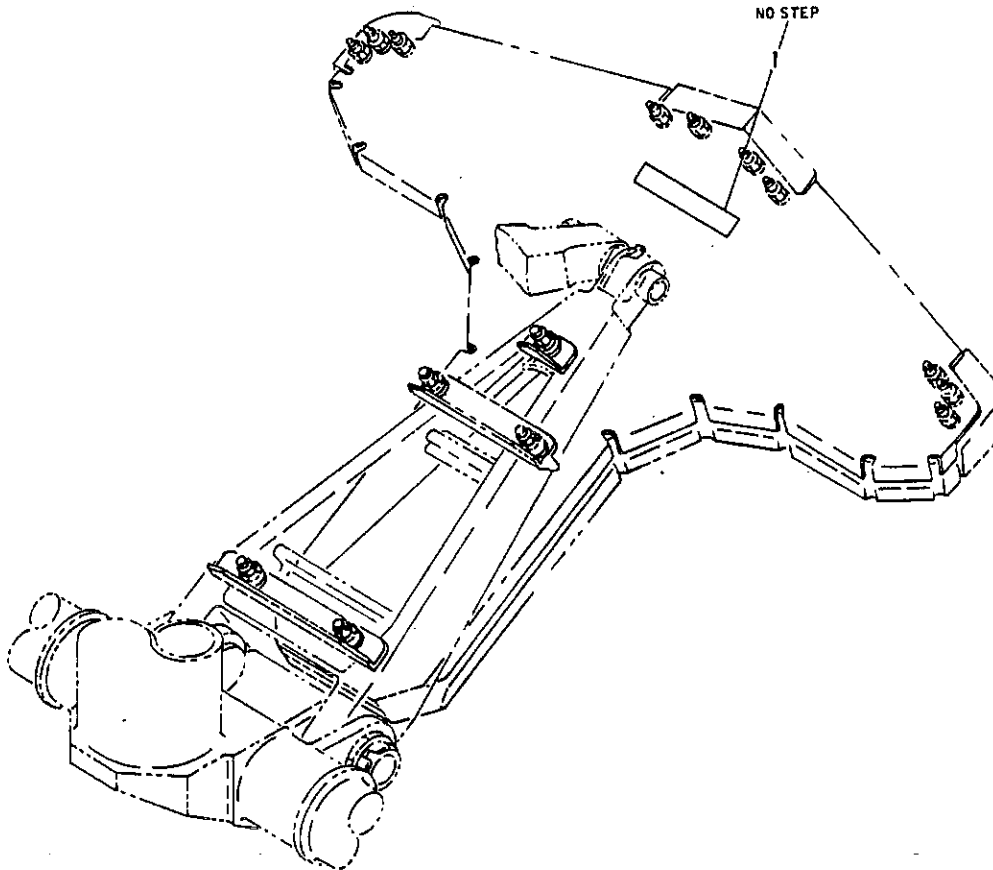 


FIGURE 20. DEFLECTOR INSTL. NOSE GEAR AIR (REQUIRED PLACARDS ONLY)

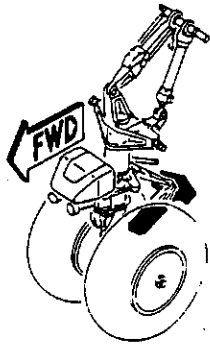 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
20	65-65650-1		DEFLECTOR INSTL, NOSE GEAR AIR (REQUIRED PLACARDS ONLY) (SEE 32-3, FIG. 1, ITEM 4A AND 32-3, FIG. 2, ITEM 6)	0103	RF
	65-65650-15		DEFLECTOR INSTL, NOSE GEAR AIR (REQUIRED PLACARDS ONLY) (SEE 32-3, FIG. 1, ITEM 4A AND 32-3, FIG. 2, ITEM 6)	0499	RF
1	65-65650-3		. DEFLECTOR ASSY.	0103	RF
1	65-65650-16		. DEFLECTOR ASSY.	0499	RF
2	BACM9S71-2A		. . DECAL, NO STEP.		1
			. FOR REFERENCE TO OTHER DEFLECTOR DETAILS, SEE NHA . .		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

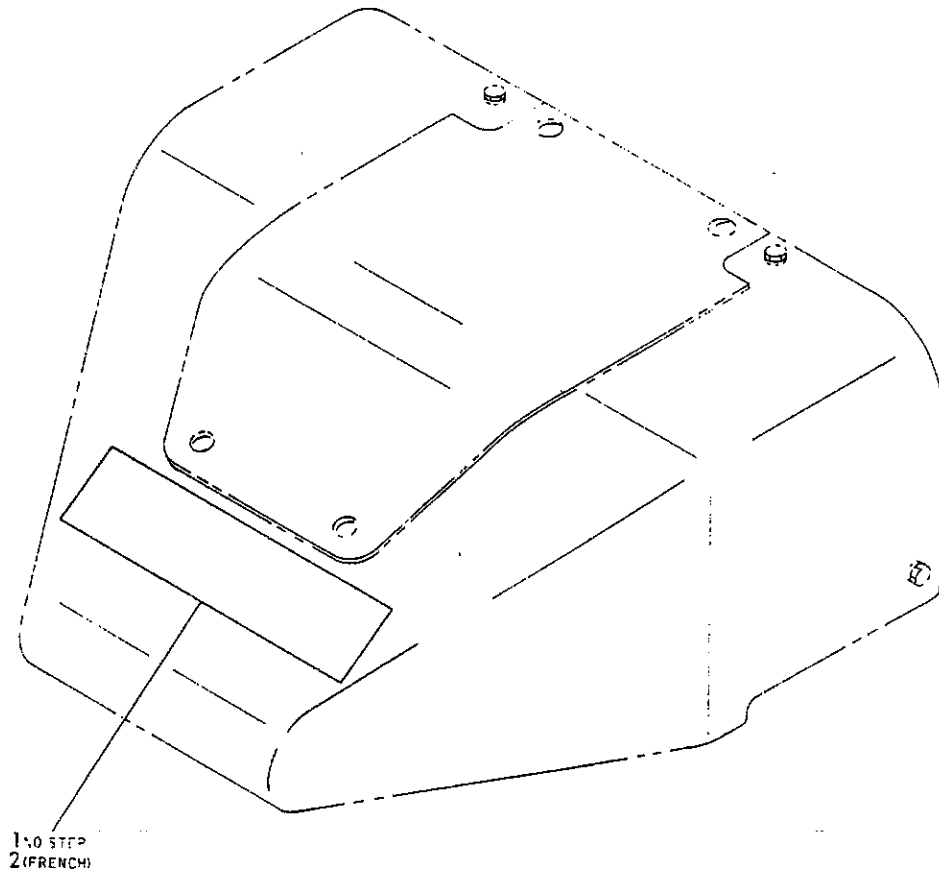 


FIGURE 21. COVER INSTL, NOSE WHEEL STEERING MECHANISM (REQUIRED PLACARDS ONLY)

MISSING ITEM NUMBERS ARE NOT APPLICABLE

11-04-21

DETAILED PARTS LIST
11-04-21
PAGE 1

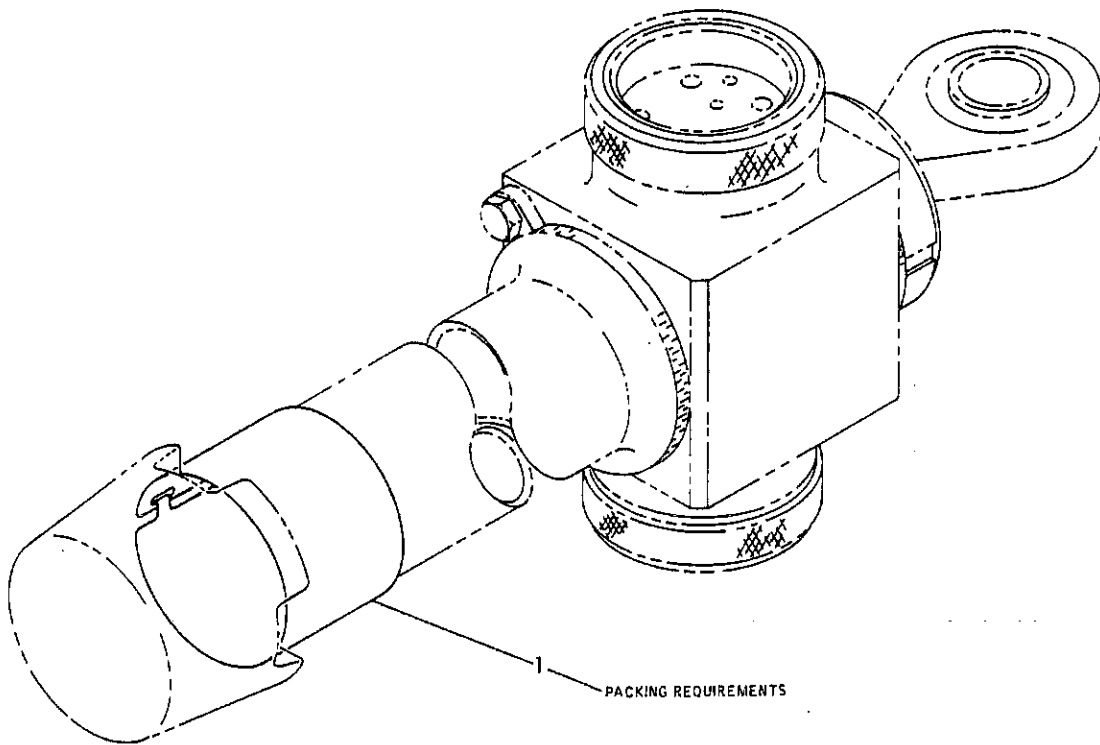 
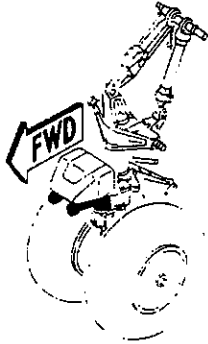 


FIGURE 22. CYLINDER ASSY, NOSE WHEEL STEERING (REQUIRED PLACARDS ONLY)

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
22	65-28235-5	CYLINDER ASSY, NOSE WHEEL STEERING (LH) (REQUIRED . . .		RF
	65-28235-6	PLACARDS ONLY) (SEE 32-3, FIG. 4, ITEM 40)		RF
	1 BACN12A3LK	CYLINDER ASSY, NOSE WHEEL STEERING (RH) (REQUIRED . . .		1
		PLACARDS ONLY) (SEE 32-3, FIG. 4, ITEM 41)		
		. NAMEPLATE, CYLINDER-INSTRUCTIONS.		
		. FOR REFERENCE TO OTHER CYLINDER DETAILS, SEE NHA. . .		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				


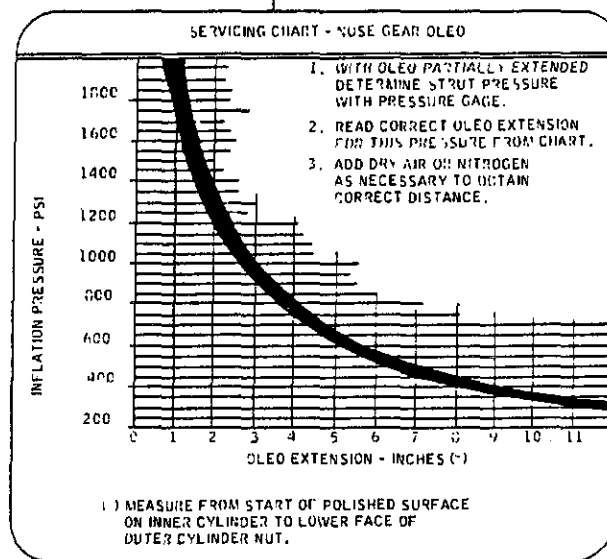 


FIGURE 23. NAMEPLATE INSTL, WHEEL WELL NOSE

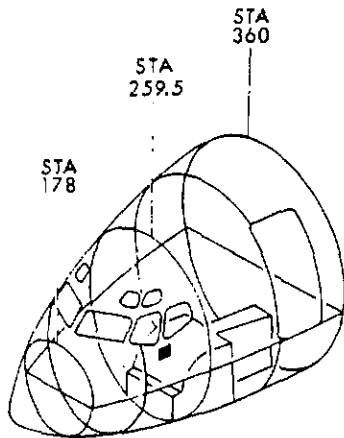 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
23	90-5236	NAMEPLATE INSTL, NOSE GEAR WHEEL WELL (SEE 53-1, FIG. .								RF
1	BACM8C76-1B	1, ITEM 33) . MARKER, NOSE GEAR OLEO SERVICING CHART.								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 06
INSTRUMENT AND CONTROL PANELS

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R R R	1	65-17001-2	PANEL INSTL, RADIO, RADAR AND AUTOPILOT CONTROL							0150	RF
			(REQUIRED PLACARDS ONLY) (VS2500) (DELETED BY MOD 7211.019-225) (SEE 25-1, FIG. 1K ITEM 1)								
		391-34-50-73967-001	PANEL INSTL, RADIO, RADAR AND AUTOPILOT CONTROL							0101	RF
			(REQUIRED PLACARDS ONLY) (VS2500) (65-17001-2 MODIFIED BY MOD 7211.019-225) (SEE 25-1, FIG. 1K ITEM 1)							0450	
		391-34-50-73967-003	PANEL INSTL, RADIO, RADAR AND AUTOPILOT CONTROL							0203	RF
			(REQUIRED PLACARDS ONLY) (VS2500) (65-17001-2 MODIFIED BY MOD 7211.019-225) (SEE 25-1, FIG. 1K ITEM 1)								
	27A	BACM9A6M	. SCOTCH-CAL, INOP.							0150	1
			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

RAF
NOV 21/01

11-06-1

DETAILED PARTS LIST
11-06-1
PAGE 1



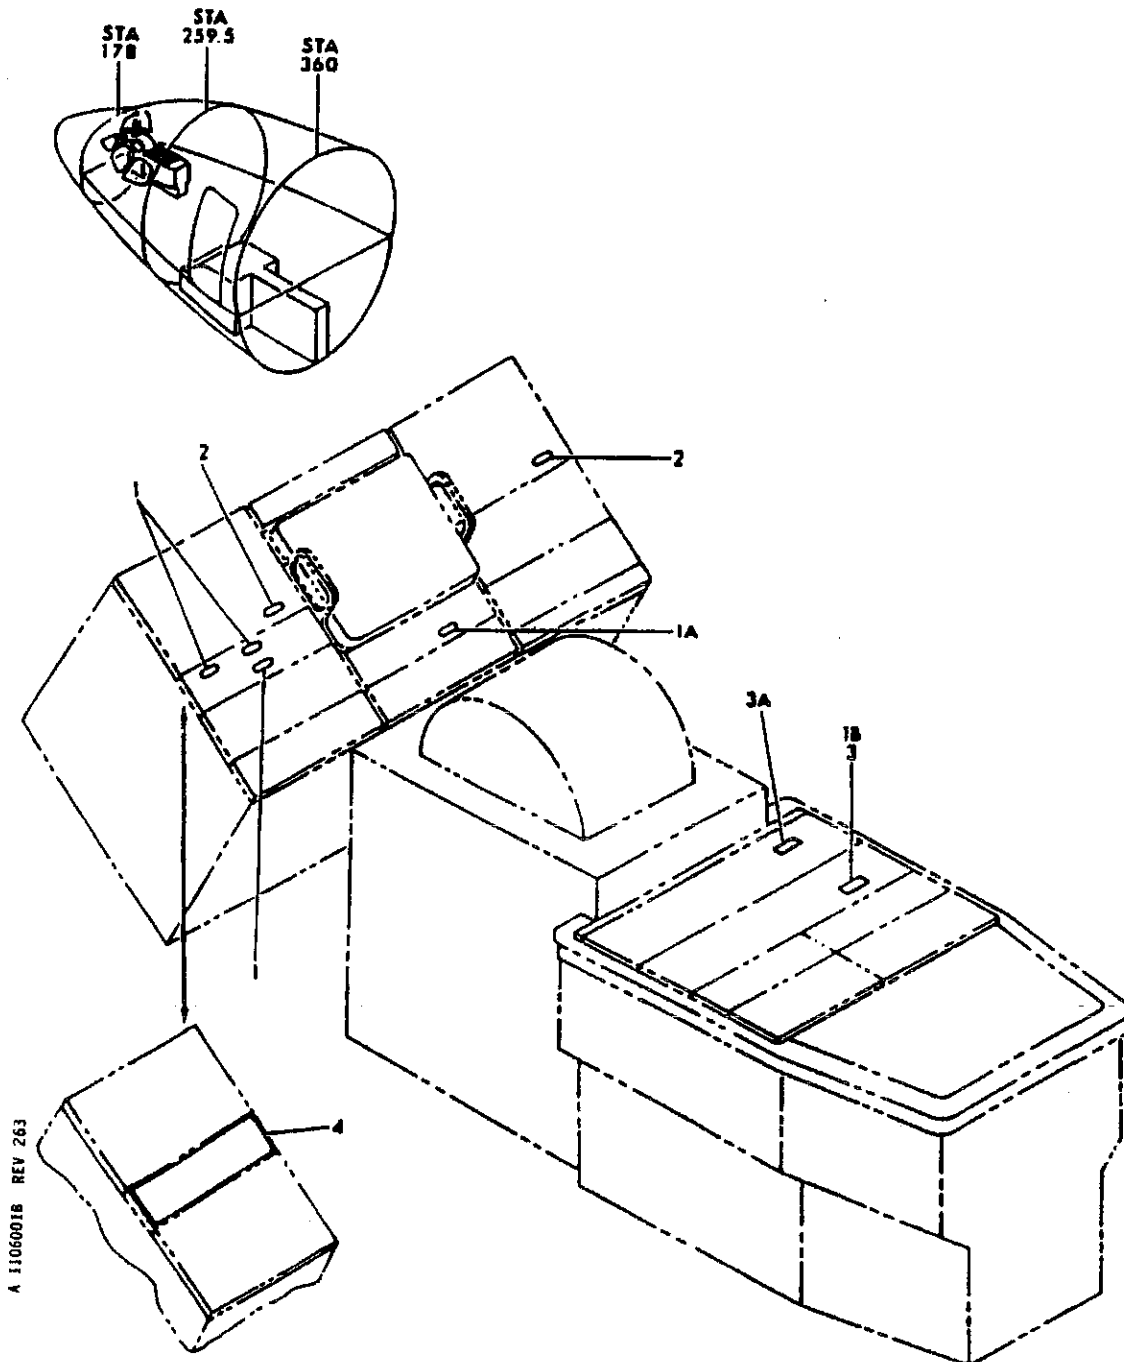 


FIGURE 1B. PANEL INSTL, RADIO RADAR AND AUTOPILOT CONTROL (REQUIRED PLACARDS ONLY)

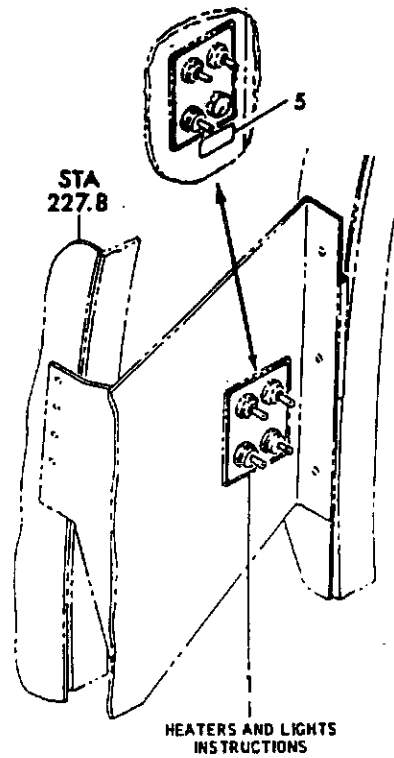 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
1B	65-1157-25	PANEL INSTL, RADIO RADAR AND AUTOPILOT CONTROL.							5199	RF
		(REQUIRED PLACARDS ONLY) (SEE 25-1, FIG. 2E, ITEM 1)								
1A	BAC27CEQ148	. MARKER-ALUMINUM FOIL, INOP.							5151	1
1B	BACM9S1AG	. SCOTCH-CAL, BLANK							5199	1
		. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

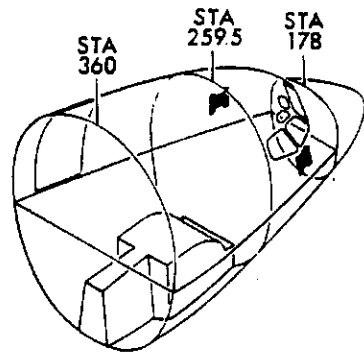 

A 1106003 REV 263

FIGURE 3. REQUIRED PLACARDS, INSTRUMENT AND CONTROL PANELS

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R R R R R	3	65-63209-1	PANEL INSTL, PILOTS AUXILIARY EQUIPMENT (LH) (REQUIRED PLACARDS ONLY) (SEE 25-1, FIG. 2J, ITEM 35 AND 25-5, FIG. 14B, ITEM 1)							5199	RF
		65-63209-1	PANEL INSTL, PILOTS AUXILIARY EQUIPMENT (LH). (REQUIRED PLACARDS ONLY) (DELETED BY MOD 7211.019-225) (SEE 25-5, FIG. 14B, ITEM 1)							0150	RF
		391-34-50-73971-001	PANEL INSTL, PILOTS AUXILIARY EQUIPMENT (LH). (REQUIRED PLACARDS ONLY) (VS2500) (65-63209-1 MODIFIED BY MOD 7211.019-225) (SEE 25-5, FIG. 14B, ITEM 1)							0150	RF
		65-63209-2	PANEL INSTL, COPILOTS AUXILIARY EQUIPMENT (RH). (REQUIRED PLACARDS ONLY) (SEE 25-1, FIG. 2J, ITEM 35 AND 25-5, FIG. 14E ITEM 1)							5199	RF
		65-63209-2	PANEL INSTL, PILOTS AUXILIARY EQUIPMENT (RH). (REQUIRED PLACARDS ONLY) (DELETED BY MOD 7211.019-225) (SEE 25-5, FIG. 14E, ITEM 1)							0150	RF
		391-34-50-73971-002	PANEL INSTL, PILOTS AUXILIARY EQUIPMENT (RH). (REQUIRED PLACARDS ONLY) (VS2500) (65-63209-2 MODIFIED BY MOD 7211.019-225) (SEE 25-5, FIG. 14E, ITEM 1)							0150	RF
	1	BAC27CEQ94	. MARKER-ALUMINUM FOIL, HEATERS AND LIGHTS INSTRUCTIONS (LH ONLY)							0150	1
	1	BAC27CEQ96	. MARKER-ALUMINUM FOIL, HEATERS AND LIGHTS INSTRUCTIONS (LH ONLY)							5199	1
	1	BAC27CEQ95	. MARKER-ALUMINUM FOIL, HEATERS AND LIGHTS INSTRUCTIONS (RH ONLY)							0150	1
	1	BAC27CEQ97	. MARKER-ALUMINUM FOIL, HEATERS AND LIGHTS INSTRUCTIONS (RH ONLY)							5199	1
		. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA									
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

RAF
NOV 21/01

11-06-3

DETAILED PARTS LIST
11-06-3
PAGE 1

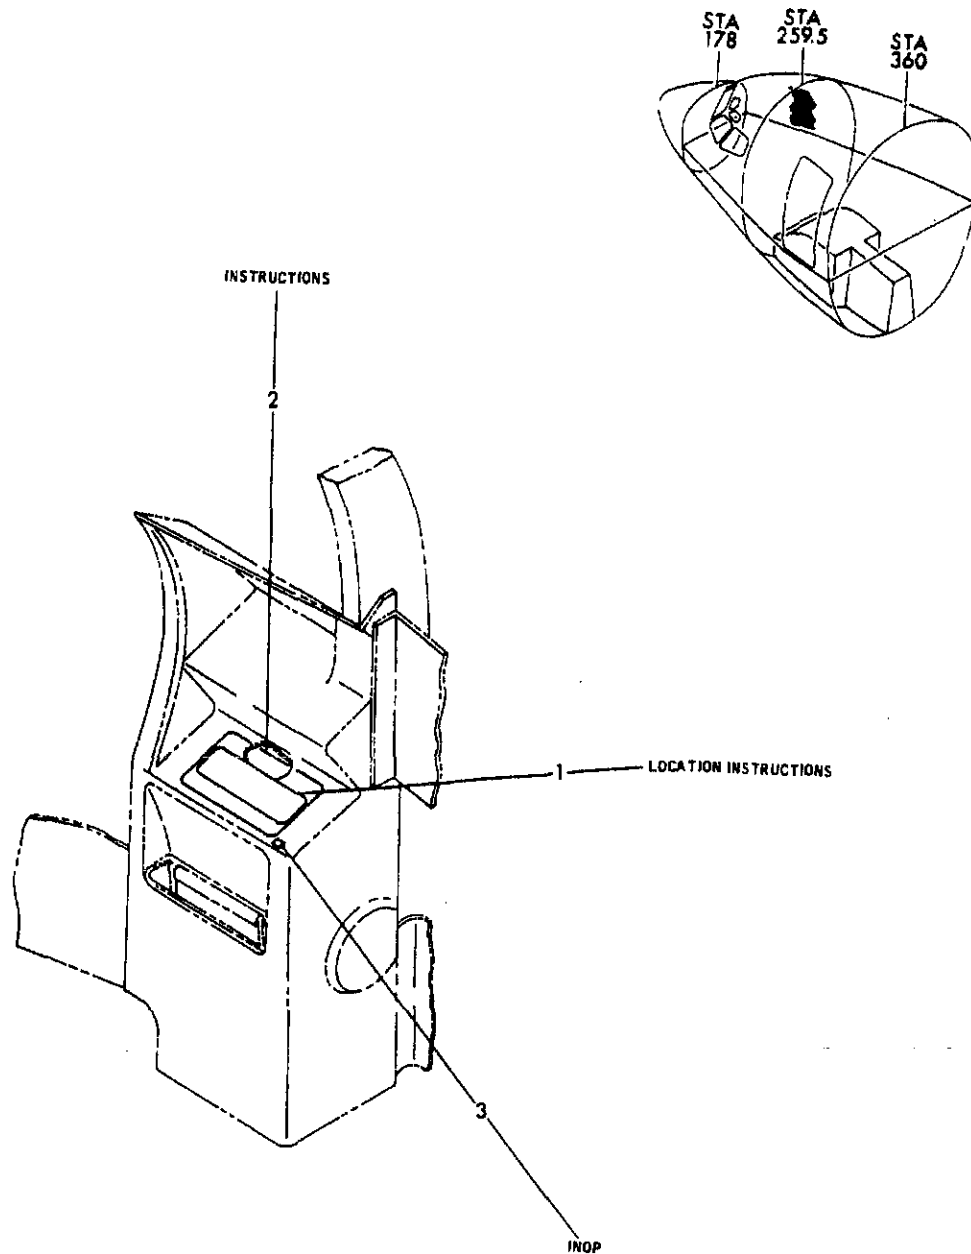 


FIGURE 3A. PANEL INSTL. P19 COPILOTS AUXILIARY EQUIPMENT (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
3A	65-64127-1	PANEL INSTL, P18 PILOTS AUXILIARY EQUIPMENT (REQUIRED .							5199	RF
4	BAC27DCC351	PLACARDS ONLY) (SEE 25-5, FIG. 14B, ITEM 3).								
		. MARKER-ALUMINUM FOIL, INOP (USED TO COVER VHF 3). . .							5199	1
		. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA . . .							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

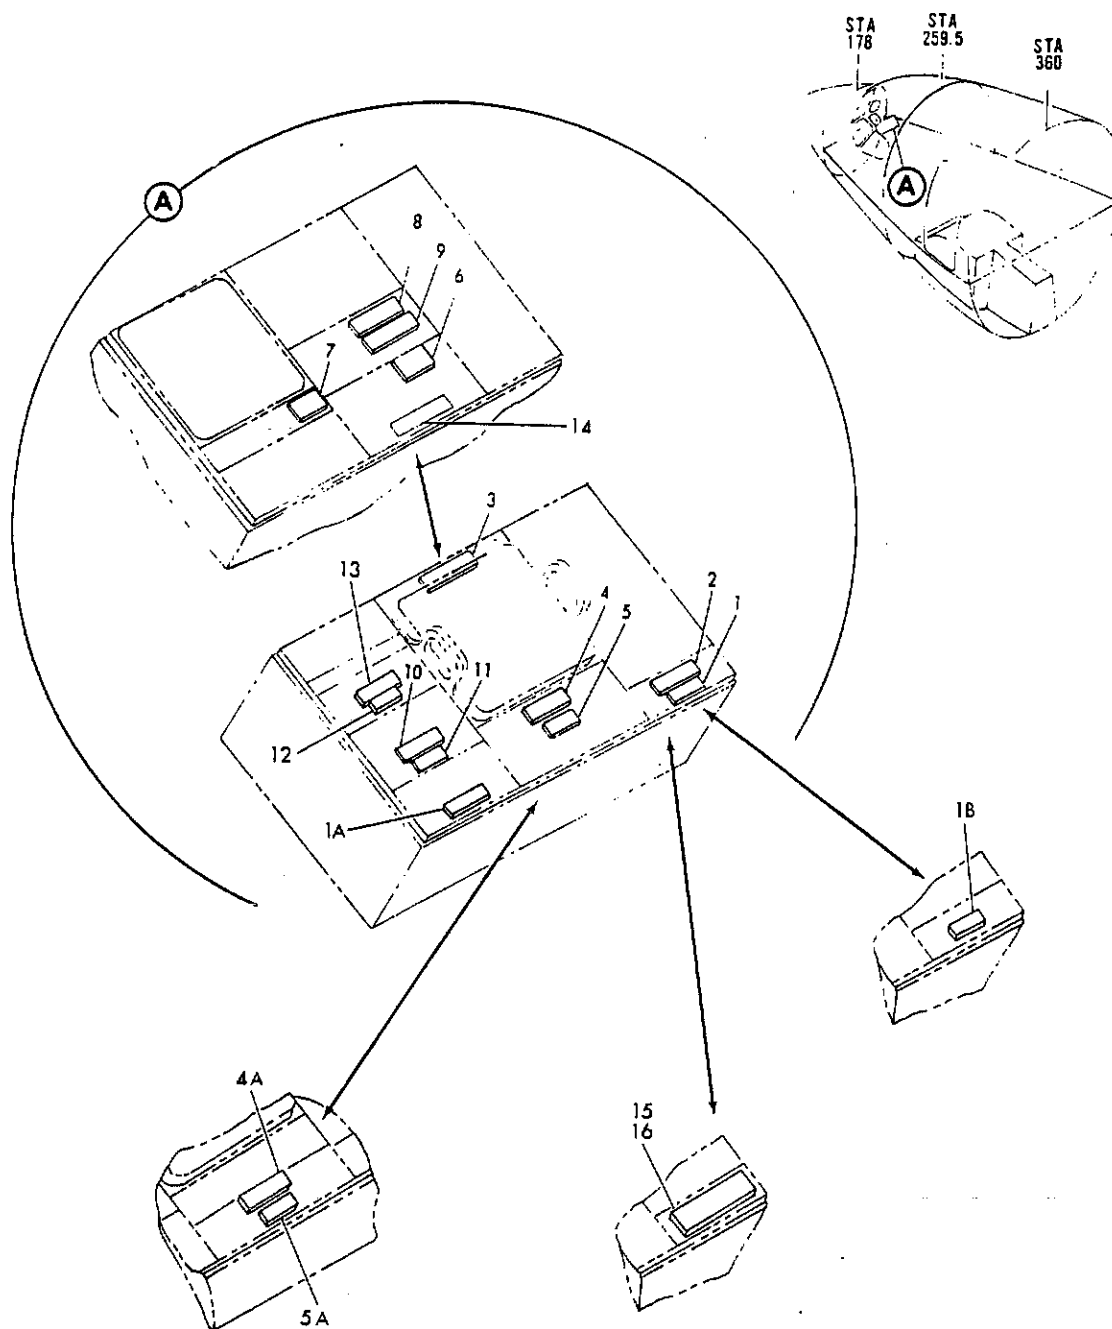 


FIGURE 4. PLACARDS INSTL, AIRPLANE LICENSE REGISTRATION AND SELCAL



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R	4	65-10365		PLACARD INSTL, AIRPLANE LICENSE REGISTRATION AND SELCAL (SEE 25-1, FIG. 1, ITEM 136, 25-1, FIG. 1B, ITEM 120, 25-1, FIG. 1C, ITEM 138, 25-1, FIG. 1D, ITEM 134, 25-1, FIG. 1E, ITEM 124, 25-1, FIG. 1F, ITEM 101, 25-1, FIG. 1G, ITEM 107, 25-1, FIG. 1H, ITEM 125, 25-1, FIG. 1J, ITEM 128, 25-1, FIG. 1K, ITEM 120, 25-1, FIG. 2B, ITEM 123, 25-1, FIG. 2C, ITEM 112, 25-1, FIG. 2D, ITEM 94, 25-1, FIG. 2E, ITEM 67A, 25-1, FIG. 2G, ITEM 115 AND 25-1, FIG. 2H, ITEM 121)		RF
	3	65-10365-1		. PLACARD, AIRPLANE LICENSE REGISTRATION NUMBER	0150	1
	4	65-10365-2		. PLACARD, AIRPLANE SELCAL CODE	0150	1
	4A	65-10365-29		. PLACARD, AIRPLANE LICENSE REGISTRATION NUMBER	5199	1
	5A	65-10365-30		. PLACARD, AIRPLANE SELCAL CODE	5199	1
	20	732-0013				1
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

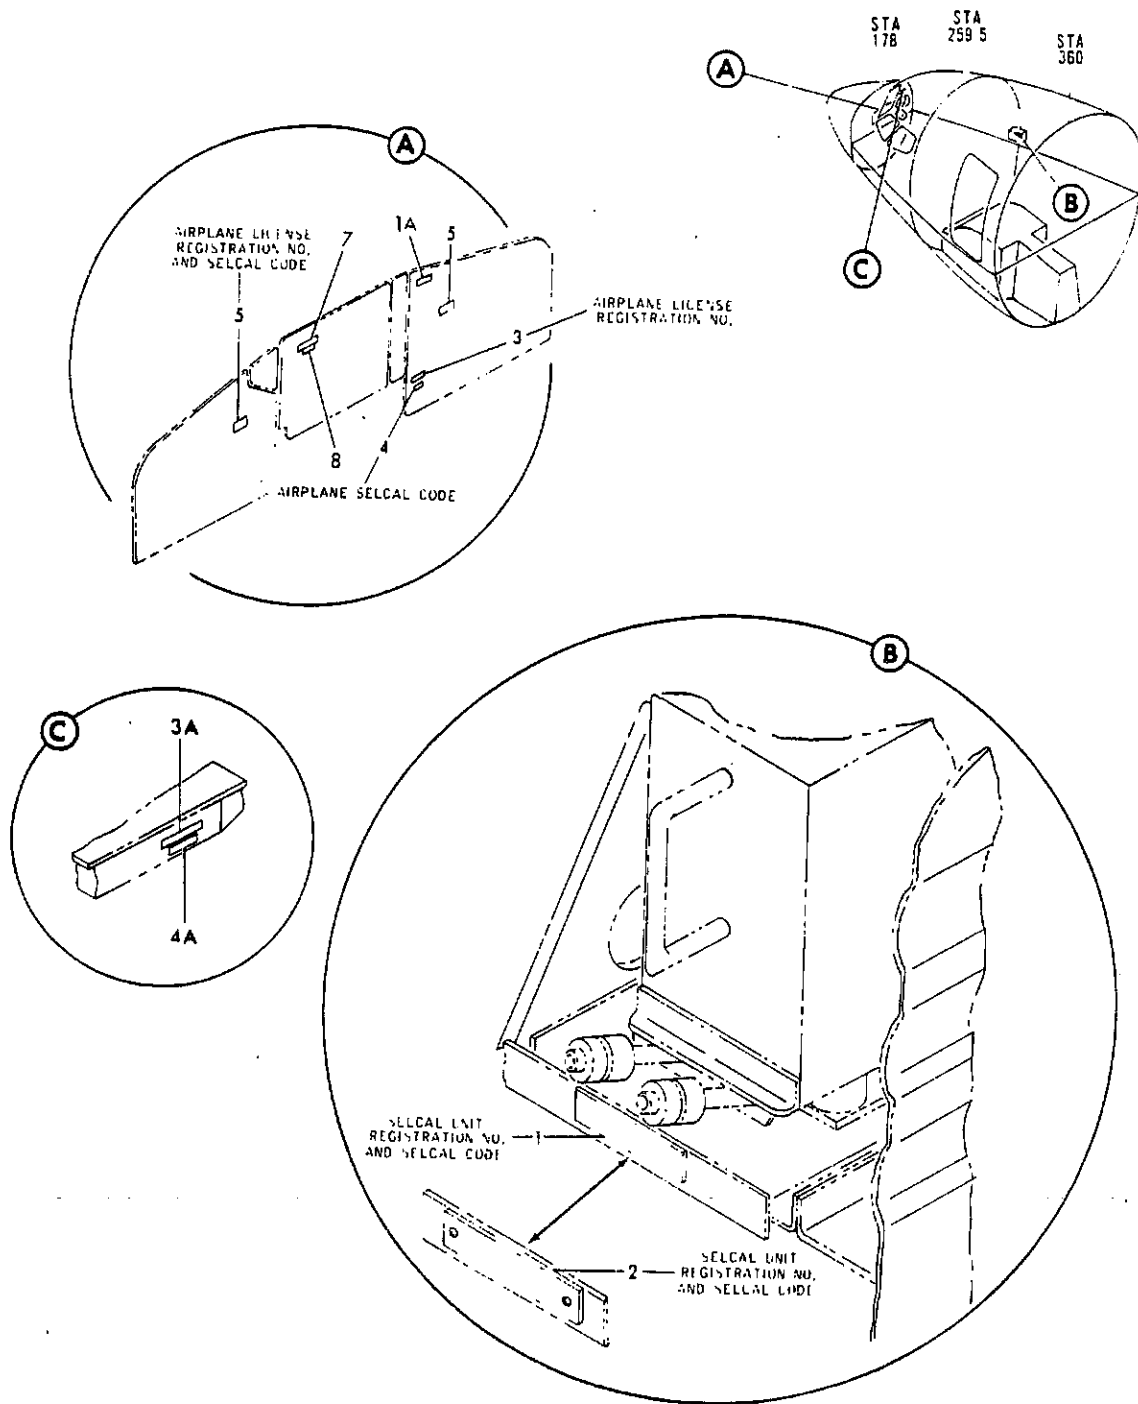 


FIGURE 5. PLACARD INSTL, AIRPLANE REGISTRATION AND SELCAL



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
5	65-10365-9	PLACARD INSTL, AIRPLANE LICENSE REGISTRATION AND SELCAL (SEE 25-1, FIG. 1, ITEM 136A, 25-1, FIG. 1B, ITEM 121, 25-1, FIG. 1C, ITEM 139, 25-1, FIG. 1D, ITEM 135, 25-1, FIG. 1E, ITEM 124, 25-1, FIG. 1F, ITEM 102, 25-1, FIG. 1G, ITEM 108, 25-1, FIG. 1H, ITEM 126, 25-1, FIG. 1J, ITEM 129, 25-1, FIG. 1K, ITEM 121, 25-1, FIG. 2B, ITEM 124, 25-1, FIG. 2C, ITEM 113, 25-1, FIG. 2D, ITEM 95, 25-1, FIG. 2E, ITEM 67, 25-1, FIG. 2G, ITEM 116 AND 25-1, FIG. 2H, ITEM 121)								RF
1	65-10365-2	. PLACARD, AIRPLANE SELCAL CODE							0150	1
1	65-10365-2	. PLACARD, AIRPLANE SELCAL CODE (DELETED BY SVA E.O. . 81212)							5199	1
1A	PLACARD	. PLACARD, SELCAL CODE CL-HJ (V0563B) (ADDED BY SVA . . E.O. 81212)							5151	1
1A	PLACARD	. PLACARD, SELCAL CODE CM-HJ (V0563B) (ADDED BY SVA . . E.O. 81212)							5299	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

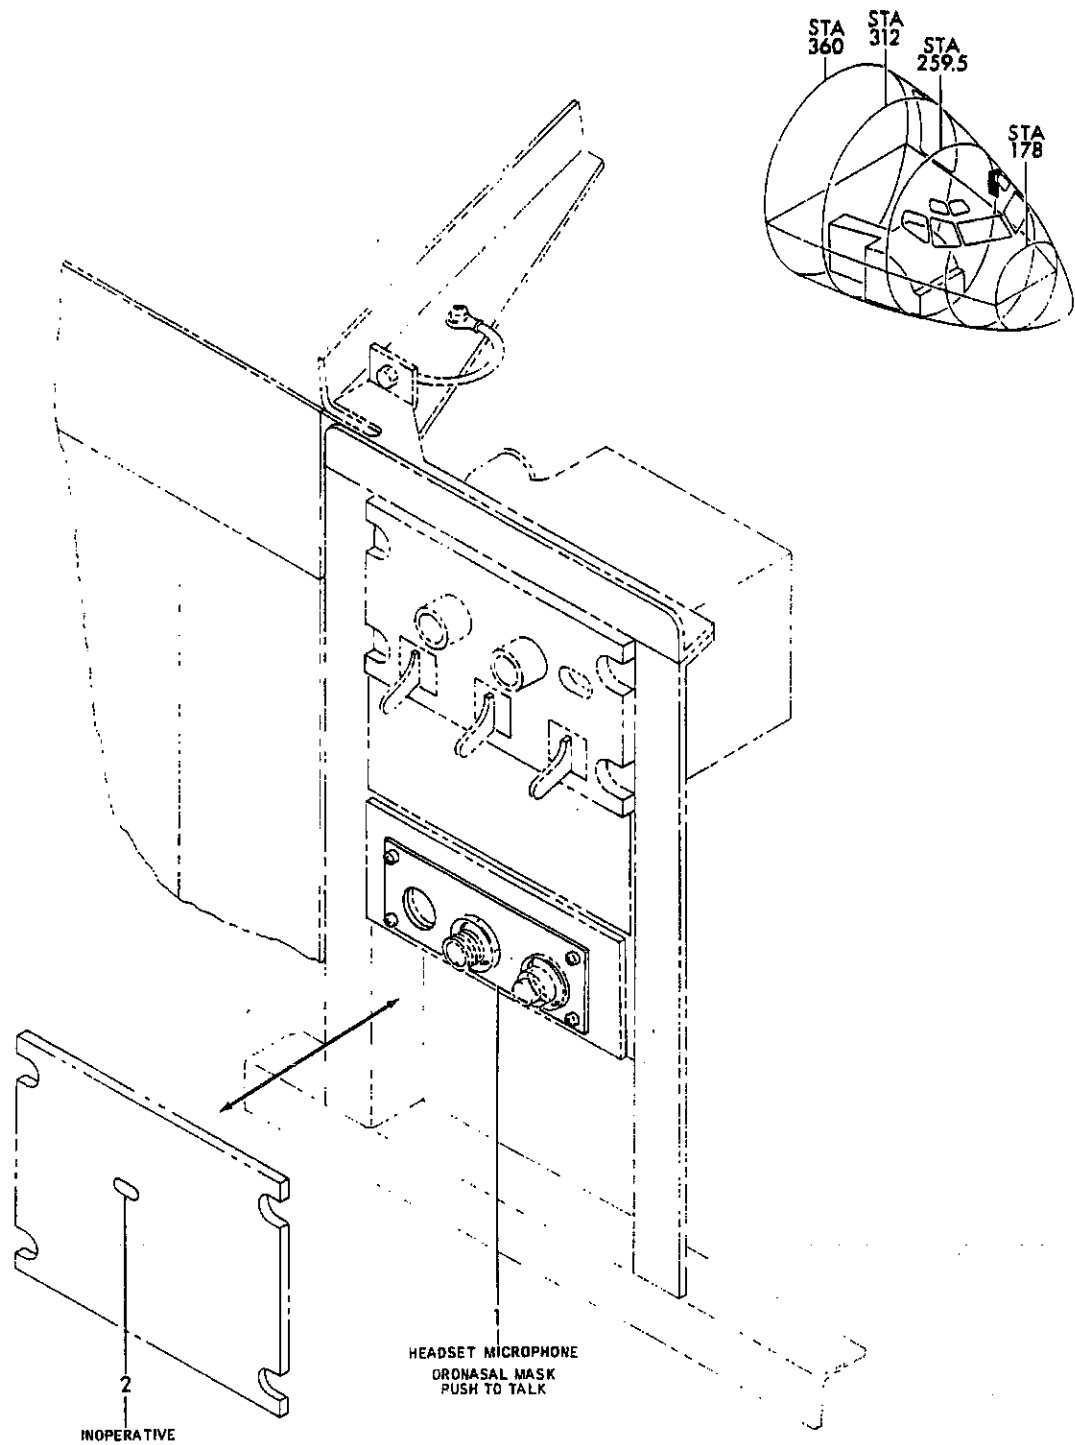 


FIGURE 7. PANEL INSTL, OBSERVER AUXILIARY EQUIPMENT (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
7	50-11388	PANEL INSTL, OBSERVER AUXILIARY EQUIPMENT (REQUIRED . . . PLACARDS ONLY) (SEE 25-1, FIG. 1F, ITEM 2, 25-1, FIG. 2B, ITEM 4, 25-1, FIG. 2D, ITEM 2, 25-1, FIG. 2E, ITEM 89 AND 25-1, FIG. 2F, ITEM 4)							5199	RF
2	BAC27DCC351	. MARKER-ALUMINUM FOIL, INOP.							5199	1
		. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

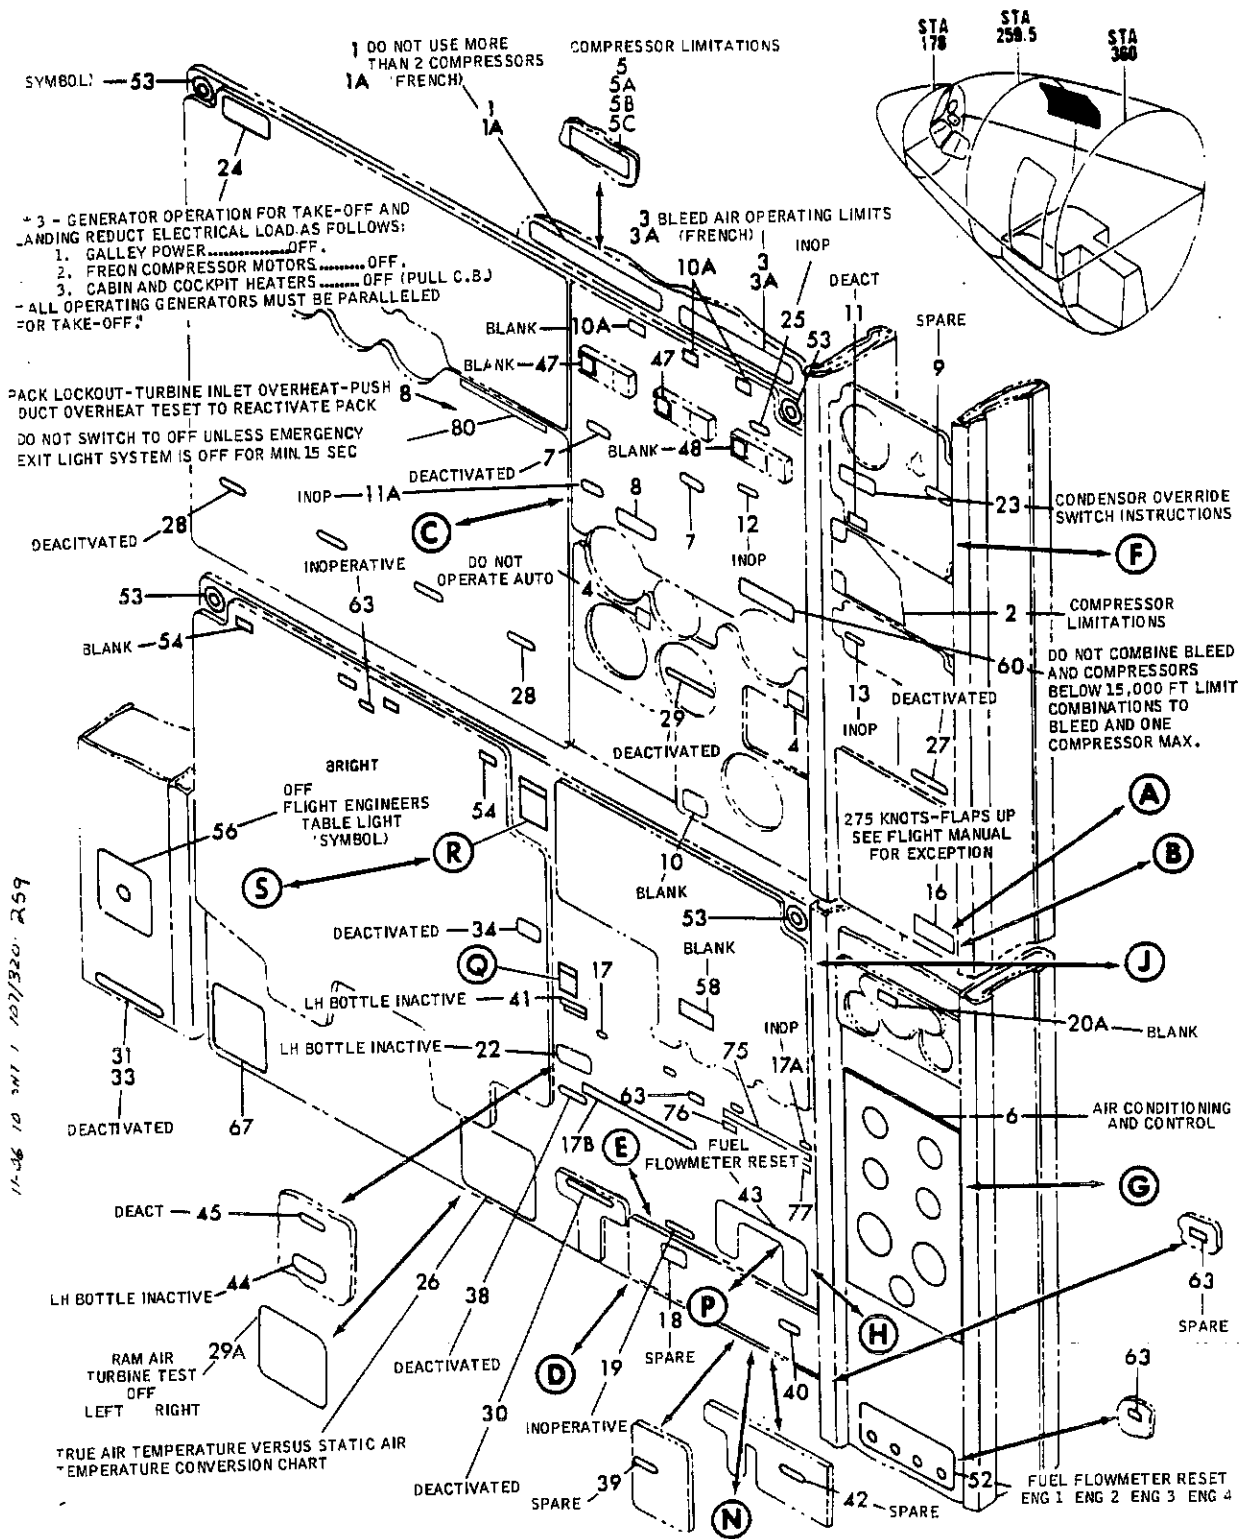 


FIGURE 10. PANEL INSTL, FLIGHT ENGINEERS (REQUIRED PLACARDS ONLY) (SHEET 1)

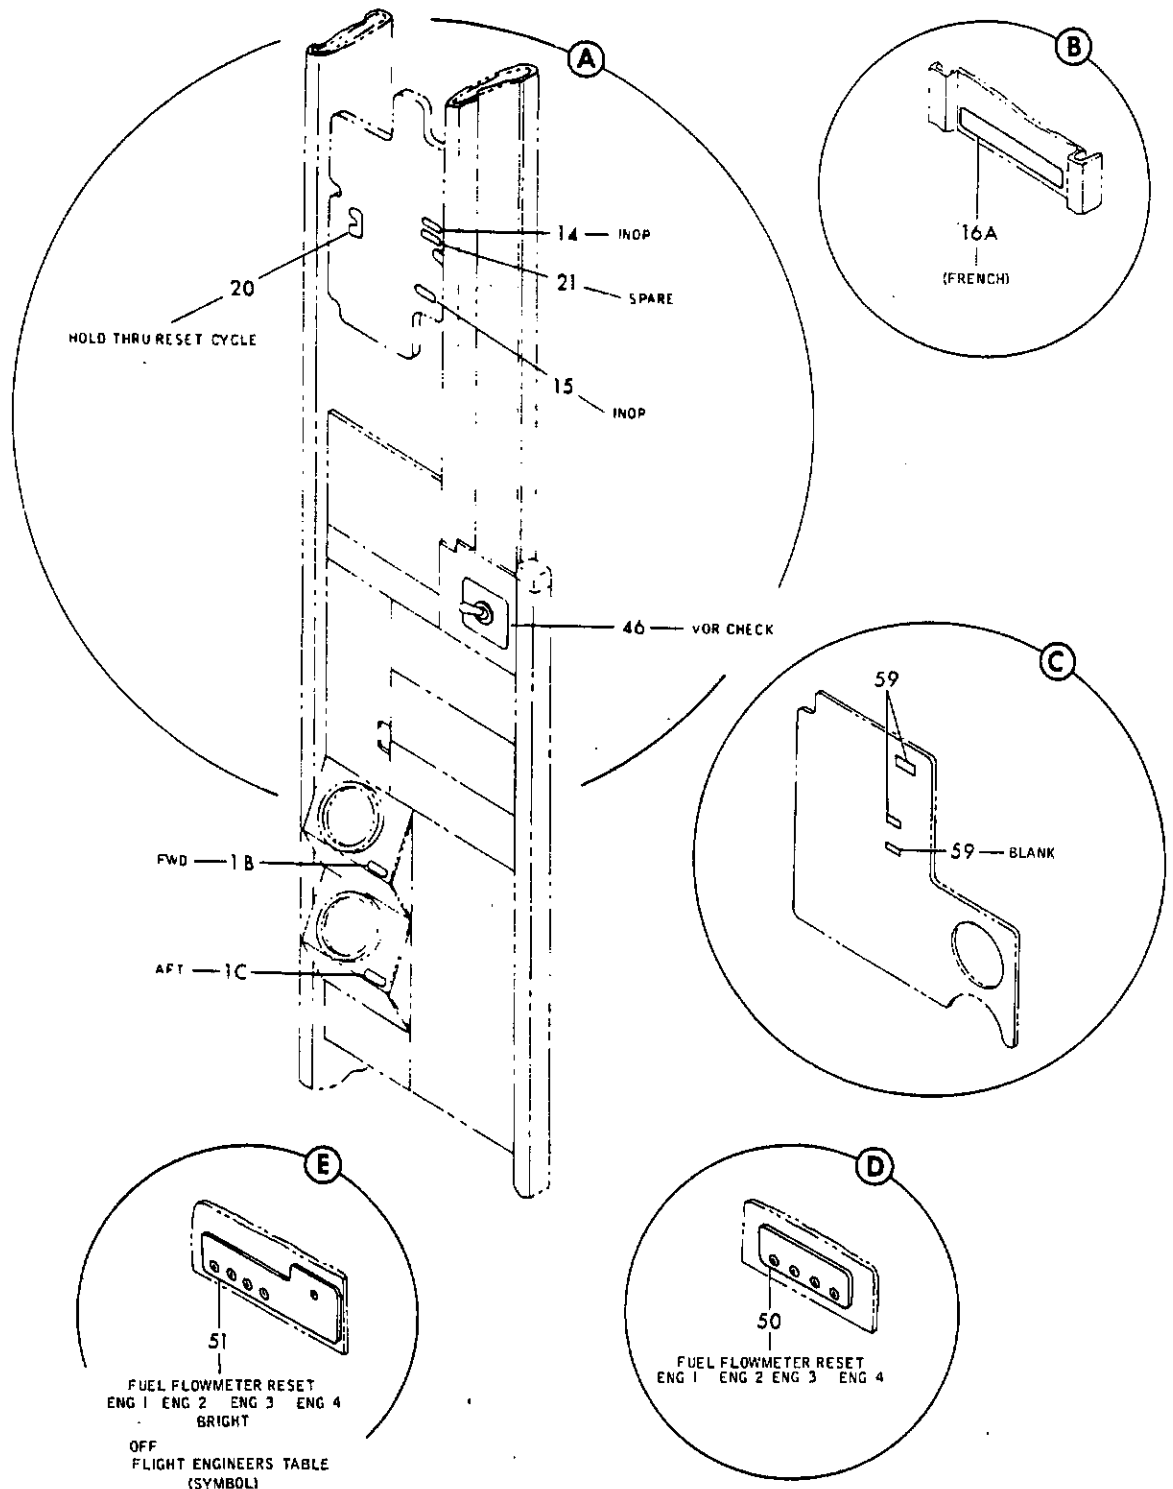 


FIGURE 10. PANEL INSTL, FLIGHT ENGINEERS (REQUIRED PLACARDS ONLY) (SHEET 2)

NOV 21/90

11-06-10

DETAILED PARTS LIST
11-06-10
PAGE 1


 
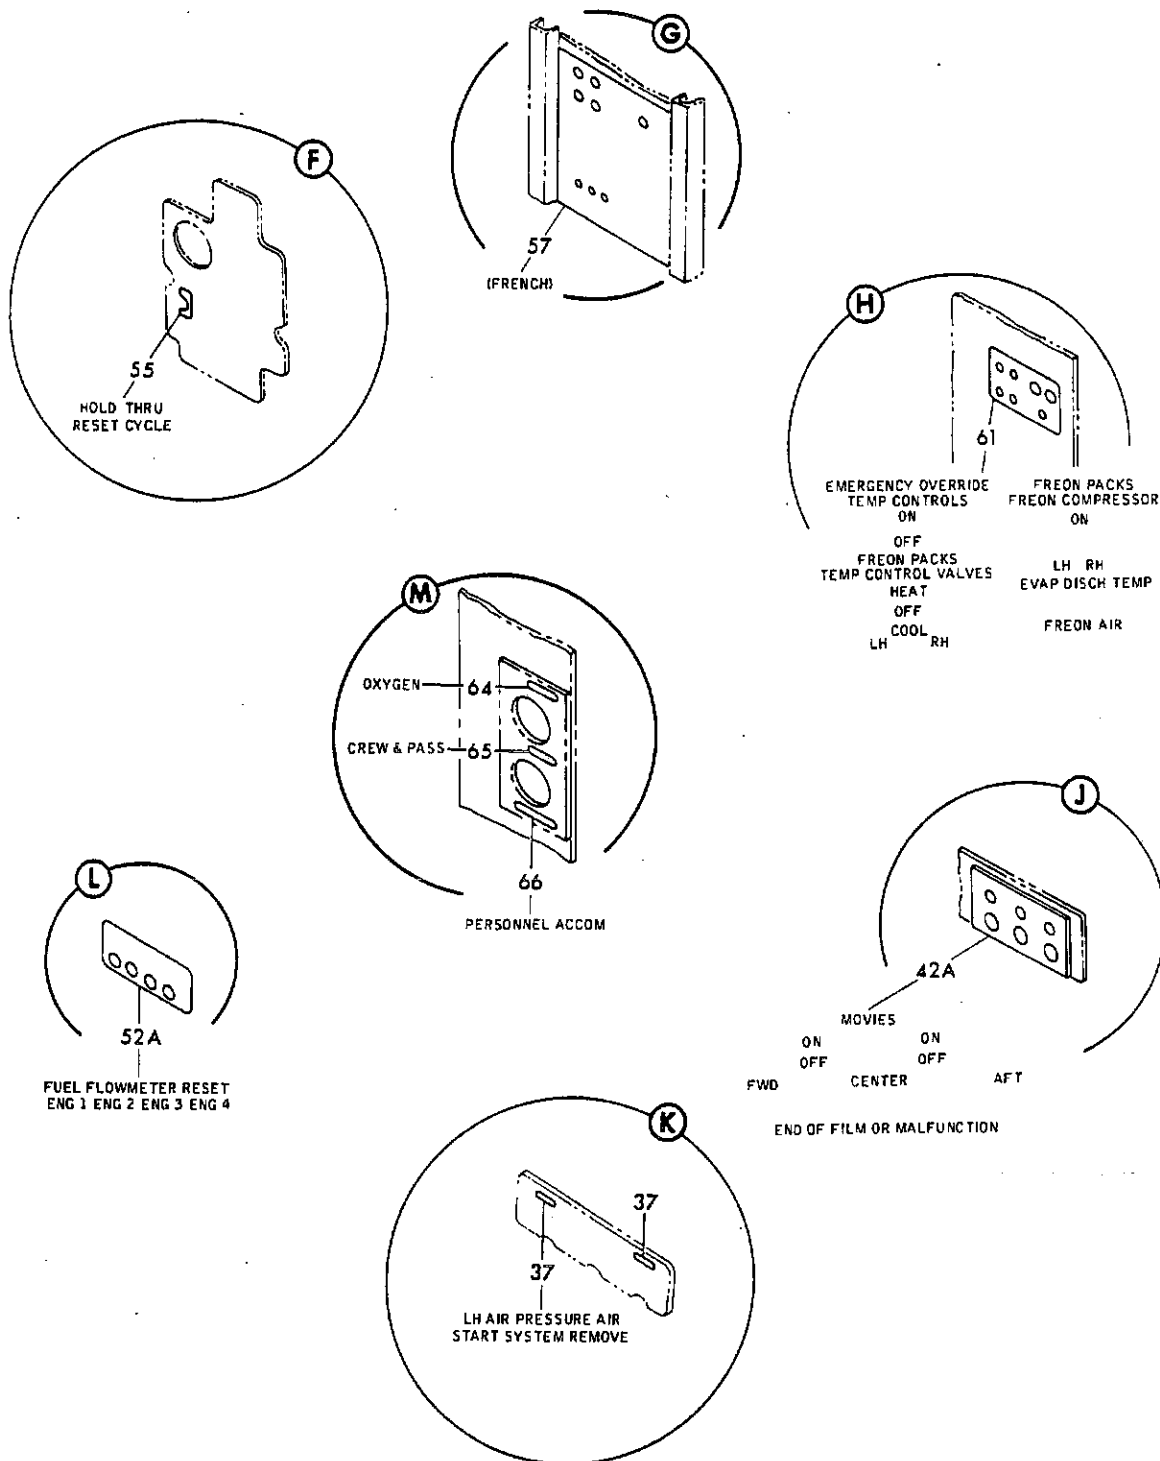 


FIGURE 10. PANEL INSTL, FLIGHT ENGINEERS (REQUIRED PLACARDS ONLY) (SHEET 3)

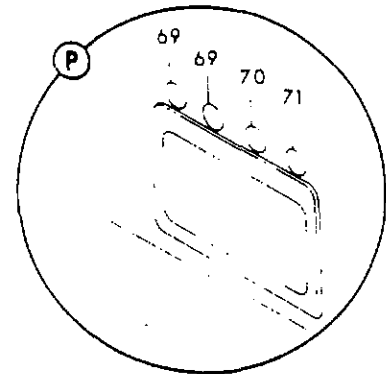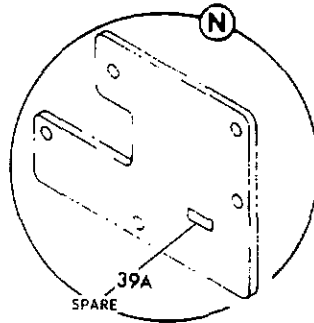 

S

BOUNDARY SPEED (VREF) I.A.S. - KTS		
WEIGHT - LBS	30 FLAPS	40 FLAPS
250000	137	139
240000	135	136
230000	131	132
220000	129	130
210000	126	127
200000	123	124
190000	119	121
180000	116	118
170000	113	114
160000	110	111

FOR HIGHER
WEIGHTS USE
V2 - 10 KTS

79

R

50' FLAPS V REF	
WEIGHT	I.A.S.
250	137
240	134
230	131
220	129
210	126
200	123
190	129
180	116
170	113
160	110

*1000 LBS

FOR HIGHER WTS
USE V2-10 KTS

78

Q

V ₂ SPEEDS 140' FLAPS 707/720		BOUNDARY SPEEDS 50' FLAPS V REF	
WEIGHT x1000 LBS	I AS	WEIGHT x1000 LBS	I AS
320	156	250	137
310	153	240	134
300	161	230	131
290	158	220	129
280	155	210	126
270	153	200	123
260	150	190	119
250	148	180	116
240	145	170	113
230	142	160	110
220	139		
210	136		
200	133		
190	130		

FOR HIGHER
WEIGHTS USE
V₂ - 10 KNOTS

72
74

FIGURE 10. PANEL INSTL. FLIGHT ENGINEERS (REQUIRED PLACARDS ONLY) (SHEET 4)

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 10	65-58398-1		PANEL INSTL, FLIGHT ENGINEERS LOWER (REQUIRED PLACARDS ONLY) (SEE 25-1, FIG. 1F, ITEM 5, 25-1, FIG. 1J, ITEM 8, 25-1, FIG. 1K, ITEM 5 AND 25-1, FIG. 2E, ITEM 83)	0150	RF
R					
R					
R	65-58956-1		PANEL INSTL, FLIGHT ENGINEERS LOWER (REQUIRED PLACARDS ONLY) (SEE 25-1, FIG. 1B, ITEM 8, 25-1, FIG. 1F, ITEM 6, 25-1, FIG. 2D ITEM 6 AND 25-1, FIG. 2E, ITEM 83)	5199	RF
R					
R					
R	39A BAC27CEQ21		• SCOTCH-CAL, SPARE	5199	1
R	40 BAC27CEQ21		• SCOTCH-CAL, SPARE	5199	1
R			• UNIT ASSY, LOWER (REQUIRED PLACARDS ONLY)	0150	RF
R	50 66-16077-1		• PLACARD, FUEL FLOWMETER RESET	0150	1
R	68 BACM9N1FA		• MARKER, 1	5199	1
R	69 BACM9N1FB		• MARKER, 2	5199	1
R	70 BACM9N1FC		• MARKER, 3	5199	1
R	71 BACM9N1FD		• MARKER, 4	5199	1
R	72 80928-4		• PLACARD, VREF (V0563B) (ADDED BY SVA E.O. 80928 AND DELETED BY SVA E.O. 82447)	5199	1
R					
R	78 82447-1		• PLACARD, VREF (50 DEG FLAPS) (V0563B) (ADDED AND DELETED BY SVA E.O. 82447)	5199	1
R					
R	79 82447-5		• PLACARD, VREF (50/40 DEG FLAPS) (V0563B) (ADDED BY SVA E.O. 82447)	5199	1
R			• FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

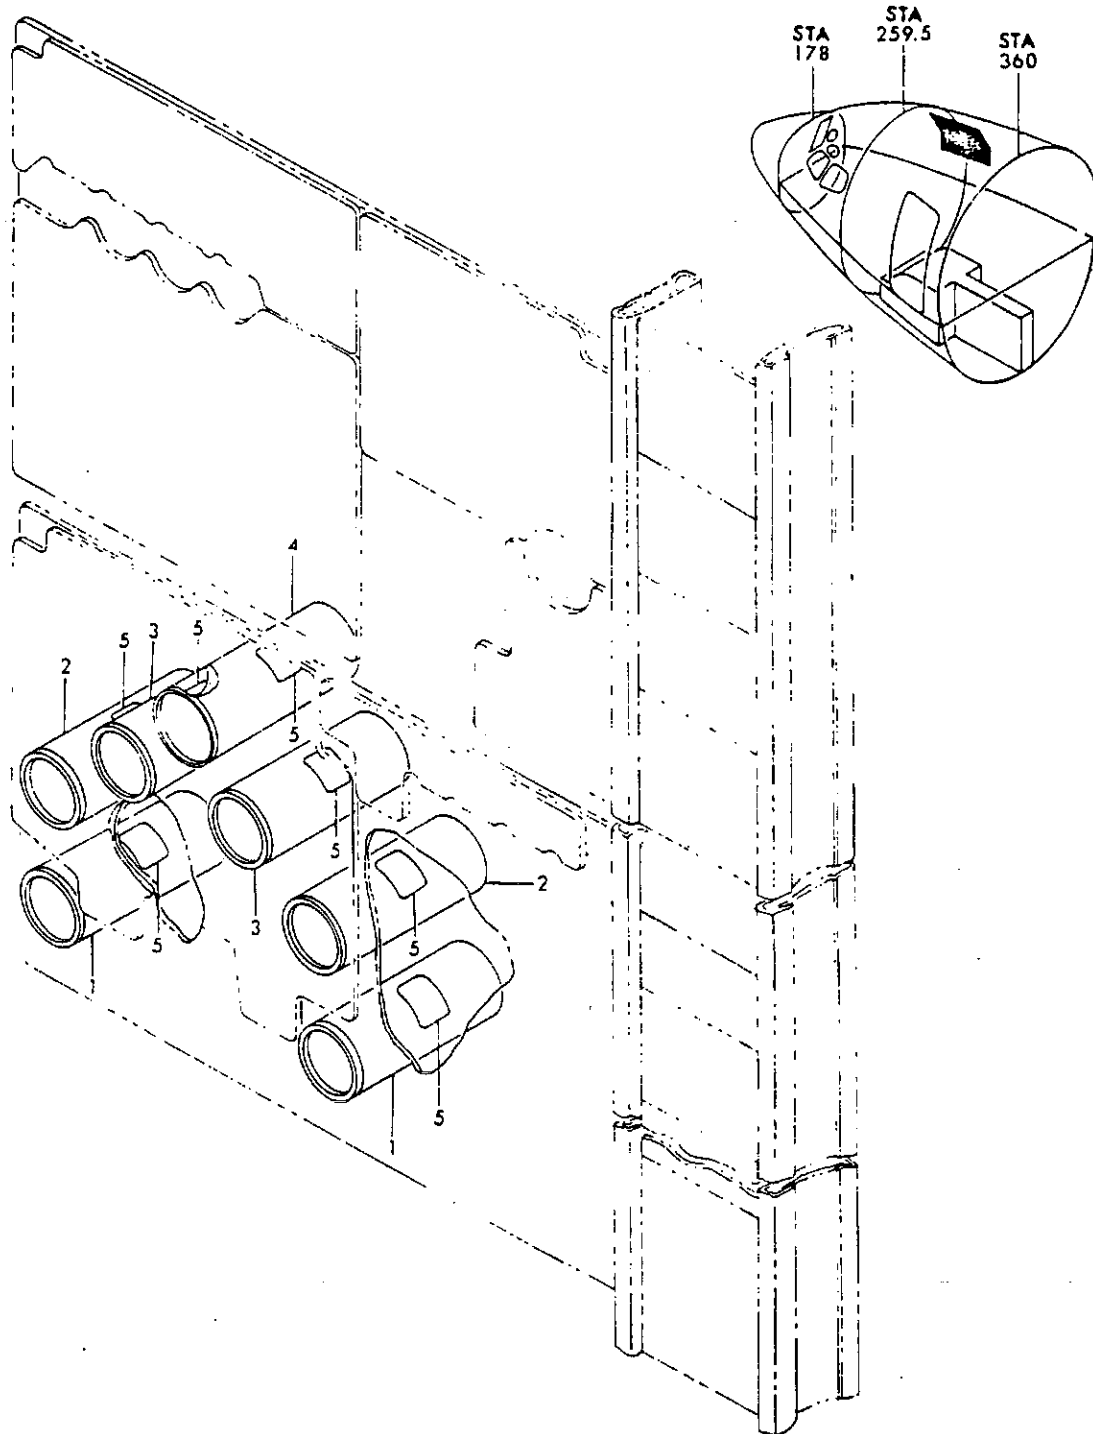 


FIGURE 10A. INDICATOR ASSY, FUEL QUANTITY (REQUIRED PLACARDS ONLY)

DETAILED PARTS LIST
11-06-10A
PAGE 0

11-06-10A

NDV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
10A	1 65C13862-1	INDICATOR ASSY, FUEL QUANTITY (REQUIRED PLACARDS ONLY) (SEE 28-5, FIG. 67, ITEM 16)	5199	RF
	2 65C13862-2	INDICATOR ASSY, FUEL QUANTITY (REQUIRED PLACARDS ONLY) (SEE 28-5, FIG. 67, ITEM 17)	5199	RF
	3 65C13862-3	INDICATOR ASSY, FUEL QUANTITY (REQUIRED PLACARDS ONLY) (SEE 28-5, FIG. 67, ITEM 18)	5199	RF
	4 65C13862-4	INDICATOR ASSY, FUEL QUANTITY (REQUIRED PLACARDS ONLY) (SEE 28-5, FIG. 67, ITEM 19)	5199	RF
	5 BAC27CFS48	. MARKER-ALUMINUM FOIL.	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

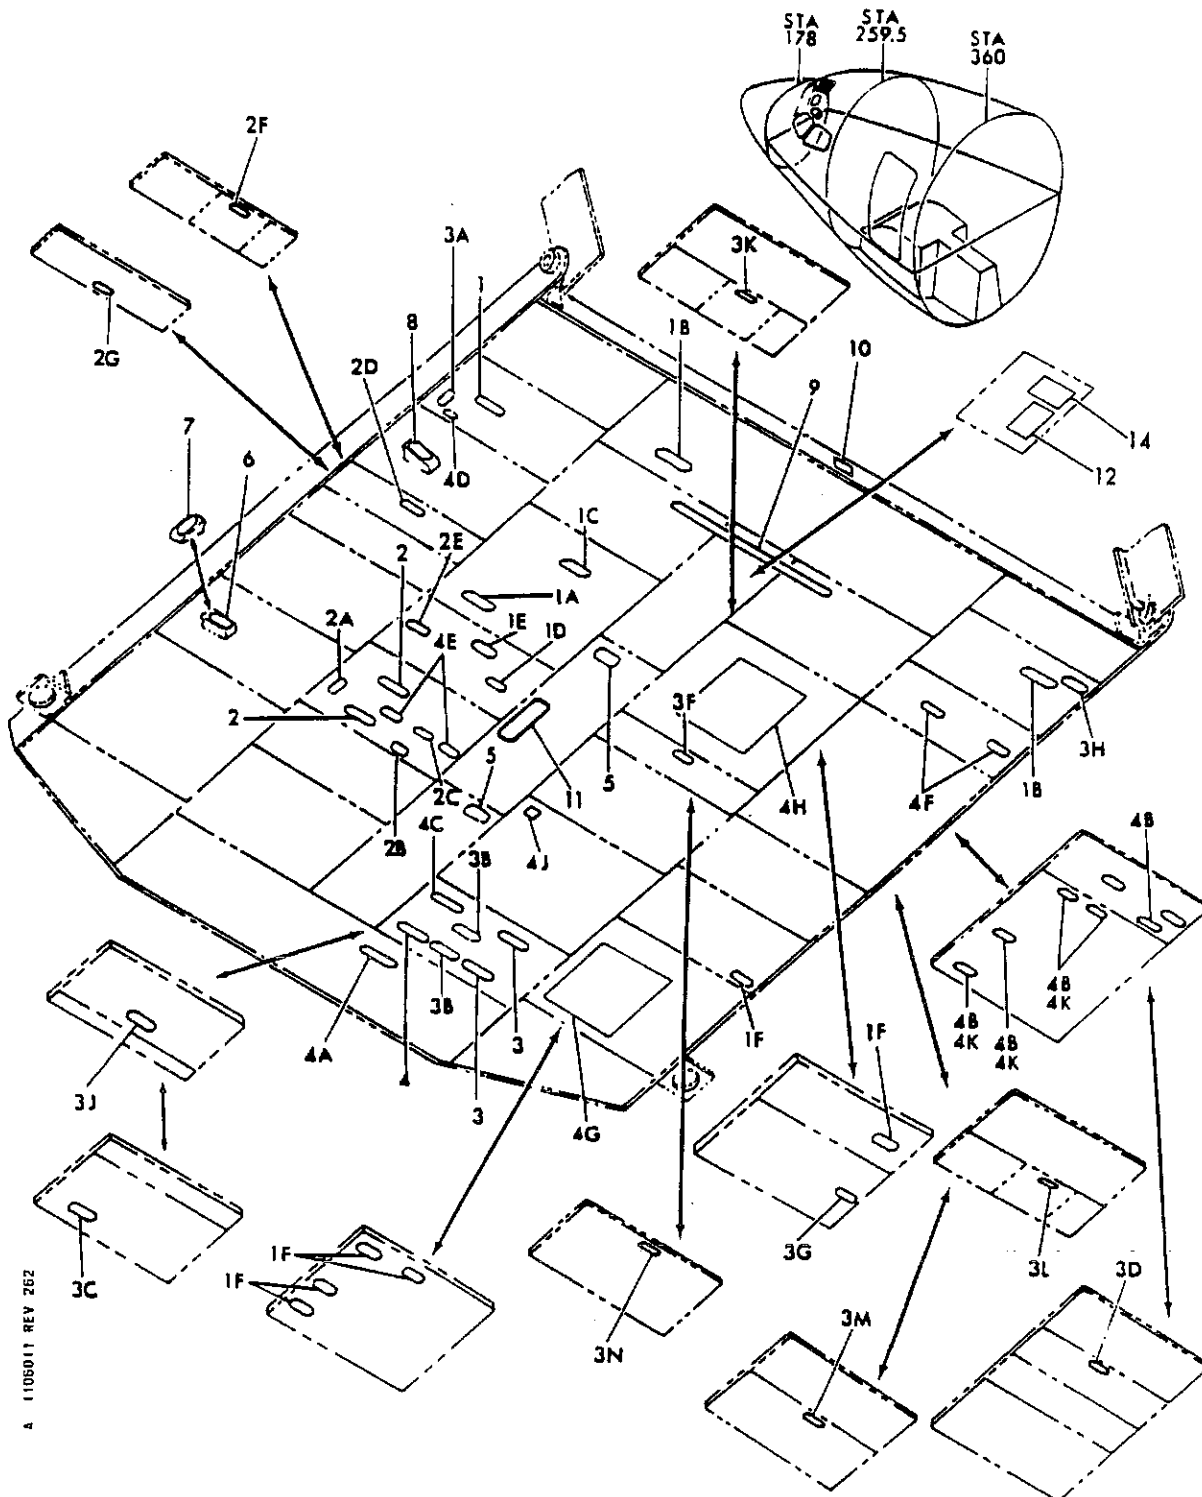 


FIGURE 11. MODULE INSTL, P13 PILOTS OVER HEAD (SHEET 1)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
11	65-58786-1	MODULE INSTL, P13 PILOTS OVERHEAD (REQUIRED PLACARDS. . . ONLY) (SEE 25-1, FIG. 1B, ITEM 9, 25-1, FIG. 1F, ITEM 8, 25-1, FIG. 1K, ITEM 6, 25-1, FIG. 2D, ITEM 7 AND 25-1, FIG. 2E, ITEM 92)	0150	RF
	65-86177-2	MODULE INSTL, P13 PILOTS OVERHEAD (VARIABLE DWG; 65-86177-5011) (REQUIRED PLACARDS ONLY) (SEE 25-1, FIG. 2E, ITEM 92 AND 25-1, FIG. 180H, ITEM 108)	5199	RF
2	BAC27DCC351	. MARKER-ALUMINUM FOIL, INOP.	5199	2
4A	BAC27CEQ210	. DECAL, GROUND ONLY.	5199	1
4A	BAC27CEQ210	. MARKER-ALUMINUM FOIL, GRD ONLY (ADDED BY SB 3084)	0150	1
4H	81264-2	. PLACARD, (V0563B) (ADDED BY SVA E.O. 81264)	5199	1
	69-52340-1	. MODULE ASSY, P13E SPOILER AND WINDSHIELD WIPER. (REQUIRED PLACARDS ONLY)	0150	RF
	69-46111-4	. MODULE ASSY, P13E RUDDER AND SPOILER (REQUIRED. PLACARDS ONLY)	5199	RF
6	BACM10S10-35D	. . MARKER-ALUMINUM FOIL, SYMBOL.		1
12	QC6000B-1	. . PLACARD, U/C AUDIO CHECK (VZ0268) (ADDED BY RAF MOD 7211.019-159)	0150	1
14	QE33879-1	. PLACARD, (VZ0268) (ADDED BY RAF MOD 7211.019-159) FOR REFERENCE TO OTHER MODULE DETAILS, SEE NHA.	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE


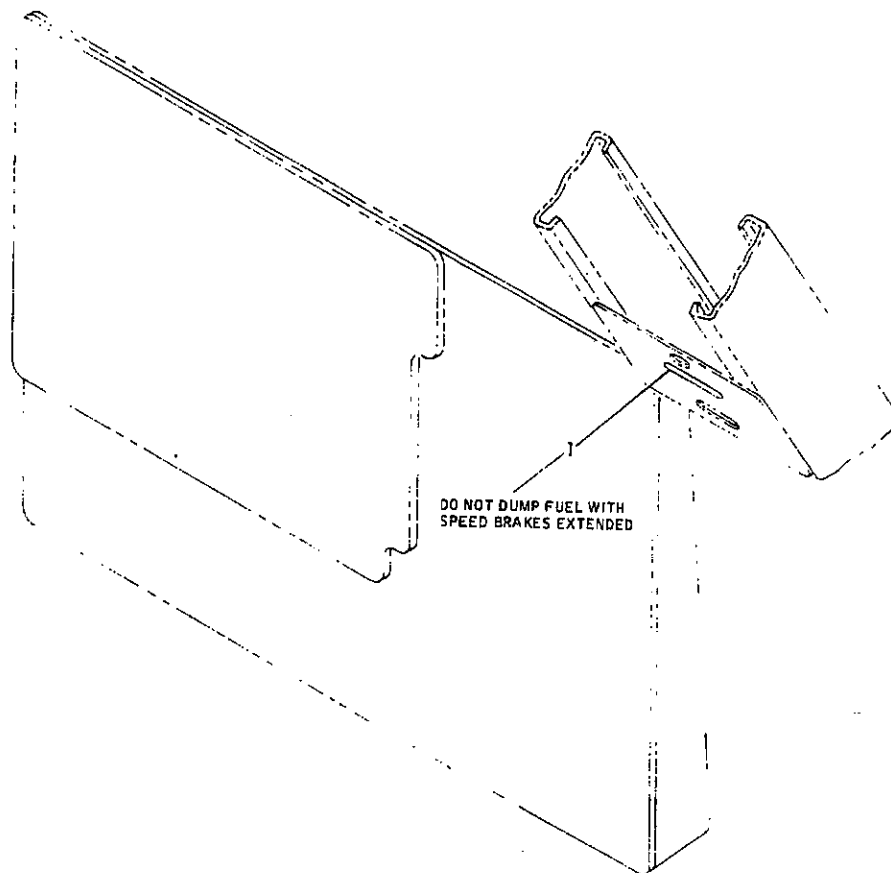 


FIGURE 12. PLACARD INSTL, FLIGHT ENGINEER'S FUEL DUMP

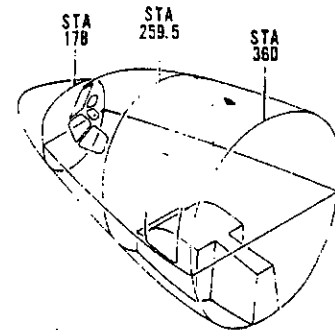 

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
12	69-33358-1	PLACARD INSTL, FLIGHT ENGINEERS FUEL DUMP (SEE 25-1, . . FIG. 1, ITEM 133A, 25-1, FIG. 1B, ITEM 114, 25-1, FIG. 1C, ITEM 130, 25-1, FIG. 1D, ITEM 127, 25-1, FIG. 1E, ITEM 122, 25-1, FIG. 1F, ITEM 100, 25-1, FIG. 1G, ITEM 105, 25-1, FIG. 1H, ITEM 120, 25-1, FIG. 1J, ITEM 124, 25-1, FIG. 1K, ITEM 118, 25-1, FIG. 2B, ITEM 118, 25-1, FIG. 2C, ITEM 111, 25-1, FIG. 2D, ITEM 93, 25-1, FIG. 2E, ITEM 66, 25-1, FIG. 2F, ITEM 111, 25-1, FIG. 2G, ITEM 112 AND 25-1, FIG. 2H, ITEM 120)								RF
1	65-40583-7	. SCOTCH-CAL, FUEL DUMP								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

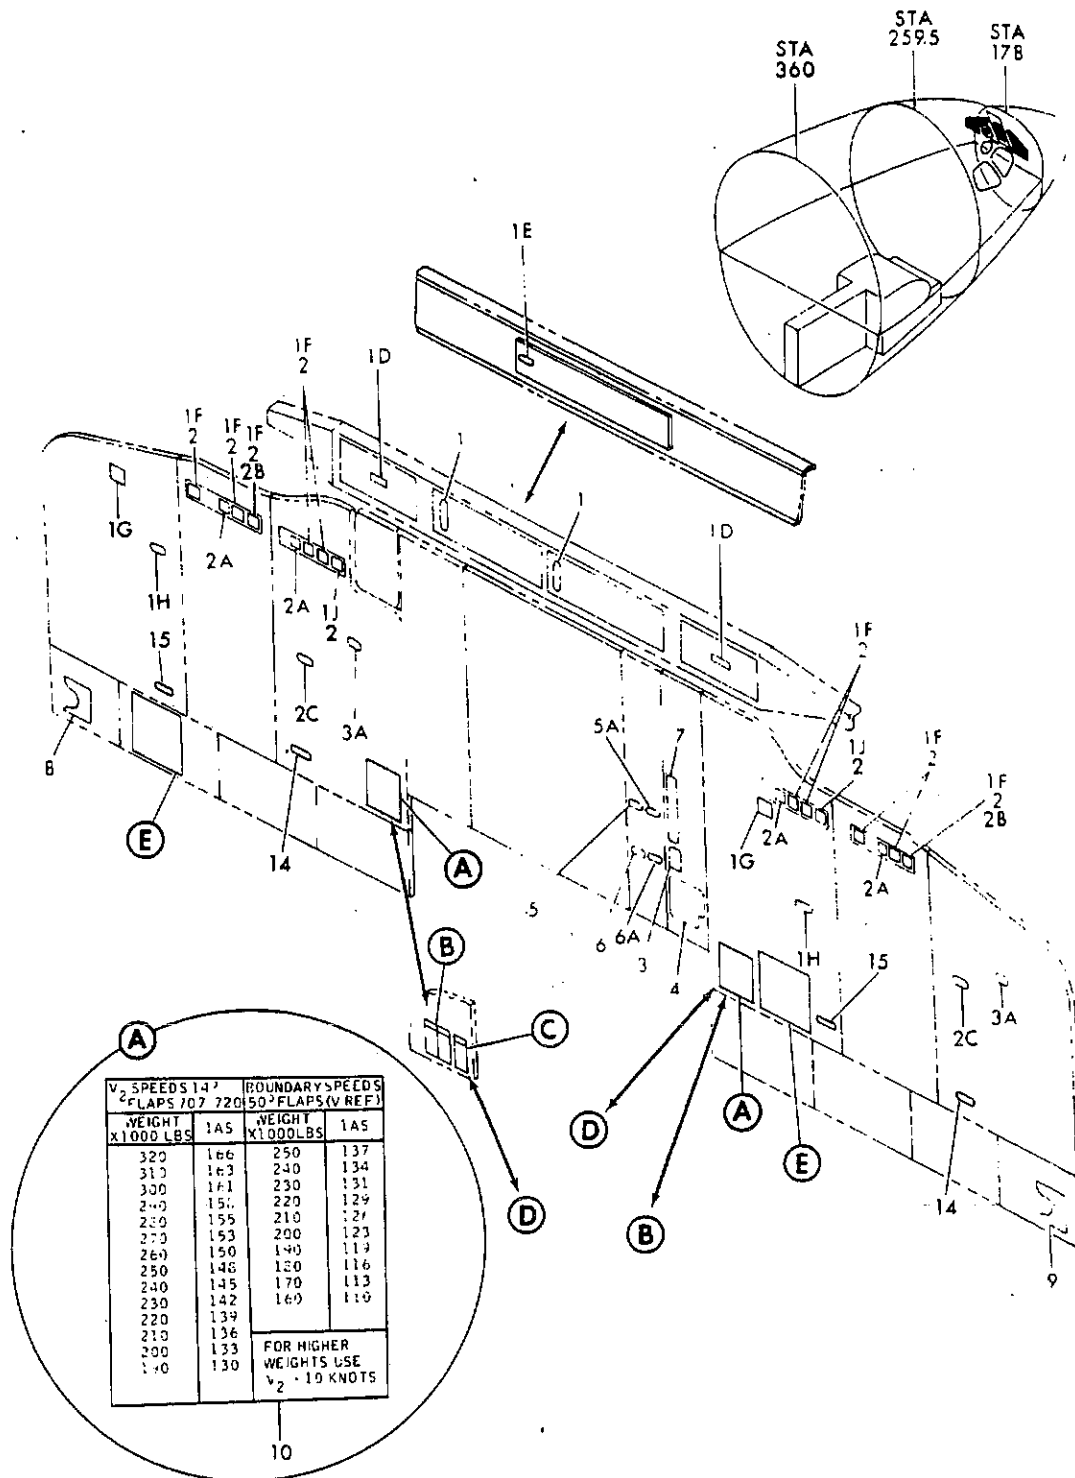 


FIGURE 13A. MODULE INSTL, CAPTAINS AND FIRST OFFICERS
(INSTRUMENT PANELS) (REQUIRED PLACARDS ONLY) (SHEET 1)

B

V ₂ SPEEDS 14 FLAPS		BOUNDARY SPEEDS 50 FLAPS (V REF)	
WEIGHT X1000 LBS	IAS	WEIGHT X1000 LBS	IAS
320	166	250	137
310	163	240	134
300	161	230	131
290	158	220	128
280	155	210	125
270	153	200	122
260	150	190	119
250	147	180	116
240	145	170	113
230	142	160	111
220	139		
210	136		
200	133		
190	130		

FOR HIGHER WEIGHTS USE V₂ - 10 KNOTS

11

C

V ₂ (IAS) V REF	
WEIGHT	IAS
280	147
270	144
260	141
250	138
240	135
230	132
220	129
210	127
200	124
190	121
180	118
170	114
160	111

12

E

B707-368C			
V ₂ SPEEDS 14 FLAPS		BOUNDARY SPEEDS 50 FLAPS V REF	
WEIGHT X1000 LBS	IAS	WEIGHT X1000 LBS	IAS
320	166	250	137
310	163	240	134
300	161	230	131
290	158	220	128
280	155	210	125
270	153	200	122
260	150	190	119
250	147	180	116
240	145	170	113
230	142	160	111
220	139		
210	136		
200	133		
190	130		

FOR HIGHER WEIGHTS USE V₂ - 10 KNOTS

10A

D

V ₂ SPEED 14 FLAPS		BOUNDARY SPEEDS V REF 50 FLAPS	
WEIGHT - LBS	IAS - KTS.	WEIGHT - LBS	IAS - KTS.
320000	166	250000	137
310000	163	240000	134
300000	161	230000	131
290000	158	220000	128
280000	155	210000	125
270000	153	200000	122
260000	150	190000	119
250000	147	180000	116
240000	145	170000	113
230000	142	160000	111
220000	139		
210000	136		
200000	133		
190000	130		

FOR HIGHER WEIGHTS USE V₂ - 10 KTS.

13

FIGURE 13A. MODULE INSTL, CAPTAINS AND FIRST OFFICERS (INSTRUMENT PANELS) (REQUIRED PLACARDS ONLY) (SHEET 2)

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
13A	65C10900-1		MODULE INSTL, CAPTAINS AND FIRST OFFICERS (INSTRUMENT PANELS) (VARIABLE DWG; 65C10900-5003) (REQUIRED PLACARDS ONLY) (SEE 25-1, FIG. 2E, ITEM 107A)	5199	RF
1D	BAC27CEQ159		. DECAL, INOP	5199	2
1F	BAC27CEQ148		. DECAL, INOP	5151	10
2A	BAC27CEQ148		. DECAL, INOP	5299	4
3	BACM9L10SS		. DECAL, FLAP POSITION	5199	1
3A	BAC27DCC373		. MARKER-ALUMINUM FOIL, INOP (USED WITH 522-4114-008. AND 522-4114-003)	5151	2
4	BAC27CEQ14		. DECAL, LIMIT SPEED 1AS LANDING GEAR	5199	1
	65C10906-3		. MODULE ASSY, P9-3 (REQUIRED PLACARDS ONLY)	5199	RF
5A	BAC27CEQ145		. . DECAL, OUTBD.	5199	1
6A	BAC27CEQ146		. . DECAL, OUTBD.	5199	1
	69-67142-1		. MODULE ASSY, P24 (REQUIRED PLACARDS ONLY)	5199	RF
7	BAC27CEQ13		. . MARKER-ALUMINUM FOIL, LANDING GEAR.	5199	1
	69-47605-7		. PANEL ASSY, P8-4 (REQUIRED PLACARDS ONLY)	5199	RF
8	65-40583-75		. . SCOTCH-CAL, A/P ANN LIGHTING INTENSITY RESET.	5199	1
	69-47605-7		. PANEL ASSY, P10-4 (REQUIRED PLACARDS ONLY)	5199	RF
9	65-40583-75		. . SCOTCH-CAL, A/P ANN LIGHTING INTENSITY RESET.	5199	1
10	80928-3		. PLACARD, V2 AND VREF (V0563B) (ADDED BY SVA E.O. . . . 80928 AND DELETED BY SVA E.O. 82447)	5199	2
11	82447-2		. PLACARD, V2/VREF (50 DEG FLAPS) (V0563B) (ADDED AND DELETED BY SVA E.O. 82447)	5199	2
12	82447-3		. PLACARD, VREF (40 DEG FLAPS) (V0563B) (ADDED AND. DELETED BY SVA E.O. 82447)	5199	1
13	82447-4		. PLACARD, V2/VREF (50 DEG/40 DEG FLAPS) (V0563B) . . . (ADDED BY SVA E.O. 82447)	5199	2
			. FOR REFERENCE TO OTHER MODULE DETAILS, SEE NHA. . . .	5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

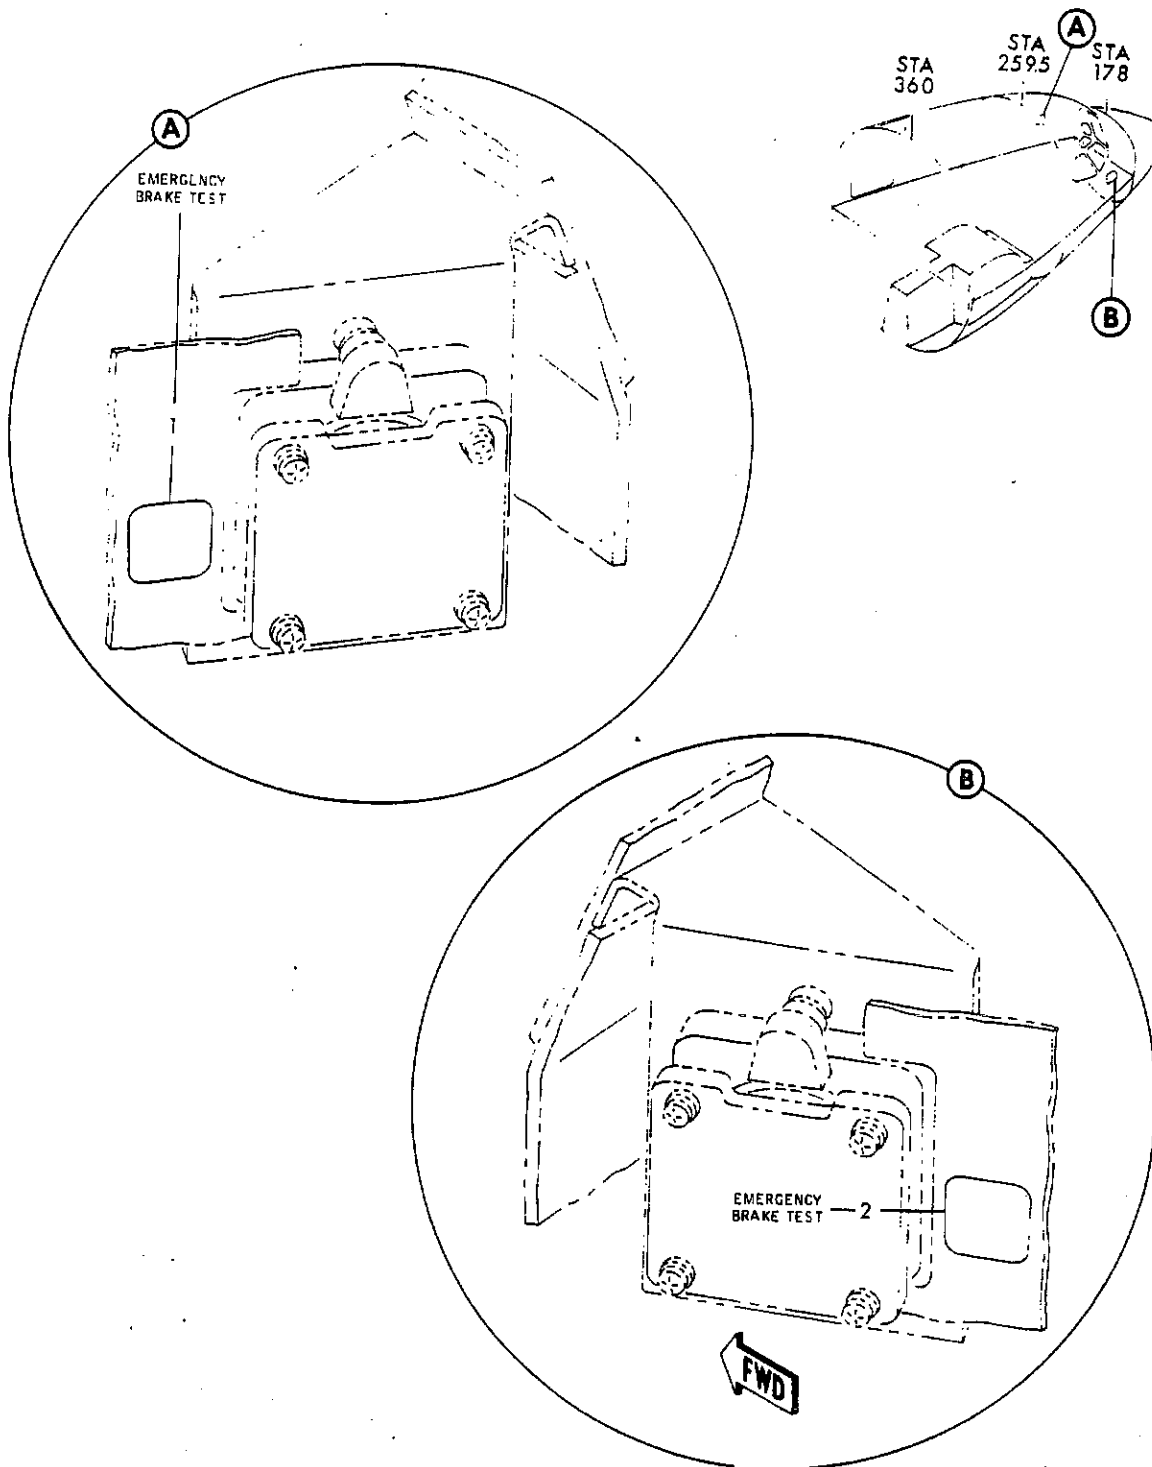 


FIGURE 14. GAUGE INSTL. EMERGENCY BRAKE PRESSURE (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
14	65-8708-6	GAUGE INSTL, EMERGENCY BRAKE PRESSURE RH (REQUIRED. . . PLACARDS ONLY) (SEE 25-5, FIG. 14E, ITEM 6 AND 25-5, FIG. 14H, ITEM 2)		RF
2	BACM10800-4CK	. MARKER-ALUMINUM FOIL, EMERGENCY BRAKE TEST. FOR REFERENCE TO OTHER GAUGE DETAILS, SEE NHA		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
R R R R R R R R R R R	18	65-51822-1	PANEL INSTL, P8 PILOTS MAIN INSTRUMENT (REQUIRED. 0150	RF
		PLACARDS ONLY) (DELETED BY MOD 7211.019-225)		
		(SEE 25-1, FIG. 1K, ITEM 4)		
		391-31-10-74164-001	PANEL INSTL, P8 PILOTS MAIN INSTRUMENT (REQUIRED. 0101	RF
		PLACARDS ONLY) (VS2500) (65-51822-1 MODIFIED		
		BY MOD 7211.019-225) (SEE 25-1, FIG. 1K, ITEM		
		4)		
		391-31-10-74164-003	PANEL INSTL, P8 PILOTS MAIN INSTRUMENT (REQUIRED. 0203	RF
		PLACARDS ONLY) (VS2500) (65-51822-1 MODIFIED		
		BY MOD 7211.019-225) (SEE 25-1, FIG. 1K, ITEM		
		4)		
		391-31-10-74164-005	PANEL INSTL, P8 PILOTS MAIN INSTRUMENTS (REQUIRED. 0450	RF
		PLACARDS ONLY) (VS2500) (65-51822-1 MODIFIED		
		BY MOD 7211.019-225) (SEE 25-1, FIG. 1K, ITEM		
		4)		
	2	69-34773-18	. PANEL INSTL, LANDING GEAR (REQUIRED PLACARDS ONLY). . . 0150	RF
		BACM9L10ST	. . . SCOTCH-CAL, LIMIT SPEED (COPILOT) 0150	1
		65-51822-74	. UNIT ASSY, (COPILOT) (REQUIRED PLACARDS ONLY) 0150	RF
	11	BAC27CEQ44	. . . SCOTCH-CAL, TEST. 0150	1
		391-11-00-73978-103	. DECAL, INSTRUMENT PANELS, (VS2500) (ADDED BY MOD. . . 0150	2
		7211.019-225)		
		391-11-00-73978-109	. DECAL, INSTRUMENT PANELS, (VS2500) (ADDED BY MOD. . . 0150	2
		7211.019-225)		
		. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA 0150		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/00

11-06-10

DETAILED PARTS LIST
11-06-18
PAGE 1

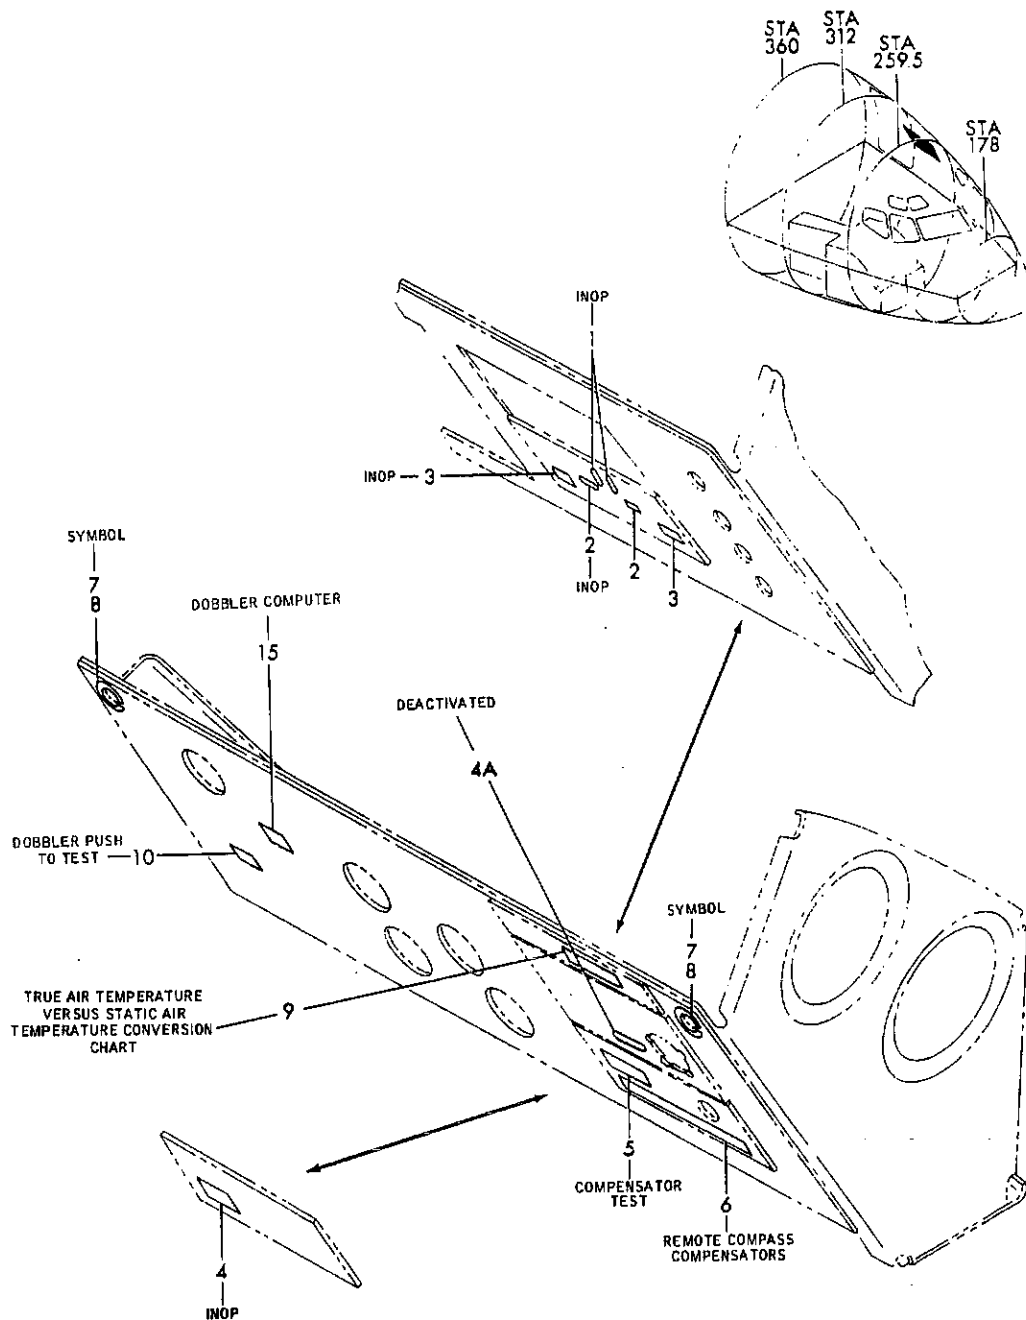 


FIGURE 20. PANEL INSTL, NAVIGATORS (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF	UNITS
			FROM TO	PER ASSY
20	50-5559	PANEL INSTL, NAVIGATORS (REQUIRED PLACARDS ONLY) (SEE . 25-1, FIG. 1C, ITEM 23, 25-1, FIG. 1D, ITEM 22, 25-1, FIG. 1E, ITEM 20, 25-1, FIG. 1F, ITEM 17, 25-1, FIG. 1J, ITEM 19, 25-1, FIG. 2B, ITEM 18, 25-1, FIG. 2D, ITEM 15, 25-1, FIG. 2E, ITEM 7A AND 25-1, FIG. 2H, ITEM 1B)	5199	RF
	4 BAC27DCC351	. MARKER-ALUMINUM FOIL. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NMA	5199 5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

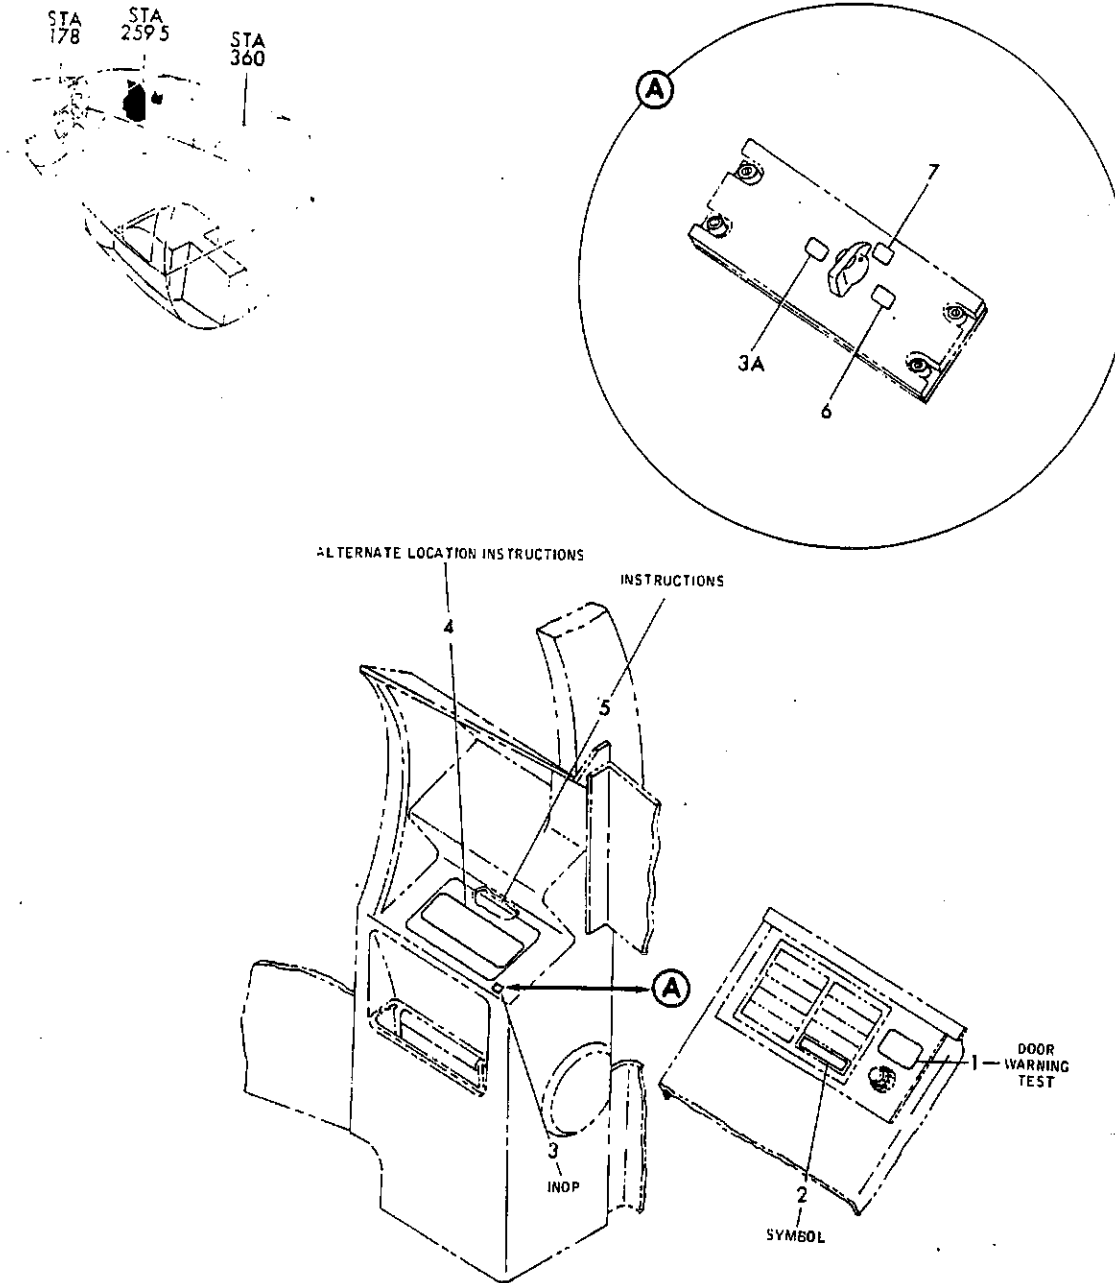 


FIGURE 21A, PANEL INSTL, P18 AND P19 AUXILIARY EQUIPMENT (REQUIRED PLACARDS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
R R R R R	21A	65-64127-2	PANEL INSTL, P19 COPILOTS AUXILIARY EQUIPMENT (REQUIRED PLACARDS ONLY) (SEE 25-5, FIG. 14E, ITEM 3)	0150 RF
		69-33354-5	. PANEL ASSY, DOOR WARNING ANNUNCIATOR (REQUIRED. . . . PLACARDS ONLY)	0150 RF
	1	BACM10T16DU	. . MARKER-ALUMINUM FOIL, DOOR WARNING TEST	0150 1
			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	0150
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

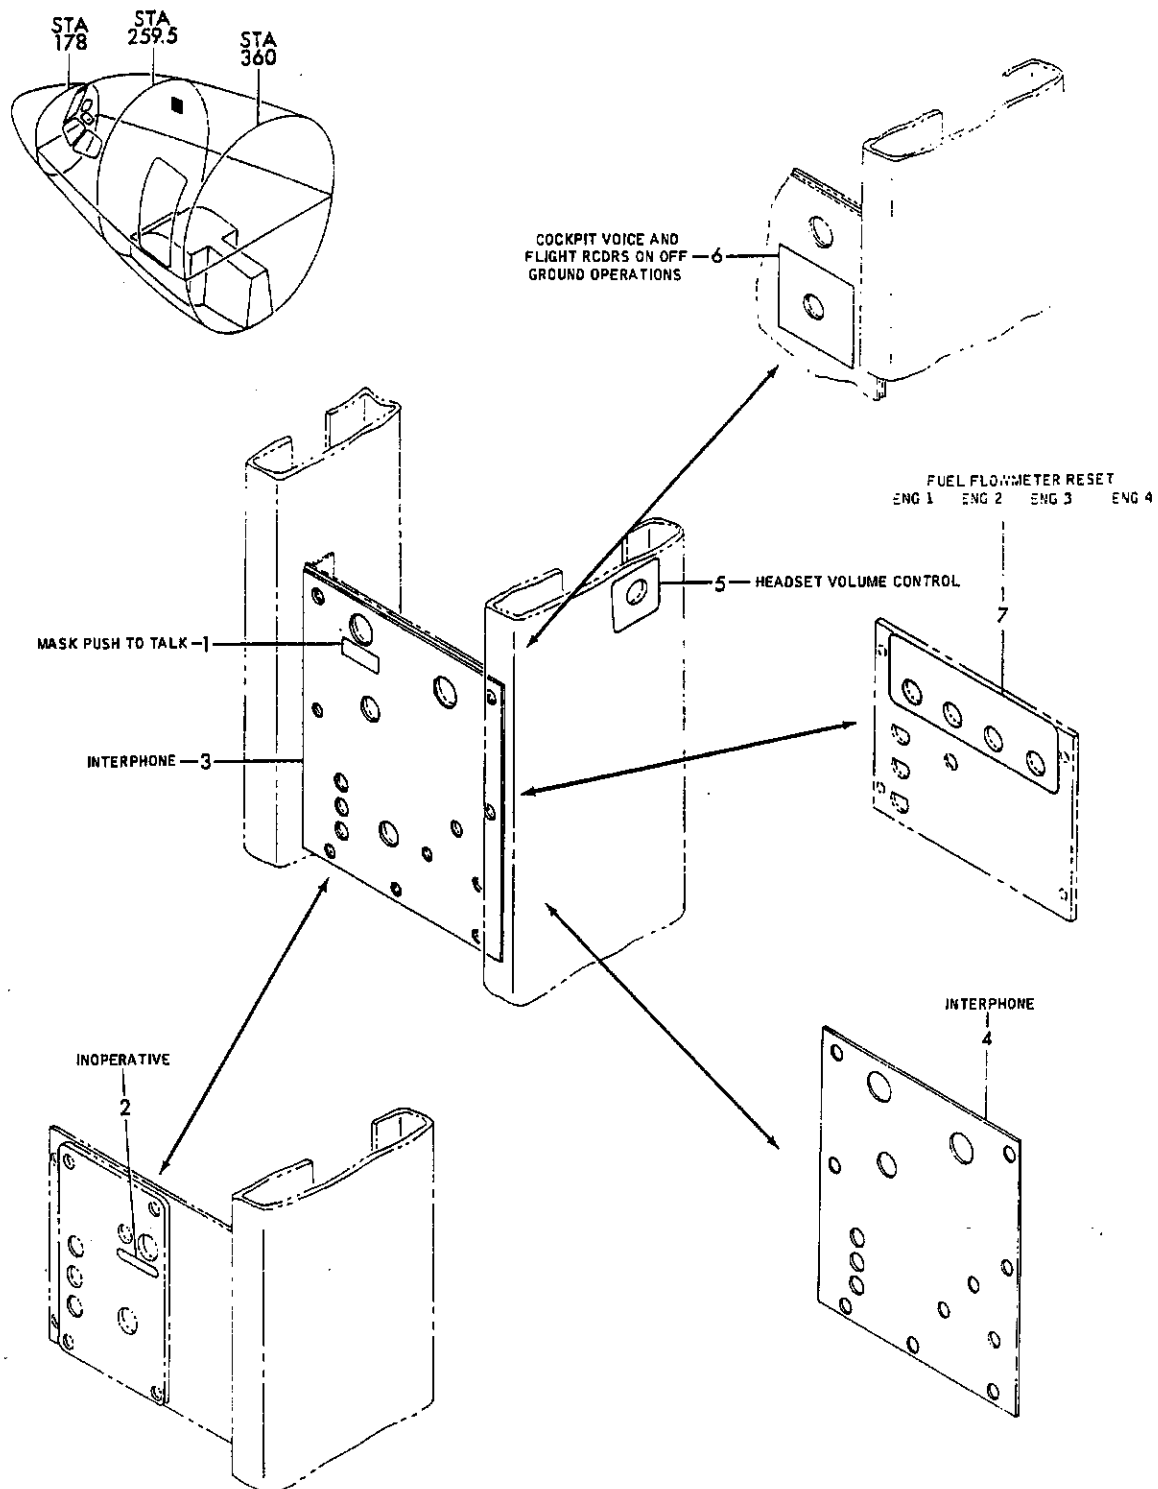 


FIGURE 25. INTERPHONE INSTL. FLIGHT ENGINEER (REQUIRED PLACARDS ONLY)

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R	25	65-12201	INTERPHONE INSTL, FLIGHT ENGINEER (REQUIRED PLACARDS, ONLY) (SEE 25-1, FIG. 1B, ITEM 97, 25-1, FIG. 1C, ITEM 113, 25-1, FIG. 1E, ITEM 107, 25-1, FIG. 1K, ITEM 101 AND 25-1, FIG. 2C, ITEM 95)							0150	RF
	2	65-40583-87	. SCOTCH-CAL, INOPERATIVE							0150	1
			. FOR REFERENCE TO OTHER INTERPHONE DETAILS, SEE NHA. .							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

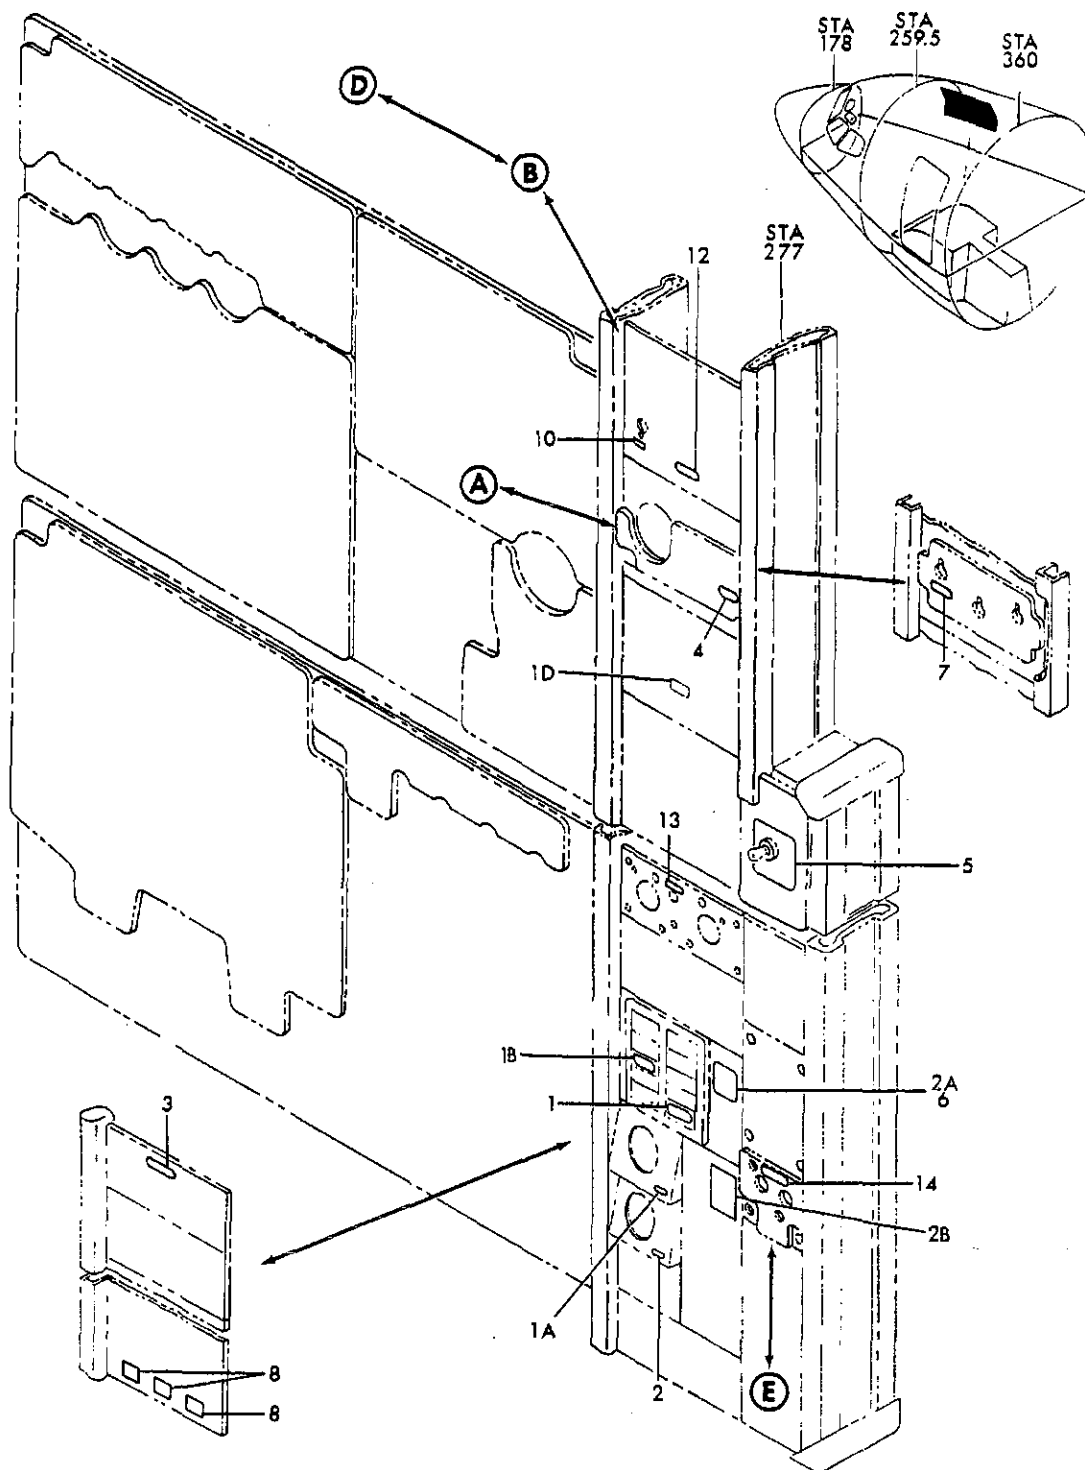 


FIGURE 26. PANEL INSTL. FLIGHT ENGINEERS AUXILIARY (REQUIRED PLACARDS ONLY) (SHEET 1)

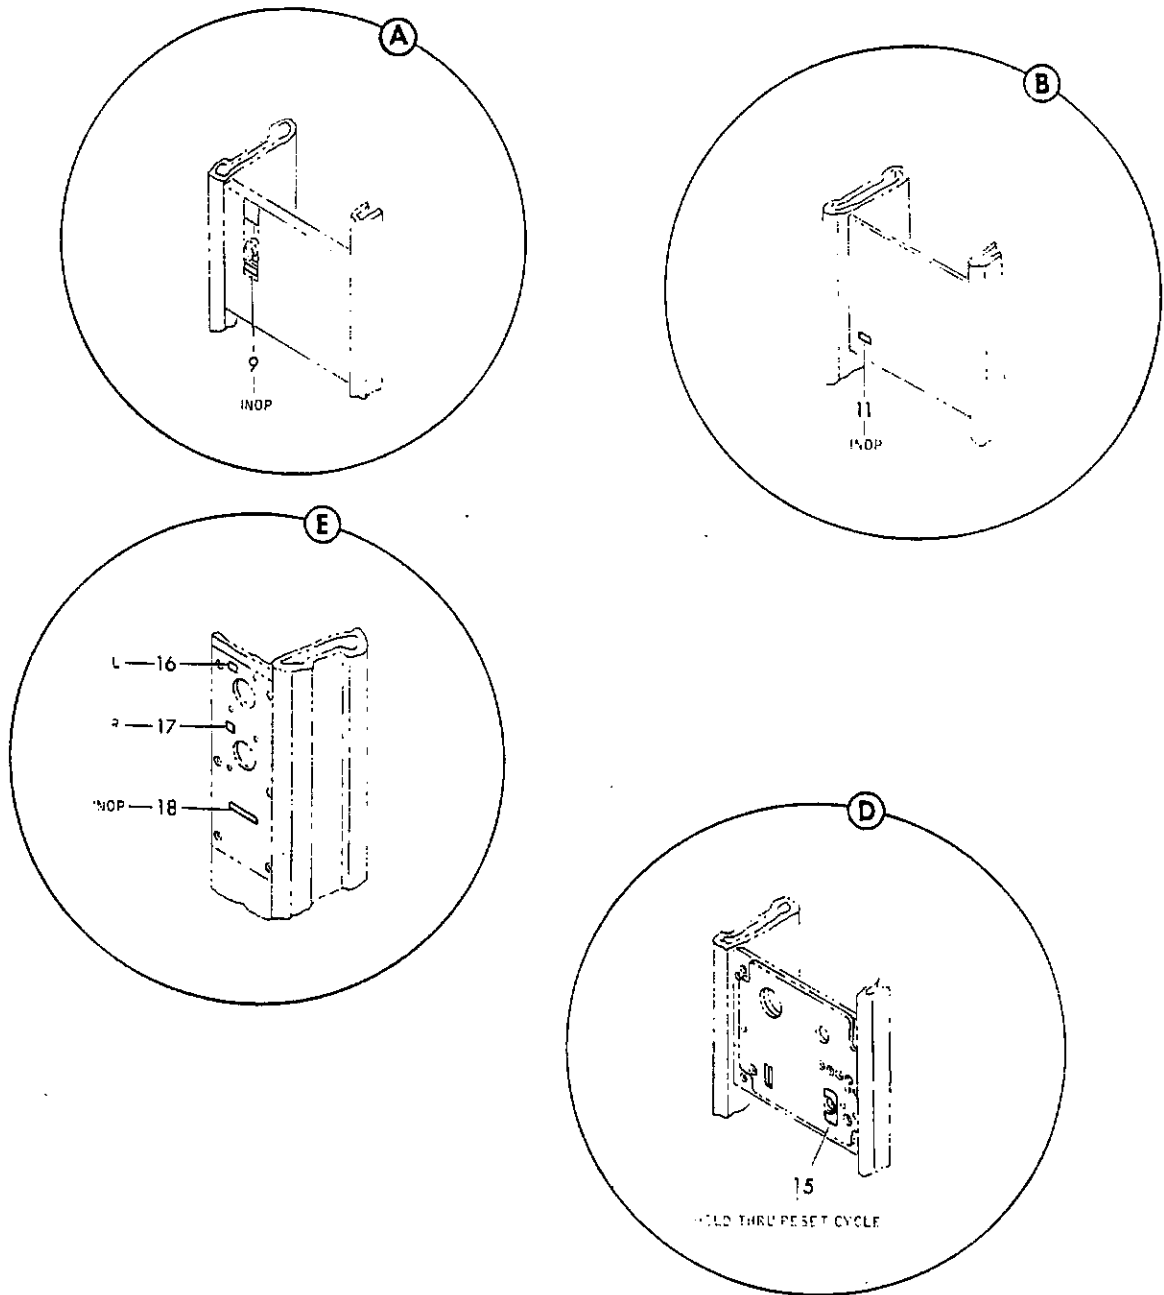 


FIGURE 26. PANEL INSTL, FLIGHT ENGINEERS AUXILIARY (REQUIRED PLACARDS ONLY)

NOV 21/90

11-06-26


DETAILED PARTS LIST
11-06-26
PAGE 1

BOEING **707** *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
26	65-58957-1	PANEL INSTL, FLIGHT ENGINEERS AUXILIARY (REQUIRED . . . PLACARDS ONLY) (SEE 25-1, FIG. 18, ITEM 8, 25-1, FIG. 1E, ITEM 8, 25-1, 1F, ITEM 7, 25-1, FIG. 2D, ITEM 6 AND 25-1, FIG. 2E, ITEM 83)	5199	RF
	69-46160-10	. MODULE ASSY, DOOR WARNING ANNUNCIATOR (M456).	5199	RF
	2A BACM10T16DU	(REQUIRED PLACARDS ONLY)		
	3 BAC27DCC351	. . MARKER-ALUMINUM FOIL, DOOR WARNING TEST MARKER-ALUMINUM FOIL, INOP. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	5199 5199 5199	1 1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

BOEING *707* *Intercontinental*
PARTS CATALOG

 SECTION 07
CIRCUIT BREAKER PANELS

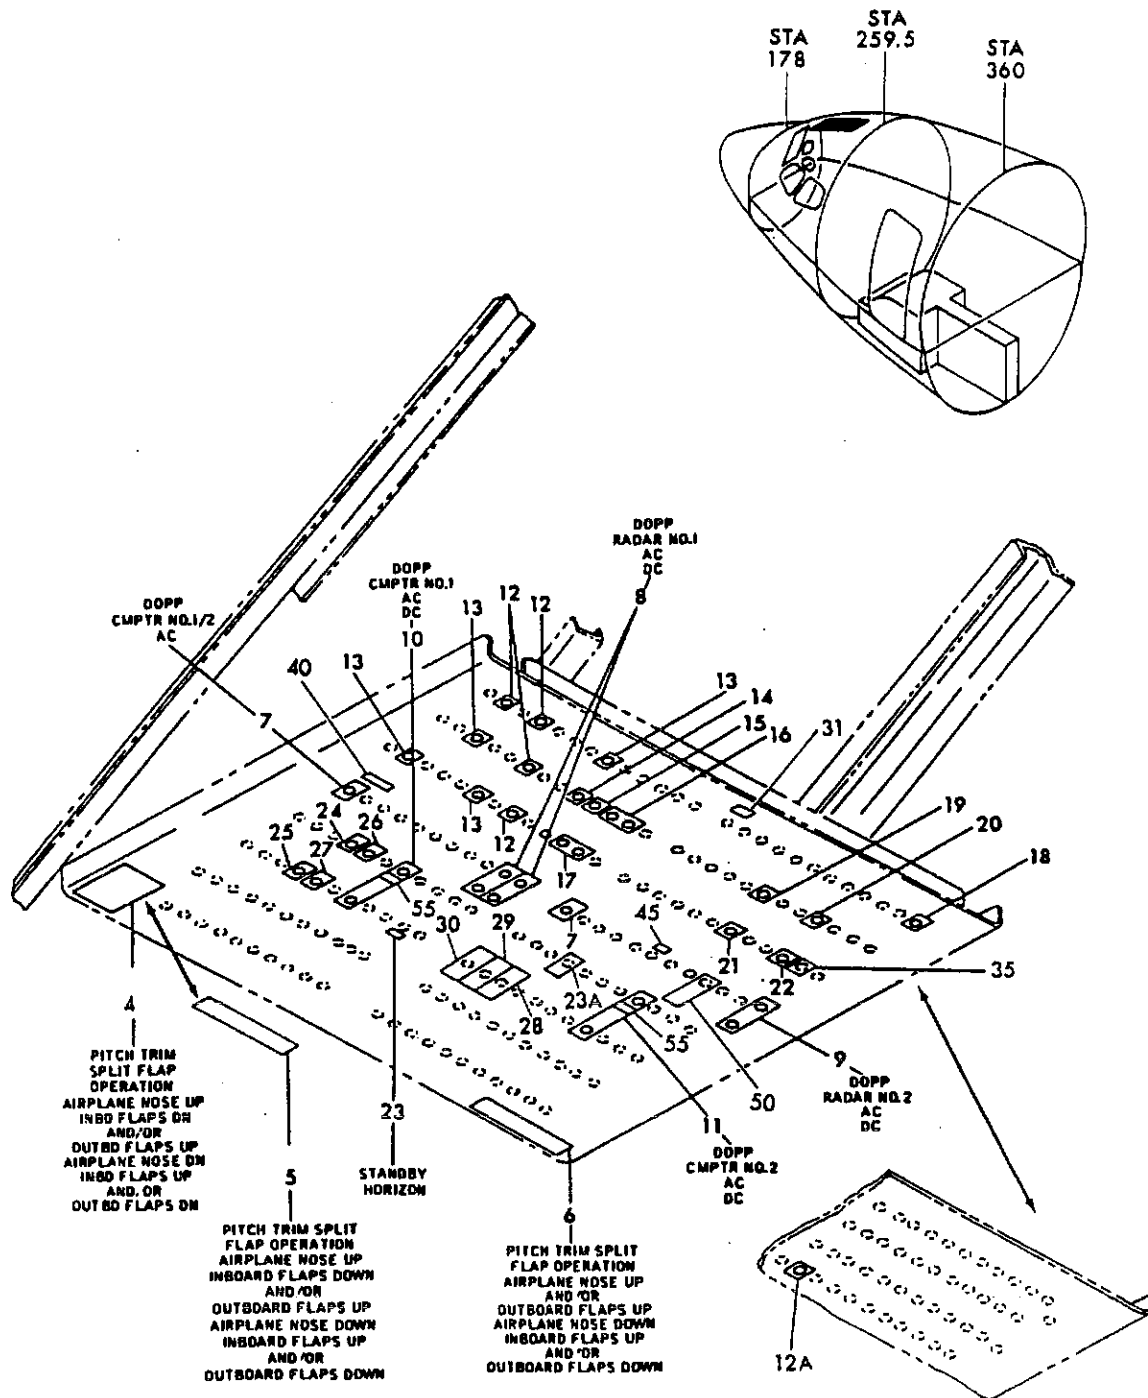

A 1107001 REV 262

FIGURE 1. PANEL INSTALLATION, RADIO AND T-R CIRCUIT BREAKER (REQUIRED PLACARDS ONLY)



PARTS CATALOG

R R R R	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
	1	65-6447-124	PANEL ASSY, RADIO AND T-R CIRCUIT BREAKER (REQUIRED . .							5199	RF
			PLACARDS ONLY) (SEE 24-7, FIG. 1, ITEM 11)								
	5	BACM9T12D	. SCOTCH-CAL, PITCH TRIM SPLIT FLAP OPERATION							5199	1
			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA							5199	


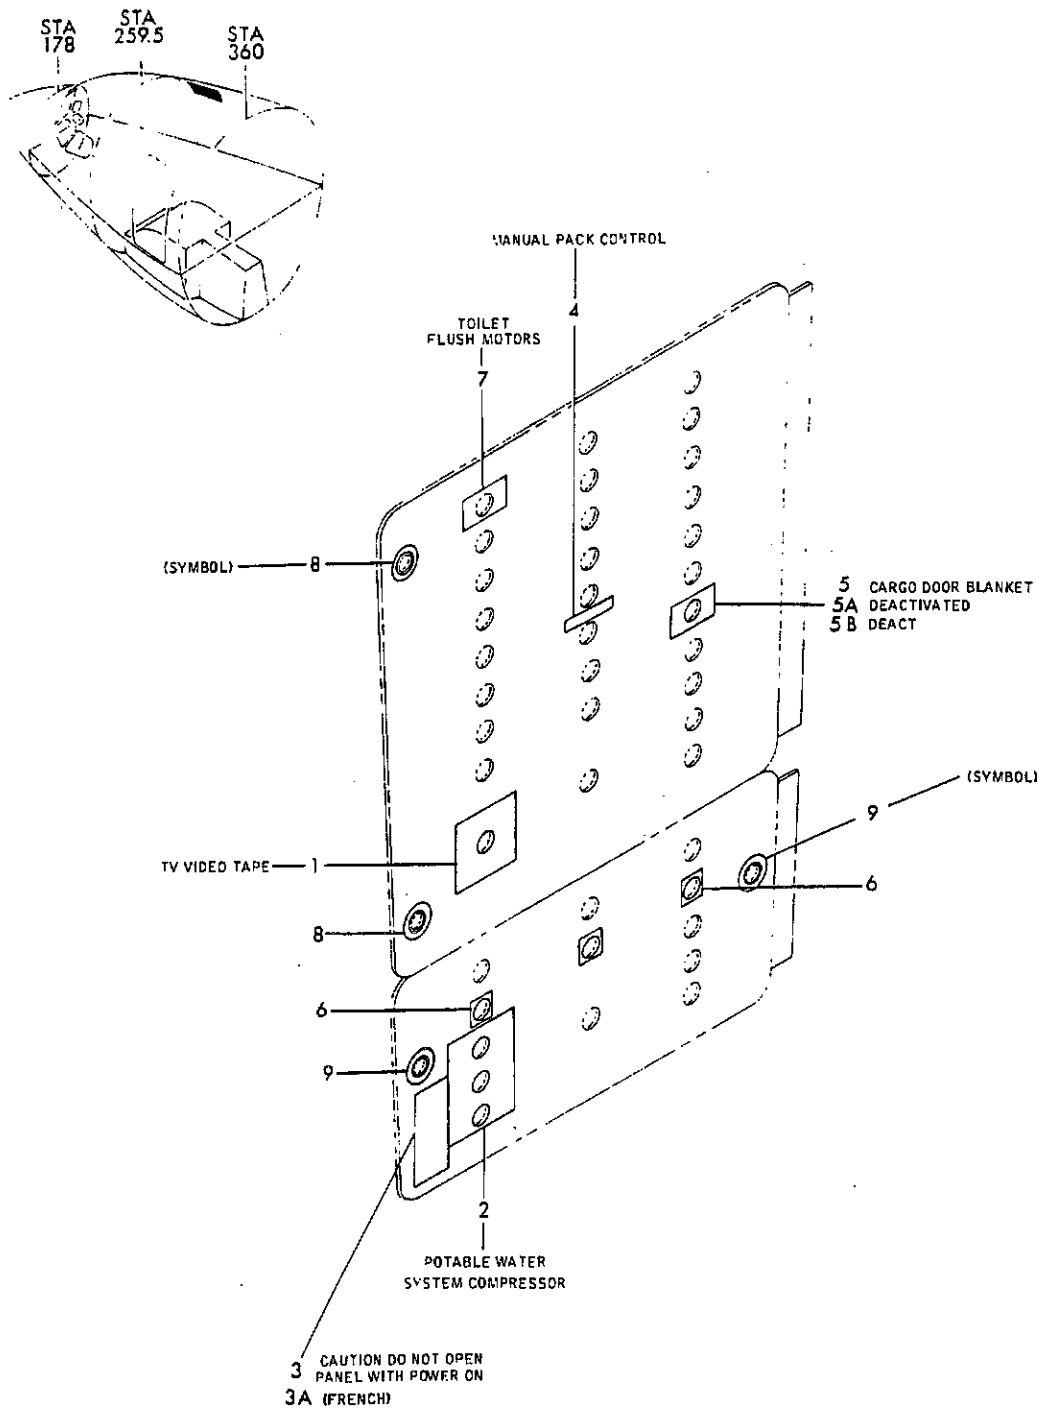 


FIGURE 6. PANEL ASSY. P4 CIRCUIT BREAKER FORWARD AND AFT (REQUIRED PLACARDS ONLY)

MISSING ITEM NUMBERS ARE NOT APPLICABLE

11-07-6

 DETAILED PARTS LIST
11-07-6
PAGE 1

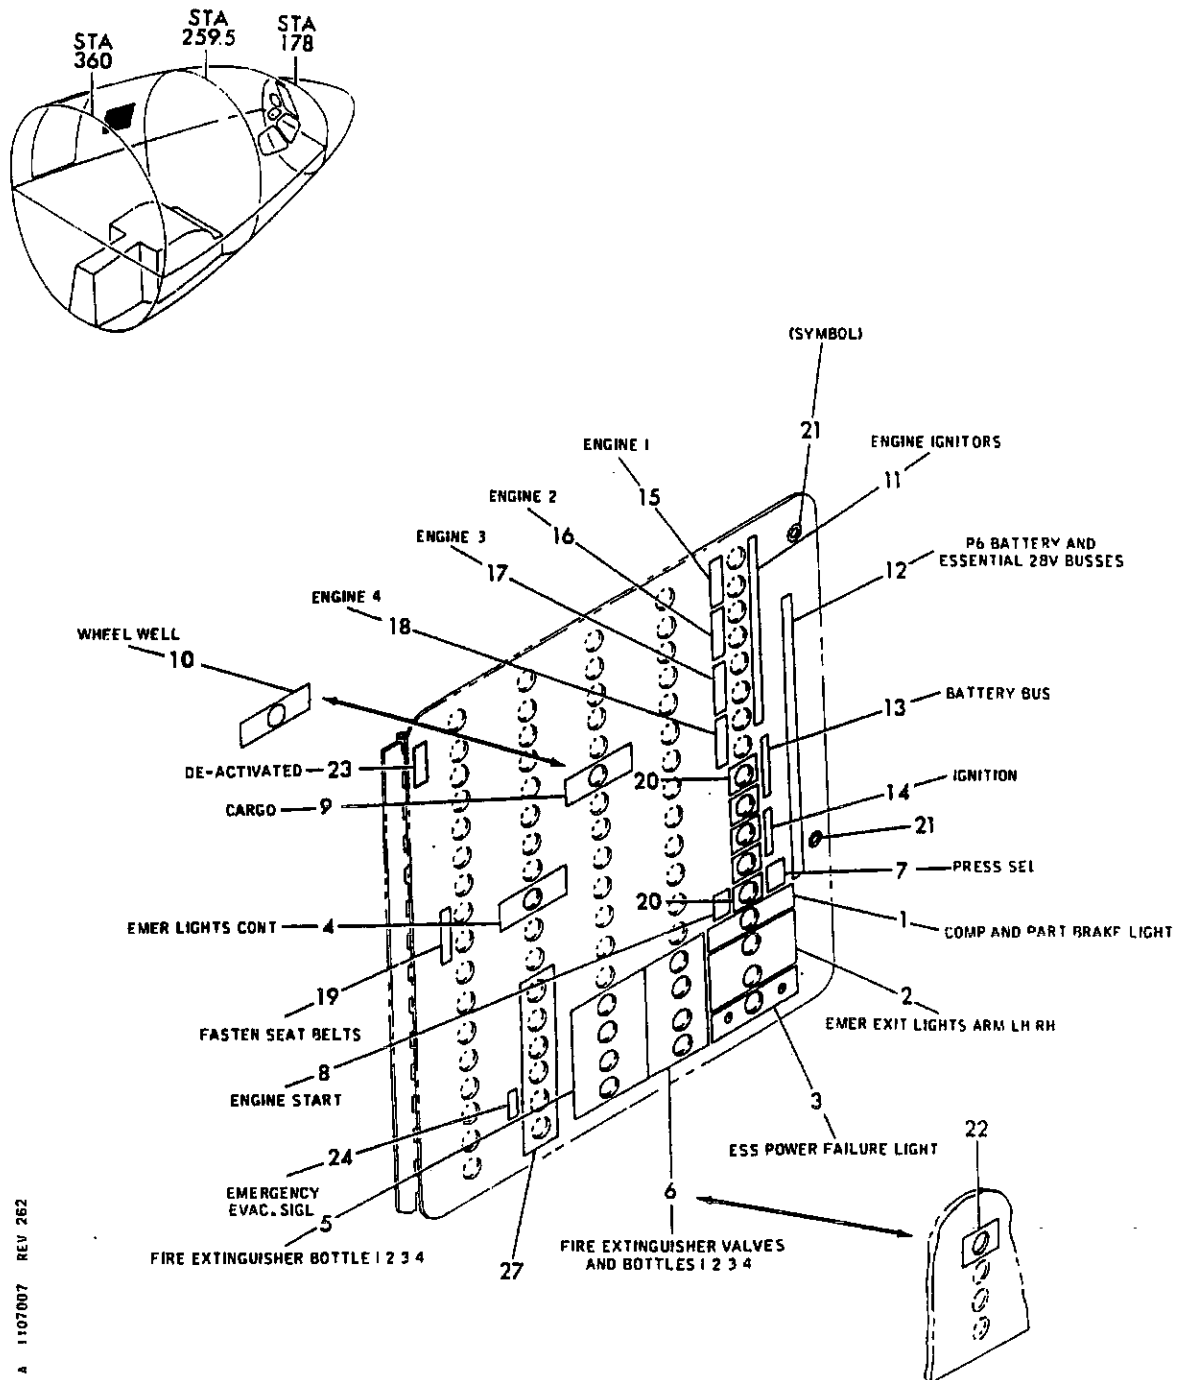

A 1107007 REV 262

FIGURE 7. PANEL ASSY, P6 CIRCUIT BREAKER (REQUIRED PLACARDS ONLY)



PARTS CATALOG

R R R R R	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	7	65-2842-183		PANEL ASSY; P6 CIRCUIT BREAKER (REQUIRED PLACARDS ONLY) (ADDED AND REWORKED BY SVA E.O. 81506) (SEE 24-7, FIG. 25, ITEM 7)	5199	RF
	24	81506-1		. PLACARD, EMERGENCY EVAC SIGL (V0563B) (ADDED BY . . . SVA E.O. 81506)	5199	1
				. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA . . .	5199	
				MISSING ITEM NUMBERS ARE NOT APPLICABLE		

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 08
DECORATIVE EXTERIOR MARKINGS

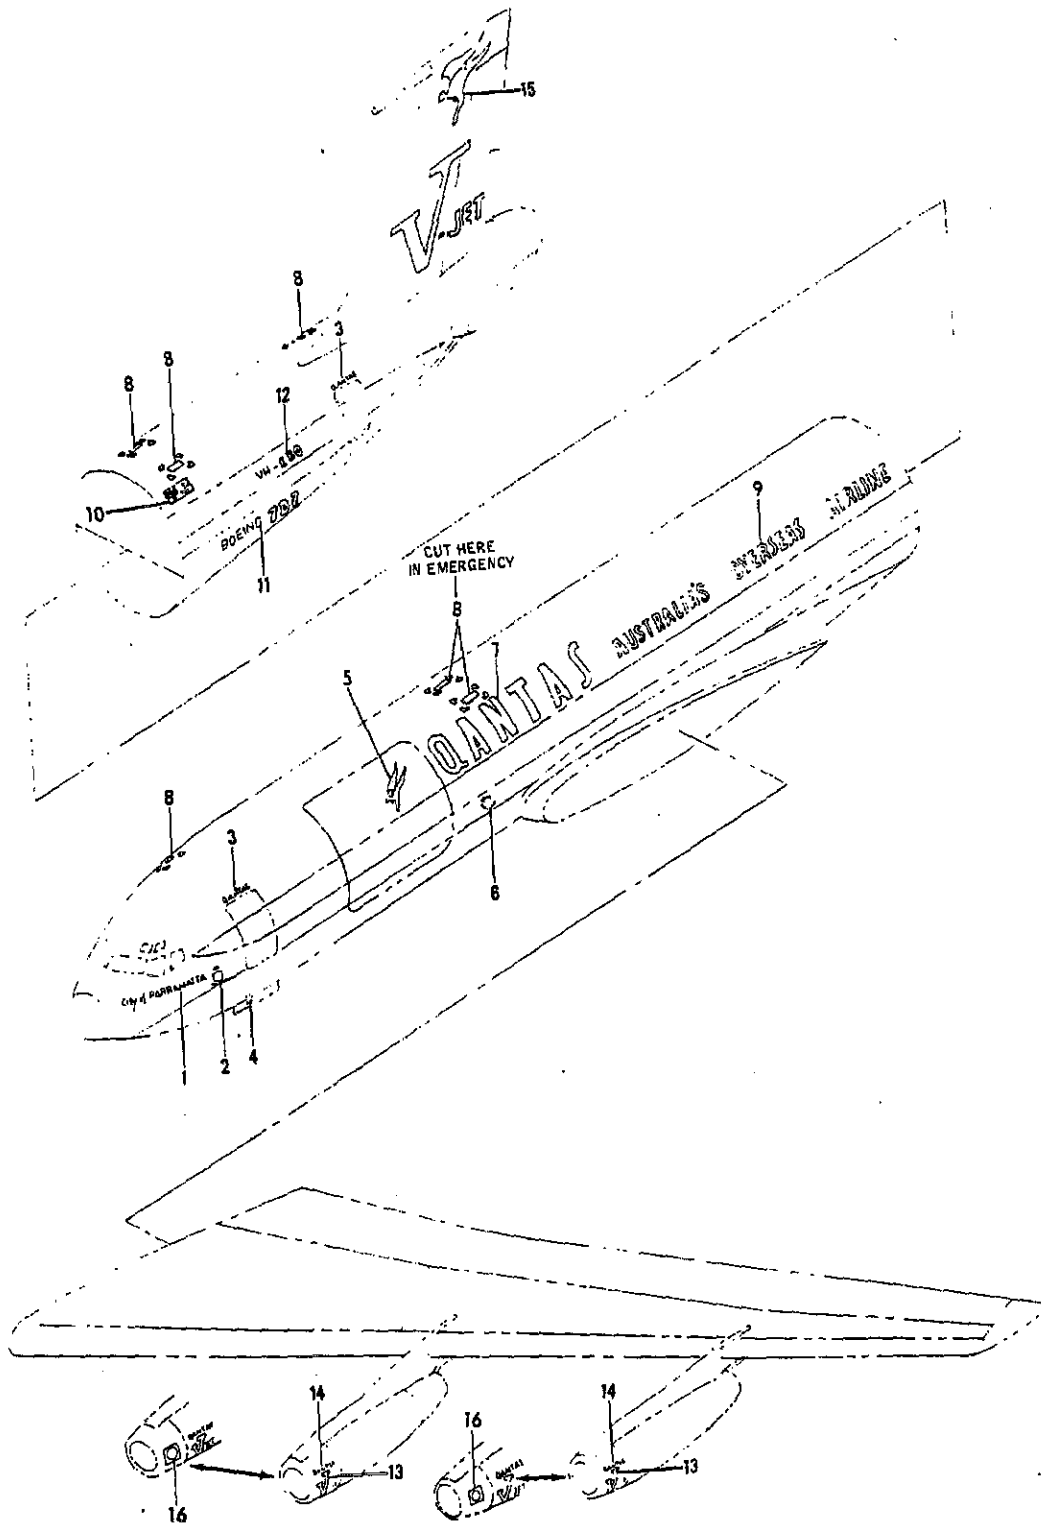 


FIGURE 39. MARKING INSTL. QUANTAS DECORATIVE EXTERIOR

BOEING *707* Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 39	65-39837-24	MARKING INSTL, QANTAS DECORATIVE EXTERIOR	0150	1
	65-39837-88	. MARKING KIT, CITY OF SYDNEY AIRPLANE NAME	0101	2
	65-39837-92	. MARKING KIT, CITY OF MELBOURNE AIRPLANE NAME	0202	2
	65-39837-104	. MARKING KIT, CITY OF HOBART AIRPLANE NAME	0303	2
R	65-39837-116	. MARKING KIT, CITY OF DARWIN AIRPLANE NAME	0450	2
	65-39837-89	. MARKING KIT, CITY COAT OF ARMS (SYDNEY)	0101	2
	65-39837-93	. MARKING KIT, CITY COAT OF ARMS (MELBOURNE)	0202	2
	65-39837-105	. MARKING KIT, CITY COAT OF ARMS (HOBART)	0303	2
R	65-39837-117	. MARKING KIT, CITY COAT OF ARMS (DARWIN)	0450	2
R	65-39837-3	. MARKING KIT, QANTAS ABOVE DOORS	0150	2
	65-39837-90	. MARKING KIT, REGISTRY LETTER C.	0101	2
	65-39837-94	. MARKING KIT, REGISTRY LETTER D.	0202	2
	65-39837-106	. MARKING KIT, REGISTRY LETTER G.	0303	2
R	65-39837-118	. MARKING KIT, REGISTRY LETTER I.	0450	2
R	65-39837-25	. MARKING KIT, KANGAROO INSIGNIA LH	0150	1
R	65-39837-26	. MARKING KIT, KANGAROO INSIGNIA RH	0150	1
R	65-39837-11	. MARKING KIT, ROYAL AIR MAIL INSIGNIA.	0150	2
R		(CUSTOMER FURNISHED)		
R	65-39837-2	. MARKING KIT, QANTAS SIDE OF BODY.	0150	2
R	65-39837-12	. MARKING KIT, CHOP OUT AREA.	0150	6
R	65-39837-21	. MARKING KIT, AUSTRALIAS OVERSEAS AIRLINE.	0150	2
R	65-39837-9	. MARKING KIT, AUSTRALIAN FLAG LH	0150	1
R	65-39837-10	. MARKING KIT, AUSTRALIAN FLAG RH	0150	1
R	65-39837-27	. MARKING KIT, BOEING 707 INSIGNIA.	0150	2
	65-39837-91	. MARKING KIT, REGISTRY LETTERS VH-EAC.	0101	2
	65-39837-95	. MARKING KIT, REGISTRY LETTERS VH-EAD.	0202	2
	65-39837-107	. MARKING KIT, REGISTRY LETTERS VH-EAG.	0303	2
R	65-39837-119	. MARKING KIT, REGISTRY LETTERS VH-EAI.	0450	2
R	65-39837-7	. MARKING KIT, V-JET.	0150	8
R	65-39837-8	. MARKING KIT, QANTAS NACELLE	0150	8
R	65-39837-5	. MARKING KIT, KANGAROO INSIGNIA LH	0150	1
R	65-39837-6	. MARKING KIT, KANGAROO INSIGNIA RH	0150	1
R	28715-10	. EMBLEM, PRATT AND WHITNEY LH (V77445)	0150	4
R	28714-10	. EMBLEM, PRATT AND WHITNEY RH (V77445)	0150	4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

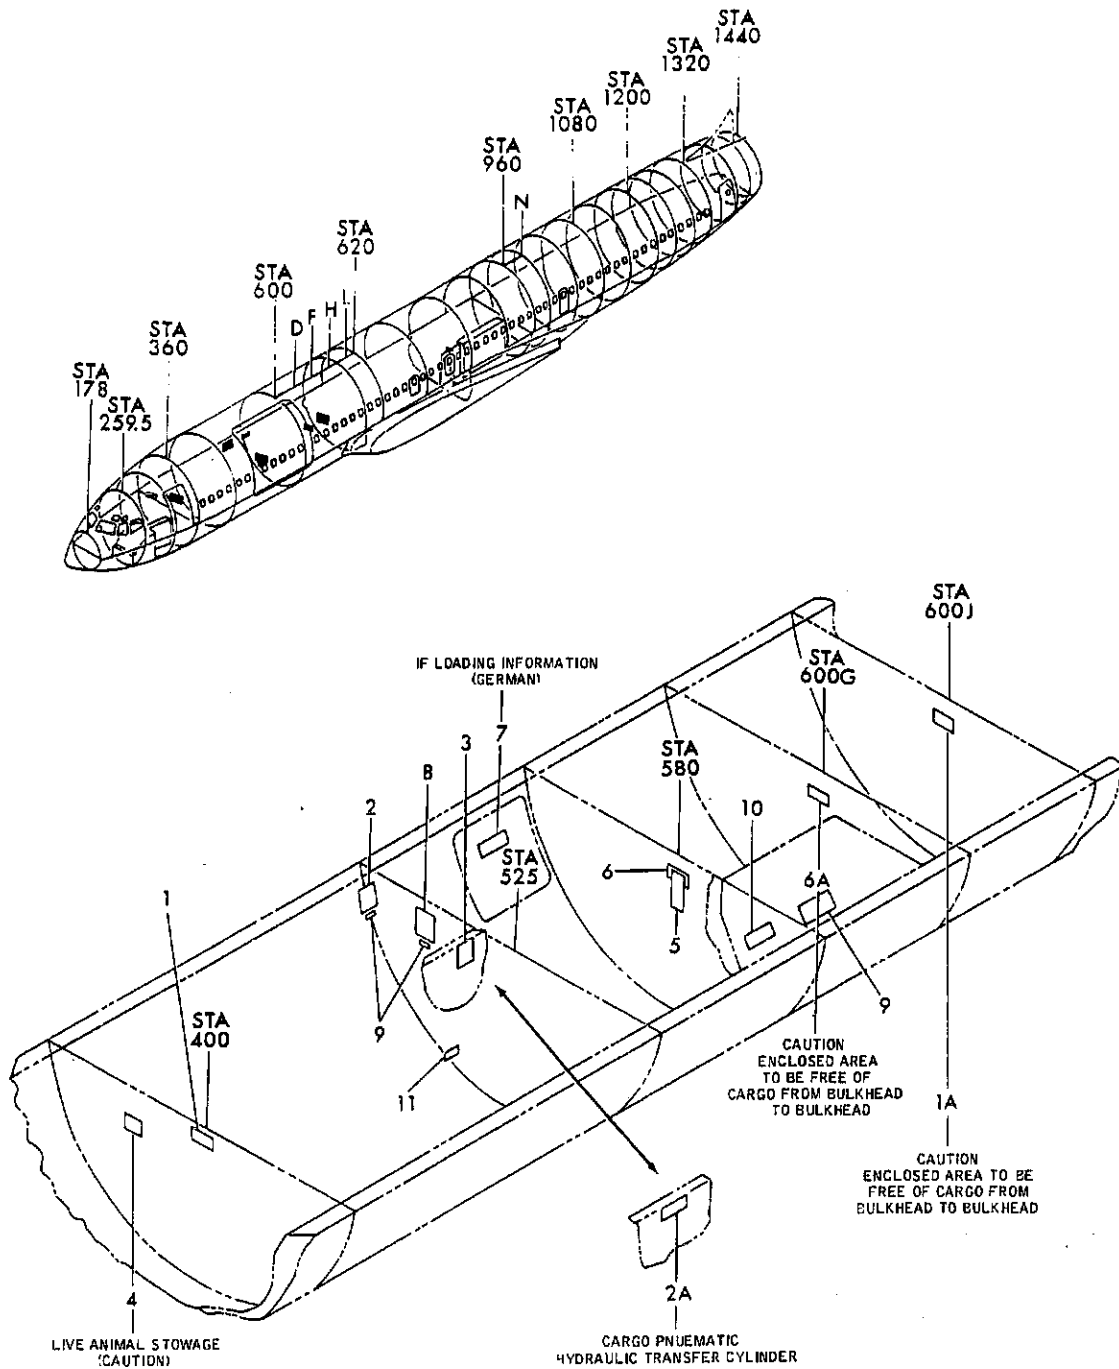 


FIGURE 41. MARKING INSTL. SECTION 54 FORWARD CARGO COMPARTMENT



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R R	41	50-10309	MARKING INSTL, SECTION 54 FORWARD CARGO COMPARTMENT . . (SEE 25-1, FIG. 3, ITEM 1)							0150	RF
		50-10309	MARKING INSTL, SECTION 54 FORWARD CARGO COMPARTMENT . . (VARIABLE DWG NO.;50-10309-5002) (SEE 25-1, FIG. 3, ITEM 1)							5199	RF
	1	BACM10C104-34V	. MARKER-ALUMINUM FOIL, CAUTION INSTRUCTIONS.							5199	1
	1A	BACM10C104-34V	. MARKER-ALUMINUM FOIL, CAUTION INSTRUCTIONS.							5199	1
	2	BACM10C34CL	. MARKER-ALUMINUM FOIL, CARGO INSTRUCTIONS.							0150	1
	2	BAC27CCH69	. MARKER-ALUMINUM FOIL, CARGO LOADING							5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

11-08-72

DETAILED PARTS LIST
11-38-72
PAGE 9



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
72	1	65-72794-3	MARKING INSTL, DECORATIVE EXTERIOR.							5199	1
		69-65709-1	. MARKING INSTL, TEMPORARY (PRE-CERTIFICATION).							5199	1
	1	69-65709-4	. . MARKING, TEMPORARY.							5199	1
	7	65-82791-5	. MARKING INSTL, SAUDI ARABIA (SV) DECORATIVE EXTERIOR (SEE FIG. 72F)							5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

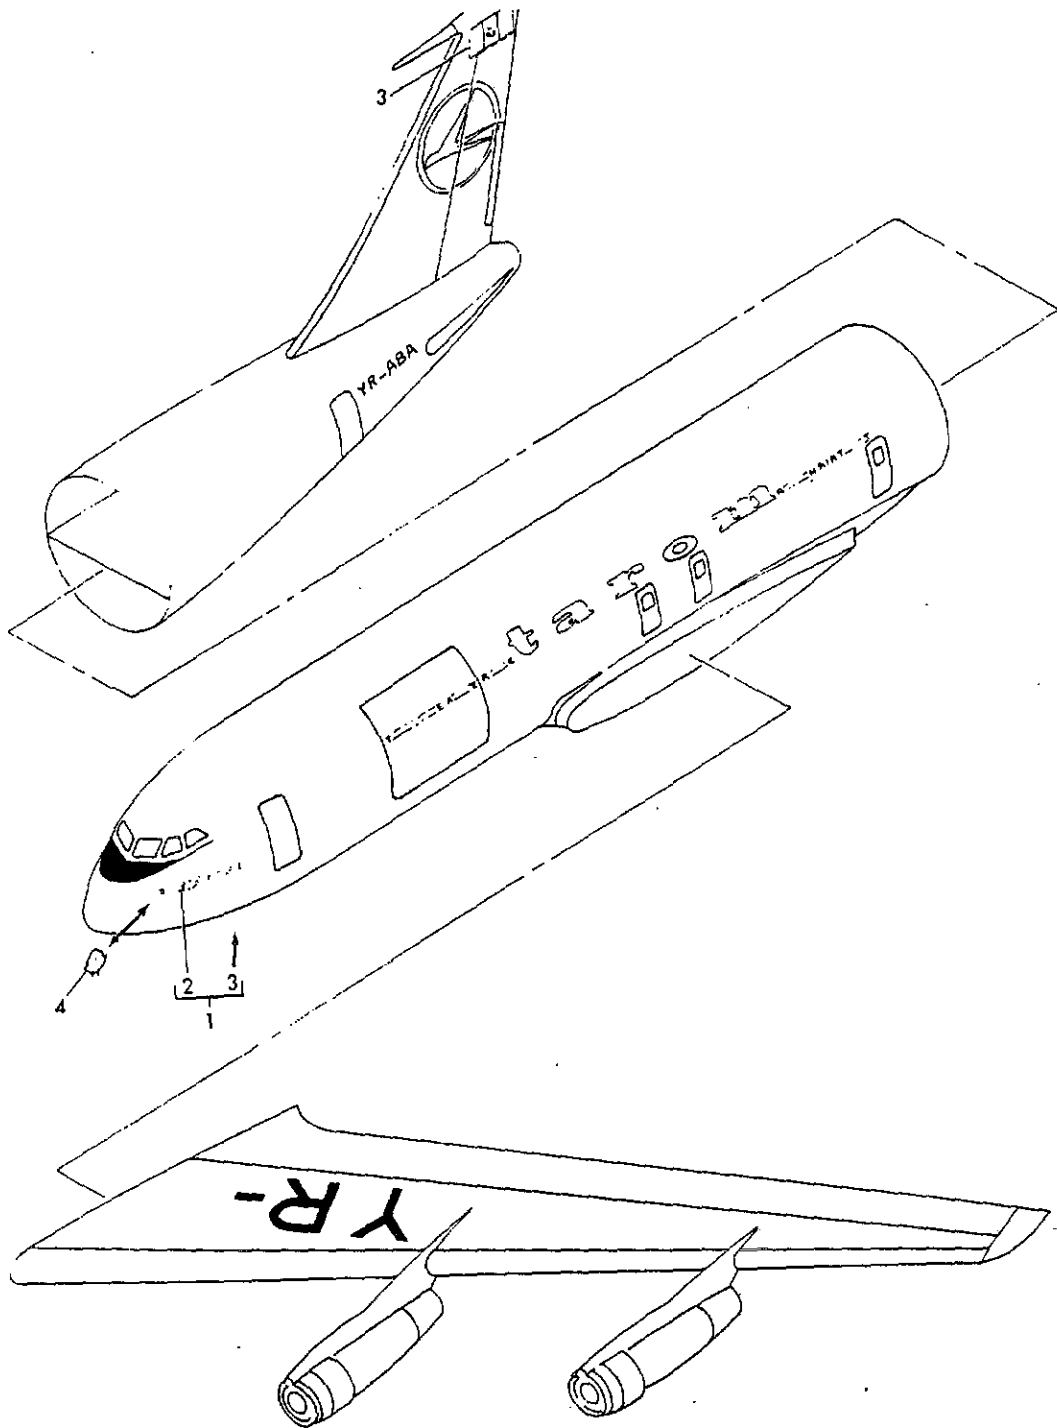 


FIGURE 72B. MARKING INSTL. IRAQI AIRWAYS DECORATIVE EXTERIOR

BOEING **707** *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
72B	1	65-86990-2	MARKING INSTL, TAROM DECORATIVE EXTERIOR (SEE FIG. 72, ITEM 3)							5199	RF
	4	EU00N5B3-(26)	. SEAL, ROMANIAN (V0685B)							5199	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

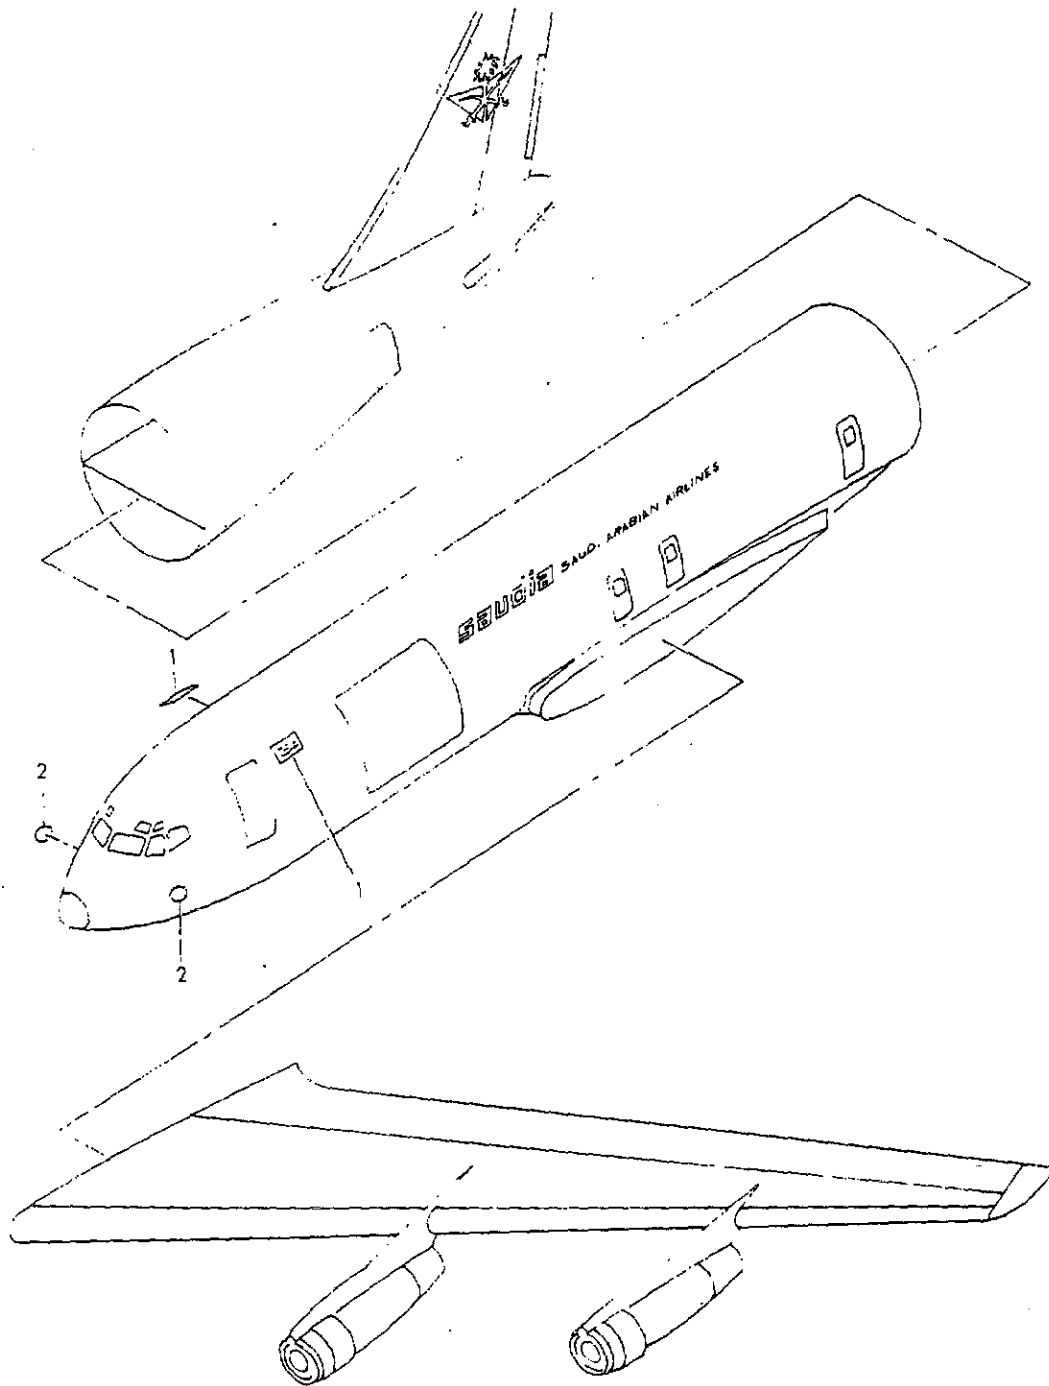 


FIGURE 72F. MARKING INSTL. SAUDI ARABIA (SVI) DECORATIVE EXTERIOR

DETAILED PARTS LIST
11-08-72F
PAGE 3

11-08-72F

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
72F	65-82791-5	MARKING INSTL, SAUDI ARABIA (SV) DECORATIVE EXTERIOR. .	5199	RF
1	65-82791-4	(SEE FIG. 72, ITEM 7)		
2	69-65779-1	. DECAL, FLAG	5199	2
		. DECAL, IATA EMBLEM.	5199	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE				