

 BOEING
707
PARTS CATALOG (MAINTENANCE)

CHAPTER 21

AIR CONDITIONING

TABLE OF CONTENTS

SECTION	FIGURE
21-01	NACELLE AND WING DUCTS
ANCHOR INSTL, FRONT SPAR AIR CONDITIONING DUCT	22
ANCHOR INSTL, FRONT SPAR STATION 400 AIR CONDITIONING DUCT	23
DUCT INSTL, FRONT SPAR STATION 408.33 TO 667.98 WING LEADING EDGE CABIN AIR	18
CONDITIONING	18
DUCT INSTL, INBOARD STRUT AIR CONDITIONING AND WING THERMAL ANTI-ICING	9
DUCT INSTL, OUTBOARD STRUT AIR CONDITIONING AND WING THERMAL ANTI-ICING	5
DUCT INSTL, WING LEADING EDGE CABIN AIR	17
SEAL INSTL, CABIN AIR DUCT BODY	19
SEAL INSTL, FRONT SPAR STATIONS 16.75 AND 382 AIR CONDITIONING DUCT	20
SPAR INSTL, INBOARD NACELLE STRUT MID	11
SPAR INSTL, OUTBOARD NACELLE STRUT MID	10
21-02	FUSELAGE SYSTEMS
EQUIPMENT INSTL, SECTION 52 AIR CONDITIONING	1
EQUIPMENT INSTL, SECTION 54 AIR CONDITIONING	2
EQUIPMENT INSTL, SECTION 57 AIR CONDITIONING	3
21-03	PACK
ACTUATOR INSTL, MODULATED COOLING AIR INLET	26
ACTUATOR INSTL, SECONDARY HEAT EXCHANGER DAMPER	9
ANCHOR INSTL, UNDERWING AIR CONDITIONING DUCTS	16
DUCT ASSY, AIR CONDITIONING	3
DUCT INSTL, AIR CONDITIONING TURBOFAN EXHAUST	4
DUCT INSTL, SECTION 54 AIR CONDITIONING PACK RAM AIR	12
DUCT INSTL, TURBOFAN EXHAUST	5
EXCHANGER INSTL, AIR CONDITIONING PACK PRIMARY HEAT	8
EXCHANGER INSTL, AIR CONDITIONING PACK SECONDARY HEAT LH	10
EXCHANGER INSTL, AIR CONDITIONING PACK SECONDARY HEAT RH	10
MACHINE INSTL, AIR CONDITIONING PACK AIR CYCLE	13
PACK INSTL, SECTION 54 AIR CYCLE SYSTEM AIR CONDITIONING	2
PANEL INSTL, SECTION 11 LOWER	30
PANEL INSTL, WING BODY FAIRING RAM AIR SCOOP MODULATION	29
PANEL INSTL, WING BODY FAIRING RAM AIR SCOOP MODULATION FIXED	29
SEPARATOR INSTL, SECTION 54 LH SIDE AIR CONDITIONING PACK WATER	11
SEPARATOR INSTL, SECTION 54 RH SIDE AIR CONDITIONING PACK WATER	11
SEPARATOR, CABIN AIR CYCLE SYSTEM WATER	31
STRIP INSTL, AIR CYCLE MACHINE TERMINAL	17
TUBING INSTL, AIR CYCLE MACHINE OIL SUMP VENT	14
TUBING INSTL, WATER SEPARATOR	15
TURBOFAN INSTL, GROUND AIR MOVER	7
21-04	AIR DISTRIBUTION SYSTEMS
CHANNEL ASSY, CREW COMPARTMENT FLOOR SUPPORT	10
COVE INSTL, PASSENGER CABIN	96G
DISCONNECT INSTL, PASSENGER SERVICE UNIT GASPER AIR	79
DISTRIBUTION SYSTEM INSTL, SECTION 52 AIR CONDITIONING	8A
DOOR ASSY, MANUAL AIR SHUTOFF	10
DOOR ASSY, MANUAL TEMPERATURE CONTROL VALVE	10
DUCT ASSY, STATION 300 TO 360 AIR DISTRIBUTION	9
DUCT INSTL, AFT CABIN AIR DISTRIBUTION	29
DUCT INSTL, CABIN SIDEWALL AIR DISTRIBUTION HOTWALL	48A
DUCT INSTL, COMPRESSED AIR CROSSOVER	31
DUCT INSTL, INDIVIDUAL AIR OUTLET CROSSOVER	17
DUCT INSTL, PASSENGER AIR DISTRIBUTION CARGO DOOR CROSSOVER	126
DUCT INSTL, SECTION 52 AIR DISTRIBUTION	11
DUCT INSTL, SECTION 57 AIR CONDITIONING DISTRIBUTION	41
DUCT INSTL, STATION 360 TO 600J AIR CONDITIONING	22
DUCT INSTL, STATION 600H TO 600K ZONE HEATING	32A
DUCT INSTL, STATION 600J INDIVIDUAL AIR OUTLET LH	13
DUCT INSTL, STATION 600J INDIVIDUAL AIR OUTLET RH	14
DUCT INSTL, STATION 600J TO 960 AIR CONDITIONING DISTRIBUTION	27A
EQUIPMENT INSTL, NAVIGATORS PANEL	5A
HEATER INSTL, FORWARD CARGO COMPARTMENT	25
HUMIDIFIER INSTL, PILOTS COCKPIT	101A
INDICATING SYSTEM INSTL, DISTRIBUTION MANIFOLD PRESSURE	34
LAVATORY ASSY, TOILET COMPARTMENT B PALLETIZED	104B
LAVATORY ASSY, TOILET COMPARTMENT E PALLETIZED	105E

 BOEING
707
PARTS CATALOG (MAINTENANCE)

SECTION

FIGURE

MANIFOLD ASSY, DISTRIBUTION INSULATED	33E
MANIFOLD INSTL, CONDITIONED AIR DISTRIBUTION.	33
OUTLET INSTL, AFT CEILING AIR	107
OUTLET INSTL, AIR CONDITIONING.	120G
OUTLET INSTL, AIR CONDITIONING.	120H
OUTLET INSTL, FLIGHT ENGINEER INDIVIDUAL AIR.	6
OUTLET INSTL, OBSERVER INDIVIDUAL AIR	3A
OUTLET INSTL, PILOT AND COPILOT INDIVIDUAL AIR.	2A
OUTLET SYSTEM INSTL, SECTION 52 INDIVIDUAL AIR.	1A
OUTLET SYSTEM INSTL, SECTION 54 INDIVIDUAL AIR.	12
OUTLET SYSTEM INSTL, SECTION 57 INDIVIDUAL AIR.	3B
OUTLET SYSTEM INSTL, SECTION 57 INDIVIDUAL AIR.	38A
PANEL ASSY, AFT LIFE RAFT COMPARTMENT AFT TRIM.	86D
PANEL ASSY, CENTER LIFE RAFT COMPARTMENT SIDE TRIM.	84D
PANEL ASSY, FORWARD LOWERED CEILING DECORATIVE.	81
PANEL INSTL, MISSION CO-ORDINATING STATION	5B
RACK INSTL, NAVIGATORS PANEL EQUIPMENT.	4
SEAL INSTL, STATION 600K FLEXIBLE	35
SERVICE UNIT INSTL, PASSENGER	65A
SERVICE UNIT INSTL, PASSENGER	73Z
SHAFT INSTL, CREW COMPARTMENT MANUAL AIR SHUTOFF	10
SYSTEMS INSTL, PASSENGER AIR DISTRIBUTION	12B
VALVE ASSY, CONTROL CABIN DUCT RELIEF	23
VALVE INSTL, GASPER SYSTEM SURGE BY PASS.	106

21-05 CONTROL SYSTEMS

BRACKET ASSY, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE CONTROL	47
BRACKET ASSY, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE DECLUTCH.	48
CONTROL AND DECLUTCH INSTL, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE	46
EQUIPMENT INSTL, STATION 335 JS ELECTRICAL.	82
FAIRING INSTL, STATION 962 TO 1000 WING TO BODY LOWER	57
INTERPHONE INSTL, FLIGHT ENGINEER	85
OVERRIDE INSTL, MAIN CABIN TEMPERATURE CONTROL VALVE MANUAL	43
PANEL INSTL, COPILOTS AUXILIARY EQUIPMENT	71
PANEL INSTL, FLIGHT ENGINEERS AUXILIARY	25R
PANEL INSTL, FLIGHT ENGINEERS AUXILIARY	25T
PANEL INSTL, FLIGHT ENGINEERS UPPER	25H
PANEL INSTL, FLIGHT ENGINEERS UPPER	25L
PANEL INSTL, PILOTS AUXILIARY EQUIPMENT	71
PULLEY INSTL, STATION 328 CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE TURNING	49
PULLEY INSTL, STATION 344 CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE TURNING	50
PULLEY INSTL, STATION 600H TO 600K CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE	52
TURNING	52
PULLEY INSTL, TEMPERATURE CONTROL VALVE MANUAL OVERRIDE IDLER	51
REGULATOR INSTL, STATION 316 COCKPIT TEMPERATURE.	61A
REGULATOR INSTL, STATION 348 MAIN CABIN TEMPERATURE	61B
SHAFT INSTL, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE STATIONARY	53
SWITCH INSTL, ALTITUDE PRESSURE	58
SWITCH INSTL, CABIN ALTITUDE PRESSURE	58A
VALVE ASSY, CABIN AIR PRESSURE SAFETY	62H
VALVE INSTL, CABIN AIR CONDITIONING TEMPERATURE CONTROL	55
VALVE INSTL, CONTROL CABIN TEMPERATURE CONTROL.	54
VALVE INSTL, STATION 1300 CABIN PRESSURIZATION OUTFLOW.	38A
VALVE INSTL, STATION 1337.70 CABIN PRESSURE THRUST RECOVERY	40
VALVE INSTL, STATION 600J PLUS 16.6 CABIN PRESSURE THRUST RECOVERY.	36
VALVE INSTL, STATION 600K CABIN PRESSURIZATION OUTFLOW.	37A
VALVE INSTL, STATION 960 CABIN PRESSURE THRUST RECOVERY	39
VALVE INSTL, STATION 960 CABIN PRESSURIZATION OUTFLOW	38

21-06 SENSING DEVICES

ELEMENT INSTL, CONTROL CABIN TEMPERATURE CONTROL SENSING.	1
SENSING INSTL, AIR DUCT COMPRESSOR PRESSURE	8
SENSOR INSTL, SECTION 54 OVERHEAD STOWAGE TEMPERATURE	7B
SENSOR INSTL, SECTION 57 OVERHEAD STOWAGE TEMPERATURE	10

21-08 GROUND SERVICE

BRACE INSTL, ACCESS DOOR.	10
DOOR ASSY, STATION 600K TO 820 ACCESS	8
DOOR INSTL, GROUND AIR CONDITIONING ACCESS.	5
DOOR INSTL, STATION 600K TO 820 ACCESS.	7
DUCT INSTL, GROUND SERVICE PNEUMATIC CONNECTION	2
FITTING INSTL, CABIN LEAKAGE TEST PRESSURIZATION.	1
JUMPER INSTL, AIR CONDITIONING ACCESS DOOR.	6
LATCH INSTL, STATION 600K PLUS 4 ACCESS DOOR.	9
LATCH INSTL, STATION 600K PLUS 7.80 ACCESS DOOR	9

CHAPTER TABLE OF CONTENTS

21-0

PAGE 2

RAF

NOV 21/01

 BOEING
707
PARTS CATALOG (MAINTENANCE)

SECTION	FIGURE
LATCH INSTL, STATION 635 ACCESS DOOR.	9
LATCH INSTL, STATION 683 ACCESS DOOR.	9
LATCH INSTL, STATION 743.50 ACCESS DOOR.	9
LATCH INSTL, STATION 812 ACCESS DOOR.	9
PAN AND DOOR INSTL, STATION 600J PLUS 5.40 PNEUMATIC GROUND SERVICE.	4
VALVE INSTL, STATION 600H PLUS 8.24 GROUND SERVICE CHECK.	3
 21-09 MISCELLANEOUS	
BLANKET INSTL, PASSENGER FLOOR HEATING.	5
BRACKET INSTL, HEATED CABIN FLOOR PANELS DISCONNECT.	10
CONDUIT INSTL, FLOOR PANELS HEATED.	10
GRILLE INSTL, FORWARD CARGO COMPARTMENT AIR OUTLET BULKHEAD.	2
PANEL INSTL, BODY STATION 1300 XPL DECOMPRESSION.	1
PANEL INSTL, FORWARD CARGO COMPARTMENT REAR WALL.	4
TERMINAL STRIP INSTL, PASSENGER FLOOR HEATING.	5B
VALVE INSTL, AFT CARGO COMPARTMENT PRESSURE RELIEF.	3
VALVE INSTL, FORWARD CARGO COMPARTMENT PRESSURE RELIEF.	2

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 01
NACELLE AND WING DUCTS

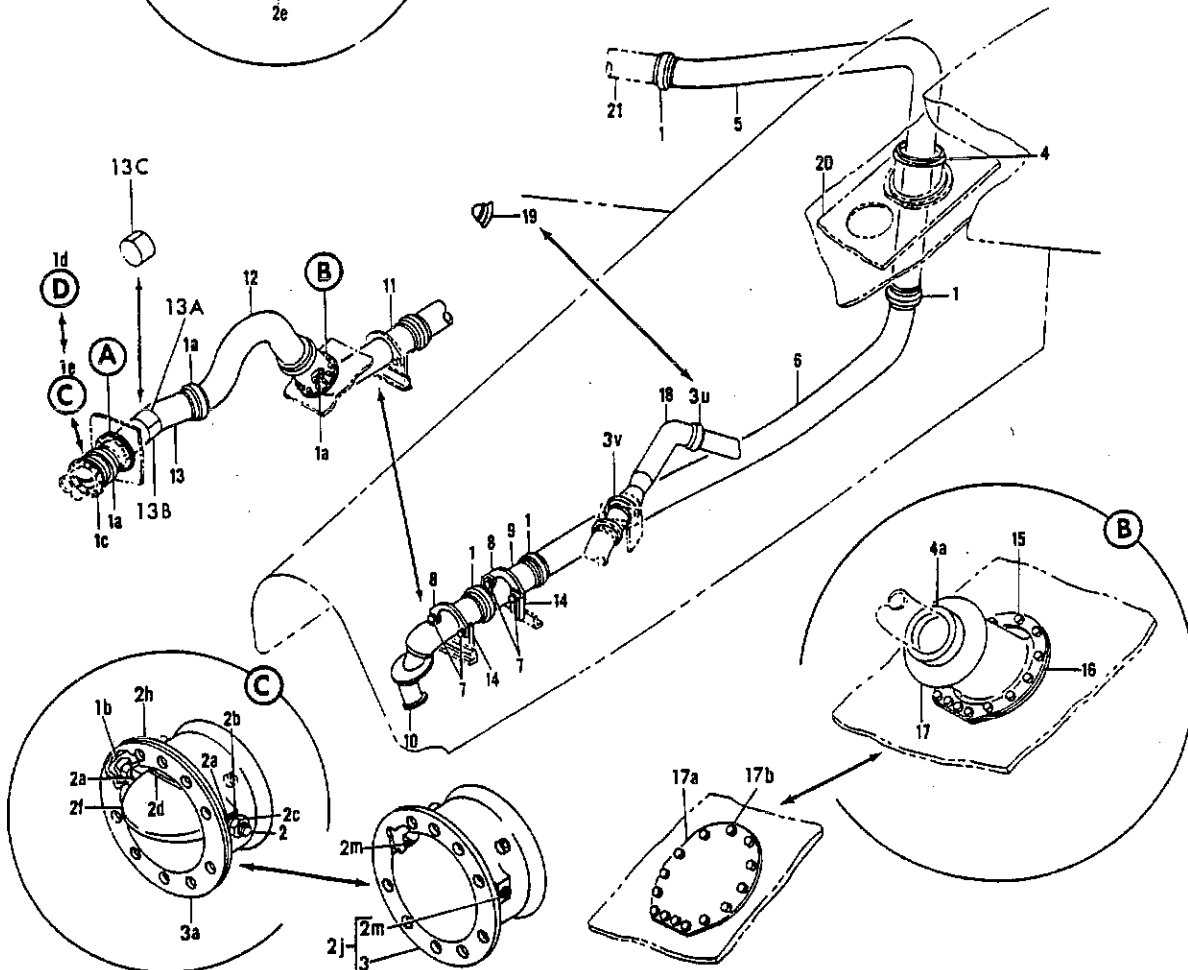


FIGURE 5. DUCT INSTL, OUTBOARD STRUT AIR CONDITIONING AND WING THERMAL ANTI-ICING (AIR CONDITIONING ONLY)

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5	65-11897-25	DUCT INSTL, OUTBOARD STRUT AIR CONDITIONING AND WING. . THERMAL ANTI-ICING (LH) (AIR CONDITIONING ONLY) (SEE 54-1, FIG. 6A, ITEM 18, 54-1, FIG. 6B, ITEM 14 AND 54-1, FIG. 6C, ITEM 19)		RF
	65-11897-26	DUCT INSTL, OUTBOARD STRUT AIR CONDITIONING AND WING. . THERMAL ANTI-ICING (RH) (AIR CONDITIONING ONLY) (SEE 54-1, FIG. 6A, ITEM 18, 54-1, FIG. 6B, ITEM 14 AND 54-1, FIG. 6C, ITEM 19)		RF
1	BACC10DP300	. COUPLING.		4
1A	BACC10DP300	. COUPLING, (RH ONLY)		3
1E	65-22777-4	. VALVE ASSY, CHECK (RH ONLY)		1
2	69-43161-1	. BOLT, SPECIAL		1
2A	AN900-3	. GASKET.		2
2B	AN960C10	. WASHER.		1
2C	NAS679C3W	. NUT		1
2D	69-43132-1	. CROSSBAR ASSY		1
	BACS12AE3C	. ATTACHING PARTS		
		. SCREW		2
2F	69-16574-2	. BUTTERFLY, PNEUMATIC.		1
2J	65-23742-2	. HOUSING ASSY, PNEUMATIC		1
2M	BACB28X3B24	. BUSHING		2
3	65-23742-3	. HOUSING		1
	65-57217-1	. FIRE STOP INSTL, STATION 136 (RH ONLY).		1
3B	65-57217-2	. SLEEVE ASSY, LH HALF.		1
3C	65-57217-3	. SLEEVE ASSY, RH HALF.		1
		. ATTACHING PARTS		
3D	NAS1103-6	. BOLT.		7
3E	NAS43HT3-3	. SPACER.		5
3F	NAS43HT3-6	. SPACER.		2
3G	BACW10P42S	. WASHER.		7
3U	BACC10DP250	. COUPLING.		1
3V	BACC10DP250	. COUPLING.		1
4	BACC10BN488LSH	. CLAMP		1
4A	BACC10BN388LSH	. CLAMP, (RH ONLY).		1
5	65-22236-1	. DUCT ASSY, OUTBOARD STRUT CABIN AIR CONDITIONING (LH ONLY)		1
5	65-22236-2	. DUCT ASSY, OUTBOARD STRUT CABIN AIR CONDITIONING (RH ONLY)		1
6	65-40098-1	. DUCT ASSY, OUTBOARD STRUT CABIN AIR CONDITIONING. . . SYSTEM		1
7	NAS1103-1W	. BOLT.		4
8	66-1819	. CLAMP ASSY, DUCT SUPPORT.		2
9	65-11897-6	. DUCT ASSY, OUTBOARD STRUT AIR CONDITIONING.		1
10	65-11897-7	. DUCT ASSY, OUTBOARD STRUT AIR CONDITIONING (LH ONLY)		1
11	65-57232-1	. DUCT ASSY, FAN ENGINE STARTER Y (RH ONLY)		1
12	65-11897-81B	. DUCT ASSY, OUTBOARD STRUT AIR CONDITIONING (RH ONLY)		1
13	65-57288-1	. DUCT ASSY, SUPPLY (RH ONLY)		1
13A	65-57288-3	. . STRIP, WEAR LH (USED WITH 65-57288-4) (USED ON. . . 65-57288-1) (OPTIONAL 65-57288-5)		1
13B	65-57288-4	. . STRIP, WEAR RH (USED WITH 65-57288-3) (USED ON. . . 65-57288-1) (OPTIONAL 65-57288-5)		1
13C	65-57288-5	. . STRIP, WEAR (USED ON 65-57288-1). (OPTIONAL TO 65-57288-3 WITH -4)		1
14	66-1818-2	. BRACKET ASSY.		2
		. ATTACHING PARTS		
	NAS623-3-2	. SCREW		10
	AN960-10L	. WASHER.		10
	69-10909-1	. SEAL INSTL, OUTBOARD MID SPAR (RH ONLY)		1
15	NAS1103-5W	. BOLT.		14
16	69-10909-5	. RING, OUTBOARD MID SPAR BACK-UP		1
17	69-10870	. SEAL, OUTBOARD STRUT CABIN AIR DUCT		1
18	65-46040	. DUCT ASSY, OUTBOARD STRUT THERMAL ANTI-ICING TO CABIN AIR CONDITIONING CROSSOVER . FOR REFERENCE TO OTHER DUCT DETAILS, SEE NHA.		1
20		SPAR INSTL, OUTBOARD NACELLE STRUT MID (FOR REF SEE . . FIG. 10)		RF
21		DUCT INSTL, FRONT SPAR STATION 408.33 TO 667.98 WING. . LEADING EDGE CABIN AIR CONDITIONING (FOR REF SEE FIG. 18)		RF

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/90

21-01-5

DETAILED PARTS LIST
21-01-5
PAGE 1

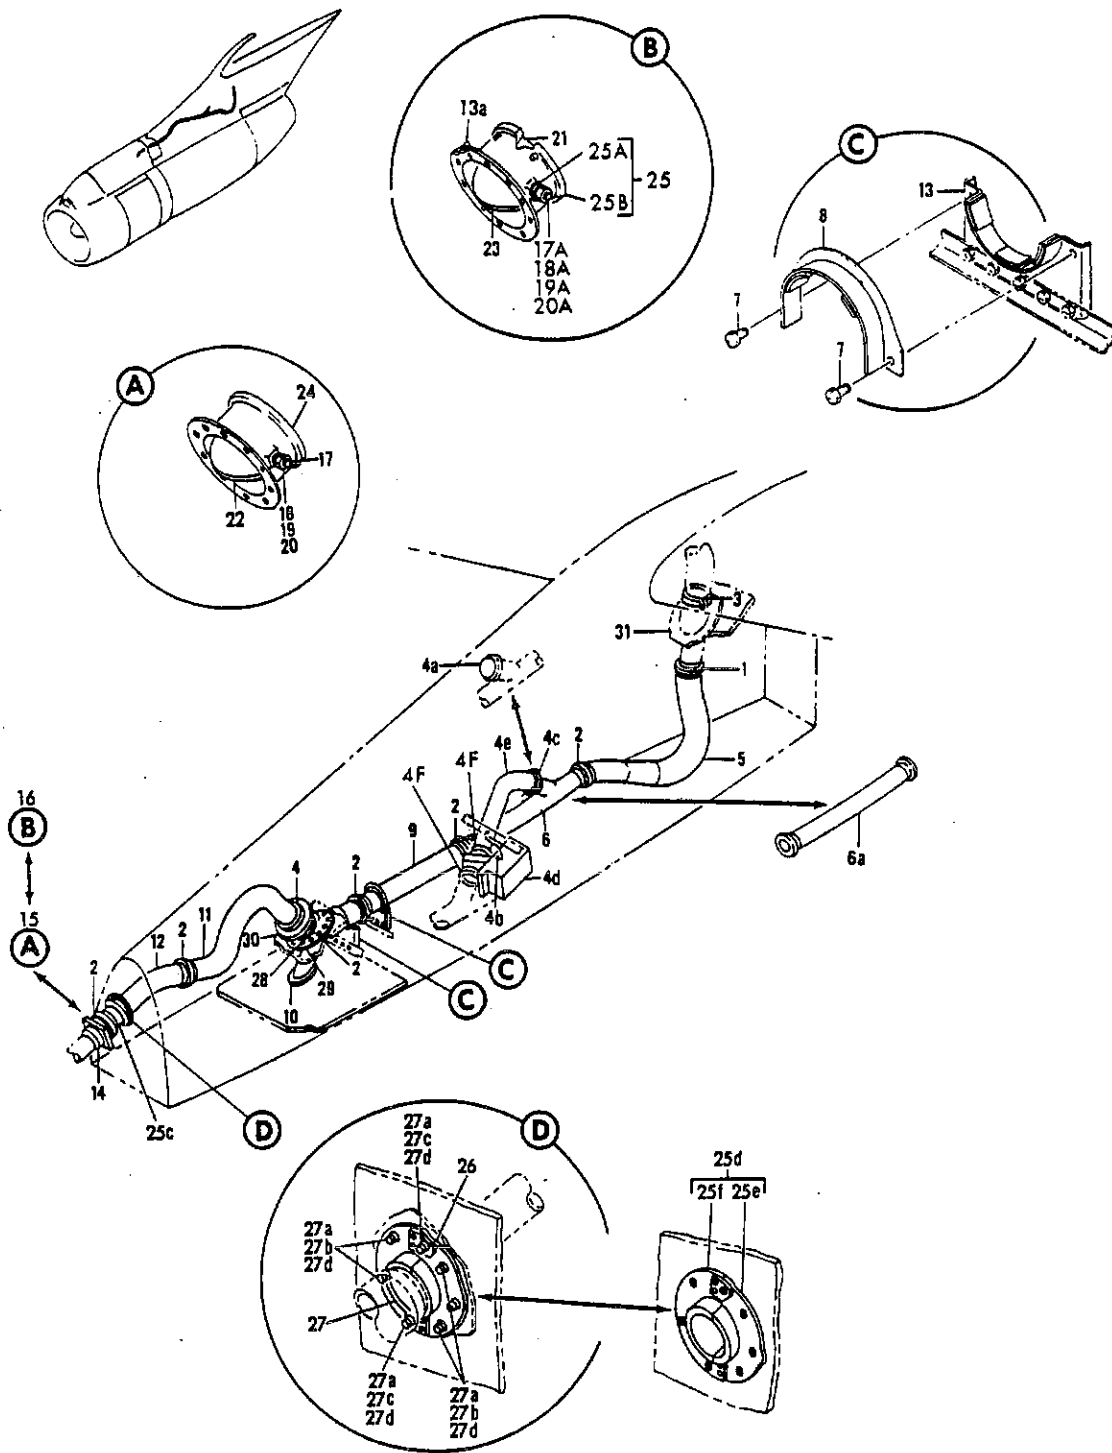


FIGURE 9. DUCT INSTL. INBOARD STRUT AIR CONDITIONING AND WING THERMAL ANTI-ICING
(AIR CONDITIONING ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
9	65-11898-13		DUCT INSTL, INBOARD STRUT AIR CONDITIONING AND WING . . THERMAL ANTI-ICING (LH) (AIR CONDITIONING ONLY) (SEE 54-1, FIG. 21A, ITEM 15, 54-1, FIG. 21B, ITEM 14 AND 54-1, FIG. 21C, ITEM 25)		RF
	65-11898-14		DUCT INSTL, INBOARD STRUT AIR CONDITIONING AND WING . . THERMAL ANTI-ICING (RH) (AIR CONDITIONING ONLY) (SEE 54-1, FIG. 21A, ITEM 15, 54-1, FIG. 21B, ITEM 14 AND 54-1, FIG. 21C, ITEM 25)		RF
1	BACC10DP400A		. COUPLING.		1
2	BACC10DP300		. COUPLING.		6
3	BACC10BN488LSH		. CLAMP		1
4	BACC10BN388LSH		. CLAMP		1
4B	MS25083-1BB6		. JUMPER ASSY		1
	NAS603-10		. ATTACHING PARTS		
	AN960C10L		. SCREW		2
	NAS679A3W		. WASHER.		2
			. NUT		2

4C	BACC10DP250		. COUPLING.		1
4D	10-3291		. VALVE, 2 1/2 IN. DIA AIR SHUTOFF.		1
4E	65-46040		. DUCT ASSY, NACELLE STRUT THERMAL ANTI-ICING TO CABIN AIR CONDITIONING CROSSOVER		1
4F	BACC10DP250		. COUPLING.		2
5	65-11773		. DUCT ASSY, INBOARD STRUT CABIN AIR.		1
6	65-11796-1		. DUCT ASSY, INBOARD STRUT CABIN AIR CONDITIONING . . . SYSTEM		1
7	NAS1103-1W		. BOLT.		2
8	66-1819		. CLAMP ASSY, DUCT SUPPORT.		2
9	65-11898-3		. DUCT ASSY, INBOARD STRUT AIR CONDITIONING		1
10	65-57232-1		. DUCT ASSY, INBOARD STRUT.		1
11	65-11898-810		. DUCT ASSY, INBOARD STRUT AIR CONDITIONING		1
12	65-57288-1		. DUCT ASSY, AIR CONDITIONING SUPPLY NACELLE STRUT. . .		1
13	66-1818-2		. BRACKET ASSY, DUCT SUPPORT.		2
	NAS603-7P		. ATTACHING PARTS		
	AN960-10L		. SCREW		5
			. WASHER.		5

16	65-22777-4		. VALVE ASSY, CHECK		1
17A	66-13694-2		. BOLT, SPECIAL CHECK VALVE		1
18A	AN900-3		. GASKET.		2
19A	AN960C10		. WASHER.		1
20A	NAS679A3W		. NUT		1
21	69-17705-1		. CROSSBAR ASSY, (USED ON 65-22777-2 AND -3).		1
21	69-43132-1		. CROSSBAR ASSY		1
	BACS12AE3C		. ATTACHING PARTS		
			. SCREW		2

23	69-16574-1		. BUTTERFLY, PNEUMATIC (MATCHED PART ORDER ONLY WITH 65-23742-1) (USED ON 65-22777-2 AND -3)		1
23	69-16574-2		. BUTTERFLY, PNEUMATIC.		1
25	65-23742-2		. HOUSING ASSY.		1
25A	BACB28X3B24		. BUSHING		2
25B	65-23742-3		. HOUSING		1
25B	65-23742-1		. HOUSING, PNEUMATIC (MATCHED PART, ORDER ONLY WITH 69-16574-1) (USED ON 65-22777-2 AND -3)		1
	65-57217-1		. FIRE STOP INSTL, NACELLE STRUT STATION 136 AIR. . . . CONDITIONING DUCT		1
26	65-57217-2		. SLEEVE ASSY, LH HALF.		1
27	65-57217-3		. SLEEVE ASSY, RH HALF.		1
			. ATTACHING PARTS		
27A	NAS1103-6		. BOLT.		7
27B	NAS43HT3-3		. SPACER.		5
27C	NAS43HT3-6		. SPACER.		2
27D	BACW10P42S		. WASHER.		7

28	NAS1103-5W		. BOLT.		14
29	69-10909-5		. RING, MIDSPAR SEAL BACK-UP.		1
30	69-10870		. SEAL, OUTBOARD STRUT CABIN AIR.		1
			. FOR REFERENCE TO OTHER DUCT DETAILS, SEE NHA.		
31			SPAR INSTL, INBOARD NACELLE STRUT MID (FOR REF SEE FIG. 4)		RF

MISSING ITEM NUMBERS ARE NOT APPLICABLE

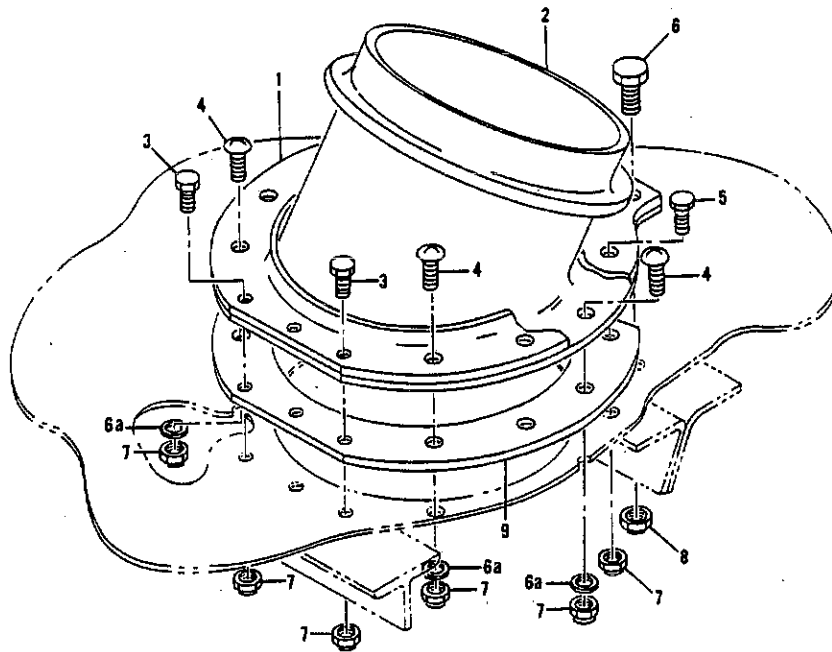
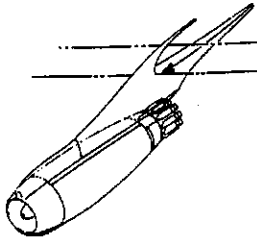


FIGURE 10. SPAR INSTL. OUTBOARD NACELLE STRUT MID (AIR CONDITIONING ONLY)

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
10	64-1062-3040	SPAR INSTL, OUTBOARD NACELLE STRUT MID (AIR CONDITIONING ONLY) (SEE 54-1, FIG. 9, ITEM 45)								RF
1	6-83687	. FLANGE, OUTBOARD STRUT LOW PRESSURE AIR DUCT SEAL . .								1
2	9-66516-1	. SEAL, 4.0 DUCT TO MID-SPAR. ATTACHING PARTS								1
3	NAS1103-6W	. BOLT.								3
4	NAS221-10	. SCREW								6
5	NAS1103-7W	. BOLT.								2
6	NAS1104-7W	. BOLT.								4
7	NAS679A3W	. NUT								11
8	NAS679A4W	. NUT								4
9	66-2103	. DOUBLER, OUTBOARD STRUT LOW PRESSURE AIR DUCT FOR REFERENCE TO OTHER SPAR DETAILS, SEE NHA.								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

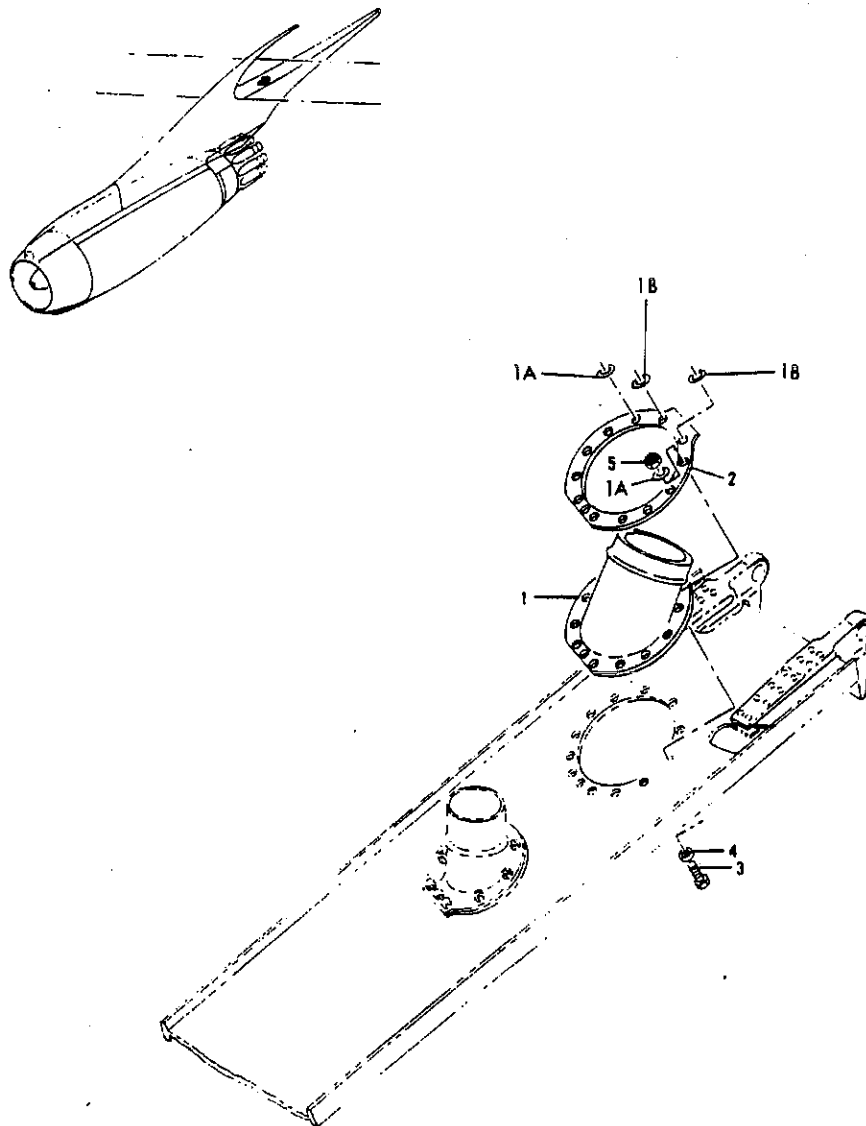


FIGURE 11. SPAR INSTL, INBOARD NACELLE STRUT AND (AIR CONDITIONING ONLY)

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
11	64-1065-3064	SPAR INSTL, INBOARD NACELLE STRUT MID (AIR CONDITIONING ONLY) (SEE 54-1, FIG. 24, ITEM 55)								RF
1	9-66516-2	. SEAL, 4.0 DUCT TO MID-SPAR.								1
2	60-3097	. FLANGE, INBOARD STRUT LOW PRESSURE AIR DUCT SEAL.								1
3	AN3-4A	ATTACHING PARTS								13
4	AN960D10L	. BOLT.								13
5	AN364-1032	. WASHER.								13
		. NUT								13
		-----*								
		. FOR REFERENCE TO OTHER SPAR DETAILS, SEE NHA.								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

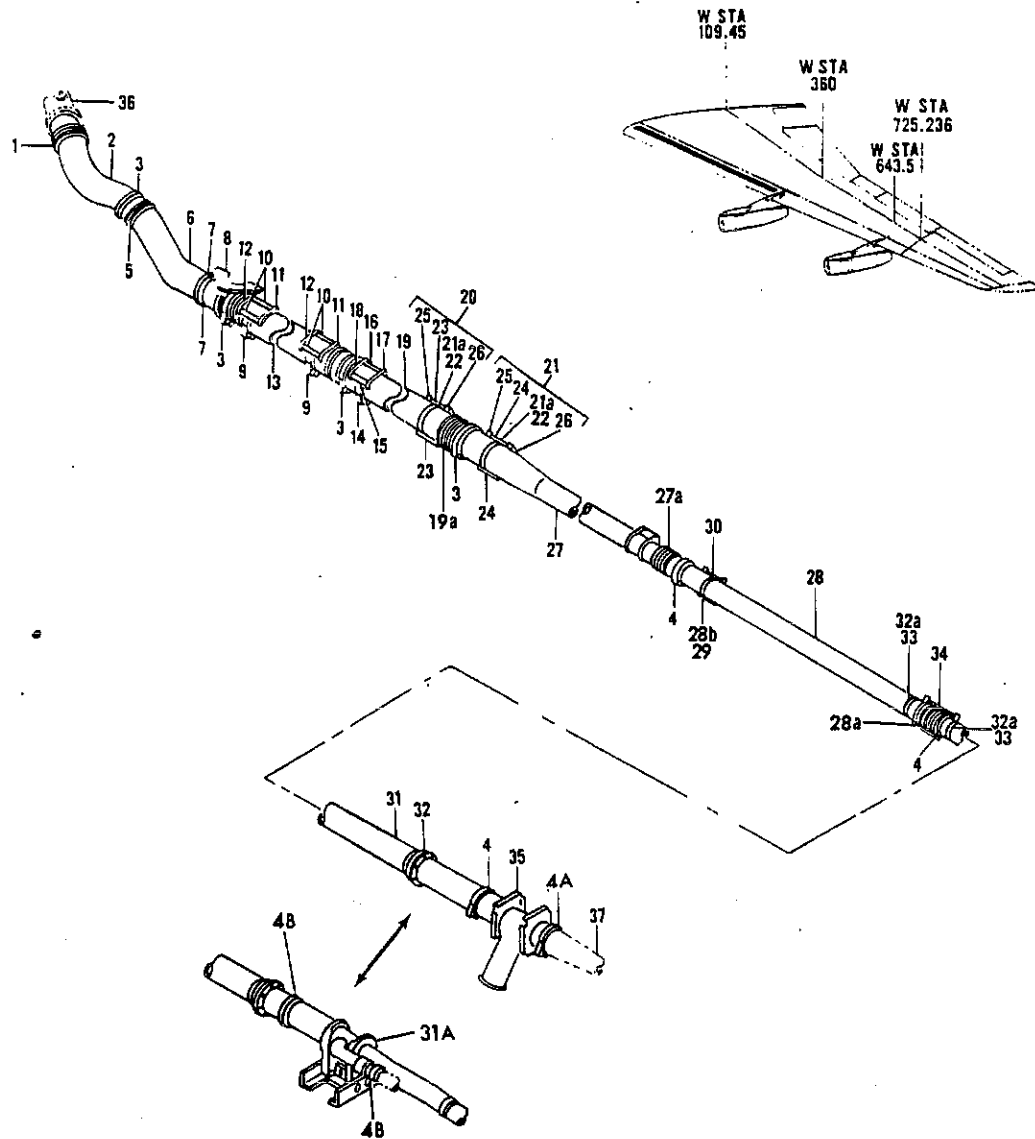


FIGURE 17. DUCT INSTL, WING LEADING EDGE CABIN AIR

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
17	65-32550-1		DUCT INSTL, WING LEADING EDGE CABIN AIR (LH) (SEE 57-3, FIG. 1, ITEM 8A)		RF
	65-32550-2		DUCT INSTL, WING LEADING EDGE CABIN AIR (RH) (SEE 57-3, FIG. 1, ITEM 8A)		RF
1	69-8884-1		. SEAL INSTL, CABIN AIR DUCT BODY (LH ONLY) (SEE FIG. 19)		1
1	69-8884-2		. SEAL INSTL, CABIN AIR DUCT BODY (RH ONLY) (SEE FIG. 19)		1
2	65-7148-9		. DUCT ASSY, WING TO CROSSOVER COMPRESSED AIR (LH ONLY)		1
2	65-7148-10		. DUCT ASSY, WING TO CROSSOVER COMPRESSED AIR (RH ONLY)		1
3	BACC10DP600A		. COUPLING.		4
4A	BACC10DP500A		. COUPLING.		1
5	65-7051-1		. SEAL INSTL, FRONT SPAR STATION 16.75 AIR CONDITIONING DUCT (LH ONLY) (SEE FIG. 20)		1
5	65-7051-2		. SEAL INSTL, FRONT SPAR STATION 16.75 AIR CONDITIONING DUCT (RH ONLY) (SEE FIG. 20)		1
6	65-7147-1		. DUCT ASSY, AIR CONDITIONING (LH ONLY)		1
6	65-7147-2		. DUCT ASSY, AIR CONDITIONING (RH ONLY)		1
7	69-6175		. . SUPPORT ASSY, FRONT SPAR STATION 57.91 COMPRESSED AIR DUCT		2
			ATTACHING PARTS		
	AN3-14A		. . BOLT.		4
	NAS73-3E103		. . BUSHING		4
	AN960D10L		. . WASHER.		4
	BACN10BY53W		. . NUT		4
8	65-7297-1		. ANCHOR INSTL, FRONT SPAR STATION 57.91 AIR.		1
8	65-7297-2		. ANCHOR INSTL, FRONT SPAR STATION 57.91 AIR.		1
	65-7096-1		. SUPPORT INSTL, FRONT SPAR STATION 68.43 AIR.		1
	65-7096-2		. SUPPORT INSTL, FRONT SPAR STATION 68.43 AIR.		1
	65-7096-3		. SUPPORT INSTL, FRONT SPAR STATION 117.78 WING LEADING EDGE AIR CONDITIONING DUCT (LH ONLY)		1
	65-7096-4		. SUPPORT INSTL, FRONT SPAR STATION 117.78 WING LEADING EDGE AIR CONDITIONING DUCT (RH ONLY)		1
9	BACC10AD606A		. . CLAMP		1
	BACW10P186C		ATTACHING PARTS		
	NAS679C4W		. . WASHER.		2
			. . NUT		2
10	69-5711-6		. . BRACKET, WING LEADING EDGE COMPRESSED AIR DUCT. . .		2
			SUPPORT		
	AN3-4A		ATTACHING PARTS		
	AN960D10L		. . BOLT.		8
	NAS679A3W		. . WASHER.		8
			. . NUT		8
11	69-5711-1		. . BRACKET, WING LEADING EDGE COMPRESSED AIR DUCT. . .		1
12	69-5711-2		. . BRACKET, WING LEADING EDGE COMPRESSED AIR DUCT. . .		1
			SUPPORT		
	NAS517-3-4		ATTACHING PARTS		
	AN3-4A		. . SCREW		1
	AN960D10L		. . BOLT.		7
	NAS679A3W		. . WASHER.		8
			. . NUT		8
13	65-7043-9		. DUCT ASSY, AIR CONDITIONING		1
	65-7096-5		. SUPPORT INSTL, FRONT SPAR STATION 135.44 WING LEADING EDGE AIR CONDITIONING DUCT (LH ONLY)		1
	65-7096-6		. SUPPORT INSTL, FRONT SPAR STATION 135.44 WING LEADING EDGE AIR CONDITIONING DUCT (RH ONLY)		1
14	BACC10AD606A		. . CLAMP		1
	BACW10P186C		ATTACHING PARTS		
	NAS679C4W		. . WASHER.		2
			. . NUT		2
15	69-5711-6		. . BRACKET, WING LEADING EDGE COMPRESSED AIR DUCT. . .		1
16	69-5711-7		. . BRACKET, WING LEADING EDGE COMPRESSED AIR DUCT. . .		1
			SUPPORT		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
17	AN3-4A AN960D10L NAS679A3W	ATTACHING PARTS .. BOLT. WASHER. NUT.		8 8 8
17	69-5711-1	.. BRACKET, WING LEADING EDGE COMPRESSED AIR DUCT. . . SUPPORT (LH ONLY)		1
17	69-5711-2	.. BRACKET, WING LEADING EDGE COMPRESSED AIR DUCT. . . SUPPORT (RH ONLY)		1
18	69-5711-9	.. BRACKET, WING LEADING EDGE COMPRESSED AIR DUCT. . . SUPPORT (LH ONLY)		1
18	69-5711-10	.. BRACKET, WING LEADING EDGE COMPRESSED AIR DUCT. . . SUPPORT (RH ONLY)		1
	NAS517-3-4 AN3-4A AN960D10L NAS679A3W	ATTACHING PARTS .. SCREW. BOLT. WASHER. NUT.		1 7 8 8
19	65-32554-2	.. DUCT ASSY, CABIN AIR.		1
19A	10-3273-9	.. DUCT, FLEXIBLE. (OPTIONAL BAC SPEC NO. 10-3273)		1
19A	10-3273	.. DUCT, FLEXIBLE. (OPTIONAL TO BAC SPEC NO. 10-3273-9)		1
20	65-32552-1	.. BRACKET INSTL, CABIN AIR DUCT (LH ONLY)		1
20	65-32552-2	.. BRACKET INSTL, CABIN AIR DUCT (RH ONLY)		1
21	65-32552-3	.. BRACKET INSTL, CABIN AIR DUCT (LH ONLY)		1
21	65-32552-4	.. BRACKET INSTL, CABIN AIR DUCT (RH ONLY)		1
21A	Z1200-02	.. NUT, (V72962) (OPTIONAL).		1
22	BACC10AD606A	.. CLAMP		1
	BACH10P186C NAS679A4W	ATTACHING PARTS .. WASHER. NUT.		2 2
23	65-5711-4	.. BRACKET, COMPRESSED AIR DUCT SUPPORT. (USED ON 65-32552-1 AND -2)		2
24	65-5711-5	.. BRACKET, COMPRESSED AIR DUCT SUPPORT. (USED ON 65-32552-3 AND -4)		2
	AN3-4A AN960PD10L NAS679A3W	ATTACHING PARTS .. BOLT. WASHER. NUT.		8 8 8
25	69-25740-1	.. BRACKET, CABIN AIR SUPPLY DUCT SUPPORT.		1
26	69-25740-2	.. BRACKET, CABIN AIR SUPPLY DUCT SUPPORT.		1
	AN4-4A AN4-5A AN960PD416 AN960PD416L NAS679A4W	ATTACHING PARTS .. BOLT, (USED WITH 69-25740-1). BOLT, (USED WITH 69-25740-2). WASHER, (USED WITH 69-25740-2). WASHER. NUT.		4 4 4 8 8
	65-32551-1	.. ANCHOR INSTL, FRONT SPAR STATION 261.12 CABIN AIR . . DUCT (LH ONLY)		1
	65-32551-2	.. ANCHOR INSTL, FRONT SPAR STATION 261.12 CABIN AIR . . DUCT (RH ONLY)		1
27	65-32555-1	.. DUCT ASSY, FRONT SPAR STATION 201.50 TO 270.10. . . CABIN AIR (LH ONLY)		1
27	65-32555-2	.. DUCT ASSY, FRONT SPAR STATION 201.50 TO 270.10. . . CABIN AIR (RH ONLY)		1
	AN3-5A AN3-6A AN960PD10 BACS40A16-5B BACS40B16-5B	ATTACHING PARTS .. BOLT. BOLT. WASHER. SHIM. SHIM.		8 4 16 AR AR
27A	10-3273-11	.. DUCT, FLEXIBLE. (OPTIONAL BAC SPEC NO. 10-3273-5)		1
27A	10-3273-5	.. DUCT, FLEXIBLE. (OPTIONAL TO BAC SPEC NO. 10-3273-11)		1
28	65-32554-1	.. DUCT ASSY, CABIN AIR.		1
28A	10-3273-11	.. DUCT, FLEXIBLE. (OPTIONAL BAC SPEC NO. 10-3273-5)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
17 28A	10-3273-5	. .	DUCT, FLEXIBLE. (OPTIONAL TO BAC SPEC NO. 10-3273-11)		1
	65-32552-5	. .	BRACKET INSTL, CABIN AIR DUCT (LH ONLY)		1
	65-32552-6	. .	BRACKET INSTL, CABIN AIR DUCT (RH ONLY)		1
28B	21200-02	. .	NUT, (V72962) (OPTIONAL).		1
29	BACC10AD506A	. .	CLAMP		1
	69-1479-2000	. .	ATTACHING PARTS SPACER, AIR CONDITIONING DUCT SLIDING SUPPORT . . . WASHER		2
	NAS679A4W	. .	NUT		2
30	65-32553-6	. .	BRACKET ASSY, CABIN AIR DUCT SUPPORT. ATTACHING PARTS		1
	AN3-5A	. .	BOLT.		8
	BACS40A16-98	. .	SHIM.		AR
	BACS40B16-98	. .	SHIM.		AR
	AN96OPD10	. .	WASHER.		12
	NAS679A3W	. .	NUT		8
31	65-32556-1	. .	DUCT ASSY, FRONT SPAR STATION 338.20 TO 394.76 CABIN AIR (LH ONLY)		1
31	65-32556-2	. .	DUCT ASSY, FRONT SPAR STATION 338.20 TO 394.76 CABIN AIR (RH ONLY)		1
32	5-88701-3001	. .	SEAL INSTL, FRONT SPAR STATION 382 AIR CONDITIONING DUCT (LH ONLY) (SEE FIG. 20)		1
32	5-88701-3002	. .	SEAL INSTL, FRONT SPAR STATION 382 AIR CONDITIONING DUCT (RH ONLY) (SEE FIG. 20)		1
	65-32552-7	. .	BRACKET INSTL, CABIN AIR DUCT (LH ONLY)		1
	65-32552-8	. .	BRACKET INSTL, CABIN AIR DUCT (RH ONLY)		1
32A	21200-02	. .	NUT, (V72962) (OPTIONAL).		2
33	BACC10AD506A	. .	CLAMP		2
	69-1479-2000	. .	ATTACHING PARTS SPACER, AIR CONDITIONING DUCT SLIDING SUPPORT . . . WASHER		4
	NAS679A4W	. .	NUT		4
34	65-32553-4	. .	BRACKET ASSY, CABIN AIR DUCT SUPPORT. (LH ONLY)		1
34	65-32553-5	. .	BRACKET ASSY, CABIN AIR DUCT SUPPORT. (RH ONLY)		1
	AN3-5A	. .	ATTACHING PARTS BOLT.		8
	BACS40A16-98	. .	SHIM.		AR
	BACS40B16-98	. .	SHIM.		AR
	AN96OPD10	. .	WASHER.		8
	NAS679A3W	. .	NUT		8
35	5-88492-3001	. .	ANCHOR INSTL, FRONT SPAR STATION 400 AIR CONDITIONING DUCT (LH ONLY) (SEE FIG. 23)		1
35	5-88492-3002	. .	ANCHOR INSTL, FRONT SPAR STATION 400 AIR CONDITIONING DUCT (RH ONLY) (SEE FIG. 23)		1
36			DUCT INSTL, COMPRESSED AIR CROSSOVER (FOR REF SEE 21-4, FIG. 30 AND 31)		RF
37			DUCT INSTL, FRONT SPAR STATION 408.33 TO 667.98 WING. LEADING EDGE CABIN AIR CONDITIONING (FOR REF SEE FIG. 18)		RF
MISSING ITEM NUMBERS ARE NOT APPLICABLE					


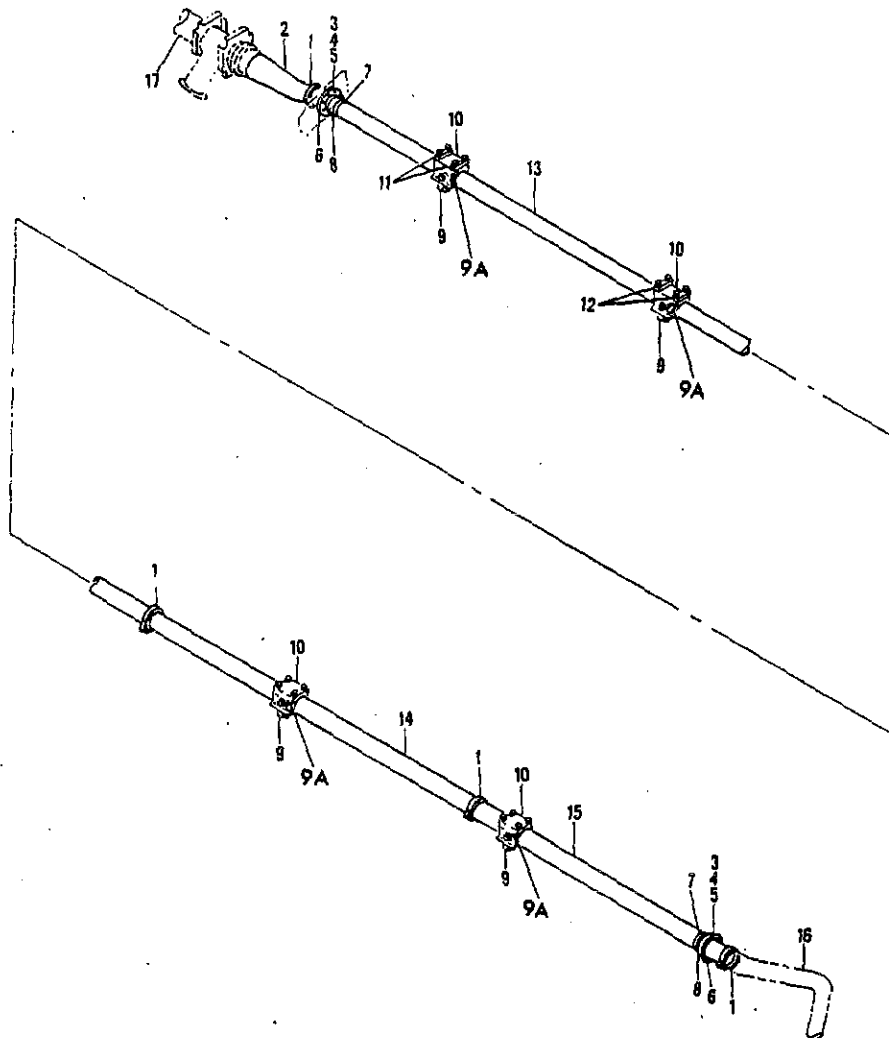


FIGURE 18. DUCT INSTL, FRONT SPAR STATION 408.33 to 677.98 WING LEADING EDGE CABIN AIR CONDITIONING

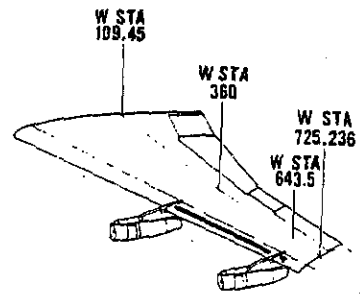

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
18	65-20860-1	DUCT INSTL, FRONT SPAR STATION 408.33 TO 667.98 WING. . LEADING EDGE CABIN AIR CONDITIONING (LH) (SEE 57-3, FIG. 1, ITEM 8B)		RF
	65-20860-2	DUCT INSTL, FRONT SPAR STATION 408.33 TO 667.98 WING. . LEADING EDGE CABIN AIR CONDITIONING (RH) (SEE 57-3, FIG. 1, ITEM 8B)		RF
1	BACC10DP300A	. CLAMP		4
2	65-20751-1	. DUCT ASSY, FRONT SPAR STATION 408.33 TO 420.98 WING . LEADING EDGE CABIN AIR (LH ONLY)		1
2	65-20751-2	. DUCT ASSY, FRONT SPAR STATION 408.33 TO 420.98 WING . LEADING EDGE CABIN AIR (RH ONLY)		1
3	BACB3ONE3-4	. BOLT		16
4	AN960PD10L	. WASHER		32
5	BACN10JC3	. NUT		16
6	66-12493-1	. RING, CABIN AIR DUCT VAPOR SEAL BACK UP		2
7	BACC10BN38BLR	. CLAMP		2
8	10-3274-16	. SEAL, FLEXIBLE PRESSURE		2
	65-20878-1	. BRACKET INSTL, WING LEADING EDGE AIR CONDITIONING . . DUCT SUPPORT		1
	65-20878-2	. BRACKET INSTL, WING LEADING EDGE AIR CONDITIONING . . DUCT SUPPORT		1
	65-20878-3	. BRACKET INSTL, WING LEADING EDGE AIR CONDITIONING . . DUCT SUPPORT		1
	65-20878-4	. BRACKET INSTL, WING LEADING EDGE AIR CONDITIONING . . DUCT SUPPORT		1
9	BACC10AD300W	. . CLAMP (OPTIONAL TO BACC10AD300B)		1
9	BACC10AD300B	. . CLAMP (OPTIONAL BACC10AD300W)		1
	69-1479-2000	ATTACHING PARTS		
	NAS679A4W	. . WASHER, AIR CONDITIONING SLIDING SUPPORT SPACER NUT		2 2
10	65-20878-6	. . BRACKET ASSY, WING LEADING EDGE AIR CONDITIONING. . DUCT SUPPORT ATTACHING PARTS		1
	AN3-11A	. . BOLT, (USED ON 65-20878-1 AND -2)		2
	AN3-10A	. . BOLT, (USED ON 65-20878-1 AND -2)		2
	AN3-4A	. . BOLT, (USED ON 65-20878-3 AND -4)		4
	AN960PD10	. . WASHER		4
	BACN10FX22	. . NUT		4
11	66-12651-4	. . SPACER, WING LEADING EDGE CABIN AIR DUCT SUPPORT. . BRACKET (USED ON 65-20878-1)		2
12	66-12651-3	. . SPACER, WING LEADING EDGE CABIN AIR DUCT SUPPORT. . BRACKET (USED ON 65-20878-2)		2
13	65-19879-1	. DUCT ASSY, FRONT SPAR STATION 420.58 TO 518.48 CABIN AIR CONDITIONING (LH ONLY)		1
13	65-19879-2	. DUCT ASSY, FRONT SPAR STATION 420.58 TO 518.48 CABIN AIR CONDITIONING (RH ONLY)		1
14	69-27061-2	. DUCT ASSY, WING LEADING EDGE ENGINE START		1
15	65-19884-1	. DUCT ASSY, WING LEADING EDGE CABIN AIR CONDITIONING .		1
16		DUCT INSTL, OUTBOARD STRUT AIR CONDITIONING AND THERMAL ANTI-ICING (FOR REF SEE FIG. 5)		RF
17		DUCT INSTL, WING LEADING EDGE CABIN AIR CONDITIONING. . (FOR REF SEE FIG. 16 AND 17)		RF
MISSING ITEM NUMBERS ARE NOT APPLICABLE				


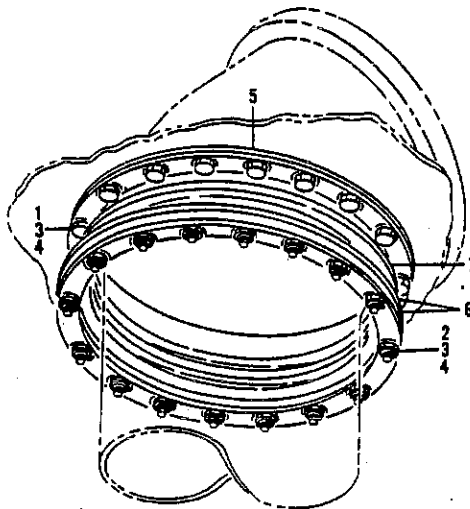


FIGURE 19. SEAL INSTL, CABIN AIR DUCT BODY

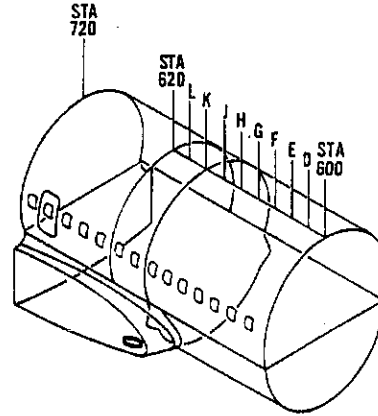

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
19	69-8884-1		SEAL INSTL, CABIN AIR DUCT BODY (LH) (SEE FIG. 12, . . . ITEM 35, FIG. 13, ITEM 32, FIG. 16, ITEM 1 AND FIG. 17, ITEM 1)		RF
	69-8884-2		SEAL INSTL, CABIN AIR DUCT BODY (RH) (SEE FIG. 14, . . . ITEM 38, FIG. 15, ITEM 34, FIG. 16, ITEM 1 AND FIG. 17, ITEM 1)		RF
1	AN3-5A		. BOLT.		16
2	AN3-6A		. BOLT.		16
3	AN960D10L		. WASHER.		32
4	BACN108Y53W		. NUT		32
5	69-19050		. RING, SEAL CABIN AIR DUCT BACK UP		1
6	69-19050-1		. RING, SEAL CABIN AIR DUCT BACK UP		2
7	10-3274-13		. SEAL, FLEXIBLE PRESSURE	0103	1
7	10-3274-47		. SEAL, FLEXIBLE PRESSURE	0499	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

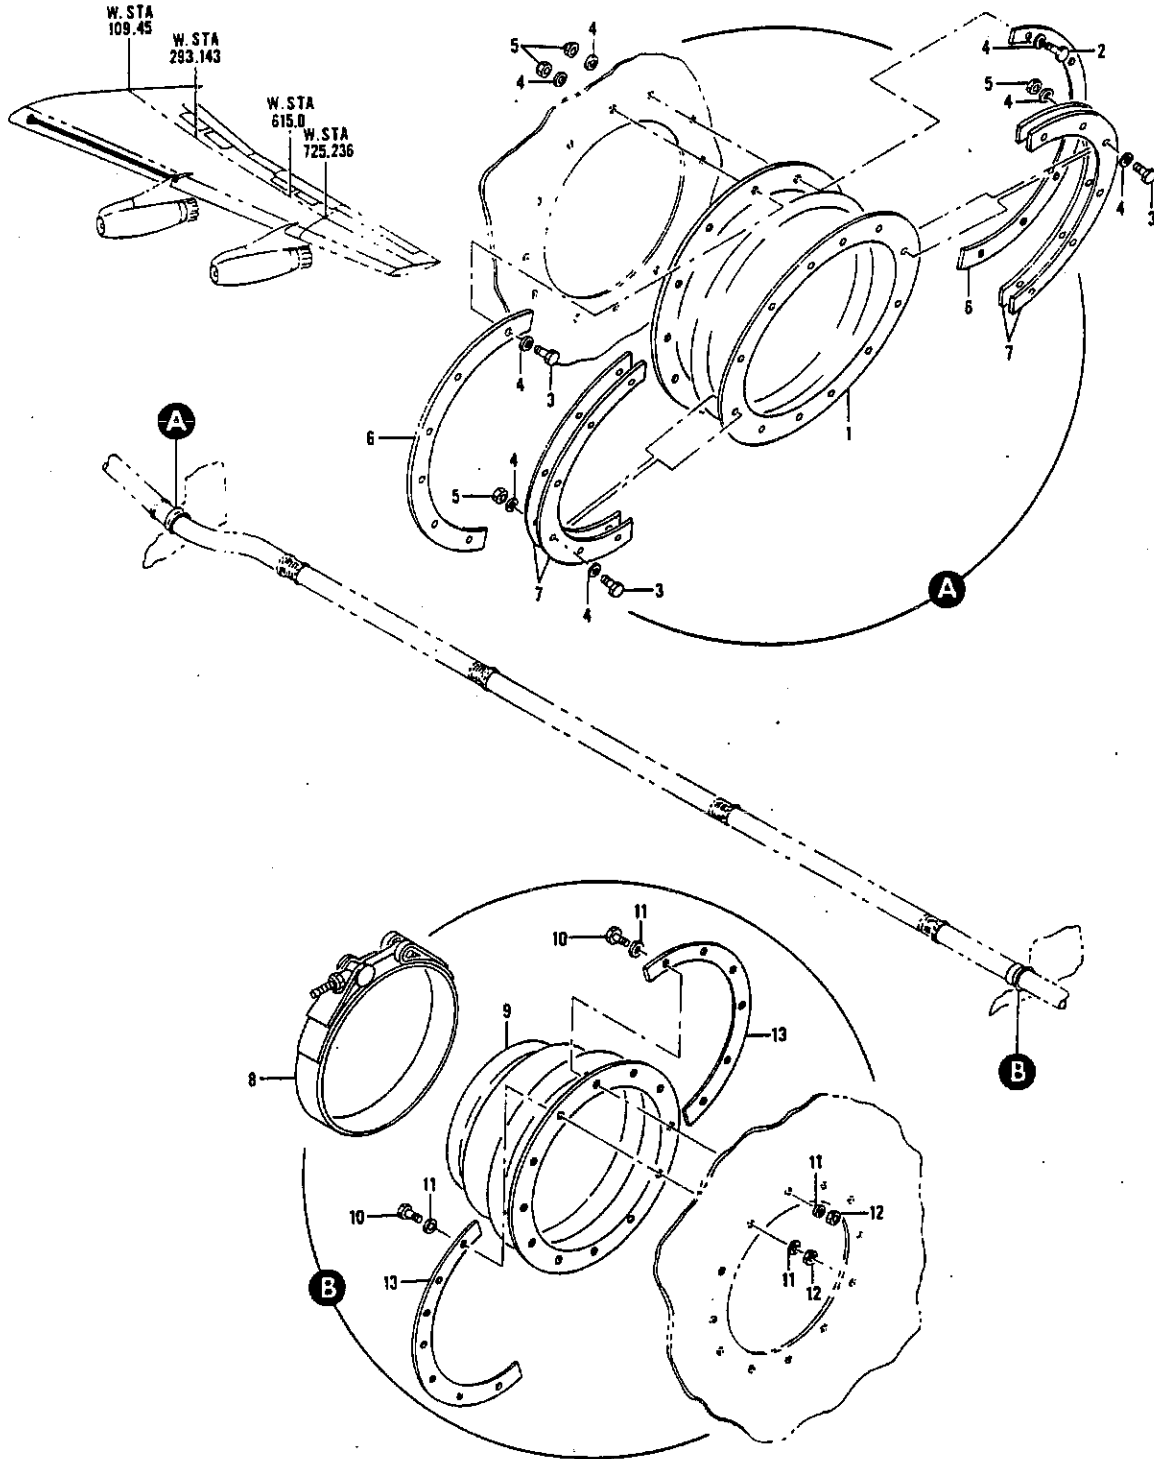


FIGURE 20. SEAL INSTL, FRONT SPAR STATION 16, 75 AND 382 AIR CONDITIONING DUCT



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
20		SEAL INSTL, FRONT SPAR STATIONS 16.75 AND 382 AIR . . . CONDITIONING DUCT		
	65-7051-1	. SEAL INSTL, FRONT SPAR STATION 16.75 AIR CONDITIONING DUCT (LH) (SEE FIG. 12, ITEM 16, FIG. 13, ITEM 16, FIG. 16, ITEM 5 AND FIG. 17, ITEM 5)		RF
	65-7051-2	. SEAL INSTL, FRONT SPAR STATION 16.75 AIR CONDITIONING DUCT (RH) (SEE FIG. 14, ITEM 19, FIG. 15, ITEM 14, FIG. 16, ITEM 5, AND FIG. 17, ITEM 5)		RF
1	10-3274-2	. . SEAL, FLEXIBLE PRESSURE ATTACHING PARTS		1
2	AN3-4A	. . BOLT.		12
3	AN3-5A	. . BOLT.		12
4	AN960D10L	. . WASHER.		48
5	AN364-1032	. . NUT		24
6	9-63045-2000	. . RING, AIR CONDITIONING DUCT VAPOR SEAL BACKUP . . .		2
7	9-63045-2002	. . RING, AIR CONDITIONING DUCT VAPOR SEAL BACKUP . . .		4
	5-88701-3001	. SEAL INSTL, FRONT SPAR STATION 382 AIR CONDITIONING DUCT (LH) (SEE FIG. 12, ITEM 15, FIG. 13, ITEM 15, FIG. 16, ITEM 17 AND FIG. 17, ITEM 32)		RF
	5-88701-3002	. SEAL INSTL, FRONT SPAR STATION 382 AIR CONDITIONING DUCT (RH) (SEE FIG. 14, ITEM 18, FIG. 15, ITEM 14, FIG. 16, ITEM 17 AND FIG. 17, ITEM 32)		RF
8	BACC10BN588LR	. . CLAMP		1
9	10-3274-1	. . SEAL, FLEXIBLE PRESSURE ATTACHING PARTS		1
10	AN3-4A	. . BOLT.		12
11	AN960D10L	. . WASHER.		24
12	NAS679A3W	. . NUT		12
13	9-63045-1	. . RING, AIR CONDITIONING DUCT VAPOR SEAL BACKUP . . .		2
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

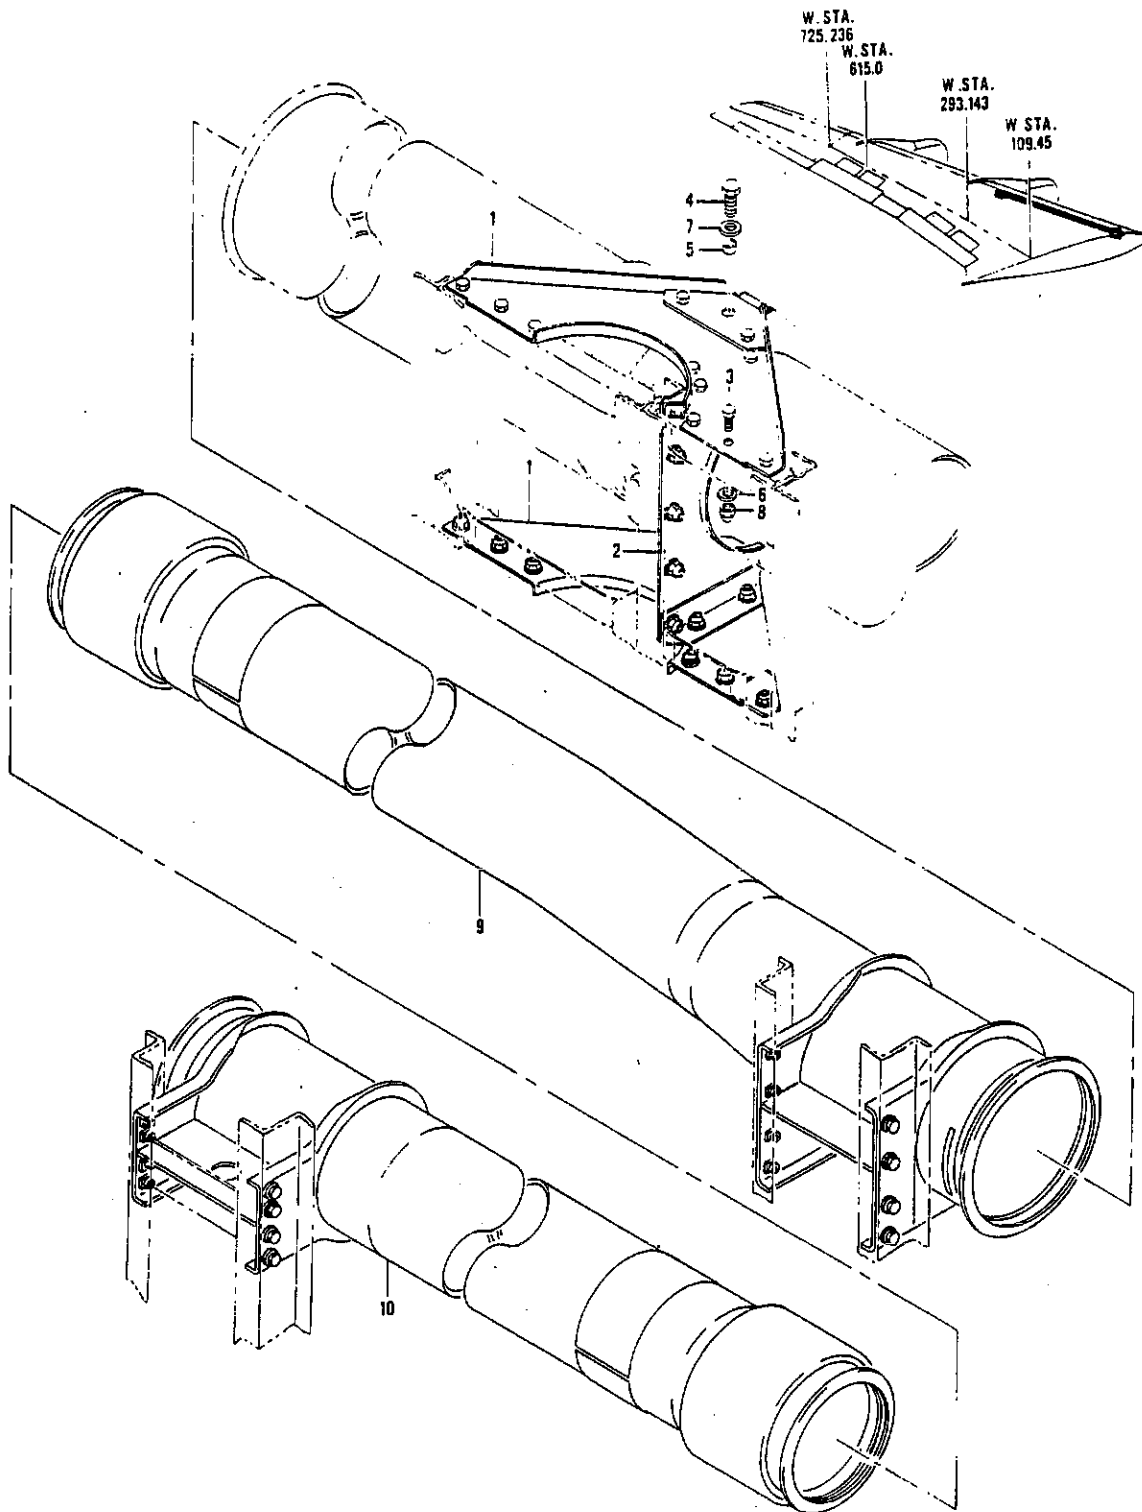


FIGURE 22. ANCHOR INSTL, FRONT SPAR AIR CONDITIONING DUCT

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
22	65-7297-1		ANCHOR INSTL, FRONT SPAR AIR CONDITIONING DUCT.		RF
			. ANCHOR INSTL, FRONT SPAR STATION 57.91 AIR.		
			CONDITIONING DUCT (LH) (SEE FIG. 12, ITEM 20, FIG. 13, ITEM 20, FIG. 16, ITEM 8 AND FIG. 17, ITEM 9)		
	65-7297-2		. ANCHOR INSTL, FRONT SPAR STATION 57.91 AIR.		RF
			CONDITIONING DUCT (RH) (SEE FIG. 14, ITEM 23, FIG. 15, ITEM 22, FIG. 16, ITEM 8 AND FIG. 17, ITEM 9)		
1	69-6126		. . BRACKET ASSY, FRONT SPAR STATION 57.91 COMPRESSED .		2
			AIR DUCT ANCHOR		
2	69-6157		. . BRACKET ASSY, STATION 57.91 COMPRESSED AIR DUCT . .		1
			ATTACHING PARTS		
3	AN3-5A		. . BOLT.		27
4	AN4HTA		. . BOLT.		2
5	NAS73-4E006		. . BUSHING		2
6	AN960D10		. . WASHER.		39
7	AN960C416		. . WASHER.		2
8	NAS679A3W		. . NUT		27
			-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					


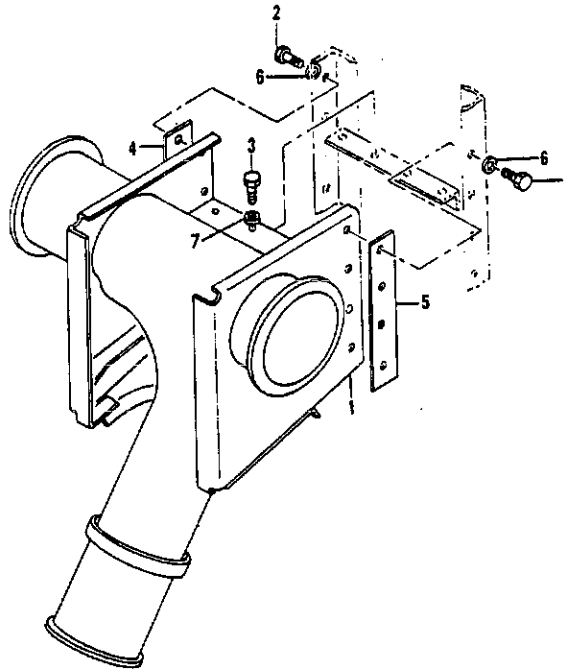


FIGURE 23. ANCHOR INSTL, FRONT SPAR STATION 400 AIR CONDITIONING DUCT

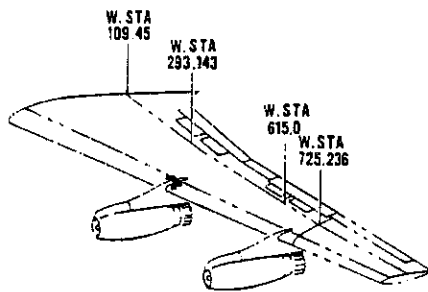

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
23	5-88492-3001	ANCHOR INSTL, FRONT SPAR STATION 400 AIR CONDITIONING .								RF
		DUCT (LH) (SEE FIG. 12, 13, ITEM 18, FIG. 16,								
		ITEM 17 AND FIG. 17, ITEM 35)								
	5-88492-3002	ANCHOR INSTL, FRONT SPAR STATION 400 AIR CONDITIONING .								RF
		DUCT (RH) (SEE FIG. 14, ITEM 21, FIG. 15, ITEM								
		20, FIG. 16, ITEM 17 AND FIG. 17, ITEM 35)								
1	5-88494-3001	. ANCHOR ASSY, FRONT SPAR STATION 400 AIR CONDITIONING								1
		DUCT (LH ONLY)								
	5-88494-3002	. ANCHOR ASSY, FRONT SPAR STATION 400 AIR CONDITIONING								1
		DUCT (RH ONLY)								
		ATTACHING PARTS								
2	AN4-5A	. BOLT.								8
3	AN3-4A	. BOLT.								4
4	BACS40A16-106	. SHIM, (OPTIONAL BACS40B16-106).								AR
5	BACS40B16-106	. SHIM.								AR
6	AN960D416L	. WASHER.								8
7	AN960D10L	. WASHER.								4
		-----*								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 02
FUSELAGE SYSTEMS

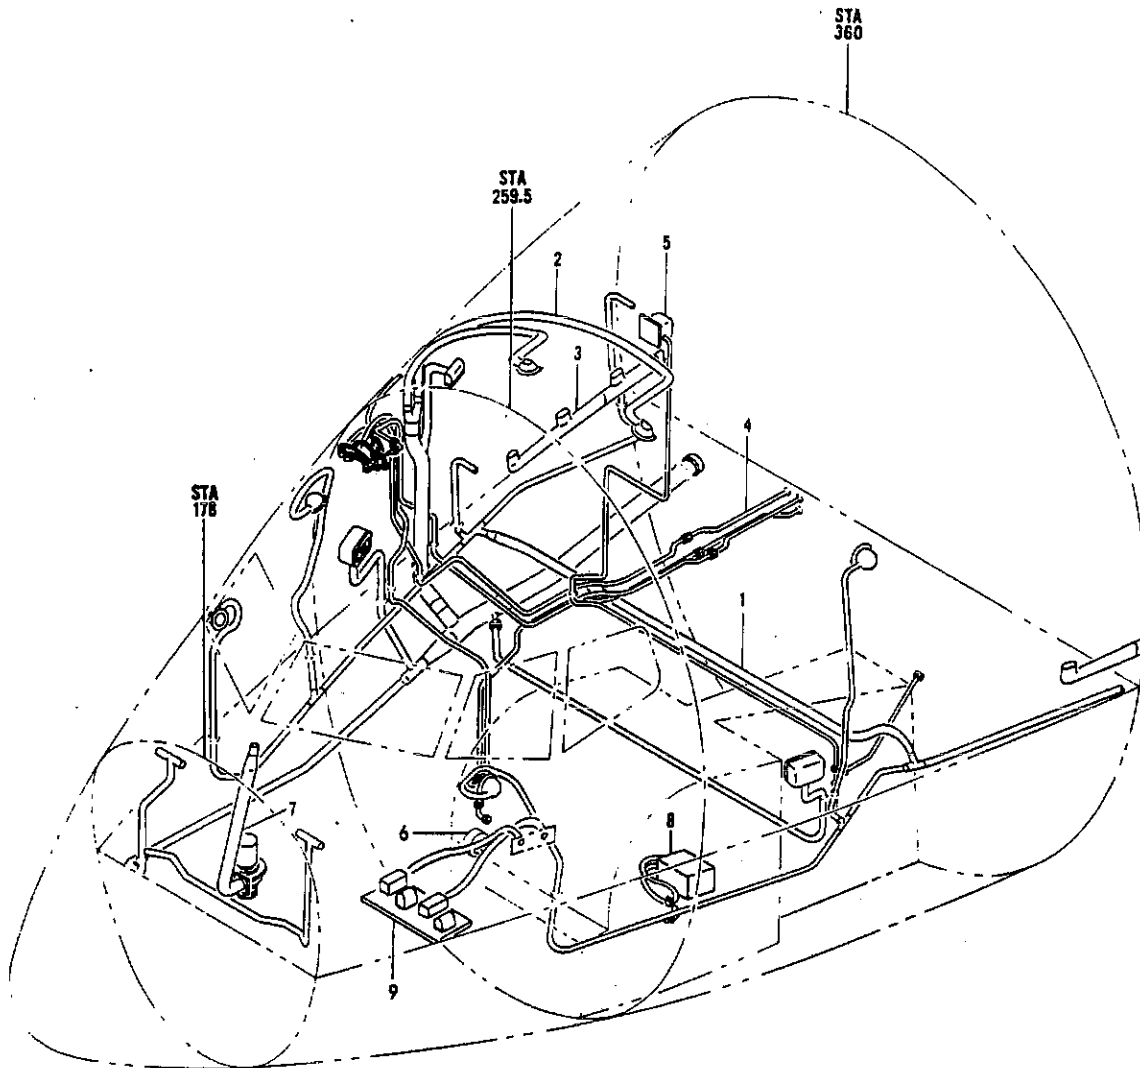


FIGURE 1. EQUIPMENT INSTL, SECTION 52 AIR CONDITIONING



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
1	50-9352	EQUIPMENT INSTL, SECTION 52 AIR CONDITIONING (SEE 53-1, FIG. 1, ITEM 27)		RF
1	65-11935-159	. OUTLET SYSTEM INSTL, SECTION 52 INDIVIDUAL AIR (SEE 21-4, FIG. 1, 21-4, FIG. 1A AND 21-4, FIG. 1B)		1
2	65-42100-1	. DISTRIBUTION SYSTEM INSTL, SECTION 52 AIR CONDITIONING (SEE 21-4, FIG. 8A)		1
3	65-2123	. DUCT INSTL, SECTION 52 AIR DISTRIBUTION (SEE 21-4, FIG. 11)		1
5	65-3713-11	. ELEMENT INSTL, CONTROL CABIN TEMPERATURE CONTROL. . . SENSING (SEE 21-6, FIG. 1)		1
6	5-87872-3000	. FITTING INSTL, CABIN LEAKAGE TEST PRESSURIZATION. AIR CONDITIONING, (SEE 21-8, FIG. 1). REQUIRED PLACARDS, (SEE 11-2, FIG. 80).		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

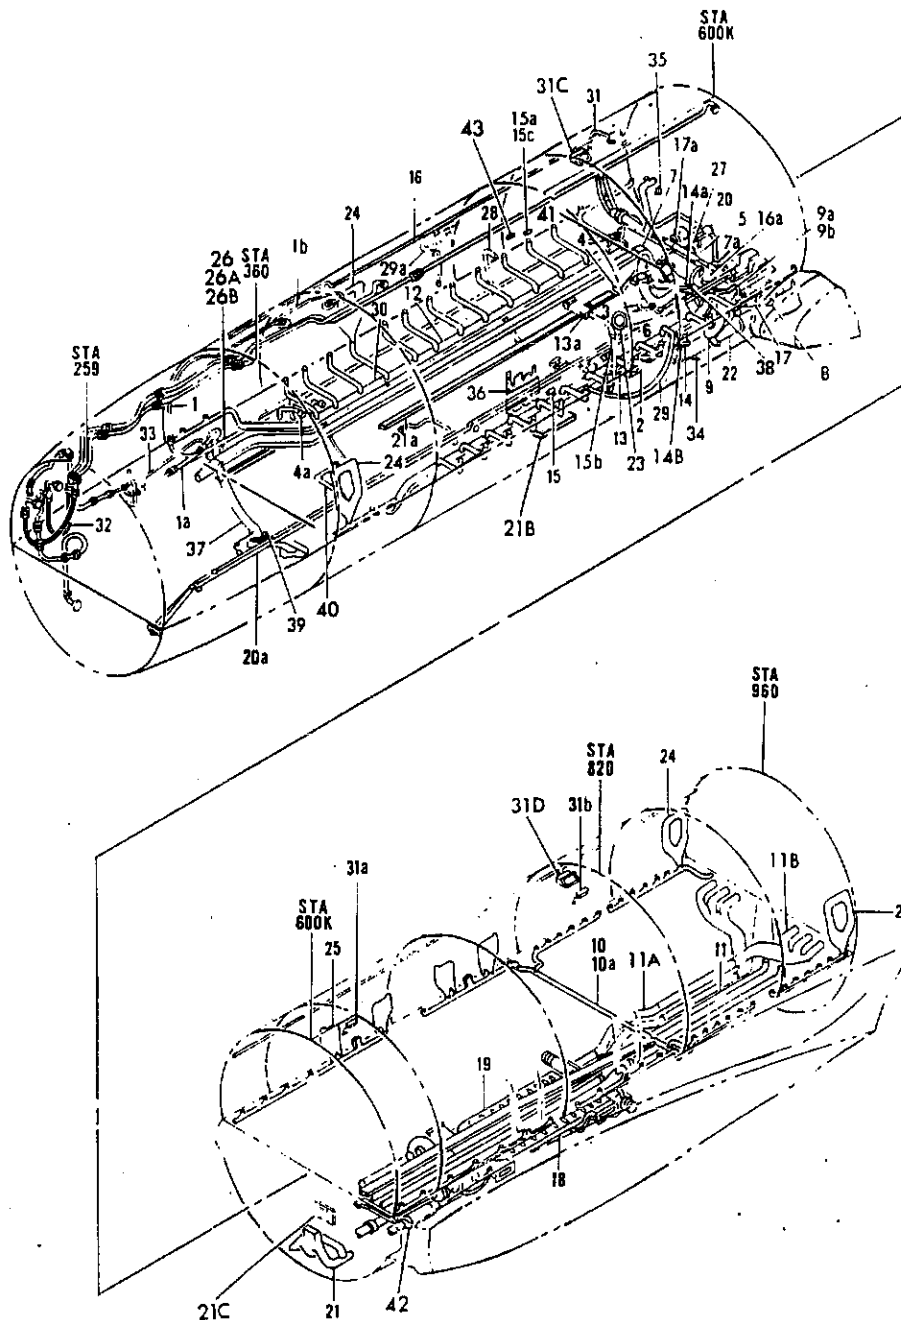


FIGURE 2. EQUIPMENT INSTL, SECTION 54 AIR CONDITIONING



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
2	50-9354	EQUIPMENT INSTL, SECTION 54 AIR CONDITIONING (SEE 53-1, FIG. 2, ITEM 37)								RF
1	65-3641-46	. VENTILATION SYSTEM INSTL, TOILET AND GALLEY (FORWARD) (SEE 38-3, FIG. 2 AND 38-3, FIG. 3)								1
3	65-4308	. DUCT INSTL, GROUND SERVICE PNEUMATIC (SEE 21-8, FIG. 2 AND 21-4, FIG. 30A)								1
4	65-4303	. DUCT INSTL, BODY ANTI-ICING CROSSOVER (SEE 30-1, FIG. 27)								1
4A	65-32558-1	. DUCT INSTL, FORWARD POTABLE WATER TANK HEATING SYSTEM (SEE 38-1, FIG. 52)								1
5	65-11935-121	. OUTLET SYSTEM INSTL, INDIVIDUAL AIR (SEE 21-4, FIG. 12)							0150	1
5	65-11935-199	. OUTLET SYSTEM INSTL, INDIVIDUAL AIR (SEE 21-4, FIG. 12)							5199	1
6	65-4301-1	. VALVE INSTL, CABIN AIR CONDITIONING TEMPERATURE . . . CONTROL (SEE 21-5, FIG. 55)								1
7	65-4302	. VALVE INSTL, CONTROL CABIN TEMPERATURE CONTROL (SEE 21-5, FIG. 54 AND 21-4, FIG. 30A)								1
7A	65-55199-1	. VALVE INSTL, GASPER SYSTEM SURGE BY PASS (SEE 21-4, FIG. 106)								1
8	65-7150-3	. DUCT INSTL, COMPRESSED AIR CROSSOVER (SEE 21-4, FIG. 31)								1
9	65-4306-7	. MANIFOLD INSTL, CONDITIONED AIR DISTRIBUTION (SEE 21-4, FIG. 33)								1
9B	65-58367-1	. DUCT INSTL, STATION 600H TO 600K ZONE HEATING (SEE 21-4, FIG. 32A)								1
10A	65-42102-3	. DUCT INSTL, STATION 620 TO 960 AIR CONDITIONING . . . DISTRIBUTION (SEE 21-4, FIG. 27A)								1
11	65-4339	. DUCT INSTL, AFT CABIN AIR DISTRIBUTION (SEE 21-4, FIG. 29)								1
12	65-2159-16	. DUCT INSTL, STATION 360 TO 620 AIR CONDITIONING (SEE 21-4, FIG. 22)								1
14	65-6592	. VALVE INSTL, STATION 600H PLUS 8.24 GROUND SERVICE . . . CHECK (SEE 21-8, FIG. 3)								1
14A	65-5257-5	. VALVE INSTL, STATION 600J PLUS 16.6 CABIN PRESSURE . . . THRUST RECOVERY (SEE 21-5, FIG. 36)								1
16A	65-59904-1	. VALVE INSTL, STATION 600K CABIN PRESSURIZATION . . . OUTFLOW (SEE 21-5, FIG. 37A)								1
17	65-4310-1	. SEAL INSTL, STATION 600K FLEXIBLE (LH) (SEE 21-4, FIG. 35)								1
17A	65-4310-2	. SEAL INSTL, STATION 600K FLEXIBLE (RH) (SEE 21-4, FIG. 35)								1
18	65-4300-5	. PACK INSTL, SECTION 54 AIR CYCLE SYSTEM AIR CONDITIONING (LH) (SEE 21-3, FIG. 2)								1
19	65-4300-6	. PACK INSTL, SECTION 54 AIR CYCLE SYSTEM AIR CONDITIONING (RH) (SEE 21-3, FIG. 2)								1
20A	65-18300-1	. OVERRIDE INSTL, MAIN CABIN TEMPERATURE CONTROL VALVE MANUAL (SEE 21-5, FIG. 43)								1
21A	65-19101-4	. HEATER INSTL, FORWARD CARGO COMPARTMENT (SEE 21-4, FIG. 25)							5199	1
26	65-20785-1	. INDICATING SYSTEM INSTL, DISTRIBUTION MANIFOLD PRESSURE (SEE 21-4, FIG. 34)								1
27	65-22597-1	. SENSING INSTL, AIR DUCT COMPRESSOR PRESSURE (SEE 21-6, FIG. 8)								1
30	65-43746-17	. DUCT INSTL, CABIN SIDEWALL AIR DISTRIBUTION HOTWALL . . . (SEE 21-4, FIG. 48A AND 21-4, FIG. 48E)								1
31	65-33184-35	. SENSOR INSTL, BULLNOSE HAT RACK TEMPERATURE							0150	1
31	65-33184-84	. SENSOR INSTL, SECTION 54 OVERHEAD STOWAGE TEMPERATURE (SEE 21-6, FIG. 7B)							5199	1
		. . . AIR CONDITIONING, (SEE 21-6, FIG. 7B AND 7G)							0150	
		. . . REQUIRED PLACARDS, (SEE 11-2, FIG. 10)							0150	
31B	65-33184-36	. SENSOR INSTL, SECTION 54 BULLNOSE HAT RACK TEMPERATURE							0150	1
31B	65-33184-85	. SENSOR INSTL, SECTION 54 OVERHEAD STOWAGE TEMPERATURE (SEE 21-6, FIG. 7B)							5199	1
		. . . AIR CONDITIONING, (SEE 21-6, FIG. 7B)							0150	
		. . . REQUIRED PLACARDS, (SEE 11-2, FIG. 10)							0150	
33	65-45357-1	. HUMIDIFIER INSTL, PILOTS COCKPIT (SEE 21-4, FIG. 101A)							0150	1
34	69-36986-1	. SCOTCH-CAL INSTL, PNEUMATIC START AND GROUND AIR CONDITIONING DOORS AIR CYCLE (SEE 11-2, FIG. 13)								1
36	65-32222-3	. HEATER INSTL, MAIN CARGO DOOR SURFACE (SEE 52-3, FIG. 43)								1
37	65-59545-2	. DUCT INSTL, ELECTRONIC COOLING (SEE 25-19, FIG. 4A)								1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

MISSING ITEM NUMBERS ARE NOT APPLICABLE

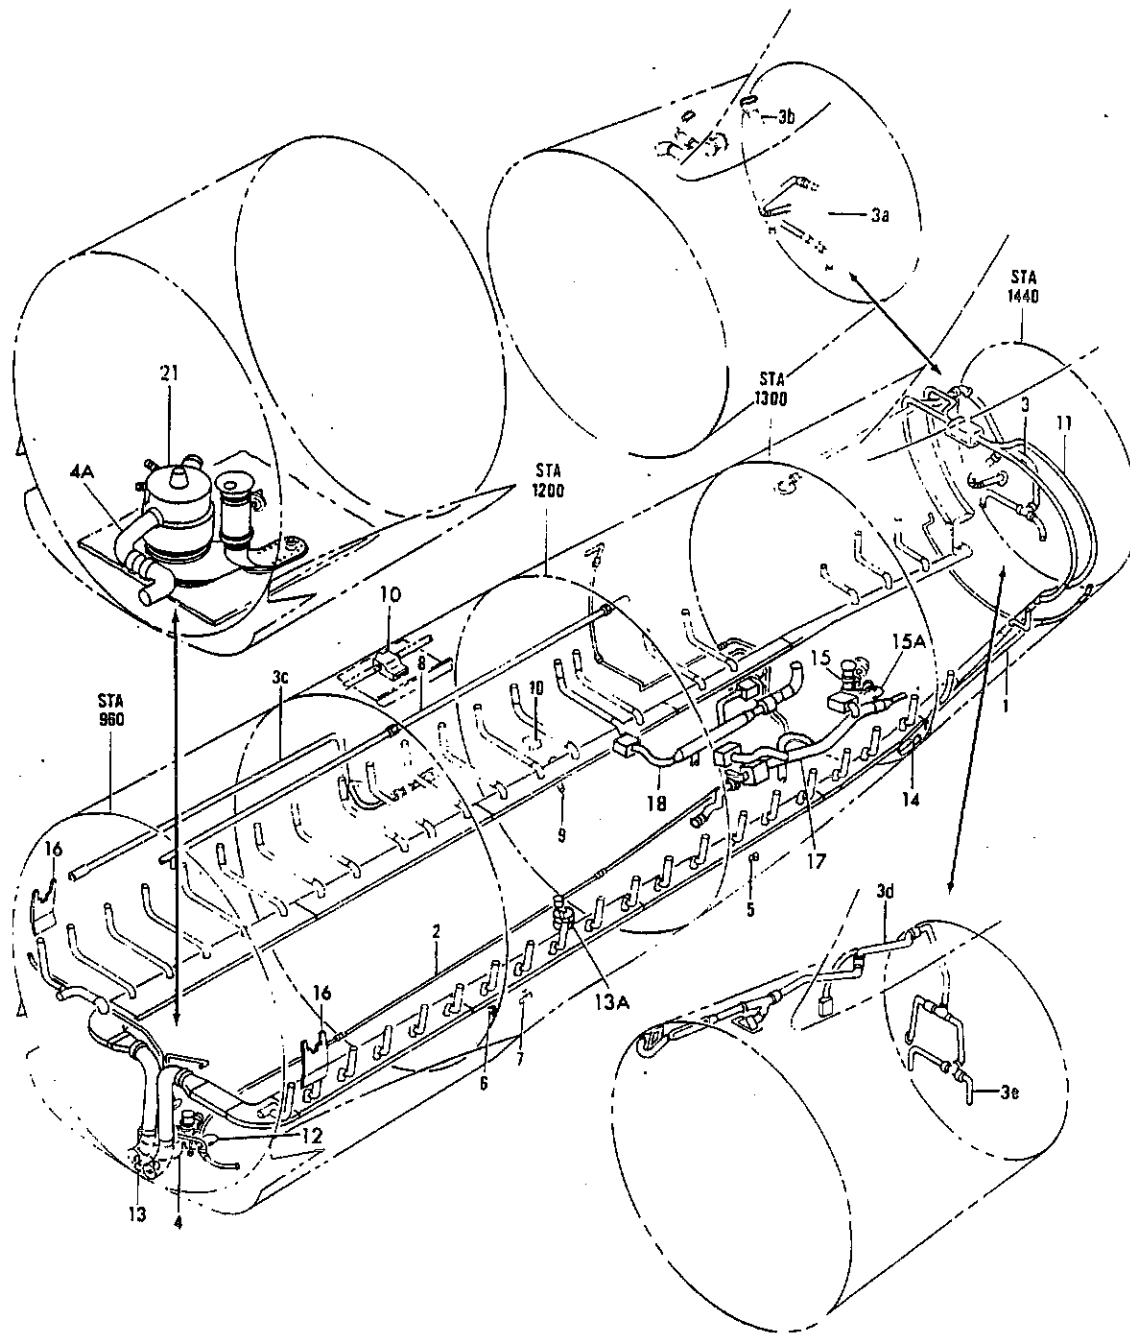


FIGURE 3. EQUIPMENT INSTL, SECTION 57 AIR CONDITIONING

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
	3	50-9357	EQUIPMENT INSTL, SECTION 57 AIR CONDITIONING (SEE 53-1, FIG. 3, ITEM 6)								RF
R R R R R R	1	65-1183-124	. OUTLET SYSTEM INSTL, SECTION 57 INDIVIDUAL AIR (SEE 21-4, FIG. 38A)							0150	1
	1	65-1183-143	. OUTLET SYSTEM INSTL, SECTION 57 INDIVIDUAL AIR (SEE 21-4, FIG. 38)							5199	1
	3D	65-3640-56	. VENTILATION SYSTEM INSTL, TOILET AND GALLEY (AFT) (SEE 38-3, FIG. 5)							5199	1
	3D	65-3640-64	. VENTILATION SYSTEM INSTL, TOILET AND GALLEY (AFT) (SEE 38-3, FIG. 5)							0150	1
	4	65-3338-19	. DUCT INSTL, SECTION 57 AIR CONDITIONING DISTRIBUTION (SEE 21-4, FIG. 41)								1
R R R R	8	65-32249-163	. DETECTION SYSTEM INSTL, UPPER CARGO COMPARTMENT SMOKE (SEE 26-1, FIG. 21C)							0150	1
	8	65-32249-193	. DETECTOR SYSTEM INSTL, UPPER CARGO COMPARTMENT SMOKE (SEE 26-1, FIG. 21E)							5199	1
	9	65-32558-2	. DUCT INSTL, AFT POTABLE WATER TANKS HEATING SYSTEM. (SEE 38-1, FIG. 52)								1
R R R R R	10	65-33184-23	. SENSOR INSTL, OVERHEAD STOWAGE TEMPERATURE.							0150	1
	10	65-33184-86	. SENSOR INSTL, OVERHEAD STOWAGE TEMPERATURE (SEE 21-6, FIG. 10)							5199	1
			. . AIR CONDITIONING, (SEE 21-6, FIG. 10)							0150	
			. . REQUIRED PLACARDS, (SEE 11-2, FIG. 11).							0150	
	11	65-57564-1	. OUTLET INSTL, AFT CEILING AIR (SEE 21-4, FIG. 107).								1
	12	65-7426	. VALVE INSTL, STATION 960 CABIN PRESSURE THRUST. RECOVERY (SEE 21-5, FIG. 39)								1
	13	65-7424-3	. VALVE INSTL, STATION 960 CABIN PRESSURIZATION OUTFLOW (SEE 21-5, FIG. 38)								1
	14	65-59903-1	. VALVE INSTL, STATION 1300 CABIN PRESSURIZATION. OUTFLOW (SEE 21-5, FIG. 38A)								1
	15	65-5259	. VALVE INSTL, STATION 1337.70 CABIN PRESSURE THRUST. RECOVERY (SEE 21-5, FIG. 40)								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 03

PACK

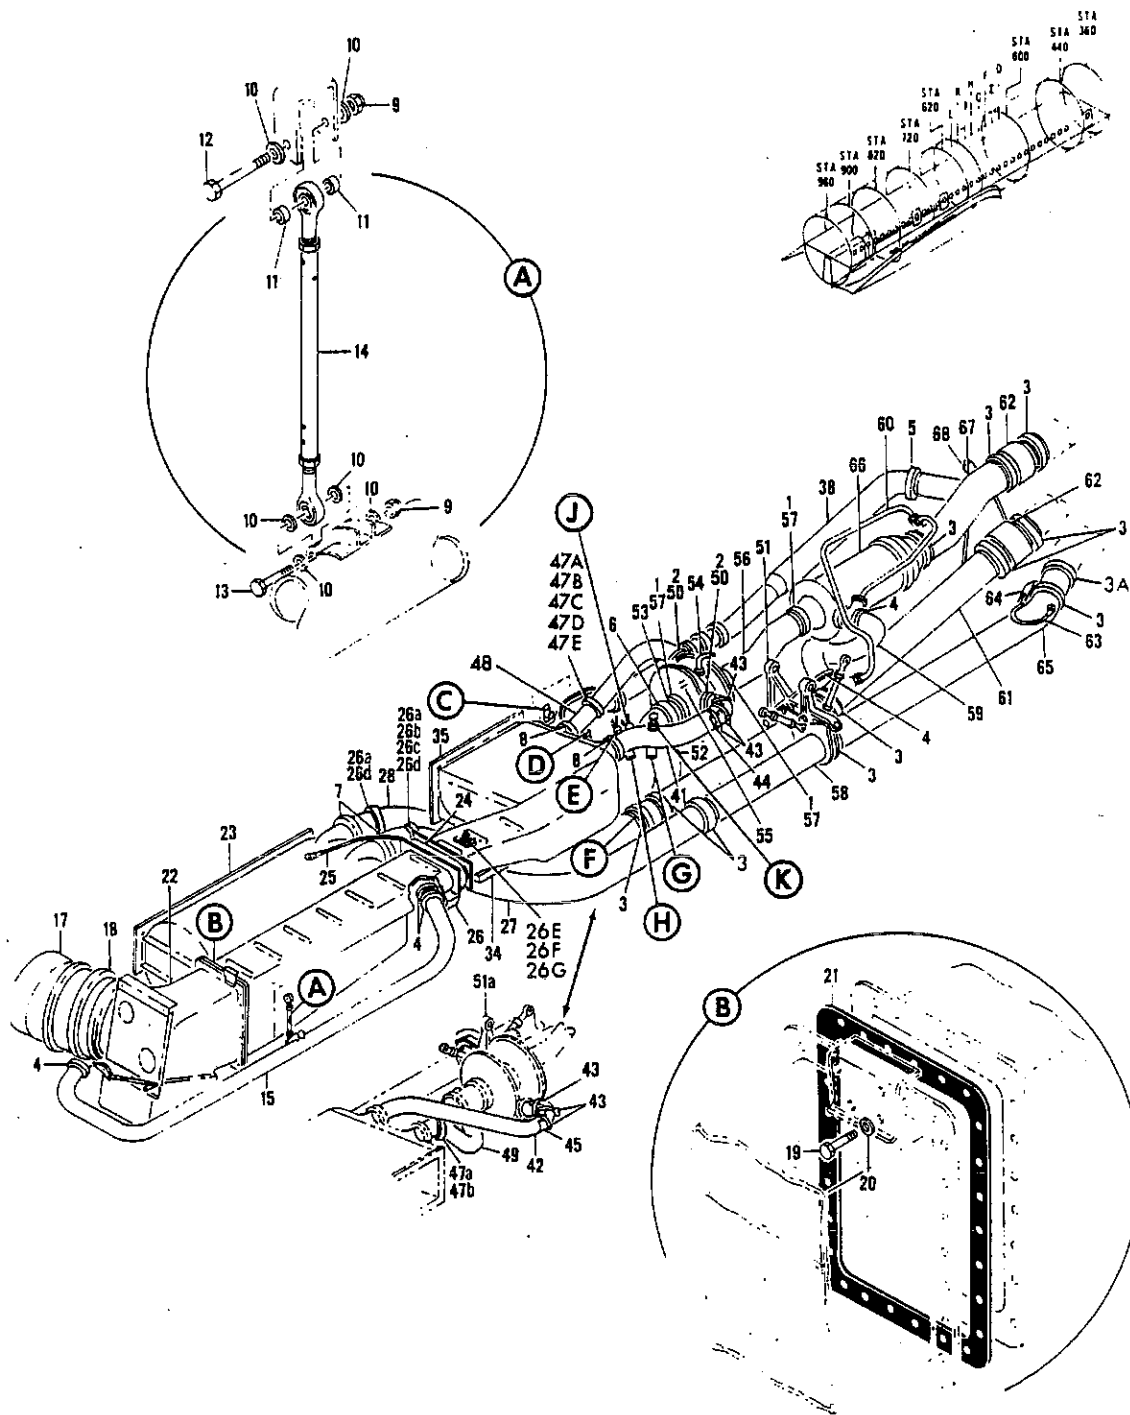


FIGURE 2. PACK INSTL, SECTION 54 AIR CYCLE SYSTEM AIR CONDITIONING (SHEET 1)

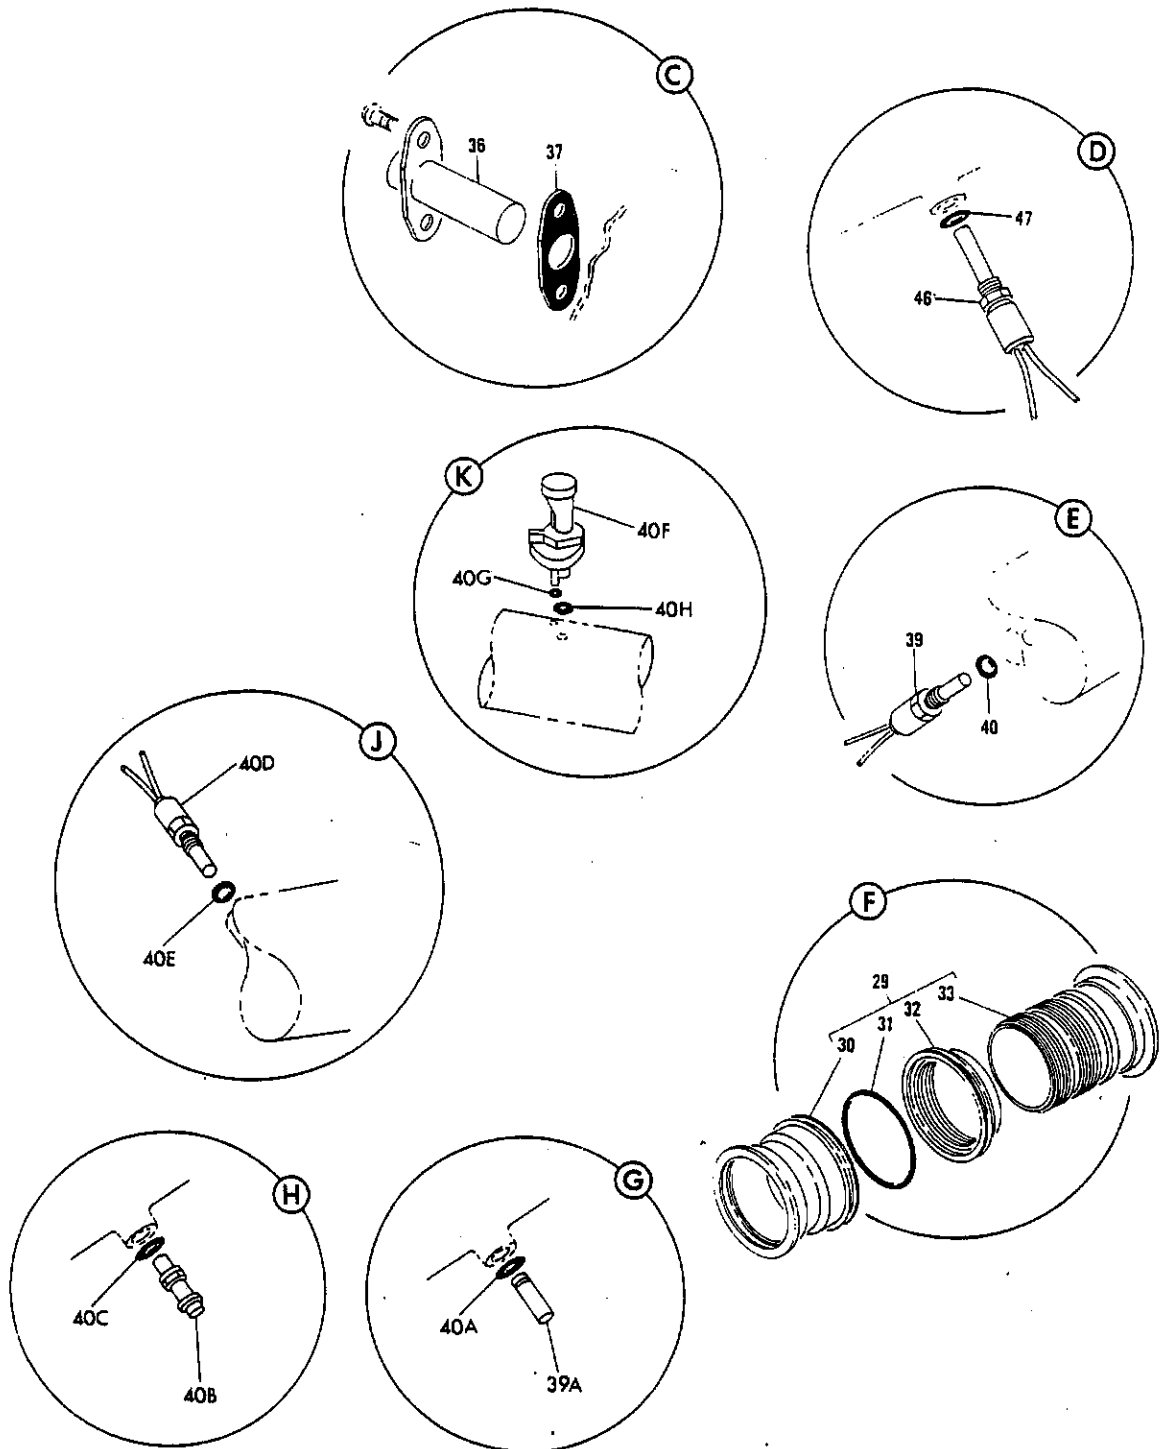


FIGURE 2. PACK INSTL, SECTION 54 AIR CYCLE SYSTEM AIR CONDITIONING (SHEET 2)

NOV 21/90

21-03-2

DETAILED PARTS LIST
21-03-2
PAGE 1

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
2	65-4300-5	PACK INSTL, SECTION 54 AIR CYCLE SYSTEM AIR		RF
		CONDITIONING (LH) (SEE 21-2, FIG. 2, ITEM 18)		
	65-4300-6	PACK INSTL, SECTION 54 AIR CYCLE SYSTEM AIR		RF
		CONDITIONING (RH) (SEE 21-2, FIG. 2, ITEM 19)		
1	19324C562D	. CLAMP, V-BAND (V98625)		3
2	18605	. CLAMP, V-BAND (V98625)		2
3	J38C37	. CLAMP ASSY, (V89513)		11
3A	J38C37	. CLAMP ASSY, (V89513)		1
4	B29C43	. CLAMP ASSY, (V89513)		5
5	E38C37	. CLAMP ASSY, (V89513)		1
6	F38C37	. CLAMP ASSY, (V89513)		1
7	G38C37	. CLAMP ASSY, (V89513)		2
8	C29C43	. CLAMP ASSY, (V89513)		2
9	NAS679A3W	. NUT		2
10	AN960D10	. WASHER		6
11	NAS42DD-6-12	. SPACER		2
12	AN3-12A	. BOLT		1
13	AN3-7A	. BOLT		1
14	BACR24E1F78	. ROD ASSY		1
15	65-1170-1	. DUCT ASSY, COMPRESSED AIR TO TURBOFAN (LH ONLY)		1
15	65-1170-2	. DUCT ASSY, COMPRESSED AIR TO TURBOFAN (RH ONLY)		1
17	65-22532-1	. DUCT INSTL, TURBOFAN EXHAUST (LH ONLY) (SEE FIG. 5)		1
17	65-22532-2	. DUCT INSTL, TURBOFAN EXHAUST (RH ONLY) (SEE FIG. 5)		1
18	65-4315-13	. DUCT INSTL, AIR CONDITIONING TURBOFAN EXHAUST (LH		1
		ONLY) (SEE FIG. 4)		
18	65-4315-14	. DUCT INSTL, AIR CONDITIONING TURBOFAN EXHAUST (RH		1
		ONLY) (SEE FIG. 4)		
19	AN3-5A	. BOLT		26
20	AN960D10	. WASHER		26
21	69-2395	. GASKET, PRIMARY HEAT EXCHANGER COOLING AIR DUCT		1
22	65-22930-1	. TURBOFAN INSTL, GROUND AIR MOVER (LH ONLY) (SEE FIG.		1
		7)		
22	65-22930-2	. TURBOFAN INSTL, GROUND AIR MOVER (RH ONLY) (SEE FIG.		1
		7)		
23	65-4314-5	. EXCHANGER INSTL, AIR CONDITIONING PACK PRIMARY HEAT		1
		(LH ONLY) (SEE FIG. 8)		
23	65-4314-6	. EXCHANGER INSTL, AIR CONDITIONING PACK PRIMARY HEAT		1
		(RH ONLY) (SEE FIG. 8)		
24	10-3274-24	. SEAL, FLEXIBLE PRESSURE		1
		ATTACHING PARTS		
	AN3-5A	. BOLT		16
	AN960D10	. WASHER		16
	NAS679A3W	. NUT		16
25	MS25083-2BB16	. JUMPER ASSY		1
		ATTACHING PARTS		
	AN3-4A	. BOLT		2
	AN960D10L	. WASHER		4
	NAS679A3W	. NUT		2
26	10-3291	. VALVE, 2-1/2 IN. DIA AIR SHUT OFF		1
26A	NAS679A3W	. NUT		2
26B	AN960C10	. WASHER		1
26C	BACB20E6A12H	. BRACKET		1
26D	BACC10CH500-1	. CLAMP		2
27	65-4325-1	. DUCT ASSY, STATION 684 TO PRIMARY HEAT EXCHANGE		1
		COMPRESSED AIR (LH ONLY)		
27	65-4325-2	. DUCT ASSY, STATION 684 TO PRIMARY HEAT EXCHANGE		1
		COMPRESSED AIR (RH ONLY)		
28	65-4326-1	. DUCT ASSY, PRIMARY HEAT EXCHANGER TO STATION 690.55		1
		CONDITIONED AIR (LH ONLY)		
28	65-4326-2	. DUCT ASSY, PRIMARY HEAT EXCHANGER TO STATION 690.55		1
		CONDITIONED AIR (OPTIONAL 65-4326-8 WITH		
		MS21913D6 AND AN6290-6) (RH ONLY)		
29	65-1313	. SECTION ASSY, AIR CONDITIONING ADAPTER		1
30	65-1313-1	. SLEEVE ASSY, AIR CONDITIONING ADAPTER SECTION		1
31	BACP11J257	. PACKING		1
32	65-3074-26	. NUT, AIR CONDITIONING ADAPTER JAM (OPTIONAL		1
		65-3074-5)		
32	65-3074-5	. NUT, AIR CONDITIONING ADAPTER JAM		1
		(OPTIONAL TO 65-3074-26)		
33	65-1313-2	. INSERT ASSY, AIR CONDITIONING ADAPTER SECTION		1
34	65-23987-1	. ACTUATOR INSTL, SECONDARY HEAT EXCHANGE DAMPER (LH		1
		ONLY) (SEE FIG. 9)		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2 34	65-23987-2	. ACTUATOR INSTL, SECONDARY HEAT EXCHANGE DAMPER (RH. . ONLY) (SEE FIG. 9)		1
35	65-4312-1	. EXCHANGER INSTL, AIR CONDITIONING PACK SECONDARY HEAT LH (LH ONLY) (SEE FIG. 10)		1
35	65-4312-2	. EXCHANGER INSTL, AIR CONDITIONING PACK SECONDARY HEAT RH (RH ONLY) (SEE FIG. 10)		1
36	10-3063-5	. ELEMENT, AMBIENT TEMPERATURE SENSING.		1
	NAS603-8	. ATTACHING PARTS . SCREW		2
37	66-3478-1	. GASKET, TEMPERATURE SENSOR.		1
38	65-4317-1	. DUCT INSTL, SECTION 54 AIR CONDITIONING PACK RAM AIR (LH ONLY) (SEE FIG. 12)		1
38	65-4317-2	. DUCT INSTL, SECTION 54 AIR CONDITIONING PACK RAM AIR (RH ONLY) (SEE FIG. 12)		1
39	10-60133-1	. SWITCH, THERMAL		1
40	BACP11K3	. PACKING		1
41	5-95666-3007	. DUCT ASSY, AIR CONDITIONING PACK COMPRESSOR OUTLET. . (LH ONLY)		1
42	65-1305-10	. DUCT ASSY, RH AIR CONDITIONING PACK COMPRESSOR OUTLET (RH ONLY)		1
43	BACC10P3-62-325SH	. CLAMP		3
44	69-42061	. PLATE, AIR CONDITIONING DUCT ELBOW COVER (LH ONLY). .		1
45	69-48039	. PLATE, AIR CONDITIONING DUCT ELBOW COVER (RH ONLY). .		1
46	10-60133-4	. SWITCH, THERMAL		1
47	BACP11K4	. PACKING		1
47A	NAS679A3W	. NUT		1
47B	BACC10CH300-1	. CLAMP		1
48	5-95665-3003	. DUCT ASSY, AIR CONDITIONING PACK TURBINE INLET (LH. . ONLY)		1
49	65-1304-5	. DUCT ASSY, RH AIR CONDITIONING PACK TURBINE INLET (RH ONLY) (SEE FIG. 3)		1
50	BACP11J234	. PACKING		2
51	65-4319-1	. ANCHOR INSTL, UNDERWING AIR CONDITIONING DUCTS LH (LH ONLY) (SEE FIG. 16)		1
51A	65-4319-2	. ANCHOR INSTL, UNDERWING AIR CONDITIONING DUCTS RH (RH ONLY) (SEE FIG. 16)		1
52	65-4340-6	. DUCT ASSY, CONDITIONED AIR TO AIR CYCLE MACHINE (LH . ONLY) (SEE FIG. 3)		1
52	65-4340-7	. DUCT ASSY, CONDITIONED AIR TO AIR CYCLE MACHINE (RH . ONLY) (SEE FIG. 3)		1
53	10-3273-10	. DUCT ASSY, FLEXIBLE (OPTIONAL BAC SPEC NO. 10-3273-4)		1
53	10-3273-4	. DUCT ASSY, FLEXIBLE (OPTIONAL TO BAC SPEC NO. 10-3273-10)		1
54	65-4318-1	. TUBING INSTL, AIR CYCLE MACHINE OIL SUMP VENT (LH . . ONLY) (SEE FIG. 14)		1
54	65-4318-2	. TUBING INSTL, AIR CYCLE MACHINE OIL SUMP VENT (RH . . ONLY) (SEE FIG. 14)		1
55	65-4313-1	. MACHINE INSTL, AIR CONDITIONING PACK AIR CYCLE (LH. . ONLY) (SEE FIG. 13)		1
55	65-4313-2	. MACHINE INSTL, AIR CONDITIONING PACK AIR CYCLE (RH. . ONLY) (SEE FIG. 13)		1
56	65-4330	. DUCT ASSY, AIR CYCLE MACHINE TO WATER SEPARATOR . . . CONDITIONED AIR		1
57	BACP11J246	. PACKING		3
58	65-4343	. DUCT ASSY, STATION 649 TO 684 COMPRESSED AIR (SEE . . FIG. 3)		1
59	65-4335-1	. DUCT ASSY, 35F TEMPERATURE CONTROL (LH ONLY).		1
59	65-4335-2	. DUCT ASSY, 35F TEMPERATURE CONTROL (RH ONLY).		1
60	65-7490-1	. TUBING INSTL, WATER SEPARATOR (LH ONLY) (SEE FIG. 15)		1
60	65-7490-2	. TUBING INSTL, WATER SEPARATOR (RH ONLY) (SEE FIG. 15)		1
61	65-4328	. DUCT ASSY, STATION 600J PLUS .19 TO 646.66. CONDITIONED AIR		1
62	10-3302	. VALVE, CABIN AIR CHECK.		2
63	MS25083-2BB18	. JUMPER ASSY ATTACHING PARTS . BOLT. WASHER. NUT		1 2 3 2
R 64	10-3058-2	. VALVE, 6 IN. DIA AIR SHUTOFF.	0150	1
R 64	10-3058-1	. VALVE, 6 IN. DIA AIR SHUTOFF.	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
2	65	65-4324	. DUCT ASSY, COMPRESSED AIR PACK SHUTOFF VALVE TO . . . STATION 649								1
	66	65-4311-1	. SEPARATOR INSTL, SECTION 54 LH SIDE AIR CONDITIONING PACK WATER (LH ONLY) (SEE FIG. 11)								1
	66	65-4311-2	. SEPARATOR INSTL, SECTION 54 RH SIDE AIR CONDITIONING PACK WATER (RH ONLY) (SEE FIG. 11)								1
	67	65-4329-1	. DUCT ASSY, AIR CONDITIONING PACK RAM AIR INLET JOINT (LH ONLY)								1
	67	65-4329-2	. DUCT ASSY, AIR CONDITIONING PACK RAM AIR INLET JOINT (RH ONLY)								1
	68	65-23506-1	. ACTUATOR INSTL, MODULATED COOLING AIR INLET (LH ONLY) (SEE FIG. 26)								1
	68	65-23506-2	. ACTUATOR INSTL, MODULATED COOLING AIR INLET (RH ONLY) (SEE FIG. 26)								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

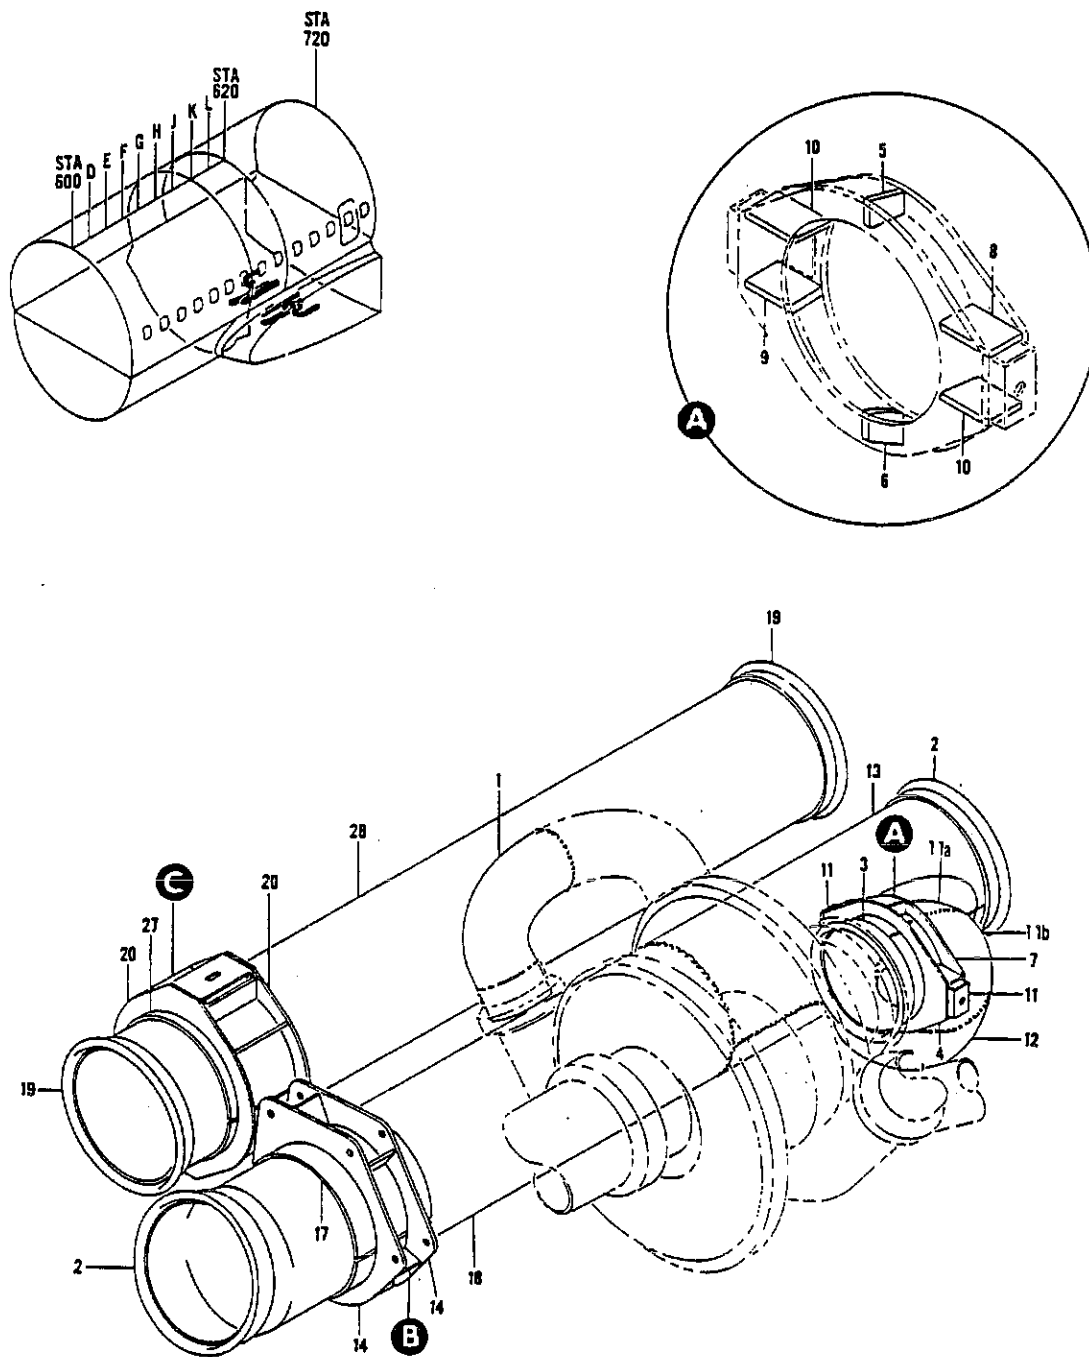


FIGURE 3. DUCT ASSY, AIR CONDITIONING (SHEET 1)

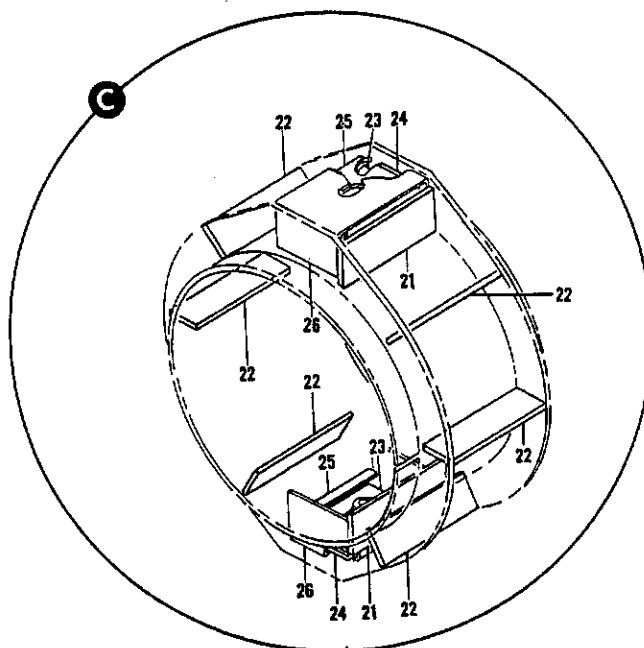
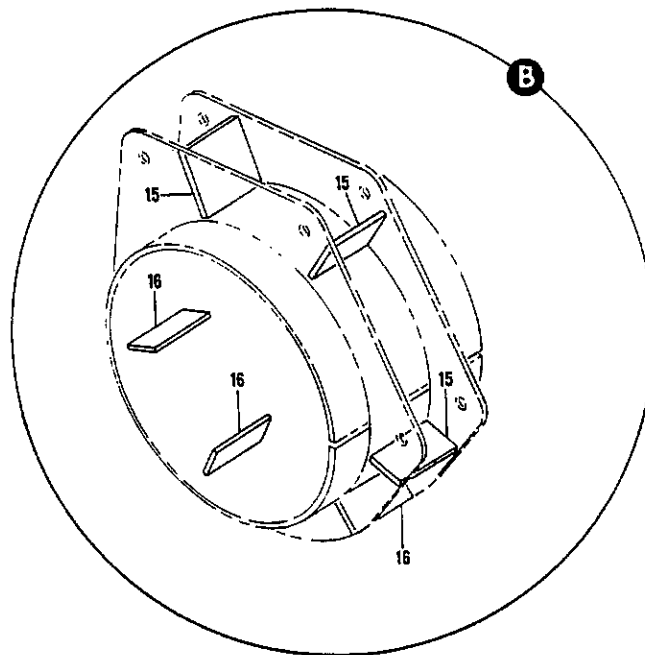


FIGURE 3. DUCT ASSY, AIR CONDITIONING (SHEET 2)

BDEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE											EFF FROM TO	UNITS PER ASSY
3	65-1304-5	DUCT ASSY, AIR CONDITIONING												
		. DUCT ASSY, RH AIR CONDITIONING PACK TURBINE INLET . .												RF
		(SEE FIG. 1, ITEM 39 AND FIG. 2, ITEM 49)												
1	69-1506	. . DUCT ASSY, TURBINE INLET.												1
	65-4340-6	. DUCT ASSY, CONDITIONED AIR TO AIR CYCLE MACHINE (LH)												RF
		(SEE FIG. 1, ITEM 44, FIG. 2, ITEM 52 AND FIG.												
		2A, ITEM 32)												
	65-4340-7	. DUCT ASSY, CONDITIONED AIR TO AIR CYCLE MACHINE (RH)												RF
		(SEE FIG. 1, ITEM 44, FIG. 2, ITEM 52 AND FIG.												
		2A, ITEM 32)												
2	J29C71	. . FLANGE, (V89513).												2
3	F29C71	. . FLANGE, (V89513).												1
4	65-4327-12	. . RING, CONDITIONED AIR TO AIR CYCLE MACHINE DUCT . .												1
5	65-4327-7	. . GUSSET, CONDITIONED AIR TO AIR CYCLE MACHINE DUCT . .												1
6	65-4327-10	. . GUSSET, CONDITIONED AIR TO AIR CYCLE MACHINE DUCT . .												1
7	65-4327-13	. . RING, CONDITIONED AIR TO AIR CYCLE MACHINE DUCT . .												1
8	65-4327-8	. . GUSSET, CONDITIONED AIR TO AIR CYCLE MACHINE DUCT . .												1
9	65-4327-9	. . GUSSET, CONDITIONED AIR TO AIR CYCLE MACHINE DUCT . .												1
10	65-4327-11	. . GUSSET, CONDITIONED AIR TO AIR CYCLE MACHINE DUCT . .												2
11	65-4327-15	. . CHANNEL ASSY, CONDITIONED AIR TO AIR CYCLE MACHINE												2
		DUCT												
11A	65-4327-5	. . ELBOW												1
11B	65-4327-6	. . ELBOW												1
12	65-4327-28	. . TEE ASSY, CONDITIONED AIR TO AIR CYCLE MACHINE DUCT												1
		BOTTOM HALF (LH ONLY)												
12	65-4327-29	. . TEE ASSY, CONDITIONED AIR TO AIR CYCLE MACHINE DUCT												1
		BOTTOM HALF (RH ONLY)												
13	65-4327-26	. . TEE ASSY, CONDITIONED AIR TO AIR CYCLE MACHINE DUCT												1
		TOP HALF (LH ONLY)												
13	65-4327-27	. . TEE ASSY, CONDITIONED AIR TO AIR CYCLE MACHINE DUCT												1
		TOP HALF (RH ONLY)												
14	69-4952	. . RING, CONDITIONED AIR TO AIR CYCLE MACHINE DUCT . .												2
15	69-4952-1	. . GUSSET, CONDITIONED AIR TO AIR CYCLE MACHINE DUCT . .												3
16	69-4952-2	. . GUSSET, CONDITIONED AIR TO AIR CYCLE MACHINE DUCT . .												3
17	65-4340-5	. . DOUBLER, CONDITIONED AIR TO AIR CYCLE MACHINE DUCT												1
18	65-4340-3	. . DUCT, CONDITIONED AIR TO AIR CYCLE MACHINE.												1
	65-4343	. DUCT ASSY, STATION 649 TO 684 COMPRESSED AIR (SEE . .												RF
		FIG. 1, ITEM 55A, FIG. 2, ITEM 58 AND FIG.												
		2A, ITEM 36)												
19	J29C71	. . FLANGE, (V89513).												2
20	69-8764	. . RING, STATION 649 TO 684 COMPRESSED AIR DUCT. . . .												2
21	69-8764-3	. . GUSSET, STATION 649 TO 684 COMPRESSED AIR DUCT. . . .												2
22	69-8764-2	. . GUSSET, STATION 649 TO 684 COMPRESSED AIR DUCT. . . .												6
	65-4343-2	. . SUPPORT ASSY, STATION 649 TO 684 COMPRESSED AIR . .												2
		DUCT												
23	69-8764-7	. . . PLATE ASSY, COMPRESSED AIR DUCT SUPPORT NUT . . .												2
24	69-8764-5	. . . PLATE, COMPRESSED AIR DUCT SUPPORT SERRATED . . .												2
25	69-8764-4	. . . CHANNEL, COMPRESSED AIR DUCT SUPPORT.												2
26	69-8764-1	. . . BRACKET, COMPRESSED AIR DUCT SUPPORT.												2
27	65-4340-5	. . DOUBLER, STATION 649 TO 684 COMPRESSED AIR DUCT . .												1
28	65-4343-1	. . DUCT, STATION 649 TO 684 COMPRESSED AIR												1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

MISSING ITEM NUMBERS ARE NOT APPLICABLE



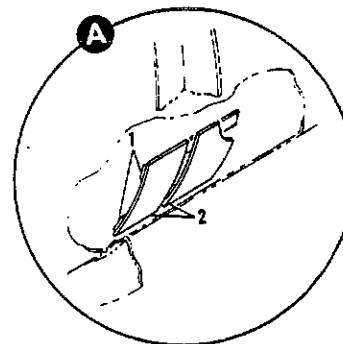


FIGURE 4. DUCT INSTL, AIR CONDITIONING TURBOFAN EXHAUST

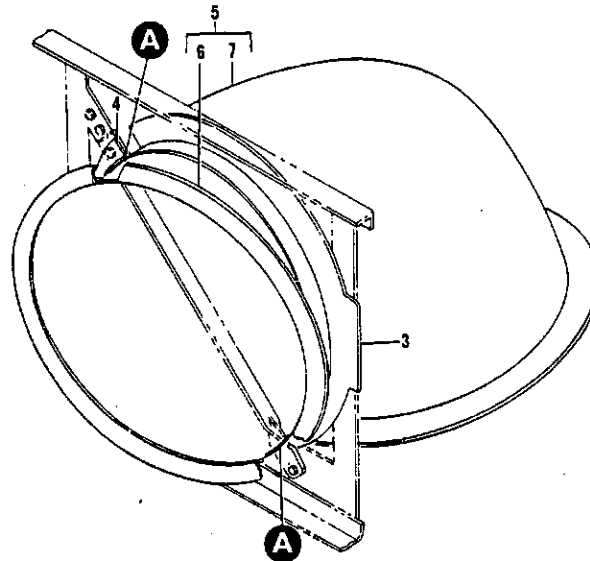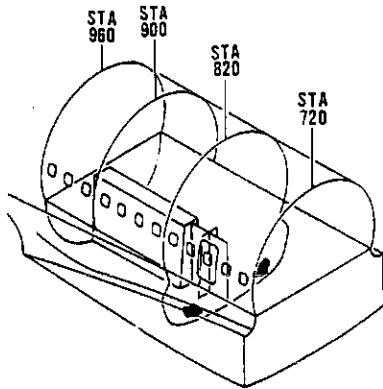

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
4	65-4315-13	DUCT INSTL, AIR CONDITIONING TURBOFAN EXHAUST (LH) (SEE FIG. 2, ITEM 18)		RF
	65-4315-14	DUCT INSTL, AIR CONDITIONING TURBOFAN EXHAUST (RH) (SEE FIG. 2, ITEM 18)		RF
1	65-4315-11	. PLATE, AIR CONDITIONING TURBOFAN EXHAUST DUCT COVER .		4
2	65-4315-12	. PLATE, AIR CONDITIONING TURBOFAN EXHAUST DUCT COVER .		4
3	65-4315-7	. FLANGE, AIR CONDITIONING TURBOFAN EXHAUST DUCT UPPER (LH ONLY)		1
3	65-4315-8	. FLANGE, AIR CONDITIONING TURBOFAN EXHAUST DUCT UPPER (RH ONLY)		1
4	65-4315-9	. FLANGE, AIR CONDITIONING TURBOFAN EXHAUST DUCT LOWER (LH ONLY)		1
4	65-4315-10	. FLANGE, AIR CONDITIONING TURBOFAN EXHAUST DUCT LOWER (RH ONLY)		1
5	65-4315-15	. DUCT ASSY, AIR CONDITIONING TURBOFAN EXHAUST (LH. . . ONLY)		1
5	65-4315-16	. DUCT ASSY, AIR CONDITIONING TURBOFAN EXHAUST (RH. . . ONLY)		1
6	66-1840	. . FLANGE, TURBOFAN EXHAUST DUCT		1
7	65-4315-17	. . DUCT, AIR CONDITIONING TURBOFAN EXHAUST (LH ONLY) .		1
7	65-4315-18	. . DUCT, AIR CONDITIONING TURBOFAN EXHAUST (RH ONLY) .		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

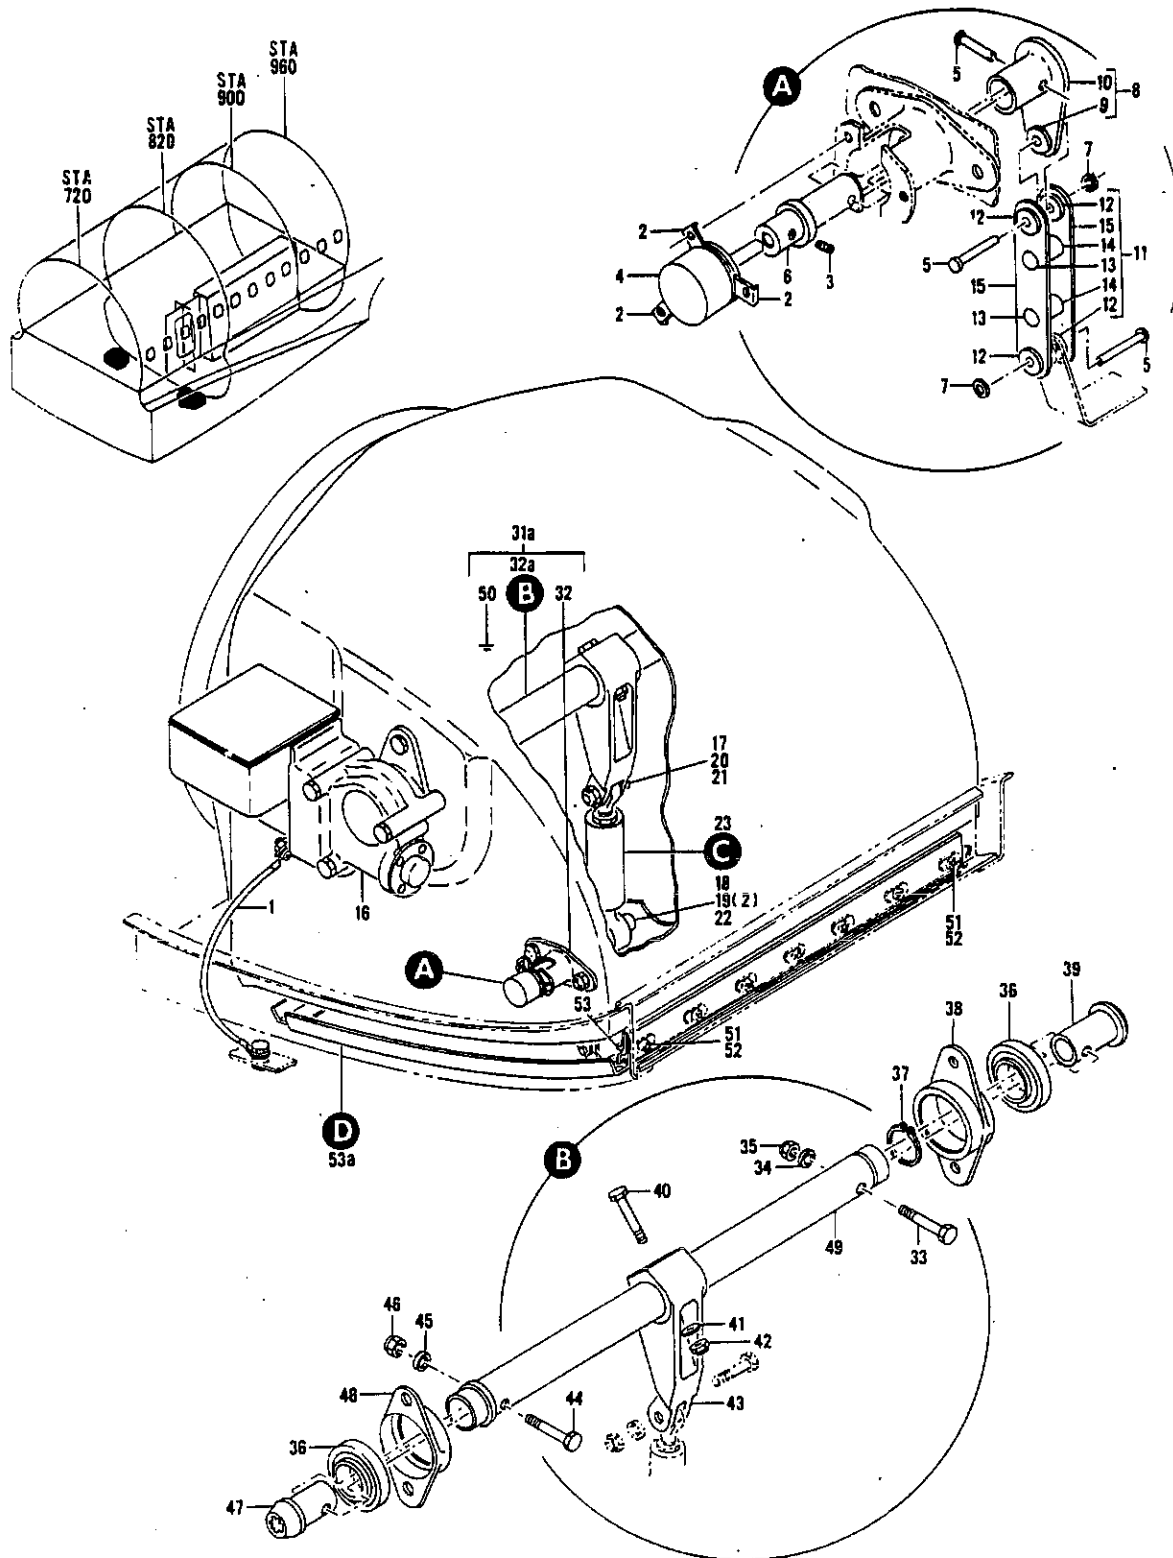


FIGURE 5. DUCT INSTL. TURBOFAN EXHAUST (SHEET 1)

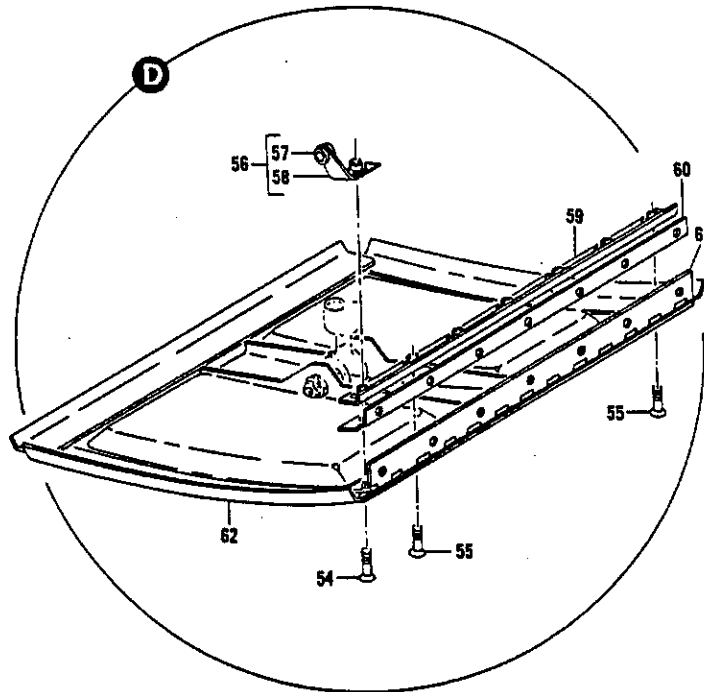
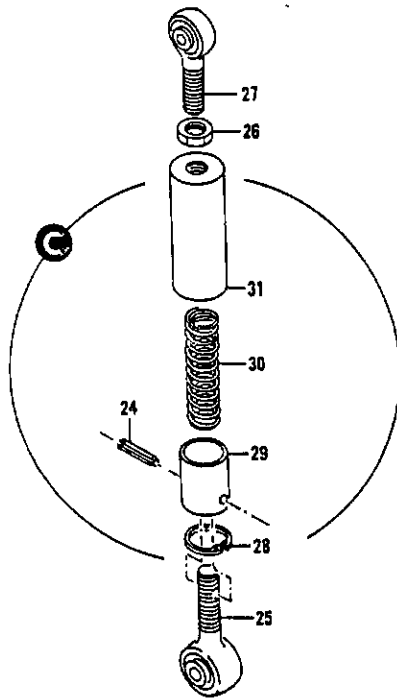


FIGURE 5. DUCT INSTL, TURBOFAN EXHAUST (SHEET 2)

NOV 21/90

DETAILED PARTS LIST
21-03-5
PAGE 1

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5	65-22532-1	DUCT INSTL, TURBOFAN EXHAUST (LH) (SEE FIG. 2, ITEM . . . 17)		RF
	65-22532-2	DUCT INSTL, TURBOFAN EXHAUST (RH) (SEE FIG. 2, ITEM . . . 17)		RF
1	MS25083-2AB8	. JUMPER ASSY, (LH ONLY)		1
1	MS25083-2AB12	. JUMPER ASSY, (RH ONLY)		1
		ATTACHING PARTS		
	AN3-4A	. BOLT		1
	AN520PB6-6	. SCREW		1
	AN960D10	. WASHER		3
	AN960D6L	. WASHER		3
	NAS679A3W	. NUT		1
	NAS679A06W	. NUT		1
2	C141	. CLAMP, (V00328)		3
3	CSB	. SCREW, (V00141)		1
4	B29-10078-2	. POTENTIOMETER, (V30223) (OPTIONAL TO B29-10078-2F (V30223))		1
4	B29-10078-2A	. POTENTIOMETER, (V30223) (OPTIONAL TO B29-10078-2F (V30223))		1
4	B29-10078-2B	. POTENTIOMETER, (V30223) (OPTIONAL TO B29-10078-2F (V30223))		1
4	B29-10078-2F	. POTENTIOMETER, (V30223) (OPTIONALS B29-10078-2, B29-10078-2A, B29-10078-2B (V30223))		1
5	MS20392-1-17	. PIN		3
6	66-13937-1	. SHAFT, TURBOFAN DOOR POSITION INDICATOR (LH ONLY)		1
6	66-13937-2	. SHAFT, TURBOFAN DOOR POSITION INDICATOR (RH ONLY)		1
7	AN960-4L	. WASHER		2
8	66-13952-1	. BELLCRANK ASSY, TURBOFAN DOOR POSITION INDICATOR		1
9	BACB28B2-140	. BUSHING		1
10	66-13952-4	. BELLCRANK ASSY, TURBOFAN DOOR POSITION INDICATOR		1
11	66-13897-1	. LINK ASSY, TURBOFAN DOOR POSITION INDICATOR		1
12	BACB28B2-140	. BUSHING		4
13	MS20470D4	. RIVET		2
14	NAS42DD4-19	. SPACER		2
15	66-13897-2	. LINK HALF, TURBOFAN DOOR POSITION INDICATOR		2
16	525374	. ACTUATOR, ELECTRO MECHANICAL ROTARY (V70210)		1
		ATTACHING PARTS		
	AN4H26A	. BOLT		3
17	NAS1104-16W	. BOLT		1
18	NAS1105-29W	. BOLT		1
19	NAS43DD5-25	. SPACER		2
20	AN960PD416	. WASHER		1
21	NAS679A4W	. NUT		1
22	NAS679A5	. NUT		1
23	66-8388-7	. LINK ASSY, AUXILIARY COOLANT AIR INLET DOOR SPRING		1
24	NAS561P4-12	. PIN		1
25	BACB10A437	. BEARING, (OPTIONAL BACB10A354)		1
26	NAS509-6	. NUT		1
27	66-8388-6	. BEARING, AUXILIARY COOLANT AIR INLET DOOR SPRING LINK BALL		1
28	NAS669-86	. RING		1
29	66-8388-1	. PISTON, AUXILIARY COOLANT AIR INLET DOOR SPRING LINK		1
30	63-8321	. SPRING, AUXILIARY COOLANT AIR INLET DOOR COMPRESSION		1
31	66-8388-4	. CYLINDER, AUXILIARY COOLANT AIR INLET DOOR SPRING LINK		1
31A	65-22239-1	. DUCT ASSY, TURBOFAN EXHAUST (LH ONLY)		1
31A	65-22239-2	. DUCT ASSY, TURBOFAN EXHAUST (RH ONLY)		1
32	66-13885-1	. BEARING, TURBOFAN DOOR POSITION INDICATOR SHAFT		1
		ATTACHING PARTS		
	AN3-4A	. BOLT		2
	AN960-10L	. WASHER		2
	NAS679A3W	. NUT		2
32A	69-15891-1	. SHAFT ASSY, TURBOFAN DOOR EXIT TORQUE (LH ONLY)		1
32A	69-15891-2	. SHAFT ASSY, TURBOFAN DOOR EXIT TORQUE (RH ONLY)		1
		ATTACHING PARTS		
	NAS1104-5W	. BOLT		4
	AN960PD416	. WASHER		2
	NAS679A4W	. NUT		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5	33	NAS1103-16W	. . . BOLT.		1
	34	AN960PD10L	. . . WASHER.		1
	35	NAS679A3W	. . . NUT		1
	36	BACB10A371	. . . BEARING		2
	37	NAS670-100	. . . RING.		1
	38	66-12390-1	. . . HOUSING, BEARING.		1
	39	66-8327-1	. . . BUSHING, AUXILIARY COOLANT AIR INLET DOOR TORQUE TUBE RETAINER		1
	40	NAS1103-22W	. . . BOLT.		1
	41	AN960PD10L	. . . WASHER.		1
	42	NAS679A3W	. . . NUT		1
	43	69-8645	. . . ARM, AUXILIARY COOLANT AIR INLET DOOR ACTUATOR. . .		1
	44	NAS1104-16W	. . . BOLT.		1
	45	AN960PD416L	. . . WASHER.		1
	46	NAS679A4W	. . . NUT		1
	47	66-8327-2	. . . BUSHING, AUXILIARY COOLANT AIR INLET DOOR TORQUE TUBE SPLINED		1
	48	66-8928	. . . HOUSING, BEARING.		1
	49	69-15864-1	. . . SHAFT, TURBOFAN EXIT DOOR TORQUE.		1
	50	65-22239-3	. . . DUCT, TURBOFAN EXHAUST.		1
	51	NAS1103-4W	. . . BOLT.		7
	52	NAS620A10L	. . . WASHER.		7
	53	66-13812-1	. . . RETAINER, SEAL.		1
	53A	65-21986-1	. . . DOOR ASSY, TURBOFAN EXHAUST DUCT (LH ONLY).		1
	53A	65-21986-12	. . . DOOR ASSY, TURBOFAN EXHAUST DUCT (RH ONLY).		1
	54	NAS517-3-7	. . . SCREW		1
	55	NAS517-3-4	. . . SCREW		6
	56	66-14152-1	. . . CLIP ASSY, TURBOFAN DOOR POSITION INDICATOR (LH ONLY)		1
	56	66-14152-2	. . . CLIP ASSY, TURBOFAN DOOR POSITION INDICATOR (RH ONLY)		1
	57	BACB28B2-140	. . . BUSHING		1
	58	66-14152-3	. . . CLIP, TURBOFAN DOOR POSITION INDICATOR (LH ONLY)		1
	58	66-14152-4	. . . CLIP, TURBOFAN DOOR POSITION INDICATOR (RH ONLY)		1
	59	66-13812-1	. . . RETAINER, SEAL.		1
	60	65-21986-10	. . . SEAL, TURBOFAN EXHAUST DUCT DOOR.		1
	61	65-21986-8	. . . HINGE, TURBOFAN EXHAUST DUCT DOOR (ALTERED FROM MS20001P8-1300)		1
	62	65-21986-7	. . . DOOR, TURBOFAN EXHAUST DUCT		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

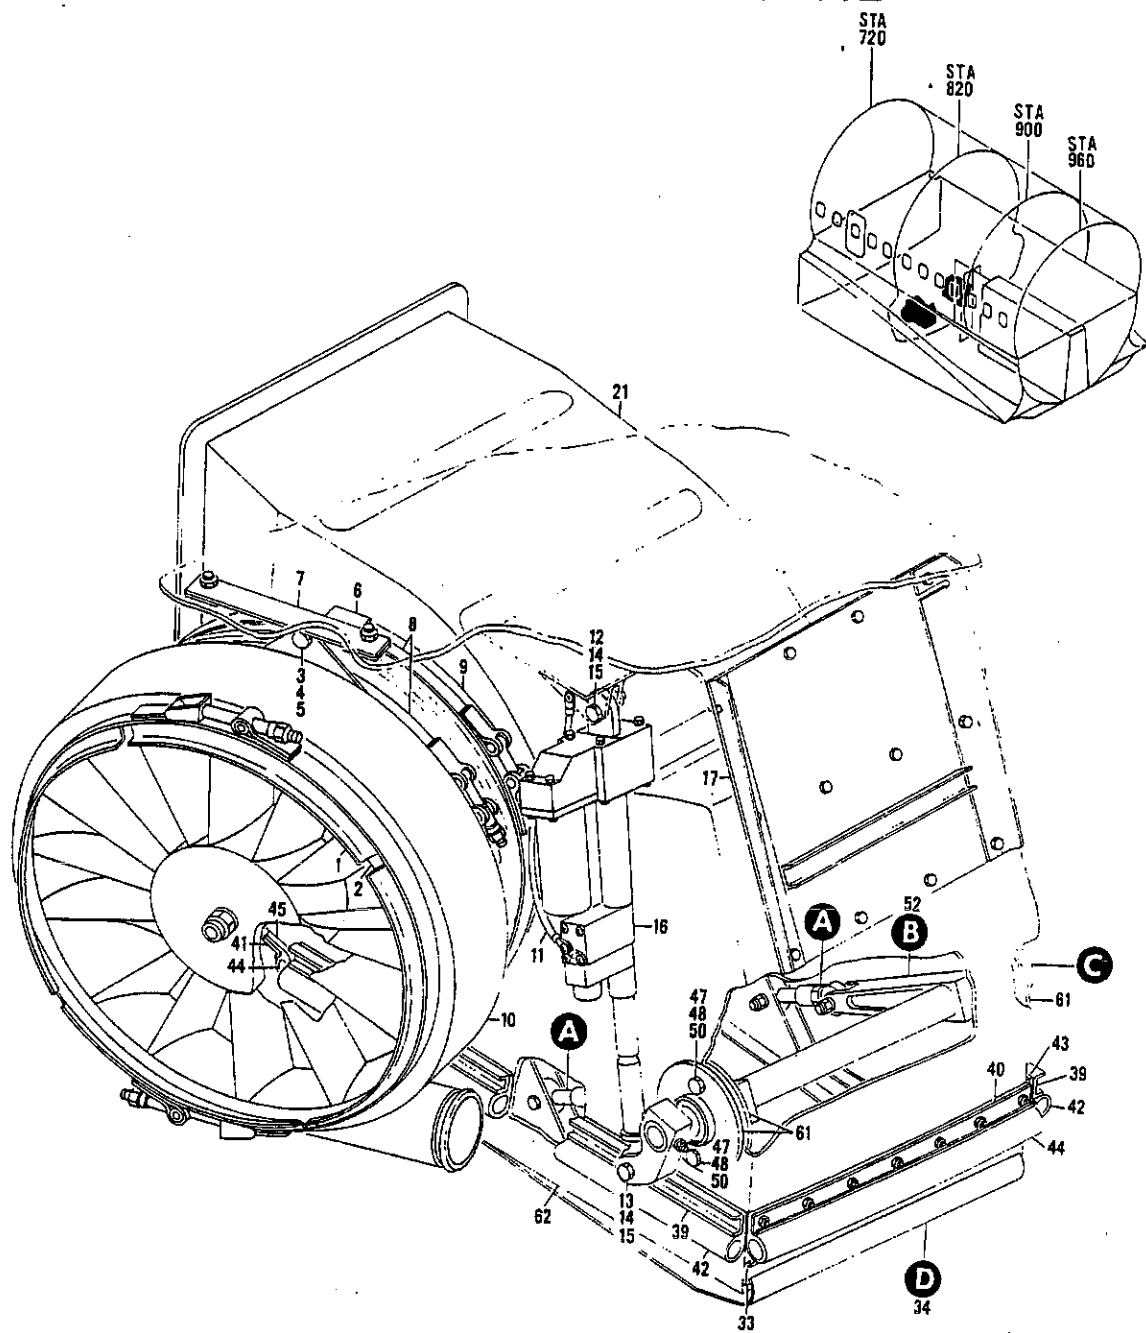


FIGURE 7. TURBOFAN INSTL, GROUND AIR MOVER (SHEET 1)

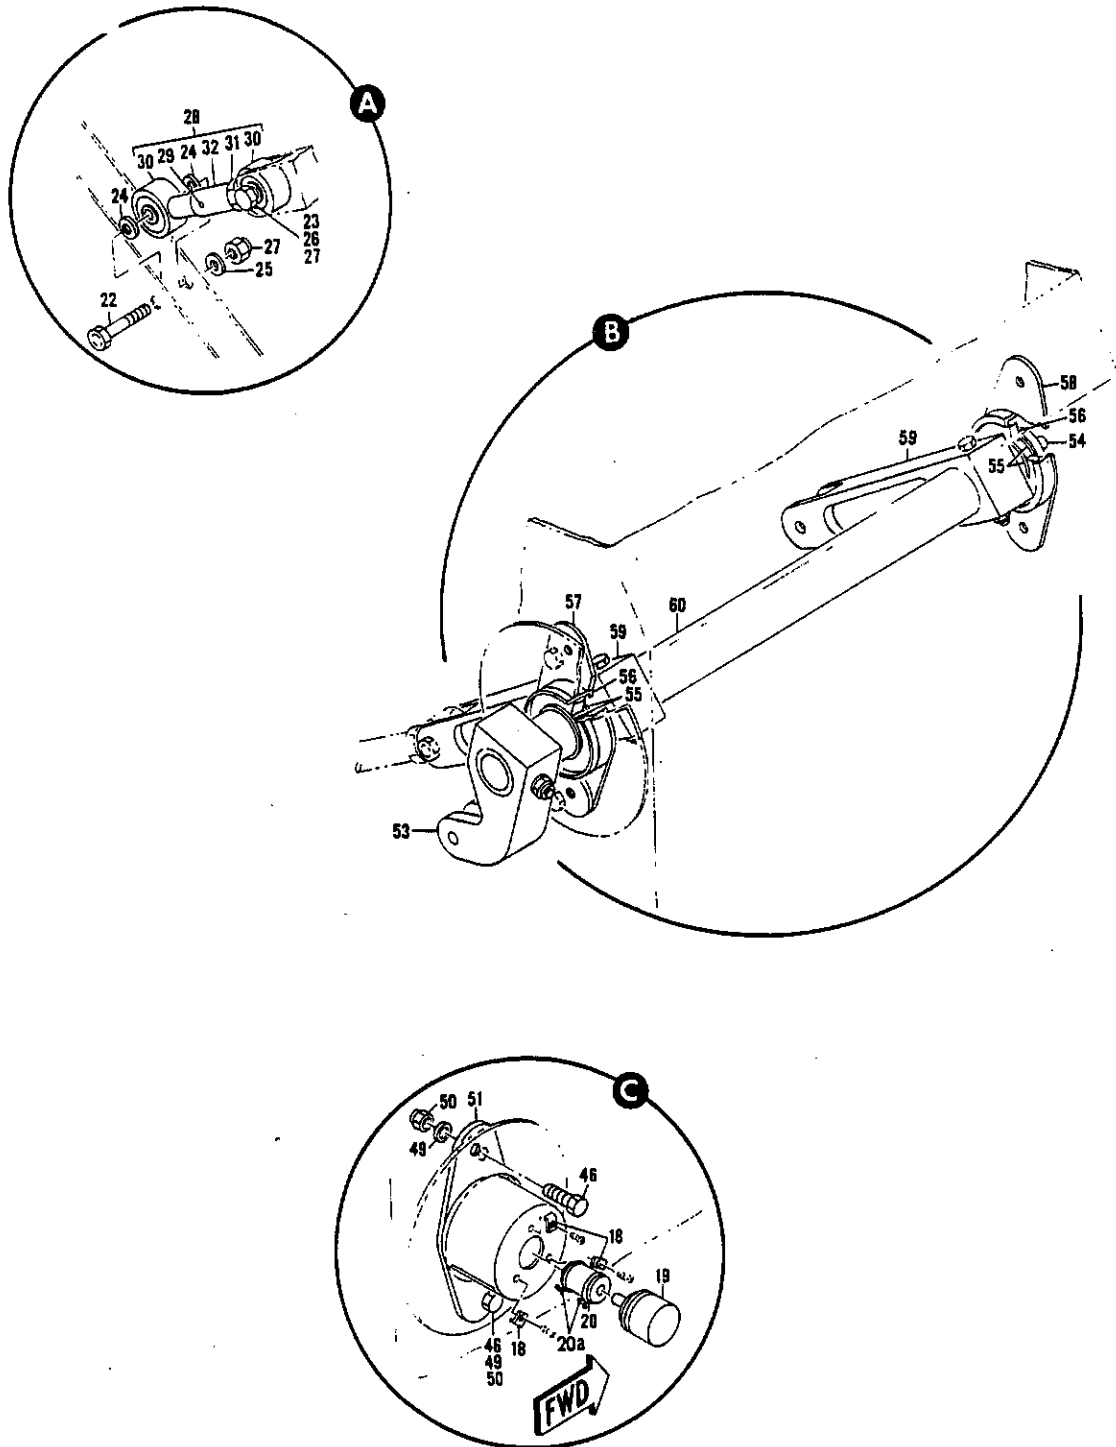


FIGURE 7. TURBOFAN INSTL, GROUND AIR MOVER (SHEET 2)

NOV 21/90

DETAILED PARTS LIST
21-03-7
PAGE 1

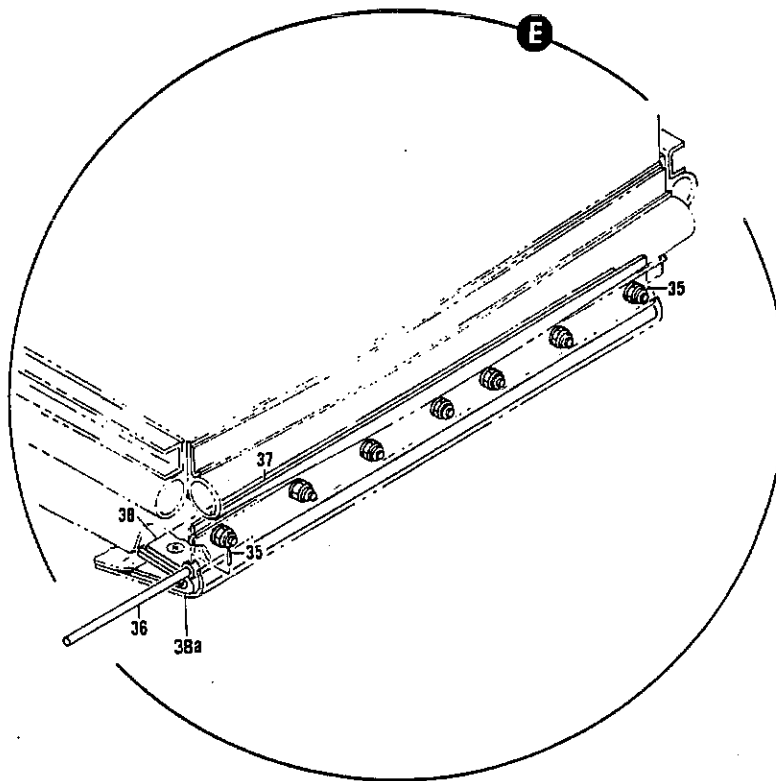
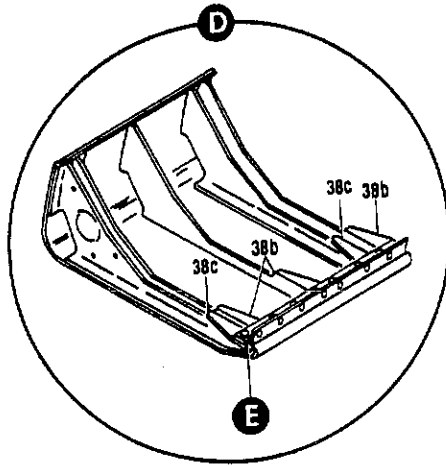


FIGURE 7. TURBOFAN INSTL, GROUND AIR MOVER (SHEET 3)

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
7	65-22930-1	TURBOFAN INSTL, GROUND AIR MOVER (LH) (SEE FIG. 2, ITEM 22)		RF
	65-22930-2	TURBOFAN INSTL, GROUND AIR MOVER (RH) (SEE FIG. 2, ITEM 22)		RF
1	4477-1383SH	. CLAMP, (V98625)		1
2	66-2362	. GASKET, TURBOFAN EXHAUST DUCT		1
3	AN4-7A	. BOLT		1
4	AN960D416	. WASHER		1
5	NAS679A4W	. NUT		1
6	65-4316-3	. BRACKET, GROUND AIR MOVER TURBOFAN SUPPORT.		1
	MS20470D4	. ATTACHING PARTS . RIVET		2
7	69-4328-1	. ANGLE ASSY, TURBOFAN SUPPORT (LH ONLY).		1
7	69-4328-2	. ANGLE ASSY, TURBOFAN SUPPORT (RH ONLY).		1
	AN4-6A	. BOLT		2
	AN960D416	. WASHER		2
8	BACC10P1-62-1912SH	. CLAMP		2
9	10-3365	. CONNECTOR, GROUND AIR FAN FLEXIBLE.		1
10	10-3086	. TURBOFAN, GROUND AIR COOLING.		1
11	MS25083-2887	. JUMPER ASSY		1
	NAS603-7	. ATTACHING PARTS . SCREW		2
	AN960D10L	. WASHER		2
	NAS679A3W	. NUT		2
12	NAS1105-10W	. BOLT		1
13	NAS1105-16W	. BOLT		1
14	AN960D516L	. WASHER		2
15	NAS679A5	. NUT		2
16	10-60766-3	. ACTUATOR, RAM AIR DAMPER LINEAR		1
17	69-16749-1	. BRACKET ASSY, RAM AIR EXHAUST DUCT SUPPORT.		1
	AN3-4A	. ATTACHING PARTS . BOLT		4
	AN3-5A	. BOLT		4
	AN4-5A	. BOLT		4
	AN960D10	. WASHER		4
	AN960D10L	. WASHER		4
	AN960D416	. WASHER		2
	AN960D416L	. WASHER		2
	NAS679A4W	. NUT		4
18	C141	. CLAMP, (V00328)		3
19	B29-10078-2	. POTENTIOMETER, (V30223)		1
20	66-22302-1	. COUPLING, POTENTIOMETER SHAFT FLEXIBLE. (OPTIONAL 66-22302-2)		1
20	66-22302-2	. COUPLING, POTENTIOMETER SHAFT FLEXIBLE. (OPTIONAL TO 66-22302-1)		1
21	65-22931-7	. DUCT ASSY, RAM AIR EXHAUST DOOR (LH ONLY)		1
21	65-22931-8	. DUCT ASSY, RAM AIR EXHAUST DOOR (RH ONLY)		1
22	NAS1104-14W	. BOLT		2
23	NAS1104-16W	. BOLT		2
24	NAS42DD8-3	. SPACER		4
25	AN960D416	. WASHER		2
26	AN960D416L	. WASHER		2
27	NAS679A4W	. NUT		4
28	69-16747-1	. ROD ASSY, RAM AIR EXIT DOOR		2
29	NAS561P4-8	. PIN		1
30	BACB10A436	. BEARING		2
31	AN316-6R	. NUT		1
32	69-16747-2	. BARREL, RAM AIR EXIT DOOR ROD		1
33	66-14223-1	. STRIP, RAM AIR EXHAUST DOOR HINGE BACKUP.		1
	NAS1103-4W	. ATTACHING PARTS . BOLT		7
	AN960DIOL	. WASHER		7
34	65-22933-1	. DOOR ASSY, RAM AIR EXIT		1
35	NAS561-2-5	. PIN		2
36	65-22933-7	. PIN, RAM AIR EXIT DOOR HINGE (ALTERED FROM. MS20253P4-1180)		1
37	65-22933-6	. HINGE HALF, RAM AIR EXIT DOOR		1
38	65-22933-5	. HINGE HALF, RAM AIR EXIT DOOR		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
7			ATTACHING PARTS		
	NAS1503-4W	• • •	BOLT.		2
	NAS1103-4W	• • •	BOLT.		3
	NAS1103-3W	• • •	BOLT.		3
	AN960D10	• • •	WASHER.		8
	NAS679A3W	• • •	NUT		8
			-----*		
38A	66-14190-1	• • •	SUPPORT, RAM AIR EXIT DOOR HINGE.		1
38B	65-22933-4	• • •	FRAME, RAM AIR EXIT DOOR.		3
38C	65-22933-3	• • •	FRAME, RAM AIR EXIT DOOR.		2
39	66-14308-1	• • •	STRIP, RAM AIR EXHAUST DUCT SEAL BACKUP		2
40	69-16785-1	• • •	STRIP, RAM AIR EXHAUST DUCT SEAL BACKUP		1
41	69-16785-2	• • •	STRIP, RAM AIR EXHAUST DUCT SEAL BACKUP		1
			ATTACHING PARTS		
	NAS514-632-14	• • •	SCREW		18
	NAS514-632-10	• • •	SCREW		18
	BACW10UD6	• • •	WASHER.		36
	AN960D6L	• • •	WASHER.		36
	NAS679A06W	• • •	NUT		36
			-----*		
42	65-22931-3	• • •	SEAL, RAM AIR EXHAUST DOOR DUCT (EXTRUSION NO. BAC1521-568 X 21.8 IN. LG)		2
43	66-14355-1	• • •	SPACER, RAM AIR EXHAUST DUCT SEAL		1
44	65-22931-4	• • •	SEAL, RAM AIR EXHAUST DOOR DUCT (EXTRUSION NO. BAC1521-568 X 13 IN. LG)		2
45	66-14215-1	• • •	SPACER, RAM AIR EXHAUST DUCT SEAL		1
46	NAS1104-5W	• • •	BOLT.		2
47	NAS1104-4W	• • •	BOLT.		2
48	AN960D416L	• • •	WASHER.		2
49	AN960D416	• • •	WASHER.		2
50	NAS679A4W	• • •	NUT		4
51	69-17280-2	• • •	RETAINER, RAM AIR EXIT DOOR BEARING		1
52	69-17311-1	• • •	SHAFT ASSY, RAM AIR EXIT DOOR TORQUE (LH ONLY).		1
52	69-17311-4	• • •	SHAFT ASSY, RAM AIR EXIT DOOR TORQUE (RH ONLY).		1
53	69-16745-1	• • •	ARM, RAM AIR EXIT DOOR ACTUATOR		1
			ATTACHING PARTS		
	NAS1104-24W	• • •	BOLT.		1
	AN960PD416L	• • •	WASHER.		1
	NAS679A4W	• • •	NUT		1
			-----*		
54	66-14284-1	• • •	REDUCER		1
55	NAS670-100	• • •	RING.		4
56	BACB10A371	• • •	BEARING		2
57	66-12390-1	• • •	HOUSING, BEARING.		1
58	66-14225-1	• • •	HOUSING, RAM AIR EXHAUST DUCT BEARING		1
59	69-16746-1	• • •	ARM, RAM AIR EXHAUST DOOR TORQUE.		2
			ATTACHING PARTS		
	NAS1103-21W	• • •	BOLT.		2
	AN960PD10L	• • •	WASHER.		2
	NAS679A3W	• • •	NUT		2
			-----*		
60	69-17350-1	• • •	SHAFT, RAM AIR EXIT DOOR TORQUE		1
61	69-16762-1	• • •	DOUBLER, RAM AIR EXHAUST DUCT		3
			ATTACHING PARTS		
	MS20470B5	• • •	RIVET		12
			-----*		
62	65-22932-1	• • •	DUCT ASSY, RAM AIR EXHAUST EXIT (LH ONLY)		1
62	65-22932-2	• • •	DUCT ASSY, RAM AIR EXHAUST EXIT (RH ONLY)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

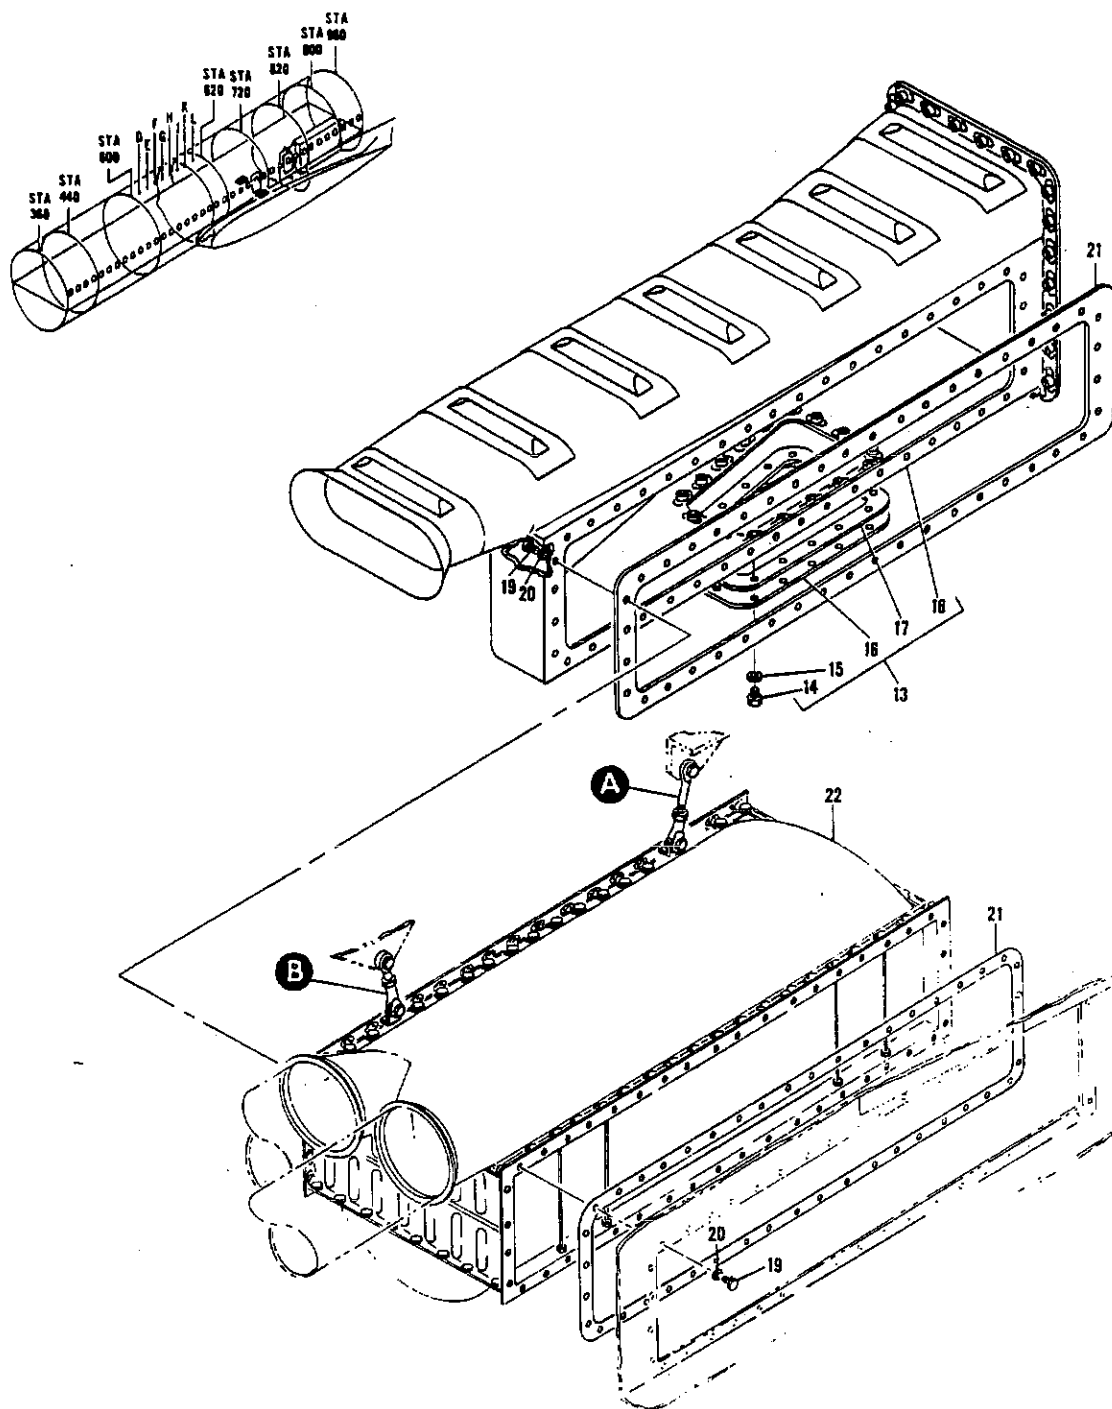


FIGURE 8. EXCHANGER INSTL, AIR CONDITIONING PACK PRIMARY HEAT (SHEET 1)


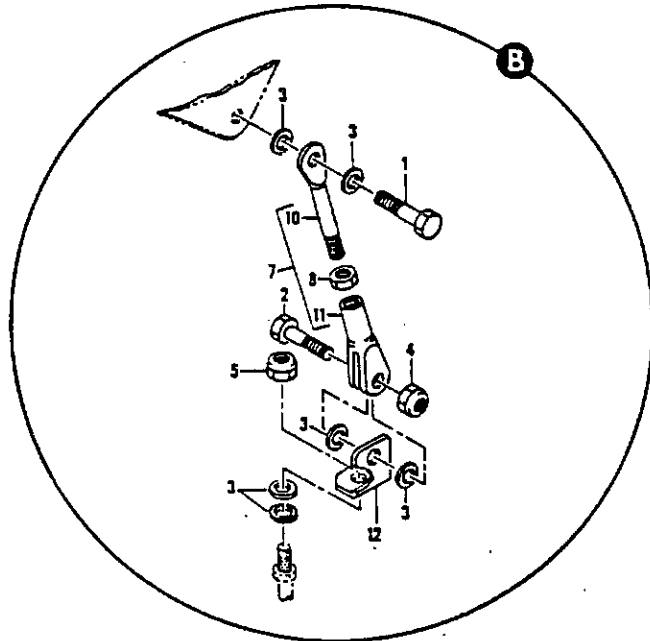


FIGURE 8. EXCHANGER INSTL, AIR CONDITIONING PACK PRIMARY HEAT (SHEET 2)

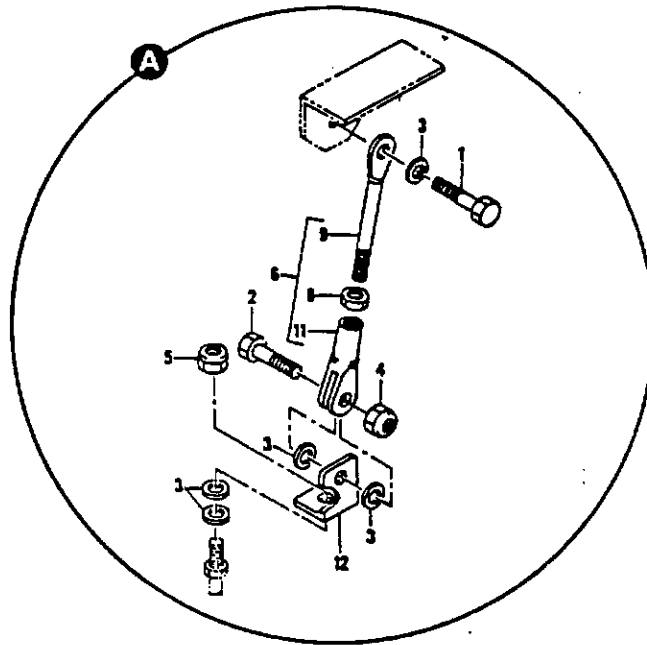

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
8	65-4314-5	EXCHANGER INSTL, AIR CONDITIONING PACK PRIMARY HEAT . .								RF
		(LH) (SEE FIG. 2, ITEM 23 AND FIG. 2A, ITEM 118)								
	65-4314-6	EXCHANGER INSTL, AIR CONDITIONING PACK PRIMARY HEAT . .								RF
		(RH) (SEE FIG. 2, ITEM 23 AND FIG. 2A, ITEM 118)								
1	AN4-6A	. BOLT.								2
2	AN4-7A	. BOLT.								2
3	AN960D416	. WASHER.								11
4	NAS679A4W	. NUT								2
5	AN363C428	. NUT								2
6	69-2355-2	. RDD ASSY, HEAT EXCHANGER PRIMARY SUPPORT.								1
7	69-2355-3	. RDD ASSY, HEAT EXCHANGER PRIMARY SUPPORT.								1
8	AN316-4R	. NUT								1
9	69-2571-1	. . TERMINAL, PRIMARY HEAT EXCHANGER SUPPORT (USED ON .								1
		69-2355-2)								
10	69-2571	. . TERMINAL, PRIMARY HEAT EXCHANGER SUPPORT (USED ON .								1
		69-2355-3)								
11	AN665-34R	. . FORK.								1
12	66-2684-1	. CLIP, PRIMARY HEAT EXCHANGER SUPPORT.								2
13	65-1317-13	. DUCT ASSY, PRIMARY HEAT EXCHANGER COOLING AIR (LH . .								1
		ONLY)								
13	65-1317-14	. DUCT ASSY, PRIMARY HEAT EXCHANGER COOLING AIR (RH . .								1
		ONLY)								
14	AN3-3A	. . BOLT.								16
15	AN960-10L	. . WASHER.								16
16	69-1016-1	. . COVER, PRIMARY HEAT EXCHANGER COOLING AIR DUCT (LH								1
		ONLY)								
16	69-1016-2	. . COVER, PRIMARY HEAT EXCHANGER COOLING AIR DUCT (RH								1
		ONLY)								
17	69-1016	. . GASKET, AIR CONDITIONING PACK PRIMARY HEAT.								1
		EXCHANGER								
18	65-1317-15	. . DUCT ASSY, PRIMARY HEAT EXCHANGER COOLING AIR (LH .								1
		ONLY)								
18	65-1317-16	. . DUCT ASSY, PRIMARY HEAT EXCHANGER COOLING AIR (RH .								1
		ONLY)								
19	AN3-5A	. BOLT.								88
20	AN960C10L	. WASHER.								88
21	69-1012	. GASKET, AIR CONDITIONING PACK HEAT EXCHANGER.								2
22	171010	. EXCHANGER, CABIN AIR CONDITIONING AIR CYCLE SYSTEM. .								1
		PRIMARY HEAT (V70210)								
22	10-3085-12	. EXCHANGER, CABIN AIR CONDITIONING AIR CYCLE SYSTEM. .								1
		PRIMARY HEAT (PART NO. 171010 (V70210))								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

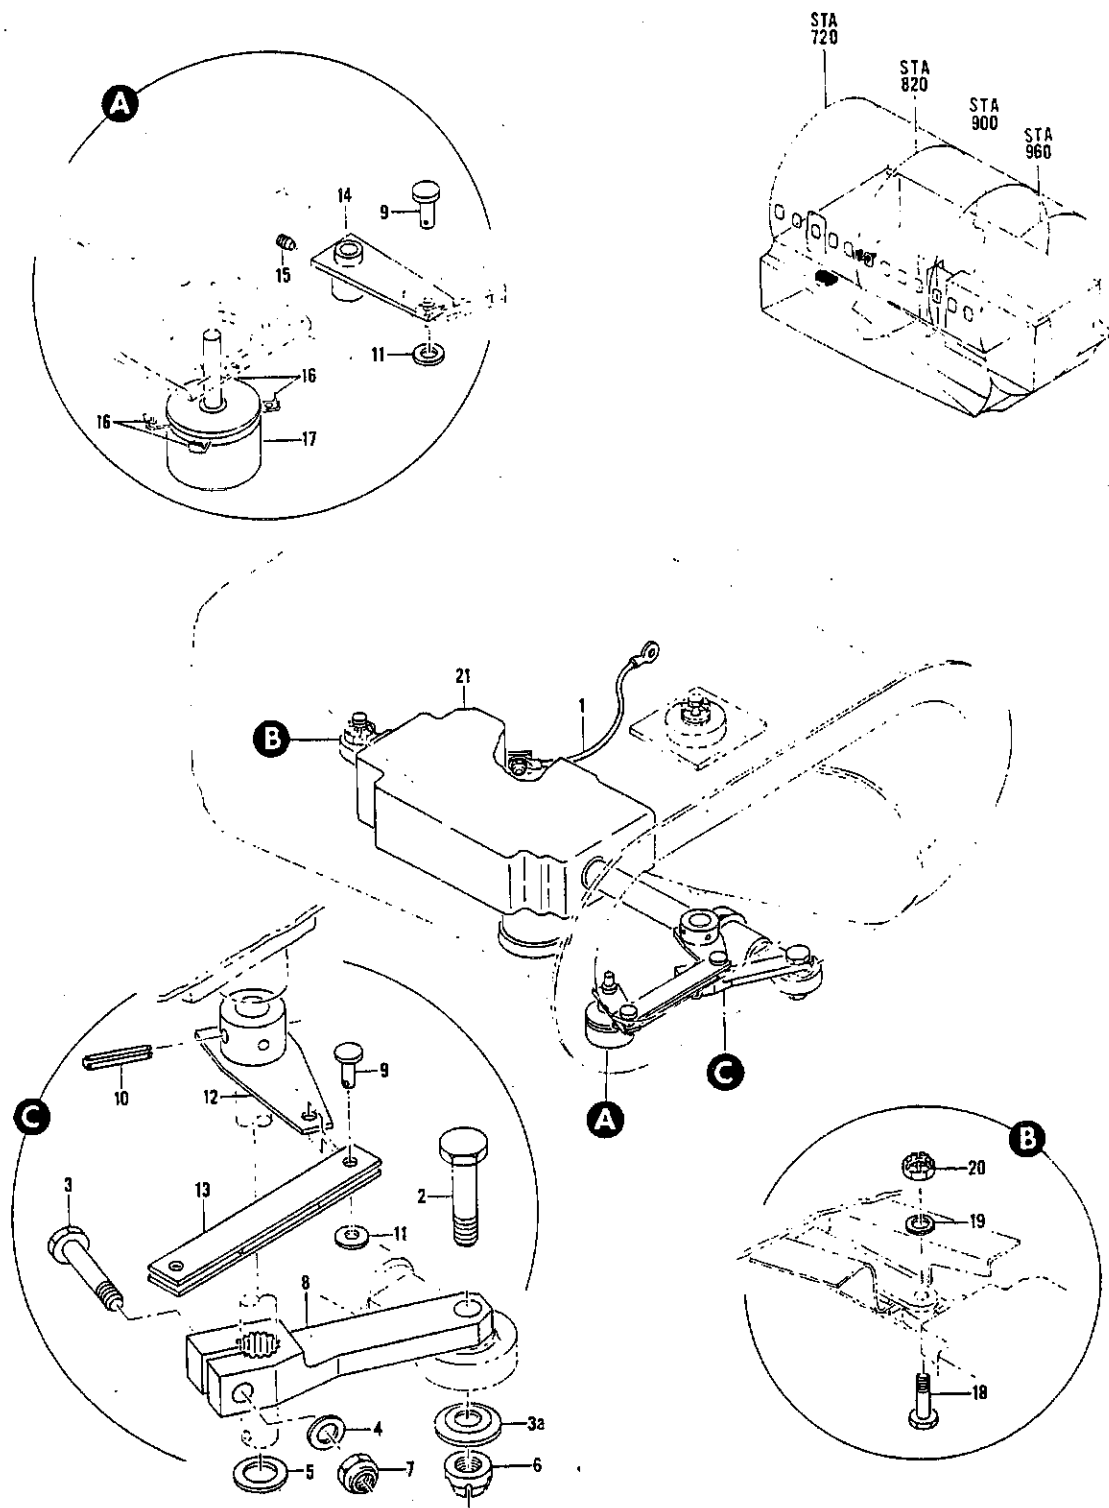


FIGURE 9. ACTUATOR INSTL, SECONDARY HEAT EXCHANGER DAMPER



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
9	65-23987-1		ACTUATOR INSTL, SECONDARY HEAT EXCHANGER DAMPER (LH). (SEE FIG. 2, ITEM 34 AND FIG. 2A, ITEM 115)		RF
	65-23987-2		ACTUATOR INSTL, SECONDARY HEAT EXCHANGER DAMPER (RH). (SEE FIG. 2, ITEM 34 AND FIG. 2A, ITEM 115)		RF
1	MS25083-2AB7		. JUMPER ASSY, (LH ONLY).		1
1	MS25083-2AB11		. JUMPER ASSY, (RH ONLY).		1
			ATTACHING PARTS		
	AN3-4A		. BOLT.		1
	AN520-6-6		. SCREW.		1
	AN960D10L		. WASHER.		3
	AN960D6L		. WASHER.		3
	NAS679A3W		. NUT.		1
	NAS679A06W		. NUT.		1
2	AN4C10		. BOLT.		1
3	AN3C10A		. BOLT.		1
3A	BACW10Q4		. WASHER.		1
4	AN960C10L		. WASHER.		1
5	AN960C616L		. WASHER.		1
6	AN310C4		. NUT.		1
7	NAS679C3W		. NUT.		1
8	66-2639-3		. ARM, RAM AIR EXIT DAMPER LEVER (LH ONLY).		1
8	66-2639-4		. ARM, RAM AIR EXIT DAMPER LEVER (RH ONLY).		1
9	MS20392-1-7		. PIN.		2
10	NAS561C2-10		. PIN.		1
11	AN960-4		. WASHER.		2
12	66-14337-1		. BELL CRANK ASSY, SECONDARY HEAT EXCHANGER DAMPER. POSITION INDICATOR		1
13	66-14352-1		. LINK ASSY, SECONDARY HEAT EXCHANGER DAMPER POSITION . INDICATOR		1
14	66-14351-1		. BELL CRANK ASSY, POSITION INDICATOR		1
15	CS8		. SCREW, SET (V00141)		1
16	CI41		. CLAMP, (V00328)		4
17	B29-10078-2		. POTENTIOMETER, (V30223) (OPTIONALS B29-10078-2A, -2B (V30223))		1
17	B29-10078-2A		. POTENTIOMETER, (V30223) (OPTIONAL TO B29-10078-2, -2B (V30223))		1
17	B29-10078-2B		. POTENTIOMETER, (V30223) (OPTIONAL TO B29-10078-2, -2A (V30223))		1
18	AN4-7		. BOLT.		1
19	AN960PD416L		. WASHER.		1
20	AN310-4		. NUT.		1
21	10-3331		. ACTUATOR, RAM AIR EXIT DAMPER		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

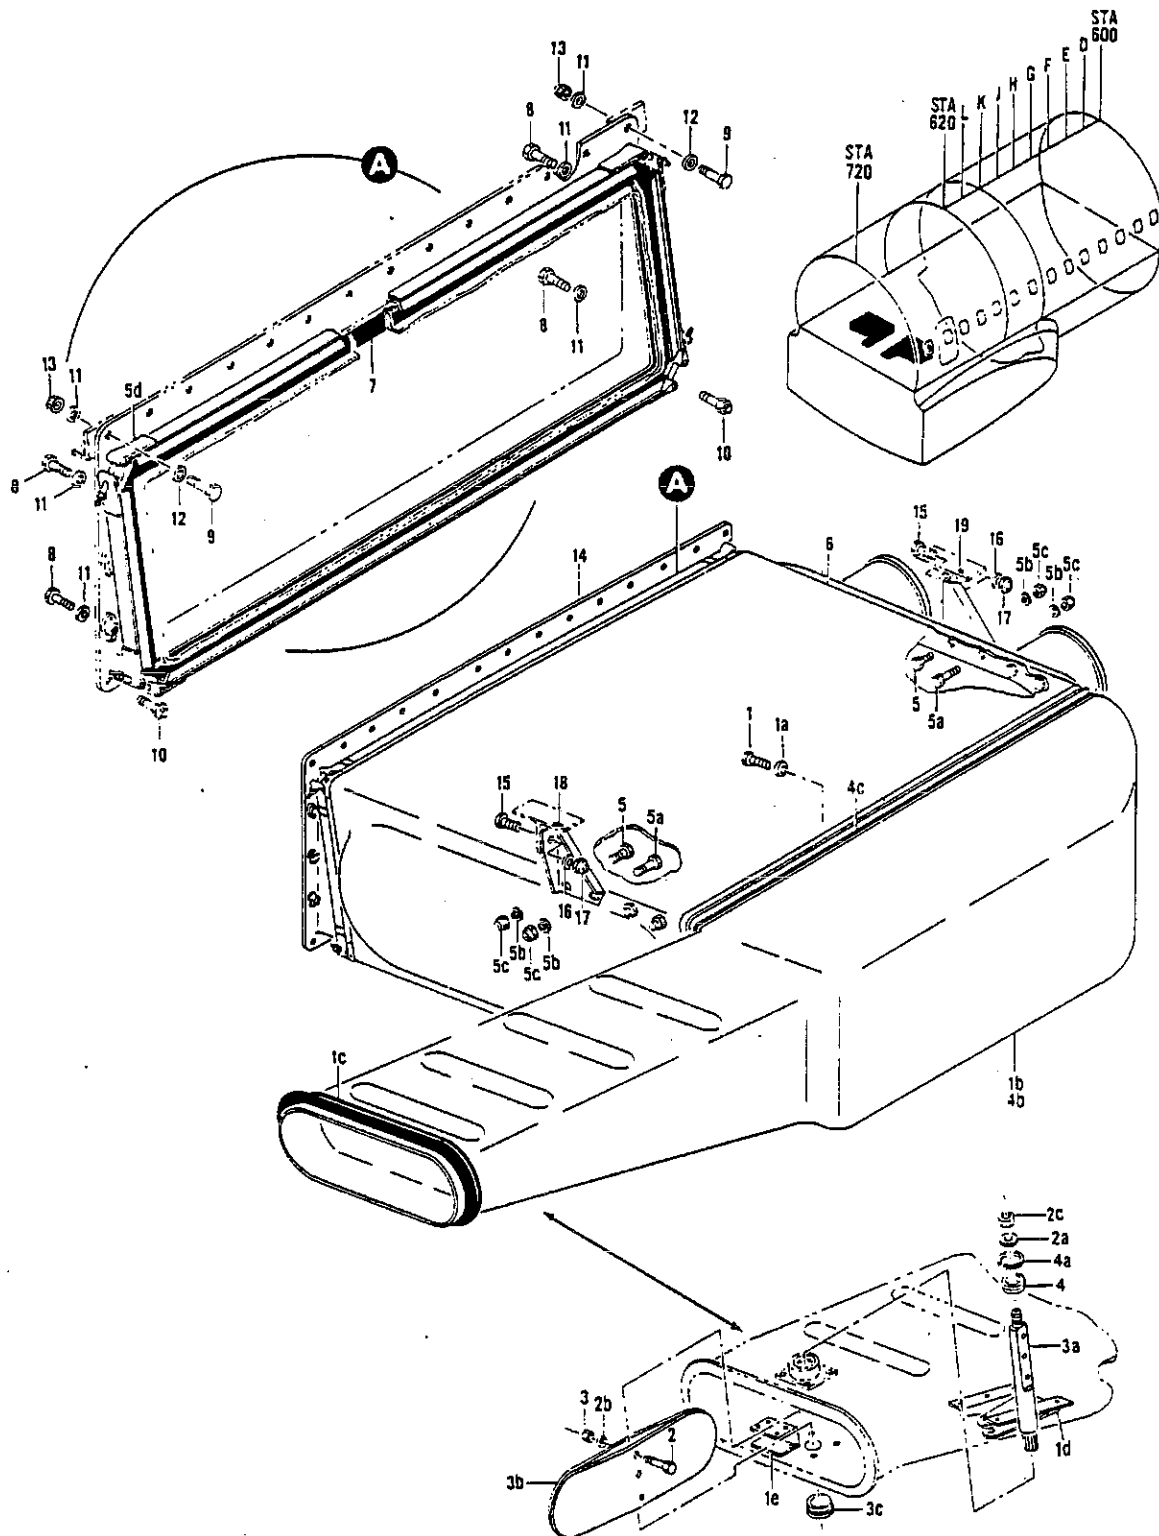


FIGURE 10. EXCHANGER INSTL, AIR CONDITIONING PACK SECONDARY HEAT

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
10	65-4312-1	EXCHANGER INSTL, AIR CONDITIONING PACK SECONDARY HEAT LH (SEE FIG. 1, ITEM 40, FIG. 2, ITEM 35 AND FIG. 2A, ITEM 108)		RF
	65-4312-2	EXCHANGER INSTL, AIR CONDITIONING PACK SECONDARY HEAT RH (SEE FIG. 1, ITEM 40, FIG. 2, ITEM 35 AND FIG. 2A, ITEM 108)		RF
1	AN3-6A	. BOLT.		37
1A	AN960D10L	. WASHER.		37
1B	65-24124-1	. DAMPER ASSY, SECONDARY HEAT EXCHANGER SHUTOFF (LH . . ONLY)		1
1B	65-24124-2	. DAMPER ASSY, SECONDARY HEAT EXCHANGER SHUTOFF (RH . . ONLY)		1
1D	69-15783-1	. . BRACKET ASSY, SECONDARY HEAT EXCHANGER DAMPER . . . ACTUATOR SUPPORT ATTACHING PARTS		1
	MS20470D6	. . RIVET		6
1E	69-17743-1	. . BRACKET, SECONDARY HEAT EXCHANGER DAMPER POSITION . INDICATOR SUPPORT ATTACHING PARTS		1
	MS20426D4	. . RIVET		4
2	AN3-6A	. . BOLT.		3
2A	AN960C416L	. . WASHER.		1
2B	AN960PD10L	. . WASHER.		3
2C	AN310C4	. . NUT		1
3	NAS679A3W	. . NUT		3
3A	69-17584-1	. . SHAFT, SECONDARY HEAT EXCHANGER DUCT DAMPER . . .		1
3B	69-15792-1	. . DAMPER, SECONDARY HEAT EXCHANGER AIR SHUTOFF. . .		1
3C	NAS77A7-45	. . BUSHING		1
4	AN201KP4A	. . BEARING		1
4A	NAS669-75	. . RING.		1
4B	65-4347-15	. . DUCT ASSY, SECONDARY HEAT EXCHANGER (LH ONLY) . . .		1
4B	65-4347-16	. . DUCT ASSY, SECONDARY HEAT EXCHANGER (RH ONLY) . . .		1
4C	9-64860	. . GASKET, SECONDARY HEAT EXCHANGER MOUNTING		1
5	AN3-10A	. . BOLT.		2
5A	AN3-11A	. . BOLT.		2
5B	AN960D10L	. . WASHER.		4
5C	NAS679A3W	. . NUT		4
5D	65-4312-3	. COUPLING, SECONDARY HEAT EXCHANGER 1/4 T BOLT SPECIAL RECTANGULAR 40& V BAND (ALTERED FROM 18399 (V98625))		1
6	10-3085-3	. EXCHANGER, AIR CYCLE SYSTEM CABIN AIR CONDITIONING. . SECONDARY HEAT		1
7	9-64870	. GASKET, SECONDARY HEAT EXCHANGER MOUNTING		1
8	AN3-4A	. . BOLT.		6
9	AN3-5A	. . BOLT.		14
10	BACB30CC8-5	. . BOLT.		12
11	AN960D10L	. . WASHER.		20
12	BACW10T10L	. . WASHER.		14
13	NAS679A3W	. . NUT		14
14	5-95664-3000	. ADAPTER ASSY, SECONDARY HEAT EXCHANGER. (OPTIONAL TO 5-95664-3005)	0150	1
14	5-95664-3005	. ADAPTER ASSY, SECONDARY HEAT EXCHANGER. (OPTIONAL 5-95664-3000)	0150	1
14	5-95664-3005	. ADAPTER ASSY, SECONDARY HEAT EXCHANGER.	5199	1
15	AN4-5A	. . BOLT.		2
16	AN960D416	. . WASHER.		2
17	NAS679A4W	. . NUT		2
18	69-3570-1	. . CLIP, SECONDARY HEAT EXCHANGER SUPPORT (LH ONLY). . .		1
18	69-3570-2	. . CLIP, SECONDARY HEAT EXCHANGER SUPPORT (RH ONLY). . .		1
19	69-3570-3	. . CLIP, SECONDARY HEAT EXCHANGER SUPPORT (LH ONLY). . .		1
19	69-3570-4	. . CLIP, SECONDARY HEAT EXCHANGER SUPPORT (RH ONLY). . .		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

R
R
R
R

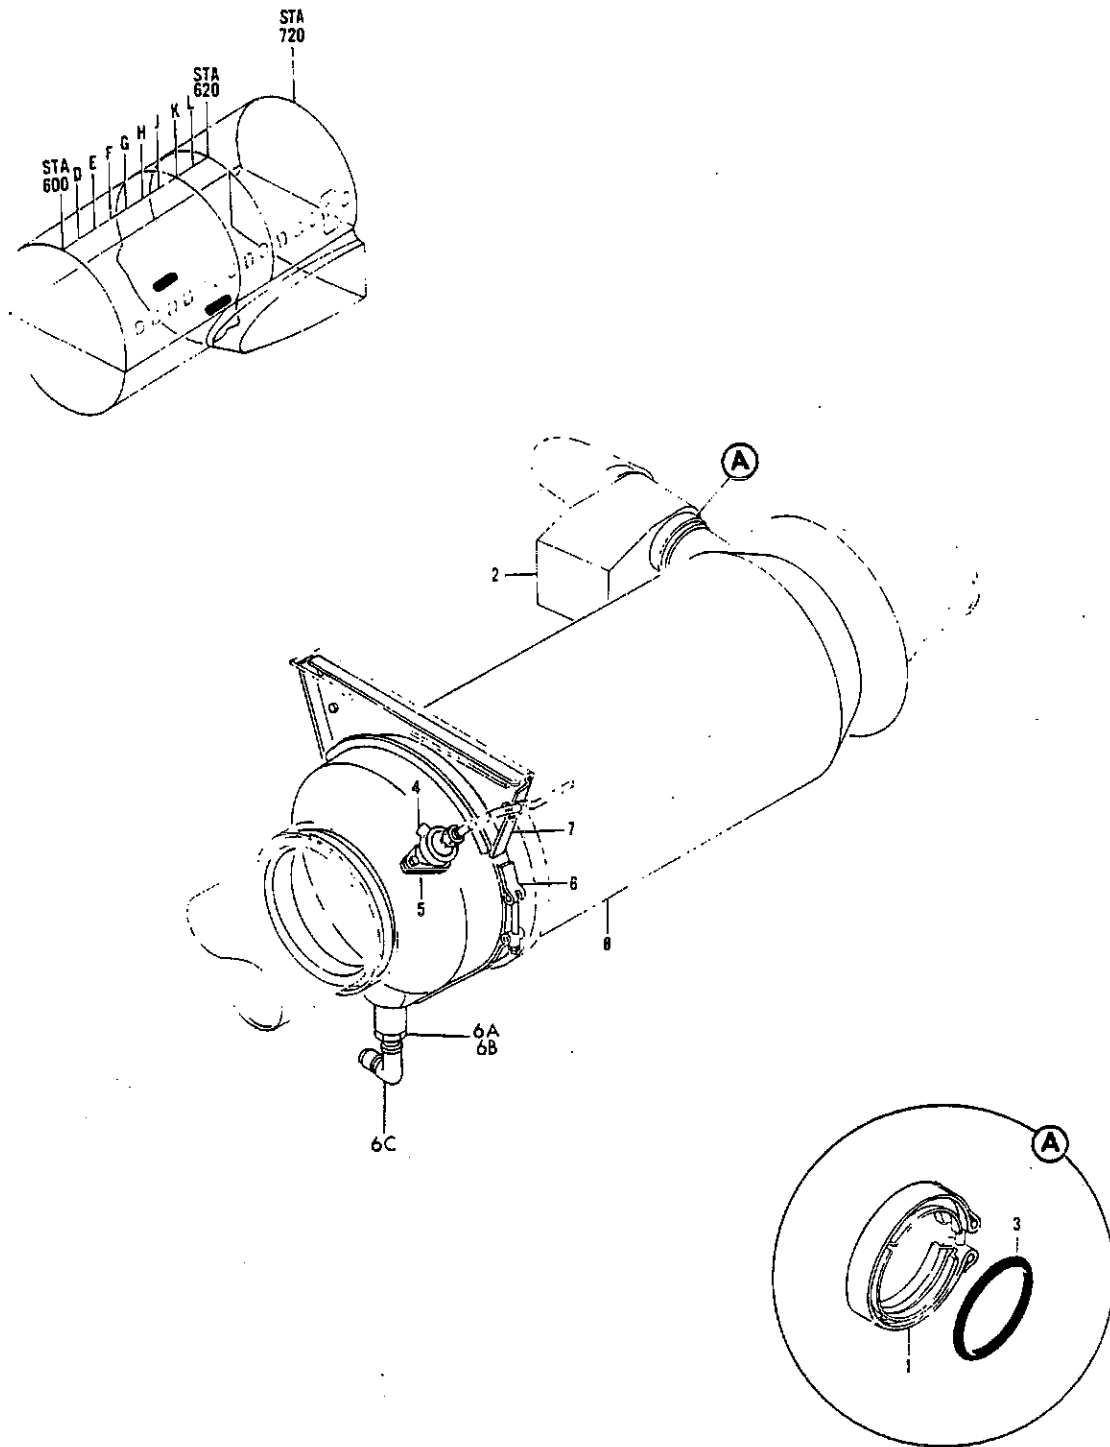


FIGURE 11. SEPARATOR INSTL, SECTION 54 AIR CONDITIONING PACK WATER



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
11	65-4311-1	SEPARATOR INSTL, SECTION 54 LH SIDE AIR CONDITIONING. PACK WATER (SEE FIG. 1, ITEM 57 AND FIG. 2, ITEM 66)		RF
	65-4311-2	SEPARATOR INSTL, SECTION 54 RH SIDE AIR CONDITIONING. PACK WATER (SEE FIG. 1, ITEM 57 AND FIG. 2, ITEM 66)		RF
1	BACC10AU250	. CLAMP		1
2	10-3085-5	. VALVE, CABIN AIR CONDITIONING AIR CYCLE SYSTEM. . . . ANTI-ICING		1
3	BACP11J145	. PACKING		1
4	10-3085-9	. THERMOSTAT, CABIN AIR CONDITIONING AIR CYCLE SYSTEM . ANTI-ICING		1
	AN501AC10-10	ATTACHING PARTS		
	AN960D10	. SCREW		3
		. WASHER.		3
5	172997	. GASKET, (V70210).		1
6	BACC10P7-75-1050SH	. CLAMP		1
7	90-3522-3000	. BRACKET ASSY, FORWARD END WATER SEPARATOR ATTACHING PARTS		1
	AN3-4A	. BOLT.		6
	AN960D10	. WASHER.		6
	NAS679A3W	. NUT		6
8	10-3085-11	. SEPARATOR, CABIN AIR CONDITIONING AIR CYCLE SYSTEM. . WATER (SAME AS 85640-3-1 (V70210))		1
8	85640-3-1	. SEPARATOR, CABIN AIR CONDITIONING AIR CYCLE SYSTEM. . WATER (V70210) (SAME AS BAC NO. 10-3085-11) (SEE FIG. 31)		RF

MISSING ITEM NUMBERS ARE NOT APPLICABLE

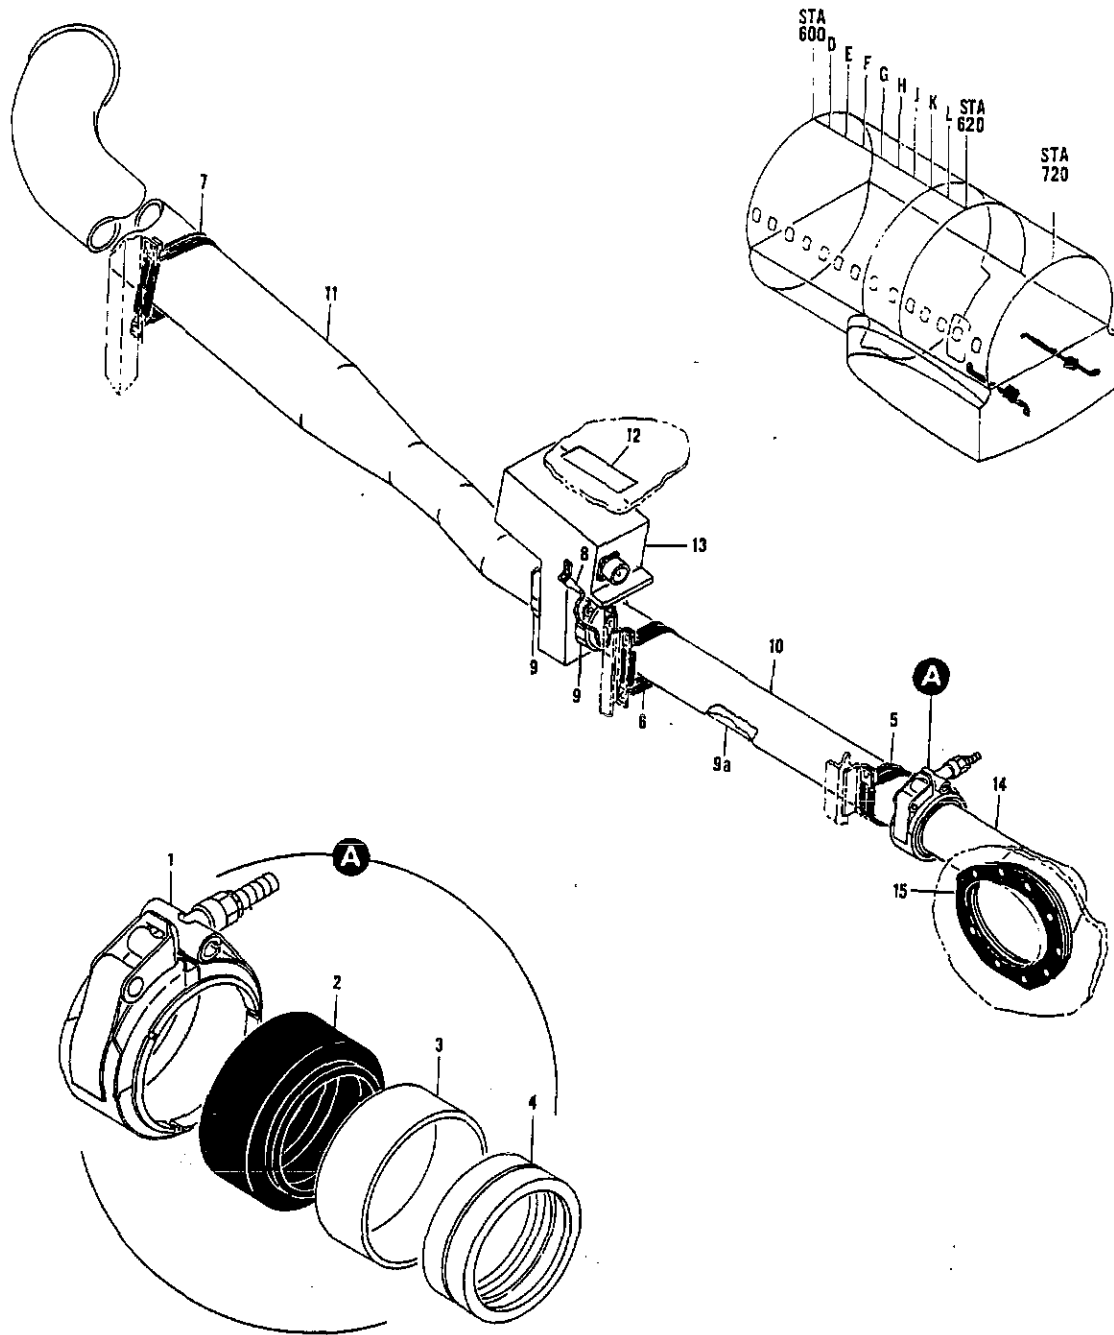


FIGURE 12. DUCT INSTL, SECTION 54 AIR CONDITIONING PACK RAM AIR

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
12	65-4317-1	DUCT INSTL, SECTION 54 AIR CONDITIONING PACK RAM AIR. . (LH) (SEE FIG. 1, ITEM 58, FIG. 2, ITEM 38 AND FIG. 2A, ITEM 10)		RF
	65-4317-2	DUCT INSTL, SECTION 54 AIR CONDITIONING PACK RAM AIR. . (RH) (SEE FIG. 1, ITEM 58, FIG. 2, ITEM 38 AND FIG. 2A, ITEM 10)		RF
1	BACC10BR8250	. CLAMP		1
2	BACC10BR4250	. SLEEVE		1
3	BACC10BR3250	. RING		1
4	BACC10BR2250	. RETAINER ASSY		1
5	MS21919DG40	. CLAMP		1
6	BACC10BA40	. CLAMP		1
7	BACC10BA64	. CLAMP		1
		ATTACHING PARTS		
	AN3-5A	. BOLT		5
	AN960D10	. WASHER		5
	NAS679A3W	. NUT		5
8	MS25083-2BB6	. JUMPER ASSY		1
		ATTACHING PARTS		
	AN3-5A	. BOLT		2
	AN960D10	. WASHER		2
	NAS679A3W	. NUT		2
9	BACC10DP250	. CLAMP		2
10	69-4206	. DUCT ASSY, AIR CONDITIONING PACK RAM AIR INLET.		1
11	65-4331-1	. DUCT ASSY, AIR CONDITIONING PACK RAM AIR (LH ONLY).		1
11	65-4331-2	. DUCT ASSY, AIR CONDITIONING PACK RAM AIR (RH ONLY).		1
12	BACM10V41-2AB	. MARKER-ALUMINUM FOIL, RAM AIR SHUTOFF-VALVE-AIR FLOW		1
13	10-3291	. VALVE, 2-1/2 IN. DIA AIR SHUTOFF.		1
14	69-2547-3	. ADAPTER, AIR CONDITIONING PACK RAM AIR DUCT (LH ONLY)		1
14	69-2547-4	. ADAPTER, AIR CONDITIONING PACK RAM AIR DUCT (RH ONLY)		1
		ATTACHING PARTS		
	AN960D10L	. WASHER		9
	NAS679A3W	. NUT		9
15	90-3379	. GASKET, RAM AIR DUCT MOUNTING		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

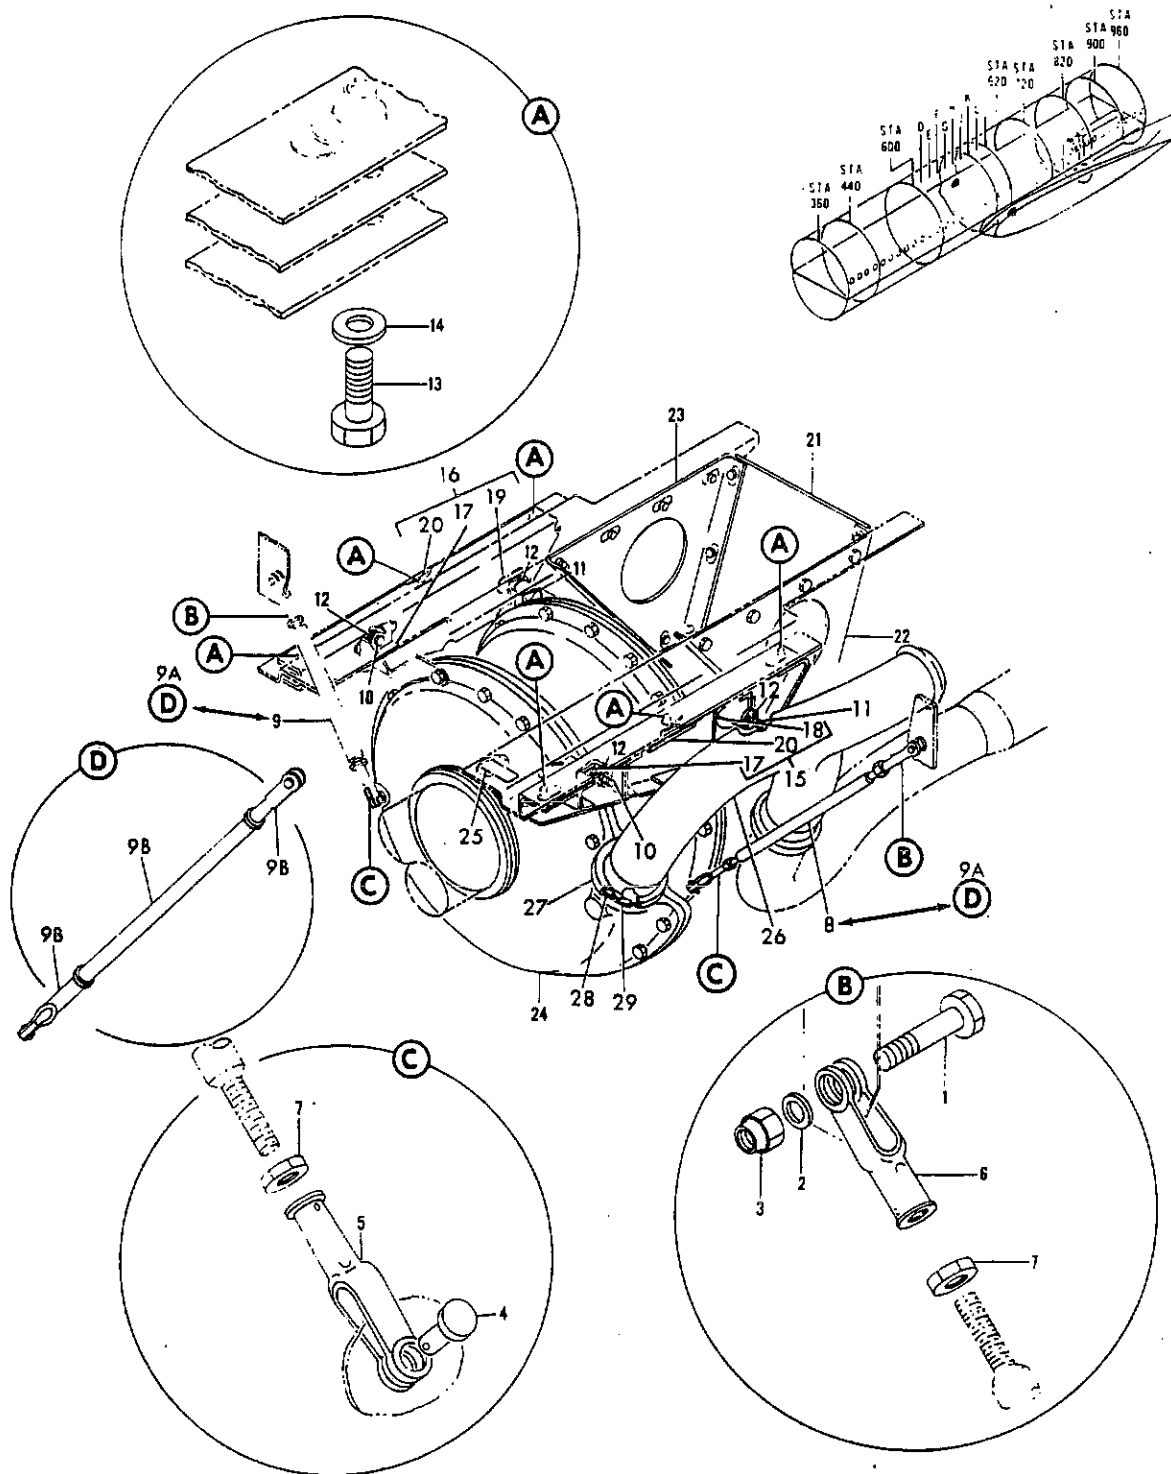


FIGURE 13. MACHINE INSTL, AIR CONDITIONING PACK AIR CYCLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
13	65-4313-1	MACHINE INSTL, AIR CONDITIONING PACK AIR CYCLE (LH) . .								RF
		(SEE FIG. 1, ITEM 52 AND FIG. 2, ITEM 55)								
	65-4313-2	MACHINE INSTL, AIR CONDITIONING PACK AIR CYCLE (RH) . .								RF
		(SEE FIG. 1, ITEM 52 AND FIG. 2, ITEM 55)								
1	AN4-10A	. BOLT.								2
2	AN960D416	. WASHER.								2
3	NAS679A4W	. NUT								2
4	AN393-11	. PIN								2
5	AN486-4	. CLEVIS.								2
6	AN486-2	. CLEVIS.								2
7	AN316-4R	. NUT								4
8	NAS355-60-910	. TUBE, (LH ONLY)								1
8	NAS355-60-1010	. TUBE, (RH ONLY)								1
9	NAS355-60-910	. TUBE, (LH ONLY)								1
9	NAS355-60-840	. TUBE, (RH ONLY)								1
10	AN5-6A	. BOLT.								2
11	AN5-10A	. BOLT.								2
12	MS2718-13	. WASHER.								4
13	AN4-5A	. BOLT.								6
14	AN960D416	. WASHER.								6
15	69-3655-1	. BRACKET ASSY, AIR CYCLE MACHINE MOUNTING.								1
16	69-3655-2	. BRACKET ASSY, AIR CYCLE MACHINE MOUNTING.								1
17	69-3624	. . PLATE, AIR CYCLE MACHINE MOUNTING								1
18	69-3624-1	. . PLATE, AIR CYCLE MACHINE MOUNTING (USED ON. 69-3655-1)								1
19	69-3624-2	. . PLATE, AIR CYCLE MACHINE MOUNTING (USED ON. 69-3655-2)								1
20	69-3624-6	. . PLATE, AIR CYCLE MACHINE MOUNTING								1
21	69-3618	. BRACKET, AIR CONDITIONING FLEX DUCT MOUNTING. ATTACHING PARTS								1
	AN3-4A	. BOLT.								8
	AN960D10L	. WASHER.								8
		-----*								
22	69-3612-13	. BRACKET ASSY, AIR CONDITIONING FLEX DUCT MOUNTING . . .								1
23	69-3612-14	. BRACKET ASSY, AIR CONDITIONING FLEX DUCT MOUNTING . . . ATTACHING PARTS								1
	AN3-4A	. BOLT.								8
	AN4-5A	. BOLT.								2
	AN960D10L	. WASHER.								8
	AN960D416	. WASHER.								2
		-----*								
24	10-3085-4	. MACHINE, AIR CYCLE.								1
25	BAC27CAC6	. MARKER-ALUMINUM FOIL, MOBILE JET 2 OIL.							5299	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

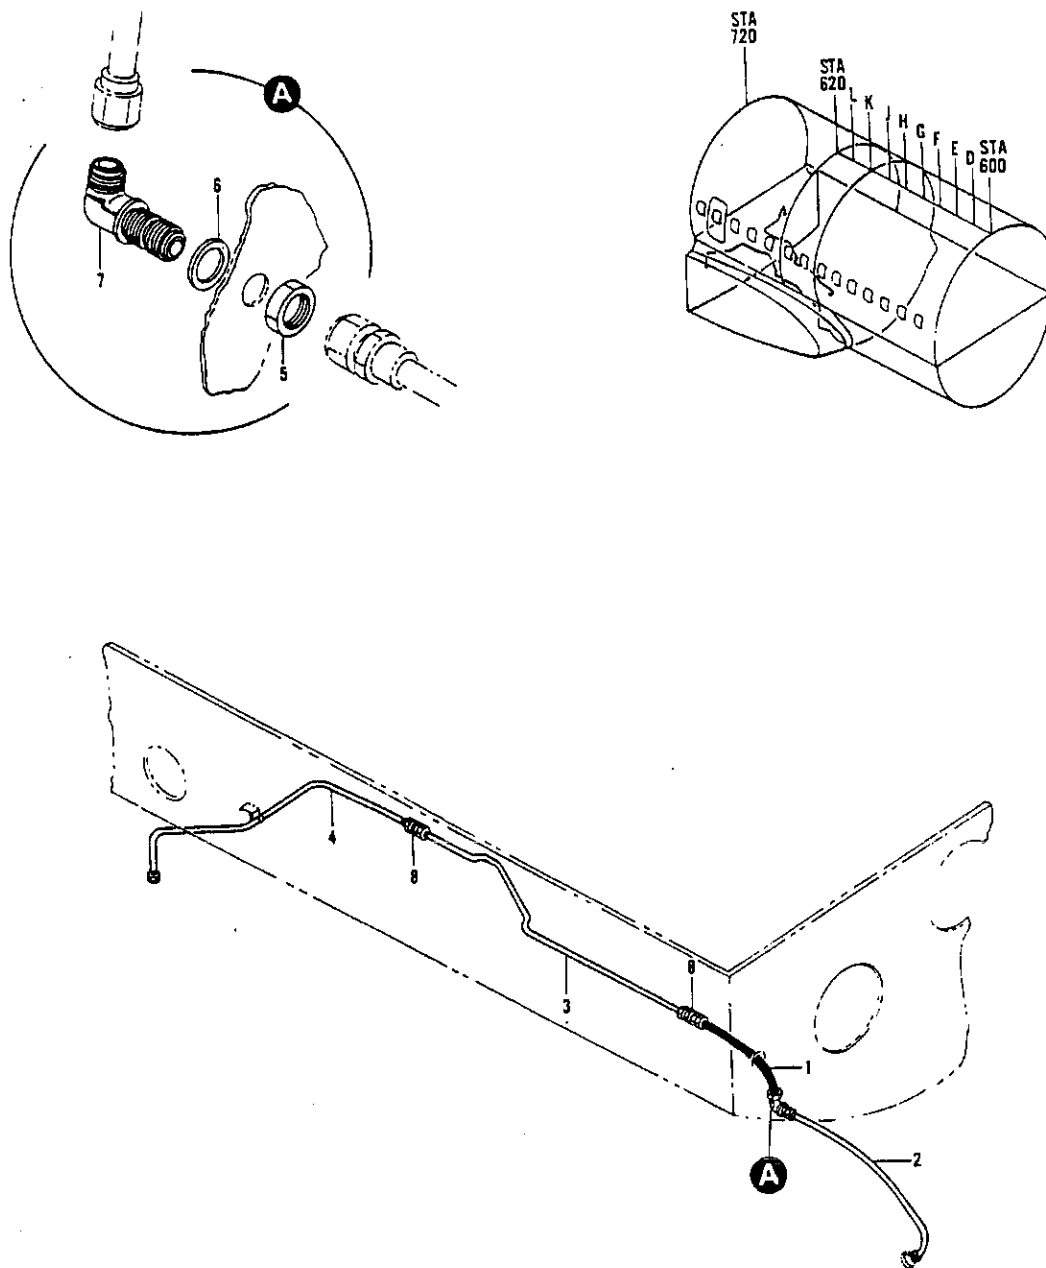


FIGURE 14. TUBING INSTL, AIR CYCLE MACHINE OIL SUMP VENT



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
14	65-4318-1	TUBING INSTL, AIR CYCLE MACHINE OIL SUMP VENT (LH) (SEE FIG. 1, ITEM 50, FIG. 2, ITEM 54 AND FIG. 2A, ITEM 38)								RF
	65-4318-2	TUBING INSTL, AIR CYCLE MACHINE OIL SUMP VENT (RH) (SEE FIG. 1, ITEM 50 AND FIG. 2, ITEM 54 AND FIG. 2A, ITEM 38)								RF
1	BACH30J060124	. HOSE ASSY (OPTIONAL BACH5P0124CC-R)								1
1	BACH5P0124CC-R	. HOSE ASSY (OPTIONAL TO BACH30J060124)								1
2	65-4318-5	. TUBE ASSY, VENT 3/8 .035 6061-T6 (LH ONLY).								1
2	65-4318-6	. TUBE ASSY, VENT 3/8 .035 6061-T6 (RH ONLY).								1
	BACS13AP6	. . SLEEVE (OPTIONAL MS21922-6)								2
	MS21922-6	. . SLEEVE (OPTIONAL TO BACS13AP6)								2
	MS21921D6	. . NUT								2
3	65-4318-9	. TUBE ASSY, VENT 3/8 IN. .028 AISI304 (LH ONLY).								1
3	65-4318-10	. TUBE ASSY, VENT 3/8 IN. .028 AISI304 (RH ONLY).								1
4	65-4318-11	. TUBE ASSY, VENT 3/8 IN. .028 AISI304 (LH ONLY).								1
4	65-4318-12	. TUBE ASSY, VENT 3/8 IN. .028 AISI304 (RH ONLY).								1
	BACS13AP6	. . SLEEVE								2
	MS21921D6	. . NUT								2
5	AN924-6D	. NUT								1
6	AN960D916	. WASHER								1
7	MS21908D6	. ELBOW								1
8	MS21902-6	. UNION								2
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

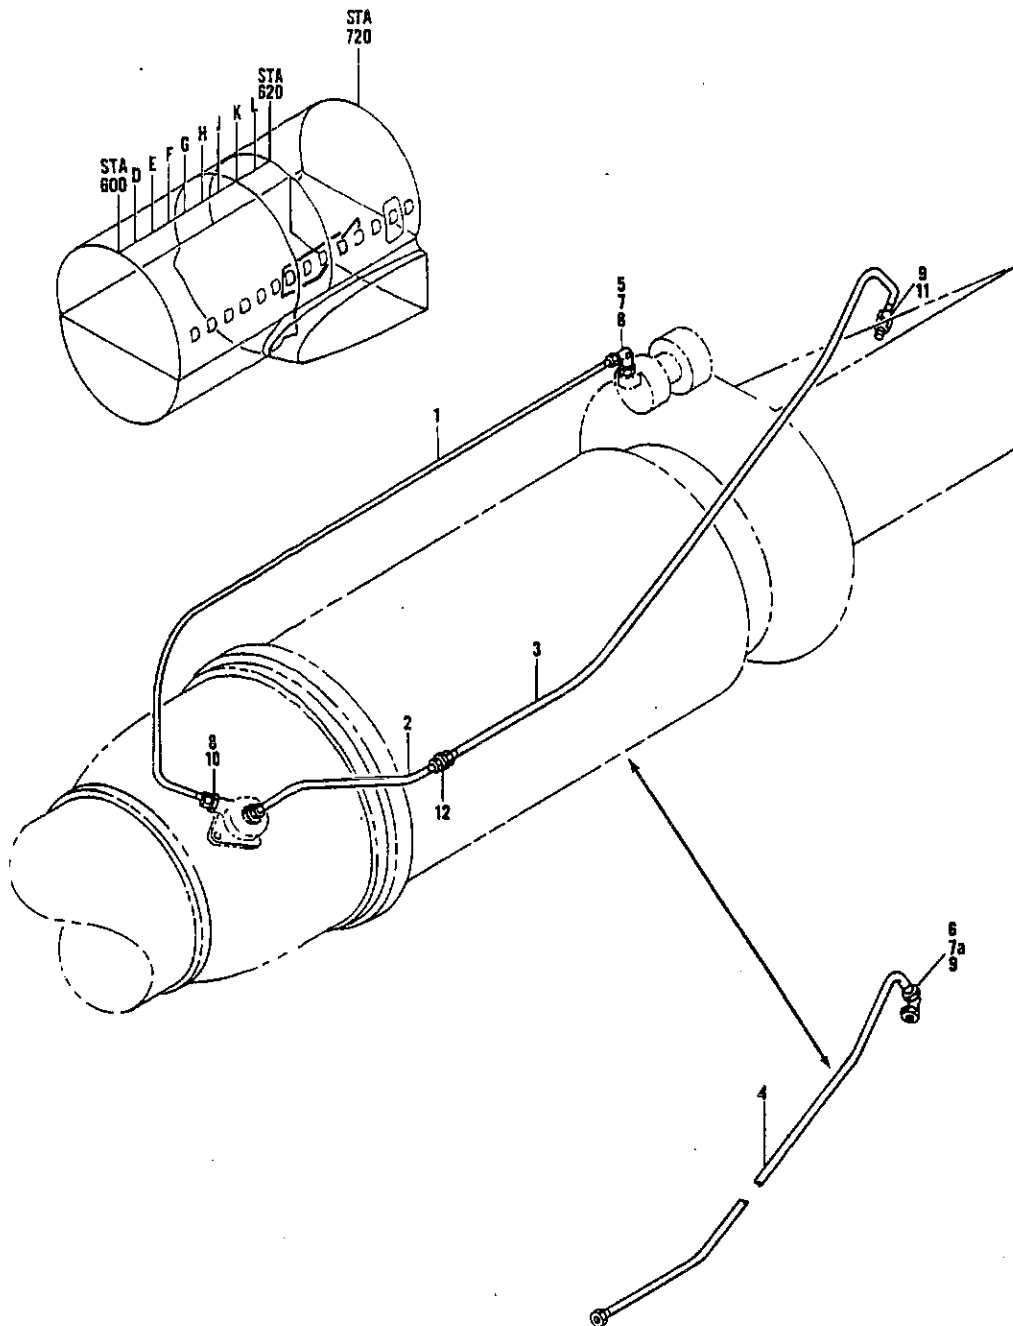


FIGURE 15. TUBING INSTL, WATER SEPARATOR



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
15	65-7490-1	TUBING INSTL, WATER SEPARATOR (LH) (SEE FIG. 1, ITEM. .								RF
		22, FIG. 2, ITEM 60 AND FIG. 2A, ITEM 11A)								
	65-7490-2	TUBING INSTL, WATER SEPARATOR (RH) (SEE FIG. 1, ...								RF
		ITEM 22, FIG. 2, ITEM 60 AND FIG. 2A, ITEM 11A)								
1	65-7490-3	. TUBE ASSY, WATER SEPARATOR 1/4 .035 6061-T6 (LH ONLY)								1
1	65-7490-4	. TUBE ASSY, WATER SEPARATOR 1/4 .035 6061-T6 (RH ONLY)								1
	MS21922-4	. . SLEEVE.								2
	MS21921D4	. . NUT								2
2	65-7490-5	. TUBE ASSY, WATER SEPARATOR 1/4 .035 6061-T6 (LH ONLY)								1
2	65-7490-6	. TUBE ASSY, WATER SEPARATOR 1/4 .035 6061-T6 (RH ONLY)								1
	MS21922-4	. . SLEEVE.								1
	AN819-4Z	. . SLEEVE.								1
	MS21921D4	. . NUT								1
	AN818D4	. . NUT								1
3	65-7490-11	. TUBE ASSY, WATER SEPARATOR 3/8 .035 6061-T6 (LH ONLY)								1
4	65-7490-8	. TUBE ASSY, WATER SEPARATOR 3/8 .035 6061-T6 (RH ONLY)								1
	BACS13AP6	. . SLEEVE, (LH ONLY)								2
	MS21922-6	. . SLEEVE, (RH ONLY)								2
5	MS21908D4	. ELBOW								1
6	MS21908D6	. ELBOW, (RH ONLY).								1
7	AN924-4D	. NUT								1
7A	AN924-6D	. NUT, (RH ONLY).								1
8	BACP11K4	. PACKING								2
9	BACP11K6	. PACKING								2
10	MS21902D4	. UNION								1
11	MS21902D6	. UNION, (LH ONLY).								1
12	MS21916D6-4	. REDUCER								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

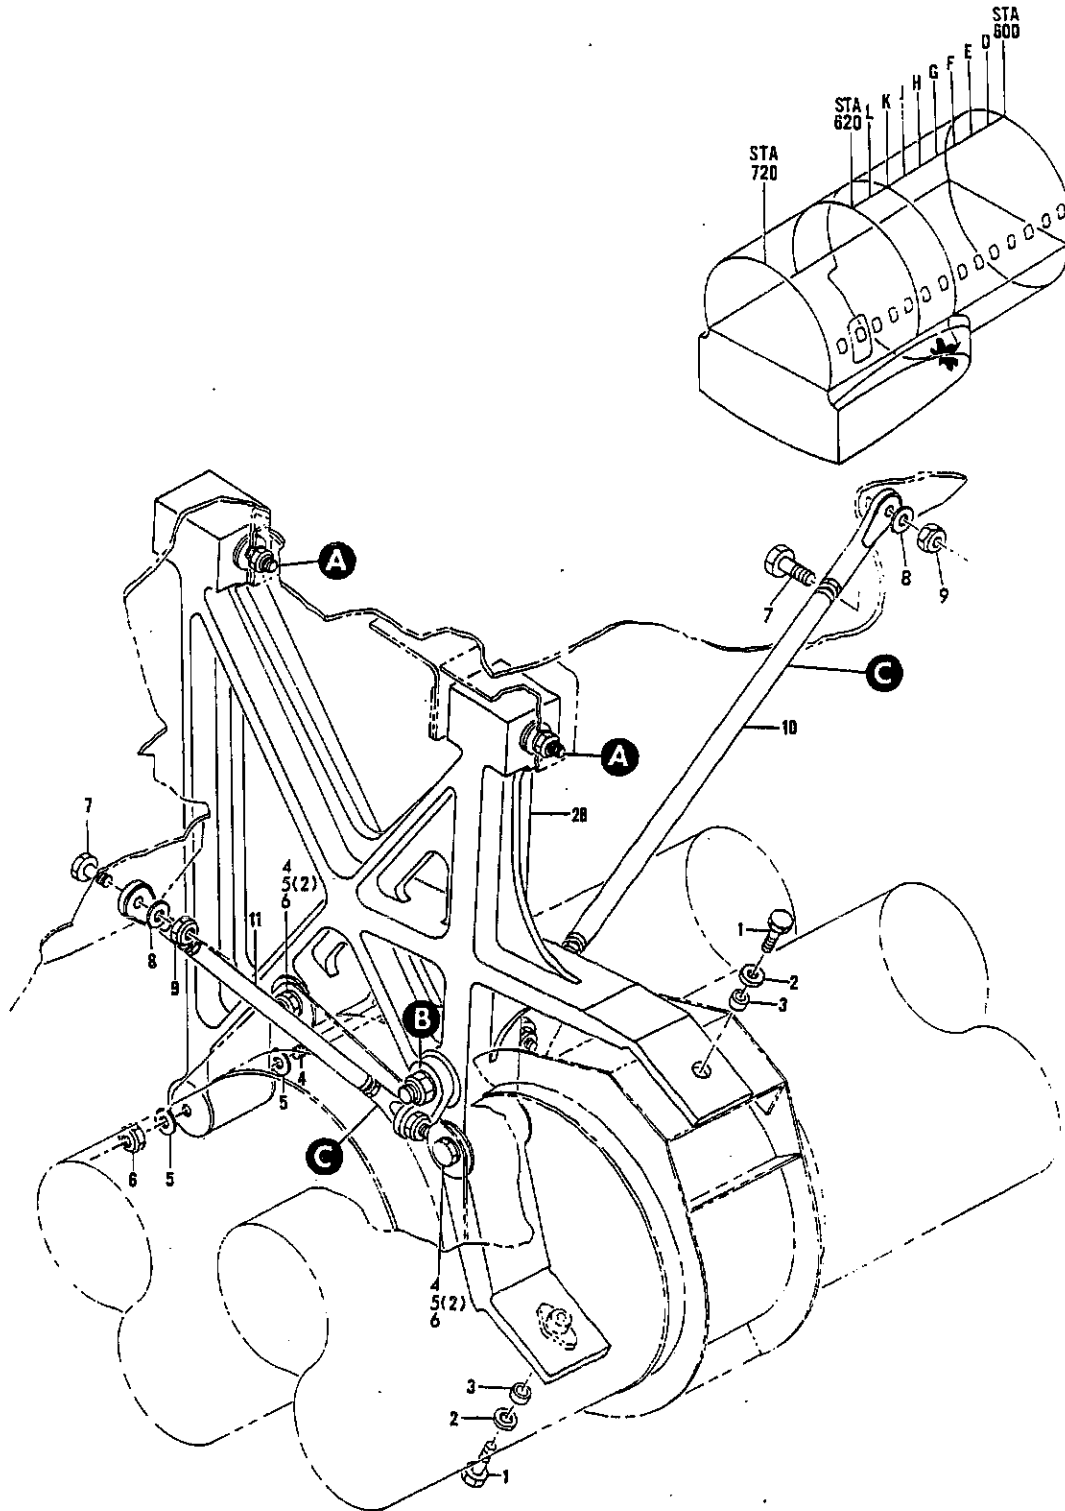


FIGURE 16. ANCHOR INSTL, UNDERWING AIR CONDITIONING DUCTS (SHEET 1)

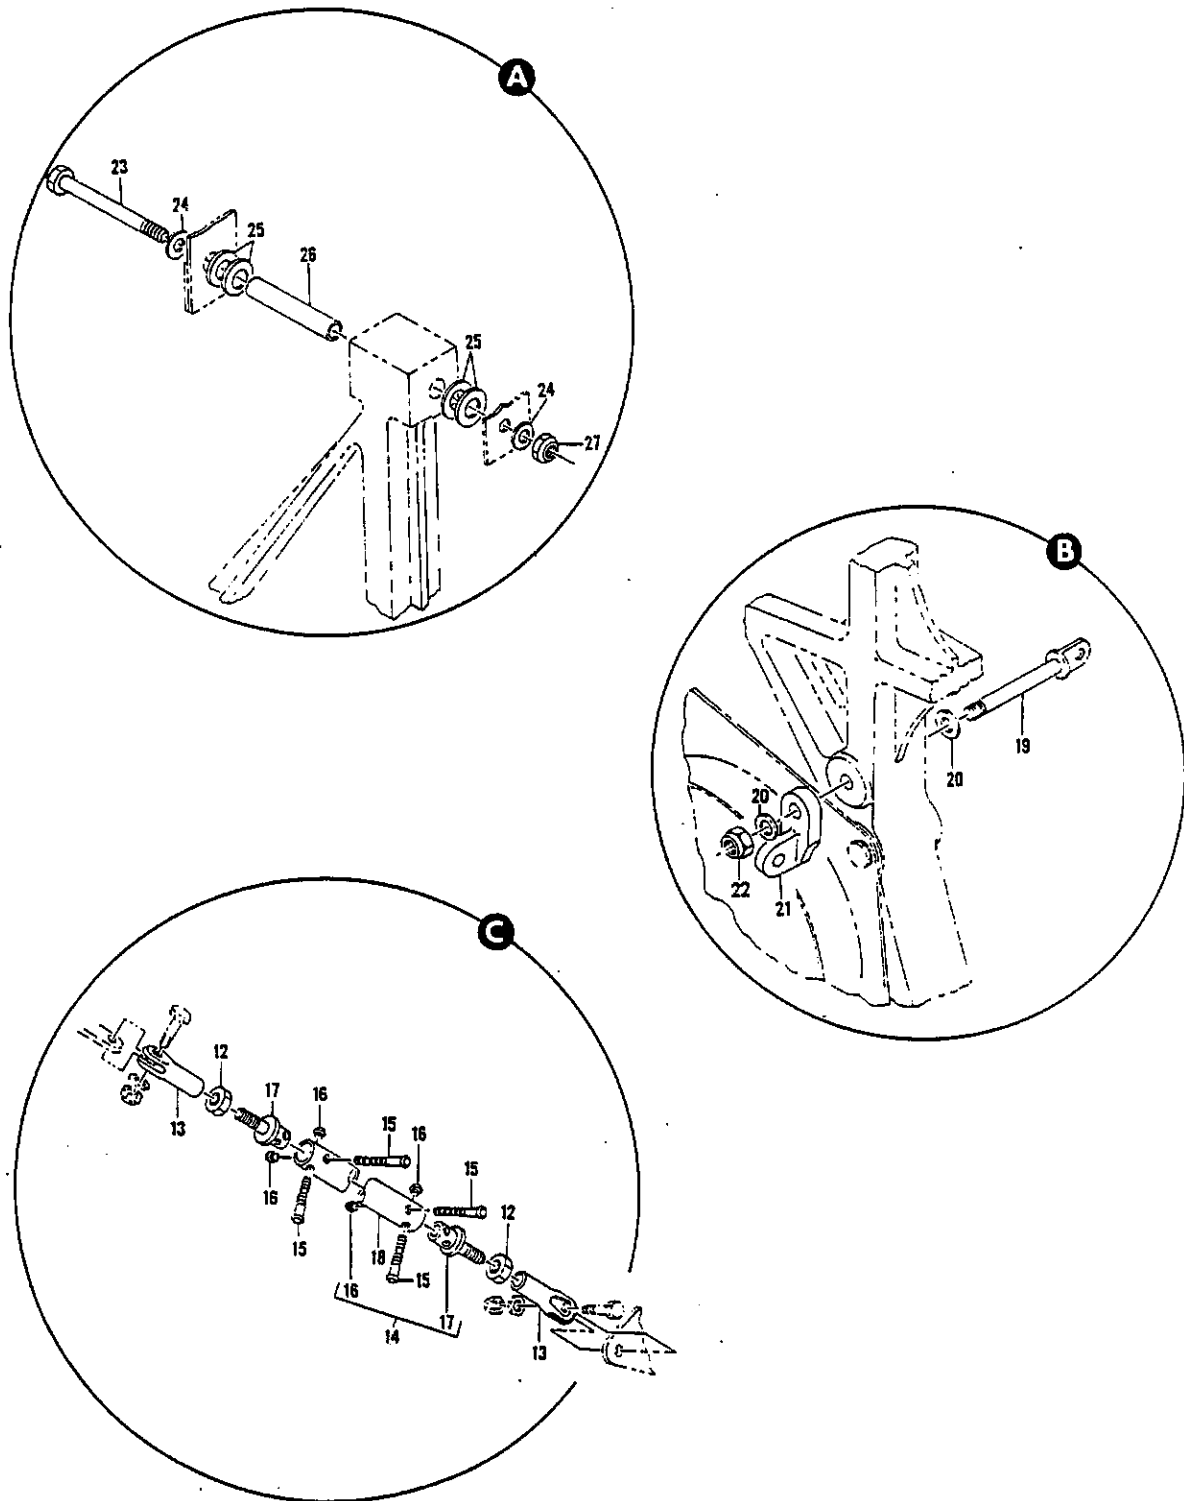


FIGURE 16. ANCHOR INSTL. UNDERWING AIR CONDITIONING DUCTS (SHEET 2)

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
16	65-4319-1		ANCHOR INSTL, UNDERWING AIR CONDITIONING DUCTS (LH) . . (SEE FIG. 1, ITEM 41, FIG. 2, ITEM 51 AND FIG. 2A, ITEM 35)		RF
	65-4319-2		ANCHOR INSTL, UNDERWING AIR CONDITIONING DUCTS (RH) . . (SEE FIG. 1, ITEM 42, FIG. 2, ITEM 51A AND FIG. 2A, ITEM 35)		RF
1	AN4-10A		. BOLT.		2
2	AN960-416L		. WASHER.		2
3	NAS73-4-005		. BUSHING.		2
4	AN4-22A		. BOLT.		3
5	AN960-416L		. WASHER.		6
6	BACN10BY54W		. NUT		3
7	AN4-7A		. BOLT.		4
8	AN960-416L		. WASHER.		4
9	BACN10BY54W		. NUT		4
10	69-8805-1		. ROD ASSY, CONDITIONED AIR DUCT SUPPORT (LH ONLY). . .		1
10	69-8805		. ROD ASSY, CONDITIONED AIR DUCT SUPPORT (RH ONLY). . .		1
11	69-8805-1		. ROD ASSY, CONDITIONED AIR DUCT SUPPORT.		1
12	AN316-4R		. NUT		2
13	AN665-34R		. TERMINAL.		2
14	69-8805-3		. TUBE ASSY, CONDITIONED AIR DUCT SUPPORT CONTROL ROD (OPTIONAL NAS358-80-950) (USED ON 69-8805-1)		1
	69-8805-2		. TUBE ASSY, CONDITIONED AIR DUCT SUPPORT CONTROL ROD (OPTIONAL NAS358-80-860) (USED ON 69-8805)		1
15	BACB30AL6-8		. . . BOLT.		4
16	BACC30A6		. . . COLLAR.		4
17	AN490HTBP		. . . ROD END		2
18	69-8805-5		. . . TUBE, CONDITIONED AIR DUCT SUPPORT ROD (USED ON . 69-8805-3)		1
	69-8805-4		. . . TUBE, CONDITIONED AIR DUCT SUPPORT ROD (USED ON . 69-8805-2)		1
19	AN44-23A		. BOLT.		1
20	AN960-516L		. WASHER.		2
21	66-4537		. FITTING, ROD ATTACHMENT ANCHOR SUPPORT.		1
22	BACN10BY55		. NUT		1
23	AN4-25A		. BOLT.		2
24	AN960-416L		. WASHER.		4
25	AN960D710		. WASHER.		8
26	NAS73-4E200		. BUSHING.		2
27	BACN10BY54W		. NUT		2
28	65-7445		. SUPPORT, UNDERWING AIR CONDITIONING PACK DUCT		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE


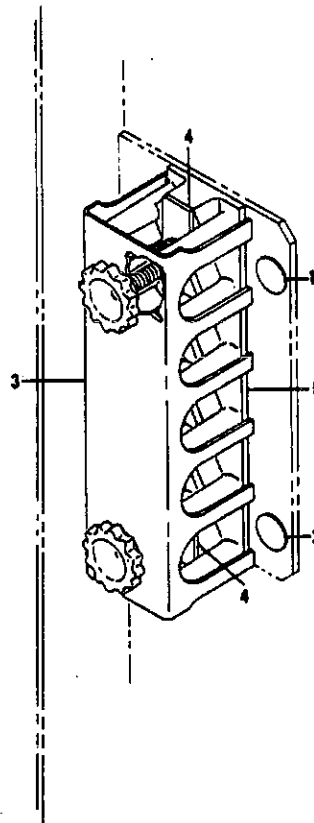


FIGURE 17. STRIP INSTL, AIR CYCLE MACHINE TERMINAL

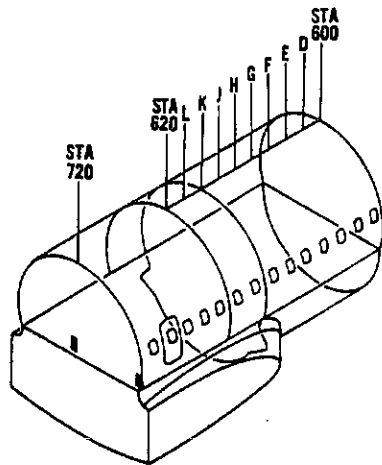

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
17	66-8762-1	STRIP INSTL, AIR CYCLE MACHINE TERMINAL (LH) (SEE 24-3, FIG. 2, ITEM 66)		RF
	66-8762-2	STRIP INSTL, AIR CYCLE MACHINE TERMINAL (RH) (SEE 24-3, FIG. 2, ITEM 67)		RF
1	BACM10N00-2S	. METAL-CAL, 1.		1
2	BACM10N00-2CA	. METAL-CAL, 5.		1
3	BACC50C21A	. COVER ASSY.		1
4	MS25227-3	. STRIP		2
5	MS27212-2-5	. TERMINAL BLOCK ASSY		1
		ATTACHING PARTS		
	NAS600-5	. SCREW		2
	NAS679A04W	. NUT		2
		-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

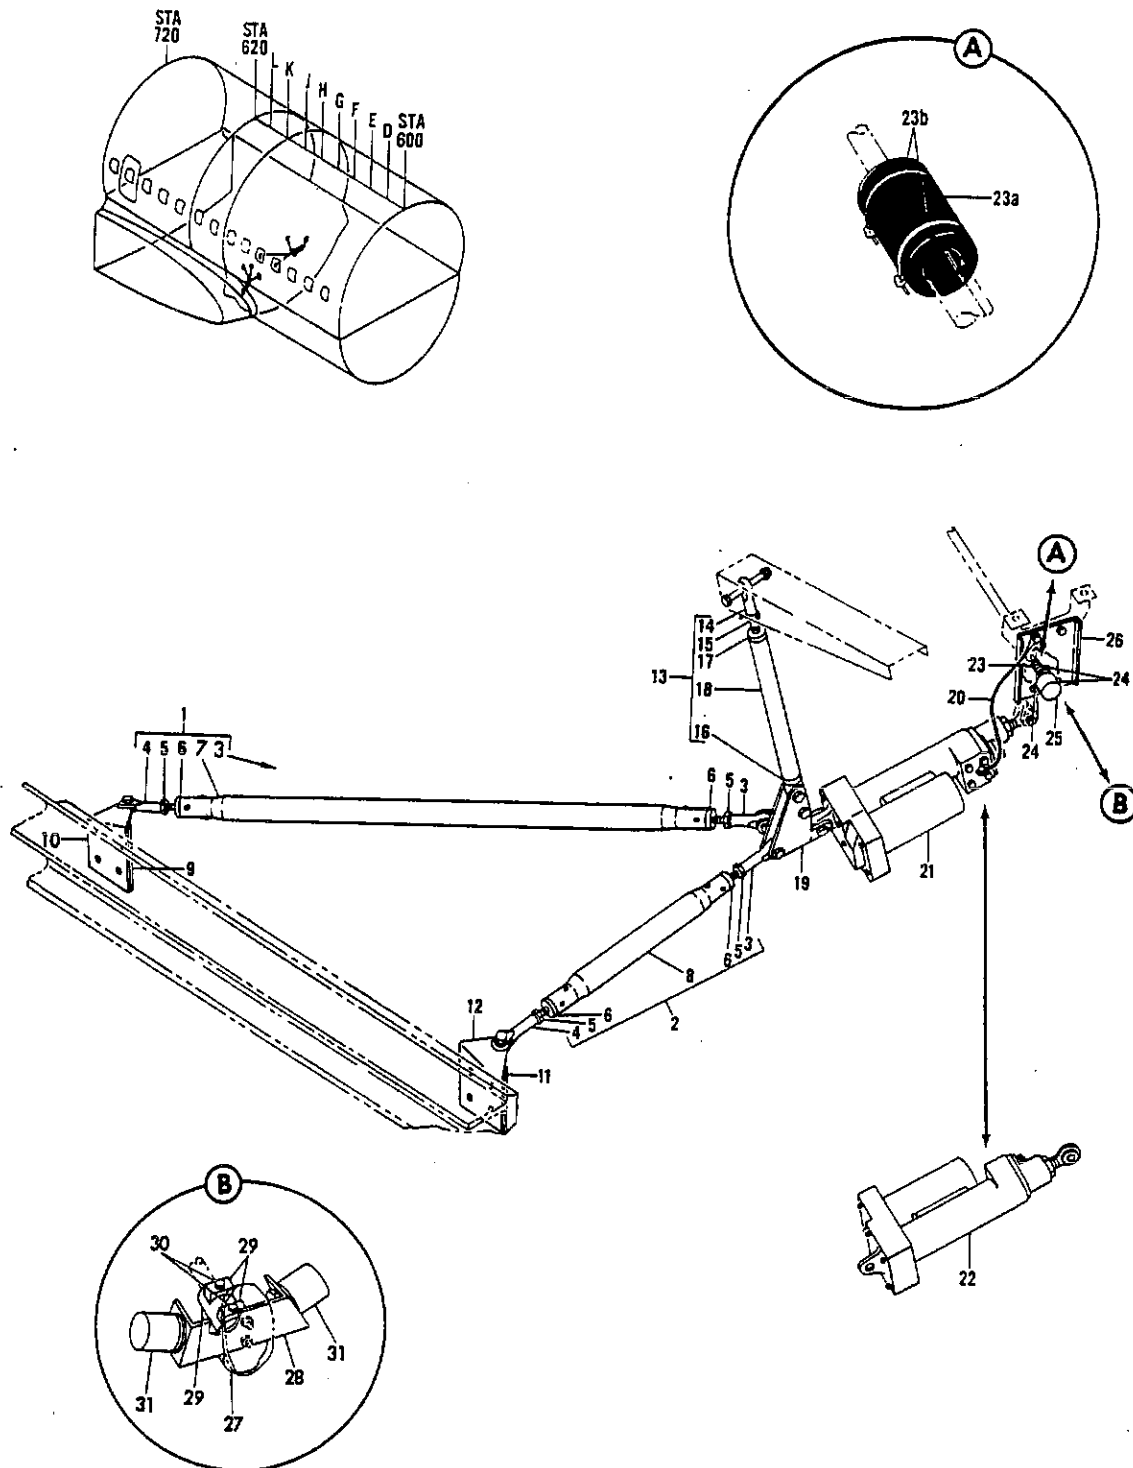


FIGURE 26. ACTUATOR INSTL, MODULATED COOLING AIR INLET

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
26	65-23506-1		ACTUATOR INSTL, MODULATED COOLING AIR INLET (LH) (SEE FIG. 2, ITEM 68, FIG. 2A, ITEM 6 AND FIG. 19, ITEM 45)		RF
	65-23506-2		ACTUATOR INSTL, MODULATED COOLING AIR INLET (RH) (SEE FIG. 2, ITEM 68, FIG. 2A, ITEM 6 AND FIG. 19, ITEM 45)		RF
1	65-23508-1		. TUBE ASSY, MODULATED COOLING AIR INLET ACTUATOR . . . SUPPORT (OPTIONAL 1017-1 (V34742))		1
1	1017-1		. TUBE ASSY, MODULATED COOLING AIR INLET ACTUATOR . . . SUPPORT (V34742) (OPTIONAL TO 65-23508-1)		1
2	65-23508-2		. TUBE ASSY, MODULATED COOLING AIR INLET ACTUATOR . . . SUPPORT (OPTIONAL 1017-2 (V34742))		1
2	1017-2		. TUBE ASSY, MODULATED COOLING AIR INLET ACTUATOR . . . SUPPORT (V34742) (OPTIONAL TO 65-23508-2)		1
	AN4-12		ATTACHING PARTS BOLT.		2
	AN5-10		BOLT.		2
	AN960PD416		WASHER.		4
	AN960PD516		WASHER.		4
	AN960PD516L		WASHER.		8
	AN310-4		NUT		2
	AN310-5		NUT		2
3	BACB10A180		. BEARING		1
4	AN665-46R		. TERMINAL.		1
5	NAS509-5		. NUT		2
6	69-15761-1		. END, CONTRL TUBE ROD ATTACHING PARTS BOLT.		2
	BACB30AL5E12		COLLAR.		8
	NAS1080D5				8
7	65-23508-3		. . TUBE, MODULATED COOLING AIR INLET ACTUATOR SUPPORT (USED ON 65-23508-1)		1
8	65-23508-4		. . TUBE, MODULATED COOLING AIR INLET ACTUATOR SUPPORT (USED ON 65-23508-2)		1
9	69-17228-11		. FILLER, ACTUATOR SUPPORT ROD BRACKET RADIUS (LH ONLY)		1
9	69-17228-12		. FILLER, ACTUATOR SUPPORT ROD BRACKET RADIUS (RH ONLY)		1
10	69-17228-9		. BRACKET, ACTUATOR SUPPORT ROD (LH ONLY)		1
10	69-17228-10		. BRACKET, ACTUATOR SUPPORT ROD (RH ONLY)		1
11	69-17228-7		. FILLER, ACTUATOR SUPPORT ROD BRACKET RADIUS (LH ONLY)		1
11	69-17228-8		. FILLER, ACTUATOR SUPPORT ROD BRACKET RADIUS (RH ONLY)		1
12	69-17228-3		. BRACKET, ACTUATOR SUPPORT ROD (LH ONLY)		1
12	69-17228-4		. BRACKET, ACTUATOR SUPPORT ROD (RH ONLY)		1
13	69-17227-1		. TUBE ASSY, MODULATED COOLING AIR INLET ACTUATOR . . . SUPPORT ATTACHING PARTS BOLT.		1
	AN4-12		BOLT.		2
	AN4-24		BOLT.		1
	NAS43DD4-45		SPACER.		2
	AN960PD416		WASHER.		6
	AN310-4		NUT		3
14	BACB10A180		. BEARING		1
15	NAS509-5		. NUT		1
16	69-17226-1		. END, SUPPORT TUBE ROD		1
17	69-15761-1		. END, CONTRL TUBE ROD ATTACHING PARTS BOLT.		1
	BACB30AL5E12		COLLAR.		4
	NAS1080D5				4
18	69-17227-2		. . TUBE, MODULATED COOLING AIR INLET ACTUATOR SUPPORT		1
19	65-23509-1		. FITTING, ACTUATOR SUPPORT (LH ONLY)		1
19	65-23509-2		. FITTING, ACTUATOR SUPPORT (RH ONLY) ATTACHING PARTS BOLT.		1
	NAS1305-22DW		WASHER.		1
	AN960PD516		NUT		2
	AN310-5				1
20	MS25089-2BB14		. JUMPER ASSY, (USED WITH BAC SPEC NO. 10-60766-3 . . . AND -4)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
26	AN3-3A AN3-4A AN960PD10 NAS679A3W		ATTACHING PARTS • BOLT. • BOLT. • WASHER. • NUT		1 1 2 2
21	10-60766-3 NAS1305-14DW AN960PD516 AN310-5		• ACTUATOR, RAM AIR DAMPER LINEAR ATTACHING PARTS • BOLT. • WASHER. • NUT		1 1 2 1
23A	66-22302-2		• COUPLING, POTENTIOMETER SHAFT FLEXIBLE.		1
23B	MS17821-1-9		• STRAP		2
24	C141		• CLAMP, MOUNTING (V00328).		3
25	B29-10078-2		• POTENTIOMETER, (V30223) (OPTIONALS B29-10078-2A, -2B (V30223))		1
25	B29-10078-2A		• POTENTIOMETER, (V30223) (OPTIONAL TO B29-10078-2, -2B (V30223))		1
25	B29-10078-2B		• POTENTIOMETER, (V30223) (OPTIONAL TO B29-10078-2, -2A (V30223))		1
26	69-17231-1		• BRACKET ASSY, POTENTIOMETER SUPPRT ATTACHING PARTS • BOLT. • WASHER. • NUT		1 1 1 1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

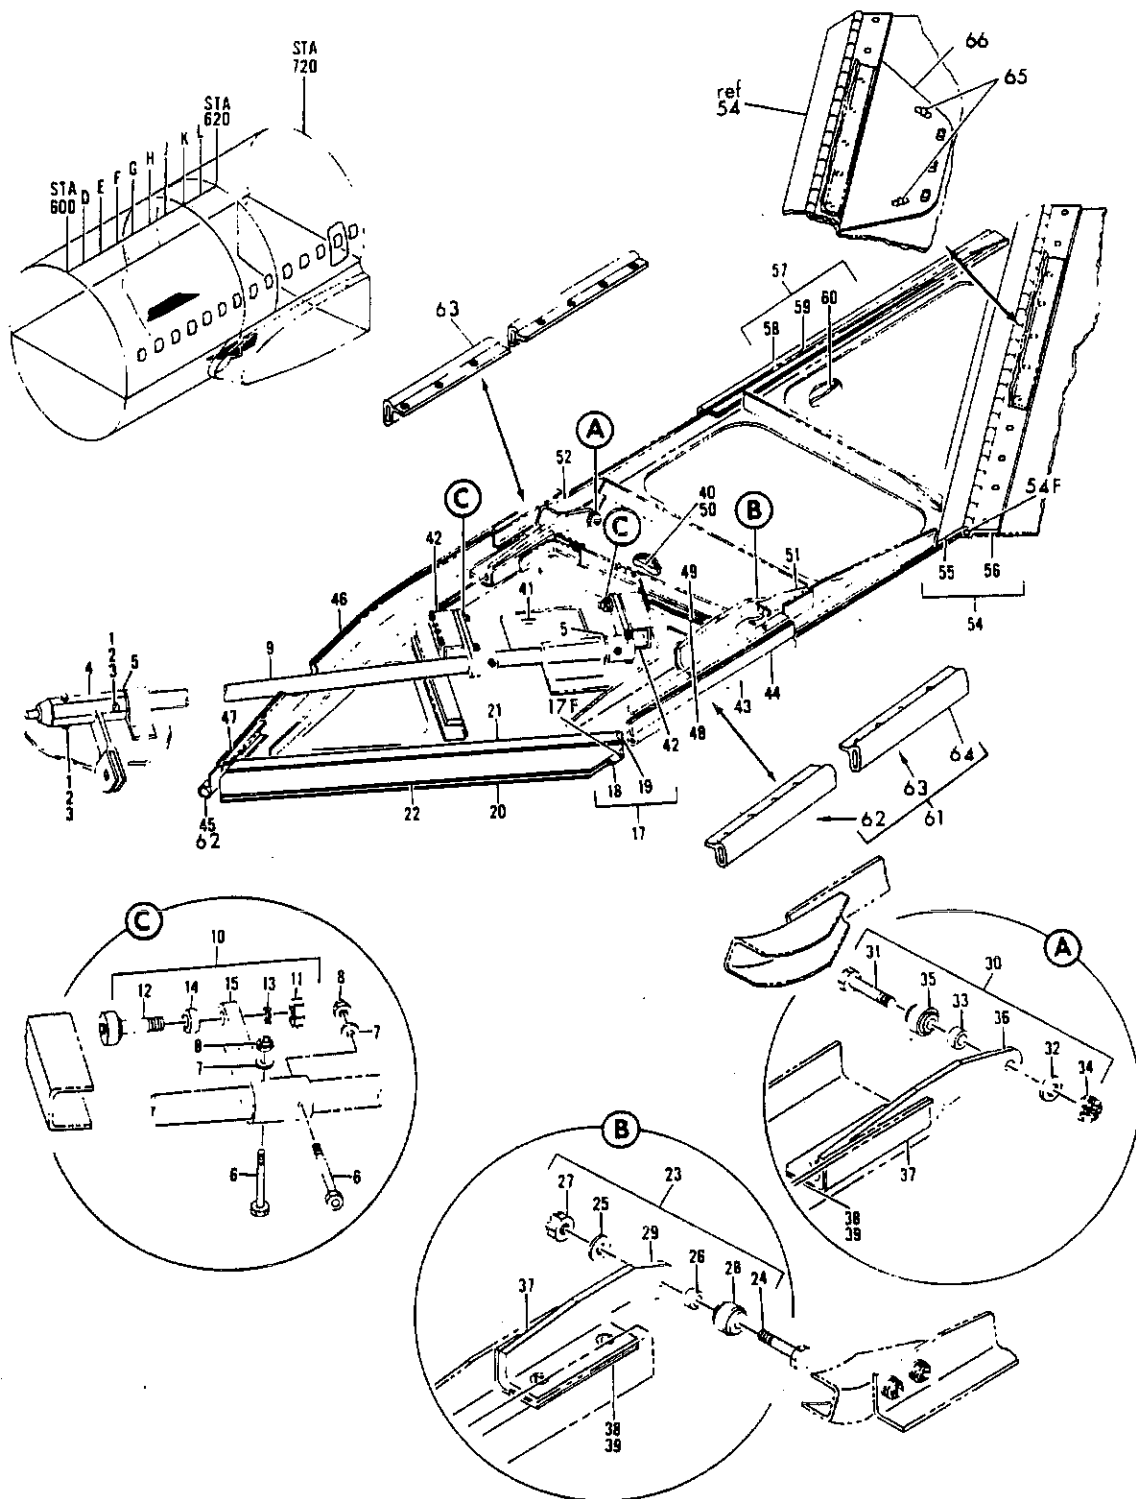


FIGURE 29. PANEL INSTL, WING BODY FAIRING RAM AIR SCOOP MODULATION



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
29	65-22919-1	PANEL INSTL, WING BODY FAIRING RAM AIR SCOOP MODULATION (LH) (SEE 57-5, FIG. 3, ITEM 1)		RF
	65-22919-2	PANEL INSTL, WING BODY FAIRING RAM AIR SCOOP MODULATION (RH) (SEE 57-5, FIG. 3, ITEM 1)	0150	RF
	65-22919-2	PANEL INSTL, WING BODY FAIRING RAM AIR SCOOP MODULATION FIXED (VARIABLE DWG; 65-22919-5002) (SEE 57-5, FIG. 3, ITEM 1A)	5199	RF
1	NAS1103-19W	. BOLT.		2
	AN960PD10	. WASHER.		2
	NAS679A3W	. NUT		2
3	69-17230-1	. BELLCRANK, ACTUATOR (LH ONLY)		1
	69-17230-2	. BELLCRANK, ACTUATOR (RH ONLY)		1
	BACW10P148AL	. WASHER.		AR
6	NAS1103-16W	. BOLT.		4
	AN960PD10	. WASHER.		4
	NAS679A3W	. NUT		4
9	66-13933-1	. TUBE, ACTUATOR TORQUE		1
	69-16908-1	. ARM ASSY, WING BODY FAIRING FORWARD PANEL ACTUATOR. .		2
	AN316-5R	. NUT		1
12	BACB10AFSK10HS	. BEARING		1
	NAS460-516	. WASHER.		1
	NAS43DD5-13	. SPACER.		1
15	69-16908-2	. ARM, WING BODY FAIRING FORWARD PANEL ACTUATOR		1
	65-22919-15	. HINGE ASSY, WING BODY FAIRING RAM AIR SCOOP		1
		MODULATION PANEL FORWARD (LH ONLY)		
17	65-22919-16	. HINGE ASSY, WING BODY FAIRING RAM AIR SCOOP		1
		MODULATION PANEL FORWARD (RH ONLY)		
	BACB30ABP3-5A	ATTACHING PARTS		
17F	MS20253P4-1563	. BOLT.		17
	65-22919-3	. PIN		1
		. HINGE HALF, WING BODY FAIRING RAM AIR SCOOP		1
18	65-22919-4	MODULATION PANEL FORWARD (FORWARD) (LH ONLY)		
		. HINGE HALF, WING BODY FAIRING RAM AIR SCOOP		1
		MODULATION PANEL FORWARD (FORWARD) (RH ONLY)		
19	65-22919-5	. HINGE HALF, WING BODY FAIRING RAM AIR SCOOP		1
		MODULATION PANEL FORWARD (AFT) (LH ONLY)		
	65-22919-6	. HINGE HALF, WING BODY FAIRING RAM AIR SCOOP		1
20	65-22919-17	MODULATION PANEL FORWARD (AFT) (RH ONLY)		
		. FILLER, WING BODY FAIRING RAM AIR SCOOP MODULATION. .		1
		PANEL		
21	65-22919-18	. RETAINER, WING BODY FAIRING RAM AIR SCOOP MODULATION		1
		PANEL FORWARD HINGE FABRIC		
	65-22919-19	. SEAL, WING BODY FAIRING RAM AIR SCOOP MODULATION. . .		1
22		PANEL FORWARD FABRIC		
	69-17293-1	. ROLLER ASSY, WING BODY FAIRING RAM AIR SCOOP.		1
	69-17293-2	MODULATION PANEL (LH ONLY)		
23		. ROLLER ASSY, WING BODY FAIRING RAM AIR SCOOP.		1
		MODULATION PANEL (RH ONLY)		
		ATTACHING PARTS		
24	MS20470D6	. RIVET		2
	NAS517-3-5	. BOLT.		2
	AN960PD10	. WASHER.		2
25	NAS679A3W	. NUT		2
		-----*		
	NAS1104-13D	. BOLT.		1
26	AN960PD416	. WASHER.		1
	NAS43HT4-10	. SPACER.		1
	AN320C4	. NUT		1
27	BACB10A201GM2	. BEARING		1
	69-17293-5	. SUPPORT, WING BODY FAIRING RAM AIR SCOOP MODULATION		1
		PANEL ROLLER (LH ONLY)		
29	69-17293-6	. SUPPORT, WING BODY FAIRING RAM AIR SCOOP MODULATION		1
		PANEL ROLLER (RH ONLY)		
	69-17293-3	. ROLLER ASSY, WING BODY FAIRING RAM AIR SCOOP.		1
30	69-17293-4	MODULATION PANEL (LH ONLY)		
		. ROLLER ASSY, WING BODY FAIRING RAM AIR SCOOP.		1
		MODULATION PANEL (RH ONLY)		
		ATTACHING PARTS		
	MS20470D6	. RIVET		2
	NAS517-3-5	. SCREW		2
	AN960PD10	. WASHER.		2
	NAS679A3W	. NUT		2
		-----*		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
29 31	NAS1104-14D	. . BOLT.		1
32	AN960PD416	. . WASHER.		1
33	NAS43HT4-13	. . SPACER.		1
34	AN320C4	. . NUT		1
35	BACB10A2016M2	. . BEARING		1
36	69-17293-7	. . SUPPORT, WING BODY FAIRING RAM AIR SCOOP MODULATION PANEL ROLLER (LH ONLY)		1
36	69-17293-8	. . SUPPORT, WING BODY FAIRING RAM AIR SCOOP MODULATION PANEL ROLLER (RH ONLY)		1
37	BACS47012-46A	. . SHIM.		2
38	90-9195-737	. . SHIM, TAPERED		2
39	BACS40C16-46	. . SHIM.		AR
40	65-23531-1	. . PANEL ASSY, RAM AIR SCOOP MODULATION FORWARD (LH. . . ONLY)		1
40	65-23531-2	. . PANEL ASSY, RAM AIR SCOOP MODULATION FORWARD (RH. . . ONLY)		1
41	65-23531-7	. . DOOR, RAM AIR SCOOP MODULATION FORWARD PANEL ACCESS (LH ONLY)		1
41	65-23531-8	. . DOOR, RAM AIR SCOOP MODULATION FORWARD PANEL ACCESS (RH ONLY)		1
	NAS517-3-1	ATTACHING PARTS . . SCREW		16
42	66-13874-1	. . TRACK, WING BODY FAIRING RAM AIR SCOOP FORWARD. . . PANEL ATTACHING PARTS . . BOLT.		2
	BACB30A8P3-4A	. . BOLT.		4
	BACB30A8P3-3A	. . BOLT.		2
	AN960PD10	. . WASHER.		6
	NAS679A3W	. . NUT		6
43	10-60120-92	. . SEAL, FABRIC COVERED AERODYNAMIC STRIP.		1
	MS20470B5	ATTACHING PARTS . . RIVET		8
44	65-23531-19	. . STRIP, RAM AIR SCOOP MODULATION FORWARD PANEL SEAL RETAINER		1
45	10-60120-93	. . SEAL, FABRIC COVERED AERODYNAMIC STRIP (LH ONLY). . .		1
45	10-60120-94	. . SEAL, FABRIC COVERED AERODYNAMIC STRIP (RH ONLY). . . ATTACHING PARTS . . RIVET		2
46	65-23531-20	. . STRIP, RAM AIR SCOOP MODULATION FORWARD PANEL SEAL RETAINER		1
47	65-23531-21	. . STRIP, RAM AIR SCOOP MODULATION FORWARD PANEL SEAL RETAINER		1
48	69-17272-1	. . SEAL, WING BODY FAIRING RAM AIR SCOOP PANEL (LH . . . ONLY)		1
48	69-17272-2	. . SEAL, WING BODY FAIRING RAM AIR SCOOP PANEL (RH . . . ONLY)		1
	BACR15CE4B	ATTACHING PARTS . . RIVET		14
49	65-23531-23	. . STRIP, RAM AIR SCOOP MODULATION FORWARD PANEL . . . BACKING		1
50	65-23531-3	. . PANEL ASSY, RAM AIR SCOOP MODULATION FORWARD BONDED (LH ONLY)		1
50	65-23531-4	. . PANEL ASSY, RAM AIR SCOOP MODULATION FORWARD BONDED (RH ONLY)		1
51	69-16909-1	. . TRACK, WING BODY FAIRING RAM AIR SCOOP AFT PANEL. . . ACTUATOR (LH ONLY)		1
51	69-16909-2	. . TRACK, WING BODY FAIRING RAM AIR SCOOP AFT PANEL. . . ACTUATOR (RH ONLY)		1
52	69-16909-3	. . TRACK, WING BODY FAIRING RAM AIR SCOOP AFT PANEL. . . ACTUATOR (LH ONLY)		1
52	69-16909-4	. . TRACK, WING BODY FAIRING RAM AIR SCOOP AFT PANEL. . . ACTUATOR (RH ONLY)		1
	NAS1103-3W	ATTACHING PARTS . . BOLT.		4
	AN960PD10	. . WASHER.		4
	NAS679A3W	. . NUT		4
54	65-22919-27	. . HINGE ASSY, WING BODY FAIRING RAM AIR SCOOP MODULATION PANEL AFT (LH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
29 54	65-22919-28	. HINGE ASSY, WING BODY FAIRING RAM AIR SCOOP MODULATION PANEL AFT (RH ONLY) ATTACHING PARTS		1
	BACB30ABP3-4A	. BOLT.		11
	BACB30ABP3-5A	. BOLT.		11
54F	MS20253P4-2175	. PIN		1
55	65-22919-7	. HINGE HALF, WING BODY FAIRING RAM AIR SCOOP MODULATION PANEL AFT (FORWARD) (LH ONLY)		1
55	65-22919-8	. HINGE HALF, WING BODY FAIRING RAM AIR SCOOP MODULATION PANEL AFT (FORWARD) (RH ONLY)		1
56	65-22919-9	. HINGE HALF, WING BODY FAIRING RAM AIR SCOOP MODULATION PANEL AFT (AFT) (LH ONLY)		1
56	65-22919-10	. HINGE HALF, WING BODY FAIRING RAM AIR SCOOP MODULATION PANEL AFT (AFT) (RH ONLY)		1
57	65-22793-1	. PANEL ASSY, RAM AIR SCOOP MODULATION AFT (LH ONLY). .		1
58	10-60120-91	. SEAL, FABRIC COVERED AERODYNAMIC STRIP. ATTACHING PARTS		1
	BACR15CED5	. RIVET		13
59	65-22793-17	. STRIP, RAM AIR SCOOP MODULATION AFT PANEL SEAL. . . RETAINER		1
60	65-22793-3	. PANEL ASSY, RAM AIR SCOOP MODULATION AFT BONDED . . (LH ONLY)		1
60	65-22793-4	. PANEL ASSY, RAM AIR SCOOP MODULATION AFT BONDED . . (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

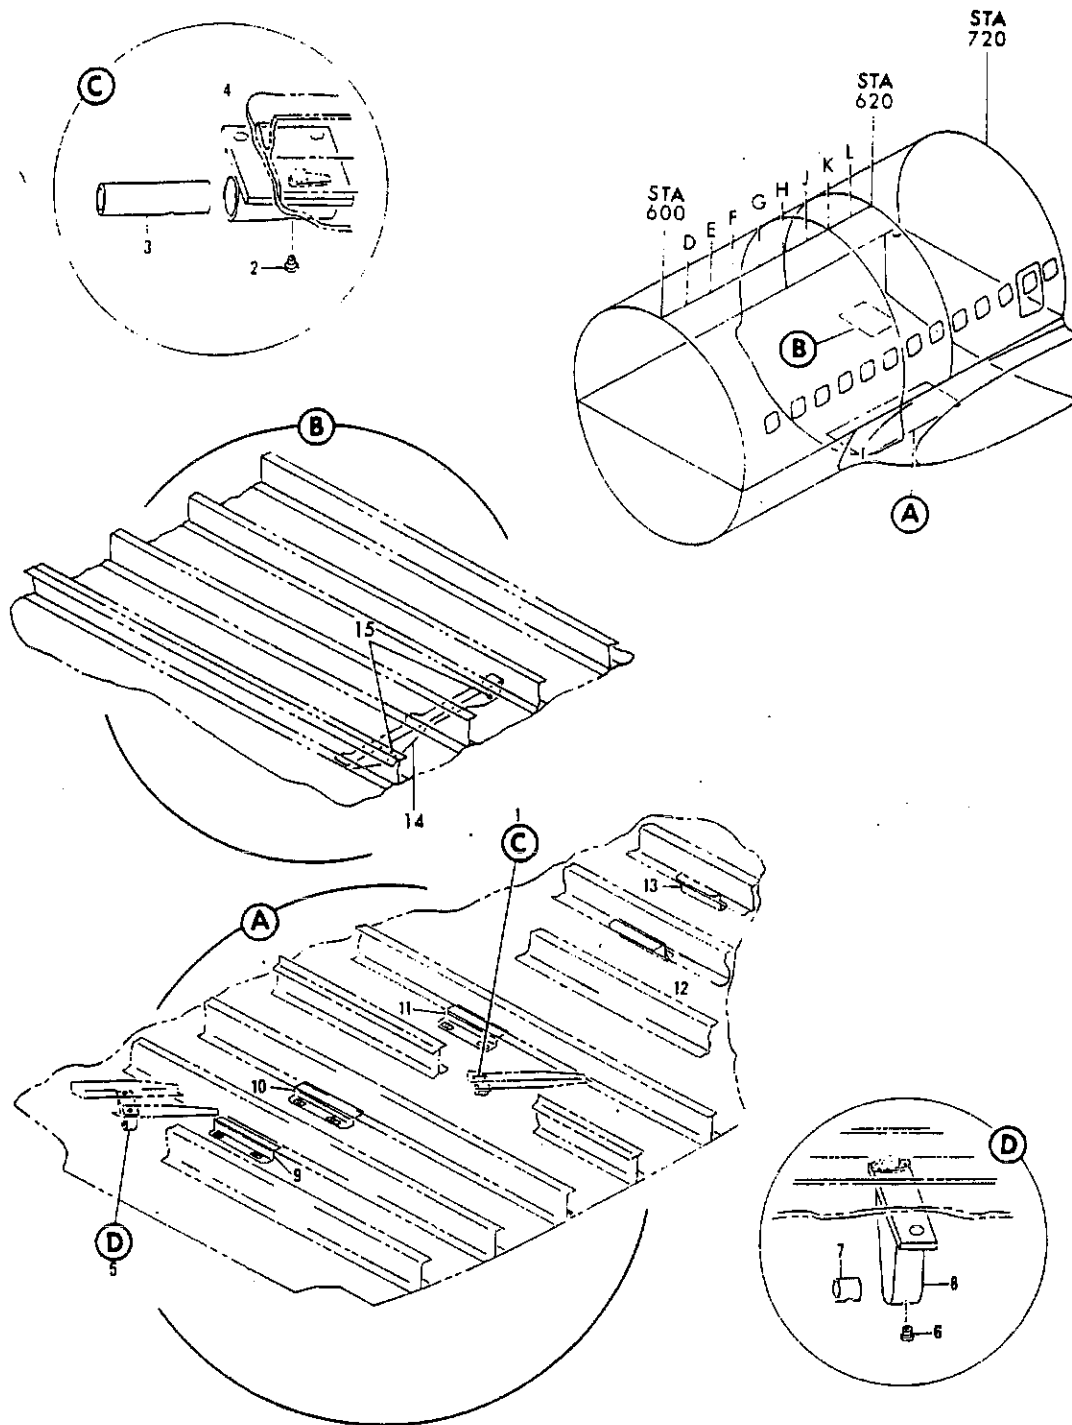


FIGURE 30. PANEL INSTL. SECTION 11 LOWER (AIR CONDITIONING ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
30	65-1024	PANEL INSTL, SECTION 11 LOWER (AIR CONDITIONING ONLY) . (SEE 57-6, FIG. 2, ITEM 12)		RF
	65-23537-1	. SUPPORT INSTL, TORQUE TUBE RAM AIR SCOOP (LH)		1
	65-23537-2	. SUPPORT INSTL, TORQUE TUBE RAM AIR SCOOP (RH)		1
1	66-14141-1	. . FITTING ASSY, WING BODY FAIRING RAM AIR SCOOP SUPPORT (LH ONLY)		1
1	66-14141-2	. . FITTING ASSY, WING BODY FAIRING RAM AIR SCOOP SUPPORT (RH ONLY)		1
		ATTACHING PARTS		
	NAS1103-7W	. . BOLT.		3
	BACS40C32-40	. . SHIM.		AR
	65-23537-3	. . SHIM, TORQUE TUBE RAM AIR SCOOP SUPPORT LAMINATED . .		AR
	AN960PD10L	. . WASHER.		3
		-----*		
2	NAS516	. . . FITTING		1
3	NAS537B11P200	. . . BUSHING		1
4	66-14141-3	. . . FITTING, WING BODY FAIRING RAM AIR SCOOP SUPPORT (LH ONLY)		1
4	66-14141-4	. . . FITTING, WING BODY FAIRING RAM AIR SCOOP SUPPORT (RH ONLY)		1
5	66-14170-1	. . FITTING ASSY, WING BODY FAIRING RAM AIR SCOOP INBOARD SUPPORT (LH ONLY)		1
5	66-14170-2	. . FITTING ASSY, WING BODY FAIRING RAM AIR SCOOP INBOARD SUPPORT (RH ONLY)		1
		ATTACHING PARTS		
	NAS1103-7	. . BOLT.		2
	BACS40C16-64	. . SHIM.		AR
	BACS40C16-24	. . SHIM.		AR
	AN960PD10L	. . WASHER.		2
		-----*		
6	NAS516	. . . FITTING		1
7	NAS537B11P100	. . . BUSHING		1
8	66-14170-3	. . . FITTING, WING BODY FAIRING RAM AIR SCOOP INBOARD SUPPORT (LH ONLY)		1
8	66-14170-4	. . . FITTING, WING BODY FAIRING RAM AIR SCOOP INBOARD SUPPORT (RH ONLY)		1
		. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

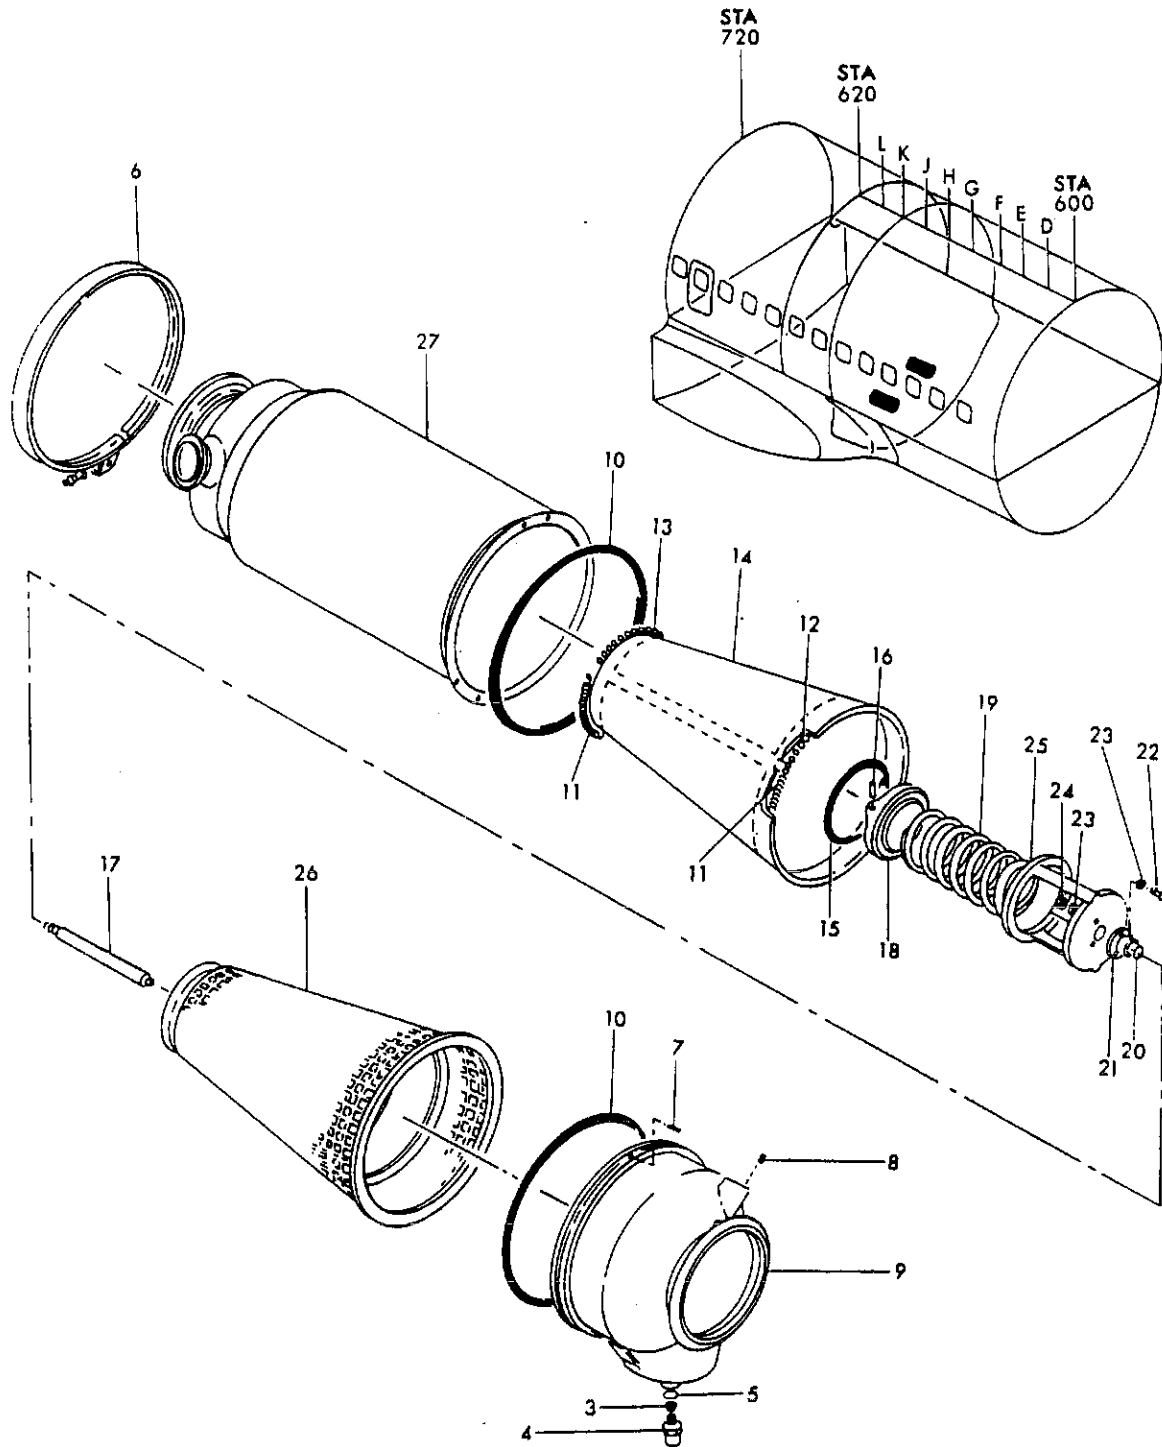


FIGURE 31. SEPARATOR, CABIN AIR CYCLE SYSTEM WATER



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
31	85640-3-1		SEPARATOR, CABIN AIR CYCLE SYSTEM WATER (V70210). (SAME AS BAC SPEC NO. 10-3085-11) (FOR ELEMENT REPLACEMENT PROCURE KIT NO. 65-90305-51, SEE FILTER MAINTENANCE KIT LISTING IN INTRODUCTION) (SEE FIG. 11, ITEM 8)		RF
	85641-3		SEPARATOR ASSY, (V70210) (USED ON 85640-3-1).		RF
	84615		FITTING ASSY, (V70210).		RF
M 3	84615-5		PLUG, (V70210).		1
M 4	84615-3		FITTING, (V70210).		1
M 5	AN6290-8		GASKET.		1
M 6	4365-1103S		BAND, COUPLING (V98625).		1
	170172		SHELL ASSY, (V70210).		RF
M 7	S8152N4-0300		PIN, 0.300 IN. LG STRAIGHT (V70210).		1
M 8	1191-3CNX9-32		INSERT, (V91767).		1
M 9	SHELL		SHELL, (V70210) (ORDER NHA).		1
M 10	S8171-112		PACKING, (V70210).		2
	84286-7		CONDENSER ASSY, (V70210) (USED ON 85641-3-1).		RF
M 11	83248		SPRING, EXTENSION (V70210).		2
M 12	83463-6		CHAIN ASSY, (V70210).		1
M 13	83463-7		CHAIN ASSY, (V70210).		1
M 14	84199-1		CONDENSER, (V70210).		1
M 15	5002-450H		RING, RETAINING (V79136).		1
	170254-2		VALVE ASSY, (V70210).		RF
M 16	S8152N8-0750		PIN, 0.750 IN. LG STRAIGHT (V70210).		1
M 17	85234-2		SHAFT ASSY, (V70210).		1
M 18	84042		POPPET, BY-PASS VALVE (V70210).		1
M 19	172468		SPRING, HELICAL COMPRESSION (V70210).		1
M 20	AN6227B8		PACKING.		3
M 21	170552		RETAINER, PACKING (V70210).		1
			ATTACHING PARTS		
M 22	AN500C8-10		SCREW.		3
M 23	AN960C8		WASHER.		6
M 24	AN364C832		NUT.		3
			-----*		
M 25	170142-1		GAGE, (V70210).		1
M 26	84287-8		SUPPORT ASSY, (V70210) (USED ON 84286-7).		1
M 27	170168		SHELL, (V70210).		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 04
AIR DISTRIBUTION SYSTEMS

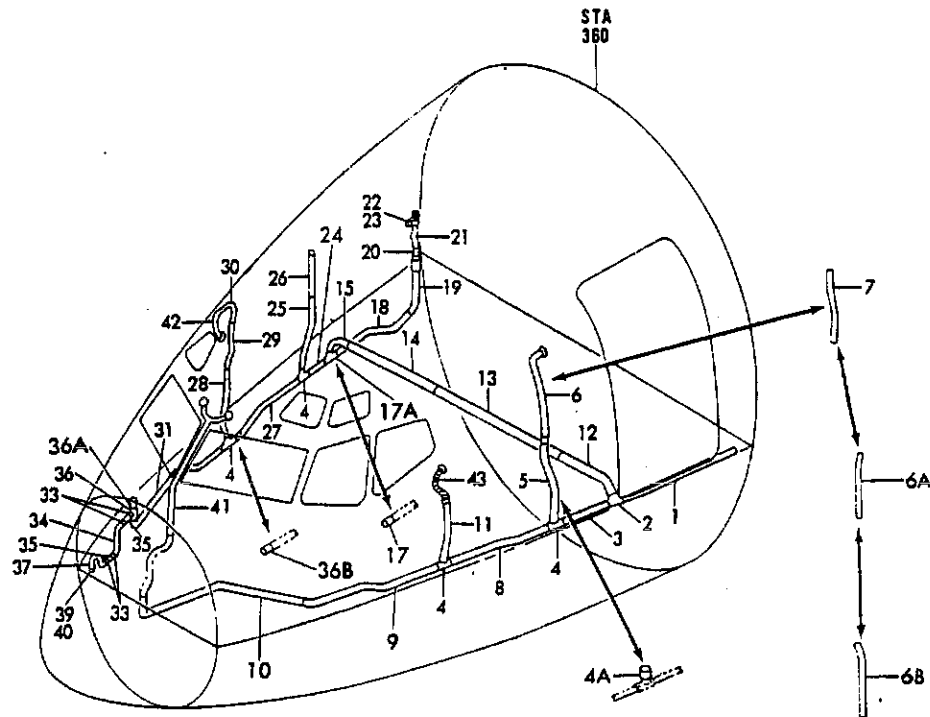


FIGURE 1A. OUTLET SYSTEM INSTL, SECTION 52 INDIVIDUAL AIR



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
1A	65-11935-159	OUTLET SYSTEM INSTL, SECTION 52 INDIVIDUAL AIR (SEE . . 21-2, FIG. 1, ITEM 1)		RF
1	65-11935-48	. TUBE ASSY, (65-1183-86 ALTERED)		1
2	66-3894	. DUCT, CREW COMPARTMENT TEE.		1
3	65-11935-150	. TUBE ASSY		1
4	66-3895	. DUCT, CREW COMPARTMENT TEE.		4
5	65-11935-147	. TUBE ASSY		1
6	65-11935-138	. TUBE, AIR CONDITIONING 1 IN. .016 6061-0.		1
8	65-11935-165	. TUBE ASSY		1
9	65-11935-180	. TUBE ASSY		1
10	65-11935-183	. TUBE ASSY		1
11	65-11935-168	. TUBE ASSY		1
12	65-11935-171	. TUBE ASSY		1
13	65-11935-24	. TUBE ASSY		1
14	65-11935-38	. TUBE ASSY, (65-1183-73 ALTERED)		1
15	65-11935-41	. TUBE ASSY, (65-1183-72 ALTERED)		1
17A	66-3896	. DUCT, TEE		1
18	65-11935-39	. TUBE ASSY, (65-1183-46 ALTERED)		1
19	65-11935-124	. TUBE ASSY		1
20	66-19275-1	. DUCT, TRANSITION.		1
21	65-11935-112	. TUBE, 1 IN. .035 6061-0		1
22	AN737TH30	. CLAMP		1
23	BACD40D3-10-4	. DUCT.		1
24	65-1183-45	. TUBE, AIR CONDITIONING 1 IN. .016 6061-0.		1
25	65-11935-40	. TUBE ASSY, (65-1183-47 ALTERED)		1
26	65-1183-48	. TUBE, AIR CONDITIONING 1 IN. .016 6061-0.		1
27	65-11935-96	. TUBE ASSY		1
28	65-11935-95	. TUBE ASSY		1
29	65-11935-32	. TUBE ASSY, (65-1183-27 ALTERED)		1
30	65-11935-33	. TUBE ASSY, (65-1183-28 ALTERED)		1
41	65-64839-1	. OUTLET INSTL, PILOT AND COPILOT INDIVIDUAL AIR (SEE . FIG. 2A)		1
42	69-3350	. OUTLET INSTL, FLIGHT ENGINEER INDIVIDUAL AIR (SEE . . FIG. 6)		1
43	69-45252-1	. OUTLET INSTL, OBSERVER INDIVIDUAL AIR (SEE FIG. 3A) .		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

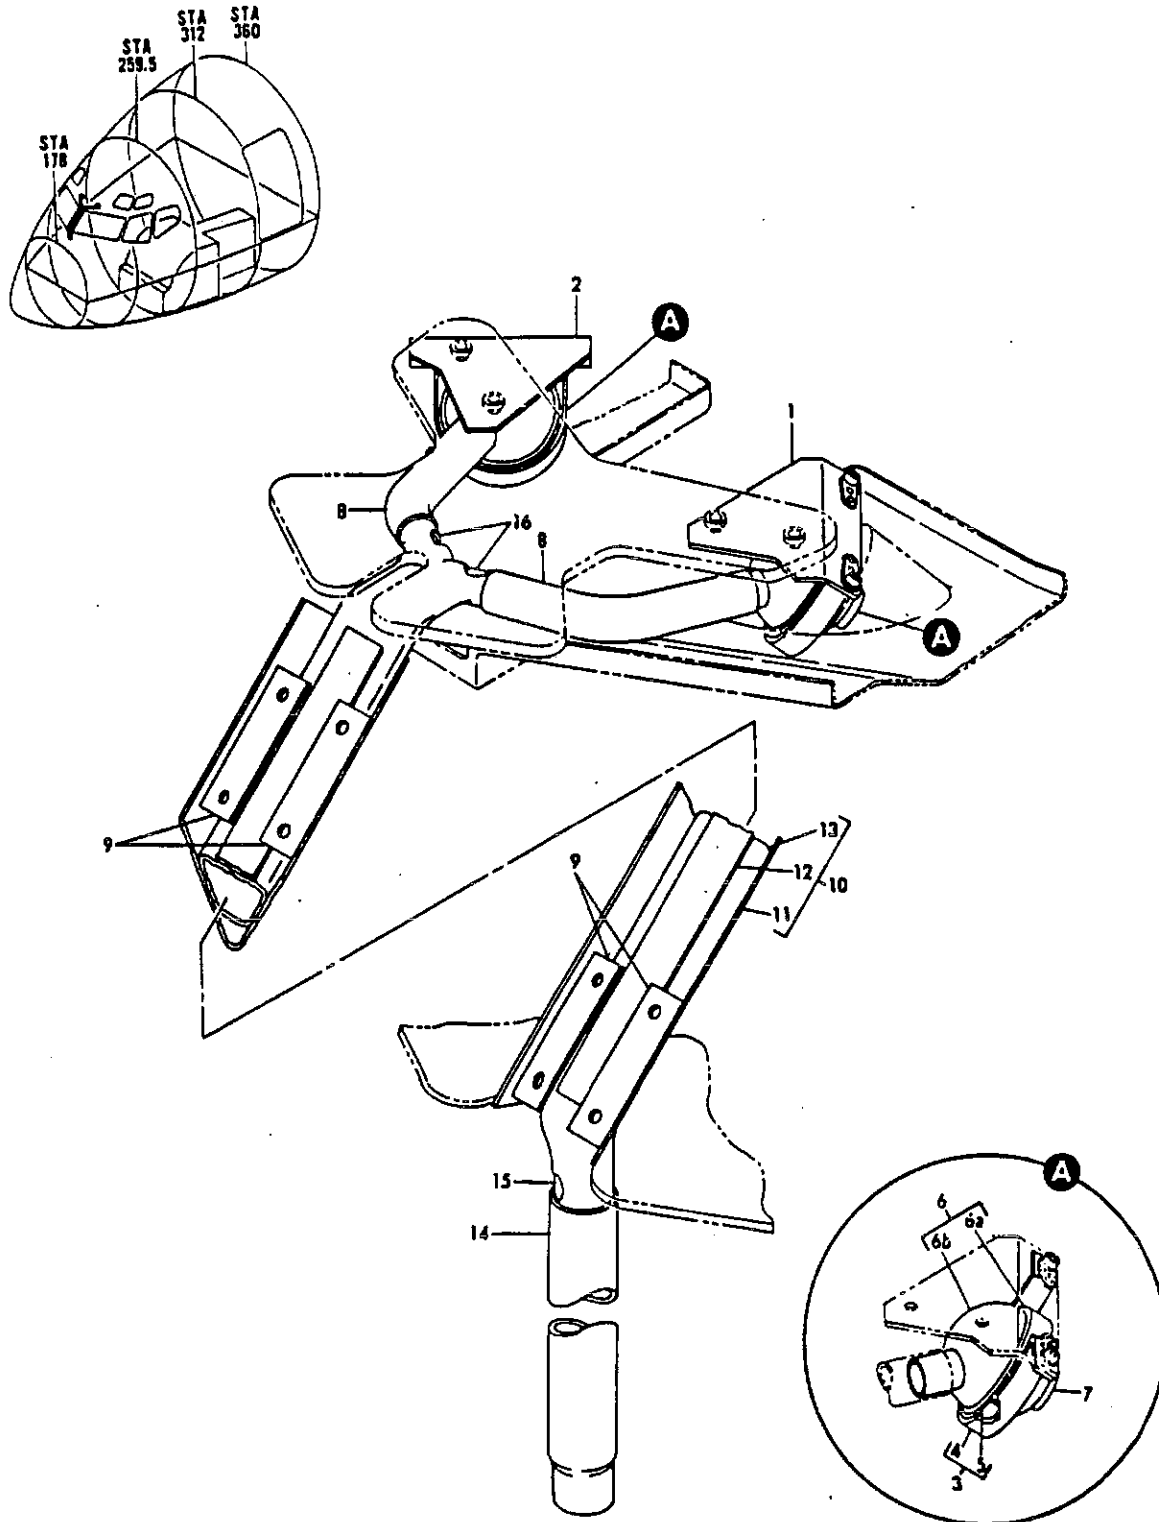


FIGURE 2A. OUTLET INSTL, PILOT AND COPILOT INDIVIDUAL AIR
DUCT AND BRACKET INSTL,



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2A	65-64839-1	OUTLET INSTL, PILOT AND COPILOT INDIVIDUAL AIR (SEE . . . FIG. 1A, ITEM 41 AND FIG. 98, ITEM 24)		RF
1	69-51965-7	. BRACKET ASSY, (LH)		1
2	69-51965-8	. BRACKET ASSY, (RH)		1
3	69-52174-1	. BRACKET ASSY.		2
	MS35215-54	ATTACHING PARTS		
	AN960D10L	. SCREW		4
		. WASHER.		4
4	69-52174-2	. . CLAMP		1
5	69-52174-3	. . CUSHION		1
6	69-51966-1	. MANIFOLD ASSY		2
6A	69-51966-2	. . RING.		1
6B	69-51966-4	. . DUCT.		1
7	1703	. OUTLET, AIR (V83564).		2
8	65-43615-22	. DUCT.		2
9	69-51965-3	. BRACKET ASSY.		4
	MS35214-40	ATTACHING PARTS		
	AN960DBL	. SCREW		4
		. WASHER.		4
10	69-52356-1	. DUCT ASSY, GASPER SYSTEM.		1
11	69-51964-1	. . COVER		1
12	69-52356-2	. . CUSHION		1
13	69-51963-1	. . DUCT.		1
14	65-43615-21	. DUCT.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				


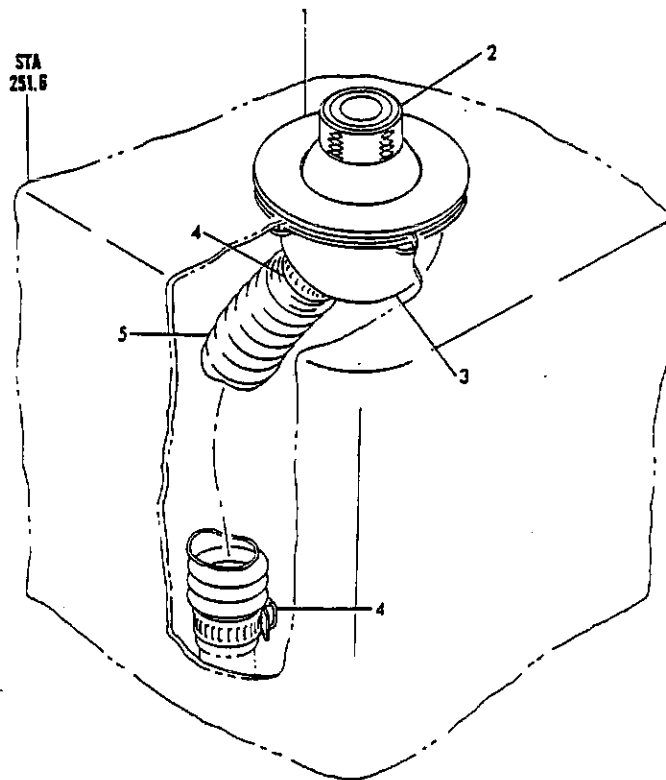


FIGURE 3A. OUTLET INSTL, OBSERVER INDIVIDUAL AIR

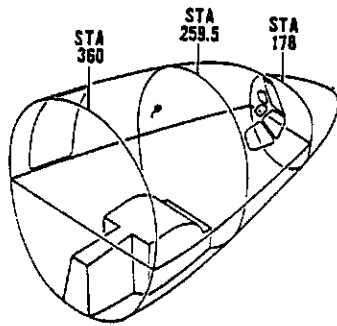

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3A	69-45252-1		OUTLET INSTL, OBSERVER INDIVIDUAL AIR (SEE FIG. 1, ITEM 44, FIG. 1A, ITEM 43 AND FIG. 1B, ITEM 34)		RF
1	7194		. COVER, COLD (V83564)		1
2	1755		. VENT, COLD (V83564)		1
			ATTACHING PARTS		
	NAS514P1032-8		. SCREW		4
	AN960010L		. WASHER.		4
	NAS679A3W		. NUT		4
			-----*-----		
3	66-3801-3		. PLENUM.		1
4	AN737TW46		. CLAMP		2
5	BACD4084-36-5-4		. DUCT, CONVOLUTED FLEXIBLE		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

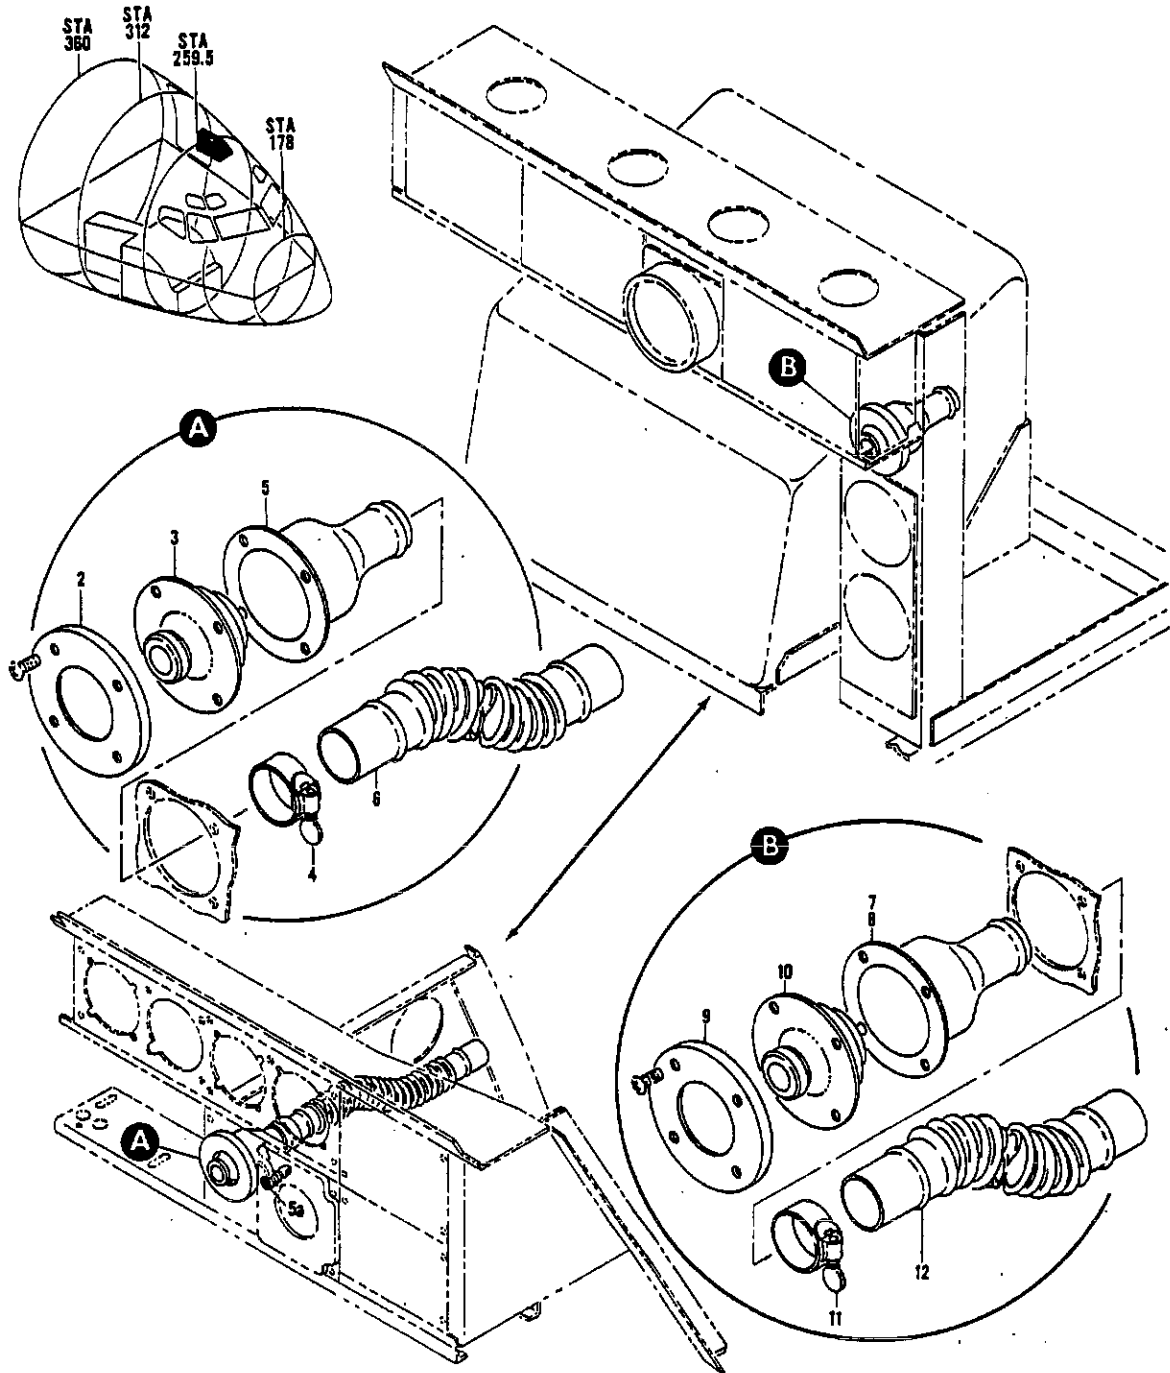


FIGURE 4. RACK INSTL, NAVIGATORS PANEL EQUIPMENT (AIR CONDITIONING ONLY)

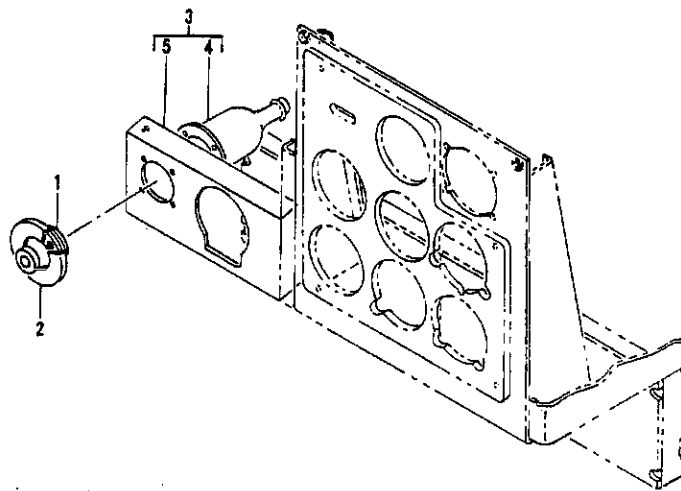
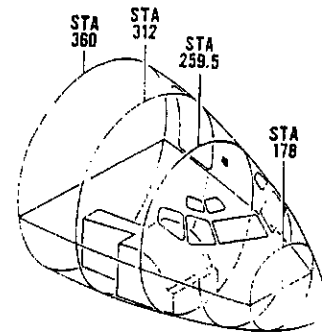


FIGURE 5A. EQUIPMENT INSTL. NAVIGATORS PANEL (AIR CONDITIONING ONLY)

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R	5A	65-40548-1	EQUIPMENT INSTL, NAVIGATORS PANEL (AIR CONDITIONING . . ONLY) (DELETED BY RAF MOD 7211.019-4) (SEE 25-1, FIG. 1K, ITEM 22)							0150	RF
	1	1755	. VENT, COLD AIR OUTLET (V83564)							0150	1
	2	7194	. COVER, COLD AIR OUTLET (V83564)							0150	1
		NAS514P1032-8	. ATTACHING PARTS								
			. SCREW							0150	4
	3	65-40548-12	. PANEL ASSY, NAVIGATORS PANEL EQUIPMENT LORAN.							0150	1
	4	66-9419	. . PLENUM, CREW COMPARTMENT INDIVIDUAL AIR OUTLET.							0150	1
	5	65-40548-8	. . PANEL, NAVIGATORS PANEL EQUIPMENT LORAN							0150	1
			. FOR REFERENCE TO OTHER EQUIPMENT DETAILS, SEE NHA . .							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											



MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/01

21-04-5A

DETAILED PARTS LIST
21-04-5A
PAGE 1

BOEING
707
PARTS CATALOG (MAINTENANCE)

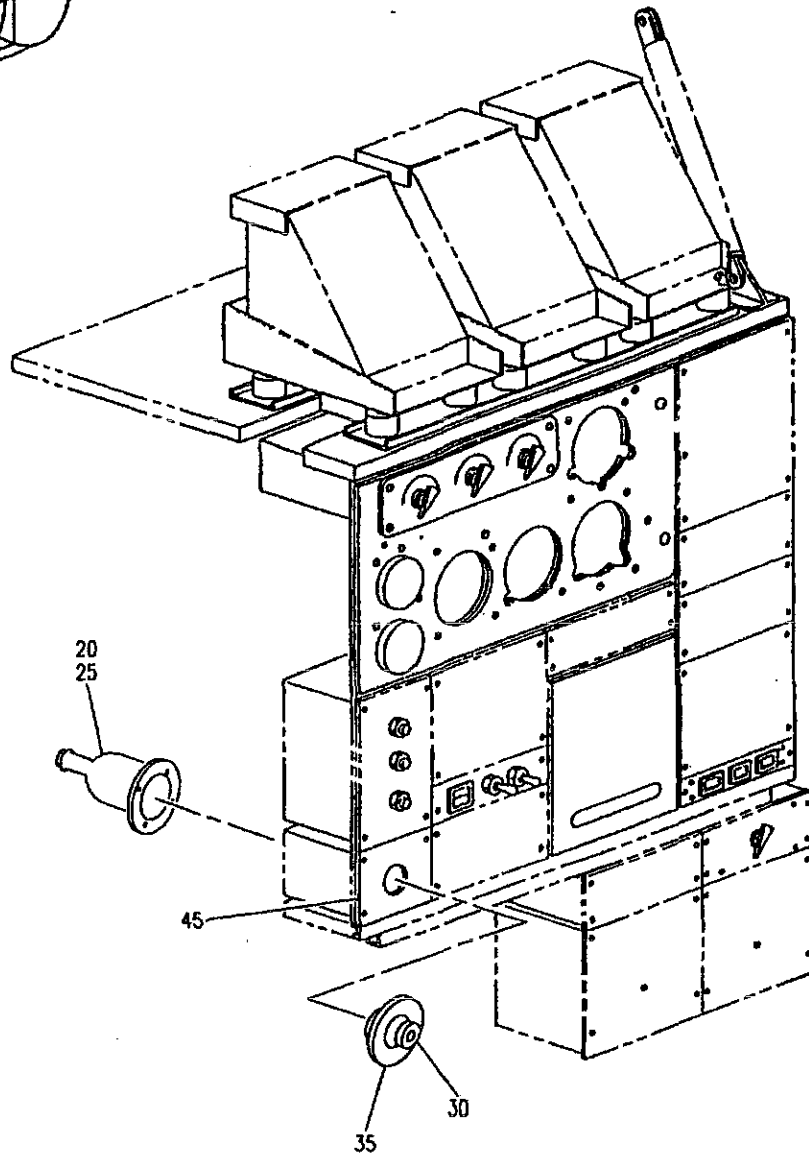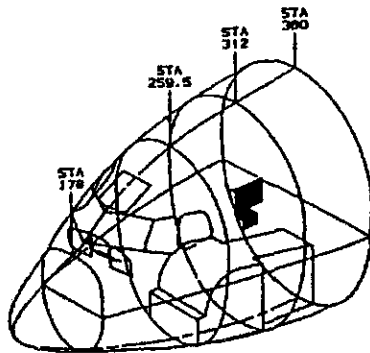

A 21040058 REV 272

AIR CONDITIONING - AIR DISTRIBUTION SYSTEM
FIGURE 5B. PANEL INSTL, MISSION COORDINATING STATION

DETAILED PARTS LIST
21-04-5B
PAGE 0

21-04-5B

NOV 21/01

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 5B	391-25-10-74001-001		PANEL INSTL, MISSION CO-ORDINATING STATION.	0150	
R			PANEL INSTL, MISSION CO-ORDINATING STATION (AIR	0101	1
R			CONDITIONING ONLY) (VZ0031) (65-40548-1	0450	
R			MODIFIED BY MOD 7211.019-225) (ADDED BY RAF MOD		
R			7211.019-4)		
R	391-25-10-74001-003		PANEL INSTL, MISSION CO-ORDINATING STATION (AIR	0203	1
R			CONDITIONING ONLY) (VZ0031) (65-40548-1		
R			MODIFIED BY MOD 7211.019-225) (ADDED BY RAF MOD		
R			7211.019-4)		
R	391-25-10-74458-001		. PANEL ASSY, MISSION CO-ORDINATING STATION AIR VENT. .	0150	1
R			(VZ0031)		
R	391-21-10-74458-003		. PANEL ASSY (VZ0031)	0150	1
R	20 66-9419		. . PLENUM, (REW COMPARTMENT INDIVIDUAL AIR OUTLET. . .	0150	1
R	25 MS21069-3		. . NUT, ANCHOR	0150	4
R	30 1755		. . VENT, COLD AIR OUTLET (V83564).	0150	1
R	35 7194		. . COVER, COLD AIR OUTLET (V83564)	0150	1
R			ATTACHING PARTS		
R	NAS514P1032-8		. . SCREW	0150	4
R	45 391-21-10-74458-101		. . PANEL, FRONT (VZ0031)	0150	1
R			ATTACHING PARTS		
R	PFSC3-1-2-38A		. . FASTENER DZUS (V72794).	0150	4
			-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

RAF
NOV 21/01

21-04-5B

DETAILED PARTS LIST
21-04-5B
PAGE 1

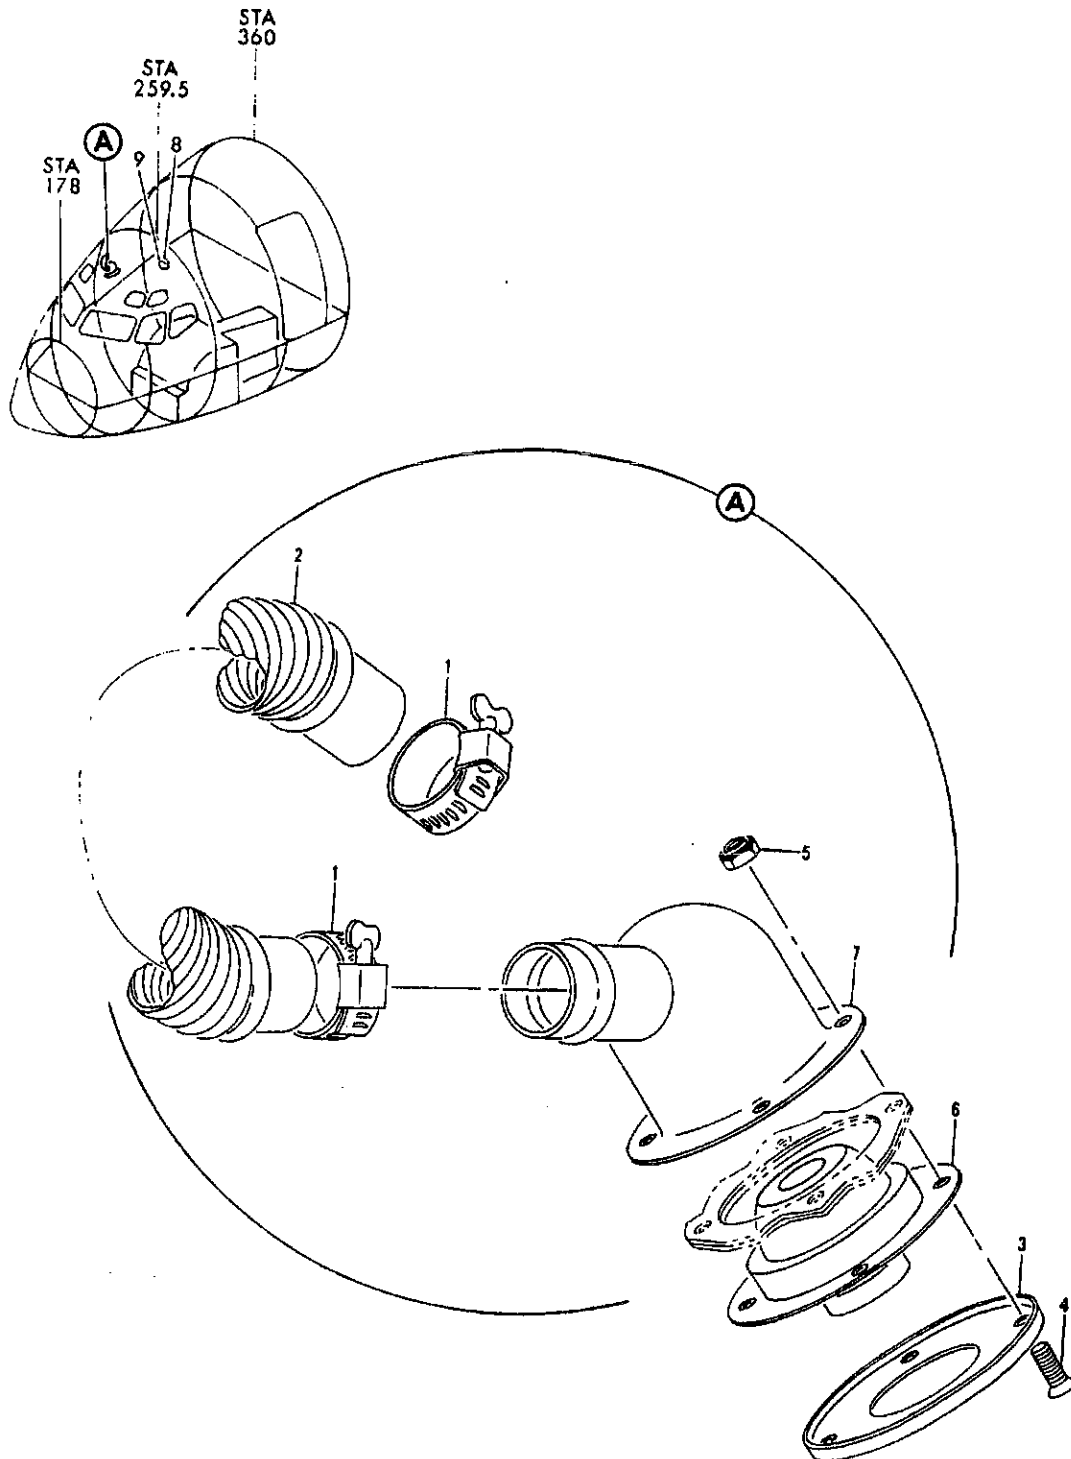


FIGURE 6. OUTLET INSTL, FLIGHT ENGINEER INDIVIDUAL AIR



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
6	69-3350	OUTLET INSTL, FLIGHT ENGINEER INDIVIDUAL AIR (SEE FIG. 1, ITEM 43, FIG. 1A, ITEM 42 AND FIG. 1B, ITEM 33)								RF
1	AN737TW46	. CLAMP								2
2	BACD40B4-60-5-4	. DUCT.								1
3	7194	. COVER, COLD AIR OUTLET (V83564)								1
4	NAS514P1032-8	. SCREW								4
5	NAS679A3	. NUT								4
6	1755	. VENT, COLD AIR OUTLET (V83564).								1
7	66-3801	. PLENUM ASSY, CREW COMPARTMENT INDIVIDUAL AIR OUTLET .								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

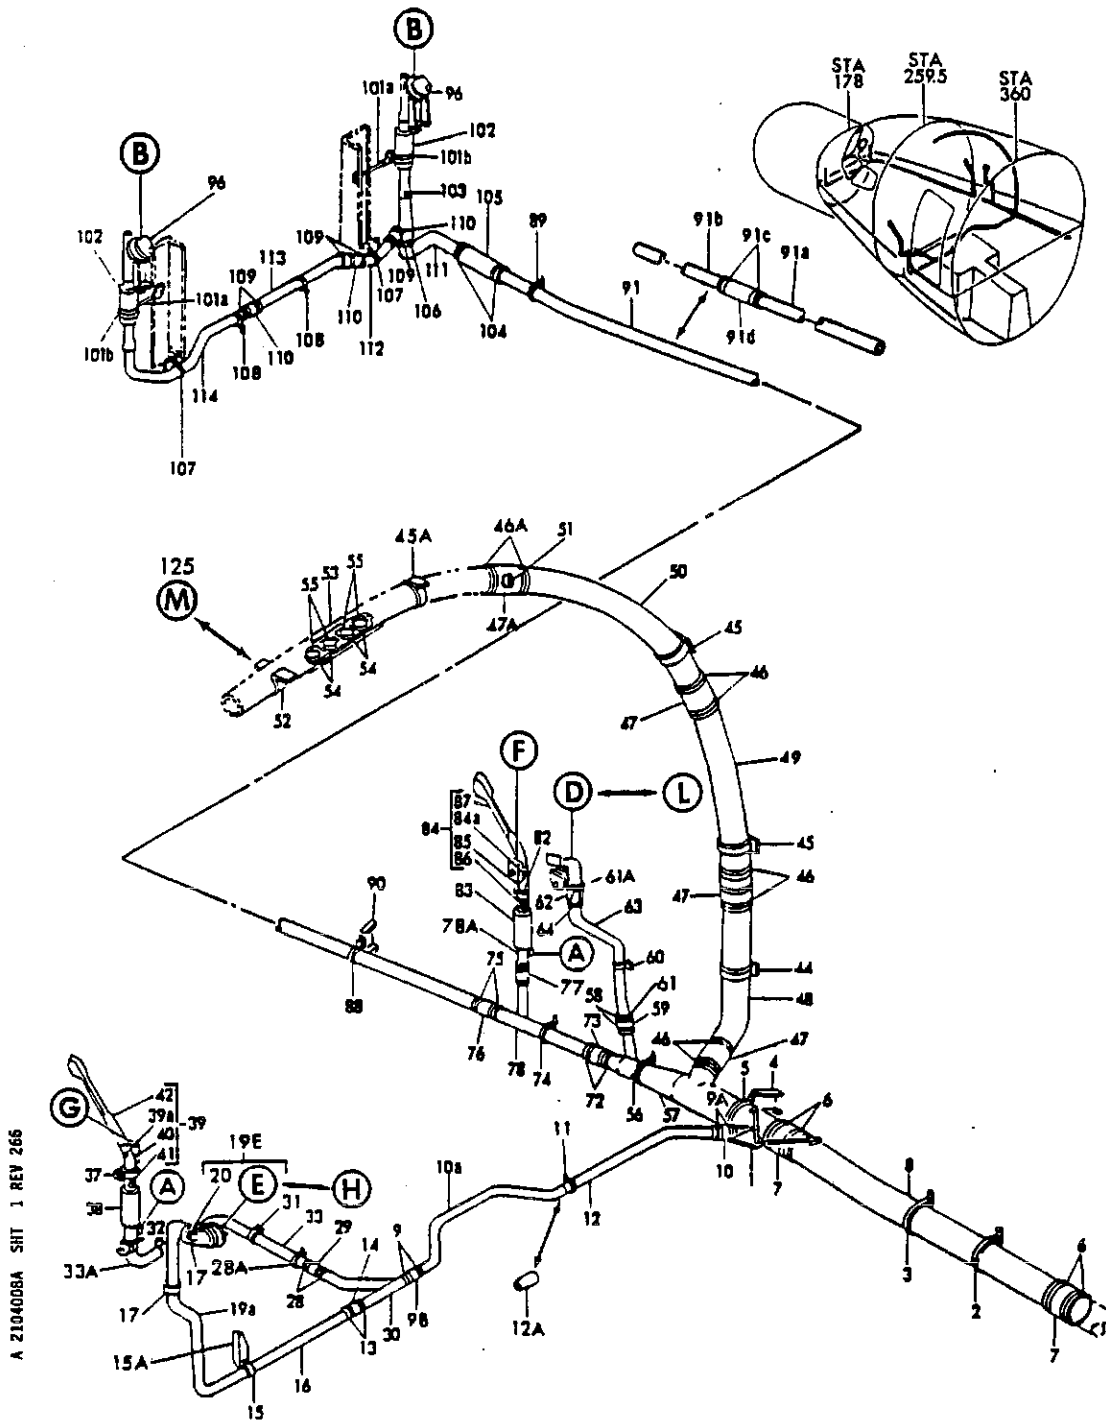


FIGURE 8A. DISTRIBUTION SYSTEM INSTL. SECTION 52 AIR CONDITIONING (SHEET 1)

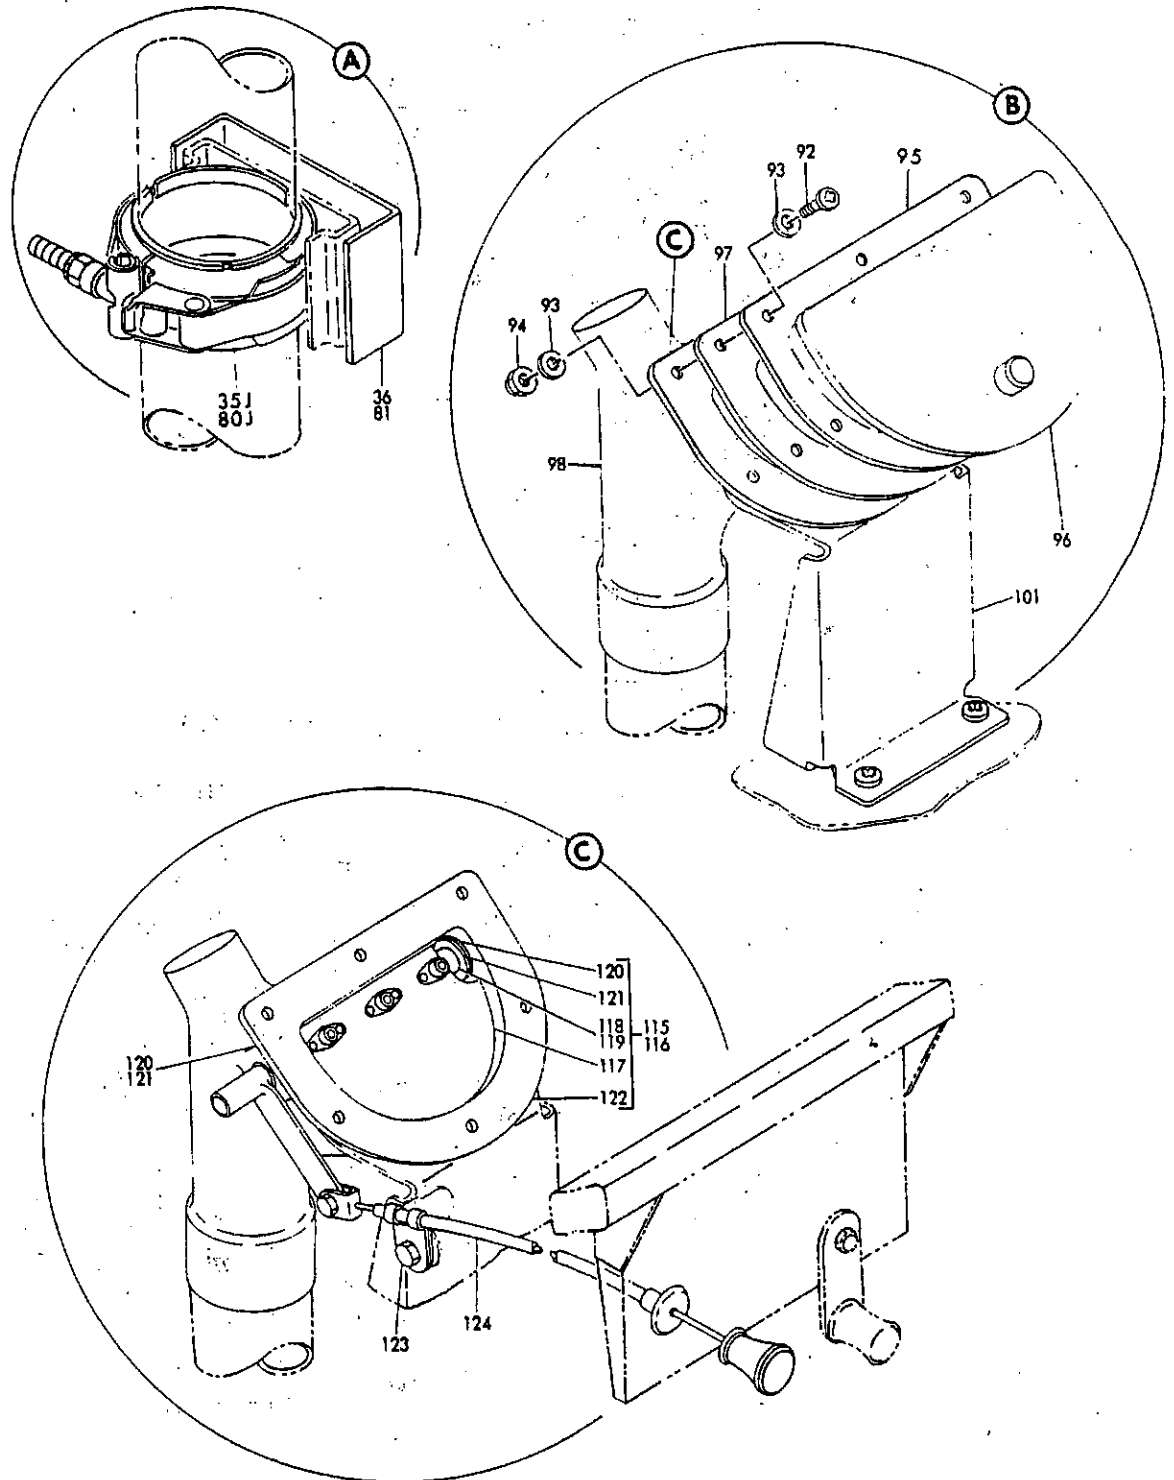


FIGURE 8A. DISTRIBUTION SYSTEM INSTL. SECTION 52 AIR CONDITIONING (SHEET 2)

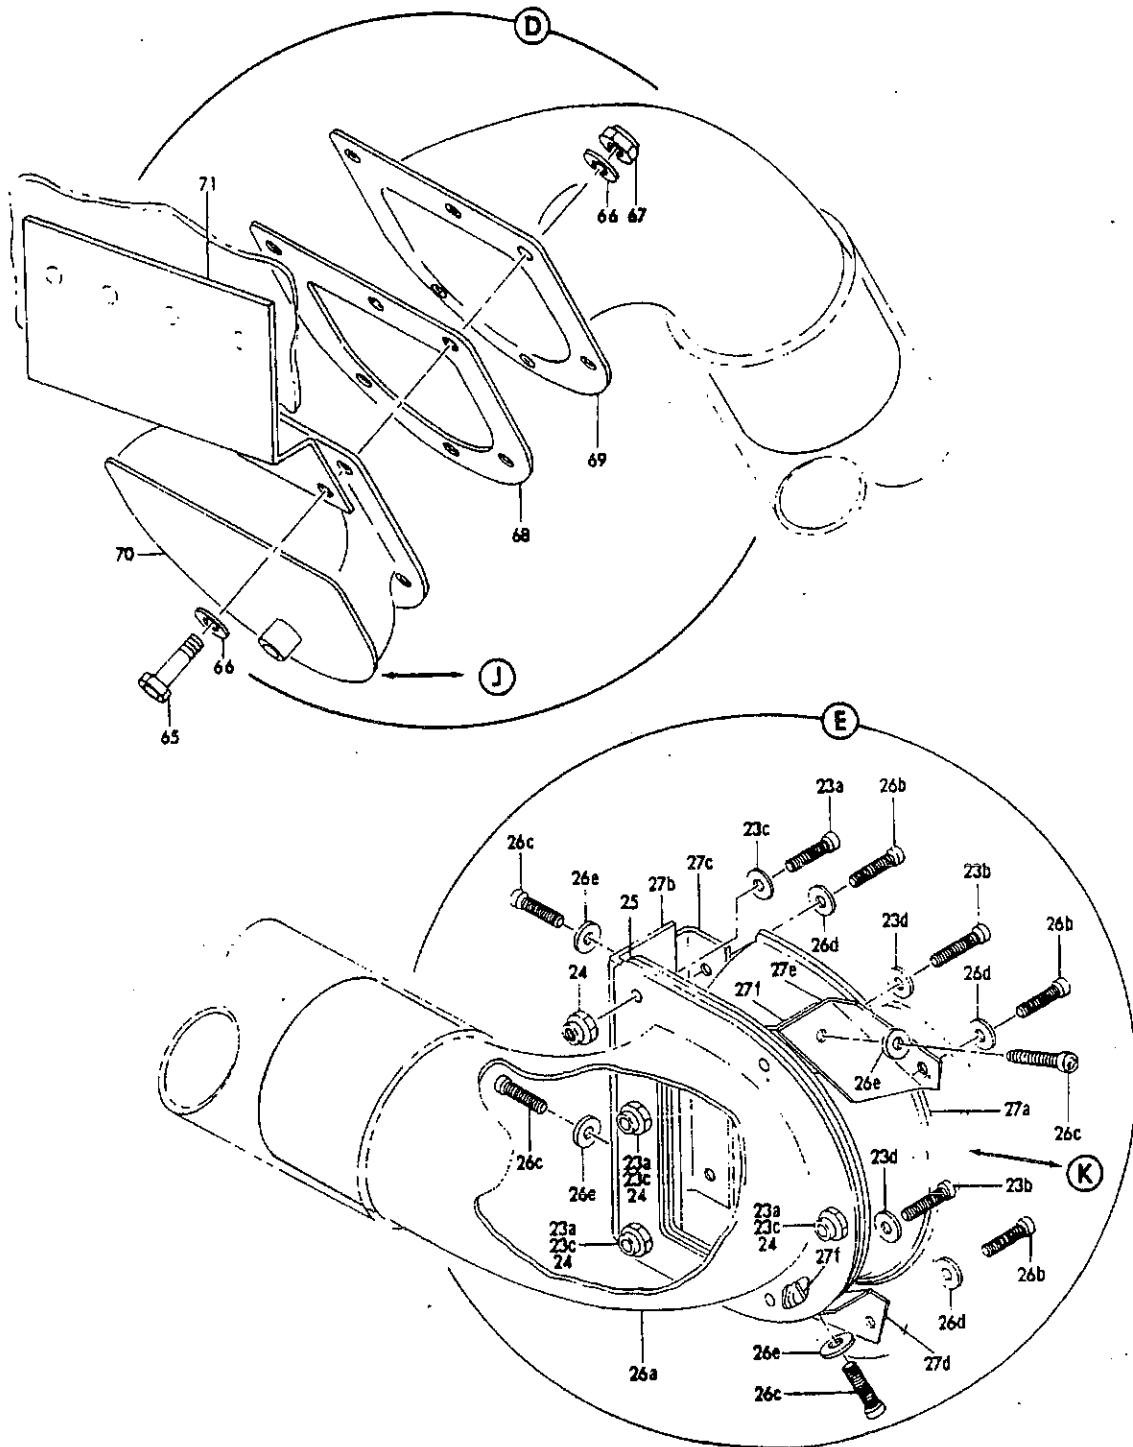


FIGURE 8A. DISTRIBUTION SYSTEM INSTL. SECTION 52 AIR CONDITIONING (SHEET 3)

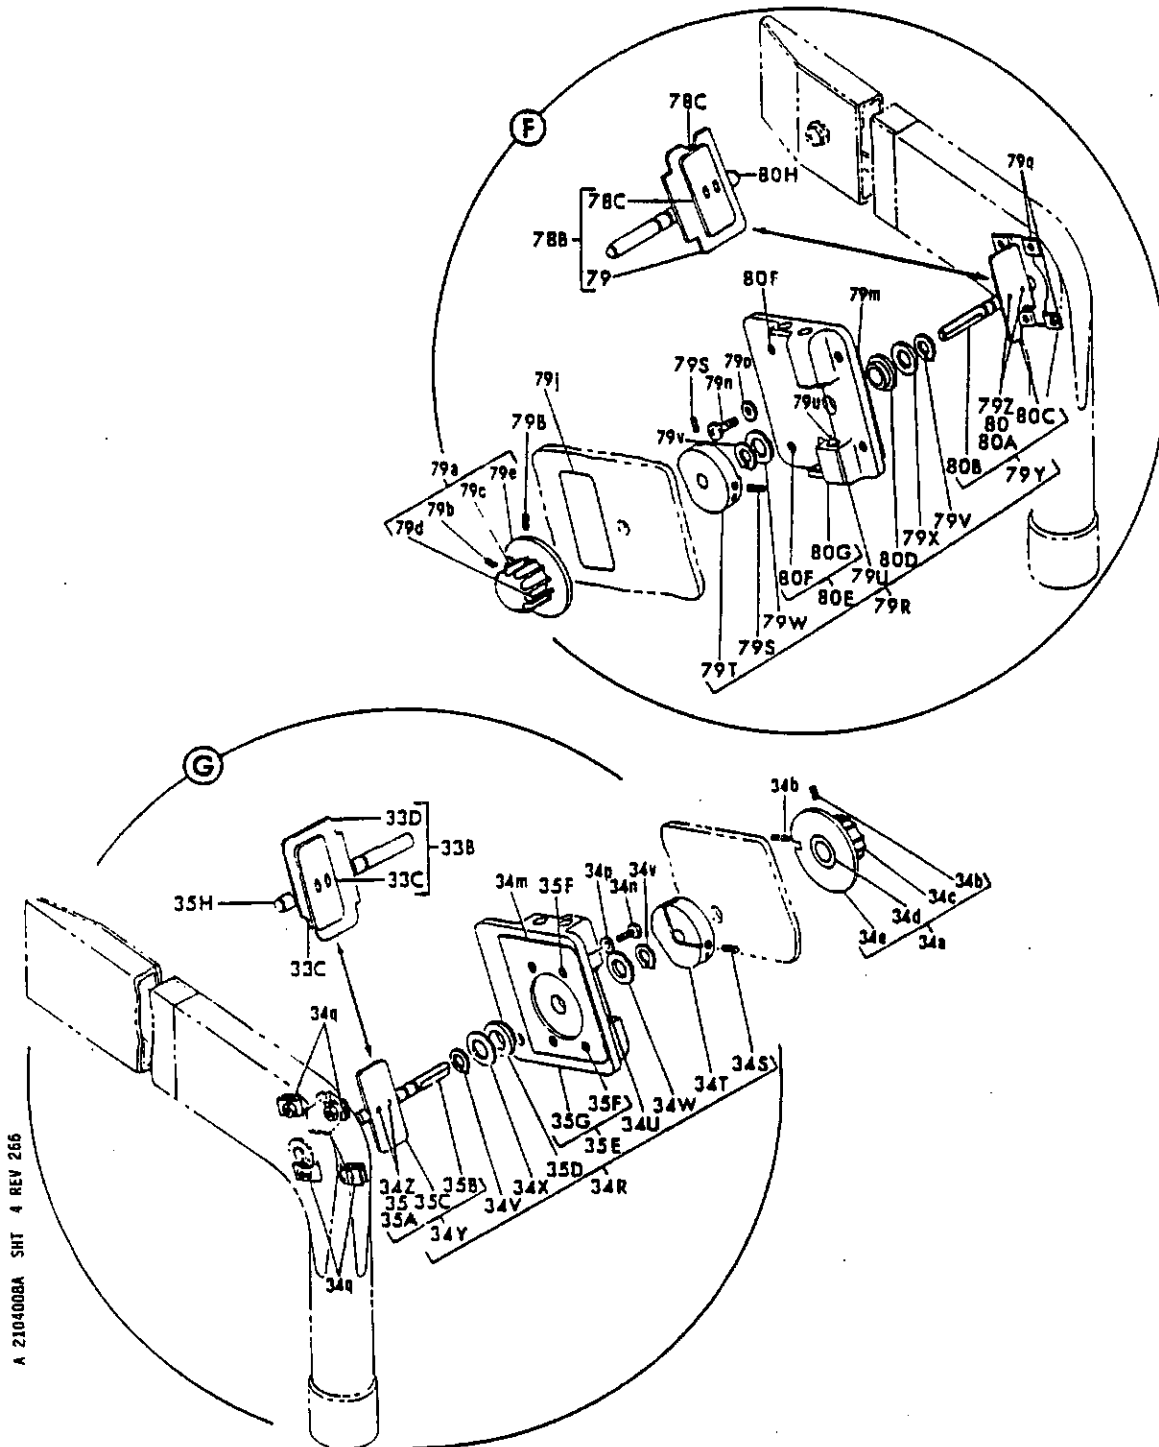


FIGURE 8A. DISTRIBUTION SYSTEM INSTL. SECTION 52 AIR CONDITIONING (SHEET 4)

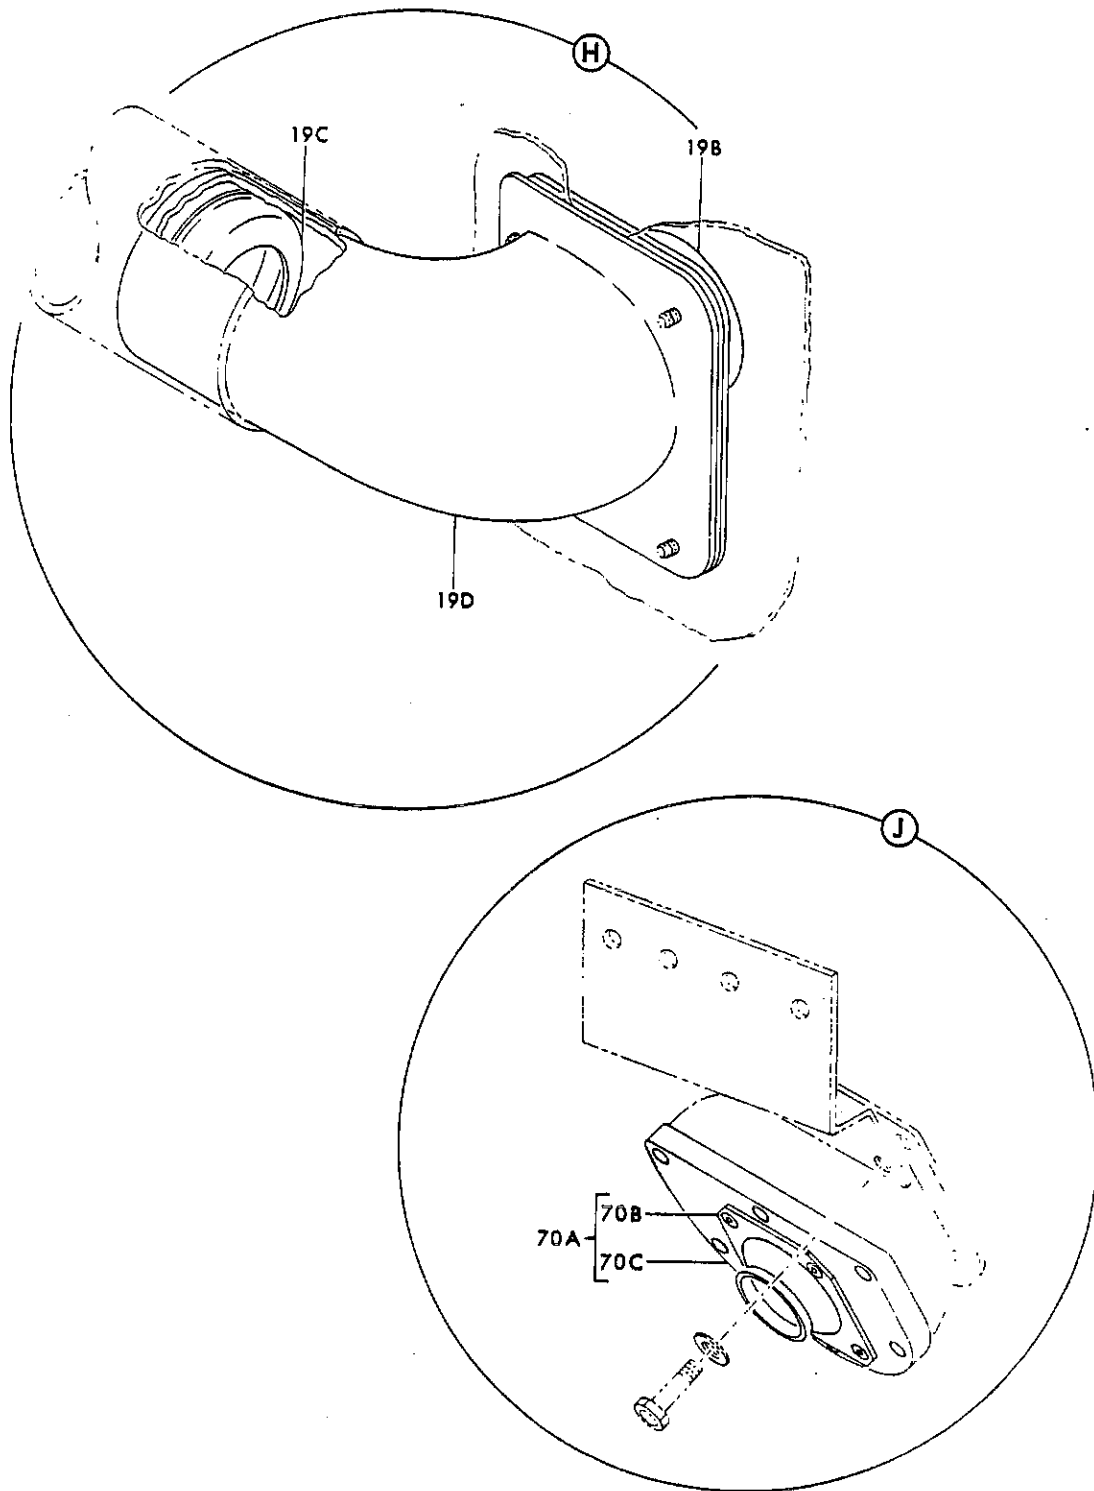


FIGURE 8A. DISTRIBUTION SYSTEM INSTL. SECTION 52 AIR CONDITIONING (SHEET 5)


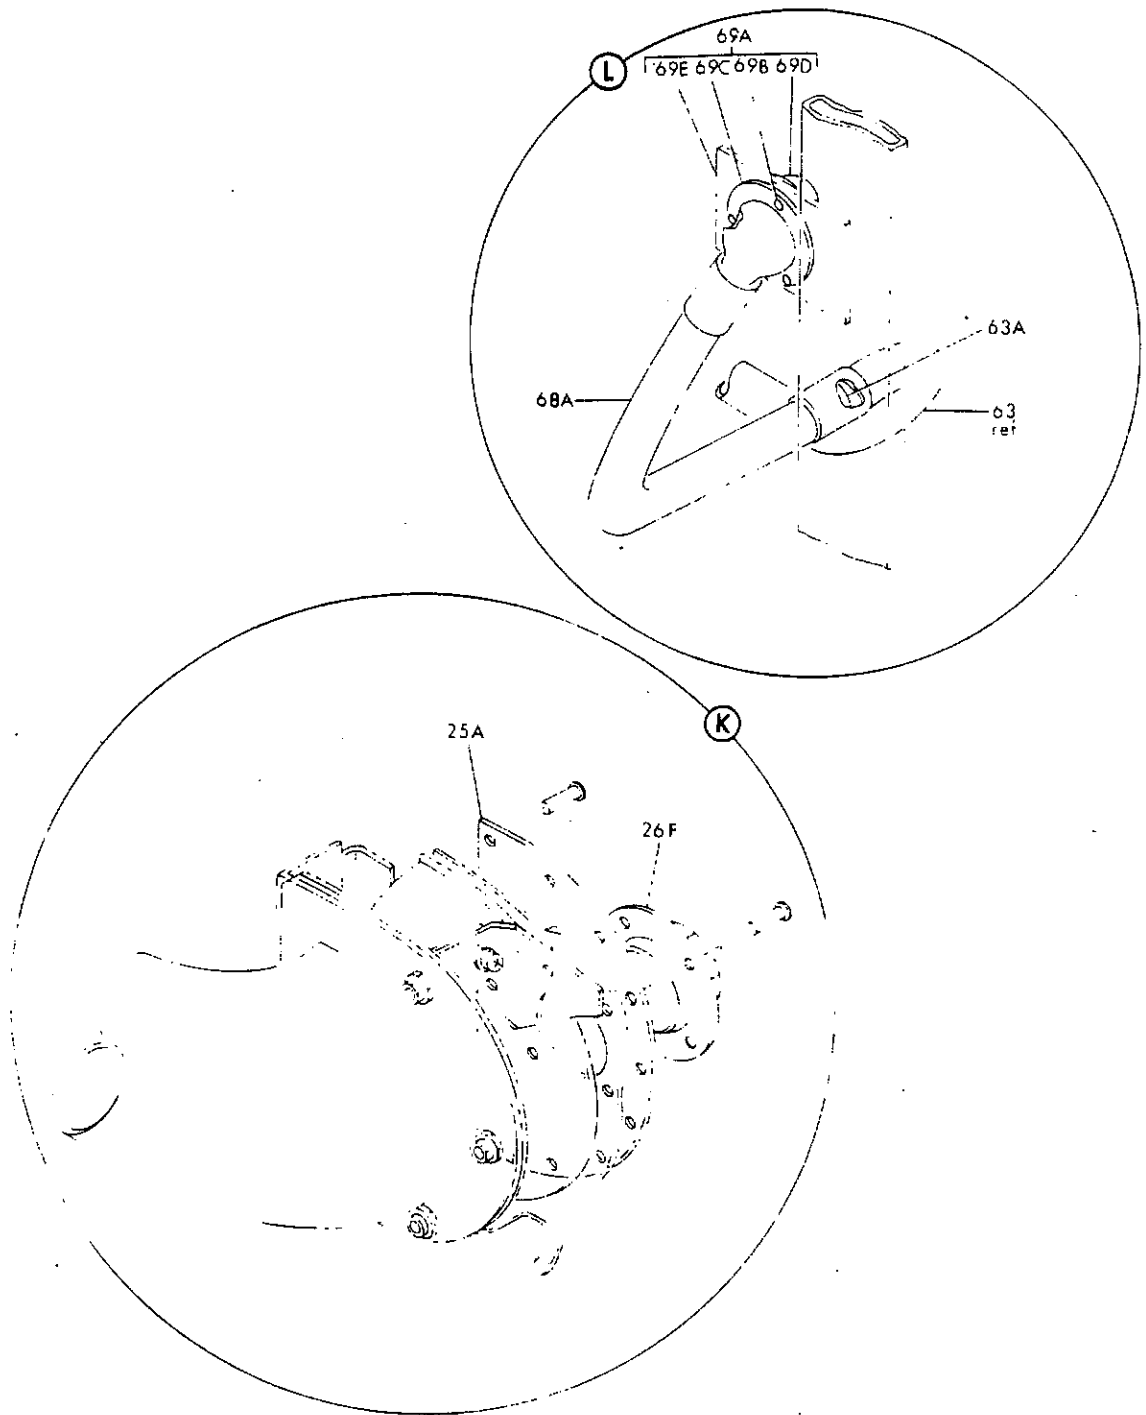


FIGURE 8A. DISTRIBUTION SYSTEM INSTL. SECTION 52 AIR CONDITIONING (SHEET 6)

NOV 21/90

21-04-0A

DETAILED PARTS LIST
21-04-8A
PAGE 5

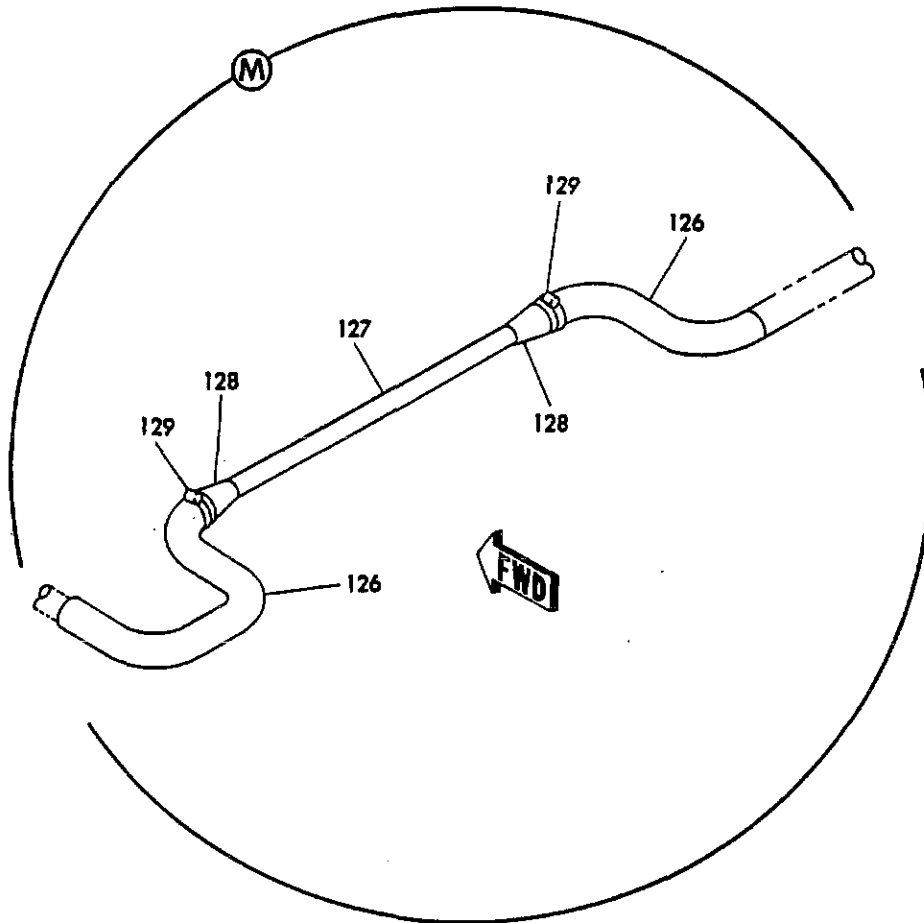

A 2104008A SHT 7 REV 266

FIGURE 8A. DISTRIBUTION SYSTEM INSTL, SECTION 52 AIR CONDITIONING (SHEET 7)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8A	65-42100-1	DISTRIBUTION SYSTEM INSTL, SECTION 52 AIR CONDITIONING (SEE 21-2, FIG. 1, ITEM 2)		RF
1	65-6877	. SHAFT INSTL, MANUAL AIR SHUT OFF (SEE FIG. 10)		1
2	63-1017	. CLAMP, DUCT SUPPORT		1
	NAS603-41	ATTACHING PARTS		1
	NAS42DD6-138	. SCREW		1
	NAS679A3W	. SPACER.		1
		. NUT		1
3	63-1017	. CLAMP, DUCT SUPPORT		1
	NAS603-44	ATTACHING PARTS		1
	NAS42DD6-154	. SCREW		1
	NAS679A3W	. SPACER.		1
		. NUT		1
4	66-1040-1	. BRACKET, DUCT SUPPORT		1
5	63-1017	. CLAMP, DUCT SUPPORT		1
	NAS603-7P	ATTACHING PARTS		1
	NAS679A3W	. SCREW		1
		. NUT		1
6	BACC10BK152	. CLAMP		4
7	BACD40D18-12-17	. DUCT.		2
8	69-1013-3	. DUCT ASSY, STATION 300 TO 360 AIR DISTRIBUTION (SEE FIG. 9)	5199	1
8	69-1013-4	. DUCT ASSY, STATION 300 TO 360 AIR DISTRIBUTION (SEE FIG. 9)	0150	1
9	AN737TW74	. CLAMP		2
9A	AN737TW74	. CLAMP		2
9B	BACD40D8-12-17	. DUCT.		1
10	BACD40D8-12-17	. DUCT.		1
10A	65-42100-9	. DUCT, PILOT AND NAVIGATOR		1
11	AN742D32	. CLAMP		1
	NAS603-8P	ATTACHING PARTS		1
	NAS679A3W	. SCREW		1
		. NUT		1
12	65-42100-8	. DUCT, PILOT AND NAVIGATOR		1
12A	69-55694-1	. DUCT, TRANSITION.		1
13	AN737TW46	. CLAMP		2
14	BACD40D5-12-17	. DUCT.		1
15	AN742D20	. CLAMP		1
	NAS603-7P	ATTACHING PARTS		1
	NAS679A3W	. SCREW		1
		. NUT		1
15A	66-3417-8	. BRACKET	0151	1
	MS20470D5	ATTACHING PARTS		2
		. RIVET	0151	2
16	65-42100-2	. DUCT, NAVIGATORS.		1
	65-58591-1	. DIFFUSER INSTL, NAVIGATORS STATION.		1
17	AN737TW48	. CLAMP		2
19A	BACD40A5-52-5A1	. DUCT.		1
19E	65-58591-2	. DIFFUSER ASSY		1
20	66-26038-6	. RESTRICTOR.		1
23A	NAS603-7P	. SCREW		4
23B	NAS603-8P	. SCREW		2
23C	AN960D10L	. WASHER.		4
23D	AN960D10L	. WASHER.		2
24	NAS679A3W	. NUT		6
25	69-45510-1	. GASKET.		1
26A	69-45509-2	. HEADER.		1
26B	NAS603-7	. SCREW		4
26C	NAS603-7P	. SCREW		4
26D	AN960D10L	. WASHER.		4
26E	AN960D10L	. WASHER.		4
27A	63-1374-2	 DIFFUSER, AIR (ALTERED FROM 6013179-82434 (V03496)) (OPTIONAL TO 205032 (V03496))		1
27A	205032	 DIFFUSER, (V03496). (OPTIONAL 63-1374-2)		1
27B	69-44742-11	 BRACKET ASSY, SUPPORT		1
27C	69-44742-2	 BRACKET ASSY, SUPPORT		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8A 27D	69-44742-3	.	BRACKET ASSY, SUPPORT		1
27E	69-44742-4	.	BRACKET ASSY, SUPPORT		1
27F	69-44742-5	.	BRACKET ASSY, SUPPORT		2
28	AN737TW56	.	CLAMP		2
28A	AN742D24	.	CLAMP		1
	NAS603-30P	.	ATTACHING PARTS		
	NAS42DD6-89	.	SCREW		1
	NAS679A3W	.	SPACER		1
		.	NUT		1
		*			
29	BACD40D6-12-17	.	DUCT		1
30	69-45878-2	.	DUCT		1
31	AN742D24	.	CLAMP		1
	NAS603-8P	.	ATTACHING PARTS		
	NAS679A3W	.	SCREW		1
		.	NUT		1
		*			
32	AN737TW56	.	CLAMP		1
33	65-42100-3	.	DUCT, PILOT SHOULDER		1
33A	BACD40A6-52-5A1	.	DUCT		1
	65-58436-1	.	SHOULDER WARMER INSTL		1
35J	BACC10BEC150G	.	CLAMP		1
36	69-45253-1	.	BRACKET		1
	AN960D10L	.	ATTACHING PARTS		
	NAS679A3W	.	WASHER		2
		.	NUT		2
		*			
37	AN742D24	.	CLAMP		1
	NAS603-7P	.	ATTACHING PARTS		
		.	SCREW		1
		*			
38	97000-1	.	HEATER ASSY, (V16290)		1
39	65-58436-3	.	MANIFOLD ASSY		1
40	65-60227-3	.	DUCT		1
41	66-4895-4	.	RESTRICTOR		1
42	65-58437-1	.	MANIFOLD ASSY		1
	NAS603-24P	.	ATTACHING PARTS		
	AN960D10L	.	SCREW		4
		.	WASHER		4
		*			
44	65-58586-2	.	OVERHEAD INSTL		1
	AN742D40	.	CLAMP		1
	NAS603-7P	.	ATTACHING PARTS		
	NAS679A3W	.	SCREW		1
		.	NUT		1
		*			
45	AN742D40	.	CLAMP		2
	NAS603-12P	.	ATTACHING PARTS		
	BACS18F38B	.	SCREW		2
	NAS680A3	.	SPACER		2
		.	NUT		2
		*			
45A	AN742D40	.	CLAMP		1
	NAS603-12P	.	ATTACHING PARTS		
	BACS18F38B	.	SCREW		1
	NAS680A3	.	SPACER		1
		.	NUT		1
		*			
46	AN737TW91	.	CLAMP		6
46A	AN737TW91	.	CLAMP		2
47	BACD40D10-12-17	.	DUCT		3
47A	BACD40D10-12-17	.	DUCT		1
48	69-45629-1	.	DUCT		1
49	69-45630-2	.	DUCT		1
50	69-45630-2	.	DUCT		1
51	69-45837-1	.	RESTRICTOR		1
52	BACC10BA40	.	CLAMP		1
	NAS603-12P	.	ATTACHING PARTS		
	BACS18F25B	.	SCREW		2
	NAS680A3	.	SPACER		2
		.	NUT		2
		*			
53	69-45631-1	.	HEADER ASSY		1
54	2368	.	VALVE, (V83564)		4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
BA 55	69-45838-1	.	GASKET.		4
56	AN742D48	.	CLAMP		1
	NAS603-28P	.	ATTACHING PARTS		
	NAS42DD6-89	.	SCREW		1
	NAS679A3W	.	SPACER.		2
		.	NUT		1
		*			
57	65-58685-1	.	DUCT, STATION 270 TO 300.		1
58	AN737TW46	.	CLAMP		2
	65-69114-1	.	DIFFUSER INSTL, FLIGHT ENGINEER		1
60	AN742D20	.	CLAMP		1
		.	ATTACHING PARTS		
	NAS603-6P	.	SCREW		1
	AN960D10	.	WASHER.		1
	NAS679A3W	.	NUT		1
		*			
61	AN737TW48	.	CLAMP		1
61A	AN737TW48	.	CLAMP		1
63	65-43615-23	.	DUCT.		1
64	66-26038-7	.	RESTRICTOR.		1
65	NAS603-8P	.	SCREW		6
66	AN960D10L	.	WASHER.		12
67	NAS679A3W	.	NUT		6
68	69-45510-1	.	GASKET.		1
69	69-55309-1	.	HEADER.		1
70	63-1374-2	.	DIFFUSER.		1
		.	(OPTIONAL TO 205032 (V03496))		
70	205032	.	DIFFUSER, (V03496).		1
		.	(OPTIONAL 63-1374-2)		
71	69-45894-1	.	BRACKET		1
72	AN737TW91	.	CLAMP		2
73	BACD40D10-12-17	.	DUCT.		1
74	AN742D40	.	CLAMP		1
		.	ATTACHING PARTS		
	NAS603-14P	.	SCREW		1
	NAS42DD6-34	.	SPACER.		1
	NAS679A3W	.	NUT		1
		*			
75	AN737TW74	.	CLAMP		2
76	BACD40D8-12-17	.	DUCT.		1
77	AN737TW56	.	CLAMP		1
78	69-45893-1	.	DUCT, STATION 249 TO 270.		1
78A	BACD40A6-52-5A1	.	DUCT.		1
	65-58436-2	.	SHOULDER WARMER INSTL		1
80J	BACC10BEC150G	.	CLAMP		1
81	69-45253-2	.	BRACKET		1
		.	ATTACHING PARTS		
	AN960D10L	.	WASHER.		2
	NAS679A3W	.	NUT		2
		*			
82	AN742D24	.	CLAMP		1
		.	ATTACHING PARTS		
	NAS603-36P	.	SCREW		1
	NAS43DD3-112	.	SPACER.		1
	NAS679A3W	.	NUT		1
		*			
83	97000-1	.	HEATER ASSY, (V16290)		1
84	65-58436-4	.	MANIFOLD ASSY		1
85	65-60227-4	.	DUCT.		1
86	66-4895-4	.	RESTRICTOR.		1
87	65-58437-2	.	MANIFOLD ASSY		1
		.	ATTACHING PARTS		
	NAS603-24P	.	SCREW		4
	AN960D10L	.	WASHER.		4
	NAS679A3	.	NUT		4
		*			
88	AN742D32	.	CLAMP		1
		.	ATTACHING PARTS		
	NAS603-7P	.	SCREW		1
	NAS679A3W	.	NUT		1
		*			
89	AN742D32	.	CLAMP		1
		.	ATTACHING PARTS		
	NAS603-18P	.	SCREW		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING *707* Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8A	NAS42DD6-48 NAS679A3W	.	SPACER.		1
		.	NUT		1
		-----*			
90	69-51545-1	.	BRACKET, DUCT SUPPORT		1
91A	65-59978-2	.	DUCT, PILOT AND CO-PILOT.		1
91A	65-59978-3	.	DUCT, PILOT AND CO-PILOT.		1
91B	65-59978-3	.	DUCT, PILOT AND CO-PILOT.		1
91B	65-59978-2	.	DUCT, PILOT AND CO-PILOT.		1
91C	AN737TW82	.	CLAMP		2
91D	BACD40D8-25-14 65-58532-1	.	DUCT.		1
		.	DISTRIBUTION INSTL, PILOT AND CO-PILOTS STATION		1
92	NAS603-8P	.	SCREW		12
93	AN960D10L	.	WASHER.		24
94	NAS679A3W	.	NUT		12
96	63-1374-2	.	DIFFUSER.		2
			(OPTIONAL TO 205032 (V03496))		
96	205032	.	DIFFUSER, (V03496).		2
			(OPTIONAL 63-1374-2)		
97	69-45510-1	.	GASKET.		2
98	69-45569-1	.	HEADER.		2
101	69-52050-1	.	BRACKET		2
		.	ATTACHING PARTS		
	NAS603-6P	.	SCREW		4
		-----*			
101A	MS25083-28B5	.	JUMPER ASSY		2
		.	ATTACHING PARTS		
	NAS603-8P	.	SCREW		4
	AN960D10L	.	WASHER.		4
	NAS679A3W	.	NUT		4
		-----*			
101B	AN742D24	.	CLAMP		2
102	97000-2	.	HEATER ASSY, (V16290)		2
103	66-4895-3	.	RESTRICTOR.		1
104	AN737TW74	.	CLAMP		2
105	BACD40D8-25-14	.	DUCT.		1
106	AN742D34	.	CLAMP		1
		.	ATTACHING PARTS		
	NAS608-18P	.	SCREW		1
	NAS42DD6-35	.	SPACER.		1
	NAS679A3W	.	NUT		1
		-----*			
107	AN742D24	.	CLAMP		2
		.	ATTACHING PARTS		
	NAS603-8P	.	SCREW		2
	NAS679A3W	.	NUT		2
		-----*			
108	AN742D24	.	CLAMP		2
		.	ATTACHING PARTS		
	NAS603-20P	.	SCREW		2
	NAS42DD6-45	.	SPACER.		2
	NAS679A3W	.	NUT		2
		-----*			
109	AN737TW56	.	CLAMP		6
110	BACD40D6-12-17	.	DUCT.		3
111	90-10089-1	.	DUCT, PILOTS OUTLET		1
112	69-45885-1	.	DUCT, PILOTS OUTLET		1
113	90-10086-1	.	DUCT, PILOTS OUTLET		1
114	69-45600-1	.	DUCT, PILOTS OUTLET		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

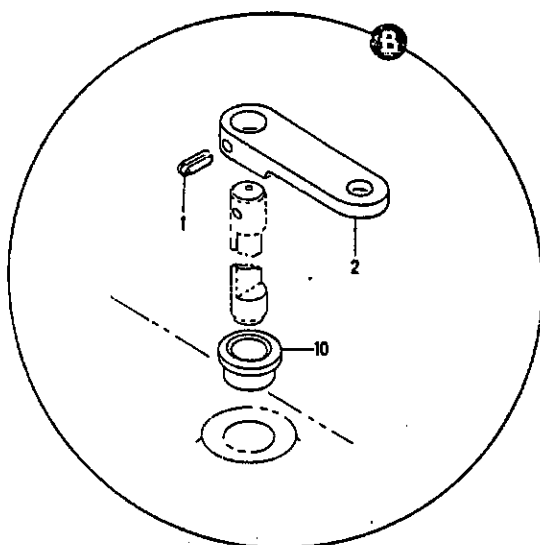
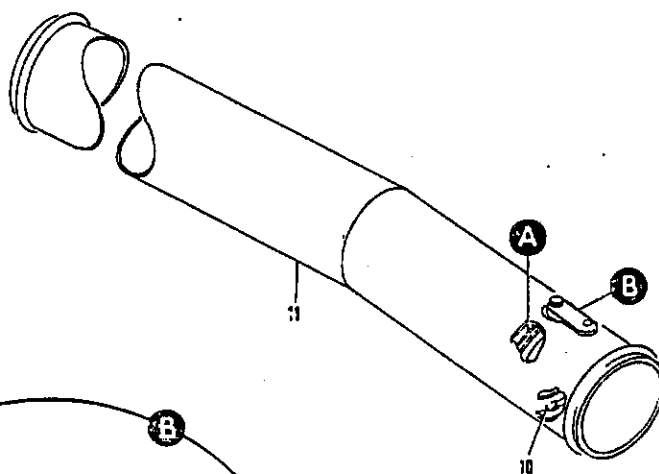
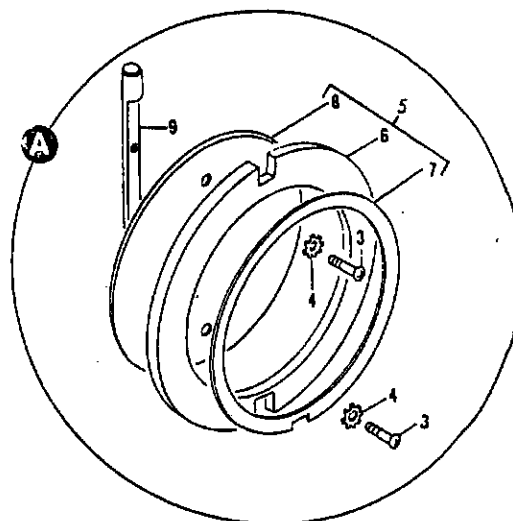
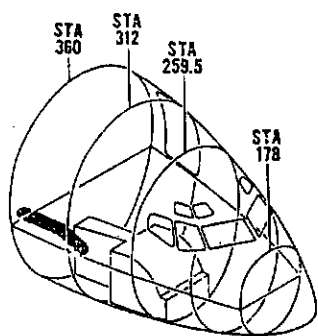


FIGURE 9. DUCT ASSY, STATION 300 TO 360 AIR DISTRIBUTION

BOEING *707*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R	9	69-1013-3	DUCT ASSY, STATION 300 TO 360 AIR DISTRIBUTION (SEE . . . FIG. 8, ITEM 61 AND FIG. 8A, ITEM 8)	5199 RF
		69-1013-4	DUCT ASSY, STATION 300 TO 360 AIR DISTRIBUTION (SEE . . . FIG. 8, ITEM 61 AND FIG. 8A, ITEM 8)	0150 RF
	1	NAS561P4-10	. PIN	1
	2	66-4874	. CRANK, CREW COMPARTMENT AIR SHUTOFF BELL.	1
	3	NAS602-5	. SCREW	2
	4	AN93688	. WASHER.	2
	5	66-4896	. VALVE ASSY, CREW COMPARTMENT AIR SHUTOFF.	1
	6	66-4896-3	. . GASKET, CREW COMPARTMENT AIR SHUTOFF VALVE AIR SEAL	1
	7	66-4896-2	. . RING, CREW COMPARTMENT AIR SHUTOFF VALVE BACK UP. .	1
	8	66-4896-1	. . VALVE, CREW COMPARTMENT AIR SHUTOFF	1
R R R R	9	66-4867-1	. SHAFT, CREW COMPARTMENT AIR SHUTOFF (USED ON. 69-1013-3 AND -4)	1
	10	66-4961	. BUSHING, AIR SHUTOFF FLANGED.	2
	11	69-1013-2	. DUCT, STATION 300 TO 360 AIR CONDITIONING DISTRIBUTION	5199 1
	11	69-1013-5	. DUCT, STATION 300 TO 360 AIR CONDITIONING DISTRIBUTION	0150 1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

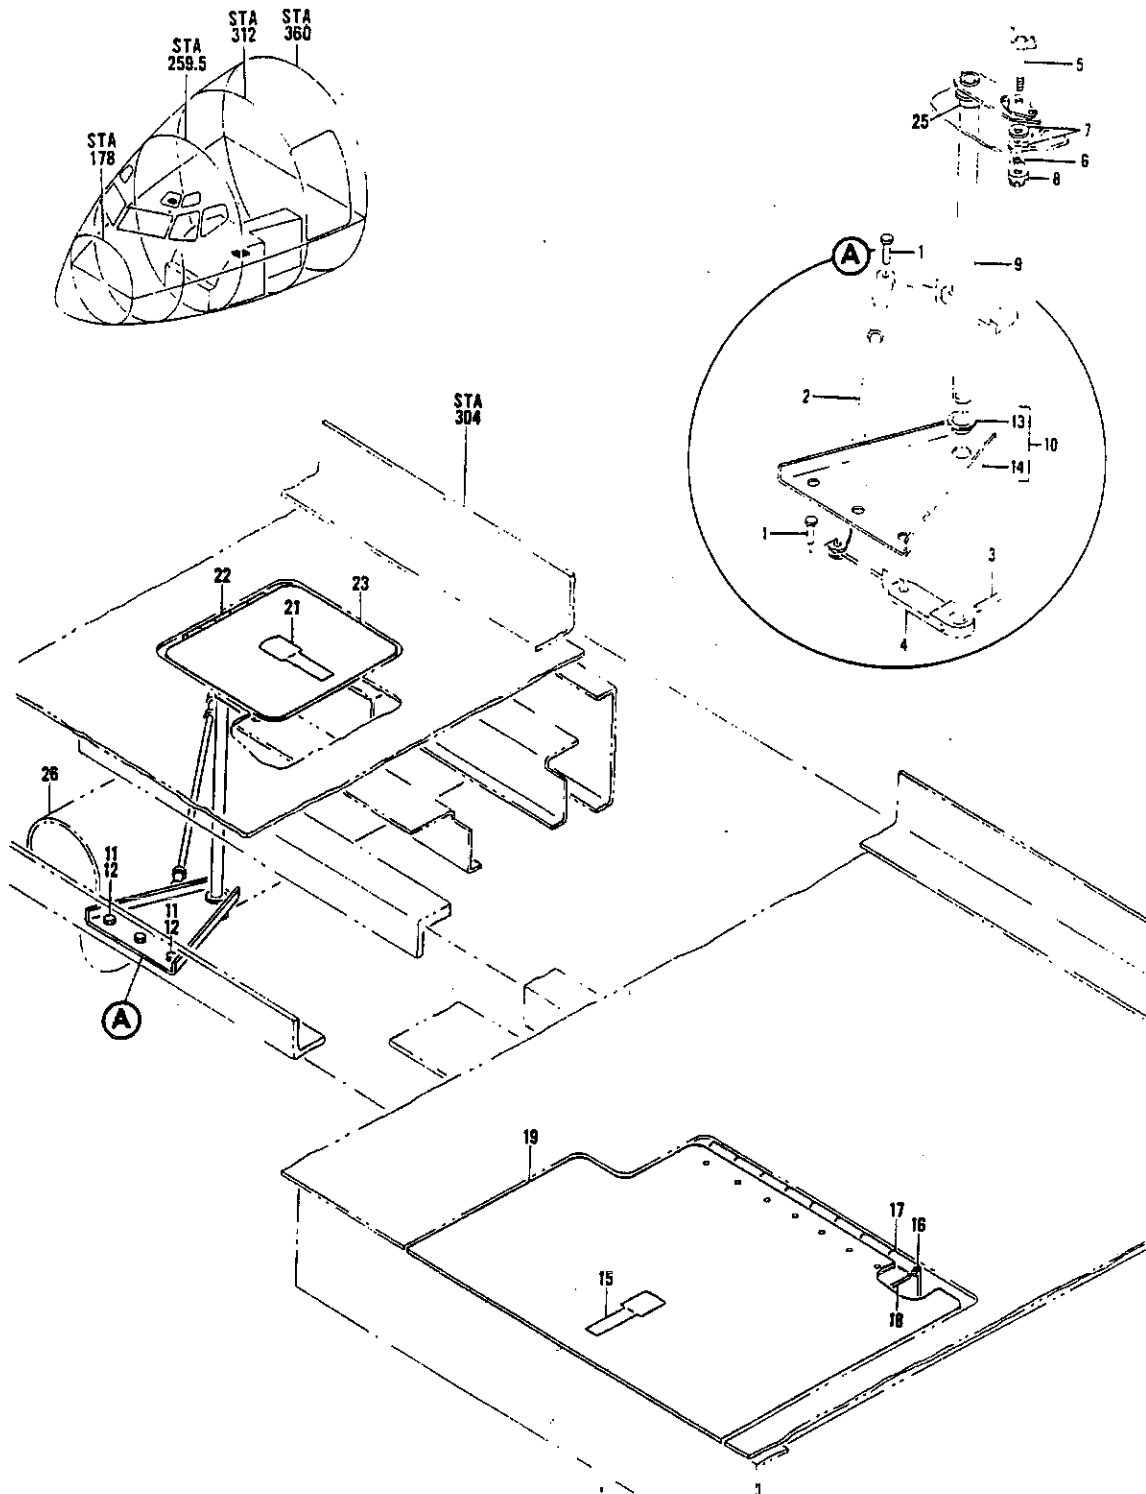


FIGURE 10. SHAFT INSTL, CREW COMPARTMENT MANUAL AIR SHUTOFF
DOOR ASSY, MANUAL TEMPERATURE CONTROL VALVE
DOOR ASSY, MANUAL AIR SHUTOFF (AIR CONDITIONING ONLY)
CHANNEL ASSY, CREW COMPARTMENT FLOOR SUPPORT (AIR CONDITIONING ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
10	65-6877	SHAFT INSTL, CREW COMPARTMENT MANUAL AIR SHUTOFF. . . . DOOR ASSY, MANUAL TEMPERATURE CONTROL VALVE DOOR ASSY, MANUAL AIR SHUTOFF (AIR CONDITIONING ONLY) . CHANNEL ASSY, CREW COMPARTMENT FLOOR SUPPORT (AIR . . . CONDITIONING ONLY) . SHAFT INSTL, CREW COMPARTMENT MANUAL AIR SHUTOFF (SEE FIG. 8, ITEM 1, FIG. 8A, ITEM 1 AND FIG. 8D, ITEM 1)		RF
1	AN393-11	. . . PIN		2
2	65-6877-1	. . . ROD ASSY, CONTROL (ALTERED FROM NAS363-1HH0624) . .		1
3	NAS561P4-10	. . . PIN		1
4	66-4874	. . . CRANK, CREW COMPARTMENT AIR SHUTOFF BELL.		1
5	BACSI2W10-16	. . . SCREW		1
6	AN936B10	. . . WASHER.		1
7	AN960PD10	. . . WASHER.		2
8	AN310-3	. . . NUT		1
9	66-4979	. . . SHAFT ASSY, MANUAL SHUTOFF.		1
10	66-4960	. . . BRACKET ASSY, AIR SHUTOFF SHAFT SUPPORT ATTACHING PARTS		1
11	NAS603-7	. . . SCREW		3
12	NAS679A3W	. . . NUT		3
13	66-4961	. . . BUSHING, AIR SHUTOFF FLANGED.		1
14	66-4960-1 69-14445-1	. . . BRACKET, AIR SHUTOFF SHAFT SUPPORT. DOOR ASSY, MANUAL TEMPERATURE CONTROL VALVE (SEE. . . 53-3, FIG. 2, ITEM 1)		RF
15	BACL10A072-125	. . . LATCH		1
	MS20426D3	ATTACHING PARTS . . . RIVET		4
16	AN253-2-700	. . . PIN		1
17	AN257Y5-700	. . . HINGE		1
18	AN257X5-700	. . . HINGE		1
	MS20470D5	ATTACHING PARTS . . . RIVET		7
19	69-14445-2 66-4963	. . . DOOR, MANUAL TEMPERATURE CONTROL VALVE. DOOR ASSY, MANUAL AIR SHUTOFF (AIR CONDITIONING ONLY) (SEE 53-3, FIG. 2, ITEM 2)		RF
21	BACL10A040-081	. . . LATCH		1
22	AN257-5-249	. . . HINGE		1
23	66-4963-1	. . . DOOR, MANUAL AIR SHUTOFF.		1
	69-5477	. . . FOR REFERENCE TO OTHER DOOR DETAILS, SEE NHA. . . . CHANNEL ASSY, CREW COMPARTMENT FLOOR SUPPORT (AIR . . . CONDITIONING ONLY) (SEE 53-3, FIG. 2, ITEM 3)		RF
25	66-4961	. . . BUSHING, AIR SHUTOFF FLANGED.		1
26		. . . FOR REFERENCE TO OTHER CHANNEL DETAILS, SEE NHA . . . DUCT ASSY, STATION 300 TO 360 AIR DISTRIBUTION (FOR . . . REF SEE FIG. 9)		RF
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

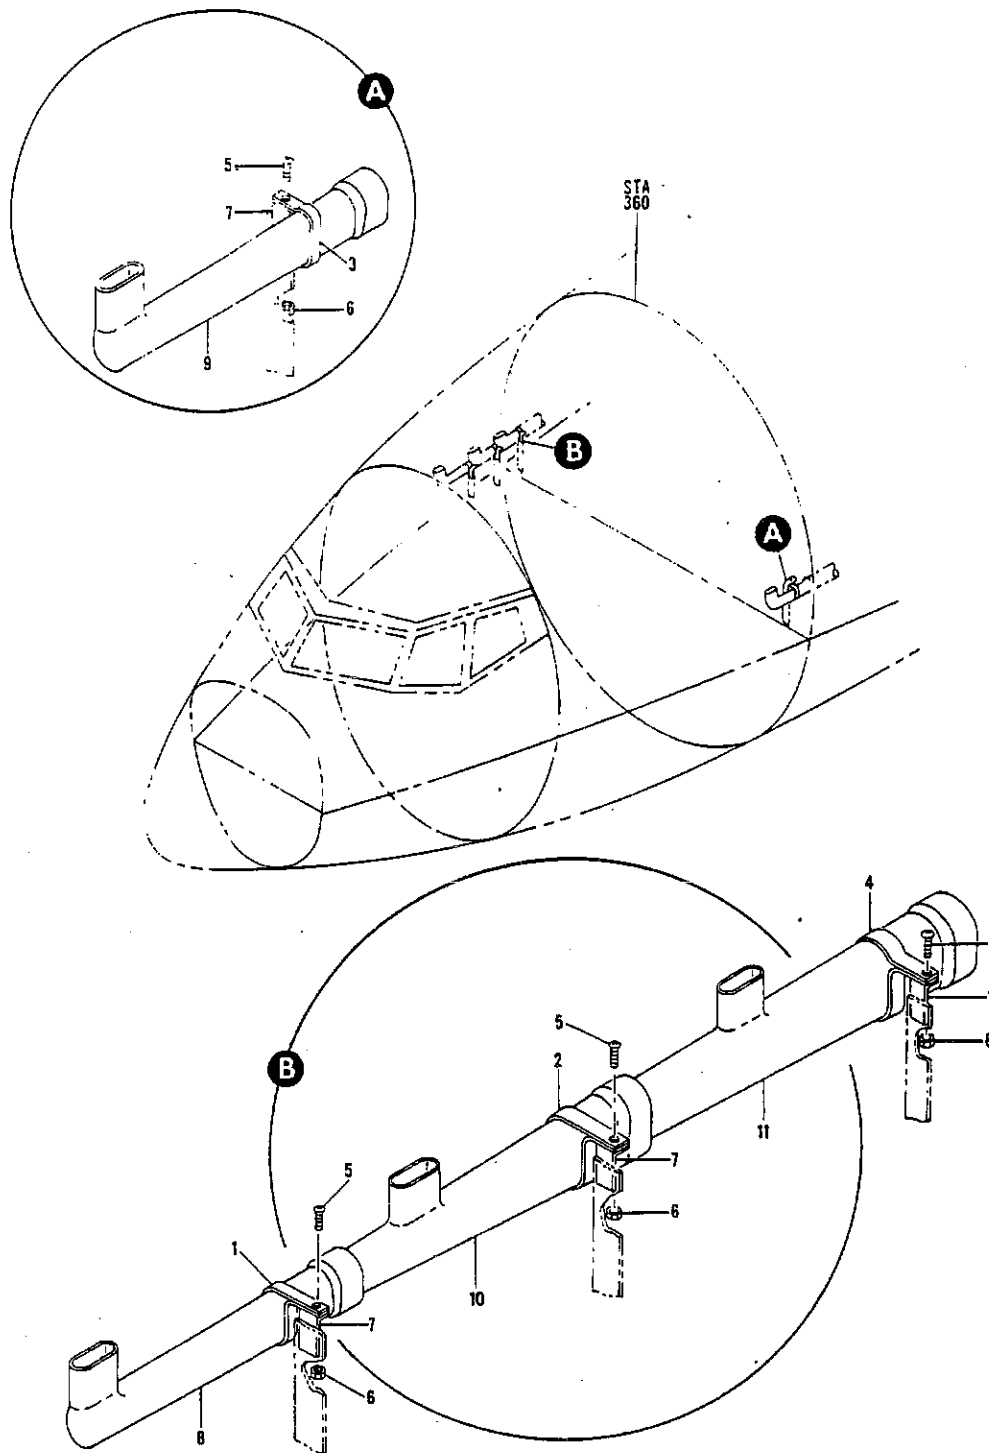


FIGURE 11. DUCT INSTL, SECTION 52 AIR DISTRIBUTION



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
11	65-2123	DUCT INSTL, SECTION 52 AIR DISTRIBUTION (SEE 21-2, FIG. 1, ITEM 3)		RF
1	63-1405	. CLAMP, STATION 328 AIR DISTRIBUTION DUCT.		1
2	63-1404	. CLAMP, STATION 344 AIR DISTRIBUTION DUCT.		1
3	63-1403	. CLAMP, STATION 360 LH AIR DISTRIBUTION DUCT.		1
4	63-1402	. CLAMP, STATION 360 RH AIR DISTRIBUTION DUCT.		1
		ATTACHING PARTS		
5	NAS603-6	. SCREW		4
6	NAS679A3W	. NUT		4
		-----*		
7	63-1401	. SUPPORT, AIR DISTRIBUTION DUCT CLAMP.		4
8	69-1008	. DUCT, AIR CONDITIONING DISTRIBUTION		1
10	65-1361	. DUCT, STATION 332 TO 347 RH AIR CONDITIONING.		1
		DISTRIBUTION		
11	65-1362-1	. DUCT, STATION 347 TO 364 RH AIR CONDITIONING.		1
		DISTRIBUTION		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

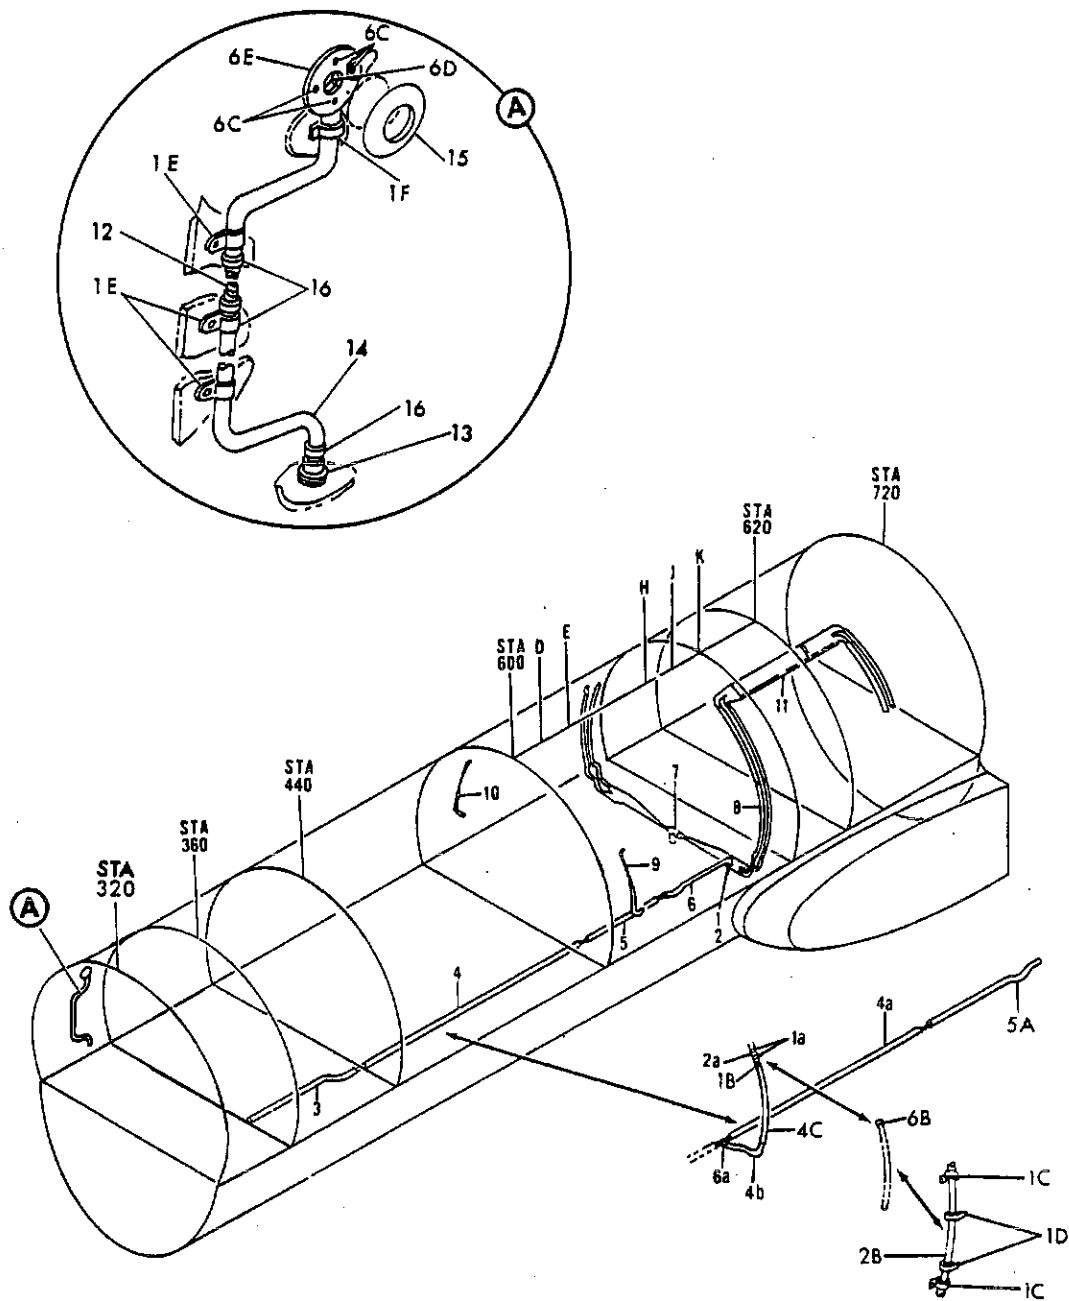


FIGURE 12. OUTLET SYSTEM INSTL, SECTION 54 INDIVIDUAL AIR

DETAILED PARTS LIST
21-04-12
PAGE 0

21-04-12

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	12	65-11935-121	0150	RF
R		OUTLET SYSTEM INSTL, SECTION 54 INDIVIDUAL AIR (SEE 21-2, FIG. 2, ITEM 5)		
R		65-11935-199	5199	RF
R		OUTLET SYSTEM INSTL, SECTION 54 INDIVIDUAL AIR (SEE 21-2, FIG. 2, ITEM 5)		
R	1	AN737TW58		2
R	1A	AN737TW58	0150	2
R	2	BACD40D6-13-14		1
R	2A	BACD40D6-13-14		1
R	3	65-11935-13		1
R		. CLAMP		
R		. CLAMP		
R		. DUCT, AIR SEMI-FLEXIBLE SLEEVE.		
R		. DUCT, AIR SEMI-FLEXIBLE SLEEVE.		
R		. TUBE ASSY, INDIVIDUAL AIR OUTLET SYSTEM (65-1183-14 ALTERED)		
R	4	65-11935-19	5199	1
R		. TUBE ASSY, INDIVIDUAL AIR OUTLET SYSTEM (65-1183-64 ALTERED)		
R	4A	65-11935-130	0150	1
R	4A	65-11935-127	5199	1
R	4B	65-11935-113		1
R	4C	65-11935-114		1
R	5	65-11935-18	5199	1
R		. TUBE ASSY, INDIVIDUAL AIR OUTLET SYSTEM (65-1183-63 ALTERED)		
R	5A	65-11935-187		1
R	6	65-11935-21		1
R		. TUBE ASSY, INDIVIDUAL AIR OUTLET SYSTEM (65-1183-102 ALTERED)		
R	6A	66-18557-1		1
R	7	65-18986-1		1
R		. DUCT ASSY, TEE 1-1/2 .035 5052-0.		
R		. DUCT INSTL, INDIVIDUAL AIR OUTLET CROSSOVER (SEE FIG. 17)		
R	8	65-5948	0150	1
R		. DUCT INSTL, STATION 600J INDIVIDUAL AIR OUTLET (SEE FIG. 13 AND 14)		
R	8	65-5948-1	5199	1
R		. DUCT INSTL, STATION 600J (SEE FIG. 13 AND 14)		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

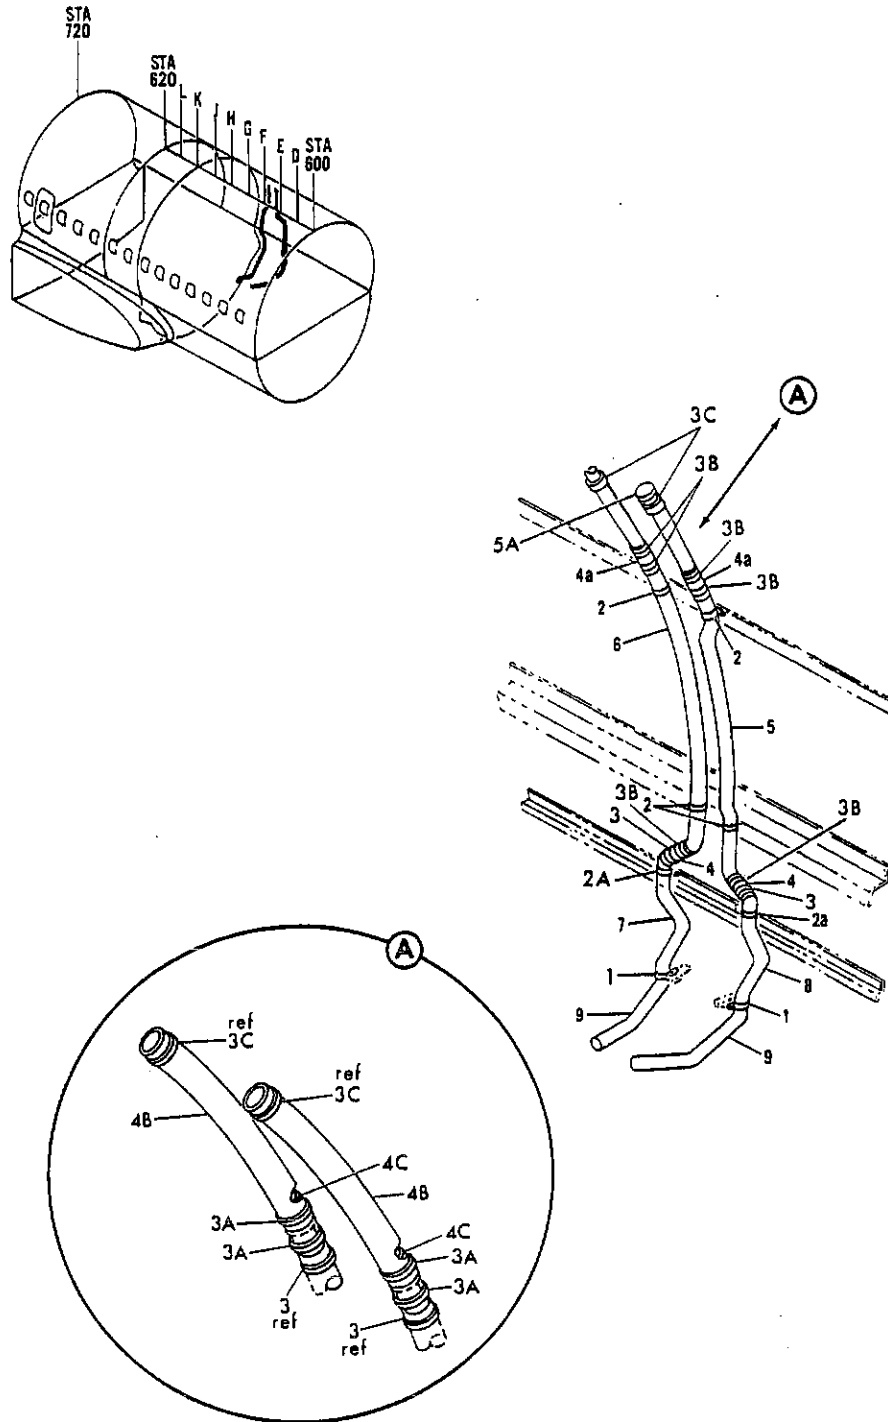


FIGURE 13. DUCT INSTL, STATION 600J INDIVIDUAL AIR DUCT OUTLET LH

DETAILED PARTS LIST
21-04-13
PAGE 0

21-04-13

NOV 21/90

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R	13	65-5948	DUCT INSTL, STATION 600J INDIVIDUAL AIR OUTLET LH . . . (FOR ADDITIONAL DETAILS SEE FIG. 14) (SEE FIG. 12, ITEM 8)							0150	RF
		65-5948-1	DUCT INSTL, STATION 600J INDIVIDUAL AIR OUTLET LH (FOR ADDITIONAL DETAILS SEE FIG. 14) (SEE FIG. 12, ITEM 8)							5199	RF
	1	AN742D32	. CLAMP, (OPTIONAL AN742D34).								2
		NAS603-16	. ATTACHING PARTS								2
		NAS43DD3-33	. SCREW								2
		NAS679A3W	. SPACER.								2
			. NUT								2
			-----*								
	2	AN742D32	. CLAMP, (OPTIONAL AN742D34).								4
		NAS603-8	. ATTACHING PARTS								4
		NAS43DD3-12	. SCREW, (OPTIONAL NAS603-11)								4
		NAS679A3W	. SPACER, (OPTIONAL).								4
			. NUT								4
R R R R R R R R R			-----*								
	2A	AN742D32	. CLAMP, (OPTIONAL AN742D34).								2
		NAS603-8	. ATTACHING PARTS								2
		NAS679A3W	. SCREW, (OPTIONAL NAS603-12 WITH NAS43DD3-16).								2
			. NUT								2
			-----*								
	3	AN737TW74	. CLAMP								2
	3B	AN737TW74	. CLAMP							0150	6
	3C	AN737TW74	. CLAMP							5199	2
	4	BACD40D8-12-4	. DUCT.							0150	2
	4A	BACD40D8-18-4	. DUCT.								2
	5	65-6091-1	. DUCT, STATION 600J INDIVIDUAL AIR OUTLET.							0150	1
	5	BACD40A8-260-4A4	. DUCT.							5199	1
6	65-6092-1	. DUCT, STATION 600J INDIVIDUAL AIR OUTLET.							0150	1	
6	BACD40A8-260-4A4	. DUCT.							5199	1	
7	69-4395-1	. DUCT, STATION 600J INDIVIDUAL AIR OUTLET.								1	
8	69-4395-2	. DUCT, STATION 600J INDIVIDUAL AIR OUTLET.								1	
9	69-10946	. DUCT ASSY, INDIVIDUAL AIR OUTLET.								2	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

MISSING ITEM NUMBERS ARE NOT APPLICABLE



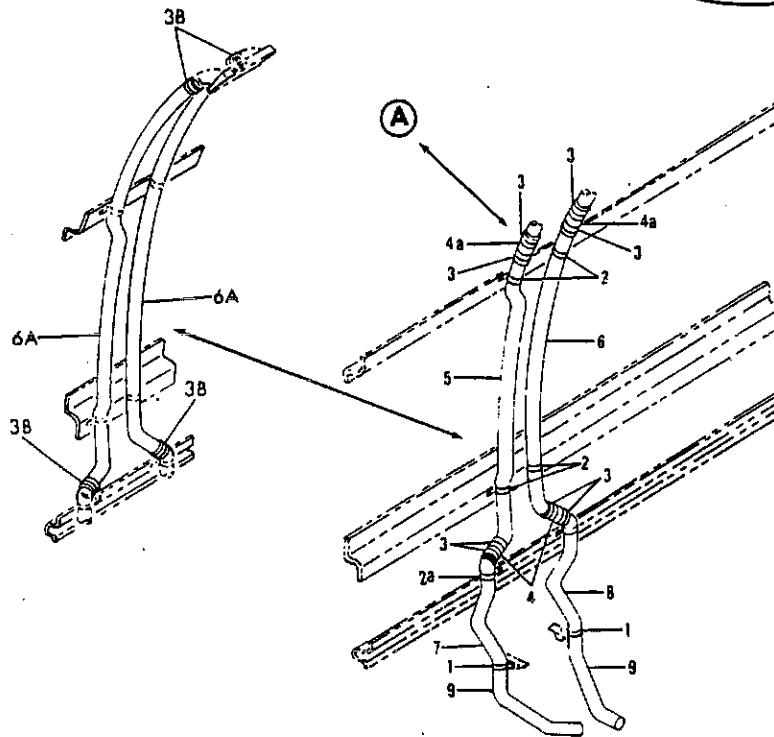


FIGURE 14. DUCT INSTL, STATION 600J INDIVIDUAL AIR OUTLET

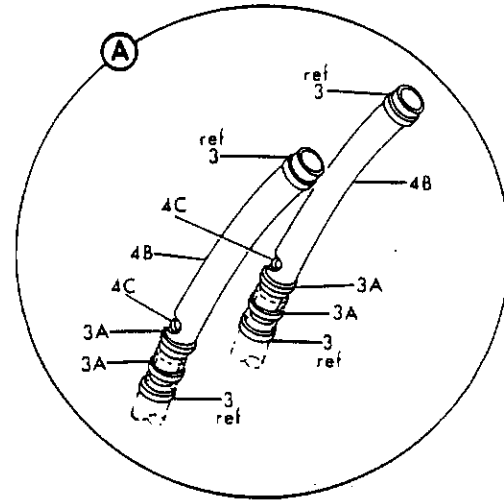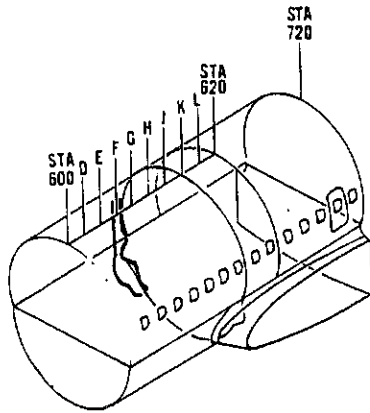

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
R R R R R R R R R R	14	65-5948	0150	RF
		DUCT INSTL, STATION 600J INDIVIDUAL AIR OUTLET RH . . . (FOR ADDITIONAL DETAILS SEE FIG. 13) (SEE FIG. 12, ITEM 8)		
		65-5948-1	5199	RF
		DUCT INSTL, STATION 600J INDIVIDUAL AIR OUTLET RH . . . (FOR ADDITIONAL DETAILS SEE FIG. 13) (SEE FIG. 12, ITEM 8)		
	1	AN742D32		2
		CLAMP, (OPTIONAL AN742D34).		
		ATTACHING PARTS		
		NAS603-16		2
		SCREW		
		NAS43DD3-33		2
		SPACER.		
		NAS679A3W		2
		NUT		
	2	AN742D32		4
		CLAMP, (OPTIONAL AN742D34).		
		ATTACHING PARTS		
		NAS603-8		4
		SCREW, (OPTIONAL NAS603-11)		
		NAS43DD3-12		4
		SPACER, (OPTIONAL).		
		NAS679A3W		4
		NUT		
	2A	AN742D32		2
		CLAMP, (OPTIONAL AN742D34).		
		ATTACHING PARTS		
		NAS603-8		2
		SCREW, (OPTIONAL NAS603-12 WITH NAS43DD3-16).		
		NUT		4
	3	AN737TW74	0150	8
	3B	AN737TW74	5199	4
	4	BACD40D8-12-4	0150	2
	4A	BACD40D8-18-4		2
	5	65-6091-2		1
	6	65-6092-2	0150	1
	6A	BACD40A8-260-4A4	0150	2
	7	69-4395-1	5199	1
	8	69-4395-2		1
	9	69-10946		2
		DUCT, STATION 600J INDIVIDUAL AIR OUTLET.		
		DUCT, STATION 600J INDIVIDUAL AIR OUTLET.		
		DUCT.		
		DUCT.		
		DUCT, STATION 600J INDIVIDUAL AIR OUTLET.		
		DUCT, STATION 600J INDIVIDUAL AIR OUTLET.		
		DUCT, STATION 600J INDIVIDUAL AIR OUTLET.		
		DUCT ASSY, INDIVIDUAL AIR OUTLET.		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

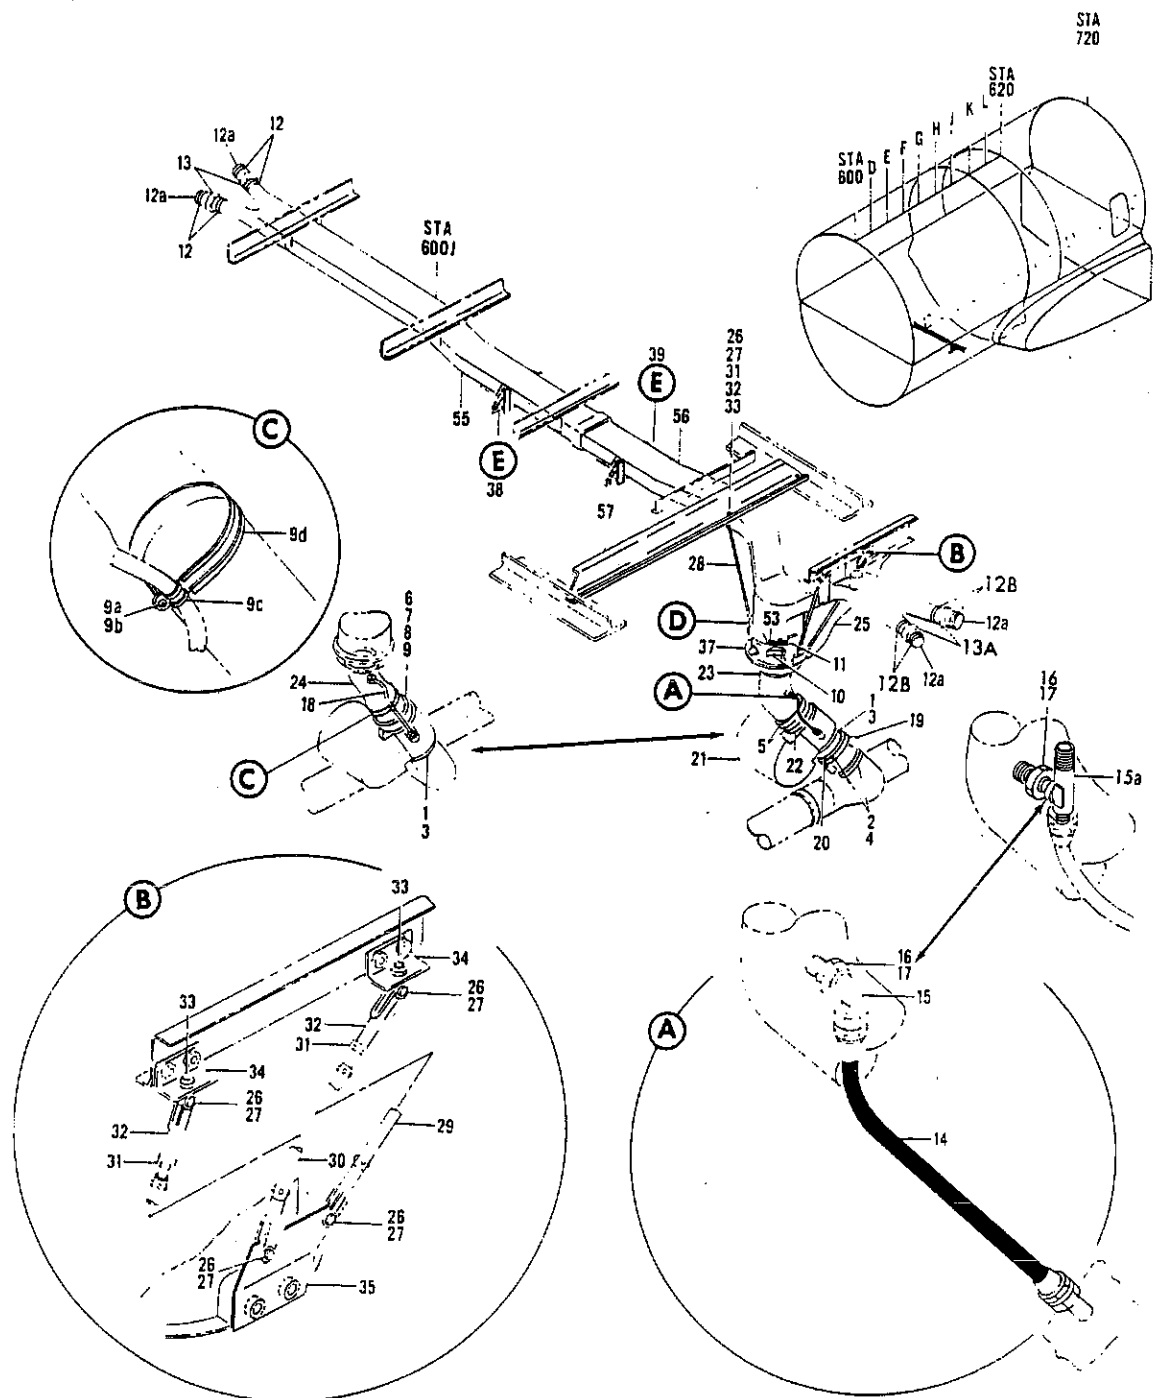


FIGURE 17, DUCT INSTL, INDIVIDUAL AIR OUTLET CROSSOVER (SHEET 1)

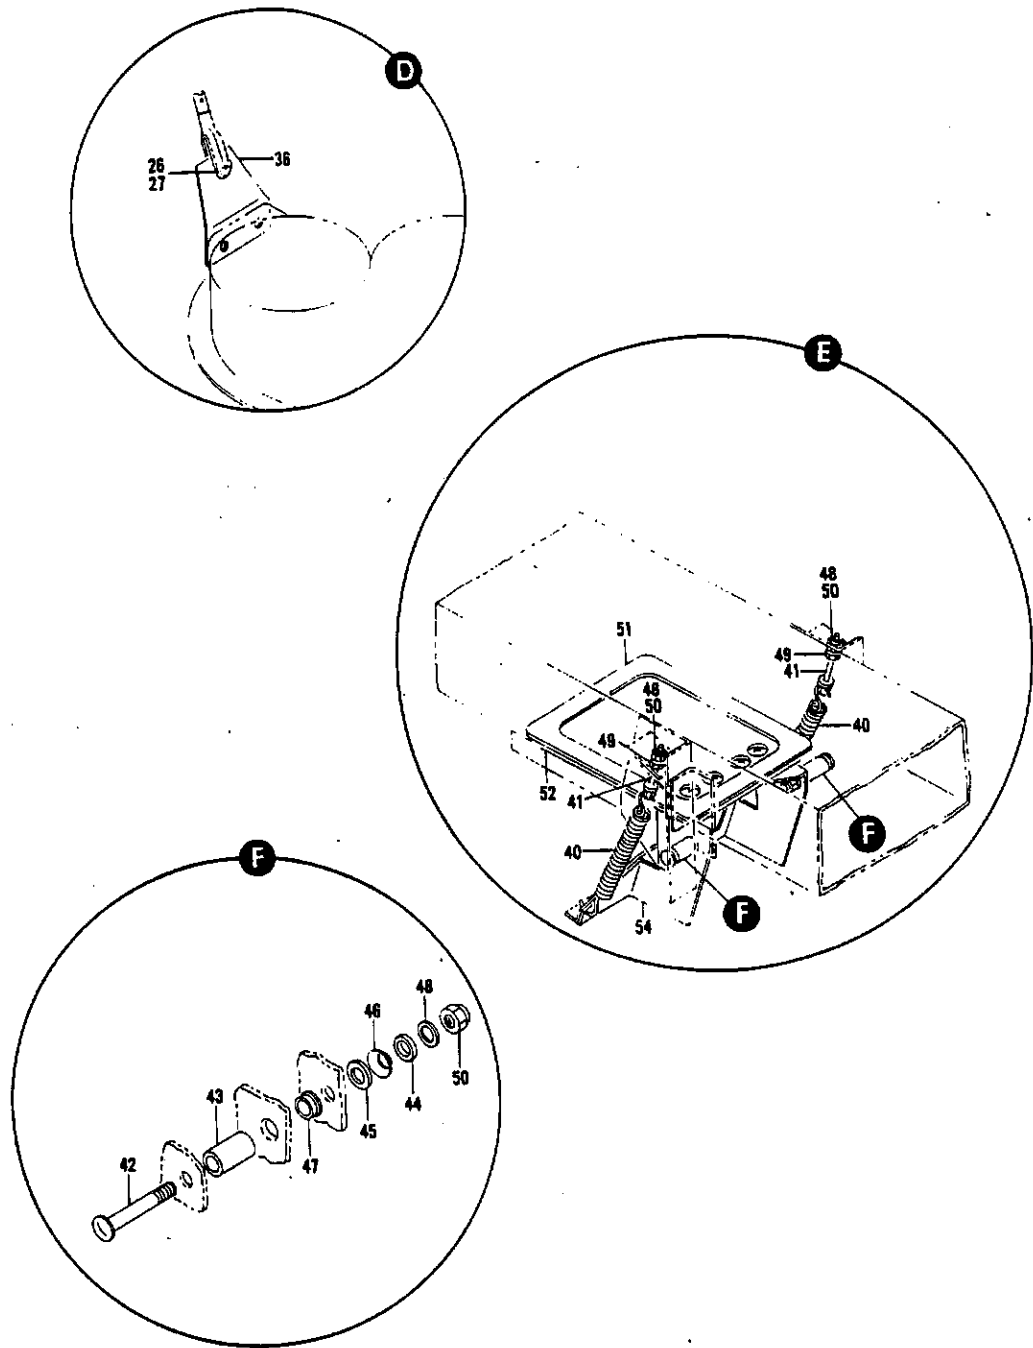


FIGURE 17. DUCT INSTL, INDIVIDUAL AIR OUTLET CROSSOVER (SHEET 2)

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
17	65-18986-1	DUCT INSTL, INDIVIDUAL AIR OUTLET CROSSOVER (SEE FIG. 12, ITEM 7)		RF
1	BACC10AU400	CLAMP		1
3	BACG10R406	GASKET		1
5	BACC10BN412LR	CLAMP		2
10	D29C43	CLAMP, (V89513)		1
11	J38C37	CLAMP, (V89513)		1
12	AN737TW74	CLAMP		4
12B	AN737TW74	CLAMP		4
13	BACD40DB-12-4	DUCT		2
13A	BACD40DB-12-4	DUCT		2
14	BACH30J060114	HOSE ASSY		1
15A	ERB34-060406	REDUCER, BULKHEAD TEE (V92003)		1
16	AN924-6D	NUT		1
17	MS2877B-6	PACKING		1
21	10-3369-1	REGULATOR, PRESSURE		1
22	10-3274-21	SEAL, FLEXIBLE PRESSURE		1
23	65-18972-8	DUCT ASSY		1
25	MS25083-28B19	JUMPER ASSY		1
		ATTACHING PARTS		
	NAS603-8	SCREW		1
	NAS603-12	SCREW		1
	AN960D10L	WASHER		2
	BACW10P1B3AL	WASHER		4
	NAS679A3W	NUT		2
26	MS20392-2-11	PIN		6
27	AN960D10L	WASHER		6
28	NAS356-64-1380	ROD ASSY		1
29	NAS356-64-1290	ROD ASSY		1
30	NAS356-64-1200	ROD ASSY		1
31	AN316-4	NUT		3
32	AN486-4	CLEVIS		3
33	AN42B3A	BOLT		3
		ATTACHING PARTS		
	NAS679A3W	NUT		3
	AN960D10L	WASHER		3
34	69-15289-5	ANGLE, INDIVIDUAL AIR OUTLET SYSTEM SUPPORT		2
		ATTACHING PARTS		
	NAS1103-2W	BOLT		4
	AN960D10	WASHER		4
	NAS679A3W	NUT		4
35	69-15289-2	SUPPORT, INDIVIDUAL AIR OUTLET SYSTEM FAN		1
36	69-15289-1	SUPPORT, INDIVIDUAL AIR OUTLET SYSTEM FAN		1
		ATTACHING PARTS		
	NAS563-11	BOLT		4
	AN960D10	WASHER		4
37	10-60483-1	FAN, INDIVIDUAL COOL AIR SYSTEM AUGMENTING		1
38	65-18980-10	DUCT ASSY		1
39	65-19414-12	DUCT ASSY, DIVIDER		1
		ATTACHING PARTS		
	NAS1103-2W	BOLT		10
	AN960D10	WASHER		10
	NAS679A3W	NUT		10
40	66-4708	SPRING, CABIN DUCT RELIEF VALVE CONTROL		2
41	66-4747	BOLT, CABIN DUCT CONTROL SPRING ADJUSTMENT		2
42	AN23-19A	BOLT		2
43	NAS42DD6-34	SPACER		2
44	AN960D10	WASHER		2
45	AN960C516L	WASHER		2
46	3502-18-00	WASHER, (V78189)		2
47	NAS77-3-19	BUSHING		2
48	AN960D10L	WASHER		4
49	NAS671-10	NUT		2
50	NAS679A3W	NUT		4
51	66-4768	GASKET, INDIVIDUAL AIR OUTLET RELIEF VALVE		1
52	66-9415	COVER, INDIVIDUAL AIR OUTLET RELIEF VALVE		1
		ATTACHING PARTS		
	NAS221-7	SCREW		4
	AN960D10L	WASHER		4
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
17	NAS679A3W	.	.	NUT	.	.	.	.		4
53	BACF22AC600	.	.	FLANGE, (USED ON 65-19414-1).	.	.	.	.		1
54	69-5486-16	.	.	BRACKET ASSY, INDIVIDUAL AIR OUTLET RELIEF VALVE.	.	.	.	.		1
55	65-18980-11	.	.	HINGE	.	.	.	.		1
56	65-19414-13	.	.	DUCT, (USED ON 65-18980-10)	.	.	.	.		1
		.	.	DUCT, (USED ON 65-19414-12)	.	.	.	.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

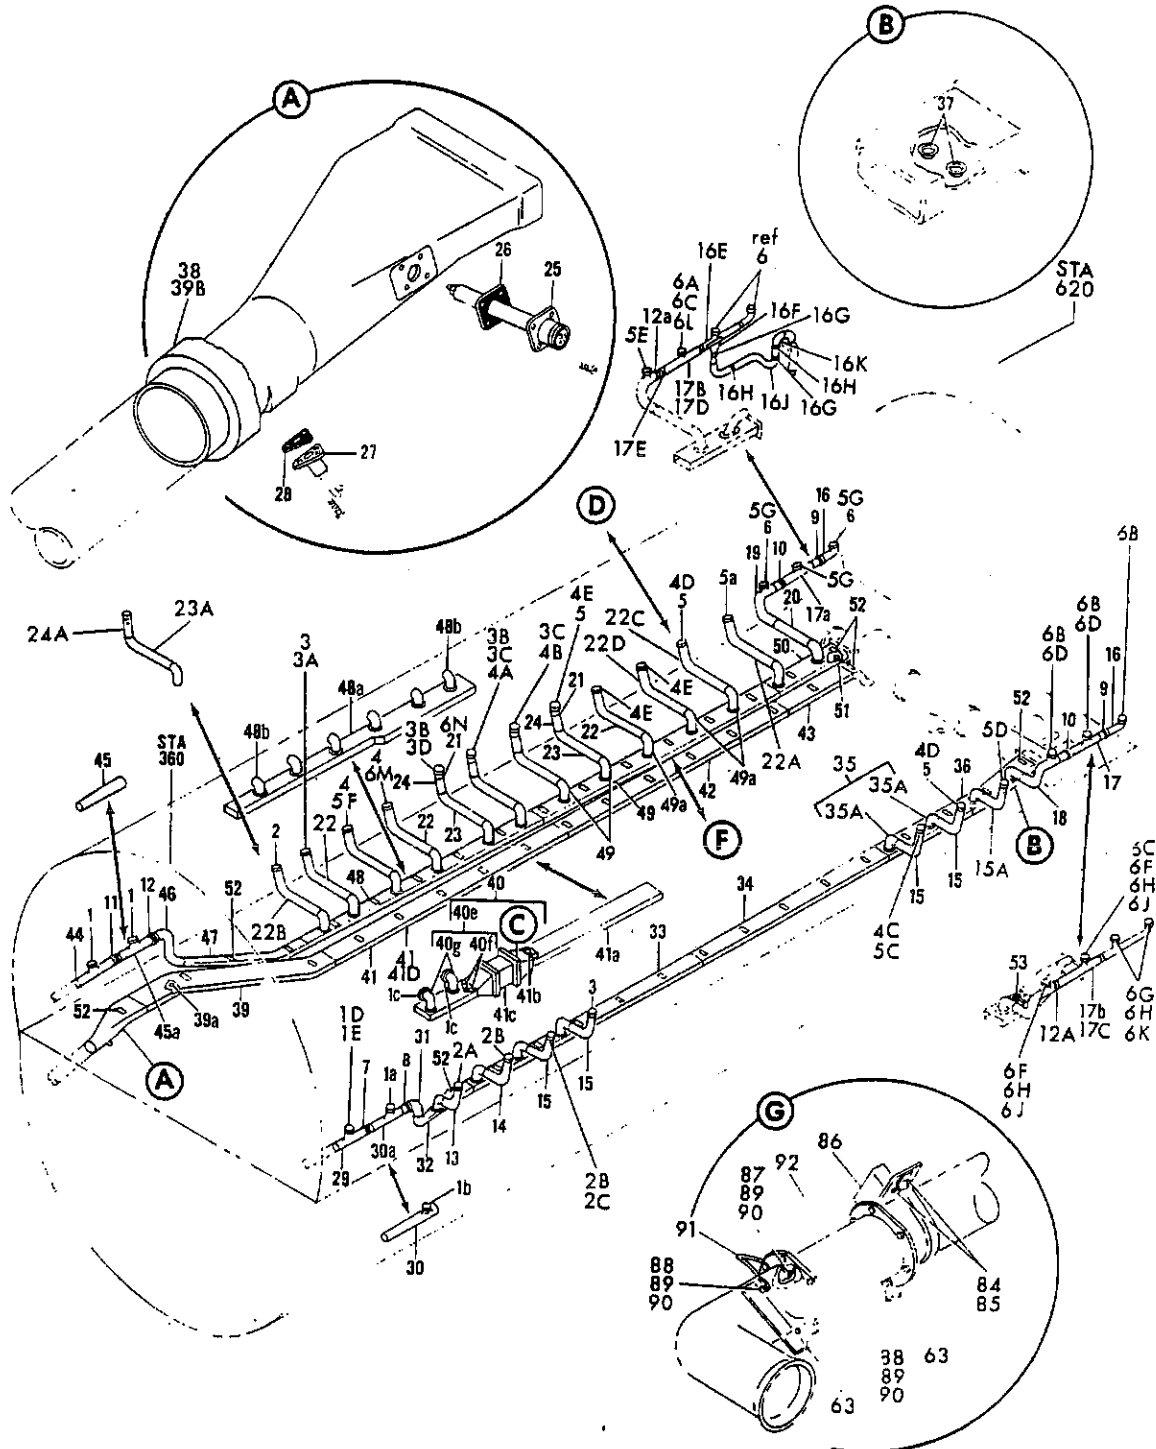


FIGURE 22 DUCT INSTL, STATION 360 TO 600J AIR CONDITIONING (SHEET 1)

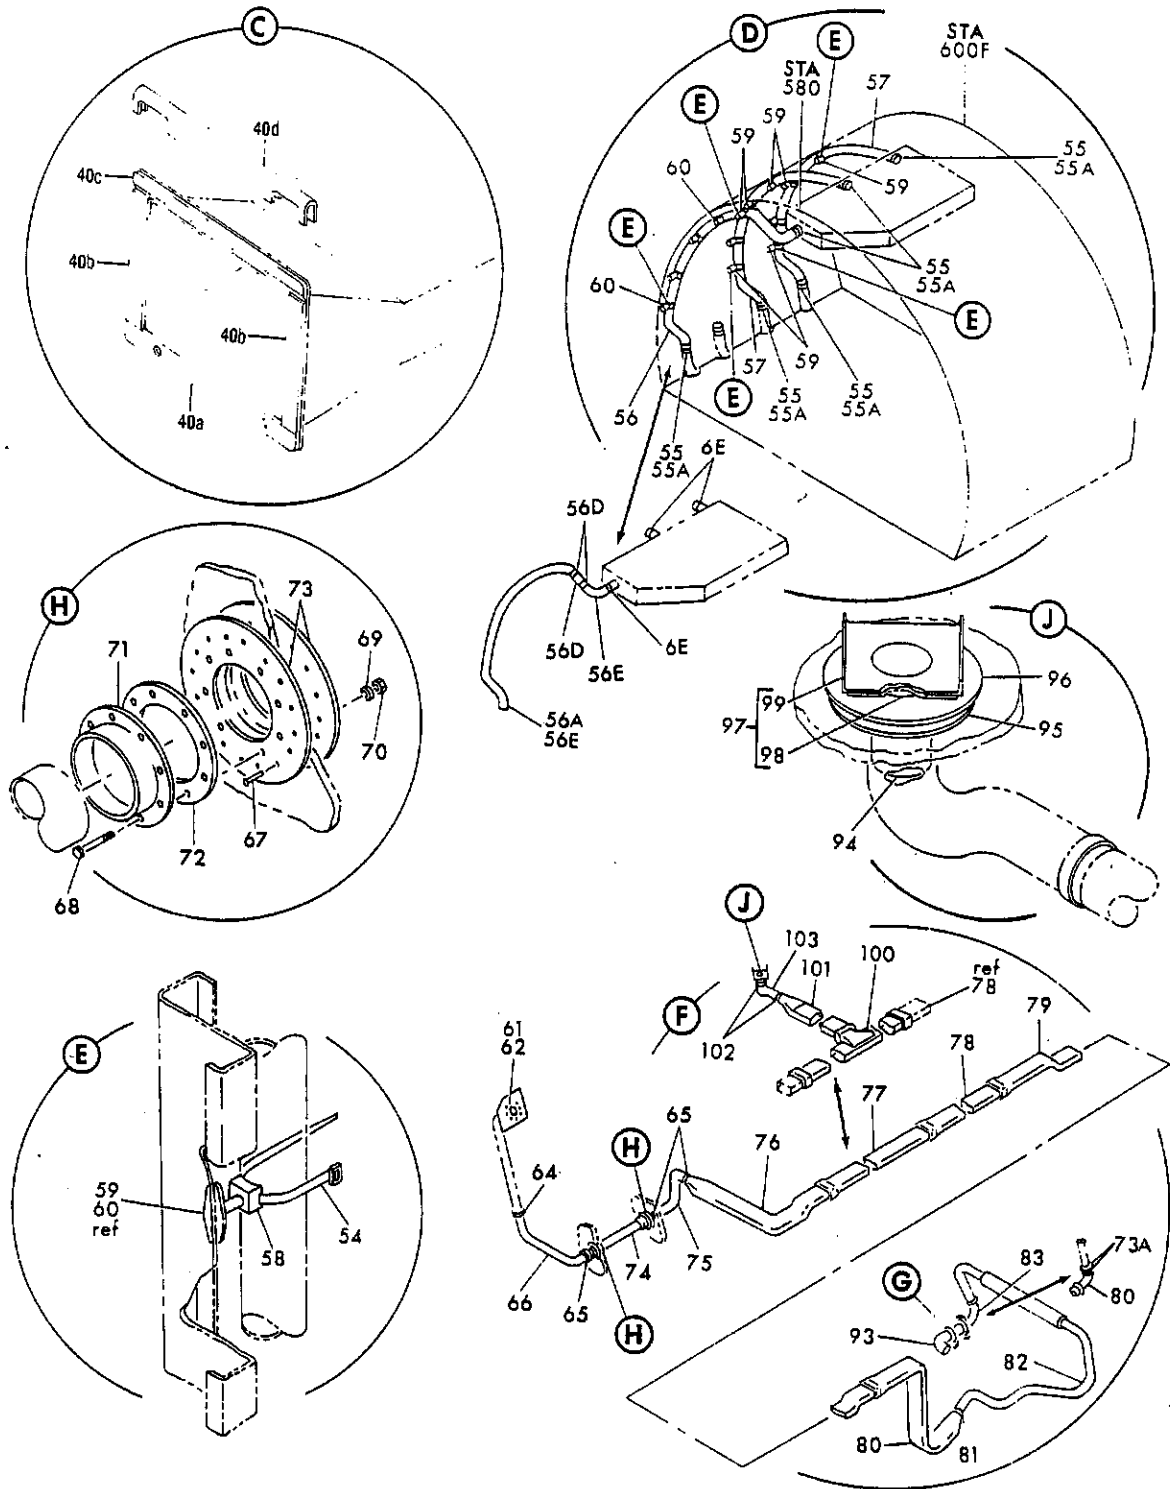


FIGURE 22. DUCT INSTL, STATION 360 TO 600J AIR CONDITIONING (SHEET 2)

NOV 21/90

21-04-22

DETAILED PARTS LIST
21-04-22
PAGE 1

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
22	65-2159-16	DUCT INSTL, STATION 360 TO 600J AIR CONDITIONING (SEE . 21-2, FIG. 2, ITEM 12)		RF
R	1 66-4918-1	. RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM OVAL TYPE		2
R	1B 66-4895-12	. RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM 1.50 IN. DIAMETER DUCT	5199	1
R	1B 66-4895-9	. RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM 1.50 IN. DIAMETER DUCT	0150	1
	1D 66-4918-1	. RESTRICTOR, DISTRIBUTION SYSTEM 1.50 IN. DIAMETER . . DUCT		1
	2 66-4895-1	. RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM 1.50 IN. DIAMETER DUCT		1
	2A 66-4895-1	. RESTRICTOR, DISTRIBUTION SYSTEM 1.50 IN. DIAMETER . . DUCT		1
	2B 66-4895-1	. RESTRICTOR, DISTRIBUTION SYSTEM 1.50 IN. DIAMETER . . DUCT		2
	3 66-4895-2	. RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM 1.50 IN. DIAMETER DUCT		2
	3B 66-4895-3	. RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM 1.50 IN. DIAMETER DUCT		1
	4 66-4895-3	. RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM 1.50 IN. DIAMETER DUCT		1
	4 66-4895-3	. RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM 1.50 IN. DIAMETER DUCT		1
	5 66-4895-4	. RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM 1.50 IN. DIAMETER DUCT		4
	5C 66-4895-4	. RESTRICTOR, DISTRIBUTION SYSTEM 1.50 IN. DIAMETER . . DUCT		1
	5D 65-4895-4	. RESTRICTOR, DISTRIBUTION SYSTEM 1.50 IN. DIAMETER . .		1
	6 66-4918-2	. RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM OVAL TYPE		2
	6 66-4918-2	. RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM OVAL		1
	6A 66-4918-2	. RESTRICTOR, DISTRIBUTION SYSTEM OVAL TYPE		1
	6B 66-4918-2	. RESTRICTOR, DISTRIBUTION SYSTEM OVAL TYPE		3
	6C 66-4918-2	. RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM OVAL TYPE		1
	6D 66-4918-2	. RESTRICTOR, DISTRIBUTION SYSTEM OVAL TYPE		1
	6D 66-4918-2	. RESTRICTOR, DISTRIBUTION SYSTEM OVAL TYPE		1
	7 69-1017-2	. CLAMP, SECTION 54 AIR DISTRIBUTION DUCT		1
	8 69-1017-3	. CLAMP, SECTION 54 AIR DISTRIBUTION DUCT		1
	9 69-1017-4	. CLAMP, SECTION 54 AIR DISTRIBUTION DUCT		2
	10 69-1017-5	. CLAMP, SECTION 54 AIR DISTRIBUTION DUCT		2
	11 69-1017	. CLAMP, SECTION 54 AIR DISTRIBUTION DUCT		1
	12 69-1017-1	. CLAMP, SECTION 54 AIR DISTRIBUTION DUCT		1
	NAS603-6	ATTACHING PARTS		
	NAS679A3W	. SCREW		8
		. NUT		8
	12A 69-1017-6	. CLAMP, SECTION 54 AIR DISTRIBUTION.		2
	NAS603-6	ATTACHING PARTS		
	BACN10BY53W	. SCREW		2
		. NUT		2
	13 69-1015-3	. RISER, AIR CONDITIONING DISTRIBUTION.		1
	14 69-1015-1	. RISER, AIR CONDITIONING DISTRIBUTION.		1
	15 69-1015-13	. RISER, AIR CONDITIONING DISTRIBUTION.		4
	16 69-1008	. DUCT, AIR CONDITIONING DISTRIBUTION		2
	17 65-1360	. DUCT, STATION 600G PLUS 16.00 TO 600H PLUS 18.00 AIR CONDITIONING DISTRIBUTION		1
	17A 65-1360	. DUCT, STATION 600G PLUS 16.00 TO 600H PLUS 18.00 AIR CONDITIONING DISTRIBUTION		1
	17B 69-43165-1	. DUCT, STATION 600G PLUS 16.00 TO 600H PLUS 18.00. . . DISTRIBUTION		2
	18 65-1358	. DUCT, STATION 600G PLUS 10 TO 600G PLUS 17 AIR. . . . CONDITIONING DISTRIBUTION (LH)		1
	19 65-1359-1	. DUCT, STATION 600G PLUS 10 TO 600G PLUS 17 AIR. . . . CONDITIONING DISTRIBUTION (RH)		1
	20 66-15088	. DUCT, STATION 600G PLUS 10 AIR CONDITIONING DISTRIBUTION (RH)		1
	21 65-2159-12	. GROMMET, STATION 360 TO 620 AIR CONDITIONING DUCT . . CATERPILLAR (ALTERED FROM BACG20ZA471)		4
	22 69-1015-2	. RISER, AIR CONDITIONING DISTRIBUTION.		4
R	22B 69-1015-2	. RISER, AIR CONDITIONING DISTRIBUTION.	0150	1
	22C 69-1015-2	. RISER, AIR CONDITIONING DISTRIBUTION.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
22	22D	69-1015-2		1
23	69-1015-4	. RISER, AIR CONDITIONING DISTRIBUTION.		4
23A	69-1015-4	. RISER, AIR CONDITIONING DISTRIBUTION.	5199	1
24	69-1015-5	. RISER, AIR CONDITIONING DISTRIBUTION.		4
24A	69-1015-5	. RISER, AIR CONDITIONING DISTRIBUTION.	5199	1
25	10-3063-4	. ELEMENT, DUCT TEMPERATURE SENSING		1
	NAS601-8	ATTACHING PARTS		
		. SCREW		4
26	66-3478-2	. GASKET, TEMPERATURE SENSOR.		1
27	10-60133-3	. SWITCH, THERMAL		1
	NAS603-8	ATTACHING PARTS		
		. SCREW		3
28	66-3478-3	. GASKET, TEMPERATURE SENSOR.		1
29	65-1357-1	. DUCT, STATION 365 TO 383 LH AIR CONDITIONING.		1
30	65-1356-1	. DUCT, STATION 382 TO 398 LH AIR CONDITIONING.		1
31	65-1355	. DUCT, STATION 397 TO 404 LH AIR CONDITIONING.		1
32	65-1354	. DUCT ASSY, STATION 404 TO 427 LH AIR CONDITIONING . .		1
33	65-1352-5	. DUCT ASSY, STATION 426 TO 517 LH AIR CONDITIONING . .		1
34	65-1351-5	. DUCT ASSY, STATION 516 TO 600F PLUS 7.00 LH AIR . . .		1
35	65-1194-3	. DUCT ASSY, STATION 600D PLUS 5.90 TO 600F PLUS 7.10 .		1
35A	69-1007	. . DUCT ASSY, TAKE-OFF (USED ON 65-1194-3)		2
35A	69-36133-1	. . DUCT, TAKE-OFF (USED ON 65-1194-3).		2
36	65-1195-8	. DUCT ASSY, STATION 600F PLUS 5.90 TO 600H PLUS 1.67 .	5199	1
36	65-1195-8	. DUCT ASSY, STATION 600F PLUS 5.90 TO 600H PLUS 1.67 .	0150	1
36	361-89-60-74863-205	. DUCT ASSY, STATION 600G PLUS 5.90 TO 600H PLUS 1.67 .	0150	1
37	66-4903-3	. . RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM. .		2
38	65-2915-4	. DUCT ASSY, STATION 360.74 TO 384.1 AIR DISTRIBUTION .		1
39	65-2914-10	. DUCT ASSY, STATION 382.9 TO 447.1 AIR CONDITIONING. .		1
39A	66-4903-3	. . RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM. .		1
41	65-2913-7	. DUCT ASSY, STATION 445.9 TO 557.1 AIR CONDITIONING. .		1
42	65-6527-2	. VALVE ASSY, CONTROL CABIN DUCT RELIEF (SEE FIG. 23) .		1
43	65-1193-2	. DUCT ASSY, STATION 600F - 1.26 TO 600G PLUS 14.96 AIR		1
44	65-1363	. DUCT, STATION 363 TO 384 RH AIR CONDITIONING.		1
45	65-1364-1	. DUCT, STATION 383 TO 406 RH AIR CONDITIONING.		1
46	65-1365	. DUCT, STATION 400 TO 410 RH AIR CONDITIONING.		1
47	65-1366	. DUCT ASSY, STATION 410 TO 446 AIR CONDITIONING. . . .		1
48	65-1367-4	. DUCT ASSY, STATION 446 TO 557 AIR CONDITIONING. . . .		1
49	65-1192	. DUCT ASSY, STATION 556 TO 600F PLUS 8.12 RH AIR . . .		1
49A	69-1007	. . DUCT ASSY, AIR CONDITIONING DISTRIBUTION 1-1/2 IN.		5
50	65-1191-8	. DUCT ASSY, STATION 600F PLUS 6.92 TO 600 PLUS 1.67. .		1
	NAS603-11	ATTACHING PARTS		
	AN960D10L	. SCREW		50
		. WASHER.		50

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
22	AN960PD10 NAS679A3W	.	WASHER.		14
		.	NUT		16
51	66-4903-3	.	-----*		
		.	RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM. .		1
52	66-2668	.	1.00 IN. DIA DUCT		
53	975-0090-001	.	STRIP, AIR CONDITIONING DISTRIBUTION DUCT RUB		46
		.	SWITCH, THERMAL (V97896).		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

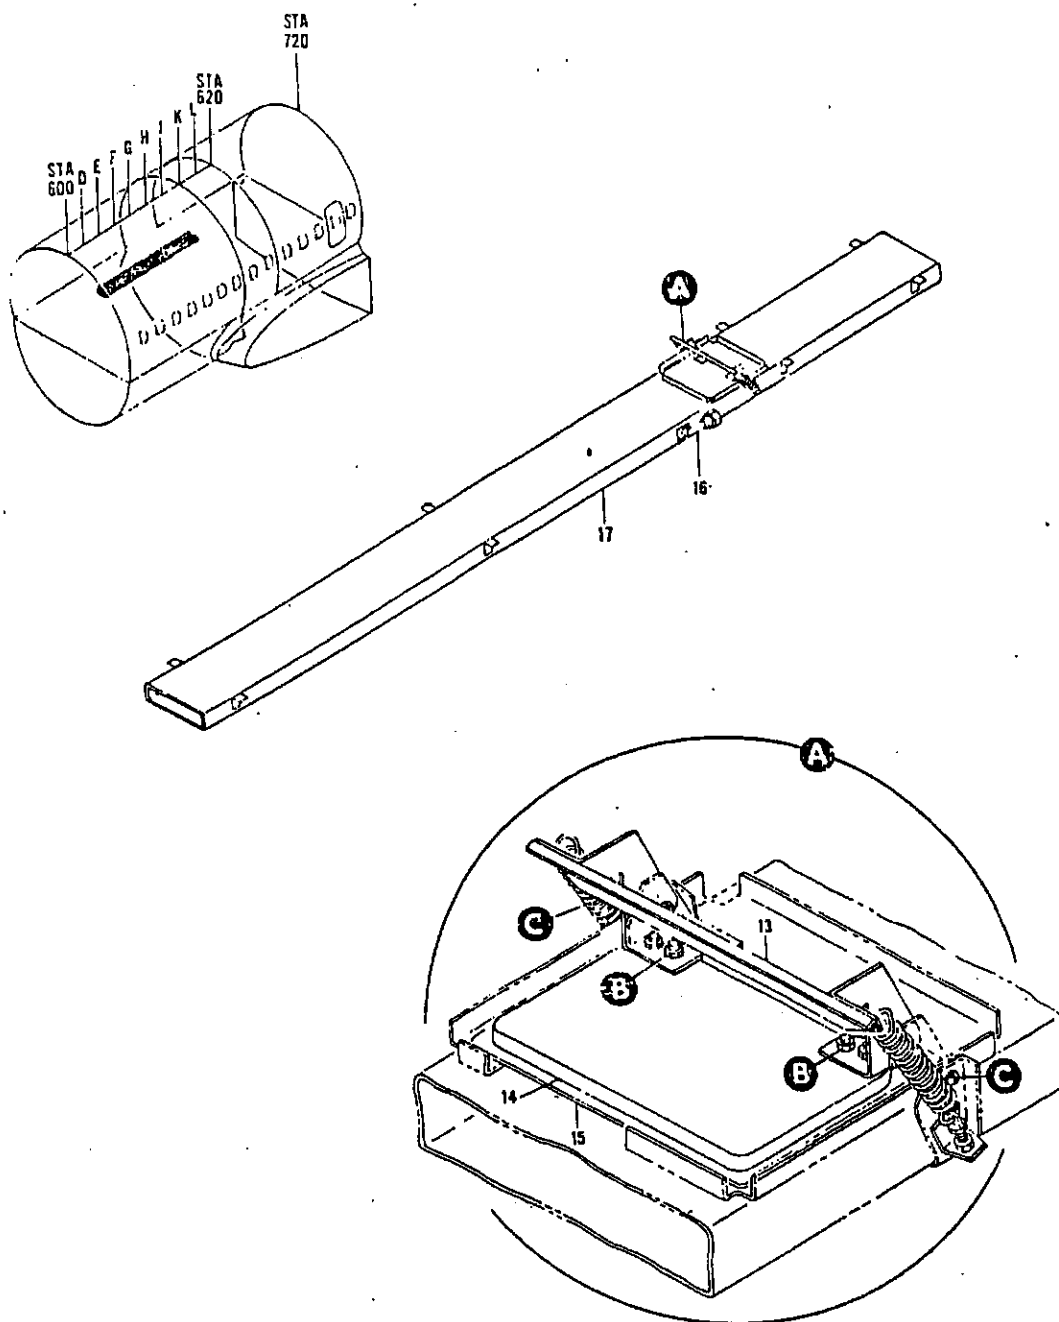


FIGURE 23. VALVE ASSY, CONTROL CABIN DUCT RELIEF (SHEET 1)

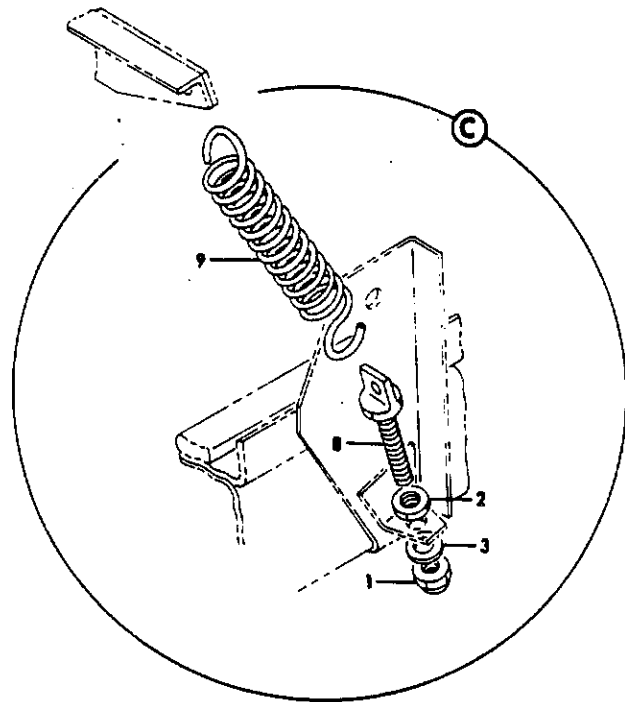
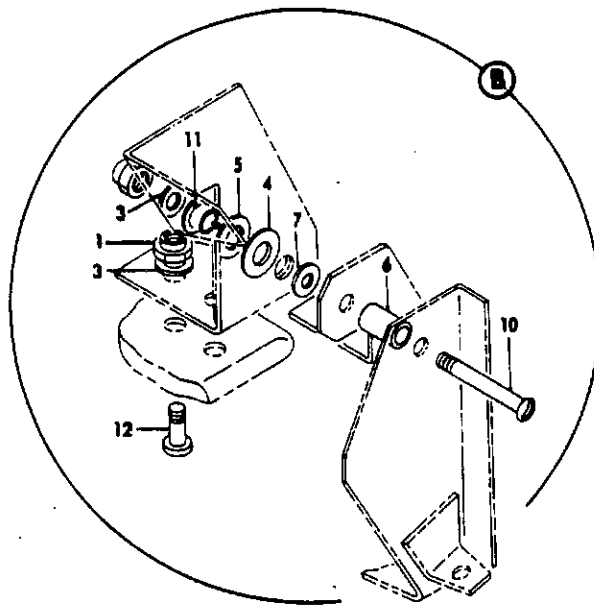


FIGURE 23. CONTROL CABIN DUCT RELIEF VALVE ASSEMBLY (SHEET 2)

NOV 21/90

21-04-23

DETAILED PARTS LIST
21-04-23
PAGE 1

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
23	65-6527-2		VALVE ASSY, CONTROL CABIN DUCT RELIEF (SEE FIG. 19, . . ITEM 44, FIG. 20, ITEM 53, FIG. 21, ITEM 50, AND FIG. 22, ITEM 42)		RF
1	NAS679A3W		. NUT		8
2	NAS671-10		. NUT		2
3	AN960D10L		. WASHER.		8
4	AN960C516L		. WASHER.		2
5	3502-18-00		. WASHER, SPRING (V78189)		2
6	NAS42DD6-34		. SPACER.		2
7	AN960D10		. WASHER.		2
8	66-4747		. BOLT, CONTROL CABIN DUCT SPRING ADJUSTMENT.		2
9	66-4708		. SPRING, CONTROL CABIN DUCT RELIEF VALVE		2
10	AN23-19A		. BOLT.		2
11	NAS77-3-19		. BUSHING		2
12	NAS221-7		. SCREW		4
13	69-5153-4		. BRACKET ASSY, CONTROL CABIN DUCT RELIEF VALVE HINGE		1
14	66-9329-1		. COVER, CONTROL CABIN DUCT RELIEF VALVE.		1
15	66-4750		. GASKET, CONTROL CABIN DUCT RELIEF VALVE		1
16	69-9689		. ELBOW ASSY, FLARELESS TUBE FLANGE		1
	MS20470A4		ATTACHING PARTS		
			. RIVET		4
	MS21922-6		. SLEEVE.		1
	MS21921D6		. NUT		1
17	65-2912-2		. DUCT ASSY, STATION 555.9 TO 600H PLUS 2.49 AIR. CONDITIONING DISTRIBUTION		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

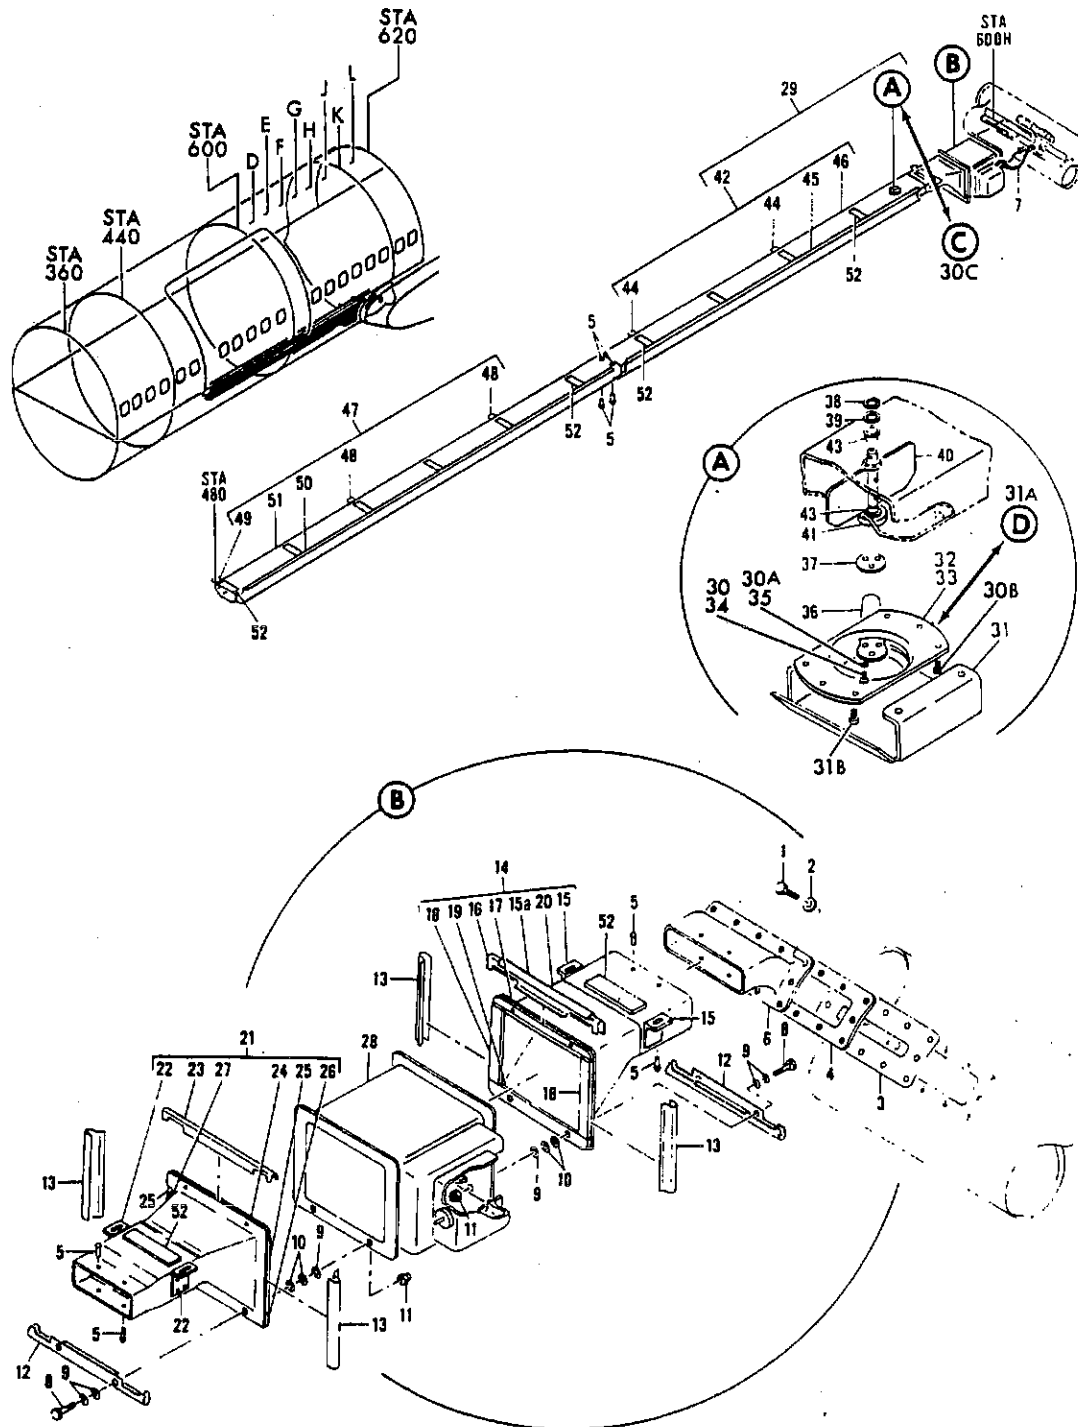


FIGURE 25. HEATER INSTL, FORWARD CARGO COMPARTMENT (SHEET 1)

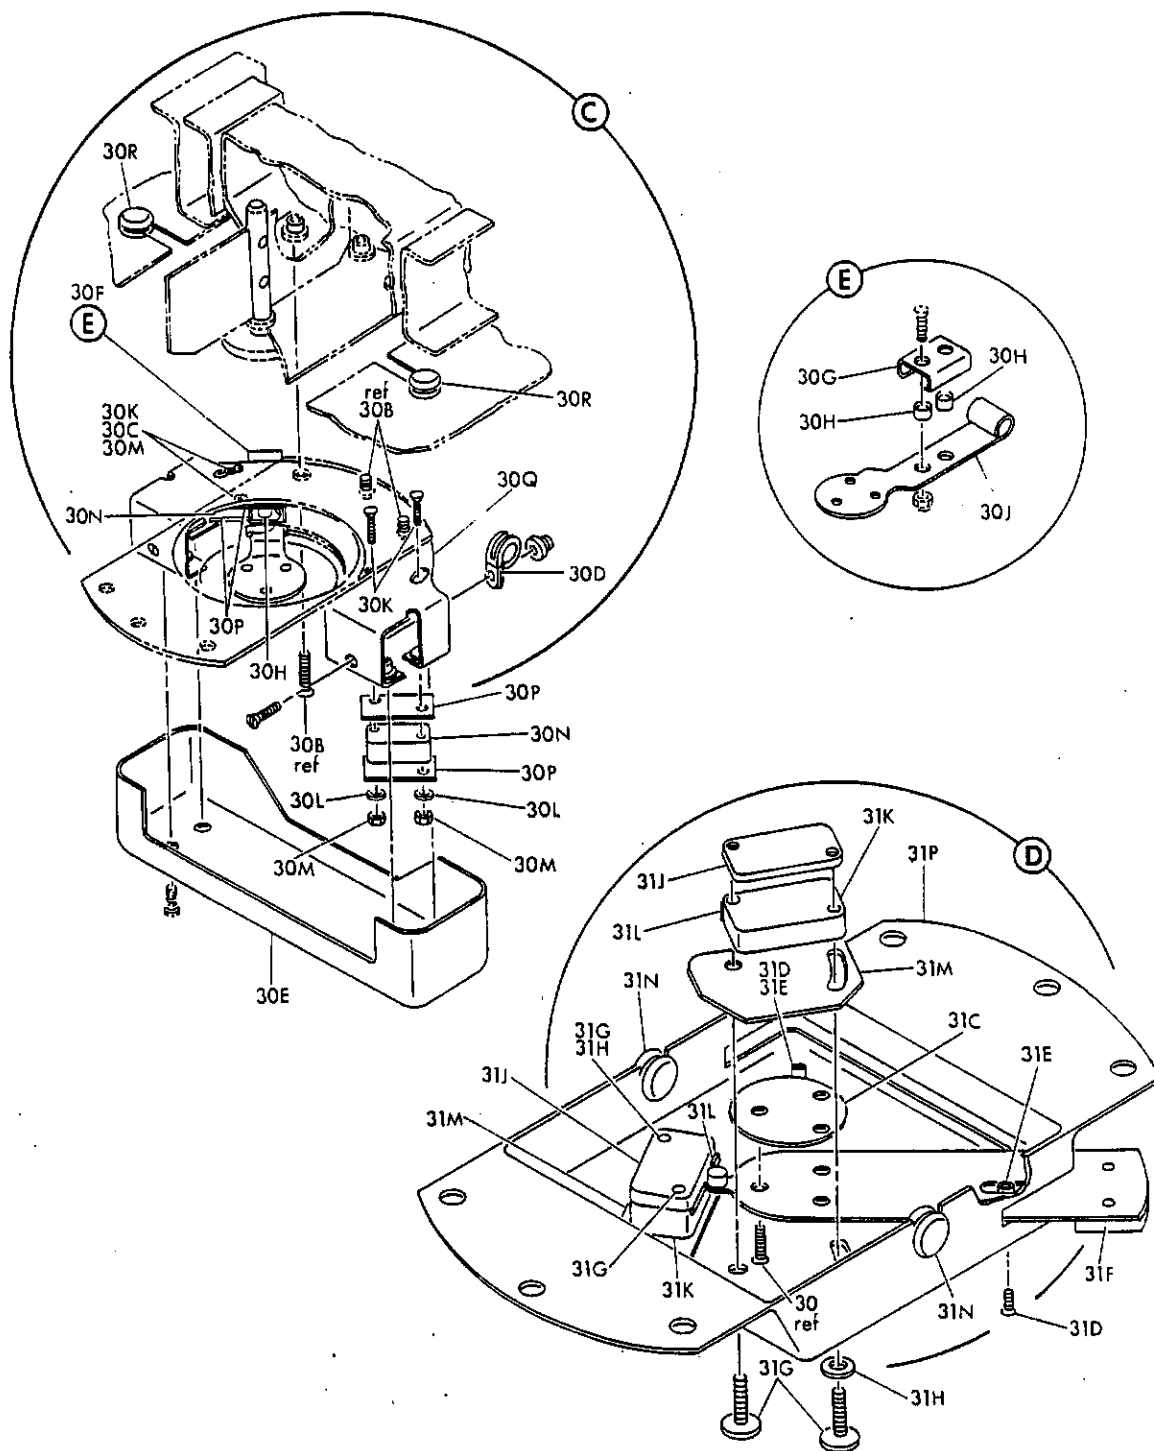


FIGURE 25. HEATER INSTL. FORWARD CARGO COMPARTMENT (SHEET 2)

NOV 21/90

21-04-25

DETAILED PARTS LIST
21-04-25
PAGE 1

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
25	65-19101-4		HEATER INSTL, FORWARD CARGO COMPARTMENT (SEE 21-2, FIG. 2, ITEM 21A)	5199	RF
1	AN3-5A		. BOLT.	5199	12
2	AN960D10		. WASHER.	5199	12
3	69-13751-1		. RESTRICTOR, FORWARD CARGO COMPARTMENT AUXILIARY . . .	5199	1
			HEATER		
4	66-11854-1		. GASKET, FORWARD CARGO COMPARTMENT AUXILIARY HEATER. .	5199	1
5	BACR15AP4-124		. RIVET	5199	12
6	69-13755-1		. DUCT, FORWARD CARGO COMPARTMENT AUXILIARY HEATER. . .	5199	1
			ELBOW		
7	MS25083-2BB8		. JUMPER ASSY	5199	1
			ATTACHING PARTS		
	NAS603-7		. SCREW	5199	2
	AN960D10L		. WASHER.	5199	4

8	AN3-5A		. BOLT.	5199	4
9	AN960D10		. WASHER.	5199	12
10	AN960D10L		. WASHER.	5199	8
11	NAS679A3W		. NUT	5199	4
12	69-12068-1		. CLIP, CREW COMPARTMENT HEATER	5199	2
13	69-12068-4		. CLIP, CREW COMPARTMENT HEATER	5199	4
14	65-17695-1		. DUCT ASSY, AUXILIARY HEATER INLET	5199	1
			ATTACHING PARTS		
	NAS603-7		. SCREW	5199	2
	AN960D10L		. WASHER.	5199	2
	NAS679A3W		. NUT	5199	2

15	66-5344		. . ANGLE, AIR CONDITIONING DISTRIBUTION DUCT MOUNTING	5199	2
			ATTACHING PARTS		
	MS20470A4		. . RIVET	5199	8

15A	65-17695-6		. . STRIP, AUXILIARY HEATER INLET DUCT RUB.	5199	1
16	69-12068		. . CLIP, CREW COMPARTMENT HEATER	5199	1
			ATTACHING PARTS		
	MS20426D5		. . RIVET	5199	2

17	66-9904		. . SPACER, CREW COMPARTMENT HEATER	5199	1
18	66-9909-1		. . GASKET, CREW COMPARTMENT HEATER	5199	2
19	66-9909		. . GASKET, CREW COMPARTMENT HEATER	5199	1
20	65-17695-3		. . DUCT, AUXILIARY HEATER INLET.	5199	1
21	65-18276-1		. DUCT ASSY, AUXILIARY HEATER OUTLET.	5199	1
			ATTACHING PARTS		
	NAS603-7		. SCREW	5199	2
	AN960D10L		. WASHER.	5199	2
	NAS679A3W		. NUT	5199	2

22	66-5344		. . ANGLE, AIR CONDITIONING DISTRIBUTION DUCT MOUNTING	5199	2
			ATTACHING PARTS		
	MS20470A4		. . RIVET	5199	8

23	69-12068		. . CLIP, CREW COMPARTMENT HEATER	5199	1
			ATTACHING PARTS		
	MS20426D5		. . RIVET	5199	2

24	66-9904		. . SPACER, CREW COMPARTMENT HEATER	5199	1
25	66-9909-1		. . GASKET, CREW COMPARTMENT HEATER	5199	2
26	66-9909		. . GASKET, CREW COMPARTMENT HEATER	5199	1
27	65-18276-2		. . DUCT, AUXILIARY HEATER OUTLET	5199	1
28	10-3282-1		. HEATER, CABIN AIR ELECTRIC.	5199	1
29	65-19100-2		. DAMPER ASSY, FORWARD CARGO COMPARTMENT AUXILIARY. . .	5199	1
			HEATING SHUT-OFF		
			ATTACHING PARTS		
	BACS12CB3-7		. SCREW	5199	6
	NAS679A3W		. NUT	5199	6

32	69-13390-1		. . PLATE ASSY, DAMPER COVER (AIR CONDITIONING ONLY). .	5199	1
			ATTACHING PARTS		
	NAS602-6		. . SCREW	5199	6
	AN960PDBL		. . WASHER.	5199	6

33	69-13390-2		. . . PLATE, FORWARD CARGO COMPARTMENT AUXILIARY HEATER	5199	1
			DAMPER COVER		
			. . . REQUIRED PLACARDS, (SEE 11-2, FIG. 23).	5199	
34	NAS600-5		. . SCREW	5199	3

MISSING ITEM NUMBERS ARE NOT APPLICABLE

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
25 35	MS35337-21	.	WASHER.	5199	3
36	66-11848-1	.	LEVER, FORWARD CARGO COMPARTMENT AUXILIARY HEATER DAMPER	5199	1
37	66-11850-1	.	SHIM, FORWARD CARGO COMPARTMENT AUXILIARY HEATER DAMPER	5199	AR
38	AN960PD616	.	WASHER.	5199	1
39	AN960PD616L	.	WASHER.	5199	1
40	66-11855-1	.	DAMPER, FORWARD CARGO COMPARTMENT AUXILIARY HEATER ATTACHING PARTS	5199	1
	NAS602-5	.	SCREW	5199	2
	MS35337-23	.	WASHER.	5199	2
41	66-11847-1	.	SHAFT, FORWARD CARGO COMPARTMENT AUXILIARY HEATER DAMPER	5199	1
42	65-18405-3	.	DUCT ASSY, CARGO COMPARTMENT AUXILIARY HEATING.	5199	1
43	66-4961	.	BUSHING, AIR SHUT OFF FLANGED	5199	2
44	65-18435-11	.	CLIP, CARGO COMPARTMENT HEATING DUCT SUPPORT.	5199	2
45	65-18435-6	.	CHANNEL, CARGO COMPARTMENT HEATING DUCT SUPPORT ATTACHING PARTS	5199	1
	MS20470A4	.	RIVET	5199	27
46	65-18405-2	.	DUCT, CARGO COMPARTMENT AUXILIARY HEATING	5199	1
47	65-18406-7	.	DUCT ASSY, CARGO COMPARTMENT AUXILIARY HEATING ATTACHING PARTS	5199	1
	NAS603-7	.	SCREW	5199	7
	AN960D10L	.	WASHER.	5199	7
	NAS679A3W	.	NUT	5199	7
48	65-18435-11	.	CLIP, CARGO COMPARTMENT HEATING DUCT SUPPORT.	5199	2
49	65-18435-13	.	CLIP, CARGO COMPARTMENT HEATING DUCT SUPPORT.	5199	1
50	65-18435-3	.	CHANNEL ASSY, CARGO COMPARTMENT HEATING DUCT SUPPORT ATTACHING PARTS	5199	1
	MS20470A4	.	RIVET, (OPTIONAL BACR15AP4-124)	5199	37
51	65-18406-4	.	DUCT, CARGO COMPARTMENT AUXILIARY HEATING	5199	1
52	66-2668	.	STRIP, AIR CONDITIONING DISTRIBUTION DUCT RUB	5199	12
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

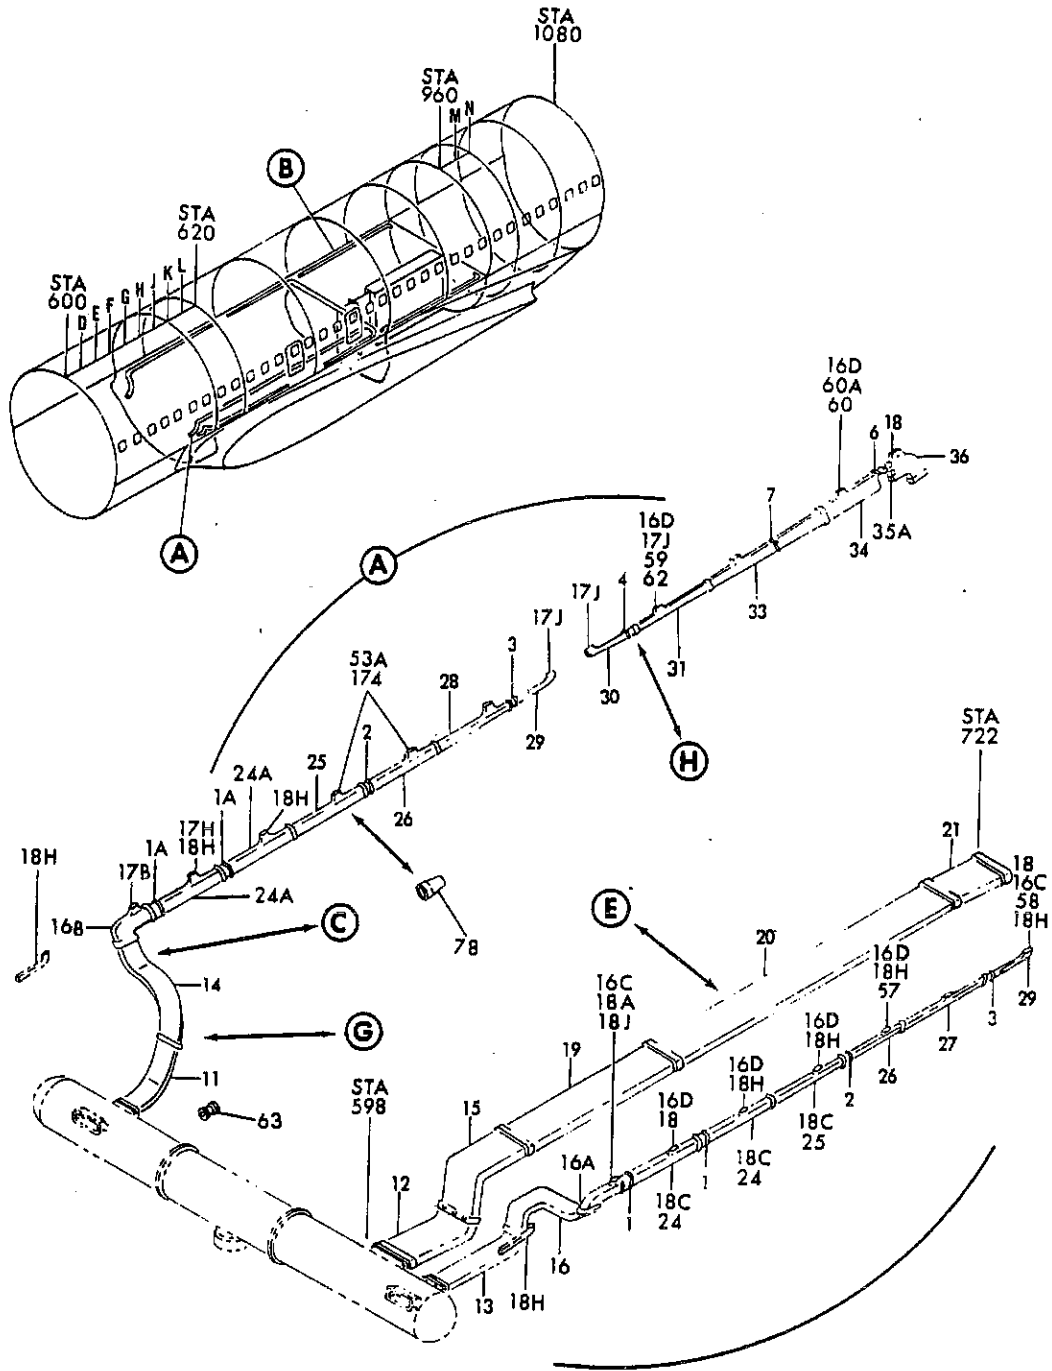



FIGURE 27A. DUCT INSTL. STATION 620 TO 960 AIR CONDITIONING DISTRIBUTION (SHEET 1)

 

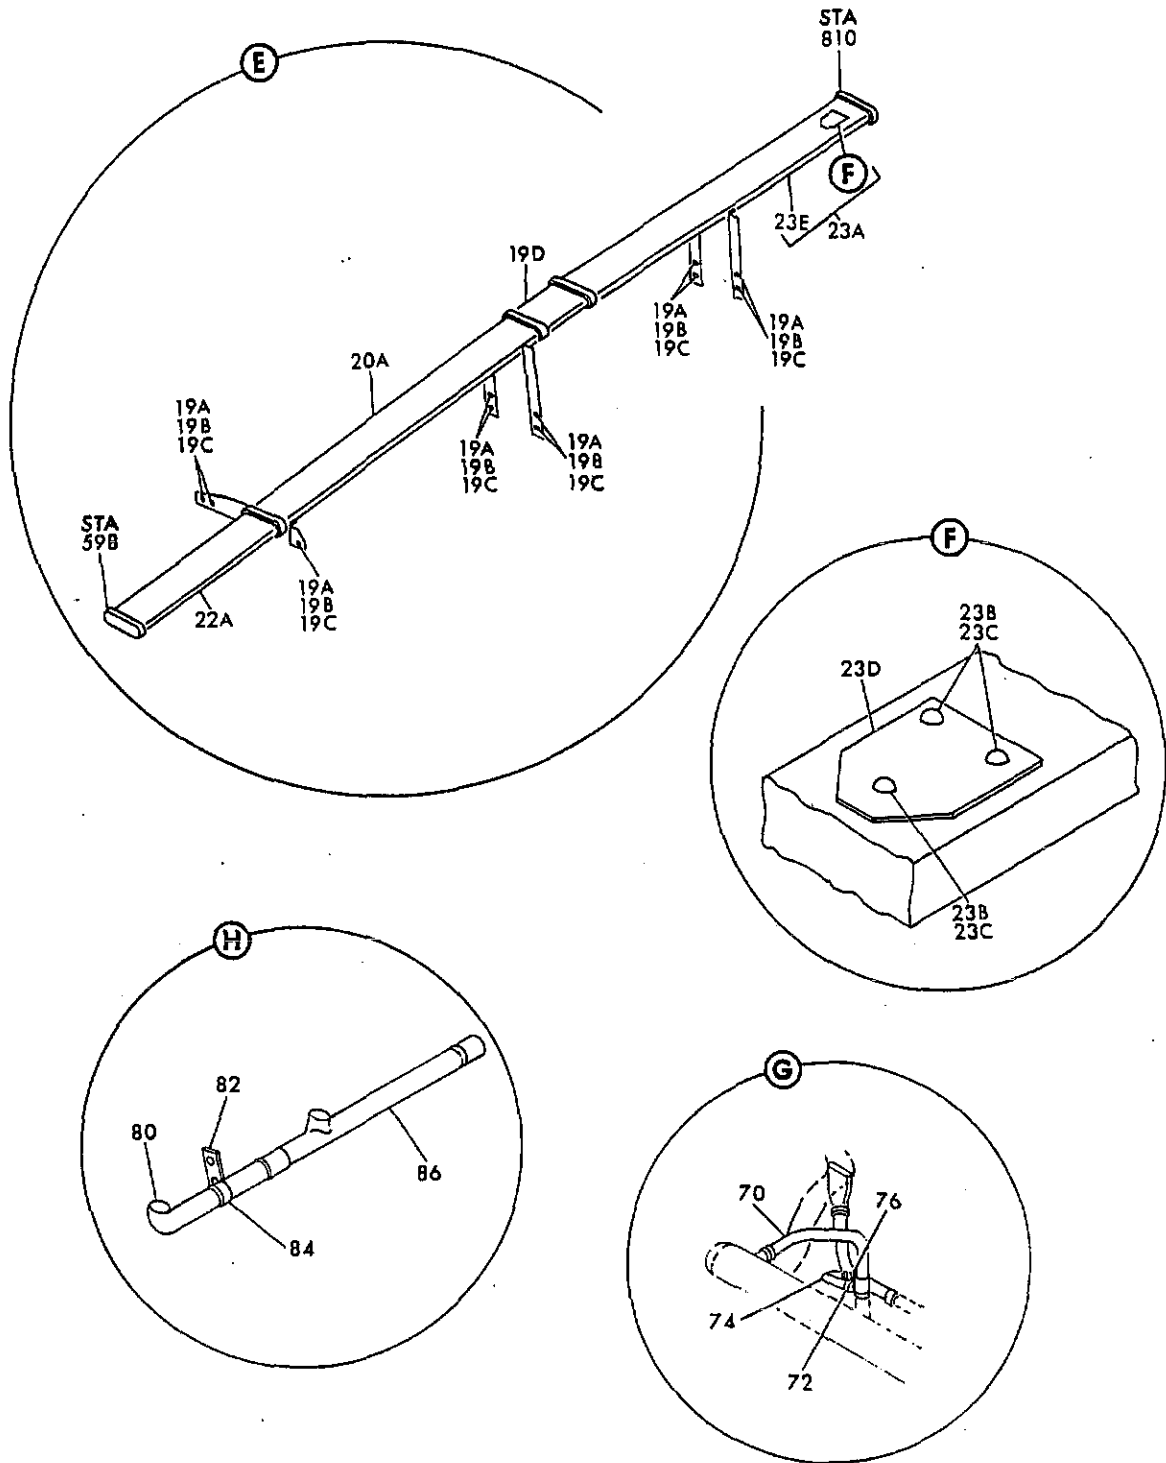


FIGURE 27A. DUCT INSTL, STATION 620 TO 960 AIR CONDITIONING DISTRIBUTION (SHEET 3)

DETAILED PARTS LIST
21-04-27A
PAGE 2

21-04-27A

NOV 21/90

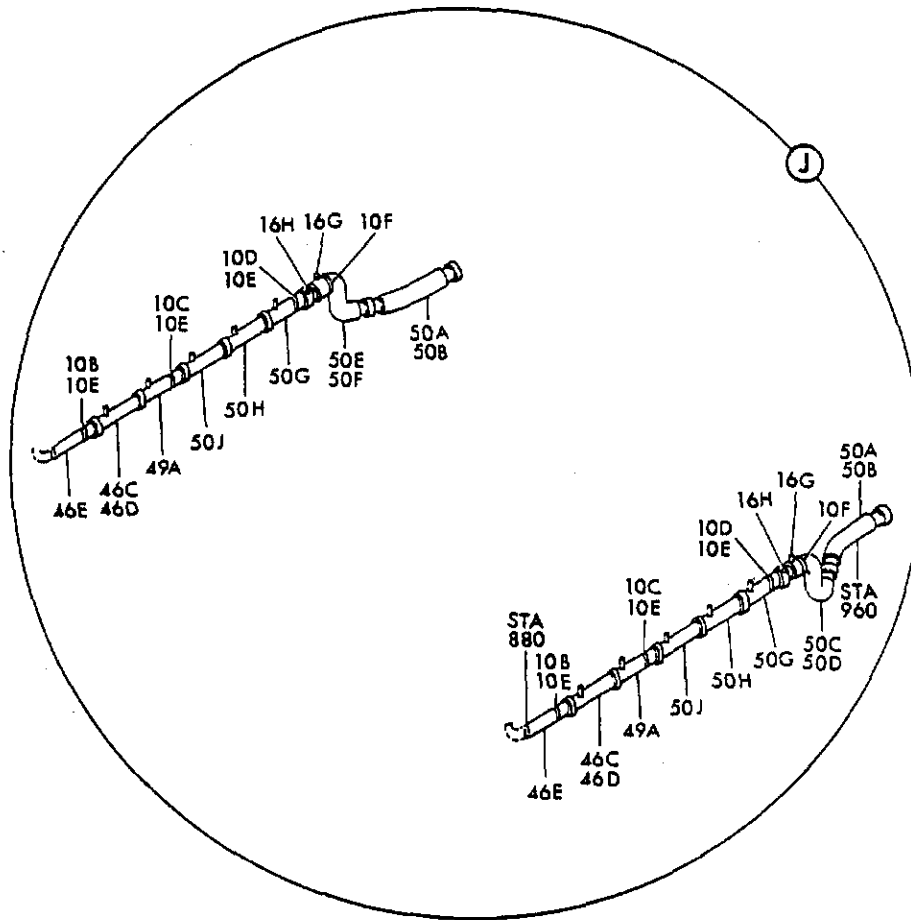


FIGURE 27A. DUCT INSTL, STATION 620 TO 960 AIR CONDITIONING DISTRIBUTION (SHEET 4)

NOV 21/90

21-04-27A

DETAILED PARTS LIST
21-04-27A
PAGE 3

BEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
27A	65-42102-3		DUCT INSTL, STATION 600J TO 960 AIR CONDITIONING. . . . DISTRIBUTION (SEE 21-2, FIG. 2, ITEM 10A)		RF
1	65-3385-9		. CLAMP, SECTION 54 DUCT.		2
1A	65-3385-9		. CLAMP, SECTION 54 DUCT.		2
2	65-3385-1		. CLAMP, SECTION 54 DUCT.		3
3	69-1017-4		. CLAMP, SECTION 54 DUCT.		2
			ATTACHING PARTS		
	NAS603-6P		. SCREW		9
	AN960D10L		. WASHER.		9
	NAS679A3W		. NUT		9
4	65-3385-6		. CLAMP, SECTION 54 DUCT.		2
5	65-3385-18		. CLAMP, SECTION 54 DUCT.		2
6	65-3385-2		. CLAMP, SECTION 54 DUCT.		2
			ATTACHING PARTS		
	NAS603-6P		. SCREW		4
	NAS603-6P		. SCREW		2
	AN960D10L		. WASHER.		4
	AN960D10L		. WASHER.		2
	NAS679A3W		. NUT		4
	NAS679A3W		. NUT		2
7	65-3385-10		. CLAMP, SECTION 54 DUCT.		1
			ATTACHING PARTS		
	NAS603-6P		. SCREW		1
	AN960D10L		. WASHER.		1
	NAS679A3W		. NUT		1
8	MS21919DG52		. CLAMP		4
			ATTACHING PARTS		
	NAS603-7P		. SCREW		4
	AN960D10		. WASHER.		4
	NAS679A3W		. NUT		4
9	65-3385-20		. CLAMP, SECTION 54 DUCT.		6
10	65-3385-19		. CLAMP, SECTION 54 DUCT.		4
			ATTACHING PARTS		
	NAS603-6P		. SCREW		10
	AN960D10L		. WASHER.		10
	NAS679A3W		. NUT		10
11	65-18261-107		. DUCT ASSY, INSULATED.		1
11	65-1190-2		. DUCT.		1
12	65-18261-103		. DUCT ASSY, INSULATED.		1
12	65-1188-2		. DUCT.		1
13	65-18261-105		. DUCT ASSY, INSULATED.		1
13	65-1189-2		. DUCT.		1
14	65-18261-13		. DUCT ASSY, INSULATED.		1
14	65-2837		. DUCT.		1
15	65-18261-49		. DUCT ASSY, INSULATED.		1
			ATTACHING PARTS		
	NAS603-6P		. SCREW		6
	NAS679A3		. NUT		6
15	65-2324		. DUCT.		1
16	65-18261-11		. DUCT ASSY, INSULATED.		1
16	65-2836		. DUCT.		1
16A	69-2170		. DUCT, STATION 640		1
16B	69-2170		. DUCT, STATION 640		1
17B	66-4918-1		. RESTRICTOR, OVAL TYPE (BLACK)		1
18	66-4918-1		. RESTRICTOR, OVAL TYPE (BLACK)		1
18A	66-4918-1		. RESTRICTOR, OVAL TYPE (BLACK)		1
18B	66-4918-1		. RESTRICTOR, OVAL TYPE (BLACK)		1
19	65-32235-1		. DUCT ASSY, INSULATED.		1
19	65-32235-3		. DUCT.		1
20	65-32234-1		. DUCT ASSY, INSULATED.		1
			ATTACHING PARTS		
	NAS603-6P		. SCREW		7
	AN960D10L		. WASHER.		7
	NAS679A3W		. NUT		7
20	65-32234-2		. DUCT.		1
21	65-32235-2		. DUCT ASSY, INSULATED.		1
21	65-32235-4		. DUCT.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
27A 22	975-0090-001	. SWITCH, DUCT THERMAL (V97896)		1
	NAS602-7P	. ATTACHING PARTS		3
		. SCREW		4
23	65-32236-4	. DUCT ASSY, INSULATED.		1
	NAS603-6P	. ATTACHING PARTS		4
	AN960D10L	. SCREW		4
	NAS679A3W	. WASHER.		4
		. NUT		4
23	65-32236-5	. DUCT, (USED ON 65-32236-4).		1
24	65-1186	. DUCT.		2
24A	65-1186	. DUCT, STATION 640 TO 660.		2
25	65-2426	. DUCT, STATION 640 TO 660.		2
26	69-19157-1	. DUCT.		2
27	65-2399-1	. DUCT, STATION 680 TO 700 (LH)		1
28	65-3382-1	. DUCT, STATION 685 TO 700 (RH)		1
29	65-19158-1	. DUCT.		1
30	69-1008	. DUCT.		1
31	69-22827-1	. DUCT.		2
32	65-3380-1	. DUCT, STATION 765 TO 780 (LH)		1
33	65-3381-1	. DUCT, STATION 765 TO 780 (RH)		1
34	69-22785-1	. DUCT.		2
35	66-4942-2	. RESTRICTOR, SECTION 54.		1
35A	66-4942-2	. RESTRICTOR, SECTION 54.		1
36	69-2392	. DUCT, STATION 802.50 TO 810		2
37	65-18261-123	. DUCT ASSY, INSULATED.		1
37	65-2999-9	. DUCT.		1
38	65-18261-55	. DUCT ASSY, INSULATED.		1
38	69-2450	. DUCT, STATION 808.30 TO 815.48.		1
39	65-18261-57	. DUCT ASSY, INSULATED.		1
39	69-2467	. DUCT, STATION 815.48.		1
40	65-18261-125	. DUCT ASSY, INSULATED.		1
40	65-2999-10	. DUCT.		1
41	69-35482-1	. DUCT.		1
42	69-35482-2	. DUCT.		1
43	69-35481-3	. DUCT.		1
43A	66-4895-14	. RESTRICTOR, SYSTEM 1.50 DIA DUCT (PINK)		1
44	66-4895-14	. RESTRICTOR, SYSTEM 1.50 DIA DUCT (PINK)		1
45	69-35481-4	. DUCT.		1
46	69-35480-1	. DUCT.		2
46A	69-51582-1	. DUCT.		1
46B	69-51582-2	. DUCT.		1
46C	69-35480-1	. DUCT.		2
47	69-21212-1	. DUCT.		6
R 47A	69-21212-1	. DUCT, (REWORKED BY SB 2754)	0150	2
R 47A	69-21212-2	. DUCT.	5199	2
	48	. DUCT.		2
	49	. DUCT.		2
	50	. DUCT.		6
	51	. DUCT.		2
	52	. RESTRICTOR, SYSTEM 1.50 (BROWN)		4
R 52A	66-4895-10	. RESTRICTOR, SYSTEM 1.50 (BROWN)	0103	2
R			5199	
R 52A	66-4895-10	. RESTRICTOR, SYSTEM 1.50 (BROWN) (DELETED BY SB 2754)	0150	2
R 52A	66-4895-9	. RESTRICTOR, SYSTEM 1.50 (ADDED BY SB 2754)	0150	AR
R 52A	66-4903-3	. RESTRICTOR, SYSTEM 1.00 (ADDED BY SB 2754)	0150	AR
	53	. RESTRICTOR, SYSTEM 1.50 (YELLOW)		1
	54	. RESTRICTOR, SYSTEM 1.50 IN. DIAMETER.		1
	54C	. RESTRICTOR, SYSTEM 1.50 IN. DIAMETER.		10
	54D	. RESTRICTOR, SYSTEM 1.50 IN. DIAMETER.		1
	55E	. RESTRICTOR, SYSTEM 1.50 IN. DIAMETER.		4
	55F	. RESTRICTOR, SYSTEM 1.50 IN. DIAMETER.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

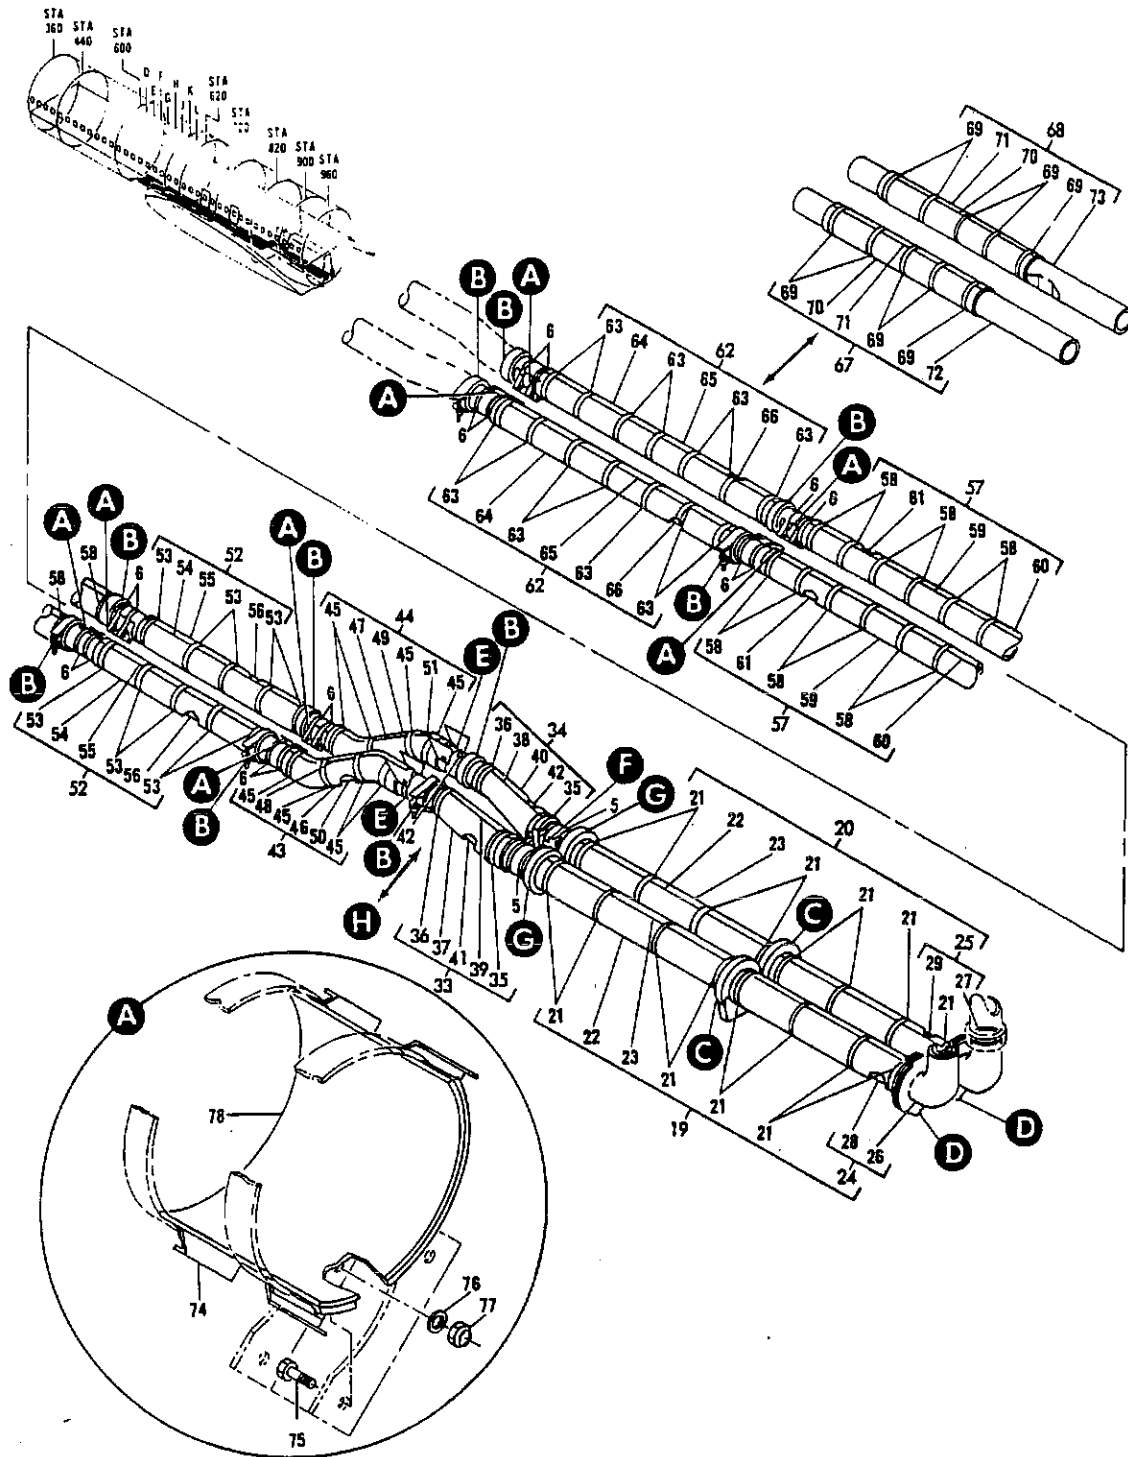


FIGURE 29. DUCT INSTL, AFT CABIN AIR DISTRIBUTION (SHEET 1)

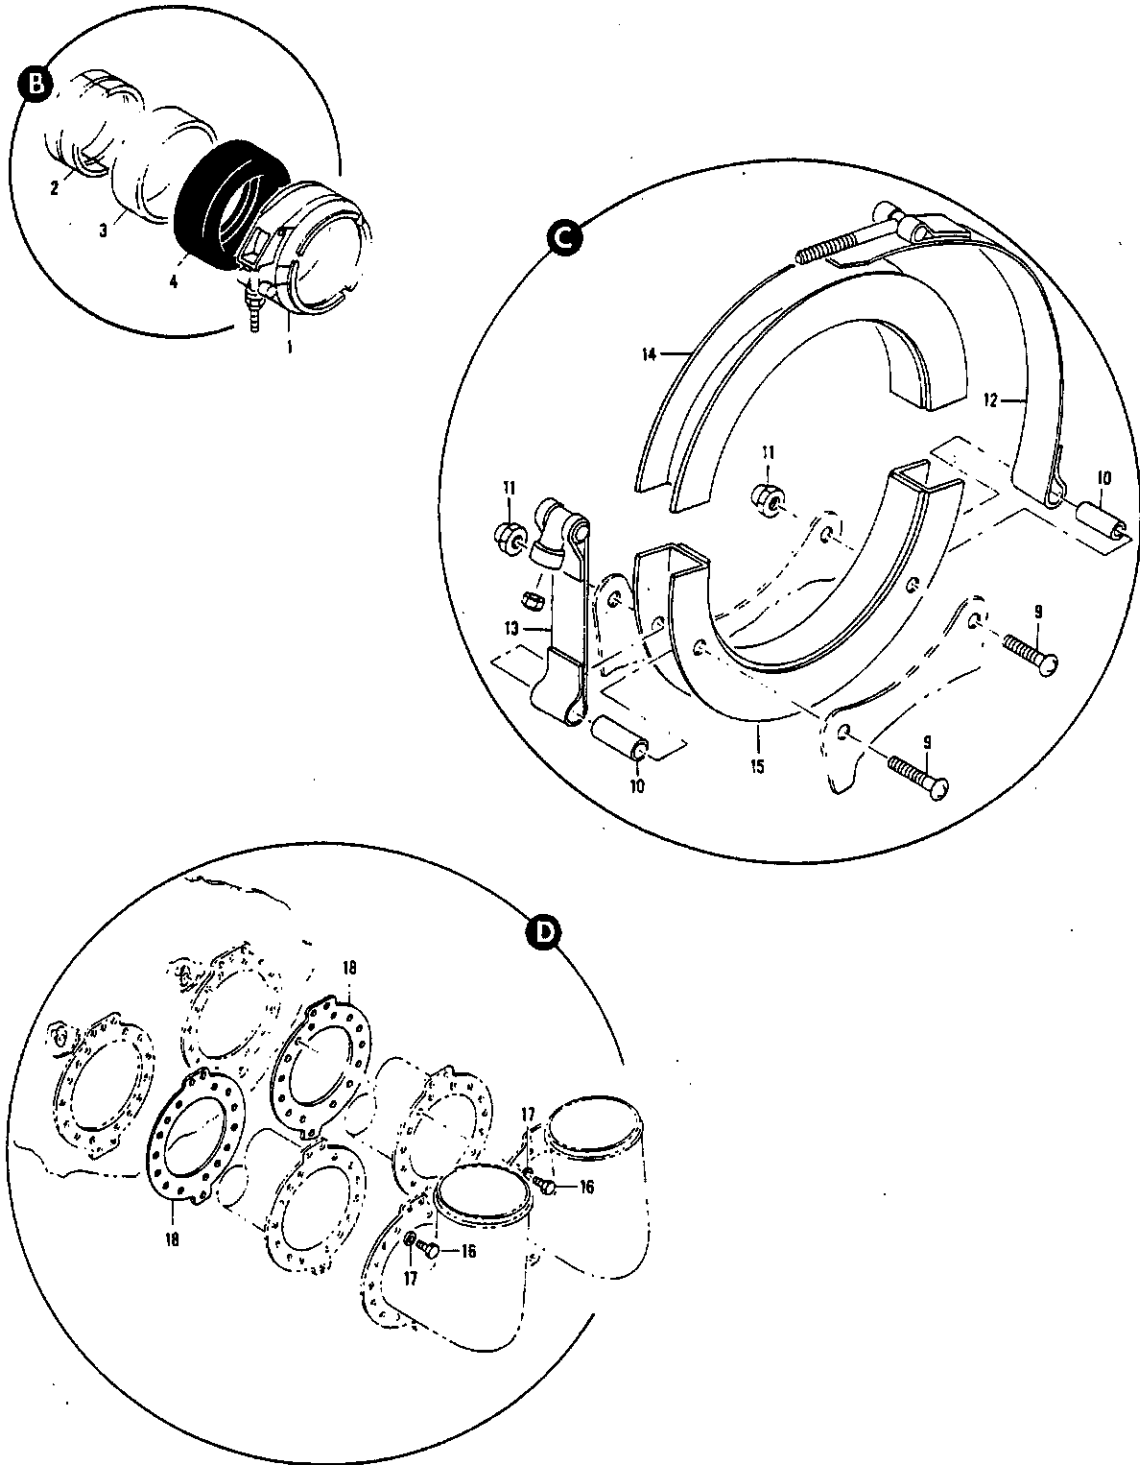


FIGURE 29. DUCT INSTL, AFT CABIN AIR DISTRIBUTION (SHEET 2)

NOV 21/90

21-04-29

DETAILED PARTS LIST
21-04-29
PAGE 1

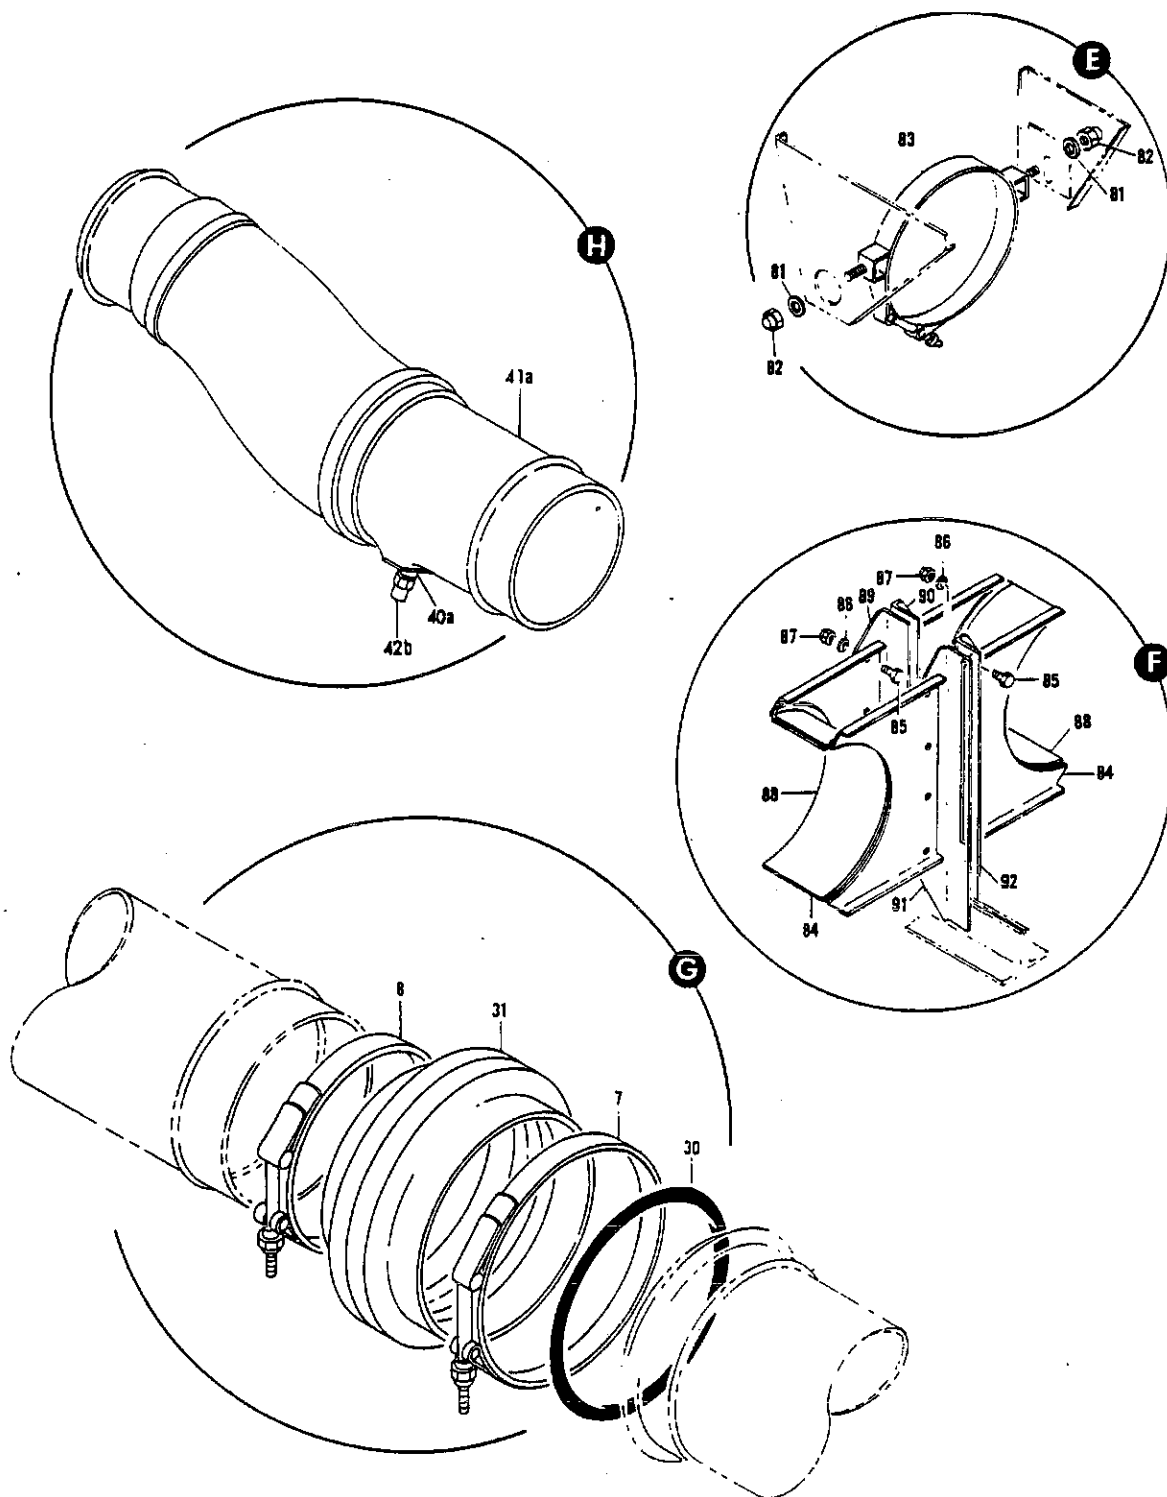


FIGURE 29. DUCT INSTL, AFT CABIN AIR DISTRIBUTION (SHEET 3)

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1 2 3 4 5 6 7				
29	65-4339	DUCT INSTL, AFT CABIN AIR DISTRIBUTION (SEE 21-2, FIG. 2, ITEM 11)		RF
1	50203-500	. CLAMP, FUEL COUPLING (V98625)		10
2	24170-500	. RETAINER, FUEL COUPLING (V98625)		10
3	17351-500	. RING, FUEL COUPLING (V98625)		10
4	17237-500	. SLEEVE, FUEL COUPLING (V98625)		10
5	BACC10P14-75-62SSH	. CLAMP		2
6	BACC10P14-75-52SSH	. CLAMP		16
7	BACC10BNA638LC	. CLAMP		2
8	BACC10BNA612LC	. CLAMP		2
16	AN3-5A	. BOLT		34
17	AN960D10L	. WASHER		34
18	66-3275-1	. GASKET, STATION 960 CONDITIONED AIR DUCT		2
19	65-3431-1	. DUCT ASSY, STATION 860 TO 960 AFT CABIN AIR (LH)		1
20	65-3431-2	. DUCT ASSY, STATION 860 TO 960 AFT CABIN AIR (RH)		1
21	45-22047-21-50	. . STRAP, (V78741)		8
22	16-22267-9	. . BLANKET, INSULATION (V78741) (LH ONLY)		2
23	16-22267-10	. . BLANKET, INSULATION (V78741) (RH ONLY)		2
24	65-3431-3	. . DUCT ASSY, STATION 860 TO 960 AFT CABIN AIR (LH ONLY)		1
25	65-3431-4	. . DUCT ASSY, STATION 860 TO 960 AFT CABIN AIR (RH ONLY)		1
26	65-3431-5	. . . DUCT, STATION 860 TO 960 AFT CABIN AIR ELBOW (LH ONLY)		1
27	65-3431-6	. . . DUCT, STATION 860 TO 960 AFT CABIN AIR ELBOW (RH ONLY)		1
28	65-3431-9	. . . DUCT, STATION 860 TO 960 AFT CABIN AIR (LH ONLY)		1
29	65-3431-10	. . . DUCT, STATION 860 TO 960 AFT CABIN AIR (RH ONLY)		1
30	9027-64	. GASKET, HIGH TEMPERATURE O RING (V028B6)		2
31	10-3274-11	. SEAL, FLEXIBLE PRESSURE		2
33	65-4336-7	. DUCT ASSY, STATION 837.10 TO 859.06 AFT CABIN AIR DISTRIBUTION (LH)		1
34	65-4336-10	. DUCT ASSY, STATION 837.10 TO 859.06 AFT CABIN AIR DISTRIBUTION (RH)	5199	1
34	65-4336-8	. DUCT ASSY, STATION 837.10 TO 859.06 AFT CABIN AIR DISTRIBUTION (RH)	0150	1
35	45-22047-21-53	. . STRAP, (V78741)		1
36	45-22047-18-69	. . STRAP, (V78741)		1
37	57-051-1	. . BLANKET, INSULATION (V98900) (OPTIONAL 16-22493-3 (V78741)) (LH ONLY)		1
37	16-22493-3	. . BLANKET, INSULATION (V78741) (LH ONLY) (OPTIONAL TO 57-051-1 (V98900))		1
38	57-051-2	. . BLANKET, INSULATION (V98900) (OPTIONAL 16-22493-4 (V78741)) (RH ONLY)		1
38	16-22493-4	. . BLANKET, INSULATION (V78741) (RH ONLY) (OPTIONAL TO 57-051-2 (V98900))		1
39	57-051-3	. . BLANKET, INSULATION (V98900) (OPTIONAL 16-22493-5 (V78741)) (LH ONLY)		1
39	16-22493-5	. . BLANKET, INSULATION (V78741) (LH ONLY) (OPTIONAL TO 57-051-3 (V98900))		1
40	57-051-4	. . BLANKET, INSULATION (V98900) (OPTIONAL 16-22493-6 (V78741)) (RH ONLY)		1
40	16-22493-6	. . BLANKET, INSULATION (V78741) (RH ONLY) (OPTIONAL TO 57-051-4 (V98900))		1
41	65-4336-5	. . DUCT, STATION 837.10 TO 859.06 AFT CABIN AIR DISTRIBUTION (LH ONLY)		1
42	65-4336-9	. . DUCT, STATION 837.10 TO 859.06 AFT CABIN AIR DISTRIBUTION (RH ONLY)	5199	1
42	65-4336-6	. . DUCT, STATION 837.10 TO 859.06 AFT CABIN AIR DISTRIBUTION (RH ONLY)	0150	1
42A	975-0090-001	. SWITCH, THERMAL (V97896) (RH ONLY)		1
	NAS602-7P	. ATTACHING PARTS SCREW		3
43	65-21051-9	. DUCT ASSY, STATION 795.10 TO 836.90 (LH)		1
44	65-21051-6	. DUCT ASSY, STATION 795.10 TO 836.90 AFT CABIN AIR DISTRIBUTION (RH)		1
45	42-22047-18-69	. . STRAP, (V78741)		4
46	58-006-1	. . BLANKET, INSULATION (V98900) (LH ONLY)		1
47	58-006-2	. . BLANKET, INSULATION (V98900) (RH ONLY)		1
48	58-006-3	. . BLANKET, INSULATION (V98900) (LH ONLY)		1
49	58-006-4	. . BLANKET, INSULATION (V98900) (RH ONLY)		1
50	65-21051-10	. . DUCT		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
29 51	65-21051-8		. . DUCT, STATION 795.10 TO 836.90 AFT CABIN AIR. . . . DISTRIBUTION (RH ONLY)		1
52	69-12054		. DUCT ASSY, STATION 745.00 TO 795.00 AFT CABIN AIR . . DISTRIBUTION		2
53	45-22047-18-39		. . STRAP, (V78741)		5
54	58-005-1		. . BLANKET, INSULATION (V98900)		1
55	58-005-3		. . BLANKET, INSULATION (V98900)		1
56	69-12054-1		. . DUCT, STATION 745.00 TO 795.00 AFT CABIN AIR. . . . DISTRIBUTION		1
57	65-4333-1		. DUCT ASSY, STATION 600L PLUS 5 TO 675.00 AFT CABIN. . AIR DISTRIBUTION		2
58	45-22047-18-39		. . STRAP, (V78741)		7
59	57-049-5		. . BLANKET, INSULATION HALF (V98900)		1
60	57-049-6		. . BLANKET, INSULATION HALF (V98900)		1
61	65-4333-3		. . DUCT, STATION 675.00 TO 745.00 AFT CABIN AIR. . . . DISTRIBUTION		1
67	65-4333-9		. DUCT ASSY, STATION 600L PLUS 5 TO 675.00 AFT CABIN. . AIR DISTRIBUTION (LH ONLY)		1
68	65-4333-9		. DUCT ASSY, STATION 600L PLUS 5 TO 675.00 AFT CABIN. . AIR DISTRIBUTION (RH ONLY)		1
69	45-22047-18-39		. . STRAP, (V78741)		5
70	57-049-9		. . BLANKET, INSULATION HALF (V98900)		1
71	57-049-10		. . BLANKET, INSULATION HALF (V98900)		1
72	65-4333-10		. . DUCT, STATION 600L PLUS 5 TO 675.00 AFT CABIN AIR . . DISTRIBUTION (LH ONLY)		1
73	65-4333-10		. . DUCT, STATION 600L PLUS 5 TO 675.00 AFT CABIN AIR . . DISTRIBUTION (RH ONLY)		1
74	69-4712		. BRACKET ASSY, CONDITIONED AIR TO AFT CABIN. ATTACHING PARTS		8
75	AN3-4A		. BOLT.		32
76	AN960D10L		. WASHER.		32
77	NAS679A3W		. NUT		32
78	69-4712-2 65-22093		. . PAD, CONDITIONED AIR TO AFT CABIN BRACKET FRICTION . SUPPORT INSTL, STATION 832 AFT CABIN CONDITIONED AIR DUCT		1 1
81	BACN10P71S		. . WASHER.		4
82	BACN10BY34W		. . NUT		4
83	BACCL0AD500W		. . CLAMP		2
84	65-4399		. SUPPORT ASSY, AFT DISTRIBUTION DUCT ANCHOR. ATTACHING PARTS		2
85	AN3-3A		. BOLT.		16
86	AN960D10L		. WASHER.		16
87	NAS679A3W		. NUT		16
88	65-4399-4		. . PAD, AFT DISTRIBUTION DUCT ANCHOR SUPPORT		1
89	69-3553-6		. CLIP, AIR DISTRIBUTION DUCT SUPPORT		1
90	69-3553-3		. CLIP, AIR DISTRIBUTION DUCT SUPPORT		1
91	69-3553-2		. CLIP, AIR DISTRIBUTION DUCT SUPPORT		1
92	69-3553-7		. CLIP, AIR DISTRIBUTION DUCT SUPPORT		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

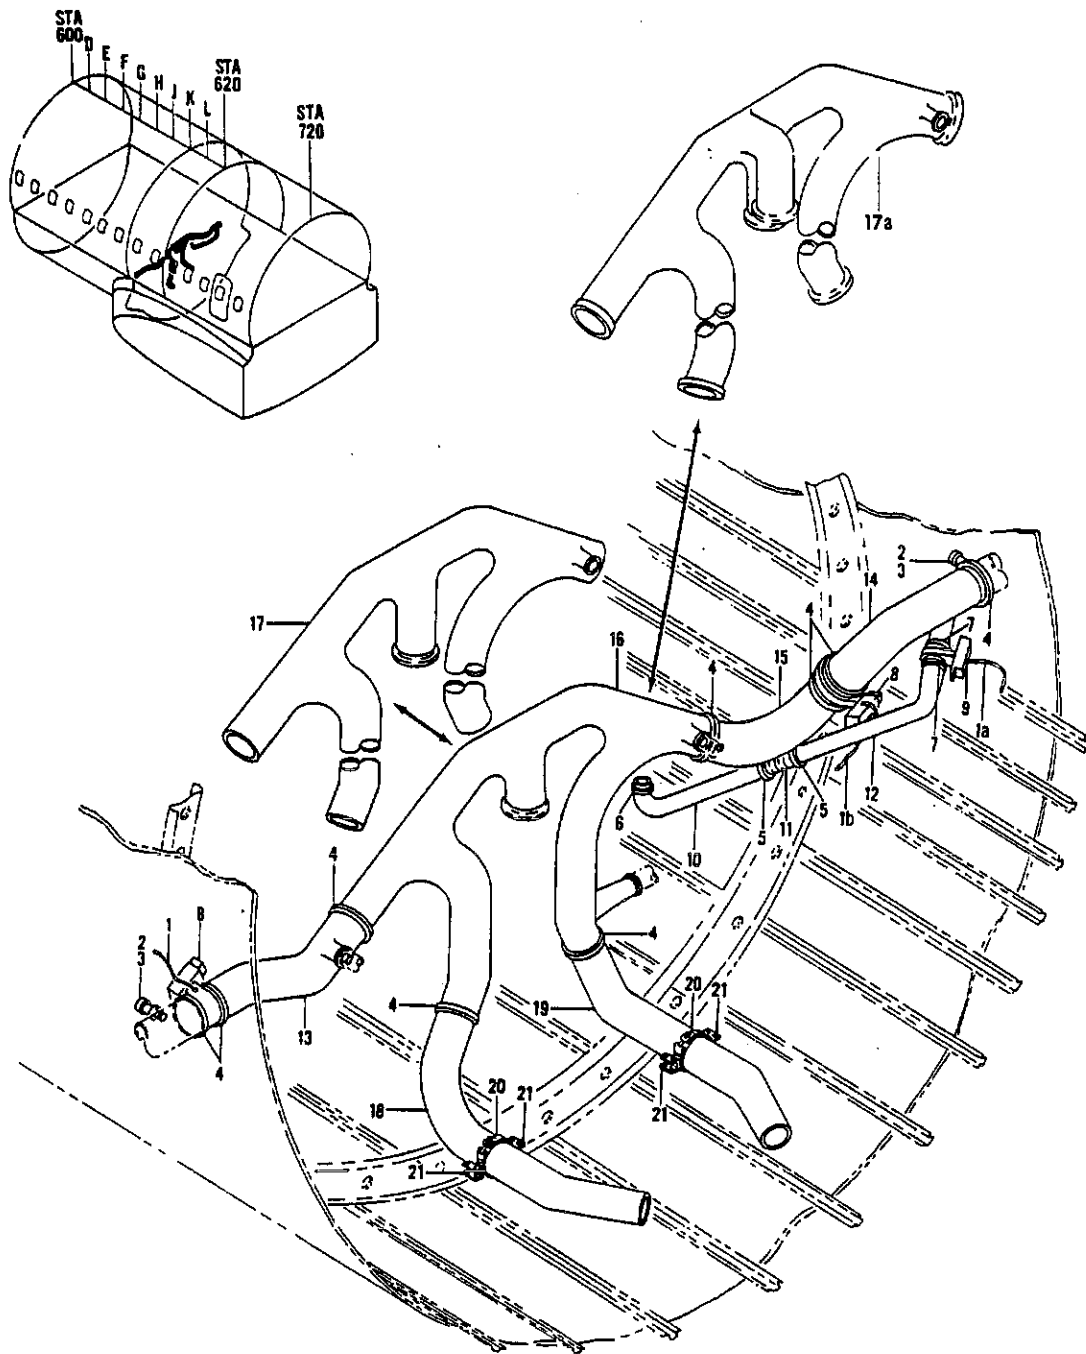


FIGURE 3L DUCT INSTL, COMPRESSED AIR CROSSOVER



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
31	65-7150-3	DUCT INSTL, COMPRESSED AIR CROSSOVER (SEE 21-2, FIG. 2, ITEM 8)								RF
1	MS25083-28810	. JUMPER ASSY								1
1A	MS25083-2888	. JUMPER ASSY								1
1B	MS25083-28815	. JUMPER ASSY								1
		ATTACHING PARTS								
	NAS603-8	. SCREW								6
	AN960D10L	. WASHER								12
	NAS679A3W	. NUT								6

2	1111-565528-1	. VALVE, SWING CHECK (V92003)								2
		(OPTIONALS 1111-565528 (V92003) 8C138 (V82829) 2S2148 (V99240))								
2	1111-565528	. VALVE, SWING CHECK (V92003)								2
		(OPTIONAL TO 1111-565528-1 (V92003))								
2	8C138	. VALVE, SWING CHECK (V82829)								2
		(OPTIONAL TO 1111-565528-1 (V92003))								
2	2S2148	. VALVE, SWING CHECK (V99240)								2
		(OPTIONAL TO 1111-565528-1 (V92003))								
3	BACP11K8	. PACKING								2
4	BACC10DP600A	. CLAMP								9
5	BACC10BN212LR	. CLAMP								2
6	BACC10DP200	. CLAMP								1
7	BACC10DP250	. CLAMP								2
8	10-3058-2	. VALVE, 6 IN. DIA AIR SHUTOFF (OPTIONAL BAC SPEC NO. 10-3058)							0150	2
8	10-3058	. VALVE, 6 IN. DIA AIR SHUTOFF							0150	2
		(OPTIONAL TO BAC SPEC NO. 10-3058-2)								
8	10-3058-1	. VALVE, 6 IN. DIA AIR SHUTOFF							5199	2
9	321662-1-1	. VALVE, SHUTOFF (V99193)								1
10	65-32290-4	. DUCT ASSY, CABIN EMERGENCY AIR CONTROL								1
11	BACD4088-8-5-36	. DUCT								1
12	65-32290-5	. DUCT ASSY, CABIN EMERGENCY AIR CONTROL								1
13	65-4321-1	. DUCT ASSY, BUTTOCK LINE 58 TO CROSSOVER COMPRESSED								1
		AIR								
14	65-4321-15	. DUCT ASSY, BUTTOCK LINE 58 TO CROSSOVER COMPRESSED								1
		AIR								
15	65-4321-13	. DUCT ASSY, BUTTOCK LINE 58 TO CROSSOVER COMPRESSED								1
		AIR								
17A	65-4322-16	. DUCT ASSY								1
18	65-4323-1	. DUCT ASSY, CROSSOVER TO PACK SHUTOFF VALVE COMPRESSED								1
		AIR								
19	65-4323-2	. DUCT ASSY, CROSSOVER TO PACK SHUTOFF VALVE COMPRESSED								1
		AIR								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										


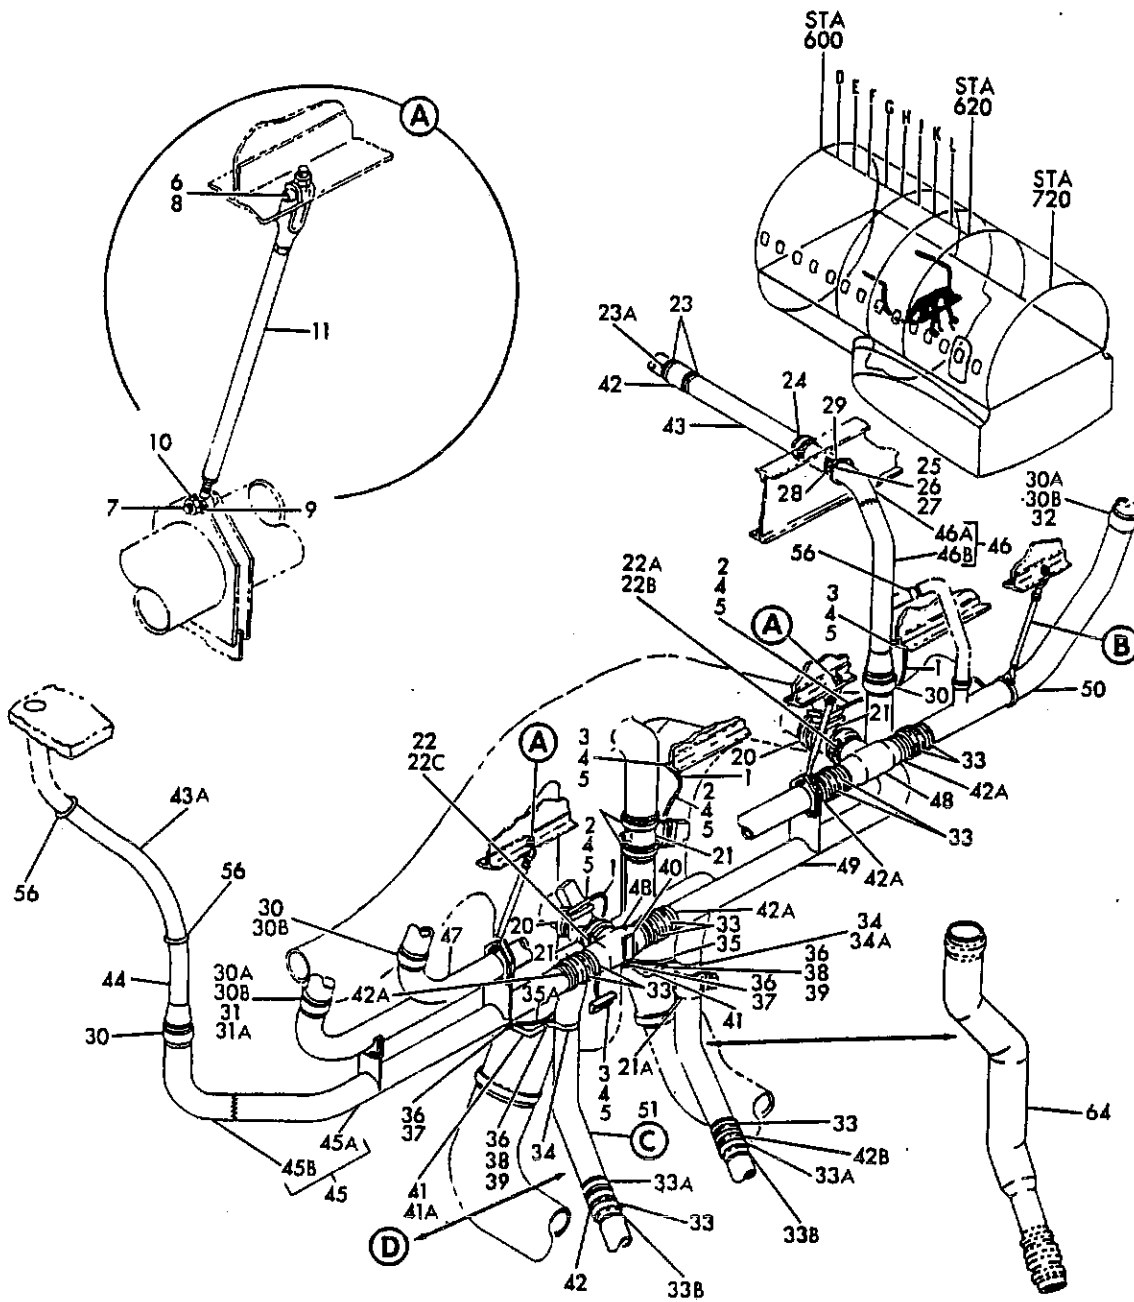


FIGURE 32A. DUCT INSTL, STATION 600H TO 600K ZONE HEATING (SHEET 1)

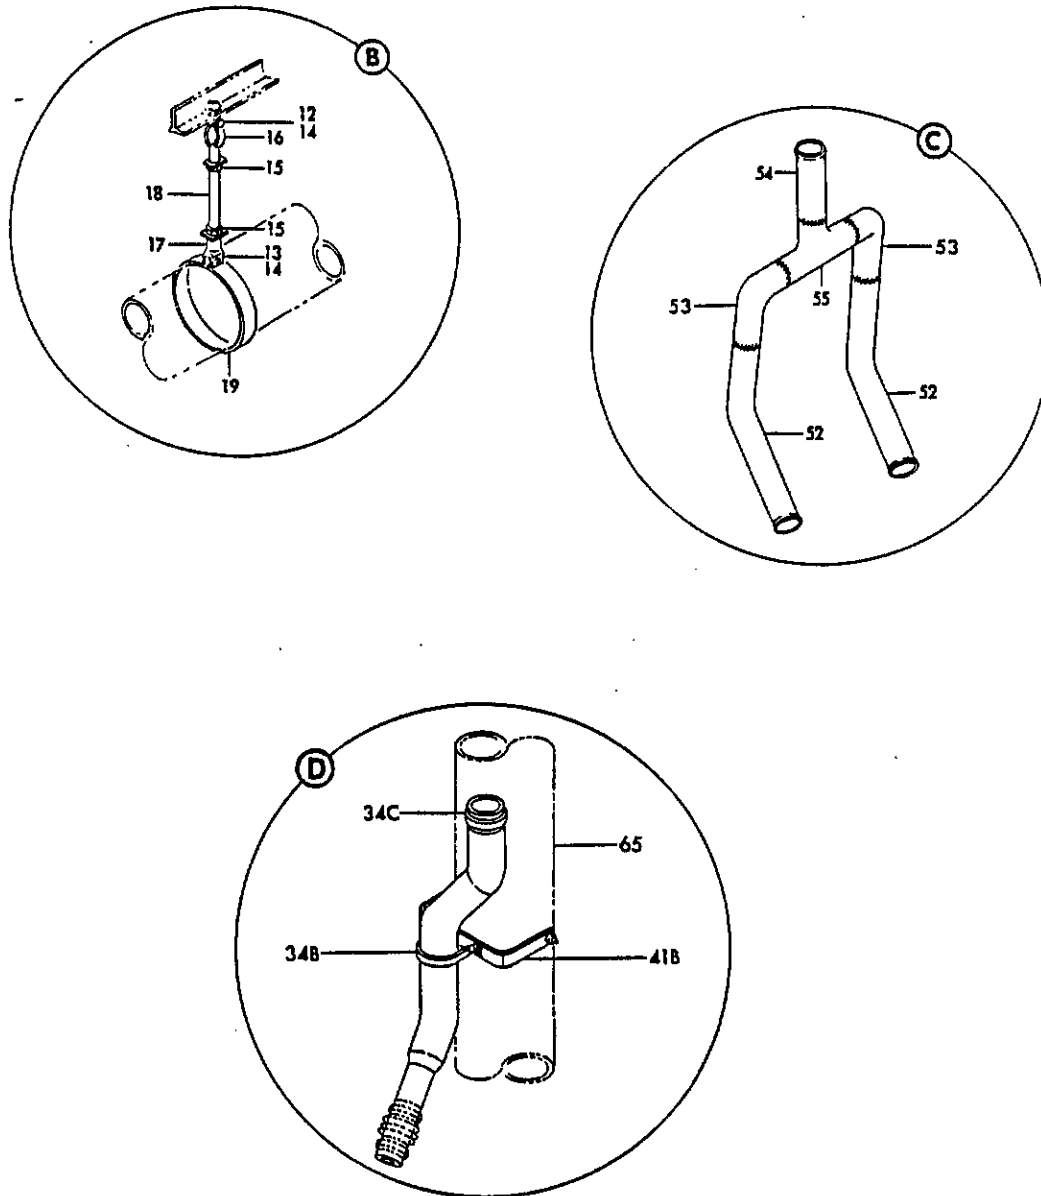

A 210432A SHT 2 REV 266

FIGURE 32A. DUCT INSTL, STA 600H TO 600K ZONE HEATING (SHEET 2)

NOV 21/95

21-04-32A

DETAILED PARTS LIST
21-04-32A
PAGE 1

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
32A	65-58367-1	DUCT INSTL, STATION 600H TO 600K ZONE HEATING (SEE. . . 21-2, FIG. 2, ITEM 9B)		RF
1	MS25083-2B820	. JUMPER ASSY.		3
2	NAS603-6P	. ATTACHING PARTS		3
3	NAS603-8P	. SCREW		3
4	AN960D10L	. SCREW		12
5	BACN10JC3	. WASHER.		6
		. NUT		
6	MS20392-2C11	. PIN		2
7	BACB30NE3-10	. BOLT.		2
8	AN960-10L	. WASHER.		2
9	AN960PD10	. WASHER.		2
10	BACN10JC3	. NUT		2
11	BACR24G4A117	. ROD ASSY.		2
		(OPTIONAL BACR24L4A1379)		
11	BACR24L4A1379	. ROD ASSY.		2
		(OPTIONAL TO BACR24G4A117)		
		. ATTACHING PARTS		
	AN42B5A	. BOLT.		2
	AN960PD10L	. WASHER.		4
	BACN10JC3	. NUT		2
12	MS20392-2C11	. PIN		1
13	MS20392-2C17	. PIN		1
14	AN960-10L	. WASHER.		2
15	AN316-4R	. NUT		2
16	MS27975-4	. CLEVIS, ROD END ADJUSTING		1
17	MS27975-3	. CLEVIS, ROD END ADJUSTING		1
18	NAS354-4-1150	. ROD, CONTROL.		1
		. ATTACHING PARTS		
	AN42B5A	. BOLT.		1
	AN960PD10L	. WASHER.		2
	NAS679A3W	. NUT		1
19	AN735-40	. CLAMP		1
20	BACC10DP300A	. COUPLING.	0150	4
20	55171-300	. COUPLING, V-BAND QUICK RELEASE (V84256)	5199	4
20A	4309BA300	. COUPLING, (V94581).		2
21	43670	. VALVE, (V79294)		3
22	69-62195-3	. PLATE, PERFORATED	5199	1
22A	69-62195-4	. PLATE, PERFORATED	5199	1
22B	69-53454-1	. ORIFICE ASSY.		1
22C	69-53454-1	. ORIFICE ASSY.		1
23	AN737TW74	. CLAMP		4
24	BACC10DP200A	. COUPLING.		2
25	NAS603-6P	. SCREW		2
26	AN960D10L	. WASHER.		4
27	NAS679A3W	. NUT		2
28	BACB2B17BC	. BRACKET		2
29	BACC10DW32D	. CLAMP		2
30	BACC10DP250A	. COUPLING.		3
30A	4309BA250	. COUPLING, (V94581).		2
31	66-19313-2	. PLATE, PERFORATED	0150	1
31	69-62195-1	. PLATE, PERFORATED	5199	1
32	66-19313-3	. PLATE, PERFORATED	0150	1
32	69-62195-2	. PLATE, PERFORATED	5199	1
33	AN737TW91	. CLAMP		10
33A	AN737TW91	. CLAMP		2
34	BACC10CC40	. CLAMP		2
35	BACC10AD600W	. CLAMP		1
35A	BACC10AD600W	. CLAMP		1
36	NAS679A4W	. NUT		8
37	AN960-416L	. WASHER.		8
38	NAS603-8P	. SCREW		4
39	AN960-10L	. WASHER.		4
40	65-58367-3	. TAPE, TEFLON GLASS.		1
41	69-47207-1	. BRACKET		2
42	BACD40DB-13-36	. DUCT.	5199	2
42A	BACD40B10-4-5-36	. DUCT.		4
42B	BACD40B10-4-5-36	. DUCT.		1
42C	BACD40B10-4-5-36	. DUCT.		1
43	65-56299-3	. DUCT ASSY, FORWARD.	5199	2
44	65-56299-2	. DUCT ASSY, FORWARD.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R	32A 44	65-56299-2		1
	44	361-89-60-74863-203	0150	2
		. DUCT ASSY, FORWARD (DELETED BY RAF 7211.019.225)	0150	
		. DUCT ASSY, FORWARD (MOD FROM EXISTING DUCT.		
		P/N 65-56229-2) (VS2500) (ADDED BY RAF		
		7211.019.225)		
	45	. DUCT ASSY, LEFT BUTTOCK LINE 38.70 AND 56.80.		1
	45A	. . DUCT SECTION.		1
	45B	. . DUCT SECTION.		1
	46	. DUCT ASSY, FORWARD.		1
	46A	. . DUCT SECTION.		1
	46B	. . DUCT SECTION.		1
	47	. DUCT ASSY, LEFT BUTTOCK LINE 51.50 TO RIGHT BUTTOCK .		1
		LINE 19.42		
	48	. TEE ASSY, PASSENGER CABIN		2
	49	. DUCT ASSY, FORWARD.		1
	50	. DUCT ASSY, RIGHT BUTTOCK LINE 30.42 AND 52.29		1
	51	. DUCT ASSY, AFT.		1
R	52	. . DUCT SECTION.		2
	53	. . DUCT SECTION.		2
	54	. . DUCT SECTION.		1
	55	. . DUCT SECTION.		1
	66	. CLAMP, (ADDED BY RAF 7211.019.225).	0150	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

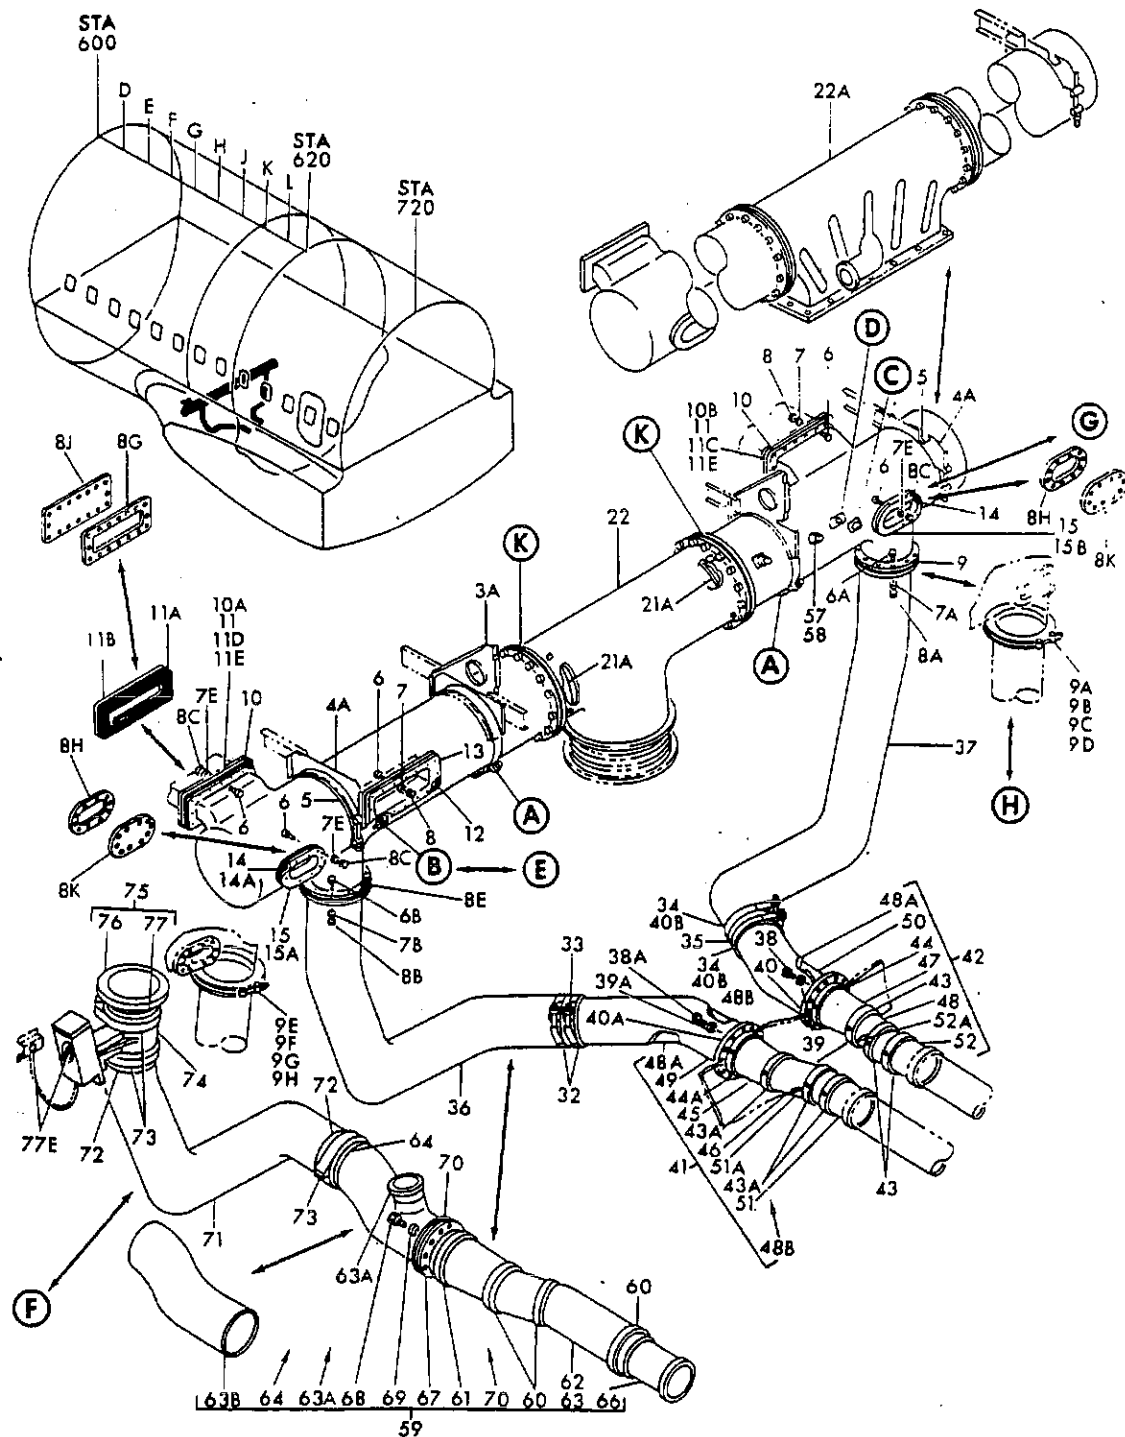


FIGURE 33. MANIFOLD INSTL, CONDITIONED AIR DISTRIBUTION (SHEET 1)

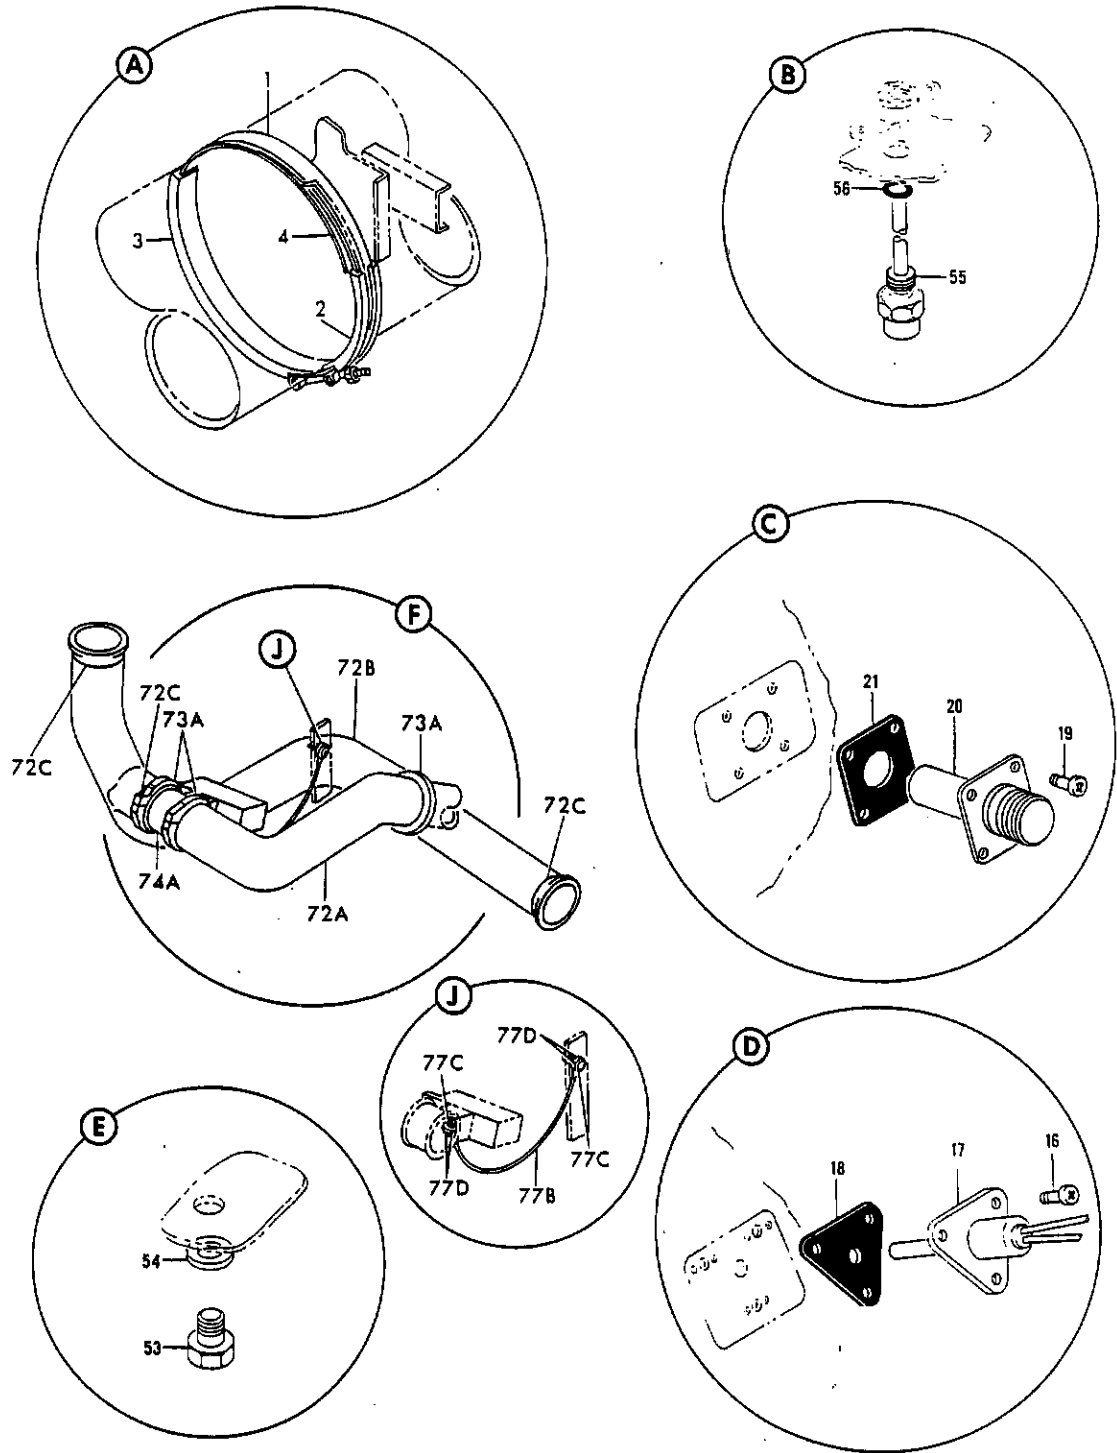


FIGURE 33. MANIFOLD INSTL, CONDITIONED AIR DISTRIBUTION (SHEET 2)

NOV 21/90

21-04-33

DETAILED PARTS LIST
21-04-33
PAGE 1

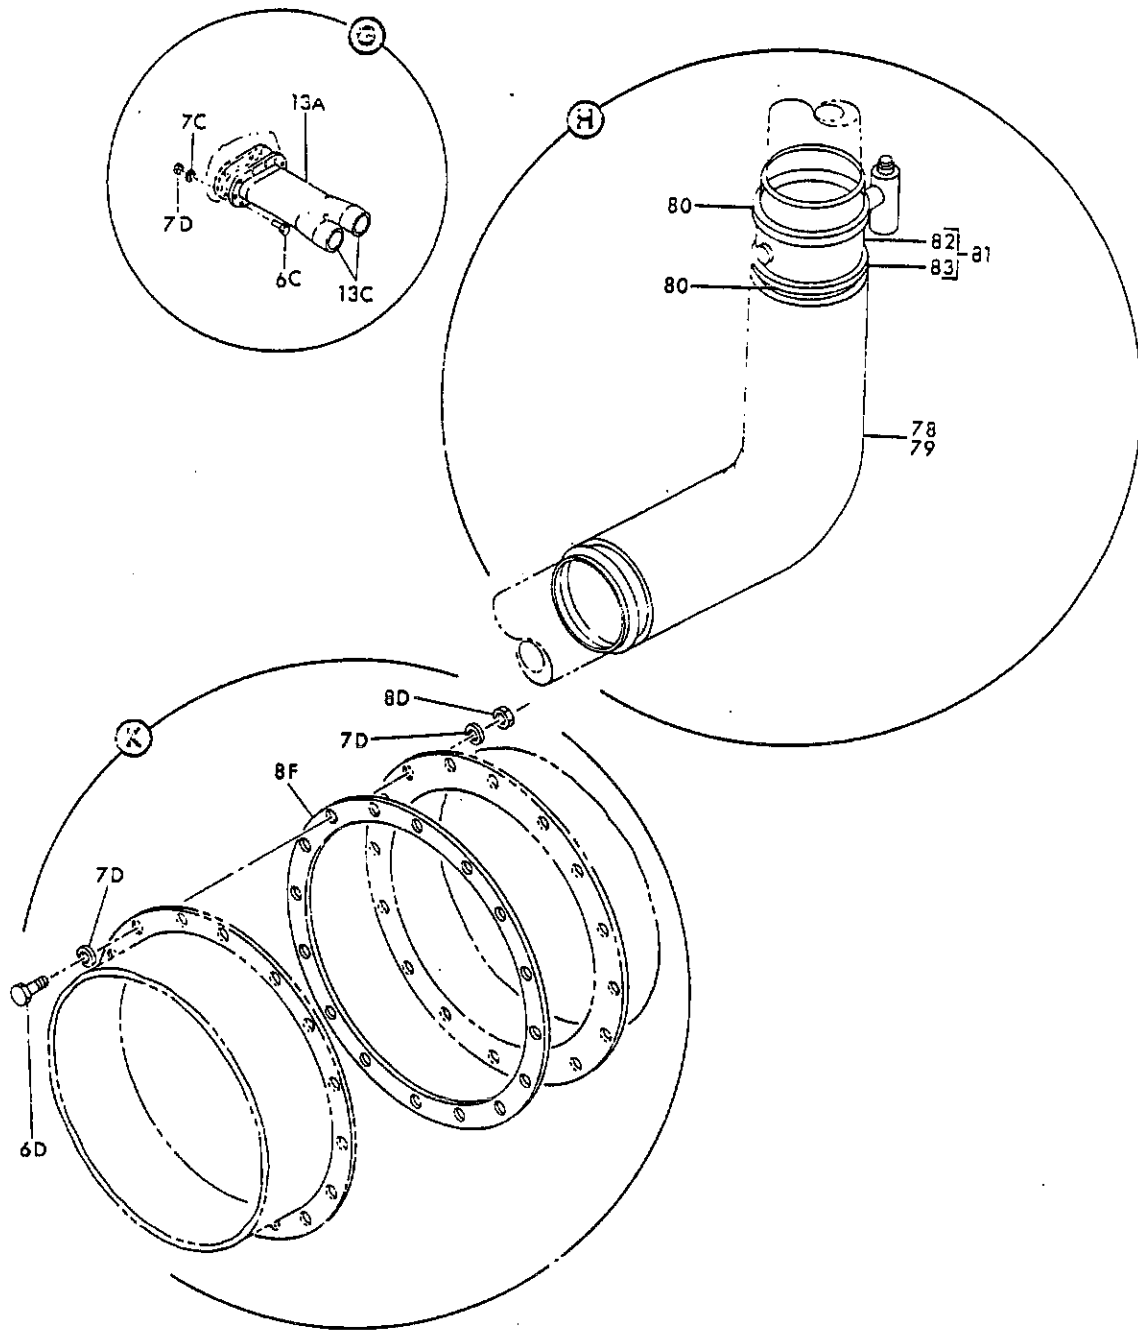


FIGURE 33. MANIFOLD INSTL, CONDITIONED AIR DISTRIBUTION (SHEET 3)

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
33	65-4306-7		MANIFOLD INSTL, CONDITIONED AIR DISTRIBUTION (SEE 21-2, FIG. 2, ITEM 9)		RF
1	BACC10P6-75-1012SH		CLAMP		2
2	65-1159-1		CUSHION, CONDITIONED AIR DISTRIBUTION MANIFOLD.		2
3	65-1159-2		CUSHION, CONDITIONED AIR DISTRIBUTION MANIFOLD.		2
3A	69-4391-7		BRACKET ASSY, CONDITIONED AIR DUCT SUPPORT.		1
3B	69-4391-8		BRACKET ASSY, CONDITIONED AIR DUCT SUPPORT.		1
4	69-2891-3		CUSHION, CONDITIONED AIR DUCT SUPPORT BRACKET FELT		1
4A	69-2891		BRACKET ASSY, CONDITIONED AIR DUCT SUPPORT.		2
5	69-2891-3		CUSHION, CONDITIONED AIR DUCT SUPPORT BRACKET FELT		1
6	AN3-5A		BOLT.		68
7	AN960D10L		WASHER.		32
7E	AN960D10L		WASHER.		36
8	NAS679A3W		NUT.		32
8C	NAS679A3W		NUT.		36
9A	50203-600		CLAMP, COUPLING (V98625).		1
9B	17237-600		SLEEVE, COUPLING (V98625)		1
9C	17351-600		RING, COUPLING (V98625)		1
9D	24170-600		RETAINER, COUPLING (V98625)		1
9E	50203-600		CLAMP, COUPLING (V98625)		1
9F	17237-600		SLEEVE, COUPLING (V98625)		1
9G	17351-600		RING, COUPLING (V98625)		1
9H	24170-600		RETAINER, COUPLING (V98625)		1
10	65-1179-4		GASKET, STATION 600H TO 620 CONDITIONED AIR DUCT.		2
11	66-37029-1		RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM.		2
12	65-1179-1		GASKET, STATION 600H TO 620 CONDITIONED AIR DUCT.		1
13	66-4932		RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM.		1
14	65-1179-5		GASKET, STATION 600H TO 620 CONDITIONED AIR DUCT.		2
15	66-4933		RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM.		2
16	NAS603-8		SCREW		3
17	10-60133-3		SWITCH, OVERHEAT DUCT		1
18	66-3478-3		GASKET, TEMPERATURE SENSOR.		1
19	NAS601-8		SCREW		4
20	10-3063-4		ELEMENT, DUCT TEMPERATURE SENSING		1
21	66-3478-2		GASKET, TEMPERATURE SENSOR.		1
22	65-12211-31		MANIFOLD ASSY, (SEE FIG. 33E)	0150	1
22	65-12211-32		MANIFOLD ASSY, (SEE FIG. 33E)	5199	1
32	BACC10BNA612LW		CLAMP		2
33	BACD40D24-13-17		DUCT.		1
34	BACC10BNA612LW		CLAMP		2
35	BACD40D24-13-17		DUCT.		1
36	69-11141-7		DUCT ASSY, AFT CABIN AIR CONDITIONING INSULATED (65-4337-7 ALTERED)		1
37	69-11141-8		DUCT ASSY, AFT CABIN AIR CONDITIONING INSULATED (65-4337-8 ALTERED)		1
38	AN3-5A		BOLT.		12
38A	AN3-5A		BOLT.		12
39	AN960D10L		WASHER.		12
39A	AN960D10-L		WASHER.		12
40	69-4651		GASKET, STATION 600K CONDITIONED AIR DUCT		1
40A	69-4651		GASKET, STATION 600K CONDITIONED AIR DUCT		1
41	65-4332-11		DUCT ASSY, (LH)		1
42	65-4332-12		DUCT ASSY, (RH)		1
43	45-22047-18-69		STRAP, (V78741)		3
43A	45-22047-18-69		STRAP, (V78741)		3
44	45-22047-21-53		STRAP, (V78741)		1
45	57-050-1		BLANKET, INSULATION (V98900) (LH ONLY).		1
46	57-050-3		BLANKET, INSULATION (V98900) (LH ONLY).		1
47	57-050-2		BLANKET, INSULATION (V98900) (RH ONLY).		1
48	57-050-4		BLANKET, INSULATION (V98900) (RH ONLY).		1
48A	65-4332-10		INSULATION.		1
51	65-4332-5		DUCT, (LH ONLY)		1
51A	65-4332-13		DUCT, (LH ONLY)		1
52	65-4332-6		DUCT, (RH ONLY)		1
52A	65-4332-14		DUCT, (RH ONLY)		1
57	MS28034-2		BULB.		1
58	BACP11K10		PACKING		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

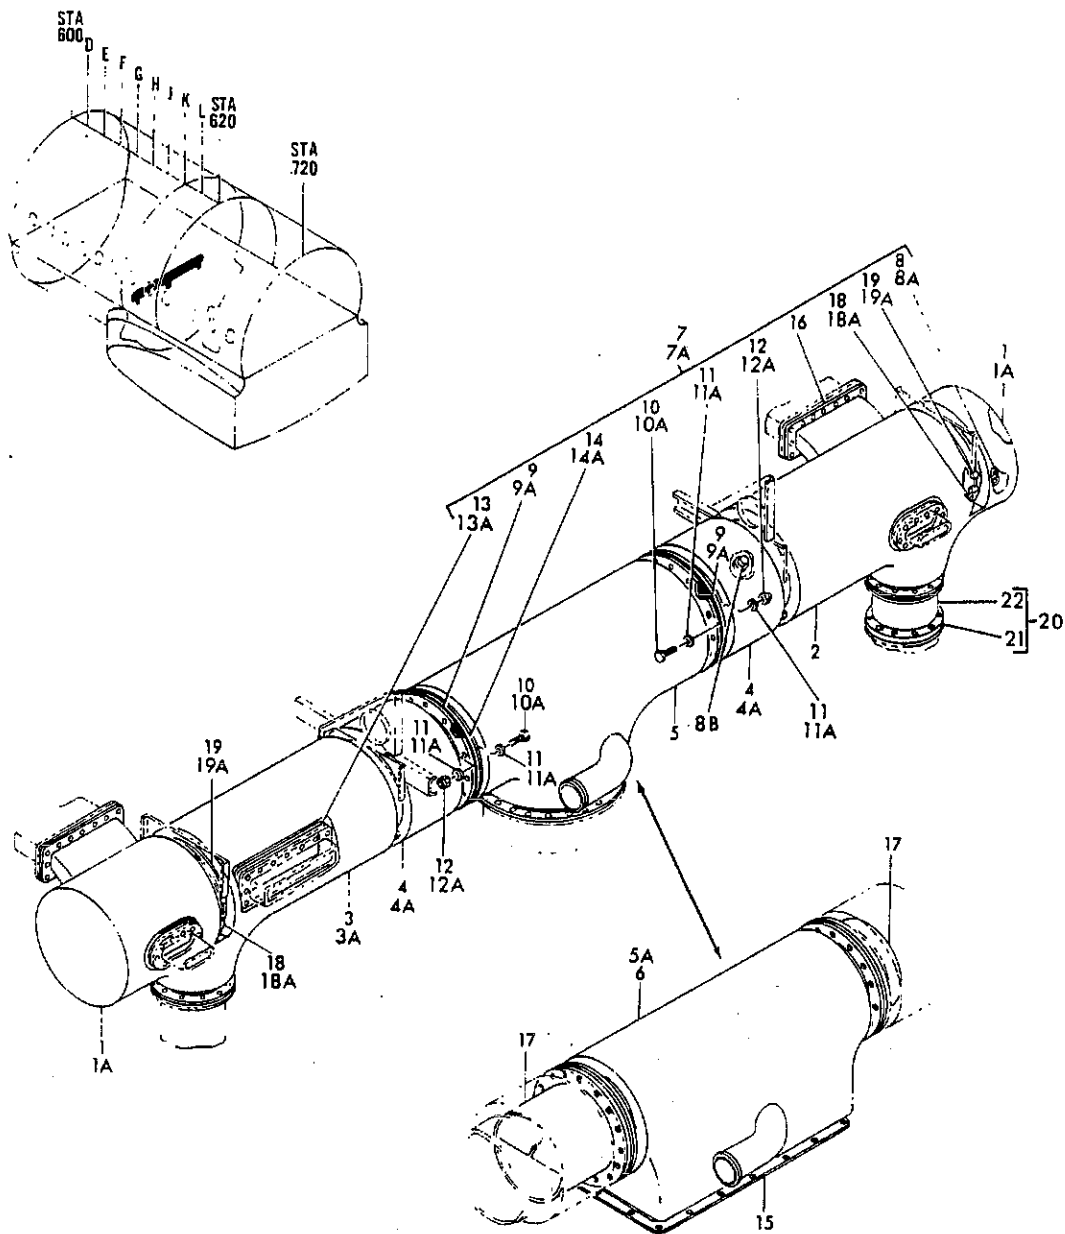


FIGURE 33E. MANIFOLD ASSY, DISTRIBUTION INSULATED

DETAILED PARTS LIST
21-04-33E
PAGE 0

21-04-33E

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R	33E	65-12211-31	MANIFOLD ASSY, DISTRIBUTION INSULATED (SEE FIG. 33, . . ITEM 22)	0150 RF
		65-12211-32	MANIFOLD ASSY, DISTRIBUTION INSULATED (SEE FIG. 33, . . ITEM 22)	5199 RF
R R	1	65-12211-1	. INSULATION.	2
	2	65-12211-4	. INSULATION.	1
R R	3	65-12211-2	. INSULATION.	1
	4	65-12211-11	. INSULATION.	2
R R	5	65-12211-6	. INSULATION.	1
	7	65-1160-47	. MANIFOLD ASSY, CONDITIONED AIR.	0150 1
R R	7	65-1160-46	. MANIFOLD ASSY, CONDITIONED AIR.	5199 1
	8	BACF22P6	. FLANGE.	1
R R		MS20470A4-7	. ATTACHING PARTS . RIVET	8
	9	65-1179-3	. GASKET.	2
R R	10	AN3-5A	. BOLT.	32
	11	AN960D10L	. WASHER.	64
R R	12	NAS679A3W	. NUT	32
	13	65-1160-28	. MANIFOLD, LH SECTION.	1
R R	14	65-1160-44	. MANIFOLD, CENTER SECTION.	1
	14	65-1160-45	. MANIFOLD, CENTER SECTION.	1
R R	16	65-1160-30	. MANIFOLD, RH SECTION.	1
	18	50232-10	. STRAP ASSY, T BOLT HALF (V98625). (OPTIONALS 1683-3 (V94581) 12742-12 (V00671))	2
R R	18	1683-3	. STRAP ASSY, T BOLT HALF (V94581). (OPTIONAL TO 50232-10 (V98625))	2
	18	12742-12	. STRAP ASSY, T BOLT HALF (V00671). (OPTIONAL TO 50232-10 (V98625))	2
R R	19	50232-12	. STRAP ASSY, T BOLT HALF (V98625). (OPTIONALS 1683-2 (V94581) 12742-10 (V00671))	2
	19	1683-2	. STRAP ASSY, T BOLT HALF (V94581). (OPTIONAL TO 50232-12 (V98625))	2
R R	19	12742-10	. STRAP ASSY, T BOLT HALF (V00671). (OPTIONAL TO 50232-12 (V98625))	2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

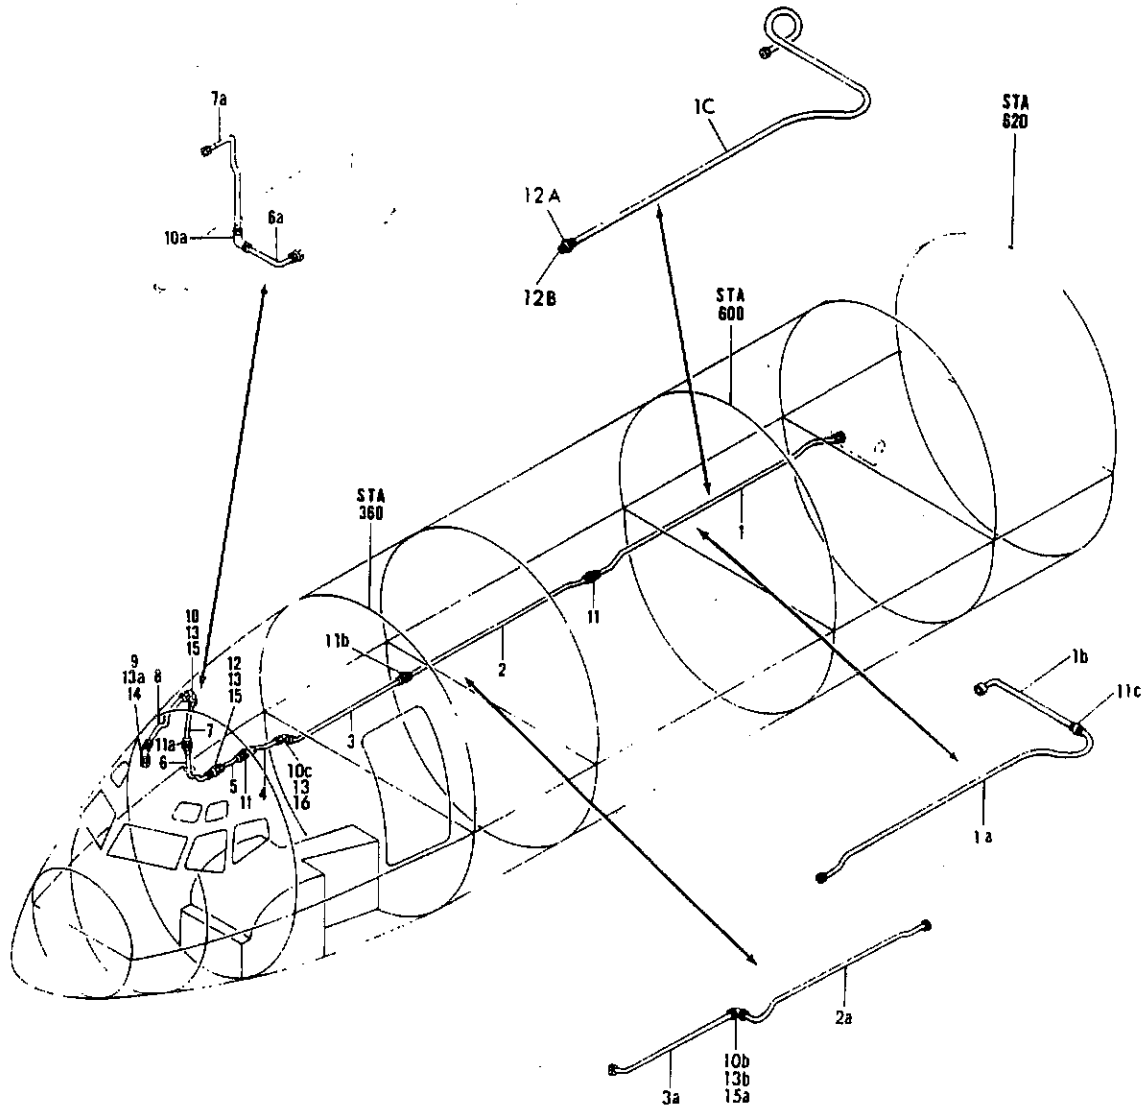


FIGURE 34. INDICATING SYSTEM INSTL. DISTRIBUTION MANIFOLD PRESSURE

BOEING **707**
Intercontinental

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
34	65-20785-1	INDICATING SYSTEM INSTL, DISTRIBUTION MANIFOLD PRESSURE (SEE 21-2, FIG. 2, ITEM 26)		RF
1	65-20785-2	. TUBE ASSY, PRESSURE SENSING 3/8 IN. .028 6061-T6. . .		1
2A	65-20785-14	. TUBE ASSY, PRESSURE SENSING 3/8 .028 6061-T6.		1
3A	65-20785-15	. TUBE ASSY, PRESSURE SENSING 3/8 .028 6061-T6.		1
4	65-20785-5	. TUBE ASSY, PRESSURE SENSING 3/8 .028 6061-T6.		1
5	65-20785-6	. TUBE ASSY, PRESSURE SENSING 3/8 .028 6061-T6.		1
6A	65-20785-12	. TUBE ASSY, PRESSURE SENSING 3/8 .028 6061-T6.		1
7A	65-20785-13	. TUBE ASSY, PRESSURE SENSING 3/8 .028 6061-T6.		1
	MS21921-6D	. NUT		2
	BACS13AP6	. SLEEVE.		2
	MS21922-6	. SLEEVE. (OPTIONAL MS21922-6)		2
		(OPTIONAL TO BACS13AP6)		
R	8	. HOSE ASSY	5199	1
R	8	. HOSE ASSY	0150	1
	9	. ELBOW, (V92003, OPTIONAL V88334).		1
	10	. ELBOW		1
	10A	. ELBOW		1
	10B	. ELBOW		1
R	10C	. ELBOW	5199	1
	10C	. ELBOW		1
	11	. UNION		2
	12	. UNION		1
	13	. NUT		3
	13A	. NUT		1
	13B	. NUT		1
	14	. PACKING		1
	15	. WASHER.		2
	15A	. WASHER.		1
	16	. WASHER.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				


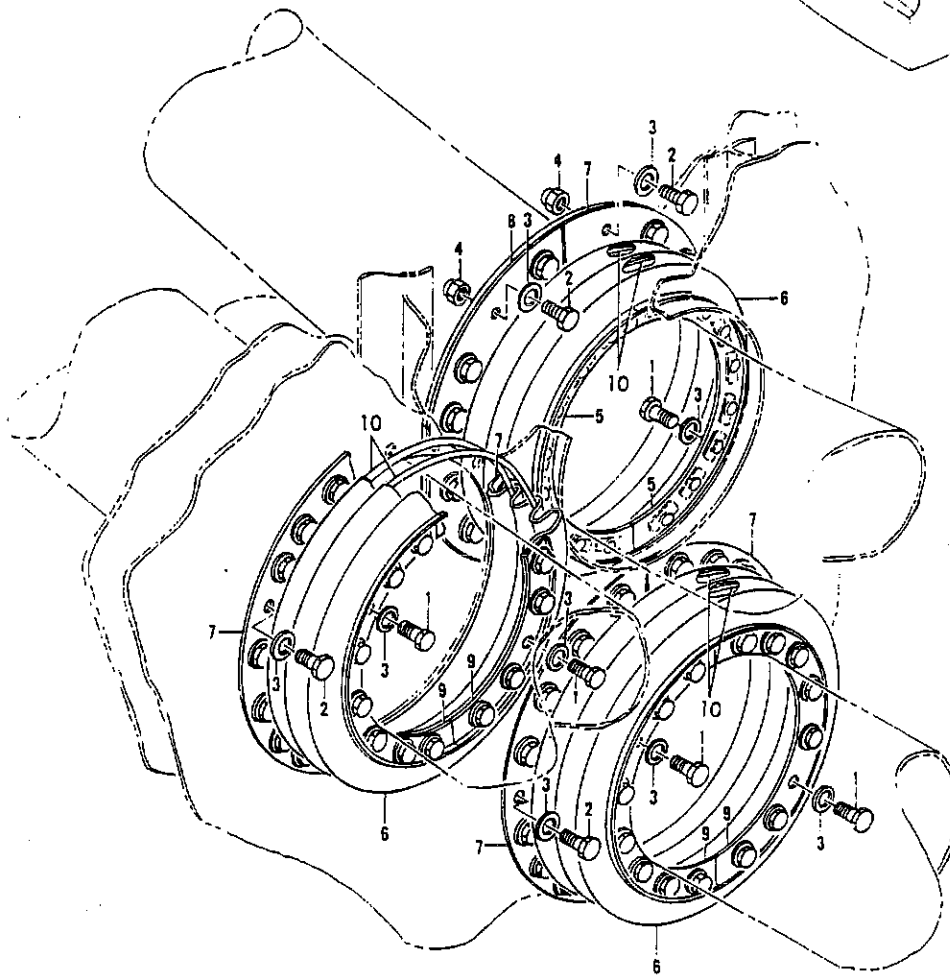


FIGURE 35 SEAL INSTL. STATION 600K FLEXIBLE

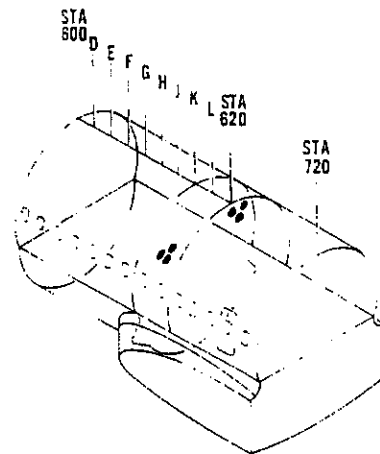

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
35	65-4310-1		SEAL INSTL, STATION 600K FLEXIBLE (LH) (SEE 21-2, FIG. 2, ITEM 17)		RF
	65-4310-2		SEAL INSTL, STATION 600K FLEXIBLE (RH) (SEE 21-2, FIG. 2, ITEM 17A)		RF
1	AN3-4A	.	BOLT.		48
2	AN3-5A	.	BOLT.		48
3	AN960D10	.	WASHER.		96
4	BACN108Y59W	.	NUT		16
5	65-2430	.	RING ASSY, PRESSURE SEAL.		2
6	10-3274-6	.	SEAL, PRESSURE FLEXIBLE		3
7	65-2430-11	.	RING, PRESSURE SEAL HALF.		5
8	65-2430-12	.	RING, PRESSURE SEAL HALF.		1
9	65-2430-7	.	RING, PRESSURE SEAL HALF.		4
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

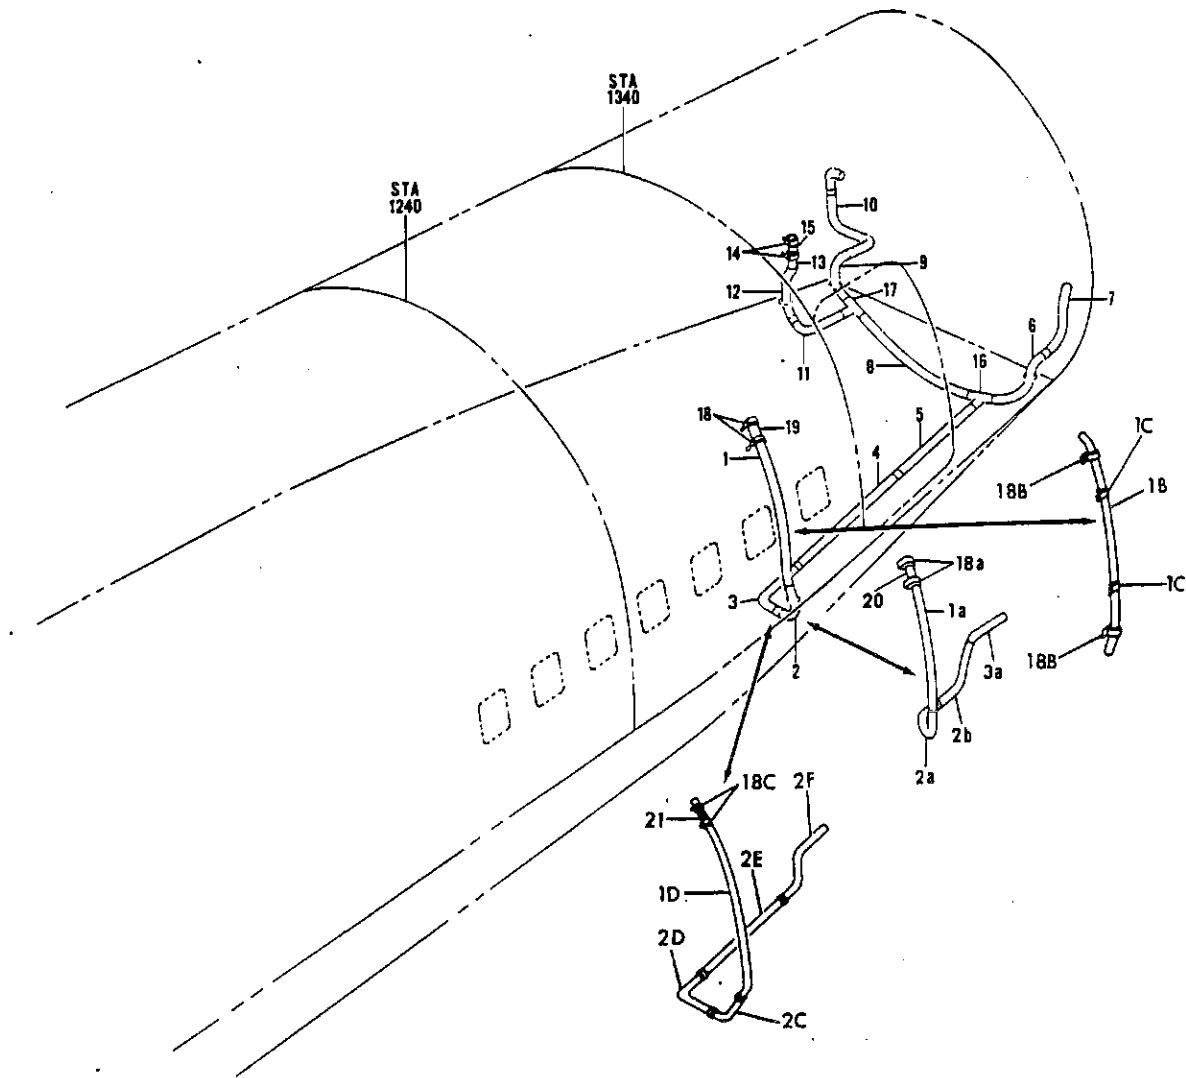


FIGURE 38. OUTLET SYSTEM INSTL. SECTION 57 INDIVIDUAL AIR

BOEING **707** *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF	UNITS
			FROM TO	PER ASSY
R 38	65-1183-143	OUTLET SYSTEM INSTL, SECTION 57 INDIVIDUAL AIR (SEE . . .	5199	RF
R 1B	BACD40A6-288-4A4	21-2, FIG. 3, ITEM 1)		
R 2A	65-1183-140	. DUCT.	5199	1
R		. TUBE, AIR CONDITION 1-1/2 IN. .020 6061-0 (OPTIONAL .	5199	1
R		6061-T4)		
R 2B	65-1183-138	. TUBE, AIR CONDITION 1-1/2 IN. .020 6061-0 (OPTIONAL .	5199	1
R		6061-T4)		
R 3A	65-1183-130	. TUBE, AIR CONDITION 1-1/2 IN. .020 6061-0 (OPTIONAL .	5199	1
R		6061-T4)		
R 4	65-1183-37	. TUBE, AIR CONDITION 1-1/2.020 6061-0 (OPTIONAL. . . .	5199	1
R		6061-T4)		
R 5	65-1183-80	. TUBE, AIR CONDITION 1-1/2.020 6061-0 (OPTIONAL. . . .	5199	1
R		6061-T4)		
R 6	65-1183-81	. TUBE, AIR CONDITION 1.016 6061-0 (OPTIONAL 6061-T4) .	5199	1
R 7	65-1183-85	. TUBE, AIR CONDITION 1.016 (OPTIONAL .035) 6061-0. . .	5199	1
R		(OPTIONAL 6061-T4)		
R 8	65-1183-59	. TUBE, AIR CONDITION 1.016 (OPTIONAL .035) 6061-0. . .	5199	1
R		(OPTIONAL 6061-T4)		
R 9	65-1183-60	. TUBE, AIR CONDITION 1.016 (OPTIONAL .035) 6061-0. . .	5199	1
R		(OPTIONAL 6061-T4)		
R 10	65-1183-82	. TUBE, AIR CONDITION 1.016 (OPTIONAL .035) 6061-0. . .	5199	1
R		(OPTIONAL 6061-T4)		
R 11	65-1183-122	. TUBE, AIR CONDITION 1.016 6061-0 (OPTIONAL 6061-T4) .	5199	1
R 12	65-1183-123	. TUBE, AIR CONDITION 1.016 6061-0 (OPTIONAL 6061-T4) .	5199	1
R 13	66-19275-1	. DUCT, INDIVIDUAL AIR OUTLET TRANSITION.	5199	1
R 14	AN737TW30	. CLAMP	5199	2
R 15	BACD40D3-10-4	. DUCT.	5199	1
R 16	66-3896	. TEE, AFT TOILETS INDIVIDUAL AIR OUTLET DUCT	5199	1
R 17	66-3895	. TEE, CREW COMPARTMENT INDIVIDUAL AIR OUTLET DUCT. . .	5199	1
R 18B	AN737TW58	. CLAMP	5199	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

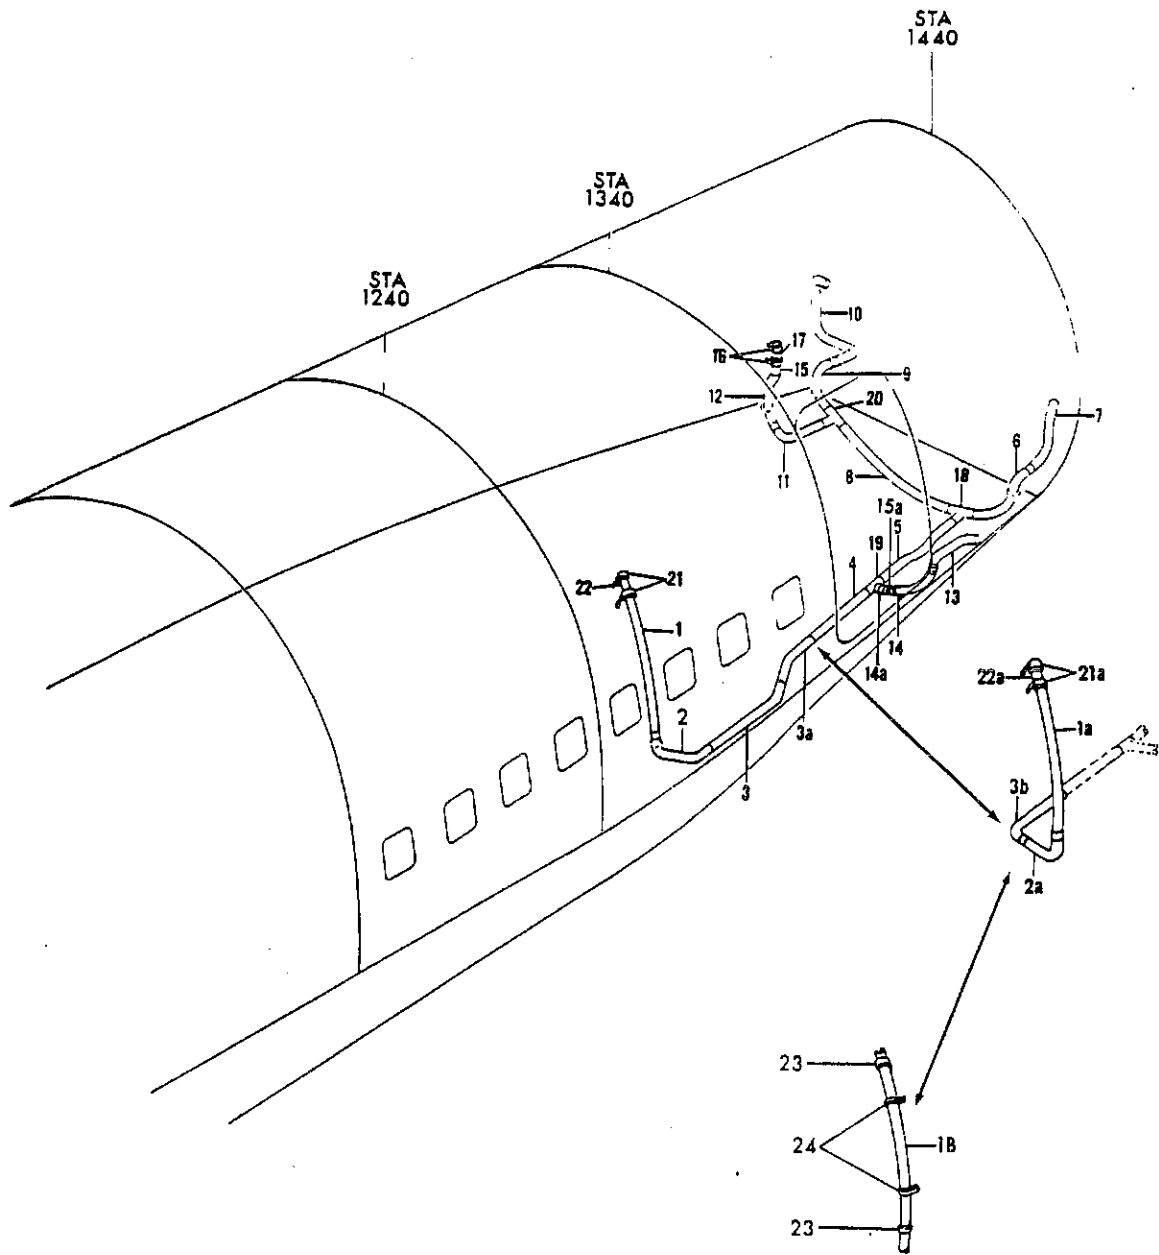


FIGURE 38A. OUTLET SYSTEM INSTL, SECTION 57 INDIVIDUAL AIR

MISSING ITEM NUMBERS ARE NOT APPLICABLE

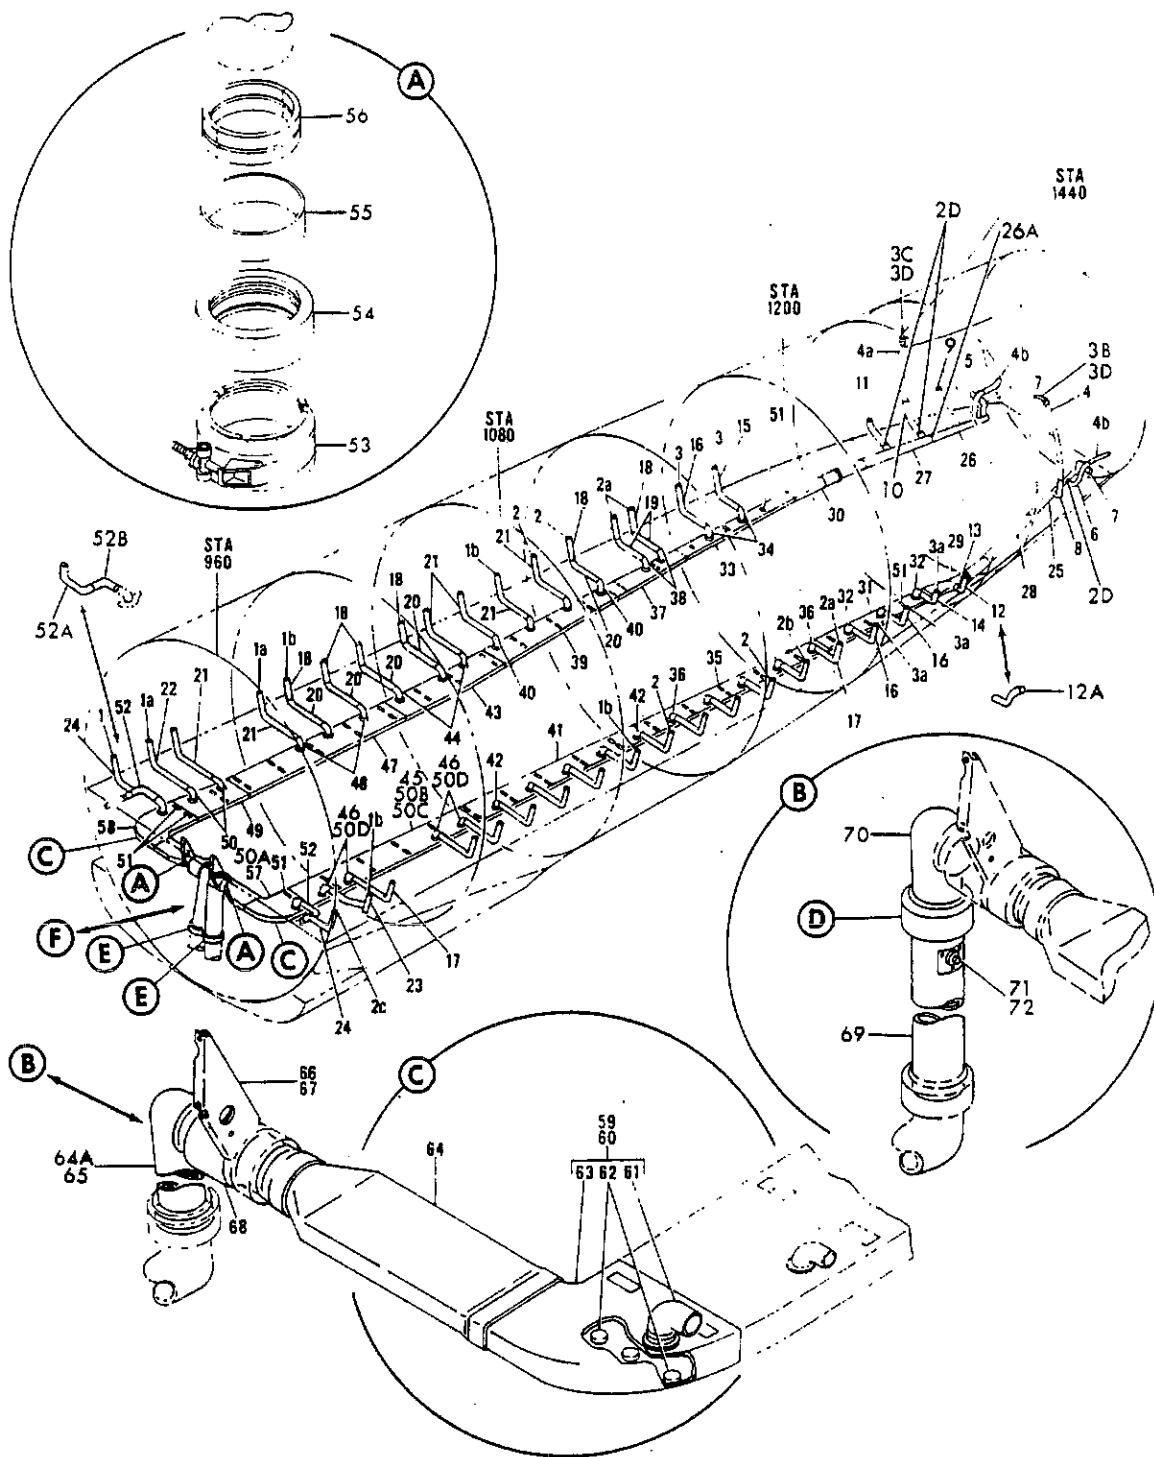


FIGURE 41. DUCT INSTL. SECTION 57 AIR CONDITIONING DISTRIBUTION (SHEET 1)

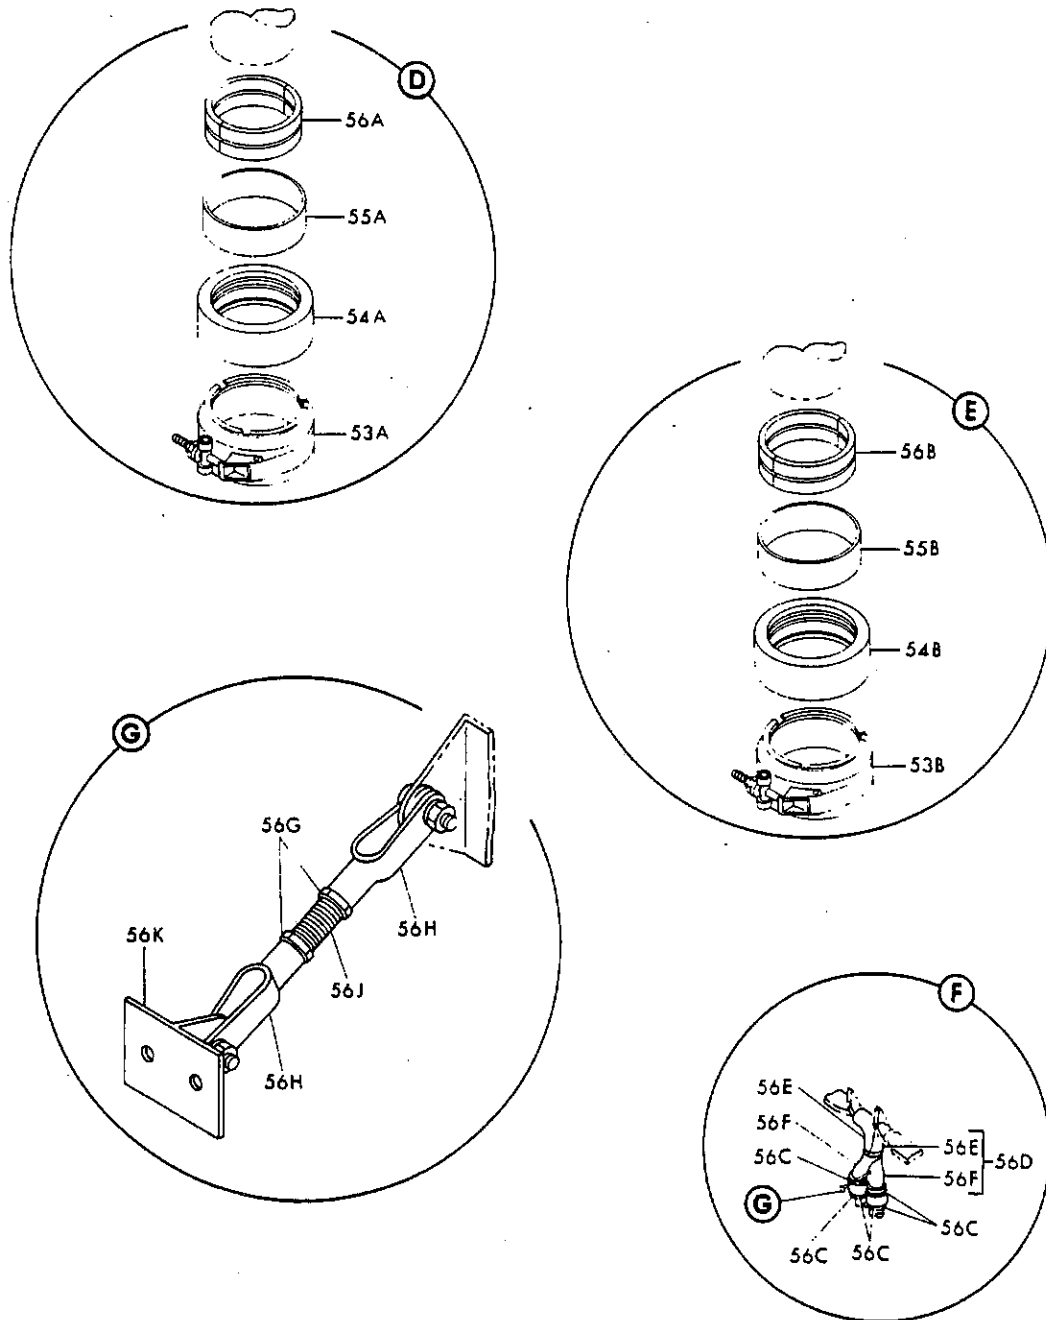


FIGURE 4L DUCT INSTL, SECTION 57 AIR CONDITIONING DISTRIBUTION (SHEET 2)

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
41	65-3338-19		DUCT INSTL, SECTION 57 AIR CONDITIONING DISTRIBUTION. . (SEE 21-2, FIG. 3, ITEM 4)		RF
1	66-4895-6		. RESTRICTOR, DISTRIBUTION SYSTEM 1.50 IN. DIA DUCT . .		1
1A	66-4895-6		. RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM 1.50 IN. DIA DUCT		3
1B	66-4895-6		. RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM 1.50 IN. DIA DUCT		15
2	66-4895-6		. RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM 1.50 IN. DIA DUCT		6
2A	66-4895-5		. RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM 1.50 IN. DIA DUCT		3
2B	66-4895-5		. RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM 1.50 IN. DIA DUCT		1
2C	66-4895-6		. RESTRICTOR, DISTRIBUTION SYSTEM 1.50 IN. DIA DUCT . .		1
3	66-4895-4		. RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM 1.50 IN. DIA DUCT		2
3A	66-4895-4		. RESTRICTOR, AIR CONDITIONING DISTRIBUTION SYSTEM 1.50 IN. DIA DUCT		3
3B	69-29125-7		. OUTLET ASSY, AIR DISTRIBUTION SYSTEM.		1
3C	69-29125-8		. OUTLET ASSY, AIR DISTRIBUTION SYSTEM.		1
4	65-3338-21		. DUCT, SECTION 57 AIR CONDITIONING DISTRIBUTION. . . .		1
4A	65-3338-22		. DUCT, SECTION 57 AIR CONDITIONING DISTRIBUTION. . . .		1
	NAS603-28		ATTACHING PARTS . SCREW		4
4B	66-9922		. DUCT, SECTION 57 AIR DISTRIBUTION		2
5	69-17071		. DUCT, SECTION 57 AIR DISTRIBUTION		1
6	69-17071-1		. DUCT, SECTION 57 AIR DISTRIBUTION		1
7	69-12084		. DUCT, SECTION 57 AIR DISTRIBUTION		2
8	66-16831-1		. RISER, STATION 1397.15 AIR CONDITIONING DISTRIBUTION		1
9	65-4112-1		. RISER ASSY, RH SIDE AIR CONDITIONING DISTRIBUTION . .		1
10	65-3449		. RISER ASSY, RH AIR CONDITIONING DISTRIBUTION.		1
11	69-2928-3		. RISER, AIR CONDITIONING DISTRIBUTION.		1
12	69-1015-28		. RISER		1
13	66-16736-1		. DUCT, STATION 1310 AIR DISTRIBUTION		1
14	69-1015-27		. RISER, AIR CONDITIONING DISTRIBUTION.		1
15	69-1015-7		. RISER, AIR CONDITIONING DISTRIBUTION.		1
16	69-1015-2		. RISER, AIR CONDITIONING DISTRIBUTION.		3
17	69-1015-26		. RISER, AIR CONDITIONING DISTRIBUTION.		13
18	69-1015-5		. RISER, AIR CONDITIONING DISTRIBUTION.		7
19	69-1015-4		. RISER, AIR CONDITIONING DISTRIBUTION.		2
20	69-1015-10		. RISER, AIR CONDITIONING DISTRIBUTION.		5
21	69-1015-9		. RISER, AIR CONDITIONING DISTRIBUTION.		6
22	69-1015-2		. RISER, AIR CONDITIONING DISTRIBUTION.		1
23	65-29399-2		. RISER, STATION 960M PLUS 10 AIR CONDITIONING. DISTRIBUTION		1
24	69-1015-26		. RISER		2
25	65-18261-89		. DUCT ASSY, AIR DISTRIBUTION INSULATED		1
25	65-22072-1		. . DUCT, STATION 1369 TO 1411 AIR DISTRIBUTION LH. . .		1
26	65-18261-45		. DUCT ASSY, AIR DISTRIBUTION INSULATED		1
26	65-22072		. . DUCT, STATION 1369 TO 1411 AIR DISTRIBUTION		1
27	65-18261-33		. DUCT ASSY, AIR DISTRIBUTION INSULATED		1
27	65-3299-1		. . DUCT, STATION 1332 TO 1370 AIR CONDITIONING DISTRIBUTION RH		1
28	65-18261-91		. DUCT ASSY, AIR DISTRIBUTION INSULATED		1
28	65-3299-2		. . DUCT, STATION 1332 TO 1370 AIR CONDITIONING DISTRIBUTION LH		1
29	65-18261-111		. DUCT ASSY, AIR DISTRIBUTION INSULATED		1
29	65-3365-10		. . DUCT, STATION 1295 TO 1332 AIR CONDITIONING DISTRIBUTION		1
30	65-18261-109		. DUCT ASSY, AIR DISTRIBUTION INSULATED		1
30	65-3365-5		. . DUCT, STATION 1295 TO 1332 AIR CONDITIONING DISTRIBUTION		1
31	65-18231-99		. DUCT ASSY, AIR DISTRIBUTION INSULATED		1
	NAS603-7		ATTACHING PARTS . SCREW		4
	NAS679A3W		. NUT		4
31	65-3450-4		. . DUCT ASSY, STATION 1235 TO 1296 AIR CONDITIONING. . DISTRIBUTION		1
32	69-1007		. . . DUCT ASSY, 1.50 IN. DIA AIR CONDITIONING. DISTRIBUTION TAKE-OFF (OPTIONAL 69-36133-1)		3
33	65-18231-118		. DUCT ASSY, AIR DISTRIBUTION INSULATED		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
41	NAS603-7 NAS679A3W	.	ATTACHING PARTS		4
		.	SCREW		4
		.	NUT		
33	65-3450-7	.	DUCT ASSY, STATION 1235 TO 1296 AIR CONDITIONING.		1
34	69-1007	.	DISTRIBUTION		2
		.	DUCT ASSY, 1.50 IN. DIA AIR CONDITIONING.		
		.	DISTRIBUTION TAKE-OFF		
		.	(OPTIONAL 69-36133-1)		
35	65-18231-19	.	DUCT ASSY, AIR DISTRIBUTION INSULATED		1
	NAS603-7 NAS679A3W	.	ATTACHING PARTS		6
		.	SCREW		6
		.	NUT		
35	65-3453-1	.	DUCT ASSY, STATION 1135 TO 1235 AIR CONDITIONING.		1
36	69-1007	.	DISTRIBUTION		5
		.	DUCT ASSY, 1.50 IN. DIA AIR CONDITIONING.		
		.	DISTRIBUTION TAKE-OFF		
		.	(OPTIONAL 69-36133-1)		
37	65-18231-49	.	DUCT ASSY, AIR DISTRIBUTION INSULATED		1
	NAS603-7 NAS679A3W	.	ATTACHING PARTS		2
		.	SCREW		2
		.	NUT		
37	65-7401-4	.	DUCT ASSY, STATION 1195 TO 1234.50 AIR CONDITIONING		1
38	69-1007	.	DISTRIBUTION RH		2
		.	DUCT ASSY, 1.50 IN. DIA AIR CONDITIONING.		
		.	DISTRIBUTION TAKE-OFF		
		.	(OPTIONAL 69-36133-1)		
38	69-36133-1	.	DUCT ASSY, 1.50 IN. DIA AIR CONDITIONING.		2
		.	DISTRIBUTION TAKE OFF		
		.	(OPTIONAL TO 69-1007)		
39	65-18231-46	.	DUCT ASSY, AIR DISTRIBUTION INSULATED		1
	NAS603-7 NAS679A3W	.	ATTACHING PARTS		4
		.	SCREW		4
		.	NUT		
39	65-7401-3	.	DUCT ASSY, STATION 1124 TO 1195 AIR CONDITIONING.		1
40	69-1007	.	DISTRIBUTION RH		4
		.	DUCT ASSY, 1.50 IN. DIA AIR CONDITIONING.		
		.	DISTRIBUTION TAKE-OFF		
		.	(OPTIONAL 69-36133-1)		
40	69-36133-1	.	DUCT ASSY, 1.50 IN. DIA AIR CONDITIONING.		4
		.	DISTRIBUTION TAKE OFF		
		.	(OPTIONAL TO 69-1007)		
41	65-18231-13	.	DUCT ASSY, AIR DISTRIBUTION INSULATED		1
	NAS603-7 NAS679A3W	.	ATTACHING PARTS		4
		.	SCREW		4
		.	NUT		
41	65-3452-1	.	DUCT ASSY, STATION 1038 TO 1135 AIR CONDITIONING.		1
42	69-1007	.	DISTRIBUTION		5
		.	DUCT ASSY, 1.50 IN. DIA AIR CONDITIONING.		
		.	DISTRIBUTION TAKE-OFF		
		.	(OPTIONAL 69-36133-1)		
43	65-18231-43	.	DUCT ASSY, AIR DISTRIBUTION INSULATED		1
	NAS603-7 NAS679A3W	.	ATTACHING PARTS		2
		.	SCREW		2
		.	NUT		
43	65-7401-2	.	DUCT ASSY, STATION 1065 TO 1124 AIR CONDITIONING.		1
44	69-1007	.	DISTRIBUTION RH		3
		.	DUCT ASSY, 1.50 IN. DIA AIR CONDITIONING.		
		.	DISTRIBUTION TAKE-OFF		
		.	(OPTIONAL 69-36133-1)		
44	69-36133-1	.	DUCT ASSY, 1.50 IN. DIA AIR CONDITIONING.		3
		.	DISTRIBUTION TAKE OFF		
		.	(OPTIONAL TO 69-1007)		
45	65-18231-84	.	DUCT ASSY, AIR DISTRIBUTION INSULATED		1
	NAS603-7 NAS679A3W	.	ATTACHING PARTS		4
		.	SCREW		4
		.	NUT		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
41 45	65-3451-7		. . DUCT ASSY, STATION 960M TO 1038 AIR CONDITIONING. . DISTRIBUTION		1
46	69-1007		. . . DUCT ASSY, 1.50 IN. DIA AIR CONDITIONING. DISTRIBUTION TAKE-OFF (OPTIONAL 69-36133-1)		4
47	65-18231-90		. DUCT ASSY, AIR DISTRIBUTION INSULATED ATTACHING PARTS		1
	NAS603-7		. SCREW		6
	NAS679A3W		. NUT		6
47	65-7401-12		. . DUCT ASSY, SECTION 57 AIR CONDITIONING DISTRIBUTION RH		1
48	69-1007		. . . DUCT ASSY, 1.50 IN. DIA AIR CONDITIONING. DISTRIBUTION TAKE-OFF (OPTIONAL 69-36133-1)		3
48	69-36133-1		. . . DUCT ASSY, 1.50 IN. DIA AIR CONDITIONING. DISTRIBUTION TAKE OFF (OPTIONAL TO 69-1007)		3
49	65-18231-87		. DUCT ASSY, AIR DISTRIBUTION INSULATED		1
49	65-7401-11		. . DUCT ASSY, SECTION 57 AIR CONDITIONING DISTRIBUTION RH		1
50	69-1007		. . . DUCT ASSY, 1.50 IN. DIA AIR CONDITIONING. DISTRIBUTION TAKE-OFF (OPTIONAL 69-36133-1)		2
50	69-36133-1		. . . DUCT ASSY, 1.50 IN. DIA AIR CONDITIONING. DISTRIBUTION TAKE OFF (OPTIONAL TO 69-1007)		2
51	66-2668		. STRIP, AIR CONDITIONING DISTRIBUTION DUCT RUB		66
53	50203-600		. CLAMP, COUPLING (V98625).		2
53B	50203-600		. CLAMP, COUPLING (V98625).		2
54	17237-600		. SLEEVE, COUPLING (V98625).		2
54B	17237-600		. SLEEVE, COUPLING (V98625).		2
55	17351-600		. RING, COUPLING (V98625).		2
55B	17351-600		. RING, COUPLING (V98625).		2
56	24170-600		. RETAINER, COUPLING (V98625).		2
56B	24170-600		. RETAINER, COUPLING (V98625).		2
57	65-18231-124		. DUCT ASSY, INSULATED.		1
58	65-18231-121		. DUCT ASSY, INSULATED. ATTACHING PARTS		1
	NAS603-7		. SCREW		4
	NAS679A3W		. NUT		4
59	65-3455-10		. . DUCT ASSY, STATION 966 (USED ON 65-18231-124) . . .		1
60	65-3455-9		. . DUCT ASSY, STATION 966 (USED ON 65-18231-121) . . .		1
61	69-36133-1		. . . DUCT, TAKE OFF.		1
62	66-4903-3		. . . RESTRICTOR, 1.00 DIAMETER DUCT AIR CONDITIONING DISTRIBUTION SYSTEM		3
63	65-3484		. . . DUCT ASSY, STATION 961M PLUS 3.00 AIR CONDITIONING DISTRIBUTION		1
64	65-18261-43		. DUCT ASSY, AIR DISTRIBUTION INSULATED		2
64	65-3456-1		. . DUCT, STATION 966 AIR CONDITIONING DISTRIBUTION . .		1
64A	65-18261-63		. DUCT ASSY, AIR DISTRIBUTION INSULATED		1
64A	69-2538		. . DUCT, STATION 966 AIR CONDITIONING DISTRIBUTION . .		1
65	65-18261-63		. DUCT ASSY, AIR DISTRIBUTION INSULATED		1
65	69-2538		. . DUCT, STATION 966 AIR CONDITIONING DISTRIBUTION . .		1
66	66-4974-1		. BRACKET ASSY, AIR DISTRIBUTION DUCT SUPPORT (LH). . .		1
67	66-4974-6		. BRACKET ASSY, AIR DISTRIBUTION DUCT SUPPORT (RH). . .		1
68	BACC10AG600AG		. . CLAMP		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

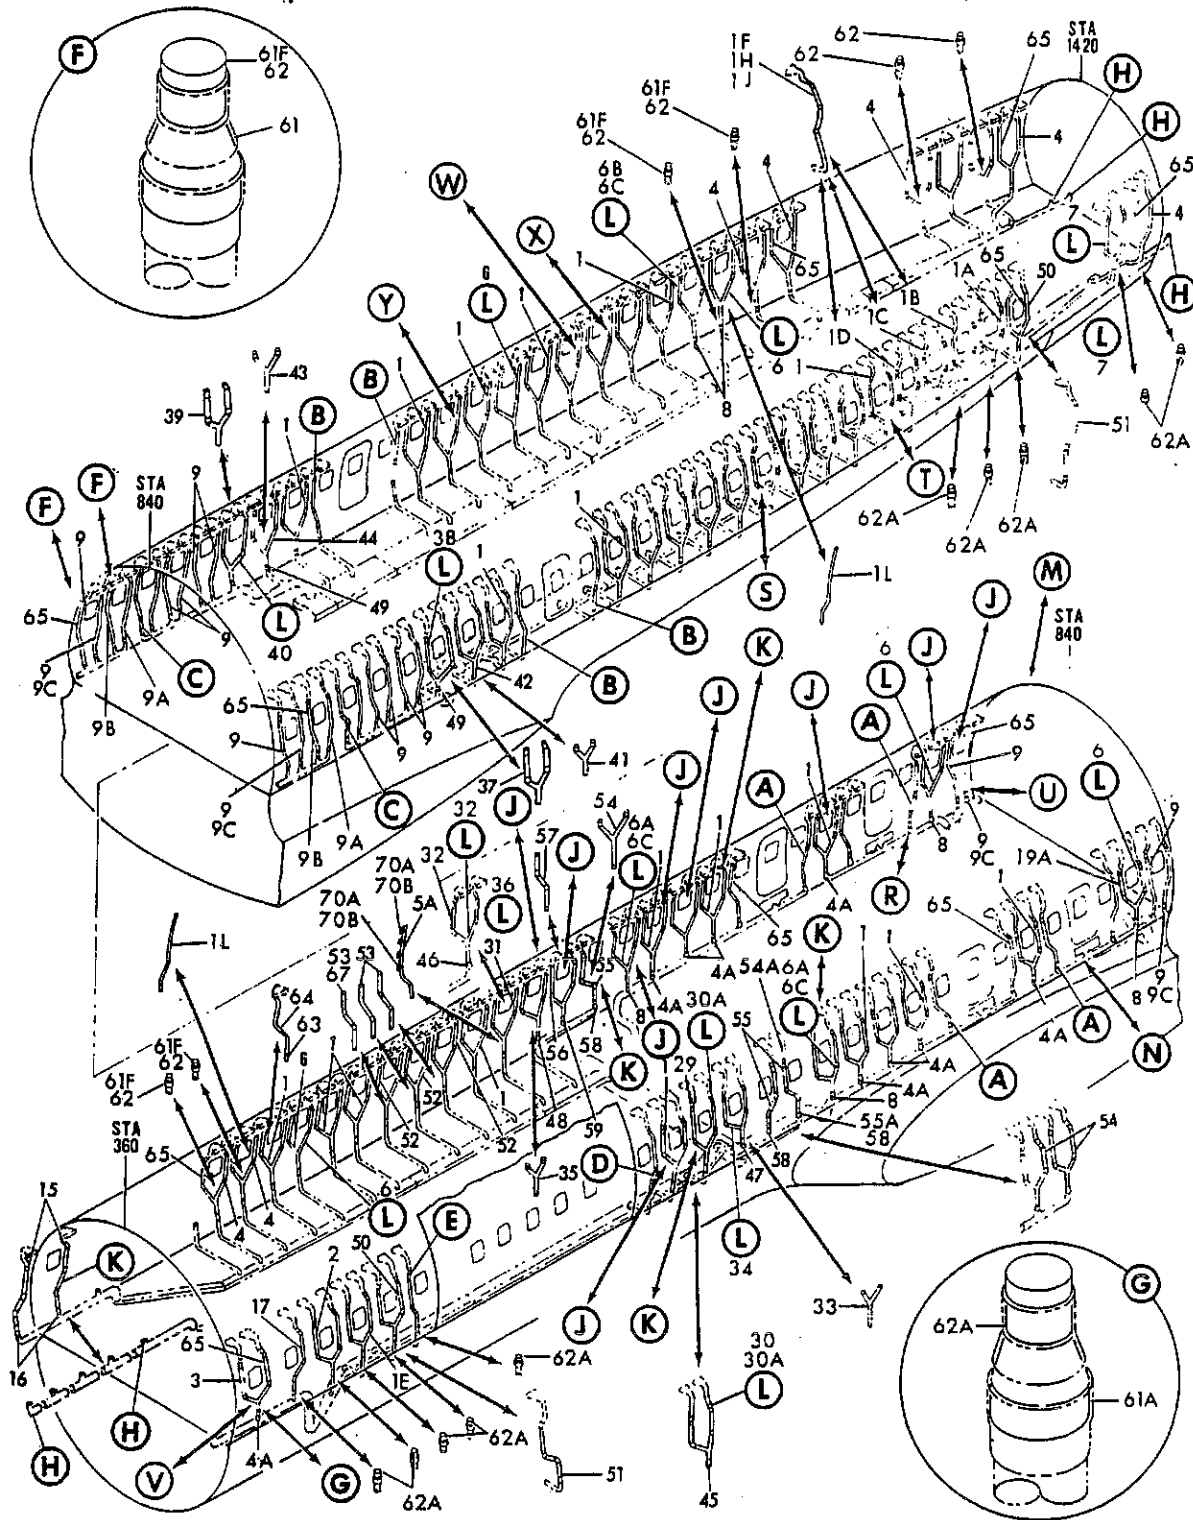


FIGURE 48A. DUCT INSTL, CABIN SIDEWALL AIR DISTRIBUTION HOTWALL (SHEET 1)

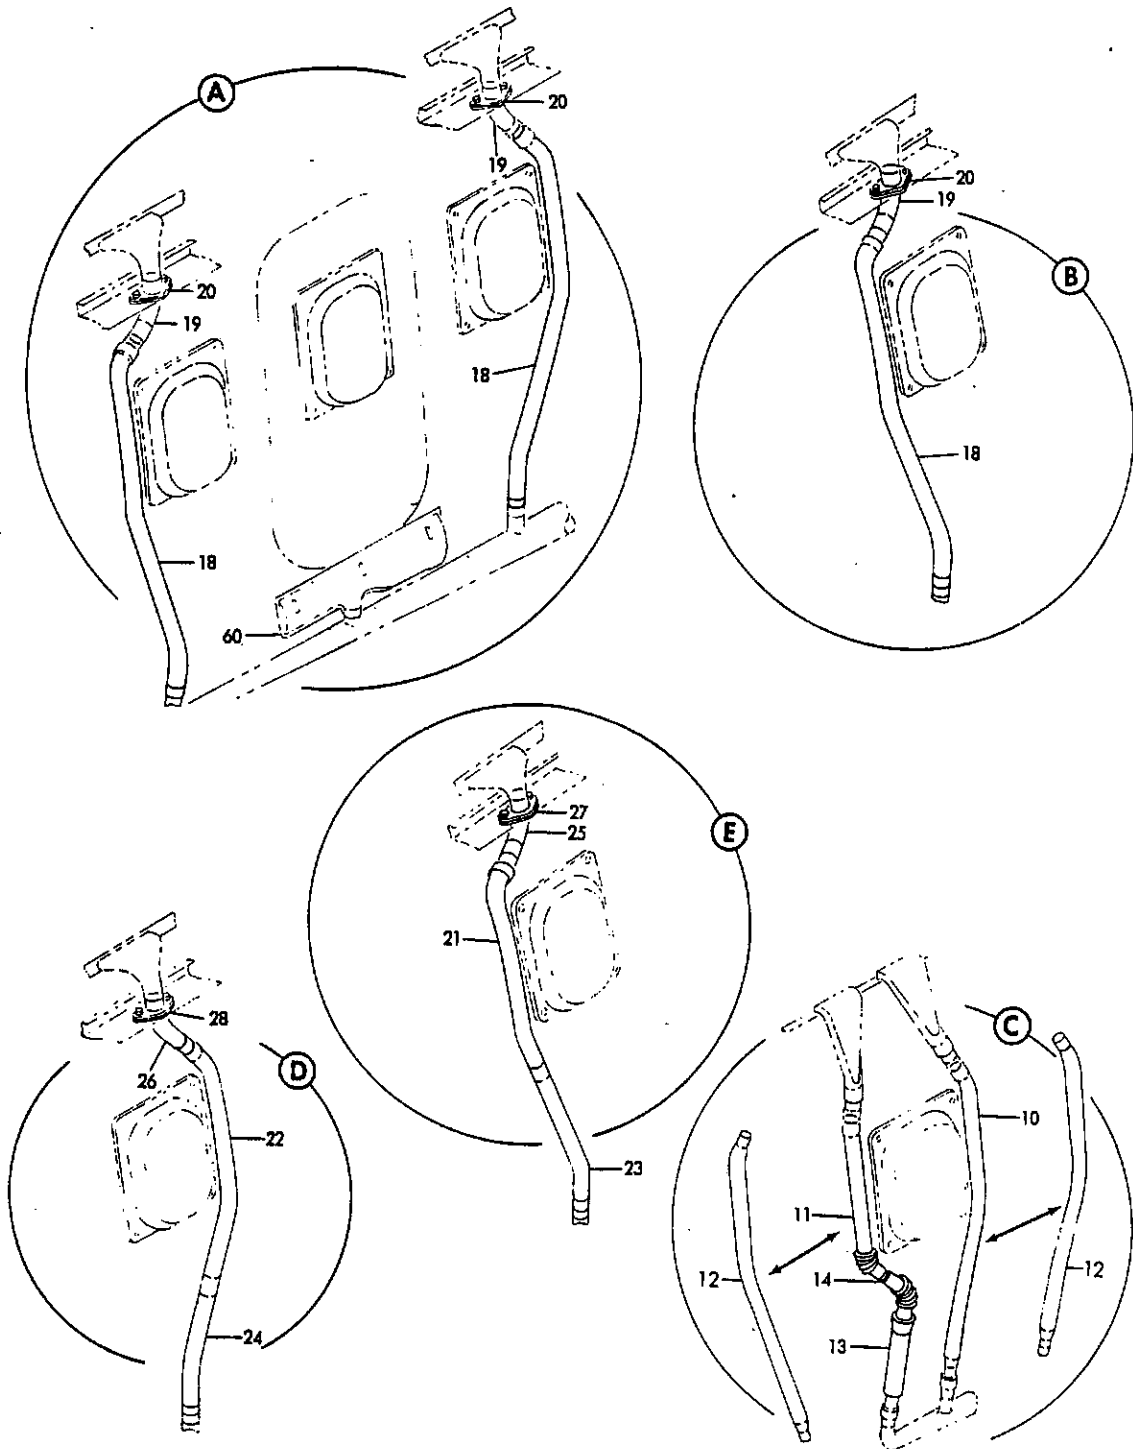


FIGURE 48A. DUCT INSTL, CABIN SIDEWALL AIR DISTRIBUTION HOTWALL (SHEET 2)

NOV 21/90

21-04-48A

DETAILED PARTS LIST
21-04-48A
PAGE 1

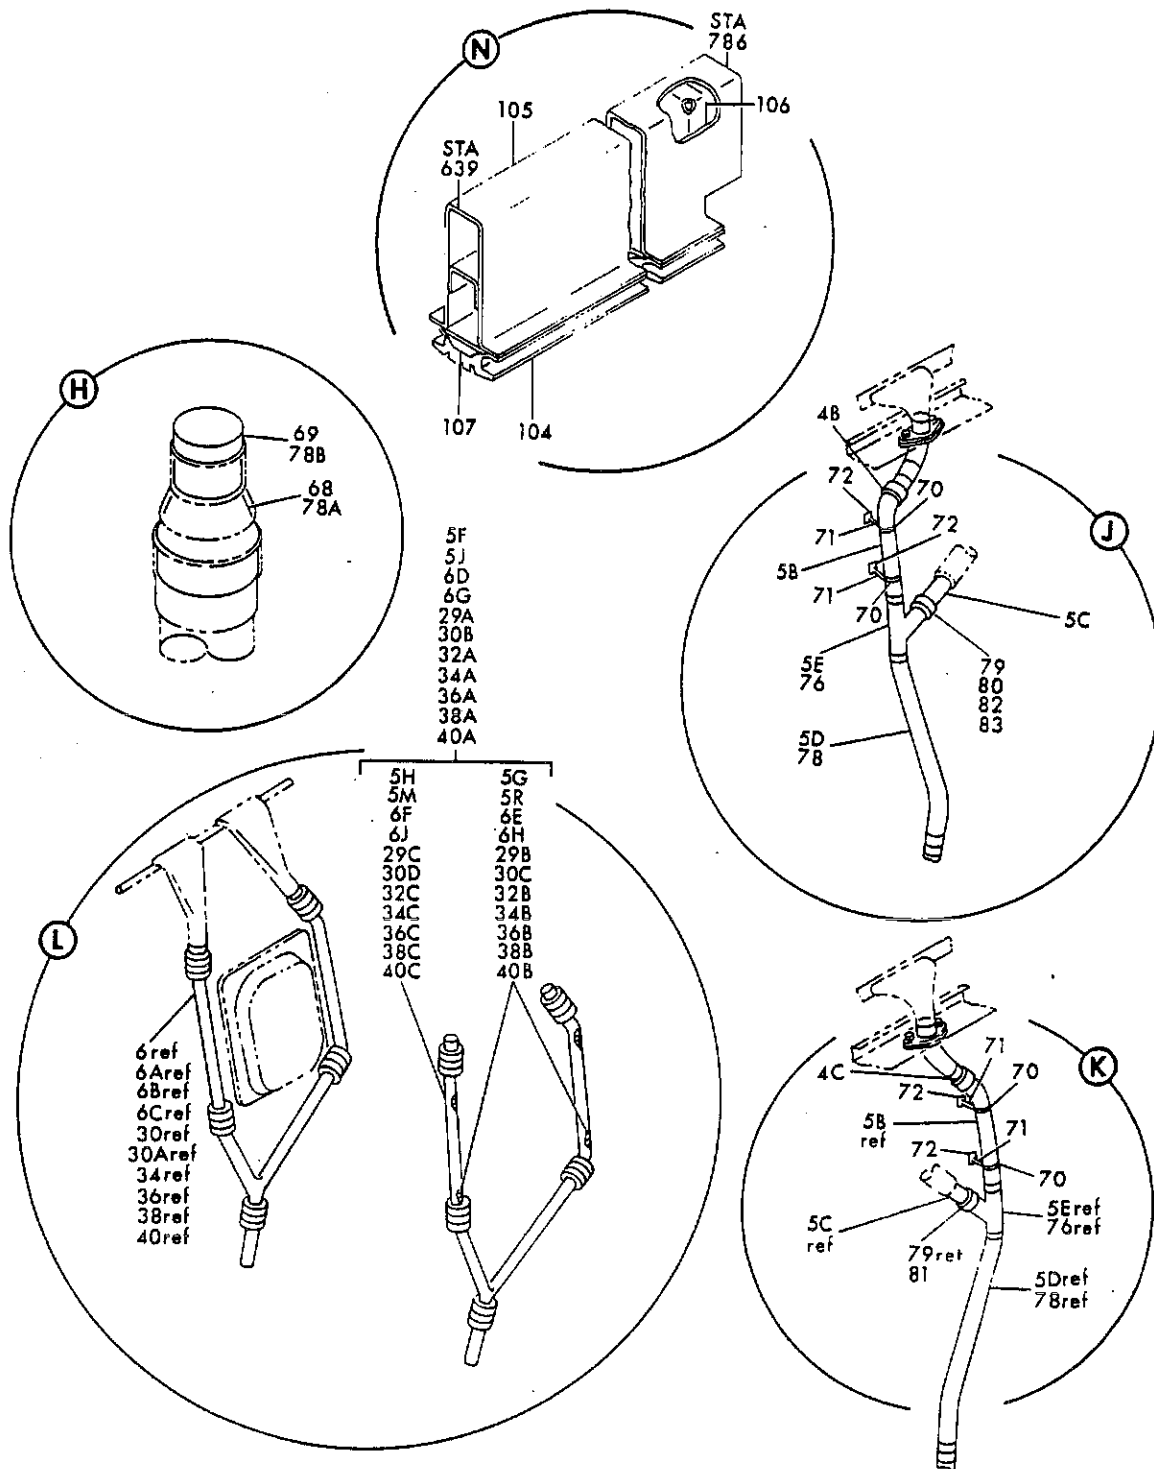


FIGURE 48A. DUCT INSTL, CABIN SIDEWALL AIR DISTRIBUTION HOTWALL (SHEET 3)

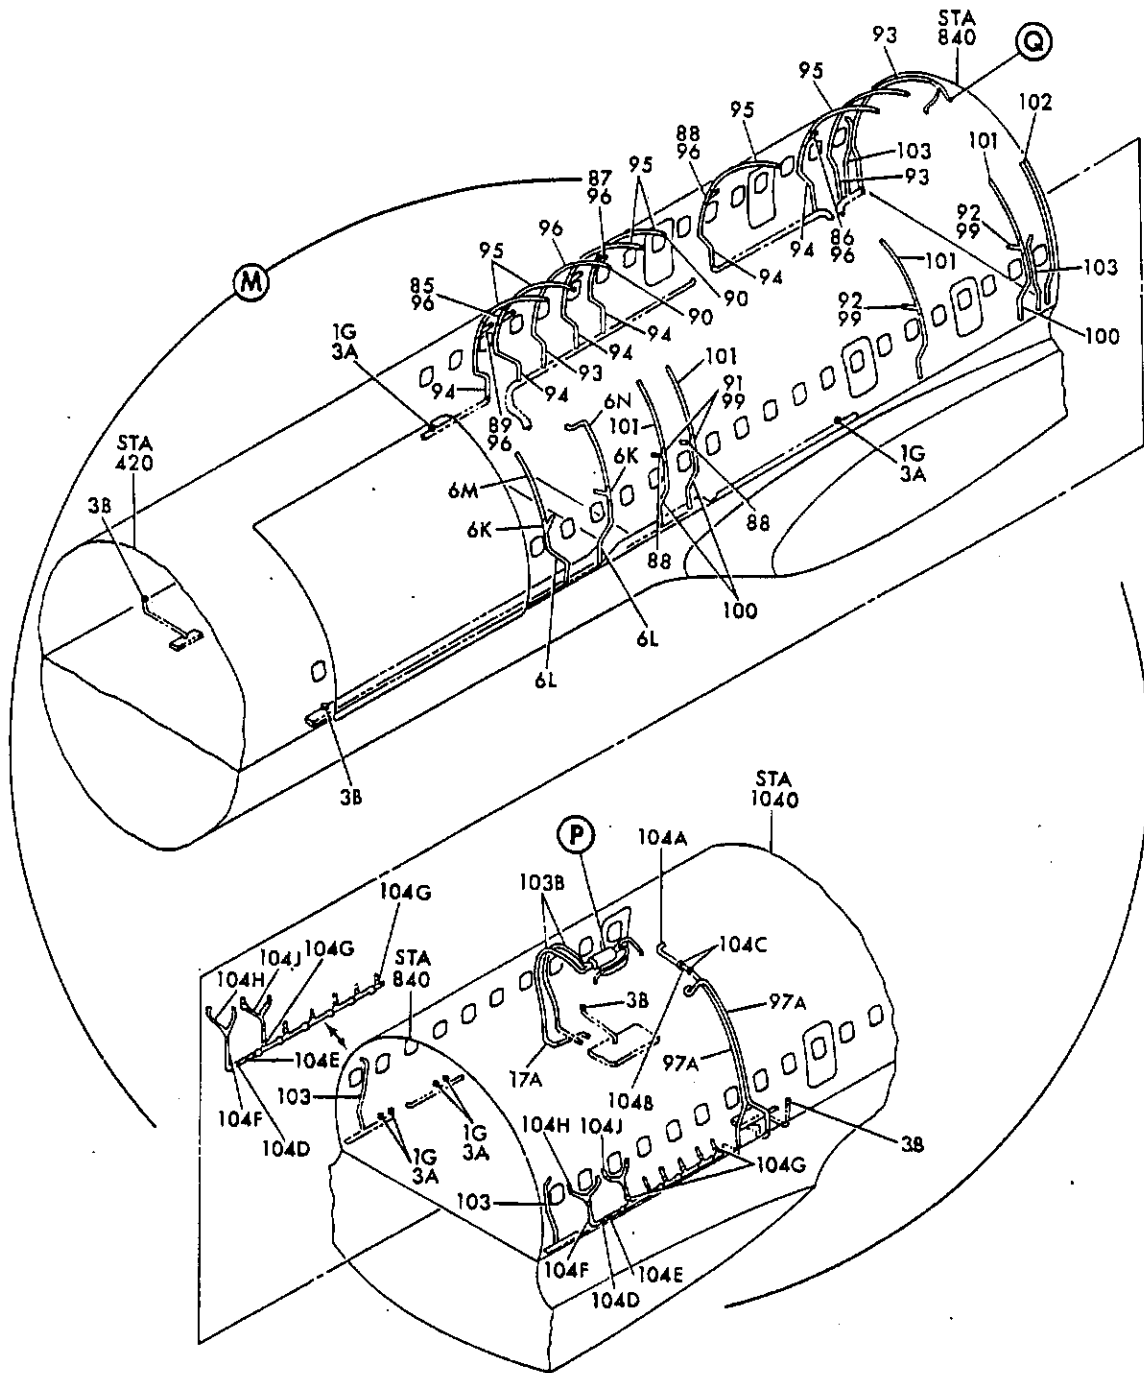


FIGURE 48A. DUCT INSTL, CABIN SIDEWALL AIR DISTRIBUTION HOTWALL (SHEET 4)

NOV 21/90

21-04-48A

DETAILED PARTS LIST
21-04-48A
PAGE 3

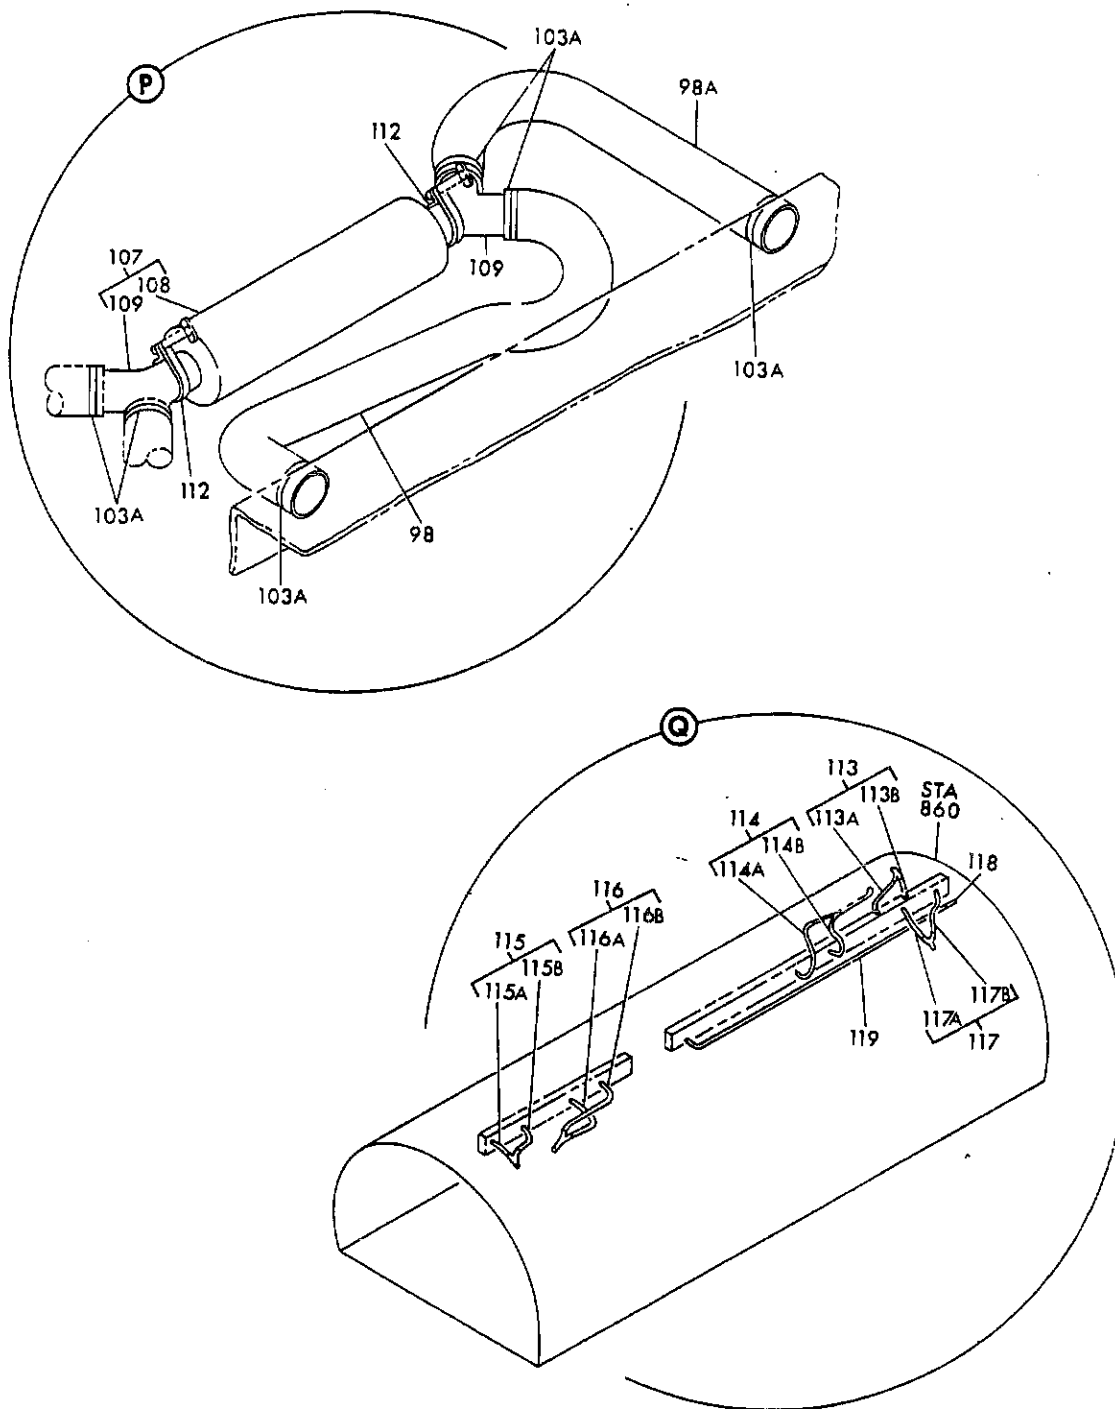


FIGURE 48A, DUCT INSTL, CABIN SIDEWALL AIR DISTRIBUTION HOTWALL (SHEET 5)

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
48A	65-43746-17		DUCT INSTL, CABIN SIDEWALL AIR DISTRIBUTION HOTWALL . . (SEE 21-2, FIG. 2, ITEM 30)		RF
	65-43726-35		. DUCT INSTL.		5
	65-43726-35		. DUCT INSTL.		1
	65-43726-35		. DUCT INSTL.		21
	65-43726-35		. DUCT INSTL.		2
	65-43726-35		. DUCT INSTL.	5199	1
	65-43726-36		. DUCT INSTL.		1
	65-43726-36		. DUCT INSTL.		1
	65-43726-36		. DUCT INSTL.		4
	65-43726-36		. DUCT INSTL.		1
	65-43726-36		. DUCT INSTL.		3
	65-43726-40		. DUCT INSTL.	0150	1
	65-43726-41		. DUCT INSTL.		1
1	65-43615-10		. . DUCT. (OPTIONALS 65-43615-24, 65-58543-29)		1
1	65-43615-24		. . DUCT. (OPTIONAL TO 65-43615-10)		1
1	65-58543-29		. . DUCT. (OPTIONAL TO 65-43615-10)		1
1A	65-43615-10		. . DUCT. (OPTIONALS 65-43615-24, 65-58543-29)		1
1A	65-43615-24		. . DUCT. (OPTIONAL TO 65-43615-10)		1
1A	65-58543-29		. . DUCT. (OPTIONAL TO 65-43615-10)		1
1B	65-43615-10		. . DUCT. (OPTIONALS 65-43615-24, 65-58543-29)	5199	1
1B	65-43615-24		. . DUCT. (OPTIONAL TO 65-43615-10)	5199	1
1B	65-58543-29		. . DUCT. (OPTIONAL TO 65-43615-10)	5199	1
1E	65-43615-10		. . DUCT. (OPTIONALS 65-43615-24, 65-58543-29)		1
1E	65-43615-24		. . DUCT. (OPTIONAL TO 65-43615-10)		1
1E	65-58543-29		. . DUCT. (OPTIONAL TO 65-43615-10)		1
1F	65-43615-12		. . DUCT. (OPTIONAL 65-58543-26)		1
1F	65-58543-26		. . TUBE, FLEXIBLE. (OPTIONAL TO 65-43615-12)		1
1H	65-43615-12		. . DUCT. (OPTIONAL 65-58543-26)	0150	1
1H	65-58543-26		. . TUBE, FLEXIBLE. (OPTIONAL TO 65-43615-12)	0150	1
2	65-43615-10		. . DUCT. (OPTIONALS 65-43615-24, 65-58543-29)		1
2	65-43615-24		. . DUCT. (OPTIONAL TO 65-43615-10)		1
2	65-58543-29		. . DUCT. (OPTIONAL TO 65-43615-10)		1
3	65-43615-10		. . DUCT. (OPTIONALS 65-43615-24, 65-58543-29)		1
3	65-43615-24		. . DUCT. (OPTIONAL TO 65-43615-10)		1
3	65-58543-29		. . DUCT. (OPTIONAL TO 65-43615-10)		1
4A	66-12978-1		. . DUCT, TRANSITION (USED ON 65-43726-2, -36, -41, . . -48)		1
	65-43726-37		. DUCT INSTL.		4
	65-43726-38		. DUCT INSTL.		4
5F	65-43615-25		. . DUCT ASSY (OPTIONAL TO 65-43615-11)		1
5F	65-43615-26		. . DUCT ASSY (OPTIONAL TO 65-43615-11)		1
5G	69-61884-1		. . . SPRING.		2
5H	65-43615-3		. . . DUCT, (USED ON 65-43615-25)		1
5H	65-43615-4		. . . DUCT, (USED ON 65-43615-26)		1
5J	65-43615-25		. . DUCT ASSY (OPTIONAL TO 65-43615-11)		1
5J	65-43615-26		. . DUCT ASSY (OPTIONAL TO 65-43615-11)		1
5K	69-61884-1		. . . SPRING.		2
5M	65-43615-3		. . . DUCT, (USED ON 65-43615-25)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/91

21-04-48A

DETAILED PARTS LIST
21-04-48A
PAGE 5

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
48A 5M	65-43615-4	. . .	DUCT, (USED ON 65-43615-26)							1
6	65-43615-11	. . .	DUCT, (OPTIONALS 65-58543-30, 65-43615-25, -26)							1
6	65-58543-30	. . .	DUCT, (OPTIONAL TO 65-43615-11)							1
6A	65-43615-11	. . .	DUCT, (OPTIONALS 65-58543-30, 65-43615-25, -26)							1
6A	65-58543-30	. . .	DUCT, (OPTIONAL TO 65-43615-11)							1
6B	65-43615-11	. . .	DUCT, (OPTIONALS 65-58543-30, 65-43615-25, -26)							1
6B	65-58543-30	. . .	DUCT, (OPTIONAL TO 65-43615-11)							1
6D	65-43615-25	. . .	DUCT ASSY, (OPTIONAL TO 65-43615-11)							1
6D	65-43615-26	. . .	DUCT ASSY, (OPTIONAL TO 65-43615-11)							1
6E	69-61884-1	. . .	SPRING							2
6F	65-43615-3	. . .	DUCT, (USED ON 65-43615-25)							1
6F	65-43615-4	. . .	DUCT, (USED ON 65-43615-26)							1
8	66-12978-1	. . .	DUCT, TRANSITION (USED ON 65-43726-5 -38, -48)							1
	65-43726-39	. . .	DUCT INSTL.							4
	65-43726-39	. . .	DUCT INSTL.							6
9	65-43615-12	. . .	DUCT, (OPTIONAL 65-58543-26)							2
9	65-58543-26	. . .	TUBE, FLEXIBLE, (OPTIONAL TO 65-43615-12)							2
9A	65-43615-12	. . .	DUCT, (OPTIONAL 65-58543-26)							1
9A	65-58543-26	. . .	TUBE, FLEXIBLE, (OPTIONAL TO 65-43615-12)							1
9B	65-43615-12	. . .	DUCT, (DELETED BY SB 2754), (OPTIONAL 65-58543-26 (DELETED BY SB 2754))						0450	1
9B	65-58543-26	. . .	TUBE, FLEXIBLE, (OPTIONAL TO 65-43615-12 (DELETED BY SB 2754))						0450	1
9B	65-43615-12	. . .	DUCT, (OPTIONAL 65-58543-26)						0103	1
9B	65-58543-26	. . .	TUBE, FLEXIBLE, (OPTIONAL TO 65-43615-12)						5199	1
	65-43726-39	. . .	DUCT INSTL.						0103	2
12	65-43615-12	. . .	DUCT, (OPTIONAL 65-58543-26)						5199	2
12	65-58543-26	. . .	TUBE, FLEXIBLE, (OPTIONAL TO 65-43615-12)							2
	65-43726-40	. . .	DUCT INSTL.							1
17	65-43615-12	. . .	DUCT, (OPTIONAL 65-58543-26)							1
17	65-58543-26	. . .	TUBE, FLEXIBLE, (OPTIONAL TO 65-43615-12)							1
	65-43726-44	. . .	DUCT INSTL.							6
	65-43726-45	. . .	DUCT INSTL.							6
18	65-43615-12	. . .	DUCT, (OPTIONAL 65-58543-26)							1
18	65-58543-26	. . .	TUBE, FLEXIBLE, (OPTIONAL TO 65-43615-12)							1
19	69-23155-1	. . .	DUCT ASSY, ATTACHING PARTS							1
	NAS1303-3W	. . .	BOLT							2
	AN960PD10L	. . .	WASHER							2
	NAS679A3W	. . .	NUT							2
20	66-17374-1	. . .	GASKET							1
	65-43726-42	. . .	DUCT INSTL.							1
	65-43726-43	. . .	DUCT INSTL.							1
21	65-43615-12	. . .	DUCT, (OPTIONAL 65-58543-26)							1
21	65-58543-26	. . .	TUBE, FLEXIBLE, (OPTIONAL TO 65-43615-12)							1
22	65-43615-12	. . .	DUCT, (OPTIONAL 65-58543-26)							1
22	65-58543-26	. . .	TUBE, FLEXIBLE, (OPTIONAL TO 65-43615-12)							1
23	69-1015-23	. . .	RISER, (USED ON 65-43726-15 AND -42)							1
24	69-1015-23	. . .	RISER, (USED ON 65-43726-16 AND -43)							1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
48A 25	69-23155-1	. . DUCT ASSY, (USED ON 65-43726-15 AND -42).		1
	69-23155-1	. . DUCT ASSY, (USED ON 65-43726-16 AND -43).		1
		ATTACHING PARTS		
	NAS1303-3W	. . BOLT.		2
	AN960PD10L	. . WASHER.		2
	NAS679A3W	. . NUT.		2
		-----*		
27	66-17374-1	. . GASKET, (USED ON 65-43726-15 AND -42)		1
28	66-17374-1	. . GASKET, (USED ON 65-43726-16 AND -43)		1
	65-43726-35	. . DUCT INSTL.		2
	65-43726-36	. . DUCT INSTL.	0150	2
	65-43726-37	. . DUCT INSTL.		2
	65-43726-38	. . DUCT INSTL.	0150	2
29A	65-43615-25	. . DUCT ASSY	0150	1
		(OPTIONAL TO 65-43615-11)		
29A	65-43615-26	. . DUCT ASSY	0150	1
		(OPTIONAL TO 65-43615-11)		
29B	69-61884-1	. . SPRING.	0150	2
29C	65-43615-3	. . DUCT, (USED ON 65-43615-25)	0150	1
29C	65-43615-4	. . DUCT, (USED ON 65-43615-26)	0150	1
30	65-43615-11	. . DUCT.	0150	1
		(OPTIONALS 65-58543-30, 65-43615-25, -30)		
30	65-58543-30	. . DUCT.	0150	1
		(OPTIONAL TO 65-43615-11)		
32	65-43615-11	. . DUCT.	0150	1
		(OPTIONALS 65-58543-30, 65-43615-25, -30)		
32	65-58543-30	. . DUCT.	0150	1
		(OPTIONAL TO 65-43615-11)		
32A	65-43615-25	. . DUCT ASSY	0150	1
		(OPTIONAL TO 65-43615-11)		
32A	65-43615-26	. . DUCT ASSY	0150	1
		(OPTIONAL TO 65-43615-11)		
32B	69-61884-1	. . SPRING.	0150	2
32C	65-43615-3	. . DUCT, (USED ON 65-43615-25)	0150	1
32C	65-43615-4	. . DUCT, (USED ON 65-43615-26)	0150	1
33	65-43615-10	. . DUCT.	0150	1
		(OPTIONALS 65-43615-24, 65-58543-29)		
33	65-43615-24	. . DUCT.	0150	1
		(OPTIONAL TO 65-43615-10)		
33	65-58543-29	. . DUCT.	0150	1
		(OPTIONAL TO 65-43615-10)		
35	65-43615-10	. . DUCT.	0150	1
		(OPTIONALS 65-43615-24, 65-58543-29)		
35	65-43615-24	. . DUCT.	0150	1
		(OPTIONAL TO 65-43615-10)		
35	65-58543-29	. . DUCT.	0150	1
		(OPTIONAL TO 65-43615-10)		
38	65-43615-11	. . DUCT.		1
		(OPTIONALS 65-58543-30, 65-43615-25, -26)		
38	65-58543-30	. . DUCT.		1
		(OPTIONAL TO 65-43615-11)		
38A	65-43615-25	. . DUCT ASSY		1
		(OPTIONAL TO 65-43615-11)		
38A	65-43615-26	. . DUCT ASSY		1
		(OPTIONAL TO 65-43615-11)		
38B	69-61884-1	. . SPRING.		2
38C	65-43615-3	. . DUCT, (USED ON 65-43615-25)		1
38C	65-43615-4	. . DUCT, (USED ON 65-43615-26)		1
40	65-43615-11	. . DUCT.		1
		(OPTIONALS 65-58543-30, 65-43615-25, -26)		
40	65-58543-30	. . DUCT.		1
		(OPTIONAL TO 65-43615-11)		
40A	65-43615-25	. . DUCT ASSY		1
		(OPTIONAL TO 65-43615-11)		
40A	65-43615-26	. . DUCT ASSY		1
		(OPTIONAL TO 65-43615-11)		
40B	69-61884-1	. . SPRING.		2
40C	65-43615-3	. . DUCT, (USED ON 65-43615-25)		1
40C	65-43615-4	. . DUCT, (USED ON 65-43615-26)		1
41	65-43615-10	. . DUCT.		1
		(OPTIONAL 65-43615-24)		
41	65-43615-24	. . DUCT.		1
		(OPTIONAL TO 65-43615-10)		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
48A	41	65-58543-29	. .	TUBE, FLEXIBLE.						1
			. .	(OPTIONAL TO 65-43615-10)						
	43	65-43615-10	. .	DUCT.						1
			. .	(OPTIONALS 65-43615-24, 65-58543-29)						
43	65-43615-24	. .	DUCT.							1
		. .	(OPTIONAL TO 65-43615-10)							
	65-58543-29	. .	DUCT.							1
		. .	(OPTIONAL TO 65-43615-10)							
45	66-12978-1	. .	DUCT, TRANSITION (USED ON 65-43726-38, -48)						0150	1
	66-12978-1	. .	DUCT, TRANSITION (USED ON 65-43726-5 AND -38)							1
	66-12978-1	. .	DUCT, TRANSITION (USED ON 65-43726-2, -36, -38, -48)							1
	66-12978-1	. .	DUCT, TRANSITION (USED ON 65-43726-2, -5, -36 AND -38)							1
65-43726-35		. .	DUCT INSTL.							3
	65-43726-40	. .	DUCT INSTL.							1
	65-43726-40	. .	DUCT INSTL.						5199	1
	65-43726-41	. .	DUCT INSTL.							3
65-43726-41		. .	DUCT INSTL.							1
	65-43726-41	. .	DUCT INSTL.							1
	65-43615-12	. .	DUCT.							1
		. .	(OPTIONAL 65-58543-26)							
51	65-58543-26	. .	TUBE, FLEXIBLE.							1
		. .	(OPTIONAL TO 65-43615-12)							
	51A	65-43615-12	. .	DUCT.					5199	1
		. .	(OPTIONAL 65-58543-26)							
51A	65-58543-26	. .	TUBE, FLEXIBLE.						5199	1
		. .	(OPTIONAL TO 65-43615-12)							
	52	65-43615-10	. .	DUCT.						1
		. .	(OPTIONALS 65-43615-24, 65-58543-29)							
52	65-43615-24	. .	DUCT.							1
		. .	(OPTIONAL TO 65-43615-10)							
	65-58543-29	. .	DUCT.							1
		. .	(OPTIONAL TO 65-43615-10)							
55	65-43615-12	. .	DUCT.							1
		. .	(OPTIONAL 65-58543-26)							
	65-58543-26	. .	TUBE, FLEXIBLE.							1
		. .	(OPTIONAL TO 65-43615-12)							
57	65-43615-12	. .	DUCT.							1
		. .	(OPTIONAL 65-58543-26)							
	65-58543-26	. .	TUBE, FLEXIBLE.							1
		. .	(OPTIONAL TO 65-43615-12)							
58	66-12978-1	. .	DUCT, TRANSITION (USED ON 65-43726-2, -12 AND -41)							1
	66-12978-1	. .	DUCT, TRANSITION (USED ON 65-43726-2, -12 AND -41)							1
		. .	DUCT, TRANSITION (USED ON 65-43726-2, -12 AND -41)							
		. .	DUCT, TRANSITION (USED ON 65-43726-2, -12 AND -41)							

MISSING ITEM NUMBERS ARE NOT APPLICABLE

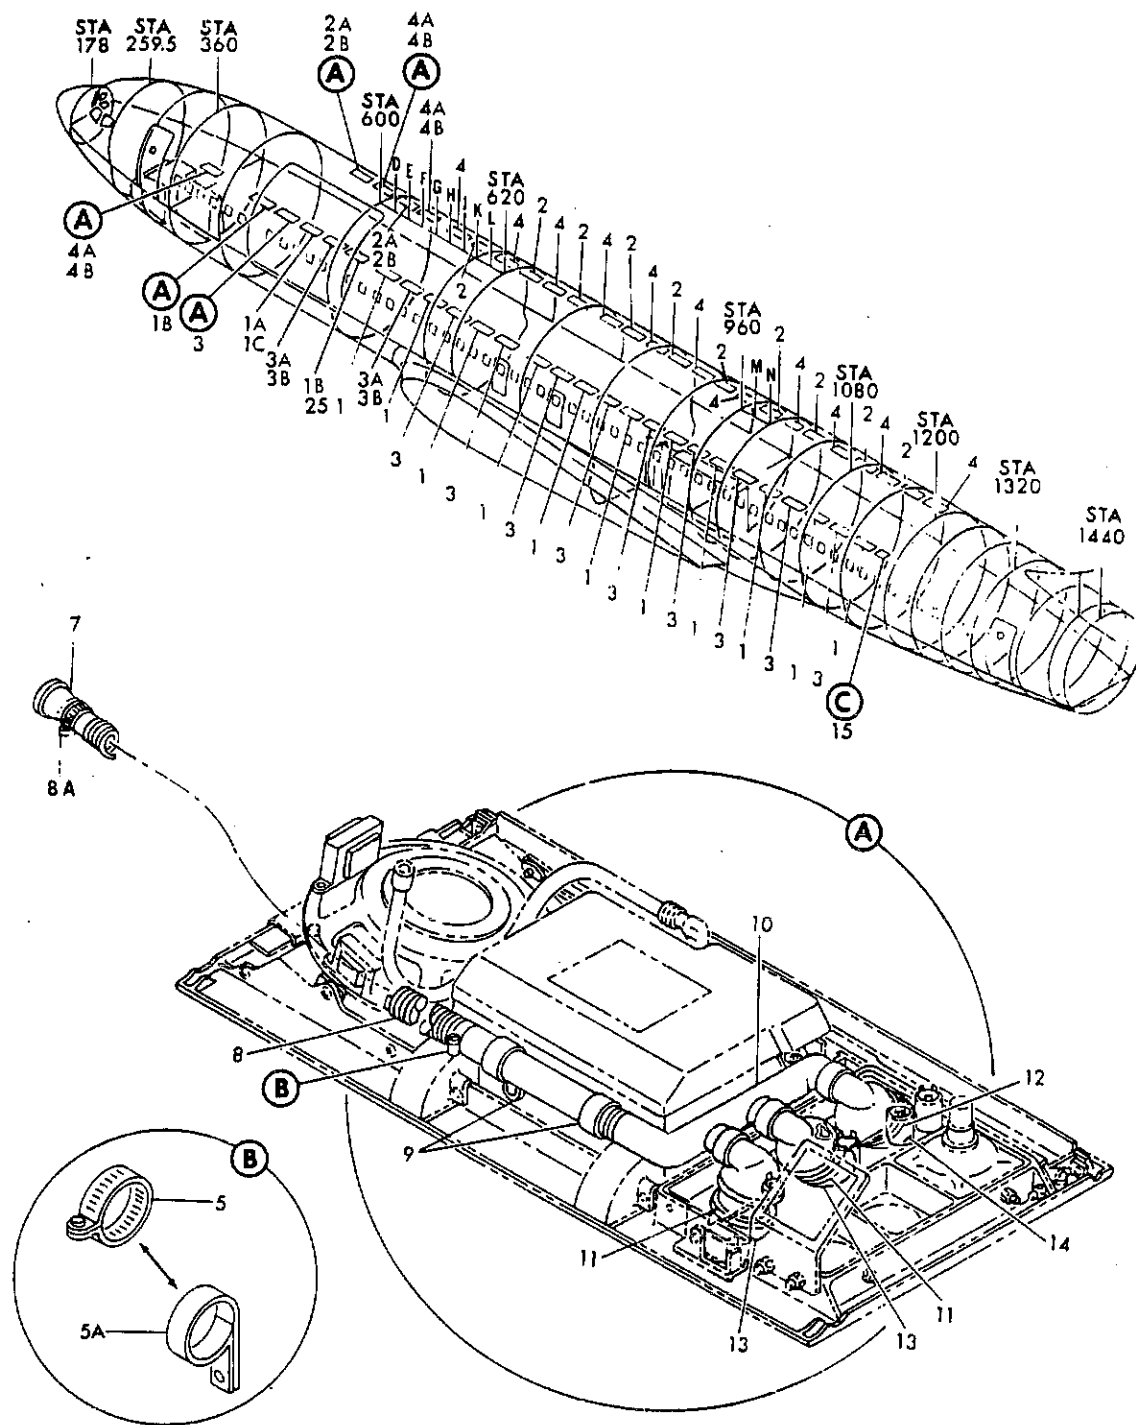


FIGURE 65A. AIR CONDITIONING-AIR DISTRIBUTION SYSTEMS (SHEET 1)

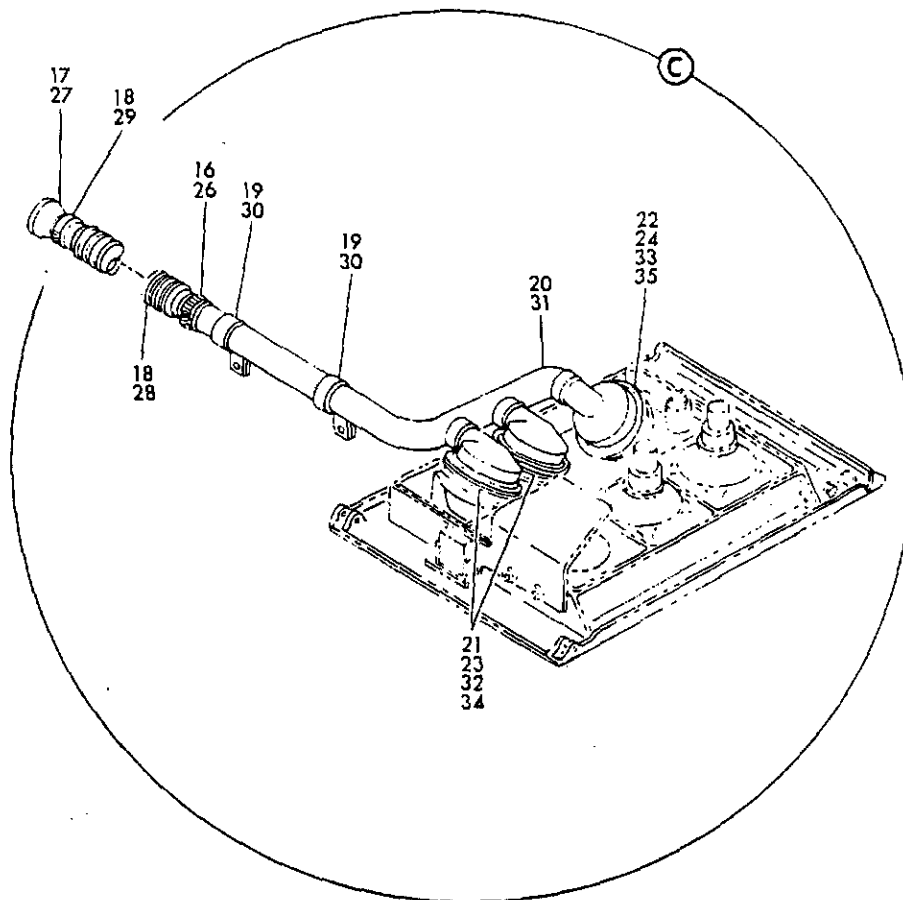


FIGURE 65A. AIR CONDITIONING - AIR DISTRIBUTION SYSTEMS (SHEET 2)

NOV 21/90

21-04-65A

DETAILED PARTS LIST
21-04-65A
PAGE 1

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
65A	65-86409-42	SERVICE UNIT INSTL, PASSENGER (AIR CONDITIONING ONLY) . (SEE 25-1, FIG. 174C, ITEM 3)	5151	RF
	65-86409-43	SERVICE UNIT INSTL, PASSENGER (AIR CONDITIONING ONLY) . (SEE 25-1, FIG. 174C, ITEM 3)	5299	RF
1	65-79164-129AV	. SERVICE UNIT ASSY, (AIR CONDITIONING ONLY)	5199	RF
1A	65-79164-129AV	. SERVICE UNIT ASSY, (AIR CONDITIONING ONLY)	5199	RF
1B	65-79164-129AV	. SERVICE UNIT ASSY, (AIR CONDITIONING ONLY)	5199	RF
2	65-79164-130AV	. SERVICE UNIT ASSY, (AIR CONDITIONING ONLY)	5199	RF
2A	65-79164-130AV	. SERVICE UNIT ASSY, (AIR CONDITIONING ONLY)	5199	RF
3	65-79164-131AV	. SERVICE UNIT ASSY, (AIR CONDITIONING ONLY)	5199	RF
3A	65-79164-131AV	. SERVICE UNIT ASSY, (AIR CONDITIONING ONLY)	5199	RF
4	65-79164-132AV	. SERVICE UNIT ASSY, (AIR CONDITIONING ONLY)	5199	RF
4A	65-79164-132AV	. SERVICE UNIT ASSY, (AIR CONDITIONING ONLY)	5199	RF
5	6203	. . CLAMP, (V81646) (OPTIONAL TO AND FOR REPLACEMENT ORDER MS3367-4-9)	5199	1
5	MS3367-4-9	. . STRAP (OPTIONAL AND REPLACEMENT FOR 6203 (V81646))	5199	1
5	6203	. . CLAMP, (V81646) (OPTIONAL TO AND FOR REPLACEMENT ORDER MS3367-4-9)	5199	1
5	MS3367-4-9	. . STRAP (OPTIONAL AND REPLACEMENT FOR 6203 (V81646))	5199	1
5A	BACCI0DK12	. . CLAMP, (OPTIONAL)	5199	1
5A	BACCI0DK12	. . CLAMP, (OPTIONAL)	5199	1
	69-68932-1	. . AIR DUCT ASSY (OPTIONAL AND REPLACEMENT FOR 69-68932-2)	5199	1
	69-68932-2	. . AIR DUCT ASSY (OPTIONAL TO AND FOR REPLACEMENT ORDER 69-68932-1)	5199	1
	69-68932-1	. . AIR DUCT ASSY (OPTIONAL AND REPLACEMENT FOR 69-68932-2)	5199	1
	69-68932-2	. . AIR DUCT ASSY (OPTIONAL TO AND FOR REPLACEMENT ORDER 69-68932-1)	5199	1
7	69-64738-1	. . . FITTING	5199	1
7	69-64738-1	. . . FITTING	5199	1
8	BE406-3	. . . DUCT, AIR (V05399) (OPTIONAL AD604-3 (V21868))	5199	1
8	AD604-3	. . . DUCT, AIR (V21868) (OPTIONAL TO BE406-3 (V05399))	5199	1
8	BE406-3	. . . DUCT, AIR (V05399) (OPTIONAL AD604-3 (V21868))	5199	1
8	AD604-3	. . . DUCT, AIR (V21868) (OPTIONAL TO BE406-3 (V05399))	5199	1
8A	MS3367-4-9	. . . STRAP, (USED ON 69-68932-2)	5199	1
8A	MS3367-4-9	. . . STRAP, (USED ON 69-68932-2)	5199	1
9	BACCI0DK12	. . CLAMP	5199	2
9	BACCI0DK12	. . CLAMP	5199	2
	NAS602-8P	. . SCREW	5199	2
	NAS602-8P	. . SCREW	5199	2
	BACN10FX83	. . NUT	5199	2
	BACN10FX83	. . NUT	5199	2
10	69-62660-2	. . MANIFOLD	5199	1
10	69-62660-2	. . MANIFOLD	5199	1
11	10-60141-18A	. . OUTLET, AIR	5199	2
11	10-60141-18A	. . OUTLET, AIR	5199	2
12	10-60141-19A	. . OUTLET, AIR-(SAME AS L20646-1C (V17744), 1707-19A . (V83564), 750801-004 (V28406))	5199	1
12	L20646-1C	. . OUTLET, AIR-(SAME AS BAC SPEC DWG 10-60141-19A) . . (V17744) (OPTIONAL TO 1707-19A (V83564)) (OPTIONAL TO 750801-004 (V28406))	5199	1
12	1707-19A	. . OUTLET, AIR-(SAME AS BAC SPEC DWG 10-60141-19A) . . (V83564) (OPTIONAL TO L20646-1C (V17744)) (OPTIONAL TO 750801-004 (V28406))	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
65A 12	750801-004		.. OUTLET, AIR-(SAME AS BAC SPEC DWG 10-60141-19A) . . (V28406) (OPTIONAL TO L20646-1C (V17744)) (OPTIONAL TO 1707-19A (V83564))	5199	1
12	10-60141-19A		.. OUTLET, AIR-(SAME AS L20646-1C (V17744), 1707-19A (V83564), 750801-004 (V28406))	5199	1
12	L20646-1C		.. OUTLET, AIR-(SAME AS BAC SPEC DWG 10-60141-19A) . . (V17744) (OPTIONAL TO 1707-19A (V83564)) (OPTIONAL TO 750801-004 (V28406))	5199	1
12	1707-19A		.. OUTLET, AIR-(SAME AS BAC SPEC DWG 10-60141-19A) . . (V83564) (OPTIONAL TO L20646-1C (V17744)) (OPTIONAL TO 750801-004 (V28406))	5199	1
12	750801-004		.. OUTLET, AIR-(SAME AS BAC SPEC DWG 10-60141-19A) . . (V28406) (OPTIONAL TO L20646-1C (V17744)) (OPTIONAL TO 1707-19A (V83564))	5199	1
13	65-79165-31G		.. CONE, AIR	5199	2
13	65-79165-31G		.. CONE, AIR	5199	2
14	65-79165-32G		.. CONE, AIR	5199	1
14	65-79165-32G		.. CONE, AIR	5199	1
15	65-86413-41AV		.. SERVICE UNIT ASSY, (PARTIAL) (AIR CONDITIONING ONLY)	5199	RF
16	6203		.. CLAMP, (V81646) (OPTIONAL TO AND FOR REPLACEMENT ORDER MS3367-4-9)	5199	1
16	MS3367-4-9		.. STRAP (OPTIONAL AND REPLACEMENT FOR 6203 (V81646))	5199	1
	69-68932-1		.. AIR DUCT ASSY (OPTIONAL AND REPLACEMENT FOR 69-68932-2)	5199	1
	69-68932-2		.. AIR DUCT ASSY (OPTIONAL TO AND FOR REPLACEMENT ORDER 69-68932-1)	5199	1
17	69-64738-1		.. FITTING	5199	1
18	BE406-3		.. DUCT, AIR (V05399) (OPTIONAL AD604-3 (V21868))	5199	1
18	AD604-3		.. DUCT, AIR (V21868) (OPTIONAL TO BE406-3 (V05399))	5199	1
18A	MS3367-4-9		.. STRAP, (USED ON 69-68932-2)	5199	1
19	BACC10DK12		.. CLAMP ATTACHING PARTS	5199	2
	NA5602-8P		.. SCREW	5199	2
	BACN10FX83		.. NUT	5199	2
20	69-62660-2		.. MANIFOLD	5199	1
21	10-60141-18A		.. OUTLET, AIR	5199	2
22	10-60141-19A		.. OUTLET, AIR-(SAME AS L20646-1C (V17744), 1707-19A (V83564), 750801-004 (V28406))	5199	1
22	L20646-1C		.. OUTLET, AIR-(SAME AS BAC SPEC DWG 10-60141-19A) . . (V17744) (OPTIONAL TO 1707-19A (V83564)) (OPTIONAL TO 750801-004 (V28406))	5199	1
22	1707-19A		.. OUTLET, AIR-(SAME AS BAC SPEC DWG 10-60141-19A) . . (V83564) (OPTIONAL TO L20646-1C (V17744)) (OPTIONAL TO 750801-004 (V28406))	5199	1
22	750801-004		.. OUTLET, AIR-(SAME AS BAC SPEC DWG 10-60141-19A) . . (V28406) (OPTIONAL TO L20646-1C (V17744)) (OPTIONAL TO 1707-19A (V83564))	5199	1
23	65-79165-31G		.. CONE, AIR	5199	2
24	65-79165-32G		.. CONE, AIR	5199	1
28	BE406-3		.. DUCT, AIR (V05399) (OPTIONAL AD604-3 (V21868))	5199	1
28	AD604-3		.. DUCT, AIR (V21868) (OPTIONAL TO BE406-3 (V05399))	5199	1
29	MS3367-4-9		.. STRAP, (USED ON 69-68932-2)	5199	1
30	BACC10DK12		.. CLAMP ATTACHING PARTS	5199	2
	NA5602-8P		.. SCREW	5199	2
	BACN10FX83		.. NUT	5199	2
31	69-62660-2		.. MANIFOLD	5199	1
32	10-60141-18A		.. OUTLET, AIR	5199	2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE										EFF FROM TO	UNITS PER ASSY							
			1	2	3	4	5	6	7												
65A	33	10-60141-19A	. . OUTLET, AIR-(SAME AS L20646-1C (V17744), 1707-19A .										5199	1							
			(V83564), 750801-004 (V28406))																		
	33	L20646-1C	. . OUTLET, AIR-(SAME AS BAC SPEC DWG 10-60141-19A) . .										5199	1							
			(V17744)																		
			(OPTIONAL TO 1707-19A (V83564))																		
			(OPTIONAL TO 750801-004 (V28406))																		
	33	1707-19A	. . OUTLET, AIR-(SAME AS BAC SPEC DWG 10-60141-19A) . .										5199	1							
			(V83564)																		
			(OPTIONAL TO L20646-1C (V17744))																		
			(OPTIONAL TO 750801-004 (V28406))																		
	33	750801-004	. . OUTLET, AIR-(SAME AS BAC SPEC DWG 10-60141-19A) . .										5199	1							
			(V28406)																		
			(OPTIONAL TO L20646-1C (V17744))																		
			(OPTIONAL TO 1707-19A (V83564))																		
	34	65-79165-31G	. . CONE, AIR										5199	2							
	35	65-79165-32G	. . CONE, AIR										5199	1							
			. FOR REFERENCE TO OTHER SERVICE UNIT DETAILS, SEE NHA										5199								
MISSING ITEM NUMBERS ARE NOT APPLICABLE																					

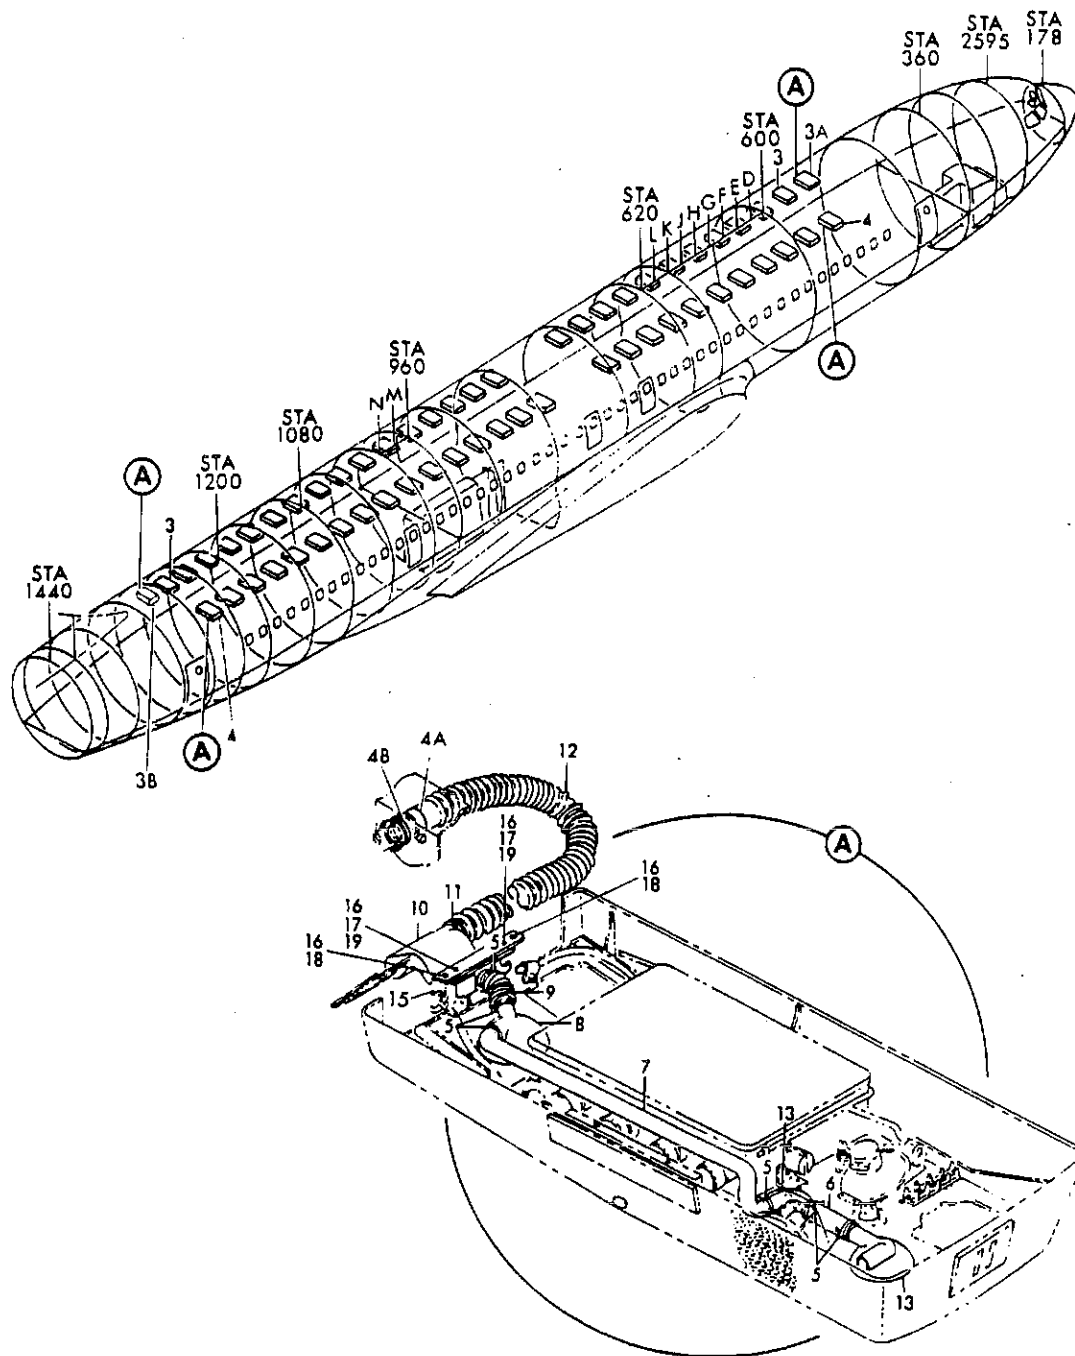


FIGURE 73Z. SERVICE UNIT INSTALLATION

PARTS CATALOG

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	73Z	65-42148-110		SERVICE UNIT INSTL, PASSENGER (AIR CONDITIONING ONLY) . (SEE 25-1, FIG. 127, ITEM 46)	0150	RF
R	3	65-42148-169		. SERVICE UNIT ASSY, FINAL (LH) (AIR CONDITIONING ONLY)	0150	RF
R	3A	65-42148-169		. SERVICE UNIT ASSY, FINAL (LH) (AIR CONDITIONING ONLY)	0150	RF
R	4	65-42148-32		. SERVICE UNIT ASSY, FINAL (RH) (AIR CONDITIONING ONLY)	0150	RF
R	4A	MS17821-1-9		. . CLAMP (OPTIONAL 2000-5 (V83564))	0150	55
R	4A	2000-5		. . CLAMP, GASPER HOSE DISCONNECT (V83564) (OPTIONAL TO MS17821-1-9)	0150	55
R	4B	800715-02		. . FITTING, GASPER HOSE DISCONNECT (V53655) (OPTIONAL 22742) (V53655)	0150	55
R	4B	22742		. . FITTING, GASPER HOSE DISCONNECT (V53655) (OPTIONAL TO 800715-02) (V53655)	0150	55
R		65-42366-5A		. . SERVICE UNIT ASSY, BASIC (AIR CONDITIONING ONLY) . . (LH ONLY)	0150	1
R		65-42366-6A		. . SERVICE UNIT ASSY, BASIC (AIR CONDITIONING ONLY) . . (RH ONLY)	0150	1
R	5	6609		. . . CLAMP, SELF-TIGHTENING HOSE (V81646)	0150	6
R	6	63-9929		. . . DUCT, PASSENGER AIR	0150	1
R	7	69-4855-1		. . . DUCT, PASSENGER AIR (LH ONLY)	0150	1
R	7	69-4855-2		. . . DUCT, PASSENGER AIR (RH ONLY)	0150	1
R	8	10-60141-3		. . . OUTLET, COLD AIR	0150	1
R	9	65-72073-5		. . . BELLOW, PASSENGER GASPER AIR MANIFOLD	0150	1
R	10	65-32229-1		. . . MANIFOLD, PASSENGER GASPER AIR (LH ONLY)	0150	1
R	10	65-32229-2		. . . MANIFOLD, PASSENGER GASPER AIR (RH ONLY)	0150	1
R	11	MS17821-1-9		. . . CLAMP (OPTIONAL 2000-4 (V83564))	0150	1
R	11	2000-4		. . . CLAMP, GASPER MANIFOLD HOSE (V83564) (OPTIONAL TO MS17821-1-9)	0150	1
R	12	BE406-2		. . . DUCT, FLEXIBLE AIR (V05399) (OPTIONAL AD604-2 (V21868))	0150	1
R	12	AD604-2		. . . DUCT, FLEXIBLE AIR (V21868) (OPTIONAL TO BE406-2 (V05399))	0150	1
R	13	10-60141-2		. . . OUTLET, COLD AIR	0150	2
R	15	66-22139-1		. . . BRACKET, LINE SUPPORT (LH ONLY)	0150	1
R	15	66-22139-2		. . . BRACKET, LINE SUPPORT (RH ONLY)	0150	1
R	16	NAS514P632-6		ATTACHING PARTS . . . SCREW	0150	4
R	17	AN960D6		. . . WASHER	0150	4
R	18	BACN10FX61		. . . NUT	0150	2
R	19	NAS679A06W		. . . NUT	0150	2
R				 *-----*		
				. FOR REFERENCE TO OTHER SERVICE UNIT DETAILS, SEE NHA	0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

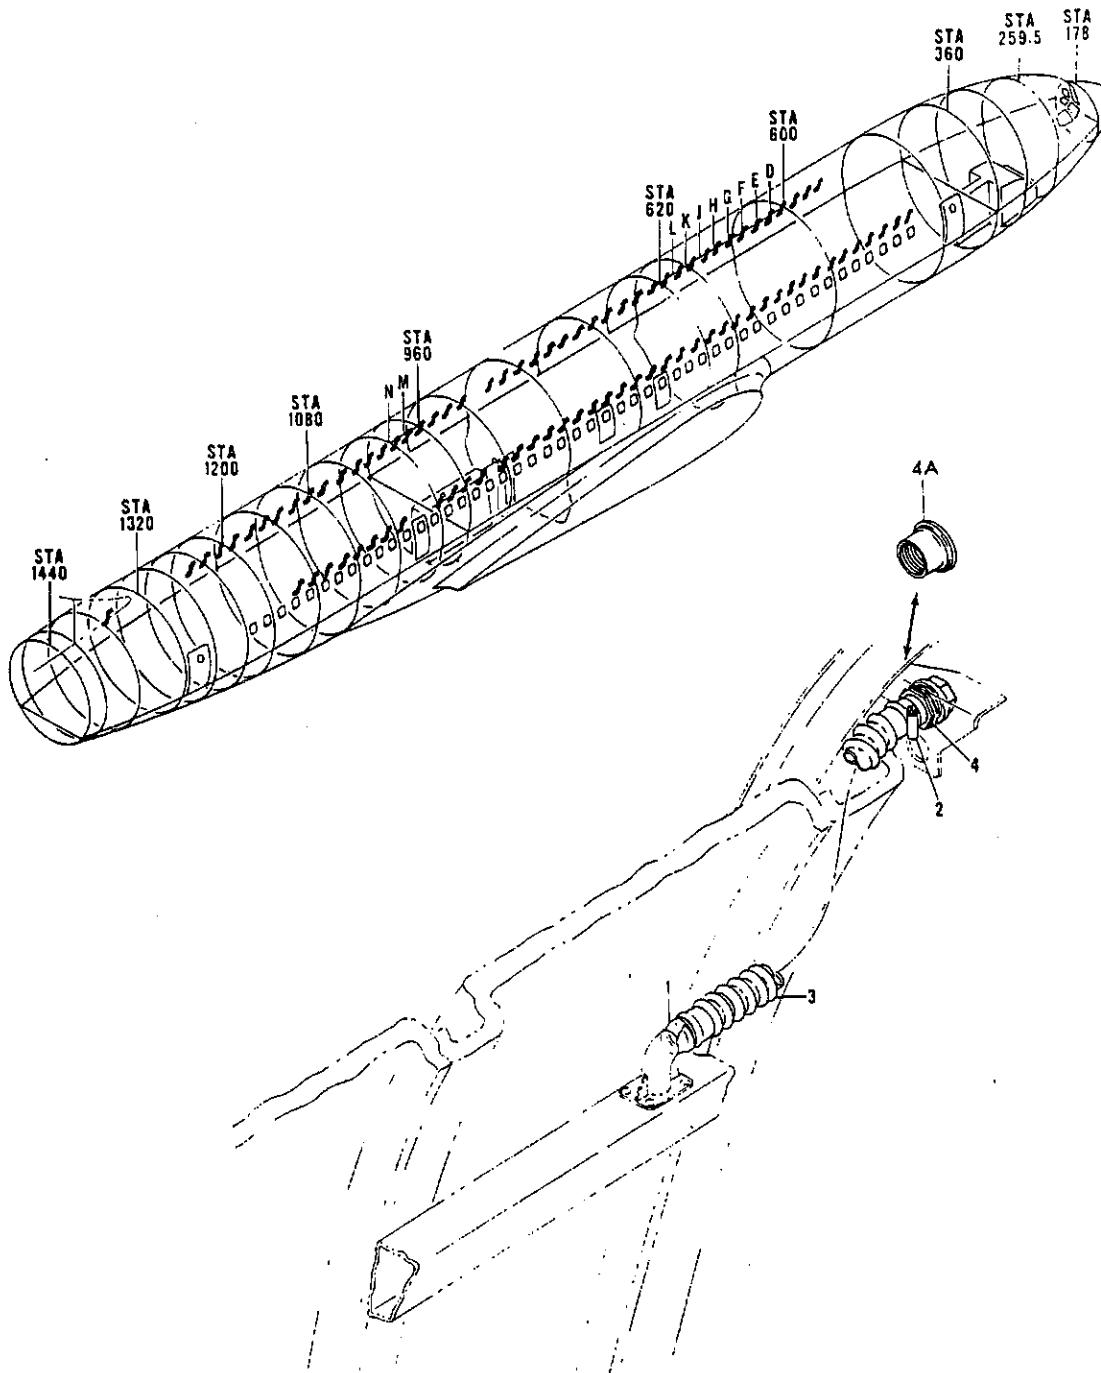


FIGURE 79. DISCONNECT INSTL. PASSENGER SERVICE UNIT GASPER AIR

BOEING **707** *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R R R R	79	65-32567-5		RF
	1	65-32567-2		AR
	2	2000-4		97
	2	6203		97
	2	MS17821-1-9		97
	3	BE406-1		97
	3	AD604-1		97
	4	22740-3		97
	4	800715-01		97
		DISCONNECT INSTL, PASSENGER SERVICE UNIT GASPER AIR (SEE 25-1, FIG. 23D, ITEM 27)	0150	
		. TAPE, PASSENGER SERVICE UNIT GASPER AIR	0150	
		. CLAMP, HOSE (V83564) (USED WITH 22740-3 (V53655)) (OPTIONAL 6203 (V81646))	0150	
		. CLAMP, HOSE (V81646) (USED WITH 22740-3 (V53655)) (OPTIONAL 2000-4 (V83564))	0150	
		. CLAMP, HOSE (USED WITH 800715-01 (V53655))	0150	
		. DUCT, FLEXIBLE (V05399) (OPTIONAL AD604-1 (V21868))	0150	
		. DUCT, FLEXIBLE (V21868) (OPTIONAL TO BE406-1 (V05399))	0150	
		. RECEPTACLE, HOSE HALF (V53655) (OPTIONAL TO 800715-01 (V53655))	0150	
		. BODY ASSY, GASPER DISCONNECT (V53655) (OPTIONAL 22740-3 (V53655))	0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE				


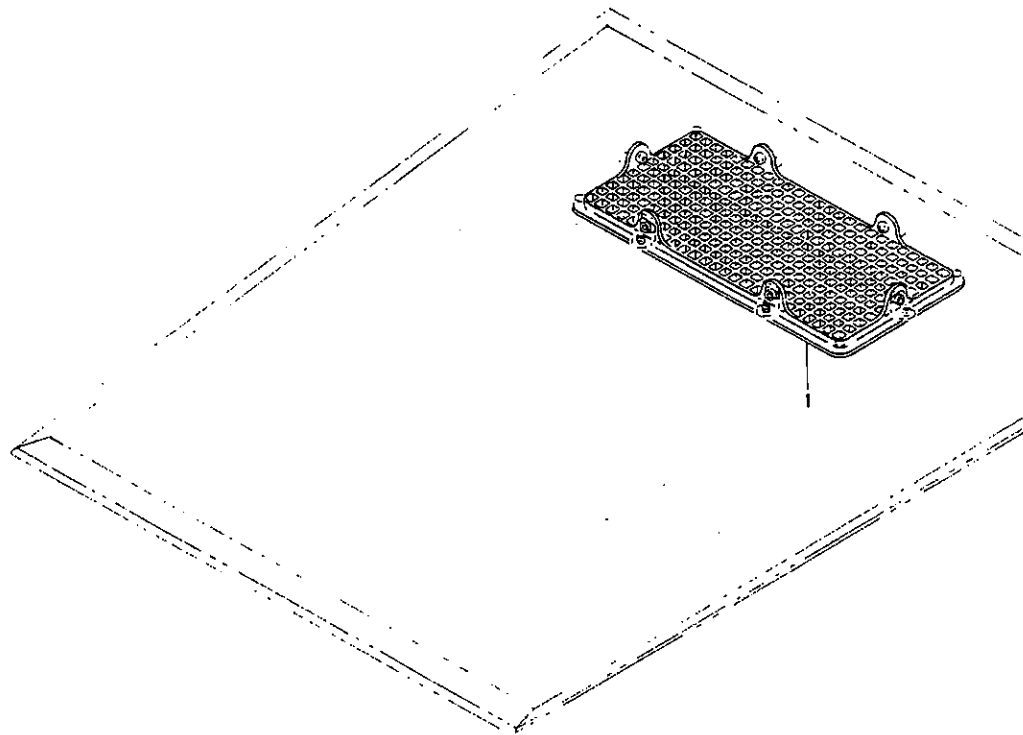


FIGURE 81. PANEL ASSY, FORWARD LOWERED CEILING DECORATIVE (AIR CONDITIONING ONLY)

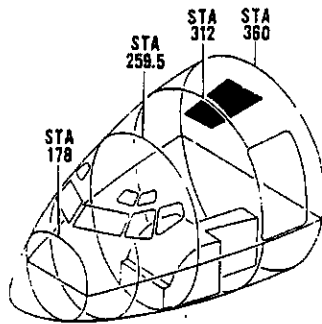

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R R R R R R	81	65-31214-4N	PANEL ASSY, FORWARD LOWERED CEILING DECORATIVE (AIR . .							0150	RF
		65-69835-45B	CONDITIONING ONLY) (SEE 25-11, FIG. 39, ITEM 32)							5199	RF
			PANEL ASSY, FORWARD LOWERED CEILING DECORATIVE (AIR . .								
			CONDITIONING ONLY) (SEE 25-11, FIG. 39B, ITEM 15								
			AND 25-11, FIG. 39D, ITEM 22)								
	1	69-9200-2E	. GRILL, VENT							0150	1
	1	69-9200-1AF	. GRILL, VENT							5199	1
			ATTACHING PARTS								
		NAS603-7	. SCREW								6
		AN960PD10L	. WASHER.								6
			-----*								
			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											


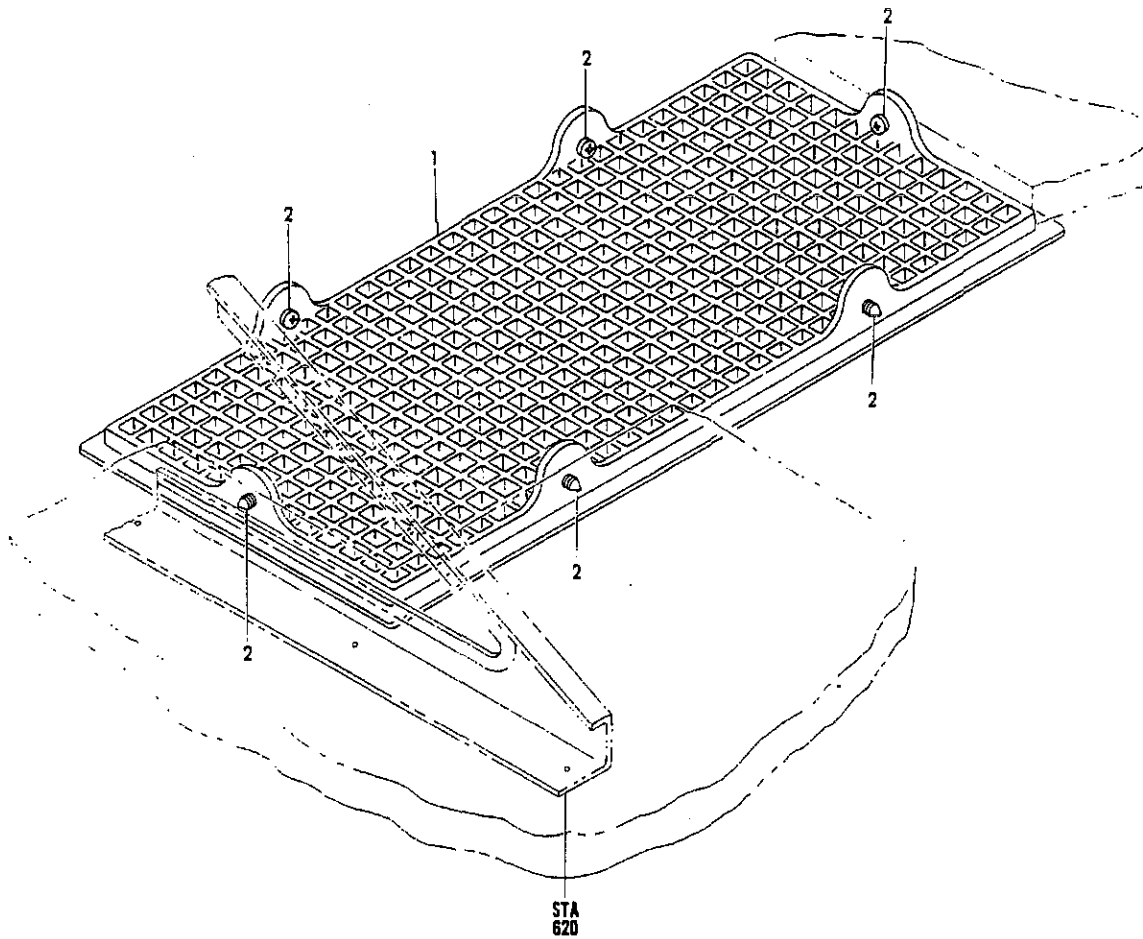


FIGURE 84D. PANEL ASSY. CENTER LIFE RAFT COMPARTMENT SIDE TRIM (AIR CONDITIONING ONLY)

DETAILED PARTS LIST
21-04-840
PAGE 0

21-04-840

NOV 21/90

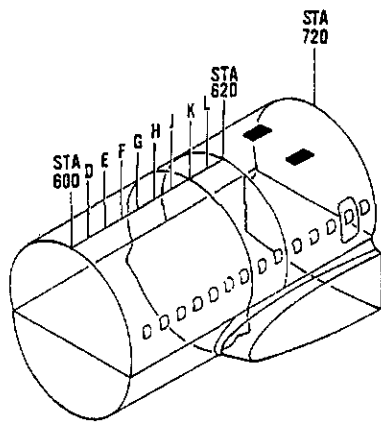

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R	84D	65-57968-1A	PANEL ASSY, CENTER LIFE RAFT COMPARTMENT SIDE TRIM (AIR CONDITIONING ONLY) (SEE 25-18, FIG. 25, ITEM 50)	0101 0450	RF
		65-57968-1A	PANEL ASSY, CENTER LIFE RAFT COMPARTMENT SIDE TRIM (AIR CONDITIONING ONLY) (REWORKED BY RAF MOD 7211.019-148 (SEE 25-18, FIG. 25, ITEM 50)	0203	RF
R R		65-57968-54A	PANEL ASSY, CENTER LIFE RAFT COMPARTMENT SIDE TRIM (AIR CONDITIONING ONLY) (SEE 25-18, FIG. 25, ITEM 51)	0101 0450	RF
		65-57968-54A	PANEL ASSY, CENTER LIFE RAFT COMPARTMENT SIDE TRIM (AIR CONDITIONING ONLY) (REWORKED BY RAF MOD 7211.019-148) (SEE 25-18, FIG. 25, ITEM 51)	0203	RF
R	1	69-9200-2E	. GRILL, VENT LOWERED CEILING (ALTERED FROM; 69-9200-1) ATTACHING PARTS	0150	1
R	2	MS24617-31	. SCREW	0150	6
R			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE					


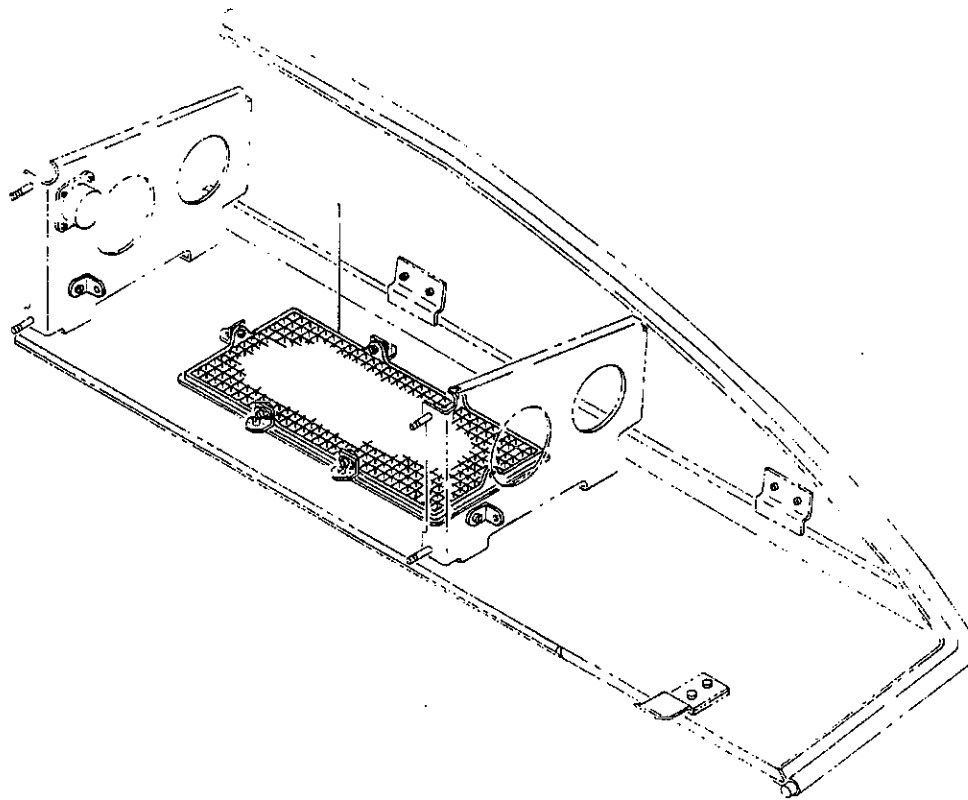


FIGURE 86D. PANEL ASSY, AFT LIFE RAFT COMPARTMENT AFT TRIM (AIR CONDITIONING ONLY)

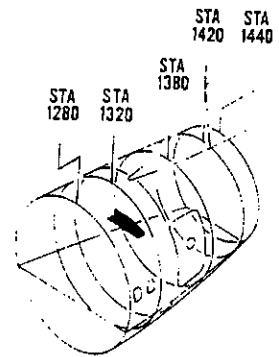

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	860	65-57970-1A	PANEL ASSY, AFT LIFE RAFT COMPARTMENT AFT TRIM (AIR . .							0150	RF
R			CONDITIONING ONLY) (SEE 25-1, FIG. 127, ITEM 11A)								
R	1	69-9200-2E	. GRILL, LOWERED CEILING AIR CONDITIONING VENT.							0150	1
R		NAS603-5P	ATTACHING PARTS								
R		AN960PD10L	. SCREW							0150	6
			. WASHER.							0150	6
			-----*								
			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

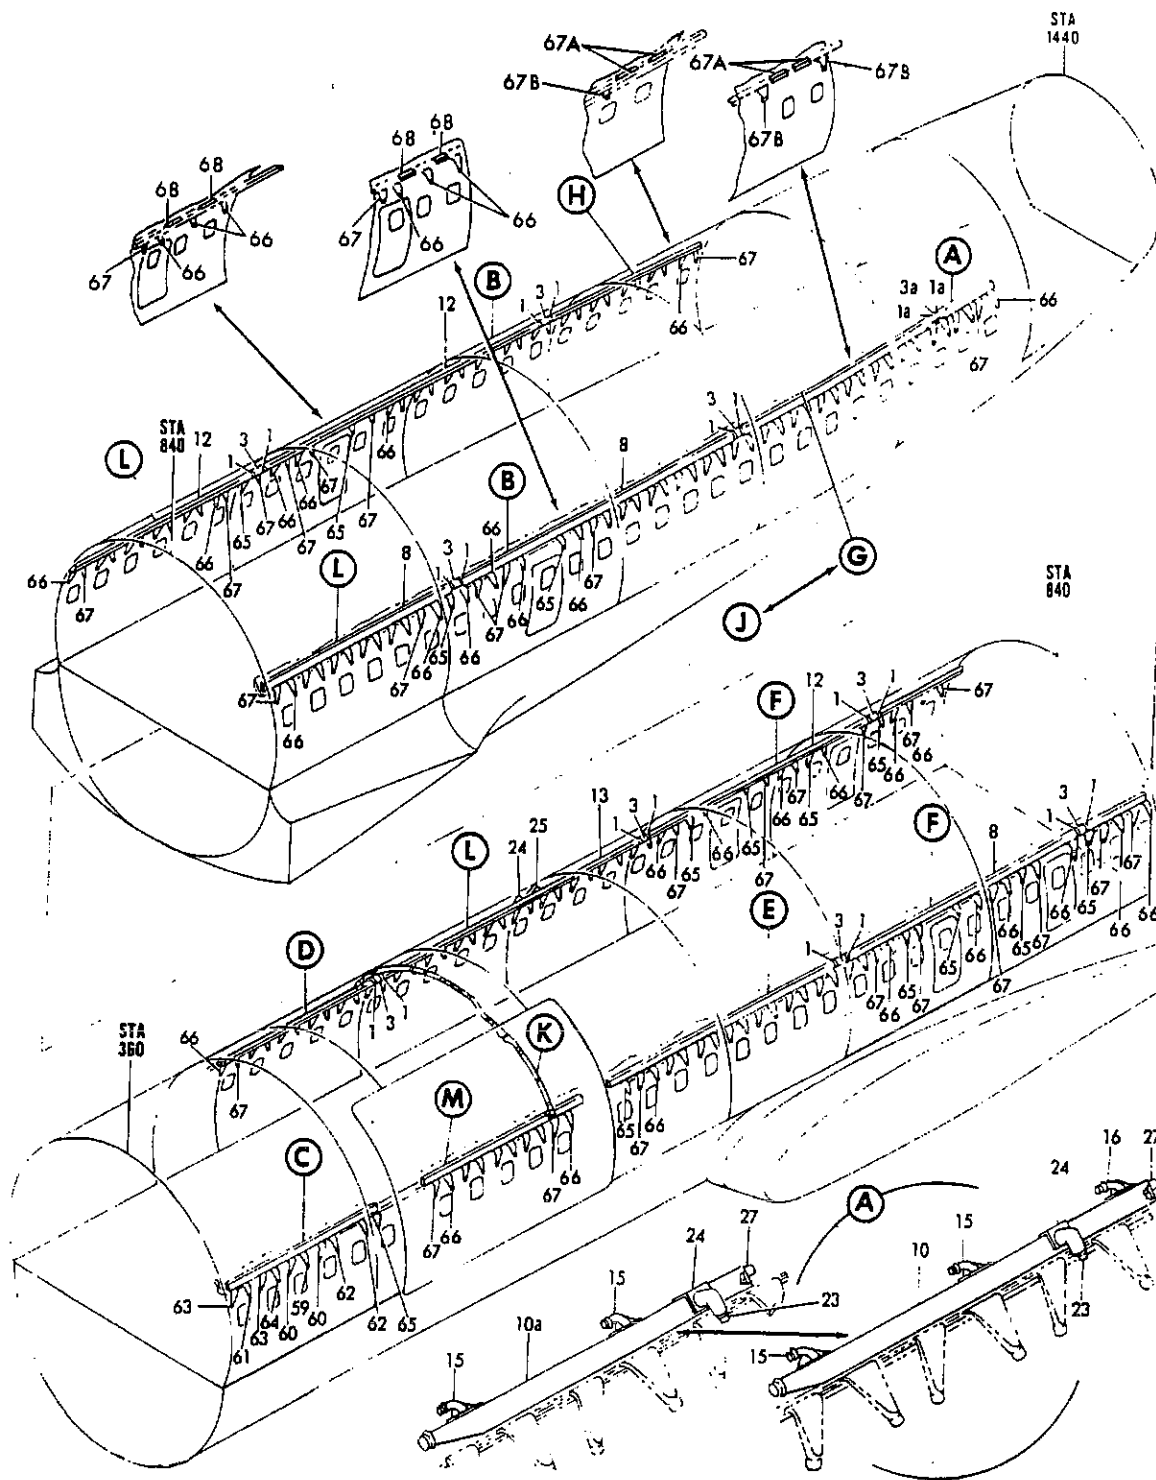


FIGURE 96G. COVE INSTL, PASSENGER CABIN (AIR CONDITIONING ONLY) (SHEET 1)

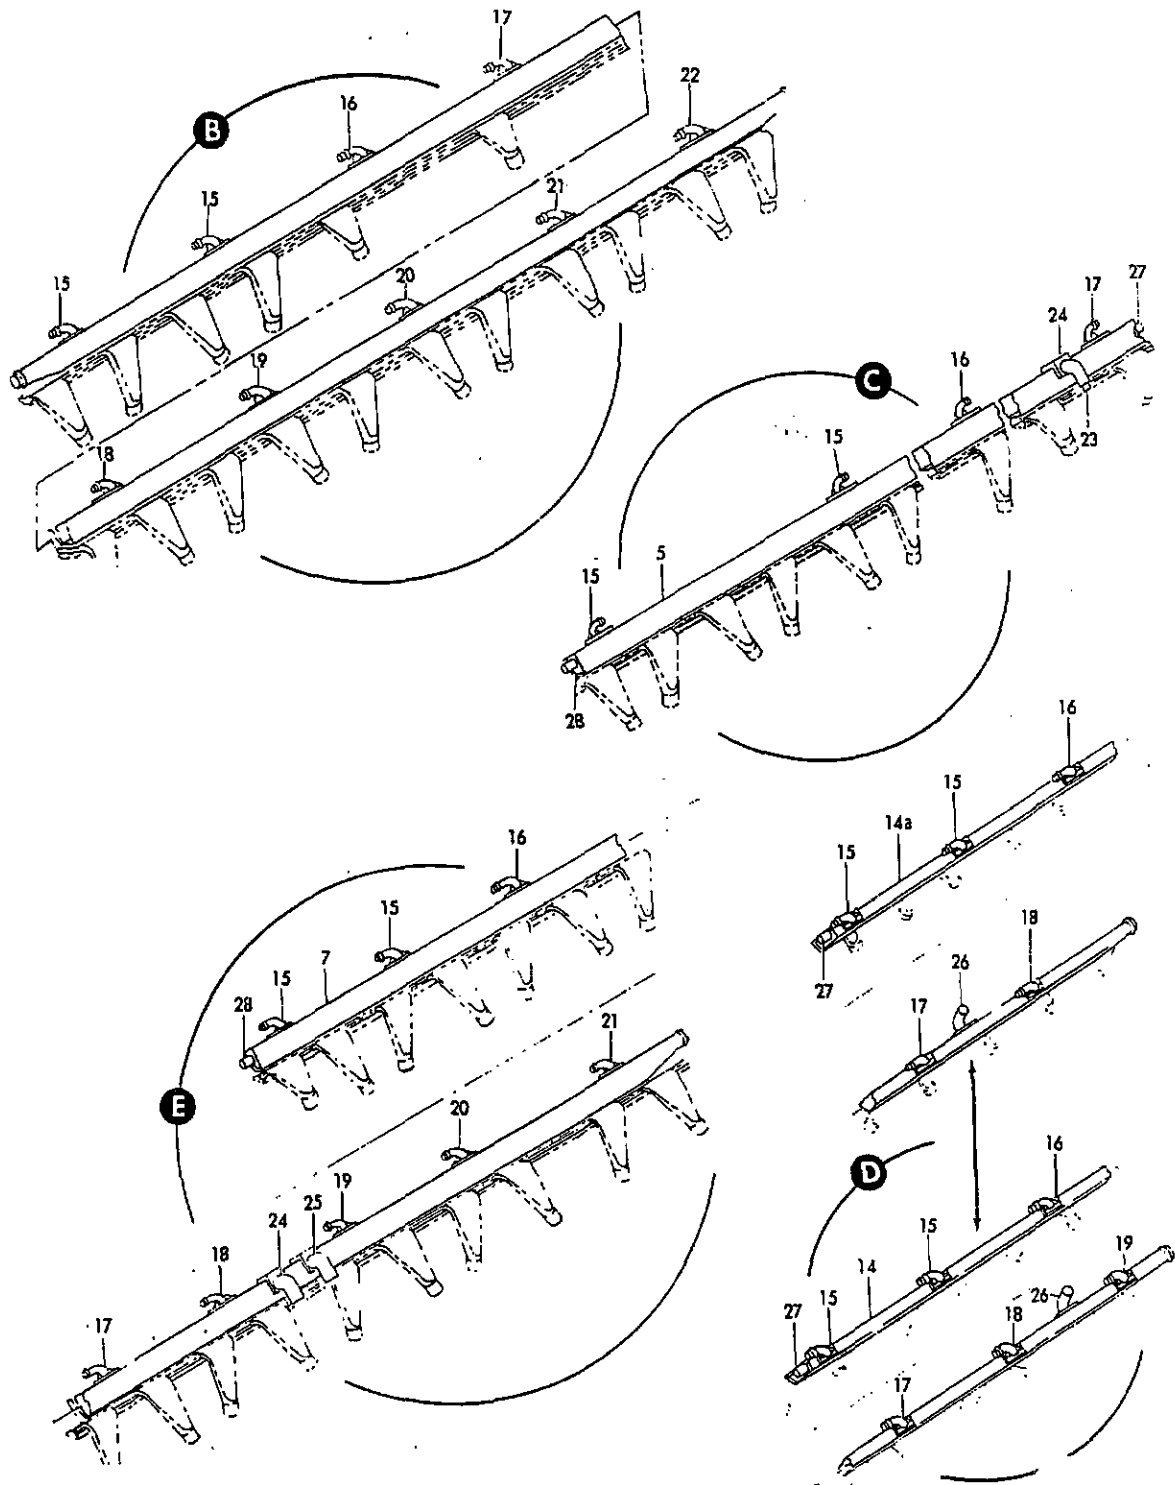


FIGURE 96G. COVE INSTL. PASSENGER CABIN (AIR CONDITIONING ONLY) (SHEET 2)

NOV 21/90

21-04-96G

DETAILED PARTS LIST
21-04-96G
PAGE 1

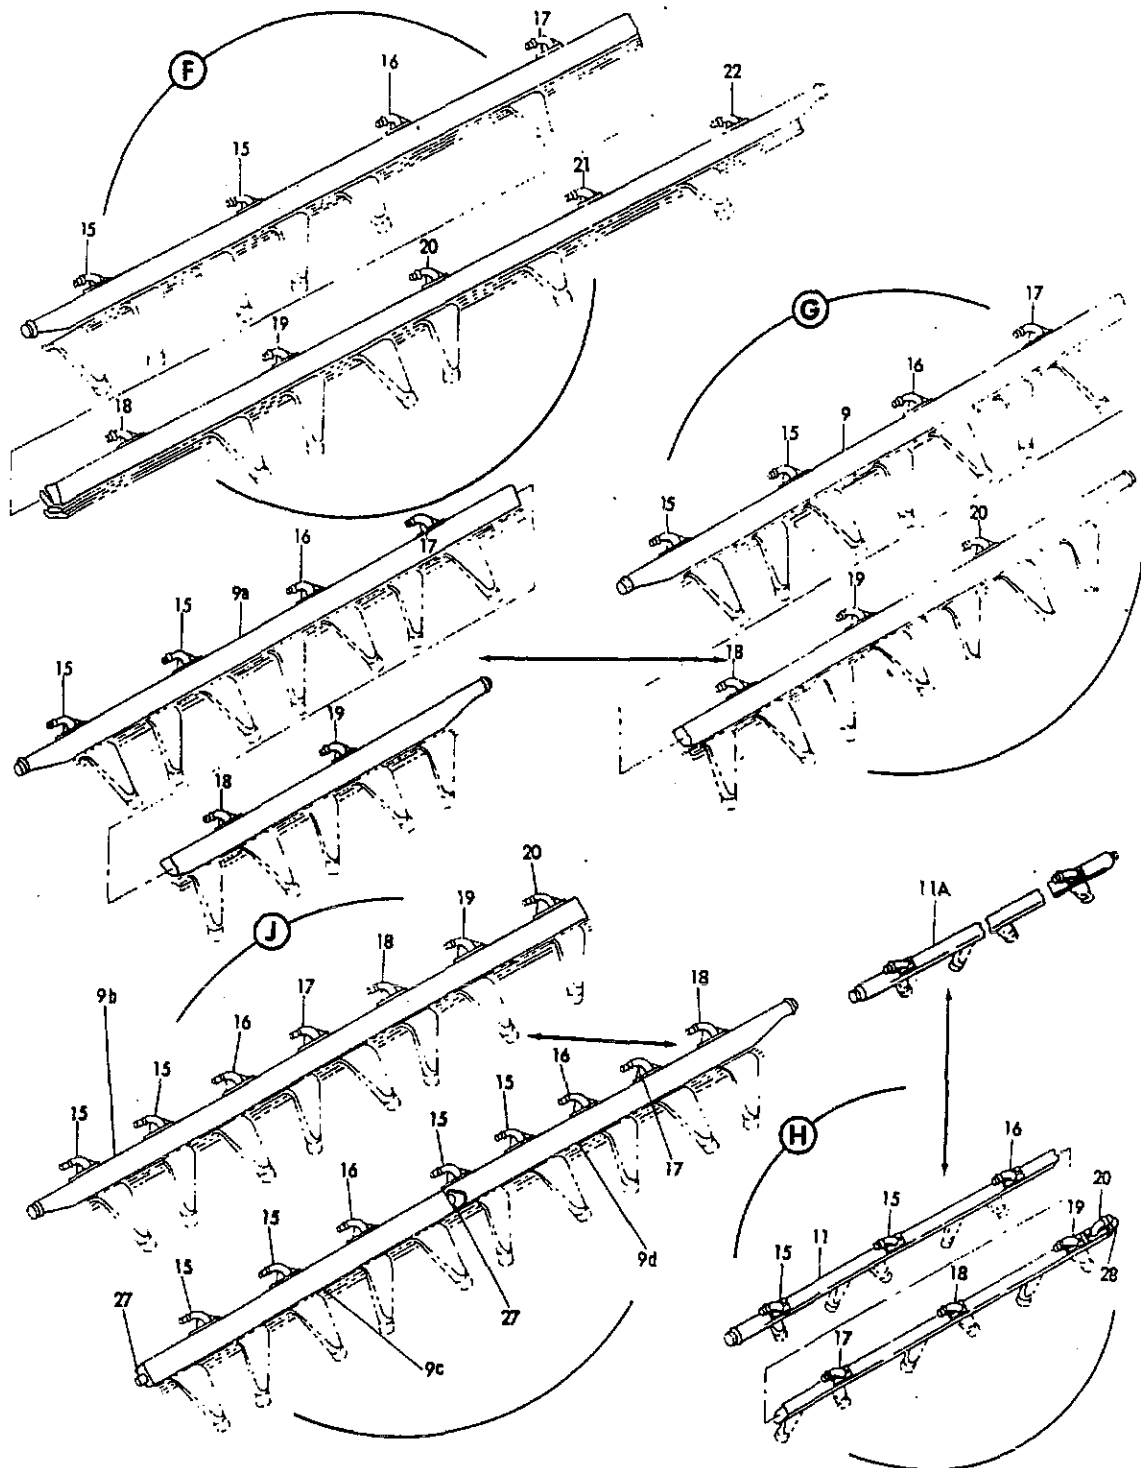


FIGURE 96G. COVE INSTL, PASSENGER CABIN (AIR CONDITIONING ONLY) (SHEET 3)

DETAILED PARTS LIST
21-04-96G
PAGE 2

21-04-96G

NOV 21/90

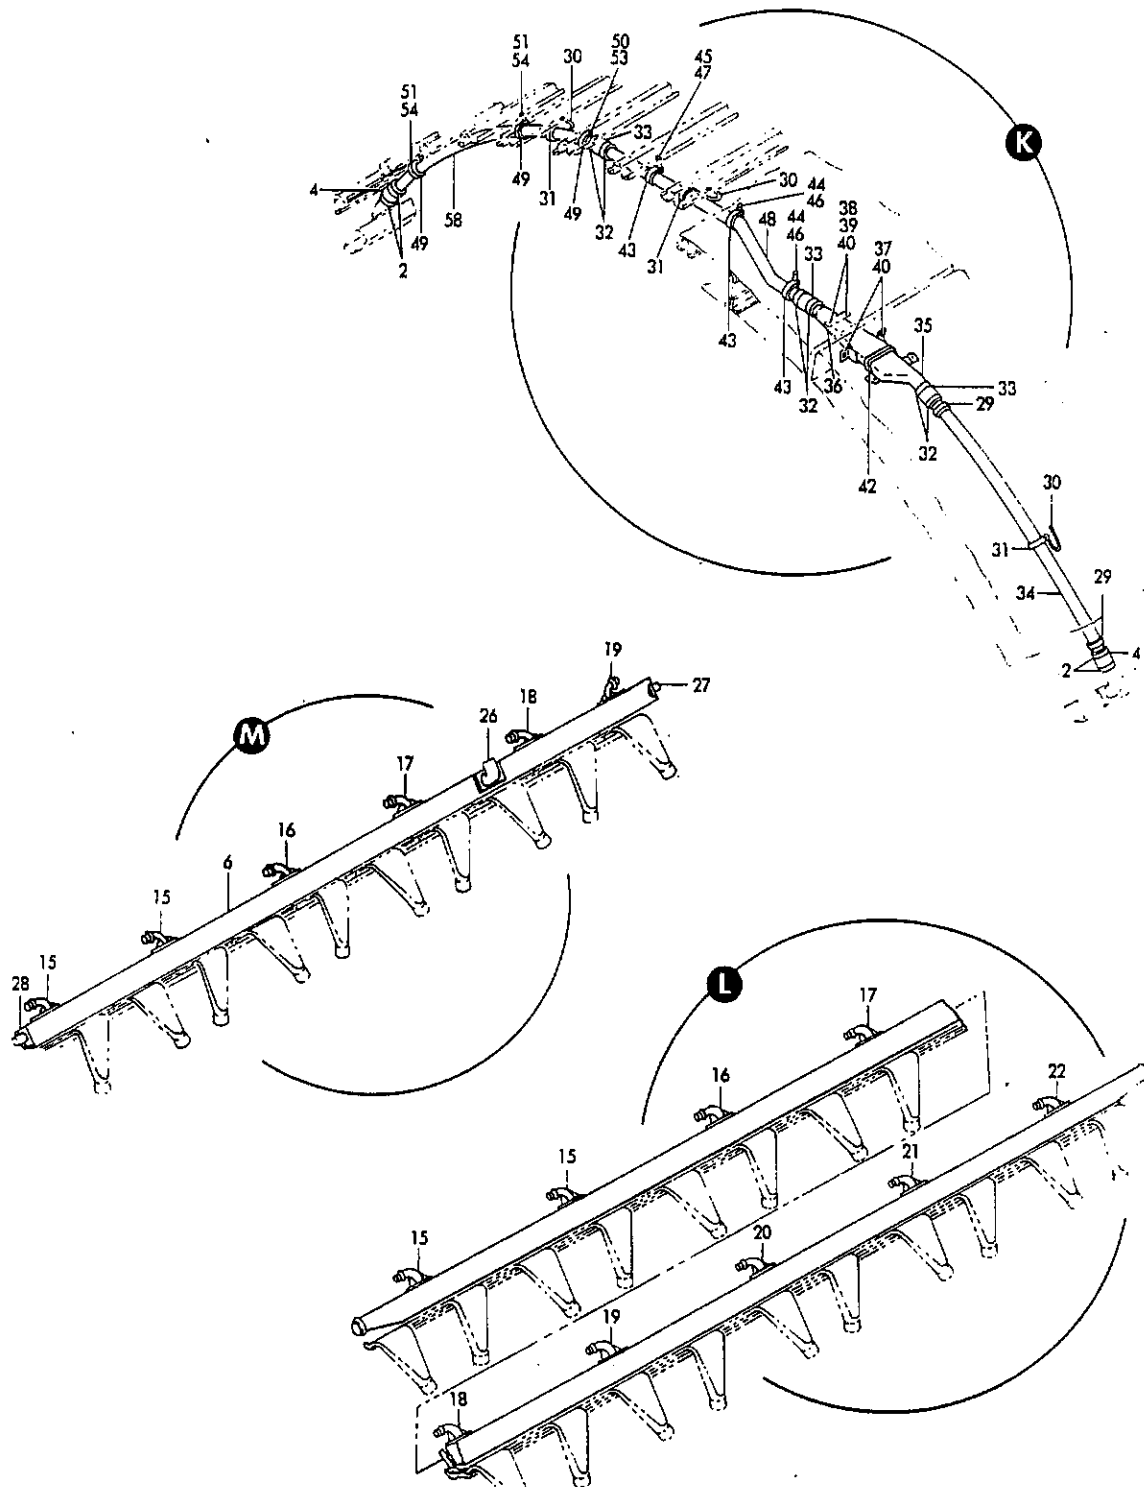


FIGURE 96G. COVE INSTL. PASSENGER C/BIN (AIR CONDITIONING ONLY) (SHEET 4)

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
96G	65-63959-5	COVE INSTL, PASSENGER CABIN (AIR CONDITIONING ONLY) . . (SEE 25-1, FIG. 23D, ITEM 8)	0150	RF
1	65-47132-10	. . DUCT INSTL, AIR DISTRIBUTION.	0150	1
1A	5028	. . CLAMP, (VB1646)	0150	18
2	5028	. . CLAMP, (VB1646)	0150	2
3	5016	. . CLAMP, (VB1646)	0150	4
3A	BACD4088-2-5-11	. . DUCT.	0150	9
4	BACD4088-2-5-11	. . DUCT.	0150	1
5	BACD4085-2-5-11	. . DUCT.	0150	2
6	65-47131-25	. . DUCT ASSY, 91.71 IN. CARGO LOUNGE	0150	1
7	65-47131-39	. . DUCT ASSY, 104.30 IN. CARGO DOOR LH	0150	1
8	65-47131-38	. . DUCT ASSY, 165.55 IN. STATION 600 LH.	0150	1
9A	65-47131-7	. . DUCT ASSY, STANDARD SECTION LH.	0150	3
10	65-47131-34	. . DUCT ASSY, 119.50 IN. LH.	0150	1
11	65-47131-31	. . DUCT ASSY, 47.20 IN. AFT LH.	0150	1
12	65-47131-37	. . DUCT ASSY, 110.20 IN. AFT RH.	0150	1
13	65-47131-8	. . DUCT ASSY, STANDARD SECTION RH.	0150	3
14A	65-47131-4	. . DUCT ASSY, 179.50 IN. STATION 600J RH.	0150	1
15	65-47131-36	. . DUCT ASSY, 96.30 IN. FORWARD RH.	0150	1
16	66-10300	. . OUTLET.	0150	2
17	66-10300	. . OUTLET, (NOT USED ON 65-47131-60)	0150	1
18	66-10300	. . OUTLET, (NOT USED ON 65-47131-29, -31, -60 AND . . -62)	0150	1
19	66-10300	. . OUTLET, (NOT USED ON 65-47131-25, -29, -31, -60, . . -36, -62 AND -63)	0150	1
20	66-10300	. . OUTLET, (USED ON 65-47131-38, -7, -27, -37, -8, . . -4 AND -61)	0150	1
21	66-10300	. . OUTLET, (USED ON 65-47131-38, -7, -8 AND -4)	0150	1
22	66-10300	. . OUTLET, (USED ON 65-47131-7, -8 AND -4)	0150	1
23	66-10501	. . ADAPTER, TOILET AIR OUTLET GASPER (USED ON 65-47131-25, -29, -31, -60, -61 AND -63)	0150	1
24	69-10735	. . ELBOW, GASPER (USED ON 65-47131-25, -38, -29, . . -31, -60, -4, -61 AND -63)	0150	1
25	69-10735	. . ELBOW, GASPER (USED ON 65-47131-38 AND -4)	0150	1
26	69-10735-9	. . ELBOW, GASPER (USED ON 65-47131-39, -40, -36, . . AND -75)	0150	1
27	69-36311-1	. . PLUG, GASPER END (USED ON 65-47131-25, -39, -29, . . -31, -60, -40, -36, -61 AND -63)	0150	1
28	69-36311-2	. . PLUG, GASPER END (USED ON 65-47131-25, -37, -38, . . -39, -75, -76)	0150	1
29	65-54121-1	. . DUCT INSTL, CROSSOVER	0150	1
	BACC10DK20	. . CLAMP	0150	2
	NAS603-12P	. . ATTACHING PARTS		
	AN960D10L	. . SCREW	0150	2
	NAS42DD6-8	. . WASHER.	0150	2
	NAS679A3W	. . SPACER.	0150	2
		. . NUT	0150	2
30	BACJ40K5A5A4	. . JUMPER.	0150	3
	NAS603-7P	. . ATTACHING PARTS		
	AN960D10L	. . SCREW	0150	6
	MS35338-43	. . WASHER.	0150	12
	NAS679A3W	. . WASHER.	0150	6
		. . NUT	0150	6
31	AN735D20	. . CLAMP	0150	3
32	5016	. . CLAMP, (VB1646)	0150	6
33	BACD4085-1-5-11	. . TUBE.	0150	3
34	65-54121-3	. . DUCT, SECTION LH.	0150	1
35	69-42486-1	. . DUCT ASSY, TRANSITION LH.	0150	1
	NAS604-10P	. . ATTACHING PARTS		
	AN960D416L	. . SCREW	0150	2
		. . WASHER.	0150	2
36	69-42486-2	. . DUCT ASSY, TRANSITION RH.	0150	1
37	NAS603-7P	. . ATTACHING PARTS		
38	NAS603-10P	. . SCREW	0150	2
39	BACS18F25B	. . SCREW	0150	2
40	AN960D10L	. . SPACER.	0150	2
41	AN960D416L	. . WASHER.	0150	4
		. . WASHER.	0150	2

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R 96G 42	69-42486-7	.	.	.	.	.	.	SEAL, (USED ON 65-42486-2).	0150	1
R 43	BACC10DK20	.	.	.	.	.	.	CLAMP	0150	3
		.	.	.	.	.	.	ATTACHING PARTS		
R 44	NAS603-18P	.	.	.	.	.	.	SCREW	0150	2
R 45	NAS603-30P	.	.	.	.	.	.	SCREW	0150	1
R 46	BACS18F50B	.	.	.	.	.	.	SPACER.	0150	2
R 47	BACS18F125B	.	.	.	.	.	.	SPACER.	0150	1
		.	.	.	.	.	.	-----*		
R 48	65-54121-2	.	.	.	.	.	.	DUCT, CENTER SECTION.	0150	1
R 49	BACC10DK20	.	.	.	.	.	.	CLAMP	0150	3
		.	.	.	.	.	.	ATTACHING PARTS		
R 50	NAS603-13P	.	.	.	.	.	.	SCREW	0150	1
R 51	NAS603-26P	.	.	.	.	.	.	SCREW	0150	2
R 53	BACS18F12B	.	.	.	.	.	.	SPACER.	0150	1
R 54	BACS18F100B	.	.	.	.	.	.	SPACER.	0150	2
		.	.	.	.	.	.	-----*		
R 58	65-54121-4	.	.	.	.	.	.	DUCT, LH SECTION.	0150	1
R 59	65-32548-1	.	.	.	.	.	.	OUTLET, CONNECTION.	0150	1
R 60	65-32548-2	.	.	.	.	.	.	OUTLET, CONNECTION.	0150	2
R 61	65-32548-3	.	.	.	.	.	.	OUTLET, CONNECTION.	0150	1
R 62	65-32548-5	.	.	.	.	.	.	OUTLET, CONNECTION.	0150	2
R 63	65-32548-6	.	.	.	.	.	.	OUTLET, CONNECTION.	0150	2
R 64	65-32548-7	.	.	.	.	.	.	OUTLET, CONNECTION.	0150	1
R 65	65-28942-1	.	.	.	.	.	.	OUTLET, CONNECTION.	0150	14
		.	.	.	.	.	.	FOR REFERENCE TO OTHER COVE DETAILS, SEE NHA.	0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

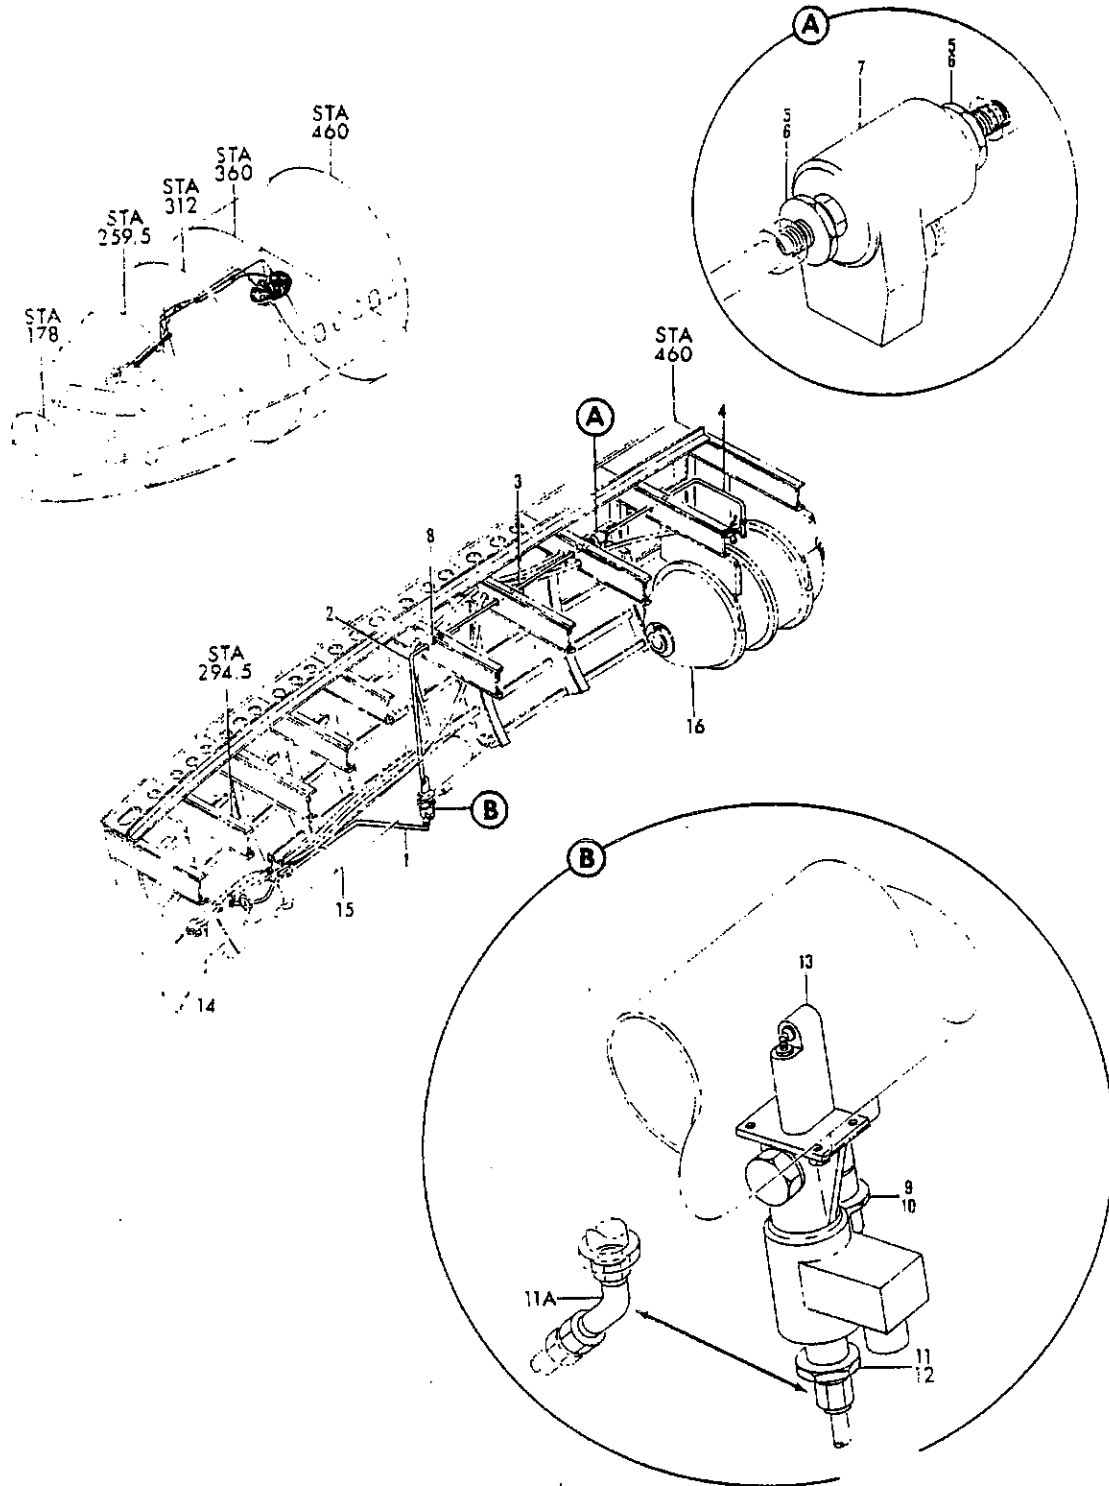


FIGURE 101A. HUMIDIFIER INSTL. PILOT'S COCKPIT



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 8 7	EFF FROM TO	UNITS PER ASSY
R 101A	65-45357-1	HUMIDIFIER INSTL, PILOTS COCKPIT (SEE 21-2, FIG. 2, . . .	0150	RF
R		ITEM 33)		
R 1	65-45357-5	. TUBE ASSY, HUMIDIFIER WATER SUPPLY.	0150	1
R		1/4 .028 AISI321 (OPTIONAL AISI347) (DELETED		
R		BY RAF MOD 7211.019-228)		
R	MS21921-4C	. . . NUT	0150	2
R	BACS13AP4C	. . . SLEEVE.	0150	2
R	65-45357-4	. TUBE ASSY, COMPRESSED GAS 3/8 .028 6061-T6.	0150	1
R		(DELETED BY RAF MOD 7211.019-228)		
R	2	. TUBE ASSY, COMPRESSED GAS 3/8 .028 6061-T6.	0150	1
R	65-45357-3	. . . NUT	0150	2
R	MS21921-6D	. . . SLEEVE.	0150	2
R	BACS13AP6	. TUBE ASSY, COMPRESSED GAS 3/8 .028 AISI321 (OPTIONAL	0150	1
R	4	AISI347) (DELETED BY RAF MOD 7211.019-228)		
R	MS21921-6D	. . . NUT	0150	1
R	MS21921-6C	. . . NUT	0150	1
R	BACS13AP6C	. . . SLEEVE.	0150	2
R	5	. ADAPTER, UNION (CUSTOMER FURNISHED)	0150	2
R	BOAA80070	. WASHER, SEALING (CUSTOMER FURNISHED).	0150	2
R	6	. VALVE, ELECTRO-MAGNETIC (V33390) (CUSTOMER FURNISHED)	0150	1
R	7	. UNION	0150	1
R	8	. ADAPTER, UNION (CUSTOMER FURNISHED)	0150	1
R	9	. WASHER, SEALING (CUSTOMER FURNISHED).	0150	1
R	10	. ADAPTER, UNION (CUSTOMER FURNISHED)	0150	1
R	11	. ELBOW, (CUSTOMER FURNISHED)	0150	1
R	11A	. WASHER, SEALING (CUSTOMER FURNISHED).	0150	1
R	12	. ATTACHING PARTS		
R	AN3-4A	. BOLT.	0150	4
R		-----*		
R	13	. HUMIDIFIER, (0000B) (CUSTOMER FURNISHED).	0150	1
R		(DELETED BY RAF MOD 7211.019-228)		
R	14	WATER SYSTEM INSTL, FORWARD POTABLE (FOR REF SEE 38-1,	0150	RF
R		FIG. 4)		
R	15	DUCT ASSY, STATION 300 TO 360 AIR DISTRIBUTION (FOR . .	0150	RF
R		REF SEE FIG. 9)		
R	16	TANK INSTL, FORWARD POTABLE WATER (FOR REF SEE 38-1,. .	0150	RF
R		FIG. 26)		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

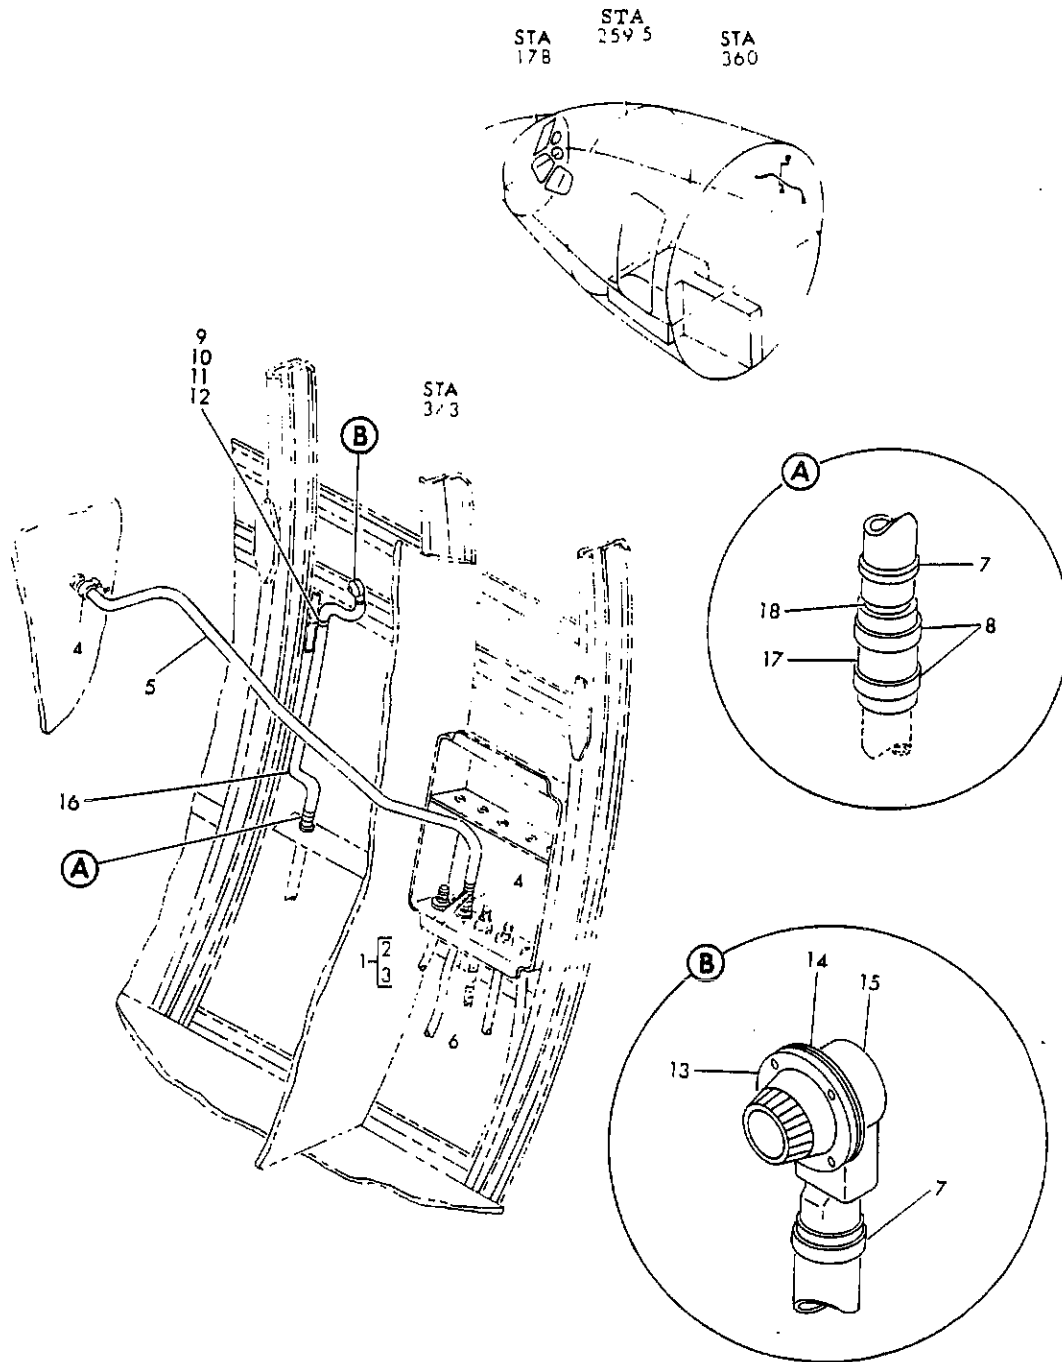


FIGURE 104B. LAVATORY ASSY, TOILET COMPARTMENT B PALLETIZED (AIR CONDITIONING ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R	104B	65-29519-49	LAVATORY ASSY, TOILET COMPARTMENT B PALLETIZED.							0150	RF
			(AIR CONDITIONING ONLY) (REWORKED BY SB 3146 AND								
			SB 3159) (SEE 25-1, FIG. 127, ITEM 15)								
		65-29519-120	LAVATORY ASSY, TOILET COMPARTMENT B PALLETIZED.							5199	RF
			(SEE 25-1, FIG. 180C, ITEM 1)								
	1	66-18761-3	. TAG ASSY, SERVICE LINE IDENTIFICATION								1
	2	BACM9L10NR	. . SCOTCH-CAL, COOL AIR.								1
3	BACB15A2	. . BAND.								1	
4	AN737TW34	. CLAMP								2	
5	BACD40B3-120-3-4	. DUCT.								1	
6	22742	. RECEPTACLE, GASPER AIR (V53655)								1	
		. FOR REFERENCE TO OTHER LAVATORY DETAILS, SEE NHA. . .									
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

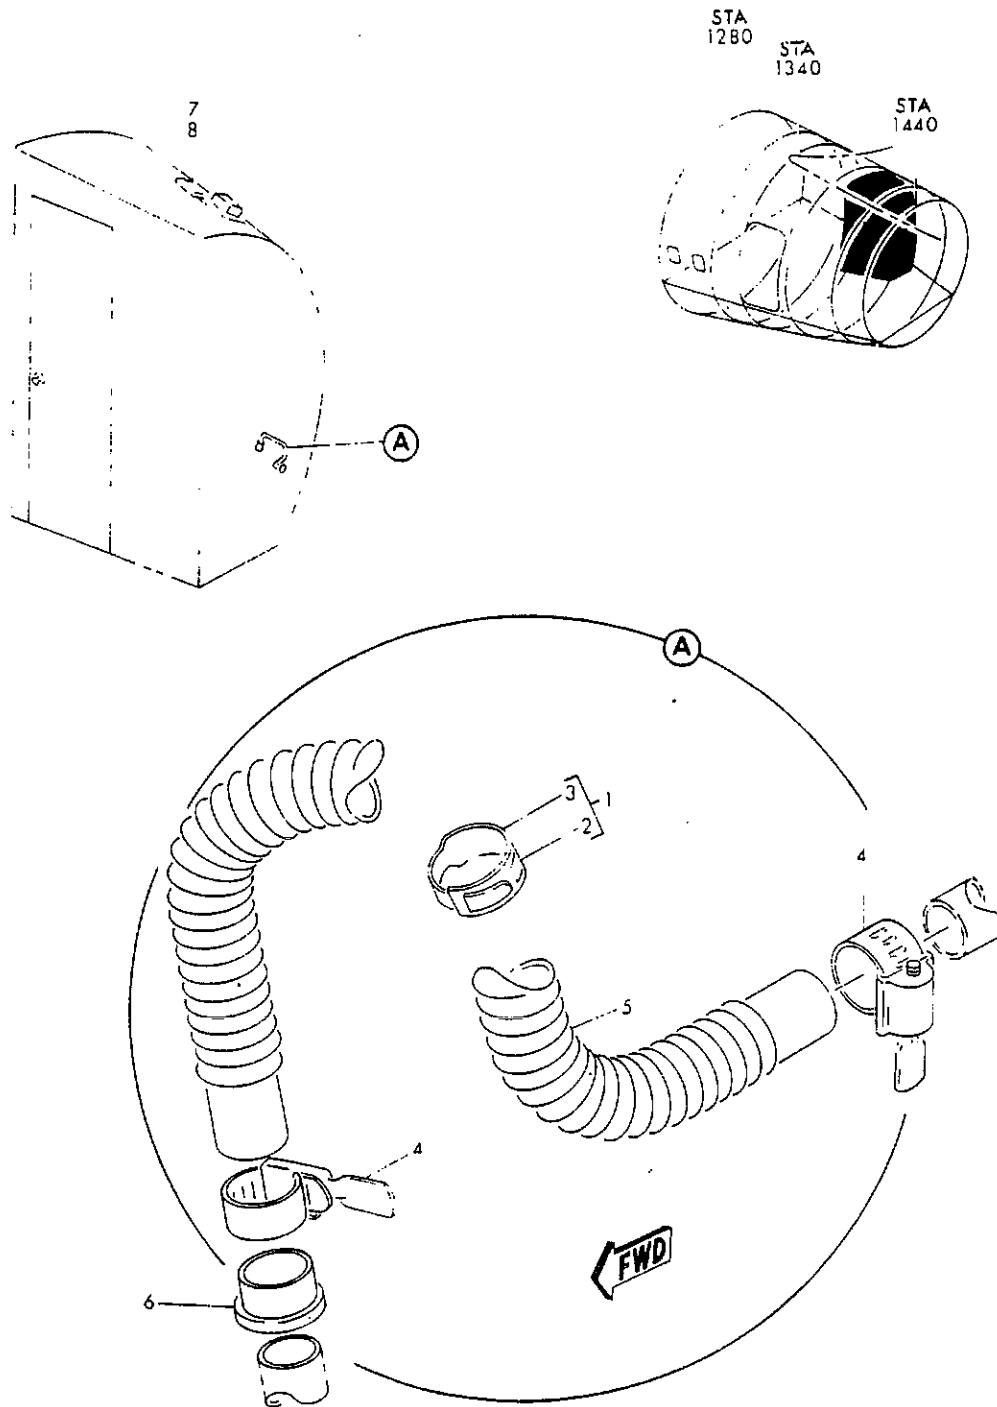


FIGURE 105E. LAVATORY ASSY, TOILET COMPARTMENT E PALLETIZED (AIR CONDITIONING ONLY)



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R R R R R R R R R R R R	105E	65-29520-50	LAVATORY ASSY, TOILET COMPARTMENT E PALLETIZED (AIR . . . CONDITIONING ONLY) (REWORKED BY SB 3146 AND SB 3159) (SEE 25-1, FIG. 127, ITEM 18)							0150	RF
		65-29520-123	LAVATORY ASSY, TOILET COMPARTMENT E PALLETIZED (AIR . . . CONDITIONING ONLY) (SEE 25-1, FIG. 180C, ITEM 81 AND 25-1, FIG. 180H, ITEM 542)							5199	RF
	1	66-18761-3	. TAG ASSY, TOILET SERVICE LINE IDENTIFICATION.								1
	2	BACM9L10NR	. . SCOTCH-CAL, COOL AIR.								1
	3	BACB15A2	. . BAND.								1
	4	AN737TW34	. CLAMP								2
	5	BACD40B3-120-3-4	. DUCT.								1
	6	22742	. RECEPTACLE, GASPER AIR (V53655)								1
		65-33889-2D	. PLATE INSTL, PASSENGER SERVICE UNIT COVER							0150	1
		65-33889-2N	. PLATE INSTL, PASSENGER SERVICE UNIT COVER							5199	1
	7	69-27368-4D	. . PLATE ASSY, TOILET E COVER.							0150	1
	7	69-27368-4F	. . PLATE ASSY, TOILET E COVER.							5199	1
	7	69-27368-6B	. . PLATE ASSY, TOILET E COVER.							5199	1
	8	69-27368-5D	. . . PLATE							0150	1
	8	69-27368-5F	. . . PLATE							5199	1
	8	69-27368-5	. . . PLATE							5199	1
			. FOR REFERENCE TO OTHER LAVATORY DETAILS, SEE NHA. . .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

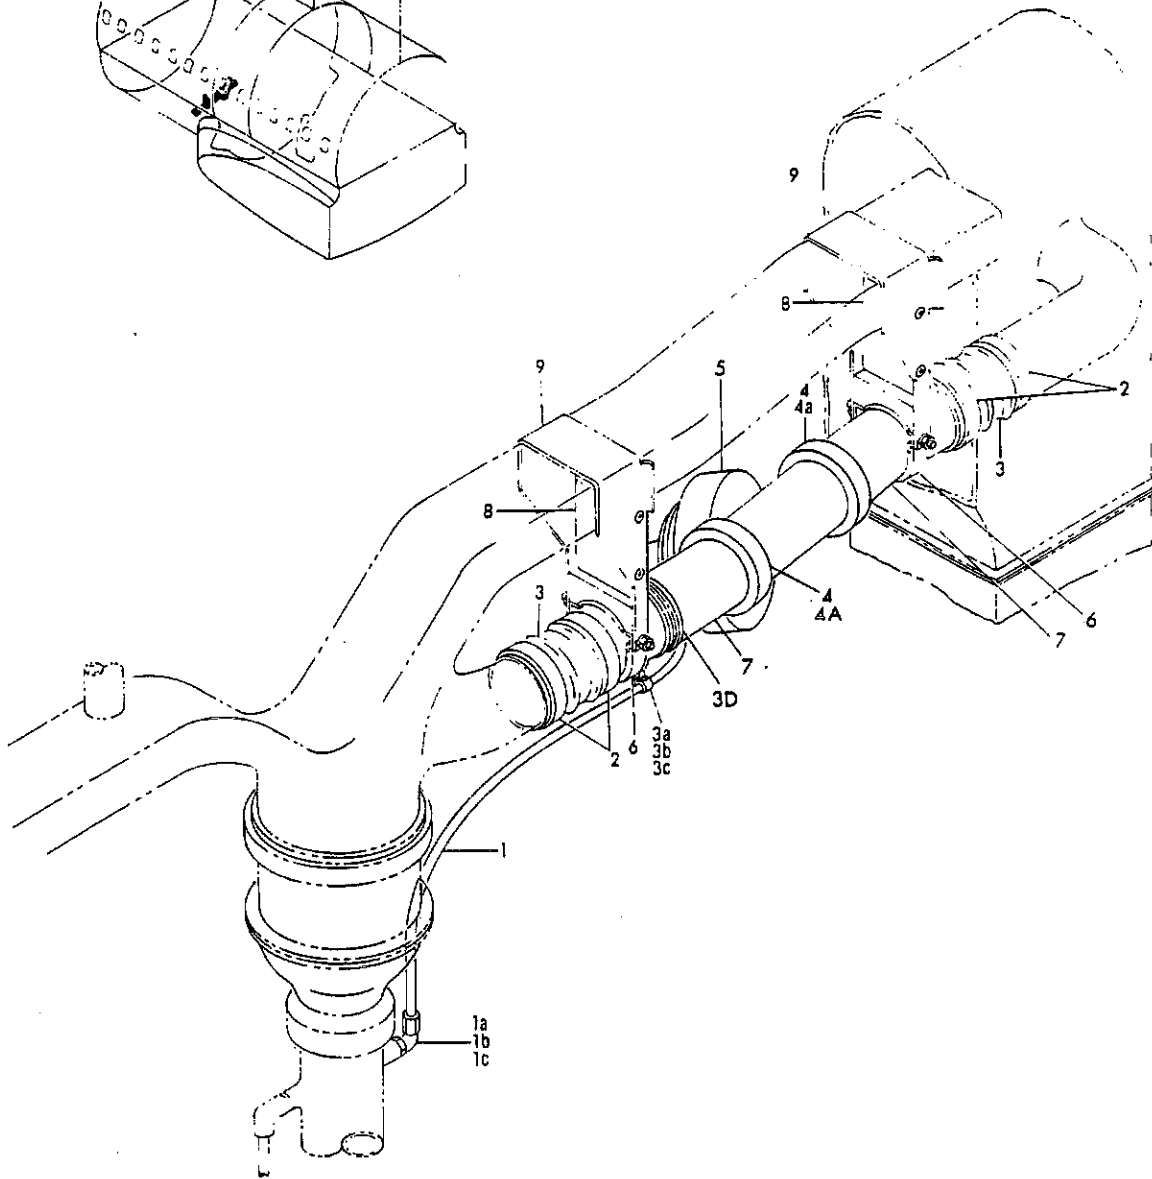


FIGURE 106. VALVE INSTL, GASPER SYSTEM SURGE BY PASS

DETAILED PARTS LIST
21-04-106
PAGE 0

21-04-106

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
106	65-55199-1		VALVE INSTL, GASPER SYSTEM SURGE BY PASS (SEE 21-2, . . FIG. 2, ITEM 7A)		RF
1	65-55199-3		. TUBE ASSY, GASPER SYSTEM SURGE BY PASS VALVE 1/4 IN. .028 6016-T6		1
	MS21921-4D		. . NUT		2
	BACS13AP4		. . SLEEVE.		2
1A	AN924-4D		. NUT		1
1B	MS2877B-4		. PACKING		1
1C	MS21908D4		. ELBOW		1
2	BACC10BNA312LR		. CLAMP		4
3	BACD40D12-13-10		. DUCT.		2
3A	NAS603-9		. SCREW		1
3B	NAS679A3W		. NUT		1
3C	BACC10DK4		. CLAMP		1
3D	MS21919DG48		. CLAMP		1
4	BACC10DU300C		. CLAMP		2
4A	BACG10R306		. GASKET.		2
5	10-61400-1		. VALVE ASSY.		1
6	BACC10BEC300G		. CLAMP		2
			(OPTIONAL BACC10AD300W)		
6	BACC10AD300W		. CLAMP		2
			(OPTIONAL TO BACC10BEC300G)		
			ATTACHING PARTS		
	NAS679A4W		. NUT		4
	AN960PD616		. WASHER.		8
			-----*		
7	65-55688-3		. DUCT ASSY		2
8	69-41954-1		. WEB		2
			ATTACHING PARTS		
	NAS603-6		. SCREW		8
	NAS679A3W		. NUT		8
			-----*		
9	69-41955-1		. HANGER, DUCT.		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

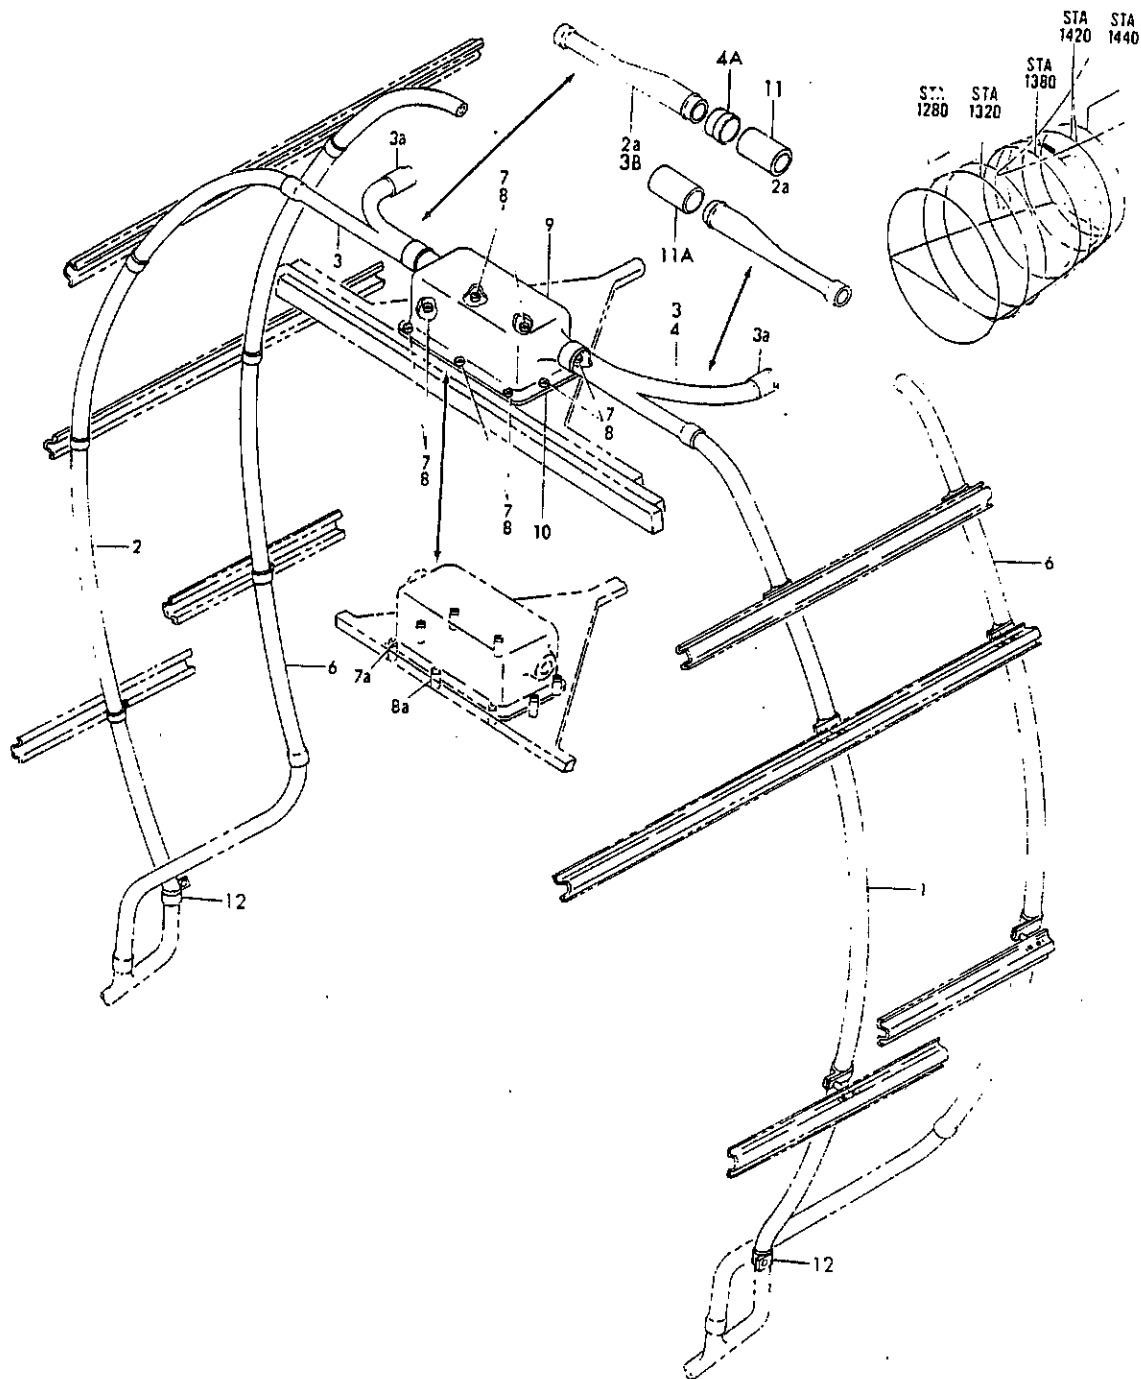


FIGURE 107. OUTLET INSTL, AFT CEILING AIR



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
107	65-57564-1	OUTLET INSTL, AFT CEILING AIR (SEE 21-2, FIG. 3, ITEM . 11)		RF
1	65-57564-5	. DUCT.		1
2	65-57564-6	. DUCT.		1
2A	69-44184-2	. DUCT.		2
6	65-57564-2	. DUCT.		2
7	NAS603-9	. SCREW		8
8	AN960D10L	. WASHER.		8
9	65-57292-1	. HEADER.		1
10	69-44185-1	. GASKET.		1
11	BACD40D10-13-5	. DUCT-AIR, SEMI-FLEX SLEEVE SECT		2
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

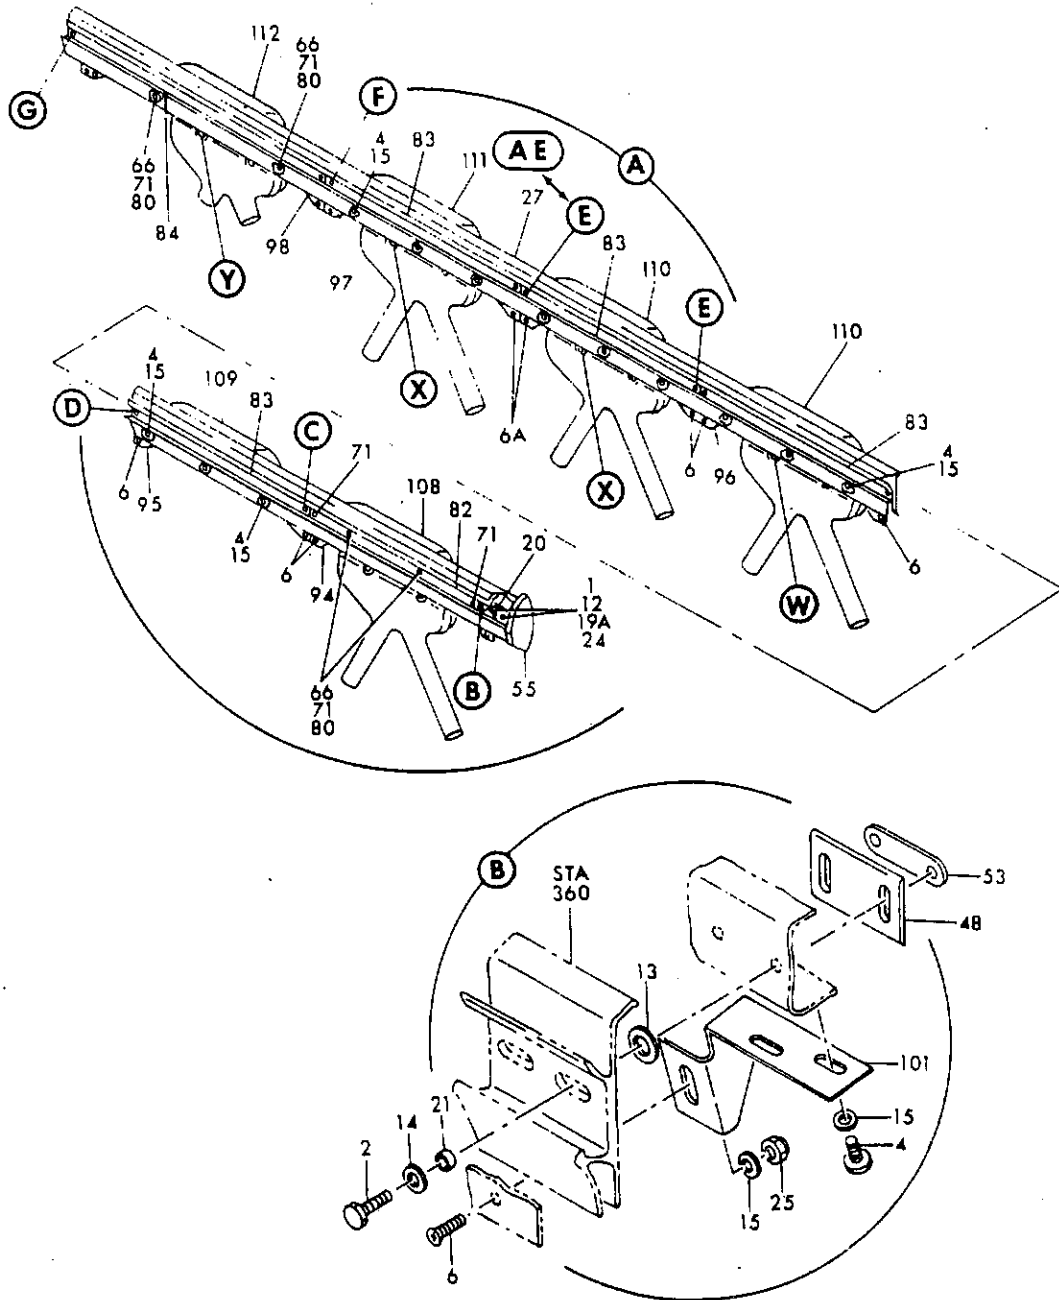


FIGURE 120G, OUTLET INSTL, AIR CONDITIONING (LH) (SHEET 2)

NUV 21/90

21-04-120G

DETAILED PARTS LIST
21-04-120G
PAGE 1

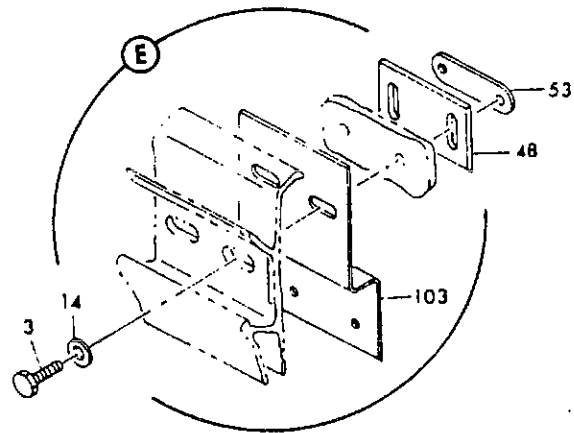
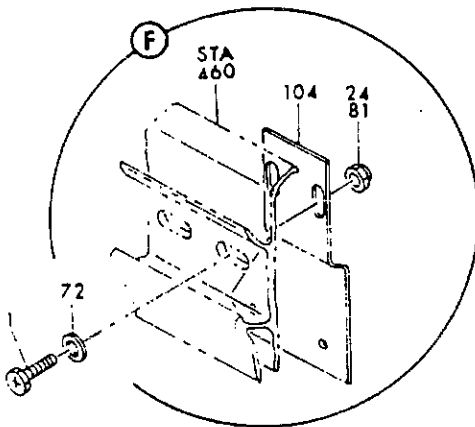
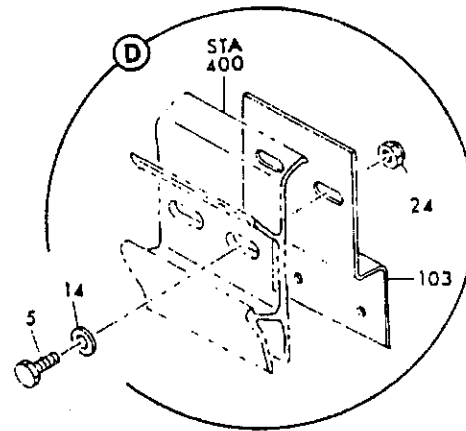
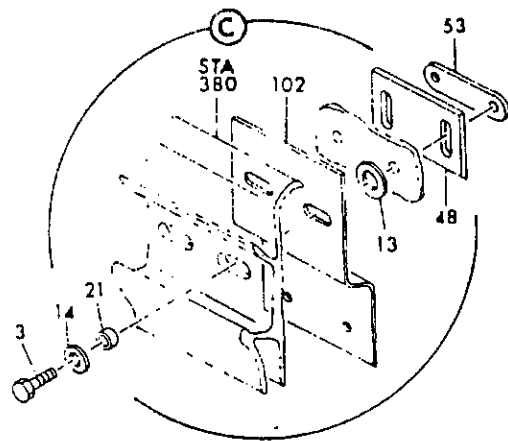


FIGURE 120G. OUTLET INSTL. AIR CONDITIONING (LH) (SHEET 3)

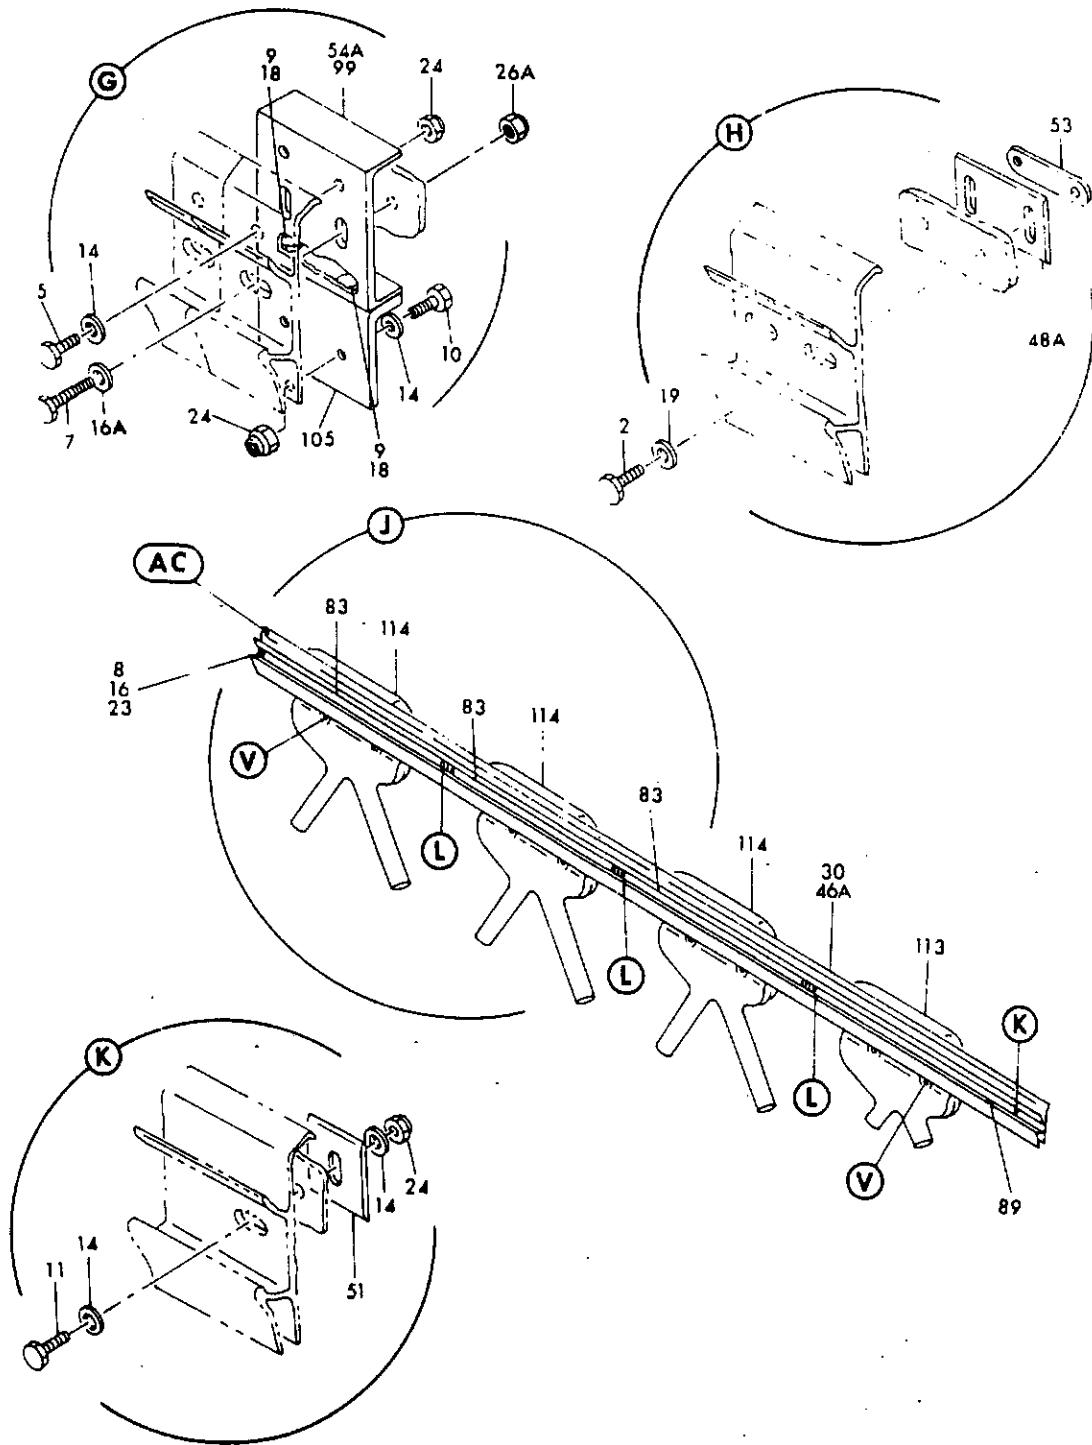


FIGURE 120G. OUTLET INSTL, AIR CONDITIONING (LH) (SHEET 4)

NOV 21/90

21-04-120G

DETAILED PARTS LIST
21-04-120G
PAGE 3

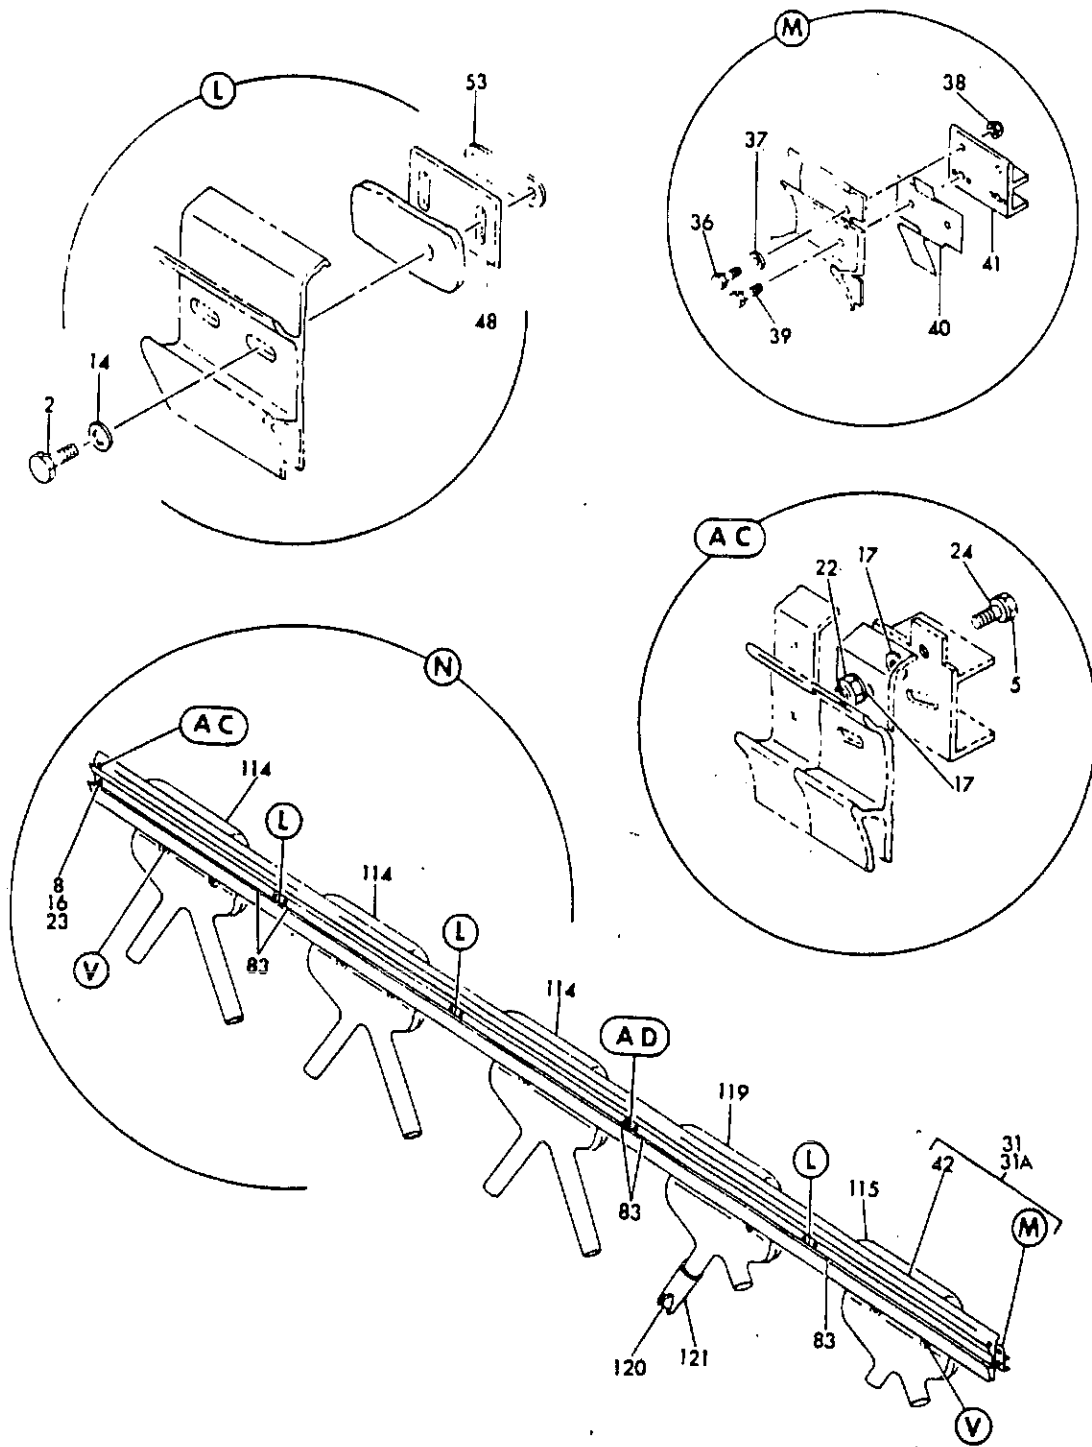


FIGURE 120C. OUTLET INSTL, AIR CONDITIONING (LH) (SHEET 5)

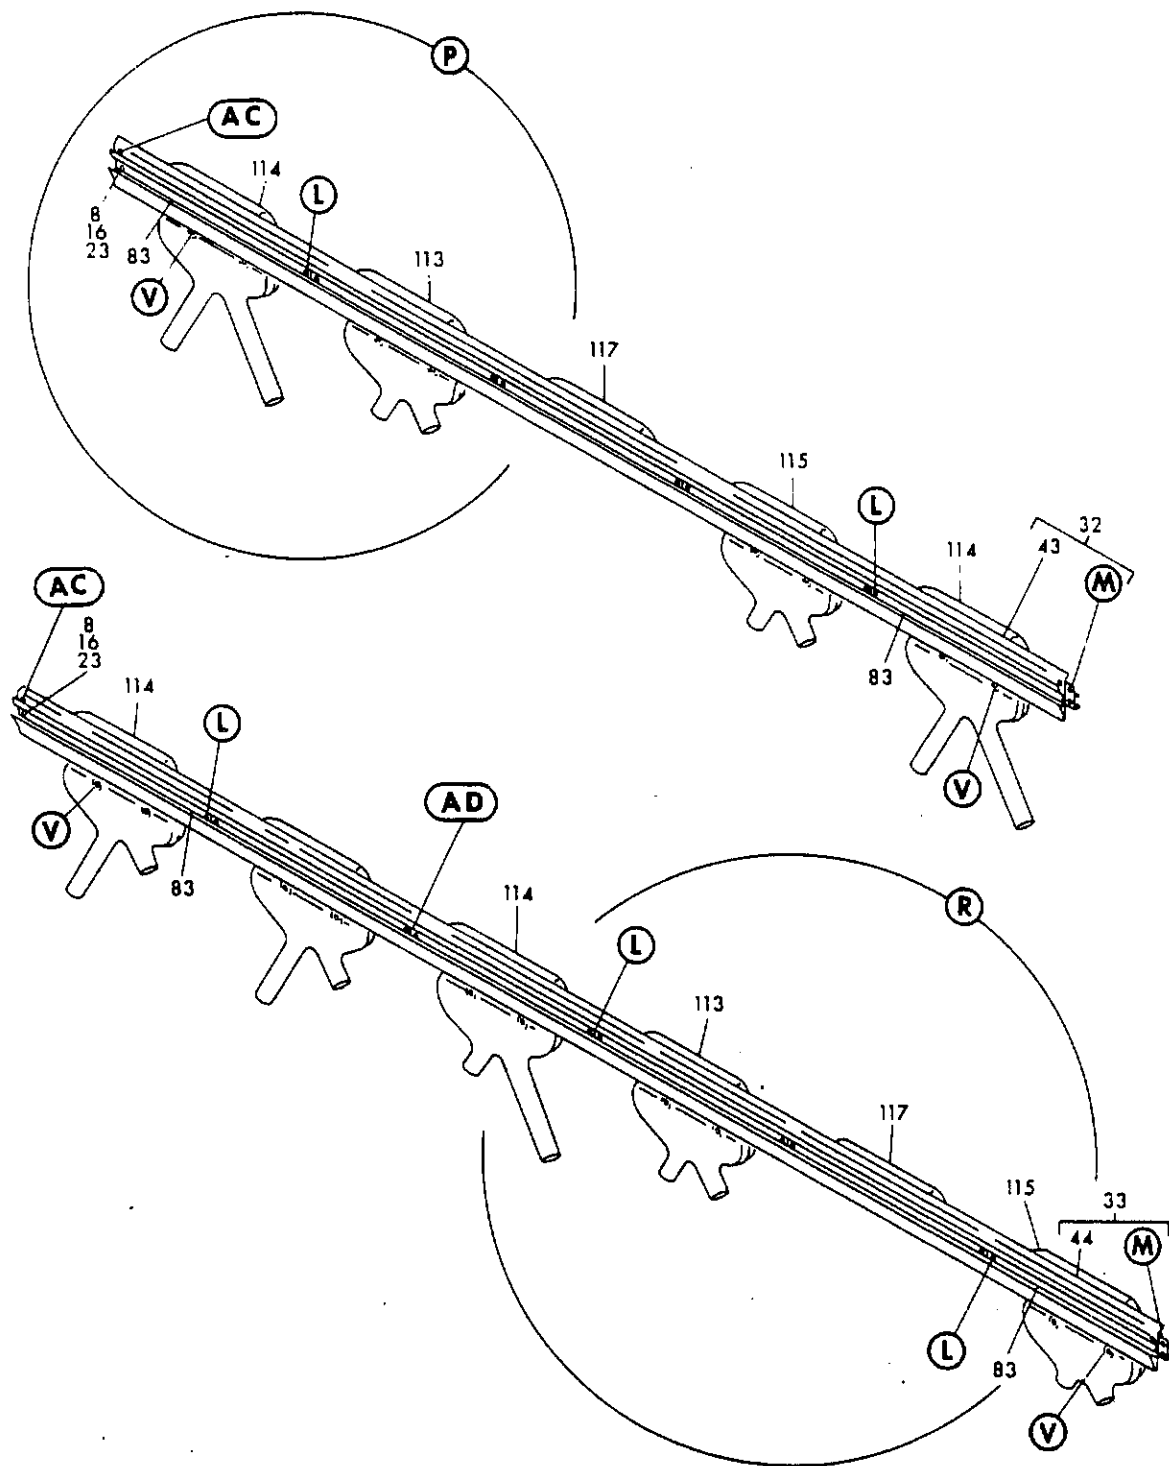


FIGURE 120G. OUTLET INSTL, AIR CONDITIONING (LH) (SHEET 6)

NOV 21/90

21-04-120G

DETAILED PARTS LIST
21-04-120G
PAGE 5

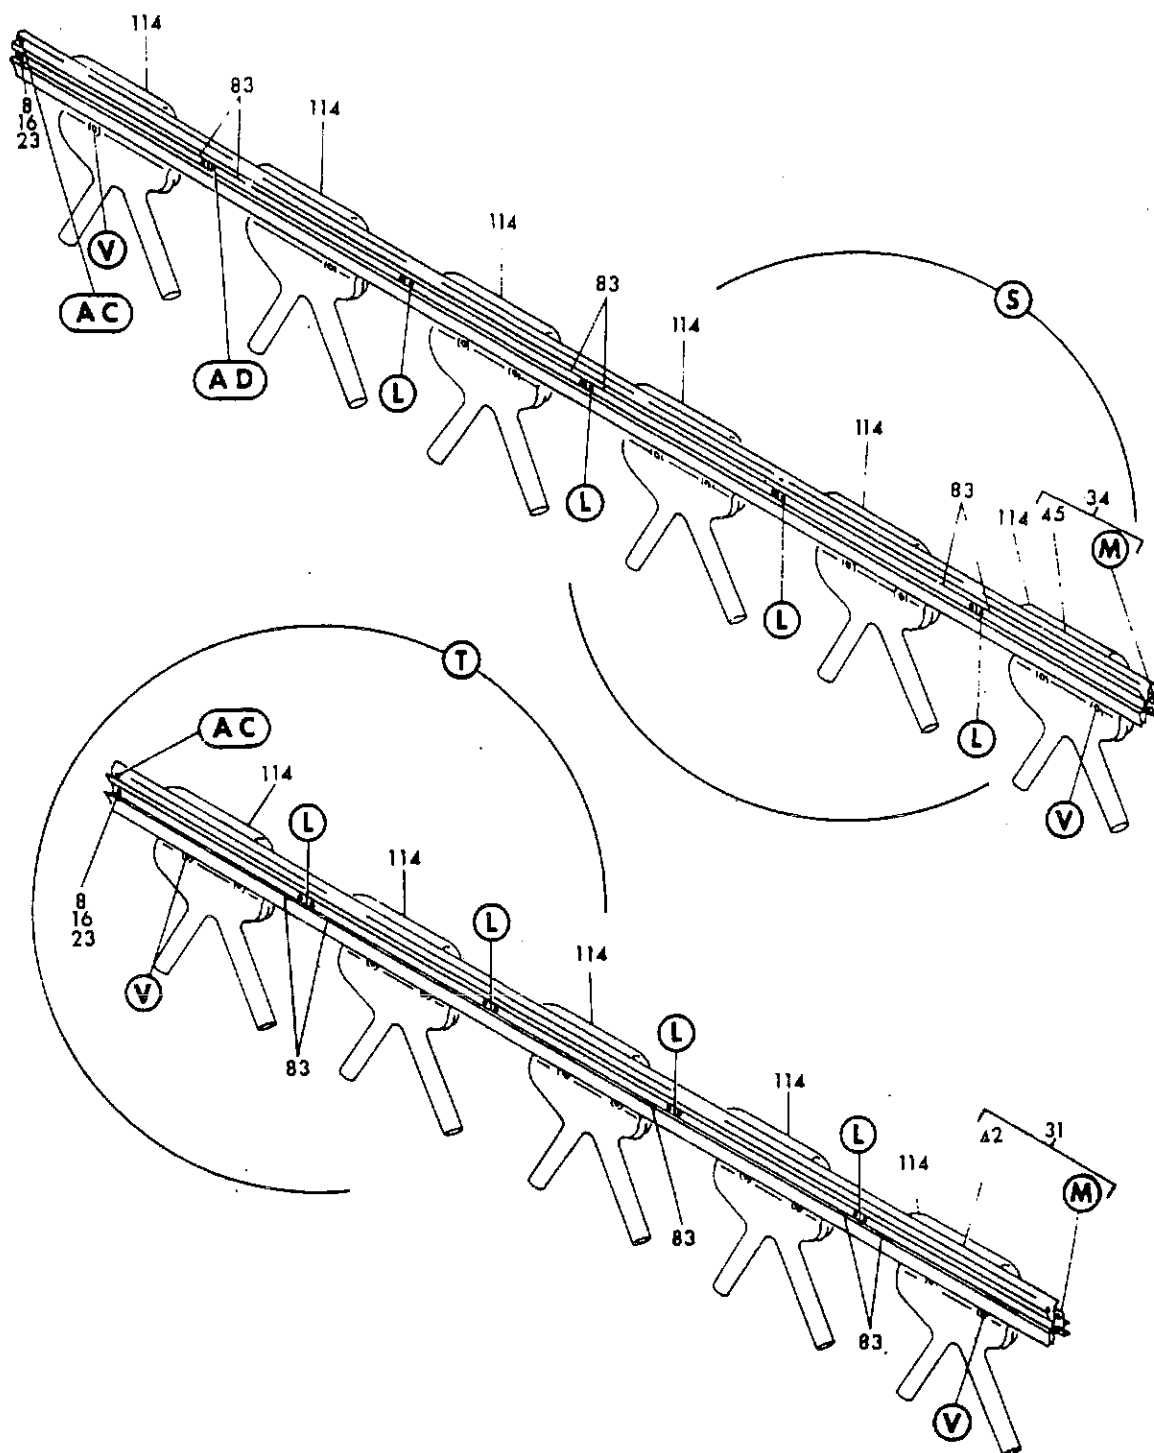


FIGURE 120G. OUTLET INSTL, AIR CONDITIONING (LH) (SHEET 7)

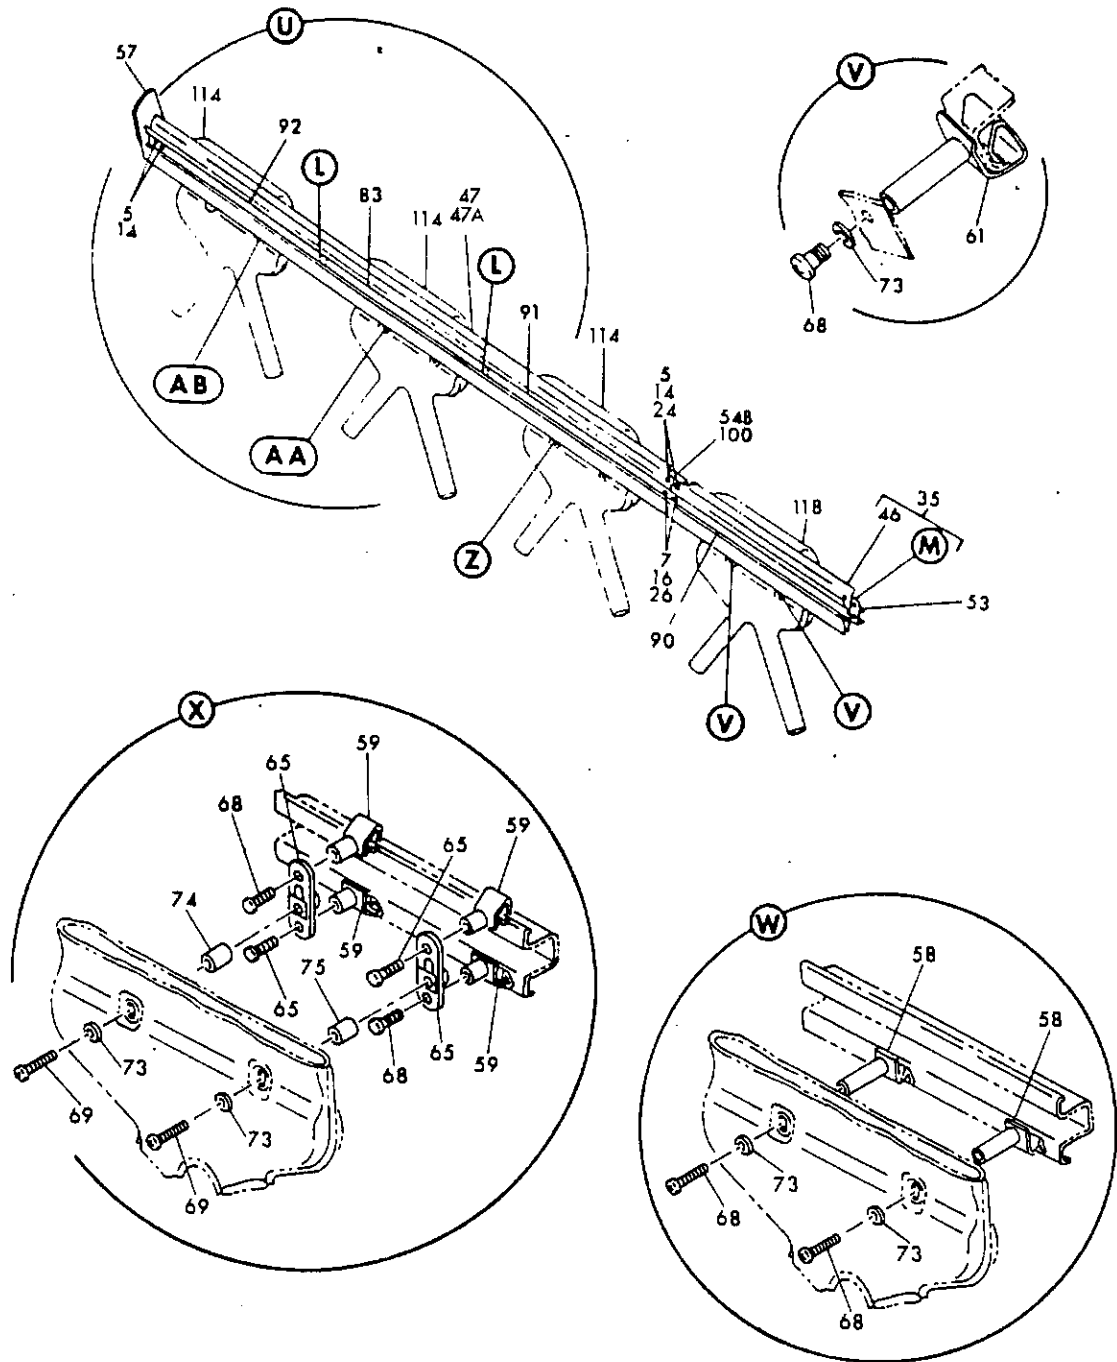


FIGURE 120G. OUTLET INSTL, AIR CONDITIONING (LH) (SHEET 8)

NOV 21/90

21-04-120G

DET-ILED PARTS LIST
21-04-120G
PAGE 7

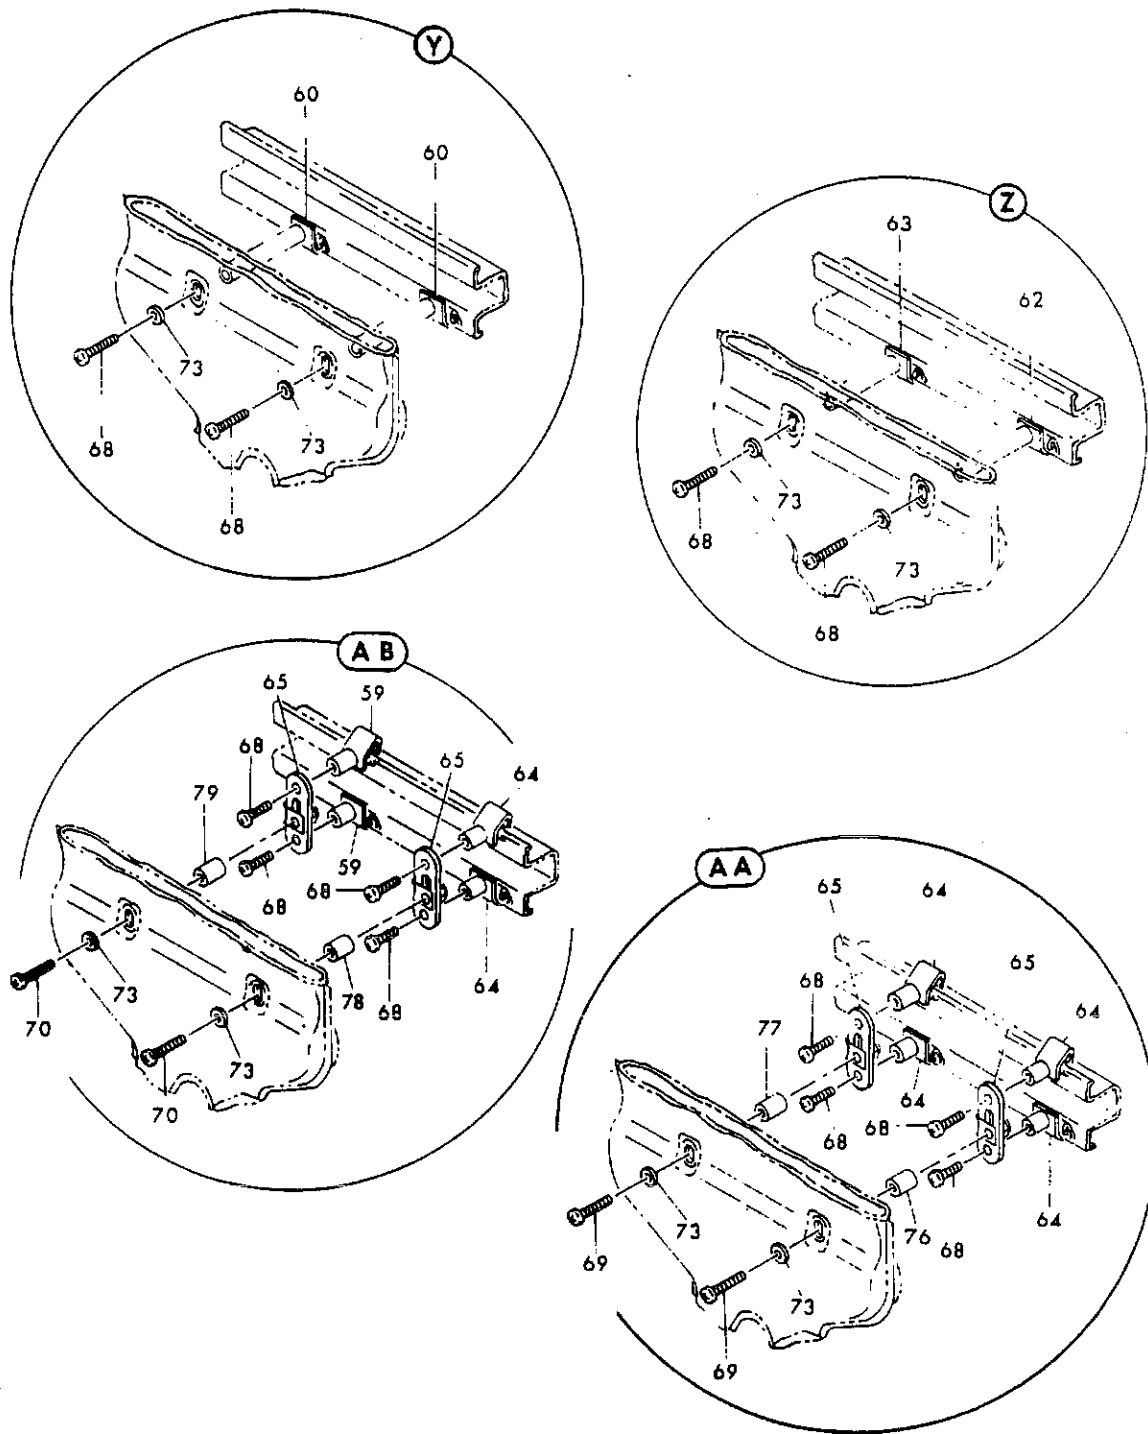


FIGURE 120G. OUTLET INSTL. AIR CONDITIONING (LH) (SHEET 9)

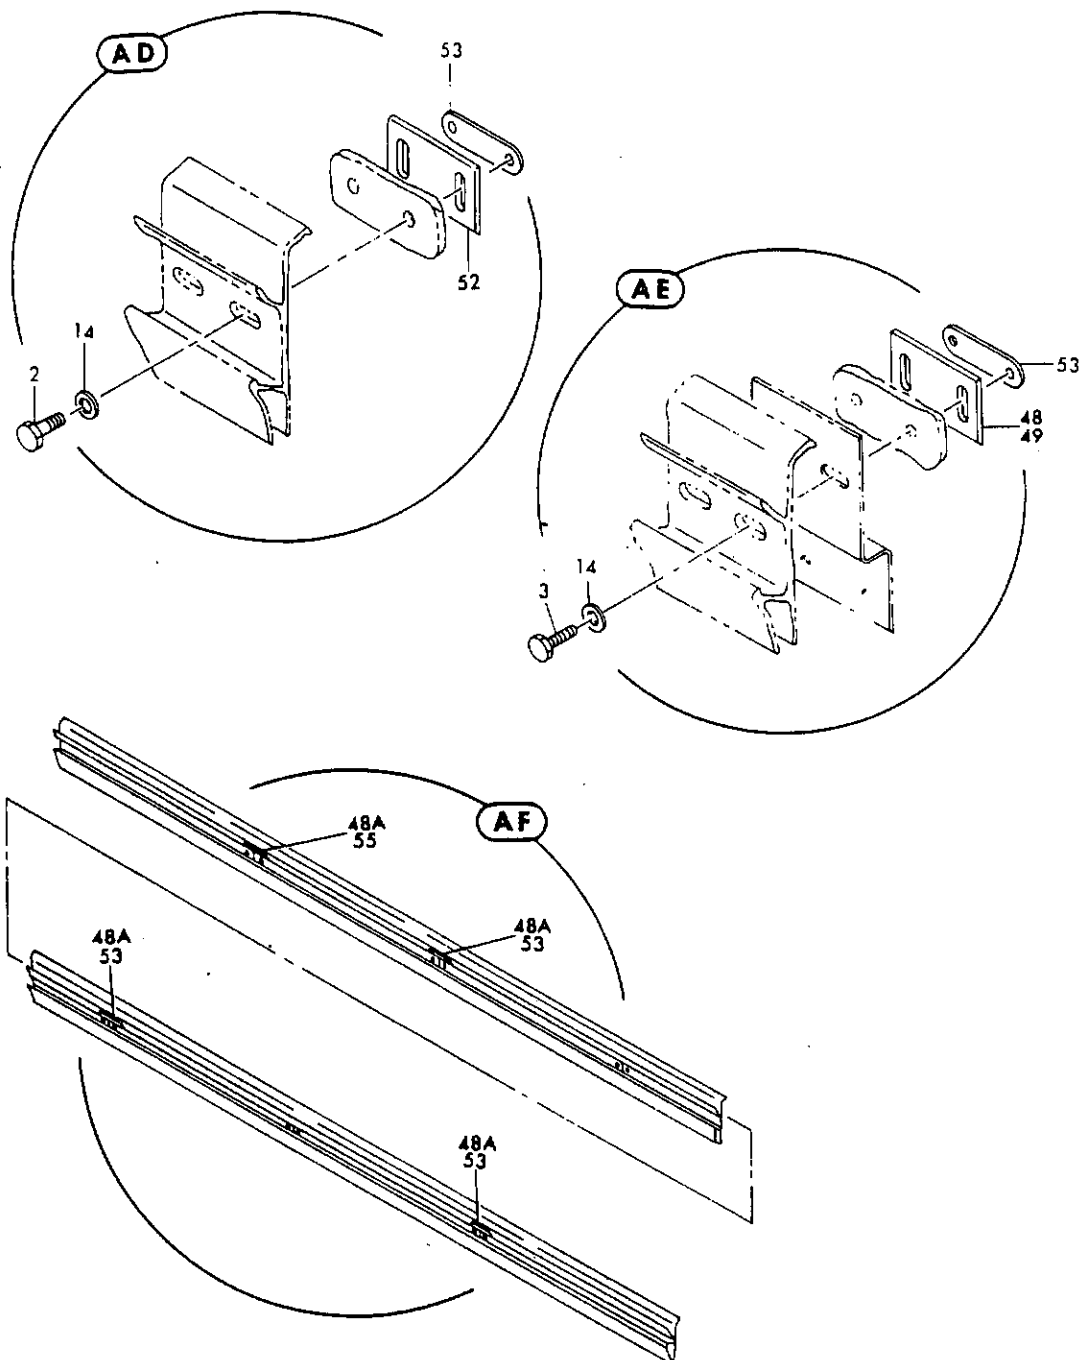


FIGURE 120G. OUTLET INSTL. AIR CONDITIONING (LH) (SHEET 10)

NOV 21/90

21-04-120G

DETAILED PARTS LIST
21-04-120G
PAGE 9

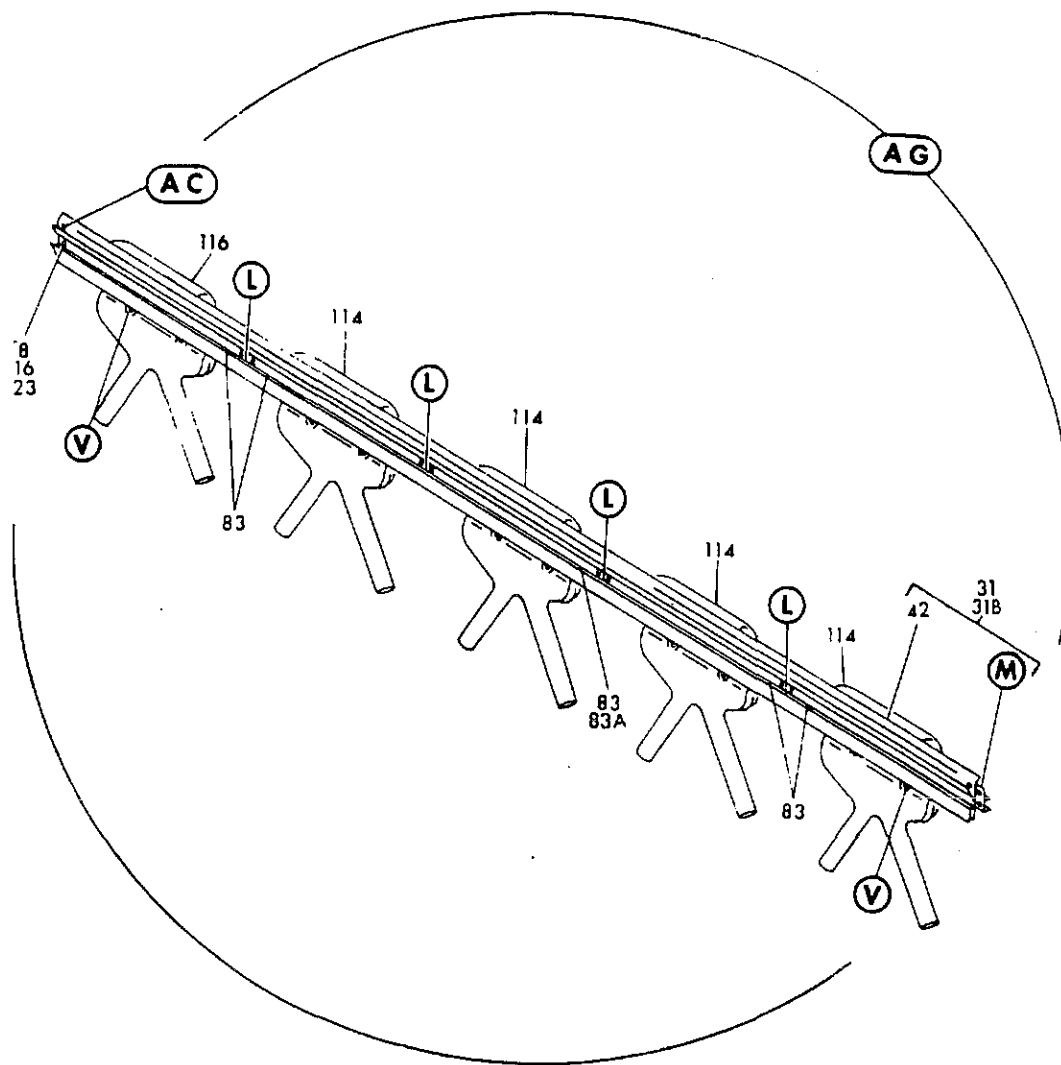


FIGURE 120G. OUTLET INSTL, AIR CONDITIONING (LH) (SHEET 11)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
120G	65-86307-1	OUTLET INSTL, AIR CONDITIONING (LH)							5199	RF
		. OUTLET INSTL, AIR CONDITIONING (LH) (SEE 25-1, FIG. 174C, ITEM 103, 25-10, FIG. 31P, ITEM 14, 25-10, FIG. 33D, ITEM 21, 25-10, FIG. 35C, ITEM 14 AND 25-10, FIG. 35S, ITEM 16)							5199	
1	BACB30NE3-8	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	4
2	BACB30NE3-5	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	74
3	BACB30NE3-6	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	6
4	BACB30NE3-8	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	14
5	BACB30NE3-3	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	16
6	NAS514P832-8	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	7
6A	NAS514P832-7	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	2
7	BACB30NE4-5	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	4
8	BACB30NE4-4	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	8
9	BACB30NE4-6	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	2
10	NAS514P1032-7	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	2
11	BACB30NE3-4	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
12	BACW10P13AL	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	2
13	BACW10P127D	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	4
14	AN960PD10L	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	90
15	AN960PD8L	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	15
16	AN960-416L	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	10
16A	AN960-416L	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	2
17	AN960-10L	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	16
18	AN960PD8	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	2
19	AN960PD10	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	2
19A	AN960PD10L	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	2
20	69-65455-1	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	AR
21	NAS43DD3-9	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	4
22	NAS43DD3-5	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	8
23	NAS43DD4-9	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	8
24	BACN10JC3	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	21
25	BACN10JC8	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
26	BACN10JC4	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	2
26A	BACN10JC4	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	2
27	65-79570-253B	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
28	65-79570-187D	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
29	65-79570-188D	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
30	65-79570-251C	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
31	65-79570-4E	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	3
32	65-79570-35C	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	2
33	65-79570-37C	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
34	65-79570-5E	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
35	65-79570-40C	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
36	BACB30NE3-3	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
37	AN960-10L	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
38	BACN10JC3	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
39	BACB30NE4-3	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
40	69-62116-3E	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
41	69-61831-1	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
42	65-79570-17E	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
43	65-79570-50D	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
44	65-79570-52D	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
45	65-79570-18E	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
46	65-79570-55D	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
47	65-79570-252C	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
48A	69-61534-5	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	5
49	69-61534-7	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
50	69-61534-9	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
51	69-61534-8	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
52	69-61534-3	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	3
53	69-61554-1	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	46
54A	69-61880-5	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
54B	69-61880-3	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
55	65-79586-50D	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
		(OPTIONAL TO 65-86967-15B)								
55	65-86967-15B	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
		(OPTIONAL 65-79586-50D)								
56	65-63916-8	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
		BRACKET ATTACHING PARTS								
	MS51862-23	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	2

57	65-79586-12C	. . .	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
		CAP ASSY, END								

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING **707**
Intercontinental

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
1206	65-86307-3	. OUTLET INSTL, AIR CONDITIONING (LH) (SEE 25-10, FIG. 31P, ITEM 15, 25-10, FIG. 33D, ITEM 22, 25-10, FIG. 35C, ITEM 15 AND 25-10, FIG. 35S, ITEM 17)	5199	RF
58	294243-26C	. . FASTENER ASSY, (V76530)	5199	2
59	294243-12C	. . FASTENER ASSY, (V76530)	5199	10
60	294243-24C	. . FASTENER ASSY, (V76530)	5199	2
61	294243-21C	. . FASTENER ASSY, (V76530)	5199	74
62	294243-25C	. . FASTENER ASSY, (V76530)	5199	1
63	294243-27C	. . FASTENER ASSY, (V76530)	5199	1
64	294243-16C	. . FASTENER ASSY, (V76530)	5199	6
65	69-63138-1	. . PLATE ASSY, SUPPORT	5199	8
	65-86307-2	. OUTLET INSTL, AIR CONDITIONING (LH) (SEE 25-1, FIG. 174C, ITEM 104, 25-10, FIG. 31P, ITEM 16, 25-10, FIG. 33D, ITEM 23, 25-10, FIG. 35C, ITEM 16 AND 25-10, FIG. 35S, ITEM 18)	5199	RF
66	BACS12CB08-7	. . SCREW	5199	4
68	NAS603-8P	. . SCREW	5199	96
69	NAS603-18P	. . SCREW	5199	6
70	NAS603-16P	. . SCREW	5199	2
71	AN960PDBL	. . WASHER	5199	6
72	BACW10BN3P	. . WASHER	5199	2
73	AN960-10L	. . WASHER	5199	88
74	NAS43DD3-40	. . SPACER	5199	2
75	NAS43DD3-45	. . SPACER	5199	2
76	NAS43DD3-42	. . SPACER	5199	1
77	NAS43DD3-38	. . SPACER	5199	1
78	NAS43DD3-28	. . SPACER	5199	1
79	NAS43DD3-35	. . SPACER	5199	1
80	BACN10JC08	. . NUT	5199	4
81	BACN10JC3	. . NUT	5199	2
82	65-79115-11	. . GRILL ASSY, DECORATIVE	5199	1
83	65-79115-1	. . GRILL ASSY, DECORATIVE	5199	45
83A	65-79115-1	. . GRILL ASSY, DECORATIVE	5199	1
84	65-79115-88	. . GRILL ASSY, DECORATIVE	5199	1
85	65-79115-93	. . GRILL ASSY, DECORATIVE	5199	1
86	65-79115-175	. . GRILL ASSY, DECORATIVE	5199	1
87	65-79115-50	. . GRILL ASSY, DECORATIVE	5199	2
87A	65-79115-178	. . GRILL ASSY, DECORATIVE	5199	2
88	65-79115-176	. . GRILL ASSY, DECORATIVE	5199	1
89	65-79115-87	. . GRILL ASSY, DECORATIVE	5199	1
90	65-79115-31	. . GRILL ASSY, DECORATIVE	5199	1
91	65-79115-32	. . GRILL ASSY, DECORATIVE	5199	1
92	65-79115-33	. . GRILL ASSY, DECORATIVE	5199	1
93	69-61802-1	. . CLIP, SPRING	5199	135
94	65-79588-2E	. . TRIM ASSY	5199	1
95	65-79587-2E	. . TRIM ASSY	5199	1
96	65-79587-3E	. . TRIM ASSY	5199	1
97	65-79587-71D	. . TRIM ASSY	5199	1
98	65-79588-37D	. . TRIM ASSY, FILLER	5199	1
101	65-79589-18	. . BRACKET ASSY, SUPPORT	5199	1
102	65-79589-13	. . BRACKET ASSY, SUPPORT	5199	1
103	65-79589-12	. . BRACKET ASSY, SUPPORT	5199	3
104	65-79589-65	. . BRACKET ASSY, SUPPORT	5199	1
105	65-79589-56	. . BRACKET ASSY, SUPPORT	5199	1
106	BE725-6-28-5	. . HOSE, FLEX (V05399)	5199	1
107	BE725-6-14-5	. . HOSE, FLEX (V05399)	5199	7
108	65-78882-75	. . DIFFUSER ASSY	5199	1
109	65-78882-23	. . OUTLET	5199	1
110	65-78882-76	. . DIFFUSER ASSY	5199	2
111	65-78882-77	. . DIFFUSER ASSY	5199	1
112	65-78882-70	. . DIFFUSER ASSY	5199	1
113	65-78882-81	. . DIFFUSER ASSY	5199	4
114	65-78882-71	. . DIFFUSER ASSY	5199	31
115	65-78882-74	. . DIFFUSER ASSY	5199	4
116	65-78882-72	. . DIFFUSER ASSY	5199	1
117	65-78882-20	. . OUTLET	5199	3
118	65-78882-83	. . DIFFUSER ASSY	5199	1
119	65-78882-81	. . DIFFUSER ASSY	5199	1
120	65-43726-21	. . SLEEVE	5199	1
121	BACD40K6-02BA5	. . DUCT	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

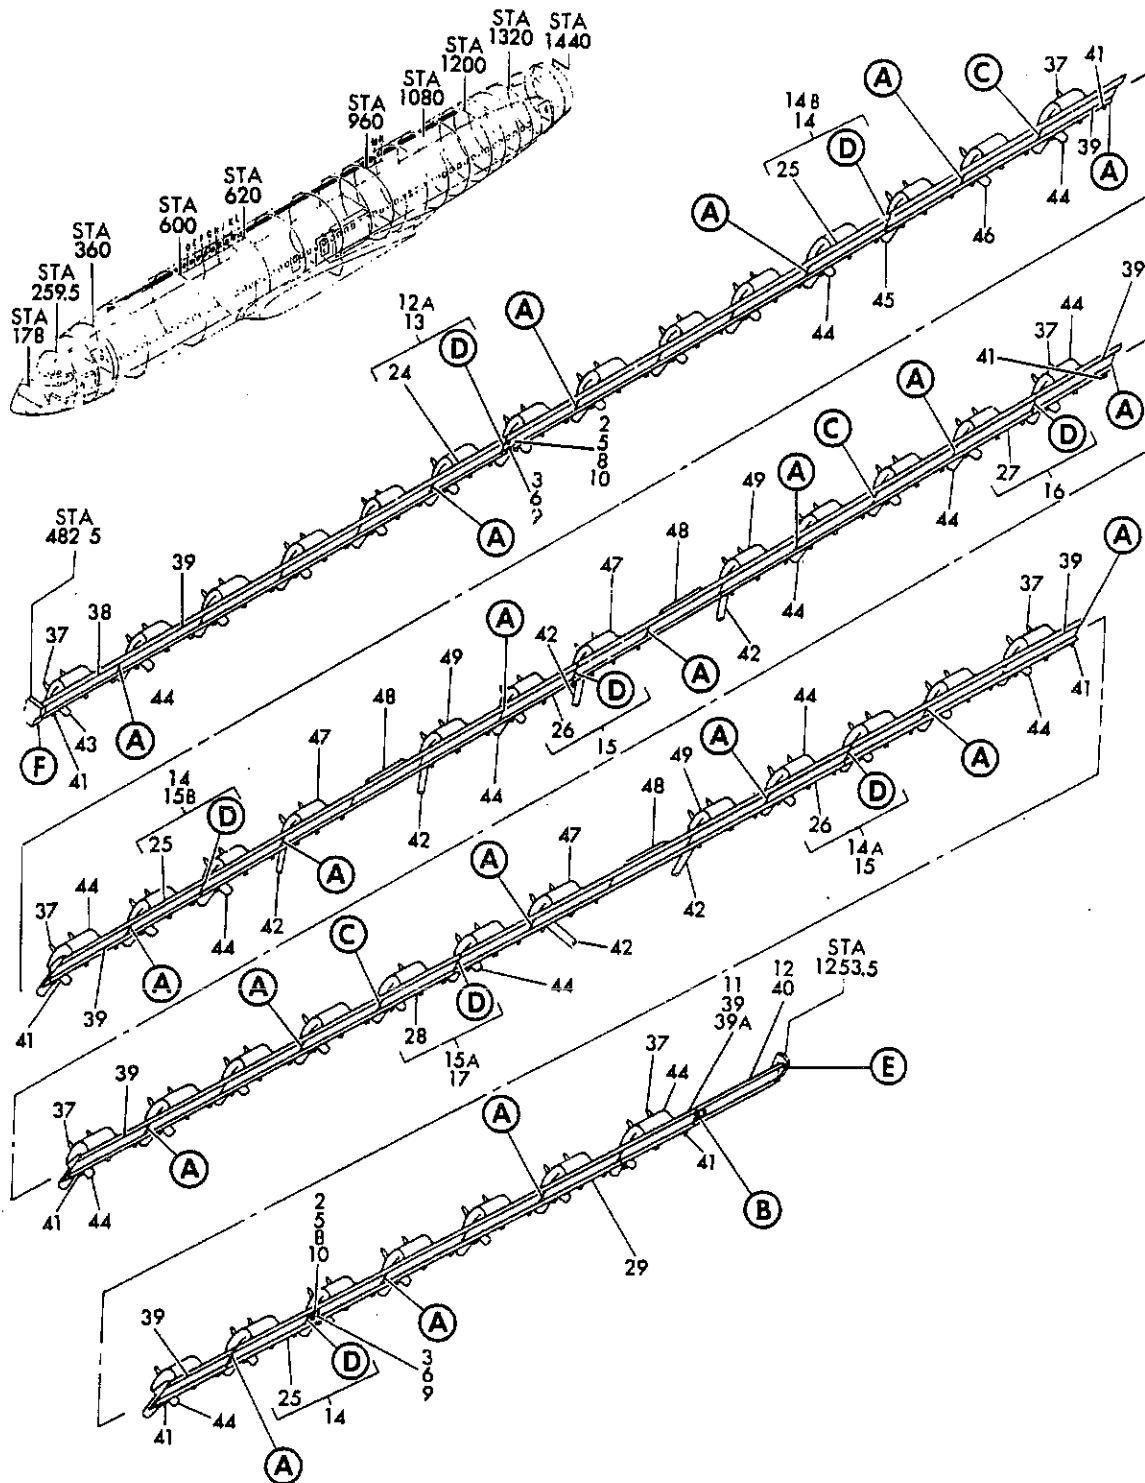


FIGURE 120H. OUTLET INSTL, AIR CONDITIONING (RH) (SHEET 1)

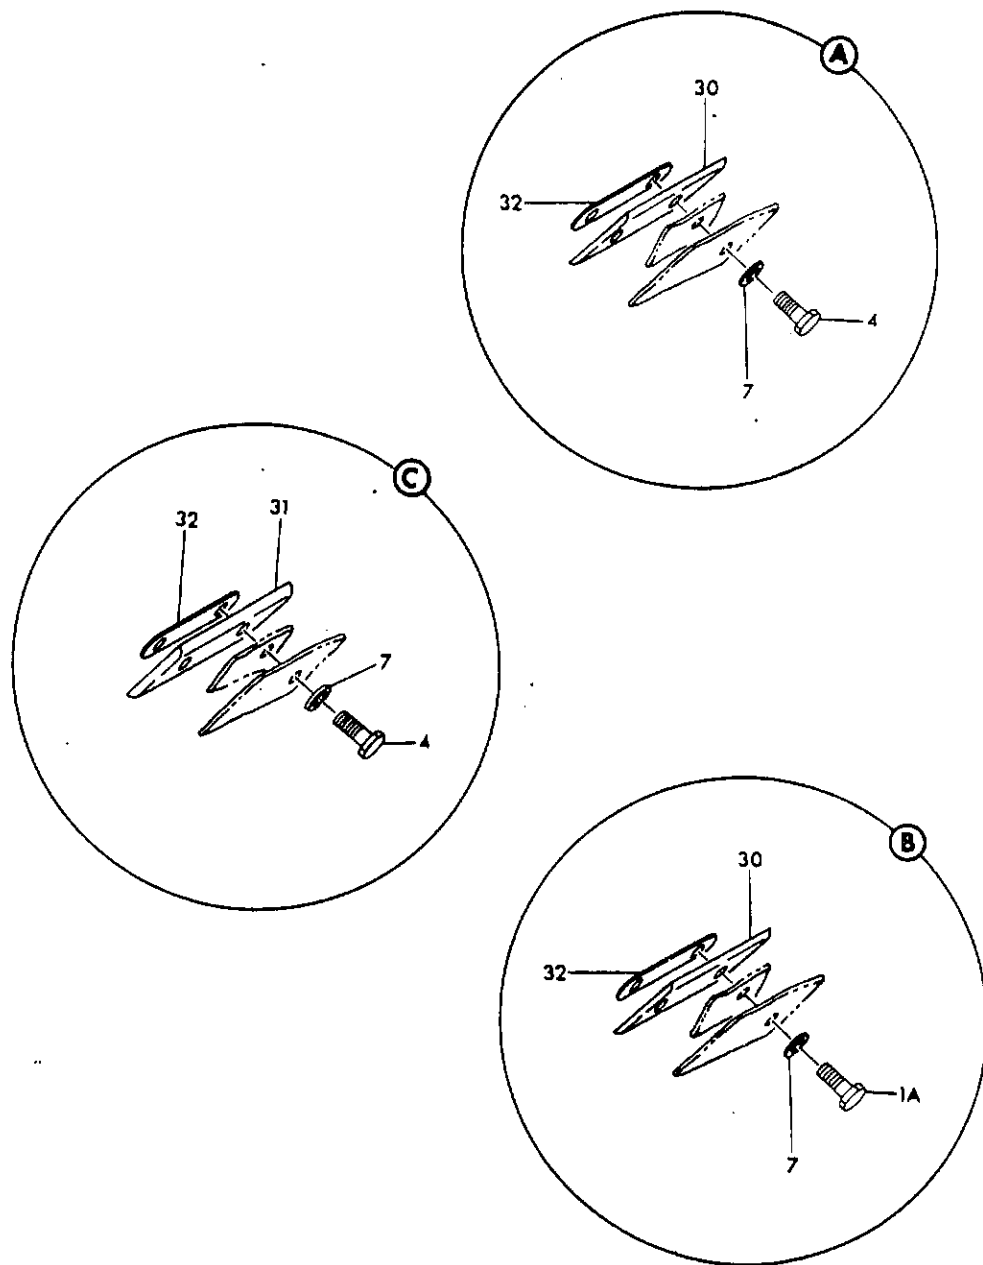


FIGURE 120H. OUTLET INSTL, AIR CONDITIONING (RH) (SHEET 2)

NOV 21/90

21-04-120H

DETAILED PARTS LIST
21-04-120H
PAGE 1

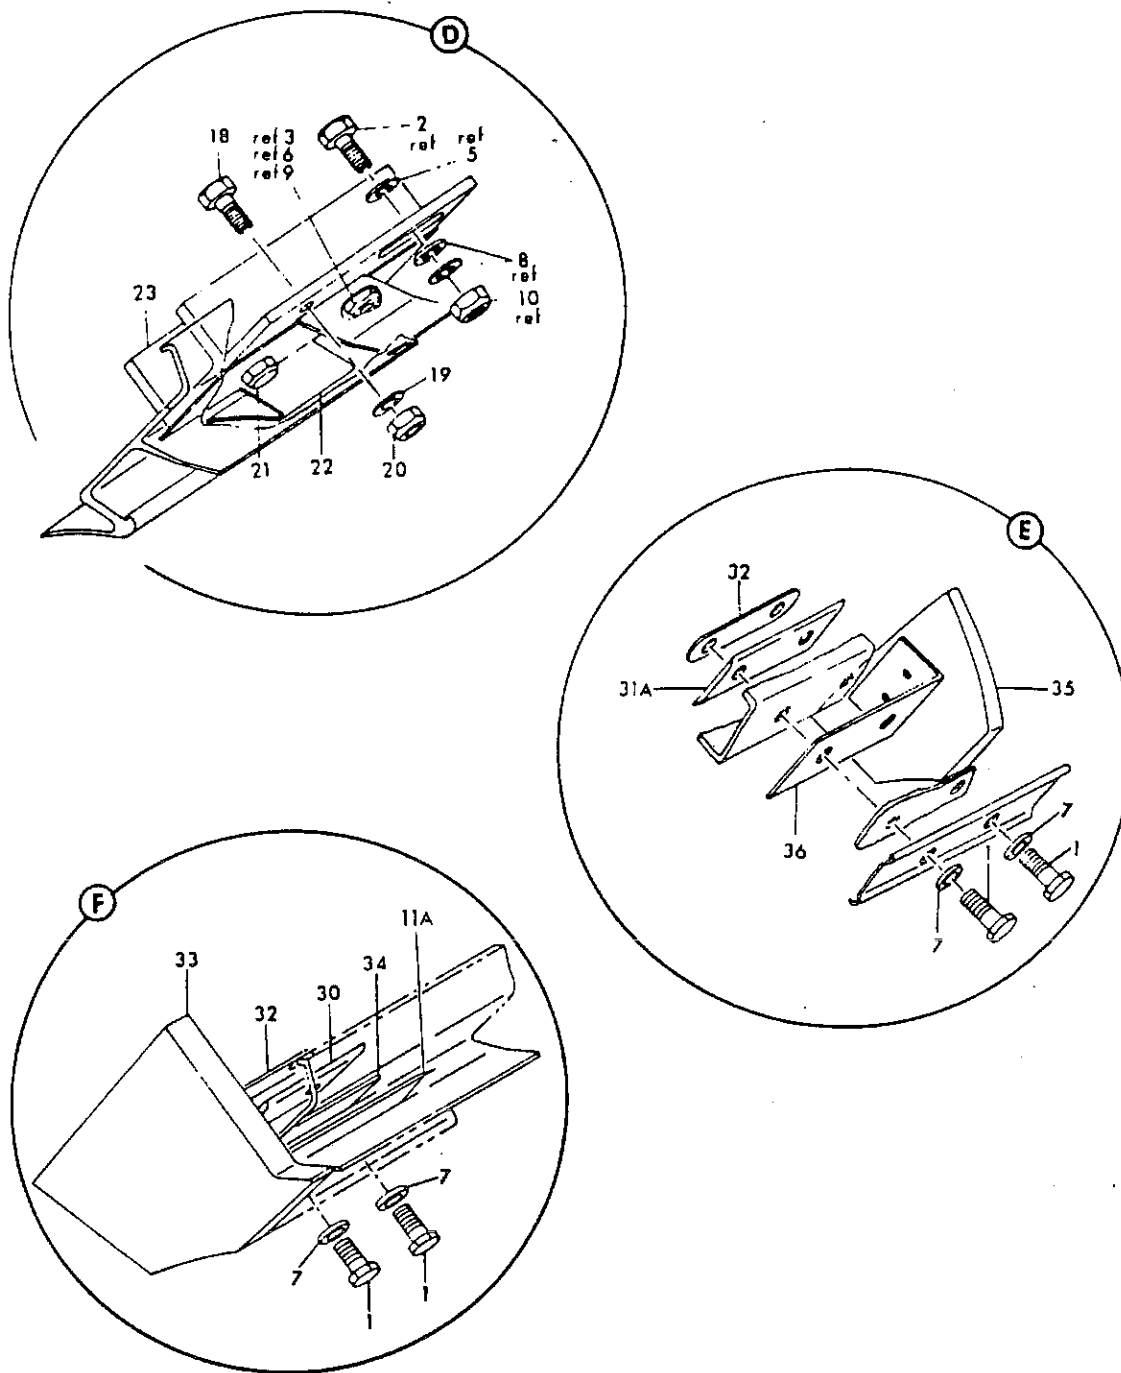


FIGURE 120H. OUTLET INSTL, AIR CONDITIONING (RH) (SHEET 3)

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF	UNITS
			FROM TO	PER ASSY
120H	65-86307-4	OUTLET INSTL, AIR CONDITIONING (RH) OUTLET INSTL, AIR CONDITIONING (RH) (SEE 21-1, FIG. 174C, ITEM 105, 25-10, FIG. 31Q, ITEM 12, 25-10, FIG. 33D, ITEM 24, 25-10, FIG. 35D, ITEM 12, AND 25-10, FIG. 35T, ITEM 22)	5199 5199	RF
2	BACB30NE3-3	BOLT.	5199	8
3	BACB30NE4-4	BOLT.	5199	8
4	BACB30NE3-5	BOLT.	5199	78
5	NAS430D3-5	SPACER.	5199	8
6	NAS430D4-9	SPACER.	5199	8
7	AN960PD10L	WASHER.	5199	84
8	AN960-10L	WASHER.	5199	16
9	AN960-416L	WASHER.	5199	8
10	BACN10JC3	NUT	5199	8
13	65-79570-44C	OUTLET ASSY.	5199	1
14	65-79570-4E	OUTLET ASSY.	5199	3
15	65-79570-36C	OUTLET ASSY.	5199	2
16	65-79570-38C	OUTLET ASSY.	5199	1
17	65-79570-5E	OUTLET ASSY.	5199	1
18	BACB30NE3-3	BOLT.	5199	1
19	AN960-10L	WASHER.	5199	1
20	BACN10JC3	NUT	5199	1
21	BACB30NE4-3	BOLT.	5199	1
22	69-62116-3E	COVER, JOINT SPLICE	5199	1
23	69-61831-1	BRACKET ASSY.	5199	1
24	65-79570-59C	OUTLET, (USED ON 65-79570-44)	5199	1
25	65-79570-17E	OUTLET, (USED ON 65-79570-4)	5199	1
26	65-79570-51D	OUTLET, (USED ON 65-79570-36)	5199	1
27	65-79570-53D	OUTLET, (USED ON 65-79570-38)	5199	1
28	65-79570-18E	OUTLET, (USED ON 65-79570-5)	5199	1
29	65-79570-212B	OUTLET ASSY.	5199	1
30	69-61534-1	FILLER.	5199	38
31	69-61534-3	FILLER.	5199	3
32	69-61554-1	PLATE ASSY.	5199	42
33	65-79586-15C	CAP ASSY. (OPTIONAL TO 65-86967-17B)	5199	1
33	65-86967-17B	CAP ASSY, (ALTERED FROM: 65-65-86967-10) (OPTIONAL 65-79586-15C)	5199	1
34	69-62117-6	BRACKET ATTACHING PARTS	5199	1
	MS51862-23	SCREW	5199	2
35	65-79586-19B	CAP ASSY. (OPTIONAL TO 65-86967-18C)	5199	1
35	65-86967-18C	CAP ASSY, (ALTERED FROM: 65-86967-12) (OPTIONAL 65-79586-19B)	5199	1
36	69-63916-8	BRACKET ATTACHING PARTS	5199	1
	MS51862-23	SCREW	5199	1
	65-86307-6	OUTLET INSTL, AIR CONDITIONING (RH) (SEE 25-10, FIG. 31Q, ITEM 13, 25-10, FIG. 33D, ITEM 25, 25-10, FIG. 35D, ITEM 12 AND 25-10, FIG. 35T, ITEM 23)	5199	RF
37	294243-21C	FASTENER ASSY, (V76530)	5199	84
	65-86307-5	OUTLET INSTL, AIR CONDITIONING (RH) (SEE 25-1, FIG. 174C, ITEM 106, 25-10-FIG. 31Q, ITEM 14, 25-10, FIG. 33D, ITEM 26, 25-10, FIG. 35D, ITEM 14 AND 25-10, FIG. 35T, ITEM 24)	5199	RF
38	65-79115-35	GRILL ASSY, DECORATIVE.	5199	1
39	65-79115-1	GRILL ASSY, DECORATIVE.	5199	47
41	69-61802-1	CLIP, SPRING.	5199	144
42	BE725-6-14-5	HOSE, FLEX (V05399)	5199	6
43	65-78882-84	DIFFUSER ASSY.	5199	1
44	65-78882-71	DIFFUSER ASSY.	5199	36
45	65-78882-72	DIFFUSER ASSY.	5199	1
46	65-78882-73	DIFFUSER ASSY.	5199	1
47	65-78882-81	DIFFUSER ASSY.	5199	3
48	65-78882-20	OUTLET.	5199	3
49	65-78882-74	DIFFUSER ASSY.	5199	3

MISSING ITEM NUMBERS ARE NOT APPLICABLE

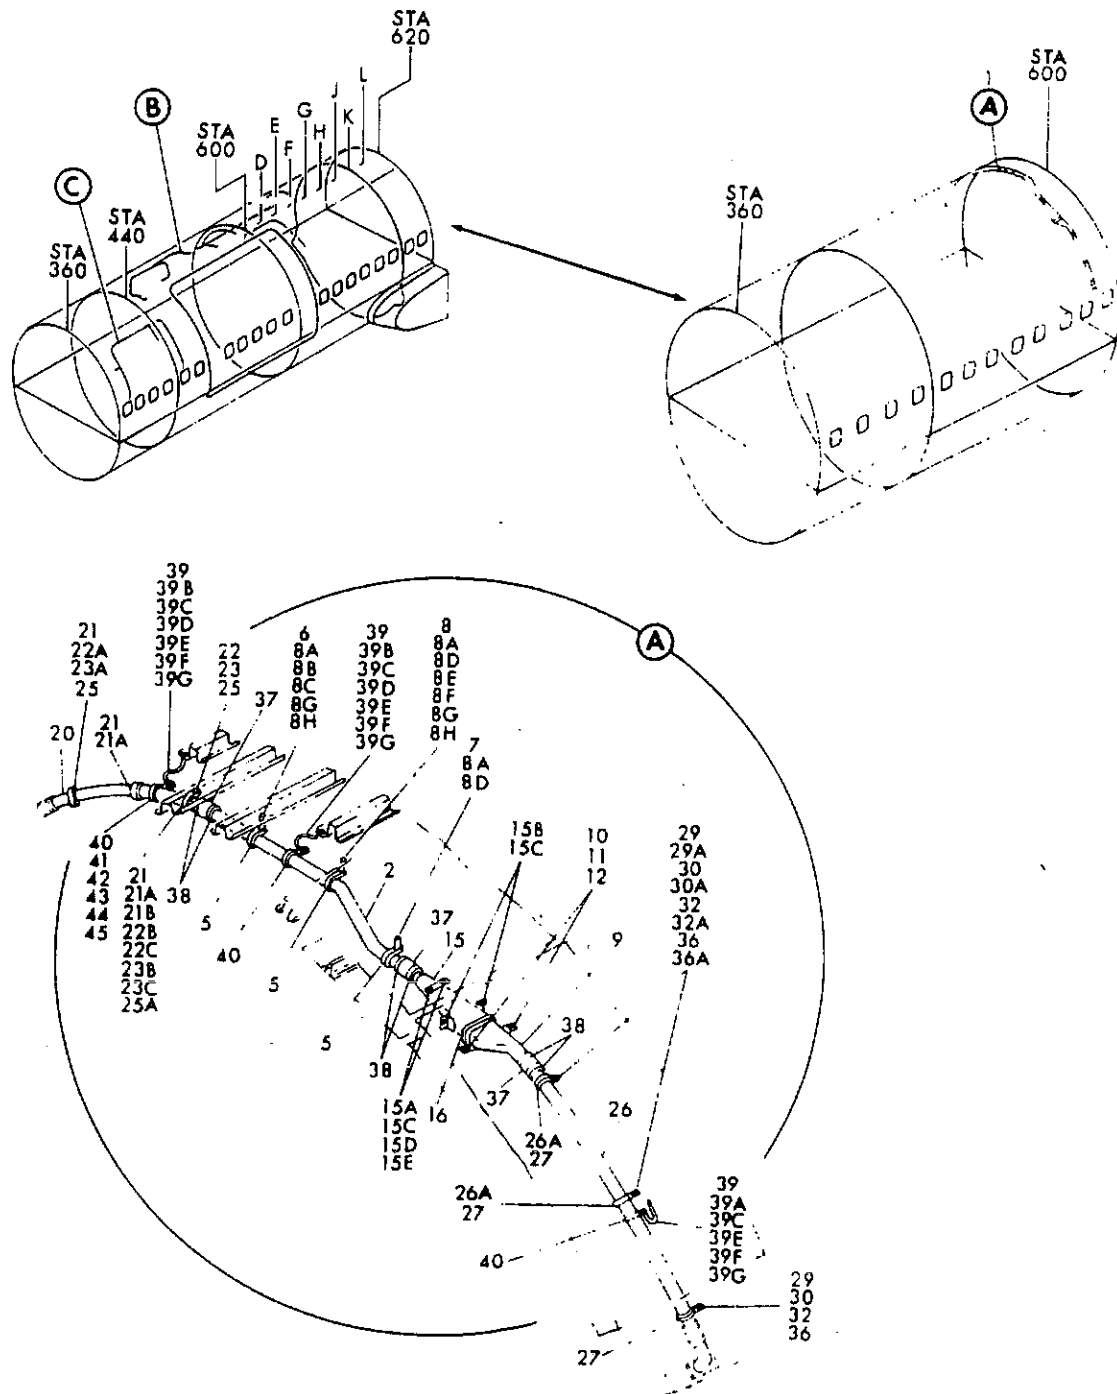


FIGURE 126 DUCT INSTL. PASSENGER AIR DISTRIBUTION CARGO DOOR CROSSOVER (SHEET 1)

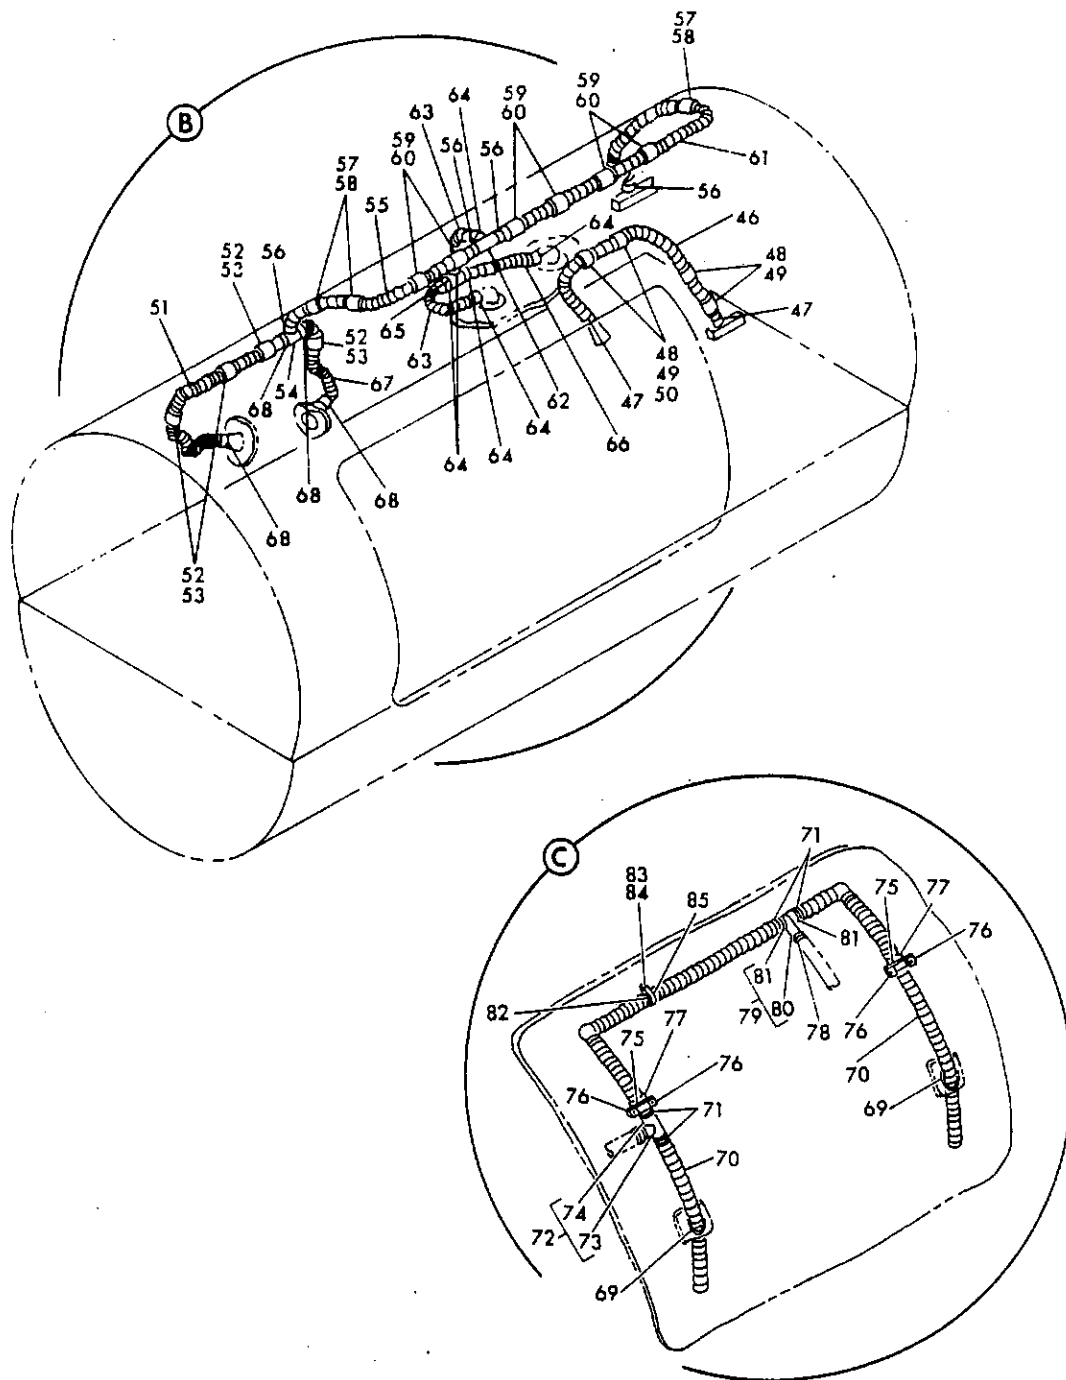


FIGURE 126 DUCT INSTL. PASSENGER AIR DISTRIBUTION CARGO DOOR CROSSOVER (SHEET 2)

NOV 21/90

21-04-126

DETAILED PARTS LIST
21-04-126
PAGE 1

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
126 1	65-54121-10	DUCT INSTL, PASSENGER AIR DISTRIBUTION CARGO DOOR . . . CROSSOVER (SEE FIG. 125, ITEM 61 AND FIG. 128, ITEM 66)	5199	RF
2	65-54121-2	. DUCT, CENTER.	5199	1
5	BACC10K20	. CLAMP	5199	3
6	NAS623-3-24	. ATTACHING PARTS		
7	NAS603-18P	. SCREW	5199	1
8	NAS623-3-7	. SCREW	5199	1
8A	BACN10JR3	. NUT	5199	3
8C	66-16841-3	. MOUNTING PLATE ASSY	5199	1
8E	BACS18F50B	. SPACER.	5199	1
8F	66-16841-14	. MOUNTING PLATE ASSY	5199	1
8G	293255	. BRACKET, (V76530)	5199	4
8H	NAS603-11P	. ATTACHING PARTS		
		. SCREW	5199	2
9	69-42486-1	. DUCT ASSY, TRANSITION CARGO DOOR (LH)	5199	1
10	NAS604-10P	. ATTACHING PARTS		
11	AN960D416L	. SCREW	5199	2
12	NAS686A4	. WASHER.	5199	2
		. NUT	5199	2
15	69-42486-2	. DUCT ASSY, TRANSITION CARGO DOOR (RH)	5199	1
15A	NAS603-10P	. ATTACHING PARTS		
15B	NAS603-7P	. SCREW	5199	2
15C	AN960D10L	. SCREW	5199	2
15D	NAS680A3	. WASHER.	5199	4
15E	BACS18F25B	. NUT	5199	2
		. SPACER.	5199	2
16	69-42486-7	. SEAL.	5199	1
20	65-54121-5	. DUCT, UPPER (RH).	5199	1
21	BACC10DK20	. CLAMP	5199	3
21B	BACC10DK20	. CLAMP	5199	1
22B	NAS623-3-22	. ATTACHING PARTS		
22C	NAS623-3-18	. SCREW	5199	1
23B	NAS42DD6-28	. SCREW	5199	1
23C	NAS42DD6-18	. SPACER.	5199	1
25A	293255	. BRACKET, (V76530)	5199	2
26	65-54121-8	. DUCT ASSY, (LH)	5199	1
27	BACC10DK20	. CLAMP	5199	3
29	NAS603-12P	. ATTACHING PARTS		
30	AN960D10L	. SCREW	5199	3
32	NAS42DD6-8	. WASHER.	5199	3
36	NAS679A3W	. SPACER.	5199	3
		. NUT	5199	3
37	BACD40B5-1-5-11	. DUCT, CONVOLUTED.	5199	3
38	5016	. CLAMP, (VB1646)	5199	6
39A	BACJ40K5A5A6	. JUMPER.	5199	1
39B	BACJ40K5A5A8	. JUMPER.	5199	2
39C	NAS603-7P	. ATTACHING PARTS		
39D	NAS603-8P	. SCREW	5199	2
39E	AN960D10L	. SCREW	5199	2
39F	MS35338-43	. WASHER.	5199	4
39G	BACN10JC3	. WASHER.	5199	2
		. NUT	5199	2
40	AN735D20	. CLAMP	5199	3
		. ATTACHING PARTS		
	NAS603-7P	. SCREW	5199	3
	AN960D10L	. WASHER.	5199	6
	MS35338-43	. WASHER.	5199	3
	BACN10JC3	. NUT	5199	3
41	BACC10DK20	. CLAMP	5199	1
42	NAS623-3-16	. ATTACHING PARTS		
		. SCREW	5199	1
43	66-16841-15	. MOUNTING PLATE ASSY	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
126	44	293255	.	BRACKET, (V76530)	5199	2
	45	NAS603-11P	.	ATTACHING PARTS SCREW	5199	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

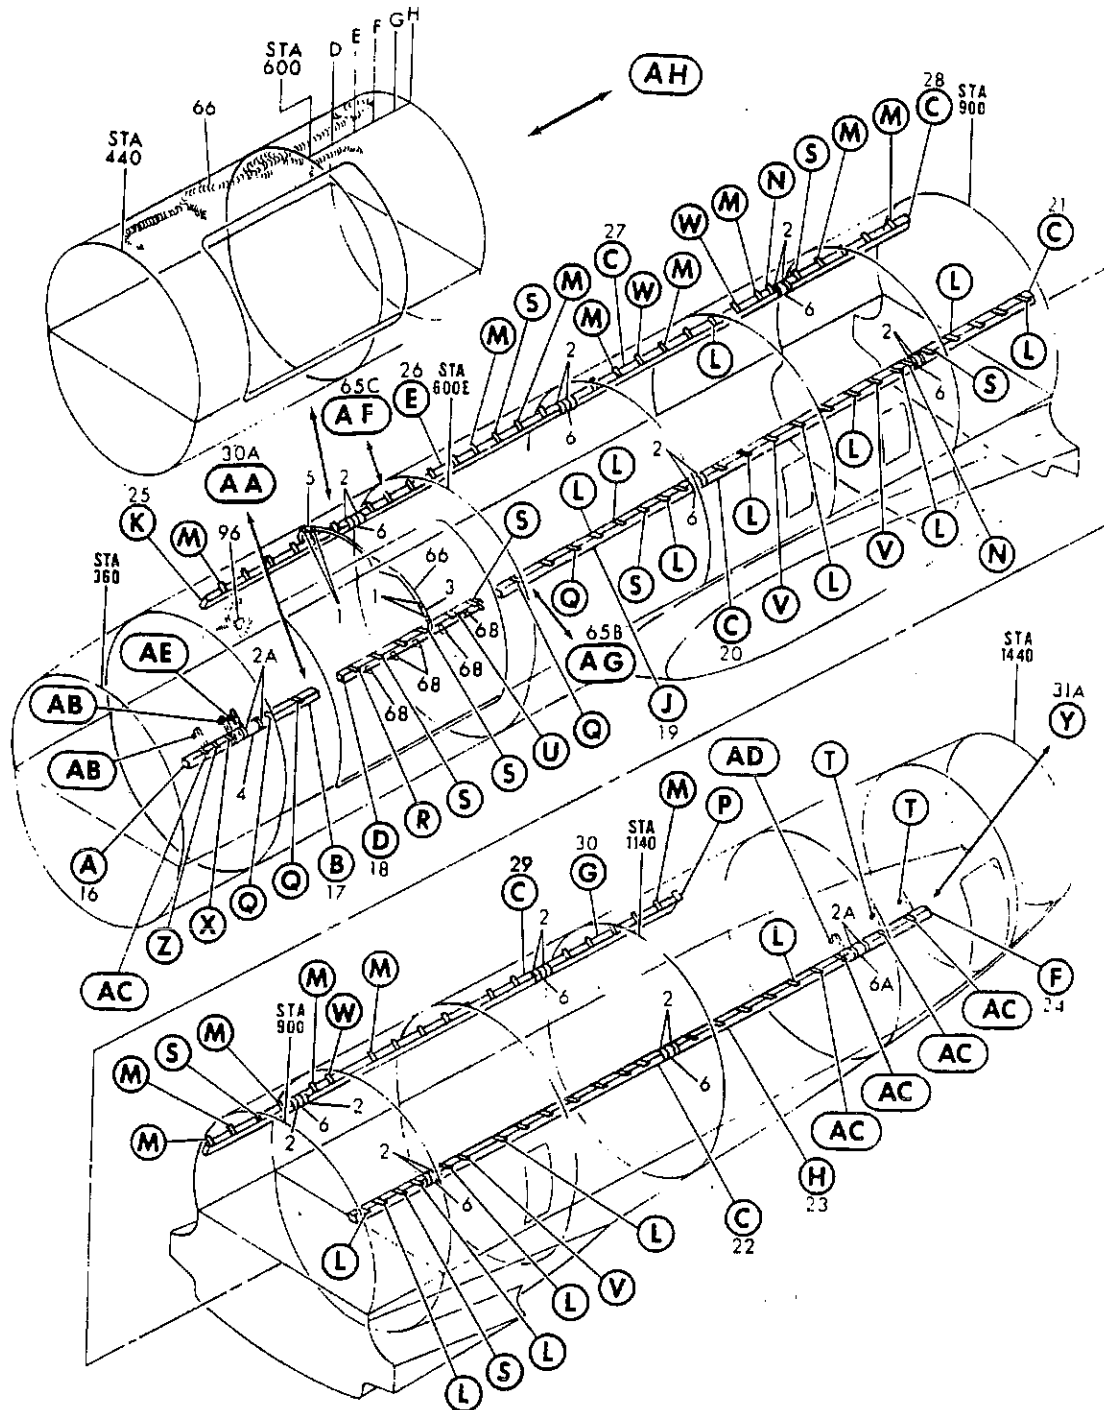


FIGURE 128. SYSTEMS INSTL. PASSENGER AIR DISTRIBUTION (SHEET 1)

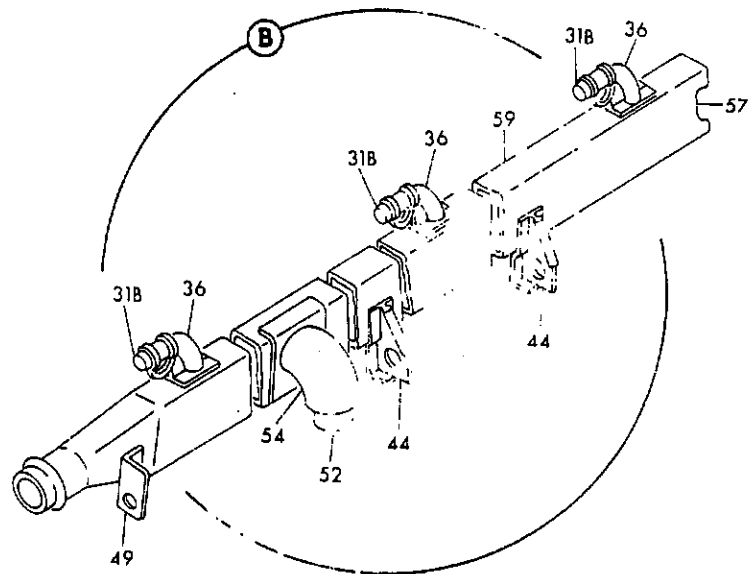
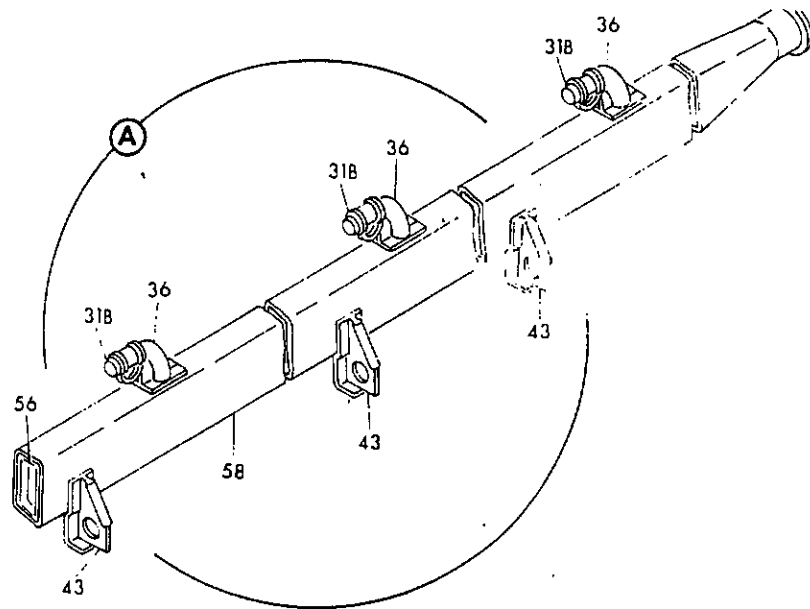


FIGURE 128. SYSTEMS INSTL, PASSENGER AIR DISTRIBUTION (SHEET 2)

NOV 21/90

21-04-128

DETAILED PARTS LIST
21-04-128
PAGE 1

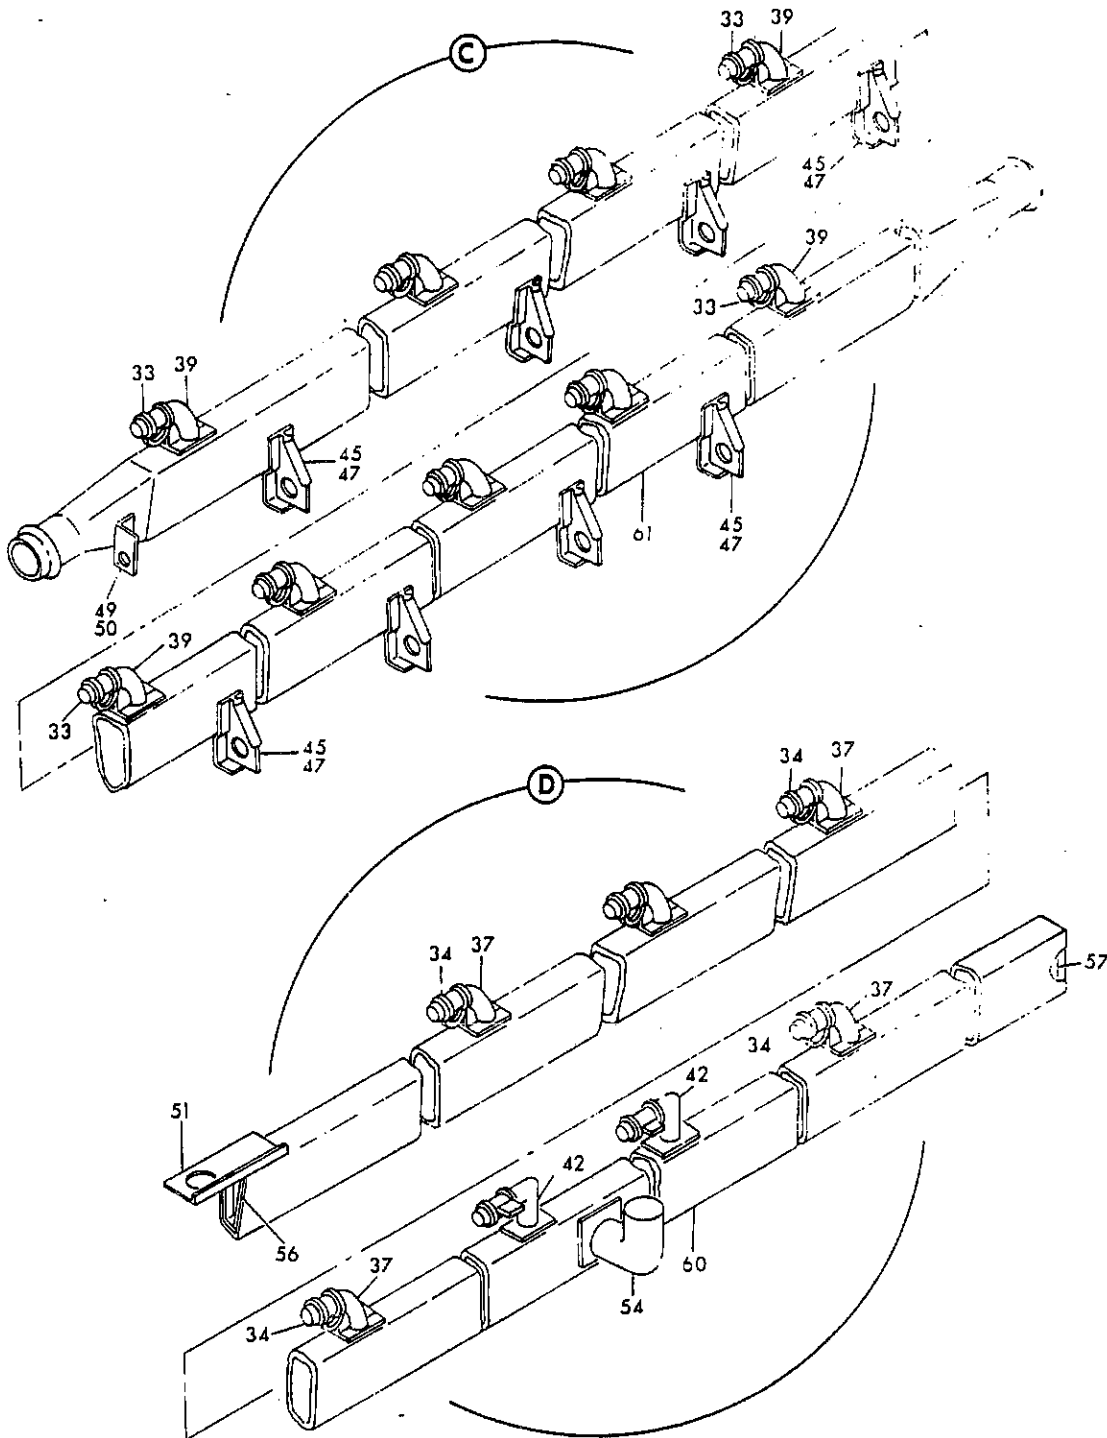


FIGURE 128. SYSTEMS INSTL. PASSENGER AIR DISTRIBUTION (SHEET 3)

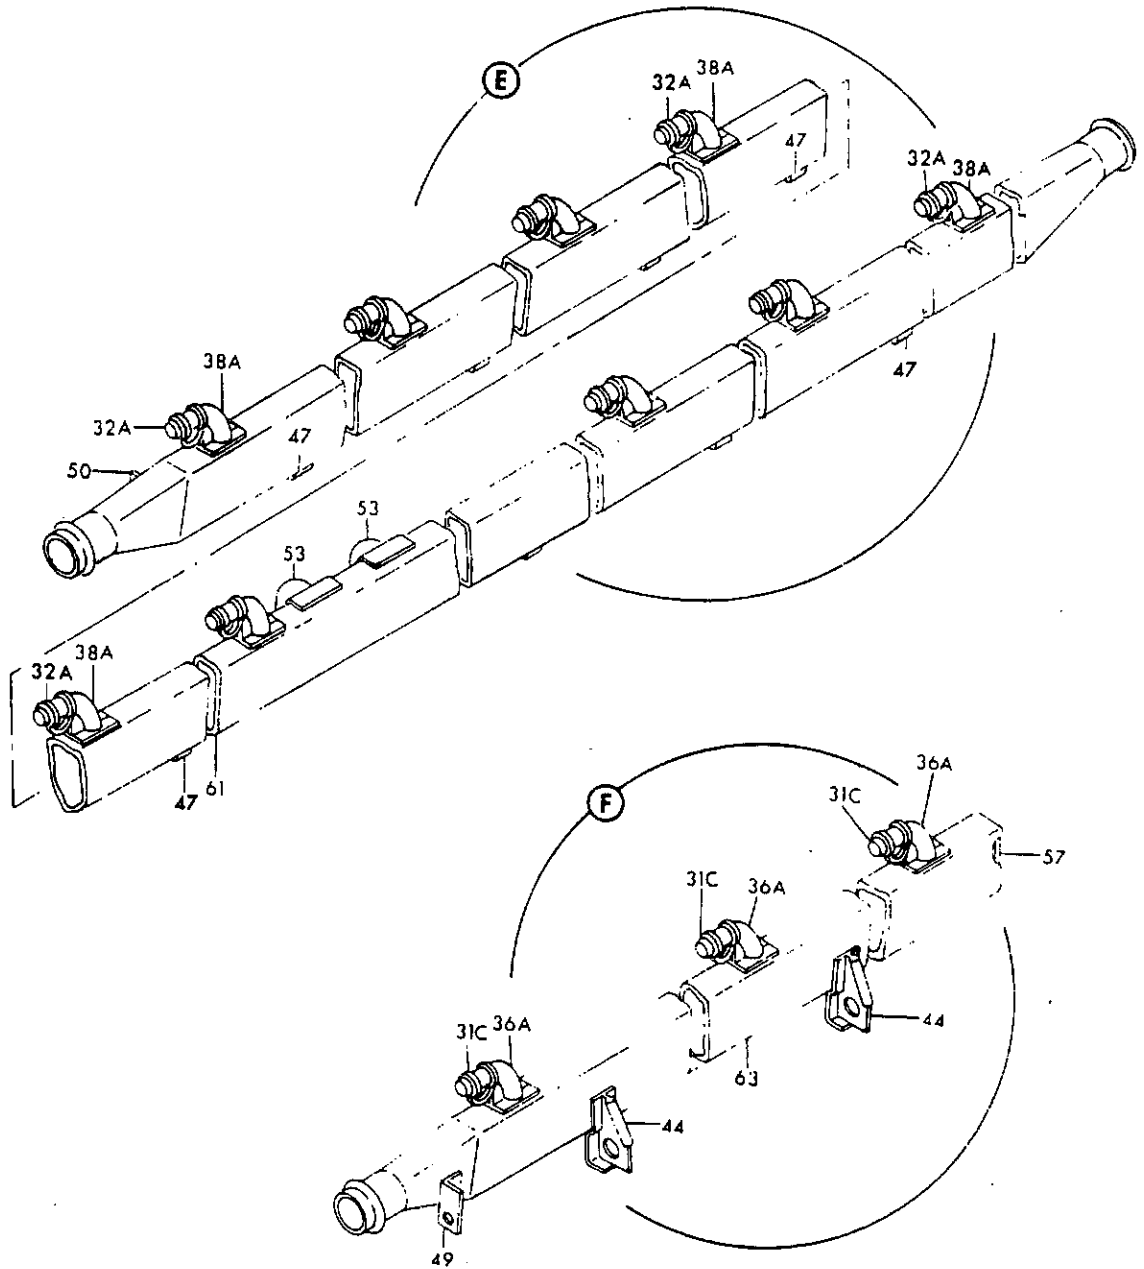


FIGURE 128. SYSTEMS INSTL. PASSENGER AIR DISTRIBUTION (SHEET 4)

NOV 21/90

21-04-128

DETAILED PARTS LIST
21-04-128
PAGE 3

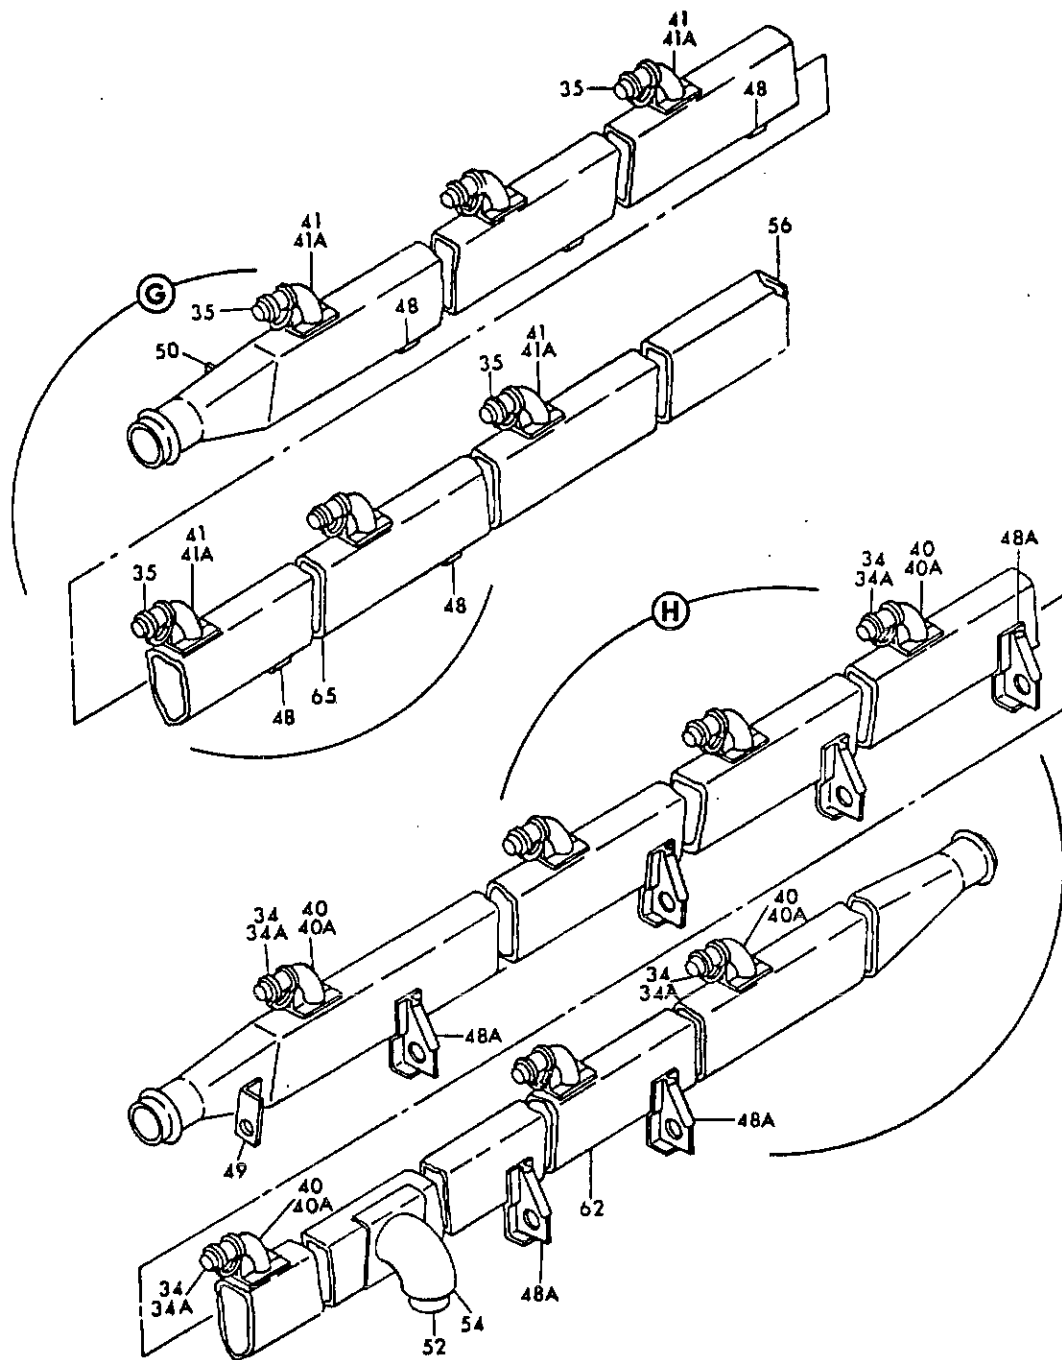


FIGURE 128. SYSTEMS INSTL, PASSENGER AIR DISTRIBUTION (SHEET 5)

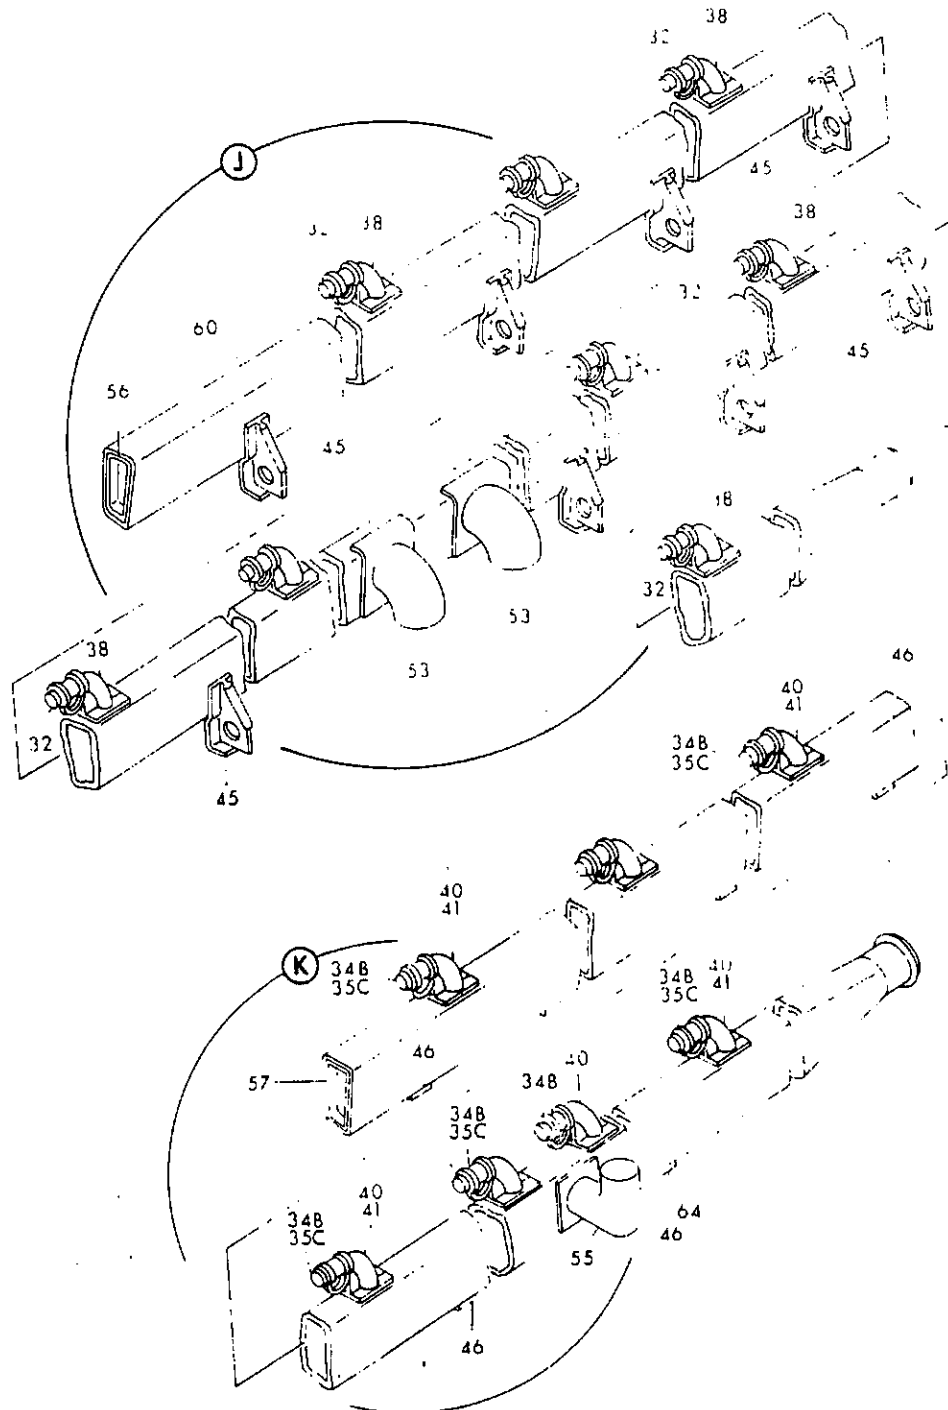


FIGURE 128. SYSTEMS INSTL. PASSENGER AIR DISTRIBUTION (SHEET 6)

NOV 21/90

21-04-128

DETAILED PARTS LIST
21-04-128
PAGE 5

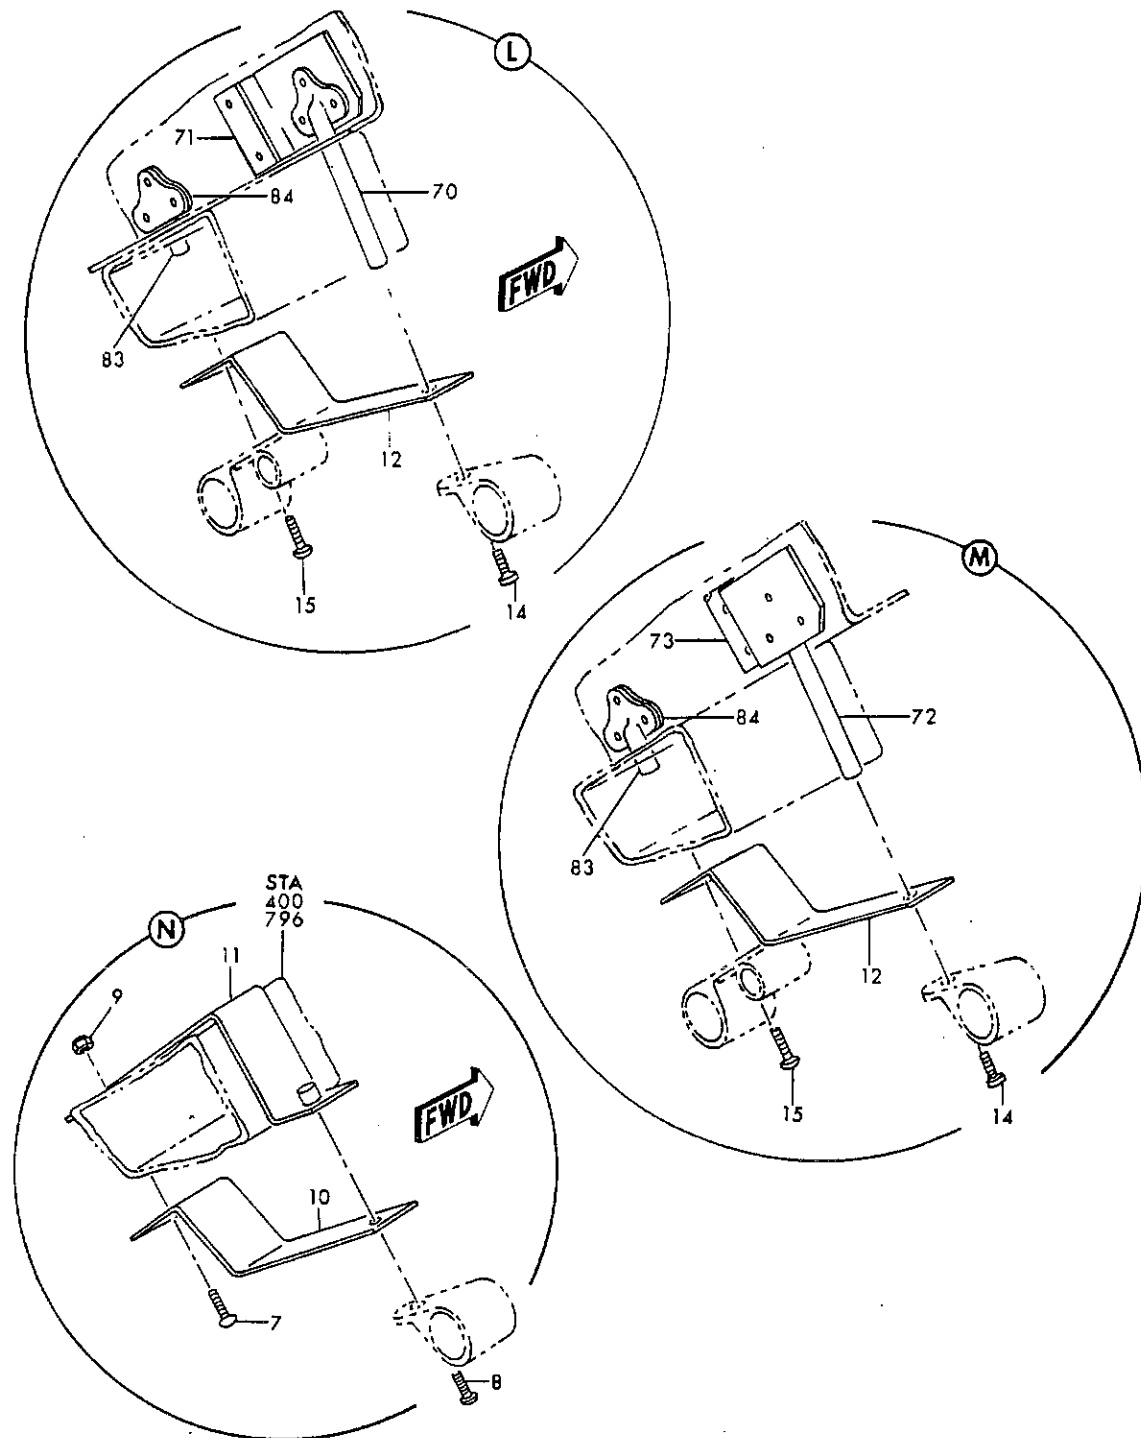


FIGURE 128. SYSTEMS INSTL, PASSENGER AIR DISTRIBUTION (SHEET 7)

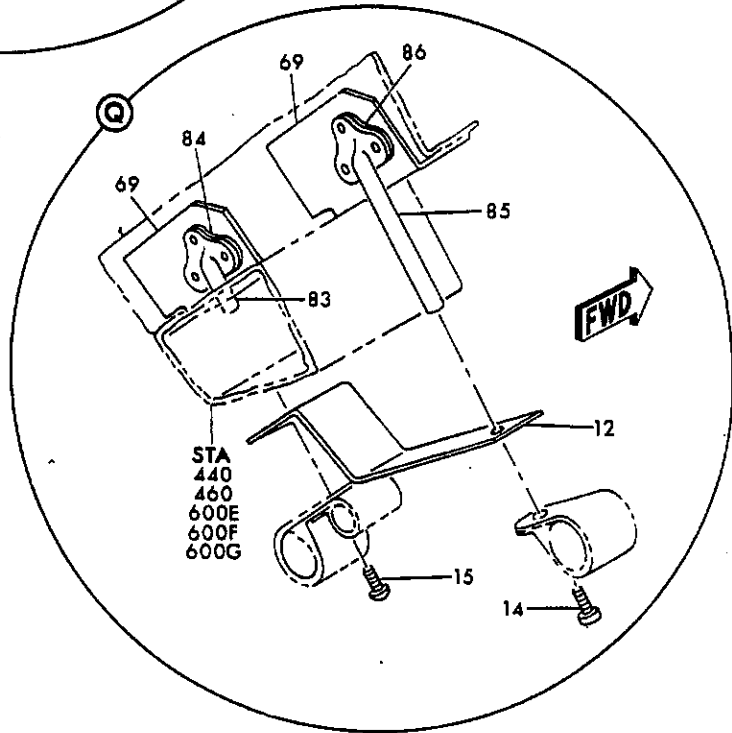
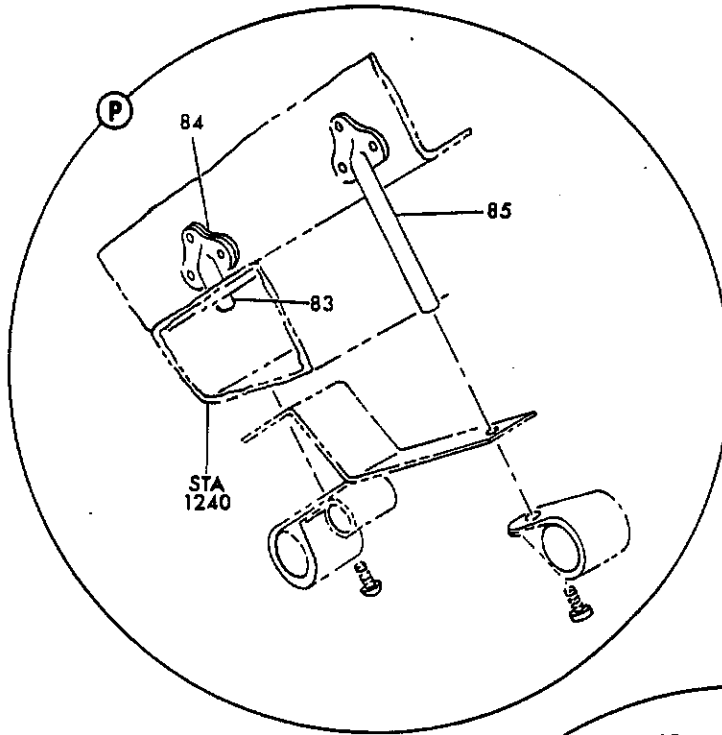


FIGURE 128. SYSTEMS INSTL. PASSENGER AIR DISTRIBUTION (SHEET 8)

NOV 21/90

21-04-128

DETAILED PARTS LIST
21-04-128
PAGE 7

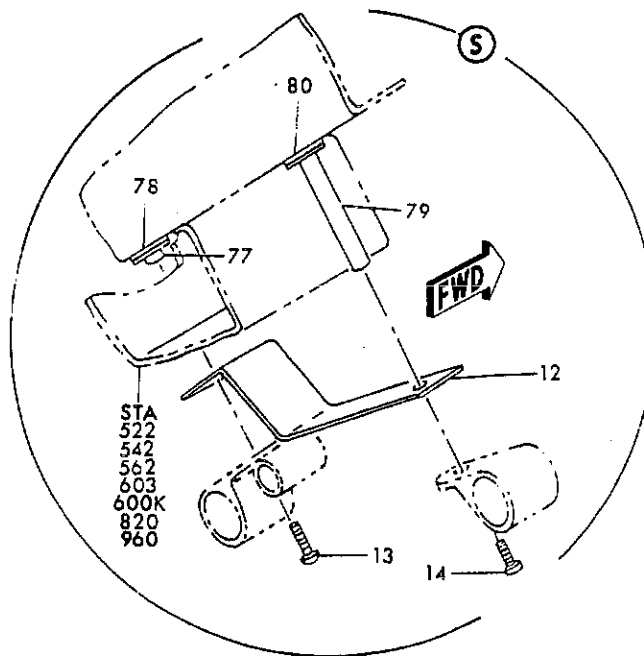
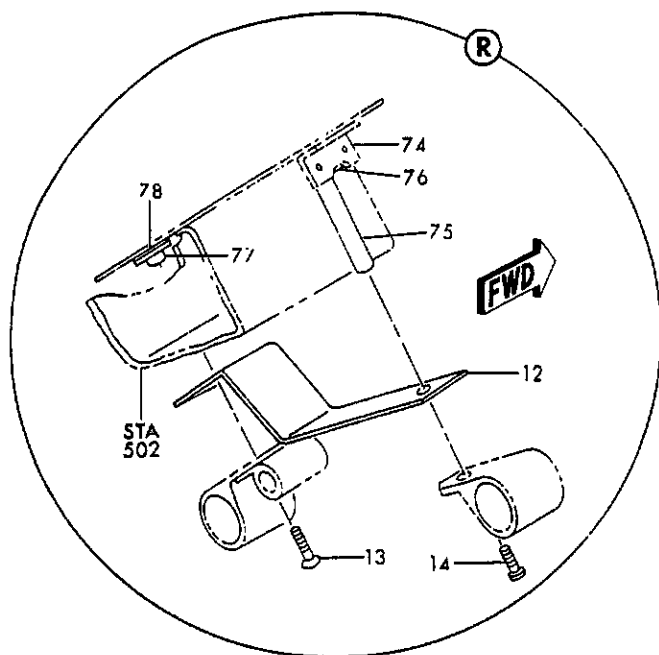


FIGURE 128. SYSTEMS INSTL, PASSENGER AIR DISTRIBUTION (SHEET 9)

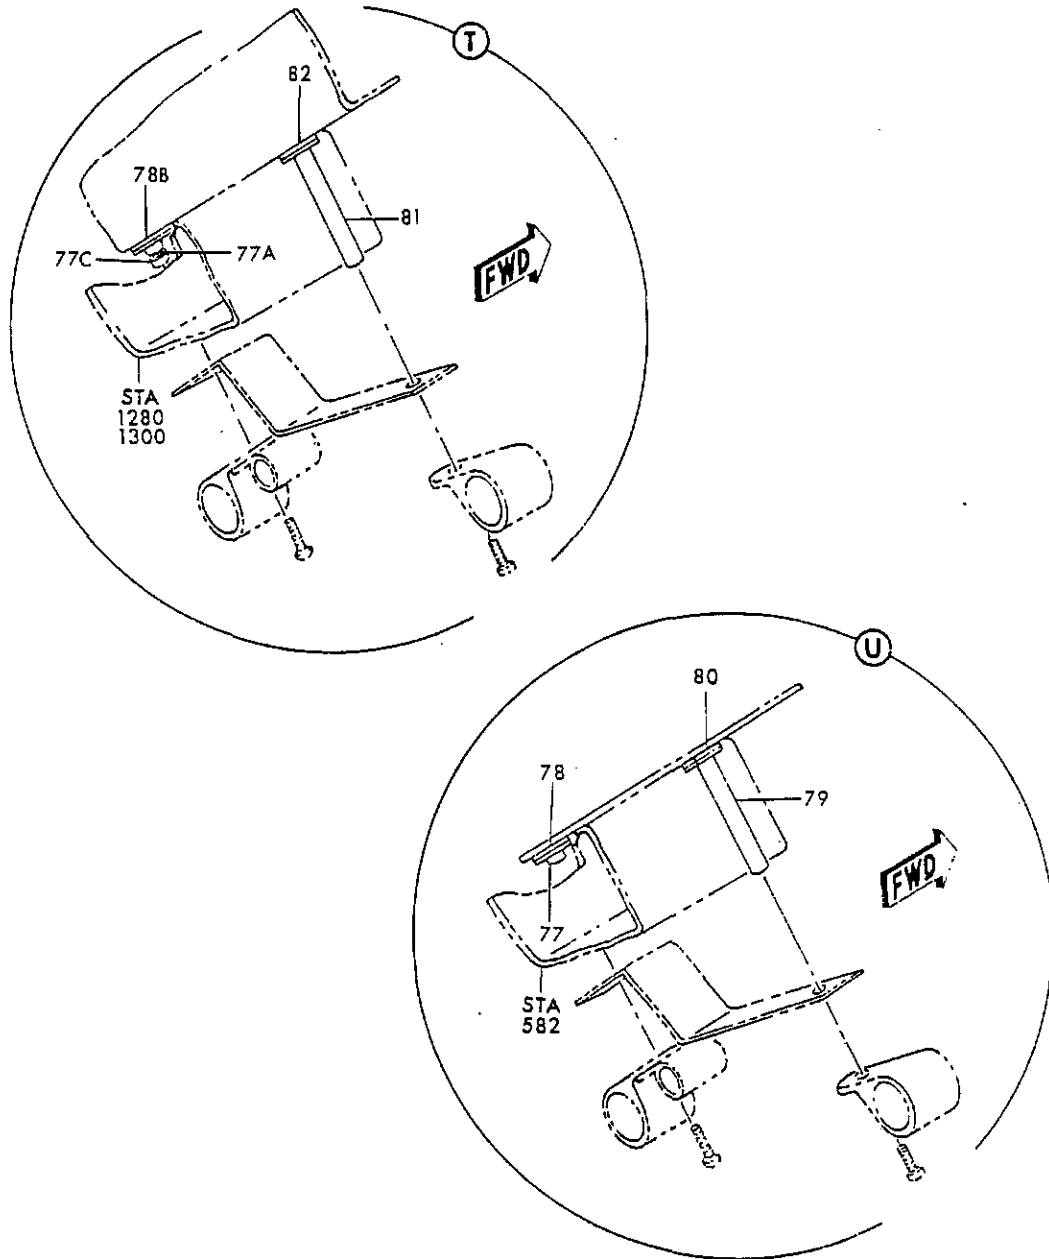


FIGURE 12A. SYSTEMS INSTL, PASSENGER AIR DISTRIBUTION (SHEET 10)

NOV 21/90

21-04-128

DETAILED PARTS LIST
21-04-128
PAGE 9

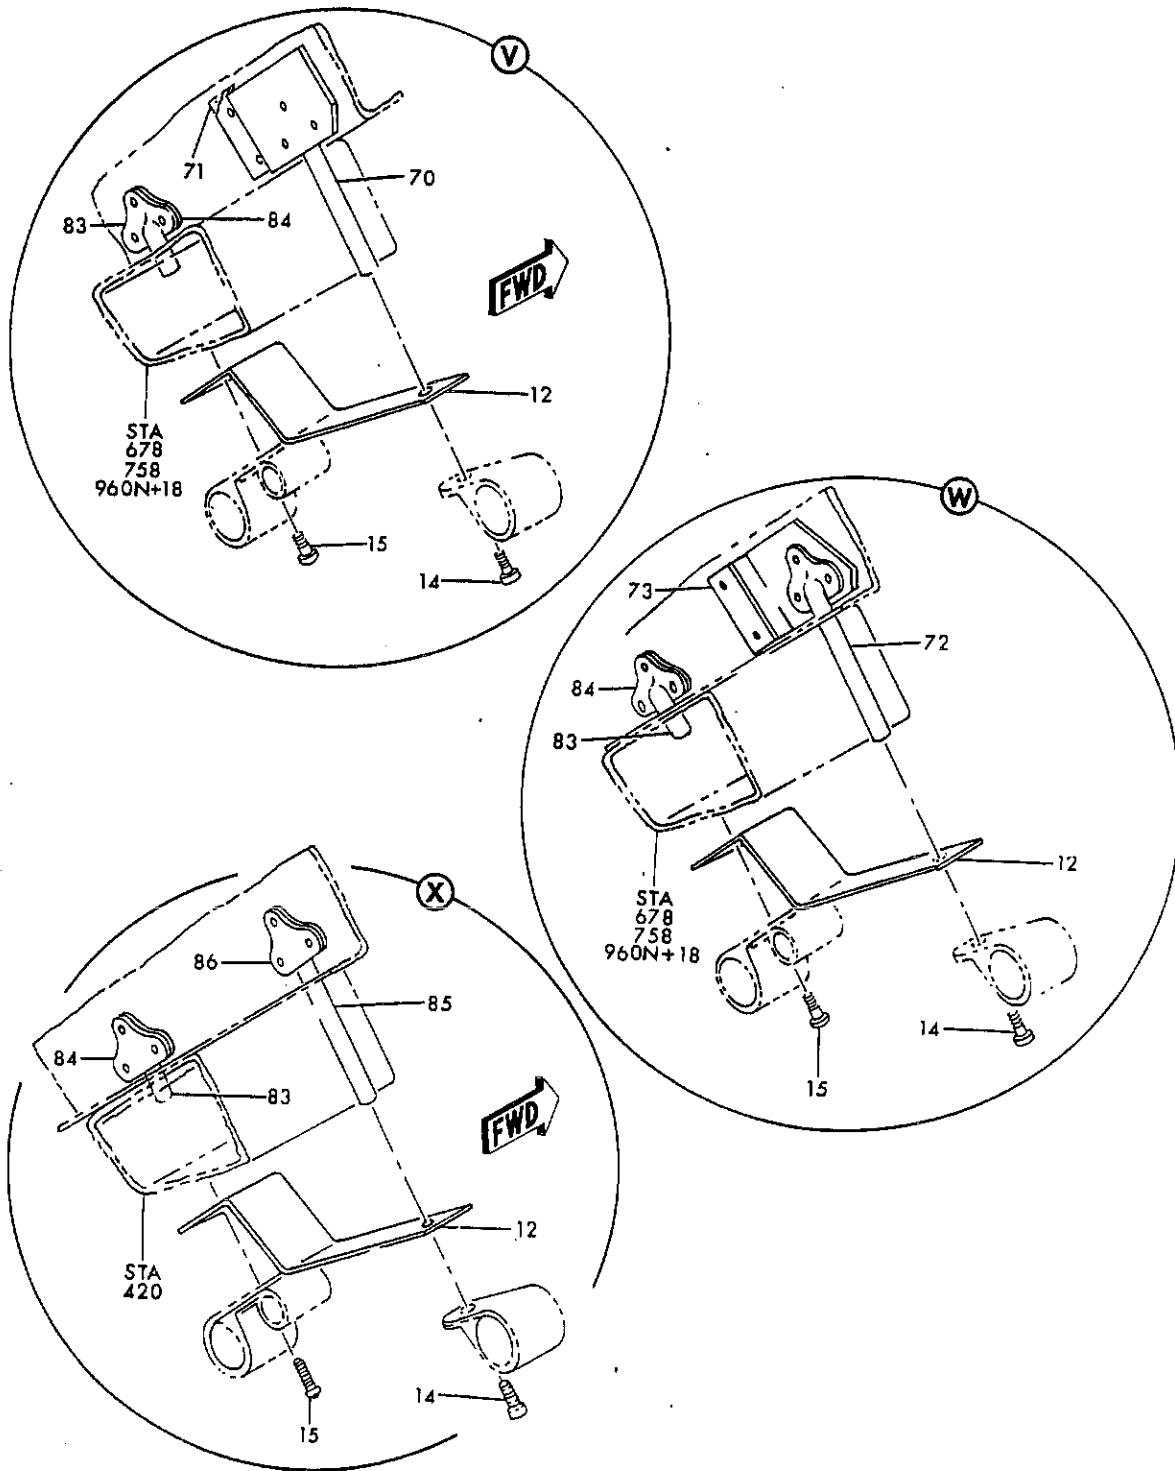


FIGURE 128. SYSTEMS INSTL, PASSENGER AIR DISTRIBUTION (SHEET 11)

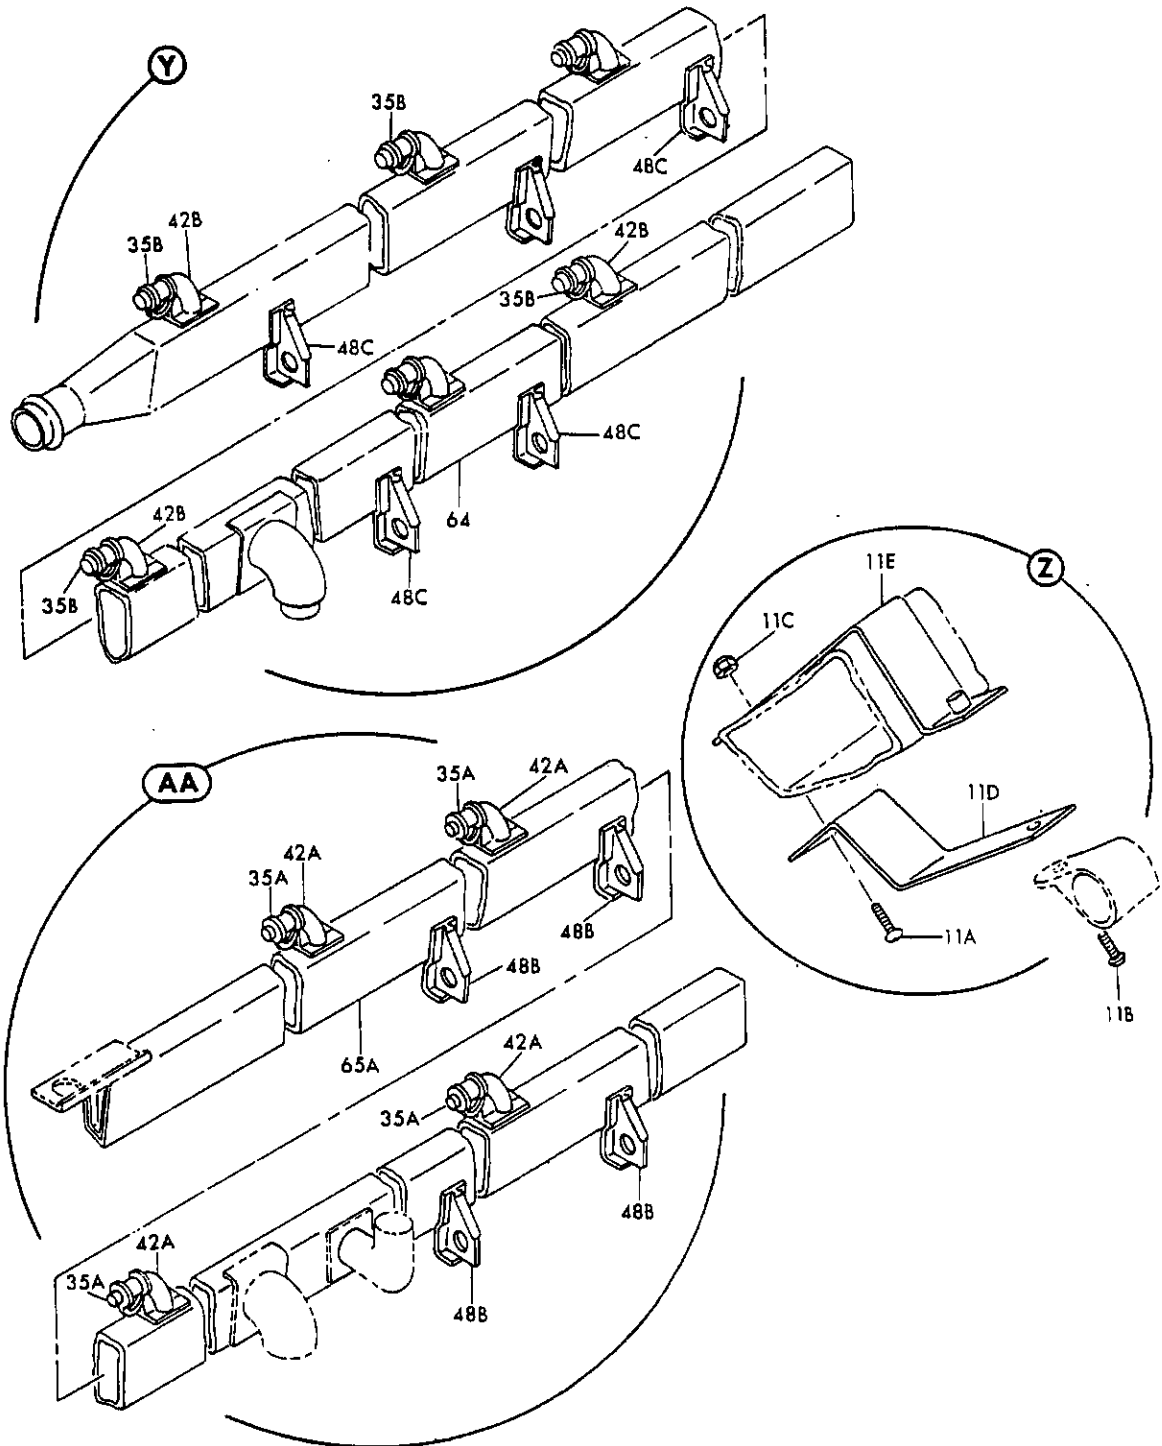


FIGURE 128. SYSTEM INSTL, PASSENGER AIR DISTRIBUTION (SHEET 12)

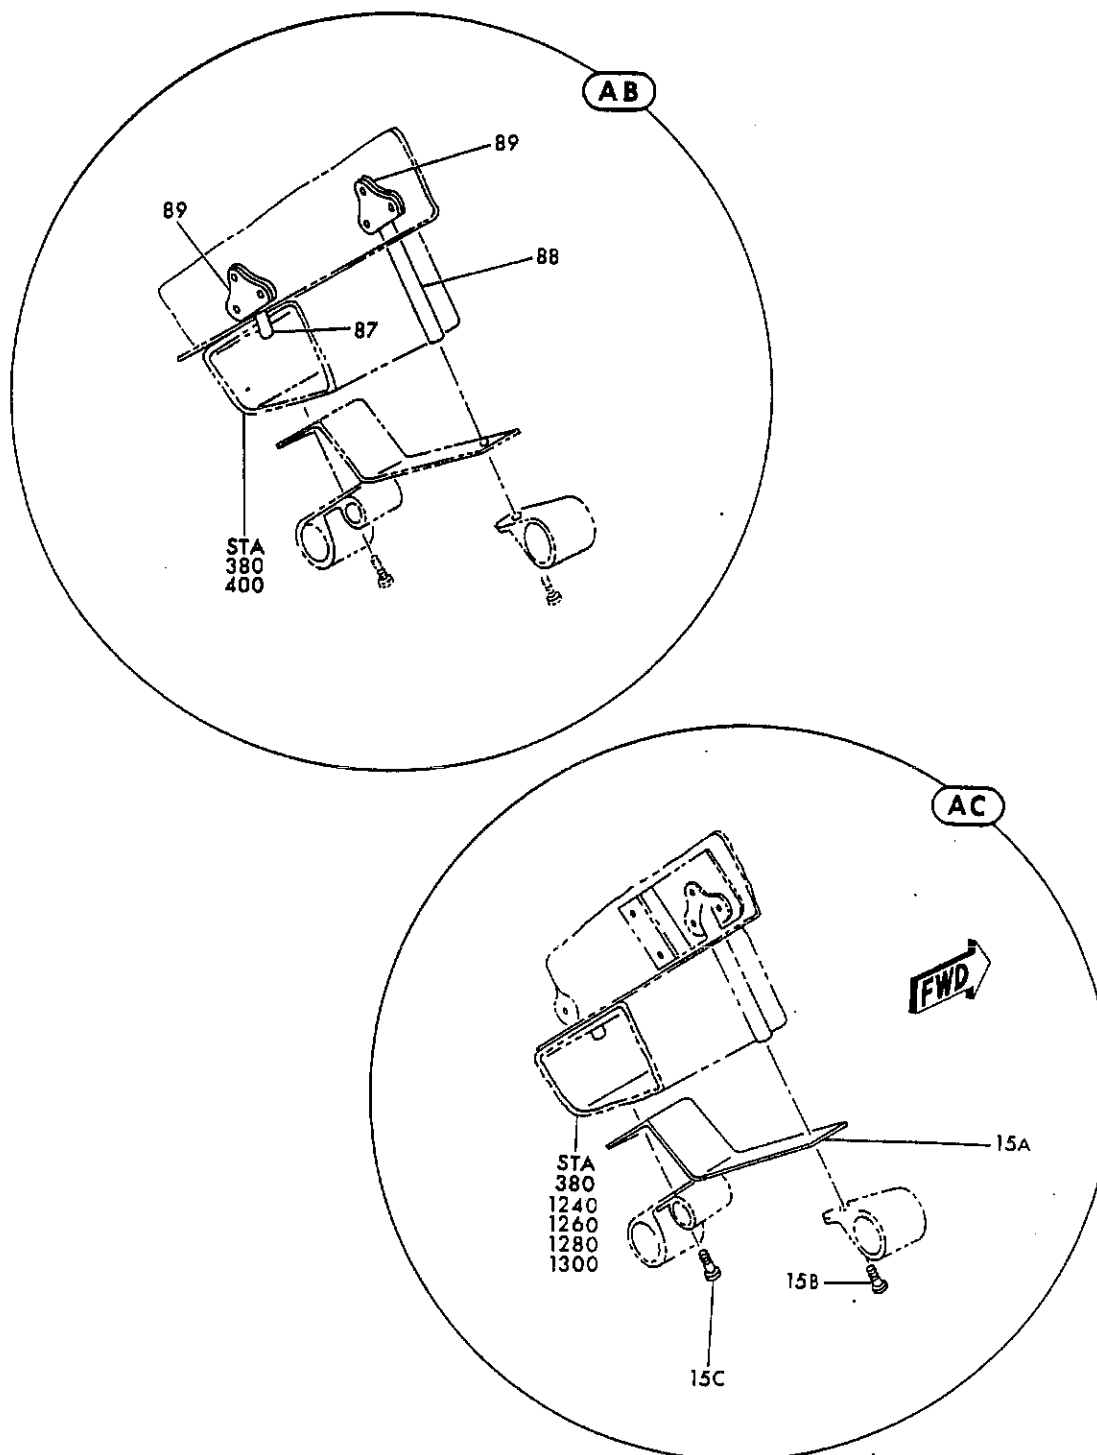


FIGURE 128. SYSTEM INSTL, PASSENGER AIR DISTRIBUTION (SHEET 13)

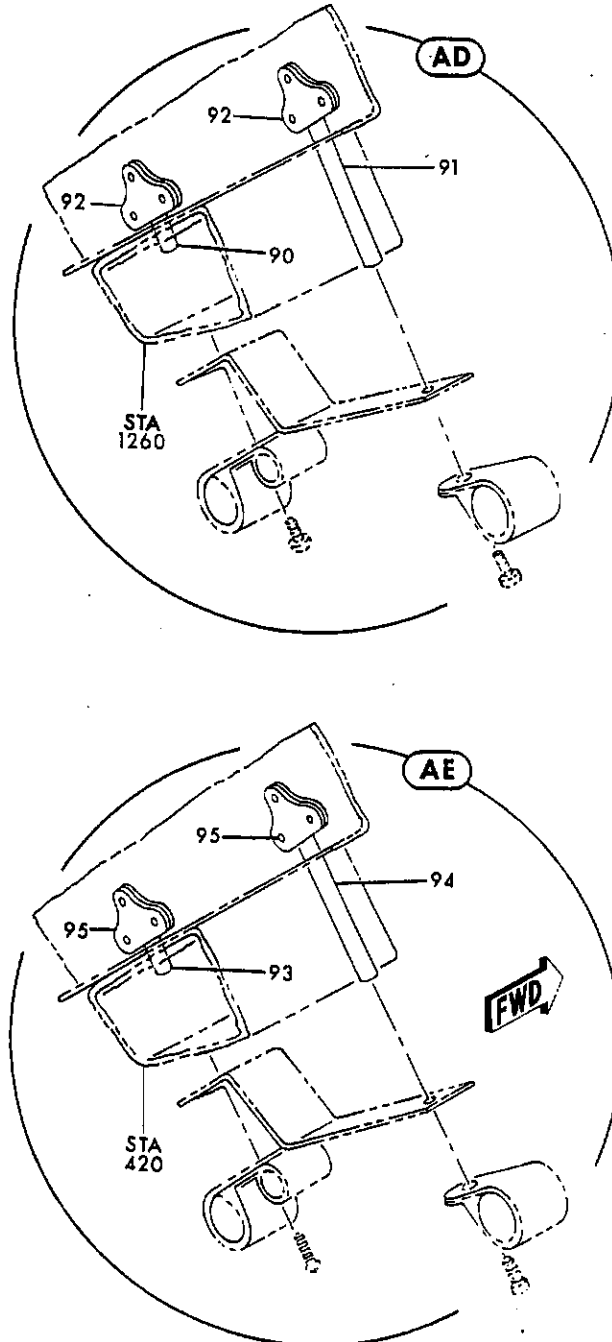


FIGURE 128. SYSTEMS INSTL, PASSENGER AIR DISTRIBUTION (SHEET 14)

NOV 21/90

21-04-128

DETAILED PARTS LIST
21-04-128
PAGE 13

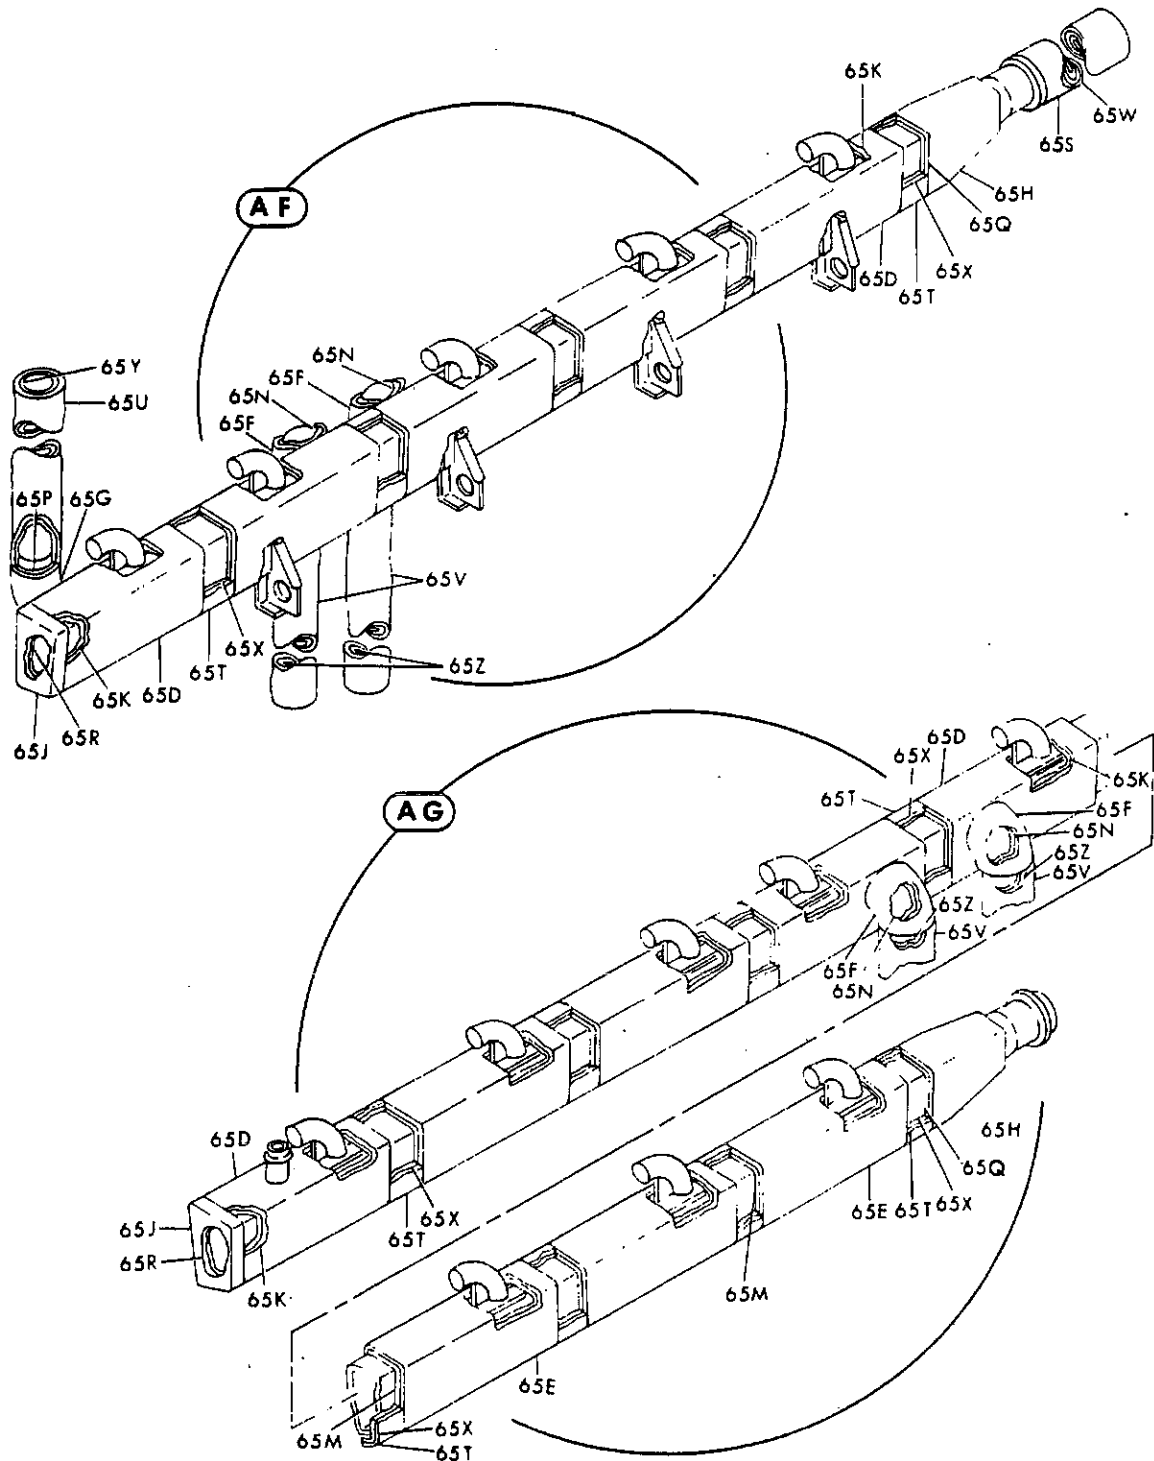


FIGURE 128. SYSTEM INSTL, PASSENGER AIR DISTRIBUTION (SHEET 15)

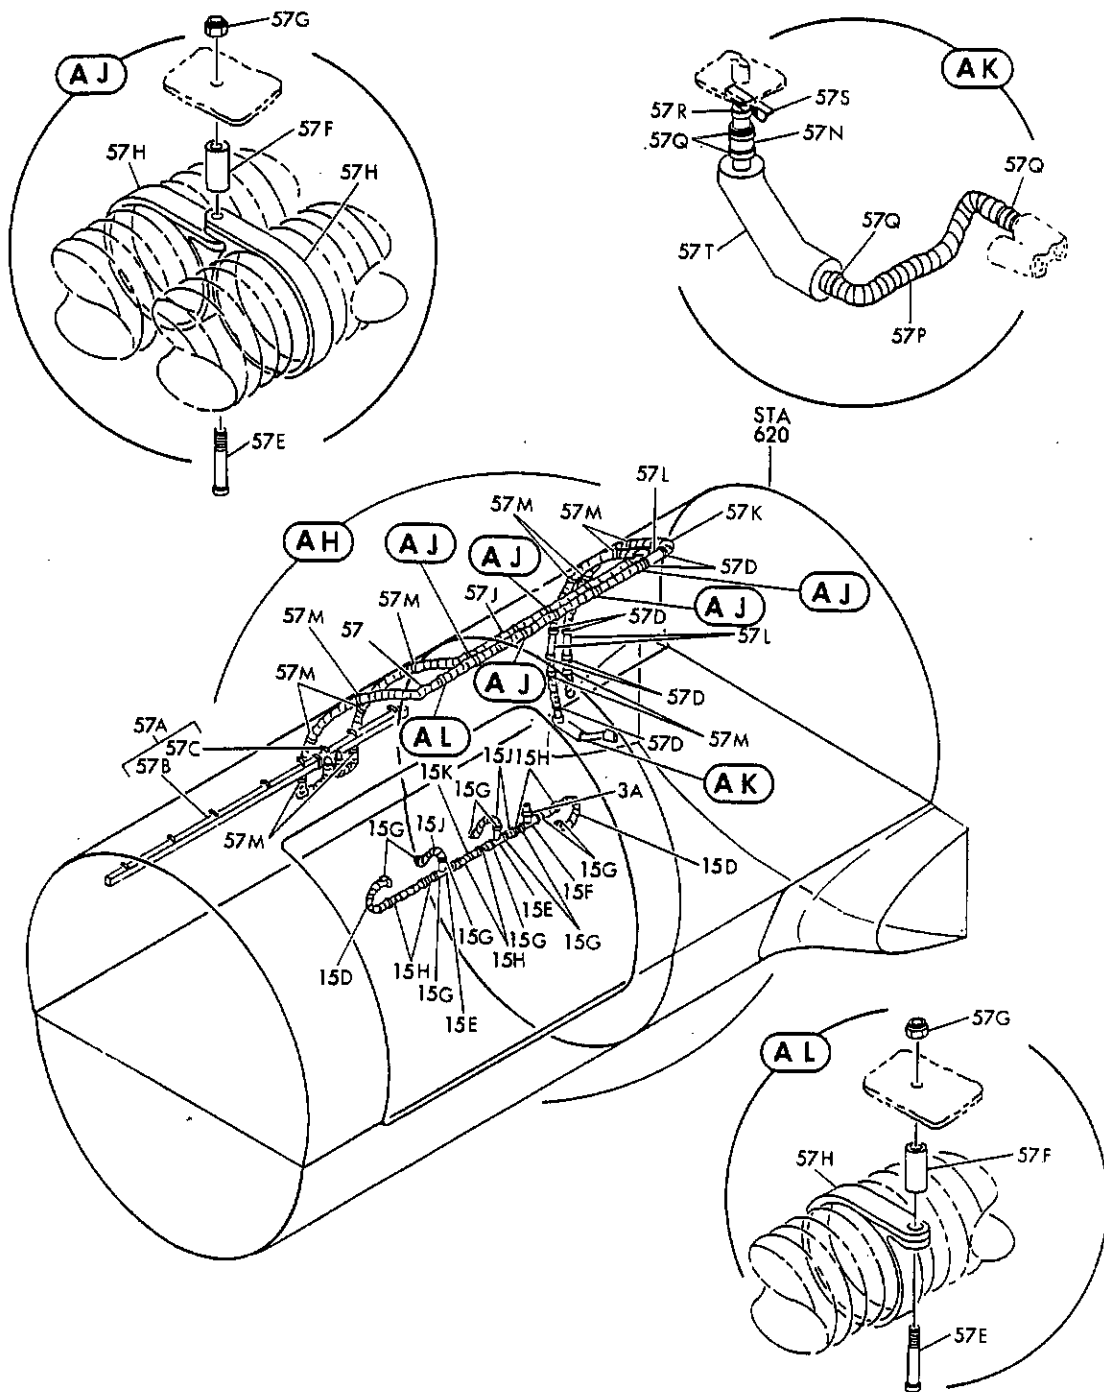


FIGURE 128. SYSTEMS INSTL. PASSENGER AIR DISTRIBUTION (SHEET 16)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
128	65-85749-4	SYSTEMS INSTL, PASSENGER AIR DISTRIBUTION (SEE 25-1, . . . FIG. 174, ITEM 23, 25-1, FIG. 174B, ITEM 30, 25-1, FIG. 174C, ITEM 30, 25-1, FIG. 174G, ITEM 23 AND 25-1, FIG. 174H, ITEM 49)	5199	RF
	65-85690-4	. . . DUCT INSTL.	5199	1
1	5016	. . . CLAMP, (V81646)	5199	4
2	502B	. . . CLAMP, (V81646)	5199	18
2A	502B	. . . CLAMP, (V81646)	5199	4
3	BACD40B5-2-5-11	. . . DUCT, AIR FLEXIBLE CONVOLUTED	5199	1
4	BACD40B8-18-5-11	. . . DUCT, AIR FLEXIBLE CONVOLUTED	5199	1
5	BACD40B5-38-6-11	. . . DUCT, AIR FLEXIBLE CONVOLUTED	5199	1
6	BACD40B8-2-5-11	. . . DUCT, AIR FLEXIBLE CONVOLUTED	5199	9
6A	BACD40B8-2-5-11	. . . DUCT, AIR FLEXIBLE CONVOLUTED	5199	1
7	NAS603-6P	. . . SCREW	5199	2
8	NAS603-12P	. . . SCREW	5199	2
9	BACN10JC3	. . . NUT	5199	2
10	66-25429-1	. . . ANGLE, SUPPORT.	5199	2
11	66-25429-3	. . . ANGLE ASSY, SUPPORT	5199	2
11A	NAS603-6P	. . . SCREW	5199	1
11B	NAS603-12P	. . . SCREW	5199	1
11C	BACN10JC3	. . . NUT	5199	1
11D	66-25429-1	. . . ANGLE, SUPPORT.	5199	1
11E	66-25429-3	. . . ANGLE ASSY, SUPPORT	5199	1
12	66-25429-1	. . . ANGLE, SUPPORT.	5199	93
		ATTACHING PARTS		
13	NAS603-10	. . . SCREW	5199	11
14	NAS603-12P	. . . SCREW	5199	93
15	NAS603-14P	. . . SCREW	5199	82
		-----*		
15A	66-25429-1	. . . ANGLE, SUPPORT.	5199	5
		ATTACHING PARTS		
15B	NAS603-12P	. . . SCREW	5199	5
15C	NAS603-14P	. . . SCREW	5199	5
		-----*		
16	65-85692-22	. . . DUCT ASSY	5199	1
17	65-85692-19	. . . DUCT ASSY	5199	1
18	65-85692-13	. . . DUCT ASSY	5199	1
19	65-85692-23	. . . DUCT ASSY	5199	1
20	65-85692-3	. . . DUCT ASSY	5199	1
21	65-85692-25	. . . DUCT ASSY	5199	1
22	65-85692-7	. . . DUCT ASSY	5199	1
23	65-85692-18	. . . DUCT ASSY	5199	1
24	65-85692-21	. . . DUCT ASSY	5199	1
25	65-85692-12	. . . DUCT ASSY	5199	1
26	65-85692-2	. . . DUCT ASSY	5199	1
27	65-85692-4	. . . DUCT ASSY	5199	1
28	65-85692-26	. . . DUCT ASSY	5199	1
29	65-85692-8	. . . DUCT ASSY	5199	1
30	65-85692-10	. . . DUCT ASSY	5199	1
31B	10-60151-3	. . . CAP, (USED ON 65-85692-22, -19)	5199	3
31C	10-60151-3	. . . CAP, (USED ON 65-85692-21)	5199	3
32	10-60151-3	. . . CAP, (USED ON 65-85692-23)	5199	8
32A	10-60151-3	. . . CAP, (USED ON 65-85692-2)	5199	9
33	10-60151-3	. . . CAP, (USED ON 65-85692-3, -4, -5, -6, -7, -8, . . -25, -26 AND -30)	5199	9
34	10-60151-3	. . . CAP, (USED ON 65-85692-13)	5199	7
34A	10-60151-3	. . . CAP, (USED ON 65-85692-18)	5199	7
35	10-60151-3	. . . CAP, (USED ON 65-85692-10)	5199	6
35C	10-60151-3	. . . CAP, (USED ON 65-85692-12)	5199	6
36	66-10300	. . . OUTLET, (USED ON 65-85692-22, -19)	5199	3
36A	66-10300	. . . OUTLET, (USED ON 65-85692-21)	5199	3
37	66-10300	. . . OUTLET, (USED ON 65-85692-13)	5199	5
38	66-10300	. . . OUTLET, (USED ON 65-85692-23)	5199	8
38A	66-10300	. . . OUTLET, (USED ON 65-85692-2)	5199	9
39	66-10300	. . . OUTLET, (USED ON 65-85692-3, -4, -5, -6, -7, -8, . . -25, -26 AND -30)	5199	9
40	66-10300	. . . OUTLET, (USED ON 65-85692-18)	5199	7
41	66-10300	. . . OUTLET, (USED ON 65-85692-10)	5199	6
41A	66-10300	. . . OUTLET, (USED ON 65-85692-12)	5199	6
42	69-64079-1	. . . OUTLET ASSY, (USED ON 65-85692-13)	5199	2
43	66-10303-4	. . . BRACKET, MOUNTING (USED ON 65-85692-22)	5199	3
		(OPTIONAL 66-10303-6)		
43	66-10303-6	. . . BRACKET, MOUNTING (USED ON 65-85692-22)	5199	3
		(OPTIONAL TO 66-10303-4)		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

21-04-128

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
128 44	66-10303-4	. . . BRACKET, MOUNTING (USED ON 65-85692-21) (OPTIONAL 66-10303-6)							5199	2
44	66-10303-6	. . . BRACKET, MOUNTING (USED ON 65-85692-21) (OPTIONAL TO 66-10303-4)							5199	2
44	66-10303-4	. . . BRACKET, MOUNTING (USED ON 65-85692-19) (OPTIONAL 66-10303-6)							5199	2
44	66-10303-6	. . . BRACKET, MOUNTING (USED ON 65-85692-19) (OPTIONAL TO 66-10303-4)							5199	2
45	66-10303-4	. . . BRACKET, MOUNTING (USED ON 65-85692-3, -5, -7, . . . -23, -25 AND -30) (OPTIONAL 66-10303-6)							5199	8
45	66-10303-6	. . . BRACKET, MOUNTING (USED ON 65-85692-3, -5, -7, . . . -23, -25 AND -30) (OPTIONAL TO 66-10303-4)							5199	8
46	66-10303-3	. . . BRACKET, MOUNTING (USED ON 65-85692-12) (OPTIONAL 66-10303-5)							5199	6
46	66-10303-5	. . . BRACKET, MOUNTING (USED ON 65-85692-12) (OPTIONAL TO 66-10303-3)							5199	6
47	66-10303-3	. . . BRACKET, MOUNTING (USED ON 65-85692-4, -6, -8, . . . AND -26) (OPTIONAL 66-10303-5)							5199	8
47	66-10303-5	. . . BRACKET, MOUNTING (USED ON 65-85692-4, -6, -8, . . . AND -26) (OPTIONAL 66-10303-3)							5199	8
47	66-10303-3	. . . BRACKET, MOUNTING (USED ON 65-85692-2) (OPTIONAL 66-10303-5)							5199	8
47	66-10303-5	. . . BRACKET, MOUNTING (USED ON 65-85692-2) (OPTIONAL TO 66-10303-3)							5199	8
48	66-10303-3	. . . BRACKET, MOUNTING (USED ON 65-85692-10) (OPTIONAL 66-10303-5)							5199	5
48	66-10303-5	. . . BRACKET, MOUNTING (USED ON 65-85692-10) (OPTIONAL TO 66-10303-3)							5199	5
48A	66-10303-4	. . . BRACKET, MOUNTING (USED ON 65-85692-18) (OPTIONAL 66-10303-6)							5199	6
48A	66-10303-6	. . . BRACKET, MOUNTING (USED ON 65-85692-18) (OPTIONAL TO 66-10303-4)							5199	6
49	66-25493-6	. . . BRACKET, MOUNTING (USED ON 65-85692-3, -5, -7, . . . -9, -18, -21 AND -30) (OPTIONAL 66-25493-2)							5199	1
49	66-25493-2	. . . BRACKET, MOUNTING (USED ON 65-85692-3, -5, -7, . . . -9, -18, -21 AND -30) (OPTIONAL TO 66-25493-6)							5199	1
49	66-25493-6	. . . BRACKET, MOUNTING (USED ON 65-85692-19) (OPTIONAL 66-25493-2)							5199	1
49	65-25493-2	. . . BRACKET, MOUNTING (USED ON 65-85692-19) (OPTIONAL TO 66-25493-6)							5199	1
50	66-25493-5	. . . BRACKET, MOUNTING (USED ON 65-85692-4, -6, -8, . . . AND -10) (OPTIONAL 66-25493-1)							5199	1
50	66-25493-1	. . . BRACKET, MOUNTING (USED ON 65-85692-4, -6, -8, . . . AND -10) (OPTIONAL TO 66-25493-5)							5199	1
50	66-25493-5	. . . BRACKET, MOUNTING (USED ON 65-85692-2) (OPTIONAL 66-25493-1)							5199	1
50	66-25493-1	. . . BRACKET, MOUNTING (USED ON 65-85692-2) (OPTIONAL TO 66-25493-5)							5199	1
51	66-25586-1	. . . BRACKET, MOUNTING (USED ON 65-85692-13)							5199	1
52	66-10501	. . . ADAPTER, (USED ON 65-85692-9, -18, -29)							5199	1
52	66-10501	. . . ADAPTER, (USED ON 65-85692-19)							5199	1
53	69-10735	. . . ELBOW, (USED ON 65-85692-2)							5199	2
53	69-10735	. . . ELBOW, (USED ON 65-85692-23)							5199	2
54	69-10735	. . . ELBOW, (USED ON 65-85692-9, 19, -29)							5199	1
54	69-10735	. . . ELBOW, (USED ON 65-85692-19)							5199	1
55	69-10735-9	. . . ELBOW, (USED ON 65-85692-12 AND -13 AND -28)							5199	1
56	69-36311-2	. . . PLUG, END (USED ON 65-85692-10, -23)							5199	1
56	69-36311-2	. . . PLUG, END (USED ON 65-85692-13, -22, -29)							5199	1
57	69-36311-1	. . . PLUG, END (USED ON 65-85692-12, -13, -19, -29, . . . - AND -28)							5199	1
57	69-36311-1	. . . PLUG, (USED ON 65-85692-21)							5199	1
58	65-47130-14	. . . DUCT, (USED ON 65-85692-22)							5199	1
59	65-47130-10	. . . DUCT, (USED ON 65-85692-19)							5199	1
60	65-47130-11	. . . DUCT, (USED ON 65-85692-13)							5199	1
61	65-47130-1	. . . DUCT, (USED ON 65-85692-3, -4, -5, -6, -7, . . . -8 AND -30)							5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
128 61	65-47130-1	. . .	DUCT, (USED ON 65-85692-2)	5199	1
62	65-47130-2	. . .	DUCT, (USED ON 65-85692-18)	5199	1
63	65-47130-10	. . .	DUCT, (USED ON 65-85692-21)	5199	1
64	65-47130-7	. . .	DUCT, (USED ON 65-85692-12 AND -28)	5199	1
65	65-47130-12	. . .	DUCT, (USED ON 65-85692-10)	5199	1
66	65-54121-10	. . .	DUCT INSTL, CARGO DOOR CROSSOVER (SEE FIG. 126)	5199	1
	65-85691-4	. . .	SUPPORT INSTL, DUCT	5199	1
68	66-25493-3	. . .	BRACKET, MOUNTING	5199	6
69	66-25587-1	. . .	ANGLE, SUPPORT.	5199	10
		. . .	ATTACHING PARTS		
	BACR15BB6D	. . .	RIVET	5199	20
70	69-63826-1	. . .	ANGLE, SUPPORT.	5199	34
		. . .	ATTACHING PARTS		
	BACR15BB5D	. . .	RIVET	5199	68
71	66-3224-1	. . .	GASKET.	5199	34
72	69-63826-2	. . .	ANGLE, SUPPORT.	5199	44
		. . .	ATTACHING PARTS		
	BACR15BB5D	. . .	RIVET	5199	88
73	66-3224-1	. . .	GASKET.	5199	44
74	BACB2B17C2ETY	. . .	BRACKET, ANGLE.	5199	1
		. . .	ATTACHING PARTS		
	BACR15BB4D	. . .	RIVET	5199	2
75	BACN10GH3-10	. . .	NUT, SPACER PLATE	5199	1
		. . .	ATTACHING PARTS		
	BACR15BB3D	. . .	RIVET	5199	2
76	66-3224-3	. . .	GASKET.	5199	1
77	BACN10MS3-3	. . .	NUT, SPACER PLATE	5199	12
		. . .	ATTACHING PARTS		
	BACR15BB3D	. . .	RIVET	5199	24
77A	NAS43DD3-16	. . .	SPACER.	5199	2
77B	BACN10MS3-3	. . .	NUT, SPACER PLATE	5199	2
		. . .	ATTACHING PARTS		
	BACR15BB3D	. . .	RIVET	5199	4
77C	66-3224-4	. . .	GASKET.	5199	2
78	66-3224-4	. . .	GASKET.	5199	12
79	BACN10TL3-18	. . .	NUT, SPACER PLATE	5199	11
		. . .	ATTACHING PARTS		
	BACR15BB3D	. . .	RIVET	5199	22
80	66-3224-4	. . .	GASKET.	5199	11
81	BACN10TL3-20	. . .	NUT, SPACER PLATE	5199	2
		. . .	ATTACHING PARTS		
	BACR15BB3D	. . .	RIVET	5199	4
82	66-3224-4	. . .	GASKET.	5199	2
83	BACN10TM3-10	. . .	NUT, SPACER PLATE	5199	83
		. . .	ATTACHING PARTS		
	BACR15BB3D	. . .	RIVET	5199	249
84	66-3224	. . .	GASKET.	5199	83
85	BACN10TM3-24	. . .	NUT, SPACER PLATE	5199	5
		. . .	ATTACHING PARTS		
	BACR15BB3D	. . .	RIVET	5199	15
86	66-3224	. . .	GASKET.	5199	5
87	BACN10TM3-10	. . .	NUT, SPACER PLATE	5199	2
88	BACN10TM3-24	. . .	NUT, SPACER PLATE	5199	2
		. . .	ATTACHING PARTS		
	BACR15BB3D	. . .	RIVET	5199	12
89	66-3224	. . .	GASKET.	5199	4
90	BACN10TM3-10	. . .	NUT	5199	1
91	BACN10TM3-24	. . .	NUT	5199	1
93	BACN10TM3-10	. . .	NUT, SPACER PLATE	5199	1
94	BACN10TM3-24	. . .	NUT, SPACER PLATE	5199	1
		. . .	ATTACHING PARTS		
	BACR15BB3D	. . .	RIVET	5199	6
MISSING ITEM NUMBERS ARE NOT APPLICABLE					



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
1	2	3	4	5	6	7					
128	95	66-3224	. . GASKET.							5199	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 05
CONTROL SYSTEMS

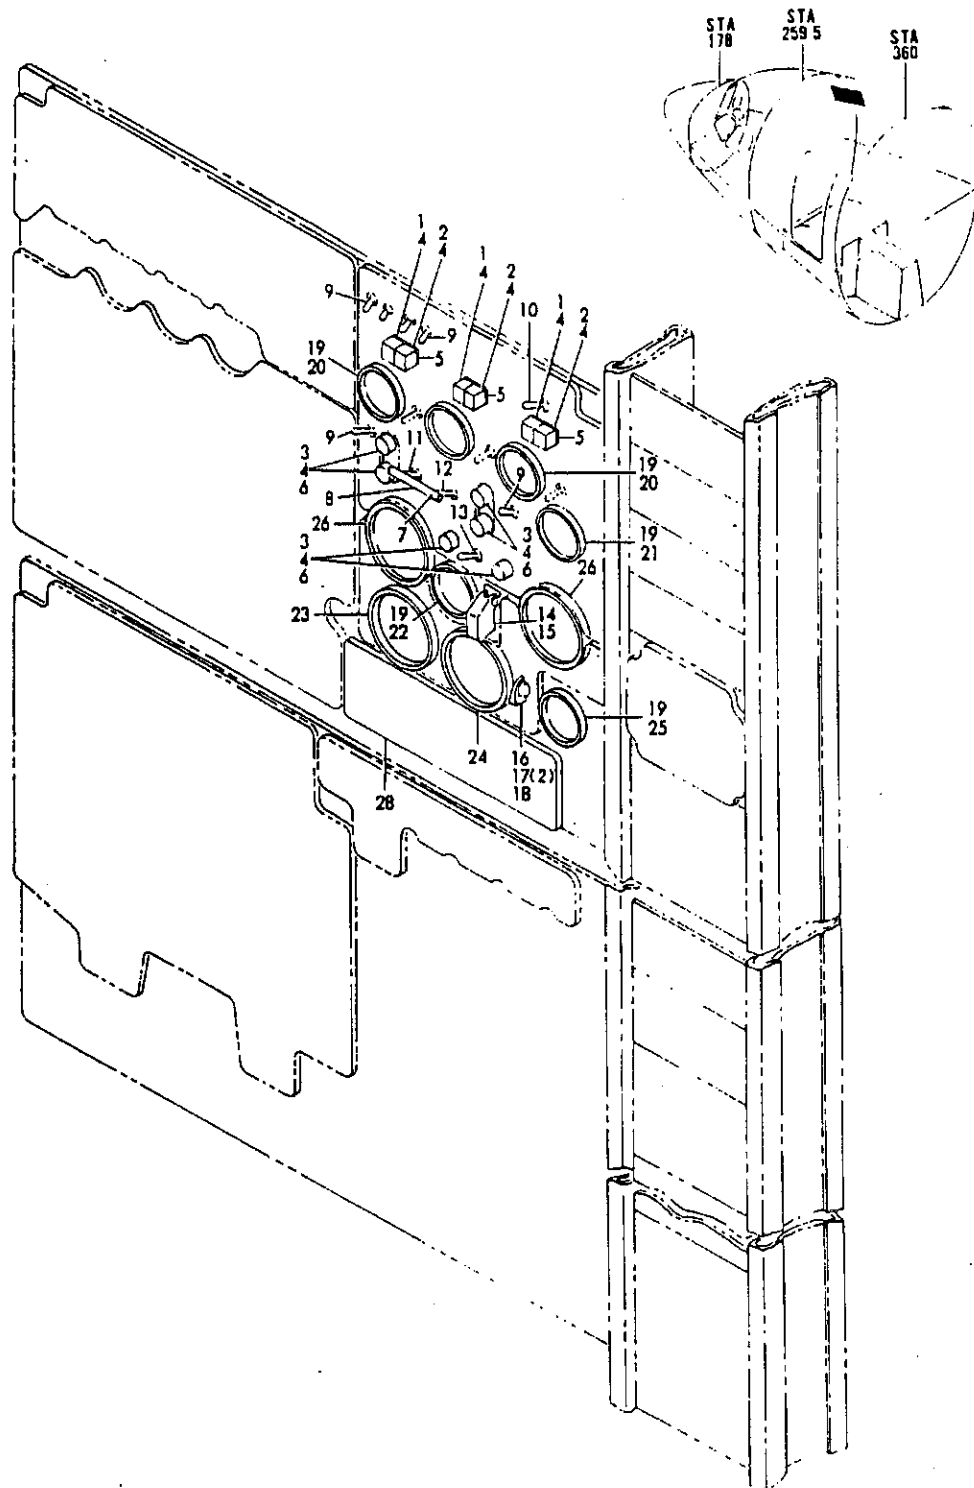


FIGURE 25H. PANEL INSTL, FLIGHT ENGINEERS UPPER AIR CONDITIONING UNIT

MISSING ITEM NUMBERS ARE NOT APPLICABLE



21-05-25L

NOV 21/90

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
25L	65-58955-1		PANEL INSTL, FLIGHT ENGINEERS UPPER (AIR CONDITIONING ONLY) (SEE 25-1, FIG. 1E, ITEM 8, 25-1, FIG. 1F, ITEM 5, 25-1, FIG. 2D, ITEM 6 AND 25-1, FIG. 2E, ITEM 102)	5199	RF
1	515-1013-009		. CAP, LIGHT (V81590)	5199	3
2	515-1013-002		. CAP, LIGHT (V81590)	5199	3
3	515-1013-003		. CAP, LIGHT (V81590)	5199	2
4	515-1013-004		. CAP, LIGHT (V81590)	5199	2
5	515-1013-022		. CAP, LIGHT (V81590)	5199	1
6	515-1013-023		. CAP, LIGHT (V81590)	5199	1
7	1864		. LAMP, (V08806)	5199	12
8	10-61412-1		. CONTROLLER, CABIN PRESSURE	5199	1
	65-58955-98		. UNIT ASSY, (AIR CONDITIONING ONLY)	5199	RF
9	D20011		. SWITCH, TOGGLE (V81640)	5199	1
10	66-9039		. KNOB ASSY, SMALL POINTER	5199	1
11	LL22XD62J3		. SETSCREW, (V03038)	5199	2
12	65-69954-3		. SWITCH ASSY	5199	1
12A	BWH2-70HMS5		. RESISTOR, (V75042)	5199	1
12B	BWH1-80HMS5		. RESISTOR, (V75042)	5199	1
12C	BWH1-20HMS5		. RESISTOR, (V75042)	5199	1
12D	48-1914		. SWITCH, (V91812)	5199	1
13	076-1013-001		. LIGHTBASE, (V81590)	5199	3
14	076-1013-002		. LIGHTBASE, (V81590)	5199	2
15	076-1013-013		. LIGHTBASE, (V81590)	5199	1
16	ITL1-3D		. SWITCH, TOGGLE (V91929)	5199	6
17	11100		. GUARD, (V72914)	5199	1
18	11170-1		. GUARD, (V72914)	5199	1
19	MS35059-23		. SWITCH	5199	1
20	MS35058-31		. SWITCH	5199	1
21	63-2095		. SWITCH, TOGGLE	5199	1
22	MS25068-23		. SWITCH	5199	1
23	NAS607-1-4P		. PIN	5199	1
24	63-2096		. GANG BAR, AIR CONDITIONING CONTROL ENGINEERS PANEL	5199	1
25	D20011-01		. SWITCH, TOGGLE (V81640)	5199	1
28	BACC10EL2		. CLAMP	5199	1
29	163BL506		. INDICATOR, MAIN CABIN TEMPERATURE (V35918)	5199	1
30	10-3063-7		. CONTROLLER, CABIN TEMPERATURE	5199	2
	MS24693BB50		. ATTACHING PARTS		
			. SCREW	5199	8
31	BACC10EL3		. CLAMP	5199	6
32	8016		. INDICATOR, CABIN AIR DUCT PRESSURE (V07147)	5199	1
32A	SRL09C		. INDICATOR, AIR SUPPLY DUCT PRESSURE (V61349)	5199	1
32B	AW2056AB02		. INDICATOR, (V61349)	5199	1
32C	69-23180-1		. CLAMP, INSTRUMENT MOUNTING (ALTERED FROM; 18111 (V98625))	5199	1
33	10-60122-3		. TACHOMETER, TURBO COMPRESSOR	5199	3
37	8018		. INDICATOR, CABIN ALTITUDE (V07147)	5199	1
39	B4018710026		. INDICATOR, CABIN RATE OF CLIMB (V89944)	5199	1
	65-4558		. BUNDLE ASSY, P11 ENGINEERS UPPER INSTRUMENT PANEL ELECTRICAL (AIR CONDITIONING ONLY) (SEE 24-3, FIG. 1A, 1B AND 1C FOR NHA)	5199	RF
40	21AT3		. SWITCH, (V91929)	5199	3
			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	5199	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/90

21-05-25L

DETAILED PARTS LIST
21-05-25L
PAGE 1

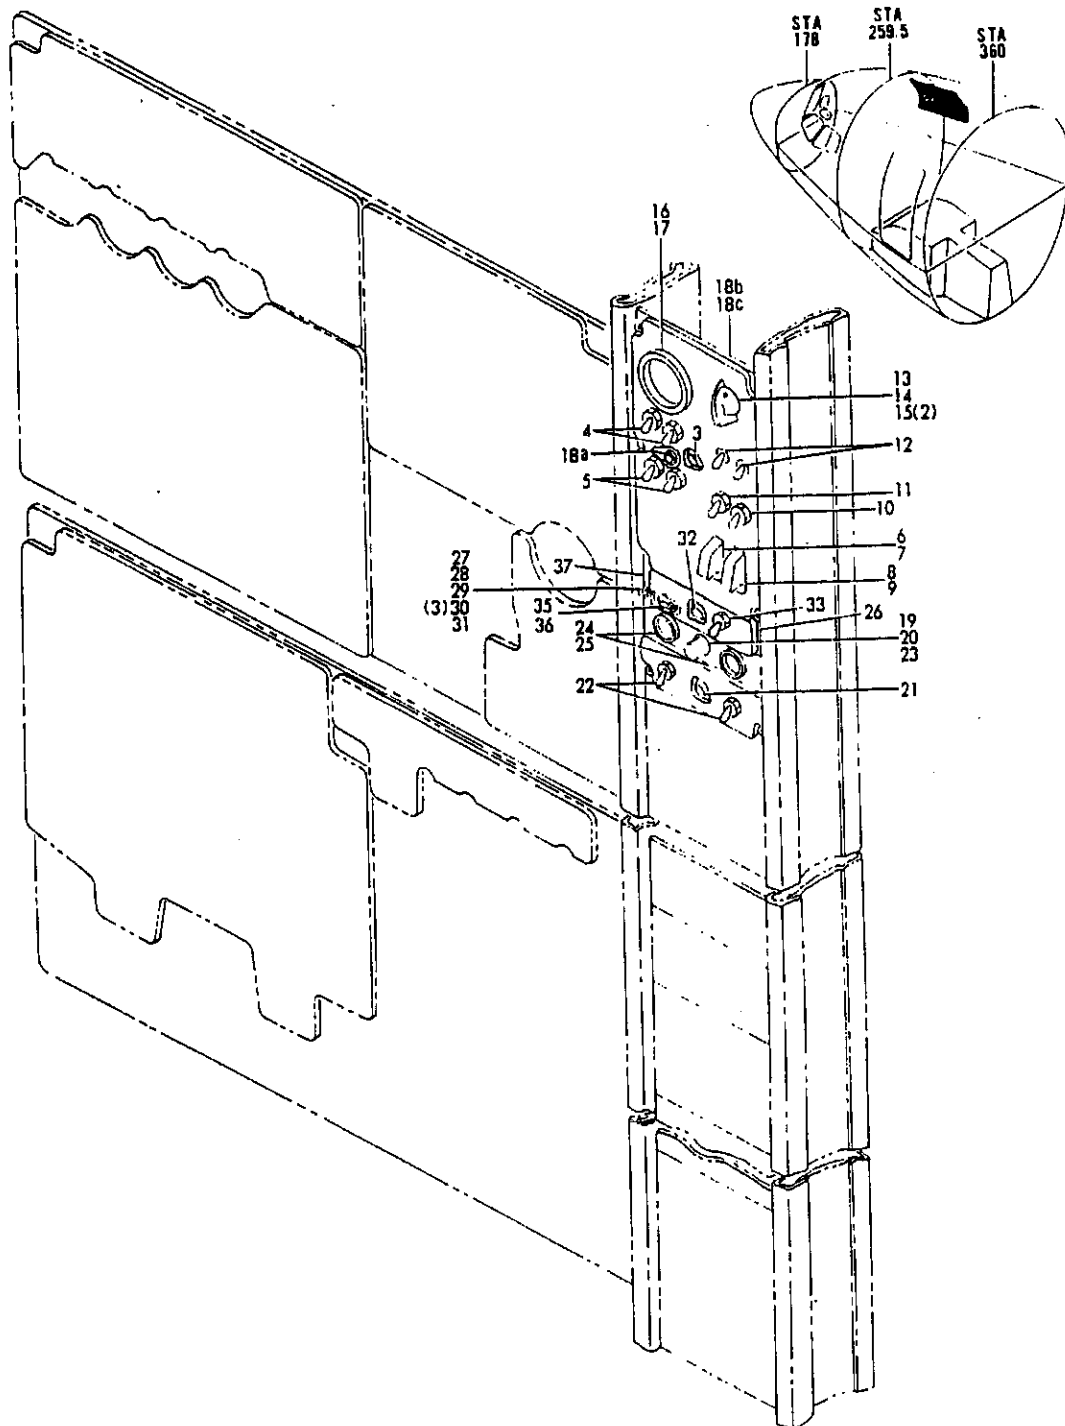


FIGURE 25R, PANEL INSTL, FLIGHT ENGINEERS AUXILIARY AIR CONDITIONING ONLY



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R	25R	65-58399-1	PANEL INSTL, FLIGHT ENGINEERS AUXILIARY (AIR.	0150 RF
R		CONDITIONING ONLY) (SEE 25-1, FIG. 1K, ITEM 5 AND		
R		25-1, FIG. 2C, ITEM 8)		
R		. PANEL INSTL, COOLANT AIR SYSTEM (AIR CONDITIONING . .	0150 RF	
R		ONLY)		
R		. . . UNIT ASSY, (AIR CONDITIONING ONLY).	0150 RF	
R	3	SCN001	. . . CONNECTOR, POWER (V26742)	0150 1
R		(OPTIONAL 107A (V04211))		
R	3	107A	. . . CONNECTOR, POWER (V04211)	0150 1
R		(OPTIONAL TO SCN001 (V26742))		
R	4	MS35058-27	. . . SWITCH, (V91929)	0150 2
R	5	2TL1-3D	. . . SWITCH, (V91929)	0150 2
R	6	MS35058-23	. . . SWITCH.	0150 1
R	7	11100-1	. . . GUARD, (V72914)	0150 1
R	8	MS35058-31	. . . SWITCH.	0150 1
R	9	11170-1	. . . GUARD, (V72914)	0150 1
R	10	A3-1005	. . . SWITCH, (V81640)	0150 1
R	11	A3-1006	. . . SWITCH, (V81640)	0150 1
R	12	15AT14	. . . SWITCH, (V91929)	0150 2
R		ATTACHING PARTS		
R		. . . SCREW	0150 4	
R	13	C80123	. . . SWITCH, (V13215)	0150 1
R	14	66-9039	. . . KNOB ASSY, POINTER.	0150 1
R	15	LL22XD62J3	. . . SETSCREW, HEX SOCKET (V03038)	0150 2
R	16	BACC10EL3	. . . CLAMP	0150 1
R	17	561-648	. . . INDICATOR, VALVE POSITION (V28569)	0150 1
R	18A	65-57565-10	. . . SLEEVE.	0150 1
R	18B	65-57565-35	. . . PANEL ASSY.	0150 1
R	18C	65-57565-36	. . . BASEPLATE	0150 1
R		. PANEL INSTL, ZONE CONTROL (AIR CONDITIONING ONLY) . .	0150 RF	
R	19	M07-15	. . . CAP, LIGHTING (V81590)	0150 1
R	20	1864	. . . LAMP, (V08806)	0150 1
R		. UNIT ASSY	0150 RF	
R	21	SCN001	. . . CONNECTOR, (V26742)	0150 1
R	22	4TL1-7	. . . SWITCH, (V91929)	0150 2
R	23	STB131L	. . . BASE, LIGHT (V81590)	0150 1
R	24	BACC10EL1	. . . CLAMP	0150 2
R	25	10-60757-42	. . . INDICATOR, VALVE POSITION	0150 2
R		. PANEL INSTL, CABIN AIR (AIR CONDITIONING ONLY). . . .	0150 RF	
R	26	65-57565-32	. . . LIGHTPLATE ASSY, DETACHABLE CIRCUIT (SEE CHAPTER 33	0150 1
R		FOR BREAKDOWN)		
R		ATTACHING PARTS		
R		. . . SCREW	0150 2	
R		. . . WASHER.	0150 2	
R		. . . WASHER.	0150 2	
R	27	BACS12CB3-10	. . . SCREW	0150 1
R	28	MS20341-10	. . . WASHER.	0150 1
R	29	MS35338-43	. . . WASHER.	0150 1
R	30	AN960D10L	. . . WASHER.	0150 3
R	31	NAS679A3W	. . . NUT	0150 1
R		. UNIT ASSY	0150 RF	
R	32	SCN001	. . . CONNECTOR, (V26742)	0150 1
R	33	MS35058-23	. . . SWITCH.	0150 1
R	35	65-57565-10	. . . SLEEVE.	0150 1
R	36	MS25083-2886	. . . JUMPER ASSY	0150 1
R		ATTACHING PARTS		
R		. . . SCREW	0150 1	
R		. . . WASHER.	0150 2	
R		. . . NUT	0150 1	
R	37	65-57565-31	. . . PANEL ASSY, (ALTERED FROM BACP10U0187G)	0150 1
R		. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	0150	

MISSING ITEM NUMBERS ARE NOT APPLICABLE



21-05-25T

NOV 21/90

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF	UNITS
			FROM TO	PER ASSY
25T	65-58957-1	PANEL INSTL, FLIGHT ENGINEERS AUXILIARY (AIR. CONDITIONING ONLY) (SEE 25-1, FIG. 2D, ITEM 6 AND 25-1, FIG. 2E, ITEM 83 AND 25-1, FIG. 1F, ITEM 7)	5199	RF
	65-58958-32	. MODULE INSTL, COOLANT AIR SYSTEM (AIR CONDITIONING. ONLY)	5199	RF
1	562-112	. . . INDICATOR, VALVE POSITION (V28569).	5199	1
2	65-58958-33	. . . UNIT ASSY, (AIR CONDITIONING ONLY).	5199	RF
3	BACC10EL3	. . . CLAMP	5199	1
4	66-9039	. . . KNOB ASSY, SMALL POINTER.	5199	1
5	LL22XD62J3	 SETSCREW, HEXAGONAL SOCKET (V03038)	5199	2
6	C80123	. . . SWITCH, (V13215).	5199	1
7	MS35058-27	. . . SWITCH.	5199	2
	15AT14	. . . SWITCH, (V91929).	5199	2
	NAS514P632-7	ATTACHING PARTS . . . SCREW	5199	4
9	2TL1-3D	. . . SWITCH, (V91929).	5199	2
10	A3-1005	. . . SWITCH, (V81640).	5199	1
11	A3-1006	. . . SWITCH, (V81640).	5199	1
	65-58958-53	. MODULE INSTL, SAFETY VALVE OVERRIDE (AIR CONDITIONING ONLY)	5199	RF
	65-58958-54	. . . UNIT ASSY, (AIR CONDITIONING ONLY).	5199	RF
13	11100-1	. . . GUARD, (V72914)	5199	1
14	MS35058-23	. . . SWITCH.	5199	1
	65-58958-99	. MODULE INSTL, ZONE CONTROL (AIR CONDITIONING ONLY).	5199	RF
15	10-60757-142	. . . INDICATOR, ZONE CONTROL (USED ON 65-58958-99)	5199	2
16	M07-15	. . . CAP, LIGHT (V81590)	5199	1
17	1864	. . . BULB, (V08806).	5199	1
	65-58958-100	. . . UNIT ASSY, (AIR CONDITIONING ONLY) (USED ON 65-58958-99)	5199	RF
18	BACC10EL1	. . . CLAMP	5199	2
19	STB131L	. . . BASE, LIGHT (V81590).	5199	1
20	4TL1-7	. . . SWITCH, (V91929).	5199	2
		. FDR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/90

21-05-25T

DETAILED PARTS LIST
21-05-25T
PAGE 1

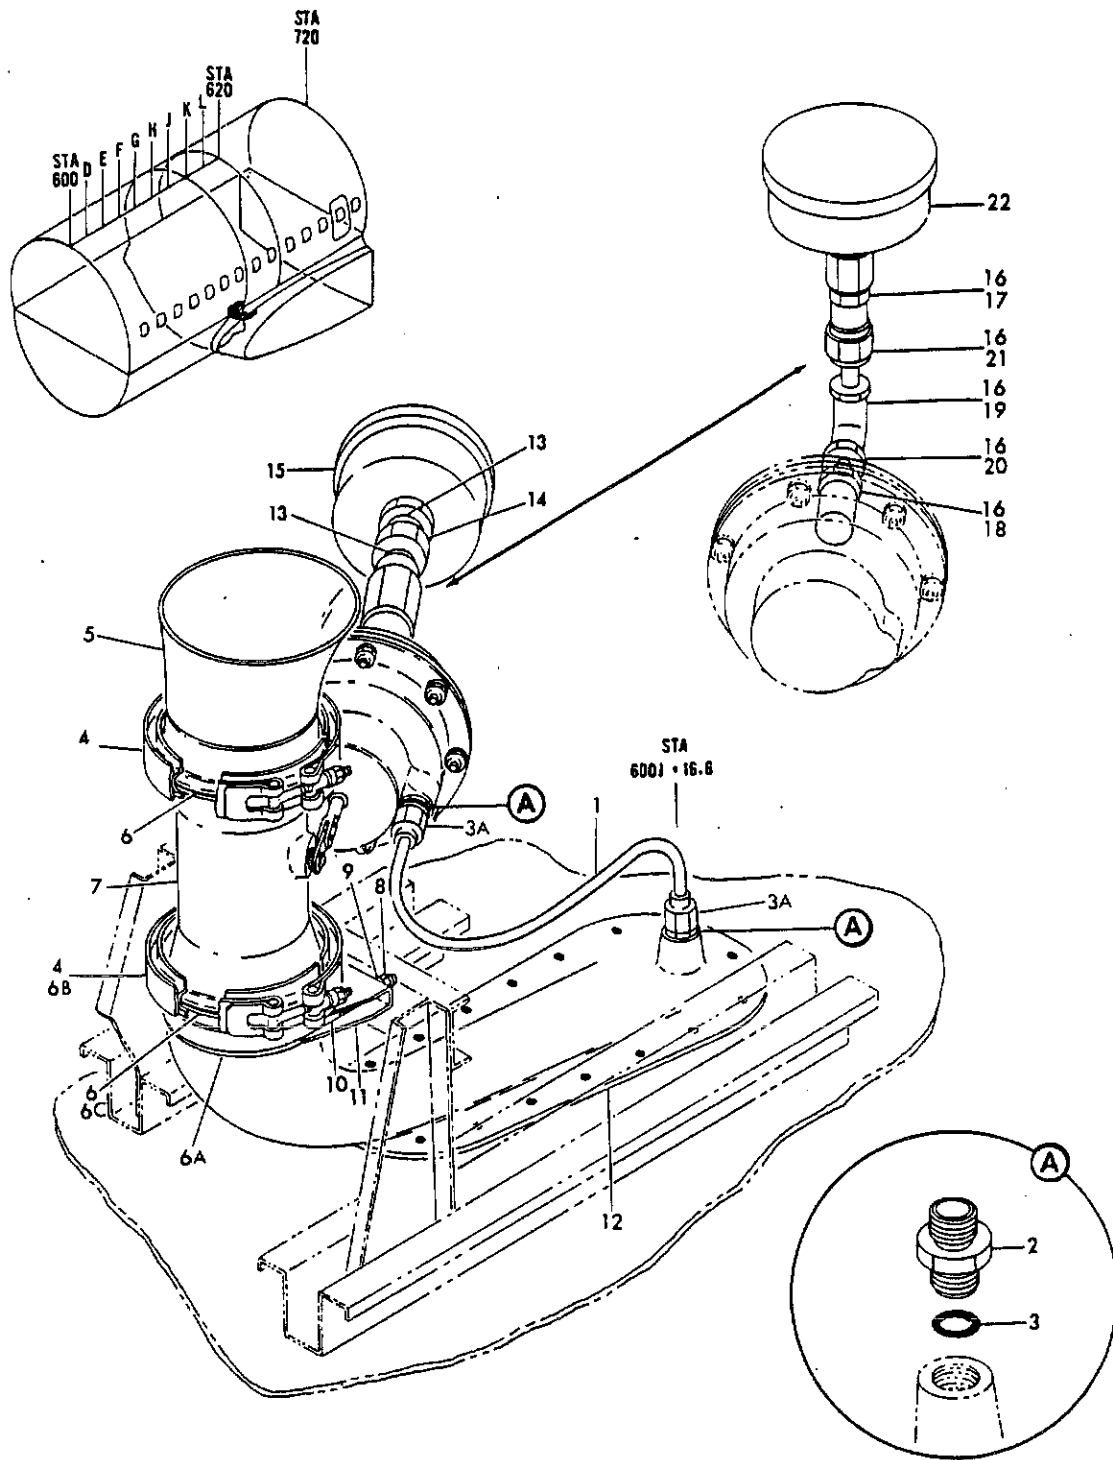


FIGURE 36. VALVE INSTL, STATION 600J AND 16.6 CABIN PRESSURE THRUSH RECOVERY



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
36	65-5257-5		VALVE INSTL, STATION 600J PLUS 16.6 CABIN PRESSURE. . . THRUST RECOVERY (SEE 21-2, FIG. 2, ITEM 14A)		RF
1	65-5257-6		. TUBE ASSY, VENT 1/4 .035 6061-T6.		1
	BACS13AP4		. SLEEVE.		2
	MS21921D4		. NUT		2
2	MS21902D4		. UNION		2
3	MS28778-4		. PACKING		2
4	BACC10AU300		. CLAMP		2
5	69-4278		. INLET ASSY, THRUST RECOVERY UNIT.		1
6	66-3956		. GASKET, THRUST RECOVERY UNIT.		2
7	105798-1		. VALVE ASSY, PNEUMATIC SHUTOFF (V99193). (OPTIONAL TO AND REPLACEMENT FOR 105798 (V99193))		1
7	105798		. VALVE ASSY, PNEUMATIC SHUTOFF (V99193). (OPTIONAL AND FOR REPLACEMENT ORDER 105798-1 (V99193))		1
8	NAS679A3W		. NUT		2
9	AN960D10L		. WASHER.		2
10	BACC10Y50-8S		. CLAMP		1
11	BACC10X50D		. CLAMP		1
12	65-5648-4		. PEDESTAL, THRUST RECOVERY UNIT. (OPTIONAL TO AND REPLACEMENT FOR 65-5648)	0150	1
12	65-5648		. PEDESTAL, THRUST RECOVERY UNIT. (OPTIONAL AND FOR REPLACEMENT ORDER 65-5648-4)	0150	1
12	65-5648-4		. PEDESTAL, THRUST RECOVERY UNIT. ATTACHING PARTS	5199	1
	NAS514-1032-10		. SCREW		16
	BACW10T10L		. WASHER.		16
	NAS679A3W		. NUT		16
			-----*		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

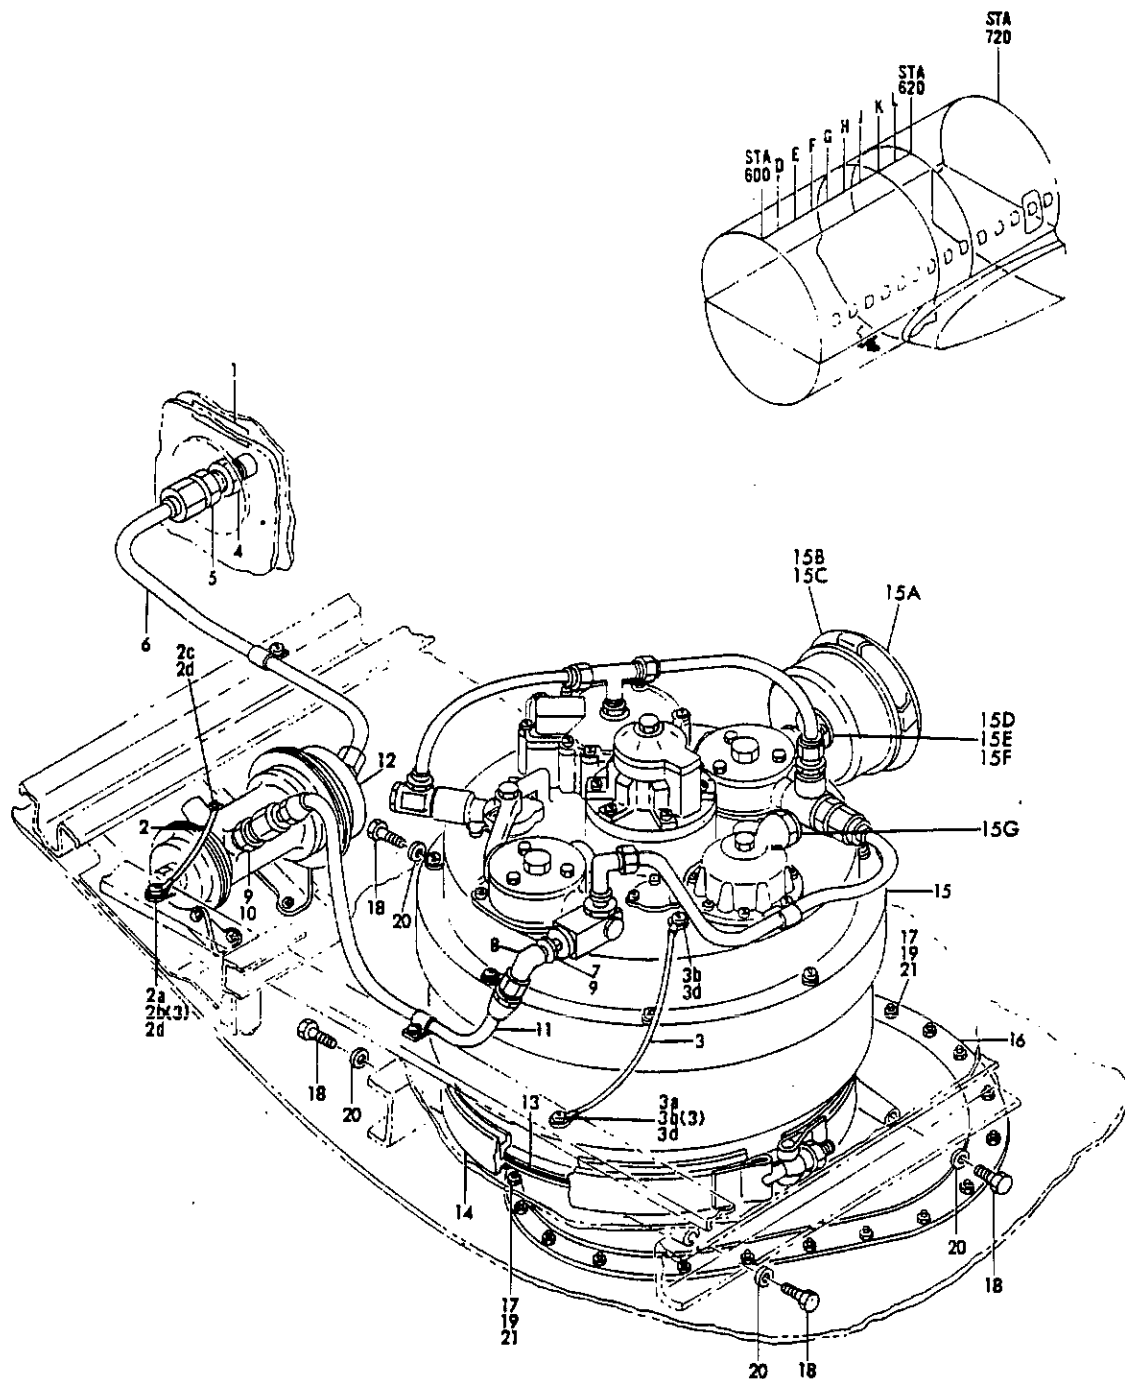


FIGURE 37A. VALVE INSTL, STATION 600K CABIN PRESSURIZATION OUTFLOW



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
37A	65-59904-1		VALVE INSTL, STATION 600K CABIN PRESSURIZATION OUTFLOW (SEE 21-2, FIG. 2, ITEM 16A)		RF
1	BACM10L2AT		. MARKER-ALUMINUM FOIL, AMBIENT STATIC SENSING LINE . .		1
2	BACJ40A20-6		. JUMPER ASSY		1
			ATTACHING PARTS		
2A	NAS603-8P		. SCREW		1
2B	AN960D10L		. WASHER		3
2C	AN960PD10L		. WASHER		1
2D	NAS679A3W		. NUT		2
			-----*		
3	BACJ40A20-9		. JUMPER ASSY		1
			ATTACHING PARTS		
3A	NAS603-6P		. SCREW		1
3B	AN960D10L		. WASHER		4
3D	NAS679A3W		. NUT		2
			-----*		
4	AN924-6D		. NUT		1
5	MS21924D6		. UNION		1
6	65-59904-2		. TUBE ASSY		1
	MS21921-6D		. . NUT		2
	MS21922-6		. . SLEEVE		2
7	AN924-5D		. NUT		1
8	BACE21AS0506D		. ELBOW		1
9	MS28778-5		. PACKING		2
10	MS21916D6-5		. REDUCER		1
11	40835-101-0190		. HOSE, BLEED (V01547) (OPTIONAL TO BACH5P0190ZZ)		1
11	BACH5P0190ZZ		. HOSE, FLEXIBLE (OPTIONAL 40835-101-0190 (V01547))		1
12	10-61412-5		. PUMP, VACUUM		1
			ATTACHING PARTS		
	NAS603-14P		. SCREW		4
	AN960PD10L		. WASHER		4
			-----*		
13	66-2616		. PACKING (OPTIONAL 66-2616-1 AND -2)		1
13	66-2616-1		. PACKING (OPTIONAL TO 66-2616)		1
13	66-2616-2		. PACKING (OPTIONAL TO 66-2616)		1
14	4371-920S		. CLAMP, V-BAND (V98625)		1
15	10-61412-10		. VALVE, OUTFLOW (SAME AS 103430-2 (V70210))	0150	1
15	103430-2		. VALVE, OUTFLOW (V70210) (SAME AS BAC SPEC. NO. 10-61412-10) (FOR ELEMENT REPLACEMENT PROCURE KIT NO. 65-90305-55, SEE FILTER MAINTENANCE KIT LISTING IN INTRODUCTION)	0150	RF
15	10-61412-10		. VALVE, OUTFLOW (SAME AS 103430-2 (V70210)) (DELETED BY AIRESEARCH SB 21-2178)	5199	1
15	103430-2		. VALVE, OUTFLOW (V70210) (SAME AS BAC SPEC. NO. 10-61412-10) (FOR ELEMENT REPLACEMENT PROCURE KIT NO. 65-90305-55, SEE FILTER MAINTENANCE KIT LISTING IN INTRODUCTION) (DELETED BY AIRESEARCH SB 21-2178)	5199	RF
15	103430-3		. VALVE, OUTFLOW (V70210) (ADDED BY AIRESEARCH. SB 21-2178)	5199	1
M 15A	138029		. . COVER, FILTER ELEMENT (V70210)		1
M 15B	139348-1		. . FILTER ASSEMBLY, AIR (V70210)		1
M 15C	137847-1		. . CARTRIDGE, (V40912)		1
M 15D	S9029E904		. . PACKING, PREFORMED (V70210)		1
M 15E	MS21916D6-4		. . REDUCER		1
M 15F	NAS159BC9N		. . WASHER		1
M 15G	91610-20		. . SCREEN, FILTER BLEED SCREW (V70210)		1
16	65-58663-1		. PEDESTAL		1
			ATTACHING PARTS		
17	NAS514P1032-8		. SCREW		27
18	AN4H3A		. BOLT		4
19	AN960PD10L		. WASHER		27
20	AN960-416L		. WASHER		4
21	NAS679A3W		. NUT		27
			-----*		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

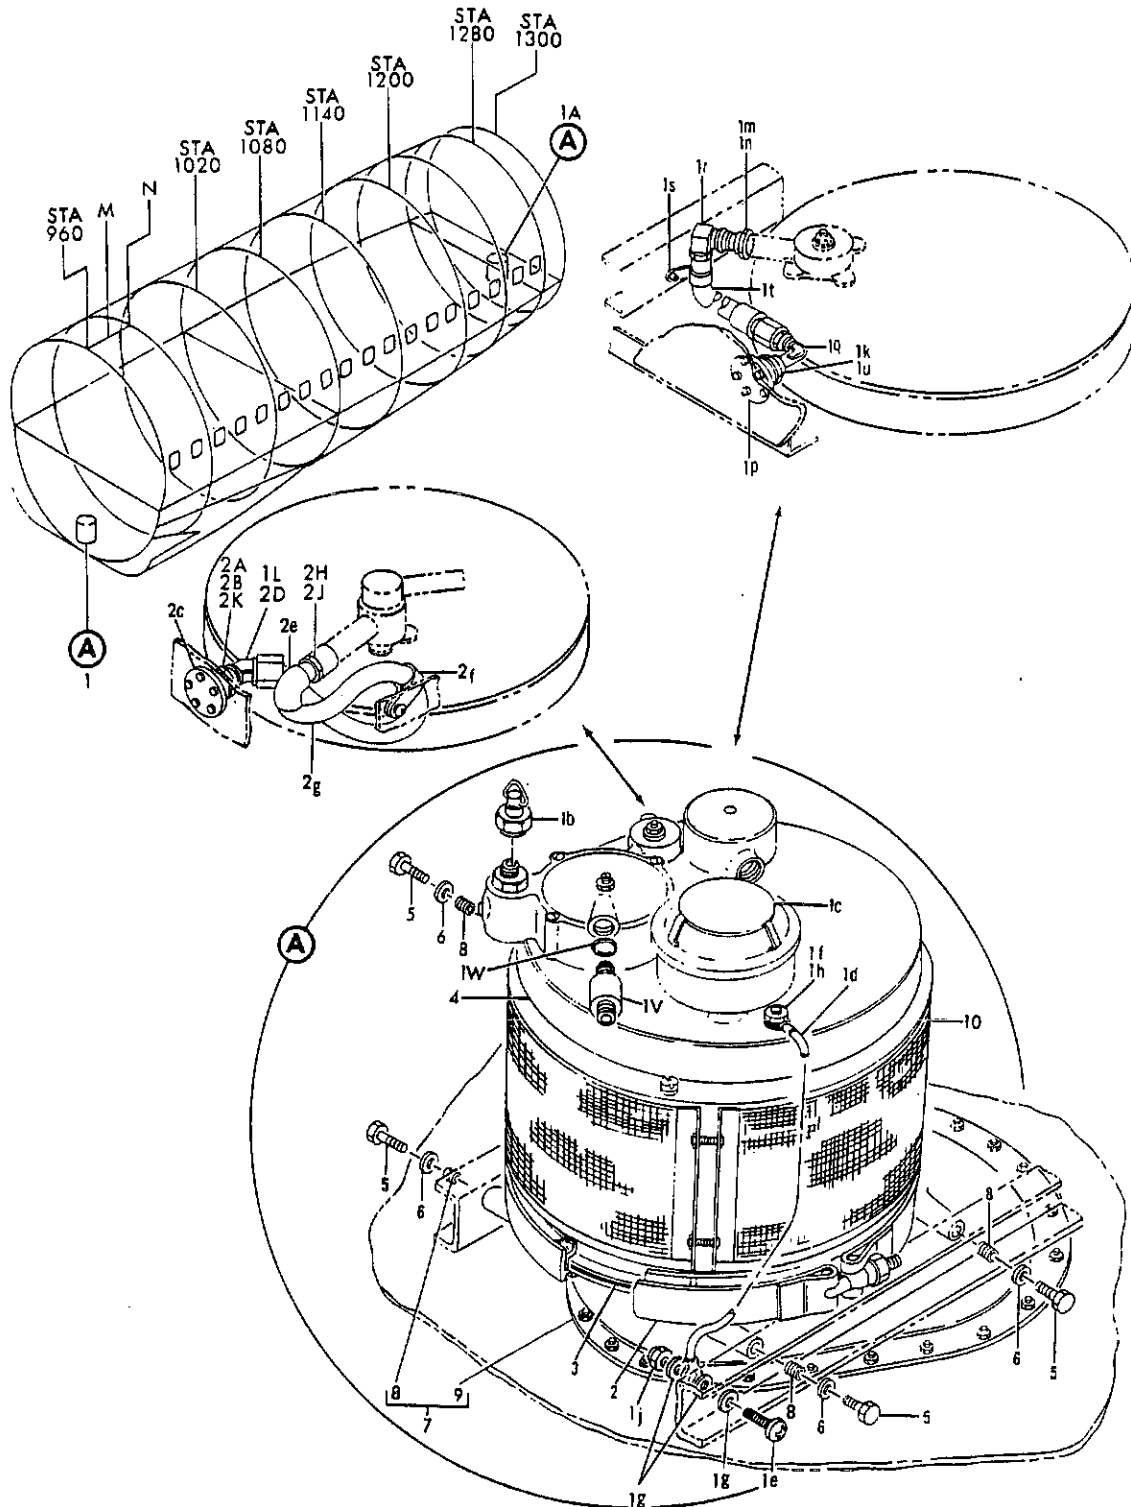


FIGURE 38. VALVE INSTL. STATION 960 TO 1300 CABIN PRESSURIZATION OUTFLOW



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
38	1	65-7424-3		RF
	1B	BACC14H8LD		1
	1V	137037		1
	1W	MS28778-6		1
	2	4371-920S		1
	2A	MS28778-6		1
	2B	AN924-6D		1
	2C	BACF22J6D		1
		AN470D4		5
	2D	MS21907D6		1
	2E	BACE21AS0406D		1
	2F	BACC10DK10		1
		NAS603-8P		1
		NAS679A3W		1
	2G	40835-101-0145		1
	2H	AN924-4D		1
	2J	MS28778-4		1
	3	66-2616		1
	3	66-2616-2		1
	3	66-2616-1		1
	4	10-3272-23		1
	5	AN4H3A		4
	6	AN960-416L		4
	7	65-58663-1	0150	1
	7	69-45663-1	0150	1
	7	65-58663-1	5199	1
		NAS514P1032-10		27
		NAS1197-10L		27
		NAS679A3W		27
	8	BACSP4C4		4
	8	MS21208F4-20		4
	9	65-1373-1		1
	9	65-58663-2	5199	1
	10	139617-1		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

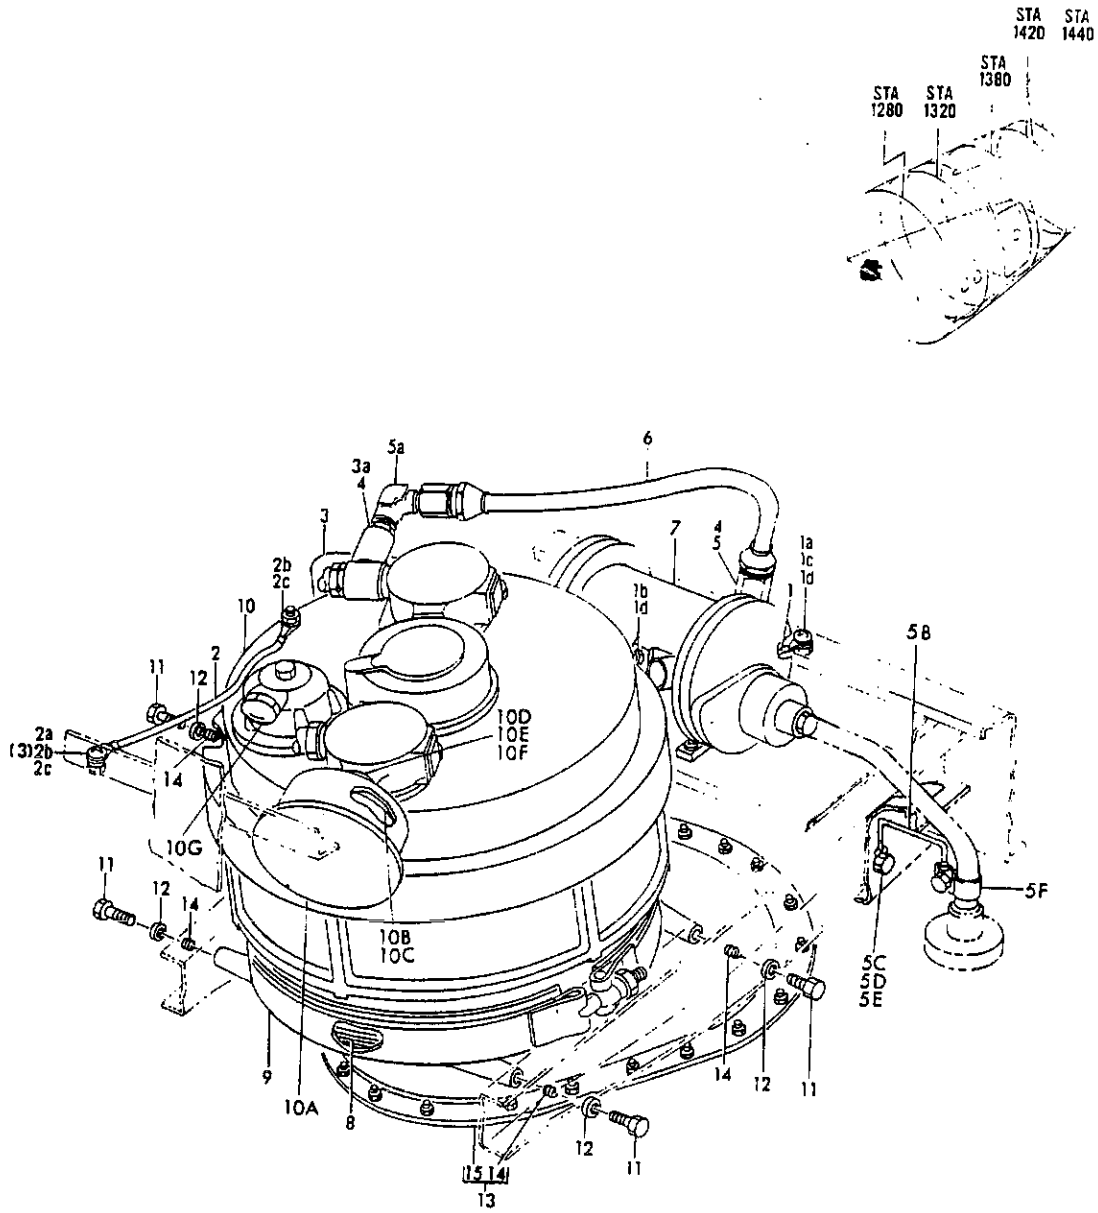


FIGURE 38A. VALVE INSTL, STATION 1300 CABIN PRESSURIZATION OUTFLOW



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
38A	65-59903-1	VALVE INSTL, STATION 1300 CABIN PRESSURIZATION OUTFLOW (SEE 21-2, FIG. 3, ITEM 14)		RF
1	BACJ40A20-7	. JUMPER ASSY		1
		. ATTACHING PARTS		
1A	NAS603-8P	. SCREW		1
1B	AN960PD10L	. WASHER.		1
1C	AN960D10L	. WASHER.		1
1D	NAS679A3W	. NUT		2
		-----*		
2	MS25083-2BB4	. JUMPER ASSY		1
		. ATTACHING PARTS		
2A	NAS603-8P	. SCREW		1
2B	AN960D10L	. WASHER.		4
2C	NAS679A3W	. NUT		2
		-----*		
3	65-59903-3	. TUBE ASSY, VENT 3/8 IN. .02B 6061-T6.		1
	MS21922-6	. SLEEVE.		2
	MS21921-6D	. NUT		1
3A	AN924-5D	. NUT		1
4	MS28778-5	. PACKING		2
5	MS21916D6-5	. REDUCER		1
5A	BACE21AS0506D	. ELBOW		1
6	40835-101-0190	. HOSE, BLEED (V01547). (OPTIONAL TO BACH5P0190ZZ)		1
6	BACH5P0190ZZ	. HOSE, FLEXIBLE. (OPTIONAL 4085-101-0190 (V01547))		1
7	10-61412-5	. PUMP, VACUUM.		1
		. ATTACHING PARTS		
	NAS1103-4	. SCREW		4
	AN960D10	. WASHER.		4
		-----*		
8	66-2616	. GASKET. (OPTIONALS 66-2616-1 AND -2)		1
8	66-2616-1	. GASKET. (OPTIONAL TO 66-2616)		1
8	66-2616-2	. GASKET. (OPTIONAL TO 66-2616)		1
9	4371-920S	. CLAMP, V-BAND (V98625).		1
10	10-61412-10	. VALVE, OUTFLOW (SAME AS 103430-2 (V70210)).	0150	1
10	10-61412-10	. VALVE, OUTFLOW (SAME AS 103420-2 (V70210)). (DELETED BY AIRESEARCH SB 21-2178)	5199	1
10	103430-2	. VALVE, OUTFLOW (V70210) (SAME AS BAC SPEC. NO. 10-61412-10) (FOR ELEMENT REPLACEMENT PROCURE KIT NO. 65-90305-55, SEE FILTER KIT MAINTENANCE KIT LISTING IN INTRODUCTION)	0150	RF
10	103430-2	. VALVE, OUTFLOW (V70210) (SAME AS BAC SPEC. NO. 10-61412-10) (FOR ELEMENT REPLACEMENT PROCURE KIT NO. 65-90305-55, SEE FILTER KIT MAINTENANCE KIT LISTING IN INTRODUCTION) (DELETED BY AIRESEARCH SB 21-2178)	5199	RF
10	103430-3	. VALVE, OUTFLOW (V70210) (ADDED BY AIRESEARCH. SB 21-2178)	5199	1
M 10A	138029	. COVER, FILTER ELEMENT (V70210).		1
M 10B	13934B-1	. FILTER ASSEMBLY, AIR (V70210)		1
M 10C	137847-1	. CARTRIDGE, (V40912)		1
M 10D	S9029E904	. PACKING, PREFORMED (V70210)		1
M 10E	MS21916D6-4	. REDUCER		1
M 10F	NAS1598C9N	. WASHER.		1
M 10G	91610-20	. SCREEN, FILTER BLEED SCREW (V70210)		1
11	AN4H3A	. BOLT.		4
12	AN960-416L	. WASHER.		4
13	65-58663-1	. PEDESTAL ASSY		1
		. ATTACHING PARTS		
	NAS514P1032-8	. SCREW		27
	NAS1197-10L	. WASHER.		27
	NAS679A3W	. NUT		27
		-----*		
14	MS21208F4-20	. INSERT.		4
15	65-58663-2	. PEDESTAL.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

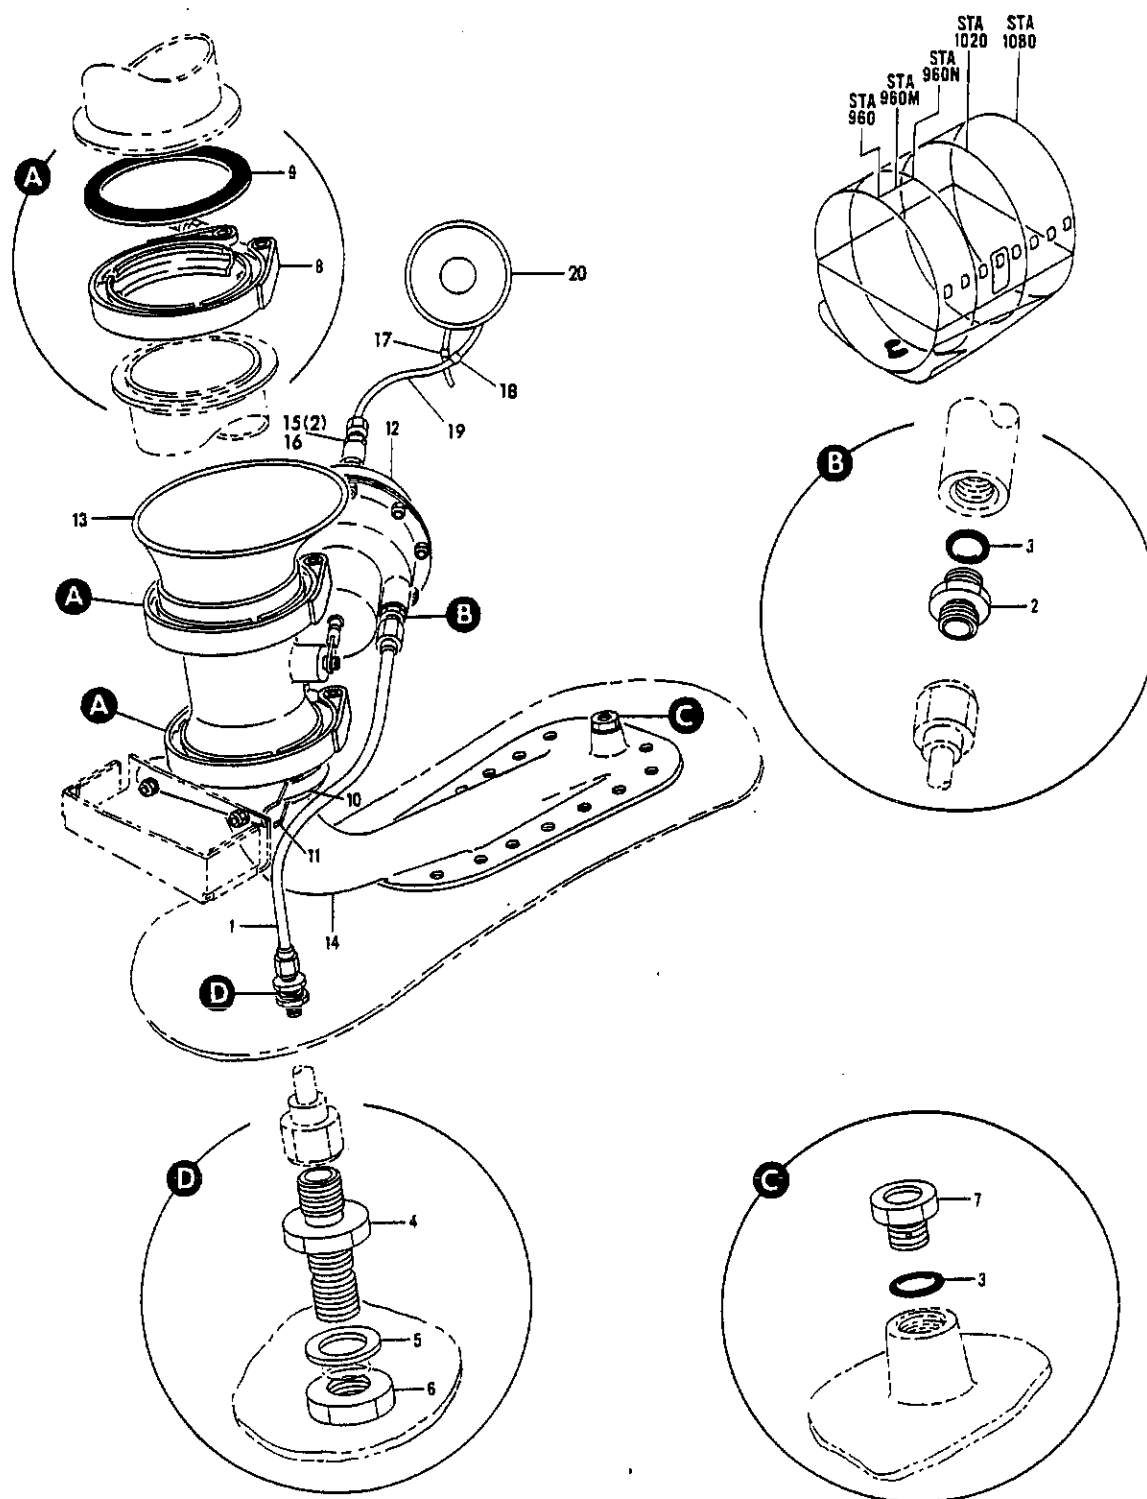


FIGURE 39. VALVE INSTL. STATION 960 CABIN PRESSURE THRUST RECOVERY



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
39	65-7426		VALVE INSTL, STATION 960 CABIN PRESSURE THRUST RECOVERY (SEE 21-2, FIG. 3, ITEM 12)		RF
1	65-7426-2		. TUBE ASSY, VENT 1/4 .035 5052-0		1
	MS21922-4		. . SLEEVE.		2
	MS21921D4		. . NUT		2
2	MS21902D4		. UNION		1
3	AN6290-4		. PACKING		2
4	MS21924D4		. UNION		1
5	AN960D716		. WASHER.		1
6	AN924-4D		. NUT		1
7	AN814D4		. PLUG AND BLEEDER.		1
8	BACC10AU300		. CLAMP		2
9	66-3956		. GASKET, THRUST RECOVERY UNIT.		2
10	BACC10Y50-BS		. CLAMP		1
			ATTACHING PARTS		
	AN960D10L		. WASHER.		2
	NAS679A3W		. NUT		2
			-----*		
11	BACC10X50D		. CLAMP		1
12	105798-1		. VALVE ASSY, PNEUMATIC SHUTOFF (V99193). (OPTIONAL TO AND REPLACEMENT FOR 105798 (V99193))		1
12	105798		. VALVE ASSY, PNEUMATIC SHUTOFF (V99193). (OPTIONAL AND FOR REPLACEMENT ORDER 105798-1 (V99193))		1
13	69-4278		. INLET ASSY, THRUST RECOVERY UNIT.		1
14	65-5648-4		. PEDESTAL, THRUST RECOVERY UNIT. (OPTIONAL TO AND REPLACEMENT FOR 65-5648)	0150	1
14	65-5648		. PEDESTAL, THRUST RECOVERY UNIT. (OPTIONAL AND FOR REPLACEMENT ORDER 65-5648-4)	0150	1
14	65-5648-4		. PEDESTAL, THRUST RECOVERY UNIT.	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

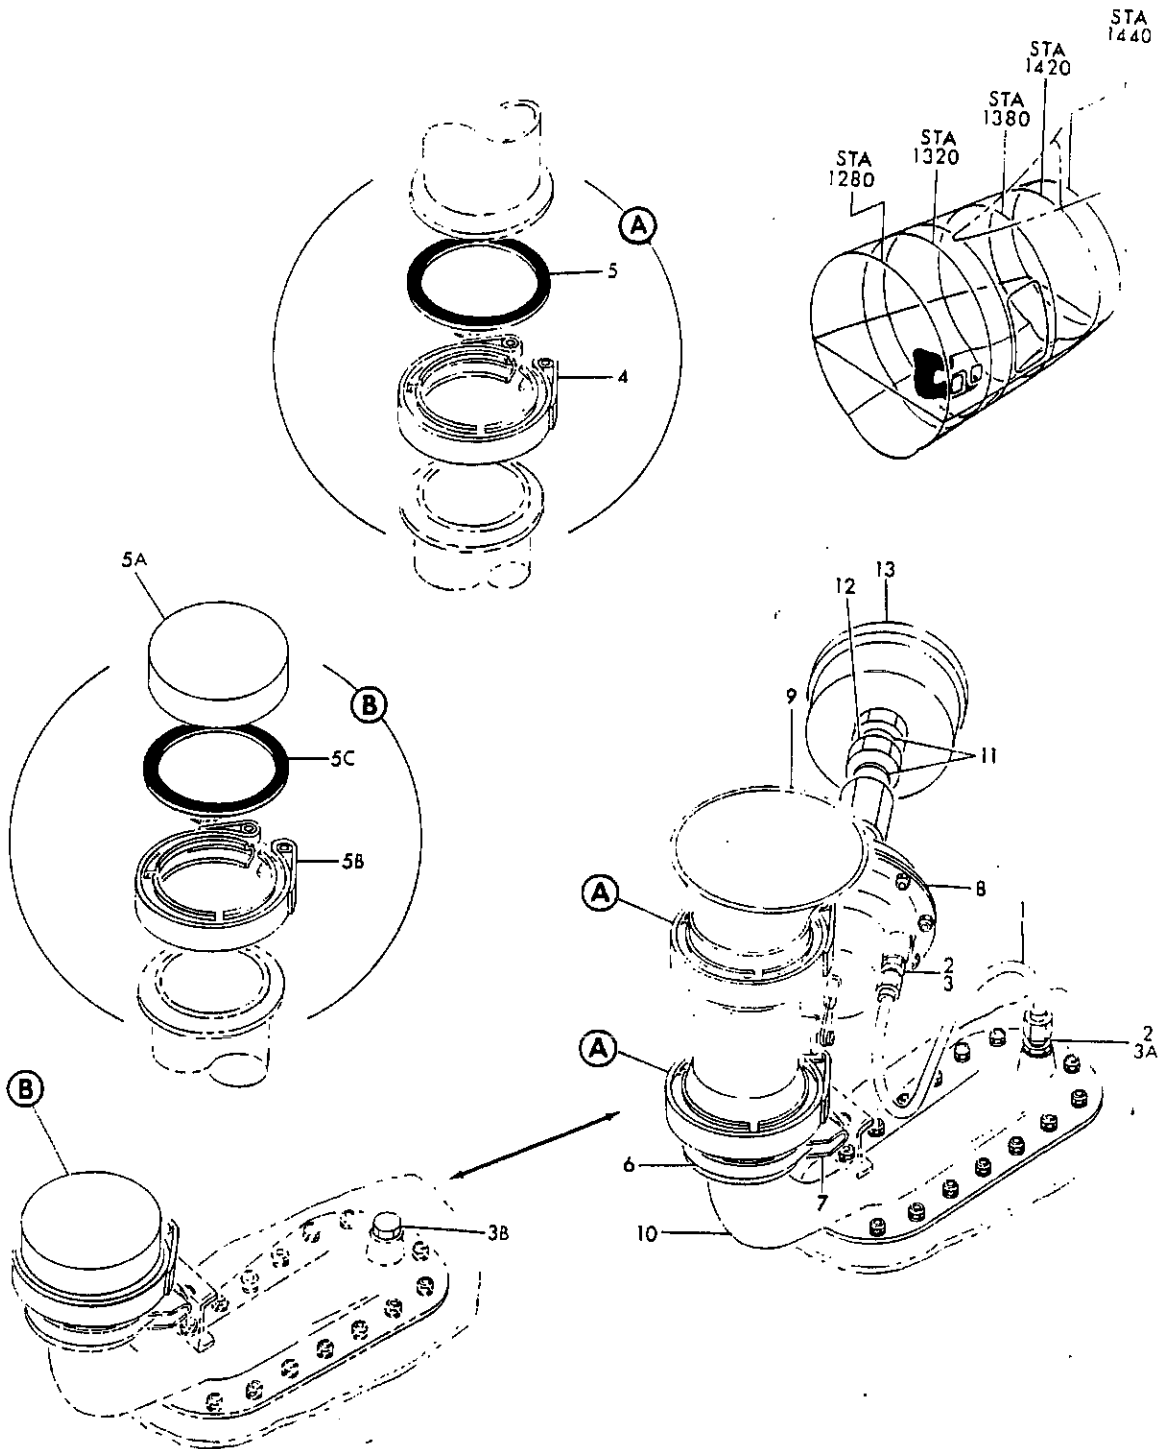


FIGURE 40. AIR CONDITIONING, CONTROL SYSTEM

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
40	65-5259	VALVE INSTL, STATION 1337.70 CABIN PRESSURE THRUST. . .								RF
		RECOVERY (SEE 21-2, FIG. 3, ITEM 15)								
1	65-5259-1	. TUBE ASSY, VENT 1/4 .035 5052-D								1
	MS21922-4	. . SLEEVE.								2
	MS21921D4	. . NUT								2
2	MS21902D4	. UNION								2
3	AN6290-4	. PACKING								1
3A	MS28778-4	. PACKING								1
4	BACC10AU300	. CLAMP								2
5	66-3956	. GASKET, THRUST RECOVERY UNIT.								2
6	BACC10Y50-8S	. CLAMP								1
		ATTACHING PARTS								
	AN960D10L	. WASHER.								2
	NAS679A3W	. NUT								2
		-----*								
7	BACC10X50D	. CLAMP								1
8	105798-1	. VALVE ASSY, PNEUMATIC SHUTOFF (V99193).								1
		(OPTIONAL 105798 (V99193))								
8	105798	. VALVE ASSY, PNEUMATIC SHUTOFF (V99193).								1
		(OPTIONAL TO 105798-1 (V99193))								
9	69-4278	. INLET ASSY, THRUST RECOVERY UNIT.								1
10	65-5648	. PEDESTAL, THRUST RECOVERY UNIT.								1
		ATTACHING PARTS								
	NAS514P1032-10	. SCREW								16
	BACW10T10L	. WASHER.								16
	NAS679A3W	. NUT								16
		-----*								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

RAF
NOV 21/90

21-05-40

DETAILED PARTS LIST
21-05-40
PAGE 1

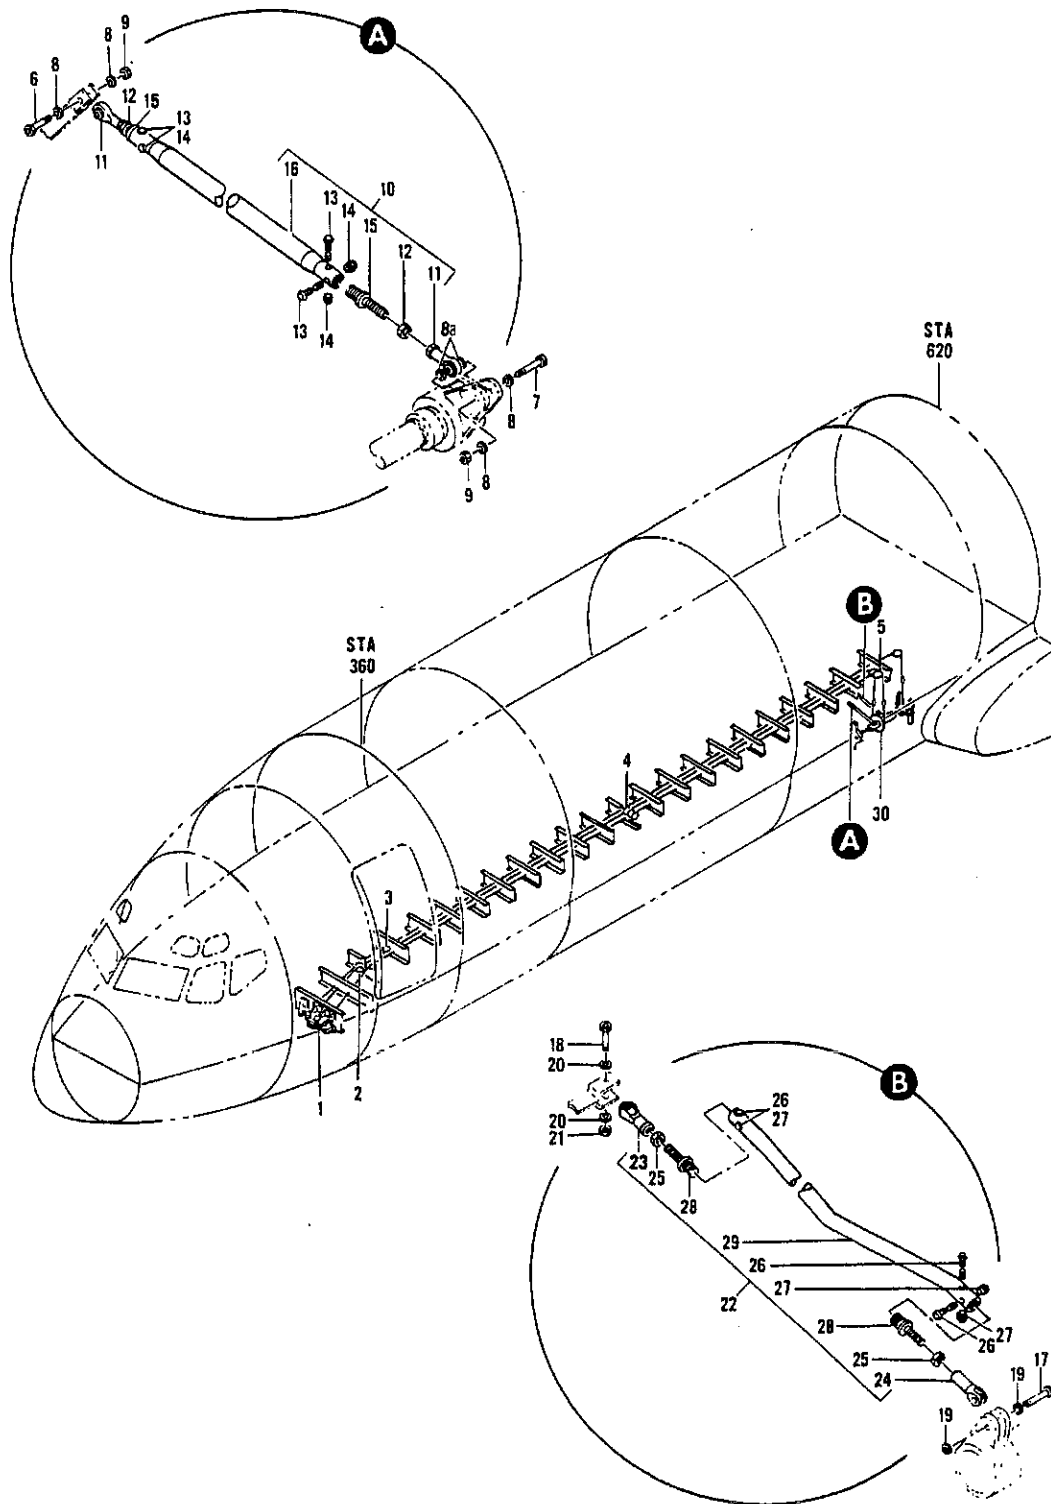


FIGURE 43. OVERRIDE INSTL, MAIN CABIN TEMPERATURE CONTROL VALVE MANUAL

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
43	65-18300-1		OVERRIDE INSTL, MAIN CABIN TEMPERATURE CONTROL VALVE. . MANUAL (SEE 21-2, FIG. 2, ITEM 20A)		RF
1	65-18301-1		. CONTROL AND DECLUTCH INSTL, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE . . AIR CONDITIONING, (SEE FIG. 46)		1
2	65-18308-1		. . REQUIRED PLACARDS, (SEE 11-2, FIG. 8)		1
3	65-18308-2		. PULLEY INSTL, STATION 328 CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE TURNING (SEE FIG. 49)		1
4	65-18311-1		. PULLEY INSTL, STATION 344 CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE TURNING (SEE FIG. 50)		1
5	65-18312-1		. PULLEY INSTL, TEMPERATURE CONTROL VALVE MANUAL. . . . OVERRIDE IDLER (SEE FIG. 51)		1
6	NAS1104-15DW		. PULLEY INSTL, STATION 600H TO 600K CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE TURNING (SEE FIG. 52)		1
7	NAS1104-17DW		. BOLT.		1
8	AN960PD416		. BOLT.		4
8A	BACW10P142AL		. WASHER.		2
9	AN320-4		. WASHER.		2
10	65-18321-1		. NUT		1
11	BACB10A180		. TUBE ASSY, CABIN TEMPERATURE CONTROL VALVE MANUAL . . OVERRIDE CONTROL		2
12	AN316-5		. . BEARING		2
13	BACB30AL5E12		. . NUT		4
14	NAS1080D5		. . BOLT.		4
15	69-15761-1		. . COLLAR.		2
16	65-18321-2		. . ROD END, CONTROL TUBE		1
17	MS20392-4-31		. . TUBE, CABIN TEMPERATURE CONTROL VALVE MANUAL. . . . OVERRIDE CONTROL		1
18	NAS1104-15DW		. PIN		1
19	NAS1197-516L		. BOLT.		2
20	AN960PD416		. WASHER.		2
21	AN320-4		. WASHER.		1
22	65-18322-1		. NUT		1
23	BACB10A180		. TUBE ASSY, CABIN TEMPERATURE CONTROL VALVE MANUAL . . OVERRIDE DECLUTCH		1
24	AN665-46R		. . BEARING		1
25	NAS509-5		. . TERMINAL.		2
26	BACB30AL5E12		. . NUT		4
27	NAS1080D5		. . BOLT.		4
28	69-15761-1		. . COLLAR.		2
29	65-18322-2		. . ROD END, CONTROL TUBE		1
30	65-18315-1		. . TUBE, CABIN TEMPERATURE CONTROL VALVE MANUAL. . . . OVERRIDE DECLUTCH . SHAFT INSTL, CABIN TEMPERATURE VALVE MANUAL OVERRIDE STATIONARY (SEE FIG. 53)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

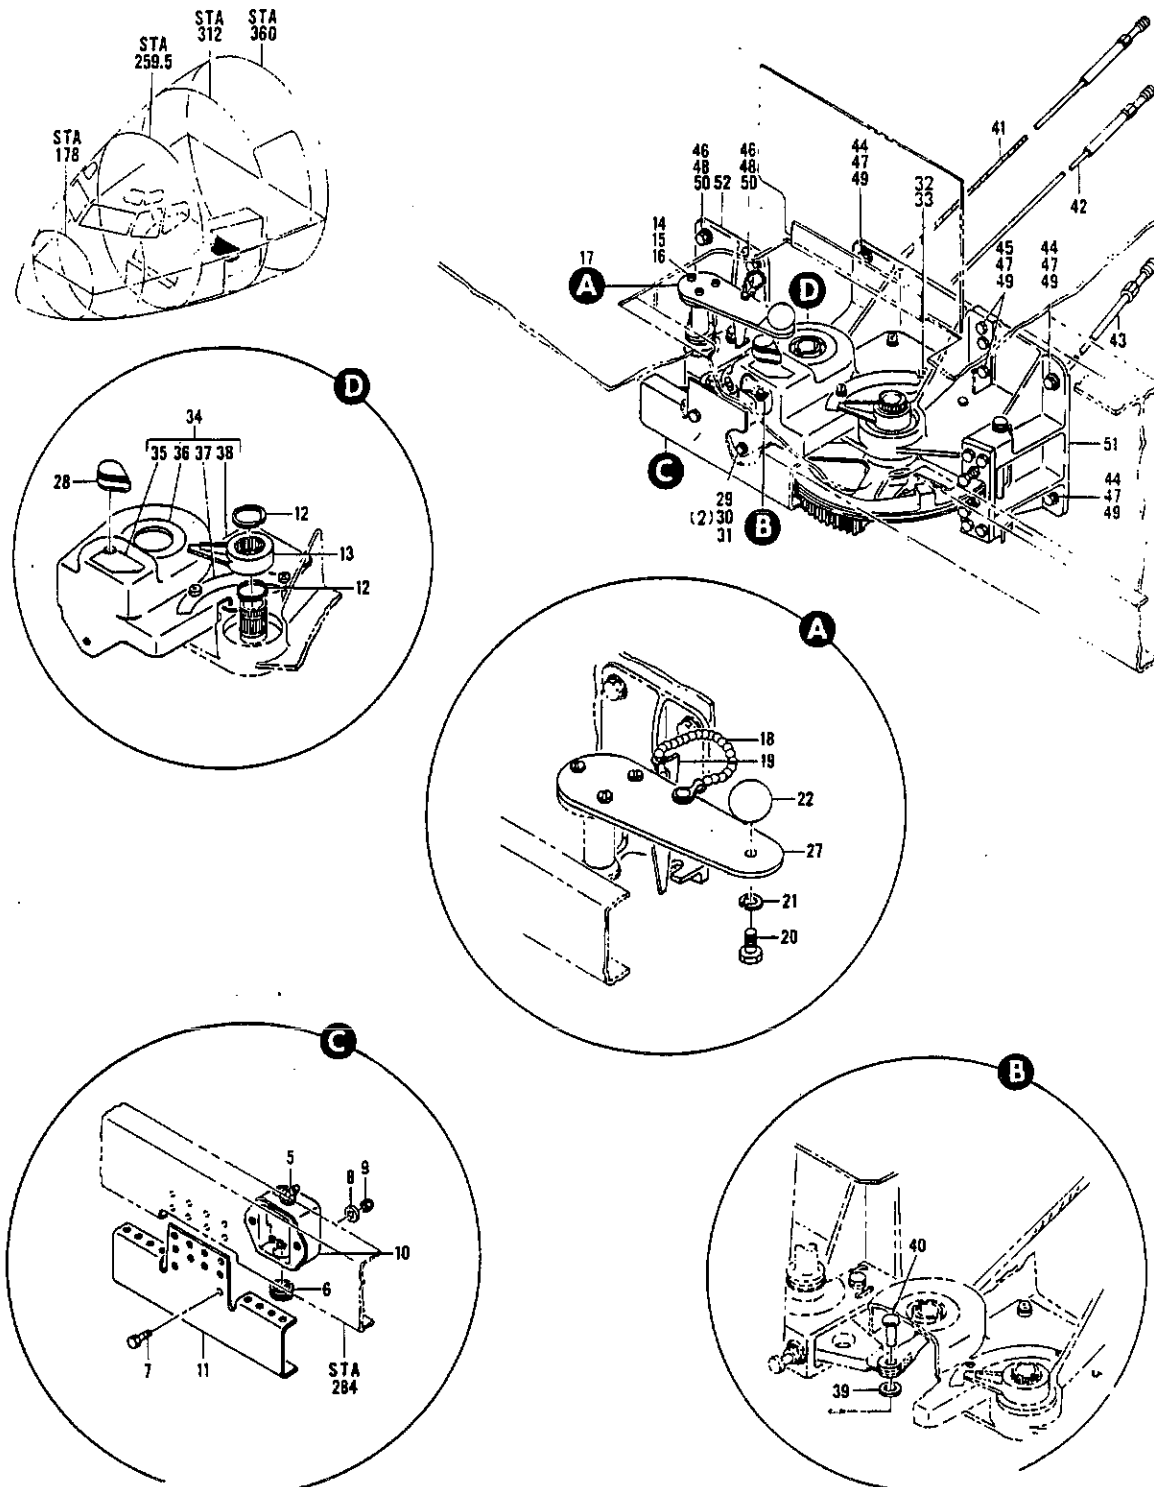


FIGURE 46. CONTROL AND DECLUTCH INSTL, CABIN TEMPERATURE
CONTROL VALVE MANUAL OVERRIDE (AIR CONDITIONING ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
46	65-18301-1	CONTROL AND DECLUTCH INSTL, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE (AIR CONDITIONING ONLY) (SEE FIG. 43, ITEM 1)		RF
5	MS25126J4	. SWITCH.		1
6	NAS557-6A	. GROMMET		1
7	AN3-4A	. BOLT.		2
8	AN960PD10	. WASHER.		2
9	NAS679A3W	. NUT		2
10	66-1502	. BOX, SWITCH		1
11	69-13372-2	. BRACKET, ACTUATOR SWITCH.		1
12	NAS670-100	. RING.		2
13	69-13373-1	. INDICATOR ASSY, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE POSITION		1
14	AN525-832-11	. SCREW		3
15	AN960PD8	. WASHER.		3
16	NAS679A08W	. NUT		3
17	69-13375-6	. DECLUTCH ARM AND KEY ASSY, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE		1
18	NAS1201C6A6A	. CHAIN		1
	MS20470B4	. ATTACHING PARTS		
		. RIVET		2
19	69-13375-B	. KEY, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE DECLUTCH		1
20	AN3-3A	. BOLT.		1
21	MS35339-3	. WASHER.		1
22	BACK20A113-3	. KNOB.		1
27	69-13375-7	. ARM, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE DECLUTCH		1
28	65-18301-2	. KNOB, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE CONTROL AND DECLUTCH PLASTIC (ALTERED FROM OP720 (V81872))		1
29	AN3-5A	. BOLT.		1
30	NAS1197-10	. WASHER.		2
31	NAS679A3W	. NUT		1
32	NAS603-7	. SCREW		3
33	MS35337-43	. WASHER.		3
34	65-18323-1	. COVER ASSY, CONTROL BRACKET		1
35	BACM10L1CPM	. MARKER-ALUMINUM FOIL, NORMAL LOCK		1
36	BACM10L1CPL	. MARKER-ALUMINUM FOIL, COOL HEAT		1
37	BACM10L1CPK	. MARKER-ALUMINUM FOIL, COOL HEAT		1
38	65-18323-2	. COVER, CONTROL BRACKET.		1
39	NAS620-10	. WASHER.		1
40	MS20392-2-11	. PIN		1
41	NAS303-24-4605	. CABLE ASSY.		1
	AN669L3RH	. TERMINAL.		1
	AN667-3	. TERMINAL.		1
42	BACC13G468-4583	. CABLE ASSY.		1
43	BACC13G468-4577	. CABLE ASSY.		1
	AN669L4RH	. TERMINAL.		1
	BACT14A4	. TERMINAL.		1
45	NAS1303-9W	. BOLT.		3
46	NAS1304-BW	. BOLT.		2
48	NAS1197-416	. WASHER.		5
50	NAS679A4W	. NUT		2
51	65-18302-1	. BRACKET ASSY, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE CONTROL (SEE FIG. 47)		1
52	65-18306-1	. BRACKET ASSY, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE DECLUTCH (SEE FIG. 48)		1
		. FOR REFERENCE TO OTHER CONTROL AND DECLUTCH DETAILS, SEE NMA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

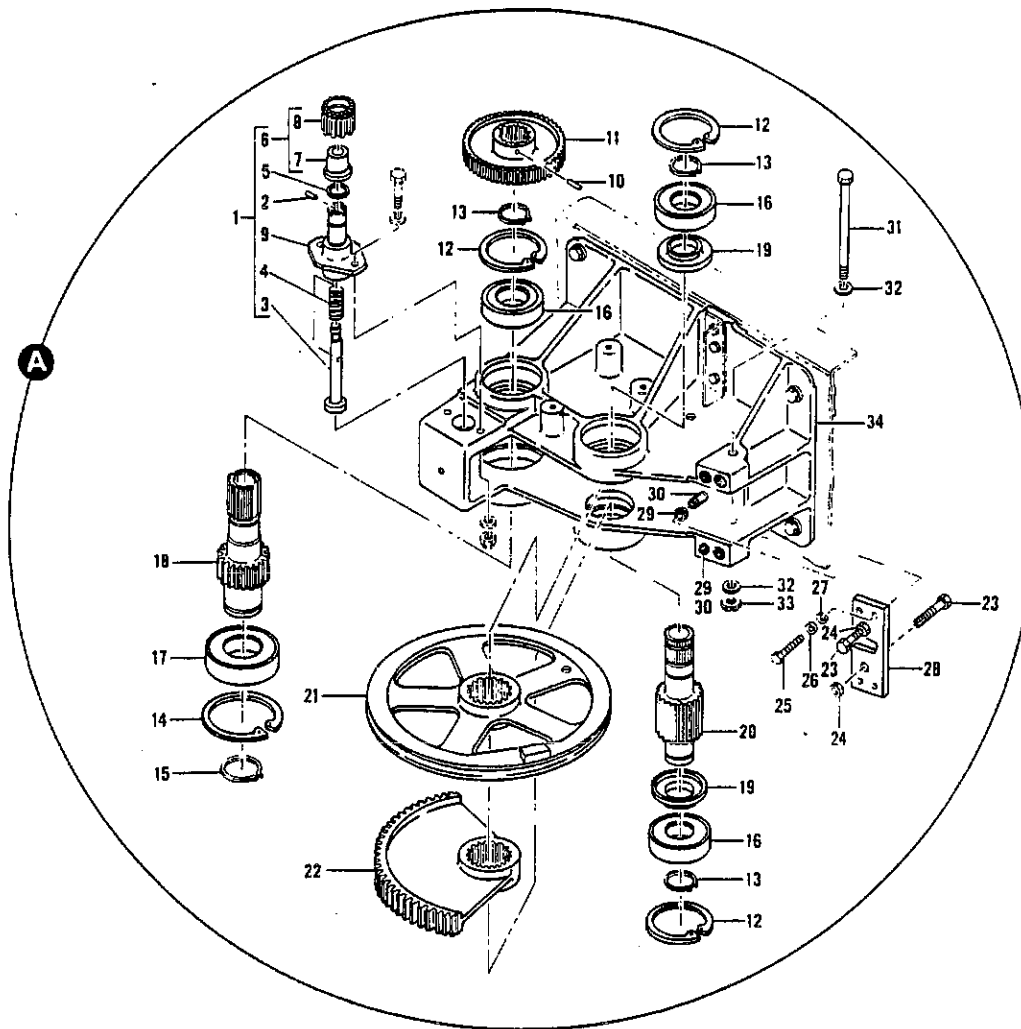
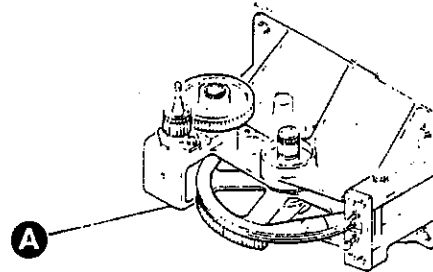
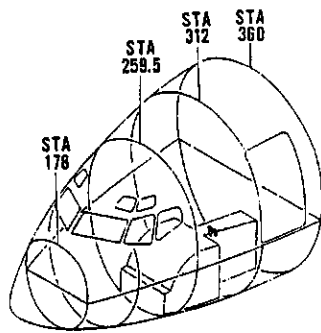


FIGURE 47. BRACKET ASSY, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE CONTROL

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
47	65-18302-1		BRACKET ASSY, CABIN TEMPERATURE CONTROL VALVE MANUAL. . OVERRIDE CONTROL (SEE FIG. 46, ITEM 51)		RF
1	69-15962-1		. LOCK ASSY, CONTROL BRACKET. , ATTACHING PARTS		1
	AN3-10A		. BOLT.		2
	NAS1197-10		. WASHER.		4
	NAS679A3W		. NUT		2
			-----*		
2	NAS561-3-20		. . PIN		1
3	69-15964-1		. . SHAFT, CONTROL BRACKET LOCK LOCKING		1
4	MS24585-219		. . SPRING.		1
5	NAS670-50		. . RING.		1
6	69-15966-1		. . GEAR ASSY, CONTROL BRACKET LOCK PINION.		1
7	69-15966-3		. . . BEARING, (ALTERED FROM BACB10D37F).		1
8	69-15966-2		. . . GEAR, CONTROL BRACKET LOCK PINION		1
9	69-15963-1		. . SHAFT, CONTROL BRACKET LOCK PINION BEARING.		1
10	NAS561-3-18		. PIN		1
11	69-15965-1		. GEAR, CONTROL BRACKET LOCK.		1
12	NAS669-200		. RING.		3
13	NAS670-100		. RING.		3
14	NAS669-244		. RING.		1
15	NAS670-118		. RING.		1
16	BACB10A521		. BEARING		3
17	BACB10A138		. BEARING		1
18	69-13370-1		. SHAFT, MAIN CABIN TEMPERATURE CONTROL VALVE MANUAL. . OVERRIDE PINION		1
19	69-14942-1		. SPACER, CABIN TEMPERATURE CONTROL VALVE MANUAL. . . . OVERRIDE CONTROL BRACKET		2
20	69-13371-1		. SHAFT, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE PULLEY AND SECTOR		1
21	65-18304-1		. PULLEY, CABIN TEMPERATURE CONTROL VALVE MANUAL. . . . OVERRIDE CONTROL		1
22	65-18305-1		. GEAR SECTOR, CABIN TEMPERATURE CONTROL VALVE MANUAL . OVERRIDE		1
23	NAS428H4-12		. BOLT.		2
24	NAS509-4		. NUT		2
25	AN3H6A		. BOLT.		4
26	MS35337-43		. WASHER.		4
27	AN960PD10		. WASHER.		4
28	69-14989-1		. TIE BAR, CABIN TEMPERATURE CONTROL VALVE MANUAL . . . OVERRIDE PULLEY STOP		1
29	BACR12B24		. RING.		4
30	BACS13AR2-7		. SLEEVE.		4
31	AN4-43		. BOLT.		1
32	NAS1197-416		. WASHER.		2
33	AN320-4		. NUT		1
34	65-18303-1		. BRACKET, CABIN TEMPERATURE CONTROL VALVE MANUAL . . . OVERRIDE CONTROL (OPTIONAL 65-18303-3)		1
34	65-18303-3		. BRACKET, CABIN TEMPERATURE CONTROL VALVE MANUAL . . . OVERRIDE CONTROL (OPTIONAL TO 65-18303-1)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					


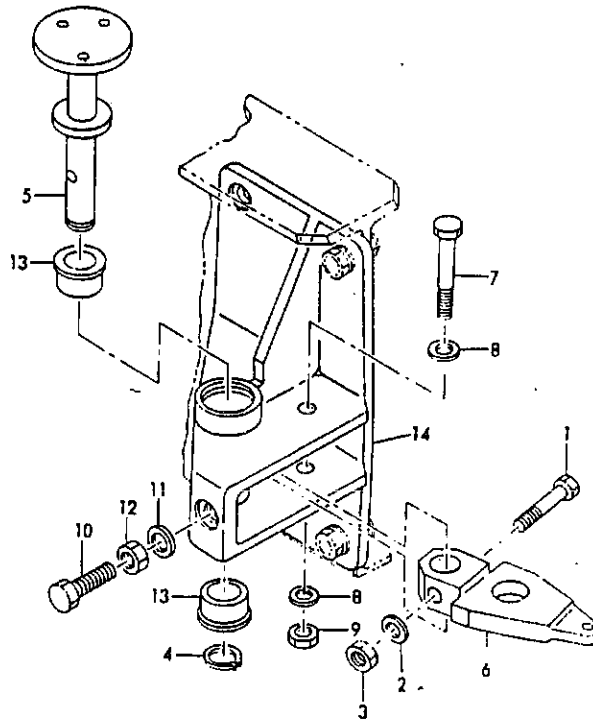


FIGURE 48. BRACKET ASSY, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE DECLUTCH

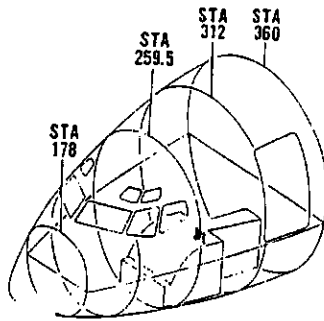

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
48	65-18306-1	BRACKET ASSY, CABIN TEMPERATURE CONTROL VALVE MANUAL. . OVERRIDE DECLUTCH (SEE FIG. 46, ITEM 52)								RF
1	AN3-13	. BOLT.								1
2	AN960PD10	. WASHER.								1
3	AN320-3	. NUT								1
4	NAS670-68	. RING.								1
5	69-13374-1	. SHAFT, CABIN TEMPERATURE CONTROL VALVE MANUAL. . . . OVERRIDE DECLUTCH								1
6	69-14872-1	. BELLCRANK, CABIN TEMPERATURE CONTROL VALVE STATION. . 288.5 MANUAL OVERRIDE DECLUTCH								1
7	AN4-20	. BOLT.								1
8	NAS1197-416	. WASHER.								2
9	AN320-4	. NUT								1
10	NAS428H4-12	. BOLT.								1
11	NAS1197-416	. WASHER.								1
12	NAS509-4	. NUT								1
13	BACB10D58F	. BEARING								2
14	65-18307-1	. BRACKET, CABIN TEMPERATURE CONTROL VALVE MANUAL. . . OVERRIDE DECLUTCH								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

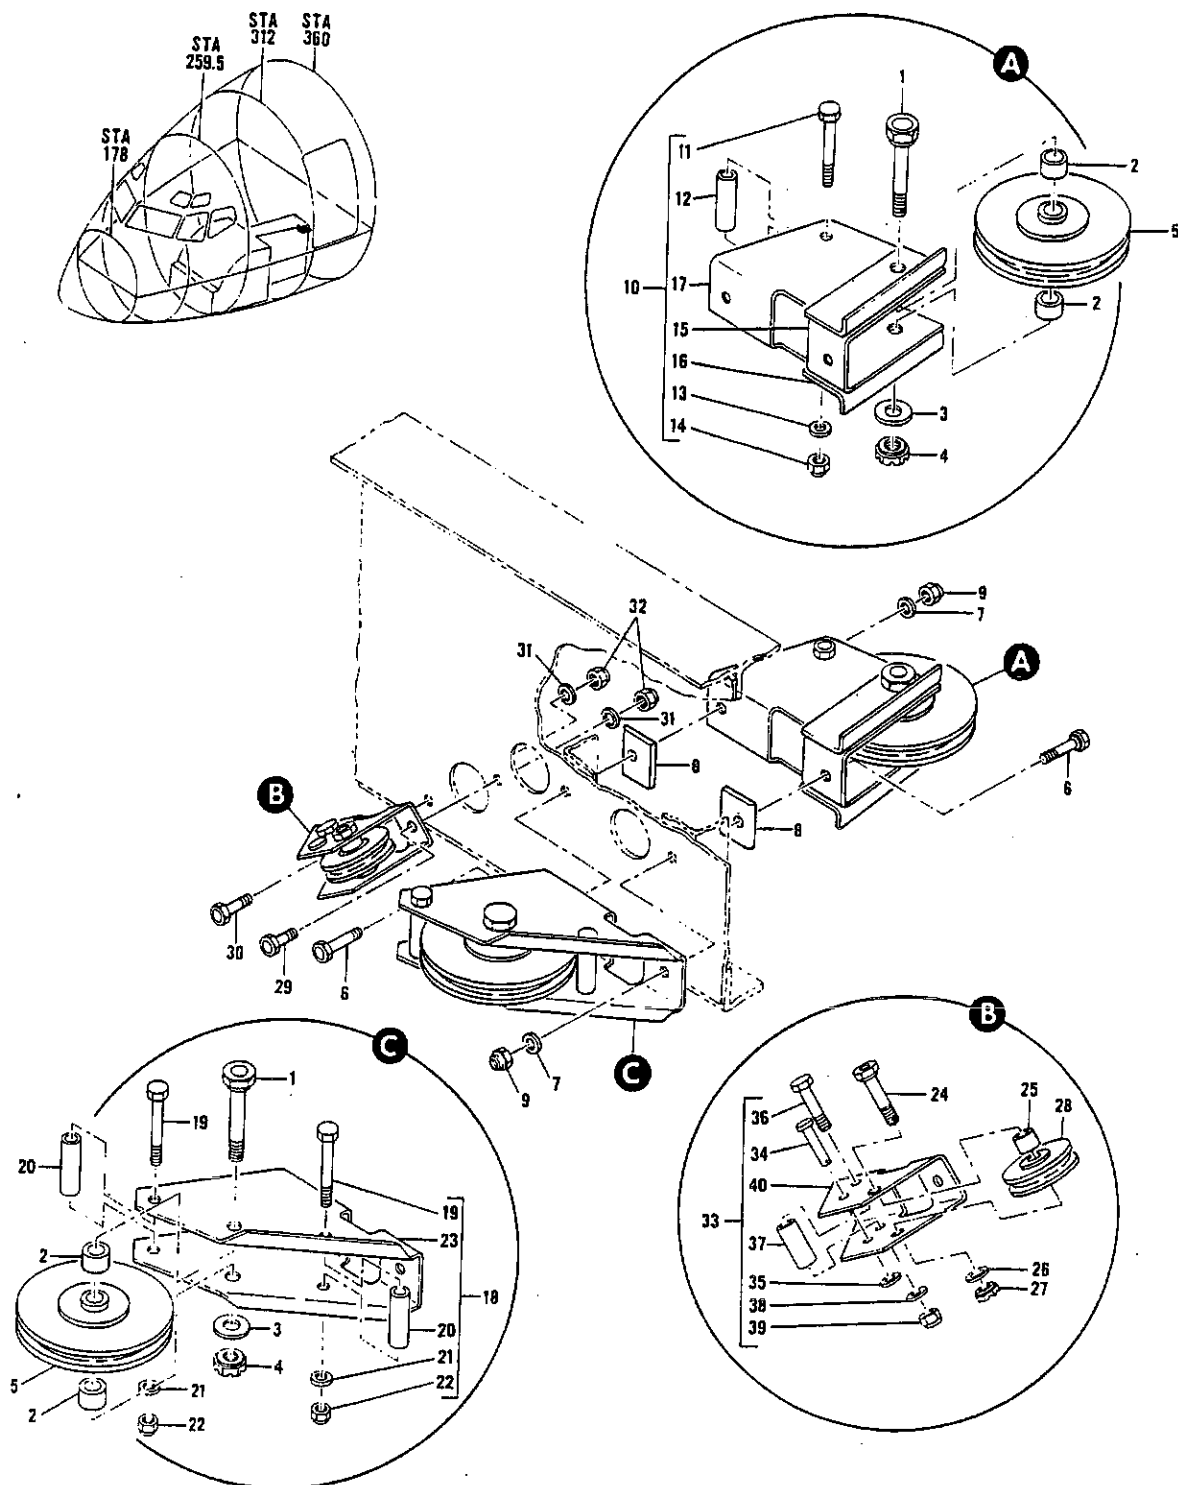


FIGURE 49. PULLEY INSTL, STATION 328 CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE TURNING



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
49	65-18308-1	PULLEY INSTL, STATION 328 CABIN TEMPERATURE CONTROL . . VALVE MANUAL OVERRIDE TURNING (SEE FIG. 43, ITEM 2)								RF
1	NAS1305-20DW	. BOLT.								2
2	NAS43DD5-16	. SPACER.								4
3	AN960PD516	. WASHER.								2
4	AN320-5	. NUT								2
5	MS20220-2	. PULLEY, (OPTIONAL TO BACP30J7).								2
5	BACP30J7	. PULLEY, (OPTIONAL MS20220-2).								2
6	NAS1303-6W	. BOLT.								2
7	AN960PD10	. WASHER.								2
8	65-18308-3	. FILLER, STATION 328 CABIN TEMPERATURE CONTROL VALVE . MANUAL OVERRIDE TURNING PULLEY RADIUS								2
9	NAS679A3W	. NUT								2
10	65-18309-1	. BRACKET ASSY, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE CONTROL PULLEY								1
11	AN3-15A	. . BOLT.								1
12	NAS42DD6-72	. . SPACER.								1
13	AN960PD10	. . WASHER.								1
14	NAS679A3W	. . NUT								1
15	65-18309-3	. . STIFFENER, CABIN TEMPERATURE CONTROL VALVE MANUAL . OVERRIDE CONTROL PULLEY BRACKET								1
16	65-18309-4	. . STIFFENER, CABIN TEMPERATURE CONTROL VALVE MANUAL . OVERRIDE CONTROL PULLEY BRACKET								1
17	65-18309-5	. . BRACKET, CABIN TEMPERATURE CONTROL VALVE MANUAL . . OVERRIDE CONTROL PULLEY								1
18	65-18309-2	. BRACKET ASSY, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE CONTROL PULLEY								1
19	AN3-15A	. . BOLT.								2
20	NAS42DD6-72	. . SPACER.								2
21	AN960PD10	. . WASHER.								2
22	NAS679A3W	. . NUT								2
23	65-18309-6	. . BRACKET, CABIN TEMPERATURE CONTROL VALVE MANUAL . . OVERRIDE CONTROL PULLEY								1
24	NAS1304-14DW	. BOLT.								1
25	NAS43DD4-20	. SPACER.								1
26	AN960PD416	. WASHER.								1
27	AN320-4	. NUT								1
28	MS20219A1	. PULLEY.								1
29	NAS1303-2W	. BOLT.								1
30	NAS1303-4W	. BOLT.								1
31	AN960PD10	. WASHER.								2
32	NAS679A3W	. NUT								2
33	65-18310-2	. BRACKET ASSY, MANUAL OVERRIDE DECLUTCH PULLEY								1
34	MS20392-2C29	. . PIN								1
35	AN960PD10	. . WASHER.								1
36	AN3-12A	. . BOLT.								1
37	NAS42DD6-48	. . SPACER.								1
38	AN960PD10	. . WASHER.								1
39	NAS679A3W	. . NUT								1
40	65-18310-4	. . BRACKET, MANUAL OVERRIDE DECLUTCH PULLEY.								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										


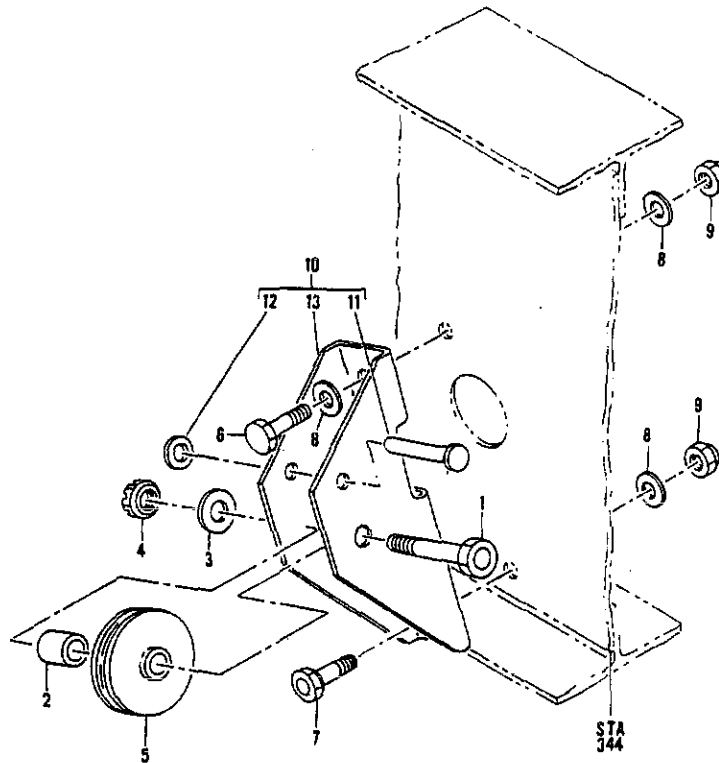


FIGURE 50. PULLEY INSTL., STATION 344 CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE TURNING

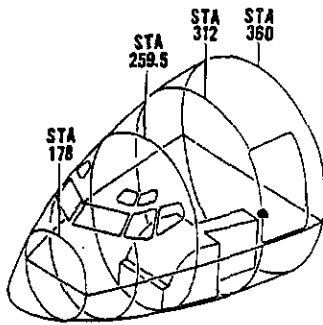

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE						EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6		
50	65-18308-2	PULLEY INSTL, STATION 344 CABIN TEMPERATURE CONTROL . . VALVE MANUAL OVERRIDE TURNING (SEE FIG. 43, ITEM 3)							RF
1	NAS1304-16DW	.	BOLT.	.	.	.	.		1
2	NAS43DD4-28	.	SPACER.	.	.	.	.		1
3	AN960PD416	.	WASHER.	.	.	.	.		1
4	AN320-4	.	NUT	.	.	.	.		1
5	MS20219A1	.	PULLEY.	.	.	.	.		1
6	AN3-5A	.	BOLT.	.	.	.	.		1
7	NAS1303-3W	.	BOLT.	.	.	.	.		1
8	AN960PD10	.	WASHER.	.	.	.	.		3
9	NAS679A3W	.	NUT	.	.	.	.		2
10	65-18310-1	.	BRACKET ASSY, MANUAL OVERRIDE DECLUTCH PULLEY	.	.	.	.		1
11	MS20392-2-29	.	PIN	.	.	.	.		1
12	AN960PD10	.	WASHER.	.	.	.	.		1
13	65-18310-3	.	BRACKET, MANUAL OVERRIDE DECLUTCH PULLEY.	.	.	.	.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE									

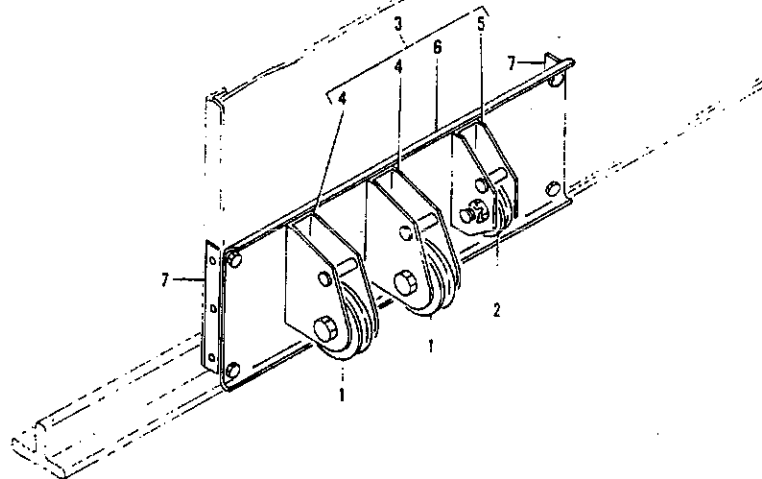
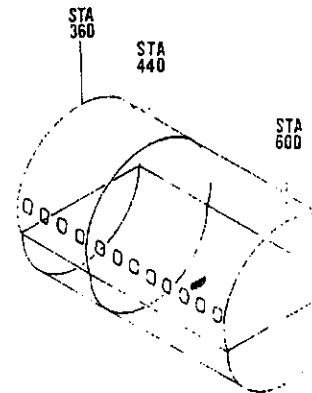


FIGURE 51. PULLEY INSTL. TEMPERATURE CONTROL VALVE MANUAL OVERRIDE IDLER

BOEING **707** *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE						EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6		
51	65-18311-1	PULLEY INSTL, TEMPERATURE CONTROL VALVE MANUAL OVERRIDE IDLER (SEE FIG. 43, ITEM 4)							RF
1	MS20220-1	. PULLEY, (OPTIONAL TO BACP30J6).							2
1	BACP30J6	. PULLEY, (OPTIONAL MS20220-1)							2
	NAS1105-11DW	ATTACHING PARTS							
	AN960PD516	. BOLT.							2
	AN320-5	. WASHER.							2
		. NUT							2
		-----*							
2	NAS530	. PULLEY.							1
	NAS1104-9W	ATTACHING PARTS							
	AN960PD416	. BOLT.							1
	AN320-4	. WASHER.							1
		. NUT							1
		-----*							
3	65-18311-2	. CHANNEL ASSY, TEMPERATURE CONTROL VALVE MANUAL							1
		OVERRIDE IDLER PULLEY							
		ATTACHING PARTS							
	AN3-4A	. BOLT.							4
	AN960PD10	. WASHER.							4
		-----*							
4	69-2354	. . BRACKET ASSY, IDLER PULLEY.							2
5	69-2354-1	. . BRACKET ASSY, IDLER PULLEY.							1
6	65-18311-3	. . CHANNEL, TEMPERATURE CONTROL VALVE MANUAL OVERRIDE IDLER PULLEY SUPPORT							1
7	65-18311-4	. ANGLE, TEMPERATURE CONTROL VALVE MANUAL OVERRIDE.							2
		IDLER PULLEY CLIP							
MISSING ITEM NUMBERS ARE NOT APPLICABLE									

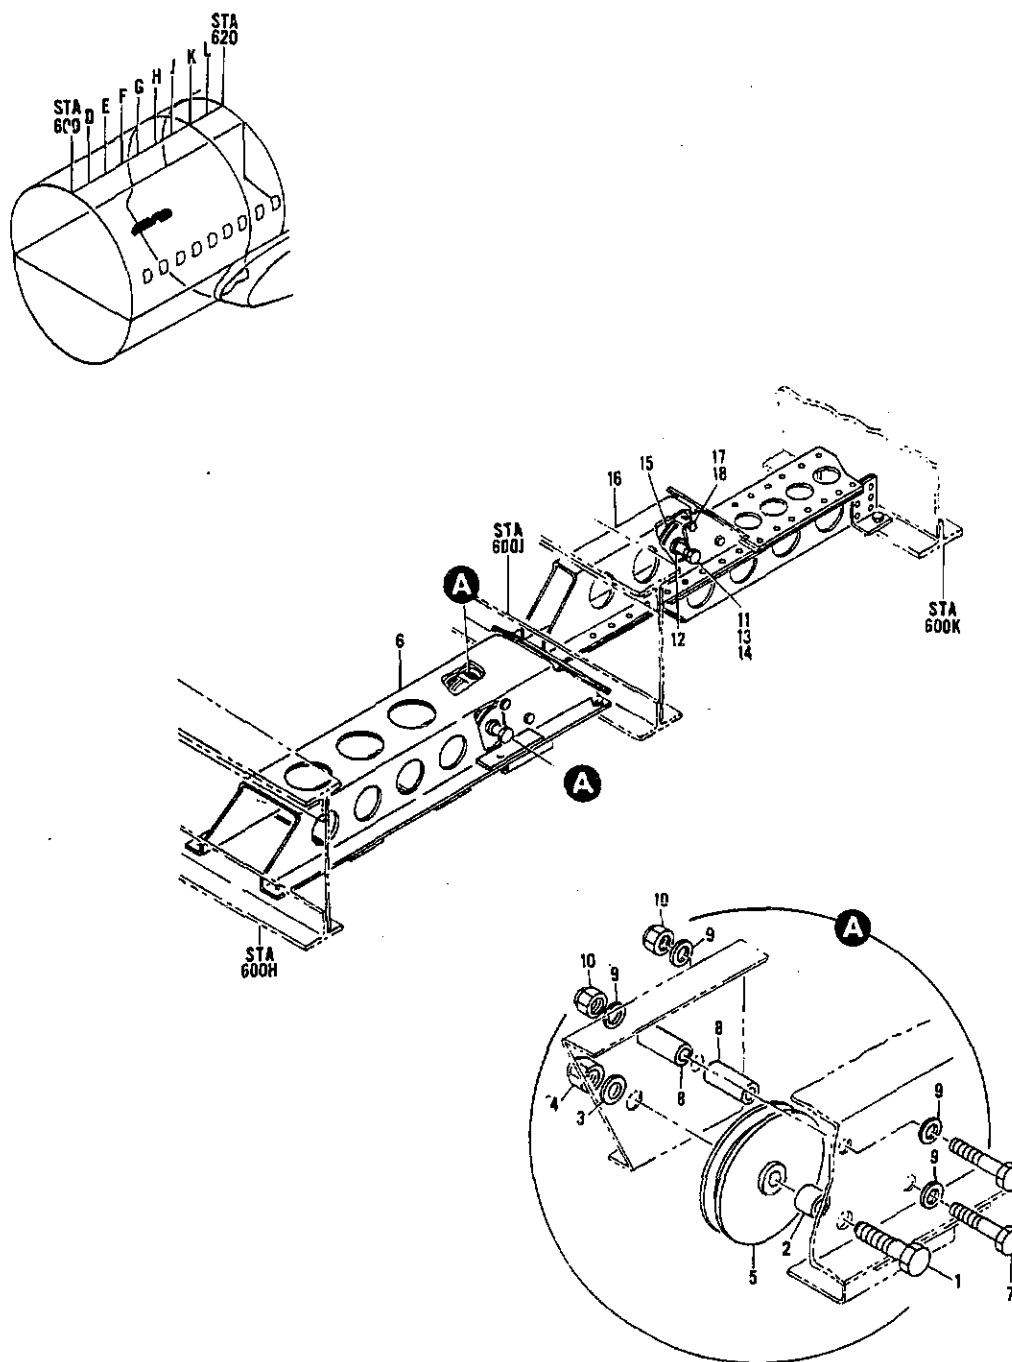


FIGURE 52. PULLEY INSTL, STATION 600H TO 600K CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE TURNING

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
52	65-18312-1		PULLEY INSTL, STATION 600H TO 600K CABIN TEMPERATURE. CONTROL VALVE MANUAL OVERRIDE TURNING (SEE FIG. 43, ITEM 5)		RF
1	NAS1105-17DW		. BOLT.		2
2	NAS43DD5-21		. SPACER.		2
3	AN960PD516L		. WASHER.		2
4	AN320-5		. NUT		2
5	MS20220-2		. PULLEY, (OPTIONAL TO BACP30J7).		2
5	BACP30J7		. PULLEY, (OPTIONAL MS20220-2).		2
6	65-18314-1		. BRACKET ASSY, STATION 600H TO 600J CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE PULLEY		1
			ATTACHING PARTS		
	AN3-5A		. BOLT.		4
	AN960PD10		. WASHER.		4
	NAS679A3W		. NUT		4
7	AN3-14A		. . BOLT.		4
8	NAS42DD6-61		. . SPACER.		4
9	AN960PD10		. . WASHER.		8
10	NAS679A3W		. . NUT		4
11	NAS1104-21DW		. BOLT.		1
12	NAS43DD4-48		. SPACER.		1
13	AN960PD416		. WASHER.		1
14	AN320-4		. NUT		1
15	MS20219-4		. PULLEY, (OPTIONAL TO BACP30J4).		1
15	BACP30J4		. PULLEY, (OPTIONAL MS20219-4).		2
16	65-18313-1		. BRACKET ASSY, STATION 600J TO 600K CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE PULLEY		1
			ATTACHING PARTS		
	AN3-5A		. BOLT.		2
	AN3-6A		. BOLT.		3
	AN960PD10		. WASHER.		8
	NAS679A3W		. NUT		5
17	MS20392-2-43		. . PIN		2
18	AN960PD10L		. . WASHER.		6

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/90

21-05-52

DETAILED PARTS LIST
21-05-52
PAGE 1

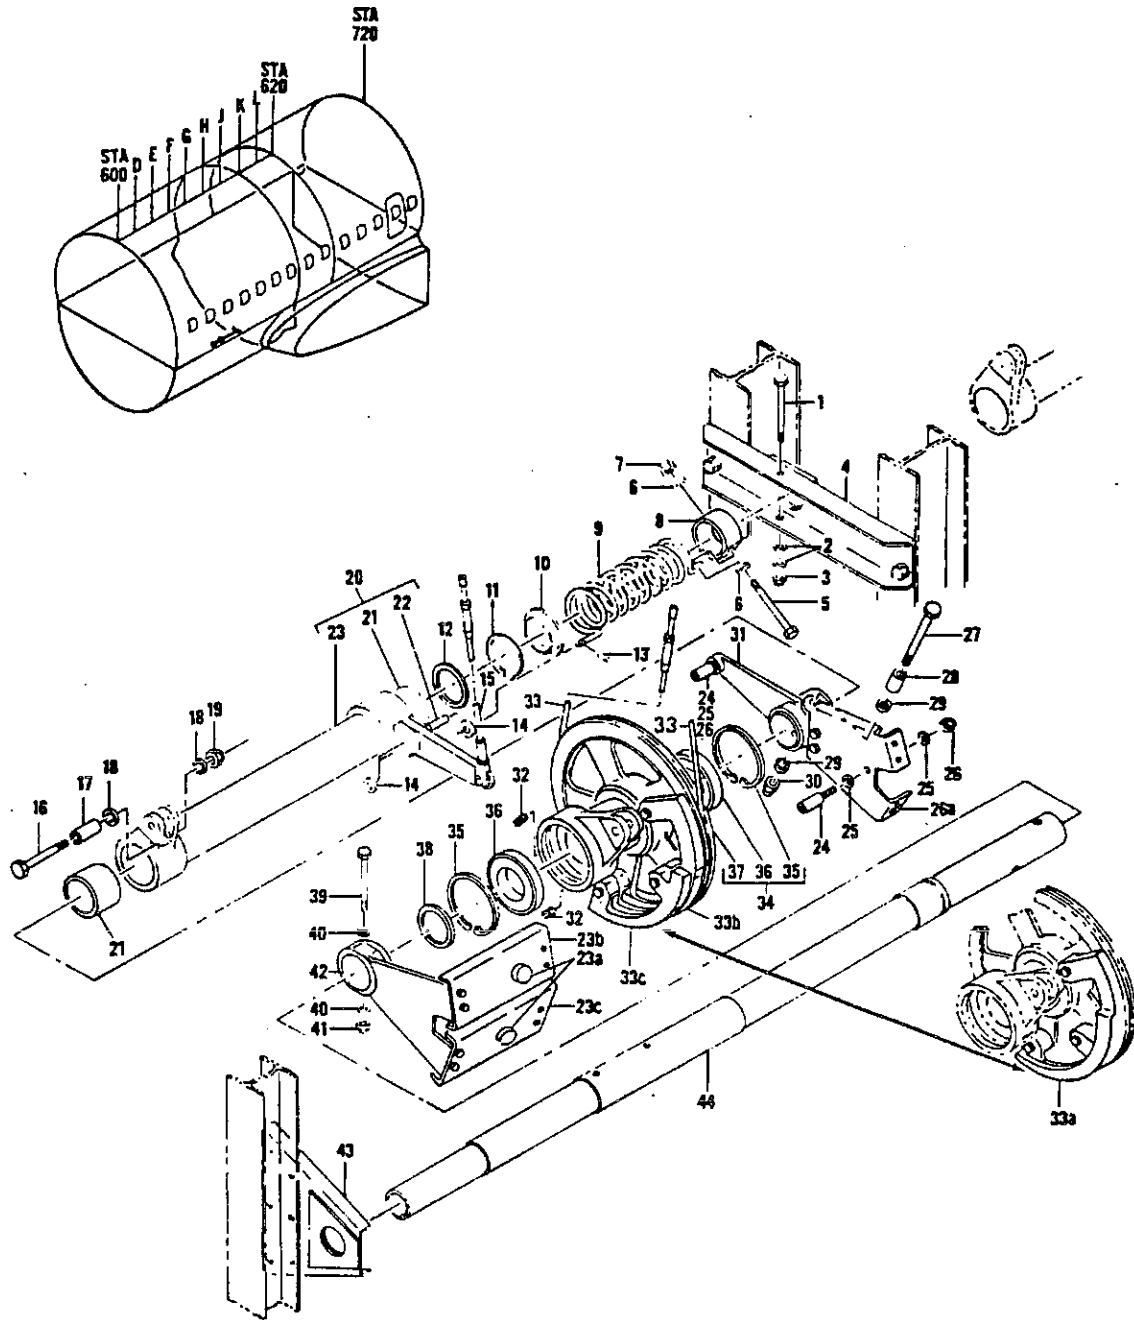


FIGURE 53. SHAFT INSTL, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE STATIONARY

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
53	65-18315-1	SHAFT INSTL, CABIN TEMPERATURE CONTROL VALVE MANUAL . . OVERRIDE STATIONARY (SEE FIG. 43, ITEM 30)		RF
1	AN4-26A	. BOLT.		1
2	AN960PD416	. WASHER.		2
3	NAS679A4W	. NUT		1
4	69-13377-1	. SUPPORT ASSY, STATION 600K STATIONARY SHAFT ATTACHING PARTS		1
	AN3-6A	. BOLT.		4
	AN960PD10	. WASHER.		8
	NAS679A3W	. NUT		4
5	AN5-23A	. BOLT.		1
6	AN960PD516	. WASHER.		2
7	NAS679A5	. NUT		1
8	69-15347-2	. COLLAR, CABIN TEMPERATURE CONTROL VALVE MANUAL. OVERRIDE SPRING		1
9	69-13379-1	. SPRING, CABIN TEMPERATURE CONTROL VALVE MANUAL. OVERRIDE CLUTCH ENGAGEMENT		1
10	69-15347-1	. SPACER, CABIN TEMPERATURE CONTROL VALVE MANUAL. OVERRIDE SPRING		1
11	NAS670-150	. RING.		1
12	66-13249-1	. SHIM, STATIONARY SHAFT LAMINATED.		1
13	MS20392-2-11	. PIN		1
14	NAS1197-10L	. WASHER.		2
15	NAS303-25-191	. CABLE ASSY.		1
	AN669L2LH	. . TERMINAL.		1
	AN667-4	. . TERMINAL.		1
16	AN5-23A	. BOLT.		1
17	NAS43DD5-70	. SPACER.		1
18	NAS1197-516	. WASHER.		2
19	NAS679A5	. NUT		1
20	65-18318-1	. BELLCRANK ASSY, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE DECLUTCH		1
21	BACB10D80	. . BEARING		2
22	NAS537B5P100	. . BUSHING		1
23	65-18319-1	. . BELLCRANK, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE DECLUTCH		1
23A	Z1EN87-6	. SWITCH, CONTROL (V91929).		2
23B	69-19187-2	. BRACKET, SECONDARY HEAT EXCHANGER DAMPER CONTROL.		1
23C	69-19187-3	. BRACKET, SECONDARY HEAT EXCHANGER DAMPER CONTROL. ATTACHING PARTS		1
	AN3-4A	. BOLT.		4
	AN3-5A	. BOLT.		4
	AN960PD10	. WASHER.		8
	NAS679A3W	. NUT		8
24	69-13378-1	. GUARD, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE PULLEY		2
25	NAS1197-10	. WASHER.		4
26	NAS679A3W	. NUT		2
26A	69-19187-1	. BRACKET, SECONDARY HEAT EXCHANGER DAMPER CONTROL. ATTACHING PARTS		1
	AN3-7A	. BOLT.		2
	NAS43DD3-14	. SPACER.		2
	NAS1197-10	. WASHER.		4
	NAS679A3W	. NUT		2
27	AN5-33A	. BOLT.		1
28	NAS43DD5-48	. SPACER.		1
29	NAS1197-516	. WASHER.		2
30	NAS679A5	. NUT		1
31	65-18324-1	. GUARD, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE PULLEY		1
32	60-6624	. RETAINER, CONTROL DRUM 1/8 CABLE.		2
33	BACC13G469-182	. CABLE ASSY.		2
	AN669L4LH	. . TERMINAL.		1
	BACT14A4	. . TERMINAL.		1
33A	65-27706-1	. CAM, SECONDARY HEAT EXCHANGER DAMPER CONTROL SWITCH ACTUATION (OPTIONAL 65-27705-1 WITH 65-27705-2)		1
33B	65-27705-1	. CAM, SECONDARY HEAT EXCHANGER DAMPER CONTROL SWITCH ACTUATION (USED WITH 65-27705-2) (OPTIONAL TO 65-27706-1)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/90

21-05-53

DETAILED PARTS LIST
21-05-53
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
53 33C	65-27705-2	. CAM, SECONDARY HEAT EXCHANGER DAMPER CONTROL SWITCH . ACTUATION (USED WITH 65-27705-1) (OPTIONAL TO 65-27706-1) ATTACHING PARTS . BOLT, (USED WITH 65-27706-1) BOLT, (USED WITH 65-27705-1 AND 65-27705-2) BOLT, (USED WITH 65-27705-1 AND 65-27705-2) WASHER. NUT		1 3 1 2 6 3
34	65-18316-1	. PULLEY AND BELLCRANK ASSY, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE CONTROL		1
35	NAS669-262	. . RING.		2
36	BACB10A44	. . BEARING		2
37	65-18317-1	. . PULLEY AND BELLCRANK, CABIN TEMPERATURE CONTROL . . VALVE MANUAL OVERRIDE CONTROL		1
38	66-13249-1	. SHIM, STATIONARY SHAFT LAMINATED.		1
39	AN4-24A	. BOLT.		1
40	AN960PD416	. WASHER.		2
41	NAS679A4W	. NUT		1
42	65-27946-1	. BRACKET AND SPACER, SECONDARY HEAT EXCHANGER DAMPER . CONTROL SUPPORT (OPTIONAL 69-19188-1)		1
42	69-19188-1	. BRACKET AND SPACER, SECONDARY HEAT EXCHANGER DAMPER . CONTROL SUPPORT (OPTIONAL TO 65-27946-1)		1
43	69-13376-1	. SUPPORT ASSY, STATION 600H STATIONARY SHAFT ATTACHING PARTS . BOLT. WASHER. NUT		1 6 6 6
44	65-18320-1	. SHAFT, CABIN TEMPERATURE CONTROL VALVE MANUAL OVERRIDE STATIONARY		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

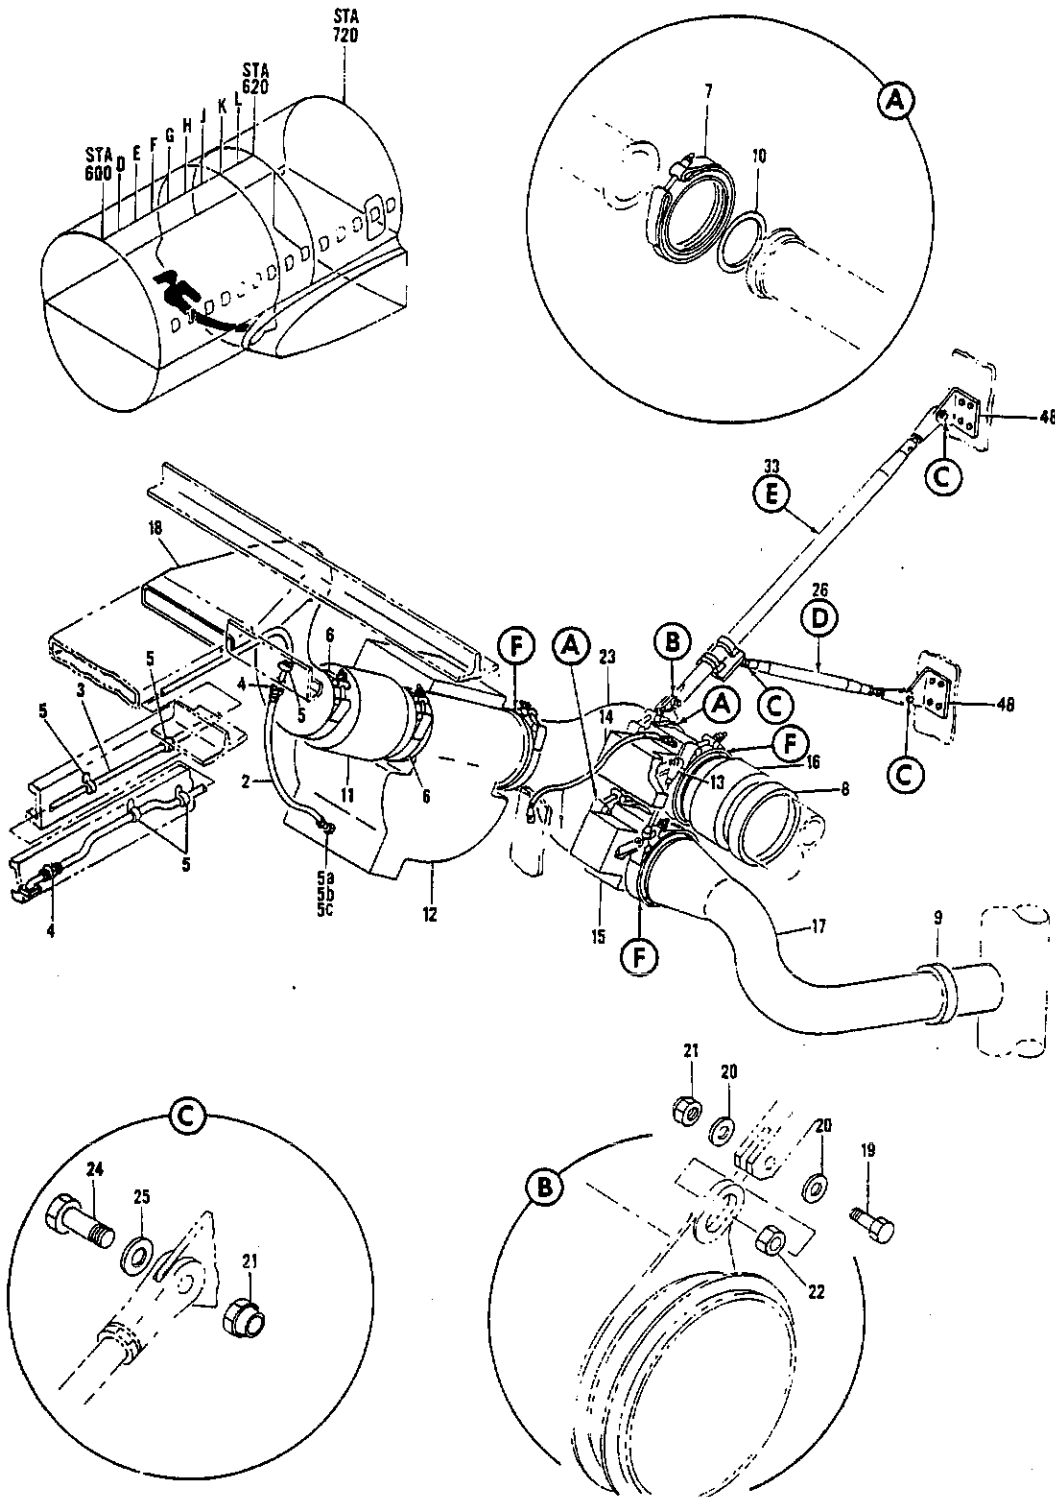


FIGURE 54. VALVE INSTL. CONTROL CABIN TEMPERATURE CONTROL (SHEET 1)

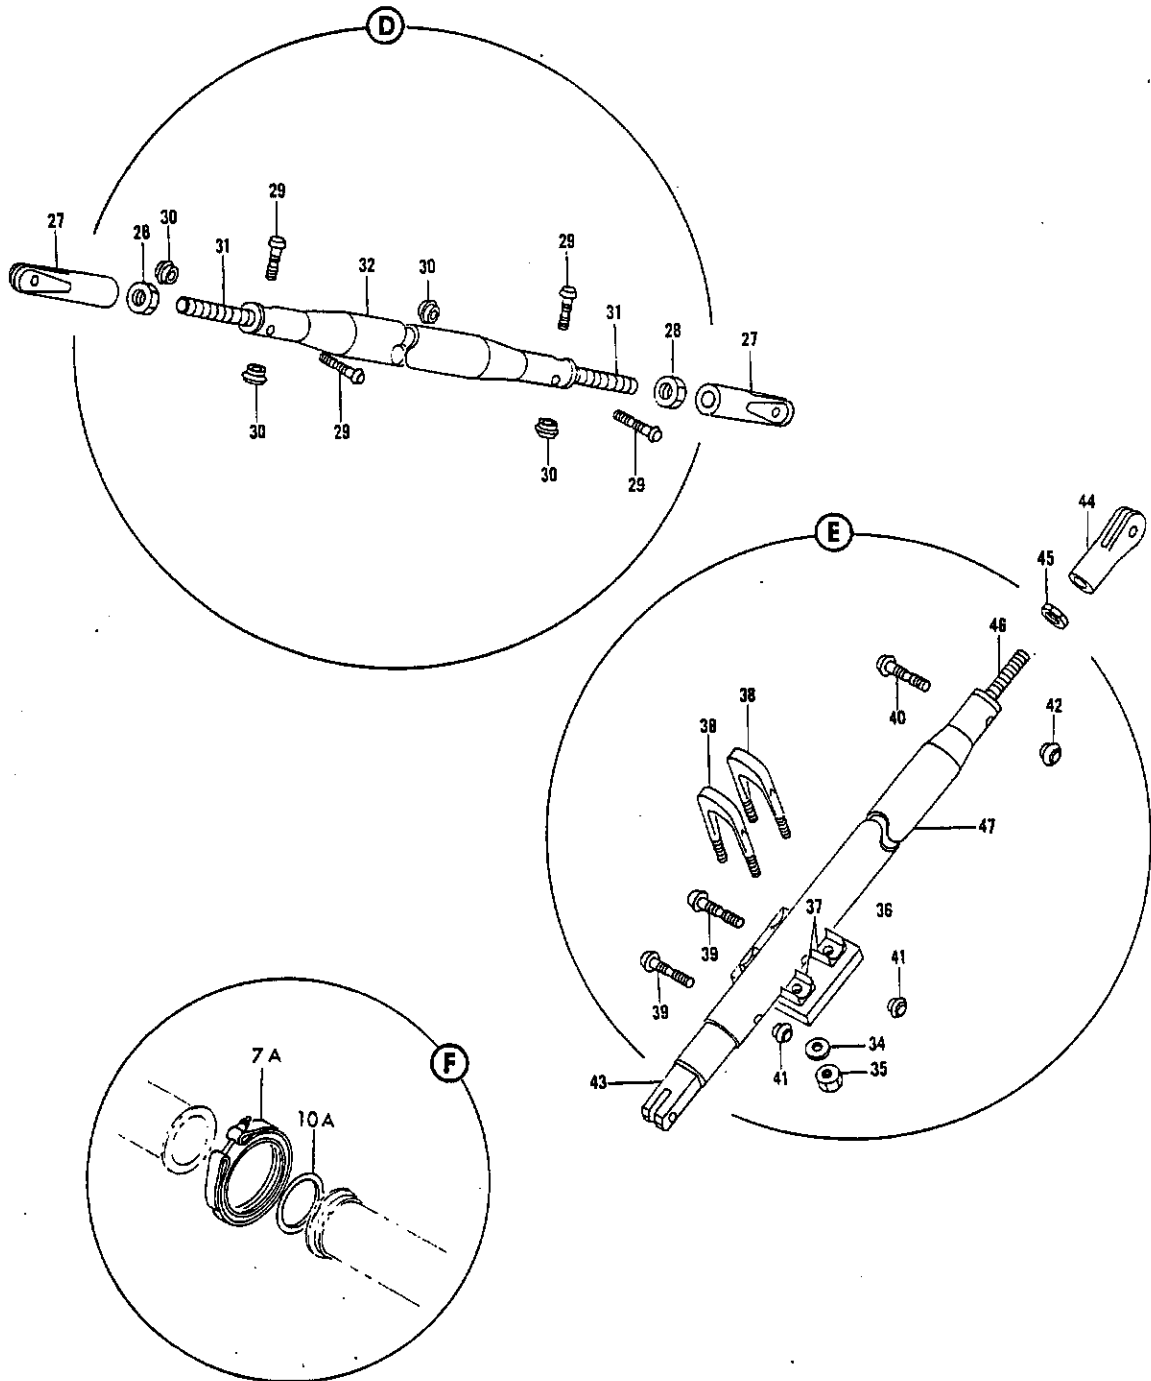


FIGURE 54. VALVE INSTL, CONTROL CABIN TEMPERATURE CONTROL (SHEET 2)

NOV 21/90

21-05-54

DETAILED PARTS LIST
21-05-54
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
54	65-4302		VALVE INSTL, CONTROL CABIN TEMPERATURE CONTROL (SEE . . 21-2, FIG. 2, ITEM 7)		RF
1	MS25083-28817		. JUMPER ASSY		1
	NAS603-7		. ATTACHING PARTS		2
	AN960D10L		. SCREW		4
	NAS679A3W		. WASHER		2
			. NUT		
2	C9423-200		. TUBING ASSY, FLEXIBLE (V16519)		1
			(OPTIONAL TO 17241-200 (V16519))		
2	17241-200		. TUBING ASSY, FLEXIBLE (V16519)		1
			(OPTIONAL C9423-200 (V81481))		
3	65-4302-1		. TUBE ASSY, PRESSURE SENSING 3/8 .028 6061-T6		1
	MS21921D6		. NUT		2
	MS21922-6		. SLEEVE		2
4	MS21902D6		. UNION		2
5	BACC10BH6R		. CLAMP		5
			ATTACHING PARTS		
	NAS603-20		. SCREW		1
	NAS603-16		. SCREW		4
	NAS43DD3-52		. SPACER		1
	NAS43DD3-40		. SPACER		3
	NAS679A3W		. NUT		4
	BACN10DZ3-60		. NUT		1
5A	ER833D0406		. ELBOW, (V92003)		1
5B	AN924-4D		. NUT		1
5C	MS28778-4		. PACKING		1
6	BACC10BN412LSH		. CLAMP		2
7	BACC10AU400		. CLAMP		2
7A	BACC10AU400		. CLAMP		3
8	E38C37		. CLAMP, (V89513)		1
9	B29C43		. CLAMP, (V89513)		1
10	BACG10R406		. GASKET		2
10A	BACG10R406		. GASKET		3
11	BACD40B16-16-5-5		. DUCT		1
12	10-3369		. CONTROLLER, CREW COMPARTMENT AIR FLOW		1
13	NAS363-1A430		. ROD ASSY		1
14	10-3368-2		. VALVE, CREW COMPARTMENT TEMPERATURE CONTROL		1
15	10-3368-4		. VALVE, CREW COMPARTMENT TEMPERATURE CONTROL		1
16	10-3302-2		. VALVE, CABIN AIR CHECK		1
17	65-1174-3		. DUCT ASSY, CONTROL CABIN AIR CONDITIONING		1
18	65-7178-3		. DUCT ASSY, CONTROL CABIN AIR SUPPLY TRANSITION		1
			ATTACHING PARTS		
	AN3-5A		. BOLT		2
19	NAS464P4A13		. BOLT		1
20	AN960D416		. WASHER		2
21	NAS679A4W		. NUT		4
22	66-3551		. SLIDER, CONTROL CABIN TEMPERATURE CONTROL VALVE		1
			SUPPORT		
23	65-1180-14		. ADAPTER ASSY, CONTROL CABIN TEMPERATURE		1
24	NAS464P4AB		. BOLT		3
25	AN960-416L		. WASHER		3
26	69-3664-5		. ROD ASSY, CABIN TEMPERATURE CONTROL VALVE SUPPORT		1
27	AN665-34R		. TERMINAL		2
28	AN316-4R		. NUT		2
29	BACB30AL5E9		. BOLT		4
30	BACC30AF5		. COLLAR		4
31	AN490HT8P		. ROD END		2
32	69-3664-9		. TUBE, CABIN TEMPERATURE CONTROL VALVE SUPPORT		1
			SWAGED		
33	69-3813		. ROD ASSY, CONTROL CABIN TEMPERATURE CONTROL SUPPORT		1
34	AN960D10		. WASHER		4
35	BACN10BY53W		. NUT		4
36	66-4577-1		. BRACKET, CONTROL CABIN TEMPERATURE CONTROL VALVE		1
			SUPPORT		
37	BACC10X12D		. CLAMP		2
38	BACC10Y12-8S		. CLAMP		2
39	BACB30AL6E12		. BOLT		2
40	BACB30AL5E9		. BOLT		1
41	BACC30AC6		. COLLAR		2
42	BACC30AF5		. COLLAR		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING **707** *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
54 43	66-4577	.	.	CLEVIS, CONTROL CABIN TEMPERATURE CONTROL VALVE . .						1
				SUPPORT						
44	AN665-34R	.	.	TERMINAL.						1
45	AN316-4R	.	.	NUT						1
46	AN490HT8P	.	.	ROD END						1
47	69-3813-1	.	.	TUBE, CONTROL CABIN TEMPERATURE CONTROL SUPPORT . .						1
				SWAGED						
48	66-3744	.	.	BRACKET, CONTROL CABIN TEMPERATURE CONTROL VALVE. . .						2
				SUPPORT						
				ATTACHING PARTS						
	AN3-6A	.	.	BOLT.						8
	AN960D10	.	.	WASHER.						4
				-----*						
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
55	65-4301-1		VALVE INSTL, CABIN AIR CONDITIONING TEMPERATURE CONTROL (SEE 21-2, FIG. 2, ITEM 6)		RF
1	BACCI0DP600A		CLAMP		11
2	65-4344		DUCT ASSY, STATION 600J PLUS 2.47 TO 600K PLUS 14.26 AIR CONDITIONING		2
2A	65-4345		DUCT ASSY, TEMPERATURE CONTROL VALVE TO CHECK VALVE COLD AIR		1
2D	65-4345-5		DUCT ASSY, TEMPERATURE CONTROL VALVE TO CHECK VALVE COLD AIR		1
2E	65-1313		ADAPTER ASSY, AIR CONDITIONING SECTION		2
2F	65-1313-1		SLEEVE ASSY, AIR CONDITIONING SECTION ADAPTER		1
2G	65-1313-2		INSERT ASSY, AIR CONDITIONING SECTION ADAPTER		1
2H	65-3074-26		NUT, AIR CONDITIONING ADAPTER SECTION JAM (OPTIONAL 65-3074-5)		1
2H	65-3074-5		NUT, AIR CONDITIONING ADAPTER SECTION JAM (OPTIONAL TO 65-3074-26)		1
2J	BACP11J257		PACKING		1
3	10-60107		DUCT, UNIVERSAL JOINT RESTRAINED HOT AIR (OPTIONAL BAC SPEC NO. 10-60107-1)		4
3	10-60107-1		DUCT, UNIVERSAL JOINT RESTRAINED HOT AIR (OPTIONAL TO BAC SPEC NO. 10-60107)		4
3A	65-1178-5		DUCT ASSY, CREW DUCT TEE		1
4	BACCI0DP400A		CLAMP		2
5A	65-1173-13		DUCT ASSY, CABIN AIR CONDITIONING CONTROL		1
5B	BACCI0B22		CLAMP		1
5C	69-27937-1		SUPPORT, CONTROL CABIN CONDITIONED AIR DUCT ATTACHING PARTS		2
	AN3-26A		BOLT		1
	AN960PD10L		WASHER		2
	NAS679A3W		NUT		1
6	AN3-5A		BOLT		42
7	AN960D10		WASHER		42
8	NAS679A3W		NUT		42
9	10-60023		DUCT, CONDITIONED AIR DISTRIBUTION FLEXIBLE (OPTIONAL TO BAC SPEC NO. 10-60023-2)		1
9	10-60023-2		DUCT, CONDITIONED AIR DISTRIBUTION FLEXIBLE (OPTIONAL BAC SPEC NO. 10-60023)		1
10	10-60023-1		DUCT, CONDITIONED AIR DISTRIBUTION FLEXIBLE (OPTIONAL TO BAC SPEC NO. 10-60023-3)		1
10	10-60023-3		DUCT, CONDITIONED AIR DISTRIBUTION FLEXIBLE (OPTIONAL BAC SPEC NO. 10-60023-1)		1
11	65-2430-9		RING, PRESSURE SEAL HALF		4
12	65-2430-10		RING, PRESSURE SEAL HALF		4
13	MS25083-28B23		JUMPER ASSY		1
	NAS603-B		SCREW		1
	NAS603-10		SCREW		1
	AN960D10L		WASHER		4
	NAS679A3W		NUT		2
14	10-3367-4		VALVE ASSY, CABIN TEMPERATURE CONTROL		1
15	NAS464P4A7		BOLT		2
16	NAS464P5A8		BOLT		2
16A	NAS464P4A11		BOLT		2
17	NAS464P4A6		BOLT		2
18	AN960-516L		WASHER		2
19	AN960-416L		WASHER		4
19A	AN960D416		WASHER		2
19B	AN960D516L		WASHER		2
20	NAS679A5		NUT		AR 2
21	NAS679A4W		NUT		6
22	AN44-7A		BOLT		2
23	69-2506-5		BOLT, CABIN AIR CONDITIONING TEMPERATURE CONTROL VALVE SUPPORT EYE		2
24	69-2506-4		BEARING, CABIN AIR CONDITIONING TEMPERATURE CONTROL VALVE SUPPORT SLIDER		4
25	NAS75-4-103		BUSHING		2
26	AN960-416L		WASHER		2
27	NAS679A4W		NUT		2
28	69-3664-1		ROD ASSY, CABIN TEMPERATURE CONTROL VALVE SUPPORT		1
29	69-3664-2		ROD ASSY, CABIN TEMPERATURE CONTROL VALVE SUPPORT		1
30	69-3664-10		ROD ASSY, SUPPORT		2
31	69-3664-4		ROD ASSY, CABIN TEMPERATURE CONTROL VALVE SUPPORT		2
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
55 32	69-2506-7	.	.	EYE, END (USED ON 69-3664-10)	.	.	.	.		1
32A	66-3517-1	.	.	CLEVIS, CABIN TEMPERATURE CONTROL VALVE SUPPORT	.	.	.	.		1
				(USED ON 69-3664-1)						
32A	66-3517-2	.	.	CLEVIS, CABIN TEMPERATURE CONTROL VALVE SUPPORT	.	.	.	.		1
				(USED ON 69-3664-2)						
33	AN486-2	.	.	CLEVIS, (USED ON 69-3664-4)	.	.	.	.		1
34	AN665-46R	.	.	TERMINAL, (USED ON 69-3664-3 AND -10)	.	.	.	.		1
34A	AN665-34R	.	.	TERMINAL, (USED ON 69-3664-4)	.	.	.	.		1
34B	BAC810A1B0	.	.	BEARING, (USED ON 69-3664-1 AND -2)	.	.	.	.		1
35	AN316-5R	.	.	NUT, (NOT USED ON 69-3664-4)	.	.	.	.		2
35A	AN316-4R	.	.	NUT, (USED ON 69-3664-4)	.	.	.	.		2
36	BAC830GP6-11	.	.	BOLT, (NOT USED ON 69-3664-4)	.	.	.	.		4
36A	BAC830AL5E9	.	.	BOLT, (USED ON 69-3664-4)	.	.	.	.		4
37	NAS1080D6	.	.	COLLAR, (NOT USED ON 69-3664-4)	.	.	.	.		4
37A	BACC30AF5	.	.	COLLAR, (USED ON 69-3664-4)	.	.	.	.		4
38	AN490HT10P	.	.	ROD END, (NOT USED ON 69-3664-4)	.	.	.	.		2
38A	AN490HT8P	.	.	ROD END, (USED ON 69-3664-4)	.	.	.	.		2
39	69-3664-6	.	.	TUBE, CABIN TEMPERATURE CONTROL VALVE SUPPORT ROD	.	.	.	.		1
				(USED ON 69-3664-1 AND -2)						
39A	69-3664-7	.	.	TUBE, (USED ON 69-3664-3 AND -10)	.	.	.	.		1
39B	69-3664-8	.	.	TUBE, CABIN TEMPERATURE CONTROL VALVE SUPPORT ROD	.	.	.	.		1
				(USED ON 69-3664-4)						
40	69-3666	.	.	SUPPORT, CABIN TEMPERATURE CONTROL VALVE UPPER	.	.	.	.		1
41	69-3666-1	.	.	SUPPORT, CABIN TEMPERATURE CONTROL VALVE UPPER	.	.	.	.		1
				ATTACHING PARTS						
	AN3-5A	.	.	BOLT	.	.	.	.		12
	AN960D10L	.	.	WASHER	.	.	.	.		12
				-----*						
42	69-3667	.	.	SUPPORT, CABIN TEMPERATURE CONTROL VALVE LOWER	.	.	.	.		1
43	69-3667-1	.	.	SUPPORT, CABIN TEMPERATURE CONTROL VALVE LOWER	.	.	.	.		1
				ATTACHING PARTS						
	AN3-7A	.	.	BOLT	.	.	.	.		6
	AN3-6A	.	.	BOLT	.	.	.	.		6
	AN960D10L	.	.	WASHER	.	.	.	.		6
				-----*						
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

RAF
NOV 21/90

21-05-55

DETAILED PARTS LIST
21-05-55
PAGE 3

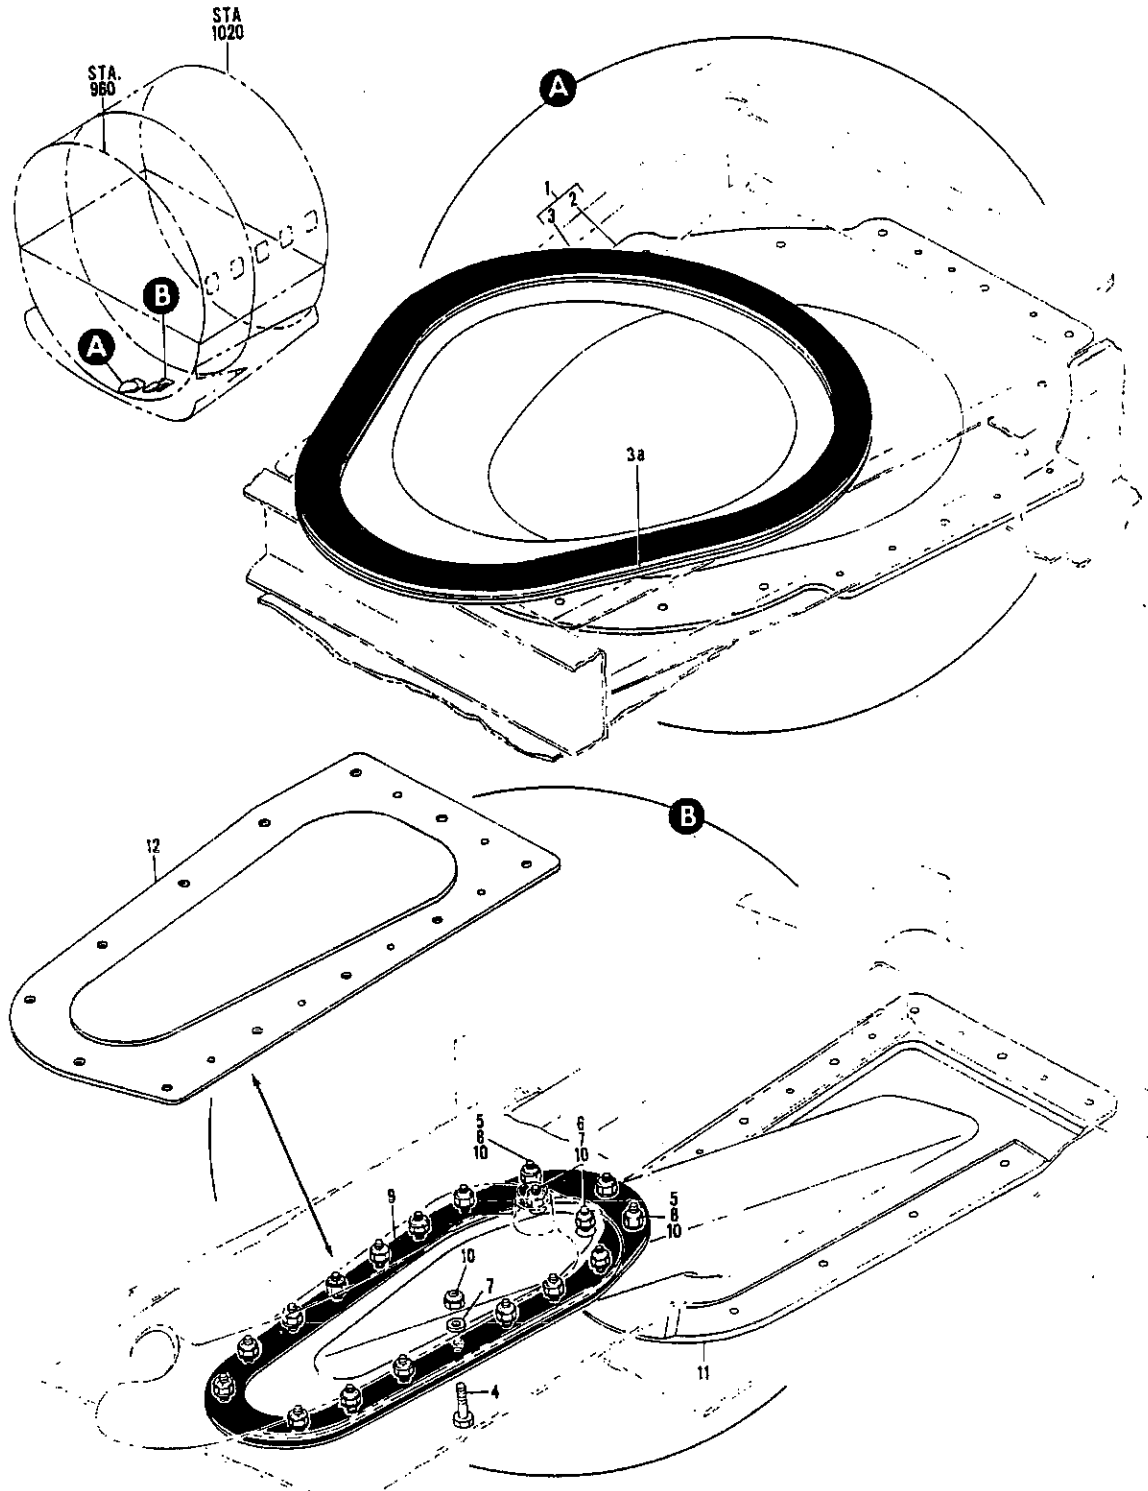


FIGURE 57. FAIRING INSTL. STATION 962 TO 1000 WING TO BODY LOWER (AIR CONDITIONING ONLY)

BOEING **707** *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
57	65-6992-19	FAIRING INSTL; STATION 962 TO 1000 WING TO BODY LOWER . (AIR CONDITIONING ONLY) (SEE 53-7, FIG. 8 AND 9)								RF
3A	65-8663-2	. GASKET, CABIN PRESSURE OUTFLOW VALVE.								AR
	65-7425	. EXTENSION INSTL, THRUST RECOVERY VALVE NOZZLE								1
4	AN3-6A	. BOLT.								14
5	AN3-4A	. BOLT.								3
6	NAS514P1032-10	. SCREW								2
7	BACW10T10L	. WASHER.								16
8	AN960D10L	. WASHER.								3
9	66-9219	. GASKET, THRUST RECOVERY VALVE								1
10	BACN10BY53W	. NUT								19
11	65-11006	. EXTENSION, THRUST RECOVERY VALVE NOZZLE								1
		. FOR REFERENCE TO OTHER FAIRING DETAILS, SEE NHA								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

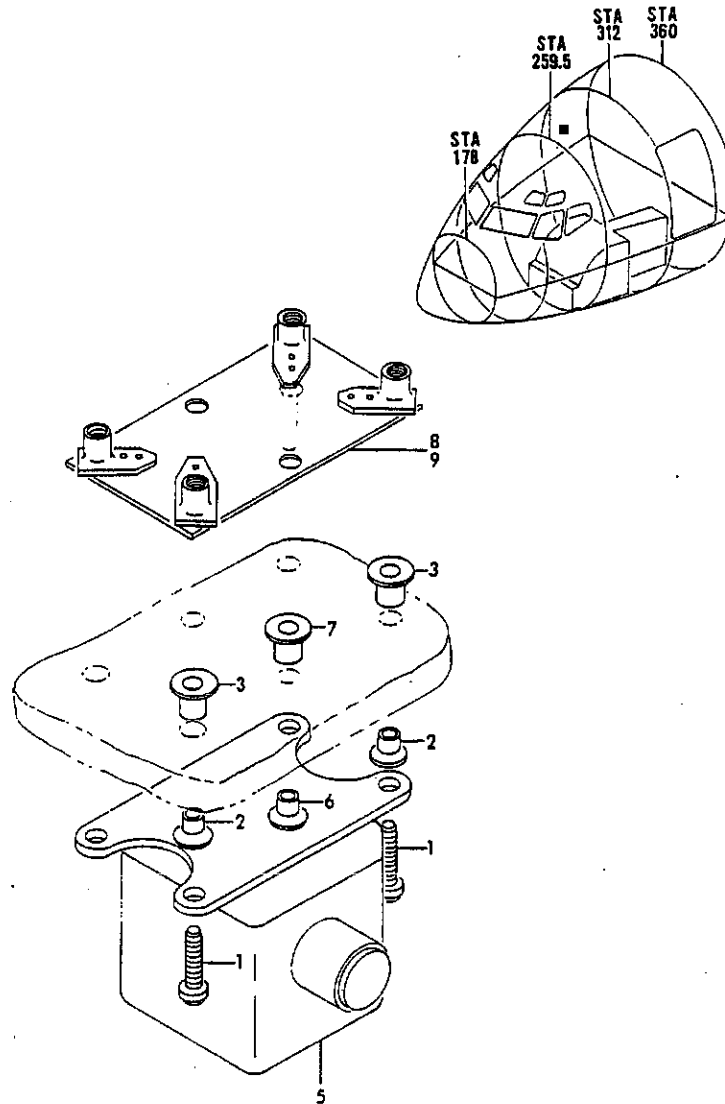


FIGURE 58. SWITCH INSTL. ALTITUDE PRESSURE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R R R R R R R R R R	58	66-3080	SWITCH INSTL, ALTITUDE PRESSURE (SEE 25-1, FIG. 1, ITEM 57, 25-1, FIG. 1B, ITEM 52, 25-1, FIG. 1C, ITEM 57, 25-1, FIG. 1D, ITEM 56, 25-1, FIG. 1E, ITEM 48, 25-1, FIG. 1F, ITEM 44, 25-1, FIG. 1G, ITEM 49, 25-1, FIG. 1H, ITEM 50, 25-1, FIG. 1J, ITEM 47, 25-1, FIG. 1K, ITEM 46, 25-1, FIG. 2B, ITEM 45, 25-1, FIG. 2C, ITEM 45, 25-1, FIG. 2F, ITEM 47, 25-1, FIG. 2G, ITEM 45 AND 25-1, FIG. 2H, ITEM 49)							0150	RF
	1	NAS603-14P	. SCREW							0150	4
	2	BACSI8P3B12S	. SPACER.							0150	4
	3	BACSI8P3B5P	. SPACER.							0150	4
	5	666-1394	. SWITCH, (V71688). (OPTIONAL TO BAC SPEC NO. 10-2638-4)							0150	1
	5	10-2638-4	. SWITCH. (OPTIONAL 666-1394 (V71688))							0150	1
	6	BACSI8P2C5P	. SPACER.							0150	2
	7	BACSI8P2B12S	. SPACER.							0150	2
	8	66-3080-3	. PLATE ASSY.							0150	1
	9	66-3080-2	. PLATE							0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

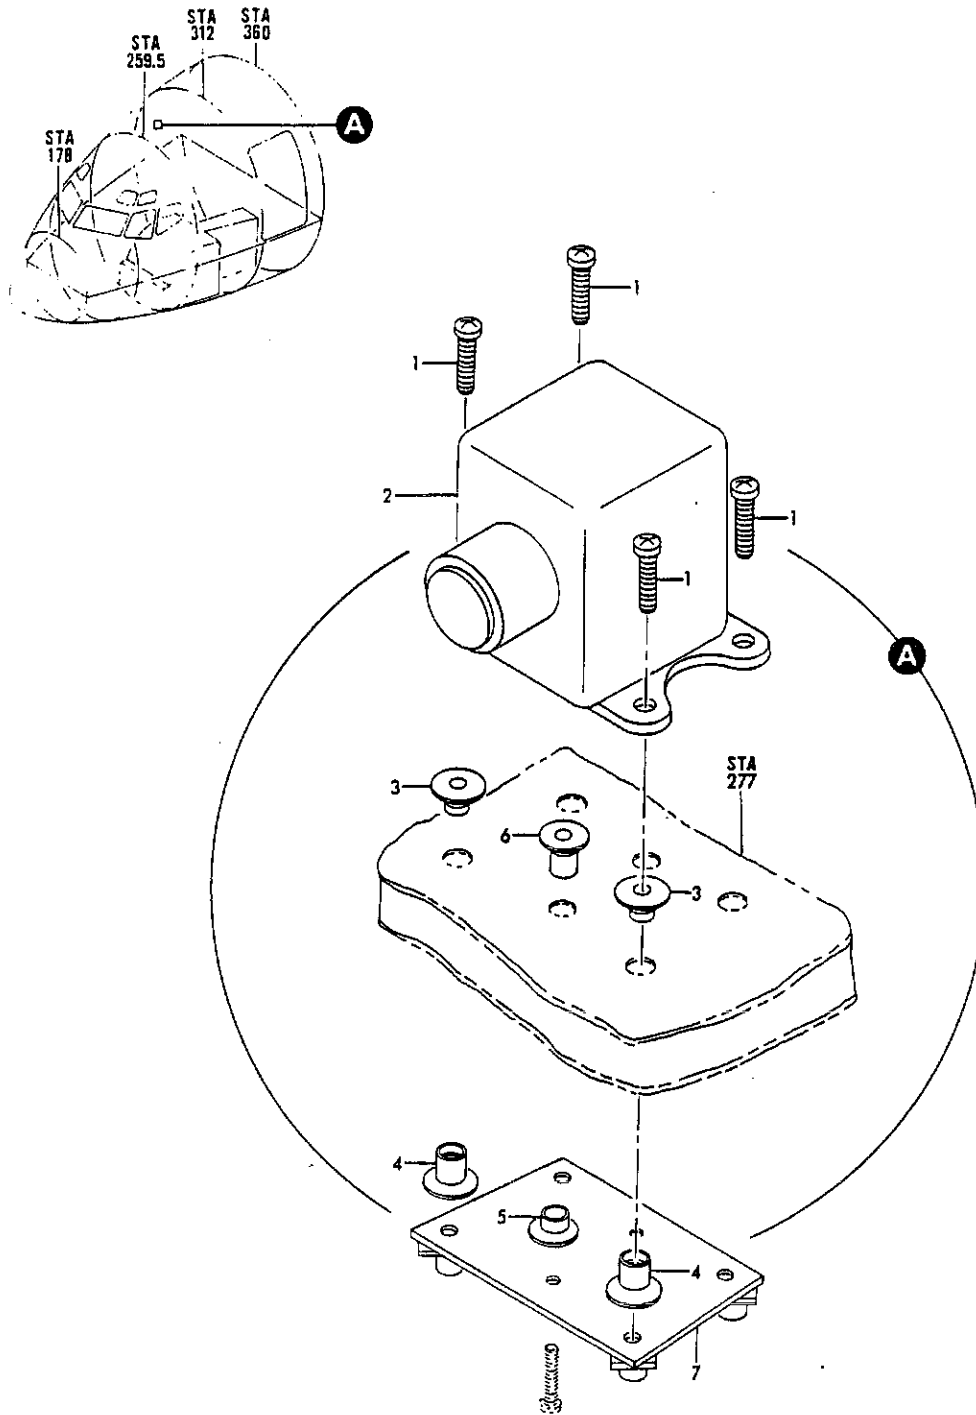


FIGURE 58 A SWITCH INSTL. CABIN ALTITUDE PRESSURE

DETAILED PARTS LIST
21-05-58A
PAGE 2

21-05-58A

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
58A	69-49960-1	SWITCH INSTL, CABIN ALTITUDE PRESSURE (SEE 25-1, FIG. 1B, ITEM 52, 25-1, FIG. 1E, ITEM 48, 25-1, FIG. 1F, ITEM 44, 25-1, FIG. 2D, ITEM 39 AND 25-1, FIG. 2E, ITEM 25)							5199	RF
1	NAS603-14P	. SCREW							5199	4
2	10-2638-4	. SWITCH. (OPTIONAL 666-1394 (V71688))							5199	1
2	666-1394	. SWITCH, (V71688). (OPTIONAL TO 10-2638-4)							5199	1
3	BACS18P3B5P	. SPACER.							5199	4
4	BACS18P3B12S	. SPACER.							5199	4
5	BACS18P2C5P	. SPACER.							5199	2
6	BACS18P2B12S	. SPACER.							5199	2
7	69-49960-2	. PLATE ASSY.							5199	1
7	69-49960-3	. PLATE							5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

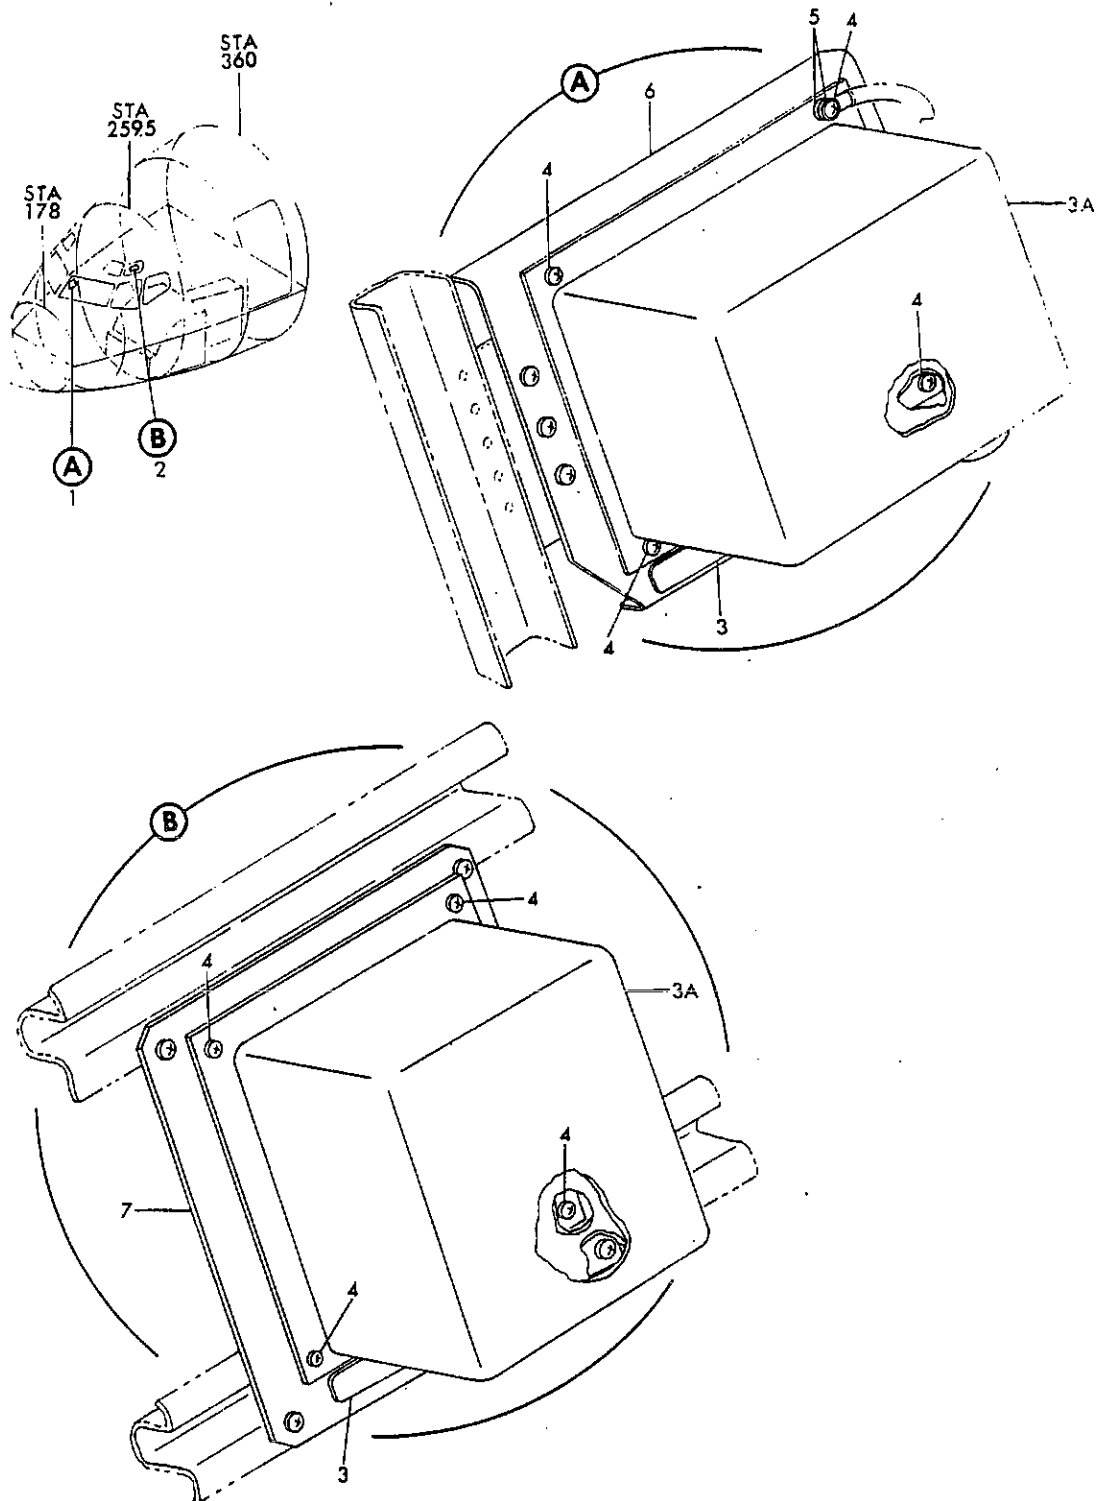


FIGURE 61A. REGULATOR INSTL, STATION 247 AND 316 COCKPIT TEMPERATURE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
61A	2	65-51375-4	REGULATOR INSTL, STATION 316 COCKPIT TEMPERATURE (SEE . 24-3, FIG. 1A, ITEM 37, 24-3, FIG. 1B, ITEM 35 AND 24-3, FIG. 1C, ITEM 32)								RF
	3	BACMIOR50-3DP	. MARKER-ALUMINUM FOIL, CABIN TEMPERATURE REGULATOR . .								1
	3A	10-3063-20	. REGULATOR, CABIN TEMPERATURE.								1
	4	BACSI2CB08-8	. ATTACHING PARTS								4
			. SCREW								4
			-----*								
	7	69-44577-3	. SUPPORT ASSY.								1
			. ATTACHING PARTS								
		BACSI2CB3-16	. SCREW								4
		BACSI8F50B	. SPACER.								4
		AN960D10L	. WASHER.								4
		NAS680A3	. NUT								4
			-----*								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

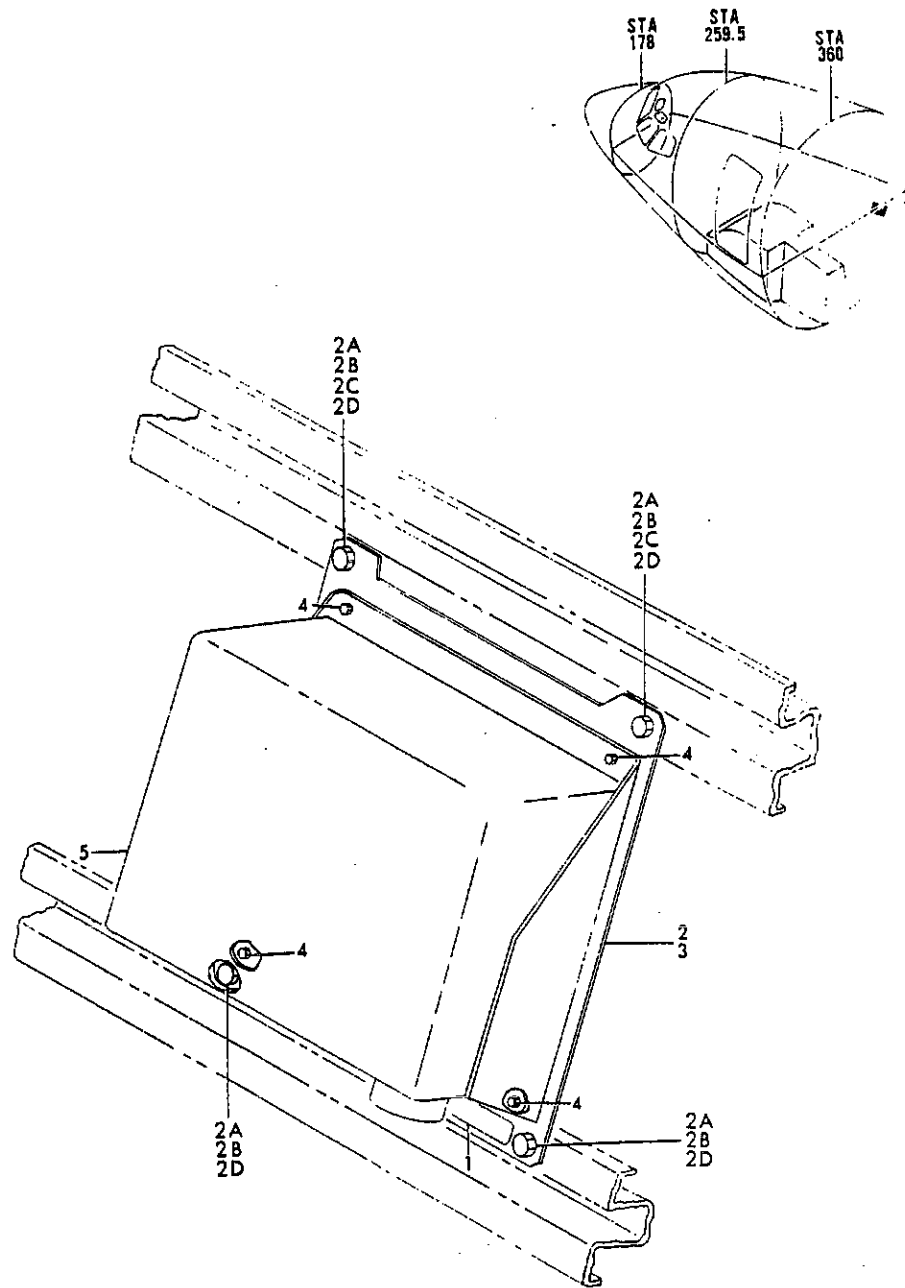


FIGURE 61B. REGULATOR INSTL, STATION 348 MAIN CABIN TEMPERATURE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
61B	65-51374-1		REGULATOR INSTL, STATION 348 MAIN CABIN TEMPERATURE . . (SEE 24-3, FIG. 1A, ITEM 38, 24-3, FIG. 1B, ITEM 36 AND 24-3, FIG. 1C, ITEM 33)		RF
1	BACM10R50-3DR		. MARKER-ALUMINUM FOIL, MAIN CABIN TEMPERATURE.		1
2	65-51374-2		. REGULATOR . PLATE ASSY, STATION 348 MAIN CABIN TEMPERATURE.		1
2A	BACS12CB3-16		. ATTACHING PARTS		4
2B	BACS1BF50B		. SCREW		4
2C	AN960D10L		. SPACER.		2
2D	NAS680A3		. WASHER.		4
			. NUT		
3	65-51374-3		. PLATE, STATION 348 MAIN CABIN TEMPERATURE REGULATOR		1
4	BACS12CB08-7		. SCREW		4
5	10-3063-20		. REGULATOR, MAIN CABIN TEMPERATURE CONTROL SYSTEM. . .		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

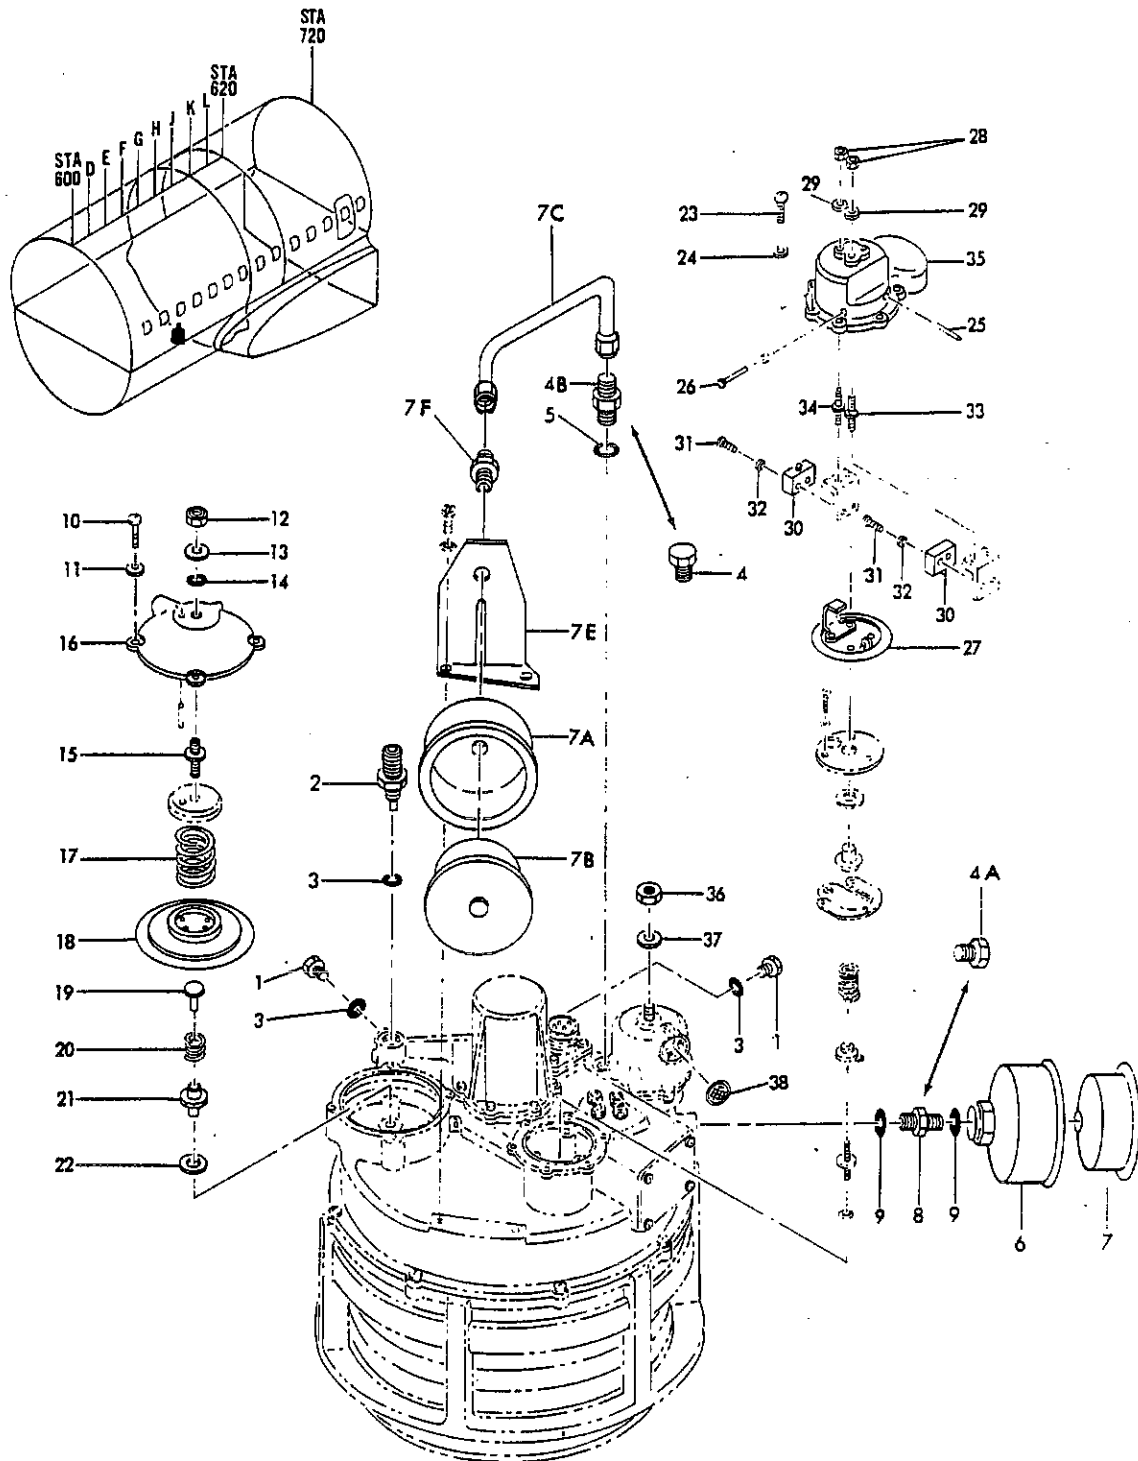


FIGURE 62H. VALVE ASSY, CABIN AIR PRESSURE SAFETY





PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
62H	103374-1-1	VALVE ASSY, CABIN AIR PRESSURE SAFETY (V70210) (SAME AS BAC SPEC NO. 10-3272-15) (SEE FIG. 37, ITEM 3 AND FIG. 38, ITEM 4)		RF
M 1	AN814-4DL	. PLUG AND BLEEDER.		2
M 2	137941	. NOZZLE, AIR JET PUMP (V70210)		1
M 3	MS28778-4	. PACKING		3
M 4	AN814-6DL	. PLUG AND BLEEDER.		1
M 5	MS28778-6	. PACKING		1
M 6	135157-4	. FILTER ASSY, AIR (V70210)		1
M 7	CU79030	. . ELEMENT, FILTER (V40912).		1
M 8	136498	. FITTING, AIR FILTER (V70210).		1
M 9	MS28778-4	. PACKING		2
M 10	AN500A6-6	. SCREW		4
M 11	S8157C82-020A	. WASHER, SPECIAL 0.020 IN. THICK (V70210).		4
M 12	S8079-3	. NUT, ADJUSTMENT NEEDLE LOCKING (V70210) (ALTERED FROM AN345-10)		1
M 13	AN960PD10L	. WASHER.		1
M 14	AN622783	. PACKING		1
M 15	96696-1	. SCREW, ADJUSTMENT (V70210).		1
M 16	137179-4	. HOUSING ASSY, PNEUMATIC RELAY (V70210).		1
M 17	135572	. SPRING, COMPRESSION (V70210).		1
M 18	135584	. DIAPHRAGM ASSY, RELAY (V70210).		1
M 19	139130	. VALVE, METERING (V70210).		1
M 20	135068	. SPRING, COMPRESSION (V70210).		1
M 21	139129	. SEAT, METERING VALVE (V70210)		1
M 22	S8157H98-020	. WASHER, SPECIAL 0.030 IN. THICK (V70210).		1
M 23	AN500AD6-7	. SCREW		6
M 24	S8157C207-030A	. WASHER, SPECIAL 0.030 IN. THICK (V70210).		6
M 25	MS24665-22	. PIN		1
M 26	136918	. PIN, STRAIGHT HEADED (V70210)		1
M 27	136637-1	. DIAPHRAGM ASSY, OVERPRESSURE AND VACUUM SWITCH. . . . (V70210)		1
M 28	S8079C632	. NUT, ADJUSTMENT NEEDLE LOCKING (V70210) (ALTERED FROM AN340C6)		2
M 29	AN960PD6L	. WASHER.		2
M 30	16-130034	. SWITCH, SENSITIVE SUBMINIATURE (V04426) ATTACHING PARTS		2
M 31	AN515C2-6	. SCREW		4
M 32	AN936A2	. WASHER.		4
M 33	136677-1	. SCREW, ADJUSTMENT (V70210).		1
M 34	136677-2	. SCREW, ADJUSTMENT (V70210).		1
M 35	136629	. HOUSING ASSY, PRESSURE SWITCH (V70210).		1
M 36	S8079-4R	. NUT, ADJUSTMENT NEEDLE LOCKING (V70210) (ALTERED FROM AN316-4R)		1
M 37	AN960PD416L	. WASHER.		1
M 38	91610-22	. SCREEN, FILTERED BLEED SCREW (V70210)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
707
PARTS CATALOG (MAINTENANCE)

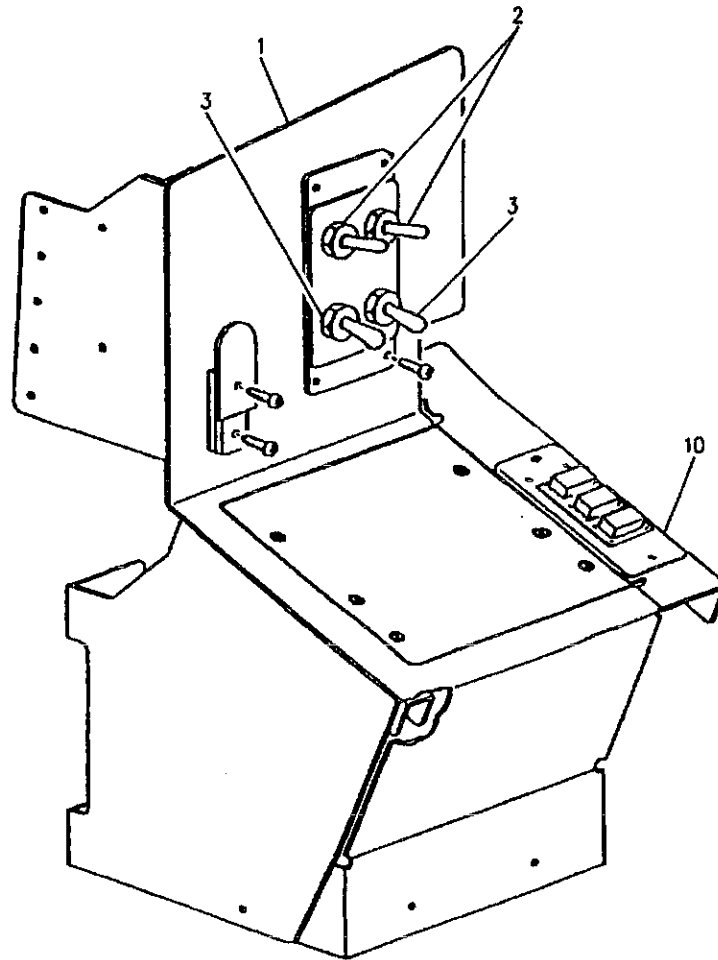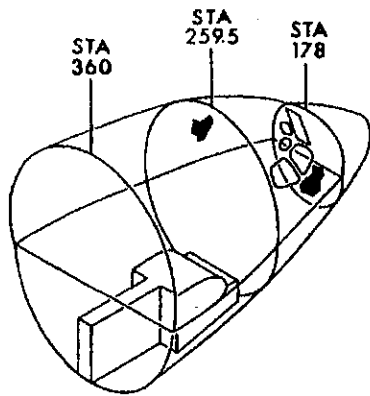

A 2105071 REV 272

FIGURE 71. PANEL INSTL, PILOTS AUXILIARY EQUIPMENT (AIR CONDITIONING ONLY)

DETAILED PARTS LIST
21-05-71
PAGE 0

21-05-71

NOV 21/01

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R R R R R R R R R R	71	65-63209-1	PANEL INSTL, PILOTS AUXILIARY EQUIPMENT (LH) (AIR . . . CONDITIONING ONLY) (SEE 25-1, FIG. 2J, ITEM 35 AND 25-5, FIG. 14B, ITEM 1)							5199	RF
		65-63209-1	PANEL INSTL, PILOTS AUXILIARY EQUIPMENT (LH) (AIR . . . CONDITIONING ONLY) (DELETED BY RAF MOD 7211.019-4) (SEE 25-5, FIG. 14B)							0150	RF
		65-63209-2	PANEL INSTL, COPILOTS AUXILIARY EQUIPMENT (RH) (AIR . . . CONDITIONING ONLY) (SEE 25-1, FIG. 2J, ITEM 36 AND 25-5, FIG. 14E, ITEM 1)							5199	RF
		65-63209-2	PANEL INSTL, PILOTS AUXILIARY EQUIPMENT (RH) (AIR . . . CONDITIONING ONLY) (DELETED BY RAF MOD 7211.019-4) (SEE 25-5, FIG. 14E)							0150	RF
		391-34-50-73971-001	PANEL INSTL, PILOTS AUXILIARY EQUIPMENT (LH) (AIR . . . CONDITIONING ONLY) (VZ0031) (65-63209-1 MODIFIED BY RAF MOD 7211.019-225) (ADDED BY RAF MOD 7211.019-4) (SEE 25-5, FIG. 14B ITEM 1)							0150	RF
		391-34-50-73971-002	PANEL INSTL, PILOTS AUXILIARY EQUIPMENT (RH) (AIR . . . CONDITIONING ONLY) (VZ0031) (65-63209-2 MODIFIED BY RAD MOD 7211.019-225) (ADDED BY RAF MOD 7211.019-4) (SEE 25-5, FIG. 14E, ITEM 1)							0150	RF
	1	65-63209-11	. PANEL ASSY, (AIR CONDITIONING ONLY) (LH ONLY)								RF
	1	65-63209-12	. PANEL ASSY, (AIR CONDITIONING ONLY) (RH ONLY)								RF
	10	391-23-50-73995-001	. PANEL ASSY, EXTENSION AUDIO SELECT (VZ0031) (ADDED BY RAF MOD 7211.019-4) (SEE 23-02, FIG. 62C FOR BREAKDOWN)							0150	RF
			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

RAF
NOV 21/01

21-05-71

DETAILED PARTS LIST
21-05-71
PAGE 1


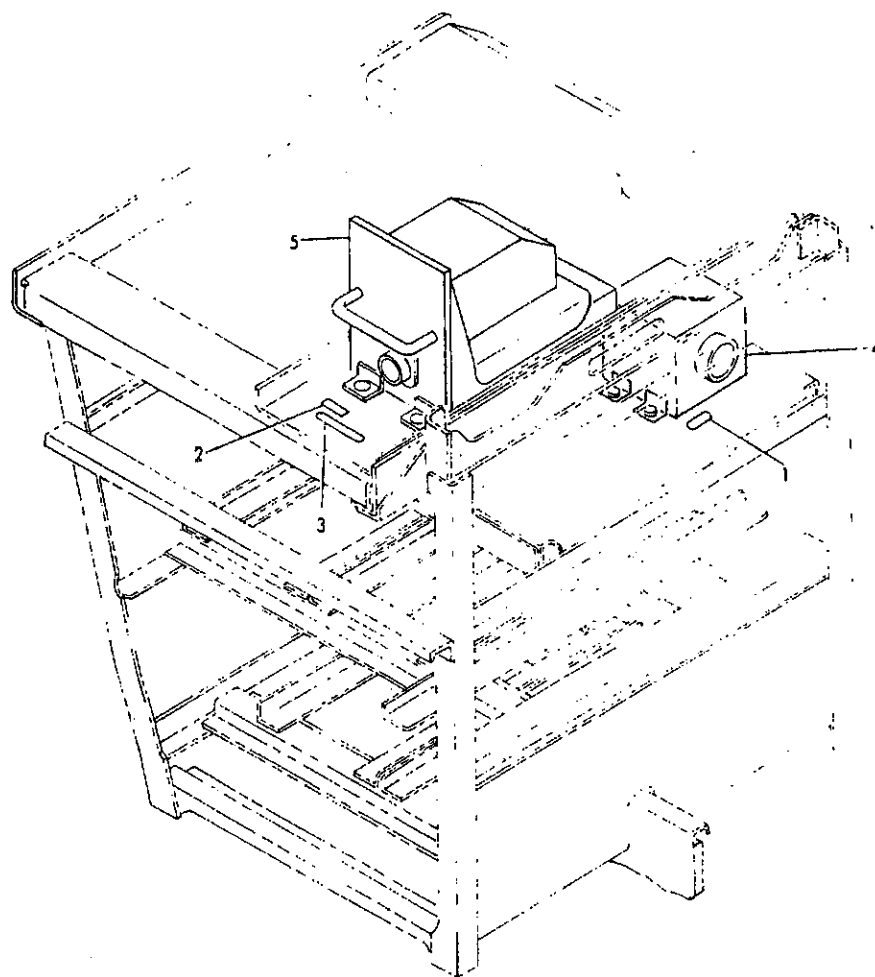


FIGURE 82. EQUIPMENT INSTL, STATION 335 J5 ELECTRICAL (AIR CONDITIONING ONLY)

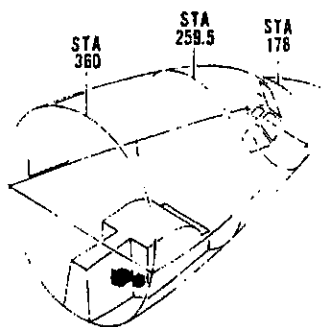

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
82	65-69905-1	EQUIPMENT INSTL, STATION 395 J5 ELECTRICAL (VARIABLE. .							5199	RF
		DWG;65-69905-5002) (AIR CONDITIONING ONLY) (SEE								
		24-3, FIG. 1A, ITEM 4 AND 24-3, FIG. 1C, ITEM 4)								
1	BAC27CEE92	. MARKER-ALUMINUM FOIL, M349.							5199	1
4	10-60789-2	. CONTROL UNIT, VALVE AND DAMPER POSITION INDICATOR . .							5199	1
		ATTACHING PARTS								
	BACS12CB3-6	. SCREW							5199	4
		-----*								
		. FOR REFERENCE TO OTHER EQUIPMENT DETAILS, SEE NHA . .							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

STA 178 STA 259.5 STA 360

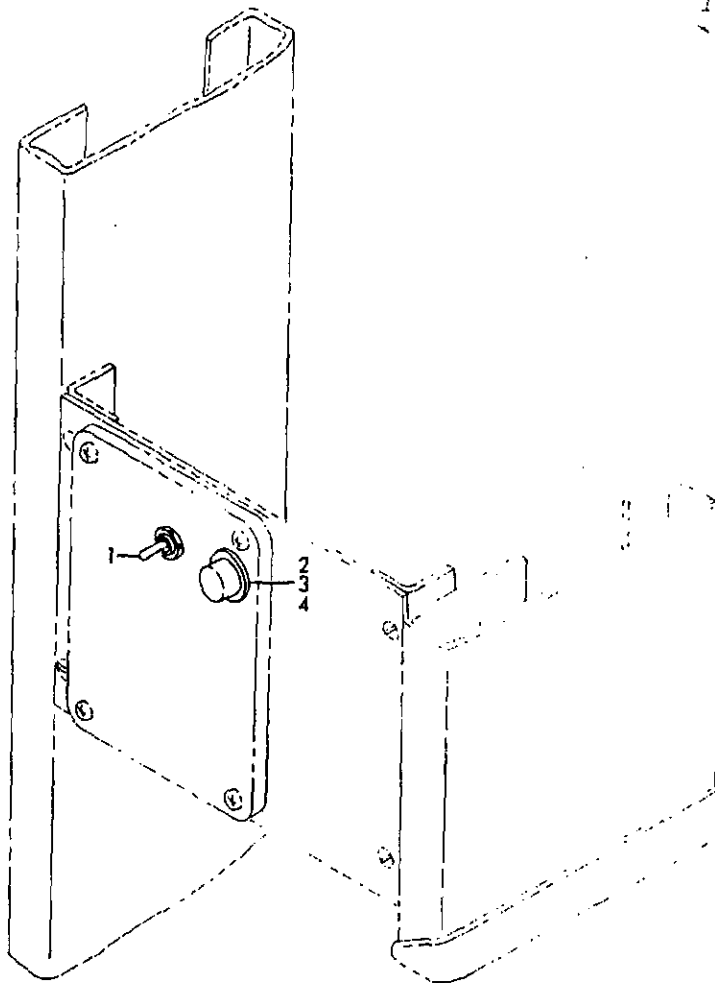


FIGURE 85. INTERPHONE INSTL, FLIGHT ENGINEER (AIR CONDITIONING ONLY)



PARTS CATALOG

R R R R R R	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
	85	65-12201	INTERPHONE INSTL, FLIGHT ENGINEER (AIR CONDITIONING . . ONLY) (SEE 25-1, FIG. 1K, ITEM 101)							0150	RF
	1	MS35058-23	. SWITCH.							0150	1
	2	NE51	. LAMP, (V08806).							0150	1
	3	951308-933	. INDICATOR, LIGHT (V72619)							0150	1
	4	MS35337-40	. WASHER.							0150	2
			. FOR REFERENCE TO OTHER INTERPHONE DETAILS, SEE NHA. .							0150	
			MISSING ITEM NUMBERS ARE NOT APPLICABLE								



SECTION 06
SENSING DEVICES

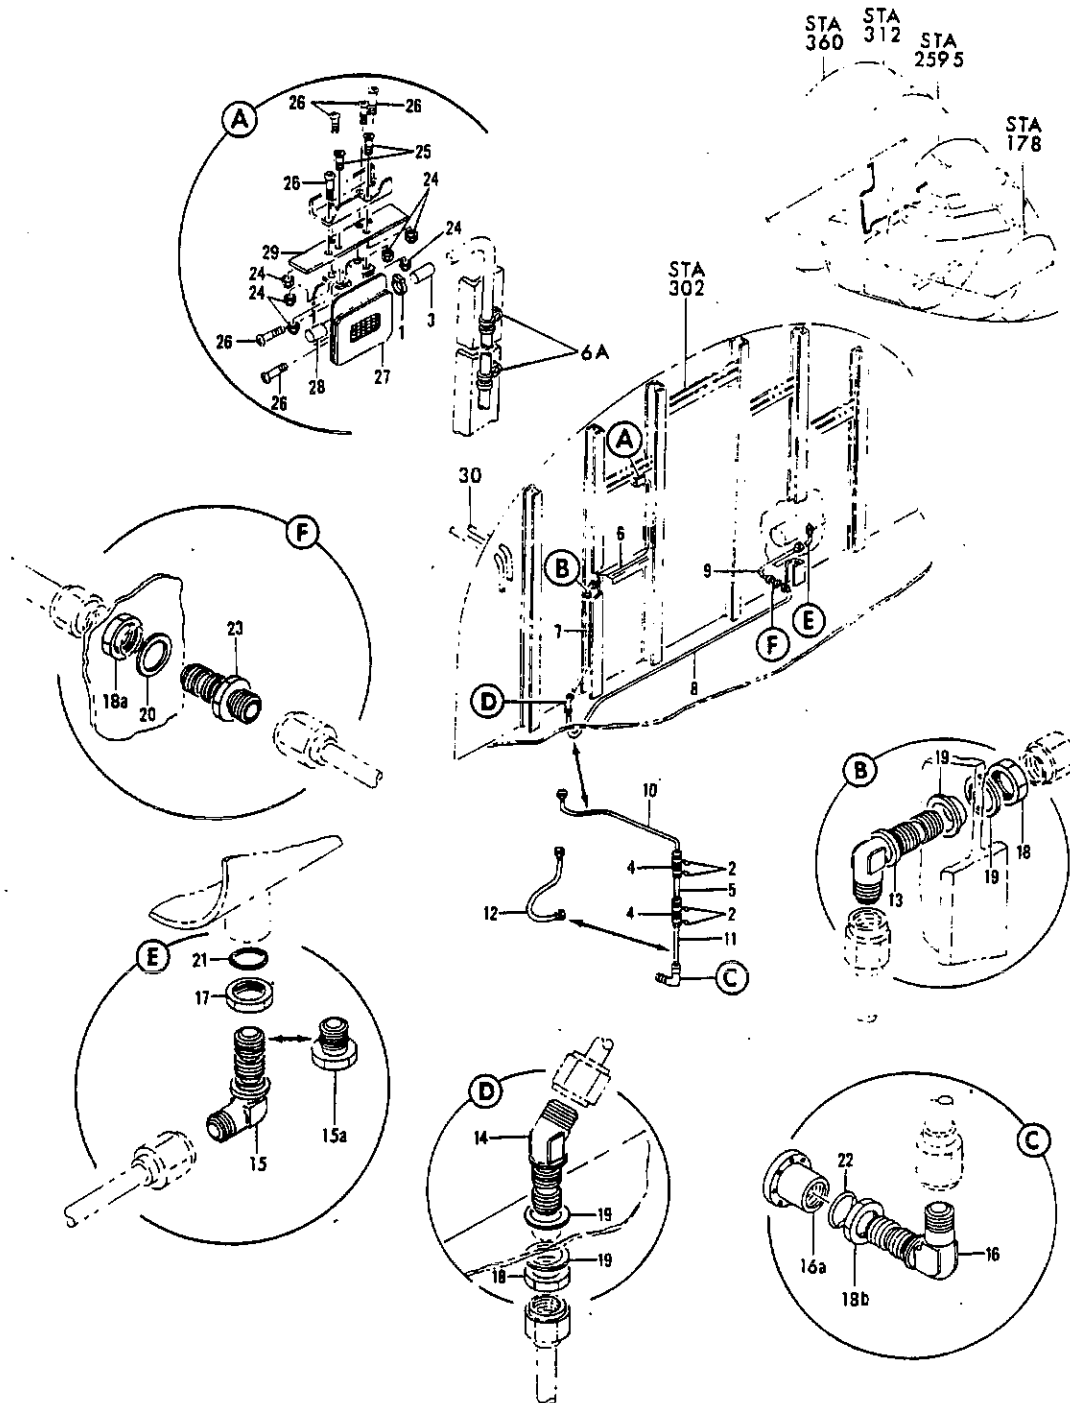


FIGURE 1. ELEMENT INSTL-CONTROL CABIN TEMPERATURE CONTROL SENSING



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1	65-3713-11		ELEMENT INSTL, CONTROL CABIN TEMPERATURE CONTROL. SENSING (SEE 21-2, FIG. 1, ITEM 5)		RF
1	AN737TW26		. CLAMP		1
2	AN737TW26		. CLAMP		4
3	65-3713-1		. HOSE, CONTROL CABIN TEMPERATURE CONTROL SENSING ELEMENT CONNECTING		1
4	65-3713-14		. HOSE, CONTROL CABIN TEMPERATURE CONTROL SENSING ELEMENT CONNECTING		2
5	66-22671-1		. VENTURI, COCKPIT TEMPERATURE SENSOR		1
6	65-3713-2		. TUBE ASSY, INSTRUMENT AIR VACUUM 3/8 .028 6061-T6		1
6A	BACC10DK6		. CLAMP		2
	NAS514PI032-17		ATTACHING PARTS		
	NAS49DD3-32		. SCREW		2
	BACN10JC3		. SPACER.		2
			. NUT		2
7	65-3713-3		. TUBE ASSY, INSTRUMENT AIR VACUUM 3/8 .028 6061-T6		1
	BACS13AP6		. SLEEVE. (OPTIONAL MS21922-6)		2
	MS21921D6		. NUT		2
10	65-3713-15		. TUBE ASSY, INSTRUMENT AIR VACUUM 3/8 IN. .028 6061-T6		1
12	65-3713-17		. TUBE ASSY, INSTRUMENT AIR VACUUM 3/8 .028 6061-T6		1
	BACS13AP6		. SLEEVE.		1
	MS21921D6		. NUT		1
13	MS21908D6		. ELBOW		1
14	MS21907D6		. ELBOW		1
18	AN924-6D		. NUT		2
19	AN960PD916L		. WASHER.		4
24	NAS679A3W		. NUT		6
25	AN510-10-4		. SCREW		2
26	NAS603-7		. SCREW		6
27	69-3155		. CASE ASSY, CONTROL CABIN TEMPERATURE CONTROL SENSING ELEMENT		1
28	10-3063-3		. ELEMENT, SENSING.		1
29	65-3713-8		. FILLER, CONTROL CABIN TEMPERATURE CONTROL SENSING ELEMENT		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

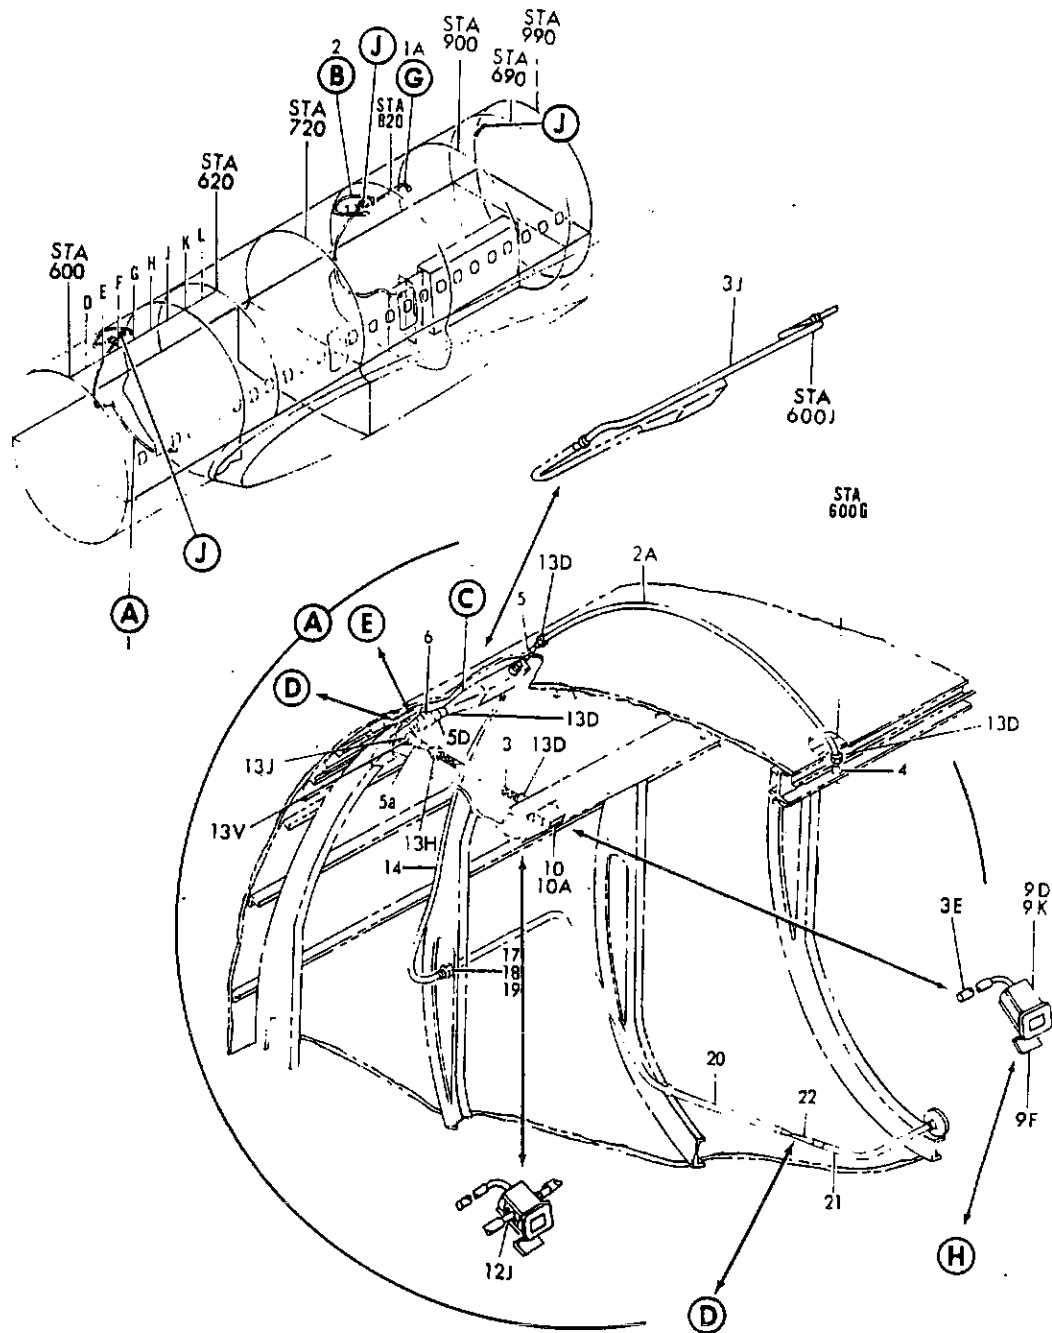


FIGURE 7B. SENSOR INSTL, SECT. 54 BULLNOSE HAT RACK TEMPERATURE (AIR CONDITIONING ONLY) (SHEET 1)

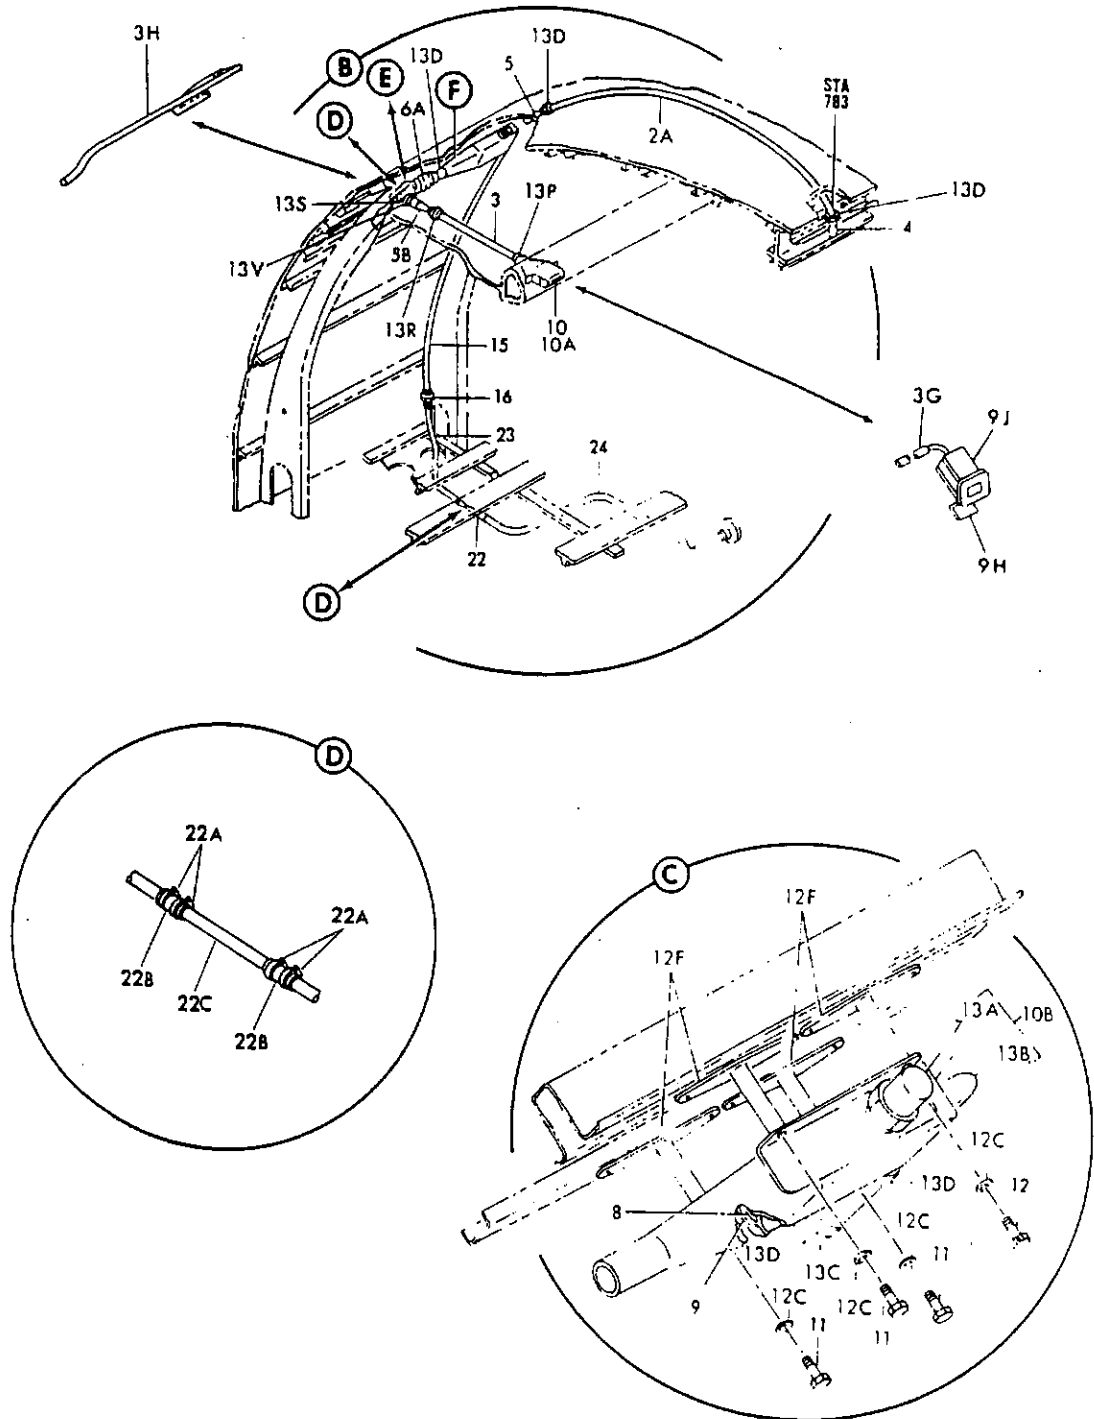


FIGURE 7B. SENSOR INSTL, SECT. 54 BULLNOSE HAT RACK TEMPERATURE (AIR CONDITIONING ONLY) (SHEET 2)

NOV 21/90

21-06-78

DETAILED PARTS LIST
21-06-78
PAGE 1

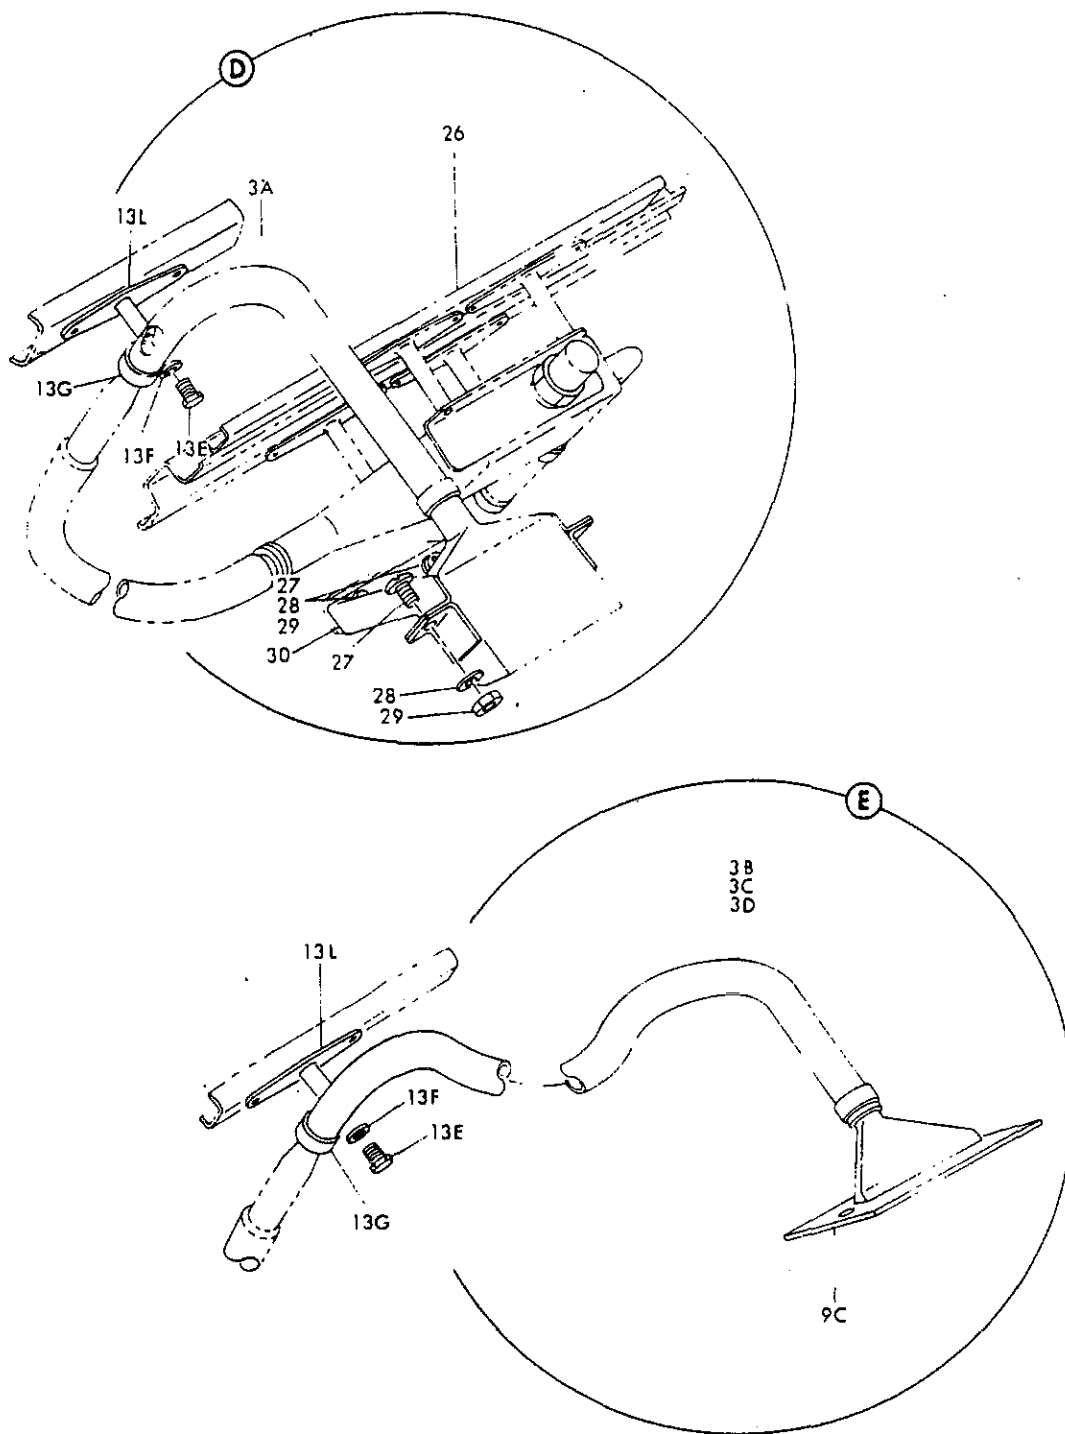


FIGURE 7B. SENSOR INSTL, SECTION 54 BULLNOSE HAT RACK TEMPERATURE (AIR CONDITIONING ONLY) (SHEET 3)

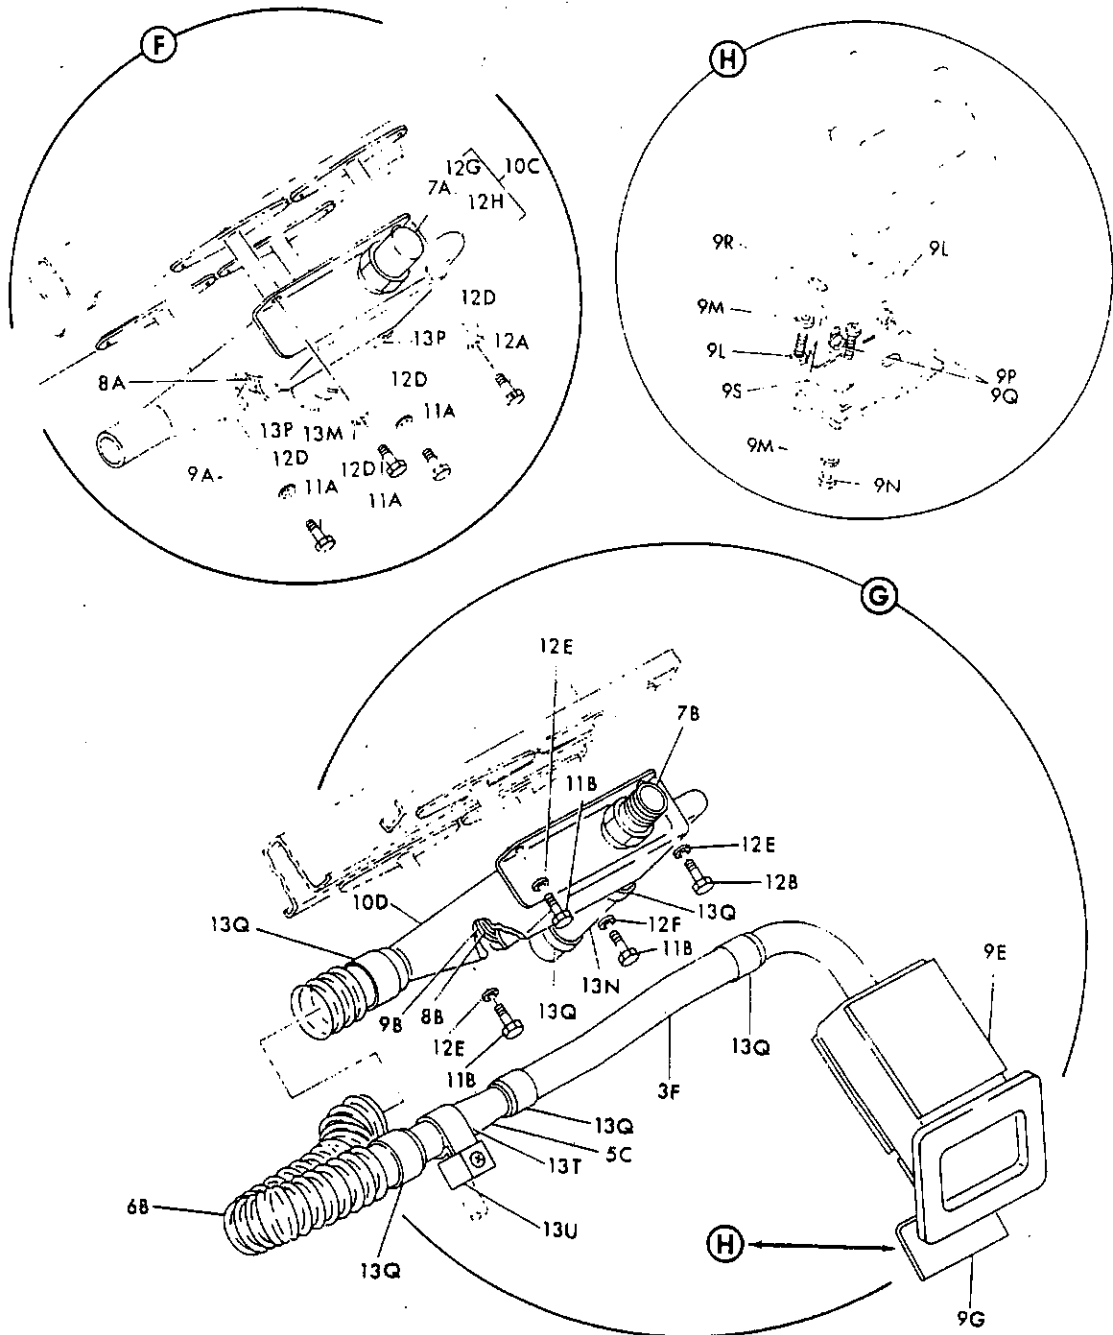


FIGURE 7B. SENSOR INSTL. SECTION 54 BULLNOSE HATRACK TEMPERATURE (AIR CONDITIONING ONLY) (SHEET 4)

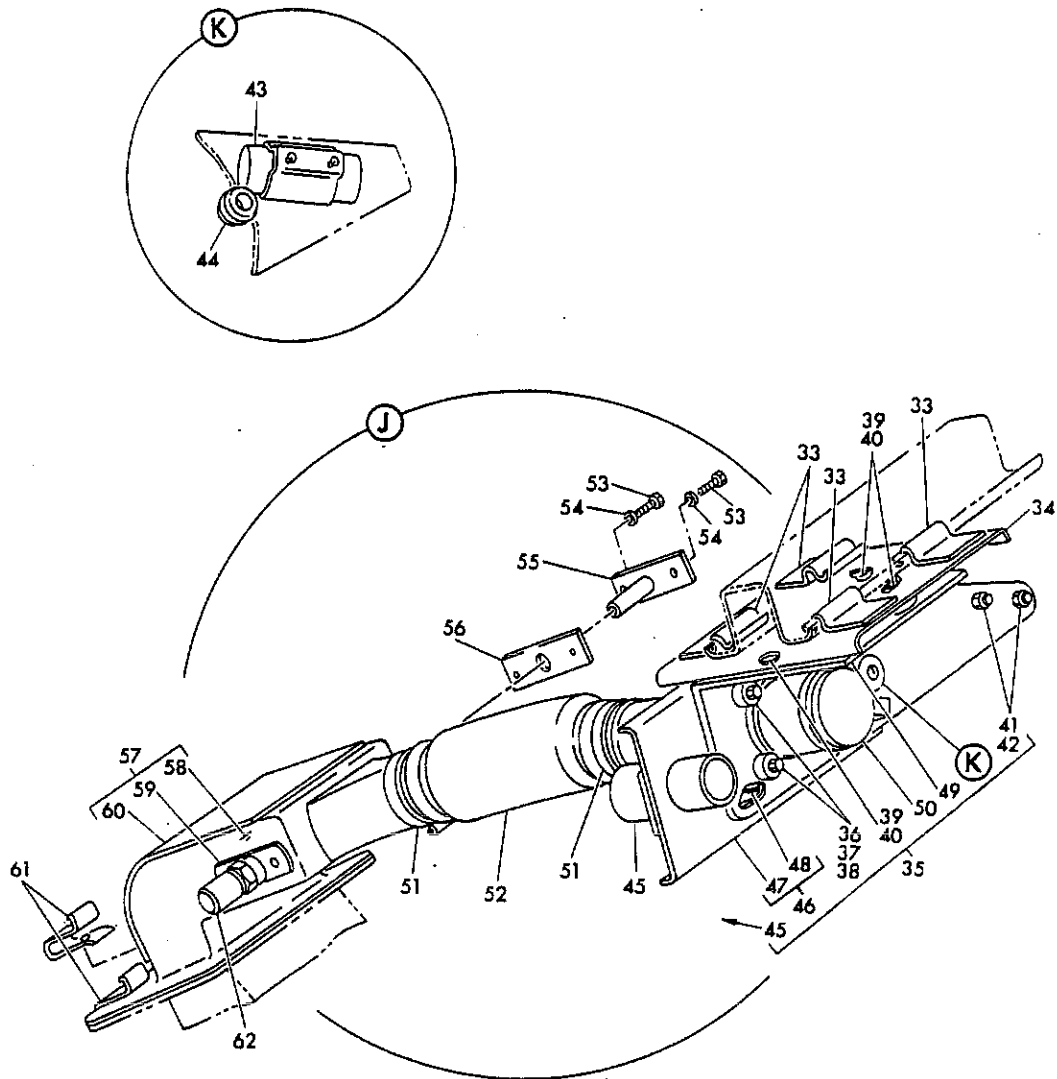


FIGURE 7B. SENSOR INSTL, SECTION 54 BULLNOSE HAT RACK TEMPERATURE (AIR CONDITIONING-ONLY) (SHEET 5)



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER		1	2	3	4	5	6	7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY	
R	7B	1	65-33184-35	SENSOR INSTL, SECTION 54 OVERHEAD STOWAGE TEMPERATURE .							0150	RF		
R		1	65-33184-84	SENSOR INSTL, SECTION 54 OVERHEAD STOWAGE TEMPERATURE .							5199	RF		
R		2	65-33184-36	SENSOR INSTL, SECTION 54 OVERHEAD STOWAGE TEMPERATURE .							0150	RF		
R		2	65-33184-85	SENSOR INSTL, SECTION 54 OVERHEAD STOWAGE TEMPERATURE .							5199	RF		
R	2A		65-33184-25	HOSE								1		
R	3		65-33184-26	HOSE							0150	1		
R	3B		65-33184-88	HOSE, (USED ON 65-33184-85, -107)							5199	1		
R	3C		65-33184-87	HOSE, (USED ON 65-33184-84, -106)							5199	1		
	4		65-33184-28	TUBE, AIR CONDITION 1/2 IN. .035 6061-T6								1		
	5		66-23498-1	TUBE, CABIN AIR TEMPERATURE SENSOR CONNECTOR								1		
	5A		66-23498-1	TUBE, CABIN AIR CONNECTOR								1		
R	5B		66-23498-1	TUBE, CABIN AIR CONNECTOR							0150	1		
	6		BE406-1	DUCT, FLEXIBLE AIR (V05399)								1		
				(OPTIONAL AD604-1 (V21868))										
	6		AD604-1	DUCT, FLEXIBLE AIR (V21868)								1		
				(OPTIONAL TO BE406-1 (V05399))										
	6A		BE406-1	DUCT, FLEXIBLE AIR (V05399)								1		
				(OPTIONAL AD604-1 (V21868))										
	6A		AD604-1	DUCT, FLEXIBLE AIR (V21868)								1		
				(OPTIONAL BE406-1 (V05399))										
	7		MS28034-1	BULB								1		
	7A		MS28034-1	BULB								1		
	8		66-19331-1	GASKET								1		
	8A		66-19331-1	GASKET								1		
	9		69-44701-1	COVER								1		
	9A		69-44701-1	COVER								1		
				ATTACHING PARTS										
R			AN3-4A	BOLT							0150	2		
R			BACB30NE3-4	BOLT							5199	2		
R			AN960PD10	WASHER							0150	2		
R			AN960PD10L	WASHER							5199	2		
				-----*										
R	9C		69-64818-1	ADAPTER, HOSE SENSOR							5199	1		
R	9D		69-65445-6	BOX ASSY, MAIN CABIN SENSOR							5199	1		
				ATTACHING PARTS										
R			BACS12CB3-8	SCREW							5199	2		
R			AN960PD10L	WASHER							5199	2		
				-----*										
R	9J		69-65445-5	BOX ASSY, MAIN CABIN SENSOR							5199	1		
				ATTACHING PARTS										
R			BACS12CB3-8	SCREW							5199	2		
R			AN960PD10L	WASHER							5199	2		
				-----*										
R	9L		BACS12CB3-8	SCREW							5199	4		
R	9L		BACB30NE3-3	BOLT							5199	4		
R	9M		AN960PD10L	WASHER							5199	8		
R	9N		BACN10JC3	NUT							5199	4		
R	9P		BACS12CB3	SCREW							5199	4		
R	9Q		AN960PD10	WASHER							5199	4		
R	9R		69-65443-3	BRACKET							5199	2		
R	9S		69-68094-1	BRACKET ASSY							5199	2		
R	10		69-36788-1	DUCT ASSY, CABIN AIR INLET							0150	1		
				ATTACHING PARTS										
R			AN3-3A	BOLT							0150	2		
R			AN960PD10L	WASHER							0150	2		
				-----*										
R	10A		69-36789-1	DUCT							0150	1		
	10B		69-36784-1	SENSOR ASSY, CABIN AIR TEMP								1		
	10C		69-36784-1	SENSOR ASSY, CABIN AIR								1		
				ATTACHING PARTS										
R	11		AN3-3A	BOLT							0150	3		
R	11		BACB30NE3-2	BOLT							5199	3		
R	11A		AN3-3A	BOLT							0150	3		
R	11A		BACB30NE3-2	BOLT							5199	3		
R	12		AN3H3A	BOLT							0150	1		
R	12		BACB30NE3H2	BOLT							5199	1		
R	12A		AN3H3A	BOLT							0150	1		
R	12A		BACB30NE3H2	BOLT							5199	1		
R	12C		AN960D10L	WASHER							0150	4		
MISSING ITEM NUMBERS ARE NOT APPLICABLE														

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE						EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6		
R R R R	7B 12C	AN960D10	.	WASHER.	.	.	.	5199	4
	12D	AN960PD10L	.	WASHER.	.	.	.	0150	4
	12D	AN960PD10	.	WASHER.	.	.	.	5199	4
	12F	BACN10NX3-12	.	NUT	.	.	.		4
			.	DUCT.	.	.	.		1
	12G	69-36786-1	.	TUBE ASSY	.	.	.		1
	12H	69-36787-1	.	DUCT.	.	.	.		1
	13A	69-36786-1	.	TUBE ASSY	.	.	.		1
R R R	13B	69-36787-1	.	HOSE.	.	.	.	0151	1
	13C	65-33184-16	.	HOSE.	.	.	.	5199	1
	13C	65-33184-79	.	CLAMP	.	.	.		6
	13D	AN737TW30	.	(OPTIONAL 6203-30 (V81646))	.	.	.		
	13D	6203-30	.	CLAMP, (V81646)	.	.	.		6
			.	(OPTIONAL TO AN737TW30)	.	.	.		
	13E	BACB3ONE3-3	.	BOLT.	.	.	.	5199	1
	13F	AN960PD10L	.	WASHER.	.	.	.	5199	1
R R R	13G	AN742D9	.	CLAMP	.	.	.	5199	1
	13H	AN737TW30	.	CLAMP	.	.	.		1
			.	(OPTIONAL 6203-30 (V81646))	.	.	.		
	13H	6203-30	.	CLAMP, (V81646)	.	.	.		1
			.	(OPTIONAL TO AN737TW30)	.	.	.		
	13L	BACN10NX3-12	.	NUT	.	.	.	5199	1
	13M	65-33184-16	.	HOSE.	.	.	.	0151	1
	13M	65-33184-79	.	HOSE, (USED ON 65-33184-73, -74, -81, -84, -85, -106, -107)	.	.	.	5199	1
	13P	AN737TW30	.	CLAMP	.	.	.		6
			.	(OPTIONAL 6203-30 (V81646))	.	.	.		
	13P	6203-30	.	CLAMP, (V81646)	.	.	.		6
			.	(OPTIONAL TO AN737TW30)	.	.	.		
	13R	AN737TW30	.	CLAMP	.	.	.		1
			.	(OPTIONAL 6203-30 (V81646))	.	.	.		
	13R	6203-30	.	CLAMP, (V81646)	.	.	.		1
			.	(OPTIONAL TO AN737TW30)	.	.	.		
	13S	BACC10DK12	.	CLAMP	.	.	.		1
			.	ATTACHING PARTS	.	.	.		
		BACS12CB3-8	.	SCREW	.	.	.		1
		AN960PD10L	.	WASHER.	.	.	.		1
		BACN10JC3	.	NUT	.	.	.		1
			.	CLAMP	.	.	.	5199	1
			.	ATTACHING PARTS	.	.	.		
		BACS12CB3-8	.	SCREW	.	.	.	5199	1
R R R R		AN960PD10L	.	WASHER.	.	.	.	5199	1
		BACN10JC3	.	NUT	.	.	.	5199	1
			.	CLAMP	.	.	.	5199	1
			.	ATTACHING PARTS	.	.	.		
	14	65-33184-52	.	TUBE ASSY, AIR CONDITION 1/2 IN. .035 6061-T6 (USED ON 65-33184-35 AND -73)	.	.	.	0150	1
	14	65-33184-52	.	TUBE ASSY, AIR CONDITION 1/2 IN. .035 6061-T6 (USED ON 65-33184-81, -84, -90, -99, -106, -113)	.	.	.	5199	1
	15	65-33184-53	.	TUBE ASSY, AIR CONDITION 1/2 IN. .035 6061-T6 (USED ON 65-33184-36, -74, -85, -91, -100, -107)	.	.	.		1
		MS21921D8	.	NUT	.	.	.		2
		BACS13AP8	.	SLEEVE.	.	.	.		2
	16	MS21902D8	.	UNION, (USED ON 65-33184-36, -74, -85, -91, -100, -107)	.	.	.		1
	17	MS21924D8	.	UNION, (USED ON 65-33184-35, -73, -81, -106, -113)	.	.	.		1
	18	AN960D1216	.	WASHER, (USED ON 65-33184-35, -106)	.	.	.	0150	1
R R	19	AN924-8D	.	NUT, (USED ON 65-33184-35, -106)	.	.	.	0150	1
	20	65-33184-40	.	TUBE ASSY, AIR CONDITION 1/2 IN. .035 6061-T6 (USED ON 65-33184-35, -73, -81, -84, -90, -99, -106, -113)	.	.	.		1
	21	65-33184-41	.	TUBE ASSY, AIR CONDITION 1/2 IN. .035 6061-T6 (USED ON 65-33184-35, -73, -81, -84, -90, -99, -106, -113)	.	.	.		1
		MS21921D8	.	NUT	.	.	.		2
		BACS13AP8	.	SLEEVE.	.	.	.		2
	22	66-21743-2	.	VENTURI, FOLDING HAT RACK TEMPERATURE CONTROL SYSTEM	.	.	.		1
	23	65-33184-44	.	TUBE ASSY, AIR CONDITION 1/2 IN. .035 6061-T6 (USED ON 65-33184-36, -74, -85 AND -91, -100, -107)	.	.	.		1
	24	65-33184-45	.	TUBE ASSY, AIR CONDITION 1/2 IN. .035 6061-T6 (USED ON 65-33184-36, -74, -85 AND -91, -100, -107)	.	.	.		1
		MS21921D8	.	NUT	.	.	.		4
		BACS13AP8	.	SLEEVE.	.	.	.		4

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R	78 26	65-33184-27		. CHANNEL, (USED ON 65-33184-73, -81, -84, -106)	5199	1
	26	65-33184-62		. CHANNEL, (USED ON 65-33184-74, -85, -107)	5199	1
		BACR15885D		ATTACHING PARTS . RIVET -----*----- . FOR REFERENCE TO OTHER SENSOR DETAILS, SEE NHA. . . .	5199	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

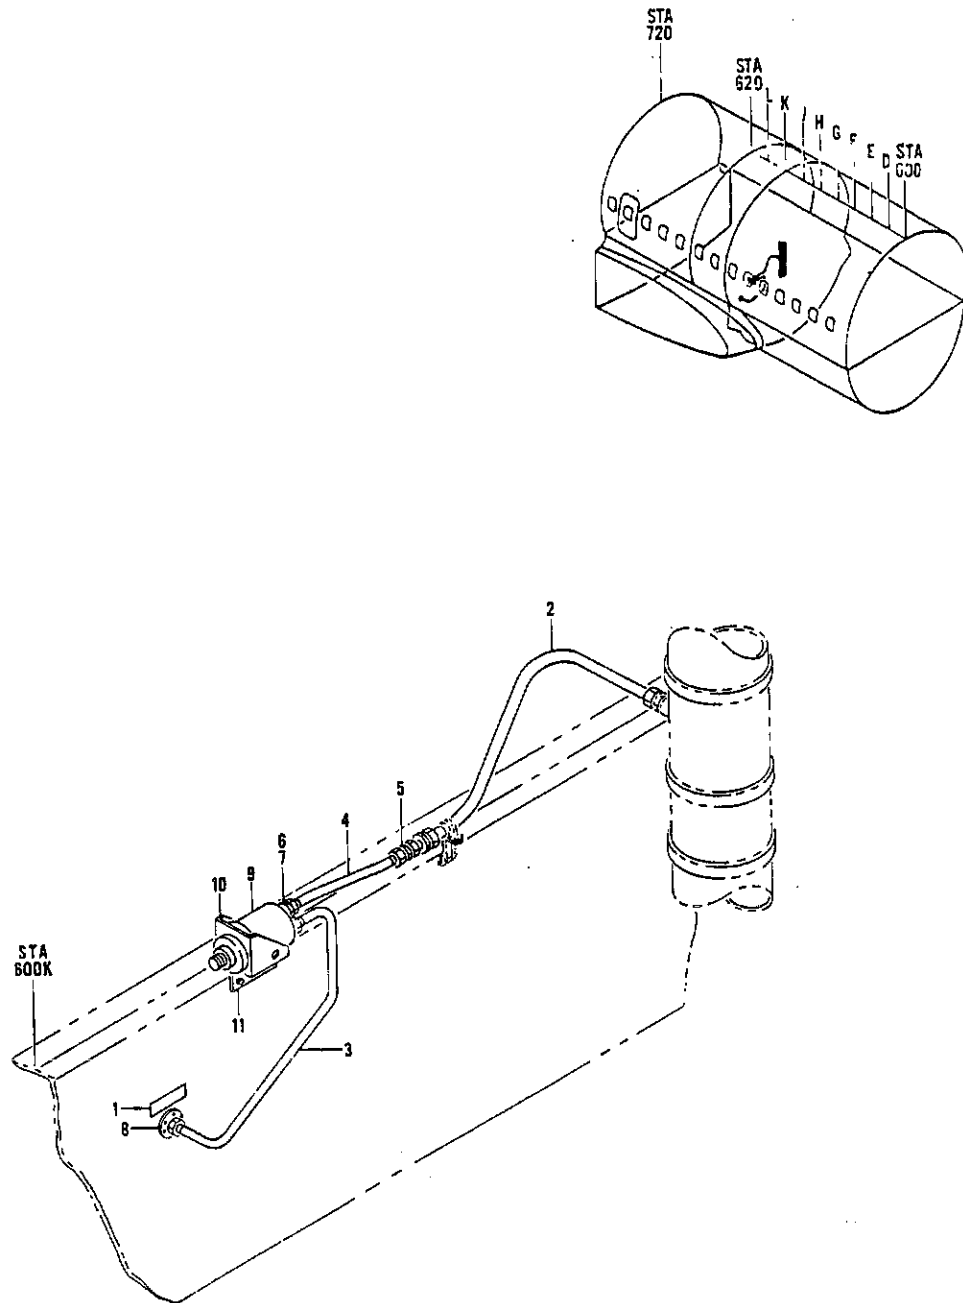


FIGURE 8. SENSING INSTL, AIR DUCT COMPRESSOR PRESSURE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8	65-22597-1		SENSING INSTL, AIR DUCT COMPRESSOR PRESSURE (SEE 21-2, FIG. 2, ITEM 27)		RF
1	BACM10L2AT		. MARKER-ALUMINUM FOIL, LEGEND (ONE WORD)		1
2	C9423-198		. HOSE, FLEXIBLE (V81481)		1
			(OPTIONAL TO 17241-198 (V16519))		
2	17241-198		. HOSE, FLEXIBLE (V16519)		1
			(OPTIONAL C9423-198 (V81481))		
3	65-22597-2		. TUBE ASSY, AIR CONDITIONING 3/8 .035 6061-T6.		1
4	65-22597-3		. TUBE ASSY, AIR CONDITIONING 3/8 .035 6061-T6.		1
	MS21922-6		. SLEEVE.		2
	BACN10CS6DN		. NUT		2
5	MS21902-6		. UNION		1
6	MS21916-6-4		. REDUCER		2
7	BACF11K4		. PACKING		2
8	BACF22P6		. FLANGE.		1
9	ST9F		. TRANSMITTER, AIR PRESSURE (V61349).		1
			ATTACHING PARTS		
	BACS12AE8		. SCREW		4
	AN960D6		. WASHER.		12
			-----*		
10	66-31088		. BRACKET, PRESSURE TRANSMITTER MOUNTING.		1
			ATTACHING PARTS		
	AN3-4A		. BOLT.		4
	AN960D10L		. WASHER.		4
	NAS679A3W		. NUT		4
			-----*		
11	66-11579		. BRACKET, PRESSURE TRANSMITTER SUPPORT		1
			ATTACHING PARTS		
	AN4-5A		. BOLT.		2
	AN960D416		. WASHER.		2
	NAS679A4W		. NUT		2
			-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

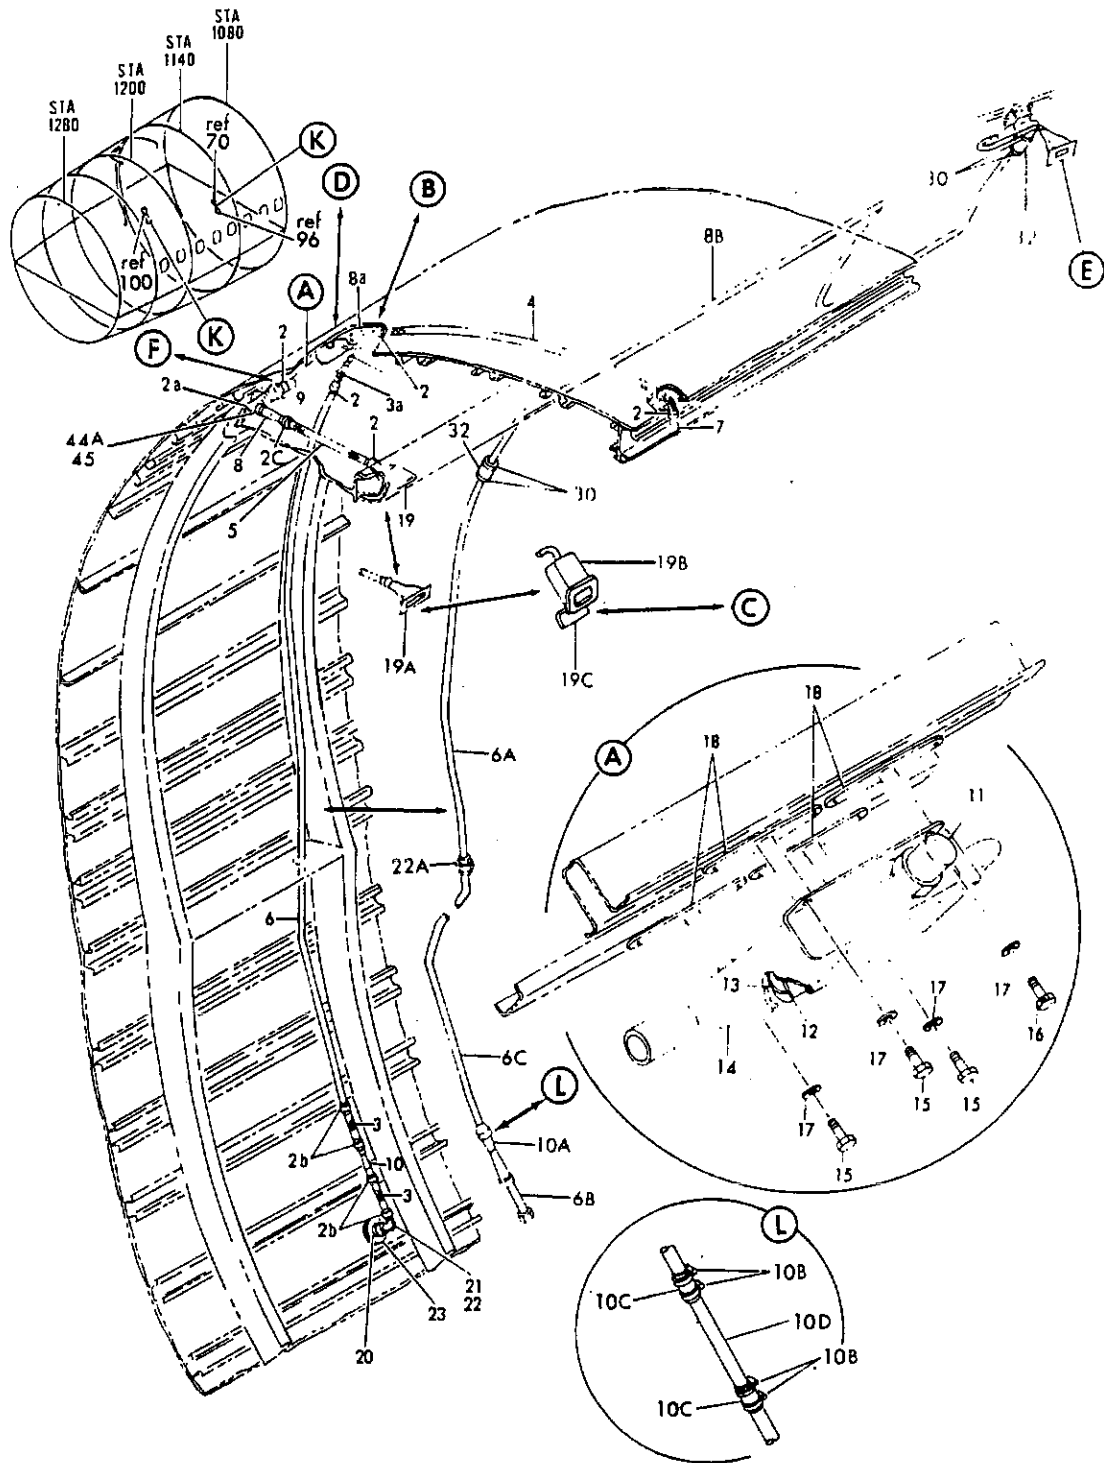


FIGURE 10. SENSOR INSTL, SECT. 57 BULB NOSE HATRACK TEMPERATURE (AIR CONDITIONING ONLY) (SHEET 1)

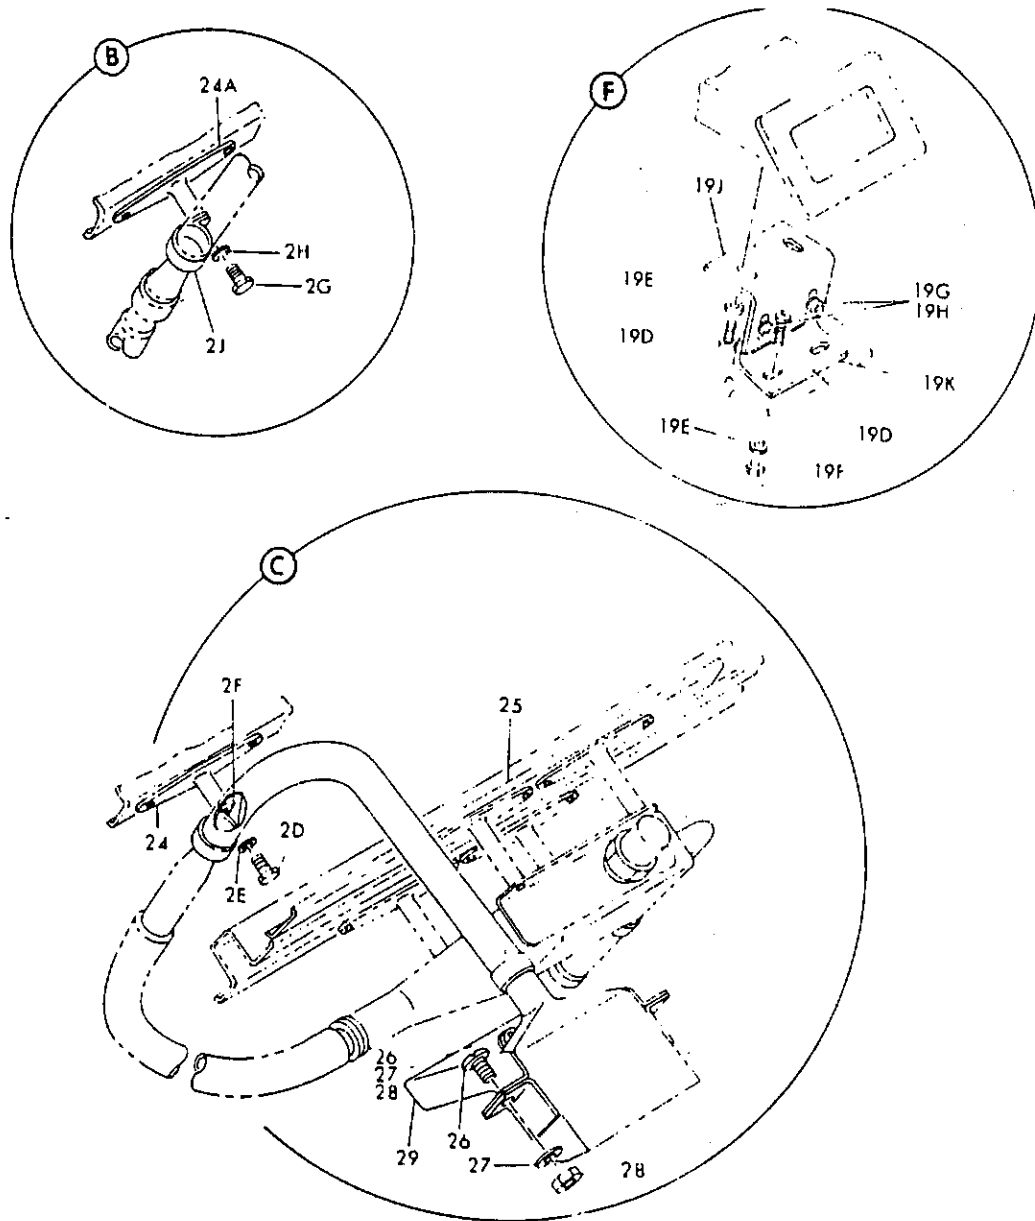


FIGURE 10. SENSOR INSTL, SECTION 57 OVERHEAD STOWAGE TEMPERATURE
(AIR CONDITIONING ONLY) (SHEET 2)

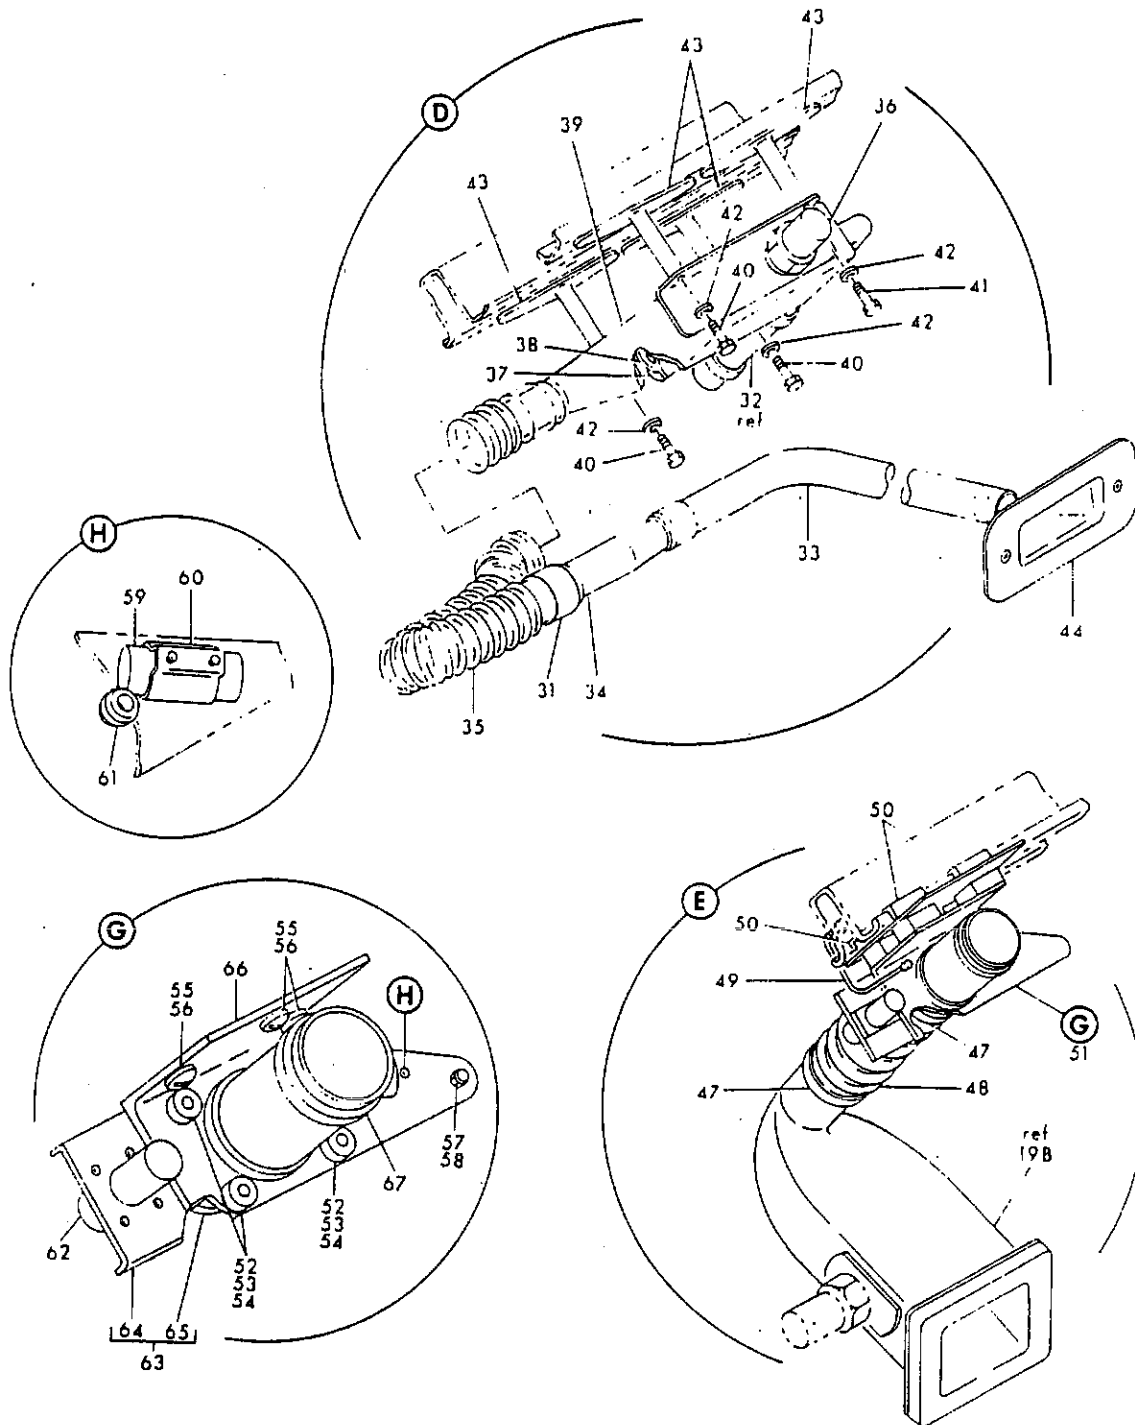


FIGURE 10. SENSOR INSTL, SECTION 57 OVERHEAD STORAGE TEMPERATURE (AIR CONDITIONING ONLY) (SHEET 3)

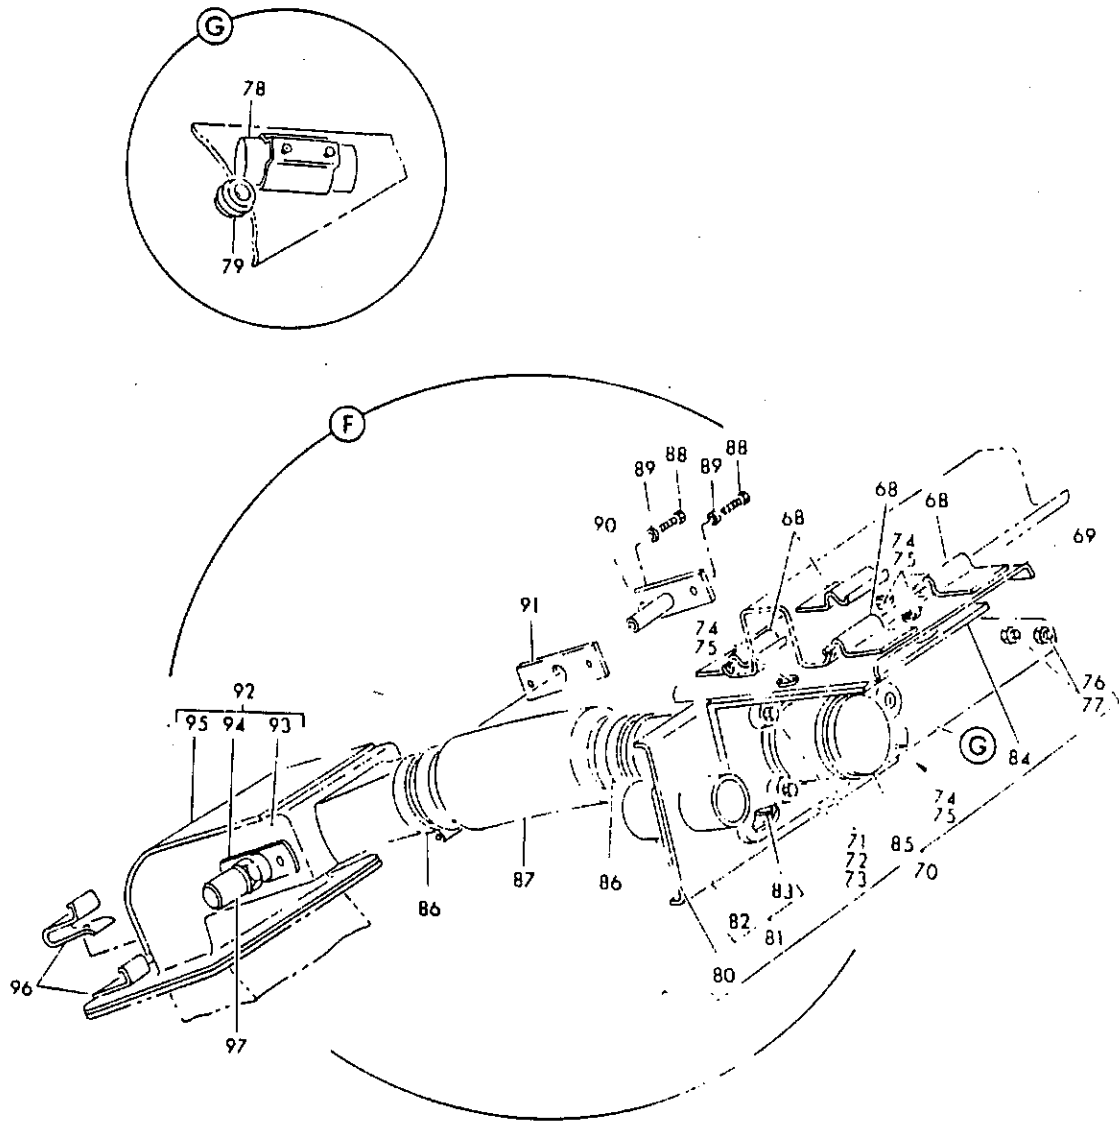


FIGURE 10. SENSOR INSTL, SECTION 57 OVERHEAD STORAGE
TEMPERATURE (AIR CONDITIONING ONLY) (SHEET 4)

NOV 21/90

21-06-10

DETAILED PARTS LIST
21-06-10
PAGE 3

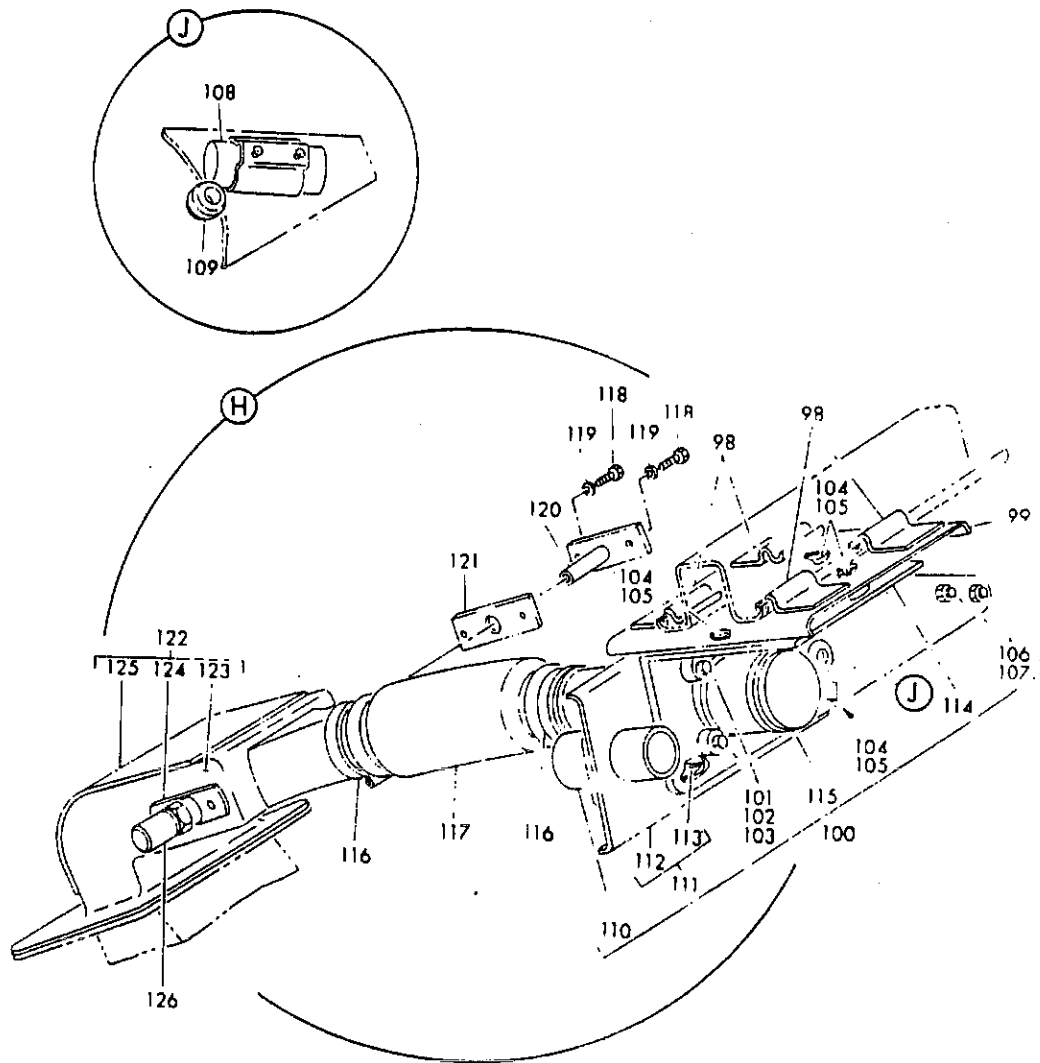


FIGURE 10. SENSOR INSTL, SECTION 57 OVERHEAD STOWAGE TEMPERATURE
(AIR CONDITIONING ONLY) (SHEET 5)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	10	65-33184-23	0150	RF
R		SENSOR INSTL, SECTION 57 OVERHEAD STOWAGE TEMPERATURE . (AIR CONDITIONING ONLY) (SEE 21-2, FIG. 3, ITEM 10)		
R		65-33184-86	5199	RF
R		SENSOR INSTL, SECTION 57 OVERHEAD STOWAGE TEMPERATURE . (SEE 21-2, FIG. 3, ITEM 10)		
	2	AN737TW30		6
		. CLAMP (OPTIONAL 6203-30 (V81646))		
	2	6203-30		6
		. CLAMP, (V81646) (OPTIONAL TO AN737W30)		
R	2A	BACCL0DK12	0150	1
		. CLAMP ATTACHING PARTS		
R		NAS603-15	0150	1
R		NAS42DD16	0150	1
		. SPACER.		

R	2C	AN737TW30	0150	1
		. CLAMP (OPTIONAL 6203-30 (V81646))		
R		6203-30	0150	1
R		. CLAMP, (V81646) (OPTIONAL TO AN737W30)		
R		*-----*		
R	3A	65-33184-16	0150	1
R	3A	65-33184-79	5199	1
R	4	65-33184-25		1
R	5	65-33184-26	0150	1
R	5	65-33184-89	5199	1
	6A	65-33184-30		1
	6B	65-33184-29		1
		MS21921D8		1
		BACSL3AP8		1
	7	65-33184-28		1
	8	66-23498-1		1
	8A	66-23498-1		1
	9	BE406-1		1
		. DUCT, FLEXIBLE AIR (V05399)		
		(OPTIONAL AD604-1 (V21868))		
	9	AD604-1		1
		. DUCT, FLEXIBLE AIR (V21868)		
		(OPTIONAL TO BE406-1 (V05399))		
	10A	66-21743-2		1
	11	MS28034-1		1
	12	10-3063-3		1
		. ELEMENT ATTACHING PARTS		
R		AN3-4A	0150	2
R		BACB30NE3-4	5199	2
		AN960PD10		2
R		AN960PD10L	5199	2
		. WASHER.		

	13	66-19331-1		1
	14	69-36784-1		1
		. GASKET. SENSOR ASSY, CABIN AIR TEMPERATURE.		
		. ATTACHING PARTS		
R	15	AN3-3A	0150	3
R	15	BACB30NE3-2	5199	3
R	16	AN3H3A	0150	1
R	16	BACB30NE3H-2	5199	1
R	17	AN960PD10L	0150	4
R	17	AN960PD10	5199	4
		. WASHER.		

	18	BACN10NX3-12		4
R	19	69-36788-1	0150	1
		. DUCT ASSY, CABIN AIR TEMPERATURE SENSOR INLET ATTACHING PARTS		
R		AN3-3A	0150	2
R		AN960PD10L	0150	2
		. BOLT. WASHER.		

R	19B	69-65445-5	5199	1
		. BOX ASSY, MAIN CABIN SENSOR ATTACHING PARTS		
R		BACSL2CB3-8	5199	2
R		AN960PD10L	5199	2
		. SCREW WASHER.		

R	19D	BACSL2CB3-8	5199	2
R		BACB30NE3-3	5199	2
R	19E	AN960PD10L	5199	4
R	19F	BACN10JC3	5199	2
R	19G	BACSL2CB3	5199	2
R	19H	AN960PD10	5199	2
R	19J	69-65443-3	5199	1
R	19K	69-68094-1	5199	1
	20	AN924-8D		1
	21	MS28778-8		1
	22	MS21908D8		1
		. NUT PACKING		
		. ELBOW		

		MISSING ITEM NUMBERS ARE NOT APPLICABLE		

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R	10 23	BACF22J8D	.	FLANGE		1
			.	ATTACHING PARTS		
		BACR15CE5D	.	RIVET		6
			.	*-----*		
	44A	BACCI0DK12	.	CLAMP	5199	1
	45	BACCI0DK8	.	CLAMP	5199	1
			.	ATTACHING PARTS		
		BACS12CB3-8	.	SCREW	5199	1
		AN960PD10L	.	WASHER	5199	1
		BACN10JC3	.	NUT	5199	1
			.	*-----*		
			.	FOR REFERENCE TO OTHER SENSOR DETAILS, SEE NHA. . . .	0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 08
GROUND SERVICE

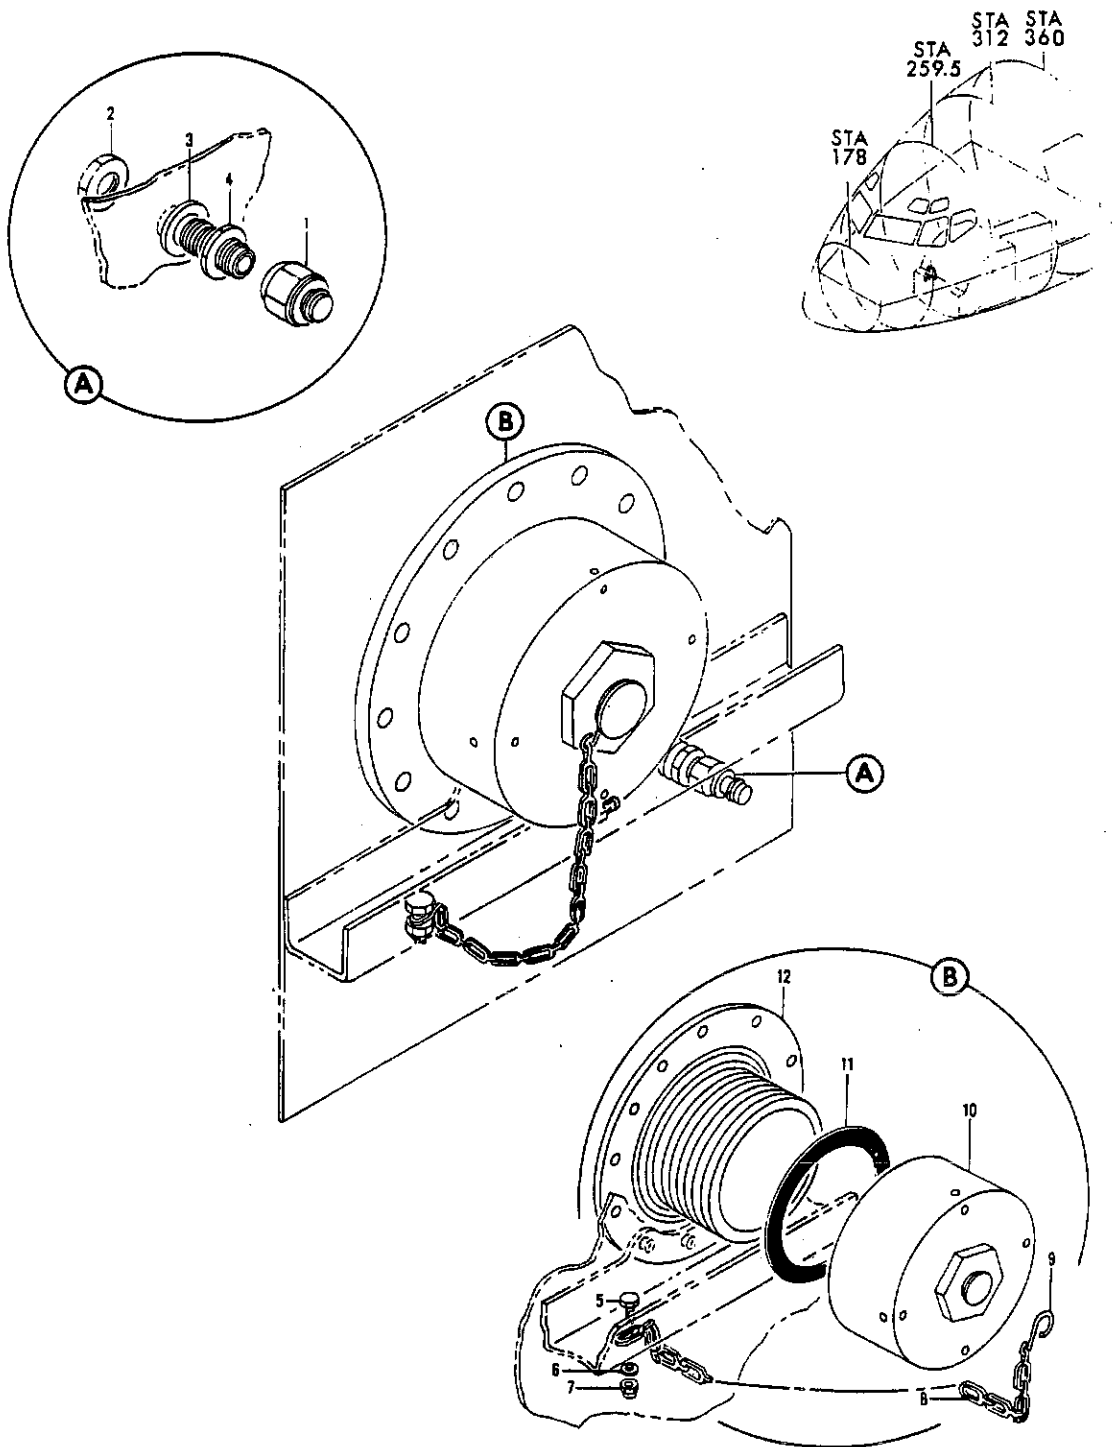


FIGURE 1. FITTING INSTL, CABIN LEAKAGE TEST PRESSURIZATION (AIR CONDITIONING ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1	5-87872-3000		FITTING INSTL, CABIN LEAKAGE TEST PRESSURIZATION (AIR . CONDITIONING ONLY) (SEE 21-2, FIG. 1, ITEM 6 AND 21-5, FIG. 90, ITEM 3)		RF
1	AN929-3		. CAP		1
2	AN924-3D		. NUT		1
3	AN960PD616		. WASHER.		1
4	AN832-3D		. UNION		1
5	AN3-3A		. BOLT.		1
6	AN960D10L		. WASHER.		1
7	NAS679A3W		. NUT		1
8	NAS1455B1-8C		. CHAIN		1
9	3-93044		. LINK, CABIN PRESSURE TEST CHAIN		1
10	5-96150-2000		. CAP, CABIN PRESSURE TEST.		1
11	3-93045		. GASKET, CABIN PRESSURE TEST		1
12	5-96149		. ADAPTER, CABIN PRESSURE TEST FITTING.		1
			. FOR REFERENCE TO OTHER FITTING DETAILS, SEE NHA		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

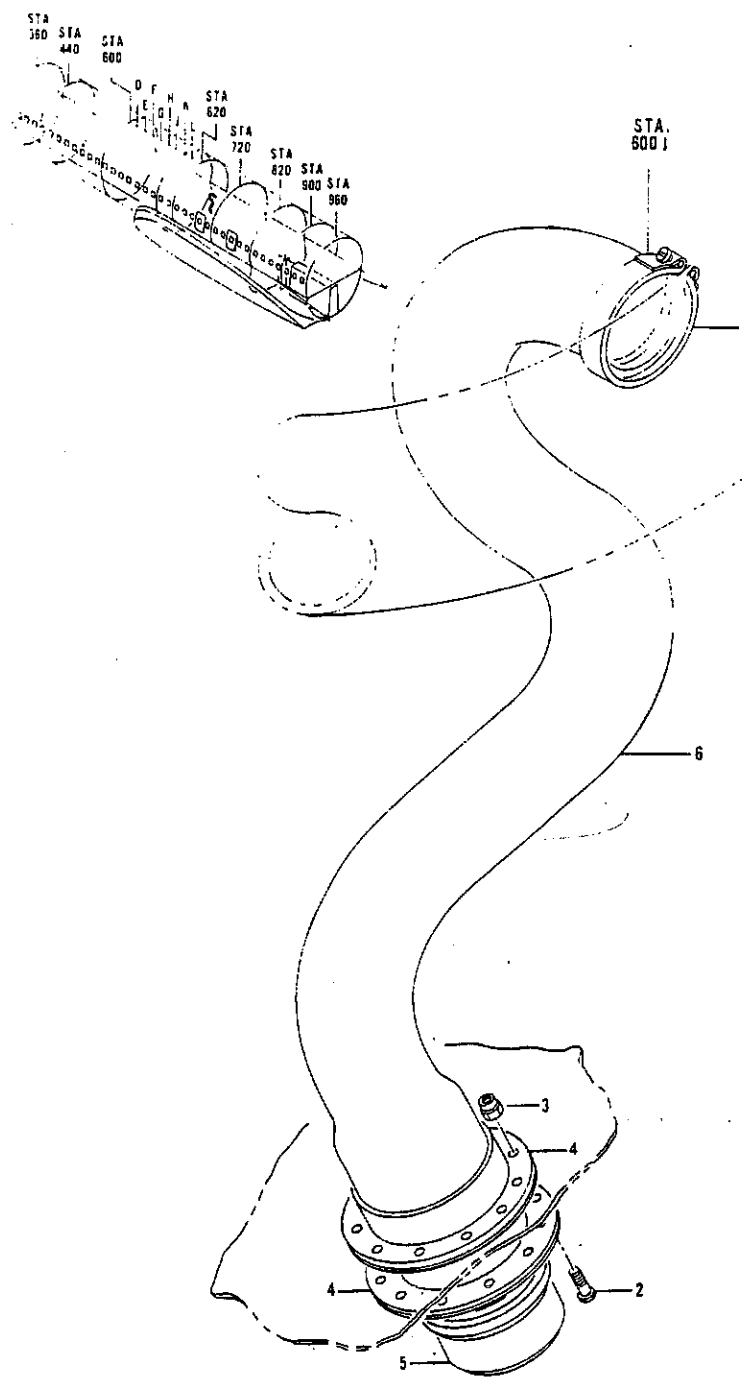


FIGURE 2. DUCT INSTL. GROUND SERVICE PNEUMATIC CONNECTION



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2	65-4308		DUCT INSTL, GROUND SERVICE PNEUMATIC CONNECTION (SEE . 21-2, FIG. 2, ITEM 3)		RF
1	BACC10DP300		. CLAMP		1
2	AN4-7A		. BOLT.		12
3	BACN10BY54W		. NUT		12
4	66-2396		. GASKET, GROUND SERVICE PNEUMATIC CONNECTOR.		2
5	M913		. VALVE, (V81833)		1
			(OPTIONAL TO M913-1 (V81833))		
5	M913-1		. VALVE, (V81833)		1
			(OPTIONAL M913 (V81833))		
6	65-4338		. DUCT ASSY, GROUND SERVICE PNEUMATIC	0151	1
6	65-4338-10		. DUCT ASSY, GROUND SERVICE PNEUMATIC	5299	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

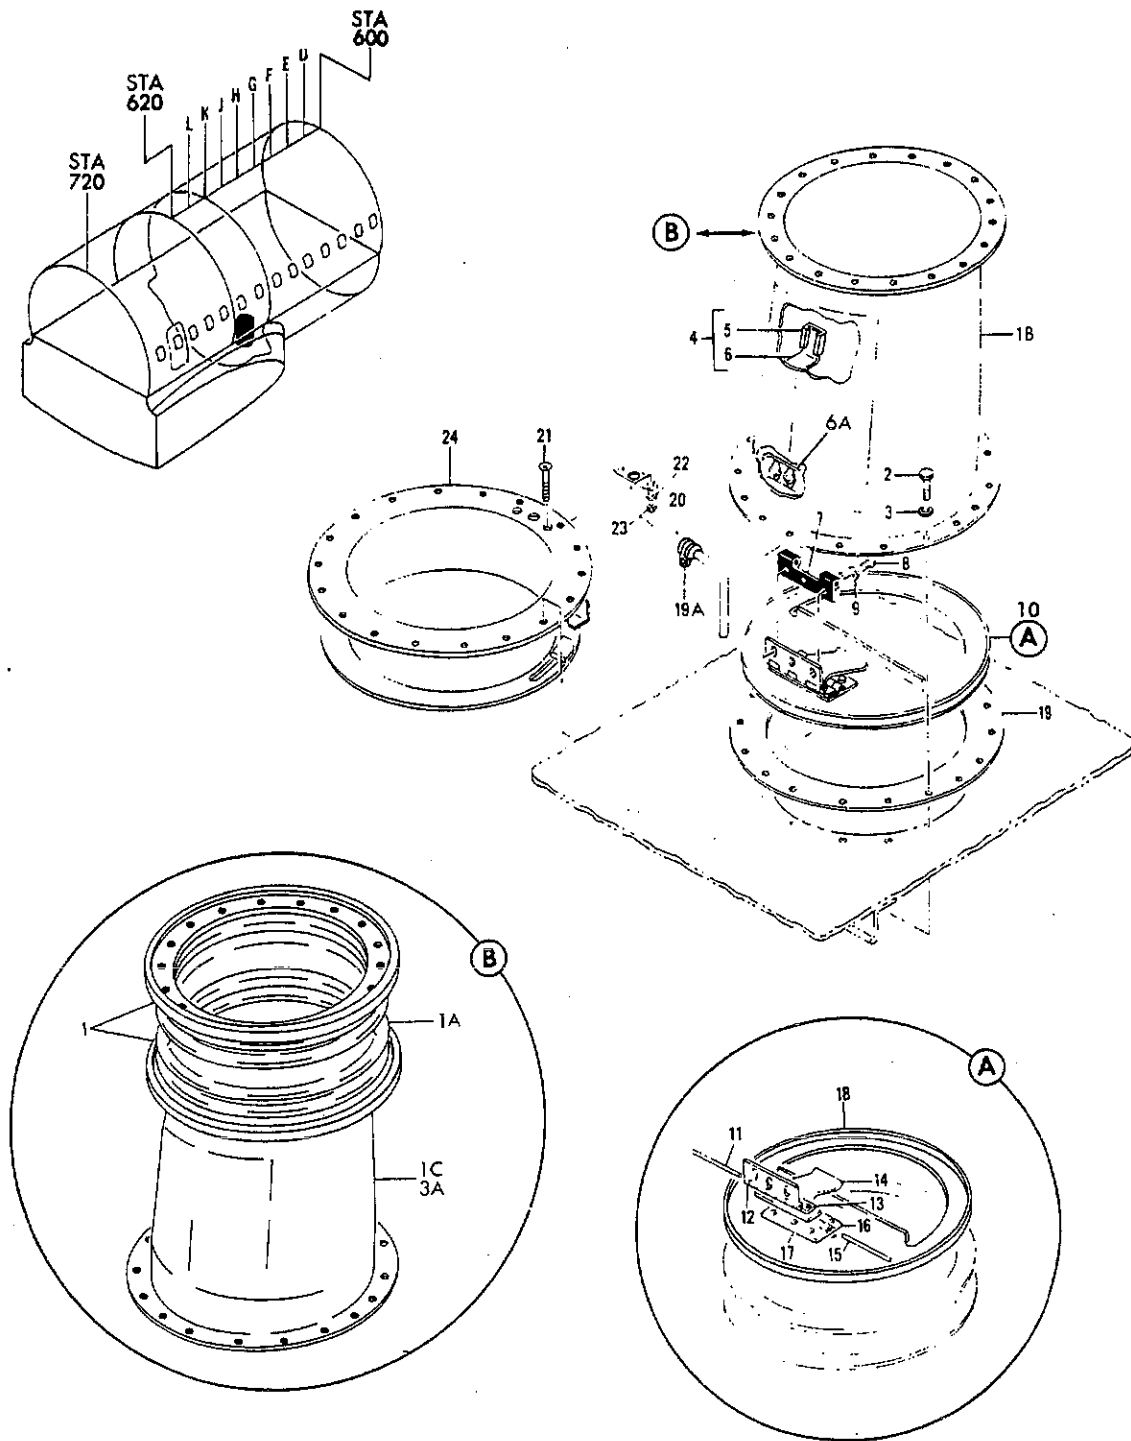


FIGURE 3. VALVE INSTL, STATION 600H PLUS & 24 GROUND SERVICE CHECK



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
3	65-6592	VALVE INSTL, STATION 600H PLUS 8.24 GROUND SERVICE. . . CHECK (SEE 21-2, FIG. 2, ITEM 14)		RF
1B	65-3466-0	. DUCT ASSY, ... (OPTIONAL 65-3466-9)		1
1B	65-3466-9	. DUCT ASSY, ... (OPTIONAL TO 65-3466-0)		1
2	AN3-5A	ATTACHING PARTS		18
3	AN960D10L	. BOLT. WASHER.		18
4	69-2880-1	. . STOP ASSY, GROUND SERVICE BRACKET VALVE		1
5	69-2880-9	. . . STOP, GROUND SERVICE BRACKET VALVE RUBBER (EXTRUSION NO. BAC1521-381 X .86 IN. LG)		1
6	69-2880-4	. . . STOP, GROUND SERVICE BRACKET VALVE.		1
7	69-2880-5	. STOP, GROUND SERVICE BRACKET RUBBER (EXTRUSION NO. . . BAC1521-239 X 3.00 IN. LG)		1
8	NAS602-7	ATTACHING PARTS		3
9	AN960-8	. SCREW WASHER.		3
10	69-2914	. VALVE ASSY, GROUND SERVICE SWING CHECK.		1
11	69-2914-8	. . PIN, GROUND SERVICE SWING CHECK VALVE HINGE (ALTERED FROM AN253-4-290)		1
12	69-2914-5	. . HINGE-HALF, GROUND SERVICE SWING CHECK VALVE. (ALTERED FROM AN257YC5-300)		1
13	69-2914-4	. . HINGE-HALF, GROUND SERVICE SWING CHECK VALVE. (ALTERED FROM AN257XC5-300)		1
14	66-3157	. . SPRING, GROUND SERVICE SWING CHECK VALVE.		1
15	69-2914-9	. . PIN, GROUND SERVICE SWING CHECK VALVE HINGE (ALTERED FROM AN253-3-290)		1
16	69-2914-6	. . HINGE-HALF, GROUND SERVICE SWING CHECK VALVE. (ALTERED FROM AN257YC4-300)		1
17	69-2914-7	. . HINGE-HALF, GROUND SERVICE SWING CHECK VALVE. (ALTERED FROM AN257XC4-300)		1
18	69-2914-1	. . FLANGE, GROUND SERVICE SWING CHECK VALVE STIFFENING		1
19	66-2848	. GASKET, GROUND SERVICE CHECK VALVE.		1
19A	BACC10DK5	. CLAMP, (OPTIONAL MS21919DG5).		1
	NAS603-5	ATTACHING PARTS		1
	NAS679A3W	. SCREW NUT		1
20	69-2880-10	. TUBE ASSY, GROUND SERVICE CHECK VALVE DRAIN		1
21	NAS517-3-2	ATTACHING PARTS		2
22	AN960D10L	. SCREW		2
23	NAS679A3W	. WASHER. NUT		2
24	69-2913-4	. DUCT ASSY, CONDITIONED AIR CONNECTION		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

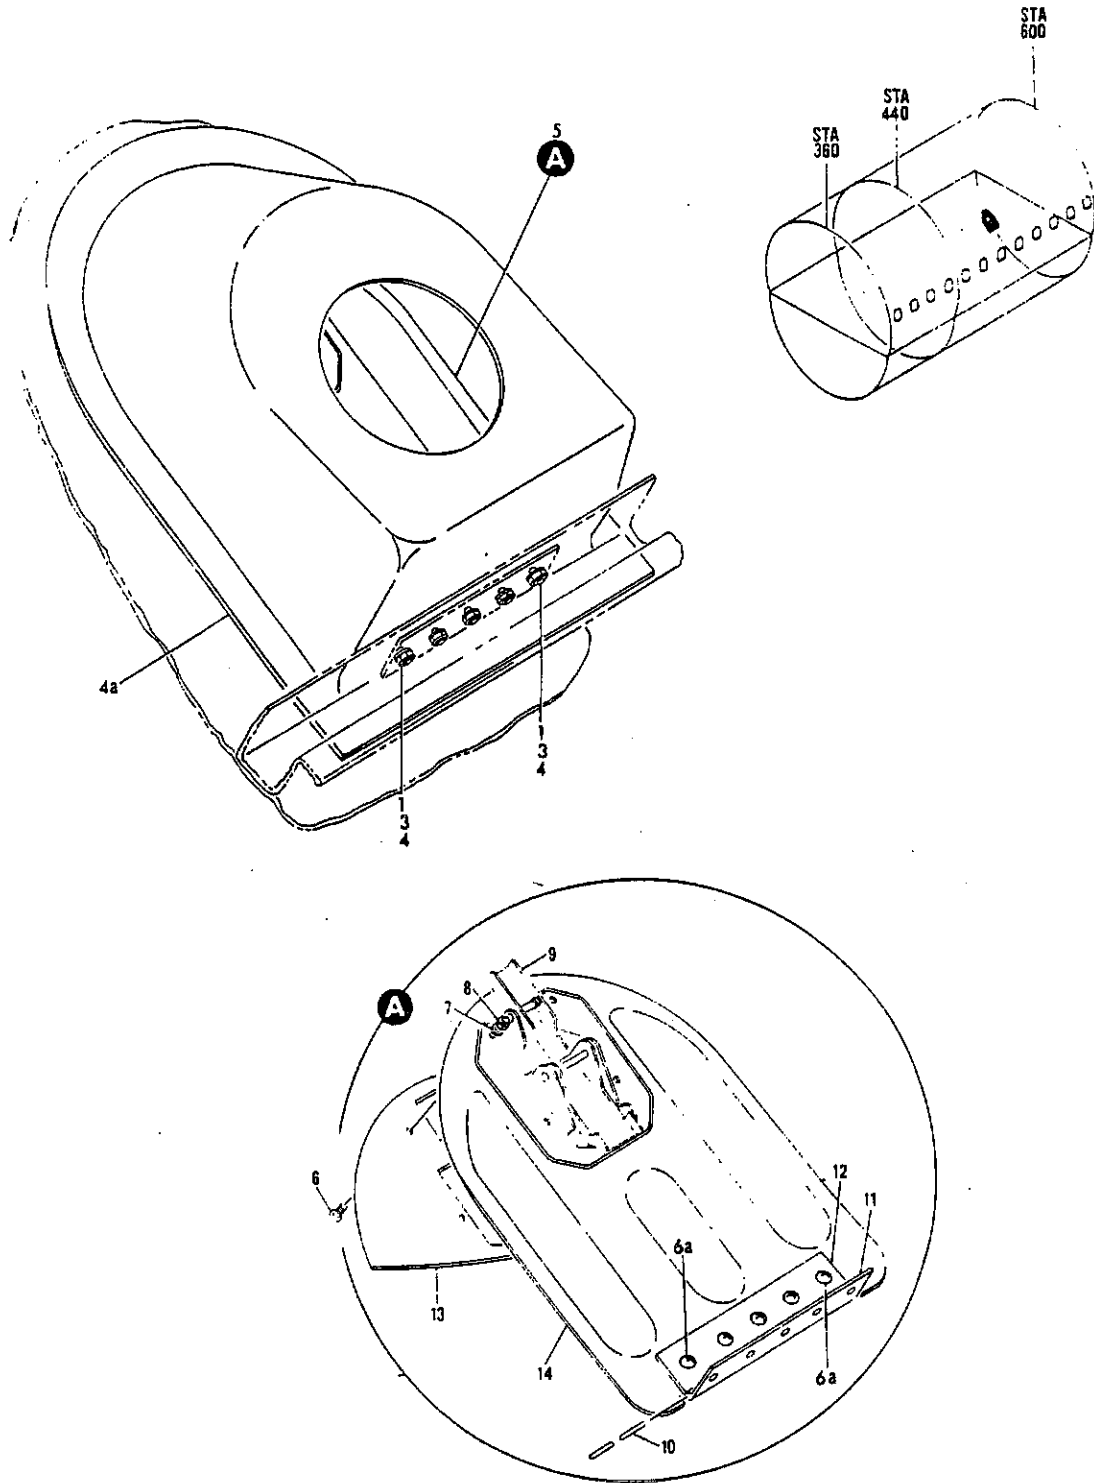


FIGURE 4. PAN AND DOOR INSTL, STATION 600J + 5.40 PNEUMATIC GROUND SERVICE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
4	65-2059		PAN AND DOOR INSTL, STATION 600J PLUS 5.40 PNEUMATIC. . GROUND SERVICE (SEE 53-2, FIG. 2, ITEM 85 AND 53-2, FIG. 5, ITEM 41)		RF
1	NAS1103-5W		. BOLT.		5
4A	65-2059-11		. PAN		1
5	65-2059-14		. DOOR ASSY, STATION 600J PLUS 5.40 PNEUMATIC GROUND. . SERVICE		1
6	NAS517-3-3		. . SCREW		4
6A	NAS517-3-2		. . SCREW		5
7	AN960D10L		. . WASHER.		4
8	NAS679A3W		. . NUT		4
9	BACL10U4		. . LATCH (OPTIONALS BACL10U113-560, BACL10U1)		1
9	BACL10U113-560		. . LATCH (OPTIONAL TO BACL10U4)		1
9	BACL10U1		. . LATCH (OPTIONAL TO BACL10U4)		1
10	MS20253-2-435		. . PIN		1
11	65-2059-12		. . HINGE HALF, STATION 600J PLUS 5.40 PNEUMATIC. . . . GROUND SERVICE PAN AND DOOR (ALTERED FROM MS20001PH5-460)		1
12	65-2059-13		. . HINGE HALF, STATION 600J PLUS 5.40 PNEUMATIC. . . . GROUND SERVICE PAN AND DOOR (ALTERED FROM MS20001PH6-460)		1
13	65-2059-9		. . FAIRING, STATION 600J PLUS 5.40 PNEUMATIC GROUND SERVICE PAN AND DOOR		1
14	65-2059-2		. . PANEL ASSY, STATION 600J PLUS 5.40 PNEUMATIC. . . . GROUND SERVICE PAN AND DOOR		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

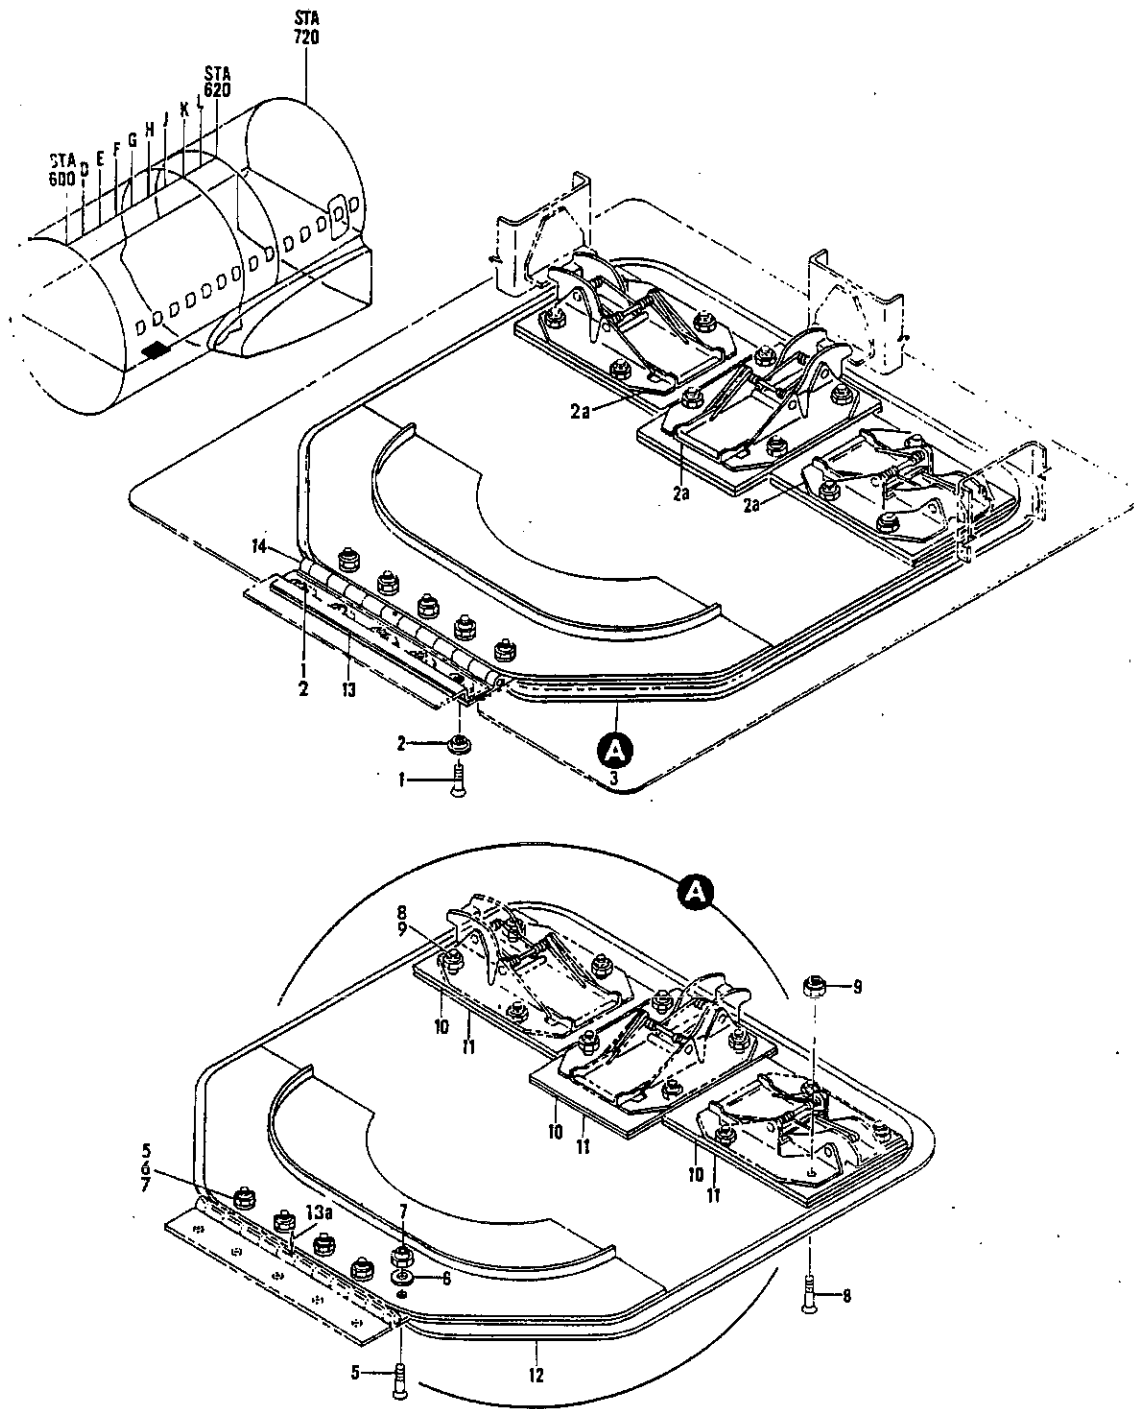


FIGURE 5. DOOR INSTL. GROUND AIR CONDITIONING ACCESS



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5	65-12005		DOOR INSTL, GROUND AIR CONDITIONING ACCESS (SEE 53-2, . G. 2, ITEM 73 AND 53-2, FIG. 5, ITEM 77)		RF
1	NAS517-3-4		. SCREW		5
2	BACW10U810		. WASHER.		5
2A	BACL10U4		. LATCH		3
			(OPTIONAL BACL10U1)		
2A	BACL10U1		. LATCH		3
			(OPTIONAL TO BACL10U4)		
3	65-12005-1		. DOOR ASSY, GROUND AIR CONDITIONING ACCESS		1
5	NAS517-3-3		. SCREW		5
6	AN960C10L		. WASHER.		5
7	NAS679A3W		. NUT		5
8	NAS517-3-4		. SCREW		12
9	MS20365D1032		. NUT		12
10	65-12005-12		. SHIM, GROUND AIR CONDITIONING ACCESS DOOR		AR
			LAMINATED		
11	65-12005-11		. SHIM, GROUND AIR CONDITIONING ACCESS DOOR		AR
			LAMINATED		
12	65-12005-6		. DOOR ASSY, GROUND AIR CONDITIONING ACCESS WELDED. .		1
13	BACS40812-88		. SHIM.		1
13A	NAS561P2-5		. PIN		1
14	MS20001PB-550		. HINGE ASSY.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

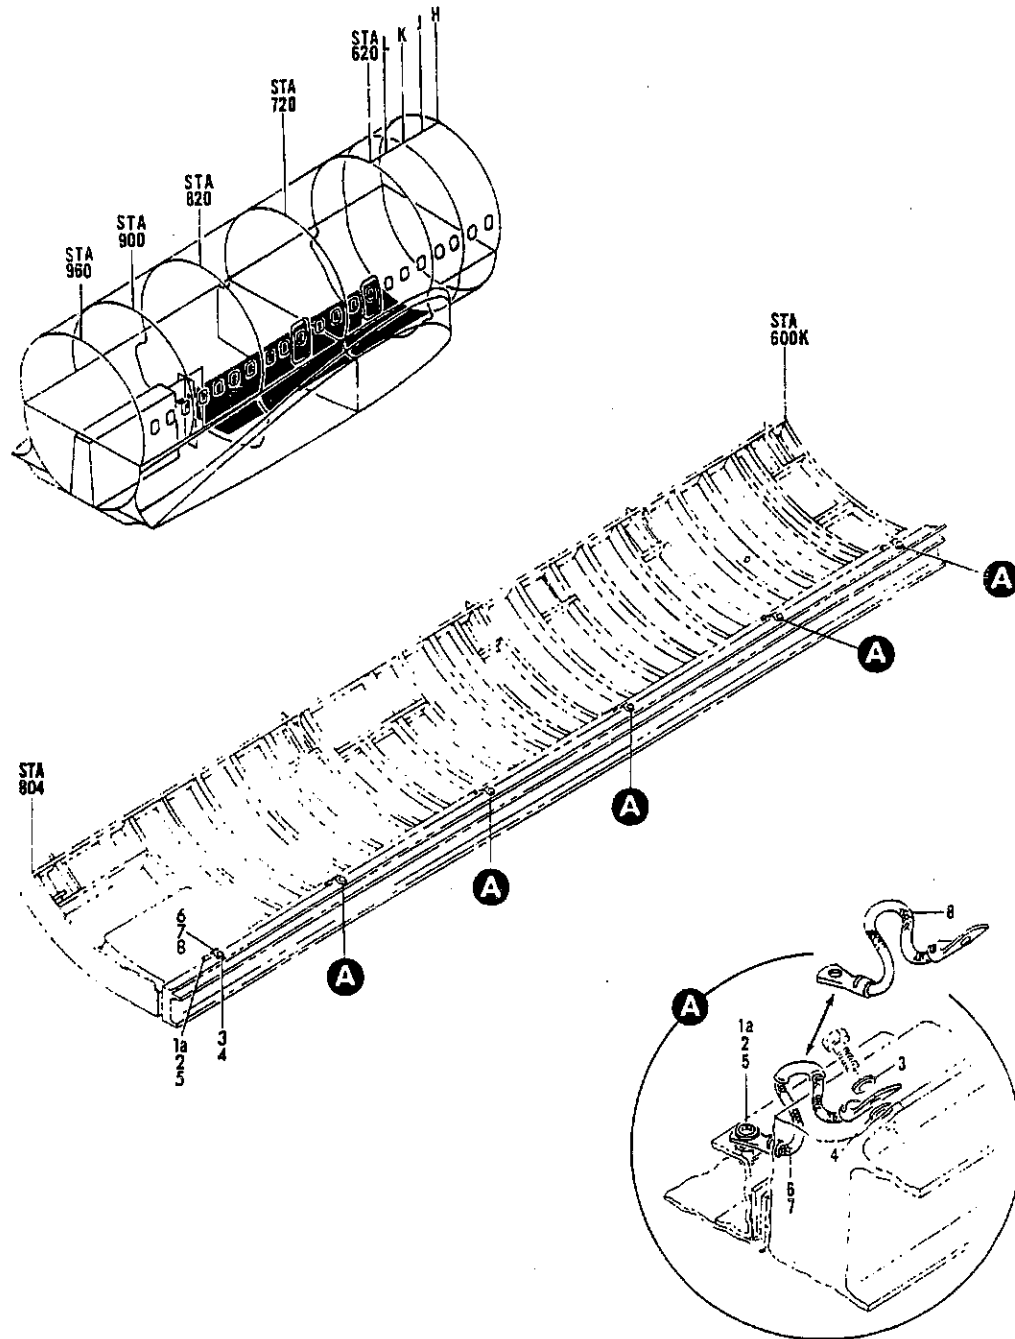


FIGURE 6. JUMPER INSTL. AIR CONDITIONING ACCESS DOOR



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
6	65-10320-3	JUMPER INSTL, AIR CONDITIONING ACCESS DOOR (LH) (SEE. .								RF
		53-2, FIG. 2, ITEM 114)								
	65-10320-4	JUMPER INSTL, AIR CONDITIONING ACCESS DOOR (RH) (SEE. .								RF
		53-2, FIG. 2, ITEM 115)								
1	NAS603-8	. SCREW								5
1A	NAS603-8P	. SCREW, (USED AT STATION 804.35)								1
2	AN960D10L	. WASHER.								12
3	AN960PD416L	. WASHER.								6
4	AN960PD416	. WASHER.								6
5	NAS679A3W	. NUT								6
8	BACJ40CF12E	. JUMPER ASSY								6
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

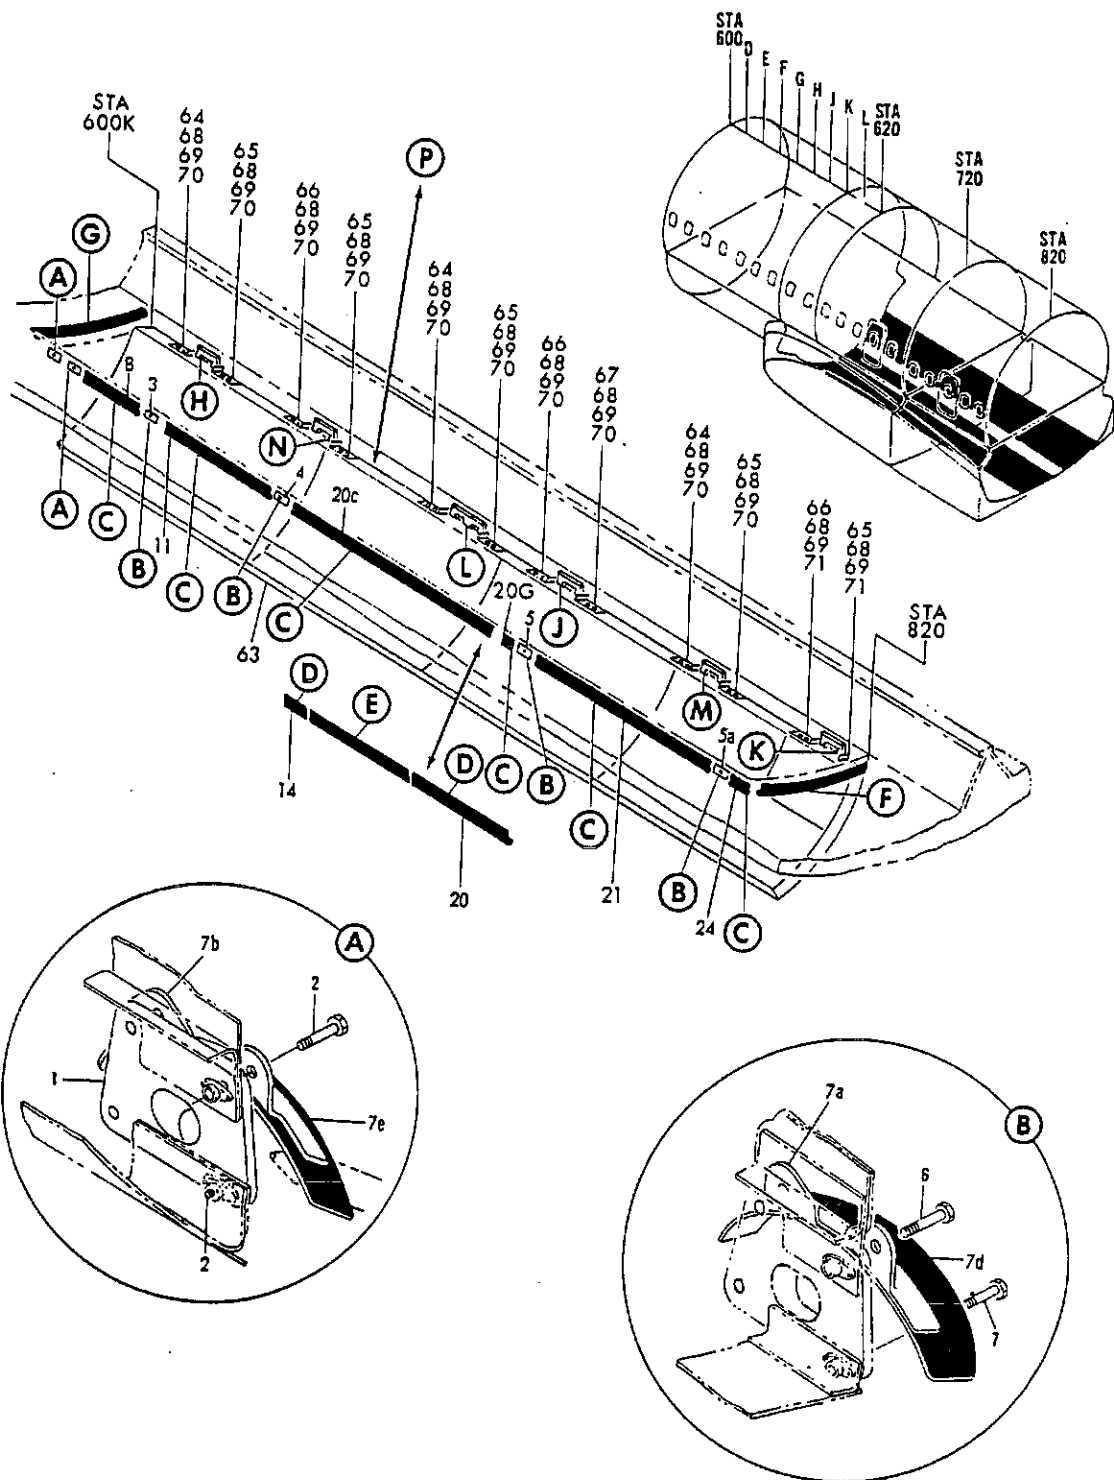


FIGURE 7. DOOR INSTL, STATION 600K TO 820 ACCESS (SHEET 1)

DETAILED PARTS LIST
21-08-7
PAGE 0

21-00-7

NOV 21/90

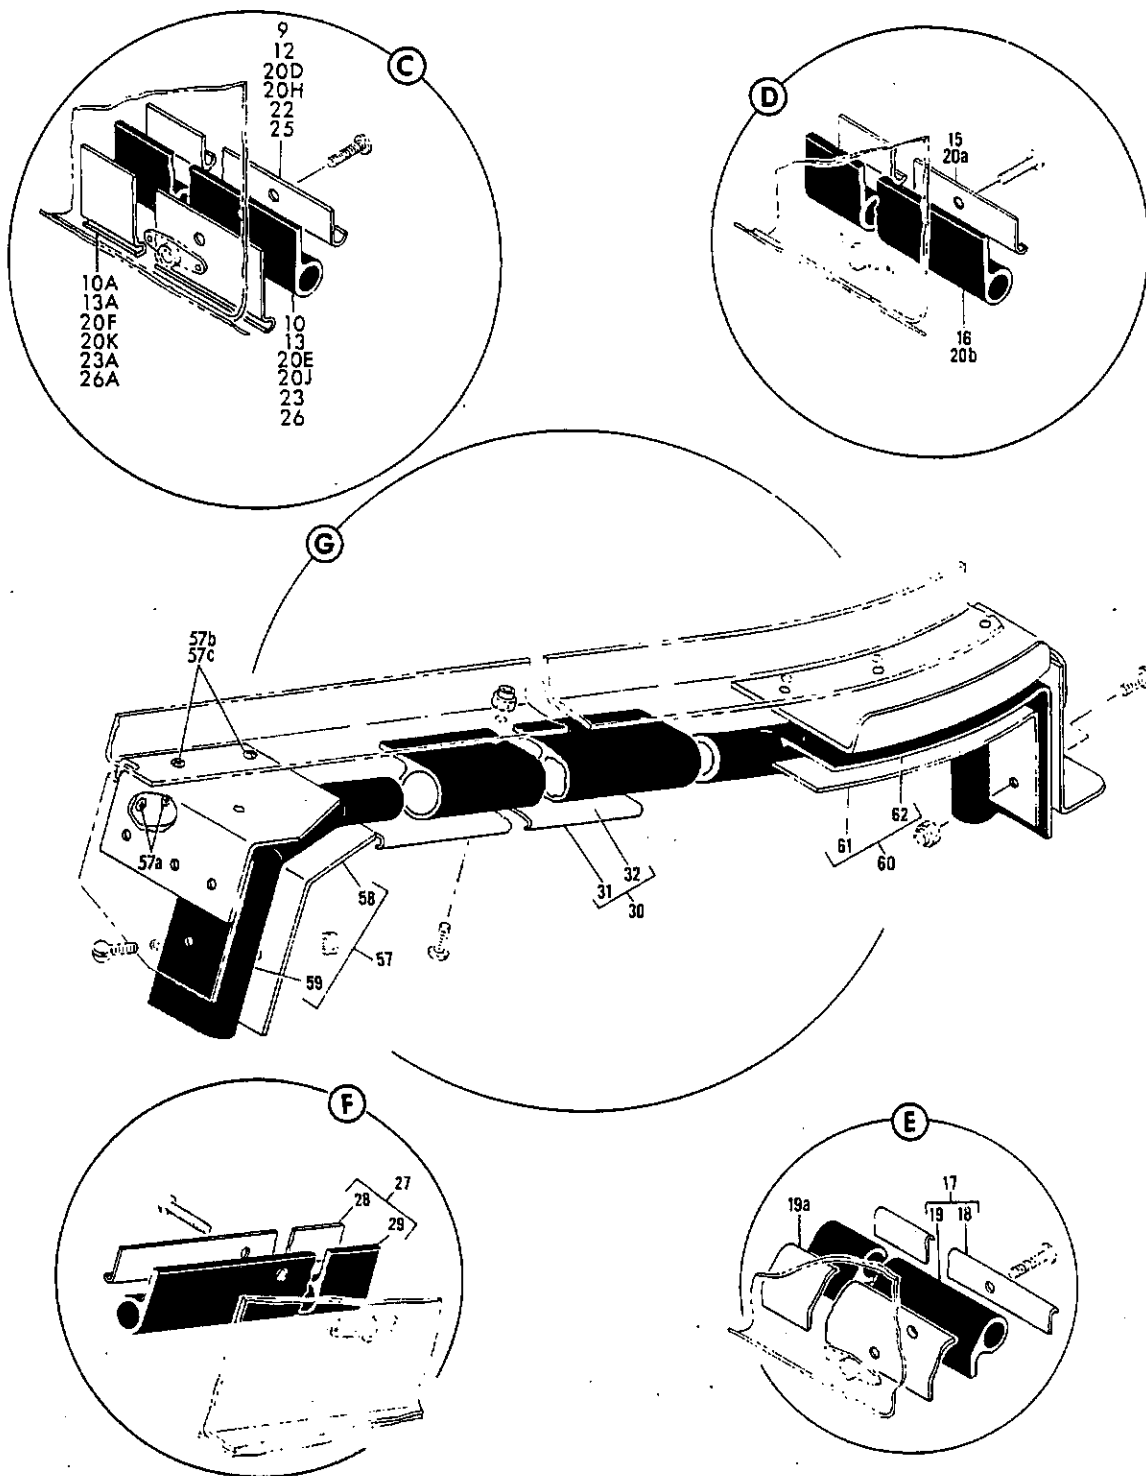


FIGURE 7. DOOR INSTL, STATION 600K TO 820 ACCESS (SHEET 2)

NOV 21/90

21-08-7

DETAILED PARTS LIST
21-08-7
PAGE 1

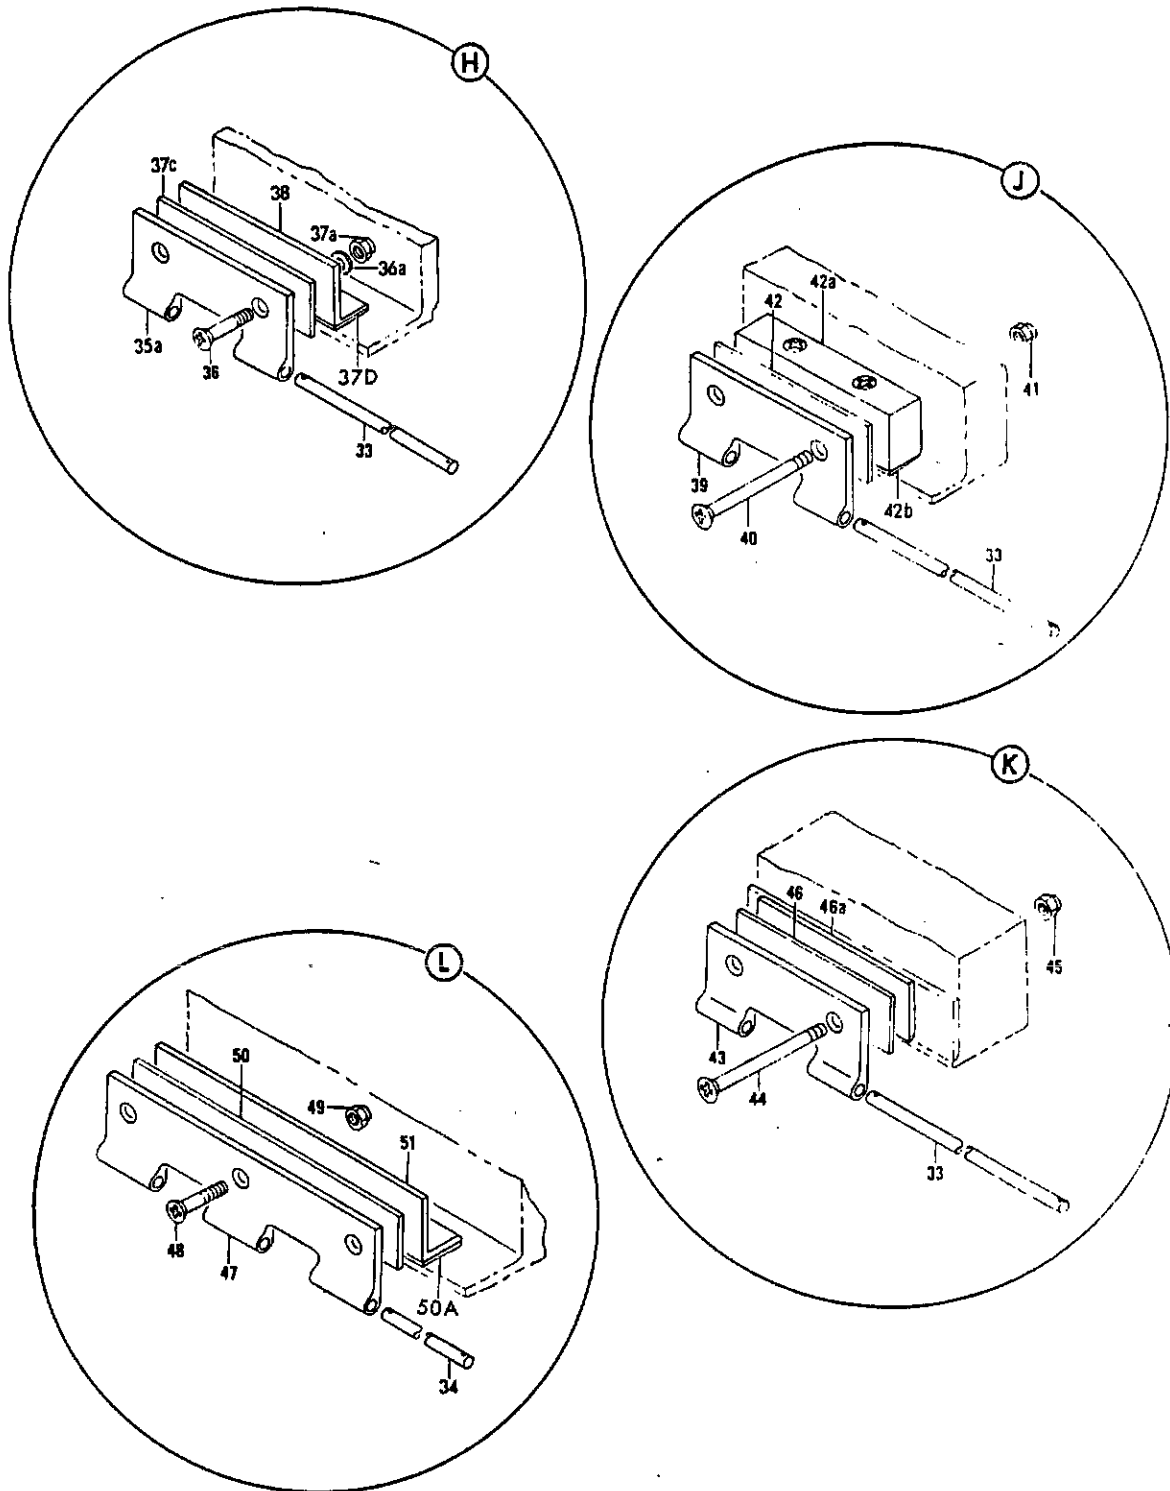


FIGURE 7. DOOR INSTL. STATION 600K TO 820 ACCESS (SHEET 3)

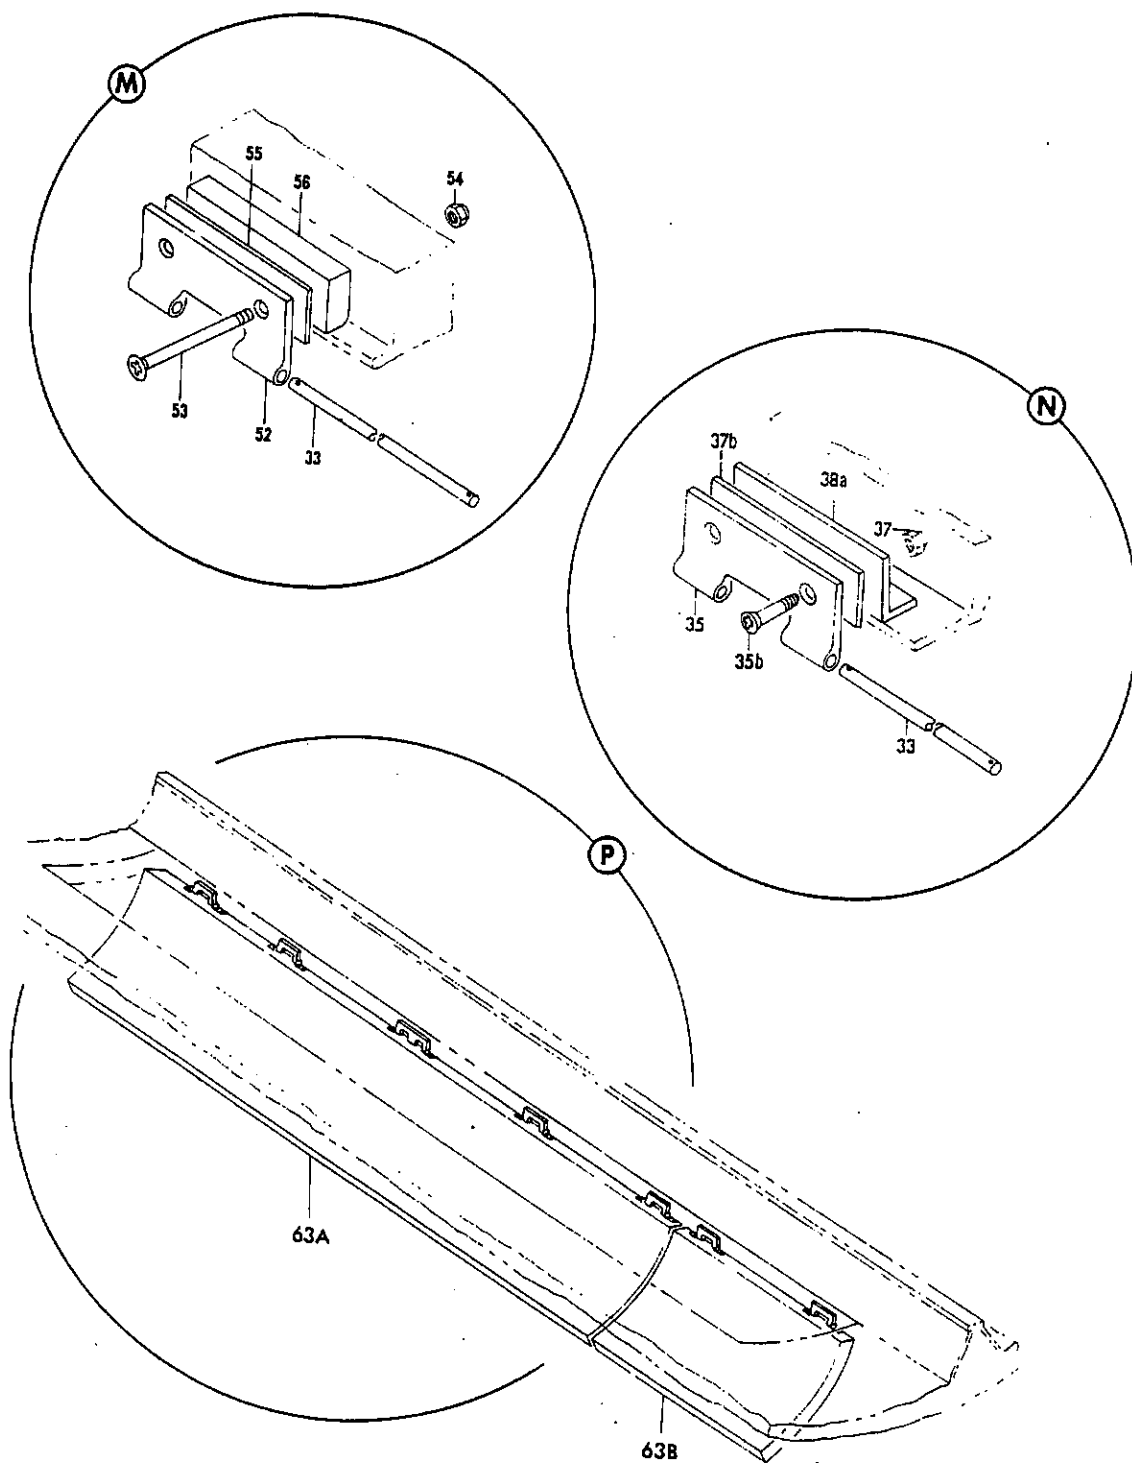


FIGURE 7. DOOR INSTL, STATION 600K TO 820 ACCESS (SHEET 4)

NOV 21/90

21-08-7

DETAILED PARTS LIST
21-08-7
PAGE 3

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
7	65-5437-243		DOOR INSTL, STATION 600K TO 820 ACCESS (LH) (SEE 53-2, FIG. 2, ITEM 55)		RF
	65-5437-244		DOOR INSTL, STATION 600K TO 820 ACCESS (RH) (SEE 53-2, FIG. 2, ITEM 56)		RF
1	50-2486-2000		. SUPPORT, LATCH.		2
2	AN3-5A		. ATTACHING PARTS		
			. BOLT.		8
3	65-8326				
4	50-1566-2000		. SUPPORT, STATION 600K TO 820 ACCESS DOOR LATCH. . . .		1
5	50-1566-2002		. SUPPORT, STATION 620 TO 820 ACCESS DOOR LATCH. . . .		1
5A	50-1566-2000		. SUPPORT, STATION 620 TO 820 ACCESS DOOR LATCH. . . .		1
			. ATTACHING PARTS		
6	AN3-5A		. BOLT.		8
7	AN3-4A		. BOLT.		8
					
7A	69-45023		. CAP ASSY, SEALING.		4
7B	69-45023-1		. CAP ASSY, SEALING.		2
7D	63-9927		. . SEAL, RUBBER (USED ON 69-45023)		1
7E	63-9927-1		. . SEAL, RUBBER (USED ON 69-45023-1)		1
8	65-5437-193		. SEAL ASSY, (LH ONLY).		1
8	65-5437-194		. SEAL ASSY, (RH ONLY).		1
			. ATTACHING PARTS		
	NAS602-8		. SCREW		12
					
9	65-5437-45		. . RETAINER, (LH ONLY)		1
9	65-5437-155		. . RETAINER, (RH ONLY)		1
10	65-5437-220		. . SEAL, (EXTRUSION NO. BAC1530-6 X 52 IN. LG)		1
11	65-5437-195		. SEAL ASSY		1
			. ATTACHING PARTS		
	NAS602-8		. SCREW		15
					
12	65-5437-46		. . RETAINER.		1
13	65-5437-221		. . SEAL, (AFFECTED BY AD 64-19-1) (EXTRUSION NO. . . .		1
			BAC1530-6 X 46 IN. LG)		
14	65-5437-213		. SEAL ASSY, STATION 600K TO 820 ACCESS DOOR.		1
			. ATTACHING PARTS		
	NAS602-8		. SCREW		4
					
15	65-5437-150		. . RETAINER, STATION 600K TO 820 ACCESS DOOR SEAL. . .		1
16	65-5437-236		. . SEAL, STATION 600K TO 820 ACCESS DOOR (EXTRUSION. .		1
			NO. BAC1530-6 X 8.8 IN. LG)		
17	65-5437-214		. SEAL ASSY, STATION 600K TO 820 ACCESS DOOR.		1
			. ATTACHING PARTS		
	NAS602-8		. SCREW		6
					
18	65-5437-151		. . RETAINER, STATION 600K TO 820 ACCESS DOOR SEAL. . .		1
19	65-5437-237		. . SEAL, STATION 600K TO 820 ACCESS DOOR (EXTRUSION. .		1
			NO. BAC1530-6 X 24.9 IN. LG)		
19A	63-9981		. RETAINER, STATION 693.30 TO 716.95 ACCESS DOOR SEAL .		1
20	65-5437-215		. SEAL ASSY, STATION 600K TO 820 ACCESS DOOR.		1
			. ATTACHING PARTS		
	NAS602-8		. SCREW		9
					
20A	65-5437-152		. . RETAINER, STATION 600K TO 820 ACCESS DOOR SEAL. . .		1
20B	65-5437-238		. . SEAL, STATION 600K TO 820 ACCESS DOOR (EXTRUSION. .		1
			NO. BAC1530-6 X 23.8 IN. LG)		
21	65-5437-197		. SEAL ASSY, STATION 600K TO 820 ACCESS DOOR.		1
			. ATTACHING PARTS		
	NAS602-8		. SCREW		21
					
22	65-5437-48		. . RETAINER, STATION 600K TO 820 ACCESS DOOR SEAL. . .		1
23	65-5437-223		. . SEAL, STATION 600K TO 820 ACCESS DOOR (EXTRUSION. .		1
			NO. BAC1530-6 X 65.5 IN. LG)		
24	65-5437-198		. SEAL ASSY		1
			. ATTACHING PARTS		
	NAS602-8		. SCREW		3
					
25	65-5437-49		. . RETAINER.		1
26	65-5437-224		. . SEAL, (EXTRUSION NO. BAC1530-6 X 6.2 IN. LG). . . .		1
27	65-5437-199		. SEAL ASSY, STATION 820 (LH ONLY).		1
27	65-5437-200		. SEAL ASSY, STATION 820 (RH ONLY).		1
			. ATTACHING PARTS		
	NAS602-7		. SCREW		9

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
7	NAS679A08W	.	NUT		9
28	65-5437-53	.	RETAINER, (LH ONLY)		1
28	65-5437-54	.	RETAINER, (RH ONLY)		1
29	65-5437-225	.	SEAL, (EXTRUSION NO. BAC1530-6 X 29 IN. LG)		1
30	65-5437-201	.	SEAL ASSY, STATION 600K ACCESS DOOR (LH ONLY)		1
30	65-5437-202	.	SEAL ASSY, STATION 600K ACCESS DOOR (RH ONLY)		1
	NAS602-7	.	ATTACHING PARTS		
	NAS679A08W	.	SCREW		11
	NAS679A08W	.	NUT		11
31	65-5437-57	.	RETAINER, STATION 600K ACCESS DOOR SEAL (LH ONLY)		1
31	65-5437-58	.	RETAINER, STATION 600K ACCESS DOOR SEAL (RH ONLY)		1
32	65-5437-226	.	SEAL, STATION 600K ACCESS DOOR (EXTRUSION NO. BAC1530-6 X 33 IN. LG)		1
33	30-2427-3001	.	PIN, STATION 620 TO 820 HINGE		5
34	30-2427-1	.	PIN, STATION 620 TO 820 HINGE		1
35	66-8624-1	.	HINGE HALF.		1
35A	66-8624-1	.	HINGE HALF.		1
	NAS517-3-5	.	ATTACHING PARTS		
35B	NAS517-3-5	.	SCREW		2
36	NAS517-3-5	.	SCREW		2
37	NAS679A3W	.	NUT		2
37A	NAS679A3W	.	NUT		2
37B	65-5437-60	.	SHIM, LAMINATED		1
37C	65-5437-60	.	SHIM, LAMINATED		1
37D	BACS40R0BC3ZF	.	SHIM, LAMINATED		1
38	65-5437-62	.	ANGLE		1
38A	65-5437-62	.	ANGLE		1
	NAS517-3-5	.	ATTACHING PARTS		
	NAS679A3W	.	SCREW		4
	NAS679A3W	.	NUT		4
39	66-8624-1	.	HINGE HALF.		1
40	NAS517-4-34	.	ATTACHING PARTS		
41	NAS679A4W	.	SCREW		2
	NAS679A4W	.	NUT		2
42	65-5437-60	.	SHIM, LAMINATED		1
42A	65-5437-64	.	FILLER, RADIUS.		1
	NAS517-4-20	.	ATTACHING PARTS		
	NAS679A4W	.	SCREW		2
	NAS679A4W	.	NUT		2
42B	BACS40A10-50	.	SHIM.		1
43	66-8624-1	.	HINGE HALF.		1
	NAS517-4-32	.	ATTACHING PARTS		
44	NAS517-4-32	.	SCREW		2
45	NAS679A4W	.	NUT		2
46	65-5437-60	.	SHIM, LAMINATED		1
46A	65-5437-66	.	FILLER, RADIUS.		1
47	60-1486-2001	.	HINGE HALF, STATION 620 TO 820.		1
	NAS517-3-5	.	ATTACHING PARTS		
48	NAS517-3-5	.	SCREW		3
49	NAS679A3W	.	NUT		3
50	65-5437-61	.	SHIM, LAMINATED		1
50A	BACS40R0BC50F	.	SHIM, LAMINATED		1
51	65-5437-63	.	ANGLE		1
	NAS517-3-5	.	ATTACHING PARTS		
	NAS679A3W	.	SCREW		3
	NAS679A3W	.	NUT		3
52	66-8624-1	.	HINGE HALF.		1
	NAS517-4-32	.	ATTACHING PARTS		
53	NAS517-4-32	.	SCREW		2
54	NAS679A4W	.	NUT		2
55	65-5437-60	.	SHIM, LAMINATED		1
56	65-5437-65	.	FILLER, STATION 600K TO 820 ACCESS DOOR RADIUS.		1
63	65-5437-246	.	DOOR ASSY, STATION 600K TO 820 ACCESS (RH ONLY) (SEE FIG. 8)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING **707** *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE						EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7		
7 63	65-5437-245	. DOOR ASSY, STATION 600K TO 820 ACCESS (LH ONLY) (SEE FIG. 8)								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

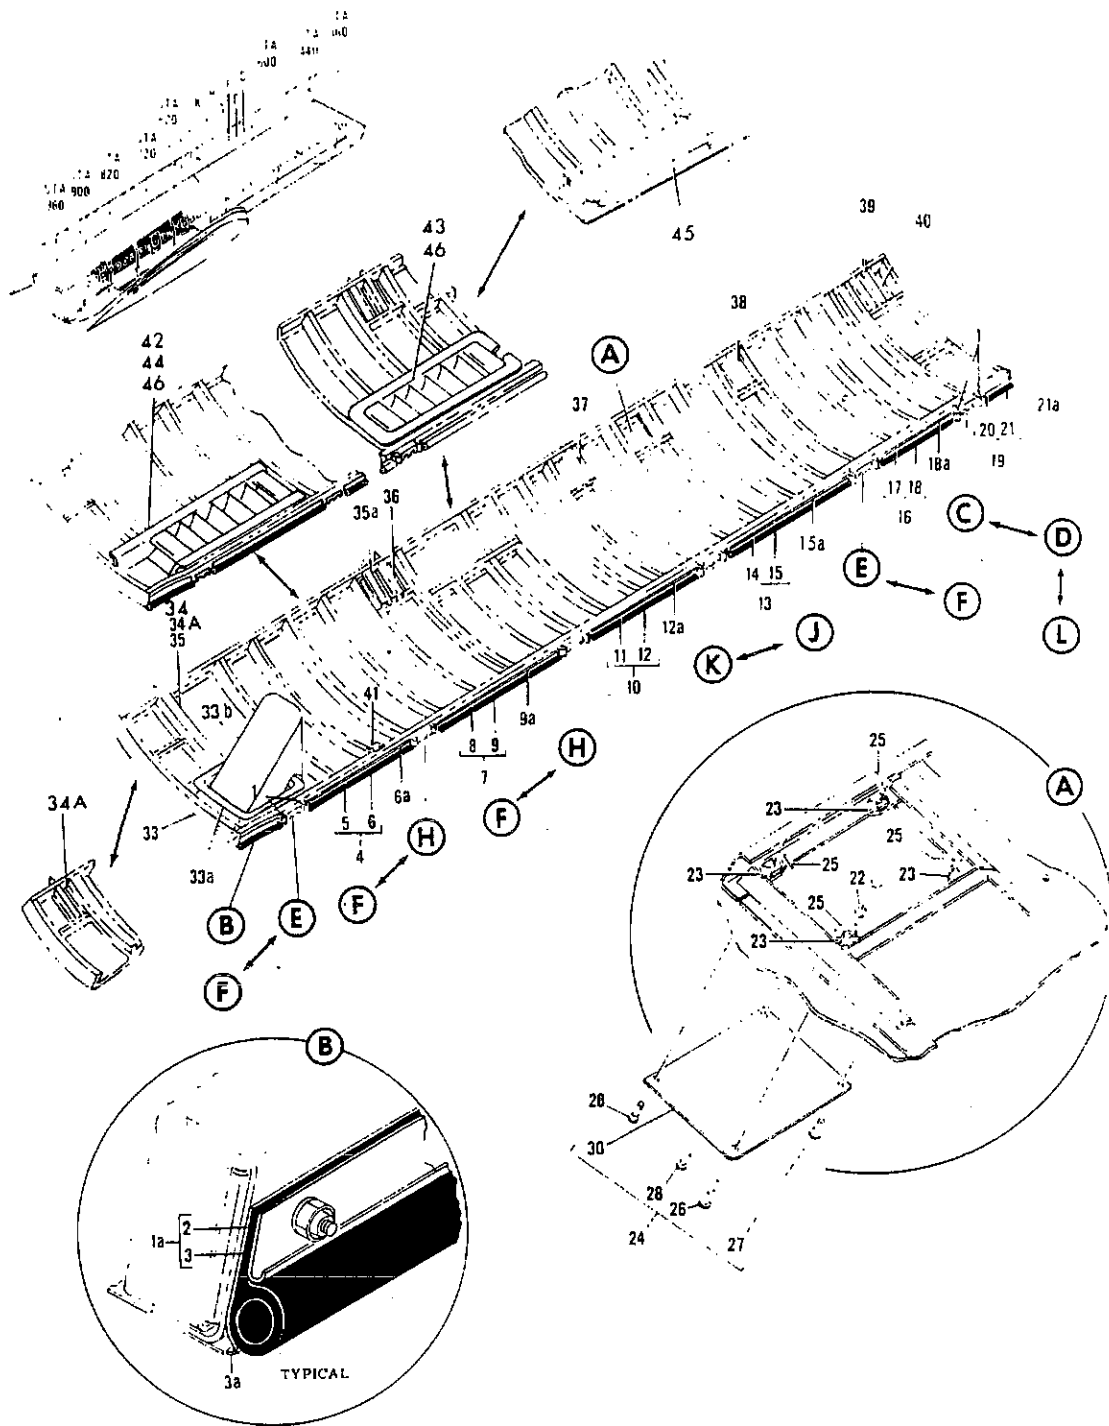


FIGURE 8. DOOR ASSY, STATION 600K TO 820 ACCESS (SHEET 1)

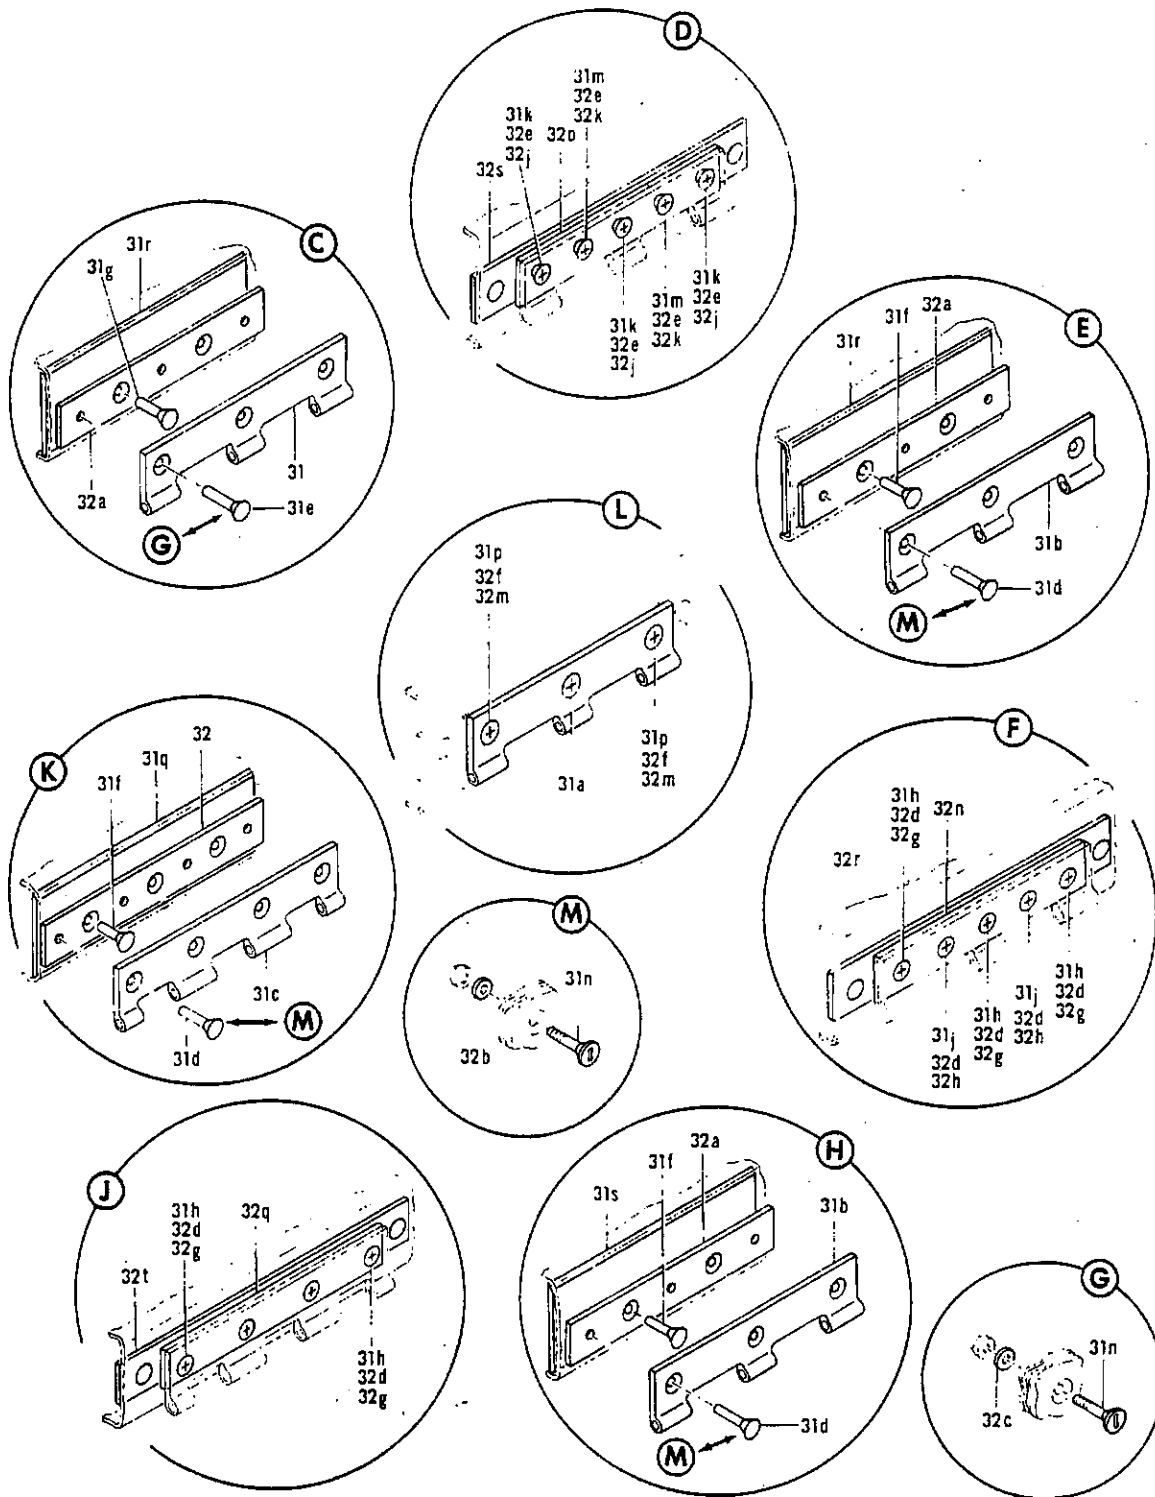


FIGURE 8. DOOR ASSY, STATION 600K TO 820 ACCESS (SHEET 2)

NOV 21/90

21-00-0

DETAILED PARTS LIST
21-08-8
PAGE 1

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
8	65-5437-245	DOOR ASSY, STATION 600K TO 820 ACCESS (LH) (SEE FIG. 7, ITEM 63)		RF
	65-5437-246	DOOR ASSY, STATION 600K TO 820 ACCESS (RH) (SEE FIG. 7, ITEM 63)		RF
1A	65-5437-211	. SEAL ASSY, STATION 600K TO 820 ACCESS DOOR (LH ONLY)		1
1A	65-5437-212	. SEAL ASSY, STATION 600K TO 820 ACCESS DOOR (RH ONLY)		1
		ATTACHING PARTS		
	NAS220-10	. SCREW		4
	AN960DBL	. WASHER.		4
	NAS679A08W	. NUT		4
2	65-5437-93	. . RETAINER, STATION 600K TO 820 ACCESS DOOR SEAL (LH ONLY)		1
2	65-5437-94	. . RETAINER, STATION 600K TO 820 ACCESS DOOR SEAL (RH ONLY)		1
3	65-5437-235	. . SEAL, STATION 600K TO 820 ACCESS DOOR (EXTRUSION. . NO. BAC1530-6 X 11.4 IN. LG)		1
4	65-5437-267	. SEAL ASSY, STATION 600K TO 820 ACCESS DOOR (LH ONLY)		1
4	65-5437-266	. SEAL ASSY, STATION 600K TO 820 ACCESS DOOR (RH ONLY)		1
		ATTACHING PARTS		
	NAS220-10	. SCREW		9
	AN960DBL	. WASHER.		9
	NAS679A08W	. NUT		9
5	65-5437-265	. . RETAINER, STATION 600K TO 820 ACCESS DOOR SEAL (LH ONLY)		1
5	65-5437-264	. . RETAINER, STATION 600K TO 820 ACCESS DOOR SEAL (RH ONLY)		1
6	65-5437-234	. . SEAL, STATION 600K TO 820 ACCESS DOOR (EXTRUSION. . NO. BAC1530-6 X 33.9 IN. LG)		1
7	65-5437-209	. SEAL ASSY, STATION 600K TO 820 ACCESS DOOR.		1
		ATTACHING PARTS		
	NAS220-10	. SCREW		11
	AN960DBL	. WASHER.		11
	NAS679A08W	. NUT		11
8	65-5437-88	. . RETAINER, STATION 600K TO 820 ACCESS DOOR SEAL. . .		1
9	65-5437-233	. . SEAL, STATION 600K TO 820 ACCESS DOOR (EXTRUSION. . NO. BAC1530-6 X 41.3 IN. LG)		1
10	65-5437-208	. SEAL ASSY, STATION 600K TO 820 ACCESS DOOR.		1
		ATTACHING PARTS		
	NAS220-10	. SCREW		9
	AN960DBL	. WASHER.		9
	NAS679A08W	. NUT		9
11	65-5437-87	. . RETAINER, STATION 600K TO 820 ACCESS DOOR SEAL. . .		1
12	65-5437-232	. . SEAL, STATION 600K TO 820 ACCESS DOOR (EXTRUSION. . NO. BAC1530-6 X 35.9 IN. LG)		1
13	65-5437-207	. SEAL ASSY, STATION 600K TO 820 ACCESS DOOR.		1
		ATTACHING PARTS		
	NAS220-10	. SCREW		11
	AN960DBL	. WASHER.		11
	NAS679A08W	. NUT		11
14	65-5437-86	. . RETAINER, STATION 600K TO 820 ACCESS DOOR SEAL. . .		1
15	65-5437-231	. . SEAL, STATION 600K TO 820 ACCESS DOOR (EXTRUSION. . NO. BAC1530-6 X 42 IN. LG)		1
16	65-5437-206	. SEAL ASSY, STATION 600K TO 820 ACCESS DOOR.		1
		ATTACHING PARTS		
	NAS220-10	. SCREW		7
	AN960DBL	. WASHER.		7
	NAS679A08W	. NUT		7
17	65-5437-85	. . RETAINER, STATION 600K TO 820 ACCESS DOOR SEAL. . .		1
18	65-5437-230	. . SEAL, STATION 600K TO 820 ACCESS DOOR (EXTRUSION. . NO. BAC1530-6 X 28.2 IN. LG)		1
19	65-5437-205	. SEAL ASSY, STATION 600K TO 820 ACCESS DOOR.		1
		ATTACHING PARTS		
	NAS220-10	. SCREW		3
	AN960DBL	. WASHER.		3
	NAS679A08W	. NUT		3
20	65-5437-84	. . RETAINER, STATION 600K TO 820 ACCESS DOOR SEAL. . .		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

BOEING **707** Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
8	21	65-5437-229	. . SEAL, STATION 600K TO 820 ACCESS DOOR (EXTRUSION. . NO. BAC1530-6 X 9 IN. LG)								1
	22	BACW10B1	. WASHER.								1
	23	BACS20A5C	. SPRING.								4
	24	65-5437-67	. DOOR ASSY, STATION 600K TO 820 ACCESS INSPECTION (LH ONLY)								1
	24	65-5437-117	. DOOR ASSY, STATION 600K TO 820 ACCESS INSPECTION (RH ONLY)								1
	25	BACP18A5	. . PIN								4
	26	BACS21C110-8	. . STUD.								1
	27	BACS21B5FH11	. . STUD.								1
	28	BACS21B5FH14	. . STUD.								2
	30	66-8623	. . DOOR, AIR CYCLING MACHINE INSPECTION (LH ONLY). . .								1
	30	66-8623-3	. . DOOR, AIR CYCLING MACHINE INSPECTION (RH ONLY). . .								1
	31	66-8624	. HINGE HALF, STATION 600K TO 800 ACCESS DOOR								1
	31B	66-8624	. HINGE HALF.								4
	31C	60-1486-2000	. HINGE HALF, STATION 600K TO 800 ACCESS DOOR								1
			ATTACHING PARTS								
	31F	MS20426D6	. RIVET								11
	31G	MS20426D6	. RIVET								2
	31H	NAS517-3-5	. SCREW								16
	31K	NAS517-3-5	. SCREW								3
	32B	AN960D10L	. WASHER.								16
	32C	AN960D10L	. WASHER.								3
	32G	NAS679A3W	. NUT								16
	32J	NAS679A3W	. NUT								3

	35	65-8379-7	. LATCH INSTL, STATION 812 ACCESS DOOR (SEE FIG. 9) . .								1
	36	65-8379-2	. LATCH INSTL, STATION 743.50 ACCESS DOOR (SEE FIG. 9)								1
	37	65-8379-3	. LATCH INSTL, STATION 683.0 ACCESS DOOR (SEE FIG. 9) .								1
	38	65-8379-4	. LATCH INSTL, STATION 635.0 ACCESS DOOR (LH ONLY) (SEE FIG. 9)								1
	38	65-8379-13	. LATCH INSTL, STATION 635.0 ACCESS DOOR (RH ONLY) (SEE FIG. 9)								1
	39	65-8379-5	. LATCH INSTL, STATION 600K PLUS 7.80 ACCESS DOOR (LH . ONLY) (SEE FIG. 9)								1
	39	65-8379-12	. LATCH INSTL, STATION 600K PLUS 7.80 ACCESS DOOR (RH . ONLY) (SEE FIG. 9)								1
	40	65-8379-14	. LATCH INSTL, STATION 600K PLUS 4 ACCESS DOOR (LH. . . ONLY) (SEE FIG. 9)								1
	40	65-8379-15	. LATCH INSTL, STATION 600K PLUS 4 ACCESS DOOR (RH. . . ONLY) (SEE FIG. 9)								1
	41	AN7510-1	. PLATE								1
		MS20426D3	ATTACHING PARTS								
			. RIVET								4

MISSING ITEM NUMBERS ARE NOT APPLICABLE											

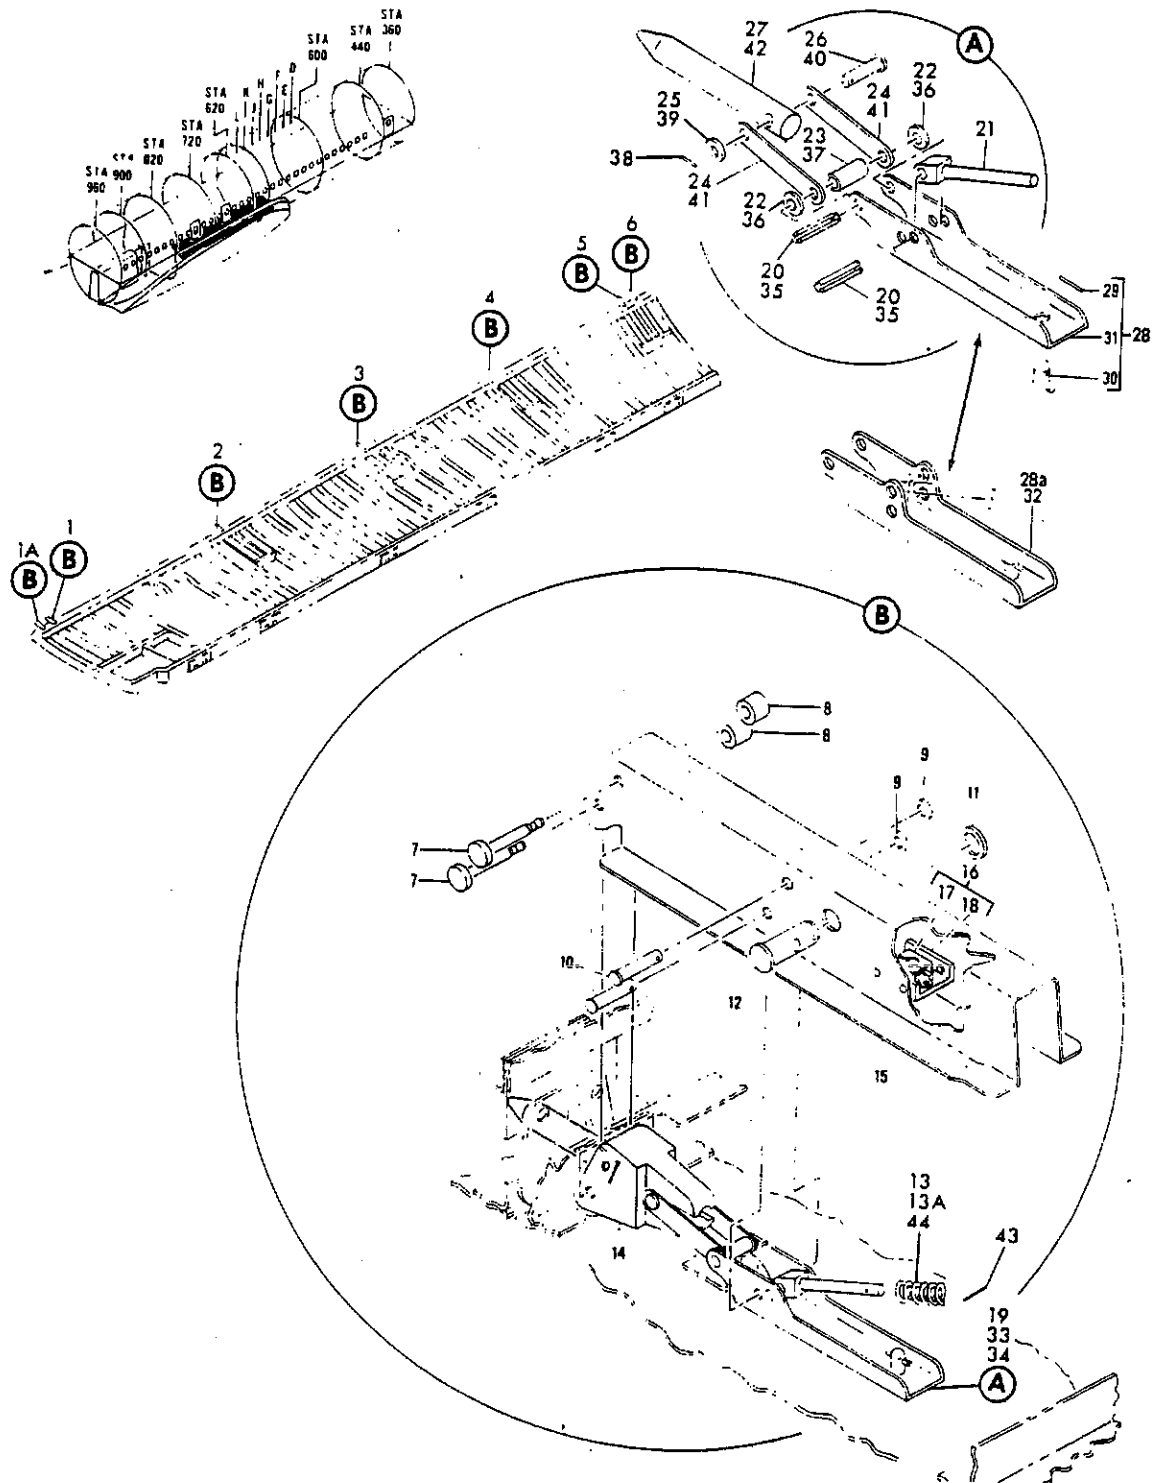


FIGURE 9. LATCH INSTL. STATION 600K TO 820 ACCESS DOOR

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
9 1	65-8379-7	LATCH INSTL, STATION 812 ACCESS DOOR (SEE FIG. 8, ITEM 35)		RF
2	65-8379-2	LATCH INSTL, STATION 743.50 ACCESS DOOR (SEE FIG. 8, ITEM 36)		RF
3	65-8379-3	LATCH INSTL, STATION 683 ACCESS DOOR (SEE FIG. 8, ITEM 37)		RF
4	65-8379-4	LATCH INSTL, STATION 635 ACCESS DOOR (LH) (SEE FIG. 8, ITEM 38 AND FIG. 8A, ITEM 40)		RF
4	65-8379-13	LATCH INSTL, STATION 635 ACCESS DOOR (RH) (SEE FIG. 8, ITEM 38 AND FIG. 8A, ITEM 40)		RF
5	65-8379-5	LATCH INSTL, STATION 600K PLUS 7.80 ACCESS DOOR (LH). (SEE FIG. 8, ITEM 39 AND FIG. 8A, ITEM 39)		RF
5	65-8379-12	LATCH INSTL, STATION 600K PLUS 7.80 ACCESS DOOR (RH). (SEE FIG. 8, ITEM 39 AND FIG. 8A, ITEM 39)		RF
6	65-8379-14	LATCH INSTL, STATION 600K PLUS 4 ACCESS DOOR (LH) (SEE FIG. 8, ITEM 40 AND FIG. 8A, ITEM 38)		RF
6	65-8379-15	LATCH INSTL, STATION 600K PLUS 4 ACCESS DOOR (RH) (SEE FIG. 8, ITEM 40 AND FIG. 8A, ITEM 38)		RF
7	BACR15AY6-21	RIVET		2
8	NAS528A6	COLLAR.		2
9	AN960D10L	WASHER.		2
10	MS20392-2C37	PIN, (NOT USED ON 65-10353)		2
11	AN960D616L	WASHER.		1
	69-22033	SUPPORT ASSY, ACCESS DOOR LATCH MECHANISM (USED ON 65-8379-7)		1
	69-8619	SUPPORT ASSY, ACCESS DOOR LATCH MECHANISM (USED ON 65-8379-2)		1
	69-8621	SUPPORT ASSY, ACCESS DOOR LATCH MECHANISM (USED ON 65-8379-3)		1
	69-8622-5	SUPPORT ASSY, ACCESS DOOR LATCH MECHANISM (USED ON 65-8379-4)		1
	69-8622-6	SUPPORT ASSY, ACCESS DOOR LATCH MECHANISM (USED ON 65-8379-13)		1
	69-8618-5	SUPPORT ASSY, ACCESS DOOR LATCH MECHANISM (USED ON 65-8379-5 AND -14)		1
	69-8618-6	SUPPORT ASSY, ACCESS DOOR LATCH MECHANISM (USED ON 65-8379-12 AND -15)		1
15	69-22033-1	SUPPORT, ACCESS DOOR LATCH MECHANISM (USED ON 69-22033)		1
15	69-8619-1	SUPPORT, ACCESS DOOR LATCH MECHANISM (USED ON 69-8619)		1
15	69-8621-1	SUPPORT, ACCESS DOOR LATCH MECHANISM (USED ON 69-8621)		1
15	69-8622-3	SUPPORT, ACCESS DOOR LATCH MECHANISM (USED ON 69-8622-5)		1
15	69-8622-4	SUPPORT, ACCESS DOOR LATCH MECHANISM (USED ON 69-8622-6)		1
15	69-8618-3	SUPPORT, ACCESS DOOR LATCH MECHANISM (USED ON 69-8618-5)		1
15	69-8618-4	SUPPORT, ACCESS DOOR LATCH MECHANISM (USED ON 69-8618-6)		1
16	30-2259-3000	STOP ASSY, ACCESS DOOR LATCH.		1
17	BACS20A5P	SPRING.		1
18	30-2259-2001	STOP, ACCESS DOOR LATCH		1
33	H833-1	LATCH KIT, (STATION 683) (V83014)		1
33	H833-3	LATCH KIT, (STATION 743.50) (V83014).		1
33	H833-3	LATCH KIT, (STATION 812) (V83014) (USED ON 65-8379-7, -16 AND -19)		1
33	H833-7	LATCH KIT, (STATION 600K PLUS 4.0 AND 600K PLUS 7.80) (V83014) (USED ON 65-8379-5, -12, -14 AND -15) (OPTIONAL 65-71072-3) (OPTIONAL 50-1587-3009 WITH 30-2230, 30-2240, 60-2613-2001)		1
33	H833-7	LATCH KIT, (STATION 600K PLUS 4.0 AND 600K PLUS 7.80) (V83014)		1
33	H833-9	LATCH KIT, (STATION 635) (V83014) (USED ON 65-8379-4 AND -13)		1
M 34	H833-11	LATCH ASSY, (V83014).		1
M 35	52-040-187-1000	PIN, (V22599)		2
M 36	AN960D10L	WASHER.		2
M 37	NAS43DD3-34	SPACER.		1
M 38	MS24665-132	PIN		1
M 39	AN960D10L	WASHER.		1
M 40	MS20392-2023	PIN		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
9 M 41	105757-1	.	.	.	LINK, (V83014).	.	.	.		2
M 42	105756-1	.	.	.	PIN, SHEAR (V83014)	.	.	.		1
M 43	105760-1	.	.	.	PIN, (V83014)	.	.	.		1
M 44	105759-1	.	.	.	SPRING, (V83014).	.	.	.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

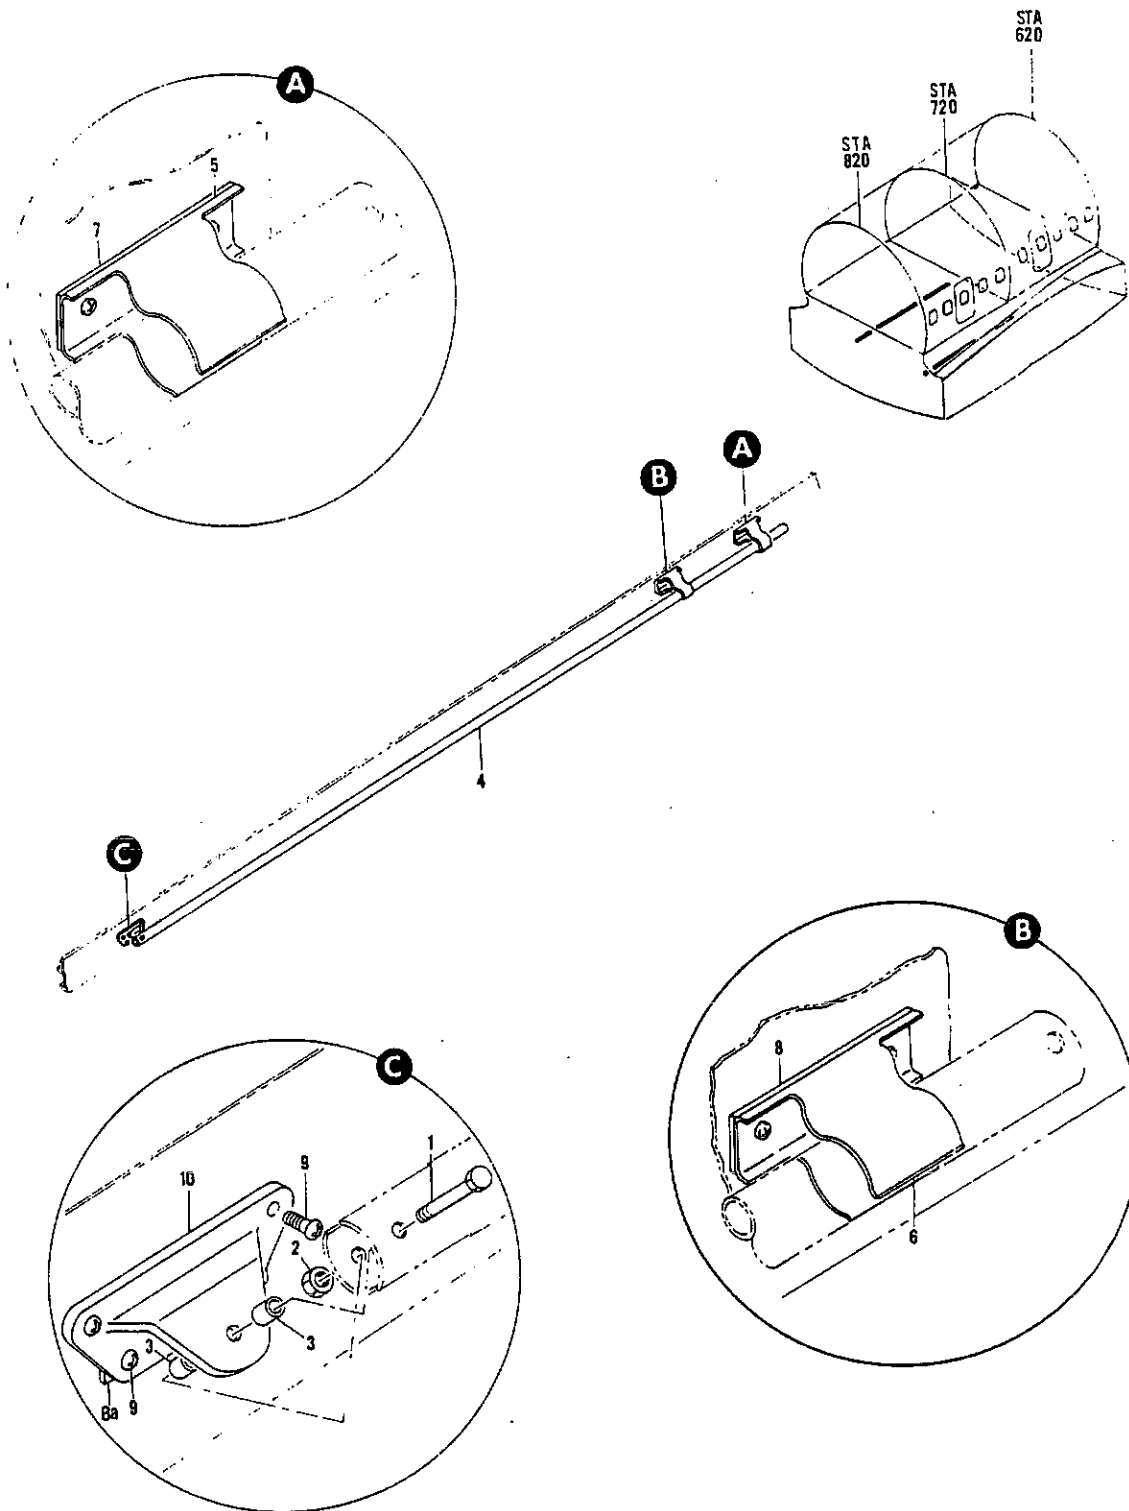


FIGURE 10. BRACE INSTL, ACCESS DOOR



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
10	69-9705-5		BRACE INSTL, ACCESS DOOR (LH) (SEE 53-2, FIG. 2, ITEM . 100)		RF
	69-9705-6		BRACE INSTL, ACCESS DOOR (RH) (SEE 53-2, FIG. 2, ITEM . 101)		RF
1	AN3-10		. BOLT		1
2	AN320-3		. NUT		1
3	NAS43DD3-14		. SPACER		2
4	66-3637-2000		. TUBE, DOOR BRACE		1
5	66-3658-3001		. CATCH, ACCESS DOOR BRACE		1
			ATTACHING PARTS		
	NAS220-6		. SCREW		2
	NAS220-9		. SCREW		AR
7	BACS40E13-39		. FILLER, ACCESS DOOR BRACE		AR
8A	69-9705-7		. FILLER, ACCESS DOOR BRACE		AR
9	NAS221-9		. SCREW		4
10	63-1977-2000		. BRACKET, ACCESS DOOR BRACE		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 09
MISCELLANEOUS

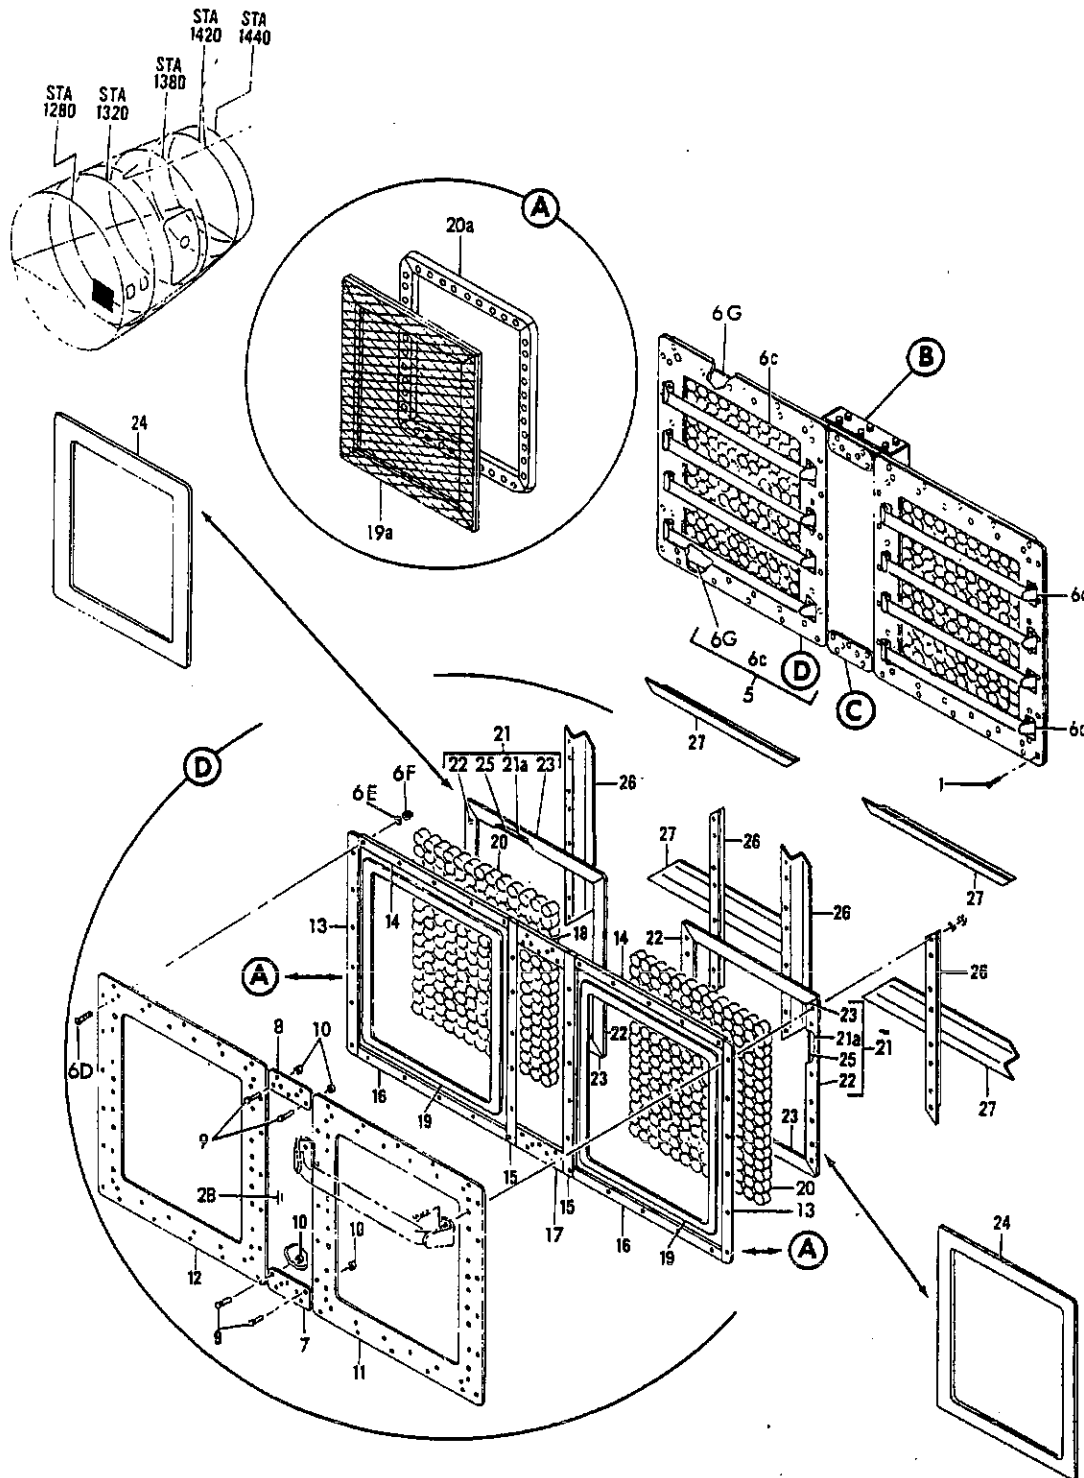


FIGURE 1. PANEL INSTL, BODY STATION 1300 XPL DECOMPRESSION (SHEET 1)

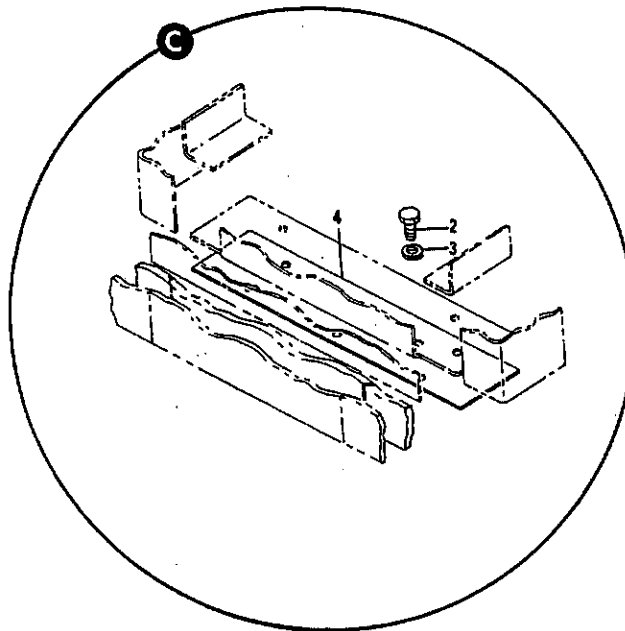
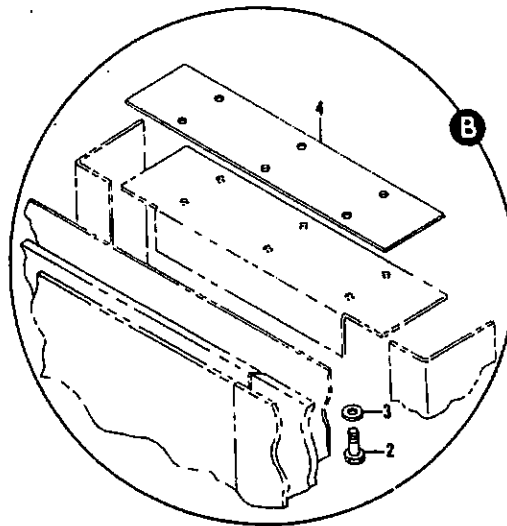


FIGURE 1. PANEL INSTL. BODY STATION 1300 XPL DECOMPRESSION (SHEET 2)

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1	65-5453		PANEL INSTL, BODY STATION 1300 XPL DECOMPRESSION (SEE 53-4, FIG. 22, ITEM 3)		RF
1	NAS514P1032-10		• SCREW		46
2	NAS1303-1		• BOLT.		11
3	AN960D10L		• WASHER.		11
4	BACS40826-114		• SHIM.		AR
5	65-5453-16		• PANEL ASSY, BODY STATION 1300 XPL DECOMPRESSION		1
6	NAS514P1032-10		• SCREW		31
6A	AN960D10L		• WASHER.		31
6B	BACN108Y53W		• NUT		31
6D	NAS514P1032-10		• SCREW		21
6E	AN960D10L		• WASHER.		21
6F	BACN108Y53W		• NUT		21
7	65-5453-6		• PLATE, CLIP		1
8	65-5453-7		• PLATE, BODY STATION 1300 XPL DECOMPRESSION PANEL. CLIP ATTACHING PARTS		1
9	AN426D6		• RIVET		10
10	NAS42DD6-11		• SPACER.		10
11	65-5453-2		• PLATE, BODY STATION 1300 XPL DECOMPRESSION PANEL. LOWER BEAM FACE		1
12	65-5453-3		• PLATE, BODY STATION 1300 XPL DECOMPRESSION PANEL. UPPER BEAM FACE		1
13	69-4118-7		• SEAL, OUTBOARD FRAME RUBBER		2
14	69-4118-5		• SEAL, UPPER FRAME RUBBER.		2
15	69-4118-8		• SEAL, INBOARD FRAME RUBBER.		2
16	69-4118-6		• SEAL, LOWER FRAME RUBBER.		2
17	69-4118-9		• SEAL, LOWER BEAM RUBBER		1
18	69-4118-10		• SEAL, UPPER BEAM RUBBER		1
19	69-4118-800		• SEAL, FORWARD GRILL RUBBER.		2
20	69-4607		• GRILL ASSY, DECOMPRESSION PANEL		2
21	69-4118-17		• VALVE ASSY, RUBBER SEAL (OPTIONAL 69-4118-16) (USED ON 65-5453-16)		2
21	69-4118-16		• VALVE ASSY, RUBBER SEAL (OPTIONAL TO 69-4118-17) (USED ON 65-5453-16)		2
21A	69-4118-1		• SEAL, FORWARD GRILLE (USED ON 69-4118-16)		1
22	69-4118-2		• RETAINER, VALVE END RUBBER (EXTRUSION NO. BAC1521-488 X 15 IN. LG) (USED WITH 69-4118-3) (OPTIONAL 69-4118-801) (USED ON 69-4118-14 AND -16)		2
22	69-4118-801		• RETAINER, VALVE END RUBBER (EXTRUSION NO. BAC1521-488 X 15 IN. LG) (USED WITH 69-4118-3) (OPTIONAL TO 69-4118-2) (USED ON 69-4118-14 AND -16)		2
23	69-4118-3		• RETAINER, VALVE SIDE RUBBER (EXTRUSION NO. BAC1521-488 X 15 IN. LG) (USED WITH 69-4118-2) (OPTIONAL 69-4118-801) (USED ON 69-4118-14 AND -16)		2
23	69-4118-801		• RETAINER, VALVE SIDE RUBBER (EXTRUSION NO. BAC1521-488 X 15 IN. LG) (USED WITH 69-4118-2) (OPTIONAL TO 69-4118-3) (USED ON 69-4118-14 AND -16)		2
24	69-4118-801		• RETAINER, VALVE RUBBER. (OPTIONAL TO 69-4118-2 USED WITH 69-4118-3) (USED ON 69-4118-14 AND -16)		1
24	69-4118-18		• SEAL, VALVE RUBBER (USED ON 69-4118-17)		1
25	69-4118-15		• PLATE, VALVE.		1
26	65-5453-4		• RETAINER, BODY STATION 1300 XPL DECOMPRESSION PANEL SIDE		4
27	65-5453-5		• RETAINER, BODY STATION 1300 XPL DECOMPRESSION PANEL SIDE		4
28	65-5453-12		• PLATE, BODY STATION 1300 XPL DECOMPRESSION PANEL. BEAM COVER		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

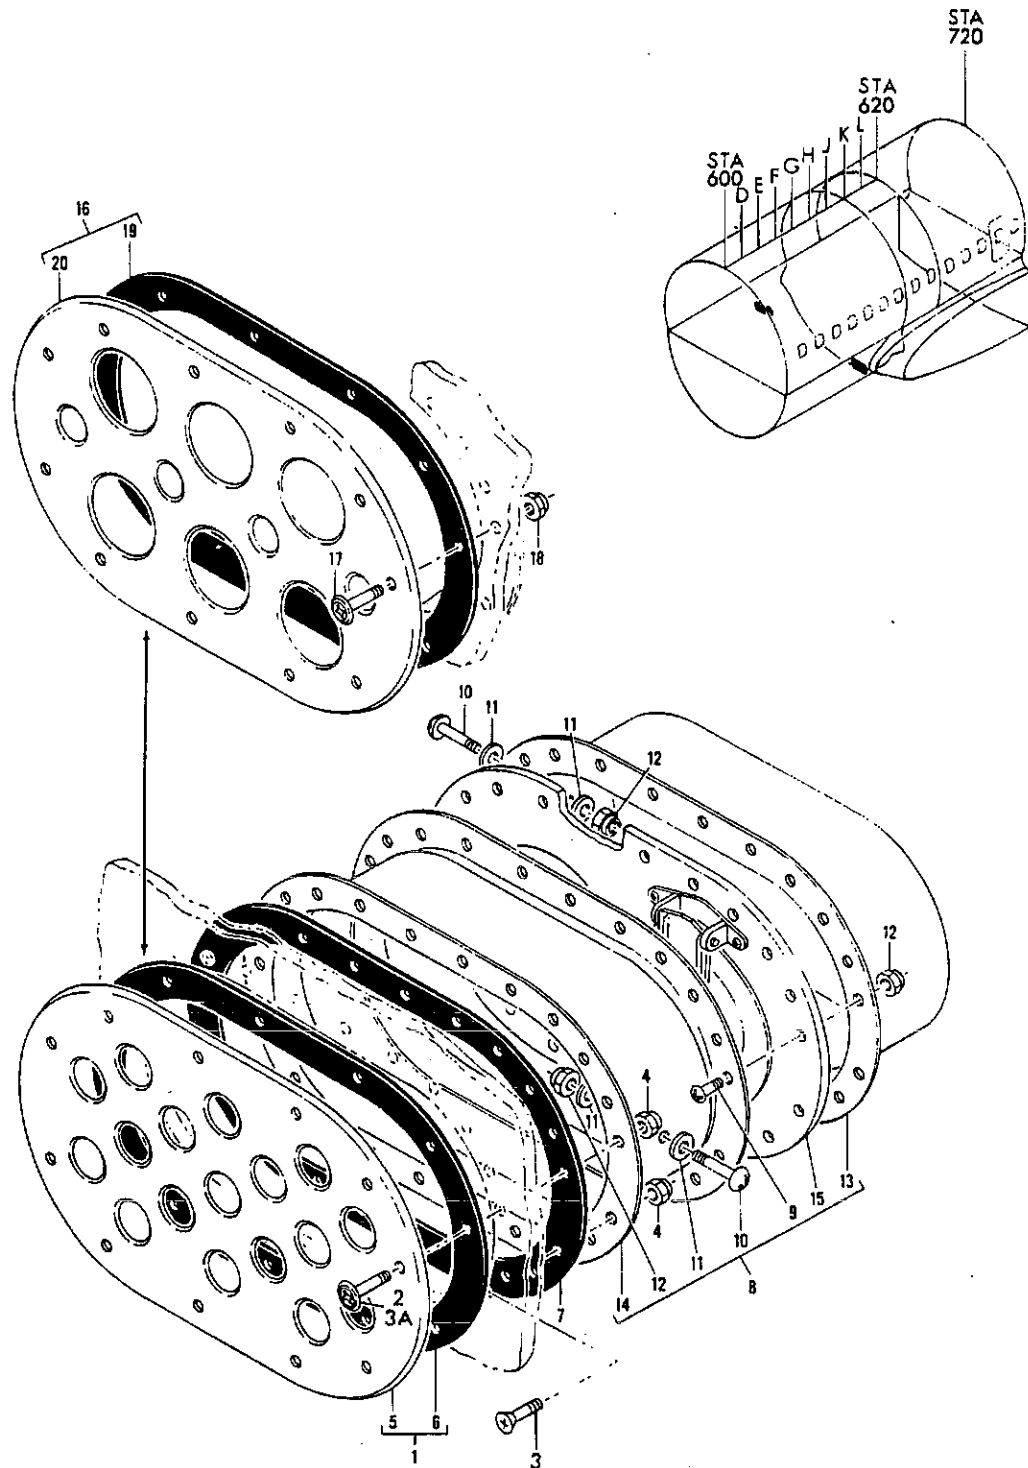


FIGURE 2. VALVE INSTL, FORWARD CARGO COMPARTMENT PRESSURE RELIEF
GRILLE INSTL, FORWARD CARGO COMPARTMENT AIR OUTLET BULKHEAD



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2			VALVE INSTL, FORWARD CARGO COMPARTMENT PRESSURE RELIEF GRILLE INSTL, FORWARD CARGO COMPARTMENT AIR OUTLET. . .	0150 5199	RF
	65-4727-3		BULKHEAD . VALVE INSTL, FORWARD CARGO COMPARTMENT PRESSURE . . .	0150	RF
	65-4727-2		RELIEF LH (SEE 25-1, FIG. 3, ITEM 6) . VALVE INSTL, FORWARD CARGO COMPARTMENT PRESSURE . . .	0150	RF
1	69-4337		RELIEF RH (SEE 25-1, FIG. 3, ITEM 7) . GRILLE ASSY, PRESSURE RELIEF VALVE BULKHEAD . . .	0150	1
2	BACS12N10-10		ATTACHING PARTS . SCREW ASSY, (LH ONLY)	0150	11
2	BACS12N10-10		. SCREW ASSY, (RH ONLY)	0150	11
3	NAS514P1032-14		. SCREW, (LH ONLY)	0150	11
3	NAS514P1032-14		. SCREW, (RH ONLY)	0150	11
4	NAS679A3W		. NUT, (LH ONLY)	0150	22
4	NAS679A3W		. NUT, (RH ONLY)	0150	22
5	66-3436		-----*----- . GRILLE, CARGO COMPARTMENT PRESSURE RELIEF	0150	1
6	66-3433-2		BULKHEAD . GASKET, PRESSURE RELIEF VALVE ADAPTER	0150	1
7	66-3433-3		. GASKET, PRESSURE RELIEF VALVE ADAPTER	0150	1
8	65-4704		. VALVE ASSY, CARGO COMPARTMENT PRESSURE RELIEF . . .	0150	1
9	NAS221-9		. SCREW	0150	22
10	NAS603-1B		. SCREW	0150	2
11	AN960D10		. WASHER	0150	4
12	BACN10BY53		. NUT	0150	24
13	69-3597		. ADAPTER ASSY, PRESSURE RELIEF VALVE	0150	1
14	69-3598		. ADAPTER ASSY, PRESSURE RELIEF VALVE	0150	1
15	1111-569863		. VALVE, SWING CHECK (V92003)	0150	1
15	2S2072		(OPTIONAL 2S2072 (V99240)) . VALVE, SWING CHECK (V99240)	0150	1
	65-8639-3		(OPTIONAL TO 1111-569863 (V92003)) . GRILLE INSTL, FORWARD CARGO COMPARTMENT AIR OUTLET. .	5199	RF
	65-8639-2		BULKHEAD LH (SEE 25-1, FIG. 3, ITEM 8) . GRILLE INSTL, FORWARD CARGO COMPARTMENT AIR OUTLET. .	5199	RF
16	69-8674		BULKHEAD RH (SEE 25-1, FIG. 3, ITEM 9) . GRILLE ASSY, AIR OUTLET BULKHEAD.	5199	1
17	BACS12N10-10		ATTACHING PARTS . SCREW ASSY.	5199	11
18	NAS679A3W		. NUT	5199	11
19	66-3433-2		-----*----- . GASKET, PRESSURE RELIEF VALVE ADAPTER	5199	1
20	66-8619		. GRILLE, CARGO COMPARTMENT AIR OUTLET BULKHEAD . .	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

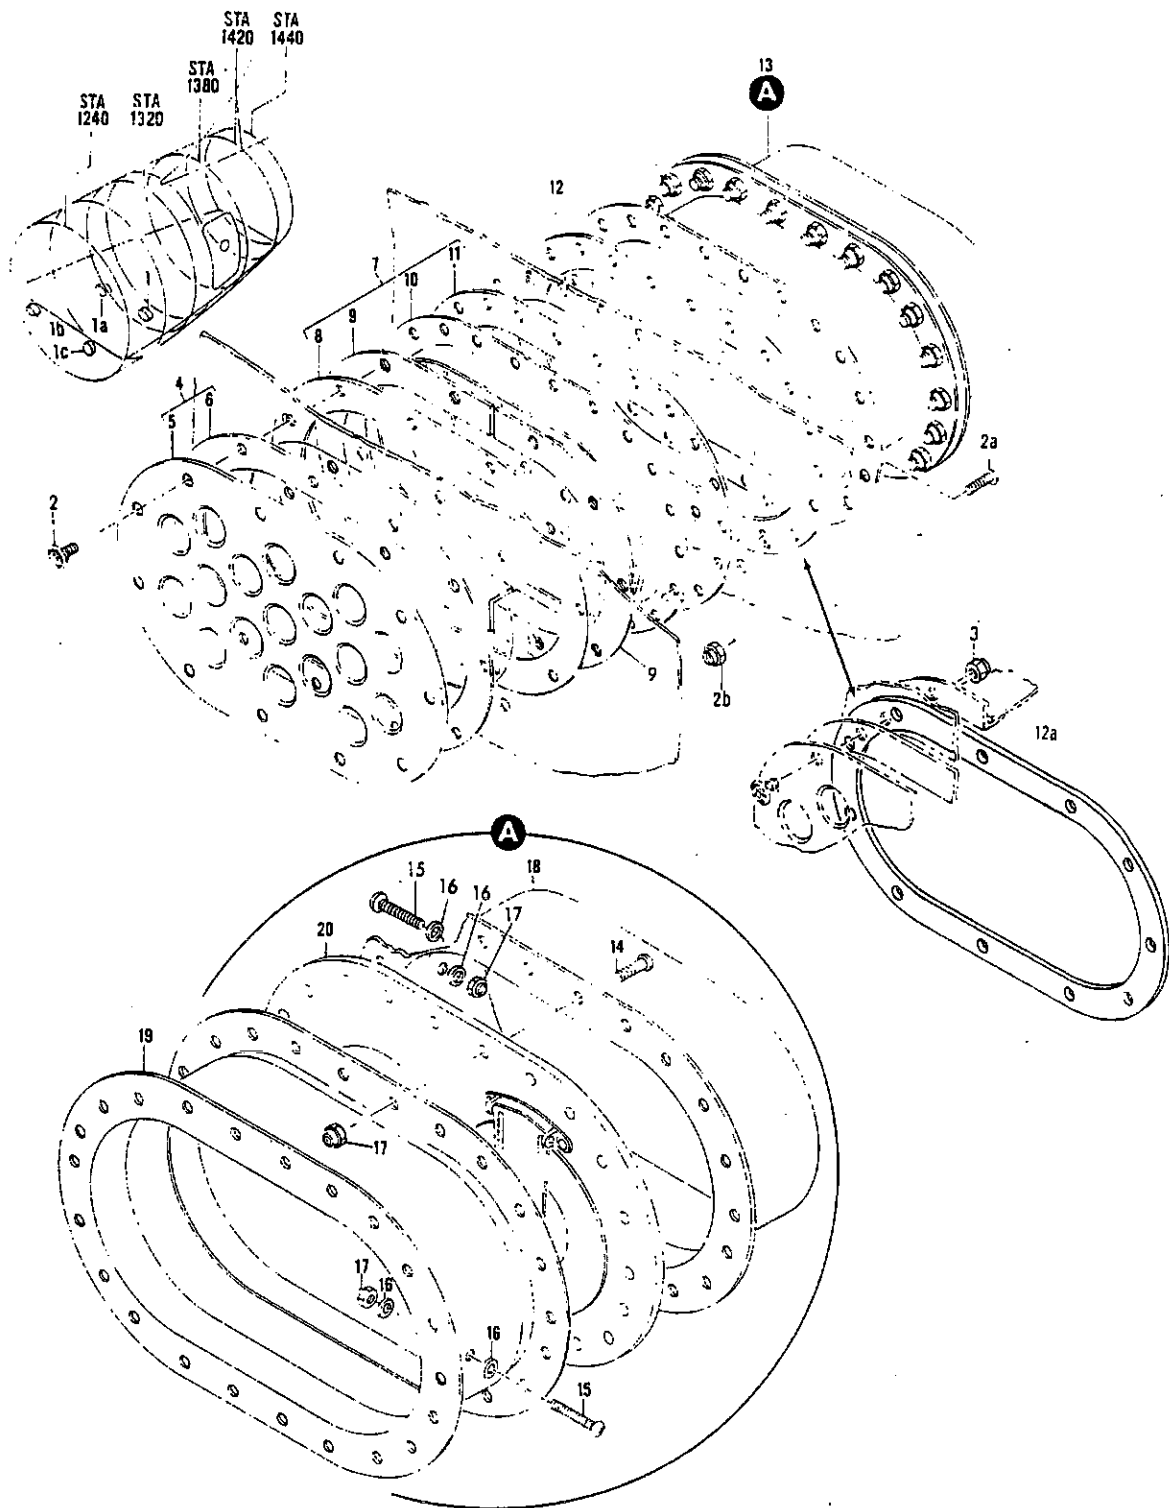


FIGURE 3. VALVE INSTL, AFT CARGO COMPARTMENT PRESSURE RELIEF



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3	1	65-4728-1		RF
	1B	65-4728-3	0150	RF
	1B	65-4728-4	5199	RF
	2	BACSI2N10-10		11
	2A	NAS221-9		22
	2B	NAS679A3W		22
	3	NAS679A3W		11
	4	69-4337		1
	5	66-3436		1
	6	66-3433-2		1
	7	65-6099		1
	8	66-3433-2		1
	9	66-4303		2
	10	69-4625-1		1
	11	66-3433-3		1
	12	66-3433-3		1
	12A	66-3433-4		1
	13	65-4704		1
	14	NAS221-9		22
	15	NAS603-18		2
	16	AN960D10		4
	17	BACN108Y53		24
	18	69-3597		1
	19	69-3598		1
	20	1111-569863		1
	20	2S2072		1
		VALVE INSTL, AFT CARGO COMPARTMENT PRESSURE RELIEF (LH) (SEE 25-1, FIG. 4, ITEM 9)		
		VALVE INSTL, AFT CARGO COMPARTMENT PRESSURE RELIEF (RH) (SEE 25-1, FIG. 4, ITEM 10A)		
		VALVE INSTL, AFT CARGO COMPARTMENT PRESSURE RELIEF (RH) (SEE 25-1, FIG. 4, ITEM 10A)		
		. SCREW ASSY.		
		. SCREW, (USED ON 65-4728-1 AND -2)		
		. NUT, (USED ON 65-4728-1 AND -2)		
		. NUT, (USED ON 65-4728-3, -4 AND -5)		
		. GRILLE ASSY, PRESSURE RELIEF VALVE BULKHEAD		
		. GRILLE, CARGO COMPARTMENT PRESSURE RELIEF BULKHEAD		
		. GASKET, PRESSURE RELIEF VALVE ADAPTER		
		. CHANNEL ASSY, ADAPTER (USED ON 65-4728-1 AND -2)		
		. GASKET.		
		. FLANGE, GRILLE.		
		. FLANGE, GRILLE.		
		. GASKET.		
		. GASKET, (USED ON 65-4728-1 AND -2).		
		. GASKET, (USED ON 65-4728-3, -4 AND -5).		
		. VALVE ASSY, CARGO COMPARTMENT PRESSURE RELIEF		
		. SCREW		
		. SCREW		
		. WASHER.		
		. NUT		
		. ADAPTER ASSY, PRESSURE RELIEF VALVE		
		. ADAPTER ASSY, PRESSURE RELIEF VALVE		
		. VALVE, SWING CHECK (V92003) (OPTIONAL 2S2072 (V99240))		
		. VALVE, SWING CHECK (V99240) (OPTIONAL TO 1111-569863 (V92003))		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

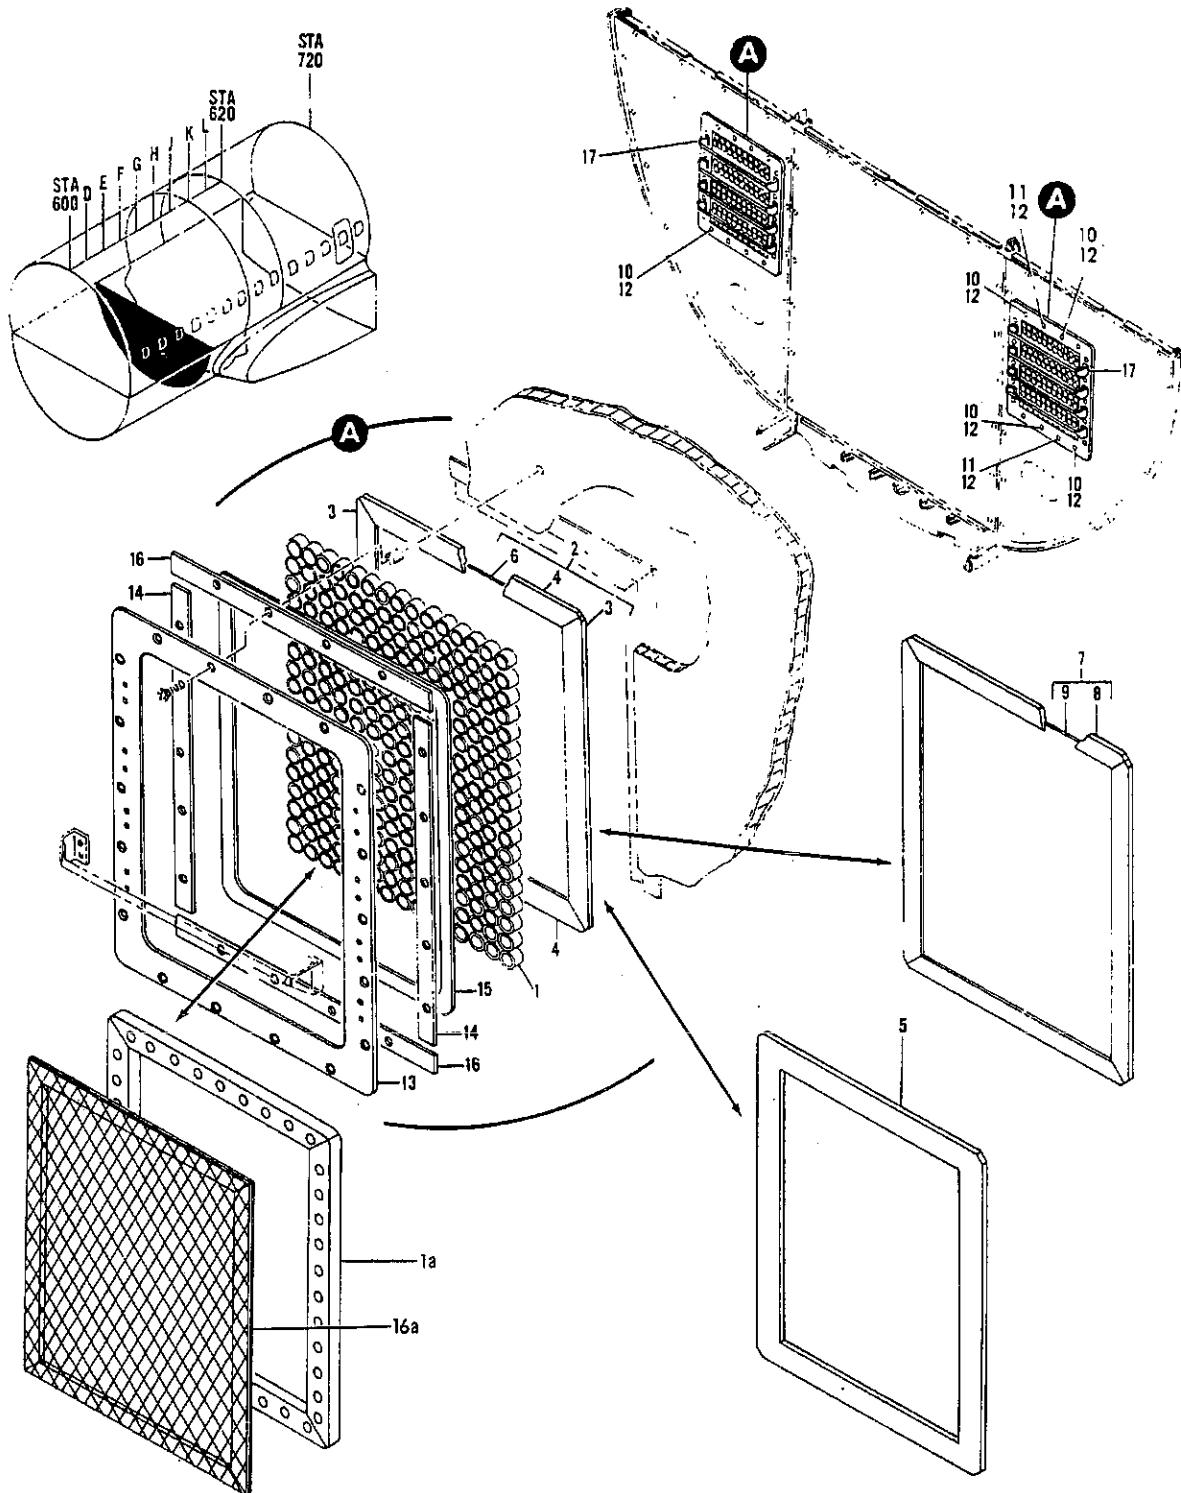


FIGURE 4. PANEL INSTL. FORWARD CARGO COMPARTMENT REAR WALL (AIR CONDITIONING ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
4	65-2112-84		PANEL INSTL, FORWARD CARGO COMPARTMENT REAR WALL (AIR . CONDITIONING ONLY) (SEE 53-2, FIG. 2, ITEM 71)		RF
1	69-4607		. GRILLE ASSY, DECOMPRESSION PANEL.		2
2	69-4118-14		. VALVE ASSY, RUBBER SEAL (OPTIONAL TO 69-4118-17).		2
3	69-4118-2		. . RETAINER, RUBBER SEAL VALVE END (USED WITH. 69-4118-3) (OPTIONAL 69-4118-801)		2
4	69-4118-3		. . RETAINER, RUBBER SEAL VALVE SIDE (USED WITH. 69-4118-2) (OPTIONAL 69-4118-801)		2
5	69-4118-801		. . RETAINER, RUBBER SEAL VALVE (OPTIONAL TO 69-4118-2 WITH 69-4118-3)		1
6	69-4118-15		. . PLATE, RUBBER SEAL VALVE.		1
7	69-4118-17		. VALVE ASSY, RUBBER SEAL (OPTIONAL 69-4118-14).		2
8	69-4118-18		. . SEAL, VALVE RUBBER.		1
9	69-4118-15		. . PLATE, RUBBER SEAL VALVE.		1
10	NAS514P1032-16		. SCREW, (USED WITH 69-4118-14).		34
10	NAS514P1032-18		. SCREW, (USED WITH 69-4118-17).		34
11	NAS514P1032-36		. SCREW, (USED WITH 69-4118-14).		2
11	NAS514P1032-40		. SCREW, (USED WITH 69-4118-17).		2
12	NAS42DD6-25		. SPACER.		36
13	65-2112-69		. FRAME, FORWARD CARGO COMPARTMENT REAR WALL PANEL.		2
14	69-4118-13		. SEAL, RUBBER FRAME.		4
15	69-4118-800		. SEAL, FORWARD GRILLE RUBBER.		2
16	69-4118-12		. SEAL, RUBBER FRAME.		4
			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

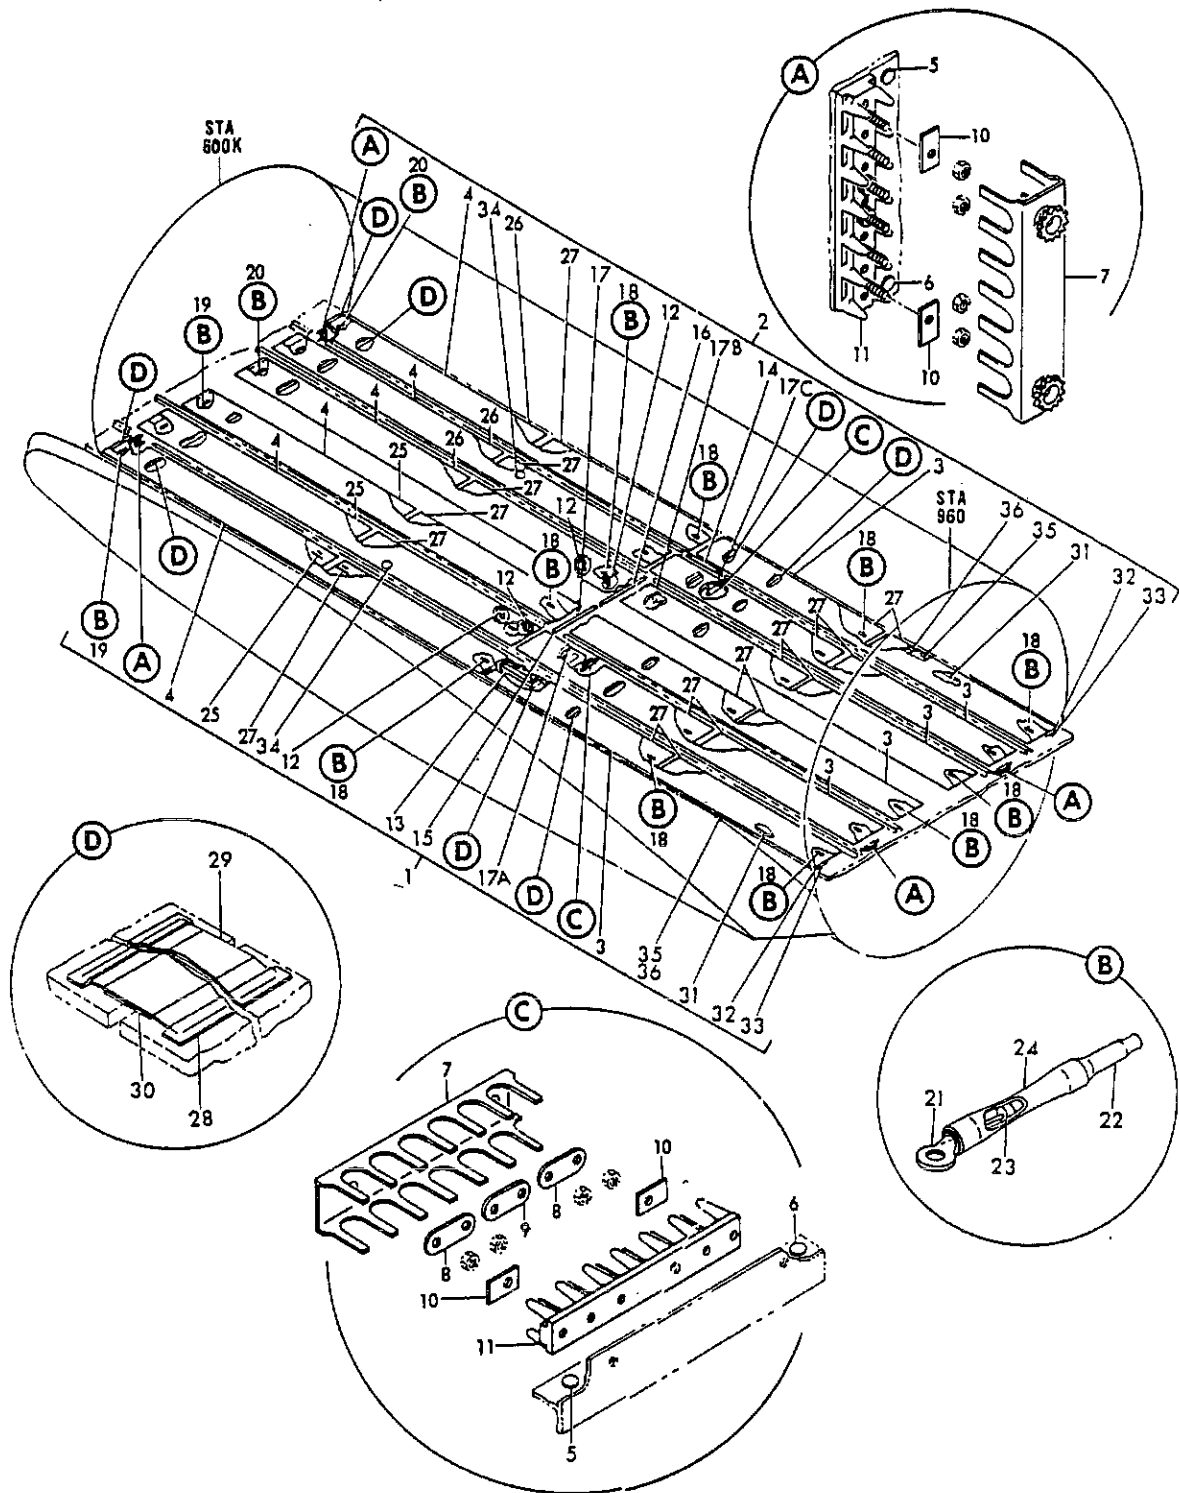


FIGURE 5. BLANKET INSTL, PASSENGER FLOOR HEATING



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE					EFF FROM TO	UNITS PER ASSY
R	5	65-19841-3	BLANKET INSTL, PASSENGER FLOOR HEATING (LH) (SEE 24-3, FIG. 2, ITEM 86)					0103	RF
R		65-19841-3	BLANKET INSTL, PASSENGER FLOOR HEATING (LH) (DELETED BY RAF MOD 7211.0189-204) (SEE 24-3, FIG. 2, ITEM 86)					0450	RF
R		SYB26732-3	BLANKET INSTL, PASSENGER FLOOR HEATING (LH) (ADDED BY RAF MOD 7211.0189-204) (SEE 24-3, FIG. 2, ITEM 86)					0450	RF
R		65-19841-4	BLANKET INSTL, PASSENGER FLOOR HEATING (RH) (SEE 24-3, FIG. 2, ITEM 87)					0103	RF
R		65-19841-4	BLANKET INSTL, PASSENGER FLOOR HEATING (RH) (DELETED BY RAF MOD 7211.0189-204) (SEE 24-3, FIG. 2, ITEM 87)					0450	RF
R		SYB26732-4	BLANKET INSTL, PASSENGER FLOOR HEATING (RH) (ADDED BY RAF MOD 7211.0189-204) (SEE 24-3, FIG. 2, ITEM 87)					0450	RF
R	1	65-19841-97	EQUIPMENT ASSY, (LH ONLY)					0150	1
R	2	65-19841-98	EQUIPMENT ASSY, (RH ONLY)					0150	1
R	3	65-19841-62	COVER					0150	3
R	4	65-19841-63	COVER					0150	3
R	5	BACMIONOO-2PP	APPLIQUE, 1					0150	3
R	6	BACMIONOO-2AAW	APPLIQUE, 6					0150	3
R	7	BACC50C22A	COVER ASSY.					0150	3
R	8	MS25226-4-2	BUS					0150	2
R	9	MS25226-4-2	BUS, (RH ONLY)					0150	1
R	10	MS25227-3A	STRIP					0150	6
R	11	MS25123-2-6	TERMINAL BOARD ASSY					0150	3
R		NAS602-6	ATTACHING PARTS					0150	6
R		NAS679A04W	SCREW					0150	6
R			NUT					0150	6
R	12	65-19841-33	CLIP ASSY					0150	2
R	13	65-19841-29	ANGLE, SUPPORT (LH ONLY)					0150	1
R	14	65-19841-30	ANGLE, SUPPORT (RH ONLY)					0150	1
R	15	65-19841-23	ANGLE, SUPPORT (LH ONLY)					0150	1
R	16	65-19841-22	ANGLE, SUPPORT (RH ONLY)					0150	1
R		NAS603-6	ATTACHING PARTS					0150	4
R		NAS679A3W	SCREW					0150	4
R			NUT					0150	4
R	17	65-19841-24	CLIP, SUPPORT (RH ONLY)					0150	1
R	17A	69-19841-25	CLIP, (LH ONLY)					0150	1
R	17B	69-19841-26	CLIP, (RH ONLY)					0150	1
R	17C	69-19841-27	CLIP ASSY, (RH ONLY)					0150	1
R	18	69-27972-1	FUSE ASSY					0150	9
R	19	69-27972-1	FUSE ASSY, (LH ONLY)					0150	3
R	20	69-27972-1	FUSE ASSY, (RH ONLY)					0150	3
R	21	BACT12S9	TERMINAL					0150	1
R	22	BACT12C14N	TERMINAL					0150	1
R	23	GFA1 1-2	FUSE, 1.5 AMP (V71400)					0150	1
R	24	69-27972-3	SLEEVING, HEAT SHRINKABLE					0150	1
R	25	10-60422-1	BLANKET, ELECTRIC (LH ONLY)					0150	3
R	26	10-60422-1	BLANKET, ELECTRIC (RH ONLY)					0150	3
R	27	10-60422-3	BLANKET, ELECTRIC					0150	9
R	28	65-19841-37	TAPE, MYLAR					0150	AR
R	29	65-19841-57	COVER, PANEL JOINT					0150	12
R	30	65-19841-56	TAPE, RUBBER					0150	12
R	31	65-19841-34	TAPE, DOUBLE BACK					0150	AR
R	32	65-19841-52	TAPE, MYLAR					0150	AR
R	33	65-19841-55	FILLER, TRACK					0150	AR
R	34	65-19841-51	FILLER					0150	AR
R	35	65-19841-35	TAPE, VELCRO LOOPS					0150	AR
R	36	65-19841-36	TAPE, VELCRO HOOKS					0150	AR

MISSING ITEM NUMBERS ARE NOT APPLICABLE

MISSING ITEM NUMBERS ARE NOT APPLICABLE

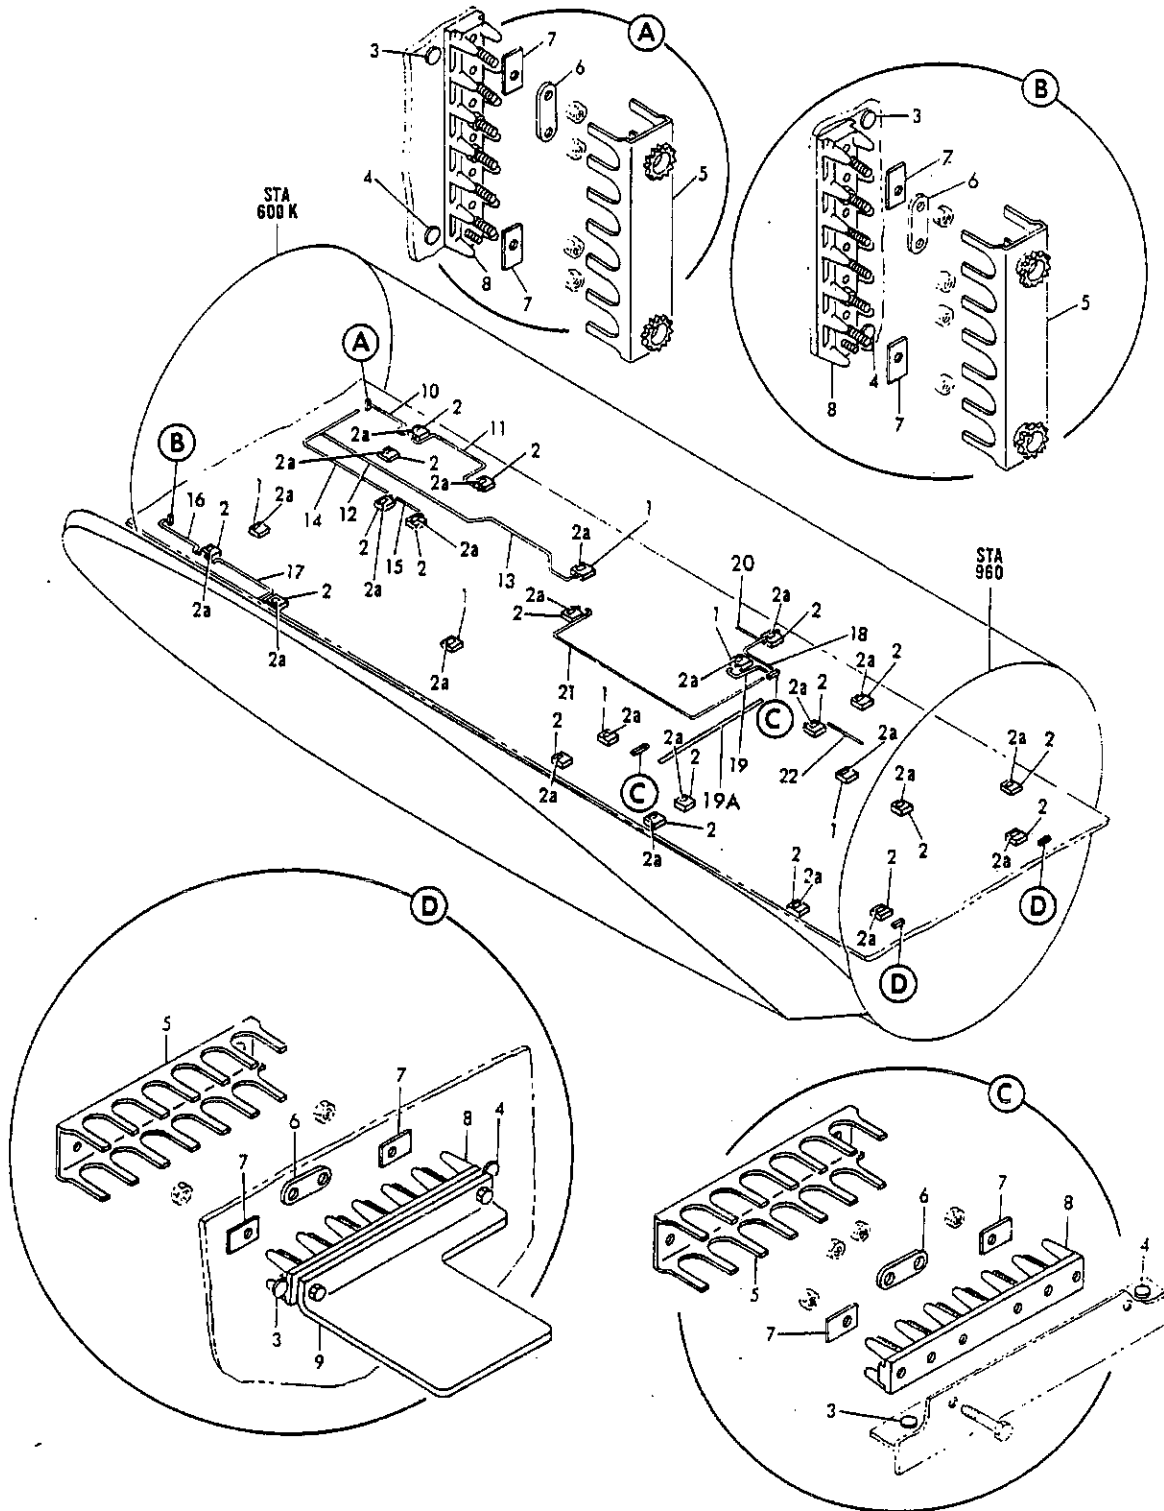


FIGURE 5B. BOX INSTL. CABIN FLOOR PANELS HEATED
TERMINAL STRIP INSTL. PASSENGER FLOOR HEATING
CONDUIT INSTL. CABIN FLOOR PANELS HEATED

DETAILED PARTS LIST
21-09-58
PAGE 0

21-09-58

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
58	65-19841-101	TERMINAL STRIP INSTL, PASSENGER FLOOR HEATING							5199	
		. TERMINAL STRIP INSTL, PASSENGER FLOOR HEATING (SEE.							5199	RF
		24-3, FIG. 2, ITEM 16)								
3	BACM10N00-2PP	. . MARKER-ALUMINUM FOIL, 1							5199	6
4	BACM10N00-2AAW	. . MARKER-ALUMINUM FOIL, 6							5199	6
5	MS18029-2S-6	. . COVER							5199	6
6	MS25226-4-2	. . BUS							5199	6
7	MS3373-2A	. . STRIP							5199	12
8	MS27212-2-6	. . TERMINAL BOARD ASSY							5199	6
		ATTACHING PARTS								
	NAS600-6P	. . SCREW							5199	12
	NAS679A04W	. . NUT							5199	12
		-----*-----								
9	65-23482-5	. . BRACKET, SUPPORT.							5199	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

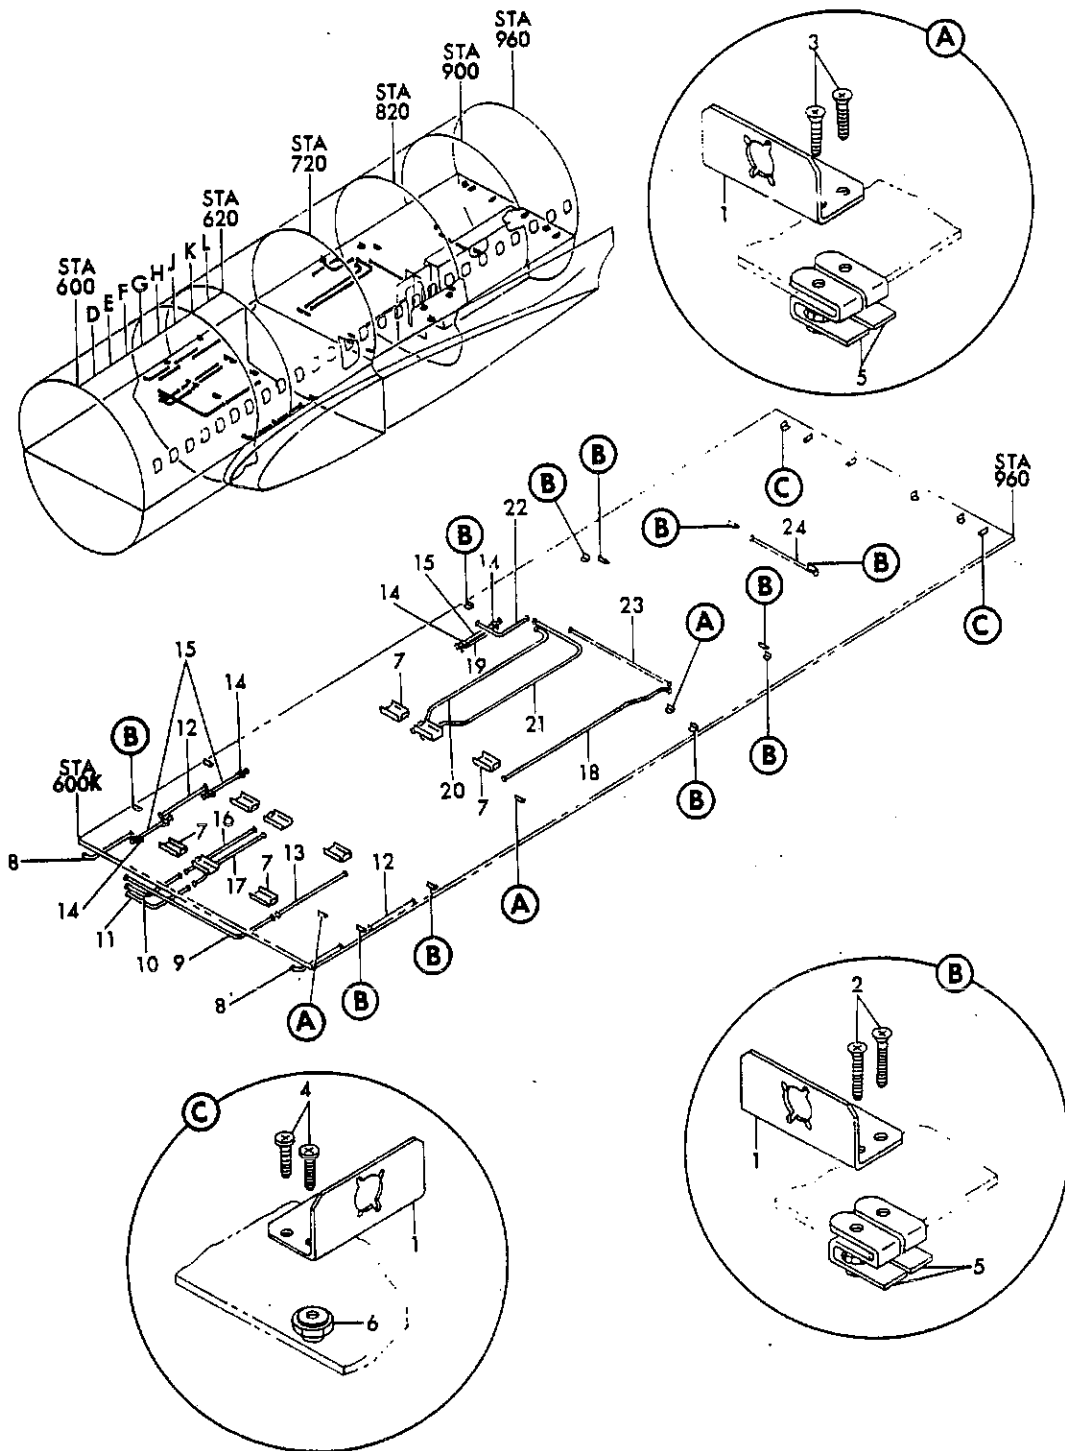


FIGURE 10. BRACKET INSTL. HEATED CABIN FLOOR PANELS DISCONNECT

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
10			BRACKET INSTL, HEATED CABIN FLOOR PANELS DISCONNECT . .	5199	
			CONDUIT INSTL, FLOOR PANELS HEATED.	5199	
	65-75190-1		BRACKET INSTL, HEATED CABIN FLOOR PANELS DISCONNECT . .	5199	RF
			(SEE 24-3, FIG. 2, ITEM 108)		
1A	69-58758-5		BRACKET	5199	2
1B	69-58758-8		BRACKET	5199	2
1C	69-58758-1		BRACKET	5199	17
1D	69-58758-4		SHIM.	5199	12
			ATTACHING PARTS		
2	NAS514P1032-12		SCREW	5199	24
3	NAS514P1032-8		SCREW	5199	6
4	NAS603-8P		SCREW	5199	12
5	BACN10FX4		NUT	5199	30
6	BACN10JC3		NUT	5199	12
			-----*		
7	69-59971-1		TRAY ASSY	5199	9
			ATTACHING PARTS		
	NAS602-5P		SCREW	5199	27
	BACN10JC08		NUT	5199	27
			-----*		
	65-75191-1		CONDUIT INSTL, FLOOR PANELS HEATED (SEE 24-3, FIG. 2, ITEM 110)	5199	RF
8	65-75191-10		CONDUIT	5199	2
9	65-75191-13		CONDUIT	5199	1
10	65-75191-11		CONDUIT	5199	1
11	65-75191-12		CONDUIT	5199	1
12	65-75191-6		CONDUIT	5199	2
13	65-75191-9		CONDUIT	5199	1
14	BACC10DK16		CLAMP	5199	6
			ATTACHING PARTS		
	NAS603-10P		SCREW	5199	6
	AN960PD10		WASHER.	5199	6
	BACN10JC3		NUT	5199	6
			-----*		
15	69-11148-3		GUARD, CHAIN.	5199	3
16	65-75191-7		CONDUIT	5199	1
17	65-75191-8		CONDUIT	5199	1
18	65-75191-3		CONDUIT	5199	1
19	65-68891-21		ANGLE, SUPPORT.	5199	1
			ATTACHING PARTS		
	NAS603-6P		SCREW	5199	2
	BACN10JC3		NUT	5199	2
			-----*		
20	65-75191-5		CONDUIT	5199	1
21	65-75191-4		CONDUIT	5199	1
22	65-68891-8		CONDUIT	5199	1
23	65-68891-22		CONDUIT	5199	1
24	65-75191-2		CONDUIT	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE