

 BOEING
707
PARTS CATALOG (MAINTENANCE)

CHAPTER 28

FUEL

TABLE OF CONTENTS

SECTION	FIGURE
28-01 FUEL PLUMBING	
CONDUIT INSTL, FRONT SPAR STATION 666.14 WING LEADING EDGE ELECTRICAL	32
MANIFOLD INSTL, WING STATION 501 TO 529.50 PRESSURE FUELING LH.	17
MANIFOLD INSTL, WING STATION 501 TO 529.50 PRESSURE FUELING RH.	17
PLUMBING INSTL, FAN ENGINE FUEL LINE.	4
SWITCH INSTL, FUEL FEED PRESSURE SENSING.	27
TUBING INSTL, A.P.U. FUEL LINE, R.H. WING	40
TUBING INSTL, INBOARD DRY BAY FUEL FEED SYSTEM.	26
TUBING INSTL, SECTION 21 FUEL CROSSFEED	33
TUBING INSTL, SECTION 22 ENGINE FUEL FEED LH.	20
TUBING INSTL, SECTION 22 ENGINE FUEL FEED LH.	21
TUBING INSTL, SECTION 22 ENGINE FUEL FEED RH.	20
TUBING INSTL, SECTION 22 ENGINE FUEL FEED RH.	21
TUBING INSTL, SECTION 22 PRESSURE FUELING	15
TUBING INSTL, SECTION 23 LH PRESSURE FUELING.	11
TUBING INSTL, SECTION 23 RH PRESSURE FUELING.	11
VALVE ASSY, ELECTRIC MOTOR DRIVEN FUEL SHUTOFF.	35
VALVE ASSY, MANUALLY OPERATED FUEL SHUTOFF.	34
VALVE INSTL, MAIN TANK NO. 1 PRESSURE FUELING FUEL SHUTOFF FLOAT.	18
VALVE INSTL, MAIN TANK NO. 2 PRESSURE FUELING FUEL SHUTOFF FLOAT.	18
VALVE INSTL, MAIN TANK NO. 3 PRESSURE FUELING FUEL SHUTOFF FLOAT.	18
VALVE INSTL, MAIN TANK NO. 4 PRESSURE FUELING FUEL SHUTOFF FLOAT.	18
VALVE INSTL, SECTION 22 ENGINE FUEL FEED.	22
VALVE INSTL, SECTION 22 ENGINE FUEL FEED.	23
VALVE INSTL, SECTION 22 ENGINE FUEL FEED.	25
VALVE INSTL, WING CENTER SECTION PRESSURE FUELING FUEL SHUTOFF FLOAT LH.	18
VALVE INSTL, WING CENTER SECTION PRESSURE FUELING FUEL SHUTOFF FLOAT RH.	18
28-02 FUEL BOOSTER PUMPS	
PUMP INSTL, FUEL BOOSTER OVERRIDE	3
PUMP INSTL, MAIN WING TANKS FUEL BOOSTER.	1
PUMP INSTL, MAIN WING TANKS FUEL BOOSTER.	2
RECEPTACLE AND SEAL INSTL, WING FUEL SYSTEM	5
RECEPTACLE AND SEAL INSTL, WING FUEL SYSTEM	5
28-03 INTEGRAL FUEL TANK EQUIPMENT	
CHORD INSTL, BODY BUTTOCK LINE 70.5 WING RIB UPPER.	12
DRIP STICK ASSY, FUEL LEVEL INDICATOR	14
EQUIPMENT INSTL, LH OUTBOARD WING FUEL TANKS.	1
EQUIPMENT INSTL, RH OUTBOARD WING FUEL TANKS.	1
EQUIPMENT INSTL, SECTION 22 WING FUEL TANKS	2
PANEL INSTL, SECTION 12 WING LOWER.	6
28-04 REMOVABLE FUEL CELLS	
PANEL INSTL, SECTION 11 LOWER	3
TANK INSTL, WING CENTER SECTION FUEL.	1
TANK INSTL, WING CENTER SECTION FUEL.	2
28-05 FUEL INDICATING AND CONTROLS	
BULB INSTL, FUEL FILTER TEMPERATURE	18
BULB INSTL, FUEL TEMPERATURE.	17
CAPACITY TRIM BOX INST., FUEL QUANTITY SYSTEM	19B
EQUIPMENT INSTL, FLIGHT ENGINEERS TABLE	19
EQUIPMENT INSTL, FUEL FLOW AMPLIFIER AND ATTITUDE WARNING RJ9 ELECTRONIC.	16A
EQUIPMENT INSTL, FUEL FLOW AMPLIFIER AND ATTITUDE WARNING RJ9 ELECTRONIC.	16B
FITTING INSTL, NACELLE STRUT LOWER SPAR PLUMBING.	11A
FITTING INSTL, NACELLE STRUT LOWER SPAR PLUMBING.	12A
FLOWMETER INSTL, FAN ENGINE FUEL	11A
FLOWMETER INSTL, STRUT FAN ENGINE FUEL	12A
GAGE INSTL, OUTBOARD RESERVE FUEL TANK.	1A
MECHANISM ASSY, CONTROL STAND UPPER	75
MODULE INSTL, CAPTAINS AND FIRST OFFICERS	44F
PANEL INSTL, FLIGHT ENGINEERS AUXILIARY	68
PANEL INSTL, FLIGHT ENGINEERS AUXILIARY	69
PANEL INSTL, FLIGHT ENGINEERS LOWER	65D
PANEL INSTL, FLIGHT ENGINEERS LOWER	67
PANEL INSTL, P9 ENGINE INSTRUMENT	43D

 BOEING
707
PARTS CATALOG (MAINTENANCE)

SECTION	FIGURE
PROBE INSTL, CENTER WING FUEL TANK.	5A
PROBE INSTL, MAIN FUEL TANK NO. 1	2A
PROBE INSTL, MAIN FUEL TANK NO. 4	2A
PROBE INSTL, NO. 2 MAIN TANK FUEL TANK LH	3A
PROBE INSTL, NO. 3 MAIN TANK FUEL TANK RH	3A
TERMINAL STRIP INSTL, LEFT WING STATION 360 FUEL TEMPERATURE.	17
 28-06 FUEL JETTISON SYSTEM	
CHUTE INSTL, FUEL JETTISON RETRACTABLE DUMP	2
DOOR INSTL, REAR SPAR STATION 263.5 TO 275.5 FUEL JETTISON CHUTE PANEL	10
PANEL INSTL, REAR SPAR STATION 275.5 TO 288.91 FUEL JETTISON CHUTE	10
SEAL ASSY, FUEL JETTISON SECONDARY.	7
STRUCTURE INSTL, FUEL JETTISON CHUTE.	11
TUBING INSTL, FUEL JETTISON SYSTEM.	9
 28-07 FUEL DRAINS AND VENTS	
ATTACHING PARTS INSTL, WING STATION 960.112	2
ATTACHING PARTS INSTL, WING TIP VENT SCODP.	2
DRAIN ASSY, NACELLE STRUT	5
DRAIN INSTL, FAN ENGINE	8
DRAIN INSTL, STATION 600K TO 965.14 WING CENTER SECTION CAVITY.	9
FITTING INSTL, SECTION 22 ENGINE FUEL FEED DRAIN.	4
OUTLET INSTL, FUEL HEATER EXHAUST AIR	11
PANEL INSTL, WING TIP VENT SCOOP	2
RIB INSTL, WING STATION 960.112	3
TUBING INSTL, WING CENTER SECTION CAVITY VENT	1
VENT INSTL, SECTION 22 WING FUEL TANK	13
VENT INSTL, SECTION 23 WING FUEL TANK LH.	12
VENT INSTL, SECTION 23 WING FUEL TANK RH.	12

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 01
FUEL PLUMBING

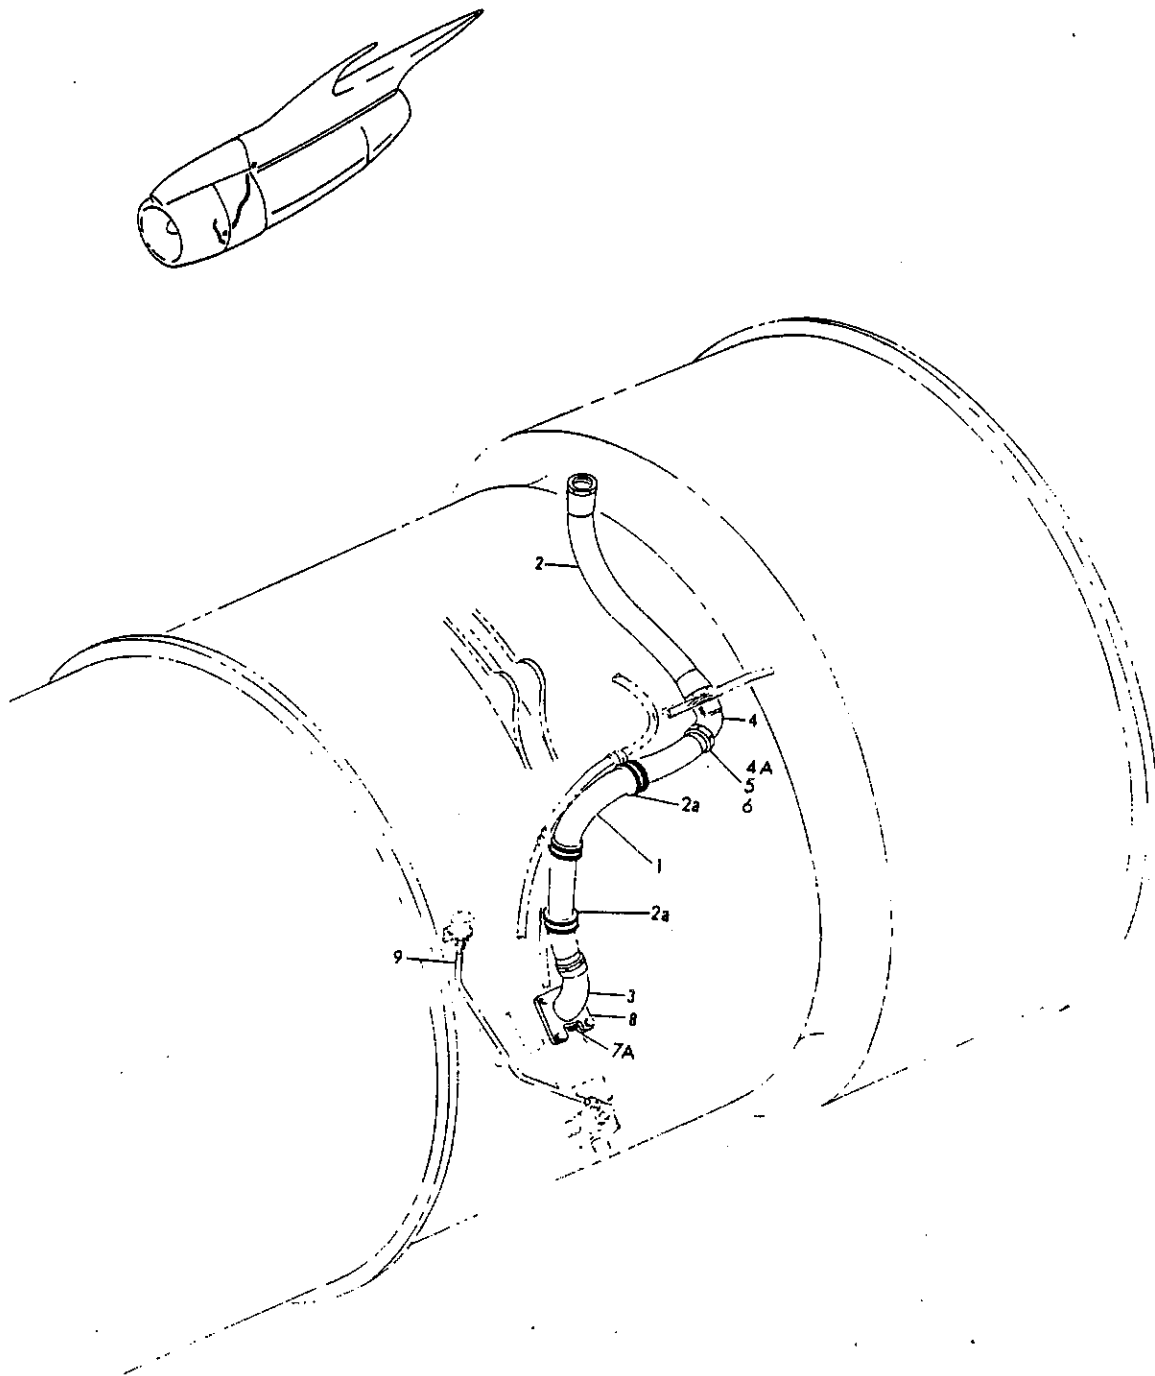


FIGURE 4. PLUMBING INSTL, FAN ENGINE (FUEL ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
4	65-58639-1		PLUMBING INSTL, FAN ENGINE FUEL LINE (SEE 71-1, FIG. 5B, ITEM 32, 71-1, FIG. 5G, ITEM 34 AND 71-1, FIG. 5H, ITEM 29)		RF
1	65-58639-2		. TUBE ASSY, FUEL FEED 1-1/2 IN. .035 AISI304 (OPTIONALS AISI321, AISI347)		1
2	BACN10HX24		. . NUT		2
2A	10-60102-7		. HOSE ASSY, FUEL SUPPLY FIREPROOF.		1
3	BACC10DDC24		. CLAMP		3
4	LAB2400-24		. ELBOW, SWIVEL (V06265).		1
5	AN837-24		. ELBOW		1
6	AN924-24		. NUT		1
7A	AN960-3016		. WASHER.		1
8	MS29513-222		. PACKING		1
	60-4811		. FLANGE, FUEL SUPPLY TUBE.		1
	AN310C5		ATTACHING PARTS		
			. NUT		4
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

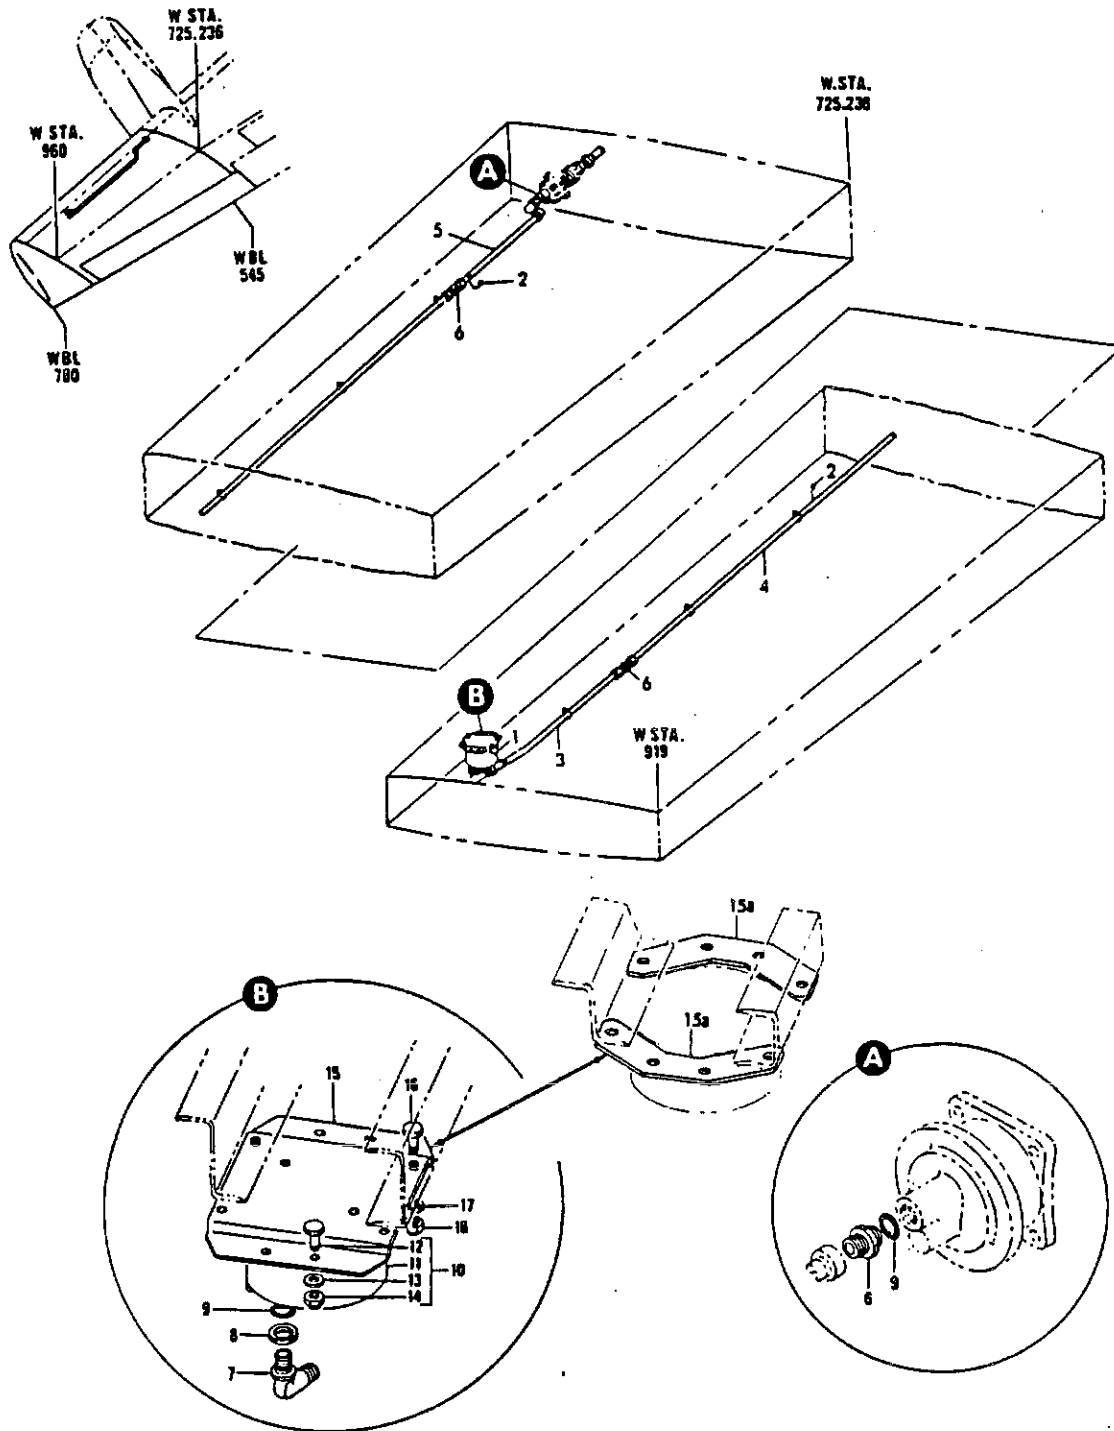


FIGURE 11 TUBING INSTL, SECTION 23 PRESSURE FUELING

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
11	50-5357-3		TUBING INSTL, SECTION 23 LH PRESSURE FUELING (SEE 57-2, FIG. 1, ITEM 4)		RF
	50-5357-4		TUBING INSTL, SECTION 23 RH PRESSURE FUELING (SEE 57-2, FIG. 1, ITEM 4)		RF
1	MS25083-2BCB		. JUMPER ASSY		1
2	MS25083-2BB4		. JUMPER ASSY		2
			ATTACHING PARTS		
	NAS603-6		. SCREW		6
	BACN10BY53W		. NUT		6
3	50-5357-71		. TUBE ASSY, PRESSURE FUELING 3/8 IN. .028 6061-T6 (LH ONLY)		1
3	50-5357-72		. TUBE ASSY, PRESSURE FUELING 3/8 IN. .028 6061-T6 (RH ONLY)		1
4	50-5357-24		. TUBE ASSY, PRESSURE FUELING 3/8 .028 6061-T6.		1
5	50-5357-35		. TUBE ASSY, PRESSURE FUELING 3/8 .028 6061-T6 (LH. . . ONLY)		1
5	50-5357-36		. TUBE ASSY, PRESSURE FUELING 3/8 .028 6061-T6 (RH. . . ONLY)		1
	BACN10CS6D		. . NUT		2
	BACS13AP6		. . SLEEVE		2
6	MS21902D6		. UNION		3
7	MS21908D6		. ELBOW		1
8	BACN10DR6D		. NUT		1
9	MS29512-6		. PACKING		2
10	50-10356-11		. VALVE INSTL, RESERVE TANK NO. 1 PRESSURE FUELING. . . SHUTOFF FLOAT (LH ONLY)		1
10	50-10356-12		. VALVE INSTL, RESERVE TANK NO. 4 PRESSURE FITTING. . . SHUTOFF FLOAT (RH ONLY)		1
11	10-3060-2		. . VALVE ASSY, PRESSURE FUELING LEVEL CONTROL PILOT. . . FLOAT		1
			ATTACHING PARTS		
12	AN4-7A		. . BOLT.		4
13	AN960PD416L		. . WASHER.		4
14	NAS679A4W		. . NUT		4
15A	66-11580		. . SUPPORT, PRESSURE FUELING LEVEL CONTROL VALVE . . . ATTACHING PARTS		2
16	AN4-7A		. . BOLT.		8
17	AN960PD416L		. . WASHER.		4
18	NAS679A4W		. . NUT		4
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

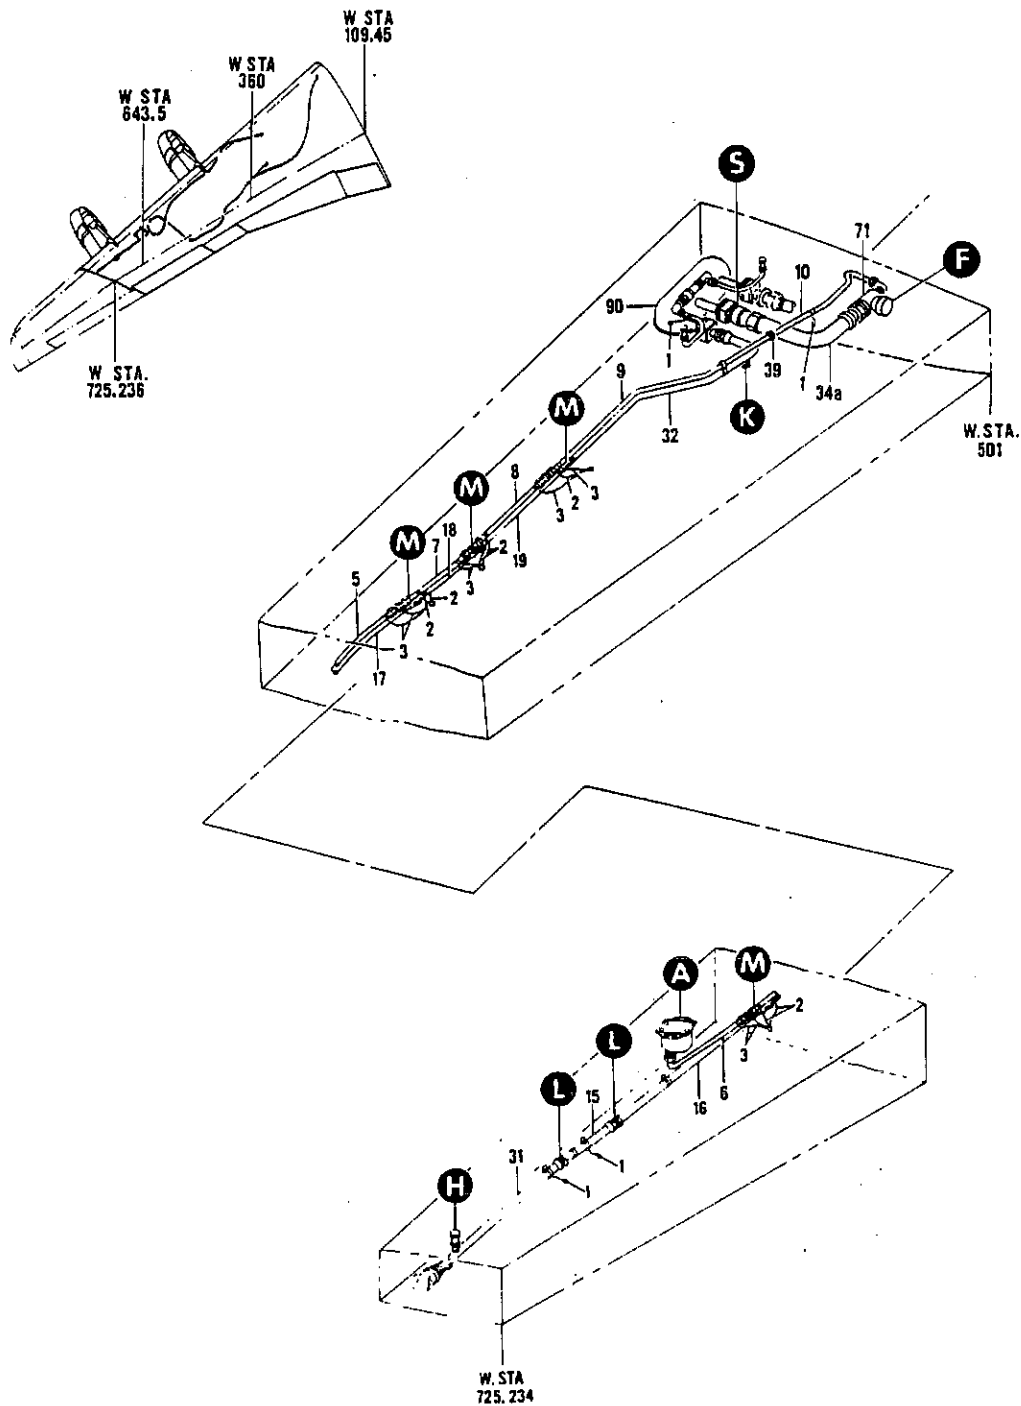


FIGURE 15. TUBING INSTL, SECTION 22 PRESSURE FUELING (SHEET 1)

A 2801015 SHY 2 REV 265

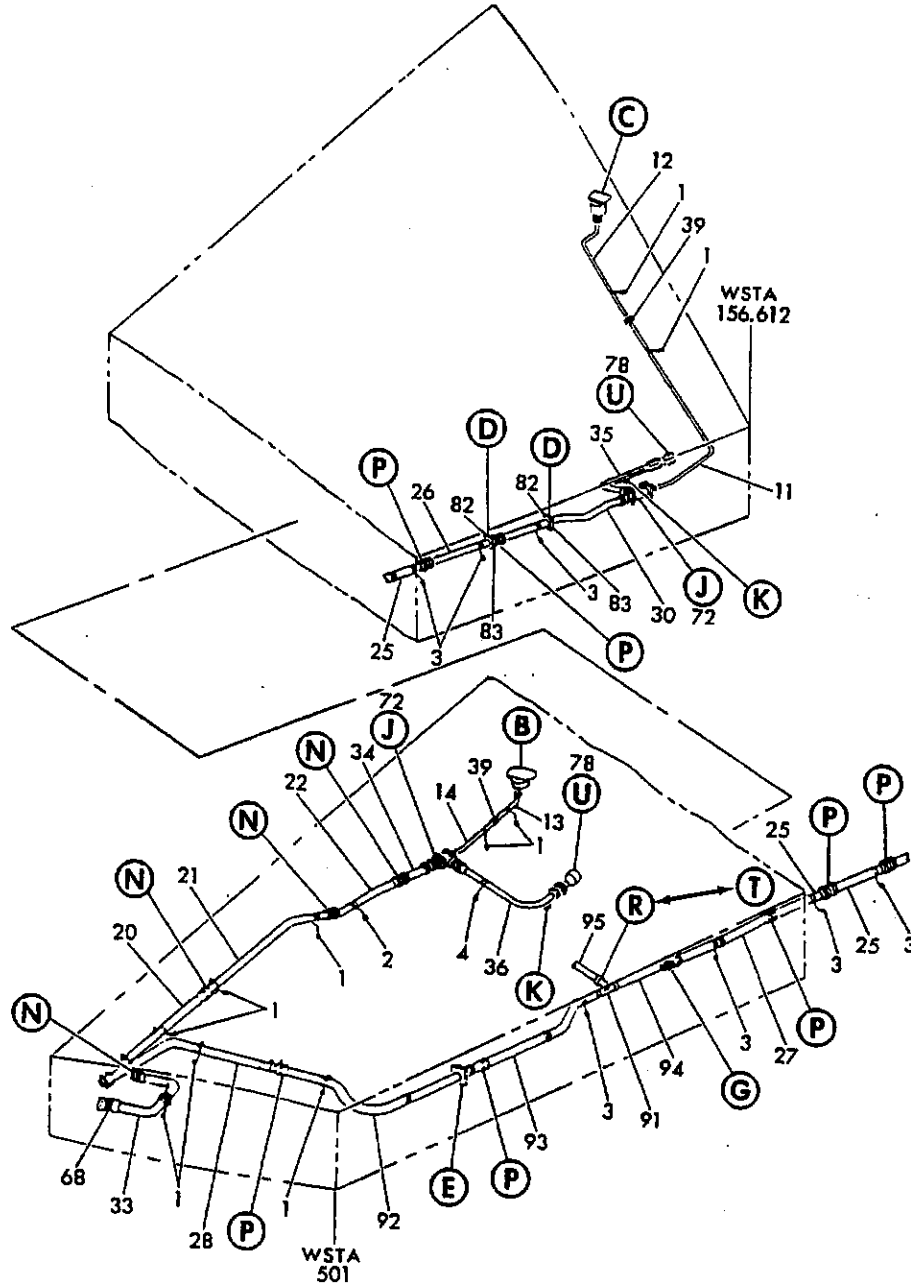


FIGURE 15. TUBING INSTL, SECTION 22 PRESSURE FUELING (SHEET 2)

NOV 21/94

20-01-15

DETAILED PARTS LIST
28-01-15
PAGE 1

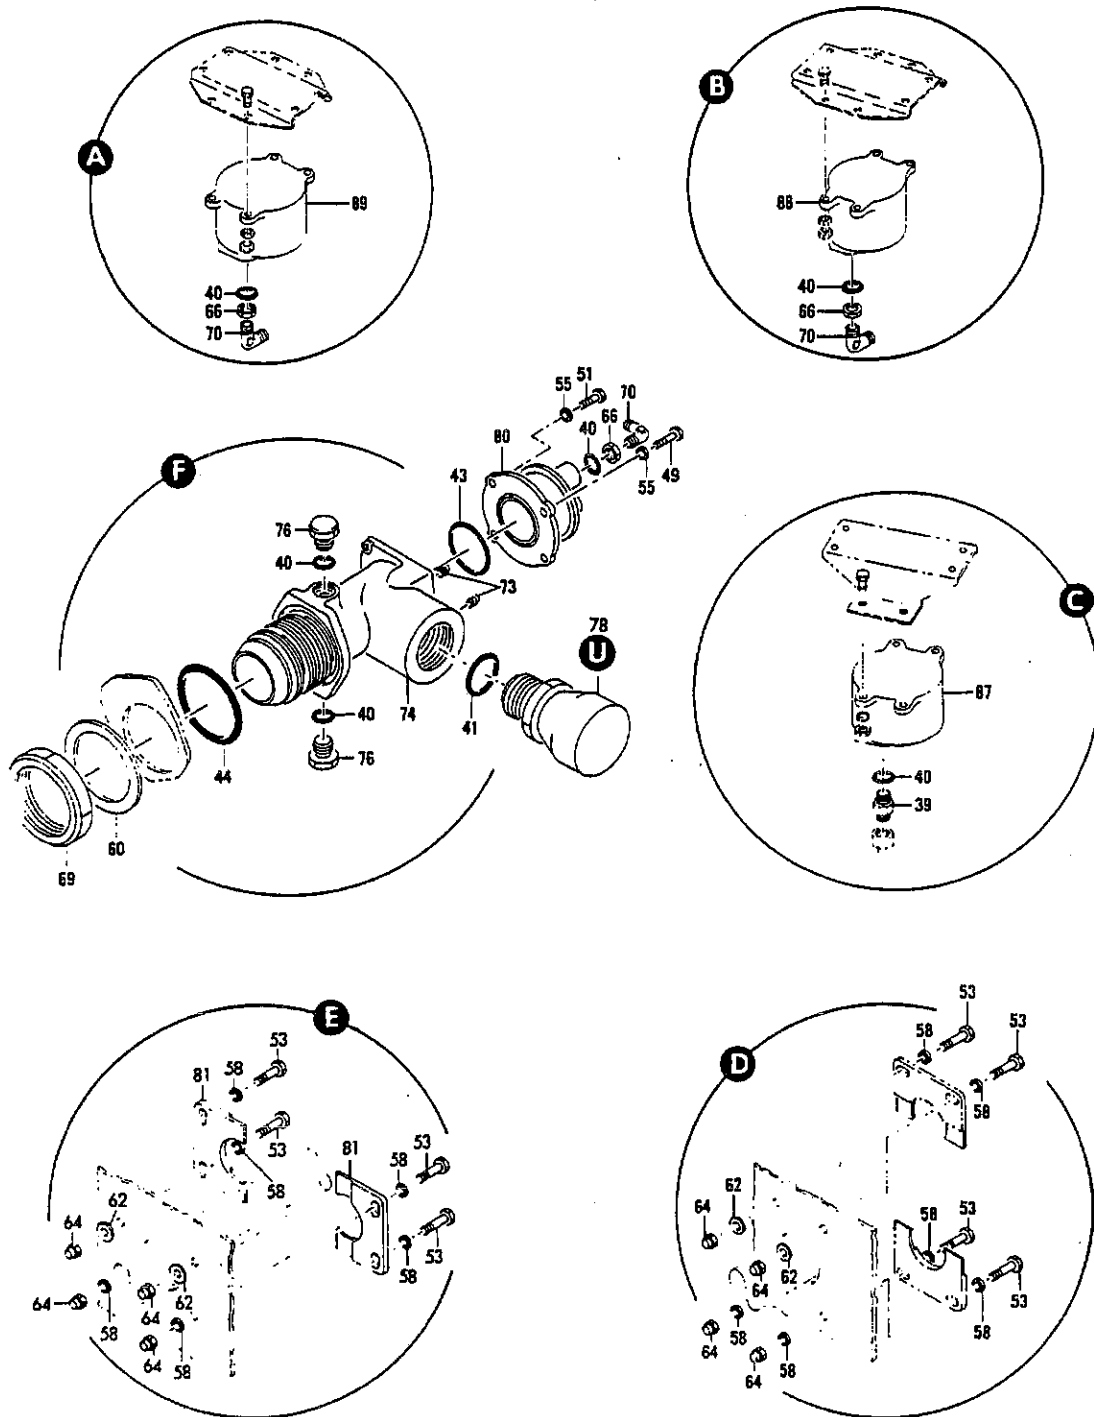


FIGURE 15. TUBING INSTL, SECTION 27 PRESSURE FUELING (SHEET 3)

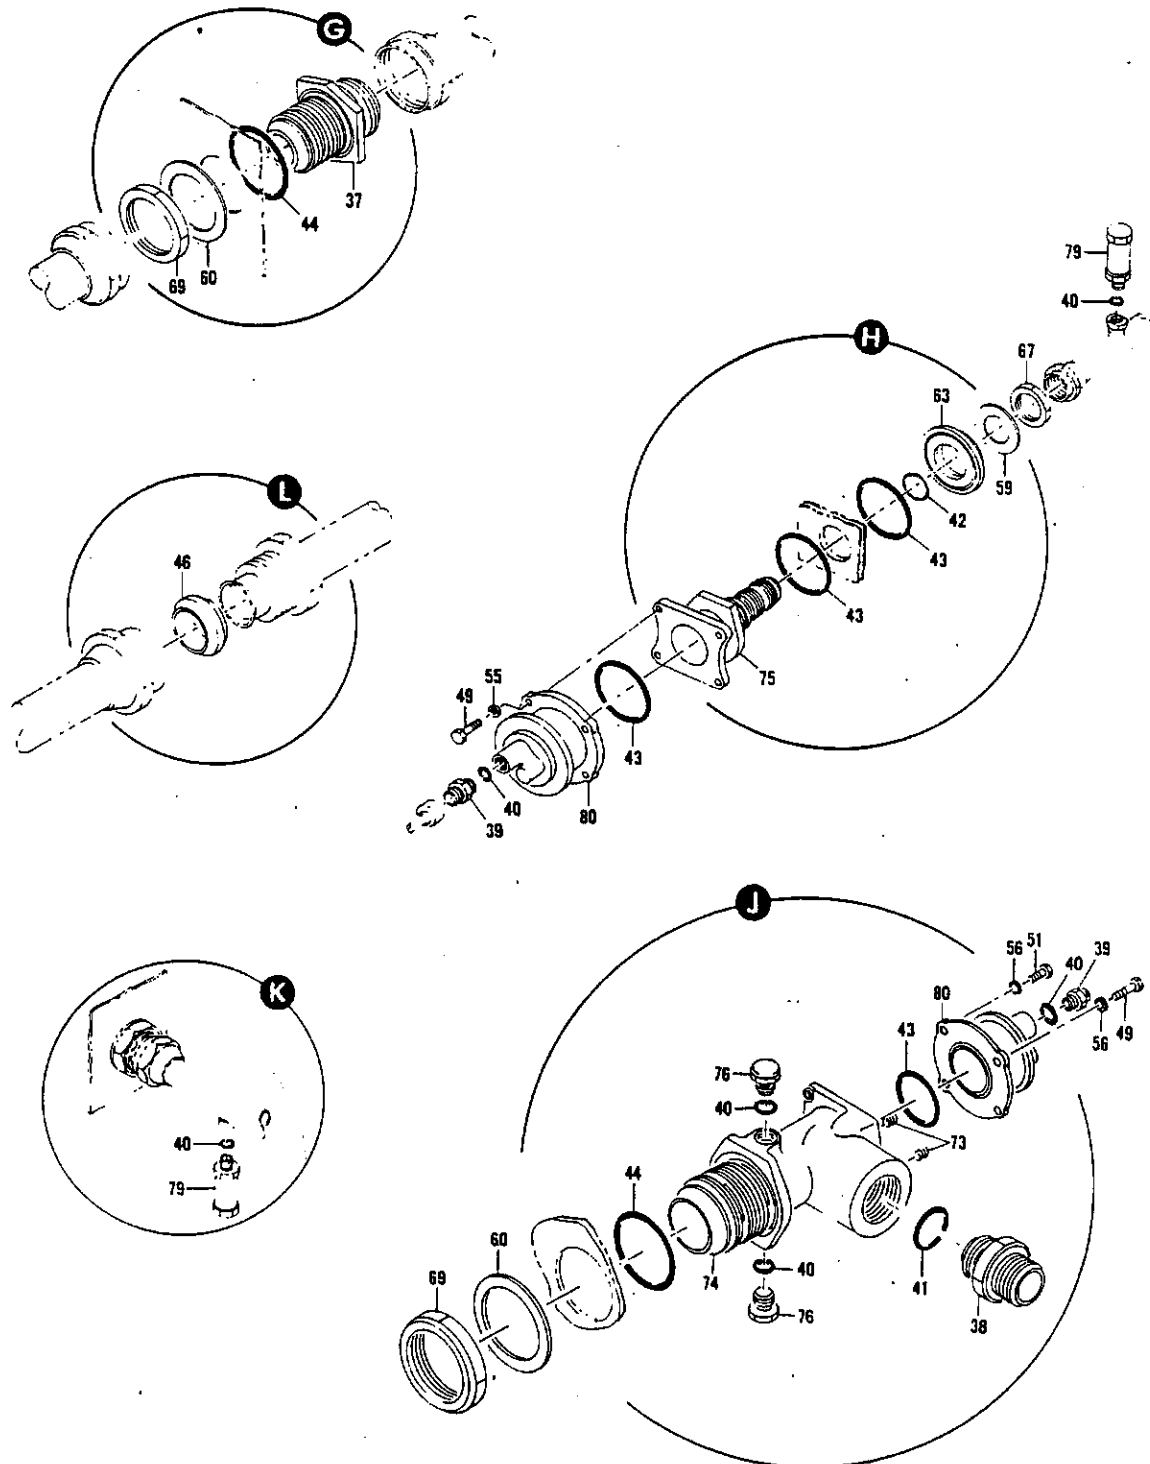


FIGURE 15. TUBING INSTL, SECTION 22 PRESSURE FUELING (SHEET 4)

NOV 21/90

28-01-15

DETAILED PARTS LIST
28-01-15
PAGE 3

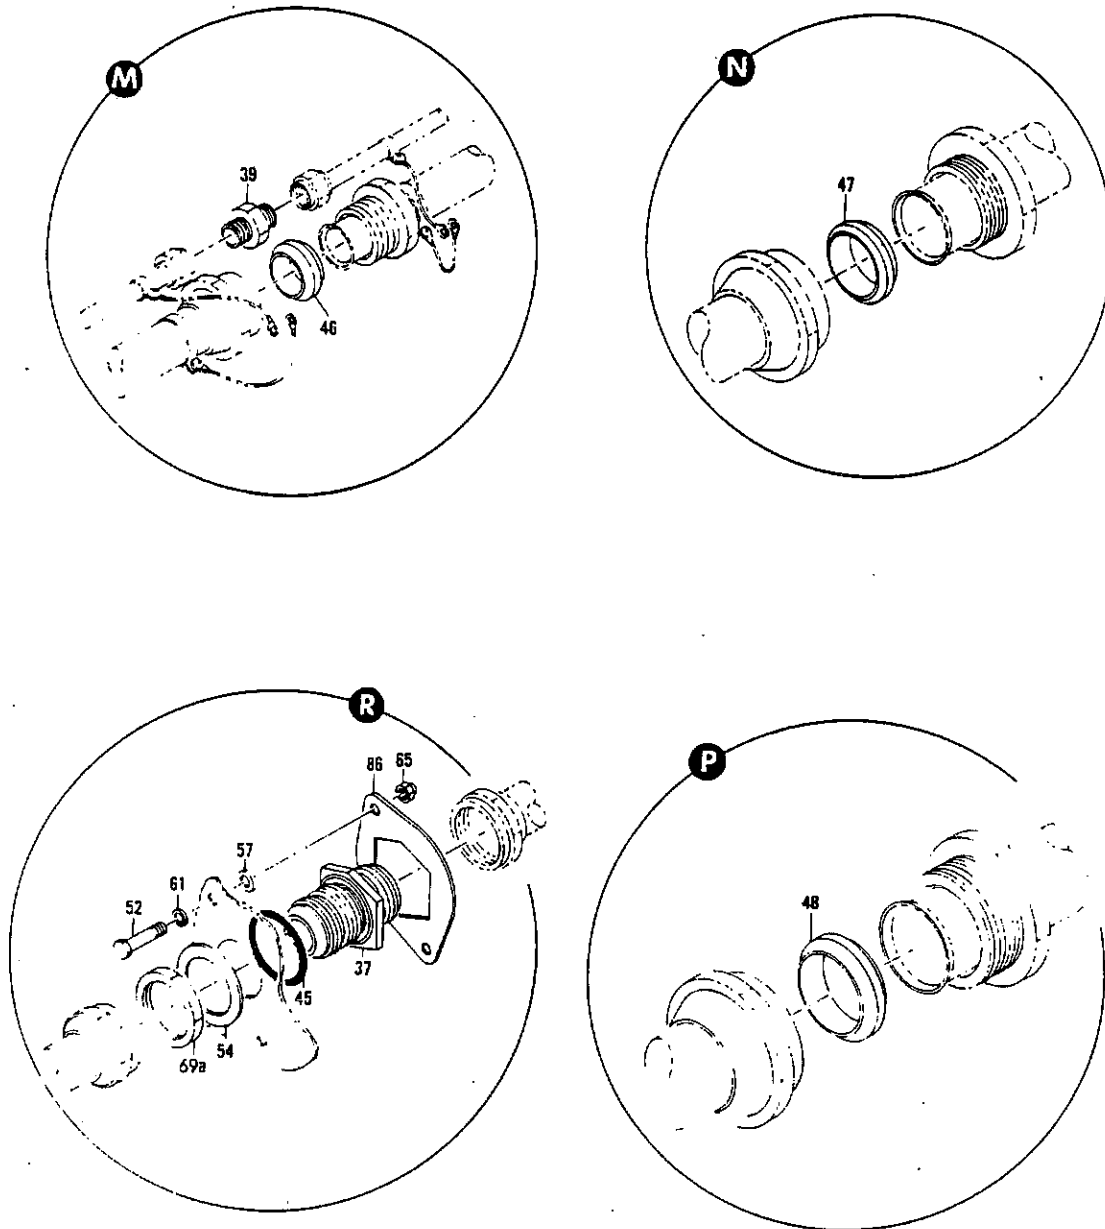


FIGURE 15. TUBING INSTL, SECTION 22 PRESSURE FUELING (SHEET 5)

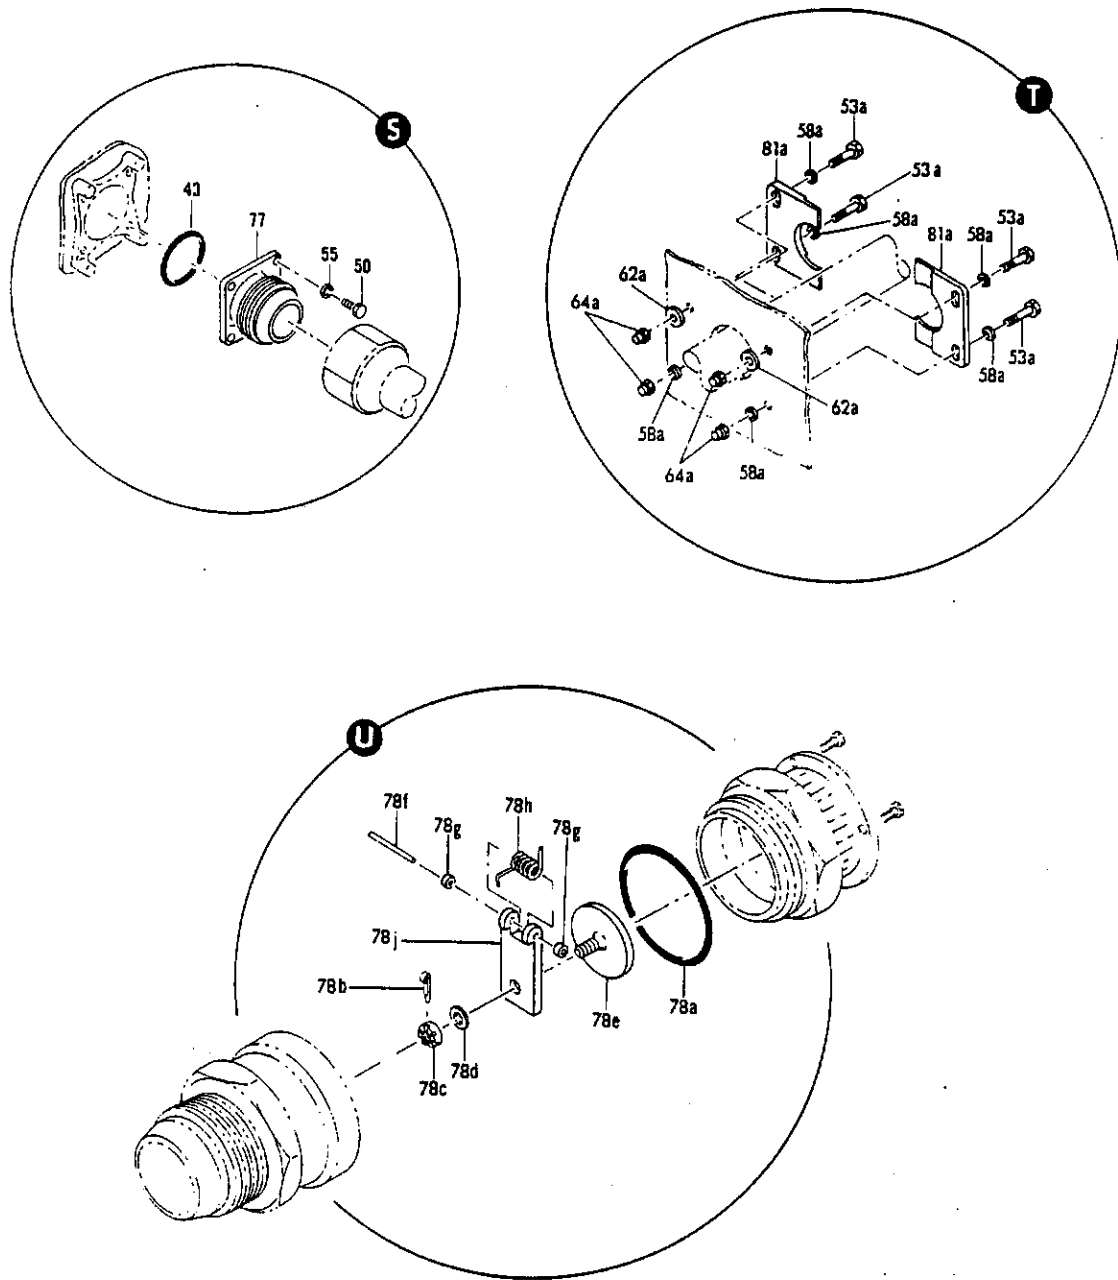


FIGURE 15. TUBING INSTL, SECTION 22 PRESSURE FUELING (SHEET 6)

NOV 21/90

20-01-15

DETAILED PARTS LIST
20-01-15
PAGE 5



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
15	65-4089-29		TUBING INSTL, SECTION 22 PRESSURE FUELING (LH) (SEE . . . 57-3, FIG. 1, ITEM 21)		RF
	65-4089-30		TUBING INSTL, SECTION 22 PRESSURE FUELING (RH) (SEE . . . 57-3, FIG. 1, ITEM 21)		RF
1	MS25083-2884		. JUMPER ASSY		14
2	MS25083-2885		. JUMPER ASSY		8
3	MS25083-2886		. JUMPER ASSY		15
4	MS25083-2888		. JUMPER ASSY		1
			ATTACHING PARTS		
	NAS603-8		. SCREW		AR
	NAS603-10		. SCREW		AR
	NAS603-16		. SCREW		AR
	AN960D10L		. WASHER		AR
	NAS679A3W		. NUT		AR
5	50-5357-48		. TUBE ASSY, PRESSURE FUELING 3/8 .028 6061-T6.		1
6	65-4089-11		. TUBE ASSY, PRESSURE FUELING 3/8 .028 6061-T6 (LH. . . . ONLY)		1
6	65-4089-12		. TUBE ASSY, PRESSURE FUELING 3/8 .028 6061-T6 (RH. . . . ONLY)		1
7	50-5357-49		. TUBE ASSY, PRESSURE FUELING 3/8 .028 6061-T6.		1
8	65-16092-35		. TUBE ASSY, PRESSURE FUELING 3/8 .028 6061-T6 (LH. . . . ONLY)		1
8	65-16092-36		. TUBE ASSY, PRESSURE FUELING 3/8 .028 6061-T6 (RH. . . . ONLY)		1
9	65-7111-51		. TUBE ASSY, PRESSURE FUELING 3/8 .028 6061-T6 (LH. . . . ONLY)		1
9	65-7111-52		. TUBE ASSY, PRESSURE FUELING 3/8 .028 6061-T6 (RH. . . . ONLY)		1
10	65-7111-115		. TUBE ASSY, PRESSURE FUELING 3/8 .028 6061-T6 (LH. . . . ONLY)		1
10	65-7111-116		. TUBE ASSY, PRESSURE FUELING 3/8 .028 6061-T6 (RH. . . . ONLY)		1
11	65-4089-31		. TUBE ASSY, PRESSURE FUELING 3/8 .028 6061-T6 (LH. . . . ONLY)		1
11	65-4089-32		. TUBE ASSY, PRESSURE FUELING 3/8 .028 6061-T6 (RH. . . . ONLY)		1
12	65-4089-21		. TUBE ASSY, PRESSURE FUELING 3/8 .028 6061-T6 (LH. . . . ONLY)		1
12	65-4089-22		. TUBE ASSY, PRESSURE FUELING 3/8 .028 6061-T6 (RH. . . . ONLY)		1
13	65-4089-10		. TUBE ASSY, PRESSURE FUELING 3/8 .028 6061-T6 (LH. . . . ONLY)		1
13	65-4089-25		. TUBE ASSY, PRESSURE FUELING 3/8 .028 6061-T6 (RH. . . . ONLY)		1
14	65-4089-33		. TUBE ASSY, PRESSURE FUELING 3/8 .028 6061-T6 (LH. . . . ONLY)		1
14	65-4089-34		. TUBE ASSY, PRESSURE FUELING 3/8 .028 6061-T6 (RH. . . . ONLY)		1
	BACN10CS6D		. . NUT		2
	MS21922-6		. . SLEEVE		2
	BACS13AP6		. . SLEEVE, (USED ON 50-5357-49).		2
15	65-4089-26		. TUBE ASSY, PRESSURE FUELING 1 IN. .035 5052-0 (LH. . . . ONLY)		1
15	65-4089-27		. TUBE ASSY, PRESSURE FUELING 1 IN. .035 5052-0 (RH. . . . ONLY)		1
16	50-5357-41		. TUBE ASSY, PRESSURE FUELING 1 IN. .035 5052-0		1
17	50-5357-42		. TUBE ASSY, PRESSURE FUELING 1 IN. .035 5052-0		1
18	50-5357-43		. TUBE ASSY, PRESSURE FUELING 1 IN. .035 5052-0		1
19	50-5357-44		. TUBE ASSY, PRESSURE FUELING 1 IN. .035 5052-0 (OPTIONAL 50-5357-70)		1
19	50-5357-70		. TUBE ASSY, PRESSURE FUELING 1 IN. .035 5052-0 (OPTIONAL TO 50-5357-44)		1
	NAS593-16H		. . NUT		1
	NAS591-16H		. . COUPLING		1
20	50-5357-11		. TUBE ASSY, PRESSURE FUELING 1-1/2 IN. .035 5052-0 (LH. ONLY)		1
20	50-5357-12		. TUBE ASSY, PRESSURE FUELING 1-1/2 IN. .035 5052-0 (RH. ONLY)		1
21	50-5357-13		. TUBE ASSY, PRESSURE FUELING 1-1/2 IN. .035 5052-0 (LH. ONLY)		1
21	50-5357-14		. TUBE ASSY, PRESSURE FUELING 1-1/2 IN. .035 5052-0 (RH. ONLY)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
15 22	50-5357-15	. TUBE ASSY, PRESSURE FUELING 1-1/2 IN. .035 5052-0 (LH ONLY)		1
22	50-5357-63	. TUBE ASSY, PRESSURE FUELING 1-1/2 IN. .035 5052-0 (RH ONLY)		1
	NAS593-24H	. . NUT		1
	NAS591-24H	. . SLEEVE		1
23	50-5357-9	. TUBE ASSY, PRESSURE FUELING 2 IN. .042 5052-0	5199	1
23	50-5357-9	. TUBE ASSY, PRESSURE FUELING 2 IN. .042 5052-0 (DELETED BY RAF 7211.019-225)	0150	1
24	65-31016-47	. TUBE ASSY, PRESSURE FUELING 2 IN. .042 5052-0 (LH ONLY)	5199	1
24	65-31016-48	. TUBE ASSY, PRESSURE FUELING 2 IN. .042 5052-0 (RH ONLY)	5199	1
24	65-31016-47	. TUBE ASSY, PRESSURE FUELING 2 IN. .042 5052-0 (LH ONLY) (DELETED BY RAF 7211.019-225)	0150	1
24	65-31016-48	. TUBE ASSY, PRESSURE FUELING 2 IN. .042 5052-0 (RH ONLY) (DELETED BY RAF 7211.019-225)	0150	1
25	65-4089-6	. TUBE ASSY, PRESSURE FUELING 2 IN. .042 5052-0		3
26	65-4089-8	. TUBE ASSY, PRESSURE FUELING 2 .042 5052-0 (OPTIONAL 65-4089-28)		1
26	65-4089-28	. TUBE ASSY, PRESSURE FUELING 2 .042 5052-0 (OPTIONAL TO 65-4089-8)		1
27	65-4089-5	. TUBE ASSY, PRESSURE FUELING 2 IN. .042 5052-0 (LH ONLY)	5199	1
27	65-4089-23	. TUBE ASSY, PRESSURE FUELING 2 IN. .042 5052-0 (RH ONLY)	5199	1
	NAS593-32H	. . NUT		1
	NAS591-32H	. . COUPLING		1
27	65-4089-5	. TUBE ASSY, PRESSURE FUELING 2 IN. .042 5052-0 (LH ONLY) (DELETED BY RAF 7211.019-225)	0150	1
27	65-4089-23	. TUBE ASSY, PRESSURE FUELING 2 IN. .042 5052-0 (RH ONLY) (DELETED BY RAF 7211.019-225)	0150	1
28	50-5357-10	. TUBE ASSY, PRESSURE FUELING 2 IN. .042 5052-0		1
29	65-31016-49	. TUBE ASSY, PRESSURE FUELING 2 IN. .042 5052-0	5199	1
29	65-31016-49	. TUBE ASSY, PRESSURE FUELING 2 IN. .042 5052-0 (DELETED BY RAF 7211.019-225)	0150	1
30	65-4089-9	. TUBE ASSY, PRESSURE FUELING 2 IN. .042 5052-0 (LH ONLY)		1
30	65-4089-24	. TUBE ASSY, PRESSURE FUELING 2 IN. .042 5052-0 (RH ONLY)		1
31	NAS593-32H	. . NUT		2
31	65-1646-15	. WELD ASSY, PRESSURE FUELING 1.00 IN. OD TUBE (LH ONLY)		1
31	65-1646-16	. WELD ASSY, PRESSURE FUELING 1.00 IN. OD TUBE (RH ONLY)		1
32	65-1646-21	. WELD ASSY, PRESSURE FUELING 1.00 IN. OD TUBE (LH ONLY)		1
32	65-1646-22	. WELD ASSY, PRESSURE FUELING 1.00 IN. OD TUBE (RH ONLY)		1
33	65-1645-1	. TUBE ASSY, PRESSURE FUELING SWAGED.		1
34	65-1645-2	. TUBE ASSY, PRESSURE FUELING SWAGED.		1
34A	65-7111-65	. TUBE ASSY, PRESSURE FUELING 2 IN. .042 5052-0		1
	NAS593-32H	. . NUT		2
35	65-21092-1	. WELD ASSY, PRESSURE FUELING 2.00 IN. OD TUBE (LH ONLY)		1
35	65-21092-2	. WELD ASSY, PRESSURE FUELING 2.00 IN. OD TUBE (RH ONLY)		1
36	65-21093-1	. WELD ASSY, PRESSURE FUELING 2.00 IN. OD TUBE (LH ONLY)		1
36	65-21093-2	. WELD ASSY, PRESSURE FUELING 2.00 IN. OD TUBE (RH ONLY)		1
38	AN815-32D	. UNION		2
39	MS21902D6	. UNION		11
40	MS29512-06	. GASKET.		17
41	MS29512-32	. GASKET.		3
42	MS29513-216	. PACKING		1
43	MS29513-228	. PACKING		7
44	MS29513-233	. PACKING		4
46	NAS592-16	. RING.		6
47	NAS592-24	. RING.		4
48	NAS592-32	. RING.		7
49	AN4H7A	. BOLT.		10
50	AN4H3A	. BOLT.		4
51	AN4H4A	. BOLT.		6

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
15	53	AN3-11A	. BOLT.		12
	53A	AN3-11A	. BOLT.		4
	55	AN960D416	. WASHER.		12
	56	AN960-416	. WASHER, (LH ONLY)		8
	56	AN960PD416	. WASHER, (RH ONLY)		8
	58	AN960PD10	. WASHER.		18
	58A	AN960PD10	. WASHER.		6
	59	AN960PD2116	. WASHER.		1
	60	AN960PD4016	. WASHER.		4
	62	BACW10T10-75	. WASHER.		6
	62A	BACW10T10-75	. WASHER.		2
	63	60-6583	. WASHER, PRESSURE FUELING SEAL		1
	64	NAS679A3W	. NUT		12
	64A	NAS679A3W	. NUT		4
	66	BACN10DR6D	. NUT		3
	67	BACN10DR16D	. NUT		1
	68	BACN10DR32	. NUT		1
	69	BACN10DR32D	. NUT		4
	70	MS21908D6	. ELBOW		3
	71	65-2958-1	. FITTING ASSY, VALVES ADAPTER BULKHEAD (LH ONLY)		1
	71	65-2958-2	. FITTING ASSY, VALVES ADAPTER BULKHEAD (RH ONLY)		1
	72	65-2958-2	. FITTING ASSY, VALVES ADAPTER BULKHEAD (LH ONLY)		2
	72	65-2958-1	. FITTING ASSY, VALVES ADAPTER BULKHEAD (RH ONLY)		2
	73	BAC513P4C2	. SLEEVE.		2
	74	65-2958-3	. FITTING, VALVES ADAPTER BULKHEAD.		1
	75	50-11351	. FITTING ASSY, PRESSURE FUELING SHUTOFF VALVE ADAPTER BULKHEAD		1
	76	ANB14-6DL	. PLUG AND BLEEDER.		6
	77	69-5540	. ADAPTER, PRESSURE FUELING 2.00 IN. OD TUBE.		1
	78	10-60004-1	. VALVE, DEFUELING CHECK (SAME AS 32C129-2 (V82829)).		3
	78	32C129-2	. VALVE, DEFUELING CHECK (V82829) (SAME AS BAC SPEC NO. 10-60004-1)		RF
	M 78A	MS29513-232	. PACKING		1
	M 78B	AN381-1-8	. PIN		1
	M 78C	AN320C3	. NUT, CASTLE		1
	M 78D	AN960C10L	. WASHER.		1
	M 78E	32C129B8	. FLAPPER, (V82829)		1
	M 78F	32C129A6	. PIN, HINGE (V82829)		1
	M 78G	32C129A5	. SPACER, HINGE (V82829)		2
	M 78H	32C129A4	. SPRING, TORSION (V82829)		1
	M 78J	32C129A3	. ARM, FLAPPER (V82829)		1
	79	10-60002	. VALVE ASSY, 3/8 IN. TUBE SIZE CHECK		4
	80	10-3060-4	. VALVE ASSY, PRESSURE FUELING LEVEL CONTROL.		4
	81	69-3374	. PLATE, BAFFLE		2
	81A	69-3374	. PLATE, BAFFLE		2
	82	69-3374-1	. PLATE, BAFFLE		2
	83	69-3374-2	. PLATE, BAFFLE		2
	87	65-6405-1	. VALVE INSTL, WING CENTER SECTION PRESSURE FUELING FUEL SHUTOFF FLOAT LH (LH ONLY) (SEE FIG. 18)		1
	87	65-6405-2	. VALVE INSTL, WING CENTER SECTION PRESSURE FUELING FUEL SHUTOFF FLOAT RH (RH ONLY) (SEE FIG. 18)		1
	88	65-6405-3	. VALVE INSTL, MAIN TANK NO. 2 PRESSURE FUELING FUEL SHUTOFF FLOAT (LH ONLY) (SEE FIG. 18)		1
	88	65-6405-4	. VALVE INSTL, MAIN TANK NO. 3 PRESSURE FUELING FUEL SHUTOFF FLOAT (RH ONLY) (SEE FIG. 18)		1
	89	65-6405-5	. VALVE INSTL, MAIN TANK NO. 1 PRESSURE FUELING FUEL SHUTOFF FLOAT (LH ONLY) (SEE FIG. 18)		1
	89	65-6405-6	. VALVE INSTL, MAIN TANK NO. 1 PRESSURE FUELING FUEL SHUTOFF FLDAT (RH ONLY) (SEE FIG. 18)		1
	90	50-6878-9	. MANIFOLD INSTL, WING STATION 501 TO 529.50 PRESSURE FUELING CONTROL LH (LH ONLY)		1
	90	50-6878-10	. MANIFOLD INSTL, WING STATION 501 TO 529.50 PRESSURE FUELING CONTROL RH (RH ONLY)		1
			. FUEL, (SEE FIG. 17)		
			. REQUIRED PLACARDS, (SEE 11-3, FIG. 10).		
		391-89-60-71202-003	. WING FUEL SYSTEM INSTL, LH (SECTION 22. PRESSURE FUELING ONLY) (VS2500) (ADDED BY RAF 7211.019-225)	0150	1
		391-89-60-71202-004	. WING FUEL SYSTEM INSTL, RH (SECTION 22. PRESSURE FUELING ONLY) (VS2500) (ADDED BY RAF 7211.019-225)	0150	1
	91	AN824-32D	. TEE	0150	1
	92	391-89-60-71326-211	. TUBE ASSY, PRESSURE FUELING 2 IN. .049 6061-T6. . . (VS2500)	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

R
R
R
R
R
R
R



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R	15 93	391-89-60-71326-207	. . TUBE ASSY, PRESSURE FUELING 2 IN. .049 6061-T6. . . (VS2500)							0150	1
	94	391-89-60-71326-215	. . TUBE ASSY, PRESSURE FUELING 2 IN. .049 6061-T6. . . (VS2500)							0150	1
	95	391-89-60-71326-205	. . TUBE ASSY, (REPLENISH LINE ONLY) (VS2500) (ADDED BY RAF 7211.019-225) (SEE 89-3, FIG. 5, ITEM 1)							0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

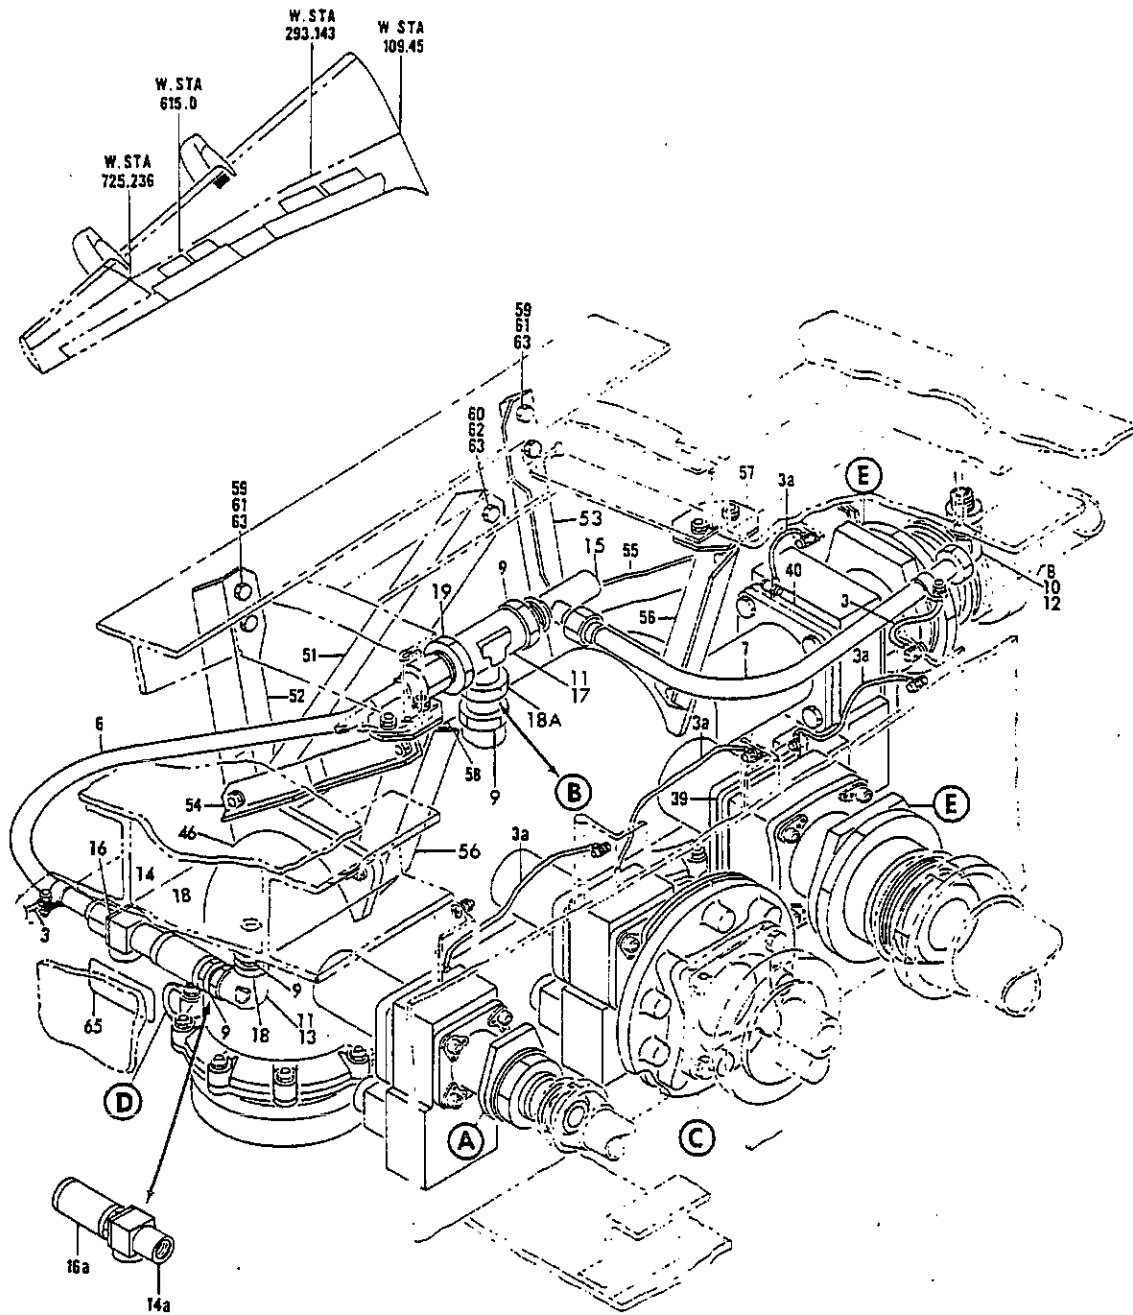


FIGURE 17. MANIFOLD INSTL, WING STATION 501 TO 529.50 PRESSURE FUELING CONTROL (FUEL ONLY) (SHEET 1)

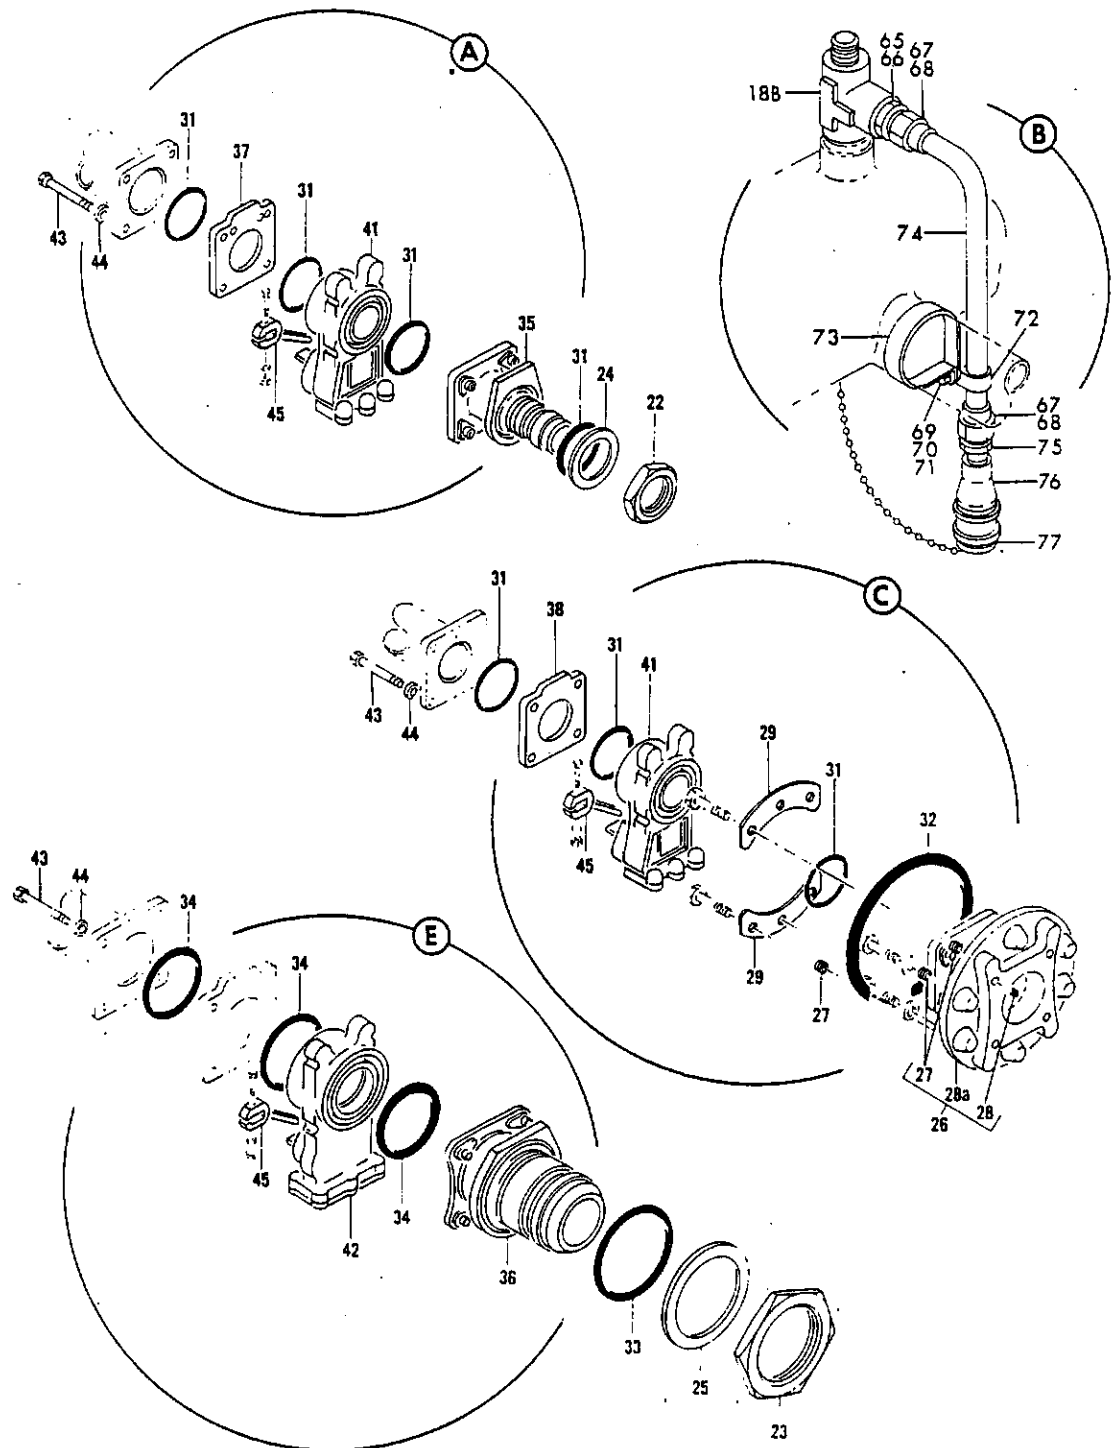


FIGURE 17. MANIFOLD INSTL, WING STATION 501 TO 529.50 PRESSURE FUELING CONTRX (FUEL ONLY) (SHEET 2)

NOV 21/90

28-01-17

DETAILED PARTS LIST
28-01-17
PAGE 1

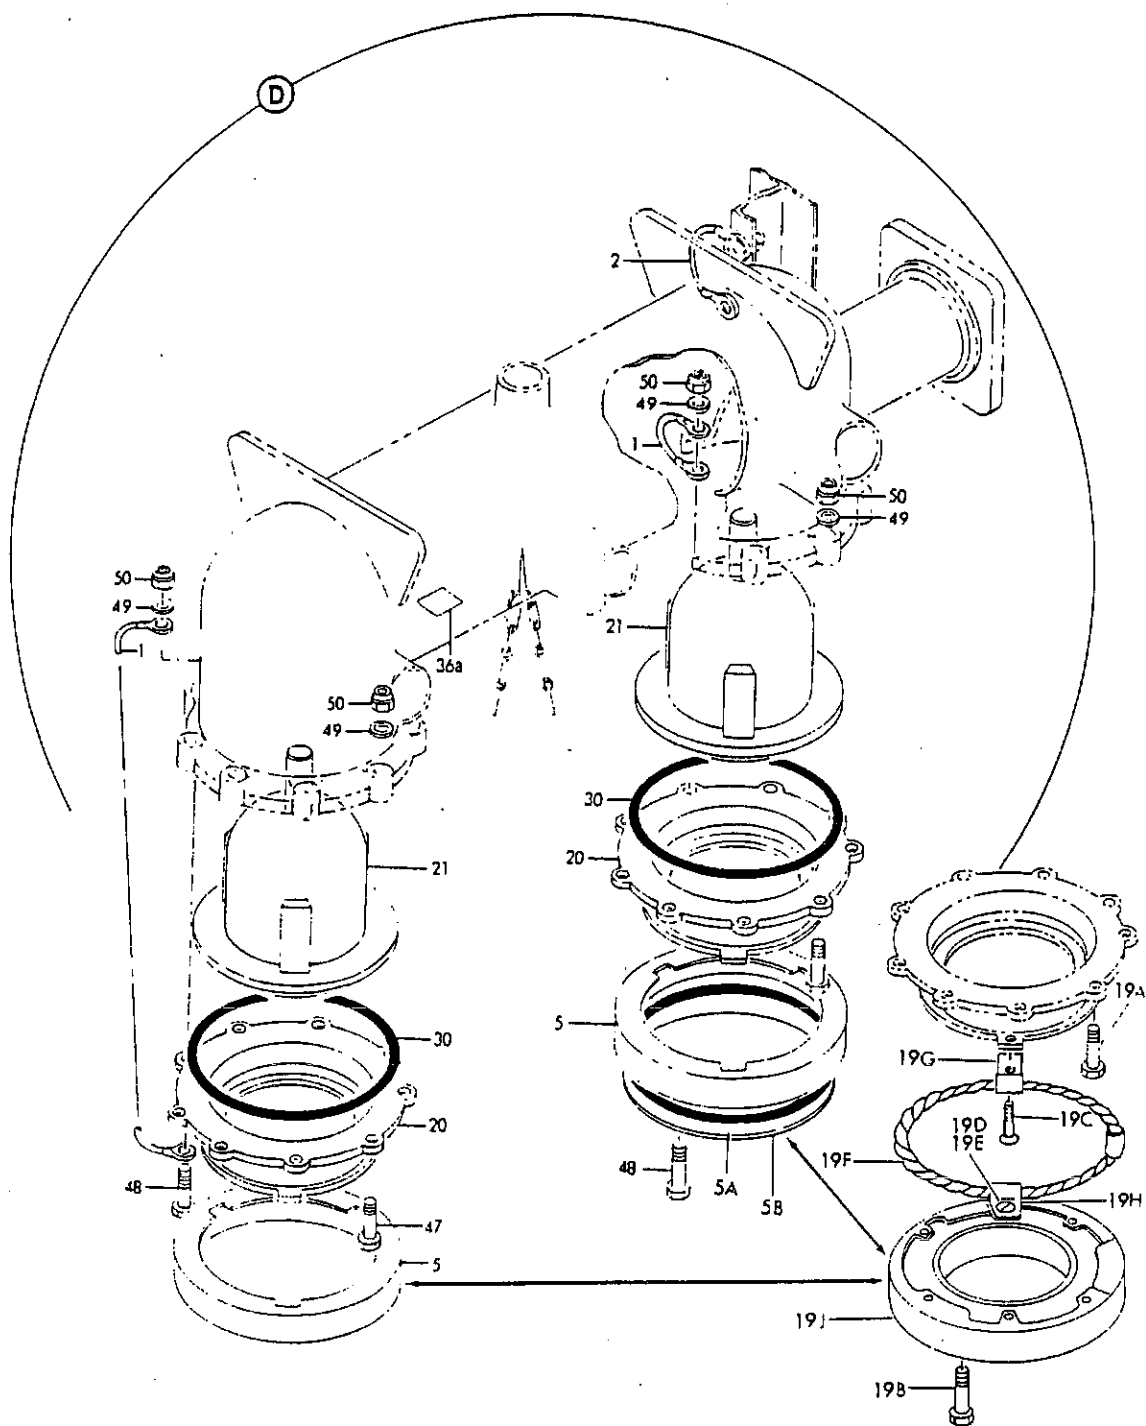


FIGURE 17. MANIFOLD INSTL, WING STATION 501 TO 529.50 PRESSURE FUELING CONTROL (FUEL ONLY) (SHEET 3)

BEEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
17	50-6878-9		MANIFOLD INSTL, WING STATION 501 TO 529.50 PRESSURE . . FUELING LH (FUEL ONLY) (SEE FIG. 14, ITEM 120 AND FIG. 15, ITEM 90)		RF
	50-6878-10		MANIFOLD INSTL, WING STATION 501 TO 529.50 PRESSURE . . FUELING RH (FUEL ONLY) (SEE FIG. 14, ITEM 120 AND FIG. 15, ITEM 90)		RF
1	MS25083-28B3		. JUMPER ASSY		2
2	MS25083-28B7		. JUMPER ASSY		1
3	MS25083-28B4		. JUMPER ASSY		2
			ATTACHING PARTS		
	NAS603-6		. SCREW		6
	AN960D10		. WASHER		9
	NAS679A3W		. NUT		6
			-----*		
3A	MS25083-28B3		. JUMPER ASSY		4
			ATTACHING PARTS		
	NAS603-6		. SCREW		8
	AN960D10L		. WASHER		8
	NAS679A3W		. NUT		8
			-----*		
4	MS29523-1		. HOOK		2
5	1327-575016M1		. CAP, FUEL FILLER (OPTIONAL 1327-575016) (V92003) . . .		2
5	1327-575016		. CAP, FUEL FILLER (V92003) (OPTIONAL TO 1327-575016M1 (V92003))		2
6	50-6878-11		. TUBE ASSY, 1/2 IN. 028 6061-T6 (LH ONLY)		1
6	50-6878-12		. TUBE ASSY, 1/2 IN. 028 6061-T6 (RH ONLY)		1
	MS21921D8		. NUT		2
	MS21922-8		. SLEEVE		2
7	50-6878-13		. TUBE ASSY, PRESSURE FUELING 3/8 .028 6061-T6 (LH . . . ONLY)		1
7	50-6878-14		. TUBE ASSY, PRESSURE FUELING 3/8 .028 6061-T6 (RH . . . ONLY)		1
	MS21921D6		. NUT		2
	MS21922-6		. SLEEVE		2
8	AN924-6D		. NUT		1
9	AN924-8D		. NUT		4
10	MS29512-06		. PACKING		1
11	MS29512-08		. PACKING		8
12	MS21908D6		. ELBOW		1
13	AN939D8		. ELBOW		1
14A	BACC40N9		. COCK		1
15	1352-568395		. VALVE, THERMAL RELIEF (V92003)		1
16A	10-3073-1		. VALVE ASSY, 1/2 IN. TUBE SIZE CHECK		1
17	AN938D8		. TEE		1
18	MS21924D8		. UNION		2
18A	MS21924D8		. UNION		1
19	MS21902D8		. UNION		1
20	10-3062-2		. FLANGE, PRESSURE FUELING ADAPTER		2
21	10-3062		. VALVE, PRESSURE FUELING ADAPTER		2
22	BACN10DR16D		. NUT		1
23	BACN10DR32D		. NUT		2
24	AN960D2116		. WASHER		1
25	AN960D4016		. WASHER		2
26	50-9745		. FITTING ASSY, PRESSURE FUEL SHUTOFF VALVE ADAPTER . . BULKHEAD		1
			ATTACHING PARTS		
	AN3H3A		. BOLT		10
	AN960D10		. WASHER		4
			-----*		
27	BACSI3P3C2		. SLEEVE		10
28	BACSI3P4C2		. SLEEVE		4
28A	50-9745-1		. FITTING, PRESSURE FUELING SHUTOFF VALVE ADAPTER . . BULKHEAD		1
29	66-1352		. SPACER		2
30	MS29513-243		. PACKING		2
31	MS29513-223		. PACKING		7
32	MS29513-249		. PACKING		1
33	MS29513-233		. PACKING		2
34	MS29513-228		. PACKING		6
35	90-9102		. FITTING ASSY, 1.5 TO 1 IN. OD TUBE BULKHEAD		1
36	90-9474		. FITTING ASSY, 2 IN. OD TUBE BULKHEAD		2
37	90-9103-27		. PLATE, PRESSURE FUEL ORIFICE		1
38	90-9103-17		. PLATE, PRESSURE FUEL ORIFICE		1
39	90-9103-16		. PLATE, PRESSURE FUEL ORIFICE		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *707* Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
17 40	90-9103-18	. PLATE, PRESSURE FUEL ORIFICE.		1
41	10-3061-4	. VALVE ASSY, MANUALLY OPERATED FUEL SHUTOFF (SAME AS 138105 (V79318))		2
41	138105	. VALVE ASSY, MANUALLY OPERATED FUEL SHUTOFF (V79318) . (SAME AS BAC SPEC NO. 10-3061-4) (SEE FIG. 34)		RF
42	10-3061-1	. VALVE ASSY, MANUALLY OPERATED FUEL SHUTOFF. ATTACHING PARTS		2
43	AN4-23A	. BOLT.		16
44	AN960D416L	. WASHER.		16
45	60-6582-3	. HANDLE, SHUT-OFF VALVE. (OPTIONAL 60-6582-2)		4
45	60-6582-2	. HANDLE, SHUT-OFF VALVE. (OPTIONAL TO 60-6582-3)		4
		ATTACHING PARTS		
	AN3-11A	. BOLT.		4
	AN960D10	. WASHER.		4
	NAS679A3W	. NUT		4
46	50-9743-1	. MANIFOLD ASSY, WING STATION 501 TO 529.50 PRESSURE. . FUELING (LH ONLY)		1
46	50-9743-2	. MANIFOLD ASSY, WING STATION 501 TO 529.50 PRESSURE. . FUELING (RH ONLY)		1
		ATTACHING PARTS		
47	AN3-10A	. BOLT.		16
48	AN3-11A	. BOLT.		2
49	AN960D10	. WASHER.		18
50	NAS679A3W	. NUT		18
51	90-9105	. STRUT, MANIFOLD PRESSURE FUELING.		1
52	90-9105-9	. STRUT, MANIFOLD PRESSURE FUELING (LH ONLY).		1
52	90-9105-10	. STRUT, MANIFOLD PRESSURE FUELING (RH ONLY).		1
53	90-9105-11	. STRUT, MANIFOLD PRESSURE FUELING (LH ONLY).		1
53	90-9105-12	. STRUT, MANIFOLD PRESSURE FUELING (RH ONLY).		1
54	66-11067-1	. STRUT, MANIFOLD PRESSURE FUELING (LH ONLY).		1
54	66-11067-2	. STRUT, MANIFOLD PRESSURE FUELING (RH ONLY).		1
55	90-9105-6	. STRUT, MANIFOLD PRESSURE FUELING.		1
56	90-9105-7	. STRUT, MANIFOLD PRESSURE FUELING.		2
57	60-6581	. ANGLE, MANIFOLD PRESSURE FUELING SUPPORT.		1
58	60-6581-1	. ANGLE, MANIFOLD PRESSURE FUELING SUPPORT. ATTACHING PARTS		1
59	AN4-7A	. BOLT.		15
60	AN4-6A	. BOLT.		1
61	AN960D416	. WASHER.		13
62	AN960D416L	. WASHER.		3
63	NAS679A4W	. NUT		16
		. FOR REFERENCE TO OTHER MANIFOLD DETAILS, SEE NHA. . .		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

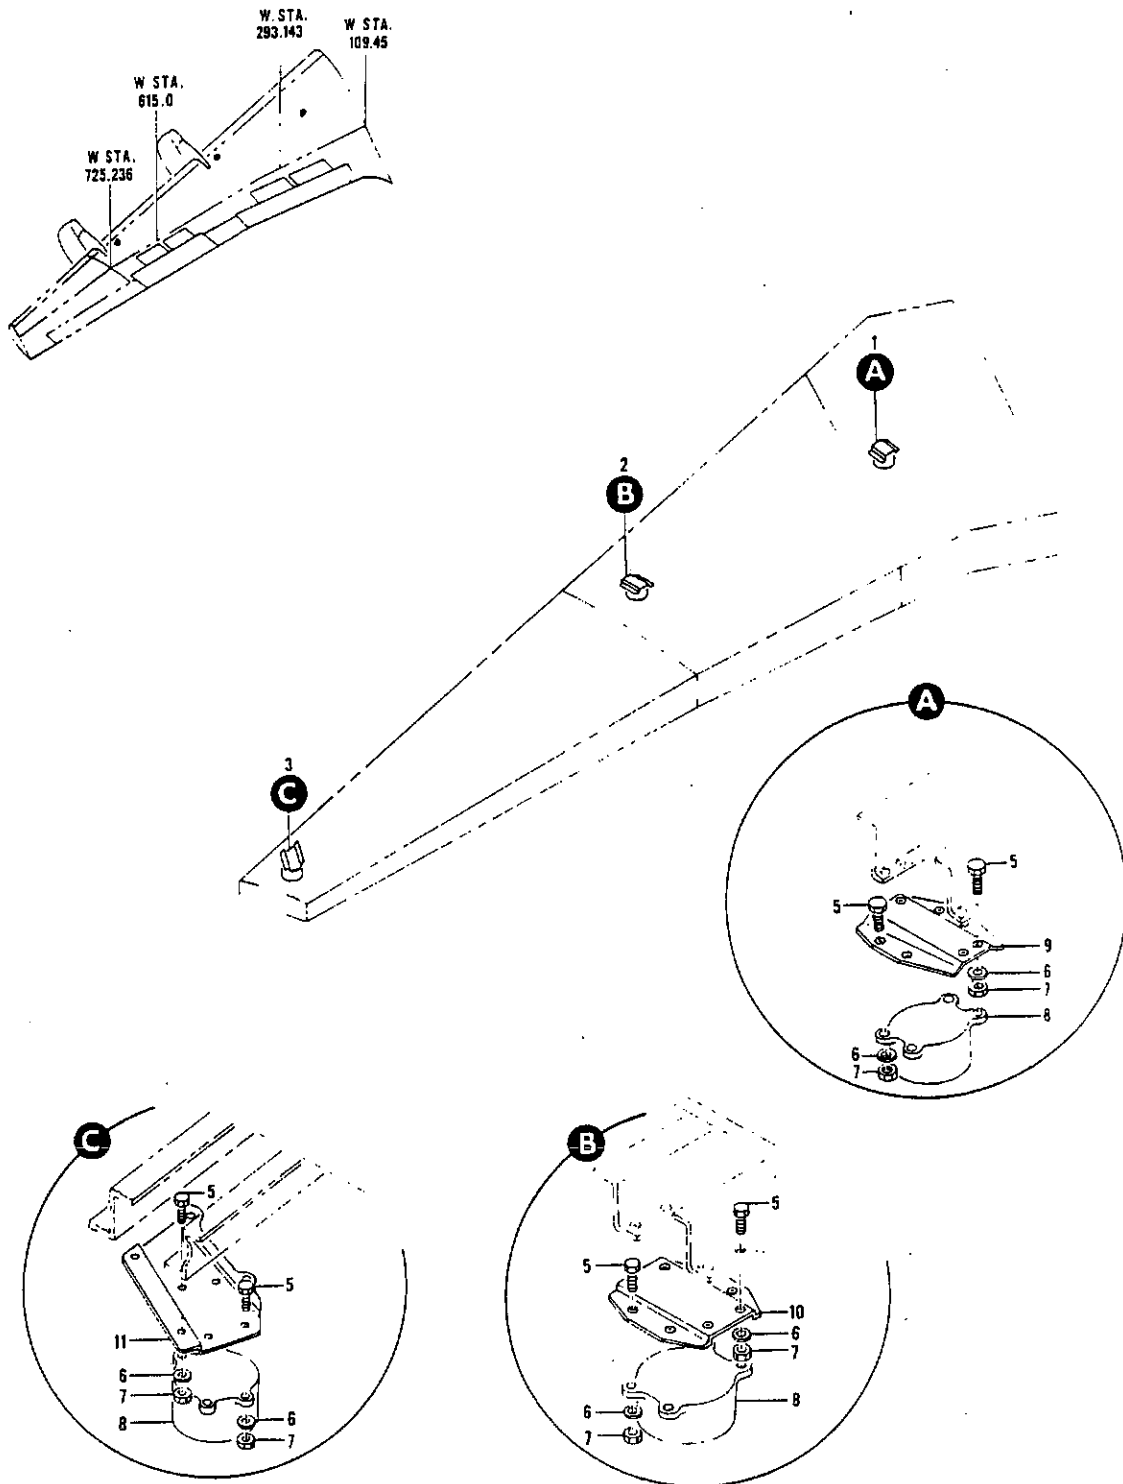


FIGURE 18. VALVE INSTL, PRESSURE FUELING FUEL SHUTOFF FLOAT



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
18	1	65-6405-1	VALVE INSTL, WING CENTER SECTION PRESSURE FUELING FUEL SHUTOFF FLOAT LH (SEE FIG. 13, ITEM 74, FIG. 14, ITEM 122 AND FIG. 15, ITEM 87)								RF
	1	65-6405-2	VALVE INSTL, WING CENTER SECTION PRESSURE FUELING FUEL SHUTOFF FLOAT RH (SEE FIG. 13, ITEM 74, FIG. 14, ITEM 122 AND FIG. 15, ITEM 87)								RF
	2	65-6405-3	VALVE INSTL, MAIN TANK NO. 2 PRESSURE FUELING FUEL. . . SHUTOFF FLOAT (SEE FIG. 13, ITEM 75, FIG. 14, ITEM 123 AND FIG. 15, ITEM 88)								RF
	2	65-6405-4	VALVE INSTL, MAIN TANK NO. 3 PRESSURE FUELING FUEL. . . SHUTOFF FLOAT (SEE FIG. 13, ITEM 75, FIG. 14, ITEM 123 AND FIG. 15, ITEM 88)								RF
	3	65-6405-5	VALVE INSTL, MAIN TANK NO. 1 PRESSURE FUELING FUEL. . . SHUTOFF FLOAT (SEE FIG. 13, ITEM 76, FIG. 14, ITEM 124 AND FIG. 15, ITEM 89)								RF
	3	65-6405-6	VALVE INSTL, MAIN TANK NO. 4 PRESSURE FUELING FUEL. . . SHUTOFF FLOAT (SEE FIG. 13, ITEM 76, FIG. 14, ITEM 124 AND FIG. 15, ITEM 89)								RF
	5	AN4-4A	. BOLT.								8
	6	AN960D416L	. WASHER.								8
	7	BACN10BY54W	. NUT								8
	8	10-3060-2	. VALVE ASSY, PRESSURE FUELING LEVEL CONTROL PILOT. . . FLOAT								1
	9	69-5127-1	. SUPPORT, PRESSURE FUELING FLOAT VALVE (USED ON. . . 65-6405-1 AND -2)							0101	1
	9	69-5127-5	. SUPPORT, PRESSURE FUELING FLOAT VALVE (USED ON. . . 65-6405-1 AND -2)							0299	1
	10	69-5127	. SUPPORT, PRESSURE FUELING FLOAT VALVE (USED ON. . . 65-6405-3 AND -4)							0101	1
	10	69-5127-4	. SUPPORT, PRESSURE FUELING FLOAT VALVE (USED ON. . . 65-6405-3 AND -4)							0299	1
	11	69-5127-3	. SUPPORT, PRESSURE FUELING FLOAT VALVE (USED ON. . . 65-6405-5)							0101	1
	11	69-5127-2	. SUPPORT, PRESSURE FUELING FLOAT VALVE (USED ON. . . 65-6405-6)							0101	1
	11	69-5127-7	. SUPPORT, PRESSURE FUELING FLOAT VALVE (USED ON. . . 65-6405-5)							0299	1
	11	69-5127-6	. SUPPORT, PRESSURE FUELING FLOAT VALVE (USED ON. . . 65-6405-6)							0299	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

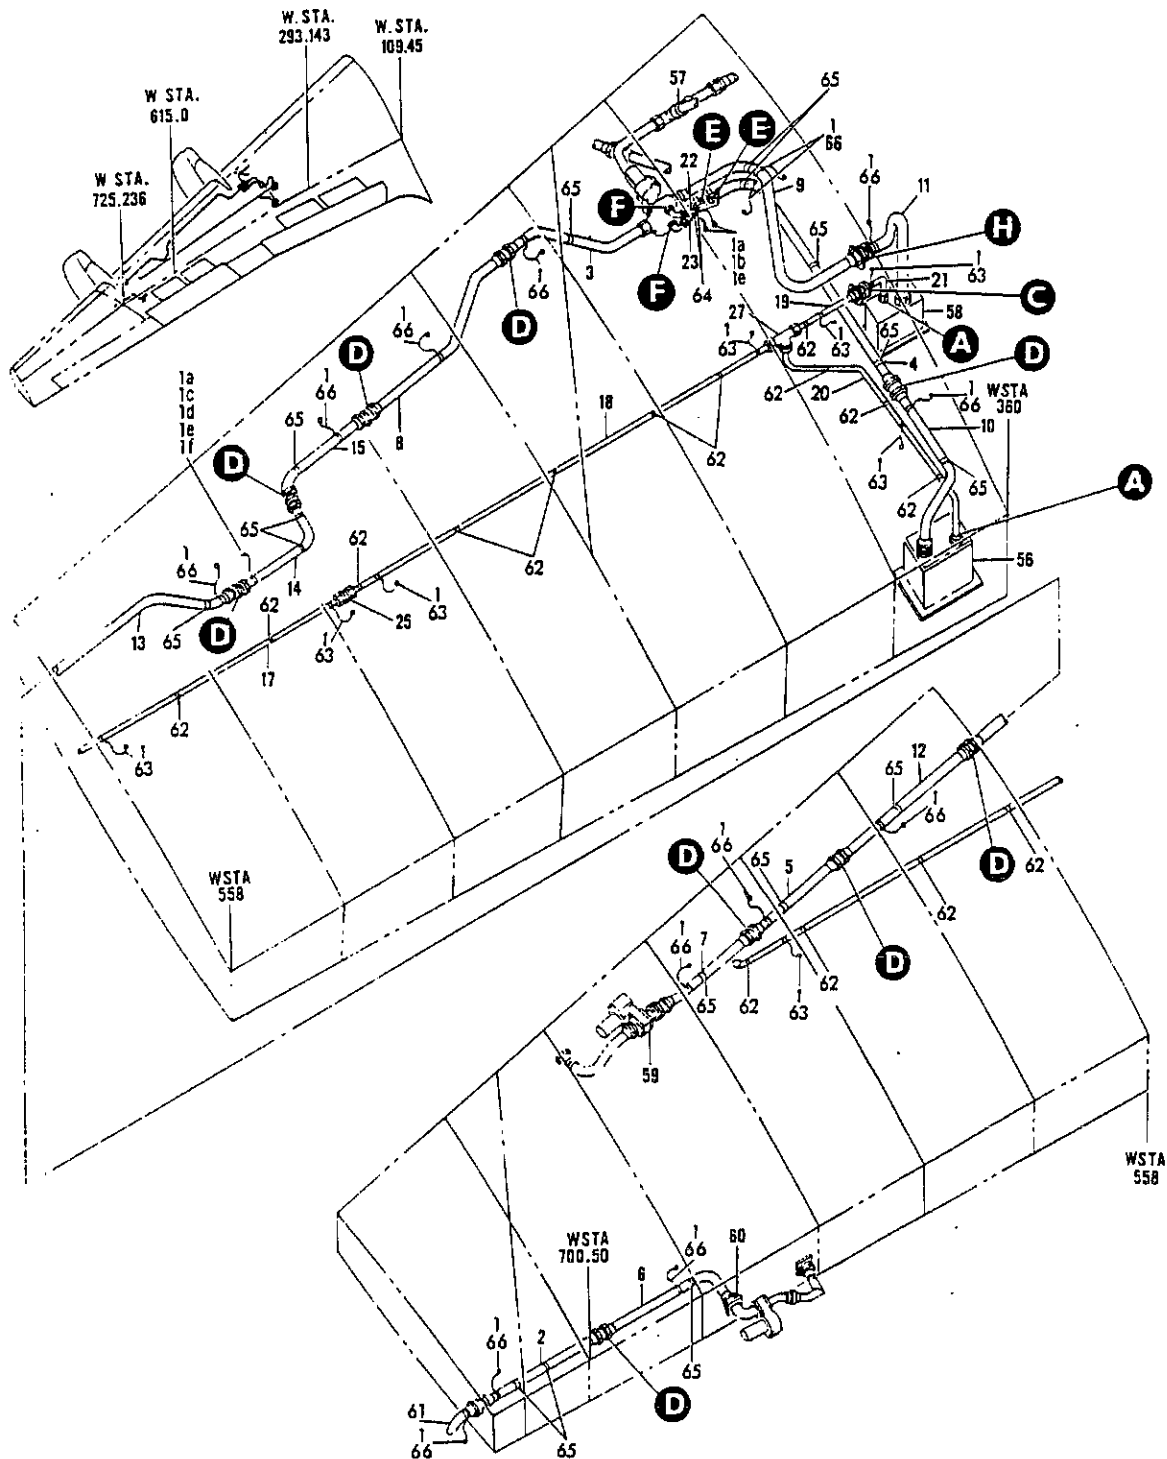


FIGURE 20. TUBING INSTL, SECTION 22 ENGINE FUEL FEED (SHEET 1)

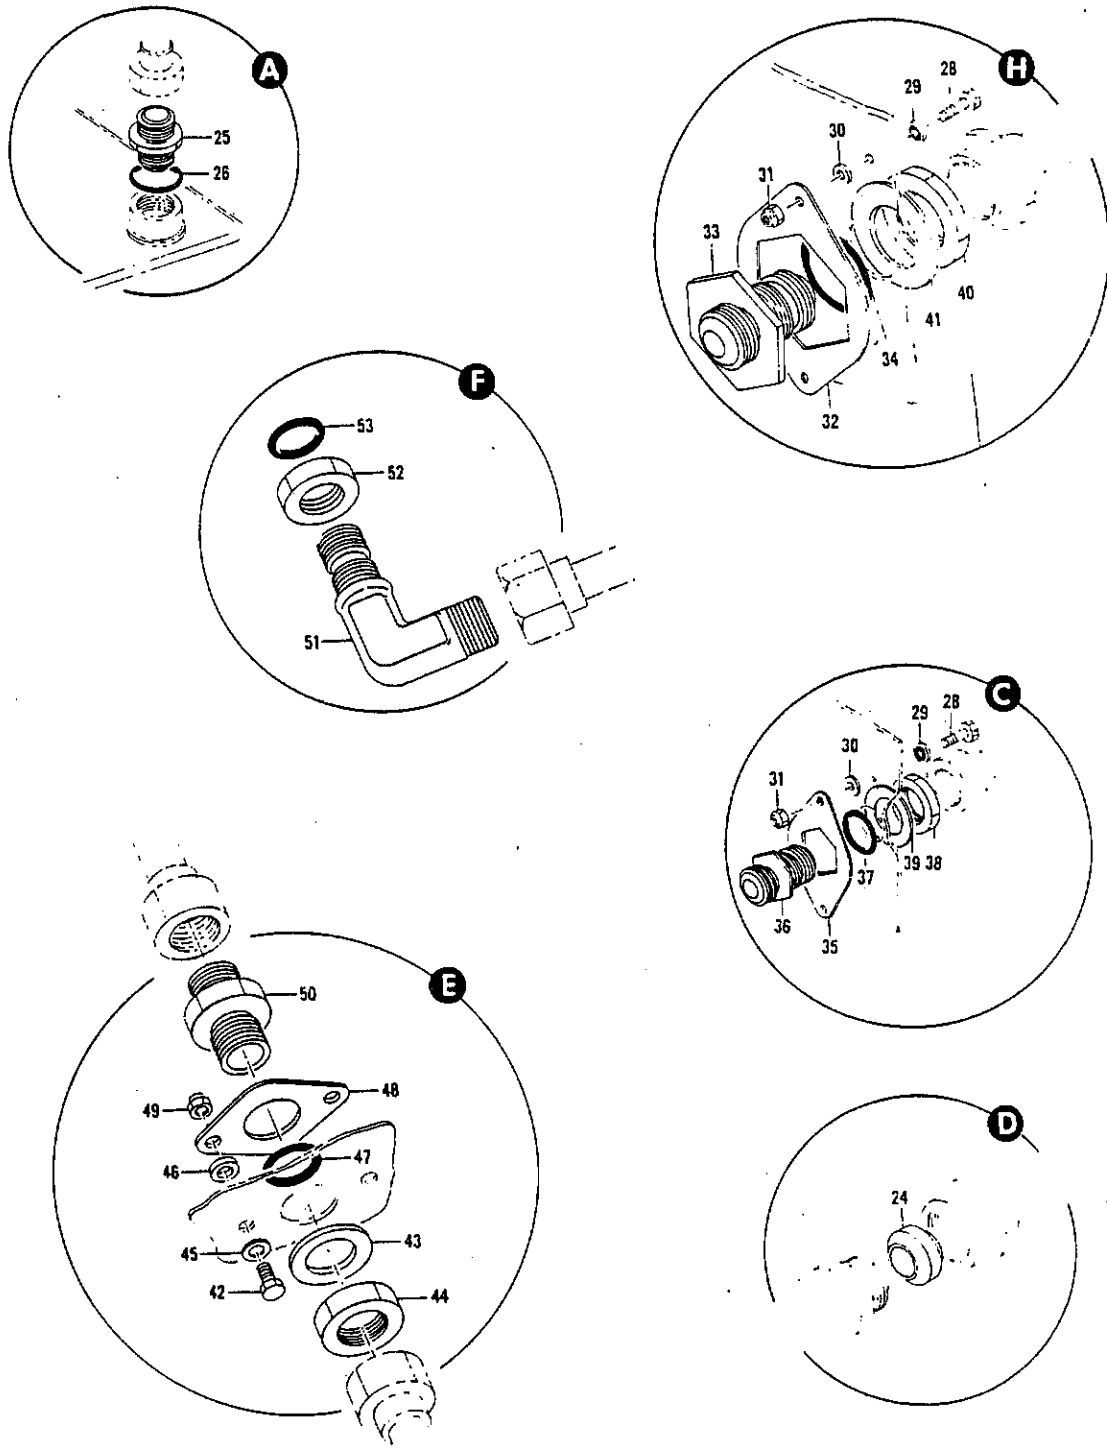


FIGURE 20. TUBING INSTL., SECTION 22 ENGINE FUEL FEED (SHEET 2)

NOV 21/90

28-01-20

DETAILED PARTS LIST
28-01-20
PAGE 1

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
20	65-4092-1	TUBING INSTL, SECTION 22 ENGINE FUEL FEED LH (FOR . . . ADDITIONAL DETAILS SEE FIG. 21) (SEE 57-3, FIG. 1, ITEM 22)		RF
	65-4092-2	TUBING INSTL, SECTION 22 ENGINE FUEL FEED RH (FOR . . . ADDITIONAL DETAILS SEE FIG. 21) (SEE 57-3, FIG. 1, ITEM 22)		RF
1	MS25083-2BB4	JUMPER ASSY, (OPTIONAL BACJ40A20-4) ATTACHING PARTS		22
	NAS603	SCREW, (LENGTH TO BE DETERMINED).		42
	AN960D10L	WASHER.		42
	NAS679A3W	NUT		42
1A	MS25083-2BB6	JUMPER ASSY (OPTIONAL BACJ40A20-6)		3
1A	BACJ40A20-6	JUMPER ASSY (OPTIONAL TO MS25083-2BB6)		3
		ATTACHING PARTS		
1B	NAS603-8	SCREW		2
1C	NAS603-10	SCREW		1
1D	AN960D10L	WASHER.		1
1E	NAS679A3W	NUT		3
1F	AN735-24	CLAMP		1
2	5-86584-3107	TUBE ASSY, FUEL 1-1/2 .035 5052-0 (LH ONLY)		1
2	5-86584-3108	TUBE ASSY, FUEL 1-1/2 .035 5052-0 (RH ONLY)		1
3	5-86584-3015	TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (LH . . . ONLY)		1
3	5-86584-3016	TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (RH . . . ONLY)		1
4	5-86584-3075	TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (LH . . . ONLY)		1
4	5-86584-3076	TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (RH . . . ONLY)		1
5	5-86584-3008	TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0		1
	NAS591-24H	COUPLING.		1
	NAS593-24H	NUT		1
6	5-86584-3005	TUBE ASSY, FUEL 1-1/2 .035 5052-0 (LH ONLY)		1
6	5-86584-3006	TUBE ASSY, FUEL 1-1/2 .035 5052-0 (RH ONLY)		1
7	5-86584-3009	TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (OPTIONAL 5-86584-3103) (LH ONLY)		1
7	5-86584-3010	TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (OPTIONAL 5-86584-3104) (RH ONLY)		1
8	5-86584-3014	TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (LH . . . ONLY)		1
8	5-86584-3057	TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (RH . . . ONLY)		1
9	5-86584-3017	TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (LH . . . ONLY)		1
9	5-86584-3018	TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (RH . . . ONLY)		1
10	5-86584-3023	TUBE ASSY, ENGINE FUEL FEED 1-1/2 IN. .035 5052-0 . . . (LH ONLY)	0101	1
10	65-4092-129	TUBE ASSY, ENGINE FUEL FEED 1-1/2 IN. .035 5052-0 . . . (LH ONLY)	0299	1
10	5-86584-3024	TUBE ASSY, ENGINE FUEL FEED 1-1/2 IN. .035 5052-0 . . . (RH ONLY)	0101	1
10	65-4092-127	TUBE ASSY, ENGINE FUEL FEED 1-1/2 IN. .035 5052-0 . . . (RH ONLY)	0299	1
11	65-4092-88	TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (OPTIONAL 65-4092-113) (LH ONLY)		1
11	65-4092-89	TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (OPTIONAL 65-4092-114) (RH ONLY)		1
	NAS593-24H	NUT		2
12	5-86584-3011	TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0		1
	NAS591-24H	COUPLING.		2
13	65-4092-125	TUBE ASSY, 1-1/2 IN. .035 5052-0 (LH ONLY).		1
13	65-4092-126	TUBE ASSY, 1-1/2 IN. .035 5052-0 (RH ONLY).		1
14	5-86584-3073	TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (LH . . . ONLY)		1
14	5-86584-3074	TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (RH . . . ONLY)		1
15	5-86584-3013	TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (LH . . . ONLY)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

BOEING
Intercontinental
707
PARTS CATALOG


FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
20 15	5-86584-3082	.	TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (RH ONLY)		1
	NAS591-24H	.	COUPLING.		1
	NAS593-24H	.	NUT		1
17	5-86584-3060	.	TUBE ASSY, FUEL 3/4 .035 6061-T6.		1
	MS21922-12	.	SLEEVE.		1
	BACN10CS12D	.	NUT		1
18	5-86584-3061	.	TUBE ASSY, FUEL 3/4 .035 6061-T6.		1
19	5-86584-3058	.	TUBE ASSY, ENGINE FUEL FEED 3/4 IN. .035 6061-T6. (LH ONLY)	0101	1
19	65-4092-130	.	TUBE ASSY, ENGINE FUEL FEED 3/4 IN. .035 6061-T6. (LH ONLY)	0299	1
19	5-86584-3059	.	TUBE ASSY, ENGINE FUEL FEED 3/4 IN. .035 6061-T6. (RH ONLY)	0101	1
19	65-4092-128	.	TUBE ASSY, ENGINE FUEL FEED 3/4 IN. .035 6061-T6. (RH ONLY)	0299	1
20	5-86584-3062	.	TUBE ASSY, FUEL 3/4 .035 6061-T6 (LH ONLY).		1
20	5-86584-3063	.	TUBE ASSY, FUEL 3/4 .035 6061-T6 (RH ONLY).		1
21	65-4092-90	.	TUBE ASSY, ENGINE FUEL FEED 3/4 .035 6061-T6. (OPTIONAL 65-4092-116) (LH ONLY)		1
21	65-4092-91	.	TUBE ASSY, ENGINE FUEL FEED 3/4 .035 6061-T6. (OPTIONAL 65-4092-117) (RH ONLY)		1
	MS21922-12	.	SLEEVE.	0101	2
	MS21922-12	.	SLEEVE.	0299	2
	BACS13AP12	.	SLEEVE.		2
	BACN10CS12D	.	NUT		2
22	65-4092-118	.	TUBE ASSY, FUEL PRESSURE SENSING 3/8 .028 6061-T6 (LH ONLY)		1
22	65-4092-119	.	TUBE ASSY, FUEL PRESSURE SENSING 3/8 .028 6061-T6 (RH ONLY)		1
23	65-4092-93	.	TUBE ASSY, FUEL PRESSURE SENSING 3/8 .028 6061-T6 (LH ONLY)		1
23	65-4092-94	.	TUBE ASSY, FUEL PRESSURE SENSING 3/8 .028 6061-T6 (RH ONLY)		1
	MS21922-6	.	SLEEVE.		2
	BACN10CS6D	.	NUT		2
24	NAS592-24	.	RING.		9
25	MS21902D12	.	UNION		3
26	MS29512-12	.	GASKET.		2
27	MS21905D12	.	TEE		1
28	AN4H5A	.	BOLT.		4
29	BACS11W4	.	SEAL.		4
30	AN960PD416	.	WASHER.		4
31	NAS679A4W	.	NUT		4
32	BACR10Y24D	.	RETAINER.		1
33	BACU24C124D	.	UNION		1
34	MS29513-228	.	PACKING		1
35	BACR10Y12D	.	RETAINER.		1
36	BACU24E12D	.	UNION		1
37	MS29513-221	.	PACKING		1
38	BACN10DR12D	.	NUT		1
39	AN960PD1716	.	WASHER.		1
40	BACN10DR24D	.	NUT		1
41	AN960PD3016	.	WASHER.		1
42	AN4H5A	.	BOLT.		4
43	AN960PD916	.	WASHER.		2
44	BACN10DR6D	.	NUT		2
45	BACS11W4	.	SEAL.		4
46	AN960D416	.	WASHER.		4
47	MS29513-212	.	PACKING		2
48	BACR10Y6D	.	RETAINER.		2
49	NAS679A4W	.	NUT		4
50	BACU24E6D	.	UNION		2
51	MS21908D6	.	ELBOW		2
52	BACN10DR6D	.	NUT		2
53	MS29512-06	.	PACKING		2
56	5-95684-3011	.	PUMP INSTL, MAIN WING TANKS FUEL BOOSTER (LH ONLY). (SEE 28-2, FIG. 2)		1
56	5-95684-3012	.	PUMP INSTL, MAIN WING TANKS FUEL BOOSTER (RH ONLY). (SEE 28-2, FIG. 2)		1
57	5-86597-3001	.	TUBING INSTL, INBOARD DRY BAY FUEL FEED SYSTEM (LH ONLY) (SEE FIG. 26)		1
57	5-86597-3002	.	TUBING INSTL, INBOARD DRY BAY FUEL FEED SYSTEM (RH ONLY) (SEE FIG. 26)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
20	58	5-95684-3009	.	PUMP INSTL, MAIN WING TANKS FUEL BOOSTER (LH ONLY). .		1
	58	5-95684-3010	.	(SEE 28-2, FIG. 1) PUMP INSTL, MAIN WING TANKS FUEL BOOSTER (RH ONLY). .		1
	59	65-7224-1	.	(SEE 28-2, FIG. 1) VALVE INSTL, SECTION 22 ENGINE FUEL FEED (LH ONLY). .		1
	59	65-7224-2	.	(SEE FIG. 22) VALVE INSTL, SECTION 22 ENGINE FUEL FEED (RH ONLY). .		1
	60	65-20713-1	.	(SEE FIG. 22) VALVE INSTL, SECTION 22 ENGINE FUEL FEED (LH ONLY). .		1
	60	65-20713-2	.	(SEE FIG. 25) VALVE INSTL, SECTION 22 ENGINE FUEL FEED (RH ONLY). .		1
	61	69-6092-1	.	(SEE FIG. 25) FITTING INSTL, SECTION 22 ENGINE FUEL FEED DRAIN. .		1
	61	69-6092-2	.	FITTING (LH ONLY) (SEE 28-7, FIG. 4) FITTING INSTL, SECTION 22 ENGINE FUEL FEED DRAIN. .		1
	62	AN735D24	.	FITTING (RH ONLY) (SEE 28-7, FIG. 4) CLAMP		15
	63	AN735D12	.	CLAMP		8
	64	AN735D6	.	CLAMP		2
	65	BACC10BW24DF	.	CLAMP		16
	66	BACC10BW12DF	.	CLAMP		14
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

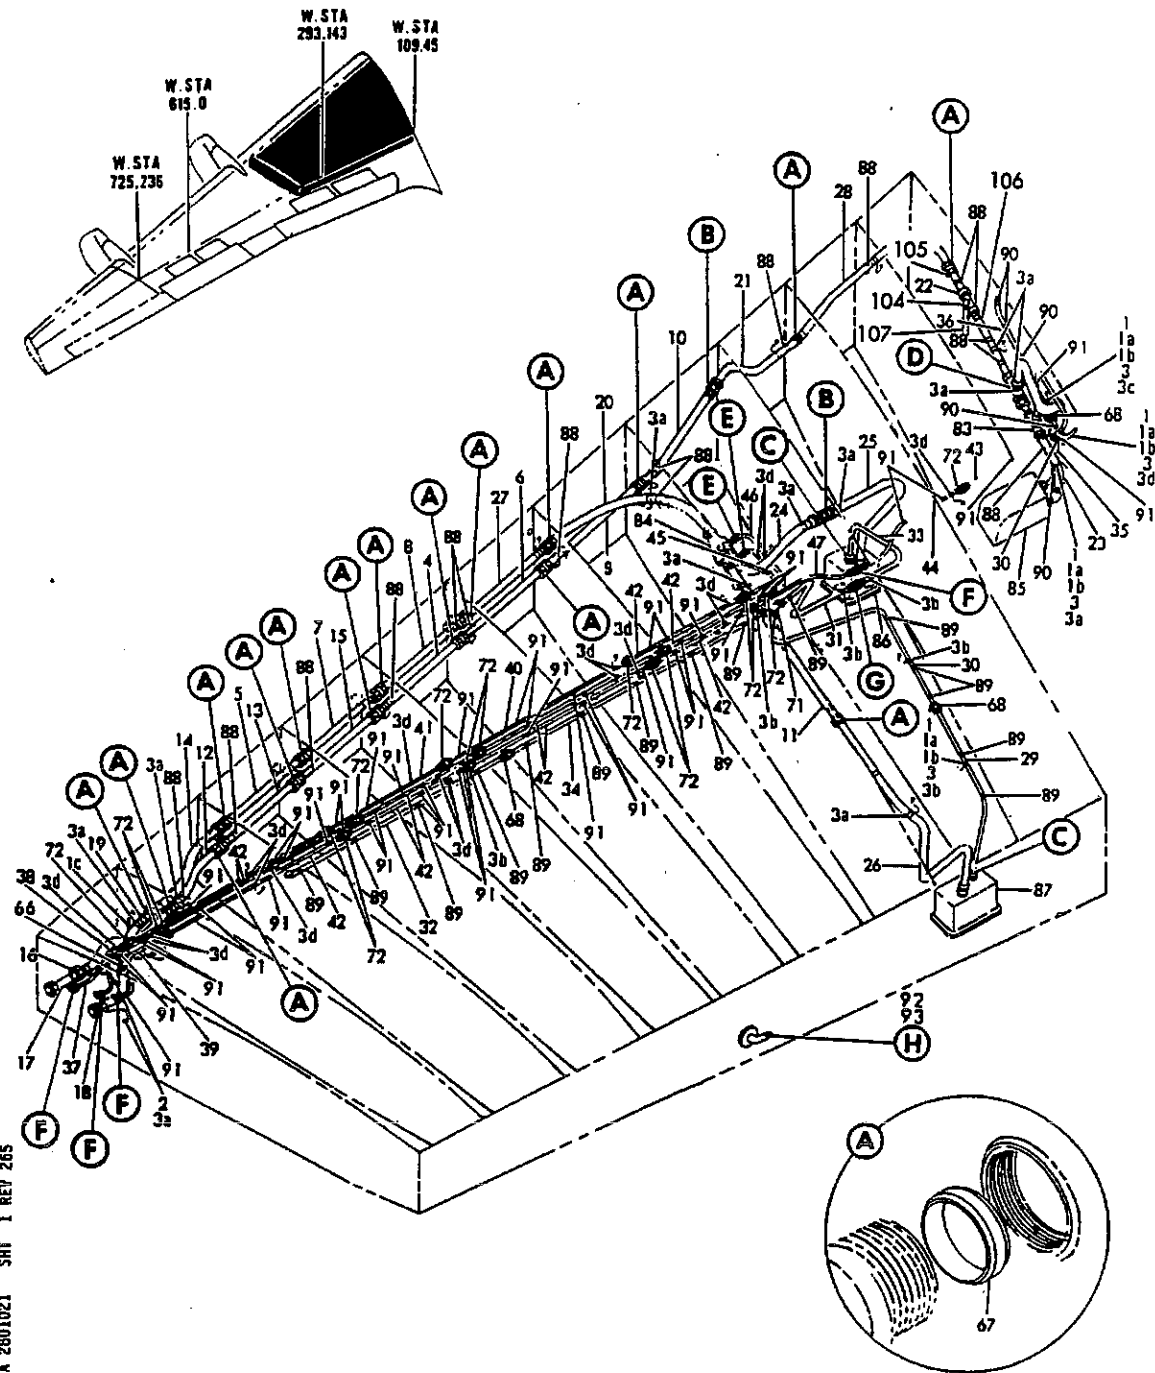

A 2801021 SHT 1 REV 265

FIGURE 21. TUBING INSTL. SECTION 22 ENGINE FUEL FEED (SHEET 1)

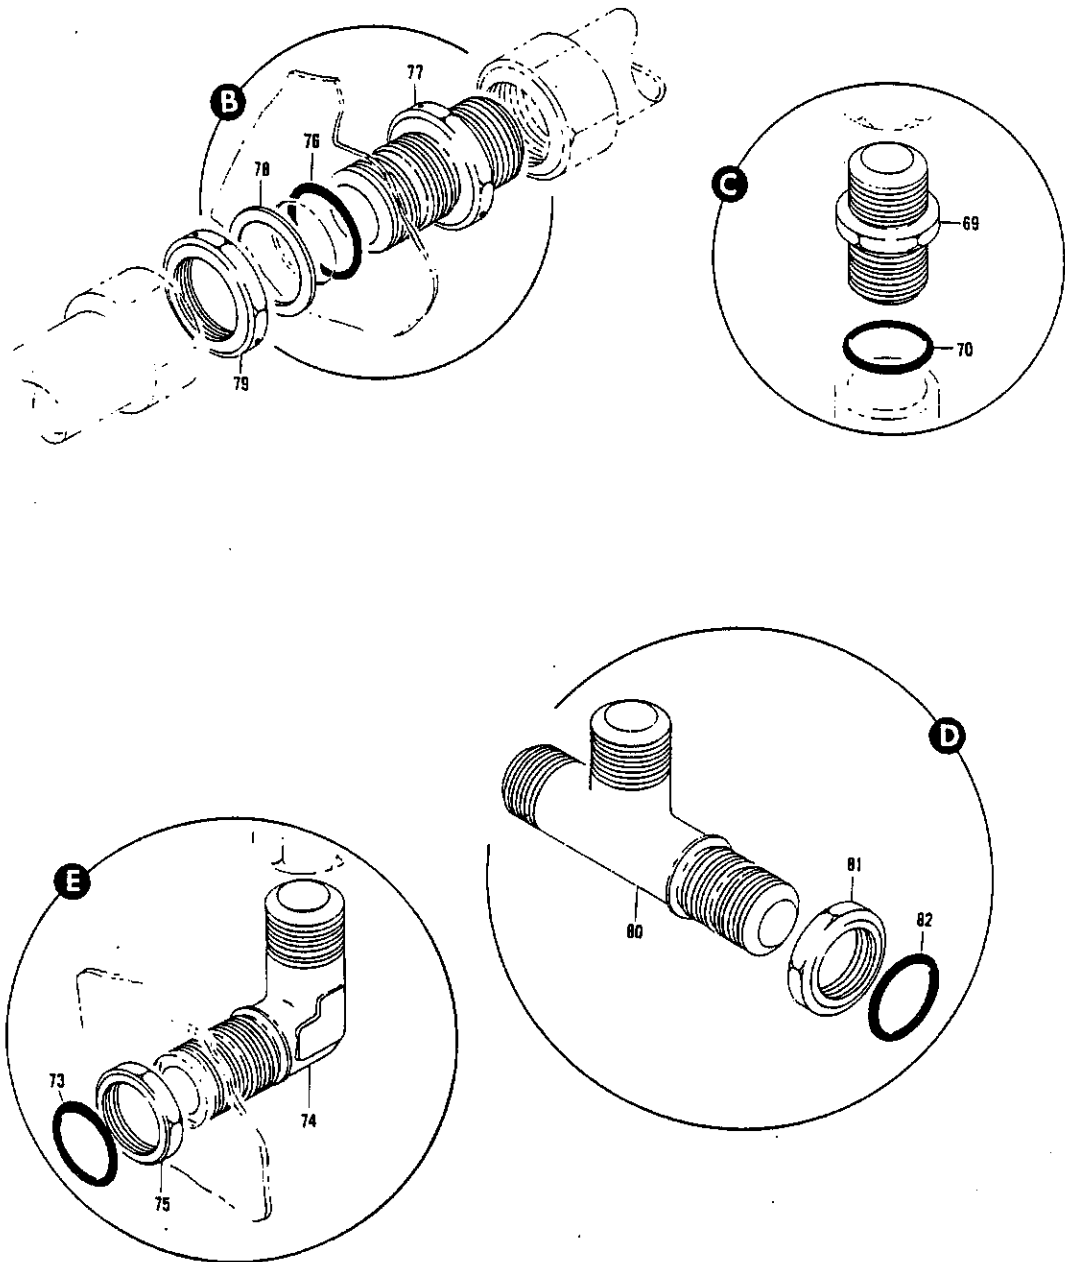


FIGURE 21. TUBING INSTL, SECTION 22 ENGINE FUEL FEED (SHEET2)

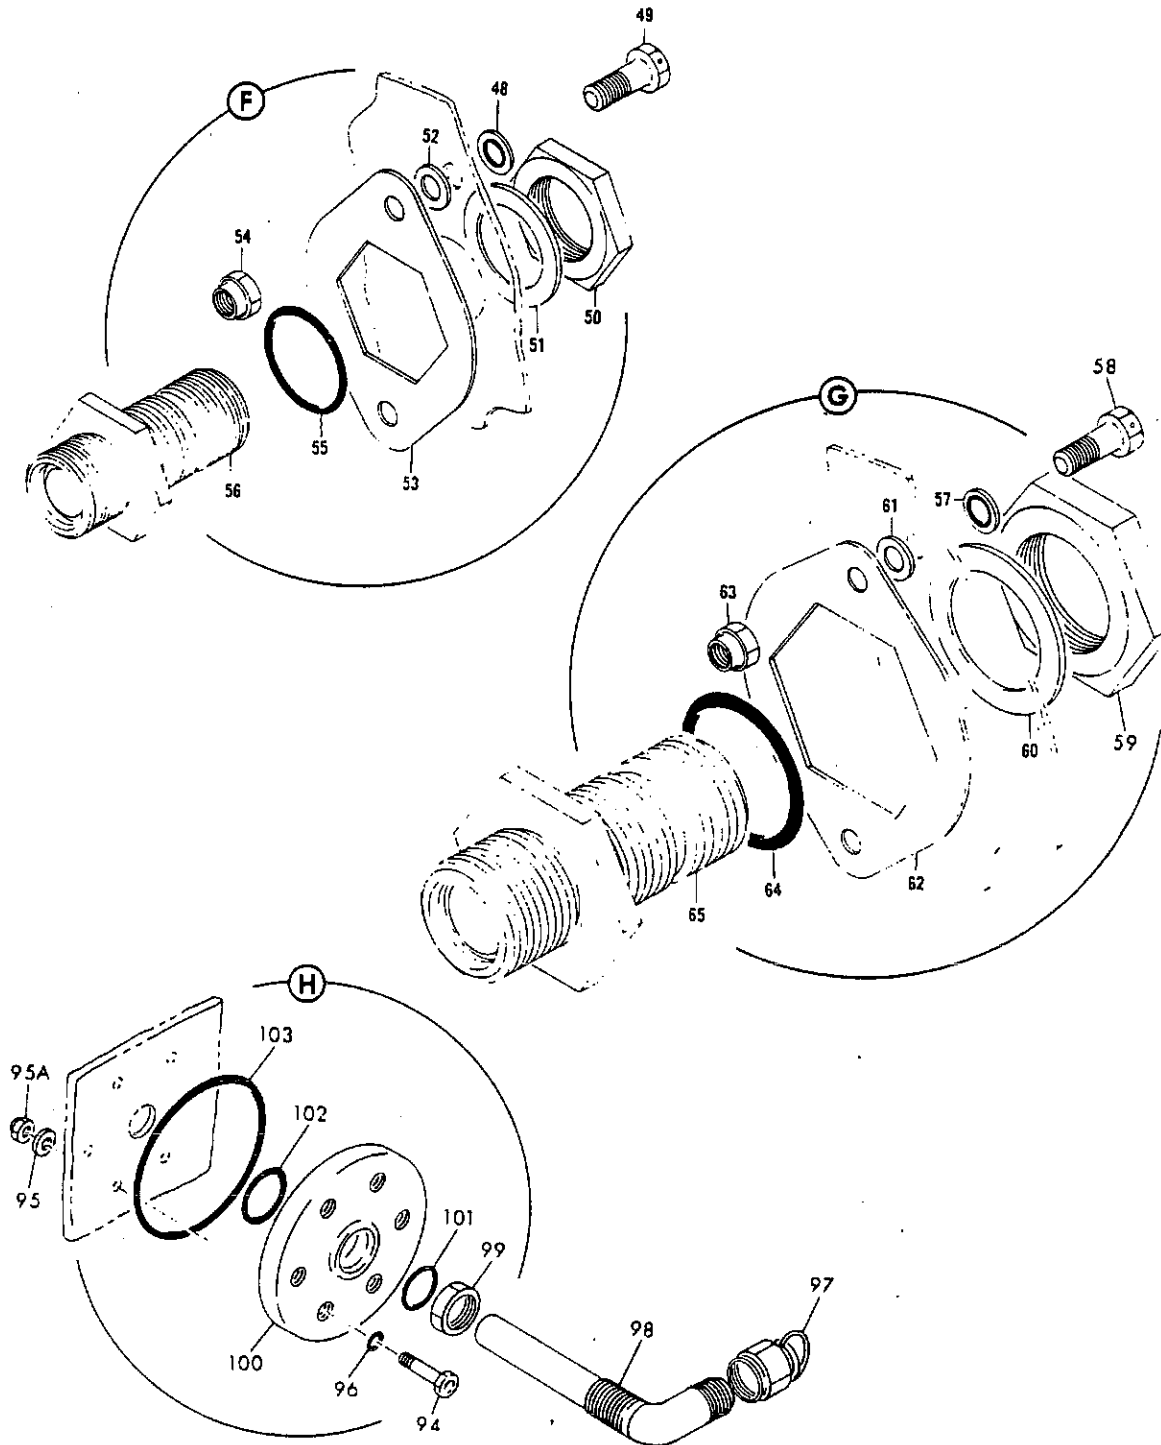


FIGURE 21. SECTION 23 ENGINE FUEL FEED TUBING INSTALLATION (SHEET 3)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
21	65-4092-1	TUBING INSTL, SECTION 22 ENGINE FUEL FEED LH (FOR . . . ADDITIONAL DETAILS SEE FIG. 20) (SEE 57-3, FIG. 1, ITEM 22)		RF
	65-4092-2	TUBING INSTL, SECTION 22 ENGINE FUEL FEED RH (FOR . . . ADDITIONAL DETAILS SEE FIG. 20) (SEE 57-3, FIG. 1, ITEM 22)		RF
1	NAS603	. SCREW, (LENGTH TO BE DETERMINED). (OPTIONAL TO BACS12CB3)		AR
1	BACS12CB3	. SCREW, (LENGTH TO BE DETERMINED). (OPTIONAL NAS603)		AR
1A	AN960D10L	. WASHER.		AR
1B	BACN10JC3	. NUT		AR
1C	MS25083-28B7	. JUMPER ASSY.		1
2	MS25083-28B6	. JUMPER ASSY, (OPTIONAL BACJ40A20-6)		2
3	MS25083-28B4	. JUMPER ASSY, (OPTIONAL BACJ40A20-4)		50
3A	AN735D24	. CLAMP		26
3B	AN735D12	. CLAMP		6
3C	AN735D8	. CLAMP		2
3D	AN735D6	. CLAMP		19
4	65-4092-39	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0		1
5	65-4092-40	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0		1
6	65-4092-41	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (OPTIONAL 65-4092-120)		1
7	65-4092-42	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0		1
8	65-4092-43	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0		1
9	65-4092-44	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0		1
10	65-4092-48	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (LH . . ONLY)		1
10	65-4092-49	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (RH . . ONLY)		1
11	65-4092-74	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (LH . . ONLY)		1
11	65-4092-75	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (RH . . ONLY)		1
12	65-4092-96	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (LH . . ONLY)		1
12	65-4092-97	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (RH . . ONLY)		1
13	65-4092-98	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0		1
14	65-4092-99	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0		1
15	65-4092-101	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0		1
	NAS591-24H	. COUPLING.		1
	NAS593-24H	. NUT		1
16	65-4092-14	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (LH . . ONLY)		1
16	65-4092-92	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (RH . . ONLY)		1
17	65-4092-33	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (LH . . ONLY)		1
17	65-4092-34	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (RH . . ONLY)		1
18	65-4092-35	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (LH . . ONLY)		1
18	65-4092-36	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (RH . . ONLY)		1
19	65-4092-37	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (LH . . ONLY)		1
19	65-4092-38	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (RH . . ONLY)		1
20	65-4092-46	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (LH . . ONLY)		1
20	65-4092-47	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (RH . . ONLY)		1
21	65-4092-50	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (LH . . ONLY)		1
21	65-4092-51	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (RH . . ONLY)		1
22	65-4092-54	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (LH . . ONLY)	5199	1
22	65-4092-55	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (RH . . ONLY)	5199	1
22	65-4092-54	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .35 5052-0. (LH ONLY) (DELETED BY RAF 7211.019-225)	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

R
R
R
R
R
R

RAF
NOV 21/94

28-01-21

DETAILED PARTS LIST
28-01-21
PAGE 3



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
21 22	65-4092-55	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (RH ONLY) (DELETED BY RAF 7211.019-225)	0150	1
23	65-4092-56	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (LH . . ONLY)		1
23	65-4092-57	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (RH . . ONLY)		1
24	65-4092-70	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (OPTIONAL 65-4092-121) (LH ONLY)		1
24	65-4092-71	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (OPTIONAL 65-4092-122) (RH ONLY)		1
25	65-4092-72	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (OPTIONAL 65-4092-111) (LH ONLY)		1
25	65-4092-73	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (OPTIONAL 65-4092-112) (RH ONLY)		1
26	65-4092-76	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (LH . . ONLY)		1
26	65-4092-77	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (RH . . ONLY)		1
27	NAS592-24H	 NUT		2
28	65-4092-45	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0		1
28	65-4092-52	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (LH . . ONLY)		1
28	65-4092-53	. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0 (RH . . ONLY)		1
29	NAS591-24H	 COUPLING		2
29	65-4092-78	. TUBE ASSY, ENGINE FUEL FEED 3/4 .035 6061-T6 (LH . . ONLY)		1
29	65-4092-79	. TUBE ASSY, ENGINE FUEL FEED 3/4 .035 6061-T6 (RH . . ONLY)		1
30	65-4092-80	. TUBE ASSY, ENGINE FUEL FEED 3/4 .035 6061-T6 (LH . . ONLY)		1
30	65-4092-81	. TUBE ASSY, ENGINE FUEL FEED 3/4 .035 6061-T6 (RH . . ONLY)		1
31	65-4092-82	. TUBE ASSY, ENGINE FUEL FEED 3/4 .035 6061-T6 (LH . . ONLY)		1
31	65-4092-83	. TUBE ASSY, ENGINE FUEL FEED 3/4 .035 6061-T6 (RH . . ONLY)		1
32	65-4092-84	. TUBE ASSY, ENGINE FUEL FEED 3/4 .035 6061-T6		1
33	65-4092-86	. TUBE ASSY, ENGINE FUEL FEED 3/4 .035 6061-T6 (LH . . ONLY)		1
33	65-4092-87	. TUBE ASSY, ENGINE FUEL FEED 3/4 .035 6061-T6 (RH . . ONLY)		1
34	65-4092-100	. TUBE ASSY, ENGINE FUEL FEED 3/4 .035 6061-T6		1
	MS21922-12	 SLEEVE		2
	BACN10CS12D	 NUT		2
35	65-4092-58	. TUBE ASSY, ENGINE FUEL FEED 1/2 .028 6061-T6 (LH . . ONLY)		1
35	65-4092-59	. TUBE ASSY, ENGINE FUEL FEED 1/2 .028 6061-T6 (RH . . ONLY)		1
36	65-4092-95	. TUBE ASSY, ENGINE FUEL FEED 1/2 .028 6061-T6		1
	MS21922-8	 SLEEVE		1
	BACN10CS8D	 NUT		1
37	65-4092-5	. TUBE ASSY, FUEL PRESSURE SENSING 3/8 .028 6061-T6 (LH ONLY)		1
37	65-4092-6	. TUBE ASSY, FUEL PRESSURE SENSING 3/8 .028 6061-T6 (RH ONLY)		1
38	65-4092-7	. TUBE ASSY, FUEL PRESSURE SENSING 3/8 .028 6061-T6 (LH ONLY)		1
38	65-4092-8	. TUBE ASSY, FUEL PRESSURE SENSING 3/8 .028 6061-T6 (RH ONLY)		1
39	65-4092-9	. TUBE ASSY, FUEL PRESSURE SENSING 3/8 .028 6061-T6 (LH ONLY)		1
39	65-4092-10	. TUBE ASSY, FUEL PRESSURE SENSING 3/8 .028 6061-T6 (RH ONLY)		1
40	65-4092-11	. TUBE ASSY, FUEL PRESSURE SENSING 3/8 .028 6061-T6		1
41	65-4092-12	. TUBE ASSY, FUEL PRESSURE SENSING 3/8 .028 6061-T6		1
42	65-4092-13	. TUBE ASSY, FUEL PRESSURE SENSING 3/8 .028 6061-T6		10
43	65-4092-60	. TUBE ASSY, FUEL PRESSURE SENSING 3/8 .028 6061-T6 (LH ONLY)		1
43	65-4092-61	. TUBE ASSY, FUEL PRESSURE SENSING 3/8 .028 6061-T6 (RH ONLY)		1
44	65-4092-62	. TUBE ASSY, FUEL PRESSURE SENSING 3/8 .028 6061-T6 (LH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
21 44	65-4092-63	. TUBE ASSY, FUEL PRESSURE SENSING 3/8 .028 6061-T6 (RH ONLY)		1
45	65-4092-64	. TUBE ASSY, FUEL PRESSURE SENSING 3/8 .028 6061-T6 (LH ONLY)		1
45	65-4092-65	. TUBE ASSY, FUEL PRESSURE SENSING 3/8 .028 6061-T6 (RH ONLY)		1
46	65-4092-66	. TUBE ASSY, FUEL PRESSURE SENSING 3/8 .028 6061-T6 (LH ONLY)		1
46	65-4092-67	. TUBE ASSY, FUEL PRESSURE SENSING 3/8 .028 6061-T6 (RH ONLY)		1
47	65-4092-68	. TUBE ASSY, FUEL PRESSURE SENSING 3/8 .028 6061-T6 (LH ONLY)		1
47	65-4092-69	. TUBE ASSY, FUEL PRESSURE SENSING 3/8 .028 6061-T6 (RH ONLY)		1
	MS21922-6	. SLEEVE.		2
	BACN10CS6D	. NUT		2
48	BACS11W4	. SEAL.		8
49	AN4H5A	. BOLT.		8
50	BACN10DR6D	. NUT		4
51	AN960PD916	. WASHER.		4
52	AN960PD416	. WASHER.		8
53	BACR10Y6D	. RETAINER.		4
54	NAS679A4W	. NUT		8
55	MS29513-212	. PACKING		4
56	BACU24E6D	. UNION		4
57	BACS11W4	. SEAL.		2
58	AN4H5A	. BOLT.		2
59	BACN10DR12D	. NUT		1
60	AN960PD1716	. WASHER.		1
61	AN960PD416	. WASHER.		2
62	BACR10Y12D	. RETAINER.		1
63	NAS679A4W	. NUT		2
64	MS29513-221	. PACKING		1
65	BACU24E12D	. UNION		1
66	AN824-24D	. TEE		1
67	NAS592-24	. RING.		16
68	MS21902D12	. UNION		3
69	MS21902D12	. UNION		2
70	MS29512-12	. GASKET.		2
71	MS21905D12	. TEE		1
72	MS21902D6	. UNION		16
73	MS29512-06	. PACKING		2
74	MS21908D6	. ELBOW		2
75	BACN10DR6D	. NUT		2
76	MS29513-228	. PACKING		2
77	BACU24C124D	. UNION		2
78	AN960PD3016	. WASHER.		2
79	BACN10DR24D	. NUT		2
80	AN804D24	. TEE		1
81	BACN10DR24D	. NUT		1
82	MS29512-24	. GASKET.		1
83	1111-555219	. VALVE, CHECK (V92003)		1
84	65-7281-1	. VALVE INSTL, SECTION 22 ENGINE FUEL FEED (LH ONLY). (SEE FIG. 23)		1
84	65-7281-2	. VALVE INSTL, SECTION 22 ENGINE FUEL FEED (RH ONLY). (SEE FIG. 23)		1
85	65-7104-1	. PUMP INSTL, OVER-RIDE BOOSTER (LH ONLY)		1
85	65-7104-2	. PUMP INSTL, OVER-RIDE BOOSTER (RH ONLY)		1
		. FUEL, (SEE 28-2, FIG. 3)		
		. REQUIRED PLACARDS, (SEE 11-3, FIG. 60).		
86	5-95684-3013	. PUMP INSTL, MAIN WING TANKS FUEL BOOSTER (LH ONLY). (SEE 28-2, FIG. 1)		1
86	5-95684-3014	. PUMP INSTL, MAIN WING TANKS FUEL BOOSTER (RH ONLY). (SEE 28-2, FIG. 1)		1
87	5-95684-3015	. PUMP INSTL, MAIN WING TANKS FUEL BOOSTER (LH ONLY). (SEE 28-2, FIG. 2)		1
87	5-95684-3016	. PUMP INSTL, MAIN WING TANKS FUEL BOOSTER (RH ONLY). (SEE 28-2, FIG. 2)		1
88	BACC10CVD24	. CLAMP		25
89	BACC10CVD12	. CLAMP		15
90	BACC10CVD8	. CLAMP		5
91	BACC10CVD6	. CLAMP		46
		ATTACHING PARTS		
	NAS603	. SCREW, (LENGTH TO BE DETERMINED).		91

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING **707** *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
21	NAS679A3W	.	NUT	.	.	.	.	.	.	91
	391-89-60-71202-003	.	WING FUEL SYSTEM INSTL, LH (SECTION 22.	.	.	.	.	.	0150	1
		.	ENGINE FUEL FEED ONLY) (VS2500) (ADDED BY RAF	.	.	.	.	.		
	391-89-60-71202-004	.	WING FUEL SYSTEM INSTL, RH (SECTION 22.	.	.	.	.	.	0150	1
		.	ENGINE FUEL FEED ONLY) (VS2500) (ADDED BY RAF	.	.	.	.	.		
	AN824-24D	.	TEE	.	.	.	.	.	0150	1
104	361-89-60-74118-503	.	TUBE ASSY, 1-1/2 IN. .035, 6061-T6 (VS2500)	.	.	.	.	.	0150	1
105	361-89-60-74118-501	.	TUBE ASSY, 1-1/2 IN. .035, 6061-T6 (VS2500)	.	.	.	.	.	0150	1
106	361-89-60-74118-505	.	TUBE ASSY, POD POSITIVE INLET PRESSURE (VS2500)	.	.	.	.	.	0150	1
107		.	(ADDED BY RAF 7211.019-225) (SEE 89-1, FIG. 9,	.	.	.	.	.		
		.	ITEM 1)	.	.	.	.	.		
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

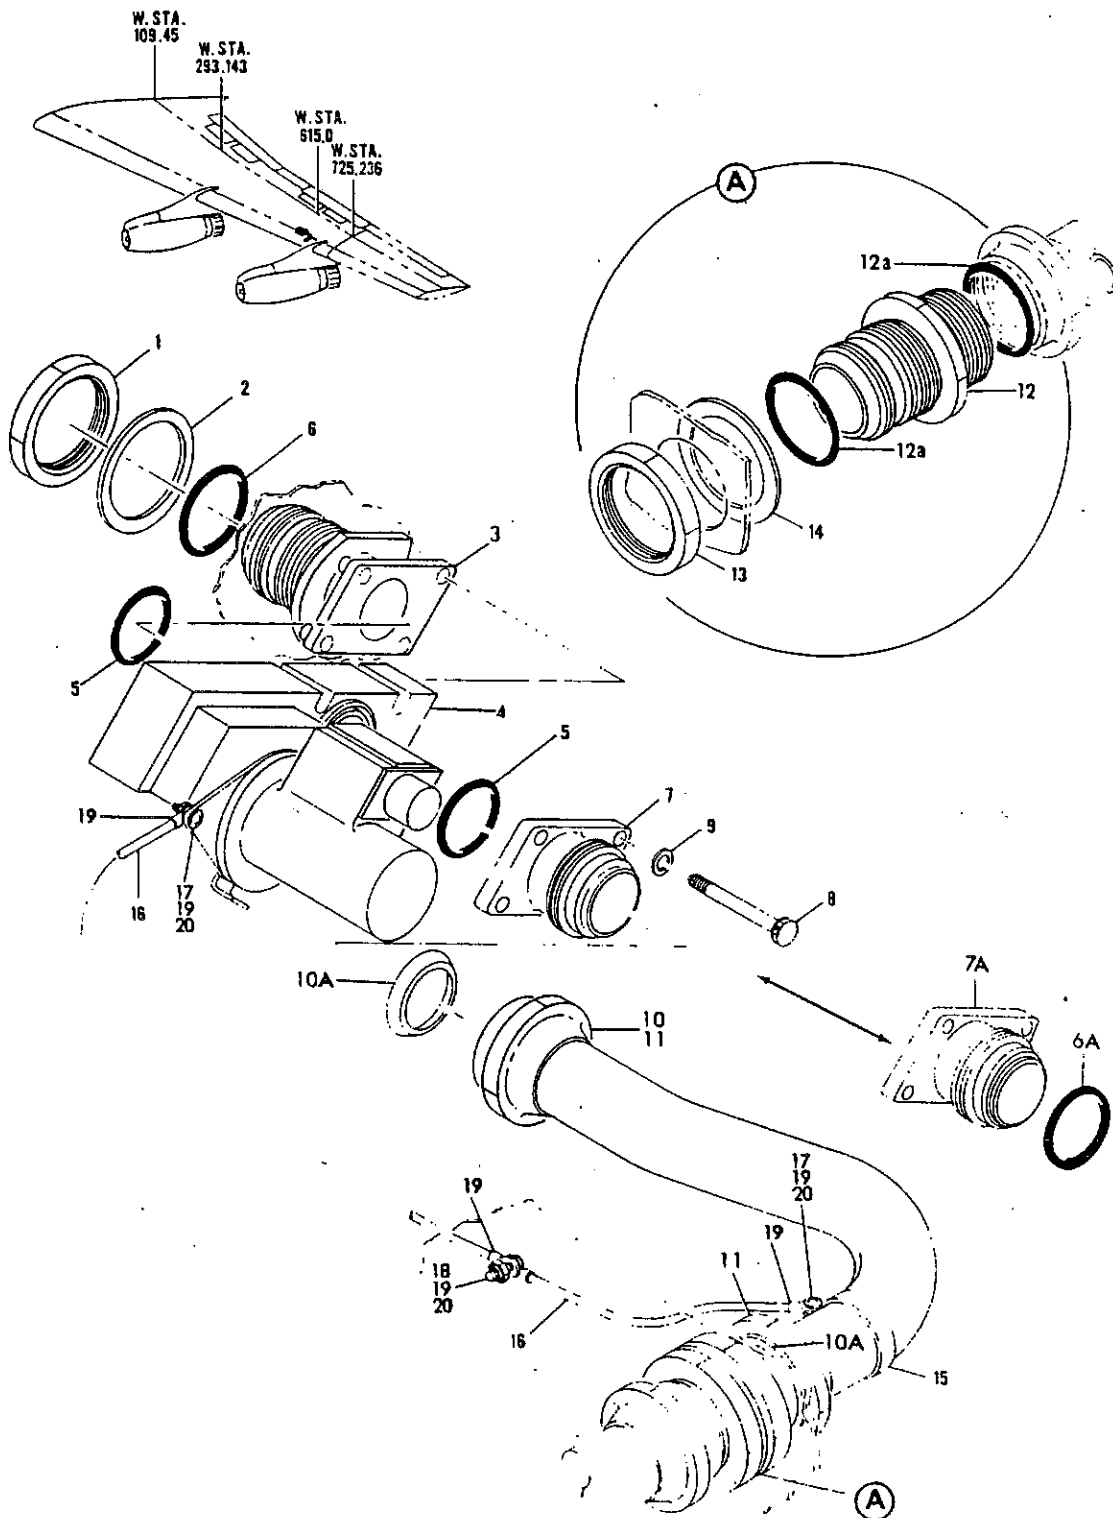


FIGURE 22. VALVE INSTL, SECTION 22 ENGINE FUEL FEED



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
22	65-7224-1		VALVE INSTL, SECTION 22 ENGINE FUEL FEED (LH) (SEE FIG. 20, ITEM 59)		RF
	65-7224-2		VALVE INSTL, SECTION 22 ENGINE FUEL FEED (RH) (SEE FIG. 20, ITEM 59)		RF
1	BACN10DR24D		. NUT		1
2	AN960PD3016		. WASHER.		1
3	65-2062		. FITTING ASSY, BULKHEAD 1.50 IN. OD TUBE		1
4	10-3068		. VALVE ASSY, ELECTRIC MOTOR DRIVEN FUEL SHUTOFF (SAME AS AV16B1519D (V73760))		1
4	AV16B1519D		. VALVE ASSY, ELECTRIC MOTOR DRIVEN FUEL SHUTOFF. (V73760) (SAME AS BAC SPEC NO. 10-3068) (SEE FIG. 35)		RF
5	MS29513-223		. PACKING		2
6	MS29513-228		. PACKING		1
7	MS20760-24		. CONNECTOR		1
8	AN4-22A		. BOLT.		4
9	AN960D416		. WASHER.		4
10	5-86584-3115		. TUBE ASSY, 1-1/2 IN. .035 5052-0. (LH ONLY)		1
10	5-86584-3116		. TUBE ASSY, 1-1/2 IN. .035 5052-0. (RH ONLY)		1
10A	VSF1015AT24		. SEAL, (V92215). (OPTIONAL VSF1015AT24B (V92215))		2
10A	VSF1015AT24B		. SEAL, (V92215). (OPTIONAL TO VSF1015AT24 (V92215))		2
11	NAS596-24		. NUT		2
12	AN832-24C		. UNION		1
13	AN924-24C		. NUT		1
14	AN960D3016		. WASHER.		1
15	AN735-24		. CLAMP		1
16	MS25083-2BB6		. JUMPER ASSY, (OPTIONAL BACJ40A20-6) ATTACHING PARTS		2
17	NAS603-8		. SCREW		2
18	NAS603-10		. SCREW		1
19	AN960D10L		. WASHER.		6
20	NAS679A3W		. NUT		3
-----*					
MISSING ITEM NUMBERS ARE NOT APPLICABLE					


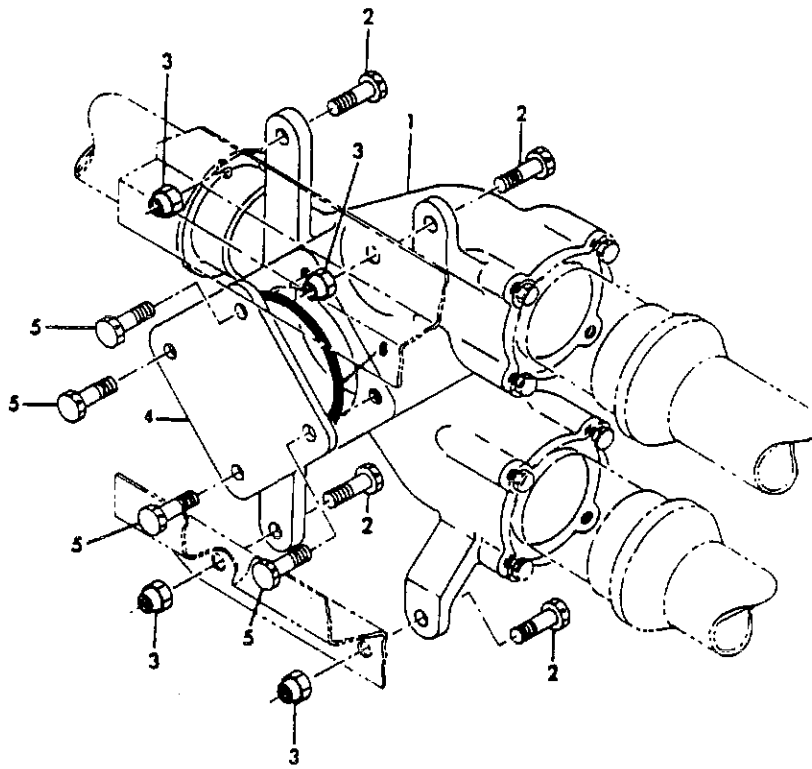


FIGURE 23. VALVE INSTL, SECTION 22 ENGINE FUEL FEED

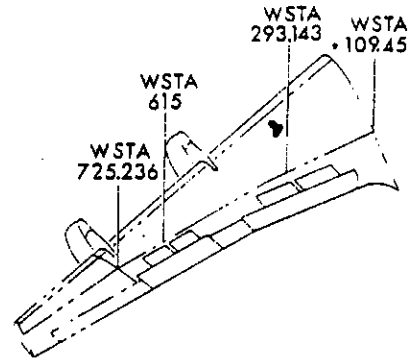

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
23	65-7281-1	VALVE INSTL, SECTION 22 ENGINE FUEL FEED (LH) (SEE FIG. 21, ITEM 84)								RF	
	65-7281-2	VALVE INSTL, SECTION 22 ENGINE FUEL FEED (RH) (SEE FIG. 21, ITEM 84)								RF	
	1	5-1255-1	. VALVE, DUAL CHECK (V92003).								1
	2	AN4H5A	. ATTACHING PARTS								4
	3	BACN10BY54W	. BOLT.								4
			. NUT								4
	4	6-84303	. PLATE, CHECK VALVE PORT CLOSURE								1
	5	AN4H5A	. ATTACHING PARTS								4
			. BOLT.								4
	6	MS29513-223	. PACKING								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

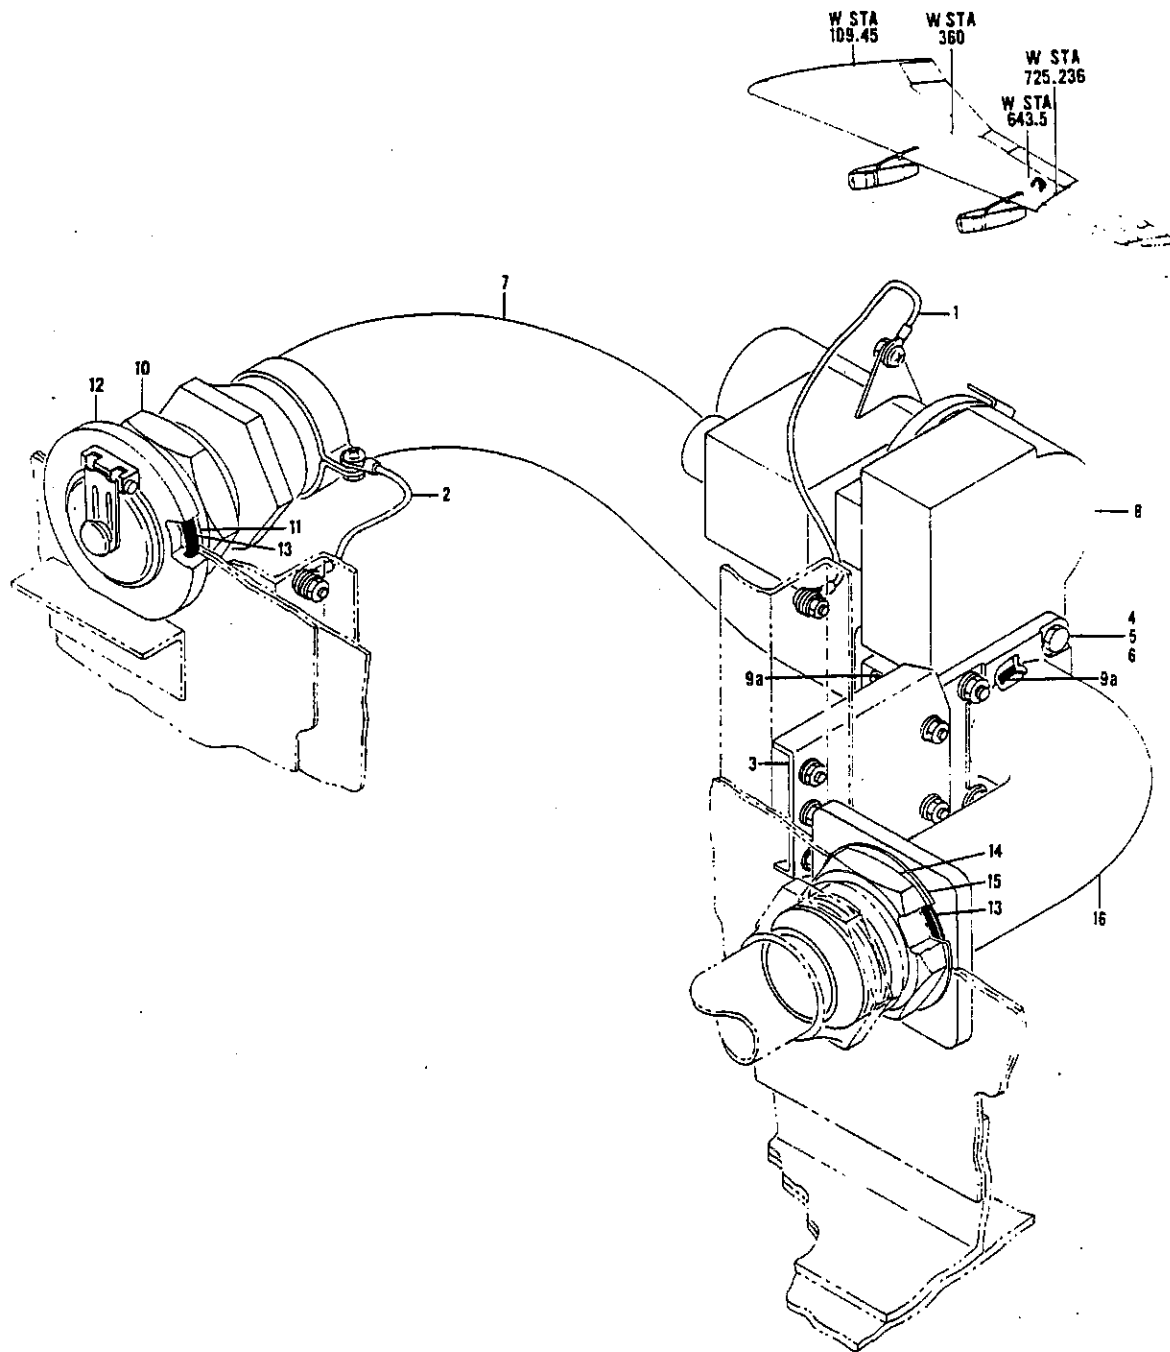



FIGURE 25. VALVE INSTL, SECTION 22 ENGINE FUEL FEED



PARTS CATALOG


FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
25	65-20713-1		VALVE INSTL, SECTION 22 ENGINE FUEL FEED (LH) (SEE FIG. 20, ITEM 60)		RF
	65-20713-2		VALVE INSTL, SECTION 22 ENGINE FUEL FEED (RH) (SEE FIG. 20, ITEM 60)		RF
1	MS25083-2BBB		. JUMPER ASSY		1
2	MS25083-2BB4		. JUMPER ASSY		1
	NAS603-8		ATTACHING PARTS		
	AN960D10L		. SCREW		4
	NAS679A3W		. WASHER.		4
			. NUT		4
			-----*		
3	66-12468-1		. BRACKET, RESERVE TANK DRAIN VALVE SUPPORT (LH ONLY) .		1
3	66-12468-2		. BRACKET, RESERVE TANK DRAIN VALVE SUPPORT (RH ONLY) .		1
	AN3-4A		ATTACHING PARTS		
	AN3-6A		. BOLT.		3
	AN960PD10		. BOLT.		2
	NAS679A3W		. WASHER.		5
			. NUT		5
			-----*		
4	AN4-22A		. BOLT.		4
5	AN960PD416L		. WASHER.		4
6	NAS679A4W		. NUT		4
7	69-14587-1		. TUBE ASSY, WING STATION 651.28 RESERVE TANK DRAIN . .		1
8	10-3068		. VALVE ASSY, 1 1/2 IN. TUBE SIZE ELECTRIC MOTOR DRIVEN FUEL SHUTOFF (SAME AS AV16B15191 (V73760))		1
8	AV16B1519D		. VALVE ASSY, ELECTRIC MOTOR DRIVEN FUEL SHUTOFF. . . . (V73760) (SAME AS BAC SPEC NO. 10-3068) (SEE FIG. 35)		RF
9A	MS29513-223		. PACKING		2
10	AN924-24D		. NUT		1
11	AN960PD3016		. WASHER.		1
12	10-3069-1		. VALVE ASSY, FUEL TANK BAFFLE SWING CHECK.		1
13	MS29513-228		. PACKING		2
14	BACN10DR24D		. NUT		1
15	AN960PD3016		. WASHER.		1
16	65-19372-1		. ADAPTER, 1-1/2 OD TUBE FUEL TANK.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

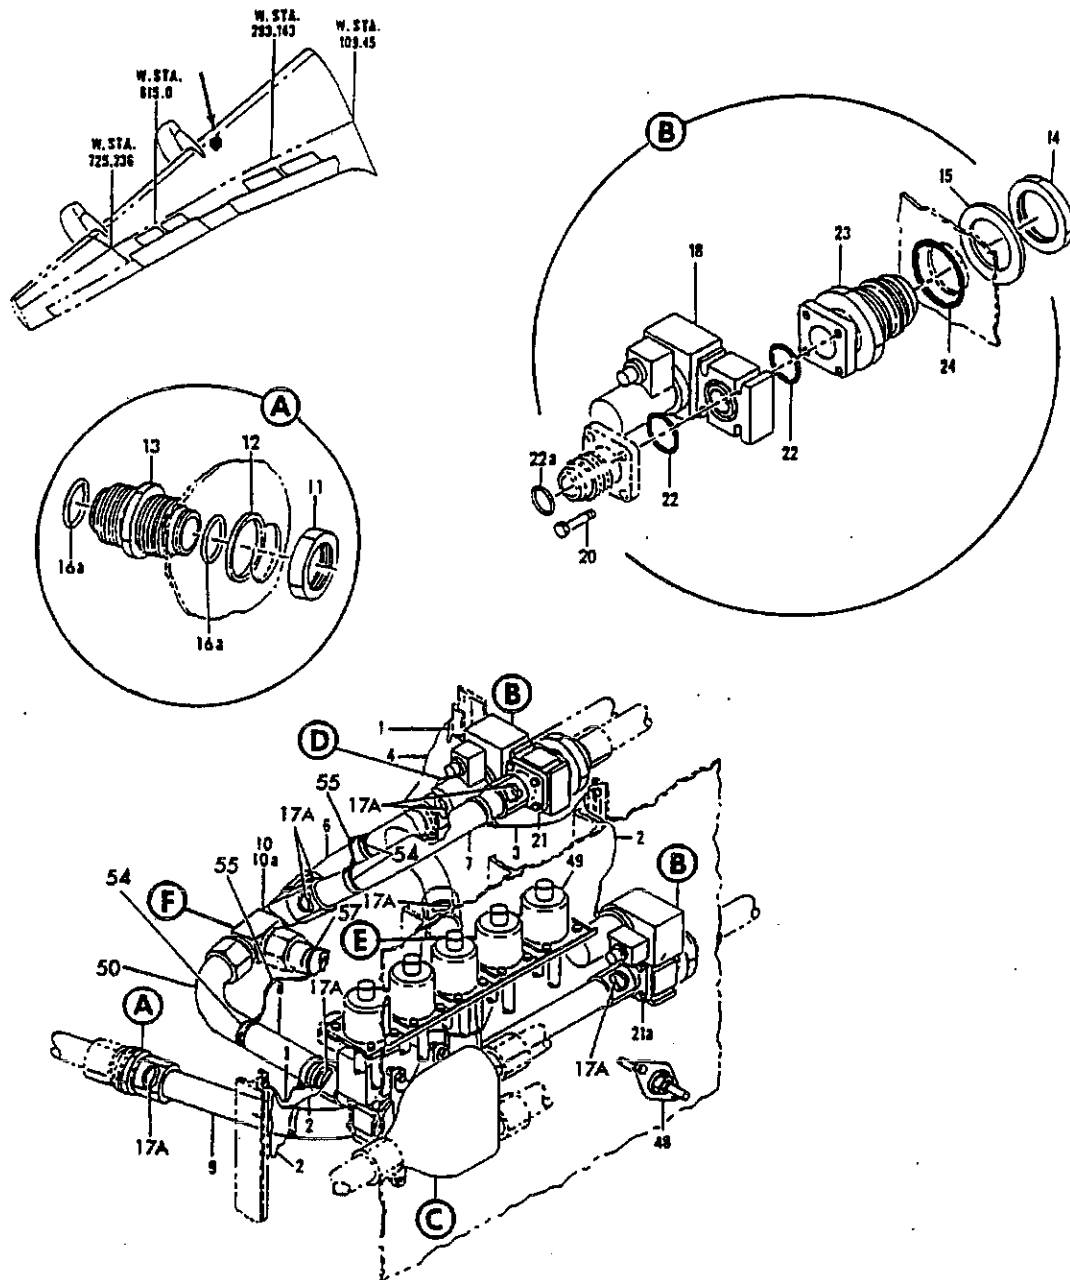

A 2601025 SHY 1 REV 265

FIGURE 26. TUBING INSTL. INBOARD DRY BAY FUEL FEED SYSTEM (SHEET 1)

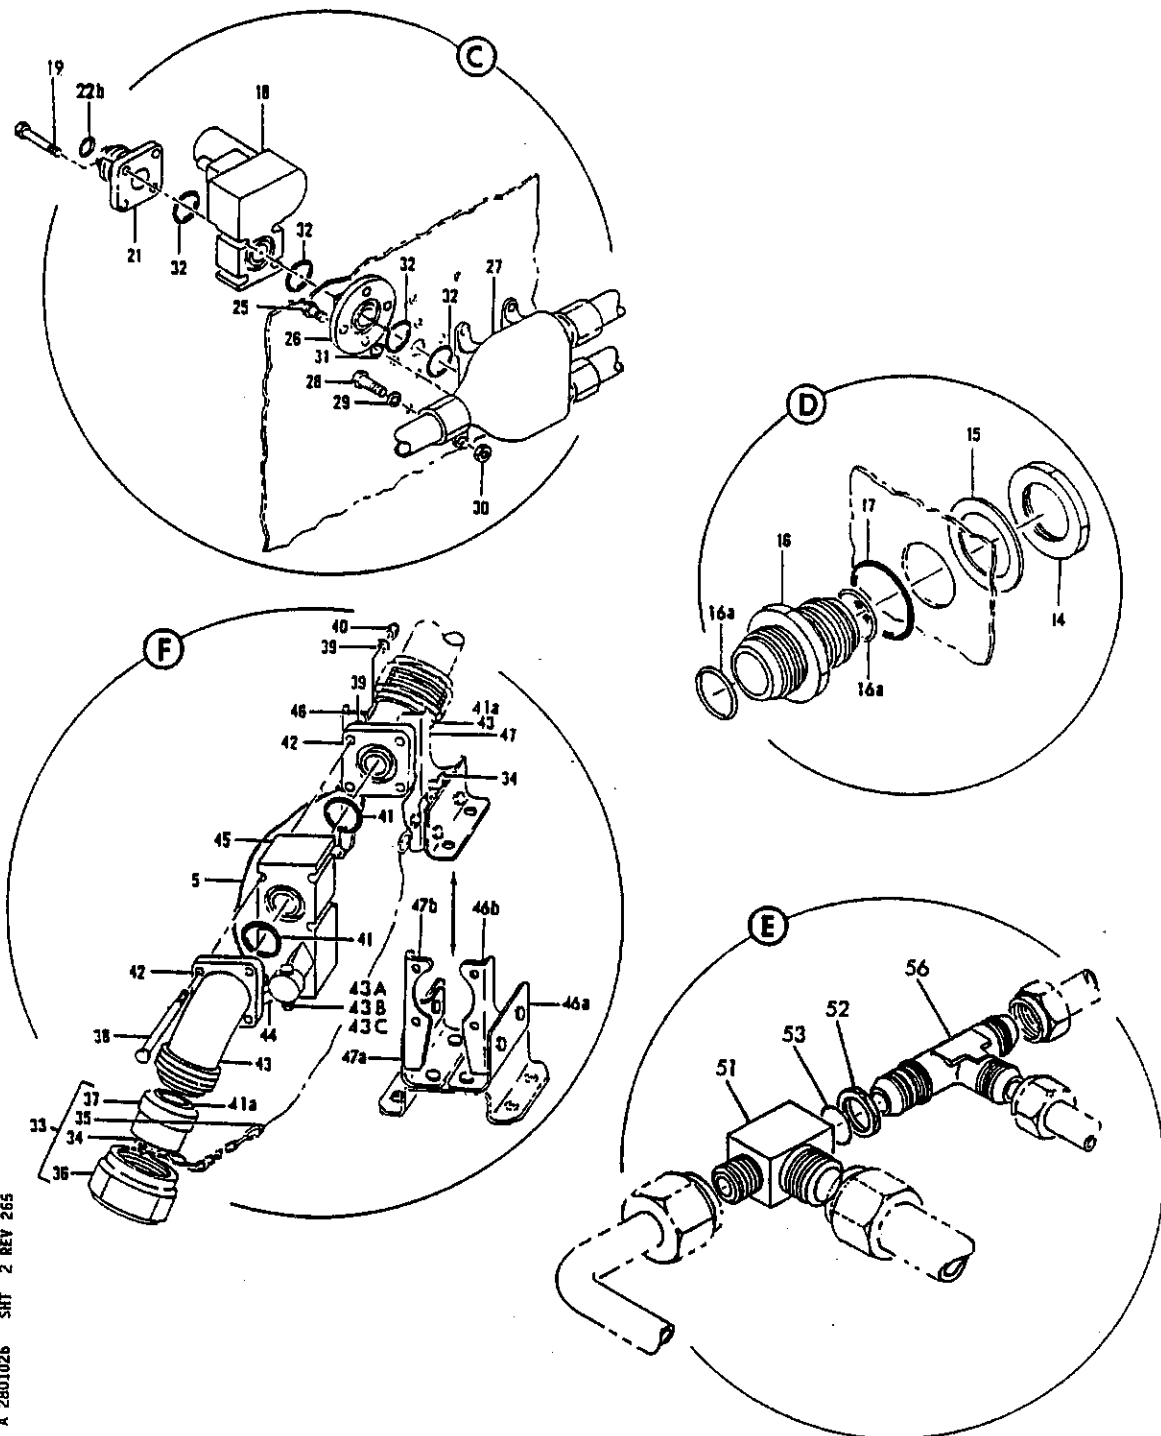

A 2801026 SHT 2 REV 265

FIGURE 26. TUBING INSTL, INBOARD DRY BAY FUEL FEED SYSTEM (SHEET 2)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
26	5-86597-3001		TUBING INSTL, INBOARD DRY BAY FUEL FEED SYSTEM (LH) . . (SEE FIG. 20, ITEM 57)		RF
	5-86597-3002		TUBING INSTL, INBOARD DRY BAY FUEL FEED SYSTEM (RH) . . (SEE FIG. 20, ITEM 57)		RF
1	MS25083-28B4		. JUMPER ASSY		2
2	MS25083-28B6		. JUMPER ASSY		3
3	MS25083-28B7		. JUMPER ASSY		1
4	MS25083-28B4		. JUMPER ASSY		1
5	MS25083-28B5		. JUMPER ASSY		1
	NAS603-8		ATTACHING PARTS		
	AN960D10L		. SCREW		12
	NAS679A3W		. WASHER		11
			. NUT		12
			-----*		
6	65-6979-1		. TUBE ASSY, FUEL MANIFOLD 1-1/2 .035 CRES (LH ONLY) . .		1
6	65-6979-2		. TUBE ASSY, FUEL MANIFOLD 1-1/2 .035 CRES (RH ONLY) . .		1
	NAS593-24		. NUT		3
7	5-86597-3005		. TUBE ASSY, FUEL FEED 1-1/2 .035 AISI321 (OPTIONAL . . AISI347)		1
8	5-86597-3003		. TUBE ASSY, FUEL FEED 1-1/2 .035 AISI321 (OPTIONAL . . AISI347)	5199	1
8	5-86597-3003		. TUBE ASSY, FUEL FEED 1-1/2 .035 AISI321 (OPTIONAL . . AISI347) (DELETED BY RAF 7211.019-225)	0150	1
9	5-86597-3007		. TUBE ASSY, 1-1/2 IN. .035 AISI321		1
	NAS593-24		. NUT, (USED ON 5-86597-3005, -3003 AND -3004)		2
	BACN10HX24		. NUT, (USED ON 5-86597-3007)		2
10	AN824-24D		. TEE	5199	1
10	AN824-24D		. TEE, (DELETED BY RAF 7211.019-225)	0150	1
11	AN924-24C		. NUT		1
12	AN960D3016		. WASHER		1
13	AN832-24C		. UNION		1
14	BACN10DR24D		. NUT		3
15	AN960PD3016		. WASHER		3
16	BACU24C124D		. UNION		1
17	MS29513-228		. PACKING		1
17A	VSF1015AT24		. SEAL, CONICAL (V92215)		9
			(OPTIONAL VSF1015AT24B (V92215))		
17A	VSF1015AT24B		. SEAL, CONICAL (V92215)		9
			(OPTIONAL TO VSF1015AT24 (V92215))		
18	10-3068		. VALVE ASSY, ELECTRIC MOTOR DRIVEN FUEL SHUTOFF. . . . (SAME AS AV16B1519D (V73760))		3
18	AV16B1519D		. VALVE ASSY, ELECTRIC MOTOR DRIVEN FUEL SHUTOFF. . . . (V73760) (SAME AS BAC SPEC NO. 10-3068) (SEE FIG. 35)		RF
19	AN4H20A		. BOLT		4
20	AN4-22A		. BOLT		8
21	AN760D24		. CONNECTOR		2
21A	MS20760-24		. CONNECTOR		1
22	MS29513-223		. PACKING		4
23	65-2062		. FITTING ASSY, 1.50 IN. OD TUBE BULKHEAD		2
24	MS29513-228		. PACKING		2
25	AN4H6A		. BOLT		4
26	9-66507		. ADAPTER ASSY, FUEL SYSTEM VALVE MOUNTING		1
27	5-1255-1		. VALVE ASSY, DUAL CHECK (V92003)		1
28	AN4-6A		. BOLT		4
29	BACS11W4		. SEAL		4
30	NAS679A4W		. NUT		4
31	MS29513-112		. PACKING		4
32	MS29513-223		. PACKING		4
33	90-9484		. CAP ASSY, MANUAL DE-FUELING VALVE		1
34	MS29523-1		. HOOK		2
35	BACC1986-100		. CHAIN ASSY.		1
36	AN818-24D		. NUT		1
37	60-7222		. CAP, MANUAL DE-FUELING VALVE.		1
38	AN4-23A		. BOLT		4
39	AN960D416		. WASHER		8
40	NAS679A4W		. NUT		4
41	MS29513-223		. PACKING		2
42	MS20756D24		. FLANGE		2
43	AN761D24		. ELBOW		2
43A	AN3-11A		. BOLT		1
43B	AN960D10L		. WASHER		1
43C	NAS679A3W		. NUT		1
44	69-44117-1		. HANDLE, SHUTOFF VALVE		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
777
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
26 45	10-3061-4		. VALVE ASSY, 1-1/2 IN. TUBE SIZE MANUALLY OPERATED . . FUEL SHUTOFF (SAME AS 138105 (V79318))		1
45	138105		. VALVE ASSY, MANUALLY OPERATED FUEL SHUTOFF (V79318) . (SAME AS BAC SPEC NO. 10-3061-4) (SEE FIG. 34)		RF
46A	69-44302-1		. ANGLE, DE-FUELING VALVE SUPPORT		1
	NAS1303-3		. ATTACHING PARTS		
	AN960D10		. BOLT.		2
	NAS679A3		. WASHER.		2
			. NUT		2
46B	69-44302-3		. BRACKET, DE-FUELING VALVE SUPPORT		1
	AN3-5A		. ATTACHING PARTS		
	AN960D10		. BOLT.		2
	NAS679A3		. WASHER.		2
			. NUT		2
47A	69-44302-2		. ANGLE, DE-FUELING VALVE SUPPORT		1
	NAS1303-3		. ATTACHING PARTS		
	AN960D10		. BOLT.		2
	NAS679A3		. WASHER.		2
			. NUT		2
47B	69-44302-4		. BRACKET, DE-FUELING VALVE SUPPORT		1
	AN3-5A		. ATTACHING PARTS		
	AN960D10		. BOLT.		2
	NAS679A3		. WASHER.		2
			. NUT		2
48	69-3206		. BULB INSTL, FUEL TEMPERATURE (LH ONLY) (SEE 28-5, . . FIG. 17)		1
49	50-10852-1		. SWITCH INSTL, FUEL FEED PRESSURE SENSING (LH ONLY). . (SEE FIG. 27)		1
49	50-10852-2		. SWITCH INSTL, FUEL FEED PRESSURE SENSING (RH ONLY). . (SEE FIG. 27)		1
R	391-89-60-71202-003		. WING FUEL SYSTEM INSTL, LH (INBD. DRY BAY FUEL. . . . FEED SYST. ONLY) (VS2500) (ADDED BY RAF 7211.019-225)	0150	1
R	391-89-60-71202-004		. WING FUEL SYSTEM INSTL, RH (INBD. DRY BAY FUEL. . . . FEED SYST. ONLY) (VS2500) (ADDED BY RAF 7211.019-225)	0150	1
R	50	391-89-60-71326-115	. . TUBE ASSY, 1-1/2 .035 5052-0 (LH ONLY).	0150	1
R	50	391-89-60-71326-116	. . TUBE ASSY, 1-1/2 .035 5052-0 (RH ONLY).	0150	1
R	51	361-89-28-75246-101	. . TEE, (VS2500)	0150	1
R	52	AN924-24D	. . NUT	0150	1
R	53	MS29512-24	. . PACKING	0150	1
R	54	AN735-24	. . CLAMP	0150	3
R	55	MS25083-28B8	. . JUMPER.	0150	2
R		NAS1197-10L	. . ATTACHING PARTS		
R		NAS1801-3-9	. . WASHER.	0150	2
R		NAS679A3W	. . SCREW	0150	2
			. . NUT	0150	2
R	56	ANB04-24D	. . TEE	0150	1
R	57	391-89-60-71326-225	. . TUBE ASSY, REPLENISH LINE (VS2500) (ADDED BY. . . . RAF 7211.019-225) (SEE 89-3, FIG. 5, ITEM 3)	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

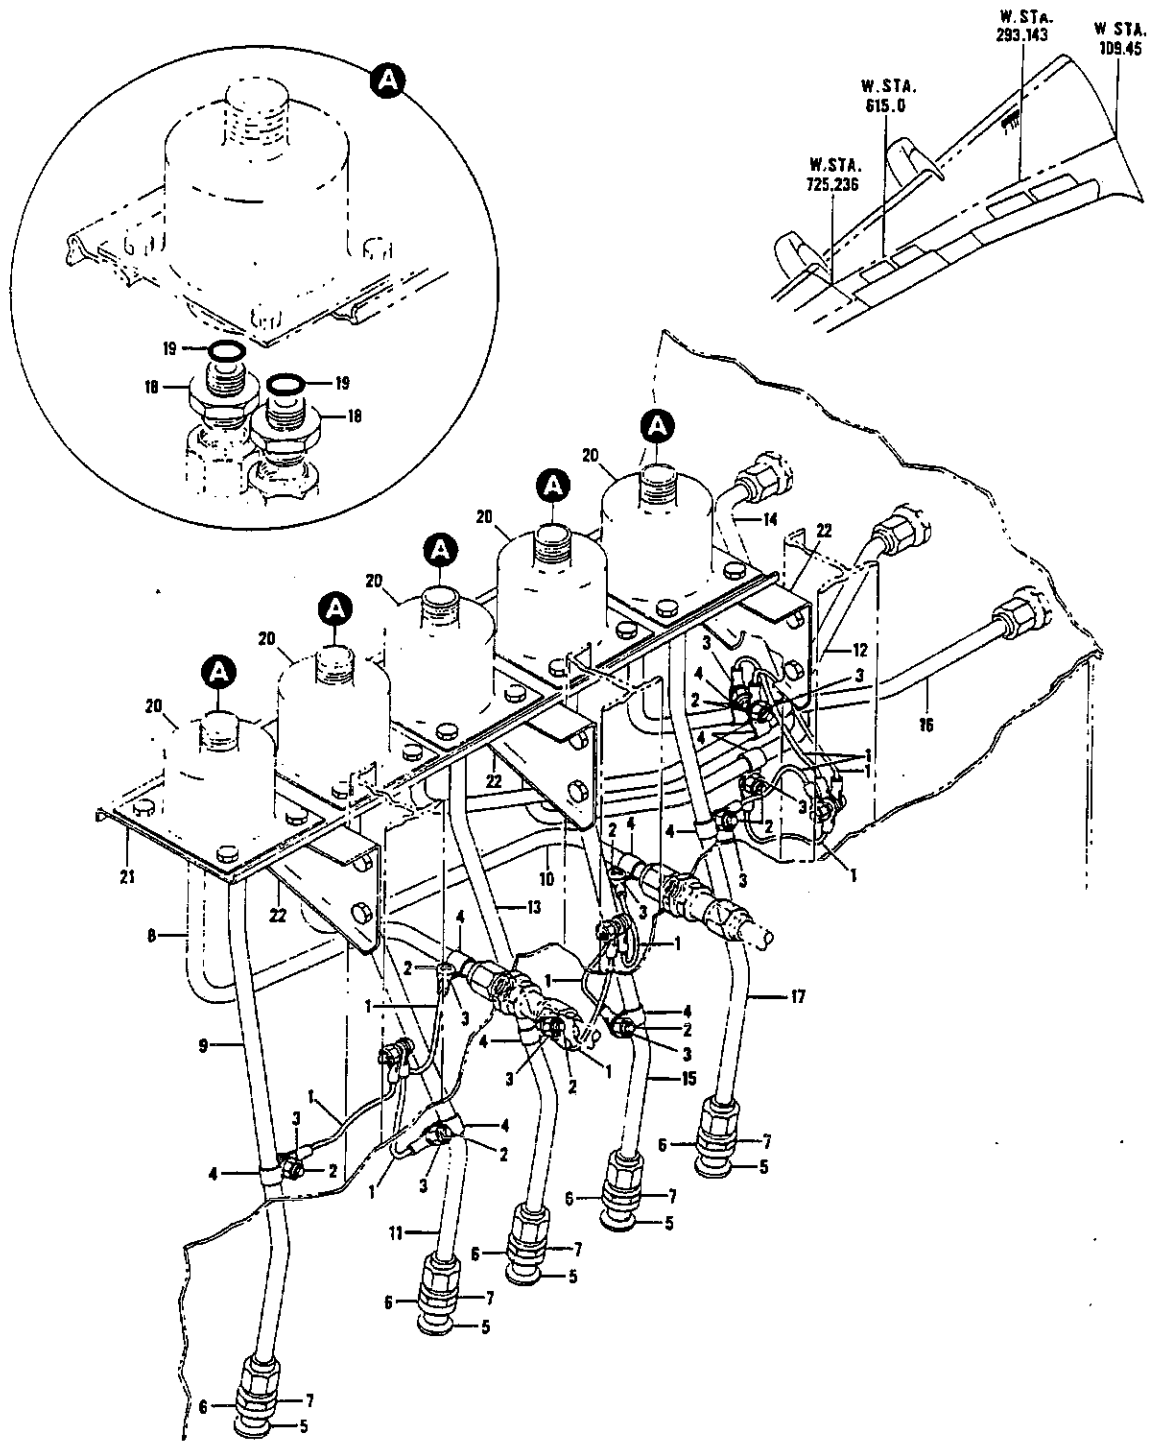


FIGURE 27. SWITCH INSTL, FUEL FEED PRESSURE SENSING

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
27	50-10852-1		SWITCH INSTL, FUEL FEED PRESSURE SENSING (LH) (SEE FIG. 26, ITEM 49)		RF
	50-10852-2		SWITCH INSTL, FUEL FEED PRESSURE SENSING (RH) (SEE FIG. 26, ITEM 49)		RF
1	MS25083-2BB4		. JUMPER ASSY (OPTIONAL CE4E (V79550))		10
1	CE4E		. JUMPER ASSY, ... (OPTIONAL TO MS25083-2BB4)		10
			ATTACHING PARTS		
	NAS603-10		. SCREW		3
	BACN10BY53		. NUT		3
2	NAS603-8		. SCREW		10
3	BACN10BY53		. NUT		10
4	AN735D6		. CLAMP		10
5	6-84304-3001		. FITTING, FLUSH DRAIN FLARED TUBE.		5
6	69-44132-1		. WASHER, FLAT.		5
7	AN924-6D		. NUT		5
8	50-10852-41		. TUBE ASSY, FUEL PRESSURE 3/8 .028 6061-T6 (LH ONLY)		1
8	50-10852-42		. TUBE ASSY, FUEL PRESSURE 3/8 .028 6061-T6 (RH ONLY)		1
9	50-10852-61		. TUBE ASSY, FUEL PRESSURE 3/8 IN. .028 6061-T6 (LH ONLY)		1
9	50-10852-62		. TUBE ASSY, FUEL PRESSURE 3/8 IN. .028 6061-T6 (RH ONLY)		1
10	50-10852-39		. TUBE ASSY, FUEL PRESSURE 3/8 .028 6061-T6 (LH ONLY)		1
10	50-10852-40		. TUBE ASSY, FUEL PRESSURE 3/8 .028 6061-T6 (RH ONLY)		1
11	50-10852-59		. TUBE ASSY, FUEL PRESSURE 3/8 IN. .028 6061-T6 (LH ONLY)		1
11	50-10852-60		. TUBE ASSY, FUEL PRESSURE 3/8 IN. .028 6061-T6 (RH ONLY)		1
12	50-10852-35		. TUBE ASSY, FUEL PRESSURE 3/8 .028 6061-T6 (LH ONLY)		1
12	50-10852-36		. TUBE ASSY, FUEL PRESSURE 3/8 .028 6061-T6 (RH ONLY)		1
13	50-10852-57		. TUBE ASSY, FUEL PRESSURE 3/8 IN. .028 6061-T6 (LH ONLY)		1
13	50-10852-58		. TUBE ASSY, FUEL PRESSURE 3/8 IN. .028 6061-T6 (RH ONLY)		1
14	50-10852-33		. TUBE ASSY, FUEL PRESSURE 3/8 .028 6061-T6 (LH ONLY)		1
14	50-10852-34		. TUBE ASSY, FUEL PRESSURE 3/8 .028 6061-T6 (RH ONLY)		1
15	50-10852-55		. TUBE ASSY, FUEL PRESSURE 3/8 IN. .028 6061-T6 (LH ONLY)		1
15	50-10852-56		. TUBE ASSY, FUEL PRESSURE 3/8 IN. .028 6061-T6 (RH ONLY)		1
16	50-10852-37		. TUBE ASSY, FUEL PRESSURE 3/8 .028 6061-T6 (LH ONLY)		1
16	50-10852-38		. TUBE ASSY, FUEL PRESSURE 3/8 .028 6061-T6 (RH ONLY)		1
17	50-10852-53		. TUBE ASSY, FUEL PRESSURE 3/8 IN. .028 6061-T6 (LH ONLY)		1
17	50-10852-54		. TUBE ASSY, FUEL PRESSURE 3/8 IN. .028 6061-T6 (RH ONLY)		1
	MS21922-6		. SLEEVE.		2
	MS21921D6		. NUT		2
18	MS21916D6-4		. REDUCER		10
19	MS29512-04		. GASKET.		10
20	10-3067-3		. SWITCH ASSY, FUEL SYSTEM PRESSURE ACTUATED (OPTIONAL BAC SPEC NO. 10-3067)		5
20	10-3067		. SWITCH ASSY, FUEL SYSTEM PRESSURE ACTUATED. (OPTIONAL TO BAC SPEC NO. 10-3067-3)		5
			ATTACHING PARTS		
	AN3-3A		. BOLT.		20
	BACN10BY53		. NUT		20
21	90-9150		. SUPPORT, PRESSURE SWITCH.		1
22	60-6996-1		. SUPPORT, PRESSURE SWITCH (LH ONLY).		3
22	60-6996-2		. SUPPORT, PRESSURE SWITCH (RH ONLY).		3
			ATTACHING PARTS		
	AN3-3A		. BOLT.		6
	BACN10BY53		. NUT		6

MISSING ITEM NUMBERS ARE NOT APPLICABLE


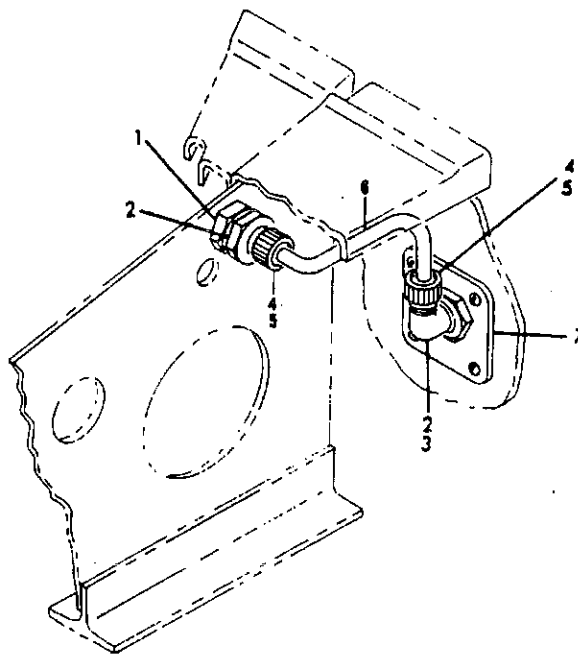


FIGURE 32. CONDUIT INSTL, FRONT SPAR STATION 666.14 WING LEADING EDGE ELECTRICAL

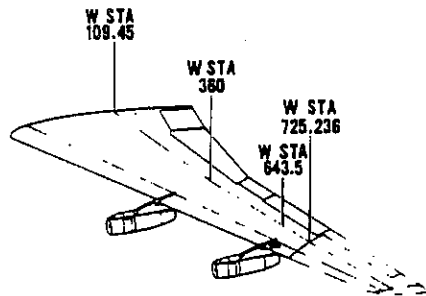

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
32	65-23323-1	CONDUIT INSTL, FRONT SPAR STATION 666.14 WING LEADING .								RF	
		EDGE ELECTRICAL (LH) (SEE 24-2, FIG. 12, ITEM 19)									
	65-23323-2	CONDUIT INSTL, FRONT SPAR STATION 666.14 WING LEADING .								RF	
		EDGE ELECTRICAL (RH) (SEE 24-2, FIG. 12, ITEM 19)									
	1	AN3064-6	. CONNECTOR							1	
	2	AN3066-6	. NUT							3	
	3	AN3062-6	. ELBOW							1	
	4	AN3053-6	. FERRULE							2	
	5	AN3054-6	. NUT							2	
	6	65-23323-3	. CONDUIT, FRONT SPAR STATION 666.14 WING LEADING EDGE							1	
			ELECTRICAL (LH ONLY)								
	6	65-23323-4	. CONDUIT, FRONT SPAR STATION 666.14 WING LEADING EDGE							1	
			ELECTRICAL (RH ONLY)								
	7	63-12058	. PLATE, CONDUIT ATTACHMENT							1	
			ATTACHING PARTS								
	NAS602-8	. SCREW							5199	4	
	NAS602-8	. SCREW, (DELETED BY SB 3361)							0150	4	
	NAS602-10	. SCREW, (ADDED BY SB 3361)							0150	4	
	NAS679A08W	. NUT								4	
		-----*-----									
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

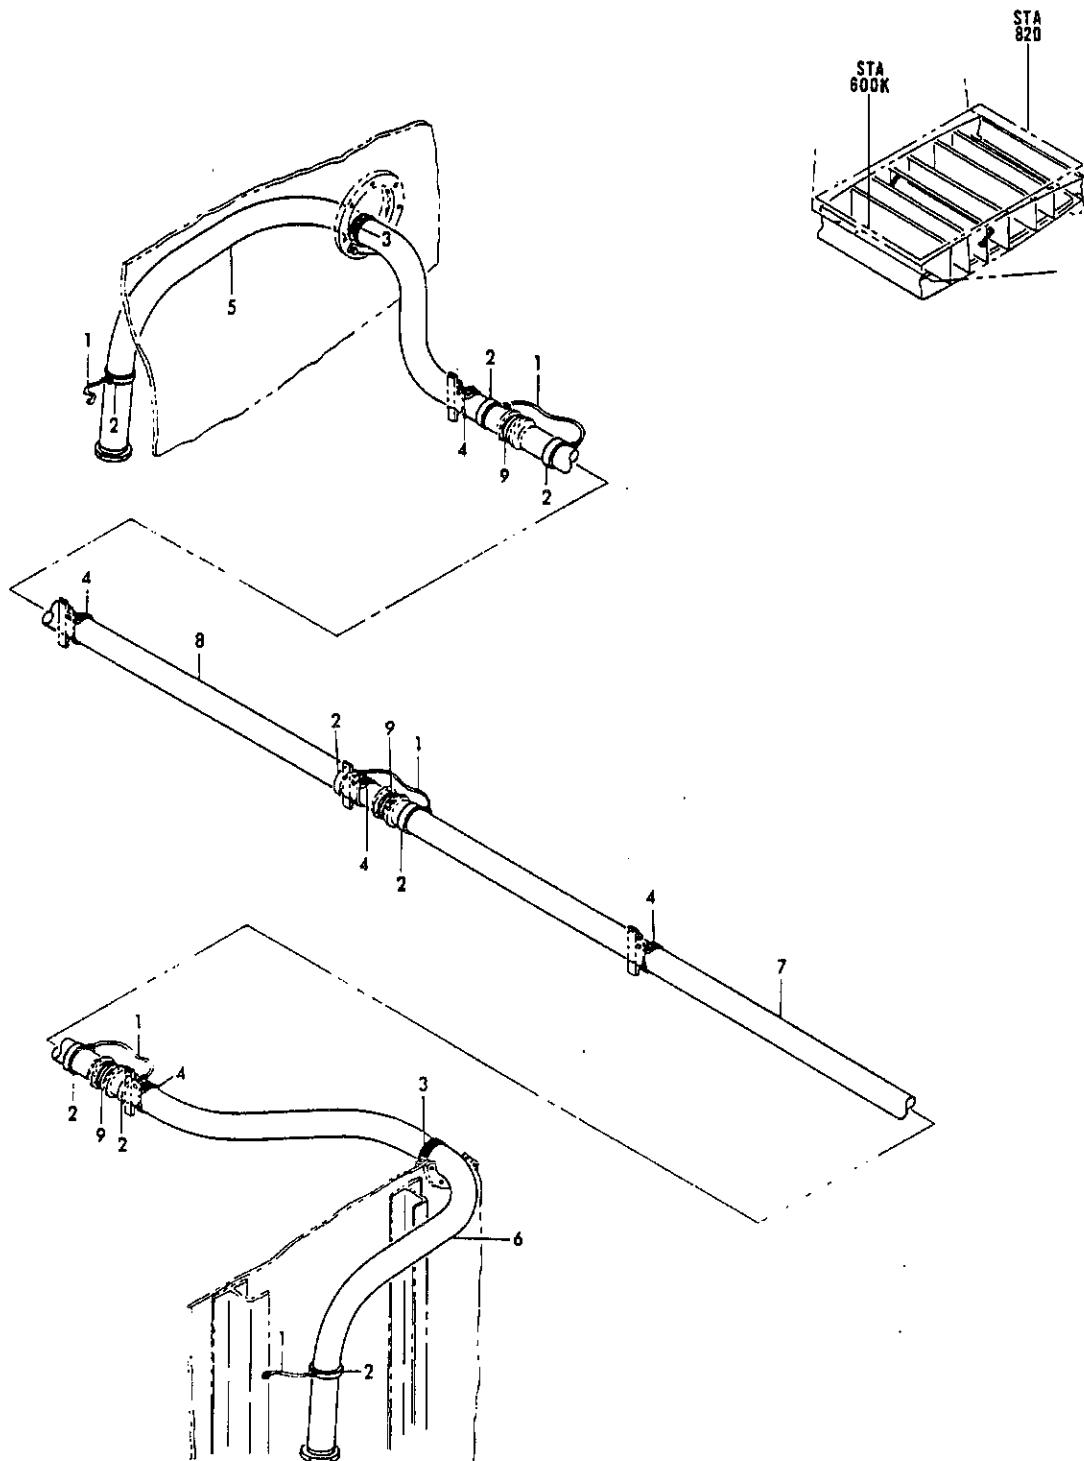


FIGURE 33. TUBING INSTL, SECTION 21 FUEL CROSSFEED



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
33	65-6126		TUBING INSTL, SECTION 21 FUEL CROSSFEED (SEE 28-4, FIG. 1, ITEM 19)		RF
1	MS25083-18B5		. JUMPER ASSY		5
	NAS603-8		. ATTACHING PARTS		10
	AN960D10L		. SCREW		10
	BACN10BY53W		. WASHER.		10
			. NUT		10
2	AN735D24		. CLAMP		8
3	BACC10CVDZ4		. CLAMP		2
	NAS603-8		. ATTACHING PARTS		2
	BACN10BY53W		. SCREW		2
			. NUT		2
4	6-84170-3001		. CLAMP, TUBE SUPPORT CUSHIONED		5
	AN4H4A		. ATTACHING PARTS		5
			. BOLT.		5
5	65-6126-1		. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0		1
6	65-6126-2		. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0		1
7	65-6126-5		. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0		1
	NAS591-24H		. COUPLING.		1
	NAS593-24H		. NUT		1
8	65-6126-4		. TUBE ASSY, ENGINE FUEL FEED 1-1/2 .035 5052-0		1
	NAS593-24H		. NUT		2
9	NAS592-24H		. RING.		3
MISSING ITEM NUMBERS ARE NOT APPLICABLE					


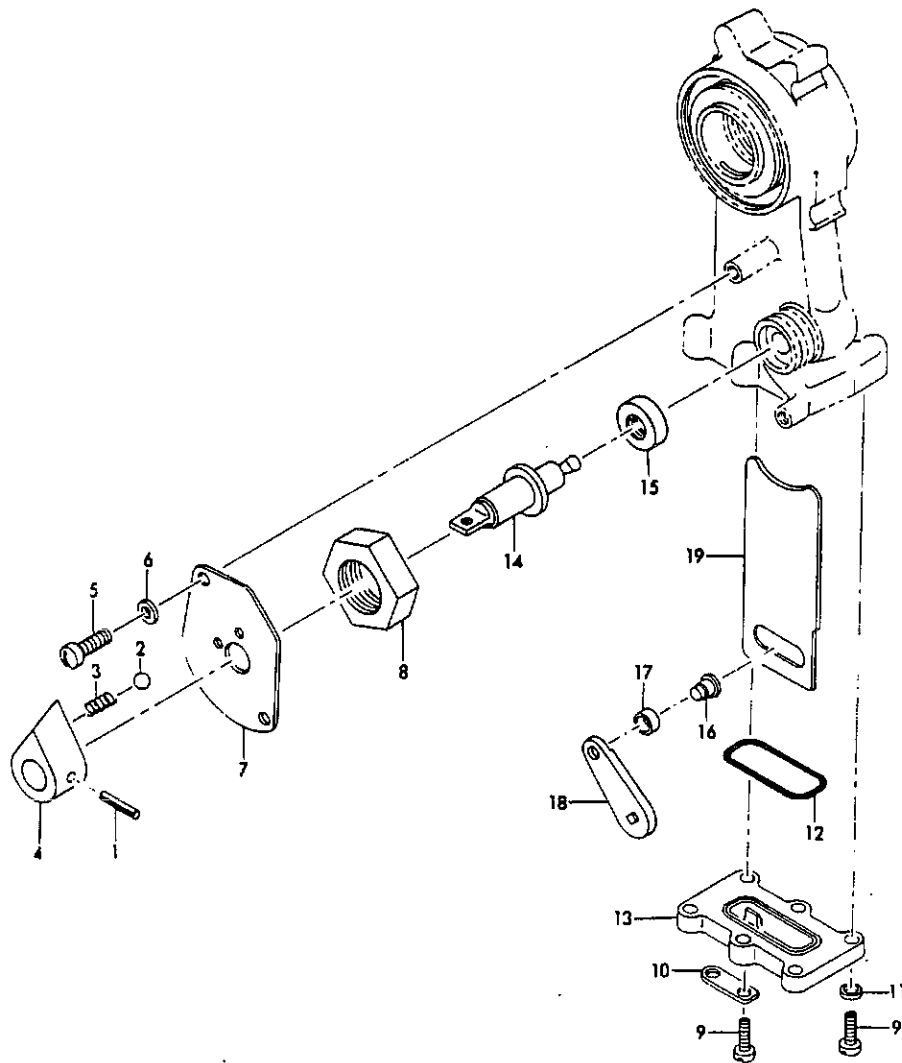


FIGURE 34. VALVE ASSY, MANUALLY OPERATED FUEL SHUTOFF



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
34		138105	VALVE ASSY, MANUALLY OPERATED FUEL SHUTOFF (V79318) . . . (SAME AS BAC SPEC NO. 10-3061-4) (SEE FIG. 16, ITEM 47, FIG. 17, ITEM 41 AND FIG. 26, ITEM 45)								RF
M	1	MS171528	. PIN								1
M	2	MS134354	. BALL								1
M	3	109211	. SPRING, (V79318)								1
M	4	130608	. INDICATOR, (V79318)								1
M	5	AN500AD8-5	. SCREW								2
M	6	100168-167	. WASHER, PLAIN (V79318) CRES 0.167 ID X 0.262 OD X . . 0.032 IN. THICK))								2
M	7	130607	. PLATE, COVER (V79318)								1
M	8	112688	. CAP, BEARING (V79318)								1
M	9	AN501AD10-8	. SCREW								6
M	10	116047	. LUG, BONDING (V79318)								1
M	11	WA790-53	. WASHER, PLAIN (V79318) 0.203 ID X 0.312 OD X 0.020 . . IN. THICK))								5
M	12	MS29513-024	. PACKING								1
M	13	111698	. PLATE, END (V79318)								1
M	14	130609	. SHAFT, (V79318)								1
M	15	105819	. SEAL ASSY, CARTRIDGE (V79318) (PROCURE AS ASSY ONLY)								1
		131980-1	. CRANK ASSY, (V79318)								RF
M	16	WE490-2D16	. . RIVET, (V79318)								1
M	17	SS77R2XR1E	. . BEARING, BALL (V43334) (WHITTAKER PART NO. 100104-20)								1
M	18	131979	. . CRANK, (V79318)								1
M	19	111701	. SLIDE, (V79318)								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

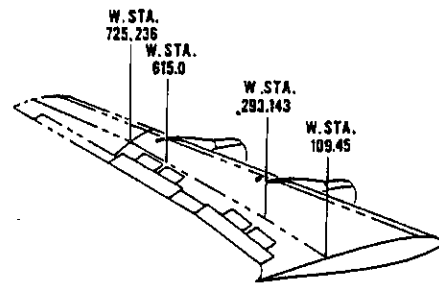

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE										EFF FROM TO	UNITS PER ASSY							
			1	2	3	4	5	6	7												
35	1	AV16B1519D	VALVE ASSY, ELECTRIC MOTOR DRIVEN FUEL SHUTOFF (V73760) (SAME AS BAC SPEC NO. 10-3068) (SEE FIG. 22, ITEM 4)											RF							
	M 1A	15561D	. PIN, (V73760) (USED ON AV16B1519D, AV16B1330D, ... AV16B1647D AND M9761-1)											2							
	M 1A	15561A	. PIN, (V73760) (USED ON AV16B1520C, AV16B1331C AND . . AV16B1648C)										0103	2							
	2	AV16B1519D	VALVE ASSY, ELECTRIC MOTOR DRIVEN FUEL SHUTOFF (V73760) (SAME AS BAC SPEC NO. 10-3068) (SEE FIG. 24, ITEM 14 AND FIG. 25, ITEM 8)											RF							
	M 2A	MS29513-124	. PACKING, (USED ON AV16B1519D, AV16B1330D, AV16B1647D AND M9761-1)											1							
	M 2A	MS29513-130	. PACKING, (USED ON AV16B1520C, AV16B1331C AND. . . . AV16B1648C)										0103	1							
	3	AV16B1519D	VALVE ASSY, ELECTRIC MOTOR DRIVEN FUEL SHUTOFF (V73760) (SAME AS BAC SPEC NO. 10-3068) (SEE FIG. 26, ITEM 18)											RF							
	M 3A	15824AA	. CAP, END (V73760) (USED ON AV16B1519D, AV16B1330D, . . AV16B1647D AND M9761-1)											1							
	M 3A	15979AA	. CAP, END (V73760) (USED ON AV16B1520C, AV16B1331C AND AV16B1648C)										0103	1							
	4	AV16B1519D	VALVE ASSY, ELECTRIC MOTOR DRIVEN FUEL SHUTOFF (V73760) (SAME AS BAC SPEC NO. 10-3068) (DELETED BY SB 2652) (SEE 28-6, FIG. 2, ITEM 59)										0103	RF							
	4	AV16B1520C	VALVE ASSY, ELECTRIC MOTOR DRIVEN FUEL SHUTOFF (V73760) (SAME AS BAC SPEC NO. 10-3068-1) (DELETED BY SB 2652) (SEE 28-6, FIG. 2, ITEM 59)										0103	RF							
	M 4A	15549H	. CLIP, (V73760) (USED ON AV16B1519D, AV16B1647D. . . . AND M9761-1)											1							
	M 4A	15549K	. CLIP, (V73760) (USED ON AV16B1520C AND AV16B1648C). .										0103	1							
	M 4B	15561D	. PIN, (V73760) (USED ON AV16B1519D, AV16B1647D, ... AND M9761-1)											2							
	M 4B	15561A	. PIN, (V73760) (USED ON AV16B1520C AND AV16B1648C) . .										0103	2							
	M 4C	MS29513-124	. PACKING, (USED ON AV16B1519D, AV16B1647D. AND M9761-1)											1							
	M 4C	MS29513-130	. PACKING, (USED ON AV16B1520C AND AV16B1648C).										0103	1							
	M 4D	15824AA	. CAP, END (V73760) (USED ON AV16B1519D, AV16B1647D . . AND M9761-1)											1							
	M 4D	15979AA	. CAP, END (V73760) (USED ON AV16B1520C AND AV16B1648C)										0103	1							
	M 5	102842HE	. ACTUATOR ASSY, (V73760) (USED ON AV16B1519D, ... AV16B1520C, AV16B1647D, AV16B1648C AND M976-1)											1							
	M 5	102842DJ	. ACTUATOR ASSY, (V73760) (USED ON M9761-1)											1							
	M 6	4996D	. SCREW, (V73760)											4							
	M 7	MS29513-011	. PACKING, (NOT USED ON M9761-1).											1							
	M 8	102806B	. NEEDLE BEARING ASSY, (V73760) (USED ON AV16B1519D, . . AV16B1647D AND M9761-1)											1							
	M 8	103026B	. NEEDLE BEARING ASSY, (V73760) (USED ON AV16B1520C . . AND AV16B1648C)										0103	1							
	M 9	9806J	. SLIDE, (V73760) (USED ON AV16B1519D, AV16B1647D . . . AND M9761-1)											1							
	M 9	15977B	. SLIDE, (V73760) (USED ON AV16B1520C AND AV16B1648C) .										0103	1							
MISSING ITEM NUMBERS ARE NOT APPLICABLE																					

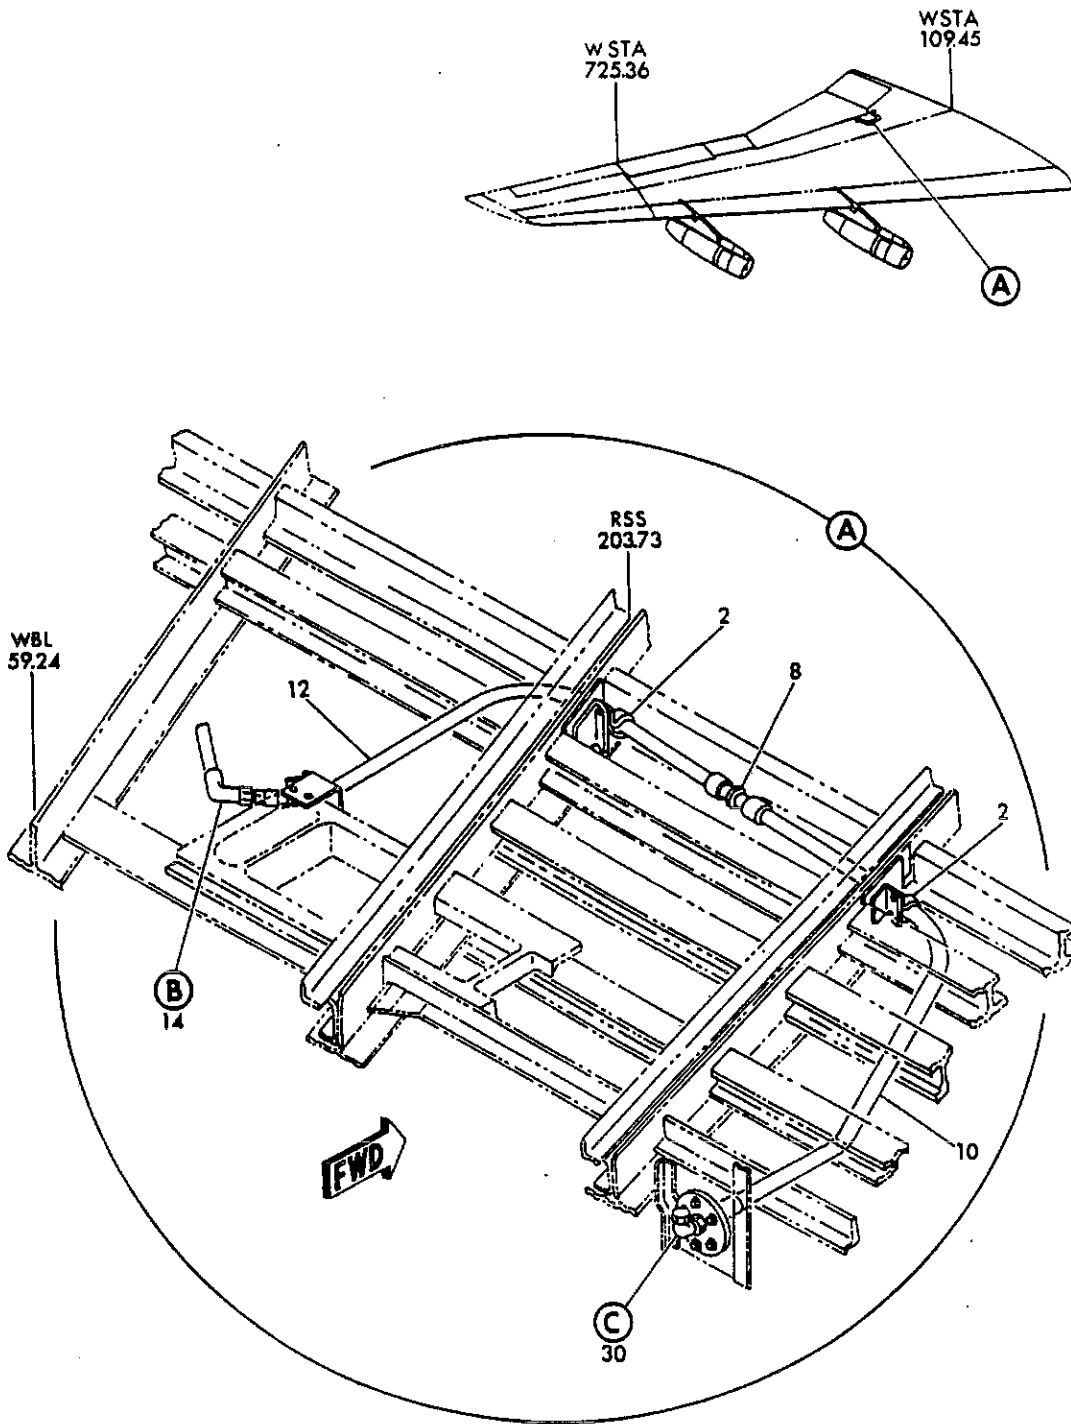


FIGURE 40. PLUMBING INSTL, APU FUEL LINE RH WING (SHEET 1)

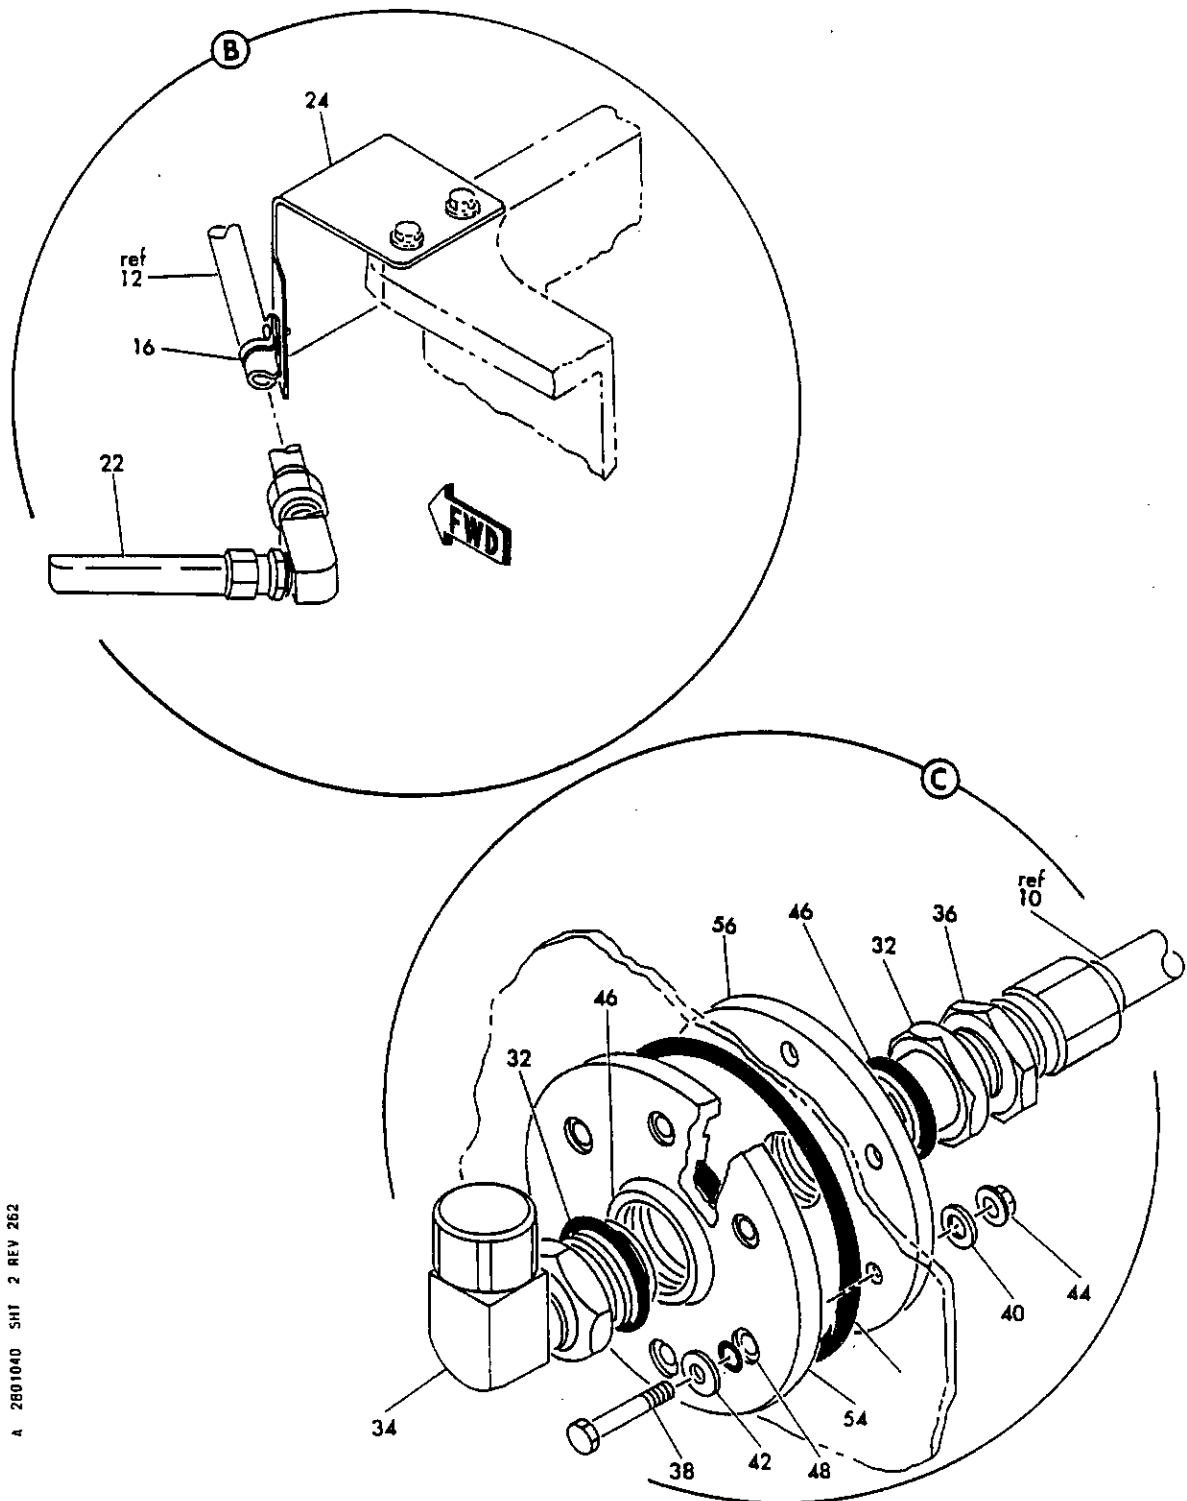


FIGURE 40. PLUMBING INSTL, APU FUEL LINE RH WING (SHEET 2)

A 2801040 SHT 2 REV 252

NOV 21/91

28-01-40


DETAILED PARTS LIST
28-01-40
PAGE

BOEING *707* Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	40	QB43662	TUBING INSTL, ...							0150	1
R			A.P.U. FUEL LINE, R.H. WING (VZ0268) (ADDED BY								
R			RAF MOD 7211.019-207)								
R	2	AN74208	. CLAMP							0150	2
R			ATTACHING PARTS								
R		NAS603-7	. SCREW							0150	2
R		NAS679A3W	. NUT							0150	2
R			-----*								
R	8	MS21902J8	. UNION, FLARELESS.							0150	1
R	10	QD43708	. TUBE ASSY, (VZ0268)							0150	1
R	12	QD43709	. TUBE ASSY, (VZ0268)							0150	1
R	14	QB43707-1	. VALVE INSTL, (VZ0268)							0150	1
R	16	AN74208	. CLAMP							0150	1
R			ATTACHING PARTS								
R		NAS603-7	. SCREW							0150	1
R		NAS679A3W	. NUT							0150	1
R			-----*								
R	22	70310-3	. FITTING ASSY, (V23090).							0150	1
R	24	QB43707-3	. BRACKET, (VZ0268)							0150	1
R			ATTACHING PARTS								
R		NAS1303-5	. BOLT.							0150	2
R		NAS679A3W	. NUT							0150	2
R			-----*								
R	30	QB43707-2	. VALVE INSTL, (VZ0268)							0150	1
R	32	AN924-8J	. LOCKNUT							0150	2
R	34	MS21926J8	. ELBOW							0150	1
R	36	MS21924J8	. UNION							0150	1
R	38	BAC830LM3U12	. BOLT.							0150	6
R	40	AN960KD10L	. WASHER.							0150	6
R	42	AN960C10	. WASHER.							0150	6
R	44	MS21042-3	. NUT							0150	6
R	46	MS29512-08	. PACKING							0150	2
R	48	MS29513-008	. PACKING							0150	6
R	50	MS29513-213	. PACKING							0150	1
R	52	MS29513-337	. PACKING							0150	1
R	54	70256-2	. BOSS, (V23090).							0150	1
R	56	QB43707-4	. BOSS, (V23090).							0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 02
FUEL BOOSTER PUMPS

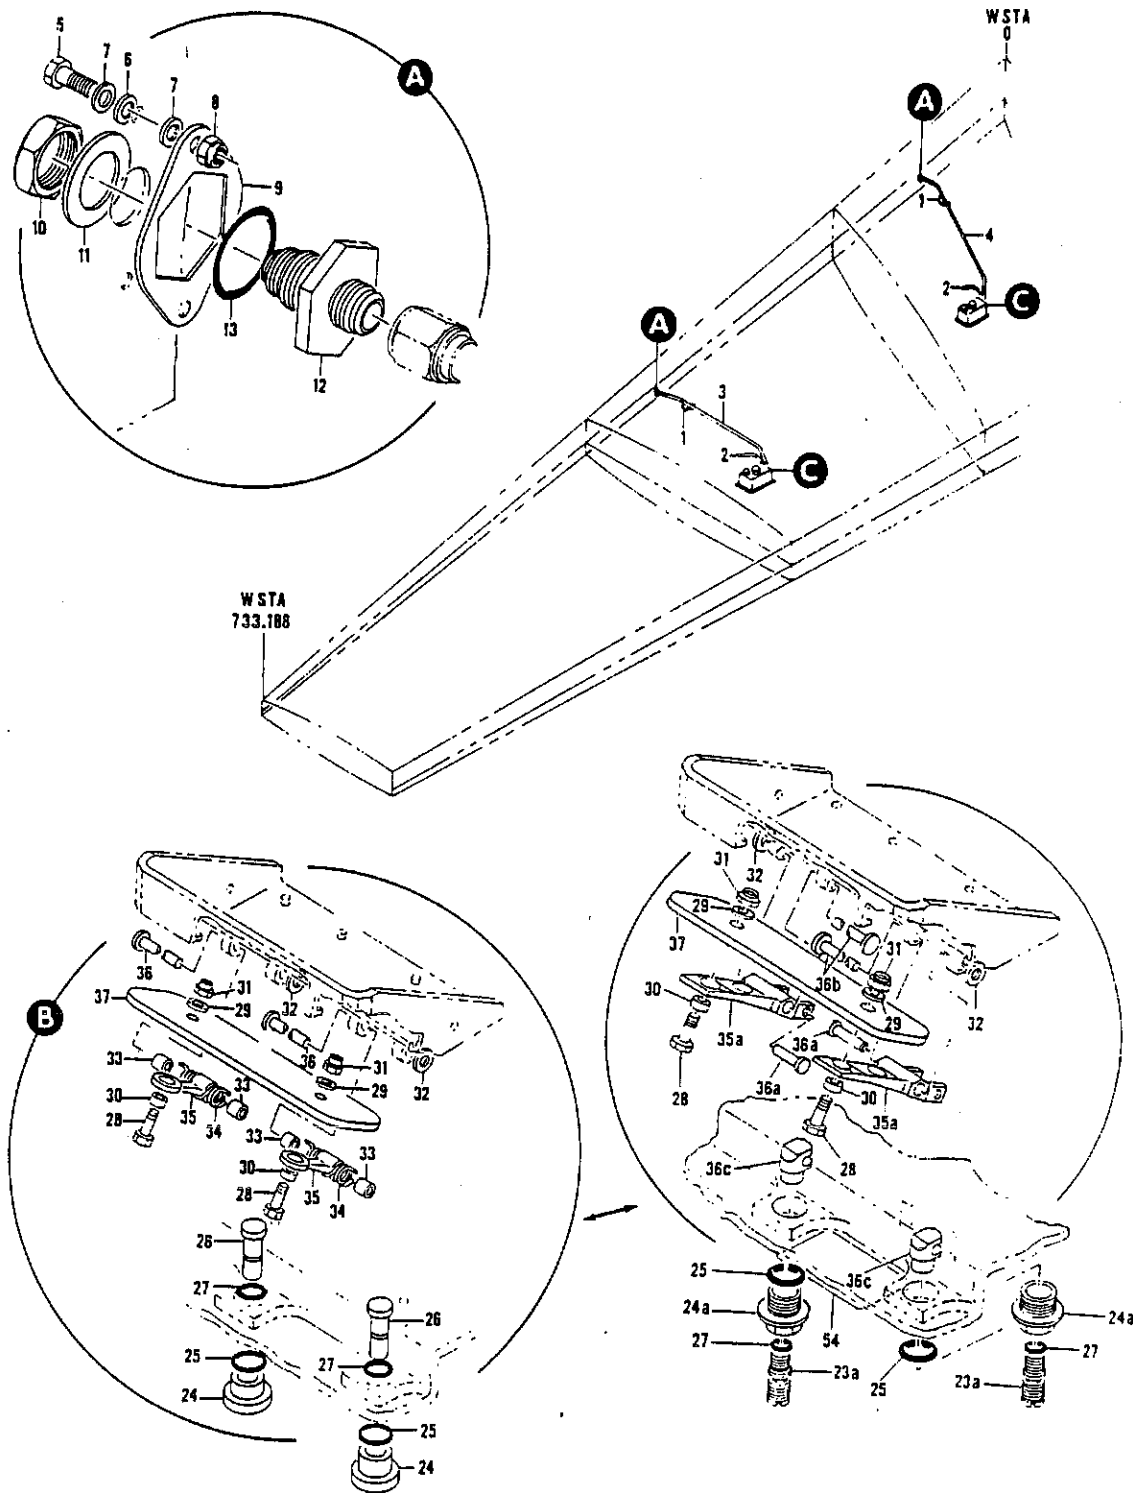

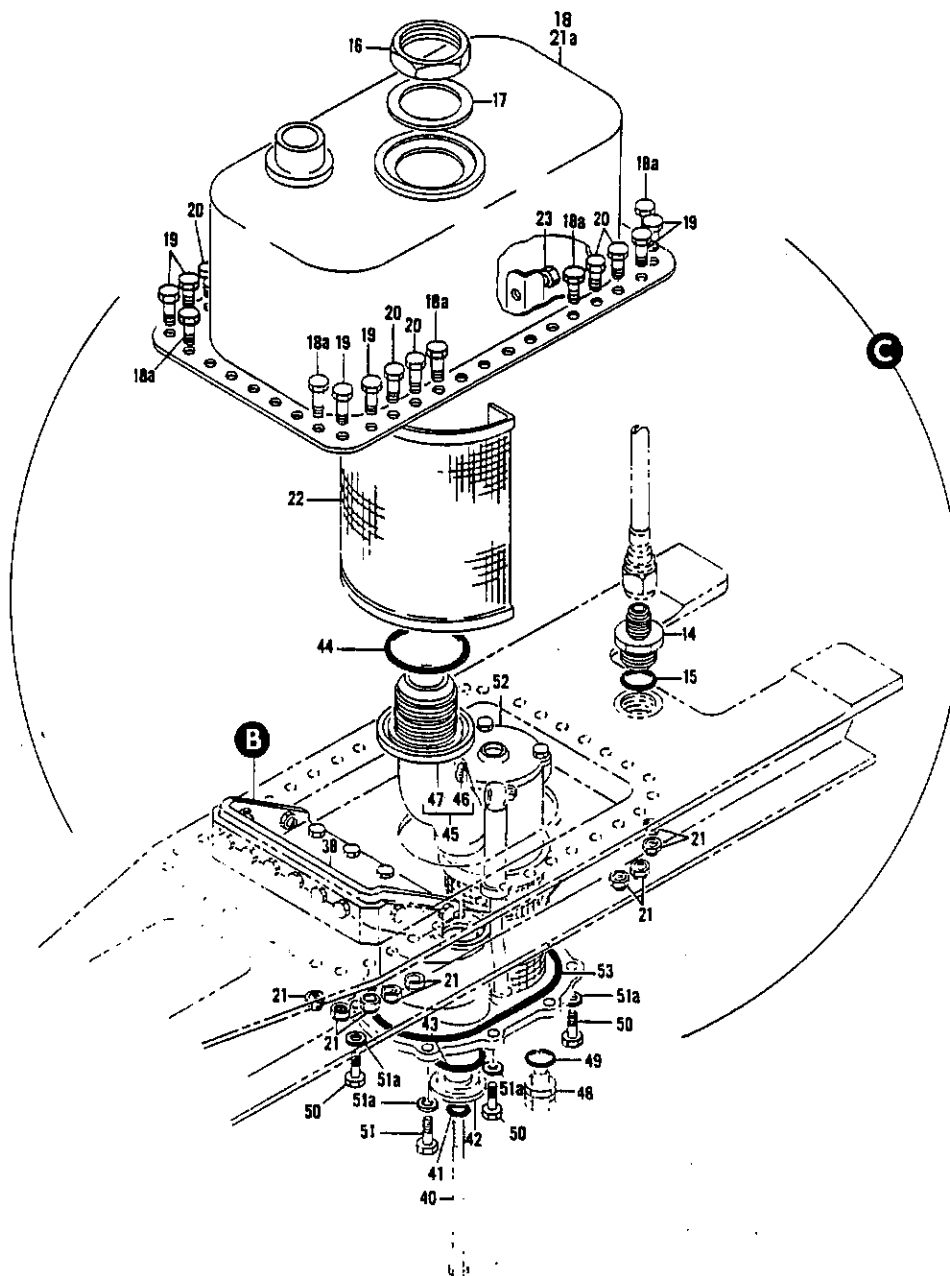


FIGURE 1. PUMP INSTL. MAIN WING TANKS FUEL BOOSTER (SHEET 2)

NOV 21/90

28-02-1

DETAILED PARTS LIST
28-02-1
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1	5-95684-3009		PUMP INSTL, MAIN WING TANKS FUEL BOOSTER (LH) (SEE. . . 28-1, FIG. 13A, ITEM 151 AND FIG. 20, ITEM 58)		RF
	5-95684-3010		PUMP INSTL, MAIN WING TANKS FUEL BOOSTER (RH) (SEE. . . 28-1, FIG. 13A, ITEM 151 AND FIG. 20, ITEM 58)		RF
	5-95684-3013		PUMP INSTL, MAIN WING TANKS FUEL BOOSTER (LH) (SEE. . . 28-1, FIG. 13A, ITEM 153 AND FIG. 21, ITEM 86)		RF
	5-95684-3014		PUMP INSTL, MAIN WING TANKS FUEL BOOSTER (RH) (SEE. . . 28-1, FIG. 13A, ITEM 153 AND FIG. 21, ITEM 86)		RF
1	MS25083-2883		JUMPER ASSY		1
1	BACJ40A-20-3		JUMPER ASSY		1
2	MS25083-2886		JUMPER ASSY		1
2	BACJ40-20-6		JUMPER ASSY		1
			ATTACHING PARTS		
	NAS603-8		SCREW		4
	AN960PD10L		WASHER.		4
	NAS679A3W		NUT		4
3	5-95684-3025		TUBE ASSY, FUEL BOOSTER ELECTRICAL CONDUIT 1/2 .028 . 6061-T6 (USED ON 5-95684-3009)		1
3	5-95684-3026		TUBE ASSY, FUEL BOOSTER ELECTRICAL CONDUIT 1/2 .028 . 6061-T6 (USED ON 5-95684-3010)		1
4	5-95684-3027		TUBE ASSY, FUEL BOOSTER ELECTRICAL CONDUIT 1/2 .028 . 6061-T6 (USED ON 5-95684-3013)		1
4	5-95684-3028		TUBE ASSY, FUEL BOOSTER ELECTRICAL CONDUIT 1/2 .028 . 6061-T6 (USED ON 5-95684-3014)		1
	BACN10CS8D		NUT		2
	MS21922-8		SLEEVE		2
5	AN4-5A		BOLT.		2
6	BACS11W4		WASHER.		2
7	AN960PD416		WASHER.		4
8	NAS679A4W		NUT		2
9	BACR10Y10D		RETAINER.		1
10	AN924-10D		NUT		1
11	AN960D1416		WASHER.		1
12	BACU24F8D		UNION		1
13	MS29513-218		PACKING		1
14	MS21916D12-8		REDUCER		1
15	MS29512-12		GASKET.		1
16	BACN10DR24D		NUT		1
17	AN960PD3016		WASHER.		1
18	65-53274-4		HOUSING ASSY.		1
			ATTACHING PARTS		
18A	AN3-4A		BOLT.		28
19	AN3-6A		BOLT.		8
20	AN3-5A		BOLT.		8
21	NAS679A3W		NUT		44
21A	65-53274-3		COVER ASSY.		1
21A	65-53274-5		COVER ASSY.		1
22	69-34193-2		SCREEN ASSY, MAIN BOOSTER PUMP.		1
			ATTACHING PARTS		
23	AN3-3A		BOLT.		2
23A	66-35005-1		SCREW, FUEL BOOST PUMP FLAPPER VALVE CLOSING.		2
24A	66-35006		BUSHING, FUEL BOOST PUMP FLAPPER VALVE SCREW.		2
25	MS29512-06		GASKET.		2
27	MS29513-010		PACKING		2
28	AN3-6A		BOLT.		2
29	BACS11W3		WASHER.		2
30	BACS18AE3-14		SPACER.		2
31	NAS679A3W		NUT		2
32	AN960PD10L		WASHER.		2
35A	66-35004		HINGE, FUEL BOOST PUMP FLAPPER VALVE.		2
36A	66-35013-1		PIN, FUEL BOOST PUMP FLAPPER VALVE HINGE PIVOT.		2
36B	66-35013		PIN, FUEL BOOST PUMP FLAPPER VALVE HINGE.		2
36C	66-35007		CAP, FUEL BOOST PUMP FLAPPER VALVE SCREW.		2
37	10-3069-2		VALVE ASSY, FUEL TANK BAFFLE SWING CHECK FLAPPER.		1
38	50-5350-6		FITTING, MAIN TANKS BOOSTER PUMP FLAPPER VALVE SEAT	0103	1
38	50-5350-10		FITTING, MAIN TANKS BOOSTER PUMP FLAPPER VALVE SEAT	0499	1
			ATTACHING PARTS		
	AN3-5A		BOLT.		12
	BACB30AB3-5		BOLT.		2
	BACS40A19-92		SHIM.		AR
	AN960PD10		WASHER.		4
MISSING ITEM NUMBERS ARE NOT APPLICABLE					



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
I	NAS679A3W	.	NUT		14
40	AN76A47	.	BOLT.		1
41	MS29513-012	.	PACKING		1
42	MS29534-2	.	CAP		1
43	MS29513-027	.	PACKING		1
44	MS29513-230	.	PACKING		1
45	5-89865-3000	.	FITTING ASSY, FUEL SYSTEMS MAIN BOOSTER PUMP.		1
46	BACS1306C3	.	SLEEVE.		1
47	5-89865-3001	.	FITTING, FUEL SYSTEMS MAIN BOOSTER PUMP		1
48	BACC40L52	.	COCK.		1
49	MS29512-4	.	GASKET.		1
50	AN4-7A	.	BOLT.		7
			(OPTIONAL BACB30NE4-8)		
50	BACB30NE4-8	.	BOLT.		7
			(OPTIONAL TO AN4-7A)		
51	AN4H7A	.	BOLT.		1
			(OPTIONAL BACB30EN4H8)		
51	BACB30NE4H8	.	BOLT.		1
			(OPTIONAL TO AN4H7A)		
51A	AN960C416L	.	WASHER.		8
			(OPTIONAL AN960C416)		
51A	AN960C416	.	WASHER.		8
			(OPTIONAL TO AN960C416L)		
52	10-3363	.	PUMP ASSY, ENGINE FUEL BOOSTER (OPTIONAL CUSTOMER FURNISHED)		1
53	MS29513-252	.	PACKING		1
54	BACM10S15AJ	.	MARKER-ALUMINUM FOIL, SCREWS.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

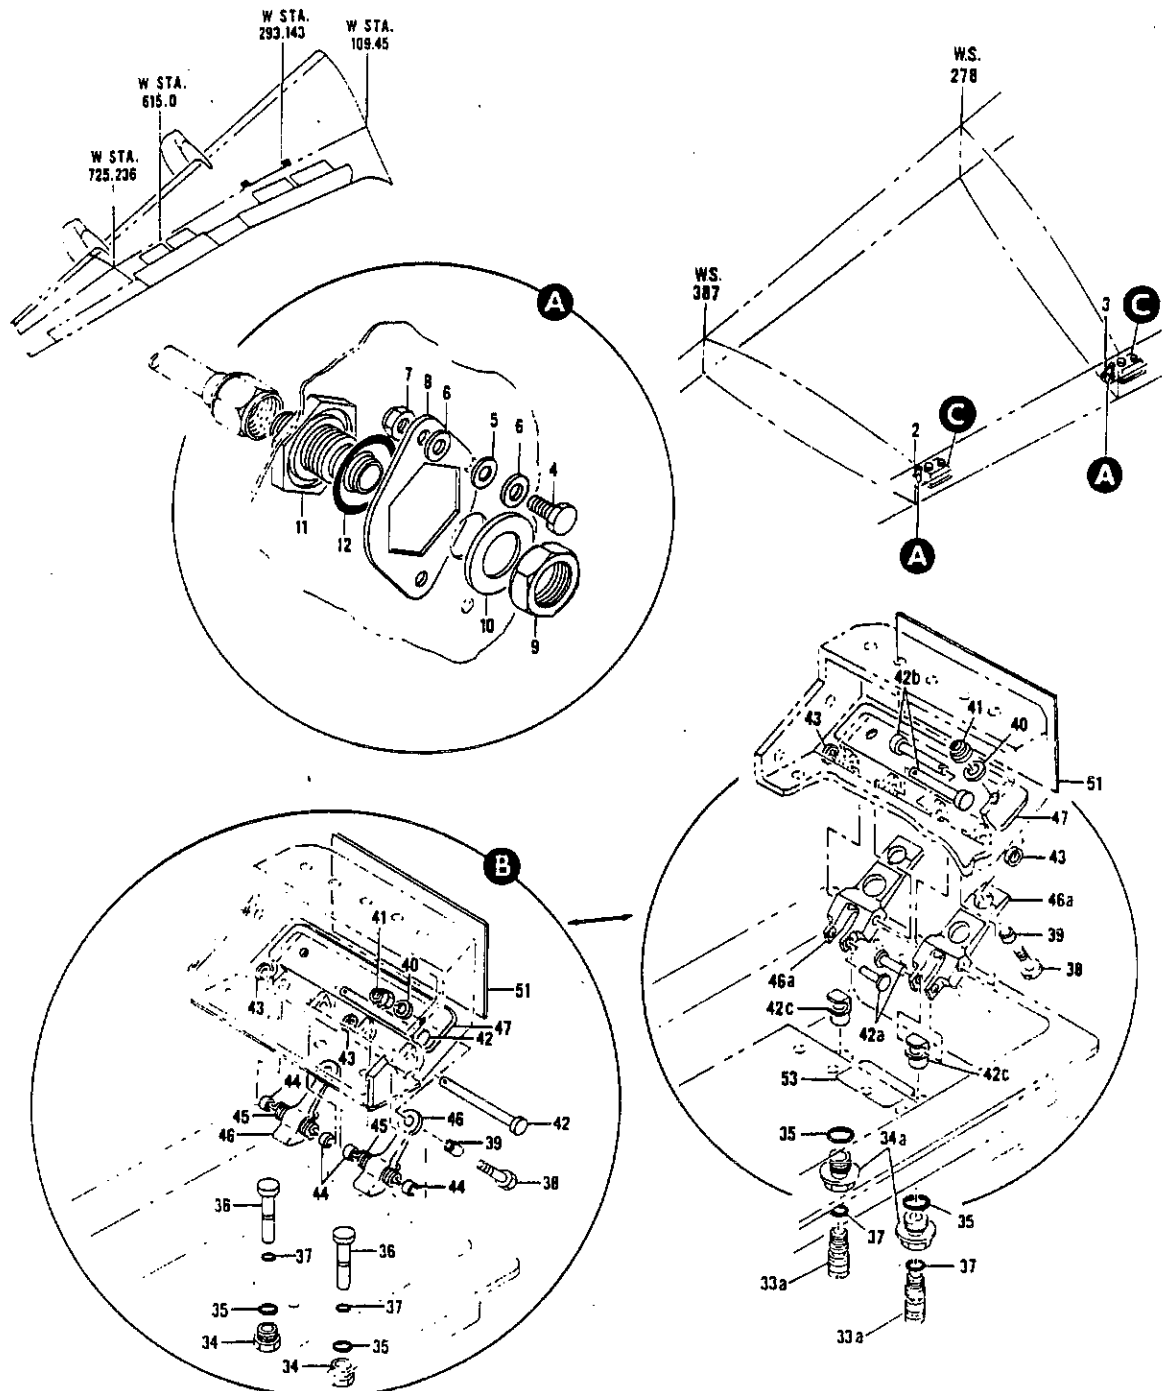


FIGURE 2. PUMP INSTL. MAIN WING TANKS FUEL BOOSTER (SHEET 1)

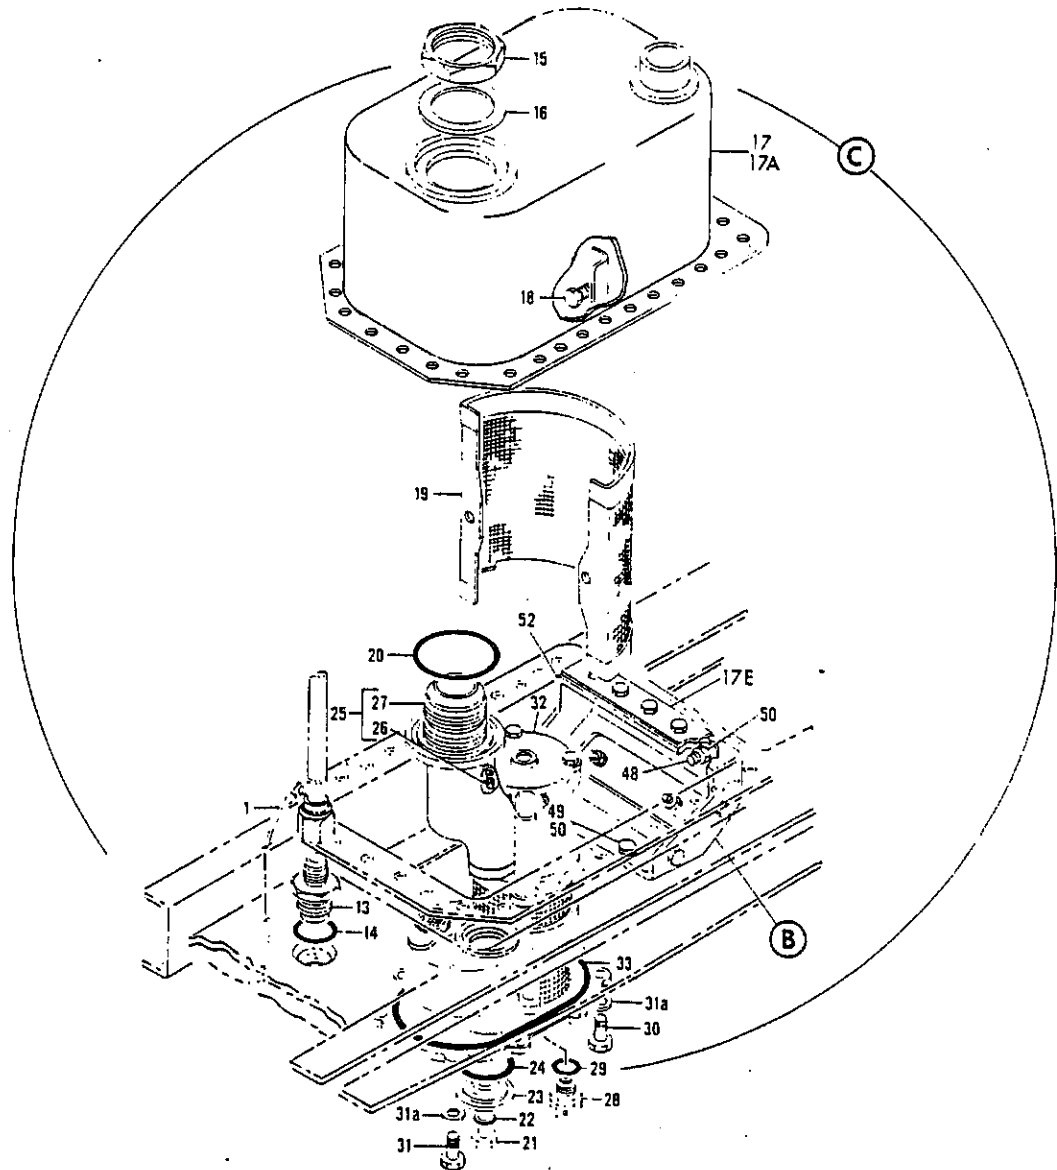


FIGURE 2. PUMP INSTL, MAIN WING TANKS FUEL BOOSTER (SHEET 2)

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2	5-95684-3011	PUMP INSTL, MAIN WING TANKS FUEL BOOSTER (LH) (SEE. . . 28-1, FIG. 13A, ITEM 152, FIG. 20, ITEM 56)		RF
	5-95684-3012	PUMP INSTL, MAIN WING TANKS FUEL BOOSTER (RH) (SEE. . . 28-1, FIG. 13A, ITEM 152, FIG. 20, ITEM 56)		RF
	5-95684-3015	PUMP INSTL, MAIN WING TANKS FUEL BOOSTER (LH) (SEE. . . 28-1, FIG. 13A, ITEM 154, FIG. 21, ITEM 87)		RF
	5-95684-3016	PUMP INSTL, MAIN WING TANKS FUEL BOOSTER (RH) (SEE. . . 28-1, FIG. 13A, ITEM 154, FIG. 21, ITEM 87)		RF
1	MS25083-2883	. JUMPER ASSY		1
	BACS12CB3-8	. ATTACHING PARTS		2
	NAS603-8	. SCREW (OPTIONAL NAS603-8)		2
	AN960D10L	. WASHER.		6
	BACN10JC3	. NUT		2
2	5-95684-3019	. TUBE ASSY, FUEL BOOSTER ELECTRICAL CONDUIT 1/2 .028 . 6061-T6 (OPTIONAL 5-95684-3036) (USED ON 5-95684-3011)		1
2	5-95684-3036	. TUBE ASSY, FUEL BOOSTER ELECTRICAL CONDUIT 1/2 .028 . 6061-T6 (USED ON 5-95684-3011) (OPTIONAL TO 5-95684-3019)		1
3	5-95684-3029	. TUBE ASSY, FUEL BOOSTER ELECTRICAL CONDUIT 1/2 .028 . 6061-T6 (USED ON 5-95684-3015)		1
3	5-95684-3030	. TUBE ASSY, FUEL BOOSTER ELECTRICAL CONDUIT 1/2 .028 . 6061-T6 (USED ON 5-95684-3016)		1
	MS21922-8	. SLEEVE.		2
	BACN10CS8D	. NUT		2
4	AN4-3A	. BOLT.		2
5	BACS11W4	. SEAL.		2
6	AN960PD416	. WASHER.		4
7	NAS679A4W	. NUT		2
8	BACR10Y10D	. RETAINER.		1
9	AN924-10D	. NUT		1
10	AN960D1416	. WASHER.		1
11	BACU24F8D	. UNION		1
12	MS29513-218	. PACKING		1
13	MS21916D12-8	. REDUCER		1
14	MS29512-12	. GASKET.		1
15	BACN10DR24D	. NUT		1
16	AN960PD3016	. WASHER.		1
17	5-95841-1	. HOUSING ASSY, MAIN BOOSTER PUMP (USED ON 5-95684-3011 AND 5-95684-3012)		1
17	5-95841-20	. HOUSING ASSY, MAIN BOOSTER PUMP (USED ON 5-95684-3015 AND -3016)		1
		ATTACHING PARTS		
	AN3-4A	. BOLT, (USED ON 5-95684-3011 AND 5-95684-3012)		39
	AN3-4A	. BOLT, (USED ON 5-95684-3015 AND 5-95684-3016)		37
	NAS679A3W	. NUT, (USED ON 5-95684-3011 AND 5-95684-3012)		39
17A	5-95841-12	. . . COVER ASSY, (USED ON 5-95841-1)		1
17A	5-95841-14	. . . COVER ASSY, (USED ON 5-95841-5)		1
17E	BACS40A16-96	. SHIM.		AR
18	AN3-3A	. BOLT.		2
19	69-34193-1	. SCREEN ASSY, MAIN BOOSTER PUMP.		1
20	MS29513-230	. PACKING		1
21	AN76A47	. BOLT.		1
22	MS29513-012	. PACKING		1
23	MS29534-2	. CAP		1
24	MS29513-027	. PACKING		1
25	5-89865-3000	. FITTING ASSY, FUEL SYSTEM MAIN BOOSTER PUMP		1
26	BACS13U6C3	. SLEEVE.		1
27	5-89865-3001	. FITTING, FUEL SYSTEM MAIN BOOSTER PUMP.		1
28	BACC40L52	. COCK.		1
29	MS29512-04	. GASKET.		1
32	10-3363	. PUMP ASSY, ENGINE FUEL BOOSTER (OPTIONAL CUSTOMER FURNISHED)		1
33	MS29513-252	. PACKING		1
33A	66-35005-1	. SCREW, FUEL BOOST PUMP FLAPPER VALVE CLOSING.		2
34A	66-35006	. BUSHING, FUEL BOOST PUMP FLAPPER VALVE SCREW.		2
35	MS29512-06	. GASKET.		2
37	MS29513-010	. PACKING		2
38	AN3-6A	. BOLT.		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
2	39	BACS18AE3-14	.	SPACER.	.	.	.	.		2
	40	BACS11W3	.	SEAL.	.	.	.	.		2
	41	NAS679A3W	.	NUT	.	.	.	.		2
42A	66-35013-1		.	PIN, FUEL BOOST PUMP FLAPPER VALVE HINGE PIVOT.	.	.	.	.		2
42B	66-35013		.	PIN, FUEL BOOST PUMP FLAPPER VALVE HINGE.	.	.	.	.		2
42C	66-35007		.	CAP, FUEL BOOST PUMP FLAPPER VALVE SCREW.	.	.	.	.		2
43	AN960PD10L		.	WASHER.	.	.	.	.		2
46A	66-35004		.	HINGE, FUEL BOOST PUMP FLAPPER VALVE.	.	.	.	.		2
47	10-3069-2		.	VALVE ASSY, FUEL TANK BAFFLE SWING CHECK FLAPPER.	.	.	.	.		1
48	AN3-5A		.	BOLT.	.	.	.	.		2
49	BACB30AB3-5		.	BOLT.	.	.	.	.		2
50	NAS679A3W		.	NUT	.	.	.	.		4
51	BACS40A26-92		.	SHIM.	.	.	.	.		AR
52	50-5350-5		.	FITTING, MAIN TANKS BOOSTER PUMP FLAPPER VALVE.	.	.	.	.	0103	1
52	50-5350-9		.	FITTING, FLAPPER VALVE.	.	.	.	.	0499	1
53	BACM10S15AJ		.	MARKER-ALUMINUM FOIL, SCREWS.	.	.	.	.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

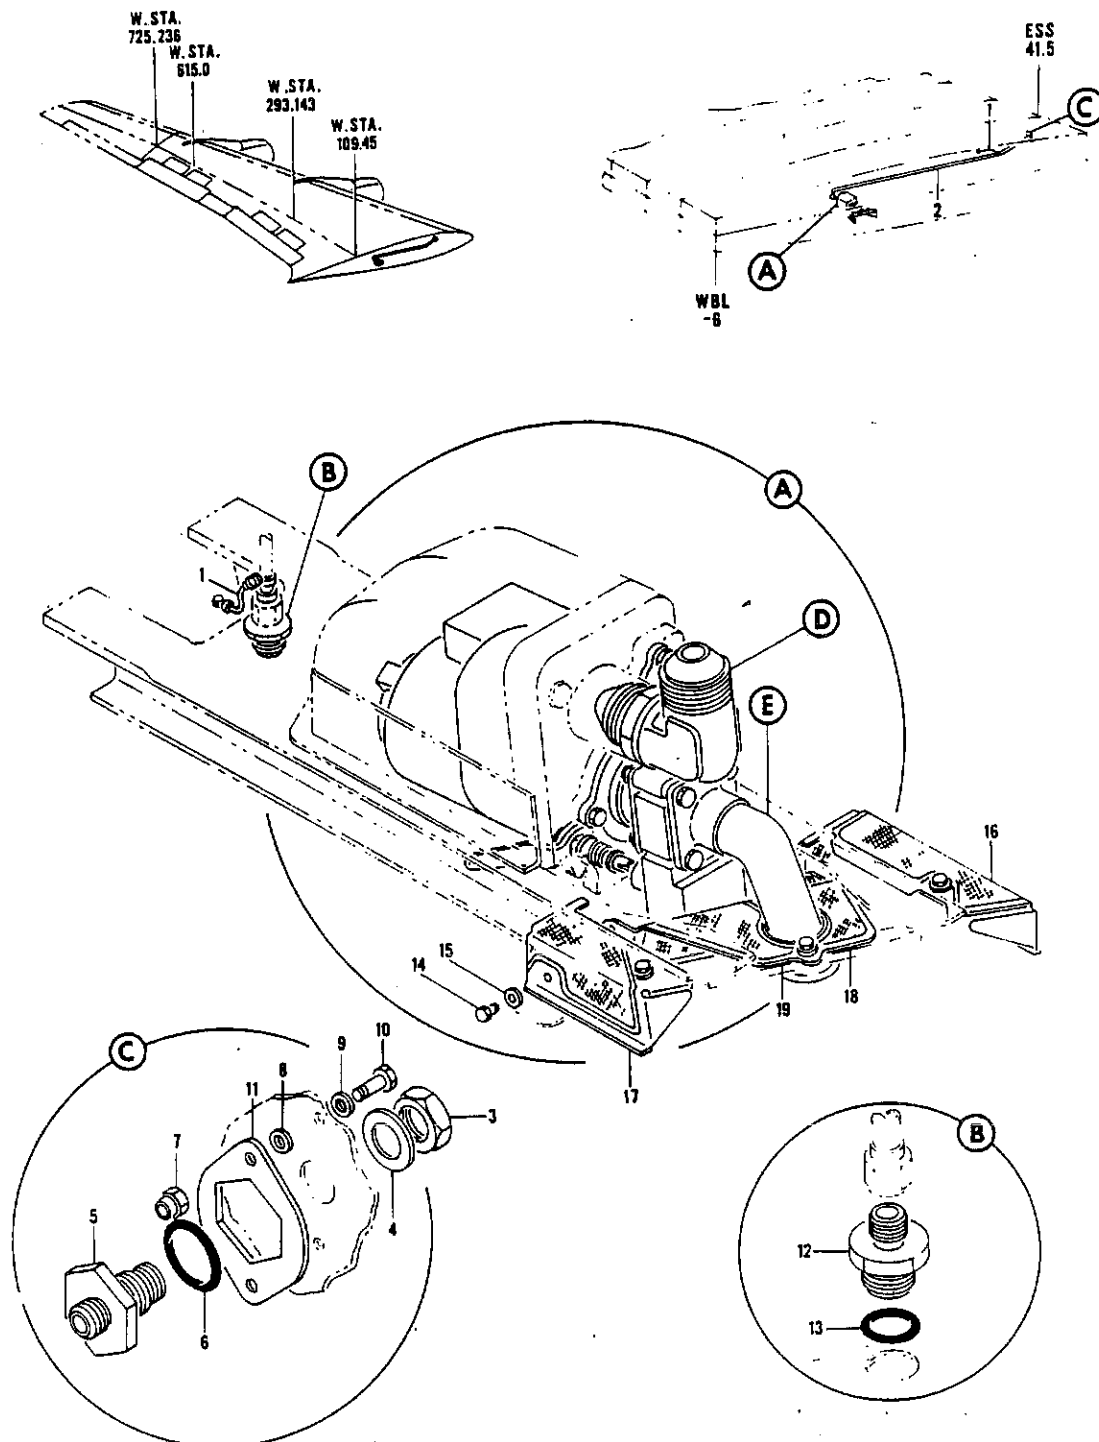


FIGURE 3. PUMP INSTL. FUEL BOOSTER OVERRIDE (FUEL ONLY) (SHEET 1)

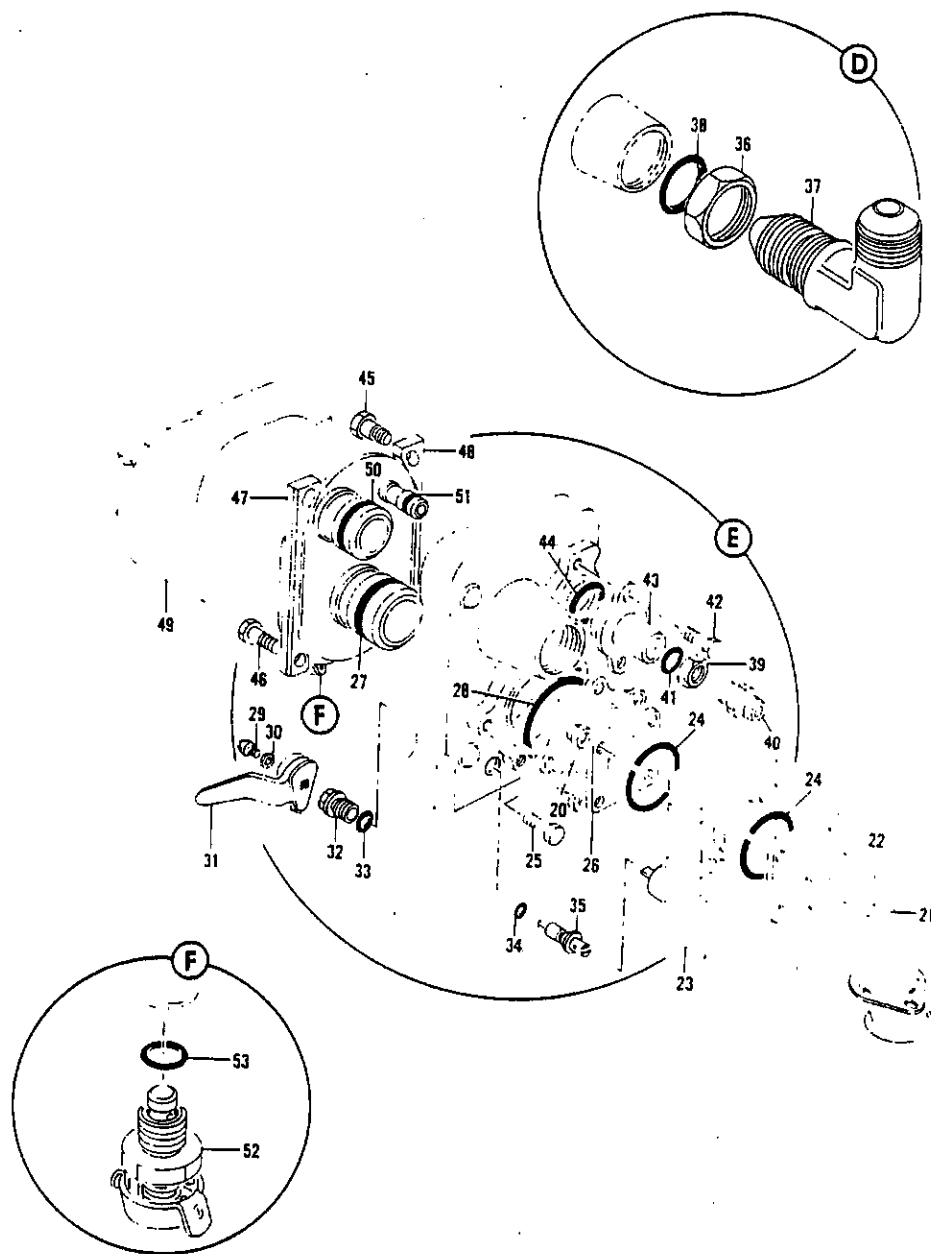


FIGURE 3. PUMP INST., FUEL BOOSTER OVERRIDE (FUEL ONLY) (SHEET 2)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
3	65-7104-1	PUMP INSTL, FUEL BOOSTER OVERRIDE (LH) (FUEL ONLY) (SEE 28-1, FIG. 13A, ITEM 150, FIG. 21, ITEM 85)		RF
	65-7104-2	PUMP INSTL, FUEL BOOSTER OVERRIDE (RH) (FUEL ONLY) (SEE 28-1, FIG. 13A, ITEM 150, FIG. 21, ITEM 85)		RF
1	MS25083-2BB3	. JUMPER ASSY.		2
	NAS603-8	. ATTACHING PARTS		4
	AN960PD10L	. SCREW		4
	NAS679A3W	. WASHER.		4
		. NUT		4
2	65-7104-3	. TUBE ASSY, FUEL BOOSTER ELECTRICAL CONDUIT 1/2 IN.. 028 6061-T6 (LH ONLY)		1
2	65-7104-4	. TUBE ASSY, FUEL BOOSTER ELECTRICAL CONDUIT 1/2 IN.. 028 6061-T6 (RH ONLY)		1
	BACN10CS8D	. NUT		2
	MS21922-8	. SLEEVE.		2
3	AN924-10D	. NUT		1
4	AN960D416	. WASHER.		1
5	BACU24F8D	. UNION		1
6	MS29513-21B	. PACKING		1
7	NAS679A4W	. NUT		2
8	AN960PD416	. WASHER.		2
9	BACS11W4	. SEAL.		2
10	AN4-5A	. BOLT.		2
11	BACR10Y10D	. RETAINER.		1
12	MS21916D12-8	. REDUCER		1
13	MS29512-12	. GASKET.		1
14	AN3-4A	. BOLT.		10
15	BACW10P44AL	. WASHER.		10
16	65-7099-35	. SCREEN ASSY, (LH ONLY).		1
16	65-7099-36	. SCREEN ASSY, (RH ONLY).		1
17	65-7099-3	. SCREEN ASSY, (LH ONLY).		1
17	65-7099-4	. SCREEN ASSY, (RH ONLY).		1
18	65-7099-5	. SCREEN ASSY, (LH ONLY).		1
18	65-7099-6	. SCREEN ASSY, (RH ONLY).		1
19	65-7099-7	. SCREEN ASSY, (LH ONLY).		1
19	65-7099-8	. SCREEN ASSY, (RH ONLY).		1
20	NAS679A4W	. NUT		4
21	AN4-21A	. BOLT.		4
22	69-5365-3	. FITTING ASSY, INLET (LH ONLY)		1
22	69-5365-4	. FITTING ASSY, INLET (RH ONLY)		1
23	10-3061-1	. VALVE ASSY, 2.00 TUBE SIZE MANUALLY OPERATED GATE FUEL SHUTOFF		1
24	MS29513-228	. PACKING		2
25	AN4-5A	. BOLT.		4
26	50-5356	. FITTING, ADAPTER.		1
27	MS29513-226	. PACKING		1
28	MS29513-235	. PACKING		1
29	AN500A6-7	. SCREW		1
30	AN960PD6	. WASHER.		1
31	66-12088-6	. HANDLE ASSY, SHUT-OFF (FUEL ONLY)		1
32	66-4841	. BUSHING, VALVE SHAFT REMOVAL.		1
33	MS29512-06	. PACKING		1
34	MS29513-010	. PACKING		1
35	60-4329-2	. SHAFT		1
36	BACN10DR24D	. NUT		1
37	AN833-24D	. ELBOW		1
38	MS29512-24	. GASKET.		1
39	BACN10DR8D	. NUT		1
40	MS21902D8	. UNION		1
41	MS29512-08	. GASKET.		1
42	AN4H4A	. BOLT.		2
43	90-6704	. FITTING, VAPOR.		1
44	MS29513-223	. PACKING		1
45	6-84527	. BOLT, CLAMP SHOULDER.		2
46	AN4H7A	. BOLT.		2
47	9-65862-1	. CLAMP		1
48	9-65862-2	. CLAMP		1
49	10-3070	. PUMP ASSY, (OPTIONAL CUSTOMER FURNISHED).		1
50	MS29513-224	. PACKING		1
51	MS29513-113	. PACKING		1
52	BACC4OL52	. COCK.		1
53	MS29512-04	. GASKET.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

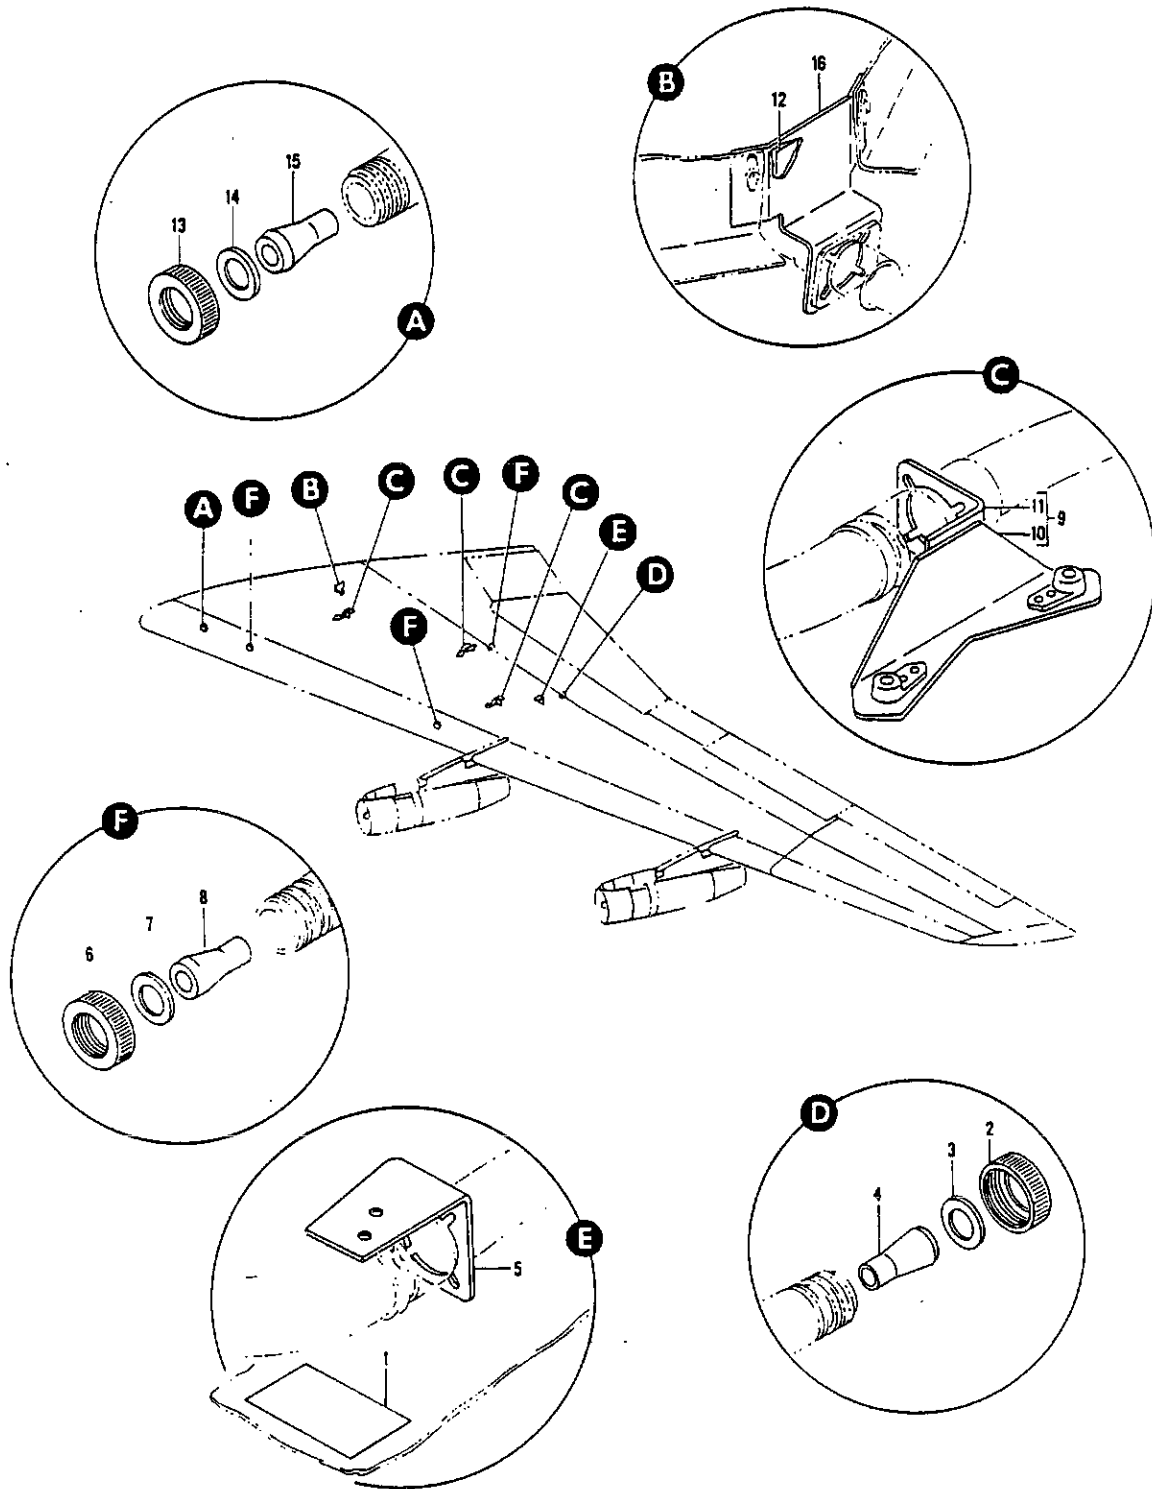


FIGURE 5. RECEPTACLE AND SEAL INSTL. WING FUEL SYSTEM



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5			RECEPTACLE AND SEAL INSTL, WING FUEL SYSTEM		
	65-19840-9		RECEPTACLE AND SEAL INSTL, WING FUEL SYSTEM (FUEL ONLY)		RF
	65-19840-10		. RECEPTACLE AND SEAL INSTL, WING BOOST PUMP (LH) (FUEL ONLY) (SEE 24-2, FIG. 12, ITEM 26)		RF
2	AN3054-6		. RECEPTACLE AND SEAL INSTL, WING BOOST PUMP (RH) (FUEL ONLY) (SEE 24-2, FIG. 12, ITEM 26)		1
3	BACW10P168L		. . . NUT		1
4	65-19840-12		. . . WASHER		1
5	30-1537-4		. . . GROMMET, WING BOOST PUMP RECEPTACLE AND SEAL . . .		1
	NAS603-12		. . . SUPPORT, BOOST PUMP RECEPTACLE		1
			ATTACHING PARTS		
			. . . SCREW		2
			. . . FOR REFERENCE TO OTHER RECEPTACLE AND SEAL DETAILS, SEE NHA		
	65-19840-5		. RECEPTACLE AND SEAL INSTL, WING BOOST PUMP (LH) (SEE 24-2, FIG. 12, ITEM 27)		RF
	65-19840-6		. RECEPTACLE AND SEAL INSTL, WING BOOST PUMP (RH) (SEE 24-2, FIG. 12, ITEM 27)		RF
	65-19840-7		. RECEPTACLE AND SEAL INSTL, WING BOOST PUMP (LH) (SEE 24-2, FIG. 12, ITEM 29)		RF
	65-19840-8		. RECEPTACLE AND SEAL INSTL, WING BOOST PUMP (RH) (SEE 24-2, FIG. 12, ITEM 29)		RF
	65-19840-9		. RECEPTACLE AND SEAL INSTL, WING BOOST PUMP (LH) (SEE 24-2, FIG. 12, ITEM 29)		RF
	65-19840-4		. RECEPTACLE AND SEAL INSTL, WING BOOST PUMP (RH) (SEE 24-2, FIG. 12, ITEM 29)		RF
6	AN3054-6		. . . NUT		1
7	BACW10P168L		. . . WASHER		1
8	65-19840-12		. . . GROMMET, WING BOOST PUMP RECEPTACLE AND SEAL . . .		1
9	30-3144-2		. . . BRACKET ASSY, BOOST PUMP RECEPTACLE		1
	NAS514P1032-16		ATTACHING PARTS		
			. . . SCREW		2
10	30-3143		. . . SUPPORT ASSY, BOOST PUMP RECEPTACLE		1
	AN47005		ATTACHING PARTS		
			. . . RIVET		2
11	30-3144-3		. . . ANGLE, BOOST PUMP RECEPTACLE BRACKET		1
	65-19840-1		. RECEPTACLE AND SEAL INSTL, WING OVERRIDE PUMP (LH) . . (FUEL ONLY) (SEE 24-2, FIG. 12, ITEM 30)		RF
	65-19840-2		. RECEPTACLE AND SEAL INSTL, WING OVERRIDE PUMP (RH) . . (FUEL ONLY) (SEE 24-2, FIG. 12, ITEM 30)		RF
13	AN3054-6		. . . NUT		1
14	BACW10P168L		. . . WASHER		1
15	65-19840-11		. . . GROMMET, WING OVERRIDE PUMP RECEPTACLE AND SEAL . .		1
16	30-1519		. . . SUPPORT, OVERRIDE PUMP RECEPTACLE		1
	NAS603-10		ATTACHING PARTS		
			. . . SCREW		2
			. . . FOR REFERENCE TO OTHER RECEPTACLE AND SEAL DETAILS, SEE NHA		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 03
INTEGRAL FUEL TANK EQUIPMENT

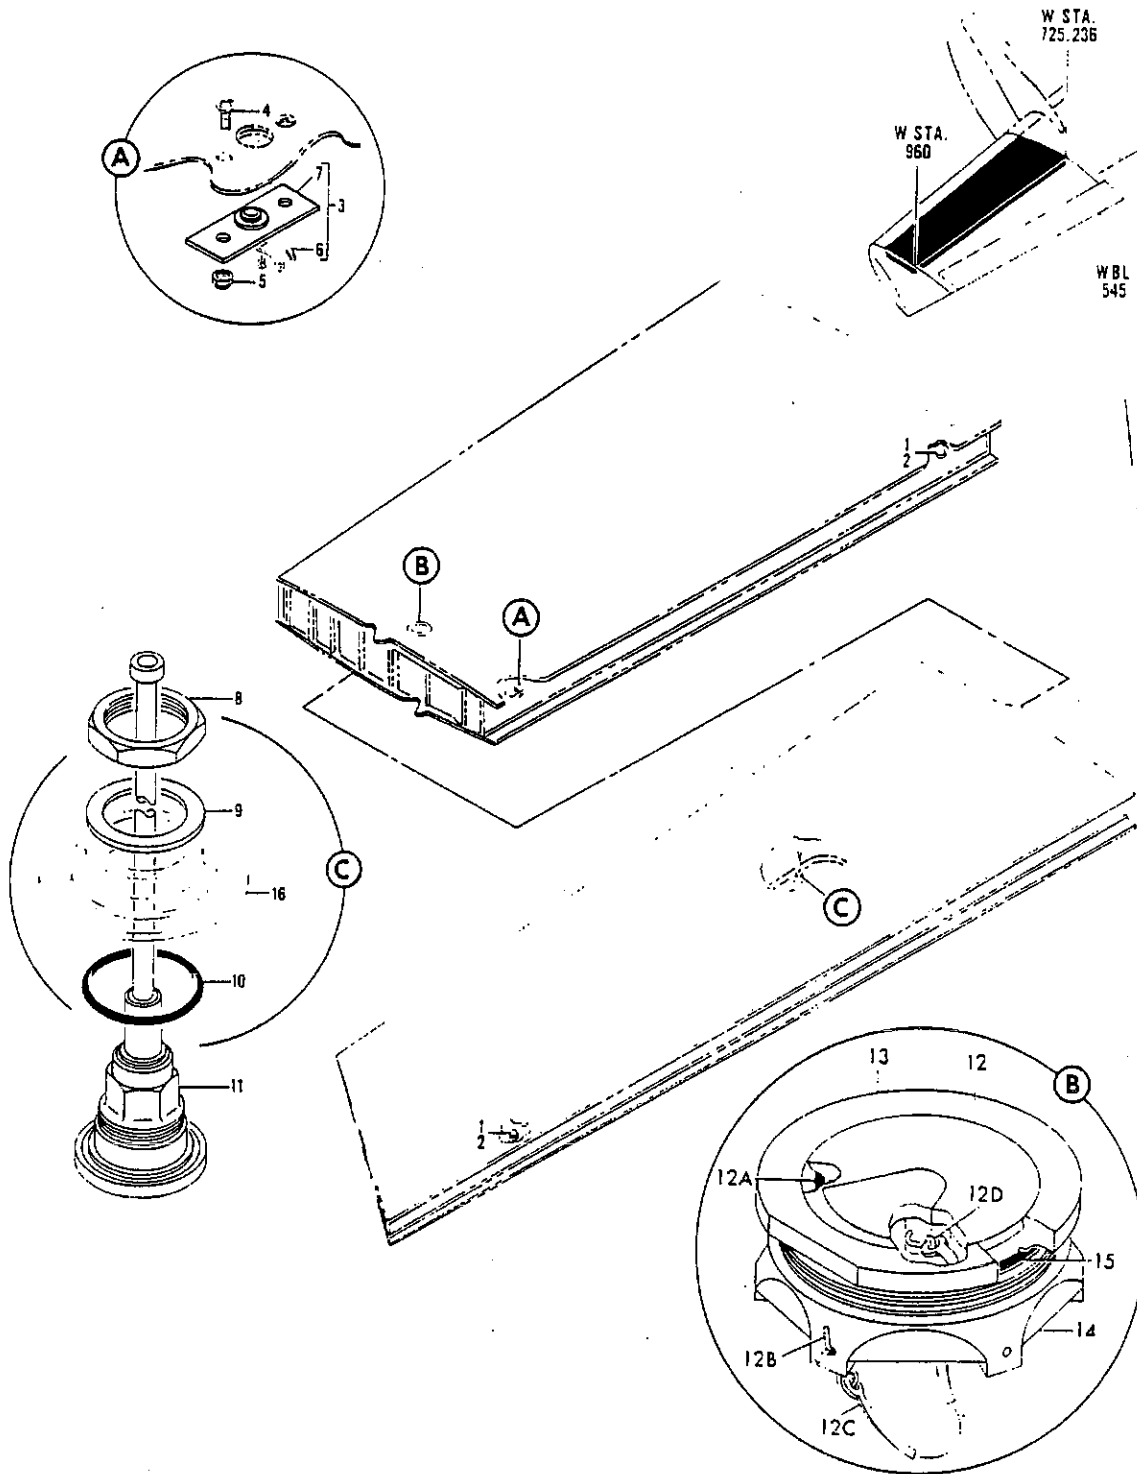


FIGURE 1. EQUIPMENT INSTL, OUTBOARD WING FUEL TANKS



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1	5-86591-3003		EQUIPMENT INSTL, LH OUTBOARD WING FUEL TANKS (SEE 57-2, FIG. 1, ITEM 5)		RF
	5-86591-3004		EQUIPMENT INSTL, RH OUTBOARD WING FUEL TANKS (SEE 57-2, FIG. 1, ITEM 5)		RF
1	1101		. COCK, DRAIN (V92003)		2
2	MS29512-10		. GASKET		2
3	6-74626-1		. RECEPTACLE ASSY, FLANGED TYPE NOZZLE GROUNDING		1
			ATTACHING PARTS		
4	NAS514P1032-8		. SCREW		2
5	NAS679A3W		. NUT		2
			-----*		
6	AN3117-1		. . RECEPTACLE		1
7	6-74626-2		. . FLANGE, RECEPTACLE		1
	50-5361-1		. DRIP STICK INSTL, NO. 1 RESERVE TANK (LH ONLY)		1
	50-5361-2		. DRIP STICK INSTL, NO. 4 RESERVE TANK (RH ONLY)		1
8	BACN10DR24D		. . NUT		1
9	AN960PD3016		. . WASHER		1
10	MS29513-228		. . PACKING		1
11	725500-1		. . DRIP STICK ASSY, LEVEL INDICATOR (V96124) (SAME AS BAC SPEC NO. 10-3298-1) (SEE FIG. 14)		RF
			. . DRIP STICK ASSY, LEVEL INDICATOR (SAME AS 725500-1 (V96124))		1
12	10-3297-119		. CAP ASSY, FILLER (SAME AS 38222-2 (V99321))	0299	1
12	10-3297-13		. CAP ASSY, FILLER (SAME AS FC3500-9 (V99321))	0101	1
12	FC3500-9		. CAP ASSY, FILLER (V99321) (SAME AS BAC SPEC NO. 10-3297-13)	0101	RF
	38222-2		. CAP ASSY, FILLER (V99321) (SAME AS BAC SPEC NO. 10-3297-119)	0299	RF
M 12A	37603-339		. . PACKING, (V99321)	0101	1
M 12A	38283		. . SEAL, (V99321) (OPTIONAL TO 38241 (V99321))	0299	1
12A	38241		. . SEAL, (V99321) (OPTIONAL 38283 (V99321))	0299	1
M 12B	AN381-3-8		. . COTTER PIN	0299	1
M 12C	38252-12		. . LANYARD, (V99321)	0299	1
M 12D	MS29523-1		. . HOOK	0299	1
13	10-3297-53		. ADAPTER, FUEL TANK FILLER (LH ONLY)	0101	1
13	10-3297-120		. ADAPTER, FILLER (LH ONLY)	0299	1
13	10-3297-54		. ADAPTER, FUEL TANK FILLER (RH ONLY)	0101	1
13	10-3297-121		. ADAPTER, FILLER (RH ONLY)	0299	1
14	10-3297-2		. NUT, FUEL TANK FILLER		1
15	MS29513-240		. PACKING		1
16			DOOR INSTL, WING LOWER SURFACE DRIP STICK (LH) (FOR REF SEE FIG. 9 AND 10)		RF
16			DOOR INSTL, WING LOWER SURFACE DRIP STICK (RH) (FOR REF SEE FIG. 9 AND 10)		RF
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

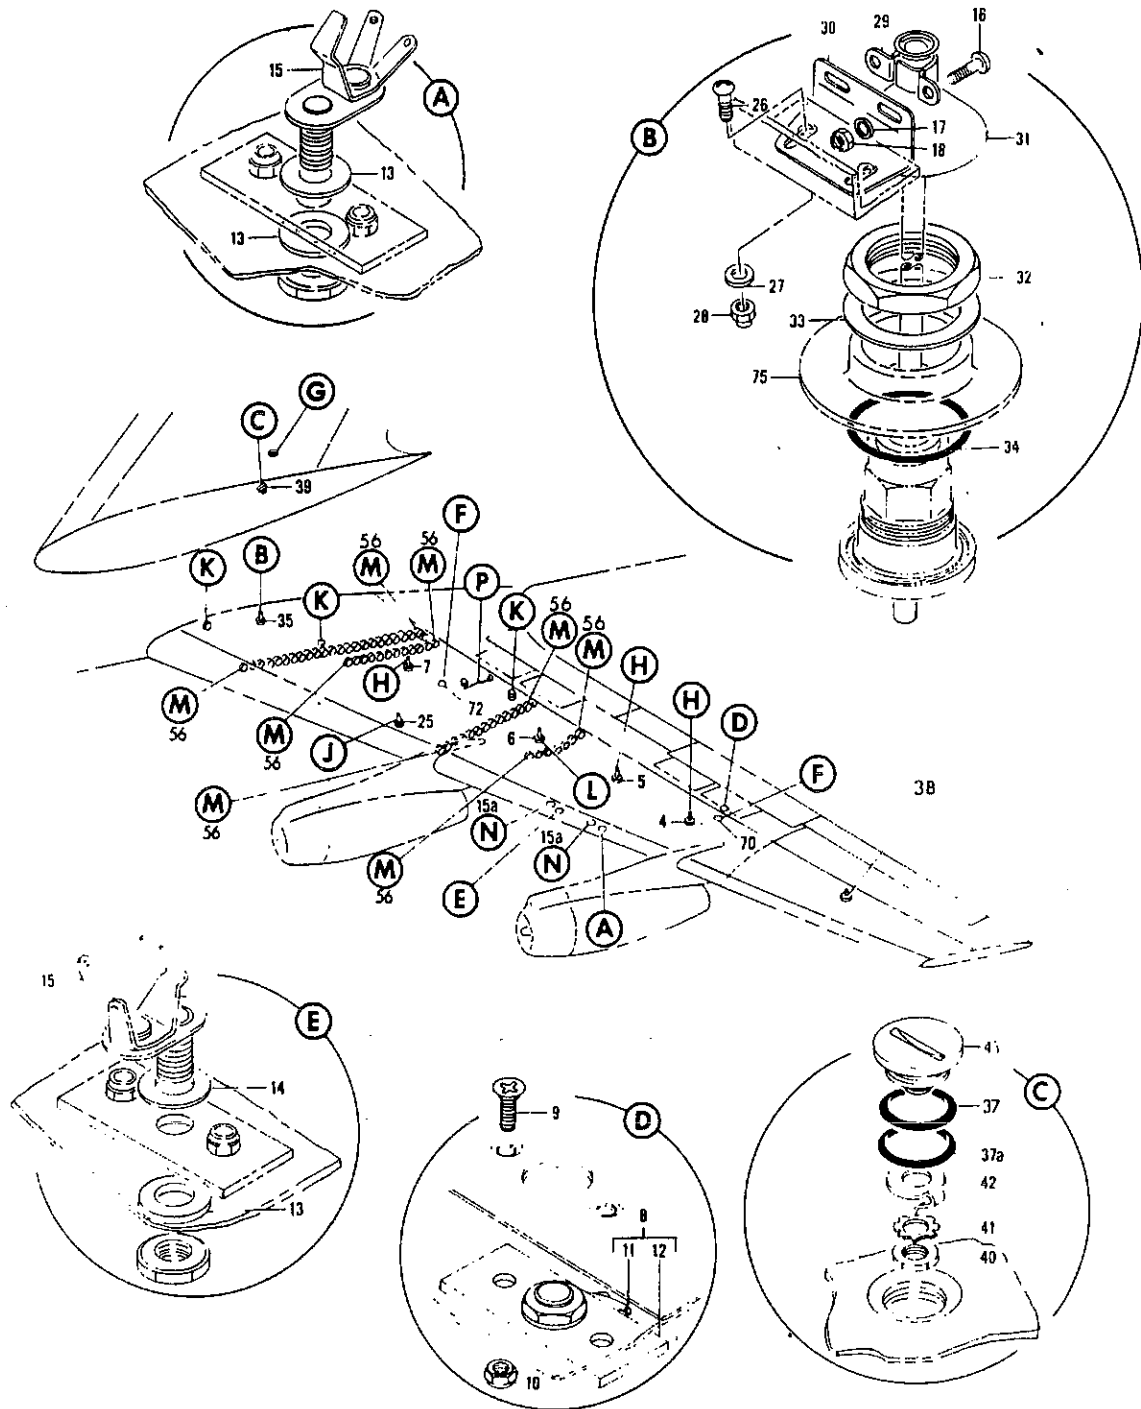


FIGURE 2. EQUIPMENT INSTL, SECTION 22 WING FUEL TANKS (SHEET 1)

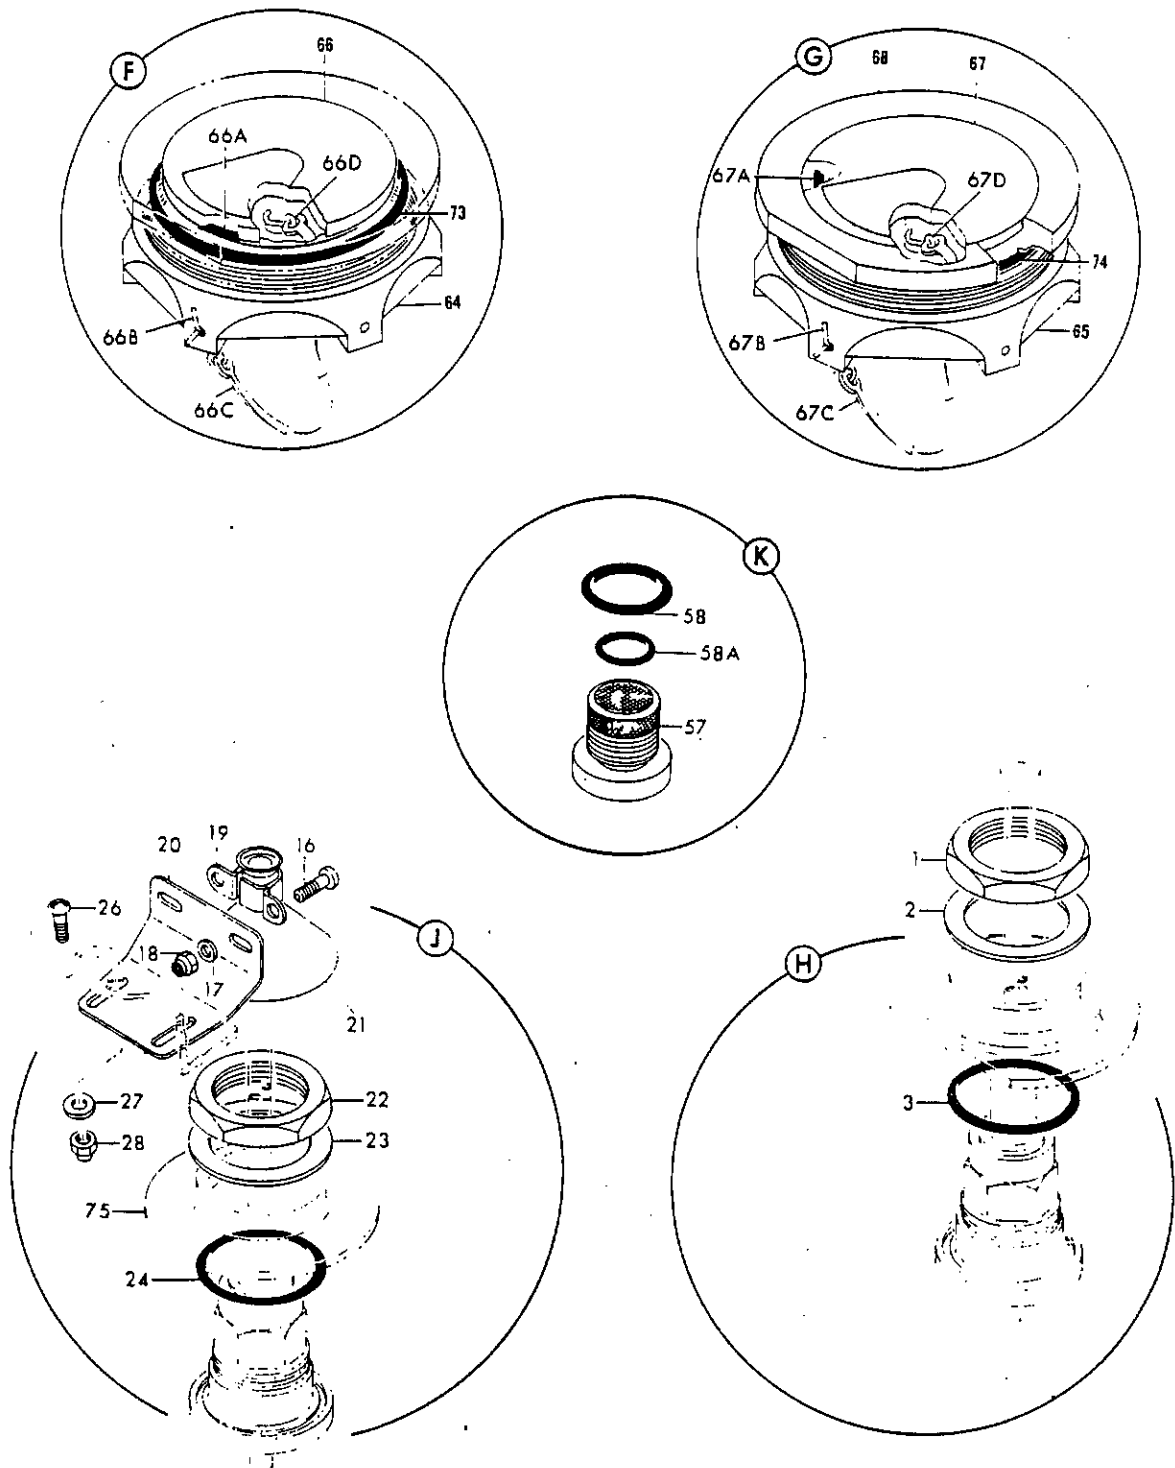


FIGURE 2. EQUIPMENT INSTL, SECTION 22 WING FUEL TANKS (SHEET 2)

NOV 21/90

28-03-2

DETAILED PARTS LIST
28-03-2
PAGE 1

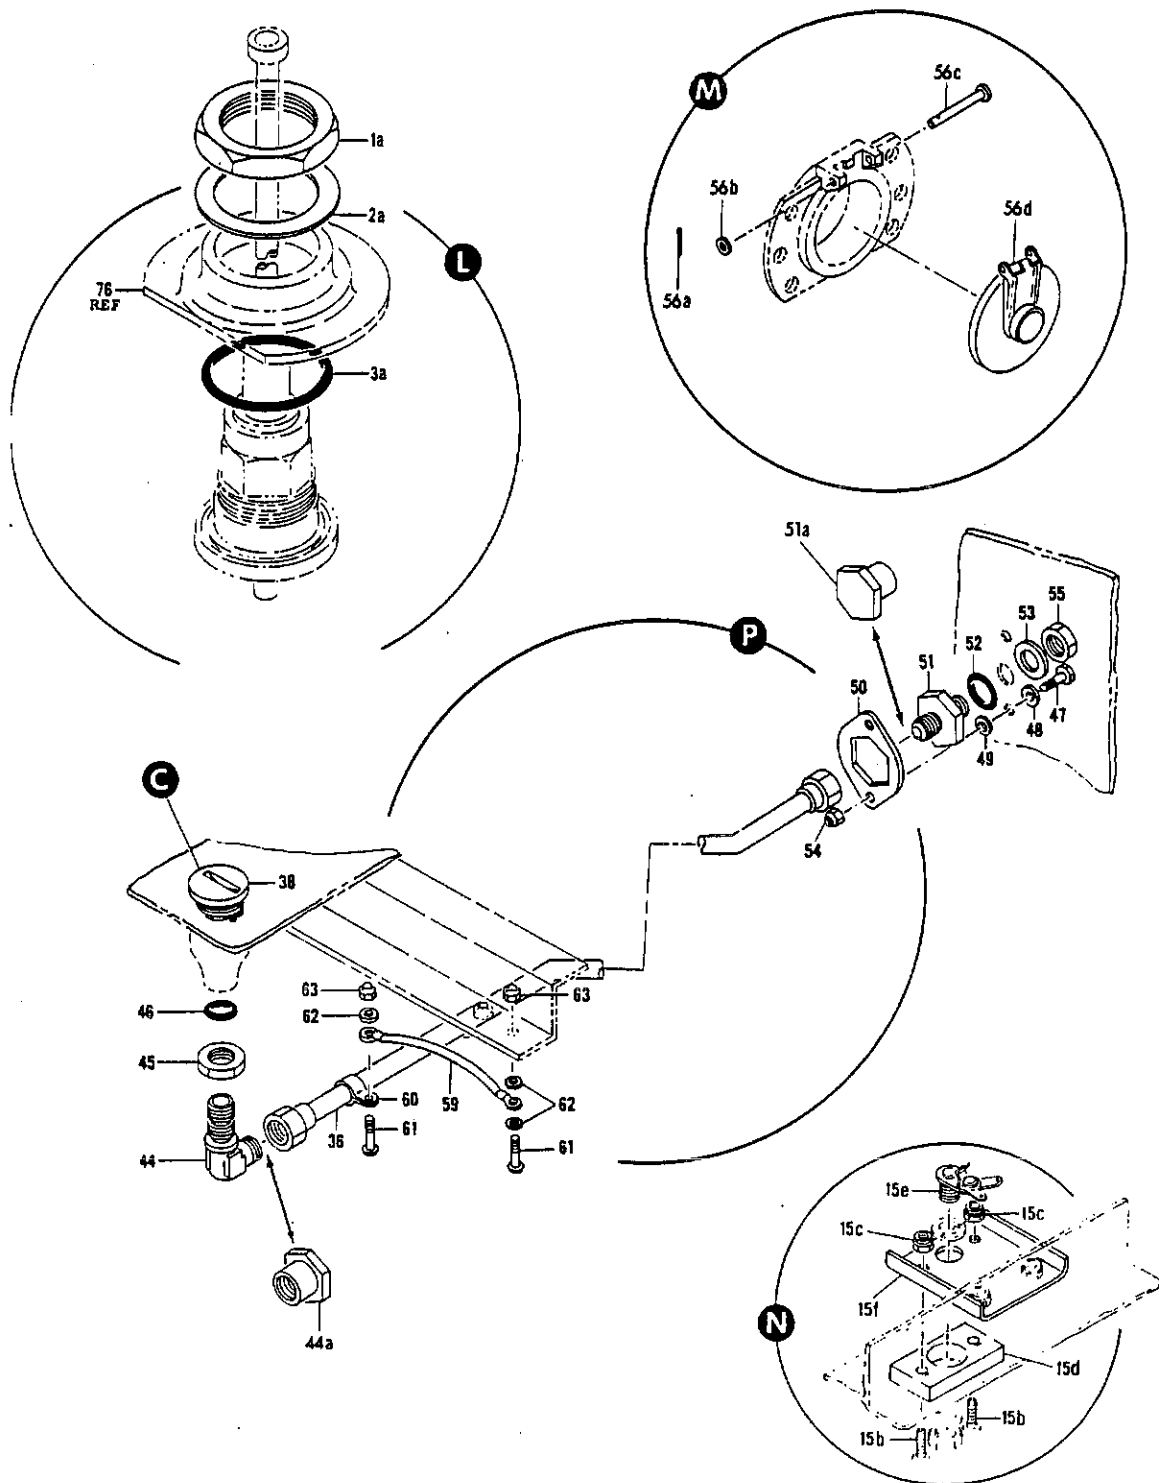


FIGURE 2. EQUIPMENT INSTL. SECTION 22 WING FUEL TANKS (SHEET 3)

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 2 31	66-3948	. GUIDE, FUEL TANK DRIP STICK (RH ONLY)	5199	1
32	BACN10DR24D	. NUT, (LH ONLY)		1
33	AN960PD3016	. WASHER, (LH ONLY)		1
34	MS29513-228	. PACKING, (LH ONLY)		1
35	725500-16	. DRIP STICK ASSY, FUEL LEVEL INDICATOR (V96124) (SAME AS BAC SPEC NO. 10-3298-16) (LH ONLY) (SEE FIG. 14)		RF
35	10-3298-16	. DRIP STICK ASSY, FUEL LEVEL INDICATOR (SAME AS . . . 725500-16 (V96124)) (LH ONLY)		1
R 35	725500-16	. DRIP STICK ASSY, FUEL LEVEL INDICATOR (V96124) (RH. ONLY) (SAME AS BAC SPEC NO. 10-3298-16) (SEE FIG. 14)	5199	RF
R 35	10-3298-16	. DRIP STICK ASSY, FUEL LEVEL INDICATOR (RH ONLY) . . . (SAME AS 72550-16 (V96124))	5199	1
R 36	65-4095-3	. TUBE ASSY, FUEL 3/8 IN. .028 6061-T6 (LH ONLY)		1
R 36	65-4095-4	. TUBE ASSY, FUEL 3/8 IN. .028 6061-T6 (RH ONLY)		1
R	MS21922-6	. SLEEVE		2
R	BACN10CS6D	. NUT		2
R	MS29512-12	. GASKET		1
R	37A MS29512-12	. GASKET, (RH ONLY)		1
38	6-74805	. RECEPTACLE ASSY, PLUG TYPE FUEL NOZZLE GROUNDING. . .		1
39	6-74805	. RECEPTACLE ASSY, PLUG TYPE FUEL NOZZLE GROUNDING (RH ONLY)		1
40	3-98718	. NUT, FUEL NOZZLE GROUNDING RECEPTACLE		1
41	AN936B616B	. WASHER		1
42	6-74806	. SPRING, FUEL NOZZLE GROUNDING RECEPTACLE		1
43	6-74680	. GUIDE, FUEL NOZZLE GROUNDING RECEPTACLE JACK		1
44	MS21908D6	. ELBOW		1
45	BACN10DR6D	. NUT		1
46	MS29512-06	. PACKING		1
47	AN4-5A	. BOLT		2
48	BACS11W4	. SEAL		2
49	AN960PD416	. WASHER		2
50	BACR10Y6D	. FITTING		1
51	6-74658-3000	. FITTING, FLARED TUBE O-RING SEAL		1
52	MS29513-212	. PACKING		1
53	AN960D916	. WASHER		1
54	NAS679A4W	. NUT		2
55	AN924-6D	. NUT		1
56	10-3069	. VALVE ASSY, BAFFLE SWING CHECK		57
56	10-3069-3	. VALVE ASSY, BAFFLE SWING CHECK (SAME AS 2S2068. . . . (OPTIONAL 10-3069-3) (OPTIONAL TO BAC SPEC NO. 10-3069)		57
56	2S2068	. VALVE ASSY, FLANGE MOUNTED SWING CHECK (V99240) (SAME AS BAC SPEC NO. 10-3069-3)		RF
	NAS603-7	. ATTACHING PARTS SCREW, (USED WITH NAS679A3W).		342
	NAS679A3W	. NUT, (USED WITH NAS603-7)		342
	MS20470A6	. RIVET		342
		(OPTIONAL TO NAS603-7 WITH NAS679A3W)		
M 56A	AN381-1-6	. PIN		1
M 56B	NAS620C5	. WASHER		1
M 56C	2S2069-6	. PIN, HINGE (V99240)		1
M 56D	2S2070	. FLAPPER ASSY, (V99240)		1
57	1101	. COCK, (V92003)		3
57	100B6B	. COCK, (OPTIONAL 100B6B (V0167B))		3
58	MS29512-10	. COCK, (V0167B)		3
59	MS25083-2B84	(OPTIONAL TO 1101 (V92003)) . GASKET		1
60	ANT35D6	. JUMPER ASSY		1
61	NAS603-10	. CLAMP		1
62	AN960PD10L	. ATTACHING PARTS SCREW		2
63	NAS679A3W	. WASHER		3
64	10-3297-2	. NUT		2
65	10-3297-2	. NUT, FUEL TANK FILLER		2
66	FC3500-9	. NUT, FUEL TANK FILLER (RH ONLY)		1
		. CAP ASSY, FILLER (V99321) (SAME AS BAC SPEC NO. . . . 10-3297-13)	0101	RF

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
Z	66	38222-2	.	CAP ASSY, FILLER (V99321) (SAME AS BAC SPEC NO.; 10-3297-119)	0299	RF
	66	38222-3	.	CAP ASSY, FILLER (V99321) (SAME AS BAC SPEC NO.; 10-3297-147)	0299	RF
R R	M 66A	37603-339	.	PACKING, (V99321)	0101	1
	M 66A	38283	.	SEAL, (V99321) (OPTIONAL TO 38241 (V99321))	0299	1
	66A	38241	.	SEAL, (V99321) (OPTIONAL 38283 (V99321))	0299	1
	M 66B	AN381-3-8	.	COTTER PIN.	0299	1
	M 66C	38252-12	.	LANYARD, (V99321)	0299	1
	M 66D	MS29523-1	.	HOOK.	0299	1
	67	FC3500-9	.	CAP ASSY, FILLER (V99321) (SAME AS BAC SPEC NO. 10-3297-13) (RH ONLY)	0101	RF
	67	38222-2	.	CAP ASSY, FILLER (V99321) (SAME AS BAC SPEC NO.; 10-3297-119) (RH ONLY)	0299	RF
	67	38222-3	.	CAP ASSY, FILLER (V99321) (SAME AS BAC SPEC NO.; 10-3297-147)	0299	RF
	M 67A	37603-339	.	PACKING, (V99321)	0101	1
R R	M 67A	38283	.	SEAL, (V99321) (OPTIONAL TO 38241 (V99321))	0299	1
	67A	38241	.	SEAL, (V99321) (OPTIONAL 38283 (V99321))	0299	1
	M 67B	AN381-3-8	.	COTTER PIN.	0299	1
	M 67C	38252-12	.	LANYARD, (V99321)	0299	1
	M 67D	MS29523-1	.	HOOK.	0299	1
	68	10-3297-71	.	ADAPTER, FUEL TANK FILLER (RH ONLY)	0101	1
	68	10-3297-126	.	ADAPTER, FUEL TANK FILLER (RH ONLY)	0299	1
	70	10-3297-98	.	ADAPTER, FUEL TANK FILLER (LH ONLY)	0101	1
	70	10-3297-122	.	ADAPTER, FUEL TANK FILLER (LH ONLY)	0299	1
	70	10-3297-99	.	ADAPTER, FUEL TANK FILLER (RH ONLY)	0101	1
	70	10-3297-123	.	ADAPTER, FUEL TANK FILLER (RH ONLY)	0299	1
	72	10-3297-100	.	ADAPTER, FUEL TANK FILLER (LH ONLY)	0101	1
	72	10-3297-124	.	ADAPTER, FUEL TANK FILLER (LH ONLY)	0299	1
	72	10-3297-101	.	ADAPTER, FUEL TANK FILLER (RH ONLY)	0101	1
	72	10-3297-125	.	ADAPTER, FUEL TANK FILLER (RH ONLY)	0299	1
	73	MS29513-240	.	PACKING.		2
	74	MS29513-240	.	PACKING, (RH ONLY).		1
	75			PANEL INSTL, SECTION 12 WING LOWER (LH) (FOR REF SEE. FIG. 6)		RF
	75			PANEL INSTL, SECTION 12 WING LOWER (RH) (FOR REF SEE. FIG. 6)		RF
	75					

MISSING ITEM NUMBERS ARE NOT APPLICABLE



DETAILED PARTS LIST
28-03-6
PAGE 0

NOV 21/90

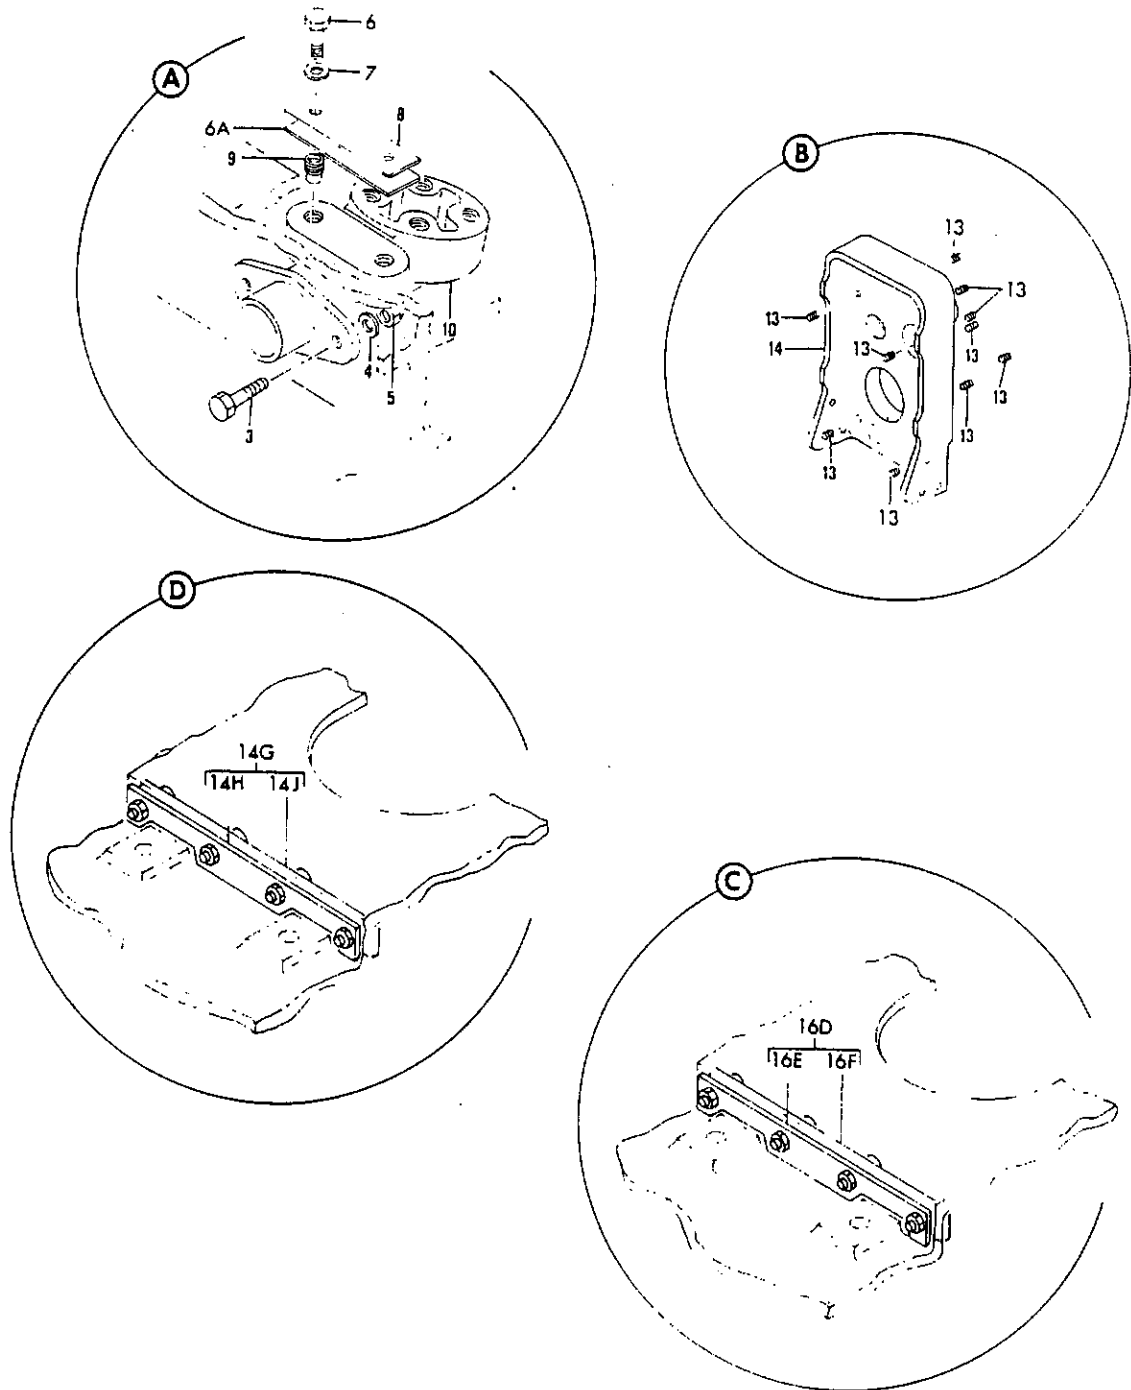


FIGURE 6. PANEL INSTL, SECTION 12 WING LOWER (SHEET 2)

NOV 21/90

28-03-6

DETAILED PARTS LIST
28-03-6
PAGE 1

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
6	65-1047-1	PANEL INSTL, SECTION 12 WING LOWER (LH) (SEE 57-3, FIG. 2, ITEM 7)		RF
	65-1047-2	PANEL INSTL, SECTION 12 WING LOWER (RH) (SEE 57-3, FIG. 2, ITEM 7)		RF
	64-1009-17	. CHORD INSTL, BODY BUTTOCK LINE 70.5 WING RIB LOWER. (LH ONLY)		1
	64-1009-18	. CHORD INSTL, BODY BUTTOCK LINE 70.5 WING RIB LOWER. (RH ONLY)		1
1	9-61756	. . INTERCONNECTOR ASSY, BODY BUTTOCK LINE 70.5 WING. FUEL CELL		2
2	9-61756-2	. . INTERCONNECTOR ASSY, BODY BUTTOCK LINE 70.5 WING. FUEL CELL		2
2A	9-61756-2	. . INTERCONNECTOR ASSY, BODY BUTTOCK LINE 70.5 WING. FUEL CELL		3
		ATTACHING PARTS		
3	AN4-12A	. . BOLT, (USED WITH 9-61756)		4
3	AN4-10A	. . BOLT, (NOT USED WITH 9-61756)		10
4	AN960PD416	. . WASHER.		14
5	NAS679A4W	. . NUT		14
6	BACB30AK4-6	. . BOLT, (USED WITH 9-61756)		4
6	BACB30AK4-5	. . BOLT, (NOT USED WITH 9-61756)		10
7	AN960PD416L	. . WASHER.		14
8	BACS40B13-49	. . SHIM.		AR
8A	64-1009-102	. . FILLER, BODY BUTTOCK LINE 70.5 WING RIB LOWER CHORD		7
		-----*		
9	NAR1-4-28	. . . INSERT, (V98004).		6
10	9-61756-1	. . . INTERCONNECTOR, BODY BUTTOCK LINE 70.5 WING FUEL CELL (USED ON 9-61756)		1
10	9-61756-3	. . . INTERCONNECTOR, BODY BUTTOCK LINE 70.5 WING FUEL CELL (NOT USED ON 9-61756)		1
12A	65-1048-1	. PANEL INSTL, BODY BUTTOCK LINE 70.5 TO WING STATION . 360 WING LOWER (FUEL ONLY) (LH ONLY)	0150	1
12A	65-1048-1	. PANEL INSTL, BODY BUTTOCK LINE 70.5 TO WING STATION . 360 WING LOWER (VARIABLE DWG;65-1048-5001) (LH ONLY) (SEE 57-05, FIG. 14)	5199	1
12A	65-1048-2	. PANEL INSTL, BODY BUTTOCK LINE 70.5 TO WING STATION . 360 WING LOWER (FUEL ONLY) (RH ONLY)	0150	1
12A	65-1048-2	. PANEL INSTL, BODY BUTTOCK LINE 70.5 TO WING STATION . 360 WING LOWER (VARIABLE DWG;65-1048-5002) (RH ONLY) (SEE 57-05, FIG. 14)	5199	1
	65-5957-1	. . SUPPORT INSTL, LOWER PANEL BOOST PUMP (LH ONLY)		1
	65-5957-2	. . SUPPORT INSTL, LOWER PANEL BOOST PUMP (RH ONLY)		1
12B	5-96357-3000	. . . SUPPORT ASSY, FUEL OVERRIDE BOOSTER PUMP.		1
13	BACS13P4CN3	. . . SLEEVE.		10
14	5-96357-3001	. . . SUPPORT, FUEL OVERRIDE BOOSTER PUMP		1
14A	5-84031-3029	. . . SUPPORT, BOOST PUMP (LH ONLY)	0150	1
14A	5-84031-3047	. . . SUPPORT, (LH ONLY)	5199	1
14A	5-84031-3030	. . . SUPPORT, BOOST PUMP (RH ONLY)	0150	1
14A	5-84031-3048	. . . SUPPORT, (RH ONLY)	5199	1
14B	65-1051-1	. . SPLICE INSTL, WING BUTTOCK LINE 59.24 LOWER (FUEL ONLY) (LH ONLY)	0150	1
14B	65-1051-1	. . SPLICE INSTL, WING BUTTOCK LINE 59.24 LOWER . . . (VARIABLE DWG;65-1051-5001) (LH ONLY)	5199	1
14B	65-1051-2	. . SPLICE INSTL, WING BUTTOCK LINE 59.24 LOWER (RH ONLY)	0150	1
14B	65-1051-2	. . SPLICE INSTL, WING BUTTOCK LINE 59.24 LOWER . . . (VARIABLE DWG;65-1051-5002) (RH ONLY)	5199	1
14C	5-84029-3047	. . . SUPPORT ASSY, (LH ONLY)	0450	1
		(OPTIONAL 5-84029-3073)		
14C	5-84029-3061	. . . SUPPRT ASSY, BOOST PUMP (LH ONLY)	0103	1
14C	5-84029-3073	. . . SUPPORT ASSY, (LH ONLY)	0450	1
		(OPTIONAL TO 5-84029-3047)		
14C	5-84029-3073	. . . SUPPORT ASSY, (LH ONLY)	5199	1
14C	5-84029-3048	. . . SUPPORT ASSY, (RH ONLY)	0450	1
		(OPTIONAL 5-84029-3074)		
14C	5-84029-3062	. . . SUPPORT ASSY, BOOST PUMP (RH ONLY)	0103	1
14C	5-84029-3074	. . . SUPPORT ASSY, (RH ONLY)	0450	1
		(OPTIONAL TO 5-84029-3048)		
14C	5-84029-3074	. . . SUPPORT ASSY, (RH ONLY)	5199	1
14H	65-43747-2	. . . FILLER, (ADDED BY SB 2103) (USED ON . . . 5-84029-3019, -3025, -3035, -3020, -3026, -3036, -3047, -3048, -3061, -3062, -3073 AND -3074)	0450	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG


FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
6	16G	5-84026-3023	. . SUPPORT ASSY, BOOST PUMP.							0450	1
			(OPTIONAL 5-84026-3014)								
	16G	5-84026-3014	. . SUPPORT ASSY, BOOST PUMP.							0450	1
			(OPTIONAL TO 5-84026-3023)								
	16G	5-84026-3014	. . SUPPORT ASSY, BOOST PUMP.							0103	1
	16G	5-84026-3023	. . SUPPORT ASSY, BOOST PUMP.							0450	1
			(OPTIONAL TO 5-84026-3024)								
	16G	5-84026-3024	. . SUPPORT ASSY.							0450	1
			(OPTIONAL TO 5-84026-3023)								
	16G	5-84026-3024	. . SUPPORT ASSY.							5199	1
		65-1050-1	. SPlice INSTL, LOWER WING PANEL BODY BUTTOCK LINE 70.5							0150	1
			OUTBOARD (LH ONLY)								
		65-1050-1	. SPlice INSTL, LOWER WING PANEL BODY BUTTOCK LINE 70.5							5199	1
			OUTBOARD (VARIABLE DWG;65-1050-5001) (LH ONLY)								
		65-1050-2	. SPlice INSTL, LOWER WING PANEL BODY BUTTOCK LINE 70.5							0150	1
			OUTBOARD (RH ONLY)								
		65-1050-1	. SPlice INSTL, LOWER WING PANEL BODY BUTTOCK LINE 70.5							5199	1
			OUTBOARD (VARIABLE DWG;65-1050-5002) (RH ONLY)								
	16H	65-6111-15	. . ZEE ASSY, WING BODY FAIRING GAP COVER SUPPORT (LH .								1
			ONLY)								
	16H	65-6111-16	. . ZEE ASSY, WING BODY FAIRING GAP COVER SUPPORT (RH .								1
			ONLY)								
	17	9-61182-3007	. DOOR INSTL, LOWER SURFACE OVERRIDE BOOST PUMP ACCESS								1
			(LH ONLY) (SEE 57-3, FIG. 19)								
	17	9-61182-3008	. DOOR INSTL, LOWER SURFACE OVERRIDE BOOST PUMP ACCESS								1
			(RH ONLY) (SEE 57-3, FIG. 19)								
	18	9-62529-3004	. DOOR INSTL, WING BUTTOCK LINE 129.62 FORWARD LOWER. .								1
			SURFACE BOOST PUMP ACCESS (LH ONLY) (SEE 57-3,								
			FIG. 19)								
	18	9-62529-3005	. DOOR INSTL, WING BUTTOCK LINE 129.62 FORWARD LOWER. .								1
			SURFACE BOOST PUMP ACCESS (RH ONLY) (SEE 57-3,								
			FIG. 19)								
	19	9-61152-3007	. DOOR INSTL, WING BUTTOCK LINE 129.62 AFT LOWER. . . .								1
			SURFACE BOOST PUMP ACCESS (LH ONLY) (SEE 57-3,								
			FIG. 19)								
	19	9-61152-3008	. DOOR INSTL, WING BUTTOCK LINE 129.62 AFT LOWER. . . .								1
			SURFACE BOOST PUMP ACCESS (RH ONLY) (SEE 57-3,								
			FIG. 19)								
	20	9-62530-3007	. DOOR INSTL, WING STATION 360 AFT LOWER SURFACE BOOST								1
			PUMP ACCESS (LH ONLY) (SEE 57-3, FIG. 19)								
	20	9-62530-3008	. DOOR INSTL, WING STATION 360 AFT LOWER SURFACE BOOST								1
			PUMP ACCESS (RH ONLY) (SEE 57-3, FIG. 19)								
	21	9-62531-3004	. DOOR INSTL, WING STATION 360 FORWARD LOWER SURFACE. .								1
			BOOST PUMP ACCESS (LH ONLY) (SEE 57-3, FIG. 19)								
	21	9-62531-3005	. DOOR INSTL, WING STATION 360 FORWARD LOWER SURFACE. .								1
			BOOST PUMP ACCESS (RH ONLY) (SEE 57-3, FIG. 19)								
	22	65-56931-1	. DOOR INSTL, SURFACE DRY BAY (DELETED BY SB 2735) (SEE							0103	1
			57-3, FIG. 22)								
	22	65-56931-1	. DOOR INSTL, SURFACE DRY BAY (ADDED BY SB 2487 AND . .							0450	1
			DELETED BY SB 2735) (SEE 57-3, FIG. 22)								
	22	65-56931-7	. DOOR INSTL, SURFACE DRY BAY (DELETED BY SB 2735) (SEE							0450	1
			57-3, FIG. 22)								
	22	65-56931-11	. DOOR INSTL, SURFACE DRY BAY (ADDED BY SB 2735) (SEE .							0103	1
			57-3, FIG. 22)								
	22	65-56931-13	. DOOR INSTL, WING LOWER SURFACE DRY BAY (SEE 57-3, . .							5199	1
			FIG. 22)								
	23	90-10018-1	. DOOR INSTL, FRONT SPAR STATION 683.5 TO 666.1 INBOARD								1
			WING LOWER PANEL (LH ONLY) (SEE 57-3, FIG. 22)								
	23	90-10018-2	. DOOR INSTL, FRONT SPAR STATION 683.5 TO 666.1 INBOARD								1
			WING LOWER PANEL (RH ONLY) (SEE 57-3, FIG. 22)								
	24	50-11333-51	. DOOR INSTL, WING LOWER SURFACE DRY BAY REFUELING (LH								1
			ONLY) (SEE 57-3, FIG. 20A)								
	24	50-11333-52	. DOOR INSTL, WING LOWER SURFACE DRY BAY REFUELING (RH								1
			ONLY) (SEE 57-3, FIG. 20A)								
	25	69-2504-1	. DOOR INSTL, WING LOWER SURFACE TANK ACCESS (LH ONLY)								2
			(SEE 57-3, FIG. 21 AND 21A)								
	25	69-2504-2	. DOOR INSTL, WING LOWER SURFACE TANK ACCESS (RH ONLY)								2
			(SEE 57-3, FIG. 21 AND 21A)								
	26	69-2505-1	. DOOR INSTL, WING LOWER SURFACE DRIP STICK (LH ONLY) .								3
			(SEE 57-3, FIG. 21 AND 21A)								
	26	69-2505-2	. DOOR INSTL, WING LOWER SURFACE DRIP STICK (RH ONLY) .								3
			(SEE 57-3, FIG. 21 AND 21A)								
	27	69-2505-1	. DOOR INSTL, WING LOWER SURFACE DRIP STICK (LH ONLY) .							0150	1
			(SEE 57-3, FIG. 21 AND 21A)								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

R
R
R



PARTS CATALOG

R R R R	FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE								EFF FROM TO	UNITS PER ASSY
				1	2	3	4	5	6	7			
	6	27	69-2505-2	.	DOOR	INSTL,	WING	LOWER	SURFACE	DRIP	STICK (RH ONLY)	0150	1
					(SEE	57-3,	FIG.	21	AND	21A)			
		27	69-3002-3000	.	DOOR	INSTL,	WING	LOWER	SURFACE	TANK	ACCESS (SEE 57-3,	5199	1
					FIG.	21	AND	21A)					
		28	69-3002-3000	.	DOOR	INSTL,	WING	LOWER	SURFACE	TANK	ACCESS (SEE 57-3,		8
					FIG.	21	AND	21A)					
MISSING ITEM NUMBERS ARE NOT APPLICABLE													

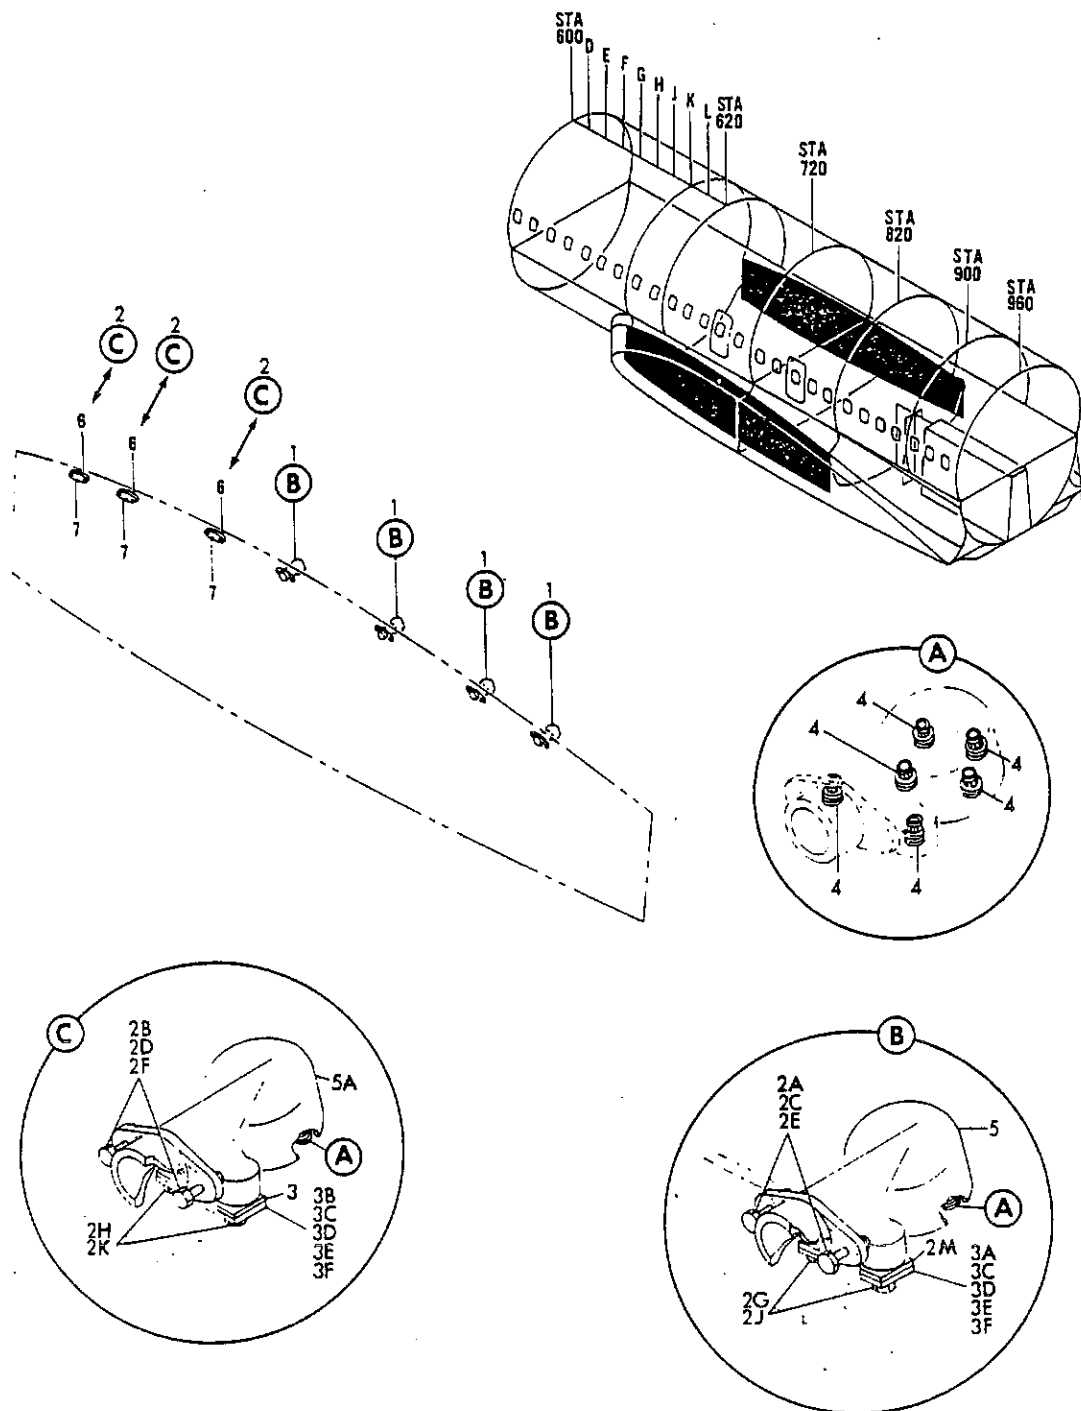



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
12	64-1009-19		CHORD INSTL, BODY BUTTOCK LINE 70.5 WING RIB UPPER (LH) (SEE 57-3, FIG. 13, ITEM 13)		RF
	64-1009-20		CHORD INSTL, BODY BUTTOCK LINE 70.5 WING RIB UPPER (RH) (SEE 57-3, FIG. 13, ITEM 13)		RF
1	9-61756-2		. INTERCONNECTOR ASSY, BODY BUTTOCK LINE 70.5 WING FUEL CELL		4
2	9-61756-2		. INTERCONNECTOR ASSY, BODY BUTTOCK LINE 70.5 WING FUEL CELL		3
			ATTACHING PARTS		
2A	AN4-10A		. BOLT.		8
2B	AN4-10A		. BOLT.		6
2C	AN960PD416		. WASHER.		8
2D	AN960PD416		. WASHER.		6
2E	NAS679A4W		. NUT		8
2F	NAS679A4W		. NUT		6
2G	BACB30AK4-5		. BOLT.		8
2H	BACB30AK4-5		. BOLT.		6
2J	AN960PD416L		. WASHER.		8
2K	AN960PD416L		. WASHER.		6
2M	64-1009-102		. FILLER, BODY BUTTOCK LINE 70.5 WING RIB UPPER CHORD .		4
3	64-1009-102		. FILLER, BODY BUTTOCK LINE 70.5 WING RIB UPPER CHORD .		3
3A	BACS40B13-49		. SHIM.		AR
3B	BACS40B13-49		. SHIM.		AR
3C	64-1009-189		. SHIM.		AR
3D	64-1009-190		. SHIM.		AR
3E	64-1009-191		. SHIM.		AR
3F	64-1009-192		. SHIM.		AR
			-----*		
4	NAR1-4-28		. . INSERT, (V98004).		6
5	9-61756-3		. . INTERCONNECTOR, BODY BUTTOCK LINE 70.5 WING FUEL . CELL		4
5A	9-61756-3		. . INTERCONNECTOR, COVER		3
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

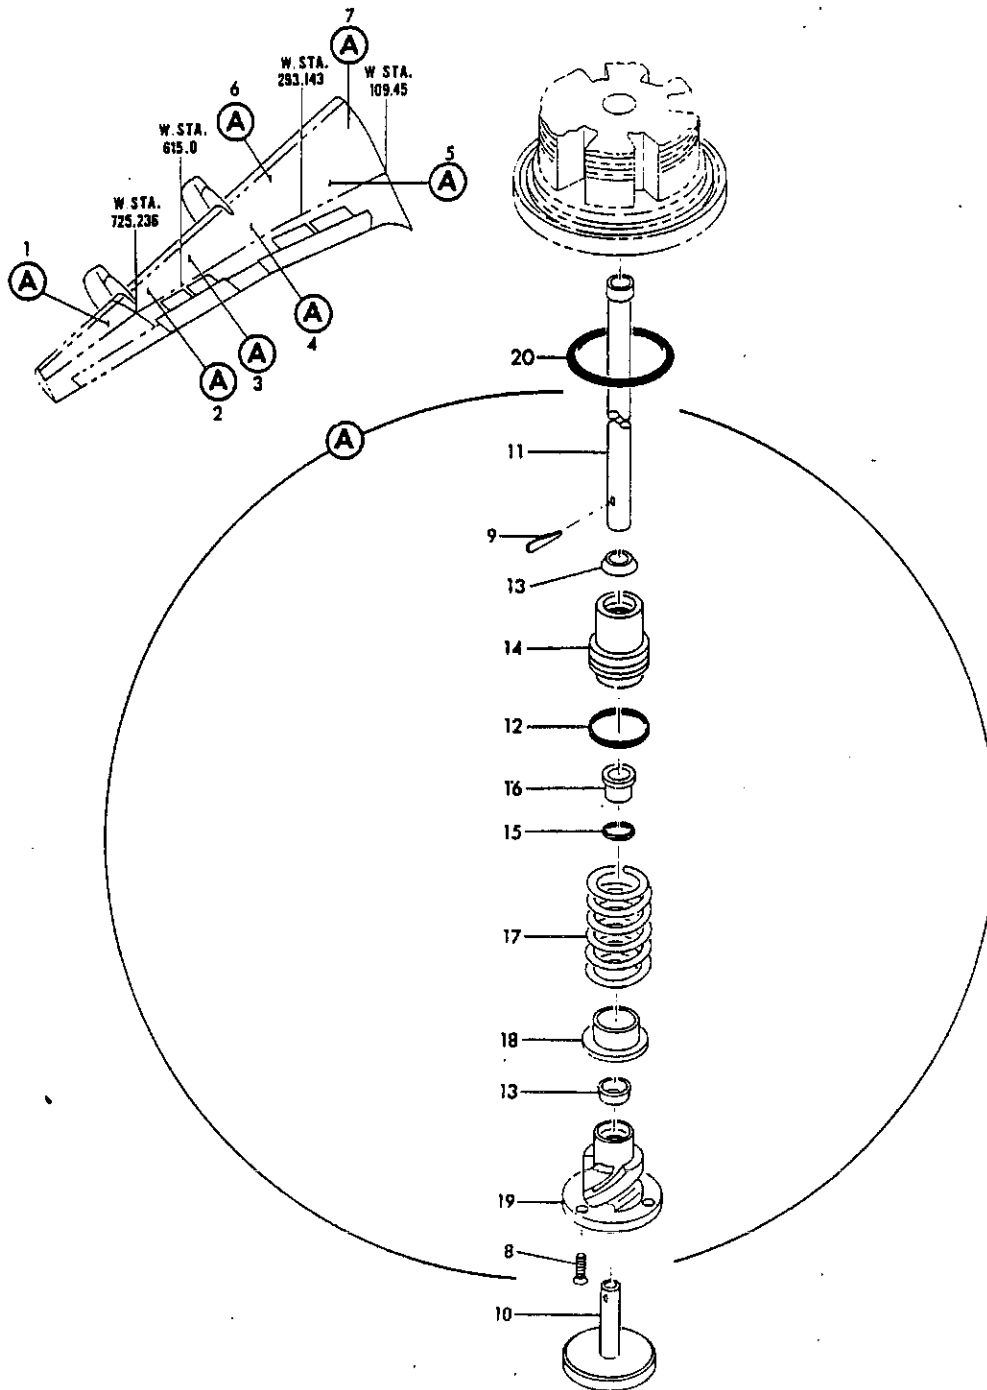


FIGURE 14. DRIP STICK ASSY. FUEL LEVEL INDICATOR



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
			1	2	3	4	5	6	7			
R R	14	1	725500-1	DRIP STICK ASSY, FUEL LEVEL INDICATOR (V96124) (SAME AS BAC SPEC NO. 10-3298-1) (SEE FIG. 1, ITEM 11)								RF
		2	725500-2	DRIP STICK ASSY, FUEL LEVEL INDICATOR (V96124) (SAME AS BAC SPEC NO. 10-3298-2) (SEE FIG. 2, ITEM 4)								RF
		3	725500-3	DRIP STICK ASSY, FUEL LEVEL INDICATOR (V96124) (SAME AS BAC SPEC NO. 10-3298-3) (SEE FIG. 2, ITEM 5)								RF
		4	725500-3	DRIP STICK ASSY, FUEL LEVEL INDICATOR (V96124) (SAME AS BAC SPEC NO. 10-3298-3) (SEE FIG. 2, ITEM 6)							0150	RF
		5	725500-7	DRIP STICK ASSY, FUEL LEVEL INDICATOR (V96124) (SAME AS BAC SPEC NO. 10-3298-7) (SEE FIG. 2, ITEM 7)								RF
		6	725500-6	DRIP STICK ASSY, FUEL LEVEL INDICATOR (V96124) (SAME AS BAC SPEC NO. 10-3298-6) (SEE FIG. 2, ITEM 25)								RF
		7	725500-16	DRIP STICK ASSY, FUEL LEVEL INDICATOR (V96124) (SAME AS BAC SPEC NO. 10-3298-16) (LH ONLY) (SEE FIG. 2, ITEM 35)								RF
	M	8	AN507-B32R8	. SCREW								3
	M	9	725505	. PIN, BAYONET (V96124)								1
	M	10	725522	. HEAD, (V96124)								1
		10	725522	. HEAD, (V96124)								1
	M	11	725503-1	. ROD, CALIBRATED (V96124) (USED ON 725500-1)								1
	M	11	725503-2	. ROD, CALIBRATED (V96124) (USED ON 725500-2)								1
	M	11	725503-3	. ROD, CALIBRATED (V96124) (USED ON 725500-3)								1
	M	11	725503-7	. ROD, CALIBRATED (V96124) (USED ON 725500-7)								1
	M	11	725503-6	. ROD, CALIBRATED (V96124) (USED ON 725500-6)								1
	M	11	725503-16	. ROD, CALIBRATED (V96124) (USED ON 725500-16)								1
	M	12	MS29513-018	. PACKING								1
	M	13	725521	. WIPER, SLEEVE (V96124)								2
	M	14	725507	. SLEEVE, (V96124)								1
	M	15	MS29513-012	. PACKING								1
	M	16	725509	. BOOT, SEAL (V96124)								1
	M	17	725516	. SPRING, MAIN (V96124)								1
	M	18	725517	. GUIDE, MAIN SPRING (V96124)								1
	M	19	725511	. BAYONET, (V96124)								1
	M		725500-9	. BODY ASSY, (V96124)								RF
	M	20	MS29513-129	. . PACKING								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE												

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 04
REMOVABLE FUEL CELLS

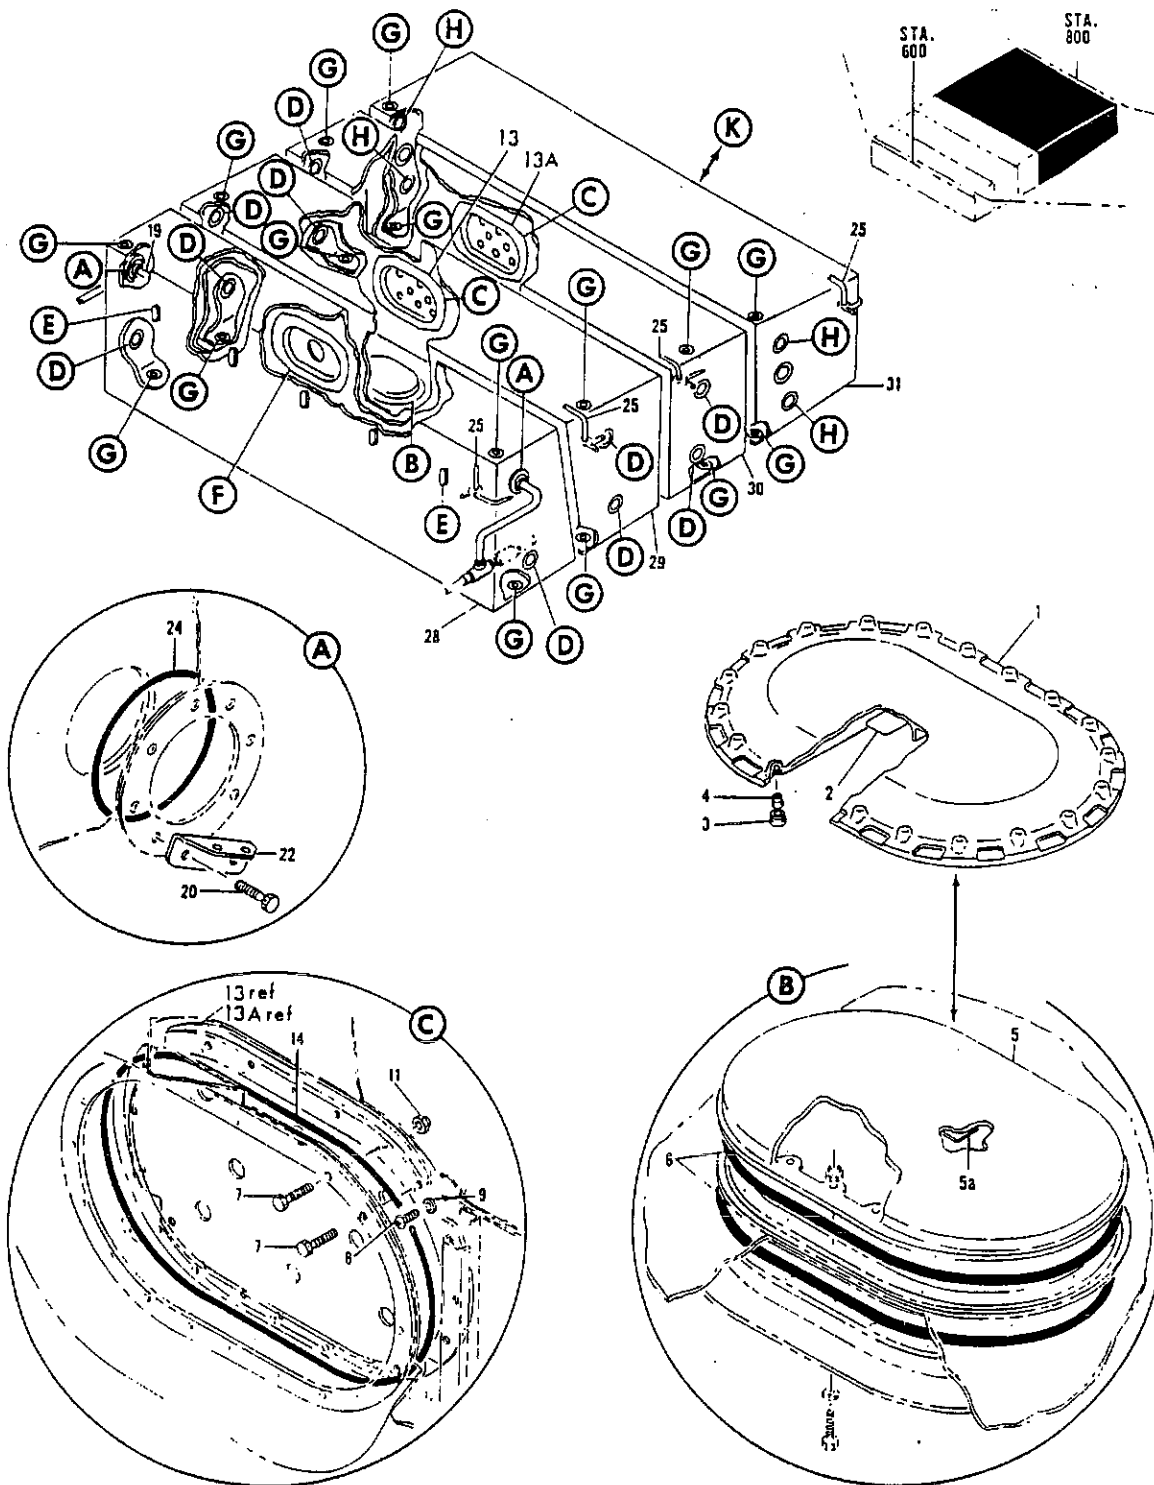


FIGURE 1. TANK INSTL, WING CENTER SECTION FUEL (SHEET 1)

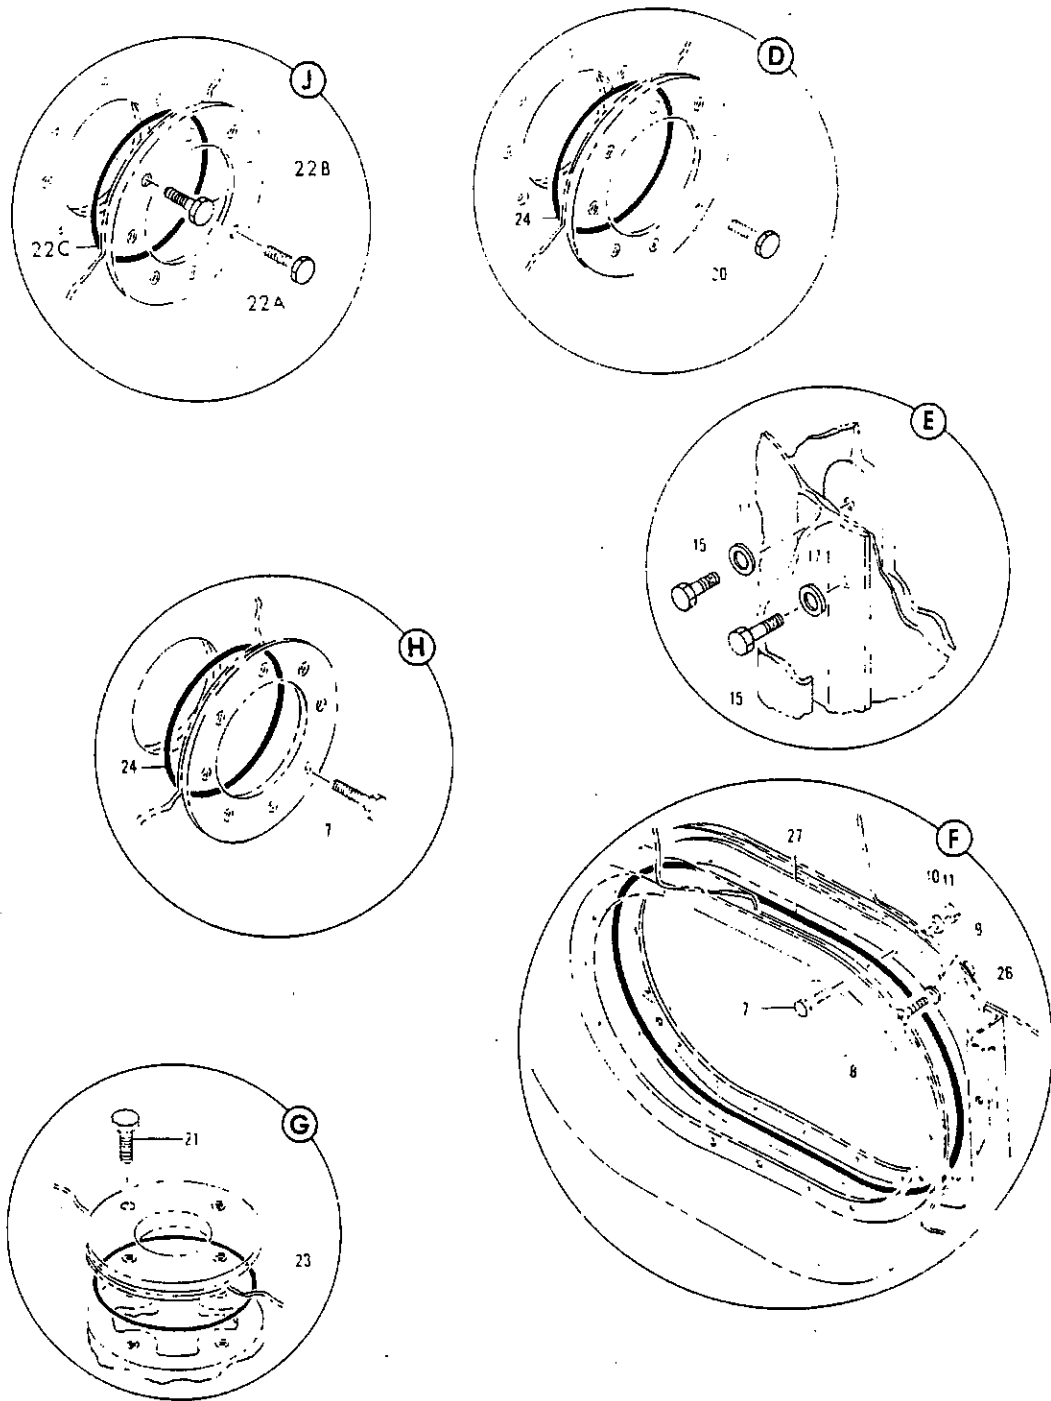


FIGURE 1. TANK INSTL. WING CENTER SECTION FUEL (SHEET 2)

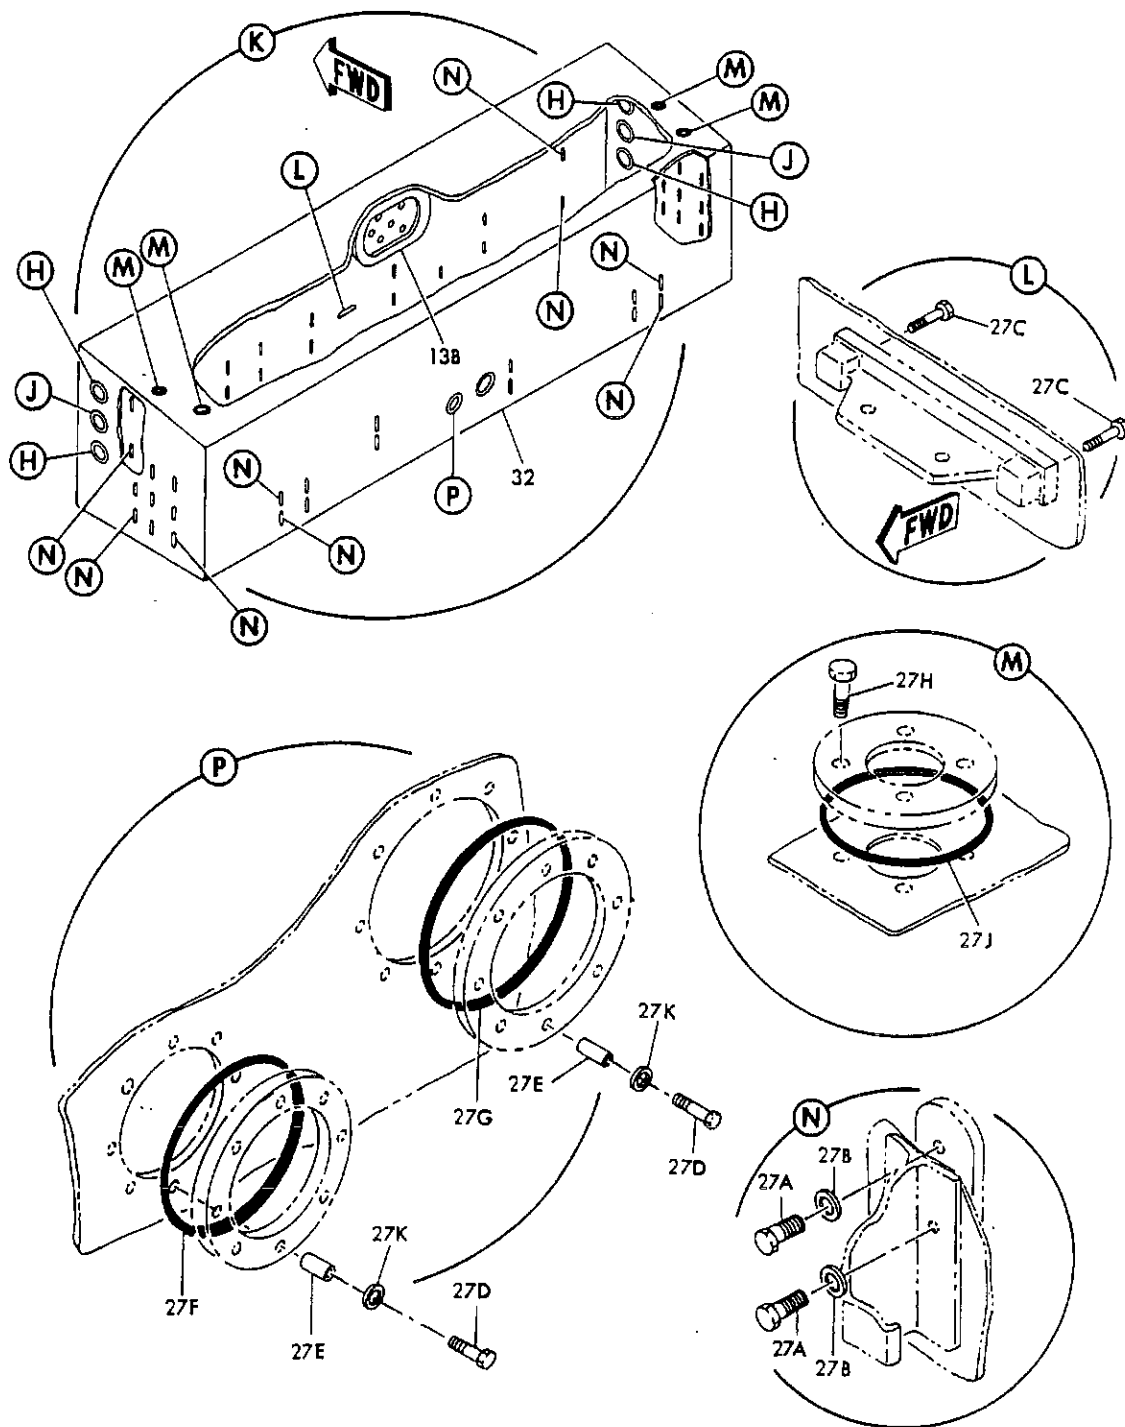


FIGURE 1. WING CENTER SECTION FUEL TANK INSTALLATION (SHEET 3)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
1	65-2027	TANK INSTL, WING CENTER SECTION FUEL (SEE 57-6, FIG. 1, ITEM 1)		RF
1	65-26860-2000	. DOOR ASSY, FUEL TANK ACCESS BLADDER (OPTIONAL 5-88467-3)		1
	BACB30KZ4-45	ATTACHING PARTS		20
	AN960D416	. BOLT.		20
		. WASHER.		
2	BAC27CWG3	. . . MARKER-ALUMINUM FOIL, ACCESS DOOR FITTING		1
3	63-8497	. . . RETAINER ASSY, TANK ACCESS CAST DOOR NUT.		20
4	K19079-4	. . . NUT, SPECIAL (V15653)		20
		(OPTIONAL 12LH3614-048 (V72962))		
4	12LH3614-048	. . . NUT, SPECIAL (V72962)		20
		(OPTIONAL TO K19079-4 (V15653))		
5	5-88467-3	. DOOR ASSY, FUEL TANK ACCESS		1
		(OPTIONAL TO 65-26860-2000)		
	BACB30KZ4-41	ATTACHING PARTS		20
	AN960D416L	. BOLT.		20
	NAS679A4W	. WASHER.		20
		. NUT		
5A	BACM10M31-1AMU	. . . MARKER-ALUMINUM FOIL, ACCESS DOOR FITTING		1
6	6-49783	. PACKING, TANK A FUEL CELL ACCESS DOOR O-RING.		2
7	BACB30KZ4-41	. BOLT.		92
8	NKN222-10	. SCREW, SELF LOCKING (V02615).		12
9	BACW10P10AL	. WASHER.		12
10	AN960D416L	. WASHER.		4
11	NAS679A4W	. NUT		52
13	65-5227-2	. DOOR ASSY, FUEL TANK SPANWISE BEAM.		1
13A	65-5227-2	. DOOR ASSY, SPANWISE BEAM.		1
14	6-49783	. PACKING, TANK A FUEL CELL ACCESS DOOR O-RING.		2
15	BACB30AK4-5	. BOLT.		10
17	AN960D416	. WASHER.		10
19	65-6126	. TUBING INSTL, SECTION 21 FUEL CROSSFEED (SEE 28-1, . . . FIG. 33)		1
		ATTACHING PARTS		
20	BACB30KZ4-33	. BOLT.		96
21	NAS564-27	. BOLT.		64
22	66-4827	. BRACKET, FUEL MANIFOLD TUBE SUPPORT		2
23	MS29513-234	. PACKING		16
24	MS29513-253	. PACKING		16
25	65-2027-6	. CORD, WING CENTER SECTION FUEL TANK CELL LACING		4
26	69-4714-1	. DOOR, FUEL TANK SPANWISE BEAM		1
27	6-49783	. PACKING, TANK A FUEL CELL ACCESS DOOR O-RING.		1
28	10-60020-34	. CELL ASSY, NON SELF SEALING FUEL TANK NO. 4	0150	1
		(OPTIONALS BAC SPEC NO. 10-60020-4, 10-60020-11)		
28	10-60020-11	. CELL ASSY, NON SELF SEALING FUEL TANK NO. 4	0150	1
		(OPTIONAL TO BAC SPEC NO. 10-60020-34)		
28	10-60020-4	. CELL ASSY, NON SELF SEALING FUEL TANK NO. 4	0150	1
		(OPTIONAL TO BAC SPEC NO. 10-60020-34)		
28	10-60020-34	. CELL ASSY, NON SELF SEALING FUEL TANK NO. 4	5199	1
29	10-60020-35	. CELL ASSY, NON SELF SEALING FUEL TANK NO. 5	5199	1
30	10-60020-36	. CELL ASSY, NON SELF SEALING FUEL TANK NO. 6	0150	1
		(OPTIONALS BAC SPEC NO. 10-60020-13, 10-60020-6)		
30	10-60020-13	. CELL ASSY, NON SELF SEALING FUEL TANK NO. 6	0150	1
		(OPTIONAL TO BAC SPEC NO. 10-60020-36)		
30	10-60020-6	. CELL ASSY, NON SELF SEALING FUEL TANK NO. 6	0150	1
		(OPTIONAL TO BAC SPEC NO. 10-60020-36)		
30	10-60020-36	. CELL ASSY, NON SELF SEALING FUEL TANK NO. 6	5199	1
31	10-60020-37	. CELL ASSY, NON SELF SEALING FUEL TANK NO. 7	0150	1
		(OPTIONALS BAC SPEC NO. 10-60020-14, 10-60020-7)		
31	10-60020-14	. CELL ASSY, NON SELF SEALING FUEL TANK NO. 7	0150	1
		(OPTIONAL TO BAC SPEC NO. 10-60020-37)		
31	10-60020-7	. CELL ASSY, NON SELF SEALING FUEL TANK NO. 7	0150	1
		(OPTIONAL TO BAC SPEC NO. 10-60020-37)		
31	10-60020-37	. CELL ASSY, NON SELF SEALING FUEL TANK NO. 7	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



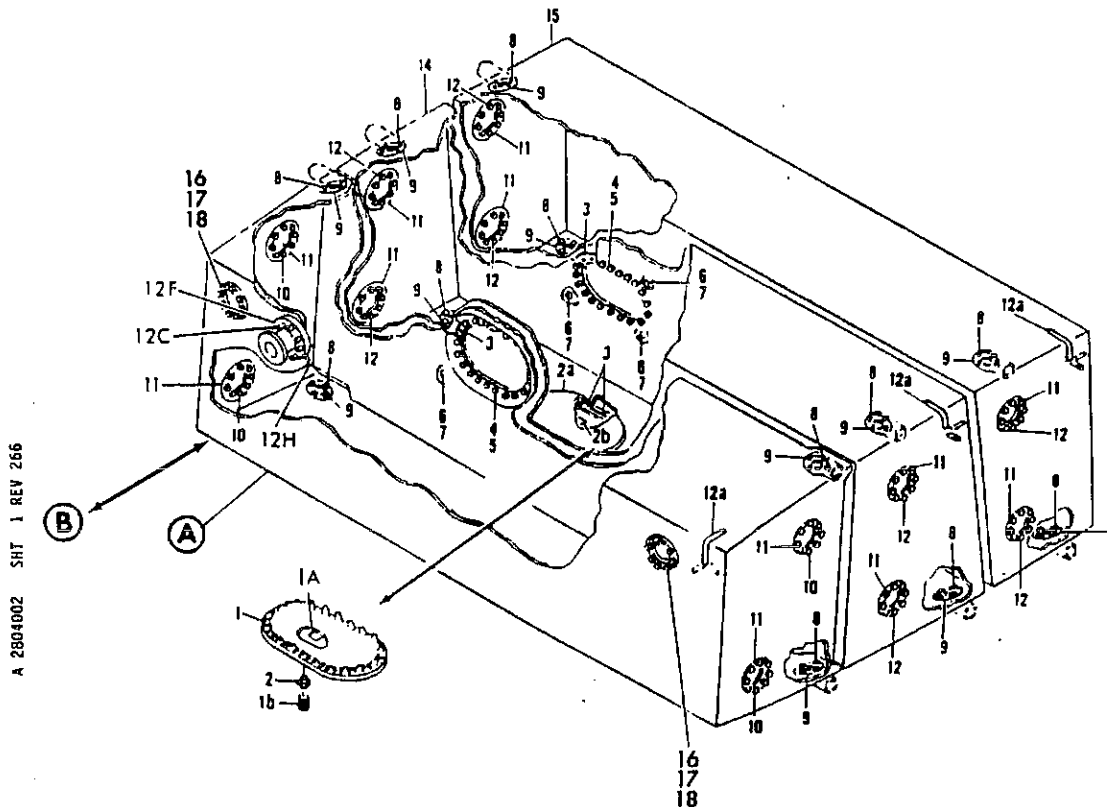


FIGURE 2. TANK INSTL, WING CENTER SECTION FUEL

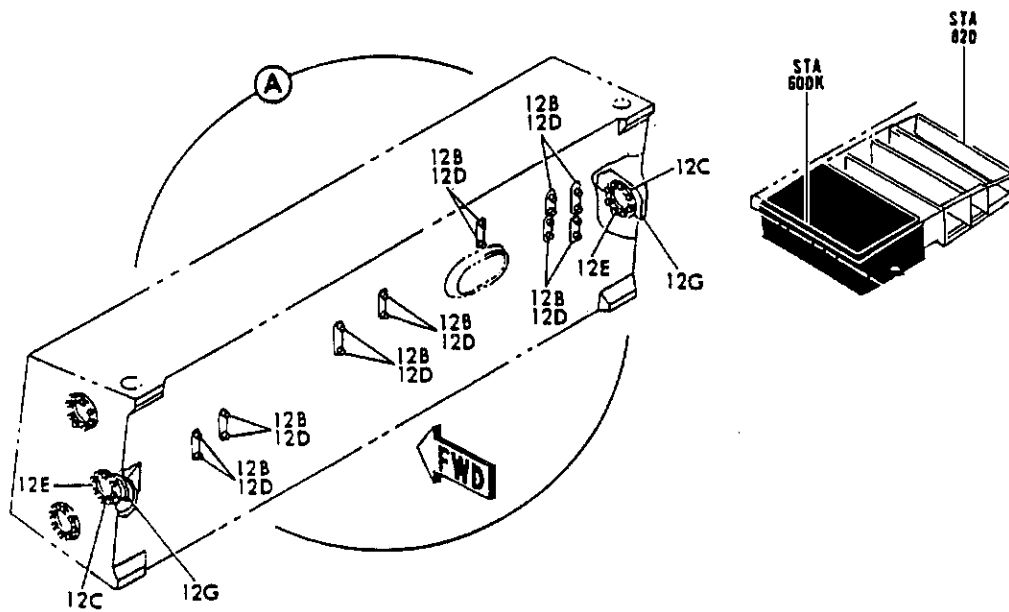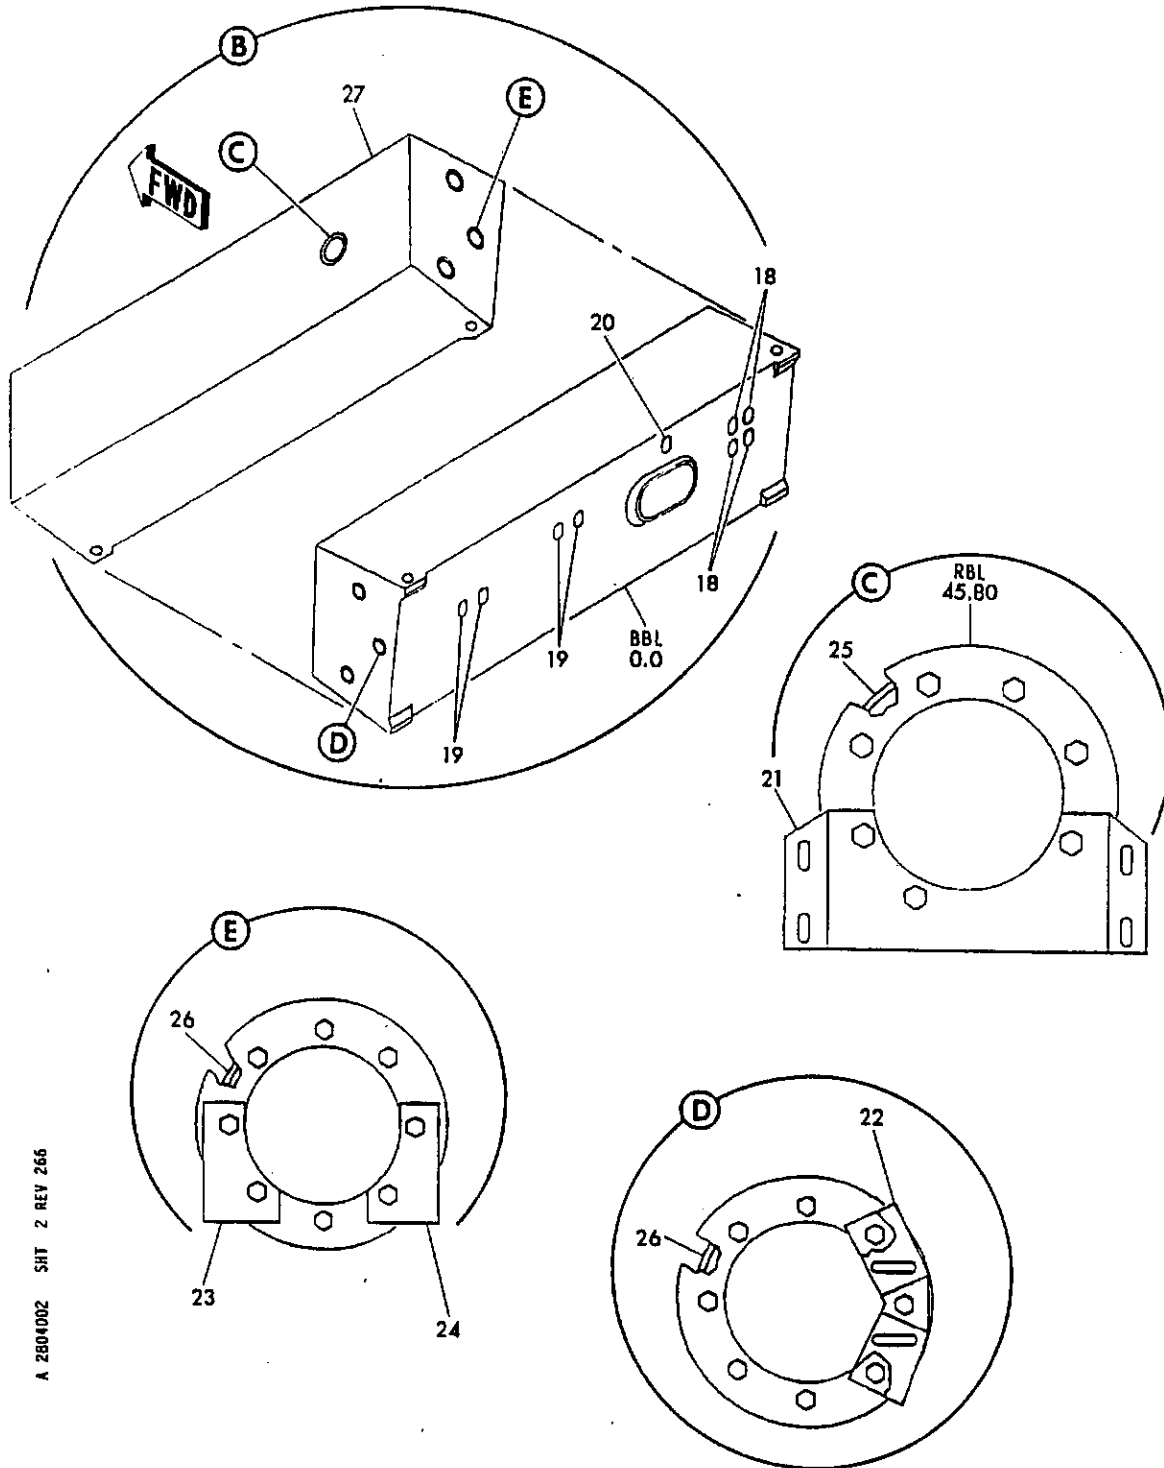

A 2804002 SHT 2 REV 266

FIGURE 2. TANK INSTL, WING CENTER SECTION FUEL (SHEET 2)

NOV 21/95

28-04-2

DETAILED PARTS LIST
28-04-2
PAGE 1

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2	65-2027-3	TANK INSTL, WING CENTER SECTION FUEL (SEE 57-6, FIG. 1, ITEM 2)		RF
1	65-26860-2000	. DOOR ASSY, FUEL TANK ACCESS BLADDER (OPTIONAL 5-88467-3)		1
		ATTACHING PARTS		
	BACB30KZ4-45	. BOLT.		20
	AN960D416	. WASHER.		20
1A	BAC27CWG3	. . . MARKER-ALUMINUM FOIL, ACCESS DOOR FITTING 6-49483 .		1
1B	63-8497	. . O-RING BACB30KZ4-41 BOLT AN960D416 WASHER		
2	K19079-4	. . RETAINER ASSY, TANK ACCESS CAST DOOR NUT.		20
		. . NUT, SPECIAL (V15653)		20
		(OPTIONAL 12LH3614-048 (V72962)) 0		
2	12LH3614-048	. . NUT, SPECIAL (V72962)		20
		(OPTIONAL TO K19079-4 (V15653))		
2A	5-88467-3	. DOOR ASSY, FUEL TANK ACCESS		1
		(OPTIONAL TO 65-26860-2000)		
		ATTACHING PARTS		
	BACB30KZ4-41	. BOLT.		20
	AN960D416L	. WASHER.		20
	NAS679A4W	. NUT		20
2B	BACM10M31-1AMU	. . . MARKER-ALUMINUM FOIL, ACCESS DOOR FITTING / 6-49783		1
		O-RING / NAS564-41 BOLT / H10-428W NUT		
3	7300-021200	. CEMENT, (NO4 RUBBER CEMENT) (V03481)		AR
4	6-49783	. PACKING, TANK A FUEL CELL ACCESS DOOR O-RING.		4
5	BACB30KZ4-41	. BOLT.		40
6	NAS679A4W	. NUT		40
7	NKN222-10	. SCREW, (V02615)		8
8	BACM10P10AL	. WASHER.		8
9	NAS564-27	. BOLT.		48
10	MS29513-234	. PACKING		12
11	BACB30KZ4-37	. BOLT.		32
12	MS29513-253	. PACKING		12
12A	BACB30KZ4-33	. BOLT.		64
13	65-2027-6	. CORD, WING CENTER SECTION FUEL TANK CELL LACING		3
13	10-60020-31	. CELL ASSY, NON SELF SEALING TANK NO. 1.	0150	1
		(DELETED BY RAF 7211.019-225)		
		(OPTIONALS BAC SPEC NO. 10-60020-1, -8)		
13	10-60020-1	. CELL ASSY, NON SELF SEALING TANK NO. 1.	0150	1
		(DELETED BY RAF 7211.019-225)		
		(OPTIONAL TO BAC SPEC NO. 10-60020-31)		
13	10-60020-8	. CELL ASSY, NON SELF SEALING FUEL TANK NO. 1	0150	1
		(DELETED BY RAF 7211.019-225)		
		(OPTIONAL TO BAC SPEC NO. 10-60020-31)		
13	10-60020-31	. CELL ASSY, NON SELF SEALING TANK NO. 1.	5199	1
13	361-89-60-74202-101	. CELL NO. 1 MOD (MADE FROM NON SELF SEALING	0150	1
		TANK NO. 1) (VS2500) (ADDED BY RAF 7211.019-225)		
14	10-60020-32	. CELL ASSY, NON SELF SEALING TANK NO. 2.	0150	1
		(OPTIONALS BAC SPEC NO. 10-60020-2, -9)		
14	10-60020-2	. CELL ASSY, NON SELF SEALING TANK NO. 2.	0150	1
		(OPTIONAL TO BAC SPEC NO. 10-60020-32)		
14	10-60020-9	. CELL ASSY, NON SELF SEALING FUEL TANK NO. 2	0150	1
		(OPTIONAL TO BAC SPEC NO. 10-60020-32)		
14	10-60020-32	. CELL ASSY, NON SELF SEALING TANK NO. 2.	5199	1
15	10-60020-33	. CELL ASSY, NON SELF SEALING TANK NO. 3.	0150	1
		(OPTIONALS BAC SPEC NO. 10-60020-3, -10)		
15	10-60020-3	. CELL ASSY, NON SELF SEALING TANK NO. 3.	0150	1
		(OPTIONAL TO BAC SPEC NO. 10-60020-33)		
15	10-60020-10	. CELL ASSY, NON SELF SEALING FUEL TANK NO. 3	0150	1
		(OPTIONAL TO BAC SPEC NO. 10-60020-33)		
15	10-60020-33	. CELL ASSY, NON SELF SEALING TANK NO. 2.	5199	1
16	NAS1304-16H	. . BOLT, (ADDED BY RAF 7211.019-225)	0150	16
16	NAS564-47	. . BOLT, (ALT) (ADDED BY RAF 7211.019-225)	0150	16
16	AN4H13A	. . BOLT, (ALT) (ADDED BY RAF 7211.019-225)	0150	16
17	AN960JD416	. . WASHER, (ADDED BY RAF 7211.019-225)	0150	16
18	MS29513-250	. . PACKING, (ADDED BY RAF 7211.019-225)	0150	2
27	10-60020-30	. . . CELL, FUEL (OPTIONAL TO 2F1-6-41055 (V89611))	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

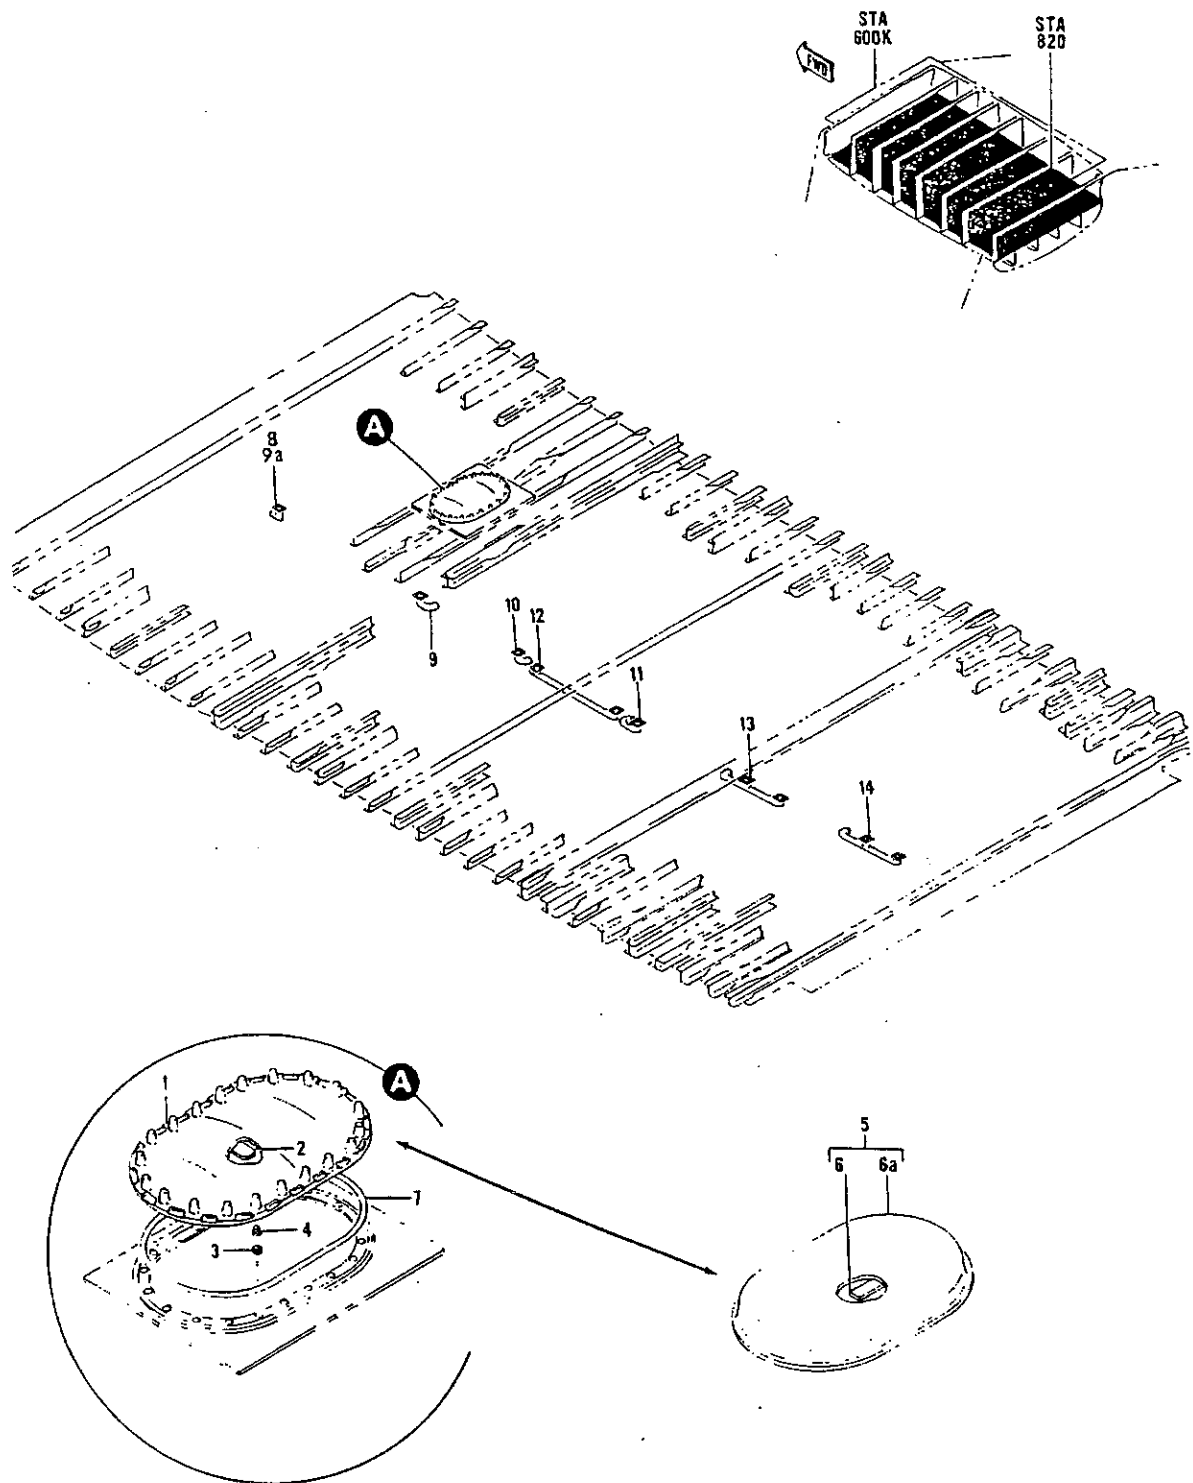


FIGURE 3. PANEL INSTL, SECTION 11 LOWER DECK ONLY

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UN PER ASSY
3	65-1024		PANEL INSTL, SECTION 11 LOWER (FUEL ONLY) (SEE 57-6, . . FIG. 2, ITEM 12)		RF
8	65-6144		. . DRAIN INSTL, SECTION 11 LOWER PANEL		1
9	69-9073		. . TUBE ASSY, WING CENTER SECTION FUEL MANIFOLD DRAIN		1
	69-9074		. . TUBE ASSY, WING CENTER SECTION FUEL MANIFOLD. . . .		1
			ATTACHING PARTS		
	AN3-4A		. . BOLT.		8
	AN960PD10L		. . WASHER.		8
			-----*		
9A	69-9073-2		. . . TUBE, WING CENTER SECTION FUEL MANIFOLD DRAIN . .		1
10	69-9075		. . TUBE ASSY, WING CENTER SECTION FUEL MANIFOLD. . . .		1
11	69-9077		. . TUBE ASSY, WING CENTER SECTION FUEL MANIFOLD. . . .		1
12	69-9076		. . TUBE ASSY, WING CENTER SECTION FUEL MANIFOLD. . . .		1
13	69-9078		. . TUBE ASSY, WING CENTER SECTION FUEL MANIFOLD. . . .		1
			ATTACHING PARTS		
	AN3-5A		. . BOLT.		24
	AN960PD10L		. . WASHER.		24
			-----*		
14	69-9079		. . TUBE ASSY, WING CENTER SECTION FUEL MANIFOLD. . . .		1
			ATTACHING PARTS		
	AN3-6A		. . BOLT.		8
	AN960PD10L		. . WASHER.		8
			-----*		
			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 05
FUEL INDICATING AND CONTROLS

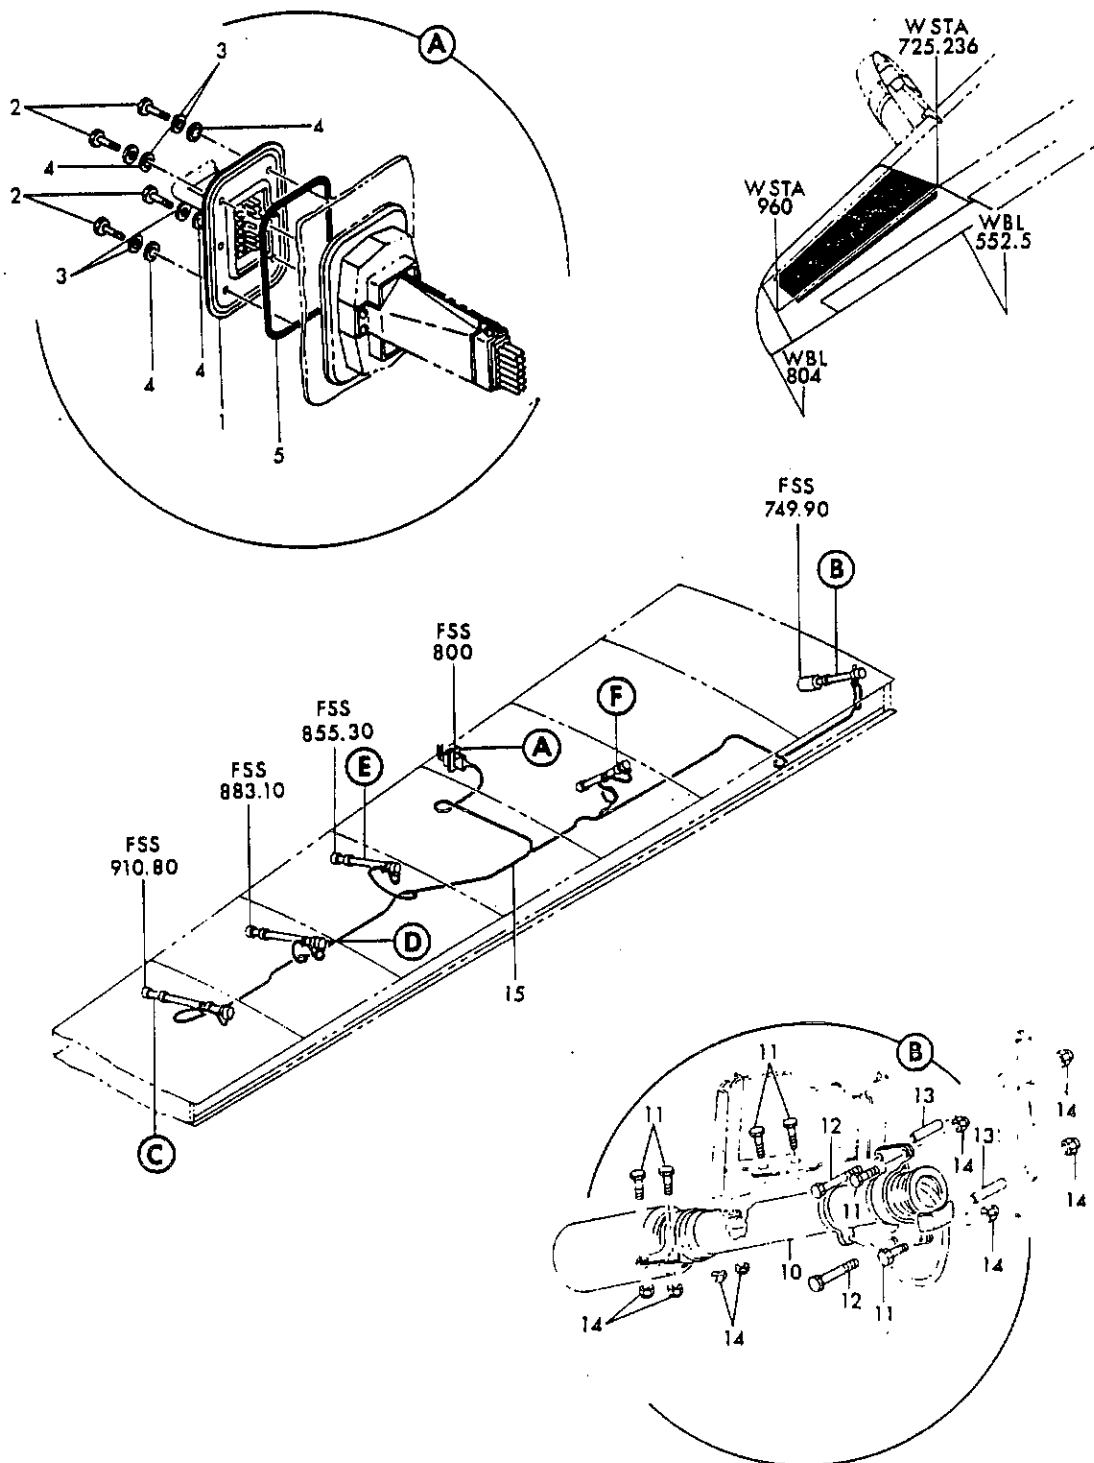


FIGURE 1A. GAGE INSTL, OUTBOARD RESERVE FULL TANK (RH AND RH) (SHEET 1)

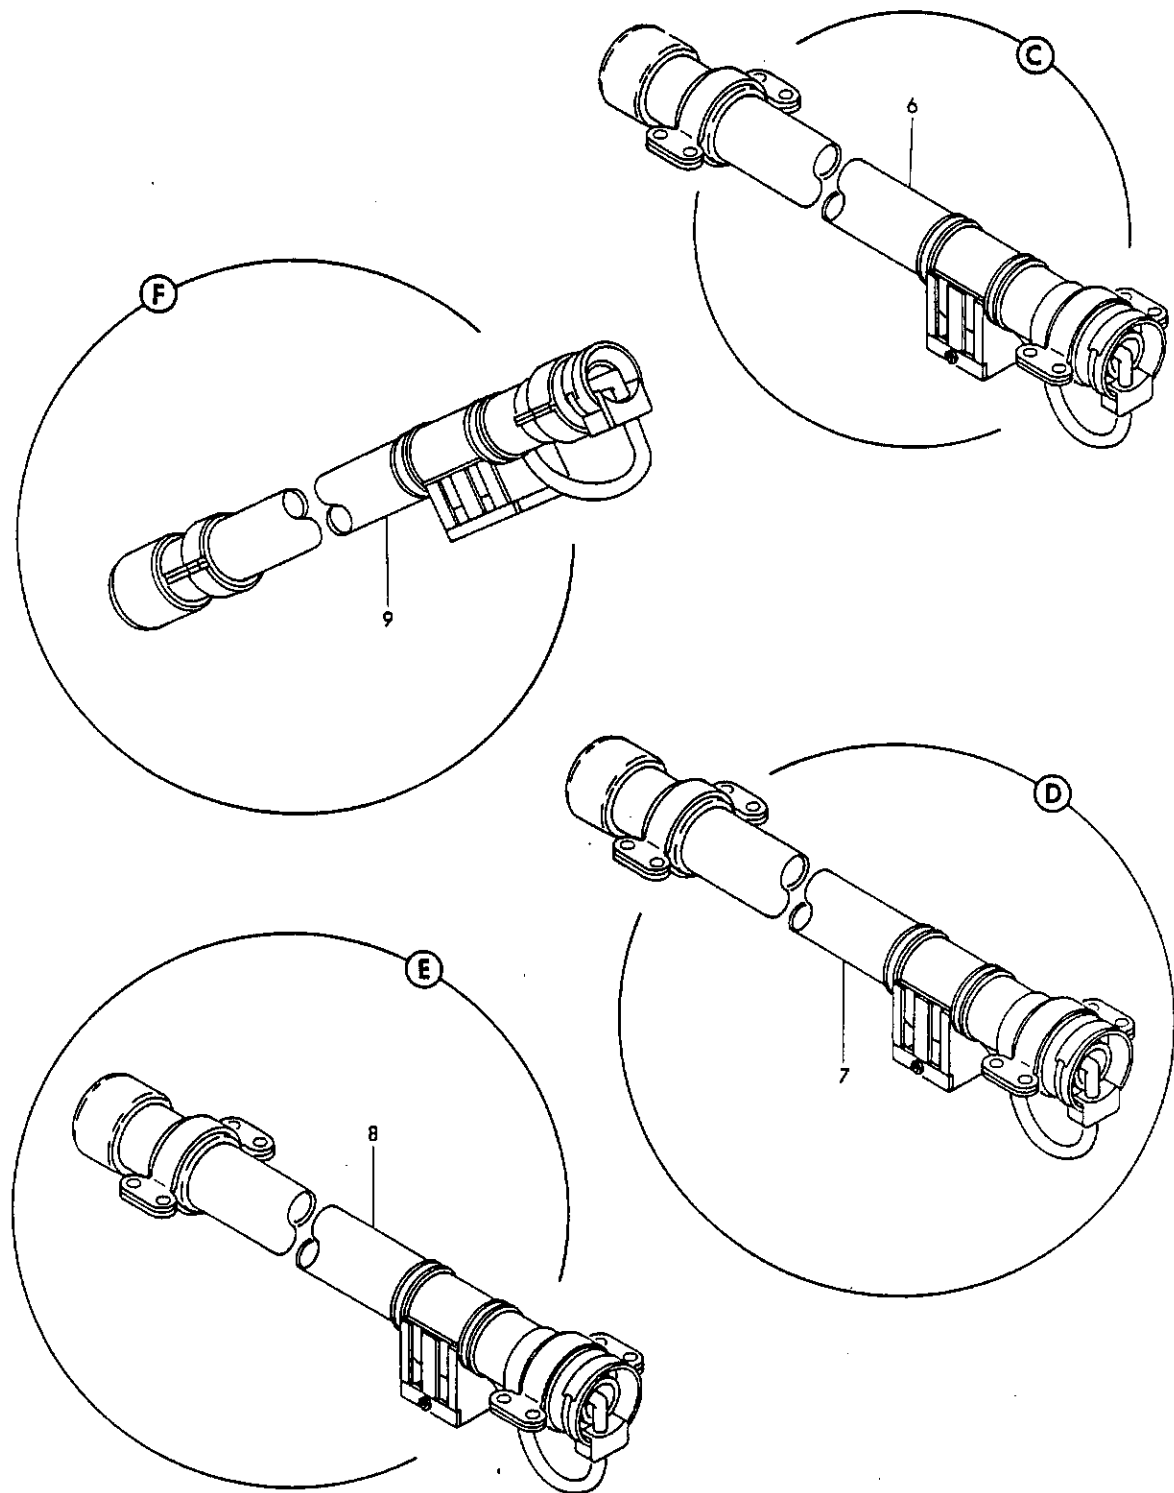


FIGURE 1A. GAGE INSTL, OUTBOARD RESERVE FUEL TANK (LH AND RH) (SHEET 2)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1A	5-86592-3001		GAGE INSTL, OUTBOARD RESERVE FUEL TANK (LH) (SEE 28-7, FIG. 20, ITEM 9 AND 57-2, FIG. 1, ITEM 1)		RF
	5-86592-3002		GAGE INSTL, OUTBOARD RESERVE FUEL TANK (RH) (SEE 28-7, FIG. 20, ITEM 10 AND 57-2, FIG. 1, ITEM 1)		RF
1	10-60479-31		. CONNECTOR, BULKHEAD FUEL QUANTITY SYSTEM (ADDED BY DWG NO. 65-60878 AND 65-60879) (SAME AS 217-100 (V77820))	0150	1
			ATTACHING PARTS		
2	NAS1304-6H		. BOLT, (ADDED BY DWG NO. 65-22678 AND 65-22679).	0150	6
3	AN960-416L		. WASHER, (ADDED BY DWG NO. 65-22678 AND 65-22679).	0150	6
4	BACS11W4		. SEAL, (ADDED BY DWG NO. 65-22678 AND 65-22679).	0150	6
			-----*		
5	MS29513-247		. PACKING, (ADDED BY DWG NO. 65-22678 AND 65-22679)	0150	1
6	10-3065-201		. TANK UNIT, FUEL QUANTITY GAGING SYSTEM.		1
7	10-3065-202		. TANK UNIT, FUEL QUANTITY GAGING SYSTEM.		1
8	10-3065-203		. TANK UNIT, FUEL QUANTITY GAGING SYSTEM.		1
9	10-3065-204		. TANK UNIT, FUEL QUANTITY GAGING SYSTEM.		1
			ATTACHING PARTS		
	AN3-4A		. BOLT.		32
			LHA MOD 03-28-08)		
	NAS679A3W		. NUT		32
			-----*		
10	10-3065-205		. COMPENSATOR, FUEL QUANTITY GAGING SYSTEM TANK UNIT.		1
			ATTACHING PARTS		
11	AN3-4A		. BOLT.		6
12	AN3-15A		. BOLT.		2
13	NAS42HT6-68		. SPACER.		2
14	NAS679A3W		. NUT		8
			-----*		
15	10-60479-80		. HARNESS ASSY, ELECTRICAL.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

MISSING ITEM NUMBERS ARE NOT APPLICABLE

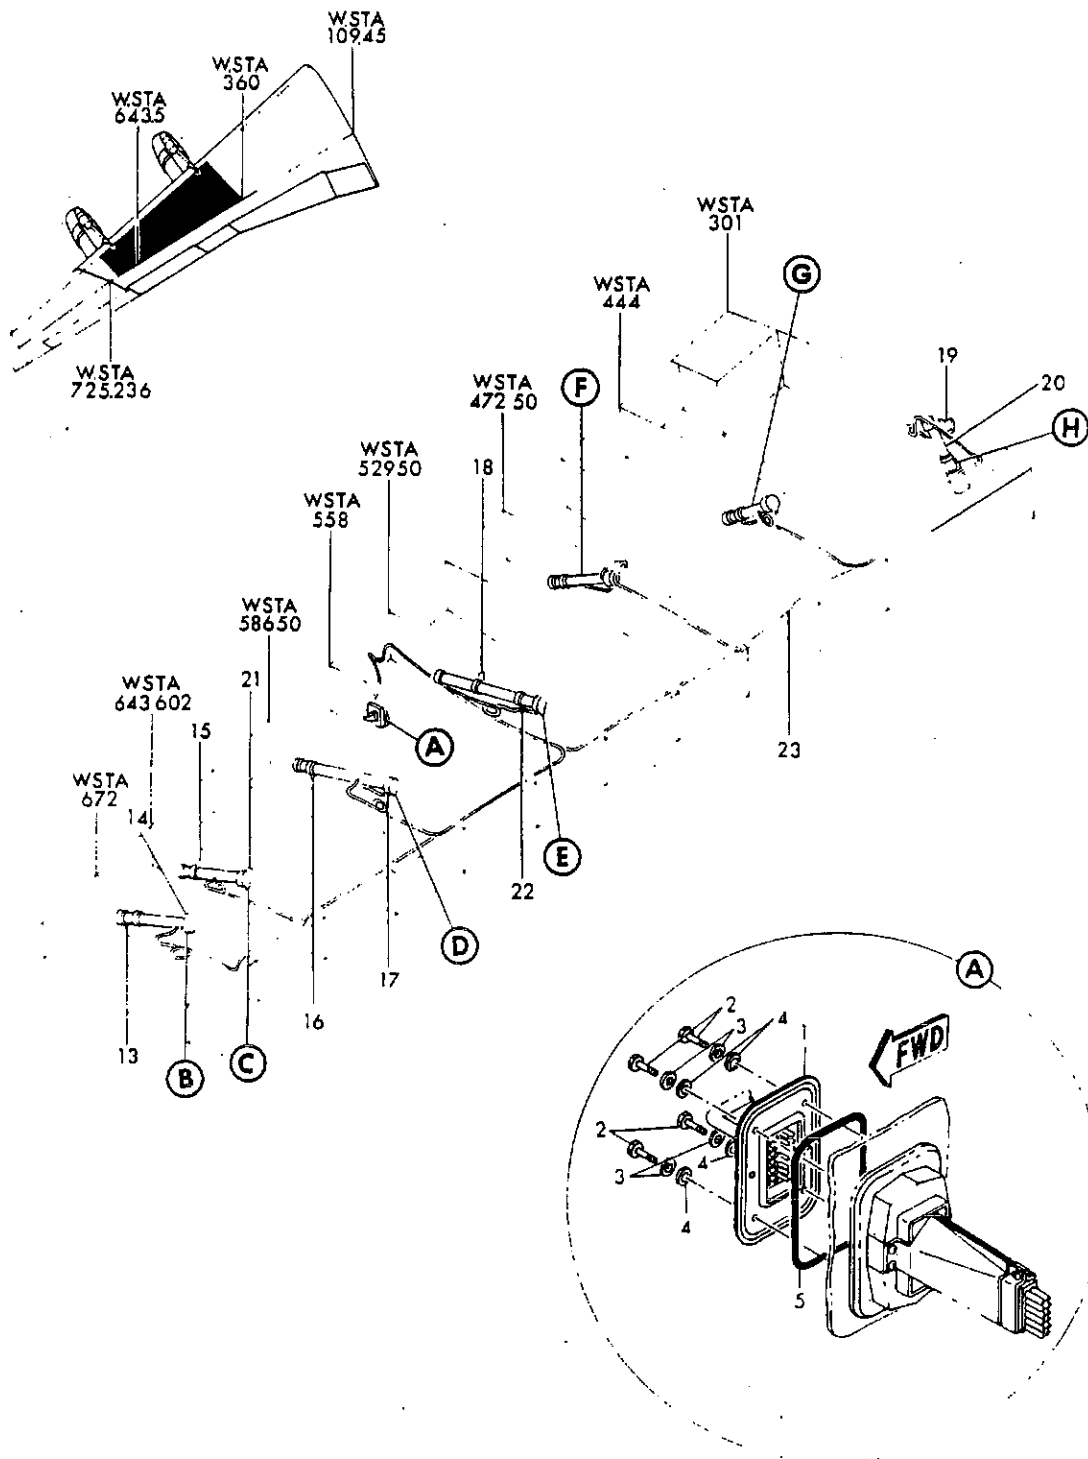


FIGURE 2A. PROBE INSTL. MAIN FUEL TANK NO. 1 (LH) AND NO. 4 (RH) (SHEET 1)

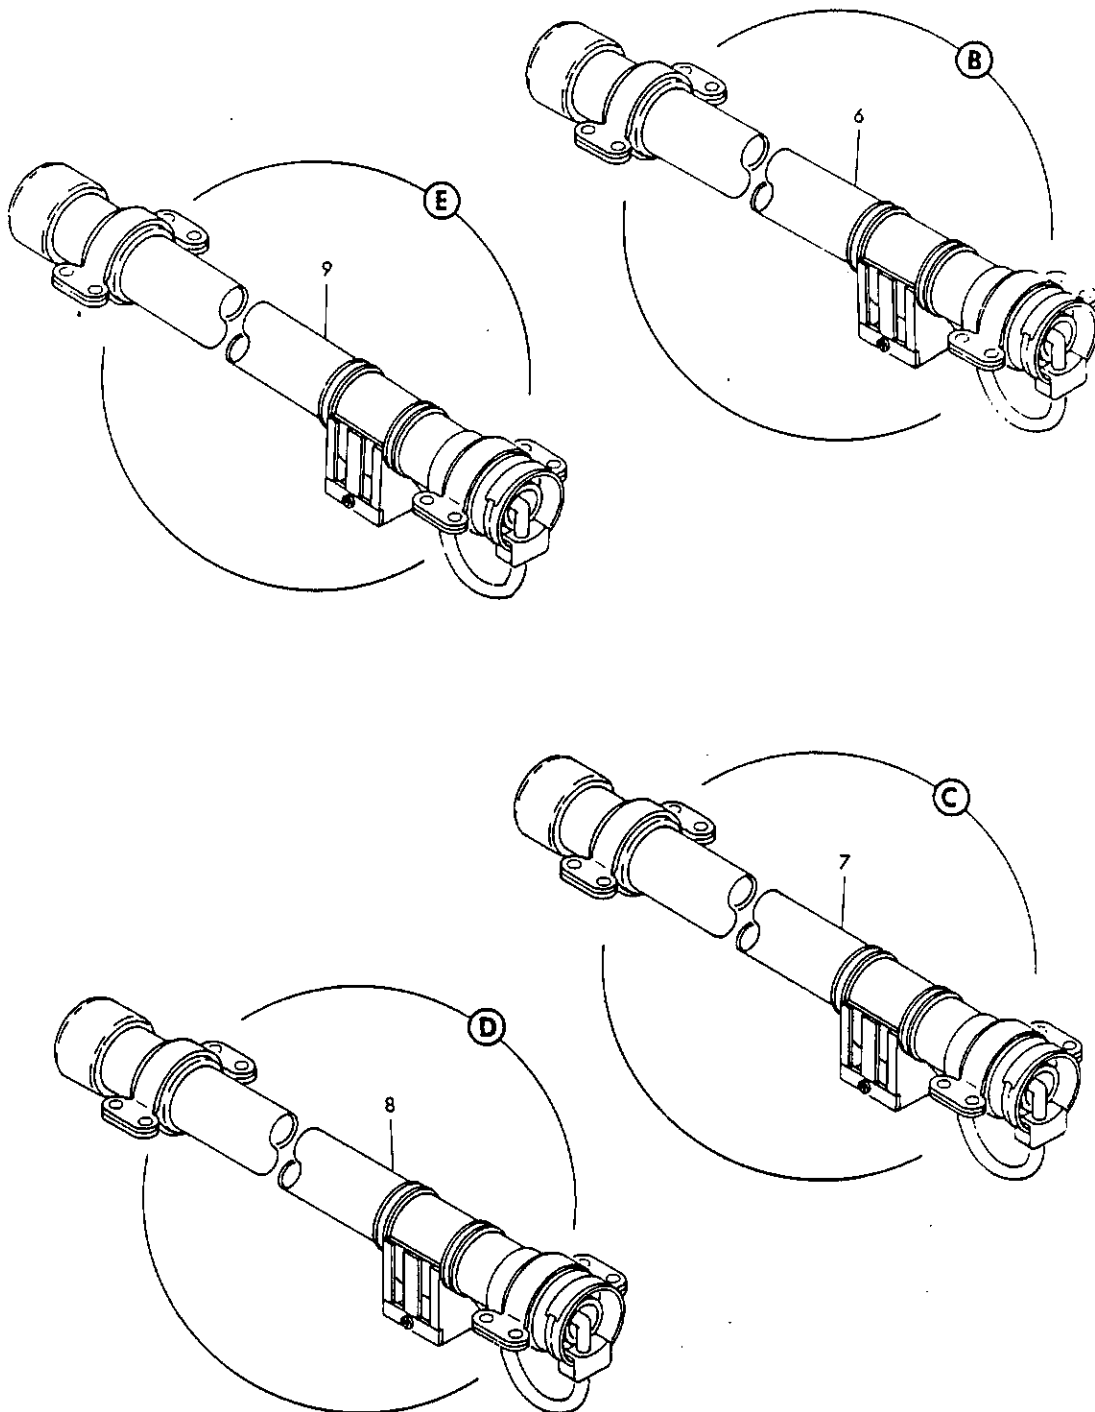


FIGURE 2A. PROBE INSTL, MAIN FUEL TANK NO. 1 (LH) AND NO. 4 (RH) (SHEET 2)

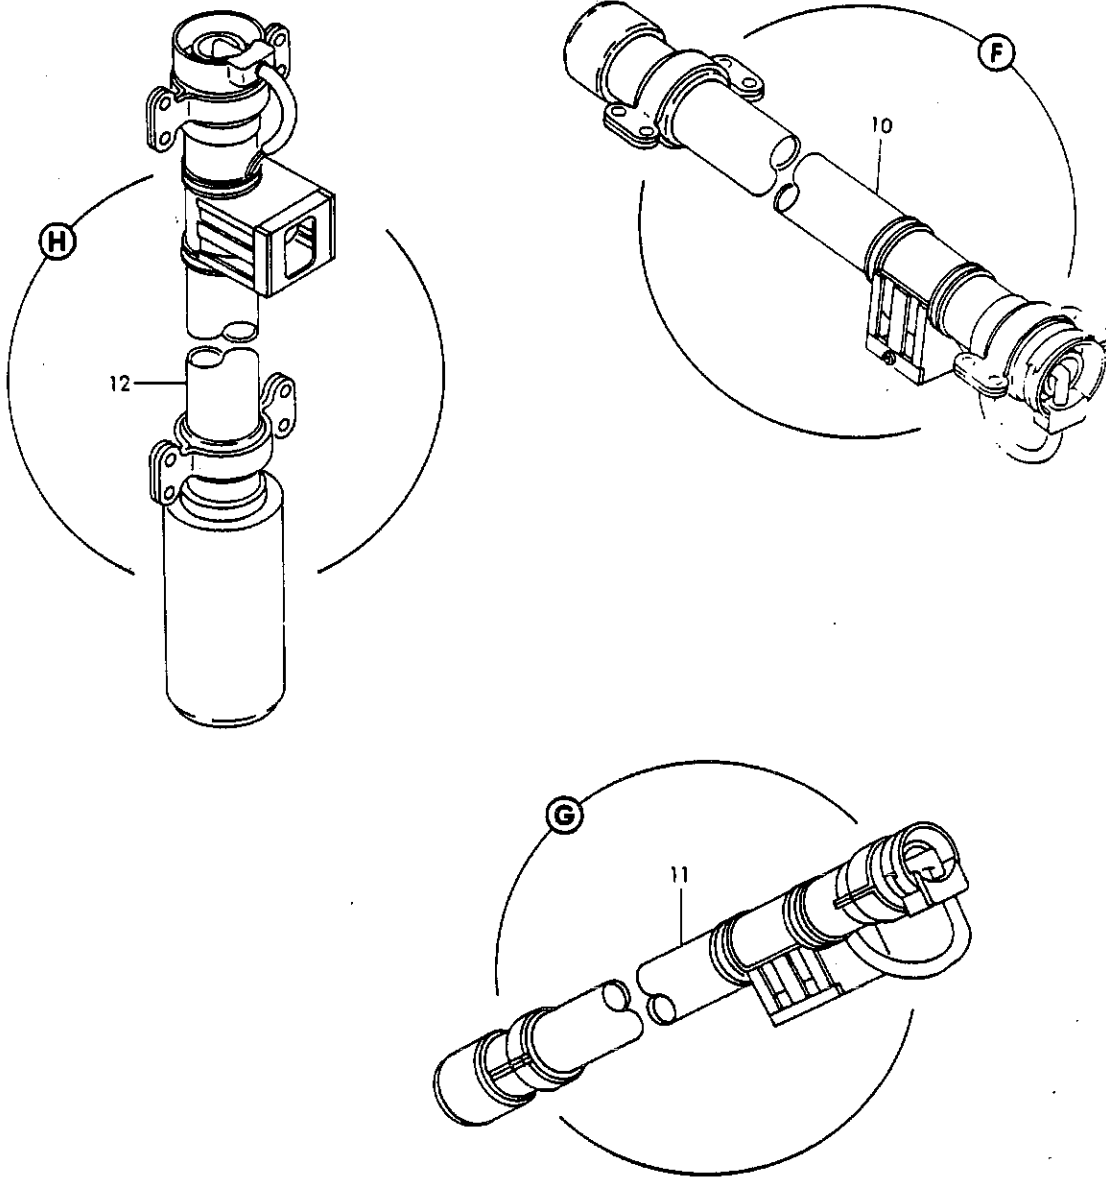


FIGURE 2A. PROBE INSTL, MAIN FUEL TANK NO. 1 (LH) AND NO. 4 (RH) (SHEET 3)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
2A	65-6170-1	PROBE INSTL, MAIN FUEL TANK NO. 1 (LH) (SEE 57-3, FIG. 1, ITEM 10)								RF
	65-6170-2	PROBE INSTL, MAIN FUEL TANK NO. 4 (RH) (SEE 57-3, FIG. 1, ITEM 10)								RF
R	1	10-60479-31	. CONNECTOR, BULKHEAD FUEL QUANTITY SYSTEM (ADDED BY DWG NO. 65-60878 AND 65-60879) (SAME AS 217-100 (V77820))						0150	1
R	2	NAS1304-6H	. ATTACHING PARTS							
R	3	AN960-416L	. BOLT, (ADDED BY DWG NO. 65-22678 AND 65-22679)						0150	6
R	4	BACSL1W4	. WASHER, (ADDED BY DWG NO. 65-22678 AND 65-22679)						0150	6
			. SEAL, (ADDED BY DWG NO. 65-22678 AND 65-22679)						0150	6
R	5	MS29513-247	. PACKING, (ADDED BY DWG NO. 65-22678 AND 65-22679)						0150	1
	6	10-3065-239	. TANK UNIT, QUANTITY GAGING SYSTEM							1
	7	10-3065-240	. TANK UNIT, QUANTITY GAGING SYSTEM							1
	8	10-3065-241	. TANK UNIT, QUANTITY GAGING SYSTEM							1
	9	10-3065-242	. TANK UNIT, QUANTITY GAGING SYSTEM							1
	10	10-3065-243	. TANK UNIT, QUANTITY GAGING SYSTEM							1
	11	10-3065-244	. TANK UNIT, QUANTITY GAGING SYSTEM							1
	12	10-3065-245	. COMPENSATOR, QUANTITY GAGING SYSTEM UNIT.							1
			. ATTACHING PARTS							
		AN3-4A	. BOLT.							56
		NAS679A3W	. NUT							56
	13	69-4724-13	. BRACKET, SUPPORT (LH ONLY).							1
	13	69-4724-14	. BRACKET, SUPPORT (RH ONLY).							1
	14	69-4724-4	. BRACKET, SUPPORT (LH ONLY).							1
	14	69-4724-3	. BRACKET, SUPPORT (RH ONLY).							1
	15	69-4724-19	. BRACKET, SUPPORT.							1
	16	69-4724-17	. BRACKET, SUPPORT (LH ONLY).							1
	16	69-4724-18	. BRACKET, SUPPORT (RH ONLY).							1
	17	69-4724-15	. BRACKET, SUPPORT (LH ONLY).							1
	17	69-4724-16	. BRACKET, SUPPORT (RH ONLY).							1
	18	69-4724-11	. BRACKET, SUPPORT (LH ONLY).							1
	18	69-4724-12	. BRACKET, SUPPORT (RH ONLY).							1
	19	69-4724-23	. BRACKET, SUPPORT (LH ONLY).							1
	19	69-4724-24	. BRACKET, SUPPORT (RH ONLY).							1
	20	69-4724	. BRACKET, SUPPORT.							1
	21	69-4724-21	. BRACKET, SUPPORT (LH ONLY).							1
	21	69-4724-22	. BRACKET, SUPPORT (RH ONLY).							1
			. ATTACHING PARTS							
		AN3-3A	. BOLT.							18
		NAS679A3W	. NUT							18
	22	69-4721-1	. BRACKET, SUPPORT (LH ONLY).							1
	22	69-4721-2	. BRACKET, SUPPORT (LH ONLY).							1
			. ATTACHING PARTS							
		AN3-3A	. BOLT.							3
		NAS679A3W	. NUT							3
	23	10-60479-81	. HARNESS ASSY, ELECTRICAL.							1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

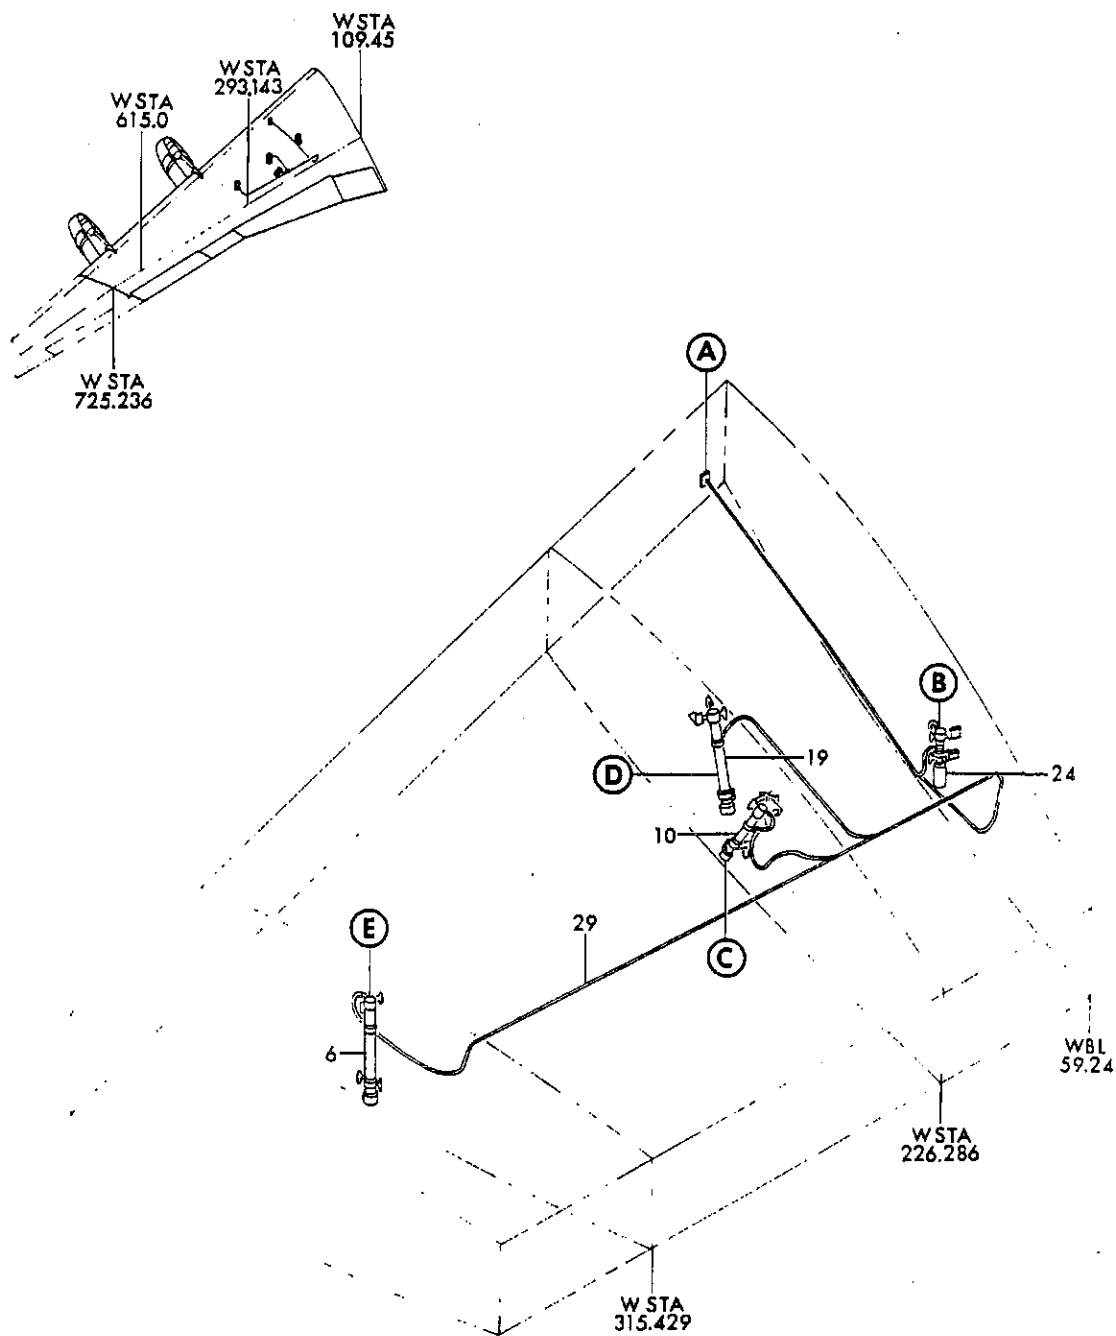


FIGURE 3A. PROBE INSTL, NO 2 AND 3 MAIN TANK FUEL TANK (LH AND RH) (SHEET 1)

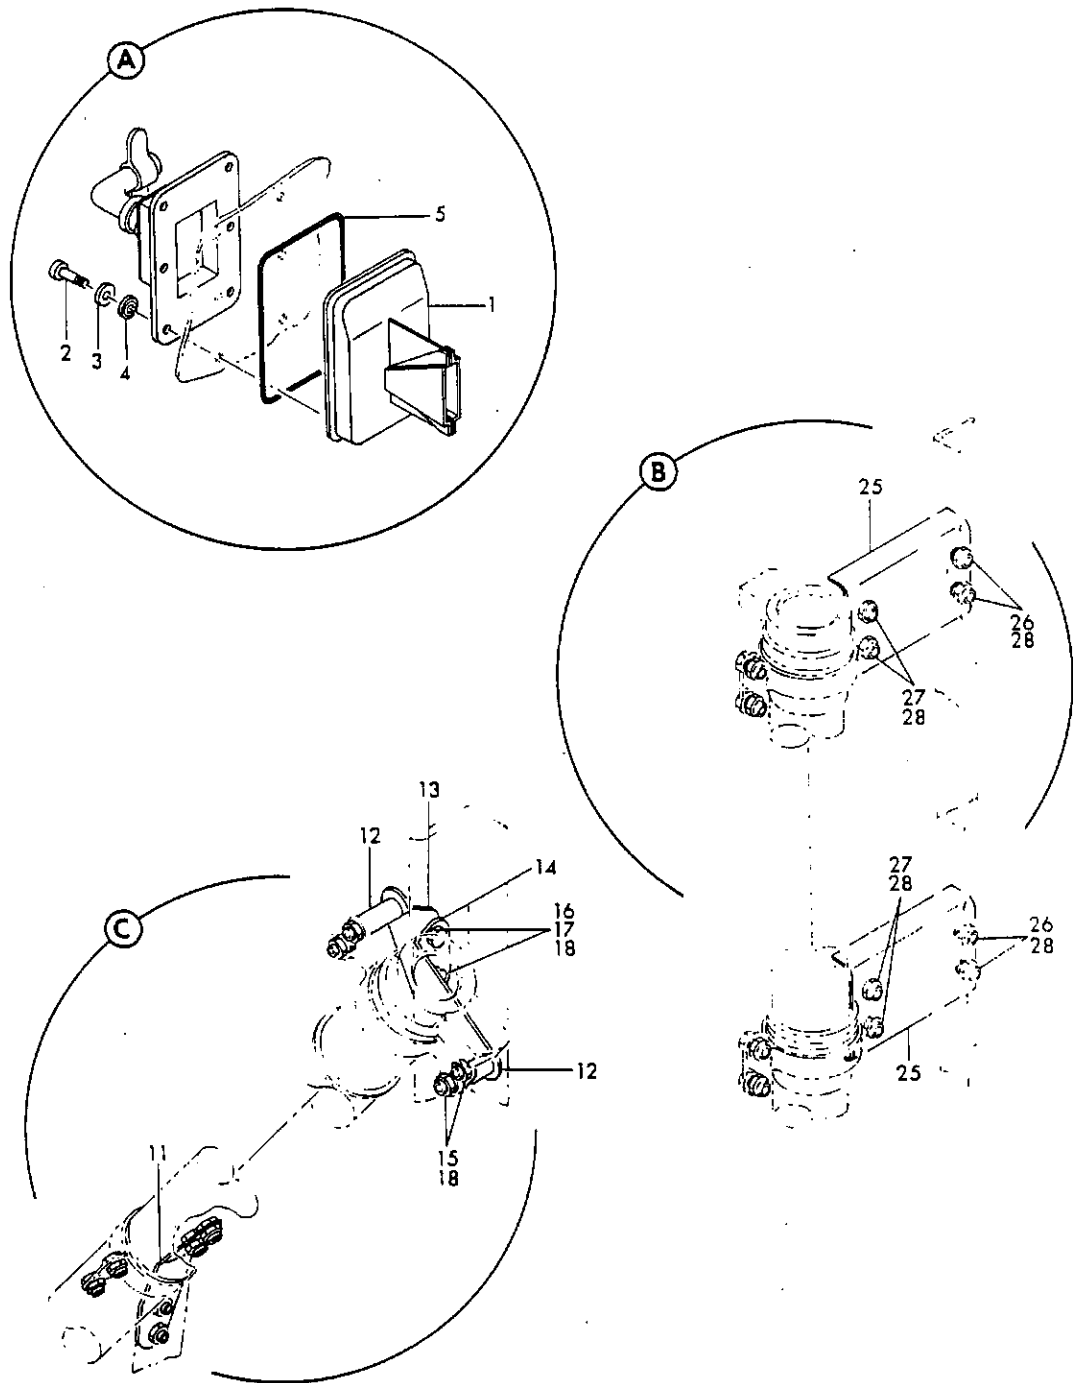


FIGURE 3A. PROBE INSTL, NO. 2 AND 3 MAIN TANK FUEL TANK LH AND RH (SHEET 2)

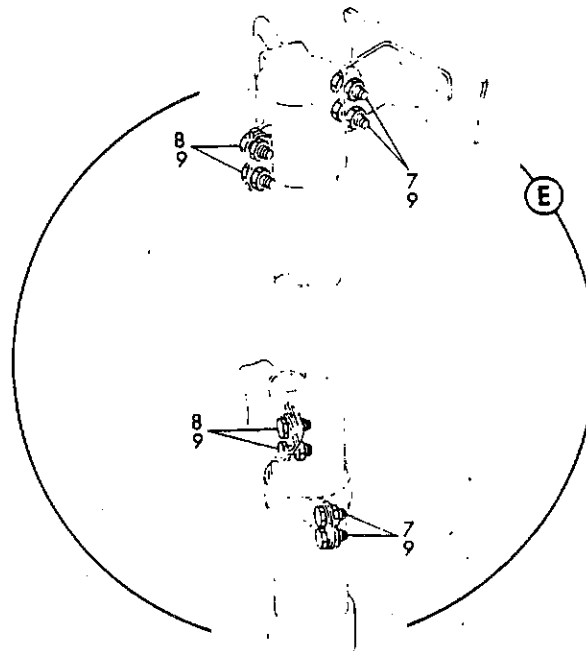
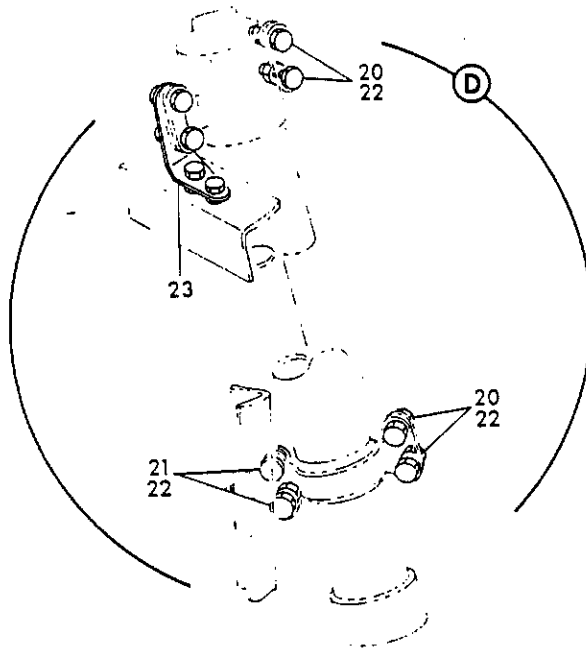


FIGURE 3A. PROBE INSTL. NO. 2 AND 3 MAIN TANK FUEL TANK LH AND RH (SHEET 3)

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE						EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6		
3A	65-6171-1	PROBE INSTL, NO. 2 MAIN TANK FUEL TANK LH (SEE 57-3, . . . FIG. 1, ITEM 11)							RF
	65-6171-2	PROBE INSTL, NO. 3 MAIN TANK FUEL TANK RH (SEE 57-3, . . . FIG. 1, ITEM 11)							RF
R	1	10-60479-31	. CONNECTOR, BULKHEAD FUEL QUANTITY SYSTEM (ADDED BY . . . DWG NO. 65-60876 AND 65-60877) (SAME AS 217-100 (V77820))					0150	1
R	2	NAS1304-6H	. ATTACHING PARTS					0150	6
R	3	AN960-416L	. BOLT, (ADDED BY DWG NO. 65-22676 AND 65-22677)					0150	6
R	4	BACS11W4	. WASHER, (ADDED BY DWG NO. 65-22676 AND 65-22677)					0150	6
			. SEAL, (ADDED BY DWG NO. 65-22676 AND 65-22677)						
			-----*						
R	5	MS29513-247	. PACKING, (ADDED BY DWG NO. 65-22676 AND 65-22677)					0150	1
	6	10-3065-246	. TANK UNIT, FUEL QUANTITY GAGING SYSTEM.						1
			. ATTACHING PARTS						
	7	AN3-4A	. BOLT.						4
	8	AN3-5A	. BOLT.						4
	9	NAS679A3W	. NUT						8
			-----*						
	10	10-3065-248	. TANK UNIT, FUEL QUANTITY GAGING SYSTEM.						1
			. ATTACHING PARTS						
		AN3-4A	. BOLT.						4
		NAS679A4W	. NUT						4
			-----*						
	11	69-4722-21	. BRACKET, CENTER WING TANK AND MAIN TANK NO. 2 FUEL						1
			. PROBE SUPPORT						
	11	69-4722-22	. BRACKET, CENTER WING TANK AND MAIN TANK NO. 3 FUEL						1
			. PROBE SUPPORT						
			. ATTACHING PARTS						
		AN3-3A	. BOLT.						2
		NAS679A3W	. NUT						2
			-----*						
	12	BACS18AE3-50	. SPACER.						2
	13	69-4722-17	. BRACKET, CENTER WING TANK AND MAIN TANK NO. 2 FUEL						1
			. PROBE SUPPORT						
	13	69-4722-18	. BRACKET, CENTER WING TANK AND MAIN TANK NO. 3 FUEL						1
			. PROBE SUPPORT						
			. ATTACHING PARTS						
		AN3-13A	. BOLT.						2
		NAS679A3W	. NUT						2
			-----*						
	14	69-4722-19	. BRACKET, CENTER WING TANK AND MAIN TANK NO. 2 FUEL						1
			. PROBE SUPPORT						
	14	69-4722-20	. BRACKET, CENTER WING TANK AND MAIN TANK NO. 3 FUEL						1
			. PROBE SUPPORT						
			. ATTACHING PARTS						
	15	AN3-4A	. BOLT.						2
	16	AN3-5A	. BOLT.						2
	17	AN960PD10	. WASHER.						2
	18	NAS679A3W	. NUT						4
			-----*						
	19	10-3065-247	. TANK UNIT, FUEL QUANTITY GAGING SYSTEM.						1
			. ATTACHING PARTS						
	20	AN3-4A	. BOLT.						4
	21	AN3-5A	. BOLT.						2
	22	NAS679A3W	. NUT						6
			-----*						
	23	69-4722-11	. BRACKET, CENTER WING TANK AND MAIN TANK NO. 2 FUEL						1
			. PROBE SUPPORT						
	23	69-4722-12	. BRACKET, CENTER WING TANK AND MAIN TANK NO. 3 FUEL						1
			. PROBE SUPPORT						
			. ATTACHING PARTS						
		AN3-5A	. BOLT.						4
		NAS679A3W	. NUT						4
			-----*						
	24	10-3065-249	. COMPENSATOR, FUEL QUANTITY GAGING SYSTEM TANK UNIT.						1
			. ATTACHING PARTS						
		AN3-4A	. BOLT.						4
		NAS679A3W	. NUT						4
			-----*						
	25	69-4722-23	. BRACKET, CENTER WING TANK AND MAIN TANK NO. 2 AND 3						2
			. FUEL PROBE SUPPORT						
			. ATTACHING PARTS						
	26	AN3-4A	. BOLT.						4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY		
			1	2	3	4	5	6	7				
3A	27	AN3-5A	. BOLT.										4
	28	NAS679A3W	. NUT										8
	29	10-60479-82	. HARNESS ASSY, ELECTRICAL.										1
MISSING ITEM NUMBERS ARE NOT APPLICABLE													

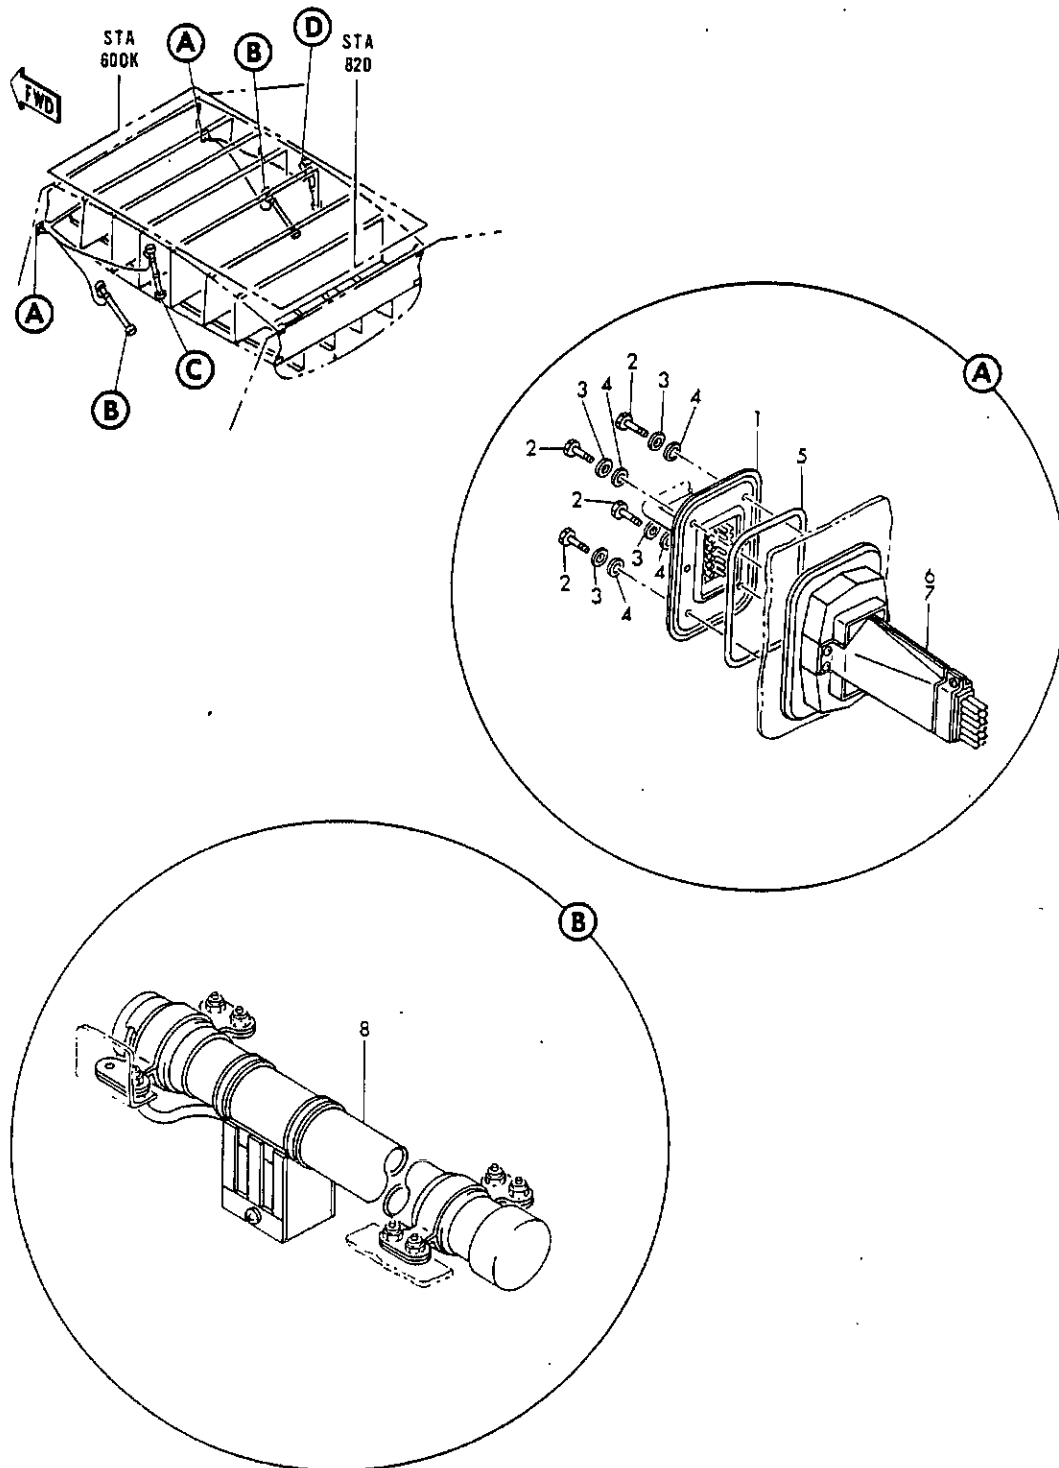


FIGURE 5A. PROBE INSTL. CENTER WING FUEL TANK (SHEET 1)

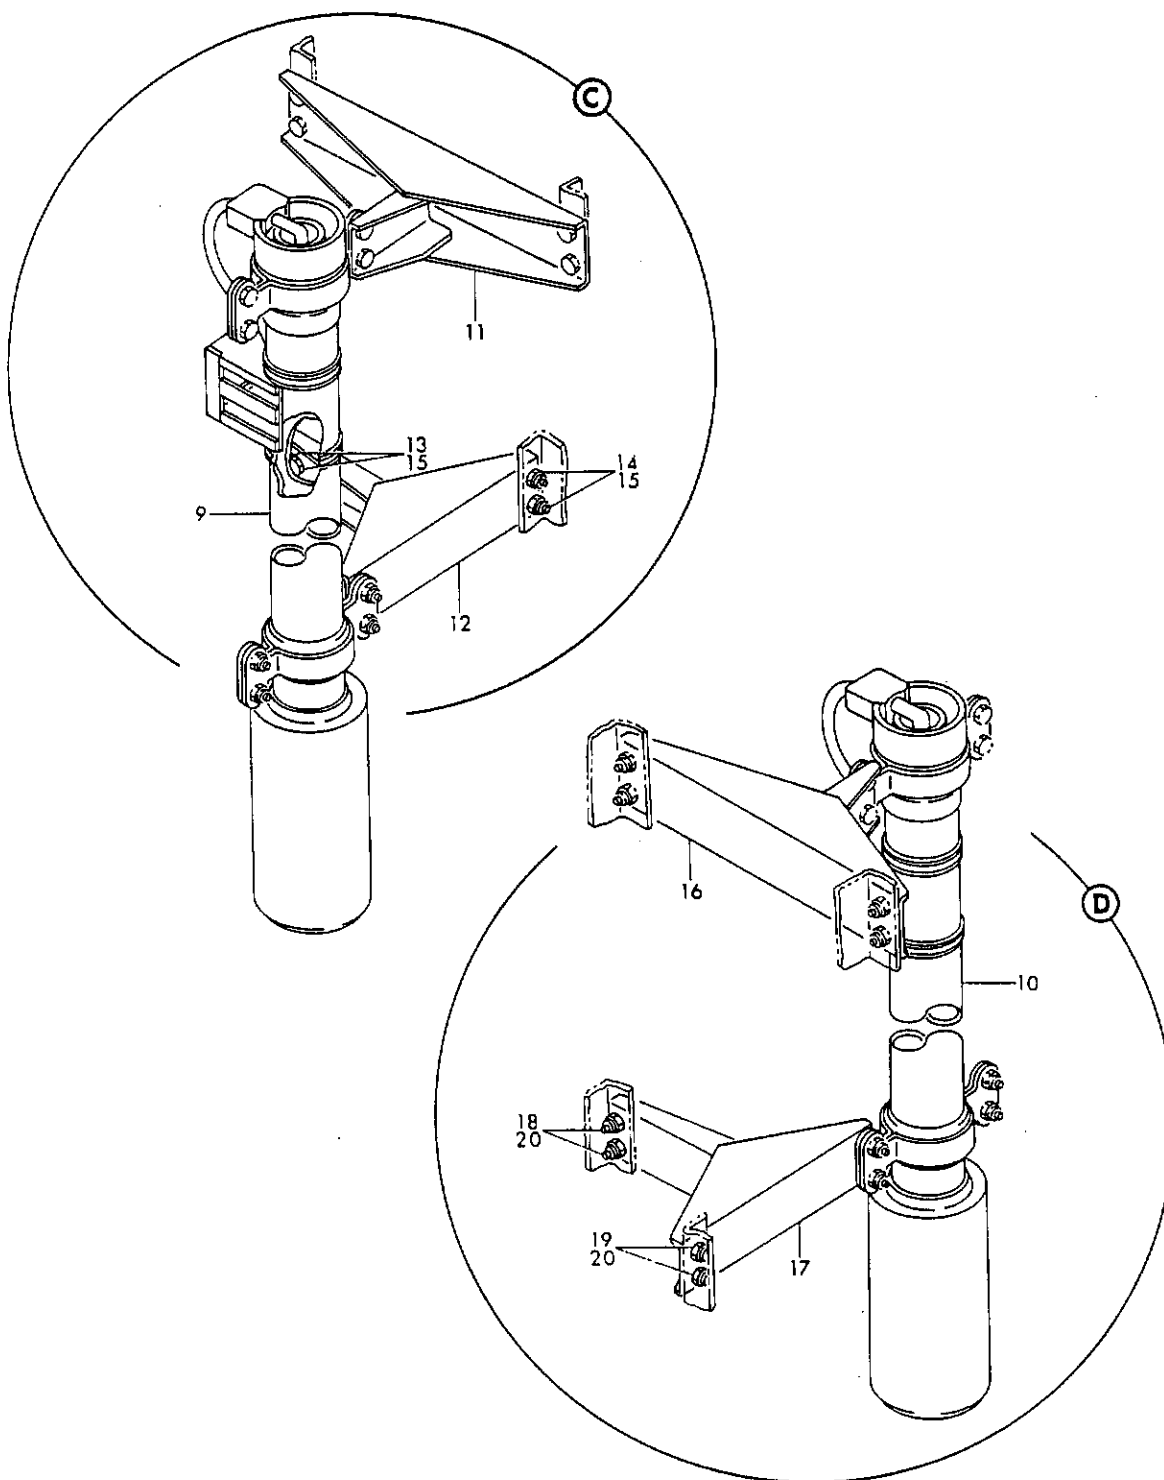


FIGURE 5A. PROBE INSTL. CENTER WING FUEL TANK (SHEET 2)

NOV 21/90

28-05-5A

DETAILED PARTS LIST
28-05-5A
PAGE 1

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5A	65-56068-1	PROBE INSTL, CENTER WING FUEL TANK (LH) (SEE 57-3, FIG. 1, ITEM 12)		RF
	65-56068-2	PROBE INSTL, CENTER WING FUEL TANK (RH) (SEE 57-3, FIG. 1, ITEM 12)		RF
R	1	10-60479-31 . CONNECTOR, BULKHEAD FUEL QUANTITY SYSTEM (ADDED BY . DWG NO. 65-22676 AND 65-22677) (SAME AS 217-100 (V77820))	0150	1
R	2	ATTACHING PARTS		
R	3	. BOLT, (ADDED BY DWG NO. 65-22676 AND 65-22677)	0150	6
R	4	. WASHER, (ADDED BY DWG NO. 65-22676 AND 65-22677)	0150	6
		. SEAL, (ADDED BY DWG NO. 65-22676 AND 65-22677)	0150	6
R	5	MS29513-247 . PACKING, (ADDED BY DWG NO. 65-22676 AND 65-22677)	0150	1
	6	. HARNESS ASSY, ELECTRICAL (LH ONLY)		1
	7	. HARNESS ASSY, ELECTRICAL (RH ONLY)		1
	8	. TANK UNIT, FUEL QUANTITY GAGING SYSTEM (RH AND LH)		1
		ATTACHING PARTS		
		. BOLT		8
		. NUT		8
	9	10-3065-254 . TANK UNIT, FUEL QUANTITY GAGING SYSTEM (LH ONLY)		1
		ATTACHING PARTS		
		. BOLT		8
		. NUT		8
	10	10-3065-255 . COMPENSATOR, FUEL QUANTITY GAGING SYSTEM TANK UNIT (RH ONLY)		1
		ATTACHING PARTS		
		. BOLT		8
		. NUT		8
	11	69-38082-1 . BRACKET ASSY, FUEL PROBE SUPPORT (LH ONLY)		1
		ATTACHING PARTS		
		. BOLT		4
		. NUT		4
	12	69-38064-1 . BRACKET ASSY, FUEL PROBE SUPPORT (LH ONLY)		1
		ATTACHING PARTS		
	13	. BOLT		2
	14	. BOLT		2
	15	. NUT		4
	16	69-38082-2 . BRACKET ASSY, FUEL PROBE SUPPORT (RH ONLY)		1
		ATTACHING PARTS		
		. BOLT		4
		. NUT		4
	17	69-38064-2 . BRACKET ASSY, FUEL PROBE SUPPORT (RH ONLY)		1
		ATTACHING PARTS		
	18	. BOLT		2
	19	. BOLT		2
	20	. NUT		4
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 11A		FLOWMETER INSTL, FAN ENGINE FUEL.	0150	
R		FITTING INSTL, NACELLE STRUT LOWER SPAR PLUMBING (FUEL ONLY)	0150	
R	65-14511-15	. FLOWMETER INSTL, OUTBOARD FAN ENGINE FUEL (SEE 54-1, FIG. 6A, ITEM 1, 54-1, FIG. 6B, ITEM 1 AND 54-1, FIG. 6C, ITEM 1)	0150	RF
R	65-14511-16	. FLOWMETER INSTL, INBOARD FAN ENGINE FUEL (SEE 54-1, FIG. 21A, ITEM 1, 54-1, FIG. 21B, ITEM 1 AND 54-1, FIG. 21C, ITEM 1)	0150	RF
R	1 65-13125-35	. . TUBE ASSY, FAN ENGINE FUEL 1-1/2 IN. .035 AISI321 (OPTIONAL AISI347) (NACELLE NO. 1)	0150	1
R	1 65-13125-32	. . TUBE ASSY, FAN ENGINE FUEL 1-1/2 IN. .035 AISI321 (OPTIONAL AISI347) (NACELLE NO. 4)	0150	1
R	1 65-13125-29	. . TUBE ASSY, FAN ENGINE FUEL 1-1/2 IN. .035 AISI321 (OPTIONAL AISI347) (NACELLE NO. 2)	0150	1
R	1 65-13125-30	. . TUBE ASSY, FAN ENGINE FUEL 1-1/2 IN. .035 AISI321 (OPTIONAL AISI347) (NACELLE NO. 3)	0150	1
R	BACN10HX24	 NUT	0150	2
R	2 65-14511-12	. . TUBE ASSY, FAN ENGINE FUEL 1-1/2 IN. .035 AISI321 (OPTIONAL AISI347) (NACELLES NO. 1 AND 4)	0150	1
R	2 65-14511-11	. . TUBE ASSY, FAN ENGINE FUEL 1-1/2 IN. .035 AISI321 (OPTIONAL AISI347) (NACELLES NO. 2 AND 3)	0150	1
R	3 65-14511-14	. . TUBE ASSY, FAN ENGINE FUEL 1-1/2 IN. .035 AISI321 (OPTIONAL AISI347) (NACELLES NO. 1 AND 4)	0150	1
R	3 65-14511-13	. . TUBE ASSY, FAN ENGINE FUEL 1-1/2 IN. .035 AISI321 (OPTIONAL AISI347) (NACELLES NO. 2 AND 3)	0150	1
R	F1111-150	 SLEEVE, (V08118).	0150	2
R	T1138-150	 NUT, (V08118).	0150	2
R	BACN10HX24	 NUT	0150	1
R	4 AN924-24	 NUT	0150	2
R	5 AN960PD3016	 WASHER.	0150	2
R	6 AN960-3016	 WASHER.	0150	2
R	7 AN832-24	 UNION	0150	1
R	8 M1213-150	 RING, SNAP (V08118)	0150	2
R	9 T2161-150	 NUT, (V08118)	0150	2
R	10 S10A210-160	 O-RING, (V08118).	0150	4
R	11 F1152-150	 FLANGE, (V08118).	0150	2
R	AN4H4A	 ATTACHING PARTS BOLT.	0150	8
R	12 MS29513-223	 PACKING	0150	2
R	13 MS25083-1886	 JUMPER ASSY	0150	2
R	14 MS25083-1888	 JUMPER ASSY	0150	2
R	NAS603-7	 ATTACHING PARTS SCREW	0150	4
R	AN960D10L	 WASHER.	0150	12
R	NAS679A3W	 NUT	0150	4
R	14A VSF1015AT24	 SEAL, (V92215). (OPTIONAL VSF1015AT24B (V92215))	0150	2
R	14A VSF1015AT24B	 SEAL, (V92215). (OPTIONAL TO VSF1015AT24 (V92215))	0150	2
R	15 10-60150-5	 TRANSMITTER ASSY, FUEL FLOWMETER.	0150	1
R	AN4-4A	 ATTACHING PARTS BOLT.	0150	4
R	AN960D416	 WASHER.	0150	4
R	NAS679A4W	 NUT	0150	4
R	16 65-13143-36	 SUPPORT, FAN ENGINE FLOWMETER (OUTBOARD).	0150	1
R	16 65-13143-38	 SUPPORT, FAN ENGINE FLOWMETER (INBOARD)	0150	1
R	17 65-13143-37	 SUPPORT, FAN ENGINE FLOWMETER (OUTBOARD).	0150	1
R	17 65-13143-39	 SUPPORT, FAN ENGINE FLOWMETER (INBOARD)	0150	1
R	AN3-4A	 ATTACHING PARTS BOLT.	0150	4
R	AN960D10L	 WASHER.	0150	4
R	BACN10FX1	 NUT	0150	8
R	65-31487-10	 FITTING INSTL, NACELLE STRUT LOWER SPAR PLUMBING. (OUTBOARD) (FUEL ONLY) (SEE 54-1, FIG. 6A, ITEM 4 AND 54-1, FIG. 6C, ITEM 3)	0150	RF
R	65-31487-9	 FITTING INSTL, NACELLE STRUT LOWER SPAR PLUMBING. (INBOARD) (FUEL ONLY) (SEE 54-1, FIG. 21A, ITEM 3, 54-1, FIG. 21B, ITEM 3 AND 54-1, FIG. 21C, ITEM 3)	0150	RF

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	11A 18	69-24405-6	.	.	FITTING ASSY.	.	.	.	.	0150	1
R		NAS508M5	.	.	ATTACHING PARTS	.	.	.	.	0150	2
R			.	.	RIVET	.	.	.	.	0150	
			.	.	-----*	.	.	.	.		
			.	.	FOR REFERENCE TO OTHER FITTING DETAILS, SEE NHA . .	.	.	.	.	0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R	12A	FLOWMETER INSTL, STRUT FAN ENGINE FUEL.	5199	
R		FITTING INSTL, NACELLE STRUT LOWER SPAR PLUMBING (FUEL ONLY)	5199	
R	65-13125-33	. FLOWMETER INSTL, OUTBOARD STRUT FAN ENGINE FUEL (SEE 54-1, FIG. 6A, ITEM 1, 54-1, FIG. 6B, ITEM 1 AND 54-1, FIG. 6C, ITEM 1)	5199	RF
R	65-13125-34	. FLOWMETER INSTL, INBOARD STRUT FAN ENGINE FUEL (SEE 54-1, FIG. 21A, ITEM 1, 54-1, FIG. 21B, ITEM 1 AND 54-1, FIG. 21C, ITEM 1)	5199	RF
R	1 65-13125-32	. . TUBE ASSY, FAN ENGINE FUEL 1-1/2 IN. .035 AISI321 (OPTIONAL AISI347) (NACELLE NO. 4)	5199	1
R	1 65-13125-29	. . TUBE ASSY, FAN ENGINE FUEL 1-1/2 IN. .035 AISI321 (OPTIONAL AISI347) (NACELLE NO. 2)	5199	1
R	1 65-13125-30	. . TUBE ASSY, FAN ENGINE FUEL 1-1/2 IN. .035 AISI321 (OPTIONAL AISI347) (NACELLE NO. 3)	5199	1
R	BACN10HX24	. . . NUT	5199	2
R	65-13125-24	. . TUBE ASSY, FAN ENGINE FUEL 1-1/2 IN. .035 AISI321 (OPTIONAL AISI347) (NACELLES NO. 1 AND 4)	5199	1
R	2 65-13125-23	. . TUBE ASSY, FAN ENGINE FUEL 1-1/2 IN. .035 AISI321 (OPTIONAL AISI347) (NACELLES NO. 2 AND 3)	5199	1
R	4 65-13125-26	. . TUBE ASSY, NACELLE STRUT 1-1/2 IN. .035 AISI321 (OPTIONAL AISI347) (NACELLE NO. 1 AND 4)	5199	1
R	4 65-13125-25	. . TUBE ASSY, NACELLE STRUT 1-1/2 IN. .035 AISI321 (OPTIONAL AISI347) (NACELLE NO. 2 AND 3)	5199	1
R	F1111-150	. . . SLEEVE, (V08118).	5199	1
R	T1138-150	. . . NUT, (V08118).	5199	1
R	NAS596-24	. . . NUT	5199	1
R	6 AN924-24	. . . NUT	5199	1
R	9 AN960PD3016	. . . WASHER.	5199	2
R	12 AN832-24	. . . UNION	5199	1
R	18 MS25083-1BB6	. . JUMPER ASSY	5199	3
R	19 NAS603-7	ATTACHING PARTS		
R	20 AN960D10L	. . . SCREW	5199	5
R	22 NAS679A3W	. . . WASHER.	5199	10
R		. . . NUT	5199	5
R	23 T1139-150	. . . NUT, (V08118).	5199	2
R	24B VSF1015AT24	. . . SEAL, (V92215).	5199	2
R		(OPTIONAL VSF1015AT24B (V92215))		
R	24B VSF1015AT24B	. . . SEAL, (V92215).	5199	2
R		(OPTIONAL TO VSF1015AT24 (V92215))		
R	25 S10A210-160	. . . O-RING, (V08118).	5199	4
R	27 F1090S150	. . . FITTING, (V08118).	5199	2
R	29 MS29512-20	. . . PACKING	5199	2
R	30 BACC10DG360	. . . CLAMP	5199	2
R	31 AN3-5A	ATTACHING PARTS		
R	32 AN3-6A	. . . BOLT.	5199	2
R	33 AN960PD10	. . . BOLT.	5199	2
R	34 66-1578-5	. . . WASHER.	5199	2
R	35 BACN10FX1	. . . FILLER, NACELLE STRUT FUEL FLOWMETER BRACKET. . .	5199	4
R		. . . NUT	5199	2
R	36 10-3071-5	. . . TRANSMITTER ASSY, INDICATOR	5199	1
R		(OPTIONAL BAC SPEC NO. 10-3071)		
R	36 10-3071	. . . TRANSMITTER ASSY, INDICATOR	5199	1
R		(OPTIONAL TO BAC SPEC NO. 10-3071-5)		
R	65-31487-12	. FITTING INSTL, NACELLE STRUT LOWER SPAR PLUMBING. . . (OUTBOARD) (FUEL ONLY) (SEE 54-1, FIG. 6A, ITEM 4, 54-1, FIG. 6B, ITEM 3 AND 54-1, FIG. 6C, ITEM 3)	5199	RF
R	65-31487-11	. FITTING INSTL, NACELLE STRUT LOWER SPAR PLUMBING. . . (INBOARD) (FUEL ONLY) (SEE 54-1, FIG. 21A, ITEM 3, 54-1, FIG. 21B, ITEM 3 AND 54-1, FIG. 21C, ITEM 3)	5199	RF
R	37 69-24405-6	. . . FITTING ASSY.	5199	1
R	NAS508M5	ATTACHING PARTS		
R		. . . RIVET	5199	2
R		. . . FOR REFERENCE TO OTHER FITTING DETAILS, SEE NHA . .	5199	

MISSING ITEM NUMBERS ARE NOT APPLICABLE


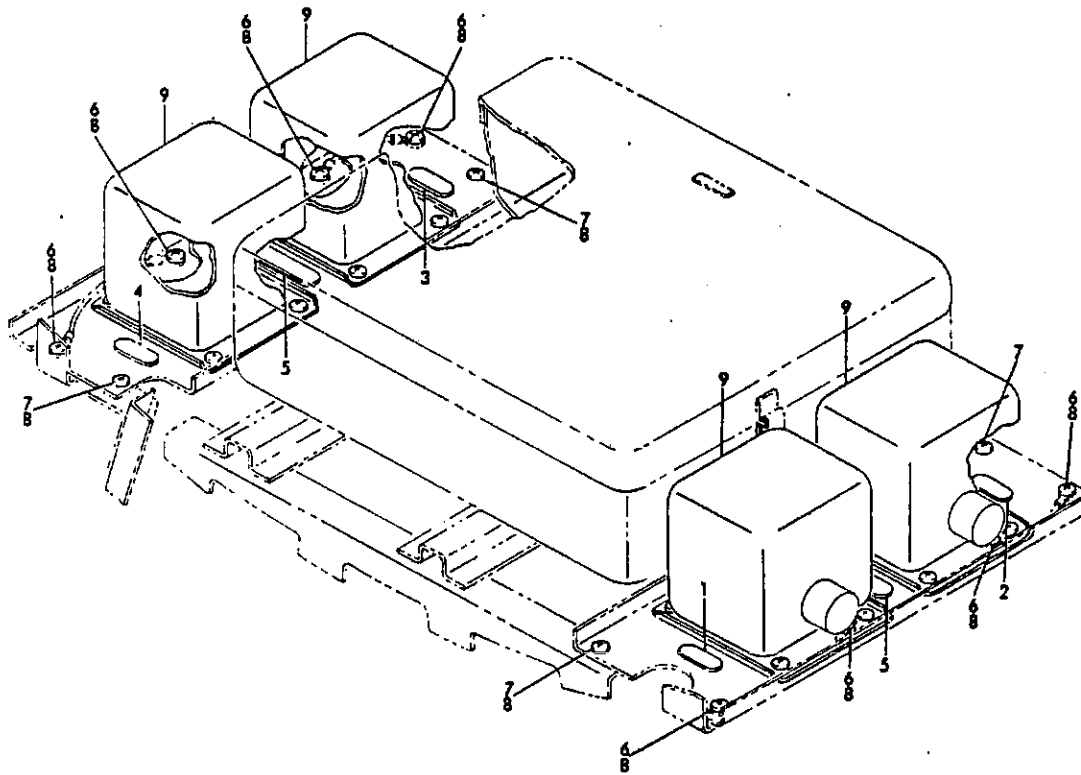


FIGURE 16A. EQUIPMENT INSTL, FUEL FLOW AMPLIFIER AND ATTITUDE WARNING RJ9 ELECTRONIC (FUEL ONLY)

MISSING ITEM NUMBERS ARE NOT APPLICABLE

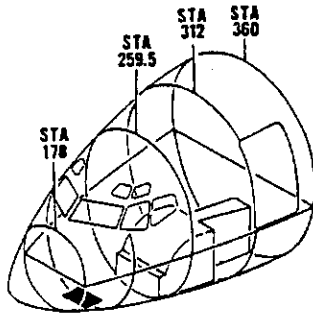

20-05-1613

NOV 21/90

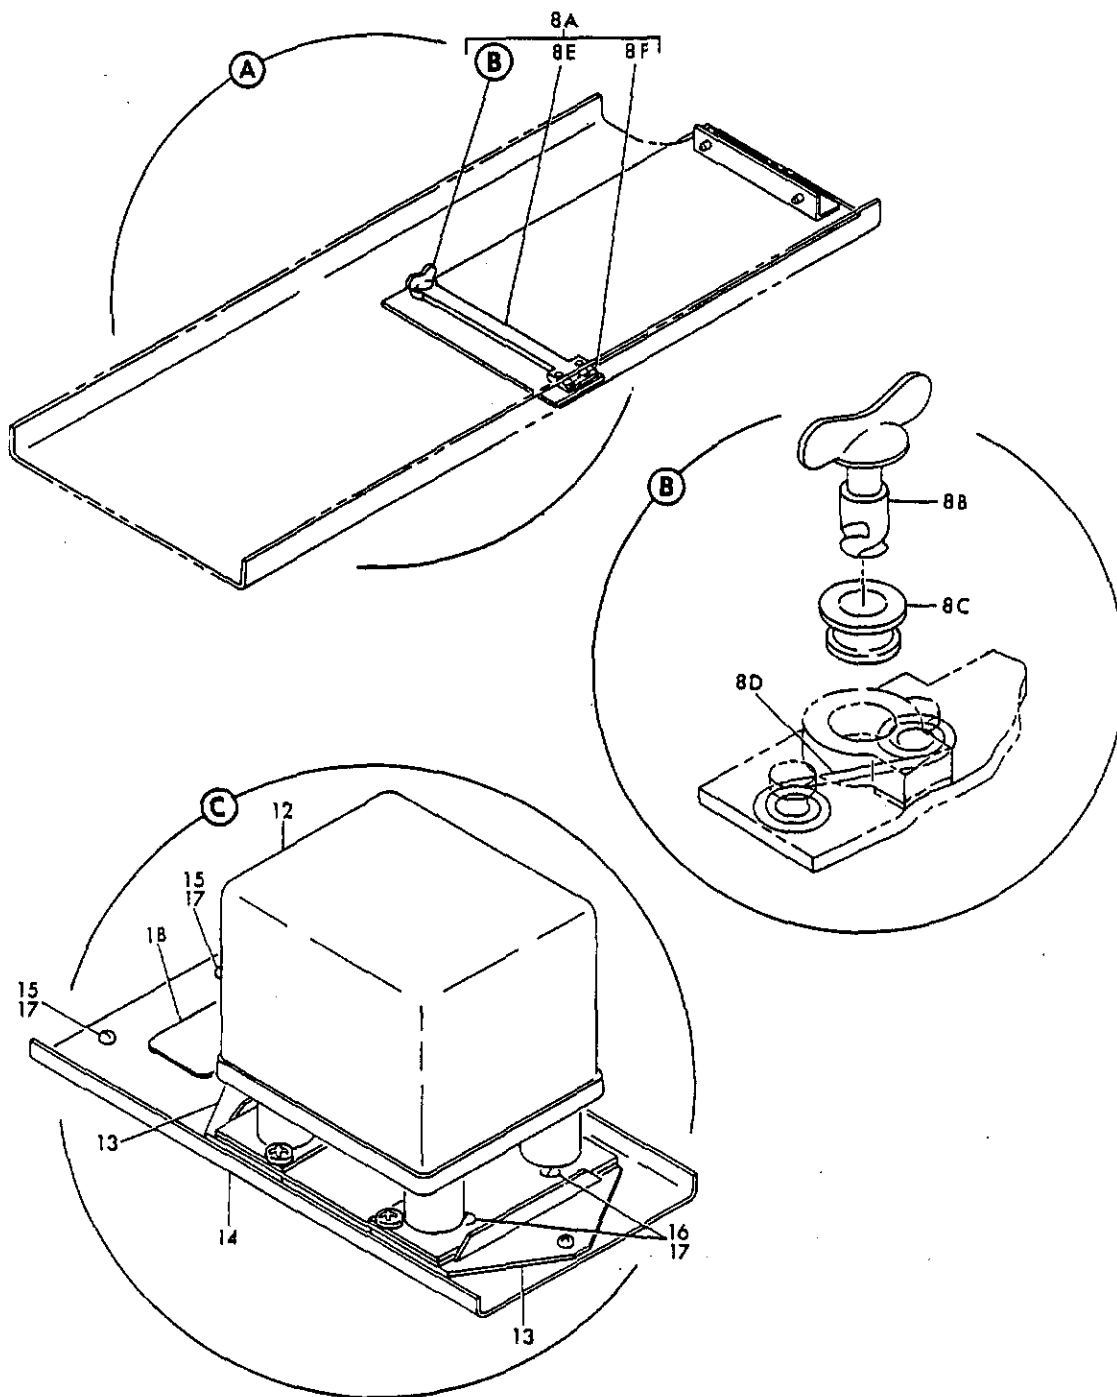


FIGURE 168. EQUIPMENT INSTL, FUEL FLOW AMPLIFIER AND ATTITUDE WARNING R19 ELECTRONIC (FUEL ONLY) (SHEET 2)

NOV 21/90

28-05-168

DETAILED PARTS LIST
28-05-168
PAGE 1

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
16B	65-51835-6		EQUIPMENT INSTL, FUEL FLOW AMPLIFIER AND ATTITUDE WARNING RJ9 ELECTRONIC (FUEL ONLY) (SEE 24-3, FIG. 5D, ITEM 112)	5199	RF
1	BAC27CEE354		. VINYL DECAL, POWER SUPPLY FUEL FLOWMETER INDICATOR. SYSTEM	5199	1
1A	BAC27CEE1950		. VINYL DECAL, ALTERNATE POWER SUPPLY FUEL FLOWMETER. INDICATOR SYSTEM	5199	1
2	10-3071-4		. POWER SUPPLY ASSY, FLOWMETER SYSTEM ATTACHING PARTS	5199	1
	NAS601-6P		. SCREW	5199	4
	NAS679A06W		. NUT	5199	4
2A	10-3071-4		. POWER SUPPLY ASSY, FLOWMETER SYSTEM ATTACHING PARTS	5199	1
	NAS601-6P		. SCREW	5199	4
	BACN10JC06		. NUT	5199	4
3	63-1617		. PLATE, MOUNTING ATTACHING PARTS	5199	2
	NAS603-8P		. SCREW	5199	2
4	63-1617		. PLATE, MOUNTING ATTACHING PARTS	5199	2
	NAS603-8P		. SCREW	5199	2
5	69-38466-12		. TRAY ASSY ATTACHING PARTS	5199	1
	NAS603-6P		. SCREW	5199	4
	BACN10FX21		. NUT	5199	4
6	69-38466-13		. TRAY ASSY ATTACHING PARTS	5199	1
7	NAS603-6P		. SCREW	5199	4
8	BACN10FX21		. NUT	5199	3
			. FOR REFERENCE TO OTHER EQUIPMENT DETAILS, SEE NHA	5199	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

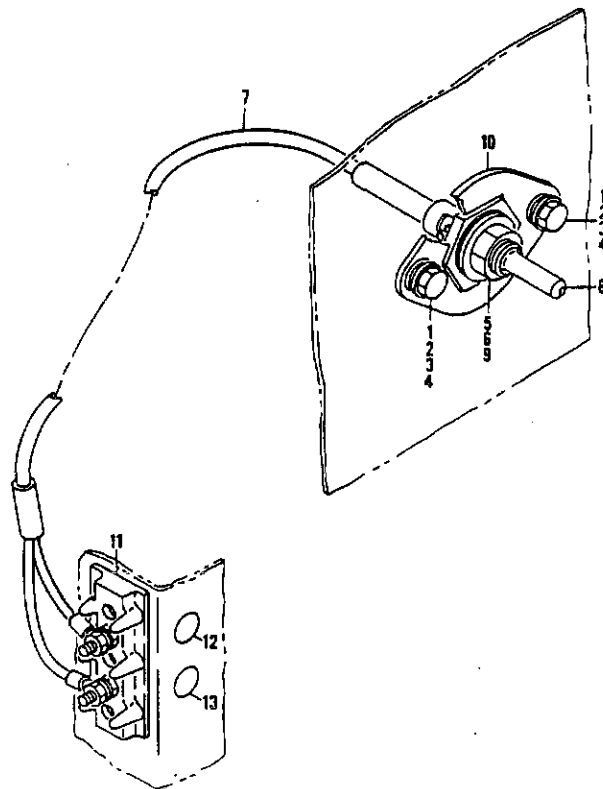
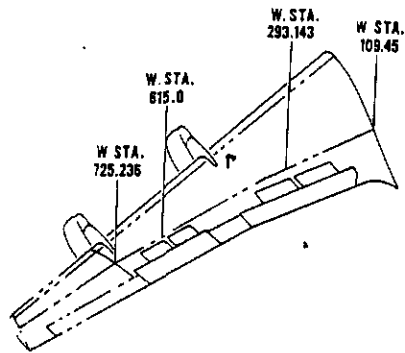


FIGURE 17. BULB INSTL, FUEL TEMPERATURE (LH)
TERMINAL STRIP INSTL, LEFT WING STATION 360 FUEL TEMPERATURE (LH)


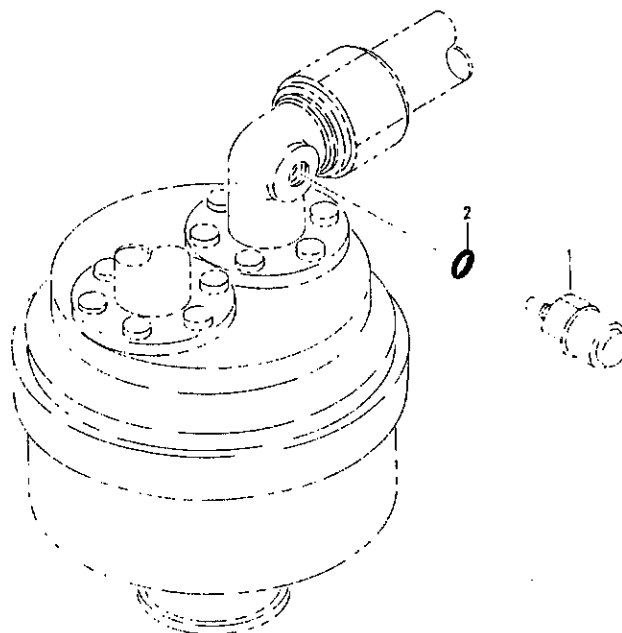


FIGURE 18. BULB INSTL, FUEL FILTER TEMPERATURE

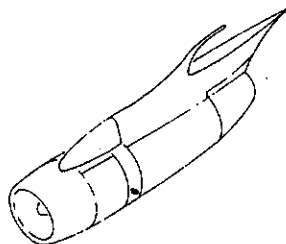

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
18	69-11494	BULB INSTL, FUEL FILTER TEMPERATURE (AFFECTED BY AD . . 65-25-1) (SEE 71-1, FIG. 5, ITEM 41, 71-1, FIG. 5B, ITEM 45, 71-1, FIG. 5E, ITEM 60, 71-1, FIG. 5G, ITEM 54 AND 71-1, FIG. 5H, ITEM 46)								RF
1	56817D	. BULB, ELECTRICAL TEMPERATURE (V35918) (OPTIONAL BAC . SPEC NO. 10-3232-4)								1
2	MS29512-04	. PACKING								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

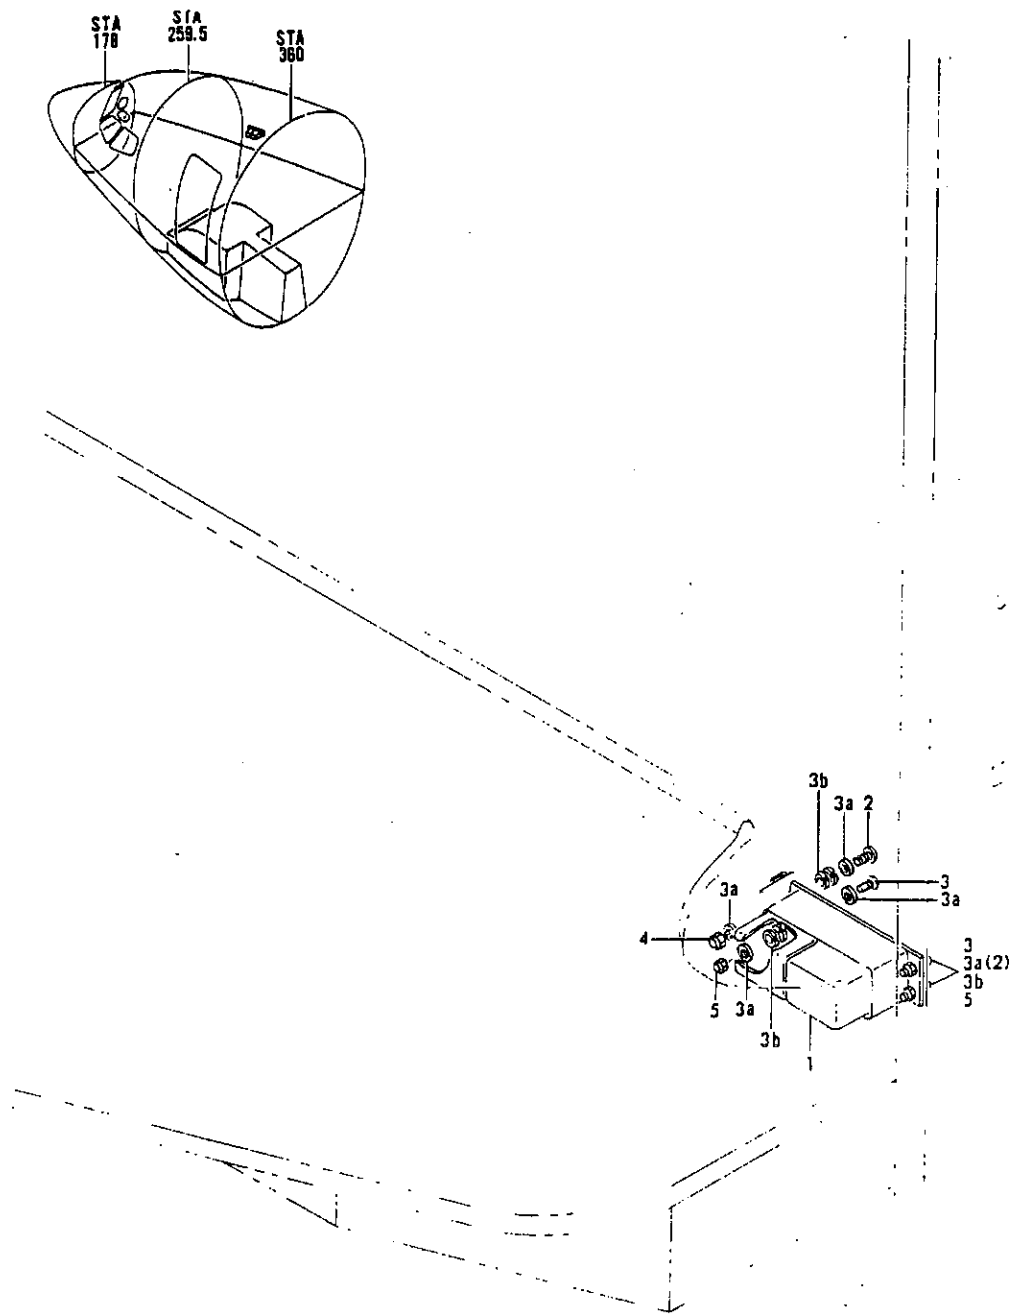


FIGURE 19. EQUIPMENT INSTL, FLIGHT ENGINEERS TABLE (FUEL ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R	19 1 3A 3B	69-4348 10-3065-71 NAS549-10 NAS557-3A	EQUIPMENT INSTL, FLIGHT ENGINEERS TABLE (SEE 24-3, FIG. 1A, ITEM 43, 24-3, FIG. 1B, ITEM 40 AND 24-3, FIG. 1C, ITEM 36) . SUMMATION DEVICE, FUEL QUANTITY GAGING SYSTEM SIGNAL ATTACHING PARTS . WASHER. GROMMET -----*-----	5199 1 8 4
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

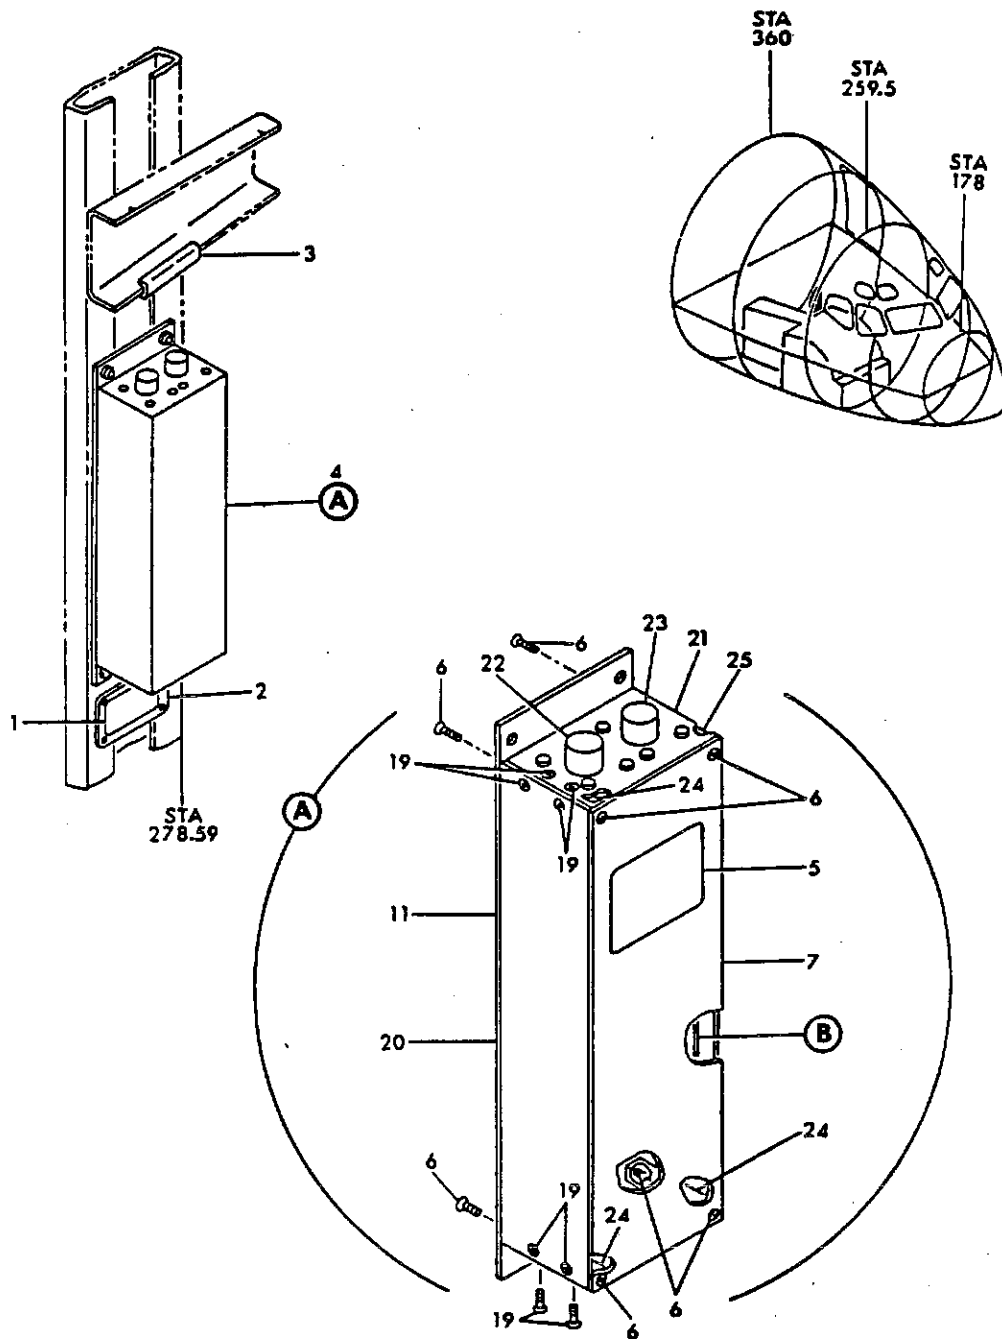


FIGURE 198. CAPACITY TRIM BOX INSTL, FUEL QUANTITY SYSTEM (SHEET 1)

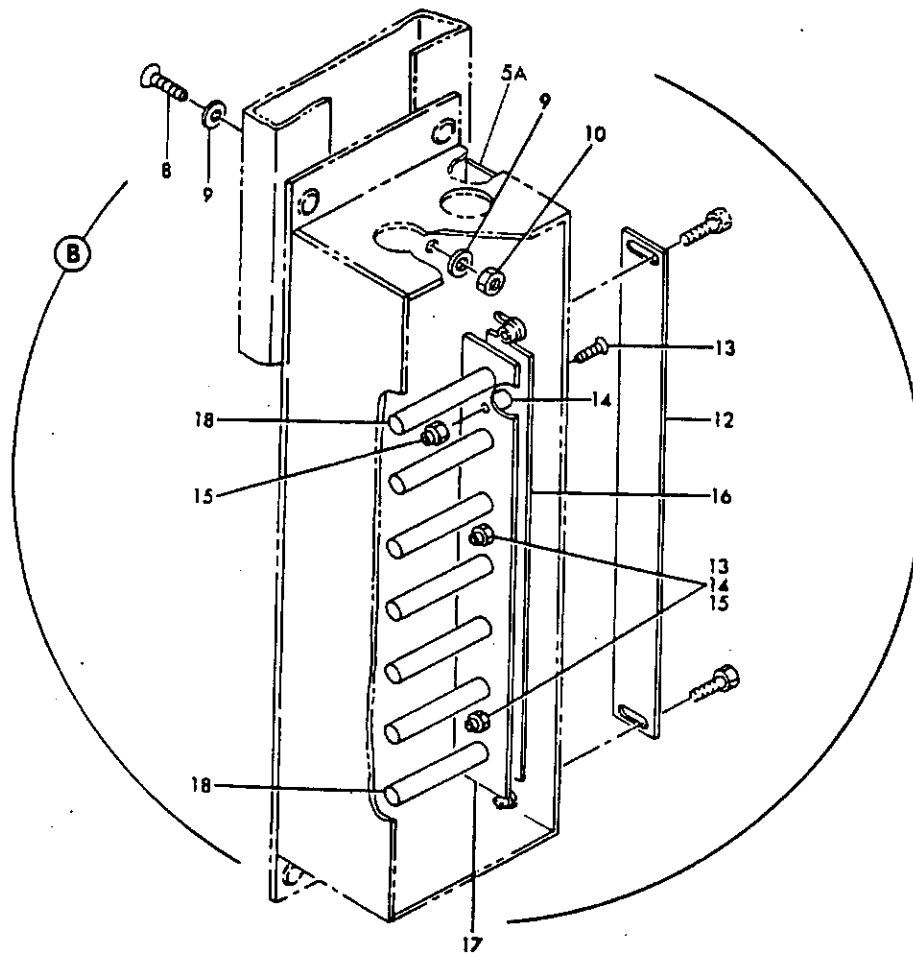


FIGURE 19B. CAPACITY TRIM BOX INSTL. FUEL QUANTITY SYSTEM (SHEET 2)

NOV 21/90

28-05-198

DETAILED PARTS LIST
28-C5-198
PAGE 1

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
19B	65C13802-1		CAPACITY TRIM BOX INST., FUEL QUANTITY SYSTEM (SEE. . . 25-1, FIG. 2E, ITEM 124)	5199	RF
1	BAC27DCC827		. MARKER-ALUMINUM FOIL.	5199	1
2	65C13802-2		. PLATE, MARKER	5199	1
3	BACG202A250		. GROMMET	5199	1
4	65C13541-1		. MODULE ASSY, CAPACITY TRIM FUEL QUANTITY SYSTEM . . . ATTACHING PARTS	5199	1
	NAS603-7P		. SCREW	5199	4
	AN960D10		. WASHER.	5199	4
5	BAC27CEE2027		. . MARKER-ALUMINUM FOIL.	5199	1
5A	81482-1		. . PLACARD, FUEL TANK IDENTIFICATION (V0563B) (ADDED . BY SVA E.O. 81482)	5199	1
6	NAS514P632-5		. . SCREW	5199	8
7	69-67601-3		. . PLATE, SIDE	5199	1
8	NAS514P632-()		. . SCREW	5199	1
9	AN960D6L		. . WASHER.	5199	2
10	BACN10JC06		. . NUT	5199	1
11	69-67601-2		. . PLATE, SIDE	5199	1
12	69-67601-4		. . PLATE, COVER. ATTACHING PARTS	5199	1
	BACS12CB04-4		. . SCREW	5199	2
13	NAS514P440-10		. . SCREW	5199	3
14	NAS43DD0-15		. . SPACER.	5199	3
15	BACN10DN40		. . NUT	5199	3
16	69-67601-7		. . STRIP, INSULATING	5199	1
17	69-67601-6		. . STRIP, CAPACITOR MOUNTING	5199	1
18	VC24GYDWKL		. . CAPACITOR, (V73899) (OPTIONAL TO VCJ2800 (V73899))	5199	7
18	65C13541-3		. . CAPACITOR (OPTIONAL TO VCJ2800 (V73899))	5199	7
18	VCJ2800		. . CAPACITOR, (V73899) (OPTIONAL VC24GYDWKL (V73899) OR 65C13541-3)	5199	7
19	NAS514P440-4		. . SCREW	5199	8
20	69-67601-5		. . PLATE, END.	5199	1
21	69-67601-1		. . COVER ASSY, CHANNEL	5199	1
22	BACC45FN14-15P		. . CONNECTOR	5199	1
23	BACC45FN14-15P6		. . CONNECTOR ATTACHING PARTS	5199	1
	BACS12CB04-4		. . SCREW	5199	8
	BACN10DN40		. . NUT	5199	8
24	69-37268-27		. . STANDOFF.	5199	3
25	69-37268-28		. . STANDOFF.	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					



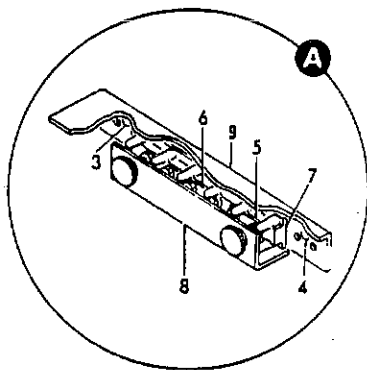


FIGURE 43D. PANEL INSTL, P9 ENGINE INSTRUMENT (FUEL ONLY)

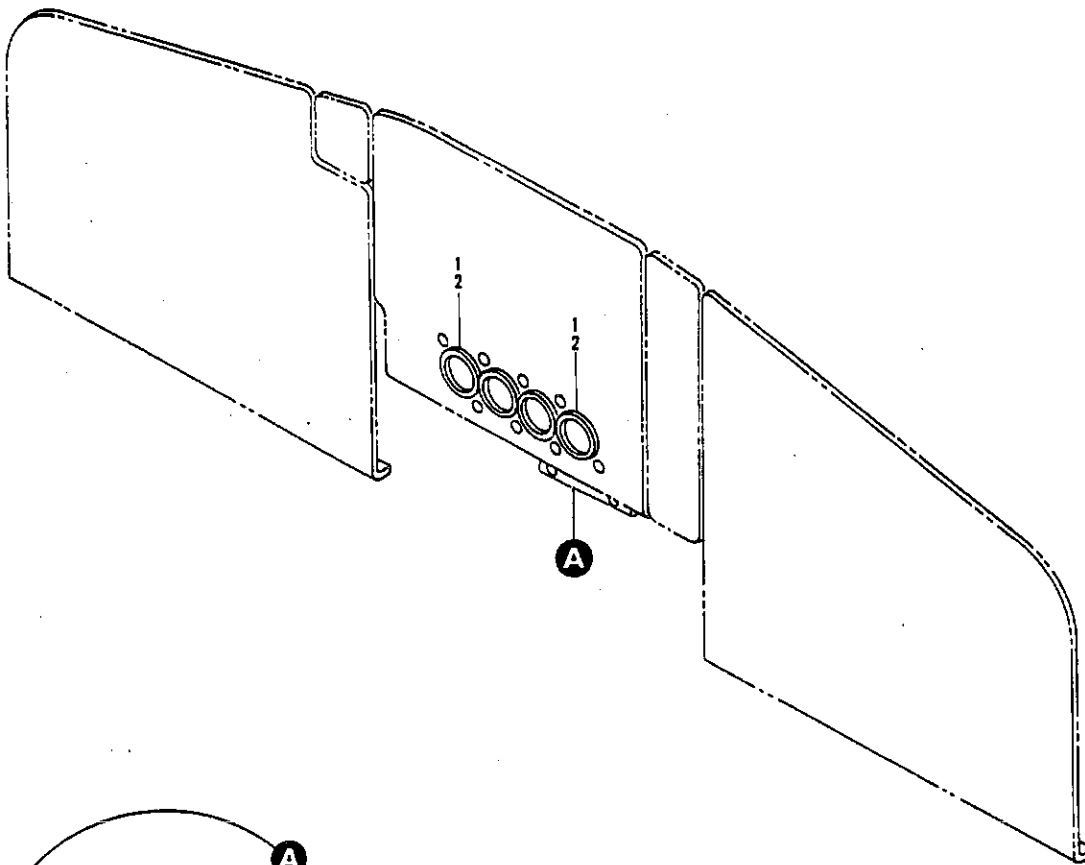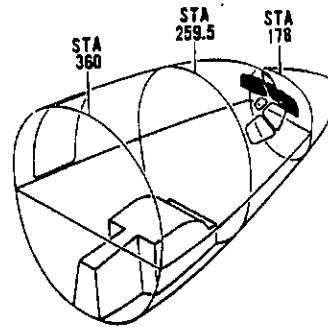

RAF
NOV 21/91

DETAILED PARTS LIST
28-05-43D
PAGE 1


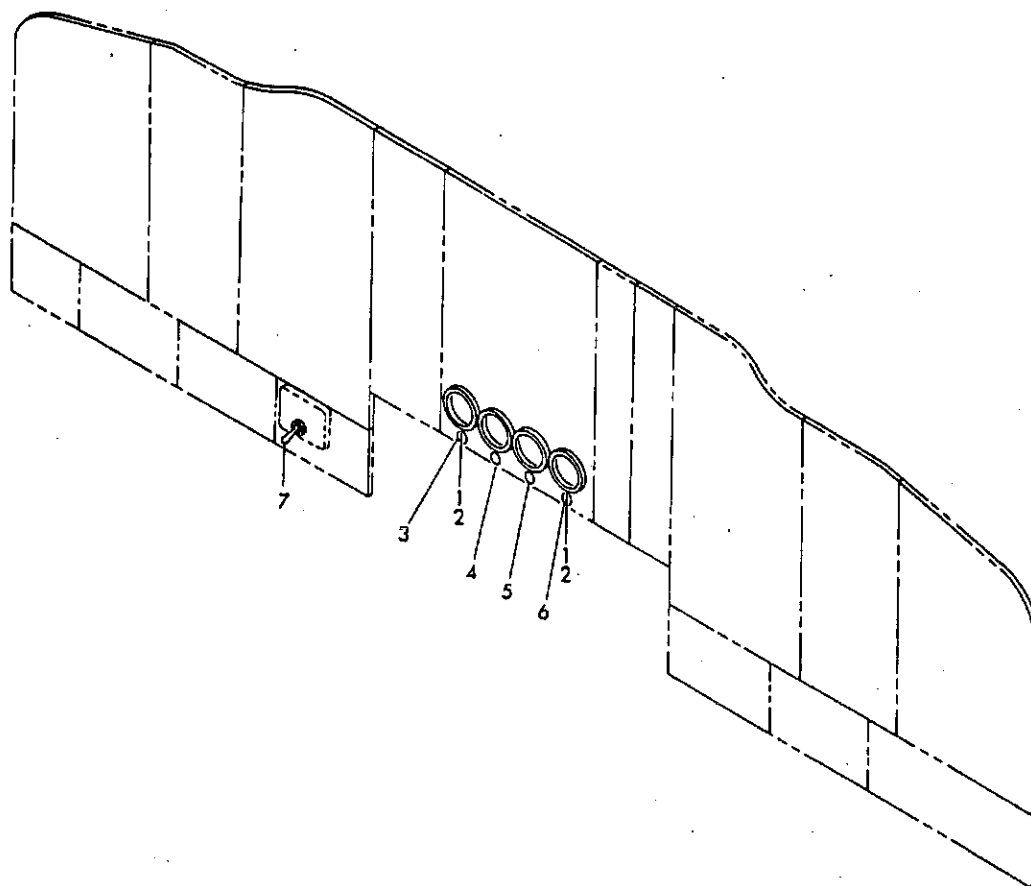


FIGURE 44F. MODULE INSTL, CAPTAINS AND FIRST OFFICERS INSTRUMENT PANELS (FUEL ONLY)

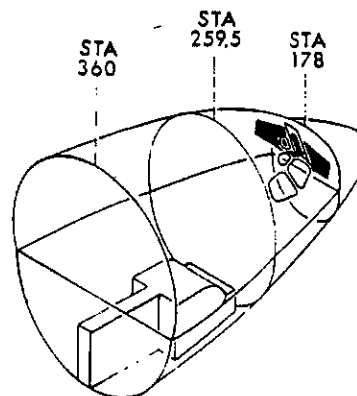


PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
44F	65C10900-1	MODULE INSTL, CAPTAINS AND FIRST OFFICERS (INSTRUMENT PANELS) (VARIABLE DWG; 65C10900-5003) (SEE 25-1, FIG. 2E, ITEM 107A)							5199	RF
1	10-3071-10	. FLOWMETER, FUEL							5199	4
	65C10905-1	. MODULE ASSY, P9-2 (FUEL ONLY)							5199	RF
2	BACC10EL3	. . CLAMP							5199	4
3	BACM9N1FA	. . SCOTCH-CAL, 1							5199	1
4	BACM9N1FB	. . SCOTCH-CAL, 2							5199	1
5	BACM9N1FC	. . SCOTCH-CAL, 3							5199	1
6	BACM9N1FD	. . SCOTCH-CAL, 4							5199	1
	69-53107-9	. PANEL ASSY, P8-7 (FUEL ONLY).							5199	RF
7	1TL1-3D	. SWITCH, (V91929).							5199	1
		. FOR REFERENCE TO OTHER MODULE DETAILS, SEE NHA. . . .							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

RAF
NOV 21/90

28-05-44F

DETAILED PARTS LIST
28-05-44F
PAGE 1

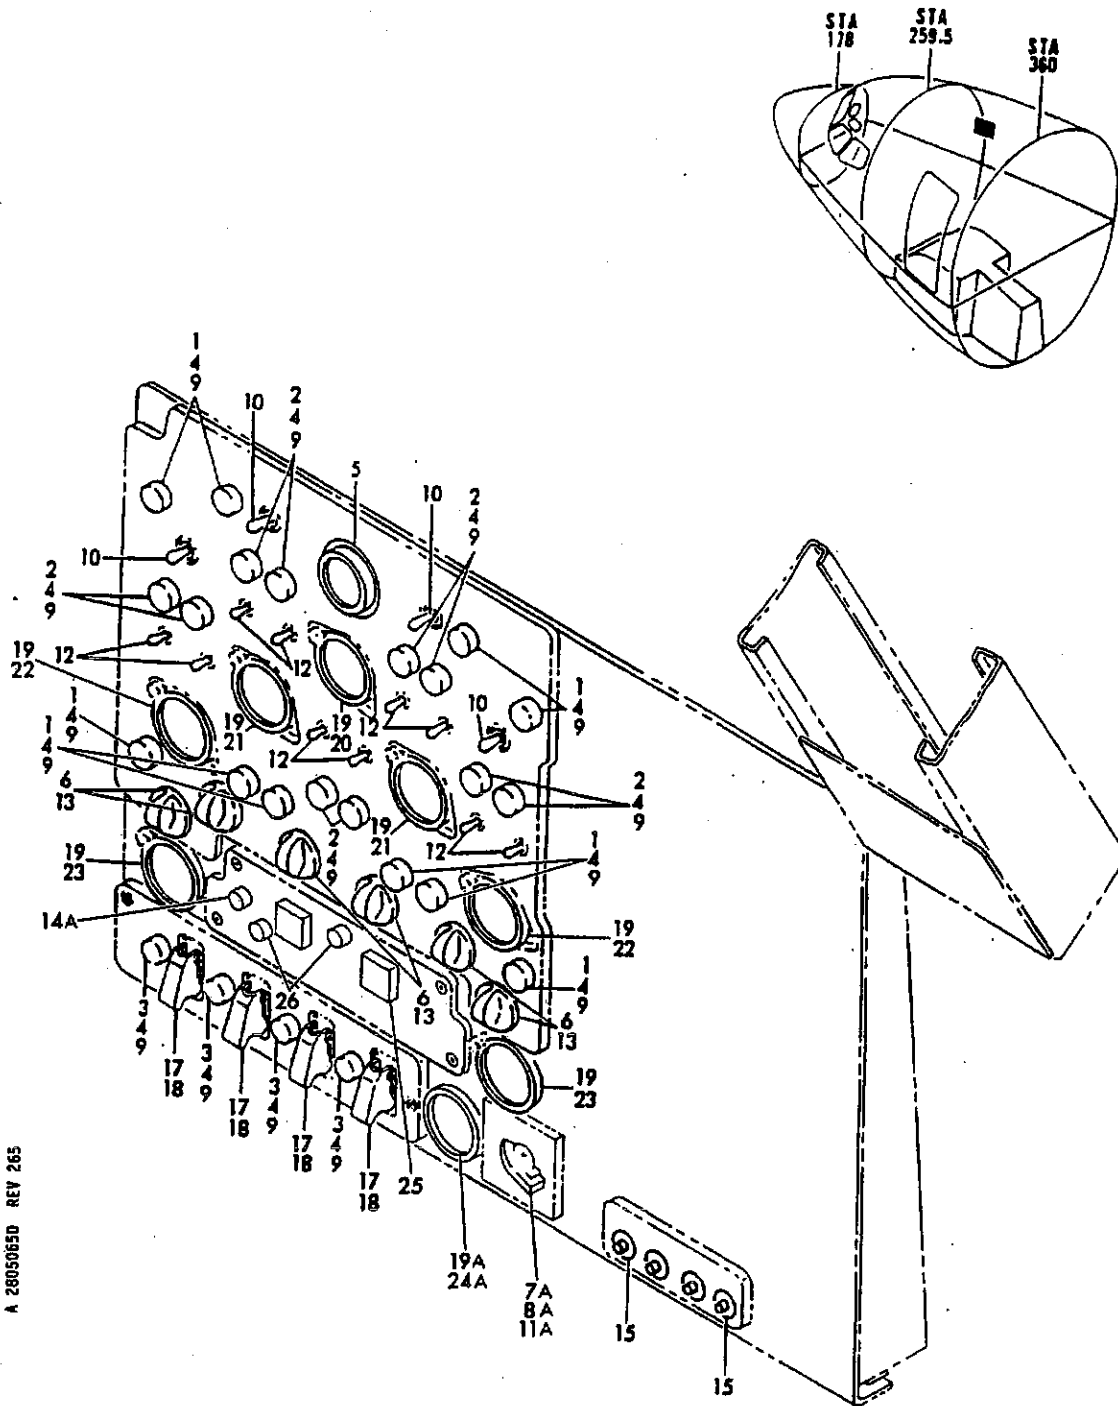

A 28050650 REV 265

FIGURE 65D. PANEL INSTL, FLIGHT ENGINEERS LOWER (FUEL ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
65D	65-58398-1		PANEL INSTL, FLIGHT ENGINEERS LOWER (FUEL ONLY) (DELETED BY RAF 7211.019-225) (SEE 25-1, FIG. 1K, ITEM 5)	0150	RF
	361-39-11-74192-001		PANEL INSTL, FLIGHT ENGINEERS LOWER (FUEL ONLY) (ADDED BY RAF 7211.019-225) (SEE 25-1, FIG. 1K, ITEM 5)	0150	RF
1	SHBP		. CAP, BLUE WARNING LIGHT (V81590)	0150	10
2	SAP		. CAP, AMBER WARNING LIGHT (V81590)	0150	10
3	SHAP		. CAP, AMBER WARNING LIGHT (V81590)	0150	4
4	1864		. LAMP, INCANDESCENT (V08806)	0150	24
5	W33-7510-10L		. CLOCK, (V98429)	0150	1
			ATTACHING PARTS		
	MS24693BB30		. SCREW	0150	2
			-----*		
	65-58398-13		. UNIT ASSY, (FUEL ONLY)	0150	RF
6	BACK20G3		. . KNOB	0150	6
7A	66-9039		. . KNOB ASSY, SMALL POINTER (RELOCATED PER RAF 7211.019-225)	0150	1
8A	LL22XD62J3		. . . SETSCREW, HEX SOCKET (V03038) (RELOCATED PER. . . . RAF 7211.019-225)	0150	2
9	STB130-4		. . BASE, WARNING LIGHT (V81590)	0150	24
10	ITL1-3D		. . SWITCH, TOGGLE (V91929)	0150	4
11A	955E		. . SWITCH, (V35918) (RELOCATED PER RAF 7211.019-225)	0150	1
12	B905K912		. . SWITCH, TOGGLE (V15605)	0150	10
13	7AS12		. . SWITCH, FUEL VALVE (V91929)	0150	6
14A	8PB1		. . SWITCH, FUEL GAGES PUSH TO TEST (V91929) (RELOCATED BY RAF 7211.019-225)	0150	1
15	D20011GUB		. . SWITCH, (V81640)	0150	4
			ATTACHING PARTS		
	NAS514P632-7		. . SCREW	0150	20
			-----*		
17	11810		. . GUARD, (V72914)	0150	4
18	BACS30CG4		. . SWITCH	0150	4
			ATTACHING PARTS		
	AN515B6R7		. . SCREW	0150	8
			-----*		
19A	BACC10EL3		. . CLAMP, (RELOCATED PER RAF 7211.019-225)	0150	8
20	10-3065-116		. . INDICATOR, FUEL QUANTITY	0150	1
21	10-3065-61		. . INDICATOR, FUEL QUANTITY	0150	2
22	10-3065-53		. . INDICATOR, FUEL QUANTITY	0150	2
23	10-3065-1		. . INDICATOR, FUEL QUANTITY	0150	2
24A	10-3350		. . INDICATOR, FUEL TEMPERATURE (RELOCATED PER. RAF 7211.019-225)	0150	1
25	12898-001		. SWITCH, (FOR REFUELING ONLY SEE 89-6, FIG.2,. ITEM 6) (ADDED BY RAF 7211.019-225)	0150	RF
26	MS25010816A		. LIGHT, (FOR REFUELING ONLY SEE 89-6, FIG. 2,. ITEM 6) (ADDED BY RAF 7211.019-225)	0150	RF
			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

RAF
NOV 21/94

28-05-65D

DETAILED PARTS LIST
28-05-65D
PAGE 1

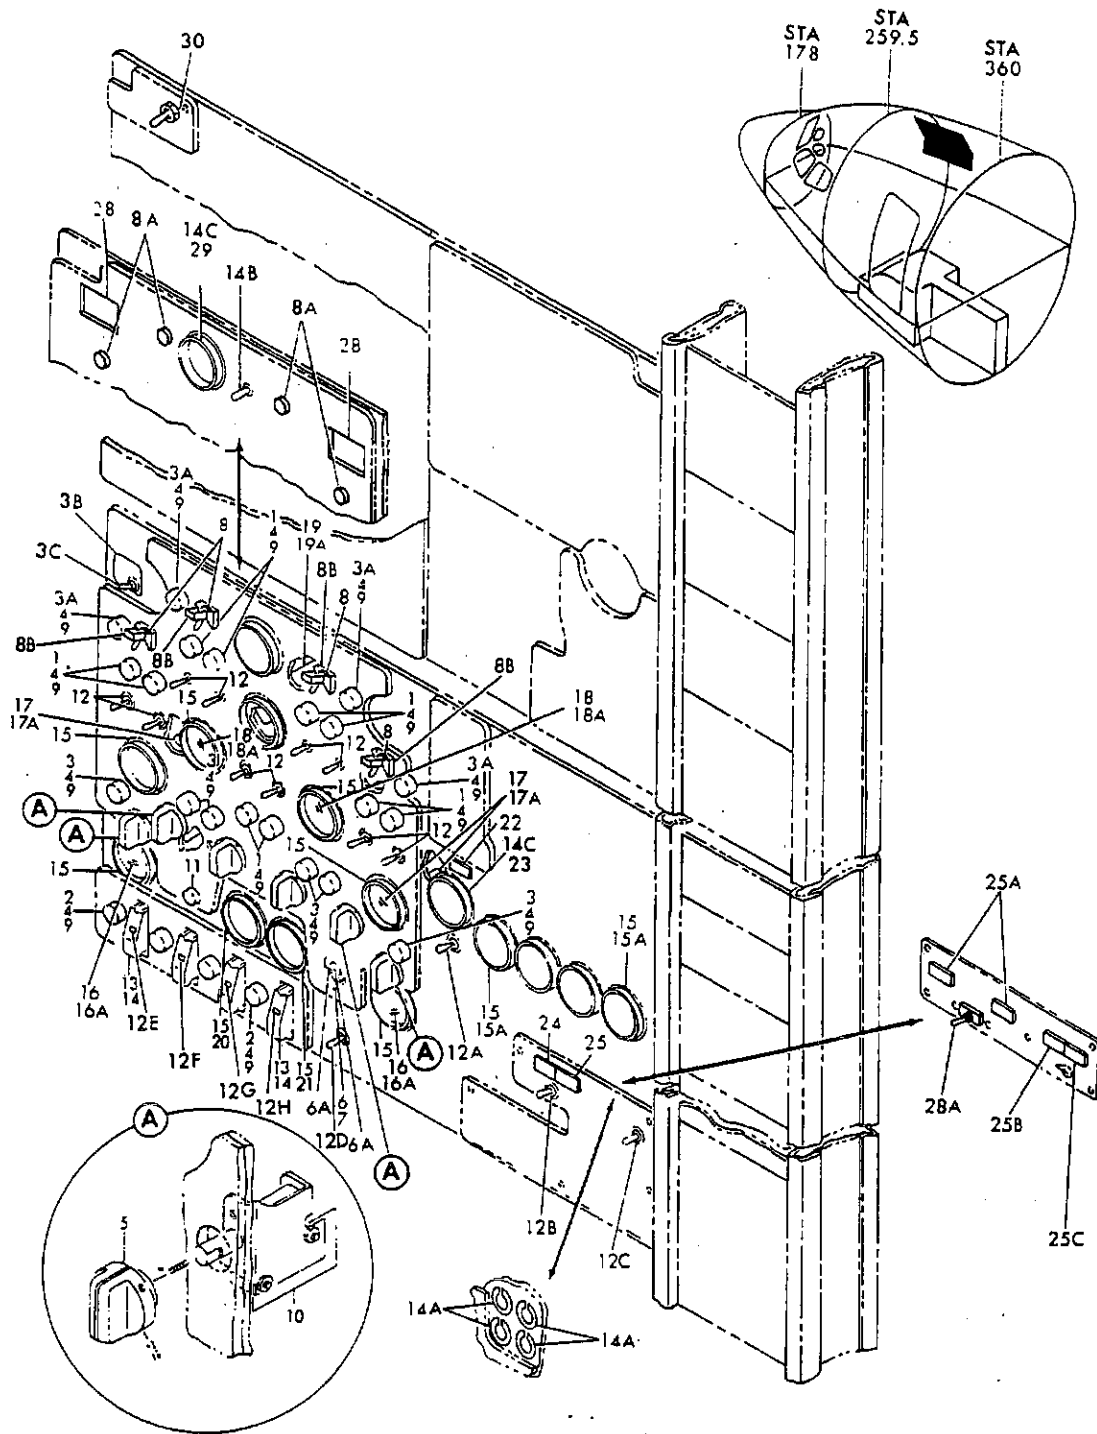


FIGURE 67. PANEL INSTL, FLIGHT ENGINEER'S LOWER (FUEL ONLY)

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
67	65-58956-1		PANEL INSTL, FLIGHT ENGINEERS LOWER (FUEL ONLY) (SEE . . . 25-1, FIG. 1F, ITEM 6, 25-1, FIG. 2D, ITEM 6 AND 25-1, FIG. 2E, ITEM 83)	5199	RF
1	SAP		. CAP, AMBER WARNING LIGHT (V81590)	5199	10
2	SHAP		. CAP, AMBER WARNING LIGHT (V81590)	5199	4
3	SHBP		. CAP, BLUE WARNING LIGHT (V81590)	5199	6
3A	SHBP		. CAP, BLUE WARNING LIGHT (V81590)	5151	4
3A	SHCP		. CAP, WHITE WARNING LIGHT (V81590)	5299	4
4	1864		. LAMP, INCANDESCENT (V08806)	5199	24
	65-58956-11		. UNIT ASSY, (FUEL ONLY)	5199	RF
	65-58956-88		. UNIT ASSY, (FUEL ONLY)	5199	RF
5	BACK20G3		. . . KNOB	5199	6
6	66-9039		. . . KNOB ASSY, SMALL POINTER	5199	1
6A	LL22XD62J3		. . . SETSCREW, HEX SOCKET (V03038)	5199	2
7	955E		. . . SWITCH, (V35918)	5199	1
8	ITL1-3D		. . . SWITCH, (V91929)	5199	4
9	STB130-4		. . . INDICATOR, FUEL FLOW (V81590)	5199	24
10	7AS12		. . . SWITCH, (V91929)	5199	6
12	8905K912		. . . SWITCH, (V15605)	5199	10
	NAS514P632-7		ATTACHING PARTS . . . SCREW	5199	34
13	11810		. . . GUARD, (V72914) (DELETED BY DAW MOD EDC 003743)	5199	4
14	BACS30CG4		. . . SWITCH	5199	4
	NAS601-7P		ATTACHING PARTS . . . SCREW	5199	8
15	BACC10EL3		. . . CLAMP	5199	13
16	65C13862-1		. . . INDICATOR ASSY, FUEL QUANTITY	5199	2
16A	10-3065-256		. . . INDICATOR	5199	1
			. . . REQUIRED PLACARDS, (SEE 11-6, FIG. 10A)	5199	
17	65C13862-2		. . . INDICATOR ASSY, FUEL QUANTITY	5199	2
17A	10-3065-257		. . . INDICATOR	5199	1
			. . . REQUIRED PLACARDS, (SEE 11-6, FIG. 10A)	5199	
18	65C13862-3		. . . INDICATOR ASSY, FUEL QUANTITY	5199	2
18A	10-3065-258		. . . INDICATOR	5199	1
			. . . REQUIRED PLACARDS, (SEE 11-6, FIG. 10A)	5199	
19	65C13862-4		. . . INDICATOR ASSY, FUEL QUANTITY	5199	1
19A	10-3065-259		. . . INDICATOR	5199	1
			. . . REQUIRED PLACARDS, (SEE 11-6, FIG. 10A)	5199	
20	10-3065-260		. . . INDICATOR, TOTAL FUEL QUANTITY	5199	1
21	10-60521-1		. . . INDICATOR, FUEL TEMPERATURE	5199	1
			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NMA	5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE					


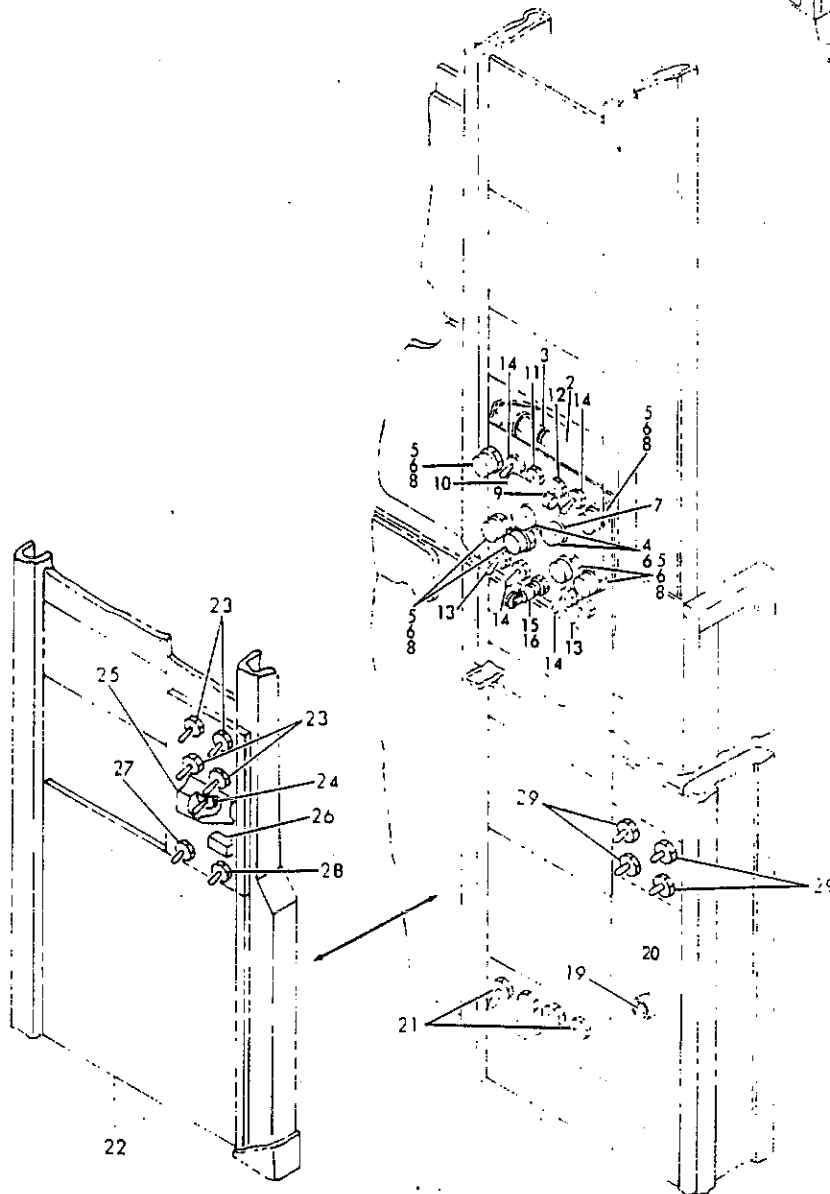


FIGURE 68. PANEL INSTL, FLIGHT-ENGINEERS AUXILIARY (FUEL ONLY)

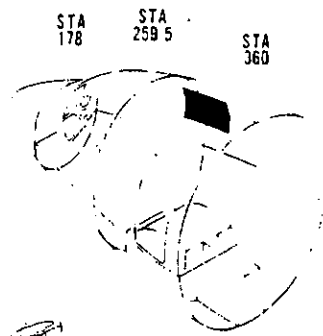

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
68	65-58957-1		PANEL INSTL, FLIGHT ENGINEERS AUXILIARY (FUEL ONLY) . . (SEE 25-1, FIG. 1B, ITEM 8, 25-1, FIG. 1E, ITEM 8, 25-1, FIG. 1F, ITEM 7, 25-1, FIG. 2D, ITEM 6 AND 25-1, FIG. 2E, ITEM 83)	5199	RF
	65-58741-2		. PANEL INSTL, FUEL DUMP (FUEL ONLY).	5199	RF
2	1864		. . LAMP, (V08806).	5199	1
3	BACS1681		. . SOCKET.	5199	1
4	SHAP		. . CAP, AMBER WARNING LIGHT (V81590)	5199	2
5	SHBP		. . CAP, BLUE WARNING LIGHT (V81590).	5199	6
6	1864		. . LAMP, (V08806).	5199	8
	65-58741-3		. . UNIT ASSY, (FUEL ONLY).	5199	RF
7	STB261-1		. . . BASE, LIGHT (V81590).	5199	1
8	STB130-4		. . . BASE, LIGHT (V81590).	5199	6
9	NAS607-1-4P		. . . PIN	5199	1
10	63-2096-1		. . . BAR, AIR CONDITIONING CONTROL GANG.	5199	1
11	MS25306-212		. . . SWITCH.	5199	1
12	63-2095-3		. . . SWITCH.	5199	1
13	MS35059-23		. . . SWITCH.	5199	2
14	MS35058-23		. . . SWITCH.	5199	4
15	BZ2RQ18T		. . . SWITCH, (V91929).	5199	1
16	MS35333-27		. . . WASHER.	5199	1
			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE					


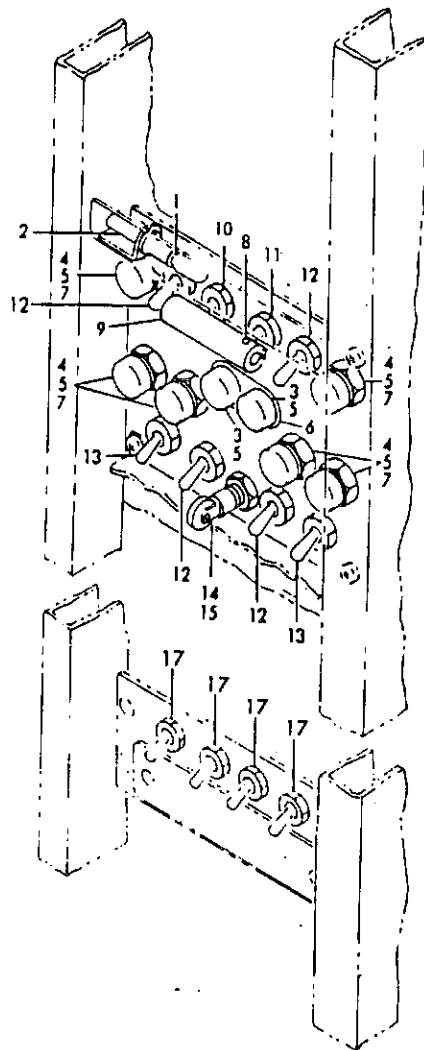


FIGURE 69. PANEL INSTL, FLIGHT ENGINEERS AUXILIARY (FUEL ONLY)

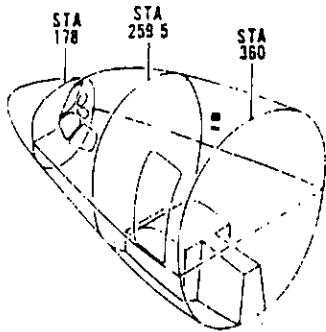

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R R R R R R R R R R R R R R R	69	65-58399-1	PANEL INSTL, FLIGHT ENGINEERS AUXILIARY (FUEL ONLY) . . (SEE 25-1, FIG. 1D, ITEM 8, 25-1, FIG. 1E, ITEM 8, 25-1, FIG. 1F, ITEM 7, 25-1, FIG. 1J, ITEM 8, 25-1, FIG. 1K, ITEM 5, 25-1, FIG. 2C, ITEM 8 AND 25-1, FIG. 2E, ITEM 115)	0150 RF
		65-58741-2	PANEL INSTL, FUEL DUMP (FUEL ONLY)	0150 RF
	1	1864	BULB, (V08806)	0150 1
	2	BACS1681	SOCKET	0150 1
	3	SHAP	CAP, AMBER WARNING LIGHT (V81590)	0150 2
	4	SH8P	CAP, BLUE WARNING LIGHT (V81590)	0150 6
	5	1864	BULB, (V08806)	0150 8
		65-58741-3	UNIT ASSY, (FUEL ONLY)	0150 1
	6	STB261-1	BASE, LIGHT (V81590)	0150 1
	7	STB130-4	BASE, LIGHT (V81590)	0150 6
	8	NAS607-1-4P	PIN	0150 1
	9	63-2096-1	BAR, GANG	0150 1
	10	MS25306-212	SWITCH	0150 1
	11	63-2095-3	SWITCH	0150 1
	12	MS35058-23	SWITCH	0150 4
	13	MS35059-23	SWITCH	0150 2
	14	BZ2RQ18T	SWITCH, ROLLER PLUNGER (V91929)	0150 1
	15	MS35333-27	WASHER	0150 1
FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA			0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

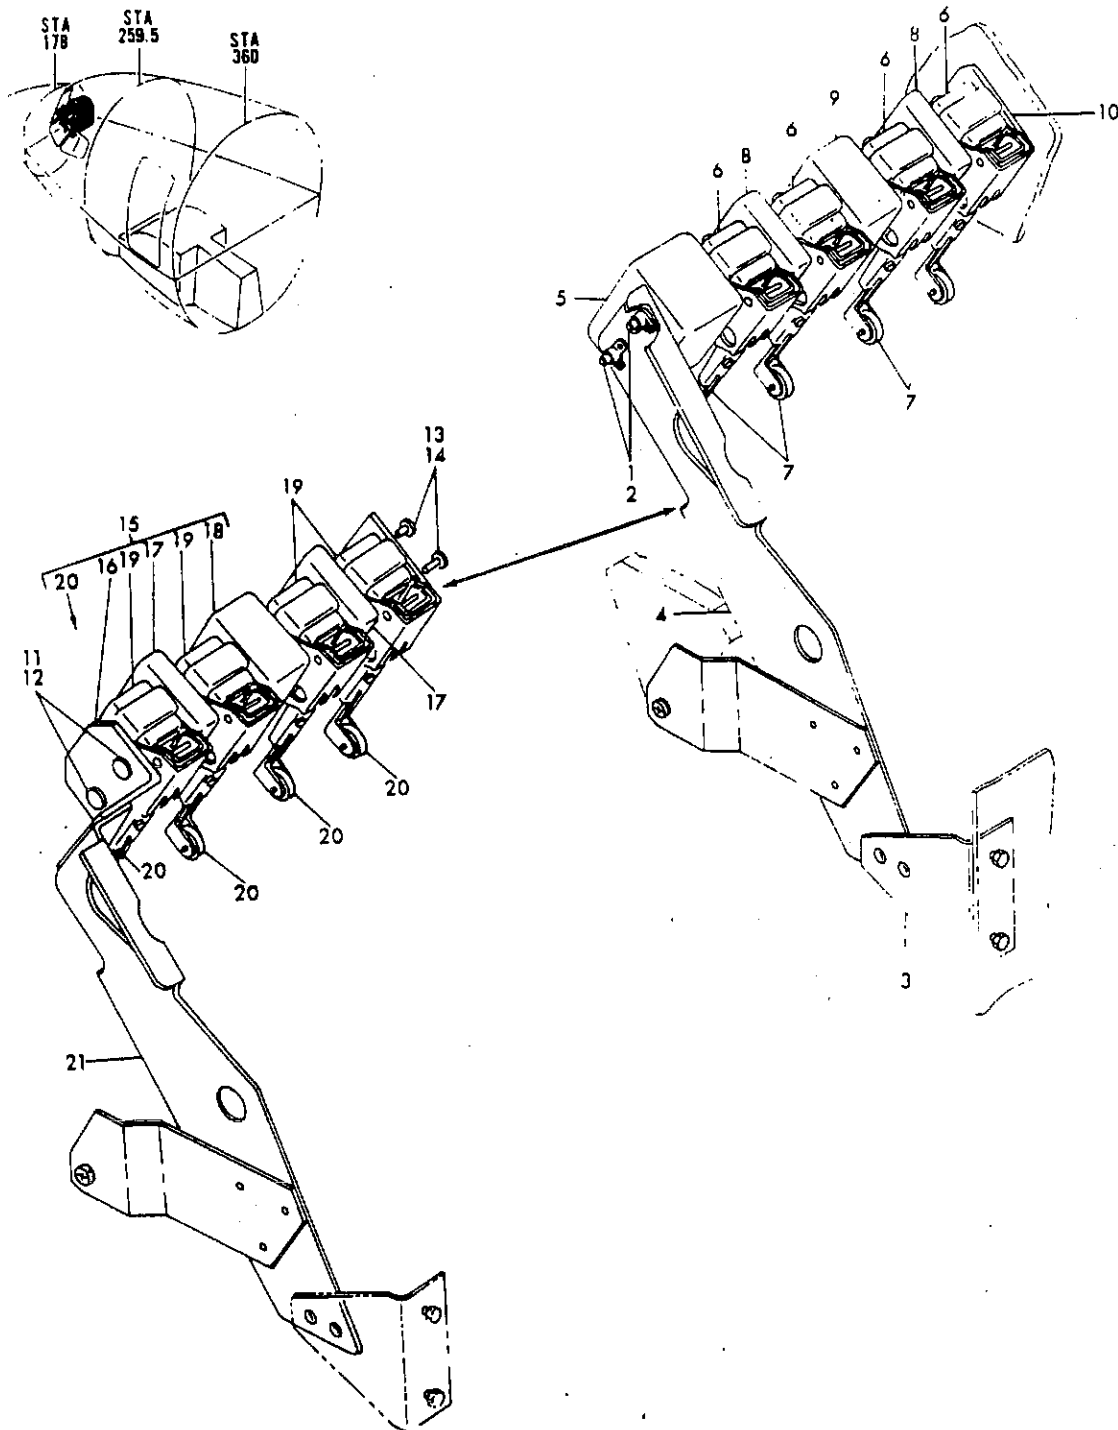


FIGURE 75. MECHANISM ASSY, CONTROL STAND UPPER (FUEL ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
75	50-5560-42		MECHANISM ASSY, CONTROL STAND UPPER (FUEL ONLY) (SEE. .	5199	RF
			76-3, FIG. 1, ITEM 64)		
3	66-25513-1		. CLIP, ELECTRIC SHUT-OFF SUPPORT	5199	1
			ATTACHING PARTS		
	BACR15BB5D		. RIVET	5199	2
			-----*		
12	AN960D6		. WASHER.	5199	4
13	NAS671-6		. NUT	5199	2
14	BACN10JC06		. NUT	5199	2
			ATTACHING PARTS		
	BACR15BB5D		. RIVET	5199	2
			-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 06
FUEL JETTISON SYSTEM

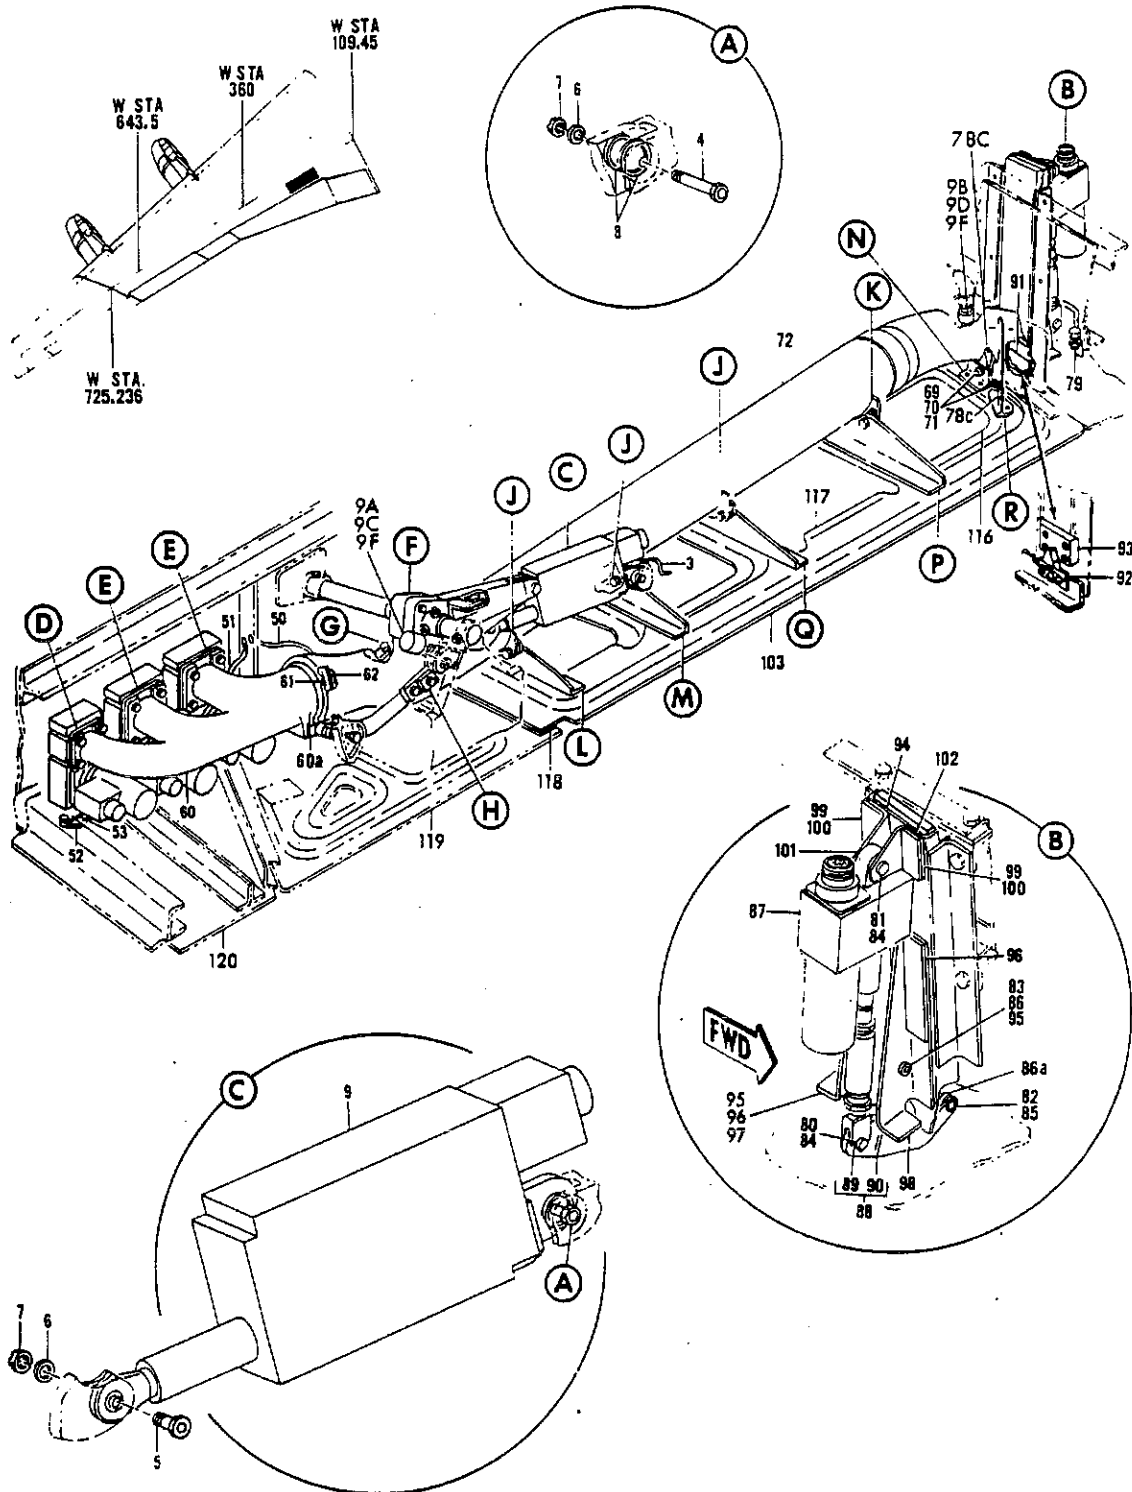


FIGURE 2. CHUTE INSTL, FUEL JETTISON RETRACTABLE DUMP (SHEET 1)

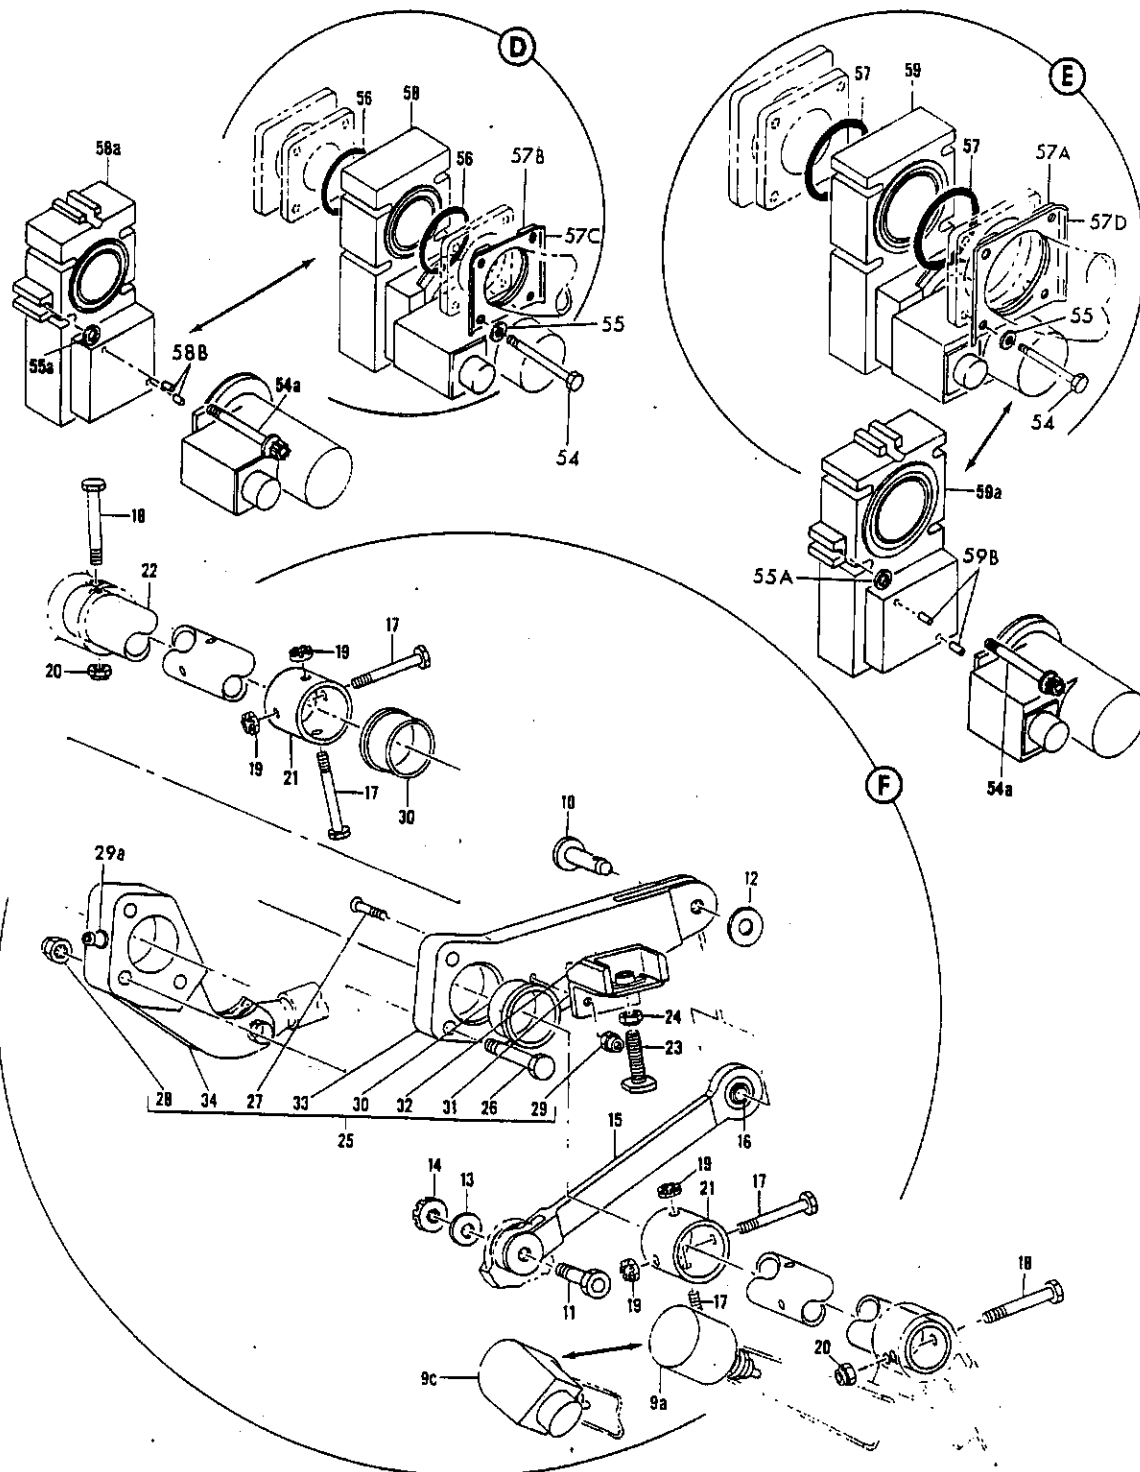


FIGURE 2. CHUTE INSTL, FUEL JETTISON RETRACTABLE DUMP (SHEET 2)

NOV 21/90

20-06-2

DETAILED PARTS LIST
28-06-2
PAGE 1

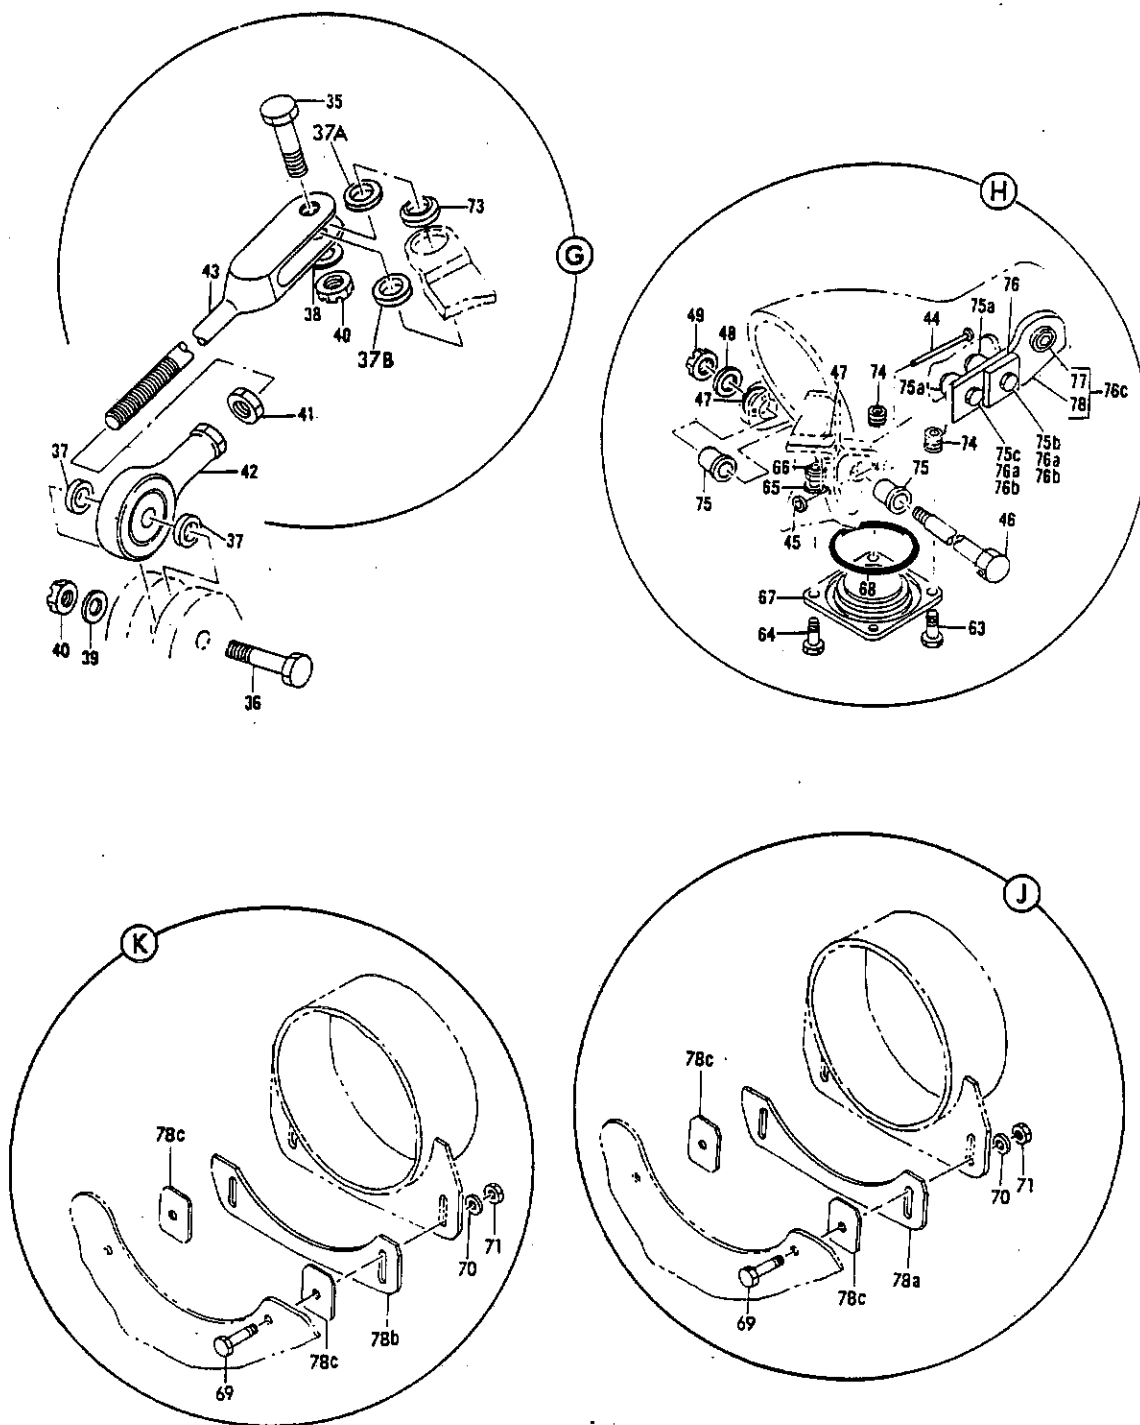


FIGURE 2. CHUTE INSTL, FUEL JETTISON RETRACTABLE DUMP (SHEET 3)

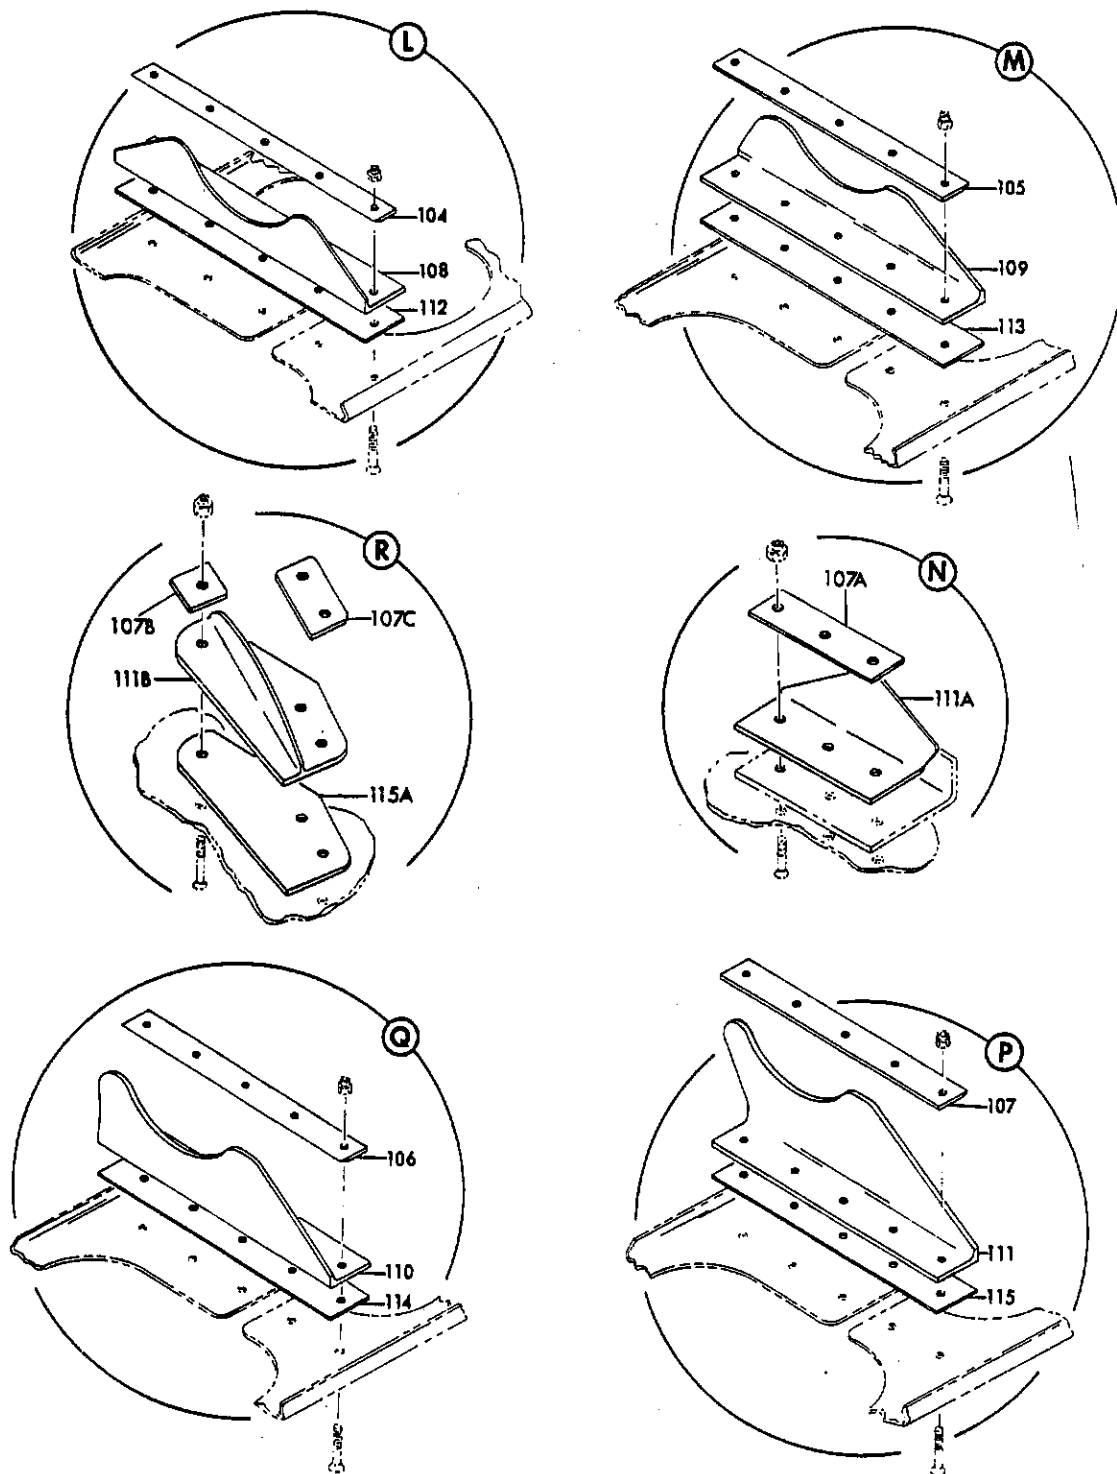


FIGURE 2. CHUTE INSTL, FUEL JETTISON RETRACTABLE DUMP (SHEET 4)

NOV 21/90

28-06-2

DETAILED PARTS LIST
28-06-2
PAGE 3



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2	65-15541-1	CHUTE INSTL, FUEL JETTISON RETRACTABLE DUMP (LH) (SEE 57-3, FIG. 1, ITEM 9)		RF
	65-15541-2	CHUTE INSTL, FUEL JETTISON RETRACTABLE DUMP (RH) (SEE 57-3, FIG. 1, ITEM 9)		RF
3	MS25083-2BB5	JUMPER ASSY		1
		ATTACHING PARTS		
	NAS603-6	SCREW		2
	AN960D10	WASHER		2
	NAS679A3W	NUT		2
4	NAS1105-24DW	BOLT		1
5	NAS1105-11DW	BOLT		1
6	AN960-516	WASHER		2
7	AN320-5	NUT		2
8	66-9309	WASHER, FUEL JETTISON NYLON		2
9	10-60414-2	ACTUATOR ASSY, FUEL JETTISON CHUTE LINEAR		1
9D	H11-1049	SWITCH, (VB1640)		1
		(OPTIONAL 2EN19RB (V91929))		
9D	2EN19RB	SWITCH, (V91929)		1
		(OPTIONAL TO H11-1049 (VB1640))		
10	63-10119	PIN, FUEL JETTISON FLAT HEAD		1
11	NAS1106-10DW	BOLT		1
12	AN960-516	WASHER		1
13	AN960-616	WASHER		1
14	AN320-6	NUT		1
15	69-10428-2	LINK ASSY, FUEL JETTISON		1
16	BAC810A214GM2	BEARING		1
17	AN3-17	BOLT		4
18	AN4-21A	BOLT		2
19	AN320-3	NUT		4
20	NAS679A4W	NUT		2
21	3-87020-2001	COLLAR, JACK SHAFT		2
22	66-1696-2	SHAFT, FUEL JETTISON JACK		1
25	69-41519-3	QUADRANT ASSY, (LH ONLY)		1
25	69-41519-4	QUADRANT ASSY, (RH ONLY)		1
26	NAS1106-27W	BOLT		3
28	NAS679A6	NUT		3
30	69-40472-1	BEARING, FLANGED		2
33	66-12940-2	LUG		1
34	66-10372-9	LUG, FUEL JETTISON QUADRANT (LH ONLY)		1
34	66-10372-10	LUG, FUEL JETTISON QUADRANT (RH ONLY)		1
35	NAS1103-12W	BOLT		1
36	NAS1103-16DW	BOLT		1
37	NAS43-3-7	SPACER		2
37A	NAS43DD3-5	SPACER	0150	1
37B	NAS43DD3-10	SPACER	0150	1
38	AN960-10	WASHER		1
39	AN960D10	WASHER		1
40	AN320-3	NUT		2
41	AN316-4R	NUT		1
42	BAC810A399M2	BEARING		1
43	66-36017-3	FORK, FUEL JETTISON TURNBUCKLE		1
44	AN393-59	PIN		1
45	AN960D10	WASHER		1
46	66-1815-1	PIN, FUEL JETTISON TRUNION HINGE		1
47	50-5359-11	WASHER, FUEL JETTISON SYSTEM TEFLON		2
48	AN960-616	WASHER		1
49	AN320-6	NUT		1
50	MS25083-2BB7	JUMPER ASSY		1
		ATTACHING PARTS		
	NAS603-10	SCREW		2
	AN960D10	WASHER		3
	NAS679A3W	NUT		2
51	MS25083-2BB9	JUMPER ASSY		1
		ATTACHING PARTS		
	NAS603-6	SCREW		1
	AN960D10	WASHER		1
	NAS679A3W	NUT		1
52	MS25083-2BB5	JUMPER ASSY		1
		ATTACHING PARTS		
	NAS603-6	SCREW		1
	AN960D10	WASHER		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2	NAS679A3W	. NUT		1
53	MS25083-28B3	. JUMPER ASSY		1
	NAS603-6	. SCREW		1
	NAS603-10	. SCREW		1
	AN960D10	. WASHER		2
	NAS679A3W	. NUT		2
54	AN4-22A	. BOLT		12
54A	BACB30FD4-20	. BOLT	0499	9
55	AN960D416	. WASHER		12
56	MS29513-223	. PACKING		2
57	MS29513-227	. PACKING		4
58	10-3068	. VALVE ASSY, ELECTRIC MOTOR DRIVEN FUEL SHUTOFF (SAME AS AV16B1519D (V73760) (DELETED BY SB 2652))	0103	1
58	AV16B1519D	. VALVE ASSY, ELECTRIC MOTOR DRIVEN FUEL SHUTOFF (V73760) (SAME AS BAC SPEC NO. 10-3068) (DELETED BY SB 2652) (SEE 28-1, FIG. 35)	0103	RF
58A	10-3068-5	. VALVE ASSY, ELECTRIC MOTOR DRIVEN FUEL SHUTOFF	0499	1
58A	10-3068-5	. VALVE ASSY, ELECTRIC MOTOR DRIVEN FUEL SHUTOFF (ADDED BY SB 2652)	0103	1
59	10-3068-1	. VALVE ASSY, ELECTRIC MOTOR DRIVEN FUEL SHUTOFF (SAME AS AV16B1520C (V73760) (DELETED BY (SB 2652))	0103	2
59	AV16B1520C	. VALVE ASSY, ELECTRIC MOTOR DRIVEN FUEL SHUTOFF (V73760) (SAME AS BAC SPEC NO. 10-3068-1) (DELETED BY SB 2652) (SEE 28-1, FIG. 35)	0103	RF
59A	10-3068-6	. VALVE ASSY, ELECTRIC MOTOR DRIVEN FUEL SHUTOFF	0499	2
59A	10-3068-6	. VALVE ASSY, ELECTRIC MOTOR DRIVEN FUEL SHUTOFF (ADDED BY SB 2652)	0103	2
60	65-4071-1	. MANIFOLD ASSY, FUEL JETTISON (LH ONLY)		1
60	65-4071-2	. MANIFOLD ASSY, FUEL JETTISON (RH ONLY)		1
60A	69-3837	. LUG, FUEL JETTISON MANIFOLD		1
61	69-1839	. SEAL, FUEL JETTISON TEFLON		1
62	MS29513-339	. PACKING		1
63	AN4H3A	. BOLT		2
64	AN4-3A	. BOLT		2
65	AN960D10	. WASHER		2
66	NAS679A4W	. NUT		2
67	69-16258-1	. SEAL ASSY, FUEL JETTISON SECONDARY (SEE FIG. 7)		1
68	MS29513-238	. PACKING		1
69	AN3-6A	. BOLT		10
70	AN960D10	. WASHER		10
71	NAS679A3W	. NUT		10
72	65-5483-33	. CHUTE ASSY, FUEL JETTISON (LH ONLY)		1
72	65-5483-34	. CHUTE ASSY, FUEL JETTISON (RH ONLY)		1
73	BACB10A211GM2	. BEARING		1
74	BACS13P4CN3	. SLEEVE		2
75	NAS77A8-69P	. BUSHING		2
75A	BACC50H76	. COVER		2
75B	NAS1106-17W	. BOLT		1
75C	NAS1106-13W	. BOLT		1
76	63-10508	. SPACER, FUEL JETTISON CHUTE TERMINAL FITTING BLOCK		1
76A	AN960-616	. WASHER		2
76B	NAS679A6	. NUT		2
76C	66-11411-1	. LUG ASSY, FUEL JETTISON CHUTE (LH ONLY)		1
76C	66-11411-2	. LUG ASSY, FUEL JETTISON CHUTE (RH ONLY)		1
77	BACB10A214GM2	. BEARING		1
78	66-11411-3	. LUG, FUEL JETTISON CHUTE (LH ONLY)		1
78	66-11411-4	. LUG, FUEL JETTISON CHUTE (RH ONLY)		1
78A	69-12397	. PLATE, SERRATED		3
78B	69-12397-2	. PLATE, SERRATED (LH ONLY)		1
78B	69-12397-1	. PLATE, SERRATED (RH ONLY)		1
78C	66-11637	. PLATE, FUEL JETTISON CHUTE SERRATED		10
79	MS25083-28B11	. JUMPER ASSY		1
	NAS603-6	. SCREW		2
	AN960D10	. WASHER		2
	NAS679A3W	. NUT		2
80	MS20392-3-21	. PIN		1
81	MS20392-3-23	. PIN		1
82	MS20392-2-17	. PIN		1
83	MS20392-4-33	. PIN		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
2	84	AN960PD416L	•	WASHER.	•	•	•	•		2
	85	AN960PD10L	•	WASHER.	•	•	•	•		1
	86	AN960PD516L	•	WASHER.	•	•	•	•		1
	86A	66-11792-1	•	ROLLER, FUEL JETTISON CHUTE UPLATCH	•	•	•	•		1
	87	R1584M10-3	•	ACTUATOR, LINEAR UPLATCH (V81039)	•	•	•	•		1
	88	66-13542-1	•	HOOK ASSY, FUEL JETTISON CHUTE UPLATCH.	•	•	•	•		1
	89	BACB10A357GCM2	•	• BEARING, (OPTIONAL BACB10A212G)	•	•	•	•		1
	90	66-13542-2	•	• HOOK, FUEL JETTISON CHUTE UPLATCH	•	•	•	•		1
	92	66-13541-3	•	HANGER, UPLATCH (LH ONLY)	•	•	•	•	0150	1
	92	66-13541-5	•	HANGER, UPLATCH (LH ONLY)	•	•	•	•	5199	1
	92	66-13541-4	•	HANGER, UPLATCH (RH ONLY)	•	•	•	•	0150	1
	92	66-13541-6	•	HANGER, UPLATCH (RH ONLY)	•	•	•	•	5199	1
			•	ATTACHING PARTS	•	•	•	•		
		NAS517-4-9	•	SCREW	•	•	•	•		3
		AN960-416	•	WASHER.	•	•	•	•		3
		66-15222-2	•	SHIM.	•	•	•	•	0150	AR
		66-15222-3	•	SHIM.	•	•	•	•	5199	2
			•	-----*	•	•	•	•		
	93	69-53157-1	•	GUIDE ASSY, (LH ONLY)	•	•	•	•		1
	93	69-53157-2	•	GUIDE ASSY, (RH ONLY)	•	•	•	•		1
			•	ATTACHING PARTS	•	•	•	•		
		NAS517-3-24	•	SCREW	•	•	•	•		3
		AN960-10	•	WASHER.	•	•	•	•		3
		NAS679A3W	•	NUT	•	•	•	•		3
			•	-----*	•	•	•	•		
	94	65-22258-1	•	SUPPORT ASSY, FUEL JETTISON CHUTE UPLATCH (LH ONLY)	•	•	•	•		1
	94	65-22258-2	•	SUPPORT ASSY, FUEL JETTISON CHUTE UPLATCH (RH ONLY)	•	•	•	•		1
			•	ATTACHING PARTS	•	•	•	•		
		NAS1103-3W	•	BOLT.	•	•	•	•		6
		NAS517-5	•	SCREW	•	•	•	•		2
		AN960PD10	•	WASHER.	•	•	•	•		8
		NAS679A3W	•	NUT	•	•	•	•		8
			•	-----*	•	•	•	•		
	95	BACB2885-215	•	BUSHING	•	•	•	•		2
	96	66-13309-2	•	FILLER, FUEL JETTISON CHUTE	•	•	•	•		2
			•	ATTACHING PARTS	•	•	•	•		
		NAS1466-13	•	BOLT.	•	•	•	•		8
		NAS1080-6	•	COLLAR.	•	•	•	•		8
			•	-----*	•	•	•	•		
	97	69-15867-9	•	BRACKET, FUEL JETTISON CHUTE UPLATCH SUPPORT.	•	•	•	•		1
	98	69-15867-10	•	BRACKET, FUEL JETTISON CHUTE UPLATCH SUPPORT.	•	•	•	•		1
			•	ATTACHING PARTS	•	•	•	•		
		NAS1466-11	•	BOLT.	•	•	•	•		6
		NAS1080-6	•	COLLAR.	•	•	•	•		6
			•	-----*	•	•	•	•		
	99	66-13309-3	•	FILLER, FUEL JETTISON CHUTE	•	•	•	•		2
	100	66-13309-4	•	FILLER, FUEL JETTISON CHUTE	•	•	•	•		2
			•	ATTACHING PARTS	•	•	•	•		
		NAS1466-14	•	BOLT.	•	•	•	•		4
		NAS1080-6	•	COLLAR.	•	•	•	•		4
			•	-----*	•	•	•	•		
R	101	66-13543-1	•	TERMINAL, FUEL JETTISON SYSTEM SUPPORT.	•	•	•	•		1
	102	66-13543-2	•	TERMINAL, FUEL JETTISON SYSTEM SUPPORT.	•	•	•	•		1
	103	65-7078-211	•	COVER ASSY, REAR SPAR STATION 219.16 TO 263.5 FUEL.	•	•	•	•	0150	1
			•	JETTISON CHUTE PANEL (LH ONLY)	•	•	•	•		
			•	(FOR REPLACEMENT ORDER 65-7078-231)	•	•	•	•		
	103	65-7078-219	•	COVER ASSY, REAR SPAR STATION 219.16 TO 263.5 CHUTE	•	•	•	•	0151	1
			•	PANEL (LH ONLY)	•	•	•	•		
			•	(FOR REPLACEMENT ORDER 65-7078-231)	•	•	•	•		
	103	65-7078-219	•	COVER ASSY, REAR SPAR STATION 219.16 TO 263.5 CHUTE	•	•	•	•	5299	1
			•	PANEL (LH ONLY)	•	•	•	•		
			•	(OPTIONAL TO AND REPLACEMENT FOR 65-7078-231)	•	•	•	•		
	103	65-7078-231	•	COVER ASSY, REAR SPAR STATION 219.16 TO 263.5 CHUTE	•	•	•	•	5299	1
			•	PANEL (LH ONLY)	•	•	•	•		
			•	(OPTIONAL AND FOR REPLACEMENT ORDER 65-7078-219)	•	•	•	•		
R	103	65-7078-231	•	COVER ASSY, REAR SPAR STATION 219.16 TO 263.5 CHUTE	•	•	•	•	0151	1
			•	PANEL (LH ONLY)	•	•	•	•		
R			•	(REPLACEMENT FOR 65-7078-181, -187, -211 AND -219)	•	•	•	•		
	103	65-7078-189	•	COVER ASSY, REAR SPAR STATION 219.16 TO 263.5 FUEL.	•	•	•	•		RF
			•	JETTISON CHUTE PANEL (SPARES ONLY) (IDENTICAL TO 65-7078-187)	•	•	•	•		
			•	(FOR REPLACEMENT ORDER 65-7078-231)	•	•	•	•		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
PARTS CATALOG

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	2 103	65-7078-212	COVER ASSY, REAR SPAR STATION 219.16 TO 263.5 FUEL.							0150	1
R			JETTISON CHUTE PANEL (RH ONLY)								
R			(FOR REPLACEMENT ORDER 65-7078-232)								
R	103	65-7078-220	COVER ASSY, REAR SPAR STATION 219.16 TO 263.5 CHUTE							0151	1
R			PANEL (RH ONLY)								
R			(FOR REPLACEMENT ORDER 65-7078-232)								
R	103	65-7078-220	COVER ASSY, REAR SPAR STATION 219.16 TO 263.5 CHUTE							5299	1
R			PANEL (RH ONLY)								
R			(OPTIONAL TO AND REPLACEMENT FOR 65-7078-232)								
R	103	65-7078-232	COVER ASSY REAR SPAR STATION 219.16 TO 263.5 CHUTE							5299	1
R			PANEL (RH ONLY)								
R			(OPTIONAL AND FOR REPLACEMENT ORDER								
R			65-7078-220)								
R	103	65-7078-232	COVER ASSY, REAR SPAR STATION 219.16 TO 263.5 CHUTE							0151	1
R			PANEL (RH ONLY)								
R			(REPLACEMENT FOR 65-7078-182, -188, -212 AND								
R			-220)								
R	103	65-7078-190	COVER ASSY, REAR SPAR STATION 219.16 TO 263.5 FUEL.								RF
			JETTISON CHUTE PANEL (SPARES ONLY) (IDENTICAL TO								
			65-7078-188)								
			(FOR REPLACEMENT ORDER 65-7078-232)								
	104	65-7078-165	STRAP								1
	105	65-7078-166	STRAP								1
	106	65-7078-167	STRAP								1
	107	65-7078-168	STRAP								1
	107A	65-7078-169	STRAP								1
	107B	65-7078-171	STRAP								1
	107C	65-7078-170	STRAP								1
			ATTACHING PARTS								
		NAS517-3-5	SCREW								26
		NAS679A3W	NUT								26
			-----*								
R	108	65-7078-151	ANGLE, ATTACH (LH).							0150	1
R	108	65-65479-3	ANGLE, ATTACH (LH).							5199	1
R	108	65-7078-152	ANGLE, ATTACH (RH).							0150	1
R	108	65-65479-4	ANGLE, ATTACH (RH).							5199	1
R	109	65-7078-153	ANGLE, ATTACH (LH).							0150	1
R	109	65-65479-5	ANGLE, ATTACH (LH).							5199	1
R	109	65-7078-154	ANGLE, ATTACH (RH).							0150	1
R	109	65-65479-6	ANGLE, ATTACH (RH).							5199	1
R	110	65-7078-155	ANGLE, ATTACH (LH).							0150	1
R	110	65-65479-9	ANGLE, ATTACH (LH).							5199	1
R	110	65-7078-156	ANGLE, ATTACH (RH).							0150	1
R	110	65-65479-10	ANGLE, ATTACH (RH).							5199	1
R	111	65-7078-209	ANGLE, ATTACH (LH) (ALTERED FROM 65-7078-157)							0150	1
R	111	65-65479-7	ANGLE, ATTACH (LH).							5199	1
R	111	65-7078-210	ANGLE, ATTACH (RH) (ALTERED FROM 65-7078-158)							0150	1
R	111	65-65479-8	ANGLE, ATTACH (RH).							5199	1
	111A	65-7078-195	ANGLE, ATTACH (LH).								1
	111A	65-7078-196	ANGLE, ATTACH (RH).								1
R	111B	65-7078-199	ANGLE, ATTACH (LH).							5199	1
R	111B	65-7078-200	ANGLE, ATTACH (RH).							5199	1
R	111B	65-65479-1	ANGLE, ATTACH (LH).							5199	1
R	111B	65-65479-2	ANGLE, ATTACH (RH).							5199	1
	112	BACS40A23-151	SHIM.								1
	113	BACS40A23-147	SHIM.								1
	114	BACS40A23-139	SHIM.								1
	115	BACS40A23-135	SHIM.								1
	115A	65-7078-161	SHIM, (LH).								1
	115A	65-7078-162	SHIM, (RH).								1
R	116	65-7078-177	ANGLE, REINFORCING (LH).							0150	1
R	116	65-7078-217	ANGLE, REINFORCING (LH).							5199	1
R	116	65-7078-178	ANGLE, REINFORCING (RH).							0150	1
R	116	65-7078-218	ANGLE, REINFORCING (RH).							5199	1
	117	65-7078-147	ANGLE, REINFORCING (LH).								1
	117	65-7078-148	ANGLE, REINFORCING (RH).								1
	118	65-7078-27	STRIP, REAR SPAR STATION 219.16 TO 263.5 FUEL								1
			JETTISON CHUTE PANEL COVER RUB								
	119		DOOR INSTL, REAR SPAR STATION 263.5 TO 275.5 FUEL								RF
			JETTISON CHUTE PANEL (FOR REF SEE FIG. 10)								
	120		PANEL INSTL, REAR SPAR STATION 275.5 TO 288.9 FUEL								RF
			JETTISON CHUTE (FOR REF SEE FIG. 10)								

MISSING ITEM NUMBERS ARE NOT APPLICABLE


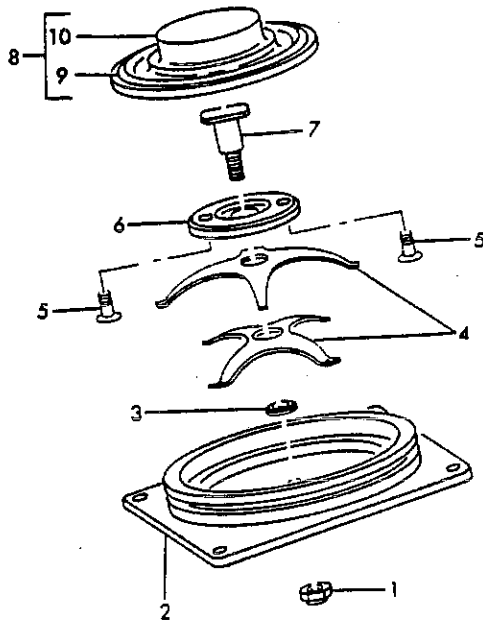


FIGURE 7. SEAL ASSY, FUEL JETTISON SECONDARY

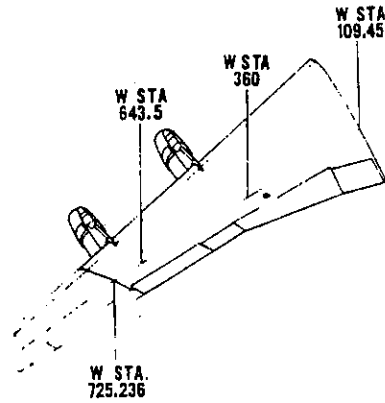

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
7	69-16258-1	SEAL ASSY, FUEL JETTISON SECONDARY (SEE FIG. 2, ITEM. . 67)								RF
1	NAS679A3W	. NUT								1
2	66-2515	. COVER, FUEL JETTISON SECONDARY SEAL PLATE								1
3	BACS11S23A1	. SEAL								1
4	66-13506-1	. SPRING, FUEL JETTISON SECONDARY SEAL								2
5	NK507-1024R6	. SCREW, (VQ2615)								2
6	66-2500-1	. RETAINER, FUEL JETTISON SECONDARY SEAL								1
7	66-2502-2	. BOLT, FUEL JETTISON SECONDARY SEAL								1
8	69-1875	. PLATE ASSY, FUEL JETTISON SECONDARY SEAL								1
9	69-1875-2	. . SEAL, FUEL JETTISON SECONDARY PLATE								1
10	69-1875-1	. . PLATE, FUEL JETTISON SECONDARY SEAL								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										




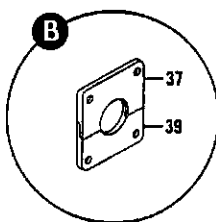


FIGURE 9. TUBING INSTL, FUEL JETTISON SYSTEM

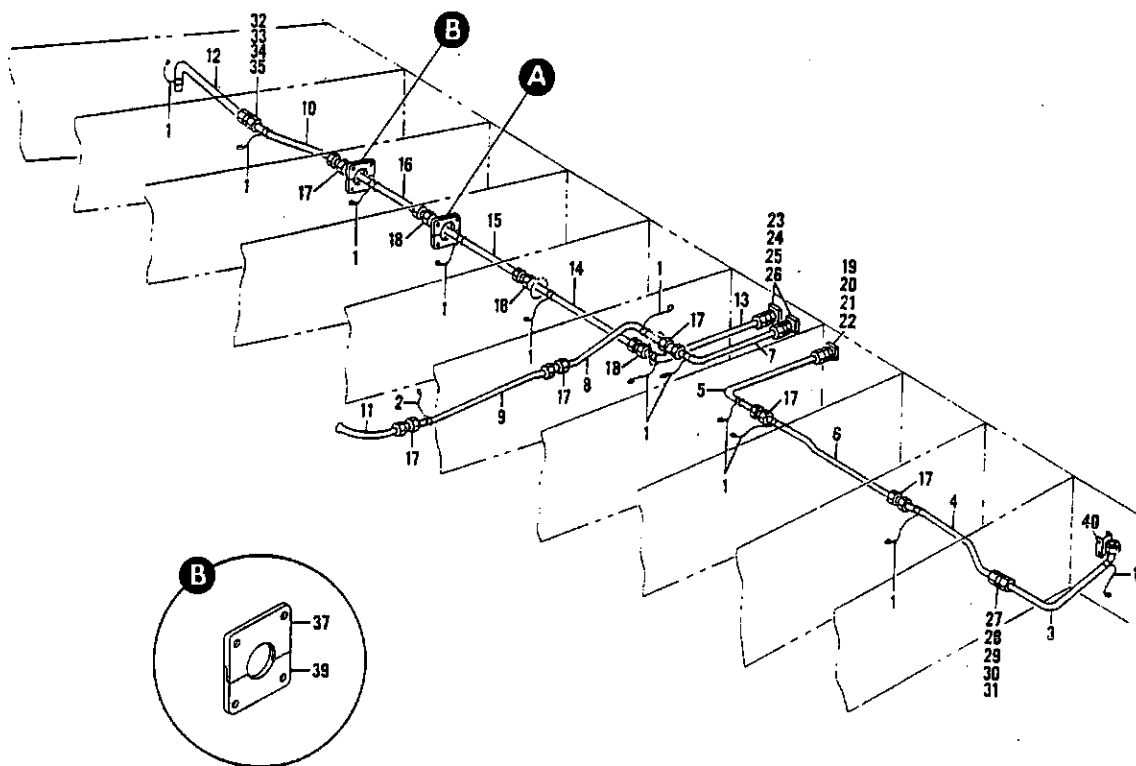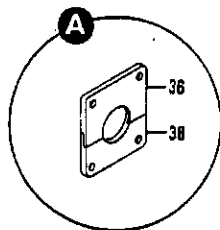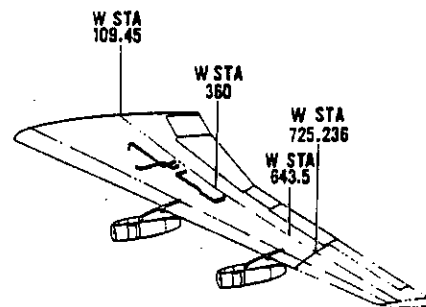

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
9	65-25531-1		TUBING INSTL, FUEL JETTISON SYSTEM (LH) (SEE 57-3, FIG. 1, ITEM 18)		RF
	65-25531-2		TUBING INSTL, FUEL JETTISON SYSTEM (RH) (SEE 57-3, FIG. 1, ITEM 18)		RF
1	MS25083-28B6		. JUMPER ASSY		12
2	MS25083-28B4		. JUMPER ASSY		1
	BACS12CB3		ATTACHING PARTS . SCREW, (LENGTH AS REQUIRED)		26
	NAS603		(OPTIONAL NAS603) . SCREW, (LENGTH AS REQUIRED)		26
	AN960D10L		(OPTIONAL TO BACS12CB3) . WASHER.		144
	MS679A3W		. NUT		26
	BACN10JC3		. NUT		26
			-----*		
3	65-6319-1		. TUBE ASSY, FUEL JETTISON (LH ONLY).		1
3	65-6319-2		. TUBE ASSY, FUEL JETTISON (RH ONLY).		1
	NAS593-24H		. NUT		1
4	65-25531-3		. TUBE ASSY, FUEL DUMP 2 .042 5052-0 (LH ONLY).		1
4	65-25531-4		. TUBE ASSY, FUEL DUMP 2 .042 5052-0 (RH ONLY).		1
5	65-25531-7		. TUBE ASSY, FUEL DUMP 2 .042 5052-0 (LH ONLY).		1
5	65-25531-8		. TUBE ASSY, FUEL DUMP 2 .042 5052-0 (RH ONLY).		1
	NAS593-24H		. NUT		1
	NAS593-32H		. NUT		1
6	65-25531-5		. TUBE ASSY, FUEL DUMP 2 .042 5052-0 (LH ONLY).		1
6	65-25531-6		. TUBE ASSY, FUEL DUMP 2 .042 5052-0 (RH ONLY).		1
	NAS591-32H		. COUPLING.		2
7	65-4087-19		. TUBE ASSY, FUEL DUMP 2 .042 5052-0 (LH ONLY).		1
7	65-4087-20		. TUBE ASSY, FUEL DUMP 2 .042 5052-0 (RH ONLY).		1
8	65-4087-21		. TUBE ASSY, FUEL DUMP 2 .042 5052-0 (LH ONLY).		1
8	65-4087-22		. TUBE ASSY, FUEL DUMP 2 .042 5052-0 (RH ONLY).		1
9	65-4087-25		. TUBE ASSY, FUEL DUMP 2 .042 5052-0 (LH ONLY).		1
9	65-4087-26		. TUBE ASSY, FUEL DUMP 2 .042 5052-0 (RH ONLY).		1
10	65-25531-17		. TUBE ASSY, FUEL DUMP 2 .042 5052-0 (LH ONLY).		1
10	65-25531-18		. TUBE ASSY, FUEL DUMP 2 .042 5052-0 (RH ONLY).		1
	NAS593-32H		. NUT		1
	NAS591-32H		. COUPLING.		1
11	65-4087-23		. TUBE ASSY, FUEL DUMP 2 .042 5052-0 (LH ONLY).		1
11	65-4087-24		. TUBE ASSY, FUEL DUMP 2 .042 5052-0 (RH ONLY).		1
12	65-6319-9		. TUBE ASSY, FUEL JETTISON.		1
	NAS593-32H		. NUT		1
13	65-25531-9		. TUBE ASSY, FUEL DUMP 2-1/2 .042 5052-0 (LH ONLY).		1
13	65-25531-10		. TUBE ASSY, FUEL DUMP 2-1/2 .042 5052-0 (RH ONLY).		1
	NAS593-32H		. NUT		1
	NAS593-40H		. NUT		1
14	65-25531-11		. TUBE ASSY, FUEL DUMP 2-1/2 .042 5052-0 (LH ONLY).		1
14	65-25531-12		. TUBE ASSY, FUEL DUMP 2-1/2 .042 5052-0 (RH ONLY).		1
	NAS591-40H		. COUPLING.		2
15	65-25531-14		. TUBE ASSY, FUEL DUMP 2 1/2 IN. .042 5052-0.		1
	NAS593-40H		. NUT		2
16	65-25531-15		. TUBE ASSY, FUEL DUMP 2-1/2 .042 5052-0 (LH ONLY).		1
16	65-25531-16		. TUBE ASSY, FUEL DUMP 2-1/2 .042 5052-0 (RH ONLY).		1
	NAS593-32H		. NUT		1
	NAS591-40H		. COUPLING.		1
17	NAS592-32		. RING.		6
18	NAS592-40		. RING.		3
19	BACN10DR24D		. NUT		1
20	AN960PD3016		. WASHER.		1
21	65-23401-1		. FITTING ASSY, 1.50 IN. OD TUBE BULKHEAD	0499	1
21	65-2062		. FITTING ASSY, 1.50 IN. OD TUBE BULKHEAD (DELETED BY	0103	1
			SB 2652)		
21	65-23401-1		. FITTING ASSY, 1.50 IN. OD TUBE BULKHEAD (ADDED BY	0103	1
			SB 2652)		
22	MS29513-22B		. PACKING		1
23	BACN10DR32D		. NUT		2
24	AN960PD4016		. WASHER.		2
25	65-23428-1		. FITTING ASSY, 2.00 IN. OD TUBE BULKHEAD	0499	2
25	65-2063		. FITTING ASSY, 2.00 IN. OD TUBE BULKHEAD (DELETED BY	0103	2
			SB 2652)		
25	65-23428-1		. FITTING ASSY, 2.00 IN. OD TUBE BULKHEAD (ADDED BY	0103	2
			SB 2652)		
26	MS29513-233		. PACKING		2
27	BACU24C124D		. UNION		1
28	MS29513-22B		. PACKING		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
9	29	AN960PD3016	.	WASHER.	.	.	.	.	.	1
	30	BACN10DR24D	.	NUT	.	.	.	.	.	1
	31	BACR10Y24D	.	RETAINER.	.	.	.	.	.	1
			.	ATTACHING PARTS	.	.	.	.	.	
		AN4H5A	.	BOLT.	.	.	.	.	.	2
		BACSL1W4	.	SEAL.	.	.	.	.	.	2
		AN960PD416	.	WASHER.	.	.	.	.	.	2
		BACN10JC3	.	NUT	.	.	.	.	.	2
			.	-----*	.	.	.	.	.	
	32	BACU24C132D	.	UNION	.	.	.	.	.	1
	33	MS29513-233	.	PACKING	.	.	.	.	.	1
	34	AN960PD4016	.	WASHER.	.	.	.	.	.	1
	35	BACN10DR32D	.	NUT	.	.	.	.	.	1
	36	69-3374-4	.	PLATE, BAFFLE	.	.	.	.	.	1
	37	69-3374-2	.	PLATE, BAFFLE	.	.	.	.	.	1
			.	ATTACHING PARTS	.	.	.	.	.	
		AN3-11A	.	BOLT.	.	.	.	.	.	2
		AN960PD10	.	WASHER.	.	.	.	.	.	2
		BACW10T10-75	.	WASHER.	.	.	.	.	.	2
		BACN10JC3	.	NUT	.	.	.	.	.	2
			.	-----*	.	.	.	.	.	
	38	69-3374-3	.	PLATE, BAFFLE	.	.	.	.	.	1
	39	69-3374-1	.	PLATE, BAFFLE	.	.	.	.	.	1
			.	ATTACHING PARTS	.	.	.	.	.	
		AN3-11A	.	BOLT.	.	.	.	.	.	2
		AN960PD10	.	WASHER.	.	.	.	.	.	2
		BACN10JC3	.	NUT	.	.	.	.	.	2
			.	-----*	.	.	.	.	.	
	40	69-4784-3	.	BRACKET, SUPPORT (LH ONLY).	.	.	.	.	0101	1
	40	69-4784-4	.	BRACKET, SUPPORT (RH ONLY).	.	.	.	.	0101	1
			.	ATTACHING PARTS	.	.	.	.	.	
		AN3-3A	.	BOLT.	.	.	.	.	0101	2
		AN960PD10	.	WASHER.	.	.	.	.	0101	2
		NAS679A3W	.	NUT	.	.	.	.	0101	2
			.	-----*	.	.	.	.	.	

MISSING ITEM NUMBERS ARE NOT APPLICABLE


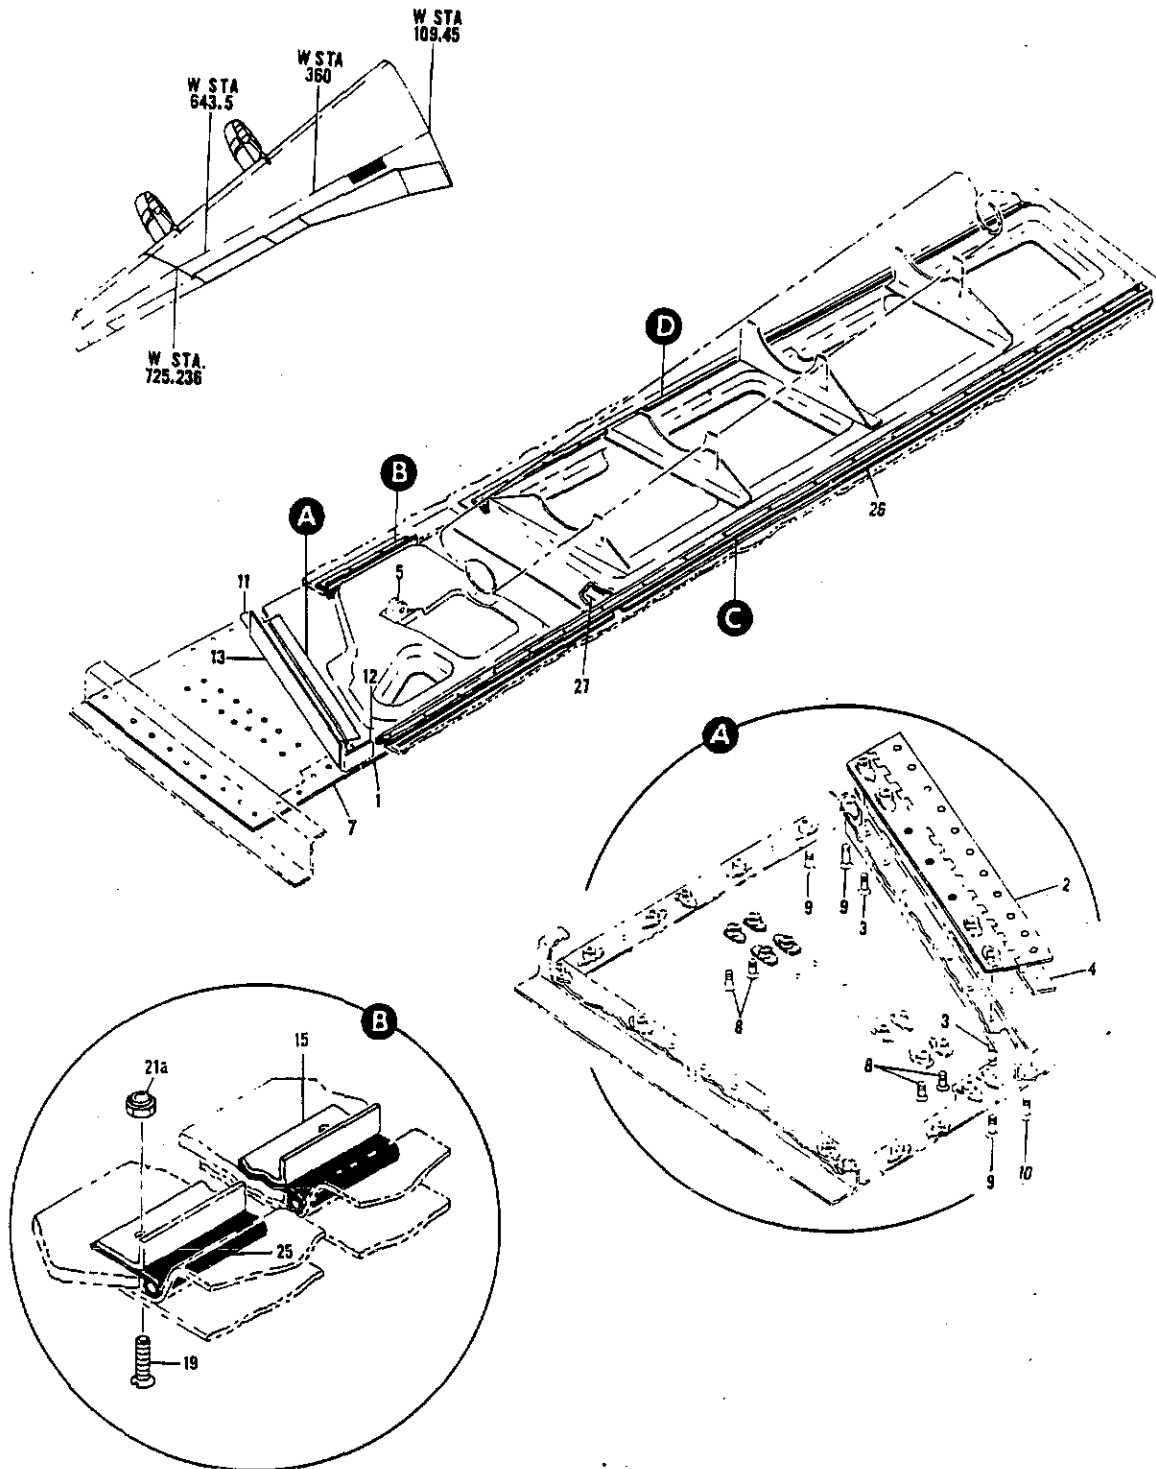


FIGURE 10. DOOR INSTL, REAR SPAR STATION 263.5 TO 275.5 FUEL JETTISON CHUTE PANEL
 PANEL INSTL, REAR SPAR STATION 275.5 TO 288.91 FUEL JETTISON CHUTE
 COVER INSTL, REAR SPAR STATION 219.16 TO 263.5 FUEL JETTISON CHUTE PANEL (SHEET 1)

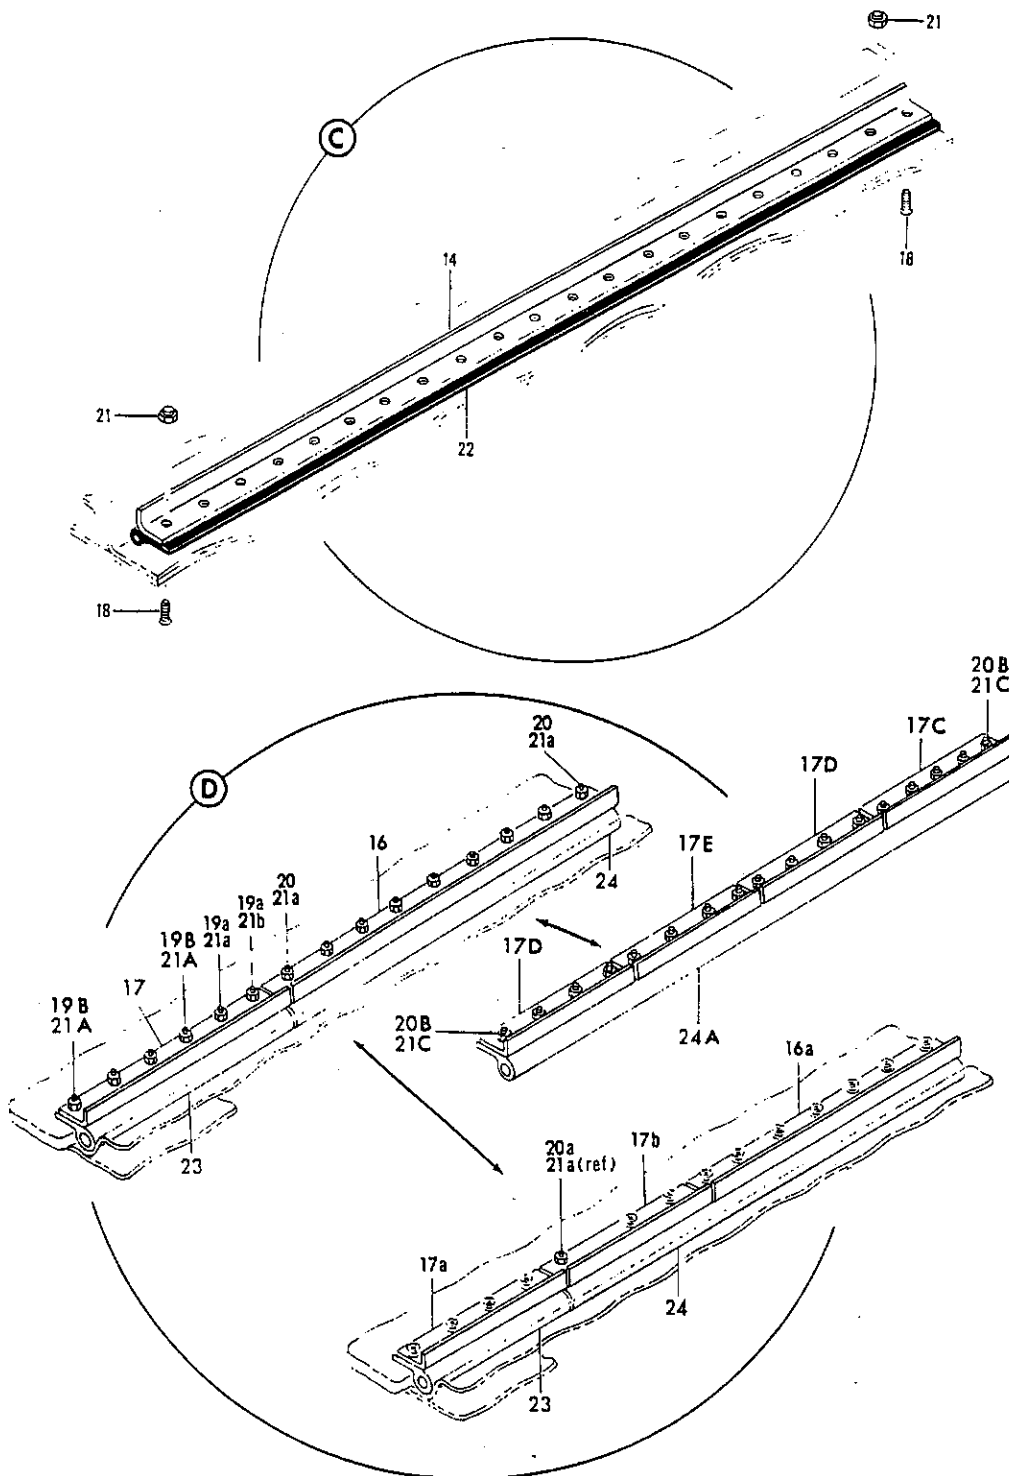

DOOR INSTL, REAR SPAR STATION 263.5 TO 275.5 FUEL JETTISON CHUTE PANEL
FIGURE 10. PANEL INSTL, REAR SPAR STATION 275.5 TO 288.91 FUEL JETTISON CHUTE (SHEET 2)

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
10		DOOR INSTL, REAR SPAR STATION 263.5 TO 275.5 FUEL . . . JETTISON CHUTE PANEL PANEL INSTL, REAR SPAR STATION 275.5 TO 288.91 FUEL . . . JETTISON CHUTE		
	65-7078-1	. DOOR INSTL, REAR SPAR STATION 263.5 TO 275.5 FUEL . . . JETTISON CHUTE PANEL (LH) (SEE 57-3, FIG. 12, ITEM 102)		RF
	65-7078-2	. DOOR INSTL, REAR SPAR STATION 263.5 TO 275.5 FUEL . . . JETTISON CHUTE PANEL (RH) (SEE 57-3, FIG. 12, ITEM 102)		RF
1	65-7078-75	. . DOOR ASSY, REAR SPAR STATION 263.5 TO 275.5 FUEL . . JETTISON CHUTE PANEL (LH ONLY)		1
1	65-7078-76	. . DOOR ASSY, REAR SPAR STATION 263.5 TO 275.5 FUEL . . JETTISON CHUTE PANEL (RH ONLY)		1
2	65-7078-25	. . . HINGE, REAR SPAR STATION 263.5 TO 275.5 FUEL . . . JETTISON CHUTE PANEL DOOR (ALTERED FROM MS2000LP6) (LH ONLY)		1
2	65-7078-28	. . . HINGE, REAR SPAR STATION 263.5 TO 275.5 FUEL . . . JETTISON CHUTE PANEL DOOR (ALTERED FROM MS2000LP6) (RH ONLY)		1
3	NAS517-3-4	ATTACHING PARTS . . . SCREW		7
4	65-7078-26	. . . FILLER, REAR SPAR STATION 263.5 TO 275.5 FUEL . . JETTISON CHUTE PANEL DOOR HINGE		1
5	69-5757-3 65-7078-3	. . . FITTING, FUEL JETTISON DOOR ACTUATOR. PANEL INSTL, REAR SPAR STATION 275.5 TO 288.91 FUEL . . JETTISON CHUTE (LH) (SEE 57-3, FIG. 12, ITEM 103)		1 RF
	65-7078-4	. PANEL INSTL, REAR SPAR STATION 275.5 TO 288.91 FUEL . . JETTISON CHUTE (RH) (SEE 57-3, FIG. 12, ITEM 103)		RF
7	65-7078-9	. . PANEL ASSY, REAR SPAR STATION 275.5 TO 288.91 FUEL JETTISON CHUTE (LH ONLY)		1
7	65-7078-10	. . PANEL ASSY, REAR SPAR STATION 275.5 TO 288.91 FUEL JETTISON CHUTE (RH ONLY)		1
8	NAS517-3-3	ATTACHING PARTS . . SCREW		14
9	NAS517-3-4	. . SCREW		15
10	NAS517-3-5	. . SCREW		7
11	65-7078-31	. . CLIP, REAR SPAR STATION 275.5 TO 288.91 FUEL . . . JETTISON CHUTE PANEL ANGLE (LH ONLY)		1
11	65-7078-32	. . CLIP, REAR SPAR STATION 275.5 TO 288.91 FUEL . . . JETTISON CHUTE PANEL ANGLE (RH ONLY)		1
12	65-7078-33	. . CLIP, REAR SPAR STATION 275.5 TO 288.91 FUEL . . . JETTISON CHUTE PANEL (LH ONLY)		1
12	65-7078-34	. . CLIP, REAR SPAR STATION 275.5 TO 288.91 FUEL . . . JETTISON CHUTE PANEL (RH ONLY)		1
	AN3-4A AN960D10 NAS679A3W	ATTACHING PARTS . . BOLT WASHER NUT		2 2 2
13	65-7078-29	. . BEAM, REAR SPAR STATION 275.5 TO 288.91 FUEL . . . JETTISON CHUTE PANEL (LH ONLY)		1
13	65-7078-30	. . BEAM, REAR SPAR STATION 275.5 TO 288.91 FUEL . . . JETTISON CHUTE PANEL (RH ONLY)		1
14	69-36047-3	. . RETAINER, FUEL DUMP CHUTE CAVITY AIR SEAL		1
15	69-36047-4	. . RETAINER, FUEL DUMP CHUTE CAVITY AIR SEAL		1
16	69-36047-13	. . RETAINER, FUEL DUMP CHUTE CAVITY AIR SEAL (LH ONLY)	0101	1
16	69-36047-14	. . RETAINER, FUEL DUMP CHUTE CAVITY AIR SEAL (RH ONLY)	0101	1
16A	69-36047-25	. . RETAINER, (LH ONLY)	0250	1
16A	69-36047-26	. . RETAINER, (RH ONLY)	0250	1
17	69-36047-7	. . RETAINER, FUEL DUMP CHUTE CAVITY AIR SEAL	0101	1
17A	69-36047-21	. . RETAINER, (LH ONLY)	0250	1
17A	69-36047-22	. . RETAINER, (RH ONLY)	0250	1
17B	69-36047-23	. . RETAINER, (LH ONLY)	0250	1
17B	69-36047-24	. . RETAINER, (RH ONLY)	0250	1
17C	69-36047-37	. . RETAINER, DUMP CAVITY AIR SEAL	5199	1
17D	69-36047-35	. . RETAINER, DUMP CAVITY AIR SEAL	5199	2
17E	69-36047-34	. . RETAINER, (RH)	5199	1
17E	69-36047-33	. . RETAINER, (LH)	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
10			1	2	3	4	5	6	7			
			ATTACHING PARTS									
	18	NAS514-632-6	. .	SCREW							21	
	19	NAS514-632-7	. .	SCREW							4	
	19A	NAS514-632-7	. .	SCREW						0101	2	
R	19B	NAS514-632-7	. .	SCREW						0150	4	
R	20	NAS514-632-10	. .	SCREW						0150	9	
R	20A	NAS514-632-10	. .	SCREW						0250	1	
R	20B	NAS514-632-10	. .	SCREW						5199	17	
	21	NAS679A06W	. .	NUT							21	
R	21A	NAS679C06W	. .	NUT						0150	18	
	21B	NAS679C06W	. .	NUT						0101	1	
R	21C	NAS679A06W	. .	NUT						5199	17	
-----*												
	22	65-7078-137	. .	SEAL, REAR SPAR STATION 275.5 TO 288.91 FUEL.	JETTISON CHUTE PANEL (EXTRUSION NO. BAC1530-12 X 59.30 IN. LG)							1
	23	65-7078-138	. .	SEAL, REAR SPAR STATION 275.5 TO 288.91 FUEL.	JETTISON CHUTE PANEL (EXTRUSION NO. BAC1530-12 X 13.30 IN. LG)						0101	1
R	23	65-7078-206	. .	SEAL, REAR SPAR STATION 275.5 TO 288.91 (EXTRUSION NO. BAC1530-11 X 9.20 IN. LG)							0250	1
R	24	65-7078-135	. .	SEAL, REAR SPAR STATION 275.5 TO 288.91 FUEL.	JETTISON CHUTE PANEL (EXTRUSION NO. BAC1530-12 X 28.10 IN. LG)						0101	1
	24	65-7078-205	. .	SEAL, REAR SPAR STATION 275.5 TO 288.91 (EXTRUSION NO. BAC1530-12 X 30.60 IN. LG)							0250	1
R	24A	65-7078-207	. .	SEAL, REAR SPAR STATION 275.5 TO 288.91 FUEL.	JETTISON CHUTE PANEL (EXTRUSION NO. BAC1530-10 X 40.40 IN. LG)						5199	1
R	25	65-7078-221	. .	SEAL, REAR SPAR STATION 275.5 TO 288.91 FUEL.	JETTISON CHUTE PANEL (EXTRUSION NO. BAC1530-10 X 7.80 IN. LG)							1
MISSING ITEM NUMBERS ARE NOT APPLICABLE												

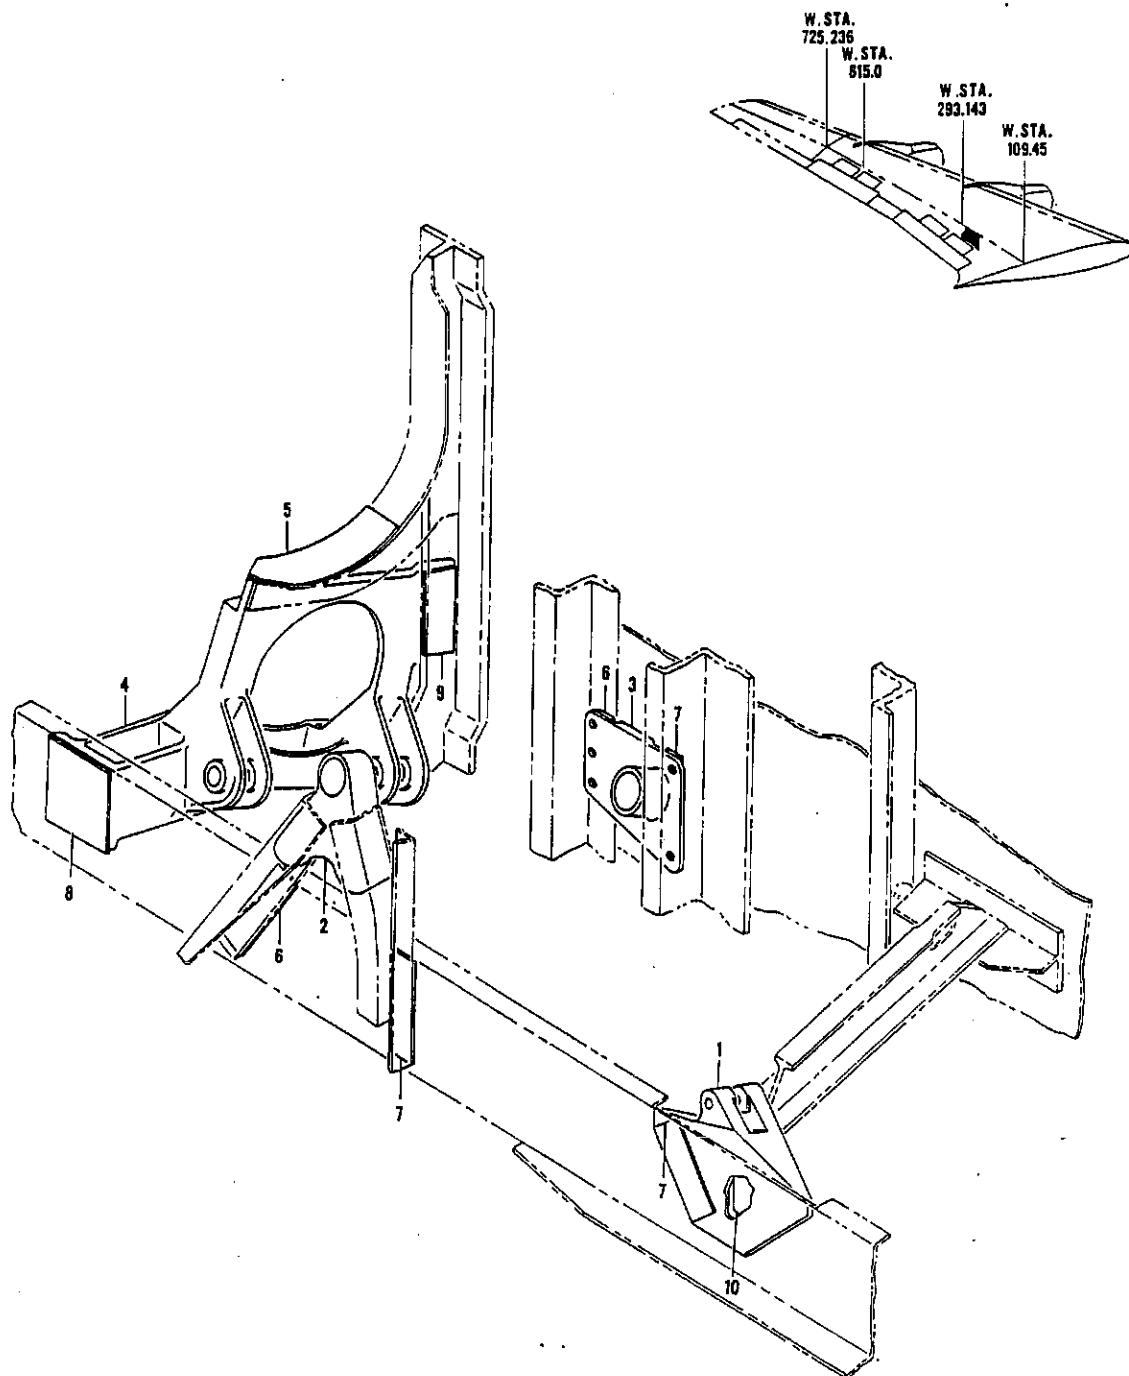


FIGURE 11. STRUCTURE INSTL, FUEL JETTISON CHUTE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
11	65-7065-1		STRUCTURE INSTL, FUEL JETTISON CHUTE (LH) (SEE 57-3, . . FIG. 12, ITEM 105)		RF
	65-7065-2		STRUCTURE INSTL, FUEL JETTISON CHUTE (RH) (SEE 57-3, . . FIG. 12, ITEM 105)		RF
R	1		. FITTING, SNUBBER SUPPORT (LH ONLY).	0150	1
R			(OPTIONAL TO 65-55015-13)		
R			(OPTIONAL TO AND REPLACEMENT FOR 65-66108-3)		
R	1		. FITTING, SUPPORT (LH ONLY).	0150	1
R			(OPTIONAL TO 65-55015-13)		
R			(OPTIONAL AND FOR REPLACEMENT ORDER 65-55015-9)		
R	1		. FITTING, SNUBBER SUPPORT (LH ONLY).	0150	1
R			(OPTIONAL 65-55015-9, 65-66108-3)		
R	1		. FITTING, SNUBBER SUPPORT (LH ONLY).	5199	1
R	1		. FITTING, SNUBBER SUPPORT (RH ONLY).	0150	1
R			(OPTIONAL TO 65-55015-14)		
R			(OPTIONAL TO AND REPLACEMENT FOR 65-66108-4)		
R	1		. FITTING, SUPPORT (RH ONLY).	0150	1
R			(OPTIONAL TO 65-55015-14)		
R			(OPTIONAL AND FOR REPLACEMENT ORDER 65-55015-10)		
R	1		. FITTING, SNUBBER SUPPORT (RH ONLY).	0150	1
R			(OPTIONAL 65-55015-10, 65-66108-4)		
R	1		. FITTING, SNUBBER SUPPORT (RH ONLY).	5199	1
R	2		. SUPPORT, FUEL JETTISON AFT JACKSHAFT (LH ONLY).		1
R	2		. SUPPORT, FUEL JETTISON AFT JACKSHAFT (RH ONLY).		1
R	3		. SUPPORT, FUEL JETTISON FORWARD JACKSHAFT (LH ONLY).		1
R	3		. SUPPORT, FUEL JETTISON FORWARD JACKSHAFT (RH ONLY).		1
R	4		. FITTING, TRUNNION (LH ONLY).	0150	1
R	4		. FITTING, TRUNNION (RH ONLY).	0150	1
R	4		. FITTING, TRUNNION (LH ONLY).	5199	1
R	4		. FITTING, TRUNNION (RH ONLY).	5199	1
R	5		. STRIP, FUEL JETTISON CHUTE RUB.		1
R	6		. SHIM.		AR
R	7		. SHIM.		AR
R	8		. SHIM.		1
R	9		. SHIM.		1
R	10		. SHIM.		AR

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 07
FUEL DRAINS AND VENTS



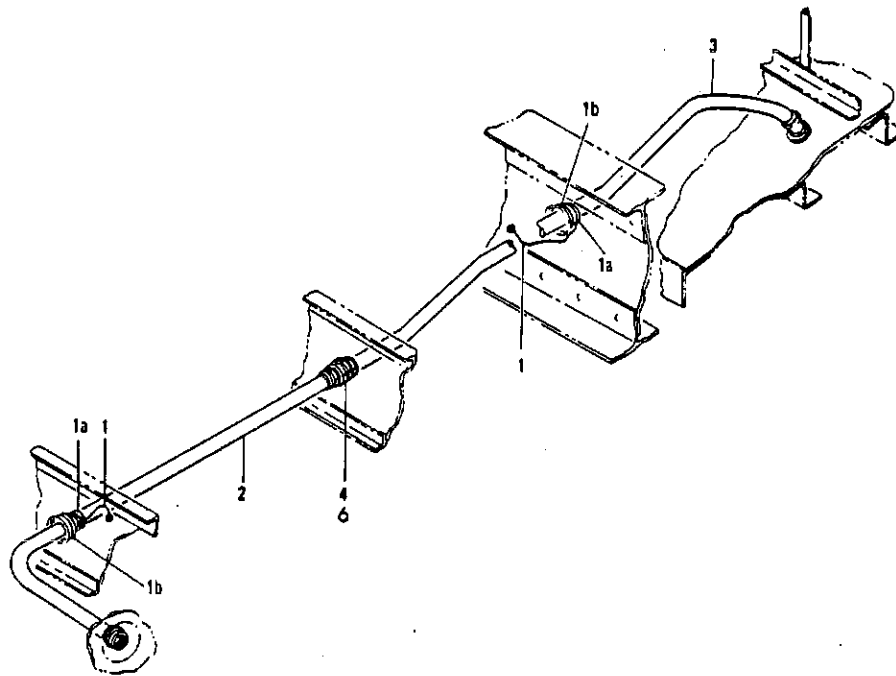


FIGURE 1. TUBING INSTL, WING CENTER SECTION CAVITY VENT

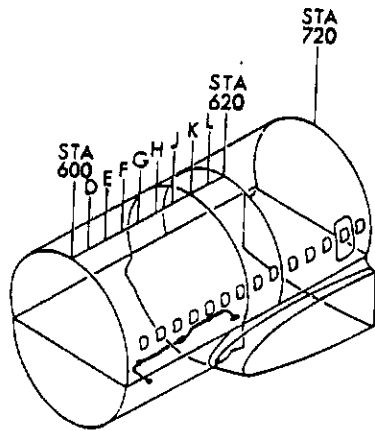

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	65-38074-1	TUBING INSTL, WING CENTER SECTION CAVITY VENT (SEE. . . 53-1, FIG. 2, ITEM 18 AND 53-1, FIG. 20 ITEM 3)								RF
1	MS25083-1885	. JUMPER ASSY								2
	NAS603-8	ATTACHING PARTS								4
	AN960D10L	. SCREW								4
	NAS679A3W	. WASHER.								4
		. NUT								4
		-----*								
1A	AN735D24	. CLAMP								2
1B	BACC10BW24DG	. CLAMP								2
		ATTACHING PARTS								
	NAS603-8	. SCREW								2
	NAS679A3W	. NUT								2
		-----*								
2	65-38074-2	. TUBE ASSY, CAVITY VENT 1-1/2 .035 5052-0.							0151	1
2	65-38074-14	. TUBE ASSY, CAVITY VENT 1-1/2 .035 5052-0.							5299	1
3	65-38074-4	. TUBE ASSY, CAVITY VENT 1-1/2 IN. .035 5052-0. (OPTIONAL 65-38074-10)								1
3	65-38074-10	. TUBE ASSY, CAVITY VENT 1-1/2 IN. .035 5052-0 (LENGTH TO BE DETERMINED ON INSTALLATION) (OPTIONAL TO 65-38074-4)								1
	NAS593-24	. . NUT								2
4	AN832-24D	. UNION								1
6	AN924-24D	. NUT								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

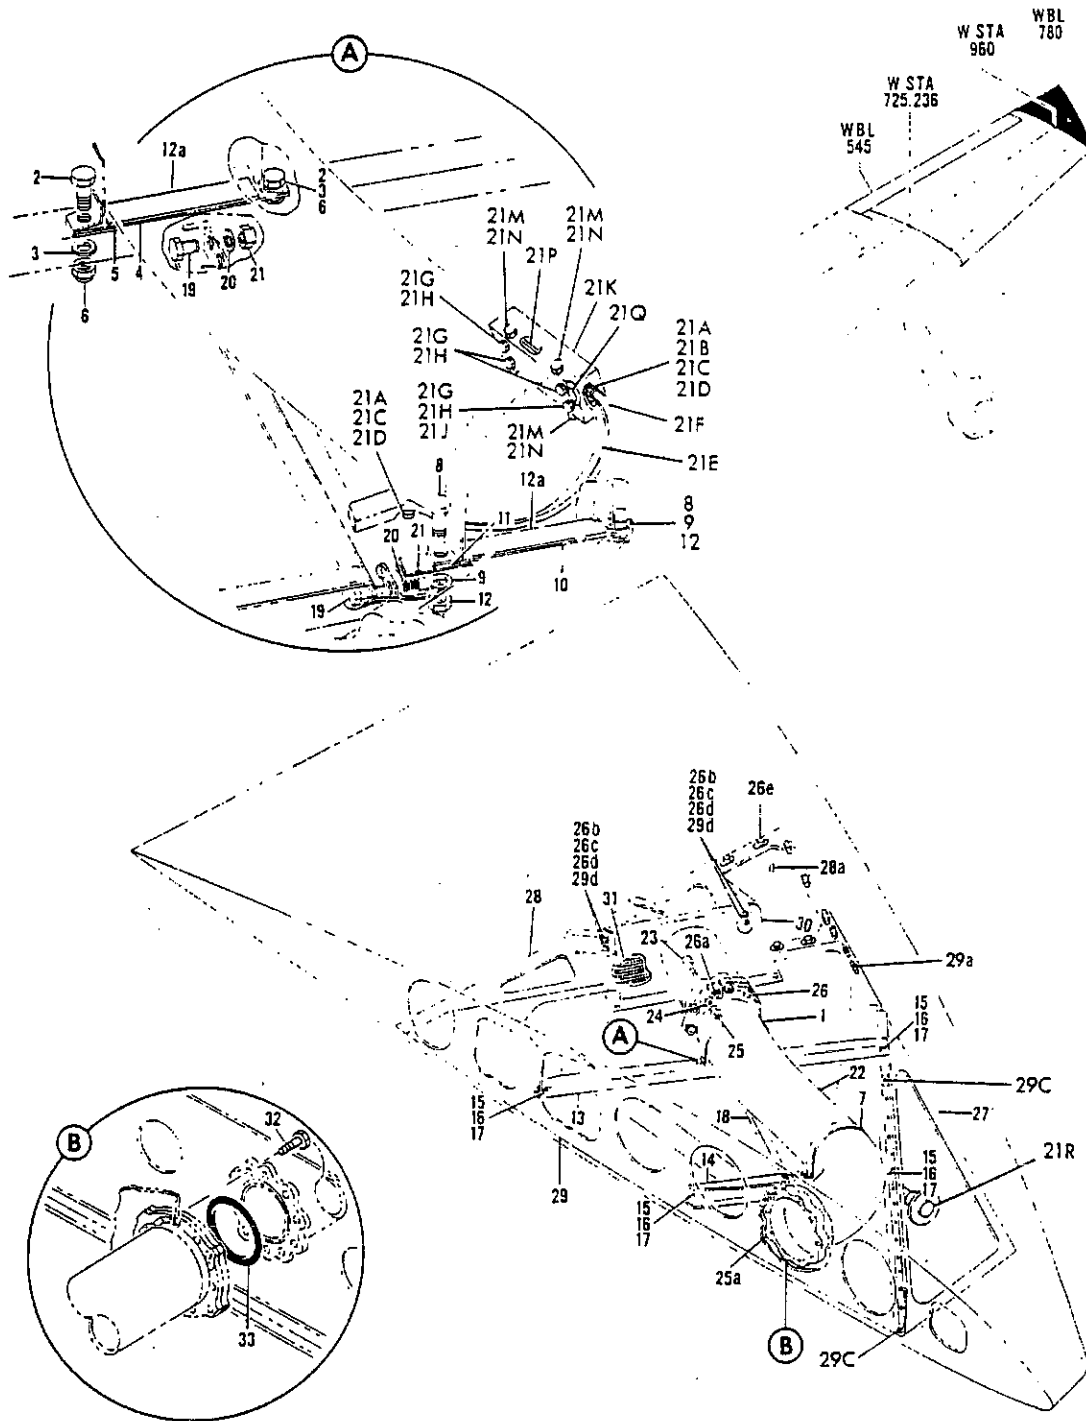

ATTACHING PARTS INSTL, WING TIP VENT SCOOP (FUEL ONLY)
PANEL INSTL, WING TIP VENT SCOOP
FIGURE 2. ATTACHING PARTS INSTL, WING STATION 960, 112 (FUEL ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2			ATTACHING PARTS INSTL, WING TIP VENT SCOOP (FUEL ONLY) PANEL INSTL, WING TIP VENT SCOOP.		
	5-96732-3		ATTACHING PARTS INSTL, WING STATION 960.112 (FUEL ONLY) . ATTACHING PARTS INSTL, WING TIP VENT SCOOP (LH) (SEE 57-2, FIG. 2, ITEM 39, 57-2, FIG. 3, ITEM 48 AND 57-2, FIG. 4, ITEM 13)		RF
	5-96732-4		. ATTACHING PARTS INSTL, WING TIP VENT SCOOP (RH) (SEE 57-2, FIG. 2, ITEM 39, 57-2, FIG. 3, ITEM 48 AND 57-2, FIG. 4, ITEM 13)		RF
1	66-8450-1		. . CLAMP ASSY, SURGE TANK VENT DUCT (LH ONLY).		1
1	66-8450-2		. . CLAMP ASSY, SURGE TANK VENT DUCT (RH ONLY).		1
			ATTACHING PARTS		
2	NAS501-3-5A		. . BOLT.		2
3	AN960PD10		. . WASHER.		2
4	BACS40A12-113		. . SHIM.		AR
			(OPTIONALS BACS40B12-113, BACS40C12-113)		
4	BACS40B12-113		. . SHIM.		AR
			(OPTIONAL TO BACS40A12-113)		
4	BACS40C12-113		. . SHIM.		AR
			(OPTIONAL TO BACS40A12-113)		
5	BACS40A12-16		. . SHIM.		AR
			(OPTIONAL BACS40B12-16)		
5	BACS40B12-16		. . SHIM.		AR
			(OPTIONAL TO BACS40A12-16)		
6	BACN10BY83W		. . NUT		2
			-----*		
7	66-8450-5		. . CLAMP ASSY, SURGE TANK VENT DUCT (LH ONLY).		1
7	66-8450-6		. . CLAMP ASSY, SURGE TANK VENT DUCT (RH ONLY).		1
			ATTACHING PARTS		
8	NAS501-3-6A		. . BOLT.		2
9	AN960PD10		. . WASHER.		2
10	BACS40A12-113		. . SHIM.		AR
			(OPTIONALS BACS40B12-113, BACS40C12-113)		
10	BACS40B12-113		. . SHIM.		AR
			(OPTIONAL TO BACS40A12-113)		
10	BACS40C12-113		. . SHIM.		AR
			(OPTIONAL TO BACS40A12-113)		
11	BACS40A12-116		. . SHIM.		AR
			(OPTIONAL BACS40B12-116)		
11	BACS40B12-116		. . SHIM.		AR
			(OPTIONAL TO BACS40A12-116)		
12	BACN10BY83W		. . NUT		2
			-----*		
12A	5-96732-3015		. . STRIP, WING TIP VENT SCOOP RUB.		2
13	69-8460-1		. . STIFFENER ASSY, WING TIP VENT SCOOP AFT (LH ONLY)		1
13	69-8460-2		. . STIFFENER ASSY, WING TIP VENT SCOOP AFT (RH ONLY)		1
14	66-8433-1		. . STIFFENER ASSY, WING TIP VENT SCOOP FORWARD (LH		1
			ONLY)		
14	66-8433-2		. . STIFFENER ASSY, WING TIP VENT SCOOP FORWARD (RH		1
			ONLY)		
			ATTACHING PARTS		
15	NAS501-4-4A		. . BOLT.		4
16	AN960PD416L		. . WASHER.		4
17	NAS679C4W		. . NUT		4
			-----*		
18	60-3316-1		. . STIFFENER, WING TIP VENT SCOOP.		1
			ATTACHING PARTS		
19	NAS501-3-4A		. . BOLT.		4
20	AN960PD10		. . WASHER.		4
21	NAS679C3W		. . NUT		4
			-----*		
22	50-2669-1		. . DUCT ASSY, WING TIP SURGE TANK VENT (LH ONLY)		1
22	50-2669-2		. . DUCT ASSY, WING TIP SURGE TANK VENT (RH ONLY)		1
			ATTACHING PARTS		
23	AN4DD10A		. . BOLT.		10
24	AN960PD416		. . WASHER.		10
25	BACN10BY84W		. . NUT		10
			-----*		
25A	5-97288		. . FLANGE, WING TIP VENT DUCT.		1
26	5-97607-1		. . FLANGE, WING TIP VENT DUCT.		1
26A	MS29513-251		. . PACKING		1
26B	NAS501-3-3A		. . BOLT.		4
26C	AN960PD10		. . WASHER.		4
26D	NAS679C3W		. . NUT		4
			MISSING ITEM NUMBERS ARE NOT APPLICABLE		



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2 26E	BACB30BF3K5		. . BOLT, (NO SUBSTITUTES ALLOWED).		11
	5-96732-3023		. . FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA . . .		RF
	5-96732-3024		. . PANEL INSTL, WING TIP VENT SCOOP (LH) (SEE 57-2, FIG. 3, ITEM 22 AND 57-2, FIG. 4, ITEM 26)		RF
	5-96732-5		. . PANEL INSTL, WING TIP VENT SCOOP (RH) (SEE 57-2, FIG. 3, ITEM 22 AND 57-2, FIG. 4, ITEM 26)		
27	5-96732-5		. . PANEL ASSY, FORWARD (LH ONLY)	0151	1
27	5-96732-3053		. . PANEL ASSY, FORWARD (LH ONLY)	5299	1
			(OPTIONAL 5-96732-5)		
27	5-96732-5		. . PANEL ASSY, FORWARD (LH ONLY)	5299	1
			(OPTIONAL TO 5-96732-3053)		
27	5-96732-6		. . PANEL ASSY, FORWARD (RH ONLY)	0151	1
27	5-96732-3054		. . PANEL ASSY, FORWARD (RH ONLY)	5299	1
			(OPTIONAL 5-96732-6)		
27	5-96732-6		. . PANEL ASSY, FORWARD (RH ONLY)	5299	1
			(OPTIONAL TO 5-96732-3054)		
28	5-96732-3035		. . SKIN, WING TIP VENT SCOOP PANEL (LH ONLY)	0151	1
28	5-96732-3057		. . SKIN, WING TIP VENT SCOOP PANEL (LH ONLY)	5299	1
			(OPTIONAL 5-96732-3035)		
28	5-96732-3035		. . SKIN, WING TIP VENT SCOOP PANEL (LH ONLY)	5299	1
			(OPTIONAL TO 5-96732-3057)		
28	5-96732-3036		. . SKIN, WING TIP VENT SCOOP PANEL (RH ONLY)	0151	1
28	5-96732-3058		. . SKIN, WING TIP VENT SCOOP PANEL (RH ONLY)	5299	1
			(OPTIONAL 5-96732-3036)		
28	5-96732-3036		. . SKIN, WING TIP VENT SCOOP PANEL (RH ONLY)	5299	1
			(OPTIONAL TO 5-96732-3058)		
28A	5-96732-3037		. . SKIN, WING TIP VENT SCOOP ACCESS PANEL (LH ONLY)	0151	1
28A	5-96732-3059		. . SKIN, WING TIP VENT SCOOP PANEL (LH ONLY)	5299	1
			(OPTIONAL 5-96732-3037)		
28A	5-96732-3037		. . SKIN, WING TIP VENT SCOOP PANEL (LH ONLY)	5299	1
			(OPTIONAL TO 5-96732-3059)		
28A	5-96732-3038		. . SKIN, WING TIP VENT SCOOP ACCESS PANEL (RH ONLY)	0151	1
28A	5-96732-3060		. . SKIN, WING TIP VENT SCOOP PANEL (RH ONLY)	5299	1
			(OPTIONAL 5-96732-3038)		
28A	5-96732-3038		. . SKIN, WING TIP VENT SCOOP PANEL (RH ONLY)	5299	1
			(OPTIONAL TO 5-96732-3060)		
29	5-96732-3019		. . SKIN, WING TIP VENT SCOOP PANEL (LH ONLY)	0151	1
29	5-96732-3055		. . SKIN, WING TIP VENT SCOOP PANEL (LH ONLY)	5299	1
			(OPTIONAL 5-96732-3019)		
29	5-96732-3019		. . SKIN, WING TIP VENT SCOOP PANEL (LH ONLY)	5299	1
			(OPTIONAL TO 5-96732-3055)		
29	5-96732-3020		. . SKIN, WING TIP VENT SCOOP PANEL (RH ONLY)	0151	1
29	5-96732-3056		. . SKIN, WING TIP VENT SCOOP PANEL (RH ONLY)	5299	1
			(OPTIONAL 5-96732-3020)		
29	5-96732-3020		. . SKIN, WING TIP VENT SCOOP PANEL (RH ONLY)	5299	1
			(OPTIONAL TO 5-96732-3056)		
			ATTACHING PARTS		
29A	BACB30BF3K4		. . BOLT.		46
29C	BACB30BF4C3		. . BOLT, (LH ONLY)		14
29C	BACB30BF4C3		. . BOLT, (RH ONLY)		14
			(OPTIONAL NAS517-4-3)		
29C	NAS517-4-3		. . SCREW, (RH ONLY)		14
			(OPTIONAL TO BACB30BF4C3)		
			-----*		
29D	BACS40A13-32		. . SHIM.		AR
			(OPTIONAL BACS40B13-32)		
29D	BACS40B13-32		. . SHIM.		AR
			(OPTIONAL TO BACS40A13-32)		
30	50-2670		. . VENT ASSY, WING TIP SURGE TANK.		1
			ATTACHING PARTS		
	BACB30BF3K2		. . BOLT.		21
			-----*		
31	90-4034		. . SCREEN ASSY, FUEL		1
			ATTACHING PARTS		
	NAS501-3-3A		. . BOLT.		11
			-----*		
			. . FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA . . .		
	5-89854-7		. . ATTACHING PARTS INSTL, WING STATION 960.112 (FUEL ONLY) (SEE 57-2, FIG. 2, 3 AND 4)		RF
32	NAS1104-15W		. . BOLT.		10
33	MS29513-254		. . PACKING		1
			. . FOR REFERENCE TO OTHER ATTACHING PARTS DETAILS, SEE NHA		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

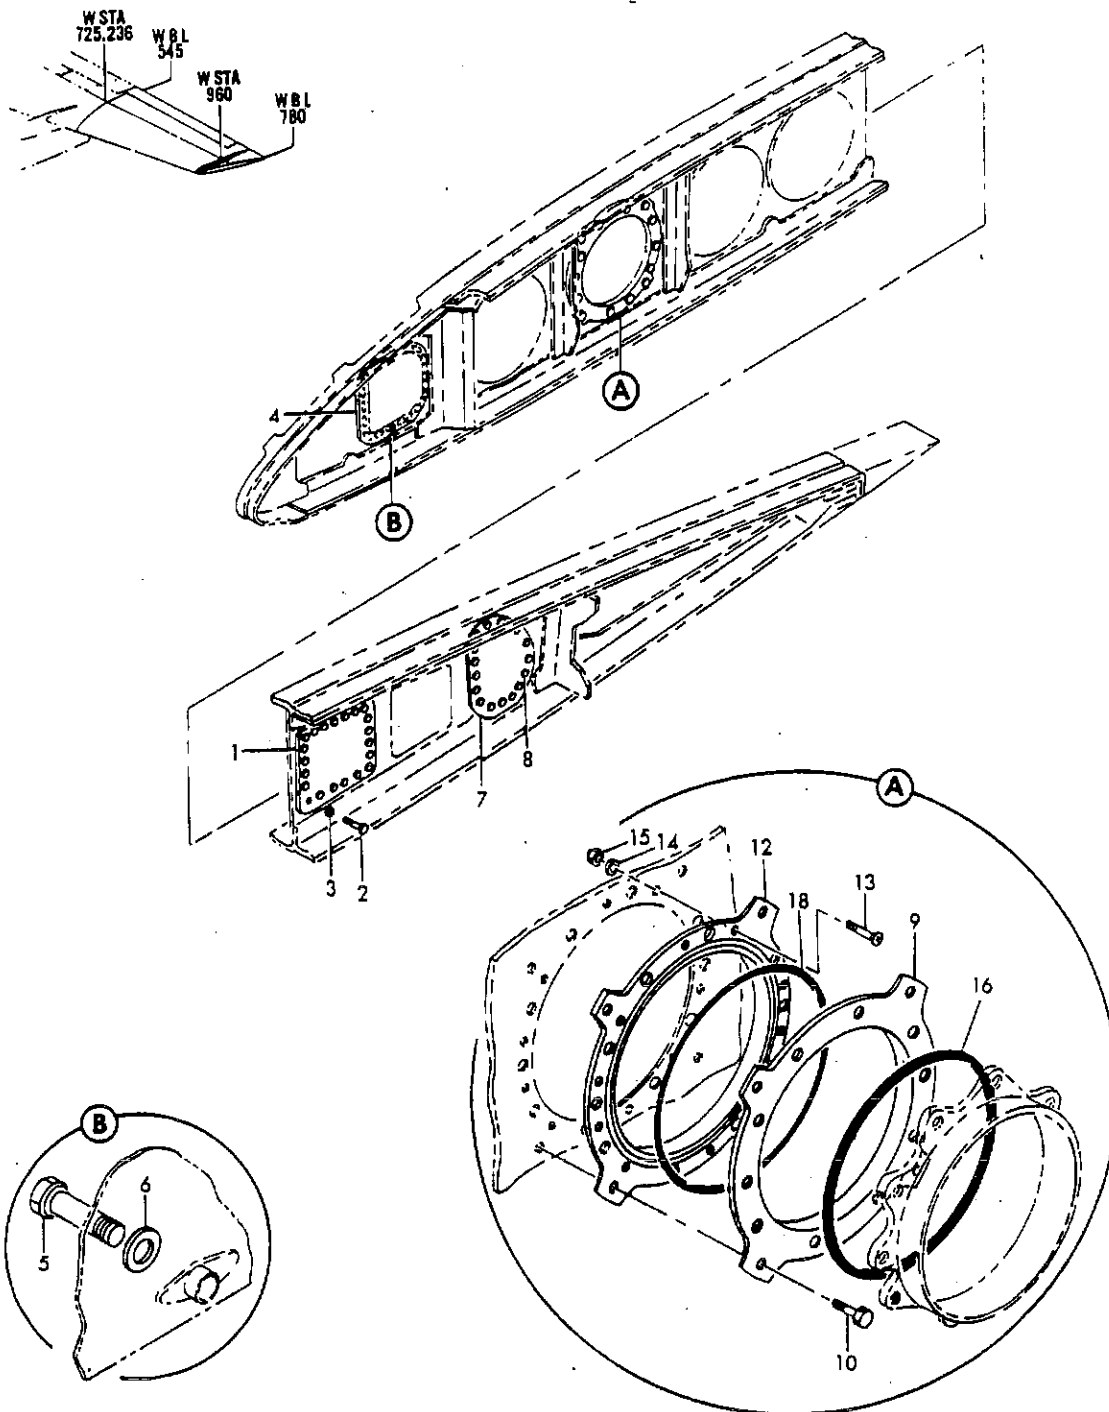


FIGURE 3. RIB INSTL, WING STATION 960.12 (FUEL ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R	3	5-89854-3075	RIB INSTL, WING STATION 960.112 (LH) (FUEL ONLY) (SEE 57-2, FIG. 8, ITEM 5)	0150 RF
		5-89854-3075	RIB INSTL, WING STATION 960.112 (VARIABLE DWG; 5-89854-5001) (LH) (FUEL ONLY) (SEE 57-2, FIG. 8, ITEM 5 AND 57-2, FIG. 10G, ITEM 16)	5199 RF
		5-89854-3076	RIB INSTL, WING STATION 960.112 (RH) (FUEL ONLY) (SEE 57-2, FIG. 8, ITEM 5)	0150 RF
		5-89854-3076	RIB INSTL, WING STATION 960.112 (VARIABLE DWG; 5-89854-5002) (RH) (FUEL ONLY) (SEE 57-2, FIG. 8, ITEM 5 AND 57-2, FIG. 10G ITEM 16)	5199 RF
	1	5-89854-15	. DOOR, WING STATION 960.112 ACCESS ATTACHING PARTS	1
	2	BACB30BG4K3A	. BOLT.	21
	3	AN960PD416L	. WASHER.	21

	7	5-89854-38	. DOOR, WING STATION 960.112 ACCESS ATTACHING PARTS	1
	8	BACB30BG4K4A	. BOLT.	17

	9	9-66523	. DUCT ASSY, TANK VENT. ATTACHING PARTS	1
	10	NAS1103-10W	. BOLT, (LH ONLY)	4
	10	NAS1103-10W	. BOLT, (RH ONLY)	4

	12	9-66521	. BASE, WING STATION 960.072 VENT DUCT FLANGE ATTACHING PARTS	1
	13	NAS517-3-5	. SCREW, (LH ONLY).	10
	13	NAS517-3-5	. SCREW, (RH ONLY).	10
	14	AN960PD10	. WASHER.	10
	15	NAS679A4W	. NUT, (LH ONLY).	10
	15	NAS679A4W	. NUT, (RH ONLY).	10

	16	MS29513-254	. PACKING	2
			. FOR REFERENCE TO OTHER RIB DETAILS, SEE NHA	
MISSING ITEM NUMBERS ARE NOT APPLICABLE				


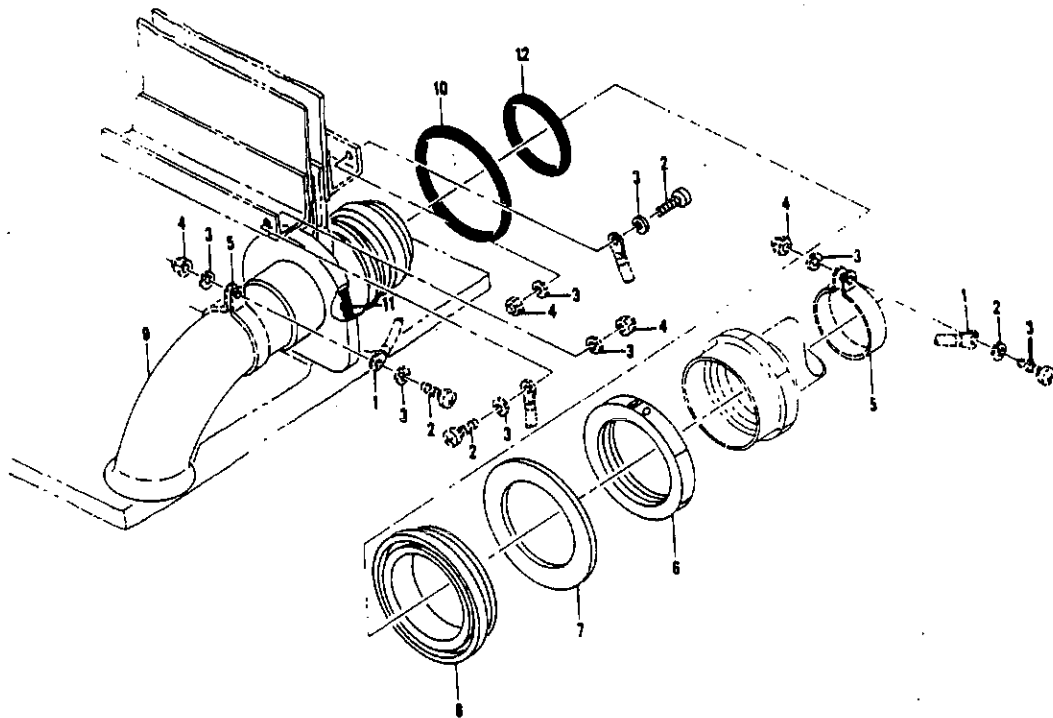


FIGURE 4. FITTING INSTL, SECTION 22 FUEL FEED DRAIN

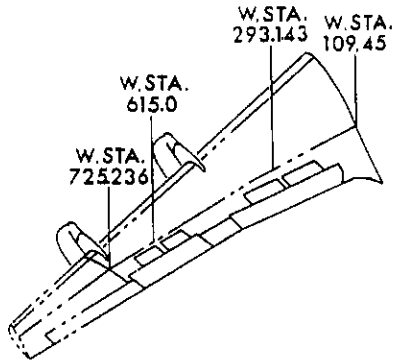

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
4	69-6092-1		FITTING INSTL, SECTION 22 ENGINE FUEL FEED DRAIN (LH) . (SEE 28-1, FIG. 20, ITEM 61)		RF
	69-6092-2		FITTING INSTL, SECTION 22 ENGINE FUEL FEED DRAIN (RH) . (SEE 28-1, FIG. 20, ITEM 61)		RF
1	MS25083-2BB4		. JUMPER ASSY		2
2	NAS603-8		. ATTACHING PARTS		4
3	AN960PD10L		. SCREW		8
4	BACN10BY53		. WASHER		4
			. NUT		
5	AN735D24		. CLAMP		2
6	BACN10DR24D		. NUT		1
7	AN960PD3016		. WASHER		1
8	90-8612		. RETAINER, WING STATION 725.236 FUEL TANK DRAIN. . . .		1
9	90-8619		. FITTING ASSY, RESERVE FUEL TANK DRAIN		1
10	MS29513-230		. PACKING		1
11	MS29513-228		. PACKING		1
12	MS29513-224		. PACKING		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

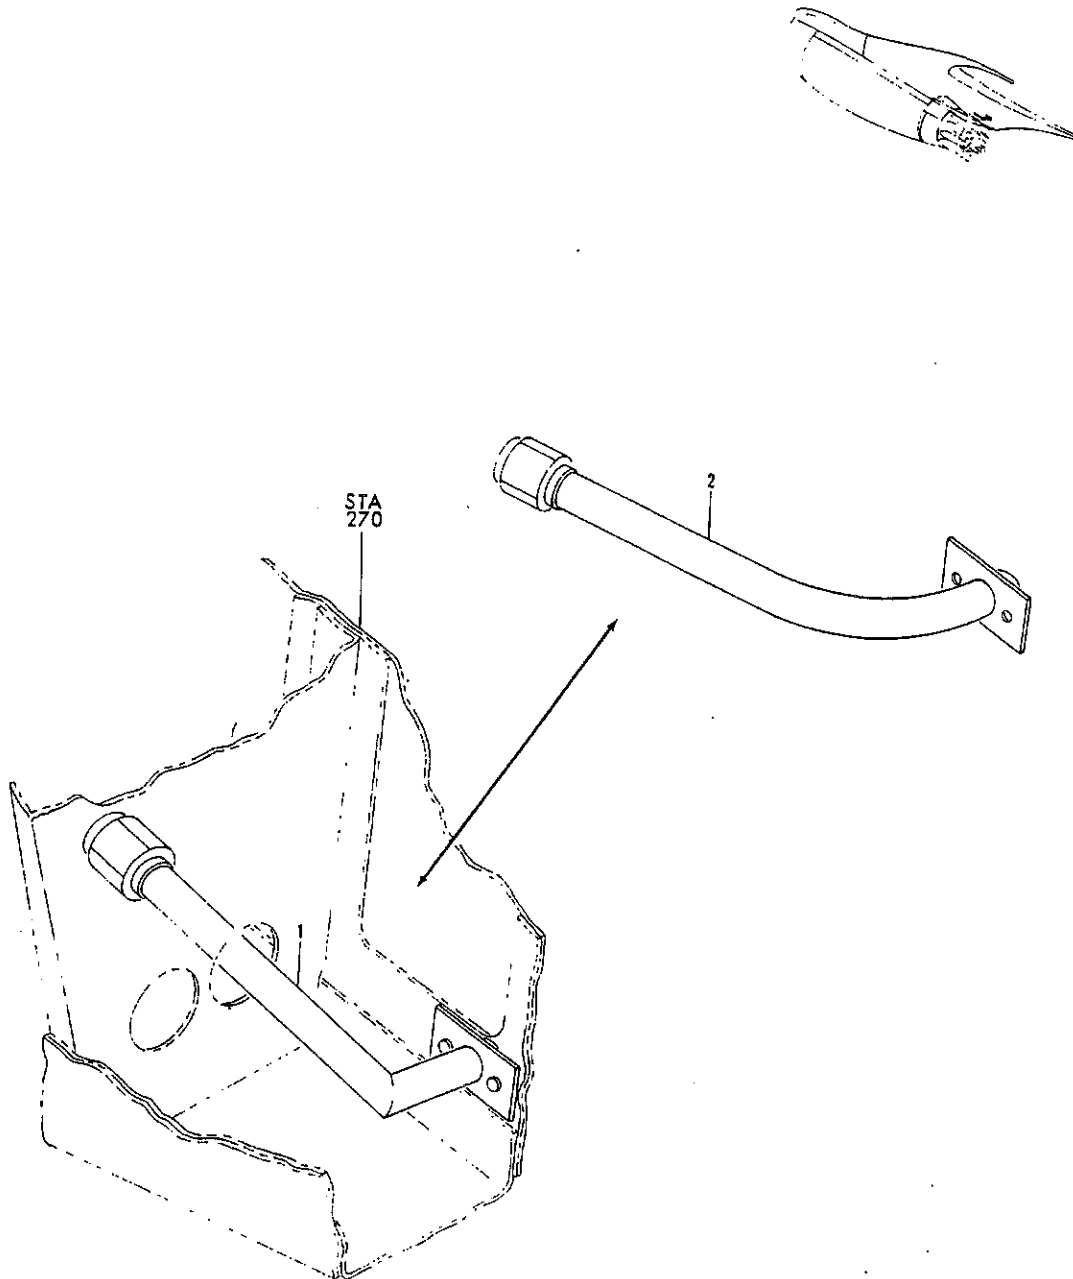


FIGURE 5. DRAIN ASSY, NACELLE STRUT



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
5	1	69-19001-1	DRAIN ASSY, NACELLE STRUT								RF
			. DRAIN ASSY, NACELLE STRUT MID SPAR FUEL (NACELLES NO.								
			1 AND 2) (SEE 54-1, FIG. 1, ITEM 30J, 54-1, FIG.								
			2, ITEM 3, 54-1, FIG. 3, ITEM 53, 54-1, FIG. 16,								
			ITEM 5, 54-1, FIG. 17, ITEM 5 AND 54-1, FIG. 18,								
	1	69-19001-2	ITEM 39)								
			. DRAIN ASSY, NACELLE STRUT MID SPAR FUEL (NACELLES NO.								RF
			3 AND 4) (SEE 54-1, FIG. 1, ITEM 30J, 54-1, FIG.								
			2, ITEM 3, 54-1, FIG. 3, ITEM 53, 54-1, FIG. 16,								
			ITEM 5, 54-1, FIG. 17, ITEM 5 AND 54-1, FIG. 18,								
			ITEM 39)								
		MS21921-B	. . NUT								1
		MS21922-B	. . SLEEVE								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

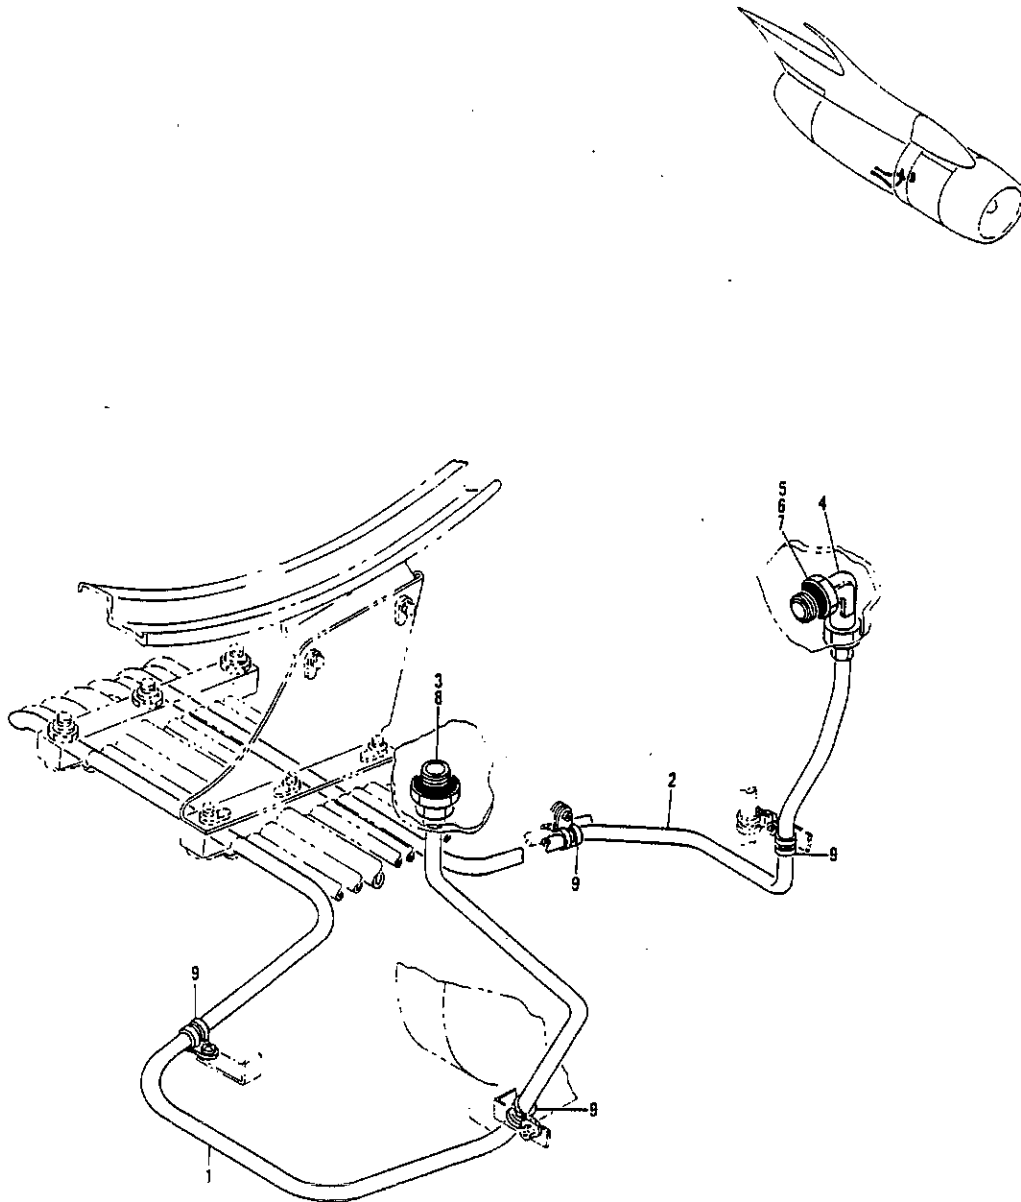


FIGURE 8. DRAIN INSTL, FAN ENGINE (FUEL ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R	8	65-11660-89	DRAIN INSTL, FAN ENGINE (FUEL ONLY) (SEE 71-1, FIG. 5E, ITEM 53, 71-1, FIG. 5G, ITEM 48 AND 71-1, FIG. 5H, ITEM 41)							0150	RF
		65-11660-99	DRAIN INSTL, FAN ENGINE (FUEL ONLY) (SEE 71-1, FIG. 5G, ITEM 48 AND 71-1, FIG. 5H, ITEM 41)							5199	RF
	1	65-11660-875	. TUBE ASSY, DRAIN 1/4 IN. .028 AISI304 (OPTIONALS. . . AISI321, AISI347)								1
	2	65-11660-880	. TUBE ASSY, DRAIN 1/4 .028 AISI304 (OPTIONALS AISI321, AISI347)								1
		MS21921-4	. . NUT								1
		8ACS13AP4	. . SLEEVE, (OPTIONAL MS21922-4).								1
	3	MS21902-4C	. UNION								1
	4	MS21926-4	. ELBOW								1
	5	AN6289-4	. NUT								1
	6	BACG10U4	. GASKET.								1
	7	MS28777-4	. RING.								1
	8	MS29512-04	. PACKING								1
	9	BACC10DD4	. CLAMP								4
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

28-07-8

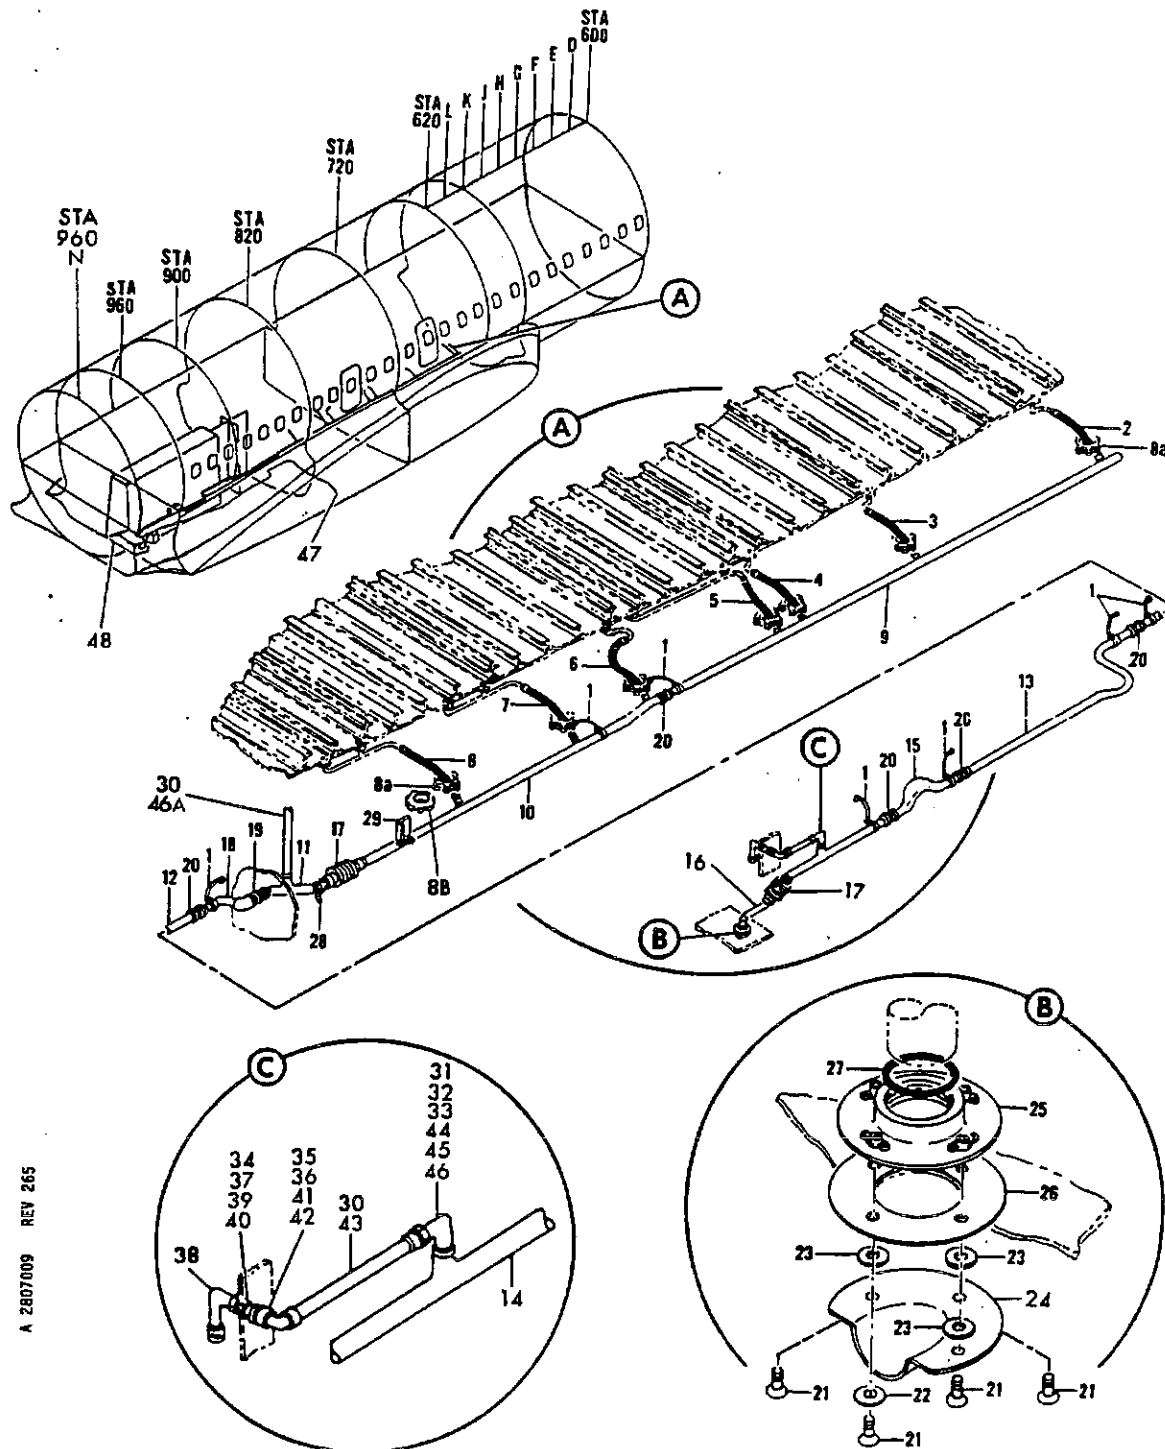


FIGURE 9. DRAIN INSTL, STA 600K TO 965.14 WING CENTER SECTION CAVITY



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
9	65-4182	DRAIN INSTL, STATION 600K TO 965.14 WING CENTER SECTION CAVITY (SEE 53-1, FIG. 2, ITEM 55)								RF
1	MS25083-18B5	. JUMPER ASSY								7
	NAS603-8	. ATTACHING PARTS								14
	AN960D10L	. SCREW								14
	NAS679A3W	. WASHER								11
		. NUT								
2	65-4182-9	. HOSE, STATION 600L WING CENTER SECTION CAVITY DRAIN .								1
3	65-4182-8	. AIRCRAFT .50 ID X 15 IN. LG								1
4	65-4182-7	. HOSE, STATION 653.34 WING CENTER SECTION CAVITY DRAIN								1
5	65-4182-6	. AIRCRAFT .50 ID X 15 IN. LG								1
6	65-4182-5	. HOSE, STATION 680 WING CENTER SECTION CAVITY DRAIN .								1
7	65-4182-4	. AIRCRAFT .50 ID X 15.5 IN. LG								1
8	65-4182-3	. HOSE, STATION 690.50 WING CENTER SECTION CAVITY DRAIN								1
8A	BACG20ZE1275	. AIRCRAFT .50 ID X 16.5 IN. LG								1
9	65-11013	. HOSE, STATION 726.10 WING CENTER SECTION CAVITY DRAIN								1
10	NAS591-20	. AIRCRAFT .50 ID X 21 IN. LG								1
11	65-11014-6	. HOSE, STATION 743.54 WING CENTER SECTION CAVITY DRAIN								1
11	69-8846-4	. AIRCRAFT .50 ID X 19.5 IN. LG							0499	1
12	361-89-28-75275-111	. HOSE, STATION 772.92 WING CENTER SECTION CAVITY DRAIN							0150	1
13	65-4182-2	. AIRCRAFT .50 ID X 17.3 IN. LG								1
14	NAS593-20	. GROMMET								1
15	NAS591-20	. TUBE ASSY, WING CENTER SECTION CAVITY DRAIN								1
16	65-4182-18	. COUPLING								1
17	NAS591-20	. TUBE ASSY, WING CENTER SECTION CAVITY DRAIN							5199	1
18	69-8729	. COUPLING								1
19	NAS593-20	. TUBE ASSY, WING CENTER SECTION CAVITY DRAIN								1
20	65-4182-23	. NUT								1
21	65-4182-2	. COUPLING								1
22	NAS591-20	. TUBE ASSY, WING CENTER SECTION CAVITY DRAIN								1
23	69-8612	. COUPLING								1
24	66-8644	. TUBE ASSY, WING CENTER SECTION CAVITY DRAIN								2
25	69-5128-2	. FLEXIBLE								1
26	AN924-20D	. FITTING ASSY, BODY STATION 820 CAVITY DRAIN								1
27	NAS592-20	. NUT								1
28	NAS514P1032-8	. RING								5
29	BACWLOUDD10	. SCREW								4
30	66-18522-1	. WASHER								1
31	66-8368	. HOOD, FUEL VENT SYSTEM								1
32	66-8980	. GLAND ASSY, TUBE SEAL 1.25 DIA CAVITY DRAIN								1
33	MS29513-124	. GASKET, WING CENTER SECTION CAVITY DRAIN SEAL								1
34	66-9113-2	. PACKING								1
35		. SUPPORT, WING CENTER SECTION CAVITY DRAIN LINE								1
36	NAS603-8	. ATTACHING PARTS								4
37	NAS679A3W	. SCREW								4
38		. NUT								4
39	66-8778-2	. SUPPORT, STATION 630 TO 820 CAVITY DRAIN LINE								1
40	NAS603-8	. ATTACHING PARTS								4
41	NAS679A3W	. SCREW								4
42		. NUT								4
43	69-66396-1	. DRAIN ASSY, WATER TANK							5199	1
44	361-89-28-75220-385	. TUBE ASSY, (VS2500) (ADDED BY RAF 7211.019-225)							0150	RF
45		(SEE 89-1, FIG. 8, ITEM 18)								

MISSING ITEM NUMBERS ARE NOT APPLICABLE


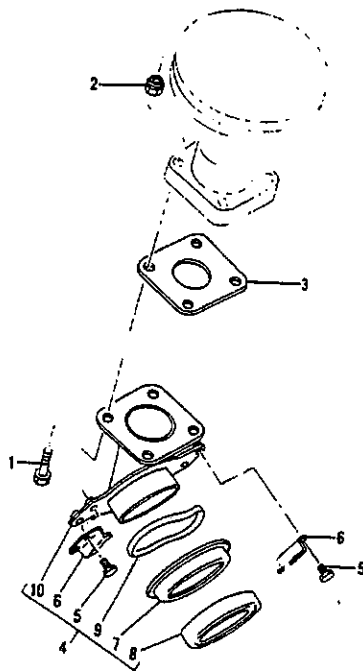


FIGURE 11. OUTLET INSTL. FUEL HEATER EXHAUST AIR

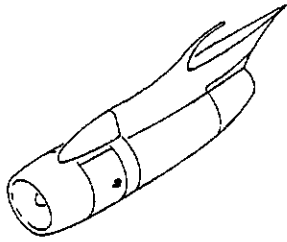

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
11	69-10945	OUTLET INSTL, FUEL HEATER EXHAUST AIR (SEE 71-1, FIG. 5, ITEM 40, 71-1, FIG. 5B, ITEM 46, 71-1, FIG. 5E, ITEM 61, 71-1, FIG. 5G, ITEM 55 AND 71-1, FIG. 5H, ITEM 47)								RF
1	NAS1105-BW	. BOLT.								4
2	NAS679A5	. NUT								4
3	69-10945-2	. GASKET, FUEL HEATER EXHAUST AIR OUTLET.								1
4	69-10945-1	. OUTLET ASSY, FUEL HEATER EXHAUST AIR.								1
5	NAS1103-1W	. . BOLT.								4
6	66-10690	. . RETAINER, ALTERNATOR AND FUEL HEATER EXHAUST SEAL .								2
7	66-10692	. . RETAINER ASSY, ALTERNATOR AND FUEL HEATER EXHAUST SEAL								1
8	66-10697	. . SEAL, ALTERNATOR EXHAUST DUCT								1
9	69-10934	. . SPRING, EXHAUST AIR DUCT SEAL WAVE.								1
10	69-10956	. . OUTLET ASSY, FUEL HEATER EXHAUST.								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

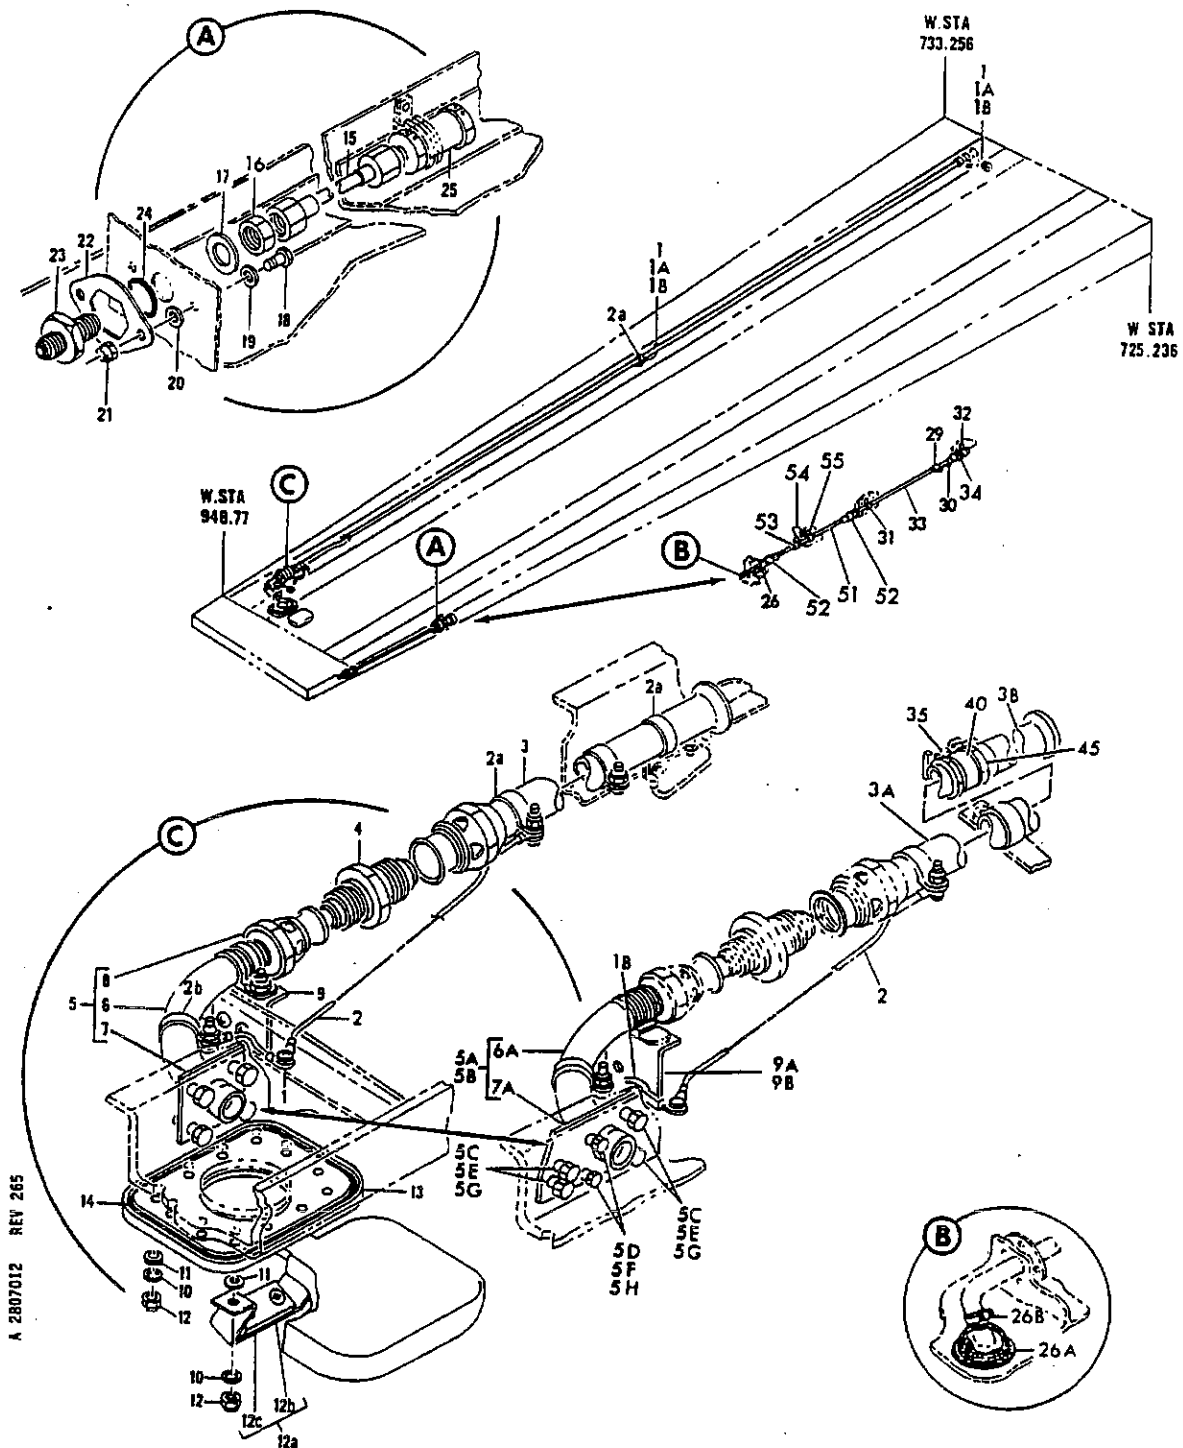


FIGURE 12. VENT INSTL, SECTION 23 WING FUEL TANK



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
12	50-5358-1	VENT INSTL, SECTION 23 WING FUEL TANK LH (SEE 28-7, . . . FIG. 20 ITEM 4 AND 57-2, FIG. 1, ITEM 4)	0150	RF
	50-5358-1	VENT INSTL, SECTION 23 WING FUEL TANK LH (VARIABLE. . . DWG:50-5358-5001) (SEE 28-7, FIG. 20, ITEM 4 AND 57-2, FIG. 1, ITEM 4)	5199	RF
	50-5358-2	VENT INSTL, SECTION 23 WING FUEL TANK RH (SEE 28-7, . . . FIG. 20 ITEM 4 AND 57-2, FIG. 1, ITEM 4)	0150	RF
	50-5358-2	VENT INSTL, SECTION 23 WING FUEL TANK RH (VARIABLE. . . DWG:50-5358-5002) (SEE 28-7, FIG. 20, ITEM 4 AND 57-2, FIG. 1, ITEM 4)	5199	RF
1	MS25083-2BB3	. JUMPER ASSY		3
2	MS25083-2BB6	. JUMPER ASSY		1
	NAS603-10	. ATTACHING PARTS		7
	BACS12CB10	. SCREW (OPTIONAL BACS12CB10 WITH AN960PD10 OR AN960D10)		7
	NAS679A3W	. NUT (OPTIONAL TO NAS603-10)		7
2A	AN735D24	. CLAMP	0150	3
2B	AN735D20	. CLAMP		1
3	50-5358-6	. TUBE ASSY, FUEL VENT 1-1/2 .035 5052-0		1
	NAS593-24H	. NUT		1
4	AN919-2BD	. REDUCER		1
5	90-5286	. ELBOW ASSY		1
	AN4-6A	. ATTACHING PARTS		4
5	NAS679A4W	. BOLT		4
	90-5286-2	. TUBE, TANK VENT ELBOW 1-1/4 .035 5052-0		1
	90-5286-1	. PLATE		1
	NAS593-20H	. NUT		1
	60-4372-1	. CLIP, LINE SUPPORT (LH ONLY)		1
	60-4372-2	. CLIP, LINE SUPPORT (RH ONLY)		1
	NAS603-10	. ATTACHING PARTS		2
	AN960P10	. SCREW		4
	NAS679A3W	. WASHER		2
	NUT			2
10	AN960PD416	. WASHER		12
11	BACS11W4	. SEAL		12
12	NAS679A4W	. NUT		12
12A	69-31399-1	. STOP ASSY, FUEL TANK VENT VALVE		1
12B	69-31399-3	. STOP, FUEL TANK VENT VALVE		1
	NAS514P1032-14	. ATTACHING PARTS		2
	AN960C10L	. SCREW		2
	NAS679A3W	. WASHER		2
	NUT			2
12C	69-31399-2	. BRACKET, FUEL TANK VENT VALVE STOP		1
13	10-3066-1	. VALVE ASSY, FUEL TANK VENT FLOAT ACTUATED CHECK . . . (AFFECTED BY AD 64-22-1)		1
14	MS29513-255	. PACKING		1
26	69-35440-1	. WELD ASSY, SURGE TANK DRAIN (LH ONLY)		1
26	69-35440-2	. WELD ASSY, SURGE TANK DRAIN (RH ONLY)		1
27	MS21902D8	. UNION	5199	2
27	MS21902D8	. UNION, (DELETED BY RAF 7211.019-225)	0150	2
28	50-5358-9	. TUBE ASSY, FUEL DRAIN 1/2 IN. .028 6061-T6 (LH ONLY)	5199	1
28	50-5358-9	. TUBE ASSY, FUEL DRAIN 1/2 IN. .028 6061-T6 (DELETED BY RAF 7211.019-225 (LH ONLY)	0150	1
28	50-5358-10	. TUBE ASSY, FUEL DRAIN 1/2 IN. .028 6061-T6 (RH ONLY)	5199	1
28	50-5358-10	. TUBE ASSY, FUEL DRAIN 1/2 IN. .028 6061-T6 (DELETED BY RAF 7211.019-225)	0150	1
	BACN10CS8D	. NUT	0202	2
	BACS13AP8	. SLEEVE, (DELETED BY RAF 7211.019-225)	5199	2
29	AN735D8	. CLAMP, (DELETED BY RAF 7211.019-225)	0150	2
30	MS25083-2BB3	. JUMPER, (DELETED BY RAF 7211.019-225)	0150	2
	NAS603-8	. ATTACHING PARTS		4
	BACS12CB8	. SCREW, (DELETED BY RAF 7211.019-225)	0150	4
	NAS679A3W	. SCREW, (USED WITH AN960PD8 OR AN960D8) (OPTIONAL TO NAS603-8)	0150	4
		. NUT, (DELETED BY RAF 7211.019-225)	0150	4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/94

28-07-12

DETAILED PARTS LIST
28-07-12
PAGE 1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

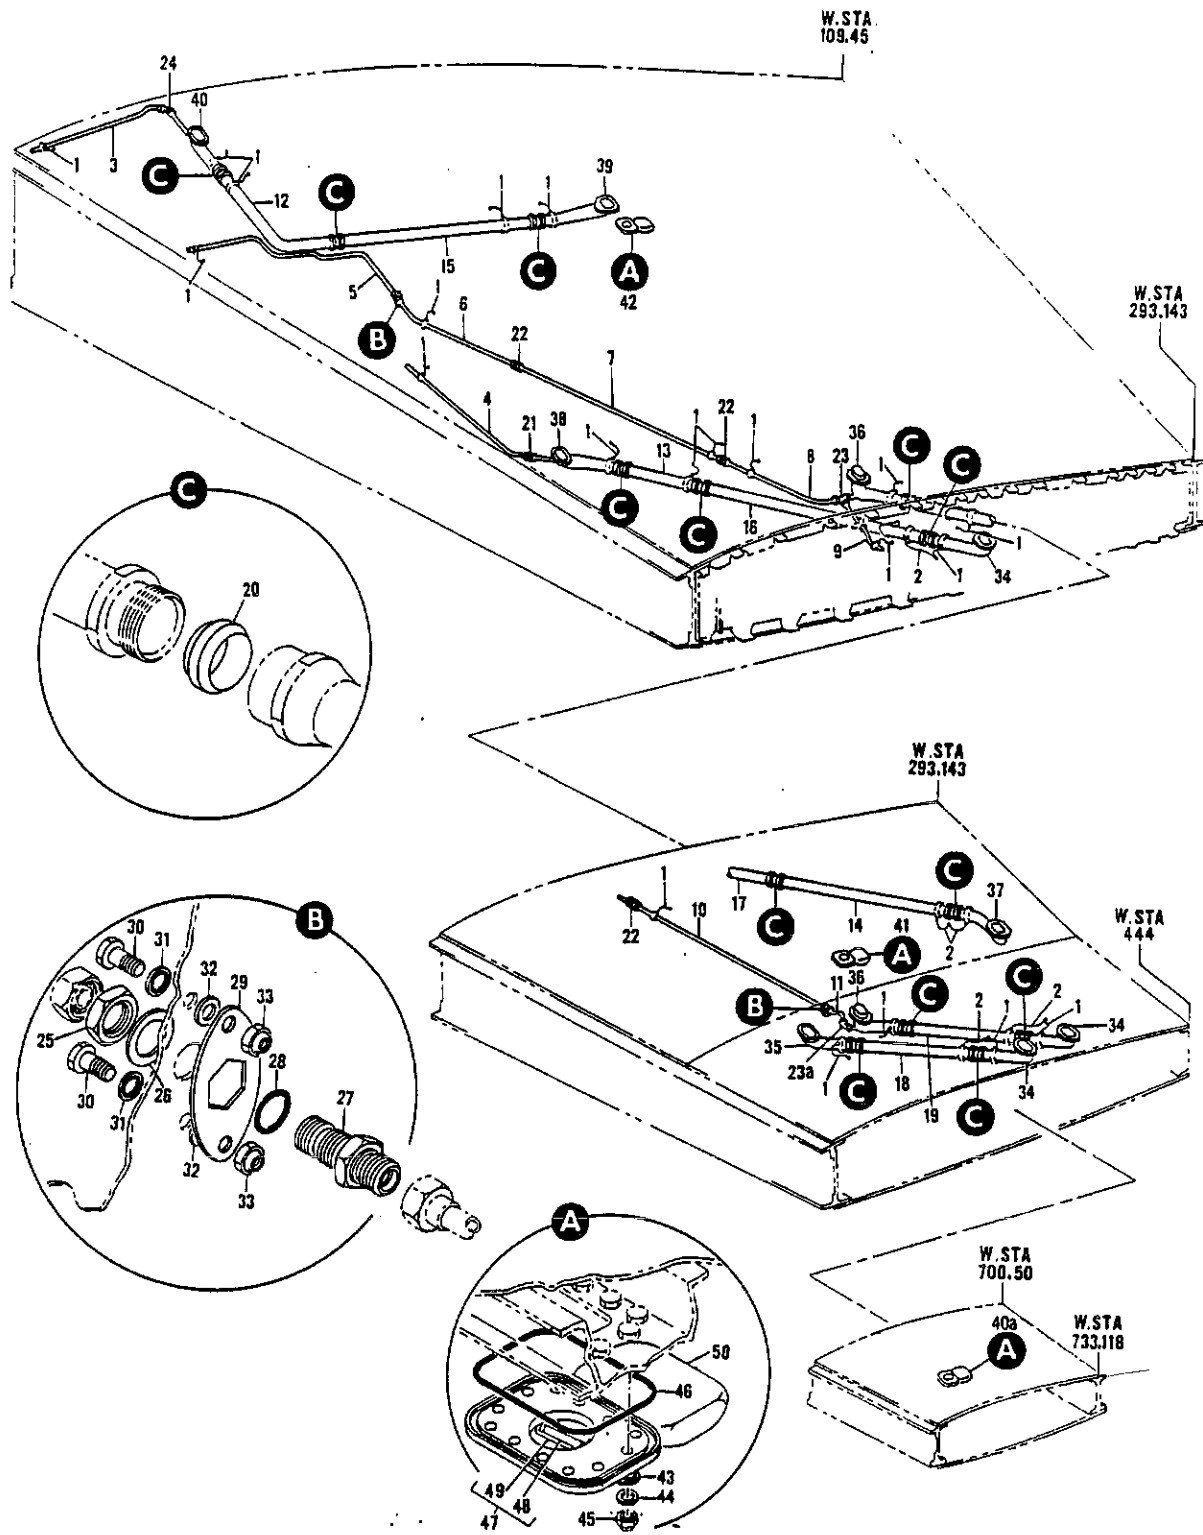


FIGURE 13. VENT INSTL, SECTION 22 WING FUEL TANK



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
13	65-4091-1	VENT INSTL, SECTION 22 WING FUEL TANK (LH) (SEE 57-3, FIG. 1, ITEM 7)		RF
	65-4091-2	VENT INSTL, SECTION 22 WING FUEL TANK (RH) (SEE 57-3, FIG. 1, ITEM 7)		RF
1	MS25083-2BB4	JUMPER ASSY		21
2	MS25083-2BB7	JUMPER ASSY		5
	NAS603	ATTACHING PARTS SCREW, (LENGTH UNDETERMINED). (OPTIONAL TO BACS12CB3)		52
	BACS12CB3	SCREW, (LENGTH TO BE DETERMINED). (OPTIONAL NAS603)		52
	AN960D10L	WASHER.		156
	BACN10JC3	NUT		52
3	65-4091-3	TUBE ASSY, FUEL DRAIN 1/2 IN. .028 6061-T6 (LH ONLY)		1
3	65-4091-4	TUBE ASSY, FUEL DRAIN 1/2 IN. .028 6061-T6 (RH ONLY)		1
	BACN10CS8D	NUT		1
	BACS13AP8	SLEEVE.		1
4	65-4091-17	TUBE ASSY, FUEL DRAIN 1/2 IN. .028 6061-T6		1
	BACN10CS8D	NUT		1
	BACS13AP8	SLEEVE.		1
5	65-4091-5	TUBE ASSY, FUEL DRAIN 3/4 IN. .035 6061-T6 (LH ONLY)		1
5	65-4091-6	TUBE ASSY, FUEL DRAIN 3/4 IN. .035 6061-T6 (RH ONLY)		1
	BACN10CS12D	NUT		1
	BACS13AP12	SLEEVE.		1
6	65-4091-9	TUBE ASSY, FUEL DRAIN 3/4 IN. .035 6061-T6 (LH ONLY)		1
6	65-4091-10	TUBE ASSY, FUEL DRAIN 3/4 IN. .035 6061-T6 (RH ONLY)		1
7	65-4091-11	TUBE ASSY, FUEL DRAIN 3/4 IN. .035 6061-T6 (LH ONLY)		1
7	65-4091-12	TUBE ASSY, FUEL DRAIN 3/4 IN. .035 6061-T6 (RH ONLY)		1
8	65-4091-13	TUBE ASSY, FUEL DRAIN 3/4 IN. .035 6061-T6 (LH ONLY)		1
8	65-4091-14	TUBE ASSY, FUEL DRAIN 3/4 IN. .035 6061-T6 (RH ONLY)		1
9	65-4091-21	TUBE ASSY, FUEL DRAIN 3/4 IN. .035 6061-T6 (LH ONLY)		1
9	65-4091-22	TUBE ASSY, FUEL DRAIN 3/4 IN. .035 6061-T6 (RH ONLY)		1
10	65-4091-23	TUBE ASSY, FUEL DRAIN 3/4 IN. .035 6061-T6 (LH ONLY)		1
10	65-4091-24	TUBE ASSY, FUEL DRAIN 3/4 IN. .035 6061-T6 (RH ONLY)		1
11	65-4091-25	TUBE ASSY, FUEL DRAIN 3/4 IN. .035 6061-T6 (LH ONLY)		1
11	65-4091-26	TUBE ASSY, FUEL DRAIN 3/4 IN. .035 6061-T6 (RH ONLY)		1
	BACN10CS12D	NUT		2
	BACS13AP12	SLEEVE.		2
12	65-4091-7	TUBE ASSY, FUEL VENT 2-1/2 IN. .042 5052-0 (LH ONLY)	0102	1
12	65-4091-8	TUBE ASSY, FUEL VENT 2-1/2 IN. .042 5052-0 (LH ONLY)	0399	1
12	65-4091-8	TUBE ASSY, FUEL VENT 2-1/2 IN. .042 5052-0 (RH ONLY)		1
13	65-4091-16	TUBE ASSY, FUEL VENT 2-1/2 IN. .042 5052-0		1
14	65-4091-28	TUBE ASSY, FUEL VENT 2-1/2 IN. .042 5052-0		1
	NAS591-40H	COUPLING.		2
15	65-4091-15	TUBE ASSY, FUEL VENT 2-1/2 IN. .042 5052-0		1
16	65-4091-19	TUBE ASSY, FUEL VENT 2-1/2 IN. .042 5052-0		1
17	65-4091-27	TUBE ASSY, FUEL VENT 2-1/2 IN. .042 5052-0 (LH ONLY)		1
17	65-4091-29	TUBE ASSY, FUEL VENT 2-1/2 IN. .042 5052-0 (RH ONLY)		1
	NAS593-40H	NUT		1
	NAS591-40H	COUPLING.		1
18	5-86898-3007	TUBE ASSY, FUEL VENT 2-1/2 IN. .042 5052-0		1
19	5-86898-3008	TUBE ASSY, FUEL VENT 2-1/2 IN. .042 5052-0		1
	NAS591-40H	COUPLING.		2
20	NAS592-40	RING.		13
21	MS21902D8	UNION		1
22	MS21902D12	UNION		3
23	MS21905D12	TEE		1
23A	MS21904D12	ELBOW		1
24	MS21907D8	ELBOW		1
25	BACN10DR12D	NUT		2
26	AN960PD1716	WASHER.		2
27	BACU24E12D	UNION		2
28	MS29513-221	PACKING		2
29	BACR10Y12D	RETAINER.		2
		ATTACHING PARTS		
30	AN4H5A	BOLT.		4
31	BACS11W4	SEAL.		4
32	AN960PD416	WASHER.		4
33	NAS679A4W	NUT	0101 5199 0250	4
R R R	33	NUT		4
	65-7024-1	ELBOW INSTL, SECTION 22 LH WING TANK VENT (LH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
13	65-7024-2	. ELBOW INSTL, SECTION 22 RH WING TANK VENT (RH ONLY)		1
34	5-88726-3001	. . ELBOW ASSY, TANK VENT (LH ONLY)		3
34	5-88726-3002	. . ELBOW ASSY, TANK VENT (RH ONLY)		3
		ATTACHING PARTS		
	AN4-7A	. . BOLT		18
	AN960PD416	. . WASHER		42
	BACN10BY54	. . NUT		42
		-----*		
35	5-88184-3001	. . ELBOW ASSY, TANK VENT (LH ONLY)		1
35	5-88184-3002	. . ELBOW ASSY, TANK VENT (RH ONLY)		1
		ATTACHING PARTS		
	NAS603-10	. . SCREW		2
	AN960PD10	. . WASHER		2
	BACN10BY53	. . NUT		2
		-----*		
36	5-88172-3001	. . ELBOW ASSY, TANK VENT (LH ONLY)		2
36	5-88172-3002	. . ELBOW ASSY, TANK VENT (RH ONLY)		2
		ATTACHING PARTS		
	AN4-7A	. . BOLT		12
	AN960PD416	. . WASHER		28
	BACN10BY54	. . NUT		28
		-----*		
37	65-4094-1	. . ELBOW ASSY, TANK VENT (LH ONLY)		1
37	65-4094-2	. . ELBOW ASSY, TANK VENT (RH ONLY)		1
		ATTACHING PARTS		
	AN960PD416	. . WASHER		12
	BACN10BY54	. . NUT		12
		-----*		
38	5-88184-3007	. . ELBOW ASSY, TANK VENT (LH ONLY)		1
38	5-88184-3008	. . ELBOW ASSY, TANK VENT (RH ONLY)		1
		ATTACHING PARTS		
	NAS603-10	. . SCREW		2
	AN960PD10	. . WASHER		2
	BACN10BY53	. . NUT		2
		-----*		
39	5-88134-3003	. . ELBOW ASSY, TANK VENT (LH ONLY)		1
39	5-88134-3004	. . ELBOW ASSY, TANK VENT (RH ONLY)		1
		ATTACHING PARTS		
	AN4-7A	. . BOLT		3
	AN960PD416	. . WASHER		10
	BACN10BY54	. . NUT		7
		-----*		
40	5-89069-3000	. . ELBOW ASSY, TANK VENT		1
		ATTACHING PARTS		
	NAS603-10	. . SCREW		2
	AN960PD10	. . WASHER		2
	BACN10BY53	. . NUT		2
		-----*		
40A	69-4723-1	. VALVE INSTL, FUEL TANK VENT ACTUATED FLOAT (LH ONLY)		1
40A	69-4723-2	. VALVE INSTL, FUEL TANK VENT ACTUATED FLOAT (RH ONLY)		1
41	69-4723-3	. VALVE INSTL, FUEL TANK VENT ACTUATED FLOAT (LH ONLY)		1
41	69-4723-4	. VALVE INSTL, FUEL TANK VENT ACTUATED FLOAT (RH ONLY)		1
42	69-4723-5	. VALVE INSTL, FUEL TANK VENT ACTUATED FLOAT (LH ONLY)		1
42	69-4723-6	. VALVE INSTL, FUEL TANK VENT ACTUATED FLOAT (RH ONLY)		1
43	BACS11W4	. . SEAL		12
44	AN960PD416	. . WASHER		12
45	BACN10BY54	. . NUT		12
46	MS29513-255	. . PACKING		1
47	69-31399-1	. . STOP ASSY, FUEL TANK VENT VALVE	0150	1
48	69-31399-3	. . STOP, FUEL TANK VENT VALVE	0150	1
		ATTACHING PARTS		
	NAS514P1032-14	. . SCREW	0150	2
	AN960C10L	. . WASHER	0150	2
	NAS679A3W	. . NUT	0150	2
		-----*		
49	69-31399-2	. . BRACKET, FUEL TANK VENT VALVE STOP	0150	1
50	10-3066-1	. . VALVE ASSY, FUEL TANK VENT FLOAT ACTUATED CHECK		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE