

BOEING 707 **PARTS CATALOG (MAINTENANCE)**

CHAPTER 57

WINGS

TABLE OF CONTENTS

SECTION		FIGURE
57-01	WING COMPLETE	
	PANEL INSTL, WING STATION 719.92 TO 731.35 TRAILING EDGE LOWER.	3
	PARTS INSTL, FINAL ASSEMBLY PRODUCTION BREAK.	2
	WING INSTL	1
57-02	OUTBOARD WING	
	CAP ASSY, WING TIP.	6
	FITTING INSTL, UPPER OUTBOARD PRODUCTION BREAK RIB.	11
	FRONT SPAR MOD.	14A
	PANEL INSTL, OUTBOARD WING LOWER.	13
	PANEL INSTL, OUTBOARD WING UPPER.	12
	PARTS INSTL, WING STATION 960.112 RIB TIP	5
	REAR SPAR MOD	15A
	RIB INSTL, WING STATION 960.112	10
	RIB REINFORCEMENT W.S. 922 L.H. WING.	2A
	RIB REINFORCEMENT W.S. 922 R.H. WING.	2A
	STRUCTURE ASSY, SECTIONS 13, 15 AND 17 OUTBOARD WING.	8
	STRUCTURE INSTL, SECTION 17 OUTBOARD WING	9
	TIP INSTL, WING	3
	WING ASSY, OUTBOARD	1
	WING LOWER SKIN REINFORCEMENT, L.H.	16A
	WING LOWER SKIN REINFORCEMENT, R.H.	16A
57-03	INBOARD WING	
	DOOR INSTL, BOOST PUMP ACCESS	19
	DOOR INSTL, FRONT SPAR STATION 689.5 TO 666.1 INBOARD WING LOWER PANEL AND WING	22
	LOWER SURFACE DRY BAY	22
	DOOR INSTL, WING LOWER SURFACE DRY BAY REFUELING.	20A
	DOOR INSTL, WING LOWER SURFACE TANK ACCESS AND DRIP STICK	21
	FAIRING INSTL, WING BUTTOCK LINE 315 UPPER SURFACE.	7
	FAIRING INSTL, WING BUTTOCK LINE 545 UPPER SURFACE.	8
	PANEL ASSY, WING STATION 680.63 TO 719.92 TRAILING EDGE BONDED.	18
	PANEL INSTL, SECTION 12 WING UPPER.	13
	RIB INSTL, WING BUTTOCK LINE 315.	11
	RIB INSTL, WING BUTTOCK LINE 59.24.	9
	SEAL ASSY, WING BUTTOCK LINE 59.24 RIB	10
	SPAR INSTL, INBOARD WING FRONT.	3
	SPAR INSTL, INBOARD WING REAR	14
	SPAR INSTL, INBOARD WING REAR	15
	SPAR INSTL, WING STATION 360 TO PRODUCTION BREAK FRONT.	6
	STRUCTURAL INSTL, SECTION 16 INBOARD WING	12
	STRUCTURE ASSY, SECTIONS 12, 14 AND 16 INBOARD WING LH.	2
	STRUCTURE ASSY, SECTIONS 12, 14 AND 16 INBOARD WING RH.	2
	SUPPORT INSTL, INBOARD NACELLE FORWARD DRAG	17
	SUPPORT INSTL, OUTBOARD NACELLE FORWARD DRAG.	16
	WING ASSY, INBOARD.	1
57-04	LEADING EDGE	
	COVER INSTL, FRONT SPAR STATION 666.14 TO 710.06 WING LEADING EDGE OUTBOARD NACELLE	17
	GAP	17
	COVER INSTL, WING LEADING EDGE INBOARD NACELLE GAP.	14
	DOOR INSTL, INBOARD WING LEADING EDGE	18
	LEADING EDGE ASSY, FRONT SPAR STATION 382 TO 745 WING	10
	LEADING EDGE ASSY, SECTION 15 OUTBOARD WING FRONT SPAR STATION 745.772 TO WING	5
	STATION 960.112	5
	LEADING EDGE INSTL, FRONT SPAR STATION 710.06 TO 745.77 INBOARD WING.	9
	LEADING EDGE INSTL, SECTION 14 INBOARD WING	8
	LEADING EDGE INSTL, SECTION 15 OUTBOARD WING.	3
	PANEL INSTL, FRONT SPAR STATION 16.75 TO 108.23 WING LEADING EDGE	20
	PANEL INSTL, FRONT SPAR STATION 16.75 TO 108.23 WING LEADING EDGE	21
	PANEL INSTL, INBOARD WING	22
	PARTS INSTL, FRONT SPAR STATION 247.39 WING LEADING EDGE.	29
	PARTS INSTL, FRONT SPAR STATION 281.13 WING LEADING EDGE.	29
	PARTS INSTL, FRONT SPAR STATION 329.82 WING LEADING EDGE.	29
	PARTS INSTL, FRONT SPAR STATION 358.68 WING LEADING EDGE.	29
	PARTS INSTL, WING LEADING EDGE	27
	PARTS INSTL, WING LEADING EDGE	28
	PARTS INSTL, WING LEADING EDGE	30

 BOEING
707
PARTS CATALOG (MAINTENANCE)

SECTION

FIGURE

RIB INSTL, FRONT SPAR STATION 329.82 WING LEADING EDGE.	31A
RIB INSTL, WING LEADING EDGE	27
RIB INSTL, WING LEADING EDGE	28
RIB INSTL, WING LEADING EDGE	30

57-05 WING TO BODY FAIRINGS AND FILLETS

BEAM INSTL, BODY BUTTOCK LINE 70.50 LOWER SURFACE TRAILING EDGE BEAM.	8
BEAM INSTL, BODY STATION 869.50 LOWER SURFACE TRAILING EDGE	10
FAIRING INSTL, BODY STATION 600K TO 620 WING TO BODY.	1
FAIRING INSTL, BODY STATION 600K TO 620 WING TO BODY.	3
FAIRING INSTL, BODY STATION 620 TO 820 WING TO BODY	4
FAIRING INSTL, BODY STATION 620 TO 820 WING TO BODY	5
PANEL INSTL, BODY BUTTOCK LINE 70.5 TO WING STATION 360 WING LOWER.	14
PANEL INSTL, REAR SPAR TO BODY STATION 869.50 LOWER SURFACE	7
STRUCTURE INSTL, WING TRAILING EDGE TORQUE BOX.	13
TRAILING EDGE INSTL, REAR SPAR TO BODY STATION 899 WING FILLET.	6
TRAILING EDGE INSTL, WING FILLET.	12

57-06 CENTER SECTION

BEAM INSTL, BODY STATION 600K TO 820 WING CENTER SECTION FLOOR	13
BEAM INSTL, BODY STATION 600K TO 820 WING CENTER SECTION FLOOR	14
BEAM INSTL, WING CENTER SECTION SPANWISE NO. 1.	5
BEAM INSTL, WING CENTER SECTION SPANWISE NO. 2.	6
BEAM INSTL, WING CENTER SECTION SPANWISE NO. 3.	7
BEAM INSTL, WING CENTER SECTION SPANWISE NO. 4.	8
BEAM INSTL, WING CENTER SECTION SPANWISE NO. 5.	9
BEAM INSTL, WING CENTER SECTION SPANWISE NO. 6.	10
CENTER SECTION ASSY, SECTION 11 WING.	1
PANEL INSTL, SECTION 11 LOWER	12
PANEL INSTL, SECTION 11 UPPER	11
PANEL INSTL, SECTION 11 UPPER	11A
SEAL INSTL, REAR SPAR VAPOR BARRIER	15
SPAR INSTL, WING CENTER SECTION FRONT	3
SPAR INSTL, WING CENTER SECTION REAR.	4
STRUCTURE ASSY, SECTION 11 WING CENTER SECTION.	2

57-07 BACKING BOARDS

BACKING BOARD INSTL, WING CENTER SECTION UPPER.	2
BACKING BOARD INSTL, WING CENTER SECTION.	1

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 01
WING COMPLETE

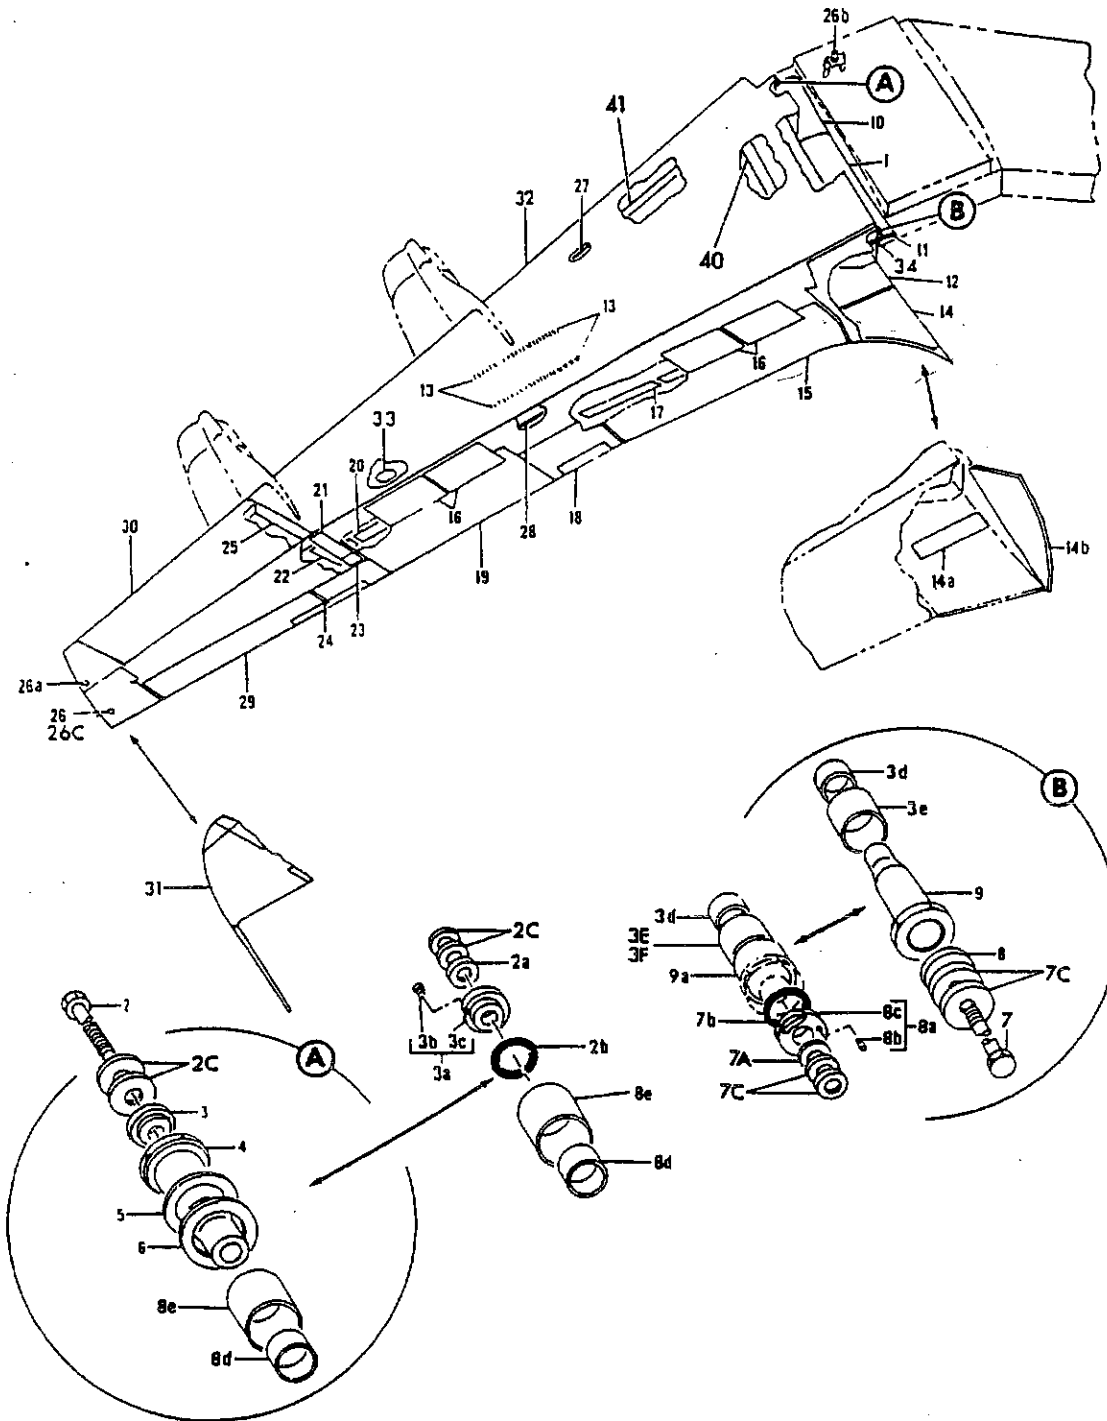


FIGURE 1. WING INSTALLATION

A 5701001 REV 265



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1	65-1000	WING INSTL.		1
1	65-1031-1	. FAIRING INSTL, BODY STATION 620 TO 820 WING TO BODY (LH) (SEE 57-5, FIG. 4 AND 57-5, FIG. 4A)		1
1	65-1031-2	. FAIRING INSTL, BODY STATION 620 TO 820 WING TO BODY (RH) (SEE 57-5, FIG. 4 AND 57-5, FIG. 4A)		1
	65-58719-4	. PIN INSTL, FRONT SPAR BOTTLE		1
	65-58719-1	. PIN INSTL, REAR SPAR BOTTLE		1
2	NAS1310-136H	. BOLT, (USED ON 64-1009-15 AND 65-58719-4)	0101 0499 0203	2
2	NAS1310-136H	. BOLT, (USED ON 65-58719-4) (OPTIONAL MS20010H136)		2
2	MS20010H136	. BOLT, (USED ON 65-58719-4) (OPTIONAL TO NAS1310-136H)	0203	2
2A	250-215-8	. SEAL, (V83259) (USED ON 65-58719-4)		2
2B	MS29513-126	. RING, (USED ON 65-58719-4)		2
3A	69-47250-1	. SUPPORT ASSY, TERMINAL PIN (USED ON 65-58719-4)		2
3B	NAS516-1	. FITTING		1
3C	69-47250-2	. SUPPORT, BOLT		1
4	9-55629-3001	. PIN, WING ATTACHMENT (USED ON 65-58719-4)		2
7	6-72483-1	. BOLT, REAR SPAR TERMINAL PIN		2
7A	250-215-8	. SEAL, (V83259) (USED ON 65-58719-1)		2
7B	MS29513-140	. RING, (USED ON 65-58719-1)		2
8A	69-45903-1	. SUPPORT ASSY, TERMINAL PIN (USED ON 65-58719-1)		2
8B	NAS516-1	. FITTING		1
8C	69-45903-2	. SUPPORT, BOLT		1
9	69-4184-1	. PIN, WING ATTACHMENT (USED ON 65-58719-1)		2
9A	90-5581-3002	. BUSHING, WING TERMINAL PIN BULKHEAD STA. 820. (USED ON 65-58719-1)		2
10	65-1030-49	. FAIRING INSTL, BODY STATION 600K TO 620 WING TO BODY (LH) (SEE 57-5, FIG. 3)		1
10	65-1030-50	. FAIRING INSTL, BODY STATION 600K TO 620 WING TO BODY (RH) (SEE 57-5, FIG. 3)		1
11	65-7118	. SEAL INSTL, REAR SPAR VAPOR BARRIER (SEE 57-6, FIG. 15)		1
12	65-1056-1	. DOOR INSTL, SECTION 16 LANDING GEAR (LH) (SEE 32-2, FIG. 1)		1
12	65-1056-2	. DOOR INSTL, SECTION 16 LANDING GEAR (RH) (SEE 32-2, FIG. 1)		1
	65-28083-1	. GENERATOR INSTL, WING UPPER SURFACE VORTEX LH		1
	65-28083-2	. GENERATOR INSTL, WING UPPER SURFACE VORTEX RH		1
13	65-1093	. VANE, UPPER WING VORTEX GENERATOR		48
14	65-19169-1	. FLAP INSTL, FILLET (LH) (SEE 27-6, FIG. 23)	0150	1
14	65-19169-1	. FLAP INSTL, FILLET (LH) (VARIABLE DWG; 65-19169-5001) (SEE 27-6, FIG. 23)	5199	1
14	65-19169-2	. FLAP INSTL, FILLET (RH) (SEE 27-6, FIG. 23)	0150	1
14	65-19169-2	. FLAP INSTL, FILLET (RH) (VARIABLE DWG; 65-19169-5002) (SEE 27-6, FIG. 23)	5199	1
14A	65-19171-1	. DOOR INSTL, INBOARD WING FILLET FLAP COVE LIP (LH ONLY) (SEE 27-6, FIG. 69)		1
14A	65-19171-2	. DOOR INSTL, INBOARD WING FILLET FLAP COVE LIP (RH ONLY) (SEE 27-6, FIG. 69)		1
14B	65-22852-1	. FENCE INSTL, FILLET FLAP (LH ONLY) (SEE 27-6, FIG. 32)		1
14B	65-22852-2	. FENCE INSTL, FILLET FLAP (RH ONLY) (SEE 27-6, FIG. 32)		1
15	65-19635-1	. FLAP INSTL, INBOARD WING (LH) (SEE 27-6, FIG. 12)	0150	1
15	65-19635-1	. FLAP INSTL, INBOARD WING (LH) (VARIABLE DWG NO.; 65-19635-5001) (SEE 27-6, FIG. 12)	5199	1
15	65-19635-2	. FLAP INSTL, INBOARD WING (RH) (SEE 27-6, FIG. 12)	0150	1
15	65-19635-2	. FLAP INSTL, INBOARD WING (RH) (VARIABLE DWG NO.; 65-19635-5003) (SEE 27-6, FIG. 12)	5199	1
16	65-1066-1	. SPOILER INSTL, (SEE 27-4, FIG. 1)		1
17	65-19634-1	. DOOR INSTL, INBOARD COVE LIP (LH) (SEE 27-6, FIG. 45)		1
17	65-19634-2	. DOOR INSTL, INBOARD COVE LIP (RH) (SEE 27-6, FIG. 45)		1
18	65-1096-1	. AILERON INSTL, INBOARD WING (LH) (SEE 27-2, FIG. 8)		1
18	65-1096-2	. AILERON INSTL, INBOARD WING (RH) (SEE 27-2, FIG. 8)		1
19	5-73132-3001	. FLAP INSTL, OUTBOARD FLAP (LH) (SEE 27-6, FIG. 3 AND 1)	0150	1
19	5-73132-3001	. FLAP INSTL, OUTBOARD (LH) (VARIABLE DWG NO.; 5-73132-5001) (SEE 27-6, FIG. 3)	5199	1
19	5-73132-3002	. FLAP INSTL, OUTBOARD FLAP (RH) (SEE 27-6, FIG. 3 AND 1)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R	1 19	5-73132-3002	. FLAP INSTL, OUTBOARD (RH) (VARIABLE DWG NO.; 5-73132-5002) (SEE 27-6, FIG. 3)	5199	1
	20	65-18726-1	. DOOR INSTL, OUTBOARD COVE LIP (LH) (SEE 27-6, FIG. 36)		1
	20	65-18726-2	. DOOR INSTL, OUTBOARD COVE LIP (RH) (SEE 27-6, FIG. 36)		1
		5-89341-3001	. PANEL INSTL, WING STATION 719.92 TO 731.35 TRAILING EDGE UPPER (LH)		1
		5-89341-3002	. PANEL INSTL, WING STATION 719.92 TO 731.35 TRAILING EDGE UPPER (RH)		1
R R R R R R R R R R	21	5-89341-3005	. . PANEL ASSY, WING STATION 719.92 TO 731.35 TRAILING EDGE UPPER (LH ONLY)	0151	1
	21	5-89341-3006	. . PANEL ASSY, WING STATION 719.92 TO 731.35 TRAILING EDGE UPPER (RH ONLY)	0151	1
	21	5-89341-3009	. . PANEL ASSY, WING STATION 719.92 TO 731.35 TRAILING EDGE (LH ONLY)	5299	1
			(OPTIONAL 5-89341-3005)		
	21	5-89341-3005	. . PANEL ASSY, WING STATION 719.92 TO 731.35 TRAILING EDGE (LH ONLY)	5299	1
			(OPTIONAL TO 5-89341-3009)		
	21	5-89341-3010	. . PANEL ASSY, WING STATION 719.92 TO 731.35 TRAILING EDGE (RH ONLY)	5299	1
			(OPTIONAL 5-89341-3006)		
	21	5-89341-3006	. . PANEL ASSY, WING STATION 719.92 TO 731.35 TRAILING EDGE (RH ONLY)	5299	1
			(OPTIONAL TO 5-89341-3010)		
		NAS514P428-16	ATTACHING PARTS . . SCREW		28
	22	5-89347-3001	. PANEL INSTL, WING STATION 719.92 TO 731.35 TRAILING EDGE LOWER (LH) (SEE FIG. 3)		1
	22	5-89347-3002	. PANEL INSTL, WING STATION 719.92 TO 731.35 TRAILING EDGE LOWER (RH) (SEE FIG. 3)		1
		5-97644-3001	. FAIRING INSTL, OUTBOARD WING AILERON MAST (LH) . . .		1
		5-97644-3002	. FAIRING INSTL, OUTBOARD WING AILERON MAST (RH) . . .		1
	23	5-97644-3003	. . FAIRING, OUTBOARD WING AILERON MAST (LH ONLY) . . .		1
	23	5-97644-3004	. . FAIRING, OUTBOARD WING AILERON MAST (RH ONLY) . . .		1
			ATTACHING PARTS		
		NAS514P428-10	. . SCREW		13
	24	50-8701-39	. CONTROL INSTL, AILERON AND SPOILER (LH) (SEE 27-3, . . FIG. 26)		1
	24	50-8701-139	. CONTROL INSTL, AILERON AND SPOILER (RH) (SEE 27-3, . . FIG. 26)		1
R R R R R R R R	25	40-1614-17	. PARTS INSTL, FINAL ASSEMBLY PRODUCTION BREAK (LH) . . (SEE FIG. 2)	0150	1
	25	40-1614-17	. PARTS INSTL, FINAL ASSEMBLY PRODUCTION BREAK (VARIABLE DWG; 40-1614-5029) (LH ONLY) (SEE FIG. 2)	5199	1
	25	40-1614-18	. PARTS INSTL, FINAL ASSEMBLY PRODUCTION BREAK (RH) . . (SEE FIG. 2)	0150	1
	25	40-1614-18	. PARTS INSTL, FINAL ASSEMBLY PRODUCTION BREAK (VARIABLE DWG; 40-1614-5030) (RH ONLY) (SEE FIG. 2)	5199	1
	26	65-26261-2	. TRANSMITTER INSTL, TIP FLUXGATE (LH ONLY) (ADDED BY SB 3392) (SEE 34-5, FIG. 6A)	0203	1
R R R R R R		65-7460-1	. VALVE INSTL, COMPASS FLUX LH.	0150	1
		65-7460-1	. VALVE INSTL, COMPASS FLUX LH. (VARIABLE DWG; 65-7460-5001)	5199	1
		65-7460-2	. VALVE INSTL, COMPASS FLUX RH.	0101 0450	1
		65-7460-2	. VALVE INSTL, COMPASS FLUX RH. (VARIABLE DWG; 65-7460-5002)	5199	1
		65-7460-2	. VALVE INSTL, COMPASS FLUX RH (DELETED BY SB 3392) . .	0203	1
			. . NAVIGATION, (SEE 34-5, FIG. 2, 2A AND 2B)		
R R R R R R			. . REQUIRED PLACARDS, (SEE 11-2, FIG. 235 AND 11-3, . . FIG. 20A)	5199	
	27	50-5529-13	. ELECTRICAL INSTL, SECTION 22 WING LH (SEE 24-2, FIG. 12)	0150	1
	27	50-5529-13	. ELECTRICAL INSTL, SECTION 22 WING LH (VARIABLE. . . DWG; 50-5529-5004) (SEE 24-2, FIG. 12)	5199	1
	27	50-5529-14	. ELECTRICAL INSTL, SECTION 22 WING RH (SEE 24-2, FIG. 12)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
1 27	50-5529-14	. ELECTRICAL INSTL, SECTION 22 WING RH (VARIABLE. DWG;50-5529-3013) (SEE 24-2, FIG. 12)	5199	1
28	50-6848	. HYDRAULIC INSTL, WING HYDRAULIC POWER, (SEE 29-2, FIG. 1 THRU 16A). REQUIRED PLACARDS, (SEE 11-3, FIG. 32 THRU 40).		1
29	5-73134-3001	. AILERON INSTL, OUTBOARD WING (LH) (SEE 27-2, FIG. 1)		1
29	5-73134-3002	. AILERON INSTL, OUTBOARD WING (RH) (SEE 27-2, FIG. 1)		1
30	50-5305-47	. WING ASSY, OUTBOARD (LH) (SEE 57-2, FIG. 1)		1
30	50-5305-48	. WING ASSY, OUTBOARD (RH) (SEE 57-2, FIG. 1)		1
32	65-1000-3	. WING ASSY, INBOARD (SEE 57-3, FIG. 1)		1
40	ALD89-60-12252-001	. FUEL SYSTEM INSTL, WING (A/R ONLY) (VS2500) (ADDED . . . BY RAF 7211.019-225)	0150	1
	391-89-60-71202-003	. . WING FUEL SYSTEM INSTL, (L.H. ONLY) (VS2500). (ADDED BY RAF 7211.019-225) (SEE 89-03, FIG. 1)	0150	1
	391-89-60-71202-004	. . WING FUEL SYSTEM INSTL, (R.H. ONLY) (VS2500). (ADDED BY RAF 7211.019-225) (SEE 89-03, FIG. 2)	0150	1
	361-89-60-74400-001	. . FUEL SYSTEM INSTL, WING, A/R POD AREA (L.H. ONLY) . . . (VS2500) (ADDED BY RAF 7211.019-225) (SEE 89-04, FIG. 1)	0150	1
	361-89-60-74400-002	. . FUEL SYSTEM INSTL, WING, A/R POD AREA (R.H. ONLY) . . . (VS2500) (ADDED BY RAF 7211.019-225) (SEE 89-04, FIG. 2)	0150	1
	361-89-60-74050-001	. . FUEL SYSTEM INSTL, WING CENTER SECTION (A/R PUMPS PRESSURE LINE ONLY) (VS2500) (ADDED BY RAF 7211.019-225) (SEE 89-01, FIG. 1)	0150	1
	391-89-60-72779-005	. . PRESSURE GAGE SYSTEM INSTL, (VS2500) (VS2500) . . . (ADDED BY RAF 7211.019-225) (SEE 89-01, FIG. 4)	0150	1
	361-89-60-74116-001	. . SENSING LINE INSTL, (L.H. ONLY) (VS2500) (ADDED . . . BY RAF 7211.019-225) (SEE 89-01, FIG. 6)	0150	1
	361-89-60-74116-002	. . SENSING LINE INSTL, (L.H. ONLY) (VS2500) (ADDED . . . BY RAF 7211.019-225) (SEE 89-01, FIG. 6)	0150	1
	391-89-60-72112-005	. . A/R FUEL PUMP SEAL DRAIN INSTL, (VS2500) (ADDED . . . BY RAF 7211.019-225) (SEE 89-01, FIG. 8)	0150	1
	361-89-60-74406-001	. . A/R POD POSITIVE INLET PRESSURE SYSTEM INSTL, . . . (L.H. ONLY) (VS2500) (ADDED BY RAF 7211.019-225) (SEE 89-01, FIG. 9)	0150	1
	361-89-60-74406-002	. . A/R POD POSITIVE INLET PRESSURE SYSTEM INSTL, . . . (R.H. ONLY) (VS2500) (ADDED BY RAF 7211.019-225) (SEE 89-01, FIG. 9)	0150	1
	391-89-60-71202-003	. . WING FUEL SYSTEM INSTL, L.H. (REPLENISH LINE. ONLY) (VS2500) (ADDED BY RAF 7211.019-225) (SEE 89-03, FIG. 5)	0150	1
	391-89-60-71202-004	. . WING FUEL SYSTEM INSTL, R.H. (REPLENISH LINE. ONLY) (VS2500) (ADDED BY RAF 7211.019-225) (SEE 89-03, FIG. 5)	0150	1
41	391-89-70-71452-003	. HYDRAULIC UT IT INSTL, WING (VS2500) (ADDED BY RAF 7211.019-225)	0150	1
	391-89-70-72304-009	. . HYDRAULIC SYSTEM INSTL, WING REAR SPAR (L.H. ONLY) (VS2500) (ADDED BY RAF 7211.019-225) (SEE 89-05, FIG. 25)	0150	1
	391-89-70-72304-011	. . HYDRAULIC SYSTEM INSTL, WING REAR SPAR (R.H. ONLY) (VS2500) (ADDED BY RAF 7211.019-225) (SEE 89-05, FIG. 25)	0150	1
	391-89-70-72457-001	. . HYDRAULIC UT IT INSTL, (STATION 600K TO 820 L.H. . . . AND R.H.) (HYDRAULIC POWER ONLY) (VS2500) (ADDED BY RAF 7211.019-225) (SEE 89-05, FIG. 28)	0150	1
	391-89-70-72337-009	. . WING HYDRAULIC SYSTEM INSTL, FRONT SPAR AREA (LH) . . . (VS2500) (ADDED BY RAF 7211.019-225) (SEE 89-05, FIG. 29)	0150	1
	391-89-70-72337-011	. . WING HYDRAULIC SYSTEM INSTL, FRONT SPAR AREA (RH) . . . (VS2500) (ADDED BY RAF 7211.019-225) (SEE 89-05, FIG. 29)	0150	1
	391-89-70-74058-001	. . HYDRAULIC SYSTEM INSTL, WING CENTER SECTION (A/R. PUMPS HYDRAULIC POWER ONLY) (VS2500) (ADDED BY RAF 7211.019-225) (SEE 89-05, FIG. 30)	0150	1
	391-89-70-72297-003	. . HYDRAULIC UT IT SYSTEM INSTL, OUTBOARD NACELLE. . . STRUT (L.H.) (HYDRAULIC POWER ONLY) (VS2500) (ADDED BY RAF 7211.019-225) (SEE 89-05, FIG. 35)	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

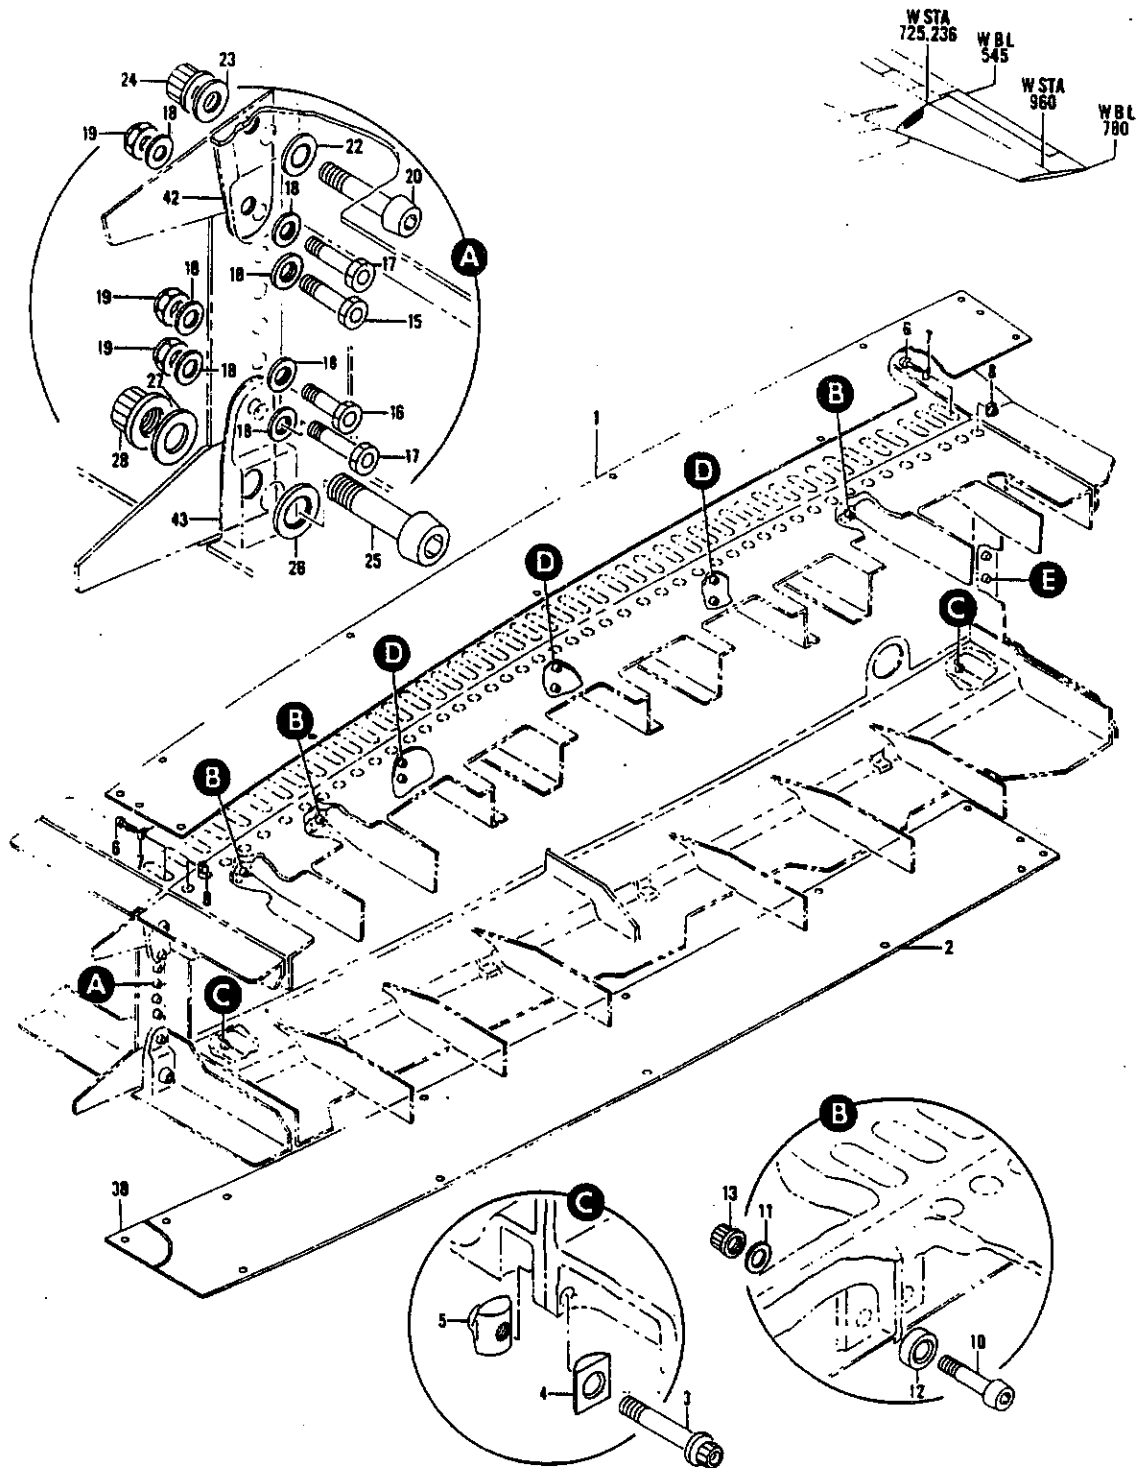


FIGURE 2. PARTS INSTL, FINAL ASSEMBLY PRODUCTION BREAK (SHEET 1)

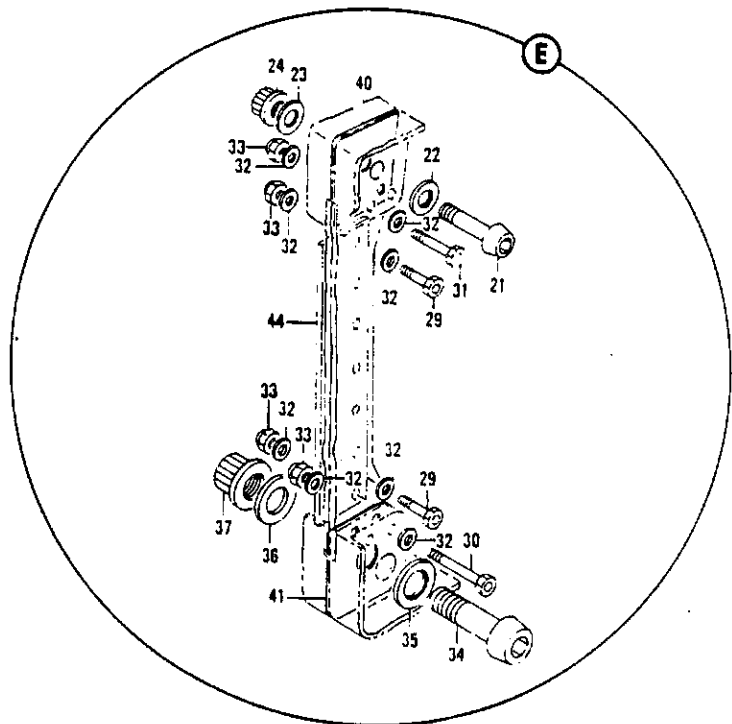
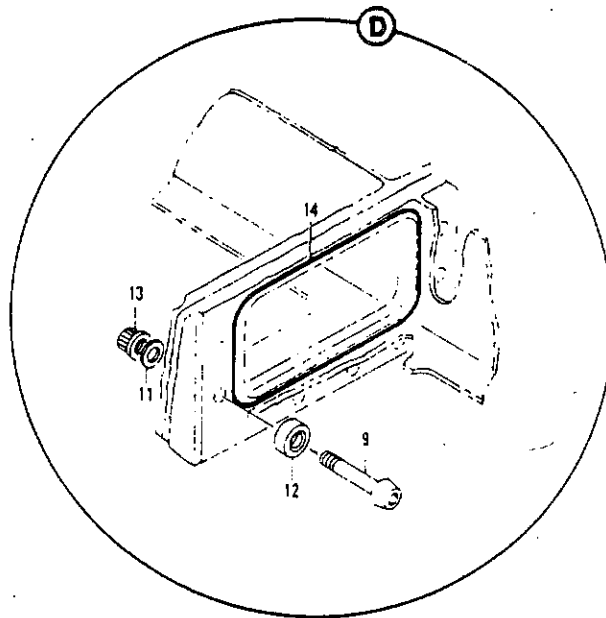


FIGURE 2. PARTS INSTL, FINAL ASSEMBLY PRODUCTION BREAK (SHEET 2)

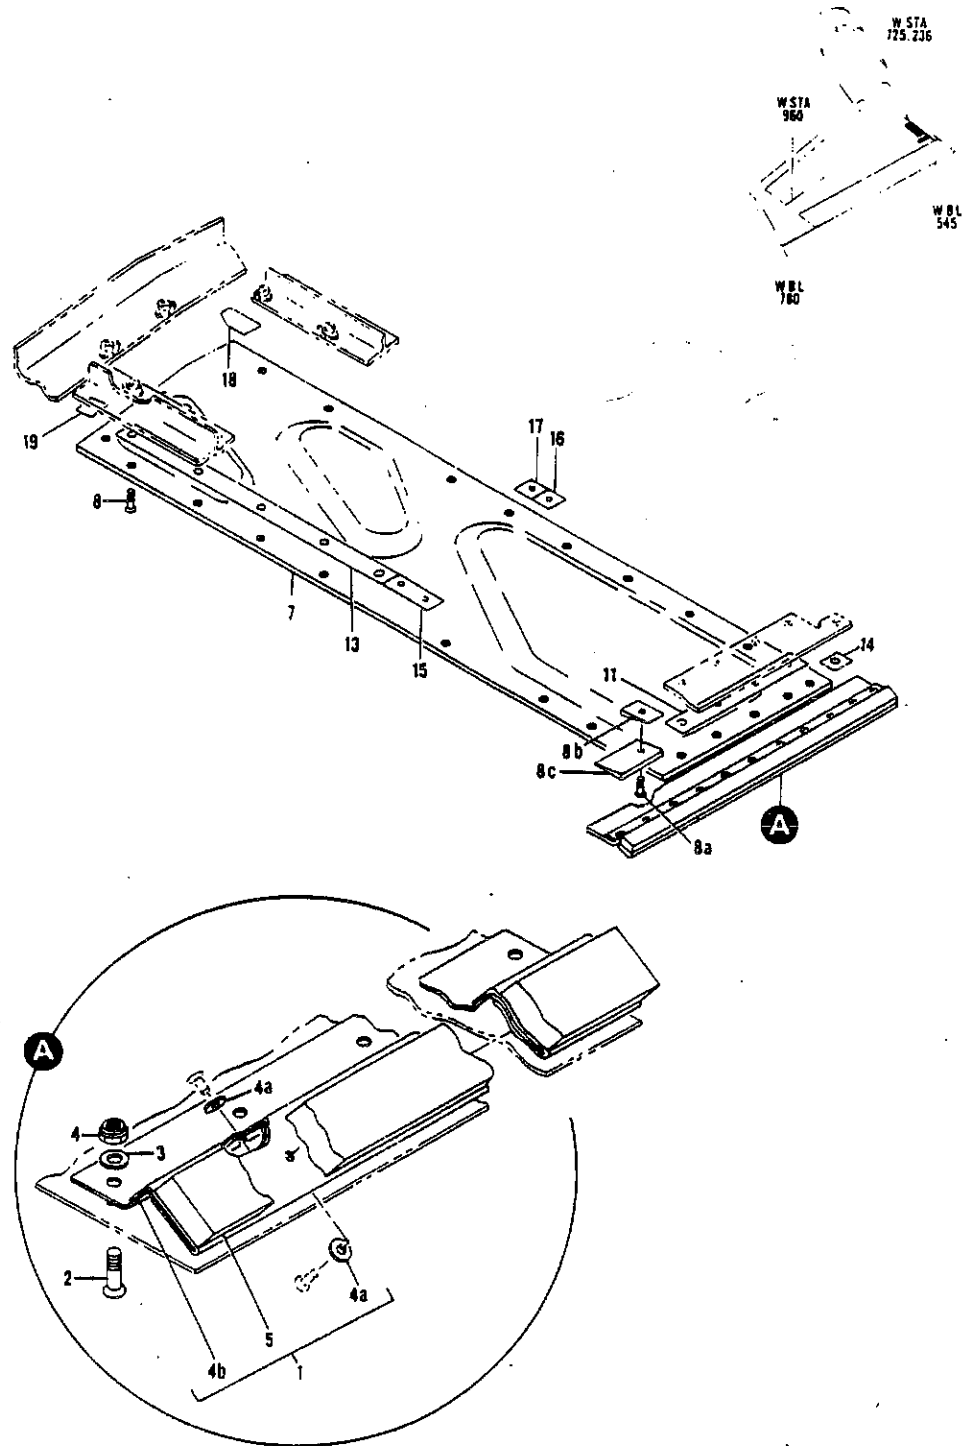


FIGURE 3. PANEL INSTL. WING STATION 719.92 TO 731.35 TRAILING EDGE LOWER




PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3	5-89347-3001		PANEL INSTL, WING STATION 719.92 TO 731.35 TRAILING . . EDGE LOWER (LH) (SEE FIG. 1, ITEM 22)		RF
	5-89347-3002		PANEL INSTL, WING STATION 719.92 TO 731.35 TRAILING . . EDGE LOWER (RH) (SEE FIG. 1, ITEM 22)		RF
1	9-67061-3000		. SEAL ASSY, OUTBOARD WING LOWER SURFACE TRAILING EDGE (OPTIONAL TO 204-31181-1)		1
1	204-31181-1		. SEAL ASSY, OUTBOARD WING LOWER SURFACE TRAILING EDGE (OPTIONAL 9-67061-3000)		1
			ATTACHING PARTS		
2	NAS517-3-0		. SCREW		11
3	AN960D10		. WASHER.		11
4	BACN10BY53W		. NUT		11
			-----*		
4A	AN960D2L		. . WASHER.		26
4B	9-67062-2000		. . BRACKET, OUTBOARD WING LOWER SURFACE TRAILING EDGE SEAL		1
5	9-67061-1		. . SEAL, OUTBOARD WING LOWER SURFACE TRAILING EDGE . . MOHAIR (BAC1523-7 X 17.5 IN. LG)		1
7	5-89347-3027		. PANEL ASSY, WING STATION 719.92 TO 731.35 TRAILING. . 0151 EDGE LOWER (LH ONLY)		1
7	5-89347-3035		. PANEL ASSY, WING STATION 719.92 TO 731.35 TRAILING. . 5299 EDGE LOWER (LH) (OPTIONAL 5-89347-3027)		1
7	5-89347-3027		. PANEL ASSY, WING STATION 719.92 TO 731.35 TRAILING. . 5299 EDGE LOWER (LH) (OPTIONAL TO 5-89347-3035)		1
7	5-89347-3028		. PANEL ASSY, WING STATION 719.92 TO 731.35 TRAILING. . 0151 EDGE LOWER (RH ONLY)		1
7	5-89347-3036		. PANEL ASSY, WING STATION 719.92 TO 731.35 TRAILING. . 5299 EDGE LOWER (RH) (OPTIONAL 5-89347-3028)		1
7	5-89347-3028		. PANEL ASSY, WING STATION 719.92 TO 731.35 TRAILING. . 5299 EDGE LOWER (RH) (OPTIONAL TO 5-89347-3036)		1
			ATTACHING PARTS		
8	NAS517-4-4		. SCREW		22
8A	NAS517-4-8		. SCREW		1
8B	5-89347-3013		. FILLER, WING STATION 719.92 TO 731.35 TRAILING EDGE . . LOWER PANEL TAPERED		1
8C	5-89347-3014		. FILLER, WING STATION 719.92 TO 731.35 TRAILING EDGE . . LOWER PANEL TAPERED		1
			-----*		
11	BACS40819-138		. SHIM.		AR
13	BACS40819-292		. SHIM.		AR
14	BACS40C18-19		. SHIM.		AR
15	BACS40819-301		. SHIM.		AR
16	BACS40819-304		. SHIM.		AR
17	BACS40819-311		. SHIM.		AR
18	BACS40817-78		. SHIM.		AR
19	BACS40817-101		. SHIM.		AR
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 02
OUTBOARD WING

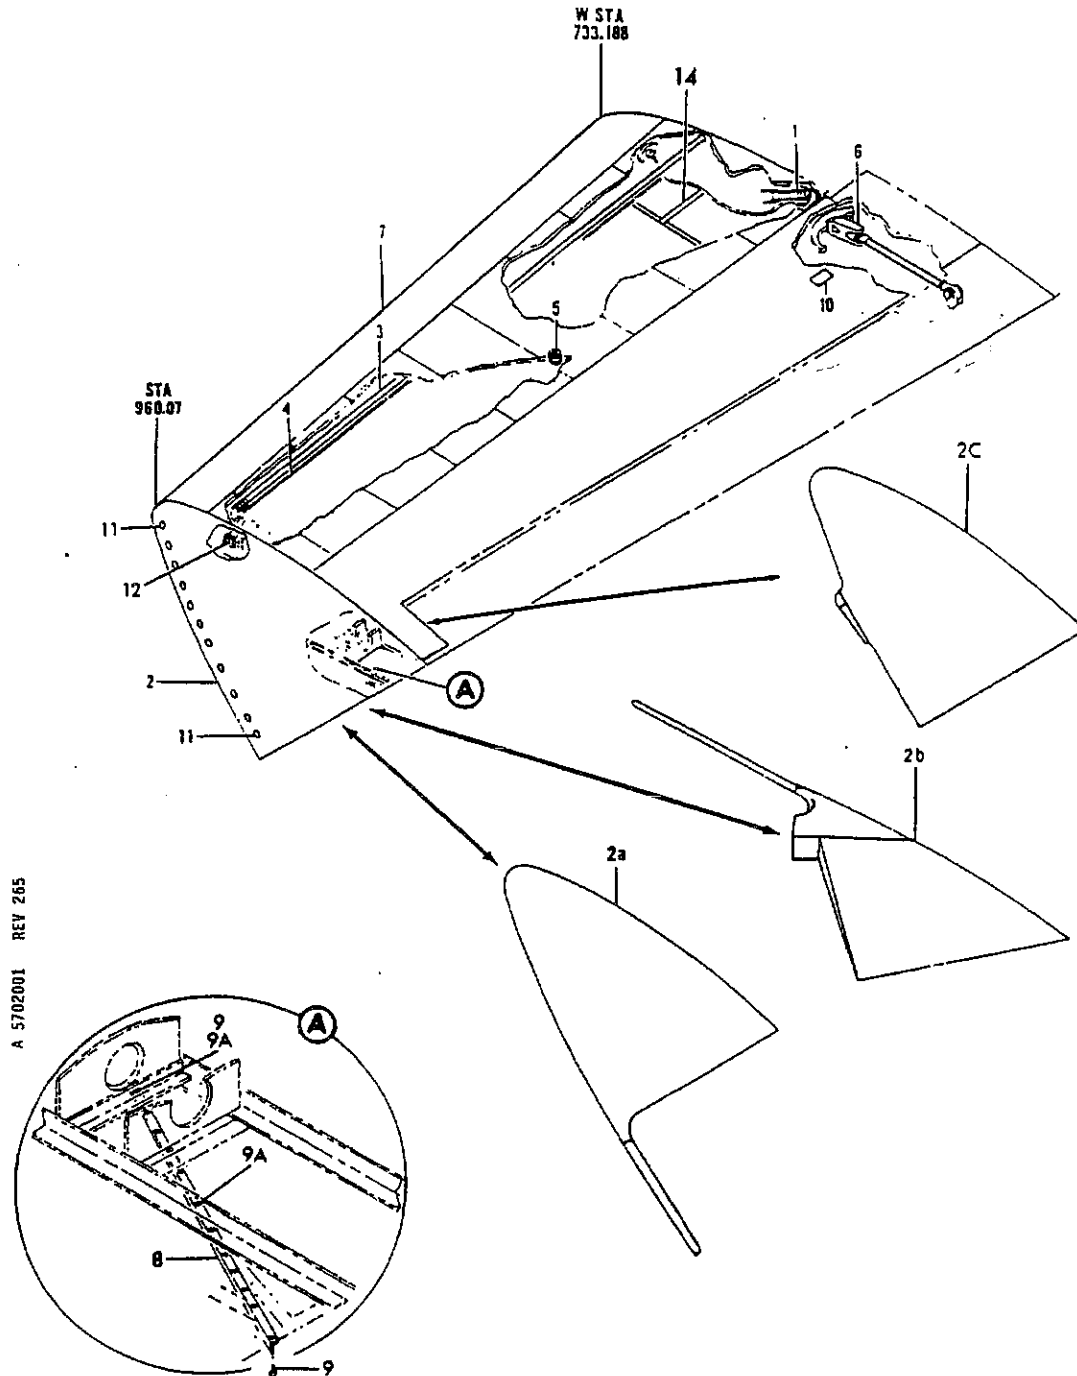

A 5702001 REV 265



FIGURE 1. WING ASSY. OUTBOARD



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1	50-5305-47		WING ASSY, OUTBOARD (LH) (SEE 57-1, FIG. 1, ITEM 30).		RF
	50-5305-48		WING ASSY, OUTBOARD (RH) (SEE 57-1, FIG. 1, ITEM 30).		RF
1	5-86592-3001		. GAGE INSTL, OUTBOARD RESERVE FUEL TANK (LH ONLY) (SEE 28-5, FIG. 1 AND 1A)		1
1	5-86592-3002		. GAGE INSTL, OUTBOARD RESERVE FUEL TANK (RH ONLY) (SEE 28-5, FIG. 1 AND 1A)		1
2	65-18282-1		. TIP INSTL, WING (LH ONLY) (SEE FIG. 3). (REWORKED BY DWG NO.; 65C18467-7)	0101 0499	1
2	65-18282-1		. TIP INSTL, WING (LH ONLY) (REWORKED BY SB 3392) . . . (SEE FIG. 3)	0203	1
2	65-18282-2		. TIP INSTL, WING (RH ONLY) (REWORKED BY SB 3392) . . .	0203	1
2	65-18282-2		. TIP INSTL, WING (RH ONLY) (SEE FIG. 3) (REWORKED BY DWG NO.; 65C18467-8)	0101 0499	1
3	50-5358-1		. VENT INSTL, SECTION 23 WING FUEL TANK LH (LH ONLY). . (SEE 28-7, FIG. 12 AND 12A)	0150	1
3	50-5358-1		. VENT INSTL, SECTION 23 WING FUEL TANK LH (VARIABLE DWG; 50-5358-5001) (LH ONLY) (SEE 28-7, FIG. 12 AND 12A)	5199	1
3	50-5358-2		. VENT INSTL, SECTION 23 WING FUEL TANK RH (RH ONLY). . (SEE 28-7, FIG. 12 AND 12A)	0150	1
3	50-5358-2		. VENT INSTL, SECTION 23 WING FUEL TANK RH (VARIABLE DWG; 50-5358-5002) (RH ONLY) (SEE 28-7, FIG. 12 AND 12A)	5199	1
4	50-5357-3		. TUBING INSTL, SECTION 23 LH SIDE PRESSURE FUELING (LH ONLY) (SEE 28-1, FIG. 11)		1
4	50-5357-4		. TUBING INSTL, SECTION 23 RH SIDE PRESSURE FUELING (RH ONLY) (SEE 28-1, FIG. 11)		1
5	5-86591-3003		. EQUIPMENT INSTL, LH OUTBOARD WING FUEL TANKS (LH. . . ONLY) (SEE 28-3, FIG. 1)		1
5	5-86591-3004		. EQUIPMENT INSTL, RH OUTBOARD WING FUEL TANKS (RH. . . ONLY) (SEE 28-3, FIG. 1)		1
6	50-8701-27		. CONTROL INSTL, AILERON AND SPOILER (LH ONLY) (SEE 27-3, FIG. 24)		1
6	50-8701-127		. CONTROL INSTL, AILERON AND SPOILER (RH ONLY) (SEE 27-3, FIG. 24)		1
7	50-5306-39		. STRUCTURE ASSY, SECTIONS 13, 15 AND 17 OUTBOARD WING (LH ONLY) (SEE FIG. 8)		1
7	50-5306-40		. STRUCTURE ASSY, SECTIONS 13, 15 AND 17 OUTBOARD WING (RH ONLY) (SEE FIG. 8)		1
	69-5341-1		. FENCE INSTL, OUTBOARD WING DRIP (LH ONLY)	0150	1
	69-5341-1		. FENCE INSTL, OUTBOARD WING DRIP (LH ONLY) (VARIABLE DWG; 69-5341-5001)	5199	1
	69-5341-2		. FENCE INSTL, OUTBOARD WING DRIP (RH ONLY)	0150	1
	69-5341-2		. FENCE INSTL, OUTBOARD WING DRIP (RH ONLY) (VARIABLE DWG; 69-5341-5002)	5199	1
8	69-5341-3		. . FENCE, OUTBOARD WING DRIP (LH ONLY)		1
8	69-5341-4		. . FENCE, OUTBOARD WING DRIP (RH ONLY)		1
9	NAS623-3-3		. . ATTACHING PARTS SCREW	5199	12
12	65-58343-1		. SUPPRESSOR INSTL, FUEL TANK PROTECTION SYSTEM (LH ONLY) (SEE 26-1, FIG. 48)	5199	1
12	65-58343-2		. SUPPRESSOR INSTL, FUEL TANK PROTECTION SYSTEM (RH ONLY) (SEE 26-1, FIG. 48)	5199	1
14	361-89-60-74407-001		. . WING STRUCTURE INSTL, (OUTBOARD L.H. ONLY). (VS2500) (ADDED BY RAF 7211.019-225) (SEE 89-07, FIG. 2)	0150	1
14	361-89-60-74407-002		. . WING STRUCTURE INSTL, (OUTBOARD R.H. ONLY). (VS2500) (ADDED BY RAF 7211.019-225) (SEE 89-07, FIG. 2)	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

R
R
R
R
R
R

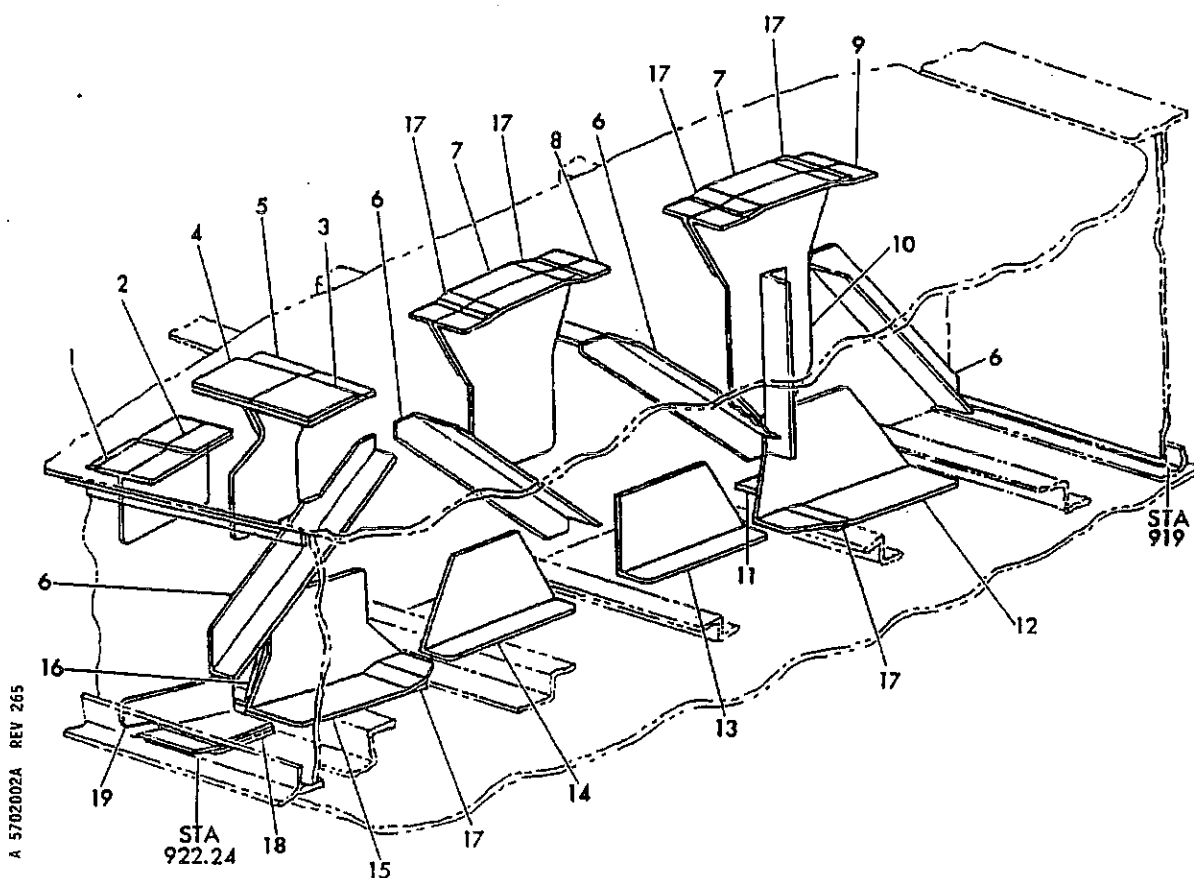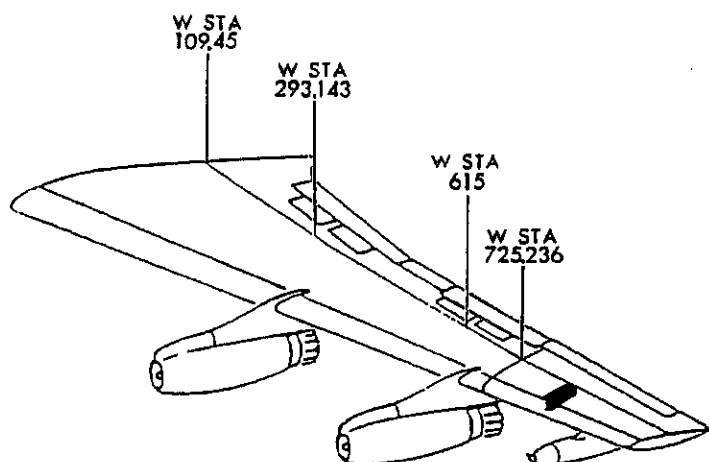

A 5702002A REV 265

FIGURE 2A. RIB REINFORCEMENT W.S. 922

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	2A	361-57-20-74259-001	RIB REINFORCEMENT W.S. 922 L.H. WING (VS2500) (ADDED. BY RAF 7211.019-225) (SEE FIG. 8, ITEM 14)							0150	1
R		361-57-20-74259-001	RIB REINFORCEMENT W.S. 922 R.H. WING (VS2500) (ADDED. BY RAF 7211.019-225) (SEE FIG. 8, ITEM 14)							0150	1
R	1	361-57-20-74416-203	. UPPER FITTING, (L.H. ONLY) (VS2500)							0150	1
R	1	361-57-20-74416-204	. UPPER FITTING, (R.H. ONLY) (VS2500)							0150	1
R	2	361-57-20-74416-229	. FILLER, (VS2500)							0150	2
R	3	361-57-20-74416-227	. FILLER, (VS2500)							0150	2
R	4	361-57-20-74416-231	. CLIP, (VS2500)							0150	2
R	5	361-57-20-74416-225	. CLIP, (VS2500)							0150	2
R	6	361-57-20-74416-205	. ANGLE, (VS2500)							0150	8
R	7	361-57-20-74416-211	. CLIP, (VS2500)							0150	4
R	8	361-57-20-74416-207	. CLIP, (VS2500)							0150	2
R	9	361-57-20-74416-209	. CLIP, (VS2500)							0150	2
R	10	361-57-20-74416-223	. ANGLE, (VS2500)							0150	2
R	11	361-57-20-74416-215	. CLIP, (VS2500)							0150	2
R	12	361-57-20-74416-221	. CLIP, (FOR L.H. ONLY) (VS2500)							0150	1
R	12	361-57-20-74416-222	. CLIP, (FOR R.H. ONLY) (VS2500)							0150	1
R	13	361-57-20-74416-219	. CLIP, (FOR L.H. ONLY) (VS2500)							0150	1
R	13	361-57-20-74416-220	. CLIP, (FOR R.H. ONLY) (VS2500)							0150	1
R	14	361-57-20-74416-217	. CLIP, (VS2500)							0150	2
R	15	361-57-20-74416-213	. CLIP, (FOR L.H. ONLY) (VS2500)							0150	1
R	15	361-57-20-74416-214	. CLIP, (FOR R.H. ONLY) (VS2500)							0150	1
R	16	361-57-20-74416-216	. CLIP, (VS2500)							0150	2
R	17	BACF3T01F10F8	. FILLER							0150	12
R	18	361-57-20-74416-235	. FILLER, (VC2500)							0150	2
R	19	361-57-20-74416-233	. FITTING, (L.H.) (VC2500)							0150	1
R	19	361-57-20-74416-234	. FITTING, (R.H.) (VC2500)							0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

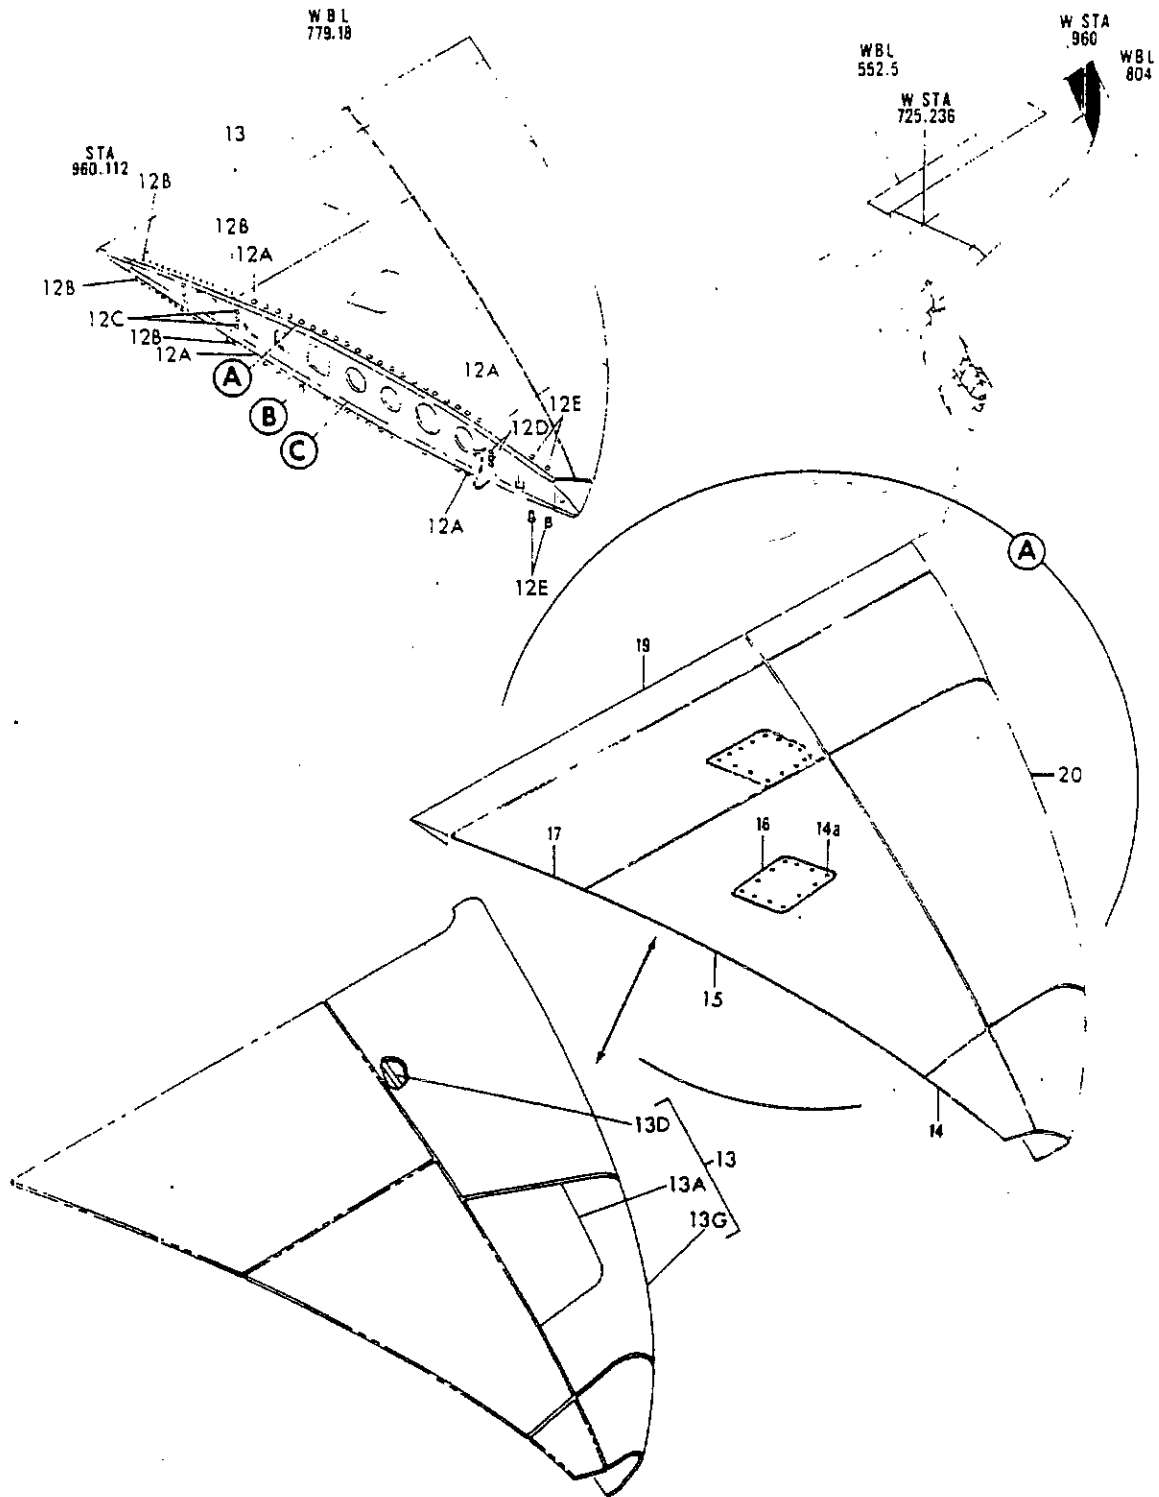


FIGURE 3. WING TIP INSTALLATION (SHEET 1)

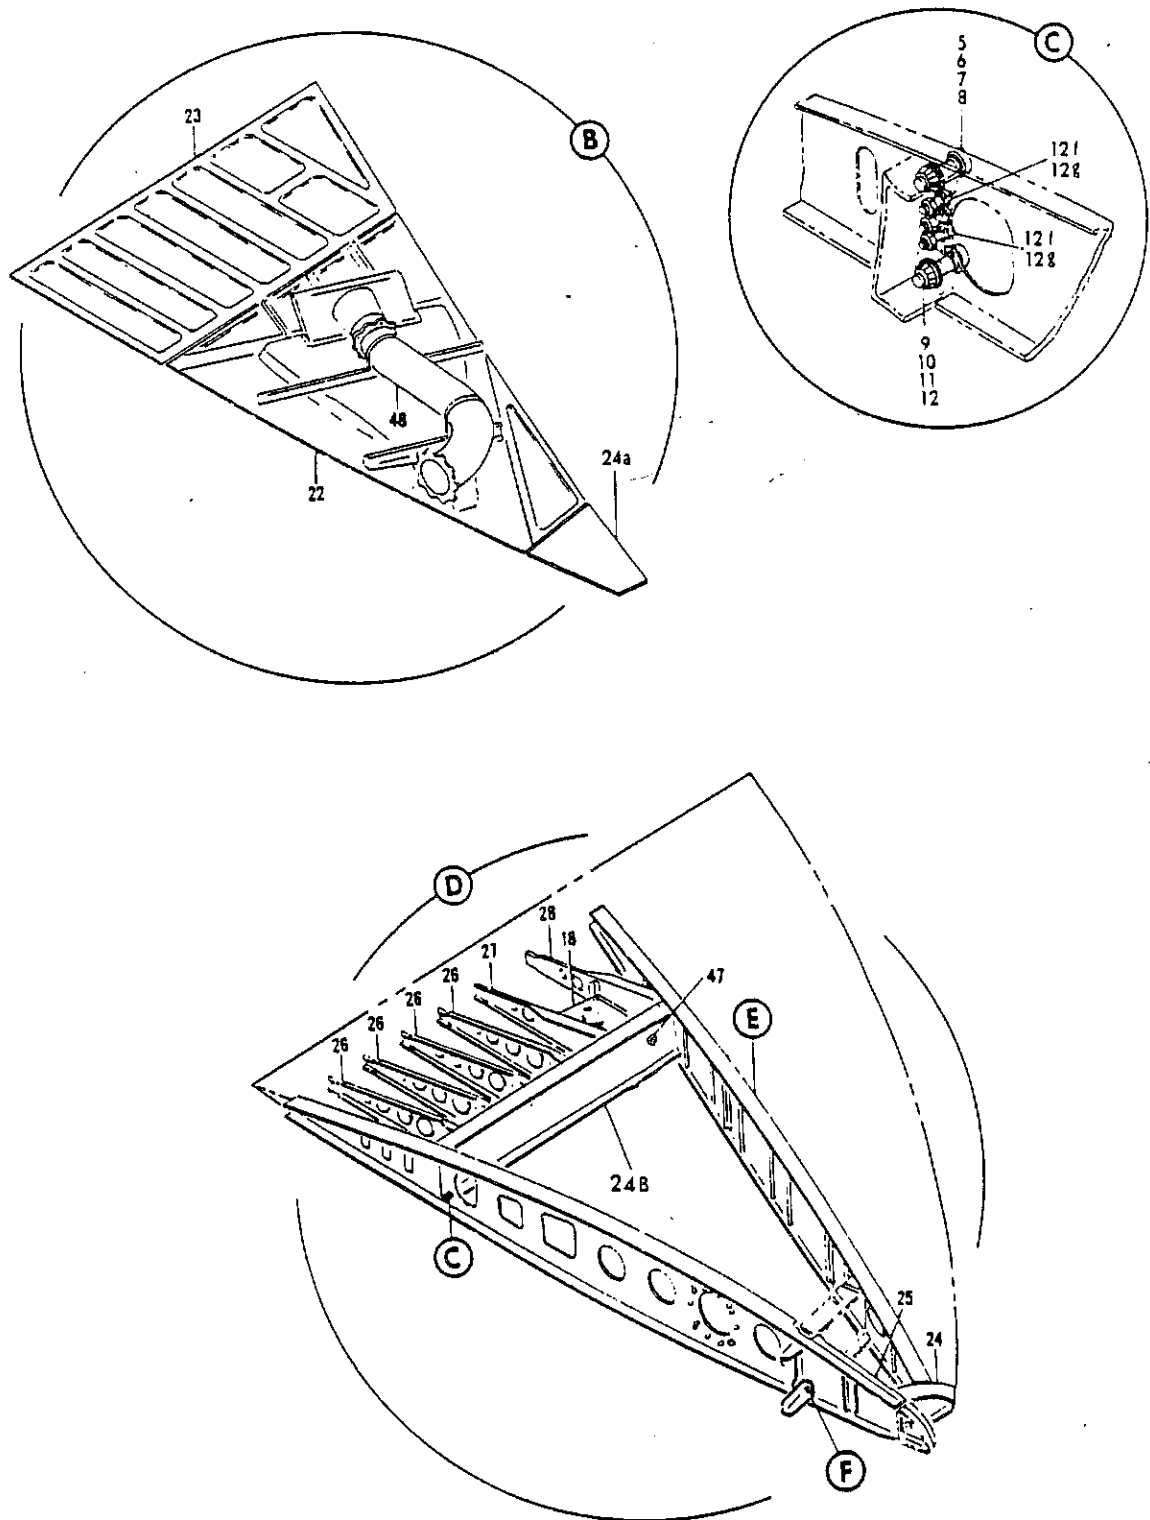


FIGURE 3. WING TIP INSTALLATION (SHEET 2)

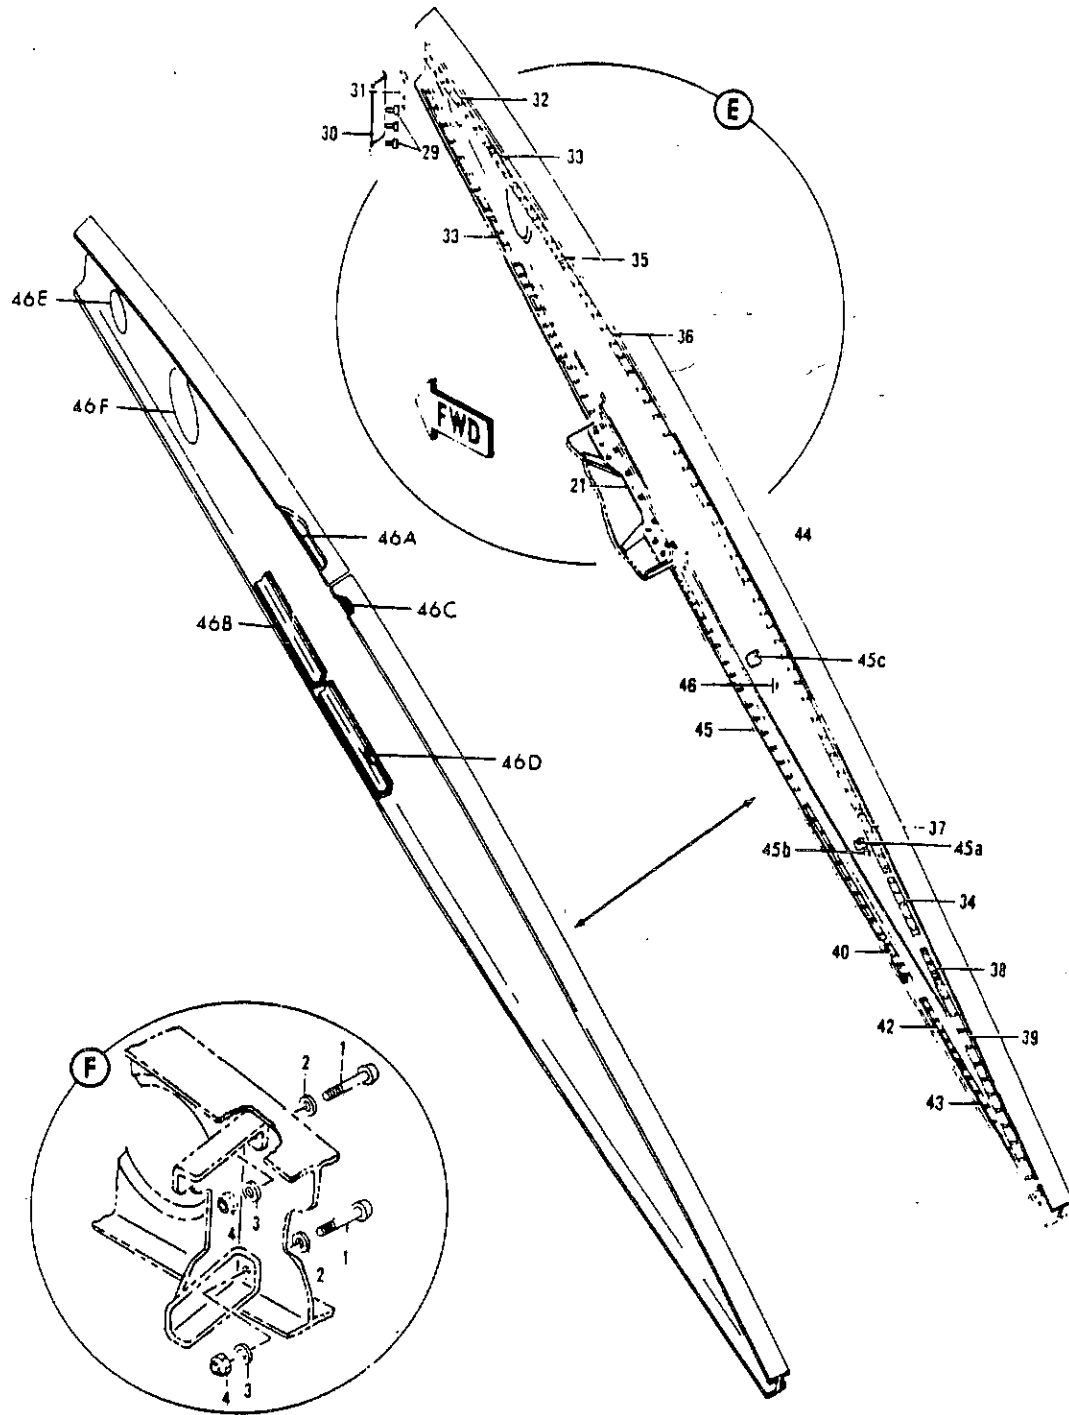


FIGURE 3. WING TIP INSTALLATION (SHEET 3)

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
3	65-18282-1	TIP INSTL, WING (LH) (SEE FIG. 1, ITEM 2)	0101 0499	RF
	65-18282-1	TIP INSTL, WING (LH) (REWORKED BY SB 3392) (SEE FIG. 1, ITEM 2)	0203	RF
	65-18282-2	TIP INSTL, WING (RH) (SEE FIG. 1, ITEM 2)	0101 0499	RF
	65-18282-2	TIP INSTL, WING (RH) (REWORKED BY SB 3392) (SEE FIG. 1, ITEM 2)	0203	RF
	5-89854-7	. ATTACHING PARTS INSTL, STATION 960.112 WING (WINGS. . ONLY)		1
1	MS20006-20	. . . BOLT.		2
2	MS20002C6	. . . WASHER.		2
3	MS20002-6	. . . WASHER.		2
4	BACN108-L6L	. . . NUT		2
5	MS20008-21	. . . BOLT.		1
6	MS20002C8	. . . WASHER.		1
7	MS20002-8	. . . WASHER.		1
8	BACN1088L	. . . NUT		1
9	MS20010-23	. . . BOLT.		1
10	MS20002C10	. . . WASHER.		1
11	MS20002-10	. . . WASHER.		1
12	BACN108408	. . . NUT		1
12F	BACB308G4K7A	. . . BOLT.		3
12G	MS20500-428	. . . NUT		3
		. . . FUEL, (SEE 28-7, FIG. 2).		
	65-18282-3	. TIP ASSY, WING (LH ONLY).	0101 0451	1
13	65-18282-3	. . . TIP ASSY, WING (LH ONLY) (REWORKED BY SB 3392).	0203	1
13	65-18282-27	. . . TIP ASSY, WING (LH ONLY).	5299	1
13	65-18282-4	. . . TIP ASSY, WING (RH ONLY).	0101 0451	1
13	65-18282-28	. . . TIP ASSY, WING (RH ONLY).	5299	1
13	65-18282-4	. . . TIP ASSY, WING (RH ONLY) (REWORKED BY SB 3392).	0203	1
13A	65-27309-1	. . . DOOR ASSY, ACCESS (RH ONLY) (ADDED BY SB 3392).	0203	1
		. . . ATTACHING PARTS		
	BACB30LU3-4	. . . BOLT.	0203	31

	69-15336-1	. . . PANEL INSTL, WING TIP UPPER FORWARD (LH ONLY)		1
	69-15336-2	. . . PANEL INSTL, WING TIP UPPER FORWARD (RH ONLY)		1
14	69-15336-3	 PANEL, WING TIP UPPER FORWARD (LH ONLY)		1
14	69-15336-4	 PANEL, WING TIP UPPER FORWARD (RH ONLY)		1
		. . . ATTACHING PARTS		
	MS2042605	. . . RIVET		14

	65-19408-1	. . . PANEL INSTL, UPPER FORWARD (LH ONLY).		1
	65-19408-2	. . . PANEL INSTL, UPPER FORWARD (RH ONLY).	0101 0499	1
	65-19408-2	. . . PANEL INSTL, UPPER FORWARD (RH ONLY) (DELETED BY. . SB 3392)	0203	1
	65-85452-10	. . . PANEL INSTL, UPPER FORWARD (RH ONLY) (ALTERED FROM 65-19408-2) (ADDED BY SB 3392)	0203	1
14A	BACB308F3K2	 BOLT.		12
15	65-19408-3	 PANEL ASSY, UPPER FORWARD (LH ONLY)		1
15	65-19408-4	 PANEL ASSY, UPPER FORWARD (RH ONLY)		1
16	65-19408-30	 PANEL, UPPER FORWARD.		1
	5-96735-1	 PANEL INSTL, WING TIP TRAILING EDGE UPPER (WINGS. . ONLY) (LH ONLY)		1
	5-96735-2	 PANEL INSTL, WING TIP TRAILING EDGE UPPER (WINGS. . ONLY) (RH ONLY)		1
17	5-96735-3	 PANEL ASSY, WING TIP TRAILING EDGE UPPER BONDED . . (LH ONLY)	0151	1
17	5-96735-3011	 PANEL ASSY, WING TIP TRAILING EDGE UPPER BONDED . . (LH ONLY)	5299	1
		 (OPTIONAL 5-96735-3)		
17	5-96735-3	 PANEL ASSY, WING TIP TRAILING EDGE UPPER BONDED . . (LH ONLY)	5299	1
		 (OPTIONAL TO 5-96735-3011)		
17	5-96735-4	 PANEL ASSY, WING TIP TRAILING EDGE UPPER BONDED . . (RH ONLY)	0151	1
17	5-96735-3012	 PANEL ASSY, WING TIP TRAILING EDGE UPPER BONDED . . (RH ONLY)	5299	1
		 (OPTIONAL 5-96735-4)		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 : 5 6 7		
R R R	3 17 5-96735-4	. . . PANEL ASSY, WING TIP TRAILING EDGE UPPER BONDED (RH ONLY) (OPTIONAL TO 5-96735-3012)	5299	1
R R R R R R R R R R	18 65-7460-3	. . . NAVIGATION, (SEE 34-5, FIG. 13)		
	18 65-7460-3	. . . NUTPLATE INSTL, TRANSMITTER MOUNT (LH ONLY) (SEE 11-3, FIG. 20)	0150	1
	18 65-7460-3	. . . NUTPLATE INSTL, TRANSMITTER MOUNT (LH ONLY) (VARIABLE DWG; 65-7460-5009) (SEE 11-3, FIG. 20)	5199	1
	18 65-7460-4	. . . NUTPLATE INSTL, TRANSMITTER MOUNT (RH ONLY) (SEE 11-3, FIG. 20)	0150	1
	18 65-7460-4	. . . NUTPLATE INSTL, TRANSMITTER MOUNT (RH ONLY) (VARIABLE DWG; 65-7460-5010) (SEE 11-3, FIG. 20)	5199	1
	19 90-3239-3005	. . . TRAILING EDGE ASSY, WING TIP (LH ONLY)	0151	1
	19 90-3239-3043	. . . TRAILING EDGE ASSY, WING TIP (LH ONLY) (OPTIONAL 90-3239-3005)	5299	1
	19 90-3239-3005	. . . TRAILING EDGE ASSY, WING TIP (LH ONLY) (OPTIONAL TO 90-3239-3043)	5299	1
	19 90-3239-3006	. . . TRAILING EDGE ASSY, WING TIP (RH ONLY)	0101 0451	1
	19 90-3239-3006	. . . TRAILING EDGE ASSY, WING TIP (RH ONLY) (REWORKED BY SB 3392)	0203	1
R R R	19 90-3239-3044	. . . TRAILING EDGE ASSY, WING TIP (RH ONLY) (OPTIONAL 90-3239-3006)	5299	1
	19 90-3239-3006	. . . TRAILING EDGE ASSY, WING TIP (RH ONLY) (OPTIONAL TO 90-3239-3044)	5299	1
	20 65-18287-1	. . . CAP ASSY, WING TIP (LH ONLY) (SEE FIG. 6) (REWORKED BY DWG NO. 65C18467-11)		1
	20 65-18287-2	. . . CAP ASSY, WING TIP (RH ONLY) (SEE FIG. 6)	0101 0499	1
	20 65-18287-2	. . . CAP ASSY, WING TIP (RH ONLY) (REWORKED BY SB 3392) (SEE FIG. 6)	0203	1
	21 65-20672-3	. . . ANGLE INSTL, WING TIP LANDING LIGHT SUPPORT ATTACHMENT (SEE 33-1, FIG. 15)		1
	22 5-96732-3023	. . . PANEL INSTL, WING TIP VENT SCOOP (LH ONLY) (SEE 28-7, FIG. 2)		1
	22 5-96732-3024	. . . PANEL INSTL, WING TIP VENT SCOOP (RH ONLY) (SEE 28-7, FIG. 2)		1
	5-96734-1	. . . PANEL INSTL, WING TIP TRAILING EDGE LOWER (LH ONLY)		1
	5-96734-2	. . . PANEL INSTL, WING TIP TRAILING EDGE LOWER (RH ONLY)		1
R R R R R R R R	23 5-96734-3	. . . PANEL ASSY, WING TIP TRAILING EDGE LOWER (LH ONLY)	0151	1
	23 5-96734-3005	. . . PANEL ASSY, (LH ONLY) (OPTIONAL 5-96734-3)	5299	1
	23 5-96734-3	. . . PANEL ASSY, (LH ONLY) (OPTIONAL TO 5-96734-3005)	5299	1
	23 5-96734-4	. . . PANEL ASSY, WING TIP TRAILING EDGE LOWER (RH ONLY)	0151	1
	23 5-96734-3006	. . . PANEL ASSY, (RH ONLY) (OPTIONAL 5-96734-4)	5299	1
	23 5-96734-4	. . . PANEL ASSY, (RH ONLY) (OPTIONAL TO 5-96734-3006)	5299	1
	65-20670-1	. . . RIB INSTL, WING TIP NOSE (LH ONLY)		1
	65-20670-2	. . . RIB INSTL, WING TIP NOSE (RH ONLY)		1
	69-14521-5	. . . RIB, WING TIP NAVIGATION LIGHT (LH ONLY)		1
	69-14521-6	. . . RIB, WING TIP NAVIGATION LIGHT (RH ONLY)		1
	CR2162-5-4	ATTACHING PARTS		
	CR2162-5-6	. . . RIVET, (V11815)		4
	BACB30BF3K3	. . . RIVET, (V11815)		1
	BACS40C11-32	. . . BOLT		6
		. . . SHIM		2
	65-20673-1	*****		
	65-20673-2	. . . DOOR INSTL, WING TIP LOWER (LH ONLY)		1
	65-20673-3	. . . DOOR INSTL, WING TIP LOWER (RH ONLY)		1
24A	65-20673-4	. . . PANEL, LOWER WING TIP DOOR (LH ONLY)		1
24A	65-20673-4	. . . PANEL, LOWER WING TIP DOOR (RH ONLY)		1
	NAS517-3-6	ATTACHING PARTS		
		. . . BOLT		16
	65-26646-24	*****		
24B	65-26646-24	. . . BULKHEAD INSTL, ARRESTOR SUPPORT (RH ONLY) (ADDED BY SB 3392) (SEE 23-1, FIG. 10)	0203	1
25	5-89854-3077	. . . PARTS INSTL, WING STATION 960.112 RIB TIP (LH ONLY) (SEE FIG. 5)		1
25	5-89854-3078	. . . PARTS INSTL, WING STATION 960.112 RIB TIP (RH ONLY) (SEE FIG. 5)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3	69-14925-1	RIB INSTL, WING TIP TRAILING EDGE (LH ONLY)		1
	69-14925-3	RIB INSTL, WING TIP TRAILING EDGE (LH ONLY)		3
	69-14925-2	RIB INSTL, WING TIP TRAILING EDGE (RH ONLY)		1
	69-14925-4	RIB INSTL, WING TIP TRAILING EDGE (RH ONLY)		3
26	69-14925-5	RIB, WING TIP TRAILING EDGE (LH ONLY)		1
26	69-14925-6	RIB, WING TIP TRAILING EDGE (RH ONLY)		1
	69-14936-1	RIB INSTL, WING STATION 990.90 WING TIP (LH ONLY)		1
	69-14936-2	RIB INSTL, WING STATION 990.90 WING TIP (RH ONLY)		1
27	69-14936-5	RIB, WING STATION 990.90 WING TIP (LH ONLY)		1
27	69-14936-6	RIB, WING STATION 990.90 WING TIP (RH ONLY)		1
	69-14936-3	RIB INSTL, WING STATION 998.82 WING TIP (LH ONLY)		1
	69-14936-4	RIB INSTL, WING STATION 998.82 WING TIP (RH ONLY)		1
28	69-14936-7	RIB, WING STATION 998.82 WING TIP (LH ONLY)		1
28	69-14936-8	RIB, WING STATION 998.82 WING TIP (RH ONLY)		1
	65-18285-1	RIB INSTL, WING BUTTOCK LINE 779.18 WING TIP (LH ONLY)		1
	65-18285-2	RIB INSTL, WING BUTTOCK LINE 779.18 WING TIP (RH ONLY)	0101 0499	1
28A	65-18285-2	RIB INSTL, WING BUTTOCK LINE 779.18 WING TIP (RH ONLY) (DELETED BY SB 3392)	0203	1
28A	65-85458-38	RIB INSTL, WING BUTTOCK LINE 779.18 WING TIP (RH ONLY) (ADDED BY SB 3392)	0203	1
29	BAC830BG3K2	BOLT		3
30	69-14951-3	ZEE, WING BUTTOCK LINE 779.18 WING TIP (LH ONLY)		1
30	69-14951-4	ZEE, WING BUTTOCK LINE 779.18 WING TIP (RH ONLY)		1
	MS20470B5	ATTACHING PARTS RIVET		5
31	65-18285-13	FILLER, WING BUTTOCK LINE 779.18 WING TIP		1
32	BACN10LJP3S10-7	CHANNEL		1
33	LHTG51-2860-02-9-3	CHANNEL, GANG NUT (V72962)		2
34	BACN10LJP3S8-5	CHANNEL		1
35	LHTG51-2860-02-8-3	CHANNEL, GANG NUT (V72962)		1
36	LHTG51-2860-02-10-37	CHANNEL, GANG NUT (V72962)		1
37	BACN10LJP3S9-5	CHANNEL		1
38	BACN10LJP3S7-3	CHANNEL		1
39	BACN10LJP3S10-14	CHANNEL		1
40	BACN10LJP3S8-4	CHANNEL		1
42	BACN10LJP3S8-7	CHANNEL		1
43	BACN10LJP3S10-11	CHANNEL		1
43	BACN10LJP3S10-3	CHANNEL		1
44	65-18285-5	CHORD, WING BUTTOCK LINE 779.18 WING TIP UPPER (LH ONLY)		1
44	65-18285-6	CHORD, WING BUTTOCK LINE 779.18 WING TIP UPPER (RH ONLY)	0101 0499	1
44	65-18285-6	CHORD, WING BUTTOCK LINE 779.18 WING TIP UPPER (RH ONLY) (REWORKED BY SB 3392)	0203	1
45	65-18285-7	CHORD, WING BUTTOCK LINE 779.18 WING TIP LOWER (LH ONLY)		1
45	65-18285-8	CHORD, WING BUTTOCK LINE 779.18 WING TIP LOWER (RH ONLY)	0101 0499	1
45	65-18285-8	CHORD, WING BUTTOCK LINE 779.18 WING TIP LOWER (RH ONLY) (REWORKED BY SB 3392)	0203	1
45C	MS27253F1	PLATE, IDENTIFICATION		1
46	65-18285-3	WEB, WING BUTTOCK LINE 779.18 WING TIP		1
46C	65-85458-4	CHORD, UPPER (RH ONLY) (ADDED BY SB 3392)	0203	1
46D	65-85458-6	CHORD, LOWER (RH ONLY) (ADDED BY SB 3392)	0203	1
46E	65-18285-40	PLATE, COVER (RH ONLY) (ADDED BY SB 3392)	0203	1
		ATTACHING PARTS		
	NAS623-3-3	SCREW	0203	6
	AN960PD10L	WASHER	0203	6
46F	65-18285-41	PLATE, COVER (RH ONLY) (ADDED BY SB 3392)	0203	1
		ATTACHING PARTS		
	NAS623-3-2	SCREW	0203	7
	AN960PD10L	WASHER	0203	7
47	5-95681-3001	SPAR INSTL, WING TIP AUXILIARY REAR (LH ONLY)		1
47	5-95681-3002	SPAR INSTL, WING TIP AUXILIARY REAR (RH ONLY)		1
47	NAS1368N14A	GROMMET	0150	1
47	NAS1368N8A	GROMMET	5199	1
48	5-96732-3	ATTACHING PARTS INSTL, WING TIP VENT SCOOP (LH ONLY) (SEE 28-7, FIG. 2)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

MISSING ITEM NUMBERS ARE NOT APPLICABLE

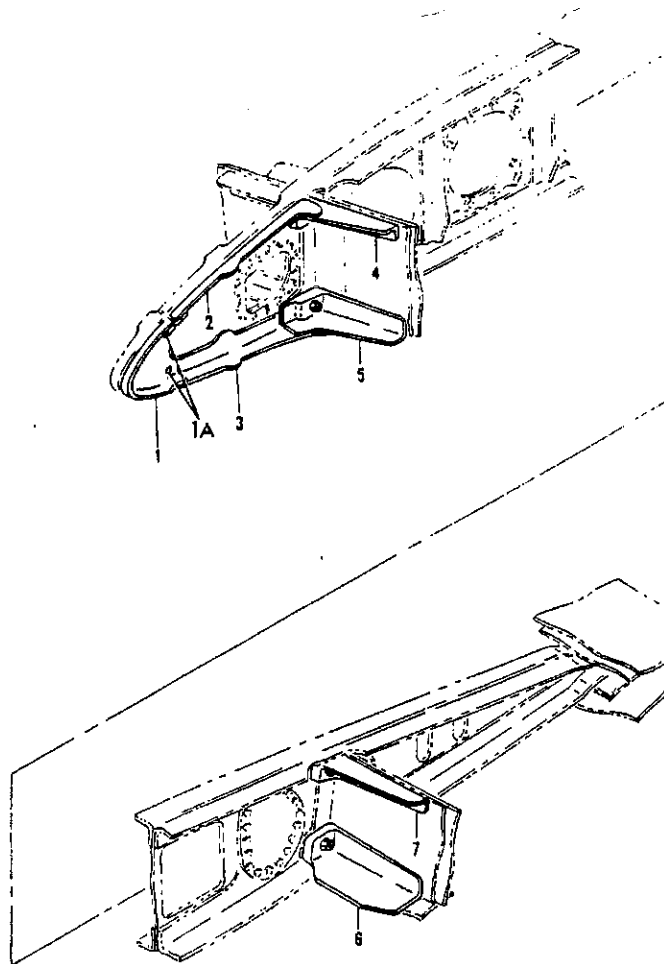
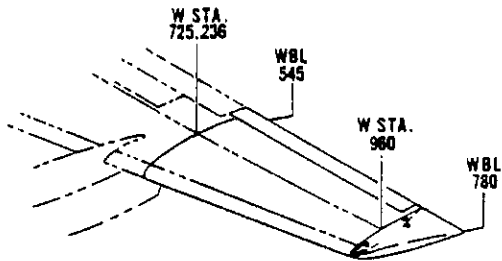


FIGURE 5. PARTS INSTL, WING STATION 960.112 RIB TIP

BOEING **707** *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5	5-89854-3077		PARTS INSTL, WING STATION 960.112 RIB TIP (LH) (SEE . . FIG. 3, ITEM 25 AND FIG. 4, ITEM 29)		RF
	5-89854-3078		PARTS INSTL, WING STATION 960.112 RIB TIP (RH) (SEE . . FIG. 3, ITEM 25 AND FIG. 4, ITEM 29)		RF
1A	CR2162-5-3		. RIVET, (V11815)		2
2	69-14924-1		. CHORD, WING STATION 960.112 WING TIP LEADING EDGE RIB UPPER (LH ONLY)		1
2	69-14924-2		. CHORD, WING STATION 960.112 WING TIP LEADING EDGE RIB UPPER (RH ONLY)		1
3	69-14924-3		. CHORD, WING STATION 960.112 WING TIP LEADING EDGE RIB LOWER (LH ONLY)		1
3	69-14924-4		. CHORD, WING STATION 960.112 WING TIP LEADING EDGE RIB LOWER (RH ONLY)		1
4	5-95899-1		. FITTING, FRONT SPAR WING STATION 960.112 UPPER. . . . OUTBOARD CORNER (LH ONLY)		1
4	5-95899-2		. FITTING, FRONT SPAR WING STATION 960.112 UPPER. . . . OUTBOARD CORNER (RH ONLY)		1
5	5-95862-1		. FITTING, FRONT SPAR WING STATION 960.012 LOWER. . . . OUTBOARD CORNER (LH ONLY)		1
5	5-95862-2		. FITTING, FRONT SPAR WING STATION 960.012 LOWER. . . . OUTBOARD CORNER (RH ONLY)		1
6	5-96146-1		. FITTING, WING STATION 960.012 AUXILIARY SPAR LOWER. . OUTBOARD CORNER (LH ONLY)		1
6	5-96146-2		. FITTING, WING STATION 960.012 AUXILIARY SPAR LOWER. . OUTBOARD CORNER (RH ONLY)		1
7	5-96147-1		. FITTING, WING STATION 960.012 AUXILIARY SPAR UPPER. . OUTBOARD CORNER (LH ONLY)		1
7	5-96147-2		. FITTING, WING STATION 960.112 AUXILIARY SPAR UPPER. . OUTBOARD CORNER (RH ONLY)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

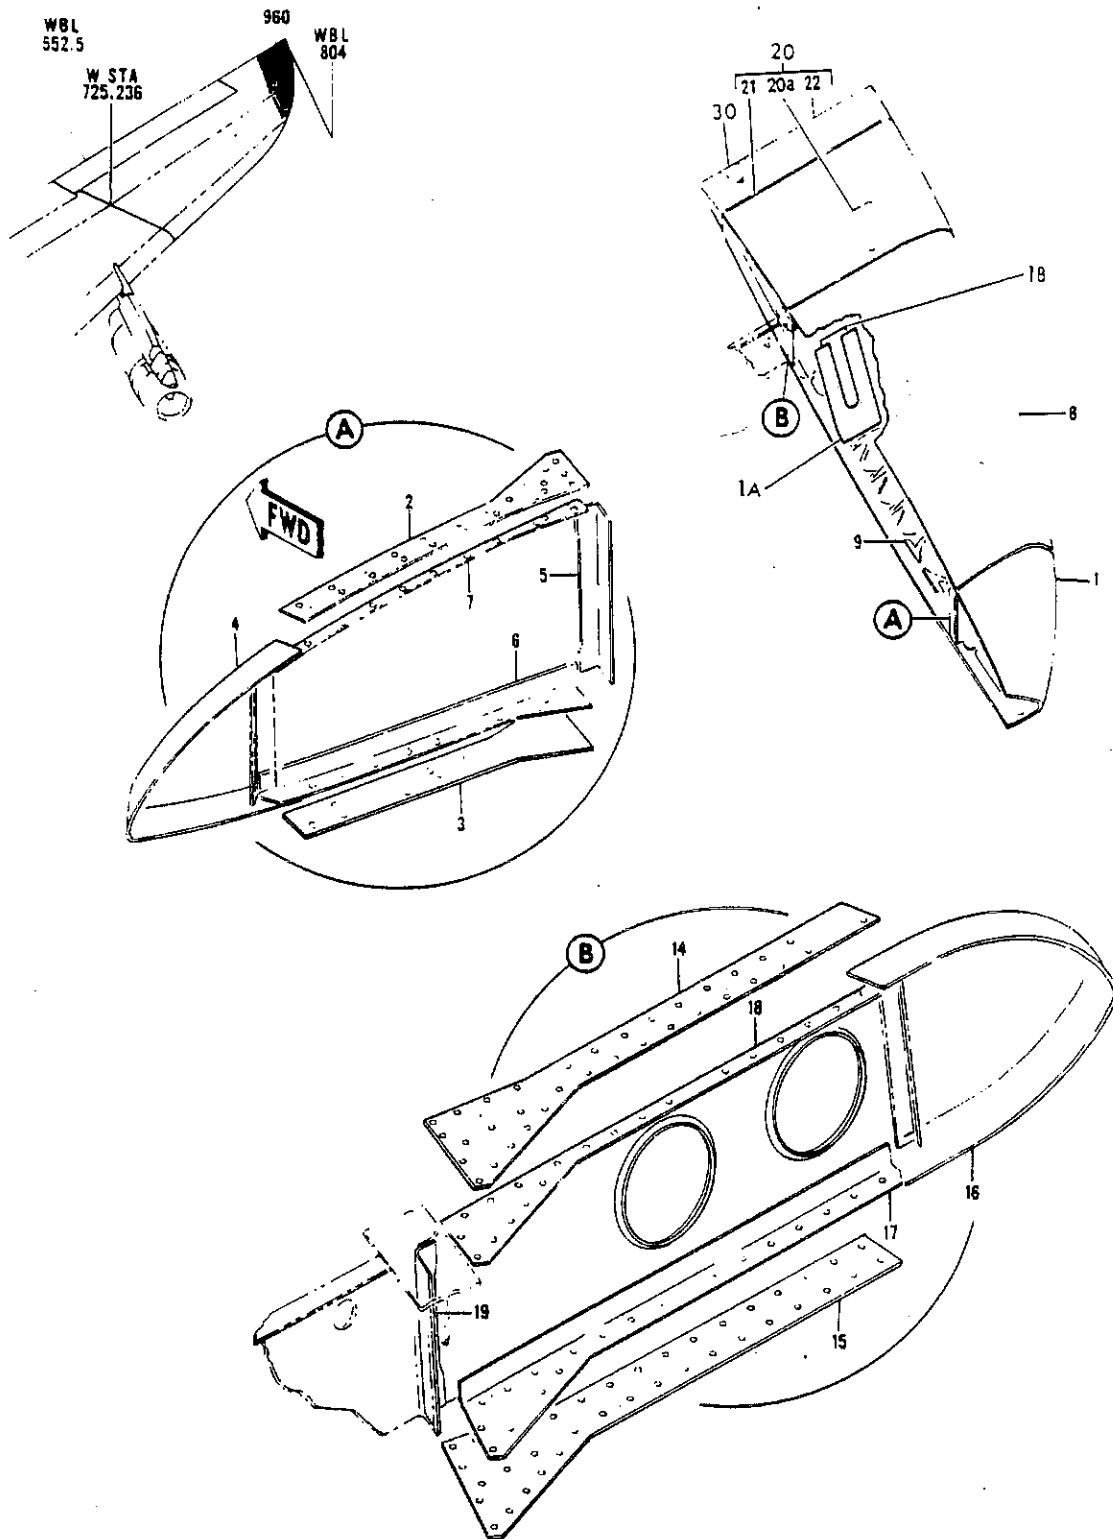


FIGURE 6. CAP ASSY, WING TIP



PARTS CATALOG


FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
6	65-18287-1	CAP ASSY, WING TIP (LH) (SEE FIG. 3, ITEM 20)	0101	RF
	65-18287-2	CAP ASSY, WING TIP (RH) (SEE FIG. 3, ITEM 20)	0499	RF
	65-18287-2	CAP ASSY, WING TIP (RH) (REWORKED BY SB 3392) (SEE FIG. 3, ITEM 20)	0203	RF
1	65-18287-3	. . CAP ASSY, WING TIP FORWARD (LH ONLY)		1
	65-19626-1	. . SKIN		1
1	65-18287-4	. . CAP ASSY, WING TIP FORWARD (RH ONLY)		1
	65-19626-2	. . SKIN		1
	65-18283-3	. . SPAR INSTL, WING TIP OUTBOARD FRONT (LH ONLY)		1
	65-18283-4	. . SPAR INSTL, WING TIP OUTBOARD FRONT (RH ONLY)		1
2	65-18283-21	. . STRAP, WING TIP OUTBOARD FRONT SPAR UPPER (LH ONLY)		1
2	65-18283-21	. . STRAP, WING TIP OUTBOARD FRONT SPAR UPPER (RH ONLY)		1
3	65-18283-20	. . STRAP, WING TIP OUTBOARD FRONT SPAR LOWER (LH ONLY)		1
3	65-18283-20	. . STRAP, WING TIP OUTBOARD FRONT SPAR LOWER (RH ONLY)		1
4	65-18283-15	. . STRAP, WING TIP OUTBOARD FRONT SPAR (LH ONLY)		1
4	65-18283-16	. . STRAP, WING TIP OUTBOARD FRONT SPAR (RH ONLY)		1
5	69-14922-1	. . ANGLE, WING TIP FRONT SPAR ATTACH (LH ONLY)		1
5	69-14922-2	. . ANGLE, WING TIP FRONT SPAR ATTACH (RH ONLY)		1
6	65-18283-13	. . CHORD, WING TIP OUTBOARD FRONT SPAR (LH ONLY)		1
6	65-18283-14	. . CHORD, WING TIP OUTBOARD FRONT SPAR (RH ONLY)		1
7	65-18283-11	. . WEB, WING TIP OUTBOARD FRONT SPAR (LH ONLY)		1
7	65-18283-12	. . WEB, WING TIP OUTBOARD FRONT SPAR (RH ONLY)		1
8	65-18287-5	. . CAP ASSY, WING TIP CENTER (LH ONLY)		1
8	65-18287-6	. . CAP ASSY, WING TIP CENTER (RH ONLY)		1
9	65-20672-1	. . PANEL INSTL, WING TIP LANDING LIGHT SUPPORT (LH ONLY) (SEE 33-1, FIG. 15)		1
9	65-20672-2	. . PANEL INSTL, WING TIP LANDING LIGHT SUPPORT (RH ONLY) (SEE 33-1, FIG. 15)		1
9	65-27106-1	. . SKIN, (RH ONLY) (ADDED BY SB 3392)	0203	1
	5-95681-3003	. . SPAR INSTL, WING TIP AUXILIARY OUTBOARD REAR (LH ONLY)		1
	5-95681-3004	. . SPAR INSTL, WING TIP AUXILIARY OUTBOARD REAR (RH ONLY)	0101	1
	5-95681-3004	. . SPAR INSTL, WING TIP AUXILIARY OUTBOARD REAR (RH ONLY) (DELETED BY SB 3392)	0499	1
14	5-95681-3022	. . STRAP, WING TIP AUXILIARY OUTBOARD REAR SPAR UPPER (LH ONLY)	0203	1
14	5-95681-3022	. . STRAP, WING TIP AUXILIARY OUTBOARD REAR SPAR UPPER (RH ONLY)		1
15	5-95681-3021	. . STRAP, WING TIP AUXILIARY OUTBOARD REAR SPAR LOWER (LH ONLY)		1
15	5-95681-3021	. . STRAP, WING TIP AUXILIARY OUTBOARD REAR SPAR LOWER (RH ONLY)		1
16	5-95681-3011	. . STRAP, WING TIP AUXILIARY OUTBOARD REAR SPAR (LH ONLY)		1
16	5-95681-3012	. . STRAP, WING TIP AUXILIARY OUTBOARD REAR SPAR (RH ONLY)		1
17	5-95681-3013	. . CHORD, WING TIP AUXILIARY OUTBOARD REAR SPAR LOWER (LH ONLY)		1
17	5-95681-3014	. . CHORD, WING TIP AUXILIARY OUTBOARD REAR SPAR LOWER (RH ONLY)		1
18	5-95681-3005	. . WEB, WING TIP AUXILIARY OUTBOARD REAR SPAR (LH ONLY)		1
18	5-95681-3006	. . WEB, WING TIP AUXILIARY OUTBOARD REAR SPAR (RH ONLY)		1
19	69-14920-1	. . ANGLE, WING TIP AUXILIARY SPAR ATTACH (LH ONLY)		1
19	69-14920-2	. . ANGLE, WING TIP AUXILIARY SPAR ATTACH (RH ONLY)		1
20	65-18287-7	. . CAP ASSY, WING TIP REAR (USED ON 65-18287-1)		1
20	65-18287-8	. . CAP ASSY, WING TIP REAR (RH ONLY)	0101	1
20	65-18287-8	. . CAP ASSY, WING TIP REAR (RH ONLY) (REWORKED BY SB 3392)	0499	1
20A	69-20974-1	. . DOOR, WING TIP FLUXGATE COMPASS ACCESS (ADDED BY SB 3392)	0203	1
21	65-19628-1	. . SKIN, WING TIP REAR CAP (LH ONLY)		1
21	65-19628-2	. . SKIN, WING TIP REAR CAP (RH ONLY)	0101	1
21	65-19628-2	. . SKIN, WING TIP REAR CAP (RH ONLY) (DELETED BY SB 3392)	0499	1
22	90-3239-3007	. . TRAILING EDGE ASSY, WING TIP (LH ONLY)	0203	1
22	90-3239-3008	. . TRAILING EDGE ASSY, WING TIP (RH ONLY)	0101	1
			0499	

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF	UNITS
				FROM TO	PER ASSY
6 22	90-3239-3008		. . TRAILING EDGE ASSY, WING TIP (RH ONLY) (DELETED BY SB 3392)	0203	1
22	65C18467-6		. FAIRING INSTL, (RH ONLY) (ALTERED FROM 65-26568-41 OR -56) (ADDED BY SB 3392) (SEE 23-1, FIG. 10)	0203	1
23	65-8611-8		. STRUCTURE INSTL, WING HF COMMUNICATION ANTENNA. . . . (RH ONLY) (ADDED BY SB 3392) (SEE 23-1, FIG. 10)	0203	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

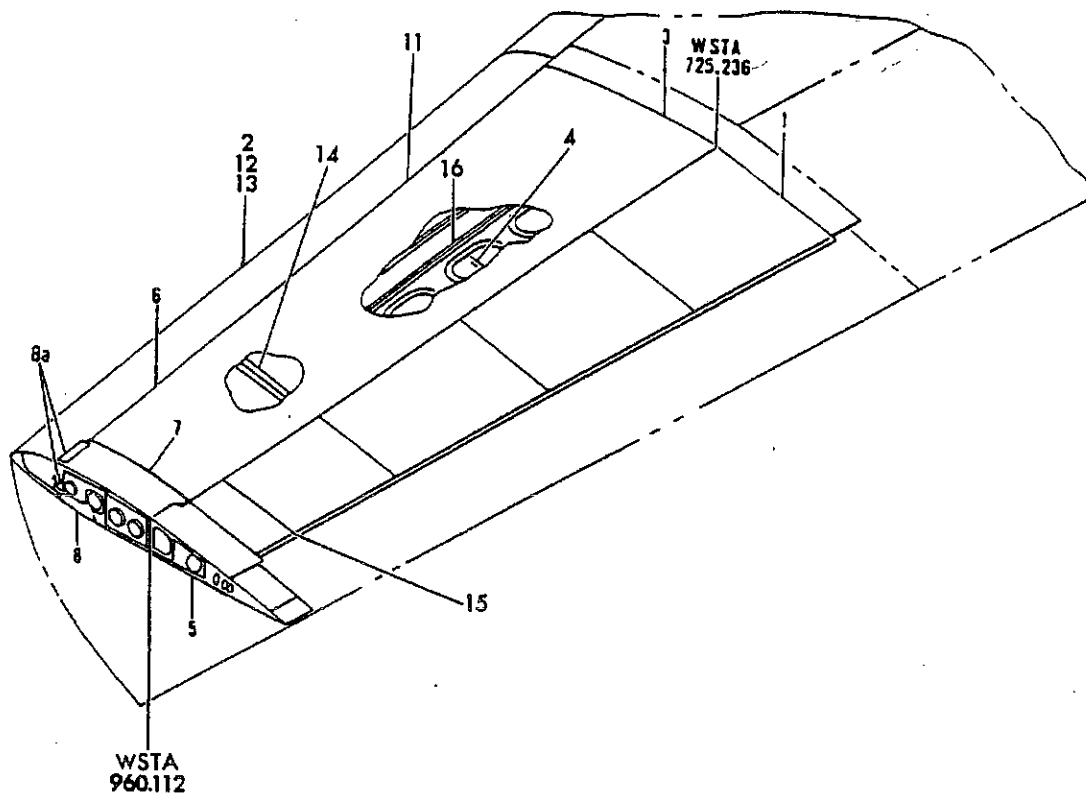

A 5702008 REV 265

FIGURE 8. STRUCTURE ASSY, SECTION 13, 15, AND 17 OUTBOARD WING



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8	50-5306-39		STRUCTURE ASSY, SECTIONS 13, 15 AND 17 OUTBOARD WING. . (LH) (SEE FIG. 1, ITEM 7)		RF
	50-5306-40		STRUCTURE ASSY, SECTIONS 13, 15 AND 17 OUTBOARD WING. . (RH) (SEE FIG. 1, ITEM 7)		RF
1	5-73117-3001		. STRUCTURE INSTL, SECTION 17 WING OUTBOARD (LH ONLY) . (SEE FIG. 9)		1
1	5-73117-3002		. STRUCTURE INSTL, SECTION 17 WING OUTBOARD (RH ONLY) . (SEE FIG. 9)		1
2	65-18460-1		. LEADING EDGE INSTL, SECTION 15 OUTBOARD WING (LH. . . ONLY) (SEE 57-4, FIG. 3)	0150	1
2	65-18460-1		. LEADING EDGE INSTL, SECTION 15 OUTBOARD WING. (VARIABLE DWG;65-18460-5001) (LH ONLY) (SEE 57-4, FIG. 3)	5199	1
2	65-18460-2		. LEADING EDGE INSTL, SECTION 15 OUTBOARD WING (RH. . . ONLY) (SEE 57-4, FIG. 3)	0150	1
2	65-18460-2		. LEADING EDGE INSTL, SECTION 15 OUTBOARD WING. (VARIABLE DWG;65-18460-5002) (RH ONLY) (SEE 57-4, FIG. 3)	5199	1
3	5-85602-3001		. PANEL INSTL, OUTBOARD WING UPPER (LH ONLY) (SEE 57-2, FIG. 12)		1
3	5-85602-3002		. PANEL INSTL, OUTBOARD WING UPPER (RH ONLY) (SEE 57-2, FIG. 12)		1
4	50-8211-11		. PANEL INSTL, OUTBOARD WING LOWER (LH ONLY) (SEE 57-2, FIG. 13)		1
4	50-8211-12		. PANEL INSTL, OUTBOARD WING LOWER (RH ONLY) (SEE 57-2, FIG. 13)		1
5	5-89854-3075		. RIB INSTL, WING STATION 960.112 (LH ONLY)	0150	1
5	5-89854-3075		. RIB INSTL, WING STATION 960.112 (VARIABLE DWG;5-89854-5001) (LH ONLY)	5199	1
5	5-89854-3076		. RIB INSTL, WING STATION 960.112 (RH ONLY)	0150	1
5	5-89854-3076		. RIB INSTL, WING STATION 960.112 (VARIABLE DWG;5-89854-5002) (RH ONLY)	5199	1
			. . FUEL, (SEE 28-7, FIG. 3)		
			. . WINGS, (SEE FIG. 10)		
6	65-18474-1		. SPAR INSTL, OUTBOARD WING FRONT (LH ONLY) (SEE 27-7, FIG. 20)	0150	1
6	65-18474-1		. SPAR INSTL, OUTBOARD WING FRONT (VARIABLE DWG;65-18474-5001) (LH ONLY) (SEE 27-7, FIG. 20)	5199	1
6	65-18474-2		. SPAR INSTL, OUTBOARD WING FRONT (RH ONLY) (SEE 27-7, FIG. 20)	0150	1
6	65-18474-2		. SPAR INSTL, OUTBOARD WING FRONT (VARIABLE DWG;65-18474-5002) (RH ONLY) (SEE 27-7, FIG. 20)	5199	1
	65-28778-1		. PANEL INSTL, OUTBOARD WING LIGHTNING SHIELD (LH ONLY)		1
	65-28778-2		. PANEL INSTL, OUTBOARD WING LIGHTNING SHIELD (RH ONLY)		1
7	65-28778-3		. . PANEL ASSY, OUTBOARD WING LIGHTNING SHIELD UPPER. . (LH ONLY)		1
7	65-28778-4		. . PANEL ASSY, OUTBOARD WING LIGHTNING SHIELD UPPER. . (RH ONLY)		1
8	65-28778-5		. . PANEL ASSY, OUTBOARD WING LIGHTNING SHIELD LOWER. . (LH ONLY)		1
8	65-28778-6		. . PANEL ASSY, OUTBOARD WING LIGHTNING SHIELD LOWER. . (RH ONLY)		1
R	361-89-40-74109-001		. OUTBOARD WING STRUCTURE MOD (L.H.) (VS2500) (ADDED. . BY RAF 7211.019-225)	0150	RF
R	361-89-40-74109-002		. OUTBOARD WING STRUCTURE MOD (R.H.) (VS2500) (ADDED. . BY RAF 7211.019-225)	0150	RF
R	361-57-20-74233-101		. . FRONT SPAR MOD (L.H.) (VS2500) (SEE FIG. 14).	0150	1
R	361-57-20-74233-102		. . FRONT SPAR MOD (R.H.) (VS2500) (SEE FIG. 14).	0150	1
R	361-57-20-74367-001		. . LEADING EDGE UPPER SKIN OPENING (L.H.) (VS2500) . . (SEE 57-4, FIG. 3)	0150	1
R	361-57-20-74367-002		. . LEADING EDGE UPPER SKIN OPENING (R.H.) (VS2500) . . (SEE 57-4, FIG. 3)	0150	1
R	361-57-20-74370-101		. . STRIKER INSTL, (L.H.) (VS2500) (SEE 57-4, FIG. 3) . .	0150	1
R	361-57-20-74370-102		. . STRIKER INSTL, (R.H.) (VS2500) (SEE 57-4, FIG. 3) . .	0150	1
R	361-57-20-74259-001		. . RIB REINFORCEMENT W.S. 922 L.H. WING (VS2500) . . . (SEE FIG. 2)	0150	1
R	361-57-20-74259-002		. . RIB REINFORCEMENT W.S. 922 R.H. WING (VS2500) . . . (SEE FIG. 2)	0150	1
R	361-57-20-74228-001		. . REAR SPAR MOD (L.H.) (VS2500) (SEE FIG. 15)	0150	1
R	361-57-20-74228-002		. . REAR SPAR MOD (R.H.) (VS2500) (SEE FIG. 15)	0150	1
R	361-57-20-74110-001		. . WING LOWER REINFORCEMENT (L.H.) (VS2500). (SEE FIG. 16)	0150	1
R	361-57-20-74110-002		. . WING LOWER REINFORCEMENT (R.H.) (VS2500). (SEE FIG. 16)	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

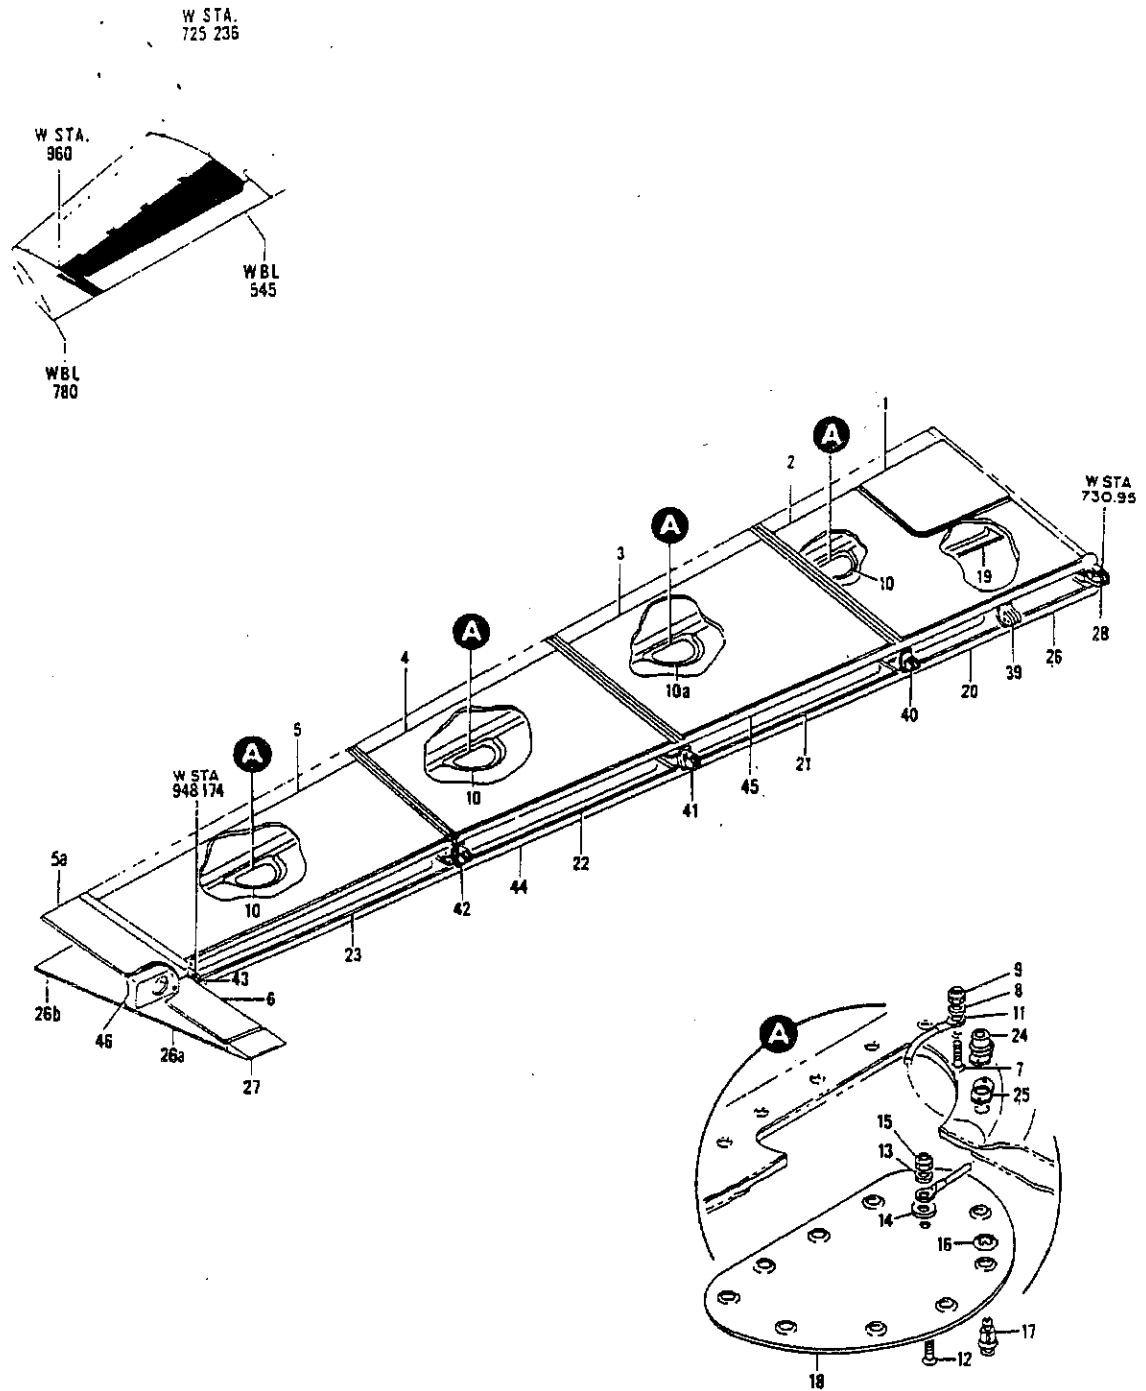


FIGURE 9. STRUCTURE INSTL. SECTION 17 OUTBOARD WING

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE					EFF FROM TO	UNITS PER ASSY		
			1	2	3	4	5	6	7		
R R											

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
9	5-89349-3002	. PANEL INSTL, WING STATION 779.96 TO 835.10 TRAILING EDGE LOWER (RH ONLY)		1
	5-89350-3001	. PANEL INSTL, WING STATION 835.10 TO 890.21 TRAILING EDGE LOWER (LH ONLY)		1
	5-89350-3002	. PANEL INSTL, WING STATION 835.10 TO 890.21 TRAILING EDGE LOWER (RH ONLY)		1
	5-89351-1	. PANEL INSTL, WING STATION 890.21 TO 948.774 TRAILING EDGE LOWER (LH ONLY)		1
	5-89351-2	. PANEL INSTL, WING STATION 890.21 TO 948.774 TRAILING EDGE LOWER (RH ONLY)		1
7	NAS517-3-5	. . SCREW, (USED ON 5-89348-3001, -3002, 5-89350-3001, -3002, 5-89351-1 AND -2)		1
7	NAS517-3-6	. . SCREW, (USED ON 5-89349-3001 AND -3002)		1
8	AN960D10	. . WASHER.		1
9	NAS679A3W	. . NUT		1
10	9-65116-2	. . DOOR ASSY, OUTBOARD WING LOWER SURFACE PANEL ACCESS (USED ON 5-89348-3001, -3002, 5-89350-3001, -3002, 5-89351-1 AND -2)		1
10A	9-65116-2	. . DOOR ASSY, OUTBOARD WING LOWER SURFACE PANEL ACCESS (USED ON 5-89349-3001 AND -3002)		1
11	MS25083-18B5	. . . JUMPER ASSY ATTACHING PARTS		1
12	NAS517-3-3	. . . SCREW		1
13	AN960D10	. . . WASHER.		1
14	9-65116-1650	. . . WASHER, OUTBOARD WING LOWER SURFACE PANEL ACCESS DOOR		1
15	NAS679A3W	. . . NUT *-----*		1
16	BACR12AB1B	. . . RING.		10
17	BACS21AE8A6	. . . STUD ASSY, (SAME AS 4S14-8-6 (V82831)).		10
17	4S14-8-6	. . . STUD ASSY, (V82831) (SAME AS BACS21AE8A6)		10
18	9-65116-3	. . . DOOR, OUTBOARD WING LOWER SURFACE PANEL ACCESS. .		1
19	5-89348-3037	. . PANEL ASSY, WING STATION 731.35 TO 779.96 TRAILING EDGE LOWER (USED ON 5-89348-3001)	0151	1
19	5-89348-3037	. . PANEL ASSY, WING STATION 731.35 TO 779.96 TRAILING EDGE LOWER (USED ON 5-89348-3001) (OPTIONAL AND FOR REPLACEMENT ORDER 5-89348-6065)	5299	1
19	5-89348-3065	. . PANEL ASSY, WING STATION 731.35 TO 779.96 TRAILING EDGE LOWER (USED ON 5-89348-3001) (OPTIONAL TO AND REPLACEMENT FOR 5-89348-3037)	5299	1
19	5-89348-3038	. . PANEL ASSY, WING STATION 731.35 TO 779.96 TRAILING EDGE LOWER (USED ON 5-89348-3002)	0151	1
19	5-89348-3038	. . PANEL ASSY, WING STATION 731.35 TO 779.96 TRAILING EDGE LOWER (USED ON 5-89348-3002) (OPTIONAL AND FOR REPLACEMENT ORDER 5-89342-3066)	5299	1
19	5-89348-3066	. . PANEL ASSY, WING STATION 731.35 TO 779.96 TRAILING EDGE LOWER (USED ON 5-89348-3002) (OPTIONAL TO AND REPLACEMENT FOR 5-89348-3038) ATTACHING PARTS	5299	1
	NAS517-4-7	. . SCREW		1
	NAS517-4-4	. . SCREW *-----*		26
20	5-89348-3041	. . PANEL ASSY, WING STATION 731.35 TO 779.96 TRAILING EDGE LOWER (USED ON 5-89348-3001)	0151	1
20	5-89348-3041	. . PANEL ASSY, WING STATION 731.35 TO 779.96 TRAILING EDGE LOWER (USED ON 5-89348-3001) (OPTIONAL AND FOR REPLACEMENT ORDER 5-89348-3069)	5299	1
20	5-89348-3069	. . PANEL ASSY, WING STATION 731.35 TO 779.96 TRAILING EDGE LOWER (USED ON 5-89348-3001) (OPTIONAL TO AND REPLACEMENT FOR 5-89348-3041)	5299	1
20	5-89348-3042	. . PANEL ASSY, WING STATION 731.35 TO 779.96 TRAILING EDGE LOWER (USED ON 5-89348-3002)	0151	1
20	5-89348-3042	. . PANEL ASSY, WING STATION 731.35 TO 779.96 TRAILING EDGE LOWER (USED ON 5-89348-3002) (OPTIONAL AND FOR REPLACEMENT ORDER 5-89348-3070)	5299	1
20	5-89348-3070	. . PANEL ASSY, WING STATION 731.35 TO 779.96 TRAILING EDGE LOWER (USED ON 5-89348-3002) (OPTIONAL TO AND REPLACEMENT FOR 5-89348-3042)	5299	1
21	5-89349-3011	. . PANEL ASSY, WING STATION 779.96 TO 835.10 TRAILING EDGE LOWER (USED ON 5-89349-3001)	0151	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE										EFF FROM TO	UNITS PER ASSY
1	2	3	4	5	6	7								
9	21	5-89349-3011	. . PANEL ASSY, WING STATION 779.96 TO 835.10 TRAILING EDGE LOWER (USED ON 5-89349-3001) (OPTIONAL AND FOR REPLACEMENT ORDER 5-89349-3015)										5299	1
	21	5-89349-3015	. . PANEL ASSY, WING STATION 779.96 TO 835.10 TRAILING EDGE LOWER (USED ON 5-89349-3001) (OPTIONAL TO AND REPLACEMENT FOR 5-89348-3011)										5299	1
	21	5-89349-3012	. . PANEL ASSY, WING STATION 779.96 TO 835.10 TRAILING EDGE LOWER (USED ON 5-89349-3002)										0151	1
	21	5-89349-3012	. . PANEL ASSY, WING STATION 779.96 TO 835.10 TRAILING EDGE LOWER (USED ON 5-89349-3002) (OPTIONAL AND FOR REPLACEMENT ORDER 5-89349-3016)										5299	1
	21	5-89349-3016	. . PANEL ASSY, WING STATION 779.96 TO 835.10 TRAILING EDGE LOWER (USED ON 5-89349-3002) (OPTIONAL TO AND REPLACEMENT FOR 5-89349-3012)										5299	1
	22	5-89350-3009	. . PANEL ASSY, WING STATION 835.10 TO 890.21 TRAILING EDGE LOWER (USED ON 5-89350-3001) (OPTIONAL AND FOR REPLACEMENT ORDER 5-89350-3019)										5299	1
	22	5-89350-3019	. . PANEL ASSY, WING STATION 835.10 TO 890.21 TRAILING EDGE LOWER (USED ON 5-89350-3001) (OPTIONAL TO AND REPLACEMENT FOR 5-89350-3009)										5299	1
	22	5-89350-3009	. . PANEL ASSY, WING STATION 835.10 TO 890.21 TRAILING EDGE LOWER (USED ON 5-89350-3001)										0151	1
	22	5-89350-3010	. . PANEL ASSY, WING STATION 835.10 TO 890.21 TRAILING EDGE LOWER (USED ON 5-89350-3002) (OPTIONAL AND FOR REPLACEMENT ORDER 5-89350-3020)										5299	1
	22	5-89350-3020	. . PANEL ASSY, WING STATION 835.10 TO 890.21 TRAILING EDGE LOWER (USED ON 5-89350-3002) (OPTIONAL TO AND REPLACEMENT FOR 5-89350-3010)										5299	1
	22	5-89350-3010	. . PANEL ASSY, WING STATION 835.10 TO 890.21 TRAILING EDGE LOWER (USED ON 5-89350-3002)										0151	1
	23	5-89351-33	. . PANEL ASSY, WING STATION 890.21 TO 948.774 TRAILING EDGE LOWER (USED ON 5-89351-1)										0151	1
	23	5-89351-33	. . PANEL ASSY, WING STATION 890.21 TO 948.774 TRAILING EDGE LOWER (USED ON 5-89351-1) (OPTIONAL AND FOR REPLACEMENT ORDER 5-89351-47)										5299	1
	23	5-89351-47	. . PANEL ASSY, WING STATION 890.21 TO 948.774 TRAILING EDGE LOWER (USED ON 5-89351-1) (OPTIONAL TO AND REPLACEMENT FOR 5-89351-33)										5299	1
	23	5-89351-34	. . PANEL ASSY, WING STATION 890.21 TO 948.774 TRAILING EDGE LOWER (USED ON 5-89351-2)										0151	1
	23	5-89351-34	. . PANEL ASSY, WING STATION 890.21 TO 948.774 TRAILING EDGE LOWER (USED ON 5-89351-2) (OPTIONAL AND FOR REPLACEMENT ORDER 5-89351-48)										5299	1
	23	5-89351-48	. . PANEL ASSY, WING STATION 890.21 TO 948.774 TRAILING EDGE LOWER (USED ON 5-89351-2) (OPTIONAL TO AND REPLACEMENT FOR 5-89351-34)										5299	1
		NAS517-4-6	ATTACHING PARTS											
		NAS517-4-6	. . SCREW, (USED ON 5-89349-3001 AND -3002)											47
			. . SCREW, (USED ON 5-89350-3001, -3002, 5-89351-1 AND -2)											44
			-----*											
	24	BACR11AE2	. . . RECEPTACLE, (NOT USED ON 5-89348-3025 AND -3026)											10
	25	BACS18Y1A14-10	. . . SPACER, (USED ON 5-89348-3023, -3041, -3069, . . . -3024, -3042, -3070, 5-89350-3005, -3009, -3019, -3006, -3010, -3020, 5-89351-27, -33, -47, -28, -34, -48)											10
	25	BACS18Y1A14-10	. . . SPACER, (USED 5-89349-3003, -3004, -3011, -3012, -3015, -3016)											10
	26	5-89348-3039	. . PANEL ASSY, WING STATION 731.35 TO 779.96 TRAILING EDGE LOWER (USED ON 5-89348-3001)										0151	1
	26	5-89348-3039	. . PANEL ASSY, WING STATION 731.35 TO 779.96 TRAILING EDGE LOWER (USED ON 5-89348-3001) (OPTIONAL AND FOR REPLACEMENT ORDER 5-89348-3067)										5299	1
	26	5-89348-3067	. . PANEL ASSY, WING STATION 731.35 TO 779.96 TRAILING EDGE LOWER (USED ON 5-89348-3001) (OPTIONAL TO AND REPLACEMENT FOR 5-89348-3039)										5299	1
	26	5-89348-3040	. . PANEL ASSY, WING STATION 731.35 TO 779.96 TRAILING EDGE LOWER (USED ON 5-89348-3002)										0151	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE														

MISSING ITEM NUMBERS ARE NOT APPLICABLE


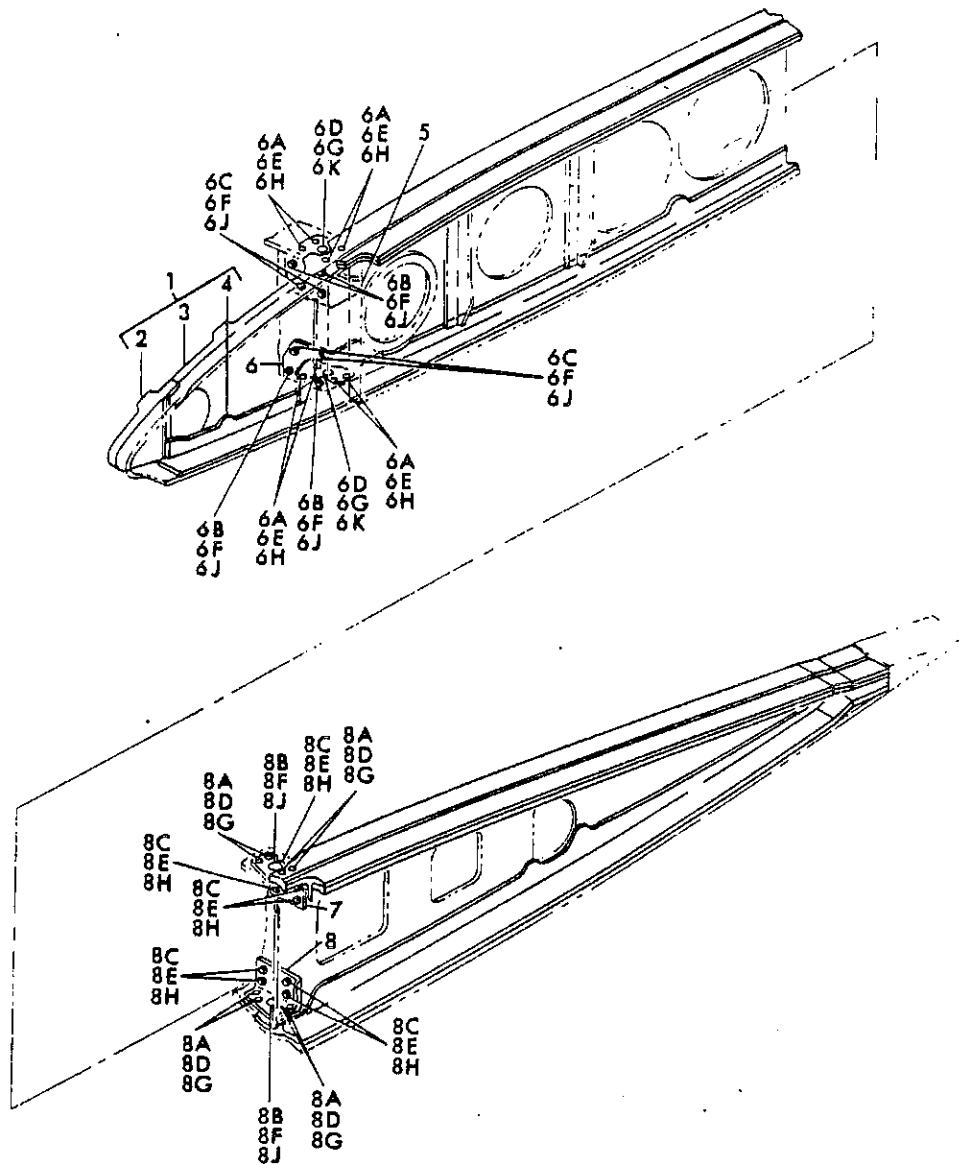


FIGURE 10. RIB INSTL. WING STATION 960.112 (WINGS ONLY)

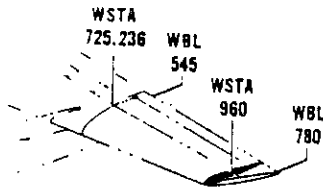

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R R R R R R R R R R R R R R	10	5-89854-3075	RIB INSTL, WING STATION 960.112 (LH) (WINGS ONLY) (SEE FIG. 8, ITEM 5)	0150	RF
		5-89854-3075	RIB INSTL, WING STATION 960.112 (VARIABLE DWG;5-89854-5001) (LH) (WING ONLY) (SEE FIG. 8, ITEM 5)	5199	RF
		5-89854-3076	RIB INSTL, WING STATION 960.112 (RH) (WINGS ONLY) (SEE FIG. 8, ITEM 5)	0150	RF
		5-89854-3076	RIB INSTL, WING STATION 960.112 (VARIABLE DWG;5-89854-5002) (RH) (WING ONLY) (SEE FIG. 8, ITEM 5)	5199	RF
	1	5-89854-3079	. RIB ASSY, WING STATION 960.112 (LH ONLY).		1
	1	5-89854-3080	. RIB ASSY, WING STATION 960.112 (RH ONLY).		1
	3	5-89854-3081	. . CHORD, LOWER (LH ONLY).	0150	1
	3	5-89854-3103	. . CHORD, LOWER (LH ONLY).	5199	1
	3	5-89854-3082	. . CHORD, LOWER (RH ONLY).	0150	1
	3	5-89854-3104	. . CHORD, LOWER (RH ONLY).	5199	1
	4	5-89854-3083	. . CHORD, UPPER (LH ONLY).	0150	1
	4	5-89854-3105	. . CHORD, UPPER (LH ONLY).	5199	1
	4	5-89854-3084	. . CHORD, UPPER (RH ONLY).	0150	1
	4	5-89854-3106	. . CHORD, UPPER (RH ONLY).	5199	1
	5	6-84384-1651	. CUP, WING STATION 960.112 FRONT SPAR UPPER SEAL (LH ONLY)		1
	5	6-84384-1652	. CUP, WING STATION 960.112 FRONT SPAR UPPER SEAL (RH ONLY)		1
	6	6-84385-1	. CUP, WING STATION 960.112 FRONT SPAR LOWER SEAL (LH ONLY)		1
	6	6-84385-2	. CUP, WING STATION 960.112 FRONT SPAR LOWER SEAL (RH ONLY)		1
	6B	AN4-10A	ATTACHING PARTS . BOLT, (USED ON 6-84384-1651 AND -1652).		4
	6C	AN4-6A	. BOLT, (USED ON 6-84385-1 AND -2).		4
	7	6-84386-1	. CUP, WING STATION 960.112 REAR SPAR UPPER SEAL (LH ONLY)		1
	7	6-84386-2	. CUP, WING STATION 960.112 REAR SPAR UPPER SEAL (RH ONLY)		1
	8	6-84387-1	. CUP, WING STATION 960.112 REAR SPAR LOWER SEAL (LH ONLY)		1
	8	6-84387-2	. CUP, WING STATION 960.112 REAR SPAR LOWER SEAL (RH ONLY)		1
	8A	NAS517-3-5	ATTACHING PARTS . SCREW		8
	8C	AN4-6A	. BOLT		8
	8G	NAS679A3W	. NUT		8
	8H	NAS679A4W	. NUT		8
			-----*		
			. FOR REFERENCE TO OTHER RIB DETAILS, SEE NHA		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

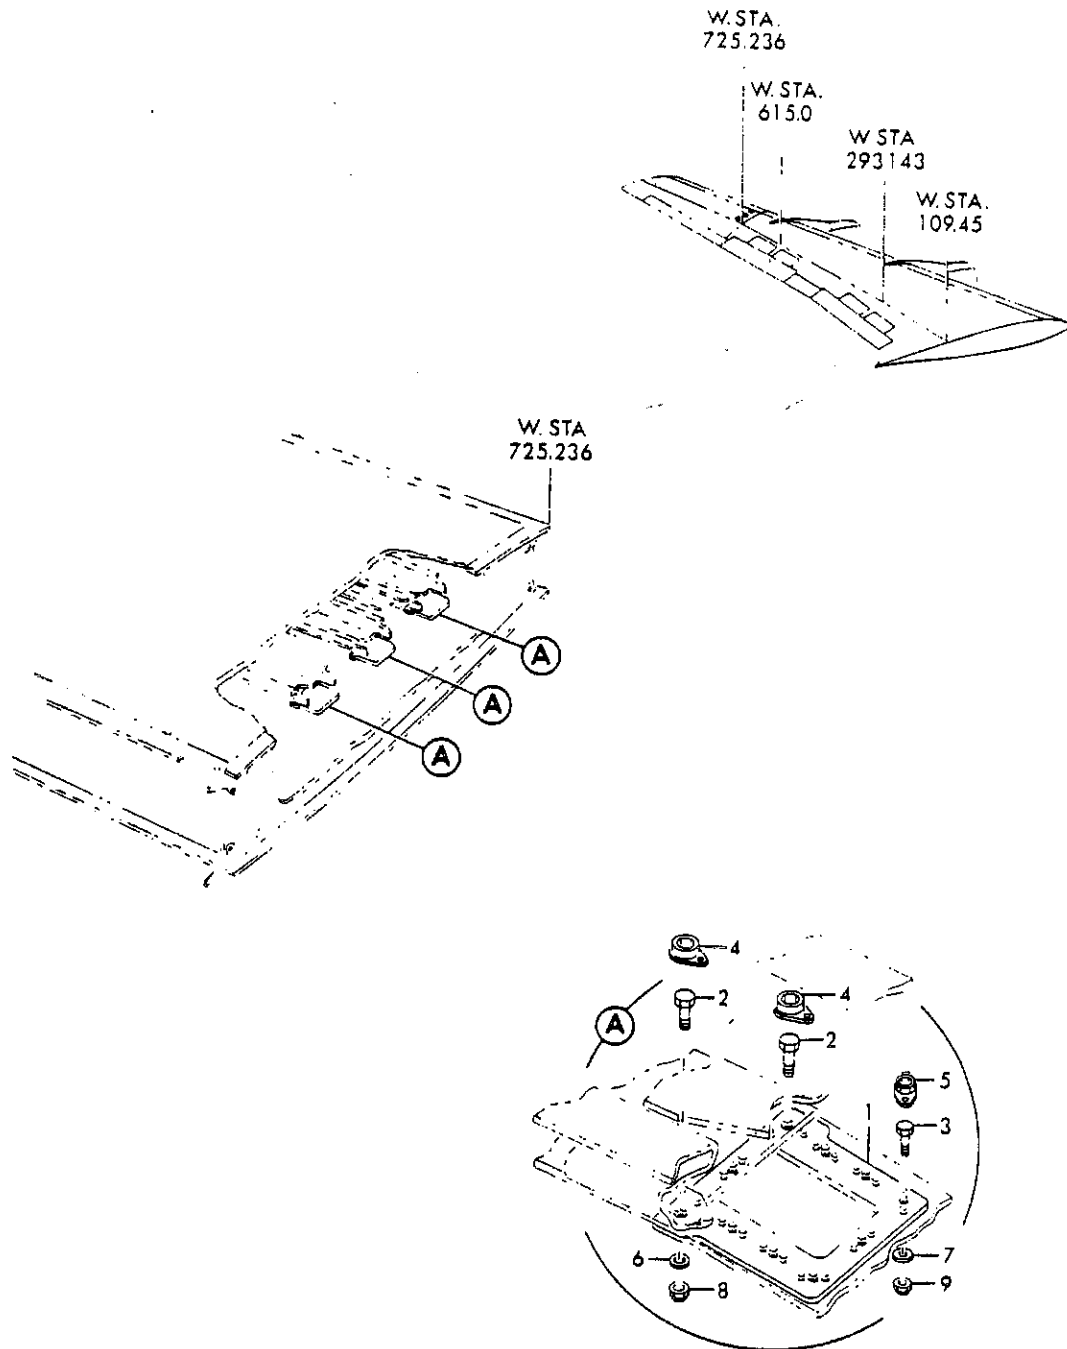


FIGURE 11. FITTING INSTL. UPPER OUTBOARD PRODUCTION BREAK RIB



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R R R	11	40-1614-3	FITTING INSTL, UPPER OUTBOARD PRODUCTION BREAK RIB (LH) (SEE 57-2, FIG. 12, ITEM 15)							0150	RF
		40-1614-3	FITTING INSTL, UPPER OUTBOARD PRODUCTION BREAK RIB. . . (VARIABLE DWG;40-1614-5005) (LH) (SEE FIG. 12, ITEM 15)							5199	RF
		40-1614-4	FITTING INSTL, UPPER OUTBOARD PRODUCTION BREAK RIB (RH) (SEE 57-2, FIG. 12, ITEM 15)							0150	RF
		40-1614-4	FITTING INSTL, UPPER OUTBOARD PRODUCTION BREAK RIB. . . (VARIABLE DWG;40-1614-5006) (RH) (SEE FIG. 12, ITEM 15)							5199	RF
	1	40-1614-48	. PLATE, PRODUCTION BREAK COVER ATTACHING PARTS								3
	2	NAS464P4A7	. BOLT.								6
	3	NAS464P3A5	. BOLT.								24
	4	6810-048	. RETAINER, BOLT (V80539)								6
	5	BACR10G31	. RETAINER.								24
	6	AN960PD416	. WASHER.								6
	7	AN960PD10	. WASHER.								24
	8	NAS679A4W	. NUT								6
	9	NAS679A3W	. NUT								24
-----*											
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

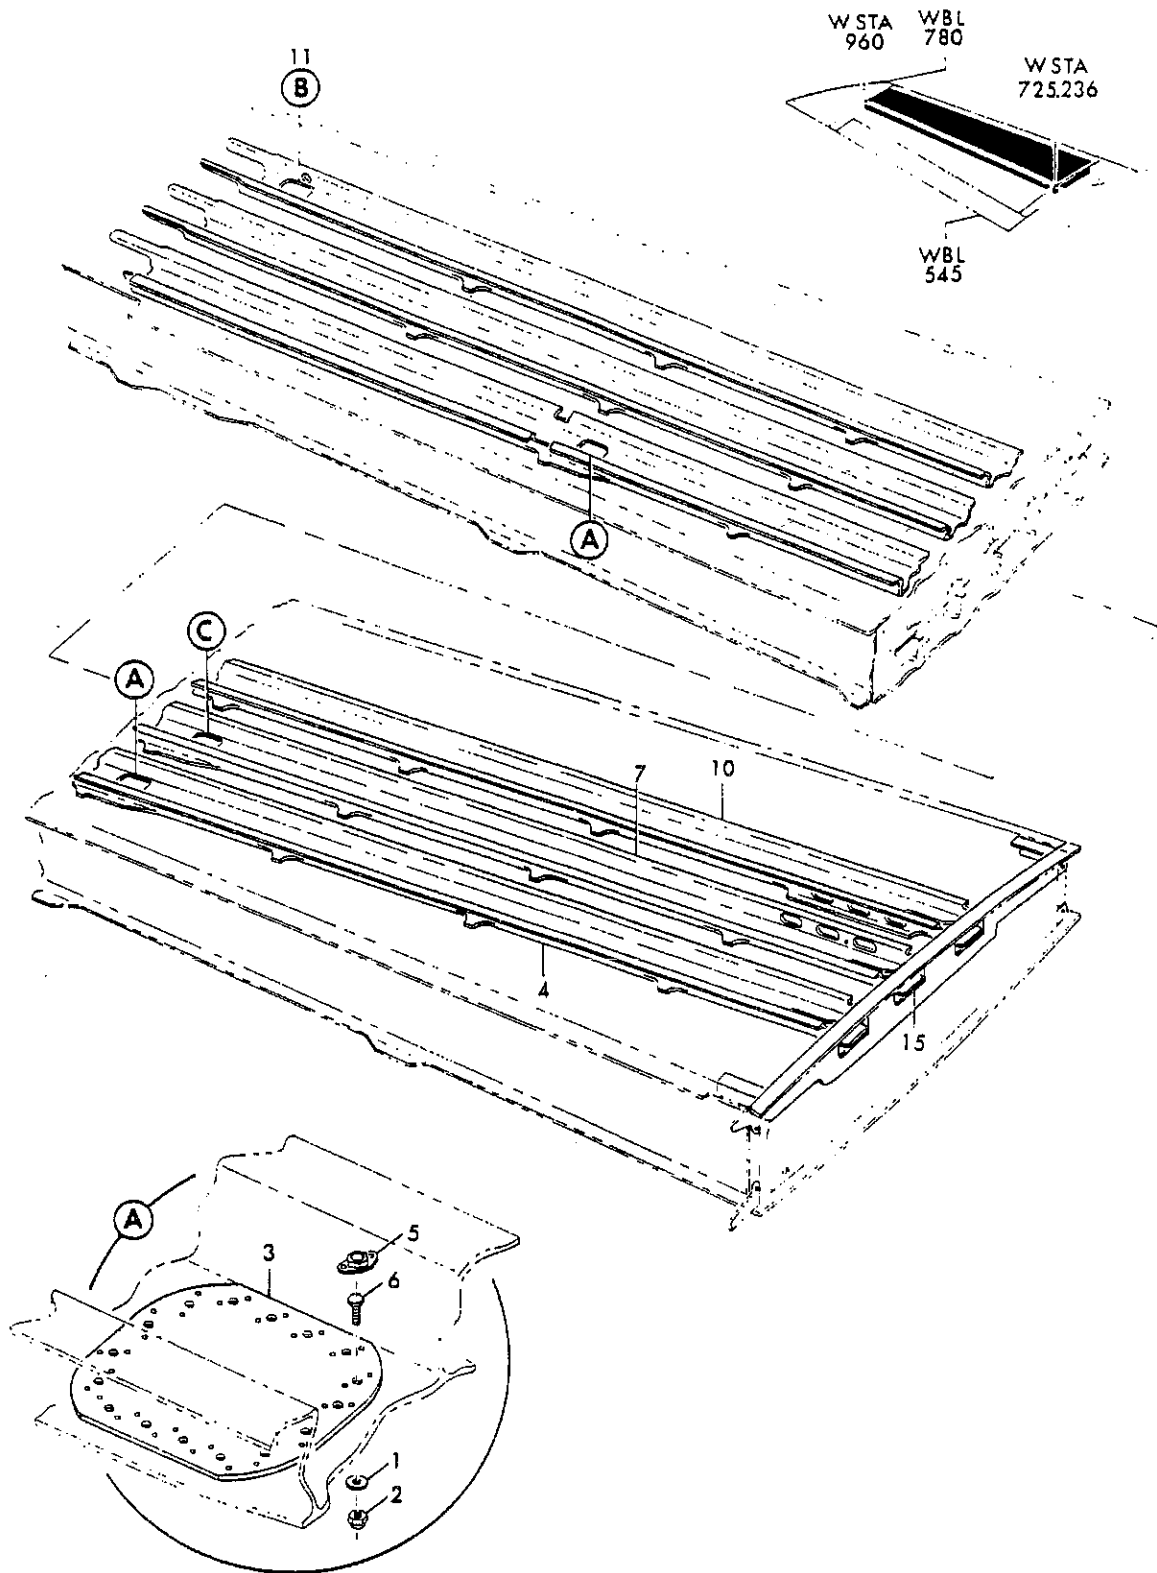


FIGURE 12. PANEL INSTL. OUTBOARD WING UPPER (SHEET 1)


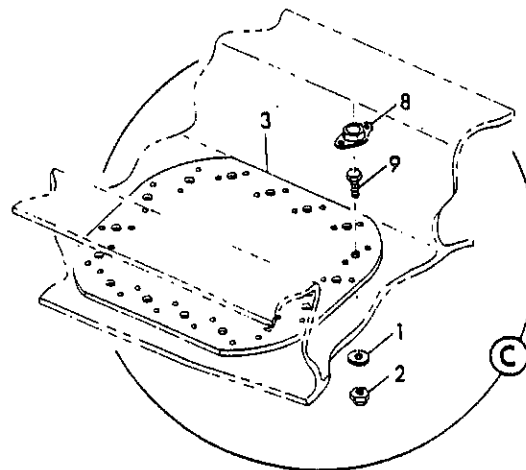


FIGURE 12. PANEL INSTL, OUTBOARD WING UPPER (SHEET 2)

NOV 21/90

57-02-12

DETAILED PARTS LIST
57-02-12
PAGE 1

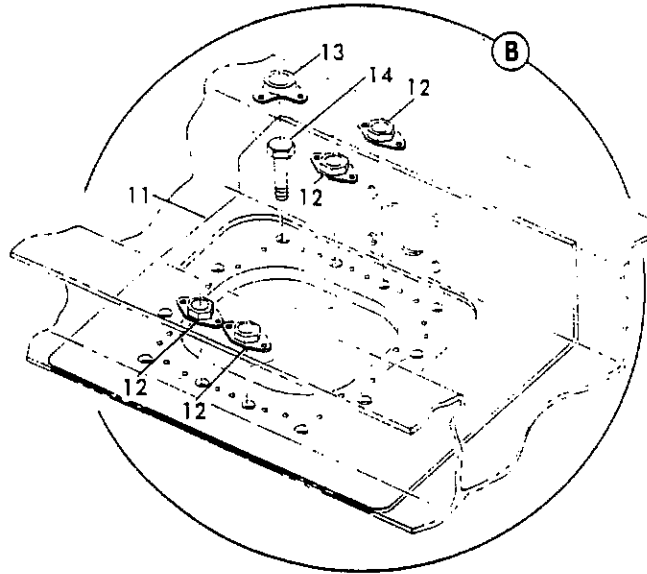

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
12	5-85602-3001		PANEL INSTL, OUTBOARD WING UPPER (LH) (SEE 57-2, FIG. 8, ITEM 3)		RF
	5-85602-3002		PANEL INSTL, OUTBOARD WING UPPER (RH) (SEE 57-2, FIG. 8, ITEM 3)		RF
1	AN960PD10L		. WASHER.		48
2	NAS679A3W		. NUT		48
3	6-83260		. DOOR, FUEL TANK VENT ACCESS		3
4	5-85602-3003		. VENT ASSY, PANEL (LH ONLY).		1
4	5-85602-3004		. VENT ASSY, PANEL (RH ONLY).		1
5	BACR10G131		. . RETAINER.		32
6	AN3-4A		. . BOLT.		32
7	5-85602-3005		. VENT ASSY, PANEL (LH ONLY).		1
7	5-85602-3006		. VENT ASSY, PANEL (RH ONLY).		1
8	BACR10G131		. . RETAINER.		16
9	AN3-4A		. . BOLT.		16
10	5-85602-3007		. VENT ASSY, PANEL (LH ONLY).		1
10	5-85602-3008		. VENT ASSY, PANEL (RH ONLY).		1
11	9-65305-3001		. . ANGLE ASSY, FUEL TANK VENT VALVE SEAT (LH ONLY) . .		1
11	9-65305-3002		. . ANGLE ASSY, FUEL TANK VENT VALVE SEAT (RH ONLY) . .		1
12	BACR10G141		. . RETAINER.		4
13	BACR10R4		. . . RETAINER.		8
14	BACB30NE4-10		. . BOLT.		12
15	40-1614-3		. FITTING INSTL, UPPER OUTBOARD PRODUCTION BREAK RIB. (LH ONLY) (SEE 57-2, FIG. 11)	0150	1
15	40-1614-3		. FITTING INSTL, UPPER OUTBOARD PRODUCTION BREAK RIB. (VARIABLE DWG;40-1614-5005) (LH ONLY) (SEE FIG. 11)	5199	1
15	40-1614-4		. FITTING INSTL, UPPER OUTBOARD PRODUCTION BREAK RIB. (RH ONLY) (SEE 57-2, FIG. 11)	0150	1
15	40-1614-4		. FITTING INSTL, UPPER OUTBOARD PRODUCTION BREAK RIB. (VARIABLE DWG;40-1614-5006) (RH ONLY) (SEE FIG. 11)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



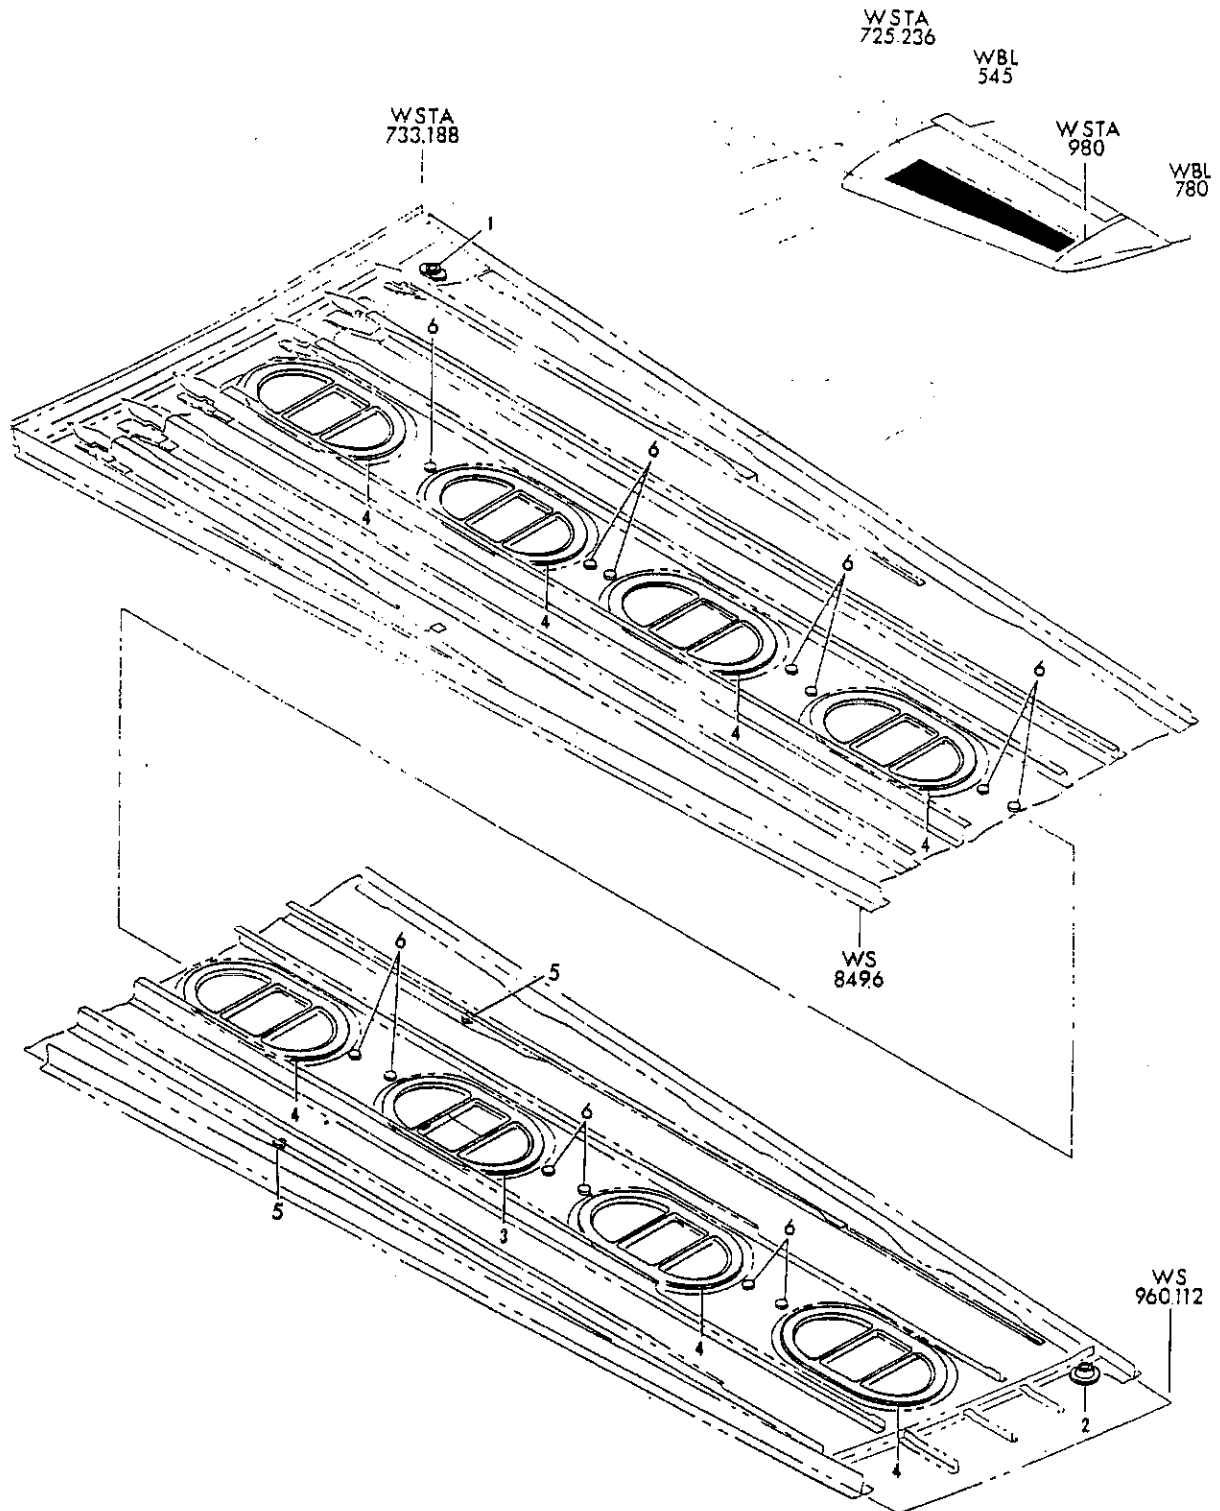


FIGURE 13. PANEL INSTL. OUTBOARD WING LOWER

BOEING *707* Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R R R R R R R R R R R R	13	50-8211-11	PANEL INSTL, OUTBOARD WING LOWER (LH) (SEE 57-2, FIG. .								RF
		50-8211-12	PANEL INSTL, OUTBOARD WING LOWER (RH) (SEE 57-2, FIG. .								RF
		40-1614-7	. FITTING INSTL, LOWER OUTBOARD PRODUCTION BREAK RIB. .							0150	1
		40-1614-7	. FITTING INSTL, LOWER OUTBOARD PRODUCTION BREAK RIB. .							5199	1
		40-1614-8	. FITTING INSTL, LOWER OUTBOARD PRODUCTION BREAK RIB. .							0150	1
		40-1614-8	. FITTING INSTL, LOWER OUTBOARD PRODUCTION BREAK RIB. .							5199	1
	1	6-73197	. . FITTING, PRODUCTION BREAK DRAIN								1
		BAC830ABP4-9A	. . . ATTACHING PARTS								2
		AN960PD416L	. . . BOLT.								2
		NAS679A4W	. . . WASHER.								2
			. . . NUT								2
	2	60-3375-2001	. . . FITTING, SURGE TANK DRAIN VALVE FLANGE.								1
	3	69-2505-1	. . . DOOR INSTL, WING LOWER SURFACE DRIP STICK (LH ONLY) .								1
	3	69-2505-2	. . . DOOR INSTL, WING LOWER SURFACE DRIP STICK (RH ONLY) .								1
	4	69-3002-3000	. . . DOOR INSTL, WING LOWER SURFACE TANK ACCESS (SEE . . .								7
	5	50-8211-4	. . . PLUG, OUTBOARD WING LOWER PANEL								2
	6	BACR15BAAD8	. . . RIVET								13
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

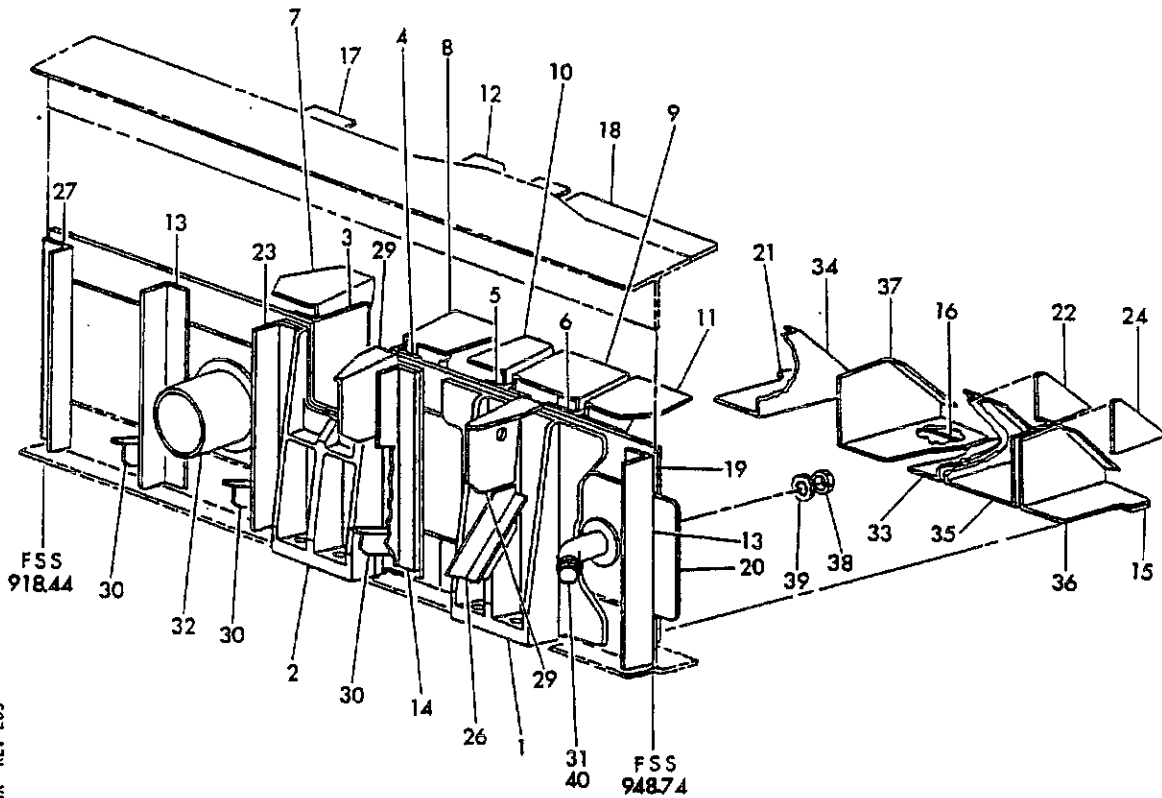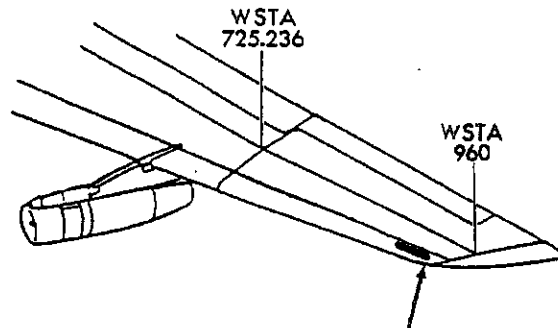

A 5702014A REV 265

FIGURE 14A. FRONT SPAR MOD



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R 14A	361-57-20-74233-101	FRONT SPAR MOD, (L.H.) (VS2500) (ADDED BY RAF)							0150	RF
R		7211.019-225) (SEE FIG. 8, ITEM 11)								
R	361-57-20-74233-102	FRONT SPAR MOD, (R.H.) (VS2500) (ADDED BY RAF)							0150	RF
R		7211.019-225) (SEE FIG. 8, ITEM 11)								
R 1	361-57-20-74334-101	. FITTING, (L.H. ONLY) (VS2500)							0150	1
R 1	361-57-20-74334-102	. FITTING, (R.H. ONLY) (VS2500)							0150	1
R 2	361-57-20-74334-103	. FITTING, (L.H. ONLY) (VS2500)							0150	1
R 2	361-57-20-74334-104	. FITTING, (R.H. ONLY) (VS2500)							0150	1
R 3	361-57-20-74234-101	. ANGLE, (VS2500)							0150	2
R 4	361-57-20-74234-103	. ANGLE, (L.H. ONLY) (VS2500)							0150	1
R 4	361-57-20-74234-104	. ANGLE, (R.H. ONLY) (VS2500)							0150	1
R 5	361-57-20-74234-105	. TEE, (L.H. ONLY) (VS2500)							0150	1
R 5	361-57-20-74234-106	. TEE, (R.H. ONLY) (VS2500)							0150	1
R 6	361-57-20-74234-107	. TEE, (L.H. ONLY) (VS2500)							0150	1
R 6	361-57-20-74234-108	. TEE, (R.H. ONLY) (VS2500)							0150	1
R 7	361-57-20-74234-109	. BRACKET, (L.H. ONLY) (VS2500)							0150	1
R 7	361-57-20-74234-110	. BRACKET, (R.H. ONLY) (VS2500)							0150	1
R 8	361-57-20-74234-111	. BRACKET, (L.H. ONLY) (VS2500)							0150	1
R 8	361-57-20-74234-112	. BRACKET, (R.H. ONLY) (VS2500)							0150	1
R 9	361-57-20-74234-113	. U BRACKET, (VS2500)							0150	2
R 10	361-57-20-74234-181	. BRACKET, (VS2500)							0150	1
R 10	361-57-20-74234-182	. BRACKET, (VS2500)							0150	1
R 11	361-57-20-74234-117	. BRACKET, (VS2500)							0150	1
R 11	361-57-20-74234-118	. BRACKET, (VS2500)							0150	1
R 12	361-57-20-74234-119	. ANGLE, (VS2500)							0150	2
R 13	361-57-20-74234-121	. ANGLE, (VS2500)							0150	4
R 14	361-57-20-74234-125	. ANGLE, (VS2500)							0150	2
R 15	361-57-20-74234-127	. FILLER, (VS2500)							0150	2
R 16	361-57-20-74234-129	. FILLER, (VS2500)							0150	2
R 17	361-57-20-74234-131	. FILLER, (VS2500)							0150	2
R 18	361-57-20-74234-133	. FILLER, (VS2500)							0150	2
R 19	361-57-20-74234-137	. DOUBLER, (VS2500)							0150	2
R 20	361-57-20-74234-139	. FILLER, (MAIN) (VS2500)							0150	2
R 21	361-57-20-74234-141	. FILLER, (VS2500)							0150	2
R 22	361-57-20-74234-143	. FILLER, (VS2500)							0150	2
R 23	361-57-20-74234-145	. ANGLE, (VS2500)							0150	2
R 24	361-57-20-74234-147	. FILLER, (VS2500)							0150	2
R 26	361-57-20-74234-159	. ANGLE, (L.H. ONLY) (VS2500)							0150	1
R 26	361-57-20-74234-160	. ANGLE, (R.H. ONLY) (VS2500)							0150	1
R 27	361-57-20-74234-161	. ANGLE, (L.H. ONLY) (VS2500)							0150	1
R 27	361-57-20-74234-162	. ANGLE, (R.H. ONLY) (VS2500)							0150	1
R 29	361-57-20-74234-165	. CLIP, RIB (L.H. ONLY) (VS2500)							0150	2
R 29	361-57-20-74234-166	. CLIP, RIB (R.H. ONLY) (VS2500)							0150	2
R 30	361-57-20-74234-167	. CLIP, (VS2500)							0150	6
R 31	361-89-29-75333-113	. ELBOW, 45 DEG (VS2500)							0150	2
R 32	361-57-20-74335-101	. FLANGE, TUBE ASSY (VS2500)							0150	2
R 33	361-57-20-74234-171	. BRACKET, (L.H. ONLY) (VS2500)							0150	1
R 33	361-57-20-74234-172	. BRACKET, (R.H. ONLY) (VS2500)							0150	1
R 34	361-57-20-74234-173	. BRACKET, (L.H. ONLY) (VS2500)							0150	1
R 34	361-57-20-74234-174	. BRACKET, (R.H. ONLY) (VS2500)							0150	1
R 35	361-57-20-74234-175	. BRACKET, (VS2500)							0150	2
R 36	361-57-20-74234-177	. BRACKET, (L.H. ONLY) (VS2500)							0150	1
R 36	361-57-20-74234-178	. BRACKET, (R.H. ONLY) (VS2500)							0150	1
R 37	361-57-20-74234-179	. BRACKET, (L.H. ONLY) (VS2500)							0150	1
R 37	361-57-20-74234-180	. BRACKET, (R.H. ONLY) (VS2500)							0150	1
R 38	AN924-12	. NUT							0150	2
R 39	AN960-1716L	. WASHER							0150	2
R 40	MS29513-222	. PACKING							0150	2

MISSING ITEM NUMBERS ARE NOT APPLICABLE


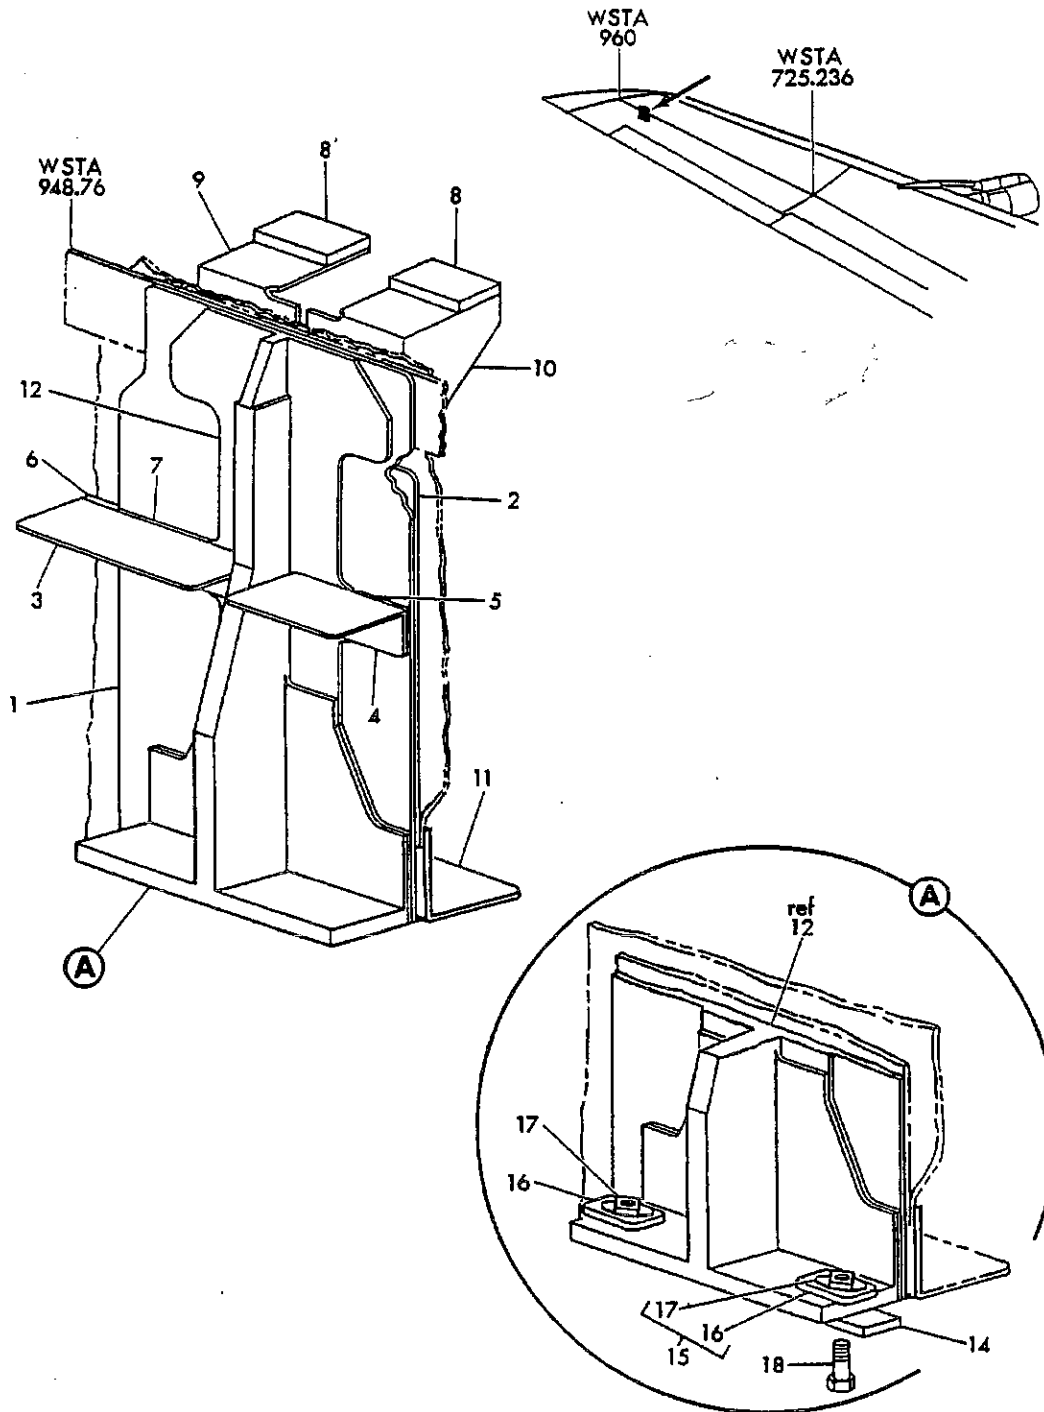


FIGURE 15A. REAR SPAR MOD




PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	15A	361-57-20-74228-001	REAR SPAR MOD, (L.H.) (VS2500) (ADDED BY RAF.							0150	RF
R			7211.019-225) (SEE FIG. 8, ITEM 15)								
R		361-57-20-74228-002	REAR SPAR MOD, (R.H.) (VS2500) (ADDED BY RAF.							0150	RF
R			7211.019-225) (SEE FIG. 8, ITEM 15)								
R	1	361-57-20-74232-101	. DOUBLER, (VS2500)							0150	2
R	2	361-57-20-74232-103	. FILLER, (VS2500).							0150	2
R	3	361-57-20-74232-105	. ANGLE, (VS2500)							0150	2
R	4	361-57-20-74232-107	. ANGLE, (VS2500)							0150	2
R	5	361-57-20-74232-109	. FILLER, (VS2500).							0150	2
R	6	361-57-20-74232-111	. FILLER, (VS2500).							0150	2
R	7	361-57-20-74232-113	. FILLER, (VS2500).							0150	2
R	8	361-57-20-74232-117	. FILLER, (VS2500).							0150	4
R	9	361-57-20-74232-119	. BRACKET, (L.H. ONLY) (VS2500)							0150	1
R	9	361-57-20-74232-120	. BRACKET, (R.H. ONLY) (VS2500)							0150	1
R	10	361-57-20-74232-120	. BRACKET, (L.H. ONLY) (VS2500)							0150	1
R	10	361-57-20-74232-119	. BRACKET, (R.H. ONLY) (VS2500)							0150	1
R	11	361-57-20-74229-105	. ANGLE, (L.H. ONLY) (VS2500)							0150	1
R	11	361-57-20-74229-106	. ANGLE, (R.H. ONLY) (VS2500)							0150	1
R	12	361-57-20-74229-103	. PYLON, ATTACHMENT FITTING WING REAR SPAR (VS2500)							0150	2
R	14	361-57-20-74228-107	. COVER, PLATE (WITHOUT PQDS CONFIGURATION) (VS2500).							0150	2
R	15	361-57-20-74228-109	. NUTPLATE BASE ASSY, (WITHOUT PQDS CONFIGURATION).							0150	4
R			(VS2500)								
R	16	361-57-20-74228-111	. . NUTPLATE BASE, (VS2500)							0150	4
R	17	MS21059-L3	. . NUTPLATE BASE							0150	2
R	18	NAS1580A3T11	. BOLT, (WITHOUT PQDS CONFIGURATION).							0150	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

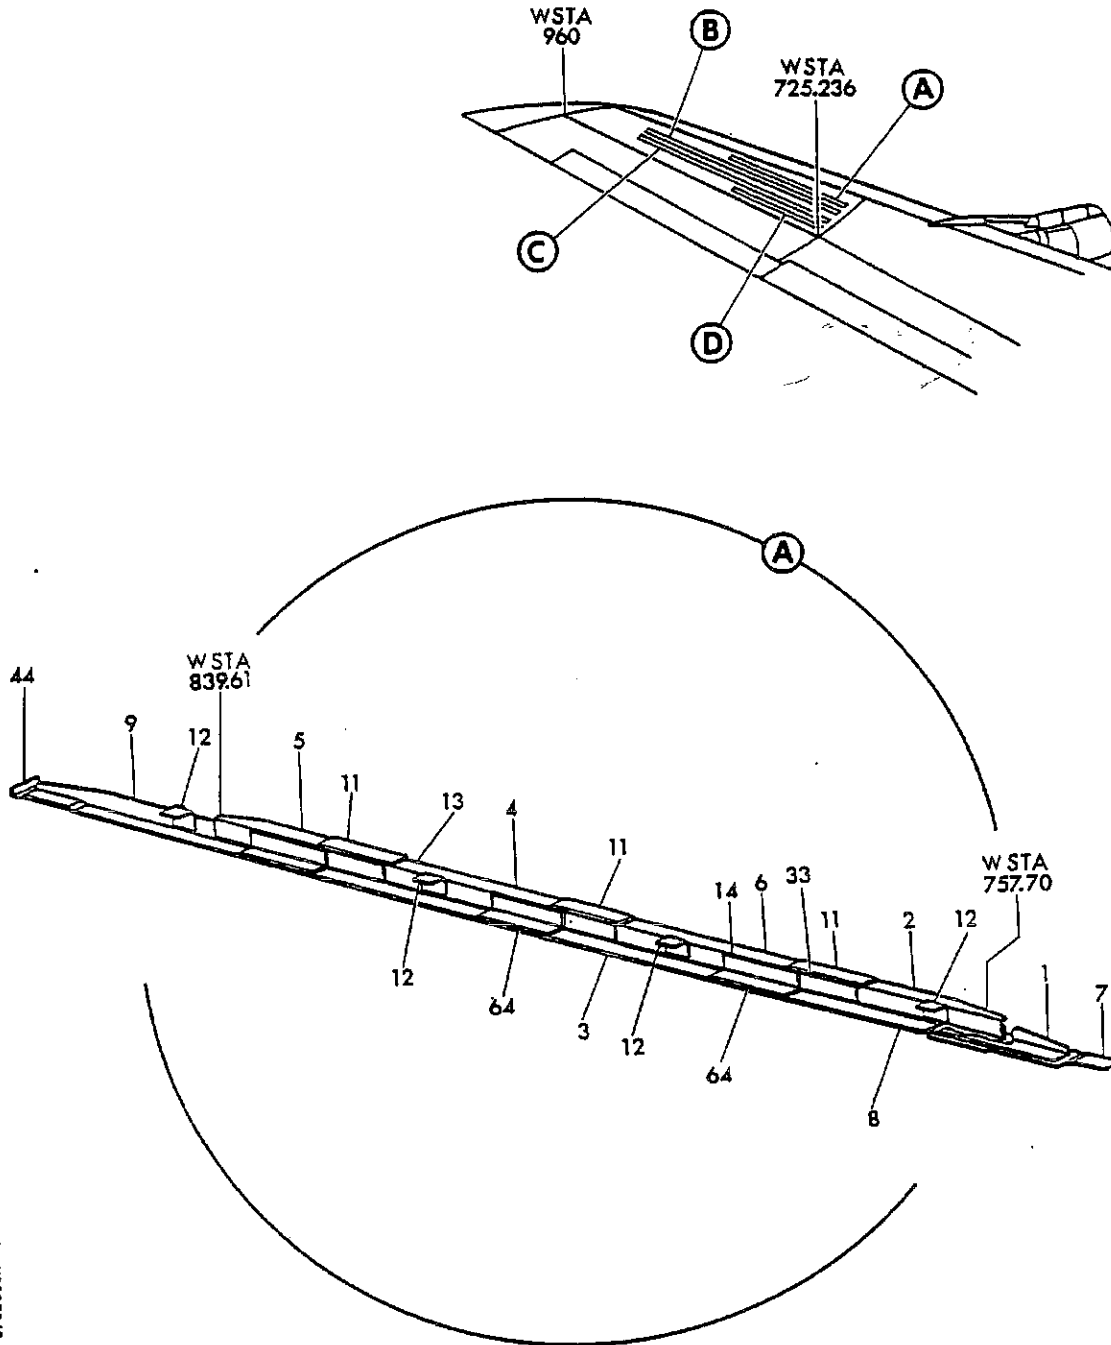

A 5702016A SHT 1 REV 265

FIGURE 16A. WING LOWER SKIN REINFORCEMENT (SHEET 1)

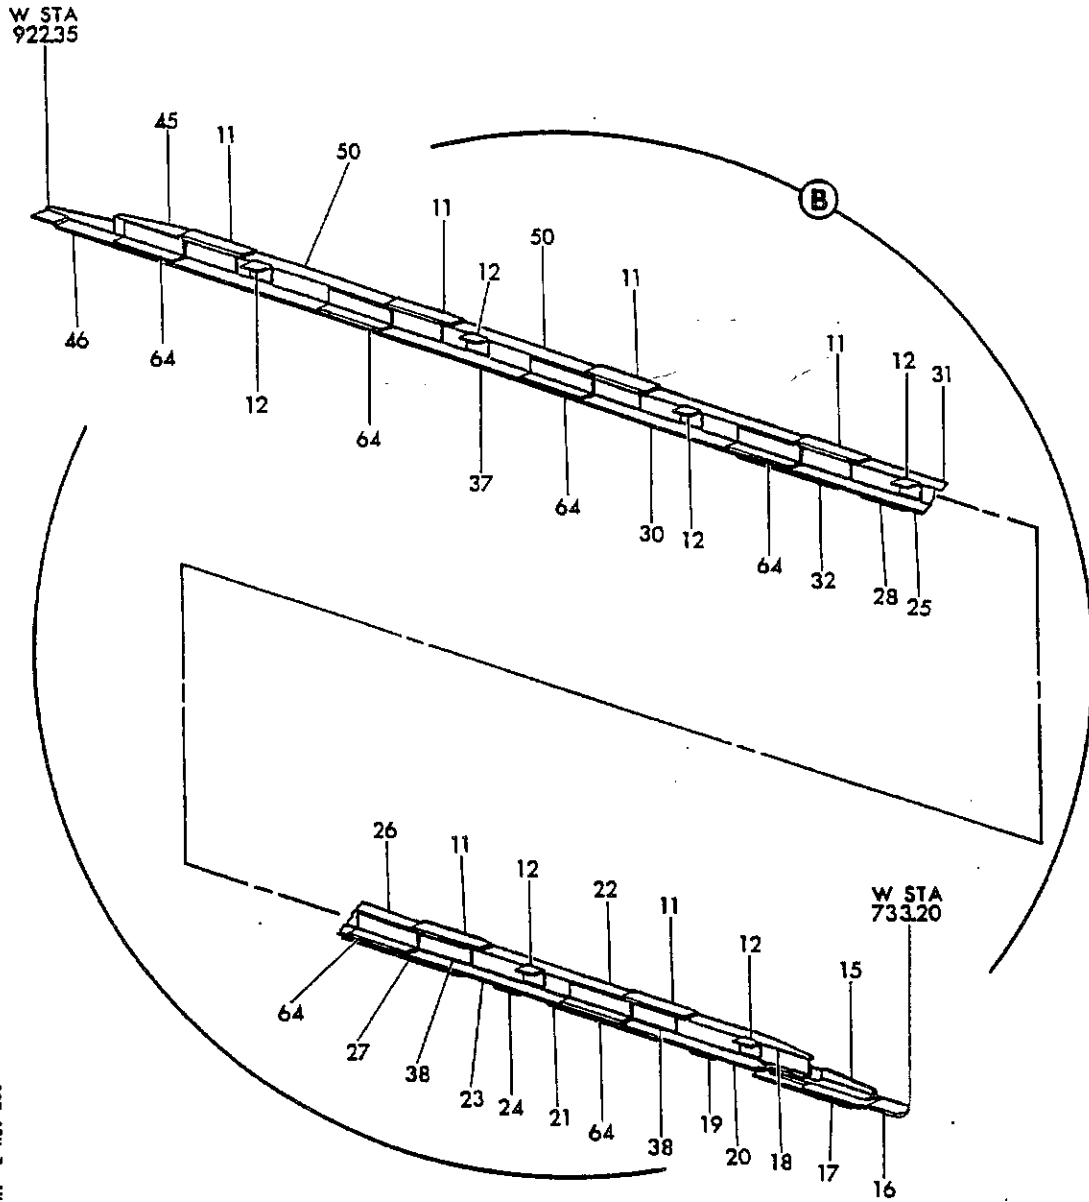


A 5702016A SHT 2 REV 265

FIGURE 16A. WING LOWER SKIN REINFORCEMENT (SHEET 2)

NOV 21/94


57-02-16A

DETAILED PARTS LIST
57-02-16A
PAGE 1

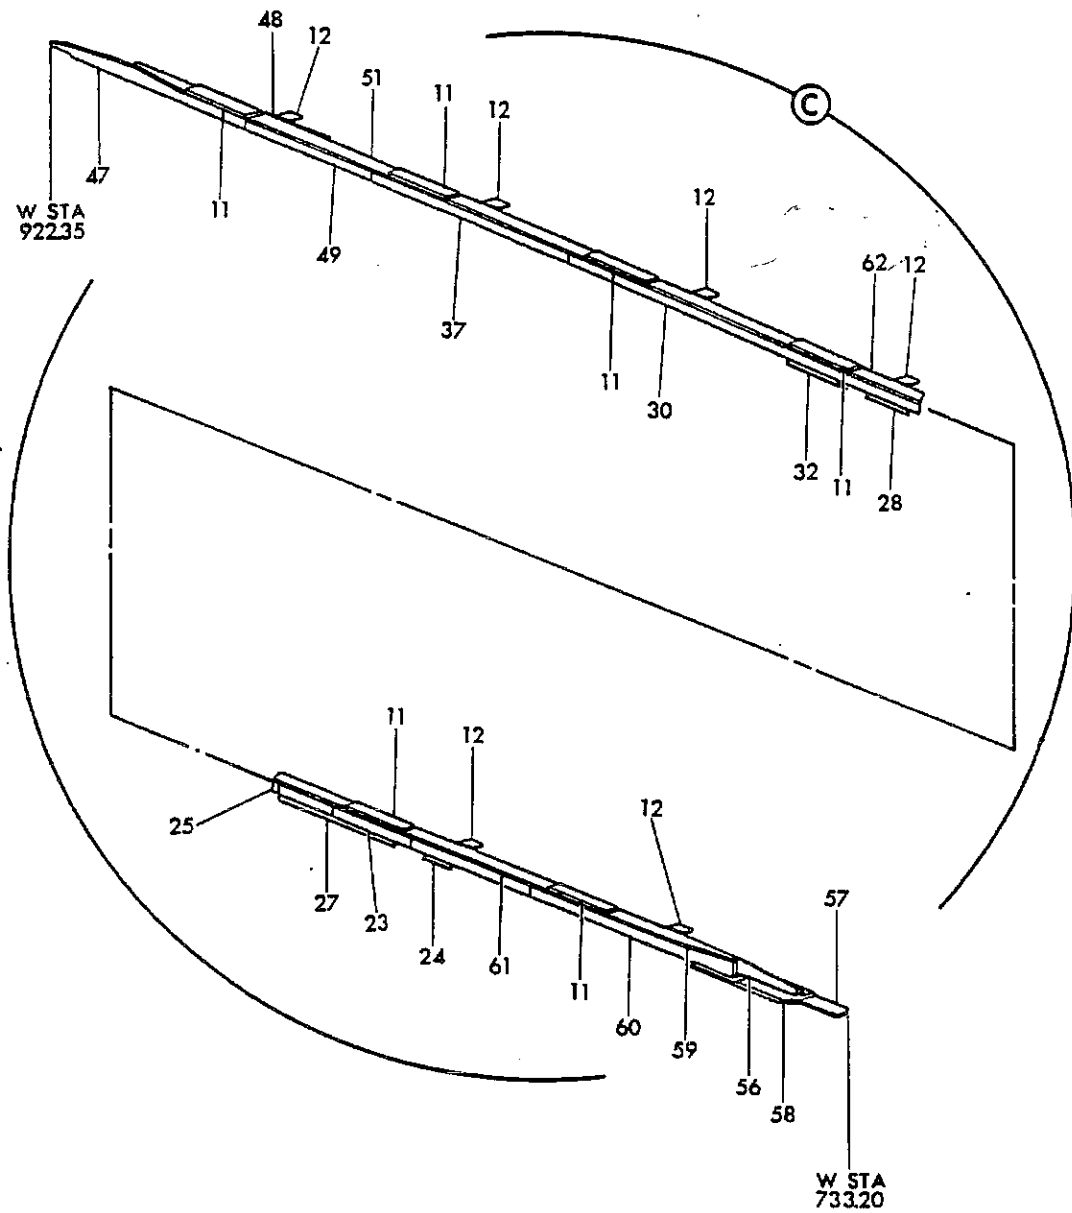

A 5702016A SHT 3 REV 265

FIGURE 16A. WING LOWER SKIN REINFORCEMENT (SHEET 3)

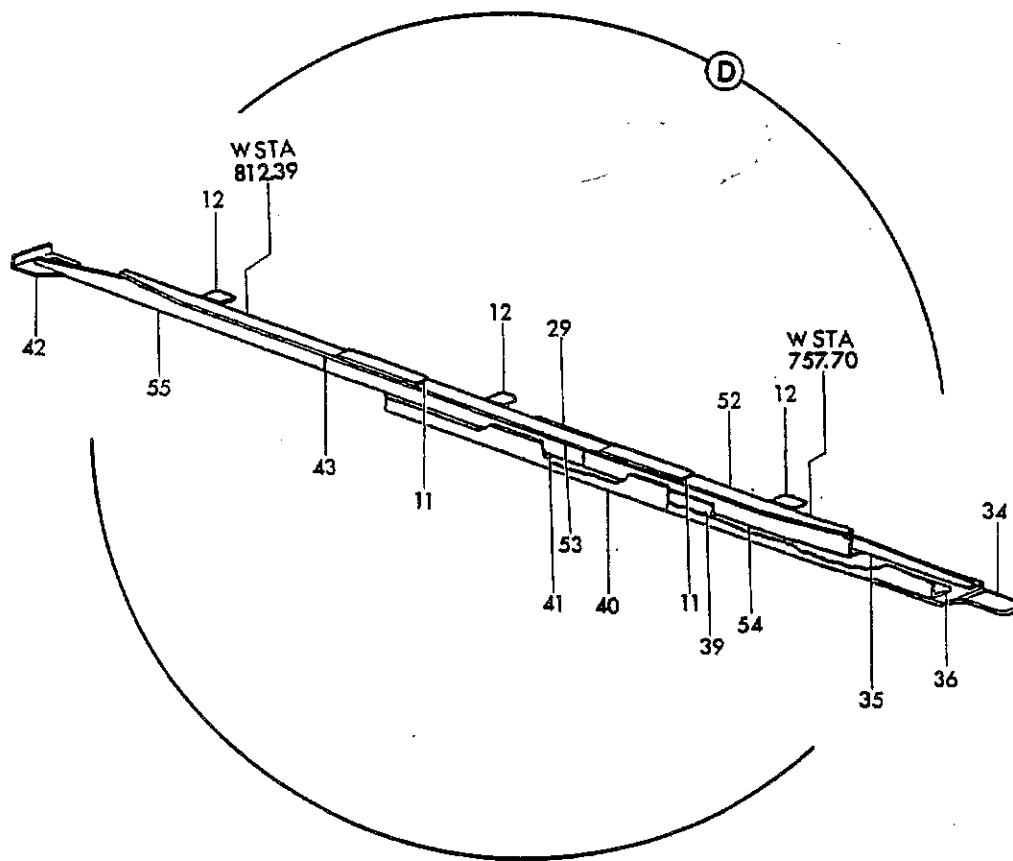

A 5702016A SHIT 4 REV 265

FIGURE 16A. WING LOWER SKIN REINFORCEMENT (SHEET 4)

NOV 21/94

57-02-16A

DETAILED PARTS LIST
57-02-16A
PAGE 3



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 16A	361-57-20-74110-001	WING LOWER SKIN REINFORCEMENT, L.H. (VS2500) (ADDED . . . BY RAF 7211.019-225) (SEE FIG. 8, ITEM 16)	0150	RF
R	361-57-20-74110-002	WING LOWER SKIN REINFORCEMENT, R.H. (VS2500) (ADDED . . . BY RAF 7211.019-225) (SEE FIG. 8, ITEM 16)	0150	RF
R 1	361-57-20-74111-201	ANGLE, (L.H. ONLY) (VS2500)	0150	1
R 1	361-57-20-74111-202	ANGLE, (R.H. ONLY) (VS2500)	0150	1
R 2	361-57-20-74111-203	ANGLE UPPER, (L.H. ONLY) (VS2500)	0150	1
R 2	361-57-20-74111-204	ANGLE UPPER, (R.H. ONLY) (VS2500)	0150	1
R 3	361-57-20-74111-205	ANGLE LOWER, (VS2500)	0150	2
R 4	361-57-20-74111-207	ANGLE UPPER, (VS2500)	0150	2
R 5	361-57-20-74111-209	ANGLE UPPER, (L.H. ONLY) (VS2500)	0150	1
R 5	361-57-20-74111-210	ANGLE UPPER, (R.H. ONLY) (VS2500)	0150	1
R 6	361-57-20-74111-211	ANGLE UPPER, (L.H. ONLY) (VS2500)	0150	1
R 6	361-57-20-74111-212	ANGLE UPPER, (R.H. ONLY) (VS2500)	0150	1
R 7	361-57-20-74111-213	PLATE, (L.H. ONLY) (VS2500)	0150	1
R 7	361-57-20-74111-214	PLATE, (R.H. ONLY) (VS2500)	0150	1
R 8	361-57-20-74111-215	ANGLE LOWER, (L.H. ONLY) (VS2500)	0150	1
R 8	361-57-20-74111-216	ANGLE LOWER, (R.H. ONLY) (VS2500)	0150	1
R 9	361-57-20-74111-217	ANGLE LOWER, (L.H. ONLY) (VS2500)	0150	1
R 9	361-57-20-74111-218	ANGLE LOWER, (R.H. ONLY) (VS2500)	0150	1
R 11	361-57-20-74111-221	SPLICE STRAP, (VS2500)	0150	34
R 12	361-57-20-74111-223	CLIP, (VS2500)	0150	42
R 13	361-57-20-74111-225	ANGLE LOWER, (VS2500)	0150	2
R 14	361-57-20-74111-227	SPLICE ANGLE, (L.H. ONLY) (VS2500)	0150	1
R 14	361-57-20-74111-228	SPLICE ANGLE, (R.H. ONLY) (VS2500)	0150	1
R 15	361-57-20-74111-229	ANGLE, (L.H. ONLY) (VS2500)	0150	1
R 15	361-57-20-74111-230	ANGLE, (R.H. ONLY) (VS2500)	0150	1
R 16	361-57-20-74111-231	PLATE, (L.H. ONLY) (VS2500)	0150	1
R 16	361-57-20-74111-232	PLATE, (R.H. ONLY) (VS2500)	0150	1
R 17	361-57-20-74111-233	FILLER, (L.H. ONLY) (VS2500)	0150	1
R 17	361-57-20-74111-234	FILLER, (R.H. ONLY) (VS2500)	0150	1
R 18	361-57-20-74111-235	ANGLE UPPER, (L.H. ONLY) (VS2500)	0150	1
R 18	361-57-20-74111-236	ANGLE UPPER, (R.H. ONLY) (VS2500)	0150	1
R 19	361-57-20-74111-237	FILLER, (VS2500)	0150	4
R 20	361-57-20-74111-239	ANGLE LOWER, (L.H. ONLY) (VS2500)	0150	1
R 20	361-57-20-74111-240	ANGLE LOWER, (R.H. ONLY) (VS2500)	0150	1
R 21	361-57-20-74111-241	FILLER, (VS2500)	0150	4
R 22	361-57-20-74111-243	ANGLE UPPER, (L.H. ONLY) (VS2500)	0150	1
R 22	361-57-20-74111-244	ANGLE UPPER, (R.H. ONLY) (VS2500)	0150	1
R 23	361-57-20-74111-245	ANGLE LOWER, (VS2500)	0150	4
R 24	361-57-20-74111-247	FILLER, (VS2500)	0150	4
R 25	361-57-20-74111-249	ANGLE LOWER, (VS2500)	0150	4
R 26	361-57-20-74111-251	ANGLE UPPER, (VS2500)	0150	4
R 27	361-57-20-74111-253	FILLER, (VS2500)	0150	4
R 28	361-57-20-74111-255	FILLER, (VS2500)	0150	4
R 29	361-57-20-74111-257	VERT. SPLICE STRAP, (VS2500)	0150	2
R 30	361-57-20-74111-259	ANGLE LOWER, (VS2500)	0150	4
R 31	361-57-20-74111-261	ANGLE UPPER, (L.H. ONLY) (VS2500)	0150	1
R 31	361-57-20-74111-262	ANGLE, (R.H. ONLY) (VS2500)	0150	1
R 32	361-57-20-74111-267	FILLER, (VS2500)	0150	4
R 33	361-57-20-74111-269	VERT. SPLICE STRAP, (VS2500)	0150	2
R 34	361-57-20-74111-271	PLATE, (L.H. ONLY) (VS2500)	0150	1
R 34	361-57-20-74111-272	PLATE, (R.H. ONLY) (VS2500)	0150	1
R 35	361-57-20-74111-273	ANGLE, (L.H. ONLY) (VS2500)	0150	1
R 35	361-57-20-74111-274	ANGLE, (R.H. ONLY) (VS2500)	0150	1
R 36	361-57-20-74111-275	ANGLE, (L.H. ONLY) (VS2500)	0150	1
R 36	361-57-20-74111-276	ANGLE, (R.H. ONLY) (VS2500)	0150	1
R 37	361-57-20-74111-305	ANGLE LOWER, (VS2500)	0150	6
R 38	361-57-20-74111-279	VERT. SPLICE STRAP, (VS2500)	0150	28
R 39	361-57-20-74111-281	SPLICE ANGLE, (L.H. ONLY) (VS2500)	0150	1
R 39	361-57-20-74111-282	SPLICE ANGLE, (R.H. ONLY) (VS2500)	0150	1
R 40	361-57-20-74111-283	ANGLE, (L.H. ONLY) (VC2500)	0150	1
R 40	361-57-20-74111-284	ANGLE, (R.H. ONLY) (VC2500)	0150	1
R 41	361-57-20-74111-285	ANGLE LOWER, (L.H. ONLY) (VC2500)	0150	1
R 41	361-57-20-74111-286	ANGLE LOWER, (R.H. ONLY) (VC2500)	0150	1
R 42	361-57-20-74111-287	END CLIP, (L.H. ONLY) (VC2500)	0150	1
R 42	361-57-20-74111-288	END CLIP, (R.H. ONLY) (VC2500)	0150	1
R 43	361-57-20-74111-289	ANGLE UPPER, (L.H. ONLY) (VC2500)	0150	1
R 43	361-57-20-74111-290	ANGLE UPPER, (R.H. ONLY) (VC2500)	0150	1
R 44	361-57-20-74111-291	END CLIP, (L.H. ONLY) (VC2500)	0150	1
R 44	361-57-20-74111-292	END CLIP, (R.H. ONLY) (VC2500)	0150	1
R 45	361-57-20-74111-307	ANGLE UPPER, (L.H. ONLY) (VC2500)	0150	1
R 45	361-57-20-74111-308	ANGLE UPPER, (R.H. ONLY) (VC2500)	0150	1
R 46	361-57-20-74111-295	ANGLE LOWER, (L.H. ONLY) (VC2500)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R 16A 46	361-57-20-74111-296	.	ANGLE	LOWER,	(R.H. ONLY)	(VC2500)	.	.	0150	1
R 47	361-57-20-74111-297	.	ANGLE	LOWER,	(L.H. ONLY)	(VC2500)	.	.	0150	1
R 47	361-57-20-74111-298	.	ANGLE	LOWER,	(R.H. ONLY)	(VC2500)	.	.	0150	1
R 48	361-57-20-74111-299	.	ANGLE	SPLICE	LOWER,	(VC2500)	.	.	0150	2
R 49	361-57-20-74111-301	.	ANGLE	LOWER,	(VC2500)	.	.	.	0150	2
R 50	361-57-20-74111-303	.	ANGLE	UPPER,	(L.H. ONLY)	(VC2500)	.	.	0150	2
R 50	361-57-20-74111-304	.	ANGLE	UPPER,	(R.H. ONLY)	(VC2500)	.	.	0150	2
R 52	361-57-20-74111-204	.	ANGLE,	(L.H. ONLY)	(VC2500)	.	.	.	0150	1
R 52	361-57-20-74111-203	.	ANGLE,	(R.H. ONLY)	(VC2500)	.	.	.	0150	1
R 53	361-57-20-74111-212	.	ANGLE	UPPER,	(L.H. ONLY)	(VC2500)	.	.	0150	1
R 53	361-57-20-74111-211	.	ANGLE	UPPER,	(R.H. ONLY)	(VC2500)	.	.	0150	1
R 54	361-57-20-74111-216	.	ANGLE	LOWER,	(L.H. ONLY)	(VC2500)	.	.	0150	1
R 54	361-57-20-74111-215	.	ANGLE	LOWER,	(R.H. ONLY)	(VC2500)	.	.	0150	1
R 55	361-57-20-74111-218	.	ANGLE	LOWER,	(L.H. ONLY)	(VC2500)	.	.	0150	1
R 55	361-57-20-74111-217	.	ANGLE	LOWER,	(R.H. ONLY)	(VC2500)	.	.	0150	1
R 56	361-57-20-74111-230	.	ANGLE,	(L.H. ONLY)	(VC2500)	.	.	.	0150	1
R 56	361-57-20-74111-229	.	ANGLE,	(R.H. ONLY)	(VC2500)	.	.	.	0150	1
R 57	361-57-20-74111-232	.	PLATE,	(L.H. ONLY)	(VC2500)	.	.	.	0150	1
R 57	361-57-20-74111-231	.	PLATE,	(R.H. ONLY)	(VC2500)	.	.	.	0150	1
R 58	361-57-20-74111-234	.	FILLER,	(L.H. ONLY)	(VC2500)	.	.	.	0150	1
R 58	361-57-20-74111-233	.	FILLER,	(R.H. ONLY)	(VC2500)	.	.	.	0150	1
R 59	361-57-20-74111-236	.	ANGLE	UPPER,	(L.H. ONLY)	(VC2500)	.	.	0150	1
R 59	361-57-20-74111-235	.	ANGLE	UPPER,	(R.H. ONLY)	(VC2500)	.	.	0150	1
R 60	361-57-20-74111-240	.	ANGLE	LOWER,	(L.H. ONLY)	(VC2500)	.	.	0150	1
R 60	361-57-20-74111-239	.	ANGLE	LOWER,	(R.H. ONLY)	(VC2500)	.	.	0150	1
R 61	361-57-20-74111-244	.	ANGLE	UPPER,	(L.H. ONLY)	(VC2500)	.	.	0150	1
R 61	361-57-20-74111-243	.	ANGLE	UPPER,	(R.H. ONLY)	(VC2500)	.	.	0150	1
R 62	361-57-20-74111-262	.	ANGLE,	(L.H. ONLY)	(VC2500)	.	.	.	0150	1
R 62	361-57-20-74111-261	.	ANGLE,	(R.H. ONLY)	(VC2500)	.	.	.	0150	1
R 63	361-57-20-74111-308	.	ANGLE	UPPER,	(L.H. ONLY)	(VC2500)	.	.	0150	1
R 63	361-57-20-74111-307	.	ANGLE	UPPER,	(R.H. ONLY)	(VC2500)	.	.	0150	1
R 64	361-57-20-74111-309	.	SPLICE	ANGLE,	(VC2500)	.	.	.	0150	30
R 65	BACF3T01J15F10	.	FILLER	TAPERED.	.	.	.	.	0150	6
R 66	BAC1534-15	.	SHIM	LAMINATED.	.	.	.	.	0150	AR
R 67	BAC1534-33	.	SHIM	LAMINATED.	.	.	.	.	0150	AR
R 68	BAC1534-52	.	SHIM	LAMINATED.	.	.	.	.	0150	AR

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 03
INBOARD WING

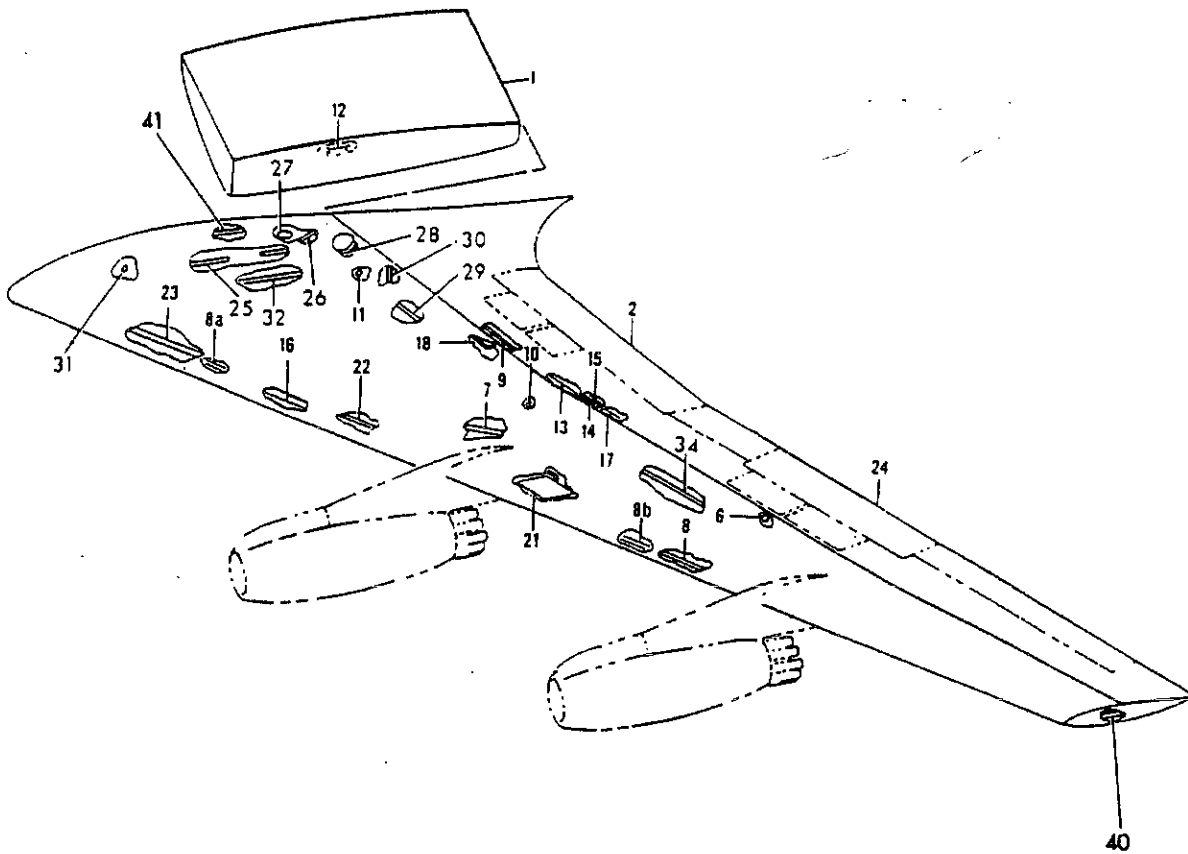


FIGURE 1. WING ASSY, OUTBOARD

A 5703001 REV 265

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
1	21	65-4089-30	. . TUBING INSTL, SECTION 22 PRESSURE FUELING (RH ONLY) (SEE 28-1, FIG. 15)								1
	22	65-4092-1	. . TUBING INSTL, SECTION 22 ENGINE FUEL FEED LH (LH. . ONLY) (SEE 28-1, FIG. 20 AND 21)								1
	22	65-4092-2	. . TUBING INSTL, SECTION 22 ENGINE FUEL FEED RH (RH. . ONLY) (SEE 28-1, FIG. 20 AND 21)								1
	24	65-1004-1	. . STRUCTURE ASSY, SECTION 12, 14 AND 16 INBOARD WING LH (LH ONLY) (SEE FIG. 2)							0150	1
	24	65-1004-1	. . STRUCTURE ASSY, SECTION 12, 14 AND 16 INBOARD WING LH (LH ONLY) (VARIABLE DWG;65-1004-5001) (SEE FIG. 2)							5199	1
	24	65-1004-2	. . STRUCTURE ASSY, SECTION 12, 14 AND 16 INBOARD WING RH (RH ONLY) (SEE FIG. 2)							0150	1
	24	65-1004-2	. . STRUCTURE ASSY, SECTION 12, 14 AND 16 INBOARD WING RH (RH ONLY) (VARIABLE DWG;65-1004-5002) (SEE FIG. 2)							5199	1
	40	361-89-60-74407-001	. WING STRUCTURE INSTL MOD (INBOARD LH ONLY) (VS2500) . (ADDED BY RAF 7211.019-225) (SEE 89-07, FIG. 3)							0150	1
	40	361-89-60-74407-002	. WING STRUCTURE INSTL MOD (INBOARD RH ONLY) (VS2500) . (ADDED BY RAF 7211.019-225) (SEE 89-07, FIG. 3)							0150	1
	41	361-89-60-74050-001	. FUEL SYSTEM INSTL (INBOARD STRUCTURE ONLY) (VS2500) . (ADDED BY RAF 7211.019-225) (SEE 89-07, FIG. 1)							0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

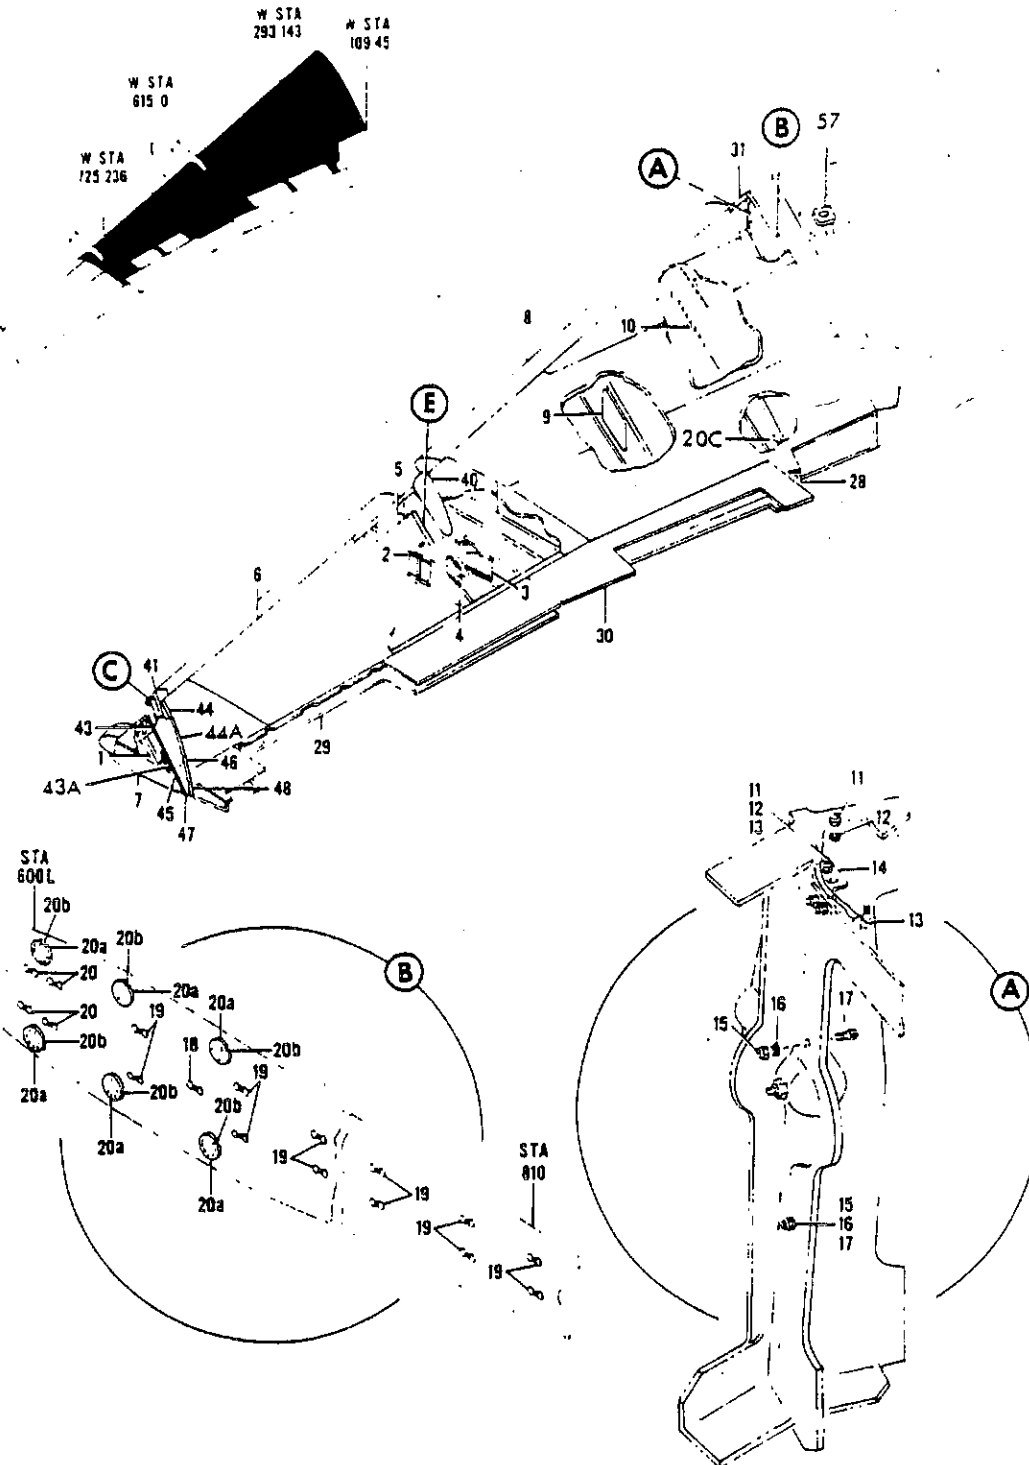


FIGURE 2. STRUCTURE ASSY, SECTION 12, 14 AND 16 INBOARD WING (SHEET 1)

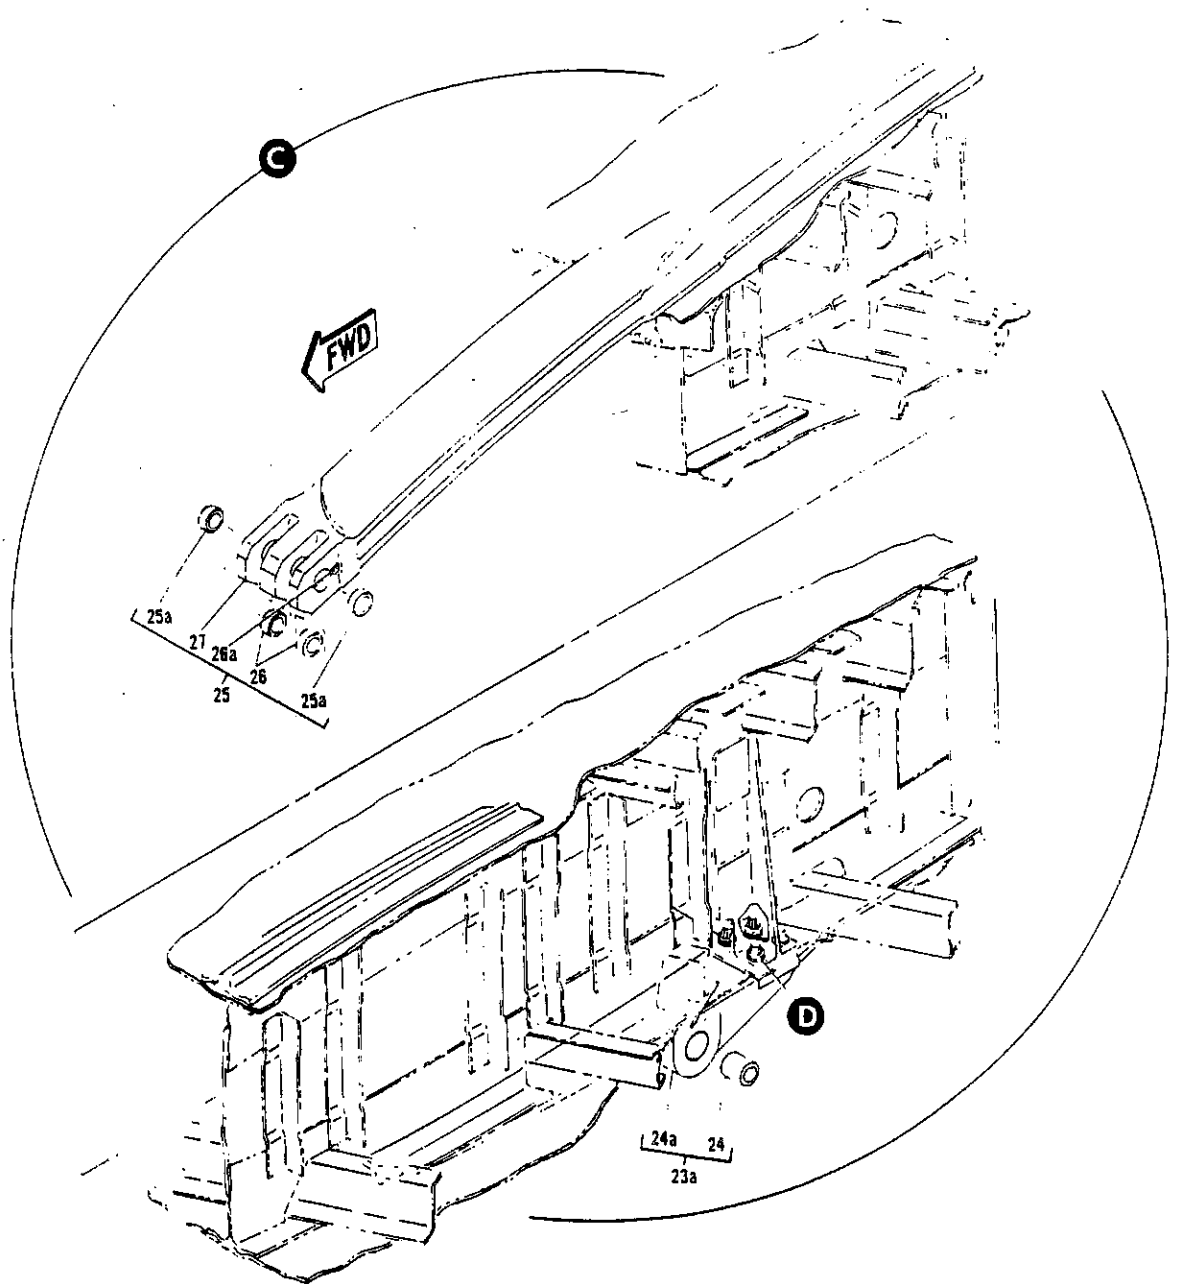


FIGURE 2. STRUCTURE ASSY. SECTION 12, 14 AND 16 INBOARD WING (SHEET 2)

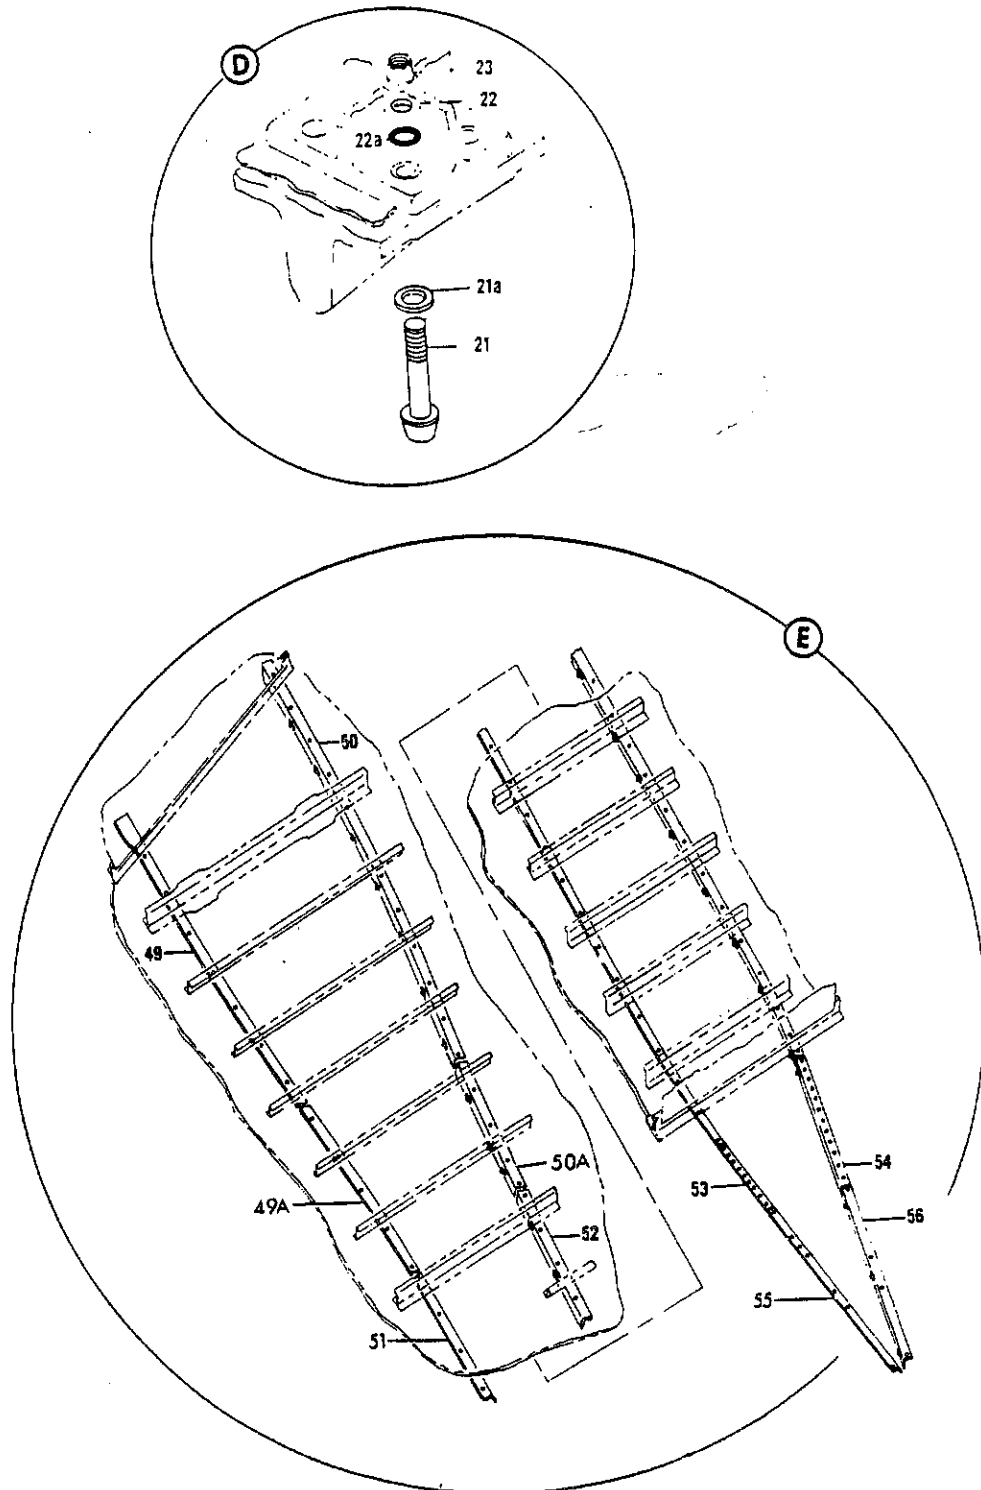


FIGURE 2. STRUCTURE ASSY, SECTION 12, 14 AND 16 INBOARD WING (SHEET 3)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 				

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
2	64-1009-2	. RIB INSTL, BODY BUTTOCK LINE 70.5 WING (RH ONLY).		1
11	NAS679A3W	. NUT		2
12	AN960D10L	. WASHER.		2
13	6-63321	. BOLT, FUEL CELL LACING EYE.		2
14	66-18057	. BRACKET, FUEL CELL TIE DOWN		1
		ATTACHING PARTS		
	NAS1104-12W	. BOLT.		2
	AN960DP416L	. WASHER.		2
	NAS679A4W	. NUT		2
		-----*		
15	NAS679A4W	. NUT		2
16	AN960PD416	. WASHER.		2
17	6-72493-2	. BOLT, FUEL CELL LACING EYE.		2
18	6-36717-1	. ANCHOR, TANK LACING		1
	64-1009-13	. WEB AND STIFFENER ASSY, BODY BUTTOCK LINE 70.5 WING RIB FORWARD (LH ONLY)		1
	64-1009-14	. WEB AND STIFFENER ASSY, BODY BUTTOCK LINE 70.5 WING RIB FORWARD (RH ONLY)		1
	64-1009-171	. WEB AND STIFFENER ASSY, BODY BUTTOCK LINE 70.5 WING RIB AFT (LH ONLY)		1
	64-1009-172	. WEB AND STIFFENER ASSY, BODY BUTTOCK LINE 70.5 WING RIB AFT (RH ONLY)		1
19	6-36717-1	. ANCHOR, TANK LACING		12
20	6-36717-1	. ANCHOR, TANK LACING (USED ON 64-1009-13 AND 64-1009-14)		4
	8-8112-3001	. RIB INSTL, WING BUTTOCK LINE 545 (LH ONLY).		1
	8-8112-3002	. RIB INSTL, WING BUTTOCK LINE 545 (RH ONLY).		1
21	MS20007-22	. BOLT.		4
21A	63-1002	. WASHER, WING BUTTOCKS LINE 545 RIB RADIUS		4
22	6-55097-2	. WASHER, TENSION BOLT O-RING SEAL.		4
22A	MS29513-111	. PACKING		4
23	BACN108-L7L	. NUT		4
23A	5-72316-3017	. SUPPORT ASSY, OUTBOARD NACELLE AFT DRAG (LH ONLY) (OPTIONAL 5-72316-3021)	0150	1
23A	5-72316-3021	. SUPPORT ASSY, OUTBOARD NACELLE AFT DRAG (LH ONLY) (OPTIONAL TO 5-72316-3017)	0150	1
23A	5-72316-3021	. SUPPORT ASSY, OUTBOARD NACELLE AFT DRAG (LH ONLY)	5199	1
23A	5-72316-3018	. SUPPORT ASSY, OUTBOARD NACELLE AFT DRAG (RH ONLY) (OPTIONAL 5-72316-3022)	0150	1
23A	5-72316-3022	. SUPPORT ASSY, OUTBOARD NACELLE AFT DRAG (RH ONLY) (OPTIONAL TO 5-72316-3018)	0150	1
23A	5-72316-3022	. SUPPORT ASSY, OUTBOARD NACELLE AFT DRAG (RH ONLY)	5199	1
24	69-2860-36	. BUSHING, STRUCTURAL PRESSED FIT (USED ON 5-72316-3017, -3018, -3021 AND -3022)		1
24A	5-72316-3005	. SUPPORT, (USED ON 5-72316-3007 AND 3017).	0150	1
24A	5-72316-3025	. SUPPORT, (USED ON 5-72316-3021)	5199	1
24A	5-72316-3006	. SUPPORT, (USED ON 5-72316-3008 AND 3018).	0150	1
24A	5-72316-3026	. SUPPORT, (USED ON 5-72316-3022)	5199	1
25	50-8731-27	. SUPPORT ASSY, OUTBOARD NACELLE UPPER WING SURFACE (ADDED BY SB 3173) (LH ONLY)	0150	1
25	50-8731-19	. SUPPORT ASSY, OUTBOARD NACELLE UPPER WING SURFACE (DELETED BY SB 3173) (LH ONLY) (OPTIONAL 50-8731-23 (DELETED BY SB 3173))	0150	1
25	50-8731-23	. SUPPORT ASSY, OUTBOARD NACELLE UPPER WING SURFACE (DELETED BY SB 3173) (LH ONLY) (OPTIONAL TO 50-8731-19 (DELETED BY SB 3173))	0150	1
25	50-8731-24	. SUPPORT ASSY, OUTBOARD NACELLE UPPER WING SURFACE (RH ONLY)	5199	1
25	50-8731-20	. SUPPORT ASSY, OUTBOARD NACELLE UPPER WING SURFACE (DELETED BY SB 3173) (RH ONLY) (OPTIONAL 50-8731-24 (DELETED BY SB 3173))	0150	1
25	50-8731-24	. SUPPORT ASSY, OUTBOARD NACELLE UPPER WING SURFACE (DELETED BY SB 3173) (RH ONLY) (OPTIONAL TO 50-8731-20 (DELETED BY SB 3173))	0150	1
25	50-8731-23	. SUPPORT ASSY, OUTBOARD NACELLE UPPER WING SURFACE (LH ONLY)	5199	1
25	50-8731-28	. SUPPORT ASSY, OUTBOARD NACELLE UPPER WING SURFACE (ADDED BY SB 3173) (RH ONLY)	0150	1
		ATTACHING PARTS		
	BACB30CW8-30	. BOLT.		1
	8-8112-3032	. SHIM, WING BUTTOCK LINE 545 RIB LAMINATED		AR
	8-8112-3093	. FILLER, WING BUTTOCK LINE 545 RIB RADIUS.		1
	MS20002C8	. WASHER.		1
	MS20002-8	. WASHER.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE										EFF FROM TO	UNITS PER ASSY							
			1	2	3	4	5	6	7												
R R R R R	2	BACN10CT8	. . . NUT											1							
	25A	69-2860-63	. . . BUSHING, STRUCTURAL PRESSED FIT (DELETED BY . . . SB 3173) (USED ON 50-8731-19, -20, -23 AND -24)										0150	2							
	25A	69-2860-76	. . . BUSHING, STRUCTURAL PRESSED FIT (ADDED BY . . . SB 3173) (USED ON 50-8731-27 AND -28)										0150	2							
R R R R R	26	69-2860-39	. . . BUSHING, STRUCTURAL PRESSED FIT (USED ON. 50-8731-9, -10, -13, -14, -15, -16, -19 AND -20, -23 AND -24)											2							
	26	69-2860-75	. . . BUSHING, STRUCTURAL PRESSED FIT (ADDED BY . . . SB 3173) (USED ON 50-8731-27 AND -28)										0150	2							
	26A	63-10519	. . . STOP, OUTBOARD NACELLE WING SUPPORT											1							
R R R R R	27	50-8731-22	. . . SUPPORT, (DELETED BY SB 3173) (RH ONLY)										0150	1							
	27	50-8731-21	. . . SUPPORT, (DELETED BY SB 3173) (LH ONLY)										0150	1							
	27	50-8731-25	. . . SUPPORT, (LH ONLY)										5199	1							
R R R R R	27	50-8731-25	. . . SUPPORT, (ADDED BY SB 3173) (LH ONLY)										0150	1							
	27	50-8731-26	. . . SUPPORT, (RH ONLY)										5199	1							
	27	50-8731-26	. . . SUPPORT, (ADDED BY SB 3173) (RH ONLY)										0150	1							
R R R R R	28	65-1138-1	. BOX INSTL, MAIN LANDING GEAR SUPPORT TORQUE (LH ONLY) (SEE 32-1, FIG. 43)											1							
	28	65-1138-2	. BOX INSTL, MAIN LANDING GEAR SUPPORT TORQUE (RH ONLY) (SEE 32-1, FIG. 43)											1							
	29	64-1026-1	. SPAR INSTL, INBOARD WING REAR (LH ONLY) (SEE FIG. 14)										0150	1							
R R R R R	29	64-1026-1	. SPAR INSTL, INBOARD WING REAR (VARIABLE DWG:64-1026-5001) (LH ONLY) (SEE FIG. 14)										5199	1							
	29	64-1026-2	. SPAR INSTL, INBOARD WING REAR (RH ONLY) (SEE FIG. 14)										0150	1							
	29	64-1026-2	. SPAR INSTL, INBOARD WING REAR (VARIABLE DWG:64-1026-5002)										5199	1							
R R R R R	30	65-1100-1	. STRUCTURAL INSTL, SECTION 16 INBOARD WING (LH ONLY) . (SEE FIG. 12)											1							
	30	65-1100-2	. STRUCTURAL INSTL, SECTION 16 INBOARD WING (RH ONLY) . (SEE FIG. 12)											1							
	31	64-1025-207	. SPAR INSTL, INBOARD WING FRONT (LH ONLY) (SEE FIG.. 3)										0150	1							
R R R R R	31	64-1025-207	. SPAR INSTL, INBOARD WING FRONT (VARIABLE. DWG:64-1025-5003) (LH ONLY) (SEE FIG. 3)										5199	1							
	31	64-1025-208	. SPAR INSTL, INBOARD WING FRONT (RH ONLY) (SEE FIG.. 3)										0150	1							
	31	64-1025-208	. SPAR INSTL, INBOARD WING FRONT (VARIABLE. DWG:64-1025-5004) (RH ONLY) (SEE FIG. 3)										5199	1							
R R R R R	40	50-6325-3001	. FAIRING INSTL, WING BUTTOCK LINE 315 UPPER SURFACE. . (LH ONLY) (SEE FIG. 7)											1							
	40	50-6325-3002	. FAIRING INSTL, WING BUTTOCK LINE 315 UPPER SURFACE. . (RH ONLY) (SEE FIG. 7)											1							
	41	50-6326-3001	. FAIRING INSTL, WING BUTTOCK LINE 545 UPPER SURFACE. . (LH ONLY) (SEE FIG. 8)											1							
R R R R R	41	50-6326-3002	. FAIRING INSTL, WING BUTTOCK LINE 545 UPPER SURFACE. . (RH ONLY) (SEE FIG. 8)											1							
		5-97676-3000	. ANGLE INSTL, OUTBOARD STRUT TRAILING EDGE FAIRING . . ATTACHING (LH ONLY)											1							
		5-97676-3001	. ANGLE INSTL, OUTBOARD STRUT TRAILING EDGE FAIRING . . ATTACHING (RH ONLY)											1							
R R R R R	43	5-97676-3	. . ANGLE, OUTBOARD STRUT TRAILING EDGE FAIRING ATTACHING (LH ONLY)											1							
	43	5-97676-4	. . ANGLE, OUTBOARD STRUT TRAILING EDGE FAIRING ATTACHING (RH ONLY)											1							
			ATTACHING PARTS																		
R R R R R		BACB30P6-4	. . BOLT.											11							
		BACB30P6-5	. . BOLT.											1							
		BACB30P6-8	. . BOLT.											5							
R R R R R		BACB30P8-7	. . BOLT.											1							
		BACB30P8-14	. . BOLT.											1							
		BACC30AC6	. . COLLAR.											17							
R R R R R		BACC30AC8	. . COLLAR.											2							
			*-----																		
	44	5-97676-5	. . ANGLE, OUTBOARD STRUT TRAILING EDGE FAIRING ATTACHING (LH ONLY)											1							
R R R R R	44	5-97676-6	. . ANGLE, OUTBOARD STRUT TRAILING EDGE FAIRING ATTACHING (RH ONLY)											1							
			ATTACHING PARTS																		
		NAS517-3-2	. . SCREW											9							
R R R R R		NAS517-3-3	. . SCREW											1							
		NAS517-3-4	. . SCREW											1							
	MISSING ITEM NUMBERS ARE NOT APPLICABLE																				

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
2	NAS333-5	. .	BOLT.							1
	BACB30P6-4	. .	BOLT.							10
	BACB30P6-6	. .	BOLT.							4
	BACB30P6-7	. .	BOLT.							1
	BACB30P6-8	. .	BOLT.							6
	BACB30P8-7	. .	BOLT.							2
	AN960D10	. .	WASHER.							11
	AN960D10L	. .	WASHER.							1
	NAS679A3W	. .	NUT							12
	BACC30AC6	. .	COLLAR.							21
	BACC30AC8	. .	COLLAR.							2
			-----*							
	45 5-97676-7	. .	ANGLE, OUTBOARD STRUT TRAILING EDGE FAIRING							1
			ATTACHING (LH ONLY)							
	45 5-97676-8	. .	ANGLE, OUTBOARD STRUT TRAILING EDGE FAIRING							1
			ATTACHING (RH ONLY)							
			ATTACHING PARTS							
	NAS517-3-4	. .	SCREW							10
	NAS517-4-6	. .	SCREW							1
	NAS517-4-8	. .	SCREW							1
	AN960D10	. .	WASHER.							10
	NAS679A3W	. .	NUT							10
			-----*							
46	5-97676-9	. .	ANGLE, OUTBOARD STRUT TRAILING EDGE FAIRING							1
			ATTACHING (LH ONLY)							
	46 5-97676-10	. .	ANGLE, OUTBOARD STRUT TRAILING EDGE FAIRING							1
			ATTACHING (RH ONLY)							
			ATTACHING PARTS							
	NAS517-3-4	. .	SCREW							9
	NAS517-4-6	. .	SCREW							2
	AN960D10	. .	WASHER.							9
	NAS679A3W	. .	NUT							9
			-----*							
	47 5-97676-11	. .	ANGLE, OUTBOARD STRUT TRAILING EDGE FAIRING							1
			ATTACHING (LH ONLY)							
47	5-97676-12	. .	ANGLE, OUTBOARD STRUT TRAILING EDGE FAIRING							1
			ATTACHING (RH ONLY)							
			ATTACHING PARTS							
	NAS517-3-4	. .	SCREW							2
	NAS517-3-6	. .	SCREW							2
			-----*							
	48 5-97676-13	. .	ANGLE, OUTBOARD STRUT TRAILING EDGE FAIRING							1
			ATTACHING (LH ONLY)							
	48 5-97676-14	. .	ANGLE, OUTBOARD STRUT TRAILING EDGE FAIRING							1
			ATTACHING (RH ONLY)							
			ATTACHING PARTS							
	NAS517-3-4	. .	SCREW							3
49	65-2580-1	. .	ANGLE INSTL, INBOARD NACELLE TRAILING EDGE FAIRING.							1
			ATTACHING (LH ONLY)							
	65-2580-2	. .	ANGLE INSTL, INBOARD NACELLE TRAILING EDGE FAIRING.							1
			ATTACHING (RH ONLY)							
	49 65-2580-31	. .	ANGLE, INBOARD NACELLE TRAILING EDGE FAIRING. . . .							1
			ATTACHING (LH ONLY)							
	49 65-2580-32	. .	ANGLE, INBOARD NACELLE TRAILING EDGE FAIRING. . . .							1
			ATTACHING (RH ONLY)							
			ATTACHING PARTS							
	BACB30P6-4	. .	BOLT.							17
	BACC30AC6	. .	COLLAR.							17
			-----*							
50	65-2580-5	. .	ANGLE, INBOARD NACELLE TRAILING EDGE FAIRING. . . .							1
			ATTACHING (LH ONLY)							
	50 65-2580-6	. .	ANGLE, INBOARD NACELLE TRAILING EDGE FAIRING. . . .							1
			ATTACHING (RH ONLY)							
			ATTACHING PARTS							
	BACB30P6-4	. .	BOLT.							1
	AN960D10	. .	WASHER.							2
	NAS679A3W	. .	NUT							1
	BACB30P6-4	. .	BOLT.							18
	BACC30AC6	. .	COLLAR.							18
			-----*							
	51 65-2580-7	. .	ANGLE, INBOARD NACELLE TRAILING EDGE FAIRING. . . .							1
			ATTACHING (LH ONLY)							

MISSING ITEM NUMBERS ARE NOT APPLICABLE

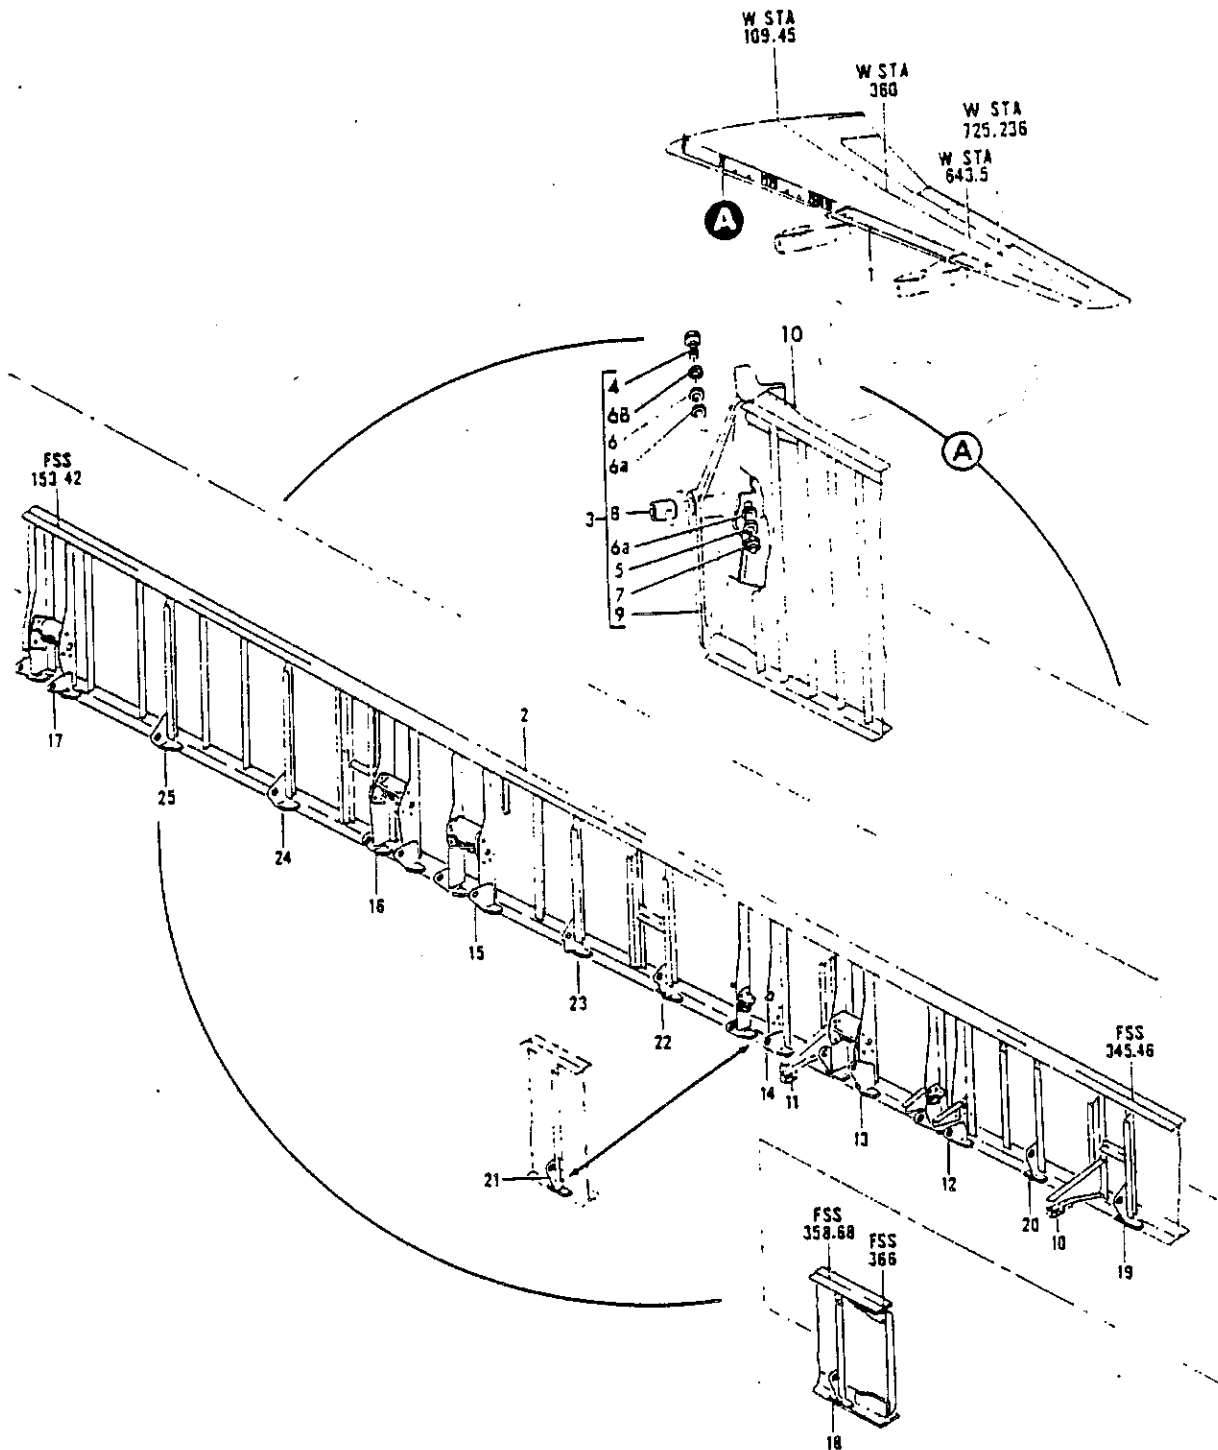


FIGURE 3. SPAR INSTL, INBOARD WING FRONT



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
3	64-1025-207	SPAR INSTL, INBOARD WING FRONT (LH) (SEE FIG. 2, ITEM 31)	0150	RF
	64-1025-207	SPAR INSTL, INBOARD WING FRONT (VARIABLE. DWG;64-1025-5003) (LH) (SEE FIG. 2, ITEM 31)	5199	RF
3	64-1025-208	SPAR INSTL, INBOARD WING FRONT (RH) (SEE FIG. 2, ITEM 31)	0150	RF
	64-1025-208	SPAR INSTL, INBOARD WING FRONT (VARIABLE. DWG;64-1025-5004) (RH) (SEE FIG. 2, ITEM 31)	5199	RF
1	65-20717-1	SPAR INSTL, WING STATION 360 TO PRODUCTION BREAK. . . FRONT (LH ONLY) (SEE FIG. 6)	0150	1
1	65-20717-1	SPAR INSTL, WING STATION 360 TO PRODUCTION BREAK. . . FRONT (VARIABLE DWG;65-20717-5001) (LH ONLY) (SEE FIG. 6)	5199	1
1	65-20717-2	SPAR INSTL, WING STATION 360 TO PRODUCTION BREAK. . . FRONT (RH ONLY) (SEE FIG. 6)	0150	1
1	65-20717-2	SPAR INSTL, WING STATION 360 TO PRODUCTION BREAK. . . FRONT (VARIABLE DWG;65-20717-5002) (RH ONLY) (SEE FIG. 6)	5199	1
2	64-1025-209	SPAR ASSY, INBOARD WING FRONT (LH ONLY)		1
2	64-1025-210	SPAR ASSY, INBOARD WING FRONT (RH ONLY)		1
3	65-2396-19	TERMINAL ASSY, BODY BUTTOCK LINE 70.5 (LH ONLY) . .	5199	1
3	65-2396-9	TERMINAL ASSY, BODY BUTTOCK LINE 70.5 (LH ONLY) . . (DELETED BY SB 3386)	0150	1
3	65-2396-23	TERMINAL ASSY, BODY BUTTOCK LINE 70.5 (LH SIDE) . . (ADDED BY SB 3386)	0150	1
3	65-2396-10	TERMINAL ASSY, BODY BUTTOCK LINE 70.5 (RH ONLY) . . (DELETED BY SB 3386)	0150	1
3	65-2396-24	TERMINAL ASSY, BODY BUTTOCK LINE 70.5 (RH SIDE) . . (ADDED BY SB 3386)	0150	1
3	65-2396-20	TERMINAL ASSY, BODY BUTTOCK LINE 70.5 (RH ONLY) . .	5199	1
4	NAS1108-45W	BOLT, (DELETED BY SB 3386)	0150	1
5	BAC830NFB-45	BOLT, (ADDED BY SB 3386)	0150	1
6	AN960PD816L	WASHER.		1
6	MS20002C8	WASHER.	5199	1
6	MS20002C8	WASHER, (DELETED BY SB 3386)	0150	1
6B	BACW10BP8C	WASHER, (ADDED BY SB 3386)	0150	1
7	NAS1022A8	NUT	5199	1
7	NAS1022A8	NUT, (DELETED BY SB 3386)	0150	1
7	BACN10JC8	NUT, (ADDED BY SB 3386)	0150	1
8	6-68024	SLEEVE, PIN RETAINER.	5199	1
8	6-68024	SLEEVE, (DELETED BY SB 3386)	0150	1
9	65-2396-17	TERMINAL, (LH ONLY)	5199	1
9	65-2396-11	TERMINAL, (LH ONLY) (DELETED BY SB 3386)	0150	1
9	65-2396-21	TERMINAL ASSY, BODY BUTTOCK LINE 70.5 FRONT SPAR WING (LH SIDE) (ADDED BY SB 3386)	0150	1
9	65-2396-12	TERMINAL, (RH ONLY) (DELETED BY SB 3386)	0150	1
9	65-2396-22	TERMINAL ASSY, BODY BUTTOCK LINE 70.5 FRONT SPAR WING (RH SIDE) (ADDED BY SB 3386)	0150	1
9	65-2396-18	TERMINAL, (RH ONLY)	5199	1
12	65-33120-1	SUPPORT INSTL, FRONT SPAR STATION 313.85 INBOARD WING ACTUATOR (LH ONLY) (SEE 27-7, FIG. 21)		1
12	65-33120-2	SUPPORT INSTL, FRONT SPAR STATION 313.85 INBOARD WING ACTUATOR (RH ONLY) (SEE 27-7, FIG. 21)		1
13	65-33121-1	SUPPORT INSTL, FRONT SPAR STATION 297.75 INBOARD WING ACTUATOR (LH ONLY) (SEE 27-7, FIG. 21)		1
13	65-33121-2	SUPPORT INSTL, FRONT SPAR STATION 297.75 INBOARD WING ACTUATOR (RH ONLY) (SEE 27-7, FIG. 21)		1
15	65-33122-1	SUPPORT INSTL, FRONT SPAR STATION 229.26 INBOARD WING ACTUATOR (LH ONLY) (SEE 27-7, FIG. 21)		1
15	65-33122-2	SUPPORT INSTL, FRONT SPAR STATION 229.26 INBOARD WING ACTUATOR (RH ONLY) (SEE 27-7, FIG. 21)		1
16	65-33123-1	SUPPORT INSTL, FRONT SPAR STATION 215.93 INBOARD WING ACTUATOR (LH ONLY) (SEE 27-7, FIG. 21)		1
16	65-33123-2	SUPPORT INSTL, FRONT SPAR STATION 215.93 INBOARD WING ACTUATOR (RH ONLY) (SEE 27-7, FIG. 21)		1
17	65-33124-1	SUPPORT INSTL, FRONT SPAR STATION 153.42 INBOARD WING ACTUATOR (LH ONLY) (SEE 27-7, FIG. 21)		1
17	65-33124-2	SUPPORT INSTL, FRONT SPAR STATION 153.42 INBOARD WING ACTUATOR (RH ONLY) (SEE 27-7, FIG. 21)		1
18	69-25194-5	TEE ASSY, FRONT SPAR STATION 358.68 INBOARD WING. . . ATTACHMENT (LH ONLY) (SEE 27-7, FIG. 22)		1
18	69-25194-6	TEE ASSY, FRONT SPAR STATION 358.68 INBOARD WING. . . ATTACHMENT (RH ONLY) (SEE 27-7, FIG. 22)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
3	BACB30GW8-6 BACB30GW8-8 BACC30K8 BACB30P8-9	ATTACHING PARTS • BOLT. • BOLT. • COLLAR. • BOLT. -----*								2 2 4 2
19	69-25193-5	• TEE ASSY, FRONT SPAR STATION 345.46 INBOARD WING. . . ATTACHMENT (LH ONLY) (SEE 27-7, FIG. 22)								1
19	69-25193-6	• TEE ASSY, FRONT SPAR STATION 345.46 INBOARD WING. . . ATTACHMENT (RH ONLY) (SEE 27-7, FIG. 22) ATTACHING PARTS • BOLT. • BOLT. • BOLT. • BOLT. • WASHER. • WASHER. • WASHER. • WASHER. • WASHER. • NUT • NUT • BOLT. -----*								1 2 2 2 2 2 2 2 2 4 4 4 4
20	69-25195-1	• TEE ASSY, FRONT SPAR STATION 329.82 INBOARD WING. . . ATTACHMENT (LH ONLY) (SEE 27-7, FIG. 22)								1
20	69-25195-2	• TEE ASSY, FRONT SPAR STATION 329.82 INBOARD WING. . . ATTACHMENT (RH ONLY) (SEE 27-7, FIG. 22) ATTACHING PARTS • BOLT. • COLLAR. • BOLT. -----*								1 4 4 2
21	69-21824-1	• TEE ASSY, FRONT SPAR STATION 281.13 INBOARD WING. . . ATTACHMENT (LH ONLY) (SEE 27-7, FIG. 22)								1
21	69-21824-2	• TEE ASSY, FRONT SPAR STATION 281.13 INBOARD WING. . . ATTACHMENT (RH ONLY) (SEE 27-7, FIG. 22) ATTACHING PARTS • BOLT. • COLLAR. • BOLT. -----*								1 4 4 2
22	69-25336-1	• TEE ASSY, FRONT SPAR STATION 264.46 INBOARD WING. . . ATTACHMENT (LH ONLY) (SEE 27-7, FIG. 22)								1
22	69-25336-2	• TEE ASSY, FRONT SPAR STATION 264.46 INBOARD WING. . . ATTACHMENT (RH ONLY) (SEE 27-7, FIG. 22) ATTACHING PARTS • BOLT. • BOLT. • WASHER. • WASHER. • NUT -----*								1 4 4 4 4 8
23	69-25334-5	• TEE ASSY, FRONT SPAR STATION 247.39 INBOARD WING. . . ATTACHMENT (LH ONLY) (SEE 27-7, FIG. 22)								1
23	69-25334-6	• TEE ASSY, FRONT SPAR STATION 247.39 INBOARD WING. . . ATTACHMENT (RH ONLY) (SEE 27-7, FIG. 22) ATTACHING PARTS • BOLT. • COLLAR. • BOLT. -----*								1 4 4 2
24	69-22975-1	• TEE ASSY, FRONT SPAR STATION 195.66 INBOARD WING. . . ATTACHMENT (LH ONLY) (SEE 27-7, FIG. 22)								1
24	69-22975-2	• TEE ASSY, FRONT SPAR STATION 195.66 INBOARD WING. . . ATTACHMENT (RH ONLY) (SEE 27-7, FIG. 22)								1
25	69-22945-1	• TEE ASSY, FRONT SPAR STATION 174.70 INBOARD WING. . . ATTACHMENT (LH ONLY) (SEE 27-7, FIG. 22)								1
25	69-22945-2	• TEE ASSY, FRONT SPAR STATION 174.20 INBOARD WING. . . ATTACHMENT (RH ONLY) (SEE 27-7, FIG. 22) ATTACHING PARTS • BOLT. • COLLAR. • BOLT. • COLLAR.								1 4 4 4 4
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3	BACB30FN8-9 BACC30M8 BACB30P8-9	.	BOLT, (USED WITH 69-22945-1 AND -2)		4
		.	COLLAR, (USED WITH 69-22945-1 AND -2)		4
		.	BOLT, (USED WITH 69-22975-1 AND -2)		4
			-----*-----		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

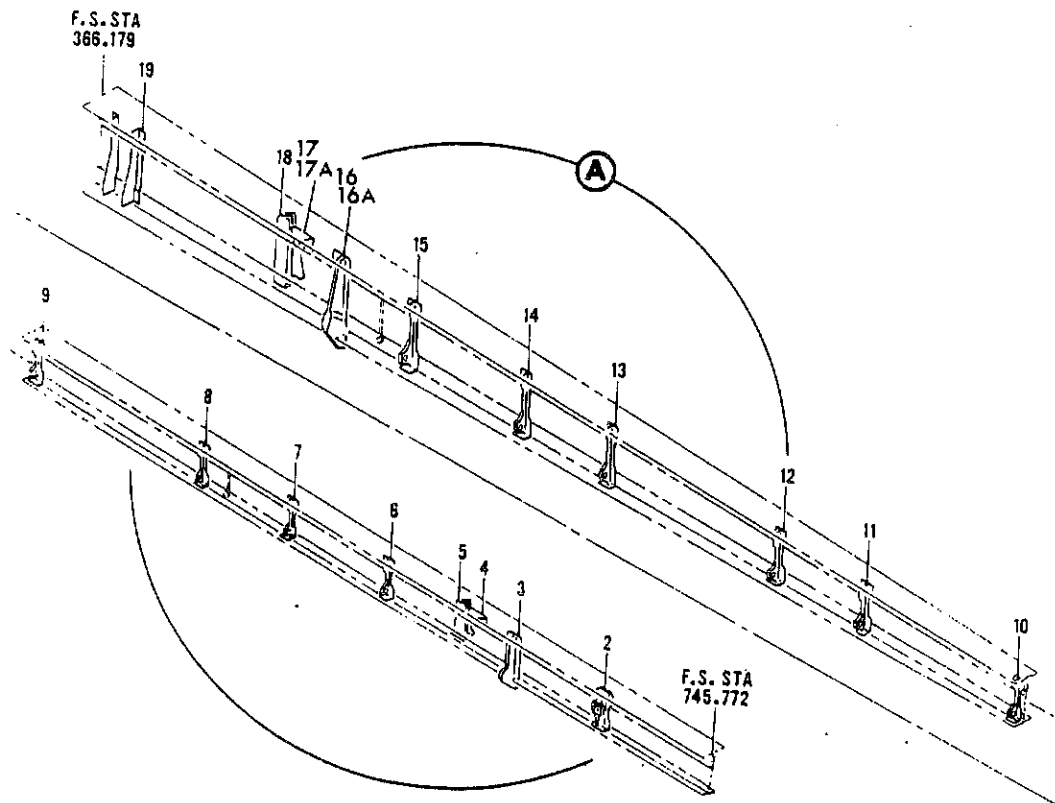
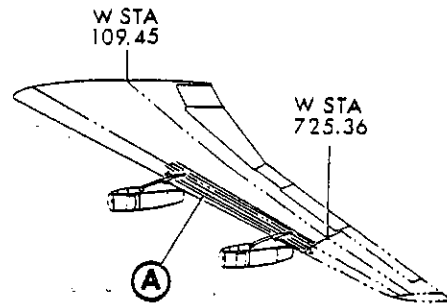


FIGURE 6. SPAR INSTL, WING STATION 360 TO PRODUCTION BREAK FRONT

MISSING ITEM NUMBERS ARE NOT APPLICABLE

MISSING ITEM NUMBERS ARE NOT APPLICABLE


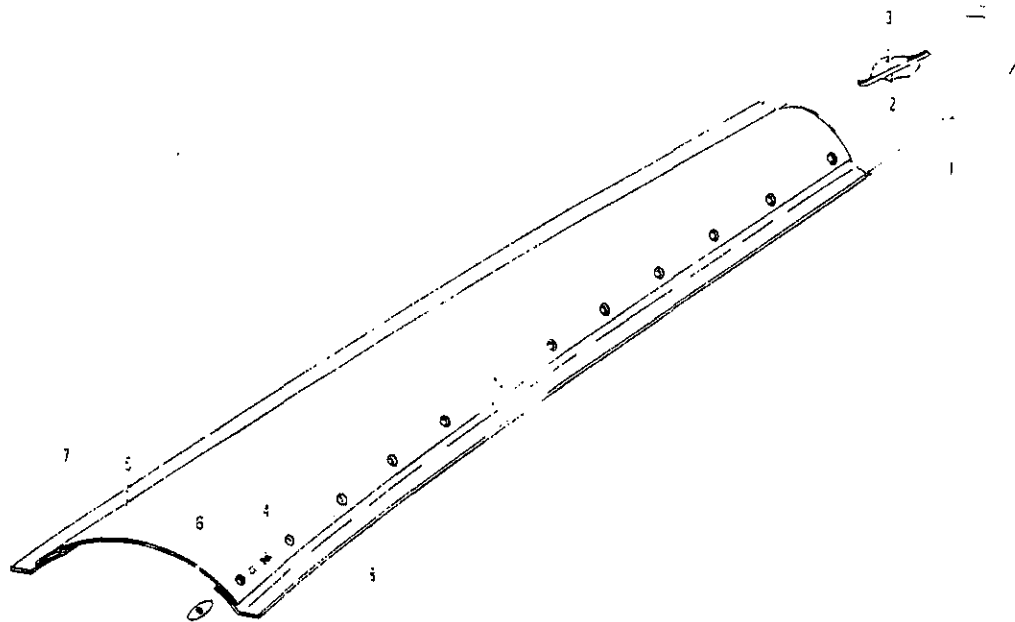


FIGURE 7. FAIRING INSTL. WING BUTTOCK LINE 315 UPPER SURFACE

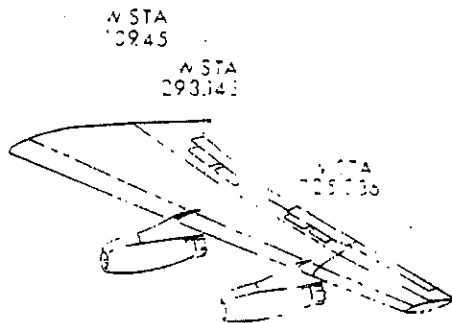

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
7	50-6325-3001	FAIRING INSTL, WING BUTTOCK LINE 315 UPPER SURFACE (LH) (SEE FIG. 2, ITEM 40)		RF
	50-6325-3002	FAIRING INSTL, WING BUTTOCK LINE 315 UPPER SURFACE (RH) (SEE FIG. 2, ITEM 40)		RF
	50-6325-3003	. FAIRING ASSY, WING BUTTOCK LINE 315 UPPER SURFACE (LH ONLY)		1
	50-6325-3004	. FAIRING ASSY, WING BUTTOCK LINE 315 UPPER SURFACE (RH ONLY)		1
1	50-6325-3011	. . FAIRING, WING BUTTOCK LINE 315 UPPER SURFACE (LH. . ONLY)		1
1	50-6325-3012	. . FAIRING, WING BUTTOCK LINE 315 UPPER SURFACE (RH. . ONLY)		1
2	50-6325-3007	. SEAL, WING BUTTOCK LINE 315 UPPER SURFACE FAIRING . . STRIP		1
3	50-6325-3008	. SEAL, WING BUTTOCK LINE 315 UPPER SURFACE FAIRING . . STRIP		1
4	NAS514P428-B	. SCREW		25
5	50-6325-3009	. FAIRING ASSY, WING BUTTOCK LINE 315 UPPER SURFACE (LH ONLY)		1
5	50-6325-3010	. FAIRING ASSY, WING BUTTOCK LINE 315 UPPER SURFACE (RH ONLY)		1
6	NAS684A4	. NUTPLATE.		25
7	50-6325-2011	. ANGLE, WING BUTTOCK LINE 315 UPPER SURFACE FAIRING. . (LH ONLY)		1
7	50-6325-2012	. ANGLE, WING BUTTOCK LINE 315 UPPER SURFACE FAIRING. . (RH ONLY)		1
8	50-6325-2013	. ANGLE, WING BUTTOCK LINE 315 UPPER SURFACE FAIRING. . (LH ONLY)		1
8	50-6325-2014	. ANGLE, WING BUTTOCK LINE 315 UPPER SURFACE FAIRING. . (RH ONLY)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

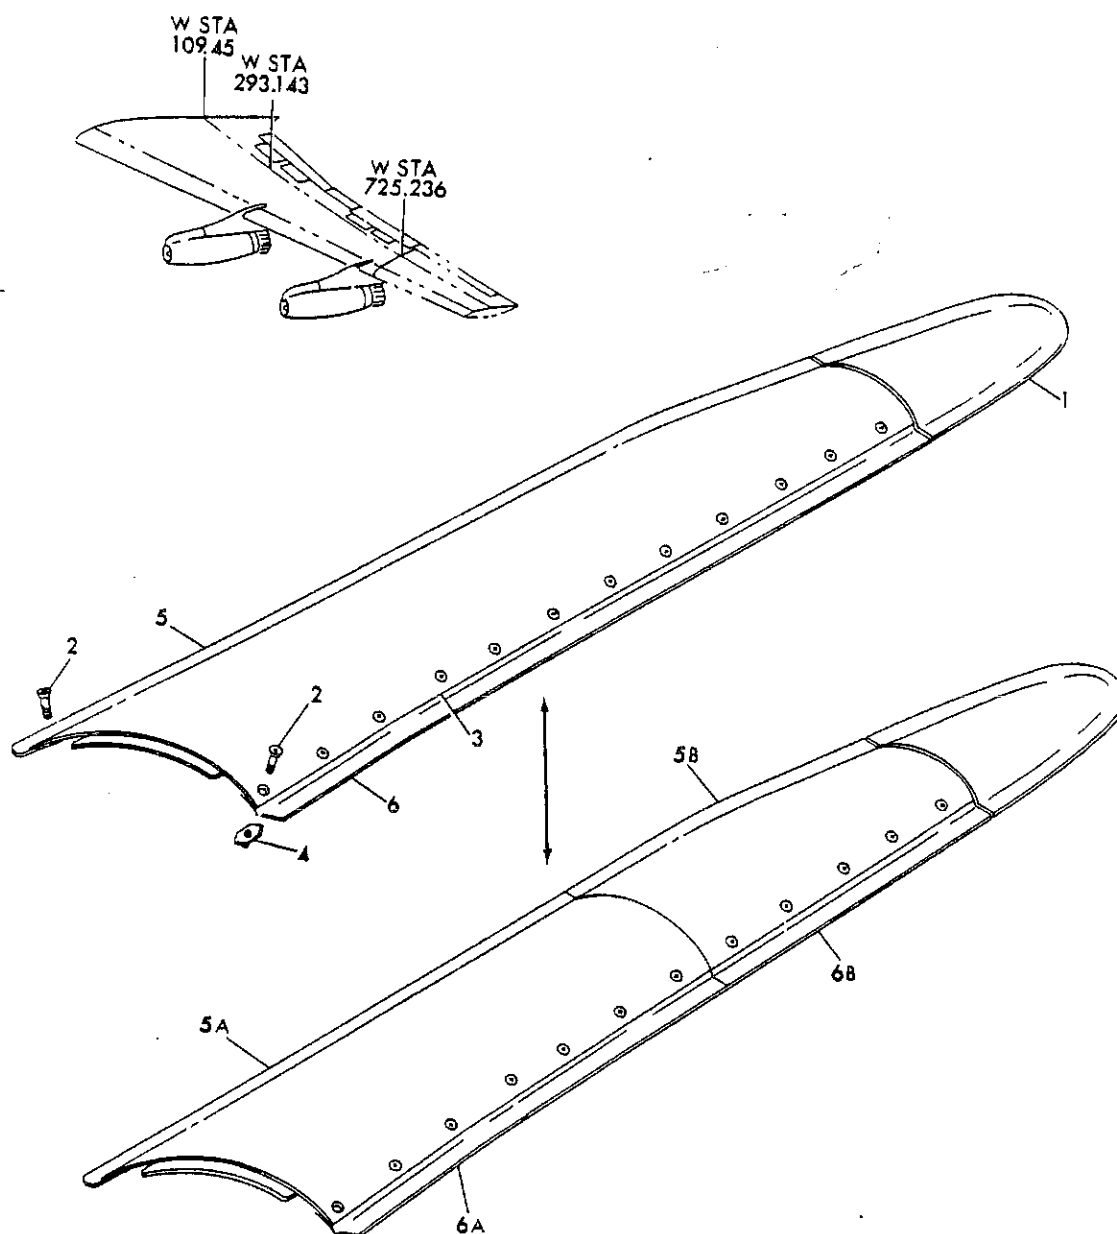


FIGURE 8, FAIRING INSTL, WING BUTTOCK LINE 545 UPPER SURFACE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8	50-6326-3001		FAIRING INSTL, WING BUTTOCK LINE 545 UPPER SURFACE (LH) (SEE FIG. 2, ITEM 41)		RF
	50-6326-3002		FAIRING INSTL, WING BUTTOCK LINE 545 UPPER SURFACE (RH) (SEE FIG. 2)		RF
1	50-6326-3005		. FAIRING ASSY, WING BUTTOCK LINE 545 UPPER SURFACE (LH ONLY)		1
1	50-6326-3006		. FAIRING ASSY, WING BUTTOCK LINE 545 UPPER SURFACE (RH ONLY)		1
2	NAS514P428-8		. SCREW		26
3	50-6326-3009		. FAIRING ASSY, WING BUTTOCK LINE 545 UPPER SURFACE (LH ONLY)		1
3	50-6326-3010		. FAIRING ASSY, WING BUTTOCK LINE 545 UPPER SURFACE (RH ONLY)		1
4	NAS686A4		. NUTPLATE		13
5	50-6326-2011		. ANGLE, WING BUTTOCK LINE 545 UPPER SURFACE FAIRING. . (LH ONLY)		1
5	50-6326-2012		. ANGLE, WING BUTTOCK LINE 545 UPPER SURFACE FAIRING. . (RH ONLY)		1
6	50-6326-2013		. ANGLE, WING BUTTOCK LINE 545 UPPER SURFACE FAIRING. . (LH ONLY)		1
6	50-6326-2014		. ANGLE, WING BUTTOCK LINE 545 UPPER SURFACE FAIRING. . (RH ONLY)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

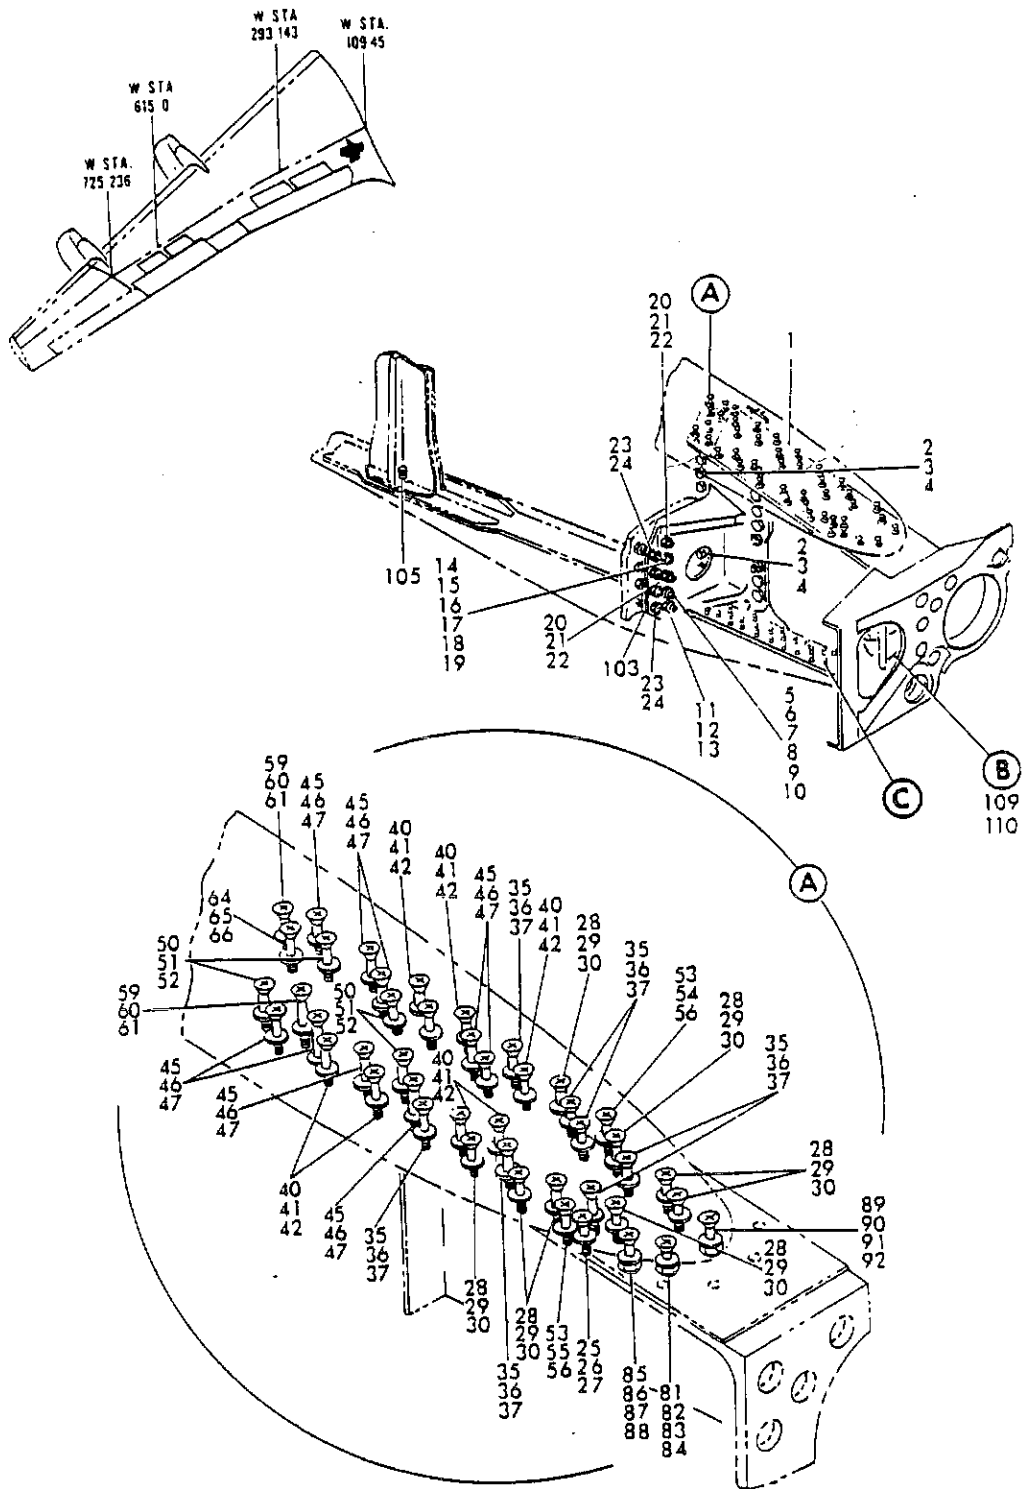


FIGURE 9. RIB INSTL, WING BUTTOK LINE 59.24 (WINGS ONLY) (SHEET 1)


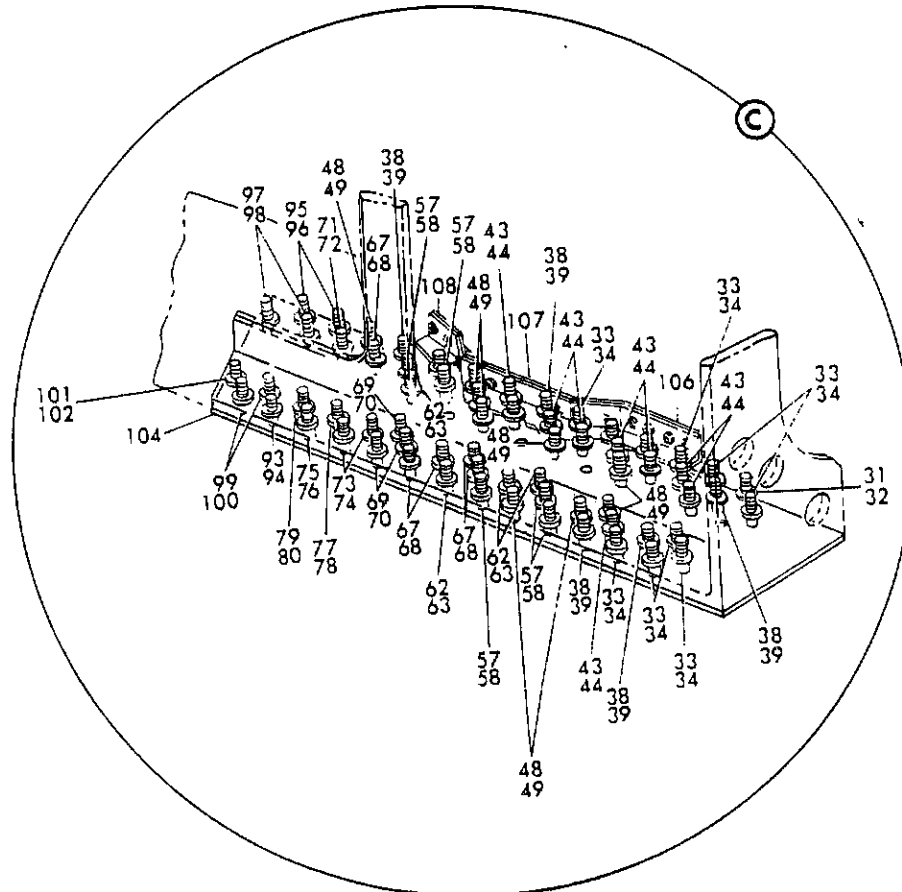


FIGURE 9. RIB INSTL. WING BUTTOK LINE 59.24 (WINGS ONLY) (SHEET 2)



MISSING ITEM NUMBERS ARE NOT APPLICABLE

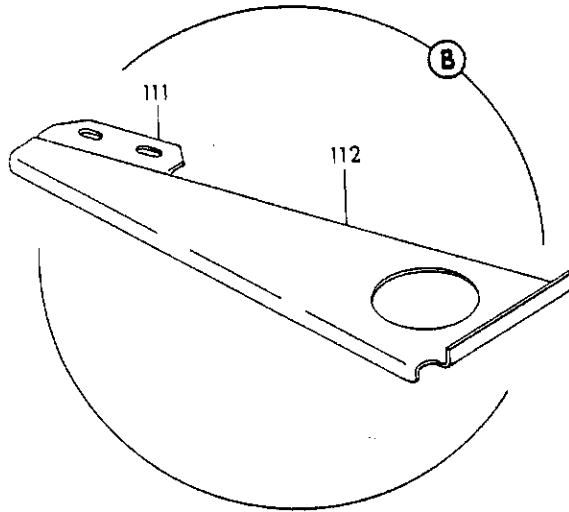

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
9	64	BACB30ABP8-33A	BOLT.	.	.	.	.	.	0101	1
	65	BACB30ABP8-35A	BOLT.	.	.	.	.	.	0299	1
	66	AN960-8	WASHER.	.	.	.	.	.		AR
	67	BACB30ABP8-35A	BOLT.	.	.	.	.	.		5
	68	AN960-8	WASHER.	.	.	.	.	.		AR
	69	BACB30ABP8-37A	BOLT.	.	.	.	.	.		3
	70	AN960-8	WASHER.	.	.	.	.	.		AR
	71	BACB30ABP8-39A	BOLT.	.	.	.	.	.		1
	72	AN960-8	WASHER.	.	.	.	.	.		AR
	73	BACB30ABP8-41A	BOLT.	.	.	.	.	.		2
	74	AN960-8	WASHER.	.	.	.	.	.		AR
	75	BACB30ABP8-43A	BOLT.	.	.	.	.	.		1
	76	AN960-8	WASHER.	.	.	.	.	.		AR
	77	BACB30ABP8-45A	BOLT.	.	.	.	.	.		1
	78	AN960-8	WASHER.	.	.	.	.	.		AR
	79	BACB30ABP8-49A	BOLT.	.	.	.	.	.		1
	80	AN960-8	WASHER.	.	.	.	.	.		AR
	81	BACB30ABP6-15A	BOLT.	.	.	.	.	.	0101	1
	82	BACB30ABP6-17A	BOLT.	.	.	.	.	.	0299	1
	83	AN960-616	WASHER.	.	.	.	.	.		AR
	84	NAS679A6	NUT	.	.	.	.	.		1
	85	BACB30ABP6-17A	BOLT.	.	.	.	.	.	0101	1
	86	BACB30ABP6-19A	BOLT.	.	.	.	.	.	0299	1
	87	AN960-616	WASHER.	.	.	.	.	.		AR
	88	NAS679A6	NUT	.	.	.	.	.		1
	89	BACB30ABP6-25A	BOLT.	.	.	.	.	.	0101	1
	90	BACB30ABP6-27A	BOLT.	.	.	.	.	.	0299	1
	91	AN960-616	WASHER.	.	.	.	.	.		AR
	92	NAS679A6	NUT	.	.	.	.	.		1
	93	BACB30ABP10-31A	BOLT.	.	.	.	.	.		1
	94	AN960-1016	WASHER.	.	.	.	.	.		AR
	95	BACB30ABP10-31A	BOLT.	.	.	.	.	.		2
	96	AN960-1016	WASHER.	.	.	.	.	.		AR
	97	BACB30ABP10-39A	BOLT.	.	.	.	.	.		2
	98	AN960-1016	WASHER.	.	.	.	.	.		AR
	99	BACB30ABP10-53A	BOLT.	.	.	.	.	.		2
	100	AN960-1016	WASHER.	.	.	.	.	.		AR
	101	BACB30ABP10-55A	BOLT.	.	.	.	.	.		1
	102	AN960-1016	WASHER.	.	.	.	.	.		AR
			-----*							
R R R R R R R	103	64-1012-73	SHIM, WING BUTTOCK LINE 59.24 RIB SOLID	.	.	.	.	.		AR
	103	64-1012-74	SHIM, WING BUTTOCK LINE 59.24 RIB SOLID	.	.	.	.	.		AR
	103	64-1012-75	SHIM, WING BUTTOCK LINE 59.24 RIB LAMINATED	.	.	.	.	.		AR
	103	64-1012-76	SHIM.	.	.	.	.	.		1
	104	64-1012-105	SHIM, WING BUTTOCK LINE 59.24 RIB	.	.	.	.	.		1
		65-1149-1	CHORD ASSY, WING BUTTOCK LINE 59.24 EXTERNAL LOWER.	.	.	.	.	.	0150	1
			(LH ONLY)	.	.	.	.	.		
		65-1149-7	CHORD ASSY, WING BUTTOCK LINE 59.24 EXTERNAL LOWER.	.	.	.	.	.	5199	1
			(LH ONLY)	.	.	.	.	.		
		65-1149-2	CHORD ASSY, WING BUTTOCK LINE 59.24 EXTERNAL LOWER.	.	.	.	.	.	0150	1
			(RH ONLY)	.	.	.	.	.		
		65-1149-8	CHORD ASSY, WING BUTTOCK LINE 59.24 EXTERNAL LOWER.	.	.	.	.	.	5199	1
			(RH ONLY)	.	.	.	.	.		
	105	BACB13P3CN2	SLEEVE.	.	.	.	.	.		1
	106	69-18158-1	SEAL ASSY, WING BUTTOCK LINE 59.24 RIB (LH ONLY) (SEE FIG. 10)	.	.	.	.	.		1
	106	69-18158-2	SEAL ASSY, WING BUTTOCK LINE 59.24 RIB (RH ONLY) (SEE FIG. 10)	.	.	.	.	.		1
	107	69-18158-3	SEAL ASSY, WING BUTTOCK LINE 59.24 RIB (LH ONLY) (SEE FIG. 10)	.	.	.	.	.		1
	107	69-18158-4	SEAL ASSY, WING BUTTOCK LINE 59.24 RIB (RH ONLY) (SEE FIG. 10)	.	.	.	.	.		1
	108	69-18158-5	SEAL ASSY, WING BUTTOCK LINE 59.24 RIB (LH ONLY) (SEE FIG. 10)	.	.	.	.	.		1
	108	69-18158-6	SEAL ASSY, WING BUTTOCK LINE 59.24 RIB (RH ONLY) (SEE FIG. 10)	.	.	.	.	.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

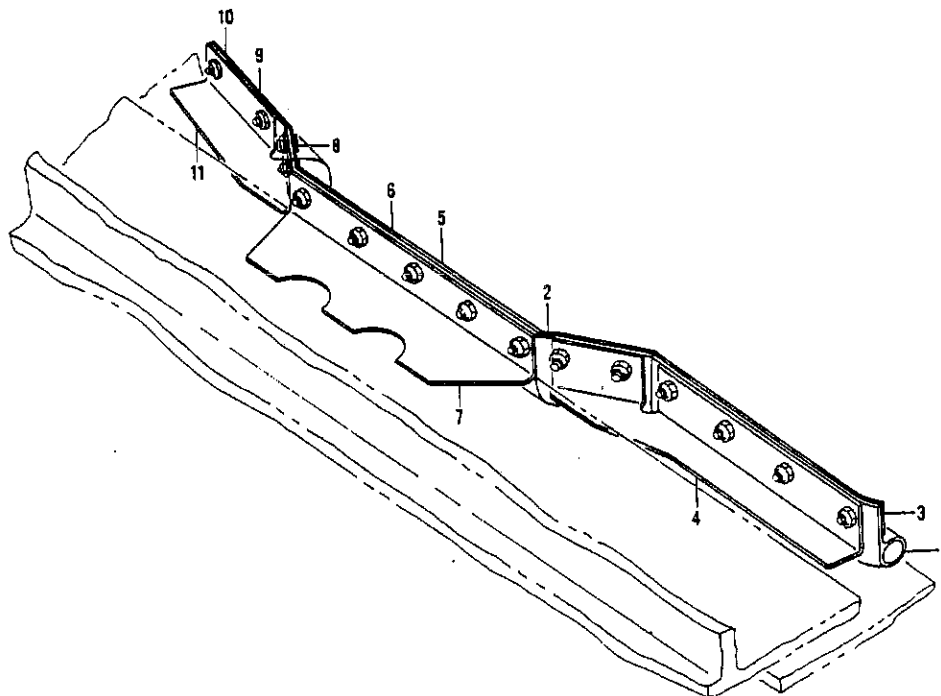
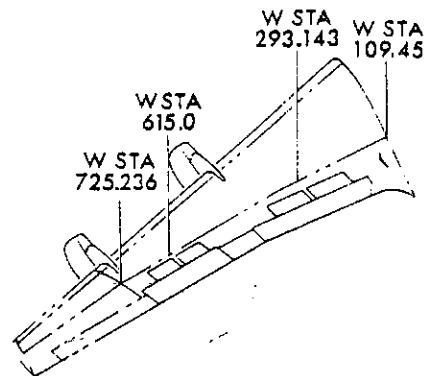


FIGURE 10. SEAL ASSY, WING BUTTOCK LINE 59.24 R18

BOEING *707*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
10	69-18158-1	SEAL ASSY, WING BUTTOCK LINE 59.24 RIB.		RF
	69-18158-2	. SEAL ASSY, WING BUTTOCK LINE 59.24 RIB (LH) (SEE FIG. 9, ITEM 106)		RF
1	69-18158-13	. SEAL, WING BUTTOCK LINE 59.24 RIB (EXTRUSION NO.. BAC1530-6 X 6.5 IN. LG) (LH ONLY)		1
1	69-18158-14	. SEAL, WING BUTTOCK LINE 59.24 RIB (EXTRUSION NO.. BAC1530-6 X 6.5 IN. LG) (RH ONLY)		1
2	69-18158-15	. SEAL, WING BUTTOCK LINE 59.24 RIB (EXTRUSION NO.. BAC1530-6 X 2.5 IN. LG) (LH ONLY)		1
2	69-18158-16	. SEAL, WING BUTTOCK LINE 59.24 RIB (EXTRUSION NO.. BAC1530-6 X 2.5 IN. LG) (RH ONLY)		1
	NAS601-5 NAS679A06W	ATTACHING PARTS . SCREW NUT		6 6
3	69-18158-23	. RETAINER, WING BUTTOCK LINE 59.24 RIB SEAL.		1
4	69-18158-7	. ANGLE, WING BUTTOCK LINE 59.24 RIB SEAL SUPPORT (LH ONLY)		1
4	69-18158-8	. ANGLE, WING BUTTOCK LINE 59.24 RIB SEAL SUPPORT (RH ONLY)		1
	69-18158-3	. SEAL ASSY, WING BUTTOCK LINE 59.24 RIB (LH) (SEE FIG. 9, ITEM 107)		RF
	69-18158-4	. SEAL ASSY, WING BUTTOCK LINE 59.24 RIB (RH) (SEE FIG. 9, ITEM 107)		RF
5	69-18158-17	. SEAL, WING BUTTOCK LINE 59.24 RIB (EXTRUSION NO.. BAC1530-6 X 7.0 IN. LG) (LH ONLY)		1
5	69-18158-18	. SEAL, WING BUTTOCK LINE 59.24 RIB (EXTRUSION NO.. BAC1530-6 X 7.0 IN. LG) (RH ONLY)		1
	NAS601-5 NAS679A06W	ATTACHING PARTS . SCREW NUT		5 5
6	69-18158-24	. RETAINER, WING BUTTOCK LINE 59.24 RIB SEAL.		1
7	69-18158-9	. ANGLE, WING BUTTOCK LINE 59.24 RIB SEAL SUPPORT (LH ONLY)		1
7	69-18158-10	. ANGLE, WING BUTTOCK LINE 59.24 RIB SEAL SUPPORT (RH ONLY)		1
	69-18158-5	. SEAL ASSY, WING BUTTOCK LINE 59.24 RIB (LH) (SEE FIG. 9, ITEM 108)		RF
	69-18158-6	. SEAL ASSY, WING BUTTOCK LINE 59.24 RIB (RH) (SEE FIG. 9, ITEM 108)		RF
8	69-18158-19	. SEAL, WING BUTTOCK LINE 59.24 RIB (EXTRUSION NO.. BAC1530-6 X 2.3 IN. LG) (LH ONLY)		1
8	69-18158-20	. SEAL, WING BUTTOCK LINE 59.24 RIB (EXTRUSION NO.. BAC1530-6 X 2.3 IN. LG) (RH ONLY)		1
9	69-18158-21	. SEAL, WING BUTTOCK LINE 59.24 RIB (EXTRUSION NO.. BAC1530-6 X 3.3 IN. LG) (LH ONLY)		1
9	69-18158-22	. SEAL, WING BUTTOCK LINE 59.24 RIB (EXTRUSION NO.. BAC1530-6 X 3.3 IN. LG) (RH ONLY)		1
	NAS601-5 NAS679A06W	ATTACHING PARTS . SCREW NUT		4 4
10	69-18158-25	. RETAINER, WING BUTTOCK LINE 59.24 RIB SEAL.		1
11	69-18158-11	. ANGLE, WING BUTTOCK LINE 59.24 RIB SEAL SUPPORT (LH ONLY)		1
11	69-18158-12	. ANGLE, WING BUTTOCK LINE 59.24 RIB SEAL SUPPORT (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

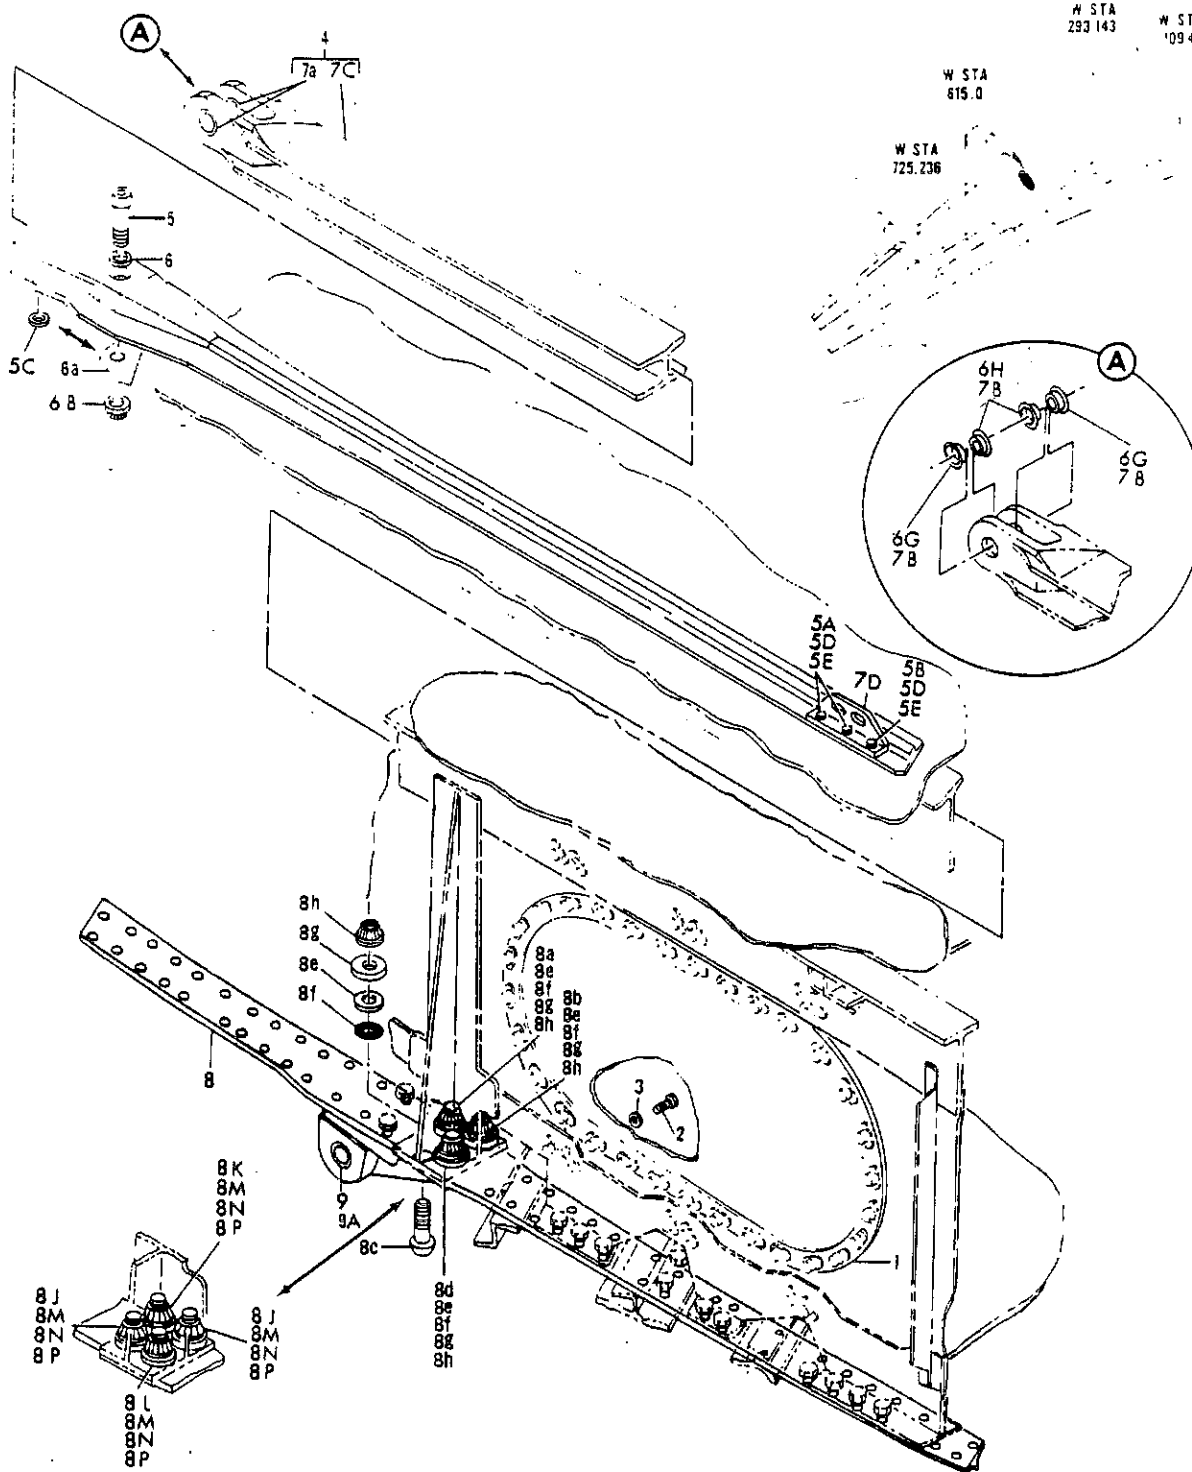


FIGURE 11. RIB INSTL, WING BUTTOCK LINE 315



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
11	64-1027-1		RIB INSTL, WING BUTTOCK LINE 315 (LH) (SEE FIG. 2, . . . ITEM 4)		RF
	64-1027-2		RIB INSTL, WING BUTTOCK LINE 315 (RH) (SEE FIG. 2, . . . ITEM 4)		RF
	64-1027-3		. RIB ASSY, WING BUTTOCK LINE 315 (LH ONLY)		1
	64-1027-4		. RIB ASSY, WING BUTTOCK LINE 315 (RH ONLY)		1
1	64-1027-107		. . . DOOR ASSY, RIB ACCESS (LH ONLY)		1
1	64-1027-108		. . . DOOR ASSY, RIB ACCESS (RH ONLY)		1
			ATTACHING PARTS		
2	AN4-6A		. . . BOLT.		30
3	AN960PD416		. . . WASHER.		30
			-----*		
4	64-1027-101		. SUPPORT ASSY, WING BUTTOCK LINE 315 NACELLE UPPER . . (ALTERED FROM;50-6885-21) (DELETED BY SB 3173) (LH ONLY) (OPTIONAL 64-1027-119)	0150	1
4	64-1027-119		. SUPPORT ASSY, WING BUTTOCK LINE 315 NACELLE UPPER . . (ALTERED FROM;50-6885-33) (DELETED BY SB 3173) (LH ONLY) (OPTIONAL TO 64-1027-101)	0150	1
4	65-68474-7		. SUPPORT ASSY, WING BUTTOCK LINE 315 NACELLE UPPER . . (ADDED BY SB 3173) (LH ONLY)	0150	1
4	64-1027-187		. SUPPORT ASSY, WING BUTTOCK LINE 315 NACELLE UPPER . . (ALTERED FROM;50-6885-41) (LH ONLY)	5199	1
4	64-1027-102		. SUPPORT ASSY, WING BUTTOCK LINE 315 NACELLE UPPER . . (ALTERED FROM;50-6885-22) (DELETED BY SB 3173) (RH ONLY) (OPTIONAL 64-1027-120)	0150	1
4	64-1027-120		. SUPPORT ASSY, WING BUTTOCK LINE 315 NACELLE UPPER . . (ALTERED FROM;50-6885-34) (DELETED BY SB 3173) (RH ONLY) (OPTIONAL TO 64-1027-102)	0150	1
4	64-1027-188		. SUPPORT ASSY, WING BUTTOCK LINE 315 NACELLE UPPER . . (ALTERED FROM;50-6885-42) (RH ONLY)	5199	1
4	65-68474-8		. SUPPORT ASSY, WING BUTTOCK LINE 315 NACELLE UPPER . . (ADDED BY SB 3173) (RH ONLY)	0150	1
			ATTACHING PARTS		
5	BACB30MT7T30		. . . BOLT.		1
6	MS20002C7		. . . WASHER.		1
6A	64-1027-91		. SHIM, BUTTOCK LINE 315 WING RIB LAMINATED		1
6B	BACN10CT7		. . . NUT		1
			-----*		
7A	69-2860-60		. . . BUSHING, PRESSED FIT STRUCTURAL (USED ON. 64-1027-101, 102, 119 AND 120)	0150	2
7B	69-67146-1		. . . BUSHING, FITTING STRUCTURAL (ADDED BY SB 3173, . . . EIS 64059 AND RAF 7211.019-2251)	0150	4
7B	69-67146-1		. . . BUSHING, FITTING STRUCTURAL (USED ON 64-1027-187, . -188)	5199	4
7C	50-6885-29		. . . SUPPORT, (USED ON 50-6885-23 AND 64-1027-101) . . .	0150	1
7C	50-6885-29		. . . SUPPORT, (DELETED BY SB 3173) (USED ON 64-1027-101)	0150	1
7C	50-6885-35		. . . SUPPORT, (USED ON 64-1027-119)	0150	1
7C	50-6885-43		. . . SUPPORT, (USED ON 64-1027-187)	5199	1
7C	50-6885-30		. . . SUPPORT, (USED ON 50-6885-24 AND 64-1027-102) . . .	0150	1
7C	50-6885-30		. . . SUPPORT, (DELETED BY SB 3173) (USED ON 64-1027-102)	0150	1
7C	50-6885-36		. . . SUPPORT, (USED ON 64-1027-120)	0150	1
7C	50-6885-36		. . . SUPPORT, (DELETED BY SB 3173) (USED ON 64-1027-120)	0150	1
7C	50-6885-44		. . . SUPPORT, (USED ON 64-1027-188)	5199	1
7C	64-1027-101		. . . SUPPORT, (USED ON 64-68474-7) (ADDED BY SB 3173) . .	0150	1
7C	64-1027-102		. . . SUPPORT, (USED ON 64-68474-8) (ADDED BY SB 3173) . .	0150	1
7D	69-3583-1		. . . ANGLE, (LH ONLY)		1
7D	69-3583-2		. . . ANGLE, (RH ONLY)		1
8	5-72319-3013		. SUPPORT ASSY, INBOARD NACELLE AFT DRAG (LH ONLY) . . . (OPTIONAL 5-72319-3017)	0150	1
8	5-72319-3017		. SUPPORT ASSY, INBOARD NACELLE AFT DRAG (LH ONLY) . . . (OPTIONAL TO 5-72319-3013)	0150	1
8	5-72319-3017		. SUPPORT ASSY, INBOARD NACELLE AFT DRAG (LH ONLY) . . .	5199	1
8	5-72319-3014		. SUPPORT ASSY, INBOARD NACELLE AFT DRAG (RH ONLY) . . . (OPTIONAL 5-72319-3018)	0150	1
8	5-72319-3018		. SUPPORT ASSY, INBOARD NACELLE AFT DRAG (RH ONLY) . . . (OPTIONAL TO 5-72319-3014)	0150	1
8	5-72319-3018		. SUPPORT ASSY, INBOARD NACELLE AFT DRAG (RH ONLY) . . . ATTACHING PARTS	5199	1
8A	MS20007-19		. . . BOLT.		1
8B	MS20007-20		. . . BOLT.		1
			MISSING ITEM NUMBERS ARE NOT APPLICABLE		

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
11	8C	MS20007-21	.	BOLT.	.	.	.	.		1
	8D	MS20007-22	.	BOLT.	.	.	.	.		1
	8E	MS20002C7	.	WASHER.	.	.	.	.		4
	8F	MS29513-111	.	PACKING	.	.	.	.		4
	8G	6-55097-14	.	WASHER, TENSION BOLT O RING SEAL.	.	.	.	.		4
	8H	BACN108370	.	NUT	.	.	.	.		4
9	69-2860-35	-----*								
		.	.	BUSHING, PRESSED FIT STRUCTURAL (USED ON.	.	.	.	.		1
				5-72319-3013, 3014, 3017 AND 3018)						
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

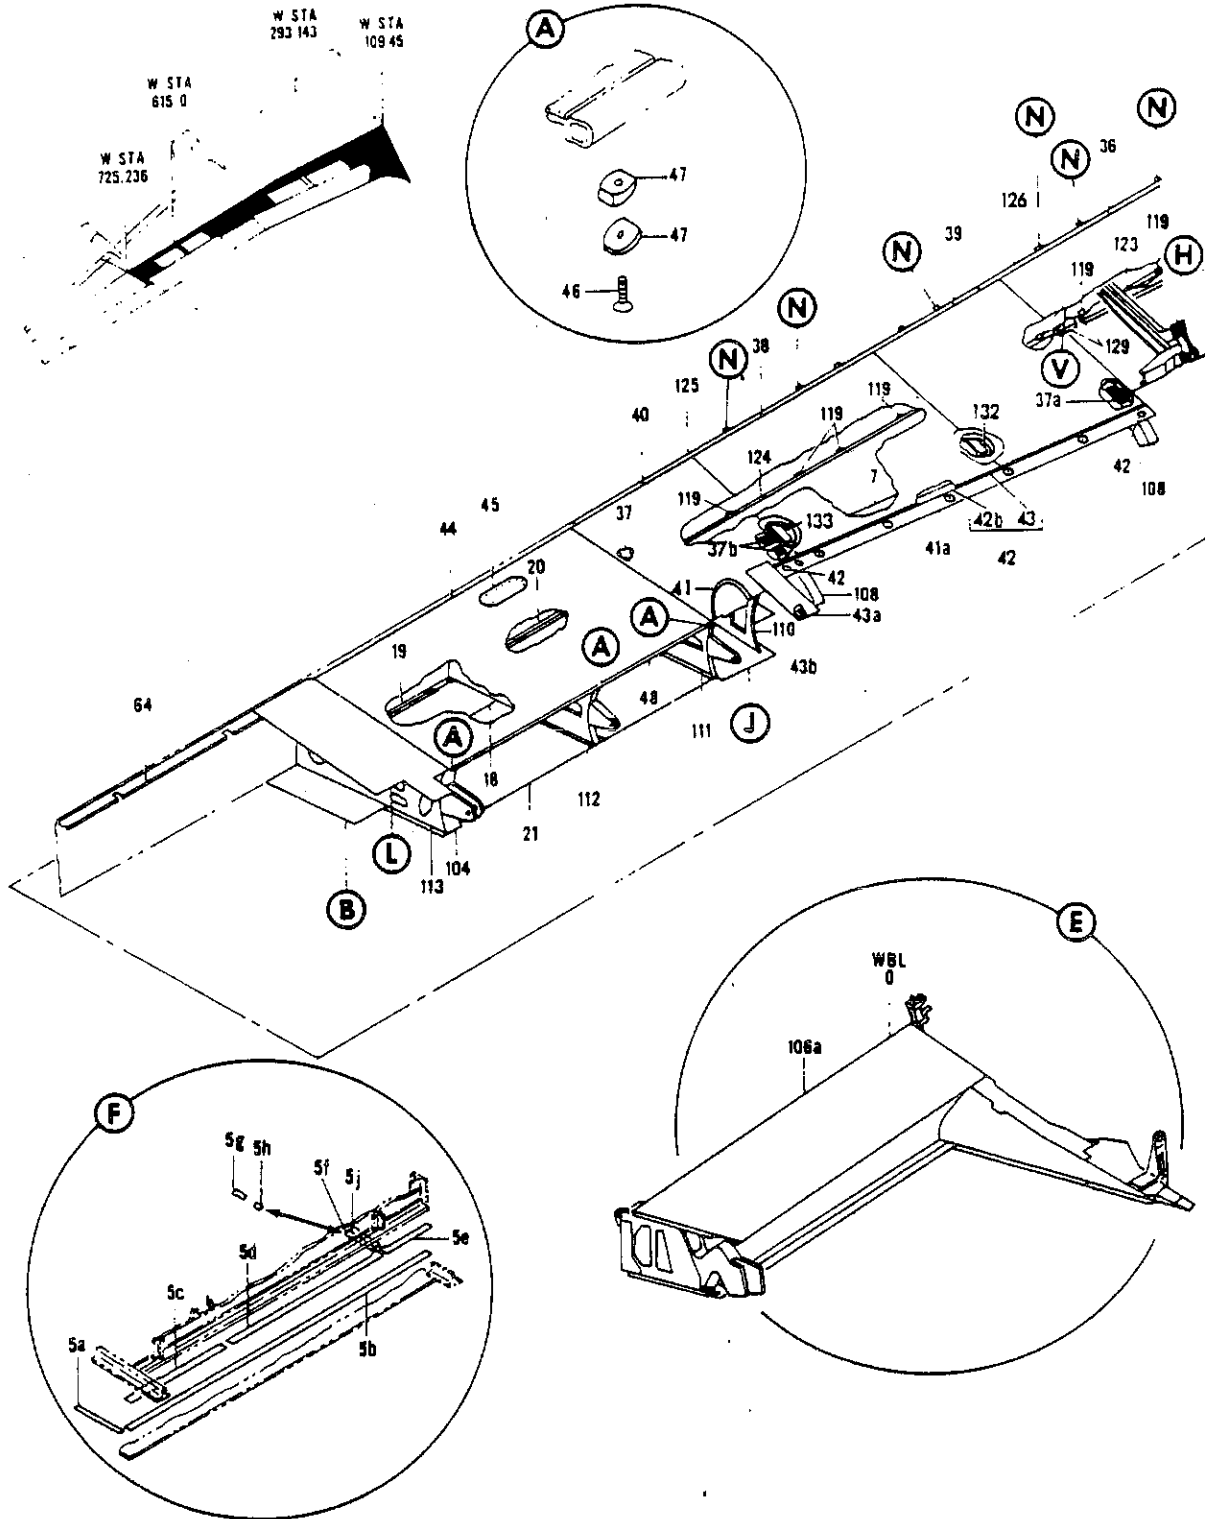


FIGURE 12. STRUCTURAL INSTL. SECTION 16 INBOARD WING (SHEET 1)

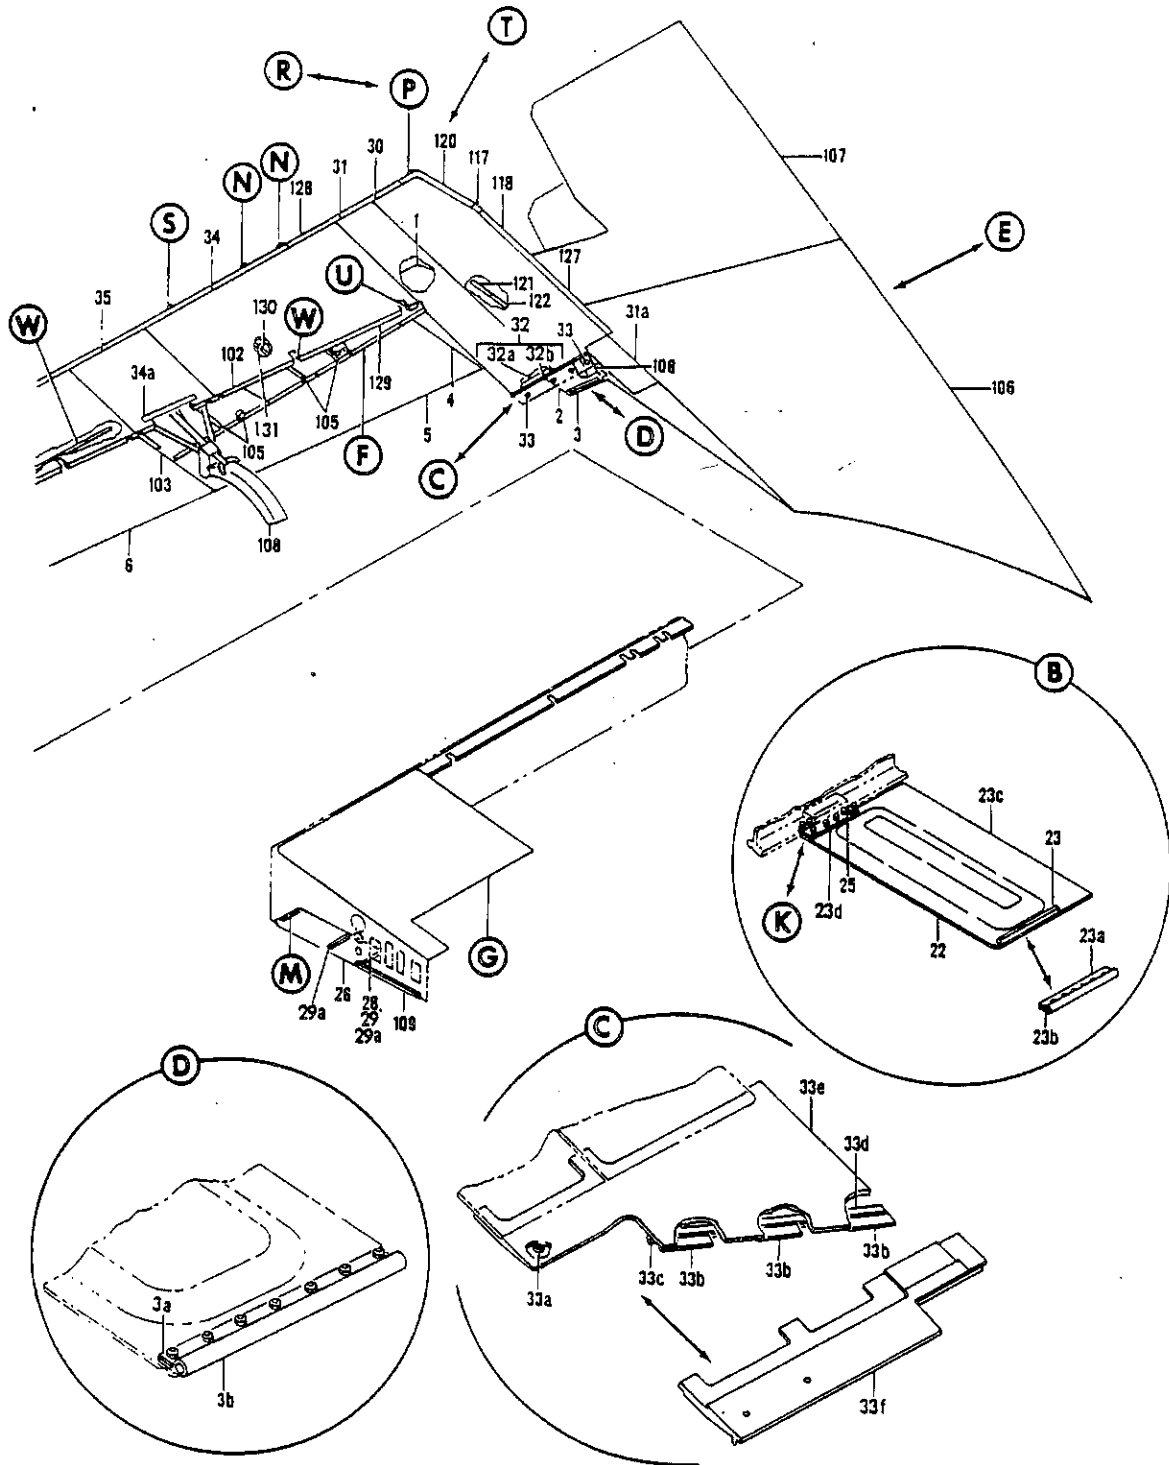


FIGURE 12. STRUCTURAL INSTL, SECTION 16 INBOARD WING (SHEET 2)

NOV 21/90

57-03-12

DETAILED PARTS LIST
57-03-12
PAGE 1

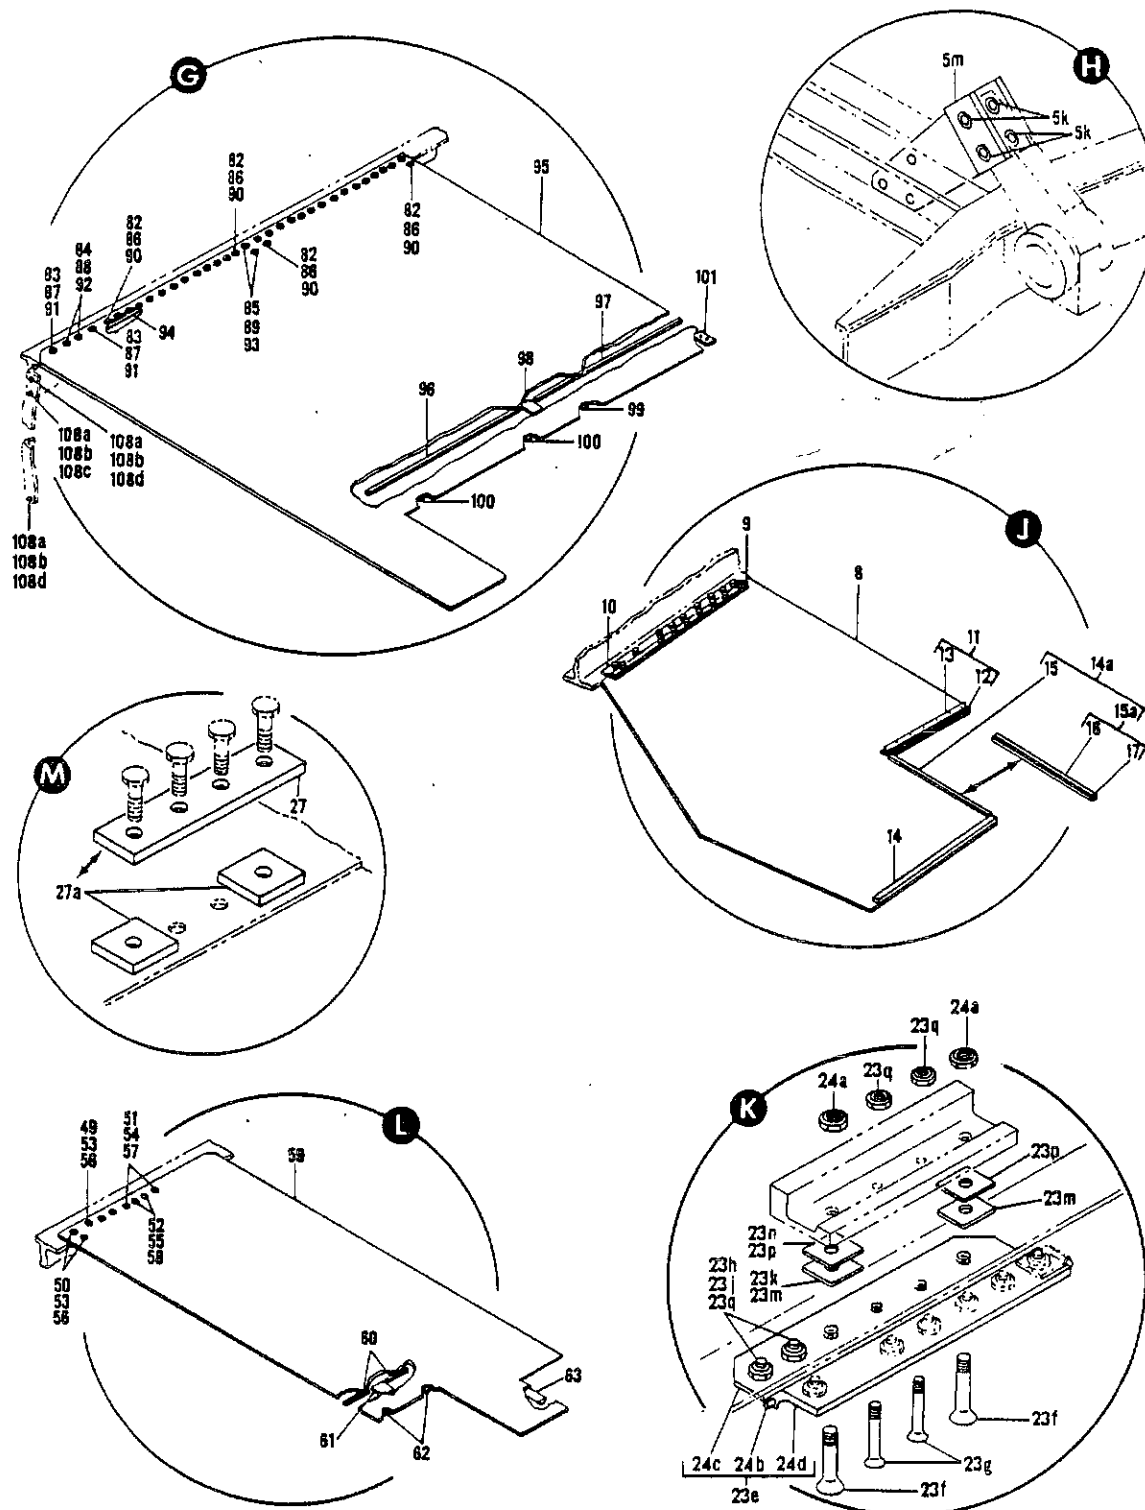


FIGURE 12. STRUCTURAL INSTL, SECTION 16 INBOARD WING (SHEET 3)

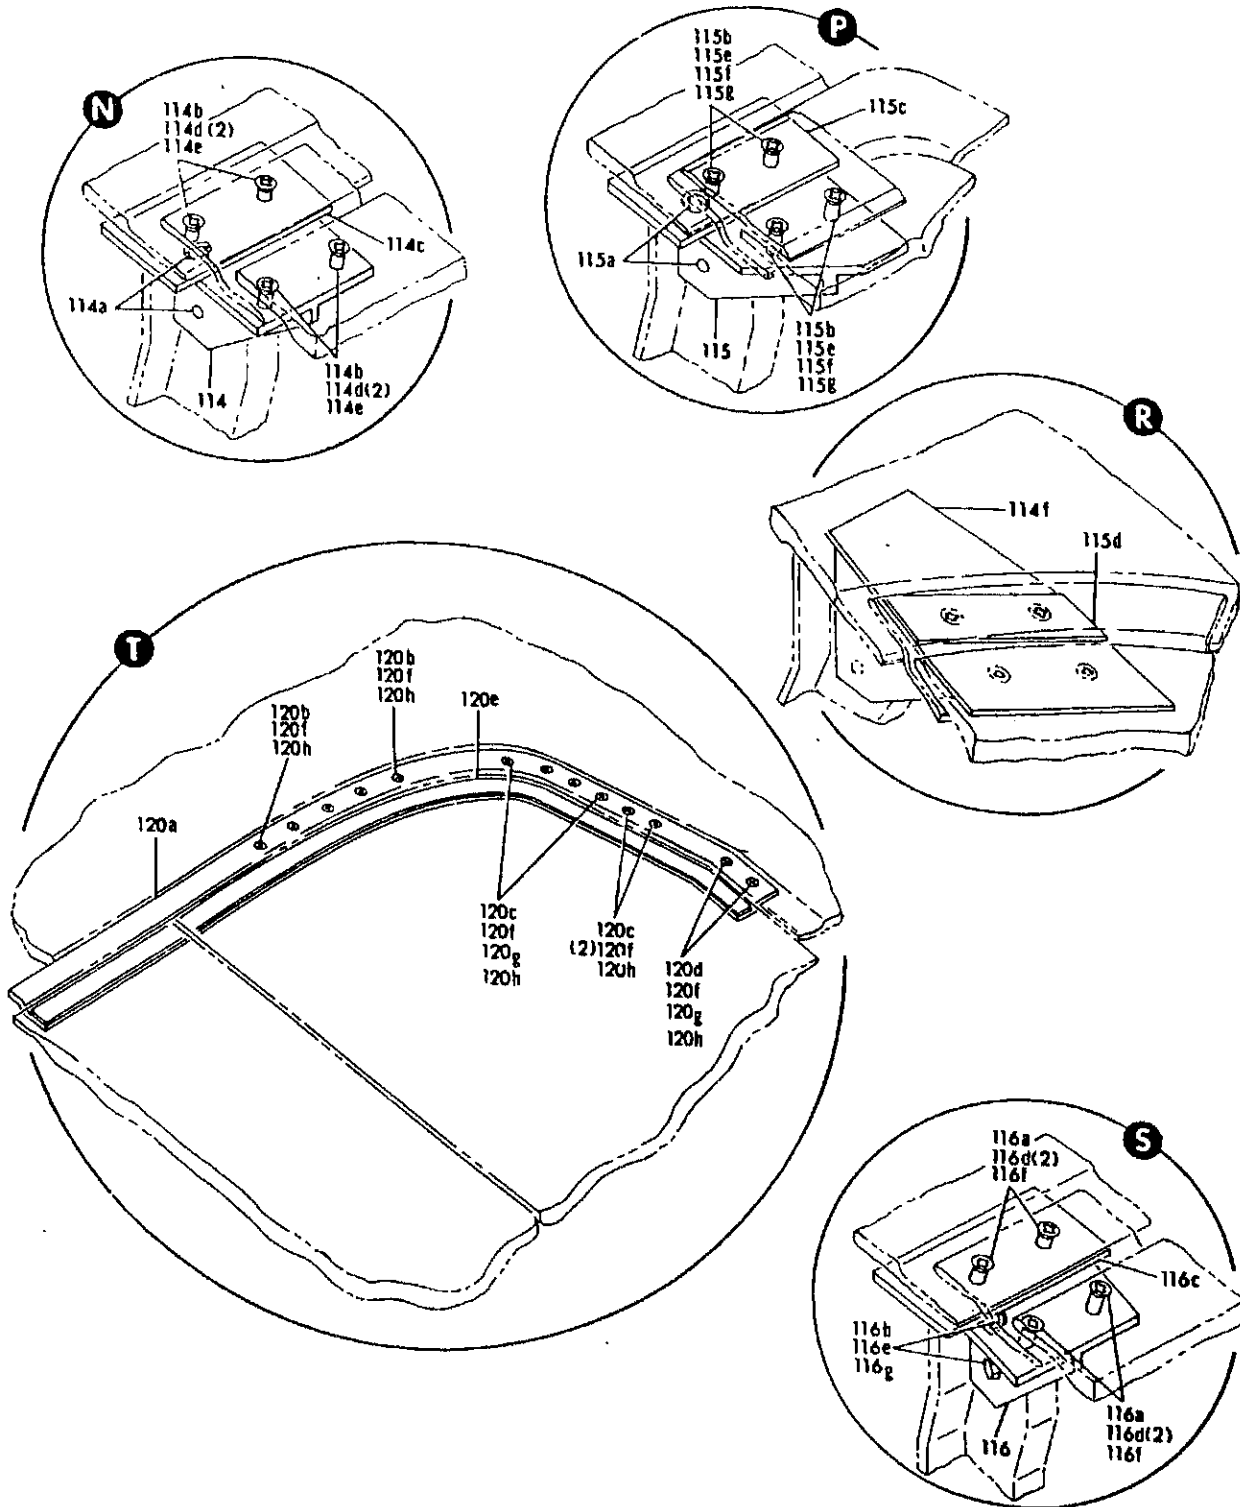


FIGURE 12. STRUCTURAL INSTL. SECTION 16 INBOARD WING (SHEET 4)

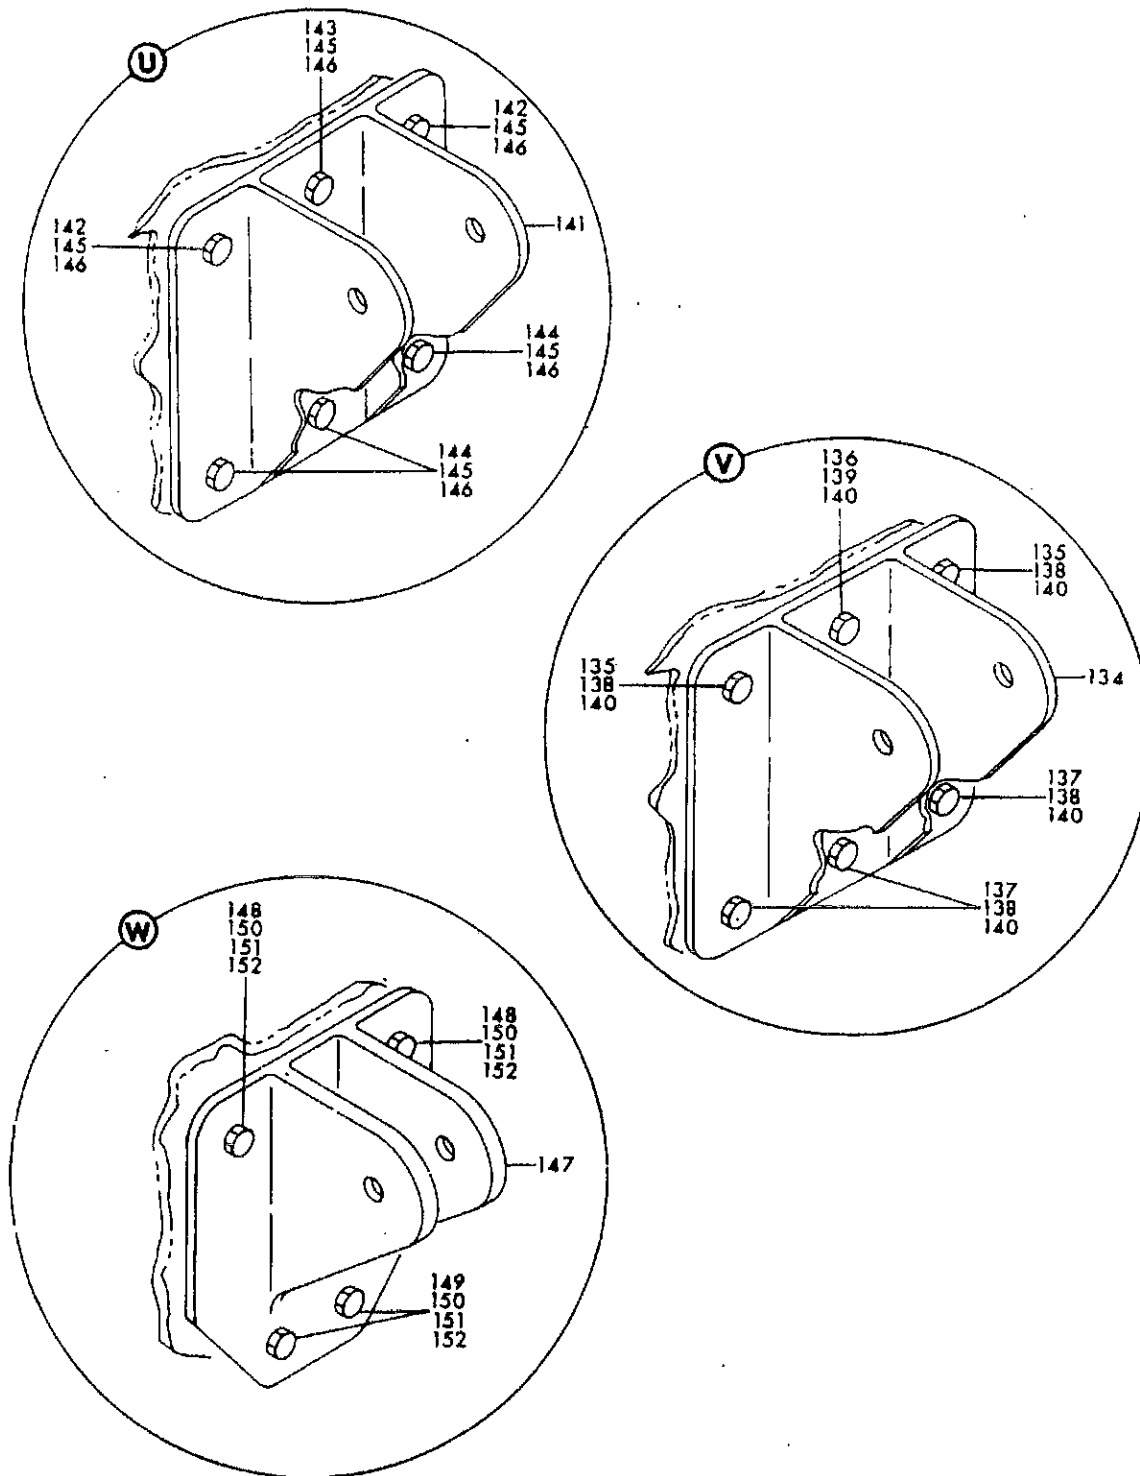


FIGURE 12. STRUCTURAL INSTL. SECTION 16 INBOARD WING (SHEET 5)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
12	65-1100-1	STRUCTURAL INSTL, SECTION 16 INBOARD WING (LH) (SEE . . FIG. 2, ITEM 30)		RF
	65-1100-2	STRUCTURAL INSTL, SECTION 16 INBOARD WING (RH) (SEE . . FIG. 2, ITEM 30)		RF
R	69-5410-1	. . PANEL INSTL, TRAILING EDGE ACCESS (LH ONLY)	0150	1
R	69-5410-9	. . PANEL INSTL, TRAILING EDGE ACCESS (LH ONLY)	5199	1
R	69-5410-2	. . PANEL INSTL, TRAILING EDGE ACCESS (RH ONLY)	0150	1
R	69-5410-10	. . PANEL INSTL, TRAILING EDGE ACCESS (RH ONLY)	5199	1
R	1 69-5410-3	 PANEL ASSY, TRAILING EDGE ACCESS (LH ONLY)	0150	1
R	1 69-5410-11	 PANEL ASSY, TRAILING EDGE ACCESS (LH ONLY)	5151	1
R	1 69-5410-11	 PANEL ASSY, TRAILING EDGE ACCESS (LH ONLY) (OPTIONAL TO 69-5410-21)	5299	1
R	1 69-5410-21	 PANEL ASSY, TRAILING EDGE ACCESS (LH ONLY) (OPTIONAL 69-5410-11)	5299	1
R	1 69-5410-4	 PANEL ASSY, TRAILING EDGE ACCESS (RH ONLY)	0150	1
R	1 69-5410-12	 PANEL ASSY, TRAILING EDGE ACCESS (RH ONLY)	5151	1
R	1 69-5410-12	 PANEL ASSY, TRAILING EDGE ACCESS (RH ONLY) (OPTIONAL TO 69-5410-22)	5299	1
R	1 69-5410-22	 PANEL ASSY, TRAILING EDGE ACCESS (RH ONLY) (OPTIONAL 69-5410-12)	5299	1
R		ATTACHING PARTS		
R	NAS517-3-2	 SCREW	0150	6
R	BACB30LU3-3	 BOLT	5199	6
R	NAS517-3-3	 SCREW	0150	7
R	BACB30LU3-4	 BOLT	5199	7
R	NAS517-3-4	 SCREW	0150	1
R	NAS517-3-5	 SCREW	0150	1
R	BACB30LU3-5	 BOLT	5199	2
R	NAS517-3-7	 SCREW	0150	22
R	BACB30LU3-6	 BOLT	5199	22
	65-1113-1	 PANEL INSTL, TRAILING EDGE STATION 36.844 TO 47.301 . LOWER (LH ONLY)		1
	65-1113-2	 PANEL INSTL, TRAILING EDGE STATION 36.844 TO 47.301 . LOWER (RH ONLY)		1
R	2 65-1113-15	 PANEL ASSY, TRAILING EDGE STATION 36.844 TO 47.301 LOWER HONEYCOMB (LH ONLY)	0151	1
R	2 65-1113-15	 PANEL ASSY, TRAILING EDGE STATION 36.844 TO 47.301 LOWER HONEYCOMB (LH ONLY) (OPTIONAL TO 65-1113-19)	5299	1
R	2 65-1113-19	 PANEL ASSY, TRAILING EDGE STATION 36.844 TO 47.301 LOWER HONEYCOMB (LH ONLY) (OPTIONAL 65-1113-15)	5299	1
R	2 65-1113-16	 PANEL ASSY, TRAILING EDGE STATION 36.844 TO 47.301 LOWER HONEYCOMB (RH ONLY)	0151	1
R	2 65-1113-16	 PANEL ASSY, TRAILING EDGE STATION 36.844 TO 47.301 LOWER HONEYCOMB (RH ONLY) (OPTIONAL TO 65-1113-20)	5299	1
R	2 65-1113-20	 PANEL ASSY, TRAILING EDGE STATION 36.844 TO 47.301 LOWER HONEYCOMB (RH ONLY) (OPTIONAL 65-1113-16)	5299	1
		ATTACHING PARTS		
	NAS517-3-4	 SCREW		14
	NAS517-3-5	 SCREW		1
	3A 65-1113-11	 RETAINER, TRAILING EDGE STATION 36.844 TO 47.301 . LOWER PANEL		1
		ATTACHING PARTS		
	NAS514P632-7	 SCREW		7
	NAS679A06W	 NUT		7
	3B 65-1113-13	 SEAL, TRAILING EDGE STATION 36.844 TO 47.301 LOWER PANEL (EXTRUSION NO. BAC1521-568 X 8.7 IN. LG) (OPTIONAL AND FOR REPLACEMENT ORDER 65-1113-17 (EXTRUSION NO. BAC1530-6 X 8.7 IN. LG))		1
	3B 65-1113-17	 SEAL, (EXTRUSION NO. BAC1530-6 X 8.7 IN. LG) (OPTIONAL TO AND REPLACEMENT FOR 65-1113-13 (EXTRUSION NO. BAC1521-568 X 8.7 IN. LG))		1
	64-1175-1	 PANEL INSTL, TRAILING EDGE STATION 36.844 TO 121.78 . LOWER (LH ONLY)		1
	64-1175-2	 PANEL INSTL, TRAILING EDGE STATION 36.844 TO 121.78 . LOWER (RH ONLY)		1
R	4 64-1175-23	 PANEL ASSY, TRAILING EDGE STATION 36.844 TO 121.78 LOWER INBOARD (LH ONLY)	0151	1
R		MISSING ITEM NUMBERS ARE NOT APPLICABLE		

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R R R R R	12 4	64-1175-23	.	PANEL ASSY, TRAILING EDGE STATION 36.844 TO 121.78 LOWER INBOARD (LH ONLY) (OPTIONAL TO 64-1175-31)	5299	1
	4	64-1175-31	.	PANEL ASSY, TRAILING EDGE STATION 36.844 TO 121.78 LOWER INBOARD (LH ONLY) (OPTIONAL 64-1175-23)	5299	1
	4	64-1175-24	.	PANEL ASSY, TRAILING EDGE STATION 36.844 TO 121.78 LOWER INBOARD (RH ONLY)	0151	1
	4	64-1175-24	.	PANEL ASSY, TRAILING EDGE STATION 36.844 TO 121.78 LOWER INBOARD (RH ONLY) (OPTIONAL TO 64-1175-32)	5299	1
	4	64-1175-32	.	PANEL ASSY, TRAILING EDGE STATION 36.844 TO 121.78 LOWER INBOARD (RH ONLY) (OPTIONAL 64-1175-24)	5299	1
				ATTACHING PARTS		
		BACB30ABP3-4A	.	BOLT.		75
		NAS517-3-5	.	SCREW		1
				-----*		
	5	64-1175-27	.	PANEL ASSY, TRAILING EDGE STATION 36.844 TO 121.78 LOWER OUTBOARD (LH ONLY)	0151	1
	5	64-1175-27	.	PANEL ASSY, TRAILING EDGE STATION 36.844 TO 121.78 LOWER OUTBOARD (LH ONLY) (OPTIONAL TO 64-1175-33)	5299	1
	5	64-1175-33	.	PANEL ASSY, TRAILING EDGE STATION 36.844 TO 121.78 LOWER OUTBOARD (LH ONLY) (OPTIONAL 64-1175-27)	5299	1
R R R R R R R R R R R R	5	64-1175-28	.	PANEL ASSY, TRAILING EDGE STATION 36.844 TO 121.78 LOWER OUTBOARD (RH ONLY)	0151	1
	5	64-1175-34	.	PANEL ASSY, TRAILING EDGE STATION 36.844 TO 121.78 LOWER OUTBOARD (RH ONLY) (OPTIONAL 64-1175-28)	5299	1
				ATTACHING PARTS		
		BACB30ABP3-4A	.	BOLT.		AR
				-----*		
		65-1117-1	.	BEAM INSTL, DUMP CHUTE CAVITY (LH ONLY)		1
		65-1117-2	.	BEAM INSTL, DUMP CHUTE CAVITY (RH ONLY)		1
	5A	65-1117-13	.	STRIP, DUMP CHUTE CAVITY BEAM RUB		1
	5C	65-1117-65	.	STRIP, DUMP CHUTE CAVITY BEAM RUB		1
	5D	65-1117-64	.	STRIP, DUMP CHUTE CAVITY BEAM RUB		1
	5E	65-1117-62	.	STRIP, DUMP CHUTE CAVITY BEAM RUB		1
	5G	65-1117-83	.	STRIP, DUMP CHUTE CAVITY BEAM RUB		1
R R R R R R R R R R R R	5H	65-1117-84	.	STRIP, DUMP CHUTE CAVITY BEAM RUB		1
	5J	65-1117-26	.	STRIP, DUMP CHUTE CAVITY BEAM RUB		1
		65-19807-1	.	BEAM INSTL, TRAILING EDGE STATION 159.277 TORQUE TUBE SUPPORT (LH ONLY)		1
		65-19807-2	.	BEAM INSTL, TRAILING EDGE STATION 159.277 TORQUE TUBE SUPPORT (RH ONLY)		1
	5K	66-13641-1	.	BUSHING, TORSION BAR SUPPORT.		4
	5M	69-16214-1	.	FITTING, TORSION BAR SUPPORT.		1
				ATTACHING PARTS		
		BACB30N6-8	.	BOLT.		3
		NAS1080-6	.	COLLAR.		3
				-----*		
		64-1176-1	.	PANEL INSTL, TRAILING EDGE STATION 121.780 TO 187.369 LOWER (LH ONLY)		1
		64-1176-2	.	PANEL INSTL, TRAILING EDGE STATION 121.780 TO 187.369 LOWER (RH ONLY)		1
R R R R R R R R R R R R	6	64-1176-17	.	PANEL ASSY, (LH ONLY)	0150	1
	6	64-1176-21	.	PANEL ASSY, (LH ONLY)	5151	1
	6	64-1176-21	.	PANEL ASSY, (LH ONLY) (OPTIONAL TO 64-1176-29)	5299	1
	6	64-1176-29	.	PANEL ASSY, (LH ONLY) (OPTIONAL 64-1176-21)	5299	1
	6	64-1176-18	.	PANEL ASSY, (RH ONLY)	0150	1
	6	64-1176-22	.	PANEL ASSY, (RH ONLY)	5151	1
	6	64-1176-22	.	PANEL ASSY, (RH ONLY) (OPTIONAL TO 64-1176-30)	5299	1
	6	64-1176-30	.	PANEL ASSY, (RH ONLY) (OPTIONAL 64-1176-22)	5299	1
				ATTACHING PARTS		
		NAS517-3-4	.	SCREW		AR
		BACB30ABP3-4A	.	BOLT.		37
		NAS517-3-5	.	SCREW		4
		NAS517-3-7	.	SCREW		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
12	NAS617-3-8	.	SCREW		1
	64-1177-1	.	PANEL INSTL, TRAILING EDGE STATION 187.369 TO 270.507 LOWER (LH ONLY)		1
	64-1177-2	.	PANEL INSTL, TRAILING EDGE STATION 187.369 TO 270.507 LOWER (RH ONLY)		1
R	7 64-1177-15	.	PANEL ASSY, TRAILING EDGE STATION 187.369 TO. 0151		1
R	7 64-1177-15	.	270.507 LOWER (LH ONLY)		
R		.	PANEL ASSY, TRAILING EDGE STATION 187.369 TO. 5299		1
R		.	270.507 LOWER (LH ONLY)		
R		.	(OPTIONAL TO 64-1177-19)		
R	7 64-1177-19	.	PANEL ASSY, TRAILING EDGE STATION 187.369 TO. 5299		1
R		.	270.507 LOWER (LH ONLY)		
R		.	(OPTIONAL 64-1177-15)		
R	7 64-1177-16	.	PANEL ASSY, TRAILING EDGE STATION 187.369 TO. 0151		1
R		.	270.507 LOWER (RH ONLY)		
R	7 64-1177-16	.	PANEL ASSY, TRAILING EDGE STATION 187.369 TO. 5299		1
R		.	270.507 LOWER (RH ONLY)		
R		.	(OPTIONAL TO 64-1177-20)		
R	7 64-1177-20	.	PANEL ASSY, TRAILING EDGE STATION 187.369 TO. 5299		1
R		.	270.507 LOWER (RH ONLY)		
R		.	(OPTIONAL 64-1177-16)		
		.	ATTACHING PARTS		
	BACB30ABP3-4A	.	BOLT		AR
	NAS517-3-5	.	SCREW		11
	NAS517-3-7	.	SCREW		9
	NAS517-3-8	.	SCREW		1
		.	*****		
	64-1178-1	.	PANEL INSTL, TRAILING EDGE STATION 438.55 TO 466.36 . LOWER (LH ONLY)		1
	64-1178-2	.	PANEL INSTL, TRAILING EDGE STATION 438.55 TO 466.36 . LOWER (RH ONLY)		1
R	8 64-1178-47	.	PANEL ASSY, (LH ONLY) 0151		1
R	8 64-1178-47	.	PANEL ASSY, (LH ONLY) 5299		1
R		.	(OPTIONAL TO 64-1178-51)		
R	8 64-1178-51	.	PANEL ASSY, (LH ONLY) 5299		1
R		.	(OPTIONAL 64-1178-47)		
R	8 64-1178-48	.	PANEL ASSY, (RH ONLY) 0151		1
R	8 64-1178-48	.	PANEL ASSY, (RH ONLY) 5299		1
R		.	(OPTIONAL TO 64-1178-52)		
R	8 64-1178-52	.	PANEL ASSY, (RH ONLY) 5299		1
R		.	(OPTIONAL 64-1178-48)		
		.	ATTACHING PARTS		
	NAS517-3-6	.	SCREW		68
	NAS517-3-7	.	SCREW		3
	NAS517-3-9	.	SCREW		3
		.	*****		
	9 64-1178-15	.	RETAINER, TRAILING EDGE STATION 438.55 TO 466.36 . LOWER PANEL PIN		1
	10 64-1178-9	.	HINGE ASSY, TRAILING EDGE STATION 438.55 TO 466.36 LOWER PANEL (LH ONLY)		1
	10 64-1178-10	.	HINGE ASSY, TRAILING EDGE STATION 438.55 TO 466.36 LOWER PANEL (RH ONLY)		1
		.	ATTACHING PARTS		
	MS20426D8	.	RIVET		1
	NAS517-3-4	.	SCREW		3
	NAS517-3-6	.	SCREW		6
	NAS517-3-8	.	SCREW		1
	NAS517-3-9	.	SCREW		3
	NAS517-3-4	.	SCREW		3
	BACS40B24-236	.	SHIM		1
	BACS40B24-27	.	SHIM		2
	AN960010	.	WASHER		16
	NAS679A3W	.	NUT		17
		.	*****		
	11 69-23007-8	.	SEAL ASSY, TRAILING EDGE PANEL (OPTIONAL. 69-23007-4)		1
	11 69-23007-4	.	SEAL ASSY, TRAILING EDGE PANEL (OPTIONAL TO 69-23007-8)		1
	12 69-23007-9	.	SEAL, TRAILING EDGE PANEL EXTRUDED RUBBER (EXTRUSION NO. BAC1530-6 X 8.9 IN. LG) (USED ON 69-23007-8)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
12 12	69-23007-6	. . . SEAL, TRAILING EDGE PANEL EXTRUDED RUBBED . . . (EXTRUSION NO. BAC1521-568 X 8.9 IN. LG (OPTIONAL EXTRUSION NO. BAC1521-407 X 8.9 IN. LG)) (USED ON 69-23007-4)		1
13	69-23007-7	. . . RETAINER, TRAILING EDGE PANEL SEAL.		1
	NAS601-7	. . . ATTACHING PARTS		7
	AN960D6	. . . SCREW		7
	BACN108Y806W	. . . WASHER.		7
		. . . NUT		7
14	64-1178-25	. . SEAL, TRAILING EDGE STATION 438.55 TO 466.36 LOWER PANEL MOHAIR (BAC1523-7 X 13.40 IN. LG)		1
14A	69-23015-8	. . SEAL ASSY, TRAILING EDGE PANEL FLAP		1
15	69-23015-10	. . . SEAL, TRAILING EDGE PANEL FLAP MOHAIR (BAC1523-22 X 12.9 IN. LG) (OPTIONAL 69-23015-11)		1
15A	69-23015-11	. . . SEAL ASSY, TRAILING EDGE PANEL FLAP (OPTIONAL TO 69-23015-10)		1
	NAS600-5	. . . ATTACHING PARTS		13
	AN960D4L	. . . SCREW		13
	BACN108Y504W	. . . WASHER.		13
		. . . NUT		13
16	69-23015-12	. . . RETAINER, TRAILING EDGE PANEL FLAP SEAL		1
17	69-23015-13	. . . SEAL, TRAILING EDGE PANEL FLAP MOHAIR (BAC1523-7 X 12.9 IN. LG)		1
	5-86505-3001	. . PANEL INSTL, WING STATION 466.36 TO 533.64 TRAILING . EDGE HINGED LOWER (LH ONLY)		1
	5-86505-3002	. . PANEL INSTL, WING STATION 466.36 TO 533.64 TRAILING . EDGE HINGED LOWER (RH ONLY)		1
18	5-86505-3003	. . PANEL ASSY, WING STATION 466.36 TO 533.64 TRAILING EDGE HINGED LOWER BONDED (LH ONLY)	0151	1
18	5-86505-3003	. . PANEL ASSY, WING STATION 466.36 TO 533.64 TRAILING EDGE HINGED LOWER BONDED (LH ONLY) (OPTIONAL TO 5-86505-3025)	5299	1
18	5-86505-3025	. . PANEL ASSY, WING STATION 466.36 TO 533.64 TRAILING EDGE HINGED LOWER BONDED (LH ONLY) (OPTIONAL 5-86505-3003)	5299	1
18	5-86505-3004	. . PANEL ASSY, WING STATION 466.36 TO 533.64 TRAILING EDGE HINGED LOWER BONDED (RH ONLY)	0151	1
18	5-86505-3004	. . PANEL ASSY, WING STATION 466.36 TO 533.64 TRAILING EDGE HINGED LOWER BONDED (RH ONLY) (OPTIONAL TO 5-86505-3026)	5299	1
18	5-86505-3026	. . PANEL ASSY, WING STATION 466.36 TO 533.64 TRAILING EDGE HINGED LOWER BONDED (RH ONLY) (OPTIONAL 5-86505-3004)	5299	1
	BACB30LU3-5	. . . ATTACHING PARTS		21
	BACB30LU3-6	. . . BOLT.		5
	BACB30LU3-7	. . . BOLT.		10
		. . . BOLT.		10
19	5-86505-3009	. . HINGE ASSY, WING STATION 466.36 TO 533.64 TRAILING EDGE HINGED LOWER PANEL (LH ONLY)		1
19	5-86505-3010	. . HINGE ASSY, WING STATION 466.36 TO 533.64 TRAILING EDGE HINGED LOWER PANEL (RH ONLY)		1
20	5-86505-3011	. . HINGE ASSY, WING STATION 466.36 TO 533.64 TRAILING EDGE HINGED LOWER PANEL (LH ONLY)		1
20	5-86505-3012	. . HINGE ASSY, WING STATION 466.36 TO 533.64 TRAILING EDGE HINGED LOWER PANEL (RH ONLY)		1
	BACB30LU3-4	. . . ATTACHING PARTS		87
	BACB30LU3-5	. . . BOLT.		6
	BACB30LU3-6	. . . BOLT.		6
	AN960D10	. . . BOLT.		99
	NAS679A3W	. . . WASHER.		99
		. . . NUT		99
	5-86506-3001	. . PANEL INSTL, WING STATION 466.36 TO 533.66 LOWER. . . HONEYCOMB (LH ONLY)		1
	5-86506-3002	. . PANEL INSTL, WING STATION 466.36 TO 533.66 LOWER. . . HONEYCOMB (RH ONLY)		1
21	5-86506-3037	. . PANEL ASSY, WING STATION 466.36 TO 533.66 LOWER . . HONEYCOMB (LH ONLY)	0151	1
21	5-86506-3037	. . PANEL ASSY, WING STATION 466.36 TO 533.66 LOWER . . HONEYCOMB (LH ONLY) (OPTIONAL TO 5-86506-3049)	5299	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R R R R R R R	12 21 5-86506-3049	. . PANEL ASSY, WING STATION 466.36 TO 533.66 LOWER . . HONEYCOMB (LH ONLY) (OPTIONAL 5-86506-3037)	5299	1
	21 5-86506-3038	. . PANEL ASSY, WING STATION 466.36 TO 533.66 LOWER . . HONEYCOMB (RH ONLY)	0151	1
	21 5-86506-3038	. . PANEL ASSY, WING STATION 466.36 TO 533.66 LOWER . . HONEYCOMB (RH ONLY)	5299	1
	21 5-86506-3050	. . PANEL ASSY, WING STATION 466.36 TO 533.66 LOWER . . HONEYCOMB (RH ONLY) (OPTIONAL 5-86506-3038)	5299	1
	NAS517-3-5	ATTACHING PARTS		
	NAS335CPA21	. . SCREW		51
	NAS517-4-9	. . SCREW		3
		. . SCREW		6
	5-86507-3001	. . PANEL INSTL, WING STATION 533.64 TO 546.09 TRAILING . EDGE LOWER (LH ONLY)		1
	5-86507-3002	. . PANEL INSTL, WING STATION 533.64 TO 546.09 TRAILING . EDGE LOWER (RH ONLY)		1
R R R R R R R R R R	22 5-86507-3015	. . PANEL ASSY, WING STATION 533.64 TO 546.09 TRAILING EDGE LOWER (LH ONLY)		1
	22 5-86507-3029	. . PANEL ASSY, WING STATION 533.64 TO 546.09 TRAILING EDGE LOWER (LH ONLY)	0151	1
	22 5-86507-3049	. . PANEL ASSY, WING STATION 533.64 TO 546.09 TRAILING EDGE LOWER (LH ONLY) (OPTIONAL 5-86507-3029)	5299	1
	22 5-86507-3029	. . PANEL ASSY, WING STATION 533.64 TO 546.09 TRAILING EDGE LOWER (LH ONLY) (OPTIONAL TO 5-86507-3049)	5299	1
	22 5-86507-3016	. . PANEL ASSY, WING STATION 533.64 TO 546.09 TRAILING EDGE LOWER (RH ONLY)		1
	22 5-86507-3030	. . PANEL ASSY, WING STATION 533.64 TO 546.09 TRAILING EDGE LOWER (RH ONLY)	0151	1
	22 5-86507-3050	. . PANEL ASSY, WING STATION 533.64 TO 546.09 TRAILING EDGE LOWER (RH ONLY) (OPTIONAL 5-86507-3030)	5299	1
	22 5-86507-3030	. . PANEL ASSY, WING STATION 533.64 TO 546.09 TRAILING EDGE LOWER (RH ONLY) (OPTIONAL TO 5-86507-3050)	5299	1
	NAS517-3-6	ATTACHING PARTS		
	NAS517-4-8	. . SCREW		14
R R R R R R R R R R	NAS517-3-7	. . SCREW		2
	NAS679A3W	. . SCREW		6
		. . NUT		6
	23A 5-86507-3017	. . . RETAINER, WING STATION 533.64 TO 546.09 TRAILING EDGE LOWER PANEL SEAL (USED ON 5-86507-3015, -3016, -3029 AND -3030)		1
	NAS514P632-10	ATTACHING PARTS		
	AN960D6	. . . BOLT		6
	NAS679A06W	. . . WASHER		6
		. . . NUT		6
	23B 5-86507-3025	. . . SEAL, WING STATION 533.64 TO 546.09 TRAILING EDGE LOWER PANEL (EXTRUSION NO. BAC1530-6 X 7.8 IN. LG) (USED ON 5-86507-3015, -3016, -3029 AND -3030)		1
	23C 5-86507-3031	. . . PANEL, WING STATION 533.64 TO 546.09 TRAILING . . EDGE LOWER BONDED (LH ONLY)	0151	1
R R R R R R R R R R	23C 5-86507-3032	. . . PANEL, WING STATION 533.64 TO 546.09 TRAILING . . EDGE LOWER BONDED (RH ONLY)	0151	1
	23E 69-21303-1	. . HINGE ASSY, (LH ONLY)		1
	23E 69-21303-2	. . HINGE ASSY, (RH ONLY)		1
	23F NAS517-4-9	ATTACHING PARTS		
	23G BACB30LU3-3	. . SCREW	0150	2
	23G BACB30LU3-4	. . SCREW	5199	2
	23H BACB30LU3-3	. . SCREW	0150	2
	23H BACB30LU3-4	. . SCREW	5199	2
	23J AN960PD10L	. . WASHER		2
	23M 8ACS40B16-19	. . SHIM		2
R R	23P 5-86507-2040	. . FILLER	0150	2
	5-86507-3048	. . FILLER	5199	2
	23Q NAS679A3W	. . NUT		4

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
12	24A	NAS679A4W	. . NUT		2
	24B	69-21303-3	. . . PIN, WING TRAILING EDGE LOWER PANEL HINGE (LH . . ONLY) (ALTERED FROM AN253-2-850)		1
	24B	69-21303-4	. . . PIN, WING TRAILING EDGE LOWER PANEL HINGE (RH . . ONLY) (ALTERED FROM AN253-2-850)		1
	24C	69-21303-5	. . . HINGE, WING TRAILING EDGE LOWER PANEL HALF (LH. . ONLY)		1
	24C	69-21303-6	. . . HINGE, WING TRAILING EDGE LOWER PANEL HALF (RH. . ONLY)		1
	24D	69-21303-7	. . . HINGE, WING TRAILING EDGE LOWER PANEL HALF (LH. . ONLY)		1
	24D	69-21303-8	. . . HINGE, WING TRAILING EDGE LOWER PANEL HALF (RH. . ONLY)		1
	25	63-2569-1	. . LOCK, HINGE PIN (ALTERED FROM AN257H5-800).		1
		5-86508-3001	. PANEL INSTL, WING STATION 712.60 TO 719.92 TRAILING . EDGE LOWER (LH ONLY)		1
		5-86508-3002	. PANEL INSTL, WING STATION 712.60 TO 719.92 TRAILING . EDGE LOWER (RH ONLY)		1
	26	5-86508-3005	. . PANEL ASSY, WING STATION 712.60 TO 719.92 TRAILING EDGE LOWER BONDED (LH ONLY)	0151	1
	26	5-86508-3005	. . PANEL ASSY, WING STATION 712.60 TO 719.92 TRAILING EDGE LOWER BONDED (LH ONLY) (OPTIONAL TO 5-86508-3037)	5299	1
	26	5-86508-3037	. . PANEL ASSY, WING STATION 712.60 TO 719.92 TRAILING EDGE LOWER BONDED (LH ONLY) (OPTIONAL 5-86508-3005)	5299	1
	26	5-86508-3006	. . PANEL ASSY, WING STATION 712.60 TO 719.92 TRAILING EDGE LOWER BONDED (RH ONLY)	0151	1
	26	5-86508-3006	. . PANEL ASSY, WING STATION 712.60 TO 719.92 TRAILING EDGE LOWER BONDED (RH ONLY) (OPTIONAL TO 5-86508-3038)	5299	1
	26	5-86508-3038	. . PANEL ASSY, WING STATION 712.60 TO 719.92 TRAILING EDGE LOWER BONDED (RH ONLY) (OPTIONAL 5-86508-3006)	5299	1
			ATTACHING PARTS		
		NAS1104-10W	. . BOLT.		1
		NAS517-4-9	. . BOLT.		1
		NAS1103-4W	. . BOLT.		2
		AN960D416	. . WASHER.		2
		AN960D10	. . WASHER.		2
		AN960D10	. . WASHER.		2
		NAS679A3W	. . NUT		2
		NAS679A3W	. . NUT		2
		NAS679A4W	. . NUT		2
			ATTACHING PARTS		
	27A	5-86508-3036	. . SHIM, WING STATION 712.60 TO 719.92 TRAILING EDGE . LOWER PANEL		2
	28	5-86508-3023	. . SEAL, WING STATION 712.60 TO 719.92 TRAILING EDGE . LOWER PANEL (EXTRUSION NO. BAC1530-6 X 5.3 IN. LG)		1
	29	5-86508-2016	. . RETAINER, WING STATION 712.60 TO 719.92 TRAILING . EDGE LOWER PANEL SEAL		1
			ATTACHING PARTS		
		NAS601-6	. . SCREW		5
		NAS679A06W	. . NUT		5
			ATTACHING PARTS		
	29A	3-93335-2	. . FILLER, WING STATION 712.60 TO 719.92 TRAILING EDGE LOWER PANEL PHENOLIC		2
		64-1170-23	. PANEL INSTL, TRAILING EDGE STATION 36.844 TO 65.051 . UPPER (LH ONLY)		1
		64-1170-24	. PANEL INSTL, TRAILING EDGE STATION 36.844 TO 65.051 . UPPER (RH ONLY)		1
	30	64-1170-35	. . PANEL ASSY, TRAILING EDGE STATION 36.844 TO 65.051 UPPER (LH ONLY)	0101	1
	30	64-1170-43	. . PANEL ASSY, TRAILING EDGE STATION 36.844 TO 65.051 UPPER (LH ONLY)	0251	1
	30	64-1170-43	. . PANEL ASSY, TRAILING EDGE STATION 36.844 TO 65.051 UPPER (LH ONLY) (OPTIONAL TO 64-1170-55)	5299	1
	30	64-1170-55	. . PANEL ASSY, TRAILING EDGE STATION 36.844 TO 65.051 UPPER (LH ONLY) (OPTIONAL 64-1170-43)	5299	1
			MISSING ITEM NUMBERS ARE NOT APPLICABLE		



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
12 30	64-1170-36		. . PANEL ASSY, TRAILING EDGE STATION 36.844 TO 65.051 UPPER (RH ONLY)	0101	1
30	64-1170-44		. . PANEL ASSY, TRAILING EDGE STATION 36.844 TO 65.051 UPPER (RH ONLY)	0251	1
30	64-1170-44		. . PANEL ASSY, TRAILING EDGE STATION 36.844 TO 65.051 UPPER (RH ONLY) (OPTIONAL TO 64-1170-56)	5299	1
30	64-1170-56		. . PANEL ASSY, TRAILING EDGE STATION 36.844 TO 65.051 UPPER (RH ONLY) (OPTIONAL 64-1170-44)	5299	1
31	64-1170-33		. . PANEL ASSY, TRAILING EDGE STATION 36.844 TO 65.051 UPPER (LH ONLY)	0151	1
31	64-1170-33		. . PANEL ASSY, TRAILING EDGE STATION 36.844 TO 65.051 UPPER (LH ONLY) (OPTIONAL TO 64-1170-53)	5299	1
31	64-1170-53		. . PANEL ASSY, TRAILING EDGE STATION 36.844 TO 65.051 UPPER (LH ONLY) (OPTIONAL 64-1170-33)	5299	1
31	64-1170-34		. . PANEL ASSY, TRAILING EDGE STATION 36.844 TO 65.051 UPPER (RH ONLY)	0151	1
31	64-1170-34		. . PANEL ASSY, TRAILING EDGE STATION 36.844 TO 65.051 UPPER (RH ONLY) (OPTIONAL TO 64-1170-54)	5299	1
31	64-1170-54		. . PANEL ASSY, TRAILING EDGE STATION 36.844 TO 65.051 UPPER (RH ONLY) (OPTIONAL 64-1170-34)	5299	1
32	64-1170-27		. . SEAL, TRAILING EDGE STATION 36.844 TO 65.051 UPPER PANEL MOHAIR (BAC1523-7 X 10.2 IN. LG) (OPTIONAL TO 69-50456-1)		1
32	69-50456-1		. . SEAL ASSY (OPTIONAL 64-1170-27)		1
32A	69-50456-13		. . . SEAL, MOHAIR (BAC1523-7 X 10.0 IN. LG) (USED ON . 69-50456-1)		1
32B	69-50456-11		. . . STRIP, RETAINING (USED ON 69-50456-1)		1
33A	66-2809-3		. . BUTTON, WING TRAILING EDGE RUB.		1
33B	66-13212-1		. . STRIP, WING TRAILING EDGE RUB ATTACHING PARTS		3
	MS20426B4		. . RIVET		9
	MS20426D4		. . RIVET		3
			-----*		
33C	64-1170-28		. . SEAL, TRAILING EDGE STATION 36.844 TO 65.051 UPPER PANEL (ALTERED FROM BAC SPEC NO. 10-60120-67)		1
33D	64-1170-29		. . RETAINER, TRAILING EDGE STATION 36.844 TO 65.051 . . UPPER PANEL SEAL ATTACHING PARTS		1
	MS20426D4		. . RIVET		9
			-----*		
33E	65-22997-1		. . FILLER, TRAILING EDGE UPPER PANEL (LH ONLY)		1
33E	65-22997-2		. . FILLER, TRAILING EDGE UPPER PANEL (RH ONLY) ATTACHING PARTS		1
	MS20426B6		. . RIVET		23
	NAS517-3-3		. . SCREW		11
	AN960PD10L		. . WASHER.		11
	NAS679A3W		. . NUT		11
			-----*		
	64-1171-33		. . PANEL INSTL, TRAILING EDGE STATION 65.051 TO 115.883 UPPER (LH ONLY)		1
	64-1171-34		. . PANEL INSTL, TRAILING EDGE STATION 65.051 TO 115.883 UPPER (RH ONLY)		1
34	64-1171-37		. . PANEL ASSY, TRAILING EDGE STATION 65.051 TO 115.883 UPPER (LH ONLY)	0151	1
34	64-1171-37		. . PANEL ASSY, TRAILING EDGE STATION 65.051 TO 115.883 UPPER (LH ONLY) (OPTIONAL TO 64-1171-39)	5299	1
34	64-1171-39		. . PANEL ASSY, TRAILING EDGE STATION 65.051 TO 115.883 UPPER (LH ONLY) (OPTIONAL 64-1171-37)	5299	1
34	64-1171-38		. . PANEL ASSY, TRAILING EDGE STATION 65.051 TO 115.883 UPPER (RH ONLY)	0151	1
34	64-1171-38		. . PANEL ASSY, TRAILING EDGE STATION 65.051 TO 115.883 UPPER (RH ONLY) (OPTIONAL TO 64-1171-40)	5299	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

PARTS CATALOG

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	12	34	64-1171-40	. . PANEL ASSY, TRAILING EDGE STATION 65.051 TO 115.883 UPPER (RH ONLY) (OPTIONAL 64-1174-38)	5299	1
R			65-5971-25	. . PANEL INSTL, TRAILING EDGE STATION 115.883 TO 135.883 UPPER (LH ONLY)		1
R			65-5971-26	. . PANEL INSTL, TRAILING EDGE STATION 115.883 TO 135.883 UPPER (RH ONLY)		1
R	34A	66-16892-1		. . PLATE, INBOARD SPOILER CENTER SEAL BUMPER	0151	1
R	34A	66-16892-2		. . PLATE, INBOARD SPOILER CENTER SEAL BUMPER ATTACHING PARTS	5299	1
		MS20426D6		. . RIVET		9
R	35	65-5971-39		. . PANEL ASSY, TRAILING EDGE STATION 115.883 TO 135.883 UPPER (LH ONLY)	0151	1
R	35	65-5971-39		. . PANEL ASSY, TRAILING EDGE STATION 115.883 TO 135.883 UPPER (LH ONLY) (OPTIONAL TO 65-5971-43)	5299	1
R	35	65-5971-43		. . PANEL ASSY, TRAILING EDGE STATION 115.883 TO 135.883 UPPER (LH ONLY) (OPTIONAL 65-5971-39)	5299	1
R	35	65-5971-40		. . PANEL ASSY, TRAILING EDGE STATION 115.883 TO 135.883 UPPER (RH ONLY)	0151	1
R	35	65-5971-40		. . PANEL ASSY, TRAILING EDGE STATION 115.883 TO 135.883 UPPER (RH ONLY) (OPTIONAL TO 65-5971-44)	5299	1
R	35	65-5971-44		. . PANEL ASSY, TRAILING EDGE STATION 115.883 TO 135.883 UPPER (RH ONLY) (OPTIONAL 65-5971-40)	5299	1
R		64-1172-29		. . PANEL INSTL, TRAILING EDGE STATION 135.883 TO 187.369 UPPER (LH ONLY)		1
R		64-1172-30		. . PANEL INSTL, TRAILING EDGE STATION 135.883 TO 187.369 UPPER (RH ONLY)		1
R	36	64-1172-37		. . PANEL ASSY, TRAILING EDGE STATION 135.883 TO 187.369 UPPER (LH ONLY)	0151	1
R	36	64-1172-37		. . PANEL ASSY, TRAILING EDGE STATION 135.883 TO 187.369 UPPER (LH ONLY) (OPTIONAL TO 64-1172-39)	5299	1
R	36	64-1172-39		. . PANEL ASSY, TRAILING EDGE STATION 135.883 TO 187.369 UPPER (LH ONLY) (OPTIONAL 64-1172-37)	5299	1
R	36	64-1172-38		. . PANEL ASSY, TRAILING EDGE STATION 135.883 TO 187.369 UPPER (RH ONLY)	0151	1
R	36	64-1172-38		. . PANEL ASSY, TRAILING EDGE STATION 135.883 TO 187.369 UPPER (RH ONLY) (OPTIONAL TO 64-1172-40)	5299	1
R	36	64-1172-40		. . PANEL ASSY, TRAILING EDGE STATION 135.883 TO 187.369 UPPER (RH ONLY) (OPTIONAL 64-1172-38)	5299	1
R		64-1173-1		. . PANEL INSTL, TRAILING EDGE STATION 187.369 TO 298.065 UPPER (LH ONLY)		1
R		64-1173-2		. . PANEL INSTL, TRAILING EDGE STATION 187.369 TO 298.065 UPPER (RH ONLY)		1
R	37	64-1173-35		. . COVER, TRAILING EDGE STATION 187.369 TO 298.065 . . UPPER PANEL AILERON ACCESS ATTACHING PARTS		1
R		NAS517-3-4		. . SCREW		3
R	37A	64-1173-38		. . PAD, RUBBER (OPTIONAL 64-1173-67)		1
R	37A	64-1173-67		. . PAD, RUBBER (OPTIONAL TO 64-1173-38)		1
R	37B	64-1173-39		. . PAD, RUBBER (OPTIONAL 64-1173-68)		2
R	37B	64-1173-68		. . PAD, RUBBER (OPTIONAL TO 64-1173-39)		2
R	38	64-1173-43		. . PANEL ASSY, TRAILING EDGE STATION 187.369 TO 298.065 UPPER (LH ONLY)	0151	1
R	38	64-1173-43		. . PANEL ASSY, TRAILING EDGE STATION 187.369 TO 298.065 UPPER (LH ONLY) (OPTIONAL TO 64-1173-71)	5299	1
R	38	64-1173-71		. . PANEL ASSY, TRAILING EDGE STATION 187.369 TO 298.065 UPPER (LH ONLY) (OPTIONAL 64-1173-43)	5299	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *707*
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
12 38	64-1173-44	. . . PANEL ASSY, TRAILING EDGE STATION 187.369 TO . . . 298.065 UPPER (RH ONLY)	0151	1
38	64-1173-44	. . . PANEL ASSY, TRAILING EDGE STATION 187.369 TO . . . 298.065 UPPER (RH ONLY) (OPTIONAL TO 64-1173-72)	5299	1
38	64-1173-72	. . . PANEL ASSY, TRAILING EDGE STATION 187.369 TO . . . 298.065 UPPER (RH ONLY) (OPTIONAL 64-1173-44)	5299	1
39	64-1173-45	. . . PANEL ASSY, TRAILING EDGE STATION 187.369 TO . . . 298.065 UPPER (LH ONLY)	0151	1
39	64-1173-45	. . . PANEL ASSY, TRAILING EDGE STATION 187.369 TO . . . 298.065 UPPER (LH ONLY) (OPTIONAL TO 64-1173-73)	5299	1
39	64-1173-73	. . . PANEL ASSY, TRAILING EDGE STATION 187.369 TO . . . 298.065 UPPER (LH ONLY) (OPTIONAL 64-1173-45)	5299	1
39	64-1173-46	. . . PANEL ASSY, TRAILING EDGE STATION 187.369 TO . . . 298.065 UPPER (RH ONLY)	0151	1
39	64-1173-46	. . . PANEL ASSY, TRAILING EDGE STATION 187.369 TO . . . 298.065 UPPER (RH ONLY) (OPTIONAL TO 64-1173-74)	5299	1
39	64-1173-74	. . . PANEL ASSY, TRAILING EDGE STATION 187.369 TO . . . 298.065 UPPER (RH ONLY) (OPTIONAL 64-1173-46)	5299	1
40	64-1173-47	. . . PANEL ASSY, TRAILING EDGE STATION 187.369 TO . . . 298.065 UPPER (LH ONLY)	0151	1
40	64-1173-47	. . . PANEL ASSY, TRAILING EDGE STATION 187.369 TO . . . 298.065 UPPER (LH ONLY) (OPTIONAL TO 64-1173-75)	5299	1
40	64-1173-75	. . . PANEL ASSY, TRAILING EDGE STATION 187.369 TO . . . 298.065 UPPER (LH ONLY) (OPTIONAL 64-1173-47)	5299	1
40	64-1173-48	. . . PANEL ASSY, TRAILING EDGE STATION 187.369 TO . . . 298.065 UPPER (RH ONLY)	0151	1
40	64-1173-48	. . . PANEL ASSY, TRAILING EDGE STATION 187.369 TO . . . 298.065 UPPER (RH ONLY) (OPTIONAL TO 64-1173-76)	5299	1
40	64-1173-76	. . . PANEL ASSY, TRAILING EDGE STATION 187.369 TO . . . 298.065 UPPER (RH ONLY) (OPTIONAL 64-1173-48)	5299	1
41	9-61964-2001	. . . FAIRING, INBOARD WING AILERON TAB ROD (LH ONLY)		1
41	9-61964-2002	. . . FAIRING, INBOARD WING AILERON TAB ROD (RH ONLY)		1
41A	65-6351-5	. . . FILLER, TRAILING EDGE UPPER PANEL (LH ONLY)		1
41A	65-6351-6	. . . FILLER, TRAILING EDGE UPPER PANEL (RH ONLY)		1
42	66-2809-3	. . . BUTTON, WING TRAILING EDGE RUB.		8
42A	64-1173-37	. . . SEAL, TRAILING EDGE STATION 187.369 TO 298.065 . . . UPPER PANEL MOHAIR (BAC1523-7 X 89.90 IN. LG) (OPTIONAL TO 69-50456-3 AND -4)		1
42A	69-50456-3	. . . SEAL ASSY (OPTIONAL 64-1173-37)		1
42A	69-50456-4	. . . SEAL ASSY (OPTIONAL 64-1173-37)		1
42B	69-50456-14	. . . SEAL, MOHAIR (BAC1523-7 X 89.7 IN. LG) (USED ON 69-50456-3 AND -4)		1
43	69-50456-7	. . . STRIP, RETAINING (USED ON 69-50456-3)		1
43	69-50456-8	. . . STRIP, RETAINING (USED ON 69-50456-4)		1
43A	65-29337-12	. . . PANEL ASSY, TRAILING EDGE CLOSURE		1
43B	65-29337-8	. . . PAD, TRAILING EDGE CLOSURE PANEL RUB.		1
	5-86510-3001	. . . PANEL INSTL, WING STATION 466.36 TO 533.66 UPPER . . . HONEYCOMB (LH ONLY)		1
	5-86510-3002	. . . PANEL INSTL, WING STATION 466.36 TO 533.66 UPPER . . . HONEYCOMB (RH ONLY)		1
44	5-86510-3039	. . . PANEL ASSY, WING STATION 466.36 TO 533.66 UPPER . . . HONEYCOMB (LH ONLY)	0151	1
44	5-86510-3039	. . . PANEL ASSY, WING STATION 466.36 TO 533.66 UPPER . . . HONEYCOMB (LH ONLY) (OPTIONAL TO 5-86510-3063)	5299	1
44	5-86510-3063	. . . PANEL ASSY, WING STATION 466.36 TO 533.66 UPPER . . . HONEYCOMB (LH ONLY) (OPTIONAL 5-86510-3039)	5299	1
44	5-86510-3040	. . . PANEL ASSY, WING STATION 466.36 TO 533.66 UPPER . . . HONEYCOMB (RH ONLY)	0151	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R R R	12 44 5-86510-3040	. . PANEL ASSY, WING STATION 466.36 TO 533.66 UPPER . . HONEYCOMB (RH ONLY) (OPTIONAL TO 5-86510-3064)	5299	1
	44 5-86510-3064	. . PANEL ASSY, WING STATION 466.36 TO 533.66 UPPER . . HONEYCOMB (RH ONLY) (OPTIONAL 5-86510-3040)	5299	1
	NAS517-3-5	ATTACHING PARTS		5
	AN960PD10L	. . SCREW, (OPTIONAL BACB30FN6-5 WITH BACC30M6)		5
	NAS679A3W	. . WASHER.		5
		. . NUT		5
R R R R R R	45 5-86510-3037	. . DOOR, WING STATION 466.36 TO 533.66 UPPER HONEYCOMB PANEL INSPECTION	0151	1
	45 5-86510-3037	. . DOOR, WING STATION 466.36 TO 533.66 UPPER HONEYCOMB PANEL INSPECTION (OPTIONAL TO 5-86510-3065)	5299	1
	45 5-86510-3065	. . DOOR, WING STATION 466.36 TO 533.66 UPPER HONEYCOMB PANEL INSPECTION (OPTIONAL 5-86510-3037)	5299	1
	NAS517-3-5	ATTACHING PARTS		16
		. . SCREW		3
	46 NAS517-5-21	. . SCREW		6
	47 63-2839	. . FILLER, TRAILING EDGE PANELS BULB END		1
	48 5-86510-3017	. . END, WING STATION 466.36 TO 533.66 UPPER HONEYCOMB PANEL BULB		1
	5-86512-3001	. . PANEL INSTL, WING STATION 533.66 TO 549.38 TRAILING EDGE UPPER (LH ONLY)		1
	5-86512-3002	. . PANEL INSTL, WING STATION 533.66 TO 549.38 TRAILING EDGE UPPER (RH ONLY)		1
R R	49 NAS517-3-3	. . SCREW		1
	50 NAS517-3-4	. . SCREW	0350	2
	50 BACB30LU3-4	. . BOLT	0102	2
	50 BACB30LU3-6	. . BOLT	5199	2
	51 NAS517-5-8	. . SCREW		2
	52 NAS517-4-8	. . SCREW		2
	53 AN960D10	. . WASHER.		3
	54 AN960D516	. . WASHER.		2
	55 AN960D416	. . WASHER.		2
	56 NAS679A3W	. . NUT		3
	57 NAS679A5W	. . NUT		2
	58 NAS679A4W	. . NUT		2
R R R R R R R R	59 5-86512-3005	. . PANEL ASSY, WING STATION 533.66 TO 549.38 TRAILING EDGE UPPER BONDED (LH ONLY)	0151	1
	59 5-86512-3005	. . PANEL ASSY, WING STATION 533.66 TO 549.38 TRAILING EDGE UPPER BONDED (LH ONLY) (OPTIONAL TO 5-86512-3011)	5299	1
	59 5-86512-3011	. . PANEL ASSY, WING STATION 533.66 TO 549.38 TRAILING EDGE UPPER BONDED (LH ONLY) (OPTIONAL 5-86512-3005)	5299	1
	59 5-86512-3006	. . PANEL ASSY, WING STATION 533.66 TO 549.38 TRAILING EDGE UPPER BONDED (RH ONLY)	0151	1
	59 5-86512-3006	. . PANEL ASSY, WING STATION 533.66 TO 549.38 TRAILING EDGE UPPER BONDED (RH ONLY) (OPTIONAL TO 5-86512-3012)	5299	1
	59 5-86512-3012	. . PANEL ASSY, WING STATION 533.66 TO 549.38 TRAILING EDGE UPPER BONDED (RH ONLY) (OPTIONAL 5-86512-3006)	5299	1
	60 5-86512-14	. . SEAL, WING STATION 533.66 TO 549.38 TRAILING EDGE . UPPER PANEL MOHAIR (BAC1523-7 X 2.00 IN. LG)		2
	61 5-86512-3008	. . PAD, WING STATION 533.66 TO 549.38 TRAILING EDGE . UPPER PANEL RUBBER		1
	62 63-8764	. . BUTTON, TRAILING EDGE SPOILER RUB		2
	63 3-93308	. . STRIP, WING STATION 538 UPPER PANEL PHENOLIC RUB. .		1
	5-86513-3001	. . SKIN INSTL, WING STATION 549.38 TO 680.63 TRAILING . EDGE UPPER (LH ONLY)		1
	5-86513-3002	. . SKIN INSTL, WING STATION 549.38 TO 680.63 TRAILING . EDGE UPPER (RH ONLY)		1
	64 69-17599-9	. . SEAL INSTL, (LH ONLY) (SEE FIG. 27-4, FIG. 4) . . .		1
	64 69-17599-10	. . SEAL INSTL, (RH ONLY) (SEE FIG. 27-4, FIG. 4) . . .		1
	5-86514-3001	. . PANEL INSTL, WING STATION 680.63 TO 719.92 TRAILING EDGE UPPER (LH ONLY)		1
	5-86514-3002	. . PANEL INSTL, WING STATION 680.63 TO 719.92 TRAILING EDGE UPPER (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
12	82	NAS517-3-3	. . .	. . .	. . .	. . .	. . .	. . .		30
	83	NAS517-5-8	. . .	. . .	. . .	. . .	. . .	. . .		2
	84	NAS517-4-8	. . .	. . .	. . .	. . .	. . .	. . .		2
	85	NAS517-2-4	. . .	. . .	. . .	. . .	. . .	. . .		2
	86	AN960D10	. . .	. . .	. . .	. . .	. . .	. . .		30
	87	AN960D516	. . .	. . .	. . .	. . .	. . .	. . .		2
	88	AN960D416	. . .	. . .	. . .	. . .	. . .	. . .		2
	89	AN960D8	. . .	. . .	. . .	. . .	. . .	. . .		2
	90	NAS679A3W	. . .	. . .	. . .	. . .	. . .	. . .		30
	91	NAS679A5	. . .	. . .	. . .	. . .	. . .	. . .		2
	92	NAS679A4W	. . .	. . .	. . .	. . .	. . .	. . .		2
	93	NAS679A04W	. . .	. . .	. . .	. . .	. . .	. . .		2
	94	BACS40826-81	. . .	. . .	. . .	. . .	. . .	. . .		1
	95	5-86514-3011	. . .	. . .	. . .	. . .	. . .	. . .	0150	1
		(OPTIONAL TO 5-86514-3009)								
	95	5-86514-3015	. . .	. . .	. . .	. . .	. . .	. . .	5299	1
		(OPTIONAL TO 5-86514-3023)								
	95	5-86514-3009	. . .	. . .	. . .	. . .	. . .	. . .	0150	1
		(OPTIONAL 5-86514-3011)								
	95	5-86514-3015	. . .	. . .	. . .	. . .	. . .	. . .	5151	1
	95	5-86514-3023	. . .	. . .	. . .	. . .	. . .	. . .	5299	1
		(OPTIONAL 5-86514-3015)								
	95	5-86514-3012	. . .	. . .	. . .	. . .	. . .	. . .	0150	1
		(OPTIONAL TO 5-86514-3010)								
	95	5-86514-3010	. . .	. . .	. . .	. . .	. . .	. . .	0150	1
		(OPTIONAL 5-86514-3012)								
	95	5-86514-3016	. . .	. . .	. . .	. . .	. . .	. . .	5151	1
	95	5-86514-3016	. . .	. . .	. . .	. . .	. . .	. . .	5299	1
		(OPTIONAL TO 5-86514-3024)								
	95	5-86514-3024	. . .	. . .	. . .	. . .	. . .	. . .	5299	1
		(OPTIONAL 5-86514-3016)								
	98	5-86514-2023	. . .	. . .	. . .	. . .	. . .	. . .		1
		PAD, RUBBER								
		(OPTIONAL 5-86514-3013)								
	98	5-86514-3013	. . .	. . .	. . .	. . .	. . .	. . .		1
		(OPTIONAL TO 5-86514-2023)								
	102	65-7078-1	. . .	. . .	. . .	. . .	. . .	. . .		1
		DOOR INSTL, REAR SPAR STATION 263.5 TO 275.5 FUEL . .								
		JETTISON CHUTE PANEL (LH ONLY) (SEE 28-6, FIG. 10)								
	102	65-7078-2	. . .	. . .	. . .	. . .	. . .	. . .		1
		DOOR INSTL, REAR SPAR STATION 263.5 TO 275.5 FUEL . .								
		JETTISON CHUTE PANEL (RH ONLY) (SEE 28-6, FIG. 10)								
	103	65-7078-3	. . .	. . .	. . .	. . .	. . .	. . .		1
		PANEL INSTL, WING STATION 275.5 TO 288.91 FUEL . . .								
		JETTISON CHUTE (LH ONLY) (SEE 28-6, FIG. 10)								
	103	65-7078-4	. . .	. . .	. . .	. . .	. . .	. . .		1
		PANEL INSTL, WING STATION 275.5 TO 288.91 FUEL . . .								
		JETTISON CHUTE (RH ONLY) (SEE 28-6, FIG. 10)								
	104	9-65126-3001	. . .	. . .	. . .	. . .	. . .	. . .		1
		DOOR INSTL, AILERON SNUBBER ACCESS (LH ONLY) (SEE . .								
		27-2, FIG. 17)								
	104	9-65126-3002	. . .	. . .	. . .	. . .	. . .	. . .		1
		DOOR INSTL, AILERON SNUBBER ACCESS (RH ONLY) (SEE . .								
		27-2, FIG. 17)								
	105	65-7065-1	. . .	. . .	. . .	. . .	. . .	. . .		1
		STRUCTURE INSTL, FUEL JETTISON CHUTE (LH ONLY) (SEE .								
		28-6, FIG. 11)								
	105	65-7065-2	. . .	. . .	. . .	. . .	. . .	. . .		1
		STRUCTURE INSTL, FUEL JETTISON CHUTE (RH ONLY) (SEE .								
		28-6, FIG. 11)								
	106A	65-19168-1	. . .	. . .	. . .	. . .	. . .	. . .		1
		TRAILING EDGE INSTL, WING FILLET (LH ONLY) (SEE 57-5, FIG. 12)								
	106A	65-19168-2	. . .	. . .	. . .	. . .	. . .	. . .		1
		TRAILING EDGE INSTL, WING FILLET (RH ONLY) (SEE 57-5, FIG. 12)								
	107	65-3673-1	. . .	. . .	. . .	. . .	. . .	. . .		1
		TRAILING EDGE INSTL, REAR SPAR TO BODY STATION 899. .								
		WING FILLET (LH ONLY) (SEE 57-5, FIG. 6)								
	107	65-3673-2	. . .	. . .	. . .	. . .	. . .	. . .		1
		TRAILING EDGE INSTL, REAR SPAR TO BODY STATION 899. .								
		WING FILLET (RH ONLY) (SEE 57-5, FIG. 6)								
	108	65-1065-1	. . .	. . .	. . .	. . .	. . .	. . .	0150	1
	108	65-1065-1	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
		TRACK INSTL, FLAP (LH ONLY) (SEE 27-6, FIG. 66) . . .								
		ONLY) (SEE 27-6, FIG. 66)								
	108	65-1065-2	. . .	. . .	. . .	. . .	. . .	. . .	0150	1
	108	65-1065-2	. . .	. . .	. . .	. . .	. . .	. . .	5199	1
		TRACK INSTL, FLAP (RH ONLY) (SEE 27-6, FIG. 66) . . .								
		ONLY) (SEE 27-6, FIG. 66)								
		5-86066-3001	. . .	. . .	. . .	. . .	. . .	. . .		1
		RIB INSTL, WING STATION 719.92 WING TRAILING EDGE (LH ONLY)								
		5-86066-3002	. . .	. . .	. . .	. . .	. . .	. . .		1
		RIB INSTL, WING STATION 719.92 WING TRAILING EDGE (RH ONLY)								
	108A	NAS679A3W	. . .	. . .	. . .	. . .	. . .	. . .		3
	108B	AN960PD1032	. . .	. . .	. . .	. . .	. . .	. . .		3
	108C	NAS1103-3W	. . .	. . .	. . .	. . .	. . .	. . .		1
		BOLT								

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
12 108D 109	NAS1103-4W 5-86066-3014	. . BOLT. SEAL, WING STATION 719.92 WING TRAILING EDGE RIB. MOHAIR (BAC1523-22 X 18.0 IN. LG) ATTACHING PARTS		2 1
	NAS600-6 AN960D6L NAS679A04W	. . SCREW WASHER. NUT		18 18 18
	65-1111-1	. RIB INSTL, TRAILING EDGE STATION 281.424 TRAILING . . EDGE (LH ONLY)		1
	65-1111-2	. RIB INSTL, TRAILING EDGE STATION 281.424 TRAILING . . EDGE (RH ONLY)		1
110	65-1111-55	. . WEB ASSY, TRAILING EDGE STATION 281.424 TRAILING . . EDGE RIB (LH ONLY)		1
110	65-1111-56	. . WEB ASSY, TRAILING EDGE STATION 281.424 TRAILING . . EDGE RIB (RH ONLY)		1
111	5-86060-3001	. RIB INSTL, WING STATION 466.36 AILERON HINGE (LH. . . ONLY) (SEE 27-2, FIG. 16)		1
111	5-86060-3002	. RIB INSTL, WING STATION 466.36 AILERON HINGE (RH. . . ONLY) (SEE 27-2, FIG. 16)		1
112	5-86061-3001	. RIB INSTL, WING STATION 501.00 AILERON HINGE (LH. . . ONLY) (SEE 27-2, FIG. 16)		1
112	5-86061-3002	. RIB INSTL, WING STATION 501.00 AILERON HINGE (RH. . . ONLY) (SEE 27-2, FIG. 16)		1
113	5-86062-3001	. RIB INSTL, WING STATION 535.14 AILERON HINGE (LH. . . ONLY) (SEE 27-2, FIG. 16)		1
113	5-86062-3002	. RIB INSTL, WING STATION 535.14 AILERON HINGE (RH. . . ONLY) (SEE 27-2, FIG. 16)		1
114	69-8870	. CLIP, TRAILING EDGE ZEE SPLICE SUPPORT. ATTACHING PARTS		10
114A	MS20470D6	. RIVET		20
114B	BACB30LU3-5	. BOLT.		40
114C	BACS40E21-37	. SHIM.		10
114D	AN960D10L	. WASHER.		80
114E	NAS679A3W	. NUT		40
114F	69-8870-13	. CLIP, TRAILING EDGE ZEE SPLICE SUPPORT (LH ONLY). . .	0299	1
114F	69-8870-14	. CLIP, TRAILING EDGE ZEE SPLICE SUPPORT (RH ONLY). . .	0299	1
115	69-8870-3	. CLIP, TRAILING EDGE ZEE SPLICE SUPPORT (LH ONLY). . .	0101	1
115	69-8870-4	. CLIP, TRAILING EDGE ZEE SPLICE SUPPORT (RH ONLY). . . ATTACHING PARTS	0101	1
115A	MS20470D6	. RIVET		2
115B	BACB30LU3-6	. BOLT.		4
115C	BACS40E21-37	. SHIM.		1
115D	BACS40R9C22	. SHIM.	0299	1
115E	AN960D10L	. WASHER.		4
115F	AN960D10	. WASHER.		4
115G	NAS679A3W	. NUT		4
116	69-8870-7	. CLIP, TRAILING EDGE ZEE SPLICE SUPPORT (LH ONLY). . .		1
116	69-8870-8	. CLIP, TRAILING EDGE ZEE SPLICE SUPPORT (RH ONLY). . . ATTACHING PARTS		1
116A	BACB30LU3-5	. BOLT.		4
116B	NAS1104-6	. BOLT.		2
116C	BACS40E21-37	. SHIM.		1
116D	AN960D10L	. WASHER.		8
116E	AN960PD416	. WASHER.		2
116F	NAS679A3W	. NUT		4
116G	NAS679A4W	. NUT		2
117	69-8870-9	. CLIP, TRAILING EDGE ZEE SPLICE SUPPORT (LH ONLY). . .		1
117	69-8870-10	. CLIP, TRAILING EDGE ZEE SPLICE SUPPORT (RH ONLY). . . ATTACHING PARTS		1
	BACB30LU3-5	. BOLT.		4
	BACS40A21-37	. SHIM.		1
	AN960D10L	. WASHER.		8
	NAS679A3W	. NUT		4
118	69-8870-11	. CLIP, TRAILING EDGE ZEE SPLICE SUPPORT (LH ONLY). . .		1
118	69-8870-12	. CLIP, TRAILING EDGE ZEE SPLICE SUPPORT (RH ONLY). . . ATTACHING PARTS		1
	BACB30LU3-6	. BOLT.		4
	BACS40B13-32	. SHIM.		1
	AN960D10L	. WASHER.		4

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
12	NAS679A3W	.	NUT		4
119	69-8870-1	.	CLIP, TRAILING EDGE ZEE SPLICE SUPPORT. ATTACHING PARTS		7
	NAS517-3-6	.	SCREW		28
	BACS40817-32	.	SHIM.		7
	AN960D10L	.	WASHER.		14
	NAS679A3W	.	NUT		14
120	69-4978-1	.	CORNER, UPPER TRAILING EDGE ZEE (LH ONLY)	0101	1
120	69-4978-2	.	CORNER, UPPER TRAILING EDGE ZEE (RH ONLY) ATTACHING PARTS	0101	1
	BACB30LU3-4	.	BOLT.	0101	6
	66-9393	.	SHIM, TRAILING EDGE LAMINATED	0101	1
	AN960D10L	.	WASHER.	0101	6
	NAS679A3W	.	NUT	0101	6
120A	69-48827-1	.	CORNER, UPPER TRAILING EDGE ZEE (LH ONLY)	0299	1
120A	69-48827-2	.	CORNER, UPPER TRAILING EDGE ZEE (RH ONLY) ATTACHING PARTS	0299	1
120B	BACB30LU3-3	.	BOLT.	0299	5
120C	BACB30LU3-4	.	BOLT.	0299	6
120D	BACB30LU3-5	.	BOLT.	0299	2
120E	69-50250-1	.	SHIM.	0299	1
120F	AN960D10L	.	WASHER.	0299	15
120G	AN960D10	.	WASHER.	0299	6
120H	NAS679A3W	.	NUT	0299	13
121	69-8715-1	.	SPLICE, TRAILING EDGE LOWER PANEL ZEE (LH ONLY)		1
121	69-8715-2	.	SPLICE, TRAILING EDGE LOWER PANEL ZEE (RH ONLY) ATTACHING PARTS		1
	NAS517-3-8	.	SCREW		14
	NAS334CPA7	.	BOLT.		1
	AN960D10L	.	WASHER.		14
	AN960D416	.	WASHER.		1
	NAS679A3W	.	NUT		14
	NAS679A4W	.	NUT		1
122	65-6396-1	.	SPLICE, TRAILING EDGE LOWER PANEL ZEE (LH ONLY)		1
122	65-6396-2	.	SPLICE, TRAILING EDGE LOWER PANEL ZEE (RH ONLY) ATTACHING PARTS		1
	NAS517-3-4	.	SCREW		11
	AN960D10L	.	WASHER.		11
	NAS679A3W	.	NUT		11
123	65-6396-3	.	SPLICE, TRAILING EDGE LOWER PANEL ZEE (LH ONLY)		1
123	65-6396-4	.	SPLICE, TRAILING EDGE LOWER PANEL ZEE (RH ONLY)		1
124	65-6396-5	.	SPLICE, TRAILING EDGE LOWER PANEL ZEE (LH ONLY)		1
124	65-6396-6	.	SPLICE, TRAILING EDGE LOWER PANEL ZEE (RH ONLY) ATTACHING PARTS		1
	NAS517-3-5	.	SCREW		62
	AN960D10L	.	WASHER.		62
	NAS679A3W	.	NUT		62
125	65-6395-1	.	SPLICE, TRAILING EDGE UPPER PANEL ZEE (LH ONLY)		1
125	65-6395-2	.	SPLICE, TRAILING EDGE UPPER PANEL ZEE (RH ONLY) ATTACHING PARTS		1
	NAS517-5-11	.	SCREW		5
	NAS517-3-5	.	SCREW		8
	NAS517-3-3	.	SCREW		35
	BACS40821-118	.	SHIM.		AR
	AN960D516L	.	WASHER.		5
	AN960D10L	.	WASHER.		43
	NAS679A5	.	NUT		5
	NAS679A3W	.	NUT		43
126	65-6395-3	.	SPLICE, TRAILING EDGE UPPER PANEL ZEE (LH ONLY)		1
126	65-6395-4	.	SPLICE, TRAILING EDGE UPPER PANEL ZEE (RH ONLY) ATTACHING PARTS		1
	NAS517-3-3	.	SCREW		48
	BACS40A11-175	.	SHIM.		2
	BACS40A11-185	.	SHIM.		1
	BACS40A11-320	.	SHIM.		4
	AN960D10L	.	WASHER.		48

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
12	NAS679A3W	.	NUT		48
127	65-6395-9	.	SPLICE, TRAILING EDGE UPPER PANEL ZEE (LH ONLY) . . .		1
127	65-6395-10	.	SPLICE, TRAILING EDGE UPPER PANEL ZEE (RH ONLY) . . .		1
		.	ATTACHING PARTS		
	NAS517-3-3	.	SCREW		17
	NAS517-3-6	.	SCREW		2
	NAS517-3-7	.	SCREW		2
	NAS517-3-8	.	SCREW		1
	AN960D10L	.	WASHER		22
	NAS679A3W	.	NUT		22
128	65-1100-37	.	SPLICE, SECTION 16 INBOARD WING STRUCTURAL SPLICE ZEE (ALTERED FROM 65-6395-5) (LH ONLY)	0101	1
128	65-1100-38	.	SPLICE, SECTION 16 INBOARD WING STRUCTURAL SPLICE ZEE (ALTERED FROM 65-6395-5) (RH ONLY)	0101	1
		.	ATTACHING PARTS		
	NAS517-3-3	.	SCREW	0101	16
	BACS40A11-160	.	SHIM	0101	1
	AN960D10L	.	WASHER	0101	16
	NAS679A3W	.	NUT	0101	16
129	65-68069-29	.	SEAL INSTL, INBOARD SPOILER LEADING EDGE (LH ONLY). (SEE 27-4, FIG. 9)		1
129	65-68069-30	.	SEAL INSTL, INBOARD SPOILER LEADING EDGE (RH ONLY). (SEE 27-4, FIG. 9)		1
	65-1103-1	.	RIB INSTL, STATION 96.573 TRAILING EDGE HINGE (LH ONLY)		1
	65-1103-2	.	RIB INSTL, STATION 96.573 TRAILING EDGE HINGE (RH ONLY)		1
	65-1108-1	.	RIB INSTL, STATION 219.420 TRAILING EDGE (LH ONLY).		1
	65-1108-2	.	RIB INSTL, STATION 219.420 TRAILING EDGE (RH ONLY).		1
132	65-1108-33	.	STRIP, RUB.		1
	65-1109-1	.	RIB INSTL, STATION 247.663 TRAILING EDGE (LH ONLY).		1
	65-1109-2	.	RIB INSTL, STATION 247.663 TRAILING EDGE (RH ONLY).		1
133	65-1109-28	.	STRIP, RUB.		1
	69-16571-1	.	STRIP INSTL, STATION 54.00 TRAILING EDGE HINGE RUBBER (LH ONLY)		1
	69-16571-2	.	STRIP INSTL, STATION 54.00 TRAILING EDGE HINGE RUBBER (RH ONLY)		1
	69-16571-7	.	STRIP, RUBBER (LH ONLY)		1
	69-16571-8	.	STRIP, RUBBER (RH ONLY)		1
	65-1115-1	.	BEAM INSTL, SPOILER HINGE (LH ONLY)		1
	65-1115-2	.	BEAM INSTL, SPOILER HINGE (RH ONLY)		1
134	65-1115-13	.	SUPPORT, TRAILING EDGE STATION 183.432.		1
		.	ATTACHING PARTS		
135	NAS1104-6W	.	SCREW		2
136	NAS517-4-6	.	SCREW		1
137	NAS1104-7W	.	SCREW		3
138	AN960PD416L	.	WASHER		5
139	AN960PD416	.	WASHER		1
140	NAS679A4W	.	NUT		6
141	65-1115-13	.	SUPPORT, TRAILING EDGE STATION 68.214		1
		.	ATTACHING PARTS		
142	NAS1104-6W	.	SCREW		2
143	NAS517-4-6	.	SCREW		1
144	NAS1104-7W	.	SCREW		3
145	AN960PD416L	.	WASHER		6
146	BACN108Y54W	.	NUT		6
147	65-1115-14	.	SUPPORT, TRAILING EDGE STATION 155.072 AND 96.573 .		2
		.	ATTACHING PARTS		
148	NAS1104-12W	.	SCREW		4
149	NAS1104-11W	.	SCREW		4
150	AN960PD416L	.	WASHER		8
151	NAS679A4W	.	NUT, TRAILING EDGE STATION 155.072.		4
152	BACN108Y54W	.	NUT, TRAILING EDGE STATION 96.573		4
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

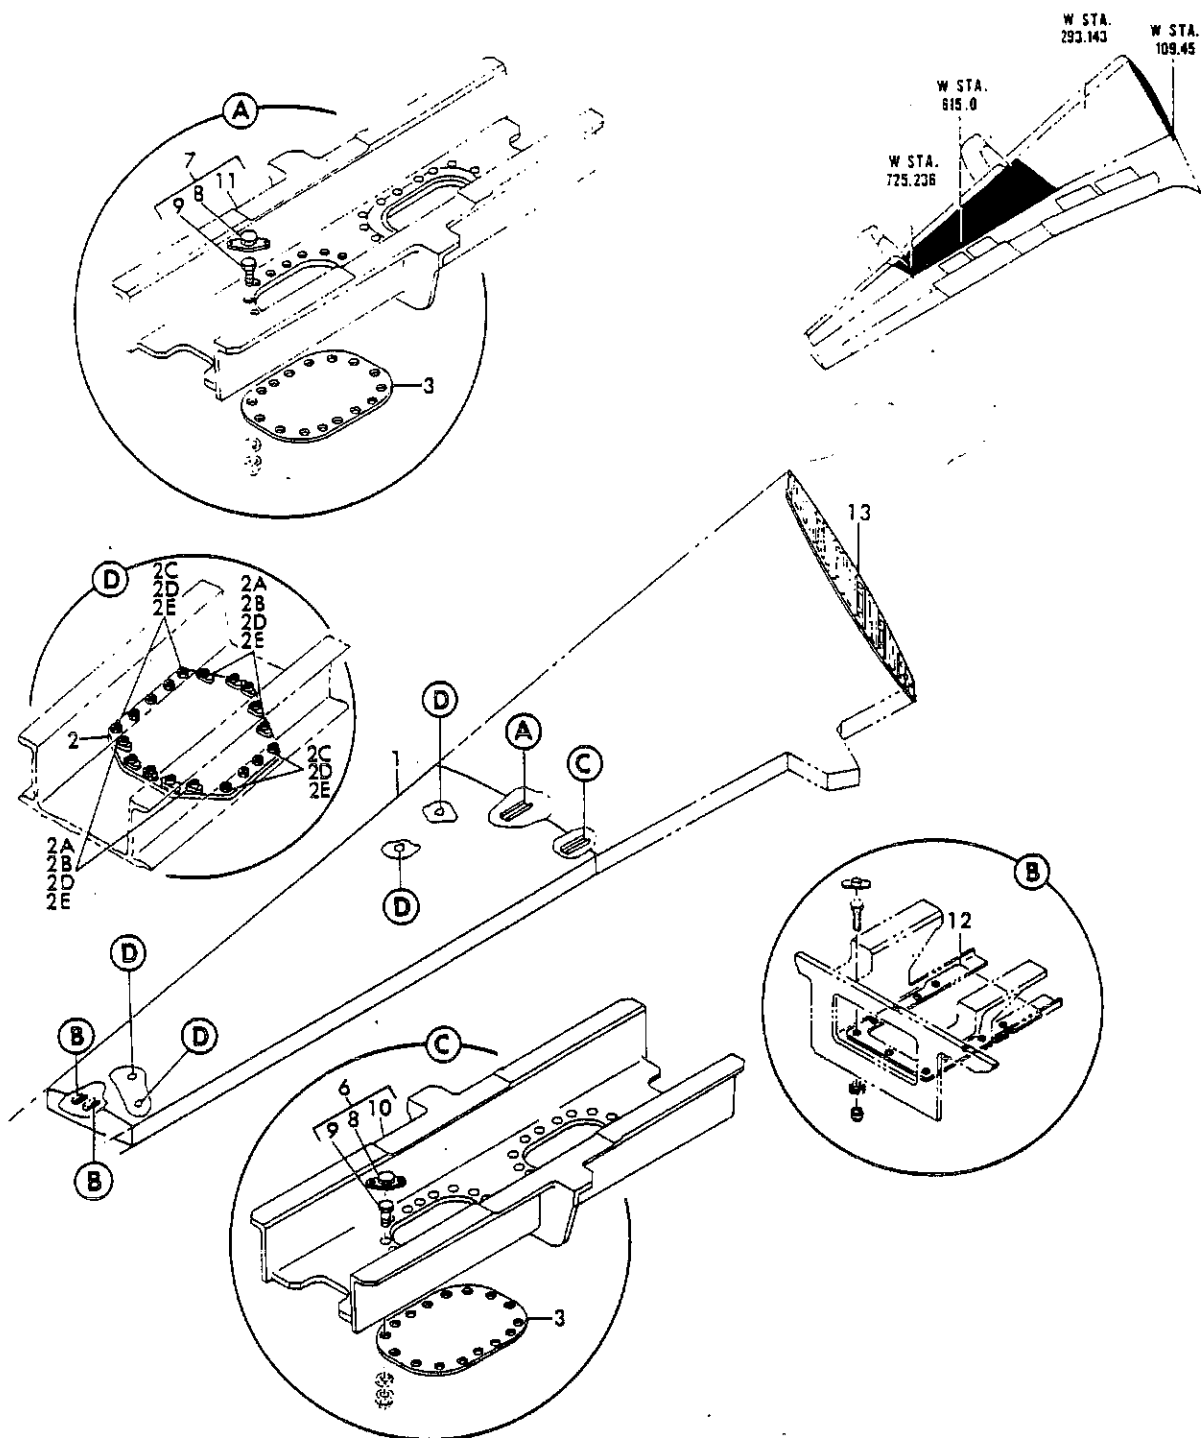


FIGURE 13. PANEL INSTL, SECTION 12 WING UPPER



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
13	65-1041-1	PANEL INSTL, SECTION 12 WING UPPER (LH) (SEE FIG. 2, . . ITEM 6)		RF
	65-1041-2	PANEL INSTL, SECTION 12 WING UPPER (RH) (SEE FIG. 2, . . ITEM 6)		RF
R	65-1043-1	. PANEL INSTL, STATION 360 TO PRODUCTION BREAK (LH. . . ONLY)	0150	1
R	65-1043-2	. PANEL INSTL, STATION 360 TO PRODUCTION BREAK (RH. . . ONLY)	0150	1
R	65-1043-1	. PANEL INSTL, STATION 360 TO PRODUCTION BREAK. (VARIABLE DWG;65-1043-5001) (LH ONLY)	5199	1
R	65-1043-2	. PANEL INSTL, STATION 360 TO PRODUCTION BREAK. (VARIABLE DWG;65-1043-5002) (RH ONLY)	5199	1
R	1 65-1043-3	. . PANEL ASSY, WING STATION 360 TO PRODUCTION BREAK. . UPPER (LH ONLY)		1
	1 65-1043-4	. . PANEL ASSY, WING STATION 360 TO PRODUCTION BREAK. . UPPER (RH ONLY)		1
R	2 6-68050	. . . DOOR, FUEL VENT ACCESS.	0150	4
R	2 6-68050-1	. . . DOOR, FUEL VENT ACCESS. ATTACHING PARTS	5199	4
	2A BACR10G131	. . . RETAINER.		40
	2B AN3-5A	. . . BOLT.		40
	2C AN3-6A	. . . BOLT.		36
	2D AN960PD10	. . . WASHER.		76
	2E NAS679A3W	. . . NUT		76

	65-1046-1	. SPLICE INSTL, (LH ONLY)	0101	1
R	65-1046-59	. SPLICE INSTL, (LH ONLY)	0250	1
R	2E 65-1046-59	. SPLICE INSTL, (VARIABLE DWG;65-1046-5001) (LH ONLY) . .	5151	1
R	2E 65-1046-59	. SPLICE INSTL, (VARIABLE DWG;65-1046-5005) (LH ONLY) . .	5299	1
	65-1046-2	. SPLICE INSTL, (RH ONLY)	0101	1
R	65-1046-60	. SPLICE INSTL, (RH ONLY)	0250	1
R	2E 65-1046-60	. SPLICE INSTL, (VARIABLE DWG;65-1046-5002) (RH ONLY) . .	5151	1
R	2E 65-1046-60	. SPLICE INSTL, (VARIABLE DWG;65-1046-5006) (RH ONLY) . .	5299	1
R	3 6-68032	. . DOOR, FUEL TANK VENT ACCESS	0150	2
R	3 6-68032-1	. . DOOR, FUEL TANK VENT ACCESS ATTACHING PARTS	5199	2
	AN960PD10L	. . WASHER.		32
	NAS679A3W	. . NUT		32

	6 65-1046-43	. . FITTING ASSY, (LH ONLY)	0101	1
R	6 65-1046-87	. . FITTING ASSY, (LH ONLY)	0250	1
R	6 65-1046-151	. . FITTING ASSY, (LH ONLY)	5199	1
	6 65-1046-44	. . FITTING ASSY, (RH ONLY)	0101	1
R	6 65-1046-88	. . FITTING ASSY, (RH ONLY)	0250	1
R	6 65-1046-152	. . FITTING ASSY, (RH ONLY)	5199	1
	7 65-1046-45	. . FITTING ASSY, (LH ONLY)	0101	1
R	7 65-1046-89	. . FITTING ASSY, (LH ONLY)	0250	1
R	7 65-1046-153	. . FITTING ASSY, (LH ONLY)	5199	1
	7 65-1046-46	. . FITTING ASSY, (RH ONLY)	0101	1
R	7 65-1046-90	. . FITTING ASSY, (RH ONLY)	0250	1
R	7 65-1046-154	. . FITTING ASSY, (RH ONLY)	5199	1
	8 BACR10G131	. . . RETAINER.		32
	9 AN3-6A	. . . BOLT.		32
	10 65-5684-5	. . . FITTING, VENT (LH ONLY) (USED ON 65-1046-43). . .	0101	1
R	10 65-64244-1	. . . FITTING, VENT (LH ONLY) (USED ON 65-1046-87). . .	0250	1
R	10 65-64244-5	. . . FITTING, VENT (LH ONLY) (USED ON 65-1046-151). . .	5199	1
	10 65-5684-6	. . . FITTING, VENT (RH ONLY) (USED ON 65-1046-44). . .	0101	1
R	10 65-64244-2	. . . FITTING, VENT (RH ONLY) (USED ON 65-1046-88). . .	0250	1
R	10 65-64244-6	. . . FITTING, VENT (RH ONLY) (USED ON 65-1046-152). . .	5199	1
	11 65-5684-3	. . . FITTING, VENT (LH ONLY) (USED ON 65-1046-45). . .	0101	1
R	11 65-64244-3	. . . FITTING, VENT (LH ONLY) (USED ON 65-1046-89). . .	0250	1
R	11 65-64244-7	. . . FITTING, VENT (LH ONLY) (USED ON 65-1046-153). . .	5199	1
	11 65-5684-4	. . . FITTING, VENT (RH ONLY) (USED ON 65-1046-46). . .	0101	1
R	11 65-64244-4	. . . FITTING, VENT (RH ONLY) (USED ON 65-1046-90). . .	0250	1
R	11 65-64244-8	. . . FITTING, VENT (RH ONLY) (USED ON 65-1046-154). . .	5199	1
R	40-1614-1	. FITTING INSTL, PRODUCTION BREAK RIB INBOARD UPPER (LH ONLY)	0150	1
R	40-1614-1	. FITTING INSTL, PRODUCTION BREAK RIB INBOARD UPPER . . (VARIABLE DWG;40-1614-5001) (LH ONLY)	5199	1
R	40-1614-2	. FITTING INSTL, PRODUCTION BREAK RIB INBOARD UPPER (RH ONLY)	0150	1
R	40-1614-2	. FITTING INSTL, PRODUCTION BREAK RIB INBOARD UPPER . . (VARIABLE DWG;40-1614-5002) (RH ONLY)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *707* Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
R R R	13	12	40-1614-51	.	.	PLATE, PRODUCTION BREAK RIB INBOARD UPPER FITTING .				0150	2
		12	40-1614-219	.	.	COVER					
				.	.	PLATE, COVER.				5199	2
				.	.	ATTACHING PARTS					
			BACR10G31	.	.	RETAINER.					20
			6810-048	.	.	RETAINER, ONE LUG BOLT (V80539)					4
			NAS464P3A5	.	.	BOLT.					20
			NAS464P4A6	.	.	BOLT.					4
			AN960PD10	.	.	WASHER.					20
			AN960PD416	.	.	WASHER.					4
			NAS679A3W	.	.	NUT.					20
			NAS679A4W	.	.	NUT.					4
				.	.	-----*					
	13		64-1009-19	.	.	CHORD INSTL, BODY BUTTOCK LINE 70.5 WING RIB UPPER. .					1
				.	.	(LH ONLY) (SEE 28-3, FIG. 12)					
	13		64-1009-20	.	.	CHORD INSTL, BODY BUTTOCK LINE 70.5 WING RIB UPPER. .					1
				.	.	(RH ONLY) (SEE 28-3, FIG. 12)					
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

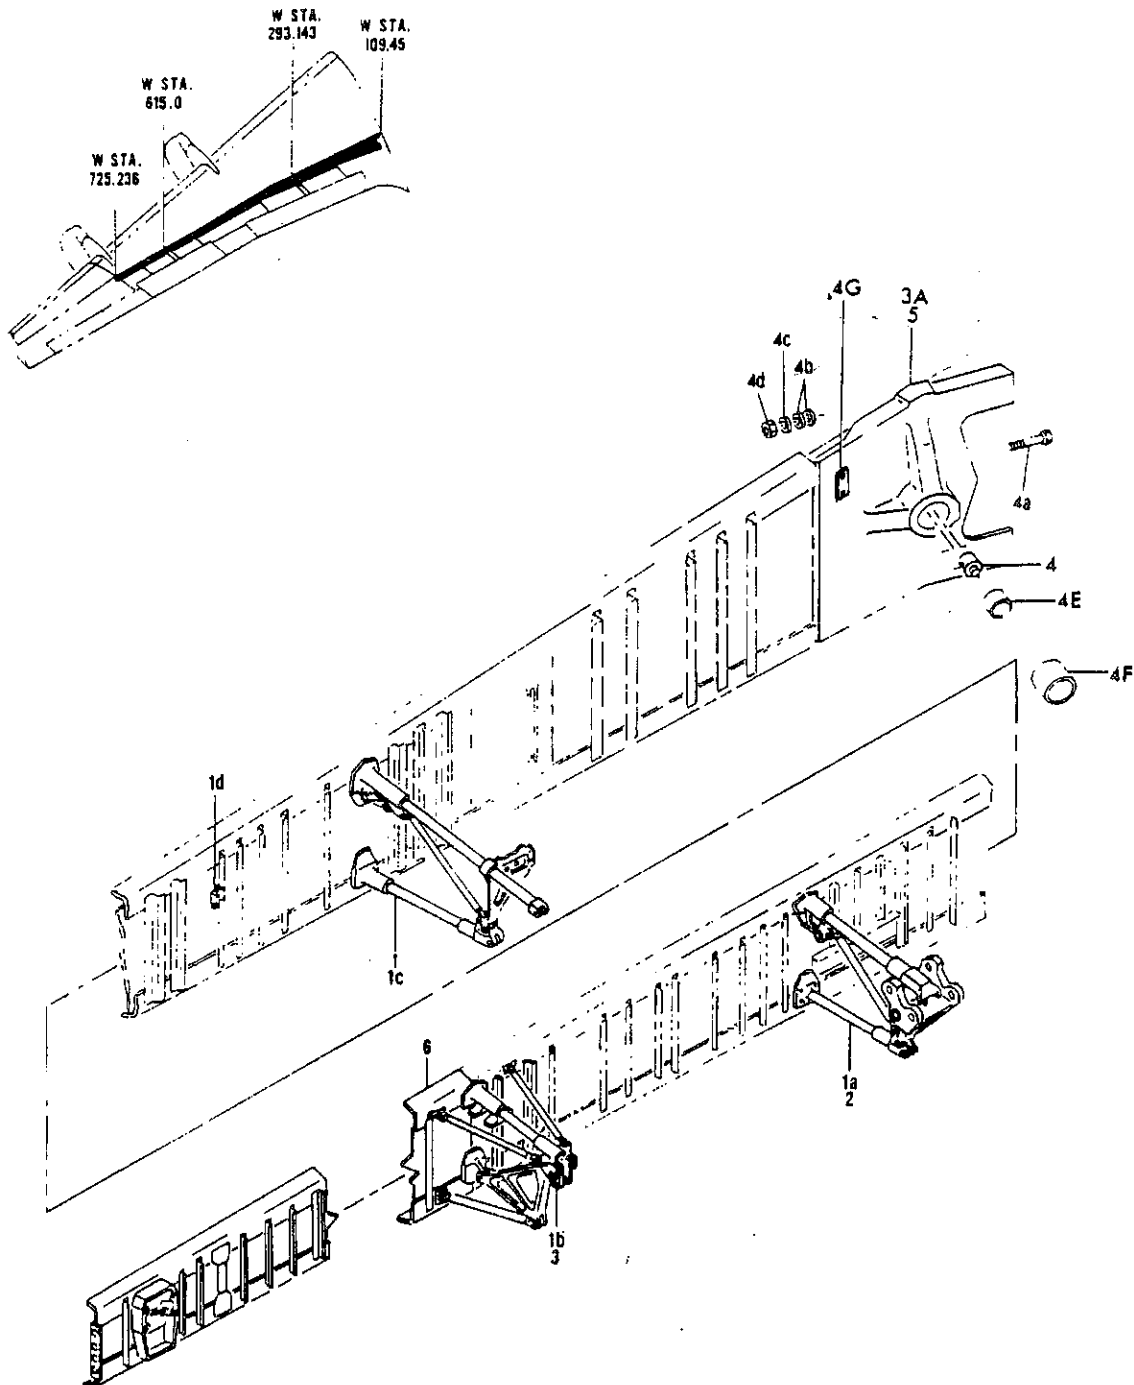


FIGURE 14. SPAR INSTL, INBOARD WING REAR

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R R R	14	64-1026-1	SPAR INSTL, INBOARD WING REAR (LH) (SEE FIG. 2, ITEM. 29)	0150 RF
		64-1026-1	SPAR INSTL, INBOARD WING REAR (VARIABLE DWG;64-1026-5001) (LH) (SEE FIG. 2, ITEM 29)	5199 RF
		64-1026-2	SPAR INSTL, INBOARD WING REAR (RH) (SEE FIG. 2, ITEM. 29)	0150 RF
		64-1026-2	SPAR INSTL, INBOARD WING REAR (VARIABLE DWG;64-1026-5002) (RH) (SEE FIG. 2, ITEM 29)	5199 RF
	1	65-3739-5	. STRUCTURE INSTL, FLAP STATION 47.307 (WING STATION. 214.468) FLAP TRACK SUPPORT (LH ONLY) (SEE 27-6, FIG. 65)	1
	1	65-3739-6	. STRUCTURE INSTL, FLAP STATION 47.307 (WING STATION. 214.468) FLAP TRACK SUPPORT (RH ONLY) (SEE 27-6, FIG. 65)	1
	1A	65-3740-19	. STRUCTURE INSTL, FLAP STATION 125.888 (WING STATION. 293.143) FLAP TRACK SUPPORT (LH ONLY) (SEE 27-6, FIG. 63)	1
	1A	65-3740-20	. STRUCTURE INSTL, FLAP STATION 125.888 (WING STATION. 293.143) FLAP TRACK SUPPORT (RH ONLY) (SEE 27-6, FIG. 63)	1
	1B	65-3741-23	. STRUCTURE INSTL, FLAP STATION 192.665 (WING STATION. 360) FLAP TRACK SUPPORT (LH ONLY) (SEE 27-6, FIG. 61)	1
	1B	65-3741-24	. STRUCTURE INSTL, FLAP STATION 192.665 (WING STATION. 360) FLAP TRACK SUPPORT (RH ONLY) (SEE 27-6, FIG. 61)	1
		64-1026-193	. SPAR ASSY, INBOARD WING REAR (LH ONLY).	0101 1
		64-1026-241	. SPAR ASSY, (LH ONLY).	0299 1
		64-1026-194	. SPAR ASSY, INBOARD WING REAR (RH ONLY).	0101 1
		64-1026-242	. SPAR ASSY, (RH ONLY).	0299 1
		65-45073-12	. . . TERMINAL ASSY, BODY BUTTOCK LINE 70.5 REAR SPAR WING (RH ONLY)	0150 1
R R R R R R		65-45073-56	. . . TERMINAL ASSY, BODY BUTTOCK LINE 70.5 (RH ONLY)	5199 1
	3A	65-45073-55	. . . TERMINAL ASSY, BODY BUTTOCK LINE 70.5 (LH ONLY)	5199 1
	3A	65-45073-11	. . . TERMINAL ASSY, BODY BUTTOCK LINE 70.5 REAR SPAR WING (LH ONLY)	0150 1
	4	66-3884	. . . SLEEVE, REAR SPAR PIN RETAINER.	1
R R R	4A	NAS1108-46W	. . . BOLT.	0150 1
	4A	NAS1108-48W	. . . BOLT.	0150 1
	4A	NAS1108-48W	. . . BOLT.	5199 1
	4B	NAS1598D8Y	. . . WASHER.	2
	4C	AN960PD816	. . . WASHER.	1
	4D	NAS1022A8	. . . NUT	1
R R R R R R R R	5	65-45073-13	. . . TERMINAL, BODY BUTTOCK LINE 70.5 REAR SPAR WING (LH ONLY)	0150 1
	5	65-45703-51	. . . TERMINAL, (LH ONLY)	5199 1
		65-45073-14	. . . TERMINAL, BODY BUTTOCK LINE 70.5 REAR SPAR WING (RH ONLY)	0150 1
		65-45703-52	. . . TERMINAL, (RH ONLY)	5199 1
	6	5-84013-3093	. SPAR INSTL, INBOARD WING REAR (LH ONLY) (SEE FIG. 15)	0150 1
	6	5-84013-3093	. SPAR INSTL, INBOARD WING REAR (VARIABLE DWG;5-84013-5001) (LH ONLY) (SEE FIG. 15)	5199 1
	6	5-84013-3094	. SPAR INSTL, INBOARD WING REAR (RH ONLY) (SEE FIG. 15)	0150 1
	6	5-84013-3094	. SPAR INSTL, INBOARD WING REAR (VARIABLE DWG;5-84013-5002) (RH ONLY) (SEE FIG. 15)	5199 1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

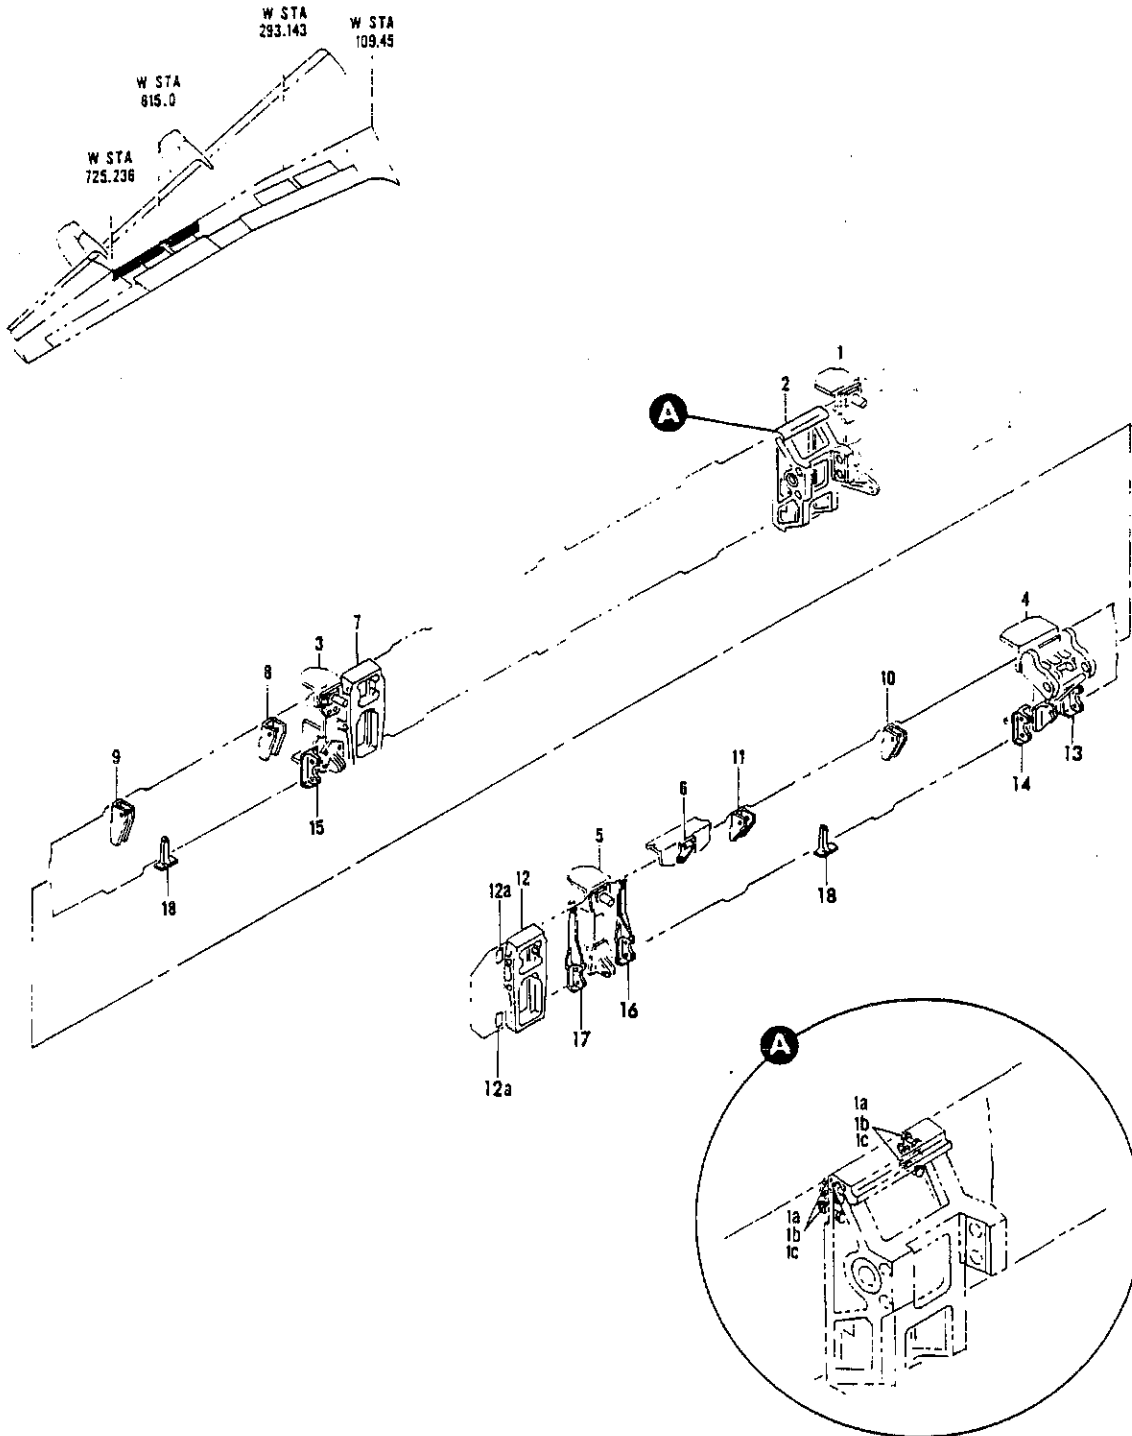


FIGURE 15. SPAR INSTL, INBOARD WING REAR



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
15	5-84013-3093	SPAR INSTL, INBOARD WING REAR (LH) (SEE FIG. 14, ITEM 6)	0150	RF
	5-84013-3093	SPAR INSTL, INBOARD WING REAR (VARIABLE DWG 5-84013-5001) (LH) (SEE FIG. 14, ITEM 6)	5199	RF
	5-84013-3094	SPAR INSTL, INBOARD WING REAR (RH) (SEE FIG. 14, ITEM 6)	0150	RF
	5-84013-3094	SPAR INSTL, INBOARD WING REAR (VARIABLE DWG 5-84013-5002) (LH) (SEE FIG. 14, ITEM 6)	5199	RF
1	65-3742-17	. STRUCTURE INSTL, FLAP STATION 270.507 (WING STATION 438.551) FLAP TRACK SUPPORT (LH ONLY) (SEE 27-6, FIG. 59)		1
1	65-3742-18	. STRUCTURE INSTL, FLAP STATION 270.507 (WING STATION 438.551) FLAP TRACK SUPPORT (RH ONLY) (SEE 27-6, FIG. 59)		1
1A	NAS1103-8W	. BOLT		6
1B	AN960PD10L	. WASHER		6
1C	NAS679A3W	. NUT		6
	5-84013-3357	. SPAR ASSY, INBOARD WING REAR (LH ONLY)		1
	5-84013-3358	. SPAR ASSY, INBOARD WING REAR (RH ONLY)		1
2	65-19489-13	. . SUPPORT ASSY, WING STATION 444 INBOARD FLAP SCREW (OPTIONAL 65-19489-9) (LH ONLY) (SEE 27-6, FIG. 56)	0150	1
2	65-19489-19	. . SUPPORT ASSY, WING STATION 444 INBOARD FLAP SCREW (LH ONLY) (SEE 27-6, FIG. 56)	5199	1
2	65-19489-14	. . SUPPORT ASSY, WING STATION 444 INBOARD FLAP SCREW (OPTIONAL 65-19489-10) (RH ONLY) (SEE 27-6, FIG. 56)	0150	1
2	65-19489-20	. . SUPPORT ASSY, WING STATION 444 INBOARD FLAP SCREW (RH ONLY) (SEE 27-6, FIG. 56)	5199	1
3	5-85643-3001	. . STRUCTURE INSTL, WING STATION 546.30 FLAP TRACK SUPPORT (LH ONLY) (SEE 27-6, FIG. 58)		1
3	5-85643-3002	. . STRUCTURE INSTL, WING STATION 546.30 FLAP TRACK SUPPORT (RH ONLY) (SEE 27-6, FIG. 58)		1
4	5-85644-3001	. . STRUCTURE INSTL, WING STATION 615 FLAP TRACK SUPPORT (LH ONLY) (SEE 27-6, FIG. 57)		1
4	5-85644-3002	. . STRUCTURE INSTL, WING STATION 615 FLAP TRACK SUPPORT (RH ONLY) (SEE 27-6, FIG. 57)		1
5	5-85645-3001	. . STRUCTURE INSTL, WING STATION 700.50 FLAP TRACK SUPPORT (LH ONLY) (SEE 27-6, FIG. 55)		1
5	5-85645-3002	. . STRUCTURE INSTL, WING STATION 700.50 FLAP TRACK SUPPORT (RH ONLY) (SEE 27-6, FIG. 55)		1
6	5-85646-3003	. . STRUCTURE INSTL, WING STATION 683.10 SIDE BRACE ATTACHMENT (LH ONLY) (SEE 27-6, FIG. 56)		1
6	5-85646-3004	. . STRUCTURE INSTL, WING STATION 683.10 SIDE BRACE ATTACHMENT (RH ONLY) (SEE 27-6, FIG. 56)		1
7	5-85691-2	. . SUPPORT, WING STATION 541.887 OUTBOARD FLAP SCREW		1
8	6-68071-2000	. . SUPPORT, WING STATION 557.39 SPOILER HINGE		1
9	6-72725-2000	. . SUPPORT, WING STATION 585.75 SPOILER HINGE (OPTIONAL 6-72725-2001)		1
9	6-72725-2001	. . SUPPORT, WING STATION 585.75 SPOILER HINGE (OPTIONAL TO 6-72725-2000)		1
10	6-72726-2000	. . SUPPORT, WING STATION 644.25 SPOILER HINGE (OPTIONAL 6-72726-2001)		1
10	6-72726-2001	. . SUPPORT, WING STATION 644.25 SPOILER HINGE (OPTIONAL TO 6-72726-2000)		1
11	6-72727-2000	. . SUPPORT, WING STATION 672.61 SPOILER HINGE		1
12	5-85692-1	. . SUPPORT, WING STATION 715.387 OUTBOARD FLAP SCREW		1
12A	BACS40816-24	. . SHIM		AR
13	65-19422-1	. . HOUSING, OUTBOARD COVE LIP DOOR TORSION BAR BEARING (LH)	0150	1
13	65-19422-2	. . HOUSING, OUTBOARD COVE LIP DOOR TORSION BAR BEARING (RH)	0150	1
13	65-19422-13	. . HOUSING, OUTBOARD COVE LIP DOOR TORSION BAR BEARING (LH)	5199	1
13	65-19422-14	. . HOUSING, OUTBOARD COVE LIP DOOR TORSION BAR BEARING (RH)	5199	1
14	65-19422-2	. . HOUSING, OUTBOARD COVE LIP DOOR TORSION BAR BEARING (LH)	0150	1
14	65-19422-1	. . HOUSING, OUTBOARD COVE LIP DOOR TORSION BAR BEARING (RH)	0150	1
14	65-19422-14	. . HOUSING, OUTBOARD COVE LIP DOOR TORSION BAR BEARING (LH)	5199	1
14	65-19422-13	. . HOUSING, OUTBOARD COVE LIP DOOR TORSION BAR BEARING (RH)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
 PARTS CATALOG

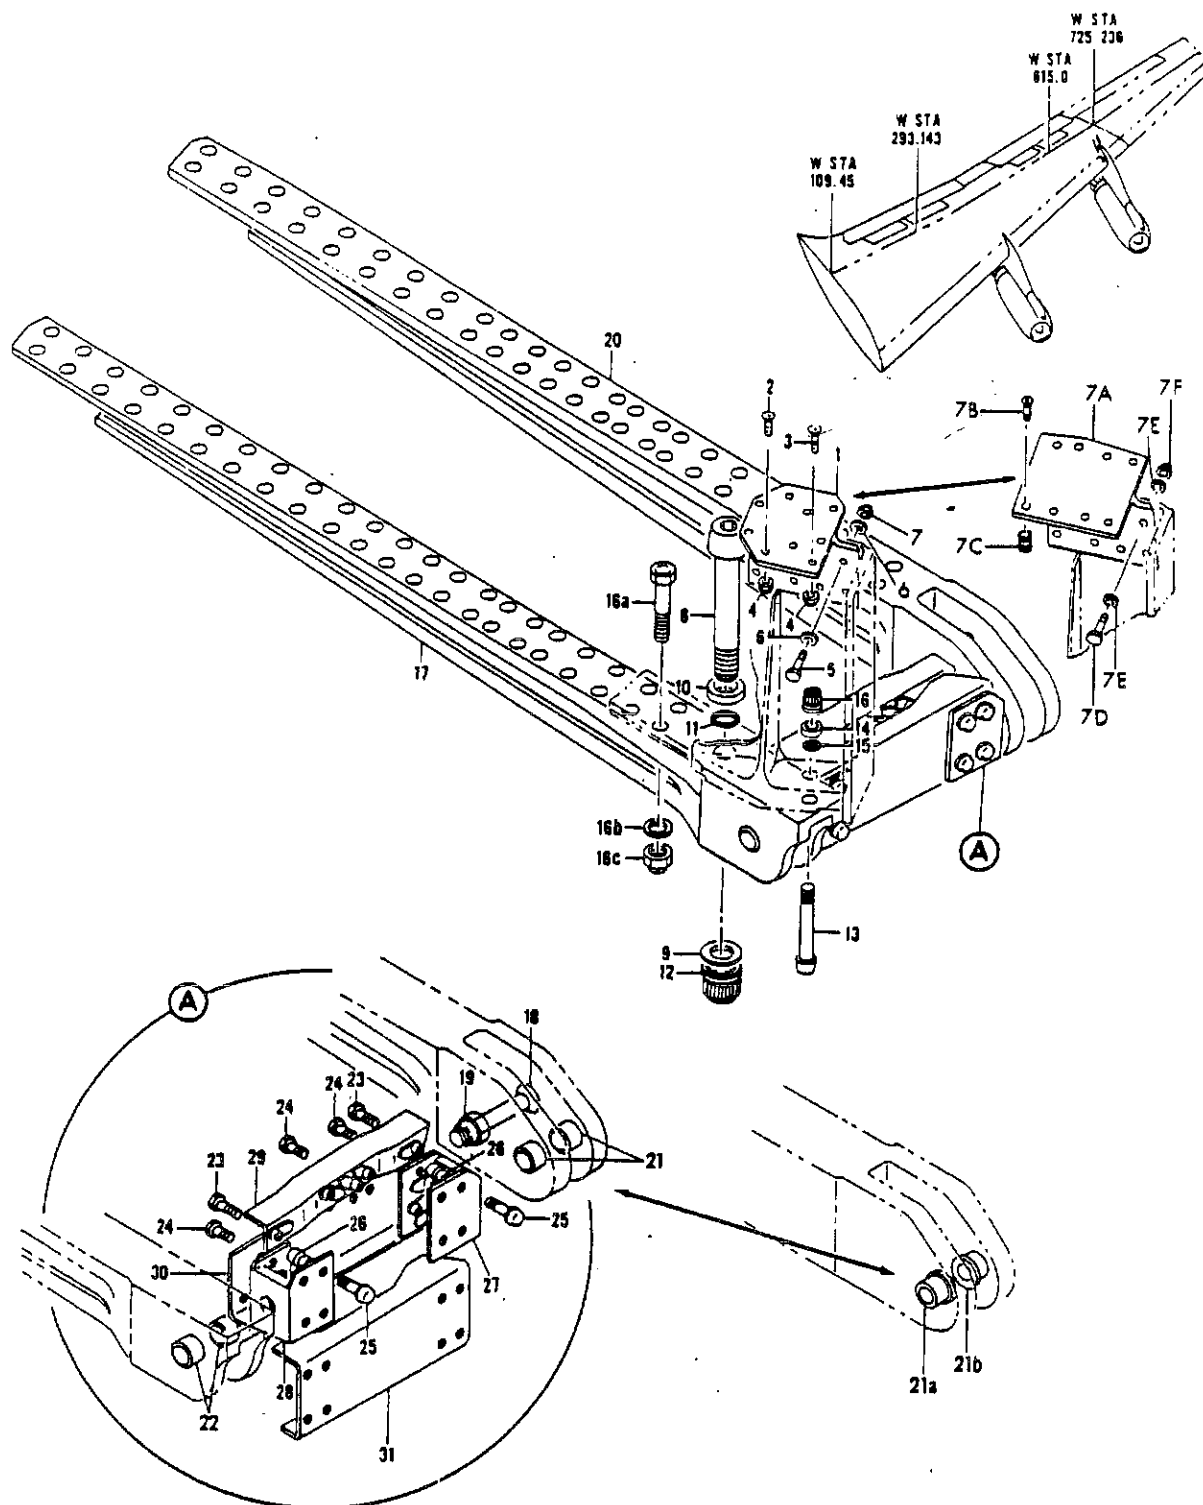


FIGURE 16. SUPPORT INST., OUTBOARD NACELLE FORWARD DRAG,

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
16	50-8728-17	SUPPORT INSTL, OUTBOARD NACELLE FORWARD DRAG (LH) (SEE FIG. 2, ITEM 1)		RF
	50-8728-18	SUPPORT INSTL, OUTBOARD NACELLE FORWARD DRAG (RH) (SEE FIG. 2, ITEM 1)		RF
1	90-9461-1	. TEE, OUTBOARD NACELLE FRONT SPAR SUPPORT (LH ONLY).	0150	1
1	90-9461-2	. TEE, OUTBOARD NACELLE FRONT SPAR SUPPORT (RH ONLY).	0150	1
		ATTACHING PARTS		
2	BACB30ABP4-6A	. BOLT.	0150	4
3	BACB30ABP4-8A	. BOLT.	0150	5
4	NAS679A4W	. NUT	0150	9
5	NAS464P6A10	. BOLT.	0150	8
6	AN960PD616L	. WASHER.	0150	16
7	BACN10BY56	. NUT	0150	8

7A	69-61111-1	. TEE, FRONT SPAR (LH ONLY)	5199	1
7A	69-61111-2	. TEE, FRONT SPAR (RH ONLY)	5199	1
		ATTACHING PARTS		
7B	BACB30FN10	. BOLT.	5199	8
7C	BACC30M10	. COLLAR.	5199	8
7D	BACB30NF6-10	. BOLT.	5199	8
7E	AN960PD616L	. WASHER.	5199	16
7F	BACN10JC6	. NUT	5199	8

8	MS20014-89	. BOLT.		1
9	AN960PD1416	. WASHER.		1
10	6-55097-16	. WASHER, TENSION BOLT O RING SEAL.		1
11	MS29513-118	. PACKING		1
12	BACN10814L	. NUT		1
13	MS20010-32	. BOLT.		1
14	6-55097-5	. WASHER, TENSION BOLT O RING SEAL.		1
15	MS29513-114	. PACKING		1
16	BACN10B10L	. NUT		1
16A	NAS1104-24	. BOLT.		1
16B	AN960PD416	. WASHER.		1
16C	NAS679A4W	. NUT		1
17	50-8732-13	. SUPPORT, INBOARD (LH ONLY).	0150	1
		(OPTIONAL 50-8732-15)		
17	50-8732-15	. SUPPORT, INBOARD (LH ONLY).	0150	1
		(OPTIONAL TO 50-8732-13)		
17	50-8732-15	. SUPPORT, INBOARD (LH ONLY).	5199	1
17	50-8732-14	. SUPPORT, INBOARD (RH ONLY).	0150	1
		(OPTIONAL 50-8732-16)		
17	50-8732-16	. SUPPORT, INBOARD (RH ONLY).	0150	1
		(OPTIONAL TO 50-8732-14)		
17	50-8732-16	. SUPPORT, INBOARD (RH ONLY).	5199	1
18	BACB30ABP14-51A	. BOLT.		1
19	NAS1022A14	. NUT		1
20	50-8733-17	. SUPPORT, OUTBOARD (LH ONLY).	0150	1
		(OPTIONAL 50-8733-19)		
20	50-8733-19	. SUPPORT, OUTBOARD (LH ONLY).	0150	1
		(OPTIONAL TO 50-8733-17)		
20	50-8733-19	. SUPPORT, OUTBOARD (LH ONLY).	5199	1
20	50-8733-18	. SUPPORT, OUTBOARD (RH ONLY).	0150	1
		(OPTIONAL 50-8733-20)		
20	50-8733-20	. SUPPORT, OUTBOARD (RH ONLY).	0150	1
		(OPTIONAL TO 50-8733-18)		
20	50-8733-20	. SUPPORT, OUTBOARD (RH ONLY).	5199	1
21A	69-42475-5	. BUSHING, PRESSED FIT STRUCTURAL		1
21B	69-42475-18	. BUSHING, PRESSED FIT STRUCTURAL		1
22	69-42475-6	. BUSHING, PRESSED FIT STRUCTURAL		2
23	NAS1104-4W	. BOLT.		2
24	NAS1104-3W	. BOLT.		9
25	BACB30AN8-4	. BOLT.	5199	8
25	BACB30AN8-4	. BOLT, (DELETED BY EIS 63337 AND RAF 7211.019-225)	0150	4
25	BACB30AN8-4	. BOLT.	0150	4
25	BACB30AN10-4	. BOLT, (ADDED BY EIS 63337 AND RAF 7211.019-225)	0150	4
26	BACC30A8	. COLLAR.		8
27	60-6988-1	. CHANNEL ASSY, OUTBOARD NACELLE FORWARD DRAG SUPPORT (LH ONLY)		1
27	60-6988-2	. CHANNEL ASSY, OUTBOARD NACELLE FORWARD DRAG SUPPORT (RH ONLY)		1
28	69-11768-1	. CHANNEL ASSY, OUTBOARD NACELLE FORWARD DRAG SUPPORT (LH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
16 28	69-11768-2	.	.	.	.	.	.	.	.	1
		.	.	.	.	.	.	.	.	1
29	60-6986-11	.	.	.	.	.	.	.	.	1
29	60-6986-12	.	.	.	.	.	.	.	.	1
30	60-6985-5	.	.	.	.	.	.	.	.	1
30	60-6985-6	.	.	.	.	.	.	.	.	1
31	60-6987-11	.	.	.	.	.	.	.	.	1
31	60-6987-12	.	.	.	.	.	.	.	.	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

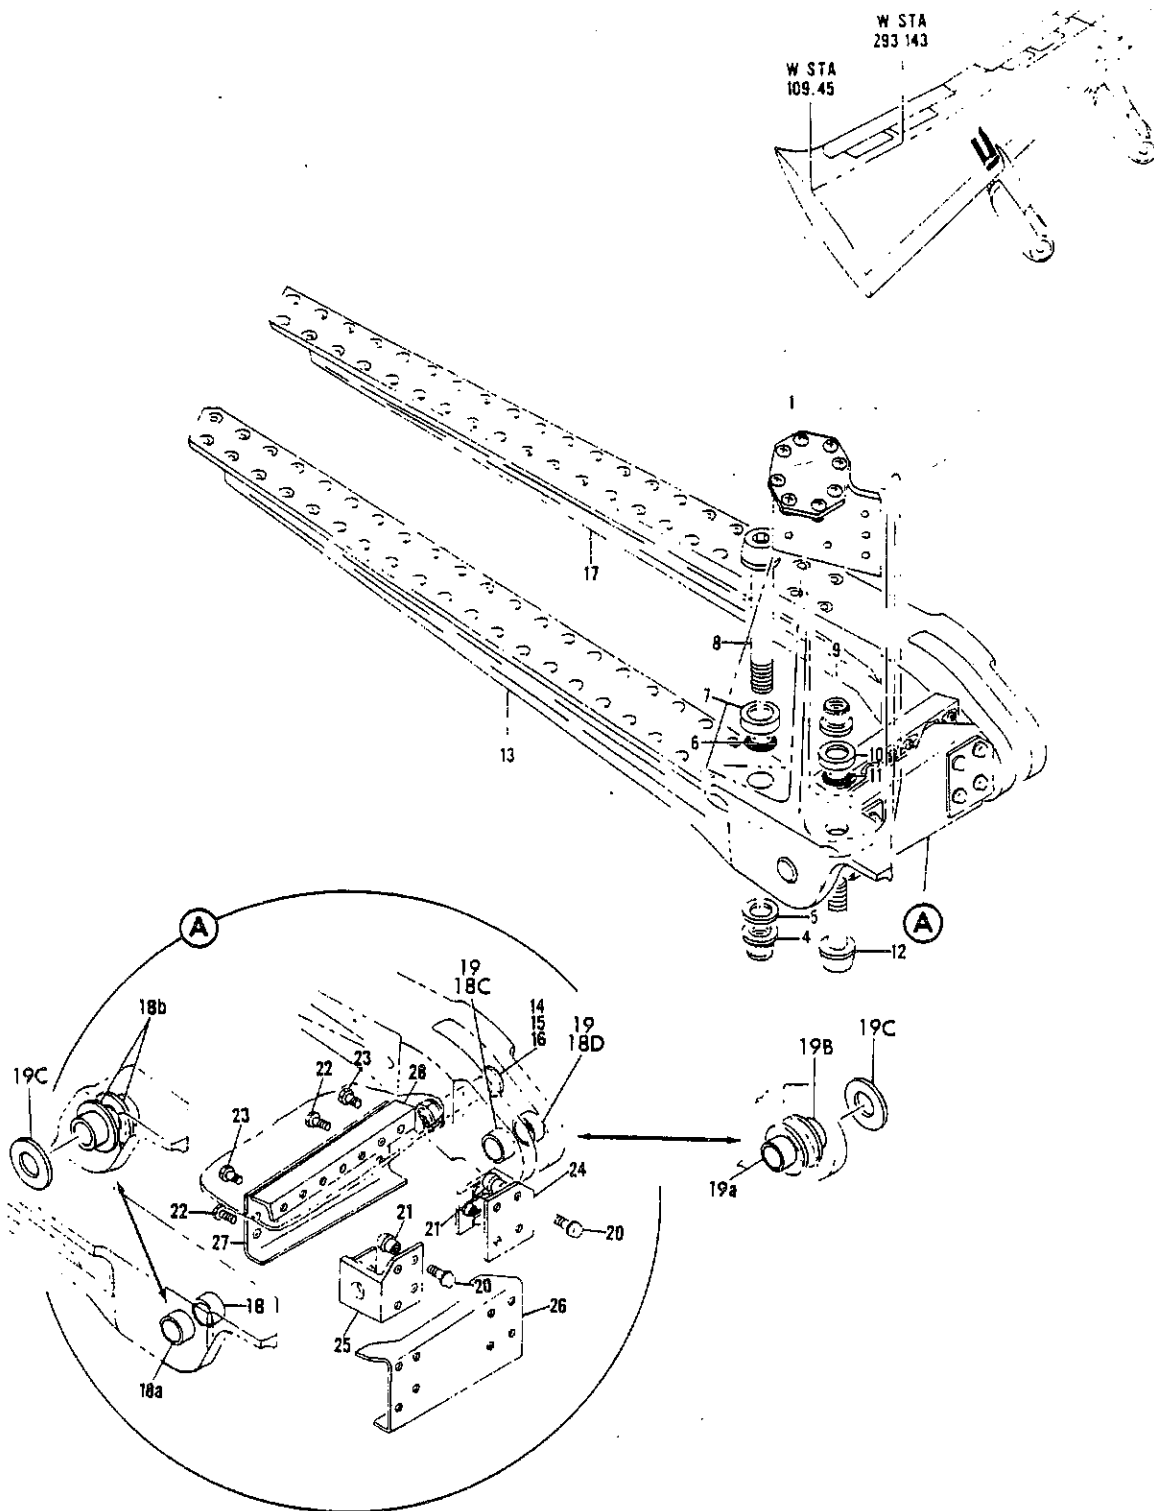


FIGURE 17. SUPPORT INSTL, INBOARD NACELLE FORWARD DRAG



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
17	50-8727-17	SUPPORT INSTL, INBOARD NACELLE FORWARD DRAG (LH) (SEE FIG. 2, ITEM 5)		RF
	50-8727-18	SUPPORT INSTL, INBOARD NACELLE FORWARD DRAG (RH) (SEE FIG. 2, ITEM 5)		RF
4	BACN10GW162	. NUT		1
5	AN960-1616	. WASHER		1
6	MS29513-120	. PACKING		1
7	6-55097-18	. WASHER, TENSION BOLT O-RING SEAL		1
8	BACB30NE16-84	. BOLT		1
9	BACN10B426	. NUT		1
10	6-55097-6	. WASHER, TENSION BOLT O-RING SEAL		1
11	MS29513-116	. PACKING		1
12	BACB30FD12-40	. BOLT (OPTIONAL BACB30MT12T38)		1
12	BACB30MT12T38	. BOLT (OPTIONAL TO BACB30FD12-40)		1
13	50-6884-51	. SUPPORT, (LH ONLY) (OPTIONAL TO 50-6884-53)	5299	1
13	50-6884-53	. SUPPORT, (LH ONLY) (OPTIONAL 50-6884-51)	5299	1
13	50-6884-45	. SUPPORT, (LH ONLY) (OPTIONAL 50-6884-49)	0150	1
13	50-6884-49	. SUPPORT, (LH ONLY) (OPTIONAL TO 50-6884-45)	0150	1
13	50-6884-49	. SUPPORT, (LH ONLY)	5151	1
13	50-6884-46	. SUPPORT, (RH ONLY) (OPTIONAL 50-6884-50)	0150	1
13	50-6884-50	. SUPPORT, (RH ONLY) (OPTIONAL TO 50-6884-46)	0150	1
13	50-6884-50	. SUPPORT, (RH ONLY)	5151	1
13	50-6884-54	. SUPPORT, (RH ONLY) (OPTIONAL 50-6884-52)	5299	1
13	50-6884-52	. SUPPORT, (RH ONLY) (OPTIONAL TO 50-6884-54)	5299	1
14	BACN10BY512	. NUT		2
15	AN960PD1216	. WASHER		2
16	BACB30ABP12-62A	. BOLT		2
17	50-6887-9	. SUPPORT, (LH ONLY) (OPTIONAL 50-6887-13, 15)	0150	1
17	50-6887-13	. SUPPORT, (LH ONLY) (OPTIONAL TO 50-6887-9)	0150	1
17	50-6887-15	. SUPPORT, (LH ONLY) (OPTIONAL TO 50-6887-9)	0150	1
17	50-6887-15	. SUPPORT, (LH ONLY)	5151	1
17	50-6887-19	. SUPPORT, (LH ONLY) (OPTIONAL 50-6887-17)	5299	1
17	50-6887-17	. SUPPORT, (LH ONLY) (OPTIONAL TO 50-6887-19)	5299	1
17	50-6887-10	. SUPPORT, (RH ONLY) (OPTIONAL 50-6887-14, 16)	0150	1
17	50-6887-14	. SUPPORT, (RH ONLY) (OPTIONAL TO 50-6887-10)	0150	1
17	50-6887-16	. SUPPORT, (RH ONLY) (OPTIONAL TO 50-5887-10)	0150	1
17	50-6887-16	. SUPPORT, (RH ONLY)	5151	1
17	50-6887-20	. SUPPORT, (RH ONLY) (OPTIONAL 50-6887-18)	5299	1
17	50-6887-18	. SUPPORT, (RH ONLY) (OPTIONAL TO 50-6887-20)	5299	1
18B	69-42475-10	. BUSHING, PRESSED FIT STRUCTURAL		2
19A	69-42475-9	. BUSHING, PRESSED FIT STRUCTURAL		1
19B	69-42475-15	. BUSHING, PRESSED FIT STRUCTURAL		1
19C	AN960-2016L	. WASHER		2
20	BACB30AN8-4	. BOLT		8
21	BACC30A8	. COLLAR		8
22	NAS1104-3W	. BOLT		6
23	NAS1103-3W	. BOLT		7
24	69-11765-1	. CHANNEL ASSY, INBOARD NACELLE FORWARD DRAG SUPPORT. . (LH ONLY)		1
24	69-11765-2	. CHANNEL ASSY, INBOARD NACELLE FORWARD DRAG SUPPORT. . (RH ONLY)		1
25	69-11756-1	. CHANNEL ASSY, INBOARD NACELLE FORWARD DRAG SUPPORT. . (LH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
17	25	69-11756-2	. CHANNEL ASSY, INBOARD NACELLE FORWARD DRAG SUPPORT. . (RH ONLY)								1
	26	60-6981-5	. CHANNEL, (LH ONLY).								1
	26	60-6981-6	. CHANNEL, (RH ONLY).								1
	27	60-6979-7	. ANGLE, (LH ONLY).								1
	27	60-6979-8	. ANGLE, (RH ONLY).								1
	28	60-6980-5	. ANGLE, (LH ONLY).								1
	28	60-6980-6	. ANGLE, (RH ONLY).								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

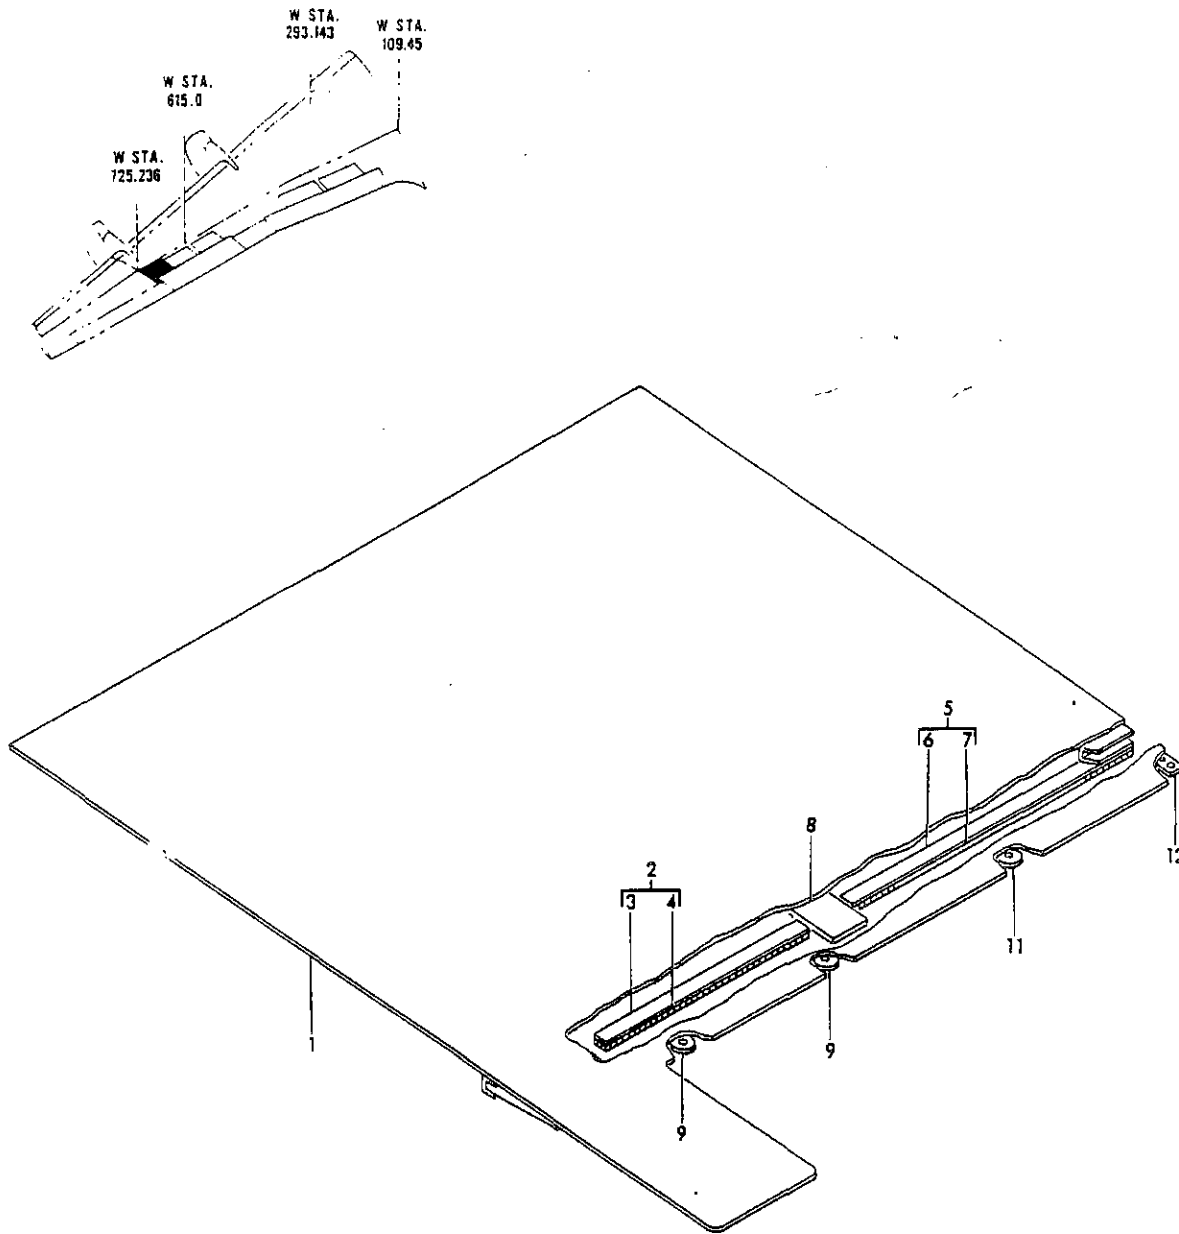


FIGURE 18. PANEL ASSY, WING STATION 680.63 TO 719.92 TRAILING EDGE BONDED

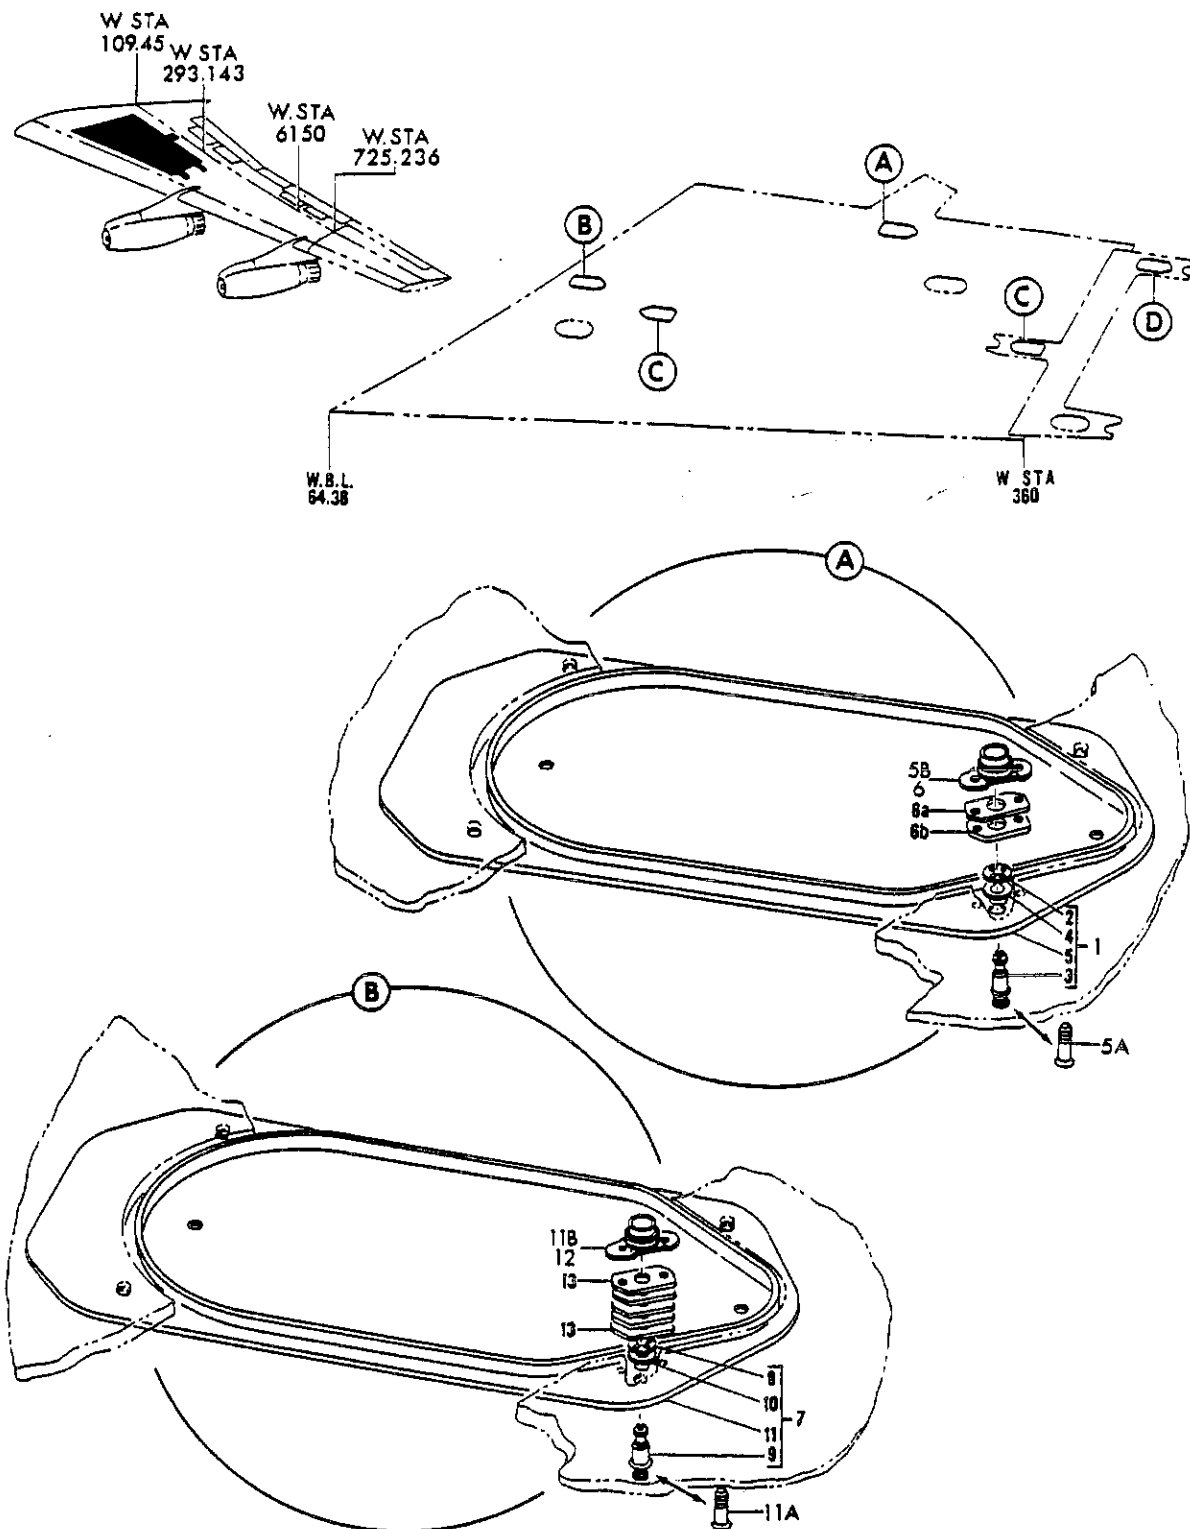


FIGURE 19. DOOR INSTL, BOOST PUMP ACCESS (SHEET 1)

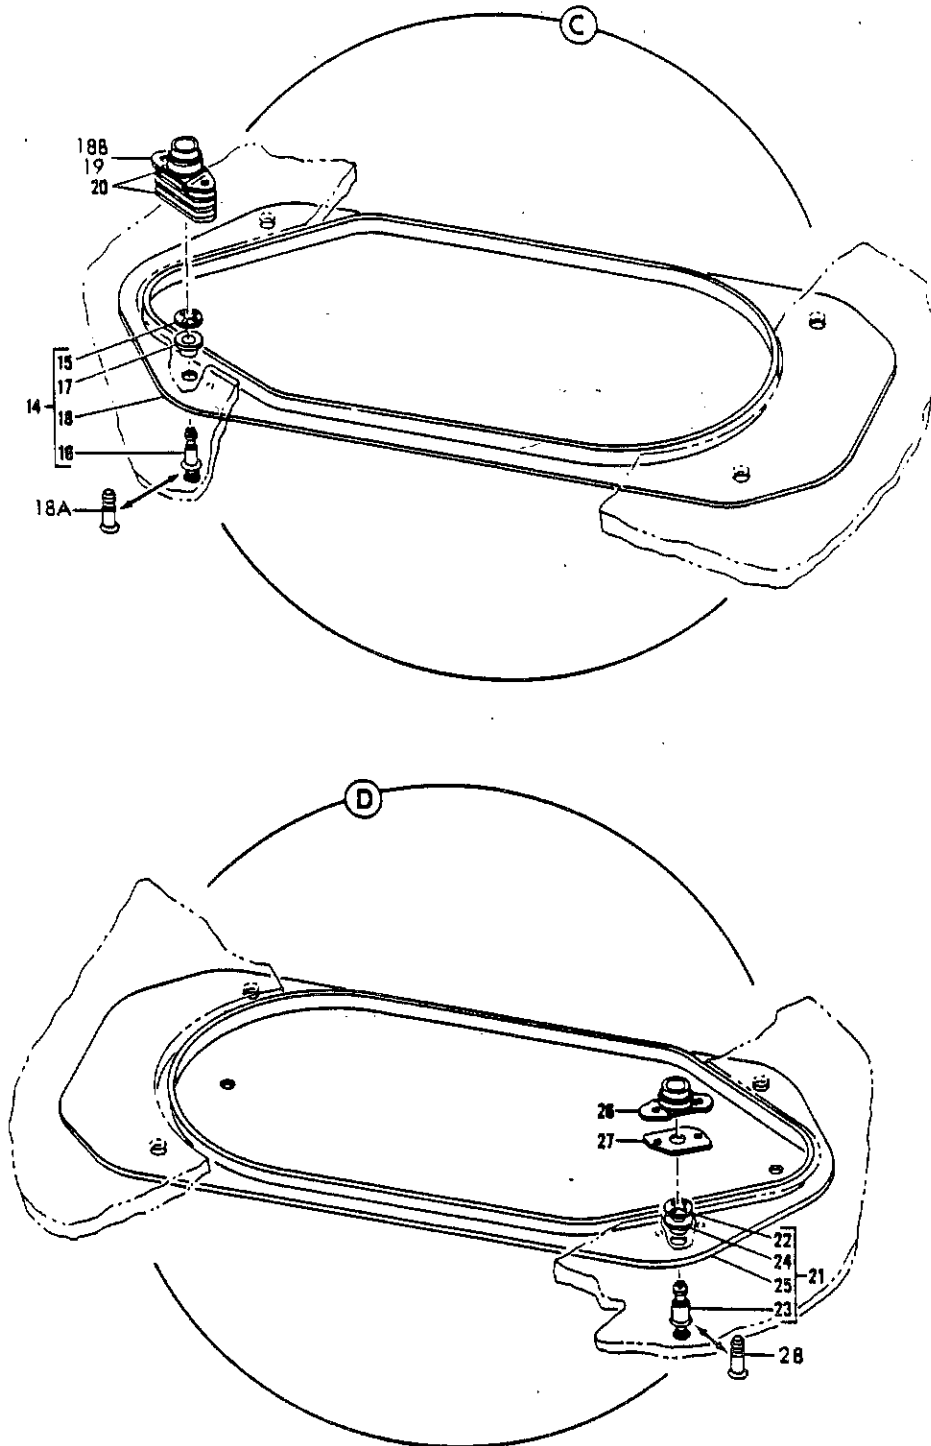


FIGURE 19. DOOR INSTL BOOST PUMP ACCESS (SHEET 2)

BOEING **707** Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE						EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7		
19	9-61152-3007	DOOR INSTL, BOOST PUMP ACCESS								RF
	9-61152-3008	. DOOR INSTL, WING BUTTOCK LINE 129.62 AFT LOWER.								RF
		SURFACE BOOST PUMP ACCESS (LH) (SEE 28-3, FIG. 6, ITEM 19)								
1	9-62519-3004	. . DOOR ASSY								1
		(OPTIONAL 9-62519-3008)								
1	9-62519-3008	. . DOOR ASSY								1
		(OPTIONAL TO 9-62519-3004)								
4	BACG20L5	. . . GROMMET								4
5	9-62519-3005	. . . DOOR								1
5A	NAS517-4-12	. . . SCREW								4
	9-61182-3007	. DOOR INSTL, LOWER SURFACE OVERRIDE BOOST PUMP ACCESS								RF
		(LH) (SEE 28-3, FIG. 6, ITEM 17)								
	9-61182-3008	. DOOR INSTL, LOWER SURFACE OVERRIDE BOOST PUMP ACCESS								RF
		(RH) (SEE 28-3, FIG. 6, ITEM 17)								
7	9-62519-3004	. . DOOR ASSY								1
		(OPTIONAL 9-62519-3008)								
7	9-62519-3008	. . DOOR ASSY								1
		(OPTIONAL TO 9-62519-3004)								
10	BACG20L5	. . . GROMMET								4
11	9-62519-3005	. . . DOOR								1
11A	NAS517-4-5	. . . SCREW								4
	9-62531-3004	. DOOR INSTL, WING STATION 360 FORWARD LOWER SURFACE.								RF
		BOOST PUMP ACCESS (LH) (SEE 28-3, FIG. 6, ITEM 21)								
	9-62531-3005	. DOOR INSTL, WING STATION 360 FORWARD LOWER SURFACE.								RF
		BOOST PUMP ACCESS (RH) (SEE 28-3, FIG. 6, ITEM 21)								
	9-62529-3004	. DOOR INSTL, WING BUTTOCK LINE 129.62 FORWARD LOWER.								RF
		SURFACE BOOST PUMP ACCESS (LH) (SEE 28-3, FIG. 6, ITEM 18)								
	9-62529-3005	. DOOR INSTL, WING BUTTOCK LINE 129.62 FORWARD LOWER.								RF
		SURFACE BOOST PUMP ACCESS (RH) (SEE 28-3, FIG. 6, ITEM 18)								
14	9-62519-3004	. . DOOR ASSY								1
		(OPTIONAL 9-62519-3008)								
14	9-62519-3008	. . DOOR ASSY								1
		(OPTIONAL TO 9-62519-3004)								
17	BACG20L5	. . . GROMMET								4
18	9-62519-3005	. . . DOOR								1
18A	NAS517-4-7	. . . SCREW								4
	9-62530-3007	. DOOR INSTL, WING STATION 360 AFT LOWER SURFACE BOOST								RF
		PUMP ACCESS (LH) (SEE 28-3, FIG. 6, ITEM 20)								
	9-62530-3008	. DOOR INSTL, WING STATION 360 AFT LOWER SURFACE BOOST								RF
		PUMP ACCESS (RH) (SEE 28-3, FIG. 6, ITEM 20)								
21	9-62519-3004	. . DOOR ASSY								1
		(OPTIONAL 9-62519-3008)								
21	9-62519-3008	. . DOOR ASSY								1
		(OPTIONAL TO 9-62519-3004)								
24	BACG20L5	. . . GROMMET								4
25	9-62519-3005	. . . DOOR								1
28	NAS517-4-11	. . . SCREW								4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

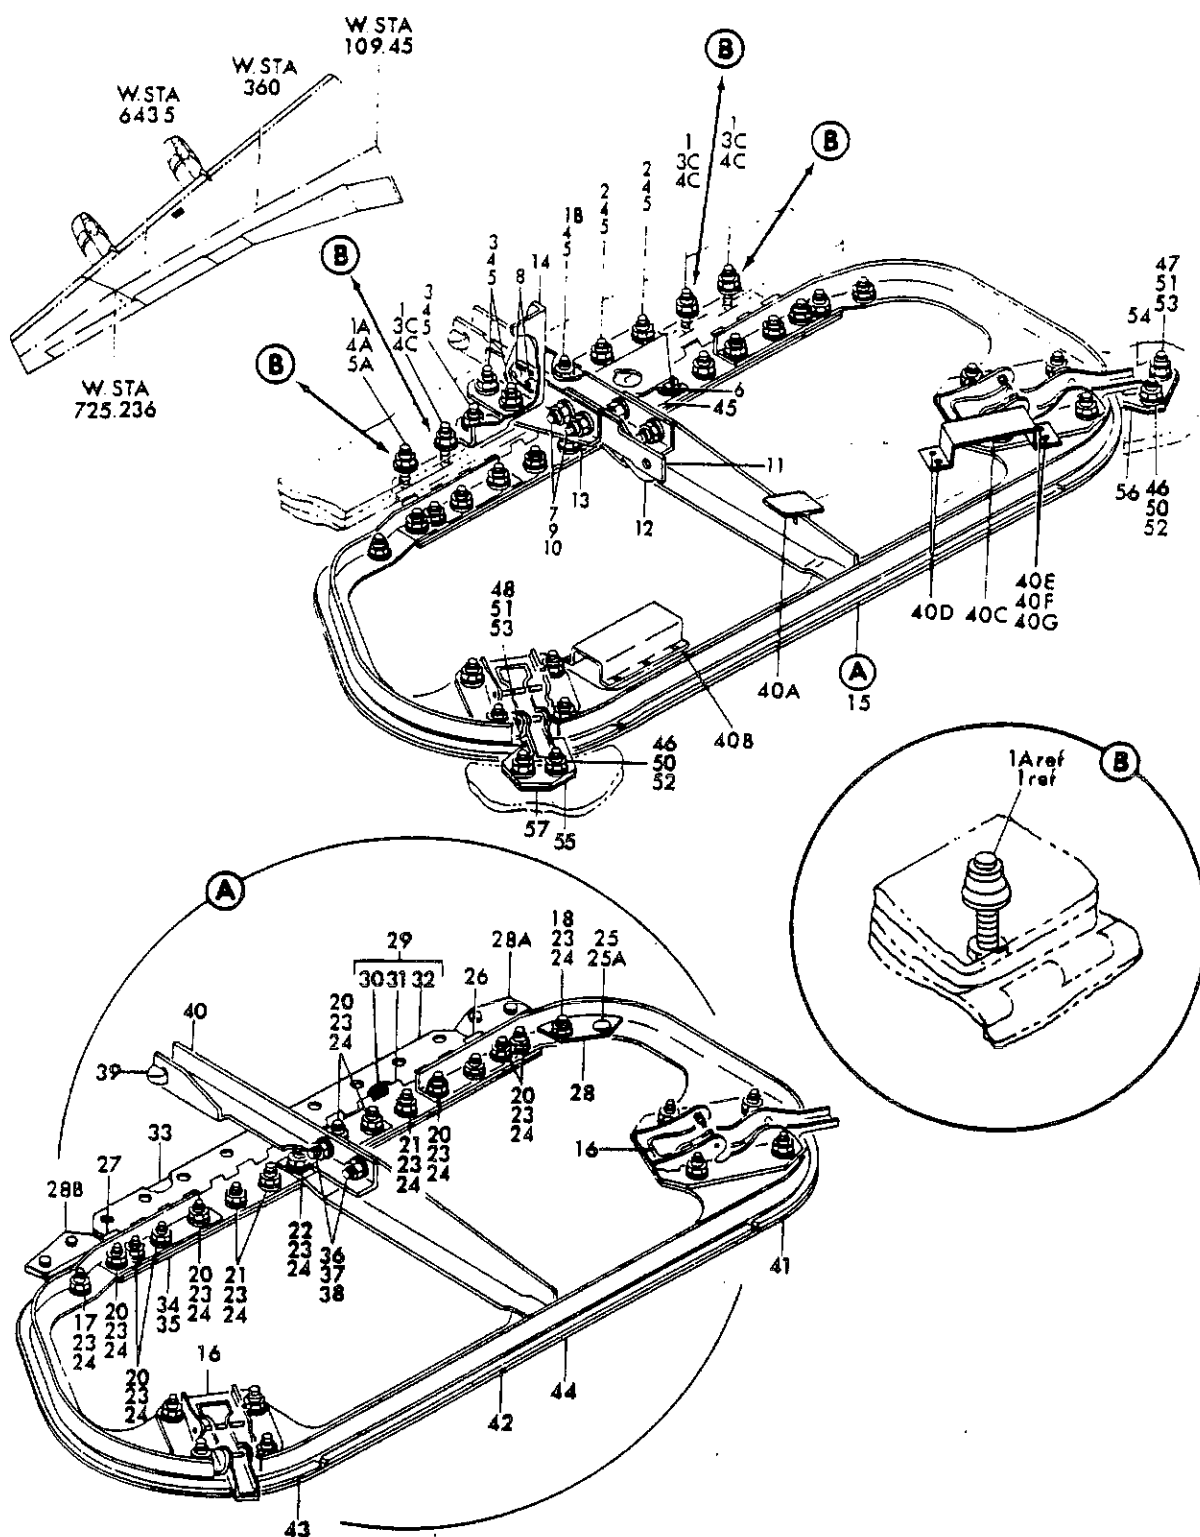


FIGURE 20A. DOOR INSTL, WING LOWER SURFACE DRY BAY REFUELING



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
20A	50-11333-51	DOOR INSTL, WING LOWER SURFACE DRY BAY REFUELING (LH). (SEE 28-3, FIG. 6, ITEM 24)		RF
	50-11333-52	DOOR INSTL, WING LOWER SURFACE DRY BAY REFUELING (RH). (SEE 28-3, FIG. 6, ITEM 24)		RF
R	1	BACB30ABP3-11A	5199	3
R	1	BACB30ABP3-11A	0150	3
R	1	BACB30LU4-11	0150	3
R	1A	BACB30ABP3-11A	0303	1
R		BOLT, (DELETED BY SB 2828).	5199	
R	1A	BACB30ABP3-11A	0150	1
R	1A	BACB30LU4-11	0150	1
	1B	BACB30ABP3-11A		1
	2	BACB30ABP3-14A		2
	3	BACB30ABP3-12A		3
R	3C	AN960PD10	5199	3
R	3C	AN960PD10	0150	3
R	3C	AN960PD416	0150	3
	4	AN960PD10		6
R	4A	AN960PD10	5199	1
R	4A	AN960PD10	0150	1
R	4A	AN960PD416	0150	1
R	4C	NAS679A3W	5199	3
R	4C	NAS679A3W	0150	3
R	4C	BACN10JC4	0150	3
	5	NAS679A3W		6
R	5A	NAS679A3W	5199	1
R	5A	NAS679A3W	0150	1
R	5A	BACN10JC4	0150	1
	6	50-11333-47		1
	6	50-11333-48		1
	7	NAS333CPA4		2
	8	NAS42DD4-14		2
	9	AN960PD10L		2
	10	NAS679A3W		2
	11	63-1053-3		1
	11	63-1053-4		1
	12	69-36465-5		1
	13	63-1051-1		1
	13	63-1051-2		1
	14	69-2390-2		1
	14	69-2390-1		1
	15	50-11333-109		1
	15	50-11333-110		1
	16	BACL10U4		2
		LATCH		
		ATTACHING PARTS		
		SCREW		8
		WASHER		8
		NUT		8
		-----*		
	17	NAS517-3-2		1
	18	NAS517-3-10		1
	20	NAS517-3-4		10
	21	NAS517-3-3		3
	22	NAS517-3-5		1
	23	AN960PD10		16
	24	NAS679A3W		16
	25	MS20426D6-16		1
	25A	AN960PD10		1
	26	63-8864-1		1
	27	63-8864-2		1
	28	50-11333-94		1
R	28A	69-61491-1	0150	1
R	28A	69-61491-2	0150	1
R	28B	69-61491-3	0150	1
R	28B	69-61491-4	0150	1
		ATTACHING PARTS		
		BOLT, (ADDED BY SB 2828).	0150	8
		COLLAR, (ADDED BY SB 2828).	0150	8
		-----*		
	29	69-9784-1		1
	29	69-9784-2		1
	30	69-9784-7		1
	31	69-9784-3		1
		HINGE ASSY, DOOR (LH ONLY).		
		HINGE ASSY, DOOR (RH ONLY).		
		PIN		
		HINGE HALF, DOOR UPPER (ALTERED FROM MS20001PX6-1200) (LH ONLY)		

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
20A	31	69-9784-4	. . .	HINGE HALF, DOOR UPPER (ALTERED FROM.						1
				MS20001PX6-1200) (RH ONLY)						
	32	69-9784-5	. . .	HINGE HALF, DOOR LOWER (ALTERED FROM.						1
				MS20001PX9-1150) (LH ONLY)						
	32	69-9784-6	. . .	HINGE HALF, DOOR LOWER (ALTERED FROM.						1
				MS20001PX9-1150) (RH ONLY)						
	33	BACS40A12-192	. . .	SHIM.						AR
	34	BACS40B14-184	. . .	SHIM.						AR
	35	BACS40C14-184	. . .	SHIM.						AR
	36	NAS1103-4	. . .	BOLT.						2
	37	AN960PD10L	. . .	WASHER.						2
	38	NAS679A3W	. . .	NUT						2
	39	63-1064-1	. . .	BUTTON, DOOR LATCH.						1
				ATTACHING PARTS						
		NAS679A3W	. . .	NUT						1
		AN960PD10	. . .	WASHER.						1

	40	69-36465-3	. . .	STIFFENER, (LH ONLY).						1
	40	69-36465-4	. . .	STIFFENER, (RH ONLY).						1
	41	50-11333-77	. . .	STRIP, RUB (USED ON 50-11333-75, -109 AND -115)						1
	41	50-11333-78	. . .	STRIP, RUB (USED ON 50-11333-76, -110 AND -116)						1
	42	50-11333-81	. . .	STRIP, RUB (USED ON 50-11333-75, -76, -109, -110, -115 AND -116)						1
R	43	50-11333-79	. . .	STRIP, RUB (USED ON 50-11333-75, -109 AND -115)						1
	43	50-11333-80	. . .	STRIP, RUB (USED ON 50-11333-76, -110 AND -116)						1
	44	50-11333-23	. . .	PANEL, DOOR (LH ONLY)					0150	1
	44	50-11333-24	. . .	PANEL, DOOR (RH ONLY)					0150	1
	45	50-11333-44	. . .	PLATE, DOOR STRIKER						1
	46	BACB30ABP3-13A	. . .	BOLT.						2
	47	BACB30ABP4-13	. . .	BOLT.						1
	48	BACB30ABP4-13A	. . .	BOLT.						1
	50	AN960PD10	. . .	WASHER.						2
	51	AN960PD416	. . .	WASHER.						2
	52	NAS679A3W	. . .	NUT						2
	53	NAS679A4W	. . .	NUT						2
	54	50-11333-64	. . .	PLATE, DOOR STRIKER						1
	55	50-11333-65	. . .	PLATE, DOOR STRIKER						1
	56	50-11333-71	. . .	SHIM, DOOR (ALTERED FROM BAC1524-125)						1
	57	50-11333-72	. . .	SHIM, DOOR (ALTERED FROM BAC1524-125)						1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

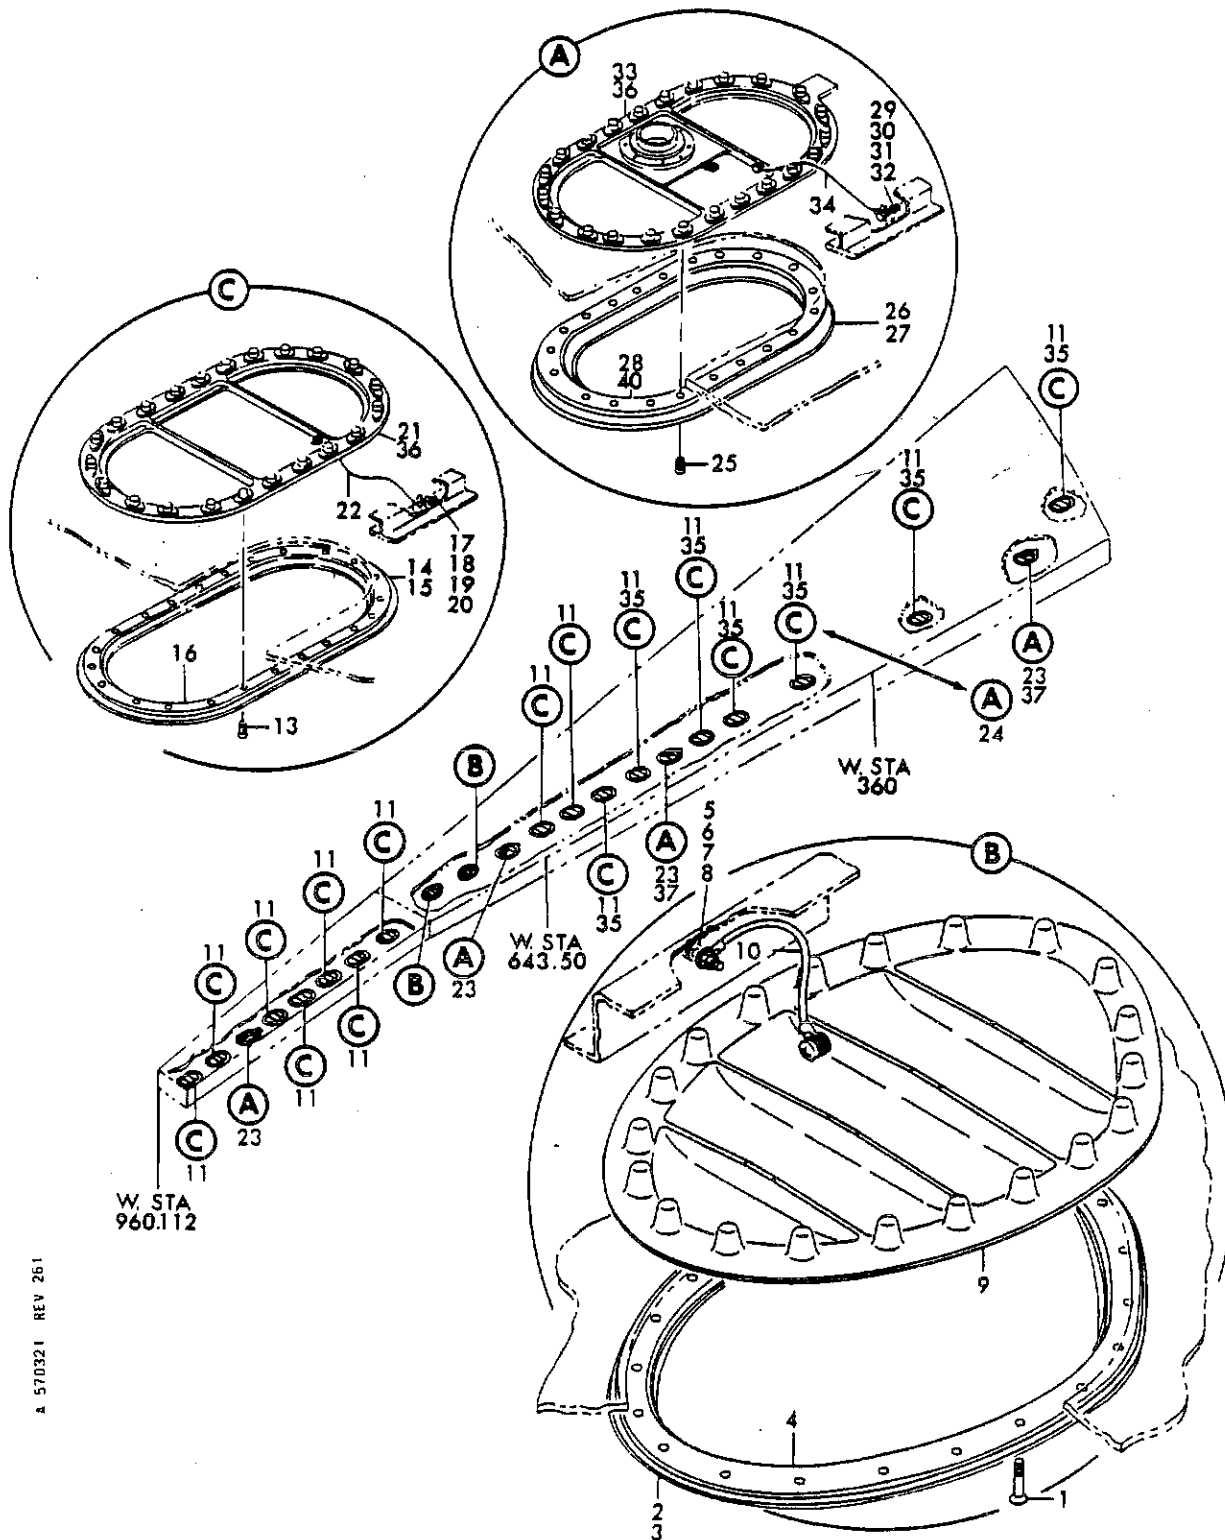


FIGURE 21. DOOR INSTL, WING LOWER SURFACE TANK ACCESS AND DRIPSTICK



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
21		DOOR INSTL, WING LOWER SURFACE TANK ACCESS AND DRIP . . STICK		
	69-2504-1	. DOOR INSTL, WING LOWER SURFACE TANK ACCESS (LH) (SEE 28-3, FIG. 6, ITEM 25)		RF
	69-2504-2	. DOOR INSTL, WING LOWER SURFACE TANK ACCESS (RH) (SEE 28-3, FIG. 6, ITEM 25)		RF
1	NAS517-4-11	. . SCREW		20
3	69-3193-19	. . RING, CLAMP (LH ONLY)		1
3	69-3193-20	. . RING, CLAMP (RH ONLY)		1
4	10-61421-1	. . GASKET, KNITTED (LH ONLY)		1
4	10-61421-5	. . GASKET, KNITTED (RH ONLY)		1
9	10-60031-51	. . DOOR ASSY, FUEL (LH ONLY)		1
9	10-60031-52	. . DOOR ASSY, FUEL (RH ONLY)		1
11	69-3002-3000	. DOOR INSTL, WING LOWER SURFACE TANK ACCESS (SEE 57-2, FIG. 13, ITEM 4 AND 28-3, FIG. 6, ITEM 28)		RF
R	12	. DOOR INSTL, WING LOWER SURFACE TANK ACCESS (SEE 28-3, FIG. 6, ITEM 27)	5199	RF
R	13	. . SCREW		23
	15	. . RING, CLAMP		1
	16	. . GASKET, KNITTED		1
R	21	. . DOOR ASSY, SEAL (OPTIONAL 65-87977-1) (DELETED BY SB 3473)		1
R	21	. . DOOR ASSY, SEAL (OPTIONAL TO BAC SPEC NO. 10-60031-53) (DELETED BY SB 3473)		1
R	23	. DOOR INSTL, WING LOWER SURFACE DRIP STICK (LH) (SEE . 57-2, FIG. 13, ITEM 3 AND 28-3, FIG. 6, ITEM 26)		RF
R	23	. DOOR INSTL, WING LOWER SURFACE DRIP STICK (RH) (SEE . 57-2, FIG. 13, ITEM 3 AND 28-3, FIG. 6, ITEM 26)		RF
R	24	. DOOR INSTL, WING LOWER SURFACE DRIP STICK (LH) (SEE . 28-3, FIG. 6, ITEM 27)	0150	RF
R	24	. DOOR INSTL, WING LOWER SURFACE DRIP STICK (RH) (SEE . 28-3, FIG. 6, ITEM 27)	0150	RF
R	25	. . SCREW		23
	27	. . RING, CLAMP		1
	28	. . GASKET, KNITTED		1
R	33	. . DOOR ASSY, (LH ONLY) (DELETED BY SB 3473)		1
R	33	. . DOOR ASSY, (RH ONLY) (DELETED BY SB 3473)		1
R	35	. ACCESS DOOR INSTL, IMPACT RESISTANT (KIT) (ADDED . . . BY SB 3473)		1
R	36	. . DOOR ASSY, ACCESS		1
R	37	. DOOR ASSY, IMPACT RESISTANT DRIPSTICK (ADDED BY . . . SB 3473)		1
R	40	. FILLER (ADDED BY SB 3473)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE


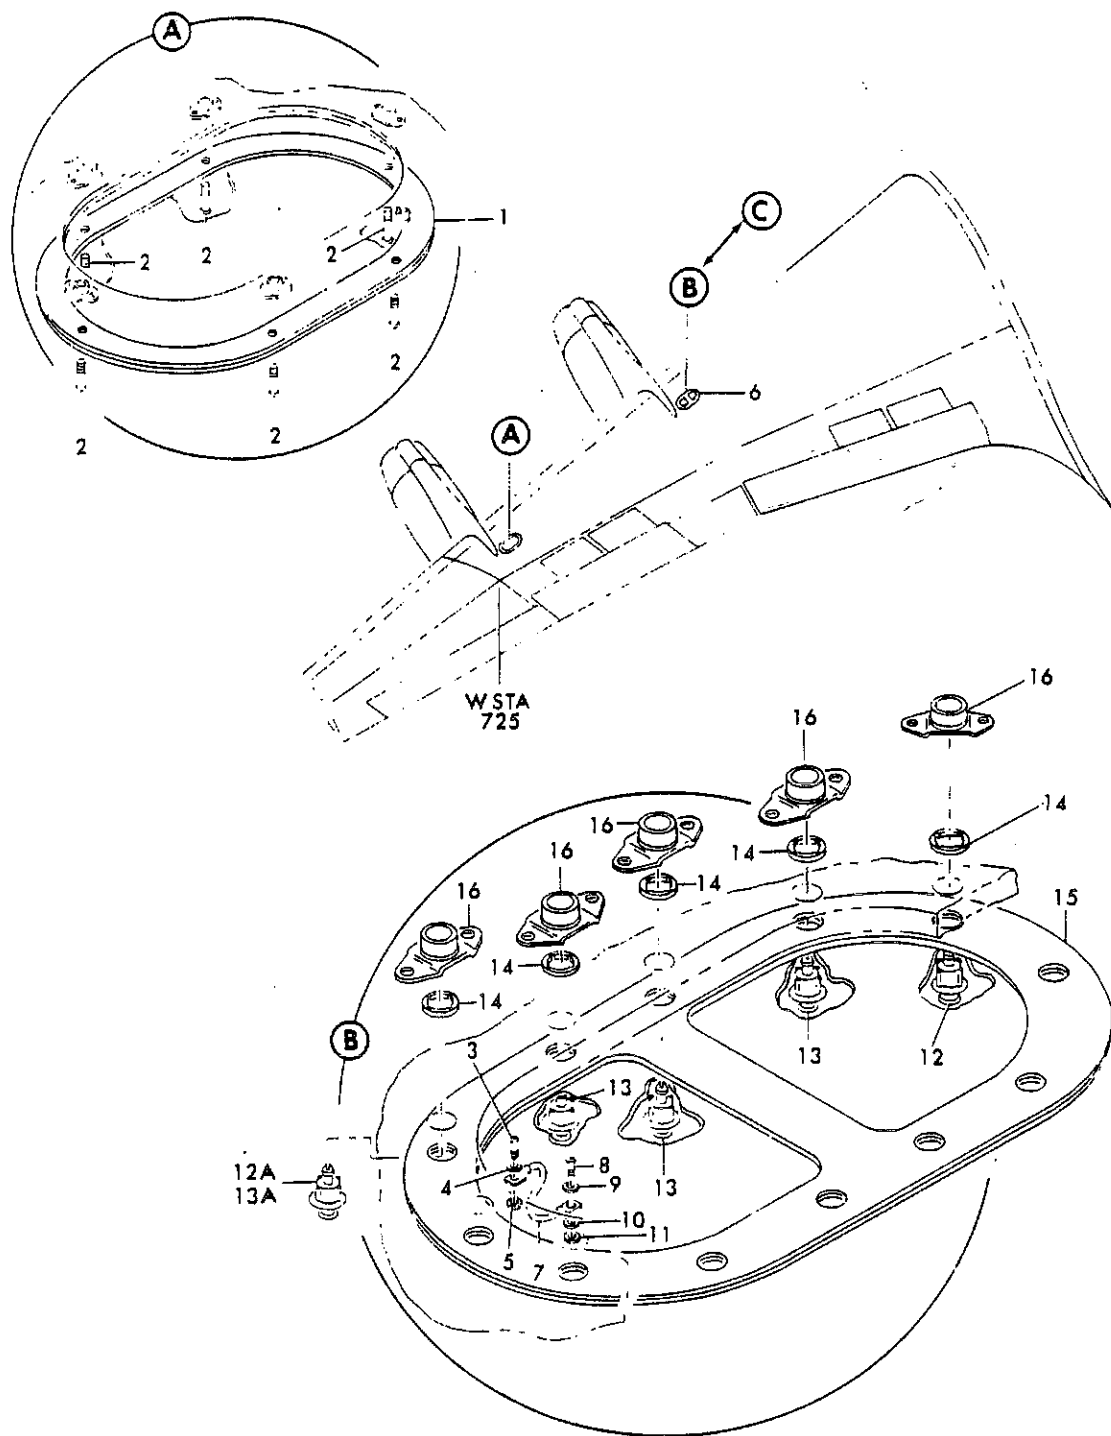


FIGURE 22. DOOR INSTL, FRONT SPAR STATION 683.5 TO 666.1 INBOARD WING LOWER PANEL AND WING LOWER SURFACE DRY BAY (SHEET 1)

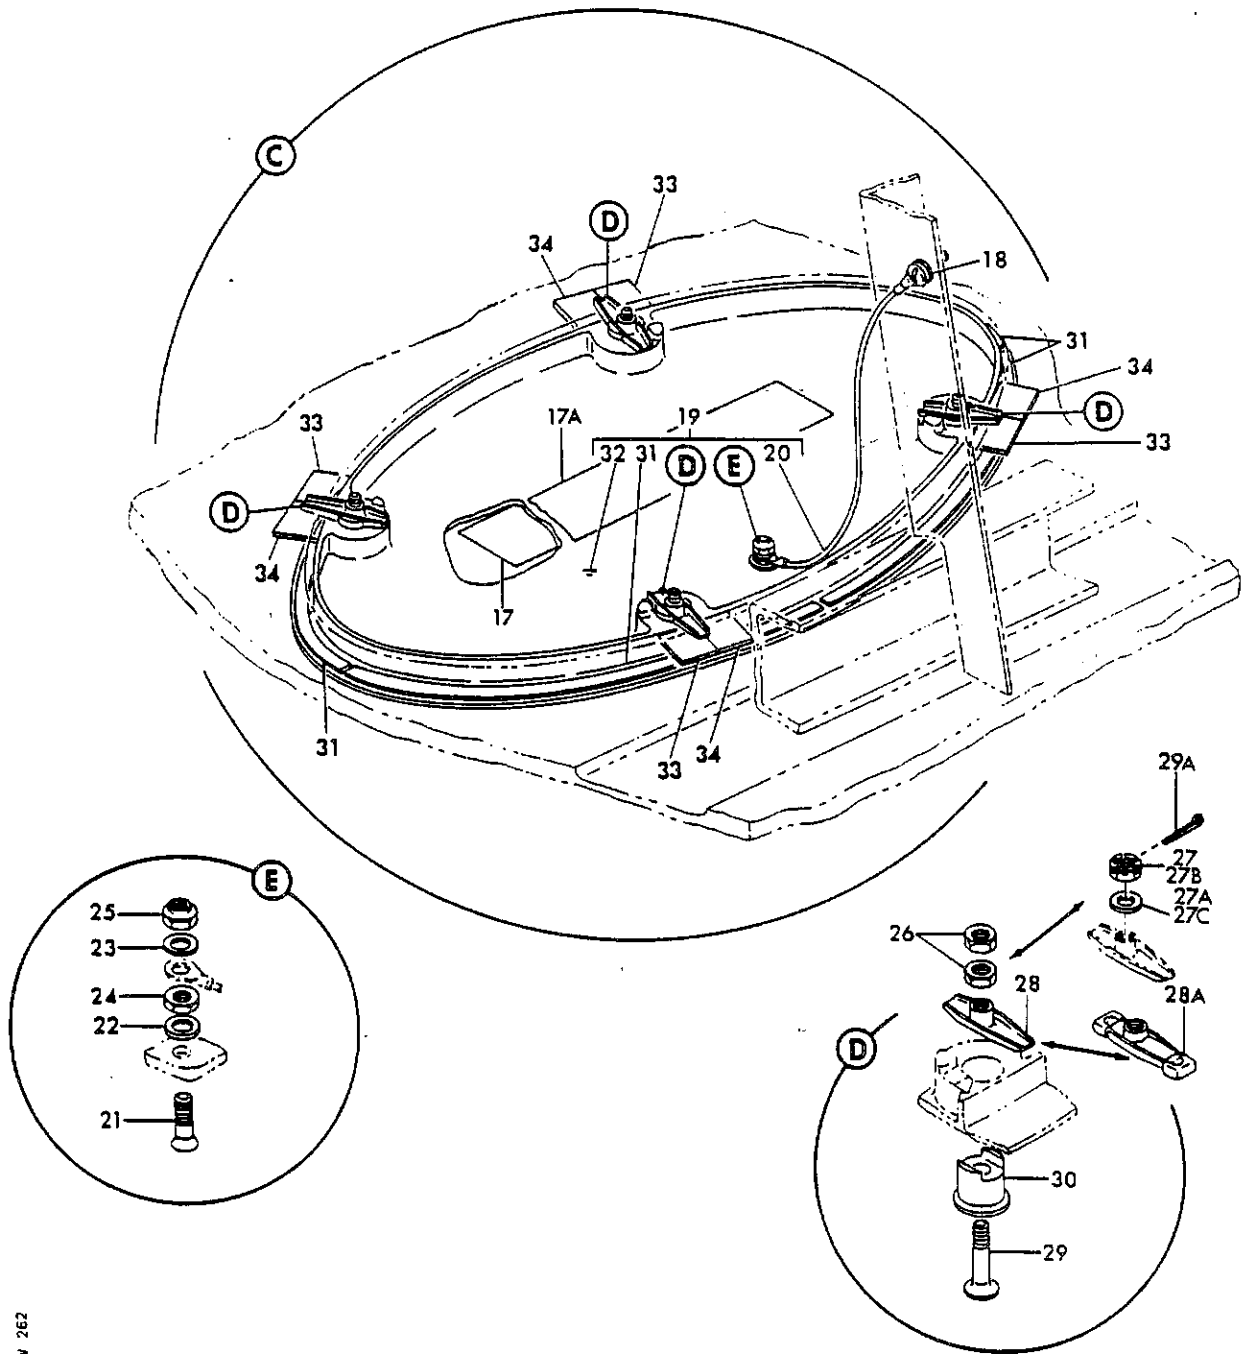

DOOR INSTL, FRONT SPAR STATION 683.5 TO 666.1
FIGURE 22. INBOARD WING LOWER PANEL AND WING LOWER SURFACE DRY BAY (SHEET 2)

5703022 SHT 2 REV 262

NOV 21/91

57-03-22

DETAILED PARTS LIST
57-03-22
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
22		DOOR INSTL, FRONT SPAR STATION 683.5 TO 666.1 INBOARD . WING LOWER PANEL AND WING LOWER SURFACE DRY BAY		
	90-10018-1	. DOOR INSTL, FRONT SPAR STATION 683.5 TO 666.1 INBOARD WING LOWER PANEL DRY BAY (LH) (SEE 28-3, FIG. 6, ITEM 23)		RF
	90-10018-2	. DOOR INSTL, FRONT SPAR STATION 683.5 TO 666.1 INBOARD WING LOWER PANEL DRY BAY (RH) (SEE 28-3, FIG. 6, ITEM 23)		RF
1	90-10018-3	. . WELD ASSY		1
2	NAS517-3-8	. . ATTACHING PARTS . . SCREW		6
	65-56931-1	. DOOR INSTL, WING LOWER SURFACE DRY BAY (DELETED BY SB 2735) (SEE 28-3, FIG. 6, ITEM 22)	0103	RF
	65-56931-7	. DOOR INSTL, WING LOWER SURFACE DRY BAY (DELETED BY SB 2735) (SEE 28-3, FIG. 6, ITEM 22)	0450	RF
	65-56931-11	. DOOR INSTL, WING LOWER SURFACE DRY BAY (ADDED BY SB . 2735) (SEE 28-3, FIG. 6, ITEM 22)	0150	RF
	65-56931-13	. DOOR INSTL, WING LOWER SURFACE DRY BAY (SEE 28-3, . . FIG. 6, ITEM 22)	5199	RF
17	BAC27CWG6	. . DECAL, DOOR IS PROPERLY SECURED WHEN SCREWS ARE . . TIGHTENED (DELETED BY SB 2735)	0103	1
17A	BAC27CWG6	. . DECAL, DOOR IS PROPERLY SECURED WHEN SCREWS ARE . . TIGHTENED (ADDED BY SB 2735)	0150	1
18	NAS603-10	. . SCREW		1
19	65-56931-2	. . DOOR ASSY, (DELETED BY SB 2735)	0103	1
19	65-56931-8	. . DOOR ASSY, (DELETED BY SB 2735)	0450	1
19	65-56931-10	. . DOOR ASSY, (ADDED BY SB 2735)	0150	1
19	65-56931-14	. . DOOR ASSY	5199	1
20	MS25083-28B16	. . JUMPER ASSY ATTACHING PARTS		1
21	NAS514P1032-10	. . SCREW		1
22	NAS1197-10L	. . WASHER.		1
23	AN960D10L	. . WASHER.		1
24	MS20341-10A	. . NUT		1
25	NAS679A3W	. . NUT		1
				
26	AN316-4R	. . NUT, (ADDED BY SB 2735)	0150	8
27	BACN10JD104AU	. . NUT	5199	4
27A	AN960PD416	. . WASHER.	5199	4
28	69-20783-1	. . NUT, LATCH (DELETED BY SB 2735)	0150	4
28A	69-58155-1	. . NUT ASSY, LATCH	5199	4
28A	69-58155-1	. . NUT ASSY, LATCH (ADDED BY SB 2735)	0150	4
29	NAS514P428-18	. . SCREW, (DELETED BY SB 2735)	0150	4
29	NAS514P428-22	. . SCREW, (ADDED BY SB 2735)	0150	4
29	69812622-1	. . SCREW	5199	4
30	69-20782-4	. . INDICATOR, ROTARY LATCH		4
31	69-43648-1	. . RING.		4
32	65-56930-1	. . DOOR, (DELETED BY SB 2735).	0150	1
32	65-56930-3	. . DOOR, (ADDED BY SB 2735).	0150	1
32	65-56930-3	. . DOOR. (OPTIONAL 65-56930-7)	5199	1
32	65-56930-7	. . DOOR. (OPTIONAL TO 65-56930-3)	5199	1
	65-56931-501	. . STRIP ASSY, (DELETED BY SB 2735).	0150	4
33	65-56931-502	. . STRIP	0103	1
34	65-56931-503	. . STRIP	0103	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

BOEING
Intercontinental
707
PARTS CATALOG

SECTION 04
LEADING EDGE

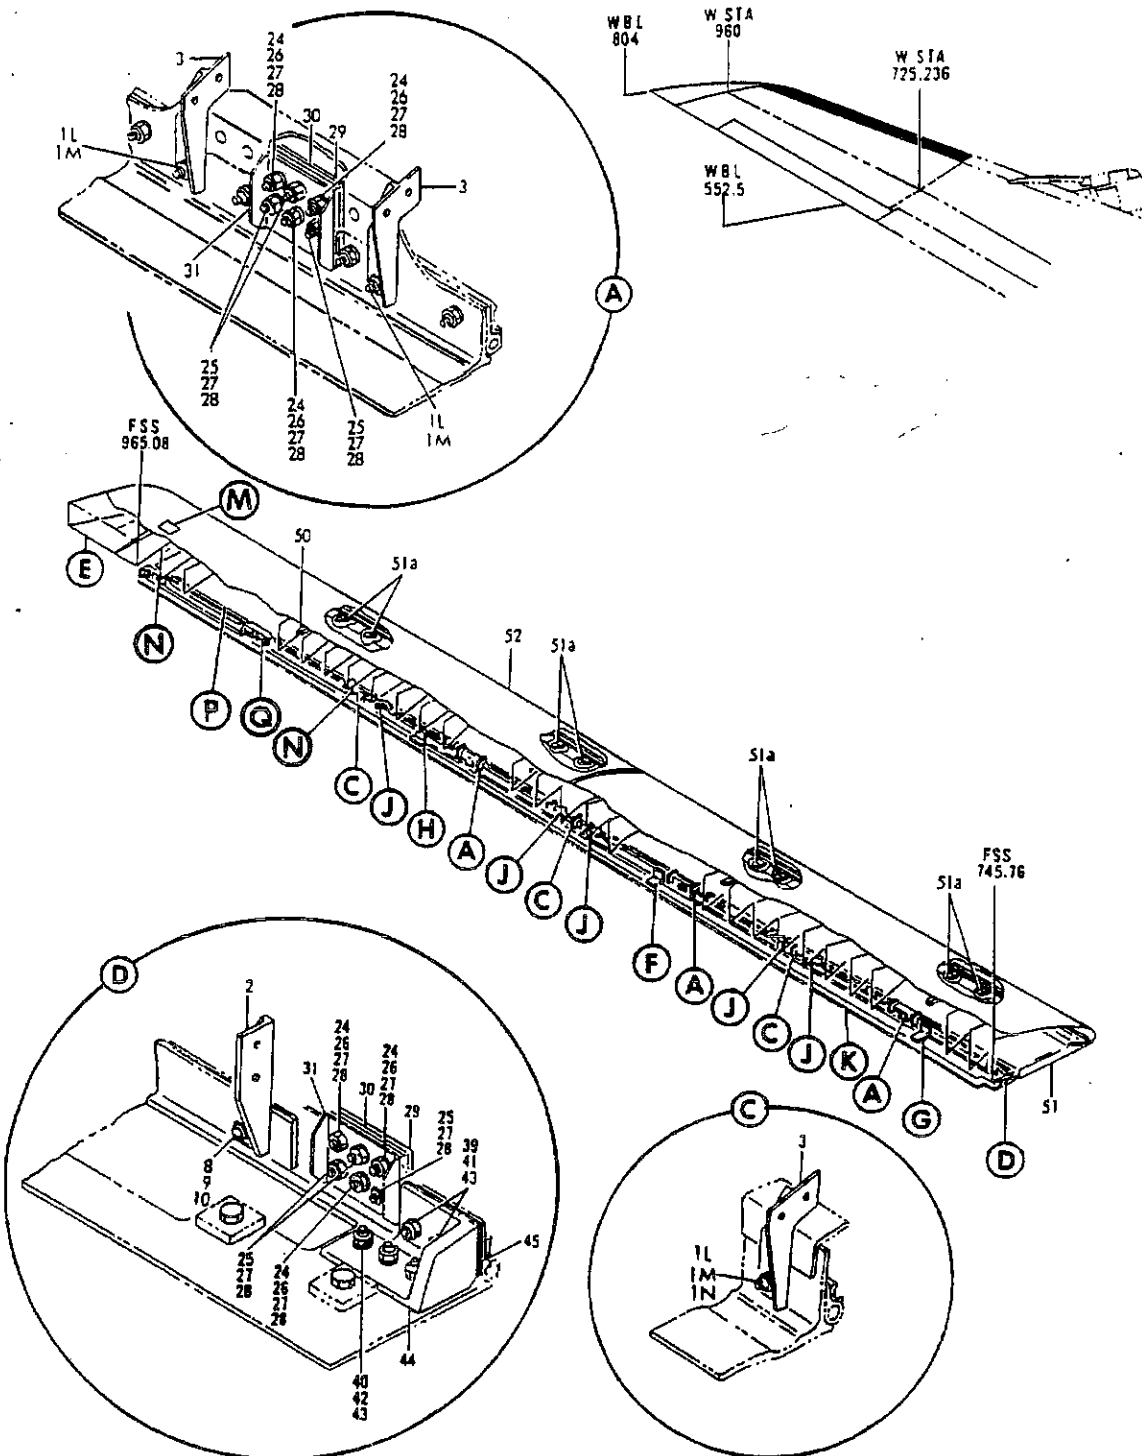


FIGURE 3. LEADING EDGE INSTL, SECTION 15 OUTBOARD WING (SHEET 1)

A 5704003 SHY 1 REV 265

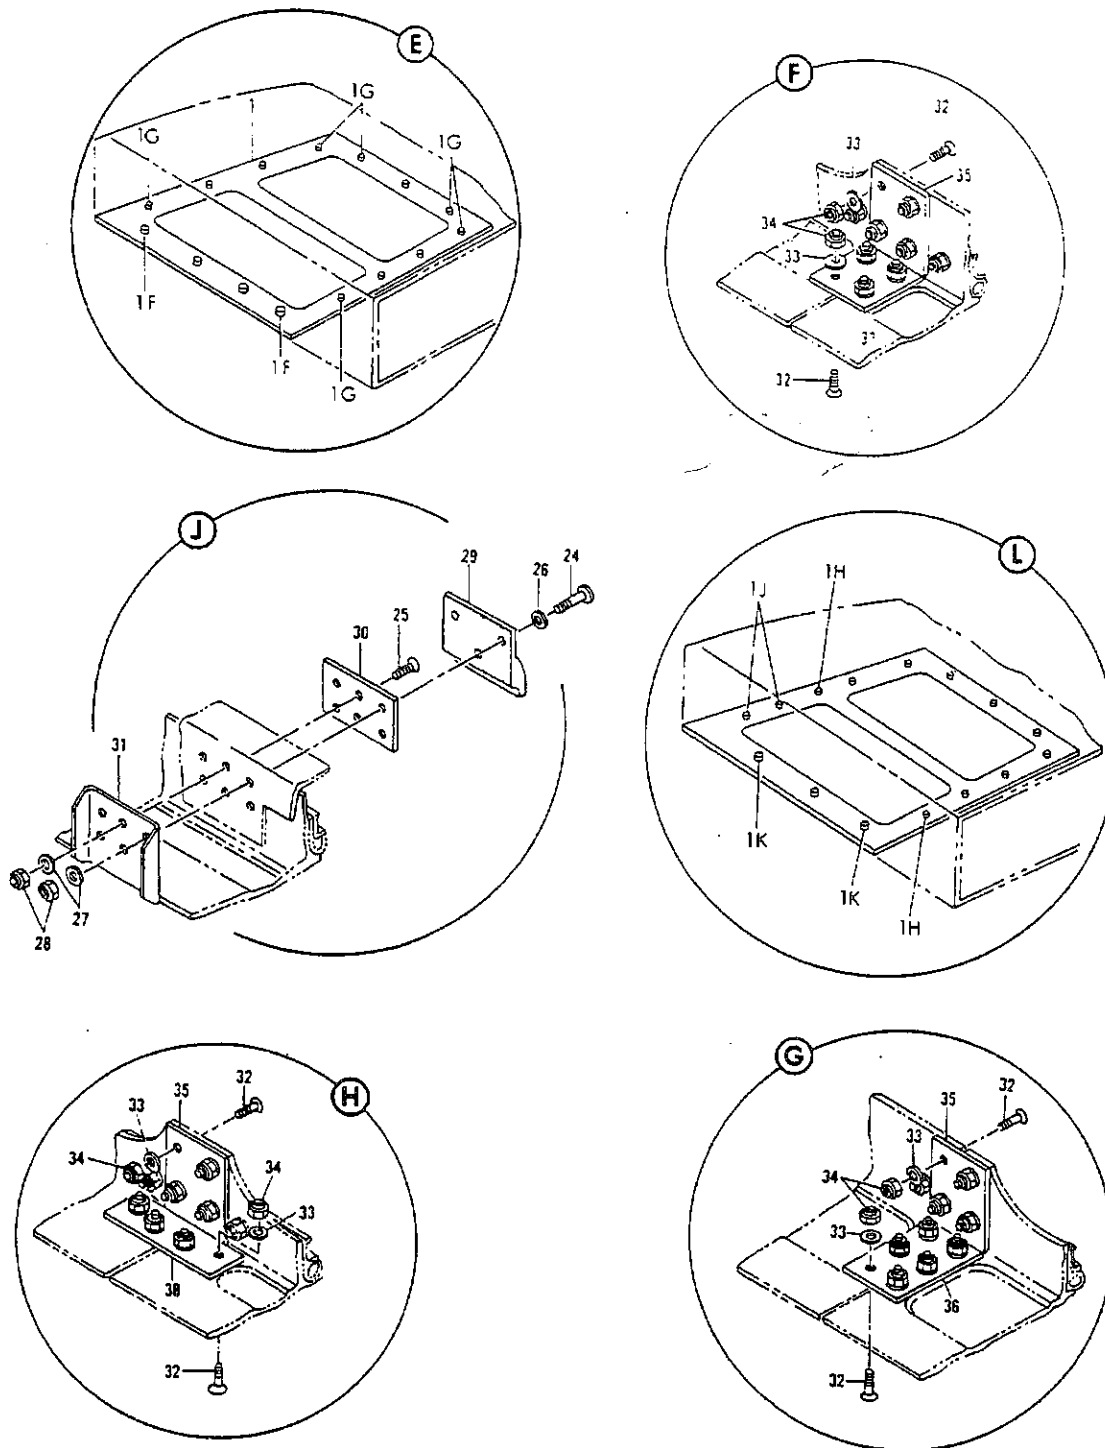


FIGURE 3. LEADING EDGE INSTL, SECTION 15 OUTBOARD WING (SHEET 2)

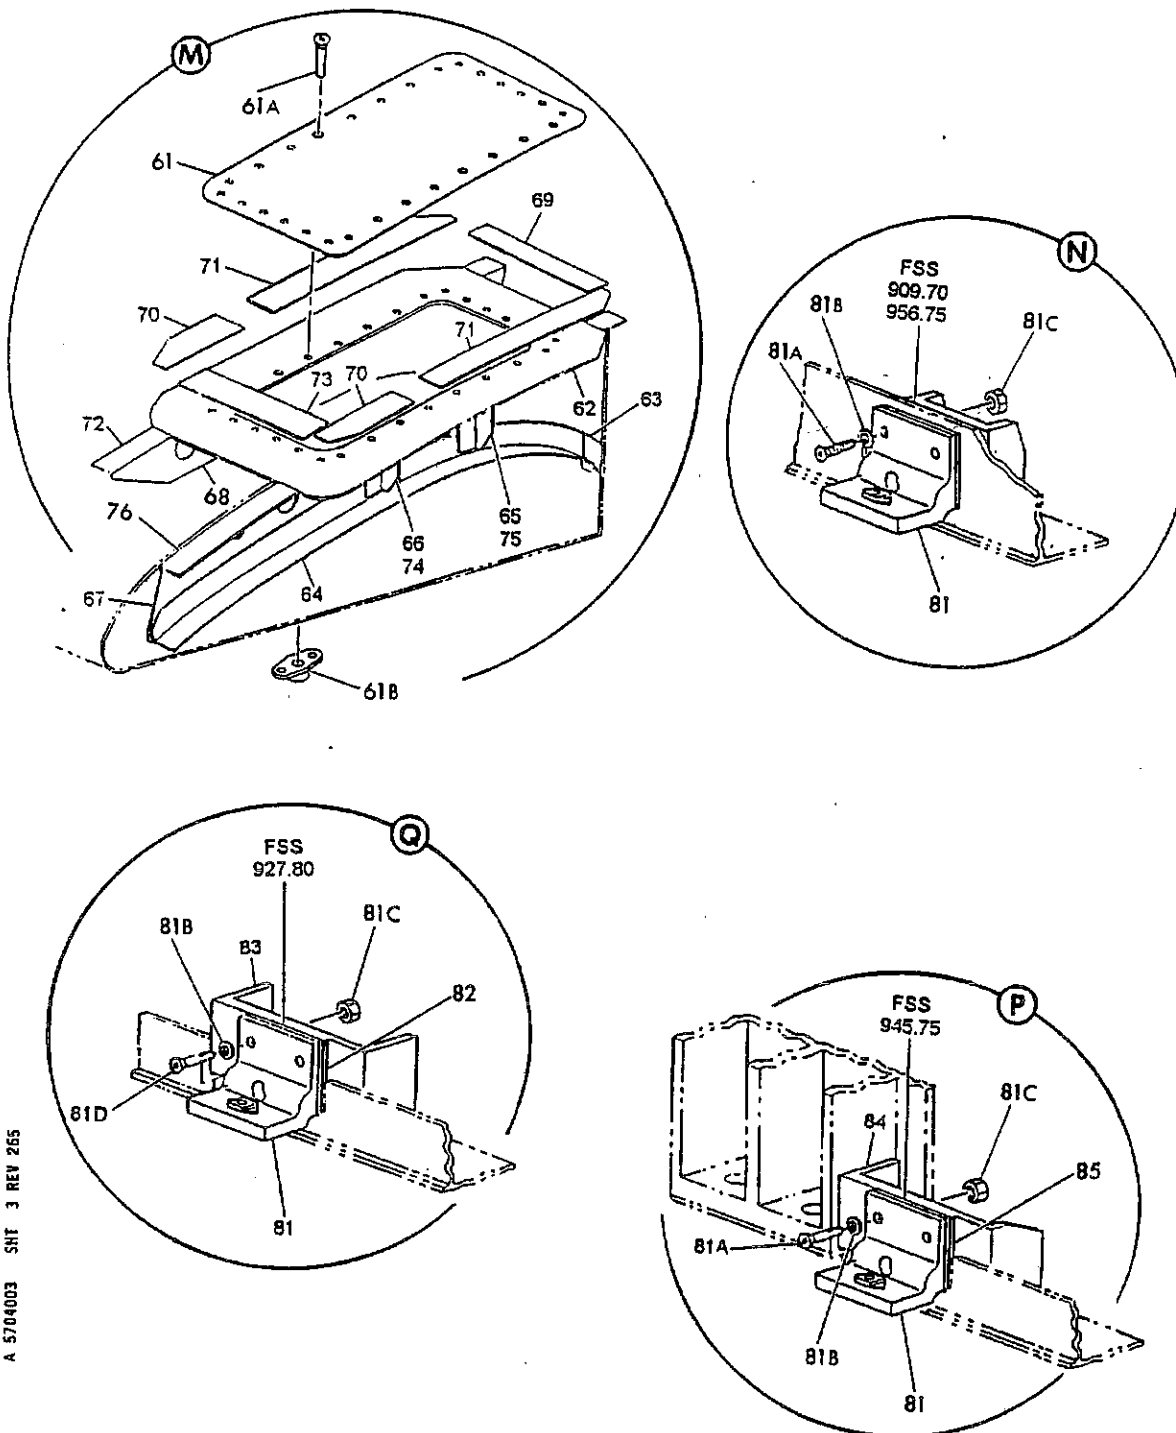


FIGURE 3. LEADING EDGE INSTL, SECTION 15 OUTBOARD WING (SHEET 3)

A 5704003 SHT 3 REV 265

BOEING *707*
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R	3	65-18460-1	LEADING EDGE INSTL, SECTION 15 OUTBOARD WING (LH) (SEE 57-2, FIG. 8, ITEM 2)	0150 RF
R		65-18460-1	LEADING EDGE INSTL, SECTION 15 OUTBOARD WING (VARIABLE DWG:65-18460-5001) (LH) (SEE 57-2, FIG. 8, ITEM 2)	5199 RF
R		65-18460-2	LEADING EDGE INSTL, SECTION 15 OUTBOARD WING (RH) (SEE 57-2, FIG. 8, ITEM 2)	0150 RF
R		65-18460-2	LEADING EDGE INSTL, SECTION 15 OUTBOARD WING (VARIABLE DWG:65-18460-5002) (RH) (SEE 57-2, FIG. 8, ITEM 2)	5199 RF
R		65-18486-1	. DOOR INSTL, OUTBOARD WING LEADING EDGE (LH ONLY).	1
R		65-18486-2	. DOOR INSTL, OUTBOARD WING LEADING EDGE (RH ONLY).	1
R		BACR15CE5D	. ATTACHING PARTS	
		. RIVET		19

	1	65-18486-3	. . DOOR, OUTBOARD WING LEADING EDGE (LH ONLY).	1
	1	65-18486-4	. . DOOR, OUTBOARD WING LEADING EDGE (RH ONLY).	1
		. ATTACHING PARTS		
	1F	NAS334CPA7	. . BOLT.	4
	1G	NAS333CPA4	. . BOLT.	11

		65-18464-1	. PANEL INSTL, OUTBOARD WING (LH ONLY).	1
		65-18464-2	. PANEL INSTL, OUTBOARD WING (RH ONLY).	1
	1L	NAS623-3-6W	. . SCREW	11
	1M	AN960PD10	. . WASHER.	11
	1N	NAS679A3W	. . NUT	11
	2	69-15835-2	. . ANGLE, OUTBOARD WING LEADING EDGE SLAT HANGER (LH ONLY)	0103 1
	2	69-15835-1	. . ANGLE, OUTBOARD WING LEADING EDGE SLAT HANGER (RH ONLY)	1
	2	69-15835-8	. . ANGLE, HANGER (LH ONLY)	0499 1
		. ATTACHING PARTS		
	2A	MS20470D6	. . RIVET	3
		(OPTIONAL TO NAS623-3-6W (USED WITH AN960PD10 AND NAS679A3W))		
	2B	NAS623-3-6W	. . SCREW, (USED WITH AN960PD10 AND NAS679A3W).	3
		(OPTIONAL MS20470D6)		
	2C	AN960PD10	. . WASHER.	3
	2D	NAS679A3W	. . NUT	3

	3	69-15836-3	. . ANGLE, OUTBOARD WING LEADING EDGE SLAT SUPPORT (LH ONLY)	11
	3	69-15836-4	. . ANGLE, OUTBOARD WING LEADING EDGE SLAT SUPPORT (RH ONLY)	11
		. ATTACHING PARTS		
		. RIVET		11
	3A	MS20470D6	. . RIVET.	11
		(OPTIONAL TO NAS623-3-6W (USED WITH AN960PD10 AND NAS679A3W))		
	3B	NAS623-3-6W	. . SCREW, (USED WITH AN960PD10 AND NAS679A3W).	11
		(OPTIONAL MS20470D6)		
	3C	AN960PD10	. . WASHER.	11
	3D	NAS679A3W	. . NUT	11
		MS20470D5	. . RIVET	16

	7	NAS623-3-4W	. . SCREW	74
	8	NAS623-3-5W	. . SCREW	4
	9	AN960PD10	. . WASHER.	78
	10	NAS679A3W	. . NUT	78
	11	69-15831-1	. . ANGLE, OUTBOARD WING LEADING EDGE SLAT ATTACH (LH ONLY)	1
	11	69-15831-2	. . ANGLE, OUTBOARD WING LEADING EDGE SLAT ATTACH (RH ONLY)	1
	12	69-15833-1	. . ANGLE, OUTBOARD WING LEADING EDGE SLAT BRACE (LH ONLY)	1
	12	69-15833-2	. . ANGLE, OUTBOARD WING LEADING EDGE SLAT BRACE (RH ONLY)	1
	13	69-15827-1	. . RETAINER, LEADING EDGE SLAT SEAL (DELETED BY SB 2651)	0103 1
R	13	69-15827-29	. . RETAINER, LEADING EDGE SLAT SEAL.	0450 1
	13	69-15827-29	. . RETAINER, LEADING EDGE SLAT SEAL (ADDED BY SB 2651)	0103 1
R	13	69-15827-55	. . RETAINER, LEADING EDGE SLAT SEAL.	5199 1
	14	69-15827-1651	. . RETAINER, LEADING EDGE SLAT SEAL (DELETED BY SB 2651) (LH ONLY)	0103 1
R	14	69-15827-41	. . RETAINER, LEADING EDGE SLAT SEAL (LH ONLY).	0450 1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3 14	69-15827-41	.. RETAINER, LEADING EDGE SLAT SEAL (ADDED BY SB 2651) (LH ONLY)	0103	1
R 14	69-15827-69	.. RETAINER, LEADING EDGE SLAT SEAL (LH ONLY)	5199	1
14	69-15827-1652	.. RETAINER, LEADING EDGE SLAT SEAL (DELETED BY SB . . 2651) (RH ONLY)	0103	1
R 14	69-15827-42	.. RETAINER, LEADING EDGE SLAT SEAL (RH ONLY)	0450	1
14	69-15827-42	.. RETAINER, LEADING EDGE SLAT SEAL (ADDED BY SB 2651) (RH ONLY)	0103	1
R 14	69-15827-70	.. RETAINER, LEADING EDGE SLAT SEAL (RH ONLY)	5199	1
15	69-15827-3	.. RETAINER, LEADING EDGE SLAT SEAL (DELETED BY SB . . 2651)	0103	4
R 15	69-15827-30	.. RETAINER, LEADING EDGE SLAT SEAL	0450	4
15	69-15827-30	.. RETAINER, LEADING EDGE SLAT SEAL (ADDED BY SB 2651)	0103	4
R 15	69-15827-57	.. RETAINER, LEADING EDGE SLAT SEAL	5199	4
16	69-15827-5	.. RETAINER, SLAT SEAL (DELETED BY SB 2651) (LH ONLY)	0103	3
R 16	69-15827-31	.. RETAINER, LEADING EDGE SLAT SEAL (LH ONLY)	0450	3
16	69-15827-31	.. RETAINER, SLAT SEAL (ADDED BY SB 2651) (LH ONLY) . .	0103	3
R 16	69-15827-59	.. RETAINER, LEADING EDGE SLAT SEAL (LH ONLY)	5199	3
16	69-15827-6	.. RETAINER, SLAT SEAL (DELETED BY SB 2651) (RH ONLY)	0103	3
R 16	69-15827-32	.. RETAINER, LEADING EDGE SLAT SEAL (RH ONLY)	0450	3
16	69-15827-32	.. RETAINER, SLAT SEAL (ADDED BY SB 2651) (RH ONLY) . .	0103	3
R 16	69-15827-60	.. RETAINER, LEADING EDGE SLAT SEAL (RH ONLY)	5199	3
17	69-15827-7	.. RETAINER, SLAT SEAL (DELETED BY SB 2651) (LH ONLY)	0103	1
R 17	69-15827-33	.. RETAINER, LEADING EDGE SLAT SEAL (LH ONLY)	0450	1
17	69-15827-33	.. RETAINER, SLAT SEAL (ADDED BY SB 2651) (LH ONLY) . .	0103	1
R 17	69-15827-61	.. RETAINER, LEADING EDGE SLAT SEAL (LH ONLY)	5199	1
17	69-15827-8	.. RETAINER, SLAT SEAL (DELETED BY SB 2651) (RH ONLY)	0103	1
R 17	69-15827-34	.. RETAINER, LEADING EDGE SLAT SEAL (RH ONLY)	0450	1
17	69-15827-34	.. RETAINER, SLAT SEAL (ADDED BY SB 2651) (RH ONLY) . .	0103	1
R 17	69-15827-62	.. RETAINER, LEADING EDGE SLAT SEAL (RH ONLY)	5199	1
18	69-15827-9	.. RETAINER, SLAT SEAL (DELETED BY SB 2651) (LH ONLY)	0103	1
R 18	69-15827-35	.. RETAINER, LEADING EDGE SLAT SEAL (LH ONLY)	0450	1
18	69-15827-35	.. RETAINER, SLAT SEAL (ADDED BY SB 2651) (LH ONLY) . .	0103	1
R 18	69-15827-63	.. RETAINER, LEADING EDGE SLAT SEAL (LH ONLY)	5199	1
18	69-15827-10	.. RETAINER, SLAT SEAL (DELETED BY SB 2651) (RH ONLY)	0103	1
R 18	69-15827-36	.. RETAINER, LEADING EDGE SLAT SEAL (RH ONLY)	0450	1
18	69-15827-36	.. RETAINER, SLAT SEAL (ADDED BY SB 2651) (RH ONLY) . .	0103	1
R 18	69-15827-64	.. RETAINER, LEADING EDGE SLAT SEAL (RH ONLY)	5199	1
19	69-15827-11	.. RETAINER, SLAT SEAL (DELETED BY SB 2651) (LH ONLY)	0103	1
R 19	69-15827-37	.. RETAINER, LEADING EDGE SLAT SEAL (LH ONLY)	0450	1
19	69-15827-37	.. RETAINER, SLAT SEAL (ADDED BY SB 2651) (LH ONLY) . .	0103	1
R 19	69-15827-65	.. RETAINER, LEADING EDGE SLAT SEAL (LH ONLY)	5199	1
19	69-15827-12	.. RETAINER, SLAT SEAL (DELETED BY SB 2651) (RH ONLY)	0103	1
R 19	69-15827-38	.. RETAINER, LEADING EDGE SLAT SEAL (RH ONLY)	0450	1
19	69-15827-38	.. RETAINER, SLAT SEAL (ADDED BY SB 2651) (RH ONLY) . .	0103	1
R 19	69-15827-66	.. RETAINER, LEADING EDGE SLAT SEAL (RH ONLY)	5199	1
20	69-15827-13	.. RETAINER, SLAT SEAL (DELETED BY SB 2651) (LH ONLY)	0103	2
R 20	69-15827-39	.. RETAINER, LEADING EDGE SLAT SEAL (LH ONLY)	0450	2
20	69-15827-39	.. RETAINER, SLAT SEAL (ADDED BY SB 2651) (LH ONLY) . .	0103	2
R 20	69-15827-67	.. RETAINER, LEADING EDGE SLAT SEAL (LH ONLY)	5199	1
20	69-15827-14	.. RETAINER, SLAT SEAL (DELETED BY SB 2651) (RH ONLY)	0103	2
R 20	69-15827-40	.. RETAINER, LEADING EDGE SLAT SEAL (RH ONLY)	0450	2
20	69-15827-40	.. RETAINER, SLAT SEAL (ADDED BY SB 2651) (RH ONLY) . .	0103	2
R 20	69-15827-68	.. RETAINER, LEADING EDGE SLAT SEAL (RH ONLY)	5199	1
21	69-15827-17	.. RETAINER, SLAT SEAL (DELETED BY SB 2651) (LH ONLY)	0103	1
R 21	69-15827-43	.. RETAINER, LEADING EDGE SLAT SEAL (LH ONLY)	0450	1
21	69-15827-43	.. RETAINER, SLAT SEAL (ADDED BY SB 2651) (LH ONLY) . .	0103	1
R 21	69-15827-71	.. RETAINER, LEADING EDGE SLAT SEAL (LH ONLY)	5199	1
21	69-15827-18	.. RETAINER, SLAT SEAL (DELETED BY SB 2651) (RH ONLY)	0103	1
R 21	69-15827-44	.. RETAINER, LEADING EDGE SLAT SEAL (RH ONLY)	0450	1
21	69-15827-44	.. RETAINER, SLAT SEAL (ADDED BY SB 2651) (RH ONLY) . .	0103	1
R 21	69-15827-72	.. RETAINER, LEADING EDGE SLAT SEAL (RH ONLY)	5199	1
22	69-15827-19	.. RETAINER, SLAT SEAL (DELETED BY SB 2651)	0103	1
R 22	69-15827-53	.. RETAINER, LEADING EDGE SLAT SEAL	0450	1
22	69-15827-53	.. RETAINER, SLAT SEAL (ADDED BY SB 2651)	0103	1
R 22	69-15827-73	.. RETAINER, LEADING EDGE SLAT SEAL	5199	1
23	69-15826-1	.. SEAL, SLAT (EXTRUSION NO. BAC1530-10 X 53.8 IN. LG)	0450	4
R 23	69-15826-1	.. SEAL, SLAT (EXTRUSION NO. BAC1530-10 X 53.8 IN. LG) (DELETED BY SB 2651)	0103	4
R 23	69-15826-5	.. SEAL, SLAT (EXTRUSION NO. BAC1530-76 X 53.8 IN. LG)	5199	4
23	69-15826-5	.. SEAL, SLAT (EXTRUSION NO. BAC1530-76 X 53.8 IN. LG) (ADDED BY SB 2651)	0103	4
24	BACB3ONE3-7	.. BOLT		36
25	NAS517-3-5	.. SCREW	0103	36

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3 25	BACB30FB3-5	. . BOLT.	0450	36
26	AN960-416L	. . WASHER.		36
27	AN960PD10	. . WASHER.		AR
28	NAS679A3W	. . NUT		AR
29	66-12678-1	. . STRIKER, SLAT (DELETED BY SB 2651).	0103	12
29	66-12678-12	. . STRIKER.	0499	12
29	66-12678-12	. . STRIKER, (ADDED BY SB 2651)	0103	12
30	66-12678-2	. . PLATE, SLAT STRIKER (DELETED BY SB 2651).	0103	12
30	66-12678-14	. . PLATE, SLAT STRIKER	0499	12
30	66-12678-14	. . PLATE, SLAT STRIKER (ADDED BY SB 2651).	0103	12
31	66-13286-1	. . CHANNEL, OUTBOARD WING LEADING EDGE SLAT.		12
32	NAS517-3-4	. . SCREW		26
33	AN960PD10	. . WASHER.		26
34	NAS679A3W	. . NUT		26
35	65-18464-3	. . PLATE, OUTBOARD WING PANEL JOINT.		3
36	65-18464-4	. . PLATE, OUTBOARD WING PANEL JOINT.		1
37	65-18464-5	. . PLATE, OUTBOARD WING PANEL JOINT.		1
38	65-18464-6	. . PLATE, OUTBOARD WING PANEL JOINT.		1
39	NAS623-3-7W	. . SCREW		2
40	NAS517-3-4	. . SCREW		3
41	AN960PD10	. . WASHER.		2
42	AN960-10L	. . WASHER.		3
43	NAS679A3W	. . NUT		5
44	65-18748-3	. . FITTING, LEADING EDGE PRODUCTION BREAK LOWER SKIN SPLICE (LH ONLY) (OPTIONAL 65-18748-9)	0150	1
44	65-18748-9	. . FITTING, PRODUCTION BREAK LOWER SKIN SPLICE (LH ONLY) (OPTIONAL TO 65-18748-3)	0150	1
44	65-18748-4	. . FITTING, LEADING EDGE PRODUCTION BREAK LOWER SKIN SPLICE (RH ONLY) (OPTIONAL 65-18748-10)	0150	1
44	65-18748-10	. . FITTING, PRODUCTION BREAK LOWER SKIN SPLICE (RH ONLY) (OPTIONAL TO 65-18748-4)	0150	1
44	65-18748-9	. . FITTING, PRODUCTION BREAK LOWER SKIN SPLICE (LH ONLY)	5199	1
44	65-18748-10	. . FITTING, PRODUCTION BREAK LOWER SKIN SPLICE (RH ONLY)	5199	1
45	BACS40B21-36	. . SHIM.		1
46	65-18482-11	. . PANEL, OUTBOARD WING LEADING EDGE SEAL SUPPORT (LH ONLY)	0499	1
46	65-18482-11	. . PANEL, SUPPORT (ADDED BY SB 2651) (LH ONLY)	0103	1
46	65-18482-1651	. . PANEL, (DELETED BY SB 2651) (LH ONLY)	0103	1
46	65-18482-12	. . PANEL, OUTBOARD WING LEADING EDGE SEAL SUPPORT (RH ONLY)	0499	1
46	65-18482-12	. . PANEL, SUPPORT (ADDED BY SB 2651) (RH ONLY)	0103	1
46	65-18482-1652	. . PANEL, (DELETED BY SB 2651) (RH ONLY)	0103	1
47	65-18482-13	. . PANEL, OUTBOARD WING LEADING EDGE SEAL SUPPORT (LH ONLY)	0499	1
47	65-18482-13	. . PANEL, SUPPORT (ADDED BY SB 2651) (LH ONLY)	0103	1
47	65-18482-3	. . PANEL, (DELETED BY SB 2651) (LH ONLY)	0103	1
47	65-18482-14	. . PANEL, OUTBOARD WING LEADING EDGE SEAL SUPPORT (RH ONLY)	0499	1
47	65-18482-14	. . PANEL, SUPPORT (ADDED BY SB 2651) (RH ONLY)	0103	1
47	65-18482-4	. . PANEL, (DELETED BY SB 2651) (RH ONLY)	0103	1
48	65-18482-15	. . PANEL, OUTBOARD WING LEADING EDGE SEAL SUPPORT (LH ONLY)	0499	1
48	65-18482-15	. . PANEL, SUPPORT (ADDED BY SB 2651) (LH ONLY)	0103	1
48	65-18482-5	. . PANEL, (DELETED BY SB 2651) (LH ONLY)	0103	1
48	65-18482-16	. . PANEL, OUTBOARD WING LEADING EDGE SEAL SUPPORT (RH ONLY)	0499	1
48	65-18482-16	. . PANEL, SUPPORT (ADDED BY SB 2651) (RH ONLY)	0103	1
48	65-18482-6	. . PANEL, (DELETED BY SB 2651) (RH ONLY)	0103	1
49	65-18482-17	. . PANEL, OUTBOARD WING LEADING EDGE SEAL SUPPORT (LH ONLY)	0499	1
49	65-18482-17	. . PANEL, SUPPORT (ADDED BY SB 2651)	0103	1
49	65-18482-7	. . PANEL, (DELETED BY SB 2651) (LH ONLY)	0103	1
49	65-18482-18	. . PANEL, OUTBOARD WING LEADING EDGE SEAL SUPPORT (RH ONLY)	0499	1
49	65-18482-18	. . PANEL, SUPPORT (ADDED BY SB 2651) (RH ONLY)	0103	1
49	65-18482-8	. . PANEL, (DELETED BY SB 2651) (RH ONLY)	0103	1
51	65-18421-1	. . SLAT INSTL, (REWORKED BY SB 2651) (LH ONLY) (SEE 27-14, FIG. 1 AND 2)	0103	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/00

57-04-3

DETAILED PARTS LIST
57-04-3
PAGE 5



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3 51	65-18421-2	. SLAT INSTL, (REWORKED BY SB 2651) (RH ONLY) (SEE . . . 27-14, FIG. 1 AND 2)	0103	1
51	65-18421-29	. SLAT INSTL, (LH ONLY) (SEE 27-14, FIG. 2)	0450	1
51	65-18421-29	. SLAT INSTL, (VARIABLE DWG; 65-18421-5005) (LH ONLY) . . . (SEE 27-14, FIG. 2)	5199	1
51	65-18421-30	. SLAT INSTL, (RH ONLY) (SEE 27-14, FIG. 2)	0450	1
51	65-18421-30	. SLAT INSTL, (VARIABLE DWG; 65-18421-5006) (RH ONLY) . . . (SEE 27-14, FIG. 2)	5199	1
51A	69-23859-1	. BLOCK, SECTION 15 OUTBOARD WING LEADING EDGE UP-STEP (LH ONLY)		8
51A	69-23859-1650	. BLOCK, SECTION 15 OUTBOARD WING LEADING EDGE UP-STEP (RH ONLY)		8
52	65-18460-33	. LEADING EDGE ASSY, SECTION 15 OUTBOARD WING FRONT . . SPAR STATION 745.772 TO WING STATION 960.112 (LH ONLY) (SEE FIG. 5)		1
52	65-18460-34	. LEADING EDGE ASSY, SECTION 15 OUTBOARD WING FRONT . . SPAR STATION 745.772 TO WING STATION 960.112 (RH ONLY) (SEE FIG. 5)		1
R		361-57-20-74367-001	0150	RF
R		361-57-20-74367-002	0150	RF
R		361-57-20-74367-201	0150	2
R	61A	NAS1993-3	0150	56
R	61B	MS21075L3	0150	56
R	62	361-57-20-74367-203	0150	2
R	63	361-57-20-74367-227	0150	1
R	63	361-57-20-74367-228	0150	1
R	64	361-57-20-74367-225	0150	1
R	64	361-57-20-74367-226	0150	1
R	65	361-57-20-74367-219	0150	1
R	65	361-57-20-74367-220	0150	1
R	66	361-57-20-74367-217	0150	1
R	66	361-57-20-74367-218	0150	1
R	67	361-57-20-74367-207	0150	1
R	67	361-57-20-74367-208	0150	1
R	68	361-57-20-74367-205	0150	1
R	68	361-57-20-74367-206	0150	1
R	69	361-57-20-74367-211	0150	2
R	70	361-57-20-74367-209	0150	4
R	71	361-57-20-74367-215	0150	4
R	72	361-57-20-74367-229	0150	2
R	73	361-57-20-74367-213	0150	2
R	74	361-57-20-74367-221	0150	2
R	75	361-57-20-74367-223	0150	2
R	76	361-57-20-74367-231	0150	2
R		361-57-20-74370-101	0150	RF
R		361-57-20-74370-102	0150	RF
R	81	391-89-40-71636-101	0150	8
R	81A	NAS623-3-8	0150	18
R	81B	AN960PD10	0150	24
R	81C	NAS679A3W	0150	24
R	81D	NAS623-3-9	0150	6
R	82	NAS1581A3R-6	0150	3
R	83	361-57-20-74370-203	0150	1
R	83	361-57-20-74370-204	0150	1
R	84	361-57-20-74370-201	0150	1
R		361-57-20-74370-202	0150	1
R	85	NAS1581A3R-5	0150	6

MISSING ITEM NUMBERS ARE NOT APPLICABLE

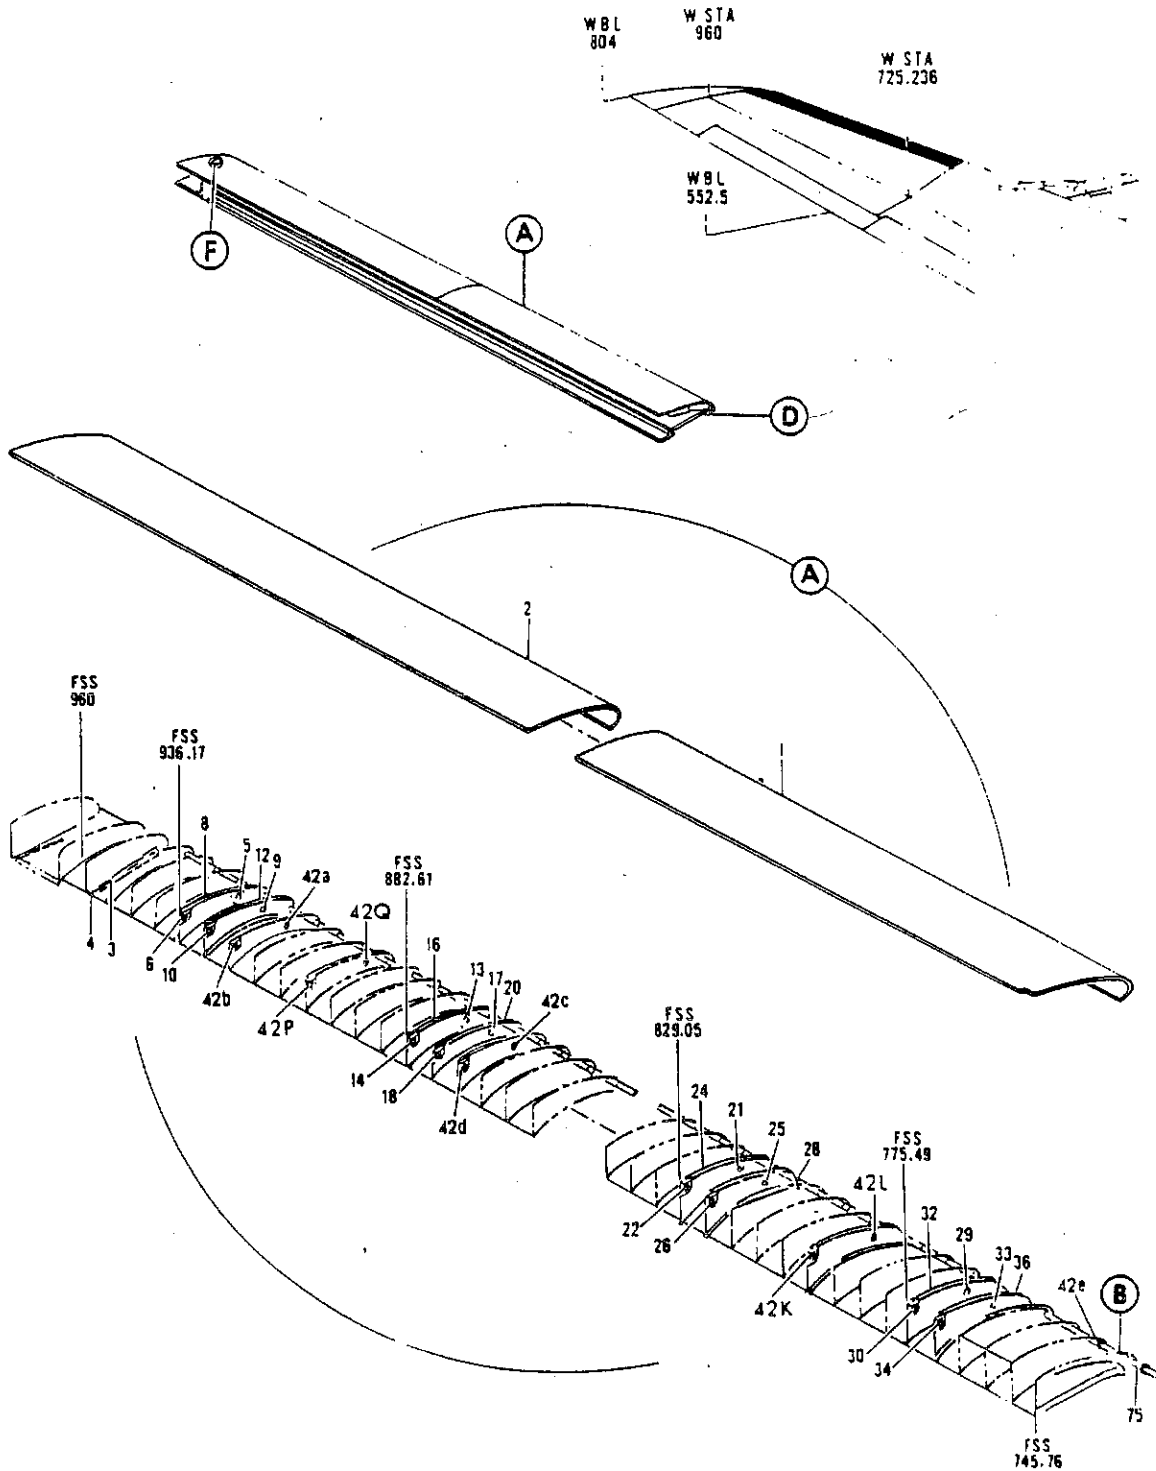


FIGURE 5. LEADING EDGE ASSY, SECTION 15 OUTBOARD WING FRONT SPAR STATION 745.772 TO WING STATION 960.112 (SHEET 1)

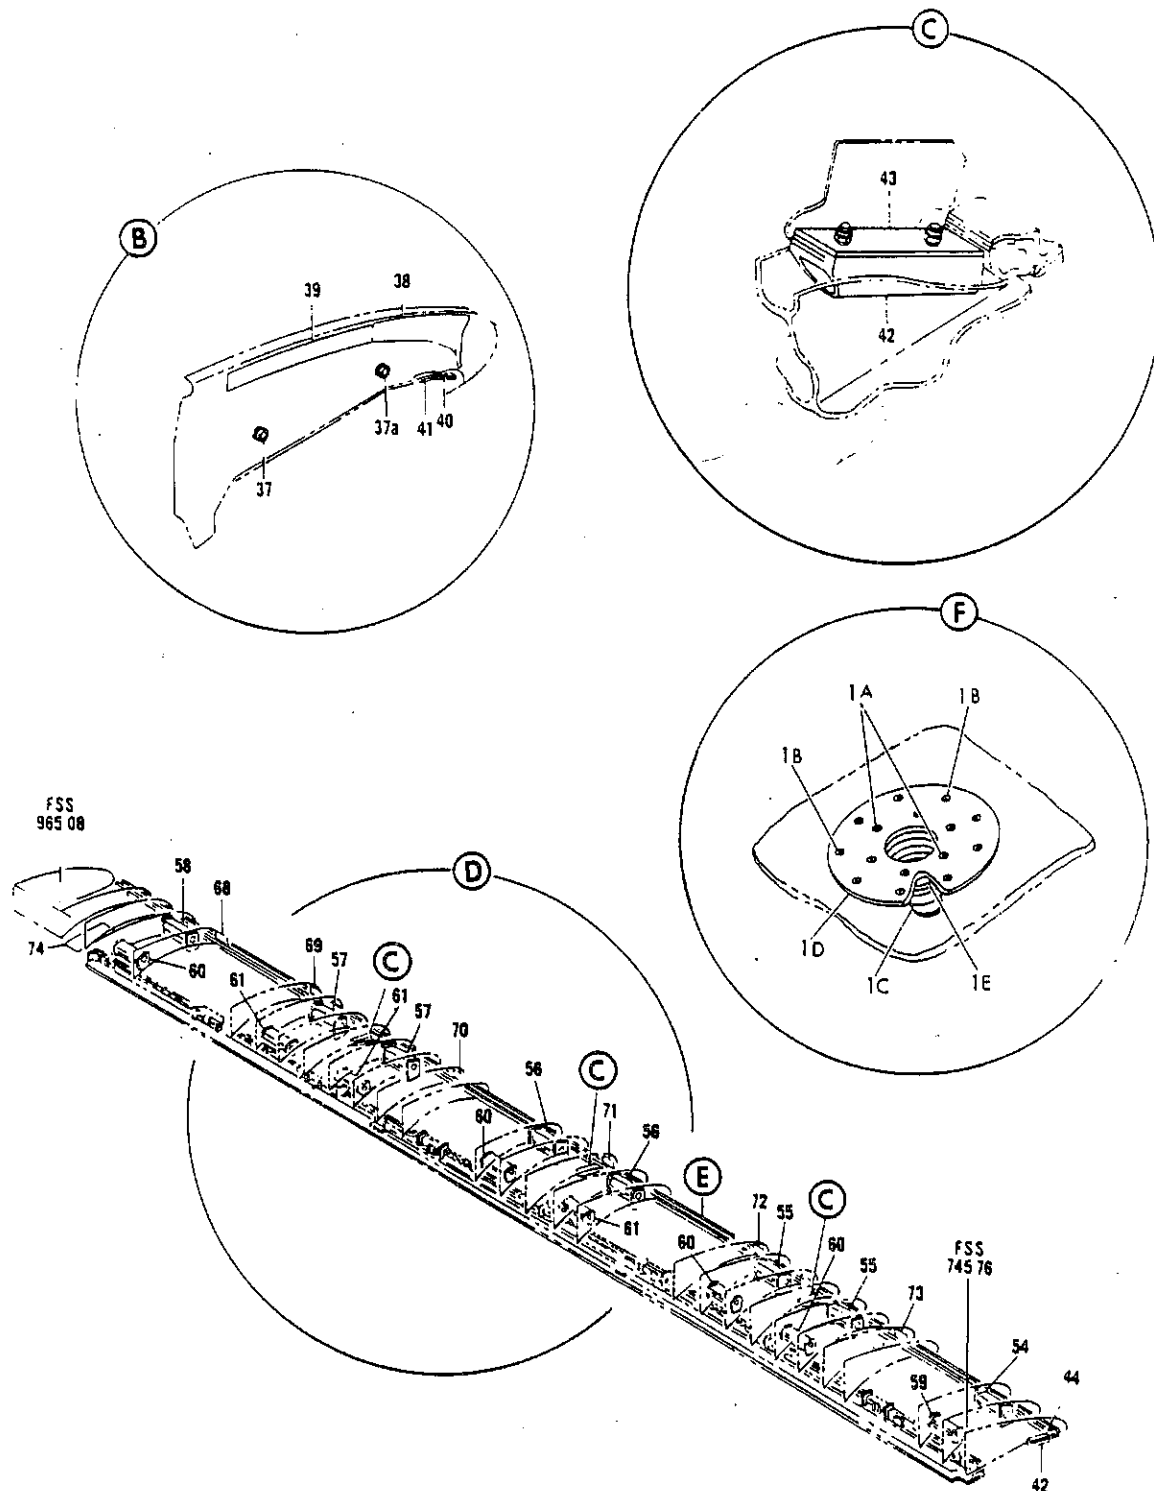


FIGURE 5. LEADING EDGE ASSY, SECTION 15 OUTBOARD WING FRONT SPAR STA 745.772 TO WING STA 960.112 (SHEET 2)

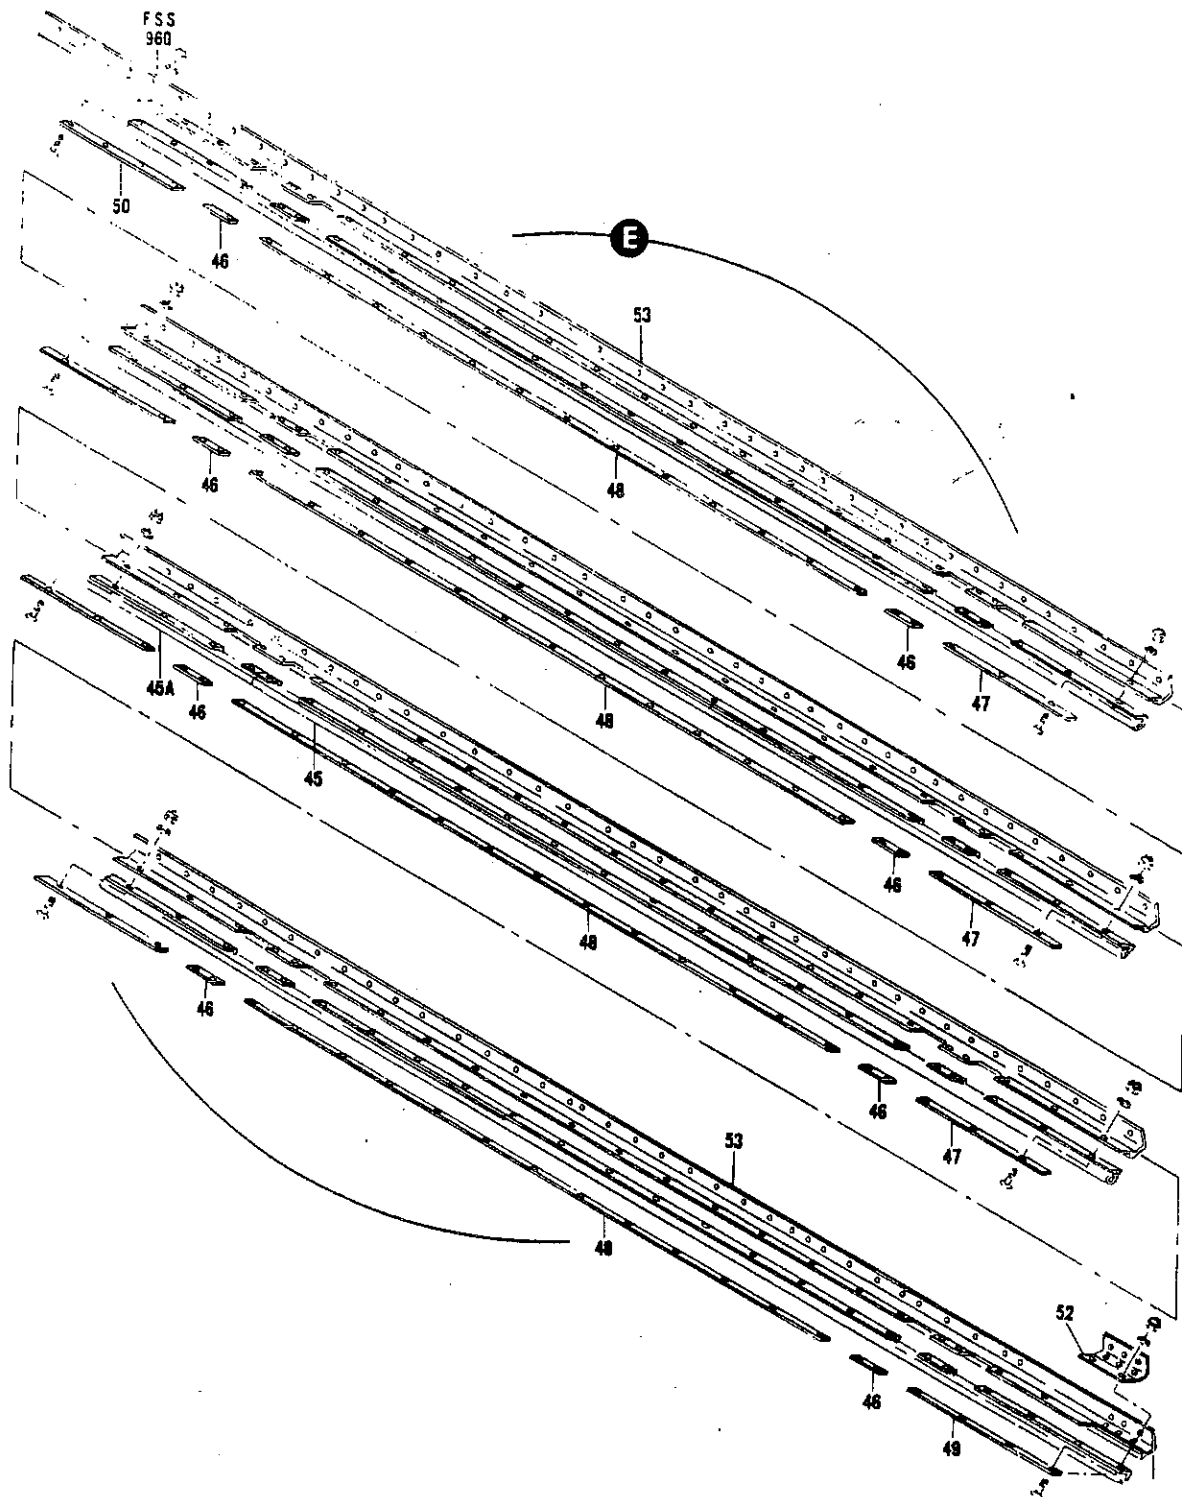


FIGURE 5. LEADING EDGE ASSY, SECTION 15 OUTBOARD WING FRONT
SPAR STATION 745.772 TO WING STATION 960.112 (SHEET 3)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5	65-18460-33		LEADING EDGE ASSY, SECTION 15 OUTBOARD WING FRONT SPAR STATION 745.772 TO WING STATION 960.112 (LH) (SEE FIG. 3, ITEM 52)		RF
	65-18460-34		LEADING EDGE ASSY, SECTION 15 OUTBOARD WING FRONT SPAR STATION 745.772 TO WING STATION 960.112 (RH) (SEE FIG. 3, ITEM 52)		RF
1	65-18467-1		. SKIN, SECTION 15 OUTBOARD WING FRONT SPAR STATION 745 TO 853 LEADING EDGE (LH ONLY)		1
1	65-18467-2		. SKIN, SECTION 15 OUTBOARD WING FRONT SPAR STATION 745 TO 853 LEADING EDGE (RH ONLY)		1
2	65-18467-3		. SKIN, SECTION 15 OUTBOARD WING FRONT SPAR STATION 853 TO WING STATION 960 LEADING EDGE (LH ONLY)		1
2	65-18467-4		. SKIN, SECTION 15 OUTBOARD WING FRONT SPAR STATION 853 TO WING STATION 960 LEADING EDGE (RH ONLY)		1
	65-18171-1		. RIB INSTL, FRONT SPAR STATION 960 WING LEADING EDGE (LH ONLY)		1
	65-18171-2		. RIB INSTL, FRONT SPAR STATION 960 WING LEADING EDGE (RH ONLY)		1
3	65-18171-7		. . RETAINER, FRONT SPAR STATION 960 WING LEADING EDGE RIB SEAL		1
4	65-18171-8		. . SEAL, FRONT SPAR STATION 960 WING LEADING EDGE RIB SLAT (EXTRUSION NO. BAC1530-10 X 17.3 IN. LG) ATTACHING PARTS		1
	MS20470D4		. . RIVET		11
	65-18175-1		. RIB INSTL, FRONT SPAR STATION 936.17 WING LEADING EDGE (LH ONLY)		1
	65-18175-2		. RIB INSTL, FRONT SPAR STATION 936.17 WING LEADING EDGE (RH ONLY)		1
5	NAS1368N12B		. . GROMMET		1
6	NAS1368N8B		. . GROMMET		1
8	65-18175-3		. . WEB, FRONT SPAR STATION 936.17 WING LEADING EDGE (LH ONLY)		1
8	65-18175-4		. . WEB, FRONT SPAR STATION 936.17 WING LEADING EDGE (RH ONLY)		1
	65-18168-1		. RIB INSTL, FRONT SPAR STATION 930.26 WING LEADING EDGE (LH ONLY)		1
	65-18168-2		. RIB INSTL, FRONT SPAR STATION 930.26 WING LEADING EDGE (RH ONLY)		1
9	NAS1368N12B		. . GROMMET		1
10	NAS1368N8B		. . GROMMET		1
12	65-18168-3		. . WEB, FRONT SPAR STATION 930.26 WING LEADING EDGE (LH ONLY)		1
12	65-18168-4		. . WEB, FRONT SPAR STATION 930.26 WING LEADING EDGE (RH ONLY)		1
	65-18174-1		. RIB INSTL, FRONT SPAR STATION 882.61 WING LEADING EDGE (LH ONLY)		1
	65-18174-2		. RIB INSTL, FRONT SPAR STATION 882.61 WING LEADING EDGE (RH ONLY)		1
13	NAS1368N12B		. . GROMMET		1
14	NAS1368N8B		. . GROMMET		1
16	65-18174-3		. . WEB, FRONT SPAR STATION 882.61 WING LEADING EDGE (LH ONLY)		1
16	65-18174-4		. . WEB, FRONT SPAR STATION 882.61 WING LEADING EDGE (RH ONLY)		1
	65-18162-1		. RIB INSTL, FRONT SPAR STATION 876.70 WING LEADING EDGE (LH ONLY)		1
	65-18162-2		. RIB INSTL, FRONT SPAR STATION 876.70 WING LEADING EDGE (RH ONLY)		1
17	NAS1368N12B		. . GROMMET		1
18	NAS1368N8B		. . GROMMET		1
20	65-18162-3		. . WEB, FRONT SPAR STATION 876.70 WING LEADING EDGE (LH ONLY)		1
20	65-18162-4		. . WEB, FRONT SPAR STATION 876.70 WING LEADING EDGE (RH ONLY)		1
	65-18173-1		. RIB INSTL, FRONT SPAR STATION 829.05 WING LEADING EDGE (LH ONLY)		1
	65-18173-2		. RIB INSTL, FRONT SPAR STATION 829.05 WING LEADING EDGE (RH ONLY)		1
21	NAS1368N12A		. . GROMMET		1
22	NAS1368N8B		. . GROMMET		1
24	65-18173-3		. . WEB, FRONT SPAR STATION 829.05 WING LEADING EDGE (LH ONLY)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5 24	65-18173-4	. . WEB, FRONT SPAR STATION 829.05 WING LEADING EDGE. RIB (RH ONLY)		1
	65-18156-1	. RIB INSTL, FRONT SPAR STATION 823.14 WING LEADING EDGE (LH ONLY)		1
	65-18156-2	. RIB INSTL, FRONT SPAR STATION 823.14 WING LEADING EDGE (RH ONLY)		1
25	NAS1368N12A	. . GROMMET		1
26	NAS1368N8B	. . GROMMET		1
28	65-18156-3	. . WEB, FRONT SPAR STATION 823.14 WING LEADING EDGE. RIB (LH ONLY)		1
28	65-18156-4	. . WEB, FRONT SPAR STATION 823.14 WING LEADING EDGE. RIB (RH ONLY)		1
	65-18172-1	. RIB INSTL, FRONT SPAR STATION 775.49 WING LEADING EDGE (LH ONLY)		1
	65-18172-2	. RIB INSTL, FRONT SPAR STATION 775.49 WING LEADING EDGE (RH ONLY)		1
29	NAS1368N12A	. . GROMMET		1
30	NAS1368N8B	. . GROMMET		1
32	65-18172-3	. . WEB, FRONT SPAR STATION 775.49 WING LEADING EDGE. RIB (LH ONLY)		1
32	65-18172-4	. . WEB, FRONT SPAR STATION 775.49 WING LEADING EDGE. RIB (RH ONLY)		1
	65-18150-1	. RIB INSTL, FRONT SPAR STATION 769.58 WING LEADING EDGE (LH ONLY)		1
	65-18150-2	. RIB INSTL, FRONT SPAR STATION 769.58 WING LEADING EDGE (RH ONLY)		1
33	NAS1368N12A	. . GROMMET		1
34	NAS1368N8B	. . GROMMET		1
36	65-18150-3	. . WEB, FRONT SPAR STATION 769.58 WING LEADING EDGE. RIB (LH ONLY)		1
36	65-18150-4	. . WEB, FRONT SPAR STATION 769.58 WING LEADING EDGE. RIB (RH ONLY)		1
	65-18147-1	. RIB INSTL, WING LEADING EDGE PRODUCTION BREAK (LH ONLY)		1
	65-18147-2	. RIB INSTL, WING LEADING EDGE PRODUCTION BREAK (RH ONLY)		1
37	NAS1368N8A	. . GROMMET		1
37A	NAS1368N8A	. . GROMMET		1
38	65-18147-10	. . SEAL, WING LEADING EDGE PRODUCTION BREAK RIB AIR.		1
39	65-18147-29	. . SEAL, WING LEADING EDGE PRODUCTION BREAK RIB AIR.		1
40	65-18147-30	. . FILLER, WING LEADING EDGE PRODUCTION BREAK RIB. TAPERED		1
41	65-18147-41	. . SUPPORT		1
42	65-18460-8	. SEAL, SECTION 15 OUTBOARD WING FRONT SPAR STATION . 745.772 TO WING STATION 960.112 LEADING EDGE SLAT (EXTRUSION NO. BAC1530-7 X 2.40 IN. LG)		4
	NAS514P632-6	ATTACHING PARTS		
	AN960PD6L	. SCREW		9
	NAS679A06W	. WASHER		9
		. NUT		9
	65-18190-1	. RIB INSTL, FRONT SPAR STATION 924.35 (LH ONLY).		1
	65-18190-2	. RIB INSTL, FRONT SPAR STATION 924.35 (RH ONLY).		1
42A	NAS1368N12A	. . GROMMET		1
42B	NAS1368N8B	. . GROMMET		1
	65-18188-1	. RIB INSTL, FRONT SPAR STATION 870.79 (LH ONLY).		1
	65-18188-2	. RIB INSTL, FRONT SPAR STATION 870.79 (RH ONLY).		1
42C	NAS1368N12A	. . GROMMET		1
42D	NAS1368N8B	. . GROMMET		1
	65-18148-1	. RIB INSTL, FRONT SPAR STATION 751.76. TRACK SUPPORT (LH ONLY)		1
	65-18148-2	. RIB INSTL, FRONT SPAR STATION 751.76. TRACK SUPPORT (RH ONLY)		1
42E	BACG20ZM458B	. . GROMMET		1
43	65-18460-30	. RETAINER, SECTION 15 OUTBOARD WING FRONT SPAR STATION 745.772 TO WING STATION 960.112 LEADING EDGE SEAL		3
44	65-18460-31	. RETAINER, SECTION 15 OUTBOARD WING FRONT SPAR STATION 745.772 TO WING STATION 960.112 LEADING EDGE SEAL		1
45	65-18460-37	. SEAL, SECTION 15 OUTBOARD WING FRONT SPAR STATION . 745.772 TO WING STATION 849.40 LEADING EDGE (EXTRUSION NO. BAC1530-7 X 120.0 IN. LG) (LH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
5 45	65-18460-38	. SEAL, SECTION 15 OUTBOARD WING FRONT SPAR STATION . . 745.772 TO WING STATION 849.40 LEADING EDGE (EXTRUSION NO. BAC1530-7 X 120.0 IN. LG) (RH ONLY)		1
45A	65-18460-39	. SEAL, SECTION 15 OUTBOARD WING FRONT SPAR STATION . . 849.40 TO WING STATION 960.112 LEADING EDGE (EXTRUSION NO. BAC1530-7 X 120.0 IN. LG) (LH ONLY)		1
45A	65-18460-40	. SEAL, SECTION 15 OUTBOARD WING FRONT SPAR STATION . . 849.40 TO WING STATION 960.112 LEADING EDGE (EXTRUSION NO. BAC1530-7 X 120.0 IN. LG) (RH ONLY)		1
	NAS517-2-0 AN960PDBL NAS679A08W	ATTACHING PARTS . SCREW WASHER. NUT		AR AR AR
46	65-18460-41	. RETAINER, SECTION 15 OUTBOARD WING FRONT SPAR STATION 745.772 TO WING STATION 960.112 LEADING EDGE SEAL		8
47	65-18460-45	. RETAINER, SECTION 15 OUTBOARD WING FRONT SPAR STATION 745.772 TO WING STATION 960.112 LEADING EDGE SEAL		3
48	65-18460-42	. RETAINER, SECTION 15 OUTBOARD WING FRONT SPAR STATION 745.772 TO WING STATION 960.112 LEADING EDGE SEAL		4
49	65-18460-43	. RETAINER, SECTION 15 OUTBOARD WING FRONT SPAR STATION 745.772 TO WING STATION 960.112 LEADING EDGE SEAL		1
50	65-18460-44	. RETAINER, SECTION 15 OUTBOARD WING FRONT SPAR STATION 745.772 TO WING STATION 960.112 LEADING EDGE SEAL		1
52	69-16265-1	. SUPPORT, SECTION 15 LEADING EDGE SEAL (LH ONLY) . . .		1
52	69-16265-2	. SUPPORT, SECTION 15 LEADING EDGE SEAL (RH ONLY) . . .		1
	MS20470D5 BACR15CED6 BACS40A9-24	ATTACHING PARTS . RIVET RIVET SHIM.		3 3 AR
53	65-18460-35	. CHANNEL, SECTION 15 OUTBOARD WING FRONT SPAR STATION 745.772 TO WING STATION 960.112 LEADING EDGE SUPPORT (LH ONLY)		1
53	65-18460-36	. CHANNEL, SECTION 15 OUTBOARD WING FRONT SPAR STATION 745.772 TO WING STATION 960.112 LEADING EDGE SUPPORT (RH ONLY)		1
R R R R	54 65-18465-1	. SUPPORT, SLAT FORWARD TRACK (OPTIONAL TO 65-18465-7)	0150	1
	54 65-18465-7	. SUPPORT, SLAT FORWARD TRACK (OPTIONAL 65-18465-1)	0150	1
	54 65-18465-7	. SUPPORT, SLAT FORWARD TRACK ATTACHING PARTS	5199	1
	MS20470D6 NAS1466-7 NAS1466-5 69-14527-1	. RIVET BOLT. BOLT. SHIM, OUTBOARD WING LEADING EDGE TRACK SUPPORT. . . .		8 4 4 AR
	69-14527-2	. SHIM, OUTBOARD WING LEADING EDGE TRACK SUPPORT. . . . FITTING LAMINATED		AR
	NAS1080-6	. COLLAR.		8
R R R R R R R R	55 65-18465-2	. SUPPORT, SLAT FORWARD TRACK (OPTIONAL TO 65-18465-8)	0150	2
	55 65-18465-8	. SUPPORT, SLAT FORWARD TRACK (OPTIONAL 65-18465-2)	0150	2
	55 65-18465-8	. SUPPORT, SLAT FORWARD TRACK	5199	2
	56 65-18465-3	. SUPPORT, SLAT FORWARD TRACK (OPTIONAL TO 65-18465-9)	0150	2
	56 65-18465-9	. SUPPORT, SLAT FORWARD TRACK (OPTIONAL 65-18465-3)	0150	2
	56 65-18465-9	. SUPPORT, SLAT FORWARD TRACK ATTACHING PARTS	5199	2
	MS20470D6 NAS1466-7 NAS1466-5 69-14527-3	. RIVET BOLT. BOLT. SHIM, OUTBOARD WING LEADING EDGE TRACK SUPPORT. . . .		24 16 16 AR
	69-14527-4	. SHIM, OUTBOARD WING LEADING EDGE TRACK SUPPORT. . . . FITTING LAMINATED		AR

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *707* Intercontinental
PARTS CATALOG


FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
5	69-14527-5	. SHIM, OUTBOARD WING LEADING EDGE TRACK SUPPORT. . . . FITTING LAMINATED		AR
	69-14527-6	. SHIM, OUTBOARD WING LEADING EDGE TRACK SUPPORT. . . . FITTING LAMINATED		AR
	NAS1080-6	. COLLAR.		32
57	65-18465-4	. SUPPORT, SLAT FORWARD TRACK (OPTIONAL TO 65-18465-10)	0150	2
	65-18465-10	. SUPPORT, SLAT FORWARD TRACK (OPTIONAL 65-18465-4)	0150	2
57	65-18465-10	. SUPPORT, SLAT FORWARD TRACK	5199	2
58	65-18465-5	. SUPPORT, SLAT FORWARD TRACK (OPTIONAL TO 65-18465-11)	0150	1
58	65-18465-11	. SUPPORT, SLAT FORWARD TRACK (OPTIONAL 65-18465-5)	0150	1
58	65-18465-11	. SUPPORT, SLAT FORWARD TRACK ATTACHING PARTS	5199	1
	MS2047006	. RIVET		12
	NAS1466-7	. BOLT.		12
	NAS1466-5	. BOLT.		12
	69-14527-7	. SHIM, OUTBOARD WING LEADING EDGE TRACK SUPPORT. . . . FITTING LAMINATED		AR
	69-14527-8	. SHIM, OUTBOARD WING LEADING EDGE TRACK SUPPORT. . . . FITTING LAMINATED		AR
	69-14527-9	. SHIM, OUTBOARD WING LEADING EDGE TRACK SUPPORT. . . . FITTING LAMINATED		AR
	69-14527-10	. SHIM, OUTBOARD WING LEADING EDGE TRACK SUPPORT. . . . FITTING LAMINATED		AR
	NAS1080-6	. COLLAR.		24
59	65-18466-1	. SUPPORT, OUTBOARD WING LEADING EDGE SLAT AFT TRACK. . ATTACHING PARTS		1
	NAS1466-7	. BOLT.		8
	69-14527-11	. SHIM, OUTBOARD WING LEADING EDGE TRACK SUPPORT. . . . FITTING LAMINATED		AR
	69-14527-12	. SHIM, OUTBOARD WING LEADING EDGE TRACK SUPPORT. . . . FITTING LAMINATED		AR
	NAS1080-6	. COLLAR.		8
60	65-18466-2	. SUPPORT, OUTBOARD WING LEADING EDGE SLAT AFT TRACK. .		4
61	65-18466-3	. SUPPORT, OUTBOARD WING LEADING EDGE SLAT AFT TRACK. . ATTACHING PARTS		3
	NAS1466-7	. BOLT.		42
	69-14527-13	. SHIM, OUTBOARD WING LEADING EDGE TRACK SUPPORT. . . . FITTING LAMINATED		AR
	69-14527-14	. SHIM, OUTBOARD WING LEADING EDGE TRACK SUPPORT. . . . FITTING LAMINATED		AR
	69-14527-15	. SHIM, OUTBOARD WING LEADING EDGE TRACK SUPPORT. . . . FITTING LAMINATED		AR
	69-14527-16	. SHIM, OUTBOARD WING LEADING EDGE TRACK SUPPORT. . . . FITTING LAMINATED		AR
	NAS1080-6	. COLLAR.		42
68	65-18460-9	. DOOR, SECTION 15 OUTBOARD WING FRONT SPAR STATION 942 TO 948 LEADING EDGE ACCESS		1
69	65-18460-1655	. DOOR, SECTION 15 OUTBOARD WING FRONT SPAR STATION 918 TO 924 LEADING EDGE ACCESS		1
70	65-18460-11	. DOOR, SECTION 15 OUTBOARD WING FRONT SPAR STATION 882 TO 888 LEADING EDGE ACCESS		1
71	65-18460-1656	. DOOR, SECTION 15 OUTBOARD WING FRONT SPAR STATION 846 TO 852 LEADING EDGE ACCESS		1
72	65-18460-1657	. DOOR, SECTION 15 OUTBOARD WING FRONT SPAR STATION 811 TO 817 LEADING EDGE ACCESS		1
73	65-18460-14	. DOOR, SECTION 15 OUTBOARD WING FRONT SPAR STATION 775 TO 781 LEADING EDGE ACCESS ATTACHING PARTS		1
	NAS623-3-2W	. SCREW		30
	AN960PD10	. WASHER.		30
74	65-18460-1653	. PANEL, SECTION 15 OUTBOARD WING FRONT SPAR STATION. . 960.0 TO 965.08 LEADING EDGE SKIN (LH ONLY)		1
74	65-18460-1654	. PANEL, SECTION 15 OUTBOARD WING FRONT SPAR STATION. . 960.0 TO 965.08 LEADING EDGE SKIN (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5	75	65-19397-3		. DUCT INSTL, FRONT SPAR STATION 745 TO 960 WING. . . . LEADING EDGE THERMAL ANTI-ICING (LH ONLY) (SEE 30-1, FIG. 16)		1
	75	65-19397-4		. DUCT INSTL, FRONT SPAR STATION 745 TO 960 WING. . . . LEADING EDGE THERMAL ANTI-ICING (RH ONLY) (SEE 30-1, FIG. 16)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

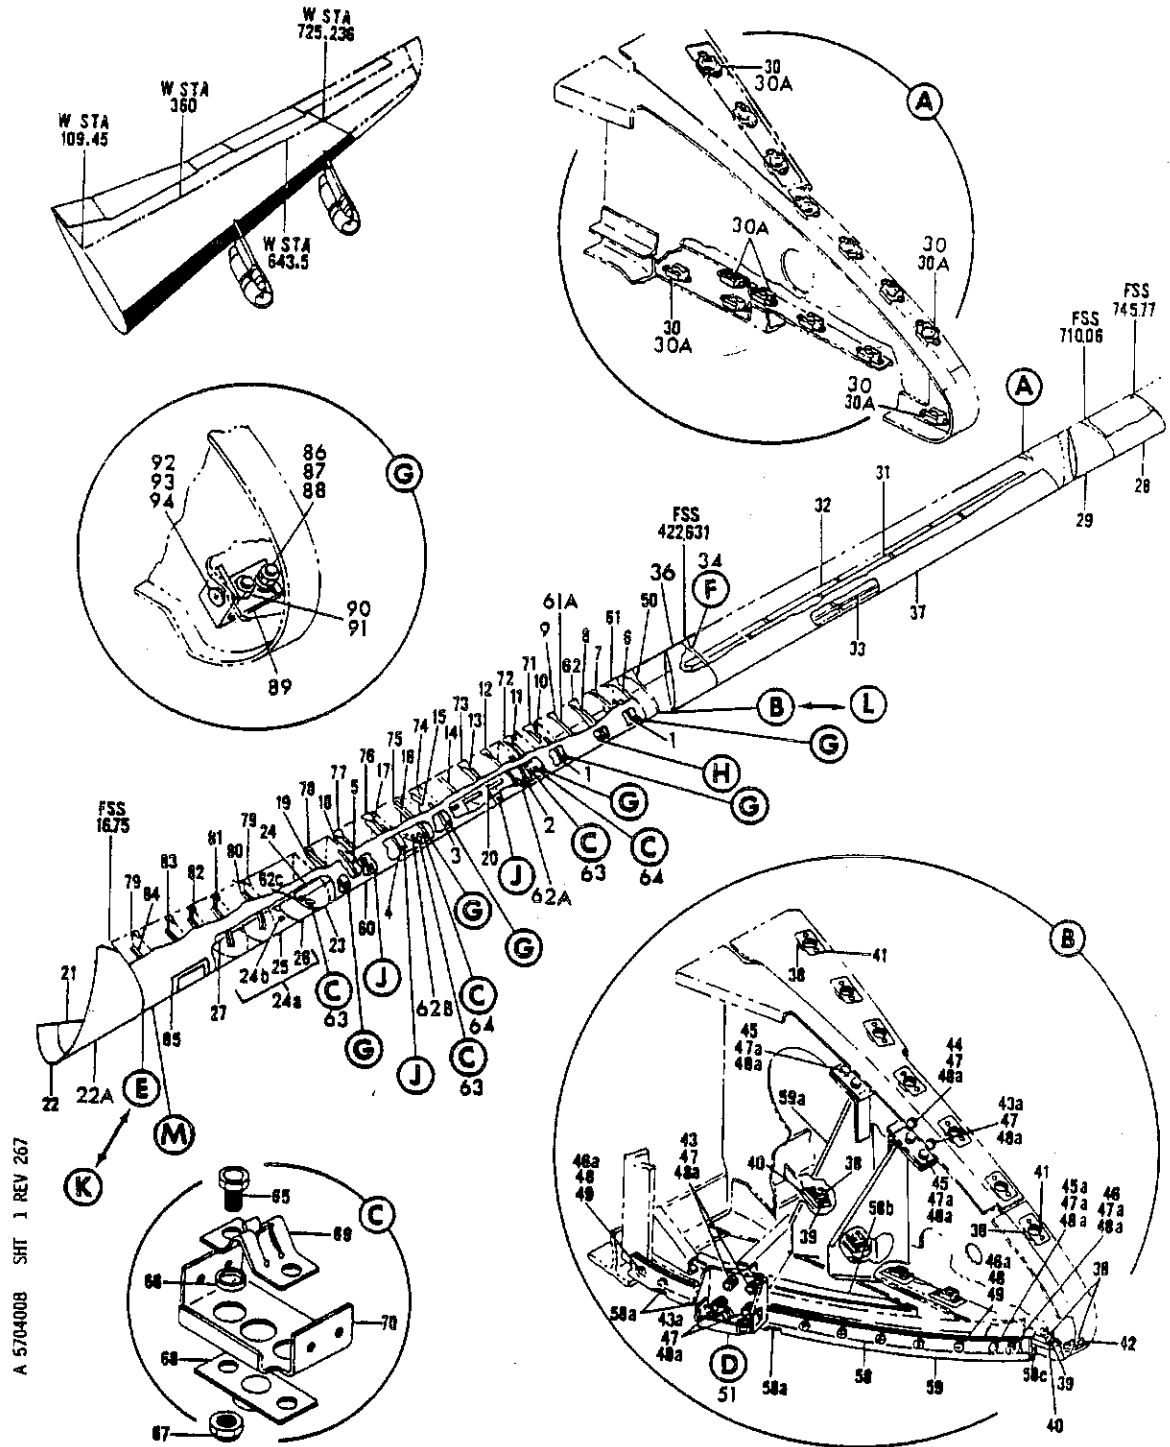

A 5704008 SHT 1 REV 267

FIGURE 8. LEADING EDGE INSTL. SECTION 14 LEADING EDGE (SHEET 1)

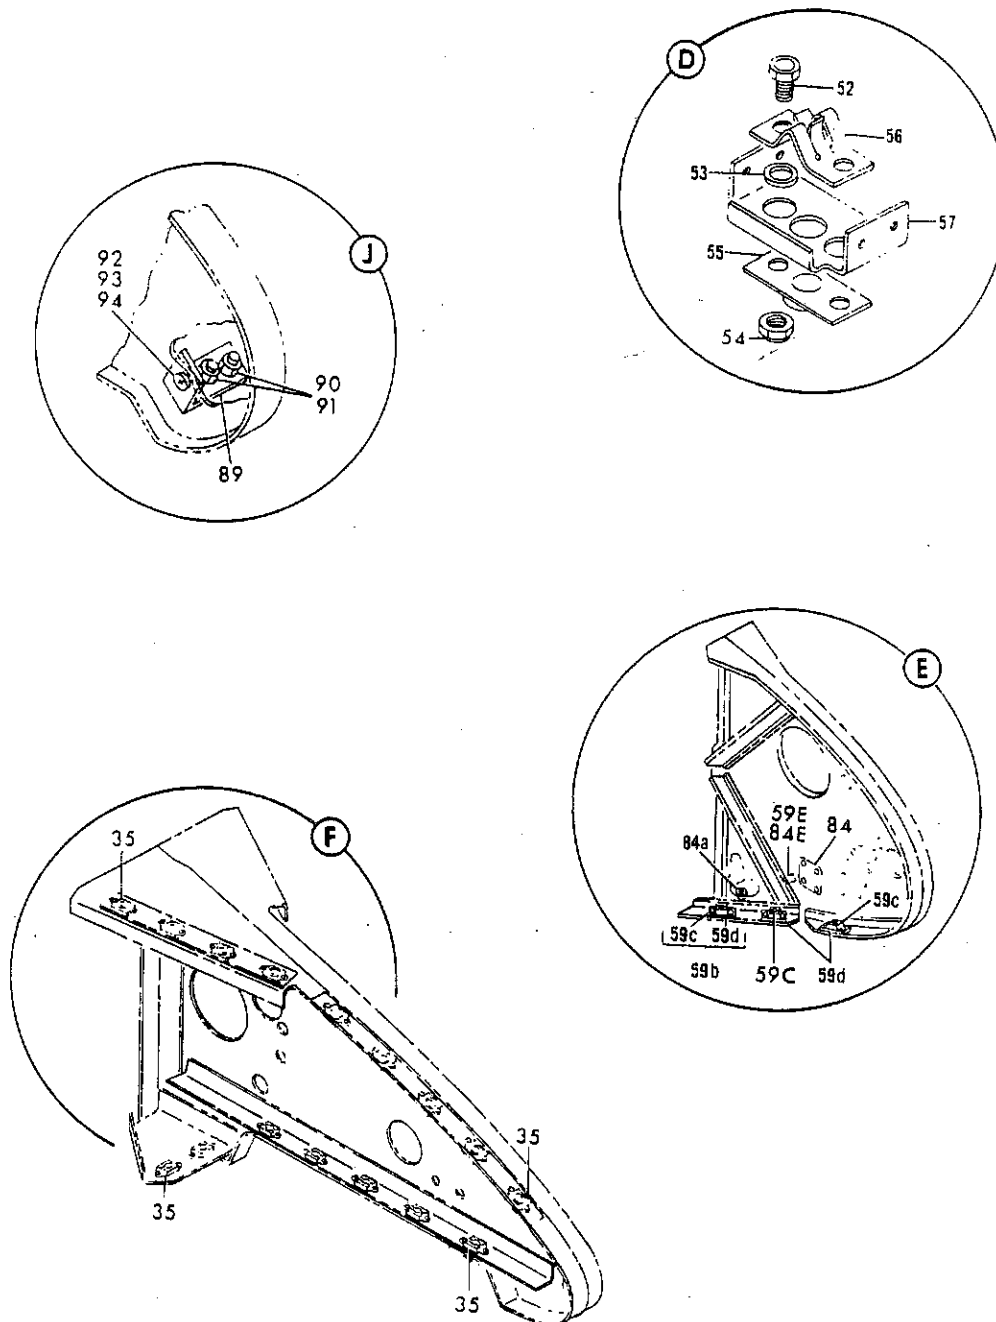


FIGURE 8. LEADING EDGE INSTL, SECTION 14 INBOARD WING (SHEET 2)

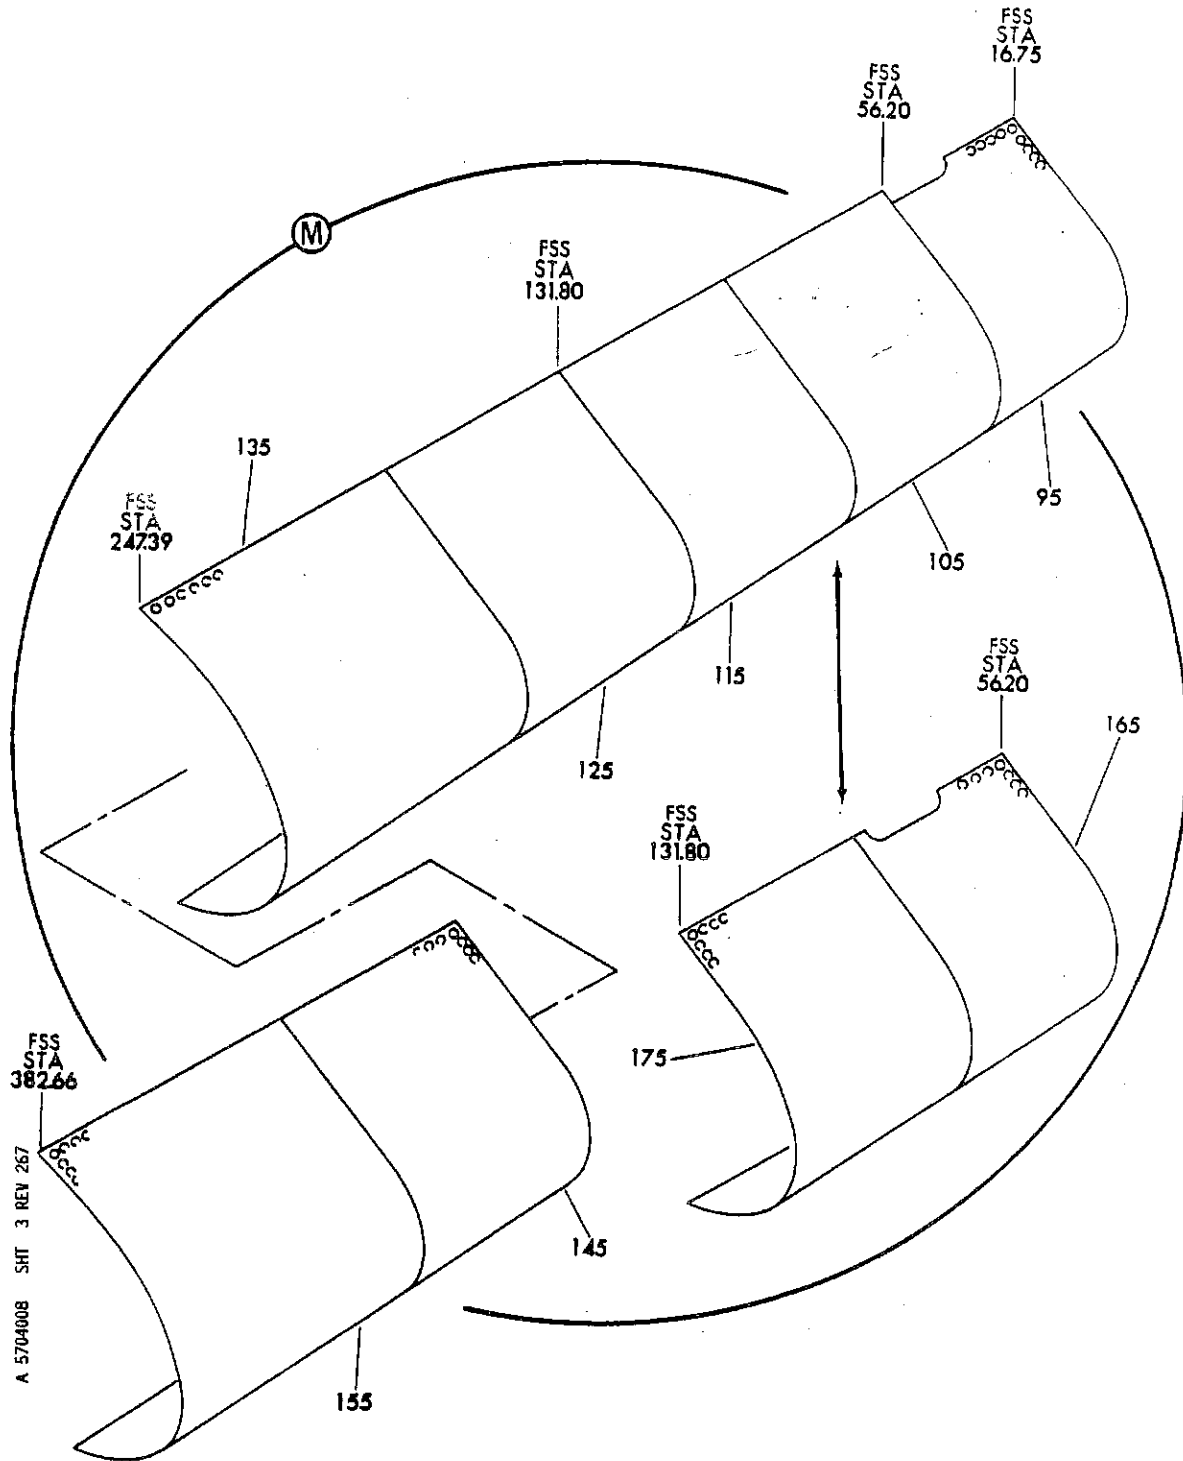


FIGURE 8. LEADING EDGE INSTL. SECTION 14 LEADING EDGE (SHEET 3)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8	65-31993-1		LEADING EDGE INSTL, SECTION 14 INBOARD WING (LH) (SEE 57-3, FIG. 2, ITEM 8)		RF
	65-31993-2		LEADING EDGE INSTL, SECTION 14 INBOARD WING (RH) (SEE 57-3, FIG. 2, ITEM 8)		RF
1	65-32296-1		. LINK INSTL, FRONT SPAR STATION 367.61 AND 319.05. . . 0150 FLAP FAIRING MECHANISM (SEE 27-7, FIG. 49) (OPTIONAL 65-32296-6)		1
1	65-32296-6		. LINK INSTL, FRONT SPAR STATION 367.61 AND 319.05 FLAP FAIRING MECHANISM (SEE 27-7, FIG. 49) (OPTIONAL TO 65-32296-1)	0150	1
1	65-32296-6		. LINK INSTL, FRONT SPAR STATION 367.61 AND 319.05 FLAP FAIRING MECHANISM (SEE 27-7, FIG. 49)	5199	1
1A	65-32296-1		. LINK INSTL, FRONT SPAR STATION 367.61 AND 319.05. . . 0150 FLAP FAIRING MECHANISM (SEE 27-7, FIG. 49) (OPTIONAL 65-32296-6)		1
1A	65-32296-6		. LINK INSTL, FRONT SPAR STATION 367.61 AND 319.05. . . 0150 FLAP FAIRING MECHANISM (SEE 27-7, FIG. 49) (OPTIONAL TO 65-32296-1)		1
1A	65-32296-6		. LINK INSTL, FRONT SPAR STATION 367.61 AND 319.05. . . 5199 FLAP FAIRING MECHANISM (SEE 27-7, FIG. 49)		1
2	65-32296-2		. LINK INSTL, FRONT SPAR STATION 293.05 FLAP FAIRING. . 0150 MECHANISM (SEE 27-7, FIG. 49) (OPTIONAL 65-32296-7)		1
2	65-32296-7		. LINK INSTL, FRONT SPAR STATION 293.05 FLAP FAIRING. . 0150 MECHANISM (SEE 27-7, FIG. 49) (OPTIONAL TO 65-32296-2)		1
2	65-32296-7		. LINK INSTL, FRONT SPAR STATION 293.05 FLAP FAIRING. . 5199 MECHANISM (SEE 27-7, FIG. 49)		1
3	65-32296-3		. LINK INSTL, FRONT SPAR STATION 234.46 FLAP FAIRING. . 0150 MECHANISM (SEE 27-7, FIG. 49) (OPTIONAL 65-32296-8)		1
3	65-32296-8		. LINK INSTL, FRONT SPAR STATION 234.46 FLAP FAIRING. . 0150 MECHANISM (SEE 27-7, FIG. 49) (OPTIONAL TO 65-32296-3)		1
3	65-32296-8		. LINK INSTL, FRONT SPAR STATION 234.46 FLAP FAIRING. . 5199 MECHANISM (SEE 27-7, FIG. 49)		1
4	65-32296-4		. LINK INSTL, FRONT SPAR STATION 200.86 FLAP FAIRING. . 0150 MECHANISM (SEE 27-7, FIG. 49) (OPTIONAL 65-32296-9)		1
4	65-32296-9		. LINK INSTL, FRONT SPAR STATION 200.86 FLAP FAIRING. . 0150 MECHANISM (SEE 27-7, FIG. 49) (OPTIONAL TO 65-32296-4)		1
4	65-32296-9		. LINK INSTL, FRONT SPAR STATION 200.86 FLAP FAIRING. . 5199 MECHANISM (SEE 27-7, FIG. 49)		1
5	65-32296-5		. LINK INSTL, FRONT SPAR STATION 170.00 FLAP FAIRING. . 0150 MECHANISM (SEE 27-7, FIG. 49) (OPTIONAL 65-32296-10)		1
5	65-32296-10		. LINK INSTL, FRONT SPAR STATION 170.00 FLAP FAIRING. . 0150 MECHANISM (SEE 27-7, FIG. 49) (OPTIONAL TO 65-32296-5)		1
5	65-32296-10		. LINK INSTL, FRONT SPAR STATION 170.00 FLAP FAIRING. . 5199 MECHANISM (SEE 27-7, FIG. 49)		1
6	65-32184-3		. PARTS INSTL, FRONT SPAR STATION 372.31 WING LEADING. . 1 EDGE (LH ONLY) (SEE FIG. 27)		1
6	65-32184-4		. PARTS INSTL, FRONT SPAR STATION 372.31 WING LEADING. . 1 EDGE (RH ONLY) (SEE FIG. 27)		1
7	65-32183-3		. PARTS INSTL, FRONT SPAR STATION 358.68 WING LEADING. . 1 EDGE (LH ONLY) (SEE FIG. 29)		1
7	65-32183-4		. PARTS INSTL, FRONT SPAR STATION 358.68 WING LEADING. . 1 EDGE (RH ONLY) (SEE FIG. 29)		1
8	65-32182-3		. PARTS INSTL, FRONT SPAR STATION 345.46 WING LEADING. . 1 EDGE (LH ONLY) (SEE FIG. 30)		1
8	65-32182-4		. PARTS INSTL, FRONT SPAR STATION 345.46 WING LEADING. . 1 EDGE (RH ONLY) (SEE FIG. 30)		1
9	65-32181-3		. PARTS INSTL, FRONT SPAR STATION 329.82 WING LEADING. . 1 EDGE (LH ONLY) (SEE FIG. 29)		1
9	65-32181-4		. PARTS INSTL, FRONT SPAR STATION 329.82 WING LEADING. . 1 EDGE (RH ONLY) (SEE FIG. 29)		1
10	65-32180-3		. PARTS INSTL, FRONT SPAR STATION 313.85 WING LEADING. . 1 EDGE (LH ONLY) (SEE FIG. 27)		1
10	65-32180-4		. PARTS INSTL, FRONT SPAR STATION 313.85 WING LEADING. . 1 EDGE (RH ONLY) (SEE FIG. 27)		1
11	65-32179-3		. PARTS INSTL, FRONT SPAR STATION 297.75 WING LEADING. . 1 EDGE (LH ONLY) (SEE FIG. 27)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
8 11	65-32179-4	.	PARTS	IN STL	,	FRONT	SPAR	STATION 297.75 WING LEADING		1
		.	EDGE	(RH	ONLY)	(SEE	FIG.	27)		
12	65-32178-3	.	PARTS	IN STL	,	FRONT	SPAR	STATION 281.13 WING LEADING		1
		.	EDGE	(LH	ONLY)	(SEE	FIG.	29)		
12	65-32178-4	.	PARTS	IN STL	,	FRONT	SPAR	STATION 281.13 WING LEADING		1
		.	EDGE	(RH	ONLY)	(SEE	FIG.	29)		
13	65-32177-3	.	PARTS	IN STL	,	FRONT	SPAR	STATION 264.46 WING LEADING		1
		.	EDGE	(LH	ONLY)	(SEE	FIG.	30)		
13	65-32177-4	.	PARTS	IN STL	,	FRONT	SPAR	STATION 264.46 WING LEADING		1
		.	EDGE	(RH	ONLY)	(SEE	FIG.	30)		
14	65-32176-3	.	PARTS	IN STL	,	FRONT	SPAR	STATION 247.39 WING LEADING		1
		.	EDGE	(LH	ONLY)	(SEE	FIG.	29)		
14	65-32176-4	.	PARTS	IN STL	,	FRONT	SPAR	STATION 247.39 WING LEADING		1
		.	EDGE	(RH	ONLY)	(SEE	FIG.	29)		
15	65-32175-3	.	PARTS	IN STL	,	FRONT	SPAR	STATION 229.26 WING LEADING		1
		.	EDGE	(LH	ONLY)	(SEE	FIG.	27)		
15	65-32175-4	.	PARTS	IN STL	,	FRONT	SPAR	STATION 229.26 WING LEADING		1
		.	EDGE	(RH	ONLY)	(SEE	FIG.	27)		
16	65-32174-3	.	PARTS	IN STL	,	FRONT	SPAR	STATION 215.93 WING LEADING		1
		.	EDGE	(LH	ONLY)	(SEE	FIG.	27)		
16	65-32174-4	.	PARTS	IN STL	,	FRONT	SPAR	STATION 215.93 WING LEADING		1
		.	EDGE	(RH	ONLY)	(SEE	FIG.	27)		
17	65-32173-3	.	PARTS	IN STL	,	FRONT	SPAR	STATION 195.66 WING LEADING		1
		.	EDGE	(LH	ONLY)	(SEE	FIG.	28)		
17	65-32173-4	.	PARTS	IN STL	,	FRONT	SPAR	STATION 195.66 WING LEADING		1
		.	EDGE	(RH	ONLY)	(SEE	FIG.	28)		
18	65-32172-3	.	PARTS	IN STL	,	FRONT	SPAR	STATION 174.70 WING LEADING		1
		.	EDGE	(LH	ONLY)	(SEE	FIG.	28)		
18	65-32172-4	.	PARTS	IN STL	,	FRONT	SPAR	STATION 174.70 WING LEADING		1
		.	EDGE	(RH	ONLY)	(SEE	FIG.	28)		
19	65-32171-3	.	PARTS	IN STL	,	FRONT	SPAR	STATION 153.42 WING LEADING		1
		.	EDGE	(LH	ONLY)	(SEE	FIG.	27)		
19	65-32171-4	.	PARTS	IN STL	,	FRONT	SPAR	STATION 153.42 WING LEADING		1
		.	EDGE	(RH	ONLY)	(SEE	FIG.	27)		
20	65-32546-1	.	DUCT	IN STL	,	BODY	BUTTOCK	LINE 56.45 TO FRONT SPAR		1
		.	STATION 382.66 WING LEADING EDGE THERMAL ANTI-							
		.	ICING (LH ONLY) (SEE 30-1, FIG. 26)							
20	65-32546-2	.	DUCT	IN STL	,	BODY	BUTTOCK	LINE 56.45 TO FRONT SPAR		1
		.	STATION 382.66 WING LEADING EDGE THERMAL ANTI-							
		.	ICING (RH ONLY) (SEE 30-1, FIG. 26)							
	65-7022-1	.	FAIRING	IN STL	,	BODY	INTERSECTION	TO FRONT SPAR		1
		.	STATION 16.75 WING LEADING EDGE DOOR (LH ONLY)							
	65-7022-2	.	FAIRING	IN STL	,	BODY	INTERSECTION	TO FRONT SPAR		1
		.	STATION 16.75 WING LEADING EDGE DOOR (RH ONLY)							
21	65-6854-1	.	DOOR	IN STL	,	INBOARD	WING	LEADING EDGE (LH ONLY)		1
		.	(SEE FIG. 18)							
21	65-6854-2	.	DOOR	IN STL	,	INBOARD	WING	LEADING EDGE (RH ONLY)		1
		.	(SEE FIG. 18)							
22	65-7022-3	.	FORMER AND FAIRING ASSY, BODY INTERSECTION TO FRONT							1
		.	SPAR STATION 16.75 WING LEADING EDGE DOOR (LH							
		.	ONLY)							
22	65-7022-4	.	FORMER AND FAIRING ASSY, BODY INTERSECTION TO FRONT							1
		.	SPAR STATION 16.75 WING LEADING EDGE DOOR (RH							
		.	ONLY)							
22A	65-7022-5	.	SKIN, (LH)							1
22A	65-7022-6	.	SKIN, (RH)							1
23	65-32507-1	.	FLAP	IN STL	,	FRONT	SPAR	STATION 146.76 TO 382.66 WING	0150	1
		.	LEADING EDGE FLAPS (LH ONLY) (SEE 27-6, FIG. 78)							
23	65-32507-1	.	FLAP	IN STL	,	FRONT	SPAR	STATION 146.76 TO 382.66 WING	5199	1
		.	LEADING EDGE FLAPS (VARIABLE DWG; 65-32507-5001)							
		.	(LH ONLY) (SEE 27-6, FIG. 78)							
23	65-32507-2	.	FLAP	IN STL	,	FRONT	SPAR	STATION 146.76 TO 382.66 WING	0150	1
		.	LEADING EDGE FLAPS (RH ONLY) (SEE 27-6, FIG. 78)							
23	65-32507-2	.	FLAP	IN STL	,	FRONT	SPAR	STATION 146.76 TO 382.66 WING	5199	1
		.	LEADING EDGE FLAPS (VARIABLE DWG; 65-32507-5002)							
		.	(RH ONLY) (SEE 27-6, FIG. 78)							
24	65-31910-1	.	PANEL	IN STL	,	INBOARD	WING	LEADING EDGE FLAP SEAL		1
		.	SUPPORT (LH ONLY) (SEE 27-6, FIG. 83)							
24	65-31910-2	.	PANEL	IN STL	,	INBOARD	WING	LEADING EDGE FLAP SEAL		1
		.	SUPPORT (RH ONLY) (SEE 27-6, FIG. 83)							
24A	65-32519-1	.	PANEL	IN STL	,	FRONT	SPAR	STATION 108.23 TO 146.76 WING		1
		.	LEADING EDGE (LH ONLY) (WINGS ONLY)							
24A	65-32519-2	.	PANEL	IN STL	,	FRONT	SPAR	STATION 108.23 TO 146.76 WING		1
		.	LEADING EDGE (RH ONLY) (WINGS ONLY)							

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
8 25	65-32519-3	. . PANEL ASSY, FRONT SPAR STATION 108.23 TO 146.76 . .							0151	1
		WING LEADING EDGE INBOARD (LH ONLY)								
25	65-32519-4	. . PANEL ASSY, FRONT SPAR STATION 108.23 TO 146.76 . .							0151	1
		WING LEADING EDGE INBOARD (RH ONLY)								
25	65-32519-27	. . PANEL ASSY, FRONT SPAR STATION 108.23 TO 146.76 . .							5299	1
		WING LEADING EDGE INBOARD (LH ONLY)								
		(OPTIONAL 65-32519-3)								
25	65-32519-3	. . PANEL ASSY, FRONT SPAR STATION 108.23 TO 146.76 . .							5299	1
		WING LEADING EDGE INBOARD (LH ONLY)								
		(OPTIONAL TO 65-32519-27)								
25	65-32519-28	. . PANEL ASSY, FRONT SPAR STATION 108.23 TO 146.76 . .							5299	1
		WING LEADING EDGE INBOARD (LH ONLY)								
		(OPTIONAL 65-32519-4)								
25	65-32519-4	. . PANEL ASSY, FRONT SPAR STATION 108.23 TO 146.76 . .							5299	1
		WING LEADING EDGE INBOARD (LH ONLY)								
		(OPTIONAL TO 65-32519-28)								
26	65-32519-5	. . PANEL ASSY, FRONT SPAR STATION 108.23 TO 146.76 . .							0151	1
		WING LEADING EDGE OUTBOARD (LH ONLY)								
26	65-32519-29	. . PANEL ASSY, FRONT SPAR STATION 108.23 TO 146.76 . .							5299	1
		WING LEADING EDGE OUTBOARD (RH ONLY)								
		(OPTIONAL 65-32519-5)								
26	65-32519-5	. . PANEL ASSY, FRONT SPAR STATION 108.23 TO 146.76 . .							5299	1
		WING LEADING EDGE OUTBOARD (RH ONLY)								
		(OPTIONAL TO 65-32519-29)								
26	65-32519-30	. . PANEL ASSY, FRONT SPAR STATION 108.23 TO 146.76 . .							5299	1
		WING LEADING EDGE OUTBOARD (RH ONLY)								
		(OPTIONAL 65-32519-6)								
26	65-32519-6	. . PANEL ASSY, FRONT SPAR STATION 108.23 TO 146.76 . .							5299	1
		WING LEADING EDGE OUTBOARD (RH ONLY)								
		(OPTIONAL TO 65-32519-30)								
26	65-32519-6	. . PANEL ASSY, FRONT SPAR STATION 108.23 TO 146.76 . .							0151	1
		WING LEADING EDGE OUTBOARD (RH ONLY)								
		ATTACHING PARTS								
	NAS517-4-7	. . SCREW								20
	NAS517-4-5	. . SCREW								11
		-----*								
		. . NAVIGATION, (SEE 34-10, FIG. 30)								
27	65-1073-51	. . PANEL INSTL, FRONT SPAR STATION 16.75 TO 108.23 . .								1
		(LH ONLY) (SEE FIG. 20)								
27	65-1073-52	. . PANEL INSTL, FRONT SPAR STATION 16.75 TO 108.23 WING								1
		LEADING EDGE (RH ONLY) (SEE FIG. 21)								
	65-18184-1	. . LEADING EDGE INSTL, FRONT SPAR STATION 382 TO 745 . .							0150	1
		WING (LH ONLY)								
	65-18184-1	. . LEADING EDGE INSTL, FRONT SPAR STATION 382 TO 745 . .							5199	1
		WING (VARIABLE DWG;65-18184-5001) (LH ONLY)								
	65-18184-2	. . LEADING EDGE INSTL, FRONT SPAR STATION 382 TO 745 . .							0150	1
		WING (RH ONLY)								
	65-18184-2	. . LEADING EDGE INSTL, FRONT SPAR STATION 382 TO 745 . .							5199	1
		WING (VARIABLE DWG;65-18184-5002) (RH ONLY)								
28	65-18445-1	. . LEADING EDGE INSTL, FRONT SPAR STATION 710.06 TO . .								1
		745.77 (LH ONLY) (SEE FIG. 9)								
28	65-18445-2	. . LEADING EDGE INSTL, FRONT SPAR STATION 710.06 TO . .								1
		745.77 (RH ONLY) (SEE FIG. 9)								
29	65-18182-1	. . COVER INSTL, FRONT SPAR STATION 666.14 TO 710.06 . .							0150	1
		WING LEADING EDGE NACELLE GAP (LH ONLY) (SEE FIG. 17)								
29	65-18182-1	. . COVER INSTL, FRONT SPAR STATION 666.14 TO 710.06 . .							5199	1
		WING LEADING EDGE NACELLE GAP (LH ONLY)								
		(VARIABLE DWG;65-18182-5001) (SEE FIG. 17)								
29	65-18182-2	. . COVER INSTL, FRONT SPAR STATION 666.14 TO 710.06 . .							0150	1
		WING LEADING EDGE NACELLE GAP (RH ONLY) (SEE FIG. 17)								
29	65-18182-2	. . COVER INSTL, FRONT SPAR STATION 666.14 TO 710.06 . .							5199	1
		WING LEADING EDGE NACELLE GAP (RH ONLY)								
		(VARIABLE DWG;65-18182-5002) (SEE FIG. 17)								
	65-18142-39	. . RIB INSTL, FRONT SPAR STATION 666.14 WING LEADING								1
		EDGE (LH ONLY)								
	65-18142-40	. . RIB INSTL, FRONT SPAR STATION 666.14 WING LEADING								1
		EDGE (RH ONLY)								
30	BACS20A5P	. . . SPRING								12
31	65-18183-1	. . SLAT INSTL, INBOARD WING LEADING EDGE (LH ONLY) . .							0150	1
		(SEE 27-14, FIG. 7)								

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
8 31	65-18183-1	. . SLAT INSTL, INBOARD WING LEADING EDGE (VARIABLE . . DWG;65-18183-5003) (LH ONLY) (SEE 27-14, FIG. 7)	5199	1
31	65-18183-2	. . SLAT INSTL, INBOARD WING LEADING EDGE (RH ONLY) . . (SEE 27-14, FIG. 7)	0150	1
31	65-18183-2	. . SLAT INSTL, INBOARD WING LEADING EDGE (VARIABLE . . DWG;65-18183-5004) (RH ONLY) (SEE 27-14, FIG. 7)	5199	1
32	65-18200-1	. . PANEL INSTL, INBOARD WING LEADING EDGE SLAT SEAL. . SUPPORT (LH ONLY) (SEE 27-14, FIG. 16)		1
32	65-18200-2	. . PANEL INSTL, INBOARD WING LEADING EDGE SLAT SEAL. . SUPPORT (RH ONLY) (SEE 27-14, FIG. 16)		1
33	65-18771-1	. . DUCT INSTL, FRONT SPAR STATION 416 TO 683 WING. . . LEADING EDGE THERMAL ANTI-ICING (LH ONLY) (SEE 30-1, FIG. 18)		1
33	65-18771-2	. . DUCT INSTL, FRONT SPAR STATION 416 TO 683 WING. . . LEADING EDGE THERMAL ANTI-ICING (RH ONLY) (SEE 30-1, FIG. 18)		1
	65-18100-1	. . RIB INSTL, FRONT SPAR STATION 422.631 WING LEADING EDGE (LH ONLY)		1
	65-18100-2	. . RIB INSTL, FRONT SPAR STATION 422.631 WING LEADING EDGE (RH ONLY)		1
34	65-18100-5	. . . RIB ASSY, FRONT SPAR STATION 422.631 WING LEADING EDGE (LH ONLY)		1
34	65-18100-6	. . . RIB ASSY, FRONT SPAR STATION 422.631 WING LEADING EDGE (RH ONLY)		1
35	BAC520A5P	 SPRING.		16
36	5-86559-3213	. . COVER INSTL, WING LEADING EDGE INBOARD NACELLE GAP (LH ONLY) (SEE FIG. 14)	0151	1
36	5-86559-3333	. . COVER INSTL, WING LEADING EDGE INBOARD NACELLE GAP (LH ONLY) (SEE FIG. 14)	5299	1
36	5-86559-3214	. . COVER INSTL, WING LEADING EDGE INBOARD NACELLE GAP (RH ONLY) (SEE FIG. 14)	0151	1
36	5-86559-3334	. . COVER INSTL, WING LEADING EDGE INBOARD NACELLE GAP (RH ONLY) (SEE FIG. 14)	5299	1
37	65-18184-3	. . LEADING EDGE ASSY, FRONT SPAR STATION 382 TO 745. . WING (LH ONLY) (SEE FIG. 10)		1
37	65-18184-4	. . LEADING EDGE ASSY, FRONT SPAR STATION 382 TO 745. . WING (RH ONLY) (SEE FIG. 10)		1
	65-1090-115	. RIB INSTL, FRONT SPAR STATION 382.66 WING LEADING . . EDGE (LH ONLY)		1
	65-1090-116	. RIB INSTL, FRONT SPAR STATION 382.66 WING LEADING . . EDGE (RH ONLY)		1
38	BAC520A5P	. . SPRING.		13
39	BAC518X56	. . SPACER.		5
40	66-24088-1	. . PLATE, WING LEADING EDGE GAP COVER BEARING. ATTACHING PARTS		5
	MS20426A4	. . RIVET		10

41	66-24088-1	. . PLATE, WING LEADING EDGE GAP COVER BEARING.		7
42	66-24088-4	. . PLATE, WING LEADING EDGE GAP COVER BEARING (ALTERED FROM 66-24088-1 OR -2) ATTACHING PARTS		1
	MS20426D4	. . RIVET		16

43	NAS1303-4W	. . BOLT.		2
43A	NAS1303-7W	. . BOLT.		3
44	NAS1303-8W	. . BOLT.		1
45	NAS1303-2W	. . BOLT.		4
45A	NAS333CPA4-5	. . BOLT.		1
46	NAS623-3-5W	. . SCREW		1
46A	NAS600-8	. . SCREW		7
47	AN960PD10L	. . WASHER.		6
47A	AN960PD10	. . WASHER.		6
48	AN960PD4L	. . WASHER.		7
48A	NAS679A3W	. . NUT		12
49	NAS679A04W	. . NUT		7
50	65-1090-119	. . RIB ASSY, FRONT SPAR STATION 382.66 WING LEADING. . EDGE (LH ONLY)		1
50	65-1090-120	. . RIB ASSY, FRONT SPAR STATION 382.66 WING LEADING. . EDGE (RH ONLY) ATTACHING PARTS		1
	NAS1303-6W	. . BOLT.		13
	NAS1303-7W	. . BOLT.		3
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8	AN960PD10L NAS679A3W	.	WASHER.		32
		.	NUT		16
58	65-1090-191	.	RETAINER, FRONT SPAR STATION 382.66 WING LEADING EDGE RIB (LH ONLY)		1
58	65-1090-192	.	RETAINER, FRONT SPAR STATION 382.66 WING LEADING EDGE RIB (RH ONLY)		1
58A	65-1090-196	.	STRIP, FRONT SPAR STATION 382.66 WING LEADING . . EDGE RIB		3
58B	65-1090-198	.	STRIP, FRONT SPAR STATION 382.66 WING LEADING . . EDGE RIB		1
58C	65-1090-201	.	STRIP, FRONT SPAR STATION 382.66 WING LEADING . . EDGE RIB		1
59	65-1090-143	.	SEAL, FRONT SPAR STATION 382.66 WING LEADING EDGE RIB (EXTRUSION NO. BAC1530-3 X 20.0 IN. LG) (LH ONLY)		1
59	65-1090-144	.	SEAL, FRONT SPAR STATION 382.66 WING LEADING EDGE RIB (EXTRUSION NO. BAC1530-3 X 20.0 IN. LG) (RH ONLY)		1
59A	69-25969-5	.	BRACKET ASSY, FRONT SPAR STATION 382.658 ENGINE . CONTROL PULLEY (LH ONLY)		1
59A	69-25969-6	.	BRACKET ASSY, FRONT SPAR STATION 382.658 ENGINE . CONTROL PULLEY (RH ONLY)		1
	64-1032-3	.	RIB INSTL, FRONT SPAR STATION 16.75 WING LEADING EDGE INBOARD (LH ONLY)		1
	64-1032-4	.	RIB INSTL, FRONT SPAR STATION 16.75 WING LEADING EDGE INBOARD (RH ONLY)		1
59B	64-1032-5	.	RIB ASSY, FRONT SPAR STATION 16.75 WING LEADING . . EDGE INBOARD (LH ONLY)		1
59B	64-1032-6	.	RIB ASSY, FRONT SPAR STATION 16.75 WING LEADING . . EDGE INBOARD (RH ONLY)		1
59C	BACS20A5P	.	SPRING.		3
59D	BACS18X56	.	SPACER.		3
59E	BAC27CML1	.	MARKER-ALUMINUM FOIL, (USED ON 64-1032-4)		1
60	65-31993-3	.	LEADING EDGE ASSY, SECTION 14 INBOARD WING (LH ONLY)		1
60	65-31993-4	.	LEADING EDGE ASSY, SECTION 14 INBOARD WING (RH ONLY)		1
61	65-32184-1	.	RIB INSTL, FRONT SPAR STATION 372.31 WING LEADING . EDGE (LH ONLY) (SEE FIG. 27)		1
61	65-32184-2	.	RIB INSTL, FRONT SPAR STATION 372.31 WING LEADING . EDGE (RH ONLY) (SEE FIG. 27)		1
61A	65-32181-1	.	RIB INSTL, FRONT SPAR STATION 329.82 WING LEADING . EDGE (LH ONLY) (SEE FIG. 31A)		1
61A	65-32181-2	.	RIB INSTL, FRONT SPAR STATION 329.82 WING LEADING . EDGE (RH ONLY) (SEE FIG. 31A)		1
62	65-32182-1	.	RIB INSTL, FRONT SPAR STATION 345.46 WING LEADING . EDGE (LH ONLY) (SEE FIG. 30)		1
62	65-32182-2	.	RIB INSTL, FRONT SPAR STATION 345.46 WING LEADING . EDGE (RH ONLY) (SEE FIG. 30)		1
	65-12255-41	.	RIB INSTL, FRONT SPAR STATION 305.80 WING LEADING . EDGE (LH ONLY)		1
	65-12255-42	.	RIB INSTL, FRONT SPAR STATION 305.80 WING LEADING . EDGE (RH ONLY)		1
	65-12256-27	.	RIB INSTL, FRONT SPAR STATION 222.59 WING LEADING . EDGE (LH ONLY)		1
	65-12256-28	.	RIB INSTL, FRONT SPAR STATION 222.59 WING LEADING . EDGE (RH ONLY)		1
	65-28268-1	.	RIB INSTL, FRONT SPAR STATION 146.76 WING LEADING . EDGE (LH ONLY)		1
	65-28268-2	.	RIB INSTL, FRONT SPAR STATION 146.76 WING LEADING . EDGE (RH ONLY)		1
62A	65-12255-54	.	STRIP, FRONT SPAR STATION 305.80 WING LEADING . . EDGE RIB (USED ON 65-12255-41 AND -42)		1
62B	65-12256-38	.	STRIP, FRONT SPAR STATION 222.59 WING LEADING . . EDGE RIB (USED ON 65-12256-27 AND -28)		1
62C	65-28268-4	.	STRIP, FRONT SPAR STATION 146.76 WING LEADING . . EDGE RIB (USED ON 65-28268-1 AND -2)		1
71	65-32180-1	.	RIB INSTL, FRONT SPAR STATION 313.85 WING LEADING . EDGE (LH ONLY) (SEE FIG. 27)		1
71	65-32180-2	.	RIB INSTL, FRONT SPAR STATION 313.85 WING LEADING . EDGE (RH ONLY) (SEE FIG. 27)		1
72	65-32179-1	.	RIB INSTL, FRONT SPAR STATION 297.75 WING LEADING . EDGE (LH ONLY) (SEE FIG. 27)		1
72	65-32179-2	.	RIB INSTL, FRONT SPAR STATION 297.75 WING LEADING . EDGE (RH ONLY) (SEE FIG. 27)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
8 73	65-32177-1	. .	RIB	INSTL, FRONT SPAR STATION 264.46 WING LEADING	. .	EDGE (LH ONLY) (SEE FIG. 30)				1
73	65-32177-2	. .	RIB	INSTL, FRONT SPAR STATION 264.46 WING LEADING	. .	EDGE (RH ONLY) (SEE FIG. 30)				1
74	65-32175-1	. .	RIB	INSTL, FRONT SPAR STATION 229.26 WING LEADING	. .	EDGE (LH ONLY) (SEE FIG. 27)				1
74	65-32175-2	. .	RIB	INSTL, FRONT SPAR STATION 229.26 WING LEADING	. .	EDGE (RH ONLY) (SEE FIG. 27)				1
75	65-32174-1	. .	RIB	INSTL, FRONT SPAR STATION 215.93 WING LEADING	. .	EDGE (LH ONLY) (SEE FIG. 27)				1
75	65-32174-2	. .	RIB	INSTL, FRONT SPAR STATION 215.93 WING LEADING	. .	EDGE (RH ONLY) (SEE FIG. 27)				1
76	65-32173-1	. .	RIB	INSTL, FRONT SPAR STATION 195.66 WING LEADING	. .	EDGE (LH ONLY) (SEE FIG. 28)				1
76	65-32173-2	. .	RIB	INSTL, FRONT SPAR STATION 195.66 WING LEADING	. .	EDGE (RH ONLY) (SEE FIG. 28)				1
77	65-32172-1	. .	RIB	INSTL, FRONT SPAR STATION 174.70 WING LEADING	. .	EDGE (LH ONLY) (SEE FIG. 28)				1
77	65-32172-2	. .	RIB	INSTL, FRONT SPAR STATION 174.70 WING LEADING	. .	EDGE (RH ONLY) (SEE FIG. 28)				1
78	65-32171-1	. .	RIB	INSTL, FRONT SPAR STATION 153.42 WING LEADING	. .	EDGE (LH ONLY) (SEE FIG. 27)				1
78	65-32171-2	. .	RIB	INSTL, FRONT SPAR STATION 153.42 WING LEADING	. .	EDGE (RH ONLY) (SEE FIG. 27)				1
	64-1037-1	. .	RIB	INSTL, FRONT SPAR STATION 109.88 WING LEADING	. .	EDGE (LH ONLY)				1
	64-1037-2	. .	RIB	INSTL, FRONT SPAR STATION 109.88 WING LEADING	. .	EDGE (RH ONLY)				1
	64-1036-1	. .	RIB	INSTL, FRONT SPAR STATION 87.96 WING LEADING	. .	EDGE (LH ONLY)				1
	64-1036-2	. .	RIB	INSTL, FRONT SPAR STATION 87.96 WING LEADING	. .	EDGE (RH ONLY)				1
	64-1035-1	. .	RIB	INSTL, FRONT SPAR STATION 71.62 WING LEADING	. .	EDGE (LH ONLY)			0151	1
	64-1035-2	. .	RIB	INSTL, FRONT SPAR STATION 71.62 WING LEADING	. .	EDGE (RH ONLY)			0151	1
	64-1034-1	. .	RIB	INSTL, FRONT SPAR STATION 56.20 WING LEADING	. .	EDGE (LH ONLY)				1
	64-1034-2	. .	RIB	INSTL, FRONT SPAR STATION 56.20 WING LEADING	. .	EDGE (RH ONLY)				1
	64-1033-1	. .	RIB	INSTL, FRONT SPAR STATION 33.22 WING LEADING	. .	EDGE (LH ONLY)				1
	64-1033-2	. .	RIB	INSTL, FRONT SPAR STATION 33.22 WING LEADING	. .	EDGE (RH ONLY)				1
79	66-4719-3	. . .	TEE, WING LEADING EDGE RIB TO SPAR ATTACHMENT (LH ONLY)							1
79	66-4719-4	. . .	TEE, WING LEADING EDGE RIB TO SPAR ATTACHMENT (RH ONLY)							1
80	65-6156-9	. . .	CHORD, FRONT SPAR STATION 33.22 TO 366.18 WING	. .	LEADING EDGE RIB (USED ON 64-1037-1, -23)					1
80	65-6156-10	. . .	CHORD, FRONT SPAR STATION 33.22 TO 366.18 WING	. .	LEADING EDGE RIB (USED ON 64-1037-2, -24)					1
81	65-6156-7	. . .	CHORD, FRONT SPAR STATION 33.22 TO 366.18 WING	. .	LEADING EDGE RIB (USED ON 64-1036-1, -37)					1
81	65-6156-8	. . .	CHORD, FRONT SPAR STATION 33.22 TO 366.18 WING	. .	LEADING EDGE RIB (USED ON 64-1036-2, -38)					1
82	65-6156-5	. . .	CHORD, FRONT SPAR STATION 33.22 TO 366.18 WING	. .	LEADING EDGE RIB (USED ON 64-1035-1, -27)					1
82	65-6156-6	. . .	CHORD, FRONT SPAR STATION 33.22 TO 366.18 WING	. .	LEADING EDGE RIB (USED ON 64-1035-2, -28)					1
83	65-6156-37	. . .	CHORD, FRONT SPAR STATION 33.22 TO 366.18 WING	. .	LEADING EDGE RIB (USED ON 64-1034-1, -27)					1
83	65-6156-38	. . .	CHORD, FRONT SPAR STATION 33.22 TO 366.18 WING	. .	LEADING EDGE RIB (USED ON 64-1034-2, -28)					1
84	65-6156-35	. . .	CHORD, FRONT SPAR STATION 33.22 TO 366.18 WING	. .	LEADING EDGE RIB (USED ON 64-1033-1, -23)					1
84	65-6156-36	. . .	CHORD, FRONT SPAR STATION 33.22 TO 366.18 WING	. .	LEADING EDGE RIB (USED ON 64-1033-2, -24)					1
	64-1032-1	. .	RIB	INSTL, FRONT SPAR STATION 16.75 WING LEADING	. .	EDGE OUTBOARD (LH ONLY)				1
	64-1032-2	. .	RIB	INSTL, FRONT SPAR STATION 16.75 WING LEADING	. .	EDGE OUTBOARD (RH ONLY)				1
84A	63-1158-2001	. . .	FITTING, DRAIN.							1
84B	BACS45A22S	. . .	SEAL.						0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8 84E	BAC27CML1		. . . MARKER-ALUMINUM FOIL, COMPRESSED GAS. CONNECTION (USED ON 64-1032-2)		1
85	65-1077-1		. . STRUCTURE INSTL, WING LEADING EDGE LANDING LIGHT. . (LH ONLY) (SEE 33-1, FIG. 12)		1
85	65-1077-2		. . STRUCTURE INSTL, WING LEADING EDGE LANDING LIGHT. . (RH ONLY) (SEE 33-1, FIG. 12)		1
86	NAS517-3-4		. . SCREW		6
87	AN960PD10L		. . WASHER.		12
88	NAS679A3W		. . NUT		6
89	66-18969-1		. . ANGLE, CLIP (USED ON 65-31993-3, -119, -123).		9
89	66-18969-2		. . ANGLE, CLIP (USED ON 65-31993-4, -120, -124). ATTACHING PARTS		1
90	BACB30FN6-4		. . BOLT.		12
91	BACC30M6		. . COLLAR.		12
92	NAS517-3-6		. . SCREW		9
93	AN960PD10L		. . WASHER.		9
94	NAS679A3W		. . NUT		9
R R R R R R R R R R	95	65-6360-1	. . SKIN, SECTION 14 FRONT SPAR STATION 16.75 TO 56.20 INBOARD WING LEADING EDGE (LH ONLY)		1
		65-6360-2	. . SKIN, SECTION 14 FRONT SPAR STATION 16.75 TO 56.20 INBOARD WING LEADING EDGE (RH ONLY)		1
	105	65-6360-3	. . SKIN, SECTION 14 FRONT SPAR STATION 56.20 TO 87.96 INBOARD WING LEADING EDGE (LH ONLY)		1
		65-6360-4	. . SKIN, SECTION 14 FRONT SPAR STATION 56.20 TO 87.96 INBOARD WING LEADING EDGE (RH ONLY)		1
	115	65-6360-5	. . SKIN, SECTION 14 FRONT SPAR STATION 87.96 TO 131.80 INBOARD WING LEADING EDGE (LH ONLY)		1
		65-6360-6	. . SKIN, SECTION 14 FRONT SPAR STATION 87.96 TO 131.80 INBOARD WING LEADING EDGE (RH ONLY)		1
	125	65-6360-29	. . SKIN, SECTION 14 FRONT SPAR STATION 131.80 TO . . . 174.70 INBOARD WING LEADING EDGE (LH ONLY)		1
		65-6360-30	. . SKIN, SECTION 14 FRONT SPAR STATION 131.80 TO . . . 174.70 INBOARD WING LEADING EDGE (RH ONLY)		1
	135	65-6360-31	. . SKIN, SECTION 14 FRONT SPAR STATION 174.70 TO . . . 247.39 INBOARD WING LEADING EDGE (LH ONLY)		1
		65-6360-32	. . SKIN, SECTION 14 FRONT SPAR STATION 174.70 TO . . . 247.39 INBOARD WING LEADING EDGE (RH ONLY)		1
R R R R R R	145	65-6360-33	. . SKIN, SECTION 14 FRONT SPAR STATION 247.39 TO . . . 313.85 INBOARD WING LEADING EDGE (LH ONLY)		1
		65-6360-34	. . SKIN, SECTION 14 FRONT SPAR STATION 247.39 TO . . . 313.85 INBOARD WING LEADING EDGE (RH ONLY)		1
	155	65-6360-35	. . SKIN, SECTION 14 FRONT SPAR STATION 313.85 TO . . . 382.66 INBOARD WING LEADING EDGE (LH ONLY)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

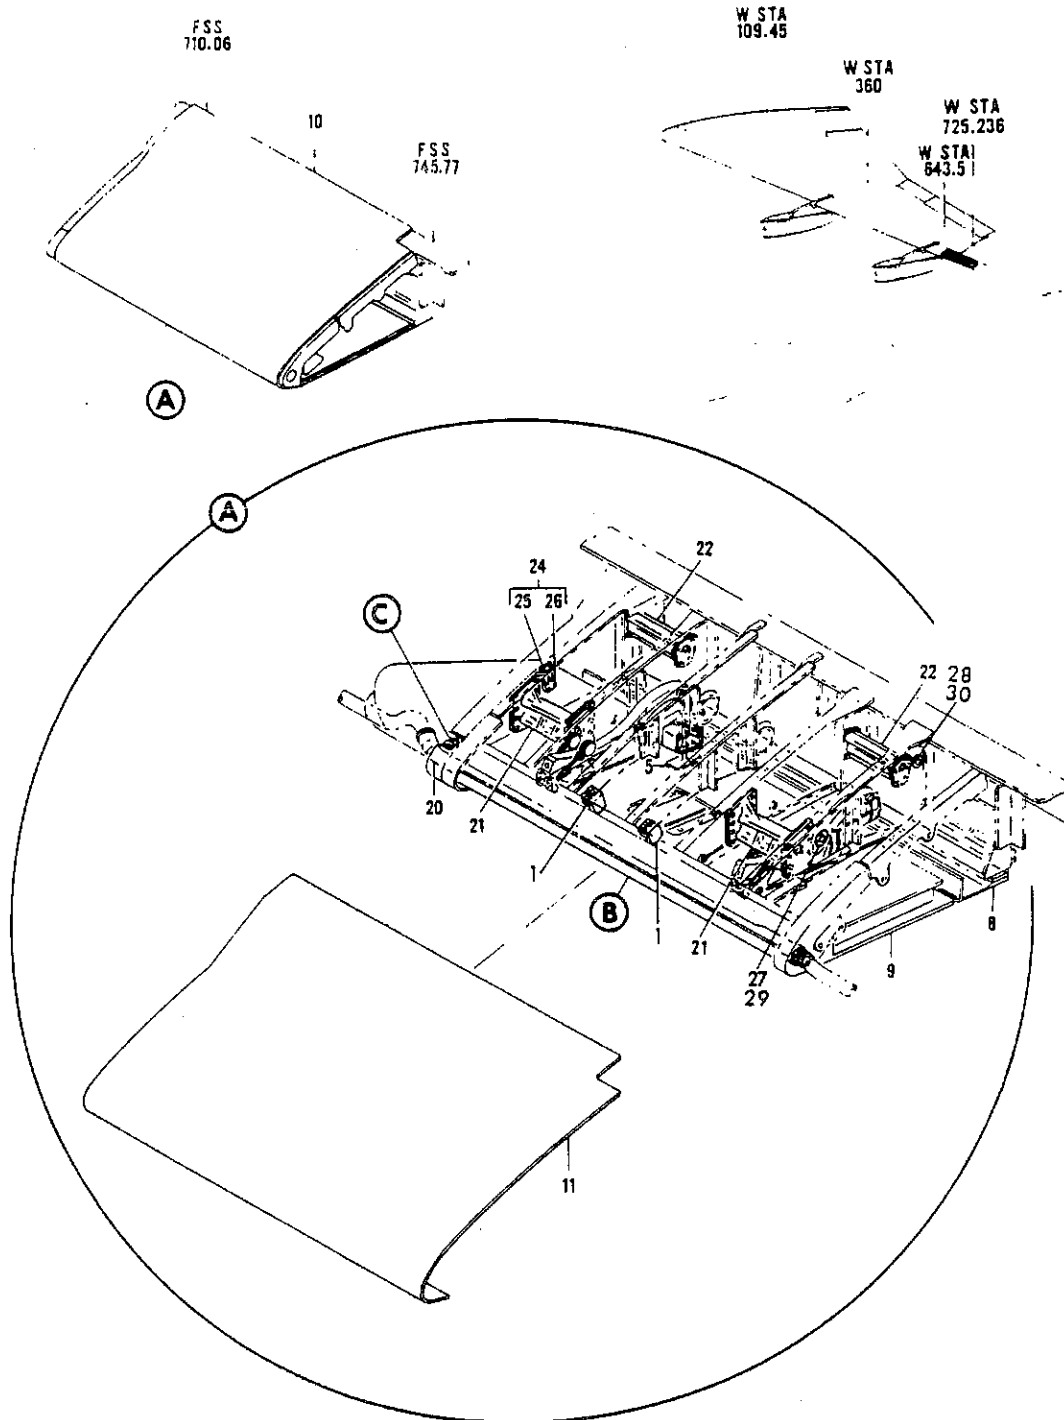


FIGURE 9. LEADING EDGE INSTL, FRONT SPAR STATION 710.77 INBOARD WING (SHEET 1)

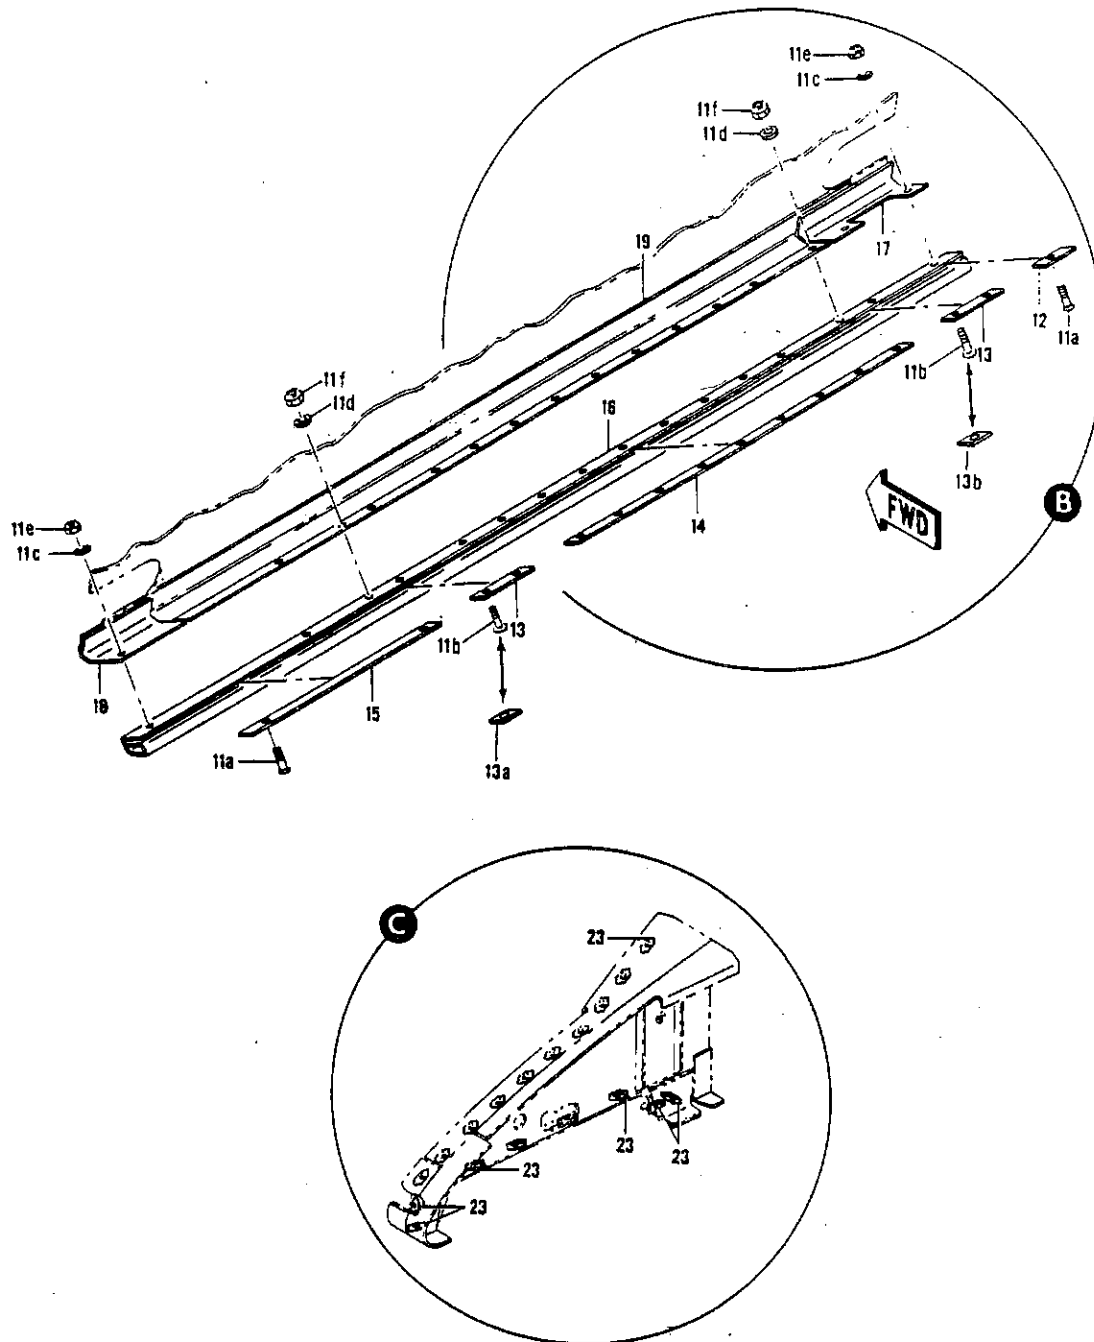


FIGURE 9. LEADING EDGE INSTL, FRONT SPAR STATION 710.06 TO 745.77 INBOARD WING (SHEET 2)

NOV 21/90

57-04-9

DETAILED PARTS LIST
57-04-9
PAGE 1


BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
9	65-18445-1	LEADING EDGE INSTL, FRONT SPAR STATION 710.06 TO 745.77 INBOARD WING (LH) (SEE FIG. 7, ITEM 5 AND FIG. 8, ITEM 28)		RF
	65-18445-2	LEADING EDGE INSTL, FRONT SPAR STATION 710.06 TO 745.77 INBOARD WING (RH) (SEE FIG. 7, ITEM 5 AND FIG. 8, ITEM 28)		RF
1	69-23859-1650	. BLOCK, SECTION 15 OUTBOARD WING LEADING EDGE UP STEP (RH ONLY)		2
1	69-23859-1	. BLOCK, SECTION 15 OUTBOARD WING LEADING EDGE UP STEP (LH ONLY)		2
8	65-18484-1	. PANEL INSTL, INBOARD WING (LH ONLY) (SEE FIG. 22) . .		1
8	65-18484-2	. PANEL INSTL, INBOARD WING (RH ONLY) (SEE FIG. 22) . .		1
9	65-18426-1	. SLAT INSTL, STATION 710.06 TO 745.06 (REWORKED BY . . SB 2651) (LH ONLY) (SEE 27-14, FIG. 6)	0103	1
9	65-18426-1655	. SLAT INSTL, STATION 710.06 TO 745.06 (LH ONLY). . . . (SEE 27-14, FIG. 6)	0499	1
9	65-18426-2	. SLAT INSTL, STATION 710.06 TO 745.06 (REWORKED BY . . SB 2651) (RH ONLY) (SEE 27-14, FIG. 6)	0103	1
9	65-18426-1656	. SLAT INSTL, STATION 710.06 TO 745.06 (RH ONLY). . . . (SEE 27-14, FIG. 6)	0499	1
10	65-18445-15	. LEADING EDGE ASSY, FRONT SPAR STATION 710.06 TO . . . 745.77 INBOARD WING (LH ONLY)		1
10	65-18445-16	. LEADING EDGE ASSY, FRONT SPAR STATION 710.06 TO . . . 745.77 INBOARD WING (RH ONLY)		1
11	65-18776-1	. . SKIN, SECTION 14 INBOARD WING LEADING EDGE (LH. . . ONLY)		1
11	65-18776-2	. . SKIN, SECTION 14 INBOARD WING LEADING EDGE (RH. . . ONLY)		1
11A	NAS517-2-0	. . SCREW		14
11C	AN960DBL	. . WASHER.		14
11E	NAS679A08W	. . NUT		14
12	65-18445-19	. . RETAINER, FRONT SPAR STATION 710.06 TO 745.77 . . . INBOARD WING LEADING EDGE SEAL		1
13A	65-18445-20	. . RETAINER, FRONT SPAR STATION 710.06 TO 745.77 . . . INBOARD WING LEADING EDGE SEAL		1
13B	65-18445-24	. . RETAINER, FRONT SPAR STATION 710.06 TO 745.77 . . . INBOARD WING LEADING EDGE SEAL		1
14	65-18445-21	. . RETAINER, FRONT SPAR STATION 710.06 TO 745.77 . . . INBOARD WING LEADING EDGE SEAL		1
15	65-18445-22	. . RETAINER, FRONT SPAR STATION 710.06 TO 745.77 . . . INBOARD WING LEADING EDGE SEAL		1
16	65-18445-23	. . SEAL, FRONT SPAR STATION 710.06 TO 745.77 INBOARD . WING LEADING EDGE (EXTRUSION NO. BAC1530-7 X 36 IN. LG)		1
17	69-16265-7	. . SUPPORT, SECTION 14 AND 15 LEADING EDGE SEAL (LH. . ONLY)		1
17	69-16265-8	. . SUPPORT, SECTION 14 AND 15 LEADING EDGE SEAL (RH. . ONLY)		1
18	69-16265-3	. . SUPPORT, SECTION 14 AND 15 LEADING EDGE SEAL (LH. . ONLY)		1
18	69-16265-4	. . SUPPORT, SECTION 14 AND 15 LEADING EDGE SEAL (RH. . ONLY)		1
	BACR15CED5	ATTACHING PARTS . . RIVET		4
	BACR15CED6	. . RIVET		2
	BACS40A11-17	. . SHIM.		1
	BACS40A8-25	. . SHIM.		1
19	65-18445-17	. . SUPPORT, FRONT SPAR STATION 710.06 TO 745.77. . . . INBOARD WING LEADING EDGE SEAL (LH ONLY)		1
19	65-18445-18	. . SUPPORT, FRONT SPAR STATION 710.06 TO 745.77. . . . INBOARD WING LEADING EDGE SEAL (RH ONLY)		1
	MS20470D5	ATTACHING PARTS . . RIVET		20
	MS20470D6	. . RIVET		1
20	65-19397-1	. . DUCT INSTL, FRONT SPAR STATION 710 TO 745 WING. . . LEADING EDGE THERMAL ANTI-ICING (LH ONLY) (SEE 30-1, FIG. 16)		1
20	65-19397-2	. . DUCT INSTL, FRONT SPAR STATION 710 TO 745 WING. . . LEADING EDGE THERMAL ANTI-ICING (RH ONLY) (SEE 30-1, FIG. 16)		1
21	65-18465-1	. . SUPPORT, OUTBOARD WING AFT LEADING EDGE SLAT TRACK		2
22	65-18466-1	. . SUPPORT, OUTBOARD WING AFT LEADING EDGE SLAT TRACK		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
9	MS20470D6		ATTACHING PARTS		
	NAS1466-6F7		. . RIVET, (USED WITH 65-18465-1)		8
	NAS1466-6F5		. . LOCKBOLT, (USED WITH 65-18466-1).		8
	NAS1080C6		. . LOCKBOLT, (USED WITH 65-18465-1).		8
	69-14527-11		. . COLLAR, (USED WITH 65-18465-1 AND 65-18466-1)		16
	69-14527-12		. . SHIM, OUTBOARD WING LEADING EDGE TRACK SUPPORT- FITTING (USED WITH 65-18465-1)		AR
	69-14527-1		. . SHIM, OUTBOARD WING LEADING EDGE TRACK SUPPORT- FITTING (USED WITH 65-18465-1)		AR
	69-14527-2		. . SHIM, OUTBOARD WING LEADING EDGE TRACK SUPPORT- FITTING (USED WITH 65-18466-1)		AR
	65-18143-1		. . RIB INSTL, FRONT SPAR STATION 710.06 WING LEADING EDGE (LH ONLY)		1
	65-18143-2		. . RIB INSTL, FRONT SPAR STATION 710.06 WING LEADING EDGE (RH ONLY)		1
23	BACS20A5P		. . . SPRING.		18
24	66-13783-1		. . . FAIRLEAD ASSY, WING LEADING EDGE TUBING		1
	NAS1103-7W		ATTACHING PARTS		
	NAS1103-8W		. . BOLT.		2
	AN960D10L		. . BOLT.		2
	NAS679A3W		. . WASHER.		6
			. . NUT		2
25	66-13783-2		. . . FAIRLEAD HALF, WING LEADING EDGE TUBING		1
26	66-13783-3		. . . FAIRLEAD HALF, WING LEADING EDGE TUBING		1
	65-18197-1		. . RIB INSTL, FRONT SPAR STATION 726.472 (LH ONLY)		1
	65-18197-2		. . RIB INSTL, FRONT SPAR STATION 726.472 (RH ONLY)		1
27	NAS1368N12A		. . GROMMET		1
28	NAS1368N8B		. . GROMMET		1
	65-18196-1		. . RIB INSTL, FRONT SPAR STATION 726.472 (LH ONLY)		1
	65-18196-2		. . RIB INSTL, FRONT SPAR STATION 726.472 (RH ONLY)		1
29	NAS1368N12A		. . GROMMET		1
30	NAS1368N8B		. . GROMMET		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

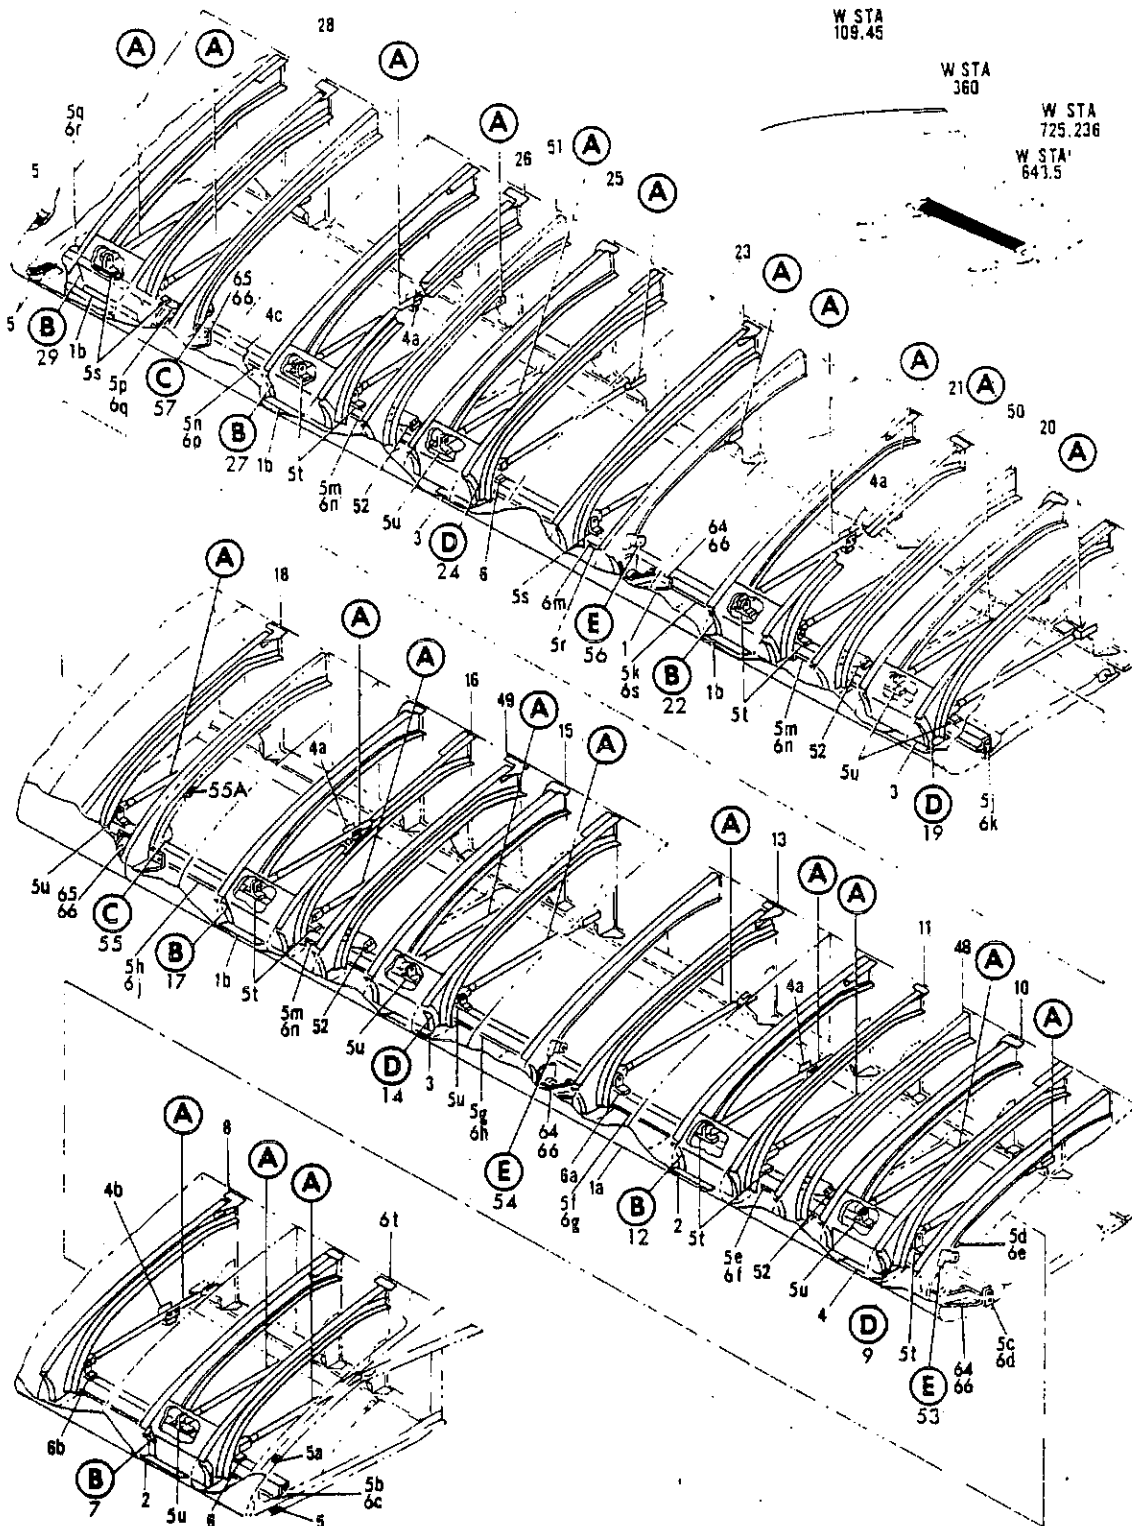

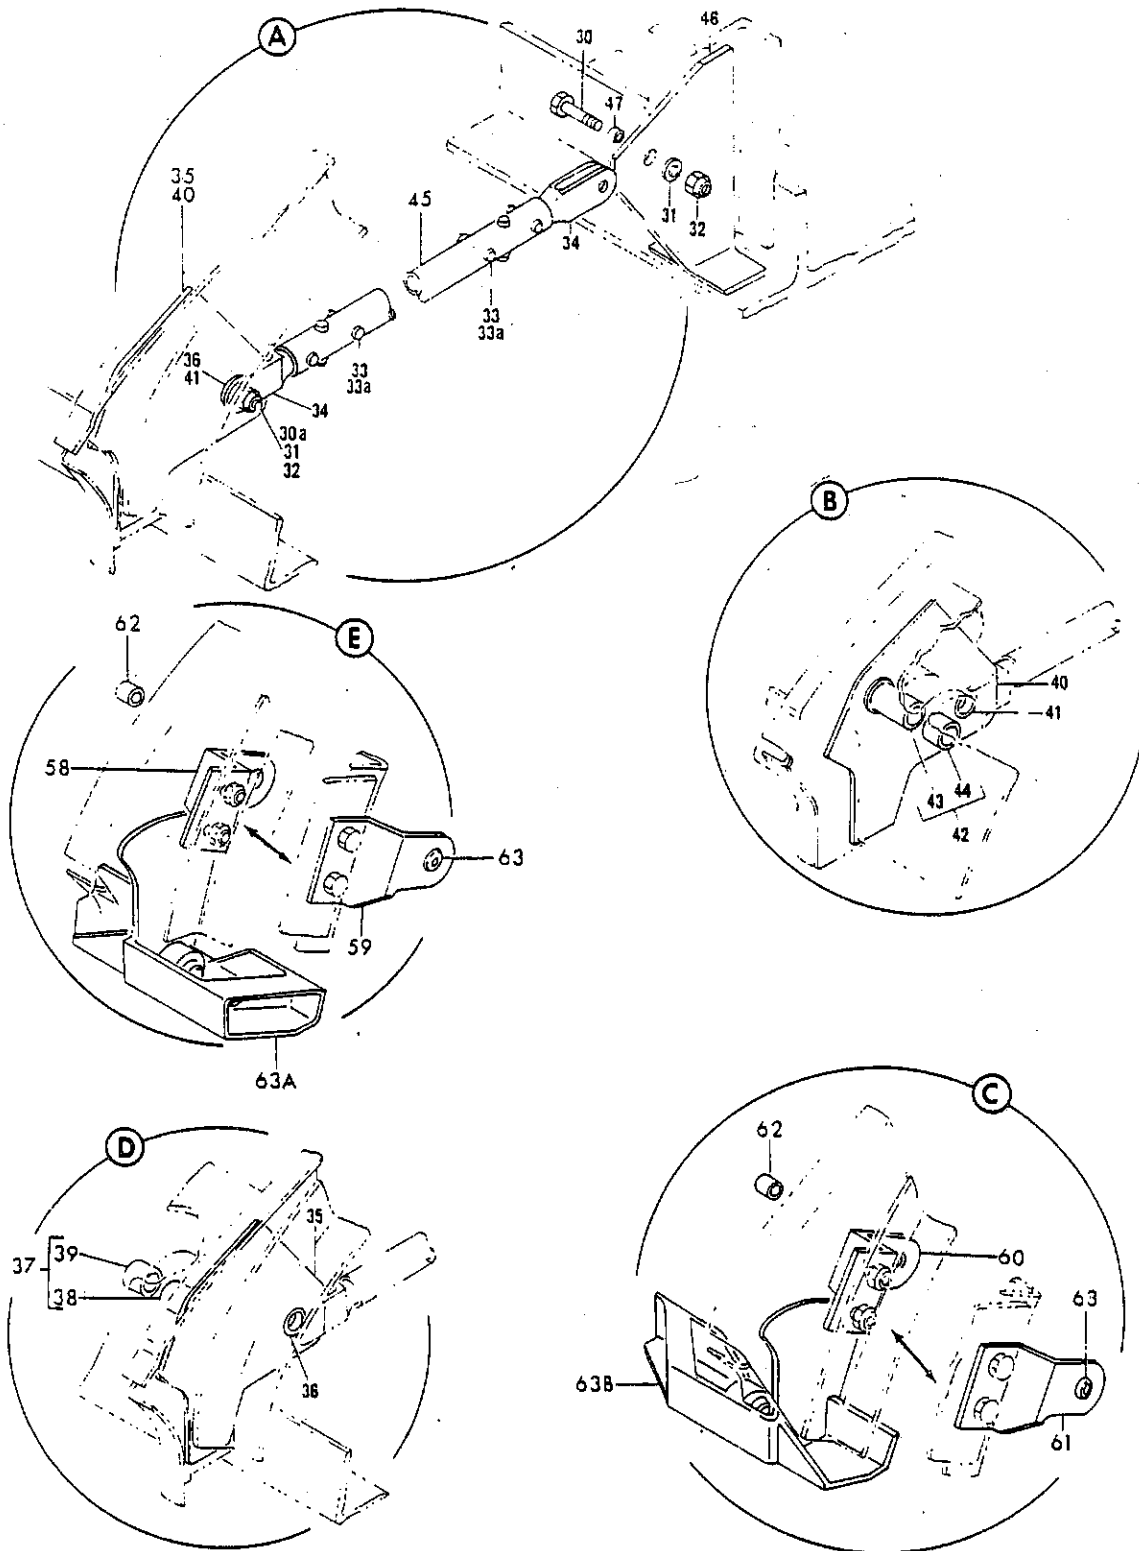


FIGURE 10. LEADING EDGE ASSY, FRONT SPAR STATION 382 TO 745 WING (SHEET 2)

NOV 21/90

57-04-10

DETAILED PARTS LIST
57-04-10
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
10	65-18184-3	LEADING EDGE ASSY, FRONT SPAR STATION 382 TO 745 WING . (LH) (SEE FIG. 7, ITEM 9 AND FIG. 8, ITEM 37)		RF
	65-18184-4	LEADING EDGE ASSY, FRONT SPAR STATION 382 TO 745 WING . (RH) (SEE FIG. 7, ITEM 9 AND FIG. 8, ITEM 37)		RF
1	65-18192-1	. SKIN, FRONT SPAR STATION 422 TO 544 SECTION 14. . . . INBOARD WING LEADING EDGE (LH ONLY)		1
1	65-18192-2	. SKIN, FRONT SPAR STATION 422 TO 544 SECTION 14. . . . INBOARD WING LEADING EDGE (RH ONLY)		1
1A	65-18192-3	. SKIN, FRONT SPAR STATION 544 TO 666 SECTION 14. . . . INBOARD WING LEADING EDGE (LH ONLY)		1
1A	65-18192-4	. SKIN, FRONT SPAR STATION 544 TO 666 SECTION 14. . . . INBOARD WING LEADING EDGE (RH ONLY)		1
1B	65-28747-1	. DOOR INSTL, LEADING EDGE SLAT HINGE (LH ONLY) (SEE . 27-14, FIG. 17)		4
1B	65-28747-2	. DOOR INSTL, LEADING EDGE SLAT HINGE (RH ONLY) (SEE . 27-14, FIG. 17)		4
2	65-28747-3	. DOOR INSTL, LEADING EDGE SLAT HINGE (LH ONLY) (SEE . 27-14, FIG. 17)		2
2	65-28747-4	. DOOR INSTL, LEADING EDGE SLAT HINGE (RH ONLY) (SEE . 27-14, FIG. 17)		2
3	65-28747-2	. DOOR INSTL, LEADING EDGE SLAT HINGE (LH ONLY) (SEE . 27-14, FIG. 17)		3
3	65-28747-1	. DOOR INSTL, LEADING EDGE SLAT HINGE (RH ONLY) (SEE . 27-14, FIG. 17)		3
4	65-28747-4	. DOOR INSTL, LEADING EDGE SLAT HINGE (LH ONLY) (SEE . 27-14, FIG. 17)		1
4	65-28747-3	. DOOR INSTL, LEADING EDGE SLAT HINGE (RH ONLY) (SEE . 27-14, FIG. 17)		1
4C	65-18185-1	. DUCT INSTL, FRONT SPAR STATION 422 TO 666 THERMAL . . ANTI-ICING (LH ONLY) (SEE 30-1, FIG. 19)		1
4C	65-18185-2	. DUCT INSTL, FRONT SPAR STATION 422 TO 666 THERMAL . . ANTI-ICING (RH ONLY) (SEE 30-1, FIG. 19)		1
	65-18100-3	. CHORD INSTL, FRONT SPAR STATION 422.631 WING LEADING EDGE (LH ONLY)		1
	65-18100-4	. CHORD INSTL, FRONT SPAR STATION 422.631 WING LEADING EDGE (RH ONLY)		1
5	BACS20A5P	. . SPRING.		3
	65-18142-41	. CHORD INSTL, FRONT SPAR STATION 666.140 WING LEADING EDGE (LH ONLY)		1
	65-18142-42	. CHORD INSTL, FRONT SPAR STATION 666.140 WING LEADING EDGE (RH ONLY)		1
5A	BACS20A5P	. . SPRING.		2
5B	65-18184-87	. SEAL, FRONT SPAR STATION 382 TO 745 WING LEADING EDGE (EXTRUSION NO. BAC1530-7 X 11.4 IN. LG)		1
5C	65-18184-86	. SEAL, (EXTRUSION NO. BAC1530-7 X 25.9 IN. LG)	0103	1
5C	65-18184-113	. SEAL, (EXTRUSION NO. BAC1530-7 X 18.70 IN. LG)	0499	1
5D	65-18184-114	. SEAL, (EXTRUSION NO. BAC1530-7 X 6.60 IN. LG)	0499	1
5E	65-18184-85	. SEAL, (EXTRUSION NO. BAC1530-7 X 21.3 IN. LG)		1
5F	65-18184-84	. SEAL, (EXTRUSION NO. BAC1530-7 X 32.6 IN. LG)	0103	1
5F	65-18184-115	. SEAL, (EXTRUSION NO. BAC1530-7 X 19.20 IN. LG)	0499	1
5G	65-18184-116	. SEAL, (EXTRUSION NO. BAC1530-7 X 12.80 IN. LG)	0499	1
5H	65-18184-84	. SEAL, (EXTRUSION NO. BAC1530-7 X 32.6 IN. LG)	0103	1
5H	65-18184-117	. SEAL, (EXTRUSION NO. BAC1530-7 X 14.0 IN. LG)	0499	1
5J	65-18184-118	. SEAL, (EXTRUSION NO. BAC1530-7 X 18.20 IN. LG)	0499	1
5K	65-18184-84	. SEAL, (EXTRUSION NO. BAC1530-7 X 32.6 IN. LG)	0103	1
5K	65-18184-119	. SEAL, (EXTRUSION NO. BAC1530-7 X 12.50 IN. LG)	0499	1
5M	65-18184-83	. SEAL, (EXTRUSION NO. BAC1530-7 X 21.1 IN. LG)		3
5N	65-18184-82	. SEAL, (EXTRUSION NO. BAC1530-7 X 23.9 IN. LG)	0103	1
5N	65-18184-121	. SEAL, (EXTRUSION NO. BAC1530-7 X 14.00 IN. LG)	0499	1
5P	65-18184-122	. SEAL, (EXTRUSION NO. BAC1530-7 X 9.20 IN. LG)	0499	1
5Q	65-18184-81	. SEAL, (EXTRUSION NO. BAC1530-7 X 8.1 IN. LG)		1
5R	65-18184-120	. SEAL, (EXTRUSION NO. BAC1530-7 X 19.60 IN. LG)	0499	1
	NAS600-5	. ATTACHING PARTS		82
	AN525-10R10	. SCREW		10
	AN960D4	. WASHER.		82
	AN960D10	. WASHER.		10
	NAS679A04W	. NUT		82
	NAS679A3W	. NUT		10
	65-28765-1	. TEE INSTL, INBOARD SEAL SUPPORT BACK UP (LH ONLY) . .		1
	65-28765-2	. TEE INSTL, INBOARD SEAL SUPPORT BACK UP (RH ONLY) . .		1
5S	69-22798-1	. . TEE		3
5T	69-22798-2	. . TEE		9

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
10	5U	69-22798-3	. . . TEE		8
	6	69-22798-4	. . . TEE, SEAL SUPPORT BACK UP		2
	6A	69-22798-5	. . . TEE, SEAL SUPPORT BACK UP		1
	6B	69-22798-6	. . . TEE, SEAL SUPPORT BACK UP		1
			ATTACHING PARTS		
		NAS517-3-6	. . . SCREW		38
		BACS47D17-25	. . . SHIM.		AR
		BACS40817-25	. . . SHIM.		AR
		AN960PD10	. . . WASHER.		AR
		NAS679A3W	. . . NUT		38
	6C	65-18184-78	. . . RETAINER, FRONT SPAR STATION 382 TO 745 WING LEADING EDGE SEAL		1
	6D	65-18184-77	. . . RETAINER, SEAL.	0103	1
	6D	65-18184-103	. . . RETAINER, SEAL.	0499	1
	6E	65-18184-104	. . . RETAINER, SEAL.	0499	1
	6F	65-18184-76	. . . RETAINER, SEAL.		1
	6G	65-18184-75	. . . RETAINER, SEAL.	0103	1
	6G	65-18184-105	. . . RETAINER, SEAL.	0499	1
	6H	65-18184-106	. . . RETAINER, SEAL.	0499	1
	6J	65-18184-75	. . . RETAINER, SEAL.	0103	1
	6J	65-18184-107	. . . RETAINER, SEAL.	0499	1
	6K	65-18184-108	. . . RETAINER, SEAL.	0499	1
	6M	65-18184-110	. . . RETAINER, SEAL.	0499	1
	6N	65-18184-74	. . . RETAINER, SEAL.		3
	6P	65-18184-73	. . . RETAINER, SEAL.	0103	1
	6P	65-18184-111	. . . RETAINER, SEAL.	0499	1
	6Q	65-18184-112	. . . RETAINER, SEAL.	0499	1
	6R	65-18184-72	. . . RETAINER, SEAL.		1
	6S	65-18184-75	. . . RETAINER, SEAL.	0103	1
	6S	65-18184-109	. . . RETAINER, SEAL.	0499	1
	6T	65-18141-1	. . . RIB INSTL, STATION 659.700 (LH ONLY).		1
	6T	65-18141-2	. . . RIB INSTL, STATION 659.700 (RH ONLY).		1
	7	65-18140-1	. . . RIB INSTL, FRONT SPAR STATION 653.900 WING LEADING. EDGE (LH ONLY)		1
	7	65-18140-2	. . . RIB INSTL, FRONT SPAR STATION 653.900 WING LEADING. EDGE (RH ONLY)		1
	8	65-18138-1	. . . RIB INSTL, FRONT SPAR STATION 641.912 WING LEADING. EDGE (LH ONLY)		1
	8	65-18138-2	. . . RIB INSTL, FRONT SPAR STATION 641.912 WING LEADING. EDGE (RH ONLY)		1
	9	65-18136-1	. . . RIB INSTL, FRONT SPAR STATION 631.600 WING LEADING. EDGE (LH ONLY)		1
	9	65-18136-2	. . . RIB INSTL, FRONT SPAR STATION 631.600 WING LEADING. EDGE (RH ONLY)		1
	10	65-18135-1	. . . RIB INSTL, FRONT SPAR STATION 625.800 WING LEADING. EDGE (LH ONLY)		1
	10	65-18135-2	. . . RIB INSTL, FRONT SPAR STATION 625.800 WING LEADING. EDGE (RH ONLY)		1
	11	65-18133-1	. . . RIB INSTL, FRONT SPAR STATION 613.959 WING LEADING. EDGE (LH ONLY)		1
	11	65-18133-2	. . . RIB INSTL, FRONT SPAR STATION 613.959 WING LEADING. EDGE (RH ONLY)		1
	12	65-18132-1	. . . RIB INSTL, FRONT SPAR STATION 608.169 WING LEADING. EDGE (LH ONLY)		1
	12	65-18132-2	. . . RIB INSTL, FRONT SPAR STATION 608.169 WING LEADING. EDGE (RH ONLY)		1
	13	65-18130-1	. . . RIB INSTL, FRONT SPAR STATION 596.566 WING LEADING. EDGE (LH ONLY)		1
	13	65-18130-2	. . . RIB INSTL, FRONT SPAR STATION 596.566 WING LEADING. EDGE (RH ONLY)		1
	14	65-18127-1	. . . RIB INSTL, FRONT SPAR STATION 579.168 WING LEADING. EDGE (LH ONLY)		1
	14	65-18127-2	. . . RIB INSTL, FRONT SPAR STATION 579.168 WING LEADING. EDGE (RH ONLY)		1
	15	65-18126-1	. . . RIB INSTL, FRONT SPAR STATION 573.383 WING LEADING. EDGE (LH ONLY)		1
	15	65-18126-2	. . . RIB INSTL, FRONT SPAR STATION 573.383 WING LEADING. EDGE (RH ONLY)		1
	16	65-18124-1	. . . RIB INSTL, FRONT SPAR STATION 561.779 WING LEADING. EDGE (LH ONLY)		1
	16	65-18124-2	. . . RIB INSTL, FRONT SPAR STATION 561.779 WING LEADING. EDGE (RH ONLY)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
10 17	65-18123-1	. RIB INSTL, FRONT SPAR STATION 555.986 WING LEADING. . EDGE (LH ONLY)		1
17	65-18123-2	. RIB INSTL, FRONT SPAR STATION 555.986 WING LEADING. . EDGE (RH ONLY)		1
18	65-18120-1	. RIB INSTL, FRONT SPAR STATION 538.588 WING LEADING. . EDGE (LH ONLY)		1
18	65-18120-2	. RIB INSTL, FRONT SPAR STATION 538.588 WING LEADING. . EDGE (RH ONLY)		1
19	65-18118-1	. RIB INSTL, FRONT SPAR STATION 526.992 WING LEADING. . EDGE (LH ONLY)		1
19	65-18118-2	. RIB INSTL, FRONT SPAR STATION 526.992 WING LEADING. . EDGE (RH ONLY)		1
20	65-18117-1	. RIB INSTL, FRONT SPAR STATION 521.210 WING LEADING. . EDGE (LH ONLY)		1
20	65-18117-2	. RIB INSTL, FRONT SPAR STATION 521.210 WING LEADING. . EDGE (RH ONLY)		1
21	65-18115-1	. RIB INSTL, FRONT SPAR STATION 509.599 WING LEADING. . EDGE (LH ONLY)		1
21	65-18115-2	. RIB INSTL, FRONT SPAR STATION 509.599 WING LEADING. . EDGE (RH ONLY)		1
22	65-18114-1	. RIB INSTL, FRONT SPAR STATION 503.810 WING LEADING. . EDGE (LH ONLY)		1
22	65-18114-2	. RIB INSTL, FRONT SPAR STATION 503.810 WING LEADING. . EDGE (RH ONLY)		1
23	65-18111-1	. RIB INSTL, FRONT SPAR STATION 486.410 WING LEADING. . EDGE (LH ONLY)		1
23	65-18111-2	. RIB INSTL, FRONT SPAR STATION 486.410 WING LEADING. . EDGE (RH ONLY)		1
24	65-18109-1	. RIB INSTL, FRONT SPAR STATION 474.811 WING LEADING. . EDGE (LH ONLY)		1
24	65-18109-2	. RIB INSTL, FRONT SPAR STATION 474.811 WING LEADING. . EDGE (RH ONLY)		1
25	65-18108-1	. RIB INSTL, FRONT SPAR STATION 469.020 WING LEADING. . EDGE (LH ONLY)		1
25	65-18108-2	. RIB INSTL, FRONT SPAR STATION 469.020 WING LEADING. . EDGE (RH ONLY)		1
26	65-18106-1	. RIB INSTL, FRONT SPAR STATION 457.418 WING LEADING. . EDGE (LH ONLY)		1
26	65-18106-2	. RIB INSTL, FRONT SPAR STATION 457.418 WING LEADING. . EDGE (RH ONLY)		1
27	65-18105-1	. RIB INSTL, FRONT SPAR STATION 451.621 WING LEADING. . EDGE (LH ONLY)		1
27	65-18105-2	. RIB INSTL, FRONT SPAR STATION 451.621 WING LEADING. . EDGE (RH ONLY)		1
28	65-18102-1	. RIB INSTL, FRONT SPAR STATION 434.230 WING LEADING. . EDGE (LH ONLY)		1
28	65-18102-2	. RIB INSTL, FRONT SPAR STATION 434.230 WING LEADING. . EDGE (RH ONLY)		1
29	65-18101-1	. RIB INSTL, FRONT SPAR STATION 428.430 WING LEADING. . EDGE (LH ONLY)		1
29	65-18101-2	. RIB INSTL, FRONT SPAR STATION 428.430 WING LEADING. . EDGE (RH ONLY)		1
30	NAS1106-7W	. . BOLT, (NOT USED ON 65-18141-1, -2, 65-18138-1, -2, 65-18135-1, -2, 65-18133-1, -2, 65-18126-1, -2, 65-18124-1, -2, 65-18117-1, -2, 65-18115-1, -2, 65-18108-1, -2, 65-18106-1 AND -2)		1
30	NAS1106-9W	. . BOLT, (USED ON 65-18141-1, -2, 65-18138-1, -2, . . . 65-18135-1, -2, 65-18133-1, -2, 65-18126-1, -2, 65-18124-1, -2, 65-18117-1, -2, 65-18115-1, -2, 65-18108-1, -2, 65-18106-1 AND -2)		1
30A	NAS1106-9W	. . BOLT, (NOT USED ON 65-18141-1, -2, 65-18138-1, -2, 65-18135-1, -2, 65-18133-1, -2, 65-18126-1, -2, 65-18124-1, -2, 65-18117-1, -2, 65-18115-1, -2, 65-18108-1, -2, 65-18106-1 AND -2)		1
30A	NAS1106-11W	. . BOLT, (USED ON 65-18141-1, -2, 65-18138-1, -2, . . . 65-18135-1, -2, 65-18133-1, -2, 65-18126-1, -2, 65-18124-1, -2, 65-18117-1, -2, 65-18115-1, -2, 65-18108-1, -2, 65-18106-1 AND -2)		1
31	AN960-616	. . WASHER.		2
32	NAS679A6	. . NUT		2
33	BACB30FM6-12	. . BOLT, (NOT USED ON 65-18108-1, -2, 65-18117-1, -2, 65-18138-1 AND -2)		6
33	BACB30AR6-14	. . BOLT, (USED ON 65-18108-1, -2, 65-18117-1, -2, . . . 65-18138-1 AND -2)		6

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
10	33A	NAS1080C6		6
	33A	NAS1080-6		6
	34	66-11872-1		2
		. . COLLAR, (NOT USED ON 65-18111-1 AND -2)		
		. . COLLAR, (USED ON 65-18111-1 AND -2)		
		. . FITTING, INBOARD WING LEADING EDGE TENSION TIE END (NOT USED ON 65-18141-1, -2, 65-18138-1, -2, 65-18135-1, -2, 65-18133-1, -2, 65-18126-1, -2, 65-18124-1, -2, 65-18117-1, -2, 65-18115-1, -2, 65-18108-1, -2, 65-18106-1 AND -2)		
	34	66-11872-2		2
		. . FITTING, INBOARD WING LEADING EDGE TENSION TIE END (USED ON 65-18141-1, -2, 65-18138-1, -2, 65-18135-1, -2, 65-18133-1, -2, 65-18126-1, -2, 65-18124-1, -2, 65-18117-1, -2, 65-18115-1, -2, 65-18108-1, -2, 65-18106-1 AND -2)		
	35	69-14483-2		1
		. . PLATE ASSY, TENSION TIE (USED ON 65-18102-1, . . . 65-18106-1 AND 65-18109-1)		
	35	69-14483-1		1
		. . PLATE ASSY, TENSION TIE (USED ON 65-18102-2, . . . 65-18106-2 AND 65-18109-2)		
	35	69-14442-1		1
		. . PLATE ASSY, TENSION TIE (USED ON 65-18111-1, . . . 65-18120-1, 65-18130-1 AND 65-18138-1)		
	35	69-14442-2		1
		. . PLATE ASSY, TENSION TIE (USED ON 65-18111-2, . . . 65-18120-2, 65-18130-2 AND 65-18138-2)		
	35	69-14483-4		1
		. . PLATE ASSY, TENSION TIE (USED ON 65-18115-1 AND . . 65-18118-1)		
	35	69-14483-3		1
		. . PLATE ASSY, TENSION TIE (USED ON 65-18115-2 AND . . 65-18118-2)		
	35	69-14483-6		1
		. . PLATE ASSY, TENSION TIE (USED ON 65-18124-1 AND . . 65-18127-1)		
	35	69-14483-5		1
		. . PLATE ASSY, TENSION TIE (USED ON 65-18124-2 AND . . 65-18127-2)		
	35	69-14483-8		1
		. . PLATE ASSY, TENSION TIE (USED ON 65-18133-1, . . . 65-18136-1 AND 65-18141-1)		
	35	69-14483-7		1
		. . PLATE ASSY, TENSION TIE (USED ON 65-18133-2, . . . 65-18136-2 AND 65-18141-2)		
	36	66-31054-7		1
	37	69-14480-20	0150	1
		. . SUPPORT ASSY, SLAT HINGE FITTING (USED ON 65-18140-1, 65-18136-1, 65-18132-1, 65-18127-1, 65-18123-1, 65-18118-1, 65-18114-1, 65-18109-1, 65-18105-1 AND 65-18101-1) (OPTIONAL 69-14480-24)		
	37	69-14480-24	0150	1
		. . SUPPORT ASSY, SLAT HINGE FITTING (USED ON 65-18140-1, 65-18136-1, 65-18132-1, 65-18127-1, 65-18123-1, 65-18118-1, 65-18114-1, 65-18109-1, 65-18105-1 AND 65-18101-1) (OPTIONAL TO 69-14480-20)		
	37	69-14480-24	5199	1
		. . SUPPORT ASSY, SLAT HINGE FITTING (USED ON 65-18140-1, 65-18136-1, 65-18132-1, 65-18127-1, 65-18123-1, 65-18118-1, 65-18114-1, 65-18109-1, 65-18105-1 AND 65-18101-1)		
	37	69-14480-19	0150	1
		. . SUPPORT ASSY, SLAT HINGE FITTING (USED ON 65-18140-2, 65-18136-2, 65-18132-2, 65-18127-2, 65-18123-2, 65-18118-2, 65-18114-2, 65-18109-2, 65-18105-2 AND 65-18101-1) (OPTIONAL 69-14480-23)		
	37	69-14480-23	0150	1
		. . SUPPORT ASSY, SLAT HINGE FITTING (USED ON 65-18140-2, 65-18136-2, 65-18132-2, 65-18127-2, 65-18123-2, 65-18118-2, 65-18114-2, 65-18109-2, 65-18105-2 AND 65-18101-2) (OPTIONAL TO 69-14480-19)		
	37	69-14480-23	5199	1
		. . SUPPORT ASSY, SLAT HINGE FITTING (USED ON 65-18140-2, 65-18136-2, 65-18132-2, 65-18127-2, 65-18123-2, 65-18118-2, 65-18114-2, 65-18109-2, 65-18105-2 AND 65-18101-2)		
	38	69-14580-14		1
	39	69-14580-2		1
	40	69-14483-1		1
		. . PLATE ASSY, TENSION TIE (USED ON 65-18101-1, . . . 65-18105-1 AND 65-18108-1)		
	40	69-14483-2		1
		. . PLATE ASSY, TENSION TIE (USED ON 65-18101-2, . . . 65-18105-2 AND 65-18108-2)		
	40	69-14483-3		1
		. . PLATE ASSY, TENSION TIE (USED ON 65-18114-1 AND . . 65-18117-1)		
	40	69-14483-4		1
		. . PLATE ASSY, TENSION TIE (USED ON 65-18114-2 AND . . 65-18117-2)		
	40	69-14483-5		1
		. . PLATE ASSY, TENSION TIE (USED ON 65-18123-1 AND . . 65-18126-1)		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
10	40	69-14483-6	. . PLATE ASSY, TENSION TIE (USED ON 65-18123-2 AND 65-18126-2)								1
	40	69-14483-7	. . PLATE ASSY, TENSION TIE (USED ON 65-18132-1, 65-18135-1 AND 65-18140-1)								1
	40	69-14483-8	. . PLATE ASSY, TENSION TIE (USED ON 65-18132-2, 65-18135-2 AND 65-18140-2)								1
	41	66-31054-7	. . . BUSHING, STRUCTURAL PRESSED FIT								1
	42	69-14480-19	. . SUPPORT ASSY, LEADING EDGE SLAT HINGE FITTING (USED ON 65-18140-1, 65-18132-1, 65-18123-1, 65-18114-1, 65-18105-1 AND 65-18101-1) (OPTIONAL 69-14480-23)								1
	42	69-14480-23	. . SUPPORT ASSY, SLAT HINGE FITTING (USED ON 65-18140-1, 65-18132-1, 65-18123-1, 65-18114-1, 65-18105-1, 65-18101-1) (OPTIONAL TO 69-14480-19)								1
	42	69-14480-23	. . SUPPORT ASSY, SLAT HINGE FITTING (USED ON 65-18140-1, 65-18132-1, 65-18123-1, 65-18114-1, 65-18105-1, 65-18101-1)								1
	42	69-14480-20	. . SUPPORT ASSY, LEADING EDGE SLAT HINGE FITTING (USED ON 65-18140-2, 65-18132-2, 65-18123-2, 65-18114-2, 65-18105-2 AND 65-18101-2) (OPTIONAL 69-14480-24)								1
	42	69-14480-24	. . SUPPORT ASSY, SLAT HINGE FITTING (USED ON 65-18140-2, 65-18132-2, 65-18123-2, 65-18114-2, 65-18105-2, 65-18101-2) (OPTIONAL TO 69-14480-20)								1
	42	69-14480-24	. . SUPPORT ASSY, SLAT HINGE FITTING (USED ON 65-18140-2, 65-18132-2, 65-18123-2, 65-18114-2, 65-18105-2, 65-18101-2)								1
	43	69-14580-14	. . . BUSHING, HINGE FITTING SUPPORT.								1
	44	69-14580-2	. . . BUSHING, HINGE FITTING SUPPORT.								1
	45	65-18141-8	. . TUBE, FRONT SPAR STATION 659.700 WING LEADING EDGE (USED ON 65-18141-1 AND -2)								1
	45	65-18140-5	. . TUBE, FRONT SPAR STATION 653.900 WING LEADING EDGE (USED ON 65-18140-1 AND -2)								1
	45	65-18138-6	. . TUBE, FRONT SPAR STATION 641.912 WING LEADING EDGE (USED ON 65-18138-1 AND -2)								1
	45	65-18136-5	. . TUBE, FRONT SPAR STATION 631.600 WING LEADING EDGE (USED ON 65-18136-1 AND -2)								1
	45	65-18135-6	. . TUBE, FRONT SPAR STATION 625.800 WING LEADING EDGE (USED ON 65-18135-1 AND -2)								1
	45	65-18133-6	. . TUBE, FRONT SPAR STATION 613.959 WING LEADING EDGE (USED ON 65-18133-1 AND -2)								1
	45	65-18132-5	. . TUBE, FRONT SPAR STATION 608.169 WING LEADING EDGE (USED ON 65-18132-1 AND -2)								1
	45	65-18130-5	. . TUBE, FRONT SPAR STATION 596.566 WING LEADING EDGE (USED ON 65-18130-1 AND -2)								1
	45	65-18127-5	. . TUBE, FRONT SPAR STATION 579.168 WING LEADING EDGE (USED ON 65-18127-1 AND -2)								1
	45	65-18126-6	. . TUBE, FRONT SPAR STATION 573.383 WING LEADING EDGE (USED ON 65-18126-1 AND -2)								1
	45	65-18124-6	. . TUBE, FRONT SPAR STATION 561.779 WING LEADING EDGE (USED ON 65-18124-1 AND -2)								1
	45	65-18123-5	. . TUBE, FRONT SPAR STATION 555.986 WING LEADING EDGE (USED ON 65-18123-1 AND -2)								1
	45	65-18120-5	. . TUBE, FRONT SPAR STATION 538.588 WING LEADING EDGE (USED ON 65-18120-1 AND -2)								1
	45	65-18118-5	. . TUBE, FRONT SPAR STATION 526.992 WING LEADING EDGE (USED ON 65-18118-1 AND -2)								1
	45	65-18117-6	. . TUBE, FRONT SPAR STATION 512.210 WING LEADING EDGE (USED ON 65-18117-1 AND -2)								1
	45	65-18115-6	. . TUBE, FRONT SPAR STATION 509.599 WING LEADING EDGE (USED ON 65-18115-1 AND -2)								1
	45	65-18114-5	. . TUBE, FRONT SPAR STATION 503.810 WING LEADING EDGE (USED ON 65-18114-1 AND -2)								1
	45	65-18111-5	. . TUBE, FRONT SPAR STATION 486.410 WING LEADING EDGE (USED ON 65-18111-1 AND -2)								1
	45	65-18109-5	. . TUBE, FRONT SPAR STATION 474.811 WING LEADING EDGE (USED ON 65-18109-1 AND -2)								1
	45	65-18108-6	. . TUBE, FRONT SPAR STATION 469.020 WING LEADING EDGE (USED ON 65-18108-1 AND -2)								1
	45	65-18106-6	. . TUBE, FRONT SPAR STATION 457.418 WING LEADING EDGE (USED ON 65-18106-1 AND -2)								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
10 45	65-18105-5	. . TUBE, FRONT SPAR STATION 451.621 WING LEADING EDGE (USED ON 65-18105-1 AND -2)		1
45	65-18102-5	. . TUBE, FRONT SPAR STATION 434.230 WING LEADING EDGE (USED ON 65-18102-1 AND -2)		1
45	65-18101-5	. . TUBE, FRONT SPAR STATION 428.430 WING LEADING EDGE (USED ON 65-18101-1 AND -2)		1
46	69-14516-1	. . TEE ASSY, WING LEADING EDGE (USED ON 65-18106-1, . . -2, 65-18108-1, -2, 65-18115-1, -2, 65-18117-1, -2, 65-18124-1, -2, 65-18126-1, -2, 65-18133-1, -2, 65-18135-1 AND -2)		1
46	69-14516-3	. . TEE ASSY, WING LEADING EDGE (USED ON 65-18102-1 AND -2)		1
46	69-14516-5	. . TEE ASSY, WING LEADING EDGE (USED ON 65-18141-1 AND -2)		1
46	69-18913-1	. . TEE ASSY, INBOARD WING TENSION TIE ATTACHMENT (USED ON 65-18101-1, 65-18105-2, 65-18109-1, 65-18111-1, 65-18114-2, 65-18118-1, 65-18120-1, 65-18123-2, 65-18127-1, 65-18130-1, 65-18132-1, 65-18136-1, 65-18138-1, 65-18140-2)		1
46	69-18913-2	. . TEE ASSY, INBOARD WING TENSION TIE ATTACHMENT (USED ON 65-18101-2, 65-18105-1, 65-18109-2, 65-18111-2, 65-18114-1, 65-18118-2, 65-18120-2, 65-18123-1, 65-18127-2, 65-18130-2, 65-18132-2, 65-18136-2, 65-18138-2, 65-18140-1)		1
	BACR15AY6-6	ATTACHING PARTS . . RIVET, (USED ON 65-18102-1, -2, 65-18106-1, -2, . . 65-18108-1, -2, 65-18115-1, -2, 65-18117-1, -2, 65-18124-1, -2, 65-18126-1, -2, 65-18141-1 AND -2)		3
	BACB30FM6-6	. . BOLT, (USED ON 65-18133-1, -2, 65-18135-1 AND -2) .		3
	BACR15AY8-6	. . RIVET, (USED ON 65-18102-1, -2, 65-18106-1, -2, . . 65-18108-1, -2, 65-18115-1, -2, 65-18117-1, -2, 65-18124-1, -2, 65-18126-1, -2, 65-18141-1 AND -2)		2
	BACB30FM8-6	. . BOLT, (USED ON 65-18133-1, -2, 65-18135-1 AND -2) .		2
	NAS1105-6W	. . BOLT, (USED WITH 69-18913-1 AND -2)		4
	NAS1104-5W	. . BOLT, ... (OPTIONAL BACB30FM8-5 WITH BACB30M8)		2
	AN960PD316	. . WASHER, (USED WITH 69-18913-1 AND -2)		4
	AN960PD416	. . WASHER.		2
	NAS679A4W	. . NUT, (USED WITH 69-18913-1 AND -2).		4
	NAS679A4W	. . NUT (OPTIONAL BACB30M8 WITH BACB30FM8-5)		2
	BACB30M6	. . COLLAR, (USED WITH BACB30FM6-6)		3
	BACB30M8	. . COLLAR, (USED WITH BACB30FM8-5 AND -6).		2
47	66-31054-7	. . BUSHING, STRUCTURAL PRESSED FIT		1
48	65-18134-1	. RIB INSTL, FRONT SPAR STATION 619.760 WING LEADING. EDGE (LH ONLY)		1
48	65-18134-2	. RIB INSTL, FRONT SPAR STATION 619.760 WING LEADING. EDGE (RH ONLY)		1
49	65-18125-1	. RIB INSTL, FRONT SPAR STATION 567.577 WING LEADING. EDGE (LH ONLY)		1
49	65-18125-2	. RIB INSTL, FRONT SPAR STATION 567.577 WING LEADING. EDGE (RH ONLY)		1
50	65-18116-1	. RIB INSTL, FRONT SPAR STATION 515.410 WING LEADING. EDGE (LH ONLY)		1
50	65-18116-2	. RIB INSTL, FRONT SPAR STATION 515.410 WING LEADING. EDGE (RH ONLY)		1
51	65-18107-1	. RIB INSTL, FRONT SPAR STATION 463.220 WING LEADING. EDGE (LH ONLY)		1
51	65-18107-2	. RIB INSTL, FRONT SPAR STATION 463.220 WING LEADING. EDGE (RH ONLY)		1
52	10-60120-89	. . SEAL, AERODYNAMIC FABRIC COVERED.		1
	NAS601-6	ATTACHING PARTS . . SCREW		2
	AN960PD6	. . WASHER.		2
	BACS47812-34A	. . SHIM.		1
	NAS679A06W	. . NUT		2
53	65-18137-1	. RIB INSTL, FRONT SPAR STATION 635.953 WING LEADING. EDGE (LH ONLY)		1
53	65-18137-2	. RIB INSTL, FRONT SPAR STATION 635.953 WING LEADING. EDGE (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
10 54	65-18129-1	.	RIB	INSTL	,	FRONT	SPAR	STATION 589.646 WING LEADING. .		1
		.	EDGE	(LH ONLY)						
54	65-18129-2	.	RIB	INSTL	,	FRONT	SPAR	STATION 589.646 WING LEADING. .		1
		.	EDGE	(RH ONLY)						
55	65-18121-1	.	RIB	INSTL	,	FRONT	SPAR	STATION 544.386 WING LEADING. .		1
		.	EDGE	(LH ONLY)						
55	65-18121-2	.	RIB	INSTL	,	FRONT	SPAR	STATION 544.386 WING LEADING. .		1
		.	EDGE	(RH ONLY)						
56	65-18112-1	.	RIB	INSTL	,	FRONT	SPAR	STATION 492.097 WING LEADING. .		1
		.	EDGE	(LH ONLY)						
56	65-18112-2	.	RIB	INSTL	,	FRONT	SPAR	STATION 492.097 WING LEADING. .		1
		.	EDGE	(RH ONLY)						
57	65-18103-1	.	RIB	INSTL	,	FRONT	SPAR	STATION 440.024 WING LEADING. .		1
		.	EDGE	(LH ONLY)						
57	65-18103-2	.	RIB	INSTL	,	FRONT	SPAR	STATION 440.024 WING LEADING. .		1
		.	EDGE	(RH ONLY)						
59	69-24906-1	.	.	FITTING	ASSY	,	INBOARD	WING SLAT FAIRING LINKAGE . .	0103	1
		.	ATTACH	(USED ON 65-18137-1, 65-18129-1 AND						
		.	65-18112-1)							
59	69-24906-2	.	.	FITTING	ASSY	,	INBOARD	WING SLAT FAIRING LINKAGE . .	0103	1
		.	ATTACH	(USED ON 65-18137-2, 65-18129-2 AND						
		.	65-18112-2)							
61	69-24906-2	.	.	FITTING	ASSY	,	INBOARD	WING SLAT FAIRING LINKAGE . .	0103	1
		.	ATTACH	(USED ON 65-18121-1 AND 65-18103-1)						
61	69-24906-1	.	.	FITTING	ASSY	,	INBOARD	WING SLAT FAIRING LINKAGE . .	0103	1
		.	ATTACH	(USED ON 65-18121-2 AND 65-18103-2)						
		.	ATTACHING PARTS							
	NAS1103-5W	.	.	BOLT					0103	2
	AN960PD10	.	.	WASHER					0103	2
	NAS679A3W	.	.	NUT					0103	2
		.	.	BUSHING					0103	1
62	NAS76A4-008P	.	.	FITTING	ASSY	,	INBOARD	WING SLAT FAIRING LINKAGE . .	0499	3
64	65-66255-7	.	ATTACH	(USED ON 65-18184-3, -137)						
64	65-66255-8	.	.	FITTING	ASSY	,	INBOARD	WING SLAT FAIRING LINKAGE . .	0499	3
		.	ATTACH	(USED ON 65-18184-4, -138)						
65	65-66255-7	.	.	FITTING	ASSY	,	INBOARD	WING SLAT FAIRING LINKAGE . .	0499	2
		.	ATTACH	(USED ON 65-18184-4, -138)						
65	65-66255-8	.	.	FITTING	ASSY	,	INBOARD	WING SLAT FAIRING LINKAGE . .	0499	2
		.	ATTACH	(USED ON 65-18184-3, -137)						
		.	ATTACHING PARTS							
	NAS623-4-4	.	.	SCREW					0499	20
	AN960PD416L	.	.	WASHER					0499	20
	BACS40R10E19	.	.	SHIM					0499	20
	NAS679A4W	.	.	NUT					0499	20
		.	.	BEARING					0499	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

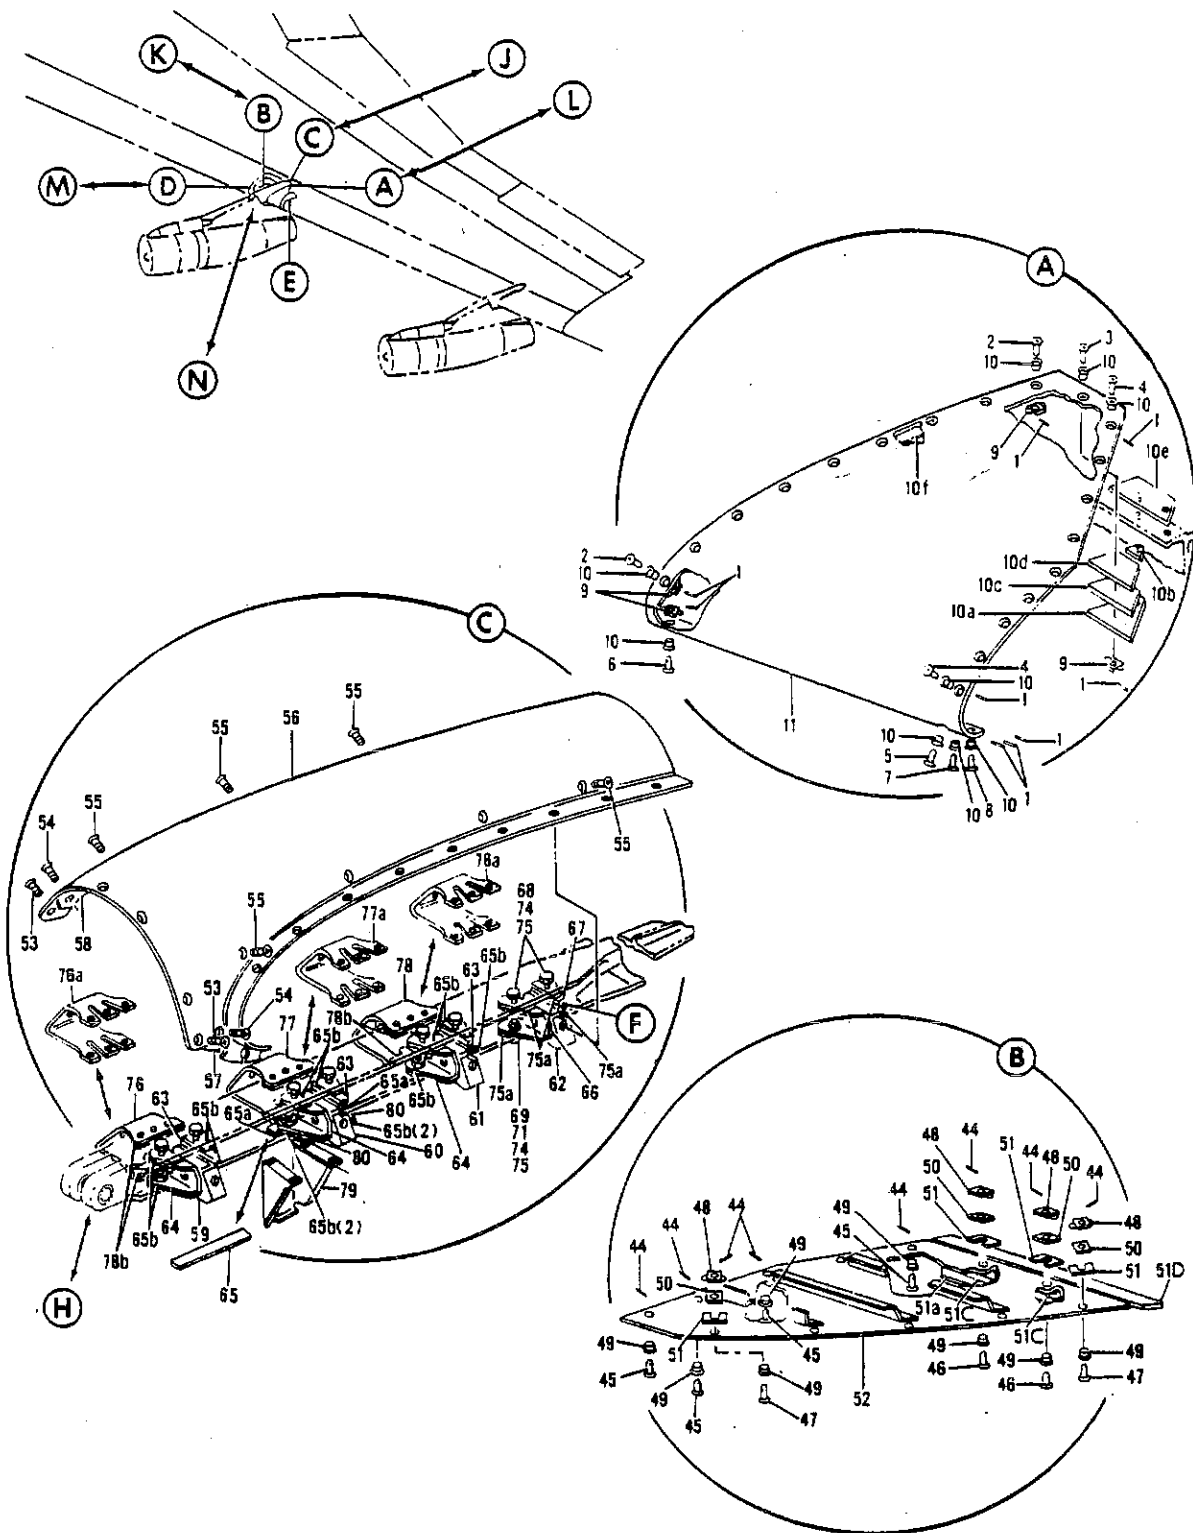


FIGURE 14. COVER INSTL-WING LEADING EDGE INBOARD NACELLE GAP (SHEET 1)

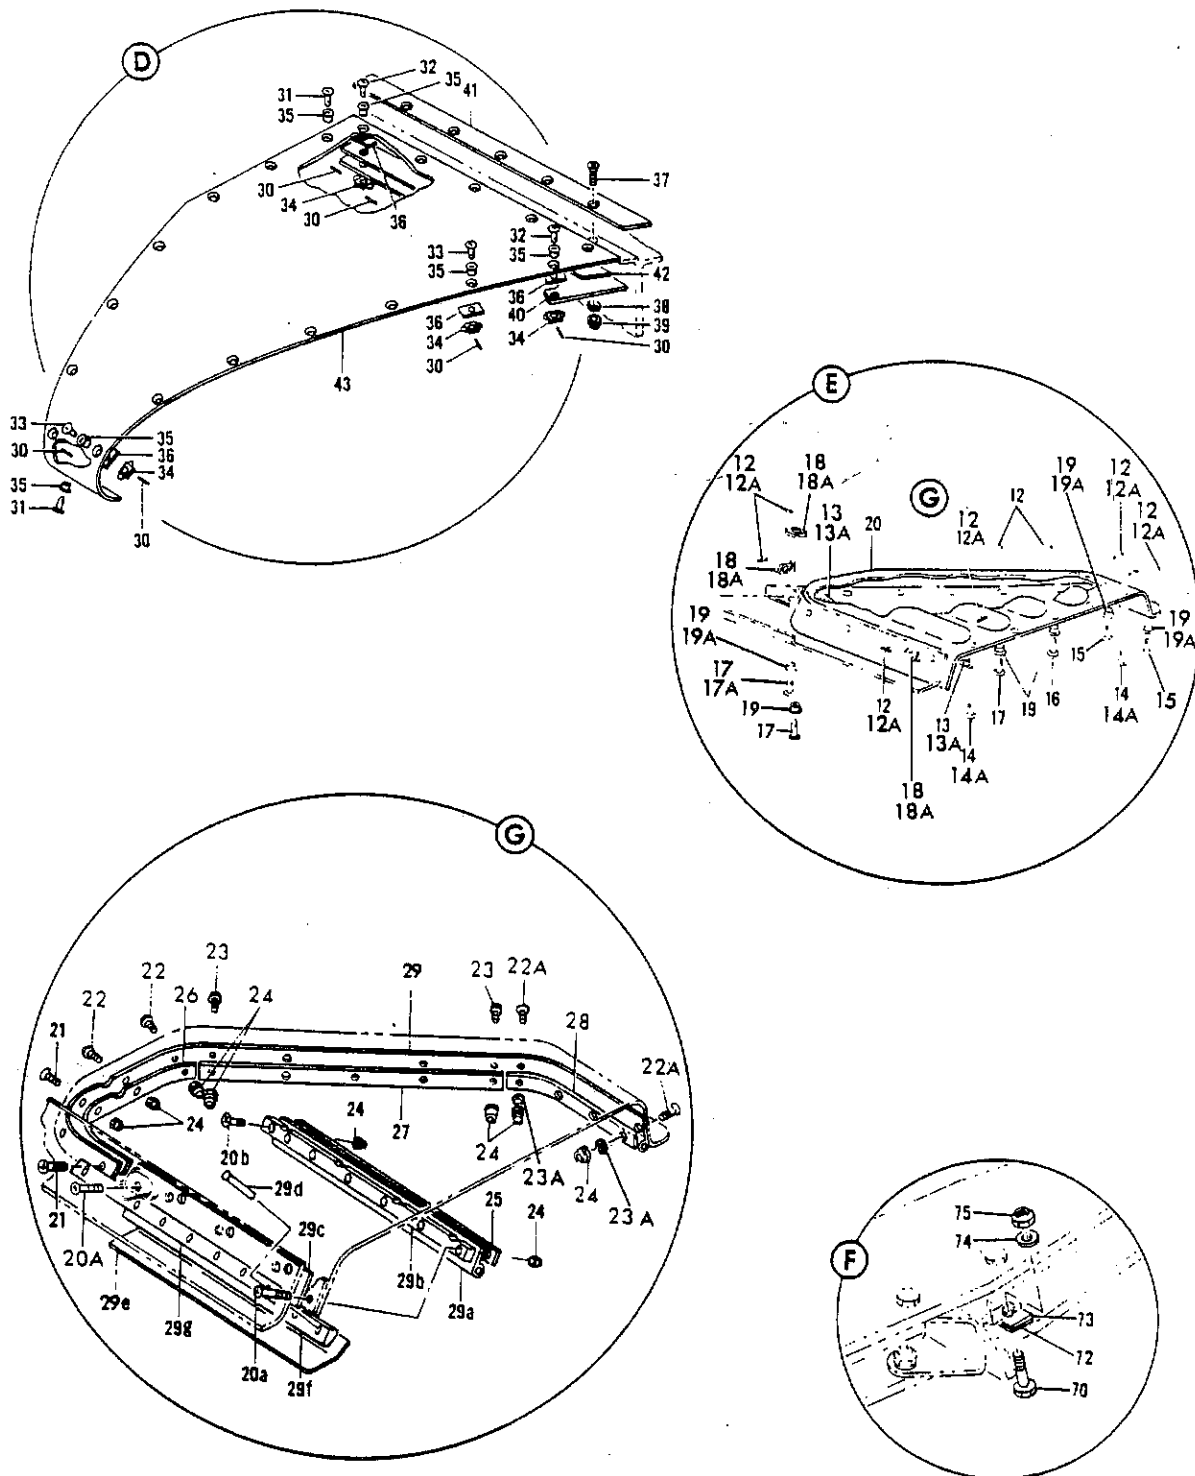


FIGURE 14. COVER INSTL, WING LEADING EDGE INBOARD NACELLE GAP (SHEET 2)

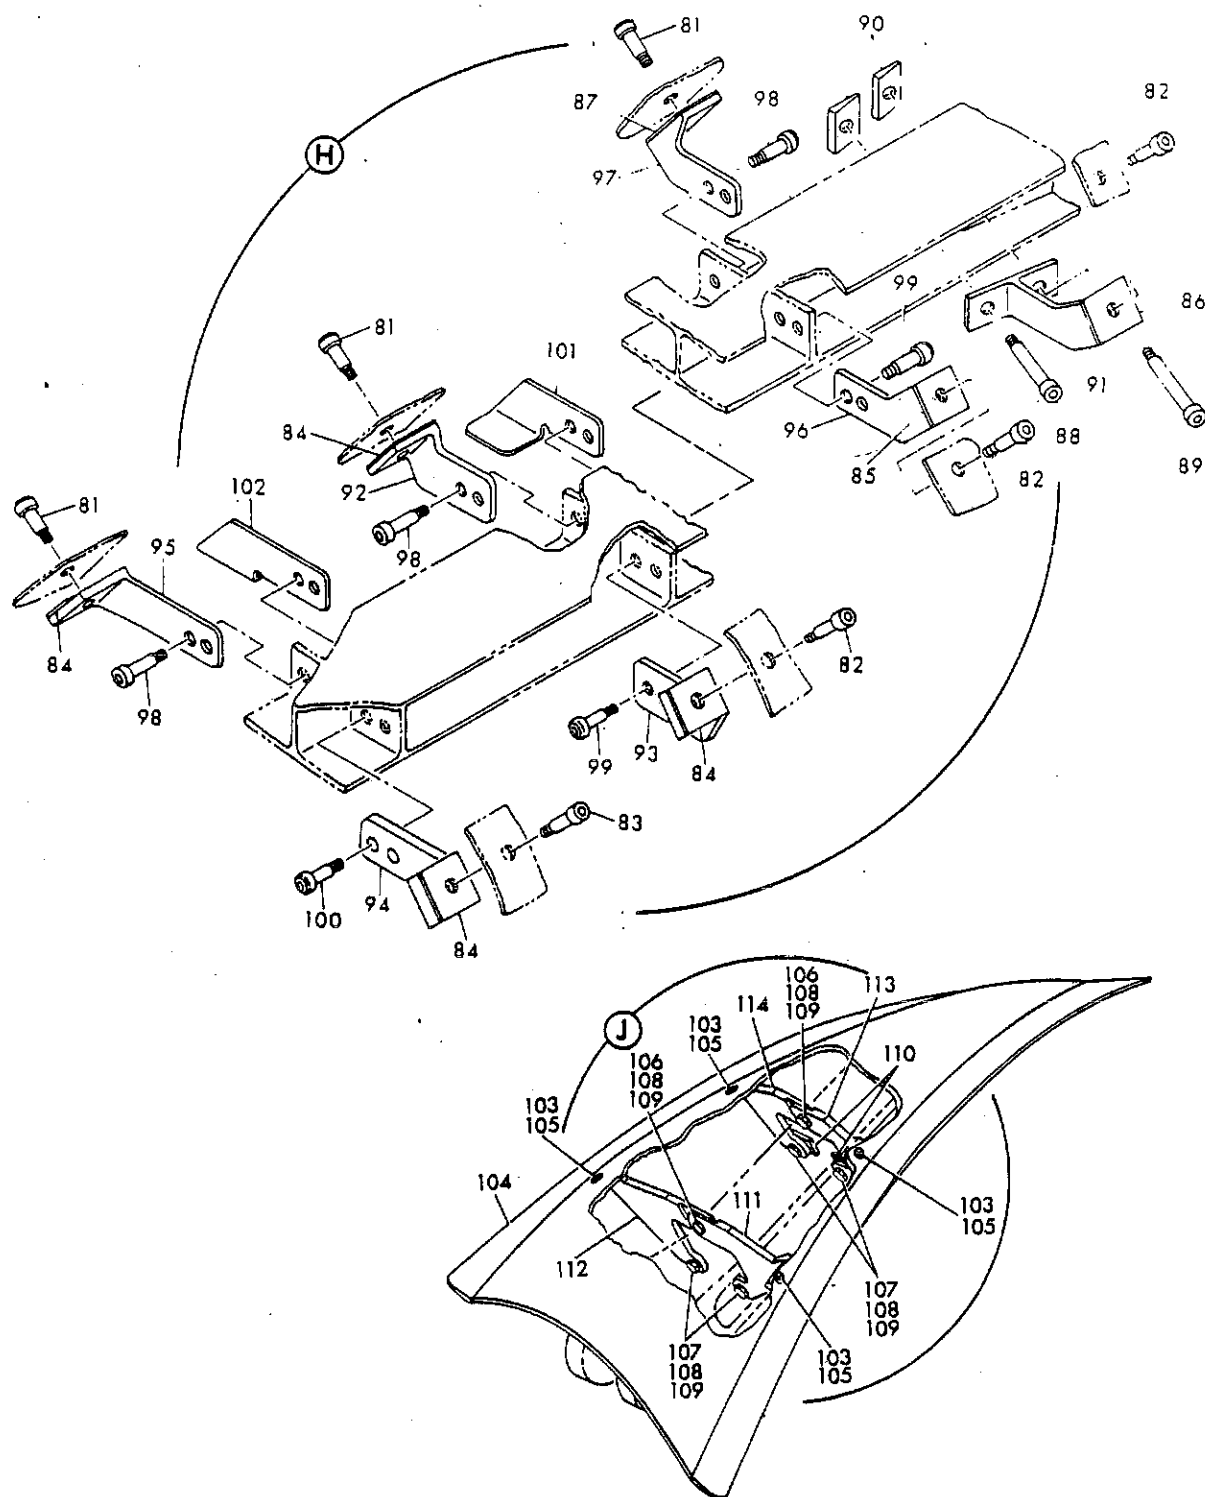


FIGURE 14 COVER INSTL, WING LEADING EDGE INBOARD NACELLE GAP (SHEET 3)

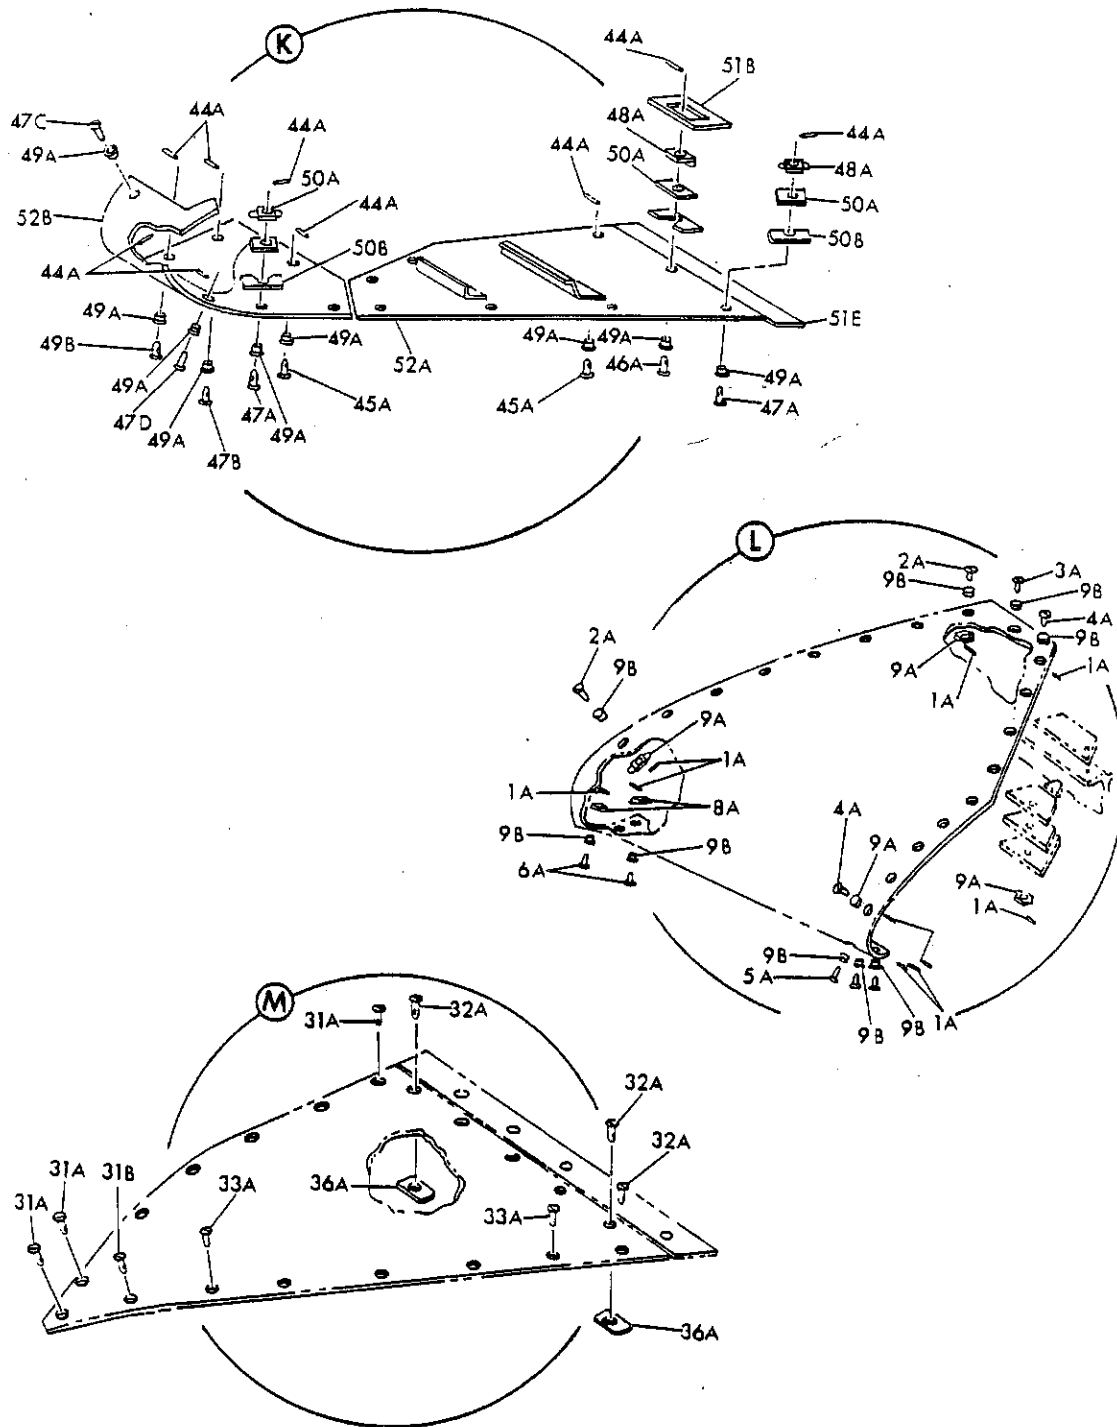


FIGURE 14 COVER INSTL, WING LEADING EDGE INBOARD NACELLE GAP (SHEET 4)

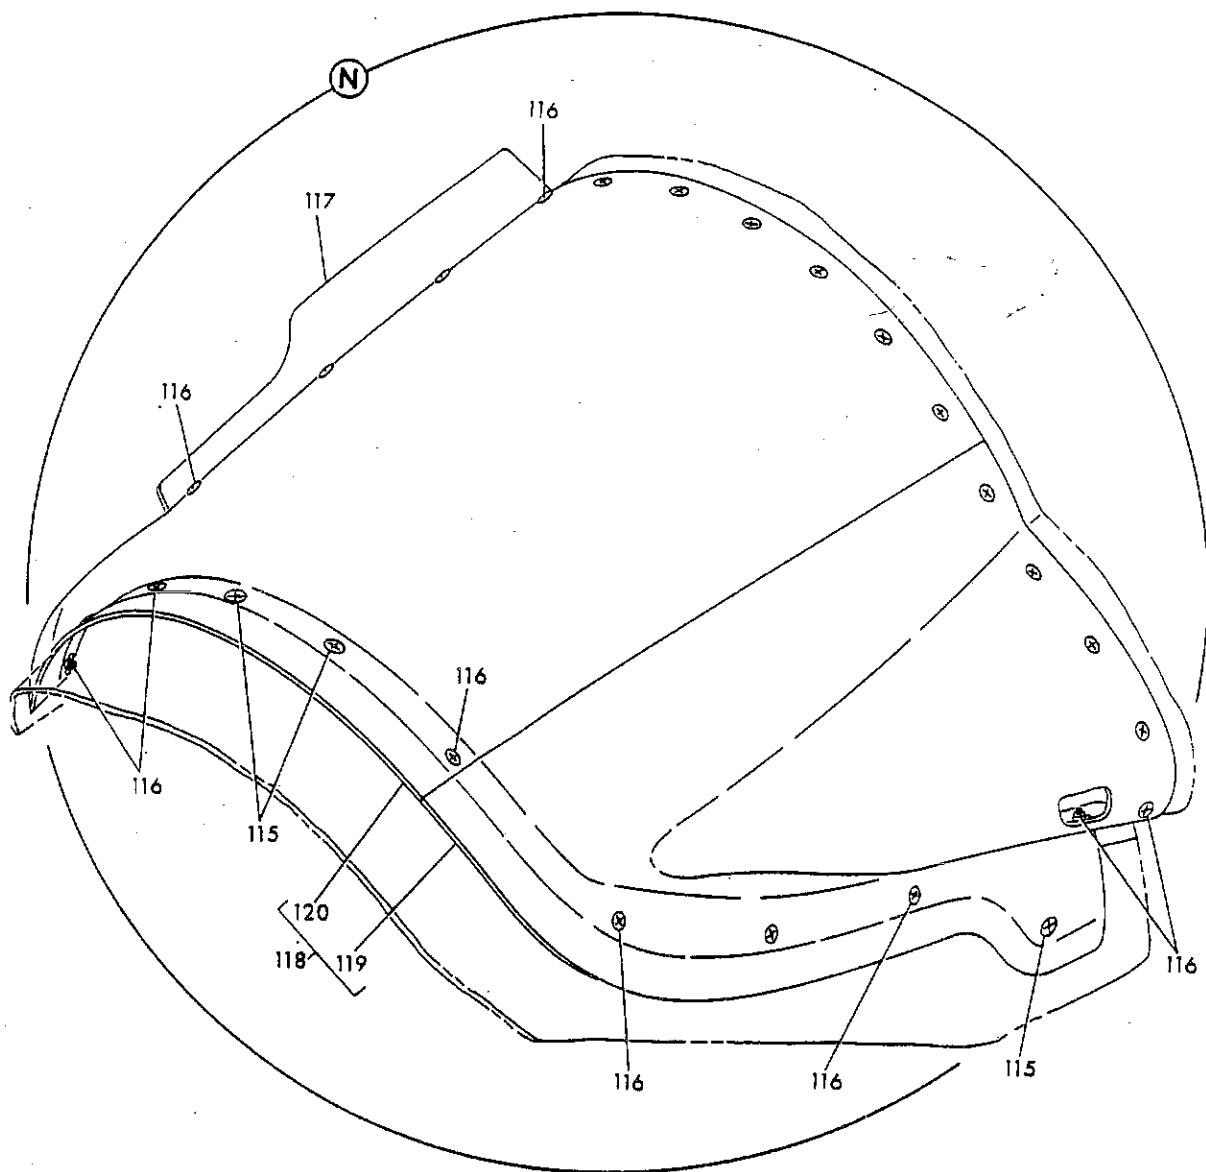


FIGURE 14. COVER INSTL, WING LEADING EDGE INBOARD NACELLE GAP (SHEET 5)

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 14	5-86559-3213	COVER INSTL, WING LEADING EDGE INBOARD NACELLE GAP (LH) (SEE FIG. 7, ITEM 1 AND FIG. 8, ITEM 36)	0151	RF
R	5-86559-3333	COVER INSTL, WING LEADING EDGE INBOARD NACELLE GAP (LH) (SEE FIG. 8, ITEM 36)	5299	RF
R	5-86559-3214	COVER INSTL, WING LEADING EDGE INBOARD NACELLE GAP (RH) (SEE FIG. 7, ITEM 1 AND FIG. 8, ITEM 36)	0151	RF
R	5-86559-3334	COVER INSTL, WING LEADING EDGE INBOARD NACELLE GAP (RH) (SEE FIG. 8, ITEM 36)	5299	RF
R	1	BACP18A5 PIN		23
	2	BACS2185FH27 STUD.		9
	3	BACS2185FH41 STUD.		1
	4	BACS2185FH24 STUD.		9
	5	BACS2185FH31 STUD.		1
	6	BACS2185FH35 STUD.		1
	7	BACS2185FH31 STUD.		1
	8	BACS2185FH32 STUD.		1
	9	BACS20A5P SPRING.		11
	10	BACG20K55A GROMMET		23
	10A	5-86559-3235 PLATE, WING LEADING EDGE INBOARD NACELLE GAP COVER. SPlice		1
	10B	5-86559-3236 FILLER, WING LEADING EDGE INBOARD NACELLE GAP COVER .		1
	10C	5-86559-3237 FILLER, WING LEADING EDGE INBOARD NACELLE GAP COVER .		1
	10D	5-86559-3255 STRIP, WING LEADING EDGE INBOARD NACELLE GAP COVER. RUB		1
	10E	5-86559-3233 FILLER, WING LEADING EDGE INBOARD NACELLE GAP COVER . UPPER OUTBOARD (LH ONLY)		1
	10E	5-86559-3234 FILLER, WING LEADING EDGE INBOARD NACELLE GAP COVER . UPPER OUTBOARD (RH ONLY)		1
	10F	5-86559-3254 STRIP, WING LEADING EDGE INBOARD NACELLE GAP COVER. RUB		1
	11	5-86559-3215 COVER ASSY, WING LEADING EDGE INBOARD NACELLE GAP . . UPPER OUTBOARD (LH ONLY)		1
	11	5-86559-3216 COVER ASSY, WING LEADING EDGE INBOARD NACELLE GAP . . UPPER OUTBOARD (RH ONLY)		1
	12	BACP18A5 PIN		19
	13	BACS2185RH20 STUD.		5
	14	BACS2185FH38 STUD.		5
	15	BACS2185FH29 STUD.		2
	16	BACS2185FH57 STUD.		1
	17	BACS2185FH28 STUD.		6
	18	BACS20A5P SPRING.		6
	19	BACG20K55A GROMMET		9
	20	5-86559-3217 COVER ASSY, WING LEADING EDGE INBOARD NACELLE GAP . . LOWER OUTBOARD (LH ONLY)		1
	20	5-86559-3218 COVER ASSY, WING LEADING EDGE INBOARD NACELLE GAP . . LOWER OUTBOARD (RH ONLY)		1
	20A	NAS517-3-10 SCREW		6
	20B	NAS517-3-7 SCREW		1
	21	NAS517-3-4 SCREW		3
	22	NAS623-3-3W SCREW		2
	22A	NAS517-3-3 SCREW		4
	23	NAS623-3-4W SCREW		5
R	23A	BACW10U810 WASHER.	5299	4
	24	NAS679A3W NUT		21
	25	5-86559-3303 RETAINER, WING LEADING EDGE INBOARD NACELLE GAP COVER SEAL (LH ONLY)		1
	25	5-86559-3304 RETAINER, WING LEADING EDGE INBOARD NACELLE GAP COVER SEAL (RH ONLY)		1
	26	5-86559-3301 RETAINER, WING LEADING EDGE INBOARD NACELLE GAP COVER SEAL (LH ONLY)		1
	26	5-86559-3302 RETAINER, WING LEADING EDGE INBOARD NACELLE GAP COVER SEAL (RH ONLY)		1
	27	5-86559-3307 RETAINER, WING LEADING EDGE INBOARD NACELLE GAP COVER SEAL		1
R	28	5-86559-3331 RETAINER, COVER SEAL (LH ONLY).	0151	1
R	28	5-86559-3330 RETAINER, COVER SEAL (RH ONLY).	0151	1
	29	5-86559-3299 SEAL, WING LEADING EDGE INBOARD NACELLE GAP COVER . . RUBBER (EXTRUSION NO. BAC1530-3 X 47.0 IN. LG) (LH ONLY)		1
	29	5-86559-3300 SEAL, WING LEADING EDGE INBOARD NACELLE GAP COVER . . RUBBER (EXTRUSION NO. BAC1530-3 X 47.0 IN. LG) (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
747
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
14 29A	5-86559-3297	SEAL, WING LEADING EDGE INBOARD NACELLE GAP COVER . RUBBER (EXTRUSION NO. BAC1530-3 X 13.80 IN. LG) (LH ONLY)		1
29A	5-86559-3298	SEAL, WING LEADING EDGE INBOARD NACELLE GAP COVER . RUBBER (EXTRUSION NO. BAC1530-3 X 13.80 IN. LG) (RH ONLY)		1
29B	69-23668-1	FILLER, INBOARD NACELLE GAP COVER (LH ONLY)		1
29B	69-23668-2	FILLER, INBOARD NACELLE GAP COVER (RH ONLY)		1
29C	5-86559-3286	STRIP, WING LEADING EDGE INBOARD NACELLE GAP COVER. RUB		1
29D	BACR15CE50	RIVET		8
29E	69-23669-1	RAMP, INBOARD NACELLE LEADING EDGE SLAT (LH ONLY) . .		1
29E	69-23669-2	RAMP, INBOARD NACELLE LEADING EDGE SLAT (RH ONLY) . .		1
29F	69-23668-3	FILLER, INBOARD NACELLE GAP COVER (LH ONLY)		1
29F	69-23668-4	FILLER, INBOARD NACELLE GAP COVER (RH ONLY)		1
29G	5-86559-3285	BLOCK, WING LEADING EDGE INBOARD NACELLE GAP COVER. TAPERED		1
30	BACP18A5	PIN		20
31	BACS21B5FH21	STUD.		8
32	BACS21B5FH31	STUD.		6
33	BACS21B5FH26	STUD.		6
34	BACS20A5P	SPRING.		12
35	BACG20K55A	GROMMET		20
36	66-24088-1	PLATE, WING LEADING EDGE GAP COVER BEARING.		12
37	BAC830A8P3-6A	BOLT. (OPTIONAL NAS333CPA6-5)		5
37	NAS333CPA6-5	BOLT. (OPTIONAL TO BAC830A8P3-6A)		5
38	AN960PD10L	WASHER.		5
39	NAS679A3W	NUT		5
40	5-86559-3159	PLATE, WING LEADING EDGE INBOARD NACELLE GAP COVER. SPlice (LH ONLY)		1
40	5-86559-3160	PLATE, WING LEADING EDGE INBOARD NACELLE GAP COVER. SPlice (RH ONLY)		1
41	5-86559-3157	PLATE, WING LEADING EDGE INBOARD NACELLE GAP COVER. UPPER INBOARD		1
42	5-86559-3161	FILLER, WING LEADING EDGE INBOARD NACELLE GAP COVER .		1
43	5-86559-3137	DOOR ASSY, WING LEADING EDGE INBOARD NACELLE GAP. . . UPPER INBOARD (LH ONLY)		1
43	5-86559-3138	DOOR ASSY, WING LEADING EDGE INBOARD NACELLE GAP. . . UPPER INBOARD (RH ONLY)		1
44	BACP18A5	PIN		12
45	BACS21B5FH22	STUD.		5
46	BACS21B5FH40	STUD.		2
47	BACS21B5FH30	STUD.		5
48	BACS20A5P	SPRING.		7
49	BACG20K55A	GROMMET		12
50	BACS18X56	SPACER.		7
51	66-24088-2	PLATE, WING LEADING EDGE GAP COVER BEARING.		7
51A	5-86559-3003	STRAP, WING LEADING EDGE INBOARD NACELLE GAP COVER. LOWER		1
51C	5-86559-3004	FILLER, WING LEADING EDGE INBOARD NACELLE GAP COVER .		2
51D	5-86559-3203	STRAP, WING LEADING EDGE INBOARD NACELLE GAP COVER. LOWER (LH ONLY)		1
51D	5-86559-3204	STRAP, WING LEADING EDGE INBOARD NACELLE GAP COVER. LOWER (RH ONLY)		1
52	5-86559-3141	DOOR ASSY, WING LEADING EDGE INBOARD NACELLE GAP. . . LOWER INBOARD (LH ONLY)		1
52	5-86559-3142	DOOR ASSY, WING LEADING EDGE INBOARD NACELLE GAP. . . LOWER INBOARD (RH ONLY)		1
53	NAS517-3-2	SCREW		6
54	NAS517-3-3	SCREW		2
55	NAS517-4-4	SCREW		7
56	5-86559-3241	FAIRING ASSY, WING LEADING EDGE INBOARD NACELLE GAP COVER (LH ONLY)		1
56	5-86559-3242	FAIRING ASSY, WING LEADING EDGE INBOARD NACELLE GAP COVER (RH ONLY)		1
57	5-86559-3243	ANGLE, WING LEADING EDGE INBOARD NACELLE GAP COVER UPPER OUTBOARD (LH ONLY)		1
57	5-86559-3244	ANGLE, WING LEADING EDGE INBOARD NACELLE GAP COVER UPPER OUTBOARD (RH ONLY)		1
58	5-86559-2017	ANGLE, WING LEADING EDGE INBOARD NACELLE GAP COVER. CHORD (LH ONLY)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE					EFF FROM TO	UNITS PER ASSY		
			1	2	3	4	5	6	7		
R	14	58	5-86559-2018 . ANGLE, WING LEADING EDGE INBOARD NACELLE GAP COVER. .							0150	1
R			CHORD (RH ONLY)								
R		59	. CLIP ASSY, INBOARD STRUT FAIRING (LH ONLY).							0150	1
R		59	. CLIP ASSY, INBOARD STRUT FAIRING (RH ONLY).							0150	1
R		60	. CLIP ASSY, INBOARD STRUT FAIRING (LH ONLY).							0150	1
R		60	. CLIP ASSY, INBOARD STRUT FAIRING (RH ONLY).							0150	1
R		61	. CLIP ASSY, INBOARD STRUT FAIRING (LH ONLY).							0150	1
R		61	. CLIP ASSY, INBOARD STRUT FAIRING (RH ONLY).							0150	1
R			ATTACHING PARTS								
R		NAS1104-4W	. BOLT.							0150	12
R		AN960PD416	. WASHER.							0150	12
R		NAS679A4W	. NUT							0150	12
R			-----*								
R		62	. CLIP ASSY, INBOARD STRUT FAIRING (LH ONLY).							0150	1
R		62	. CLIP ASSY, INBOARD STRUT FAIRING (RH ONLY).							0150	1
R			ATTACHING PARTS								
R		NAS1103-4W	. BOLT.							0150	4
R		AN960PD10	. WASHER.							0150	4
R		NAS679A3W	. NUT							0150	4
R			-----*								
R		63	. CLIP C, WING LEADING EDGE INBOARD STRUT TO FAIRING. .							0150	3
R		64	. CLIP C, WING LEADING EDGE INBOARD STRUT TO FAIRING. .							0150	3
R			ATTACHING PARTS								
R		NAS1104-7W	. BOLT.							0150	6
R		NAS1104-11W	. BOLT.							0150	6
R		BACS40B18-20	. SHIM.							0150	AR
R		BACS40A18-20	. SHIM.							0150	AR
R		AN960PD416	. WASHER.							0150	12
R		NAS679A4W	. NUT							0150	12
R			-----*								
R		65A	. SHIM.							0150	2
R		65B	. STRIP, WING LEADING EDGE INBOARD NACELLE GAP COVER. .							0150	14
R			RUB								
R		66	. CLIP ASSY, INBOARD STRUT FAIRING (LH ONLY).							0150	1
R		66	. CLIP ASSY, INBOARD STRUT FAIRING (RH ONLY).							0150	1
R		67	. CLIP ASSY, INBOARD STRUT FAIRING (LH ONLY).							0150	1
R		67	. CLIP ASSY, INBOARD STRUT FAIRING (RH ONLY).							0150	1
R			ATTACHING PARTS								
R		68	. BOLT.							0150	2
R		69	. BOLT.							0150	1
R		70	. BOLT.							0150	1
R		71	. SHIM.							0150	AR
R		71	. SHIM.							0150	AR
R		72	. SHIM.							0150	AR
R		72	. SHIM.							0150	AR
R		73	. FILLER, WING LEADING EDGE INBOARD NACELLE GAP COVER. .							0150	1
R			TAPERED (USED WITH 69-16206-19, -20, -23 AND -24)								
R		74	. WASHER.							0150	4
R		75	. NUT							0150	4
R			-----*								
R		75A	. STRIP, WING LEADING EDGE INBOARD NACELLE GAP COVER. .							0150	4
R			RUB								
R		76A	. CLIP J, WING LEADING EDGE INBOARD STRUT TO FAIRING. .							0150	1
R		77A	. CLIP H, WING LEADING EDGE INBOARD STRUT TO FAIRING. .							0150	1
R		78A	. CLIP G, WING LEADING EDGE INBOARD STRUT TO FAIRING. .							0150	1
R			(LH ONLY)								
R		78A	. CLIP G, WING LEADING EDGE INBOARD STRUT TO FAIRING. .							0150	1
R			(RH ONLY)								
R			ATTACHING PARTS								
R		NAS1103-10W	. BOLT.							0150	2
R		BAC830AN6-6	. BOLT.							0150	7
R		BAC830AN6-7	. BOLT.							0150	6
R		BAC830AN6-9	. BOLT.							0150	3
R		AN960PD10	. WASHER.							0150	2
R		BACS40B13-48	. SHIM, (AFFECTED BY AD 64-16-2).							0150	AR
R		BACS40A13-48	. SHIM, (AFFECTED BY AD 64-16-2).							0150	AR
R		NAS679A3W	. NUT								2
R			-----*								
R		78B	. STRIP, WING LEADING EDGE INBOARD NACELLE GAP COVER. .							0150	6
R			RUB								
R		79	. BRACKET, WING BUTTOCK LINE 315 WATER INJECTION (LH. .							0150	1
R			ONLY)								
R		79	. BRACKET, WING BUTTOCK LINE 315 WATER INJECTION (RH. .							0150	1
R			ONLY)								

MISSING ITEM NUMBERS ARE NOT APPLICABLE

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	14	80	69-15930-12	.	FILLER, FAN ENGINE WATER INJECTION LINE BRACKET	.	.	.	.	0150	2
R		81	BAC830LU4-6	.	BOLT.	.	.	.	.	5299	3
R		82	BAC830LU4-7	.	BOLT.	.	.	.	.	5299	3
R		83	BAC830LU4-10	.	BOLT.	.	.	.	.	5299	1
R		84	BACS40R12B13F	.	SHIM.	.	.	.	.	5299	4
R		85	BACS40R12B12F	.	SHIM.	.	.	.	.	5299	1
R		86	BACS40R12C17F	.	SHIM.	.	.	.	.	5299	1
R		87	BACS40R12B17F	.	SHIM.	.	.	.	.	5299	1
R		88	BAC830M88-22	.	BOLT.	.	.	.	.	5299	1
R		89	BAC830M88-28	.	BOLT.	.	.	.	.	5299	1
R		90	204-30786-15	.	FILLER.	.	.	.	.	5299	2
R		91	204-30786-13	.	CLIP, (LH ONLY)	.	.	.	.	5299	1
R		91	204-30786-14	.	CLIP, (RH ONLY)	.	.	.	.	5299	1
R		92	204-30786-1	.	CLIP, (LH ONLY)	.	.	.	.	5299	1
R		92	204-30786-2	.	CLIP, (RH ONLY)	.	.	.	.	5299	1
R		93	204-30786-3	.	CLIP, (LH ONLY)	.	.	.	.	5299	1
R		93	204-30786-4	.	CLIP, (RH ONLY)	.	.	.	.	5299	1
R		94	204-30786-5	.	CLIP, (LH ONLY)	.	.	.	.	5299	1
R		94	204-30786-6	.	CLIP, (RH ONLY)	.	.	.	.	5299	1
R		95	204-30786-7	.	CLIP, (LH ONLY)	.	.	.	.	5299	1
R		95	204-30786-8	.	CLIP, (RH ONLY)	.	.	.	.	5299	1
R		96	204-30786-9	.	CLIP, (LH ONLY)	.	.	.	.	5299	1
R		96	204-30786-10	.	CLIP, (RH ONLY)	.	.	.	.	5299	1
R		97	204-30786-11	.	CLIP, (LH ONLY)	.	.	.	.	5299	1
R		97	204-30786-12	.	CLIP, (RH ONLY)	.	.	.	.	5299	1
			ATTACHING PARTS								
R		98	BAC830FM8-7	.	BOLT.	.	.	.	.	5299	6
R		99	BAC830FM8-8	.	BOLT.	.	.	.	.	5299	4
R		100	BAC830FM10-11	.	BOLT.	.	.	.	.	5299	2
			-----*								
R		101	204-53233-10	.	BRACKET	.	.	.	.	5299	1
R		102	204-53233-13	.	BRACKET	.	.	.	.	5299	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

MISSING ITEM NUMBERS ARE NOT APPLICABLE

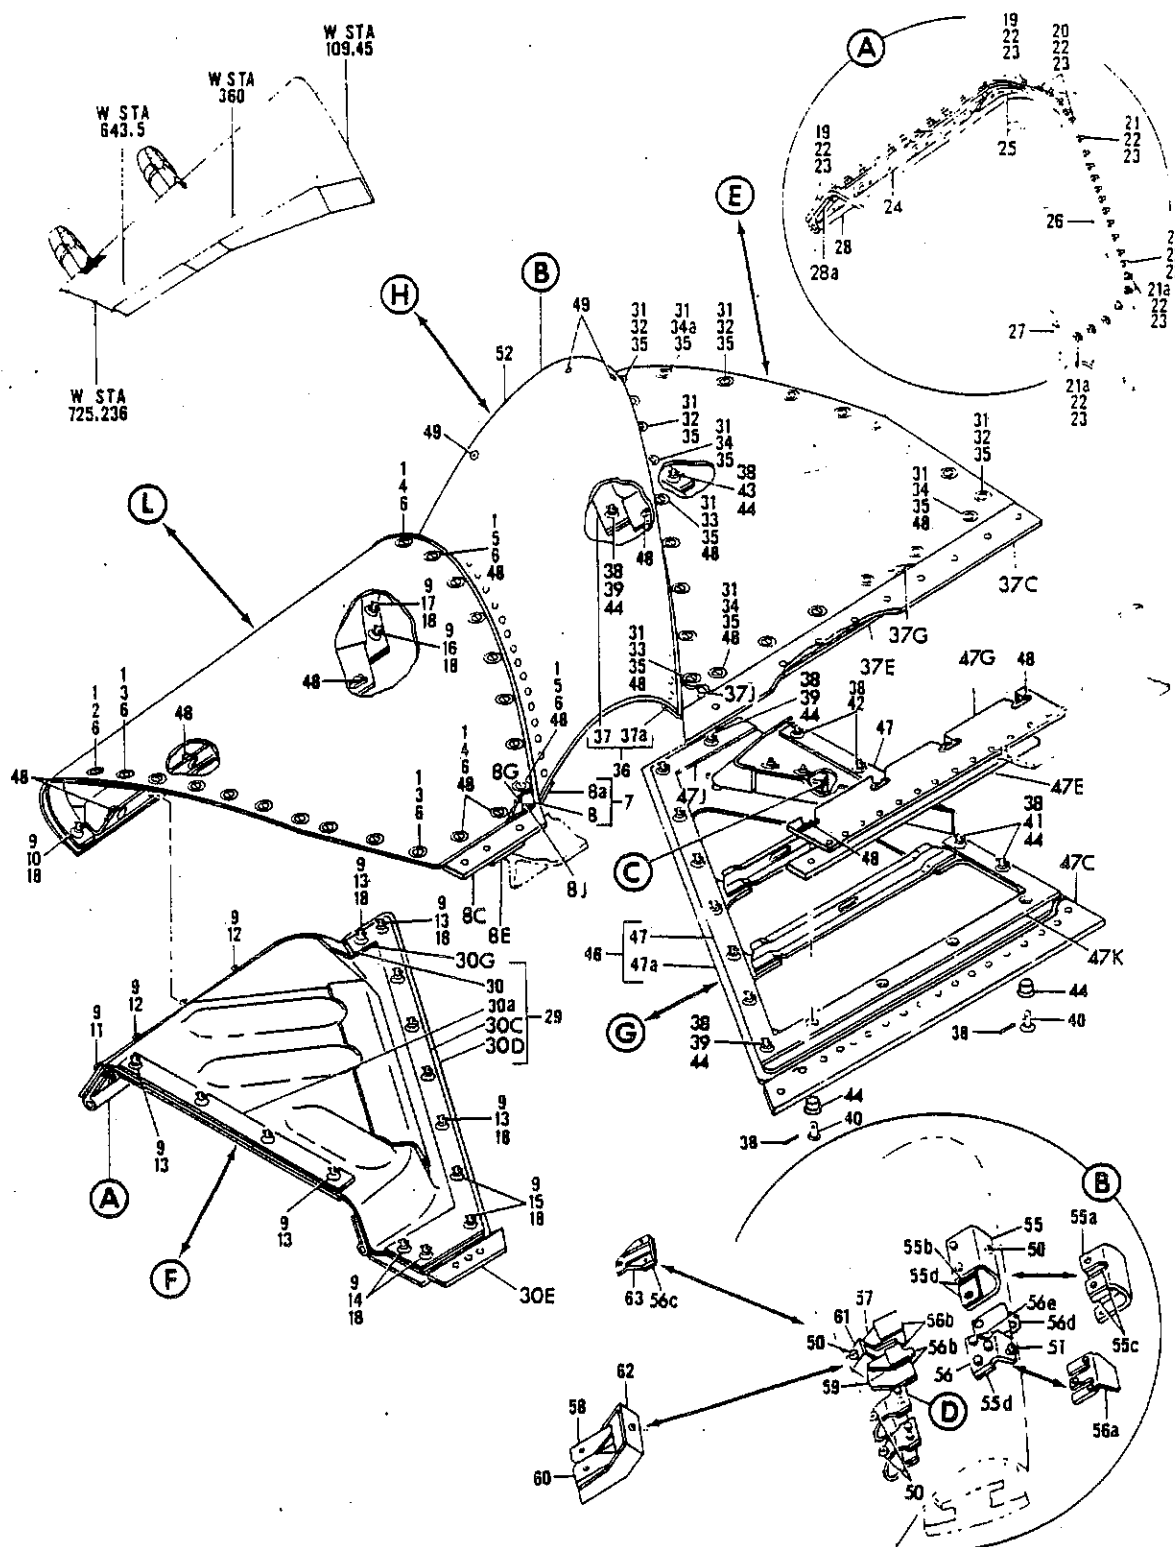


FIGURE 17. COVE INSTL. FRONT SPAR STATION 666.14 TO 710.06
WING LEADING EDGE OUTBOARD NACELLE GAP (SHEET 1)

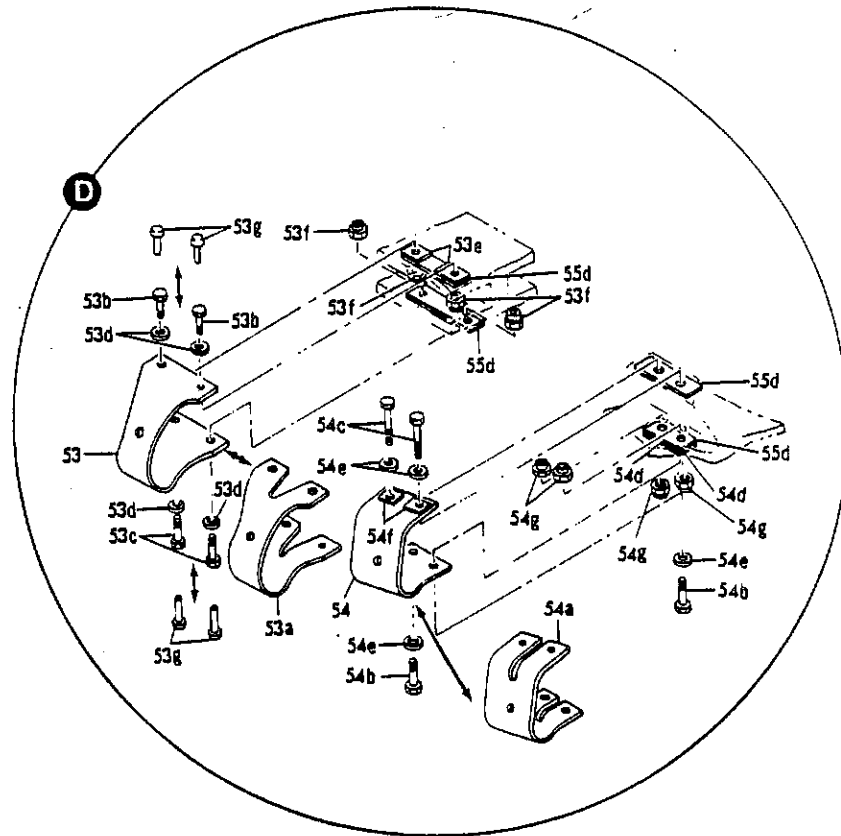
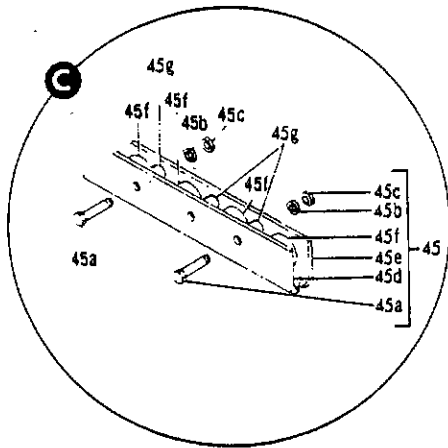


FIGURE 17. COVER INSTL. FRONT SPAR STATION 666.14 TO 710.06
WING LEADING EDGE OUTBOARD NACELLE GAP (SHEET 2)

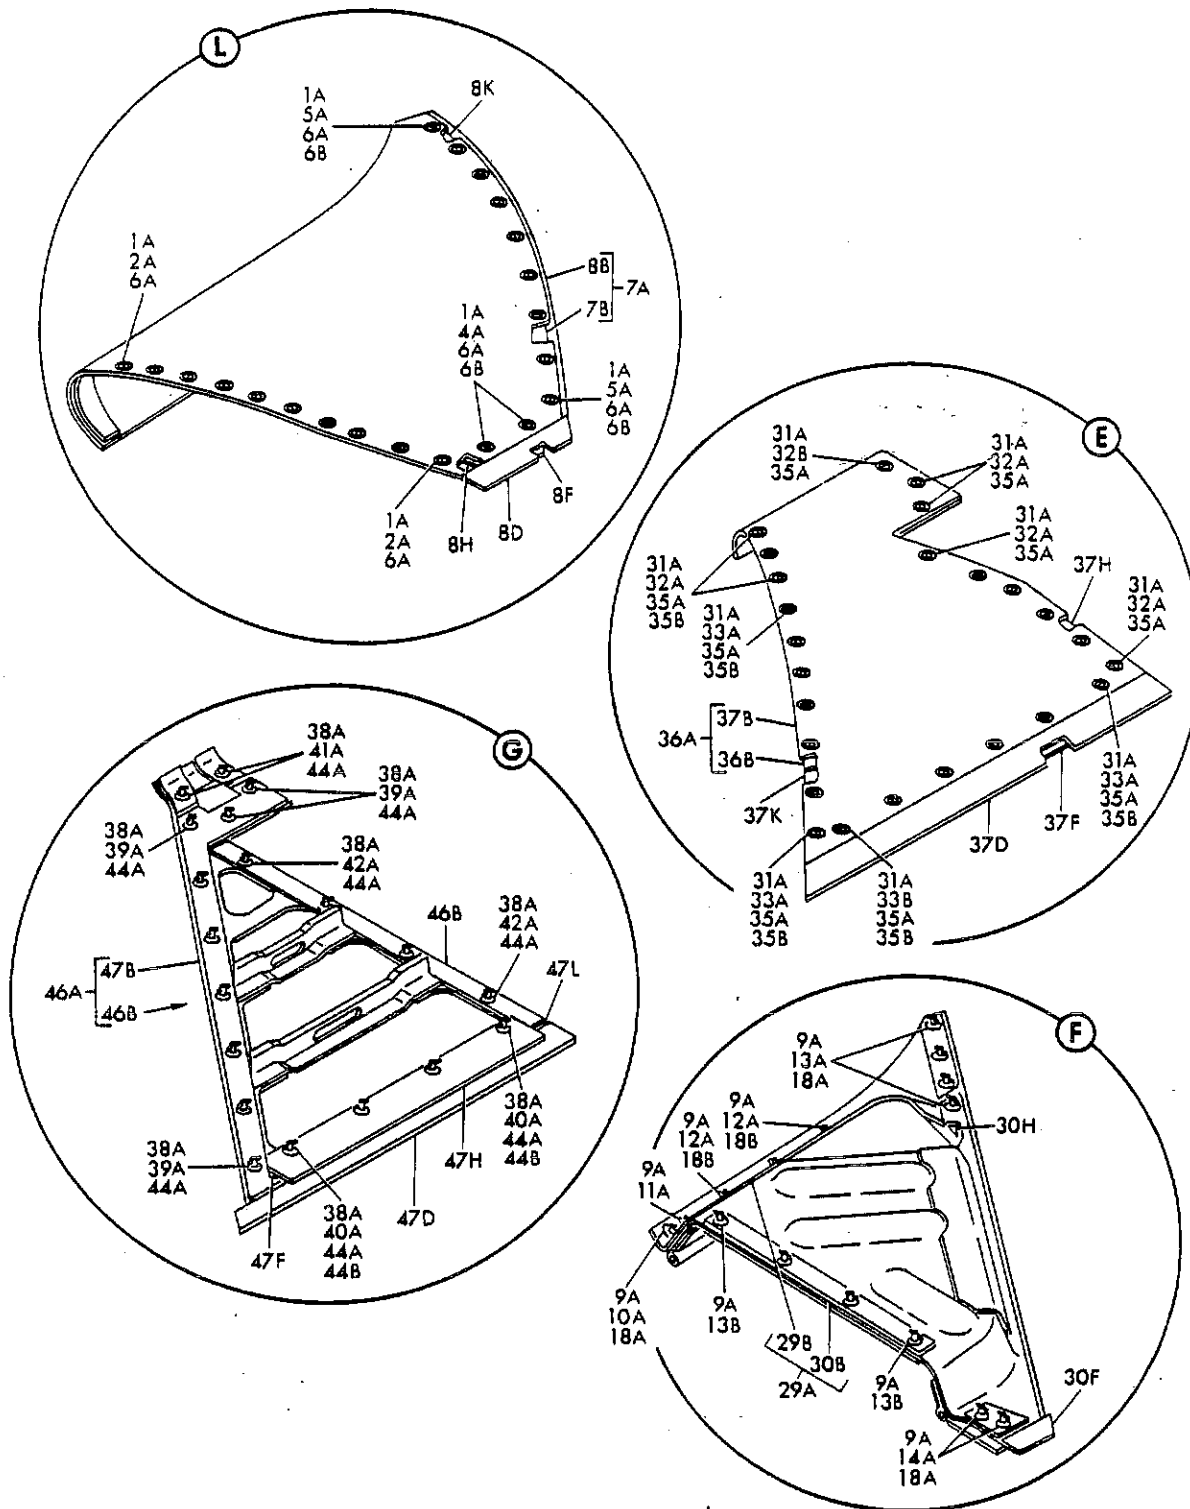


FIGURE 17. COVER INSTL, FRONT SPAR STATION 666, 14 TO 710.06 WING LEADING EDGE OUTBOARD NACELLE GAP (SHEET 3)

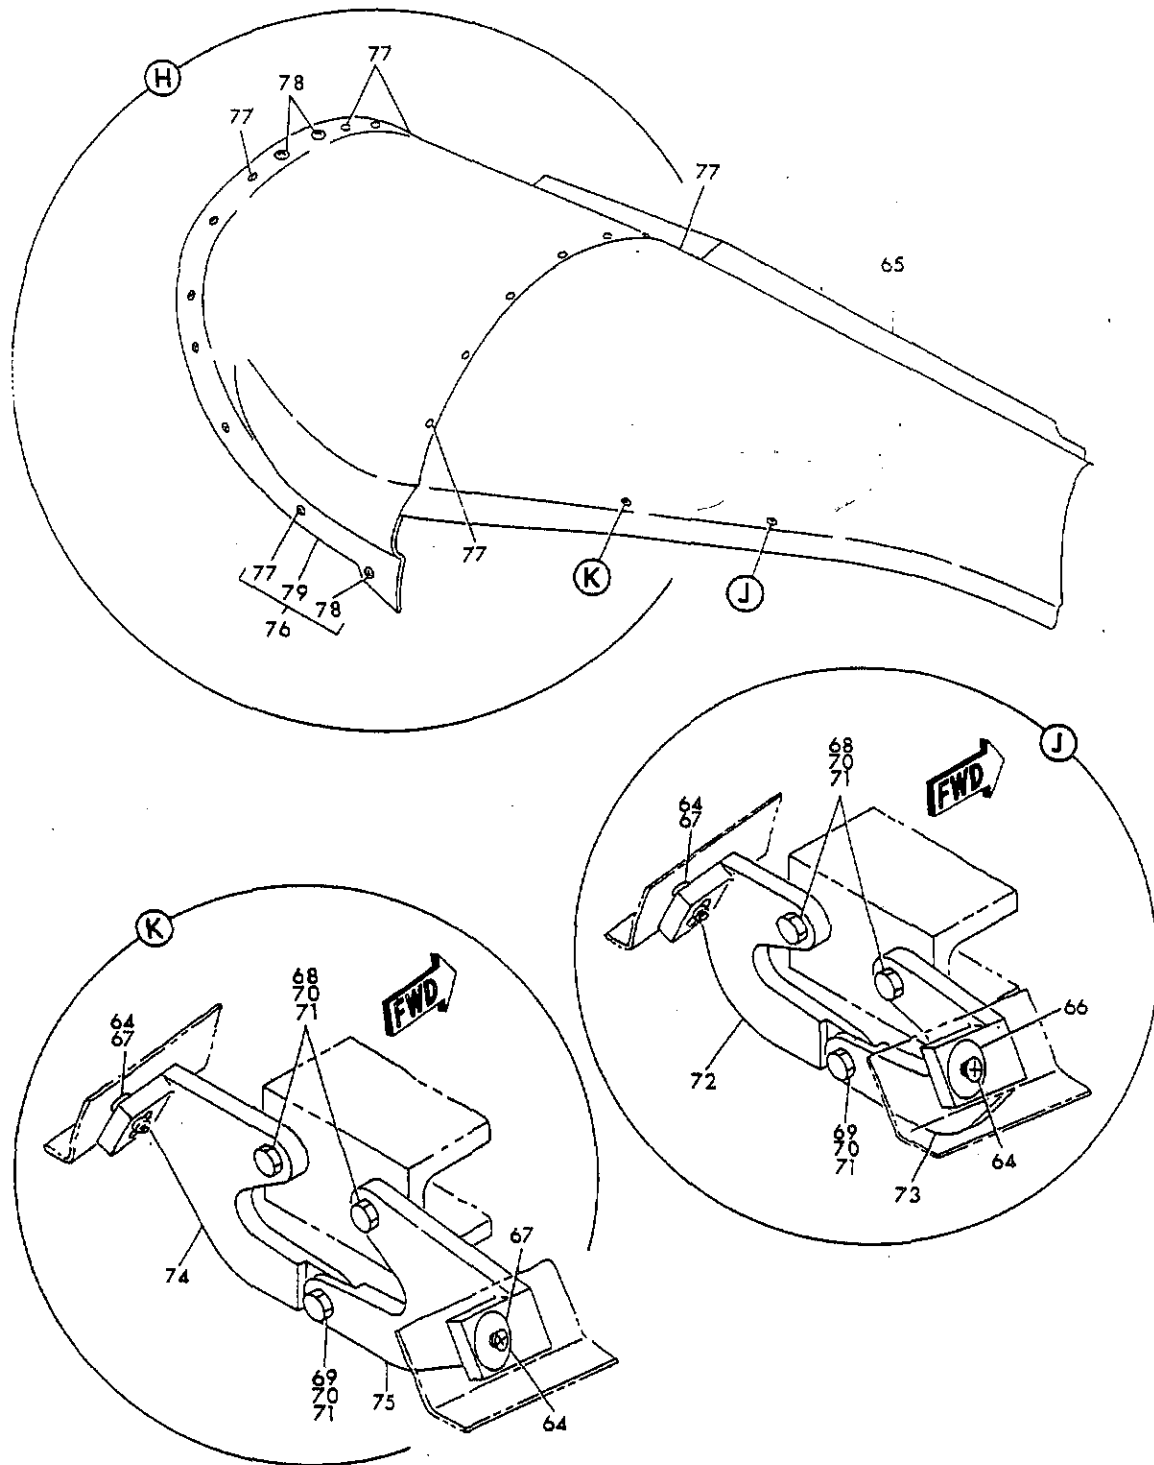


FIGURE 17. COVER INSTL, FRONT SPAR STATION 666.14 TO 710.06 WING LEADING EDGE OUTBOARD NACELLE GAP (SHEET 4)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
17	65-18182-1		COVER INSTL, FRONT SPAR STATION 666.14 TO 710.06 WING . LEADING EDGE OUTBOARD NACELLE GAP (LH) (SEE FIG. 8, ITEM 29 AND FIG. 7, ITEM 2)	0150	RF
	65-18182-1		COVER INSTL, FRONT SPAR STATION 666.14 TO 710.06 WING . LEADING EDGE OUTBOARD NACELLE GAP (LH) (VARIABLE DWG;65-18182-5001) (SEE FIG. 8, ITEM 29 AND FIG. 7, ITEM 2)	5199	RF
	65-18182-2		COVER INSTL, FRONT SPAR STATION 666.14 TO 710.06 WING . LEADING EDGE OUTBOARD NACELLE GAP (RH) (SEE FIG. 8, ITEM 29 AND FIG. 7, ITEM 2)	0150	RF
	65-18182-2		COVER INSTL, FRONT SPAR STATION 666.14 TO 710.06 WING . LEADING EDGE OUTBOARD NACELLE GAP (RH) (VARIABLE DWG;65-18182-5002) (SEE FIG. 8, ITEM 29 AND FIG. 7, ITEM 2)	5199	RF
1	BACPI8A5		. PIN		20
2	BACS21B5FH25		. STUD.		1
3	BACS21B5FH24		. STUD.		9
4	BACS21B5FH34		. STUD.		3
5	BACS21B5FH27		. STUD.		7
6	BACG20K55A		. GROMMET		20
7	65-18182-145		. COVER ASSY, FRONT SPAR STATION 666.14 TO 710.06 WING LEADING EDGE OUTBOARD NACELLE GAP UPPER OUTBOARD (LH ONLY)		1
7	65-18182-146		. COVER ASSY, FRONT SPAR STATION 666.14 TO 710.06 WING LEADING EDGE OUTBOARD NACELLE GAP UPPER OUTBOARD (RH ONLY)		1
8	65-18182-68		. . STRIP, FRONT SPAR STATION 666.14 TO 710.06 WING . . LEADING EDGE OUTBOARD NACELLE GAP UPPER OUTBOARD COVER RUB		AR
8A	65-18182-147		. . SPOTWELD ASSY, FRONT SPAR STATION 666.14 TO 710.06 WING LEADING EDGE OUTBOARD NACELLE GAP UPPER OUTBOARD COVER (LH ONLY)		1
8A	65-18182-148		. . SPOTWELD ASSY, FRONT SPAR STATION 666.14 TO 710.06 WING LEADING EDGE OUTBOARD NACELLE GAP UPPER OUTBOARD COVER (RH ONLY)		1
8C	65-18182-73		. PLATE, FRONT SPAR STATION 666.14 TO 710.06 WING . . . LEADING EDGE OUTBOARD NACELLE GAP COVER UPPER OUTBOARD (LH ONLY)		1
8C	65-18182-74		. PLATE, FRONT SPAR STATION 666.14 TO 710.06 WING . . . LEADING EDGE OUTBOARD NACELLE GAP COVER UPPER OUTBOARD (RH ONLY)		1
	BACB30FN6		ATTACHING PARTS		
	BACC30M6		. BOLT.		2
			. COLLAR.		2
8E	65-18182-81		. PLATE, FRONT SPAR STATION 666.14 TO 710.06 WING . . . LEADING EDGE OUTBOARD NACELLE GAP COVER UPPER OUTBOARD SPLICE (LH ONLY)		1
8E	65-18182-82		. PLATE, FRONT SPAR STATION 666.14 TO 710.06 WING . . . LEADING EDGE OUTBOARD NACELLE GAP COVER UPPER OUTBOARD SPLICE (RH ONLY)		1
8G	65-18182-96		. STRIP, FRONT SPAR STATION 666.14 TO 710.06 WING . . . LEADING EDGE OUTBOARD NACELLE GAP UPPER OUTBOARD COVER RUB		1
8J	65-18182-102		. STRIP, FRONT SPAR STATION 666.14 TO 710.06 WING . . . LEADING EDGE OUTBOARD NACELLE GAP UPPER OUTBOARD COVER RUB		1
9	BACPI8A5		. PIN		21
10	BACS21B5FH32		. STUD.		1
11	BACS21B5RH18		. STUD.		1
12	BACS21B5RH20		. STUD.		3
13	BACS21B5FH25		. STUD.		10
14	BACS21B5FH23		. STUD.		2
15	BACS21B5FH52		. STUD.		2
16	BACS21B5FH30		. STUD.		1
17	BACS21B5FH24		. STUD.		1
18	BACG20K55A		. GROMMET		13
19	NAS517-3-6		. SCREW		16
20	NAS623-3-4W		. SCREW		5
21	NAS623-3-5W		. SCREW		11
21A	NAS517-3-3		. SCREW		6
22	AN960PD10		. WASHER.		38
23	NAS679A3W		. NUT		38
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
17 24	65-18182-170	.	RETAINER, FRONT SPAR STATION 666.14 TO 710.06 WING. .		1
25	65-18182-171	.	LEADING EDGE OUTBOARD NACELLE GAP COVER SEAL		1
25	65-18182-172	.	RETAINER, FRONT SPAR STATION 666.14 TO 710.06 WING. .		1
26	65-18182-169	.	LEADING EDGE OUTBOARD NACELLE GAP COVER SEAL (LH ONLY)		1
27	65-18182-167	.	RETAINER, FRONT SPAR STATION 666.14 TO 710.06 WING. .		1
27	65-18182-168	.	LEADING EDGE OUTBOARD NACELLE GAP COVER SEAL (RH ONLY)		1
28	65-18182-165	.	RETAINER, FRONT SPAR STATION 666.14 TO 710.06 WING. .		1
28	65-18182-166	.	LEADING EDGE OUTBOARD NACELLE GAP COVER SEAL (LH ONLY)		1
28A	65-18182-100	.	RETAINER, FRONT SPAR STATION 666.14 TO 710.06 WING. .		1
29	65-18182-9	.	LEADING EDGE OUTBOARD NACELLE GAP COVER SEAL (RH ONLY)		1
29	65-18182-10	.	SEAL, FRONT SPAR STATION 666.14 TO 710.06 WING. . . .		1
30	65-18182-140	.	LEADING EDGE OUTBOARD NACELLE GAP COVER (EXTRUSION NO. BAC1530-3 X 40.0 IN LG) (LH ONLY)		1
30A	65-18182-141	.	SEAL, FRONT SPAR STATION 666.14 TO 710.06 WING. . . .		1
30C	65-18182-142	.	LEADING EDGE OUTBOARD NACELLE GAP COVER (EXTRUSION NO. BAC1530-3 X 40.0 IN. LG) (RH ONLY)		1
30D	65-18182-17	.	STRIP, FRONT SPAR STATION 666.14 TO 710.06 WING. . . .		1
30D	65-18182-18	.	LEADING EDGE OUTBOARD NACELLE GAP LOWER OUTBOARD COVER RUB		1
30E	65-18182-77	.	STRIP, FRONT SPAR STATION 666.14 TO 710.06 WING. . . .		1
30E	65-18182-78	.	LEADING EDGE OUTBOARD NACELLE GAP LOWER OUTBOARD COVER RUB		1
	MS2042605	.	STRIP, FRONT SPAR STATION 666.14 TO 710.06 WING. . . .		1
30G	65-18182-99	.	LEADING EDGE OUTBOARD NACELLE GAP LOWER OUTBOARD COVER RUB		1
31	BACP18A5	.	BONDED ASSY, FRONT SPAR STATION 666.14 TO 710.06. .		23
32	BACS2185FH24	.	WING LEADING EDGE OUTBOARD NACELLE GAP LOWER OUTBOARD COVER (LH ONLY)		10
33	BACS2185FH27	.	BONDED ASSY, FRONT SPAR STATION 666.14 TO 710.06. .		5
34	BACS2185FH34	.	WING LEADING EDGE OUTBOARD NACELLE GAP LOWER OUTBOARD COVER (RH ONLY)		7
34A	BACS2185FH25	.	PLATE, FRONT SPAR STATION 666.14 TO 710.06 WING. . . .		1
35	BACG20K55A	.	LEADING EDGE OUTBOARD NACELLE GAP COVER LOWER OUTBOARD (LH ONLY)		1
36	65-18182-3	.	PLATE, FRONT SPAR STATION 666.14 TO 710.06 WING. . . .		23
		.	LEADING EDGE OUTBOARD NACELLE GAP COVER LOWER OUTBOARD (RH ONLY)		1
		.	ATTACHING PARTS		
		.	RIVET		3
		.	-----		
		.	STRIP, FRONT SPAR STATION 666.14 TO 710.06 WING. . . .		1
		.	LEADING EDGE OUTBOARD NACELLE GAP LOWER OUTBOARD COVER RUB		
		.	PIN		
		.	STUD.		
		.	STUD.		
		.	STUD.		
		.	STUD.		
		.	STUD.		
		.	GROMMET		
		.	COVER ASSY, FRONT SPAR STATION 666.14 TO 710.06 WING		
		.	LEADING EDGE OUTBOARD NACELLE GAP UPPER INBOARD (LH ONLY)		
		.	COVER ASSY, FRONT SPAR STATION 666.14 TO 710.06 WING		
		.	LEADING EDGE OUTBOARD NACELLE GAP UPPER INBOARD (RH ONLY)		
		.	STRIP, FRONT SPAR STATION 666.14 TO 710.06 WING. . .		AR
		.	LEADING EDGE OUTBOARD NACELLE GAP UPPER INBOARD COVER RUB		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
17 37A	65-18182-11	.	SPOTWELD ASSY, FRONT SPAR STATION 666.14 TO 710.06 WING LEADING EDGE OUTBOARD NACELLE GAP UPPER INBOARD COVER (LH ONLY)		1
37A	65-18182-12	.	SPOTWELD ASSY, FRONT SPAR STATION 666.14 TO 710.06 WING LEADING EDGE OUTBOARD NACELLE GAP UPPER INBOARD COVER (RH ONLY)		1
37C	65-18182-71	.	PLATE, FRONT SPAR STATION 666.14 TO 710.06 WING LEADING EDGE OUTBOARD NACELLE GAP COVER UPPER INBOARD (LH ONLY)		1
37C	65-18182-72	.	PLATE, FRONT SPAR STATION 666.14 TO 710.06 WING LEADING EDGE OUTBOARD NACELLE GAP COVER UPPER INBOARD (RH ONLY)		1
	BACB30FN6	.	ATTACHING PARTS		9
	BACC30M6	.	BOLT.		9
		.	COLLAR.		
37E	65-18182-79	.	PLATE, FRONT SPAR STATION 666.14 TO 710.06 WING LEADING EDGE OUTBOARD NACELLE GAP COVER UPPER INBOARD SPLICE (LH ONLY)		1
37E	65-18182-80	.	PLATE, FRONT SPAR STATION 666.14 TO 710.06 WING LEADING EDGE OUTBOARD NACELLE GAP COVER UPPER INBOARD SPLICE (RH ONLY)		1
37G	65-18182-95	.	STRIP, FRONT SPAR STATION 666.14 TO 710.06 WING LEADING EDGE OUTBOARD NACELLE GAP UPPER INBOARD COVER RUB		1
37J	65-18182-101	.	STRIP, FRONT SPAR STATION 666.14 TO 710.06 WING LEADING EDGE OUTBOARD NACELLE GAP UPPER INBOARD COVER RUB		1
38	BACF18A5	.	PIN		18
39	BACS2185FH24	.	STUD.		9
40	BACS2185FH55	.	STUD.		4
41	BACS2185FH27	.	STUD.		2
42	BACS2185RH24	.	STUD.		2
43	BACS2185FH25	.	STUD.		1
44	BACG20K55A	.	GROMMET		16
45	69-17284-7	.	MAGNET ASSY, OUTBOARD NACELLE LEADING EDGE SLAT SEAL ATTACHING PARTS		1
	BACB30BF3K20	.	BOLT.		2
	BACS47F9-16	.	SHIM.		AR
	BACS40H9-16	.	SHIM.		AR
45A	NAS1103-9	.	BOLT.		3
45B	AN960PD10L	.	WASHER.		3
45C	NAS679A3	.	NUT		3
45D	69-17284-8	.	ANGLE, OUTBOARD NACELLE LEADING EDGE SLAT SEAL. MAGNET SIDE		1
45E	69-17284-9	.	ANGLE, OUTBOARD NACELLE LEADING EDGE SLAT SEAL. MAGNET SIDE		1
45F	LGI	.	MAGNET, (B0115)		4
45G	69-17284-11	.	SPACER.		3
46	65-18182-157	.	COVER ASSY, FRONT SPAR STATION 666.14 TO 710.06 WING LEADING EDGE OUTBOARD NACELLE GAP LOWER INBOARD (LH ONLY)		1
46	65-18182-158	.	COVER ASSY, FRONT SPAR STATION 666.14 TO 710.06 WING LEADING EDGE OUTBOARD NACELLE GAP LOWER INBOARD (RH ONLY)		1
47	65-18182-69	.	STRIP, FRONT SPAR STATION 666.14 TO 710.06 WING LEADING EDGE OUTBOARD NACELLE GAP LOWER INBOARD COVER RUB		AR
47A	65-18182-155	.	BONDED ASSY, FRONT SPAR STATION 666.14 TO 710.06 WING LEADING EDGE OUTBOARD NACELLE GAP LOWER INBOARD COVER (LH ONLY)		1
47A	65-18182-156	.	BONDED ASSY, FRONT SPAR STATION 666.14 TO 710.06 WING LEADING EDGE OUTBOARD NACELLE GAP LOWER INBOARD COVER (RH ONLY)		1
47C	65-18182-75	.	PLATE, FRONT SPAR STATION 666.14 TO 710.06 WING LEADING EDGE OUTBOARD NACELLE GAP COVER LOWER INBOARD (LH ONLY)		1
47C	65-18182-76	.	PLATE, FRONT SPAR STATION 666.14 TO 710.06 WING LEADING EDGE OUTBOARD NACELLE GAP COVER LOWER INBOARD (RH ONLY)		1
	MS20426D5	.	ATTACHING PARTS		
		.	RIVET		18

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *707* *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
17 47E	BACS40D14-233	. SHIM.		AR
47G	65-18182-83	. PLATE, FRONT SPAR STATION 666.14 TO 710.06 WING . . . LEADING EDGE OUTBOARD NACELLE GAP COVER LOWER INBOARD SPLICE (LH ONLY)		1
47G	65-18182-84	. PLATE, FRONT SPAR STATION 666.14 TO 710.06 WING . . . LEADING EDGE OUTBOARD NACELLE GAP COVER LOWER INBOARD SPLICE (RH ONLY)		1
47J	65-18182-98	. STRIP, FRONT SPAR STATION 666.14 TO 710.06 WING . . . LEADING EDGE OUTBOARD NACELLE GAP LOWER INBOARD COVER RUB		1
47K	65-18182-97	. STRIP, FRONT SPAR STATION 666.14 TO 710.06 WING . . . LEADING EDGE OUTBOARD NACELLE GAP LOWER INBOARD COVER RUB		1
48	BACS40A5P	. SPRING.		29
	MS20426A4	. ATTACHING PARTS . RIVET		58
49	NAS333CPA4	. BOLT.		3
50	NAS334CPA5-5	. BOLT.		4
51	NAS334CPA6	. BOLT.		1
52	65-18182-131	. FAIRING ASSY, FRONT SPAR STATION 666.14 TO 710.06 . . WING LEADING EDGE OUTBOARD NACELLE GAP COVER (LH ONLY)		1
52	65-18182-132	. FAIRING ASSY, FRONT SPAR STATION 666.14 TO 710.06 . . WING LEADING EDGE OUTBOARD NACELLE GAP COVER (RH ONLY)		1
53A	69-15899-19	. CLIP, OUTBOARD NACELLE FAIRING ATTACH (LH ONLY) . . .		1
53A	69-15899-20	. CLIP, OUTBOARD NACELLE FAIRING ATTACH (RH ONLY) . . . ATTACHING PARTS		1
53B	NAS1104-11W	. BOLT.		2
53C	NAS1104-12W	. BOLT.		2
53D	AN960PD416	. WASHER.		4
53E	BACS40B18-20	. SHIM.		AR
53F	NAS679A4W	. NUT		4
54A	69-15899-17	. CLIP, OUTBOARD NACELLE FAIRING ATTACH (LH ONLY) . . .		1
54A	69-15899-18	. CLIP, OUTBOARD NACELLE FAIRING ATTACH (RH ONLY) . . . ATTACHING PARTS		1
54B	NAS1104-14W	. BOLT.		2
54C	NAS1104-26W	. BOLT.		2
54D	BACS40B18-20	. SHIM.		AR
54E	AN960PD416	. WASHER.		4
54F	69-34190-2	. FILLER, TAPERED		2
54G	NAS679A4W	. NUT		4
55A	69-15899-15	. CLIP, OUTBOARD NACELLE FAIRING ATTACH (LH ONLY) . . .		1
55A	69-15899-16	. CLIP, OUTBOARD NACELLE FAIRING ATTACH (RH ONLY) . . . ATTACHING PARTS		1
	NAS1104-16W	. BOLT.		2
	NAS1104-11W	. BOLT.		1
	NAS1104-15W	. BOLT.		1
	NAS1104-18W	. BOLT.		1
	AN960PD416	. WASHER.		4
	BACS40F18-20	. SHIM.		AR
	BACS40B18-20	. SHIM.		AR
	NAS679A4W	. NUT		4
55D	65-18182-174	. STRIP, FRONT SPAR STATION 666.14 TO 710.06 WING . . . LEADING EDGE OUTBOARD NACELLE GAP COVER RUB		7
56A	65-18182-173	. ANGLE, FRONT SPAR STATION 666.14 TO 710.06 WING . . . LEADING EDGE OUTBOARD NACELLE GAP COVER ATTACHING PARTS		1
	NAS1104-13W	. BOLT.		3
	AN960PD416	. WASHER.		3
	BACS40C14-18	. SHIM.		AR
	NAS679A4W	. NUT		3
56D	69-18455-7	. BRACKET, RACEWAY SUPPORT (LH ONLY).		1
56D	69-18455-8	. BRACKET, RACEWAY SUPPORT (RH ONLY). ATTACHING PARTS		1
	MS20426D5-12	. RIVET		2
56E	65-18182-176	. STRIP, RUB.		1
63	69-15899-21	. CLIP, OUTBOARD NACELLE FAIRING ATTACH		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
17	NAS1104-11W AN960PD416 BACS40B14-18 NAS679A4W	ATTACHING PARTS									
		.	BOLT.	.	.	.	.	.	.	.	3
		.	WASHER.	.	.	.	.	.	.	.	3
		.	SHIM.	.	.	.	.	.	.	.	AR
		.	NUT	.	.	.	.	.	.	.	3
		-----*									
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

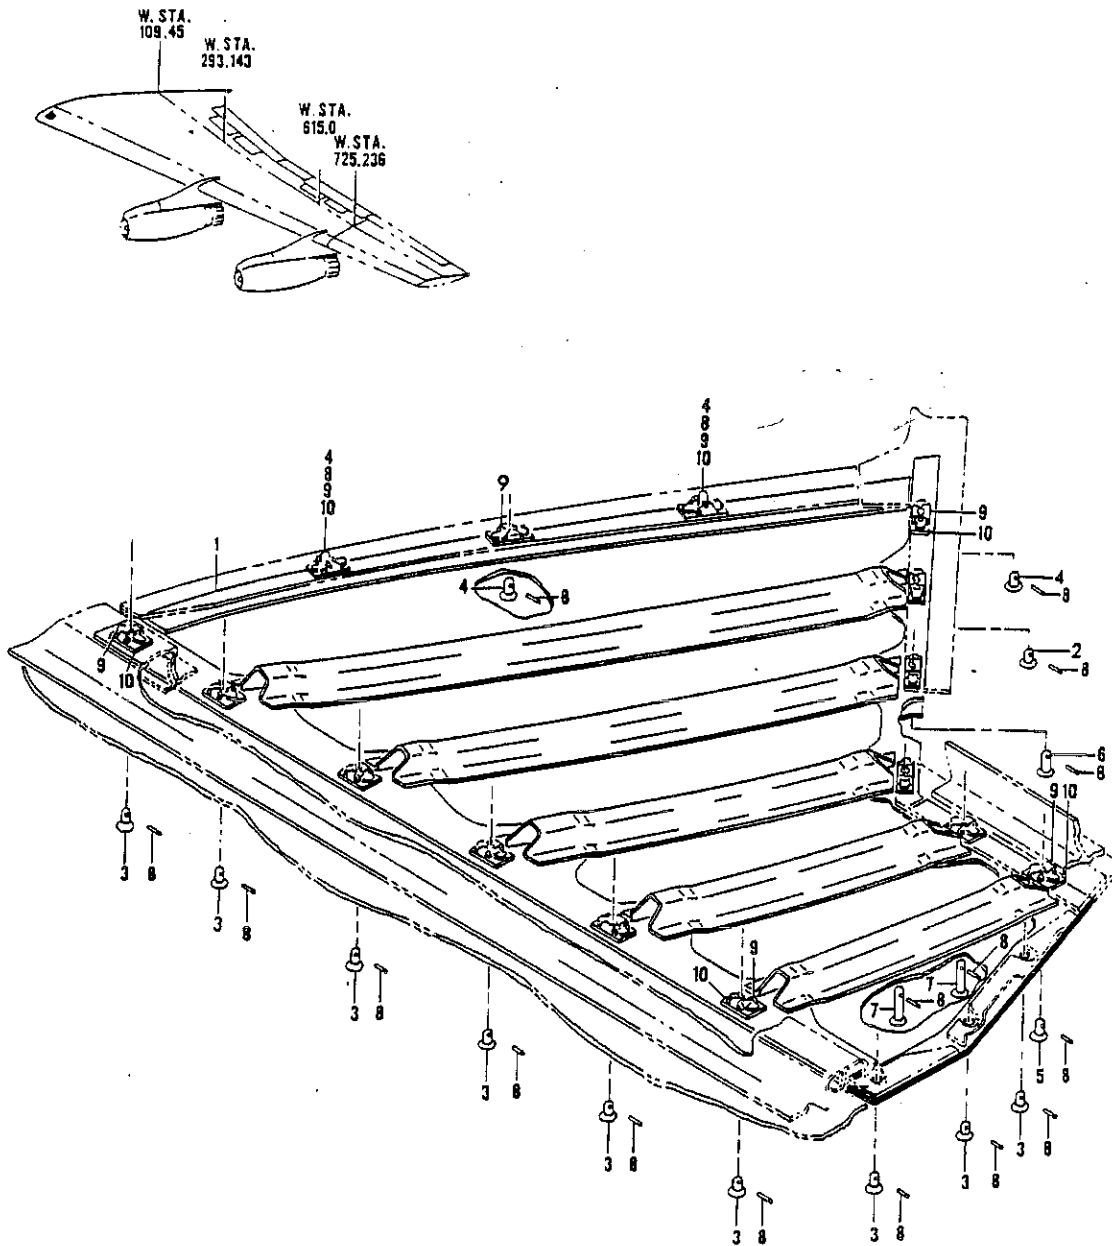


FIGURE 18. DOOR INSTL, INBOARD WING LEADING EDGE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
R R R R R R R R R R	18	65-6854-1	DOOR INSTL, INBOARD WING LEADING EDGE (LH) (SEE FIG.								RF
			8, ITEM 21, FIG. 6, ITEM 26 AND FIG. 7 ITEM								
			24)								
		65-6854-2	DOOR INSTL, INBOARD WING LEADING EDGE (RH) (SEE FIG.								RF
			8, ITEM 21, FIG. 6, ITEM 26 AND FIG. 7 ITEM								
			24)								
	1	65-6854-5	. DOOR ASSY, INBOARD WING LEADING EDGE (LH ONLY).						0151		1
	1	65-6854-6	. DOOR ASSY, INBOARD WING LEADING EDGE (RH ONLY).						0151		1
	1	65-6854-43	. DOOR ASSY, INBOARD WING LEADING EDGE (LH ONLY).						5299		1
			(OPTIONAL 65-6854-5)								
	1	65-6854-5	. DOOR ASSY, INBOARD WING LEADING EDGE (LH ONLY).						5299		1
			(OPTIONAL TO 65-6854-43)								
	1	65-6854-44	. DOOR ASSY, INBOARD WING LEADING EDGE (RH ONLY).						5299		1
			(OPTIONAL 65-6854-6)								
	1	65-6854-6	. DOOR ASSY, INBOARD WING LEADING EDGE (RH ONLY).						5299		1
			(OPTIONAL TO 65-6854-44)								
	2	BACS2185FH29	. . STUD.								1
	3	BACS2185FH26	. . STUD.								9
	4	BACS2185FH25	. . STUD.								4
	5	BACS2185FH31	. . STUD.								1
	6	BACS2185FH63	. . STUD.								1
	7	BACS2185FH108	. . STUD.								2
	8	BACP18A5	. . PIN								18
	9	BACS20A5P	. SPRING.								15
	10	BACS18X56	. SPACER.								14
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

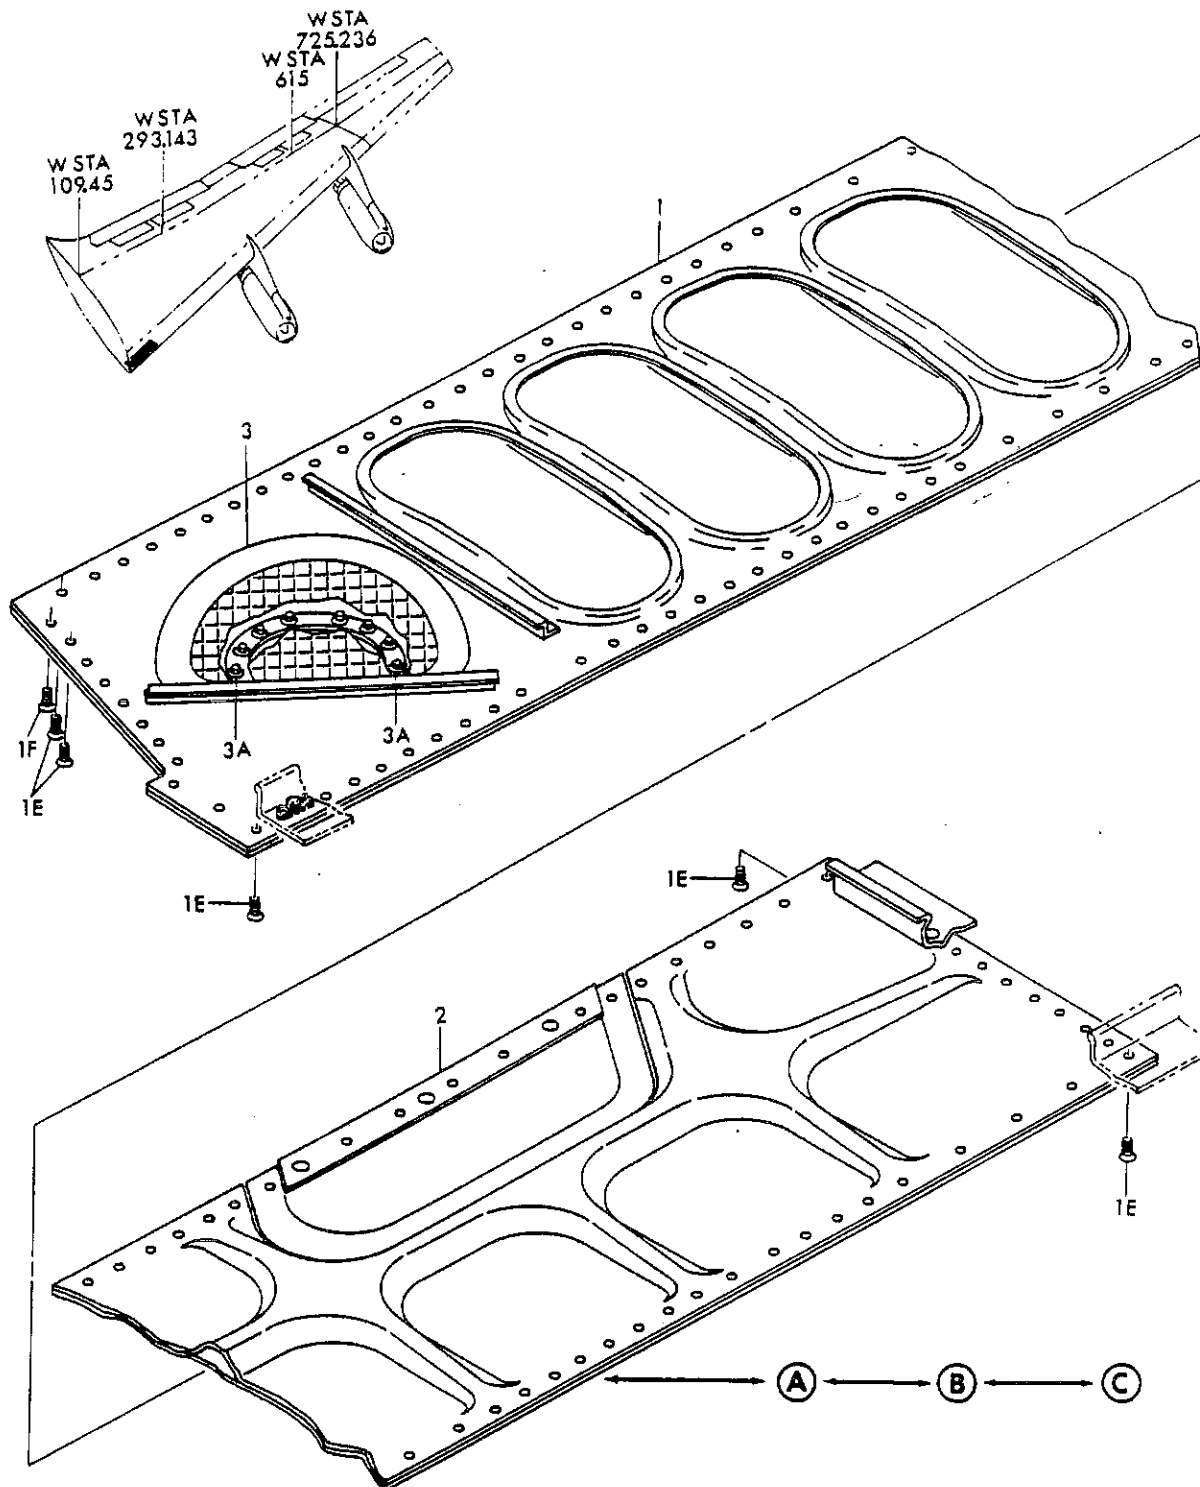


FIGURE 20. PANEL INSTL. FRONT SPAR STATION 16.75 TO 108.23 WING LEADING EDGE (LH) (SHEET 1)

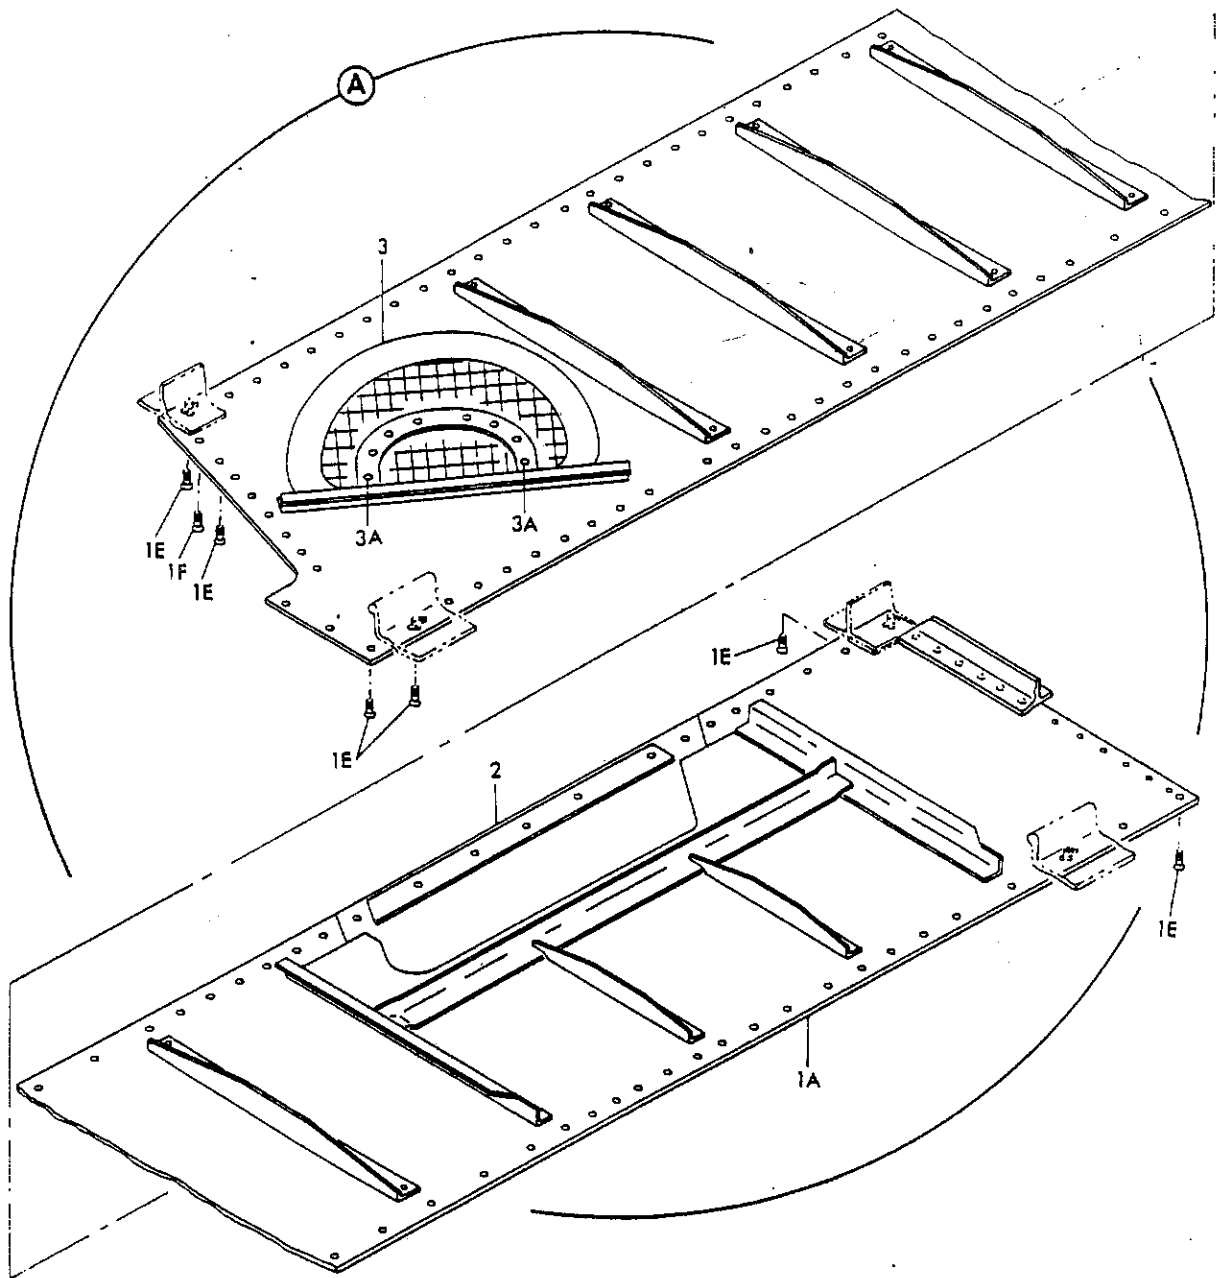


FIGURE 20. PANEL INSTL, FRONT SPAR STATION 16.75 TO 108.23 WING LEADING EDGE (LH) (SHEET 2)

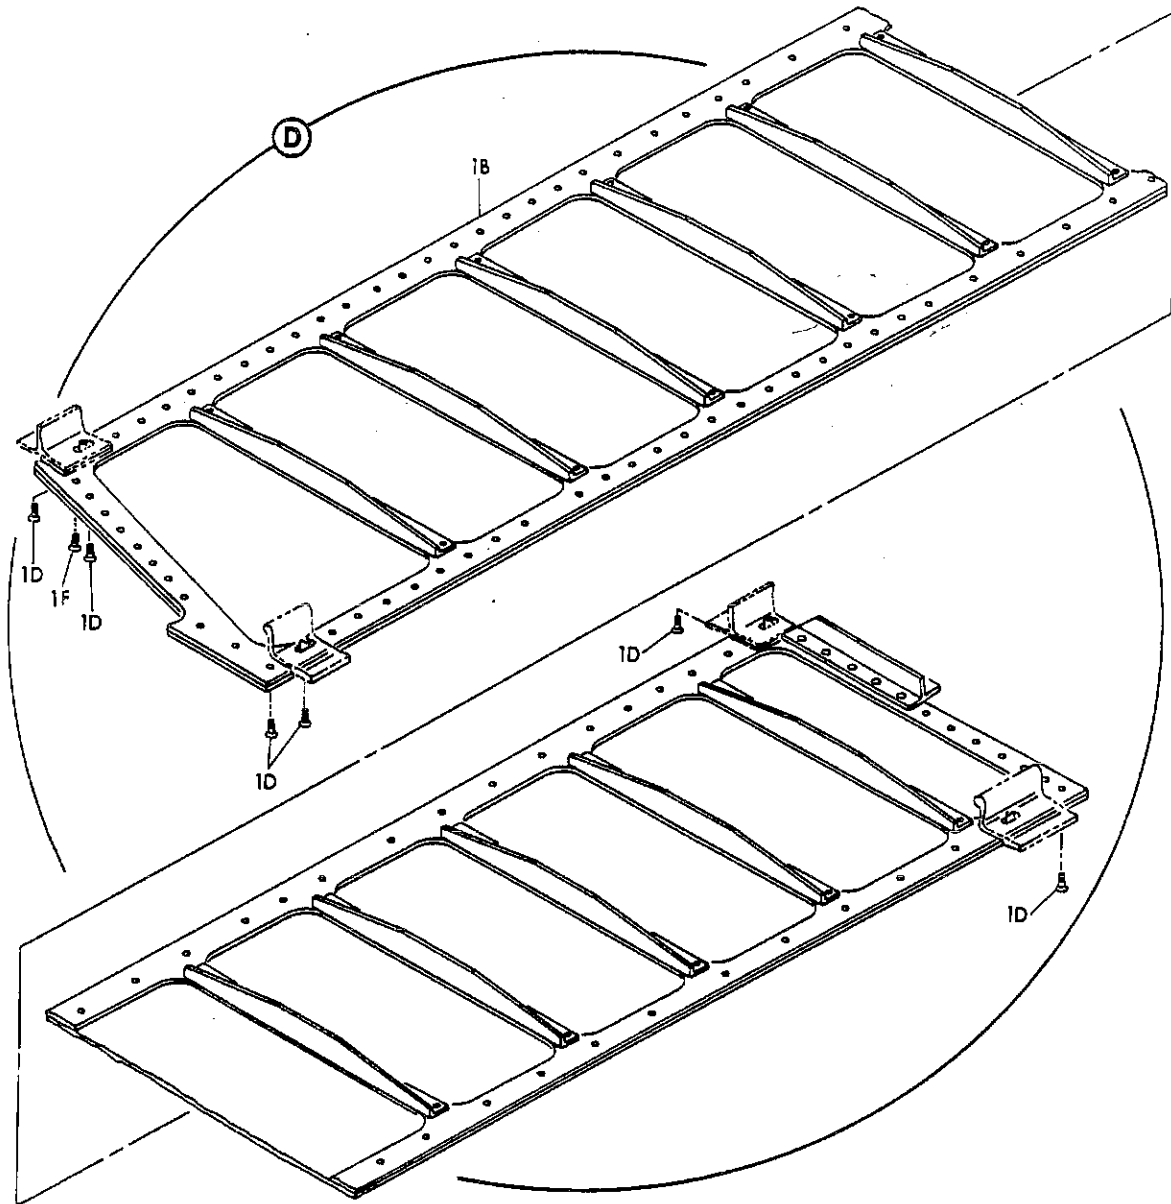


FIGURE 20. DOOR INSTL. WING LEADING EDGE OUTBOARD NACELLE GAP COVER (SHEET 3)

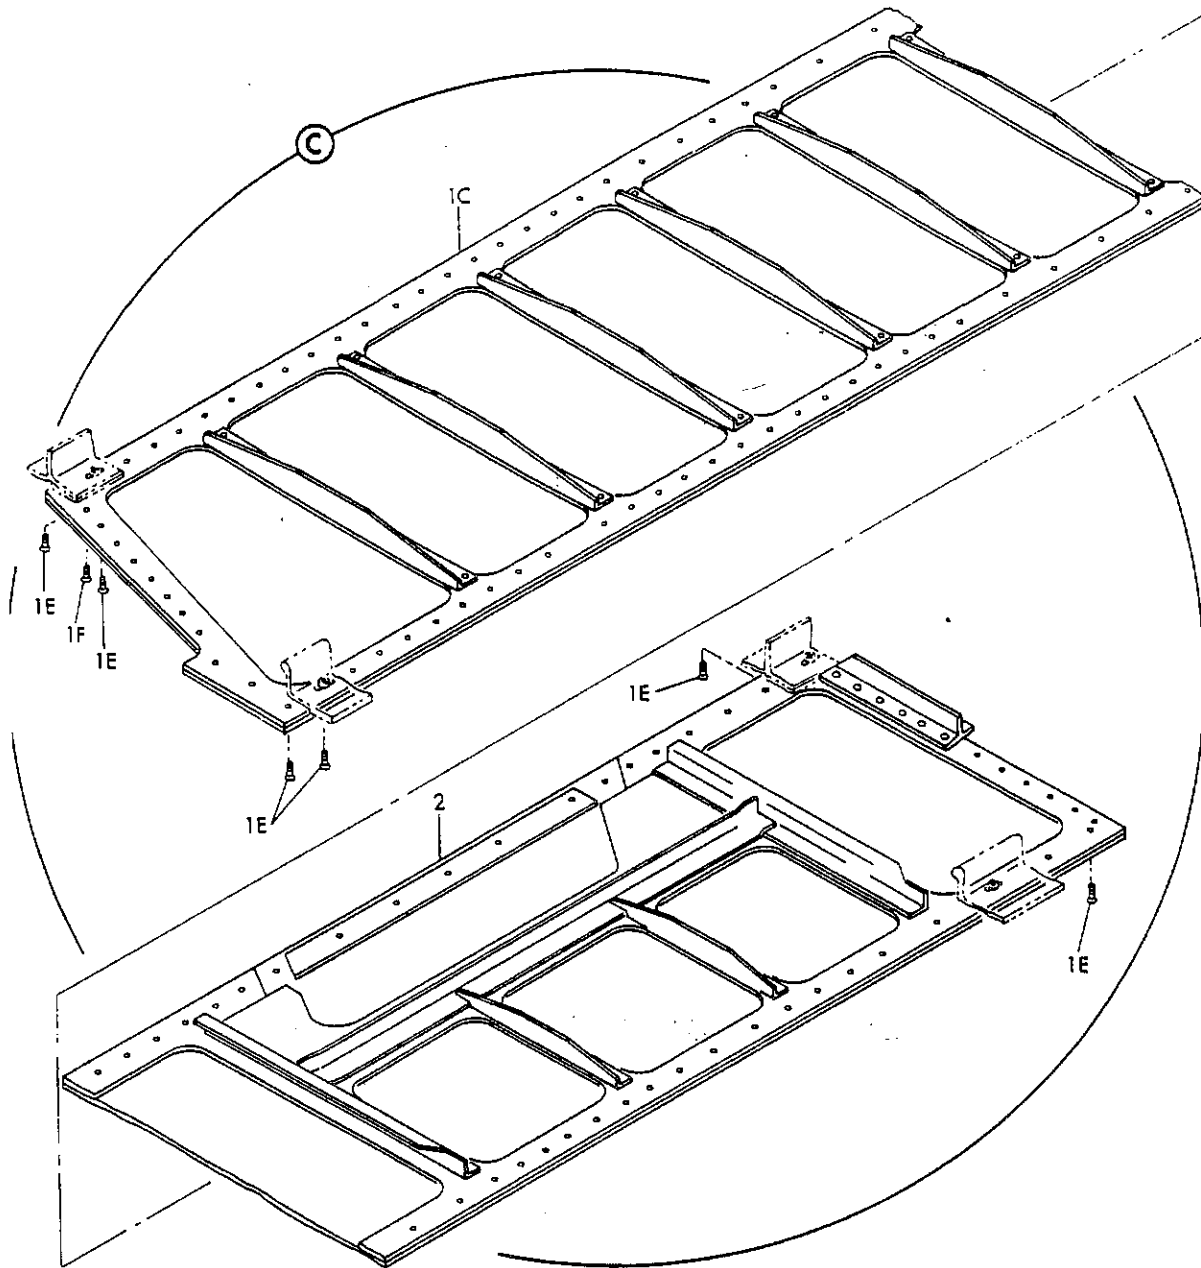


FIGURE 20. PANEL INSTL, FRONT SPAR STATION 16.75 TO 108.23 WING LEADING EDGE (LH) (SHEET 4)



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R	20	65-1073-51		PANEL INSTL, FRONT SPAR STATION 16.75 TO 108.23 WING. LEADING EDGE (LH) (SEE FIG. 7, ITEM 15 AND FIG. 8, ITEM 27)		RF
	1C	65-1073-68		. PANEL ASSY.	0151	1
	1C	65-1073-137		. PANEL ASSY.	5299	1
	1D	NAS517-4-5		ATTACHING PARTS		
	1E	NAS517-4-5		. SCREW, (USED WITH 65-1073-53, 63, AND -133)	5199	94
				. SCREW, (USED WITH 65-1073-3, -21 -68 AND -137)	0150	105
		65-1073-69		-----*		
		65-1073-138		. . PANEL ASSY, BONDED (USED ON 65-1073-68)		1
	2	65-1073-33		. . PANEL ASSY, BONDED (USED ON 65-1073-137)	5299	1
		NAS517-3-5		. . DOOR ASSY, (USED ON 65-1073-21, -68 AND -137)		1
R	2	65-1073-35		ATTACHING PARTS		
				. SCREW	0150	11
				-----*		
				. . . DOOR.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE						



W STA
615

W STA
293.143

W STA
10945

DETAILED PARTS LIST
57-04-21
PAGE 0

57-04-21

NOV 21/90

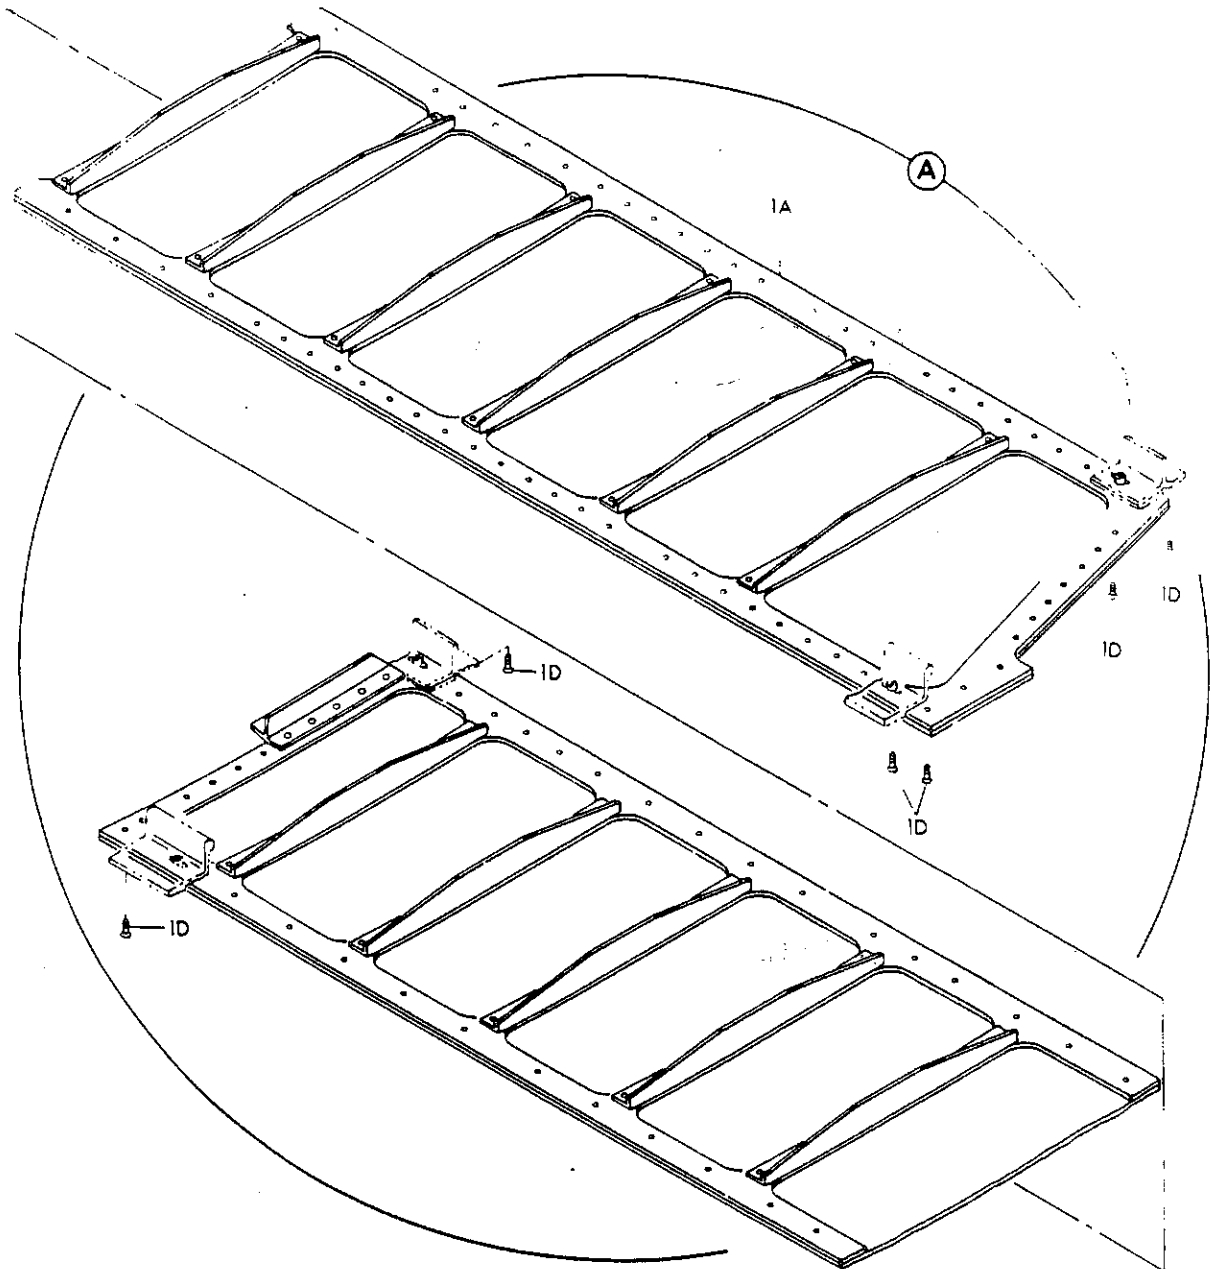


FIGURE 21. PANEL INSTL, FRONT SPAR STATION 16.75 TO 108.23 WING LEADING EDGE (RH) (SHEET 2)

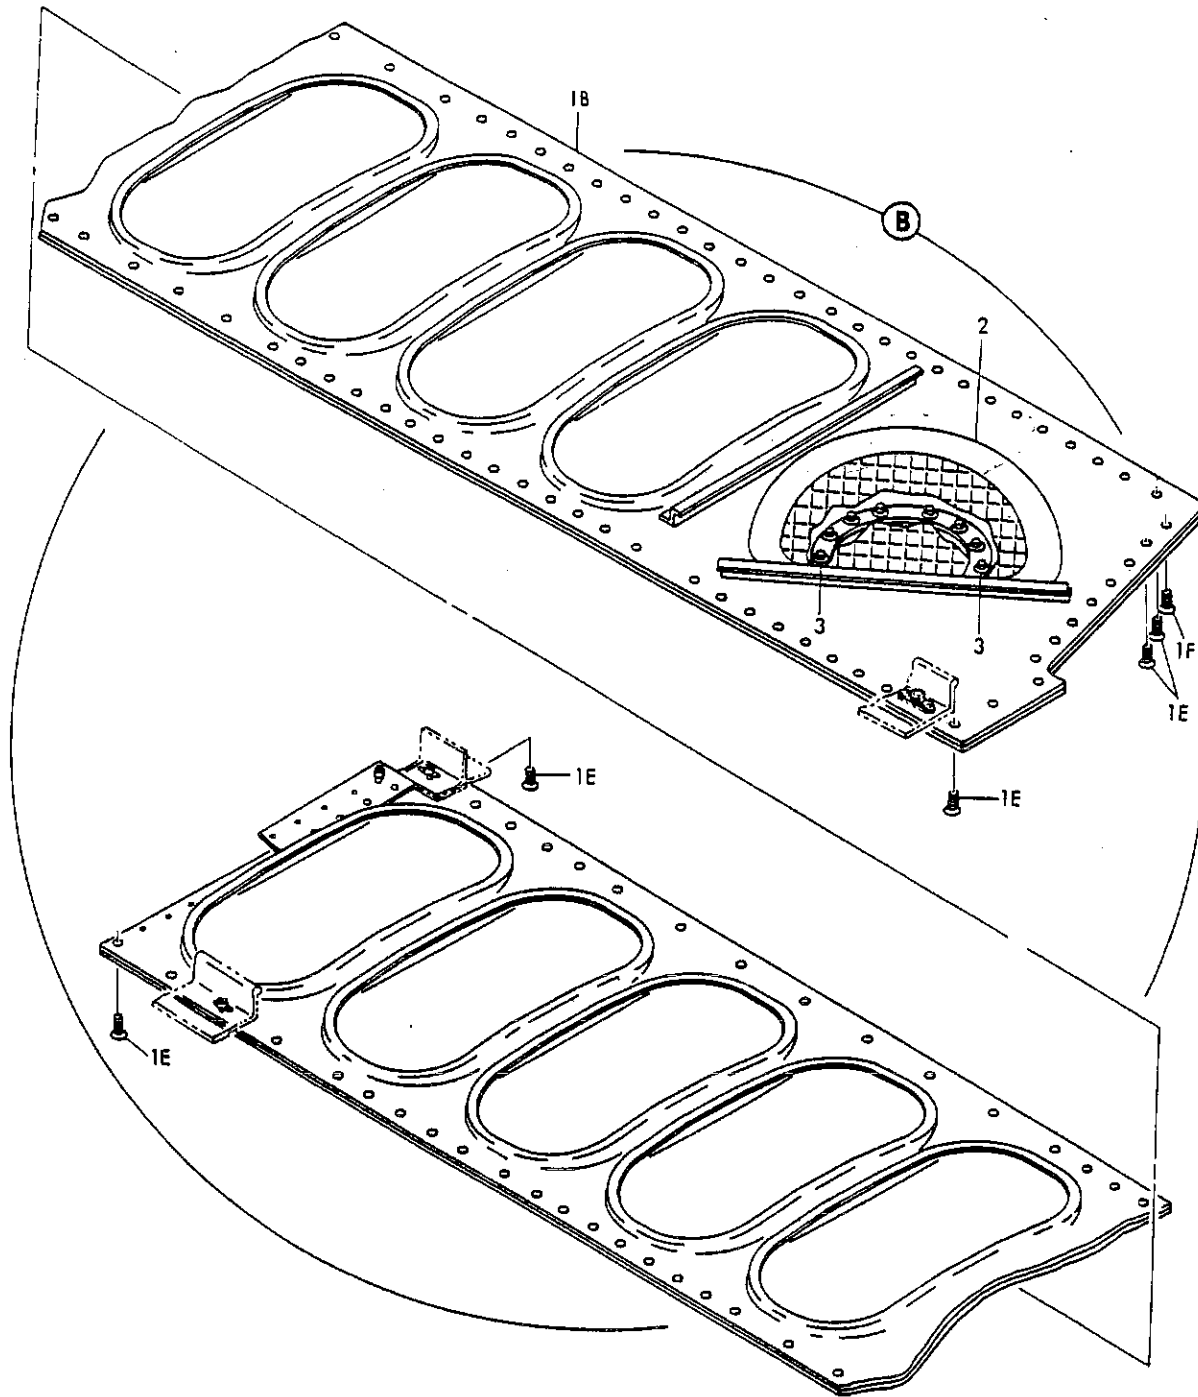


FIGURE 2L. PANEL INSTL. FRONT SPAR STATION 16.75 TO 108.23 WING LEADING EDGE (RH) (SHEET 3)

BOEING **707** *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R R	21	65-1073-52	PANEL INSTL, FRONT SPAR STATION 16.75 TO 108.23 WING. . LEADING EDGE (RH) (SEE FIG. 7, ITEM 15 AND FIG. 8, ITEM 27)								RF
	1A	65-1073-64	. PANEL ASSY.							0151	1
	1A	65-1073-134	. PANEL ASSY.							5299	1
	1D	NAS517-4-5	. ATTACHING PARTS . SCREW -----*								93
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

W STA
725.236

W STA
643.5

W STA
360

W STA
109.45


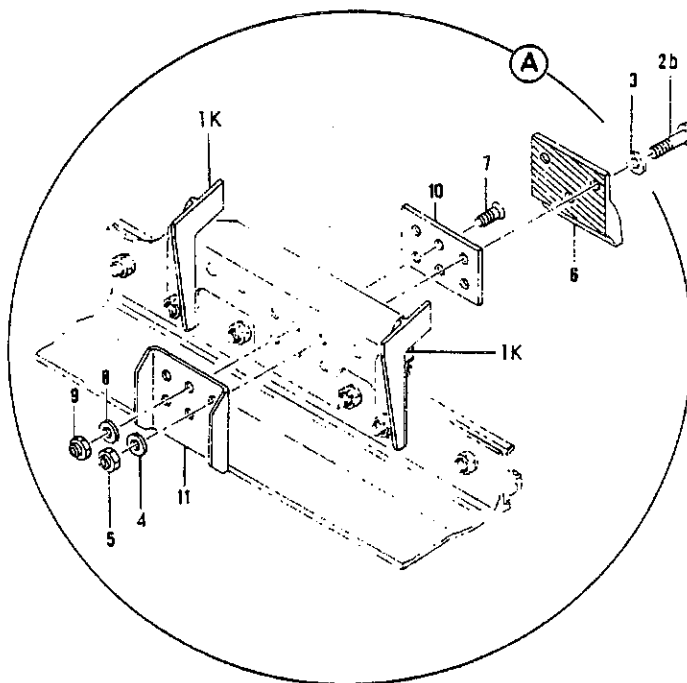


FIGURE 22. PANEL INSTL. INBOARD WING

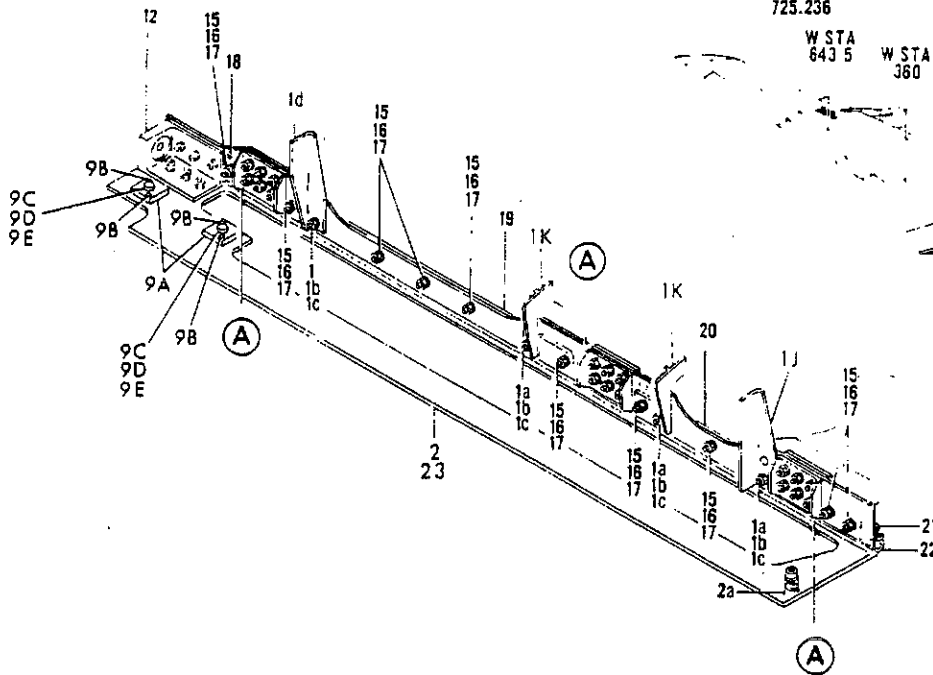

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
22	65-18484-1	PANEL INSTL, INBOARD WING (LH) (SEE FIG. 9, ITEM 8) . .		RF
	65-18484-2	PANEL INSTL, INBOARD WING (RH) (SEE FIG. 9, ITEM 8) . .		RF
1	NAS623-3-5W	. SCREW		1
1A	NAS623-3-6W	. SCREW		3
1B	AN960PD10L	. WASHER		4
1C	NAS679A3W	. NUT		4
1D	69-15835-5	. ANGLE, OUTBOARD WING LEADING EDGE SLAT HANGER		1
		(LH ONLY)		
1D	69-15835-9	. ANGLE, OUTBOARD LEADING EDGE SLAT HANGER (RH ONLY) . .		1
	MS2047006	. ATTACHING PARTS		
		. RIVET		6
		-----*		
2	65-18484-3	. PANEL ASSY, INBOARD WING (LH ONLY)	0103	1
2	65-18484-4	. PANEL ASSY, INBOARD WING (RH ONLY)	0103	1
2	65-18484-5	. PANEL ASSY, (LH ONLY)	0450	1
2	65-18484-6	. PANEL ASSY, (RH ONLY)	0450	1
2	65-18484-7	. PANEL ASSY, (LH ONLY)	5199	1
2	65-18484-8	. PANEL ASSY, (RH ONLY)	5199	1
2A	63-1158-2000	. . FITTING, WING LEADING EDGE DRAIN.		1
2B	NAS623-3-6W	. SCREW		9
3	AN960-416	. WASHER		9
4	AN960PD10L	. WASHER		9
5	NAS679A3W	. NUT		9
6	66-12678-12	. STRIKER		3
7	BACB30LP3-5	. BOLT	0103	9
7	BACB30F83-5	. BOLT	0450	9
8	AN960PD10	. WASHER		9
9	BACN10GW	. NUT		9
9A	69-15782-12	. FILLER		2
		. ATTACHING PARTS		
		. RIVET		4
9B	MS2042603	. BOLT		2
9C	BACB30LP4-10	. WASHER		2
9D	AN960PD10L	. WASHER		2
9E	BACN10GW	. NUT		2
		-----*		
10	66-12678-14	. . PLATE, STRIKER.		3
11	66-13286-1	. . CHANNEL, OUTBOARD WING LEADING EDGE SLAT.		3
12	65-18748-2	. . FITTING, LEADING EDGE PRODUCTION BREAK SKIN SPLICE	0150	1
		LOWER (LH ONLY)		
12	65-18748-12	. . FITTING, LEADING EDGE PRODUCTION BREAK SKIN SPLICE	5199	1
		LOWER (LH ONLY)		
12	65-18748-1	. . FITTING, LEADING EDGE PRODUCTION BREAK SKIN SPLICE	0150	1
		LOWER (RH ONLY)		
12	65-18748-11	. . FITTING, LEADING EDGE PRODUCTION BREAK SKIN SPLICE	5199	1
		LOWER (RH ONLY)		
		. ATTACHING PARTS		
	NAS623-3-6W	. SCREW		3
	NAS517-3-4	. BOLT		3
	BACS40C21-46	. SHIM		1
	AN960PD10L	. WASHER		6
	NAS679A3W	. NUT		6
		-----*		
15	NAS623-3-4W	. SCREW		10
16	AN960PD10L	. WASHER		10
17	NAS679A3W	. NUT		10
18	69-15827-21	. . RETAINER, LEADING EDGE SEAL (DELETED BY SB 2651) . .	0103	1
		(LH ONLY)		
18	69-15827-22	. . RETAINER, LEADING EDGE SEAL (DELETED BY SB 2651) . .	0103	1
		(RH ONLY)		
18	69-15827-45	. . RETAINER, SEAL (LH ONLY)	0450	1
18	69-15827-46	. . RETAINER, SEAL (RH ONLY)	0450	1
18	69-15827-75	. . RETAINER, SEAL (LH ONLY)	5199	1
18	69-15827-76	. . RETAINER, SEAL (RH ONLY)	5199	1
18	69-15827-75	. . RETAINER, SEAL (ADDED BY SB 2651) (LH ONLY)	0103	1
18	69-15827-76	. . RETAINER, SEAL (ADDED BY SB 2651) (RH ONLY)	0103	1
19	69-15827-23	. . RETAINER, LEADING EDGE SEAL (DELETED BY SB 2651) . .	0103	1
		(LH ONLY)		
19	69-15827-24	. . RETAINER, LEADING EDGE SEAL (DELETED BY SB 2651) . .	0103	1
		(RH ONLY)		
19	69-15827-47	. . RETAINER, SEAL (LH ONLY)	0450	1
19	69-15827-48	. . RETAINER, SEAL (RH ONLY)	0450	1
19	69-15827-77	. . RETAINER, SEAL (LH ONLY)	5199	1
19	69-15827-78	. . RETAINER, SEAL (RH ONLY)	5199	1
19	69-15827-77	. . RETAINER, SEAL (ADDED BY SB 2651) (LH ONLY)	0103	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R R R R R R R R R R R R R R R R R R R R R R R	22 19	69-15827-78	. .	RETAINER, SEAL (ADDED BY SB 2651) (RH ONLY)					0103	1
	20	69-15827-25	. .	RETAINER, SEAL (DELETED BY SB 2651) (LH ONLY)					0103	1
	20	69-15827-26	. .	RETAINER, SEAL (DELETED BY SB 2651) (RH ONLY)					0103	1
	20	69-15827-49	. .	RETAINER, SEAL (LH ONLY)					0450	1
	20	69-15827-50	. .	RETAINER, SEAL (RH ONLY)					0450	1
	20	69-15827-79	. .	RETAINER, SEAL (LH ONLY)					5199	1
	20	69-15827-80	. .	RETAINER, SEAL (RH ONLY)					5199	1
	20	69-15827-79	. .	RETAINER, SEAL (ADDED BY SB 2651) (LH ONLY)					0103	1
	20	69-15827-80	. .	RETAINER, SEAL (ADDED BY SB 2651) (RH ONLY)					0103	1
	21	69-15827-27	. .	RETAINER, LEADING EDGE SEAL (DELETED BY SB 2651)					0103	1
				(LH ONLY)						
	21	69-15827-28	. .	RETAINER, LEADING EDGE SEAL (DELETED BY SB 2651)					0103	1
				(RH ONLY)						
	21	69-15827-51	. .	RETAINER, SEAL (LH ONLY)					0450	1
	21	69-15827-52	. .	RETAINER, SEAL (RH ONLY)					0450	1
	21	69-15827-81	. .	RETAINER, SEAL (LH ONLY)					5199	1
	21	69-15827-82	. .	RETAINER, SEAL (RH ONLY)					5199	1
	21	69-15827-81	. .	RETAINER, SEAL (ADDED BY SB 2651) (LH ONLY)					0103	1
	21	69-15827-82	. .	RETAINER, SEAL (ADDED BY SB 2651) (RH ONLY)					0103	1
	22	69-15826-3	. .	SEAL, OUTBOARD WING LEADING EDGE SLAT (EXTRUSION					0450	1
				NO. BAC1530-10 X 35.8 IN. LG) (LH ONLY)						
	22	69-15826-4	. .	SEAL, OUTBOARD WING LEADING EDGE SLAT (EXTRUSION					0450	1
				NO. BAC1530-10 X 35.8 IN. LG) (RH ONLY)						
	22	69-15826-3	. .	SEAL, OUTBOARD WING LEADING EDGE SLAT (EXTRUSION					0103	1
				NO. BAC1530-10 X 35.8 IN. LG) (DELETED BY SB 2651) (LH ONLY)						
	22	69-15826-4	. .	SEAL, OUTBOARD WING LEADING EDGE SLAT (EXTRUSION					0103	1
				NO. BAC1530-10 X 35.8 IN. LG) (DELETED BY SB 2651) (RH ONLY)						
	22	69-15826-7	. .	SEAL, OUTBOARD WING LEADING EDGE SLAT (EXTRUSION					5199	1
				NO. BAC1530-76 X 35.8 IN. LG) (LH ONLY)						
	22	69-15826-8	. .	SEAL, OUTBOARD WING LEADING EDGE SLAT (EXTRUSION					5199	1
				NO. BAC1530-76 X 35.8 IN. LG) (RH ONLY)						
	22	69-15826-7	. .	SEAL, OUTBOARD WING LEADING EDGE SLAT (EXTRUSION					0103	1
				NO. BAC1530-76 X 35.8 IN. LG) (ADDED BY SB 2651) (LH ONLY)						
	22	69-15826-8	. .	SEAL, OUTBOARD WING LEADING EDGE SLAT (EXTRUSION					0103	1
				NO. BAC1530-76 X 35.8 IN. LG) (ADDED BY SB 2651) (RH ONLY)						
	23	65-18482-9	. .	PANEL, CLOSURE (LH ONLY)					0103	1
	23	65-18482-10	. .	PANEL, CLOSURE (RH ONLY)					0103	1
	23	65-18482-19	. .	PANEL, CLOSURE (LH ONLY)					0499	1
	23	65-18482-20	. .	PANEL, CLOSURE (RH ONLY)					0499	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

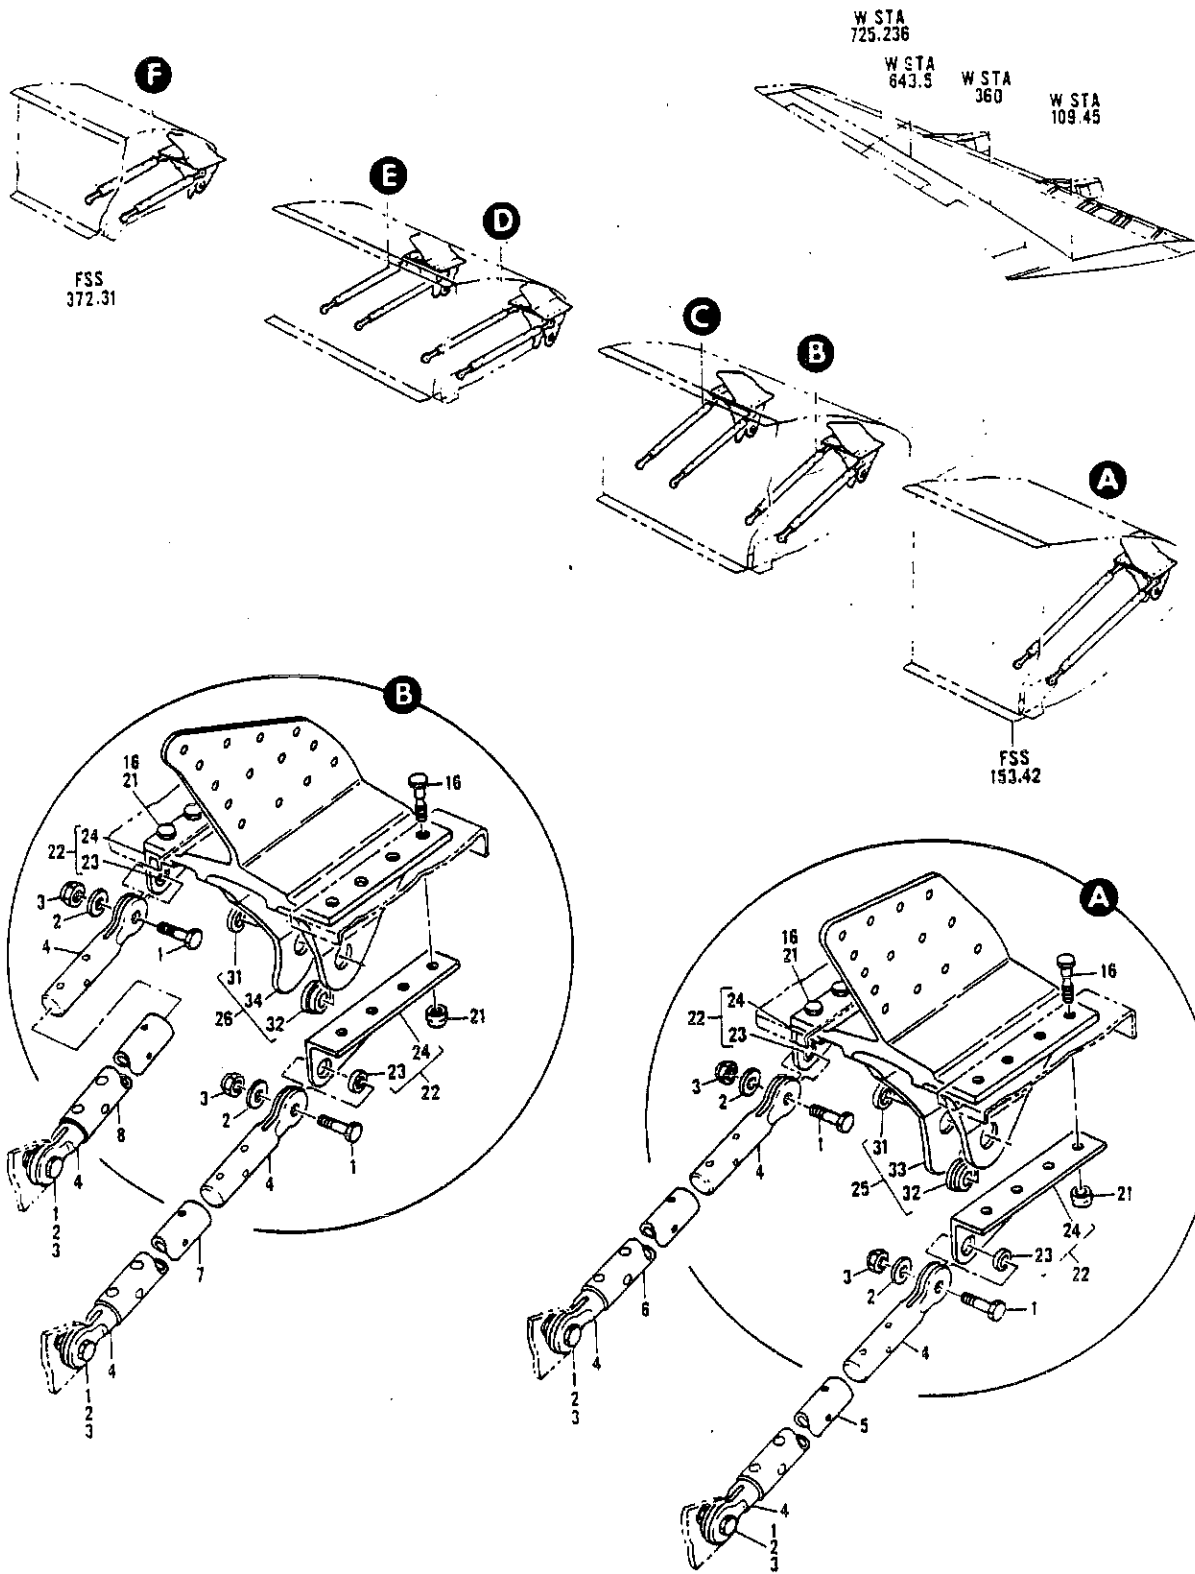


FIGURE 27. PARTS INSTL, WING LEADING EDGE
RTB INSTL, WING LEADING EDGE (SHEET 1)

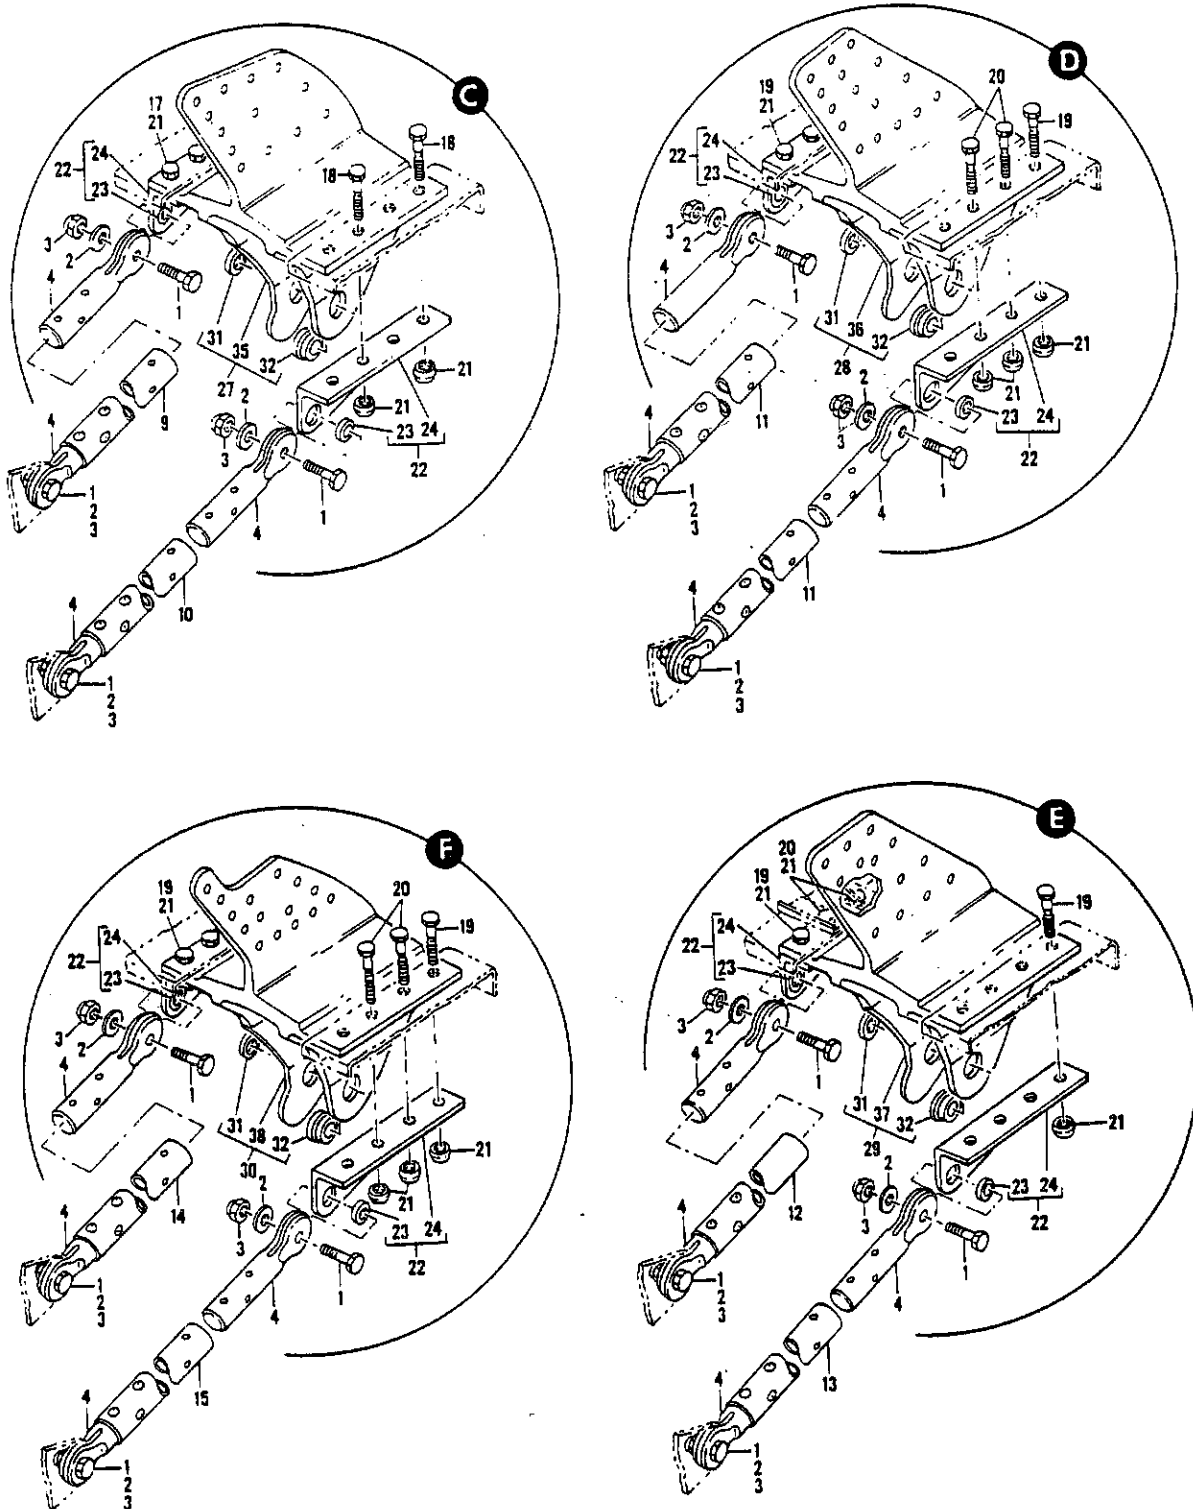


FIGURE 27. PARTS INSTL. WING LEADING EDGE
RIB INSTL. WING LEADING EDGE (SHEET 2)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
27			PARTS INSTL, WING LEADING EDGE.		
	65-32171-3		RIB INSTL, WING LEADING EDGE.		RF
	65-32171-4		. PARTS INSTL, FRONT SPAR STATION 153.42 WING LEADING .		RF
	65-32174-3		EDGE (LH) (SEE FIG. 8, ITEM 19)		RF
	65-32174-4		. PARTS INSTL, FRONT SPAR STATION 215.93 WING LEADING .		RF
	65-32175-3		EDGE (RH) (SEE FIG. 8, ITEM 19)		RF
	65-32175-4		. PARTS INSTL, FRONT SPAR STATION 229.26 WING LEADING .		RF
	65-32179-3		EDGE (LH) (SEE FIG. 8, ITEM 16)		RF
	65-32179-4		. PARTS INSTL, FRONT SPAR STATION 297.75 WING LEADING .		RF
	65-32180-3		EDGE (RH) (SEE FIG. 8, ITEM 16)		RF
	65-32180-4		. PARTS INSTL, FRONT SPAR STATION 313.85 WING LEADING .		RF
	65-32184-3		EDGE (LH) (SEE FIG. 8, ITEM 15)		RF
	65-32184-4		. PARTS INSTL, FRONT SPAR STATION 372.31 WING LEADING .		RF
			EDGE (RH) (SEE FIG. 8, ITEM 15)		RF
1	NAS1105-8W		. PARTS INSTL, FRONT SPAR STATION 313.85 WING LEADING .		4
2	AN960PD516L		EDGE (LH) (SEE FIG. 8, ITEM 10)		4
3	NAS679A5		. PARTS INSTL, FRONT SPAR STATION 372.31 WING LEADING .		4
4	69-25340-1		EDGE (RH) (SEE FIG. 8, ITEM 10)		4
	MS20470D6		. PARTS INSTL, FRONT SPAR STATION 372.31 WING LEADING .		12
			EDGE (RH) (SEE FIG. 8, ITEM 6)		
			. BOLT.		
			. WASHER.		
			. NUT		
			. FITTING, TENSION TIE ROD END.		
			ATTACHING PARTS		
			. RIVET		
5	65-32171-6		. TUBE, FRONT SPAR STATION 153.42 WING LEADING EDGE .		1
6	65-32171-25		PARTS TENSION TIE (USED ON 65-32171-3 AND -4)		1
7	65-32174-12		. TUBE, FRONT SPAR STATION 215.93 WING LEADING EDGE .		1
8	65-32174-11		PARTS TENSION TIE (USED ON 65-32174-3 AND -4)		1
9	65-32175-24		. TUBE, FRONT SPAR STATION 229.26 WING LEADING EDGE .		1
10	65-32175-23		PARTS TENSION TIE (USED ON 65-32175-3 AND -4)		1
11	65-32179-29		. TUBE, FRONT SPAR STATION 297.75 WING LEADING EDGE .		2
12	65-32180-26		PARTS TENSION TIE (USED ON 65-32179-3 AND -4)		1
13	65-32180-25		. TUBE, FRONT SPAR STATION 313.85 WING LEADING EDGE .		1
14	65-32184-29		PARTS TENSION TIE (USED ON 65-32180-3 AND -4)		1
15	65-32184-30		. TUBE, FRONT SPAR STATION 372.31 WING LEADING EDGE .		1
	65-32171-1		PARTS TENSION TIE (USED ON 65-32184-3 AND -4)		RF
	65-32171-2		. RIB INSTL, FRONT SPAR STATION 153.42 WING LEADING .		RF
	65-32174-1		EDGE (LH) (SEE FIG. 8, ITEM 78)		RF
	65-32174-2		. RIB INSTL, FRONT SPAR STATION 215.93 WING LEADING .		RF
	65-32175-1		EDGE (RH) (SEE FIG. 8, ITEM 78)		RF
	65-32175-2		. RIB INSTL, FRONT SPAR STATION 229.26 WING LEADING .		RF
	65-32179-1		EDGE (LH) (SEE FIG. 8, ITEM 75)		RF
	65-32179-2		. RIB INSTL, FRONT SPAR STATION 297.75 WING LEADING .		RF
	65-32180-1		EDGE (RH) (SEE FIG. 8, ITEM 75)		RF
			. RIB INSTL, FRONT SPAR STATION 313.85 WING LEADING .		RF
			EDGE (LH) (SEE FIG. 8, ITEM 74)		
			. RIB INSTL, FRONT SPAR STATION 372.31 WING LEADING .		
			EDGE (RH) (SEE FIG. 8, ITEM 74)		
			. RIB INSTL, FRONT SPAR STATION 372.31 WING LEADING .		
			EDGE (LH) (SEE FIG. 8, ITEM 72)		
			. RIB INSTL, FRONT SPAR STATION 372.31 WING LEADING .		
			EDGE (RH) (SEE FIG. 8, ITEM 72)		
			. RIB INSTL, FRONT SPAR STATION 372.31 WING LEADING .		
			EDGE (LH) (SEE FIG. 8, ITEM 71)		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
27	65-32180-2	. RIB INSTL, FRONT SPAR STATION 313.85 WING LEADING . . EDGE (RH) (SEE FIG. 8, ITEM 71)		RF
	65-32184-1	. RIB INSTL, FRONT SPAR STATION 372.31 WING LEADING . . EDGE (LH) (SEE FIG. 8, ITEM 61)		RF
	65-32184-2	. RIB INSTL, FRONT SPAR STATION 372.31 WING LEADING . . EDGE (RH) (SEE FIG. 8, ITEM 61)		RF
16	BACB30DX6-8	. . BOLT, (STATIONS 153.42 AND 215.93)		8
17	BACB30DX6-9	. . BOLT, (STATION 229.26)		6
18	BACB30DX6-10	. . BOLT, (STATION 229.26)		2
19	BACB30DX6-10	. . BOLT, (STATIONS 297.75, 313.85 AND 372.31)		6
20	BACB30DX6-11	. . BOLT, (STATIONS 297.75, 313.85 AND 372.31)		2
21	NAS1080-6	. . COLLAR		8
22	69-25339-1	. . FITTING ASSY, TENSION TIE SUPPORT (LH ONLY)		2
22	69-25339-2	. . FITTING ASSY, TENSION TIE SUPPORT (USED ON 65-32171-2, 65-32175-2, 65-32179-2, 65-32180-2, 65-32184-2 AND 65-32171-35)		2
22	69-25339-1	. . FITTING ASSY, TENSION TIE SURPORT (USED ON 65-32174-2 AND 65-32174-36)		2
23	66-31054-9	. . . BUSHING, PRESSED FIT STRUCTURAL		1
24	69-25339-3	. . . FITTING, TENSION TIE SUPPORT (USED ON 69-25339-1)		1
24	69-25339-4	. . . FITTING, TENSION TIE SUPPORT (USED ON 69-25339-2)		1
25	65-32171-7	. . FITTING ASSY, HINGE SUPPORT (USED ON 65-32171-1) . . (OPTIONAL TO 65-32171-47)		1
25	65-32171-27	. . FITTING ASSY, HINGE SUPPORT (USED ON 65-32171-1) . . (OPTIONAL TO 65-32171-47)		1
25	65-32171-47	. . FITTING ASSY, HINGE SUPPORT (USED ON 65-32171-1) . . (OPTIONALS 65-32171-7, -27)		1
25	65-32171-8	. . FITTING ASSY, HINGE SUPPORT (USED ON 65-32171-2) . . (OPTIONAL TO 65-32171-48)		1
25	65-32171-28	. . FITTING ASSY, HINGE SUPPORT (USED ON 65-32171-2) . . (OPTIONAL TO 65-32171-48)		1
25	65-32171-48	. . FITTING ASSY, HINGE SUPPORT (USED ON 65-32171-2) . . (OPTIONALS 65-32171-8, -28)		1
26	65-32174-5	. . FITTING ASSY, HINGE SUPPORT (USED ON 65-32174-1) . . (OPTIONAL TO 65-32174-45)		1
26	65-32174-27	. . FITTING ASSY, HINGE SUPPORT (USED ON 65-32174-1) . . (OPTIONAL TO 65-32174-45)		1
26	65-32174-45	. . FITTING ASSY, HINGE SUPPORT (USED ON 65-32174-1) . . (OPTIONALS 65-32174-5, -27)		1
26	65-32174-6	. . FITTING ASSY, HINGE SUPPORT (USED ON 65-32174-2) . . (OPTIONAL TO 65-32174-46)		1
26	65-32174-28	. . FITTING ASSY, HINGE SUPPORT (USED ON 65-32174-2) . . (OPTIONAL TO 65-32174-46)		1
26	65-32174-46	. . FITTING ASSY, HINGE SUPPORT (USED ON 65-32174-2) . . (OPTIONALS 65-32174-6, -28)		1
27	65-32175-19	. . FITTING ASSY, FRONT SPAR STATION 229.26 WING LEADING EDGE RIB HINGE SUPPORT (OPTIONAL 65-32175-25) (USED ON 65-32175-1)		1
27	65-32175-25	. . FITTING ASSY, FRONT SPAR STATION 229.26 WING LEADING EDGE RIB HINGE SUPPORT (OPTIONAL TO 65-32175-19) (USED ON 65-32175-1)		1
27	65-32175-20	. . FITTING ASSY, FRONT SPAR STATION 229.26 WING LEADING EDGE RIB HINGE SUPPORT (OPTIONAL 65-32175-26) (USED ON 65-32175-2)		1
27	65-32175-26	. . FITTING ASSY, FRONT SPAR STATION 229.26 WING LEADING EDGE RIB HINGE SUPPORT (OPTIONAL TO 65-32175-20) (USED ON 65-32175-2)		1
28	65-32179-31	. . FITTING ASSY, FRONT SPAR STATION 297.75 WING LEADING EDGE RIB HINGE (OPTIONAL 65-32179-37) (USED ON 65-32179-1)		1
28	65-32179-37	. . FITTING ASSY, FRONT SPAR STATION 297.75 WING LEADING EDGE RIB HINGE SUPPORT (OPTIONAL TO 65-32179-31) (USED ON 65-32179-1)		1
28	65-32179-32	. . FITTING ASSY, FRONT SPAR STATION 297.75 WING LEADING EDGE RIB HINGE (OPTIONAL 65-32179-38) (USED ON 65-32179-2)		1
28	65-32179-38	. . FITTING ASSY, FRONT SPAR STATION 297.75 WING LEADING EDGE RIB HINGE SUPPORT (OPTIONAL TO 65-32179-32) (USED ON 65-32179-2)		1
29	65-32180-31	. . FITTING ASSY, FRONT SPAR STATION 313.85 WING LEADING EDGE RIB HINGE (OPTIONAL 65-32180-35) (USED ON 65-32180-1)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
27 29	65-32180-35	. . . FITTING ASSY, FRONT SPAR STATION 313.85 WING. . . . LEADING EDGE RIB HINGE SUPPORT (OPTIONAL TO 65-32180-31) (USED ON 65-32180-1)								1
29	65-32180-32	. . . FITTING ASSY, FRONT SPAR STATION 313.85 WING. . . . LEADING EDGE RIB HINGE (OPTIONAL 65-32180-36) (USED ON 65-32180-2)								1
29	65-32180-36	. . . FITTING ASSY, FRONT SPAR STATION 313.85 WING. . . . LEADING EDGE RIB HINGE SUPPORT (OPTIONAL TO 65-32180-32) (USED ON 65-32180-2)								1
30	65-32184-31	. . . FITTING ASSY, FRONT SPAR STATION 372.31 WING. . . . LEADING EDGE RIB HINGE (OPTIONAL 65-32184-37) (USED ON 65-32184-1)								1
30	65-32184-37	. . . FITTING ASSY, FRONT SPAR STATION 372.31 WING. . . . LEADING EDGE RIB HINGE SUPPORT (OPTIONAL TO 65-32184-31) (USED ON 65-32184-1)								1
30	65-32184-32	. . . FITTING ASSY, FRONT SPAR STATION 372.31 WING. . . . LEADING EDGE RIB HINGE (OPTIONAL 65-32184-38) (USED ON 65-32184-2)								1
30	65-32184-38	. . . FITTING ASSY, FRONT SPAR STATION 372.31 WING. . . . LEADING EDGE RIB HINGE SUPPORT (OPTIONAL TO 65-32184-32) (USED ON 65-32184-2)								1
31	69-14435-6	. . . BUSHING, PRESS FIT FLANGED (USED ON 65-32171-7, . . -8, 65-32174-5 AND -6)								1
31	69-69-14435-5	. . . BUSHING, (USED ON 65-32171-47, -48, ... 65-32174-45, -46)								1
31	69-14435-5	. . . BUSHING, PRESS FIT FLANGED (NOT USED ON 65-32171-7, -8, 65-32174-5 AND -6)								1
32	69-14580-10	. . . BUSHING, HINGE SUPPORT FITTING (USED ON 65-32171-7, -8, 65-32174-5 AND -6)								1
32	69-14580-9	. . . BUSHING, (USED ON 65-32171-47, -48, ... 65-32174-45, -46)								1
32	69-14580-9	. . . BUSHING, HINGE SUPPORT FITTING (NOT USED ON 65-32171-7, -8, 65-32174-5 AND -6)								1
33	65-32171-23	. . . FITTING, FRONT SPAR STATION 153.42 WING LEADING . EDGE RIB HINGE SUPPORT (USED ON 65-32171-7)								1
33	65-32171-49	. . . FITTING, (USED ON 65-32171-47).								1
33	65-32171-29	. . . FITTING, FRONT SPAR STATION 153.42 WING LEADING . EDGE RIB HINGE SUPPORT (USED ON 65-32171-27)								1
33	65-32171-24	. . . FITTING, FRONT SPAR STATION 153.42 WING LEADING . EDGE RIB HINGE SUPPORT (USED ON 65-32171-8)								1
33	65-32171-50	. . . FITTING, (USED ON 65-32171-48).								1
33	65-32171-30	. . . FITTING, FRONT SPAR STATION 153.42 WING LEADING . EDGE RIB HINGE SUPPORT (USED ON 65-32171-28)								1
34	65-32174-7	. . . FITTING, FRONT SPAR STATION 215.93 WING LEADING . EDGE RIB HINGE SUPPORT (USED ON 65-32174-5)								1
34	65-32174-47	. . . FITTING, (USED ON 65-32174-45).								1
34	65-32174-29	. . . FITTING, FRONT SPAR STATION 215.93 WING LEADING . EDGE RIB HINGE SUPPORT (USED ON 65-32174-27)								1
34	65-32174-8	. . . FITTING, FRONT SPAR STATION 215.93 WING LEADING . EDGE RIB HINGE SUPPORT (USED ON 65-32174-6)								1
34	65-32174-48	. . . FITTING, (USED ON 65-32174-46).								1
34	65-32174-30	. . . FITTING, FRONT SPAR STATION 215.93 WING LEADING . EDGE RIB HINGE SUPPORT (USED ON 65-32174-28)								1
35	65-32175-21	. . . FITTING, FRONT SPAR STATION 229.26 WING LEADING . EDGE RIB HINGE SUPPORT (USED ON 65-32175-19)								1
35	65-32175-27	. . . FITTING, FRONT SPAR STATION 229.26 WING LEADING . EDGE RIB HINGE SUPPORT (USED ON 65-32175-25)								1
35	65-32175-22	. . . FITTING, FRONT SPAR STATION 229.26 WING LEADING . EDGE RIB HINGE SUPPORT (USED ON 65-32175-20)								1
35	65-32175-28	. . . FITTING, FRONT SPAR STATION 229.26 WING LEADING . EDGE RIB HINGE SUPPORT (USED ON 65-32175-26)								1
36	65-32179-33	. . . FITTING, FRONT SPAR STATION 297.75 WING LEADING . EDGE RIB HINGE (USED ON 65-32179-31)								1
36	65-32179-39	. . . FITTING, FRONT SPAR STATION 297.75 WING LEADING . EDGE RIB HINGE SUPPORT (USED ON 65-32179-37)								1
36	65-32179-34	. . . FITTING, FRONT SPAR STATION 297.75 WING LEADING . EDGE RIB HINGE (USED ON 65-32179-32)								1
36	65-32179-40	. . . FITTING, FRONT SPAR STATION 297.75 WING LEADING . EDGE RIB HINGE SUPPORT (USED ON 65-32179-38)								1
37	65-32180-33	. . . FITTING, FRONT SPAR STATION 313.85 WING LEADING . EDGE RIB HINGE (USED ON 65-32180-31)								1
37	65-32180-37	. . . FITTING, FRONT SPAR STATION 313.85 WING LEADING . EDGE RIB HINGE SUPPORT (USED ON 65-32180-35)								1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
27 37	65-32180-34	. . . FITTING, FRONT SPAR STATION 313.85 WING LEADING . EDGE RIB HINGE (USED ON 65-32180-32)		1
37	65-32180-38	. . . FITTING, FRONT SPAR STATION 133.85 WING LEADING . EDGE RIB HINGE SUPPORT (USED ON 65-32180-36)		1
38	65-32184-33	. . . FITTING, FRONT SPAR STATION 372.31 WING LEADING . EDGE RIB HINGE (USED ON 65-32184-31)		1
38	65-32184-39	. . . FITTING, FRONT SPAR STATION 372.31 WING LEADING . EDGE RIB HINGE SUPPORT (USED ON 65-32184-37)		1
38	65-32184-34	. . . FITTING, FRONT SPAR STATION 372.31 WING LEADING . EDGE RIB HINGE (USED ON 65-32184-32)		1
38	65-32184-40	. . . FITTING, FRONT SPAR STATION 372.31 WING LEADING . EDGE RIB HINGE SUPPORT (USED ON 65-32184-38)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



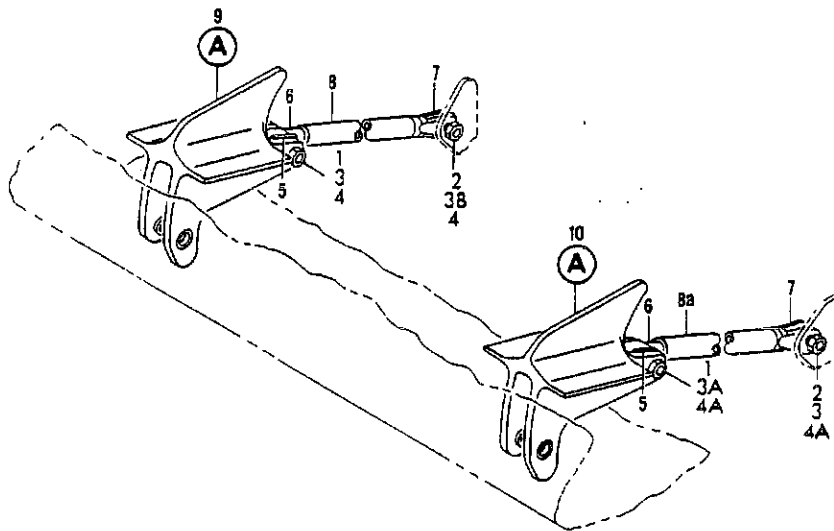


FIGURE 28. PARTS INSTL. WING LEADING EDGE
RIB INSTL. WING LEADING EDGE

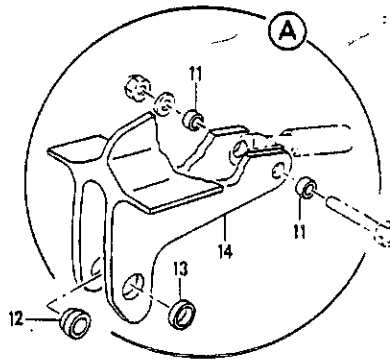

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
28		PARTS INSTL, WING LEADING EDGE.		
	65-32172-3	RIB INSTL, WING LEADING EDGE.		RF
	65-32172-4	. PARTS INSTL, FRONT SPAR STATION 174.70 WING LEADING EDGE (LH) (SEE FIG. 8, ITEM 18)		RF
	65-32173-3	. PARTS INSTL, FRONT SPAR STATION 174.70 WING LEADING EDGE (RH) (SEE FIG. 8, ITEM 18)		RF
	65-32173-4	. PARTS INSTL, FRONT SPAR STATION 195.66 WING LEADING EDGE (LH) (SEE FIG. 8, ITEM 17)		RF
		. PARTS INSTL, FRONT SPAR STATION 195.66 WING LEADING EDGE (RH) (SEE FIG. 8, ITEM 17)		
1	NAS1106-30	. . . BOLT.		1
2	NAS1106-9	. . . BOLT.		1
3	AN960PD616	. . . WASHER.		1
3A	AN960PD616L	. . . WASHER, (USED ON 65-32173-3 AND -4)		1
3B	AN960PD616	. . . WASHER, (USED ON 65-32172-3 AND -4)		1
4	NAS679A6W	. . . NUT, (USED ON 65-32172-3 AND -4)		2
4A	NAS679A6	. . . NUT, (USED ON 65-32173-3 AND -4)		2
5	BACS40816-16	. . . SHIM.		AR
6	69-25342-2	. . . FITTING, WING LEADING EDGE TENSION TIE ROD END. . .		1
7	69-25341-2	. . . FITTING, TENSION TIE ROD END.		1
		ATTACHING PARTS		
	BACB30FM6-12	. . . BOLT.		6
	BACC30M6	. . . COLLAR.		6
8	65-32172-12	. . . TUBE, FRONT SPAR STATION 174.70 WING LEADING EDGE PARTS TENSION TIE (USED ON 65-32172-3 AND -4)		1
8A	65-32173-6	. . . TUBE, FRONT SPAR STATION 195.66 WING LEADING EDGE PARTS TENSION TIE (USED ON 65-32173-3 AND -4)		1
	65-32172-1	. RIB INSTL, FRONT SPAR STATION 174.70 WING LEADING EDGE (LH) (SEE FIG. 8, ITEM 77)		RF
	65-32172-2	. RIB INSTL, FRONT SPAR STATION 174.70 WING LEADING EDGE (RH) (SEE FIG. 8, ITEM 77)		RF
	65-32173-1	. RIB INSTL, FRONT SPAR STATION 195.66 WING LEADING EDGE (LH) (SEE FIG. 8, ITEM 76)		RF
	65-32173-2	. RIB INSTL, FRONT SPAR STATION 195.66 WING LEADING EDGE (RH) (SEE FIG. 8, ITEM 76)		RF
9	65-32172-7	. . . FITTING ASSY, FRONT SPAR STATION 174.70 WING. LEADING EDGE RIB HINGE SUPPORT (OPTIONAL 65-32172-19) (USED ON 65-32172-1)		1
9	65-32172-8	. . . FITTING ASSY, FRONT SPAR STATION 174.70 WING. LEADING EDGE RIB HINGE SUPPORT (OPTIONAL 65-32172-20) (USED ON 65-32172-2)		1
9	65-32172-19	. . . FITTING ASSY, FRONT SPAR STATION 174.70 WING. LEADING EDGE RIB HINGE SUPPORT (OPTIONAL TO 65-32172-7) (USED ON 65-32172-1)		1
9	65-32172-20	. . . FITTING ASSY, FRONT SPAR STATION 174.70 WING. LEADING EDGE RIB HINGE SUPPORT (OPTIONAL TO 65-32172-8) (USED ON 65-32172-2)		1
10	65-32173-7	. . . FITTING ASSY, FRONT SPAR STATION 195.66 WING. LEADING EDGE RIB HINGE SUPPORT (OPTIONAL 65-32173-23) (USED ON 65-32173-1)		1
10	65-32173-8	. . . FITTING ASSY, FRONT SPAR STATION 195.66 WING. LEADING EDGE RIB HINGE SUPPORT (OPTIONAL 65-32173-24) (USED ON 65-32173-2)		1
10	65-32173-23	. . . FITTING ASSY, FRONT SPAR STATION 195.66 WING. LEADING EDGE RIB HINGE SUPPORT (OPTIONAL TO 65-32173-7) (USED ON 65-32173-1)		1
10	65-32173-24	. . . FITTING ASSY, FRONT SPAR STATION 195.66 WING. LEADING EDGE RIB HINGE SUPPORT (OPTIONAL TO 65-32173-8) (USED ON 65-32173-2)		1
11	69-14580-12	. . . BUSHING, HINGE SUPPORT FITTING (USED ON 65-32172-7, -8, 65-32173-7 AND -8)		2
12	69-14580-10	. . . BUSHING, HINGE SUPPORT FITTING (USED ON 65-32172-7, -8, 65-32173-7 AND -8)		1
12	69-14580-9	. . . BUSHING, HINGE SUPPORT FITTING (USED ON 65-32172-19, -20, 65-32173-23 AND -24)		1
13	69-14435-6	. . . BUSHING, PRESS FIT FLANGED (USED ON 65-32172-7, -8, 65-32173-7 AND -8)		1
13	69-14435-5	. . . BUSHING, PRESS FIT FLANGED (USED ON 65-32172-19, -20, 65-32173-23 AND -24)		1
14	65-32172-9	. . . FITTING, FRONT SPAR STATION 174.70 WING LEADING EDGE RIB HINGE SUPPORT (USED ON 65-32172-7)		1
14	65-32172-10	. . . FITTING, FRONT SPAR STATION 174.70 WING LEADING EDGE RIB HINGE SUPPORT (USED ON 65-32172-8)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

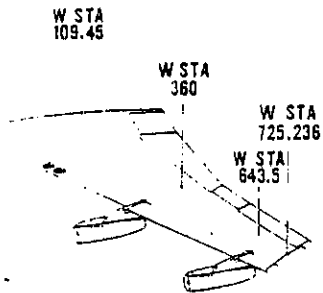

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
28 14	65-32172-21	.	.	.	FITTING, FRONT SPAR STATION 174.70 WING LEADING .					1
					EDGE RIB HINGE SUPPORT (USED ON 65-32172-19)					
14	65-32172-22	.	.	.	FITTING, FRONT SPAR STATION 174.70 WING LEADING .					1
					EDGE RIB HINGE SUPPORT (USED ON 65-32172-20)					
14	65-32173-9	.	.	.	FITTING, FRONT SPAR STATION 195.66 WING LEADING .					1
					EDGE RIB HINGE SUPPORT (USED ON 65-32173-7)					
14	65-32173-10	.	.	.	FITTING, FRONT SPAR STATION 195.66 WING LEADING .					1
					EDGE RIB HINGE SUPPORT (USED ON 65-32173-8)					
14	65-32173-25	.	.	.	FITTING, FRONT SPAR STATION 195.66 WING LEADING .					1
					EDGE RIB HINGE SUPPORT (USED ON 65-32173-23)					
14	65-32173-26	.	.	.	FITTING, FRONT SPAR STATION 195.66 WING LEADING .					1
					EDGE RIB HINGE SUPPORT (USED ON 65-32173-24)					
MISSING ITEM NUMBERS ARE NOT APPLICABLE										



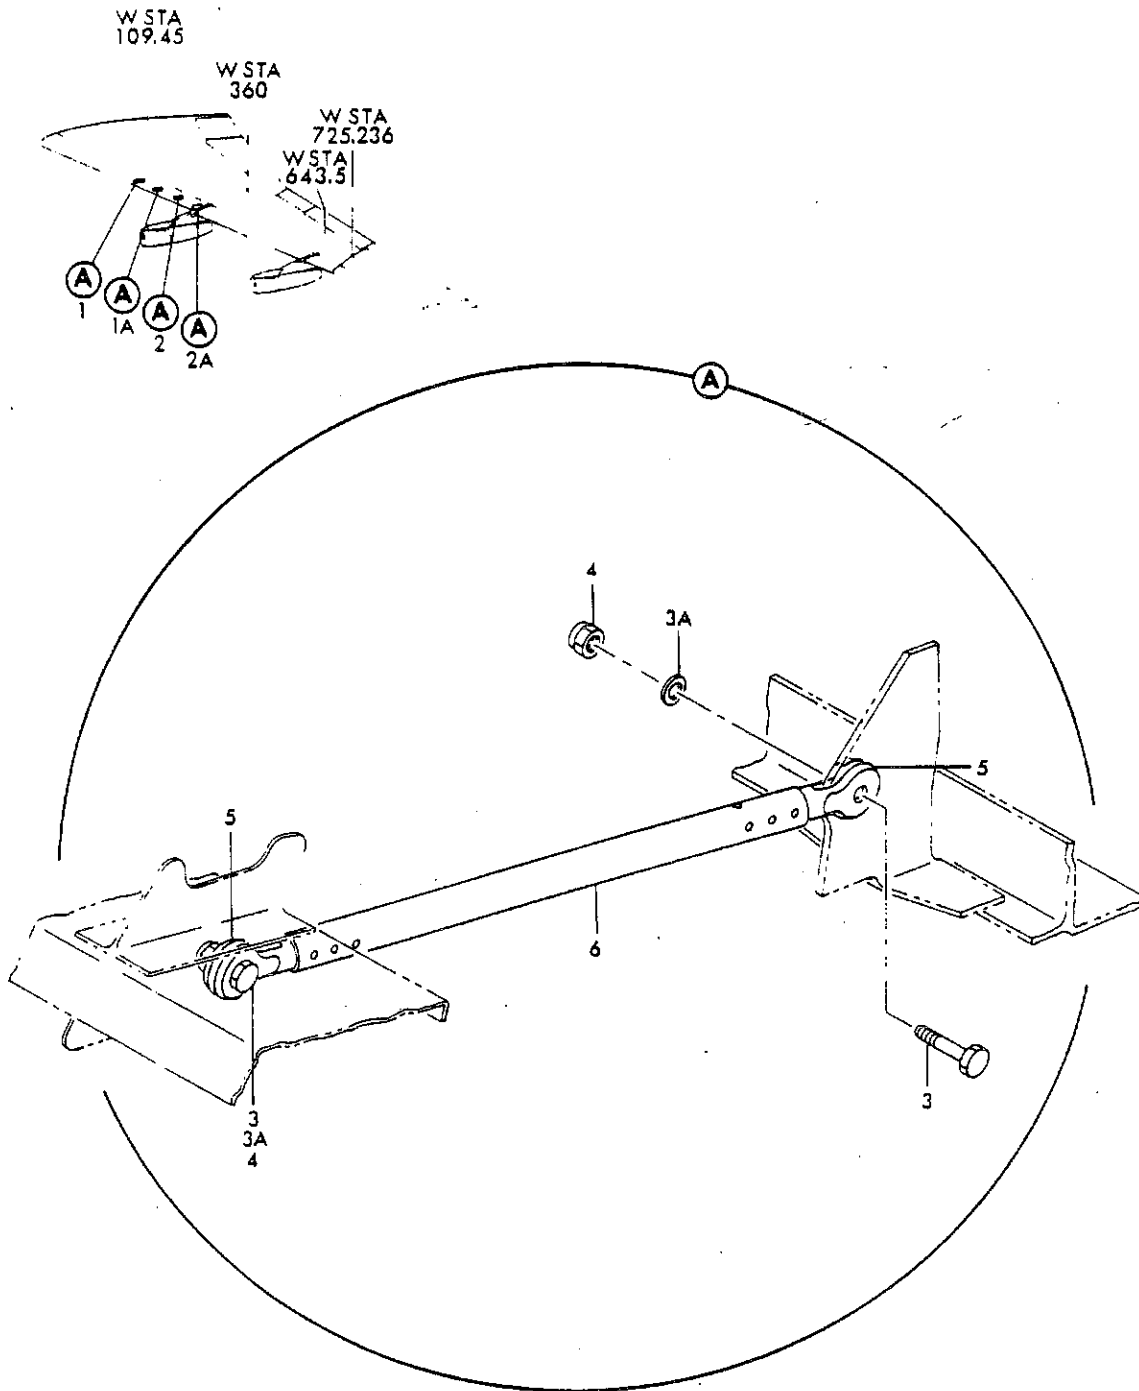


FIGURE 29. PARTS INSTL. WING LEADING EDGE

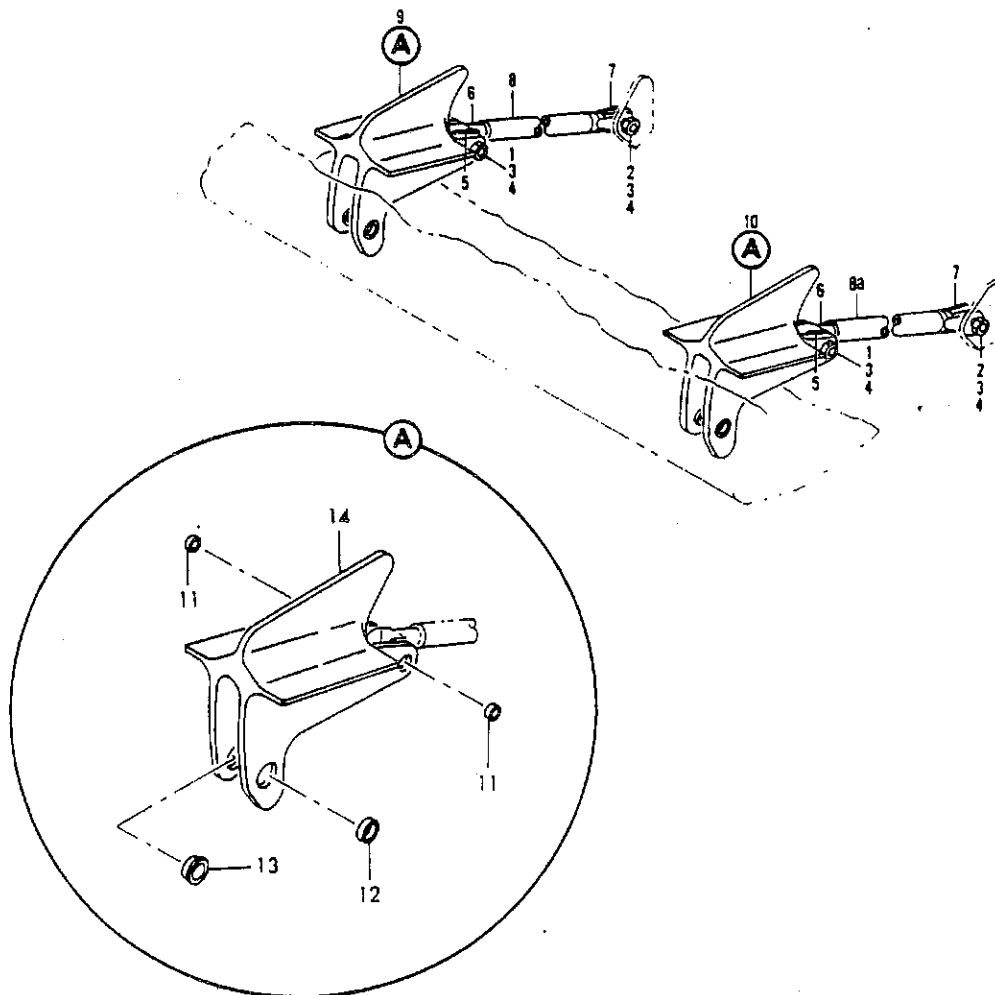

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
29	1	65-32176-3	PARTS INSTL, FRONT SPAR STATION 247.39 WING LEADING . . EDGE (LH) (SEE FIG. 8, ITEM 14)		RF
	1	65-32176-4	PARTS INSTL, FRONT SPAR STATION 247.39 WING LEADING . . EDGE (RH) (SEE FIG. 8, ITEM 14)		RF
	1A	65-32178-3	PARTS INSTL, FRONT SPAR STATION 281.13 WING LEADING . . EDGE (LH) (SEE FIG. 8, ITEM 12)		RF
	1A	65-32178-4	PARTS INSTL, FRONT SPAR STATION 281.13 WING LEADING . . EDGE (RH) (SEE FIG. 8, ITEM 12)		RF
	2	65-32181-3	PARTS INSTL, FRONT SPAR STATION 329.82 WING LEADING . . EDGE (LH) (SEE FIG. 8, ITEM 9)		RF
	2	65-32181-4	PARTS INSTL, FRONT SPAR STATION 329.82 WING LEADING . . EDGE (RH) (SEE FIG. 8, ITEM 9)		RF
	2A	65-32183-3	PARTS INSTL, FRONT SPAR STATION 358.68 WING LEADING . . EDGE (LH) (SEE FIG. 8, ITEM 7)		RF
	2A	65-32183-4	PARTS INSTL, FRONT SPAR STATION 358.68 WING LEADING . . EDGE (RH) (SEE FIG. 8, ITEM 7)		RF
	3	NAS1105-BW	. BOLT.		2
	3A	AN960PD516	. WASHER.		2
	4	NAS679A5W	. NUT, (USED ON 65-32176-3, -4, 65-32178-3 AND -4). . .		2
	4	NAS679A5	. NUT, (USED ON 65-32181-3, -4, 65-32183-3 AND -4). . .		2
	5	69-25340-1	. FITTING, TENSION TIE ROD END.		2
			ATTACHING PARTS		
		BACB30FM6-12	. BOLT.		6
		BACC30M6	. COLLAR.		6
	6	65-32176-23	. TUBE, FRONT SPAR STATION 247.39 WING LEADING EDGE . . TENSION TIE (USED ON 65-32176-3 AND -4)		1
	6	65-32178-13	. TUBE, FRONT SPAR STATION 281.13 WING LEADING EDGE . . TENSION TIE (USED ON 65-32178-3 AND -4)		1
	6	65-32181-12	. TUBE, FRONT SPAR STATION 329.82 WING LEADING EDGE . . TENSION TIE (USED ON 65-32181-3 AND -4)		1
	6	65-32183-15	. TUBE, FRONT SPAR STATION 358.68 WING LEADING EDGE . . TENSION TIE (USED ON 65-32183-3 AND -4)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

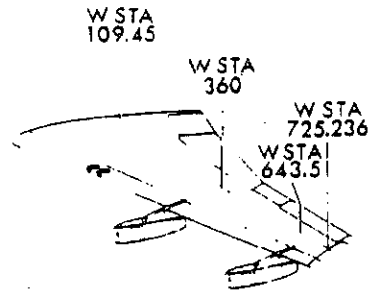

PARTS INSTL. WING LEADING EDGE
FIGURE 30. RIB INSTL. WING LEADING EDGE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
30		PARTS INSTL, WING LEADING EDGE.		
	65-32177-3	RIB INSTL, WING LEADING EDGE.		RF
	65-32177-4	. PARTS INSTL, FRONT SPAR STATION 264.46 WING LEADING EDGE (LH) (SEE FIG. 8, ITEM 13)		RF
	65-32182-3	. PARTS INSTL, FRONT SPAR STATION 264.46 WING LEADING EDGE (RH) (SEE FIG. 8, ITEM 13)		RF
	65-32182-4	. PARTS INSTL, FRONT SPAR STATION 345.46 WING LEADING EDGE (LH) (SEE FIG. 8, ITEM 8)		RF
		. PARTS INSTL, FRONT SPAR STATION 345.46 WING LEADING EDGE (RH) (SEE FIG. 8, ITEM 8)		
1	NAS1108-30W	. . . BOLT.		1
2	NAS1108-14W	. . . BOLT.		1
3	AN960C816L	. . . WASHER.		2
4	NAS1022A8	. . . NUT.		2
5	BACS40B16-16	. . . SHIM.		AR
6	69-25342-1	. . . FITTING, WING LEADING EDGE TENSION TIE ROD END. . .		1
7	69-25341-1	. . . FITTING, TENSION TIE ROD END.		1
		ATTACHING PARTS		
	BACB30FM8-14	. . . BOLT.		6
	BACC30M8	. . . COLLAR.		6
8	65-32177-27	. . . TUBE, FRONT SPAR STATION 264.46 WING LEADING EDGE PARTS TENSION TIE (USED ON 65-32177-3 AND -4)		1
8A	65-32182-19	. . . TUBE, FRONT SPAR STATION 345.46 WING LEADING EDGE PARTS TENSION TIE (USED ON 65-32182-3 AND -4)		1
	65-32177-1	. RIB INSTL, FRONT SPAR STATION 264.46 WING LEADING EDGE (LH) (SEE FIG. 8, ITEM 73)		RF
	65-32177-2	. RIB INSTL, FRONT SPAR STATION 264.46 WING LEADING EDGE (RH) (SEE FIG. 8, ITEM 73)		RF
	65-32182-1	. RIB INSTL, FRONT SPAR STATION 345.46 WING LEADING EDGE (LH) (SEE FIG. 8, ITEM 62)		RF
	65-32182-2	. RIB INSTL, FRONT SPAR STATION 345.46 WING LEADING EDGE (RH) (SEE FIG. 8, ITEM 62)		RF
9	65-32177-7	. . . FITTING ASSY, FRONT SPAR STATION 264.46 WING. LEADING EDGE RIB HINGE SUPPORT (OPTIONAL 65-32177-23) (USED ON 65-32177-1)		1
9	65-32177-23	. . . FITTING ASSY, FRONT SPAR STATION 264.46 WING. LEADING EDGE RIB HINGE SUPPORT (OPTIONAL TO 65-32177-7) (USED ON 65-32177-1)		1
9	65-32177-8	. . . FITTING ASSY, FRONT SPAR STATION 264.46 WING. LEADING EDGE RIB HINGE SUPPORT (OPTIONAL 65-32177-24) (USED ON 65-32177-2)		1
9	65-32177-24	. . . FITTING ASSY, FRONT SPAR STATION 264.46 WING. LEADING EDGE RIB HINGE SUPPORT (OPTIONAL TO 65-32177-8) (USED ON 65-32177-2)		1
10	65-32182-7	. . . FITTING ASSY, FRONT SPAR STATION 345.46 WING. LEADING EDGE RIB HINGE SUPPORT (OPTIONAL 65-32182-25) (USED ON 65-32182-1)		1
10	65-32182-25	. . . FITTING ASSY, FRONT SPAR STATION 345.46 WING. LEADING EDGE RIB HINGE SUPPORT (OPTIONAL TO 65-32182-7) (USED ON 65-32182-1)		1
10	65-32182-8	. . . FITTING ASSY, FRONT SPAR STATION 345.46 WING. LEADING EDGE RIB HINGE SUPPORT (OPTIONAL 65-32182-26) (USED ON 65-32182-2)		1
10	65-32182-26	. . . FITTING ASSY, FRONT SPAR STATION 345.46 WING. LEADING EDGE RIB HINGE SUPPORT (OPTIONAL TO 65-32182-8) (USED ON 65-32182-2)		1
11	69-14580-13	. . . BUSHING, HINGE SUPPORT FITTING (USED ON 65-32177-7, -8, 65-32182-7 AND -8)		2
12	69-14580-10	. . . BUSHING, HINGE SUPPORT FITTING (USED ON 65-32177-7, -8, 65-32182-7 AND -8)		1
12	69-14580-9	. . . BUSHING, HINGE SUPPORT FITTING (USED ON 65-32177-23, -24, 65-32182-25 AND -26)		1
13	69-14435-6	. . . BUSHING, PRESS FIT FLANGED (USED ON 65-32177-7, -8, 65-32182-7 AND -8)		1
13	69-14435-5	. . . BUSHING, PRESS FIT FLANGED (USED ON 65-32177-23, -24, 65-32182-25 AND -26)		1
14	65-32177-21	. . . FITTING, FRONT SPAR STATION 264.46 WING LEADING EDGE RIB HINGE SUPPORT (USED ON 65-32177-7)		1
14	65-32177-22	. . . FITTING, FRONT SPAR STATION 264.46 WING LEADING EDGE RIB HINGE SUPPORT (USED ON 65-32177-8)		1
14	65-32177-25	. . . FITTING, FRONT SPAR STATION 264.46 WING LEADING EDGE RIB HINGE SUPPORT (USED ON 65-32177-23)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

BOEING **707**
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
30 14	65-32177-26	.	.	.	FITTING, FRONT SPAR STATION 264.46 WING LEADING	.				1
14	65-32182-21	.	.	.	EDGE RIB HINGE SUPPORT (USED ON 65-32177-24)	.				1
14	65-32182-22	.	.	.	FITTING, FRONT SPAR STATION 345.46 WING LEADING	.				1
14	65-32182-27	.	.	.	EDGE RIB HINGE SUPPORT (USED ON 65-32182-7)	.				1
14	65-32182-28	.	.	.	FITTING, FRONT SPAR STATION 345.46 WING LEADING	.				1
		.	.	.	EDGE RIB HINGE SUPPORT (USED ON 65-32182-8)	.				1
		.	.	.	FITTING, FRONT SPAR STATION 345.46 WING LEADING	.				1
		.	.	.	EDGE RIB HINGE SUPPORT (USED ON 65-32182-25)	.				1
		.	.	.	FITTING, FRONT SPAR STATION 345.46 WING LEADING	.				1
		.	.	.	EDGE RIB HINGE SUPPORT (USED ON 65-32182-26)	.				1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										


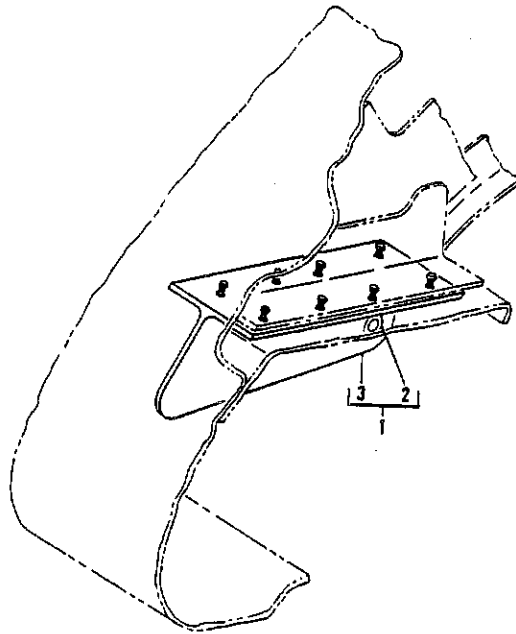


FIGURE 31A. RIB INSTL, FRONT SPAR STATION 329.82 WING LEADING EDGE

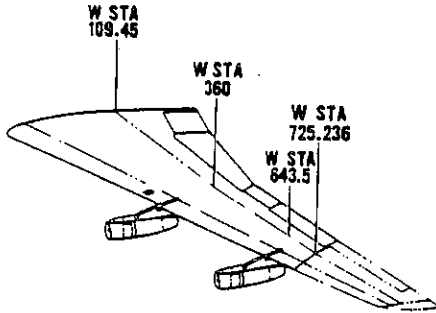

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
31A	65-32181-1		RIB INSTL, FRONT SPAR STATION 329.82 WING LEADING EDGE (LH) (SEE FIG. 8, ITEM 61A)		RF
	65-32181-2		RIB INSTL, FRONT SPAR STATION 329.82 WING LEADING EDGE (RH) (SEE FIG. 8, ITEM 61A)		RF
1	69-25355-1		. FITTING ASSY, TENSION TIE SUPPORT (LH ONLY)		1
1	69-25355-2		. FITTING ASSY, TENSION TIE SUPPORT (RH ONLY)		1
	BACB30DX6-4		ATTACHING PARTS		
	NAS1080-6		. BOLT.		8
			. COLLAR.		8
2	66-31054-9		. . BUSHING, STRUCTURAL PRESSED FIT		1
3	69-25355-3		. . FITTING, SUPPORT TENSION TIE (LH ONLY).		1
3	69-25355-4		. . FITTING, SUPPORT TENSION TIE (RH ONLY).		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 05

WING TO BODY FAIRINGS AND FILLETS


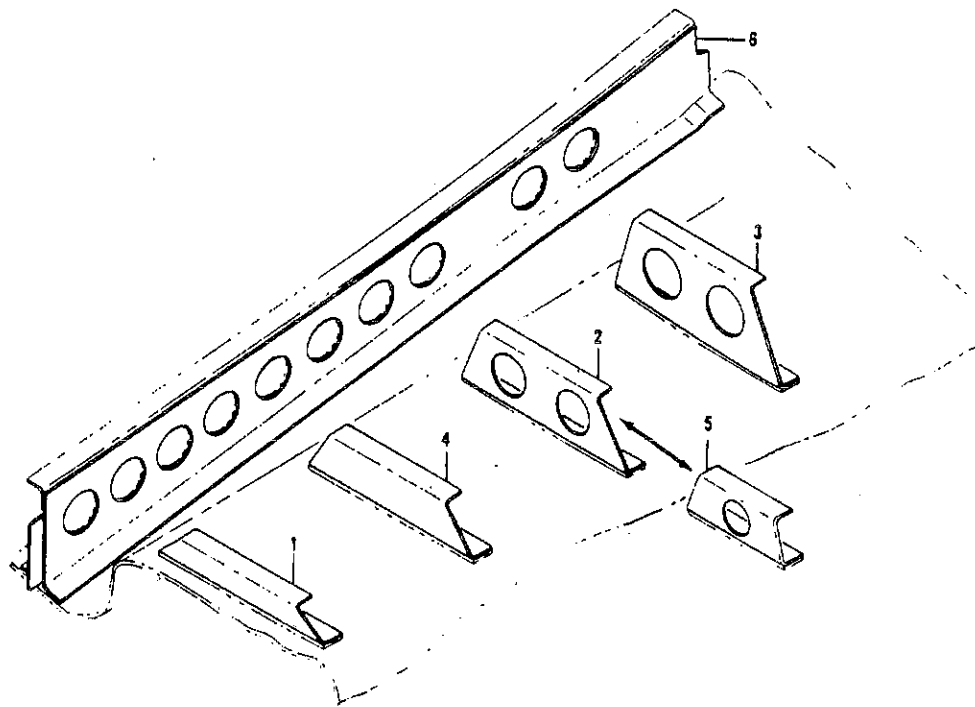


FIGURE L, FAIRING INSTL, BODY STATION 600K TO 620 WING TO BODY

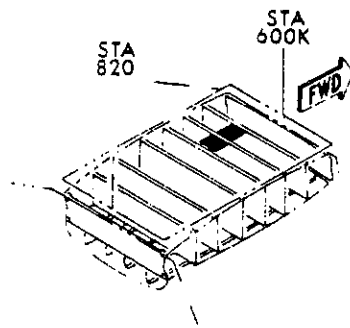

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1	65-1030-51		FAIRING INSTL, BODY STATION 600K TO 620 WING TO BODY. . (LH) (SEE 57-6, FIG. 12, ITEM 4)		RF
	65-1030-52		FAIRING INSTL, BODY STATION 600K TO 620 WING TO BODY. . (RH) (SEE 57-6, FIG. 12, ITEM 4)		RF
5	65-1030-56		. SUPPORT, BODY STATION 600K TO 620 WING TO BODY. . . . FAIRING		1
	NAS517-3-3		ATTACHING PARTS		3
	BACS40814-83		. SCREW		1
			. SHIM.		1
6	65-1030-59		. BEAM ASSY, BODY STATION 600K TO 620 WING TO BODY. . . FAIRING (LH ONLY)		1
6	65-1030-60		. BEAM ASSY, BODY STATION 600K TO 620 WING TO BODY. . . FAIRING (RH ONLY)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

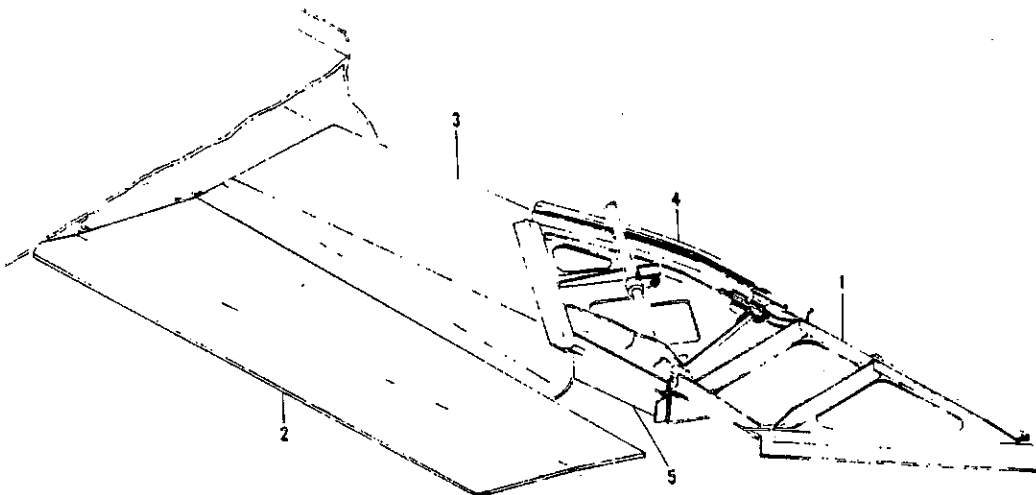
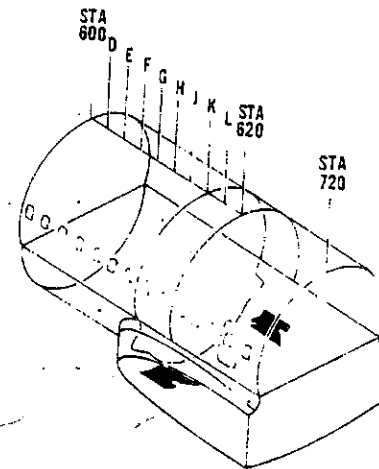


FIGURE 3. FAIRING INSTL, BODY STATION 600K TO 620 WING TO BODY

MISSING ITEM NUMBERS ARE NOT APPLICABLE

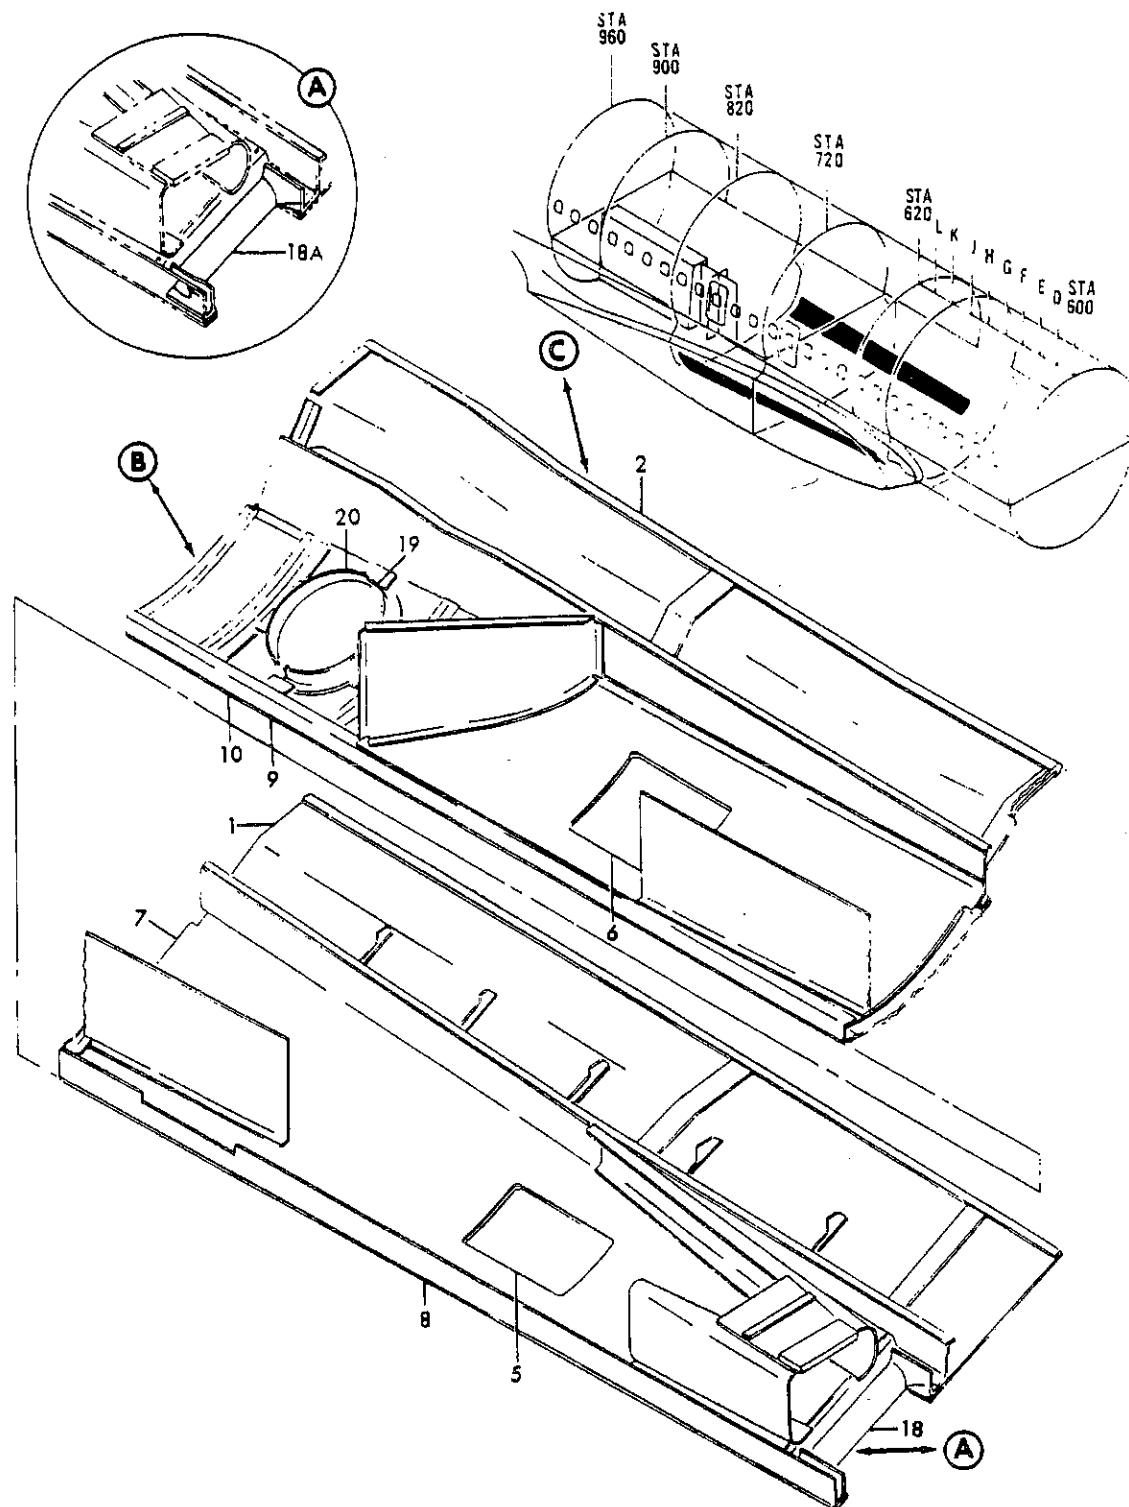


FIGURE 4. FAIRING INSTL, BODY STATION 620 TO 820 WING TO BODY (SHEET 1)

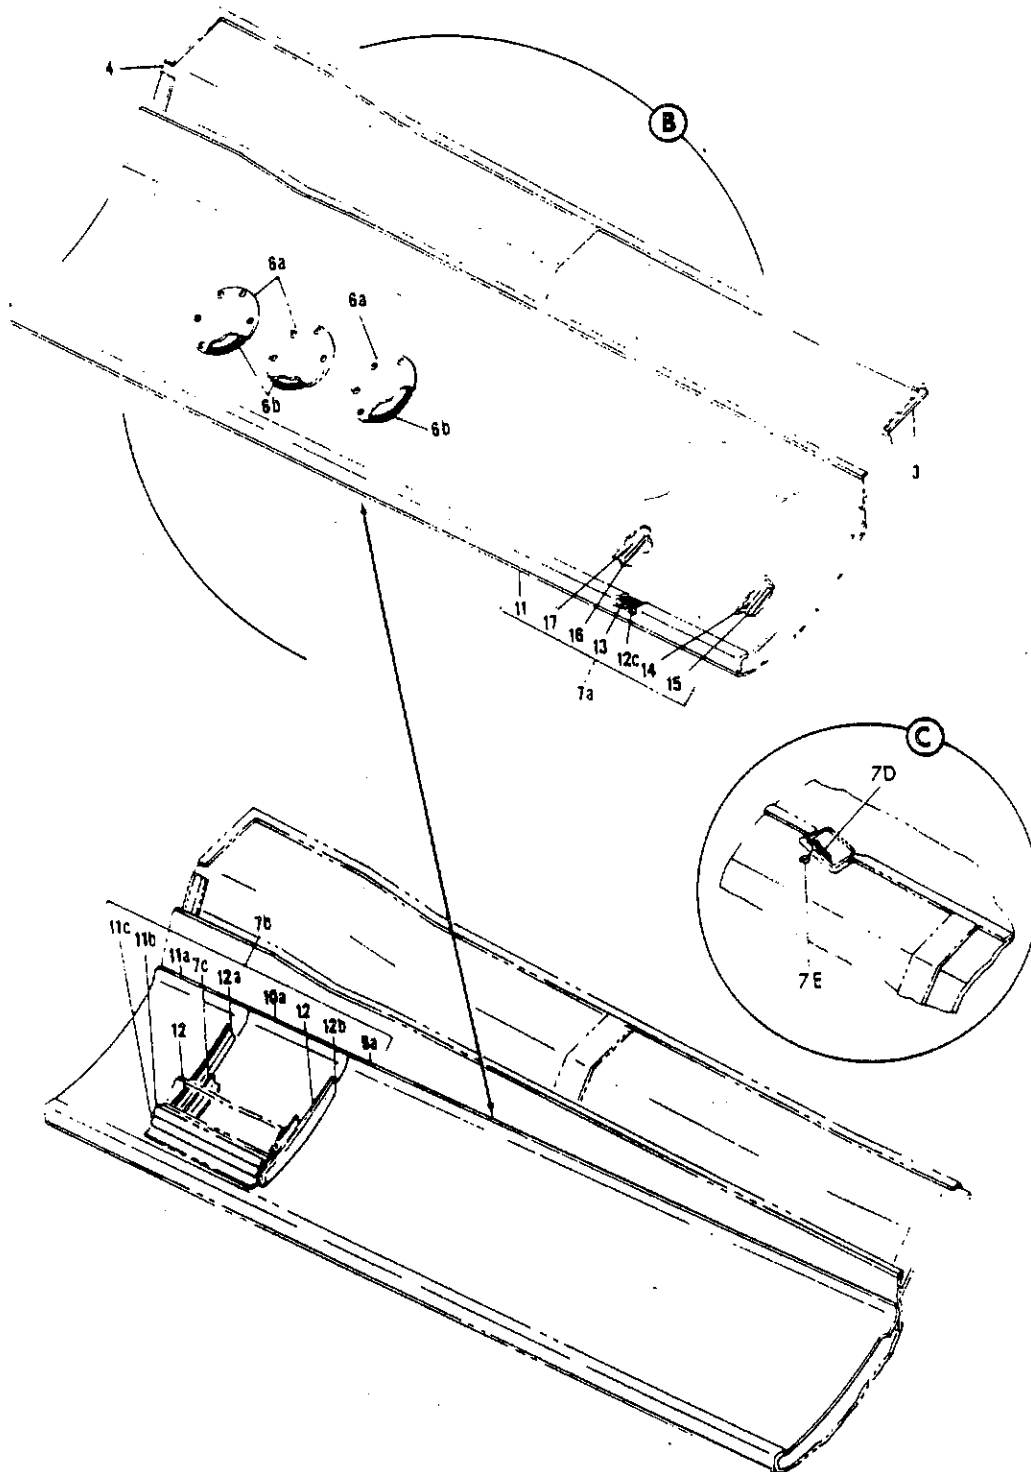


FIGURE 4. FAIRING INSTL. BODY STATION 620 TO 820 WING TO BODY (SHEET 2)

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
4	65-1031-1	FAIRING INSTL, BODY STATION 620 TO 820 WING TO BODY . . (LH) (SEE 57-1, FIG. 1, ITEM 1)		RF
	65-1031-2	FAIRING INSTL, BODY STATION 620 TO 820 WING TO BODY . . (RH) (SEE 57-1, FIG. 1, ITEM 1)		RF
1	65-1031-1001	. COVER ASSY, FORWARD GAP (LH ONLY)		1
1	65-1031-1002	. COVER ASSY, FORWARD GAP (RH ONLY)		1
	NAS517-3-1	ATTACHING PARTS		AR
	NAS517-3-2	. SCREW		AR
3	65-1031-1013	. COVER ASSY, (LH ONLY)		1
3	65-1031-1014	. COVER ASSY, (RH ONLY)		1
4	65-1031-1017	. COVER ASSY, (LH ONLY)		1
4	65-1031-1018	. COVER ASSY, (RH ONLY)		1
	NAS517-3-2	ATTACHING PARTS		AR
		. SCREW		
5	65-1031-17	. DOOR ASSY, BODY STATION 620 TO 820 WING TO BODY . . . FAIRING FORWARD (LH ONLY)		1
5	65-1031-18	. DOOR ASSY, BODY STATION 620 TO 820 WING TO BODY . . . FAIRING FORWARD (RH ONLY)		1
	NAS517-3-2	ATTACHING PARTS		22
		. SCREW		
6	65-1031-15	. DOOR ASSY, BODY STATION 620 TO 820 WING TO BODY . . . FAIRING AFT (LH ONLY)		1
6	65-1031-16	. DOOR ASSY, BODY STATION 620 TO 820 WING TO BODY . . . FAIRING AFT (RH ONLY)		1
	NAS517-3-2	ATTACHING PARTS		24
		. SCREW		
7A	65-1031-447	. FAIRING ASSY, BODY STATION 620 TO 820 WING TO BODY . . (LH ONLY)		1
7B	65-1031-448	. FAIRING ASSY, BODY STATION 620 TO 820 WING TO BODY . . (RH ONLY)		1
	NAS517-3-2	ATTACHING PARTS		22
		. SCREW		
7C	65-1031-511	. DOOR ASSY, BODY STATION 778.25 TO 792.99 WING TO . . BODY FAIRING (LH ONLY)		1
7C	65-1031-512	. DOOR ASSY, BODY STATION 778.25 TO 792.99 WING TO . . BODY FAIRING (RH ONLY)		1
	NAS517-3-2	ATTACHING PARTS		22
	NAS517-3-2	. SCREW		22
8	65-1031-83	. SKIN, BODY STATION 623 TO 716 FAIRING OUTER (LH . . ONLY)		1
9A	65-1031-505	. SKIN, BODY STATION 716 TO 793 FAIRING OUTER (LH . . ONLY)		1
10A	65-1031-503	. SKIN, BODY STATION 793 TO 807 FAIRING OUTER (LH . . ONLY)		1
11A	65-1031-501	. SKIN, BODY STATION 807 TO 820 FAIRING OUTER (LH . . ONLY)		1
11A	65-1031-84	. SKIN, BODY STATION 632 TO 716 FAIRING OUTER (RH . . ONLY)		1
11A	65-1031-506	. SKIN, BODY STATION 716 TO 793 FAIRING OUTER (RH . . ONLY)		1
11A	65-1031-504	. SKIN, BODY STATION 793 TO 807 FAIRING OUTER (RH . . ONLY)		1
11A	65-1031-502	. SKIN, BODY STATION 807 TO 820 FAIRING OUTER (RH . . ONLY)		1
11B	69-17338-3	. RETAINER, WING TO BODY FAIRING DOUBLER SEAL		1
11C	65-1031-529	. SEAL, BODY STATION 792.99 TO 807.63 FAIRING RUBBER DOOR (EXTRUSION NO. BAC1521-542 X 14.0) (LH ONLY)		1
11C	65-1031-530	. SEAL, BODY STATION 792.99 TO 807.63 FAIRING RUBBER DOOR (EXTRUSION NO. BAC1521-542 X 14.0) (RH ONLY)		1
12	65-1031-520	. RETAINER, BODY STATIONS 792.99 AND 807.63 FAIRING . DOOR SEAL		2
12A	65-1031-528	. SEAL, BODY STATION 807.63 FAIRING RUBBER DOOR . . . (EXTRUSION NO. BAC1521-542 X 14.0) (LH ONLY)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

BOEING
707
Intercontinental

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
4	12A	65-1031-527	. . SEAL, BODY STATION 807.63 FAIRING RUBBER DOOR . . . (EXTRUSION NO. BAC1521-542 X 14.0) (RH ONLY)								1
	12B	65-1031-527	. . SEAL, BODY STATION 792.99 FAIRING RUBBER DOOR . . . (EXTRUSION NO. BAC1521-542 X 14.0) (LH ONLY)								1
	12B	65-1031-528	. . SEAL, BODY STATION 792.99 FAIRING RUBBER DOOR . . . (EXTRUSION NO. BAC1521-542 X 14.0) (RH ONLY)								1
	18A	65-23311-1	. SCOOP ASSY, WING LEADING EDGE BODY FAIRING (LH ONLY)								1
	18A	65-23311-2	. SCOOP ASSY, WING LEADING EDGE BODY FAIRING (RH ONLY)								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											


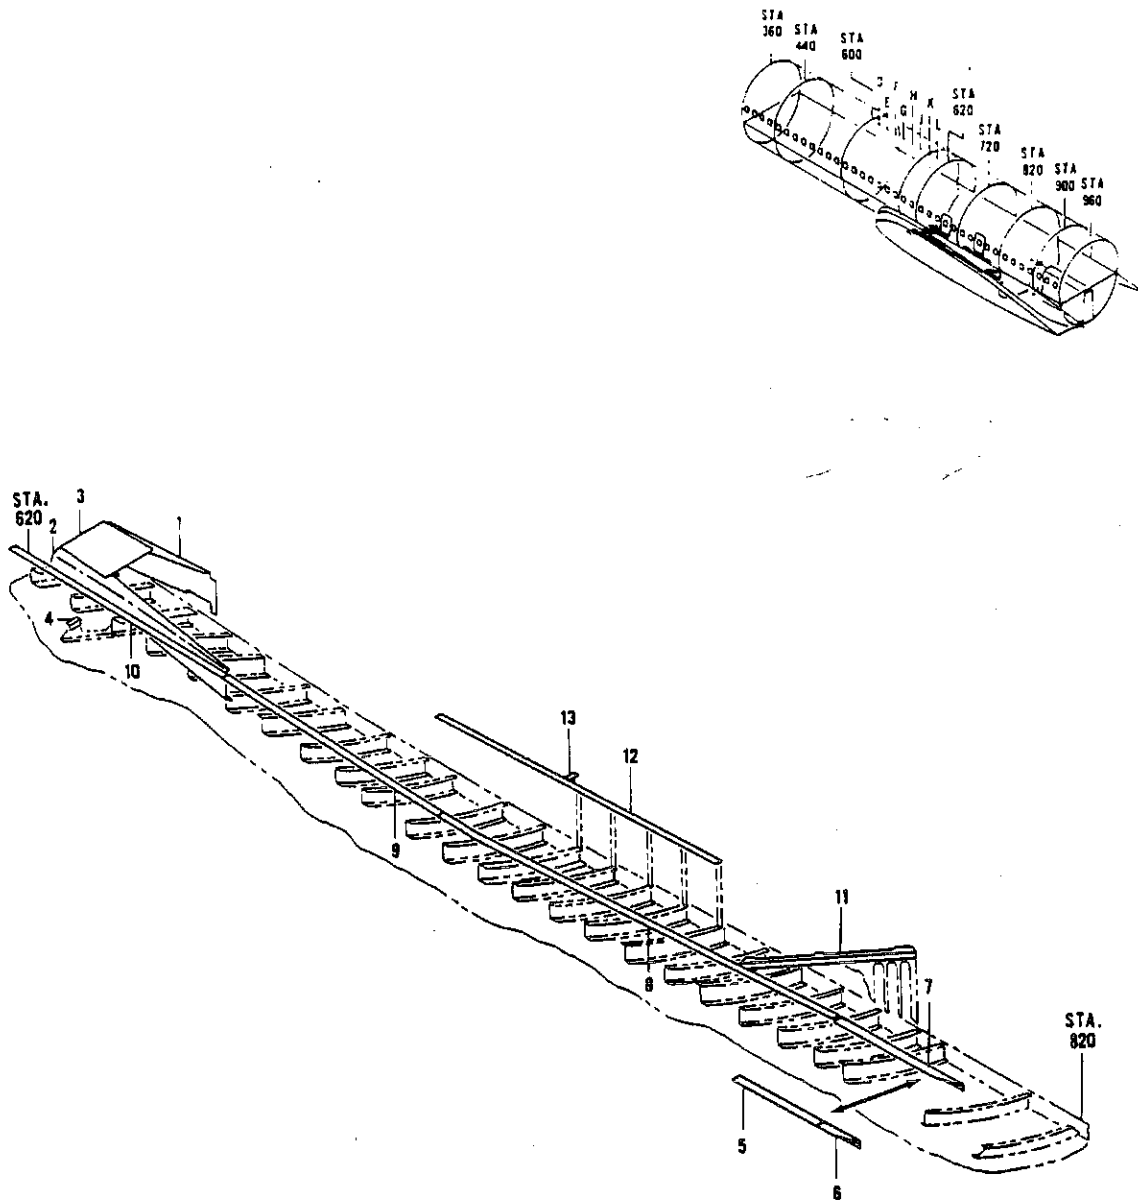


FIGURE 5. FAIRING INSTL, BODY STATION 620 TO 820 WING TO BODY

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5	65-1031-3		FAIRING INSTL, BODY STATION 620 TO 820 WING TO BODY . . (LH) (SEE 57-6, FIG. 12, ITEM 5)		RF
	65-1031-4		FAIRING INSTL, BODY STATION 620 TO 820 WING TO BODY . . (RH) (SEE 57-6, FIG. 12, ITEM 5)		RF
4	65-1031-194		. ANGLE, BODY STATION 620 TO 820 WING TO BODY RADIUS. .		1
5	65-1031-291		. ANGLE, BODY STATION 620 TO 820 WING TO BODY BUTTOCK . LINE 62.0 ATTACHING (LH ONLY)		1
5	65-1031-292		. ANGLE, BODY STATION 620 TO 820 WING TO BODY BUTTOCK . LINE 62.0 ATTACHING (RH ONLY)		1
6	65-1031-293		. ANGLE, BODY STATION 620 TO 820 WING TO BODY BUTTOCK . LINE 62.0 ATTACHING (LH ONLY)		1
7	65-1031-294		. ANGLE, BODY STATION 620 TO 820 WING TO BODY BUTTOCK . LINE 62.0 ATTACHING (RH ONLY)		1
8	65-1031-235		. ANGLE, BODY STATION 620 TO 820 WING TO BODY BEAM. . . ATTACHING (LH ONLY)		1
8	65-1031-236		. ANGLE, BODY STATION 620 TO 820 WING TO BODY BEAM. . . ATTACHING (RH ONLY)		1
9	65-1031-237		. ANGLE, BODY STATION 620 TO 820 WING TO BODY BEAM. . . ATTACHING (LH ONLY)		1
9	65-1031-238		. ANGLE, BODY STATION 620 TO 820 WING TO BODY BEAM. . . ATTACHING (RH ONLY)		1
10	65-1031-143		. ANGLE, BODY STATION 620 TO 820 WING TO BODY BEAM. . . ATTACHING (LH ONLY)		1
10	65-1031-144		. ANGLE, BODY STATION 620 TO 820 WING TO BODY BEAM. . . ATTACHING (RH ONLY)		1
11	65-1031-145		. ANGLE, BODY STATION 620 TO 820 WING TO BODY BULKHEAD ATTACHING (LH ONLY)		1
11	65-1031-146		. ANGLE, BODY STATION 620 TO 820 WING TO BODY BULKHEAD ATTACHING (RH ONLY)		1
12	65-1031-339		. ANGLE, BODY STATION 620 TO 820 WING TO BODY SPLITTER ATTACHING (LH ONLY)	0150	1
12	65-1031-340		. ANGLE, BODY STATION 620 TO 820 WING TO BODY SPLITTER ATTACHING (RH ONLY)	0150	1
13	65-1031-62		. ANGLE, BODY STATION 620 TO 820 WING TO BODY BULKHEAD ATTACHING	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

R
R
R
R
R

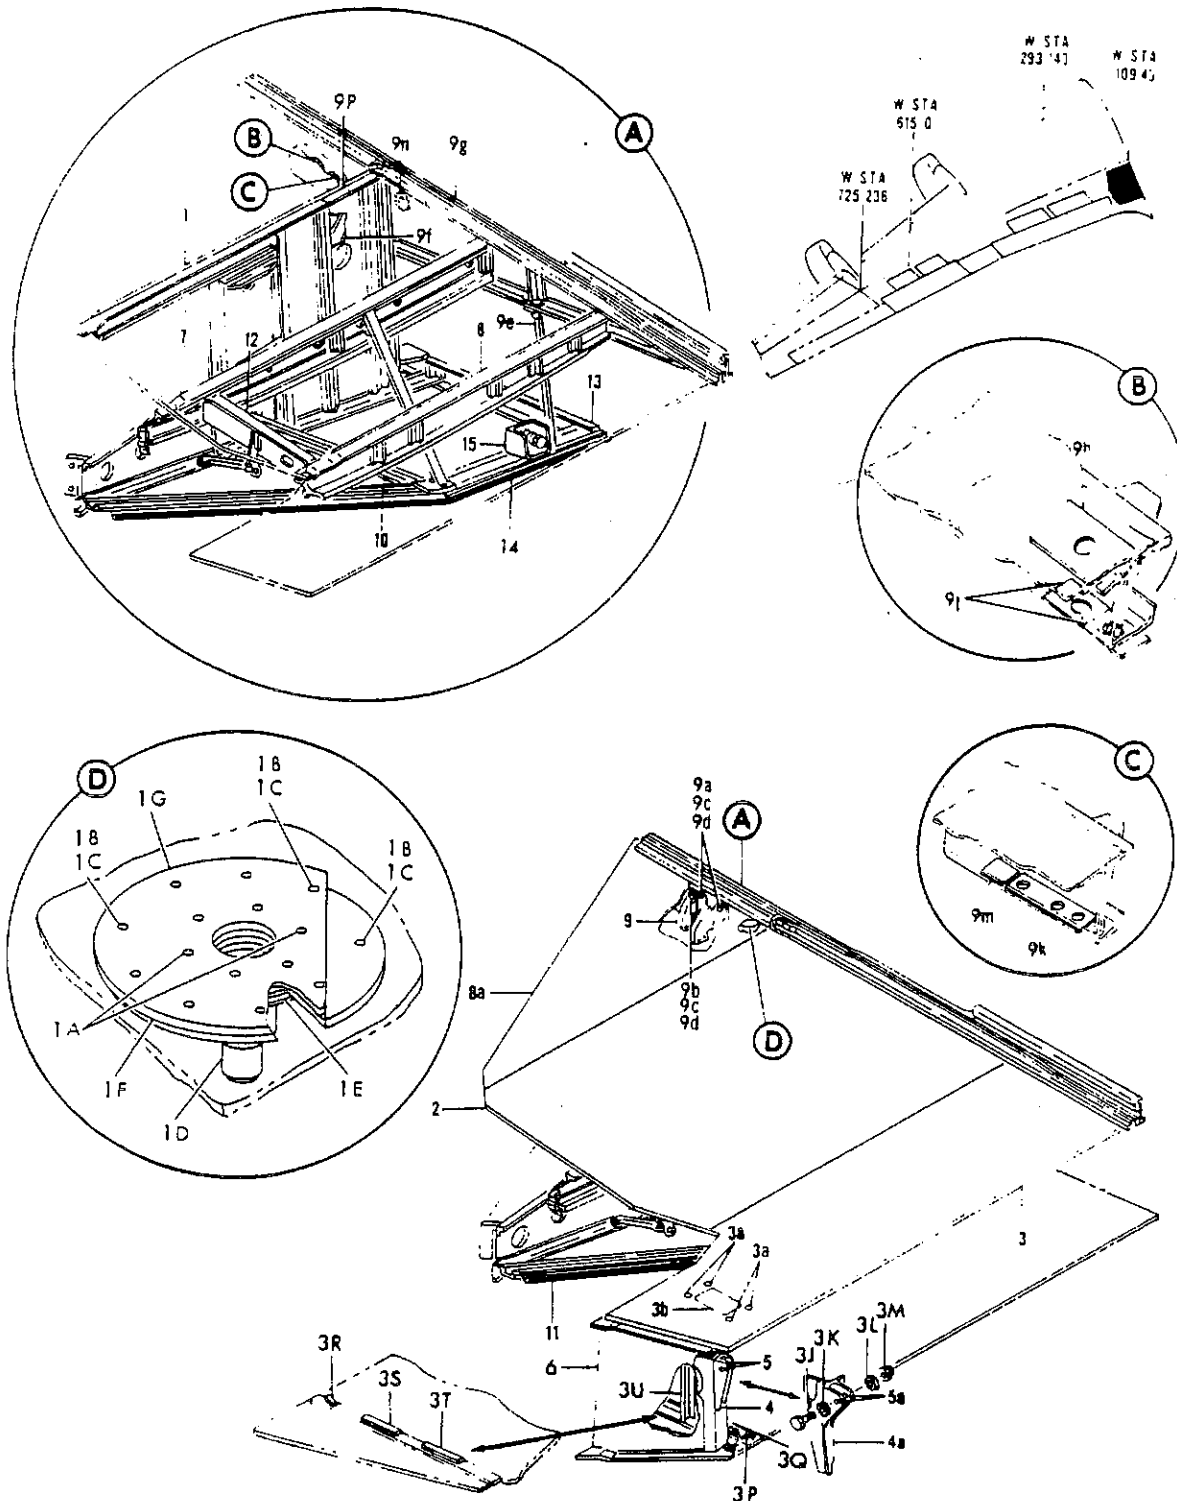



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
6	65-3673-1		TRAILING EDGE INSTL, REAR SPAR TO BODY STATION 899 WING FILLET (LH) (SEE 57-3, FIG. 12, ITEM 107)		RF
	65-3673-2		TRAILING EDGE INSTL, REAR SPAR TO BODY STATION 899 WING FILLET (RH) (SEE 57-3, FIG. 12, ITEM 107)		RF
	64-1180-1		. BEAM INSTL, BODY STATION 844.00 TRAILING EDGE (LH . . ONLY)		1
	64-1180-2		. BEAM INSTL, BODY STATION 844.00 TRAILING EDGE (RH . . ONLY)		1
1	64-1180-61		. . BEAM ASSY, (LH ONLY)	0101	1
1	64-1180-71		. . BEAM ASSY, (LH ONLY)	0299	1
1	64-1180-69		. . BEAM ASSY, BODY STATION 844.00 TRAILING EDGE (RH. . ONLY)	0101	1
1	64-1180-72		. . BEAM ASSY, (RH ONLY)	0299	1
	64-1181-1		. PANEL INSTL, BODY STATION 844 TO 899 UPPER SURFACE. . (LH ONLY)		1
	64-1181-2		. PANEL INSTL, BODY STATION 844 TO 899 UPPER SURFACE. . (RH ONLY)		1
2	64-1181-35		. . PANEL ASSY, BODY STATION 844 TO 899 UPPER SURFACE . FORWARD (LH ONLY)	0101	1
2	64-1181-49		. . PANEL ASSY, FORWARD (LH ONLY)	0251	1
2	64-1181-49		. . PANEL ASSY, FORWARD (LH ONLY) (OPTIONAL TO AND FOR REPLACEMENT ORDER 64-1181-57)	5299	1
2	64-1181-57		. . PANEL ASSY, FORWARD (LH ONLY) (OPTIONAL AND REPLACEMENT FOR 64-1181-49)	5299	1
2	64-1181-36		. . PANEL ASSY, BODY STATION 844 TO 899 UPPER SURFACE . FORWARD (RH ONLY)	0101	1
2	64-1181-50		. . PANEL ASSY, FORWARD (RH ONLY)	0251	1
2	64-1181-50		. . PANEL ASSY, FORWARD (RH ONLY) (OPTIONAL TO AND FOR REPLACEMENT ORDER 64-1181-58)	5299	1
2	64-1181-58		. . PANEL ASSY, FORWARD (RH ONLY) (OPTIONAL AND REPLACEMENT FOR 64-1181-50)	5299	1
3	64-1181-37		. . PANEL ASSY, BODY STATION 844 TO 899 UPPER SURFACE . AFT (LH ONLY)	0151	1
3	64-1181-37		. . PANEL ASSY, BODY STATION 844 TO 899 UPPER SURFACE . AFT (LH ONLY) (OPTIONAL TO AND FOR REPLACEMENT ORDER 64-1181-55)	5299	1
3	64-1181-55		. . PANEL ASSY, BODY STATION 844 TO 899 UPPER SURFACE . AFT (LH ONLY) (OPTIONAL AND REPLACEMENT FOR 64-1181-37)	5299	1
3	64-1181-38		. . PANEL ASSY, BODY STATION 844 TO 899 UPPER SURFACE . AFT (RH ONLY)	0151	1
3	64-1181-38		. . PANEL ASSY, BODY STATION 844 TO 899 UPPER SURFACE . AFT (RH ONLY) (OPTIONAL TO AND FOR REPLACEMENT ORDER 64-1181-56)	5299	1
3	64-1181-56		. . PANEL ASSY, BODY STATION 844 TO 899 UPPER SURFACE . AFT (RH ONLY) (OPTIONAL AND REPLACEMENT FOR 64-1181-38)	5299	1
3A	NAS333PA4		. . BOLT.		4
3B	69-11783		. . DOOR ASSY, UPPER WING PANEL ACCESS.		1
	64-1197-1		. RIB INSTL, SECTION 16 FLAP CLEARANCE FORWARD (LH. . . ONLY)		1
	64-1197-2		. RIB INSTL, SECTION 16 FLAP CLEARANCE FORWARD (RH. . . ONLY)		1
3J	BACB3ONE9-26		. . BOLT.		1
3K	MS20002C9		. . WASHER.		1
3L	MS20002-9		. . WASHER.		1
3M	BACN1089L		. . NUT		1
	64-1197-91		. . PANEL ASSY, SECTION 16 FLAP CLEARANCE FORWARD RIB . (LH ONLY) (OPTIONAL TO 64-1197-129)	5299	1
	64-1197-129		. . PANEL ASSY, SECTION 16 FLAP CLEARANCE FORWARD RIB . (LH ONLY) (OPTIONAL 64-1197-91)	5299	1
	64-1197-91		. . PANEL ASSY, SECTION 16 FLAP CLEARANCE FORWARD RIB . (LH ONLY)	0151	1
	64-1197-92		. . PANEL ASSY, SECTION 16 FLAP CLEARANCE FORWARD RIB . (RH ONLY) (OPTIONAL TO 64-1197-130)	5299	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
6	64-1197-130	. . PANEL ASSY, SECTION 16 FLAP CLEARANCE FORWARD RIB . (RH ONLY) (OPTIONAL 64-1197-92)	5299	1
	64-1197-92	. . PANEL ASSY, SECTION 16 FLAP CLEARANCE FORWARD RIB . (RH ONLY)	0151	1
3P	64-1197-103	. . . SEAL, SECTION 16 FLAP CLEARANCE FORWARD RIB PANEL RUBBER (EXTRUSION NO. BAC1530-11 X 16.7 IN. LG) (LH ONLY)	0151	1
3P	64-1197-133	. . . SEAL, (EXTRUSION NO.; BAC1530-11 X 16.7 IN. LG) . . (LH ONLY)	5299	1
3P	64-1197-104	. . . SEAL, SECTION 16 FLAP CLEARANCE FORWARD RIB PANEL RUBBER (EXTRUSION NO. BAC1530-11 X 16.7 IN. LG) (RH ONLY)	0151	1
3P	64-1197-134	. . . SEAL, (EXTRUSION NO.; BAC1530-11 X 16.7 IN. LG) . . (RH ONLY)	5299	1
	NAS514P632-5	ATTACHING PARTS		
	AN960PD6L	. . . SCREW		9
	NAS679A06W	. . . WASHER		9
		. . . NUT		9
3R	64-1197-114	. . . RETAINER, SECTION 16 FLAP CLEARANCE FORWARD RIB . PANEL SEAL		1
3S	64-1197-113	. . . RETAINER, SECTION 16 FLAP CLEARANCE FORWARD RIB . PANEL SEAL		1
3T	64-1197-110	. . . RETAINER, SECTION 16 FLAP CLEARANCE FORWARD RIB . PANEL SEAL		1
3U	69-5171-1	. . . CHANNEL, FORWARD SECTION 16 FLAP CLEARANCE RIB . (LH ONLY)		1
3U	69-5171-2	. . . CHANNEL, FORWARD SECTION 16 FLAP CLEARANCE RIB . (RH ONLY)		1
	MS20470D6	ATTACHING PARTS		
	MS20470D5	. . . RIVET		1
		. . . RIVET		2
4A	65-22422-1	. . . FITTING ASSY, TRAILING EDGE SUPPORT OUTBOARD FORK (LH ONLY) (OPTIONAL 65-22422-5)	0150	1
4A	65-22422-2	. . . FITTING ASSY, TRAILING EDGE SUPPORT OUTBOARD FORK (RH ONLY) (OPTIONAL 65-22422-6)	0150	1
4A	65-22422-5	. . . FITTING ASSY, TRAILING EDGE SUPPORT OUTBOARD FORK (LH ONLY) (OPTIONAL TO 65-22422-1)	0150	1
4A	65-22422-6	. . . FITTING ASSY, TRAILING EDGE SUPPORT OUTBOARD FORK (RH ONLY) (OPTIONAL TO 65-22422-2)	0150	1
4A	65-22422-5	. . . FITTING ASSY, TRAILING EDGE SUPPORT OUTBOARD FORK (LH ONLY)	5199	1
4A	65-22422-6	. . . FITTING ASSY, TRAILING EDGE SUPPORT OUTBOARD FORK (RH ONLY)	5199	1
5A	66-13663-2	. . . BUSHING, PLAIN PRESSFIT STEEL		2
6	64-1197-93	. . RIB ASSY, SECTION 16 FLAP CLEARANCE FORWARD (LH . . ONLY)		1
6	64-1197-94	. . RIB ASSY, SECTION 16 FLAP CLEARANCE FORWARD (RH . . ONLY)		1
	65-3678-1	. BEAM INSTL, UPPER SURFACE TRAILING EDGE (LH ONLY) . .		1
	65-3678-2	. BEAM INSTL, UPPER SURFACE TRAILING EDGE (RH ONLY) . .		1
7	65-3678-29	. . BEAM ASSY, UPPER SURFACE TRAILING EDGE (LH ONLY) . .		1
7	65-3678-30	. . BEAM ASSY, UPPER SURFACE TRAILING EDGE (RH ONLY) . .		1
	65-3679-1	. BEAM INSTL, UPPER SURFACE TRAILING EDGE (LH ONLY) . .		1
	65-3679-2	. BEAM INSTL, UPPER SURFACE TRAILING EDGE (RH ONLY) . .		1
8	65-3679-25	. . BEAM ASSY, UPPER SURFACE TRAILING EDGE (LH ONLY) . .		1
8	65-3679-26	. . BEAM ASSY, UPPER SURFACE TRAILING EDGE (RH ONLY) . .		1
	65-3680-1	. PANEL INSTL, REAR SPAR TO BODY STATION 844 UPPER . . SURFACE (LH ONLY)		1
	65-3680-2	. PANEL INSTL, REAR SPAR TO BODY STATION 844 UPPER . . SURFACE (RH ONLY)		1
8A	65-3680-19	. . PANEL ASSY, REAR SPAR TO BODY STATION 844 UPPER . . SURFACE (LH ONLY)	0101	1
8A	65-3680-27	. . PANEL ASSY, (LH ONLY)	0251	1
8A	65-3680-27	. . PANEL ASSY, (LH ONLY) (OPTIONAL TO AND FOR REPLACEMENT ORDER 65-3680-31)	5299	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
6	8A	65-3680-31	. . PANEL ASSY, (LH ONLY) (OPTIONAL AND REPLACEMENT FOR 65-3680-27)	5299	1
	8A	65-3680-20	. . PANEL ASSY, REAR SPAR TO BODY STATION 844 UPPER SURFACE (RH ONLY)	0101	1
	8A	65-3680-28	. . PANEL ASSY, (RH ONLY)	0251	1
	8A	65-3680-28	. . PANEL ASSY, (RH ONLY) (OPTIONAL TO AND FOR REPLACEMENT ORDER 65-3680-32)	5299	1
	8A	65-3680-32	. . PANEL ASSY, (RH ONLY) (OPTIONAL AND REPLACEMENT FOR 65-3680-28)	5299	1
		65-19579-1	. BEAM INSTL, BODY BUTTOCK LINE 78.10 UPPER SURFACE . . TRAILING EDGE (LH ONLY)		1
		65-19579-2	. BEAM INSTL, BODY BUTTOCK LINE 78.10 UPPER SURFACE . . TRAILING EDGE (RH ONLY)		1
	9	65-29918-1	. . BRACKET INSTL, BODY BUTTOCK LINE 78.1 SPEED BRAKE . PULLEY (LH ONLY) (SEE 27-5, FIG. 6)		1
			ATTACHING PARTS		
	9A	NAS1103-7	. . BOLT		2
	9B	NAS1103-9	. . BOLT		1
	9C	AN960PD10L	. . WASHER		3
	9D	NAS679A3W	. . NUT		3

	9E	65-19579-27	. . ANGLE, BODY BUTTOCK LINE 78.10 UPPER SURFACE. . . . TRAILING EDGE BEAM ATTACHMENT (LH ONLY)		1
	9E	65-19579-28	. . ANGLE, BODY BUTTOCK LINE 78.10 UPPER SURFACE. . . . TRAILING EDGE BEAM ATTACHMENT (RH ONLY)		1
			ATTACHING PARTS		
		NAS1104-3W	. . BOLT		2
		AN960D416	. . WASHER		2
		NAS679A4W	. . NUT		2

	9F	65-19579-5	. . STRUT ASSY, BODY BUTTOCK LINE 78.10 UPPER SURFACE . TRAILING EDGE (LH ONLY)		1
	9F	65-19579-6	. . STRUT ASSY, BODY BUTTOCK LINE 78.10 UPPER SURFACE . TRAILING EDGE (RH ONLY)		1
	9G	65-19579-3	. . BEAM ASSY, BODY BUTTOCK LINE 78.10 UPPER SURFACE. . TRAILING EDGE (LH ONLY)		1
	9G	65-19579-4	. . BEAM ASSY, BODY BUTTOCK LINE 78.10 UPPER SURFACE. . TRAILING EDGE (RH ONLY)		1
	9H	66-17678-1	 STRIP, BODY BUTTOCK LINE 78.10 CONTROL CABLE RUB		1
	9J	66-17678-2	 STRIP, BODY BUTTOCK LINE 78.10 CONTROL CABLE RUB		2
	9K	66-17678-3	 STRIP, BODY BUTTOCK LINE 78.1 CONTROL CABLE RUB .		1
	9M	66-17678-4	 STRIP, BODY BUTTOCK LINE 78.1 CONTROL CABLE RUB . (LH ONLY)		1
	9P	65-3673-3	. . FILLER	5199	AR
		69-5253-1	. BEAM INSTL, LOWER SURFACE TRAILING EDGE (LH ONLY) . .		1
		69-5253-2	. BEAM INSTL, LOWER SURFACE TRAILING EDGE (RH ONLY) . .		1
	10	69-5253-3	. . BEAM ASSY, LOWER SURFACE TRAILING EDGE (LH ONLY). . .		1
	10	69-5253-4	. . BEAM ASSY, LOWER SURFACE TRAILING EDGE (RH ONLY). . .		1
	11	64-1196-109	. . PANEL INSTL, REAR SPAR TO BODY STATION 869.50 LOWER . SURFACE (LH ONLY) (SEE FIG. 7)		1
	11	64-1196-110	. . PANEL INSTL, REAR SPAR TO BODY STATION 869.50 LOWER . SURFACE (RH ONLY) (SEE FIG. 7)		1
	12	65-3677-1	. BEAM INSTL, TRAILING EDGE BODY BUTTOCK LINE 122.76. . DOOR ACTUATOR SUPPORT (LH ONLY) (SEE 32-2, FIG. 9)		1
	12	65-3677-2	. BEAM INSTL, TRAILING EDGE BODY BUTTOCK LINE 122.76. . DOOR ACTUATOR SUPPORT (RH ONLY) (SEE 32-2, FIG. 9)		1
	13	65-3674-21	. BEAM INSTL, LOWER SURFACE TRAILING EDGE (LH ONLY) . . (SEE FIG. 8)		1
	13	65-3674-22	. BEAM INSTL, LOWER SURFACE TRAILING EDGE (RH ONLY) . . (SEE FIG. 8)		1
	14	65-3675-1	. BEAM INSTL, BODY STATION 869.50 LOWER SURFACE TRAILING EDGE (LH ONLY) (SEE FIG. 9 AND 10)		1
	14	65-3675-2	. BEAM INSTL, BODY STATION 869.50 LOWER SURFACE TRAILING EDGE (RH ONLY) (SEE FIG. 9 AND 10)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

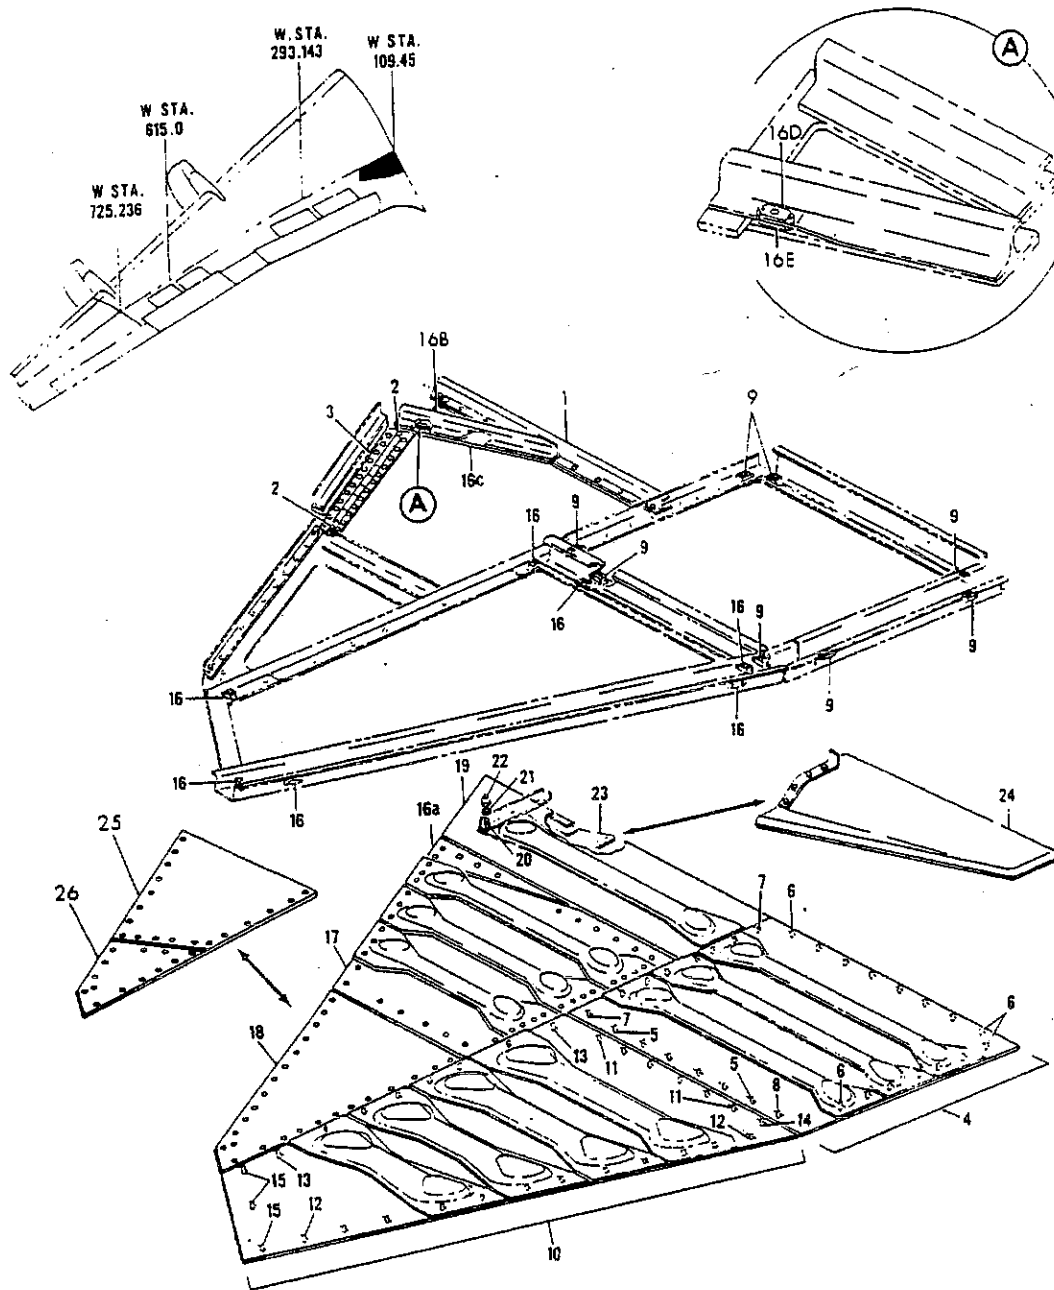


FIGURE 7. PANEL INSTL, REAR SPAR TO BODY STATION 869, 50 LOWER SURFACE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
7	64-1196-109	PANEL INSTL, REAR SPAR TO BODY STATION 869.50 LOWER . . SURFACE (LH) (SEE FIG. 6, ITEM 11)		RF
	64-1196-110	PANEL INSTL, REAR SPAR TO BODY STATION 869.50 LOWER . . SURFACE (RH) (SEE FIG. 6, ITEM 11)		RF
1	64-1196-99	. BEAM, REAR SPAR TO BODY STATION 869.50 LOWER SURFACE PANEL (LH ONLY)		1
1	64-1196-100	. BEAM, REAR SPAR TO BODY STATION 869.50 LOWER SURFACE PANEL (RH ONLY)		1
2	NAS561P3-5	. PIN		2
3	64-1196-105	. HINGE, REAR SPAR TO BODY STATION 869.50 LOWER SURFACE PANEL (LH ONLY)		1
3	64-1196-106	. HINGE, REAR SPAR TO BODY STATION 869.50 LOWER SURFACE PANEL (RH ONLY)		1
	NAS517-3-7	ATTACHING PARTS . SCREW		10
	NAS517-3-4	. SCREW		12
	AN960PD10	. WASHER		22
	NAS679A3W	. NUT		22
		-----*		
4	64-1196-63	. PANEL ASSY, REAR SPAR TO BODY STATION 869.50 LOWER. . SURFACE (LH ONLY)	0151	1
4	64-1196-64	. PANEL ASSY, REAR SPAR TO BODY STATION 869.50 LOWER. . SURFACE (RH ONLY)	0151	1
4	64-1196-63	. PANEL ASSY, REAR SPAR TO BODY STATION 869.50 LOWER. . SURFACE (LH ONLY) (OPTIONAL TO AND FOR REPLACEMENT ORDER 64-1196-143)	5299	1
4	64-1196-143	. PANEL ASSY, REAR SPAR TO BODY STATION 869.50 LOWER. . SURFACE (LH ONLY) (OPTIONAL AND REPLACEMENT FOR 64-1196-63)	5299	1
4	64-1196-64	. PANEL ASSY, REAR SPAR TO BODY STATION 869.50 LOWER. . SURFACE (RH ONLY) (OPTIONAL TO AND FOR REPLACEMENT ORDER 64-1196-144)	5299	1
4	64-1196-144	. PANEL ASSY, REAR SPAR TO BODY STATION 869.50 LOWER. . SURFACE (RH ONLY) (OPTIONAL AND REPLACEMENT FOR 64-1196-64)	5299	1
	NAS517-3-2	ATTACHING PARTS . SCREW		22
	NAS517-3-3	. SCREW		6
		-----*		
5	BACS2185FH22	. STUD.		6
6	BACS2185FH23	. STUD.		15
7	BACS2185FH24	. STUD.		8
8	BACS2185FH27	. STUD.		1
9	BACS20A5P	. SPRING.		30
10	64-1196-65	. PANEL ASSY, REAR SPAR TO BODY STATION 869.50 LOWER. . SURFACE (LH ONLY)	0151	1
10	64-1196-66	. PANEL ASSY, REAR SPAR TO BODY STATION 869.50 LOWER. . SURFACE (RH ONLY)	0151	1
10	64-1196-65	. PANEL ASSY, REAR SPAR TO BODY STATION 869.50 LOWER. . SURFACE (LH ONLY) (OPTIONAL TO AND FOR REPLACEMENT ORDER 64-1196-145)	5299	1
10	64-1196-145	. PANEL ASSY, REAR SPAR TO BODY STATION 869.50 LOWER. . SURFACE (LH ONLY) (OPTIONAL AND REPLACEMENT FOR 64-1196-65)	5299	1
10	64-1196-66	. PANEL ASSY, REAR SPAR TO BODY STATION 869.50 LOWER. . SURFACE (RH ONLY) (OPTIONAL TO AND FOR REPLACEMENT ORDER 64-1196-146)	5299	1
10	64-1196-146	. PANEL ASSY, REAR SPAR TO BODY STATION 869.50 LOWER. . SURFACE (RH ONLY) (OPTIONAL AND REPLACEMENT FOR 64-1196-66)	5299	1
11	BACS2185FH22	. STUD.		6
12	BACS2185FH23	. STUD.		12
13	BACS2185FH24	. STUD.		8
14	BACS2185FH27	. STUD.		1
15	BACS2185FH55	. STUD.		3
16	BACS20A5P	. SPRING.		30
16A	64-1196-103	. PANEL, REAR SPAR TO BODY STATION 869.50 LOWER SURFACE (LH ONLY)	0151	1
16A	64-1196-112	. PANEL, REAR SPAR TO BODY STATION 869.50 LOWER SURFACE (RH ONLY)	0151	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



DETAILED PARTS LIST
57-05-7
PAGE 2

RAF
NOV 21/91



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R R R	7 19	64-1196-91	.	PANEL ASSY, REAR SPAR TO BODY STATION 869.50 LOWER. . SURFACE (LH ONLY) (OPTIONAL TO AND FOR REPLACEMENT ORDER 64-1196-155)	5299	1
	19	64-1196-155	.	PANEL ASSY, REAR SPAR TO BODY STATION 869.50 LOWER. . SURFACE (LH ONLY) (OPTIONAL AND REPLACEMENT FOR 64-1196-91)	5299	1
	19	64-1196-92	.	PANEL ASSY, REAR SPAR TO BODY STATION 869.50 LOWER. . SURFACE (RH ONLY) (OPTIONAL TO AND FOR REPLACEMENT ORDER 64-1196-156)	5299	1
	19	64-1196-156	.	PANEL ASSY, REAR SPAR TO BODY STATION 869.50 LOWER. . SURFACE (RH ONLY) (OPTIONAL AND REPLACEMENT FOR 64-1196-92)	5299	1
		65-54070-1	.	FAIRING INSTL, BODY STATION 819 TO 844 LOWER SURFACE WING (LH ONLY)		1
		65-54070-2	.	FAIRING INSTL, BODY STATION 819 TO 844 LOWER SURFACE WING (RH ONLY)		1
	24	65-54070-13	.	PAN ASSY, BODY STATION 819 TO 844 LOWER SURFACE . . WING FAIRING (LH ONLY)		1
	24	65-54070-14	.	PAN ASSY, BODY STATION 819 TO 844 LOWER SURFACE . . WING FAIRING (RH ONLY)	5199	1
	24	65-54070-20	.	PAN ASSY, (RH ONLY)	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

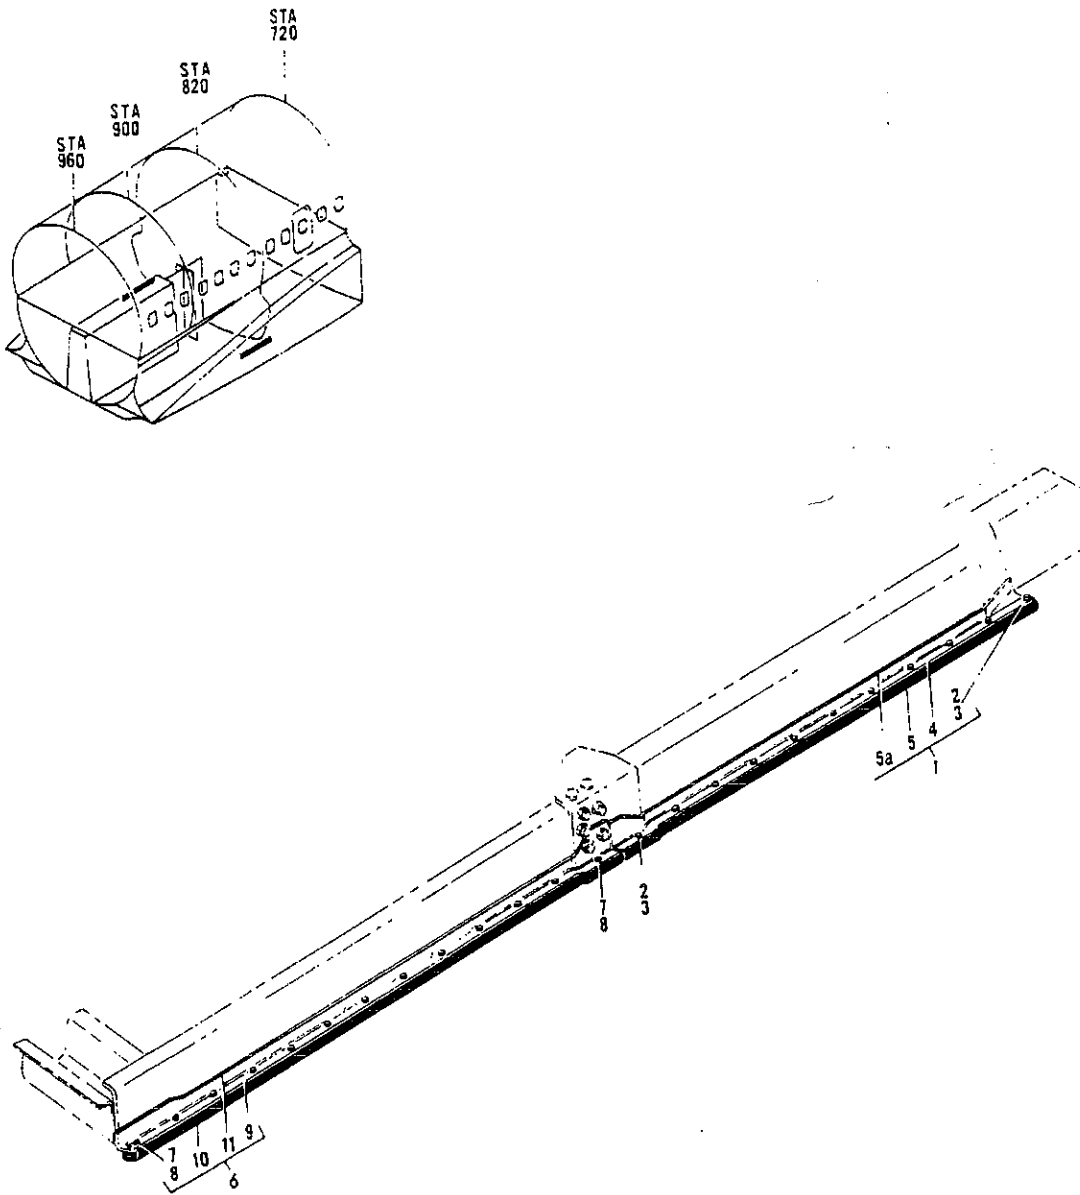


FIGURE 8. BEAM INSTL. BODY BUTTOCK LINE 70.50 LOWER SURFACE TRAILING EDGE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8	65-3674-21		BEAM INSTL, BODY BUTTOCK LINE 70.50 LOWER SURFACE . . .		RF
	65-3674-22		TRAILING EDGE BEAM (LH) (SEE FIG. 6, ITEM 13)		RF
1	65-3674-3		BEAM INSTL, BODY BUTTOCK LINE 70.50 LOWER SURFACE . . .		
			TRAILING EDGE BEAM (RH) (SEE FIG. 6, ITEM 13)		
1	65-3674-25		. SEAL ASSY, BODY BUTTOCK LINE 70.50 LOWER SURFACE. . .		1
			TRAILING EDGE BEAM (OPTIONAL 65-3674-25) (LH ONLY)		
1	65-3674-25		. SEAL ASSY, BODY BUTTOCK LINE 70.50 LOWER SURFACE. . .		1
			TRAILING EDGE BEAM (OPTIONAL TO 65-3674-3) (LH ONLY)		
1	65-3674-4		. SEAL ASSY, BODY BUTTOCK LINE 70.50 LOWER SURFACE. . .		1
			TRAILING EDGE BEAM (OPTIONAL 65-3674-26) (RH ONLY)		
1	65-3674-26		. SEAL ASSY, BODY BUTTOCK LINE 70.50 LOWER SURFACE. . .		1
			TRAILING EDGE BEAM (OPTIONAL TO 65-3674-4) (RH ONLY)		
	AN470D5		ATTACHING PARTS		
			. RIVET		15
2	NAS514P632-5		. . . SCREW		11
3	BACN10BY506W		. . . NUT		11
4	65-3674-9		. . . STRIP, BODY BUTTOCK LINE 70.50 LOWER SURFACE. . .		1
			TRAILING EDGE BEAM SEAL		
5	65-3674-7		. . SEAL, BODY BUTTOCK LINE 70.50 LOWER SURFACE . . .		1
			TRAILING EDGE BEAM RUBBER (EXTRUSION NO. BAC1521-569 X 21.80 IN. LG (OPTIONAL EXTRUSION NO. BAC1521-408 X 21.80 IN. LG)) (USED ON 65-3674-3 AND -4)		
5	65-3674-29		. . SEAL, BODY BUTTOCK LINE 70.50 LOWER SURFACE . . .		1
			TRAILING EDGE BEAM RUBBER (EXTRUSION NO. BAC1530-7 X 21.80 IN. LG) (USED ON 65-3674-25 AND -26)		
5A	65-3674-17		. . ANGLE, BODY BUTTOCK LINE 70.50 LOWER SURFACE. . .		1
			TRAILING EDGE BEAM SEAL (LH ONLY)		
5A	65-3674-18		. . ANGLE, BODY BUTTOCK LINE 70.50 LOWER SURFACE. . .		1
			TRAILING EDGE BEAM SEAL (RH ONLY)		
6	65-3674-31		. SEAL ASSY, (LH ONLY).		1
			(OPTIONALS 65-3674-5 AND -27)		
6	65-3674-5		. SEAL ASSY, (LH ONLY).		1
			(OPTIONAL TO 65-3674-31)		
6	65-3674-27		. SEAL ASSY, (LH ONLY).		1
			(OPTIONAL TO 65-3674-31)		
6	65-3674-32		. SEAL ASSY, (RH ONLY).		1
			(OPTIONALS 65-3674-6 AND -28)		
6	65-3674-6		. SEAL ASSY, (RH ONLY).		1
			(OPTIONAL TO 65-3674-32)		
6	65-3674-28		. SEAL ASSY, (RH ONLY).		1
			(OPTIONAL TO 65-3674-32)		
	AN470D6		ATTACHING PARTS		
	AN470D5		. RIVET		2
	NAS464P4A3		. RIVET		13
	AN960PD416		. BOLT		2
	BACN10BY54W		. WASHER.		2
			. NUT, (AFFECTED BY AD 64-18-1)		2
7	NAS514P632-5		. . . SCREW		13
8	BACN10BY506W		. . . NUT		13
9	65-3674-33		. . . STRIP, SEAL (USED ON 65-3674-31 AND -32).		1
10	65-3674-34		. . SEAL, RUBBER (EXTRUSION NO. BAC1530-7 X 25.40 IN. LG) (USED ON 65-3674-31 AND -32)		1
11	69-3608-11		. . ANGLE, (LH ONLY).		1
11	69-3608-12		. . ANGLE, (RH ONLY).		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

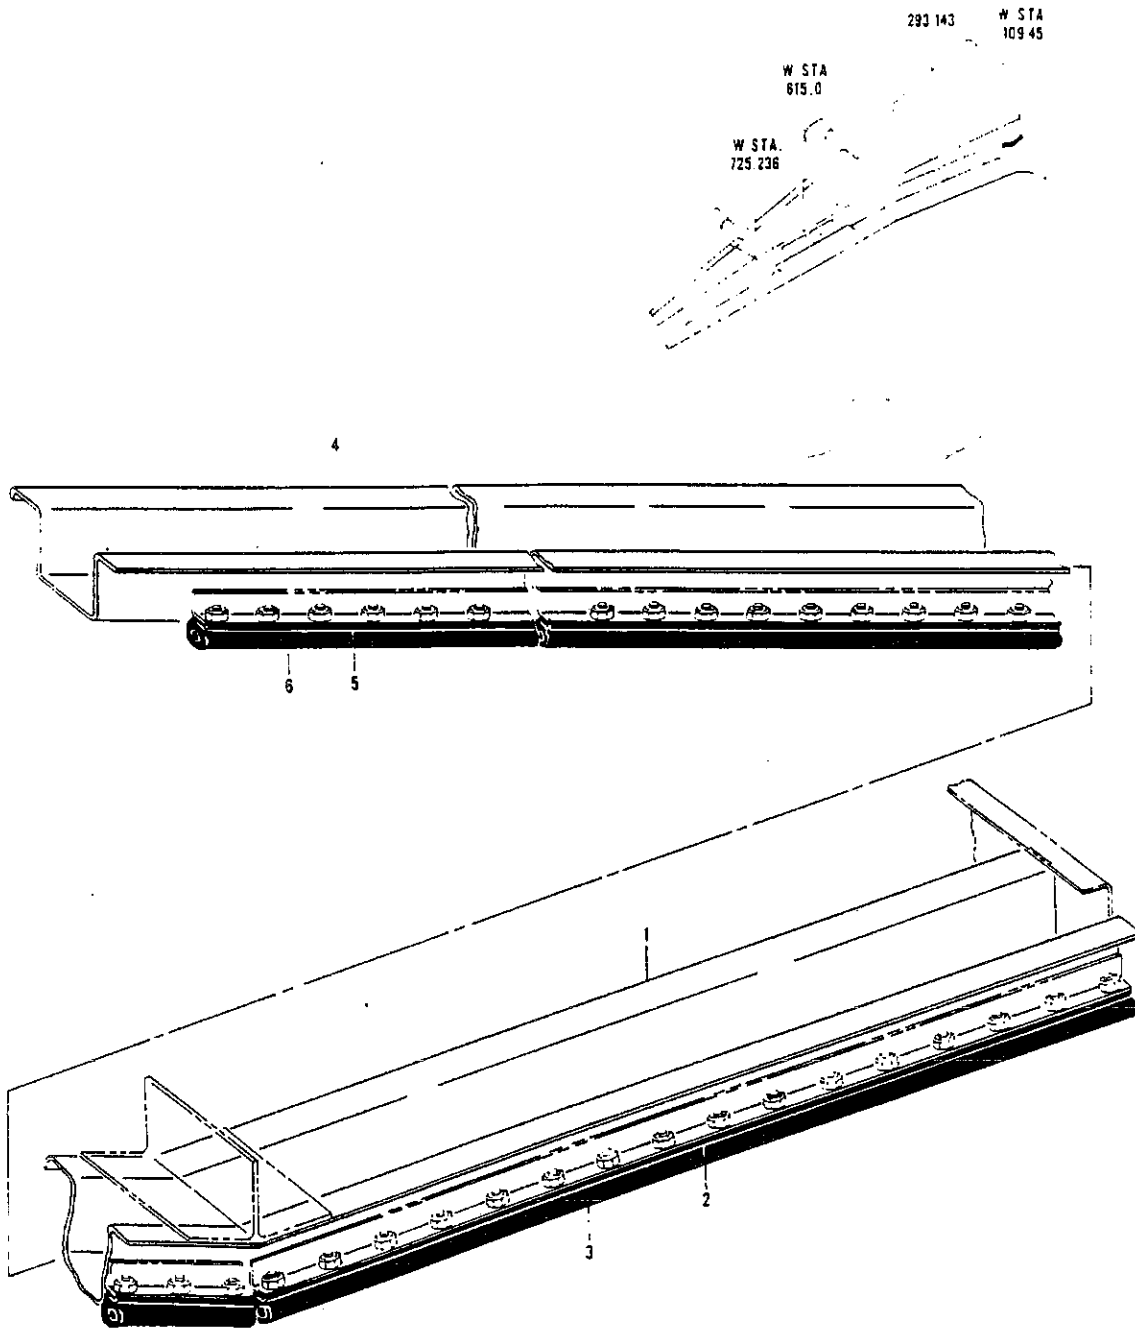


FIGURE 10. BEAM INSTL, BODY STATION 869.50 LOWER SURFACE TRAILING EDGE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
10	65-3675-1		BEAM INSTL, BODY STATION 869.50 LOWER SURFACE TRAILING EDGE (LH) (SEE FIG. 6, ITEM 14)		RF
	65-3675-2		BEAM INSTL, BODY STATION 869.50 LOWER SURFACE TRAILING EDGE (RH) (SEE FIG. 6, ITEM 14)		RF
1	65-3675-53		. CHANNEL ASSY, INBOARD (LH ONLY)		1
1	65-3675-54		. CHANNEL ASSY, INBOARD (RH ONLY)		1
2	65-3675-42		. . STRIP, SEAL (USED ON 65-3675-43 AND -44).		1
2	65-3675-61		. . STRIP, SEAL (USED ON 65-3675-53 AND -54).		1
			ATTACHING PARTS		
	NAS514P632-5		. . SCREW		15
	NAS679A06W		. . NUT		15
			-----*		
3	65-3675-59		. . SEAL, (EXTRUSION NO. BAC1530-7 X 22.0 IN. LG) (LH . ONLY) (USED ON 65-3675-53)		1
3	65-3675-60		. . SEAL, (EXTRUSION NO. BAC1530-7 X 22.0 IN. LG) (RH . ONLY) (USED ON 65-3675-54)		1
4	65-3675-45		. CHANNEL ASSY, BODY STATION 869.50 LOWER SURFACE . . . TRAILING EDGE BEAM OUTBOARD (LH ONLY)		1
4	65-3675-46		. CHANNEL ASSY, BODY STATION 869.50 LOWER SURFACE . . . TRAILING EDGE BEAM OUTBOARD (RH ONLY)		1
5	65-3675-47		. . STRIP, BODY STATION 869.50 LOWER SURFACE TRAILING . EDGE BEAM OUTBOARD SEAL		1
			ATTACHING PARTS		
	NAS514P632-5		. . SCREW		27
	NAS679A06W		. . NUT		27
			-----*		
6	65-3675-49		. . SEAL, BODY STATION 869.50 LOWER SURFACE TRAILING. . EDGE BEAM OUTBOARD (EXTRUSION NO. BAC1530-7 X 41.0 IN. LG) (OPTIONAL 65-3675-25 (EXTRUSION NO. BAC1521-569 X 41 IN. LG (OPTIONAL EXTRUSION NO. BAC1521-408 X 41 IN. LG))) (LH ONLY)		1
6	65-3675-25		. . SEAL, BODY STATION 869.50 LOWER SURFACE TRAILING. . EDGE BEAM OUTBOARD (EXTRUSION NO. BAC1521-569 (OPTIONAL BAC1521-408) X 41.0 IN. LG) (LH ONLY) (OPTIONAL TO 65-3675-49 (EXTRUSION NO. BAC1530-7 X 41.0 IN. LG))		1
6	65-3675-50		. . SEAL, BODY STATION 869.50 LOWER SURFACE TRAILING. . EDGE BEAM OUTBOARD (EXTRUSION NO. BAC1530-7 X 41.0 IN. LG) (OPTIONAL 65-3675-26 (EXTRUSION NO. BAC1521-569 X 41 IN. LG (OPTIONAL EXTRUSION NO. BAC1521-408 X 41 IN. LG))) (RH ONLY)		1
6	65-3675-26		. . SEAL, BODY STATION 869.50 LOWER SURFACE TRAILING. . EDGE BEAM OUTBOARD (EXTRUSION NO. BAC1521-569 (OPTIONAL BAC1521-408) X 41.0 IN. LG) (RH ONLY) (OPTIONAL TO 65-3675-50 (EXTRUSION NO. BAC1530-7 X 41.0 IN. LG))		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

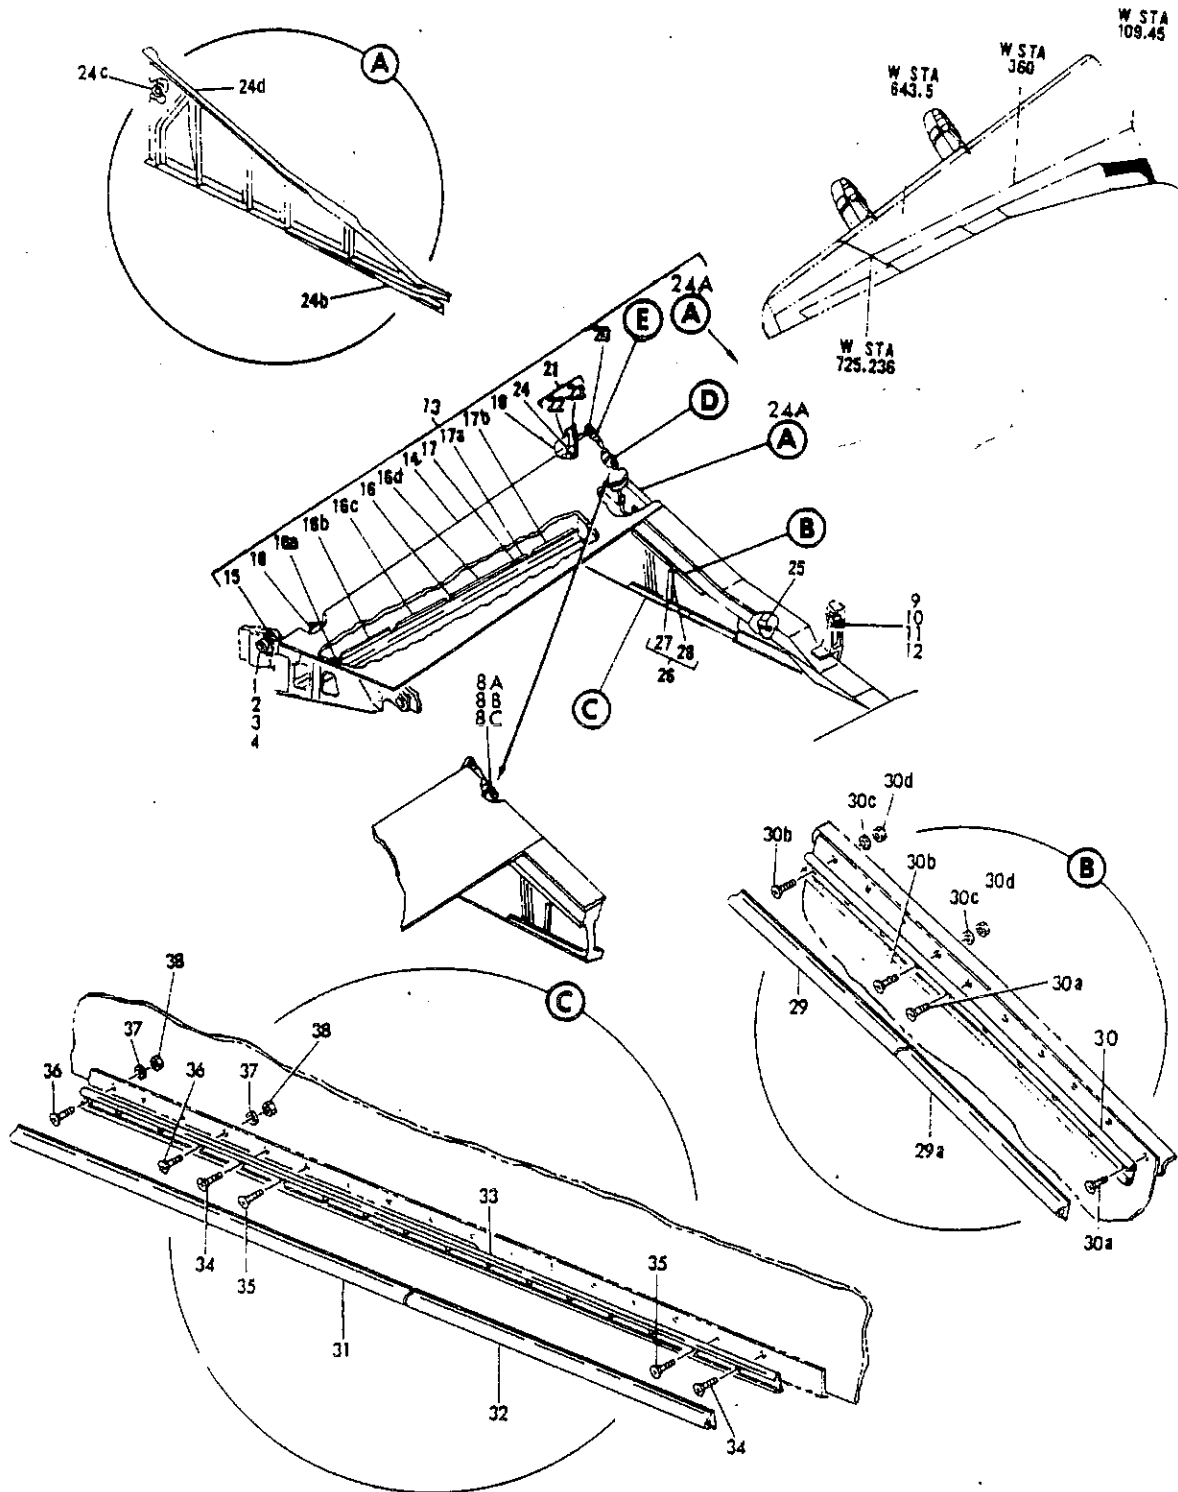


FIGURE 12. TRAILING EDGE INSTL, WING FILLET (SHEET 1)

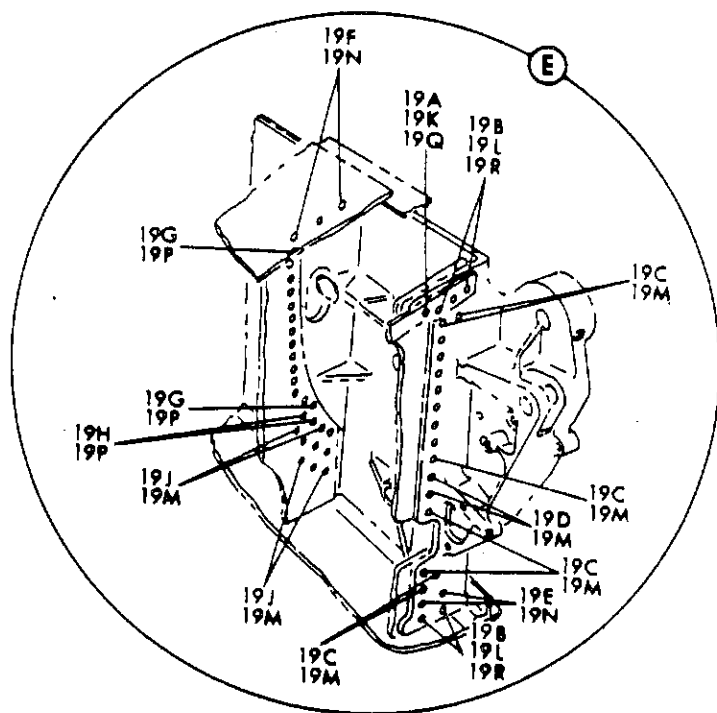
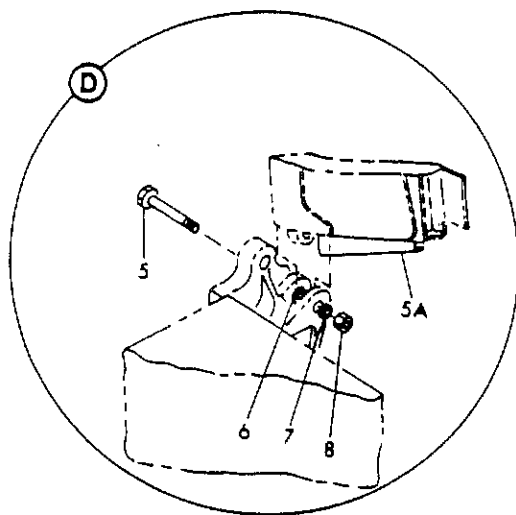


FIGURE 12. TRAILING EDGE INSTL., WING FILLET (SHEET 2)

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
12	65-19168-1	TRAILING EDGE INSTL, WING FILLET (LH) (SEE 57-3, FIG. 12, ITEM 106A)		RF
	65-19168-2	TRAILING EDGE INSTL, WING FILLET (RH) (SEE 57-3, FIG. 12, ITEM 106A)		RF
1	MS20009-28	. BOLT.		1
2	MS20002-9	. WASHER.		1
3	MS20002C9	. WASHER.		1
4	BACN108398	. NUT.		1
5	NAS590-61	. BOLT, (DELETED BY SB 2837).	0150	1
5	BACB30LU10D62	. BOLT, (ADDED BY SB 2837).	0150	1
5A	65-68397-8	. SHIM, (ADDED BY SB 2837).	0150	1
6	AN960-1016L	. WASHER.		4
7	AN960-1016	. WASHER.		1
8	NAS1022A10	. NUT, (DELETED BY SB 2837).	0150	1
8	BACN10JD10	. NUT, (ADDED BY SB 2837).	0150	1
8A	AN316-10R	. NUT.	5199	1
8B	NAS590-56	. BOLT.	5199	1
		(OPTIONAL NAS590-61)		
8B	NAS590-61	. BOLT.	5199	1
		(OPTIONAL TO NAS590-56)		
8C	BACN10JC10	. NUT.	5199	1
9	MS20010-38	. BOLT.		1
10	MS20002C10	. WASHER.		1
11	MS20002-10	. WASHER.		1
12	BACN10810L	. NUT.		1
13	65-19168-3	. TRAILING EDGE ASSY, WING FILLET (LH ONLY)		1
13	65-19168-4	. TRAILING EDGE ASSY, WING FILLET (RH ONLY)		1
14	65-19497-1	. . STRUCTURE INSTL, WING TRAILING EDGE TORQUE BOX (LH ONLY) (SEE FIG. 13)		1
14	65-19497-2	. . STRUCTURE INSTL, WING TRAILING EDGE TORQUE BOX (RH ONLY) (SEE FIG. 13)		1
15	65-19173-1	. . SUPPORT INSTL, FILLET FLAP OUTBOARD HINGE (LH ONLY) (SEE 27-6, FIG. 31)		1
15	65-19173-2	. . SUPPORT INSTL, FILLET FLAP OUTBOARD HINGE (RH ONLY) (SEE 27-6, FIG. 31)		1
	65-19172-1	. . BEAM INSTL, BODY STATION 899 FILLET FLAP SUPPORT. (LH ONLY)		1
	65-19172-2	. . BEAM INSTL, BODY STATION 899 FILLET FLAP SUPPORT. (RH ONLY)		1
16	65-19172-42	. . SEAL, BODY STATION 899 FILLET FLAP SUPPORT BEAM. (EXTRUSION NO. BAC1530-21 X 55.5 IN. LG)		1
	NAS601-6	. . ATTACHING PARTS		28
	AN960PD6L	. . BOLT.		28
	NAS679A06W	. . WASHER.		28
		. . NUT.		
16A	65-19172-53	. . RETAINER, BODY STATION 899 FILLET FLAP SUPPORT. BEAM SEAL (LH ONLY)		1
16A	65-19172-54	. . RETAINER, BODY STATION 899 FILLET FLAP SUPPORT. BEAM SEAL (RH ONLY)		1
16B	65-19172-51	. . RETAINER, BODY STATION 899 FILLET FLAP SUPPORT. BEAM SEAL (LH ONLY)		1
16B	65-19172-52	. . RETAINER, BODY STATION 899 FILLET FLAP SUPPORT. BEAM SEAL (RH ONLY)		1
16C	65-19172-49	. . RETAINER, BODY STATION 899 FILLET FLAP SUPPORT. BEAM SEAL (LH ONLY)		1
16C	65-19172-50	. . RETAINER, BODY STATION 899 FILLET FLAP SUPPORT. BEAM SEAL (RH ONLY)		1
16D	65-19172-47	. . RETAINER, BODY STATION 899 FILLET FLAP SUPPORT. BEAM SEAL (LH ONLY)		1
16D	65-19172-48	. . RETAINER, BODY STATION 899 FILLET FLAP SUPPORT. BEAM SEAL (RH ONLY)		1
		. . ATTACHING PARTS		
	BACB30FM6-5	. . BOLT.		40
	BACB30FM6-6	. . BOLT.		1
	BACB30FM6-7	. . BOLT.		12
	BACC30M6	. . COLLAR.		53
17	65-19172-41	. . SEAL, BODY STATION 899 FILLET FLAP SUPPORT BEAM. (EXTRUSION NO. BAC1530-21 X 14.3 IN. LG)		1
		. . ATTACHING PARTS		
	NAS601-6	. . SCREW.		8
	AN960PD6L	. . WASHER.		8
	NAS679A06W	. . NUT.		8

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
12 17A	65-19172-45		... RETAINER, BODY STATION 899 FILLET FLAP SUPPORT. . BEAM SEAL (LH ONLY)		1
17A	65-19172-46		... RETAINER, BODY STATION 899 FILLET FLAP SUPPORT. . BEAM SEAL (RH ONLY)		1
17B	65-19172-43		... RETAINER, BODY STATION 899 FILLET FLAP SUPPORT. . BEAM SEAL (LH ONLY)		1
17B	65-19172-44		... RETAINER, BODY STATION 899 FILLET FLAP SUPPORT. . BEAM SEAL (RH ONLY)		1
	BACB30FM6-5		ATTACHING PARTS		2
	BACB30FM8-9		... BOLT.		10
	BACC30M6		... BOLT.		2
	BACC30M8		... COLLAR.		10
			... COLLAR.		
18	5-88165-3003		... SUPPORT ASSY, WING LANDING GEAR DOOR STRUT. . . . ACTUATOR (LH ONLY) (SEE 32-2, FIG. 8)		1
18	5-88165-3004		... SUPPORT ASSY, WING LANDING GEAR DOOR STRUT. . . . ACTUATOR (RH ONLY) (SEE 32-2, FIG. 8)		1
	NAS1104-11W		ATTACHING PARTS		10
			... BOLT.		
19	65-1120-35		... SUPPORT ASSY, MAIN LANDING GEAR LOCK (LH ONLY). . (SEE 32-1, FIG. 38)	5199	1
19	65-1120-45		... SUPPORT ASSY, MAIN LANDING GEAR LOCK (LH ONLY). . (DELETED BY SB 2837) (SEE 32-1, FIG. 38)	0150	1
			(OPTIONAL 65-1120-17 AND -31 (DELETED BY SB 2837))		
			(OPTIONAL AND FOR REPLACEMENT ORDER 65-1120-35)		
19	65-1120-35		... SUPPORT ASSY, MAIN LANDING GEAR (LH ONLY) (REPLACES 65-1120-17, -31 AND -45 BY SB 2837)	0150	1
19	65-1120-36		... SUPPORT ASSY, MAIN LANDING GEAR LOCK (RH ONLY). . (SEE 32-1, FIG. 38)	5199	1
19	65-1120-46		... SUPPORT ASSY, MAIN LANDING GEAR LOCK (RH ONLY). . (DELETED BY SB 2837) (SEE 32-1, FIG. 38)	0150	1
			(OPTIONALS 65-1120-18 AND -32) (DELETED BY SB 2837))		
			(OPTIONAL AND FOR REPLACEMENT ORDER 65-1120-36)		
19	65-1120-36		... SUPPORT ASSY, MAIN LANDING GEAR LOCK (RH ONLY). . (REPLACES 65-1120-18, -32 AND -46 BY SB 2837)	0150	1
19A	BACB30NF4-11X		ATTACHING PARTS		1
19B	BACB30NF5-11X		... BOLT, (ADDED BY SB 2837).	0150	5
19C	BACB30FP8-8		... BOLT, (ADDED BY SB 2837).	0150	14
19D	BACB30FP8-9		... BOLT, (ADDED BY SB 2837).	0150	2
19E	BACB30FP10-11		... BOLT, (ADDED BY SB 2837).	0150	2
19F	BACB30FP10-10		... BOLT, (ADDED BY SB 2837).	0150	3
19G	BACB30FP6-7		... BOLT, (ADDED BY SB 2837).	0150	14
19H	BACB30FP6-8		... BOLT, (ADDED BY SB 2837).	0150	2
19J	BACB30FP8-13		... BOLT, (ADDED BY SB 2837).	0150	9
19K	AN960P0416		... WASHER, (ADDED BY SB 2837).	0150	1
19L	AN960P0516		... WASHER, (ADDED BY SB 2837).	0150	5
19M	BACC30M8		... COLLAR, (ADDED BY SB 2837).	0150	25
19N	BACC30M10		... COLLAR, (ADDED BY SB 2837).	0150	5
19P	BACC30M6		... COLLAR, (ADDED BY SB 2837).	0150	16
19Q	BACN10JC4		... NUT, (ADDED BY SB 2837).	0150	1
19R	BACN10JC5		... NUT, (ADDED BY SB 2837).	0150	5
20	5-88718-3005		... LOCK INSTL, MAIN GEAR (LH ONLY) (SEE 32-1, FIG. 36)		1
20	5-88718-3006		... LOCK INSTL, MAIN GEAR (RH ONLY) (SEE 32-1, FIG. 36)		1
	65-2036-9		... BRACKET INSTL, MAIN GEAR LOCK SWITCH (LH ONLY). . .		1
	65-2036-10		... BRACKET INSTL, MAIN GEAR LOCK SWITCH (RH ONLY). . .		1
21	65-2036-11		... BRACKET ASSY, MAIN GEAR LOCK SWITCH (LH ONLY) . . .		1
21	65-2036-12		... BRACKET ASSY, MAIN GEAR LOCK SWITCH (RH ONLY) . . .		1
			ATTACHING PARTS		
	BACR15AY6-15		... RIVET		4
	BACR15AY6-15		... RIVET, (DELETED BY SB 2837)	0150	4
	BACB30KK6-15		... BOLT, (ADDED BY SB 2837).	0150	4
	BACC30C6		... COLLAR.		4
	BACC30C6		... COLLAR, (DELETED BY SB 2837).	0150	4
	BACC30R6		... COLLAR, (ADDED BY SB 2837).	0150	4
22	65-2036-7		... PLATE, MAIN GEAR LOCK SWITCH METAL-CAL MOUNTING		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
12	MS20426D4	ATTACHING PARTS RIVET		2
23	66-5597-1	 BRACKET, MAIN GEAR LOCK SWITCH (LH ONLY)		1
23	66-5597-2	 BRACKET, MAIN GEAR LOCK SWITCH (RH ONLY)		1
24	65-19174-155	. . BEAM INSTL, WING BUTTOCK LINE 1.90 WING TRAILING . . EDGE (LH ONLY) (SEE 27-6, FIG. 72)		1
24	65-19174-156	. . BEAM INSTL, WING BUTTOCK LINE 1.90 WING TRAILING . . EDGE (RH ONLY) (SEE 27-6, FIG. 72)		1
24A	65-19175-43	. . BEAM INSTL, BODY BUTTOCK LINE 71.80 WING TRAILING . . EDGE (LH ONLY)		1
24A	65-19175-44	. . BEAM INSTL, BODY BUTTOCK LINE 71.80 WING TRAILING . . EDGE (RH ONLY)		1
24B	65-23730-7	. . . ANGLE, BODY BUTTOCK LINE 71.80 BEAM SEAL SUPPORT (LH ONLY)		1
24B	65-23730-8	. . . ANGLE, BODY BUTTOCK LINE 71.80 BEAM SEAL SUPPORT (RH ONLY)		1
	BACB30A83-4	ATTACHING PARTS BOLT		2
24C	65-19175-40	. . . GROMMET, BODY BUTTOCK LINE 71.80 WING TRAILING . . EDGE BEAM (ALTERED FROM NAS1368N4D)		1
24D	65-19175-37	. . . DOOR ASSY, BODY BUTTOCK LINE 71.80 WING TRAILING EDGE BEAM ACCESS		1
	NAS1104-4W NAS1104-6W	ATTACHING PARTS SCREW SCREW		13 4
25	65-19501-23	. SEAL INSTL, MAIN LANDING GEAR DOOR (OPTIONAL 65-19501-1) (LH ONLY) (SEE 32-2, FIG. 14)		1
25	65-19501-24	. SEAL INSTL, MAIN LANDING GEAR DOOR (OPTIONAL 65-19501-2) (RH ONLY) (SEE 32-2, FIG. 14)		1
	65-19502-1	. FAIRING INSTL, WING BUTTOCK LINE 1.90 (LH ONLY)		1
	65-19502-2	. FAIRING INSTL, WING BUTTOCK LINE 1.90 (RH ONLY)		1
26	65-19502-7	. . BONDED ASSY, WING BUTTOCK LINE 1.90 FAIRING (LH . . ONLY)		1
26	65-19502-8	. . BONDED ASSY, WING BUTTOCK LINE 1.90 FAIRING (RH . . ONLY)		1
27	65-19502-21	. . . SEAL, WING BUTTOCK LINE 1.90 FAIRING (ALTERED . . FROM BAC SPEC NO. 10-60120-56 X 9.8 IN. LG)		1
28	65-19502-17	. . . RETAINER, WING BUTTOCK LINE 1.90 FAIRING SEAL . . . ATTACHING PARTS		1
	NAS517-2-1	. . . SCREW		5
29	65-19502-27	. . SEAL, WING BUTTOCK LINE 1.90 FAIRING UPPER (ALTERED FROM BAC SPEC NO. 10-60120-56 X 10.6 IN. LG)		1
29A	65-19502-28	. . SEAL, WING BUTTOCK LINE 1.90 FAIRING UPPER (ALTERED FROM BAC SPEC NO. 10-60120-56 X 10.0 IN. LG)		1
30	65-19502-13	. . RETAINER, WING BUTTOCK LINE 1.90 FAIRING UPPER SEAL (LH ONLY)		1
30	65-19502-14	. . RETAINER, WING BUTTOCK LINE 1.90 FAIRING UPPER SEAL (RH ONLY)		1
	NAS517-2-3 BACB30LU04-5 AN960PD4L NAS679A04W	ATTACHING PARTS SCREW SCREW WASHER NUT		6 4 4 4
31	65-19502-22	. . SEAL, WING BUTTOCK LINE 1.90 FAIRING LOWER FORWARD (ALTERED FROM BAC SPEC NO. 10-60120-56 X 19.5 IN. LG)		1
32	65-19502-20	. . SEAL, WING BUTTOCK LINE 1.90 FAIRING LOWER AFT. . . (ALTERED FROM BAC SPEC NO. 10-60120-56 X 16.0 IN. LG)		1
33	65-19502-25	. . RETAINER, WING BUTTOCK LINE 1.90 FAIRING LOWER SEAL (LH ONLY)		1
33	65-19502-26	. . RETAINER, WING BUTTOCK LINE 1.90 FAIRING LOWER SEAL (RH ONLY)		1
	NAS517-2-3 NAS517-2-2 BACB30LU04-5 AN960PD4L	ATTACHING PARTS SCREW SCREW SCREW WASHER		2 11 4 4
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

BOEING
Intercontinental

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1234567	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY	
12	38	NAS679A04W	. . NUT -----*				4
MISSING ITEM NUMBERS ARE NOT APPLICABLE							


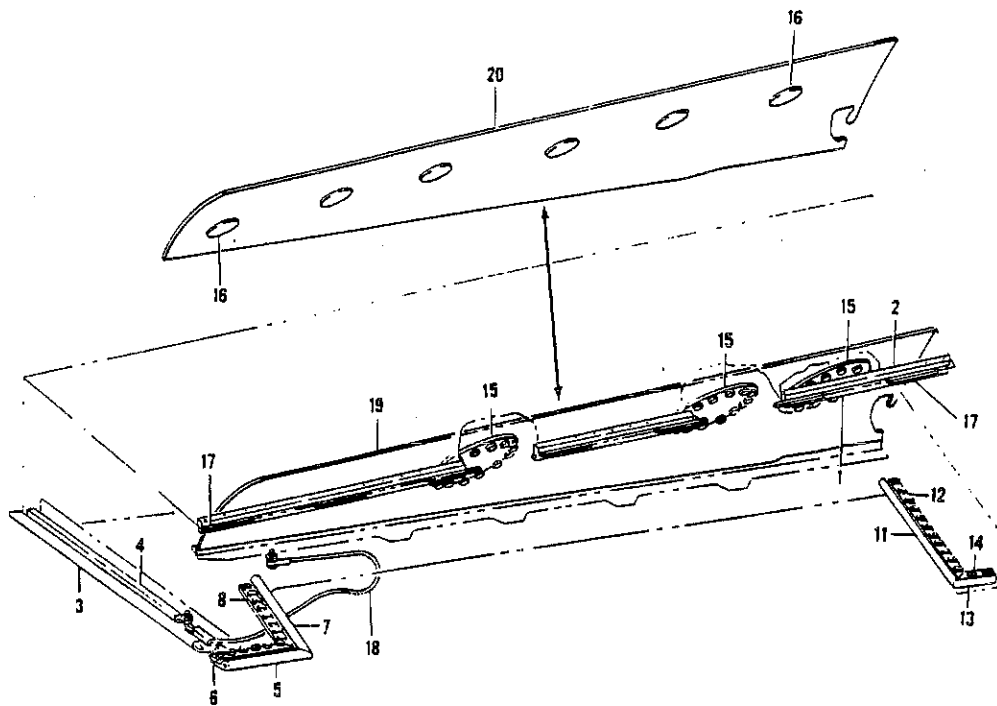


FIGURE 13. STRUCTURE INSTL, WING TRAILING EDGE TORQUE BOX

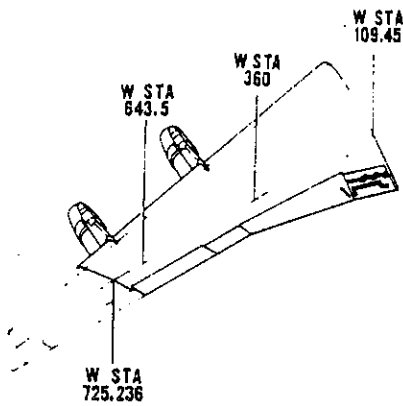

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
13	65-19497-1	STRUCTURE INSTL, WING TRAILING EDGE TORQUE BOX (LH) . . (SEE FIG. 12, ITEM 14)		RF
	65-19497-2	STRUCTURE INSTL, WING TRAILING EDGE TORQUE BOX (RH) . . (SEE FIG. 12, ITEM 14)		RF
1	65-19497-26	. SEAL, WING TRAILING EDGE TORQUE BOX STRUCTURE (ALTERED FROM BAC SPEC NO. 10-60120-67 X 59.5 IN. LG)		1
2	65-19497-25	. RETAINER, WING TRAILING EDGE TORQUE BOX STRUCTURE . . SEAL		1
	MS20426D4	. ATTACHING PARTS RIVET		30
3	65-19497-39	. SEAL, WING TRAILING EDGE TORQUE BOX STRUCTURE (ALTERED FROM BAC SPEC NO. 10-60120-58 X 22.50 IN. LG) (LH ONLY)		1
3	65-19497-40	. SEAL, WING TRAILING EDGE TORQUE BOX STRUCTURE (ALTERED FROM BAC SPEC NO. 10-60120-58 X 22.50 IN. LG) (RH ONLY)		1
4	65-19497-37	. RETAINER, WING TRAILING EDGE TORQUE BOX STRUCTURE . . SEAL (LH ONLY)		1
4	65-19497-38	. RETAINER, WING TRAILING EDGE TORQUE BOX STRUCTURE . . SEAL (RH ONLY)		1
	NAS333-5 NAS679A3W	. ATTACHING PARTS BOLT NUT		8 8
5	65-19497-57	. SEAL, WING TRAILING EDGE TORQUE BOX STRUCTURE (EXTRUSION NO. BAC1530-10 X 7.6 IN. LG) (LH ONLY) (OPTIONAL TO 65-19497-75)		1
5	65-19497-75	. SEAL, WING TRAILING EDGE TORQUE BOX STRUCTURE (EXTRUSION NO. BAC1530-3 X 7.6 IN. LG) (LH ONLY) (OPTIONAL 65-19497-57)		1
5	65-19497-58	. SEAL, WING TRAILING EDGE TORQUE BOX STRUCTURE (EXTRUSION NO. BAC1530-10 X 7.6 IN. LG) (RH ONLY) (OPTIONAL TO 65-19497-76)		1
5	65-19497-76	. SEAL, WING TRAILING EDGE TORQUE BOX STRUCTURE (EXTRUSION NO. BAC1530-3 X 7.6 IN. LG) (RH ONLY) (OPTIONAL 65-19497-58)		1
	NAS514P632-6 NAS679A06W	. ATTACHING PARTS SCREW NUT		6 6
6	65-19497-63	. RETAINER, WING TRAILING EDGE TORQUE BOX STRUCTURE . . SEAL		1
7	65-19497-81	. SEAL, WING TRAILING EDGE TORQUE BOX STRUCTURE (EXTRUSION NO. BAC1530-12 X 10.1 IN. LG) (LH ONLY)		1
7	65-19497-82	. SEAL, WING TRAILING EDGE TORQUE BOX STRUCTURE (EXTRUSION NO. BAC1530-12 X 10.1 IN. LG) (RH ONLY)		1
	NAS514P632-6 NAS679A08W	. ATTACHING PARTS SCREW NUT		8 8
8	65-19497-84	. RETAINER, WING TRAILING EDGE TORQUE BOX STRUCTURE . . SEAL		1
11	65-19497-79	. SEAL, WING TRAILING EDGE TORQUE BOX STRUCTURE (EXTRUSION NO. BAC1530-12 X 13.3 IN. LG) (LH ONLY)		1
11	65-19497-80	. SEAL, WING TRAILING EDGE TORQUE BOX STRUCTURE (EXTRUSION NO. BAC1530-12 X 13.3 IN. LG) (RH ONLY)		1
	NAS514P632-6 NAS679A06W	. ATTACHING PARTS SCREW NUT		11 11
	65-19497-83	. RETAINER, WING TRAILING EDGE TORQUE BOX STRUCTURE . . SEAL		1
13	65-19497-49	. SEAL, WING TRAILING EDGE TORQUE BOX STRUCTURE (EXTRUSION NO. BAC1530-10 X 2.4 IN. LG) (LH ONLY) (OPTIONAL TO 65-19497-77)		1
13	65-19497-77	. SEAL, WING TRAILING EDGE TORQUE BOX STRUCTURE (EXTRUSION NO. BAC1530-3 X 2.4 IN. LG) (LH ONLY) (OPTIONAL 65-19497-49)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
13	13	65-19497-50	. SEAL, WING TRAILING EDGE TORQUE BOX STRUCTURE (EXTRUSION NO. BAC1530-10 X 2.4 IN. LG) (RH ONLY) (OPTIONAL TO 65-19497-78)								1
	13	65-19497-78	. SEAL, WING TRAILING EDGE TORQUE BOX STRUCTURE (EXTRUSION NO. BAC1530-3 X 2.4 IN. LG) (RH ONLY) (OPTIONAL 65-19497-50)								1
		NAS514P632-6	ATTACHING PARTS								2
		NAS679A06W	. SCREW								2
			. NUT								
	14	65-19497-59	. RETAINER, WING TRAILING EDGE TORQUE BOX STRUCTURE . . SEAL								
	16	SS50758R	. BUTTON, PLUG (V61864)								6
	17	66-13212-3	. STRIP, WING TRAILING EDGE RUB								7
		MS20426B4	ATTACHING PARTS								
			. RIVET								28
			-----*								
	18	BACJ40K5A5A8	. JUMPER.								1
		NAS517-3-4	ATTACHING PARTS								
		AN960D10	. SCREW								1
		NAS679A3W	. WASHER.								1
			. NUT								1
			-----*								
	20	65-19497-73	. SKIN, WING TRAILING EDGE TORQUE BOX STRUCTURE AFT . . (LH ONLY)								1
	20	65-19497-74	. SKIN, WING TRAILING EDGE TORQUE BOX STRUCTURE AFT . . (RH ONLY)								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

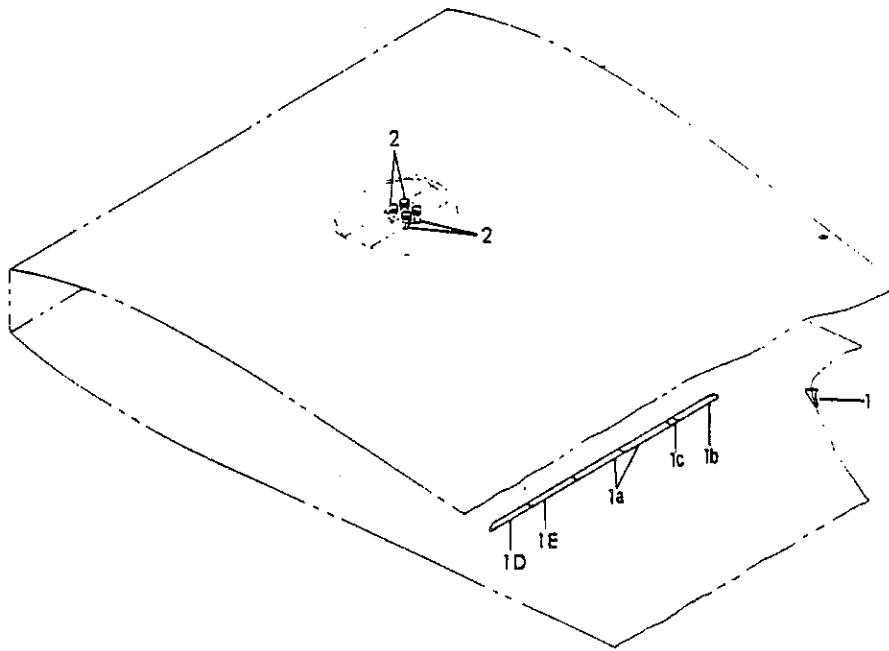
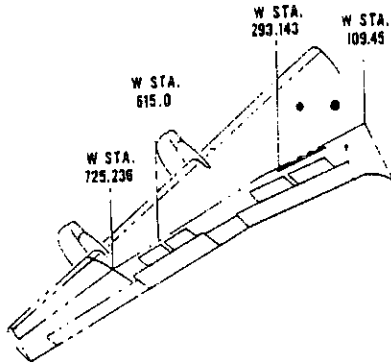


FIGURE 14. PANEL INSTL, BODY BUTTOCK LINE 70.5 TO WING STATION 360 WING LOWER (WINGS ONLY)

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R R R R R R R	14	65-1048-1	PANEL INSTL, BODY BUTTOCK LINE 70.5 TO WING STATION 360 WING LOWER (LH) (WINGS ONLY) (SEE 28-3, FIG. 6, ITEM 12A)	0150	RF
		65-1048-1	PANEL INSTL, BODY BUTTOCK LINE 70.5 TO WING STATION . . 360 WING LOWER (VARIABLE DWG; 65-1048-5001) (LH) (WINGS ONLY) (SEE 28-3, FIG. 6, ITEM 12A)	5199	RF
		65-1048-2	PANEL INSTL, BODY BUTTOCK LINE 70.5 TO WING STATION 360 WING LOWER (RH) (WINGS ONLY) (SEE 28-3, FIG. 6, ITEM 12A)	0150	RF
		65-1048-2	PANEL INSTL, BODY BUTTOCK LINE 70.5 TO WING STATION . . 360 WING LOWER (VARIABLE DWG; 65-1048-5002) (RH) (WINGS ONLY) (SEE 28-3, FIG. 6, ITEM 12A)	5199	RF
	1	69-50012-1	. STRIP, LANDING GEAR DOOR RUB (LH ONLY)		1
	1	69-50012-3	. STRIP, LANDING GEAR DOOR RUB (RH ONLY)		1
		MS2042603	ATTACHING PARTS . RIVET		2
	1A	66-1611	. STRIP, INBOARD WING LOWER PANEL DUMP CHUTE DOOR RUB .		2
	1B	66-1611-1	. STRIP, INBOARD WING LOWER PANEL DUMP CHUTE DOOR RUB .		1
	1C	66-1611-2	. STRIP, INBOARD WING LOWER PANEL DUMP CHUTE DOOR RUB .		1
	1D	66-1611-1	. STRIP, INBOARD DUMP CHUTE DOOR RUB	0150	1
	1D	66-1611-5	. STRIP, INBOARD DUMP CHUTE DOOR RUB	5199	1
	1E	66-1611	. STRIP, INBOARD DUMP CHUTE DOOR RUB	0150	1
	1E	66-1611-6	. STRIP, INBOARD DUMP CHUTE DOOR RUB	5199	1
R R R R		65-1051-1	. SPLICE INSTL, WING BUTTOCK LINE 59.24 LOWER (WINGS . ONLY) (LH ONLY)		1
	2	66-11016-3	. . PLUG, WING LOWER SURFACE AFT SPARE ENGINE MOUNT . . RECEPTACLE . FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA		4
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 06
CENTER SECTION

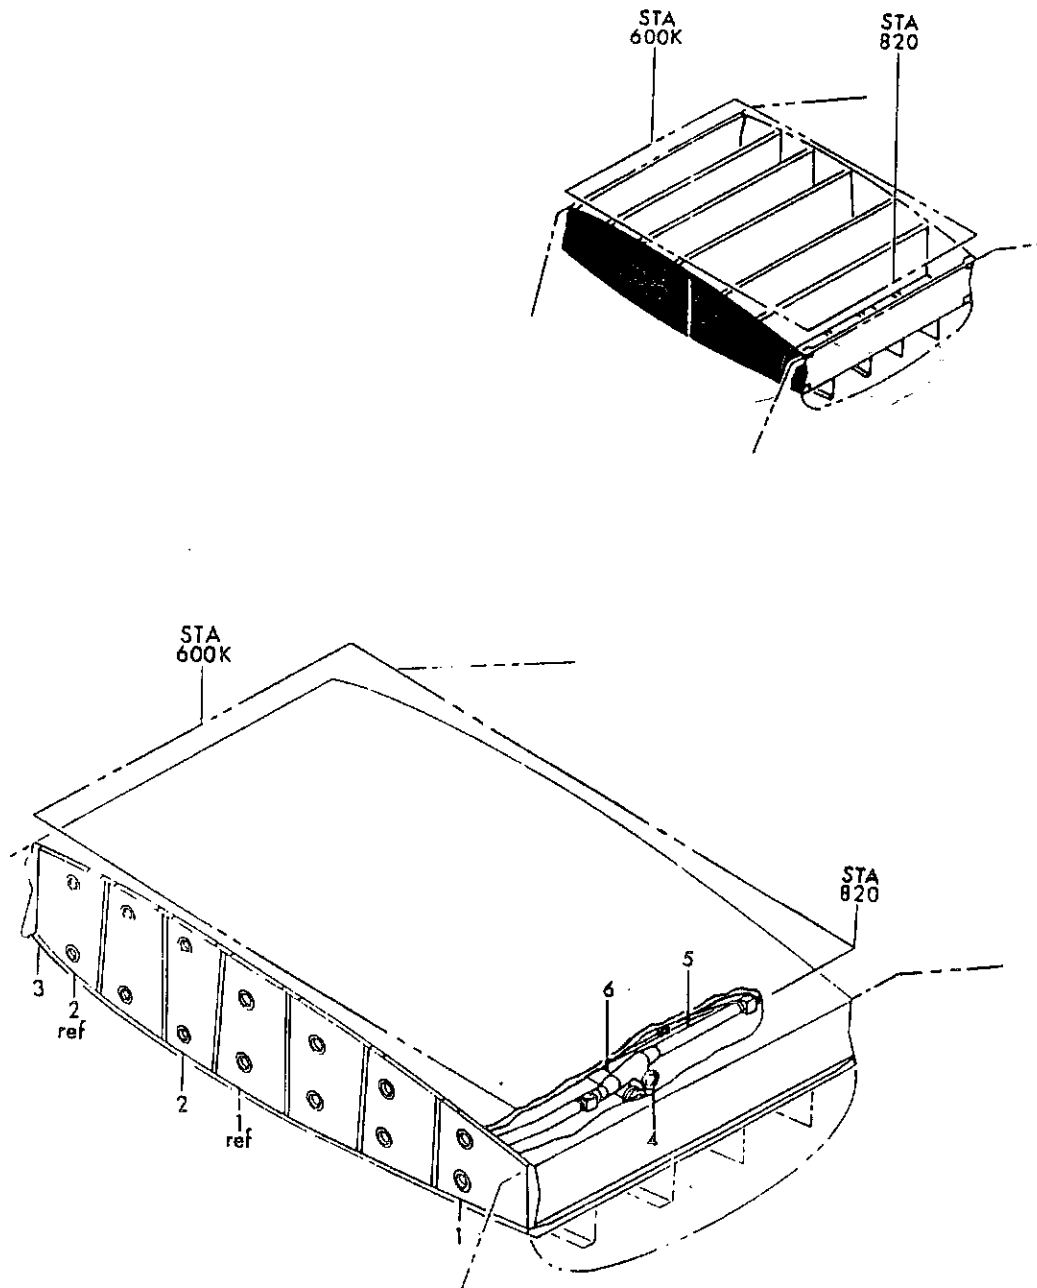


FIGURE 1. WINGS, CENTER SECTION



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1	65-1001		CENTER SECTION ASSY, SECTION 11 WING (SEE 57-3, FIG. 1, ITEM 1)		RF
1	65-2027		. TANK INSTL, WING CENTER SECTION FUEL (SEE 28-4, FIG. 1)		1
2	65-2027-3		. TANK INSTL, WING CENTER SECTION FUEL (SEE 28-4, FIG. 2)		1
3	65-1002		. STRUCTURE ASSY, SECTION 11 WING CENTER SECTION (SEE FIG. 2)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

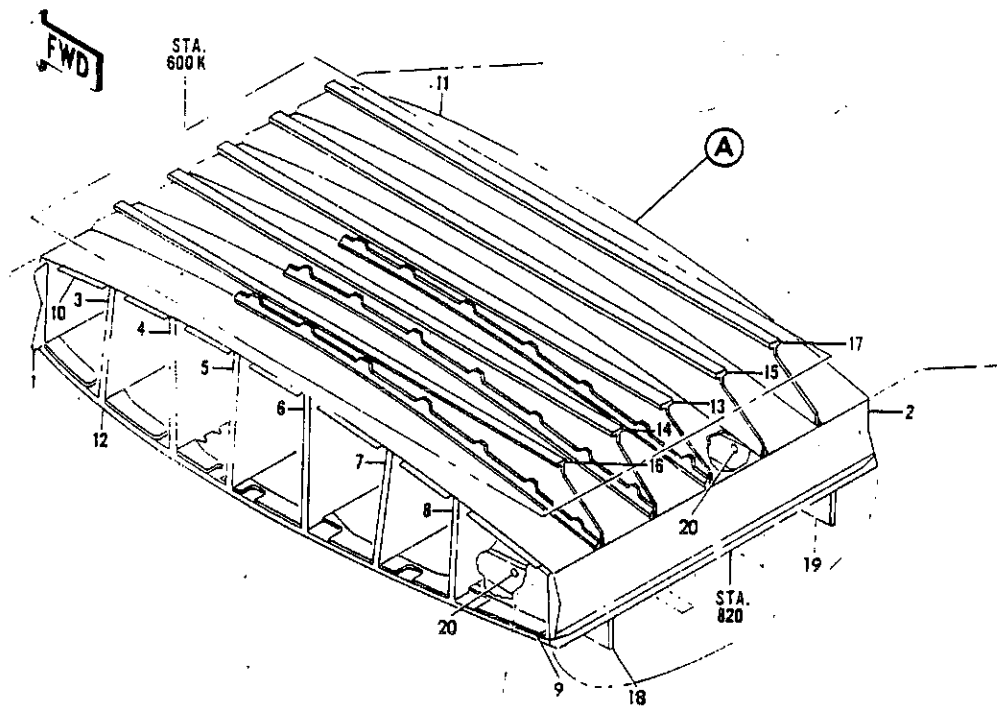


FIGURE 2. STRUCTURE ASSY, SECTION 11 WING CENTER SECTION (SHEET 1)

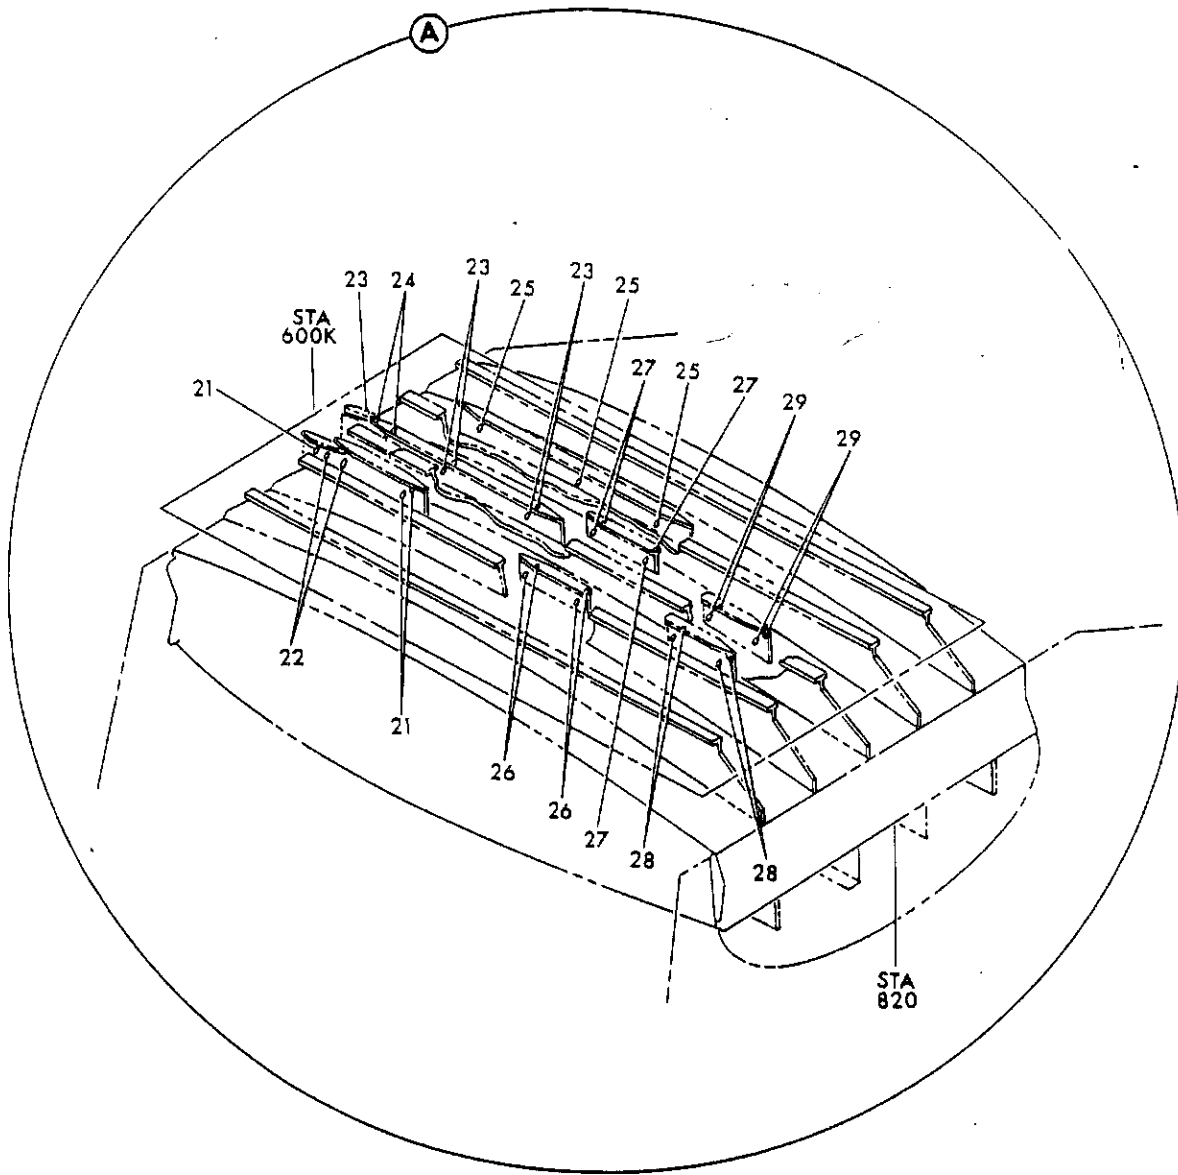


FIGURE 2. WING CENTER SECTION STRUCTURE ASSEMBLY (SHEET 2)

NOV 21/90


57-06-2

DETAILED PARTS LIST
57-06-2
PAGE 1




PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
2	65-1002	STRUCTURE ASSY, SECTION 11 WING CENTER SECTION (SEE . FIG. 1, ITEM 3)								RF
1	64-1001	. SPAR INSTL, WING CENTER SECTION FRONT (SEE FIG. 3) .								1
2	64-1002	. SPAR INSTL, WING CENTER SECTION REAR (SEE FIG. 4) .								1
3	64-1003	. BEAM INSTL, WING CENTER SECTION SPANWISE NO. 1 (SEE . FIG. 5)								1
4	64-1004	. BEAM INSTL, WING CENTER SECTION SPANWISE NO. 2 (SEE . FIG. 6)								1
5	64-1005	. BEAM INSTL, WING CENTER SECTION SPANWISE NO. 3 (SEE . FIG. 7)								1
6	64-1006	. BEAM INSTL, WING CENTER SECTION SPANWISE NO. 4 (SEE . FIG. 8)								1
7	64-1007	. BEAM INSTL, WING CENTER SECTION SPANWISE NO. 5 (SEE . FIG. 9)								1
8	64-1008	. BEAM INSTL, WING CENTER SECTION SPANWISE NO. 6 (SEE . FIG. 10)								1
9	65-7130-58	. BACKING BOARD INSTL, WING CENTER SECTION (SEE 57-7, . FIG. 1)								1
10	65-7194-80	. BACKING BOARD INSTL, WING CENTER SECTION UPPER (SEE . 57-7, FIG. 2)								1
11	65-1022	. PANEL INSTL, SECTION 11 UPPER (SEE FIG. 11)							0102	1
11	65-1022-16	. PANEL INSTL, SECTION 11 UPPER (SEE FIG. 11A)							0399	1
12	65-1024	. PANEL INSTL, SECTION 11 LOWER								1
		. . AIR CONDITIONING, (SEE 21-3, FIG. 30)								
		. . FUEL, (SEE 28-4, FIG. 3)								
		. . WINGS, (SEE FIG. 12)								
13	65-1029-769	. BEAM INSTL, BODY STATION 600K TO 820 BODY BUTTOCK . . LINE 0.05 WING CENTER SECTION FLOOR (SEE FIG. 14)								1
14	65-1029-767	. BEAM INSTL, BODY STATION 600K TO 820 BODY BUTTOCK . . LINE 24.75 WING CENTER SECTION FLOOR (LH) (SEE FIG. 13)								1
15	65-1029-768	. BEAM INSTL, BODY STATION 600K TO 820 BODY BUTTOCK . . LINE 24.75 WING CENTER SECTION FLOOR (RH) (SEE FIG. 13)								1
16	65-1029-301	. BEAM INSTL, BODY STATION 600K TO 820 BODY BUTTOCK . . LINE 45.43 WING CENTER SECTION FLOOR (LH) (SEE FIG. 14)								1
17	65-1029-770	. BEAM INSTL, BODY STATION 600K TO 820 BODY BUTTOCK . . LINE 45.43 WING CENTER SECTION FLOOR (RH) (SEE FIG. 13)								1
	65-1027-1	. BEAM INSTL, LOWER BODY BUTTOCK LINE 42.3 (LH)								1
	65-1027-2	. BEAM INSTL, LOWER BODY BUTTOCK LINE 42.3 (RH)								1
18	65-1027-295	. . BEAM ASSY, (LH)								1
19	65-1027-296	. . BEAM ASSY, (RH)								1
20	NAS557-6A	. . . GROMMET								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

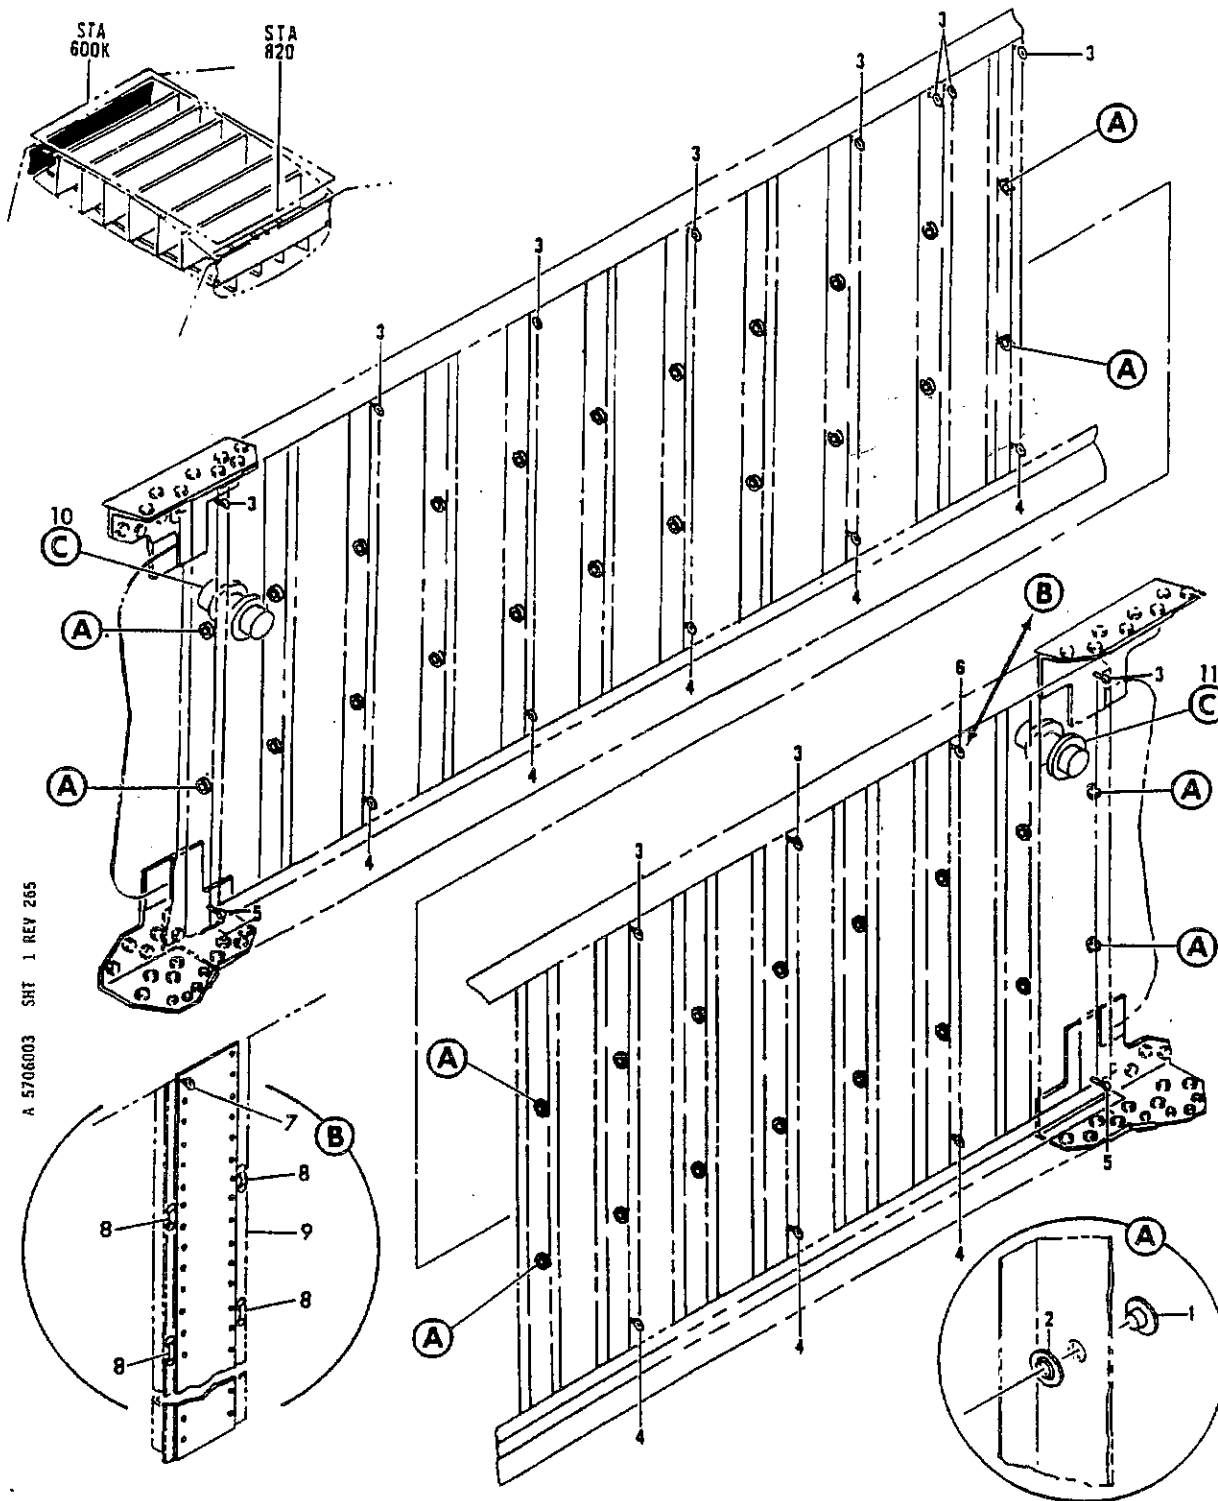

A 5706003 SHT 1 REV 265

FIGURE 3. SPAR INSTL. WING CENTER SECTION FRONT (SHEET 1)

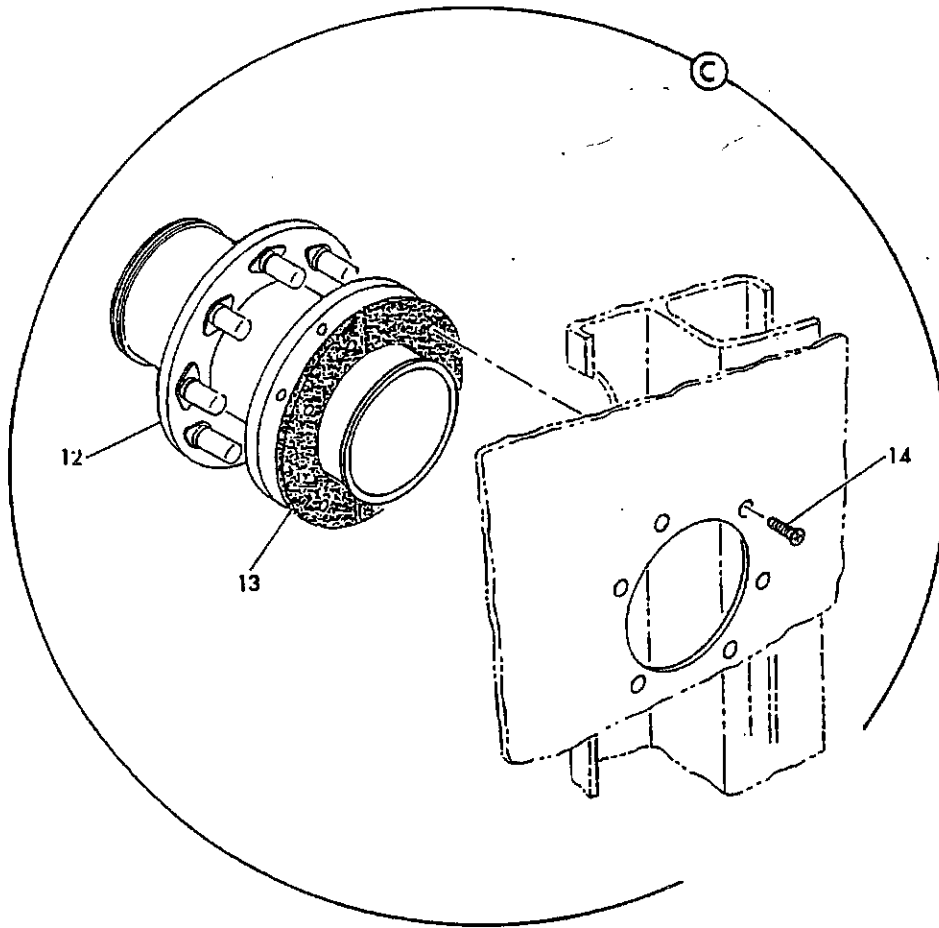

A 5706003 SHT 2 REV 205

FIGURE 3. SPAR INSTL, WING CENTER SECTION FRONT (SHEET 2)

NOV 21/94

57-06-3

DETAILED PARTS LIST
57-06-3
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY		
			1	2	3	4	5	6	7				
3		64-1001	SPAR INSTL, WING CENTER SECTION FRONT (SEE FIG. 2, . . .										RF
	1	AN230GA1	ITEM 1)										38
	2	AN230WA1	. GROMMET										38
	3	6-63321	. WASHER.										11
		AN960D10L	. BOLT, FUEL CELL LACING EYE.										11
		NAS679A3W	ATTACHING PARTS										11
			. WASHER.										
			. NUT										
			-----*										
	4	6-72493-1	. BOLT, FUEL CELL LACING EYE.										8
		NAS679A4W	ATTACHING PARTS										
			. NUT										8
			-----*										
	5	6-72493-2	. BOLT, FUEL CELL LACING EYE.										2
		NAS679A4W	ATTACHING PARTS										
			. NUT										2
			-----*										
	6	6-63321	. BOLT, FUEL CELL LACING EYE.										1
		AN960PD10L	ATTACHING PARTS										
		NAS679A3W	. WASHER.										1
			. NUT										1
			-----*										
	10	391-89-60-71205-005	. PASS THRU 3" ADAPTER INSTL, L.H. (VS2500) (ADDED BY . 0150									0150	1
			RAF 7211.019-225)										
	11	391-89-60-71205-006	. PASS THRU 3" ADAPTER INSTL, R.H. (VS2500) (ADDED BY . 0150									0150	1
			RAF 7211.019-225)										
	12	391-89-60-71583-113	. . 3" ADAPTER ASSY									0150	1
	13	391-89-60-71205-101	. GASKET.									0150	1
	14	NAS517-4-9	. SCREW									0150	6

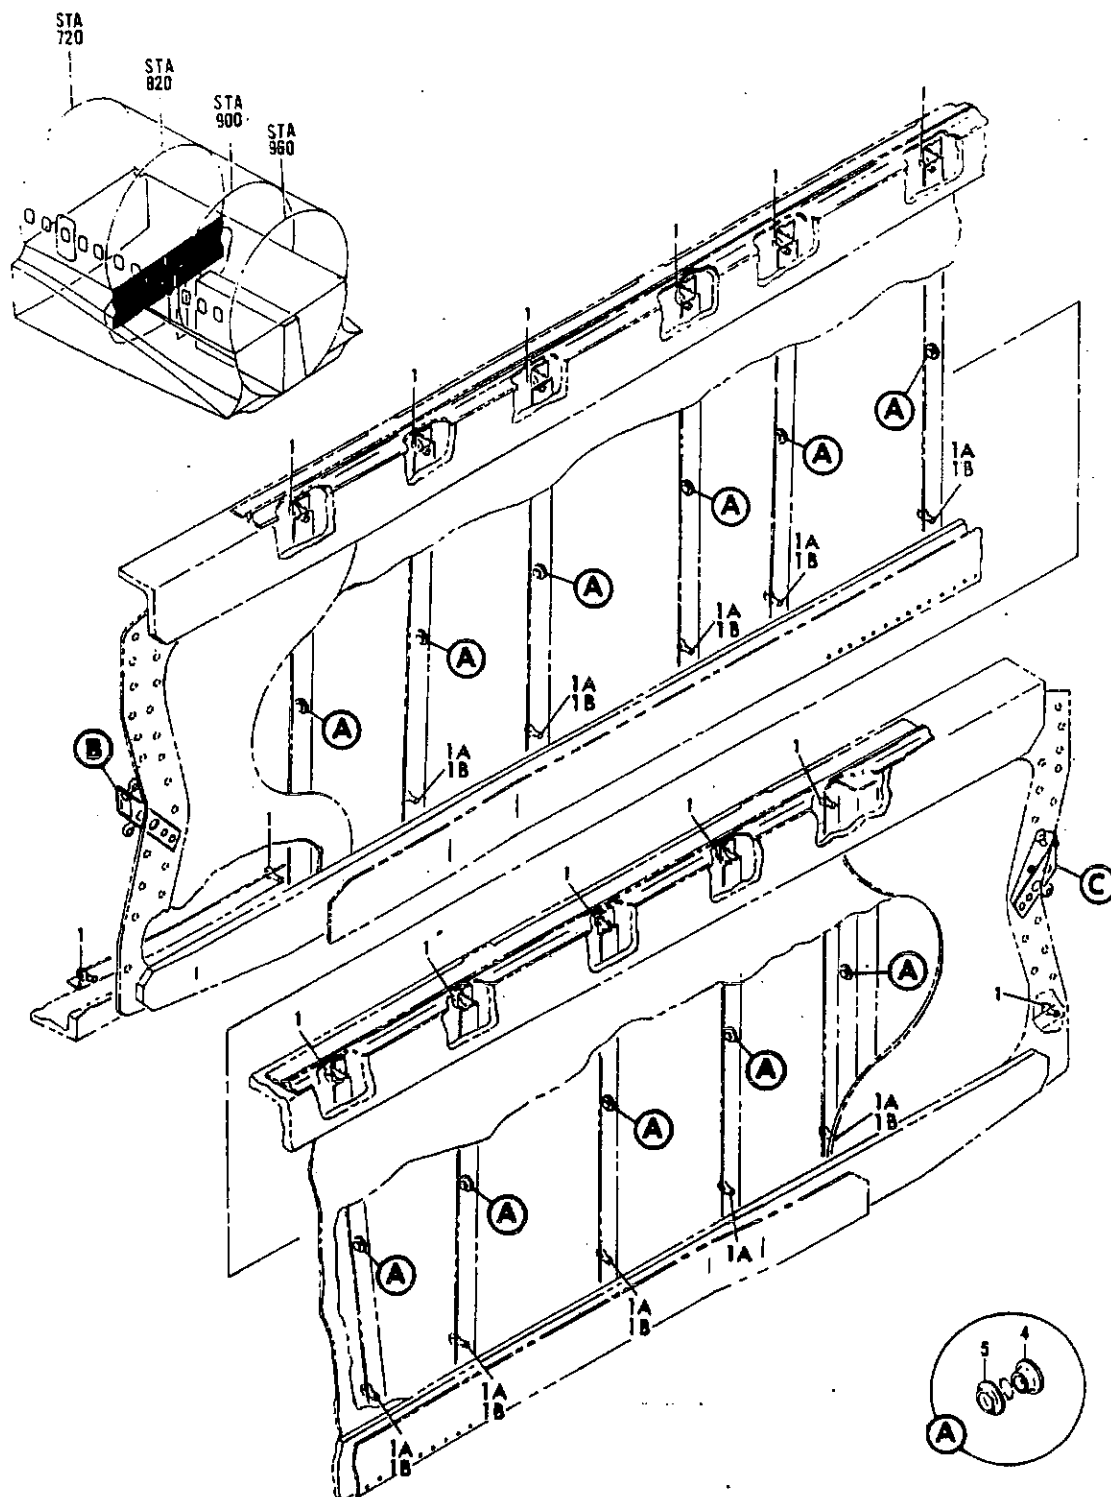


FIGURE 4. SPAR INSTL, WING CENTER SECTION REAR (SHEET 1)

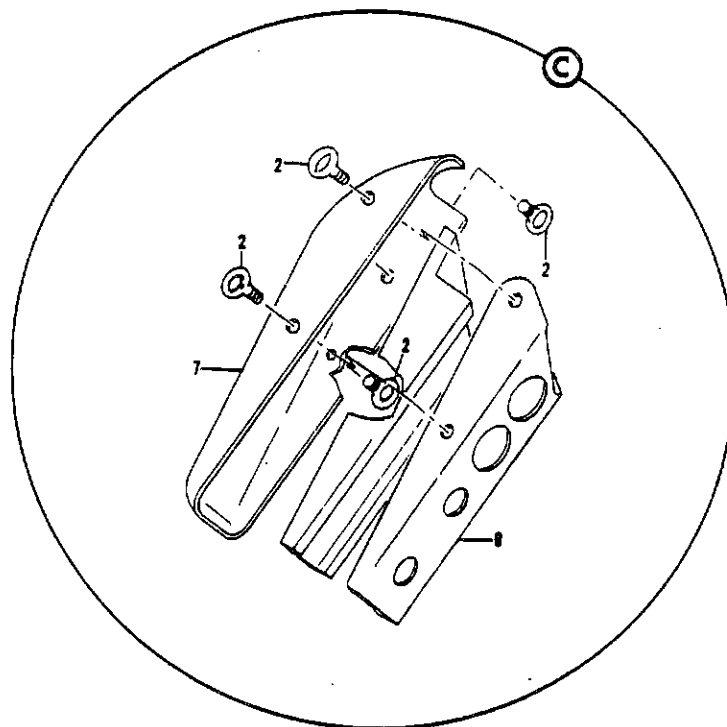
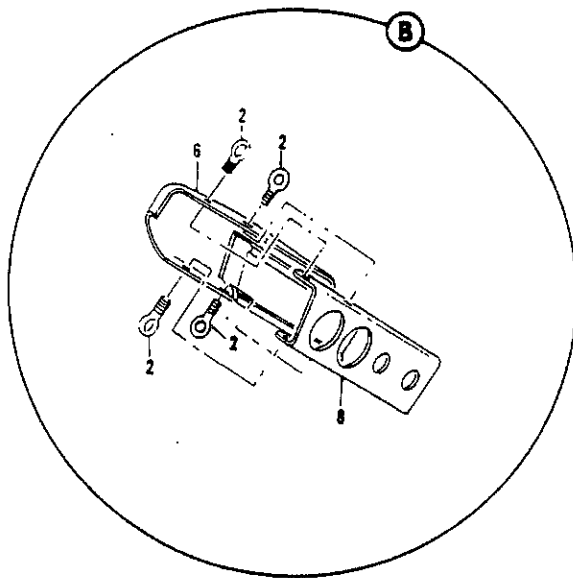


FIGURE 4. SPARE INSTL, WING CENTER SECTION REAR (SHEET 2)

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
4	64-1002	SPAR INSTL, WING CENTER SECTION REAR (SEE FIG. 2, ITEM 2)									RF
1	6-63321	. BOLT, FUEL CELL LACING EYE.									14
	AN960D10	ATTACHING PARTS									AR
	NAS679A3W	. WASHER.									AR
		. NUT									
1A	6-63321	. BOLT, FUEL CELL LACING EYE.									10
2	6-63321	. BOLT, FUEL CELL LACING EYE.									8
4	AN230GA1	. GROMMET									11
5	AN230WA1	. WASHER.									11
6	69-1187-1	. COVER, REAR SPAR EYEBOLT SUPPORT.									1
7	69-1187-2	. COVER, REAR SPAR EYEBOLT SUPPORT.									1
8	6-74661-3	. CHANNEL ASSY, REAR SPAR EYEBOLT SUPPORT									1
9	6-74661-4	. CHANNEL ASSY, REAR SPAR EYEBOLT SUPPORT									1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

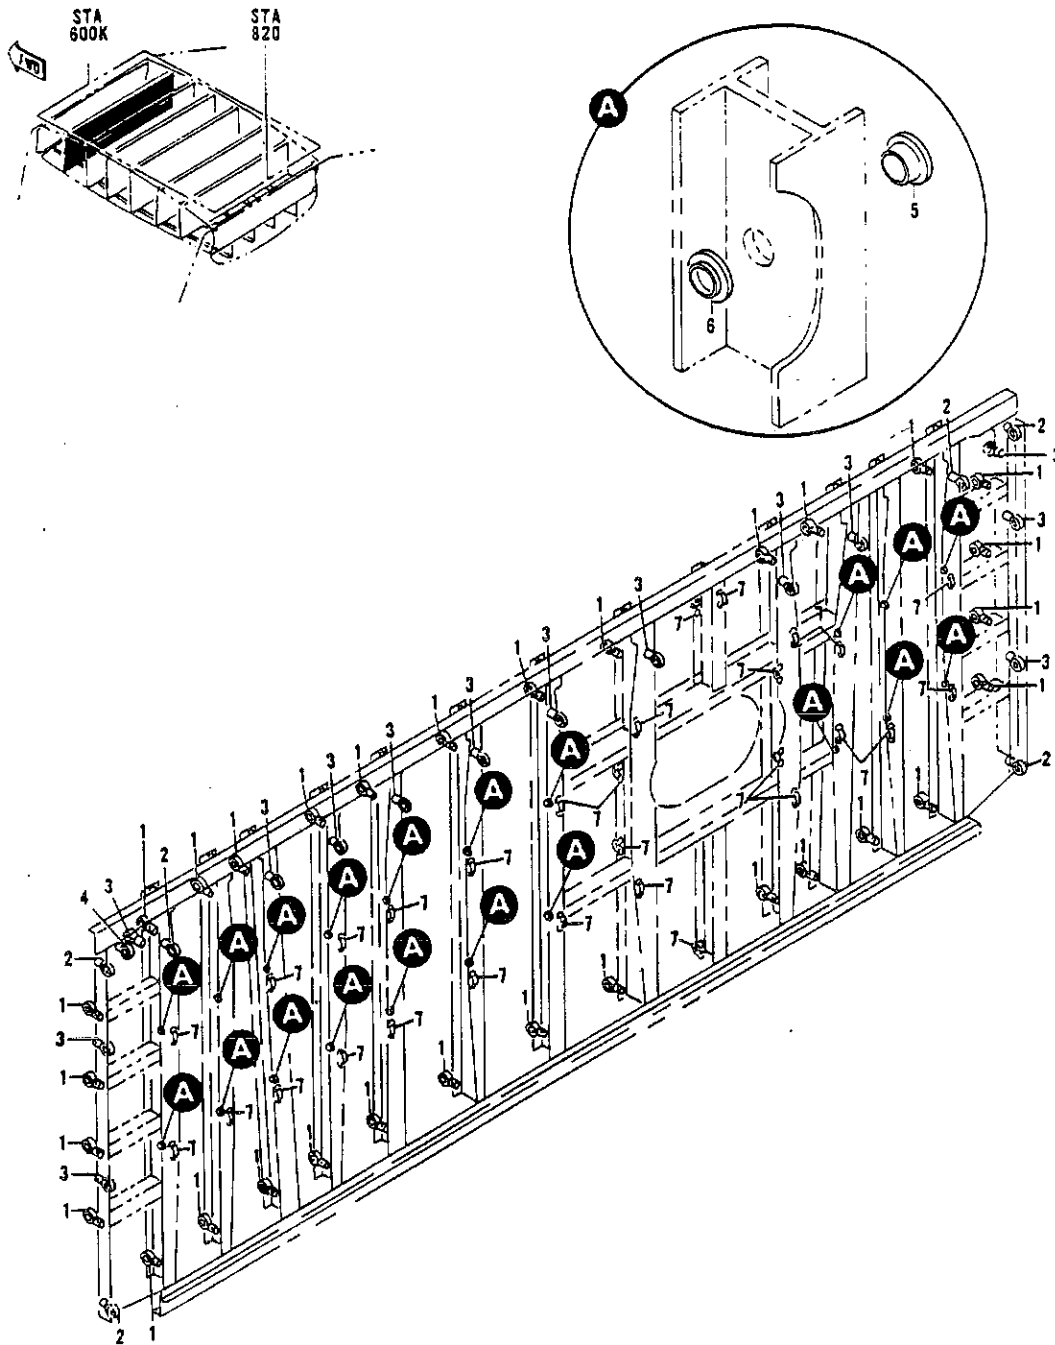


FIGURE 5. BEAM INSTL, WING CENTER SECTION SPANWISE NO. 1

BOEING **707** *Intercontinental*

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
5	64-1003	BEAM INSTL, WING CENTER SECTION SPANWISE NO. 1 (SEE . . FIG. 2, ITEM 3)								RF
1	6-63321	. BOLT, FUEL CELL LACING EYE.								30
2	6-63321-13	. BOLT, FUEL CELL LACING EYE.								6
3	6-63321-5	. BOLT, FUEL CELL LACING EYE.								13
4	6-63321-1101	. BOLT, FUEL CELL LACING EYE.								1
		ATTACHING PARTS								
	AN960D10	. WASHER, (OPTIONAL AN960D10L).								AR
	NAS679A3W	. NUT								32
	NAS679A3W	. NUT								20
		-----#-----								
5	AN230GA1	. GROMMET								20
6	AN230WA1	. WASHER.								20
7	6-36717-1	. ANCHOR, TANK LACING								29
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

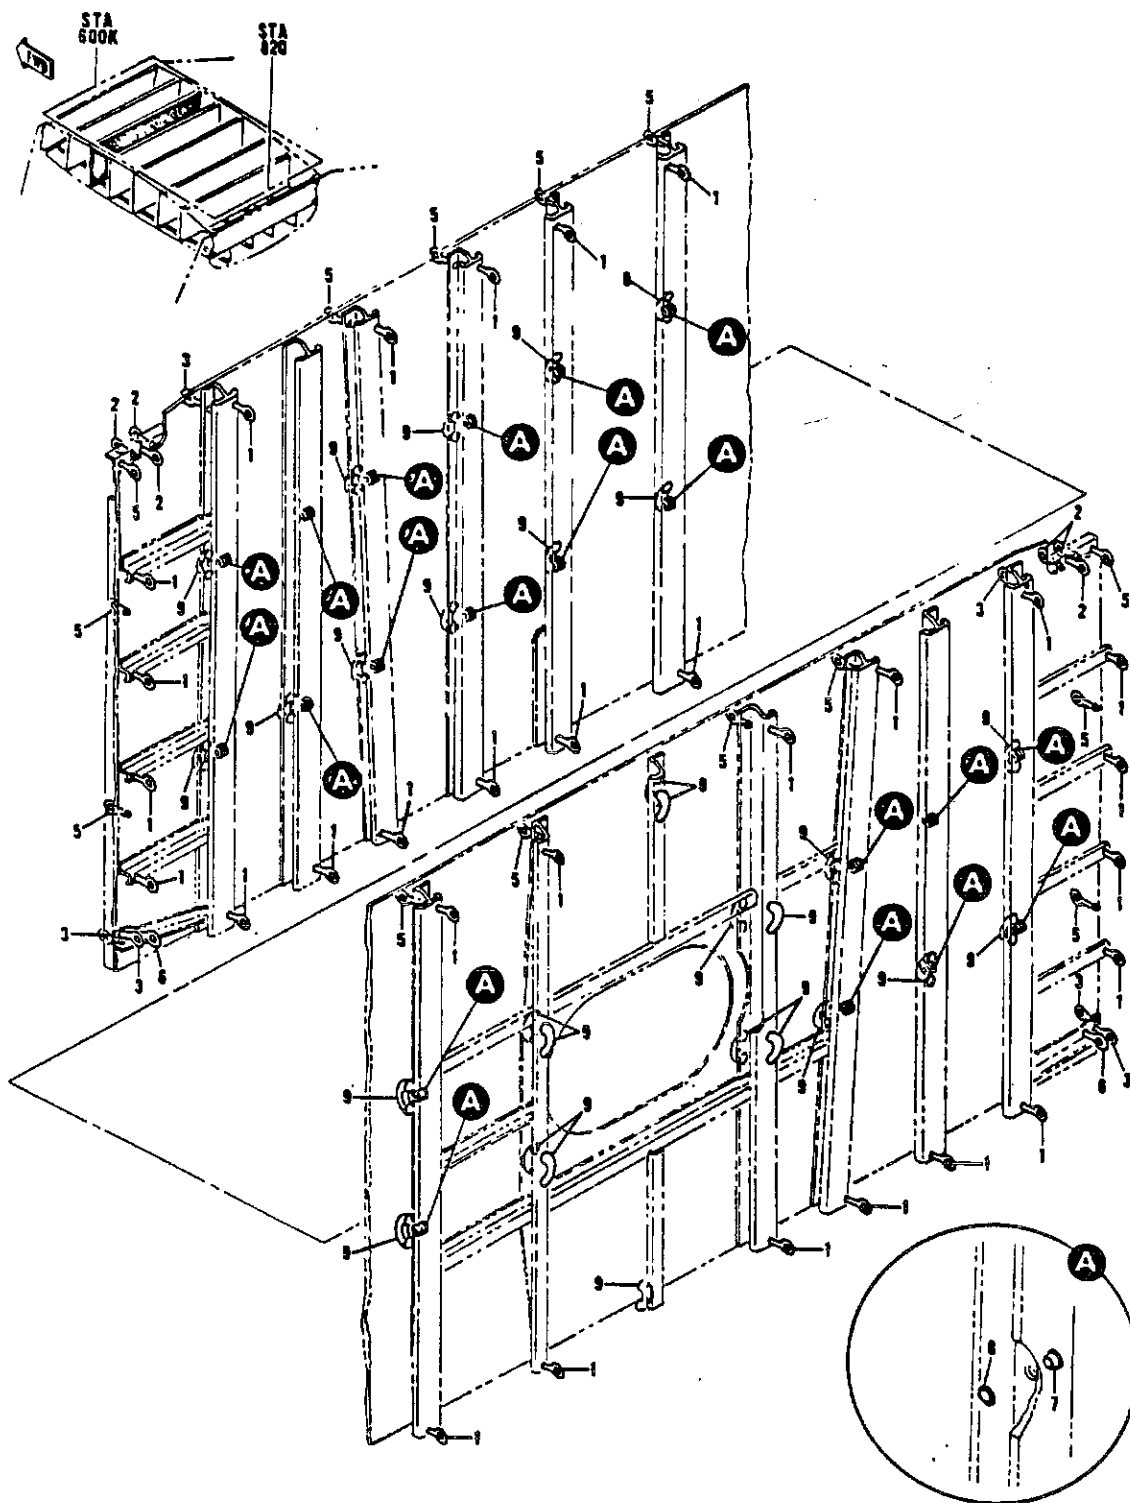


FIGURE 6. BEAM INSTL. WING CENTER SECTION SPANWISE NO. 2

BOEING *707* *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
6	64-1004	BEAM INSTL, WING CENTER SECTION SPANWISE NO. 2 (SEE . . FIG. 2, ITEM 4)								RF
3	6-63321-13	. BOLT, FUEL CELL LACING EYE.								6
5	6-63321-5	. BOLT, FUEL CELL LACING EYE.								14
		ATTACHING PARTS								
	AN960D10	. WASHER.								AR
	AN960DIOL	. WASHER.								AR
	NAS679A3W	. NUT								20
		-----*								
6	6-72493-1	. BOLT, FUEL CELL LACING EYE.								2
		ATTACHING PARTS								
	AN960D416L	. WASHER.								AR
	AN960D416	. WASHER.								AR
	NAS679A4W	. NUT								2
		-----*								
7	AN230GA1	. GROMMET								20
8	AN230WA1	. WASHER.								20
9	6-36717-1	. ANCHOR, TANK LACING								29
MISSING ITEM NUMBERS ARE NOT APPLICABLE										





PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
7	64-1005		BEAM INSTL, WING CENTER SECTION SPANWISE NO. 3 (SEE . . FIG. 2, ITEM 5)		RF
1	6-63321		. BOLT, FUEL CELL LACING EYE.		18
1A	6-63321-1101		. BOLT, FUEL CELL LACING EYE.		17
2	6-63321-5		. BOLT, FUEL CELL LACING EYE.		15
3	6-63321-12		. BOLT, FUEL CELL LACING EYE.		2
4	6-63321-13		. BOLT, FUEL CELL LACING EYE.		6
			ATTACHING PARTS		
	AN960D10		. WASHER.		AR
	AN960D10L		. WASHER.		AR
	NAS679A3W		. NUT		58
			*-----		
5	AN230GA1		. GROMMET		26
6	AN230WA1		. WASHER.		26
7	6-36717-1		. ANCHOR, TANK LACING		22
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

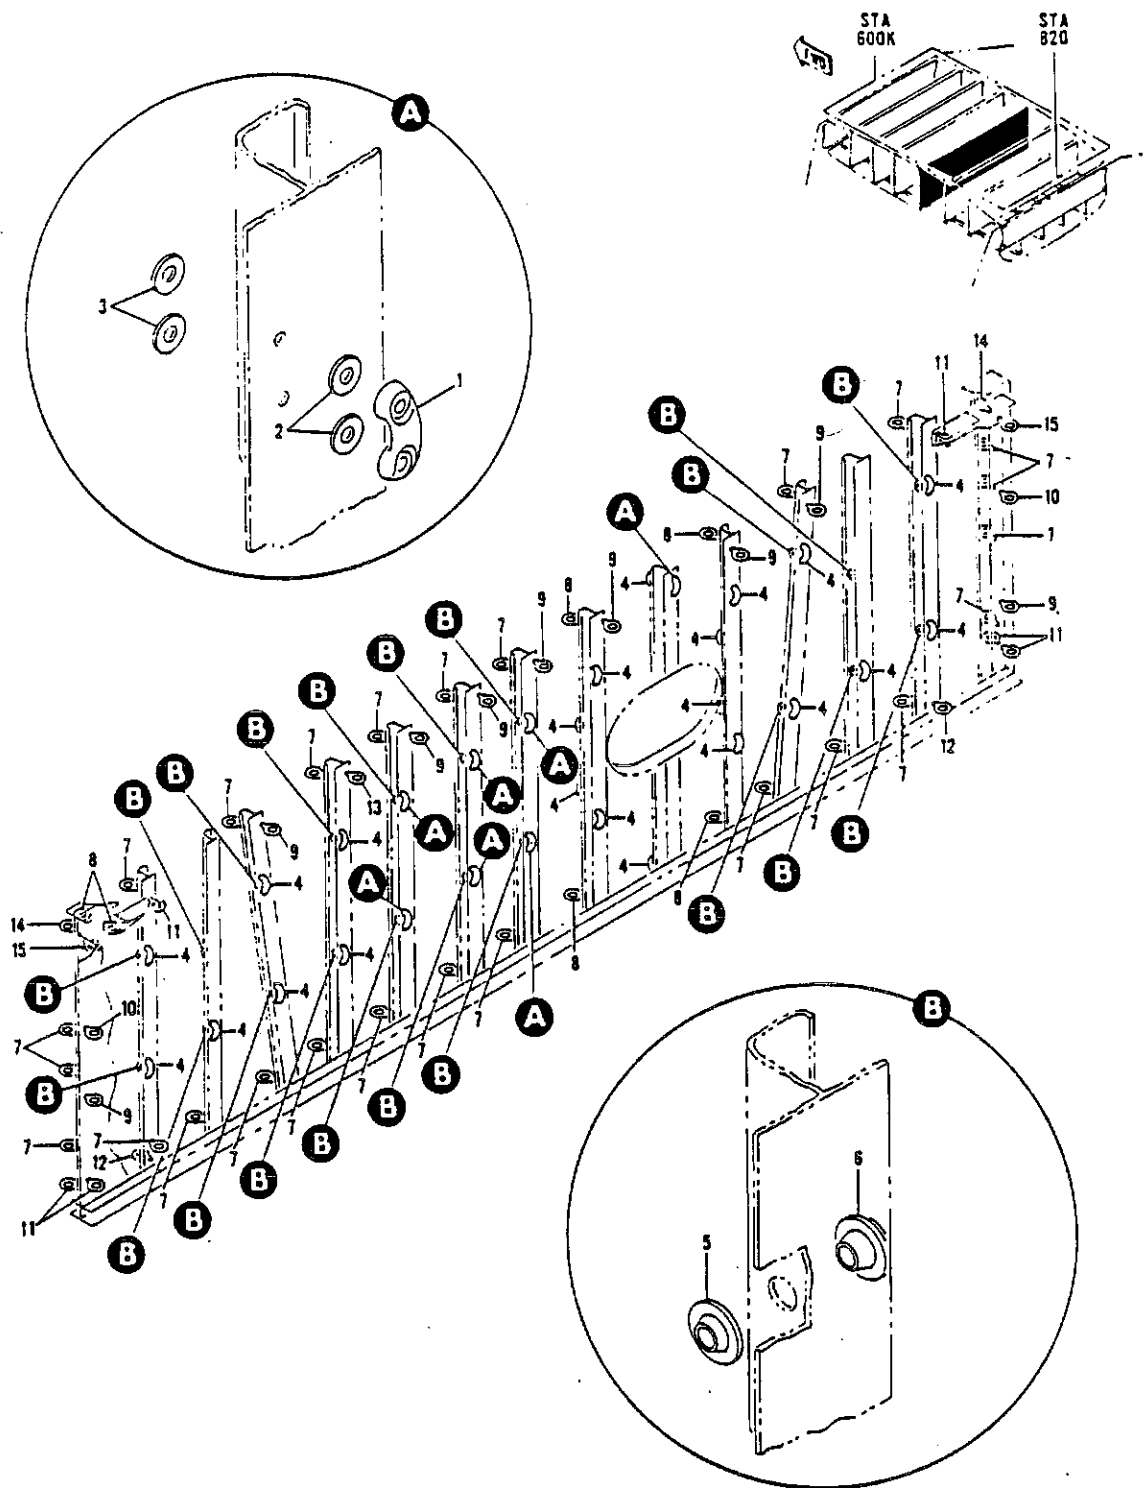


FIGURE 8. BEAM INSTL, WING CENTER SECTION SPANWISE NO. 4



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8	64-1006		BEAM INSTL, WING CENTER SECTION SPANWISE NO. 4 (SEE . . FIG. 2, ITEM 6)		RF
1	6-36717-1		. ANCHOR, TANK LACING		7
2	BACW10T10L		. WASHER.		14
3	AN960-10L		. WASHER.		14
4	6-36717-1		. ANCHOR, TANK LACING		22
5	AN230WA1		. WASHER.		20
6	AN230GA1		. GROMMET		20
7	6-63321		. BOLT, FUEL CELL LACING EYE.		25
8	6-63321-1		. BOLT, FUEL CELL LACING EYE.		6
9	6-63321-5		. BOLT, FUEL CELL LACING EYE.		9
10	6-63321-12		. BOLT, FUEL CELL LACING EYE.		2
11	6-63321-13		. BOLT, FUEL CELL LACING EYE.		6
12	6-63321-14		. BOLT, FUEL CELL LACING EYE.		2
13	6-63321-16		. BOLT, FUEL CELL LACING EYE.		1
			ATTACHING PARTS		
	AN960D10		. WASHER.		AR
	AN960D10L		. WASHER.		AR
	NAS679A3W		. NUT		AR
14	6-72493-2		. BOLT, FUEL CELL LACING EYE.		2
15	6-72493-3		. BOLT, FUEL CELL LACING EYE.		2
			ATTACHING PARTS		
	AN960D416		. WASHER.		AR
	AN960D416L		. WASHER.		AR
	NAS679A4W		. NUT		AR
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

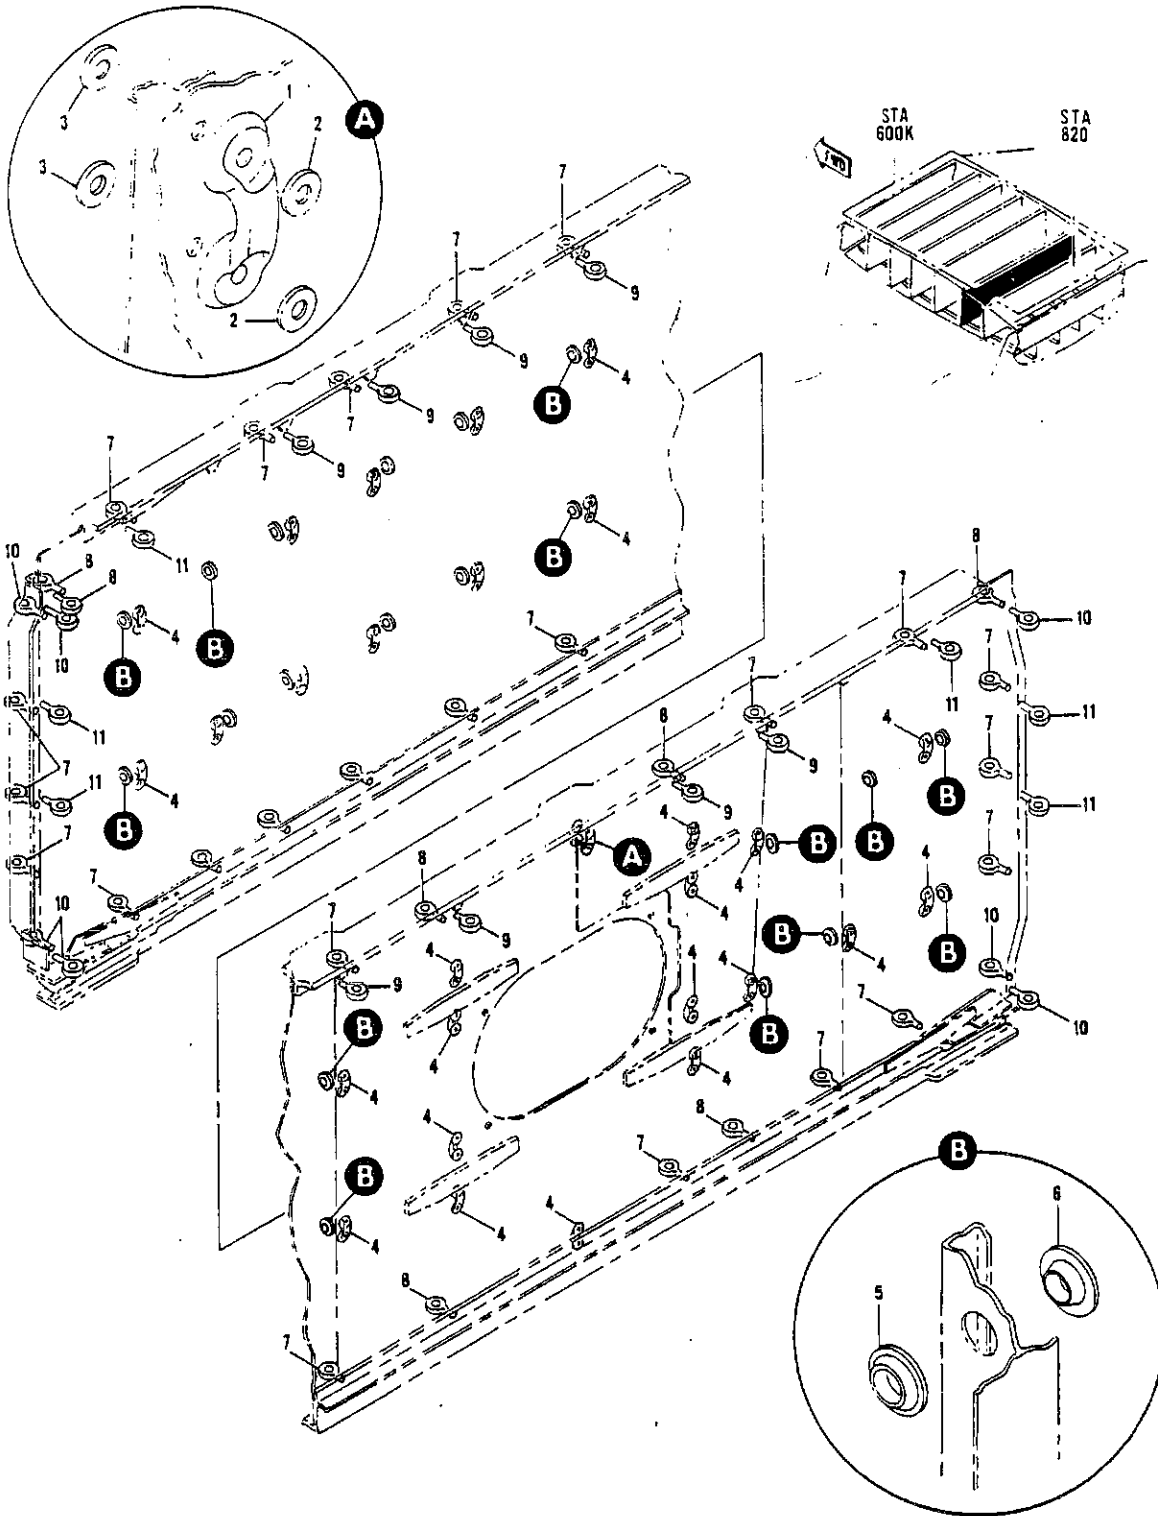


FIGURE 9. BEAM INSTL, WING CENTER SECTION SPANWISE NO. 5

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
9	64-1007	BEAM INSTL, WING CENTER SECTION SPANWISE NO. 5 (SEE . . FIG. 2, ITEM 7)		RF
1	6-36717-1	. ANCHOR, TANK LACING		1
2	BACW10T10L	. WASHER.		2
3	AN960-10L	. WASHER.		2
4	6-36717-1	. ANCHOR, TANK LACING		28
5	AN230WA1	. WASHER.		20
6	AN230GA1	. GROMMET		20
7	6-63321	. BOLT, FUEL CELL LACING EYE.		24
8	6-63321-1	. BOLT, FUEL CELL LACING EYE.		7
9	6-63321-5	. BOLT, FUEL CELL LACING EYE.		8
10	6-63321-13	. BOLT, FUEL CELL LACING EYE.		6
11	6-63321-14	. BOLT, FUEL CELL LACING EYE.		6
		ATTACHING PARTS		
	AN960D10	. WASHER.		AR
	AN960D10L	. WASHER.		AR
	NAS679A3W	. NUT		52
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

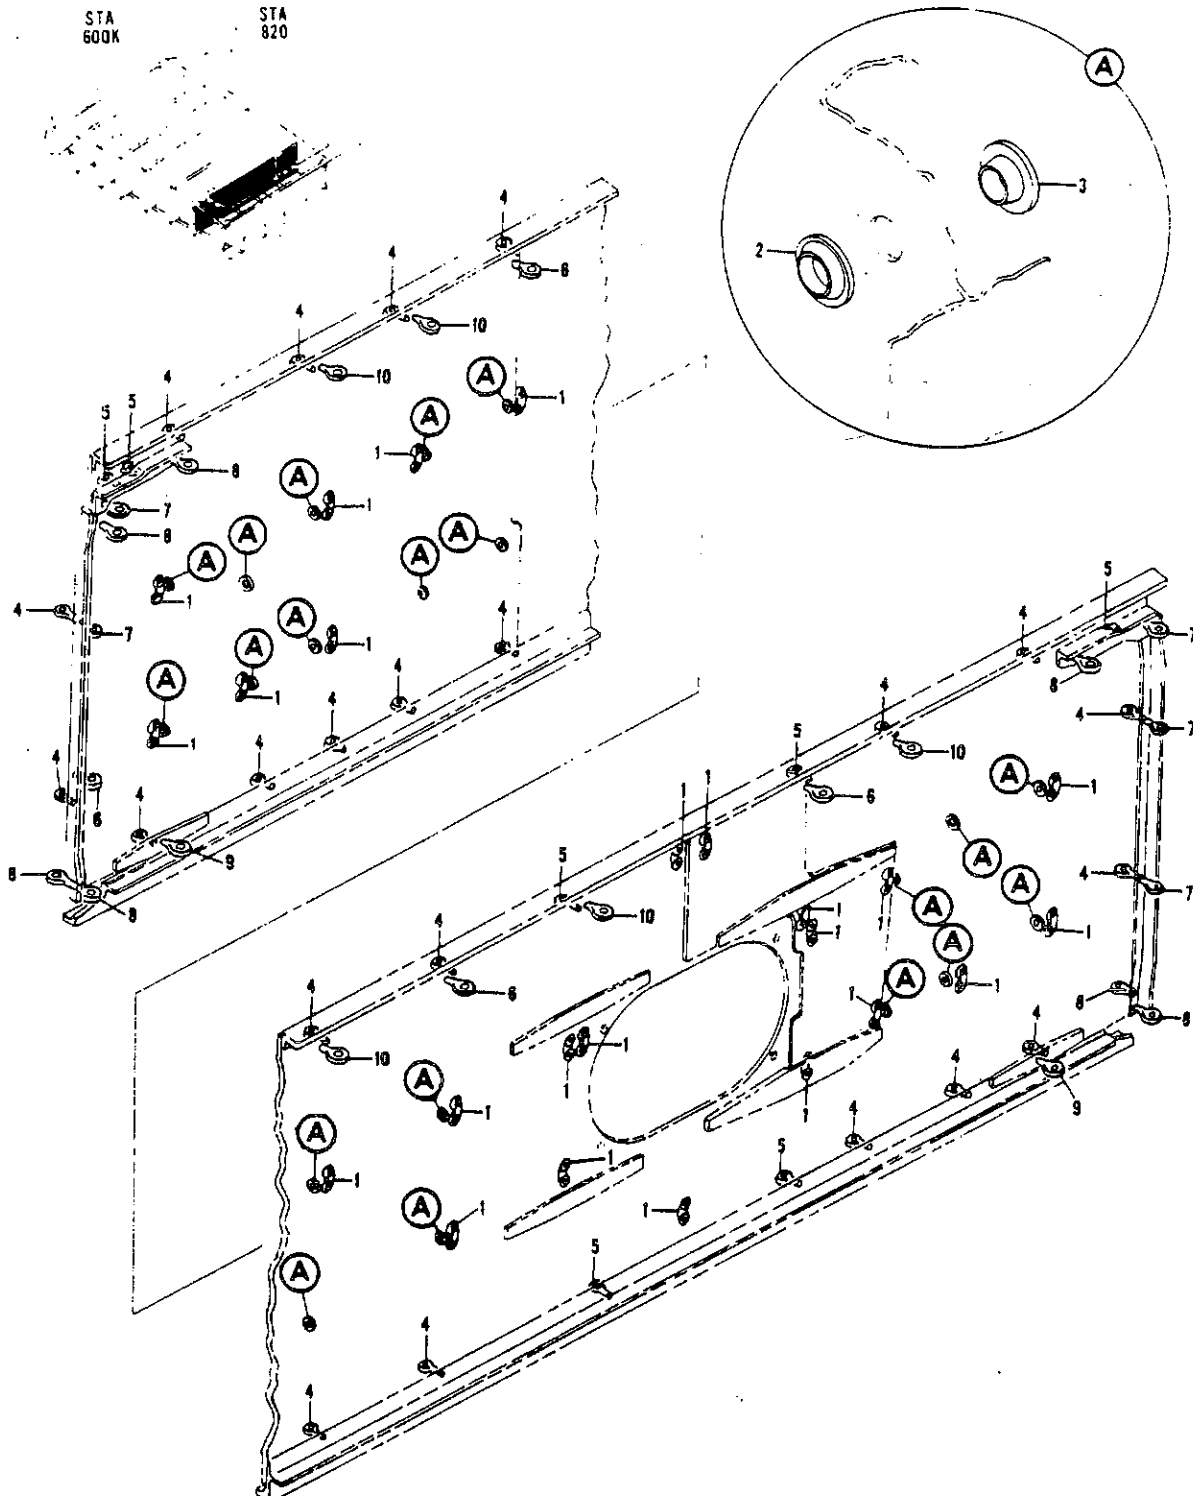


FIGURE 10. BEAM INSTL. WING CENTER SECTION SPANWISE NO. 6



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
10	64-1008		BEAM INSTL, WING CENTER SECTION SPANWISE NO. 6 (SEE . . . FIG. 2, ITEM 8)		RF
1	6-36717-1		. ANCHOR, TANK LACING		24
2	AN230WAI		. WASHER.		20
3	AN230GAI		. GROMMET		20
4	6-63321		. BOLT, FUEL CELL LACING EYE.		22
5	6-63321-1		. BOLT, FUEL CELL LACING EYE.		7
6	6-63321-5		. BOLT, FUEL CELL LACING EYE.		4
7	6-63321-12		. BOLT, FUEL CELL LACING EYE.		5
8	6-63321-13		. BOLT, FUEL CELL LACING EYE.		7
9	6-63321-14		. BOLT, FUEL CELL LACING EYE.		2
10	6-63321-16		. BOLT, FUEL CELL LACING EYE.		5
			ATTACHING PARTS		
	AN960D10		. WASHER.		AR
	AN960D10L		. WASHER.		AR
	BACN10BY53W		. NUT		52
			-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

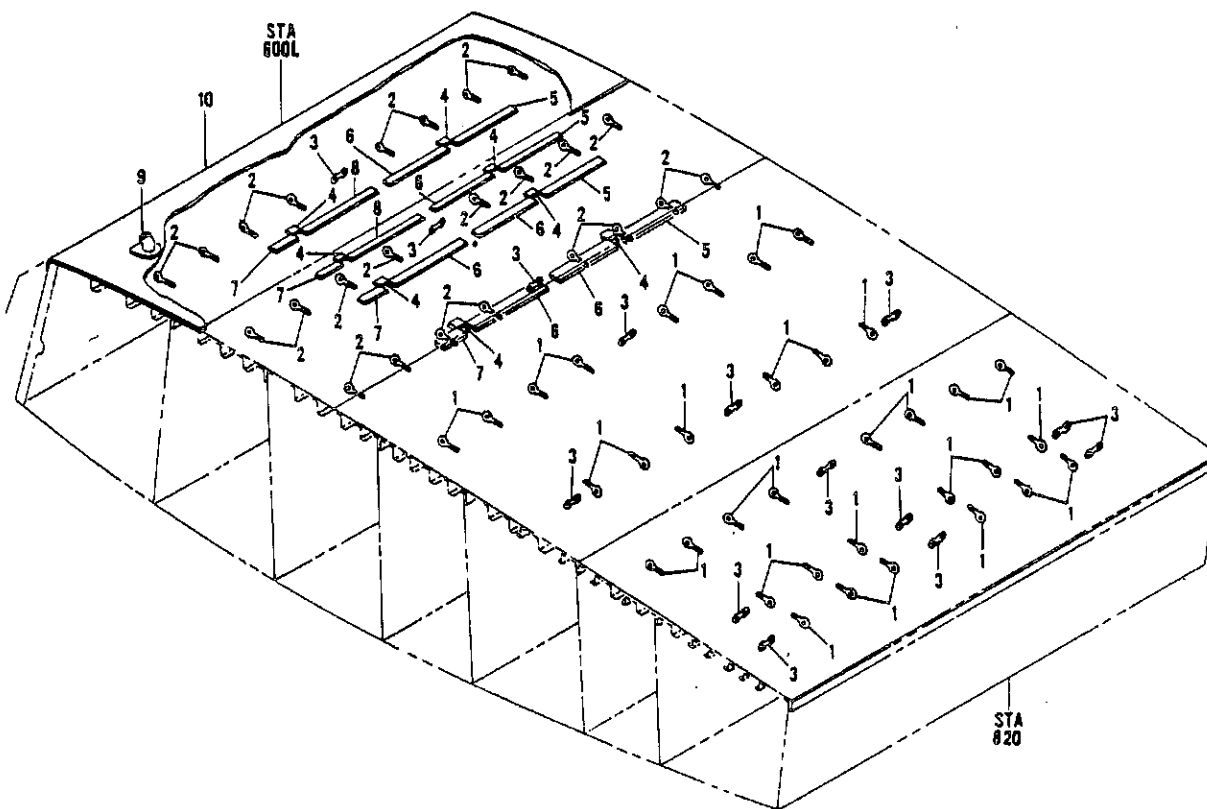
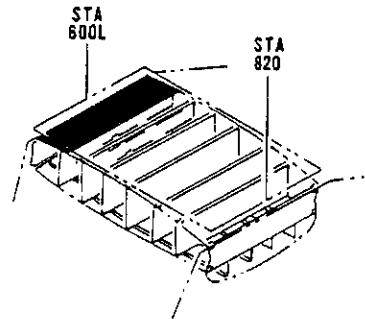


FIGURE 11. PANEL INSTL, SECTION 11 UPPER

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
11	65-1022-16		PANEL INSTL, SECTION 11 UPPER (SEE FIG. 2 ITEM 11).	0399	RF
1	6-63321		. EYEBOLT, FUEL CELL LACING	0399	34
			ATTACHING PARTS		
	NAS679A3W		. NUT	0399	34
2	6-63321		. EYEBOLT, FUEL CELL LACING	0399	24
			ATTACHING PARTS		
	NAS679A3W		. NUT	0399	24
3	6-36717-1		. ANCHOR, TANK LACING	0399	14
4	66-2695-7		. STRIP, CABLE RUB.	0399	8
5	66-2695-8		. STRIP, CABLE RUB.	0399	4
6	66-2695-9		. STRIP, CABLE RUB.	0399	6
7	66-2695-10		. STRIP, CABLE RUB.	0399	4
8	66-2695-16		. STRIP, CABLE RUB.	0399	2
	69-27013		. FITTING INSTL, UPPER PANEL WING CENTER SECTION VENT.	0399	1
9	65-40096		. . FITTING, WING CENTER SECTION UPPER PANEL DRAIN. (OPTIONAL 69-27083)	0399	1
10	65-1022-17		. SKIN, FORWARD	0399	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					


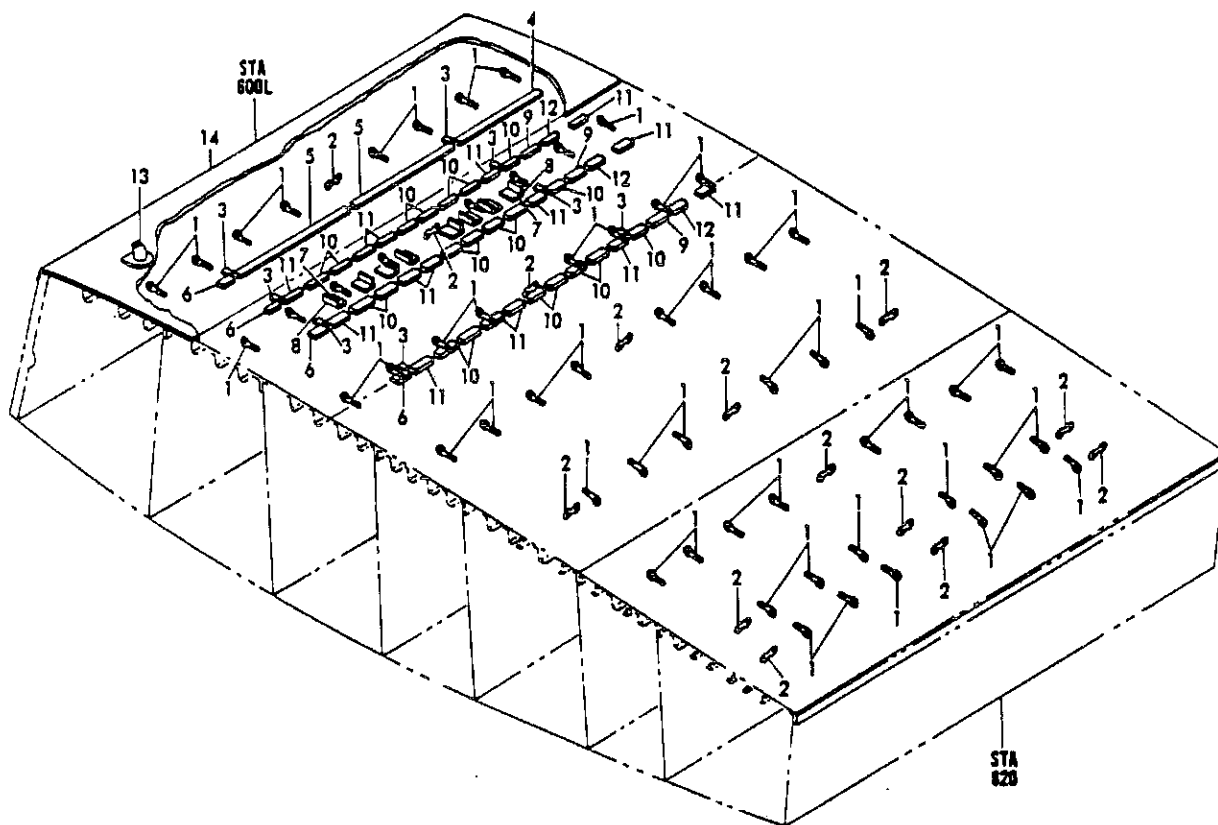


FIGURE 11A. PANEL INSTL, SECTION 11 UPPER

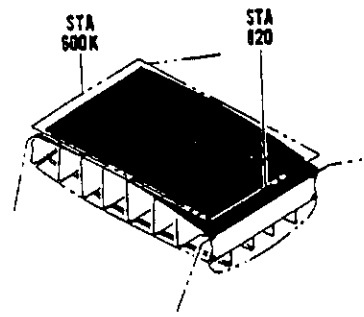

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF	UNITS
				FROM TO	PER ASSY
11A	65-1022		PANEL INSTL, SECTION 11 UPPER (REWORKED BY DWG NO. 65-65941) (SEE FIG. 2, ITEM 11)	0102	RF
1	6-63321		. EYEBOLT, FUEL CELL LACING	0102	58
	BACN10BY53W		. ATTACHING PARTS	0102	58
			. NUT	0102	58
2	6-36717-1		. ANCHOR, TANK LACING	0102	14
3	66-2695-7		. STRIP, CABLE RUB.	0102	8
4	66-2695-8		. STRIP, CABLE RUB.	0102	1
5	66-2695-9		. STRIP, CABLE RUB.	0102	2
6	66-2695-10		. STRIP, CABLE RUB.	0102	4
7	65-65941-21		. STRIP, CABLE RUB (ADDED BY REWORK DWG NO. 65-65941)	0102	8
8	65-65941-22		. STRIP, CABLE RUB (ADDED BY REWORK DWG NO. 65-65941)	0102	8
9	65-65941-23		. STRIP, CABLE RUB (ADDED BY REWORK DWG NO. 65-65941)	0102	3
10	65-65941-24		. STRIP, CABLE RUB (ADDED BY REWORK DWG NO. 65-65941)	0102	21
11	65-65941-25		. STRIP, CABLE RUB (ADDED BY REWORK DWG NO. 65-65941)	0102	15
12	65-65941-26		. STRIP, CABLE RUB (ADDED BY REWORK DWG NO. 65-65941)	0102	3
	69-27013		. FITTING, INSTL, WING CENTER SECTION VENT.	0102	1
13	65-40096		. . FITTING, DRAIN. (OPTIONAL 69-27083)	0102	1
13	69-27083		. . FITTING, DRAIN. (OPTIONAL TO 65-40096)	0102	1
14	65-1022-13		. SKIN, FORWARD	0102	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

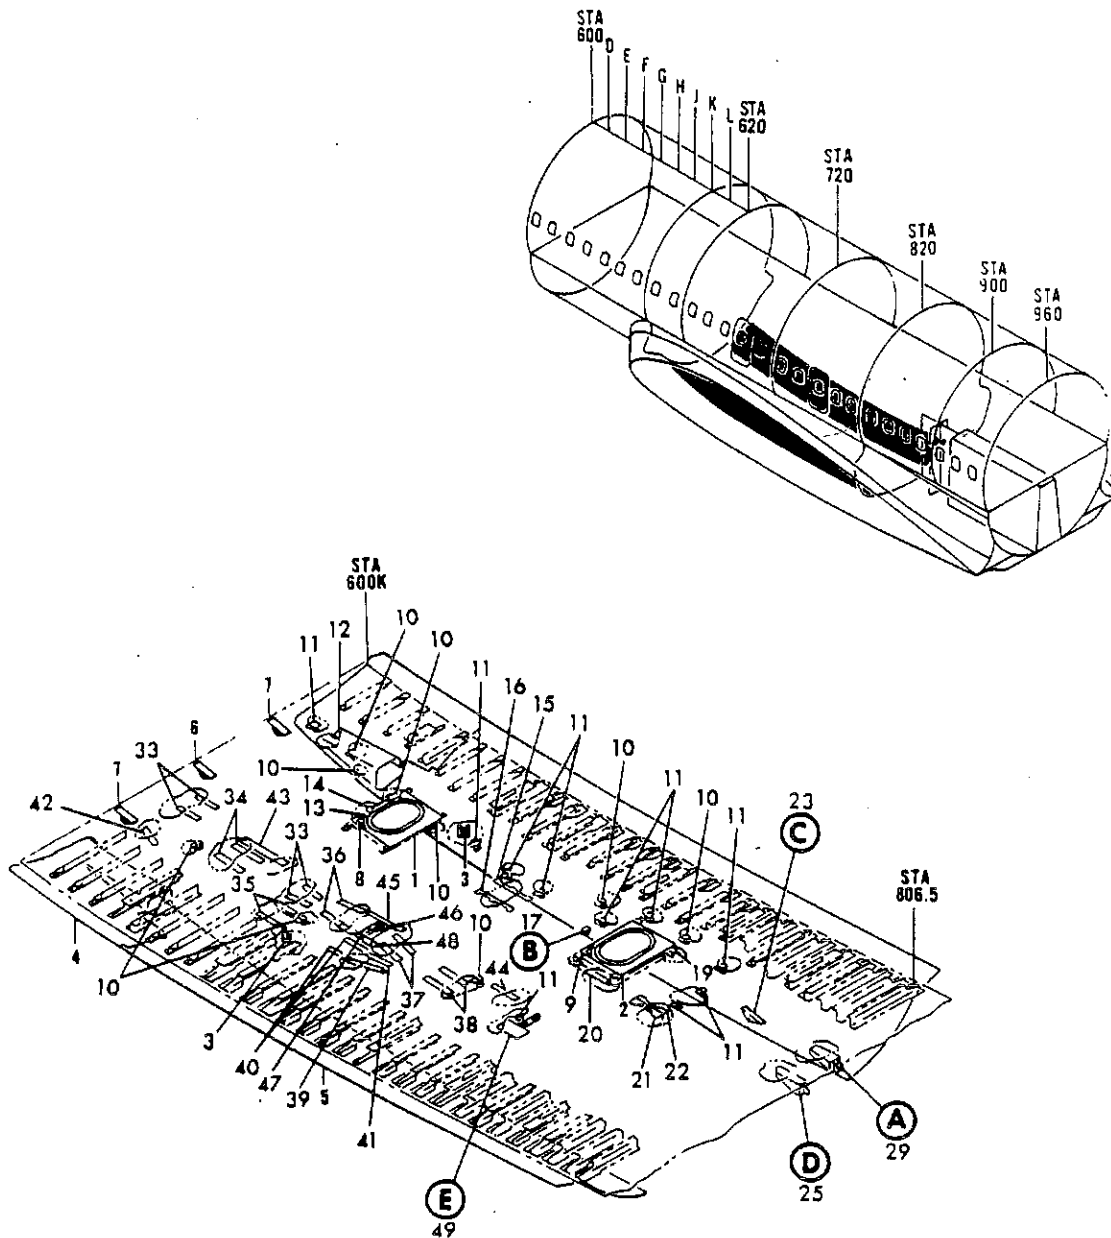


FIGURE 12. PANEL INSTL, SECTION 11 LOWER (WINGS ONLY) (SHEET 1)

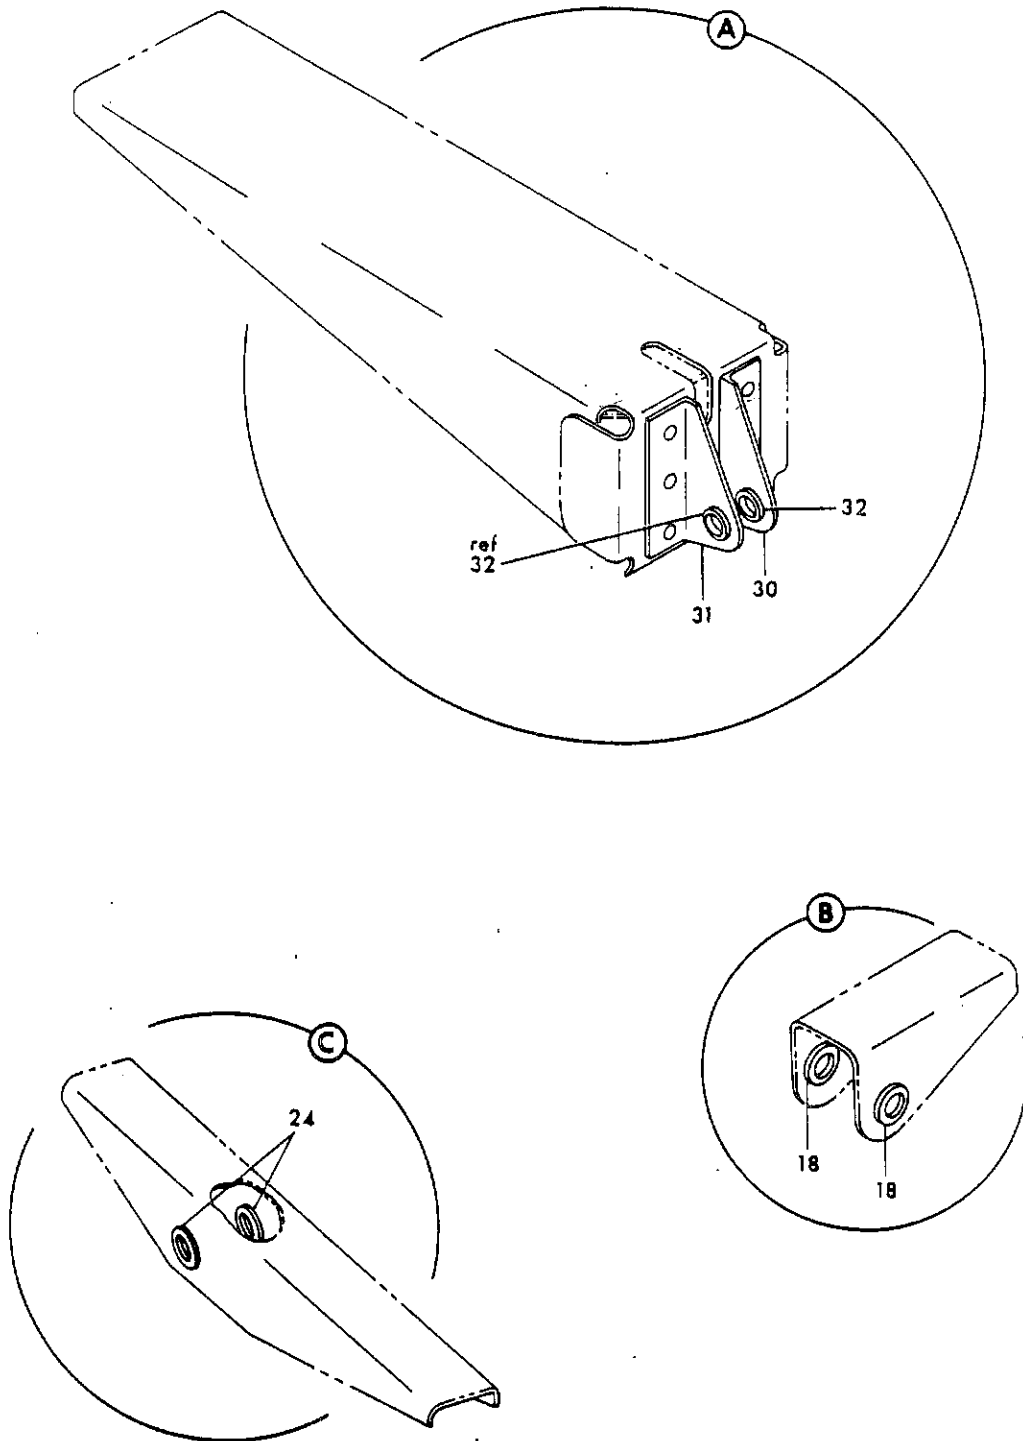


FIGURE 12. SECTION 11 LOWER PANEL INSTALLATION (SHEET 2)

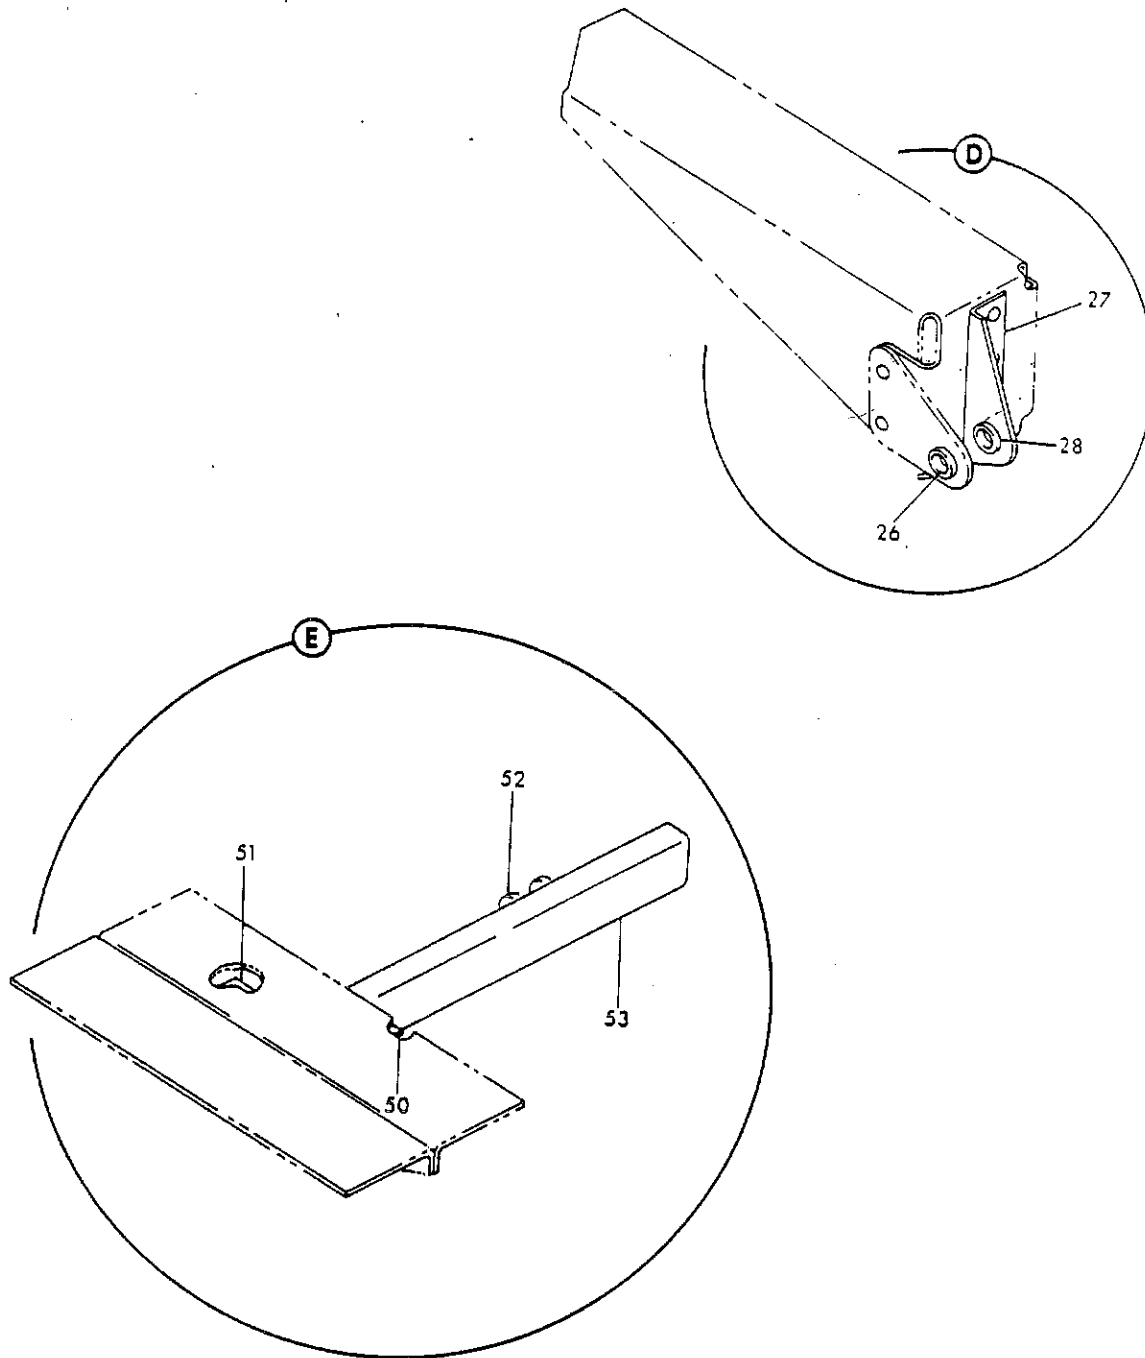


FIGURE 12. SECTION 11 LOWER PANEL INSTALLATION (SHEET 3)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
12	65-1024	PANEL INSTL, SECTION 11 LOWER (WINGS ONLY) (SEE FIG. 2, ITEM 12)								RF
1	65-4894-6	. PLATE, WING CENTER SECTION LOWER PANEL BEARING. . . .								1
2	65-4894-7	. PLATE, WING CENTER SECTION LOWER PANEL BEARING. . . .								1
3	66-8747	. BRACKET ASSY, LIGHT SUPPORT								2
4	65-1030-51	. FAIRING INSTL, BODY STATION 600K TO 620 WING TO BODY FAIRING (LH) (SEE 57-5, FIG. 1)								1
4	65-1030-52	. FAIRING INSTL, BODY STATION 600K TO 620 WING TO BODY FAIRING (RH) (SEE 57-5, FIG. 1)								1
5	65-1031-3	. FAIRING INSTL, BODY STATION 620 TO 820 WING TO BODY (LH) (SEE 57-5, FIG. 5)								1
5	65-1031-4	. FAIRING INSTL, BODY STATION 620 TO 820 WING TO BODY (RH) (SEE 57-5, FIG. 5)								1
6	69-1068-3	. FITTING, BULKHEAD LINK WING								1
7	69-1068-2	. FITTING, BULKHEAD LINK WING								2
8	65-10346	. GASKET, SECTION 11 LOWER PANEL INSTALLATION								1
9	65-10346-1	. GASKET, SECTION 11 LOWER PANEL INSTALLATION								1
		. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

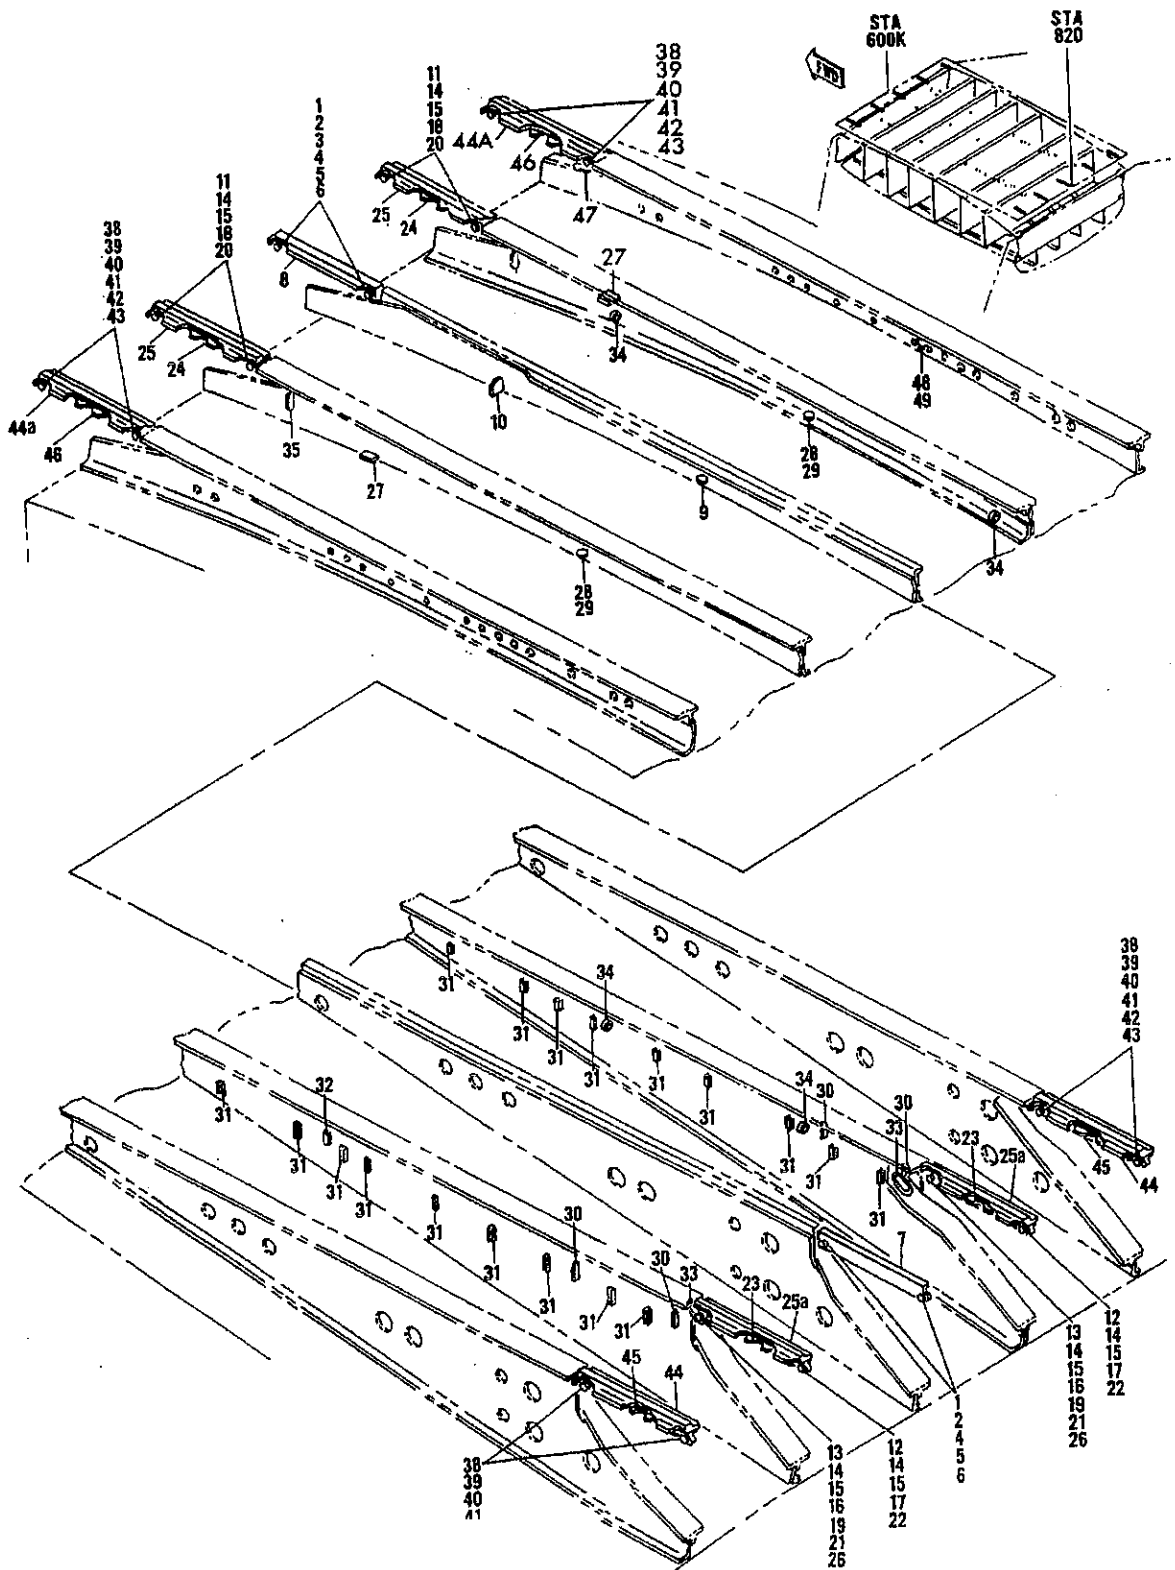


FIGURE 13. BEAM INSTL, BODY STATION 600K TO 820 WING CENTER SECTION FLOOR



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE											EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7						
13		BEAM INSTL, BODY STATION 600K TO 820 WING CENTER.												
	65-1029-767	SECTION FLOOR												
		BEAM INSTL, BODY STATION 600K TO 820 BODY BUTTOCK . . .												RF
		LINE 24.75 WING CENTER SECTION FLOOR (LH) (SEE												
		FIG. 2, ITEM 14)												
	65-1029-768	BEAM INSTL, BODY STATION 600K TO 820 BODY BUTTOCK . . .												RF
		LINE 24.75 WING CENTER SECTION FLOOR (RH) (SEE												
		FIG. 2, ITEM 15)												
11	AN4-11	BOLT.												2
12	AN4-12	BOLT.												1
13	NAS1104-11DW	BOLT.												1
14	AN960D416	WASHER.												6
15	AN310-4	NUT.												4
16	NAS75-4-021	BUSHING.												1
17	NAS75-4-026	BUSHING.												1
18	NAS75-4-023	BUSHING.												2
19	NAS538B6P12	BUSHING.												2
20	NAS538B6P15	BUSHING.												6
21	NAS538B6P16	BUSHING.												1
22	NAS538B6P18	BUSHING.												3
23	69-4117	LINK, WING CENTER SECTION FLOOR BEAM TRACK SUPPORT												1
24	69-5167-1	LINK, WING CENTER SECTION FLOOR BEAM TRACK SUPPORT												1
25	69-4121-1	LINK, WING CENTER SECTION FLOOR BEAM TRACK.												1
25A	69-4121	LINK, WING CENTER SECTION FLOOR BEAM TRACK.												1
26	69-8865-14	GUARD, WING CENTER SECTION CABLE.												1
27	69-8865-18	GUARD, WING CENTER SECTION CABLE.												1
28	69-8865-12	GUARD, WING CENTER SECTION CABLE.												1
30	69-8865-7	GUARD, WING CENTER SECTION CABLE.												2
31	BACG20ZB300	GROMMET.												9
32	BACG20ZB300	GROMMET, (LH ONLY).												1
33	BACG20ZD814	GROMMET.												1
34	BACG20H3N	GROMMET, (RH ONLY).												4
35	65-1029-262	STRIP, BODY STATION 600K TO 820 WING CENTER SECTION												1
		FLOOR BEAM RUB												
	65-1029-770	BEAM INSTL, BODY STATION 600K TO 820 BODY BUTTOCK . . .												RF
		LINE 45.43 WING CENTER SECTION FLOOR (RH) (SEE												
		FIG. 2, ITEM 17)												
38	AN4-12	BOLT.												4
39	AN960D416	WASHER.												12
40	AN960D816L	WASHER.												4
41	AN310-4	NUT.												4
42	NAS75-4-023	BUSHING.												4
43	NAS538B6P15	BUSHING.												12
44	69-4121	LINK, WING CENTER SECTION FLOOR BEAM TRACK.												1
44A	69-4121-1	LINK, WING CENTER SECTION FLOOR BEAM TRACK (RH. . . .												1
		ONLY)												
45	69-4117	LINK, WING CENTER SECTION FLOOR BEAM TRACK SUPPORT												1
46	69-5167-1	LINK, WING CENTER SECTION FLOOR BEAM TRACK SUPPORT												1
		(RH ONLY)												
49	69-8865-16	SHIM, WING CENTER SECTION CABLE GUARD (RH ONLY) . . .												1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

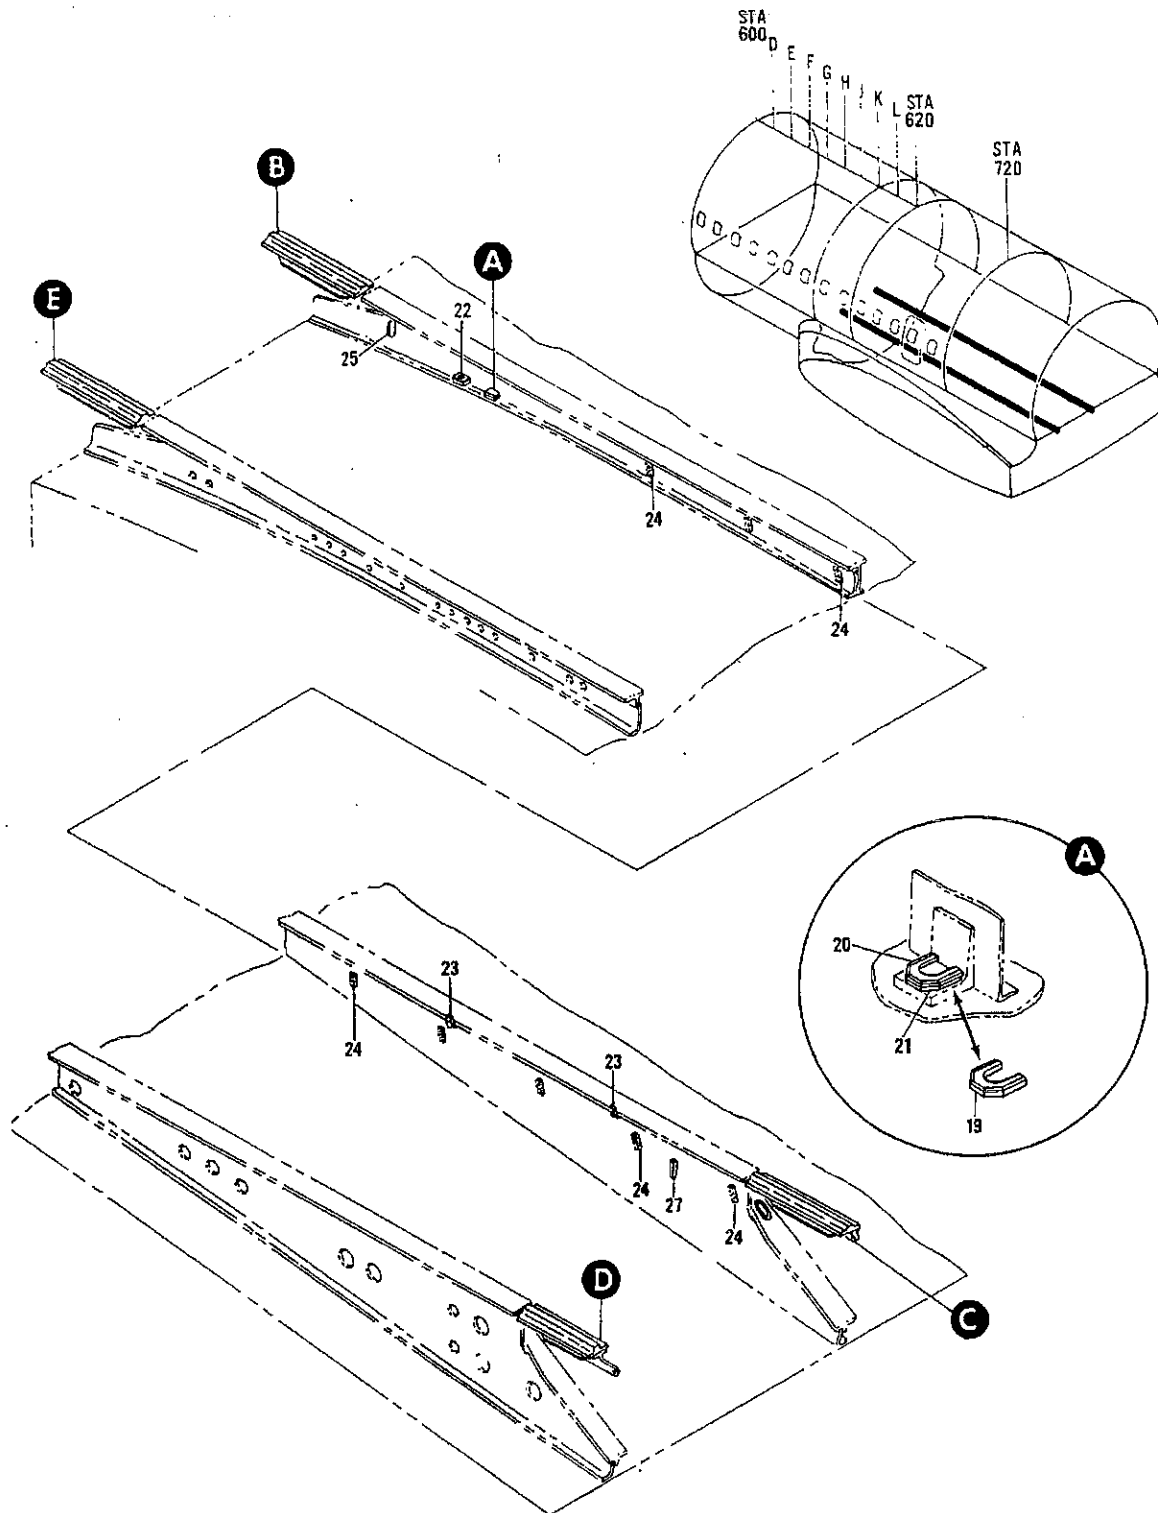


FIGURE 14. BEAM INSTL, BODY STATION 600K TO 820 WING CENTER SECTION FLOOR (SHEET 1)

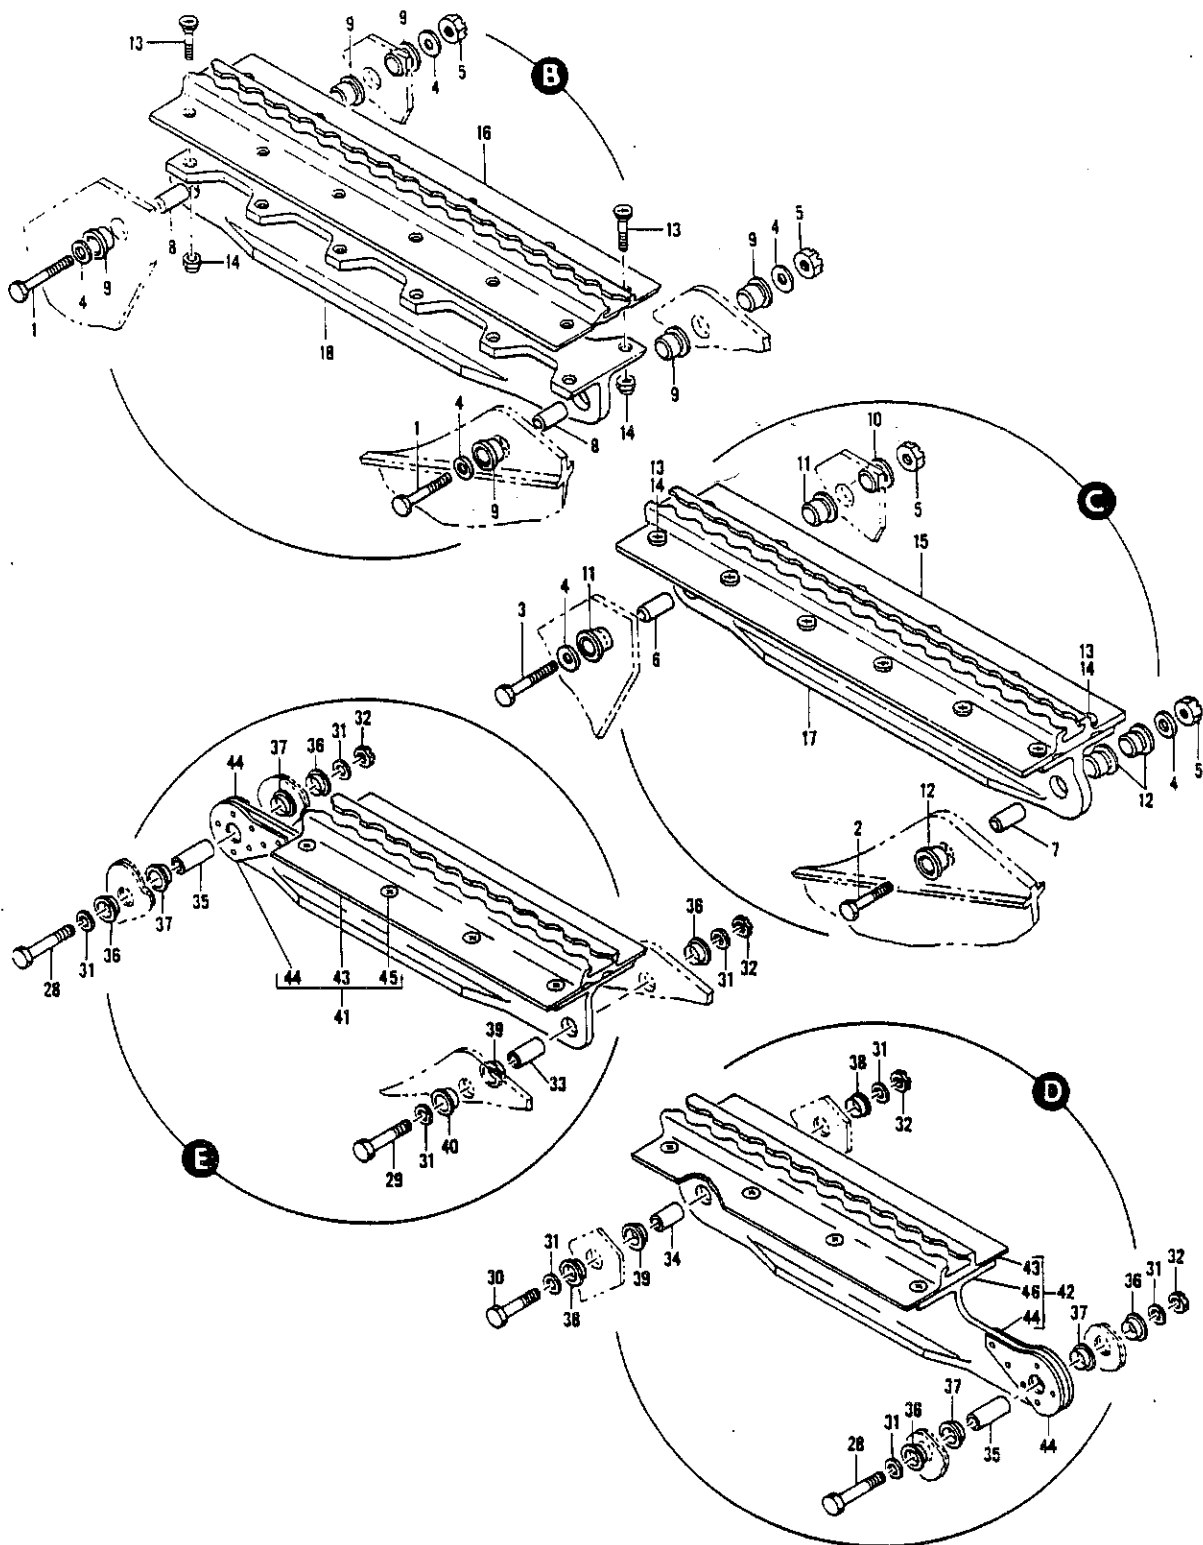


FIGURE 14. BEAM INSTL. BODY STATION 600K TO 820 WING CENTER SECTION FLOOR (SHFT 2)

NOV 21/90

57-06-14

DETAILED PARTS LIST
57-06-14
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
14			BEAM INSTL, BODY STATION 600K TO 820 WING CENTER. SECTION FLOOR		
	65-1029-769		. BEAM INSTL, BODY STATION 600K TO 820 BODY BUTTOCK . . LINE 0.05 WING CENTER SECTION FLOOR (SEE FIG. 2, ITEM 13)		RF
1	AN4-11		. . . BOLT.		2
2	AN4-12		. . . BOLT.		1
3	NAS1104-11DW		. . . BOLT.		1
4	AN960D416		. . . WASHER.		6
5	AN310-4		. . . NUT		4
6	NAS75-4-021		. . . BUSHING		1
7	NAS75-4-026		. . . BUSHING		1
8	NAS75-4-023		. . . BUSHING		2
9	NAS53886P15		. . . BUSHING		6
10	NAS53886B16		. . . BUSHING		1
11	NAS53886P12		. . . BUSHING		2
12	NAS53886P18		. . . BUSHING		3
13	NAS517-4-3		. . . SCREW		24
14	BACN108-L4L		. . . NUT		24
15	69-4121		. . . LINK, WING CENTER SECTION FLOOR BEAM TRACK.		1
16	69-4121-1		. . . LINK, WING CENTER SECTION FLOOR BEAM TRACK.		1
17	69-4117		. . . LINK, WING CENTER SECTION FLOOR BEAM TRACK SUPPORT	0130	1
17	69-4117-1		. . . LINK, WING CENTER SECTION FLOOR BEAM TRACK SUPPORT	5199	1
18	69-5167-1		. . . LINK, WING CENTER SECTION FLOOR BEAM TRACK SUPPORT		1
19	69-8865-12		. . . GUARD, WING CENTER SECTION CABLE.		1
22	69-8865-18		. . . GUARD, WING CENTER SECTION CABLE.		1
23	69-8865-7		. . . GUARD, WING CENTER SECTION CABLE.		2
24	BACG20ZB300		. . . GROMMET		8
25	65-1029-262		. . . STRIP, BODY STATION 600K TO 820 BODY BUTTOCK LINE . 0.07 WING CENTER SECTION FLOOR BEAM RUB		1
27	65-1029-264		. . . STRIP, BODY STATION 600K TO 820 BODY BUTTOCK LINE . 0.07 WING CENTER SECTION FLOOR BEAM RUB		1
	65-1029-301		. BEAM INSTL, BODY STATION 600K TO 820 BODY BUTTOCK . . LINE 45.43 WING CENTER SECTION FLOOR (LH) (SEE FIG. 2, ITEM 16)		RF
28	NAS1306-21DW		. . . BOLT.		2
29	NAS1306-17DW		. . . BOLT.		1
30	NAS1306-14DW		. . . BOLT.		1
31	AN960D616		. . . WASHER.		8
32	AN310-6		. . . NUT		4
33	NAS75-6-032		. . . BUSHING		1
34	NAS75-6-026		. . . BUSHING		1
35	NAS75-6-107		. . . BUSHING		2
36	NAS53888P18		. . . BUSHING		5
37	NAS53888P20		. . . BUSHING		4
38	NAS53888P16		. . . BUSHING		2
39	NAS53888P22		. . . BUSHING		2
40	NAS53888P27		. . . BUSHING		1
41	65-28299-5		. . . LINK ASSY, WING CENTER SECTION FLOOR BEAM TRACK . SUPPORT		1
42	65-28299-6		. . . LINK ASSY, WING CENTER SECTION FLOOR BEAM TRACK . SUPPORT		1
43	69-25186-1		. . . TRACK, WING CENTER SECTION FLOOR BEAM LINK. . . . ATTACHING PARTS		1
	NAS517-4-5		. . . SCREW		8
	AN960PD416		. . . WASHER.		8
	NAS679A4W		. . . NUT		8
44	66-18639-1		. . . PLATE, WING CENTER SECTION TRACK SUPPORT. ATTACHING PARTS		2
	BACR15CED5		. . . RIVET		7
45	65-28299-7		. . . LINK, WING CENTER SECTION FLOOR BEAM TRACK. . . . SUPPORT (USED ON 65-28299-5)		1
46	65-28299-8		. . . LINK, WING CENTER SECTION FLOOR BEAM TRACK. . . . SUPPORT (USED ON 65-28299-6)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					


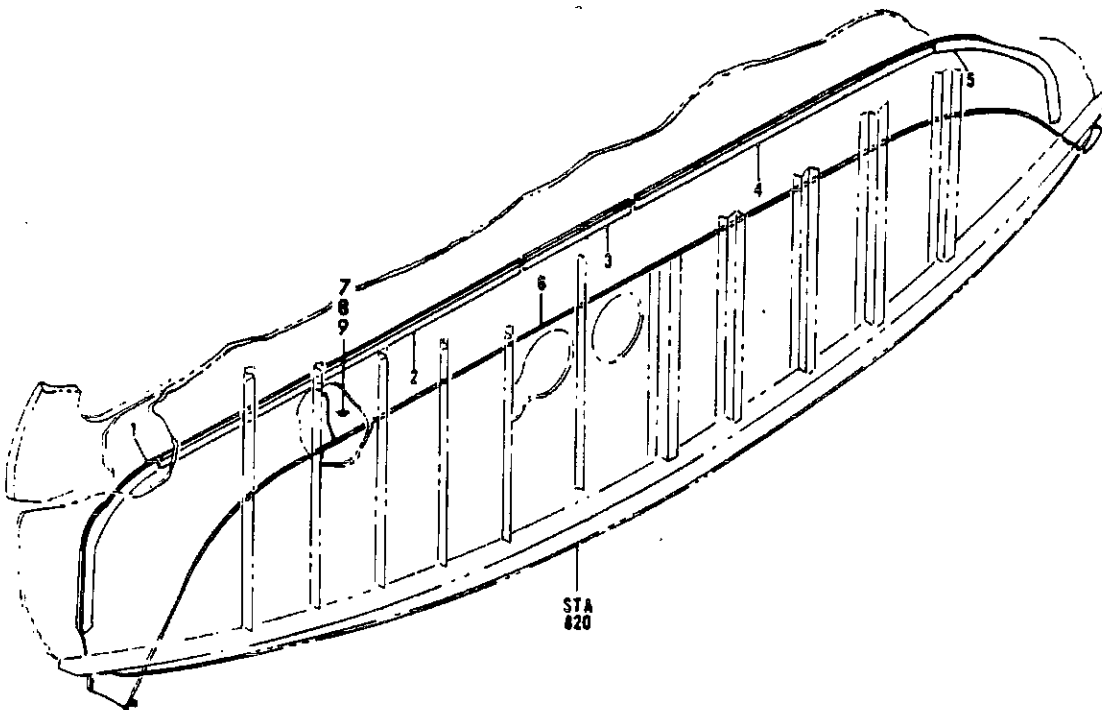


FIGURE 15. SEAL INSTL, REAR SPAR VAPOR BARRIER

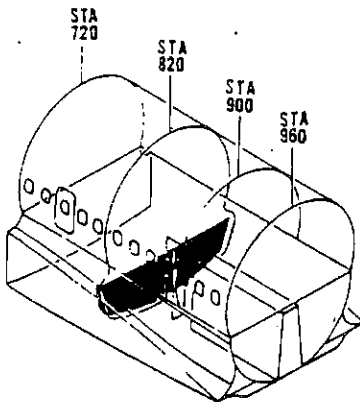

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
15	65-7118	SEAL INSTL, REAR SPAR VAPOR BARRIER (SEE 57-1, FIG. 1, ITEM 11)		RF
1	66-5108-1	. RETAINER, REAR SPAR VAPOR BARRIER SEAL.		1
2	65-7118-1	. RETAINER, REAR SPAR VAPOR BARRIER SEAL.		1
3	65-7118-2	. RETAINER, REAR SPAR VAPOR BARRIER SEAL.		1
4	65-7118-1	. RETAINER, REAR SPAR VAPOR BARRIER SEAL.		1
5	66-5108-2	. RETAINER, REAR SPAR VAPOR BARRIER SEAL.		1
		ATTACHING PARTS		
	AN3-3A	. BOLT.		AR
		(OPTIONAL BAC830K23-3)		
	BAC830K23-3	. BOLT.		AR
		(OPTIONAL TO AN3-3A)		
	AN3-4A	. BOLT.		20
	AN960D10L	. WASHER.		20
	NAS679A3W	. NUT		20
8	10-60824-11	. SEAL, IMPREGNATED FABRIC.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *707*
Intercontinental
PARTS CATALOG

SECTION 07
BACKING BOARDS

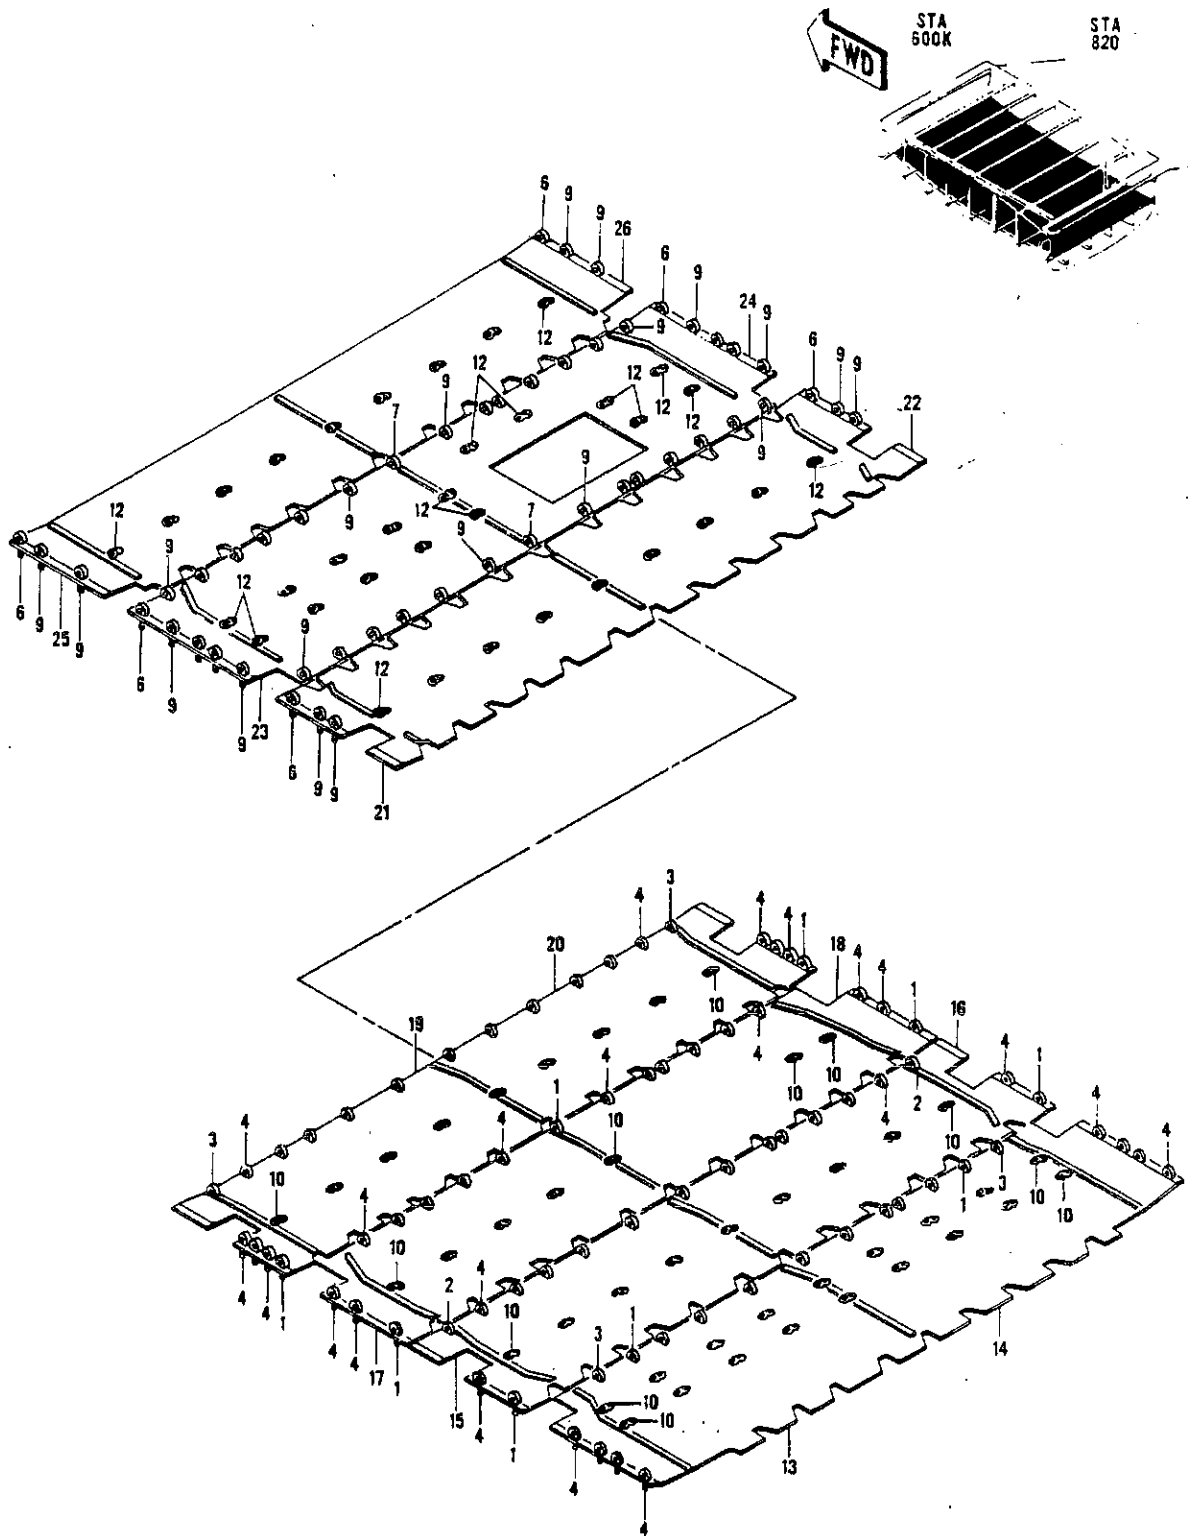


FIGURE 1. BACKING BOARD INSTL, WING CENTER SECTION



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1	65-7130-58		BACKING BOARD INSTL, WING CENTER SECTION (SEE 57-6, . . . FIG. 2, ITEM 9)		RF
1	6-63321-5		. BOLT, FUEL CELL LACING EYE.		17
2	6-63321-9		. BOLT, FUEL CELL LACING EYE.		2
3	6-63321-13		. BOLT, FUEL CELL LACING EYE.		4
4	6-63321-16		. BOLT, FUEL CELL LACING EYE.		54
	AN960PD10L		ATTACHING PARTS . WASHER.		74
			-----*		
6	6-63321-5		. BOLT, FUEL CELL LACING EYE.		6
7	6-63321-9		. BOLT, FUEL CELL LACING EYE.		2
9	6-63321-16		. BOLT, FUEL CELL LACING EYE.		42
	AN960PD10L		ATTACHING PARTS . WASHER.		AR
			-----*		
10	6-36717-7		. ANCHOR, TANK LACING (OPTIONAL 6-36717-6)		43
10	6-36717-6		. ANCHOR, TANK LACING (OPTIONAL TO 6-36717-7)		43
	NAS221-8		ATTACHING PARTS . SCREW		AR
	NAS221-11		. SCREW		6
	NAS221-12		. SCREW		4
			-----*		
12	6-36717-7		. ANCHOR, TANK LACING (OPTIONAL 6-36717-6)		34
12	6-36717-6		. ANCHOR, TANK LACING (OPTIONAL TO 6-36717-7)		34
	NAS221-8		ATTACHING PARTS . SCREW		AR
	NAS221-11		. SCREW		AR
			-----*		
13	65-7130-93		. BACKING BOARD ASSY.		1
14	65-7130-88		. BACKING BOARD ASSY.		1
15	65-7130-61		. BACKING BOARD ASSY.		1
16	65-7130-62		. BACKING BOARD ASSY.		1
17	65-7130-63		. BACKING BOARD ASSY.		1
18	65-7130-64		. BACKING BOARD ASSY.		1
19	65-7130-65		. BACKING BOARD ASSY.		1
20	65-7130-66		. BACKING BOARD ASSY.		1
	NAS221-7		ATTACHING PARTS . SCREW		AR
	NAS221-8		. SCREW		AR
	NAS221-9		. SCREW		59
	NAS221-10		. SCREW		11
	NAS221-11		. SCREW		7
	NAS221-12		. SCREW		4
	NAS221-13		. SCREW		6
	NAS221-14		. SCREW		2
	NAS221-16		. SCREW		12
	AN960PD10L		. WASHER.		AR
			-----*		
21	65-7130-75		. BACKING BOARD ASSY.		1
22	65-7130-76		. BACKING BOARD ASSY.		1
23	65-7130-85		. BACKING BOARD ASSY.		1
24	65-7130-86		. BACKING BOARD ASSY.		1
25	65-7130-77		. BACKING BOARD ASSY.		1
26	65-7130-78		. BACKING BOARD ASSY.		1
	NAS221-8		ATTACHING PARTS . SCREW		AR
	NAS221-11		. SCREW		AR
	AN960PD10L		. WASHER.		AR
			-----*		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

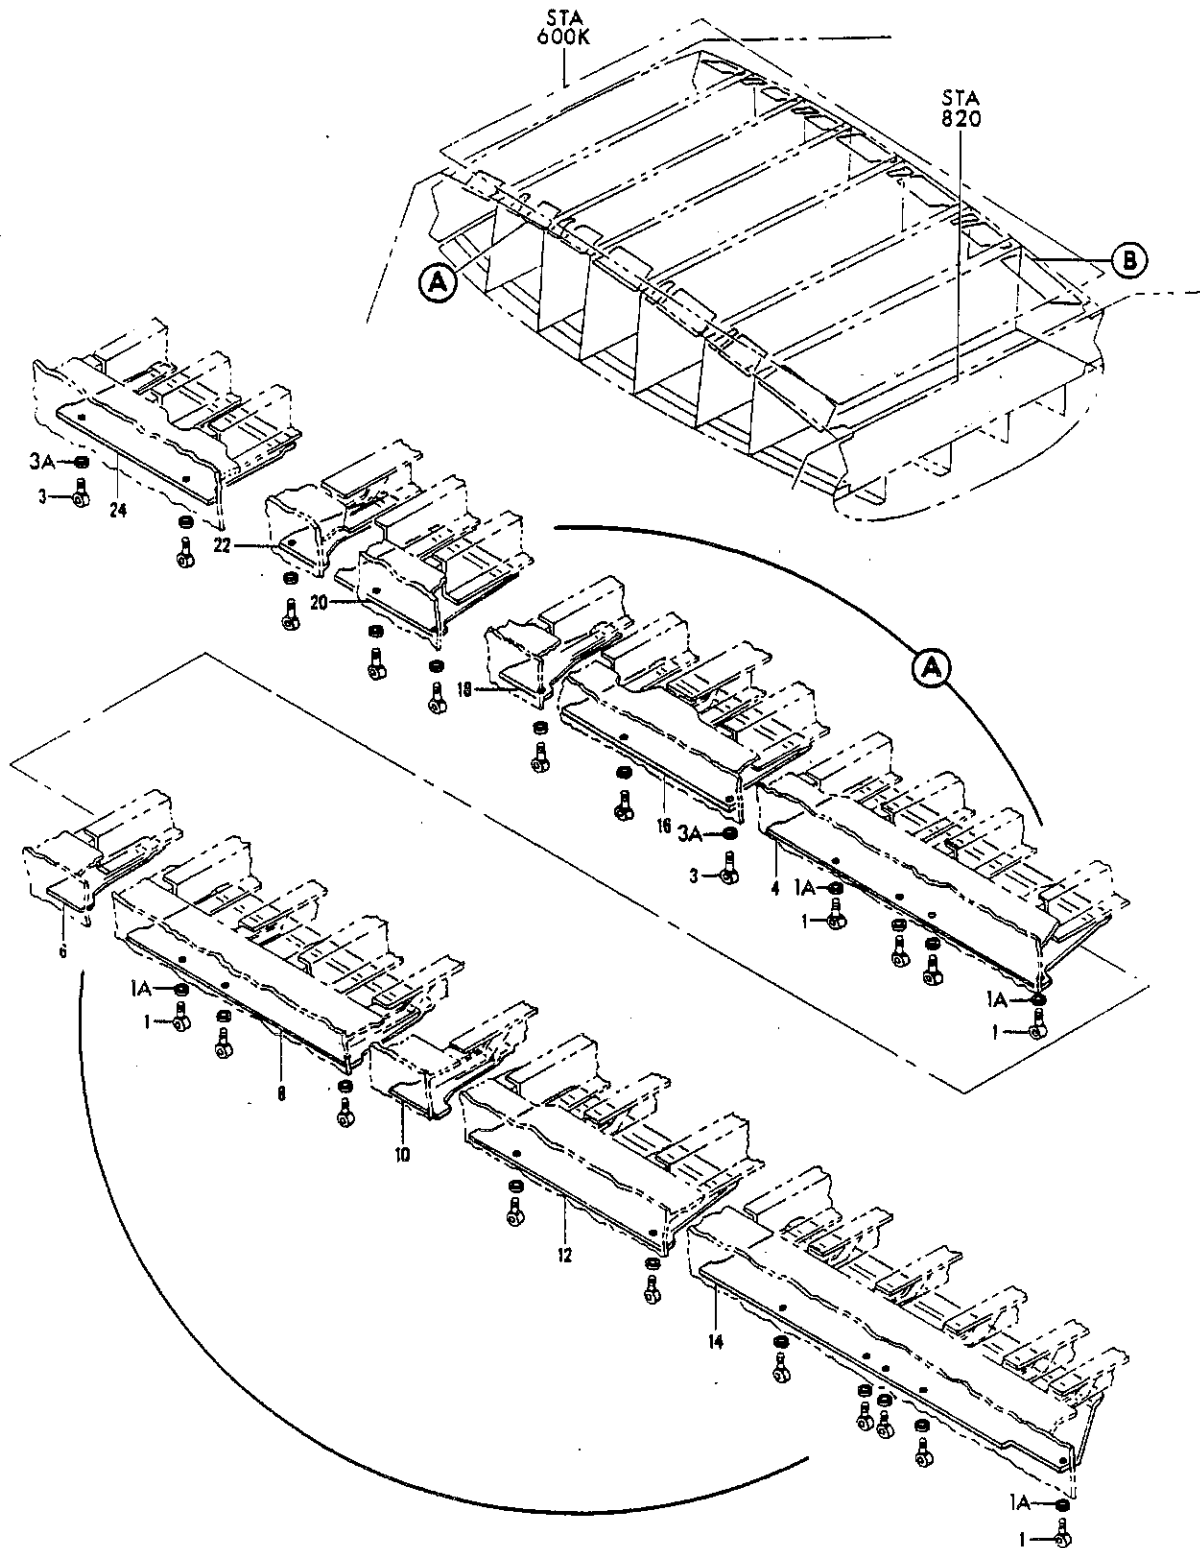


FIGURE 2. BACKING BOARD INSTL. WING CENTER SECTION UPPER (SHEET 1)

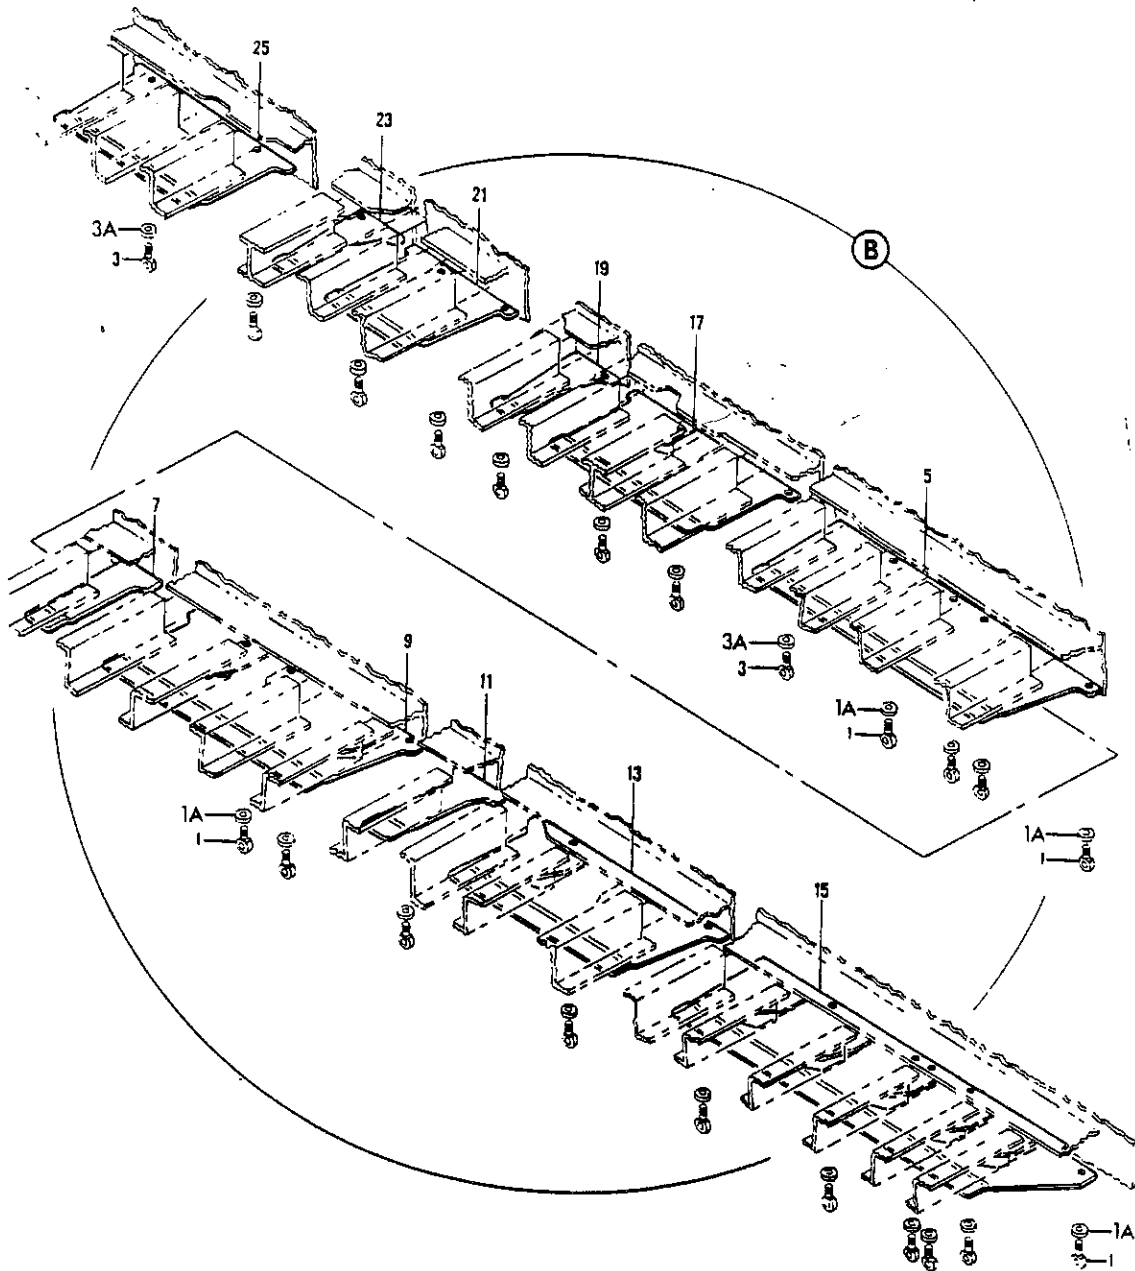


FIGURE 2. BACKING BOARD INSTL, WING CENTER SECTION UPPER (SHEET 2)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2	65-7194-80		BACKING BOARD INSTL, WING CENTER SECTION UPPER (SEE . . . 57-6, FIG. 2, ITEM 10)		RF
1	6-63321-4		. BOLT, FUEL CELL LACING EYE.		28
1A	AN960D10L		. WASHER.		28
3	6-63321-4		. BOLT, FUEL CELL LACING EYE.		16
3A	AN960D10L		. WASHER.		16
4	65-7194-81		. BACKING BOARD ASSY.		1
5	65-7194-82		. BACKING BOARD ASSY.		1
6	65-7194-83		. BACKING BOARD ASSY.		1
7	65-7194-84		. BACKING BOARD ASSY.		1
8	65-7194-85		. BACKING BOARD ASSY.		1
9	65-7194-86		. BACKING BOARD ASSY.		1
10	65-7194-87		. BACKING BOARD ASSY.		1
11	65-7194-88		. BACKING BOARD ASSY.		1
12	65-7194-89		. BACKING BOARD ASSY.		1
13	65-7194-90		. BACKING BOARD ASSY.		1
14	65-7194-91		. BACKING BOARD ASSY.		1
15	65-7194-92		. BACKING BOARD ASSY.		1
			ATTACHING PARTS		
	NAS221-7		. SCREW		94
	AN960D10L		. WASHER.		94
	NAS679A3W		. NUT		36
			-----*		
16	65-7194-93		. BACKING BOARD ASSY.		1
17	65-7194-94		. BACKING BOARD ASSY.		1
18	65-7194-95		. BACKING BOARD ASSY.		1
19	65-7194-96		. BACKING BOARD ASSY.		1
20	65-7194-97		. BACKING BOARD ASSY.		1
21	65-7194-98		. BACKING BOARD ASSY.		1
22	65-7194-99		. BACKING BOARD ASSY.		1
23	65-7194-100		. BACKING BOARD ASSY.		1
24	65-7194-101		. BACKING BOARD ASSY.		1
25	65-7194-102		. BACKING BOARD ASSY.		1
			ATTACHING PARTS		
	NAS221-7		. SCREW		52
	AN960D10L		. WASHER.		52
	NAS679A3W		. NUT		20
			-----*		
			. FUEL MODIFICATION, (SEE CHAPTER 28)		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					