

Fuselage

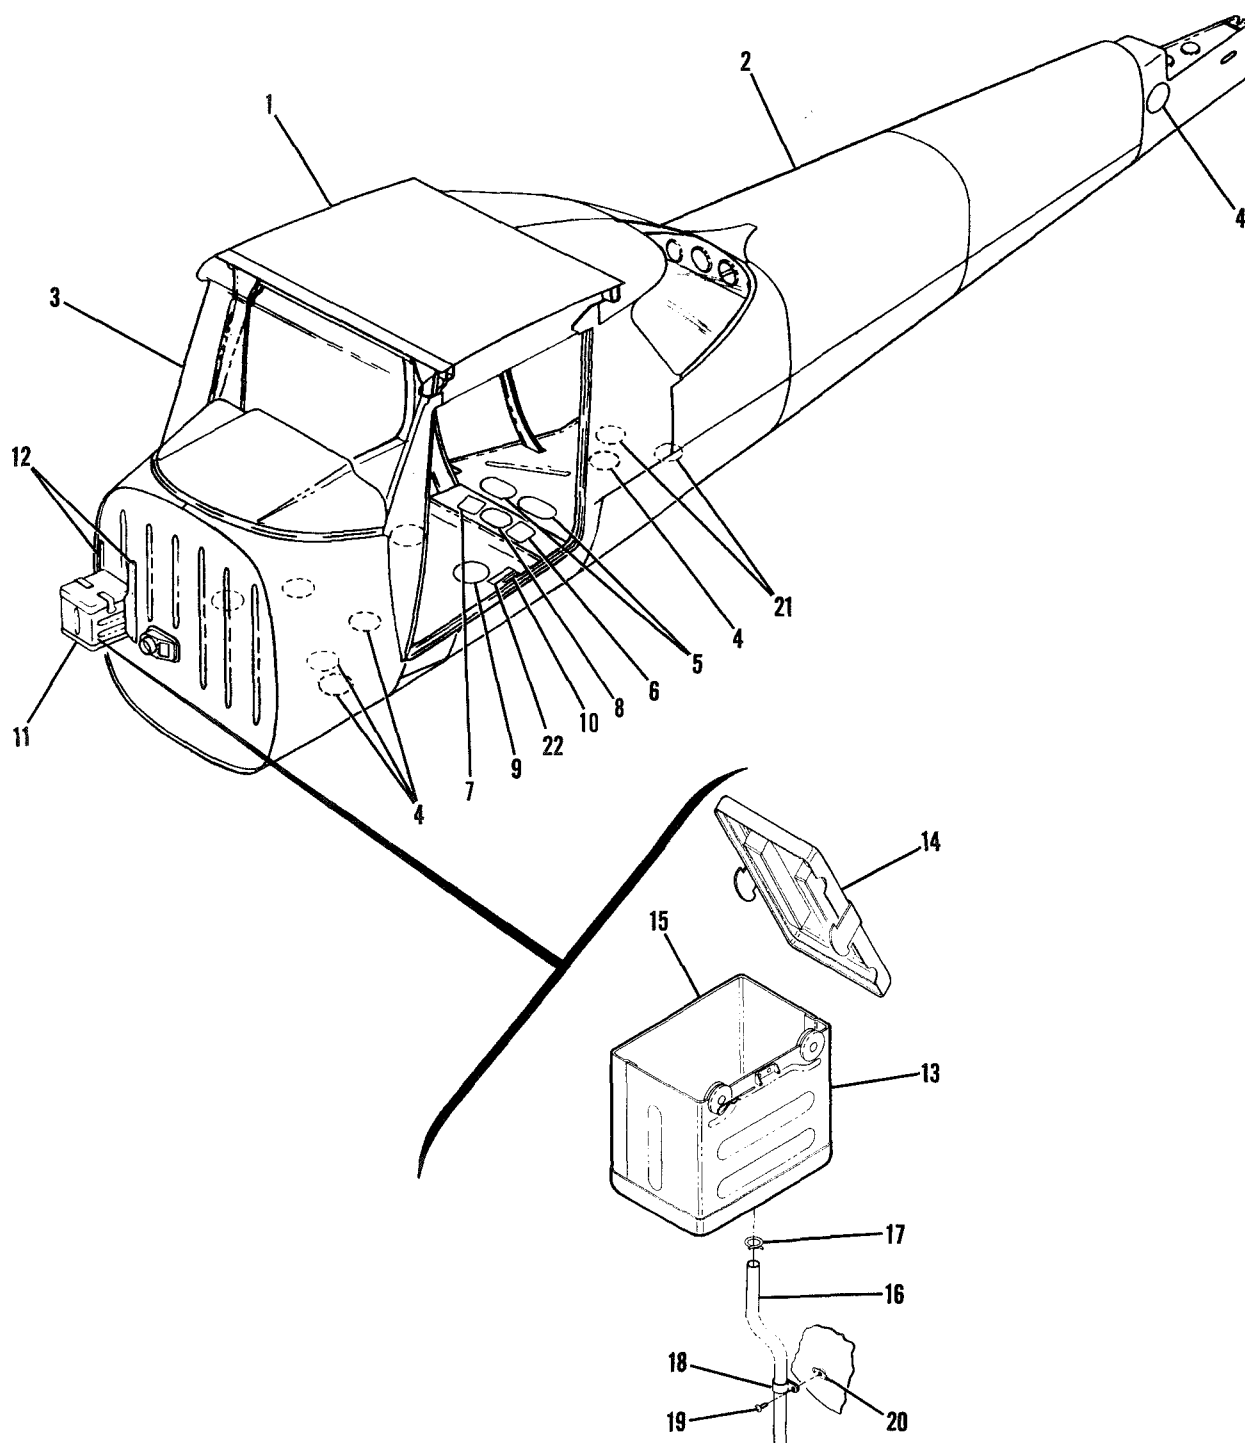


Figure 23. Fuselage Assembly



FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
23 -		FUSELAGE ASSEMBLY -----	NP	
- 1	SEE FIG 24	FRONT & CENTER SECTION-FUSELAGE -----	1	
- 2	SEE FIG 29	TAILCONE ASSEMBLY-FUSELAGE -----	1	
- 3	SEE FIG 31	WINDSHIELD INSTALLATION -----	1	
- 4	S225-1	PLATE-INSPECTION -----	8	
		ATTACHING PARTS -----		
	S1021Z8-8	SCREW -----	3	
		-----*		
- 5	0412061-1	PLATE-INSPECTION -----	2	
		ATTACHING PARTS -----		
	S1021Z8-8	SCREW -----	6	
		-----*		
- 6	0713173-5	PLATE-ACCESS LH -----	1	
- 7	0713173-6	PLATE-ACCESS RH -----	1	
		ATTACHING PARTS -----		
	S1021Z8-8	SCREW -----	6	
		-----*		
- 8	0410229-1	PLATE-INSPECTION -----	1	
		ATTACHING PARTS -----		
	S1021Z8-8	SCREW -----	6	
		-----*		
- 9	0411371	COVER-SEAT PAN INSPECTION -----	2	
		ATTACHING PARTS -----		
	S1021Z8-8	SCREW -----	6	
		-----*		
-10	0713047	PLATE-FINISH & TRIM -----	1	
		ATTACHING PARTS -----		
	AN535-2-3	SCREW -----	2	
		-----*		
-11		BATTERY BOX INSTALLATION -----	NP	
-12	0413401-1	BRACKET -----	2	
		ATTACHING PARTS -----		
	AN520-10R7	SCREW -----	1	
	MS21044N3	NUT -----	1	
		-----*		
	0413402-1	BOX ASSEMBLY-BATTERY -----	1	
-13	0413402-6	BOTTOM ASSEMBLY-BATTERY BOX -----	1	
-14	0413402-2	LID ASSEMBLY-BATTERY BOX -----	1	
		ATTACHING PARTS -----		
-15	AN415-2	PIN -----	2	
		-----*		
	1205024-1	PLACARD -----	1	
-16	S1071-4	DRAIN TUBE-12.0 IN LG BULK ITEM REF S1071-4-12.0 -----	1	
		ATTACHING PARTS -----		
-17	S1494-8	CLAMP -----	1	
-18	MS21919DG8	CLAMP -----	1	
-19	S1021Z8-6	SCREW -----	1	
-20	S1863-3A	NUTPLATE -----	1	
		-----*		
-21	S225-9	PLATE-INSPECTION -----	2	
		ATTACHING PARTS -----		
	S1021Z8-8	SCREW -----	3	
		-----*		
-22		NAMEPLATE-AIRCRAFT IDENTIFICATION -----	NP	

Fuselage (Cont)

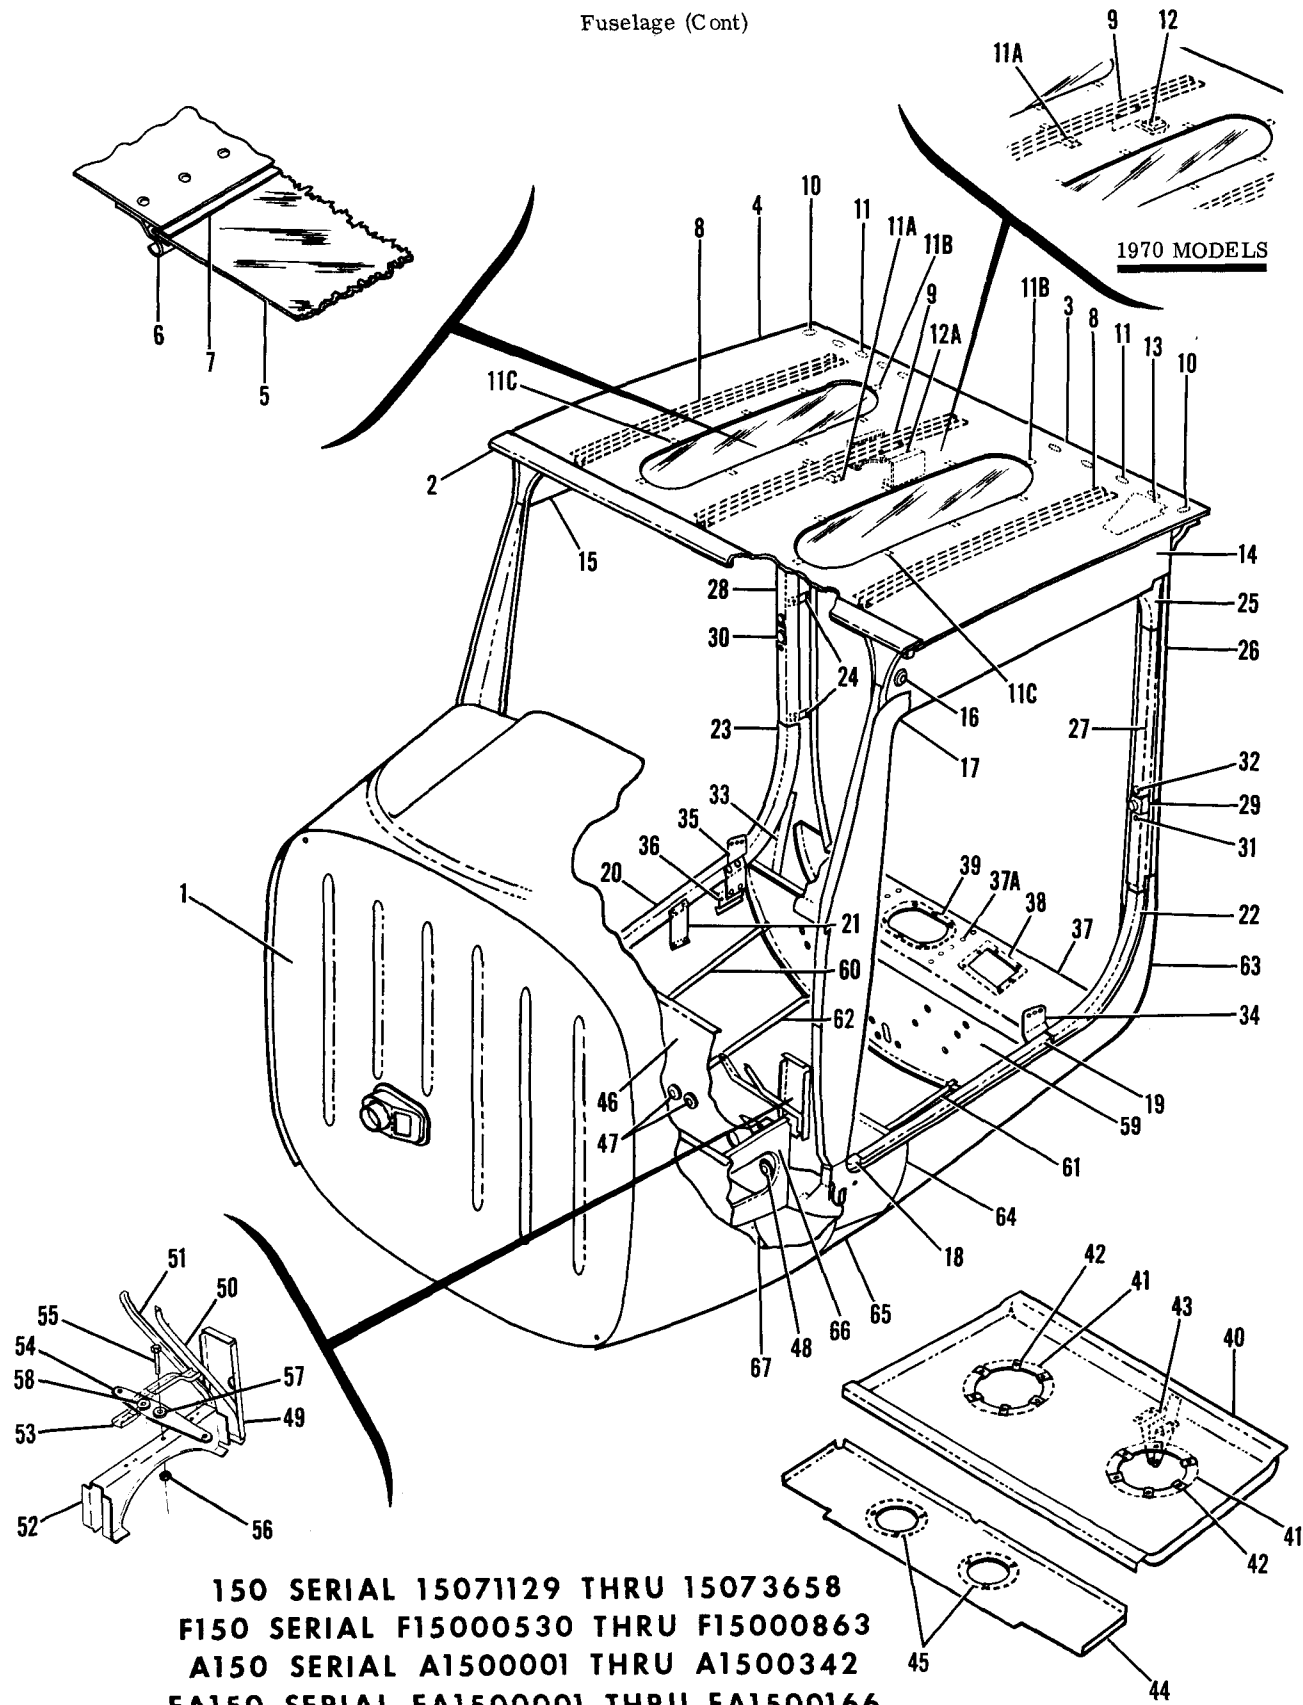


Figure 24. Fuselage Front & Center Section Assembly



FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
24 -		FRONT & CENTER SECTION ASSEMBLY-FUSELAGE -----	NP	
- 1	SEE FIG 26	FRONT SECTION ASSEMBLY-FUSELAGE -----	1	
- 2	0413488-1	RETAINER -----	1	
- 3	0413492-200	CABIN TOP ASSEMBLY-SKYLIGHT -----	1	F
		CABIN TOP ASSEMBLY-SKYLIGHT -----	NP	G
	0413492-201	CABIN TOP ASSEMBLY -----	1	B
- 4	0413492-3	SKIN-CABIN TOP SKYLIGHT -----	1	A
	0413492-4	SKIN-CABIN TOP -----	1	B
- 5	0411144	WINDOW-SKYLIGHT GREEN -----	2	F
	0411144-1	WINDOW-SKYLIGHT BRONZE -----	2	G
- 6	0411174	FRAME -----	2	A
- 7	S1055-1	CHANNEL-53.25 IN LG BULK ITEM REF S1055-1-53.25 -----	2	A
- 8	0411175	STIFFENER -----	2	
- 9	0411175-8	STIFFENER -----	1	
-10	S1863-3	NUTPLATE -----	2	
-11	S1862-2	NUTPLATE -----	8	
-11A	0511484-2	BRACKET-INSTRUMENT LIGHT CONSOLE -----	1	
-11B	0414014-1	BRACKET-SKYLIGHT -----	4	A
-11C	0414014-2	BRACKET-SKYLIGHT -----	12	A
-12	0413495-1	BRACKET ASSEMBLY-INSTRUMENT LIGHT -----	1	D
-12A	0513426-2	SUPPORT-SPEAKER & INSTRUMENT PANEL LIGHTS -----	2	E
-13	1210032-5	DAMPENER ASSEMBLY-ANTENNA VIBRATION LH -----	1	
	1210032-6	DAMPENER ASSEMBLY-ANTENNA VIBRATION RH -----	1	
-14	0413327-12	RIB-FUSELAGE CENTER SECTION-LH -----	1	B
	0413327-17	RIB ASSEMBLY-FUSELAGE CENTER SECTION LH -----	1	C
	MS35489-11	GROMMET -----	1	C
-15	0413327-9	RIB-FUSELAGE CENTER SECTION RH -----	1	B
	0413327-16	RIB ASSEMBLY-FUSELAGE CENTER SECTION RH -----	1	C
	MS35489-11	GROMMET -----	1	C
-16	MS35489-11	GROMMET -----	1	B
-17	0410204-1	FILLET-DOOR JAMB UPPER FORWARD -----	2	
-18	0410126-1	FILLET-DOOR JAMB LOWER FORWARD -----	2	
	0410120-2	FILLER-DOOR JAMB LOWER FORWARD -----	2	
-19	0410132-1	SILL-DOOR LOWER LH -----	1	
-20	0410132-2	SILL-DOOR LOWER RH -----	1	
-21	0410128-2	SUPPORT-DOOR SILL LOWER RH -----	1	
	0410128-1	SUPPORT-DOOR SILL LOWER LH -----	1	
-22	0410135-1	FILLET-DOOR SILL LOWER REAR LH -----	1	
-23	0410135-2	FILLET-DOOR SILL LOWER REAR RH -----	1	
-24	0410133-2	STRAP-REAR DOOR JAMB STABILIZER -----	6	
-25	0410131-1	GUSSET-DOOR SILL UPPER REAR -----	2	
	0410205-1	FILLER-DOOR SILL UPPER REAR -----	2	
-26	SEE FIG 29	REAR DOORPOST ASSEMBLY -----	1	
-27	0410137-1	JAMB-DOOR REAR LH -----	1	
-28	0410137-2	JAMB-DOOR REAR RH -----	1	
-29	0412066-1	CLUTCH ASSEMBLY-ROTARY DOOR LATCH LH -----	1	
-30	0412066-2	CLUTCH ASSEMBLY-ROTARY DOOR LATCH RH -----	1	
		ATTACHING PARTS -----		
-31	AN525-10R6	SCREW -----	2	
-32	0412066-6	GUIDE-DOOR LATCH -----	2	
		ATTACHING PARTS -----		
	NAS43DD3-9	SPACER -----	1	
	AN525-10R9	SCREW -----	1	
-33	0410127-2	STIFFENER-BULKHEAD RH -----	1	
	0410127-1	STIFFENER-BULKHEAD LH -----	1	
-34	0410130-1	BRACKET-SEAT BACK LH -----	1	
-35	0410130-2	BRACKET-SEAT BACK RH -----	1	
		ATTACHING PARTS -----		
	AN520-10R6	SCREW -----	4	
	NAS1068A3	NUTPLATE -----	2	
	MS21044N3	NUT -----	2	
-36	0410129-4	BRACKET ASSEMBLY-SEAT BELT RH WEU 0410129-8 -----	1	D
	0410129-8	BRACKET ASSEMBLY-SEAT BELT RH -----	1	E
	0410129-3	BRACKET ASSEMBLY-SEAT BELT LH WEU 0410129-7 -----	1	D
	0410129-7	BRACKET ASSEMBLY-SEAT BELT LH -----	1	D
	NAS1068A4	NUTPLATE -----	1	D
	NAS696A4	NUTPLATE -----	1	E

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
24 -37	0411955-7	FLOORBOARD ASSEMBLY-LANDING GEAR -----	1	D
	0411955-9	FLOORBOARD ASSEMBLY-LANDING GEAR -----	1	E
		ATTACHING PARTS		
-37A	NAS220-10	SCREW -----	12	E
	AN960-8	WASHER -----	12	E
	MS21044N08	NUT -----	12	E
		-----*		
-38	0713173-1	DOUBLER ASSEMBLY-LH -----	1	
	0713173-2	DOUBLER ASSEMBLY-RH -----	1	
-39	0410229-2	DOUBLER -----	1	
	NAS395-14-3	NUT -----	6	D
	NAS395-14-3	NUT -----	3	E
	0410134-1	PAN ASSEMBLY-SEAT -----	1	F
	0410134-3	PAN ASSEMBLY-SEAT -----	1	G
-40	0410134-2	PAN-SEAT -----	1	F
	0410134-4	PAN-SEAT -----	1	G
-41	0411370	DOUBLER -----	2	
-42	NAS395-17-3	NUT -----	12	
-43	0411939-1	BRACKET-TAB CONTROL PULLEY -----	1	
-44	0413410-1	FLOORBOARD ASSEMBLY-CENTER -----	1	B
	0413410-3	FLOORBOARD ASSEMBLY-CENTER AEROBAT -----	1	C
-45	S237-2P	DOUBLER ASSEMBLY -----	2	
	NAS395-14-3	NUT -----	3	
-46	0410203-2	BULKHEAD-CANTED STA 27.92 -----	1	B
	0410203-3	BULKHEAD-CANTED STA. 27.92 -----	1	C
-47	MS35489-7	GROMMET -----	2	
-48	MS35489-20	GROMMET -----	1	
	0411958-4	SUPPORT & BELLCRANK ASSEMBLY -----	1	F
	0411958-5	SUPPORT & BELLCRANK ASSEMBLY -----	1	G
-49	0410202-1	SUPPORT -----	1	
-50	0411569	ANGLE-LH -----	1	F
	0410231-1	BRACE-LH -----	1	G
-51	0411569-1	ANGLE-RH -----	1	F
	0410231-2	BRACE-RH -----	1	G
	0411288	BELLCRANK & BRACKET ASSEMBLY-ELEVATOR -----	1	
-52	0411289	BRACKET WEU 0411289-1 -----	1	
-53	0411290	BRACKET -----	1	
-54	0411258-1	BELLCRANK ASSEMBLY -----	1	
		ATTACHING PARTS		
-55	AN4-10A	BOLT -----	1	
-56	MS21042L4	NUT -----	1	
		-----*		
-57	4NCC910P	BEARING -----	1	
-58	MS27261KSP4	BEARING -----	1	
-59	SEE FIG 25	BULKHEAD ASSEMBLY-MAIN GEAR -----	1	D
	SEE FIG 25A	BULKHEAD ASSEMBLY-MAIN GEAR -----	1	E
-60	0411953-3	STIFFENER-BELLY SKIN OUTBD RH -----	1	
	0411953-4	STIFFENER-BELLY SKIN OUTBD LH -----	1	
-61	0411953-6	STIFFENER-BELLY SKIN INBD LH -----	1	
-62	0411953-5	STIFFENER-BELLY SKIN INBD RH -----	1	
-63	0411126-4	SKIN-FUSELAGE STA 27.92 TO 56.69 -----	1	D
	0411126-5	SKIN-FUSELAGE STA 27.92 TO 56.69 -----	1	E
		ATTACHING PARTS		
	NAS220-10	SCREW -----	10	E
	AN960-8	WASHER -----	10	E
	MS21044N08	NUT -----	10	E
		-----*		
-64	0411959-5	SKIN-FUSELAGE LH -----	1	
	0411959-6	SKIN-FUSELAGE RH -----	1	
-65	0411127-4	SKIN-FUSELAGE -----	1	B
	0411127-5	SKIN-FUSELAGE -----	1	C

CONTINUED ON NEXT PAGE



FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
24 -66 -67	0413497-1	BULKHEAD-BELLY LH -----	1	C
	0413497-2	BULKHEAD-BELLY RH -----	1	C
	0413499-1	GUSSET-BELLY SKIN LH STA 20.50 -----	1	C
	0413499-2	GUSSET-BELLY SKIN RH STA. 20.50 -----	1	C
	SEE FIG 44	SEAT RAILS -----	AR	
A---150 SERIAL 15071129 THRU 15073658 F150 SERIAL F15000659 THRU F15000863 A150 SERIAL A1500001 THRU A1500342 FA150 SERIAL FA1500001 THRU FA1500166				
B---150 SERIAL 15071129 THRU 15073658 F150 SERIAL F15000530 THRU F15000863				
C---A150 SERIAL A1500001 THRU A1500342 FA150 SERIAL FA1500001 THRU FA1500166				
D---150 SERIAL 15071129 THRU 15072003 F150 SERIAL F15000530 THRU F15000658 A150 SERIAL A1500001 THRU A1500226 FA150 SERIAL FA1500001 THRU FA1500081				
E---150 SERIAL 15072004 THRU 15073658 F150 SERIAL F15000659 THRU F15000863 A150 SERIAL A1500227 THRU A1500342 FA150 SERIAL FA1500082 THRU FA1500166				
F---150 SERIAL 15071129 THRU 15072628 F150 SERIAL F15000530 THRU F15000738 A150 SERIAL A1500001 THRU A1500276 FA150 SERIAL FA1500001 THRU FA1500166				
G---150 SERIAL 15072629 THRU 15073658 F150 SERIAL F15000739 THRU F15000863 A150 SERIAL A1500277 THRU A1500342				

Fuselage (Cont)

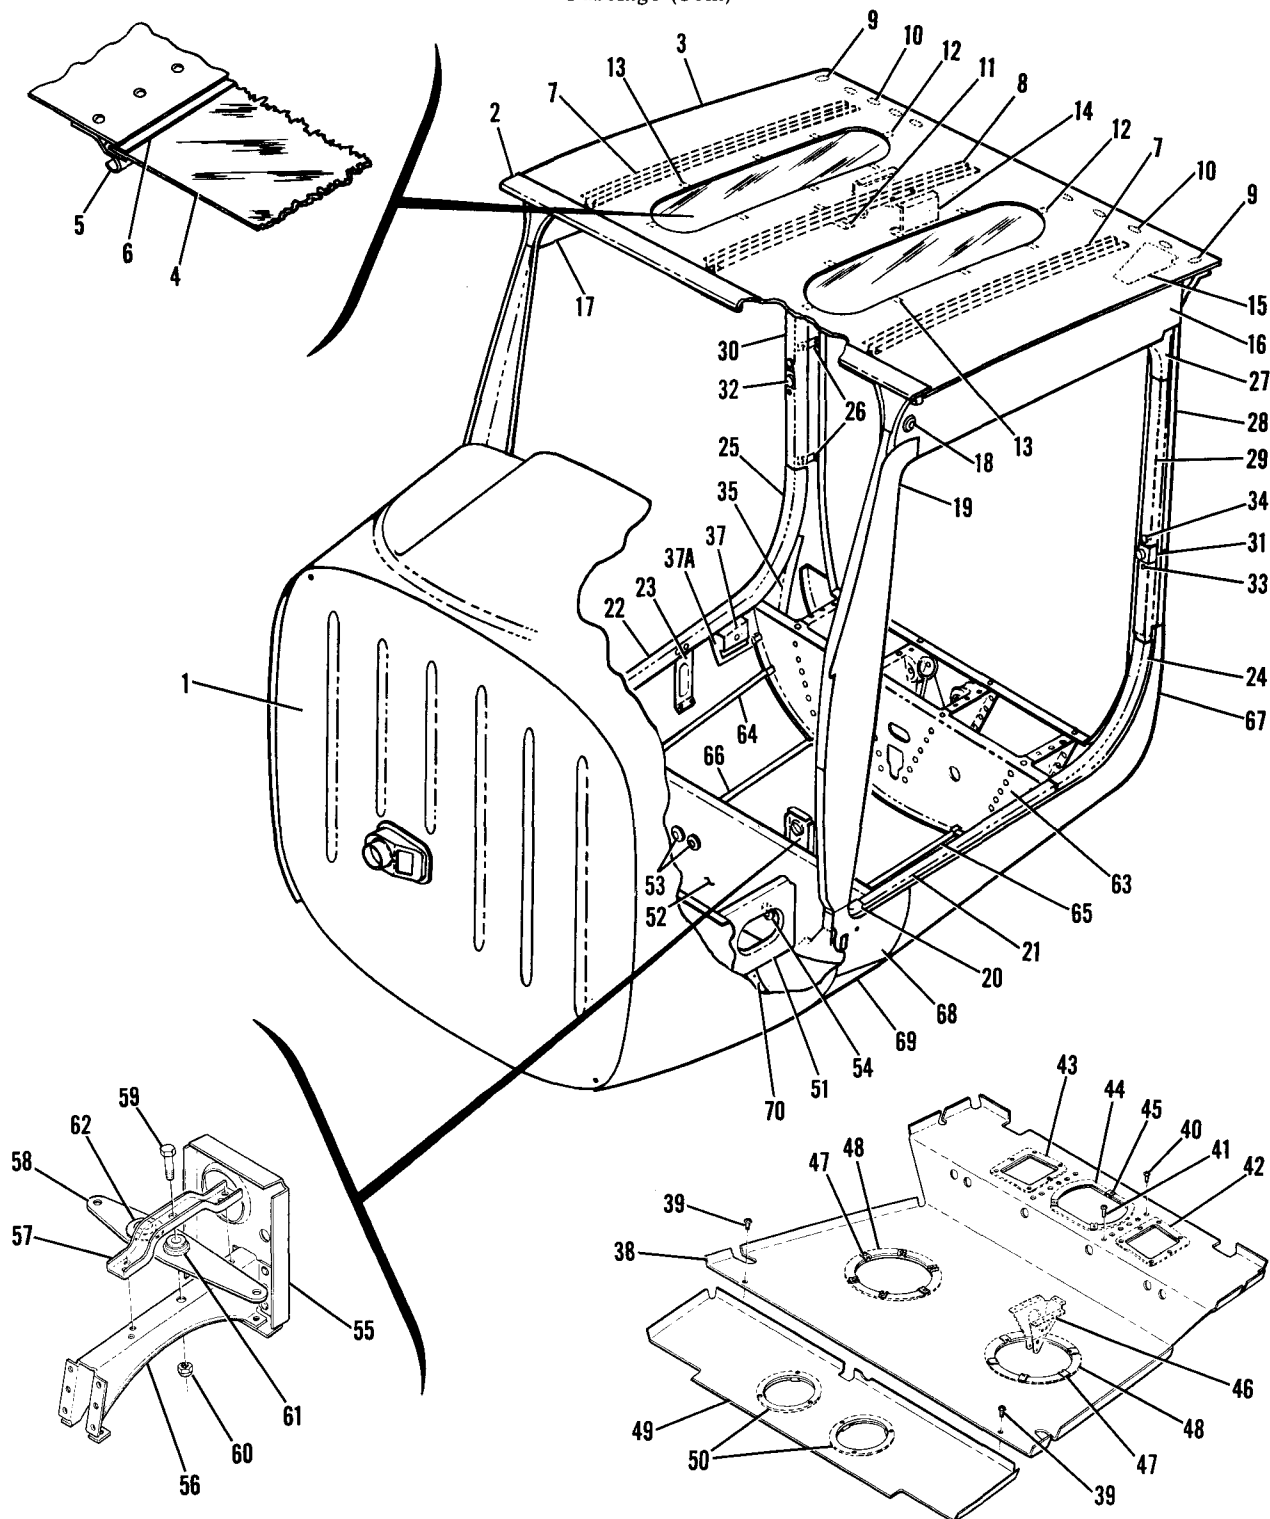

150 SERIAL 15073659 & ON
 F150 SERIAL F15000864 & ON
 A150 SERIAL A1500343 & ON
 FA150 SERIAL FA1500167 & ON

Figure 24A. Fuselage Front & Center Section Assembly



FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
24A-		FRONT & CENTER SECTION ASSY-FUSELAGE -----	NP	A
- 1	SEE FIG 26 & 26A	FRONT SECTION ASSY-FUSELAGE -----	1	
- 2	0413488-1	RETAINER -----	1	
		CABIN TOP ASSY-SKYLIGHT -----	NP	
	0413492-201	CABIN TOP ASSY -----	1	B
- 3	0413492-3	SKIN-CABIN TOP SKYLIGHT -----	1	
	0413492-4	SKIN-CABIN TOP -----	1	B
- 4	0411144-1	WINDOW-SKYLIGHT BRONZE -----	2	
- 5	0411174	FRAME -----	2	
- 6	S1055-1	CHANNEL-53.25 IN LG BKI REF S1051-1-53.25 -----	2	
- 7	0411175	STIFFENER -----	2	
- 8	0411175-8	STIFFENER -----	1	
- 9	S1863-3	NUTPLATE -----	2	
-10	S1862-2	NUTPLATE -----	8	
-11	0511484-2	BRACKET-INSTRUMENT LIGHT CONSOLE -----	1	
-12	0414014-1	BRACKET-SKYLIGHT -----	4	
-13	0414014-2	BRACKET-SKYLIGHT -----	12	
-14	0513426-2	SUPPORT-SPEAKER & INSTRUMENT PANEL LIGHTS -----	2	L
	0513426-4	SUPPORT ASSY-SPEAKER & INSTRUMENT PANEL LIGHTS -----	2	M
	NAS696A3	NUTPLATE -----	2	M
-15	1210032-5	DAMPENER ASSY-ANTENNA VIBRATION LH -----	1	
	1210032-6	DAMPENER ASSY-ANTENNA VIBRATION RH -----	1	
-16	0413327-12	RIB-FUSELAGE CENTER SECTION LH -----	1	F
	0413327-23	RIB ASSY-FUSELAGE CENTER SECTION -----	1	G
	0413327-17	RIB ASSY-FUSELAGE CENTER SECTION LH AEROBAT -----	1	H
	0413327-25	RIB ASSY-FUSELAGE CENTER SECTION LH AEROBAT -----	1	J
-17	0413327-9	RIB-FUSELAGE CENTER SECTION RH -----	1	F
	0413327-22	RIB ASSY-FUSELAGE CENTER SECTION RH -----	1	G
	0413327-16	RIB ASSY-FUSELAGE CENTER SECTION RH AEROBAT -----	1	H
	0413327-24	RIB ASSY-FUSELAGE CENTER SECTION RH AEROBAT -----	1	J
-18	MS35489-11	GROMMET -----	1	
-19	0410204-1	FILLET-DOOR JAMB UPPER FORWARD -----	2	
-20	0410126-1	FILLET-DOOR JAMB LOWER FORWARD -----	2	
	0410120-2	FILLER-DOOR JAMB LOWER FORWARD -----	2	
-21	0410132-1	SILL-DOOR LOWER LH -----	1	D
	0410132-3	SILL-DOOR LOWER LH -----	1	E
-22	0410132-2	SILL-DOOR LOWER RH -----	1	D
	0410132-4	SILL-DOOR LOWER RH -----	1	E
-23	0410239-2	SUPPORT-DOOR SILL LOWER RH -----	1	
	0410239-1	SUPPORT-DOOR SILL LOWER LH -----	1	
-24	0410135-1	FILLET-DOOR SILL LOWER REAR LH -----	1	D
	0410135-3	FILLET-DOOR SILL LOWER REAR LH -----	1	E
-25	0410135-2	FILLET-DOOR SILL LOWER REAR RH -----	1	D
	0410135-4	FILLET-DOOR SILL LOWER REAR RH -----	1	E
-26	0410133-2	STRAP-REAR DOOR JAMB -----	6	
	NAS42DD4-5	SPACER BETWEEN STRAP & DOOR JAMB -----	6	K
-27	0410131-1	GUSSET-DOOR SILL UPPER REAR -----	2	
	0410205-1	FILLER-DOOR SILL UPPER REAR -----	2	
-28	SEE FIG 29	REAR DOORPOST ASSY -----	1	
-29	0410137-1	JAMB-DOOR REAR LH -----	1	
-30	0410137-2	JAMB-DOOR REAR RH -----	1	
-31	0412066-1	CLUTCH ASSY-ROTARY DOOR LATCH LH -----	1	
-32	0412066-2	CLUTCH ASSY-ROTARY DOOR LATCH RH -----	1	
		ATTACHING PARTS -----		
-33	AN525-10R6	SCREW -----	2	
		-----*-----		
-34	0412066-6	GUIDE-DOOR LATCH -----	2	
		ATTACHING PARTS -----		
	NAS43DD3-9	SPACER -----	1	
	AN525-10R9	SCREW -----	1	
		-----*-----		
-35	0410127-2	STIFFENER-BULKHEAD RH -----	1	
-36	0410127-1	STIFFENER-BULKHEAD LH -----	1	
		DELETED, NEVER USED -----		


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
24A-37	0410129-8	BRACKET ASSY-SEAT BELT RH	1	D
	0410247-2	BRACKET ASSY-SEAT BELT RH	1	E
	0410129-7	BRACKET ASSY-SEAT BELT LH	1	D
	0410247-1	BRACKET ASSY-SEAT BELT LH	1	E
		ATTACHING PARTS		
	NAS220-6	SCREW	2	E
	AN960-8	WASHER	2	E
	MS21044N08	NUT	2	E
		-----*		
	NAS696A4	NUTPLATE	1	D
	NAS680A4	NUTPLATE	1	E
	NAS463WDD416	SHIM	1	E
-37A	0410246-2	DOUBLER-SEAT BELT BRACKET RH	1	E
	0410246-1	DOUBLER-SEAT BELT BRACKET LH	1	E
-38	0410238-1	FLOORBOARD ASSY-STA 27.92 TO 56.69	1	
		ATTACHING PARTS		
-39	NAS221-7	SCREW	2	
-40	NAS220-9	SCREW	10	
-41	NAS220-11	SCREW	2	
	AN960-8	WASHER	12	
	MS21044N08	NUT	12	
		-----*		
-42	0713173-1	DOUBLER ASSY-LH	1	
-43	0713173-2	DOUBLER ASSY-RH	1	
-44	0410229-2	DOUBLER	1	
-45	NAS395-14-3	NUT	3	
-46	0410234-1	BRACKET-TAB CONTROL PULLEY	1	
-47	NAS395-17-3	NUT	12	
-48	0411370	DOUBLER	2	
-49	0413410-5	FLOORBOARD ASSY-CENTER	1	B
	0413410-7	FLOORBOARD ASSY-CENTER	1	C
-50	S237-2P	DOUBLER ASSY	2	
	NAS395-14-3	NUT	3	
-51	0413497-1	BULKHEAD-BELLY LH	1	C
	0413497-2	BULKHEAD-BELLY RH	1	C
-52	0410237-1	BULKHEAD ASSY-CANTED STA 27.92	1	
-53	MS35489-7	GROMMET	2	
-54	MS35489-20	GROMMET	1	
	0411958-6	SUPPORT & BELLCRANK ASSY	1	
-55	0410233-1	SUPPORT	1	
	0411288	BELLCRANK & BRACKET ASSY-ELEVATOR	1	
-56	0411289-1	BRACKET	1	
-57	0411290	BRACKET	1	
-58	0411258-1	BELLCRANK ASSY	1	
		ATTACHING PARTS		
-59	AN4-10A	BOLT	1	
-60	MS21042L4	NUT	1	
		-----*		
-61	4NCC910P	BEARING	1	
-62	MS27261KSP4	BEARING	1	
-63	SEE FIG 25A	BULKHEAD ASSY-MAIN GEAR	1	
-64	0411953-3	STIFFENER-BELLY SKIN OUTBD RH	1	
	0411953-4	STIFFENER-BELLY SKIN OUTBD LH	1	
-65	0411953-6	STIFFENER-BELLY SKIN INBD LH	1	
-66	0411953-5	STIFFENER-BELLY SKIN INBD RH	1	
-67	0411126-5	SKIN-FUSELAGE STA 27.92 TO 56.69	1	
		ATTACHING PARTS		
	AN515-8R8	SCREW	1	
	NAS220-10	SCREW	10	
	AN960-8	WASHER	11	
	MS21044N08	NUT	11	
		-----*		
-68	0411959-5	SKIN-FUSELAGE LH	1	
	0411959-6	SKIN-FUSELAGE RH	1	
-69	0411127-4	SKIN-FUSELAGE	1	B
	0411127-5	SKIN-FUSELAGE	1	C

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
24A-70	0413499-1	GUSSET-BELLY SKIN LH STA 20.50 -----	1	C
	0413499-2	GUSSET-BELLY SKIN RH STA 20.50 -----	1	C
		A---150 SERIAL 15073659 & ON F150 SERIAL F15000864 & ON A150 SERIAL A1500343 & ON FA150 SERIAL FA1500167 & ON B---150 SERIAL 15073659 & ON F150 SERIAL F15000864 & ON C---A150 SERIAL A1500343 & ON FA150 SERIAL FA1500167 & ON D---150 SERIAL 15073659 THRU 15075781 F150 SERIAL F15000864 THRU F15001143 A150 SERIAL A1500343 THRU A1500523 FA150 SERIAL FA1500167 THRU FA1500261 E---150 SERIAL 15075782 & ON F150 SERIAL F15001144 & ON A150 SERIAL A1500524 & ON FA150 SERIAL FA1500262 & ON F---150 SERIAL 15073659 THRU 15077005 F150 SERIAL F15000864 THRU F15001248 G---150 SERIAL 15077006 & ON F150 SERIAL F15001249 & ON H---A150 SERIAL A1500343 THRU A1500609 FA150 SERIAL FA1500167 THRU FA1500281 J---A150 SERIAL A1500610 & ON FA150 SERIAL FA1500282 & ON K---150 SERIAL 15077006 & ON F150 SERIAL F15001249 & ON A150 SERIAL A1500610 & ON FA150 SERIAL FA1500282 & ON L---150 SERIAL 15071129 THRU 15078505 F150 SERIAL F15000530 THRU F15001338 A150 SERIAL A1500001 THRU A1500684 FA150 SERIAL FA1500001 THRU FA1500311 M---150 SERIAL 15078506 & ON F150 SERIAL F15001339 & ON A150 SERIAL A1500685 & ON FA150 SERIAL FA1500312 & ON		

Fuselage (Cont)

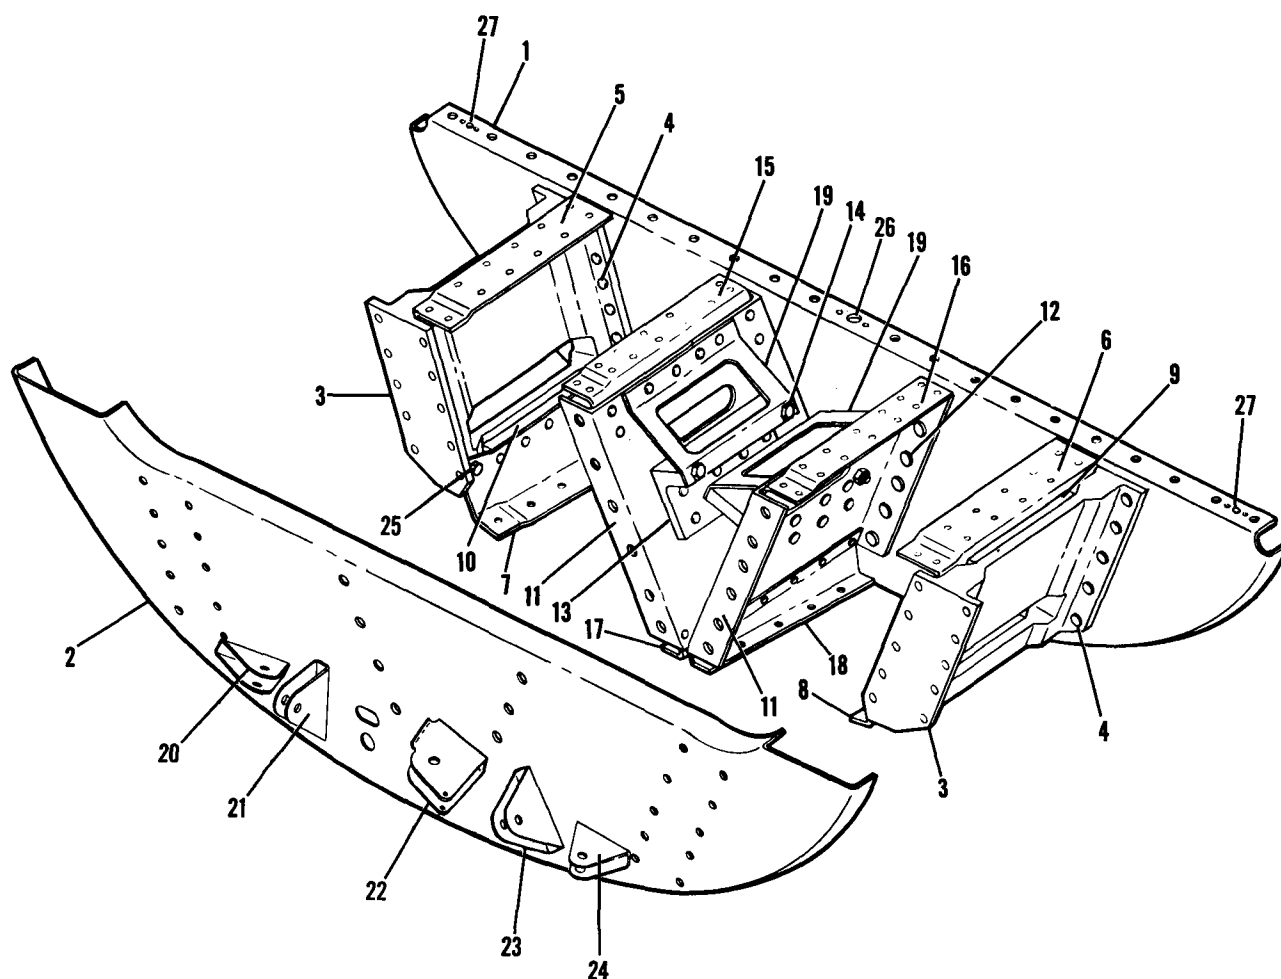


150 SERIAL 15071129 THRU 15072003
F150 SERIAL F15000530 THRU F15000658
A150 SERIAL A1500001 THRU A1500226
FA150 SERIAL FA1500001 THRU FA1500081

Figure 25. Main Landing Gear Bulkhead Assembly



FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
25 -	0411951-7	BULKHEAD ASSEMBLY-MAIN LANDING GEAR -----	1	A
- 1	0411951-5	BULKHEAD-STA 49.69 -----	1	
- 2	0411951-6	BULKHEAD-LOWER STA 56.69 -----	2	
- 3	0411899-1	STIFFENER ASSEMBLY-LANDING GEAR BULKHEAD -----	2	
		ATTACHING PARTS		
- 4	NAS178-6-6	PIN-HI SHEAR -----	19	
	NAS179-6	COLLAR -----	19	
		-----*		
- 5	0411900-1	ANGLE-UPPER OUTBOARD LH -----	1	
- 6	0411900-2	ANGLE-UPPER OUTBOARD RH -----	1	
- 7	0411903-1	ANGLE-LOWER OUTBOARD LH -----	1	
- 8	0411903-2	ANGLE-LOWER OUTBOARD RH -----	1	
- 9	0411304-1	SPACER-UPPER ANGLE -----	2	
-10	0411305-1	SPACER-LOWER ANGLE -----	2	
-11	0441172-1	BULKHEAD ASSEMBLY-LANDING GEAR INBOARD -----	2	
		ATTACHING PARTS		
-12	NAS178-8-4	PIN-HI SHEAR AFT SIDE RH -----	11	
	NAS178-8-4	PIN-HI SHEAR AFT SIDE LH -----	12	
	NAS178-8-4	PIN-HI SHEAR FORWARD SIDE -----	12	
	NAS179-8	COLLAR-AFT SIDE RH -----	11	
	NAS179-8	COLLAR-AFT SIDE LH -----	12	
	NAS179-8	COLLAR-FORWARD SIDE -----	12	
	AN509-416R13	SCREW -----	1	
	AN960-416	WASHER -----	1	
	MS21042L4	NUT -----	1	
		-----*		
-13	0441171-1	ANGLE -----	1	
		ATTACHING PARTS		
-14	AN4-21A	BOLT -----	2	
	AN960-416	WASHER -----	2	
	MS21042L4	NUT -----	2	
		-----*		
	0441170-1	BULKHEAD-LANDING GEAR INBOARD -----	1	
-15	0411905-1	ANGLE-UPPER INNER LH -----	1	
-16	0411905-2	ANGLE-LOWER INNER RH -----	1	
-17	0411904-1	ANGLE-LOWER INNER LH -----	1	
-18	0411904-2	ANGLE-LOWER INNER RH -----	1	
-19	0441155-1	BRACKET-INBOARD BULKHEAD -----	2	
-20	0411452	BRACKET -----	1	
		ATTACHING PARTS		
	NAS1303-5	BOLT -----	1	
	MS21044N3	NUT -----	1	
		-----*		
-21	0411449	BRACKET -----	1	
		ATTACHING PARTS		
	AN520-10R7	SCREW -----	1	
	MS21044N3	NUT -----	1	
		-----*		
-22	0412048-1	BRACKET -----	1	
		ATTACHING PARTS		
	AN520-10R12	SCREW -----	1	
	MS21044N3	NUT -----	1	
		-----*		
-23	0411671	BRACKET -----	1	
		ATTACHING PARTS		
	AN520-10R7	SCREW -----	2	
	MS21044N3	NUT -----	2	
		-----*		
-24	0411451	BRACKET -----	1	
		ATTACHING PARTS		
	AN520-10R7	SCREW -----	1	
	MS21044N3	NUT -----	1	
		-----*		
-25	AN3-10A	BOLT -----	2	
	AN960-10	WASHER -----	2	
	MS21044N3	NUT -----	2	
-26	NAS698A4	NUTPLATE -----	1	
-27	NAS697A3	NUTPLATE -----	2	
		A---150 SERIAL 15071129 THRU 15072003 F150 SERIAL F15000530 THRU F15000658 A150 SERIAL A15000001 THRU A1500226 FA150 SERIAL FA1500001 THRU FA1500081		


Fuselage (Cont)

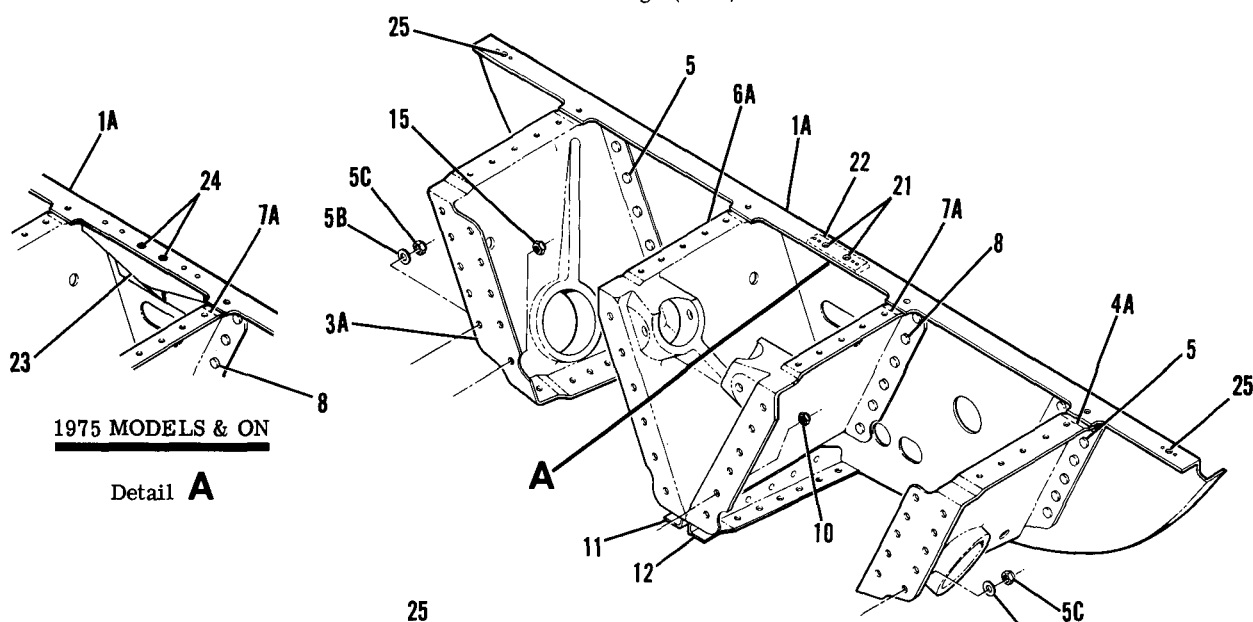

1975 MODELS & ON

Detail A

1973 MODELS & ON

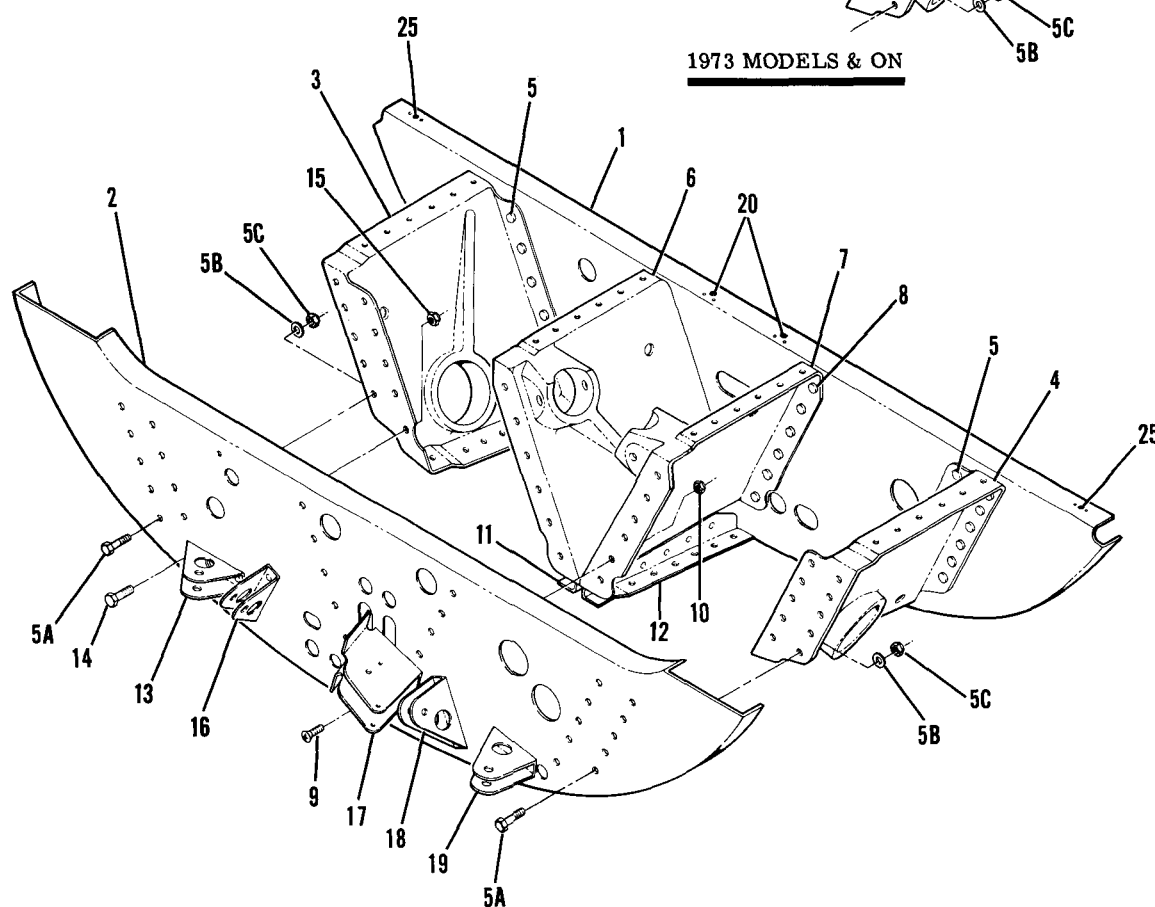

150 SERIAL 15072004 & ON
F150 SERIAL F15000659 & ON
A150 SERIAL A1500227 & ON
FA150 SERIAL FA1500082 & ON

Figure 25A. Main Landing Gear Bulkhead Assembly



FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
25A-	0412074-1	BULKHEAD ASSEMBLY-MAIN LANDING GEAR	1	A
	0412074-2	BULKHEAD ASSEMBLY-MAIN LANDING GEAR	1	C
	0412074-3	BULKHEAD ASSEMBLY-MAIN LANDING GEAR	1	D
- 1	0411951-9	BULKHEAD-STA 49.69	1	A
- 1A	0411951-10	BULKHEAD-STA 49.69	1	B
- 2	0411951-8	BULKHEAD-LOWER STA 56.69	1	
- 3	0441211-1	SUPPORT-MAIN LANDING GEAR OUTBD LH WEU 0441209-1	1	A
- 3A	0441211-5	SUPPORT-MAIN LANDING GEAR OUTBD LH WEU 0441209-1	1	E
	0441209-1	SUPPORT-MAIN LANDING GEAR OUTBD LH	1	F
- 4	0441211-2	SUPPORT-MAIN LANDING GEAR OUTBD RH WEU 0441209-2	1	A
- 4A	0441211-6	SUPPORT-MAIN LANDING GEAR OUTBD RH WEU 0441209-2	1	E
	0441209-2	SUPPORT-MAIN LANDING GEAR OUTBD RH	1	F
		ATTACHING PARTS		
- 5	NAS178-6-6	PIN-HI SHEAR	20	
	NAS1426-3	PIN-HI SHEAR ALTERNATE	20	
	NAS179-6	COLLAR	20	
	NAS1080C6	COLLAR ALTERNATE	20	
- 5A	NAS464P3-7	BOLT	1	
- 5B	AN960-10L	WASHER	1	
- 5C	MS21044N3	NUT	1	

- 6	0441204-3	SUPPORT-MAIN LANDING GEAR INBD LH WEU 0441204-11	1	A
- 6A	0441204-11	SUPPORT-MAIN LANDING GEAR INBD LH	1	B
- 7	0441204-4	SUPPORT-MAIN LANDING GEAR INBD RH WEU 0441204-12	1	A
- 7A	0441204-12	SUPPORT-MAIN LANDING GEAR INBD RH	1	B
		ATTACHING PARTS		
- 8	NAS178-8-5	PIN-HI SHEAR AFT SIDE RH	5	
	NAS1428-4	PIN-HI SHEAR AFT SIDE RH ALTERNATE	5	
	NAS178-8-5	PIN-HI SHEAR AFT SIDE LH	6	
	NAS1428-4	PIN-HI SHEAR AFT SIDE LH ALTERNATE	6	
	NAS178-8-5	PIN-HI SHEAR FORWARD SIDE	6	
	NAS178-8-5	PIN-HI SHEAR FORWARD SIDE ALTERNATE	6	
	NAS179-8	COLLAR-AFT SIDE RH	5	
	NAS1080C8	COLLAR-AFT SIDE RH ALTERNATE	5	
	NAS179-8	COLLAR-AFT SIDE LH	6	
	NAS1080C8	COLLAR-AFT SIDE LH ALTERNATE	6	
	NAS179-8	COLLAR-FORWARD SIDE	6	
	NAS1080C8	COLLAR-FORWARD SIDE ALTERNATE	6	
- 9	AN509-416R13	SCREW	1	
- 10	MS21042L4	NUT	1	

- 11	0441204-7	BRACKET-LH	1	
- 12	0441204-8	BRACKET-RH	1	
- 13	0411452	BRACKET	1	
		ATTACHING PARTS		
- 14	NAS1303-5	BOLT	1	
	NAS464P3A5	BOLT ALTERNATE	1	
- 15	MS21044N3	NUT	1	

- 16	0411449	BRACKET	1	
		ATTACHING PARTS		
	AN520-10R7	SCREW	1	
	MS21044N3	NUT	1	

- 17	0412048-1	BRACKET	1	
		ATTACHING PARTS		
	AN520-10R12	SCREW	1	
	MS21044N3	NUT	1	

- 18	0411671	BRACKET	1	
		ATTACHING PARTS		
	AN520-10R7	SCREW	2	
	MS21044N3	NUT	2	


- 19	0411451	BRACKET	1	
		ATTACHING PARTS		
	AN520-10R7	SCREW	1	
	MS21044N3	NUT	1	

CONTINUED ON NEXT PAGE				

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
25A-20	0412076-1	DOUBLER ASSEMBLY-SEAT BELT ATTACH -----	1	A
	NAS696A4	NUTPLATE -----	2	A
-21	NAS696A4	NUTPLATE -----	2	C
-22	0412528-1	SPACER -----	1	C
-23	0414046-1	SUPPORT ASSY-SEAT BELT ATTACH -----	1	D
-24	NAS696A4	NUTPLATE -----	2	D
-25	NAS697A3	NUTPLATE -----	2	
		A---150 SERIAL 15072004 THRU 15073658 F150 SERIAL F15000659 THRU F15000863 A150 SERIAL A1500227 THRU A1500342 FA150 SERIAL FA1500082 THRU FA1500166		
		B---150 SERIAL 15073659 & ON F150 SERIAL F15000864 & ON A150 SERIAL A1500343 & ON FA150 SERIAL FA1500167 & ON		
		C---150 SERIAL 15073659 THRU 15075781 F150 SERIAL F15000864 THRU F15001143 A150 SERIAL A1500343 THRU A1500523 FA150 SERIAL FA1500167 THRU FA1500261		
		D---150 SERIAL 15075782 & ON F150 SERIAL F15001144 & ON A150 SERIAL A1500524 & ON FA150 SERIAL FA1500262 & ON		
		E---150 SERIAL 15073659 THRU 15076682 F150 SERIAL F15000864 THRU F15001248 A150 SERIAL A1500343 THRU A1500591 FA150 SERIAL FA1500167 THRU FA1500281		
		F---150 SERIAL 15076683 & ON F150 SERIAL F15001249 & ON A150 SERIAL A1500592 & ON FA150 SERIAL FA1500282 & ON		



Fuselage (Cont)

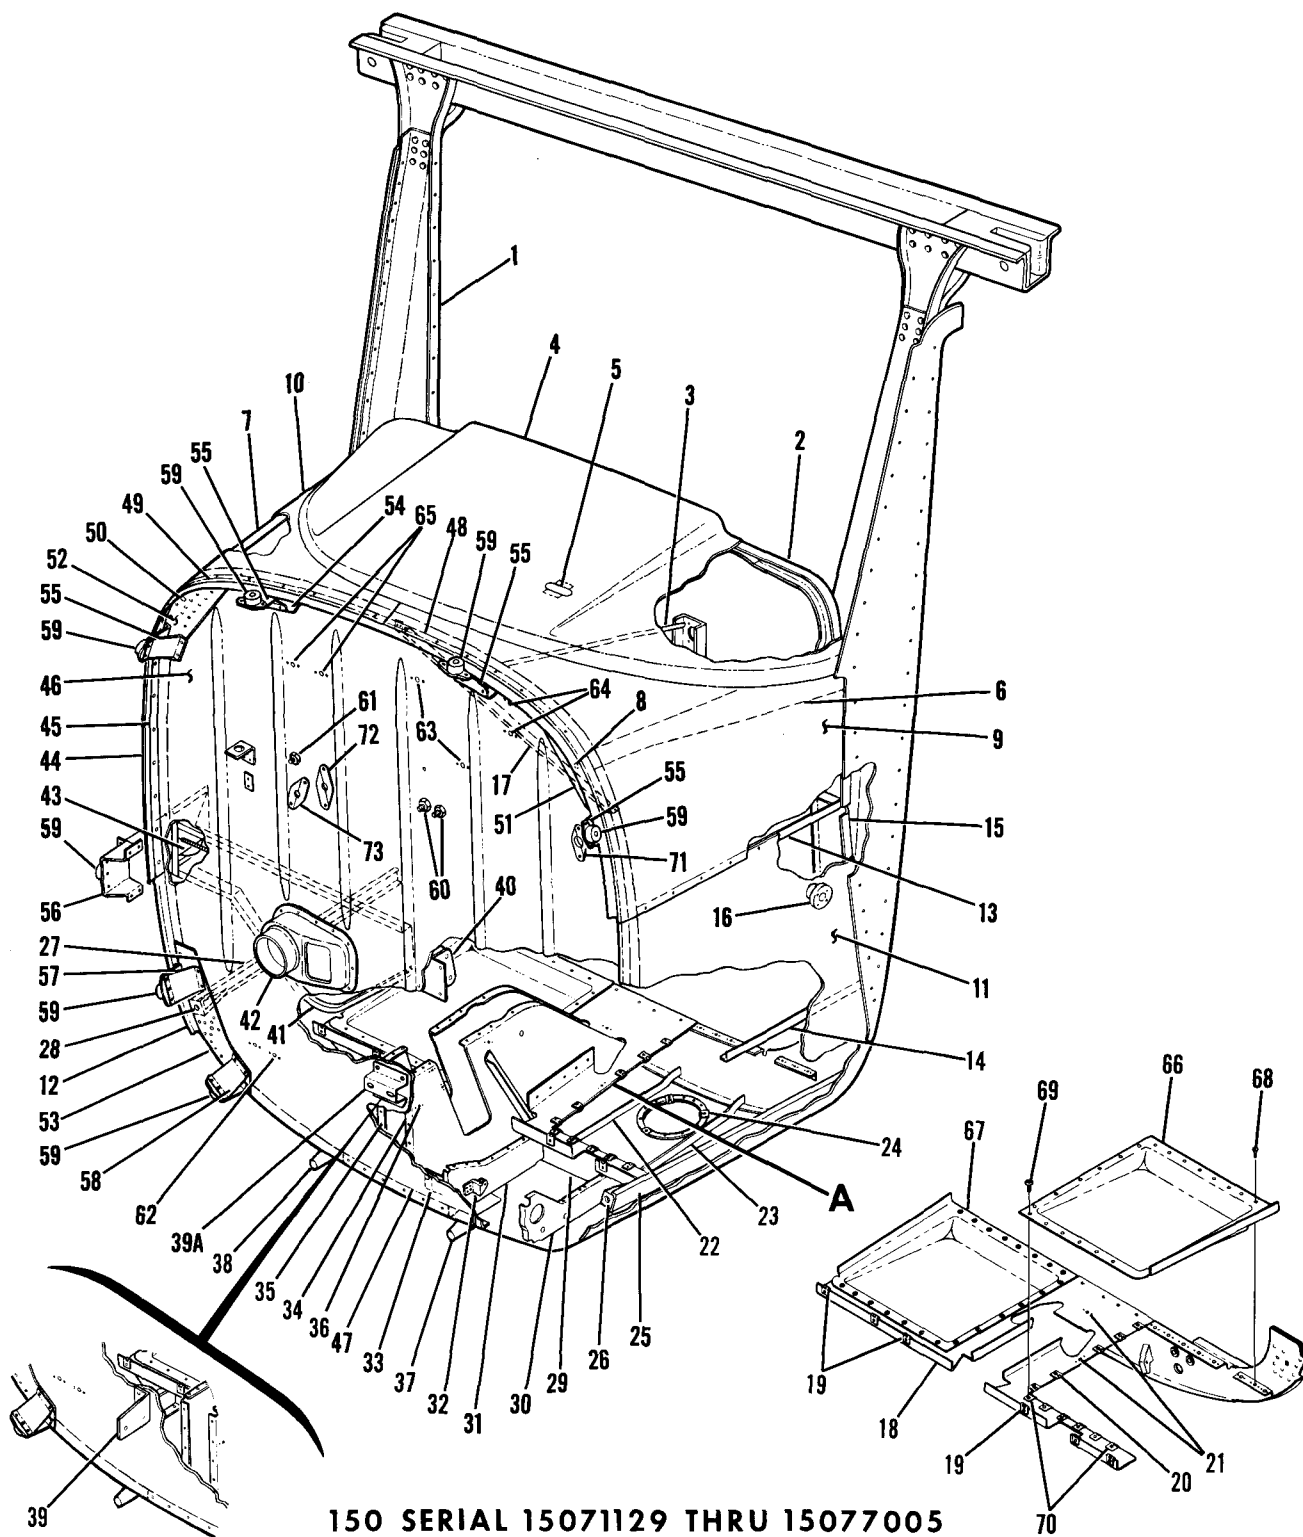

150 SERIAL 15071129 THRU 15077005
 F150 SERIAL F15000530 THRU F15001248
 A150 SERIAL A1500001 THRU A1500609
 FA150 SERIAL FA1500001 THRU FA1500281

Detail **A**

Figure 26. Fuselage Front Section Assembly




FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
26 -	0413004-14	FRONT SECTION ASSEMBLY-FUSELAGE -----	1	A
	0413004-18	FRONT SECTION ASSEMBLY-FUSELAGE -----	1	C
	0413004-20	FRONT SECTION ASSEMBLY-FUSELAGE -----	1	K
	0413004-21	FRONT SECTION ASSEMBLY-FUSELAGE -----	1	R
	0413004-23	FRONT SECTION ASSEMBLY-FUSELAGE -----	1	V
	0413004-25	FRONT SECTION ASSEMBLY-FUSELAGE -----	1	X
	0413004-7	FRONT SECTION ASSEMBLY-FUSELAGE AEROBAT -----	1	B
	0413004-17	FRONT SECTION ASSEMBLY-FUSELAGE AEROBAT -----	1	D
	0413004-19	FRONT SECTION ASSEMBLY-FUSELAGE AEROBAT -----	1	L
	0413004-22	FRONT SECTION ASSEMBLY-FUSELAGE AEROBAT -----	1	S
	0413004-24	FRONT SECTION ASSEMBLY-FUSELAGE AEROBAT -----	1	W
	0413004-26	FRONT SECTION ASSEMBLY-FUSELAGE AEROBAT -----	1	Y
- 1	SEE FIG 27	BULKHEAD ASSEMBLY-FRONT DOORPOST -----	1	A
	SEE FIG 28	BULKHEAD ASSEMBLY-FRONT DOORPOST AEROBAT -----	1	B
- 2	SEE FIG 47	STATIONARY INSTRUMENT PANEL ASSEMBLY -----	1	P
	SEE FIG 47A	STATIONARY INSTRUMENT PANEL ASSEMBLY -----	1	Q
- 3	0413346-1	STIFFENER-STATIONARY INSTRUMENT PANEL -----	1	M
	0413346-2	STIFFENER-STATIONARY INSTRUMENT PANEL -----	1	N
- 4	0413004-6	SKIN-DECK -----	1	Z
	0413004-27	SKIN-DECK -----	1	AA
- 5	0413452-1	NOZZLE ASSEMBLY-DEFROSTER -----	1	
- 6	0413423-1	STRINGER ASSEMBLY-ENGINE MOUNT LH -----	1	Z
	0413423-5	STRINGER ASSEMBLY-ENGINE MOUNT LH -----	1	AA
- 7	0413423-2	STRINGER ASSEMBLY-ENGINE MOUNT RH -----	1	Z
	0413423-6	STRINGER ASSEMBLY-ENGINE MOUNT RH -----	1	AA
- 8	0411281-4	BRACKET-ENGINE MOUNT LH -----	1	Z
	0411281-7	BRACKET-ENGINE MOUNT LH -----	1	AA
	0411281-5	BRACKET-ENGINE MOUNT RH -----	1	Z
	0411281-8	BRACKET-ENGINE MOUNT RH -----	1	AA
- 9	0413004-13	SKIN-UPPER LH -----	1	Z
-10	0413004-4	SKIN-UPPER RH -----	1	Z
-11	0413004-11	SKIN-LOWER LH -----	1	
-12	0413004-2	SKIN-LOWER RH -----	1	E
	0413004-16	SKIN-LOWER RH -----	1	F
-13	0413305-1	STIFFENER-FRONT SECTION LH -----	1	
	0413305-2	STIFFENER-FRONT SECTION RH -----	1	
-14	0413305-3	STIFFENER-FRONT SECTION LH -----	1	
	0413305-4	STIFFENER-FRONT SECTION RH -----	1	
-15	0413425-1	STIFFENER-FORWARD DOOR POST LH -----	1	
	0413425-2	STIFFENER-FORWARD DOOR POST RH -----	1	
-16	S1776-1	BUTTON-PITOT STATIC LINE -----	1	
-17	0413471-2	STIFFENER-LOWER INSTRUMENT PANEL -----	1	
-18	0413430-1	FLOORBOARD ASSEMBLY-FRONT -----	1	
-19	A1793-623	NUT TIN -----	6	
-20	NAS395-12-3	NUT -----	10	
-21	S1863-3	NUTPLATE -----	3	
-22	0413391-1	STIFFENER-FUSELAGE INBD. STA 8.37 TO 20.5 -----	2	
-23	0413391-2	STIFFENER-FUSELAGE OUTBD STA. 8.37 TO 20.5 -----	2	
-24	S237-2	DOUBLER ASSEMBLY -----	1	
	NAS395-14-3	NUT -----	3	
-25	0411283	BRACKET ASSEMBLY-ENGINE MOUNT LOWER LH -----	1	
-26	0411281-5	BRACKET-ENGINE MOUNT LH -----	1	
-27	0411283-1	BRACKET ASSEMBLY-ENGINE MOUNT LOWER RH -----	1	
-28	0411281-4	BRACKET-ENGINE MOUNT RH -----	1	
-29	0413397-3	BULKHEAD ASSEMBLY-FLOORBOARD STA 8.37 LH -----	1	
	0413397-2	BULKHEAD-FLOORBOARD STA. 8.37 RH -----	1	
-30	0413396-1	BULKHEAD-FRONT FLOORBOARD CUTBD LH -----	1	
	0413396-2	BULKHEAD-FRONT FLOORBOARD CUTBD RH -----	1	
-31	0413395-1	BULKHEAD ASSEMBLY-FRONT FLOORBOARD INBD LH -----	1	
	0413395-2	BULKHEAD-FRONT FLOORBOARD INBD RH -----	1	
-32	0713624-2	ANCHOR-BRAKE CYLINDER LH ONLY -----	1	
-33	0460126-4	BRACKET-TRIM CONTROL -----	1	
	AN520-10R6	ATTACHING PARTS		
	MS20365-1032	SCREW -----	1	
		NUT -----	1	
		---*---		
-34	0413394-1	BULKHEAD ASSEMBLY-CONTROL TEE LH -----	1	
-35	0413394-2	BULKHEAD ASSEMBLY-CONTROL TEE RH -----	1	
-36	NAS680A3	NUTPLATE LH BULKHEAD ONLY -----	5	
	NAS680A3	NUTPLATE RH BULKHEAD ONLY -----	6	
-37	0413304-1	SEAL ASSEMBLY-STEERING LINK LH -----	1	
-38	0413304-2	SEAL ASSEMBLY-STEERING LINK RH -----	1	
-39	0753020-1	ANGLE-FUEL STRAINER -----	1	J

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
26 -39A	0460199-1	BRACKET-FUEL STRAINER -----	1	G
	0413511-1	BRACKET-FUEL STRAINER -----	1	H
-40	0460126-1	BRACKET ASSEMBLY-TRIM CONTROL -----	1	
-41	SEE FIG 60	HEATER ASSEMBLY-OUTSIDE AIR -----	1	E
	SEE FIG 60A	DISTRIBUTOR ASSEMBLY-CABIN AIR -----	1	F
-42	SEE FIG 60	VALVE ASSEMBLY-CABIN HEATER -----	1	F
	SEE FIG 60A	VALVE ASSEMBLY-CABIN HEATER -----	1	F
-43	SEE FIG 60	DOOR ASSEMBLY-OUTSIDE AIR -----	1	F
	SEE FIG 60A	INLET ASSEMBLY-OUTSIDE AIR -----	1	F
	SEE FIG 60A	SCREEN, HOSE & DUCT ASSEMBLY-OUTSIDE AIR -----	1	F
-44	0413469-1	GUARD-DECK SKIN -----	1	
-45	0413468-1	STIFFENER-DECK SKIN GUARD -----	4	
	0453001-4	FIREWALL ASSEMBLY WEU 0453001-5 -----	1	E
	0453001-5	FIREWALL ASSEMBLY WEU 0453001-6 -----	1	F
-46	0453114-3	SHEET-FIREWALL WEU 0453114-4 -----	1	F
	0453114-4	SHEET-FIREWALL WEU 0453114-5 -----	1	F
-47	0453115-1	ANGLE -----	1	
-48	0453107-3	ANGLE-LH -----	1	
-49	0453107-2	ANGLE-RH -----	1	
-50	0453110	PLATE-FIREWALL LOCATED ON AFT SIDE OF FIREWALL -----	4	
-51	0453116-5	DOUBLER-UPPER ENGINE MOUNT LH -----	1	
-52	0453116-6	DOUBLER-UPPER ENGINE MOUNT RH -----	1	
-53	0453116-9	DOUBLER-LOWER MOUNT RH -----	1	
	0453116-8	DOUBLER-LOWER MOUNT LH -----	1	
-54	0453116-7	DOUBLER-SHOCK MOUNT -----	3	
-55	0453003-8	SHOCK MOUNT ASSY-COWL -----	4	
-56	0453003-4	SHOCK MOUNT ASSY-COWL -----	1	
-57	0453003-1	SHOCK MOUNT ASSY-COWL -----	3	
-58	0453003-6	SHOCK MOUNT ASSY-COWL -----	2	
-59	S1115-29	SHOCK MOUNT -----	1	
-60	AN832-2D	UNION -----	2	
	AN924-2D	NUT -----	2	
-61	AN833-2D	ELBOW -----	1	E
	1450024-3	UNION WEU S2289-2 -----	1	F
	AN924-2D	NUT -----	1	F
	AN924-3D	NUT -----	1	F
	AN960-516	WASHER -----	2	F
	AN960-616	WASHER -----	2	F
-62	S1863-3A	NUTPLATE -----	11	
-63	NAS697A4K	NUTPLATE -----	2	
-64	NAS697A08K	NUTPLATE -----	2	
-65	NAS680A3K	NUTPLATE -----	2	
	SEE FIG 23	BATTERY BOX INSTALLATION -----	1	
-66	0413429-1	FEET PAN-FRONT FLOORBOARD LH -----	1	
-67	0413429-2	FEET PAN-FRONT FLOORBOARD RH -----	1	
		ATTACHING PARTS		
-68	AN515-8R8	SCREW -----	8	
-69	S102128-8	SCREW -----	11	
-70	NAS395-17-3	NUTPLATE -----	6	
		-----*		
-71	NAS557-10A	GROMMET-SPLIT PLASTIC -----	1	
	S1095-5	SHIELD HALF-WIRING HARNESS -----	2	
		ATTACHING PARTS		
	S102128-6	SCREW -----	2	
	NAS446-4-3	NUT -----	2	
		-----*		
-72	NAS557-6A	GROMMET-SPLIT PLASTIC -----	1	
	S1095-3	SHIELD HALF-TACHOMETER SHAFT -----	2	
		ATTACHING PARTS		
	S102128-6	SCREW -----	2	
	NAS446-4-3	NUT -----	2	
	S1860-2A	NUTPLATE -----	2	T
		-----*		U
-73	NAS557-3A	GROMMET-SPLIT PLASTIC -----	1	
	S1095-1	SHIELD HALF-OIL TEMP LINE -----	2	
		ATTACHING PARTS		
	S102128-6	SCREW -----	2	
	NAS446-4-3	NUT -----	2	
		-----*		
		A---150 SERIAL 15071129 THRU 15072003		
		F150 SERIAL F15000530 THRU F15000658		
		B---A150 SERIAL A1500001 THRU A1500226		
		FA150 SERIAL FA1500001 THRU FA1500081		
		CONTINUED ON NEXT PAGE		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
26 -		C---150 SERIAL 15072004 THRU 15072628 F150 SERIAL F15000659 THRU F15000738 D---A150 SERIAL A1500227 THRU A1500276 FA150 SERIAL FA1500082 THRU FA1500166 E---150 SERIAL 15071129 THRU 15072003 F150 SERIAL F15000530 THRU F15000658 A150 SERIAL A1500001 THRU A1500226 FA150 SERIAL FA1500001 THRU FA1500081 F---150 SERIAL 15072004 THRU 15077005 F150 SERIAL F15000659 THRU F15001248 A150 SERIAL A1500227 THRU A1500609 FA150 SERIAL FA1500082 THRU FA1500281 G---150 SERIAL 15071129 THRU 15071842 F150 SERIAL F15000620 THRU F15000658 F150 SERIAL F15000530THRU F15000658 FLOATPLANE A150 SERIAL A1500001 THRU A1500176 FA150 SERIAL FA1500001 THRU FA1500080 H---150 SERIAL 15071843 THRU 15077005 F150 SERIAL F15000659 THRU F15001248 A150 SERIAL A1500177 THRU A1500609 FA150 SERIAL FA1500081 THRU FA1500281 J---F150 SERIAL F15000530 THRU F15000619 EXCEPT FLOATPLANE K---150 SERIAL 15072629 THRU 15073658 F150 SERIAL F15000739 THRU F15000863 L---A150 SERIAL A15000277 THRU A1500342 M---150 SERIAL 15071129 THRU 15072628 F150 SERIAL F15000530 THRU F15000738 A150 SERIAL A1500001 THRU A1500276 FA150 SERIAL FA1500001 THRU FA1500166 N---150 SERIAL 15072629 THRU 15077005 F150 SERIAL F15000739 THRU F15001248 A150 SERIAL A1500277 THRU A1500609 FA150 SERIAL FA1500167 THRU FA1500281 P---150 SERIAL 15071129 THRU 15073658 F150 SERIAL F15000530 THRU F15000863 A150 SERIAL A1500001 THRU A1500342 FA150 SERIAL FA1500001 THRU FA1500166 Q---150 SERIAL 15073659 THRU 15077005 F150 SERIAL F15000864 THRU F15001248 A150 SERIAL A1500343 THRU A1500609 FA150 SERIAL FA1500167 THRU FA1500281 R---150 SERIAL 15073659 THRU 15074850 F150 SERIAL F15000864 THRU F15001013 S---A150 SERIAL A1500343 THRU A1500429 FA150 SERIAL FA1500167 THRU FA1500211 T---150 SERIAL 15071129 THRU 15072503 F150 SERIAL F15000530 THRU F15000738 A150 SERIAL A1500001 THRU A1500262 FA150 SERIAL FA1500001 THRU FA1500121 U---150 SERIAL 15072504 THRU 15077005 F150 SERIAL F1500739 THRU F15001248 A150 SERIAL A1500263 THRU A1500609 FA150 SERIAL FA1500122 THRU FA1500281 V---150 SERIAL 15074851 THRU 15075781 F150 SERIAL F15001014 THRU F15001143 W---A150 SERIAL A1500430 THRU A1500523 FA150 SERIAL FA1500212 THRU FA1500261 X---150 SERIAL 15075782 THRU 15077005 F150 SERIAL F15001144 THRU F15001248 Y---A150 SERIAL A1500524 THRU A1500609 FA150 SERIAL FA1500262 THRU FA1500281 Z---150 SERIAL 15071129 THRU 15076456 F150 SERIAL F15000530 THRU F15001248 A150 SERIAL A1500001 THRU A1500579 FA150 SERIAL FA1500001 THRU FA1500281 AA---150 SERIAL 15076457 THRU 15077005 A150 SERIAL A1500580 THRU A1500609		

Fuselage (Cont)

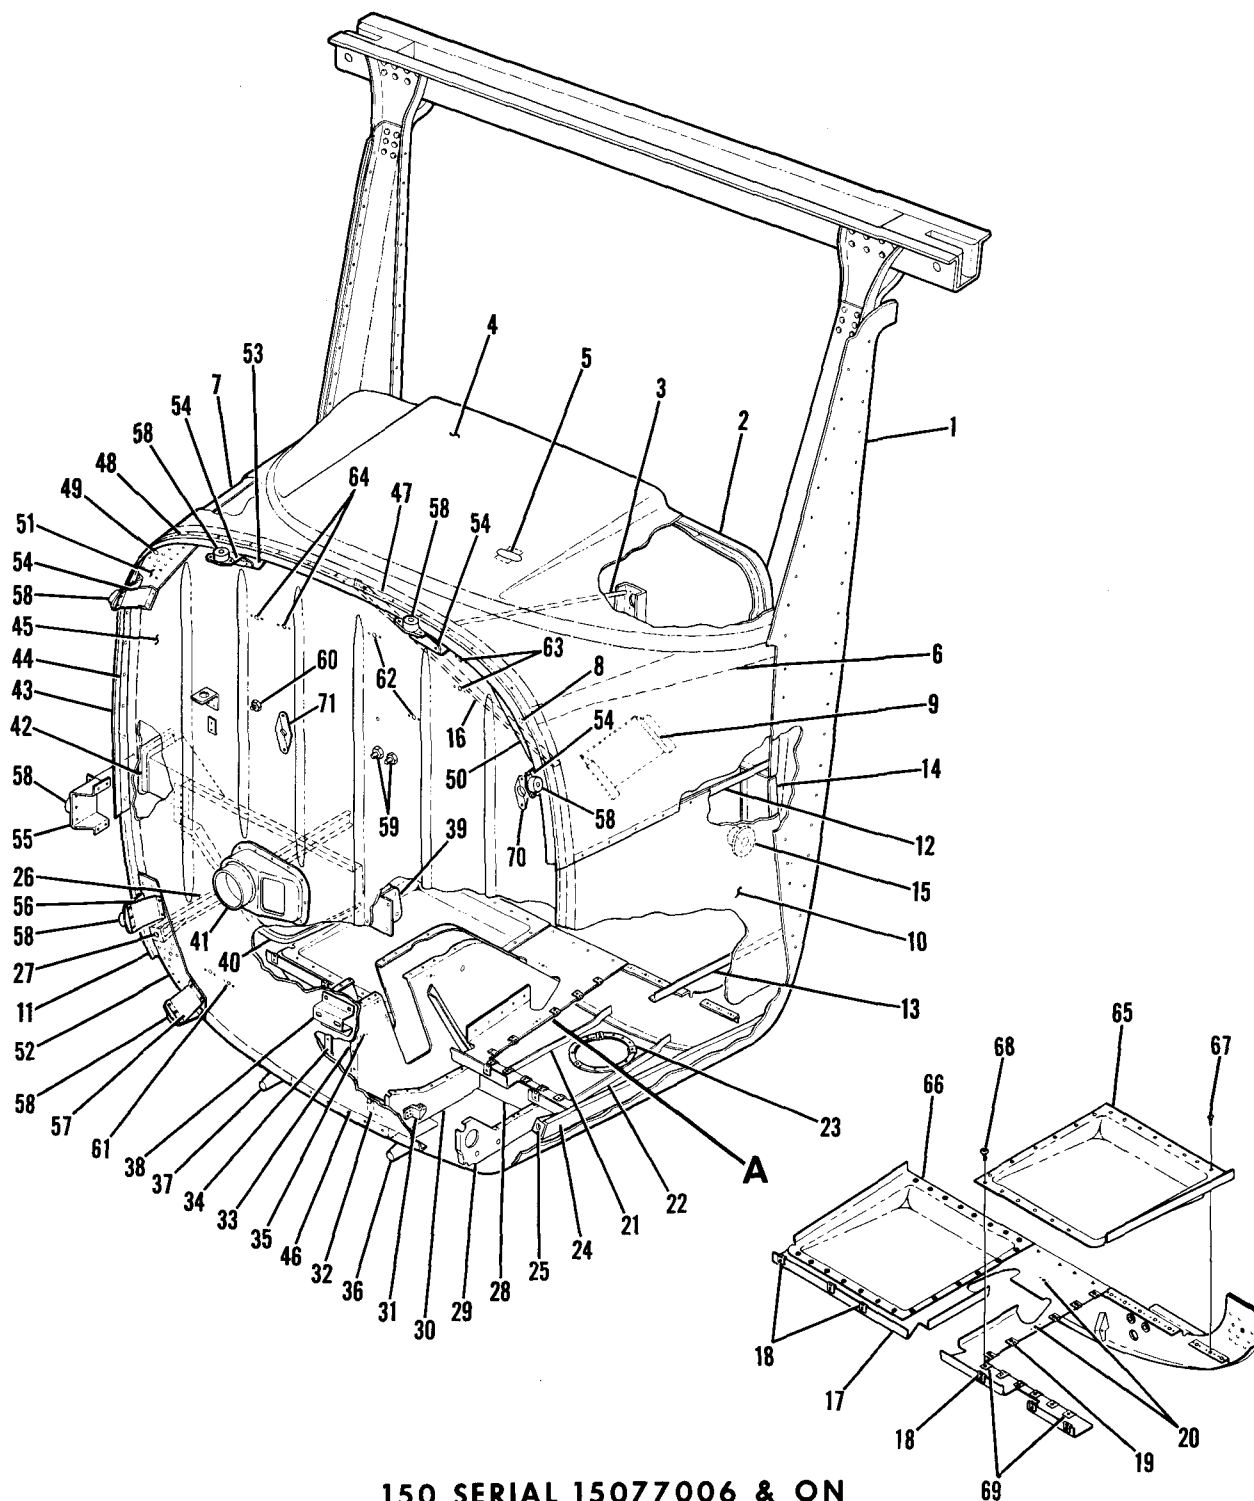

150 SERIAL 15077006 & ON
 F150 SERIAL F15001249 & ON
 A150 SERIAL A1500610 & ON
 FA150 SERIAL FA1500282 & ON

Detail A

Figure 26A. Fuselage Front Section Assembly

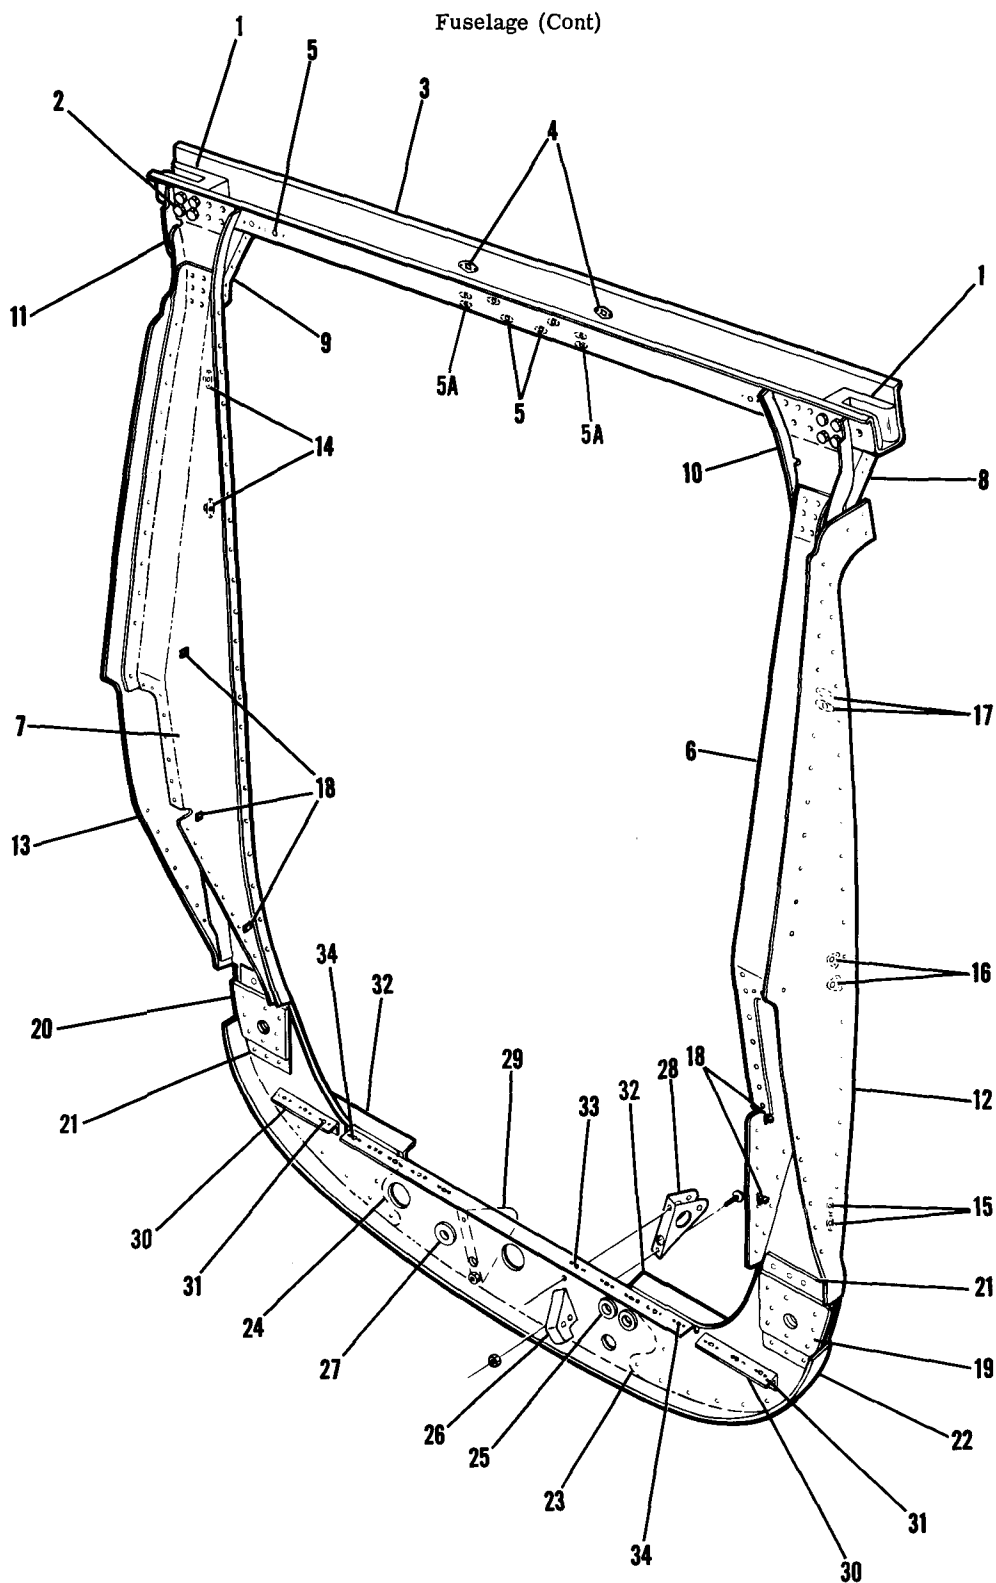


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
26A-	0413004-28	FRONT SECTION ASSEMBLY-FUSELAGE -----	1	E G F H A B
	0413004-30	FRONT SECTION ASSEMBLY-FUSELAGE -----	1	
	0413004-29	FRONT SECTION ASSEMBLY-FUSELAGE -----	1	
	0413004-31	FRONT SECTION ASSEMBLY-FUSELAGE -----	1	
- 1	SEE FIG 27	BULKHEAD ASSY-FRONT DOORPOST -----	1	
	SEE FIG 28	BULKHEAD ASSY-FRONT DOORPOST -----	1	
- 2	SEE FIG 47B & 47C	STATIONARY INSTRUMENT PANEL ASSY -----	1	
- 3	0413346-2	STIFFENER-STATIONARY INSTRUMENT PANEL -----	1	
- 4	0413004-27	SKIN-DECK -----	1	
- 5	0413452-1	NOZZLE ASSY-DEFROSTER -----	1	
- 6	0413423-5	STRINGER ASSY-ENGINE MOUNT LH -----	1	
- 7	0413423-6	STRINGER ASSY-ENGINE MOUNT RH -----	1	
- 8	0411281-7	BRACKET-ENGINE MOUNT LH -----	1	
	0411281-8	BRACKET-ENGINE MOUNT RH -----	1	
- 9	1213675-1	SUPPORT ASSY-HEAT SINK -----	1	
	NAS682A3	NUTPLATE -----	4	
-10	0413004-11	SKIN-LOWER LH -----	1	
-11	0413004-16	SKIN-LOWER RH -----	1	
-12	0413305-1	STIFFENER-FRONT SECTION LH -----	1	
	0413305-2	STIFFENER-FRONT SECTION RH -----	1	
-13	0413305-3	STIFFENER-FRONT SECTION LH -----	1	
	0413305-4	STIFFENER-FRONT SECTION RH -----	1	
-14	0413425-3	STIFFENER-FORWARD DOOR POST LH -----	1	
	0413425-4	STIFFENER-FORWARD DOOR POST RH -----	1	
-15	S1776-1	BUTTON-PITOT STATIC LINE -----	1	
-16	0413548-1	STIFFENER-LOWER INSTRUMENT PANEL -----	1	
-17	0413430-1	FLOORBOARD ASSY-FRONT -----	1	
-18	A1793-6Z3	NUT TIN -----	6	
-19	NAS395-12-3	NUT -----	10	
-20	S1863-3	NUTPLATE -----	3	
-21	0413391-1	STIFFENER-FUSELAGE INBOARD -----	2	
-22	0413391-2	STIFFENER-FUSELAGE OUTBOARD -----	2	
-23	S237-2	DOUBLER ASSY -----	1	
	NAS395-14-3	NUT -----	3	
-24	0411283	BRACKET ASSY-ENGINE MOUNT LOWER LH -----	1	
-25	0411281-5	BRACKET-ENGINE MOUNT LH -----	1	
-26	0411283-1	BRACKET ASSY-ENGINE MOUNT LOWER RH -----	1	
-27	0411281-4	BRACKET-ENGINE MOUNT RH -----	1	
-28	0413397-3	BULKHEAD ASSY-FLOORBOARD STA 8.37 LH -----	1	
	0413397-2	BULKHEAD-FLOORBOARD STA 8.37 RH -----	1	
-29	0413396-1	BULKHEAD-FRONT FLOORBOARD OUTBD LH -----	1	
	0413396-2	BULKHEAD-FRONT FLOORBOARD OUTBD RH -----	1	
-30	0413395-1	BULKHEAD ASSY-FRONT FLOORBOARD INBD LH -----	1	
	0413395-2	BULKHEAD ASSY-FRONT FLOORBOARD INBD RH -----	1	
-31	0713624-2	ANCHOR-BRAKE CYLINDER LH ONLY -----	1	
-32	0460126-4	BRACKET-TRIM CONTROL -----	1	
		ATTACHING PARTS -----		
	AN520-10R6	SCREW -----	1	
	MS20365-1032	NUT -----	1	
		-----*		
-33	0413394-1	BULKHEAD ASSY-CONTROL TEE LH -----	1	
-34	0413394-2	BULKHEAD ASSY-CONTROL TEE RH -----	1	
-35	NAS680A3	NUTPLATE LH BULKHEAD ONLY -----	5	
	NAS680A3	NUTPLATE RH BULKHEAD ONLY -----	6	
-36	0413304-1	SEAL ASSY-STEERING LINK LH -----	1	
-37	0413304-2	SEAL ASSY-STEERING LINK RH -----	1	
-38	0413511-1	BRACKET-FUEL STRAINER -----	1	
-39	0460126-1	BRACKET ASSY-TRIM CONTROL -----	1	
-40	SEE FIG 60A	DISTRIBUTOR ASSY-CABIN AIR -----	1	
-41	SEE FIG 60A	VALVE ASSY-CABIN HEATER -----	1	
-42	SEE FIG 60A	INLET & DUCT ASSY-OUTSIDE AIR -----	1	
-43	0413469-1	GUARD-DECK SKIN -----	1	
-44	0413468-1	STIFFENER-DECK SKIN GUARD -----	4	
	0453001-6	FIREWALL ASSY -----	1	
-45	0453114-5	SHEET-FIREWALL -----	1	
-46	0453115-1	ANGLE -----	1	
-47	0453107-3	ANGLE-LH -----	1	
-48	0453107-2	ANGLE-RH -----	1	
-49	0453110	PLATE-FIREWALL LOCATED ON AFT SIDE OF FIREWALL -----	4	
-50	0453116-5	DOUBLER-UPPER ENGINE MOUNT LH -----	1	
-51	0453116-6	DOUBLER-UPPER ENGINE MOUNT RH -----	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
26A-52	0453116-9	DOUBLER-LOWER MOUNT RH -----	1	
	0453116-8	DOUBLER-LOWER MOUNT LH -----	1	
-53	0453116-7	DOUBLER-SHOCK MOUNT -----	3	
-54	0453003-8	SHOCK MOUNT ASSY-COWL -----	4	
-55	0453003-4	SHOCK MOUNT ASSY-COWL -----	1	
-56	0453003-1	SHOCK MOUNT ASSY-COWL -----	3	
-57	0453003-6	SHOCK MOUNT ASSY-COWL -----	2	
-58	S1115-29	SHOCK MOUNT -----	1	
-59	AN832-20	UNION -----	2	
	AN924-20	NUT -----	2	
-60	1450024-3	UNION WEU S2289-2 -----	1	J
	S2289-2	UNION -----	1	K
	AN924-30	NUT -----	1	
	AN960-616	WASHER -----	2	
-61	S1863-3A	NUTPLATE -----	11	
-62	NAS697A4K	NUTPLATE -----	2	
-63	NAS697A08K	NUTPLATE -----	2	
-64	NAS680A3K	NUTPLATE -----	2	
	SEE FIG 23	BATTERY BOX INSTL -----	1	
-65	0413429-1	FEET PAN-FRONT FLOORBOARD LH -----	1	C
	0413429-3	FEET PAN ASSY-FRONT FLOORBOARD LH -----	1	D
	S1863-1	NUTPLATE -----	4	D
-66	0413429-2	FEET PAN-FRONT FLOORBOARD RH -----	1	C
	0413429-4	FEET PAN-ASSY-FRONT FLOORBOARD RH -----	1	D
	S1863-1	NUTPLATE -----	4	D
		ATTACHING PARTS		
-67	AN515-8R8	SCREW -----	8	
-68	S102128-8	SCREW -----	11	
-69	NAS395-17-3	NUTPLATE -----	6	
		-----*		
-70	NAS557-10A	GROMMET-SPLIT PLASTIC -----	1	
	S1095-5	SHIELD HALF-WIRING HARNESS -----	2	
		ATTACHING PARTS		
	S102128-6	SCREW -----	2	
	NAS446-4-3	NUT -----	2	
		-----*		
-71	NAS557-6A	GROMMET-SPLIT PLASTIC -----	1	
	S1095-3	SHIELD HALF-TACHOMETER SHAFT -----	2	
		ATTACHING PARTS		
	S102128-6	SCREW -----	2	
	S1860-2A	NUTPLATE -----	2	
		-----*		
		A---150 SERIAL 15077006 & ON F150 SERIAL F15001249 & ON		
		B---A150 SERIAL A1500610 & ON FA150 SERIAL FA1500282 & ON		
		C---FA150 SERIAL FA1500282 THRU FA1500311		
		D---150 SERIAL 15077006 & ON F150 SERIAL F15001249 & ON A150 SERIAL A1500610 & ON FA150 SERIAL FA1500312 & ON		
		E---150 SERIAL 15077006 THRU 15078505 F150 SERIAL F15001249 THRU F15001338		
		F---A150 SERIAL A1500610 THRU A1500684 FA150 SERIAL FA1500282 THRU FA1500311		
		G---150 SERIAL 15078506 & ON F150 SERIAL F15001339 & ON		
		H---A150 SERIAL A1500685 & ON FA150 SERIAL FA1500312 & ON		
		J---150 SERIAL 15077006 THRU 15078040 F150 SERIAL F15001249 THRU F15001338 A150 SERIAL A1500610 THRU A1500658 FA150 SERIAL FA1500282 THRU FA1500311		
		K---150 SERIAL 15078041 & ON F150 SERIAL F15001339 & ON A150 SERIAL A1500659 & ON FA150 SERIAL FA1500312 & ON		






150 SERIAL 15071129 & ON
F150 SERIAL F15000530 & ON
 Figure 27. Front Doorpost Bulkhead Assembly



FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
27 -	0413424-3	BULKHEAD ASSEMBLY-FRONT DOORPOST STA 20.5 -----	1	A
- 1	0411129	BLOCK-BEARING -----	2	
		ATTACHING PARTS -----		
- 2	AN3-21A	BOLT -----	4	
	AN960-10L	WASHER -----	4	
	MS21044N3	NUT -----	4	
		---*---		
- 3	0411131-6	SPAR ASSY-FRONT DOORPOST -----	1	
- 4	S1863-3A	NUTPLATE -----	2	
- 5	NAS680A3	NUTPLATE -----	6	
	NAS697A06L	NUTPLATE -----	4	
- 6	0413424-203	DOORPOST ASSEMBLY-FRONT LH -----	1	
- 7	0413424-202	DOORPOST ASSEMBLY-FRONT RH -----	1	
- 8	0411132	BRACE LH -----	1	
- 9	0411132-1	BRACE RH -----	1	
-10	0413325-5	CHANNEL-UPPER SIDE LH -----	1	
-11	0413325-4	CHANNEL-UPPER SIDE RH -----	1	
-12	0411868-5	SKIN-CABIN LH -----	1	
-13	0411868-4	SKIN-CABIN RH -----	1	
-14	NAS682A06	NUTPLATE -----	2	
-15	NAS680A3	NUTPLATE -----	2	
-16	NAS698A3	NUTPLATE -----	2	
-17	NAS680A06	NUTPLATE -----	2	
-18	S1992-1	INSERT -----	14	
-19	0411276	PLATE-LH -----	1	
-20	0411276-1	PLATE-RH -----	1	
-21	0411141	DOUBLER -----	2	
-22	0413386-1	BULKHEAD ASSEMBLY-LOWER SECTION CANTED STA 20.5 -----	1	
-23	0413412-1	DOUBLER-LH -----	1	
-24	0413412-2	DOUBLER-RH -----	1	
-25	MS35489-7	GROMMET -----	2	
-26	0412467	BRACKET-ELEVATOR TAB CONTROL PULLEY -----	1	
-27	MS35489-14	GROMMET -----	1	
-28	0411907	BRACKET-PULLEY LH -----	1	
-29	0411907-1	BRACKET-PULLEY RH -----	1	
		ATTACHING PARTS -----		
	AN520-10R8	SCREW -----	1	
	MS21044N3	NUT -----	1	
		---*---		
-30	0413411-3	ANGLE-FLOORBOARD SUPPORT -----	2	
-31	NAS697A08	NUTPLATE -----	3	
-32	0413411-1	ANGLE-FLOORBOARD SUPPORT -----	2	
-33	NAS697A08	NUTPLATE -----	8	
-34	NAS696A08	NUTPLATE -----	2	
A---150 SERIAL 15071129 & ON F150 SERIAL F15000530 & ON				

Fuselage (Cont)

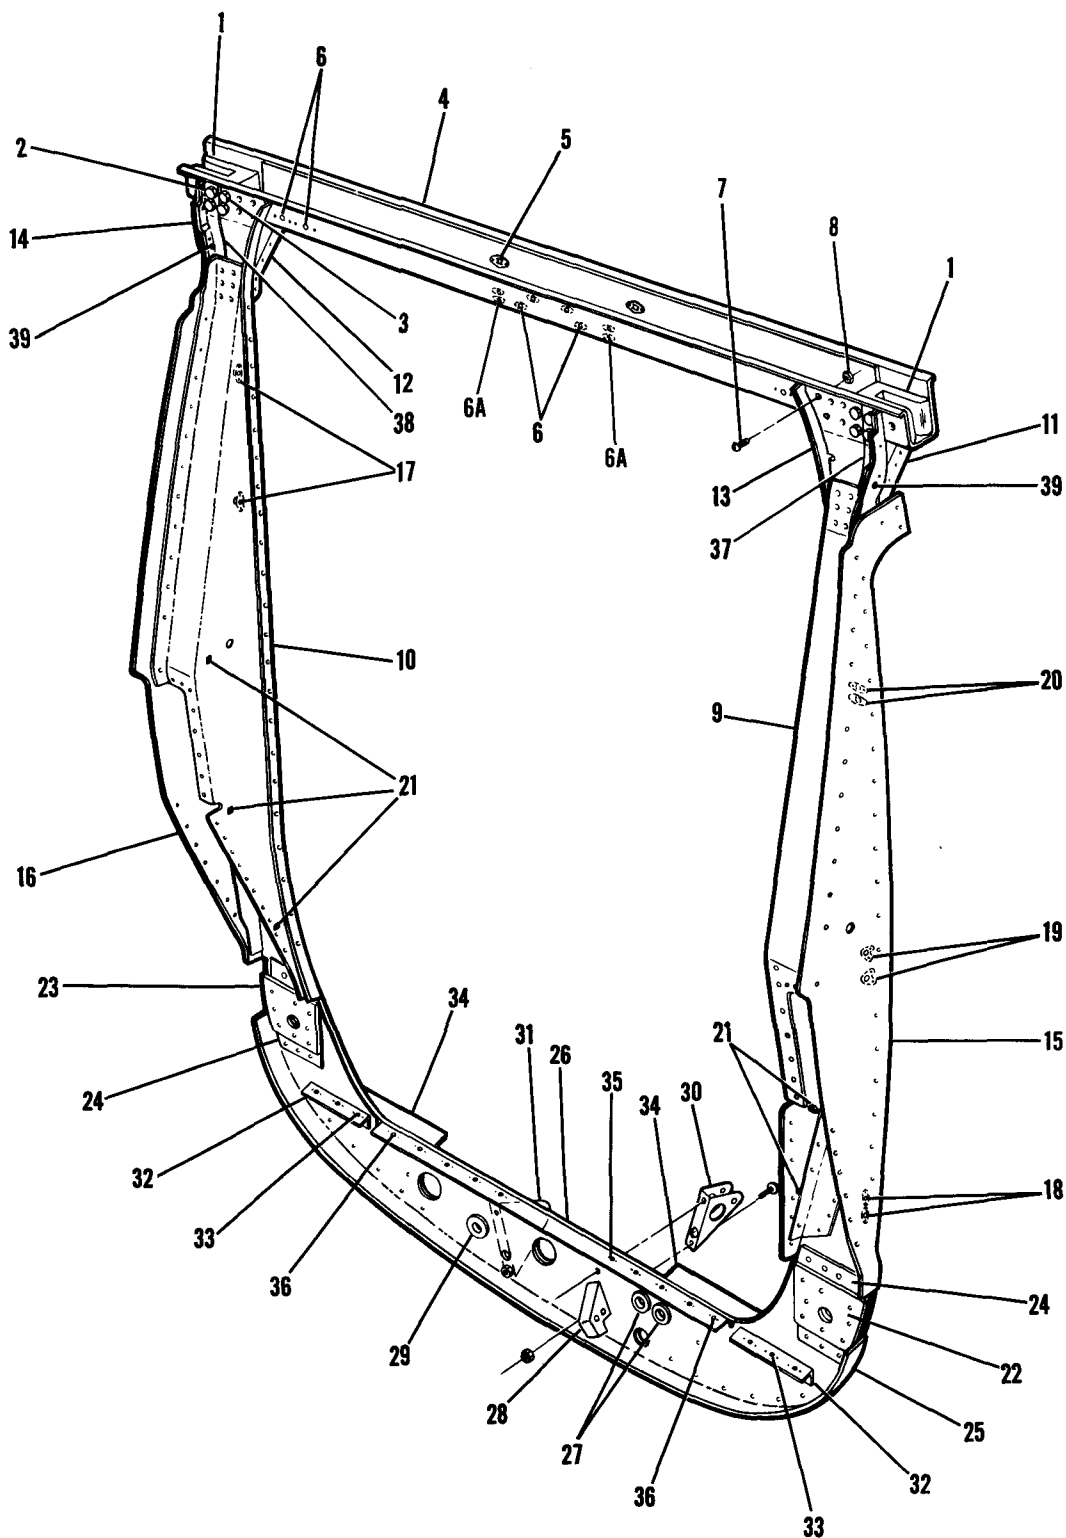

A150 SERIAL A1500001 & ON
FA150 SERIAL FA1500001 & ON

Figure 28. Front Doorpost Bulkhead Assembly - Aerobat



FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
28 -	0413424-2	BULKHEAD ASSEMBLY-FRONT DOORPOST STA 20.5 AEROBAT -----	1	A
- 1	0411129	BLOCK-BEARING -----	2	
		ATTACHING PARTS -----		
- 2	AN3-22A	BOLT -----	2	
- 3	AN3-21A	BOLT -----	2	
	AN960-10L	WASHER -----	4	
	MS21044N3	NUT -----	4	
		-----*		
- 4	0411131-8	SPAR ASSY-FRONT DOORPOST -----	1	
- 5	S1863-3A	NUTPLATE -----	2	
- 6	NAS680A3	NUTPLATE -----	10	
	NAS697A06L	NUTPLATE -----	4	
- 7	NAS221-8	SCREW -----	4	
- 8	22NM02	NUT EN -----	4	
- 9	0413424-205	DOORPOST ASSEMBLY-FRONT LH -----	1	
-10	0413424-204	DOORPOST ASSEMBLY-FRONT RH -----	1	
-11	0411132	BRACE-LH -----	1	
-12	0411132-1	BRACE-RH -----	1	
-13	0413325-7	CHANNEL-UPPER SIDE LH -----	1	
-14	0413325-6	CHANNEL-UPPER SIDE RH -----	1	
-15	0411868-7	SKIN-CABIN LH -----	1	
-16	0411868-6	SKIN-CABIN RH -----	1	
-17	NAS682A06	NUTPLATE -----	2	
-18	NAS680A3	NUTPLATE -----	2	
-19	NAS698A3	NUTPLATE -----	2	
-20	NAS680A06	NUTPLATE -----	2	
-21	S1992-1	INSERT -----	14	
-22	0411276	PLATE-LH -----	1	
-23	0411276-1	PLATE-RH -----	1	
-24	0411141	DOUBLER -----	2	
-25	0413386-3	BULKHEAD ASSEMBLY-LOWER SECTION CANTED STA 20.5 -----	1	
-26	0413498-1	SUPPORT -----	1	
-27	MS35489-65	GROMMET -----	2	
-28	0412467	BRACKET-ELEVATOR TAB CONTROL PULLEY -----	1	
-29	MS35489-72	GROMMET -----	1	
-30	0411907	BRACKET-PULLEY LH -----	1	
-31	0411907-1	BRACKET-PULLEY RH -----	1	
		ATTACHING PARTS -----		
	AN520-10R10	SCREW -----	1	
	MS21044N3	NUT -----	1	
		-----*		
-32	0413411-5	ANGLE-FLOORBOARD SUPPORT -----	2	
-33	MS21044N08	NUTPLATE -----	3	
-34	0413411-6	ANGLE-FLOORBOARD SUPPORT -----	2	
-35	NAS697A08	NUTPLATE -----	8	
-36	NAS696A08	NUTPLATE -----	2	
-37	0413508-1	REINFORCEMENT-FRONT DOOR POST LH -----	1	
-38	0413508-2	REINFORCEMENT-FRONT DOOR POST RH -----	1	
		ATTACHING PARTS -----		
-39	AN525-832-8	SCREW -----	1	
	MS21044N08	NUT -----	1	
	AN960-8L	WASHER -----	1	
		-----*		
A---A150 SERIAL A1500001 & ON FA150 SERIAL FA1500001 & ON				

Exploded view diagram of a vehicle chassis and suspension system, showing various components and their assembly points. The diagram includes a main chassis assembly with numerous numbered parts (1-86) and a separate suspension component (21-28). A callout for '1970 MODELS' shows a different suspension design (40-48), and another callout for '1975 MODELS & ON' shows a further modified suspension (29-32E).

Figure 29. Fuselage Tailcone Assembly



FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
29 -	0412020-24	TAILCONE ASSEMBLY-FUSELAGE	1	C
	0412020-27	TAILCONE ASSEMBLY-FUSELAGE	1	Q
	0412020-30	TAILCONE ASSEMBLY-FUSELAGE	1	V
	0412020-34	TAILCONE ASSEMBLY-FUSELAGE	1	W
	0412020-38	TAILCONE ASSEMBLY-FUSELAGE	1	Z
	0412020-40	TAILCONE ASSEMBLY-FUSELAGE	1	AK
	0412020-204	TAILCONE ASSEMBLY-FUSELAGE WITH TINTED WINDOW	1	C
	0412020-206	TAILCONE ASSEMBLY-FUSELAGE WITH TINTED WINDOW	1	Q
		TAILCONE ASSEMBLY-FUSELAGE WITH TINTED WINDOW	NP	R
	0412020-22	TAILCONE ASSEMBLY-FUSELAGE AEROBAT	1	E
	0412020-25	TAILCONE ASSEMBLY-FUSELAGE AEROBAT	1	F
	0412020-35	TAILCONE ASSEMBLY-FUSELAGE AEROBAT	1	Y
	0412020-39	TAILCONE ASSEMBLY-FUSELAGE AEROBAT	1	AA
	0412020-41	TAILCONE ASSEMBLY-FUSELAGE AEROBAT	1	AL
	0412020-201	TAILCONE ASSEMBLY-FUSELAGE WITH TINTED WINDOW AEROBAT	1	E
	0412020-205	TAILCONE ASSEMBLY-FUSELAGE WITH TINTED WINDOW AEROBAT	1	F
		TAILCONE ASSEMBLY-FUSELAGE WITH TINTED WINDOW AEROBAT	NP	X
	0411956-7	DOORPOST BULKHEAD ASSY-REAR	1	K
	0411956-10	DOORPOST BULKHEAD ASSY-REAR	1	D
	0412533-1	DOORPOST BULKHEAD ASSY-REAR	1	AH
	0412533-2	DOORPOST BULKHEAD ASSY-REAR AEROBAT	1	AJ
	- 1	0512122 BLOCK-FUSELAGE SPAR	2	
		ATTACHING PARTS		
	AN3-20A	BOLT	4	
	AN960-10L	WASHER	4	
	MS21044N3	NUT	4	

	- 2	0411108-4 SPAR-REAR DOORPOST	1	K
		0412534-3 SPAR-REAR DOORPOST AEROBAT	1	AJ
		0411108-6 SPAR ASSEMBLY-REAR DOORPOST	1	D
		0412534-1 SPAR ASSEMBLY-REAR DOORPOST	1	AK
	- 3	NAS680A4 NUTPLATE NOT INCLUDED WITH 0411108-4 & 0412534-3	2	
	- 4	0411525-1 BRACE-LH	1	
	- 5	0411525-2 BRACE-RH	1	
	- 6	0411956-9 CHANNEL-BULKHEAD LH	1	AE
		0412533-3 CHANNEL-BULKHEAD LH	1	AG
	- 7	0411956-8 CHANNEL-BULKHEAD RH	1	AE
		0412533-4 CHANNEL-BULKHEAD RH	1	AG
	- 8	0411934-1 BRACKET ASSEMBLY-SEAT BACK LH	1	T
	- 9	0411934-2 BRACKET ASSEMBLY-SEAT BACK RH	1	T
		ATTACHING PARTS		
		AN520-10R8 BOLT	4	T
		MS21044N3 NUT	4	T

-10	0412066-1	CLUTCH ASSEMBLY-ROTARY DOOR LATCH LH	1	
-11	0412066-2	CLUTCH ASSEMBLY-ROTARY DOOR LATCH RH	1	
		ATTACHING PARTS		
	AN525-10R6	SCREW	2	

-12	0412066-6	GUIDE-DOOR LATCH	2	
		ATTACHING PARTS		
	NAS430D3-9	SPACER	1	
	AN525-10R9	SCREW	1	

-13	0412030-3	FLOORBOARD ASSEMBLY-STA 56.69 TO 76.44	1	T
	0412030-5	FLOORBOARD ASSEMBLY-STA 56.69 TO 76.44	1	U
-14	0412060-1	ANGLE	1	
-15	S1863-3	NUTPLATE	12	
-16	0412067-2	FLOORBOARD-STA 76.44 TO 95.0	1	
-17	0412067-3	ANGLE	1	
	0412067-4	RETAINER-FAIRLEAD ELEVATOR CABLE	1	
-18	0412171-1	ANGLE	1	
-19	0412054-1	CLIP-TAILCONE SKIN STIFFENER	1	
-20	0412055-1	STIFFENER-TAILCONE SKIN	1	
	0412047-2	BRACKET ASSEMBLY-PULLEY WEU 0412047-3	1	L
	0412047-3	BRACKET ASSEMBLY-PULLEY	1	M
		ATTACHING PARTS		
-21	AN515-8R8	SCREW	2	
-22	AN960-8	WASHER	2	
-23	MS21044N08	NUT	2	

-24	0412171-1	ANGLE	1	
-25	0412049-1	BULKHEAD	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
29 -26	0412050-1	BRACKET-AILERON CONTROL LOWER WEU 0412050-3	1	L
-27	0412050-3	BRACKET-AILERON CONTROL LOWER	1	M
-28	0412050-2	BRACKET-AILERON CONTROL UPPER	1	
	0412043-4	BRACKET ASSEMBLY-PULLEY RH	1	
	0412043-3	BRACKET ASSEMBLY-PULLEY LH	1	
	0412024-2	BULKHEAD ASSEMBLY-STA 70.69 WEU 0412024-3	1	N
	0412024-3	BULKHEAD ASSEMBLY-STA 70.69	1	AB
	0412024-4	BULKHEAD ASSY-STA 70.69	1	AD
-29	0412027-3	BULKHEAD ASSEMBLY-UPPER LH	1	N
-30	0412027-7	BULKHEAD ASSEMBLY-UPPER LH	1	P
	0412027-4	BULKHEAD ASSEMBLY-UPPER RH	1	N
	0412027-8	BULKHEAD ASSEMBLY-UPPER RH	1	P
	NAS680A3K	NUTPLATE	2	
	NAS697A3	NUTPLATE	1	
-31	0411209	BULKHEAD-LOWER	1	
	0412467	BRACKET-ELEVATOR TAB CONTROL PULLEY	1	
	MS35489-14	GROMMET	1	
-32	0413202-30	LUG-SEAT BELT	2	AC
		ATTACHING PARTS		
	AN3-3A	BOLT	2	AC
	MS21044N3	NUT	2	AC

-32A	0412531-1	BRACKET-LH	1	AD
	0412531-2	BRACKET-RH	1	AD
-32B	0412530-1	LUG-SEAT BELT	2	AD
		ATTACHING PARTS		
-32C	AN4-4A	BOLT	1	AD
-32D	AN960-416	WASHER	1	AD
-32E	MS21042L4	NUT	1	AD

-33	0412033-6	ANGLE-RH	1	
	0412033-5	ANGLE-LH	1	
-34	0412033-3	ANGLE-LH	1	
-35	0412033-4	ANGLE-RH	1	
	1089	STUD DIGR	2	
-36	0412028-3	BULKHEAD ASSEMBLY-CANTED STA 70.69	1	
-37	0412028-4	BULKHEAD ASSEMBLY-CANTED STA 70.69	1	
	NAS680A3K	NUTPLATE	1	
-38	0411210-3	BULKHEAD-STA 76.44	1	
-39	0412033-1	STRINGER-FWD	3	
-40	0412025-4	BULKHEAD ASSEMBLY-STA 95.00	1	C
	0412025-5	BULKHEAD ASSEMBLY-STA 95.00 AEROBAT	1	E
	0412025-8	BULKHEAD ASSEMBLY-STA 95.00	1	AF
	0412025-10	BULKHEAD ASSEMBLY-STA 95.00	1	AG
-41	0412025-3	ANGLE	1	J
	0412025-7	ANGLE AEROBAT	1	E
-41A	0414021-1	STIFFENER-LH AEROBAT	1	E
	0414021-2	STIFFENER-RH AEROBAT	1	E
-41B	0414020-1	BRACKET-LH AEROBAT	1	E
	0414020-2	BRACKET-RH AEROBAT	1	E
-42	0412078-2	CLIP	4	
	0412469	STRIP-RUB	1	AE
-42A	0412532-1	STIFFENER-LH	1	AG
	0412532-2	STIFFENER-RH	1	AG
-43	0412058-1	STIFFENER-BULKHEAD	1	
-44	0412057-1	GUSSET-TAILCONE	1	
-44A	0412526-1	BRACKET ASSEMBLY-SHOULDER HARNESS ATTACH LH	1	S
	0412526-2	BRACKET ASSEMBLY-SHOULDER HARNESS ATTACH RH	1	S
-45	0412023-1	STRINGER-TOP CENTER LINE STA 95.00 TO 133.31	1	G
-45A	0412023-1	STRINGER-TOP STA 95.00 TO 133.31	2	H
-46	0412065-3	STRINGER-AFT	2	A
	0412033-9	STRINGER-AFT AEROBAT	2	B
-47	0412033-9	STRINGER-AFT	1	
-48	0412026-1	BULKHEAD ASSEMBLY-STA 133.31	1	G
	0412026-3	BULKHEAD ASSEMBLY-STA 133.31	1	H
	0412648	STRIP-RUB	1	
-49	0412064-1	BRACKET-BULKHEAD	2	
-50	0412020-19	SKIN-FORWARD WINDOW LH	1	
-51	0412020-18	SKIN-FORWARD WINDOW RH	1	
-52	0412039-3	RETAINER-REAR WINDOW LH	1	
-53	0412039-4	RETAINER-REAR WINDOW RH	1	

CONTINUED ON NEXT PAGE



FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
29 -54	0412020-2	SKIN-CABIN TOP LH -----	1	AM
	0412020-42	SKIN-CABIN TOP LH -----	1	AN
-55	0412020-11	SKIN-CABIN TOP RH -----	1	AM
	0412020-43	SKIN-CABIN TOP RH -----	1	AN
-56	0412044-1	BRACKET-PULLEY FWD LH -----	1	
-57	0412044-2	BRACKET-PULLEY FWD RH -----	1	
-58	0412044-3	BRACKET-PULLEY REAR LH -----	1	
-59	0412044-4	BRACKET-PULLEY REAR RH -----	1	
-60	0412052-2	STIFFENER-PULLEY RH -----	1	
	0412052-1	STIFFENER-PULLEY LH -----	1	
-61	0412039-2	RETAINER-WINDOW UPPER INNER LH -----	1	
-62	0412039-5	RETAINER-WINDOW UPPER INNER RH -----	1	
-63	0460215-1	GUIDE-FLAP INDICATOR -----	1	AN
-63A	0460214-4	BRACKET ASSY-FLAP INDICATOR -----	1	AN
	NAS680A3	NUTPLATE -----	1	AN
-64	S1863-3	NUTPLATE -----	6	
-65	0412020-5	SKIN-LOWER WINDOW LH -----	1	
-66	0412020-6	SKIN-LOWER WINDOW RH -----	1	
-67	0412039-1	RETAINER-WINDOW LOWER OUTER LH -----	1	
-68	0412039-6	RETAINER-WINDOW LOWER OUTER RH -----	1	
-69	0412040-2	CHANNEL-REAR WINDOW -----	1	
-70	0412037-1	CLIP -----	1	
	0412097-1	SUPPRT-FAIRLEAD AILERON CARRY THRU -----	1	
-70A	0412535-1	BRACKET-FAP INDICATOR -----	1	AN
-71	S1389-5	PAD-FELT 55.50 IN LG BULK ITEM REF S1389-5-55.50 -----	1	
-72	S1389-2	PAD-FELT 61.50 IN LG BULK ITEM REF S1389-2-61.50 -----	1	
-73	0412020-10	WINDOW-REAR CLEAR -----	1	
	0412020-21	WINDOW-REAR TINTED -----	1	
		ATTACHING PARTS		
-74	0412042-1	RETAINER-REAR WINDOW -----	1	
	S1389-1	PAD-FELT 19.50 IN LG BULK ITEM REF S1389-1-19.50 -----	2	
	AN525-10R10	SCREW TWO CENTER SCREWS -----	2	
	AN525-10R12	SCREW TWO END SCREWS -----	2	
	AN960-10L	WASHER -----	4	
	MS21044N3	NUT -----	4	

-75	0412041-1	DOUBLER -----	1	G
	0412073-1	DOUBLER -----	1	H
-76	CM2692-32-1S	PLUG BUTTON UC -----	1	
-77	0412020-7	SKIN-LOWER REAR SPAR BULKHEAD TO STA 95.00 -----	1	
-78	0412020-8	SKIN-UPPER STA 95.00 TO 133.31 -----	1	G
	0412020-26	SKIN-UPPER STA 95.00 TO 133.31 AEROBAT -----	1	S
	0412020-29	SKIN-UPPER STA 95.00 TO 133.31 -----	1	Q
-79	0412020-36	SKIN-LOWER STA 95.00 TO 133.31 -----	1	A
	0412020-37	SKIN-LOWER STA 95.00 TO 133.31 AEROBAT -----	1	B
-80	0412020-9	SKIN-UPPER STA 133.31 TO 173.41 -----	1	G
	0412020-28	SKIN-UPPER STA 133.31 TO 173.41 -----	1	H
-81	0412121-3	SKIN-LOWER STA 133.31 TO 173.41 -----	1	
-82	SEE FIG 30	TAILCONE ASSEMBLY-AFT -----	1	
-83	0400209-2	CLIP ASSEMBLY-COAT HANGER -----	2	
-84	1260474-1	BRACKET-EMERGENCY LOCATOR TRANS MOUNTING -----	1	S
-85	S202VW	CHANNEL-7.00 IN LG BULK ITEM REF S202V0700W -----	2	
-86	S202VW	CHANNEL-7.62 IN LG BULK ITEM REF S202V0726W -----	2	
		A---150 SERIAL 15071129 & ON F150 SERIAL F15000530 & ON B---A150 SERIAL A1500001 & ON FA150 SERIAL FA1500001 & ON C---150 SERIAL 15071129 THRU 15072003 F150 SERIAL F15000530 THRU F15000658 D---150 SERIAL 15072004 THRU 15077005 F150 SERIAL F15000659 THRU F15001248 E---A150 SERIAL A1500001 THRU A1500226 FA150 SERIAL FA1500001 THRU FA1500081 F---A150 SERIAL A1500227 THRU A1500342 FA150 SERIAL FA1500082 THRU FA1500166 G---150 SERIAL 15071129 THRU 15072003 F150 SERIAL F15000530 THRU F15000658 A150 SERIAL A1500001 THRU A1500226 FA150 SERIAL FA1500001 THRU FA1500081		
		CONTINUED ON NEXT PAGE		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
29 -		H---150 SERIAL 15072004 & ON F150 SERIAL F15000659 & ON A150 SERIAL A1500227 & ON FA150 SERIAL FA1500082 & ON J---150 SERIAL 15071129 & ON F150 SERIAL F15000530 & ON A150 SERIAL A1500227 & ON FA150 SERIAL FA1500082 & ON K---150 SERIAL 15071129 THRU 15072003 F150 SERIAL F15000530 THRU F15000658 A150 SERIAL A1500001 THRU A1500609 FA150 SERIAL FA1500001 THRU FA1500281 L---150 SERIAL 15071129 THRU 15072600 F150 SERIAL F15000530 THRU F15000758 A150 SERIAL A1500001 THRU A1500271 FA150 SERIAL FA1500001 THRU FA1500161 M---150 SERIAL 15072601 & ON F150 SERIAL F15000759 & ON A150 SERIAL A1500272 & ON FA150 SERIAL FA1500162 & ON N---150 SERIAL 15072004 THRU 15072628 F150 SERIAL F15000659 THRU F15000738 A150 SERIAL A1500227 THRU A1500276 FA150 SERIAL FA1500082 THRU FA1500121 P---150 SERIAL 15072629 & ON F150 SERIAL F15000739 & ON A150 SERIAL A1500277 & ON FA150 SERIAL FA1500122 & ON Q---150 SERIAL 15072004 THRU 15072628 F150 SERIAL F15000659 THRU F15000738 R---150 SERIAL 15072629 & ON F150 SERIAL F15000739 & ON S---150 SERIAL 15072629 & ON F150 SERIAL F15000739 & ON A150 SERIAL A1500227 & ON FA150 SERIAL FA1500082 & ON T---150 SERIAL 15071129 THRU 15073658 F150 SERIAL F15000530 THRU F15000863 A150 SERIAL A1500001 THRU A1500342 FA150 SERIAL FA1500001 THRU FA1500166 U---150 SERIAL 15073659 & ON F150 SERIAL F15000864 & ON A150 SERIAL A1500343 & ON FA150 SERIAL FA1500167 & ON V---150 SERIAL 15072629 THRU 15073658 F150 SERIAL F15000739 THRU F15000863 W---150 SERIAL 15073659 THRU 15075781 F150 SERIAL F15000864 THRU F15001143 X---A150 SERIAL A1500343 & ON FA150 SERIAL FA1500167 & ON Y---A150 SERIAL A1500343 THRU A1500523 FA150 SERIAL FA1500161 THRU FA1500261 Z---150 SERIAL 15075782 THRU 15078505 F150 SERIAL F15001144 THRU F15001338 AA---A150 SERIAL A1500524 THRU A1500684 FA150 SERIAL FA1500262 THRU FA1500311 AB---150 SERIAL 15072629 THRU 15075781 F150 SERIAL F15000739 THRU F15001143 A150 SERIAL A1500277 THRU A1500523 FA150 SERIAL FA1500122 THRU FA1500261 AC---150 SERIAL 15071129 THRU 15075781 F150 SERIAL F15000530 THRU F15001143 A150 SERIAL A1500001 THRU A1500523 FA150 SERIAL FA1500001 THRU FA1500261		
		CONTINUED ON NEXT PAGE		



FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
29 -		AD---150 SERIAL 15075782 & ON F150 SERIAL F15001144 & ON A150 SERIAL A1500524 & ON FA150 SERIAL FA1500262 & ON AE---150 SERIAL 15071129 THRU 15077005 F150 SERIAL F15000530 THRU F15001248 A150 SERIAL A1500001 THRU A1500609 FA150 SERIAL FA1500001 THRU FA1500281 AF---150 SERIAL 15072004 THRU 15077005 F150 SERIAL F15000659 THRU F15001248 A150 SERIAL A1500227 THRU A1500609 FA150 SERIAL FA150082 THRU FA1500281 AG---150 SERIAL 15077006 & ON F150 SERIAL F15001249 & ON A150 SERIAL A1500610 & ON FA150 SERIAL FA1500282 & ON AH---150 SERIAL 15077006 & ON F150 SERIAL F15001249 & ON AJ---A150 SERIAL A1500610 & ON FA150 SERIAL FA1500282 & ON AK---150 SERIAL 15078506 & ON F150 SERIAL F15001339 & ON AL---A150 SERIAL A1500685 & ON FA150 SERIAL FA1500312 & ON AM---150 SERIAL 15071129 THRU 15078505 F150 SERIAL F1500530 THRU F15001338 A150 SERIAL A1500001 THRU A1500684 FA150 SERIAL FA1500001 THRU FA1500311 AN---150 SERIAL 15078506 & ON F150 SERIAL F15001339 & ON A150 SERIAL A1500685 & ON FA150 SERIAL FA1500312 & ON		

Fuselage (Cont)

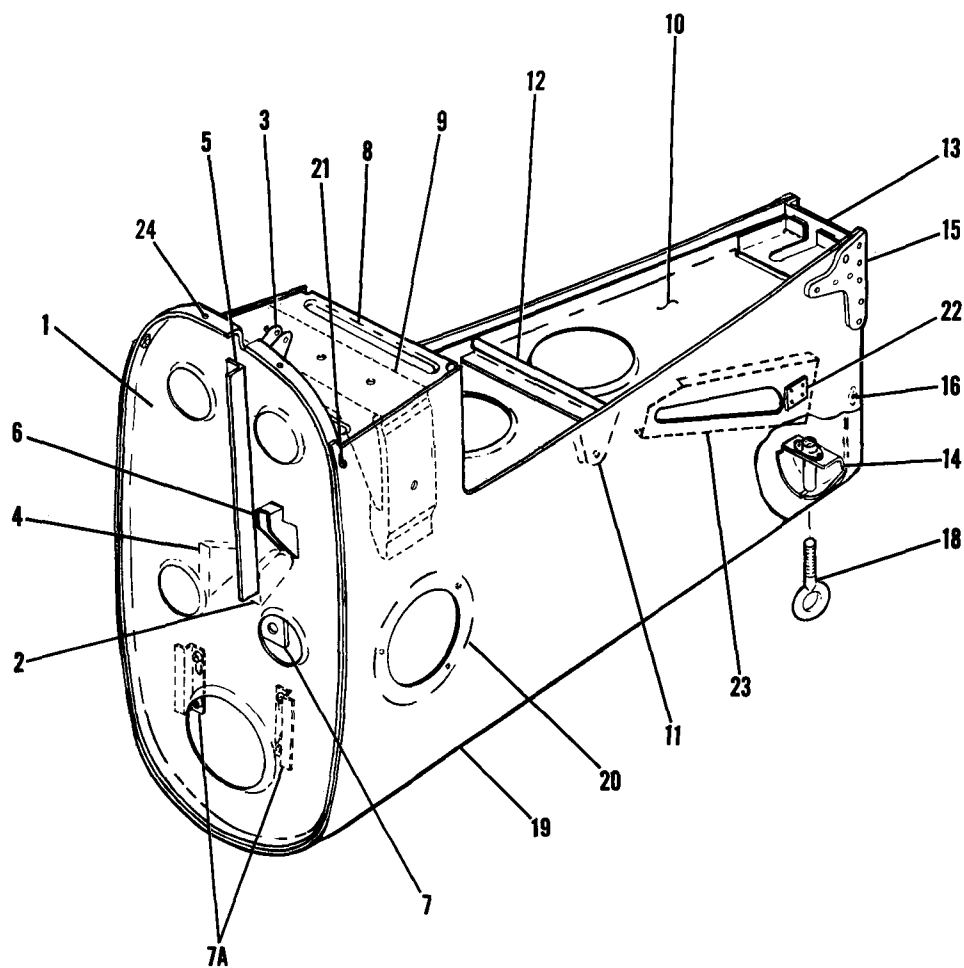


Figure 30. Aft Tailcone Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
30 -	0412020-202	TAILCONE ASSEMBLY-AFT WEU 0412020-207 -----	1	E
	0412020-207	TAILCONE ASSEMBLY-AFT -----	1	G
	0412020-203	TAILCONE ASSEMBLY-AFT AEROBAT WEU 0412020-208 -----	1	F
	0412020-208	TAILCONE ASSEMBLY-AFT -----	1	H
- 1	0412173-2	BULKHEAD ASSEMBLY-STA 173.41 -----	1	C
	0412173-3	BULKHEAD ASSEMBLY-STA 173.41 -----	1	D
	0412173-4	BULKHEAD ASSEMBLY-STA 173.41 -----	1	J
- 2	0411458	BRACKET-ELEVATOR PULLEY LOWER LH -----	1	
- 3	0411458-1	BRACKET-ELEVATOR PULLEY UPPER RH -----	1	
- 4	0411447	BRACKET-RUDDER PULLEY -----	1	
		ATTACHING PARTS		
	AN520-10R7	SCREW -----	1	
	MS21044N3	NUT -----	1	
		---*---		
- 5	0412132	ANGLE -----	1	
- 6	0412467	BRACKET-ELEVATOR TAB CONTROL -----	1	
- 7	0433133-1	FAIRLEAD -----	1	
- 7A	0412529-1	BRACKET ASSEMBLY-FLASHER -----	2	J
	NAS682A08K	NUTPLATE -----	2	J
- 8	0412177-2	BULKHEAD-STABILIZER ATTACHMENT -----	1	
- 9	0432169-1	STIFFENER ASSEMBLY -----	1	
	S1863-2A	NUTPLATE -----	2	
-10	0412174-2	BULKHEAD ASSEMBLY-HORIZONTAL -----	1	
-11	0411447	BRACKET-RUDDER PULLEY -----	2	
		ATTACHING PARTS		
	AN520-10R7	SCREW -----	1	
	MS21044N3	NUT -----	1	
		---*---		
-12	S202RB	CHANNEL-6.00 IN LG BULK ITEM REF S202R600B -----	1	
-13	0412008-1	BULKHEAD ASSEMBLY STA 200.375 -----	1	
-14	0412184-1	BRACKET ASSEMBLY-MOORING RING -----	1	
	NAS680A5	NUTPLATE -----	1	
-15	0412010-1	PLATE -----	2	
-16	NAS428H3-7	SCREW -----	2	
	NAS697A3K	NUTPLATE -----	2	
-17		DELETED, NEVER USED -----		
-18	0523613-1	EYEBOLT-MOORING -----	1	
-19	0412176-2	SKIN -----	1	B
	0412176-3	SKIN AEROBAT -----	1	A
-20	S237-2	DOUBLER ASSEMBLY -----	2	
	NAS395-14-3	NUTPLATE -----	3	
-21	S1862-1	NUTPLATE -----	2	
-22	0412020-17	STRIP-RUB -----	2	
-23	0412515-1	STIFFENER-RUDDER CABLE CUTOUT LH -----	1	A
	0412515-2	STIFFENER-RUDDER CABLE CUTOUT RH -----	1	A
-24	S1863-2	NUTPLATE -----	2	
NOTE. *WHEN INITIALLY ORDERING THIS PART FOR AIRCRAFT PRIOR TO SERIALS 15072100, A1500239, F15000699 & FA1500122 ALSO ORDER ONE 0412177-2 BULKHEAD. A---A150 SERIAL A1500001 & ON FA150 SERIAL FA1500001 & ON B---150 SERIAL 15071129 & ON F150 SERIAL F15000530 & ON C---150 SERIAL 15071129 THRU 15072003 F150 SERIAL F15000530 THRU F15000658 A150 SERIAL A1500001 THRU A1500226 FA150 SERIAL FA1500001 THRU FA1500081 D---150 SERIAL 15072004 THRU 15073658 F150 SERIAL F15000659 THRU F15000863 A150 SERIAL A1500227 THRU A1500342 FA150 SERIAL FA1500082 THRU FA1500166 E---150 SERIAL 15071129 THRU 15072003 F150 SERIAL F15000530 THRU F15000658 F---A150 SERIAL A1500001 THRU A1500226 FA150 SERIAL FA1500001 THRU FA1500081 G---150 SERIAL 15072004 & ON F150 SERIAL F15000659 & ON H---A150 SERIAL A1500227 & ON FA150 SERIAL FA1500082 & ON J---150 SERIAL 15073659 & ON F150 SERIAL F15000864 & ON A150 SERIAL A1500343 & ON FA150 SERIAL FA1500167 & ON				

Fuselage (Cont)

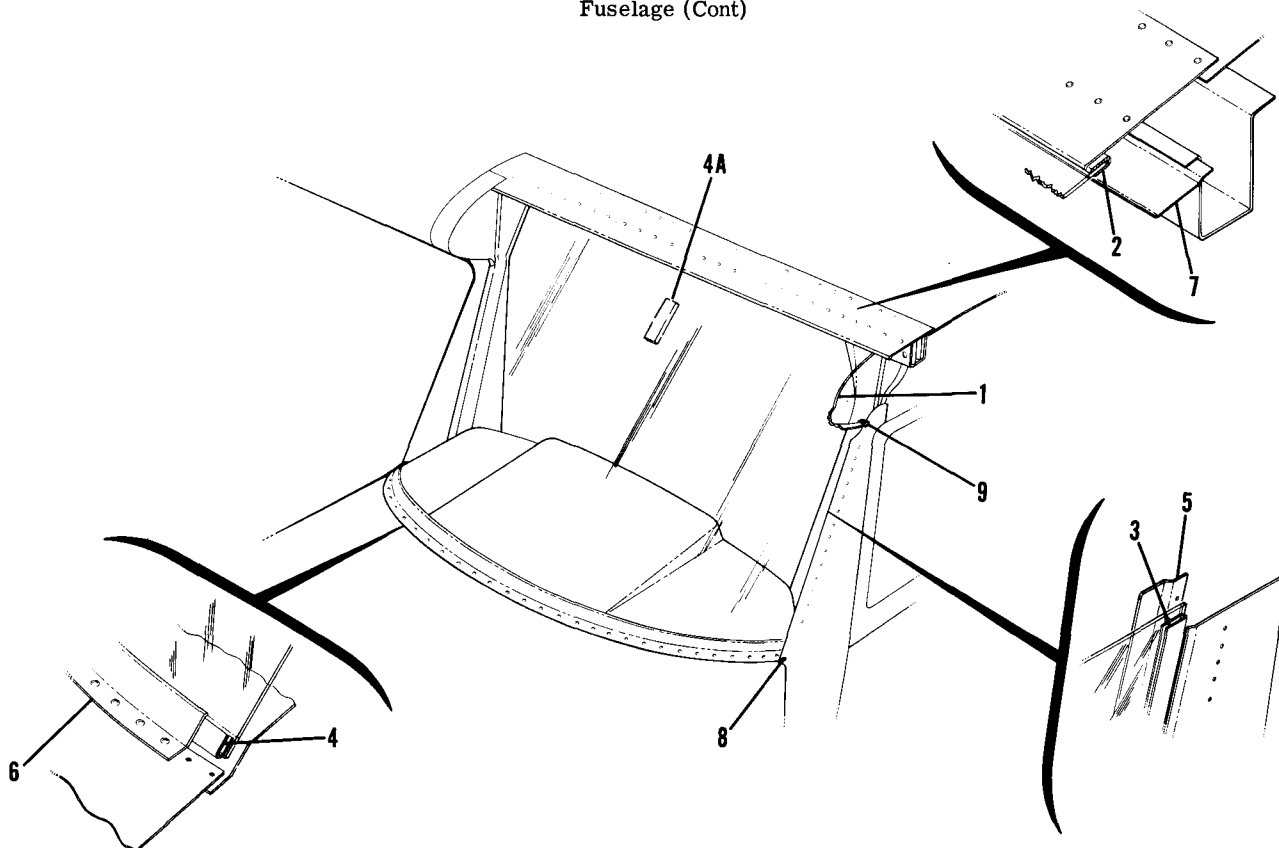


Figure 31. Windshield Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
31 -		WINDSHIELD INSTALLATION -----	NP	
- 1	0413419-203	WINDSHIELD ASSEMBLY-CLEAR -----	1	B
	0413419-201	WINDSHIELD ASSEMBLY-CLEAR -----	1	C
	0413419-200	WINDSHIELD ASSEMBLY-TINTED -----	1	B
	0413419-202	WINDSHIELD ASSEMBLY-TINTED -----	1	C
- 2	S1389-5	PAD-FELT 44.0 IN LG BKI REF S1389-5-44.0 -----	1	
- 3	S1389-5	PAD-FELT 18.00 IN LG BKI REF S1389-5-18.0 -----	2	
- 4	S1389-5	PAD-FELT 78.0 IN LG BKI REF S1389-5-78.0 -----	1	
- 4A	0413437-1	BASE PLATE ASSY-COMPASS MOUNT -----	1	C
- 5	0411870	STRIP-WINDSHIELD SIDE -----	2	
- 6	0411479-50	STRIP-WINDSHIELD LOWER OUTER -----	1	
- 7	0411481	STRIP-WINDSHIELD ATTACHMENT -----	1	
- 8	AN525-632R8	SCREW -----	2	
	AN960-8L	WASHER -----	4	
	MS21044N08	NUT -----	2	
- 9	0413530-1	COVER -----	2	A
NOTE. □THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE VII. A---150 SERIAL 15073143 & ON F150 SERIAL F15000819 & ON A150 SERIAL A1500318 & ON FA150 SERIAL FA1500162 & ON B---150 SERIAL 15071129 THRU 15073658 F150 SERIAL F15000530 THRU F15000863 A150 SERIAL A1500001 THRU A1500342 FA150 SERIAL FA1500001 THRU FA1500166 C---150 SERIAL 15073659 & ON F150 SERIAL F15000864 & ON A150 SERIAL A1500343 & ON FA150 SERIAL FA1500167 & ON				



FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
32 -		NOSE GEAR INSTALLATION -----	NP	
- 1	SEE FIG 33	STRUT ASSEMBLY-NOSE -----	1	
		ATTACHING PARTS -----		
- 2	NAS561P12-48	ROLL PIN -----	1	
- 3	AN5-24A	BOLT -----	1	
- 4	MS21042L5	NUT -----	1	
	AN960-516	WASHER -----	2	
		-----*		
- 5	0543022-3	TUBE ASSEMBLY-NOSE GEAR STEERING LH -----	1	
	0543022-4	TUBE ASSEMBLY-NOSE GEAR STEERING RH -----	1	
		ATTACHING PARTS -----		
- 6	AN3-10A	BOLT -----	1	
	MS21044N3	NUT -----	1	
- 7	MS20364-624C	NUT -----	1	
	NAS43HT6-29	BUSHING -----	1	
		-----*		
- 8	MS20435M4-14	RIVET -----	1	
- 9	0543023	CLEVIS -----	1	
-10	AN316-6R	NUT -----	1	
-11	C109	BALL JOINT TOK -----	1	
-12	NAS397-16	CLAMP -----	2	
-13	S1823-3	BEARING-ROD END -----	2	
-14	AN316-6R	NUT -----	2	
-15	SEE FIG 34	WHEEL ASSEMBLY-NOSE -----	1	
	SEE FIG 34A	WHEEL ASSEMBLY-NOSE -----	1	B
		ATTACHING PARTS -----		
-16	0442142-1	TUBE-AXLE -----	1	
-17	0442143-1	FERRULE -----	2	D
	0442143-2	FERRULE -----	2	E
-18	AN5-74	BOLT -----	1	D
	AN7-74	BOLT -----	1	E
-19	AN960C516	WASHER -----	2	D
	AN960C716	WASHER -----	2	E
-20	AN310-5	NUT -----	1	D
	AN320-7	NUT -----	1	E
-21	MS24665-134	PIN-COTTER -----	1	D
	MS24665-285	PIN-COTTER -----	1	E
		-----*		
-22	0743625-14	SPEED FAIRING ASSEMBLY-NOSE GEAR -----	1	A
-22A	0543065-1	SPEED FAIRING ASSEMBLY-NOSE GEAR -----	1	C
	0543065-10	SPEED FAIRING ASSEMBLY-NOSE GEAR -----	1	J
	0543079-1	SPEED FAIRING ASSEMBLY-NOSE GEAR -----	1	L
		ATTACHING PARTS -----		
-23	0742410-27	STUD -----	1	D
	0742410-28	STUD -----	1	E
-24	AN960D516	WASHER -----	6	A
-24A	S1450-5-12-035	WASHER -----	2	C
	AN960-716L	WASHER -----	2	E
-24B	AN970-5	WASHER BETWEEN FORK & FAIRING -----	4	C
	AN970-7	WASHER BETWEEN FORK & FAIRING -----	2	E
-25	AN310-5	NUT -----	2	D
	AN320-7	NUT -----	2	E
-26	MS24665-136	COTTER PIN -----	2	D
	MS24665-285	COTTER PIN -----	2	E
-27	AN5-37A	BOLT -----	1	
-28	S1450-5-12-035	WASHER -----	AR	A
-28A	AN960-516L	WASHER -----	AR	B
-29	MS21042L5	NUT -----	1	
		-----*		
-30	0743625-9	DOUBLER -----	2	A
-31	0541207-2	DOUBLER -----	2	C
	0541207-4	DOUBLER -----	2	J
-31A	0541223-13	DOOR ASSY-WHEEL FAIRING -----	1	L
-31B	KM610-64	LATCH-WHEEL FAIRING DOOR -----	1	L

CONTINUED ON NEXT PAGE

Aligning Gear

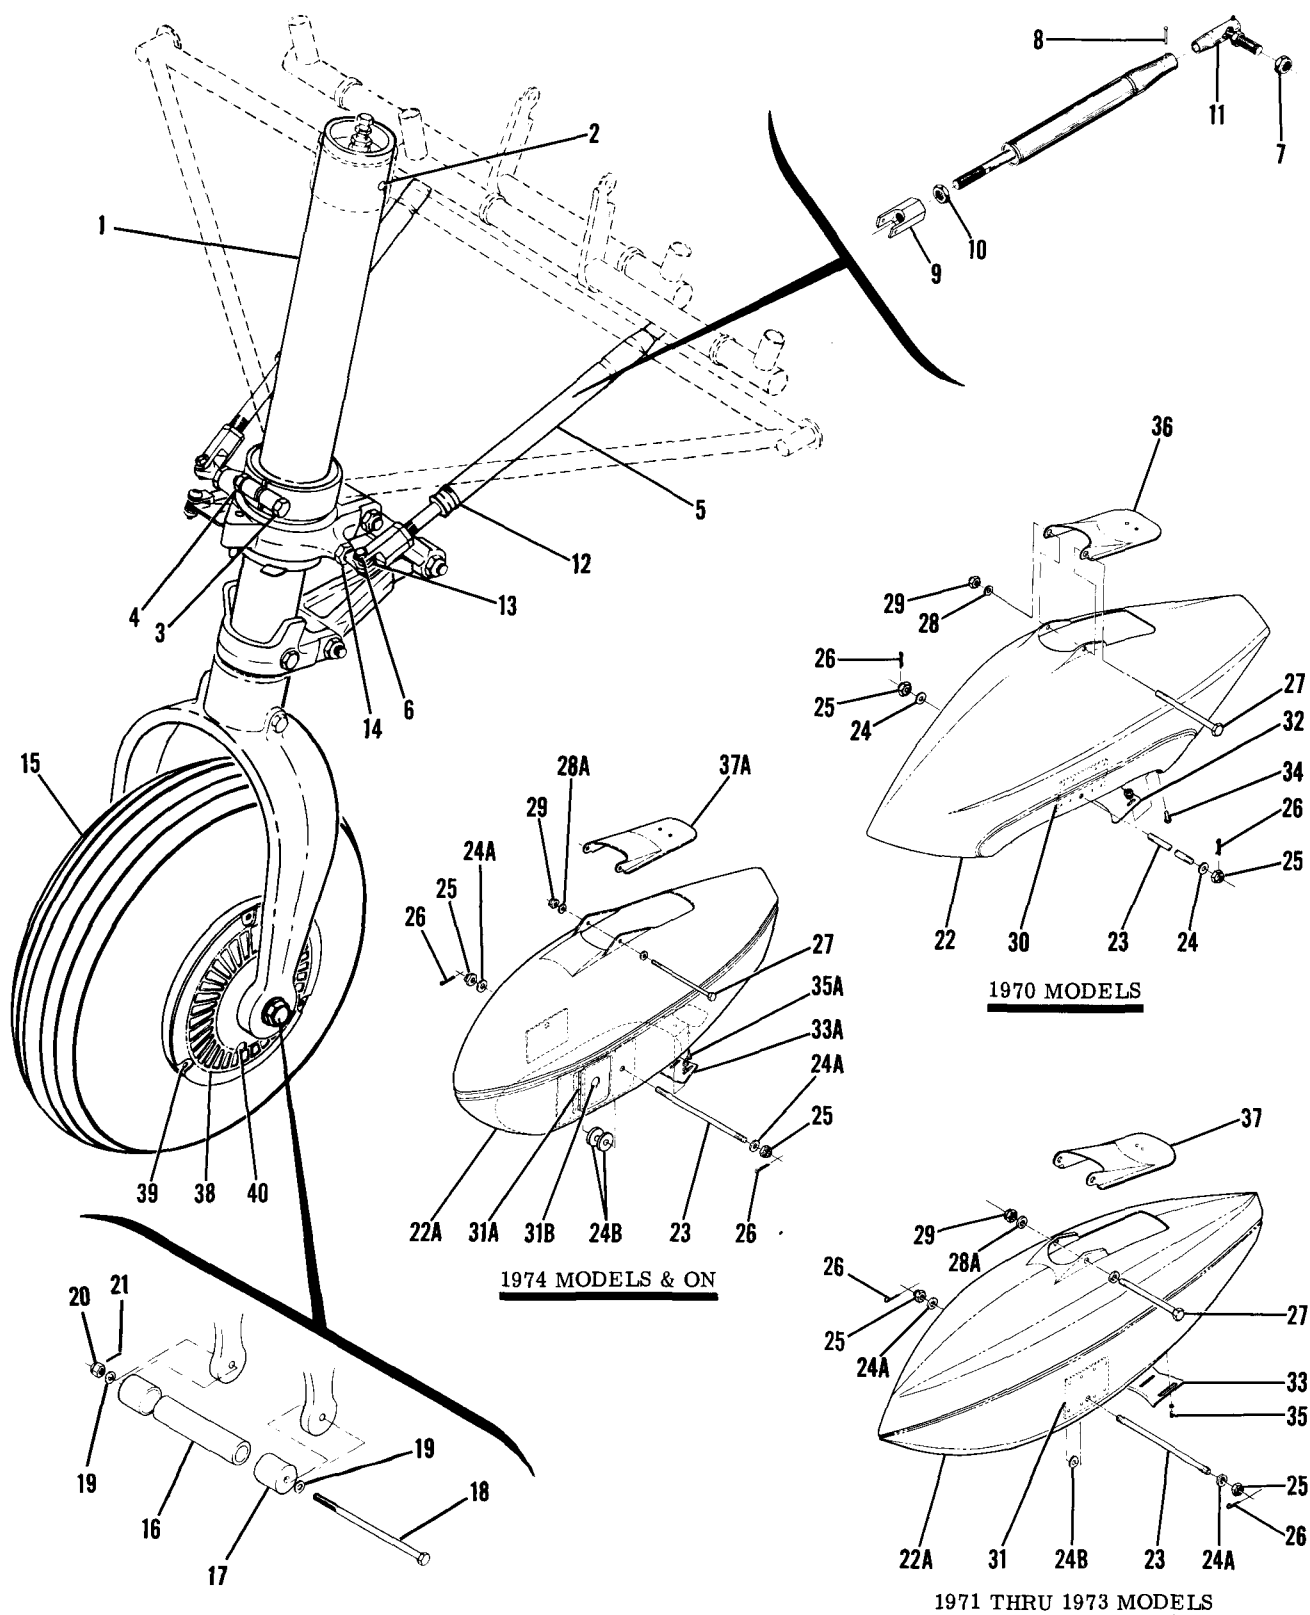


Figure 32. Nose Gear Installation