

BOEING 707 **PARTS CATALOG (MAINTENANCE)**

CHAPTER 24

ELECTRICAL POWER

TABLE OF CONTENTS

SECTION		FIGURE
24-01	AC GENERATOR	
	ADAPTER ASSY, FAN ENGINE CONSTANT SPEED DRIVE QUICK ATTACH DETACH KIT	2A
	BRACKET INSTL, CONSTANT SPEED DRIVE OIL FILTER.	11
	COOLER INSTL, CONSTANT SPEED DRIVE OIL.	5
	DRAIN INSTL, FAN ENGINE	7
	DRIVE INSTL, AC GENERATOR AND CONSTANT SPEED.	2
	FAIRING INSTL, ALTERNATOR COOLING AIR INTAKE NOZZLE	8
	FILTER INSTL, CONSTANT SPEED DRIVE OIL	11
	PLUMBING INSTL, FAN ENGINE CONSTANT SPEED DRIVE OIL SYSTEM.	9A
	PLUMBING INSTL, FAN ENGINE CONSTANT SPEED DRIVE PRESSURE AND RELIEF VALVE	9
	PLUMBING INSTL, FAN ENGINE CONSTANT SPEED DRIVE PRESSURE AND RELIEF VALVE PROVISION	9
	STANDPIPE INSTL, ENGINE N2 PAD.	16
	SUPPORT INSTL, FAN ENGINE 30 KVA GENERATOR.	12
	TRANSMISSION ASSY, 40 KVA AC GENERATOR CONSTANT SPEED DRIVE	20
	VALVE INSTL, CONSTANT SPEED DRIVE PRESSURE SENSING RELIEF	10
24-02	POWER PLANT AND WING	
	A/R POD PYLON ASSY.	38
	ANGLE INSTL, WING LEADING EDGE WIRE SUPPORT	17
	CLAMP INSTL, REAR SPAR AND WING TIP HARNESS	30
	DUMMY RECEPTACLE INSTL, F.S. STA. 924.35 L.H.	36
	DUMMY RECEPTACLE INSTL, F.S. STA. 924.35 R.H.	36
	ELECTRICAL INSTL, INBOARD STRUT	10
	ELECTRICAL INSTL, OUTBOARD STRUT.	7
	ELECTRICAL INSTL, SECTION 22 WING	12
	ELECTRICAL INSTL, SECTION 76 FAN NACELLE.	2B
	ELECTRICAL INSTL, SECTION 76 FAN NACELLE.	2C
	ELECTRICAL PASS THRU INSTL.	34
	FAIRLEAD INSTL, FRONT SPAR STATION 422.631 TO 666.14 ELECTRICAL	15
	ISOLATION VALVE HARNESS INSTL	33
	RACEWAY INSTL, FRONT SPAR STATION 131 TO 382 WING LEADING EDGE.	22
	RACEWAY INSTL, FRONT SPAR STATION 422 TO 666 WING LEADING EDGE ELECTRICAL	23A
	RACEWAY INSTL, JT3D NACELLE	26
	RACEWAY INSTL, OUTBOARD WING STRUT INTERSECTION ELECTRICAL.	24
	REAR SPAR AND WING TIP HARNESS INSTL, L.H..	31
	REAR SPAR AND WING TIP HARNESS INSTL, L.H..	32
	REAR SPAR AND WING TIP HARNESS INSTL, R.H..	32
	REPLENISH VALVE INSTL	39
	SEAL INSTL, ELECTRICAL	15
	SEAL INSTL, ELECTRICAL WIRING F.S.S. 16.75.	37
	SPECIAL SPARES ASSY, JT3D NACELLE CURRENT TRANSFORMER	27
	SUPPORT INSTL, INBOARD WING STRUT INTERSECTION WIRE AND FRONT SPAR STATION 382 TO 422 WIRE BUNDLE	25
	TRANSFORMER INSTL, JT3D NACELLE CURRENT	27
	WING ROOT PASS THRU, W.S. 387.00.	35
	WING WIRING ROUTE	12
	WING WIRING ROUTE, W.S. 387.00 TO W.S. 643.50	35
24-03	FUSELAGE ELECTRICAL AND ELECTRONIC SYSTEMS	
	ELECTRICAL INSTL, SECTION 51.	1B
	ELECTRICAL INSTL, SECTION 51.	1C
	ELECTRICAL INSTL, SECTION 53.	2
	ELECTRICAL INSTL, SECTION 56.	3
	ELECTRICAL INSTL, SECTION 58.	4
	ELECTRONIC INSTL, SECTION 53.	6D
	ELECTRONIC INSTL, SECTION 53.	6F
	ELECTRONIC INSTL, SECTIONS 56 AND 58	7
	ELECTRONICS INSTL, SECTION 51	5B
	ELECTRONICS INSTL, SECTION 51	5D
	SEAL INSTL, ELECTRICAL WIRING STR 22.	11A
24-04	MAIN AC POWER SHIELD	
	COVER ASSY, MAIN AC POWER SHIELD AFT.	12
	COVER ASSY, MAIN AC POWER SHIELD FORWARD.	14
	COVER ASSY, MAIN AC POWER SHIELD FORWARD.	17
	SHIELD ASSY, J6 MAIN AC POWER	9A
	SHIELD ASSY, J6 MAIN AC POWER	9C
	SHIELD ASSY, MAIN AC POWER.	18

BOEING 707 **PARTS CATALOG (MAINTENANCE)**

SECTION

FIGURE

SHIELD INSTL, J6 MAIN AC POWER.	1
SPARES ASSY, MAIN AC POWER SHIELD COVER	9A
24-05 TRANSFORMER SHIELDS AND PANELS	
BOX INSTL, STATION 350 J26 TRANSFORMER RECTIFIER.	3
PANEL INSTL, STATION 344 TO 360 TRANSFORMER	1
SHIELD INSTL, STATION 344 AND 360 TRANSFORMER	2
24-06 RELAY SHIELDS AND PANELS	
ELECTRICAL COMPONENTS INSTL	45N
PANEL INSTL, STATION 360 J2 RELAY	18E
PANEL INSTL, STATION 360 J2 RELAY	23A
RELAY INSTL, TACAN LIGHTING	39A
SHIELD ASSY, J27.	15D
SHIELD ASSY, STATION 336 J4 RELAY	12
SHIELD INSTL, STATION 243 J23 RELAY	42B
SHIELD INSTL, STATION 294.5 J-1 RELAY	39A
SHIELD INSTL, STATION 300 J1 RELAY.	36C
SHIELD INSTL, STATION 335 J27 ELECTRICAL EQUIPMENT.	11N
SHIELD INSTL, STATION 336 J4 RELAY.	11B
24-07 CIRCUIT BREAKER PANELS	
A/R CIRCUIT BREAKER PANEL ASSY.	161C
CIRCUIT BREAKER INSTL, 50 CYCLE POWER SUPPLY.	171
PANEL ASSY, P1 CIRCUIT BREAKER.	45C
PANEL ASSY, P1 CIRCUIT BREAKER.	46A
PANEL ASSY, P2 CIRCUIT BREAKER.	64C
PANEL ASSY, P2 CIRCUIT BREAKER.	65A
PANEL ASSY, P3 CIRCUIT BREAKER.	82B
PANEL ASSY, P3 CIRCUIT BREAKER.	84A
PANEL ASSY, P4 CIRCUIT BREAKER AFT.	102B
PANEL ASSY, P4 CIRCUIT BREAKER AFT.	103A
PANEL ASSY, P4 CIRCUIT BREAKER FORWARD.	121A
PANEL ASSY, P4 CIRCUIT BREAKER FORWARD.	138B
PANEL ASSY, P5 RADIO AND T-R CIRCUIT BREAKER.	23Y
PANEL ASSY, P6 CIRCUIT BREAKER.	140A
PANEL ASSY, P6 CIRCUIT BREAKER.	140Z
PANEL ASSY, P7 CIRCUIT BREAKER.	159M
PANEL ASSY, P7 CIRCUIT BREAKER.	159Z
PANEL ASSY, RADIO AND T-R CIRCUIT BREAKER	24A
PANEL INSTL, CIRCUIT BREAKERS	25
PANEL INSTL, RADIO AND T-R CIRCUIT BREAKER.	1
SUPPOT INSTL, CIRCUIT BREAKER PANELS	160
24-08 ELECTRICAL RACK	
EQUIPMENT INSTL, STATION 335 J5 ELECTRICAL RACK	1
EQUIPMENT INSTL, STATION 335 J5 ELECTRICAL.	1B
RACK INSTL, STATION 335 J5 ELECTRICAL EQUIPMENT	2
RACK INSTL, STATION 335 J5.	2B
RACK INSTL, STATION 352 J25 CONTROL PANEL	4
24-09 ELECTRONIC RACK	
BOLT ASSY, ELECTRONIC SHELF UNIT HOLD DOWN.	106
EXTRACTOR INSTL, 1/2 ATR CASE	105
EXTRACTOR INSTL, 3/4 ATR CASE SEE NUMERICAL INDEX FOR APPLICABLE NHA	105
SHELF ASSY, ELECTRONIC RACK AUTOPILOT EQUIPMENT	17A
SHELF ASSY, ELECTRONIC RACK COMMUNICATION EQUIPMENT	29F
SHELF ASSY, ELECTRONIC RACK COMMUNICATION EQUIPMENT	29G
SHELF ASSY, ELECTRONIC RACK DOPPLER EQUIPMENT	37
SHELF ASSY, ELECTRONIC RACK DOPPLER EQUIPMENT	37D
SHELF ASSY, ELECTRONIC RACK FLIGHT INSTRUMENT EQUIPMENT	73C
SHELF ASSY, SHELF NO. 1 LH ELECTRONIC RACK HF EQUIPMENT	86
SHELF ASSY, SHELF NO. 1 LH SIDE ELECTRONIC RACK HF EQUIPMENT.	7
SHELF ASSY, SHELF NO. 2 LH SIDE ELECTRONIC RACK HF EQUIPMENT.	14A
SHELF ASSY, SHELF NO. 2 LH SIDE ELECTRONIC RACK HF EQUIPMENT.	15G
SHELF ASSY, SHELF NO. 2 RH SIDE ELECTRONIC RACK NAVIGATION EQUIPMENT.	51G
SHELF ASSY, SHELF NO. 2 RH SIDE NAVIGATION EQUIPMENT.	30
SHELF ASSY, SHELF NO. 3 RH NAVIGATION EQUIPMENT	62N
SHELF ASSY, SHELF NO. 3 RH SIDE ELECTRONIC RACK NAVIGATION EQUIPMENT	62B
SHELF ASSY, SHELF NO. 3 RH SIDE ELECTRONIC RACK NAVIGATION EQUIPMENT.	62B
SHELF ASSY, SHELF NO. 4 RH ELECTRONIC RACK.	63B
SHELF ASSY, SHELF NO. 4 RH ELECTRONIC RACK.	63C
SHELF INSTL, ELECTRONIC RAC	18

CHAPTER TABLE OF CONTENTS

24-0
PAGE 2

RAF
NOV 21/01

BOEING 707 **PARTS CATALOG (MAINTENANCE)**

SECTION

FIGURE

SHELF INSTL, ELECTRONIC RACK	1D
SHELF INSTL, LH ELECTRONIC RACK	1B
SHELF INSTL, RH ELECTRONIC RACK	1B
STANCHION INSTL, ELECTRONIC RACK SUPPORT	108
TRAY ASSY, ELECTRONIC RACK 1 ATR DPE LONG ON LONG HF EQUIPMENT MOUNTING	98A
TRAY ASSY, ELECTRONIC RACK 1-1/2 ATR LONG COLLINS HF EQUIPMENT MOUNTING	103
TRAY ASSY, ELECTRONIC RACK 1-1/2 ATR 3DPD LONG ON LONG EQUIPMENT MOUNTING	102
TRAY ASSY, ELECTRONIC RACK 1/2 ATR DPD LONG ON LONG EQUIPMENT MOUNTING	87
TRAY ASSY, ELECTRONIC RACK 1/2 ATR DPX2 SHORT ON LONG EQUIPMENT MOUNTING	89
TRAY ASSY, ELECTRONIC RACK 1/2 ATR DPX2 SHORT ON SHORT EQUIPMENT MOUNTING	86
TRAY ASSY, ELECTRONIC RACK 1/2 ATR SHORT ON LONG HF EQUIPMENT MOUNTING	89
TRAY ASSY, ELECTRONIC RACK 1/2 ATR SHORT ON LONG SPECIAL DOPPLER EQUIPMENT MOUNTING	90
TRAY ASSY, ELECTRONIC RACK 1/2 ATR 3DPD LONG ON LONG EQUIPMENT MOUNTING	87
TRAY ASSY, ELECTRONIC RACK 1/4 ATR DPXB SHORT ON LONG EQUIPMENT MOUNTING	76
TRAY ASSY, ELECTRONIC RACK 1/4 ATR DPXB SHORT ON SHORT EQUIPMENT MOUNTING	76
TRAY ASSY, ELECTRONIC RACK 1/4 ATR DPX2 SHORT ON SHORT EQUIPMENT MOUNTING	76
TRAY ASSY, ELECTRONIC RACK 1/4 ATR SHORT ON LONG EQUIPMENT MOUNTING	76
TRAY ASSY, ELECTRONIC RACK 1/4 ATR SHORT ON SHORT EQUIPMENT MOUNTING	76
TRAY ASSY, ELECTRONIC RACK 3/4 ATR DPA LONG ON LONG EQUIPMENT MOUNTING	96
TRAY ASSY, ELECTRONIC RACK 3/4 ATR DPX LONG ON LONG EQUIPMENT MOUNTING	96
TRAY ASSY, ELECTRONIC RACK 3/8 ARINC DPX2 SHORT ON LONG EQUIPMENT MOUNTING	82
TRAY ASSY, ELECTRONIC RACK 3/8 ATR DPX SHORT ON SHORT EQUIPMENT MOUNTING	82
TRAY ASSY, ELECTRONIC RACK 3/8 ATR DPXB SHORT ON SHORT EQUIPMENT MOUNTING	82
TRAY ASSY, ELECTRONIC RACK 3/8 ATR LONG ON LONG EQUIPMENT MOUNTING	83
TRAY ASSY, ELECTRONIC RACK 3/8 ATR SHORT ON LONG EQUIPMENT MOUNTING	82
TRAY ASSY, 1/4 ATR HF INTERLOCK RELAYS	74B
TRAY ASSY, 3/8 ATR A02 SHORT ON SHORT EQUIPMENT MOUNTING	82
24-10 CONTROL CABIN ELECTRICAL	
INTERPHONE INSTL, FLIGHT ENGINEER	36
PANEL INSTL, FLIGHT ENGINEERS AUXILIARY	34
PANEL INSTL, FLIGHT ENGINEERS UPPER	20
PANEL INSTL, FLIGHT ENGINEERS UPPER	26
PANEL INSTL, PILOTS PANEL PLUG DISCONNECT	37
24-11 GROUND POWER EQUIPMENT	
COVER INSTL, EXTERNAL POWER LEADS PROTECTIVE	6
DOOR INSTL, EXTERNAL POWER RECEPTACLE	2
RECEPTACLE INSTL, EXTERNAL POWER	11
RELAY BOX INSTL, APU-EXT BATTERY CHARGER FIG TITLE -SAME AS ABOVE 99 CARD	35
SHIELD INSTL, J9 GROUND POWER	18
SHIELD INSTL, J9 GROUND POWER	29
SHIELD INSTL, J9 GROUND POWER FIG TITLE ADDED FOR ILLUS TO WORK LHA MOD 07-24-73	35
TRANSFORMER-RECTIFIER INSTL, GROUND POWER	1
24-12 BATTERY EQUIPMENT	
ARM ASSY, BATTERY SUPPORT	2
BATTERY INSTL, NOSE WHEEL WELL ELECTRIC STORAGE	1
SHIELD ASSY, DC JUNCTION	8
SHIELD INSTL, DC JUNCTION	6
SHUNT INSTL, ELECTRIC STORAGE BATTERY AMMETER	3
WIRE INSTL, NOSE WHEEL WELL BATTERY	1
24-13 FUSELAGE MISCELLANEOUS	
A/R JUNCTION BOX ASSY	53
A/R JUNCTION BOX ASSY, EQUIPMENT ARRANGEMENT	52C
A/R JUNCTION BOX INSTL	50A
AUTOTRANSFORMER INSTL	373
BOX INSTL, COMPARTMENT E LAVATORY SERVICES ELECTRICAL	108
BOX INSTL, FLIGHT INSTRUMENT RJ15 JUNCTION	49
BRACKET INSTL, SECTION 51 WIRING	26
BRACKET INSTL, SECTION 56 WIRING	28
CAPACITOR INSTL, STATION 400	128
CHANNEL INSTL, FORWARD CARGO COMPARTMENT WIRE BUNDLE	29A
CLAMP INSTL, SECTION 51 WIRE	17B
CLAMP INSTL, SECTION 51 WIRE	17C
CLAMP INSTL, SECTION 51 WIRE	26E
CLAMP INSTL, SECTION 51 WIRE	26F
CLAMP INSTL, SECTION 53 AND 56 OVERHEAD WIRING	26P
CLAMP INSTL, STATION 178 WIRE	26G
CLAMP INSTL, STATION 277 P11 WIRE BUNDLE	26J
CLAMP INSTL, STATION 328 TO 360 ELECTRONIC WIRE	26C
CLAMP INSTL, STATION 344 TO 360 RACEWAY	26H
CLAMP INSTL, VERTICAL GYROS WIRE	26D

BOEING 707 **PARTS CATALOG (MAINTENANCE)**

SECTION

FIGURE

COMPONENTS INSTL, RJ12 ELECTRONIC TERMINAL.	82C
COMPONENTS INSTL, STATION 400 RJ13 FLIGHT INSTRUMENT.	86F
COMPONENTS INSTL, STATION 400 RJ13 FLIGHT INSTRUMENT.	92C
CONDUIT INSTL, STATION 312 ELECTRONIC WIRE.	30
COVER INSTL, CONTROL CABIN FLOOR WIRING RACEWAY	18J
COVER INSTL, STATION 294.5 TO 312 RJ20 SHIELD.	61A
DISCONNECT INSTL, RJ13 FLIGHT INSTRUMENT PANEL.	33A
DISCONNECT INSTL, RJ13 FLIGHT INSTRUMENT PANEL.	33C
DISCONNECT INSTL, STATION 400 RJ11 PANEL.	33B
DOOR INSTL, STATION 400	103
DOOR INSTL, STATION 400 ELECTRONIC COMPARTMENT.	102
DUMMY RECEPTACLE INSTL, L.H. A/R PUMP S.O.V. AFT.	374
DUMMY RECEPTACLE INSTL, L.H. A/R PUMP S.O.V. FWD.	375
DUMMY RECEPTACLE INSTL, R.H. A/R PUMP S.O.V. AFT.	374
DUMMY RECEPTACLE INSTL, R.H. A/R PUMP S.O.V. FWD.	376
ELECTRICAL WIRE INSTL, INFRA-RED LIGHTS JUNCTION BOX.	371
GENERAL LIGHTING.	370
GENERAL LIGHTING.	372
GUARD INSTL, FORWARD CARGO COMPARTMENT WIRE	29A
GUARD INSTL, PILOT AND COPILOT MAIN INSTRUMENT PANEL WIRE	29
LIGHTING INSTL, STATION 178 RESISTORS AND INTEGRAL LIGHTING TRANSFORMER LH.	122
LIGHTING INSTL, STATION 178 4 WATT BALLAST AND LIGHTING RESISTORS RH.	123
OUTLET INSTL, RADIO TEST EQUIPMENT POWER.	45D
PANEL INSTL, RADIO RACK TERMINAL.	14
PANEL INSTL, RADIO RACK TERMINAL.	14B
PLATE INSTL, NAVIGATORS STATION DISCONNECT AND TERMINAL MOUNTING.	56
RACEWAY INSTL, CARGO COMPARTMENT ELECTRONIC WIRE.	24A
RACEWAY INSTL, FLIGHT ENGINEERS TABLE P11 PANELS WIRE	18K
RACEWAY INSTL, FLIGHT INSTRUMENT WIRE	49
RACEWAY INSTL, PILOTS CONTROL STAND	18J
RACEWAY INSTL, PILOTS HEEL REST	18G
RACEWAY INSTL, SECTION 51	18
RACEWAY INSTL, SECTION 51 ELECTRICAL WIRE	17
RACEWAY INSTL, STATION 178 TO 270 ELECTRONIC WIRE	20B
RACEWAY INSTL, STATION 178 TO 270 ELECTRONIC WIRE	20A
RACEWAY INSTL, STATION 296 MAIN CROSS FEED.	18D
RACEWAY INSTL, STATION 360 TO 380 ELECTRONIC WIRING	21
RACEWAY INSTL, STATION 360 TO 380 ELECTRONIC WIRING	22
RECEPTACLE AND JACK INSTL, NO. 1, 2 AND 3 ELECTRICAL.	42A
RECEPTACLE INSTL, NO. 4 THRU 13 CARGO PALLET POWER	42
RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD	83F
RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD	185
RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD	186
RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD	187
RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD	188
RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD	323A
RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD	324A
RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD	325A
RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD	326A
SEAL INSTL, SECTION 53 ELECTRICAL	38
SEAL INSTL, STATION 600K LOWER FRAME WIRING DISCONNECT.	36
SEAL INSTL, STATION 820 WIRING	35
SHIELD INSTL, RJ12 ELECTRONIC TERMINAL.	81Q
SHIELD INSTL, STATION 294 J28 ELECTRICAL EQUIPMENT LH	61D
SHIELD INSTL, STATION 294.5 TO 312 RJ20	61A
SHIELD INSTL, STATION 400 ELECTRONIC WIRE TERMINAL.	73B
SHIELD INSTL, STATION 400 FLIGHT INSTRUMENT AUXILIARY TERMINALS	143
SHIELD INSTL, STATION 400 RJ11 ELECTRONIC WIRE.	136
SHIELD INSTL, STATION 400 RJ14 ELECTRONIC WIRE.	142
STRIP INSTL, AFT GALLEY AC SERVICE-OUTLET TERMINAL.	7
STRIP INSTL, FORWARD GALLEY AC SERVICE-OUTLET TERMINAL.	7
STRIP INSTL, NAVIGATORS STATION TERMINAL.	2
STRIP INSTL, SECTION 51 T-207 TERMINAL.	1
SUPPORT INSTL, INS CONDUIT.	52D
SUPPORT INSTL, J1 AND J5 WIRING	116
SUPPORT INSTL, J1 AND J5 WIRING	116A
SUPPORT INSTL, J25, J26 AND J27 ELECTRICAL EQUIPMENT.	117
SUPPORT INSTL, KEEL BEAM ELECTRONIC WIRING.	51A
SUPPORT INSTL, MAIN INSTRUMENT PANEL WIRING CLAMP	115D
SUPPORT INSTL, MAIN INSTRUMENT PANELS WIRING DISCONNECTS.	115
SUPPORT INSTL, STATION 400 RJ13 FLIGHT INSTRUMENT ELECTRONIC COMPONENT.	139
SUPPORT INSTL, STATION 820 WIRING	35
TERMINAL AND SUPPORT INSTL, RJ12.	137
TERMINAL AND SUPPORT INSTL, STATION 400 RJ12.	145
TERMINAL AND SUPPORT INSTL, STATION 400 RJ13.	146
TERMINAL BLOCK INSTL, FLIGHT ENGINEER TABLE	11
TERMINAL INSTL, STATION 400 ELECTRONIC WIRES.	100
TERMINAL INSTL, STATION 400 ELECTRONICS WIRES	100

 BOEING
707
PARTS CATALOG (MAINTENANCE)

SECTION	FIGURE
TRANSFORMER INSTL, STATION 367. 75.	.120
TRAY INSTL, STATION 330 RJ29 SWITCHING RELAYS	.1306

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 01
AC GENERATOR

RAF
NOV 21/90

24-01
PAGE 1

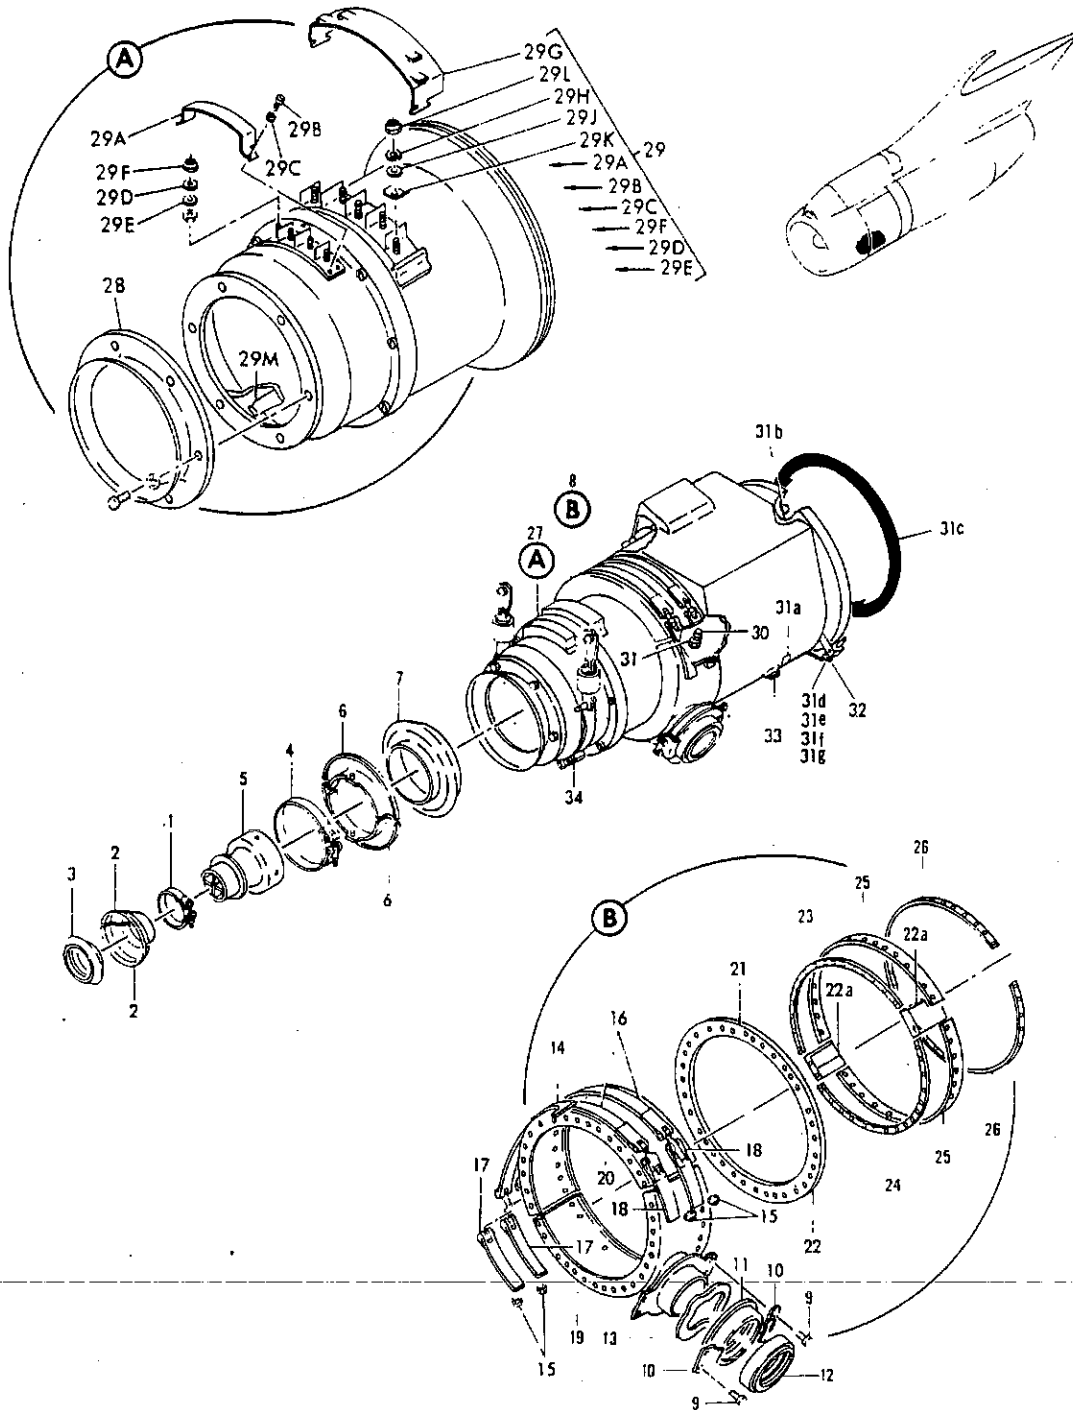


FIGURE 2. DRIVE INSTL, AC GENERATOR AND CONSTANT SPEED



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R	2	65-11655-10	DRIVE INSTL, AC GENERATOR AND CONSTANT SPEED (SEE 71-1, FIG. 5B, ITEM 28, 71-1, FIG. 5G, ITEM 27 AND 71-1, FIG. 5H, ITEM 22)	0150 RF
		65-11655-16	DRIVE INSTL, AC GENERATOR AND CONSTANT SPEED (SEE 71-1, FIG. 5G, ITEM 27)	5199 RF
	1	BACCIOP1-62-262SH	CLAMP	1
	2	66-10793	RETAINER, ALTERNATOR INLET SEAL	2
	3	66-10747	SEAL, ALTERNATOR INLET VENTURI TO DIAPHRAGM	1
	4	BACCIOP3-62-462SH	CLAMP	1
	5	69-10978-10	VENTURI ASSY, ALTERNATOR INLET SECTION (OPTIONAL, 69-10978-11 (ALTERED FROM 69-10978-6))	1
	5	69-10978-11	VENTURI ASSY, ALTERNATOR INLET SECTION (ALTERED FROM 69-10978-6)	1
	6	66-10746	(OPTIONAL TO 69-10978-10)	
	7	69-10985	RETAINER ASSY, ALTERNATOR INLET SEAL	2
	8	65-11967-1	SEAL ASSY, ALTERNATOR INLET DIFFUSER CAP TO VENTURI	1
	9	NAS1103-1W	COLLECTOR ASSY, ALTERNATOR COOLING AIR	1
	10	66-10690	BOLT	4
	11	66-10692	RETAINER, ALTERNATOR AND FUEL HEATER EXHAUST SEAL	2
			HOLDER ASSY, ALTERNATOR AND FUEL HEATER EXHAUST	1
	12	66-10697	RETAINER SEAL	
	13	69-10934	SEAL, ALTERNATOR EXHAUST DUCT	1
	14	65-11967-7	SPRING, EXHAUST AIR DUCT SEAL WAVE	1
	15	NAS679A3W	STOP, ALTERNATOR COOLING AIR COLLECTOR	1
	16	2076-90-1480-0	NUT	4
	17	T3P90-400	STRAP, (V94581)	2
	18	T3P90-290	STRAP, (V94581)	2
	19	65-11967-17	STRAP, (V94581)	2
	20	65-11967-16	COLLECTOR, ALTERNATOR COOLING AIR UPPER HALF	1
	21	65-11967-13	COLLECTOR, ALTERNATOR COOLING AIR LOWER HALF	1
			SEAL, ALTERNATOR COOLING AIR COLLECTOR FORWARD	1
	22	65-11967-14	UPPER (SPEC NO. MIL-R-25988)	
			SEAL, ALTERNATOR COOLING AIR COLLECTOR FORWARD	1
	22A	65-11967-15	LOWER (SPEC NO. MIL-R25988)	
			SEAL, ALTERNATOR COOLING AIR COLLECTOR SPLICE	2
	23	65-11967-9	(SPEC NO. MIL-R-25988)	
	24	65-11967-10	RETAINER, ALTERNATOR COOLING AIR COLLECTOR	1
	25	65-11967-12	RETAINER, ALTERNATOR COOLING AIR COLLECTOR	1
			SEAL, ALTERNATOR COOLING AIR COLLECTOR AFT (SPEC. NO. MIL-R-25988)	2
	26	65-11967-11	RETAINER, ALTERNATOR COOLING AIR COLLECTOR AFT	2
R	27	69-10980-5	ALTERNATOR BUILDUP ASSY	0150 1
R	27	69-10980-9	ALTERNATOR BUILDUP ASSY	5199 1
		BACN10B-L6L	ATTACHING PARTS	
			NUT	12
	28	69-12136	CAP ASSY, ALTERNATOR INLET DIFFUSER	1
		NAS1303-ZHW	ATTACHING PARTS	
		AN960D10	BOLT	6
			WASHER	6
R	29	10-3324-18	GENERATOR, 30 KVA AC	0150 1
R	29	10-61224-1	GENERATOR, 30 KVA AC	5199 1
	29M	69-24745-1	RETAINER, FAN ENGINE GENERATOR SUPPORT	1
	31B	66-14286-4	PLUG ASSY, FAN ENGINE CONSTANT SPEED DRIVE	1
	32	10-60295-15	ADAPTER, 40 KVA AC GENERATOR CONSTANT SPEED DRIVE	RF
			QUICK ATTACH DETACH KIT (SAME AS 689460A (V99167))	
	32	689460A	ADAPTER ASSY, FAN ENGINE CONSTANT SPEED DRIVE QUICK ATTACH DETACH KIT (V99167) (BAC SPEC NO. 10-60295-15) (SEE FIG. 2A)	1
R	33	10-61066-1	TRANSMISSION ASSY, (SAME AS 700842 AND 700842A. (V99167))	5199 1
R	33	700842A	TRANSMISSION ASSY, (V99167) (SAME AS BAC SPEC NO. 10-61066-1) (SEE FIG. 20)	RF
	33	700842	TRANSMISSION ASSY, (V99167) (SAME AS BAC SPEC NO. 10-61066-1) (SEE FIG. 20)	RF
	34	65-26710-4	SUPPORT INSTL, FAN ENGINE 30 KVA GENERATOR (SEE FIG. 12)	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

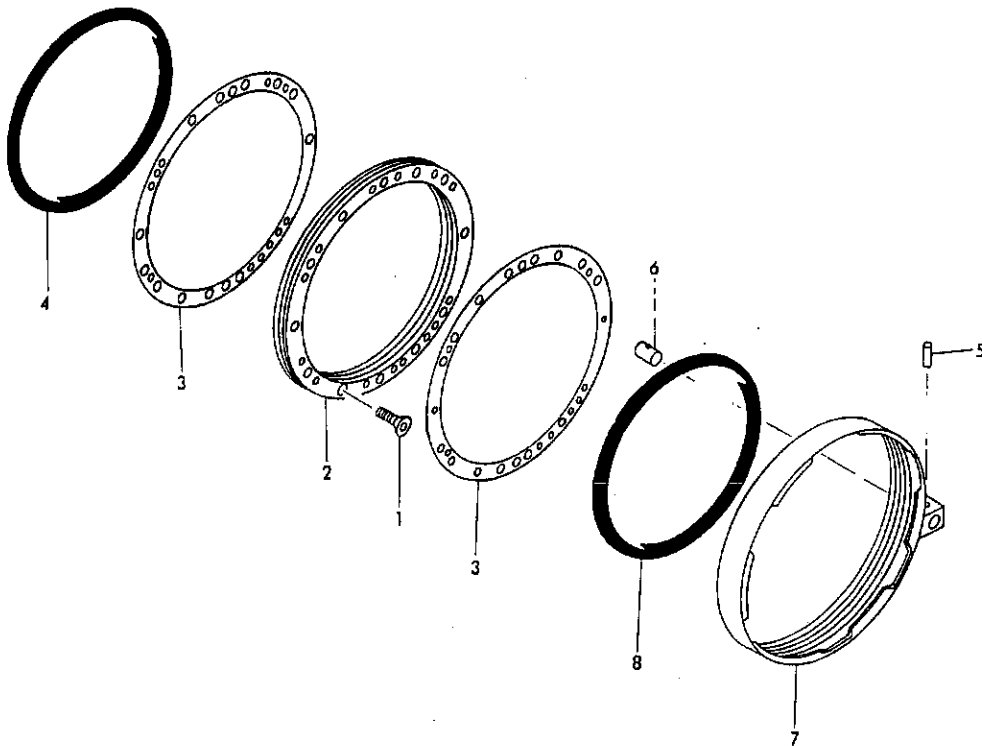
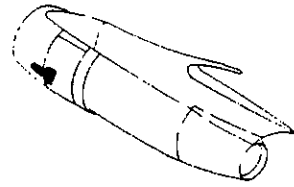


FIGURE 2A. ADAPTER ASSY, FAN ENGINE CONSTANT SPEED DRIVE QUICK ATTACH DETACH KIT

DETAILED PARTS LIST
24-01-2A
PAGE 0

24-01-2A

NOV 21/90

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2A	689460A	ADAPTER ASSY, FAN ENGINE CONSTANT SPEED DRIVE QUICK . . ATTACH DETACH KIT (V99167) (SAME AS BAC SPEC DWG 10-60295-15) (SEE FIG. 2, ITEM 32)		RF
M 1	0642C624-20	. SCREW, FLAT SOCKET HD CAP		12
M 2	69-6692	. PLATE, ADAPTER (V99167)		1
M 3	693206	. GASKET, (V99167) (EA1924A061K).		2
M	693608	. RING ASSY, Q. A. D. (V99167).		1
M 4	M83248-1-176	. PACKING, (V99167)		1
M 5	1802-24-2	. . PIN, HEADLESS STRAIGHT (V99167) (OPTIONAL MS16562-198)		1
M 5	MS16562-198	. . PIN, ... (OPTIONAL 1802-24-2 (V99167))		1
M 6	686751	. . NUT, SELF-ADJUSTING (V99167).		1
M 7	693601	. . RING, Q. A. D. (V99167)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/90

24-01-2A

DETAILED PARTS LIST
24-01-2A
PAGE 1

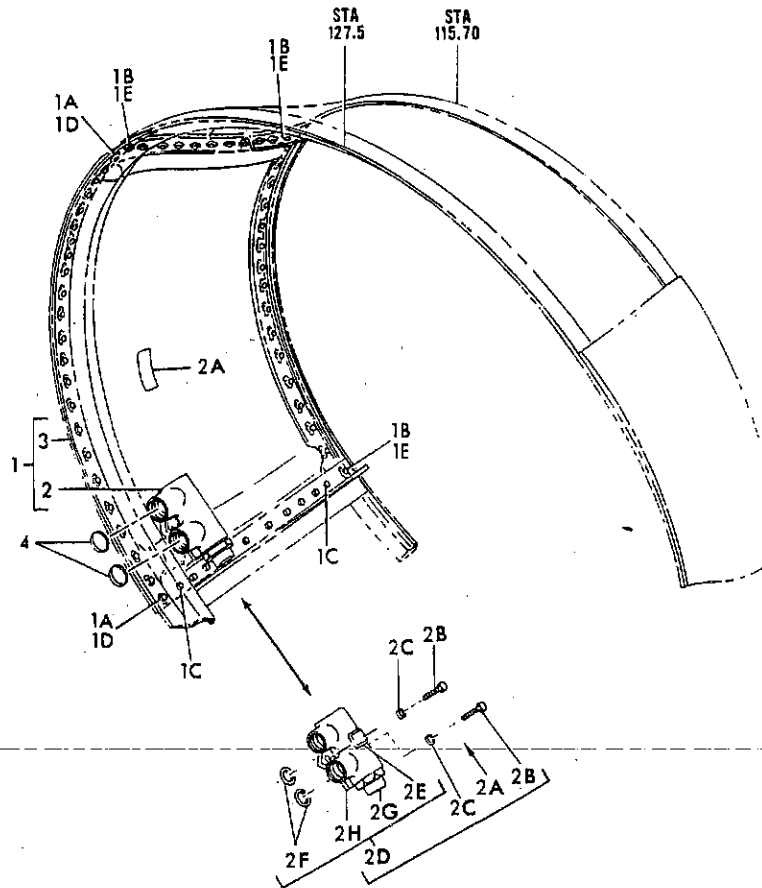
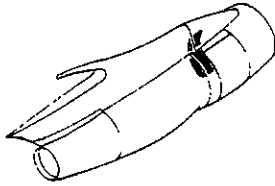


FIGURE 5. COOLER INSTL. CONSTANT SPEED DRIVE OIL

MISSING ITEM NUMBERS ARE NOT APPLICABLE

DETAILED PARTS LIST
24-01-5
PAGE 1


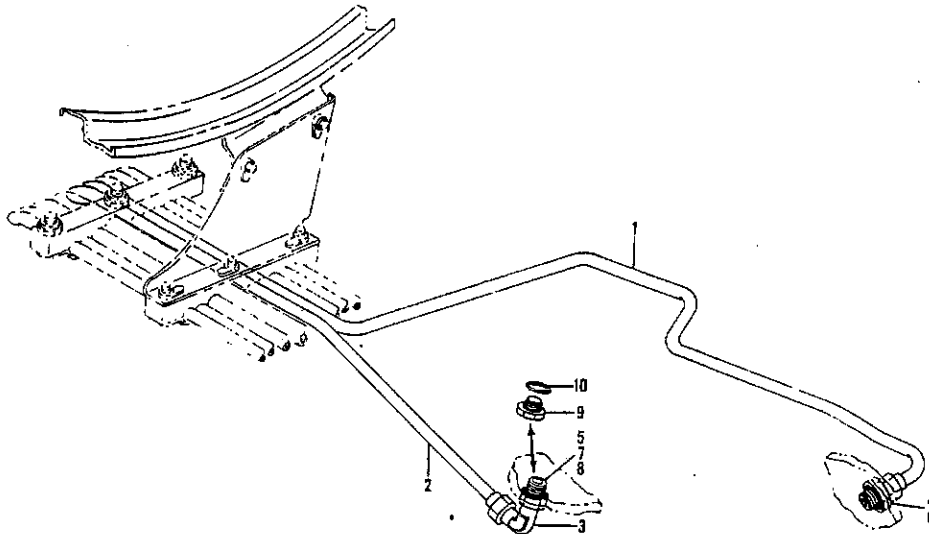


FIGURE 7. DRAIN INSTL, FAN ENGINE (ELECTRICAL POWER ONLY)

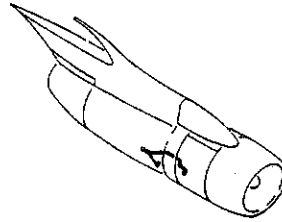

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1	2	3	4	5	6	7	NOMENCLATURE	EFF	UNITS
										FROM TO	PER ASSY
R R R R R R R R R R	7	65-11660-89	DRAIN INSTL, FAN ENGINE (ELECTRICAL POWER ONLY) (SEE. . . 71-1, FIG. 5E, ITEM 53; 71-1, FIG. 5G, ITEM 48 AND 71-1, FIG. 5H, ITEM 41)							0150	RF
		65-11660-99	DRAIN INSTL, FAN ENGINE (ELECTRICAL POWER ONLY) (SEE. . . 71-1, FIG. 5G, ITEM 48 AND 71-1, FIG. 5H, ITEM 41)							5199	RF
	1	65-11660-70	. TUBE ASSY, DRAIN 3/8 .028 AISI304 (OPTIONALS AISI321, AISI347)							0150 5299	1
	1	65-11660-70	. TUBE ASSY, DRAIN 3/8 .028 AISI304 (OPTIONALS AISI321, AISI347) (DELETED BY SB 1790)							5151	1
		MS21921-6	. . NUT								1
		BACS13AP6	. . SLEEVE, (OPTIONAL MS21922-6).								1
	4	MS21902-6	. UNION							0150 5299	1
	4	MS21902-6	. UNION, (DELETED BY SB 1790)							5151	1
	6	BACG10U6	. GASKET.							0150 5299	1
	6	BACG10U6	. GASKET, (DELETED BY SB 1790).							5151	1
R R R R R	9	AN814-4CL	. PLUG, (ADDED BY SB 1790).							5151	1
	10	BACG10U4	. GASKET, (ADDED BY SB 1790).							5151	1
			. FOR REFERENCE TO OTHER DRAIN DETAILS, SEE NHA								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											


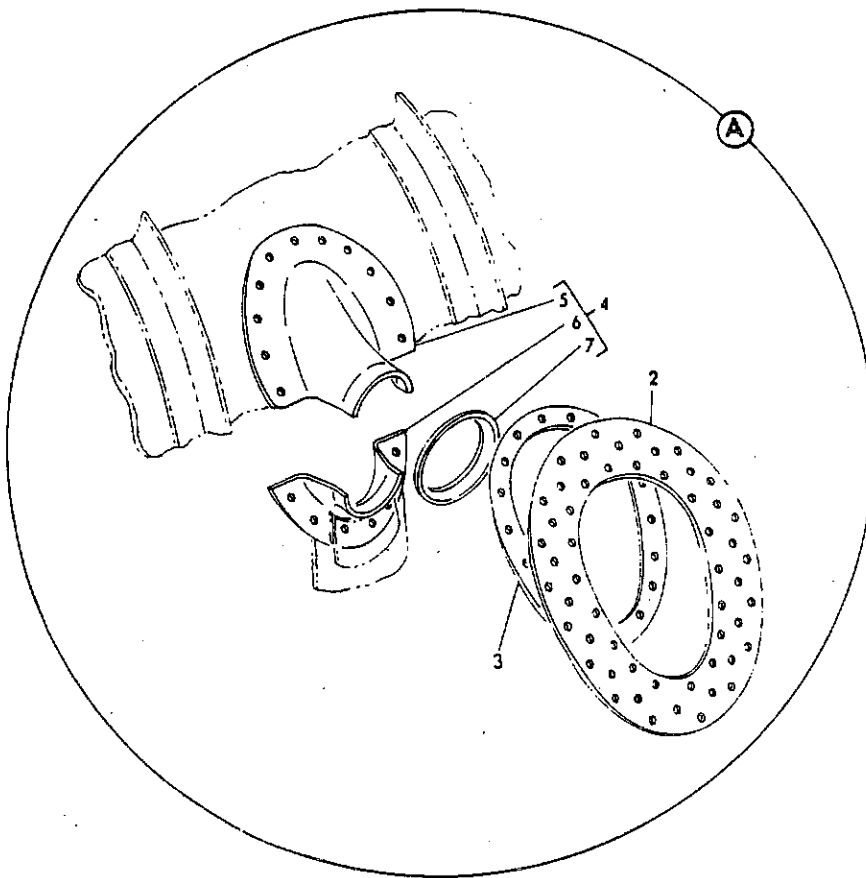


FIGURE 8. FAIRING INSTL, ALTERNATOR COOLING AIR INTAKE NOZZLE

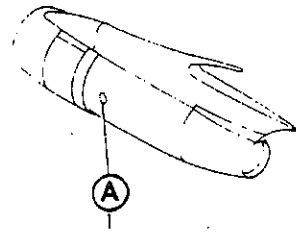

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE						EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6		
8	69-11133	FAIRING INSTL, ALTERNATOR COOLING AIR INTAKE NOZZLE . . (SEE 78-4, FIG. 6, ITEM 49)							RF
1	69-11133-1	. FAIRING ASSY, ALTERNATOR COOLING AIR INTAKE NOZZLE. . ATTACHING PARTS							1
	BACB30AM6-3	. BOLT.							52
	BACB30AM6	. BOLT.							2
	BACC30A6	. COLLAR.							54
2	69-11133-7	. . DOUBLER, ALTERNATOR COOLING AIR INTAKE NOZZLE . . . FAIRING							1
3	69-11133-5	. . SPACER, ALTERNATOR COOLING AIR INTAKE NOZZLE. . . FAIRING							1
4	69-11133-2	. . FAIRING ASSY, ALTERNATOR COOLING AIR INTAKE NOZZLE WELDED							1
	BACB30AM6-3	. . BOLT.							24
	BACC30A6	. . COLLAR.							24
5	69-11133-3	. . . FAIRING, ALTERNATOR COOLING AIR INTAKE NOZZLE . . UPPER							1
6	69-11133-4	. . . FAIRING, ALTERNATOR COOLING AIR INTAKE NOZZLE . . LOWER							1
7	69-11133-6	. . . RETAINER, ALTERNATOR COOLING AIR INTAKE NOZZLE. . FAIRING SEAL							1
MISSING ITEM NUMBERS ARE NOT APPLICABLE									

RAF
NOV 21/90

24-01-0

DETAILED PARTS LIST
24-01-0
PAGE 1

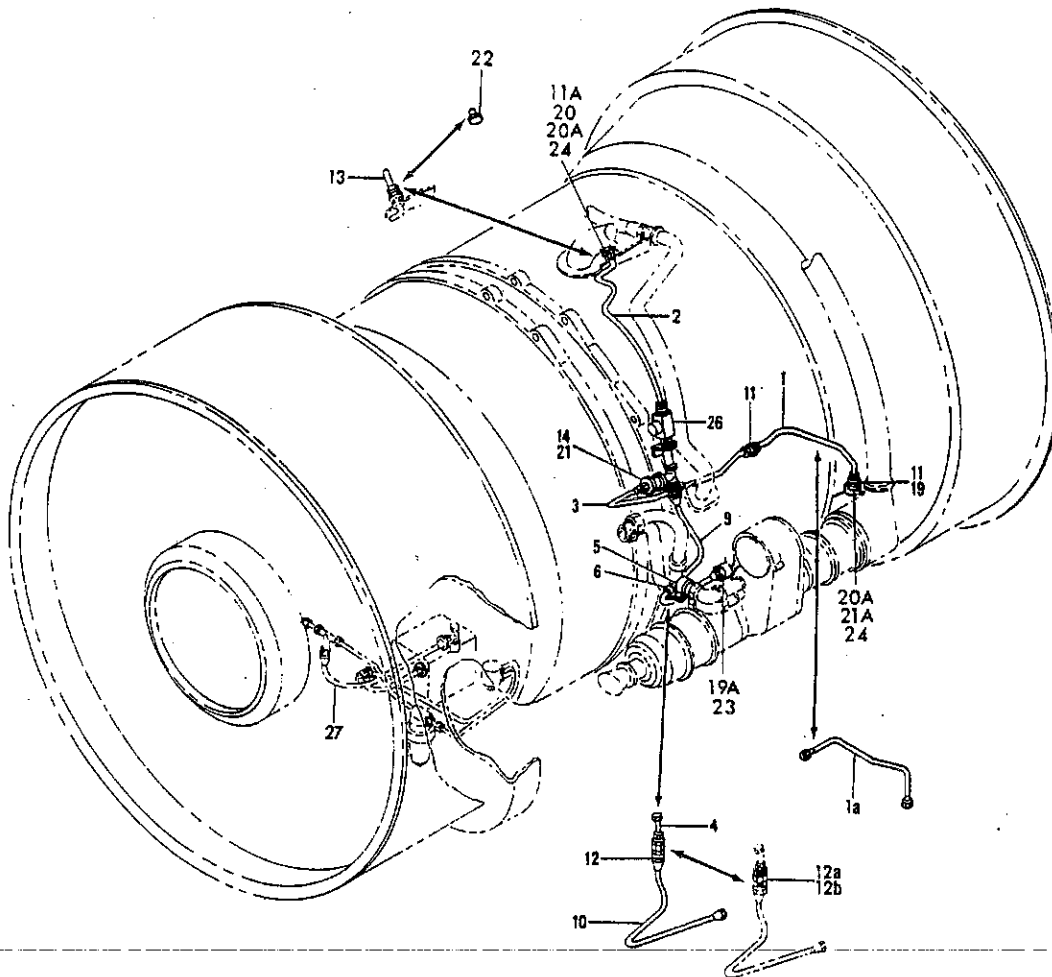
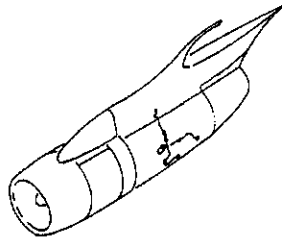



FIGURE 9. PLUMBING INSTL, FAN ENGINE CONSTANT SPEED DRIVE PRESSURE AND RELIEF VALVE (ELECTRICAL POWER ONLY)

DETAILED PARTS LIST
24-01-9
PAGE 3

24-01-9

NOV 21/90

MISSING ITEM NUMBERS ARE NOT APPLICABLE

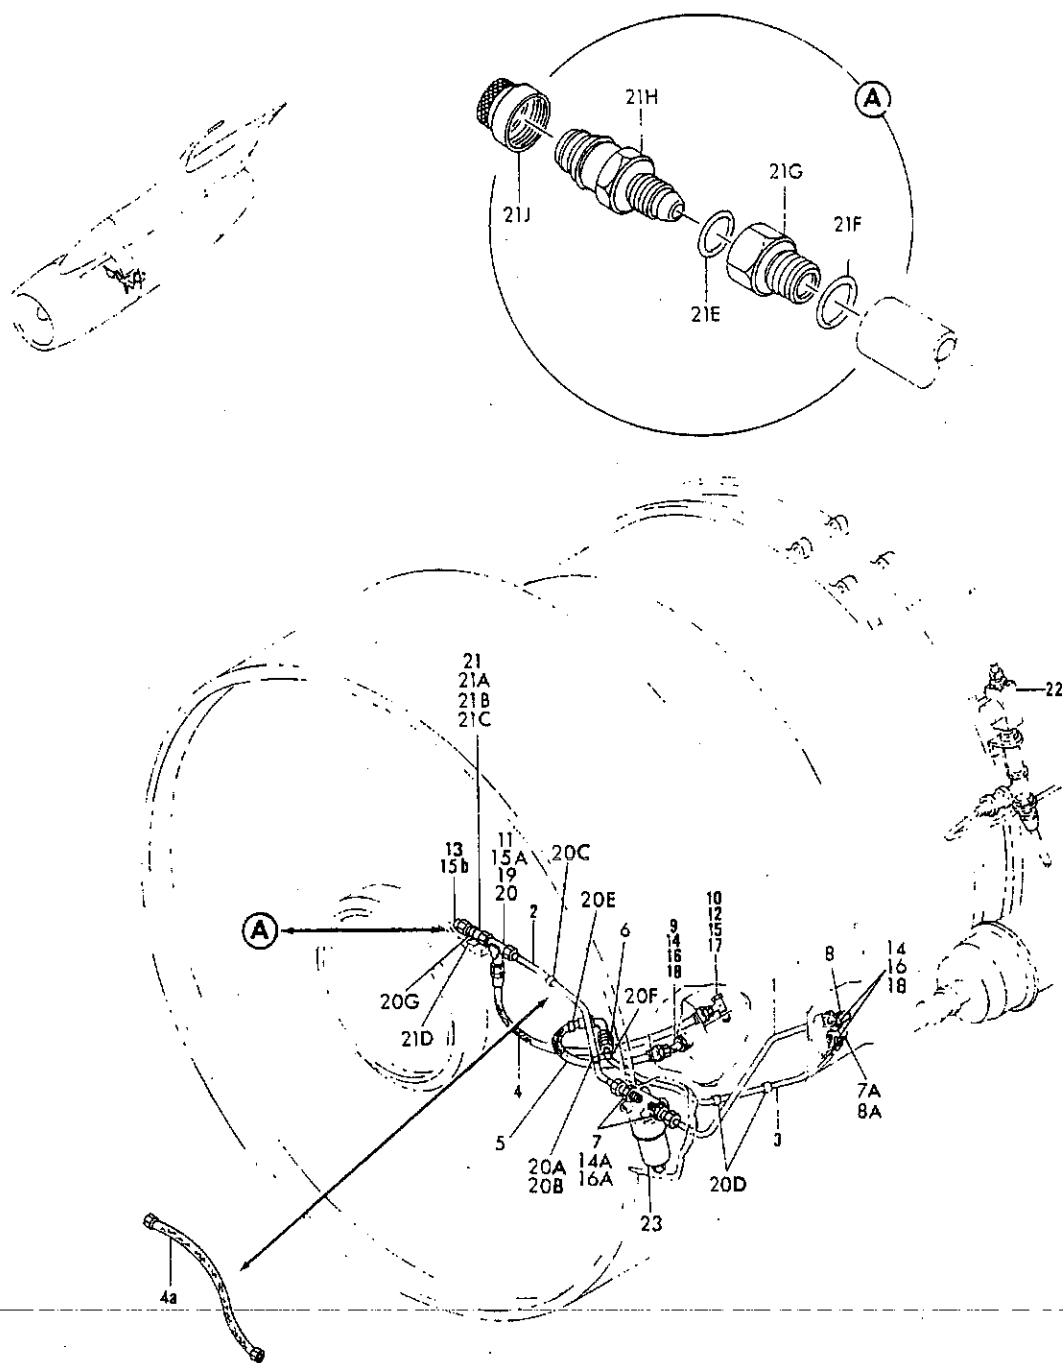

PLUMBING INSTL, FAN ENGINE (ELECTRICAL POWER ONLY)
FIGURE 9A. PLUMBING INSTL, FAN ENGINE CONSTANT SPEED DRIVE OIL SYSTEM

DETAILED PARTS LIST
24-01-9A
PAGE 2

24-01-9A

NOV 21/90

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R R R	9A. 65-11687-213	PLUMBING INSTL, FAN ENGINE CONSTANT SPEED DRIVE OIL ... SYSTEM (SEE 71-1, FIG. 5E, ITEM 35, 71-1, FIG. 5G, ITEM 33 AND 71-1, FIG. 5H, ITEM 28)	0150	RF
	65-74207-1	PLUMBING INSTL, FAN ENGINE CONSTANT SPEED DRIVE OIL ... SYSTEM (SEE 71-1, FIG. 5B, ITEM 37A, 71-1, FIG. 5G, ITEM 33 AND 71-1, FIG. 5H, ITEM 28)	5199	RF
	1 65-11687-188	. TUBE ASSY, VENT 5/8 .028 AISI304 (OPTIONALS AISI321, AISI347)		1
	2 65-11687-189	. TUBE ASSY, VENT 5/8 IN. .028 AISI304 (OPTIONALS ... AISI321, AISI347)		1
R R	3 65-11687-887	. TUBE ASSY, VENT 5/8 .028 AISI304 (OPTIONALS AISI321, AISI347)	0150	1
	MS21921-10	. . NUT		2
	BACSI3AP10	. . SLEEVE, (OPTIONAL MS21922-10)		2
R R	3 65-74207-5	. TUBE ASSY, VENT 1 IN. .028 AISI304.	5199	1
	BACN10HX16	. . NUT	5199	2
	4 10-60087-53	. HOSE ASSY, CONSTANT SPEED DRIVE LUBRICATION		1
R R	5 10-60087-54	. HOSE ASSY, CONSTANT SPEED DRIVE LUBRICATION	0150	1
R R	5 10-60087-57	. HOSE ASSY, CONSTANT SPEED DRIVE LUBRICATION	5199	1
R R	6 MS21902-10	. UNION	0150	1
	6 AN815-16	. UNION	5199	1
	7 MS21916-12-10	. REDUCER		2
R	7A AN919-22J	. REDUCER	5199	1
	8 MS21908-10	. ELBOW		1
R R	8A MS21908-10	. ELBOW	0150	1
	8A 4680016	. ELBOW, (V92003)	5199	1
R R R R R R R R	8A 118-10431	. ELBOW, (V88334) (OPTIONAL 118-10431 (V88334))	5199	1
	9 ERO1841	. ELBOW, (V79470)	0150	1
	9 118-10641	. ELBOW, (V14798) (OPTIONALS AFP349 (V30974), 1-01746 (V11328))	5199	1
	9 AFP349	. ELBOW, (V30974) (OPTIONAL TO 118-10641 (V14798))	5199	1
	9 1-01746	. ELBOW, (V11328) (OPTIONAL TO 118-10641 (V14798))	5199	1
	10 ERO1842	. ELBOW, (V79470) (OPTIONALS 118-01842 (V14798), 2-01529 (V11328))		1
	10 118-01842	. ELBOW, (V14798) (OPTIONAL TO ERO1842 (V79470))		1
	10 2-01529	. ELBOW, (V11328) (OPTIONAL TO ERO1842 (V79470))		1
	11 ER784-100808	. TEE, (V79470) (OPTIONAL LER784-10-8-B (V11328))		1
	11 LER784-10-8-B	. TEE, (V11328) (OPTIONAL TO ER784-100808 (V79470))		1
	12 NAS551-8H	. BOLT		1
	13 AN814-8CL	. PLUG AND BLEEDER		1
	14 MS28777-10	. RING		3
	14A BACG10U12	. GASKET		2
	15 BACG10U8	. GASKET		1
	15A BACG10U8	. GASKET		1
	15B BACG10U8	. GASKET		1
	16 BACG10U10	. GASKET		3
	17 BACG10T11	. GASKET		1
	18 AN6289-10	. NUT		3
	19 AN924-10	. NUT		1
	20 AN960-1416L	. WASHER		1
R R R R	20B BACCI0EP14	. CLAMP	5199	1
	20D BACCI0EP16	. CLAMP	5199	2
	20E BACCI0EP20	. CLAMP	5199	1
	20G BACCI0EP16	. CLAMP	5199	1
	21 216T8BTL3	. VALVE, CIRCLE SEAL CHECK (V91816)		1
	22	PLUMBING INSTL, FAN ENGINE CONSTANT SPEED DRIVE ... PRESSURE AND RELIEF VALVE (FOR REF SEE FIG. 9)		RF
	23	FILTER INSTL, CONSTANT SPEED DRIVE OIL (FOR REF SEE ... FIG. 11)		RF

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/91

24-01-9A

DETAILED PARTS LIST
24-01-9A
PAGE 1

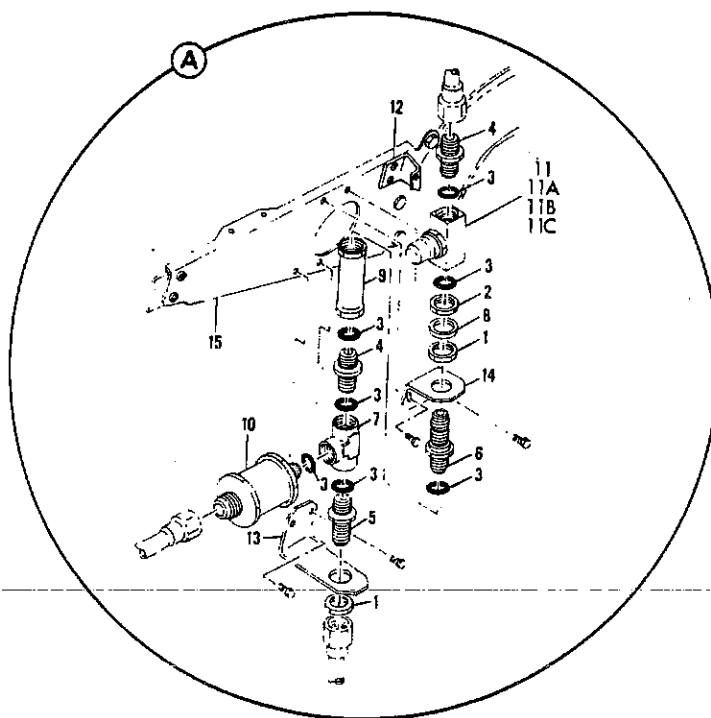
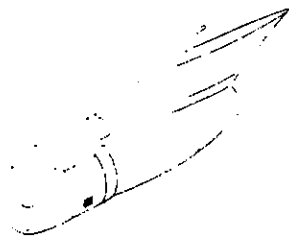


FIGURE 10. VALVE INSTL, CONSTANT SPEED DRIVE PRESSURE SENSING RELIEF

DETAILED PARTS LIST
24-01-10
PAGE 3

24-01-10

NOV 21/90

MISSING ITEM NUMBERS ARE NOT APPLICABLE

DETAILED PARTS LIST
24-01-10
PAGE 1


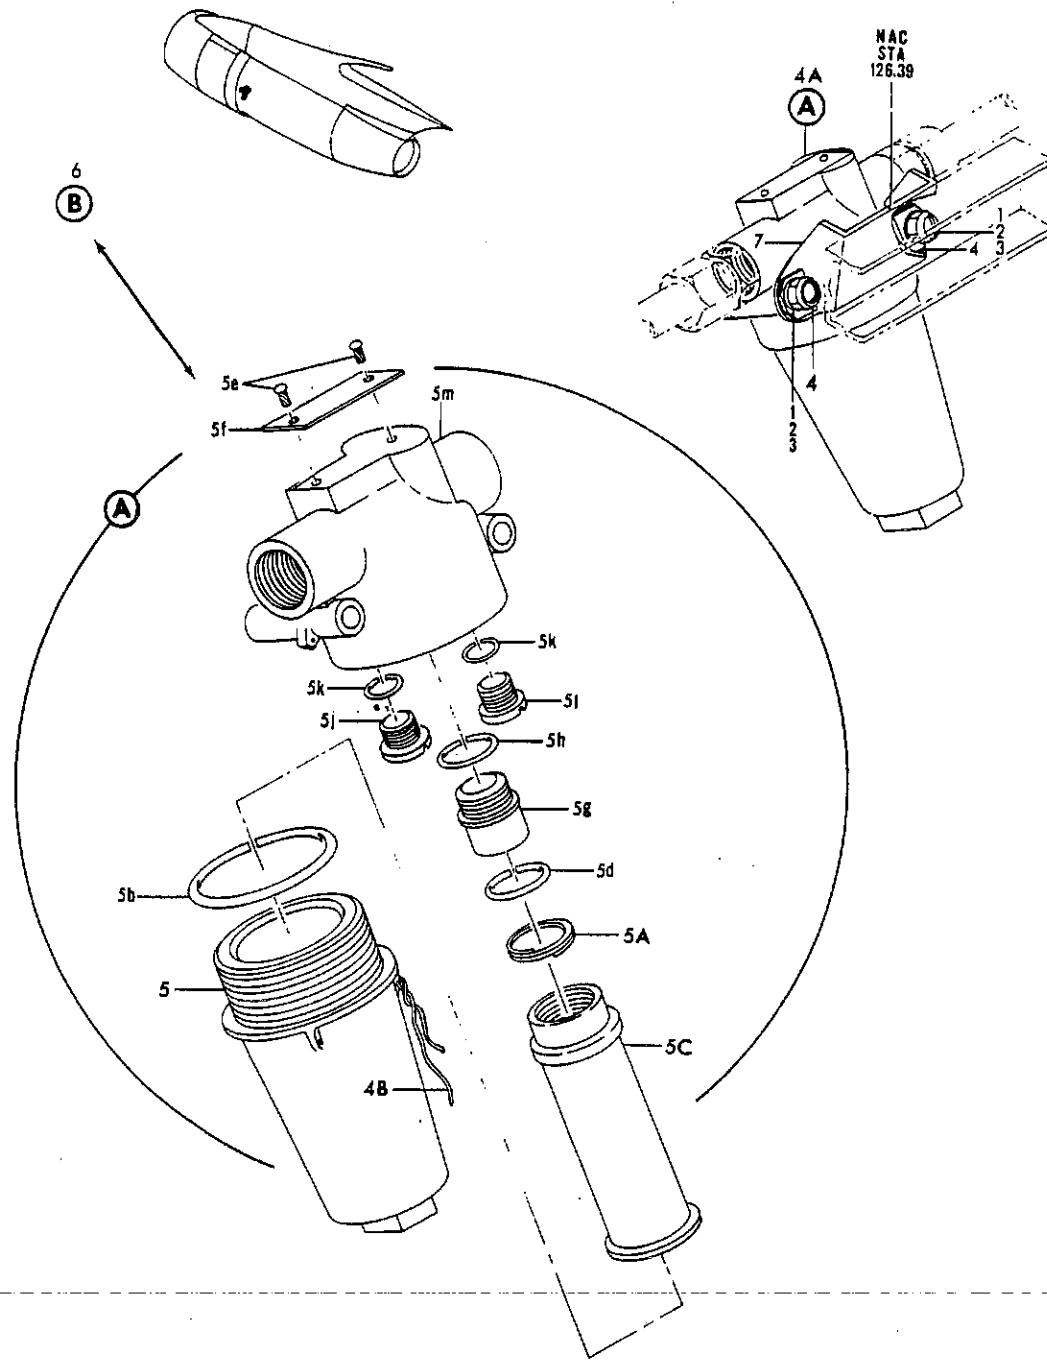


FIGURE 11. BRACKET INSTL, CONSTANT SPEED DRIVE OIL FILTER (ELECTRICAL POWER ONLY) (SHEET 1)

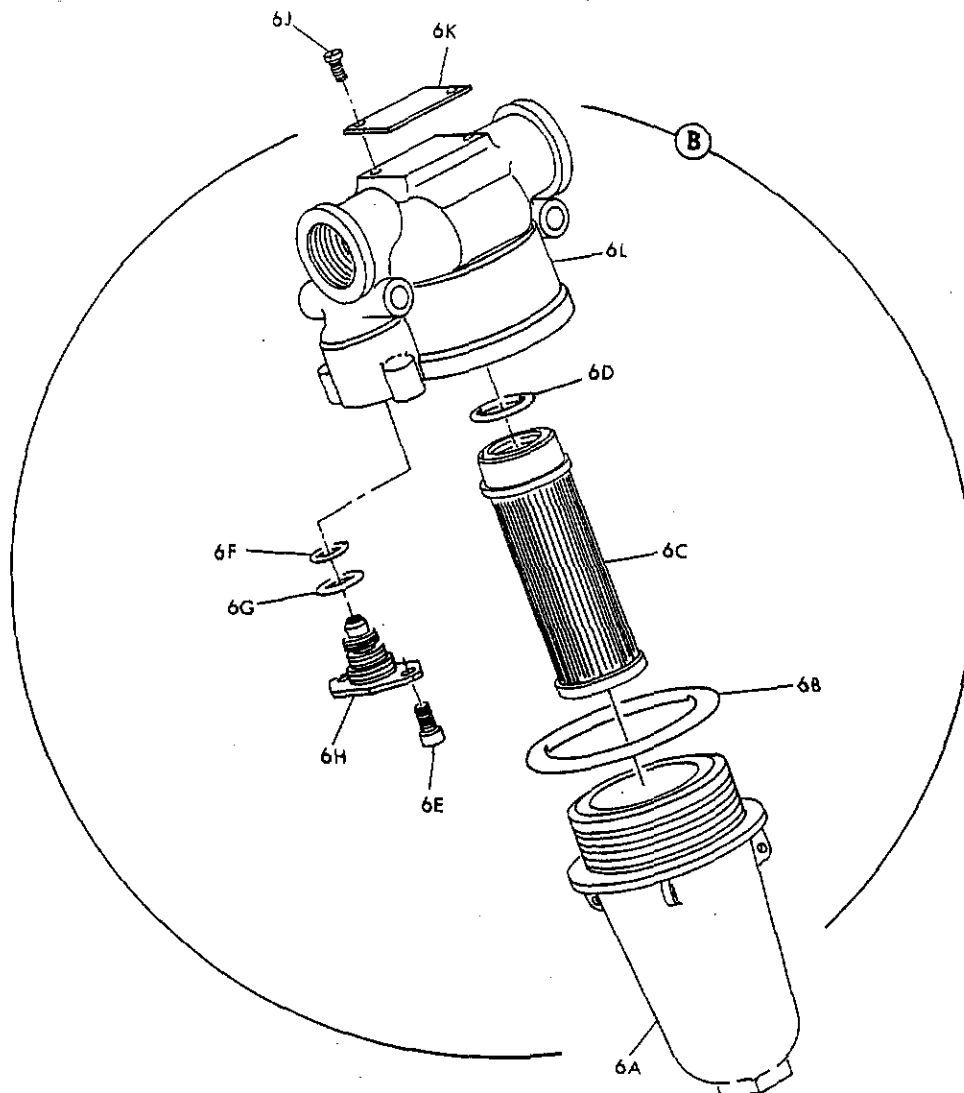

FILTER INSTL, CONSTANT SPEED DRIVE OIL
FIGURE 11. BRACKET INSTL, CONSTANT SPEED DRIVE OIL FILTER (ELECTRICAL POWER ONLY) (SHEET 2)

NOV 21/90

24-01-11

DETAILED PARTS LIST
24-01-11
PAGE 1

1991

MISSING ITEM NUMBERS ARE NOT APPLICABLE

24-01-11

RAF
NOV 21/91

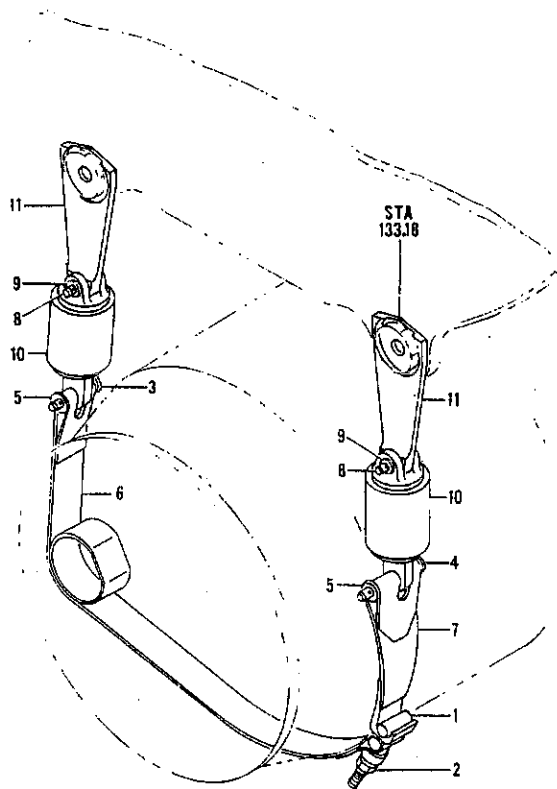
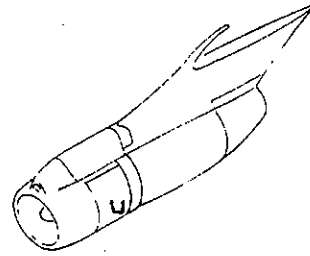


FIGURE 12. SUPPORT INSTL., FAN ENGINE GENERATOR

DETAILED PARTS LIST
24-01-12
PAGE 0

24-01-12

NOV 21/90

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
12	65-26710-4	SUPPORT INSTL, FAN ENGINE 30 KVA GENERATOR (SEE FIG... 2, ITEM 34)		RF
1	BACB30CL250	. BOLT.		1
2	NAS679A4W	. NUT		1
3	MS20392-3-27	. PIN		1
4	MS20392-3-35	. PIN		1
5	AN960-416L	. WASHER.		2
6	69-26238-1	. STRAP ASSY, GENERATOR SUPPORT		1
7	69-21800-2	. STRAP ASSY, GENERATOR SUPPORT		1
8	MS20392-2-21	. PIN		2
9	AN960-10L	. WASHER.		2
10	10-60902-1	. CARTRIDGE, GENERATOR SUPPORT SPRING		2
11	69-21636-2	. BRACKET, FAN ENGINE 30 KVA GENERATOR SUPPORT.		2
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/90

24-01-12

DETAILED PARTS LIST
24-01-12
PAGE 1

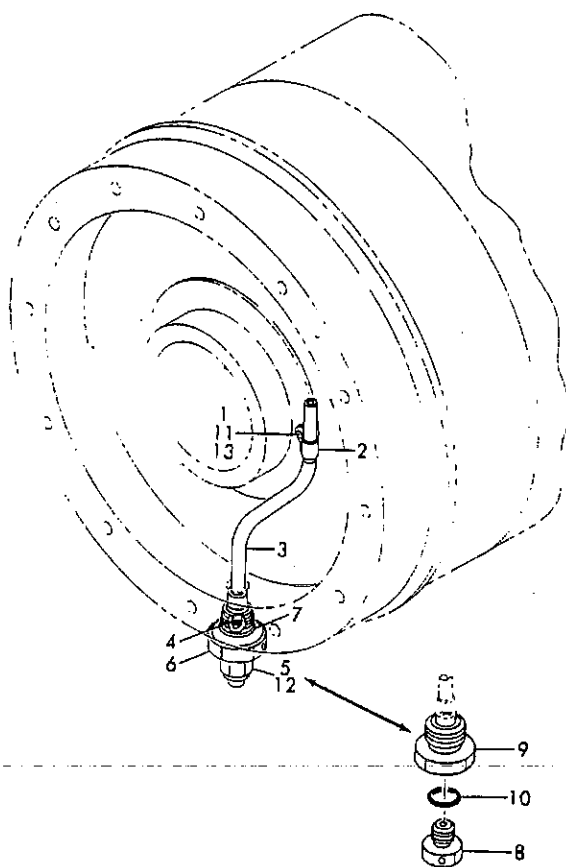
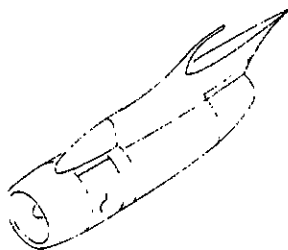


FIGURE 16. STANDPIPE INSTL, ENGINE N2 PAD

DETAILED PARTS LIST
24-01-16
PAGE 0

24-01-16

NDV 21/90

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
16	65-40211-1	STANDPIPE INSTL, ENGINE N2 PAD (SEE 71-1, FIG. 5, ITEM 48, 71-1, FIG. 5B, ITEM 77, 71-1, FIG. 5E, ITEM 91, 71-1, FIG. 5G, ITEM 90 AND 71-1, FIG. 5H, ITEM 76)		RF
1	AN500A8-6	. SCREW		1
2	AN742F4	. CLAMP		1
3	66-21547-4	. STANDPIPE ASSY, OIL LEVEL		1
4	BACG10T6	. GASKET.		1
7	BACG10U8	. GASKET.		1
8	AN814-2CL	. PLUG. (OPTIONALS AN814-2JL, AN814-2KL, AN814-2SL)		1
8	AN814-2JL	. PLUG. (OPTIONAL TO AN814-2CL)		1
8	AN814-2KL	. PLUG. (OPTIONAL TO AN814-2CL)		1
8	AN814-2SL	. PLUG. (OPTIONAL TO AN814-2CL)		1
9	69-42444-1	. FITTING		1
10	BACG10U2	. GASKET.		1
11	BACS13W2CN3	. SLEEVE.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/90

24-01-16

DETAILED PARTS LIST
24-01-16
PAGE 1

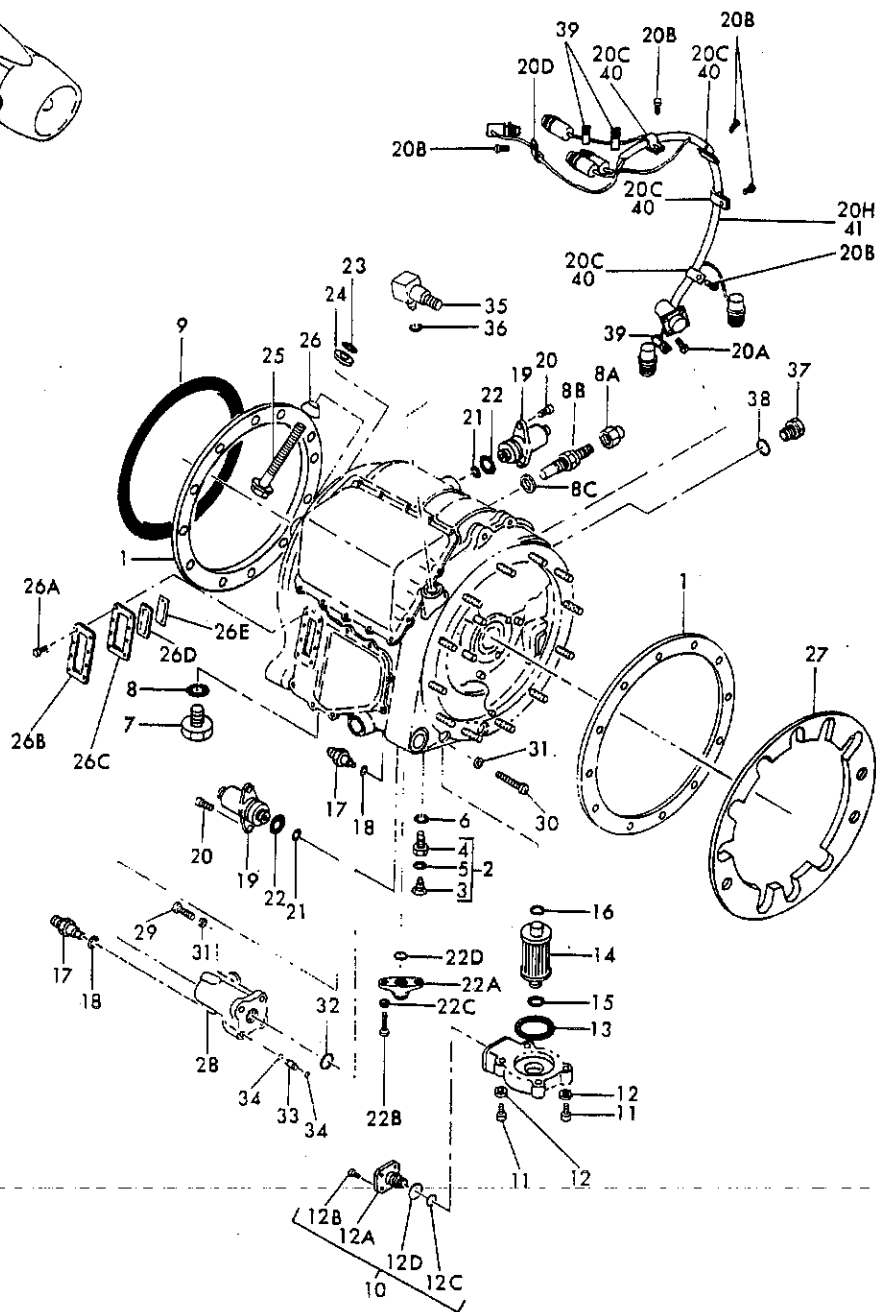
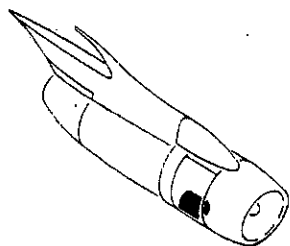


FIGURE 20. TRANSMISSION ASSY, 40 KVA AC GENERATOR CONSTANT SPEED DRIVE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
20	700842A	TRANSMISSION ASSY, 40 KVA AC GENERATOR CONSTANT SPEED DRIVE (V99167) (SAME AS BAC SPEC NO. 10-61066-1) (SEE FIG. 2, ITEM 33) (OPTIONAL 700842 (V99167))		RF
	700842	TRANSMISSION ASSY, 40 KVA AC GENERATOR CONSTANT SPEED DRIVE (V99167) (SAME AS BAC SPEC NO. 10-61066-1) (SEE FIG. 2, ITEM 33) (OPTIONAL 700842A (V99167))		RF
M 1	693206	GASKET, (V99167)		2
M 2	A7532	PLUG ASSY, MAGNETIC DRAIN (V97484) (OPTIONALS A3164, A3164A, A7570A1, A7532K (V97484))		1
M 2	A7670A1	PLUG ASSY, MAGNETIC (V97484) (OPTIONALS A3164, A3164A, A7532, A7532K (V79484))		1
M 2	A3164A	PLUG ASSY, MAGNETIC DRAIN (V97484) (OPTIONALS A3164, A7532, A7670A1, A7532K (V97484))		1
M 2	A3164	PLUG ASSY, MAGNETIC DRAIN (V97484) (OPTIONALS A3164A, A7532, A7670A1, A7532K (V97484))		1
M 2	A7532K	PLUG ASSY, MAGNETIC (V97484) (OPTIONALS A3164, A3164A, A7532, A7670A1 (V97484))		1
M 3	A7713	PLUG, MAGNETIC CHIP DETECTOR (V97484) (USED ON A7670A1)		1
M 3	A7784	PLUG, MAGNETIC CHIP DETECTOR (V97484) (USED ON A7532)		1
M 3	A3269A	PLUG, MAGNETIC (V97484) (USED ON A3164A)		1
M 3	A3269	PLUG, MAGNETIC (V97484) (USED ON A3164)		1
M 4	A7714-1	VALVE, SELF CLOSING (V97484) (USED ON A7670A1)		1
M 4	A7810	VALVE, SELF CLOSING (V97484) (USED ON A7532)		1
M 4	A3268	VALVE, SELF CLOSING (V97484) (USED ON A3164 AND A3164A)		1
M 5	3634-202-11-70	PACKING, (V99167) (USED ON A7532)		1
M 5	55139	PACKING, (V99167) (USED ON A3164 AND A3164A)		1
M 6	3634-193-11-70	PACKING, (V97484) (OPTIONAL MS17413-111)		1
M 6	MS17413-111	PACKING (OPTIONAL 3634-193-11-70 (V97484))		1
M 7	MS24391D6L	PLUG (OPTIONAL MS9015-06E12)		1
M 7	MS9015-06E12	PLUG (OPTIONAL MS24391D6L)		1
M 8	MS17413-112	PACKING		1
M 8A	AN929-3	CAP		1
M 8B	694282	VALVE ASSY, CHECK (V99167)		1
M 8C	1611-0716	WASHER, PRESSURE SEAL (V99167)		1
M 9	MS17413-270	PACKING		1
M 10	696755A	CAP ASSY, FILTER (V99167) (OPTIONALS 708585, 717324 (V99167))		1
M 10	708585	CAP ASSY, FILTER (V99167) (OPTIONALS 696755A, 717324 (V99167))		1
M 10	717324	CAP ASSY, FILTER (V99167) (OPTIONALS 696755A, 708585 (V99167))		1
M 11	MS16997-61	ATTACHING PARTS SCREW (OPTIONAL MS16997-60)		4
M 11	MS16997-60	SCREW (OPTIONAL MS16997-61)		4
M 12	AN960C416L	WASHER		4
M 12A	MC233JL089	INDICATOR, PRESSURE DIFFERENTIAL (V01414) (OPTIONALS RC784UL089, RD608UL089 (V01414) 201648 (V00736))		1
M 12A	RC784UL089	INDICATOR, PRESSURE DIFFERENTIAL (V01414) (OPTIONALS MC233JL089, RD608UL089 (V01414) 201648 (V00736))		1
M 12A	RD608UL089	INDICATOR, PRESSURE DIFFERENTIAL (V01414) (OPTIONALS MC233JL089, RC784UL089 (V01414) 201648 (V00736))		1
M 12A	201648	INDICATOR, PRESSURE DIFFERENTIAL (V00736) (OPTIONALS MC233JL089, RC784UL089, RD608UL089 (V01414))		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/90

24-01-20

DETAILED PARTS LIST
24-01-20
PAGE 1

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
20			ATTACHING PARTS		
M 12B	MS16995-17	.	SCREW		4
M 12C	MS17413-014	.	PACKING, (USED WITH MC233JL089, RC784UL089 AND. RD608UL089)		1
M 12D	MS17413-015	.	PACKING		1
M 13	MS17413-128	.	PACKING		1
M 14	055916	.	ELEMENT, FILTER (V90005). (OPTIONALS R9W838-331 (V00736) AC8816F-1 (V01414) 7554425 (V05228) 55122 (V99167))		1
M 14	55122	.	FILTER, ELEMENT (V99167). (OPTIONALS 055916 (V90005) R9W838-331 (V00736) AC8816F1 (V01414) 7554425 (V05228))		1
M 14	R9W838-331	.	FILTER, ELEMENT (V00736). (OPTIONALS 055916 (V90005) 55122 (V99167) AC8816F1 (V01414) 7554425 (V05228))		1
M 14	AC8816F1	.	ELEMENT, FILTER (V01414). (OPTIONALS 055916 (V90005) 55122 (V99167) R9W838-331 (V00736) 7554425 (V05228))		1
M 14	7554425	.	ELEMENT, FILTER (V05228). (OPTIONALS 055916 (V90005) 55122 (V99167) R9W838-331 (V00736) AC8816F1 (V01414))		1
M 15	MS17413-018	.	PACKING		1
M 16	MS17413-014	.	PACKING		1
M 17	56817C	.	BULB, TEMPERATURE (V35918).		2
M 18	MS17413-110	.	PACKING		2
M 19	697902B	.	SWITCH ASSY, PRESSURE (V99167). (OPTIONAL TO 697902C, 697902D, 697902E (V99167))		2
M 19	697902C	.	SWITCH ASSY, PRESSURE (V99167). (OPTIONAL TO 697902B, 697902D, 697902E (V99167))		2
M 19	697902D	.	SWITCH ASSY, PRESSURE (V99167). (OPTIONAL TO 697902B, 697902C, 697902E (V99167))		2
19	697902E	.	SWITCH ASSY, PRESSURE (V99167). (OPTIONALS 697902B, 697902C, 697902D (V99167))		2
M 20	MS24674-14	.	ATTACHING PARTS		
M 20	MS24677-23	.	SCREW (OPTIONALS MS24677-23, MS16995-36)		4
M 20	MS16995-36	.	SCREW (OPTIONALS MS24674-14, MS16995-36)		4
M 20A	MS24677-1	.	SCREW		4
M 20B	MS16997-44	.	SCREW		5
M 20C	TA1720SS6T	.	CLAMP, (V84971)		3
M 20D	TA1720SS4T	.	CLAMP, (V84971) (OPTIONAL TA1720SS3T (V84971))		1
M 20D	TA1720SS3T	.	CLAMP, (V84971) (OPTIONAL TA1720SS4T (V84971))		1
M 20G	TA1720SS5T	.	CLAMP, (V84971) (OPTIONAL TA1720SS4T (V84971))		1
M 20G	TA1720SS4T	.	CLAMP, (V84971) (OPTIONAL TA1720SS5T (V84971))		1
M 20H	54392	.	HARNESS, WIRING (V99167). (OPTIONALS 707588, 707588A, (V99167))		1
M 20H	707588A	.	HARNESS, WIRING (V99167). (OPTIONALS 707588, 54392 (V99167))		1
M 20H	707588	.	HARNESS, WIRING (V99167). (OPTIONALS 707588A, 54392 (V99167))		1
M 21	MS17413-011	.	PACKING		2
M 22	MS17413-117	.	PACKING		2
M 22A	696221	.	CAP, ADJUSTMENT (V99167).		1
M 22B	0645-1024-6RDK	.	ATTACHING PARTS		
M 22C	AN960C10L	.	SCREW, (V99167)		2
		.	WASHER.		2
M 22D	MS17413-016	.	PACKING		1
M 23	MS17413-010	.	PACKING		1
M 24	AN960C516L	.	WASHER.		1
M 25	27574	.	BOLT, TENSION (V99167).		1
M 26	686749	.	WASHER, SELF ADJUSTING (V99167)		1
M 26A	MS16997-19	.	SCREW		8
M 26B	704795	.	PLATE, OIL LEVEL INDICATOR (V99167). (OPTIONAL 701004 (V99167))		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE						EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6 7		
20 M 26B	701004	.	PLATE, OIL LEVEL INDICATOR (V99167)	.	.	.	.		1
		.	(OPTIONAL 704795 (V99167))	.	.	.	.		
M 26C	702443	.	GASKET, (V99167) (USED WITH 702442)	.	.	.	.		1
M 26C	699555	.	GASKET, (V99167) (USED WITH 690710A)	.	.	.	.		1
M 26D	702442	.	GLASS, SIGHT (V99167)	.	.	.	.		1
		.	(OPTIONAL 690710A (V99167))	.	.	.	.		
M 26D	690710A	.	GLASS, SIGHT (V99167)	.	.	.	.		1
		.	(OPTIONAL 702442 (V99167))	.	.	.	.		
M 26E	690712	.	GASKET, (V99167)	.	.	.	.		1
M 27	703804-1	.	SHIELD, GENERATOR AIR (V99167)	.	.	.	.		1
		.	(OPTIONAL 704242 (V99167))	.	.	.	.		
M 27	704242	.	SHIELD, GENERATOR AIR (V99167)	.	.	.	.		1
		.	(OPTIONAL 703804-1 (V99167))	.	.	.	.		
M 28	699203	.	HOUSING ASSY, ADAPTER (V99167)	.	.	.	.		1
		.	(OPTIONAL 699203A (V99167))	.	.	.	.		
M 28	699203A	.	HOUSING ASSY, ADAPTER (V99167)	.	.	.	.		1
		.	(OPTIONAL 699203 (V99167))	.	.	.	.		
		.	ATTACHING PARTS	.	.	.	.		
M 29	0645-1024-14SDH	.	SCREW, (V99167)	.	.	.	.		2
		.	(OPTIONAL MS16997-47)	.	.	.	.		
M 29	MS16997-47	.	SCREW	.	.	.	.		2
		.	(OPTIONAL 0645-1024-14SDH (V99167))	.	.	.	.		
M 30	0645-1024-14SDH	.	SCREW, (V99167)	.	.	.	.		2
M 31	AN960C10L	.	WASHER	.	.	.	.		4
		.	-----	.	.	.	.		
M 32	MS17413-116	.	PACKING	.	.	.	.		1
M 33	4010-1	.	INSERT, RING RETAINING (V99167)	.	.	.	.		2
M 34	MS17413-008	.	PACKING	.	.	.	.		4
M 35	699512	.	VALVE ASSY, VENT AND VACUUM (V99167)	.	.	.	.		1
M 36	MS17413-112	.	PACKING	.	.	.	.		1
M 37	MS9015-08	.	PLUG	.	.	.	.		1
M 38	MS17413-114	.	PACKING	.	.	.	.		1
M 39	TA1720SS3T	.	CLAMP, (V84971)	.	.	.	.		3
M 40	TA1720SS5T	.	CLAMP, (V84971)	.	.	.	.		4
		.	ATTACHING PARTS	.	.	.	.		
M	MS16997-44	.	SCREW	.	.	.	.		7
		.	-----	.	.	.	.		
M 41	707588	.	HARNESS, WIRING (V99167)	.	.	.	.		1
		.	(OPTIONAL 54392 (V99167))	.	.	.	.		
MISSING ITEM NUMBERS ARE NOT APPLICABLE									

RAF
NOV 21/90

24-01-20

DETAILED PARTS LIST
24-01-20
PAGE 3

BOEING *Intercontinental*
707
PARTS CATALOG

SECTION 02
POWER PLANT AND WING

RAF
NOV 21/90

24-02
PAGE 1

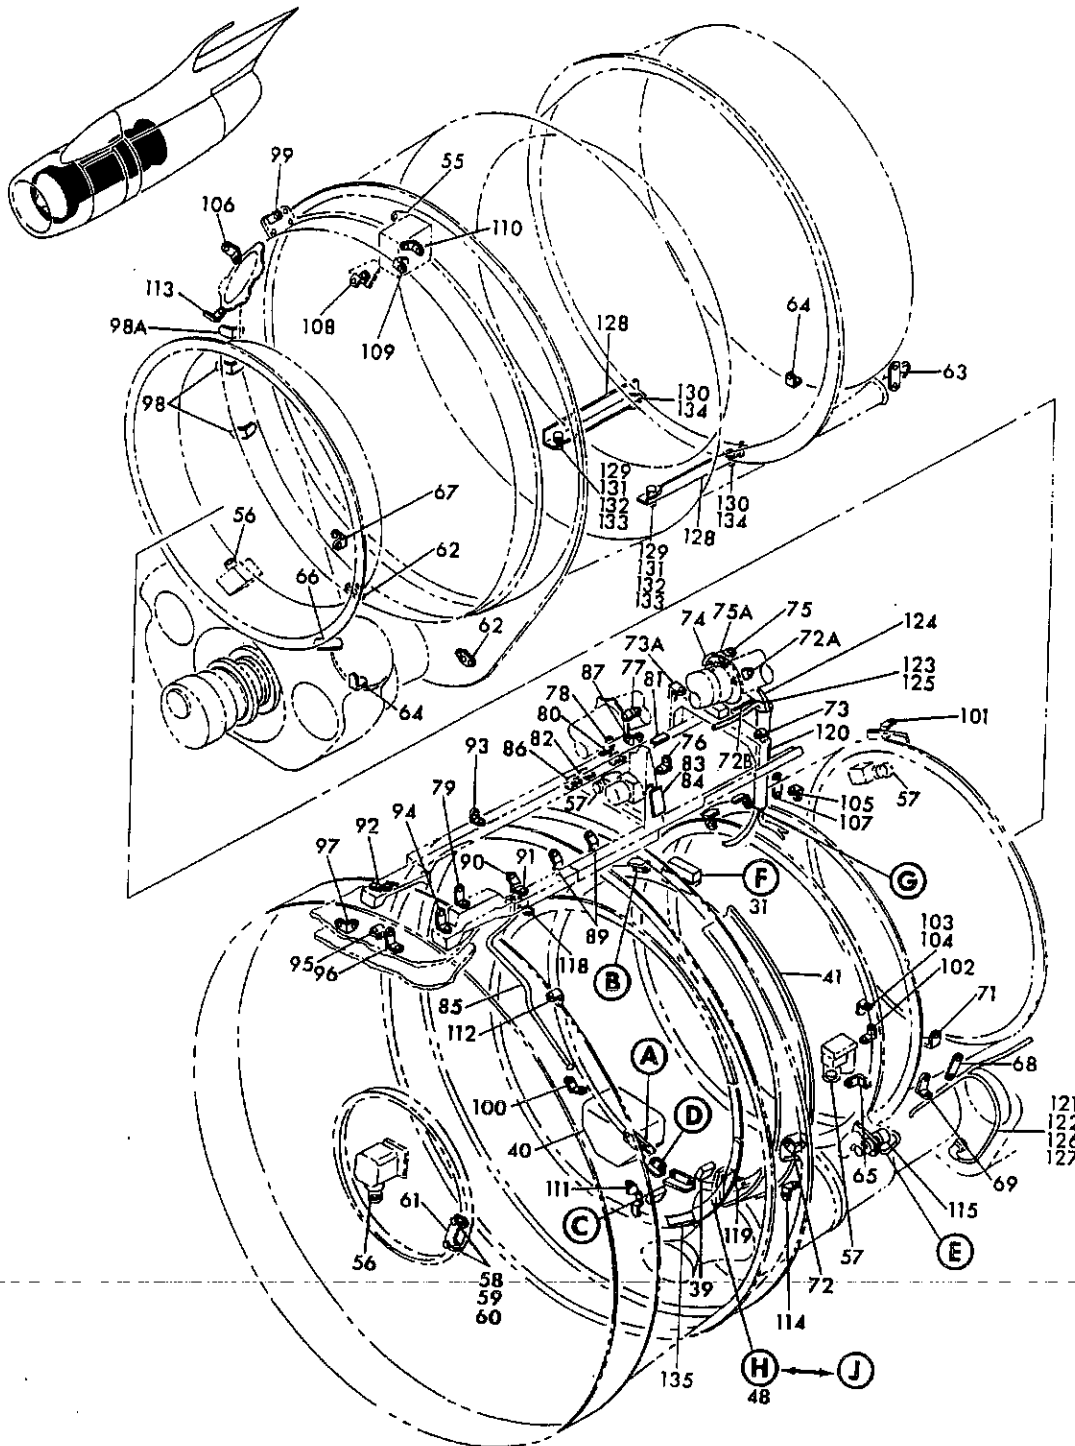


FIGURE 2B, ELECTRICAL INSTL. SECTION 76 FAN NACELLE (SHEET 1)

DETAILED PARTS LIST
24-02-2B
PAGE 0

24-02-2B

NOV 21/90

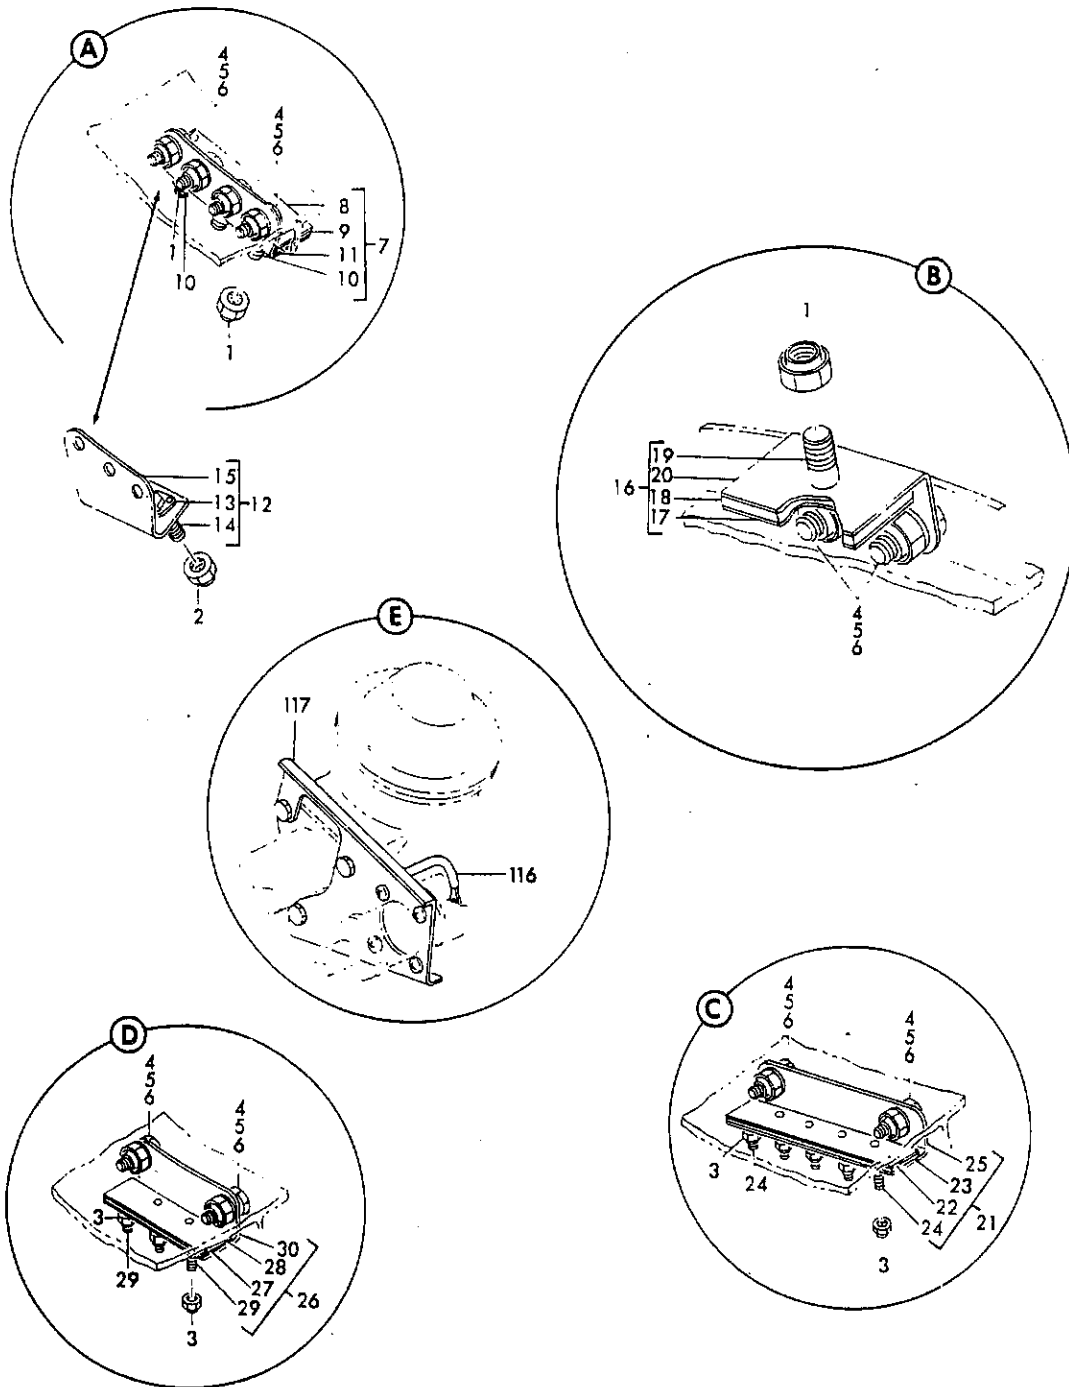


FIGURE 28. ELECTRICAL INSTL, SECTION 76 FAN NACELLE (SHEET 2)

NOV 21/90

24-02-28

DETAILED PARTS LIST
24-02-28
PAGE 1

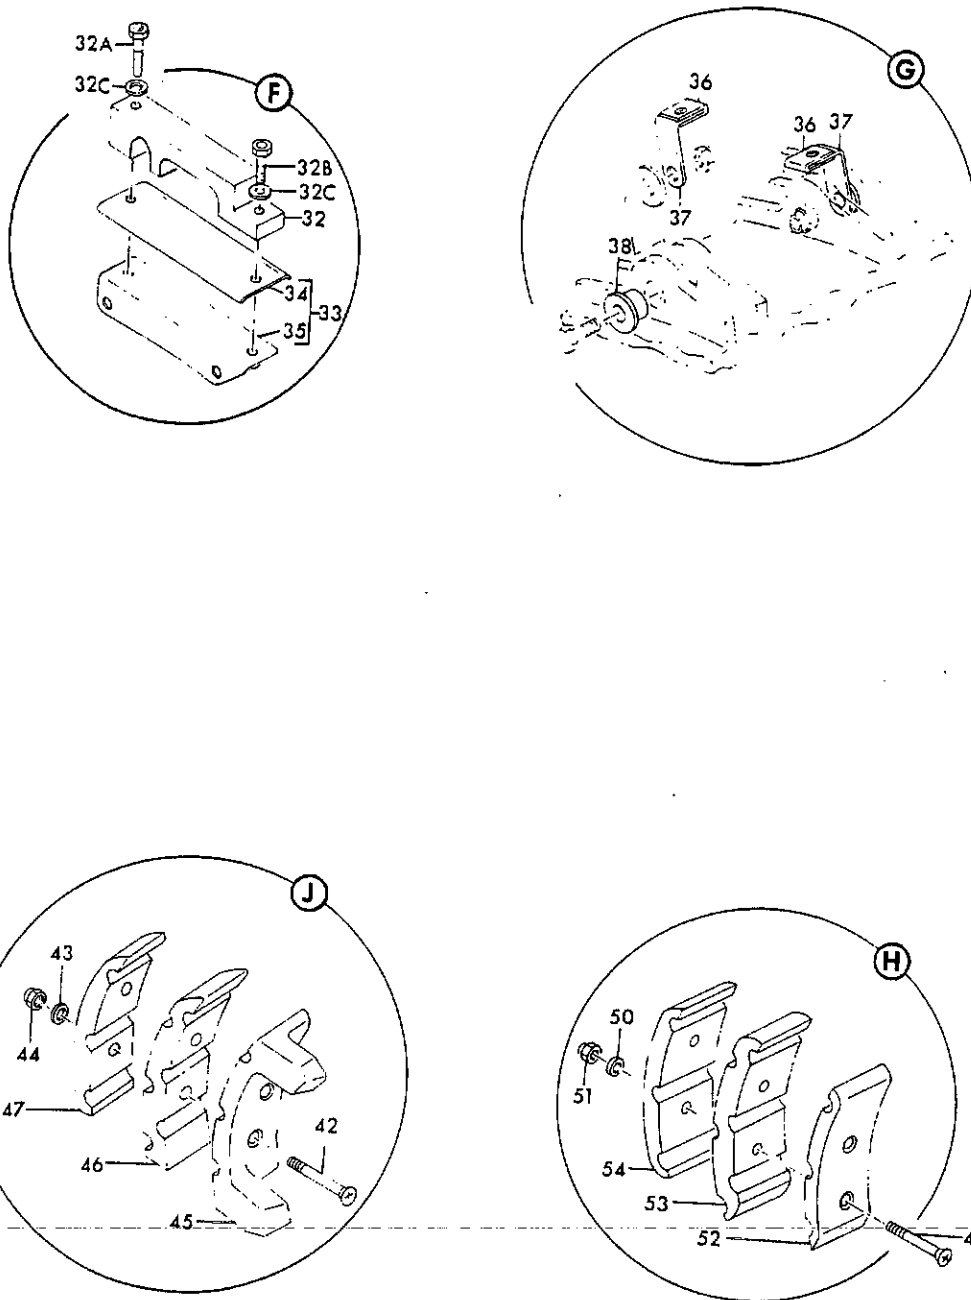


FIGURE 2B. ELECTRICAL INSTL, SECTION 76 FAN NACELLE (SHEET 3)

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 2B	65-11610	ELECTRICAL INSTL, SECTION 76 FAN NACELLE (SEE 71-1, . . . FIG. 5, ITEM 10, 71-1, FIG. 5B, ITEM 31, 71-1, FIG. 5E, ITEM 33, 71-1, FIG. 5G, ITEM 31 AND 71-1, FIG. 5H, ITEM 26)	0150	RF
R 1	NAS679A6	. NUT, (USED WITH 69-10806-2)	0150	1
R 2	NAS1021C6	. NUT	0150	1
R 3	NAS679A3W	. NUT	0150	8
R 4	AN5-4A	. BOLT	0150	10
R 5	AN960C516L	. WASHER	0150	10
R 6	NAS679A5	. NUT	0150	10
R 12	66-20258-1	. STUD ASSY, GENERATOR GROUNDING	0150	1
R 13	BACR10G62	. RETAINER	0150	1
R 14	AN6C11A	. BOLT	0150	1
R 15	66-20262-1	. BRACKET	0150	1
R 16	69-10806-2	. STUD ASSY, JT3D ENGINE COMPONENTS GROUNDING	0150	1
R 17	69-10806-8	. PLATE	0150	1
R 18	69-10806-7	. PLATE, ALIGNING	0150	1
R 19	NAS1065-624-10	. STUD	0150	1
R 20	69-10806-6	. ANGLE	0150	1
R 21	69-10805-9	. STUD ASSY, JT3D ENGINE COMPONENTS GROUNDING	0150	1
R 22	69-10805-3	. PLATE	0150	1
R 23	69-10805-4	. PLATE, ALIGNING	0150	1
R 24	NAS1065-10-8	. STUD	0150	5
R 25	69-10805-10	. ANGLE	0150	1
R 26	69-10805-2	. STUD ASSY, JT3D ENGINE COMPONENTS GROUNDING	0150	1
R 27	69-10805-8	. PLATE	0150	1
R 28	69-10805-7	. PLATE, ALIGNING	0150	1
R 29	NAS1065-10-8	. STUD	0150	3
R 30	69-10805-6	. ANGLE	0150	1
R 31	69-11167-5	. BRACKET ASSY, ENGINE CABLE SUPPORT	0150	1
R	AN5-4A	ATTACHING PARTS		
R	AN960C516L	. BOLT	0150	2
R	NAS679A5	. WASHER	0150	2
R		. NUT	0150	2
R 32	69-11167-875	. BLOCK	0150	1
R 32A	AN3-16A	ATTACHING PARTS		
R 32B	AN3-6A	. BOLT	0150	1
R 32C	AN960D10L	. BOLT	0150	1
R 33	69-11167-6	. WASHER	0150	2
R 34	69-11167-3	. BRACKET	0150	1
R 35	69-11167-7	. STRIP, RUB.	0150	1
R 36	66-11115	. BRACKET	0150	1
R 37	BACN10FX1	. CLIP INSTL, POWER FEEDER SUPPORTS	0150	1
R	66-11115-1	. NUT	0150	2
R		. CLIP	0150	2
R	AN4-6A	ATTACHING PARTS		
R	AN945-4P	. BOLT	0150	1
R	NAS679A4W	. WASHER	0150	1
R		. NUT	0150	1
R 38	3-85296	. BUSHING, THROTTLE CONTROL	0150	1
R 39	65-23920-1	. SWITCH INSTL, FAN REVERSER (SEE 78-5, FIG. 4)	0150	1
R 40	65-11931	. TRANSFORMER INSTL, JT3D NACELLE CURRENT (SEE FIG. 27)	0150	1
R 41	65-11952-7	. RACEWAY INSTL, JT3D NACELLE (SEE FIG. 26)	0150	1
R	65-11194-16	. BUNDLE ASSY, GENERATOR CONTROL (ENGINES NO. 1, 2, 3	0150	1
R		AND 4)		
R 55	273-0011-000	. SEAL, INTERFACE GASKET (V71468)	0150	1
R 56	273-0013-000	. SEAL, INTERFACE GASKET (V71468)	0150	2
R 57	273-0012-000	. SEAL, INTERFACE GASKET (V71468)	0150	3
R 58	NAS603-8	. SCREW	0150	2
R 59	MS20341-10	. NUT	0150	2
R 60	NAS679A3W	. NUT	0150	2
R 61	66-11427	. BRACKET, TACHOMETER GROUND	0150	1
R	AN960-516	ATTACHING PARTS		
R	NAS679A5	. WASHER	0150	6
R		. NUT	0150	2
R 63	63-10310-1	. CLIP, ENGINE WIRING SUPPORT	0150	1
R 64	66-10655-6	. CLIP, ENGINE WIRING SUPPORT	0150	2
R 65	66-10655-6	. CLIP, ENGINE WIRING SUPPORT	0150	1
R 66	63-10310-4	. CLIP, ENGINE WIRING SUPPORT	0150	1
R 67	66-10655-4	. CLIP, ENGINE WIRING SUPPORT	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/91

24-02-2B

DETAILED PARTS LIST
24-02-2B
PAGE 3

Intercontinental
PARTS CATALOG

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	2B 69	66-10655-5		CLIP, ENGINE WIRING SUPPORT	0150	1
				ATTACHING PARTS		
R		NAS603-6		SCREW, (USED WITH 63-10310-2 AND 66-10655-5).	0150	4
				-----*		
R	72	66-10655-9		CLIP, ENGINE WIRING SUPPORT	0150	1
				ATTACHING PARTS		
R		NAS1305-1		BOLT.	0150	1
R		NAS679A5		NUT	0150	1
				-----*		
R	72A	69-45933-1		BRACKET, (ENGINES NO. 2 AND 3).	0150	1
R	72A	69-45933-1		BRACKET, (ENGINE NO. 4)	0150	1
R	73	66-10655-802		CLIP, ENGINE WIRING SUPPORT (ENGINES NO. 2 AND 3)	0150	1
R	73	66-10655-802		CLIP, ENGINE WIRING SUPPORT (ENGINE NO. 4).	0150	1
				ATTACHING PARTS		
R		AN3-4A		BOLT.	0150	1
				-----*		
R	74	66-10655-808		CLIP, ENGINE WIRING SUPPORT (ENGINE NO. 4).	0150	1
R	75	66-10655-808		CLIP, ENGINE WIRING SUPPORT (ENGINE NO. 4).	0150	1
R	76	66-10655-5		CLIP, ENGINE WIRING SUPPORT (ENGINES NO. 2 AND 3)	0150	1
R	76	66-10655-5		CLIP, ENGINE WIRING SUPPORT (ENGINE NO. 4).	0150	1
				ATTACHING PARTS		
R		NAS603-6		SCREW, (USED WITH 66-10655-5)	0150	1
R		NAS679A3W		NUT, (USED WITH 66-10655-5)	0150	1
				-----*		
R	77	66-10655-9		CLIP, ENGINE WIRING SUPPORT (ENGINES NO. 2 AND 3)	0150	1
R	77	66-10655-9		CLIP, ENGINE WIRING SUPPORT (ENGINE NO. 4).	0150	1
R	78	66-10655-800		CLIP, ENGINE WIRING SUPPORT (ENGINES NO. 2 AND 3)	0150	1
R	79	66-10655-2		CLIP, ENGINE WIRING SUPPORT (ENGINES NO. 2 AND 3)	0150	1
R	79	66-10655-2		CLIP, ENGINE WIRING SUPPORT (ENGINE NO. 4).	0150	1
R	80	66-10655-875		CLIP, ENGINE WIRING SUPPORT (ENGINE NO. 1).	0150	1
				ATTACHING PARTS		
R		NAS1304-4W		BOLT, (USED WITH 66-10655-875).	0150	1
				-----*		
R	81	69-42418-2		BRACKET, WIRE SUPPORT (ENGINES NO. 2 AND 3)	0150	1
R	81	69-42418-2		BRACKET, WIRE SUPPORT (ENGINE NO. 4).	0150	1
				ATTACHING PARTS		
R		NAS603-6		SCREW	0150	2
R		NAS679A3W		NUT	0150	2
				-----*		
R	82	66-10655-11		CLIP, ENGINE WIRING SUPPORT (ENGINE NO. 1).	0150	1
				ATTACHING PARTS		
R		NAS1303-3W		BOLT.	0150	1
R		BACN10FX1		NUT	0150	1
				-----*		
R	85	65-11610-8		CONDUIT	0150	1
R	86	66-10655-6		CLIP, ENGINE WIRING SUPPORT (ENGINES NO. 2, 3 AND 4)	0150	1
R	87	66-10655-9		CLIP, ENGINE WIRING SUPPORT (ENGINES NO. 2 AND 3)	0150	1
R	87	66-10655-9		CLIP, ENGINE WIRING SUPPORT (ENGINE NO. 4).	0150	1
R	89	66-10655-876		CLIP, ENGINE WIRING SUPPORT (ENGINES NO. 2, 3 AND 4)	0150	2
R	90	66-10655-812		CLIP, ENGINE WIRING SUPPORT (ENGINES NO. 1, 2, 3 AND 4)	0150	1
				ATTACHING PARTS		
R		NAS603-8		SCREW, (USED WITH 66-10655-812)	0150	1
R		NAS679A3W		NUT, (USED WITH 66-10655-812)	0150	1
				-----*		
R	91	66-10655-5		CLIP, ENGINE WIRING SUPPORT (ENGINE NO. 1).	0150	1
R	91	66-10655-5		CLIP, ENGINE WIRING SUPPORT (ENGINES NO. 2, 3 AND 4)	0150	1
				ATTACHING PARTS		
R		NAS517-3-2		SCREW	0150	1
R		NAS679A3W		NUT	0150	1
				-----*		
R	92	66-11473-2		CLIP, TERMINAL STRIP ZEE (ENGINE NO. 1)	0150	1
				ATTACHING PARTS		
R		AN5-7A		BOLT.	0150	1
				-----*		
R	93	66-10655-4		CLIP, ENGINE WIRING SUPPORT	0150	1
R	94	66-10655-9		CLIP, ENGINE WIRING SUPPORT	0150	1
				ATTACHING PARTS		
R		AN5-11A		BOLT.	0150	1
				-----*		
R	96	66-10655-6		CLIP, ENGINE WIRING SUPPORT	0150	1
R	97	66-10655-3		CLIP, ENGINE WIRING SUPPORT	0150	1
				ATTACHING PARTS		
R		NAS603-5		SCREW, (USED WITH 66-10655-3)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE					EFF FROM TO	UNITS PER ASSY		
			1	2	3	4	5	6	7		
R	28	NAS679A3W	. NUT, (USED WITH 66-10655-3)							0150	1
R	98	AN743C12	. BRACKET							0150	2
R	98A	AN743C12	. BRACKET							0101	1
R	98A	69-55331-2	. BRACKET, ENGINE							0250	1
R	99	66-10655-802	. CLIP, ENGINE WIRING SUPPORT							0150	1
R		NAS603-6	. ATTACHING PARTS							0150	3
R	100	66-10655-11	. CLIP, ENGINE WIRING SUPPORT (HUSH KIT).							0150	1
R		NAS603-10	. ATTACHING PARTS							0150	1
R		NAS679A3W	. SCREW							0150	1
R	101	66-10655-6	. NUT							0150	1
R		AN4-4A	. CLIP, ENGINE WIRING SUPPORT							0150	1
R		NAS679A3W	. ATTACHING PARTS							0150	1
R	102	66-10655-5	. BOLT							0150	1
R		NAS603-8	. NUT							0150	1
R		NAS679A3W	. CLIP, ENGINE WIRING SUPPORT							0150	1
R	103	66-10655-809	. ATTACHING PARTS							0150	1
R	104	AN960-416L	. SCREW							0150	1
R	105	66-10655-3	. NUT							0150	1
R		NAS603-6	. CLIP, ENGINE WIRING SUPPORT							0150	1
R		NAS679A3W	. WASHER, (USED WITH 66-10655-809).							0150	1
R	106	66-10655-2	. CLIP, ENGINE WIRING SUPPORT							0150	1
R	107	66-10310-6	. CLIP, ENGINE WIRING SUPPORT							0150	1
R	108	66-11473-2	. CLIP, TERMINAL STRIP ZEE							0150	1
R	111	66-10655-2	. CLIP, ENGINE WIRING SUPPORT							0150	1
R	112	66-10655-11	. CLIP, ENGINE WIRING SUPPORT							0150	1
R	113	66-10655-804	. CLIP, ENGINE WIRING SUPPORT							0150	1
R		AN5-4A	. ATTACHING PARTS							0150	1
R		NAS679A5	. BOLT, (USED WITH 66-10655-804).							0150	1
R	114	66-10655-802	. NUT, (USED WITH 66-10655-804)							0150	1
R		NAS1103-2W	. CLIP, ENGINE WIRING SUPPORT							0150	1
R		AN960C10L	. ATTACHING PARTS							0150	1
R		NAS679A3W	. BOLT							0150	1
R	118	66-10655-2	. WASHER							0150	1
R		65-11199-13	. NUT							0150	1
R	119	66-10655-804	. CLIP, ENGINE WIRING SUPPORT							0150	1
R		65-11199-14	. BUNDLE ASSY, ENGINE INTERPHONE SERVICE SYSTEM							0150	1
R		65-23767-107	. CLIP, ENGINE WIRING SUPPORT							0150	1
R	120	65-11610-3	. BUNDLE ASSY, WIRE (ENGINES NO. 1, 2, 3 AND 4)							0150	1
R	121	65-23767-43	. BUNDLE ASSY, (NOT USED ON 65-23767-37 AND -93).							0150	1
R			. CONDUIT, (NOT USED ON 65-23767-37, -45, -73, -77							0150	1
R			-93, -103 AND -107)								
R	121	14-013037-168	(OPTIONALS 14-013037-168 (V00000) 167540-0168 (V09384))								
R			. . CABLE ASSY, (V00000) (USED ON 65-23767-37, -45, ...							0150	1
R			-73, -77, -93, -103 AND -107)								
R	121	167540-0168	(OPTIONAL TO 65-23767-43)								
R			. . CABLE ASSY, (V09384) (USED ON 65-23767-37, -45, ...							0150	1
R			-73, -77, -93, -103 AND -107)								
R		69-15006-11	(OPTIONAL TO 65-23767-43)								
R			. BUNDLE ASSY, THRUST REVERSE (ENGINES NO. 1, 2, 3 AND 4)							0150	1
R	127	69-15006-17	. . CABLE ASSY, (USED ON 69-15006-11, -14, -20 AND							0150	1
R			1-72970-1)								
R			(OPTIONALS 14-013037-060 (V00000) 167540-0060 (V09384))								
R	127	14-013037-060	. . CABLE ASSY, (V00000) (USED ON 69-15006-11, -14, ...							0150	1
R			-20 AND 1-72970-1)								
R			(OPTIONAL TO 69-15006-17)								

MISSING ITEM NUMBERS ARE NOT APPLICABLE

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/91

24-02-28

DETAILED PARTS LIST
24-02-28
PAGE 5

Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF	UNITS
			FROM TO	PER ASSY
R 28 127	167540-0060	. . CABLE ASSY, (V09384) (USED ON 69-15006-11, -14, . . -20 AND 1-72970-1) (OPTIONAL TO 69-15006-17)	0150	1
R 128	66-2112	. BRACKET, FIRE DETECTOR ELEMENT SUPPORT. ATTACHING PARTS	0150	2
R 129	AN3C3	. BOLT.	0150	2
R 130	AN520C10R8	. SCREW	0150	2
R 131	AN960C10	. WASHER.	0150	2
R 132	AN960C10L	. WASHER.	0150	2
R 133	AN310C3	. NUT	0150	2
R 134	NAS679C3W	. NUT	0150	2
135	24-20-4A			1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

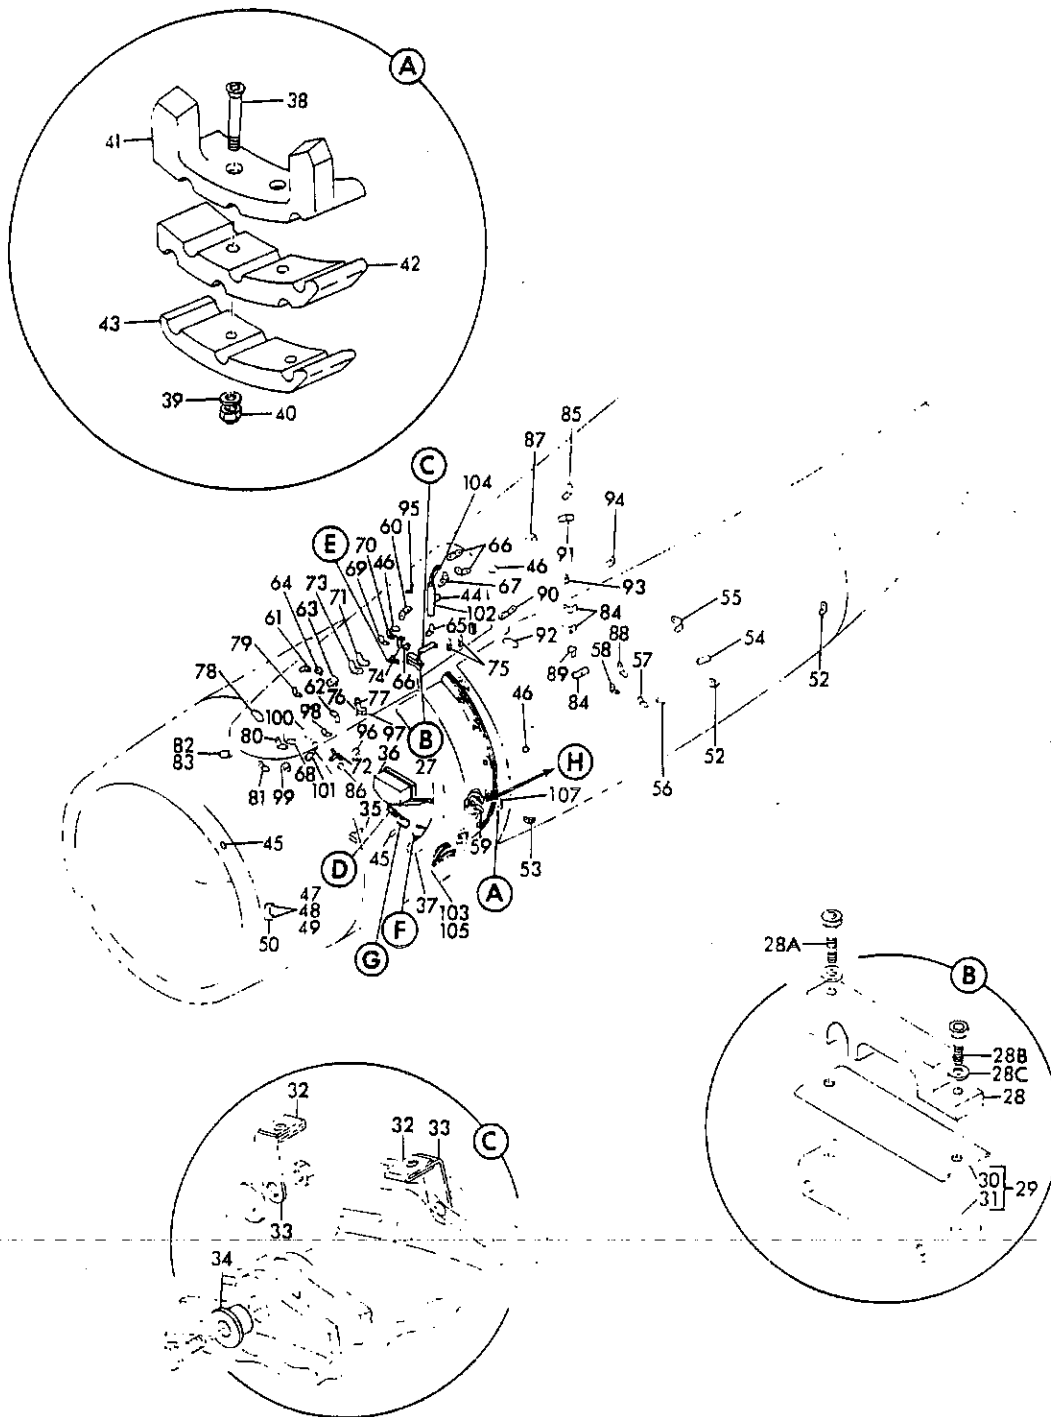


FIGURE 2C. ELECTRICAL INSTL. SECTION 76 FAN NACELLE (SHEET 1)

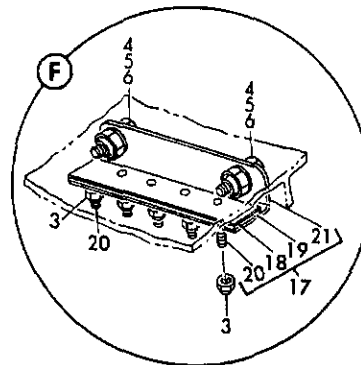
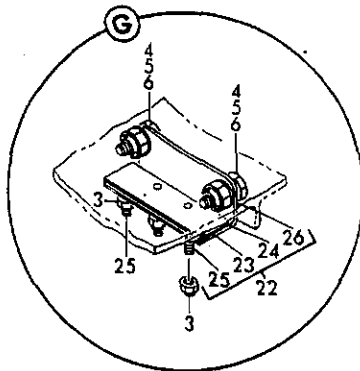
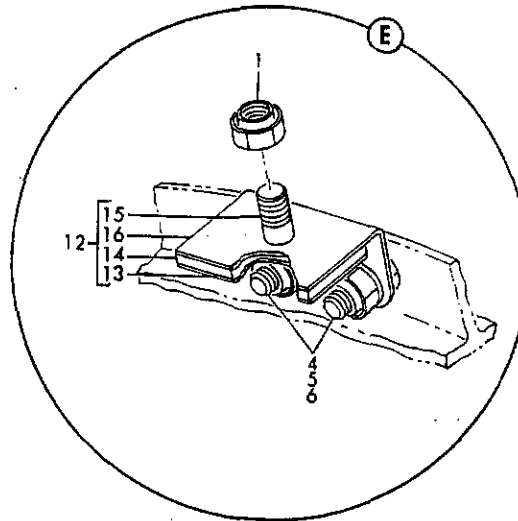
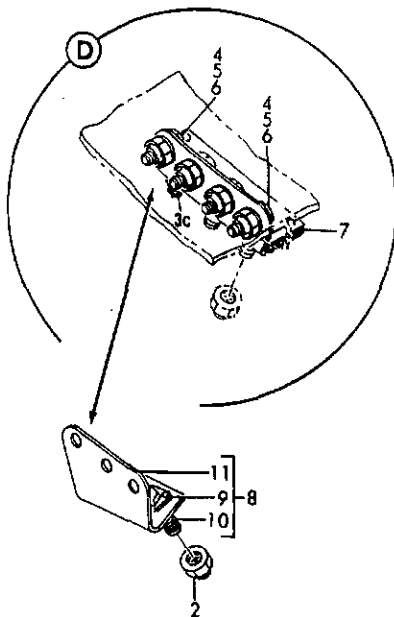


FIGURE 2C. ELECTRICAL INSTL, SECTION 76 FAN NACELLE (SHEET 2)

NOV 21/90

24-02-20

DETAILED PARTS LIST
24-02-2C
PAGE 1

Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
2C	65-11610	ELECTRICAL INSTL, SECTION 76 FAN NACELLE (SEE 71-1, . . FIG. 5, ITEM 10, 71-1, FIG. 58, ITEM 31, 71-1, FIG. 5E, ITEM 33, 71-1, FIG. 5G, ITEM 31 AND 71-1, FIG. 5H, ITEM 26)	5199	RF
1	NAS679A6	. NUT, (USED WITH 69-10806-2)	5199	1
2	NAS1021C6	. NUT	5199	1
3	NAS679A3W	. NUT	5199	8
4	AN5-4A	. BOLT	5199	10
5	AN960C516L	. WASHER	5199	10
6	NAS679A5	. NUT	5199	10
8	66-20258-1	. STUD ASSY, GENERATOR GROUNDING	5199	1
9	BACR10G62	. . RETAINER	5199	1
10	AN6C11A	. . BOLT	5199	1
11	66-20262-1	. . BRACKET	5199	1
12	69-10806-2	. STUD ASSY, JTD3 ENGINE COMPONENTS GROUNDING	5199	1
13	69-10806-8	. . PLATE	5199	1
14	69-10806-7	. . PLATE, ALIGNING	5199	1
15	NAS1065-624-10	. . STUD	5199	1
16	69-10806-6	. . ANGLE	5199	1
17	69-10805-9	. STUD ASSY	5199	1
18	69-10805-3	. . PLATE	5199	1
19	69-10805-4	. . PLATE, ALIGNING	5199	1
20	NAS1065-10-8	. . STUD	5199	5
21	69-10805-10	. . ANGLE	5199	1
22	69-10805-2	. STUD ASSY	5199	1
23	69-10805-8	. . PLATE	5199	1
24	69-10805-7	. . PLATE, ALIGNING	5199	1
25	NAS1065-10-8	. . STUD	5199	3
26	69-10805-6	. . ANGLE	5199	1
27	69-11167-5	. BRACKET, ASSY, ENGINE CABLE SUPPORT	5199	1
		ATTACHING PARTS		
	AN5-4A	. BOLT	5199	2
	AN960C516L	. WASHER	5199	2
	NAS679A5	. NUT	5199	2
28	69-11167-875	. . BLOCK	5199	1
28A	AN3-16A	. . ATTACHING PARTS		
28B	AN3-6A	. . BOLT	5199	1
28C	AN960D10L	. . WASHER	5199	1
29	69-11167-6	. . BRACKET ASSY	5199	1
30	69-11167-3	. . STRIP, RUB.	5199	1
31	69-11167-7	. . BRACKET	5199	1
32	66-11115	. CLIP INSTL, POWER FEEDER SUPPORTS	5199	1
33	BACN10FX1	. . NUT	5199	2
	66-11115-1	. . CLIP	5199	2
		ATTACHING PARTS		
	AN4-6A	. . BOLT	5199	1
	AN945-4P	. . WASHER	5199	1
	NAS679A4W	. . NUT	5199	1
34	3-85296	. . BUSHING, THROTTLE CONTROL	5199	1
35	65-23920-1	. SWITCH INSTL, REVERSER (SEE 78-5, FIG. 4)	5199	1
36	65-11931	. TRANSFORMER INSTL, (SEE FIG. 27)	5199	1
37	65-11952-7	. RACEWAY INSTL, (SEE FIG. 26)	5199	1
	61-26746-12	. BUNDLE ASSY, ENGINES NO. 1, 2, 3 AND 4 GENERATOR	5199	1
		CONTROL ELECTRICAL		
38	NAS514P428-24	. . SCREW	5199	2
39	AN960-416L	. . WASHER	5199	2
40	NAS679A4W	. . NUT	5199	2
41	65-29956-6	. . SPACER, GENERATOR WIRES	5199	1
42	65-29956-5	. . SPACER, GENERATOR WIRES	5199	1
43	65-29956-4	. . SPACER, GENERATOR WIRES	5199	1
44	273-0011-000	. SEAL, INTERFACE GASKET (V71468)	5199	1
45	273-0013-000	. SEAL, INTERFACE GASKET (V71468)	5199	2
46	273-0013-000	. SEAL, INTERFACE GASKET (V71468)	5199	3
47	NAS603-8	. . SCREW	5199	2
48	MS20341-10	. . NUT	5199	2
49	NAS679A3W	. . NUT	5199	2
50	66-11427	. BRACKET, TACHOMETER GROUND	5199	1
		ATTACHING PARTS		
	AN960-516	. WASHER	5199	6
	NAS679A5	. NUT	5199	2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

DETAILED PARTS LIST
24-02-2C
PAGE 2

24-02-2C

RAF
NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2C 52	66-10655-6	. CLIP, ENGINE WIRING SUPPORT	5199	2
54	63-10310-4	. CLIP, ENGINE WIRING SUPPORT	5199	1
55	66-10655-4	. CLIP, ENGINE WIRING SUPPORT	5199	1
56	63-10310-2	. CLIP, ENGINE WIRING SUPPORT	5199	1
57	66-10655-5	. CLIP, ENGINE WIRING SUPPORT	5199	1
	NAS603-6	. ATTACHING PARTS . SCREW, (USED WITH 63-10310-2 AND 66-10655-5).	5199	4
59	66-10655-9	. CLIP, ENGINE WIRING SUPPORT	5199	1
	NAS1305-1	. ATTACHING PARTS . BOLT.	5199	1
	NAS679A5	. NUT	5199	1
60	66-10655-802	. CLIP, ENGINE WIRING SUPPORT (ENGINES NO. 2, 3 AND 4) . ATTACHING PARTS . BOLT.	5199	1
	AN3-4A		5199	1
61	69-45933-1	. BRACKET, (ENGINES NO. 2, 3 AND 4)	5199	1
63	66-10655-808	. CLIP, ENGINE WIRING SUPPORT (ENGINE NO. 4).	5199	1
64	66-10655-808	. CLIP, ENGINE WIRING SUPPORT (ENGINE NO. 4).	5199	1
65	66-10655-5	. CLIP, ENGINE WIRING SUPPORT (ENGINES NO. 2, 3 AND 4) . ATTACHING PARTS . SCREW, (USED WITH 66-10655-5)	5199	1
	NAS603-6	. NUT, (USED WITH 66-10655-5)	5199	1
	NAS679A3W		5199	1
66	66-10655-9	. CLIP, ENGINE WIRING SUPPORT (ENGINES NO. 2, 3 AND 4)	5199	3
67	66-10655-800	. CLIP, ENGINE WIRING SUPPORT (ENGINES NO. 2 AND 3)	5199	1
68	66-10655-2	. CLIP, ENGINE WIRING SUPPORT (ENGINES NO. 2, 3 AND 4)	5199	1
69	66-10655-875	. CLIP, ENGINE WIRING SUPPORT (ENGINE NO. 1).	5199	1
	NAS1304-4W	. ATTACHING PARTS . BOLT, (USED WITH 66-10655-875).	5199	1
71	66-10655-11	. CLIP, ENGINE WIRING SUPPORT (ENGINE NO. 1).	5199	1
	NAS1303-3W	. ATTACHING PARTS . BOLT.	5199	1
	BACN10FX1	. NUT	5199	1
72	65-11610-8	. CONDUIT	5199	1
73	66-10655-6	. CLIP, ENGINE WIRING SUPPORT (ENGINES NO. 2, 3 AND 4)	5199	1
74	66-10655-9	. CLIP, ENGINE WIRING SUPPORT (ENGINES NO. 2, 3 AND 4)	5199	1
75	66-10655-876	. CLIP, ENGINE WIRING SUPPORT (ENGINES NO. 2, 3 AND 4)	5199	2
76	66-10655-812	. CLIP, ENGINE WIRING SUPPORT (ENGINES NO. 1, 2, 3 AND 4) . ATTACHING PARTS . SCREW, (USED WITH 66-10655-812)	5199	1
	NAS603-8	. NUT, (USED WITH 66-10655-812)	5199	1
	NAS679A3W		5199	1
77	66-10655-5	. CLIP, ENGINE WIRING SUPPORT (ENGINE NO. 1).	5199	1
77	66-10655-5	. CLIP, ENGINE WIRING SUPPORT (ENGINES NO. 2, 3 AND 4) . ATTACHING PARTS . SCREW	5199	1
	NAS517-3-2	. NUT	5199	1
	NAS679A3W		5199	1
78	66-11473-2	. CLIP, TERMINAL STRIP ZEE (ENGINE NO. 1)	5199	1
	AN5-7A	. ATTACHING PARTS . BOLT.	5199	1
79	66-10655-4	. CLIP, ENGINE WIRING SUPPORT	5199	1
80	66-10655-9	. CLIP, ENGINE WIRING SUPPORT	5199	1
	AN5-11A	. ATTACHING PARTS . BOLT.	5199	1
81	66-10655-6	. CLIP, ENGINE WIRING SUPPORT	5199	1
82	66-10655-3	. CLIP, ENGINE WIRING SUPPORT	5199	1
	NAS603-5	. ATTACHING PARTS . SCREW, (USED WITH 66-10655-3)	5199	1
	NAS679A3W	. NUT, (USED WITH 66-10655-3)	5199	1
84	AN743C12	. BRACKET	5199	3
85	66-10655-802	. CLIP, ENGINE WIRING SUPPORT	5199	1
	NAS603-6	. ATTACHING PARTS . SCREW	5199	3
86	66-10655-11	. CLIP, ENGINE WIRING SUPPORT (HUSH KIT).	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/90

24-02-20

DETAILED PARTS LIST
24-02-20
PAGE 3

Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2C	NAS603-10 NAS679A3W		ATTACHING PARTS • SCREW • NUT	5199 5199	1 1
87	66-10655-6 AN4-4A NAS679A3W		• CLIP, ENGINE WIRING SUPPORT ATTACHING PARTS • BOLT • NUT	5199 5199 5199	1 1 1
88	66-10655-5 NAS603-8 NAS679A3W		• CLIP, ENGINE WIRING SUPPRT ATTACHING PARTS • SCREW • NUT	5199 5199 5199	1 1 1
89	66-10655-809 AN960-416L		• CLIP, ENGINE WIRING SUPPORT ATTACHING PARTS • WASHER	5199 5199	1 1
90	66-10655-3 NAS603-6 NAS679A3W		• CLIP, ENGINE WIRING SUPPRT ATTACHING PARTS • SCREW • NUT	5199 5199 5199	1 1 1
91	66-10655-2		• CLIP, ENGINE WIRING SUPPORT (ENGINE NO. 1)	5199	1
92	63-10310-6		• CLIP, ENGINE WIRING SUPPORT	5199	1
96	66-10655-2		• CLIP, ENGINE WIRING SUPPORT	5199	1
97	66-10655-11		• CLIP, ENGINE WIRING SUPPORT	5199	1
98	66-10655-804 AN5-4A NAS679A5		• CLIP, ENGINE WIRING SUPPORT ATTACHING PARTS • BOLT, (USED WITH 66-10655-804) • NUT, (USED WITH 66-10655-804)	5199 5199 5199	1 1 1
99	66-10655-802 NAS1103-2W AN960C10L NAS679A3W		• CLIP, ENGINE WIRING SUPPORT ATTACHING PARTS • BOLT • WASHER • NUT	5199 5199 5199 5199	1 1 1 1
100	66-10655-2		• CLIP, ENGINE WIRING SUPPORT	5199	1
101	66-10655-804 61-26748-1 61-26744-26 61-26744-36		• CLIP, ENGINE WIRING SUPPORT • BUNDLE ASSY, ENGINE INTERPHONE SERVICE SYSTEM • BUNDLE ASSY, WIRE (ENGINES NO. 1, 2, 3 AND 4) • BUNDLE ASSY, WIRE (ENGINES NO. 1, 2, 3 AND 4)	5199 5199 5151 5299	1 1 1 1
102	65-11610-3		• CONDUIT	5199	1
103	61-26744-4		• CABLE ASSY (USED ON 61-26744-2, -18, -19, -20, -21, -26, -28, -29, -30, -34, -35, -36)	5199	1
104	400015		• CONNECTOR, (V21465)	5199	1
104	840934		• CONNECTOR, (V33525) (DELETED BY SB 3236)	5151	1
104	876633		• CONNECTOR, (V33525) (ADDED BY SB 3236) (OPTIONAL TO 878581-01 (V33525))	5151	1
104	878581-01		• CONNECTOR, (V33525) (ADDED BY SB 3236) (OPTIONAL 876633 (V33525))	5151	1
104	876633		• CONNECTOR, (V33525) (USED ON 65-23767-130, 61-26744-27, -28, -29, -30, -31, -32, -33, -34, -35, -36, -37, -38, -39)	5299	1
	61-26742-2		• BUNDLE ASSY, THRUST REVERSE (ENGINES NO. 1, 2, 3 AND 4)	5199	1
	61-26750-4		• BUNDLE ASSY, WIRE N1 TACH (ENGINES NO. 1, 2, 3 AND 4)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

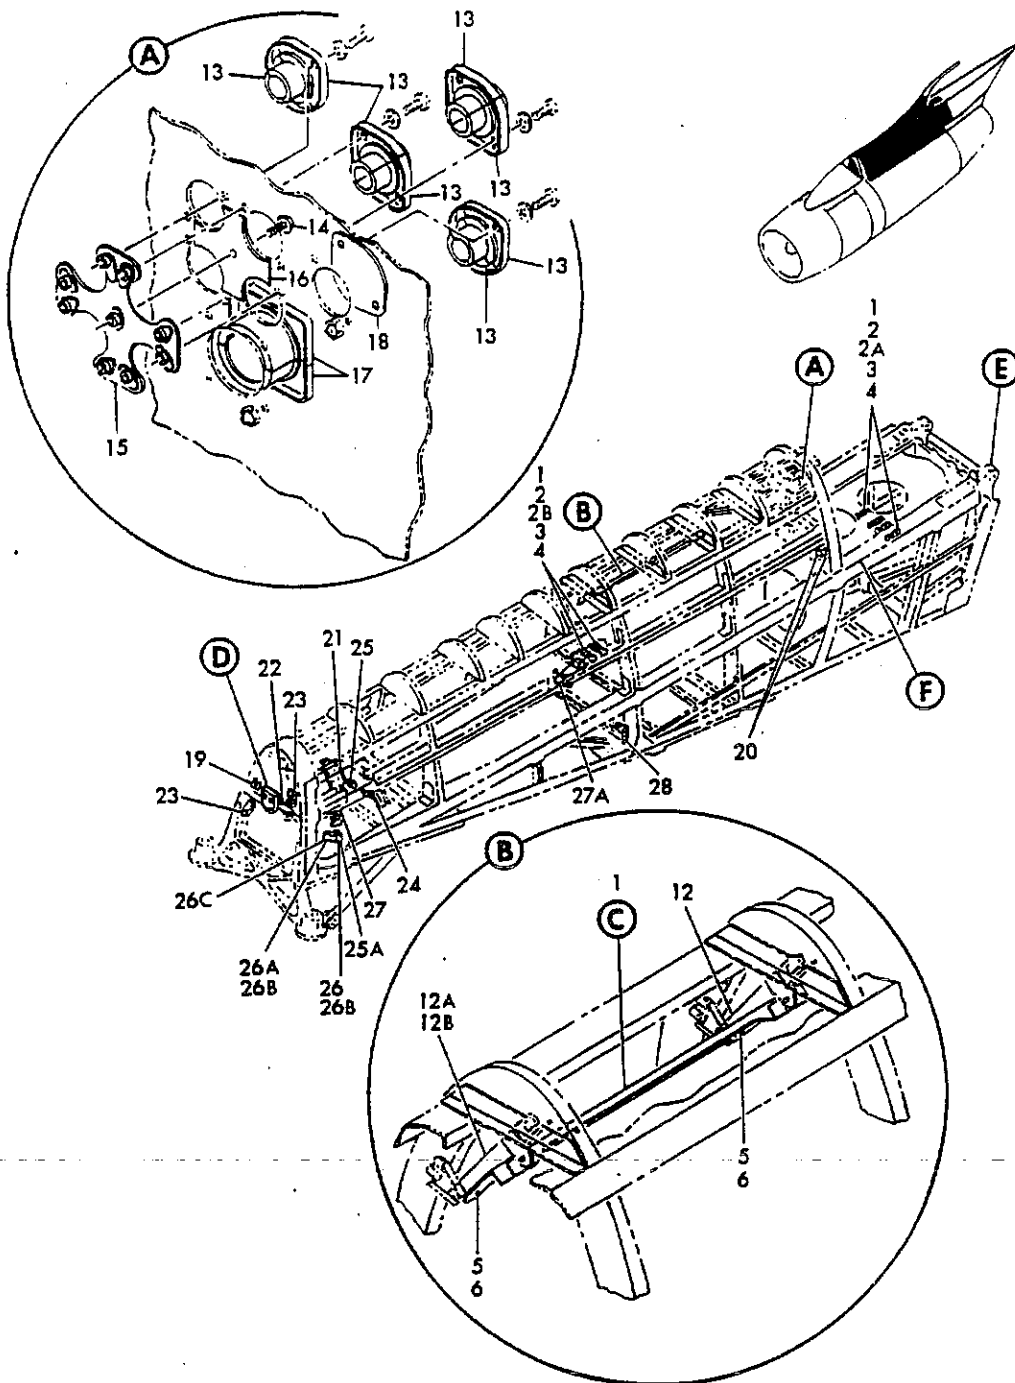


FIGURE 7. ELECTRICAL INSTL. OUTBOARD STRUT (NACELLE NO.1 AND 4) (SHEET 1)

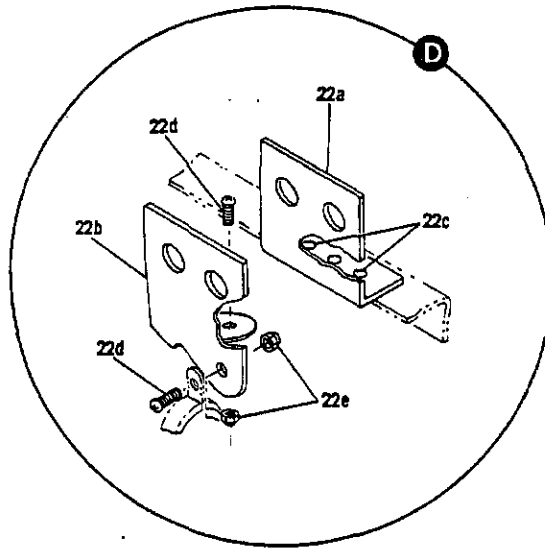
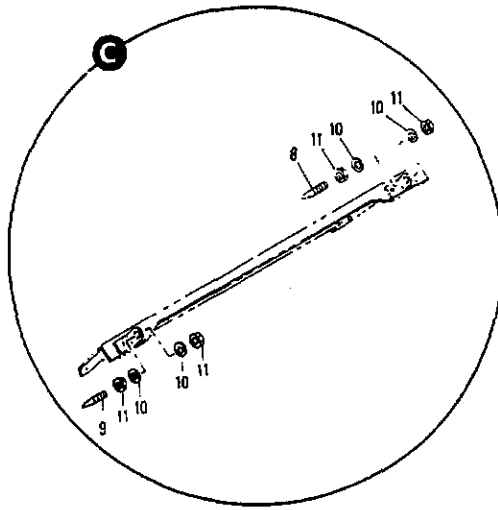


FIGURE 7. ELECTRICAL INSTL, OUTBOARD STRUT (NACELLE NO. 1 AND 4) (SHEET 2)

NOV 21/90

24-02-7

DETAILED PARTS LIST
24-02-7
PAGE 1


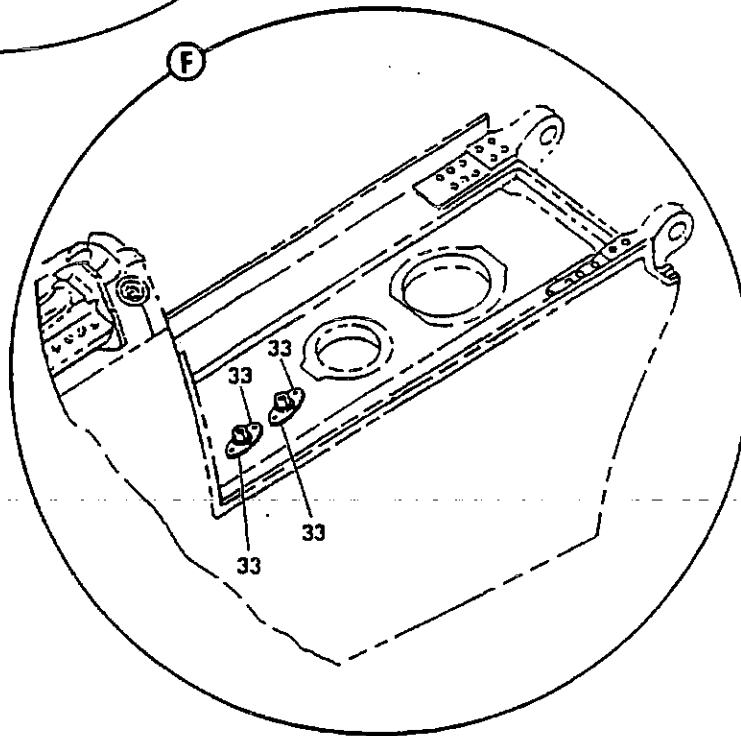


FIGURE 7. ELECTRICAL INSTL, OUTBOARD STRUT (NACELLE NO.1 AND 4) (SHEET 3)

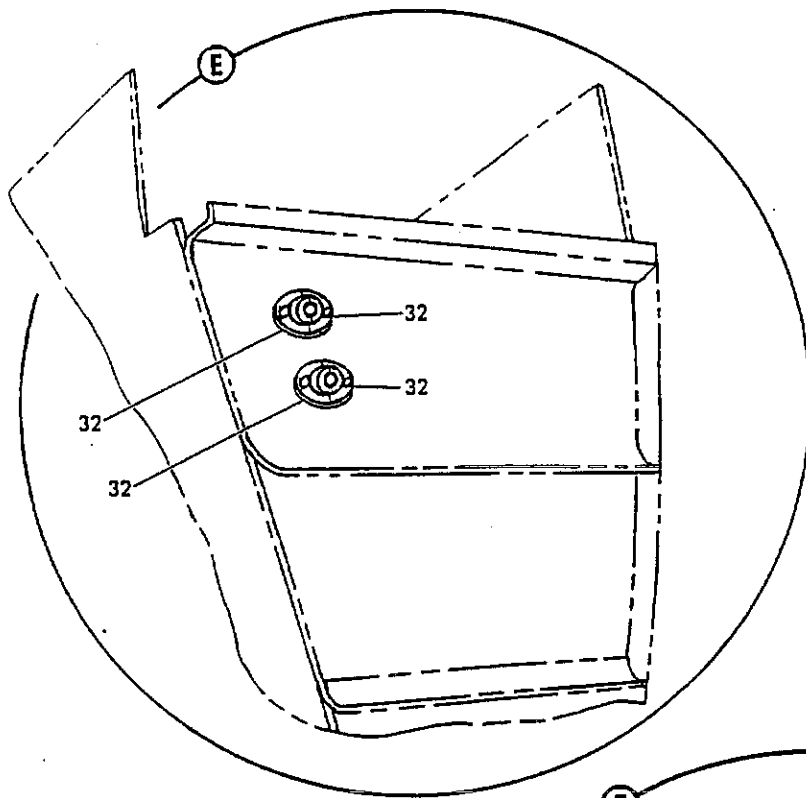

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
7	65-11612-1		ELECTRICAL INSTL, OUTBOARD STRUT (NACELLE NO. 1) (SEE 54-1, FIG. 6A, ITEM 9, 54-1, FIG. 6B, ITEM 8 AND 54-1, FIG. 6C, ITEM 13)		RF
	65-11612		ELECTRICAL INSTL, OUTBOARD STRUT (NACELLE NO. 4) (SEE 54-1, FIG. 6A, ITEM 10, 54-1, FIG. 6B, ITEM 8 AND 54-1, FIG. 6C, ITEM 13)		RF
1	NAS603-12		. SCREW		6
2	AN960D10L		. WASHER.		6
2A	MS95338-43		. WASHER.		6
3	AN341-10		. NUT		6
4	NAS679A3W		. NUT		6
5	NAS603-6		. SCREW		2
6	BACN10FX1		. NUT		2
7	69-11142-2		. BEAM ASSY, STRUT ELECTRICAL BUNDLE SUPPORT.		1
8	66-10796-1		. PIN, STRUT WIRING SUPPORT		1
9	66-10796-2		. PIN, STRUT WIRING SUPPORT		1
10	AN960-416L		. WASHER.		4
11	NAS679A4W		. NUT		4
12	69-11143-1		. SUPPORT ASSY, STRUT ELECTRICAL BUNDLE		1
			ATTACHING PARTS		
	NAS603-6		. SCREW		4
	BACN10FX1		. NUT		4

12A	69-11143-1		. SUPPORT ASSY, BUNDLE.	0150	1
12A	69-11143-6		. SUPPORT ASSY.	5199	1
12B	65-11612-12		. SPACER.	5199	1
13	BACS45A2		. FITTING		8
			ATTACHING PARTS		
	NAS601-8		. SCREW		8
	AN960D6L		. WASHER.		8

14	NAS601-8		. SCREW		1
15	66-5043		. PLATE ASSY, ELECTRICAL WIRE BUNDLE SEAL		1
16	66-5043-2		. FILLER, ELECTRICAL WIRE BUNDLE SEAL PLATE		1
17	BACS45A1		. FITTING		2
18	BACS45A21S		. PLATE		1
			ATTACHING PARTS		
	NAS601-8		. SCREW		6
	AN960D6L		. WASHER.		4
	NAS679A06W		. NUT		6

19	182-1-1002		. RECEPTACLE, (VO2660).		1
			ATTACHING PARTS		
	NAS600-5		. SCREW		4
	NAS679A04W		. NUT		4

20	BACS45A2		. FITTING		2
			ATTACHING PARTS		
	NAS601-8		. SCREW		2
	NAS679A06W		. NUT		2

21	66-10807-1		. BRACKET ASSY, CONDUIT SUPPORT		1
			ATTACHING PARTS		
	NAS603-6		. SCREW		1

21	66-10807		. BRACKET, CONDUIT SUPPORT.		1
22A	69-45933-2		. BRACKET ASSY, WIRE BUNDLE SUPPORT		1
			ATTACHING PARTS		
22C	MS20615-5M		. RIVET		3

23	63-10244		. CLIP, ELECTRICAL GROUND		2
			ATTACHING PARTS		
	NAS1103-3		. BOLT.		4
	AN960PD10L		. WASHER.		4
	NAS679A3W		. NUT		4

24	66-10655-15		. CLIP, ENGINE ELECTRIC WIRING SUPPORT (USED ON 65-11612-1 (NACELLE NO. 1))		1
24	66-10655-15		. CLIP, ENGINE ELECTRIC WIRING SUPPORT (USED ON 65-11612)		1
			ATTACHING PARTS		
	NAS603-6		. SCREW		1
	NAS679A3W		. NUT		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE					

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
7	28	69-42418-1	. BRACKET, FIRE DETECTOR WIRE SUPPORT								1
		NAS623-3-7	. ATTACHING PARTS								2
			. SCREW								
			-----*								
		361-89-90-74340-003	. ENGINE NO. 1 PYLON ELECTRICAL PASS THRU INSTL,.							0150	RF
			(A/R ONLY) (VS2500) (ADDED BY RAF 7211.019-225)								
			(SEE 54-01, FIG. 6B, ITEM 40)								
		361-89-90-74340-004	. ENGINE NO. 4 PYLON ELECTRICAL PASS THRU INSTL,.							0150	RF
			(A/R ONLY) (VS2500) (ADDED BY RAF 7211.019-225)								
			(SEE 54-01, FIG. 6B, ITEM 40)								
	32	BACS45A13	. SEAL FITTING HALF							0150	4
			. ATTACHING PARTS								
		NAS603-8	. SCREW							0150	4
		AN960JD10L	. WASHER.							0150	8
		NAS679A3W	. NUT							0150	4
			-----*								
	33	BACS45A13	. SEAL FITTING HALF							0150	4
			. ATTACHING PARTS								
		NAS603-8	. SCREW							0150	4
		AN960JD10L	. WASHER.							0150	8
		NAS679A3W	. NUT							0150	4
			-----*								

MISSING ITEM NUMBERS ARE NOT APPLICABLE

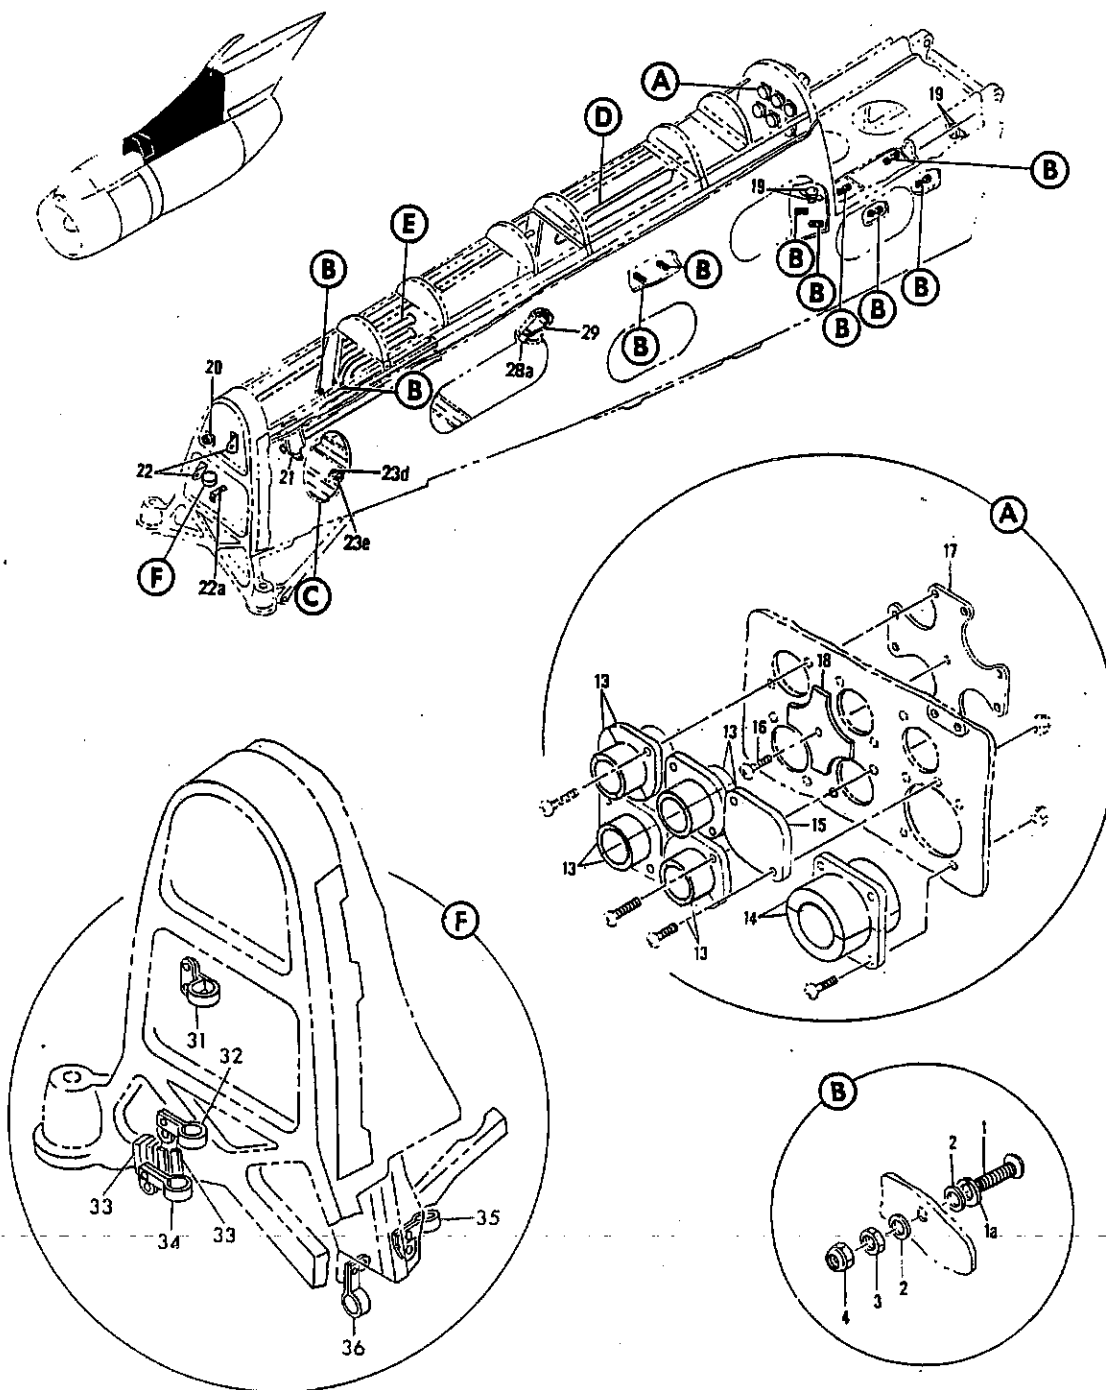


FIGURE 10. ELECTRICAL INST., INBOARD STRUT (SHEET 1)

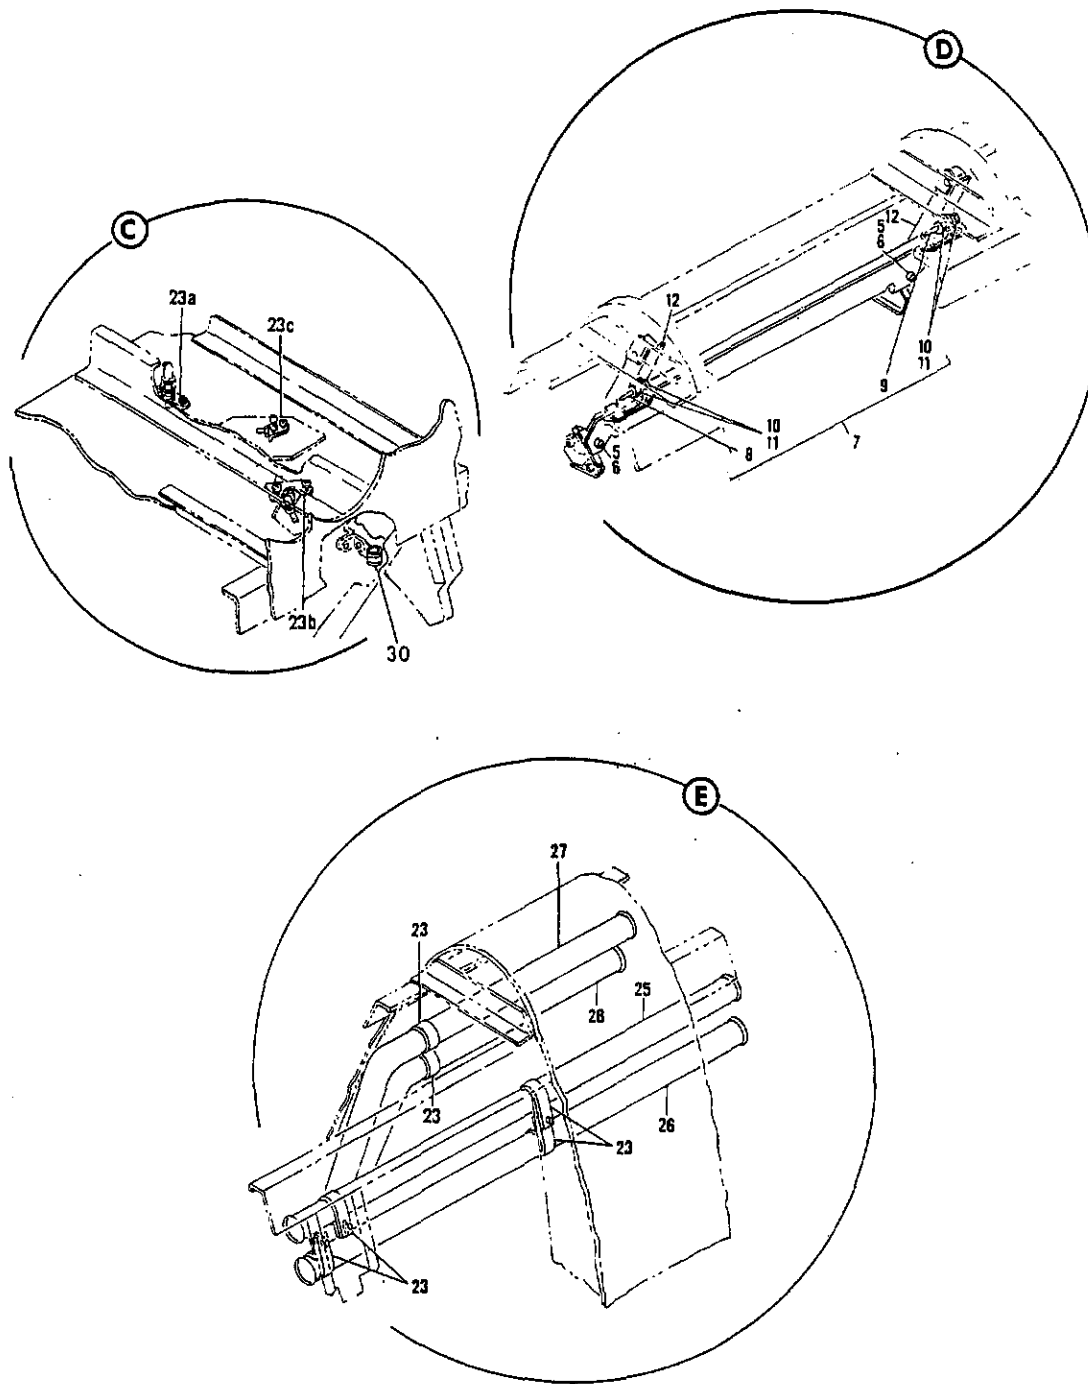


FIGURE 10. ELECTRICAL INSTL, INBOARD STRUT (SHEET 2)

NOV 21/90

24-02-10

DETAILED PARTS LIST
24-02-10
PAGE 1

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
10	65-11611	ELECTRICAL INSTL, INBOARD STRUT (SEE 54-1, FIG. 21A, . ITEM 9, 54-1, FIG. 21B, ITEM 8 AND 54-1, FIG. 21C, ITEM 20)		RF
1	NAS603-12	. SCREW		10
1A	MS35338-43	. WASHER.		10
2	AN960D10L	. WASHER.		20
3	AN341-10	. NUT		10
4	NAS679A3W	. NUT		10
5	NAS603-6	. SCREW		2
6	BACN10FX1	. NUT		2
7	69-11142-1	. BEAM ASSY, STRUT ELECTRICAL BUNDLE SUPPORT.		1
8	66-10796-1	. PIN, STRUT WIRING SUPPORT		1
9	66-10796-2	. PIN, STRUT WIRING SUPPORT		1
10	AN960-416L	. WASHER.		4
11	NAS679A4W	. NUT		4
12	69-11143-1	. SUPPORT ASSY, STRUT ELECTRICAL BUNDLE		2
		ATTACHING PARTS		
	NAS603-6	. SCREW		4
	BACN10FX1	. NUT		4
13	BACS45A3	. FITTING		8
		ATTACHING PARTS		
	NAS601-7	. SCREW		8
14	BACS45A1	. FITTING		2
15	BACS45A21	. PLATE		1
		ATTACHING PARTS		
	NAS601-7	. SCREW		6
	NAS679A06W	. NUT		6
16	NAS601-7	. SCREW		1
17	BACS45A4	. PLATE		1
18	BACS45A9	. FILLER.		1
19	BACS45A2	. FITTING		4
		ATTACHING PARTS		
	NAS601-7	. SCREW		4
	NAS679A06W	. NUT		4
20	182-1-1002	. RECEPTACLE, (VO2660).		1
		ATTACHING PARTS		
	NAS600-5	. SCREW		4
	NAS679A04W	. NUT		4
21	66-10790	. BRACKET ASSY, STRUT CONDUIT SUPPORT		1
		ATTACHING PARTS		
	NAS603-6	. SCREW		1
	BACN10FX1	. NUT		1
22	63-10244	. CLIP, ELECTRICAL GROUND		2
		ATTACHING PARTS		
	NAS1103-3	. BOLT.		4
	AN960PD10L	. WASHER.		4
	NAS679A3W	. NUT		4
22A	66-10655-15	. CLIP, ENGINE ELECTRICAL WIRING SUPPORT.		1
		ATTACHING PARTS		
	NAS603-6	. SCREW		1
	NAS679A3W	. NUT		1
23	AN742F16	. CLAMP		6
		ATTACHING PARTS		
	NAS603-6	. SCREW		4
	NAS603-6	. SCREW		1
	BACN10FX4	. NUT		1
	BACN10FX2	. NUT		2
25	65-11611-1	. CONDUIT, INBOARD STRUT ELECTRICAL		1
26	65-11611-2	. CONDUIT, INBOARD STRUT ELECTRICAL		1
27	65-11611-3	. CONDUIT		1
		(OPTIONAL 65-11612-4)		
27	65-11612-4	. CONDUIT		1
		(OPTIONAL TO 65-11611-3)		
28	65-11611-4	. CONDUIT		1
		(OPTIONAL 65-11612-5)		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
10 28	65-11612-5	.	CONDUIT	.	.	.	.	.		1
		.	(OPTIONAL TO 65-11611-4)	.	.	.	.	.		
29	69-42418-1	.	BRACKET, FIRE DETECTOR WIRE SUPPORT	.	.	.	.	.		1
		.	ATTACHING PARTS	.	.	.	.	.		
	NAS623-3-7	.	SCREW	.	.	.	.	.		2
30	TA5000LH10A	.	CLAMP, (V84971)	.	.	.	.	.		1
31	TA5003BH20	.	CLAMP, (V84971)	.	.	.	.	.		1
33	BACC10DDC19	.	CLAMP	.	.	.	.	.		2
34	TA5000LH20A	.	CLAMP, (V84971) (FOR REPLACEMENT ORDER.	.	.	.	.	.		1
		.	TA123004B20EP00)	.	.	.	.	.		
34	TA123004B20EP00	.	CLAMP, (V84971) (REPLACEMENT FOR.	.	.	.	.	.		1
		.	TA5000LH20A)	.	.	.	.	.		
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

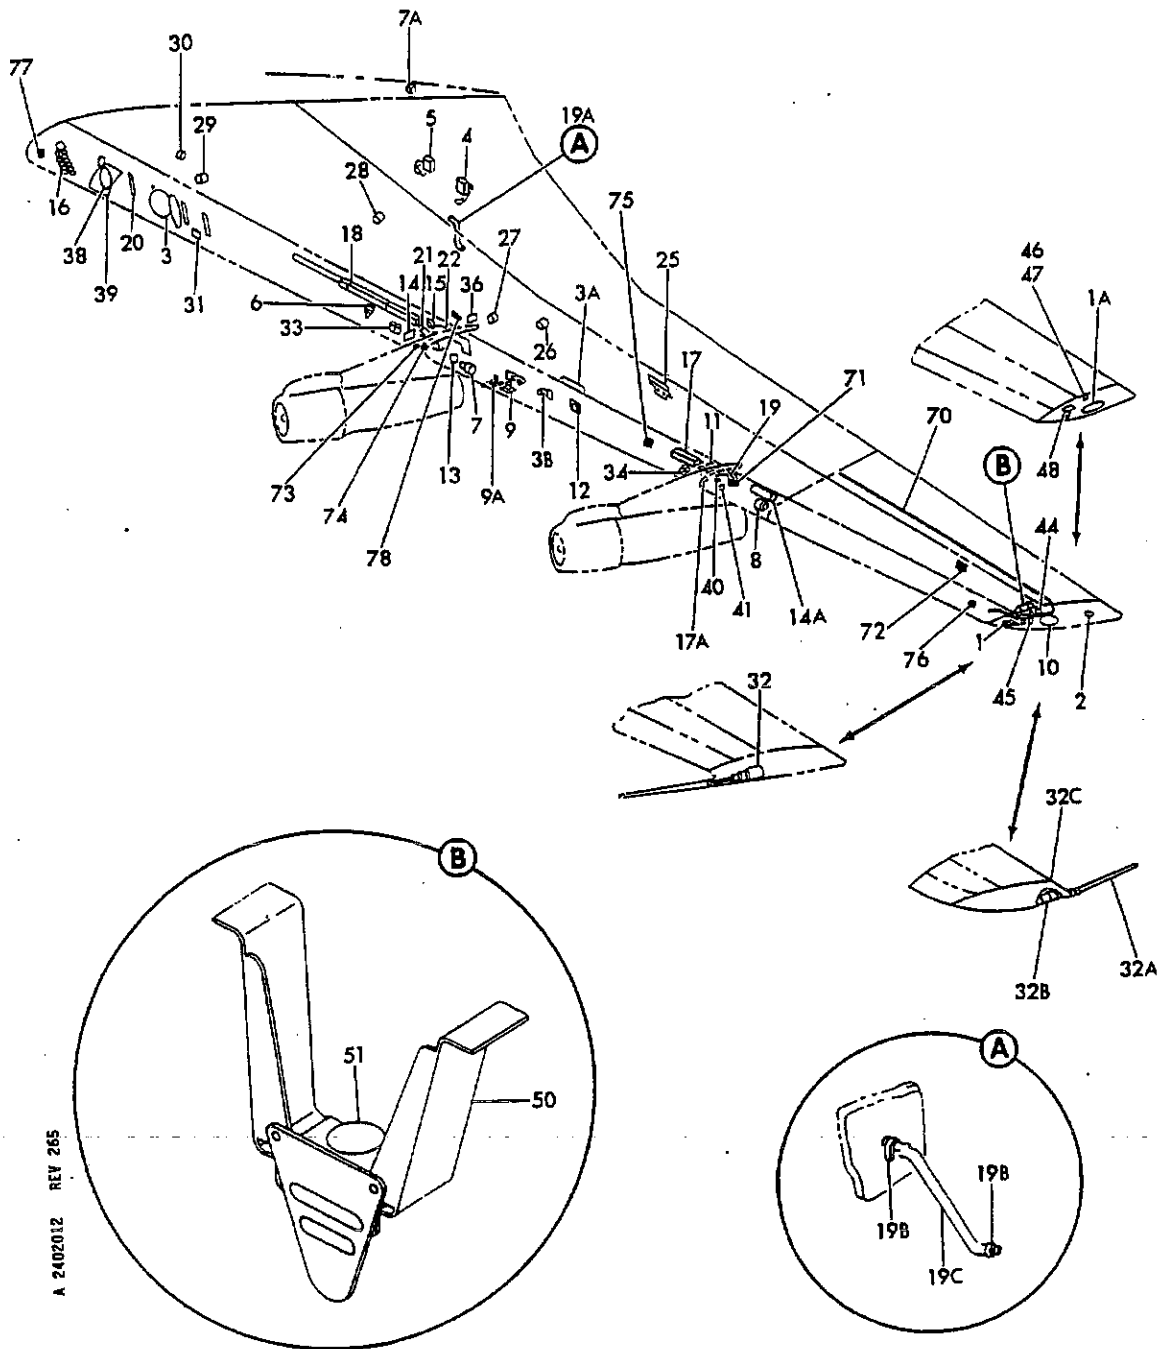


FIGURE 12. ELECTRICAL INSTL. SECTION 22 WING

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
12		ELECTRICAL INSTL, SECTION 22 WING, (LH AND RH).		
	50-5529-13	WING WIRING ROUTE, (A/R ONLY)	0150	
		. ELECTRICAL INSTL, SECTION 22 WING (LH) (SEE 57-1, . . .	0150	RF
		FIG. 1, ITEM 27)		
	50-5529-13	. ELECTRICAL INSTL, SECTION 22 WING (LH) (VARIABLE. . .	5199	RF
		DWG;50-5529-5004) (SEE 57-1, FIG. 1, ITEM 27)		
	50-5529-14	. ELECTRICAL INSTL, SECTION 22 WING (RH) (SEE 57-1, . . .	0150	RF
		FIG. 1, ITEM 27)		
	50-5529-14	. ELECTRICAL INSTL, SECTION 22 WING (RH) (VARIABLE. . .	5199	RF
		DWG;50-5529-5013) (SEE 57-1, FIG. 1, ITEM 27)		
1	69-14522-1	. . LIGHT INSTL, WING BUTTOCK LINE 779.18 WING TIP. . .		1
		NAVIGATION (LH ONLY) (SEE 33-1, FIG. 11)		
1	69-14522-2	. . LIGHT INSTL, WING BUTTOCK LINE 779.18 WING TIP. . .		1
		NAVIGATION (RH ONLY) (SEE 33-1, FIG. 11)		
2	65-20690-1	. . LIGHT INSTL, RETRACTABLE LANDING (LH ONLY).		1
2	65-20690-2	. . LIGHT INSTL, RETRACTABLE LANDING (RH ONLY).		1
		. . LIGHTS, (SEE 33-1, FIG. 15)		
3	50-9372-1	. . LIGHT INSTL, LANDING AND TAXI (LH ONLY) (SEE 33-1, .		1
		FIG. 13)		
3	50-9372-2	. . LIGHT INSTL, LANDING AND TAXI (RH ONLY) (SEE 33-1, .		1
		FIG. 13)		
3A	65-2982-1	. . LIGHT INSTL, PRESSURE FUELING CONTROL (LH ONLY) . .		1
3A	65-2982-2	. . LIGHT INSTL, PRESSURE FUELING CONTROL (RH ONLY) . .		1
		. . LIGHTS, (SEE 33-2, FIG. 4).		
		. . REQUIRED PLACARDS, (SEE 11-3, FIG. 61).		
4	65-2024-1	. . SWITCH INSTL, MAIN GEAR POSITION (LH ONLY) (SEE . .		1
		32-1, FIG. 35)		
4	65-2024-2	. . SWITCH INSTL, MAIN GEAR POSITION (RH ONLY) (SEE . .		1
		32-1, FIG. 35)		
5	65-2036-1	. . SWITCH INSTL, MAIN GEAR LOCK (LH ONLY) (SEE 32-1, .		1
		FIG. 34)		
5	65-2036-2	. . SWITCH INSTL, MAIN GEAR LOCK (RH ONLY) (SEE 32-1, .		1
		FIG. 34)		
6	65-33463-1	. . SWITCH INSTL, INBOARD WING LEADING EDGE FLAP. . . .		1
		POSITION INDICATION (LH ONLY) (SEE 27-7, FIG. 26)		
6	65-33463-2	. . SWITCH INSTL, INBOARD WING LEADING EDGE FLAP. . . .		1
		POSITION INDICATION (RH ONLY) (SEE 27-7, FIG. 26)		
7	65-19599-1	. . SWITCH INSTL, FRONT SPAR STATION 434 WING LEADING .		1
		EDGE FLAPS POSITION (LH ONLY) (SEE 27-15, FIG. 6)		
7	65-19599-2	. . SWITCH INSTL, FRONT SPAR STATION 434 WING LEADING .		1
		EDGE FLAPS POSITION (RH ONLY) (SEE 27-15, FIG. 6)		
7A	69-17007-1	. . SWITCH INSTL, MAIN WHEEL WELL LIGHT (LH ONLY) (SEE .		1
		33-2, FIG. 2)		
7A	69-17007-2	. . SWITCH INSTL, MAIN WHEEL WELL LIGHT (RH ONLY) (SEE .		1
		33-2, FIG. 2)		
8	65-19526-1	. . SWITCH INSTL, OUTBOARD WING LEADING EDGE SLATS. . .	0103	1
		POSITION (SEE 27-15, FIG. 5)		
8	65-19526-2	. . SWITCH INSTL, OUTBOARD WING LEADING EDGE SLATS. . .	5199	1
		POSITION (SEE 27-15, FIG. 5)		
9	69-9218-7	. . JACK INSTL, FRONT SPAR STATION 496.60 REFUELING . .		1
		STATION INTERPHONE (LH ONLY) (SEE 23-2, FIG. 35)		
9	69-9218-8	. . JACK INSTL, FRONT SPAR STATION 496.60 REFUELING . .		1
		STATION INTERPHONE (RH ONLY) (SEE 23-2, FIG. 35)		
	50-5529-59	. . WIRING PROVISIONS INSTL, LH (LH ONLY)		1
	50-5529-60	. . WIRING PROVISIONS INSTL, RH (RH ONLY)		1
10	69-16504-1	. . . SEAL INSTL, WING STATION 960.112 (LH ONLY) (SEE .		1
		FIG. 15)		
10	69-16504-2	. . . SEAL INSTL, WING STATION 960.112 (RH ONLY) (SEE .	0150	1
		FIG. 15)		
10	69-16504-2	. . . SEAL INSTL, WING STATION 960.112 (RH ONLY). . . .	5199	1
		(VARIABLE DWG;69-16504-5002) (SEE FIG. 15)		
11	65-19389-1	. . . FAIRLEAD INSTL, FRONT SPAR STATION 666.140. . . .		1
		ELECTRICAL (LH ONLY) (SEE FIG. 15)		
11	65-19389-2	. . . FAIRLEAD INSTL, FRONT SPAR STATION 666.140. . . .		1
		ELECTRICAL (RH ONLY) (SEE FIG. 15)		
12	69-16956-1	. . . SEAL INSTL, FRONT SPAR STATION 530.51 ELECTRICAL .		1
		(SEE FIG. 15)		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
12 13	69-16583-1	. . . FAIRLEAD INSTL, FRONT SPAR STATION 422.631. . . . ELECTRICAL (LH ONLY) (SEE FIG. 15)		1
13	69-16583-2	. . . FAIRLEAD INSTL, FRONT SPAR STATION 422.631. . . . ELECTRICAL (RH ONLY) (SEE FIG. 15)		1
14	65-33522-1	. . . FAIRLEAD INSTL, FRONT SPAR STATION 382.66 ELECTRICAL (LH ONLY) (SEE FIG. 15)		1
14	65-33522-2	. . . FAIRLEAD INSTL, FRONT SPAR STATION 382.66 ELECTRICAL (RH ONLY) (SEE FIG. 15)		1
15	65-23404-1	. . . SEAL INSTL, INBOARD DRY BAY ELECTRICAL (LH ONLY) (SEE FIG. 15)		1
15	65-23404-2	. . . SEAL INSTL, INBOARD DRY BAY ELECTRICAL (RH ONLY) (SEE FIG. 15)		1
16	69-6370-1	. . . SEAL INSTL, FRONT SPAR STATION 16.75 ELECTRICAL . (LH ONLY) (SEE FIG. 15)		1
16	69-6370-2	. . . SEAL INSTL, FRONT SPAR STATION 16.75 ELECTRICAL . (RH ONLY) (SEE FIG. 15)		1
17	65-22292-5	. . . RACEWAY INSTL, FRONT SPAR STATION 422 TO 666 WING LEADING EDGE ELECTRICAL (LH ONLY) (SEE FIG. 23A)		1
17	65-22292-6	. . . RACEWAY INSTL, FRONT SPAR STATION 422 TO 666 WING LEADING EDGE ELECTRICAL (RH ONLY) (SEE FIG. 23A)		1
17A	65-24762-1	. . . RACEWAY INSTL, OUTBOARD WING STRUT INTERSECTION . ELECTRICAL (LH ONLY) (SEE FIG. 24)		1
17A	65-24762-2	. . . RACEWAY INSTL, OUTBOARD WING STRUT INTERSECTION . ELECTRICAL (RH ONLY) (SEE FIG. 24)		1
18	65-33521-5	. . . RACEWAY INSTL, FRONT SPAR STATION 131 TO 382 WING LEADING EDGE (LH ONLY) (SEE FIG. 22)		1
18	65-33521-6	. . . RACEWAY INSTL, FRONT SPAR STATION 131 TO 382 WING LEADING EDGE (RH ONLY) (SEE FIG. 22)		1
19	65-23323-1	. . . CONDUIT INSTL, FRONT SPAR STATION 666.14 WING . . LEADING EDGE ELECTRICAL (LH ONLY) (SEE 28-1, FIG. 32)		1
19	65-23323-2	. . . CONDUIT INSTL, FRONT SPAR STATION 666.14 WING . . LEADING EDGE ELECTRICAL (RH ONLY) (SEE 28-1, FIG. 32)		1
19A	69-9819-1	. . . CONDUIT INSTL, TORQUE BOX (LH).		1
19A	69-9819-2	. . . CONDUIT INSTL, TORQUE BOX (RH).		1
19B	AN742-16	. . . CLAMP ATTACHING PARTS		2
	NAS603-6P	. . . SCREW		2
	BACN10JC3	. . . NUT		2
19C	69-9819-3	. . . CONDUIT, (LH)		1
19C	69-9819-4	. . . CONDUIT, (RH)		1
20	69-12356-3	. . . ANGLE INSTL, WING LEADING EDGE WIRE SUPPORT (LH . ONLY) (SEE FIG. 17)		1
20	69-12356-4	. . . ANGLE INSTL, WING LEADING EDGE WIRE SUPPORT (RH . ONLY) (SEE FIG. 17)		1
21	65-15348-3	. . . SUPPORT INSTL, INBOARD WING STRUT INTERSECTION. . WIRE (LH ONLY) (SEE FIG. 25)	0151	1
21	65-15348-4	. . . SUPPORT INSTL, INBOARD WING STRUT INTERSECTION. . WIRE (RH ONLY) (SEE FIG. 25)	0151	1
21	65-15348-5	. . . SUPPORT INSTL, INBOARD WING STRUT INTERSECTION. . WIRE (LH ONLY) (SEE FIG. 25)	5299	1
21	65-15348-6	. . . SUPPORT INSTL, INBOARD WING STRUT INTERSECTION. . WIRE (RH ONLY) (SEE FIG. 25)	5299	1
22	65-22783-5	. . . SUPPORT INSTL, FRONT SPAR STATION 382 TO 422 WIRE BUNDLE (LH ONLY) (SEE FIG. 25)		1
22	65-22783-6	. . . SUPPORT INSTL, FRONT SPAR STATION 382 TO 422 WIRE BUNDLE (RH ONLY) (SEE FIG. 25)		1
	69-45097	. . . COVER INSTL, WING STATION 541 REAR SPAR WIRE. . . PROTECTION		1
25	60-2828-1	. . . COVER, REAR SPAR WIRES. ATTACHING PARTS		1
	NAS514P1032-B	. . . SCREW		2
26	65-19840-9	. . . RECEPTACLE AND SEAL INSTL, BOOST PUMP (LH ONLY) .		1
26	65-19840-10	. . . RECEPTACLE AND SEAL INSTL, BOOST PUMP (RH ONLY) .		1
		. . . FUEL, (SEE 28-2, FIG. 5).		
		. . . REQUIRED PLACARDS, (SEE 11-3, FIG. 66).		
27	65-19840-5	. . . RECEPTACLE AND SEAL INSTL, BOOST PUMP (LH ONLY) . (SEE 28-2, FIG. 5)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				


PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 12 27	65-19840-6	.	RECEPTACLE AND SEAL INSTL, BOOST PUMP (RH ONLY) . (SEE 28-2, FIG. 5)		1
R 28	65-19840-7	.	RECEPTACLE AND SEAL INSTL, BOOST PUMP (LH ONLY) . (SEE 28-2, FIG. 5)		1
R 28	65-19840-8	.	RECEPTACLE AND SEAL INSTL, BOOST PUMP (RH ONLY) . (SEE 28-2, FIG. 5)		1
R 29	65-19840-3	.	RECEPTACLE AND SEAL INSTL, BOOST PUMP (LH ONLY) . (SEE 28-2, FIG. 5)		1
R 29	65-19840-4	.	RECEPTACLE AND SEAL INSTL, BOOST PUMP (RH ONLY) . (SEE 28-2, FIG. 5)		1
R 30	65-19840-1	.	RECEPTACLE AND SEAL INSTL, OVERRIDE PUMP (LH. . . ONLY)		1
R 30	65-19840-2	.	RECEPTACLE AND SEAL INSTL, OVERRIDE PUMP (RH. . . ONLY)		1
R 32	65-8611-7	.	FUEL, (SEE 28-2, FIG. 5) REQUIRED PLACARDS, (SEE 11-3, FIG. 67)	0203	1
R 33	65-74808-15	.	ANTENNA AND COMPONENTS INSTL, WING HF COMMUNICATIONS (RH ONLY) (ADDED BY SB 3392)	5199	1
R 33	65-74808-16	.	FILTER INSTL, FRONT SPAR STATION 358.68 WING. . . . LEADING EDGE ENGINE IGNITION RADIO NOISE (LH ONLY) (SEE 23-4, FIG. 56)	5199	1
R 33	65-74808-15	.	FILTER INSTL, FRONT SPAR STATION 358.68 LEADING . . EDGE ENGINE IGNITION RADIO NOISE (ADDED BY SB 2798) (LH ONLY) (SEE 23-4, FIG. 56)	0150	1
R 33	65-74808-16	.	FILTER INSTL, FRONT SPAR STATION 358.68 LEADING . . EDGE ENGINE IGNITION RADIO NOISE (ADDED BY SB 2798) (RH ONLY) (SEE 23-4, FIG. 56)	0150	1
R 34	65-74808-17	.	FILTER INSTL, FRONT SPAR STATION 641.912 WING . . . LEADING EDGE ENGINE IGNITION RADIO NOISE (LH ONLY) (SEE 23-4, FIG. 56)	5199	1
R 34	65-74808-18	.	FILTER INSTL, FRONT SPAR STATION 641.912 WING . . . LEADING EDGE ENGINE IGNITION RADIO NOISE (RH ONLY) (SEE 23-4, FIG. 56)	5199	1
R 34	65-74808-17	.	FILTER INSTL, FRONT SPAR STATION 641.912 LEADING . EDGE ENGINE IGNITION RADIO NOISE (ADDED BY SB 2798) (LH ONLY) (SEE 23-4, FIG. 56)	0150	1
R 34	65-74808-18	.	FILTER INSTL, FRONT SPAR STATION 641.912 LEADING . EDGE ENGINE IGNITION RADIO NOISE (ADDED BY SB 2798) (RH ONLY) (SEE 23-4, FIG. 56)	0150	1
R 36	66-9136	.	TERMINAL STRIP INSTL, LEFT WING STATION 360 FUEL . TEMPERATURE (LH ONLY) (SEE 28-5, FIG. 17)		1
R 65-17000-21		.	BUNDLE INSTL, SECTION 22 ELECTRICAL AND ELECTRONIC LH (VARIABLE DWG;65-17000-5003) (LH ONLY) (SEE APPLICABLE CHAPTER FOR ELECTRICAL BUNDLE ASSEMBLIES)	5199	1
R 65-17000-22		.	BUNDLE INSTL, SECTION 22 ELECTRICAL AND ELECTRONIC RH (VARIABLE DWG;65-17000-5012) (RH ONLY) (SEE APPLICABLE CHAPTER FOR ELECTRICAL BUNDLE ASSEMBLIES)	5199	1
R BACN10JCOB		.	ATTACHING PARTS NUT, (ADDED BY MR68515-34)	5199	2
R 70	361-89-90-74339-001	.	WING WIRING ROUTE, (A/R ONLY) (VS2500)	0150	RF
R 70	361-89-90-74341-001	.	REAR SPAR AND HARNESS INSTL, (LH) (VS2500) (ADDED BY RAF 7211.019-225)	0150	1
R 70	361-89-90-74341-002	.	REAR SPAR AND HARNESS INSTL, (RH) (VS2500) (ADDED BY RAF 7211.019-225)	0150	1
R 71	361-89-90-74340-003	.	CLAMPS INSTL, (SEE 24-02, FIG. 30)	0150	
R 71	361-89-90-74340-004	.	SEALS INSTL, (SEE 24-02, FIG. 31)	0150	
R 71	361-89-90-74340-004	.	DUMMY RECEPTACLE INSTL, (SEE 24-02, FIG. 32) . . . ELECTRICAL PASS THRU INSTL, W STA. 725.236, ... (LH ONLY) (VS2500)	0150	1
R 71	361-89-90-74340-004	.	ELECTRICAL PASS THRU INSTL, W STA. 725.236, ... (RH ONLY) (VS2500)	0150	1
R 72	361-89-90-74341-003	.	SEALS INSTL, (SEE 24-02 FIG. 34)	0150	
R 72	361-89-90-74341-004	.	HARNESS INSTL, ISOLATION VALVE (LH ONLY) (VS2500) . (SEE 24-02, FIG. 33)	0150	1
R 72	361-89-90-74341-004	.	HARNESS INSTL, ISOLATION VALVE (RH ONLY) (VS2500) . (SEE 24-02 FIG. 33)	0150	1
R 391-89-90-72331-019		.	WING ROOT PASS THRU INSTL, (LH & RH) (VS2500) . . . (SEE 24-02, FIG. 33)	0150	RF

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R 12 73	391-89-90-72331-021	. . .	WING	ROOT	PASS	THRU	W.STA	387.00 (LH ONLY). . .	0150	1
R								(VS2500) (SEE 24-02, FIG. 35, ITEM 1)		
R 73	391-89-90-72331-022	. . .	WING	ROOT	PASS	THRU	W.STA	387.00 (RH ONLY). . .	0150	1
R								(VS2500) (SEE 24-02, FIG. 35, ITEM 1)		
R 74	391-89-90-72331-023	. . .	WING	ROOT	PASS	THRU	W.STA	415.50 (LH ONLY). . .	0150	1
R								(VS2500) (SEE 24-02, FIG. 35, ITEM 3)		
R 74	391-89-90-72331-024	. . .	WING	ROOT	PASS	THRU	W.STA	415.50 (RH ONLY). . .	0150	1
R								(VS2500) (SEE 24-02, FIG. 35, ITEM 3)		
R 75	391-89-90-72331-025	. . .	WING	ROOT	PASS	THRU	W.STA	643.50 (LH ONLY). . .	0150	1
R								(VS2500) (SEE 24-02, FIG. 35, ITEM 5)		
R 75	391-89-90-72331-026	. . .	WING	ROOT	PASS	THRU	W.STA	643.50 (RH ONLY). . .	0150	1
R								(VS2500) (SEE 24-02, FIG. 35, ITEM 5)		
R 76	361-89-90-74341-005	. .	DUMMY	RECEPTACLE	INSTL,	F.S.	STA	643.50 RH. . .	0150	1
R								(VS2500) (PYLON FLOOD AND FORMATION LIGHTS		
R								ONLY) (SEE 24-02, FIG. 36)		
R 76	361-89-90-74341-006	. .	DUMMY	RECEPTACLE	INSTL,	F.S.	STA	643.50 RH. . .	0150	1
R								(VS2500) (PYLON FLOOD AND FORMATION LIGHTS		
R								ONLY) (SEE 24-02, FIG. 36)		
R 77	361-89-90-72331-027	. .	SEAL	INSTL,	ELECTRICAL	WIRING,	F.S.S	16.75 R.H. . .	0150	1
R								ONLY (VS2500) (SEE FIG. 37)		
R 77	361-89-90-72331-028	. .	SEAL	INSTL,	ELECTRICAL	WIRING,	F.S.S	16.75 L.H. . .	0150	1
R								ONLY (VS2500) (SEE FIG. 37)		
R 78	391-89-60-71590-001	. .	REPLENISH	VALVE	INSTL,	(L.H.)	(VS2500)	(DUMMY . . .	0150	1
R								RECEPTACLE ONLY) (SEE FIG. 39)		
R 78	391-89-60-71590-002	. .	REPLENISH	VALVE	INSTL,	(R.H.)	(VS2500)	(DUMMY . . .	0150	1
R								RECEPTACLE ONLY) (SEE FIG. 39)		
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

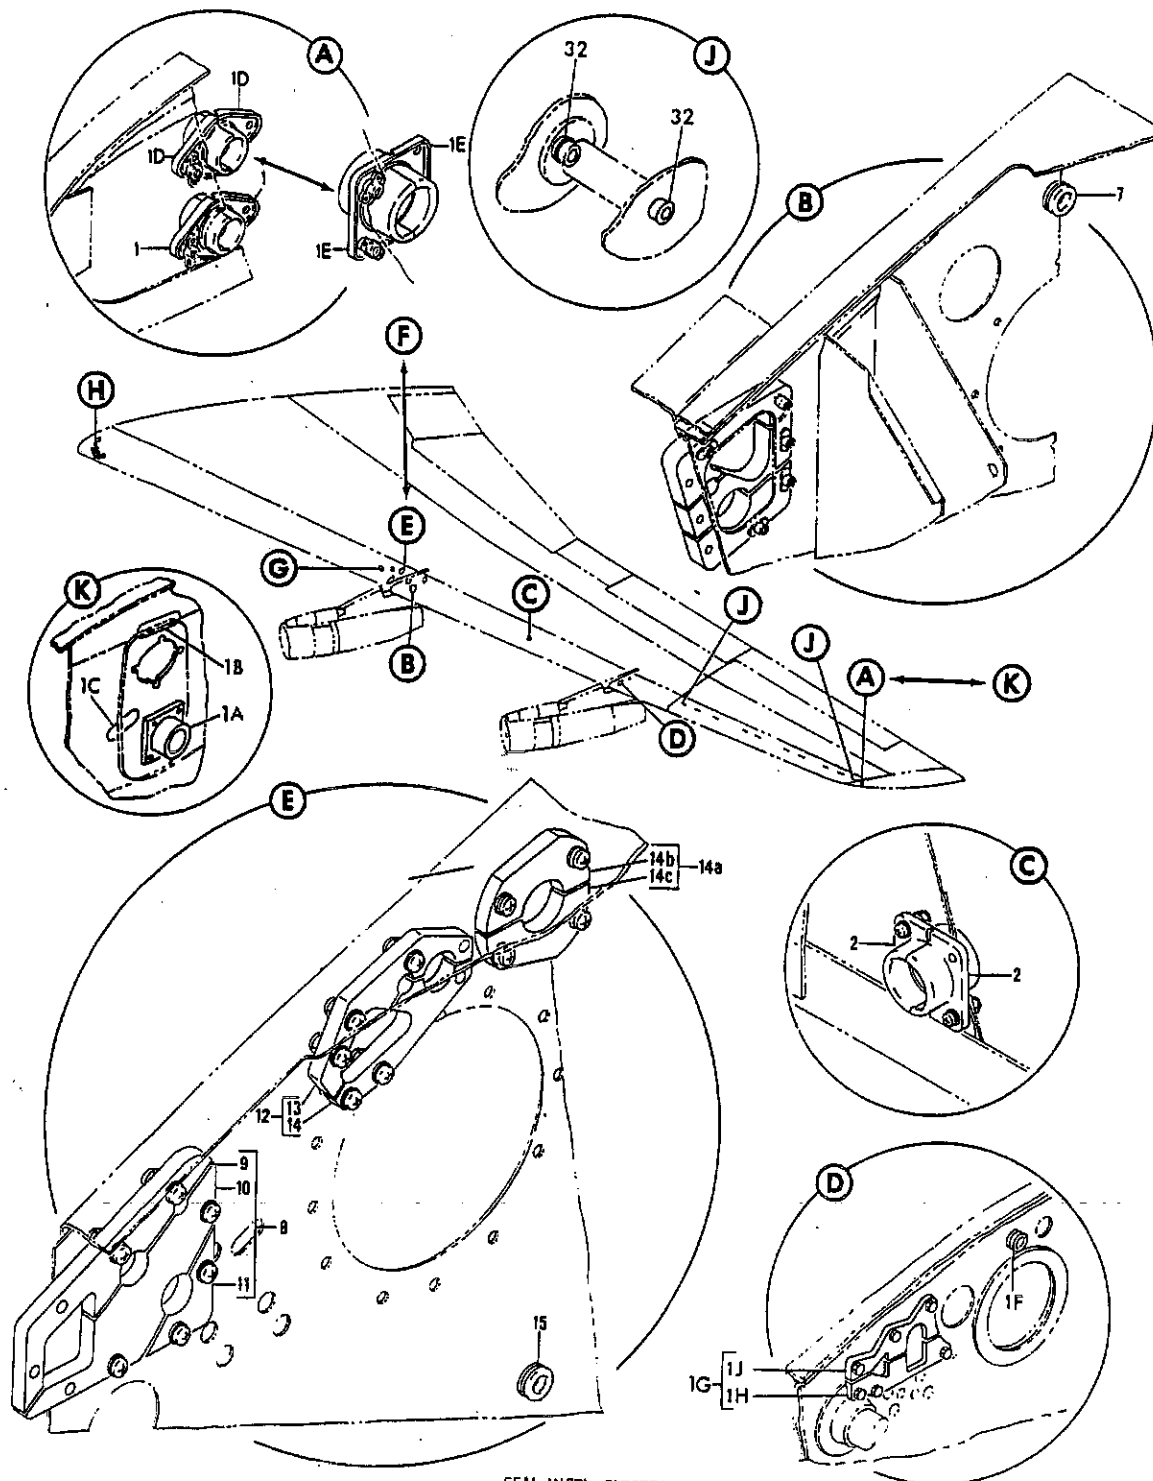

SEAL INSTL. ELECTRICAL
FIGURE 15. FAIRLEAD INSTL, FRONT SPAR STATION 422, 631 TO 666, 14 ELECTRICAL, (SHEET 1)

A 2402015 SHT 2 REV 265

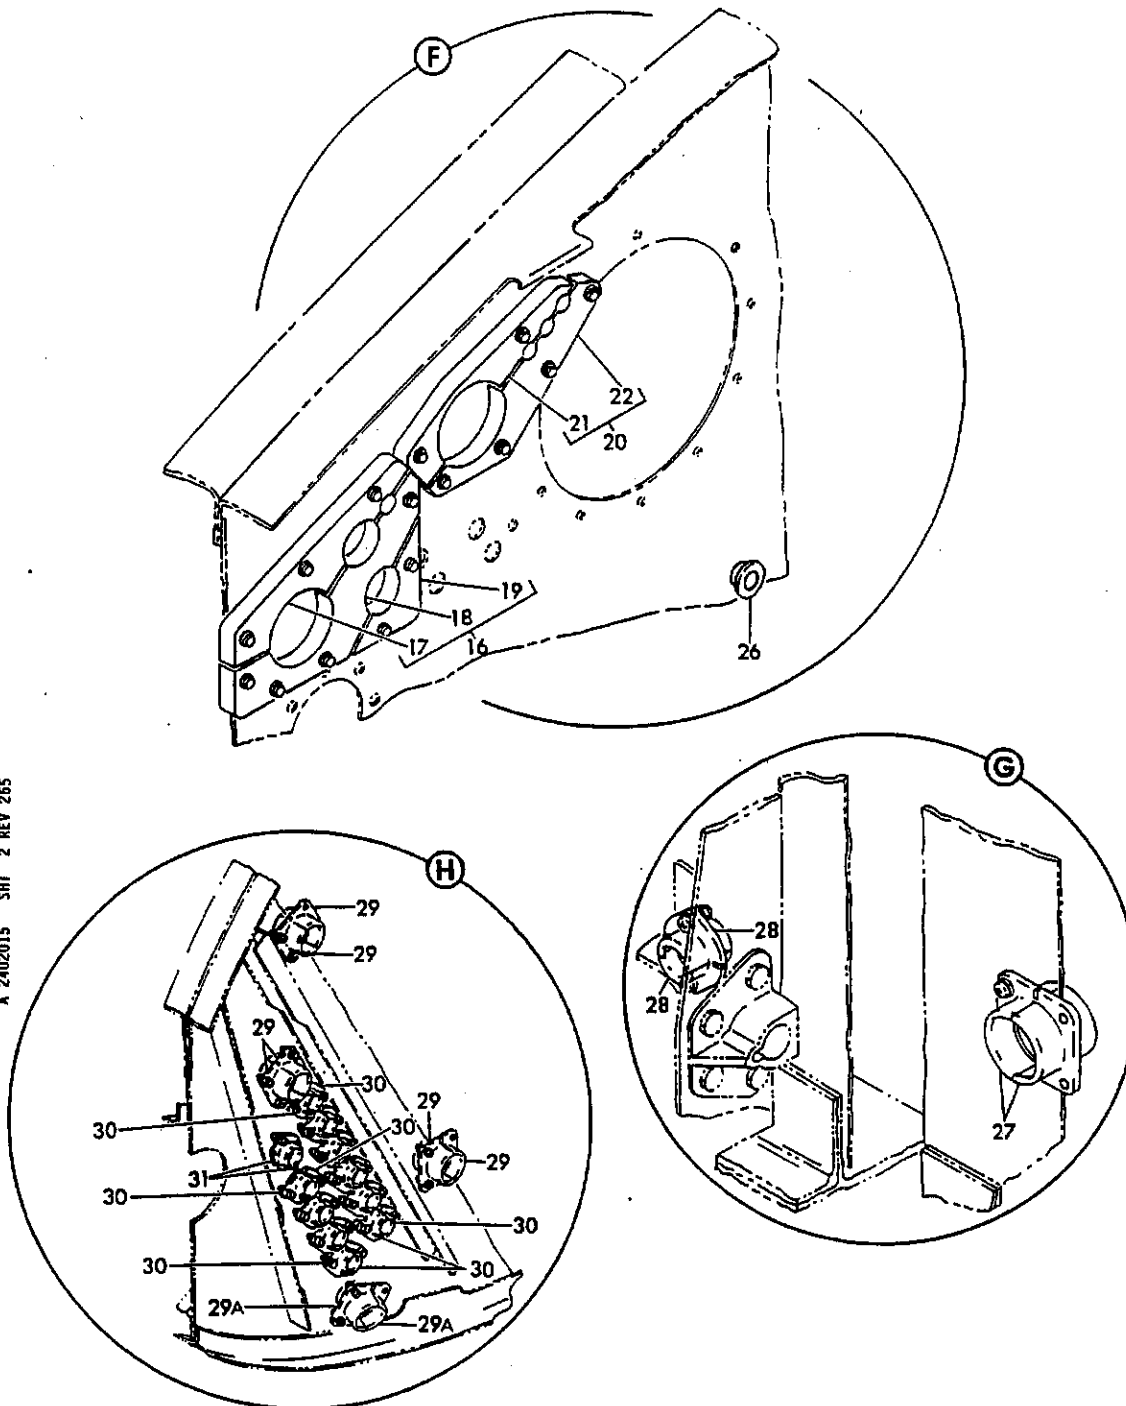


FIGURE 15. SEAL INSTL, WING STATION 960.112 (SHEET 2)

NOV 21/94

24-02-15

DETAILED PARTS LIST
24-02-15
PAGE 1

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
15		SEAL INSTL, ELECTRICAL		
		FAIRLEAD INSTL, FRONT SPAR STATION 422.631 TO		
		666.14 ELECTRICAL		
	69-16504-1	. SEAL INSTL, WING STATION 960.112 (LH) (SEE FIG. 12, ...		RF
		ITEM 10)		
	69-16504-2	. SEAL INSTL, WING STATION 960.112 (RH) (SEE FIG. 12, ...	0150	RF
		ITEM 10)		
	69-16504-2	. SEAL INSTL, WING STATION 960.112 (RH) (VARIABLE	5199	RF
		DWG; 69-16504-5002) (SEE FIG. 12, ITEM 10)		
1	BACS45A13	. . SEAL		2
1D	BACS45A13	. . SEAL, (LH ONLY)		2
1D	BACS45A13	. . SEAL, (RH ONLY)		2
		ATTACHING PARTS		
	NAS603-10	. . SCREW		4

	65-19389-1	. FAIRLEAD INSTL, FRONT SPAR STATION 666.140 ELECTRICAL		RF
		(LH) (SEE FIG. 12, ITEM 11)		
	65-19389-2	. FAIRLEAD INSTL, FRONT SPAR STATION 666.140 ELECTRICAL		RF
		(RH) (SEE FIG. 12, ITEM 11)		
1F	NAS1368N8C	. . GROMMET		1
1G	69-16751-1	. . FAIRLEAD ASSY, (LH ONLY)		1
1G	69-16751-2	. . FAIRLEAD ASSY, (RH ONLY)		1
		ATTACHING PARTS		
	AN3-6A	. . BOLT		1
	AN3-10A	. . BOLT		2
	NAS1303-11W	. . BOLT		3
	BACS47F10-10A	. . SHIM		1
	AN960PD10	. . WASHER		11
	NAS679A3W	. . NUT		5

1H	69-16751-3	. . . FAIRLEAD, FRONT SPAR STATION 666.140 ELECTRICAL .		1
		LOWER (MATCHED PART, ORDER ASSEMBLY ONLY) (LH		
		ONLY)		
1H	69-16751-4	. . . FAIRLEAD, FRONT SPAR STATION 666.140 ELECTRICAL .		1
		LOWER (MATCHED PART, ORDER ASSEMBLY ONLY) (RH		
		ONLY)		
1J	69-16751-5	. . . FAIRLEAD, FRONT SPAR STATION 666.140 ELECTRICAL .		1
		UPPER (MATCHED PART, ORDER ASSEMBLY ONLY) (LH		
		ONLY)		
1J	69-16751-6	. . . FAIRLEAD, FRONT SPAR STATION 666.140 ELECTRICAL .		1
		UPPER (MATCHED PART, ORDER ASSEMBLY ONLY) (RH		
		ONLY)		
	69-16956-1	. SEAL INSTL, FRONT SPAR STATION 530.51 ELECTRICAL (SEE		RF
		FIG. 12, ITEM 12)		
2	BACS45A1	. . FITTING		2
		ATTACHING PARTS		
	NAS601-9	. . SCREW		4
	AN960PD10L	. . WASHER		4
	NAS679A06W	. . NUT		4

	69-16583-1	. FAIRLEAD INSTL, FRONT SPAR STATION 422.631 ELECTRICAL		RF
		(LH) (SEE FIG. 12, ITEM 13)		
	69-16583-2	. FAIRLEAD INSTL, FRONT SPAR STATION 422.631 ELECTRICAL		RF
		(RH) (SEE FIG. 12, ITEM 13)		
3	69-28454-1	. . FAIRLEAD ASSY, FRONT SPAR STATION 422.631		1
		ELECTRICAL		
		ATTACHING PARTS		
	AN3-6A	. . BOLT		8
	AN960-10	. . WASHER		8

4	69-28454-2	. . . FAIRLEAD, FRONT SPAR STATION 422.631 ELECTRICAL .		1
		UPPER (MATCHED PART, ORDER ASSEMBLY ONLY)		
5	69-28454-3	. . . FAIRLEAD, FRONT SPAR STATION 422.631 ELECTRICAL .		1
		MIDDLE (MATCHED PART, ORDER ASSEMBLY ONLY)		
6	69-28454-4	. . . FAIRLEAD, FRONT SPAR STATION 422.631 ELECTRICAL .		1
		LOWER (MATCHED PART, ORDER ASSEMBLY ONLY)		
7	NAS1368N8A	. . GROMMET		1
	65-33522-1	. FAIRLEAD INSTL, FRONT SPAR STATION 382.66 ELECTRICAL		RF
		(LH) (SEE FIG. 12, ITEM 14)		
	65-33522-2	. FAIRLEAD INSTL, FRONT SPAR STATION 382.66 ELECTRICAL		RF
		(RH) (SEE FIG. 12, ITEM 14)		
16	69-26849-1	. . FAIRLEAD ASSY, FRONT SPAR STATION 382.66 ELECTRICAL		1
		ATTACHING PARTS		
	AN3-3A	. . BOLT		9
		MISSING ITEM NUMBERS ARE NOT APPLICABLE		



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
15	AN960-10	.	WASHER.		9
17	69-26849-4	.	FAIRLEAD, FRONT SPAR STATION 382.66 ELECTRICAL.		1
18	69-26849-3	.	FAIRLEAD, FRONT SPAR STATION 382.66 ELECTRICAL.		1
19	69-26849-2	.	FAIRLEAD, FRONT SPAR STATION 382.66 ELECTRICAL.		1
20	69-26848-1	.	FAIRLEAD ASSY, FRONT SPAR STATION 382.66 ELECTRICAL		1
	AN3-3A	.	BOLT.		4
	AN3-7A	.	BOLT.		2
	AN960-10	.	WASHER.		4
21	69-26848-3	.	FAIRLEAD, FRONT SPAR STATION 382.66 ELECTRICAL.		1
22	69-26848-2	.	FAIRLEAD, FRONT SPAR STATION 382.66 ELECTRICAL.		1
26	NAS1368NB8	.	GROMMET		1
	65-23404-1	.	SEAL INSTL, INBOARD DRY BAY ELECTRICAL (LH) (SEE FIG. 12, ITEM 15)		RF
	65-23404-2	.	SEAL INSTL, INBOARD DRY BAY ELECTRICAL (RH) (SEE FIG. 12, ITEM 15)		RF
27	BACS45A1	.	FITTING		2
	NAS601-8	.	ATTACHING PARTS		
	AN960PD6L	.	SCREW		4
		.	WASHER.		4
28	BACS45A3	.	FITTING		2
	NAS601-8	.	ATTACHING PARTS		
	AN960PD6L	.	SCREW		2
	NAS679A06W	.	WASHER.		2
		.	NUT		2
	69-6370-1	.	SEAL INSTL, FRONT SPAR STATION 16.75 ELECTRICAL (LH) (SEE FIG. 12, ITEM 16)		RF
	69-6370-2	.	SEAL INSTL, FRONT SPAR STATION 16.75 ELECTRICAL (RH) (SEE FIG. 12, ITEM 16)		RF
29	BACS45A1	.	FITTING		6
	NAS601-7	.	ATTACHING PARTS		
	AN960PD6L	.	SCREW		12
	NAS679A06W	.	WASHER.		12
		.	NUT		12
30	BACS45A3	.	FITTING		20
	NAS601-7	.	ATTACHING PARTS		
	AN960PD6L	.	SCREW		20
	NAS679A06W	.	WASHER.		20
		.	NUT		20
31	BACS45A2	.	FITTING		2
	NAS601-7	.	ATTACHING PARTS		
	AN960PD6L	.	SCREW		4
	NAS679A06W	.	WASHER.		4
		.	NUT		4

MISSING ITEM NUMBERS ARE NOT APPLICABLE


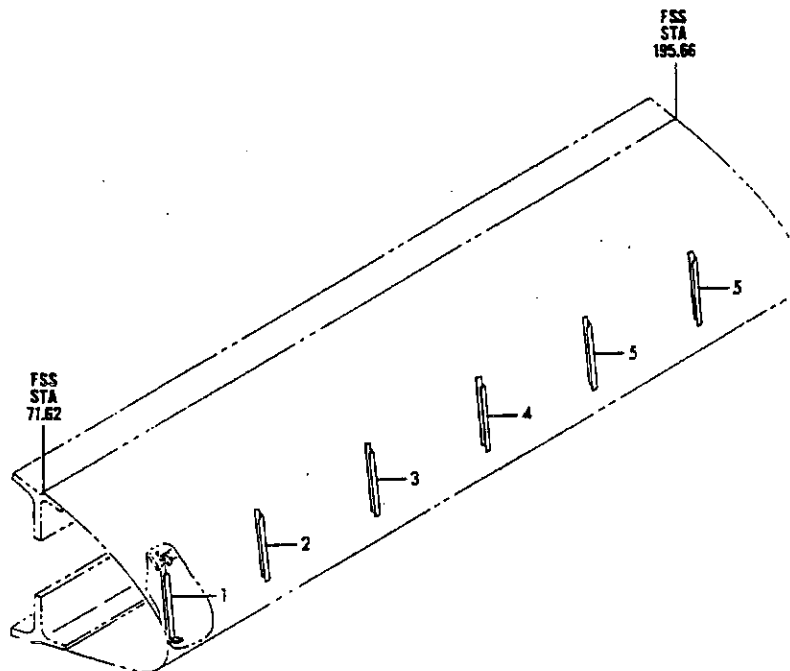


FIGURE 17. ANGLE INSTL, WING LEADING EDGE WIRE SUPPORT

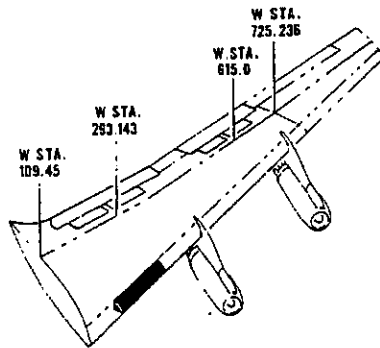

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
17	69-12356-3	ANGLE INSTL, WING LEADING EDGE WIRE SUPPORT (LH) (SEE . FIG. 11, ITEM 51 AND FIG. 12, ITEM 20)		RF
	69-12356-4	ANGLE INSTL, WING LEADING EDGE WIRE SUPPORT (RH) (SEE . FIG. 11, ITEM 51 AND FIG. 12, ITEM 20)		RF
	1 69-11712-1	. ANGLE, WING LEADING EDGE WIRE SUPPDR (LH ONLY)		1
	1 69-11712-2	. ANGLE, WING LEADING EDGE WIRE SUPPORT (RH ONLY)		1
	2 69-11712-3	. ANGLE, WING LEADING EDGE WIRE SUPPORT (LH ONLY)		1
	2 69-11712-4	. ANGLE, WING LEADING EDGE WIRE SUPPORT (RH ONLY)		1
		ATTACHING PARTS		
	NAS603-5	. SCREW		4
	NAS679A3W	. NUT		4
		-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

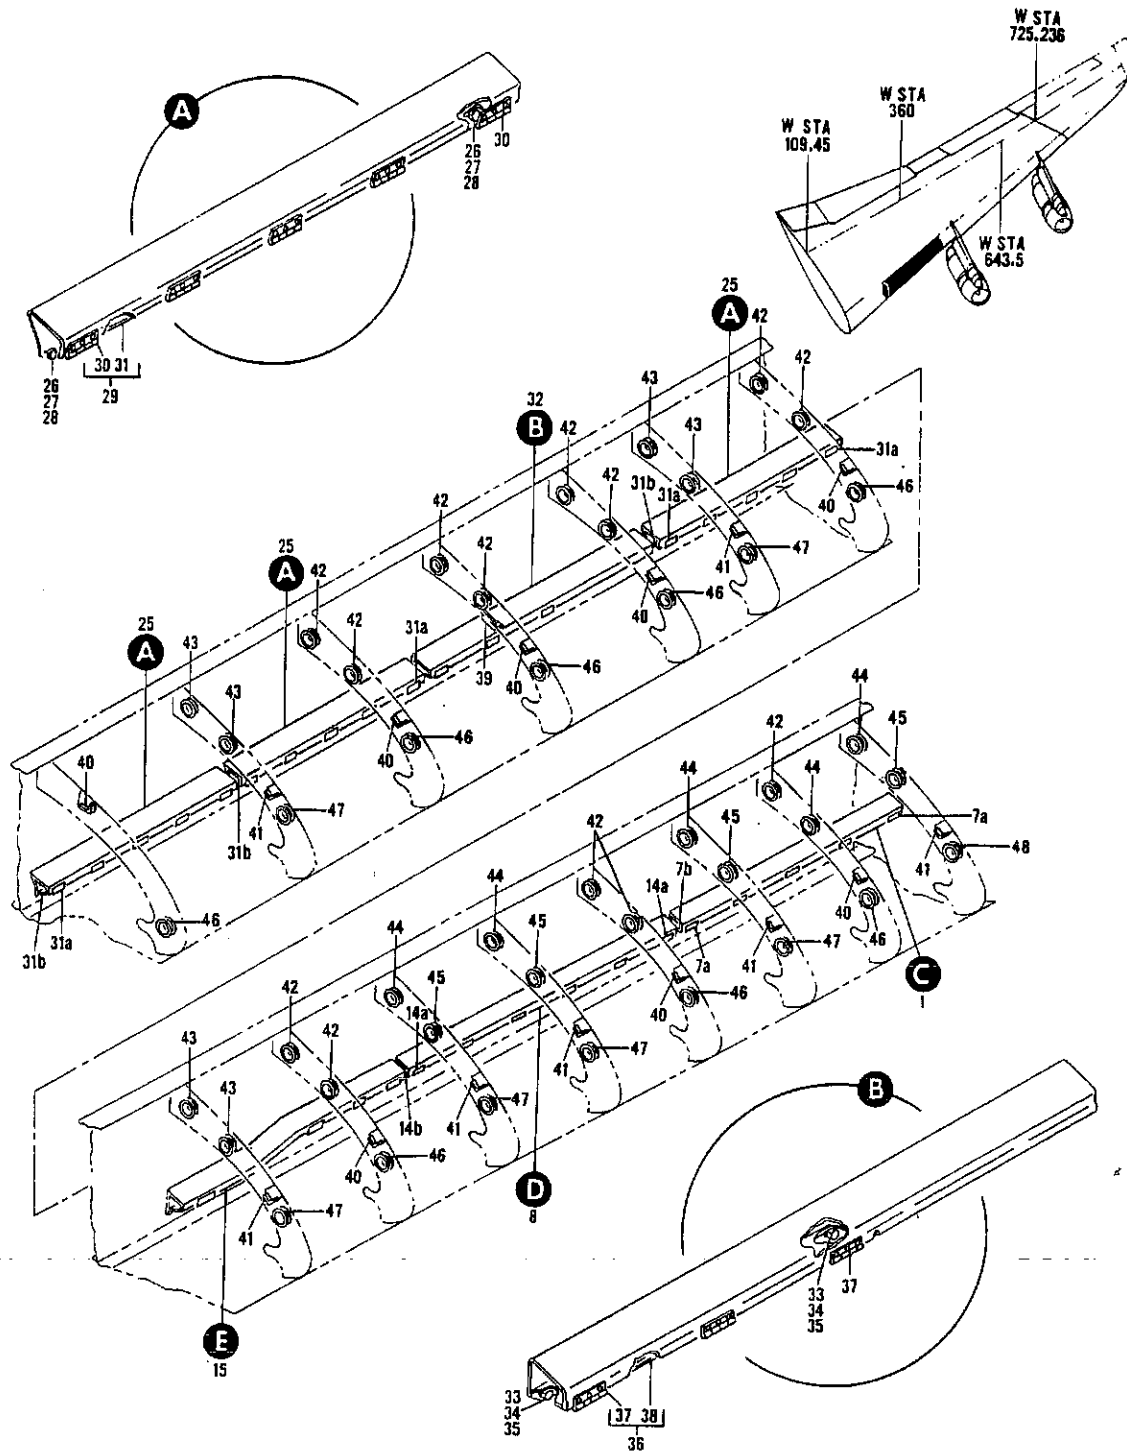


FIGURE 22. RACEWAY INSTL, FRONT SPAR STATION 131 TO 382 WING LEADINGEDGE (SHEET 1)

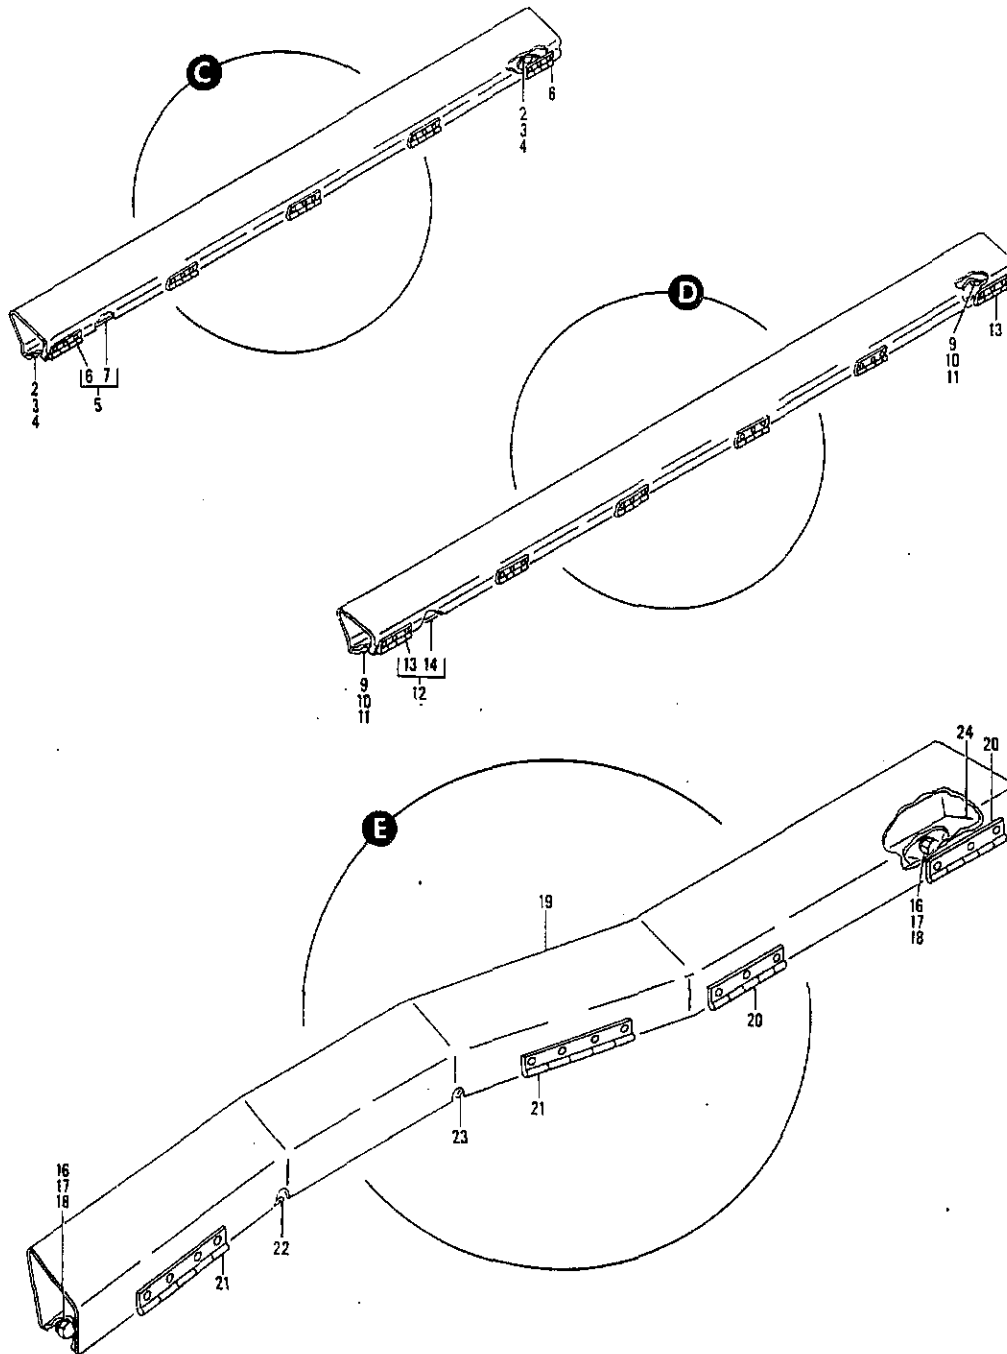


FIGURE 22. RACEWAY INSTL, FRONT SPAR STATION 131 TO 382 WING LEADING EDGE (SHEET 2)

NOV 21/90

24-02-22

DETAILED PARTS LIST
24-02-22
PAGE 1

Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
22	65-33521-5		RACEWAY INSTL, FRONT SPAR STATION 131 TO 382 WING . . .		RF
	65-33521-6		LEADING EDGE (LH) (SEE FIG. 12, ITEM 18)		RF
			RACEWAY INSTL, FRONT SPAR STATION 131 TO 382 WING . . .		
1	65-19450-25		LEADING EDGE (RH) (SEE FIG. 12, ITEM 18)		1
1	65-19450-26		. RACEWAY ASSY, WING LEADING EDGE ELECTRICAL (LH ONLY)		1
			. RACEWAY ASSY, WING LEADING EDGE ELECTRICAL (RH ONLY)		
			ATTACHING PARTS		
	NAS514P1032-B		. SCREW		2
	NAS517-3-4		. SCREW		3
	BACN10FX1		. NUT		2
	BACN10FX3		. NUT		2
	BACN10FX4		. NUT		1
			-----*		
2	BACS12CB3-5		. BOLT		5
3	AN960C10L		. WASHER		10
4	BACN10JC3		. NUT		5
7A	MS20257-3-200		. HINGE		5
			ATTACHING PARTS		
	MS20426D3F		. RIVET		30
			-----*		
7B	65-19450-27		. DOOR, WING LEADING EDGE ELECTRICAL RACEWAY.		1
8	65-19450-33		. RACEWAY ASSY, WING LEADING EDGE ELECTRICAL.		1
			ATTACHING PARTS		
	NAS514P1032-B		. SCREW		2
	NAS517-3-4		. SCREW		4
	BACN10FX1		. NUT		2
	BACN10FX4		. NUT		4
			-----*		
9	AN3-3A		. BOLT		6
10	AN960C10L		. WASHER		12
11	NAS679A3W		. NUT		6
14A	MS20257-3-200		. HINGE		6
			ATTACHING PARTS		
	MS20426A3F		. RIVET		36
			-----*		
14B	65-19450-34		. DOOR, WING LEADING EDGE ELECTRICAL RACEWAY.		1
15	65-33616-1		. RACEWAY ASSY, WING LEADING EDGE ELECTRICAL (LH ONLY)		1
15	65-33616-2		. RACEWAY ASSY, WING LEADING EDGE ELECTRICAL (RH ONLY)		1
			ATTACHING PARTS		
	AN3-4A		. BOLT		2
	NAS517-3-4		. SCREW		2
	BACN10FX1		. NUT		2
	BACN10FX4		. NUT		2
			-----*		
16	AN3-3A		. BOLT		6
17	AN960C10L		. WASHER		12
18	NAS679A3W		. NUT		6
19	65-33616-3		. RACEWAY ASSY, WING LEADING EDGE ELECTRICAL (LH . . .		1
			ONLY)		
19	65-33616-4		. RACEWAY ASSY, WING LEADING EDGE ELECTRICAL (RH. . .		1
			ONLY)		
20	MS20257-3-300		. HINGE		2
21	MS20257-3-400		. HINGE		2
			ATTACHING PARTS		
	MS20426A3		. RIVET		28
			-----*		
22	65-33616-7		. DOOR, WING LEADING EDGE ELECTRICAL RACEWAY (LH. . .		1
			ONLY)		
22	65-33616-8		. DOOR, WING LEADING EDGE ELECTRICAL RACEWAY (RH. . .		1
			ONLY)		
23	65-33616-9		. DOOR, WING LEADING EDGE ELECTRICAL RACEWAY (LH. . .		1
			ONLY)		
23	65-33616-10		. DOOR, WING LEADING EDGE ELECTRICAL RACEWAY (RH. . .		1
			ONLY)		
24	65-33616-11		. DOOR, WING LEADING EDGE ELECTRICAL RACEWAY (LH. . .		1
			ONLY)		
24	65-33616-12		. DOOR, WING LEADING EDGE ELECTRICAL RACEWAY (RH. . .		1
			ONLY)		
25	65-19450-36		. RACEWAY ASSY, WING LEADING EDGE ELECTRICAL.		3
			ATTACHING PARTS		
	NAS514P1032-B		. SCREW		6
	NAS517-3-4		. SCREW		6
	BACN10FX1		. NUT		2
	BACN10FX4		. NUT		10
			-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
22	26	AN3-3A	.	.	BOLT.	.	.	.		5
	27	AN960C10L	.	.	WASHER.	.	.	.		10
	28	NAS679A3W	.	.	NUT	.	.	.		5
	31A	MS20257-3-200	.	.	HINGE	.	.	.		5
			.	.	ATTACHING PARTS	.	.	.		
		MS20426D3F	.	.	RIVET	.	.	.		30
			.	.	-----*	.	.	.		
	31B	65-19450-37	.	.	DOOR, WING LEADING EDGE ELECTRICAL RACEWAY.	.	.	.		1
	32	65-33580-1	.	.	RACEWAY ASSY, WING LEADING EDGE ELECTRICAL (LH ONLY)	.	.	.		1
	32	65-33580-2	.	.	RACEWAY ASSY, WING LEADING EDGE ELECTRICAL (RH ONLY)	.	.	.		1
			.	.	ATTACHING PARTS	.	.	.		
		AN3-4A	.	.	BOLT.	.	.	.		2
		NAS514P1032-8	.	.	SCREW	.	.	.		2
		BACN10FX1	.	.	NUT	.	.	.		2
		BACN10FX4	.	.	NUT	.	.	.		2
			.	.	-----*	.	.	.		
	33	BACB30NF3-2	.	.	BOLT.	.	.	.		3
	34	AN960C10L	.	.	WASHER.	.	.	.		6
	35	NAS679A3W	.	.	NUT	.	.	.		3
	36	65-33580-3	.	.	RACEWAY ASSY, WING LEADING EDGE ELECTRICAL (LH.	.	.	.		1
			.	.	ONLY)	.	.	.		
	36	65-33580-4	.	.	RACEWAY ASSY, WING LEADING EDGE ELECTRICAL (RH.	.	.	.		1
			.	.	ONLY)	.	.	.		
	37	MS20257-3-200	.	.	HINGE	.	.	.		3
			.	.	ATTACHING PARTS	.	.	.		
		MS20426A3	.	.	RIVET	.	.	.		18
			.	.	-----*	.	.	.		
	38	65-33580-7	.	.	DOOR, WING LEADING EDGE ELECTRICAL RACEWAY (LH.	.	.	.		1
			.	.	ONLY)	.	.	.		
	38	65-33580-8	.	.	DOOR, WING LEADING EDGE ELECTRICAL RACEWAY (RH.	.	.	.		1
			.	.	ONLY)	.	.	.		
	39	66-19616-1	.	.	BRACKET, WING LEADING EDGE RACEWAY SUPPORT (LH ONLY)	.	.	.		1
	39	66-19616-2	.	.	BRACKET, WING LEADING EDGE RACEWAY SUPPORT (RH ONLY)	.	.	.		1
			.	.	ATTACHING PARTS	.	.	.		
		AN3-4A	.	.	BOLT.	.	.	.		2
		NAS679A3W	.	.	NUT	.	.	.		2
			.	.	-----*	.	.	.		
	40	BACG20ZB185	.	.	GROMMET	.	.	.		8
	41	BACG20ZC185	.	.	GROMMET	.	.	.		7
	42	BACG20ZB432	.	.	GROMMET	.	.	.		13
	43	BACG20ZC432	.	.	GROMMET	.	.	.		6
	44	BACG20ZD432	.	.	GROMMET	.	.	.		5
	45	BACG20ZF432	.	.	GROMMET	.	.	.		4
	46	BACG20ZB503	.	.	GROMMET	.	.	.		8
	47	BACG20ZC503	.	.	GROMMET	.	.	.		6
	48	BACG20ZE503	.	.	GROMMET	.	.	.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

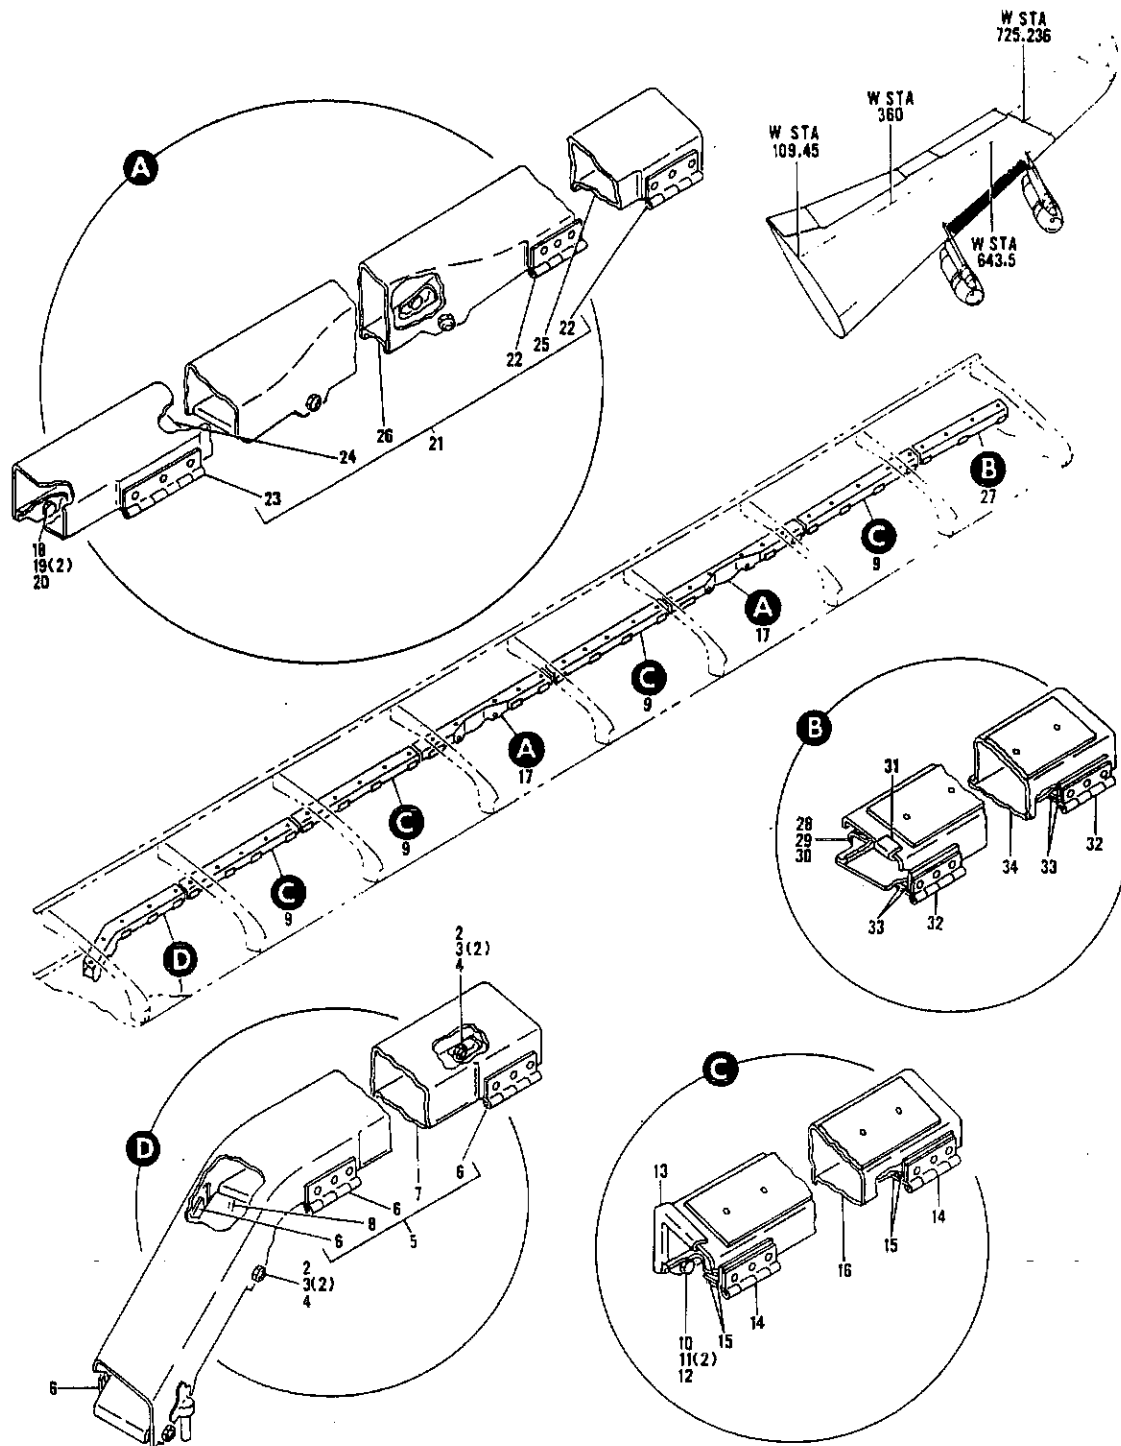


FIGURE 23A. RACEWAY INSTL, FRONT SPAR STATION 422 TO 666 WING LEADING EDGE ELECTRICAL

DETAILED PARTS LIST
24-02-23A
PAGE 0

24-02-23A

NDV 21/90

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
23A	65-22292-5	RACEWAY INSTL, FRONT SPAR STATION 422 TO 666 WING . . . LEADING EDGE ELECTRICAL (LH) (SEE FIG. 12, ITEM 17)		RF
	65-22292-6	RACEWAY INSTL, FRONT SPAR STATION 422 TO 666 WING . . . LEADING EDGE ELECTRICAL (RH) (SEE FIG. 12, ITEM 17)		RF
1	65-22224-1	. RACEWAY ASSY, WING LEADING EDGE ELECTRICAL (LH ONLY)		1
1	65-22224-2	. RACEWAY ASSY, WING LEADING EDGE ELECTRICAL (RH ONLY)		1
	NAS514P1032-8	. ATTACHING PARTS		3
	NAS514P1032-7	. SCREW		2
	BACN10FX3	. NUT		3
	BACN10FX1	. NUT		2
2	BACB30NF3-2	. . BOLT.		5
3	AN960C10L	. . WASHER.		10
4	NAS679A3W	. . NUT		5
5	65-22224-3	. . RACEWAY ASSY, WING LEADING EDGE ELECTRICAL (LH. ONLY)		1
5	65-22224-4	. . RACEWAY ASSY, WING LEADING EDGE ELECTRICAL (RH. ONLY)		1
6	MS20257-3-200	. . . HINGE		5
	MS20426A3	. . . ATTACHING PARTS		30
		. . . RIVET		
7	65-22224-7	. . . DOOR, WING LEADING EDGE ELECTRICAL RACEWAY (LH. ONLY)		1
7	65-22224-8	. . . DOOR, WING LEADING EDGE ELECTRICAL RACEWAY (RH. ONLY)		1
8	65-22224-9	. . . DOOR, WING LEADING EDGE ELECTRICAL RACEWAY (LH. ONLY)		1
8	65-22224-10	. . . DOOR, WING LEADING EDGE ELECTRICAL RACEWAY (RH. ONLY)		1
9	65-21859-11	. RACEWAY ASSY, WING LEADING EDGE ELECTRICAL.		4
	NAS514P1032-8	. ATTACHING PARTS		12
	NAS514P1032-7	. SCREW		8
	BACN10FX3	. NUT		12
	BACN10FX1	. NUT		8
10	AN3-3A	. . BOLT.		4
11	AN960C10L	. . WASHER.		8
12	NAS679A3W	. . NUT		4
13	65-21859-19	. . EXTRUSION, WING LEADING EDGE ELECTRICAL RACEWAY (EXTRUSION NO. BAC1521-666 X 16 IN. LG)		1
14	MS20257-3-200	. . HINGE		4
	MS20426D3	. . . ATTACHING PARTS		12
		. . . RIVET		
15	65-21859-20	. . FILLER, WING LEADING EDGE ELECTRICAL RACEWAY RADIUS		8
16	65-21859-13	. . DOOR, WING LEADING EDGE ELECTRICAL RACEWAY.		1
17	65-21914-1	. RACEWAY ASSY, WING LEADING EDGE ELECTRICAL (LH ONLY)		2
17	65-21914-2	. RACEWAY ASSY, WING LEADING EDGE ELECTRICAL (RH ONLY)		2
	NAS514P1032-8	. ATTACHING PARTS		6
	NAS514P1032-7	. SCREW		6
	BACN10FX3	. NUT		6
	BACN10FX1	. NUT		6
18	AN3-3	. . BOLT.		8
19	AN960C10L	. . WASHER.		16
20	NAS679A3W	. . NUT		8
21	65-21914-3	. . RACEWAY ASSY, WING LEADING EDGE ELECTRICAL (LH. ONLY)		1
21	65-21914-4	. . RACEWAY ASSY, WING LEADING EDGE ELECTRICAL (RH. ONLY)		1
22	MS20257-3-200	. . . HINGE		2
23	MS20257-3-300	. . . HINGE		1
	MS20426A3	. . . ATTACHING PARTS		36
		. . . RIVET		
24	65-21914-8	. . . DOOR, WING LEADING EDGE ELECTRICAL RACEWAY.		1
25	65-21914-9	. . . DOOR, WING LEADING EDGE ELECTRICAL RACEWAY.		1
26	65-21914-7	. . . TRAY, WING LEADING EDGE ELECTRICAL RACEWAY.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/90

24-02-23A

DETAILED PARTS LIST
24-02-23A
PAGE 1

Intercontinental

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
23A 27	65-21859-12	. RACEWAY ASSY, WING LEADING EDGE ELECTRICAL. ATTACHING PARTS		1
	NAS514P1032-8	. SCREW		3
	NAS514P1032-7	. SCREW		1
	BACN10FX3	. NUT		3
	BACN10FX1	. NUT		1
		-----*		
28	AN3-3A	. BOLT.		3
29	AN960C10L	. WASHER.		3
30	BACN10FX1	. NUT		3
31	65-21859-19	. EXTRUSION, WING LEADING EDGE ELECTRICAL RACEWAY . . (EXTRUSION NO. BAC1521-666 X 16 IN. LG)		1
32	MS20257-3-200	. HINGE		3
	MS20426D3	ATTACHING PARTS . RIVET		18
		-----*		
33	65-21859-20	. FILLER, WING LEADING EDGE ELECTRICAL RACEWAY RADIUS		6
34	65-21859-15	. DOOR, WING LEADING EDGE ELECTRICAL RACEWAY.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				


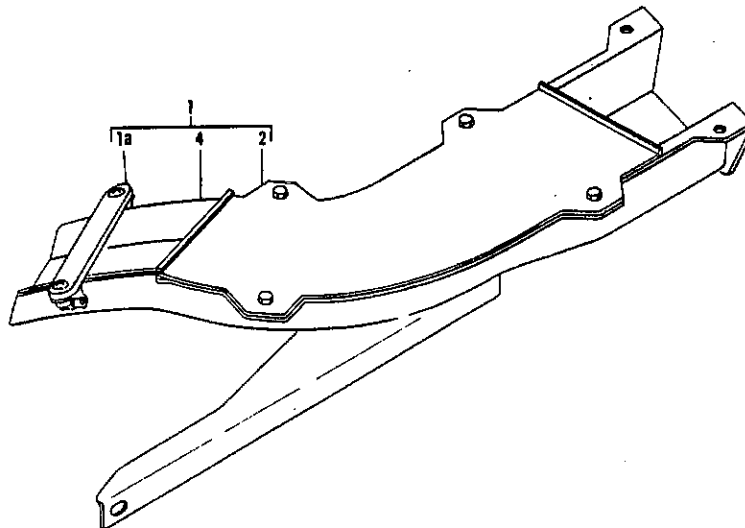


FIGURE 24. RACEWAY INSTL, OUTBOARD WING STRUT INTERSECTION ELECTRICAL

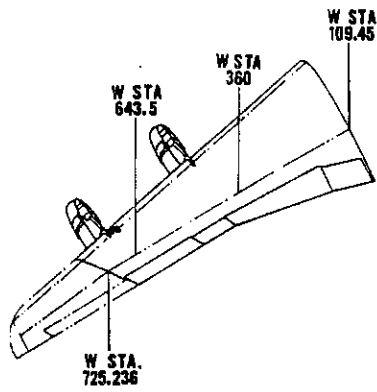

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
24	65-24762-1		RACEWAY INSTL, OUTBOARD WING STRUT INTERSECTION ELECTRICAL (LH) (SEE FIG. 12, ITEM 17A)		RF
	65-24762-2		RACEWAY INSTL, OUTBOARD WING STRUT INTERSECTION ELECTRICAL (RH) (SEE FIG. 12, ITEM 17A)		RF
1	65-24295-13		. RACEWAY ASSY, OUTBOARD WING STRUT INTERSECTION (LH. . ONLY)		1
1	65-24295-14		. RACEWAY ASSY, OUTBOARD WING STRUT INTERSECTION (RH. . ONLY)		1
	BAC830NF3-2		ATTACHING PARTS		1
	NAS514P1032-6		. BOLT.		2
	NAS603-6		. SCREW		2
	AN960D10		. SCREW		2
	NAS679A3W		. WASHER.		5
			. NUT		
1A	65-24295-21		. STRAP, WIRE RETAINING		1
	NAS603-5		ATTACHING PARTS		2
	AN960-10		. SCREW		2
			. WASHER.		
2	65-24295-17		. COVER, OUTBOARD WING STRUT INTERSECTION RACEWAY (LH ONLY)		1
2	65-24295-18		. COVER, OUTBOARD WING STRUT INTERSECTION RACEWAY (RH ONLY)		1
	AN3-3		ATTACHING PARTS		4
	AN960C10L		. BOLT.		4
	NAS679A3W		. WASHER.		4
			. NUT		
4	65-24295-15		. TRAY ASSY, OUTBOARD WING STRUT INTERSECTION RACEWAY (LH ONLY)		1
4	65-24295-16		. TRAY ASSY, OUTBOARD WING STRUT INTERSECTION RACEWAY (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/90

24-02-24

DETAILED PARTS LIST
24-02-24
PAGE 1

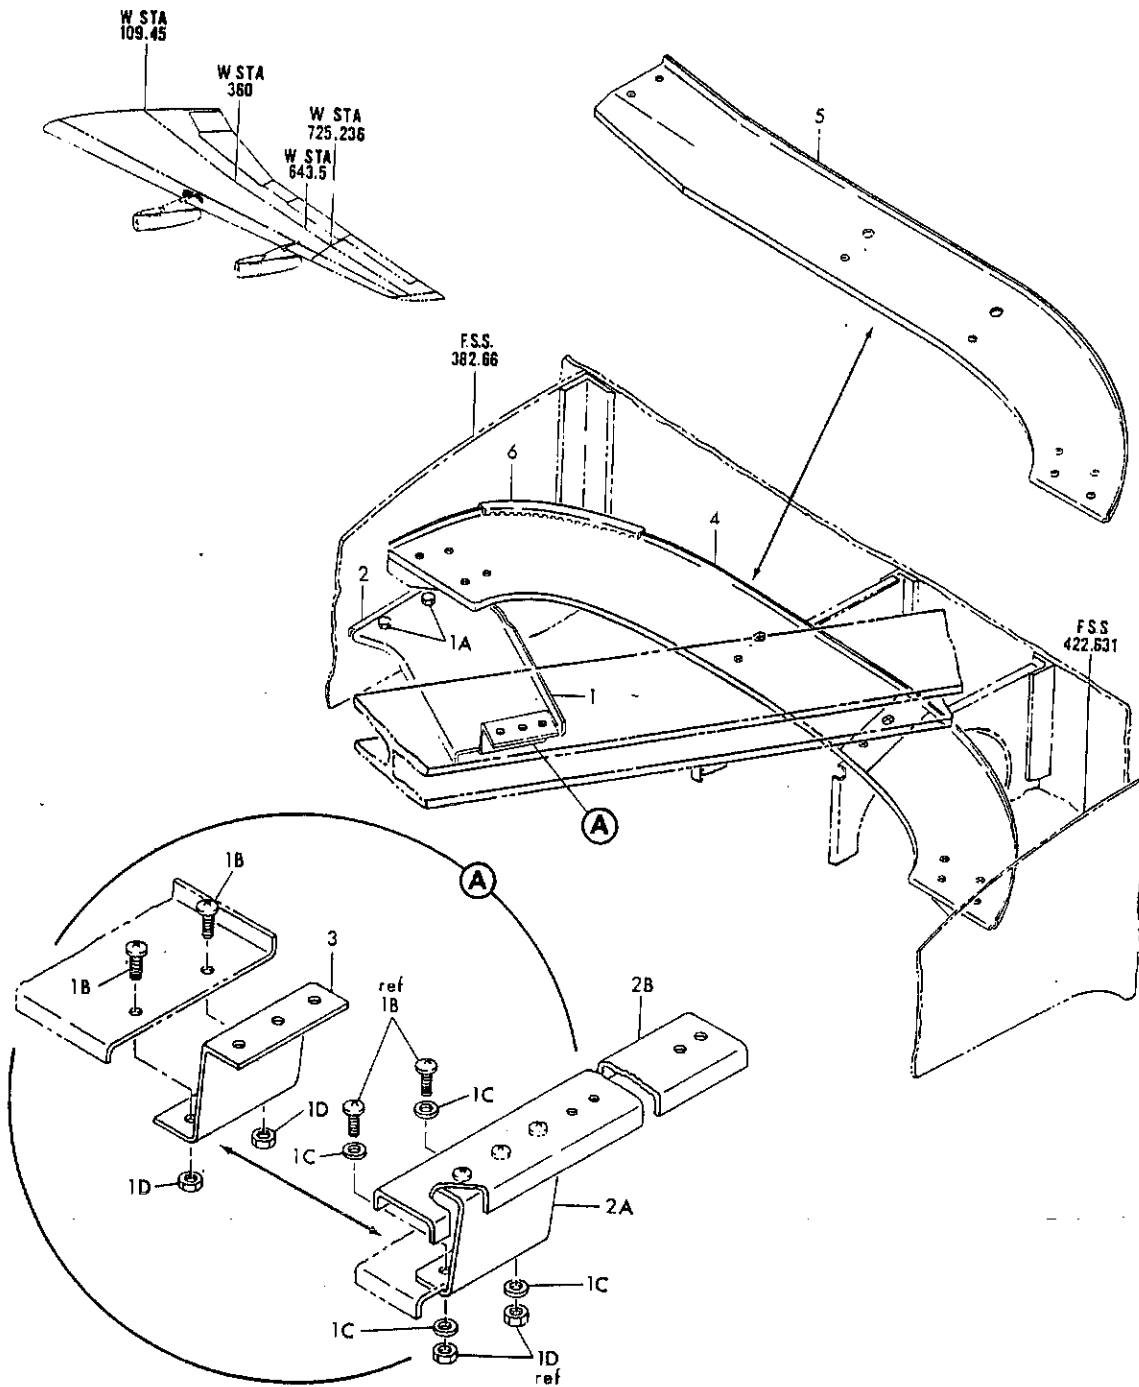


FIGURE 25. SUPPORT INSTL, INBOARD WING STRUT INTERSECTION
WIRE AND FRONT SPAR STATION 382 TO 422 WIRE BUNDLE

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
25			SUPPORT INSTL, INBOARD WING STRUT INTERSECTION WIRE AND FRONT SPAR STATION 382 TO 422 WIRE BUNDLE		
R	65-15348-3		. SUPPORT INSTL, INBOARD WING STRUT INTERSECTION WIRE . (LH) (SEE FIG. 12, ITEM 21)	0151	RF
R	65-15348-5		. SUPPORT INSTL, INBOARD WING STRUT INTERSECTION WIRE . (LH) (SEE FIG. 12, ITEM 21)	5299	RF
R	65-15348-4		. SUPPORT INSTL, INBOARD WING STRUT INTERSECTION WIRE . (RH) (SEE FIG. 12, ITEM 21)	0151	RF
R	65-15348-6		. SUPPORT INSTL, INBOARD WING STRUT INTERSECTION WIRE . (RH) (SEE FIG. 12, ITEM 21)	5299	RF
R	1	69-12367-9	. . SUPPORT ASSY, INBOARD WING STRUT INTERSECTION WIRE BUNDLE (LH ONLY)		1
	1	69-12367-10	. . SUPPORT ASSY, INBOARD WING STRUT INTERSECTION WIRE BUNDLE (RH ONLY)		1
			ATTACHING PARTS		
R	1A	AN509-10-6	. . SCREW	0151	2
R	1A	BACB30LU3-1	. . BOLT	5299	2
R	1B	NAS603-6	. . SCREW	0151	2
R	1B	NAS603-6P	. . SCREW	5299	2
R	1C	AN960P010L	. . WASHER	5299	4
R	1D	NAS679A3W	. . NUT	0151	2
R	1D	BACN10JC3	. . NUT	5299	2
	2	66-11599-9	. . BRACKET ASSY, SUPPORT (LH ONLY)		1
	2	66-11599-10	. . BRACKET ASSY, SUPPORT (RH ONLY)		1
R	2A	66-11599-17	. . BRACKET, SUPPORT (LH ONLY)	5299	1
R	2A	66-11599-18	. . BRACKET, SUPPORT (RH ONLY)	5299	1
			ATTACHING PARTS		
R		NAS603-6P	. . SCREW	5299	3
R		BACN10JC3	. . NUT	5299	3
	2B	204-53233-9	. . CHANNEL	5299	1
R	3	66-11599-15	. . BRACKET, SUPPORT (LH ONLY)	0151	1
R	3	66-11599-16	. . BRACKET, SUPPORT (RH ONLY)	0151	1
	3	65-22783-5	. SUPPORT INSTL, FRONT SPAR STATION 382 TO 422 WIRE . BUNDLE (LH) (SEE FIG. 12, ITEM 22)		RF
		65-22783-6	. SUPPORT INSTL, FRONT SPAR STATION 382 TO 422 WIRE . BUNDLE (RH) (SEE FIG. 12, ITEM 22)		RF
	5	65-22938-5	. . SUPPORT ASSY, WIRE BUNDLE (USED ON 65-22783-5) . . .		1
	5	65-22938-6	. . SUPPORT ASSY, WIRE BUNDLE (USED ON 65-22783-6) . . .		1
			ATTACHING PARTS		
		NAS514P1032-6	. . SCREW		7
		NAS603-10	. . SCREW		1
		AN3-3A	. . BOLT, (USED ON 65-22783-5 AND -6)		2
		NAS679A3W	. . NUT		8
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

RAF
NOV 21/91

24-02-25

DETAILED PARTS LIST
24-02-25
PAGE 1



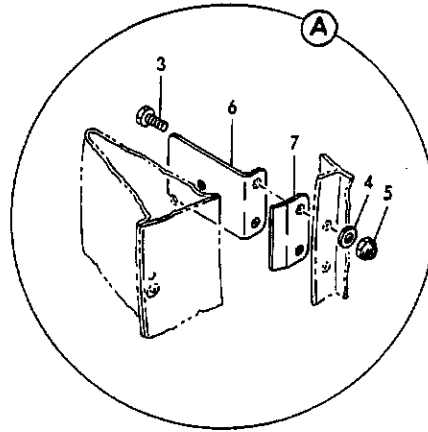


FIGURE 26. RACEWAY INSTL, JT 3D NACELLE

DETAILED PARTS LIST
24-02-26
PAGE 0

24-02-26

NOV 21/90

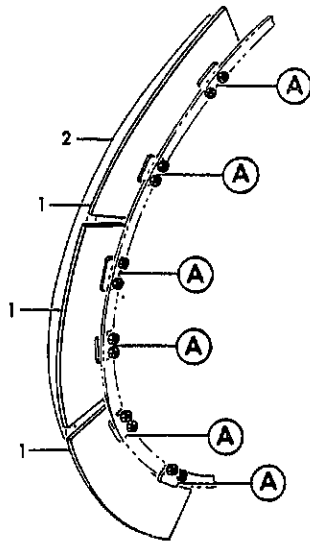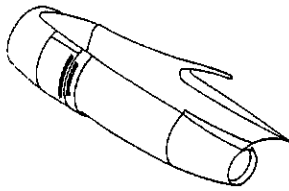

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
26	65-11952-7	RACEWAY INSTL, JT3D NACELLE (SEE FIG. 2A, ITEM 51, FIG. 28, ITEM 41 AND FIG. 2C, ITEM 37)								RF
1	65-11952-10	. COVER, JT3D NACELLE RACEWAY								3
	NAS603-6	. ATTACHING PARTS								6
		. SCREW								6
		-----*								
2	65-11952-8	. RACEWAY ASSY, JT3D NACELLE.								1
	NAS514-1032-8	. ATTACHING PARTS								6
		. SCREW								6
		-----*								
3	AN5-4A	. BOLT.								12
4	AN960CS16L	. WASHER.								12
5	NAS679A5	. NUT								12
6	65-11952-5	. CLIP ASSY, JT3D NACELLE RACEWAY								6
7	65-11952-4	. PLATE, JT3D NACELLE RACEWAY								6
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

RAF
NOV 21/90

24-02-26

DETAILED PARTS LIST
24-02-26
PAGE 1


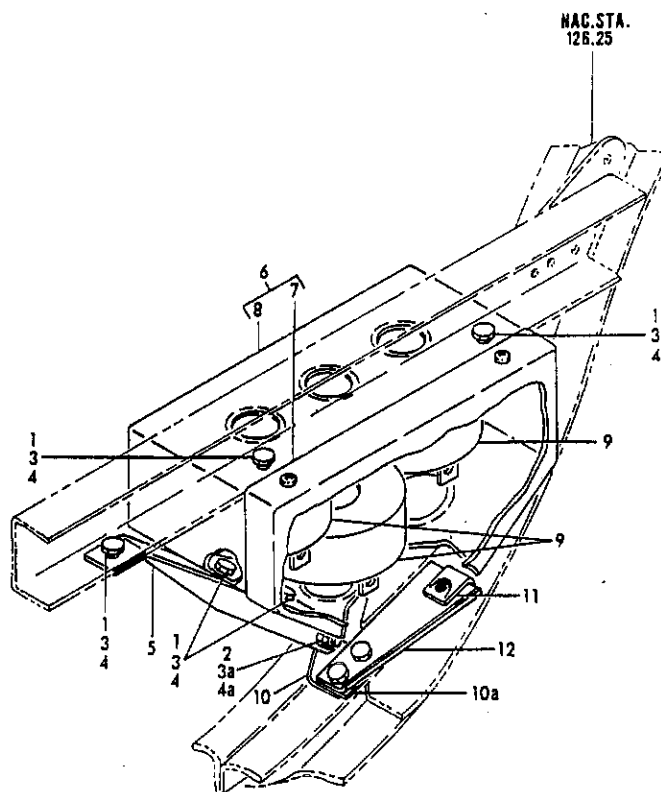


FIGURE 27. TRANSFORMER INSTL. JT3D NACELLE CURRENT

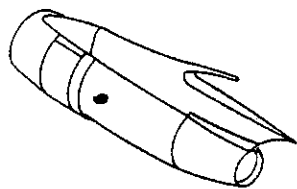

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
27	65-11931	TRANSFORMER INSTL, JT3D NACELLE CURRENT (SEE FIG. 2A, .		RF
	65-11931-6	ITEM 50, FIG. 2B, ITEM 40 AND FIG. 2C, ITEM 36)		
		SPECIAL SPARES ASSY, JT3D NACELLE CURRENT TRANSFORMER .		RF
		(CONSISTS OF PARTS DENOTED BY (S))		
1	NAS1303-3W	. BOLT.		5
2	S NAS1303-2W	. BOLT.		1
3	AN960D10L	. WASHER.		5
3A	S AN960D10L	. WASHER.		1
4	NAS679A3W	. NUT		5
4A	S NAS679A3W	. NUT		1
5	S 65-11931-800	. ANGLE, JT3D NACELLE CURRENT TRANSFORMER BRACE		1
6	S 65-11932	. BOX ASSY, FAN (USED ON 65-11931-6).		1
6	65-11932	. BOX ASSY, FAN (USED ON 65-11931).		1
7	65-11932-2	. COVER, (USED ON 65-11932).		1
	NAS601-5	. ATTACHING PARTS		
		. SCREW, (USED WITH 65-11932-2)		3
8	65-11932-1	. BOX ASSY, (USED ON 65-11932).		1
9	S 10-3256	. TRANSFORMER, CURRENT.		3
	S NAS603-8	. ATTACHING PARTS		
		. SCREW		12
10	S 65-11931-801	. CLIP, JT3D NACELLE CURRENT TRANSFORMER.		1
	NAS1303-5W	. ATTACHING PARTS		
	AN960D10	. BOLT.		2
	S NAS679A3W	. WASHER.		2
		. NUT		2
10A	65-11931-802	. FILLER, JT3D NACELLE CURRENT TRANSFORMER RADIUS . . .		1
11	BACN10FX1	. NUT		1
12	66-19465-1	. BRACKET, FAN ENGINE TUBE SUPPORT.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

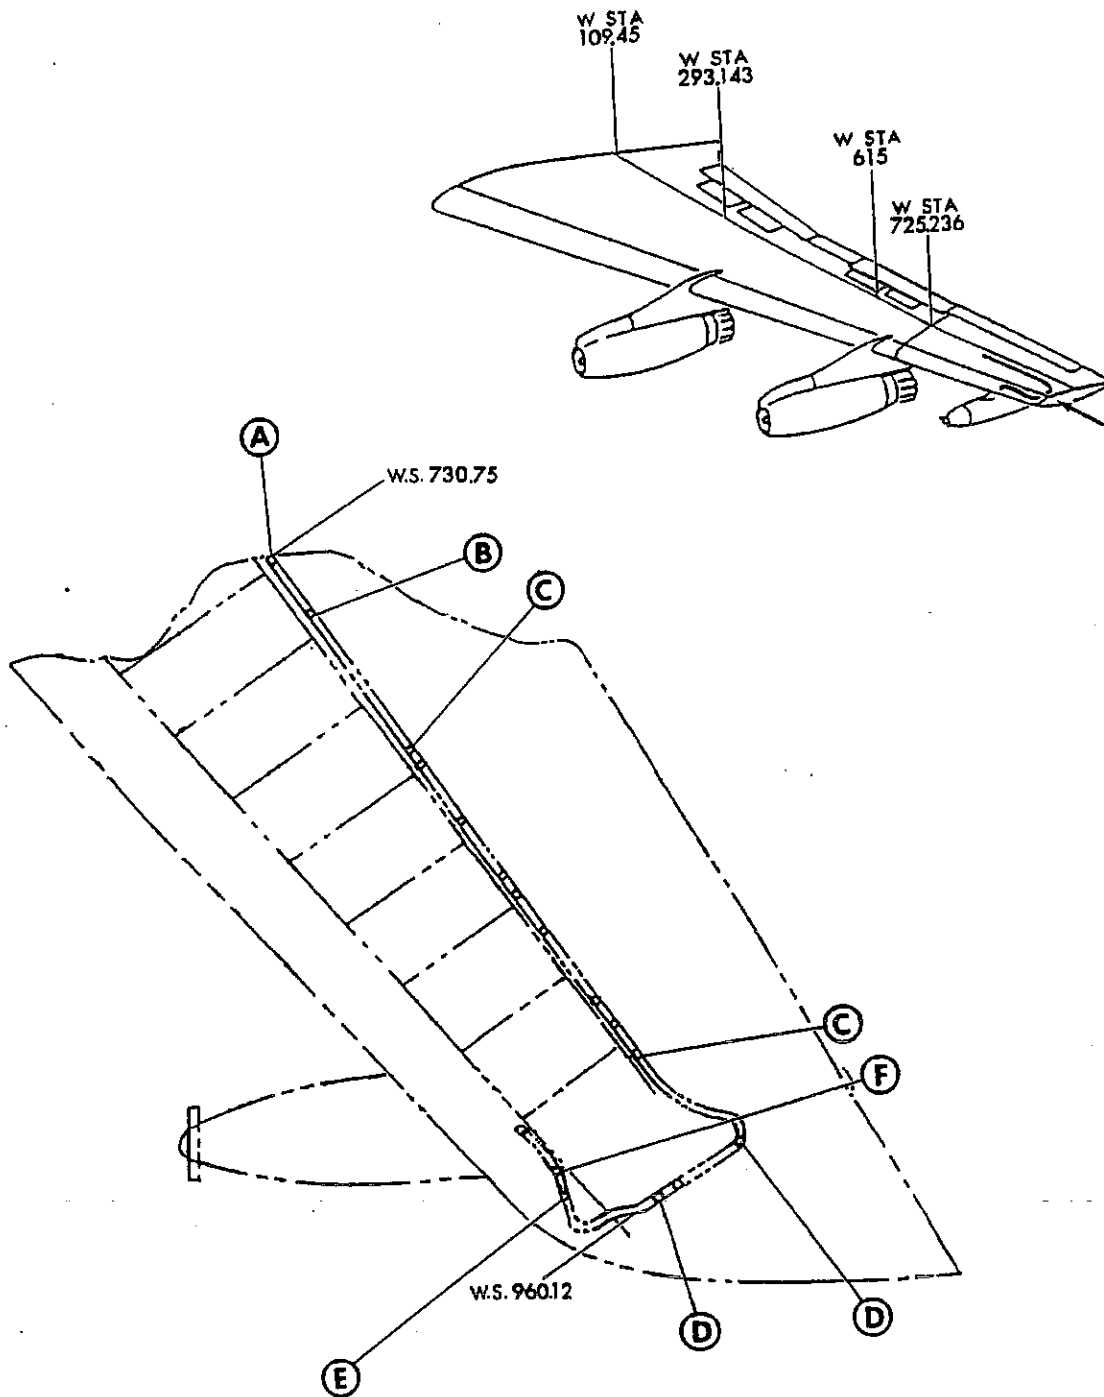


FIGURE 30. CLAMP INSTL. REAR SPAR AND WING TIP HARNESS (SHEET 1)

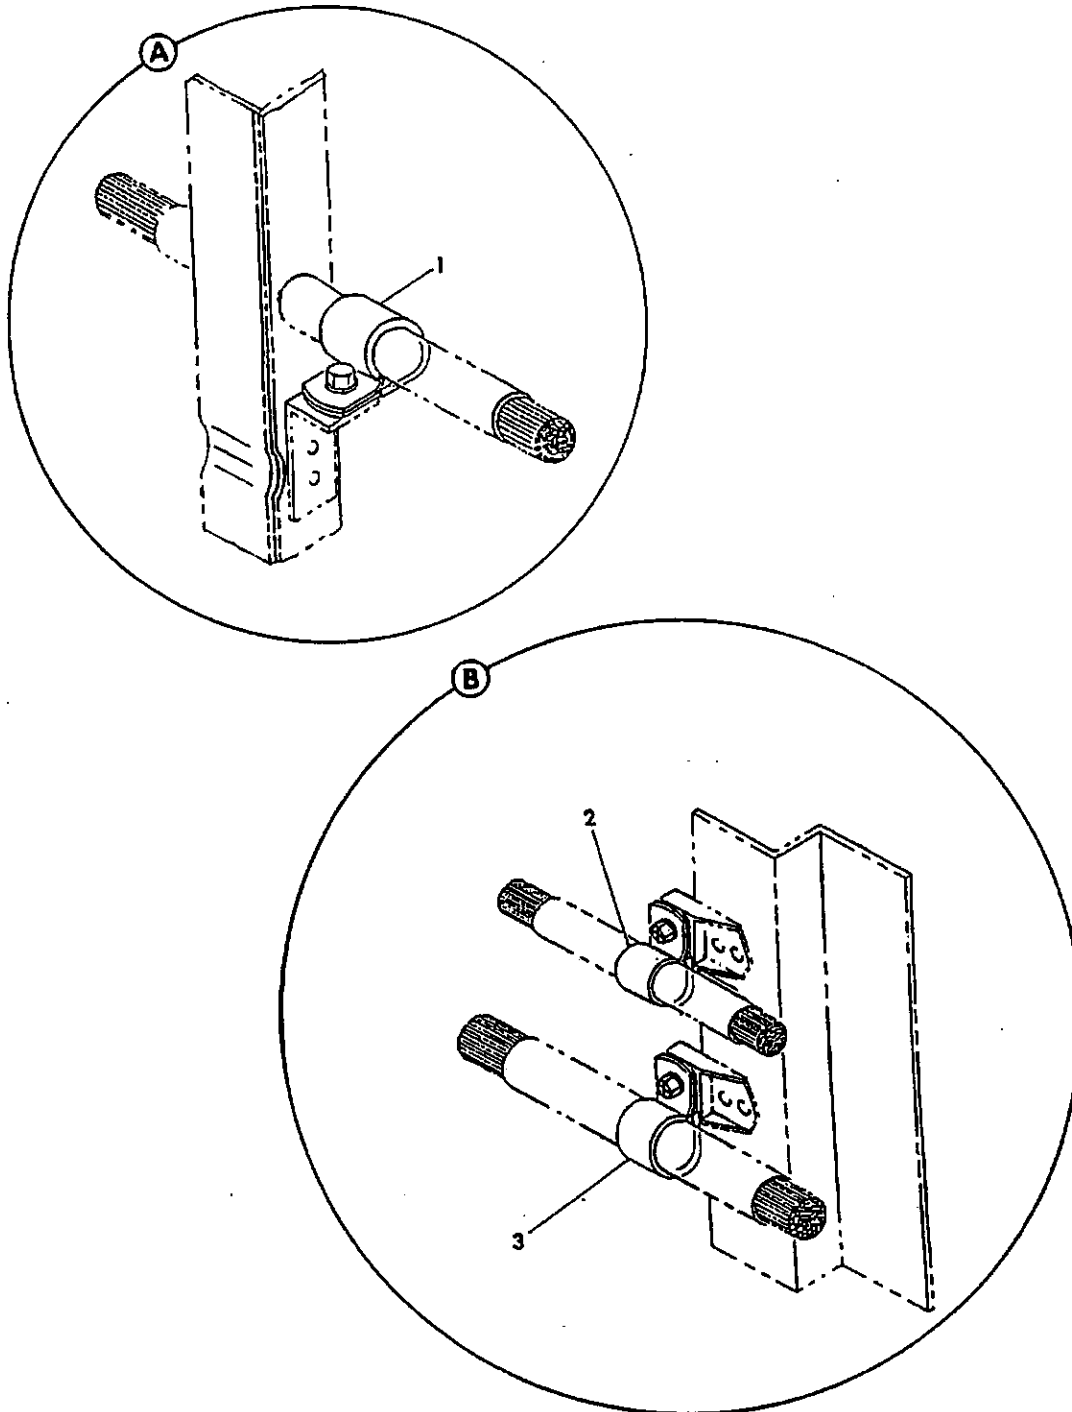


FIGURE 30. CLAMP INSTL. REAR SPAR AND WING TIP HARNESS (SHEET 2)

A 2402030 SHT 2 REV 255

NOV 21/94

24-02-30

DETAILED PARTS LIST
24-02-30
PAGE 1

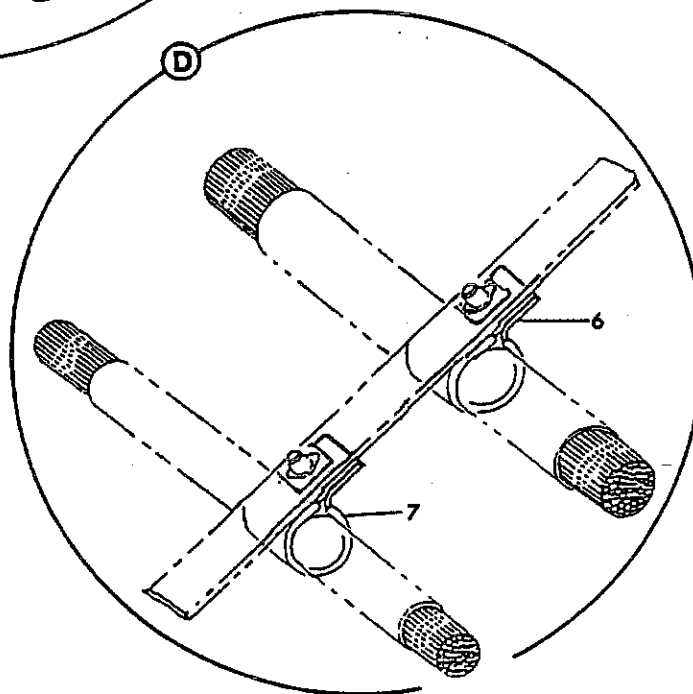
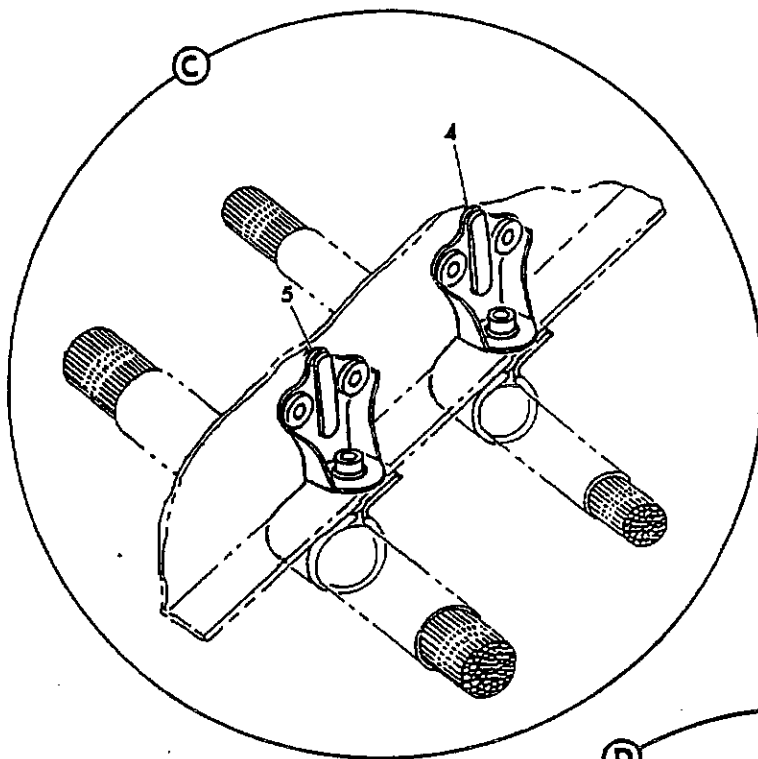


FIGURE 30. CLAMP INSTL. REAR SPAR AND WING TIP HARNESS (SHEET 3)

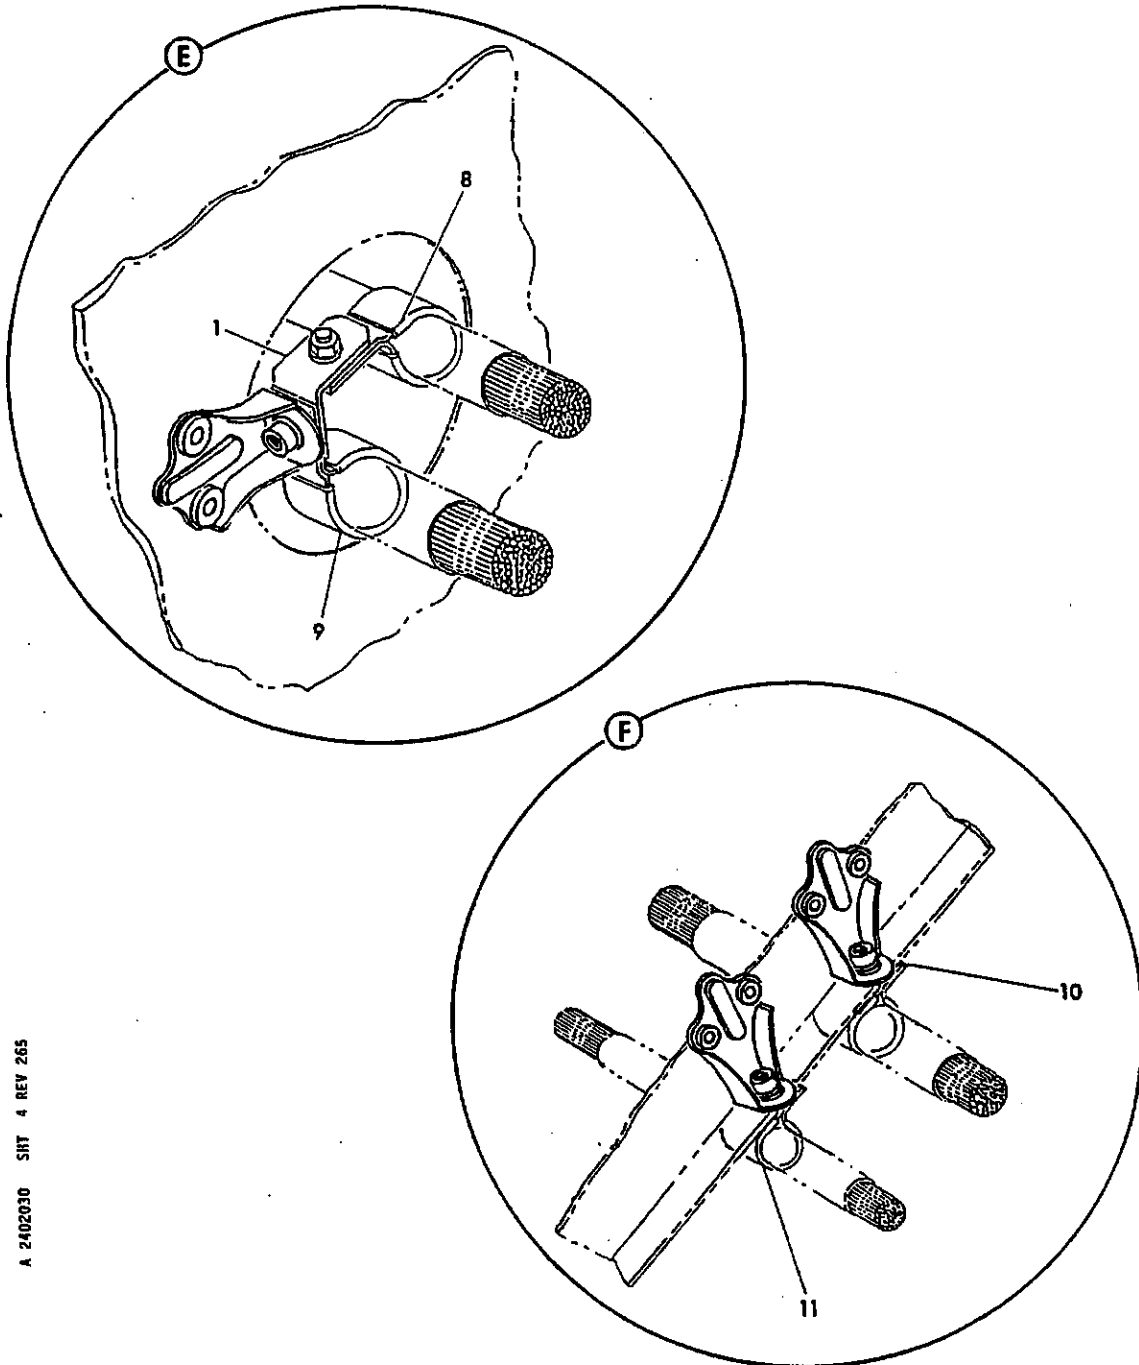


FIGURE 30. CLAMP INSTL, REAR SPAR AND WING TIP HARNESS (SHEET 4)

A 2402030 SHY 4 REV 265

NOV 21/94

24-02-30

DETAILED PARTS LIST
24-02-30
PAGE 3

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
30	361-89-90-74341-001	CLAMP INSTL, REAR SPAR AND WING TIP HARNESS (L.H. ONLY) (VS2500) (ADDED BY RAF 7211.019.225) (SEE 24-02, FIG. 12, ITEM 70)	0101 0350	RF
	361-89-90-74341-002	CLAMP INSTL, REAR SPAR AND WING TIP HARNESS (R.H. ONLY) (VS2500) (ADDED BY RAF 7211.019.225) (SEE 24-02, FIG. 12, ITEM 70)	0101 0350	RF
1	MS21919CJ12	. CLAMP	0101 0350	1
	NAS1801-3-12	. ATTACHING PARTS SCREW	0101 0350	1
	AN960JD10L	. WASHER.	0101 0350	2
	NAS679A3W	. NUT	0101 0350	1
2	MS21919CJ8	. CLAMP	0101 0350	1
	NAS1801-3-12	. ATTACHING PARTS SCREW	0101 0350	1
	AN960JD10L	. WASHER.	0101 0350	1
3	MS21919CJ12	. CLAMP	0101 0350	1
	NAS1801-3-12	. ATTACHING PARTS SCREW	0101 0350	1
	AN960JD10L	. WASHER.	0101 0350	1
4	MS21919CJ18	. CLAMP	0101 0350	9
	NAS1801-3-12	. ATTACHING PARTS SCREW	0101 0350	9
	AN960JD10L	. WASHER.	0101 0350	9
5	MS21919CJ12	. CLAMP	0101 0350	9
	NAS1801-3-12	. ATTACHING PARTS SCREW	0101 0350	9
	AN960JD10L	. WASHER.	0101 0350	9
6	MS21919CJ12	. CLAMP	0101 0350	3
	NAS1801-3-12	. ATTACHING PARTS SCREW	0101 0350	3
	AN960JD10L	. WASHER.	0101 0350	3
7	MS21919CJ8	. CLAMP	0101 0350	3
	NAS1801-3-12	. ATTACHING PARTS SCREW	0101 0350	3
	AN960JD10L	. WASHER.	0101 0350	3
8	MS21919CJ8	. CLAMP	0101 0350	1
	NAS1801-3-12	. ATTACHING PARTS SCREW	0101 0350	1
	AN960JD10L	. WASHER.	0101 0350	2
	NAS679A3W	. NUT	0101 0350	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R R	30 9 MS21919CJ12	. CLAMP	0101 0350	1
	NAS1801-3-12	. ATTACHING PARTS SCREW	0101 0350	1
	AN960JD10L	. WASHER.	0101 0350	1
R R R R R	10 MS21919CJ12	. CLAMP	0101 0350	2
	NAS1801-3-12	. ATTACHING PARTS SCREW	0101 0350	2
	AN960JD10L	. WASHER.	0101 0350	2
R R R R R	11 MS21919CJ8	. CLAMP	0101 0350	2
	NAS1801-3-12	. ATTACHING PARTS SCREW	0101 0350	2
	AN960JD10L	. WASHER.	0101 0350	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

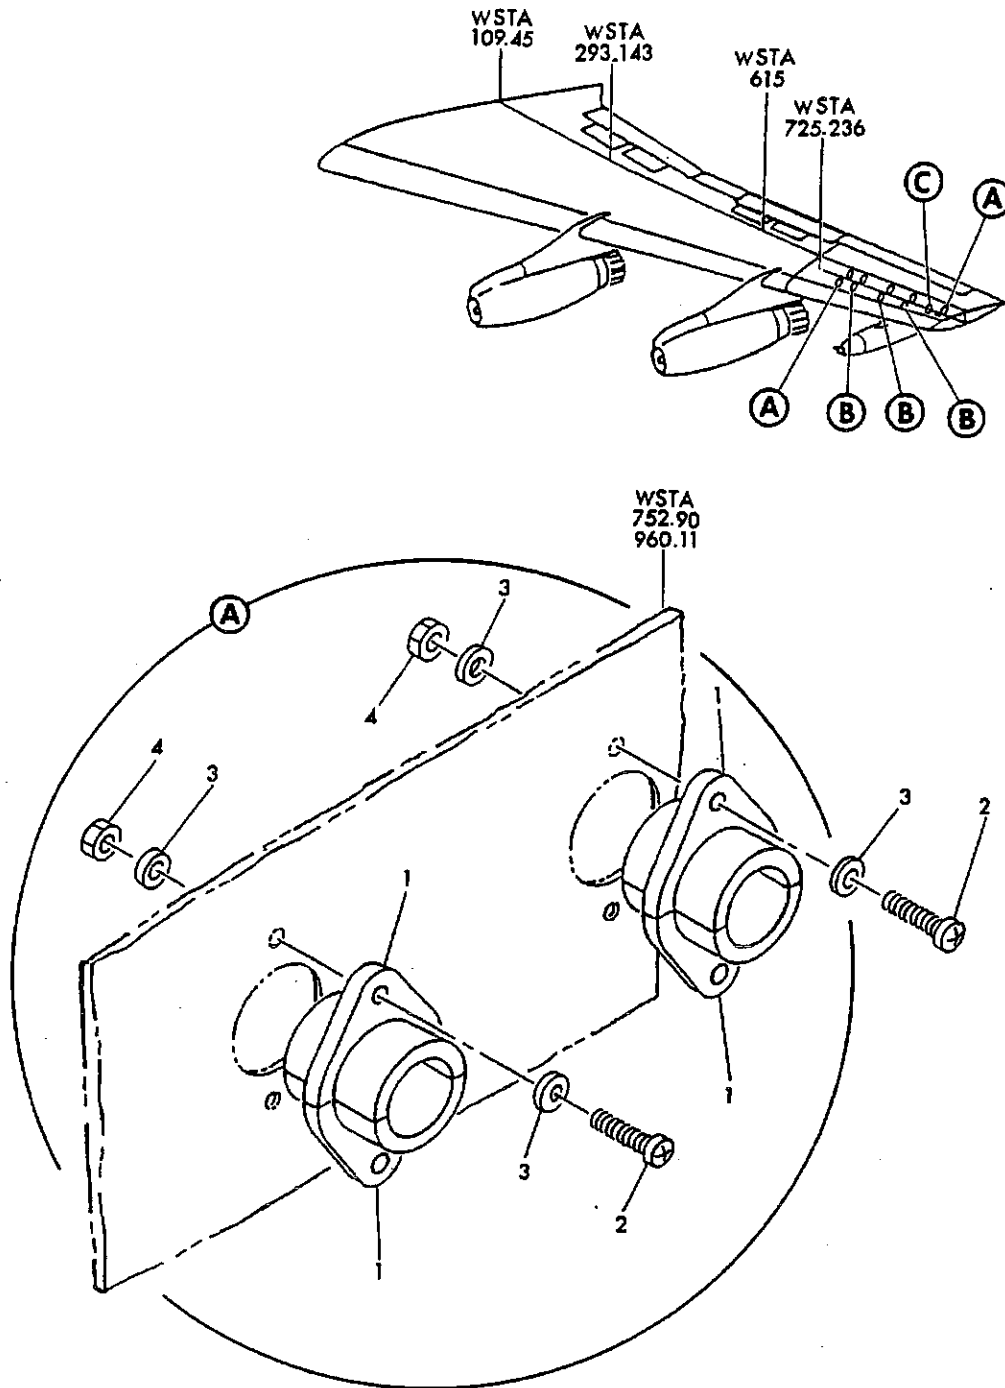


FIGURE 31. REAR SPAR AND WING TIP HARNESS INSTL (SHEET 1)

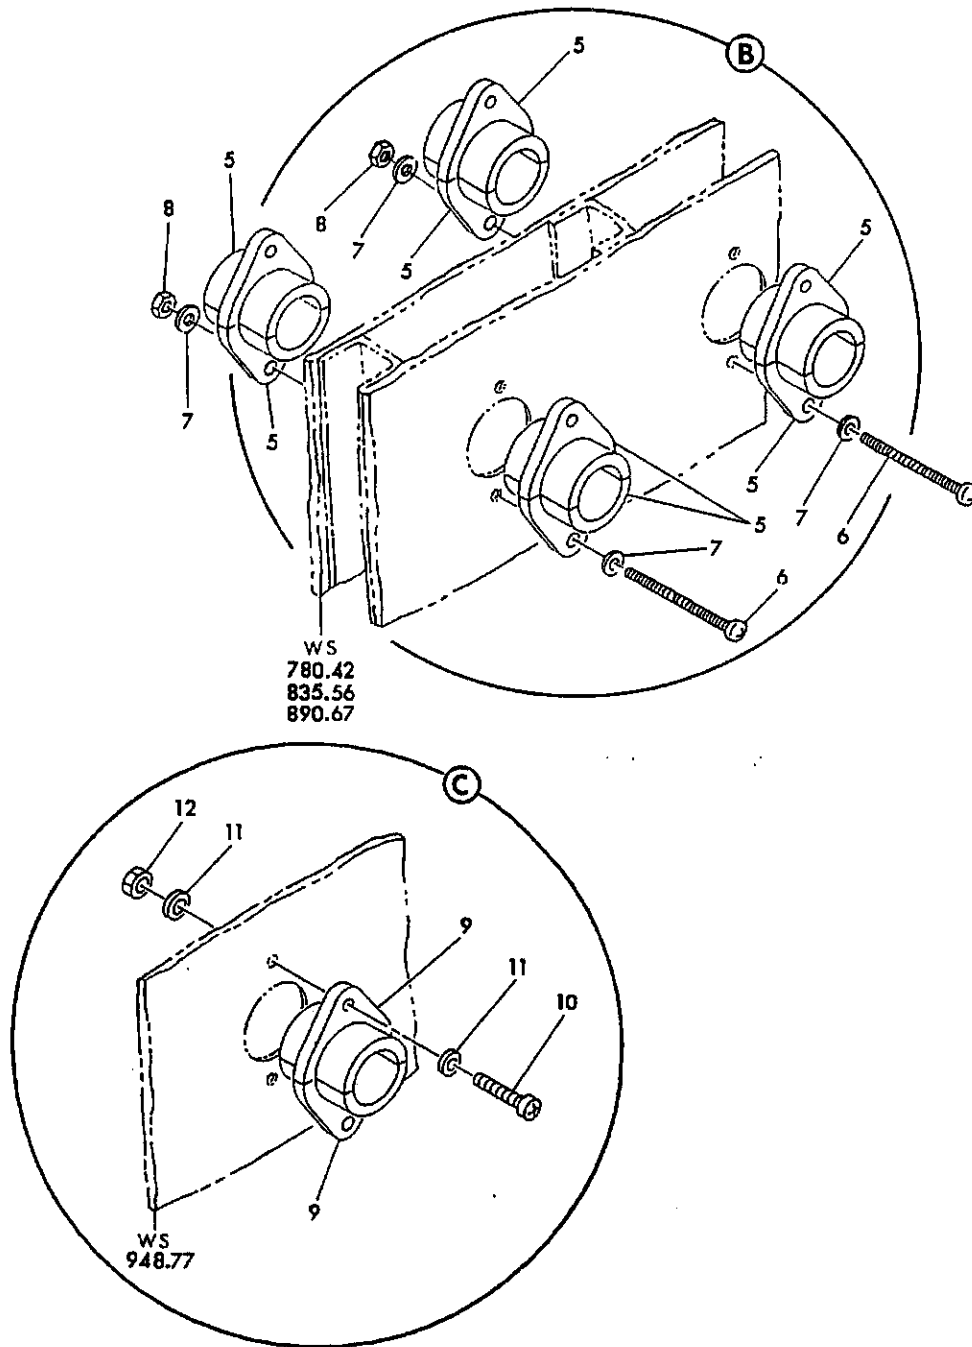


FIGURE 31. REAR SPAR AND WING TIP HARNESS INSTL (SHEET 2)

BOEING *707*
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R 31	361-89-90-74341-001	REAR SPAR AND WING TIP HARNESS INSTL, L.H. (VS2500) . .	0150	RF
R		(ADDED BY 7211.019.225) (SEE FIG. 12, ITEM 70)		
R	361-89-90-74341-002	REAR SPAR AND WING TIP HARNESS INSTL, L.H. (VS2500) . .	0150	RF
R		(ADDED BY 7211.019.225) (SEE FIG. 12, ITEM 70)		
R 1	BACS45A13	. SEAL FITTING HALF	0150	8
		ATTACHING PARTS		
R 2	NAS603-5P	. SCREW	0150	8
R 3	AN960JD10L	. WASHER.	0150	16
R 4	NAS679A3W	. NUT	0150	8
		-----*		
R 5	BACS45A13	. SEAL FITTING HALF	0150	24
		ATTACHING PARTS		
R 6	NAS603-28P	. SCREW	0150	12
R 7	AN960JD10L	. WASHER.	0150	24
R 8	NAS679A3W	. NUT	0150	12
		-----*		
R 9	BACS45A13	. SEAL FITTING HALF	0150	2
		ATTACHING PARTS		
R 10	NAS603-5P	. SCREW	0150	2
R 11	AN960JD10L	. WASHER.	0150	4
R 12	NAS679A3W	. NUT	0150	2
		-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

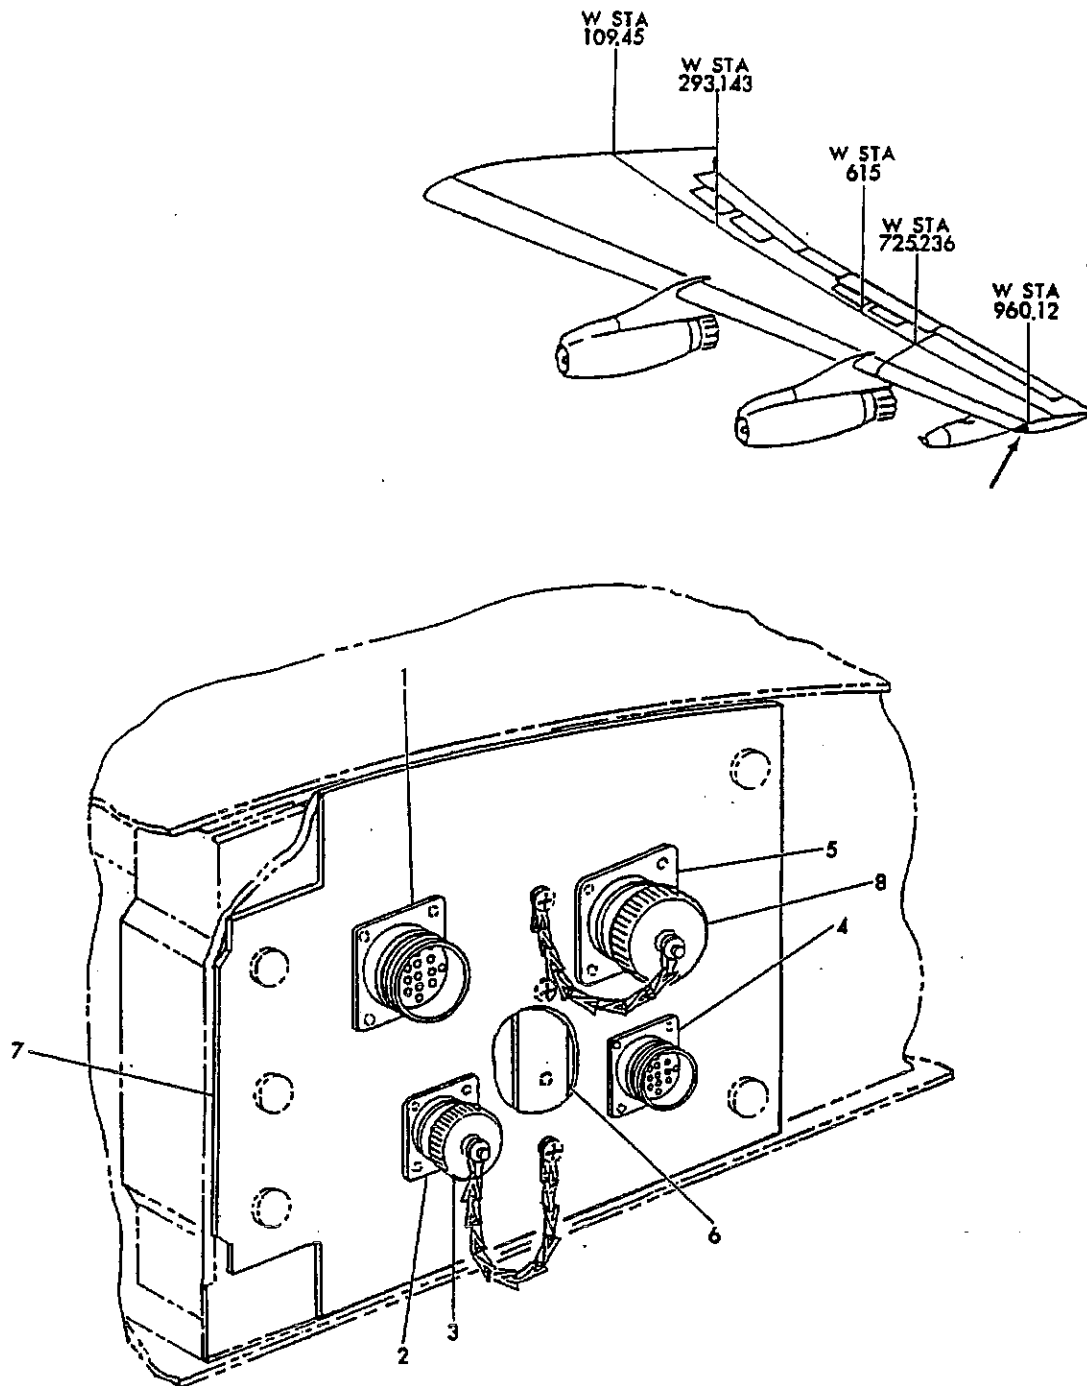


FIGURE 32. REAR SPAR AND WING TIP HARNESS INSTL (DUMMY RECEPTICLE)




PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R R R	32 361-89-90-74341-001	REAR SPAR AND WING TIP HARNESS INSTL, L.H. (DUMMY . . . RECEPTACLE) (VS2500) (ADDED BY RAF 7211.019.225) (SEE 24-02, FIG. 12, ITEM 70)	0150	RF
R R R R	361-89-90-74341-002	REAR SPAR AND WING TIP HARNESS INSTL, R.H. (DUMMY . . . RECEPTACLE) (VS2500) (ADDED BY RAF 7211.019.225) (SEE 24-02, FIG. 12, ITEM 70)	0150	RF
R	1 MS345DL20-27S	. RECEPTACLE.	0150	1
R R R	NAS600-7P AN960JD4 NAS679A04	. ATTACHING PARTS . SCREW WASHER. NUT	0150 0150 0150	4 4 4
R	2 MS27296-2	. DUMMY RECEPTACLE.	0150	1
R R R	NAS600-7P AN960JD4 NAS679A04W	. ATTACHING PARTS . SCREW WASHER. NUT	0150 0150 0150	4 4 4
R	3 MS27294-2	. DUST CAP.	0150	1
R	4 M83723-82R1212N	. RECEPTACLE.	0150	1
R R R	NAS600-7P AN960JD4 NAS679A04W	. ATTACHING PARTS . SCREW WASHER. NUT	0150 0150 0150	4 4 4
R	5 MS3105-2D	. DUMMY RECEPTACLE.	0150	1
R R R	NAS600-7P AN960JD4 NAS679A04W	. ATTACHING PARTS . SCREW WASHER. NUT	0150 0150 0150	4 4 4
R	6 391-89-90-74341-105	. ANGLE, (VS2500)	0150	1
R R R	NAS602-7P AN960JD8 NAS679A08W	. ATTACHING PARTS . SCREW WASHER. NUT	0150 0150 0150	4 8 4
R	7 361-89-90-74341-107	. DOUBLER, (VS2500)	0150	1
R	8 MS25043-20C	. DUST CAP.	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/94

24-02-32

DETAILED PARTS LIST
24-02-32
PAGE 1

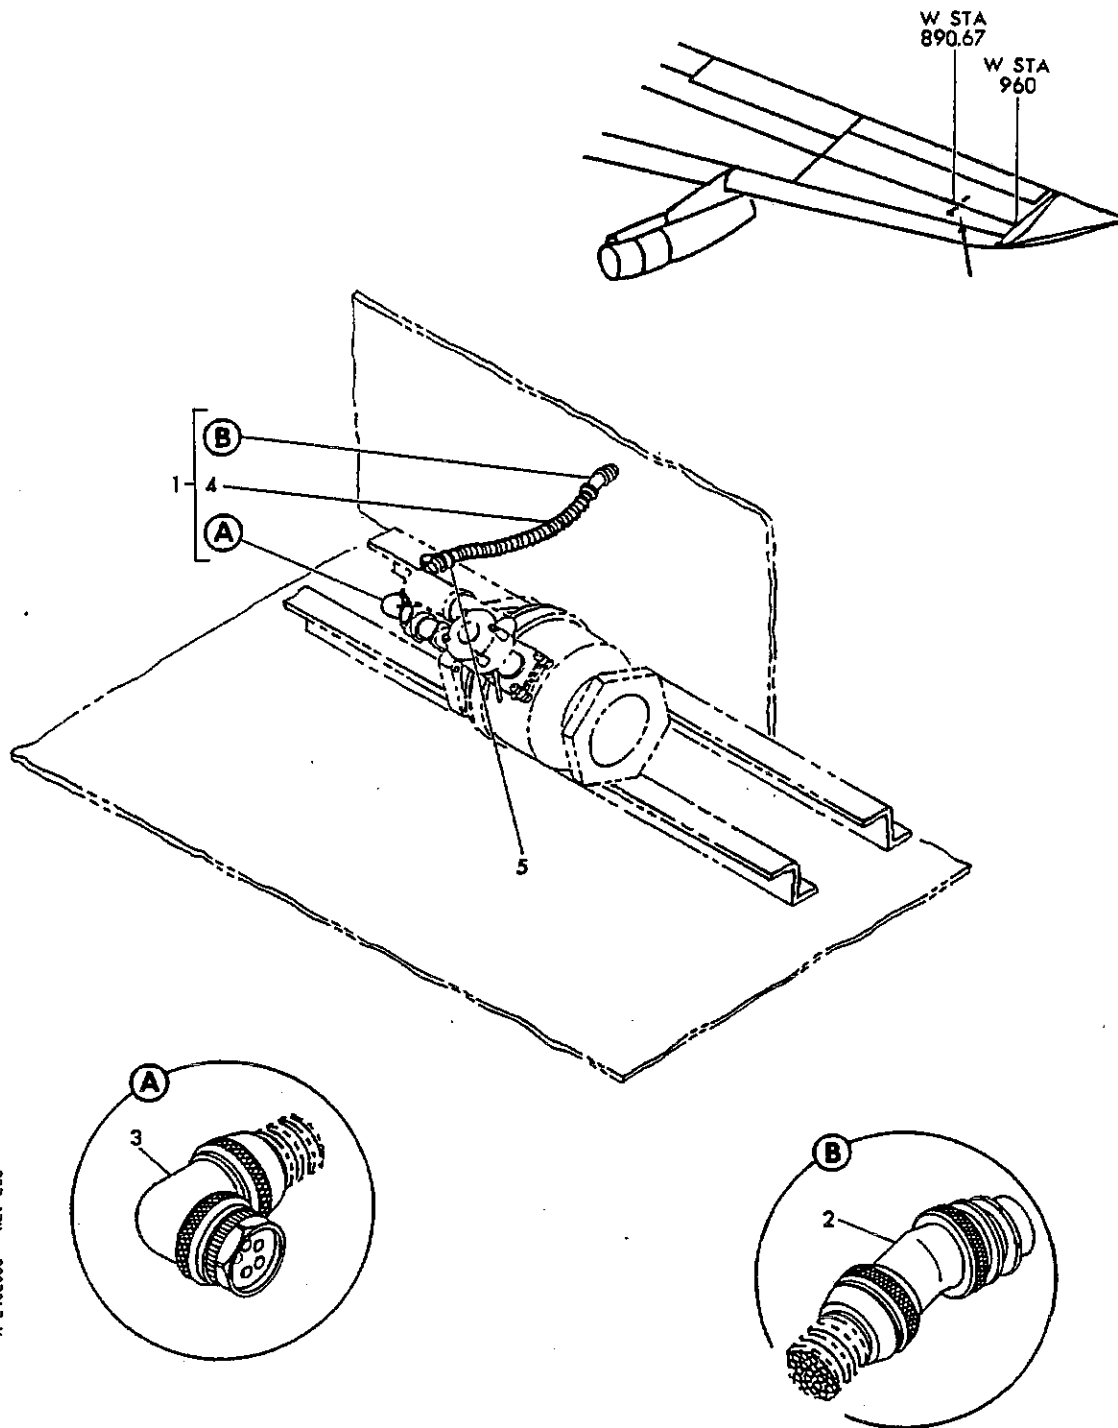



A 2402033 REV 265

FIGURE 33. ISOLATION VALVE HARNESS INSTL




PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R R R R R R R	33	361-89-90-74341-003	ISOLATION VALVE HARNESS INSTL, (LH ONLY) (VS2500) . . . (ADDED BY RAF 7211.019.225) (SEE 24-02, FIG. 12, ITEM 71)							0150	RF
		361-89-90-74341-004	ISOLATION VALVE HARNESS INSTL, (RH ONLY) (VS2500) . . . (ADDED BY RAF 7211.019.225) (SEE 24-02, FIG. 12, ITEM 71)							0150	RF
	1	361-89-90-74351-101	. CONDUIT ASSY, (VS2500)							0150	1
	2	710AB001M1420	. . ADAPTER ASSY, (ELBOW 45 DEG.)							0150	1
	3	710AA001M1220	. . ADAPTER ASSY, (ELBOW 90 DEG.)							0150	1
	4	M22759-7-20-9	. . ELECTRICAL WIRES.							0150	AR
	5	MS21919CJ12	. CLAMP							0150	1
			ATTACHING PARTS								
		NAS1801-3-8	. SCREW							0150	1
		AN960JD10L	. WASHER.							0150	1
		NAS679A3W	. NUT							0150	1
			-----*								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

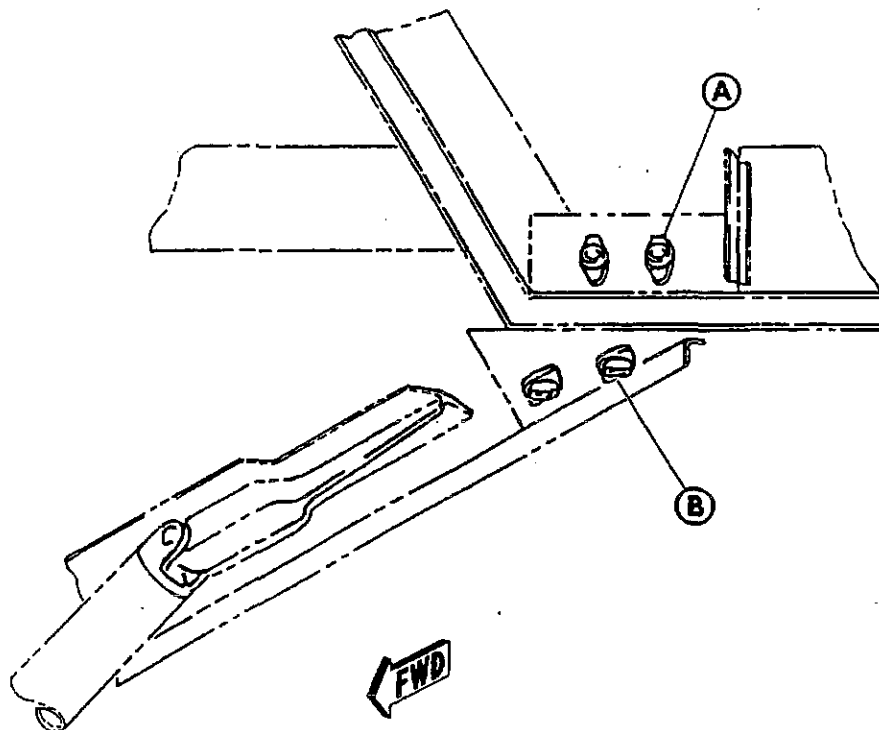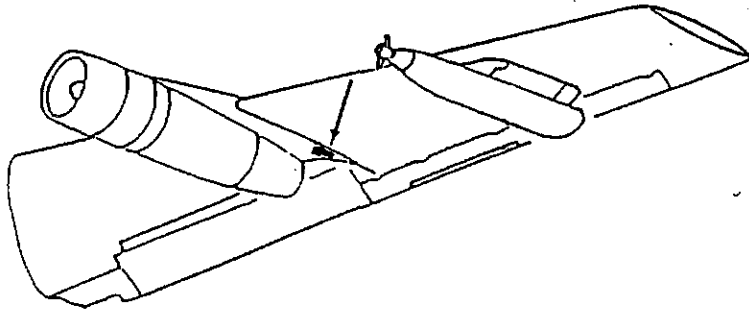

A 2402034 SHT 1 REV 265

FIGURE 34. ELECTRICAL PASS THRU INSTL. (WING STA 725.236 AREA) (SHEET 1)

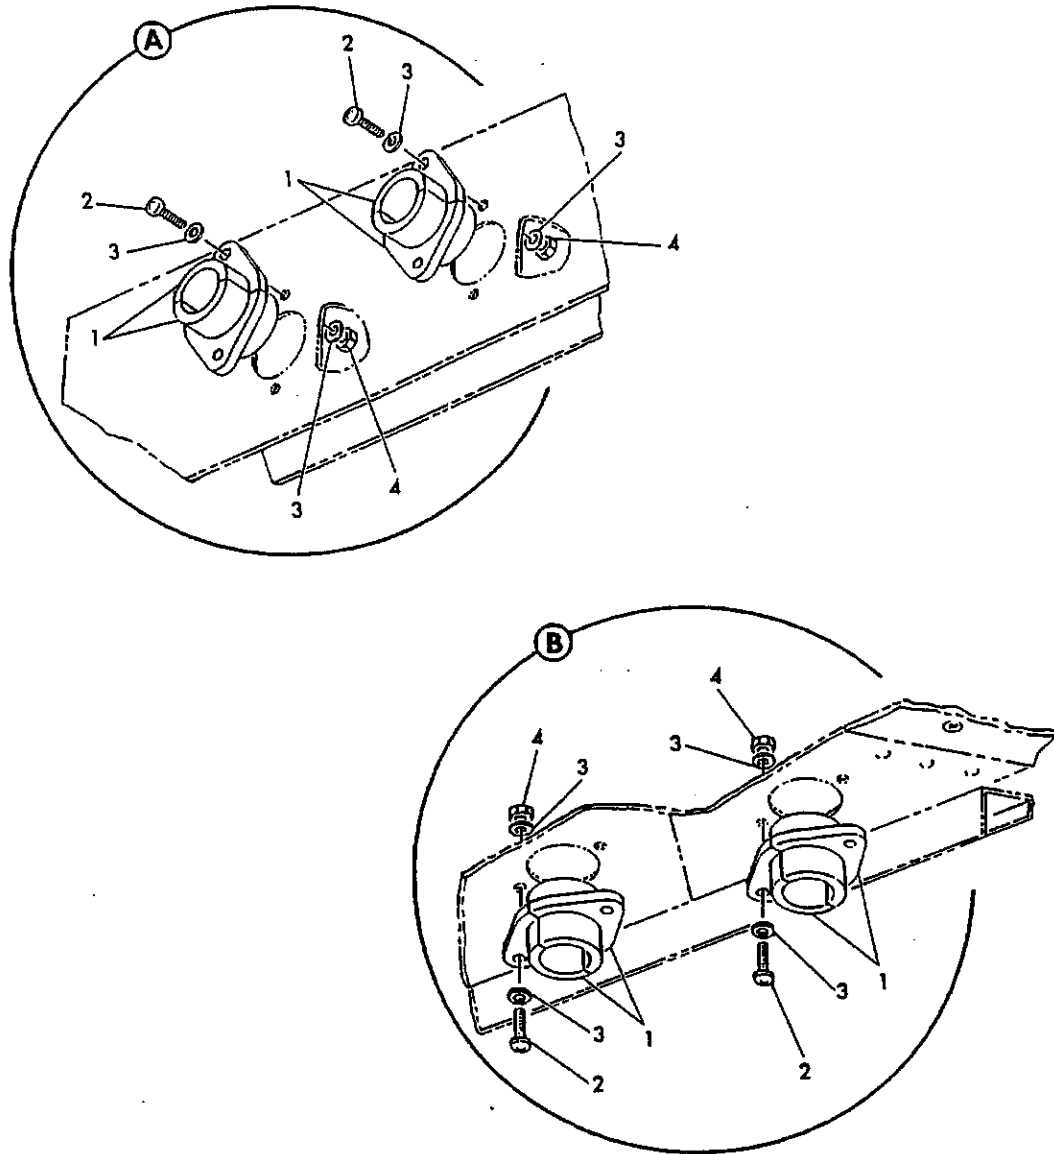

A 2402034 SMT 2 REV 265

FIGURE 34. ELECTRICAL PASS THRU INSTL. (WING STA 725.236 AREA) (SHEET 2)

NOV 21/94

24-02-34

DETAILED PARTS LIST
24-02-34
PAGE 1

BOEING *707*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
R R R R R R R R R R	34	361-89-90-74340-003	ELECTRICAL PASS THRU INSTL, (WING STA. 725.236 AREA). . L.H. (VS2500) (ADDED BY RAF 7211.019.225) (SEE FIG. 12, ITEM 71)	0150 RF
		361-89-90-74340-004	ELECTRICAL PASS THRU INSTL, (WING STA. 725.236 AREA). . R.H. (VS2500) (ADDED BY RAF 7211.019.225) (SEE FIG. 12, ITEM 71)	0150 RF
	1	BACS45A13	. SEAL FITTING HALF	0150 8
	2	NAS603-B	ATTACHING PARTS	0150 8
R R R	3	AN960JD10L	. SCREW	0150 16
	4	NAS679A3W	. WASHER.	0150 8
		NUT	0150	8
-----*				
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

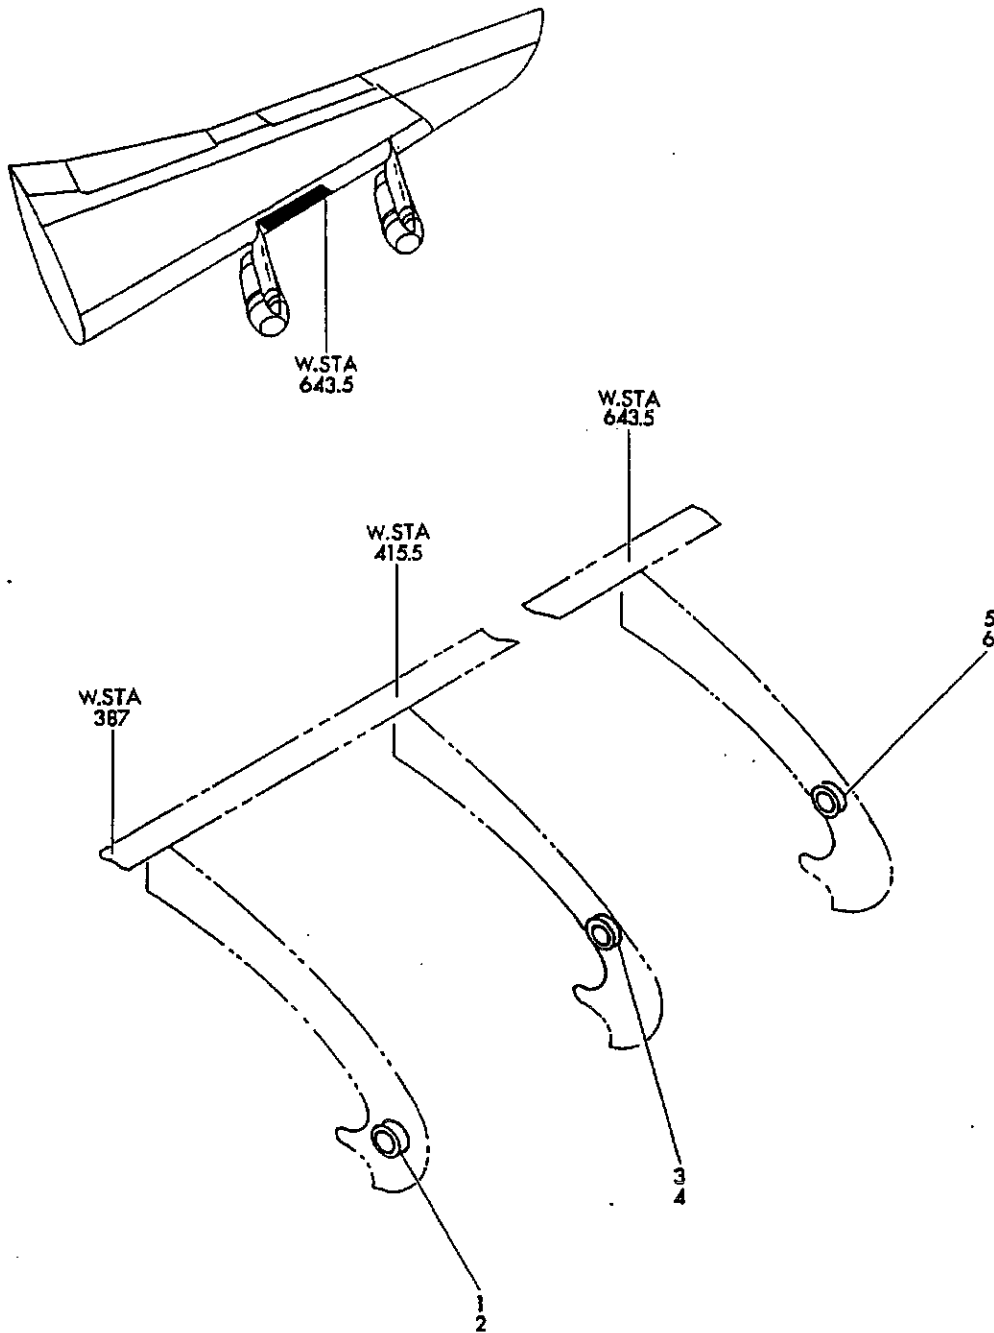


FIGURE 35. WING WIRING ROUTE W.S. 387.00 TO W.S. 643.50



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF	UNITS
				FROM TO	PER ASSY
R R R R R R R R R R R R	35	361-89-90-74339-001	WING WIRING ROUTE, W.S. 387.00 TO W.S. 643.50 (VS2500) (GROMMET INSTL ONLY)	0150	RF
	1	391-89-90-72331-021	WING ROOT PASS THRU, W.S. 387.00 (L.H. ONLY) (VS2500) . (ADDED BY RAF 7211.019-225) (SEE 24-02, FIG. 12, ITEM 73)	0150	RF
	1	391-89-90-72331-022	WING ROOT PASS THRU, W.S. 387.00 (R.H. ONLY) (VS2500) . (ADDED BY RAF 7211.019-225) (SEE 24-02, FIG. 12, ITEM 73)	0150	RF
	2	NAS557-8C	. GROMMET	0150	1
	3	391-89-90-72331-023	WING ROOT PASS THRU, W.S. 415.50 (L.H. ONLY) (VS2500) . (ADDED BY RAF 7211.019-225) (SEE 24-02, FIG. 12, ITEM 74)	0150	RF
	3	391-89-90-72331-024	WING ROOT PASS THRU, W.S. 415.50 (R.H. ONLY) (VS2500) . (ADDED BY RAF 7211.019-225) (SEE 24-02, FIG. 12, ITEM 74)	0150	RF
	4	NAS557-8C	. GROMMET	0150	1
	5	391-89-90-72331-025	WING ROOT PASS THRU, W.S. 643.50 (L.H. ONLY) (VS2500) . (ADDED BY RAF 7211.019-225) (SEE 24-02, FIG. 12, ITEM 75)	0150	RF
	5	391-89-90-72331-026	WING ROOT PASS THRU, W.S. 643.50 (L.H. ONLY) (VS2500) . (ADDED BY RAF 7211.019-225) (SEE 24-02, FIG. 12, ITEM 75)	0150	RF
	6	NAS557-8C	. GROMMET	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

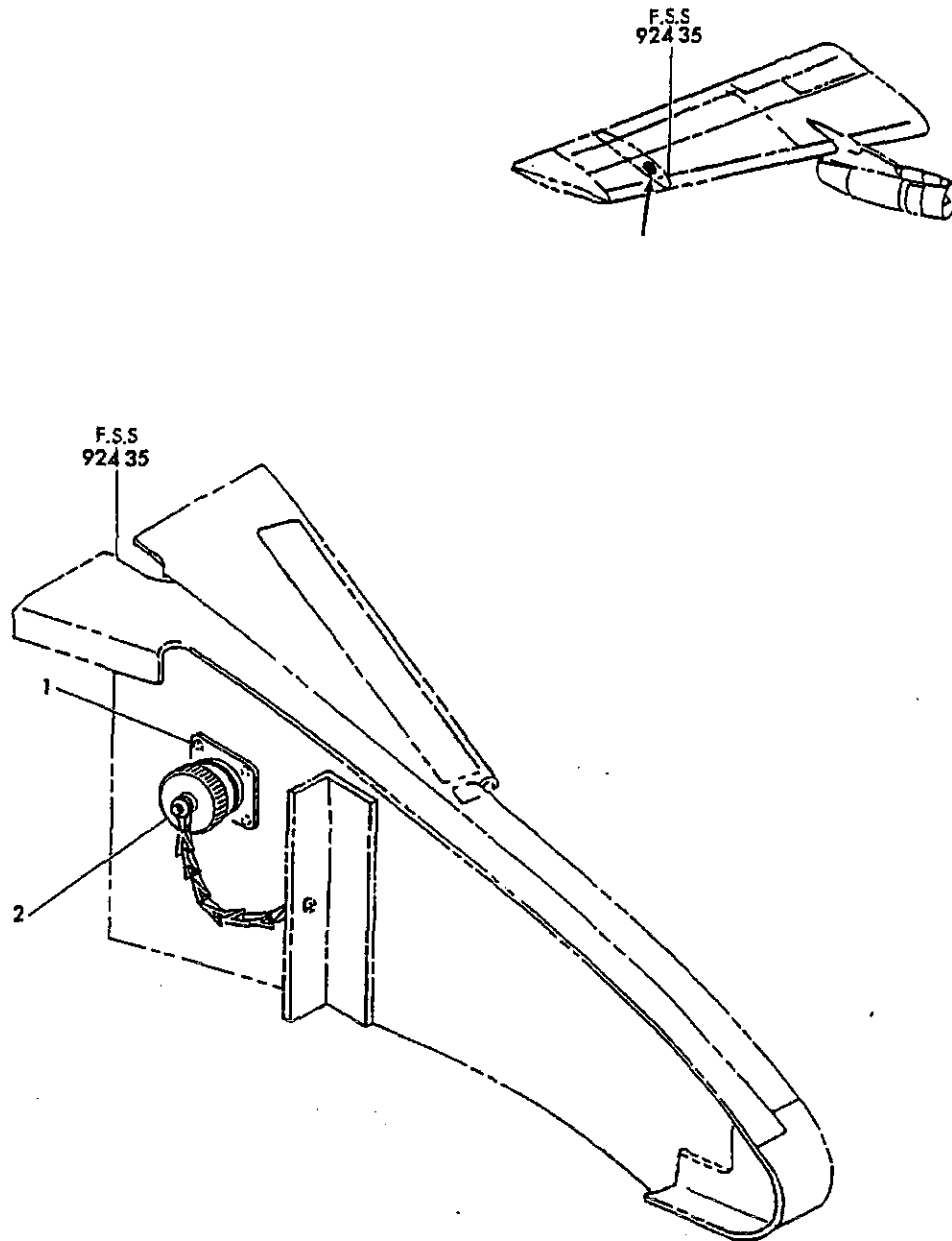


FIGURE 36. DUMMY RECEPTACLE INSTL. (PYLON FLOOD AND FORMATION LIGHTS ONLY)





PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
R R R R R R R R R R	36	361-89-90-74341-005	DUMMY RECEPTACLE INSTL, F.S. STA. 924.35 L.H. (PYLON. . FLOOD AND FORMATION LIGHTS ONLY) (VS2500) (ADDED BY RAF 7211.019.225) (SEE 24-02, FIG. 12, ITEM 76)	0150 RF
		361-89-90-74341-006	DUMMY RECEPTACLE INSTL, F.S. STA. 924.35 R.H. (PYLON. . FLOOD AND FORMATION LIGHTS ONLY) (VS2500) (ADDED BY RAF 7211.019.225) (SEE 24-02, FIG. 12, ITEM 76)	0150 RF
	1	MS3115-14B	. DUMMY RECEPTACLE.	0150 1
			ATTACHING PARTS	
		NAS600-7P	. SCREW	0150 4
		AN960JD4	. WASHER.	0150 8
		NAS679A04W	. NUT	0150 4
			-----*	
	2	MS3181-14C	. DUCT CAP.	0150 1
			ATTACHING PARTS	
		NAS602-7P	. SCREW	0150 1
		AN960JD8	. WASHER.	0150 2
		NAS679A08W	. NUT	0150 1
			-----*	
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/94

24-02-36

DETAILED PARTS LIST
24-02-36
PAGE 1

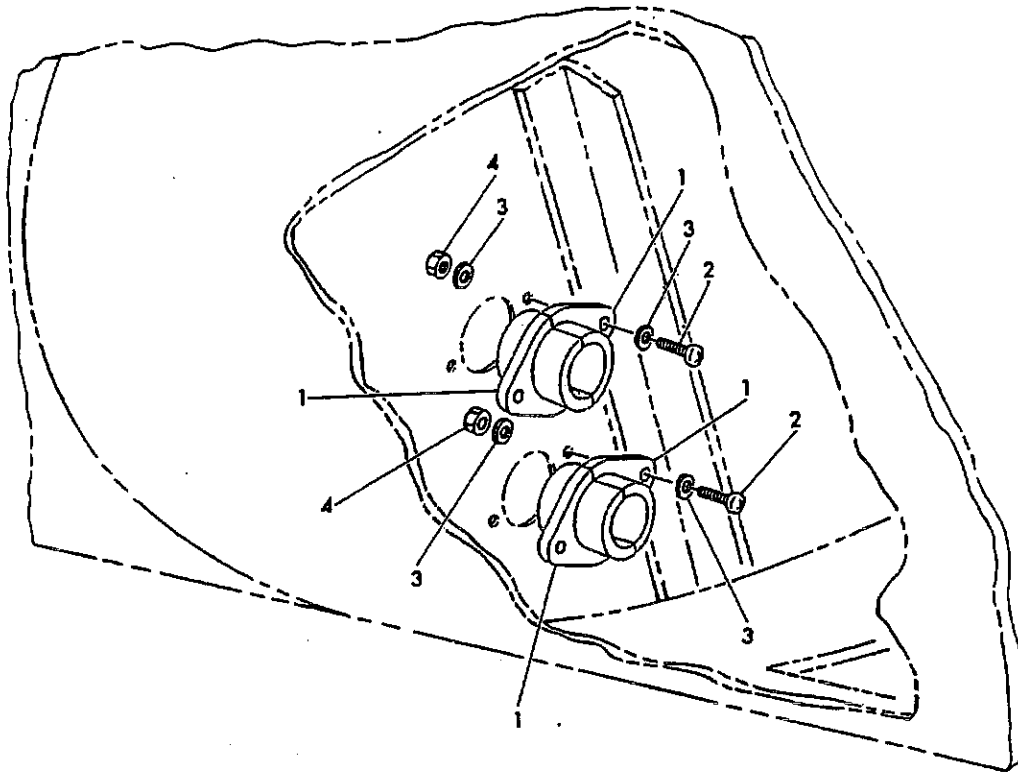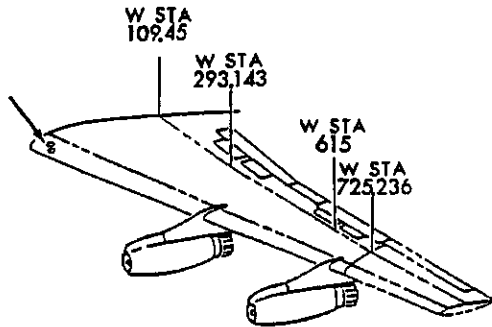


A 2402037 REV 265

FIGURE 37. SEAL INSTL, ELECTRICAL WIRING




PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R R R	37	391-89-90-72331-027	SEAL INSTL, ELECTRICAL WIRING F.S.S. 16.75 (L.H. ONLY) (VS2500) (ADDED BY RAF 7211.019.225) (SEE FIG. 12, ITEM 77)							0150	RF
		391-89-90-72331-028	SEAL INSTL, ELECTRICAL WIRING F.S.S. 16.75 (R.H. ONLY) (VS2500) (ADDED BY RAF 7211.019.225) (SEE FIG. 12, ITEM 77)							0150	RF
	1	BACS45A13	. SEAL FITTING, HALF.							0150	4
	2	NAS603-8	. ATTACHING PARTS							0150	4
	3	AN960JD10L	. SCREW							0150	8
	4	NAS509-3	. WASHER.							0150	2
			. NUT							0150	
			-----*								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

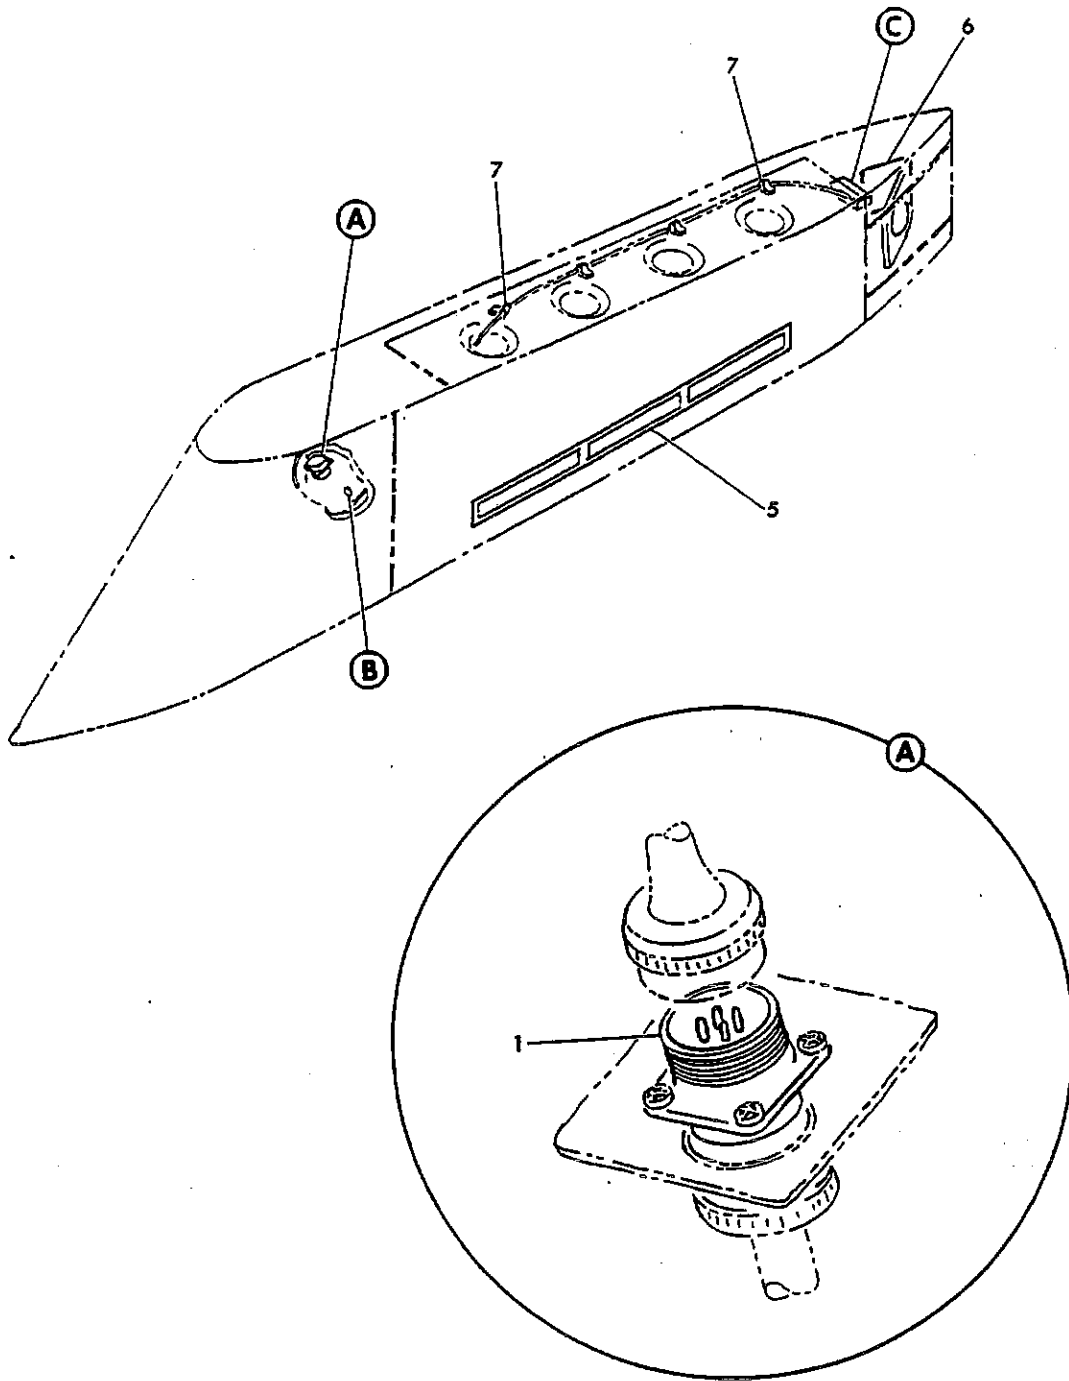

A 2402038 SHT 1 REV 265

FIGURE 38. A/R POD PYLON ASSY. (ELECTRICAL INSTALLATIONS ONLY)(SHEET 1)

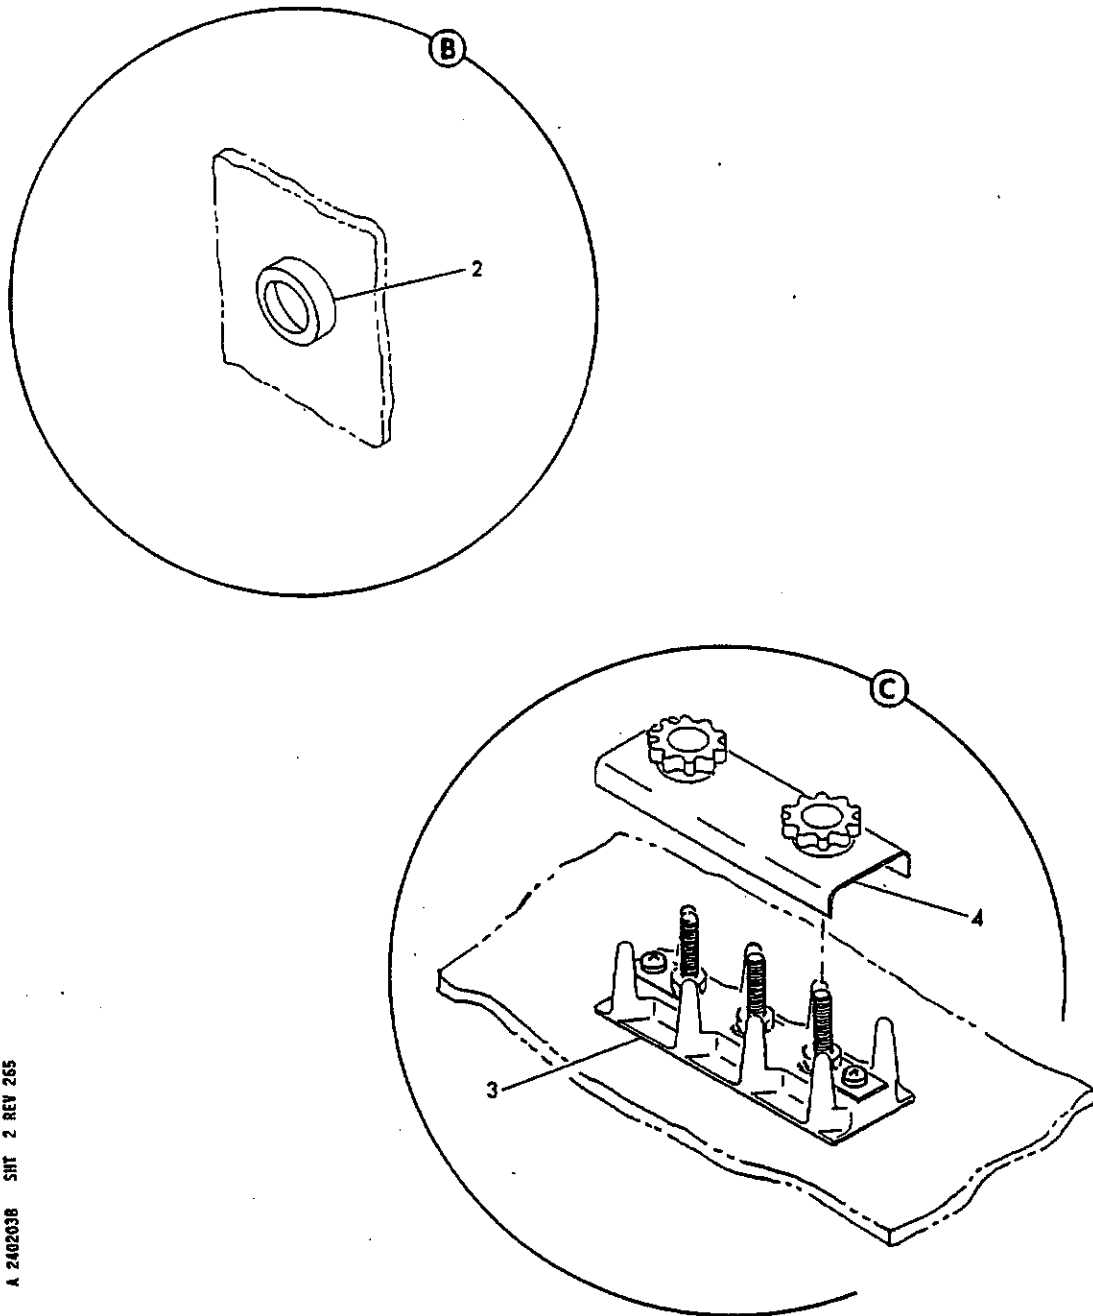

A 2402038 SHIT 2 REV 265



FIGURE 38. A/R POD PYLON ASSY, (ELECTRICAL INSTALLATIONS ONLY)(SHEET 2)

NOV 21/94

24-02-38

DETAILED PARTS LIST
24-02-38
PAGE 1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

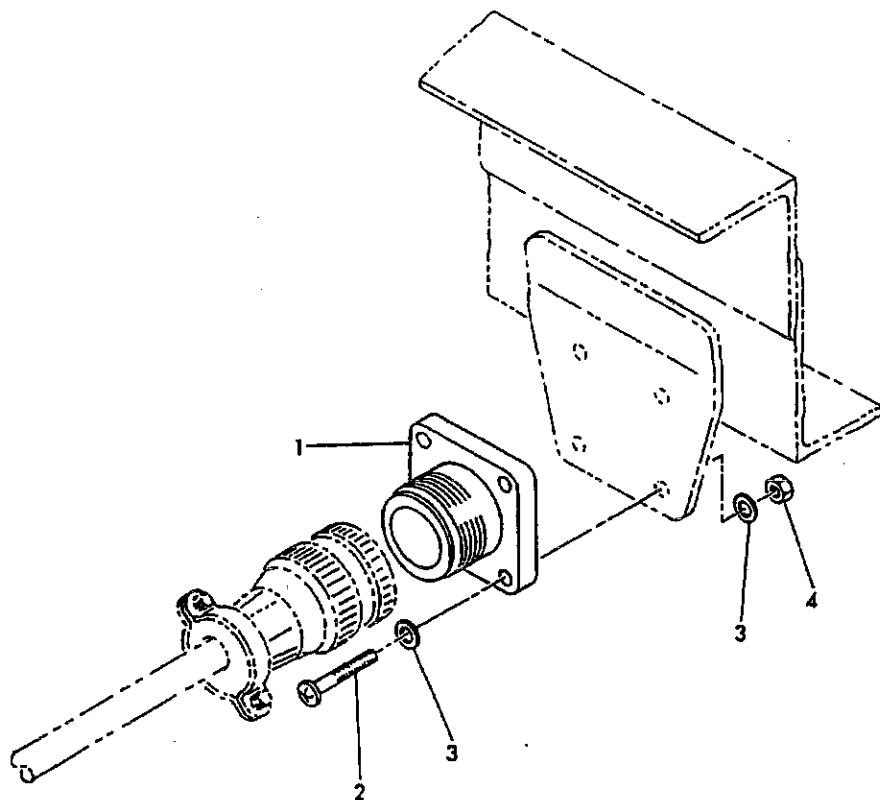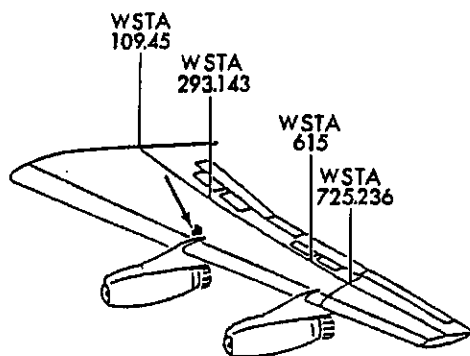

A 2402039 REV 265

FIGURE 39. REPLENISH VALVE INSTL. (DUMMY RECEPTACLE INSTL ONLY)

MISSING ITEM NUMBERS ARE NOT APPLICABLE



SECTION 03
FUSELAGE ELECTRICAL AND ELECTRONIC SYSTEMS

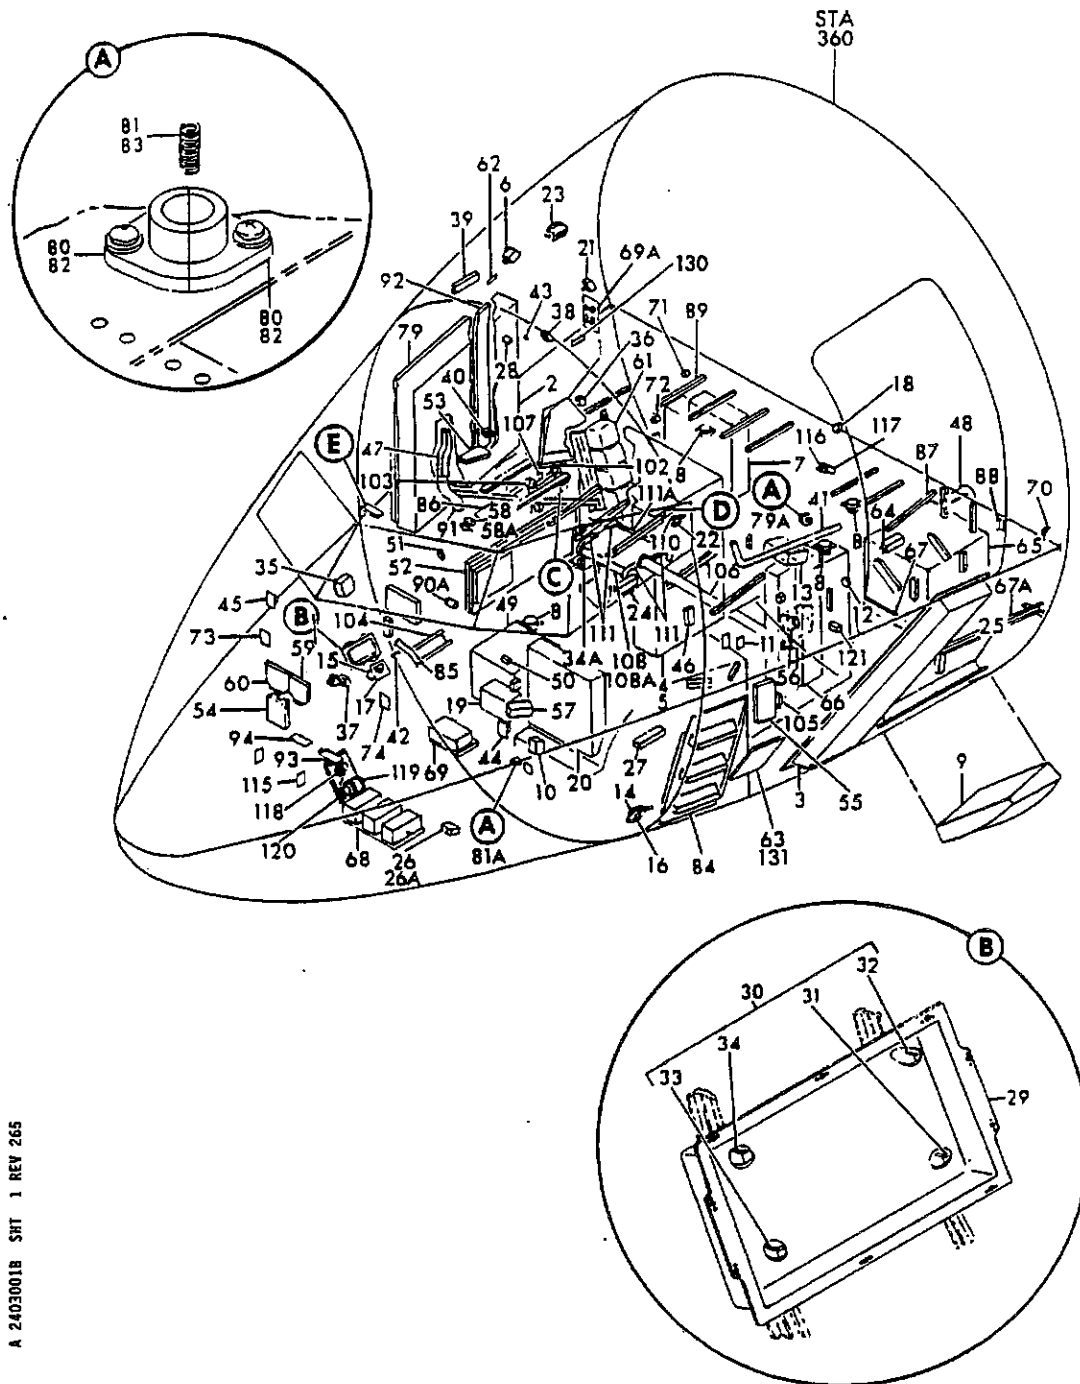


FIGURE 1B. ELECTRICAL INSTL, SECTION 51 (SHEET 1)

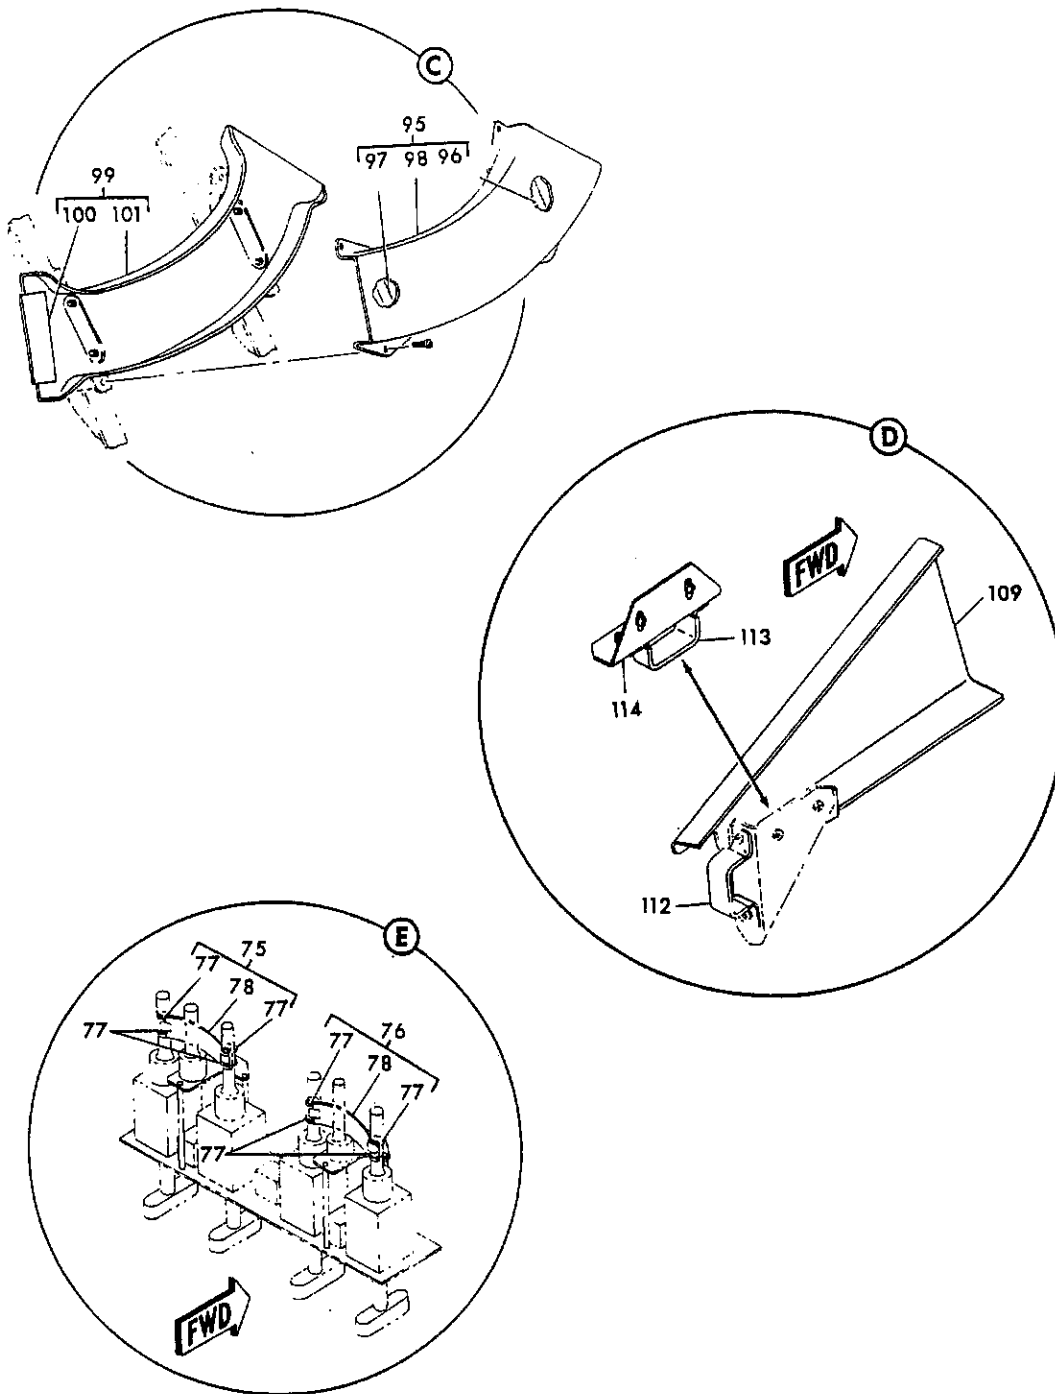


FIGURE 1B. ELECTRICAL INSTL. SECTION (SHEET 2)

NOV 21/90

24-03-18

DETAILED PARTS LIST
24-03-18
PAGE 1

DETAILED PARTS LIST
24-03-1B
PAGE 2

RAF
NOV 21/91

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
18 47	65-8680	DUCT INSTL, SMOKE EVACUATION (SEE 25-19, FIG. 9) . . .							0150	1
49	65-6468	BATTERY INSTL, NOSE WHEEL WELL ELECTRIC STORAGE (SEE 24-12, FIG. 1)							0150	1
50	66-5166	SHUNT INSTL, ELECTRIC STORAGE BATTERY AMMETER (SEE 24-12, FIG. 3)							0150	1
51	66-5379	LIGHT INSTL, J1 RELAY SHIELD (SEE 33-3, FIG. 15) . . .							0150	1
	65-7221	SHIELD INSTL, STATION 294.5 J1 RELAY (REWORKED TO 391-34-50-74473-001) (DELETED BY RAF MOD 7211.019-4)							0150	1
		ELECTRICAL POWER, (SEE 24-6, FIG. 39A)							0150	
		REQUIRED PLACARDS, (SEE 11-2, FIG. 130)							0150	
	391-34-50-74473-001	RELAY INSTL, TACAN LIGHTING (VZ0031) (65-7221 MODIFIED BY RAF MOD 7211.019-4)							0150	1
		ELECTRICAL POWER, (SEE 24-6, FIG. 39A)							0150	
		REQUIRED PLACARDS, (SEE 11-2, FIG. 130)							0150	
55	65-51373-1	BALLAST INSTL, NAVIGATORS TABLE FLUORESCENT LIGHTS . . .							0150	1
		LIGHTS, (SEE 33-3, FIG. 19A, 19B, 19C AND 19D)							0150	
		REQUIRED PLACARDS, (SEE 11-2, FIG. 133)							0150	
56	69-10058	HORN INSTL, GROUND CREW CALL (SEE 25-4, FIG. 31) . . .							0150	1
57	65-28088	SHIELD INSTL, J18 STABILIZER TRIM CONTROL (SEE 27-12, FIG. 7)							0150	1
58	65-30064-2	FLOODLIGHT INSTL, MAIN AC POWER SHIELD (SEE 33-3, FIG. 15)							0150	1
59	65-16007	LIGHTING INSTL, STATION 178 RESISTORS AND INTEGRAL LIGHTING TRANSFORMER LH (SEE 24-13, FIG. 122)							0150	1
60	65-16005	LIGHTING INSTL, STATION 178 4 WATT BALLAST AND LIGHT RESISTORS RH							0150	1
		ELECTRICAL POWER, (SEE 24-13, FIG. 123)							0150	
		LANDING GEAR, (SEE 32-9, FIG. 29)							0150	
	65-17000-3	BUNDLE INSTL, SECTION 51 (SEE APPLICABLE CHAPTER FOR ELECTRICAL BUNDLE ASSEMBLIES)							0150	1
62	69-34837-1	MARKER INSTL-ALUMINUM FOIL, STATION 301 RH CEILING PANEL (SEE 11-1, FIG. 70)							0150	1
64	69-45842-1	AMPLIFIER INSTL, STATION 335 SMOKE DETECTOR CONTROL (SEE 26-1, FIG. 50)							0150	1
	50-5551-4	PROVISIONS INSTL, WIRE							0150	1
	10-60233-1	CABLE ASSY, MULTICONDUCTOR							0150	1
	10-60233-2	CABLE ASSY, MULTICONDUCTOR							0150	1
	10-60233-3	CABLE ASSY, MULTICONDUCTOR							0150	1
	10-60233-4	CABLE ASSY, MULTICONDUCTOR							0150	1
79	50-10228	RACEWAY INSTL, SECTION 51 (SEE 24-13, FIG. 17) . . .							0150	1
79A	66-36046	SEAL INSTL, STATION 348 RH SIDE NOSE GEAR WHEEL WELL							0150	1
80	BACS45A3	SEAL							0150	2
		ATTACHING PARTS								
	AN515-BR7	SCREW							0150	2
	BACN10EW2	NUT							0150	2
81	BACS45A20	SPACER							0150	1
81A	69-17032	SEAL INSTL, NOSE WHEEL DOOR SWITCH ROUTING							0150	1
82	BACS45A2	SEAL							0150	2
		ATTACHING PARTS								
	NAS601-7	SCREW							0150	2
	AN960PD6L	WASHER							0150	2
83	BACS45A20	SPACER							0150	1
84	65-58949-1	LADDER INSTL, STATION 259.5 TO 277 LH LOWER SECTION 51 (SEE 25-5, FIG. 1A)							0150	1
85	65-36046	COVER INSTL, EXTERNAL POWER LEADS PROTECTIVE (SEE 24-11, FIG. 6)							0150	1
88	65-6135-165	BRACKET INSTL, SECTION 51 WIRING LH (SEE 24-13, FIG. 26)							0150	1
89	65-6135-166	BRACKET INSTL, SECTION 51 WIRING RH (SEE 24-13, FIG. 26)							0150	1
90	69-8709	WIRE INSTL, NOSE WHEEL WELL BATTERY (SEE 24-12, FIG. 1)							0150	1
91	65-3835	RACEWAY INSTL, MAIN AC POWER SHIELD EXTERNAL (SEE 24-13, FIG. 18)							0150	1
92	65-12018	RACEWAY INSTL, SECTION 51 (SEE 24-13, FIG. 18) . . .							0150	1
93	65-15576-1	GUARD INSTL, PILOT AND COPILOT MAIN INSTRUMENT PANEL (LH) (SEE 24-13, FIG. 29)							0150	1
94	65-15576-2	GUARD INSTL, PILOT AND COPILOT MAIN INSTRUMENT PANEL (RH) (SEE 24-13, FIG. 29)							0150	1
	65-51376-2	RACEWAY INSTL, STATION 336 RH							0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/01

24-03-1B

DETAILED PARTS LIST
24-03-1B
PAGE 3

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1B 95	65-51377-7	. . .	COVER ASSY, WIRE BUNDLE	0150	1
	BACS12CB3-7	. . .	ATTACHING PARTS		
	AN960D10	. . .	SCREW	0150	8
	BACN10FX2	. . .	WASHER.	0150	8
		. . .	NUT	0150	8
96	65-51377-5	. . .	PAD FOAM.	0150	1
97	65-51377-6	. . .	PAD FOAM.	0150	1
98	65-51377-2	. . .	COVER	0150	1
99	65-51377-4	. . .	TRAY ASSY	0150	1
		. . .	ATTACHING PARTS		
	BACS12CB3-7	. . .	SCREW	0150	4
	AN960D10	. . .	WASHER.	0150	4
	BACN10FX2	. . .	NUT	0150	4
100	65-51377-3	. . .	CUSHION	0150	1
101	65-51377-1	. . .	TRAY.	0150	1
102	69-38484-3	. . .	BRACKET	0150	1
		. . .	ATTACHING PARTS		
	BACS12CB3-7	. . .	SCREW	0150	3
	NAS679A3W	. . .	NUT	0150	3
103	69-38484-4	. . .	BRACKET	0150	1
		. . .	ATTACHING PARTS		
	BACS12CB3-7	. . .	SCREW	0150	2
	NAS679A3W	. . .	NUT	0150	2
104	65-51378-1	. . .	RACEWAY INSTL, STATION 260 WIRE BUNDLE RH	0150	1
	65-51379-1	. . .	RACEWAY	0150	1
		. . .	ATTACHING PARTS		
	BACS12CB3-7	. . .	SCREW	0150	6
	AN970-3	. . .	WASHER.	0150	6
	BACN10FX2	. . .	NUT	0150	6
105	65-51381-13	. . .	CLAMP INSTL, SECTION 51 (SEE 24-13, FIG. 26E)	0150	1
106	65-58603-1	. . .	RACEWAY INSTL, STATION 296 MAIN CROSS FEED (SEE 24-13, FIG. 18D)	0150	1
	63-9273	. . .	SPACER.	0150	14
	65-64149-3	. . .	SUPPORT INSTL, STATION 312 WIRE BUNDLES	0150	1
108	69-51541-1	. . .	PLATE	0150	1
		. . .	ATTACHING PARTS		
	NAS514P632-4	. . .	SCREW	0150	4
	BACN10FX61	. . .	NUT	0150	4
109	69-51541-2	. . .	BRACKET	0102	1
109	69-51541-6	. . .	BRACKET	0350	1
		. . .	ATTACHING PARTS		
	NAS603-9P	. . .	SCREW	0150	2
	NAS679A3W	. . .	NUT	0150	2
110	66-31079-2	. . .	BRACKET	0150	1
		. . .	ATTACHING PARTS		
	NAS603-9P	. . .	SCREW	0150	2
	NAS679A3W	. . .	NUT	0150	2
111	65-64149-2	. . .	GROMMET, (EXTRUSION NO. BAC1521-365 X 2 IN. LG)	0150	4
	65-64149-4	. . .	SUPPORT INSTL, STATION 312 WIRE BUNDLES	0350	1
113	TA9C8D12-28HR	. . .	CLAMP ASSY.	0350	1
		. . .	ATTACHING PARTS		
	NAS603-6P	. . .	SCREW	0350	2
	BACN10FX2	. . .	NUT	0350	2
114	69-51541-8	. . .	SUPPORT	0350	1
		. . .	ATTACHING PARTS		
	NAS603-6P	. . .	SCREW	0350	2
	AN960PD10	. . .	WASHER.	0350	2
115	65-56061	. . .	PLACARD INSTL, SECTION 51 (SEE 11-1, FIG. 85)	0150	1
116	65-1682-4	. . .	BRACKET INSTL, NOSE GEAR POSITION SWITCH (SEE 32-3, FIG. 16)	0150	1
130	361-39-10-74349-005	. . .	AUTOTRANSFORMER INSTL, (A/R PANEL LIGHTS) (VS2500).	0150	1
		. . .	(ADDED BY 7211.019-225) (SEE 24-13, FIG. 194)		
131	ADR39-10-11728-003	. . .	A/R JUNCTION BOX INSTL, (VS2500) (ADDED BY RAF.	0150	1
		. . .	7211.019-225) (SEE 24-13, FIG. 50)		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

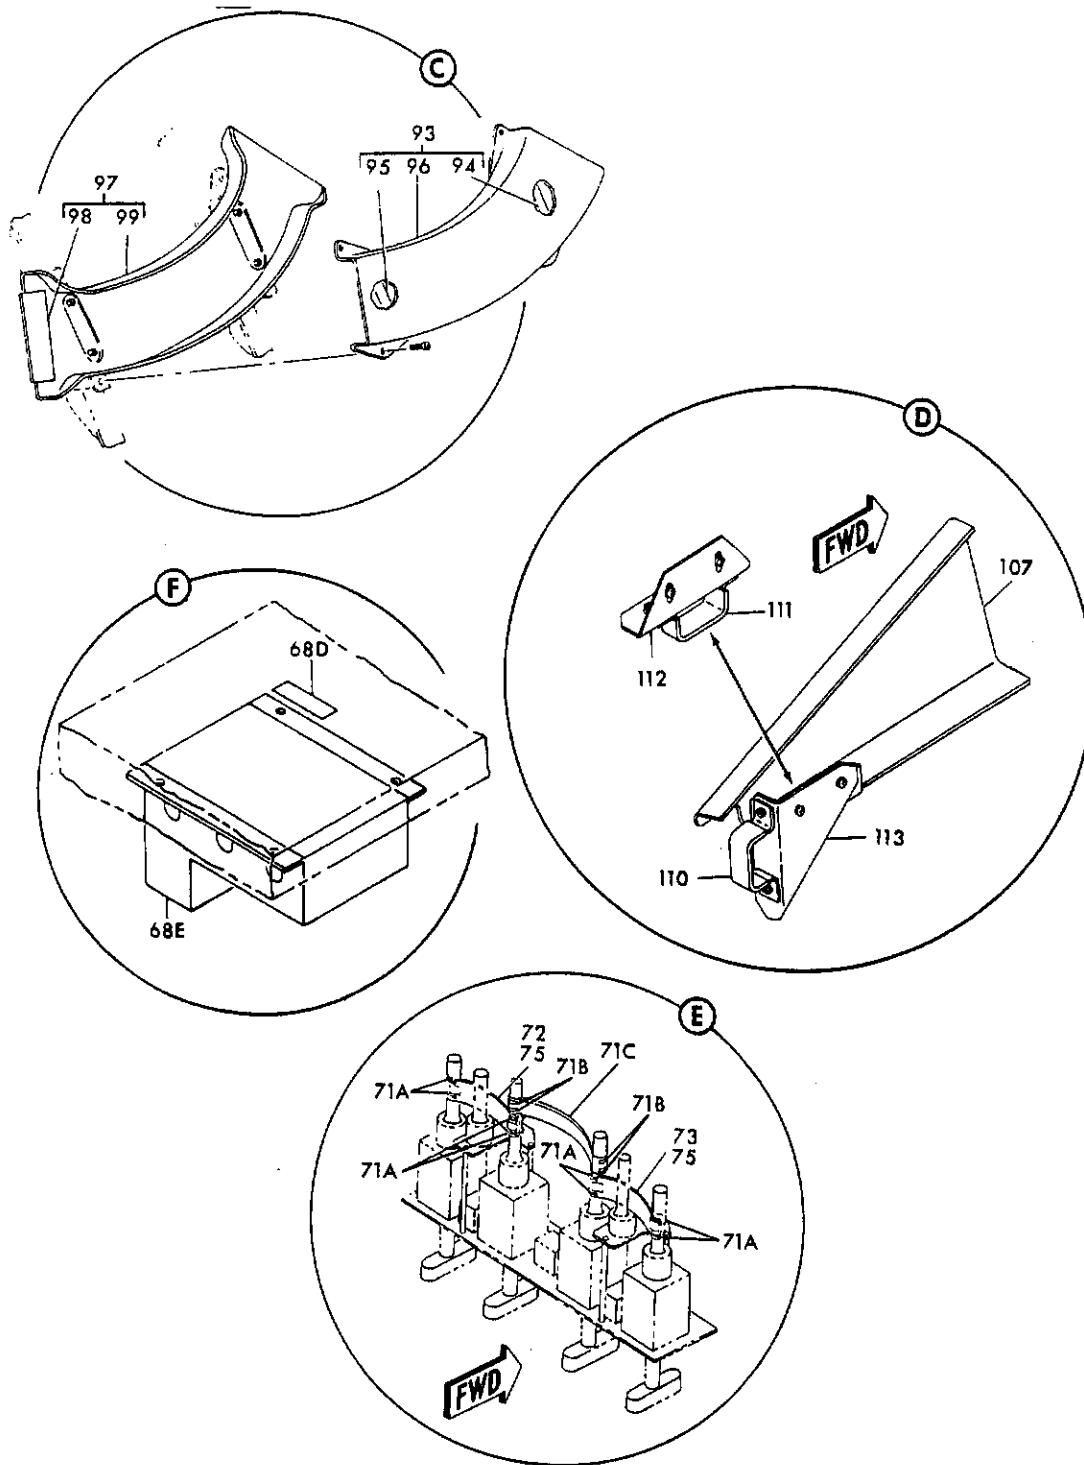


FIGURE 1C. ELECTRICAL INSTL, SECTION 51 (SHEET 2)

NOV 21/90

24-03-1C

DETAILED PARTS LIST
24-03-1C
PAGE 1

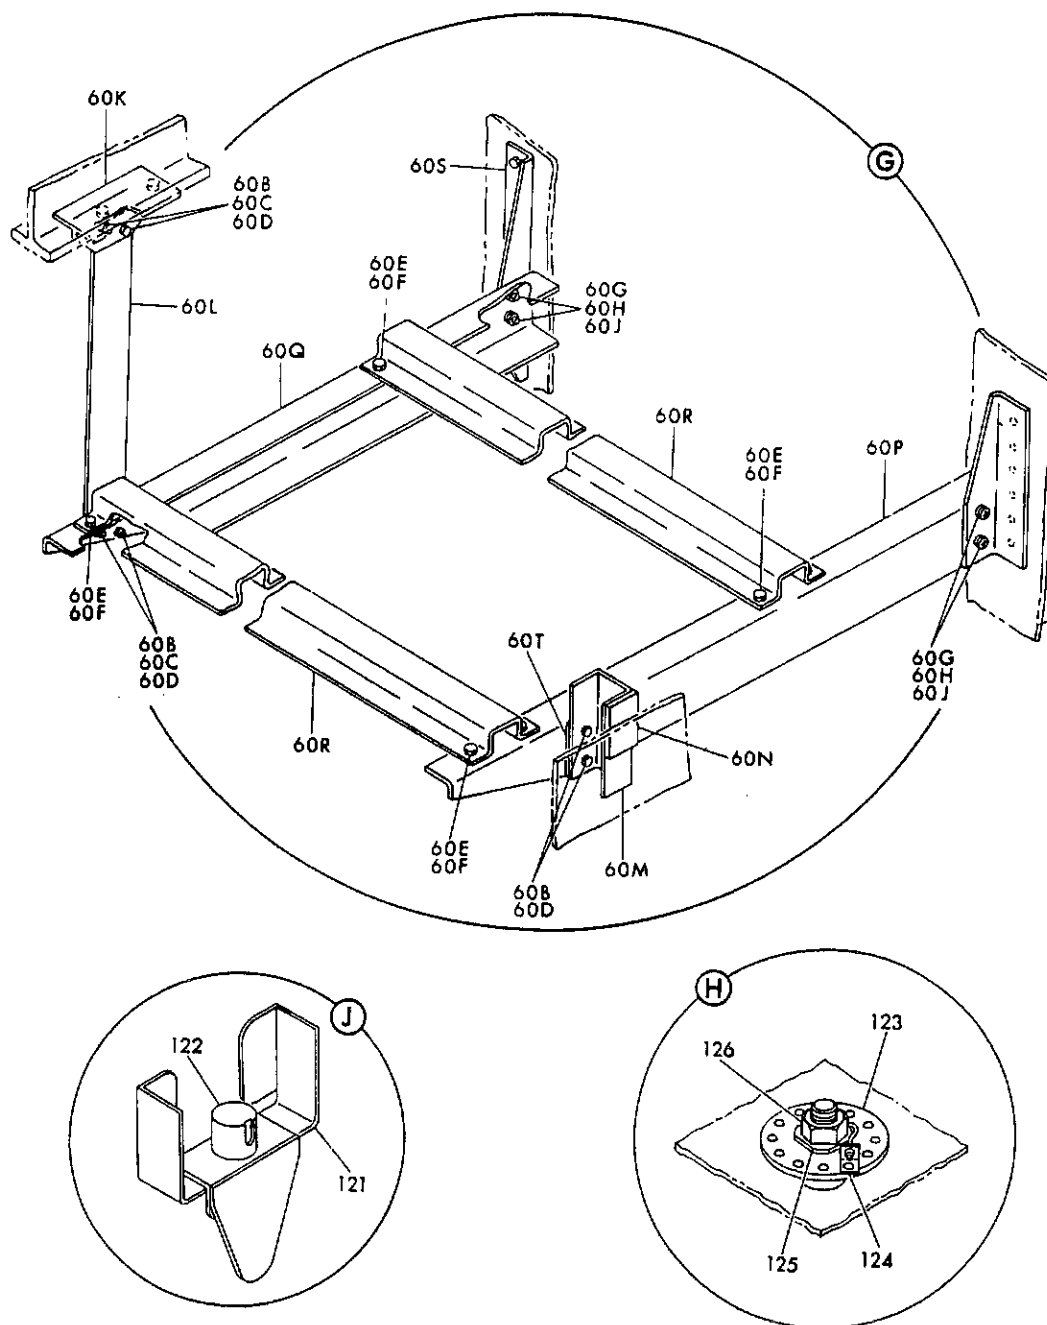


FIGURE 1C. ELECTRICAL INSTL, SECTION 51 (SHEET 3)

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1C	50-5551		ELECTRICAL INSTL, SECTION 51 (VARIABLE.	5199	RF
			DWG;50-5551-5008) (SEE 53-1, FIG. 1, ITEM 20)		
1	65-1638		. SHIELD INSTL, DC JUNCTION (SEE 24-12, FIG. 6)	5199	1
2	50-8224		. SHIELD INSTL, J6 MAIN AC POWER (VARIABLE.	5199	1
			DWG;50-8224-5003) (SEE 24-4, FIG. 1)		
3	65-58627-1		. SHIELD INSTL, STATION 335 J27 EQUIPMENT (VARIABLE . . .	5199	1
			DWG;65-58627-5005) (SEE 24-6, FIG. 11N)		
3	65-58627-1		. SHIELD INSTL, STATION 335 J27 EQUIPMENT (VARIABLE . . .	5151	1
			DWG;65-58627-5011) (SEE 24-6, FIG. 11P)		
4	65-69905-1		. EQUIPMENT INSTL, STATION 335 J5 (VARIABLE	5199	1
			DWG;65-69905-5002)		
			. . . AIR CONDITIONING, (SEE 21-5, FIG. 81 AND 82)	5199	
			. . . ELECTRICAL POWER, (SEE 24-8, FIG. 1, 1A AND 1B) . . .	5199	
			. . . FIRE PROTECTION, (SEE 26-1, FIG. 55 AND 56)	5199	
5	65-58614-1		. RACK INSTL, STATION 335 J5 EQUIPMENT (VARIABLE.	5199	1
			DWG;65-58614-5002) (SEE 24-8, FIG. 2B)		
6	65-58612-1		. PANEL INSTL, STATION 360 J2 RELAY (VARIABLE	5199	1
			DWG;65-58612-5006) (SEE 24-6, FIG. 18E)		
7	50-11323		. LIGHT INSTL, SECTION 51 AND 53 DOME (SEE 33-4, FIG. . .	5199	4
			61)		
9	5-97282-3000		. SWITCH INSTL, NOSE GEAR DOOR LOCK (SEE 32-3, FIG. 17)	5199	1
10	66-1368-1		. MARKER INSTL-ALUMINUM FOIL, NOSE GEAR LOCK AND. . . .	5199	1
			POSITION SWITCH (SEE 11-2, FIG. 43)		
11	66-1039		. SWITCH INSTL, LOWER CAB DOME LIGHT (SEE 33-4, FIG. . .	5199	1
			61)		
12	69-1063-7		. LIGHT INSTL, NOSE GEAR WHEEL WELL (SEE 33-2, FIG. 1)	5199	1
13	69-10085		. RESISTOR INSTL, THERMOCOUPLE LH (SEE 77-1, FIG. 55) . .	5199	1
15	69-10085-1		. MOUNTING INSTL, THERMOCOUPLE RESISTOR (LH) (SEE 77-1, .	5199	1
			FIG. 55)		
17	69-17023		. SWITCH INSTL, FORWARD ENTRY DOOR WARNING (SEE 52-5, . .	5199	1
			FIG. 3)		
18	65-8602		. TRANSFORMER-RECTIFIER INSTL, GROUND POWER (SEE 24-11, .	5199	1
			FIG. 1)		
19	65-58619-1		. SHIELD INSTL, J9 GROUND POWER (VARIABLE	5199	1
			DWG;65-58619-5004)		
			. . . ELECTRICAL POWER, (SEE 24-11, FIG. 16, 18, 19, 24B, .	5199	
			25A, 33 AND 35)		
20	69-10832		. FILTER INSTL, LAVATORY MIRROR FLUORESCENT LIGHTS (SEE .	5199	1
			23-4, FIG. 1)		
21	65-3336		. SWITCH INSTL, NO. 3 AND 5 NESA WINDOWS (SEE 30-4, . .	5199	1
			FIG. 4)		
			. . . ELECTRICAL POWER, (SEE 24-5, FIG. 1)	5199	
			. . . ICE AND RAIN PROTECTION, (SEE 30-4, FIG. 5)	5199	
			. . . LIGHTS, (SEE 33-4, FIG. 66)	5199	
23	65-45088		. RECEPTACLE INSTL, EXTERNAL POWER (VARIABLE.	5199	1
			DWG;65-45088-5001)		
23	65-37089		. RECEPTACLE INSTL, EXTERNAL POWER (VARIABLE.	5199	1
			DWG;65-37089-5001)		
			. . . ELECTRICAL POWER, (SEE 24-11, FIG. 10 AND 11)	5199	
			. . . REQUIRED PLACARDS, (SEE 11-2, FIG. 180 AND 181A) . .	5199	
24	69-10383		. FILTER INSTL, CONTROL CABIN FLUORESCENT BALLAST (SEE . .	5199	1
			33-3, FIG. 24)		
31	65-77233-1		. TRAY INSTL, STATION 330 RJ29 SWITCHING RELAYS	5199	1
			(VARIABLE DWG;65-77233-5013)		
			. . . ELECTRICAL POWER, (SEE 24-13, FIG. 130, 130A, 130B, .	5199	
			130F, 130G AND 130J)		
			. . . REQUIRED PLACARDS, (SEE 11-2, FIG. 183)	5199	
32	65-51375-4		. REGULATOR INSTL, STATION 316 COCKPIT TEMPERATURE (SEE .	5199	1
			21-5, FIG. 61A)		
33	65-51374-1		. REGULATOR INSTL, STATION 348 MAIN CABIN TEMPERATURE . .	5199	1
			(SEE 21-5, FIG. 61B)		
	69-4313		. TRANSFORMER INSTL, PERISCOPIC SEXTANT LIGHT	5199	1
34	6639		. . . TRANSFORMER, 28.3 VOLT (V95266)	5199	1
			ATTACHING PARTS		
	AN3-6A		. . . BOLT.	5199	2
			-----*		
35	65-36069		. TERMINAL BLOCK INSTL, FLIGHT ENGINEER TABLE (VARIABLE .	5199	1
			DWG;65-36069-5001) (SEE 24-13, FIG. 11)		
36	69-4348		. EQUIPMENT INSTL, FLIGHT ENGINEERS TABLE (SEE 28-5, . .	5199	1
			FIG. 19)		
37	65-6495		. DUCT INSTL, CIRCUIT BREAKER COOLING (SEE 25-19, FIG. .	5199	1
			1)		
38	65-6438		. STRIP INSTL, SECTION 51 T207 TERMINAL (SEE 24-13, . .	5199	1
			FIG. 1)		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE						EFF FROM TO	UNITS PER ASSY		
		1	2	3	4	5	6			7	
1C 40	69-41980-1	.	STRIP	INSL	,	PILOTS	OXYGEN	REGULATOR	TERMINAL (SEE . . . 35-3, FIG. 17A)	5199	1
41	69-41980-2	.	STRIP	INSL	,	COPILOTS	OXYGEN	REGULATOR	TERMINAL (SEE . . . 35-3, FIG. 17A)	5199	1
42	69-30053-4	.	STRIP	INSL	,	OBSERVERS	STATION	OXYGEN	REGULATOR	5151	1
42	69-30053-7	.	STRIP	INSL	,	OBSERVERS	STATION	OXYGEN	REGULATOR	5299	1
43	65-58616-1	.	DUCT	INSL	,	J5	AND	4L	COOLING AIR (VARIABLE	5199	1
44	65-58617-1	.	DUCT	INSL	,	STATION	345	COOLING	LH SIDE (VARIABLE	5199	1
45	65-6468	.	BATTERY	INSL	,	NOSE	WHEEL	WELL	ELECTRIC STORAGE (SEE . . . 24-12, FIG. 1)	5199	1
46	66-5166	.	SHUNT	INSL	,	ELECTRIC	STORAGE	BATTERY	AMMETER (SEE . . . 24-12, FIG. 3)	5199	1
47	66-5379	.	LIGHT	INSL	,	J1	RELAY	SHIELD	(SEE 33-3, FIG. 15)	5199	1
48	65-58611-12	.	SHIELD	INSL	,	STATION	300	J1	RELAY (VARIABLE	5199	1
52	69-10058	.	HORN	INSL	,	GROUND	CREW	CALL	(SEE 25-4, FIG. 31)	5199	1
53	65-28088	.	SHIELD	INSL	,	J18	STABILIZER	TRIM	CONTROL (SEE 27-12, FIG. 7)	5199	1
54	65-30064-3	.	FLOODLIGHT	INSL	,	MAIN	AC	POWER	SHIELD (SEE 33-3, ...	5199	1
	65-17000-3	.	BUNDLE	INSL	,	SECTION	51	(SEE	APPLICABLE CHAPTER FOR ELECTRICAL BUNDLE ASSEMBLIES)	5199	1
59	69-34837-1	.	MARKER	INSL	-	ALUMINUM	FOIL	,	STATION 301 RH CEILING	5199	1
61	69-45842-1	.	AMPLIFIER	INSL	,	STATION	335	SMOKE	DETECTOR CONTROL	5199	1
63	65-58618-1	.	SHIELD	INSL	,	STATION	294	J28	LH EQUIPMENT (VARIABLE DWG:65-58618-5004)	5199	1
		.	ELECTRICAL	POWER	,	(SEE	24-13	,	FIG. 61D, 61E AND	5199	1
64	65-58625-1	.	REQUIRED	PLACARDS	,	(SEE	11-2	,	FIG. 134)	5199	1
		.	RACK	INSL	,	STATION	352	J25	CONTROL PANELS (VARIABLE DWG:65-58625-5001)	5199	1
65	65-58623-1	.	SUPPORT	INSL	,	J25	,	J26	AND J27 EQUIPMENT (SEE 24-13, FIG. 117)	5199	1
66	65-58620-1	.	LIGHT	INSL	,	ESCAPE	SLIDE	ILLUMINATION	(SEE 33-2, ...	5199	1
67	65-58620-5	.	POWER	SUPPLY	INSL	,	ESCAPE	SLIDE	ILLUMINATION (SEE . . . 33-2, FIG. 7)	5199	1
68	69-55845-1	.	LIGHT	INSL	,	STATION	344	LOWER	SECTION 41 RH (SEE . . . 33-4, FIG. 67L)	5199	1
69	69-55845-2	.	LIGHT	INSL	,	STATION	316.5	LOWER	SECTION 41 RH (SEE . . . 33-4, FIG. 67L)	5199	1
	50-5551-4	.	PROVISIONS	INSL	,	WIRE	5199	1			
	69-54458-1	.	STRAP	INSL	,	P13	SEPARATOR	5199	1		
71A	SST1-5M	.	TIE	,	CABLE	(V06383)	5199	8			
71B	SST1-5M	.	TIE	,	CABLE	(V06383)	5199	4			
71C	69-54457-4	.	STRAP	5199	1						
72	69-54457-1	.	STRAP	ASSY	5199	1					
73	69-54457-2	.	STRAP	ASSY	5199	1					
75	69-54457-3	.	STRAP	5199	1						
76	50-10228	.	RACEWAY	INSL	,	SECTION	51	ELECTRICAL	(SEE 24-13, ...	5199	1
76A	66-36046	.	SEAL	INSL	,	STATION	348	RH	SIDE NOSE GEAR WHEEL	5199	1
77	BACS45A3	.	SEAL	5199	2						
	AN515-BR7	.	ATTACHING	PARTS	5199	2					
	BACN10EW2	.	SCREW	5199	2						
		.	NUT	5199	2						
78	BACS45A20	.	SPACER	5199	1						
78A	69-17032	.	SEAL	INSL	,	NOSE	WHEEL	DOOR	SWITCH ROUTING	5199	1
79	BACS45A2	.	SEAL	5199	2						
	NAS601-7	.	ATTACHING	PARTS	5199	2					
	AN960PD6L	.	SCREW	5199	2						
		.	WASHER	5199	2						
80	BACS45A20	.	SPACER	5199	1						
81	65-58949-1	.	LADDER	INSL	,	STATION	259.5	TO	277 LOWER SECTION 51 LH (SEE 25-5, FIG. 1A)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1C 83	65-61544-6		. . . RACEWAY INSTL, FLIGHT ENGINEERS TABLE P11 PANELS. . . (SEE 24-13, FIG. 18K)	5199	1
85	65-6135-253		. . . BRACKET INSTL, SECTION 51 WIRING LH (SEE 24-13, . . FIG. 26)	5199	1
86	65-6135-254		. . . BRACKET INSTL, SECTION 51 WIRING RH (SEE 24-13, . . FIG. 26)	5199	1
87	69-8709		. . . WIRE INSTL, NOSE WHEEL WELL BATTERY (SEE 24-12, . . FIG. 1)	5199	1
87A	69-8709-1		. . . SEAL INSTL, NOSE WHEEL WELL BATTERY	5199	1
88	65-3835		. . . RACEWAY INSTL, MAIN AC POWER SHIELD EXTERNAL WIRE . . (SEE 24-13, FIG. 18)	5199	1
	65-51376-2		. . . RACEWAY INSTL, STATION 336 RH	5199	1
93	65-51377-7		. . . COVER ASSY.	5199	1
	BACS12CB3-7		. . . ATTACHING PARTS		
	AN960D10		. . . SCREW	5199	8
	BACN10FX2		. . . WASHER.	5199	8
			. . . NUT	5199	8
			-----*		
94	65-51377-5		 PAD, FOAM	5199	1
95	65-51377-6		 PAD, FOAM	5199	1
96	65-51377-2		 COVER	5199	1
97	65-51377-4		 TRAY ASSY	5199	1
	BACS12CB3-7		. . . ATTACHING PARTS		
	AN960D10		. . . SCREW	5199	4
	BACN10FX2		. . . WASHER.	5199	4
			. . . NUT	5199	4
			-----*		
98	65-51377-3		 CUSHION	5199	1
99	65-51377-1		 TRAY.	5199	1
100	69-38484-3		. . . BRACKET	5199	1
	BACS12CB3-7		. . . ATTACHING PARTS		
	NAS679A3W		. . . SCREW	5199	3
			. . . NUT	5199	3
			-----*		
101	69-38484-4		. . . BRACKET	5199	1
	BACS12CB3-7		. . . ATTACHING PARTS		
	NAS679A3W		. . . SCREW	5199	2
			. . . NUT	5199	2
			-----*		
	65-51378-1		. . . RACEWAY INSTL, STATION 260 RH	5199	1
102	65-51379-1		. . . RACEWAY	5199	1
	BACS12CB3-7		. . . ATTACHING PARTS		
	AN970-3		. . . SCREW	5199	6
	BACN10FX2		. . . WASHER.	5199	6
			. . . NUT	5199	6
			-----*		
103	65-51381-22		. . . CLAMP INSTL, SECTION 51 (SEE 24-13, FIG. 26F) . . .	5199	1
104	65-58603-2		. . . RACEWAY INSTL, STATION 296 MAIN CROSS FEED (SEE . . 24-13, FIG. 18D)	5199	1
105	65-61862-1		. . . CLAMP INSTL, STATION 277 P11 (SEE 24-13, FIG. 26J)	5199	1
	63-9273		. . . SPACER.	5199	14
	65-64149-3		. . . SUPPORT INSTL, STATION 312 WIRE BUNDLES	5199	1
106	69-51541-1		. . . PLATE	5151	1
106	69-51541-11		. . . PLATE	5299	1
	NAS514P632-4		. . . ATTACHING PARTS		
	BACN10FX61		. . . SCREW	5199	4
			. . . NUT	5199	4
			-----*		
107	69-51541-6		. . . BRACKET	5199	1
	NAS603-9P		. . . ATTACHING PARTS		
	NAS679A3W		. . . SCREW	5199	2
			. . . NUT	5199	2
			-----*		
108	66-31079-2		. . . BRACKET	5199	1
	AN3-6A		. . . ATTACHING PARTS		
	AN960D10		. . . BOLT.	5199	2
	BACN10BY53W		. . . WASHER.	5199	2
			. . . NUT	5199	2
			-----*		
108A	65-64149-5		. . . GROMMET, (EXTRUSION NO. BAC1521-365 X 8.2 IN. LG)	5299	1
109	65-64149-2		. . . GROMMET, (EXTRUSION NO. BAC1521-365 X 2 IN. LG) .	5199	1
	65-64149-4		. . . SUPPORT INSTL, STATION 312 WIRE BUNDLES	5199	1
115	65-1682-4		. . . BRACKET INSTL, NOSE GEAR POSITION SWITCH (SEE 32-3, . FIG. 16)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/90


24-03-1C

DETAILED PARTS LIST
24-03-1C
PAGE 5

Intercontinental




PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1234567	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1C	65-17000-51		. BUNDLE INSTL, SECTION 51 ELECTRICAL AND ELECTRONICS . (VARIABLE DWG;65-17000-5022) (SEE APPLICABLE CHAPTER FOR ELECTRICAL BUNDLE ASSEMBLIES)	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

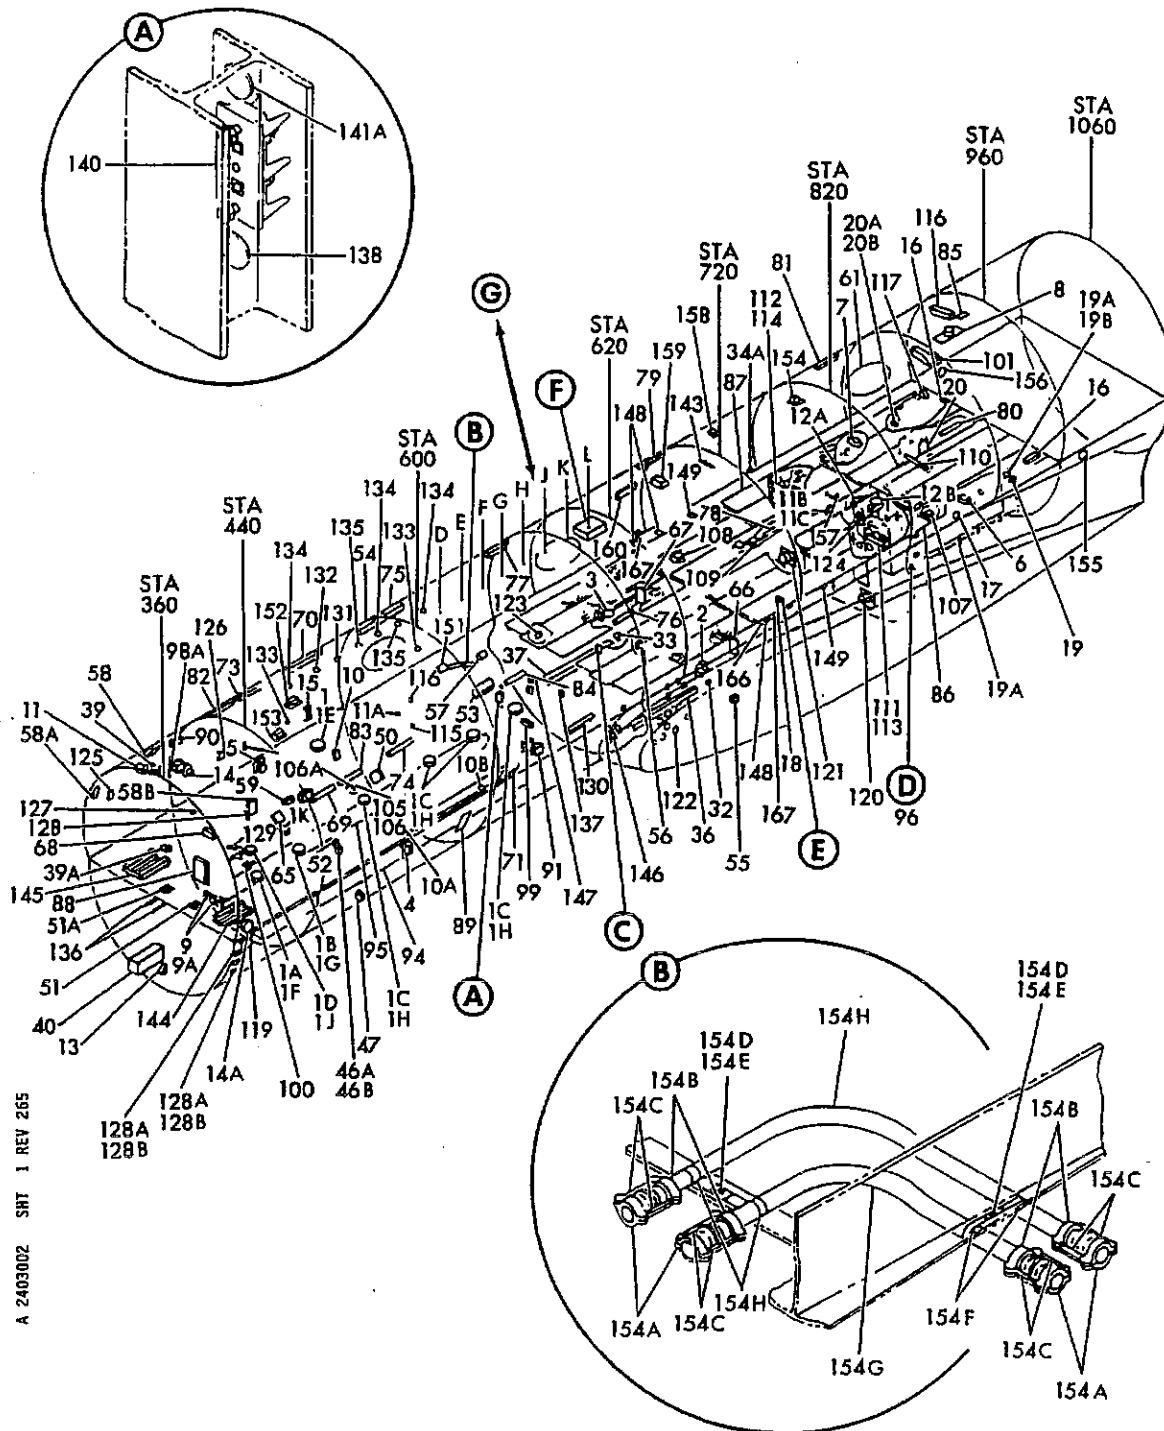

A 2403002 SHT 1 REV 265

FIGURE 2. ELECTRICAL INSTL, SECTION 53 (SHEET 1)

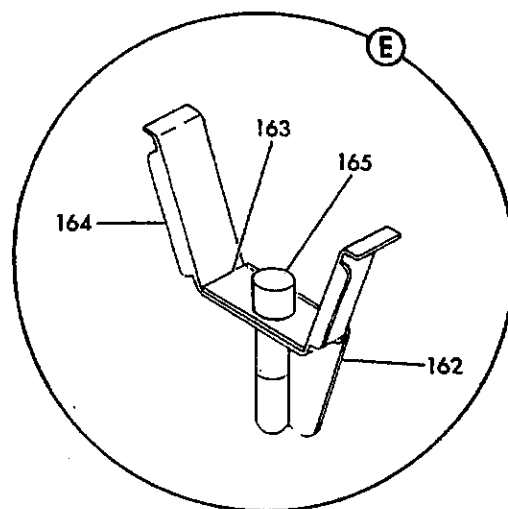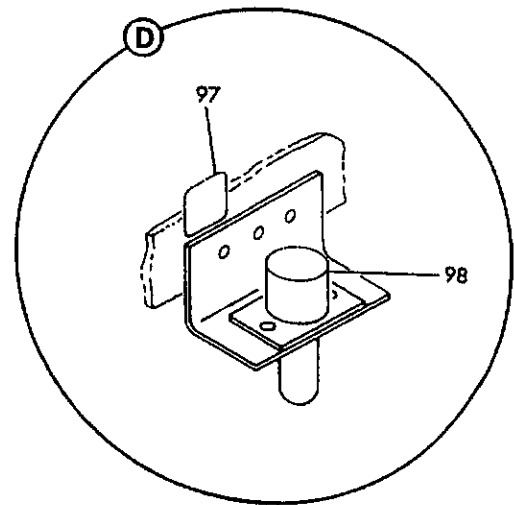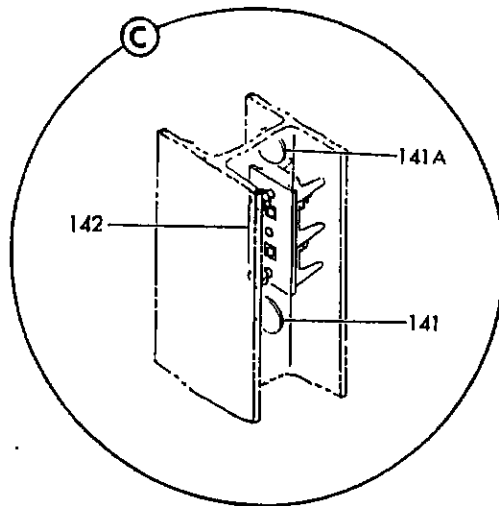

A 2403002 SHT 2 REV 265

FIGURE 2. ELECTRICAL INSTL. SECTION 53 (SHEET 2)

NOV 21/94

24-03-2

DETAILED PARTS LIST
24-03-2
PAGE 1

A 240300Z SHY 3 REV 265


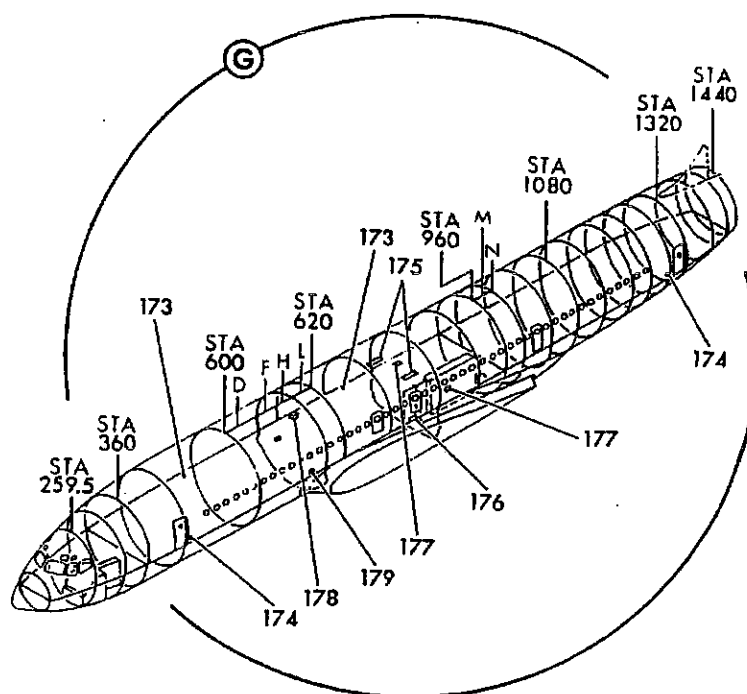


FIGURE 2. ELECTRICAL INSTL. SECTION 53 (SHEET 3)

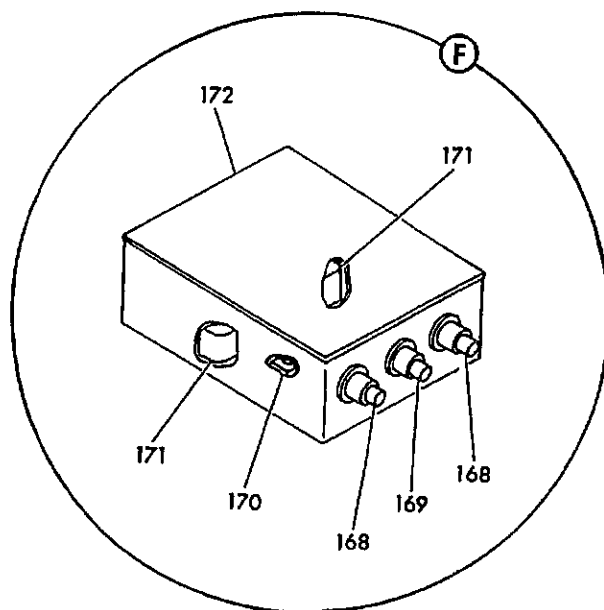

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2	50-5553	ELECTRICAL INSTL, SECTION 53 (SEE 53-1, FIG. 2, ITEM. 40)	0150	RF
	50-5553	ELECTRICAL INSTL, SECTION 53 (VARIABLE. DWG;50-5553-5008) (SEE 53-1, FIG. 2, ITEM 40)	5199	RF
1	65-1669-24	. LIGHT INSTL, SECTION 53 FORWARD CARGO COMPARTMENT DOME (SEE 33-4, FIG. 77)		1
1A	65-1669-28	. LIGHT INSTL, SECTION 53 CARGO COMPARTMENT DOME (SEE 33-4, FIG. 77)	5199	1
1B	65-1669-28	. LIGHT INSTL, SECTION 53 CARGO COMPARTMENT DOME (SEE 33-4, FIG. 77)		1
1D	65-1669-34	. LIGHT INSTL, FORWARD CARGO COMPARTMENT DOME (SEE 33-4, FIG. 77)	0150	1
1E	65-1669-25	. SUPPORT INSTL, CARGO COMPARTMENT DOME LIGHT (SEE 33-4, FIG. 77)		1
1F	65-1669-29	. SUPPORT INSTL, CARGO COMPARTMENT DOME LIGHT (SEE 33-4, FIG. 77)	5199	1
1G	65-1669-29	. SUPPORT INSTL, CARGO COMPARTMENT DOME LIGHT (SEE 33-4, FIG. 77)		1
1H	65-1669-31	. SUPPORT INSTL, CARGO COMPARTMENT DOME LIGHT (SEE 33-4, FIG. 77)		4
1J	65-1669-35	. SUPPORT INSTL, CARGO COMPARTMENT DOME LIGHT (SEE 33-4, FIG. 77)	0150	1
1K	65-1669-30	. LIGHT INSTL, SECTION 53 CARGO COMPARTMENT DOME. (SEE 33-4, FIG. 77)		1
1L	65-1669-30	. LIGHT INSTL, SECTION 53 CARGO COMPARTMENT DOME (SEE 33-4, FIG. 77)		3
2	65-8788-1	. LIGHT INSTL, AIR CONDITIONING COMPARTMENT (LH) (SEE 33-4, FIG. 85)		1
3	65-8788-2	. LIGHT INSTL, AIR CONDITIONING COMPARTMENT (RH) (SEE 33-4, FIG. 85)		1
4	69-1520-1	. LIGHT INSTL, WING SCANNING (SEE 33-2, FIG. 3)		1
5	69-1520-2	. LIGHT INSTL, WING SCANNING (SEE 33-2, FIG. 3)		1
6	50-1446-3001	. LIGHT INSTL, MAIN WHEEL WELL (SEE 33-2, FIG. 2)		1
7	50-1446-3002	. LIGHT INSTL, MAIN WHEEL WELL (SEE 33-2, FIG. 2)		1
8	65-4714-9	. LIGHT INSTL, STATION 930 BEACON (SEE 33-1, FIG. 3)		1
9	65-8630	. SWITCH INSTL, STATION 400 CARGO DOOR (SEE 52-5, FIG. 1)	5199	1
9A	65-3782-5	. SWITCH INSTL, STATION 400 CARGO DOOR.	5199	1
9A	65-3782-4	. SWITCH INSTL, STATION 400 CARGO DOOR. DOORS, (SEE 52-5, FIG. 1)	0150	1
		 REQUIRED PLACARDS, (SEE 11-2, FIG. 227)		
10	69-47062	. SWITCH INSTL, FORWARD CARGO DOOR (SEE 52-5, FIG. 2)		1
10A	69-24441-1	. SWITCH INSTL, UPPER CARGO DOOR LOCKED POSITION. INDICATOR (SEE 52-5, FIG. 2)		1
10B	69-24441-2	. SWITCH INSTL, UPPER CARGO DOOR LOCKED POSITION. INDICATOR (SEE 52-5, FIG. 2)		1
11	69-17056	. SWITCH INSTL, FORWARD GALLEY DOOR WARNING (SEE 52-5, FIG. 2)		1
11B	65-53200-2	. SWITCH INSTL, MAIN CARGO DOOR HAND PUMP (SEE 52-5, FIG. 2A)		1
12	65-27537-4	. SHIELD INSTL, SKID DETECTOR CONTROL (SEE 32-8, FIG. 9)		1
12B	65-27537-5	. SUPPORT INSTL, SKID DETECTOR CONTROL (SEE 32-8, FIG. 9)		1
13	69-47056	. SWITCH INSTL, RADIO ACCESS DOOR (SEE 52-5, FIG. 5)		1
14	65-58620-2	. LIGHT INSTL, ESCAPE SLIDE ILLUMINATION (SEE 33-2, FIG. 7)	5199	1
15	65-58620-6	. POWER SUPPLY INSTL, ESCAPE SLIDE ILLUMINATION (SEE 33-2, FIG. 7)	5199	1
16	65-19841-101	. TERMINAL STRIP INSTL, (SEE 21-9, FIG. 5B)	5199	1
17	65-71727-23	. LIGHT INSTL, OVERWING ESCAPE ILLUMINATION	5199	1
17	65-71727-13	. LIGHT INSTL, OVERWING ESCAPE ILLUMINATION (ADDED BY SB 2754)	0150	1
		 LIGHTS, (SEE 33-2, FIG. 12 AND 13).		
		 REQUIRED PLACARDS, (SEE 11-2, FIG. 82 AND 82A).		
18	65-81513-5	. LIGHT INSTL, OVERWING ESCAPE ILLUMINATION	5199	1
		 LIGHTS, (SEE 33-2, FIG. 12)	5199	
		 REQUIRED PLACARDS, (SEE 11-2, FIG. 82).	5199	
19	65-2981-1	. DETECTOR INSTL, MAIN WHEEL WELL FIRE LH (SEE 26-1, FIG. 25)		1
19A	65-2981-3	. SUPPORT INSTL, MAIN WHEEL WELL FIRE DETECTOR (LH) (SEE 26-1, FIG. 25)		1
20	65-2981-2	. DETECTOR INSTL, MAIN WHEEL WELL FIRE RH (SEE 26-1, FIG. 25)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2 20A	65-2981-4	. SUPPORT INSTL, MAIN WHEEL WELL FIRE DETECTOR (RH) . . (SEE 26-1, FIG. 25)		1
47	69-1346	. SWITCH INSTL, SECTION 53 CARGO LIGHTS LIGHTS, (SEE 33-4, FIG. 78) REQUIRED PLACARDS, (SEE 11-2, FIG. 71)		1
51	50-11323-7	. LIGHT INSTL, SECTION 43 DOME (SEE 33-4, FIG. 61) . . .		1
51A	50-11323-14	. LIGHT INSTL, SECTION 43 DOME (SEE 33-4, FIG. 61) . . .		1
55	65-8788-3	. SWITCH INSTL, AIR CONDITIONING COMPARTMENT LIGHT (SEE 33-4, FIG. 85)		1
56	65-8788-4	. SWITCH INSTL, AIR CONDITIONING COMPARTMENT LIGHT (SEE 33-4, FIG. 85)		1
58B	65-36064-5	. STRIP INSTL, FORWARD GALLEY AC SERVICE OUTLET TERMINAL (SEE 24-13, FIG. 7)		1
66	66-8762-1	. STRIP INSTL, AIR CYCLE MACHINE TERMINAL (SEE 21-3, . . FIG. 17)		1
67	66-8762-2	. STRIP INSTL, AIR CYCLE MACHINE TERMINAL (SEE 21-3, . . FIG. 17)		1
85	69-29071	. STRIP INSTL, UPPER BEACON LIGHT TERMINAL (SEE 33-1, . . FIG. 4)	0103 5199 0450	1
85	69-29071	. STRIP INSTL, UPPER BEACON LIGHT TERMINAL (DELETED BY RAF MOD 7211.019-147) (SEE 33-1, FIG. 4)		1
86	65-19841-3	. BLANKET INSTL, PASSENGER FLOOR HEATING LH (SEE 21-9, . FIG. 5)	0150	1
87	65-19841-4	. BLANKET INSTL, PASSENGER FLOOR HEATING RH (SEE 21-9, . FIG. 5)	0150	1
90	65-33257-1	. BOX INSTL, FORWARD GALLEY CEILING FLUORESCENT LIGHT . DISCONNECT (SEE 33-4, FIG. 71)		1
	65-17000-4	. BUNDLE INSTL, SECTION 53 ELECTRICAL AND ELECTRONICS . (SEE APPLICABLE CHAPTER FOR ELECTRICAL BUNDLE ASSEMBLIES)		1
	50-5553-4	. PROVISIONS INSTL, SECTION 53 WIRE		1
99	65-51391-4	. . CHANNEL INSTL, FORWARD CARGO COMPARTMENT WIRE . . . BUNDLE (SEE 24-13, FIG. 29A)	0150	1
99	65-51391-6	. . CHANNEL INSTL, FORWARD CARGO COMPARTMENT WIRE . . . BUNDLE (SEE 24-13, FIG. 29A)	5199	1
100	65-52710-2	. . GUARD INSTL, FORWARD CARGO COMPARTMENT WIRE (SEE. . 24-13, FIG. 29A)		1
101	65-51346-1	. . CLAMP INSTL, SECTION 53 OVERHEAD WIRING (SEE 24-13, . FIG. 26P AND 24-13, FIG. 26Q)	0150	1
101	65-51346-1	. . CLAMP INSTL, SECTION 53 OVERHEAD WIRING (VARIABLE . DWG:65-51346-5001) (SEE 24-13, FIG. 26P)	5199	1
108	65-75190-1	. . BRACKET INSTL, HEATED CABIN FLOOR PANELS DISCONNECT (SEE 21-9, FIG. 10)	5199	1
110	65-75191-1	. . CONDUIT INSTL, FLOOR PANELS HEATED (SEE 21-9, FIG. 10)	5199	1
111	65-5469	. . SEAL INSTL, STATION 820 LH SIDE WIRING (SEE 24-13, . FIG. 35)		1
112	65-5469-1	. . SEAL INSTL, STATION 820 RH SIDE WIRING (SEE 24-13, . FIG. 35)		1
113	65-5469-2	. . SUPPORT INSTL, STATION 820 LH SIDE WIRING (SEE. . . 24-13, FIG. 35)		1
114	65-5469-3	. . SUPPORT INSTL, STATION 820 RH SIDE WIRING (SEE. . . 24-13, FIG. 35)		1
117	69-48002	. . SEAL INSTL, STATION 960 BULKHEAD ELECTRICAL (SEE. . 24-13, FIG. 38)		1
120	69-18085-1	. . SEAL INSTL, STATION 820 BULKHEAD ELECTRICAL (LH). . (SEE 24-13, FIG. 38)		1
121	69-18085-2	. . SEAL INSTL, STATION 820 BULKHEAD ELECTRICAL (RH). . (SEE 24-13, FIG. 38)		1
122	69-8882-1	. . SEAL INSTL, WING JUNCTION BODY ELECTRICAL (LH). . . (SEE 24-13, FIG. 38)		1
123	69-8882-2	. . SEAL INSTL, WING JUNCTION BODY ELECTRICAL (RH). . . (SEE 24-13, FIG. 38)		1
124	66-13049	. . SEAL INSTL, STATION 820 TO 860 KEEL BEAM ELECTRICAL (SEE 24-13, FIG. 38)		1
	65-71188-4	. . BRACKET INSTL, SECTION 53 WIRING (VARIABLE. DWG:65-71188-5008)	5199	1
129	65-49252-1	. . BRACKET INSTL, STATION 400 TO 440 AUTOMATIC THROTTLE WIRE SUPPORT (SEE 22-3, FIG. 5A)	0150	1
	65-6361-166	. . BRACKET INSTL, SECTION 53 WIRING.		1
131	NAS557-6A	. . . GROMMET	5199	1
133	NAS557-6B	. . . GROMMET	0150	2
135	NAS557-6B	. . . GROMMET	5199	2
136	BAC620ZB1175	. . . GROMMET		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2 138	BACM10N00-2AAS		MARKER, 1 ALUMINUM FOIL	0150	1
139	BACM10N00-2PP		MARKER, 2 ALUMINUM FOIL	0150	1
140	MS25123-2-2		TERMINAL BOARD ASSY		1
			ATTACHING PARTS		
	NAS600-6		SCREW		2
	NAS679A04W		NUT		2
			-----*		
	65-71188-5		BRACKET INSTL, SECTION 53 WIRING (VARIABLE.	5199	1
			DWG;65-71188-5010)		
	65-6887-1		RACEWAY INSTL, STATION 360 TO 400 (LH).		1
	65-6887-2		RACEWAY INSTL, STATION 360 TO 400 (RH).		1
144	65-6887-3		PANEL ASSY, (LH ONLY)		1
145	65-6887-4		PANEL ASSY, STATION 360 TO 400 RACEWAY (RH ONLY)		1
			ATTACHING PARTS		
	NAS603-8		SCREW		4
			-----*		
146	69-18082-1		SEAL INSTL, STATION 600K BULKHEAD (LH) (SEE 24-13,		1
			FIG. 38)		
147	69-18082-2		SEAL INSTL, STATION 600K BULKHEAD (RH) (SEE 24-13,		1
			FIG. 38)		
151	65-32255-22		BOX INSTL, MAIN CARGO DOOR ELECTRICAL (SEE 52-3, . .		1
			FIG. 43)		
152	65-31943-1		BOX INSTL, FORWARD LOWERED CEILING LIGHTS		1
			DISCONNECT (SEE 33-4, FIG. 72)		
153	65-32608-1		BOX INSTL, MURAL LIGHT AND LOUDSPEAKER DISCONNECT .	5151	1
			(SEE 33-4, FIG. 73)		
154	65-33155-1		BOX INSTL, STATION 804 CENTER LOWERED CEILING LIGHT		1
			DISCONNECT (SEE 33-4, FIG. 74)		
	65-17000-53		BUNDLE INSTL, SECTION 53 ELECTRICAL AND ELECTRONICS .	5199	1
			(VARIABLE DWG;65-17000-5032) (SEE APPLICABLE		
			CHAPTER FOR ELECTRICAL BUNDLE ASSEMBLIES)		
166	MS241149-01		RELAY, (R901) (STA 690) (ADDED BY RAF MOD	0203	1
			7211.019-134)		
167	MS241149-01		RELAY, (R902, R903) (STA 690) (ADDED BY RAF MOD . . .	0203	2
			7211.019-135)		
168	MS24624R12B1256		RECEPTACLE, (ADDED BY RAF MOD 7211.019-136)	0203	2
169	MS24624R12B5SX		RECEPTACLE, (ADDED BY RAF MOD 7211.019-136)	0203	1
170	LS35076-1-04		TERMINAL BLOCK, (ADDED BY RAF MOD 7211.019-136) . . .	0203	1
171	BB164		BALLAST, (MIRROR AND AISLE LIGHT) (ADDED BY RAF MOD	0203	2
			7211.019-136)		
172	DA81123000		BOX, MIRROR AND AISLE LIGHT BALLAST (ADDED BY RAF MOD	0203	1
			7211.019-136)		
	ALD33-00-12260-001		GENERAL LIGHTING, (VS2500).	0150	RF
			(ADDED BY RAF 7211.019-4)		
175	ALD33-00-26591-001		FORMATION LIGHTS INSTL, STA 710 TO STA 746 LH . . .	0150	1
			(VS2500) (A/R ONLY) (SEE 33-07, FIG. 6)		
175	ALD33-00-26591-002		FORMATION LIGHTS INSTL, STA 710 TO STA 746 RH . . .	0150	1
			(VS2500) (A/R ONLY) (SEE 33-07, FIG. 6)		
176	391-89-70-73167-007		DUMMY RECEPTACLE INSTL, L.H. A/R PUMP S.O.V. FWD. .	0150	1
			(VS2500) (SEE 24-13, FIG. 375)		
177	391-89-70-73169-007		DUMMY RECEPTACLE INSTL, L.H. A/R PUMP S.O.V. AFT. .	0150	1
			(VS2500) (SEE 24-13, FIG. 374)		
177	391-89-70-73169-008		DUMMY RECEPTACLE INSTL, R.H. A/R PUMP S.O.V. AFT. .	0150	1
			(VS2500) (SEE 24-13, FIG. 374)		
178	391-89-70-73168-011		DUMMY RECEPTACLE INSTL, R.H. A/R PUMP S.O.V. FWD. .	0150	1
			(VS2500) (SEE 24-13, FIG. 376)		
179	361-89-90-72331-029		SEAL INSTL, ELECTRICAL WIRING, STR 22 (LH ONLY) . .	0150	1
			(VS2500) (SEE FIG. 11A)		
179	361-89-90-72331-030		SEAL INSTL, ELECTRICAL WIRING, STR 22 (RH ONLY) . .	0150	1
			(VS2500) (SEE FIG. 11A)		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

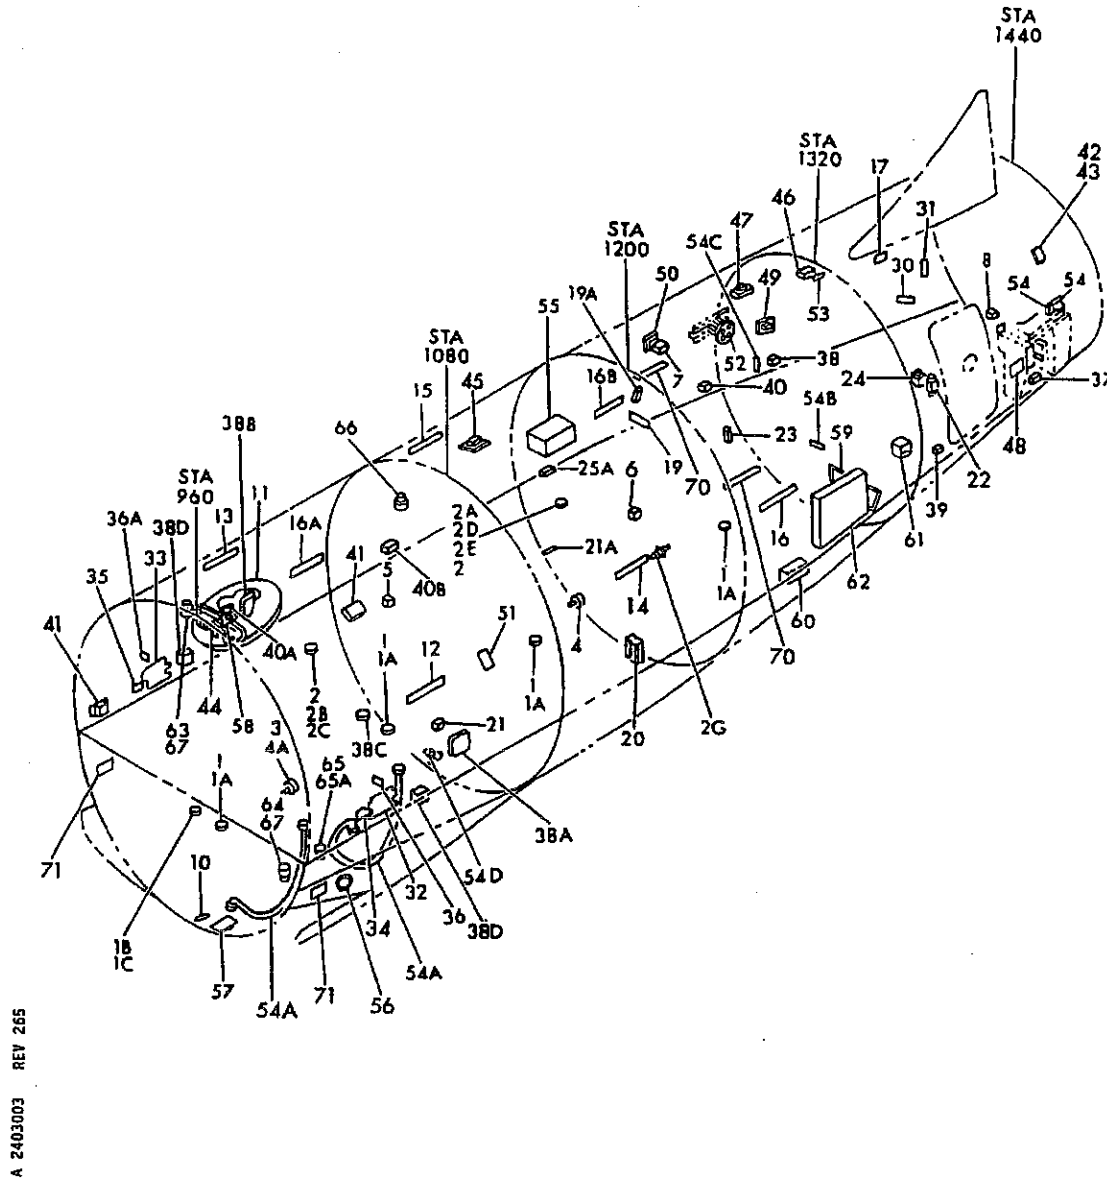


FIGURE 3. ELECTRICAL INSTL, SECTION 56

PARTS CATALOG


FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R	3 50-5556	ELECTRICAL INSTL, SECTION 56 (SEE 53-1, FIG. 3, ITEM 4 AND 53-2, FIG. 3, ITEM 3)	0150	RF
	50-5556	ELECTRICAL INSTL, SECTION 56 (VARIABLE. DWG;50-5556-5007) (SEE 53-1, FIG. 3, ITEM 4)	5199	RF
	1 65-1669-32	. LIGHT INSTL, CARGO COMPARTMENT DOME (SEE 33-4, FIG. 77)		4
	1A 65-1669-33	. SUPPORT INSTL, CARGO COMPARTMENT DOME LIGHT (SEE. . . 33-4, FIG. 77)		4
	2 65-1669-24	. LIGHT INSTL, CARGO COMPARTMENT DOME (SEE 33-4, FIG. 77)		1
	2A 65-1669-24	. LIGHT INSTL, CARGO COMPARTMENT DOME (SEE 33-4, FIG. 77)		1
	2C 65-1669-25	. SUPPORT INSTL, CARGO COMPARTMENT DOME LIGHT (SEE. . . 33-4, FIG. 77)		1
	2D 65-1669-25	. SUPPORT INSTL, CARGO COMPARTMENT DOME LIGHT (SEE. . . 33-4, FIG. 77)		1
	3 69-1346-1	. SWITCH INSTL, SECTION 56 CARGO LIGHTS		1
R R R R	4 69-1346-2	. SWITCH INSTL, SECTION 56 CARGO LIGHTS		1
		. . . LIGHTS, (SEE 33-4, FIG. 78)		
	5 69-17055	. REQUIRED PLACARDS, (SEE 11-2, FIG. 71).		1
	6 69-47079	. SWITCH INSTL, CENTER CARGO DOOR WARNING (SEE 52-5, . . . FIG. 4)		1
	7 69-44018	. SWITCH INSTL, AFT CARGO DOOR WARNING (SEE 52-5, FIG. 4)		1
	8 69-44019	. SWITCH INSTL, AFT GALLEY DOOR (SEE 52-5, FIG. 4). . .		1
	9 66-2541	. SWITCH INSTL, AFT ENTRY DOOR (SEE 52-5, FIG. 4) . . .		1
		. . . LIGHTS, (SEE 33-4, FIG. 81)		
		. . . REQUIRED PLACARDS, (SEE 11-1, FIG. 100)		
R R R R	10 65-8304	. LIGHT INSTL, STATION 960N LOWER BEACON (SEE 33-1, . . . FIG. 2)	0150	1
	10 65-8304	. LIGHT INSTL, STATION 960N LOWER BEACON (VARIABLE. . . DWG;65-8304-5001) (SEE 33-1, FIG. 2)	5199	1
	19 65-36064-2	. STRIP INSTL, GALLEY AC SERVICE OUTLET TERMINAL (SEE . . . 24-13, FIG. 7)		1
	22 65-11622-1	. SWITCH INSTL, STATION 1380 POTABLE WATER HEATERS. . . THERMO (SEE 38-1, FIG. 53)		1
	23 65-11619	. STRIP INSTL, STATION 1300 POTABLE WATER HEATERS . . . TERMINAL (SEE 38-1, FIG. 53)		1
	31 69-33126-1	. FUSE INSTL, LAVATORY C WATER LINE HEATER. (SEE 38-1, FIG. 42A)		1
	65-17000-5	. BUNDLE INSTL, SECTION 46 (SEE APPLICABLE CHAPTER FOR ELECTRICAL BUNDLE ASSEMBLIES)		1
	36 65-74472-1	. SWITCH INSTL, STATION 990 EMERGENCY EXIT DOOR WARNING KIT (LH) (SEE 52-05, FIG. 26)	5199	1
	36A 65-74472-2	. SWITCH INSTL, STATION 990 EMERGENCY EXIT DOOR WARNING KIT (RH) (SEE 52-05, FIG. 26)	5199	1
R R R R R R R R R R	37 65-58620-3	. LIGHT INSTL, STATION 1415 ESCAPE SLIDE ILLUMINATION . . . (SEE 33-2 FIG. 7)	5199	1
	38 65-58620-4	. LIGHT INSTL, STATION 1355 ESCAPE SLIDE ILLUMINATION . . . (SEE 33-2 FIG. 7)	5199	1
	38A 65-58620-14	. LIGHT INSTL, STATION 1031 ESCAPE SLIDE ILLUMINATION . . . (SEE 33-2, FIG. 7)	5199	1
	38B 65-58620-15	. LIGHT INSTL, STATION 1031 ESCAPE SLIDE ILLUMINATION . . . (SEE 33-2, FIG. 7)	5199	1
	40 65-58620-8	. POWER SUPPLY INSTL, STATION 1307.3 ESCAPE SLIDE . . . ILLUMINATION (SEE 33-2, FIG. 7)	5199	1
	40B 65-58620-20	. POWER SUPPLY INSTL, STATION 1050 ESCAPE SLIDE . . . ILLUMINATION (SEE 33-2, FIG. 7)	5199	1
	41 65-71727-24	. LIGHT INSTL, OVERWING ESCAPE ILLUMINATION	5199	1
	41 65-71727-13	. LIGHT INSTL, OVERWING ESCAPE ILLUMINATION (ADDED BY . . . SB 2754)	0150	1
		. . . LIGHTS, (SEE 33-2, FIG. 12 AND 13).		
R R R		. . . REQUIRED PLACARDS, (SEE 11-2, FIG. 82 AND 82A). . .		
		. PROVISIONS INSTL, WIRING.		1
	44 65-51346-2	. CLAMP INSTL, (SEE 24-13, FIG. 26P AND 26Q).	0150	1
	44 65-51346-2	. CLAMP INSTL, (VARIABLE DWG;65-51346-5004) (SEE. . . 24-13, FIG. 26P)	5199	1
	45 65-33155-2	. . . BOX INSTL, STATION 1144 CENTER LOWERED CEILING. . . LIGHT DISCONNECT (SEE 33-4, FIG. 74)		1
	46 65-32250-1	. . . BOX INSTL, AFT LOWERED CEILING LIGHTS DISCONNECT. . . (SEE 33-4, FIG. 76)		1
	47 65-32294-1	. . . BOX INSTL, AFT GALLEY CEILING FLUORESCENT LIGHT . . . DISCONNECT (SEE 33-4, FIG. 75)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



DETAILED PARTS LIST
24-03-3
PAGE 2

RAF
NOV 21/94

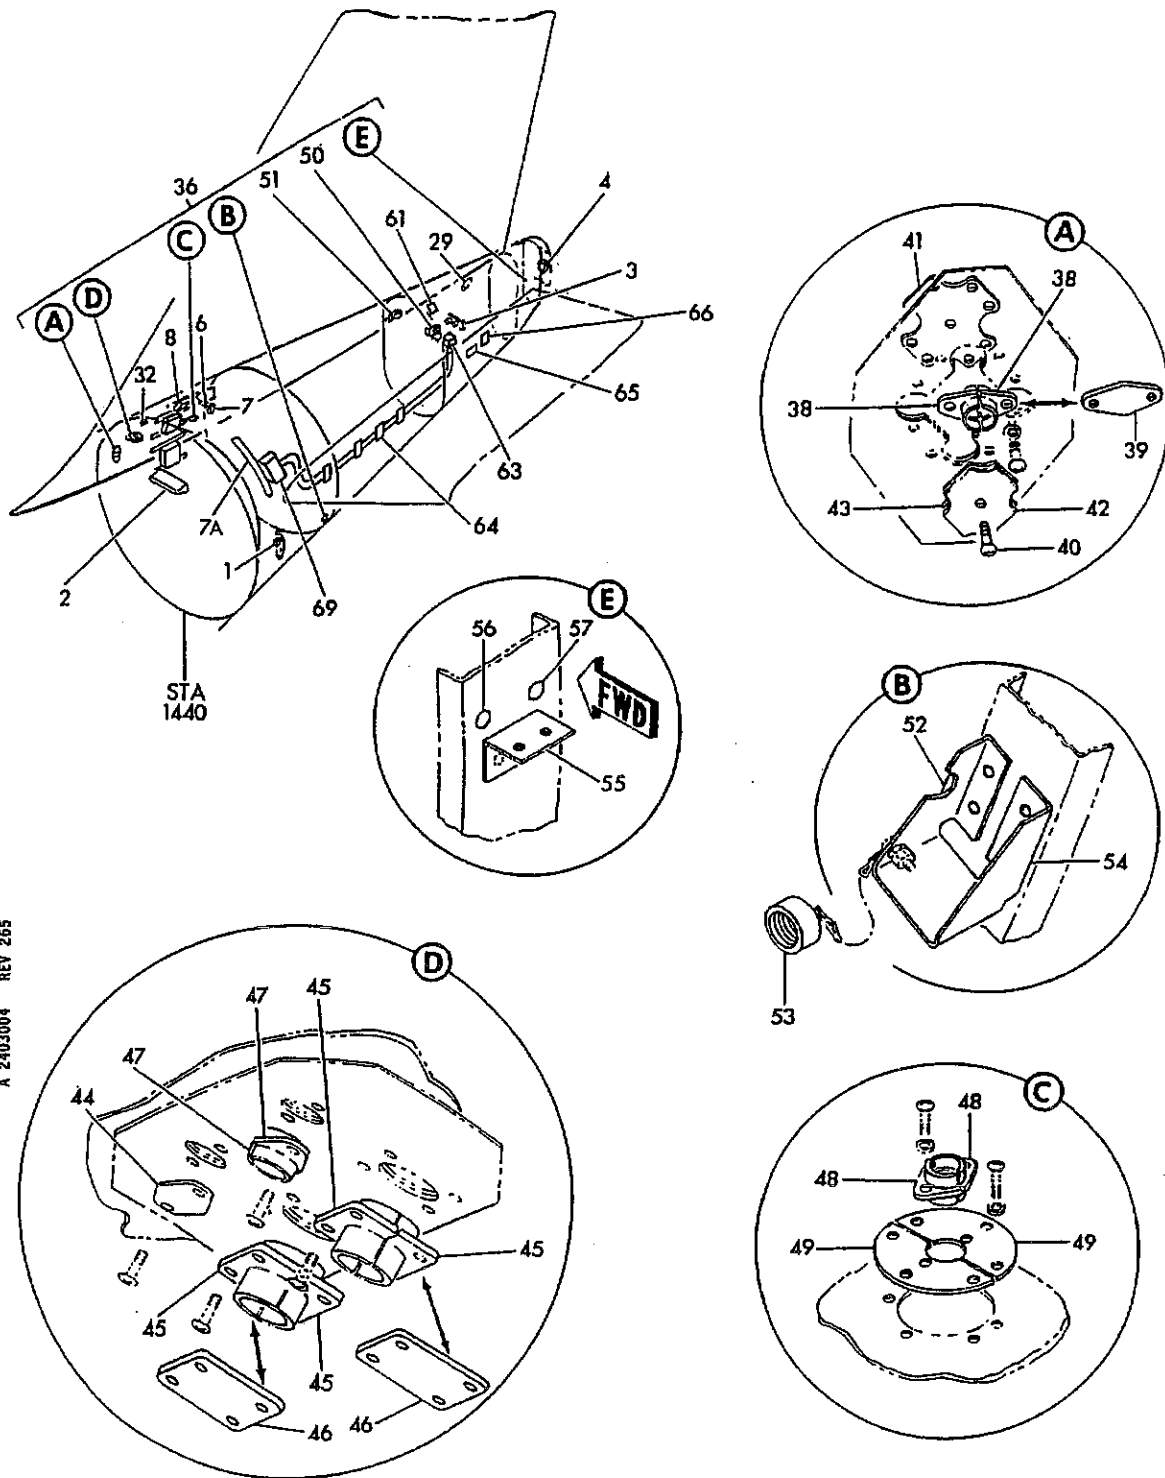

A 2403004 REV 265

FIGURE 4. ELECTRICAL INSTL, SECTION 58



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
4	50-5558	ELECTRICAL INSTL, SECTION 58 (SEE 53-2, FIG. 4, ITEM. 22)	0150	RF
	50-5558	ELECTRICAL INSTL, SECTION 58 (VARIABLE.)	5199	RF
1	69-2875-1	DWG;50-5558-5007) (SEE 53-2, FIG. 4, ITEM 22)		1
	65-17000-6	. SWITCH INSTL, LIGHT (SEE 33-4, FIG. 87)		1
3	69-11284	. BUNDLE INSTL, SECTION 58 ELECTRICAL AND ELECTRONICS		1
4	69-10118	(SEE APPLICABLE CHAPTER FOR ELECTRICAL BUNDLE ASSEMBLIES)		1
7	65-14246	. STRIP INSTL, STATION 1616 TAIL LIGHT TERMINAL (SEE.		1
7A	65-3417-1	33-1, FIG. 9)		1
36	50-5558-4	. LIGHT INSTL, STATION 1672 TAIL (SEE 33-1, FIG. 7)		1
38	69-1322	. FLOODLIGHT INSTL, STATION 1475 TAIL COMPARTMENT (SEE		1
	BACS45A3S	33-4, FIG. 87)		1
39	BACS45A21S	. STRUCTURE INSTL, EMPENNAGE DEICE CONTROL (SEE 30-2, ...		1
		FIG. 1)		1
		. PROVISIONS INSTL, WIRE.		1
		. . SEAL INSTL, STATION 1440 BULKHEAD ELECTRICAL CABLE		1
		. . . FITTING		AR
		(OPTIONAL BACS45A21S)		AR
		. . . PLATE		AR
		(OPTIONAL TO BACS45A3S)		
		ATTACHING PARTS		
		. . . SCREW		8
		. . . WASHER.		8
40	AN515-6R6	*-----*		
41	BACS45A4S	. . . SCREW		1
42	BACS45A6S	. . . PLATE		1
43	BACS45A7S	. . . FILLER.		1
	65-6077	. . . FILLER.		1
44	BACS45A21S	. . SEAL INSTL, STATION 1440 BULKHEAD ELECTRICAL WIRING		1
		. . . PLATE		1
		ATTACHING PARTS		
		. . . SCREW		2
	NAS601-6	*-----*		
45	BACS45A1S	. . . FITTING		AR
46	BACS45A22S	(OPTIONAL BACS45A22S)		AR
47	BACS45A3S	. . . PLATE		AR
		(OPTIONAL TO BACS45A1S)		
		. . . FITTING		2
		ATTACHING PARTS		
		. . . SCREW		10
	NAS601-8	*-----*		
48	69-6176	. . SEAL INSTL, SECTION 58 WIRING		1
	BACS45A3	. . . FITTING		2
		ATTACHING PARTS		
		. . . SCREW		2
	NAS601-8	. . . WASHER.		2
	AN960PD6L	*-----*		
49	63-2893	. . . PLATE ASSY, BUNDLE SEAL		2
		ATTACHING PARTS		
		. . . SCREW		6
	NAS603-8	. . . WASHER.		6
	AN960-10L	*-----*		
52	69-43779-1	. . BRACKET INSTL, TAIL CONE OUTLET CONNECTOR		1
53	BACM9L10ANZ	. . . SCOTCH-CAL, TAIL CONE OUTLET-D1312.		1
	MS25043-16C	. . . COVER		1
		ATTACHING PARTS		
		. . . SCREW		1
	NAS600-4P	. . . WASHER.		1
	AN960D4L	. . . NUT		1
	NAS679A04W	*-----*		
54	69-43775-1	. . . BRACKET, STATION 1462 CONNECTOR SUPPORT		1
		ATTACHING PARTS		
		. . . RIVET		2
	MS20470D5	. . . RIVET		2
	MS20470DB	*-----*		
61	391-33-00-73185-001	. . LIGHT INSTL, STA 1592 VERTICAL STABILIZER (LH).	0150	1
		(VS2500) (A/R ONLY) (ADDED BY RAF 7211.019-225)		
		(SEE 33-07, FIG. 4A)		
	391-33-00-73185-002	. . LIGHT INSTL, STA 1592 VERTICAL STABILIZER (RH).	0150	1
		(VS2500) (A/R ONLY) (ADDED BY RAF 7211.019-225)		
		(SEE 33-07, FIG. 4A)		

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
4 63	361-33-40-72046-001	CONNECTORS INSTL, INFRA-RED LIGHTS, STA 1616. (VS2500) (A/R ONLY) (ADDED BY RAF 7211.019-225) (SEE 24-13, FIG. 370)	0150	1
64	361-33-40-72683-001	WIRE INSTL, INFRA-RED LIGHTS J BOX (VS2500) (A/R. . . ONLY) (ADDED BY RAF 7211.019-225) (SEE 24-13, FIG. 371)	0150	1
65	361-33-40-73194-001	INFRA RED LIGHT INSTL, FWD, STA 1623 (LH) (VS2500). . (A/R ONLY) (ADDED BY RAF 7211.019-225) (SEE 33-07, FIG. 3A)	0150	1
	361-33-40-73194-002	INFRA RED LIGHT INSTL, FWD, STA 1623 (RH) (VS2500). . (A/R ONLY) (ADDED BY RAF 7211.019-225) (SEE 33-07, FIG. 3A)	0150	1
66	361-33-40-73194-003	INFRA RED LIGHT INSTL, AFT, STA 1633 (LH) (VS2500). . (A/R ONLY) (ADDED BY RAF 7211.019-225) (SEE 33-07, FIG. 3A)	0150	1
	361-33-40-73194-004	INFRA RED LIGHT INSTL, AFT, STA 1633 (RH) (VS2500). . (A/R ONLY) (ADDED BY RAF 7211.019-225) (SEE 33-07, FIG. 3A)	0150	1
69	361-33-40-72117-003	JUNCTION BOX INSTL, INFRA-RED LIGHTS (VS2500) (STA 1462 TO STA 1484) (A/R ONLY) (ADDED BY RAF 7211.019-225) (SEE 24-13, FIG. 374)	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

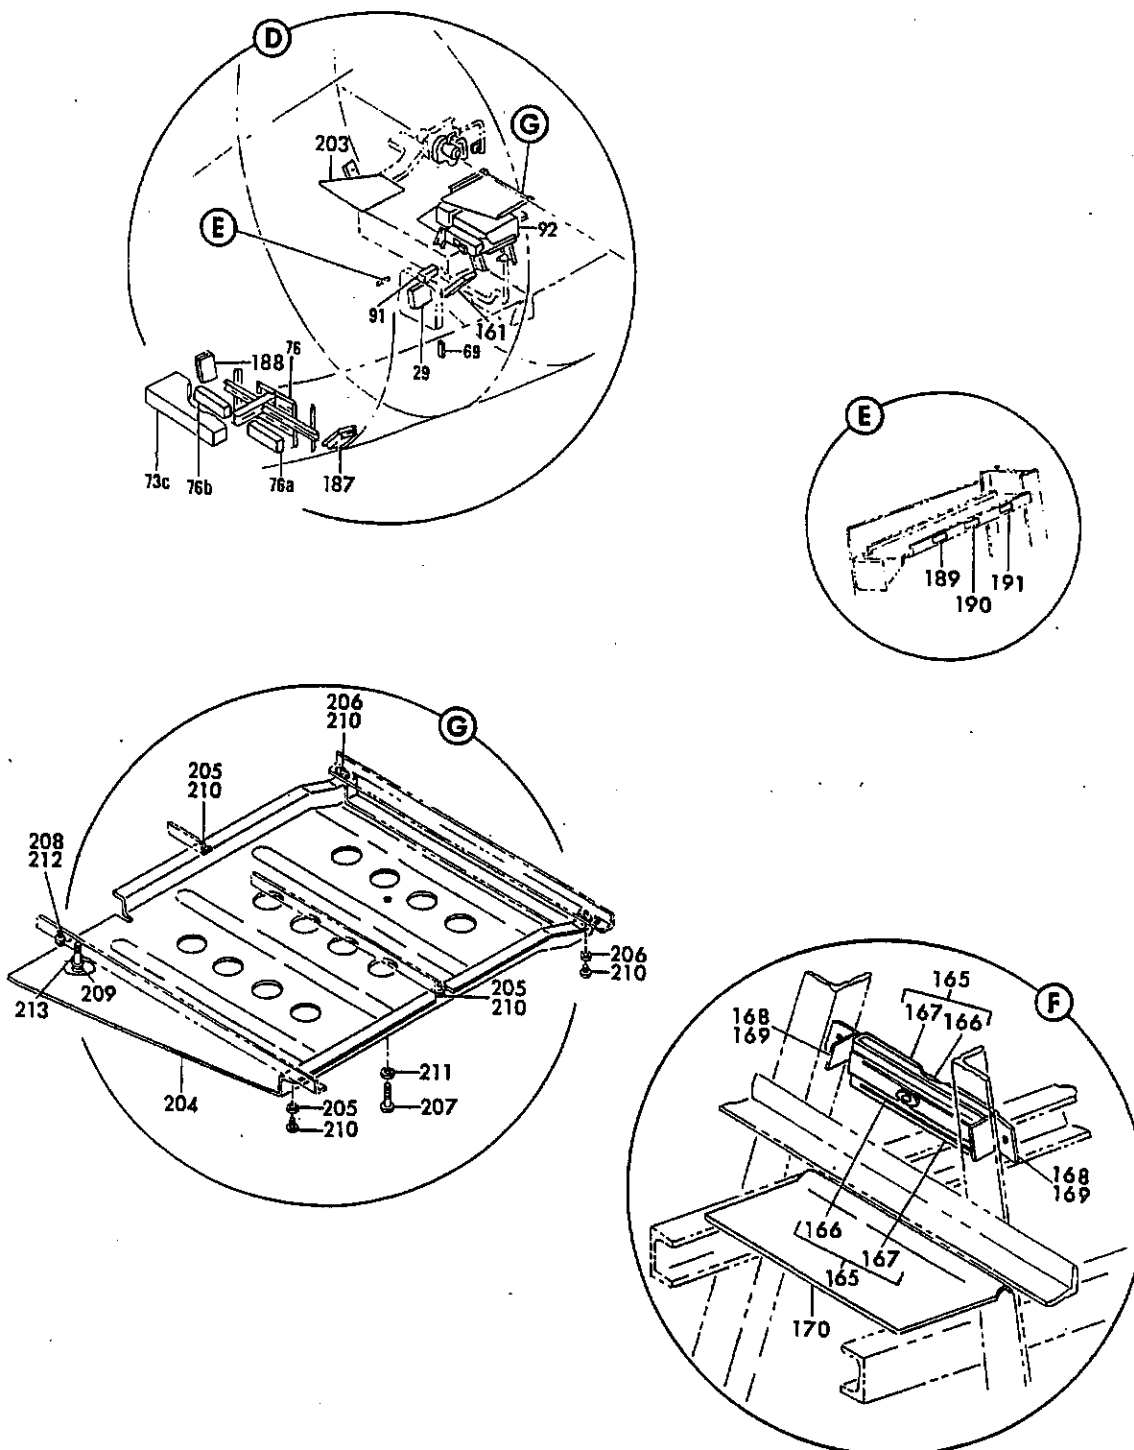


FIGURE 5B. ELECTRONICS INSTL, SECTION 51 (SHEET 2)

NOV 21/90

24-03-58

DETAILED PARTS LIST
24-03-58
PAGE 1

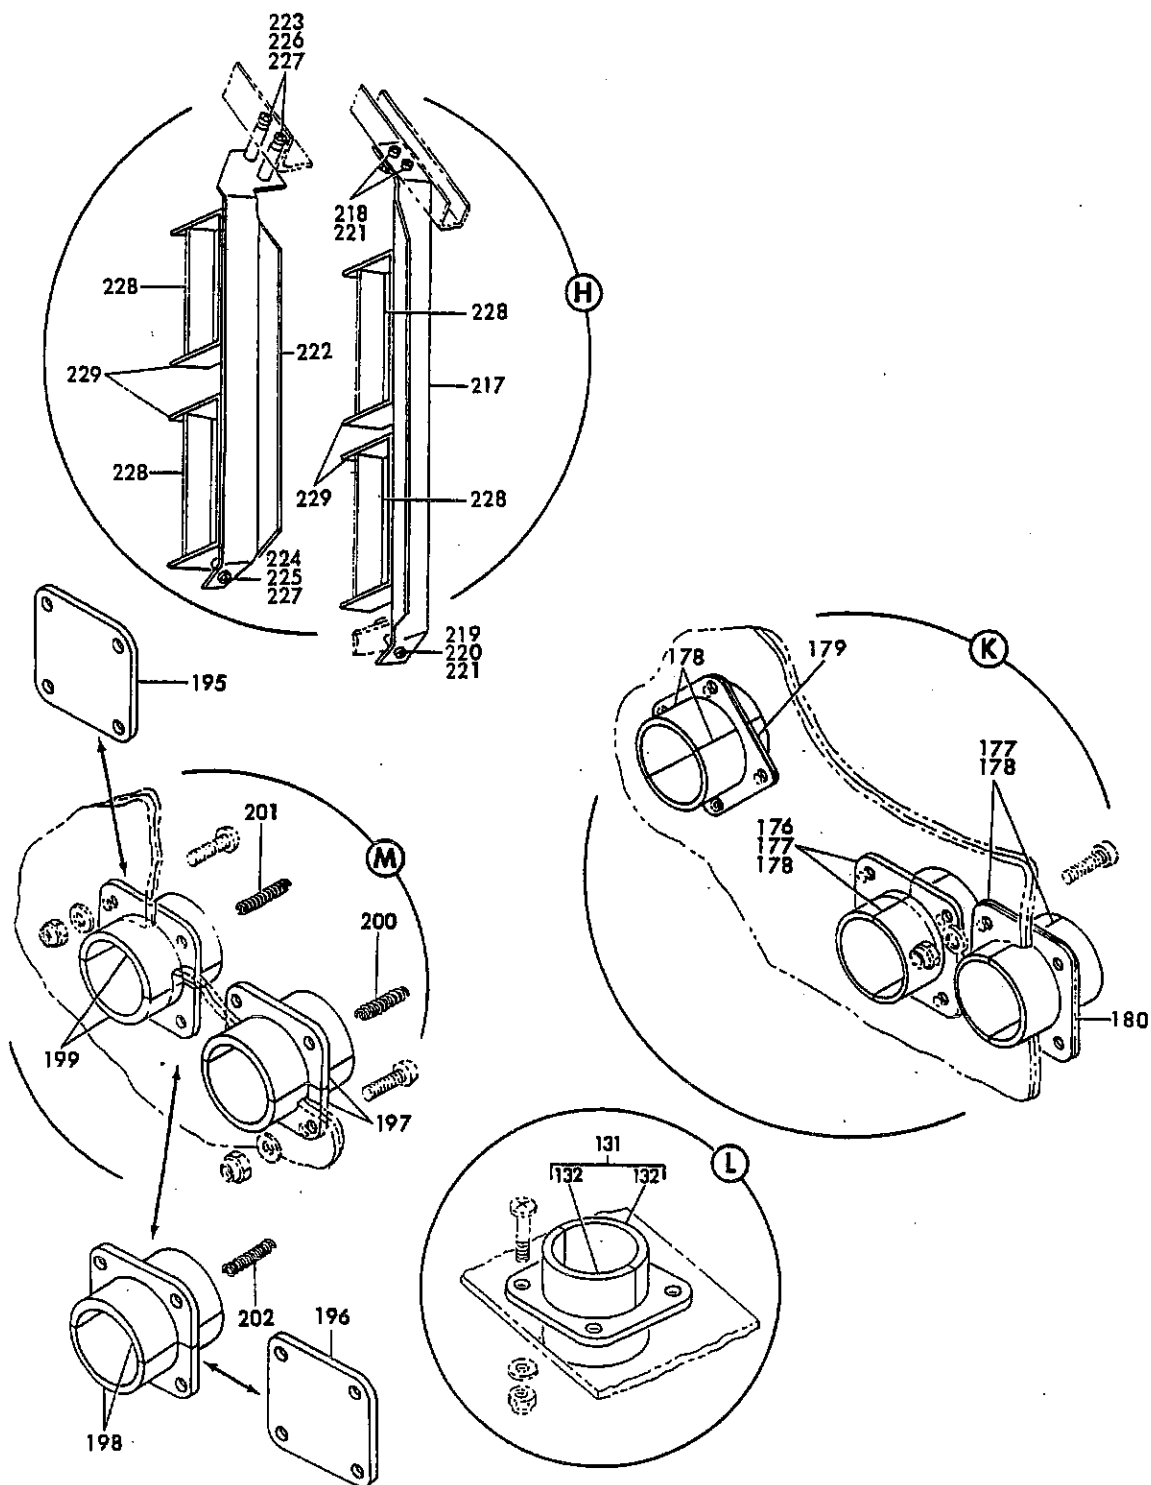


FIGURE 5B. ELECTRONICS INSTL. SECTION 51 (SHEET 3)

DETAILED PARTS LIST
24-03-5B
PAGE 2

24-03-5B

NOV 21/90

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5B	50-6851	ELECTRONICS INSTL, SECTION 51 (SEE 53-1, FIG. 1, ITEM 19)	0150	RF
1	65-2911	. ANTENNA INSTL, WEATHER RADAR (DELETED BY RAF MOD. 7211.019-119)	0150	1
		. . NAVIGATION, (SEE 34-1, FIG. 9)	0150	
		. . REQUIRED PLACARDS, (SEE 11-2, FIG. 35)	0150	
1	QA34829	. ANTENNA INSTL, WEATHER RADAR (VZ0268) (DELETED BY RAF MOD 7211.019-119) (SEE 34-1, FIG. 9D)	0150	1
1A	391-34-50-73994-001	. ANTENNA INSTL, IFF AND WEATHER RADAR (VZ0031) (100Z6900-001A1REF) (ADDED BY RAF MOD 7211.019-4) (SEE 34-01, FIG. 09D)	0150	1
2	5-97020-3001	. ANTENNA INSTL, GLIDE SLOPE (SEE 34-2, FIG. 1)	0150	1
3	50-10857	. WAVEGUIDE INSTL, WEATHER RADAR (SEE 34-1, FIG. 6 AND 6B)	0150	1
5A	65-37657-1	. EQUIPMENT INSTL, DOPPLER CAVITY DECK AAIP (SEE 22-3, FIG. 2)	0150	1
8	69-15299-1	. STRIP INSTL, NAVIGATORS STATION TERMINAL (SEE 24-13, FIG. 2)	0150	1
10	65-54009-1	. SUPPORT INSTL, DOPPLER RADAR RECEIVER TRANSMITTER UNIT (SEE 34-1, FIG. 15, 16 AND 17)	0150	1
12	65-3416	. ABSORBER INSTL, WEATHER RADAR RF RADIATION (DELETED BY RAF MOD 7211.019-4) (SEE 34-01, FIG. 12)	0150	1
13	65-26133-1	. PANEL INSTL, RJ17 INTERPHONE (LH) (SEE 23-2, FIG. 80)	0150	1
14	65-26133-2	. PANEL INSTL, RJ18 INTERPHONE (RH) (SEE 23-2, FIG. 80)	0150	1
20	65-20749-1	. PANEL INSTL, ENGINEERS INTERPHONE TERMINAL (SEE 23-2, FIG. 83)	0150	1
21	65-19524-1	. PANEL INSTL, OBSERVERS INTERPHONE TERMINAL STRIP (SEE 23-2, FIG. 87)	0150	1
25	69-10900	. COVER INSTL, STATION 303.5 L-BAND ANTENNA (SEE 34-2, FIG. 3)	0150	1
26	69-12743-1	. SWITCH INSTL, WEATHER RADAR ANTENNA SCAN	0150	1
27	50-10801	. BOX INSTL, WEATHER RADAR JUNCTION	0150	1
		. . NAVIGATION, (SEE 34-1, FIG. 11)	0150	
		. . REQUIRED PLACARDS, (SEE 11-2, FIG. 36)	0150	
27A	65-18973-1	. EQUIPMENT INSTL, STATION 312 AIR DATA SENSOR (LH)	0150	1
		. . AUTOPILOT, (SEE 22-1, FIG. 4)	0150	
		. . NAVIGATION, (SEE 34-6, FIG. 2)	0150	
28	65-1673-12	. DUCT INSTL, WEATHER RADAR AND LORAN UNIT COOLING AIR (SEE 25-19, FIG. 2)	0150	1
29	65-19834-1	. BOX INSTL, FLIGHT INSTRUMENTS RJ 15 JUNCTION (SEE 24-13, FIG. 49)	0150	1
30	65-10072-10	. PANEL INSTL, AUDIO SELECTOR (SEE 23-2, FIG. 97)	0150	1
35	69-3614	. JACK INSTL, ELECTRONICS COMPARTMENT SELECTOR PANEL (SEE 23-2, FIG. 99)	0150	1
36	60-6939	. JACK INSTL, ELECTRONICS COMPARTMENT INTERPHONE (SEE 23-2, FIG. 99)	0150	1
37	65-20876-1	. SHELF INSTL, STATION 318 AUTOPILOT ELECTRONIC EQUIPMENT (SEE 22-1, FIG. 2)	0150	1
37A	65-20876-5	. SHELF INSTL, STATION 318 AUTOPILOT ELECTRONIC EQUIPMENT (SEE 22-1, FIG. 2)	0150	1
	65-52064	. SUPPORT BRACKET INSTL, AUTOPILOT SHELF	0150	1
37C	66-24041	. . SUPPORT BRACKET, FWD BOTTOM	0150	1
37D	66-24036	. . SUPPORT BRACKET, AFT BOTTOM	0150	1
37E	65-52046-1	. . ANGLE	0150	1
37F	65-52046-2	. . ANGLE	0150	1
		ATTACHING PARTS		
	NAS603-8	. . SCREW	0150	2
	BACS18F25B	. . SPACER	0150	4
	NAS680A3	. . NUT	0150	2
38	65-4025-5	. COVER INSTL, AUTOPILOT EQUIPMENT (SEE 22-1, FIG. 9)	0150	1
39	65-5391	. GYRO INSTL, DIRECTIONAL	0150	1
		. . NAVIGATION, (SEE 34-4, FIG. 5)	0150	
		. . REQUIRED PLACARDS, (SEE 11-2, FIG. 37)	0150	
40	65-3737	. GYRO INSTL, VERTICAL (SEE 34-4, FIG. 1)	0150	1
40C	65-3737-9	. BRACKET INSTL, VERTICAL GYRO SUPPORT (SEE 34-4, FIG. 1)	0150	1
41	65-28940-1	. SELCAL UNIT INSTL, CONTROL CABIN (SEE 23-3, FIG. 4)	0150	1
42	65-7421	. DUCT INSTL, ELECTRICAL RACK COOLING AIR RH (SEE 25-19, FIG. 3)	0150	1
43	65-6567-5	. DUCT INSTL, CIRCUIT BREAKER PANEL AND LORAN COOLING AIR (SEE 25-19, FIG. 2)	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/01

24-03-5B

DETAILED PARTS LIST
24-03-5B
PAGE 3

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
58 56	65-36059	. BOX INSTL, INTERPHONE SYSTEM INTERCONNECTION (SEE 23-2, FIG. 54)	0150	1
66	65-19483-1	. PANEL INSTL, RADIO RACK TERMINAL (SEE 24-13, FIG. 14)	0102	1
66	65-19483-4	. PANEL ASSY, RADIO RACK TERMINAL (SEE 24-13, FIG. 14B)	0350	1
70	65-54011-4	. WAVEGUIDE INSTL, STATION 243.7 DOPPLER RADAR (LH) (SEE 34-1, FIG. 19)	0150	1
71	65-54011-3	. WAVEGUIDE INSTL, STATION 243.7 DOPPLER RADAR (RH) (SEE 34-1, FIG. 19)	0150	1
72	65-54010-1	. ANTENNA INSTL, DOPPLER RADAR (LH) (SEE 34-1, FIG. 21)	0150	1
73	65-54010-2	. ANTENNA INSTL, DOPPLER RADAR (RH) (SEE 34-1, FIG. 21)	0150	1
73A	65-54010-9	. ANTENNA INSTL, DOPPLER RADAR (LH) (SEE 34-1, FIG. 16)	0150	1
73B	65-54010-10	. ANTENNA INSTL, DOPPLER RADAR (RH) (SEE 34-1, FIG. 16)	0150	1
74A	69-47303-1	. TERMINAL STRIP INSTL, FLIGHT INTERPHONE PASSENGER ADDRESS (SEE 23-2, FIG. 88A)	0150	1
76	65-54009	. UNIT INSTL, DOPPLER RADAR RECEIVER TRANSMITTER (SEE 34-1, FIG. 15)	0150	1
76A	65-54009-7	. UNIT INSTL, DOPPLER RADAR RECEIVER TRANSMITTER (LH) (SEE 34-1, FIG. 16)	0150	1
76B	65-54009-8	. UNIT INSTL, DOPPLER RADAR RECEIVER TRANSMITTER (RH) (SEE 34-1, FIG. 16)	0150	1
92	50-10353	. UNITS INSTL, AVQ-10 WEATHER RADAR (DELETED BY RAF MOD 7211.019-119) (SEE 34-1, FIG. 1)	0150	1
92	Q834837	. UNITS INSTL, WRT 701C WEATHER RADAR (VZ0268). (ADDED BY RAF MOD 7211.019-119) (SEE 34-1, FIG. 1A)	0150	1
95	65-13780-3	. SWITCH INSTL, AUTOPILOT SYSTEM VERTICAL GYRO RATE (SEE 22-1, FIG. 23)	0150	1
100	65-59499-1	. TORQUE ADAPTER INSTL, (SEE 22-1, FIG. 34)	0150	1
101	65-37656-18	. COVER INSTL, STATION 294.5 TO 312 SHIELD.	0150	1
		. . . ELECTRICAL POWER, (SEE 24-13, FIG. 61A)	0150	
		. . . REQUIRED PLACARDS, (SEE 11-2, FIG. 164A)	0150	
102	65-37656-2	. SHIELD INSTL, STATION 294.5 TO 312 RJ20 (SEE 24-13, FIG. 61A ITEM 10)	0150	1
103	65-37656-1	. SHIELD INSTL, STATION 294.5 TO 312 RJ20 (SEE 24-13, FIG. 61A ITEM 31)	0150	1
106	65-37656-17	. SHIELD INSTL, STATION 294.5 TO 312 RJ20 (SEE 22-3, FIG. 1)	0150	1
107	69-31965-2	. RELAY INSTL, AUTOPILOT SYSTEM MISCELLANEOUS FUNCTIONS (SEE 22-1, FIG. 28)	0150	1
109	65-51835-1	. EQUIPMENT INSTL, FUEL FLOW AMPLIFIER AND ATTITUDE WARNING RJ9 ELECTRONIC	0150	1
		. . . FUEL, (SEE 28-5, FIG. 16A AND FIG. 16B)	0150	
		. . . NAVIGATION, (SEE 34-10, FIG. 16B AND FIG. 16G)	0150	
111	65-58448-4	. RESISTOR INSTL, AUTOPILOT SYSTEM 115V PHASE A LOADING (SEE 22-1, FIG. 30A)	0150	1
	50-6851-4	. PROVISION INSTL, WIRE	0150	1
	65-58742-1	. . . RACEWAY INSTL, STATION 277 TO 313 RH.	0150	1
125	65-58742-10	. . . RACEWAY ASSY.	0150	1
		. . . ATTACHING PARTS		
	BACS12N10-10	. . . SCREW ASSY.	0150	2
	BACS18F308	. . . SPACER.	0150	2
	NAS680A3	. . . NUT	0150	2
126	65-58742-6	. . . CHANNEL	0150	1
		. . . ATTACHING PARTS		
	NAS514P1032-16	. . . SCREW	0150	2
	BACS18F508	. . . SPACER.	0150	2
	NAS680A3	. . . NUT	0150	2
128	65-60484-1	. . . CLAMP INSTL, SECTION 51 (SEE 24-13, FIG. 17C)	0150	1
	69-51256-1	. . . PLUG INSTL, SHORTING.	0150	1
134	55-9002-1	. . . PLUG, ELECTRICAL (V77820)	0150	1
135	69-4332	. . . SEAL INSTL, STATION 178 ELECTRONIC WIRES (SEE 34-1, FIG. 13)	0150	1
140	65-51310-1	. . . RACEWAY INSTL, STATION 178 TO 270 ELECTRONIC WIRE (SEE 24-13, FIG. 20A)	0150	1
	65-6102-1	. . . RACEWAY INSTL, NOSE WHEEL WELL ELECTRONIC WIRES	0150	1
143	69-17301-1	. . . CHANNEL, NOSE WHEEL WELL RACEWAY.	0150	3
		. . . ATTACHING PARTS		
144	NAS603-6	. . . SCREW	0150	3
145	NAS603-9	. . . SCREW	0150	3

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
58 146	AN315-3	.	NUT	0150	3
147	BACN10FX1	.	NUT	0150	6
148	NAS603-5	.	SCREW	0150	6
149	65-6100-7	.	RACEWAY ASSY, NOSE WHEEL WELL	0150	1
150	65-6100-4	.	GROMMET, NOSE WHEEL WELL RACEWAY	0150	4
	65-59989-1	.	RACEWAY INSTL, PILOTS CONTRL STAND	0150	1
156	65-59989-2	.	RACEWAY ASSY.	0150	1
		.	ATTACHING PARTS		
	NAS603-8P	.	SCREW	0150	2
	NAS43DD3-6	.	SPACER.	0150	2
	BACN10FX1	.	NUT	0150	2
157	65-60389-3	.	COVER INSTL, CONTROL CABIN FLOOR WIRING RACEWAY	0150	1
		.	(LH) (SEE 24-13, FIG. 18J)		
158	65-60389-4	.	COVER INSTL, CONTROL CABIN FLOOR WIRING RACEWAY	0150	1
		.	(RH) (SEE 24-13, FIG. 18J)		
161	65-14647-4	.	RACEWAY INSTL, FLIGHT INSTRUMENTS WIRE (SEE 24-13, FIG. 49)	0150	1
164	65-52322-1	.	CLAMP INSTL, STATION 328 TO 360 ELECTRONIC WIRE	0150	1
		.	(SEE 24-13, FIG. 26C)		
	65-52748-1	.	CLAMP INSTL, STATION 312 ELECTRONIC WIRE.	0150	1
165	65-22976-57	.	CLAMP ASSY.	0150	2
		.	ATTACHING PARTS		
	BACS12CB3-B	.	SCREW	0150	2
166	65-22976-59	.	CLAMP	0150	1
167	65-22976-58	.	CLAMP	0150	1
168	69-39720-1	.	CLIP ASSY.	0150	2
169	69-39720-3	.	CLIP.	0150	1
170	69-39720-2	.	GUARD	0150	1
		.	ATTACHING PARTS		
	BACS12CB3-6	.	SCREW	0150	2
	BACN10FX1	.	NUT	0150	2
171	69-21201-2	.	GUARD INSTL, DIRECTIONAL GYRO WIRE (SEE 34-4, FIG. 7)	0150	1
	65-58468-1	.	SEAL INSTL, STATION 259.5 ELECTRONIC WIRING	0150	1
172	NAS601-7P	.	SCREW	0150	1
173	NAS601-8P	.	SCREW	0150	8
174	AN960PD6	.	WASHER.	0150	8
175	BACS45A13	.	SEAL.	0150	8
177	BACS45A11	.	SEAL.	0150	4
179	BACS45A27S	.	SEAL.	0150	1
		.	ATTACHING PARTS		
	BACS12CB3-B	.	SCREW	0150	12
	AN960PD10L	.	WASHER.	0150	12
182	BACS45A8S	.	SEAL.	0150	2
183	BACS45A6S	.	SEAL.	0150	1
184	BACS45A4S	.	SEAL.	0150	1
186	65-51882-4	.	PANEL INSTL, AUTOPILOT JUNCTION DISCONNECT RJ3 (SEE 22-1, FIG. 5B)	0150	1
187	65-69080-1	.	SHIELD INSTL, DOPPLER RADAR DISTRIBUTION (LH) (SEE 34-1, FIG. 24)	0150	1
188	65-69080-2	.	SHIELD INSTL, DOPPLER RADAR DISTRIBUTION (RH) (SEE 34-1, FIG. 24)	0150	1
	65-19835-1	.	BRACKET INSTL, WEATHER RADAR DISCONNECTS.	0150	1
189	BACM9L9MB	.	SCOTCH-CAL, RD7951.	0150	1
190	BACM9L9MC	.	SCOTCH-CAL, RD7971.	0150	1
	65-22780-9	.	COVER INSTL, STATION 328 TO 360 ELECTRONIC WIRE	0150	1
204	65-22780-10	.	COVER	0150	1
		.	ATTACHING PARTS		
205	NAS603-7P	.	SCREW	0150	3
206	NAS603-9P	.	SCREW	0150	2
207	NAS603-28P	.	SCREW	0150	1
208	NAS603-7P	.	SCREW	0150	1
209	NAS603-28P	.	SCREW	0150	1
210	AN960D10	.	WASHER.	0150	5
211	AN960PD10	.	WASHER.	0150	1
212	AN960D10	.	WASHER.	0150	1
213	AN960PD10	.	WASHER.	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

RAF
NOV 21/01

24-03-5B

DETAILED PARTS LIST
24-03-5B
PAGE 5

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5B	66-11434	. . PROVISIONS INSTL, ATTITUDE WARNING SYSTEM WIRE. . . ROUTING	0150	1
214	BACG202A167	. . . GROMMET	0150	1
215	MS35489-11	. . . GROMMET	0150	1
216	65-24104-1	. . CONDUIT INSTL, STATION 312 ELECTRONIC WIRE (SEE . . 24-13, FIG. 30)	0150	1
	69-47388-1	. . SUPPORT INSTL, STATION 294 AND 312 WIRING (LH). . .	0150	1
217	69-47388-2	. . . SUPPORT ASSY.	0150	1
		ATTACHING PARTS		
218	NAS603-6P	. . . SCREW	0150	2
219	NAS603-14P	. . . SCREW	0150	1
220	NAS43DD3-24	. . . SPACER.	0150	1
221	NAS679A3W	. . . NUT	0150	3
		-----*		
222	69-47388-4	. . . SUPPORT	0150	1
		ATTACHING PARTS		
223	NAS603-24P	. . . SCREW	0150	2
224	NAS603-14P	. . . SCREW	0150	1
225	NAS43DD3-24	. . . SPACER.	0150	1
226	NAS43DD3-68	. . . SPACER.	0150	2
227	NAS679A3W	. . . NUT	0150	3
		-----*		
228	BACC10DS2F	. . . CLAMP	0150	4
229	BACC10DR5S	. . . CHANNEL	0150	4
		ATTACHING PARTS		
	NAS514P1032-5	. . . SCREW	0150	8
	BACN10FX1W	. . . NUT	0150	8
		-----*		
230	65-15558	. . CLAMP INSTL, VERTICAL GYRO WIRE (BENDIX).	0150	1
		. . . ELECTRICAL POWER, (SEE 24-13, FIG. 26D)	0150	
		. . . REQUIRED PLACARDS, (SEE 11-2, FIG. 135)	0150	
233	65-51700-1	. . PANEL INSTL, PILOTS PANEL PLUG DISCONNECT (SEE 24-10, FIG. 37)	0150	1
R	233A	. . ANTENNA INSTL, (VZ0031) (ADDED BY RAF 7211.019-225) . (SEE 53-01, FIG. 1, ITEM 43)	0450	RF
R	233A	. . ANTENNA INSTL, (VZ0031) (ADDED BY RAF MOD 7211.019-225) (SEE 53-01, FIG. 1, ITEM 43)	0303	RF
R	233A	. . ANTENNA INSTL, (VZ0031) (ADDED BY RAF 7211.019-225) . (SEE 53-01, FIG. 1, ITEM 43)	0102	RF
R	234	. . ANTENNA INSTL, UHF2/TACAN 1 UPPER STA 285.75.	0150	1
		. . . COMMUNICATIONS (SEE 23-01, FIG. 19)	0150	
		. . . NAVIGATION (SEE 34-02, FIG. 40)	0150	
R	235	. . COVER PLATE INSTL, STA 355 UPPER (VZ0031) (ADDED BY RAF MOD 7211.019-4) (SEE 23-01, FIG. 19A)	0150	1
R	236	. . ANTENNA INSTL, LOWER UHF 1/IFF 1 & 2, STA 244 (VZ0031)	0150	1
		. . . COMMUNICATION (SEE 23-01, FIG. 14).	0150	
		. . . NAVIGATION (SEE 34-02, FIG. 40)	0150	
R	237	. . CLADDING INSTL, RADAR ABSORBANT TILES, FWD. BULKHEAD (VZ0031) (ADDED RAF MOD 7211.019-4) (SEE 34-01, FIG. 36)	0150	1
R	238	. . ELECTRICAL COMPONENTS INSTL, (VS2500) (SEE 24-06, . FIG. 37)	0150	1
	239	. . FOOT SWITCH INSTL, F/E STATION (VS2500) (SEE. 23-02, FIG. 34A)	0150	1
	240	. . FOOT SWITCH INSTL, M/C STATION (VS2500) (SEE. 23-02, FIG. 100A)	0150	1
		. . TV & VIDEO MONITORING SYSTEM INSTL, (A/R ONLY). (VS2500) (ADDED BY RAF 7211.019-225)	0150	RF
	241	. . MONITOR ASSY & INSTL (VS2500)	0150	1
		. . . MONITOR BDX ASSY INSTL, (FURNISHING ONLY) (SEE 25-04, FIG. 5D)	0150	
		. . . MONITOR INSTL, (SEE 89-09, FIG. 6).	0150	
		. . . MONITOR PROTECTIVE COVER INSTL, (SEE 25-05, ... FIG. 35)	0150	
	242	. . VIDEO CASSETTE TAPE ASSY & INSTL, (VS2500). (SEE 89-09, FIG. 1)	0150	1
	243	. . VIDEO CASSETTE TAPE PROTECTION STRIP, (VS2500). (FURNISHING ONLY) (SEE 25-05, FIG. 36)	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

DETAILED PARTS LIST
24-03-58
PAGE 6

24-03-58

RAF
NOV 21/01

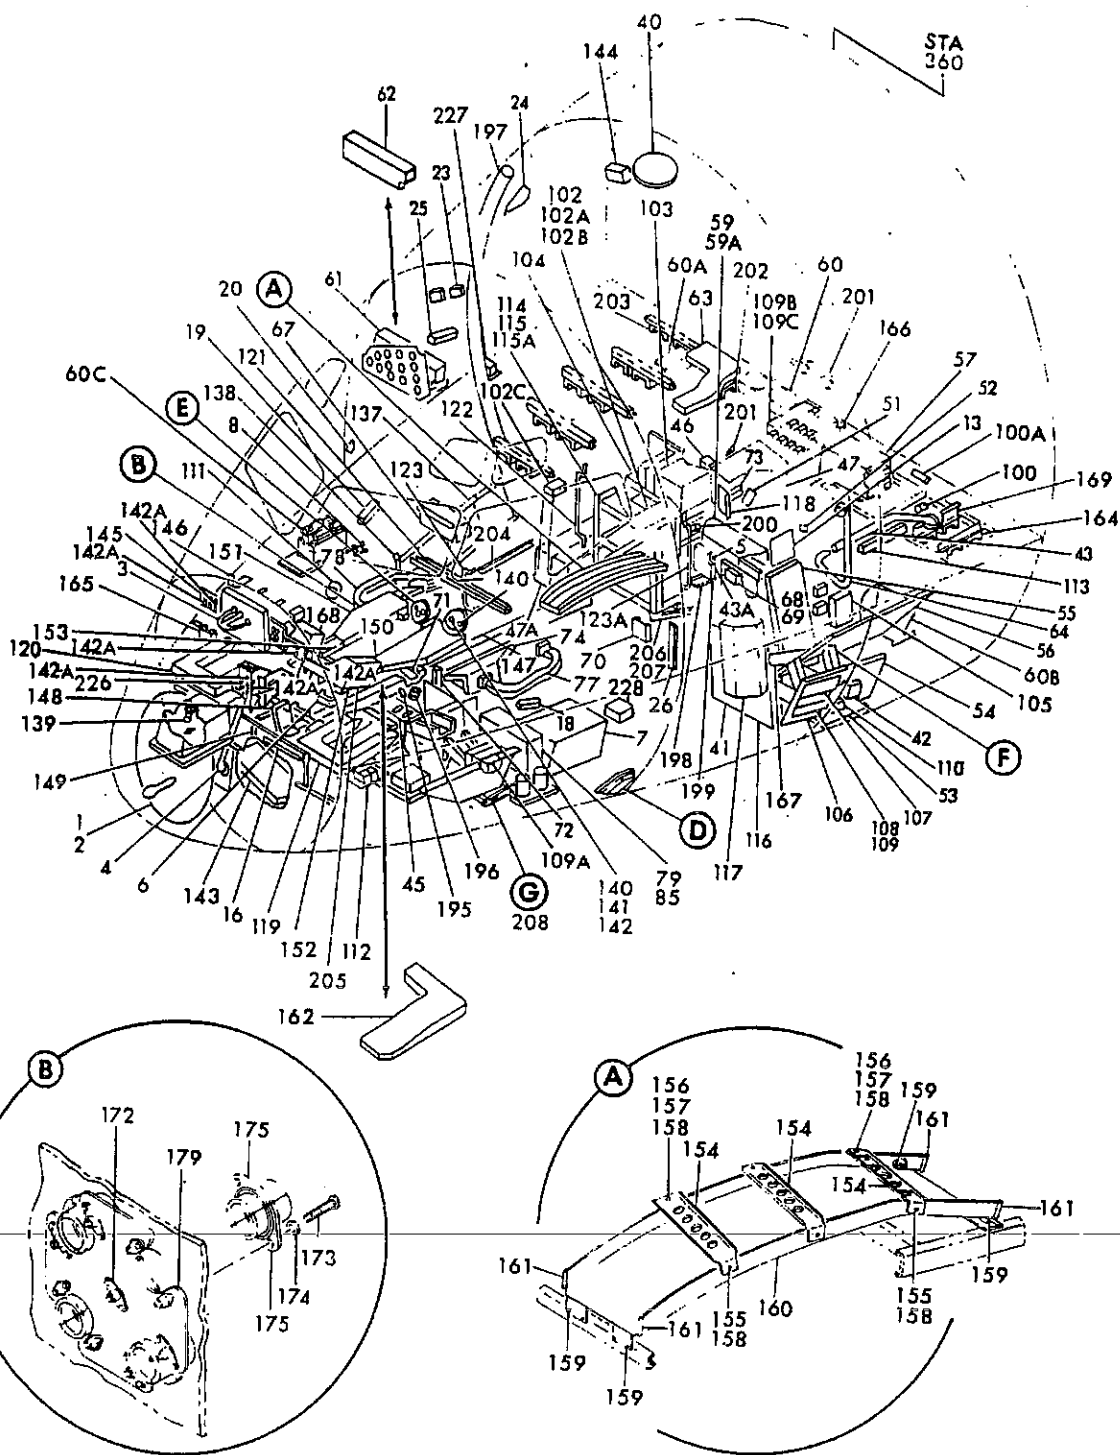


FIGURE 5D. ELECTRONIC INSTL. SECTION 51 (SHEET 1)

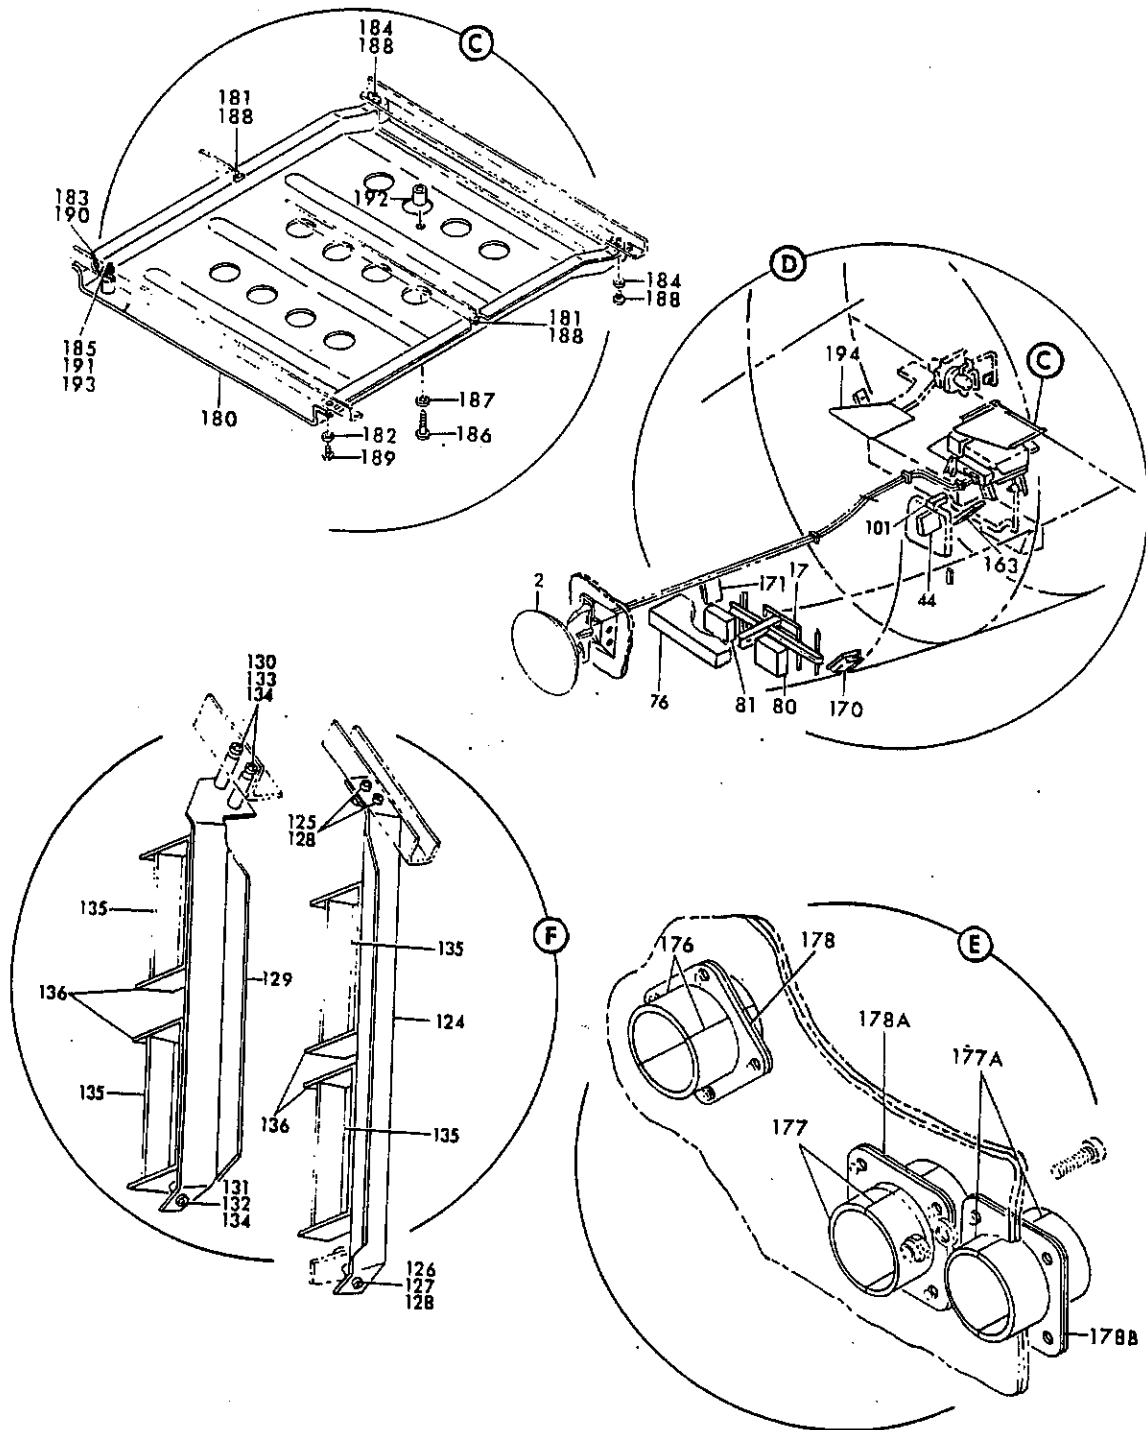


FIGURE 50. ELECTRONIC INSTL, SECTION 51 (SHEET 2)

NOV 21/90

24-03-50

DETAILED PARTS LIST
24-03-50
PAGE 1

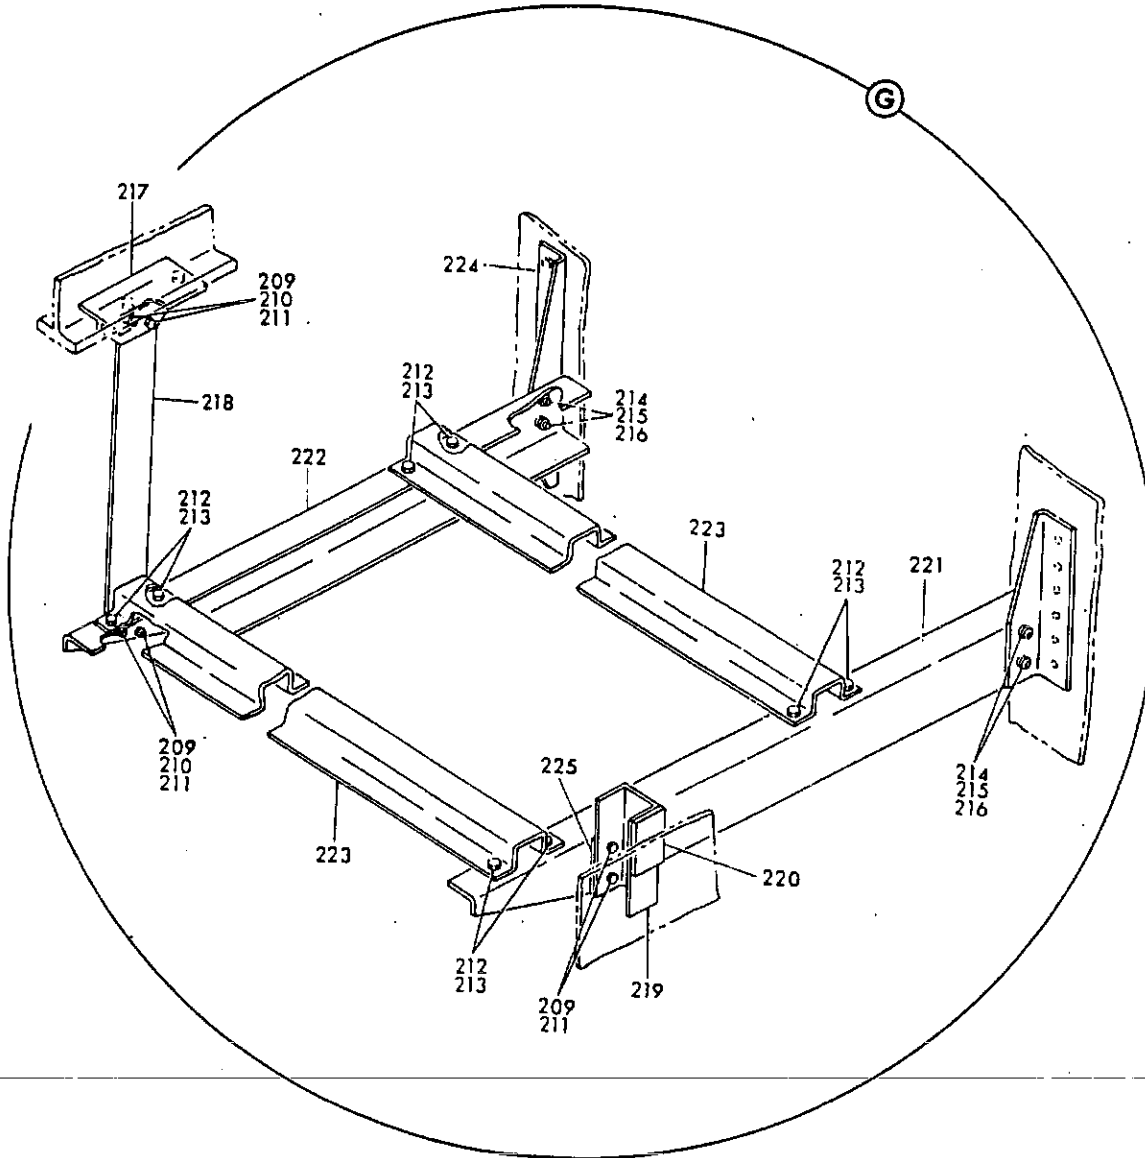


FIGURE 50. ELECTRONIC INSTL, SECTION 51 (SHEET 3)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5D	50-6851	ELECTRONICS INSTL, SECTION 51 (VARIABLE DWG:50-6851-5018) (SEE 53-1, FIG. 1, ITEM 19)	5199	RF
2	65-69445-6	. . . NAVIGATION, (SEE 34-1, FIG. 7 AND 9).	5199	1
3	5-97020-3001	. ANTENNA INSTL, ANT-IT (SEE 34-1, FIG. 10B).	5199	1
4	65-8793-4	. ANTENNA INSTL, GLIDE SLOPE (SEE 34-2, FIG. 1).	5199	1
7	65-37657-4	. WAVEGUIDE INSTL, WEATHER RADAR X-BAND (SEE 34-1, FIG. 8A)	5199	1
13	69-22609-4	. YAW DAMPER INSTL, DOPPLER CAVITY DECK AAIP (SEE 22-1, FIG. 26)	5199	1
18	65-26133-1	. PLATE INSTL, NAVIGATORS STATION DISCONNECT AND.	5199	1
19	65-26133-2	TERMINAL MOUNTING (SEE 24-13, FIG. 56)	5199	1
25	65-20749-1	. PANEL INSTL, RJ17 INTERPHONE (LH) (SEE 23-2, FIG. 80)	5199	1
26	65-19524-1	. PANEL INSTL, RJ18 INTERPHONE (RH) (SEE 23-2, FIG. 80)	5199	1
40	69-10900	. PANEL INSTL, ENGINEERS INTERPHONE TERMINAL (SEE 23-2, FIG. 83)	5199	1
46	65-56898-1	. PANEL INSTL, OBSERVERS INTERPHONE TERMINAL STRIP.	5199	1
47	65-71710-4	(SEE 23-2, FIG. 87)	5199	1
51	65-57197-5	. COVER INSTL, STATION 303.5 L-BAND ANTENNA (SEE 34-2, FIG. 3)	5199	1
52	65-57197-3	. PANEL INSTL, AUDIO SELECTOR (VARIABLE	5199	1
55	65-59524-1	DWG:65-56898-5008) (SEE 23-2, FIG. 97B)	5199	1
56	65-60235-1	. UNITS INSTL, WEATHER RADAR DUAL (SEE 34-1, FIG. 4C).	5199	1
57	65-6520	. JACK INSTL, ELECTRONICS COMPARTMENT INTERPHONE AND.	5199	1
59A	65-3737-9	SELECTOR PANEL (SEE 23-2, FIG. 99)	5199	1
60A	65-15399-2	. JACK INSTL, ELECTRONICS COMPARTMENT INTERPHONE AND.	5199	1
62	65-32761-1	SELECTOR PANEL (SEE 23-2, FIG. 99)	5199	1
64	65-6567-5	. SHIELD INSTL, RJ24 AUTOPILOT EQUIPMENT (VARIABLE.	5199	1
67	65-36059-10	DWG:65-59524-5003) (SEE 22-1, FIG. 2A)	5199	1
69	65-28032-5	. COVER INSTL, AUTOPILOT EQUIPMENT (SEE 22-1, FIG. 9B)	5199	1
71	65-36079	. GYRO INSTL, DIRECTIONAL (SEE 34-4, FIG. 4).	5199	1
73	65-19483-4	. BRACKET INSTL, VERTICAL GYRO SUPPORT (SEE 34-4, FIG. 1)	5199	1
103	65-69908-1	. UNIT INSTL, VERTICAL GYRO SIGNAL PHASING (SEE 34-4, FIG. 3)	5199	1
103	65-69908-1	. SELCAL UNIT INSTL, CONTROL CABIN (SEE 23-3, FIG. 5)	5199	1
104	65-69909-1	. DUCT INSTL, CIRCUIT BREAKER PANEL AND LORAN COOLING AIR (VARIABLE DWG:65-6567-5002) (SEE 25-19, FIG. 2)	5199	1
105	65-59499-1	. BOX INSTL, RJ4 INTERPHONE SYSTEM INTERCONNECTION (SEE 23-2, FIG. 54A)	5199	1
106	65-37656-18	. SUPPORT INSTL, ADF NO. 1 CHANGEOVER (SEE 34-2, FIG. 18)	5199	1
107	65-37656-2	. PANEL INSTL, PILOTS CONTROL STAND TERMINAL (VARIABLE DWG:65-36079-5002) (SEE 23-2, FIG. 91)	5199	1
108	65-37656-1	. PANEL INSTL, RADIO RACK TERMINAL (SEE 24-13, FIG. 14B)	5199	1
108	65-37656-21	. EQUIPMENT INSTL, INERTIAL NAVIGATION RJ28 (VARIABLE DWG:65-69908-5011) (SEE 34-8, FIG. 32)	5151	1
112	65-51835-6	. EQUIPMENT INSTL, INERTIAL NAVIGATION RJ28 (VARIABLE DWG:65-69908-5012) (SEE 34-8, FIG. 32)	5299	1
113	65-58448-12	. RACK INSTL, STATION 328 INERTIAL NAVIGATION SYSTEM.	5199	1
116	65-59523-1	RJ28 (SEE 34-8, FIG. 32)	5199	1
117	65-59526-1	. TORQUE ADAPTER INSTL, (SEE 22-1, FIG. 34).	5199	1
		. COVER INSTL, STATION 294.5 TO 312 RJ20 SHIELD	5199	1
		. . . ELECTRICAL POWER, (SEE 24-13, FIG. 61A).	5199	1
		. . . REQUIRED PLACARDS, (SEE 11-2, FIG. 164A).	5199	1
		. SHIELD INSTL, STATION 294.5 TO 312 RJ20 (SEE 24-13, FIG. 61A)	5199	1
		. SHIELD INSTL, STATION 294.5 TO 312 RJ20 (SEE 24-13, FIG. 61A)	5199	1
		. SHIELD INSTL, STATION 294.5 TO 312 RJ20 (SEE 24-13, FIG. 61A)	5199	1
		. EQUIPMENT INSTL, FUEL FLOW AMPLIFIER AND ATTITUDE	5199	1
		WARNING RJ9	5199	1
		. . . FUEL, (SEE 28-5, FIG. 16A AND 16B).	5199	1
		. . . NAVIGATION, (SEE 34-10, FIG. 16B, 16E AND 16G).	5199	1
		. RESISTOR INSTL, AUTOPILOT SYSTEM 115V PHASE A LOADING (SEE 22-1, FIG. 30B)	5199	1
		. BOX INSTL, RJ23 AUTOPILOT JUNCTION (VARIABLE.	5199	1
		DWG:65-59523-5004)	5199	1
		. . . AUTOPILOT, (SEE 22-1, FIG. 31 AND 31A).	5199	1
		. . . REQUIRED PLACARDS, (SEE 11-2, FIG. 165).	5199	1
		. COMPONENT INSTL, RJ26 AUTOPILOT PITOT-STATIC (SEE 22-1, FIG. 32)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE


BEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5D	50-6851-4		PROVISIONS INSTL, WIRING.	5199	1
119	65-59977-1		RACEWAY INSTL, PILOTS HEEL REST (LH) (SEE 24-13, FIG. 18G)	5199	1
120	65-59977-2		RACEWAY INSTL, PILOTS HEEL REST (RH) (SEE 24-13, FIG. 18G)	5199	1
122	65-61913-9		SUPPORT INSTL, J1 AND J5 WIRING (SEE 24-13, FIG. 116A)	5199	1
123	65-61913-2		SUPPORT INSTL, J1 AND J5 WIRING (SEE 24-13, FIG. 116)	5199	1
123A	65-61913-10		SUPPORT INSTL, J1 AND J5 WIRING (SEE 24-13, FIG. 116A)	5199	1
	69-47388-1		SUPPORT INSTL, STATION 294 AND 312 WIRING (LH). . .	5199	1
124	69-47388-2		SUPPORT ASSY.	5199	1
			ATTACHING PARTS		
125	NAS603-6P		SCREW	5199	2
126	NAS603-14P		SCREW	5199	1
127	NAS43DD3-24		SPACER.	5199	1
128	NAS679A3W		NUT	5199	3
			-----*		
129	69-47388-4		SUPPORT	5199	1
			ATTACHING PARTS		
130	NAS603-24P		SCREW	5199	2
131	NAS603-14P		SCREW	5199	1
132	NAS43DD3-24		SPACER.	5199	1
133	NAS43DD3-68		SPACER.	5199	2
134	NAS679A3W		NUT	5199	3
			-----*		
135	BACC10DS2F		CLAMP	5199	4
136	BACC10DR55		CHANNEL	5199	4
			ATTACHING PARTS		
	NAS514P1032-5		SCREW	5199	8
	BACN10FX1W		NUT	5199	8
			-----*		
	65-58742-1		RACEWAY INSTL, STATION 277 TO 313 RH.	5199	1
137	65-58742-10		RACEWAY ASSY.	5199	1
			ATTACHING PARTS		
	BACS12N10-10		SCREW	5199	2
	BACS18F30B		SPACER.	5199	2
	NAS680A3		NUT	5199	2
			-----*		
138	65-58742-6		CHANNEL	5199	1
			ATTACHING PARTS		
	NAS514P1032-16		SCREW	5199	2
	BACS18F50B		SPACER.	5199	2
	NAS680A3		NUT	5199	2
			-----*		
139	65-71527-1		SEAL AND CONNECTOR INSTL, STATION 178 WEATHER RADAR (VARIABLE DWG; 65-71527-5004) (SEE 34-1, FIG. 40)	5199	1
145	65-59878-10		SUPPORT INSTL, MAIN INSTRUMENT PANELS WIRING.	5199	1
146	65-61999-1		DISCONNECTS (SEE 24-13, FIG. 115)	5199	1
147	65-51310-1		SUPPORT INSTL, MAIN INSTRUMENT PANEL WIRING CLAMP (SEE 24-13, FIG. 115D)	5199	1
148	65-51310-2		RACEWAY INSTL, STATION 178 TO 270 WIRE (SEE 24-13, FIG. 20A)	5199	1
149	65-51310-3		RACEWAY INSTL, STATION 178 TO 270 WIRE (SEE 24-13, FIG. 20B)	5199	1
150	65-60389-3		RACEWAY INSTL, STATION 178 TO 270 WIRE (SEE 24-13, FIG. 20B)	5199	1
151	65-60389-4		COVER INSTL, CONTROL CABIN FLOOR WIRING RACEWAY (LH) (SEE 24-13, FIG. 18J)	5199	1
			COVER INSTL, CONTROL CABIN FLOOR WIRING RACEWAY (RH) (SEE 24-13, FIG. 18J)	5199	1
152	65-60418-1		RACEWAY INSTL, PILOTS CONTROL STAND (LH) (SEE 24-13, FIG. 18J)	5199	1
153	65-60418-2		RACEWAY INSTL, PILOTS CONTROL STAND (RH) (SEE 24-13, FIG. 18J)	5199	1
	65-6102-1		RACEWAY INSTL, NOSE WHEEL WELL WIRES.	5199	1
154	69-17301-1		CHANNEL	5199	3
			ATTACHING PARTS		
155	NAS603-6		SCREW	5199	3
156	NAS603-9		SCREW	5199	3
157	AN315-3		NUT	5199	3
158	BACN10FX1		NUT	5199	6
			-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING **707** Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5D 159	NAS603-5	. . .	SCREW	5199	6
160	65-6100-7	. . .	RACEWAY ASSY.	5199	1
161	65-6100-4	. . .	GROMMET	5199	4
164	65-61833-1	. . .	CLAMP INSTL, STATION 344 TO 360 RACEWAY (SEE 24-13, FIG. 26H)	5199	1
166	65-52322-1	. . .	CLAMP INSTL, STATION 328 TO 360 WIRE (SEE 24-13, FIG. 26C)	5199	1
	65-58468-4	. . .	SEAL INSTL, STATION 259.5 WIRING.	5199	1
172	BACS12CB06-7	. . .	ATTACHING PARTS		
173	BACS12CB06-8	. . .	SCREW	5199	1
		. . .	SCREW	5199	8
174	AN960PD6	. . .	WASHER.	5199	8
175	BACS45A13	. . .	SEAL.	5199	8
177	BACS45A11	. . .	SEAL.	5199	4
177A	BACS45A11	. . .	SEAL.	5199	2
178	BACS45A27S	. . .	COVER	5199	1
		. . .	ATTACHING PARTS		
	BACS12CB3-8	. . .	SCREW	5199	4
	AN960PD10L	. . .	WASHER.	5199	4
178B	BACS45A27S	. . .	COVER	5199	1
		. . .	ATTACHING PARTS		
	BACS12CB3	. . .	SCREW	5199	4
	AN960PD10L	. . .	WASHER.	5199	4
179	BACS45A4S	. . .	PLATE	5199	1
	65-22780-9	. . .	COVER INSTL, STATION 328 TO 360 WIRE.	5199	1
180	65-22780-12	. . .	COVER	5199	1
		. . .	ATTACHING PARTS		
181	NAS603-7P	. . .	SCREW	5199	2
182	NAS603-7P	. . .	SCREW	5199	1
183	NAS603-7P	. . .	SCREW	5199	1
184	NAS603-9P	. . .	SCREW	5199	2
185	NAS603-28P	. . .	SCREW	5199	1
186	NAS603-28P	. . .	SCREW	5199	1
187	NAS970-3	. . .	WASHER.	5199	1
188	AN960D10	. . .	WASHER.	5199	4
189	AN960D10	. . .	WASHER.	5199	1
190	AN960D10	. . .	WASHER.	5199	1
191	AN960PD10	. . .	WASHER.	5199	1
192	BACS18F125B	. . .	SPACER.	5199	1
193	BACS18F134B	. . .	SPACER.	5199	1
	66-11434	. . .	PROVISIONS INSTL, ATTITUDE WARNING SYSTEM WIRE. . .	5199	1
		. . .	ROUTING		
195	BAC6202A167	. . .	GROMMET	5199	1
196	MS35489-11	. . .	GROMMET	5199	1
197	65-24104-1	. . .	CONDUIT INSTL, STATION 312 WIRE (SEE 24-13, FIG. . .	5199	1
201	65-15558	. . .	3D) CLAMP INSTL, VERTICAL GYROS WIRE (BENDIX) (VARIABLE DWG:65-15558-5002)	5199	1
		. . .	ELECTRICAL POWER, (SEE 24-13, FIG. 26D)	5199	
		. . .	REQUIRED PLACARDS, (SEE 11-2, FIG. 135)	5199	
203	65-60484-2	. . .	CLAMP INSTL, SECTION 51 (SEE 24-13, FIG. 17B) . . .	5199	1
204	65-72913-1	. . .	SUPPORT INSTL, INS CONDUIT (SEE 24-13, FIG. 52D). .	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING
707
PARTS CATALOG (MAINTENANCE)

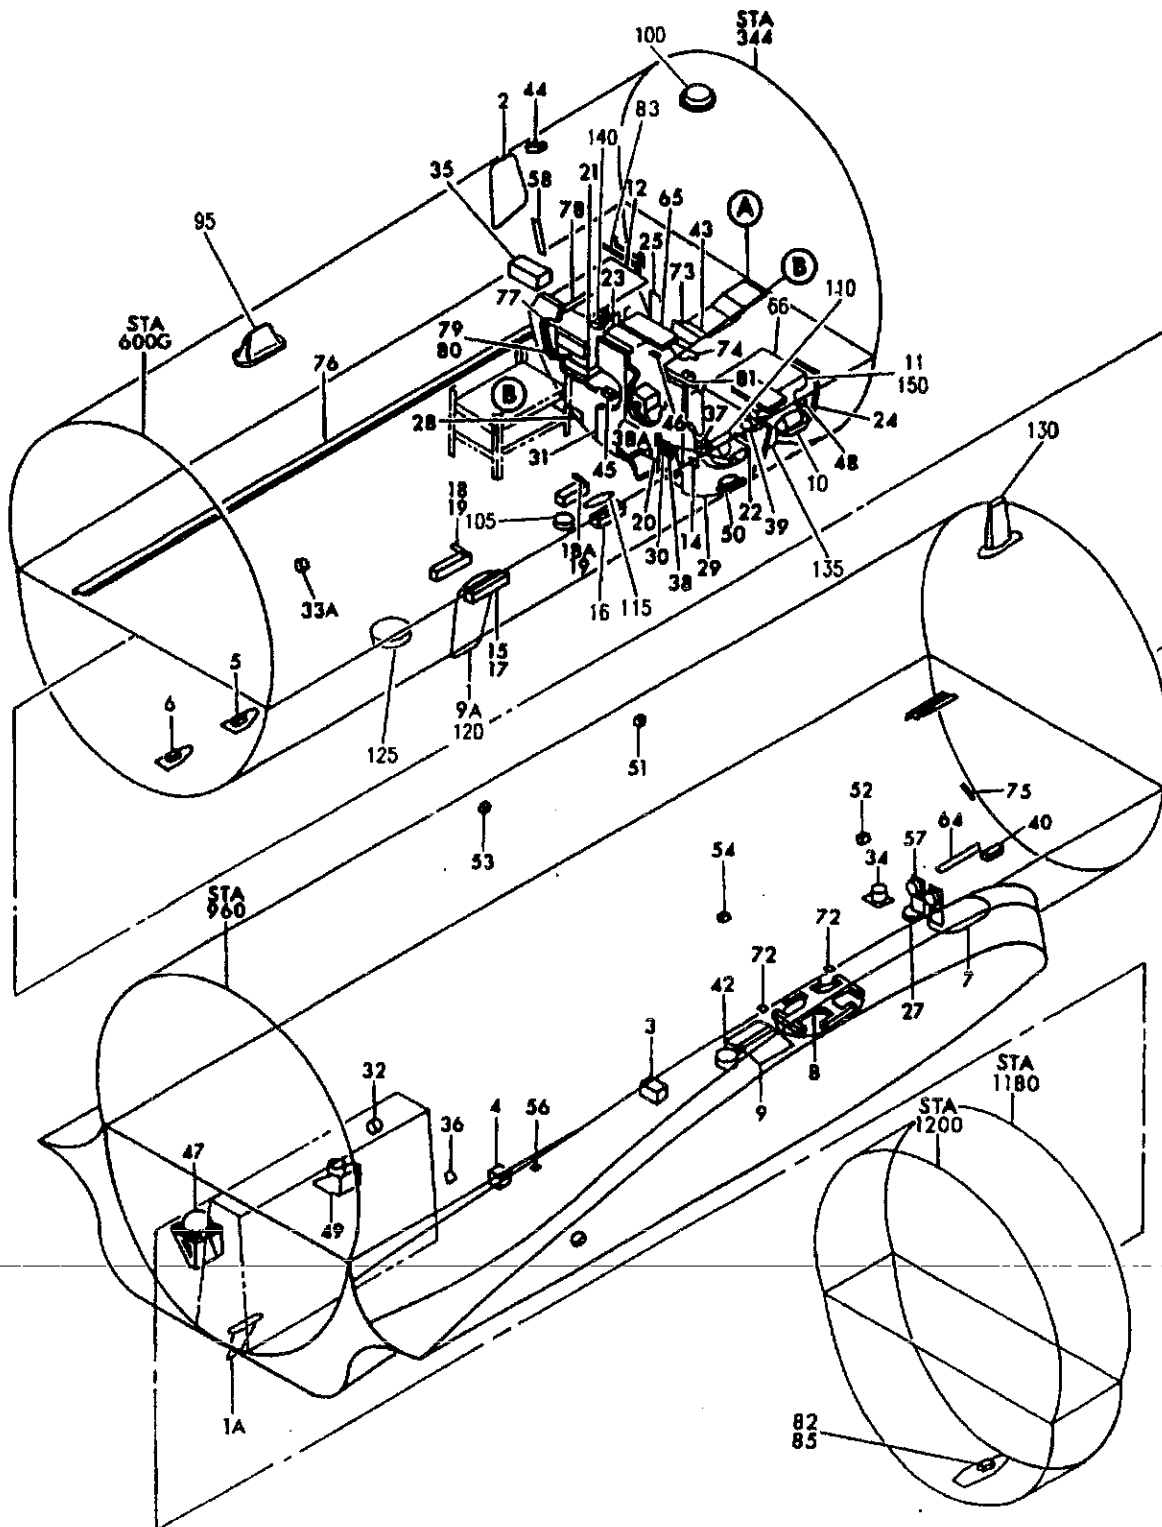

A 24030080 SHT 1 REV 272

FIGURE 6D. ELECTRONIC INSTL. SECTION 53 (SHEET 1)

DETAILED PARTS LIST
24-03-6D
PAGE 0

24-03-6D

NOV 21/01


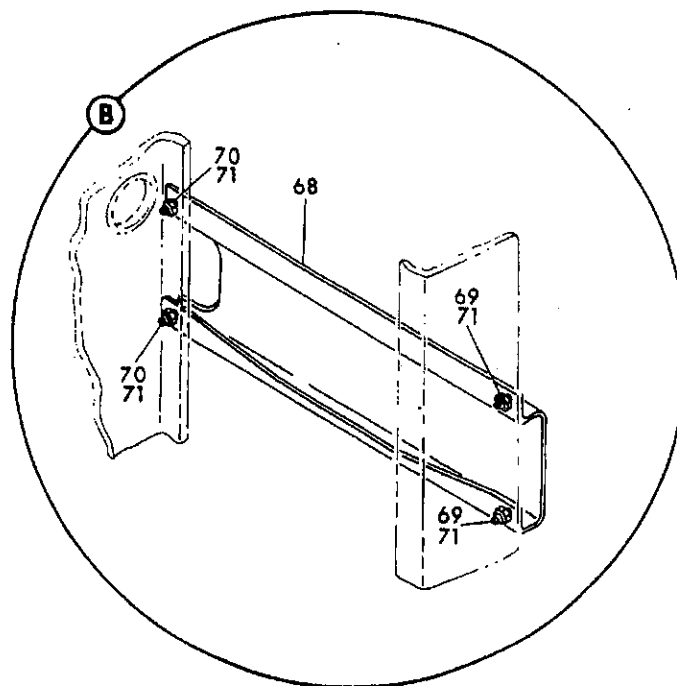


FIGURE 6D. ELECTRONIC INSTL, SECTION 53 (SHEET 2)

NOV 21/90

24-03-60

DETAILED PARTS LIST
24-03-60
PAGE 1

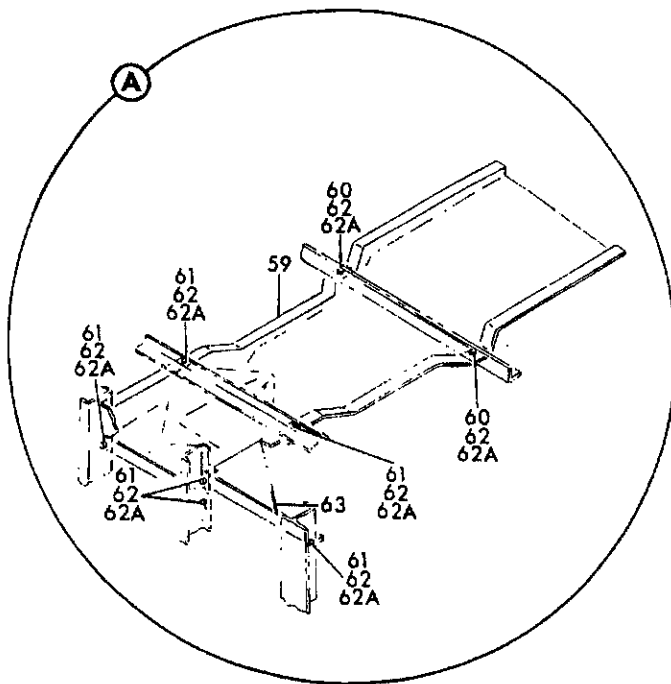

707

PARTS CATALOG (MAINTENANCE)

[illegible]

MISSING ITEM NUMBERS ARE NOT APPLICABLE

DETAILED PARTS LIST
24-03-6D
PAGE 2

24-03-60

RAF
NOV 21/01

BOEING

707

PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 6D 41	65-22255-1	. ANTENNA INSTL, STATION 550 L-BAND (DELETED BY RAF . . MOD 7211.019-4) (SEE 34-02, FIG. 4)	0150	1
R 42	65-15522	. ANTENNA INSTL, STATION 670 L-BAND (SEE 34-2, FIG. 6)	0150	1
43	69-12684	. SWITCH INSTL, HF SYSTEM RETURNING (SEE 23-4, FIG. 3)	0150	1
44	69-11763-3	. PANEL INSTL, PUBLIC ADDRESS SPEAKER SYSTEM TERMINAL . (SEE 23-2, FIG. 58)	0150	1
	BACMIOL101CJB	. MARKER-ALUMINUM FOIL, (INSTALLED ON ALL AMPHENOL 93 . SERIES CONNECTORS)	0150	100
48	65-58653-1	. OUTLET INSTL, RADIO TEST EQUIPMENT POWER (SEE 24-13, FIG. 45D)	0150	1
49	65-58594-1	. ACCELEROMETER INSTL, REMOTE (SEE 34-7, FIG. 13B) . .	0150	1
50	65-65179-1	. TRANSFORMER INSTL, STATION 367.75	0150	1
		. . ELECTRICAL POWER, (SEE 24-13, FIG. 120)	0150	
		. . REQUIRED PLACARDS, (SEE 11-1, FIG. 140)	0150	
51	65-60988-1	. CONNECTOR INSTL, STATION 690 ESCAPE HATCH HEATER. . .	0150	1
52	65-60988-2	. CONNECTOR INSTL, STATION 690 ESCAPE HATCH HEATER. . .	0150	1
53	65-60988-3	. CONNECTOR INSTL, STATION 770 ESCAPE HATCH HEATER. . .	0150	1
54	65-60988-4	. CONNECTOR INSTL, STATION 770 ESCAPE HATCH HEATER. . .	0150	1
	50-6853-4	. PROVISIONS INSTL, SECTION 53 WIRE	0150	1
56	65-1324	. . SUPPRT INSTL, KEEL BEAM WIRING (SEE 24-13, FIG. . . 51A)	0150	1
57	65-6486	. . SEAL INSTL, STATION 600K LOWER FRAME WIRING	0150	1
	65-22780-7	. . DISCONNECT (SEE 24-13, FIG. 36)		
59	65-22780-8	. . COVER INSTL, STATION 360 TO 400 WIRE.	0150	1
		. . COVER	0150	1
		ATTACHING PARTS		
60	NAS603-9P	. . SCREW	0150	2
61	NAS603-8P	. . SCREW	0150	6
62	AN960D10	. . WASHER.	0150	8
62A	NAS697A3	. . NUT	0150	8

63	BACG20ZB620	. . GROMMET	0150	1
	65-6562	. . COVER INSTL, FRONT SPAR BULKHEAD WIRE	0150	1
64	69-8796-1	. . COVER, STATION 600H TO 600J WIRE (LH)	0150	1
64	69-8796-2	. . COVER, STATION 600H TO 600J WIRE (RH)	0150	1
		ATTACHING PARTS		
	NAS603-6	. . SCREW	0150	5

65	65-19804-1	. . RACEWAY INSTL, STATION 360 TO 380 WIRING (LH) (SEE 24-13, FIG. 21)	0150	1
66	65-19804-2	. . RACEWAY INSTL, STATION 360 TO 380 WIRING (RH) (SEE 24-13, FIG. 22)	0150	1
	65-5973-1	. . COVER INSTL, COAXIAL CABLE (LH)	0150	1
68	69-4394-7	. . COVER, (LH ONLY).	0150	1
		(OPTIONAL 69-4394-3)		
68	69-4394-3	. . COVER, (LH ONLY).	0150	1
		(OPTIONAL TO 69-4394-7)		
		ATTACHING PARTS		
69	NAS603-8P	. . SCREW	0150	2
70	NAS603-10P	. . SCREW	0150	2
71	NAS679A3W	. . NUT	0150	4


72	7446	. . SEAL, ADF LOOP ANTENNA CONNECTOR (V92199)	0150	2
74	65-51807-1	. . DISCONNECT INSTL, RJ13 FLIGHT INSTRUMENT PANEL (SEE 24-13, FIG. 33A)	0150	1
76	65-34736-1	. . RACEWAY INSTL, CARGO COMPARTMENT ELECTRONIC WIRE. . (SEE 24-13, FIG. 24A)	0150	1
77	65-51390-1	. . DISCONNECT INSTL, STATION 400 RJ11 PANEL (SEE . . . 24-13, FIG. 33B)	0150	1
R 391-00-00-74286-001		. ANTENNA INSTL, (VZ0031) (ADDED BY RAF MOD 7211.019-4) (SEE 53-01, FIG. 2, ITEM 95)	0450	1
R 391-00-00-74286-003		. ANTENNA INSTL, (VZ0031) (ADDED BY RAF MOD 7211.019-4) (SEE 53-01, FIG. 2, ITEM 95)	0303	1
R 391-00-00-74286-005		. ANTENNA INSTL, (VZ0031) (ADDED BY RAF MOD 7211.019-4) (SEE 53-01, FIG. 2, ITEM 95)	0102	1
R 95	391-34-50-73992-001	. ANTENNA INSTL, IFF TRANSPONDER NO. 1 AND NO. 2 UPPER STA 536 (VZ0031) (ADDED BY RAF MOD 7211.019-4)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/01

24-03-60

DETAILED PARTS LIST
24-03-60
PAGE 3




PARTS CATALOG (MAINTENANCE)

DETAILED PARTS LIST
24-03-6D
PAGE 4

24-03-60

RAF
NOV 21/01

BOEING
707
PARTS CATALOG (MAINTENANCE)

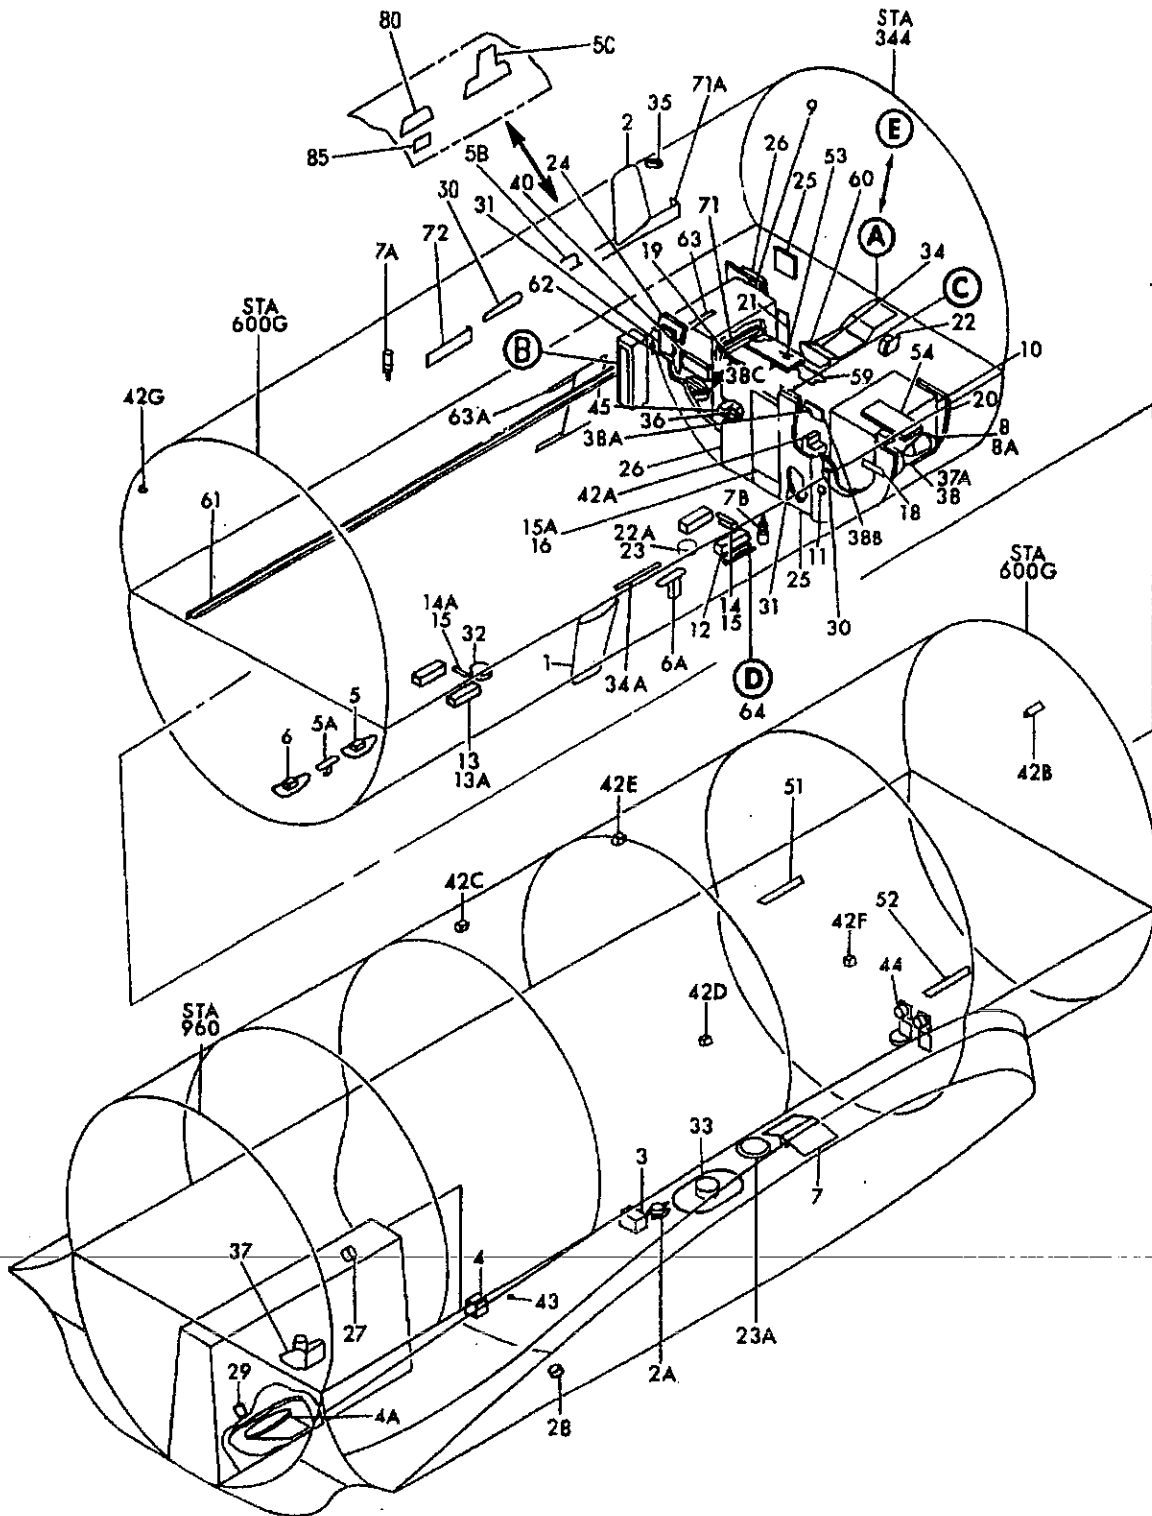

A 2403005F SH 1 REV 272

FIGURE 6F, ELECTRONIC INSTL, SECTION 53 (SHEET 1)

DETAILED PARTS LIST
24-03-6F
PAGE 0

24-03-6F

NOV 21/01

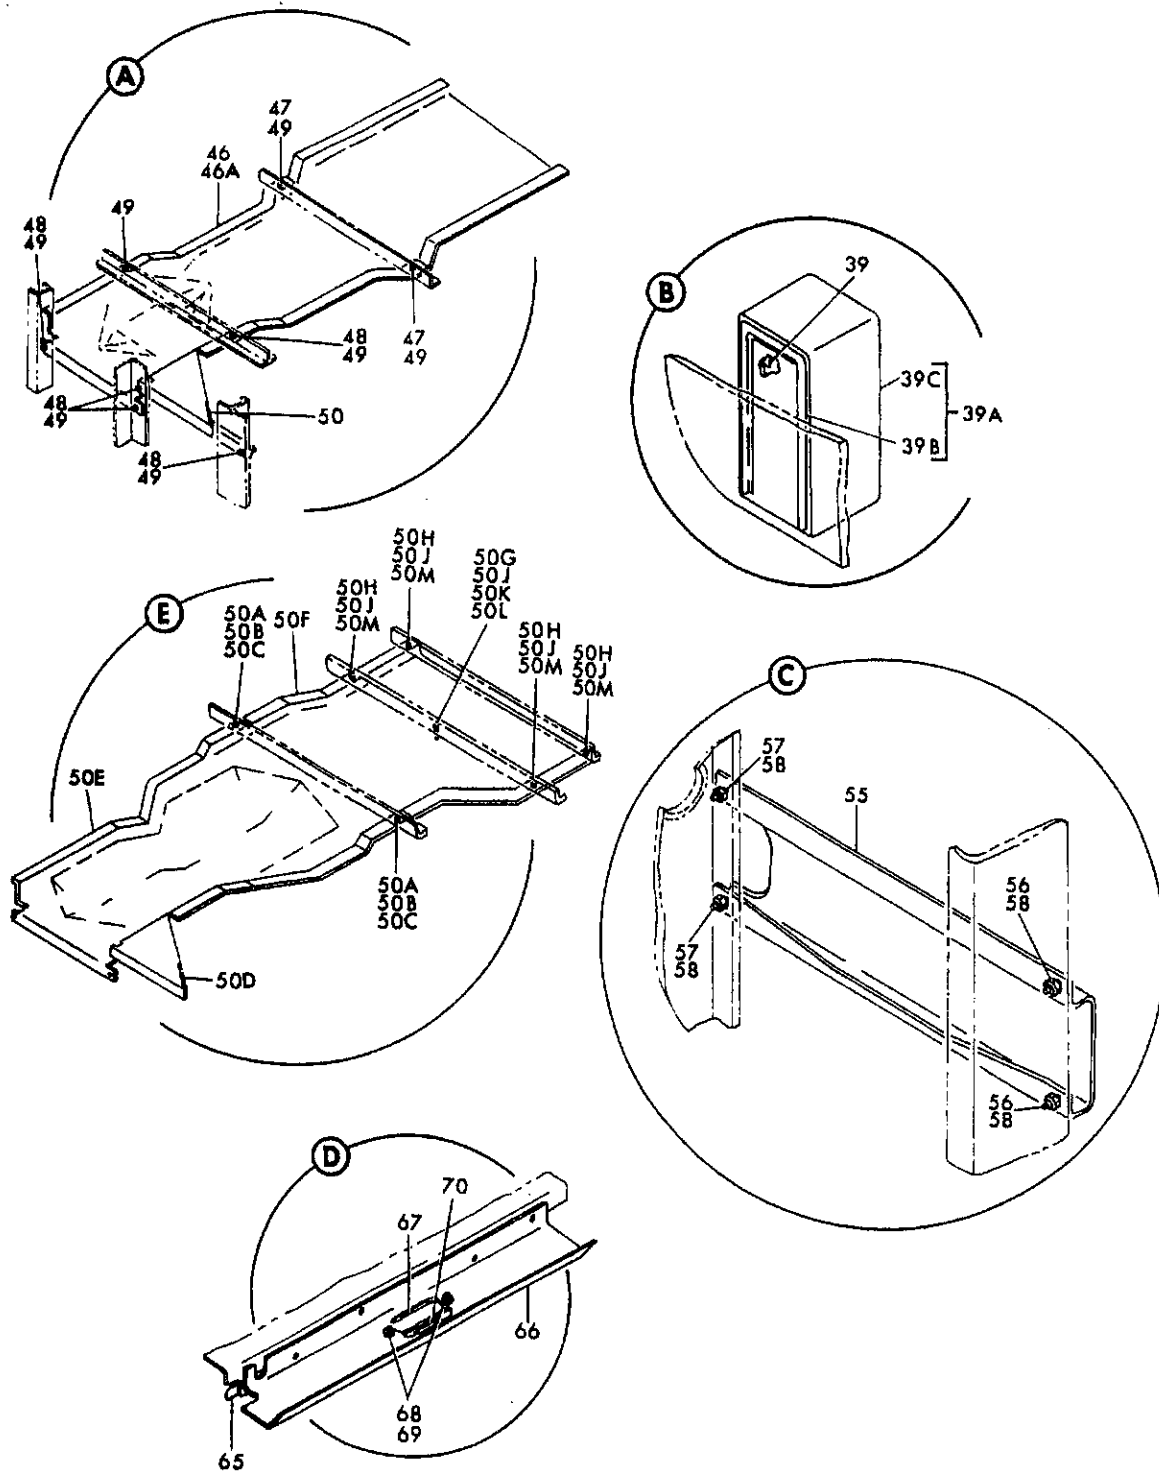


FIGURE 6F. ELECTRONIC INSTL. SECTION 53 (SHEET 2)

NOV 21/90

24-03-6F

DETAILED PARTS LIST
24-03-6F
PAGE 1


BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
6F	50-6853	ELECTRONIC INSTL, SECTION 53 (VARIABLE. DWG;50-6853-5020) (SEE 53-1, FIG. 2, ITEM 10)							5199	RF
1	50-10836	. ANTENNA INSTL, STATION 490 LOWER VHF COMMUNICATION. . . (VARIABLE DWG;50-10836-5003) (SEE 23-1, FIG. 1)							5199	1
1A	65C35214-1	. ANTENNA INSTL, STATION 430 UPPER TCAS (ADDED BY . . . SB 3481) (SEE 34-2, FIG. 11A)							5199	1
2	50-10837	. ANTENNA INSTL, STATION 470 UPPER VHF COMMUNICATION. . . (VARIABLE DWG;50-10839-5002) (SEE 34-2, FIG. 25 AND 25B)							5199	1
3	50-10839	. COUPLER INSTL, STATION 720 ADF SENSE ANTENNA. (VARIABLE DWG;50-10839-5001) (SEE 34-2, FIG. 25 AND 25B)							5199	1
4	50-10839-1	. COUPLER INSTL, STATION 820 ADF SENSE ANTENNA. (VARIABLE DWG;50-10839-5002) (SEE 34-2, FIG. 25 AND 25B)							5199	1
5	65-26461-1	. ANTENNA INSTL, STATION 600D ADF LOOP (SEE 34-2, FIG. 9)							5199	1
5B	65C35214-3	. ANTENNA INSTL, STATION 550 UPPER S MODE (ADDED BY . . SB 3481) (SEE 34-2, FIG. 11A)							5199	1
6	65-26461-2	. ANTENNA INSTL, STATION 600F ADF LOOP (SEE 34-2, FIG. 9)							5199	1
7	65-5320-3	. ANTENNA INSTL, STATION 650 MARKER BEACON (SEE 34-2, . FIG. 12)							5199	1
8	50-11324	. BLOWER INSTL, EQUIPMENT COOLING AIR (SEE 25-19, FIG. 10)							5199	1
	65-1343-92	. EQUIPMENT INSTL, ELECTRONIC RACK (VARIABLE. DWG;65-1343-5016)							5199	1
9	65-1343-205	. . . EQUIPMENT INSTL, LH							5199	1
		. . . AUTOPILOT, (SEE 22-1, FIG. 14C)							5199	
		. . . COMMUNICATIONS, (SEE 23-5, FIG. 14G, 24A, 24B, . . 26, 26A AND 26C)							5199	
		. . . NAVIGATION, (SEE 34-8, FIG. 13J, 28, 28A, 28C, . . 28D, 28E, 28F, 28G AND 36)							5199	
		. . . PNEUMATIC, (SEE 36-4, FIG. 1)							5199	
10	65-1345-206	. . EQUIPMENT INSTL, RH RADIO RACK (SEE 34-8, FIG. 28A)							5199	1
		. . . NAVIGATION, (SEE 34-8, FIG. 28A, 28C, 28D, 28E. . AND 36)							5199	
11	65-25307-1	. SCOTCH-CAL INSTL, RJ11 AND RJ14 (SEE 11-2, FIG. 20)							5199	1
15A	65-8393	. DOOR INSTL, STATION 400 (VARIABLE DWG;65-8393-5001) . (SEE 24-13, FIG. 103)							5199	1
17	65-6814-1	. STANCHION INSTL, RACK SUPPORT (SEE 24-9, FIG. 108). .							5199	1
18	65-6814-2	. STANCHION INSTL, RACK SUPPORT (SEE 24-9, FIG. 108). .							5199	1
19	65-2152-47	. SHELF INSTL, RACK (VARIABLE DWG;65-2152-5015) (SEE. . 24-9, FIG. 10)							5199	1
20	65-69498-1	. DUCT INSTL, EQUIPMENT COOLING AIR (SEE 25-19, FIG. 4)							5199	1
23	65-4179	. ANTENNA INSTL, STATION 430 L-BAND (SEE 34-2, FIG. 11)							5199	1
23A	65-8937	. ANTENNA INSTL, STATION 600L P 10 L-BAND (SEE 34-2, . . FIG. 5)							5199	1
24	64-1051	. SHIELD INSTL, STATION 400 WIRE TERMINAL (VARIABLE . . DWG;64-1051-5002) (SEE 24-13, FIG. 73B)							5199	1
25	65-19439-79	. COMPONENT INSTL, STATION 400 RJ 13 FLIGHT INSTRUMENT (SEE 24-13, FIG. 86F)							5199	1
26	65-19418-68	. SHIELD INSTL, RJ12 ELECTRONIC TERMINAL (SEE 24-13, . . FIG. 81Q)							5199	1
27	66-8964-1	. JACK INSTL, WHEEL WELL INTERPHONE (LH) (SEE 23-2, . . FIG. 45)							5199	1
28	66-8964-2	. JACK INSTL, WHEEL WELL INTERPHONE (RH) (SEE 23-2, . . FIG. 45)							5199	1
29	65-37066	. STRAP INSTL, ANTENNA DOOR (SEE 34-2, FIG. 28)							5199	1
30	65-11624	. AMPLIFIER INSTL, SERVICE INTERPHONE (SEE 23-2, FIG. . 158)							5199	1
	65-17000-4	. BUNDLE INSTL, ELECTRICAL AND ELECTRONIC (SEE. APPLICABLE CHAPTER FOR ELECTRICAL BUNDLE ASSEMBLIES)							5199	1
31	65-22914-64	. RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD . . (SEE 24-13, FIG. 83F, 323A, 324A, 325A AND 326A)							5199	1
32	65-22255-1	. ANTENNA INSTL, STATION 550 L-BAND (SEE 34-2, FIG. 4)							5199	1
33	65-15522	. ANTENNA INSTL, STATION 670 L-BAND (SEE 34-2, FIG. 6)							5199	1
35	69-11763-3	. PANEL INSTL, PUBLIC ADDRESS SPEAKER SYSTEM TERMINAL . (SEE 23-2, FIG. 5B)							5199	1
	BACMIOL101CJB	. MARKER-ALUMINUM FOIL, (INSTALLED ON ALL AMPHENOL 93 . SERIES CONNECTORS)							5199	100
37	65-58594-1	. ACCELEROMETER INSTL, REMOTE (SEE 34-7, FIG. 138). . .							5199	1
38	65-65179-1	. TRANSFORMER INSTL, STATION 367.75							5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
6F		1 2 3 4 5 6 7		
38B	65-22457-4	. . ELECTRICAL POWER, (SEE 24-13, FIG. 120)	5199	
		. . REQUIRED PLACARDS, (SEE 11-1, FIG. 140)	5199	
42C	50-6853-4	. SHIELD INSTL, STATION 400 FLIGHT INSTRUMENT AUXILIARY	5199	1
	65-60988-1	TERMINALS (SEE 24-13, FIG. 96)		
42D	65-60988-2	. PROVISIONS INSTL, SECTION 59 WIRE	5199	1
42E	65-60988-3	. . CONNECTOR INSTL, STATION 690 ESCAPE HATCH HEATER. .	5199	1
		BLANKET (LH) (SEE 52-4, FIG. 38)		
42F	65-60988-4	. . CONNECTOR INSTL, STATION 690 ESCAPE HATCH HEATER. .	5199	1
		BLANKET (RH) (SEE 52-4, FIG. 38)		
43	65-1324	. . CONNECTOR INSTL, STATION 770 ESCAPE HATCH HEATER. .	5199	1
		BLANKET (LH) (SEE 52-4, FIG. 38)		
44	65-6486	. . CONNECTOR INSTL, STATION 770 ESCAPE HATCH HEATER. .	5199	1
		BLANKET (RH) (SEE 52-4, FIG. 38)		
	65-22780-14	. . SUPPORT INSTL, KEEL BEAM WIRING (VARIABLE	5199	1
46A	65-22780-15	DWG; 65-1324-5001) (SEE 24-13, FIG. 51A)		
47	NAS603-9P	. . SEAL INSTL, STATION 600K LOWER FRAME WIRING	5199	1
48	NAS603-8P	DISCONNECT (VARIABLE DWG; 65-6486-5001) (SEE		
49	AN960D10	24-13, FIG. 36)		
		. . COVER INSTL, STATION 360 TO 400 WIRE.	5199	1
		. . COVER, STATION 360 TO 400	5199	1
		ATTACHING PARTS		
		. . . SCREW	5199	2
		. . . SCREW	5199	6
		. . . WASHER.	5199	8
		-----*		
50	BAC620ZB620	. . . GROMMET	5199	1
	65-6562	. . COVER INSTL, FRONT SPAR BULKHEAD WIRE	5199	1
51	69-8796-1	. . . COVER, STATION 600H TO 600J (LH).	5199	1
52	69-8796-2	. . . COVER, STATION 600H TO 600J (RH).	5199	1
		ATTACHING PARTS		
	NAS603-6	. . . SCREW	5199	5
		-----*		
53	65-19804-1	. . RACEWAY INSTL, STATION 360 TO 380 WIRING (LH) (SEE	5199	1
		24-13, FIG. 21)		
54	65-19804-2	. . RACEWAY INSTL, STATION 360 TO 380 WIRING (RH) (SEE	5199	1
		24-13, FIG. 22)		
	65-5973-1	. . COVER INSTL, COAXIAL CABLE (LH)	5199	1
55	69-4394-7	. . . COVER, (LH ONLY).	5199	1
		(OPTIONAL 69-4394-3)		
55	69-4394-3	. . . COVER, (LH ONLY).	5199	1
		(OPTIONAL TO 69-4394-7)		
		ATTACHING PARTS		
56	NAS603-8P	. . . SCREW	5199	2
57	NAS603-10P	. . . SCREW	5199	2
58	NAS679A3W	. . . NUT	5199	4
		-----*		
60	65-70766-2	. . DISCONNECT INSTL, RJ13 FLIGHT INSTRUMENT PANEL (SEE	5199	1
		24-13, FIG. 33C)		
61	65-34736-1	. . RACEWAY INSTL, CARGO COMPARTMENT WIRE (SEE 24-13, .	5199	1
		FIG. 24A)		
62	65-51390-1	. . DISCONNECT INSTL, STATION 400 RJ11 PANEL (SEE . . .	5199	1
		24-13, FIG. 33B)		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

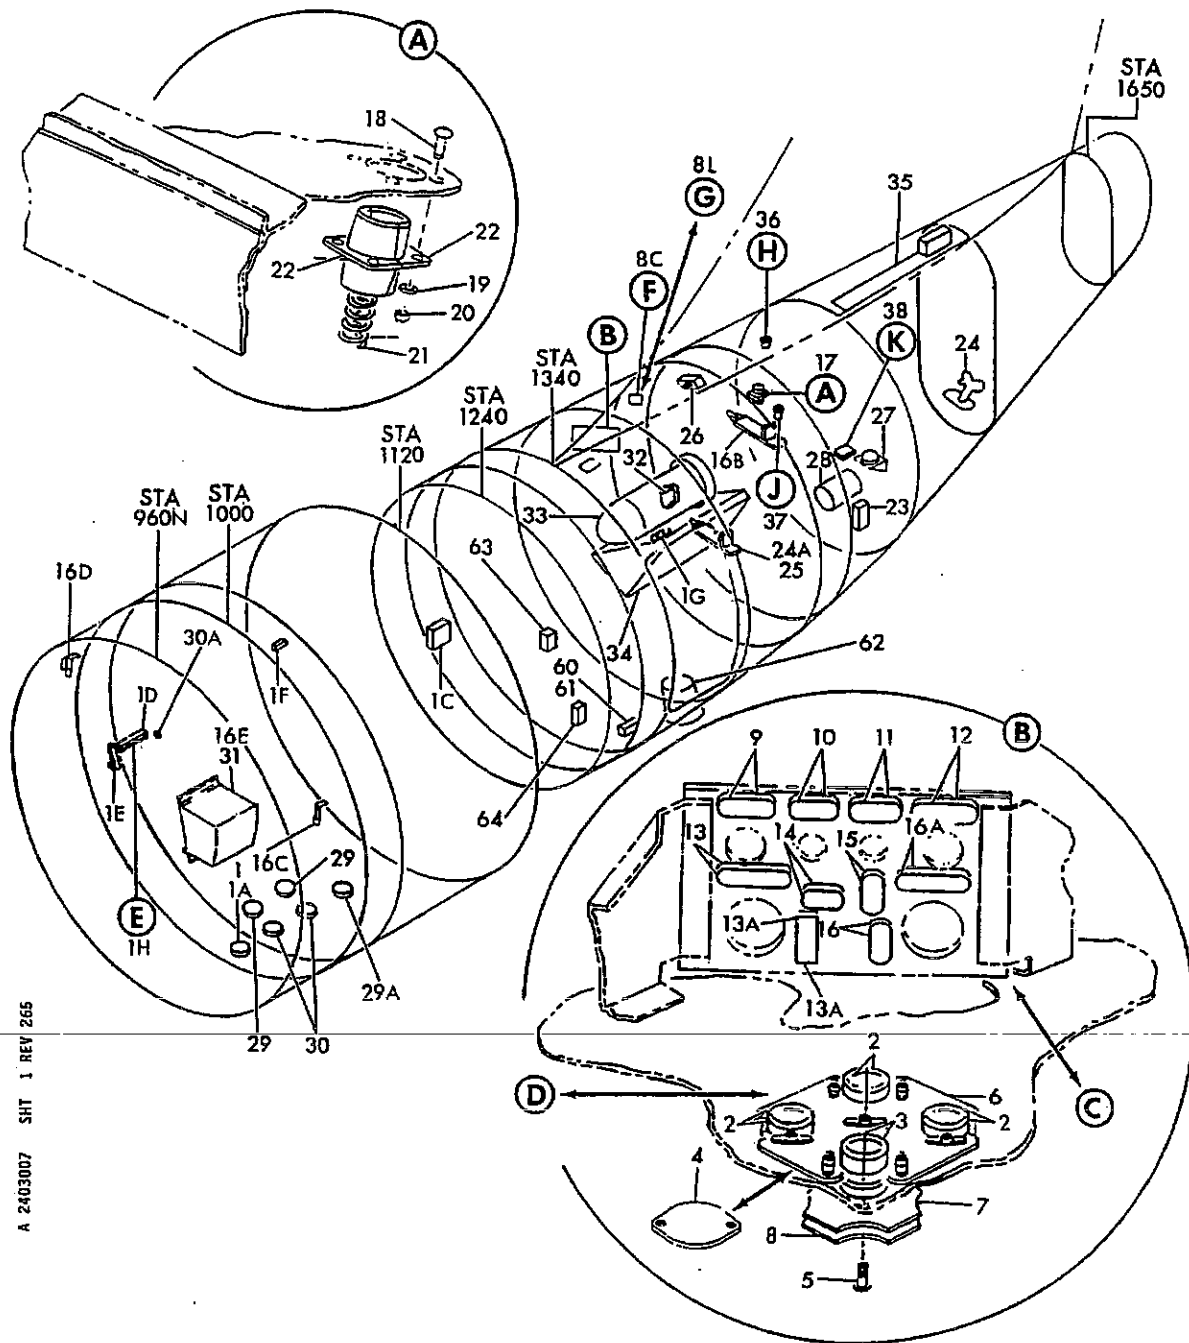

A 2403007 SHT 1 REV 265

FIGURE 7. ELECTRONIC INSTL. SECTIONS 56 AND 5B (SHEET 1)

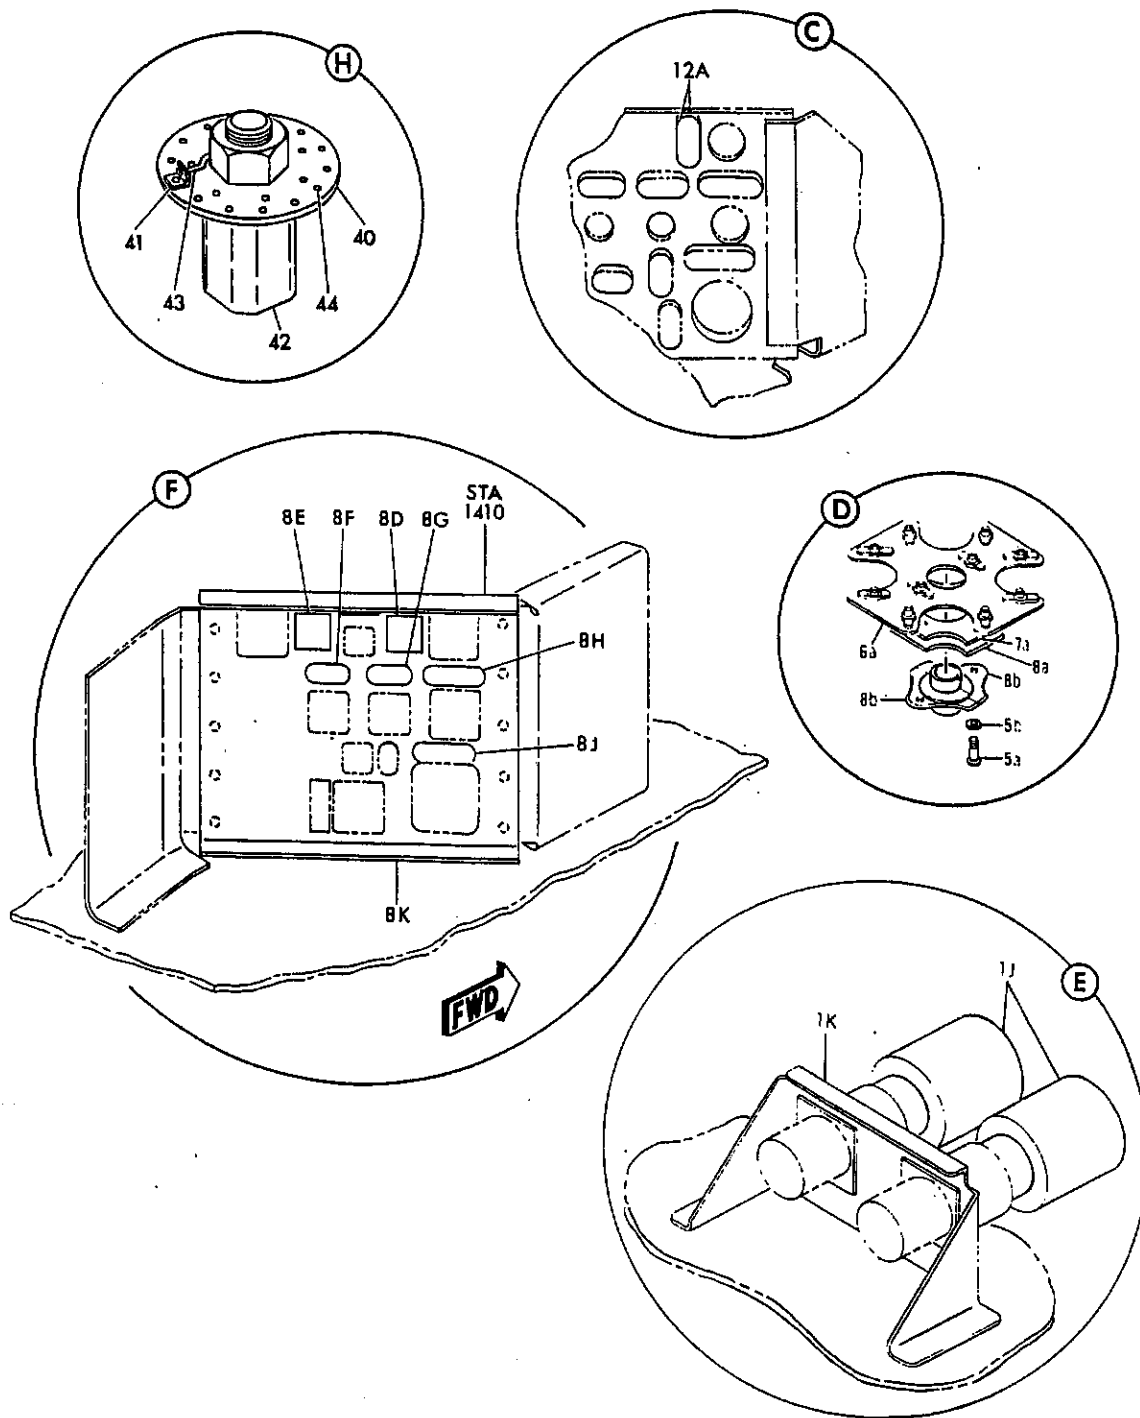


FIGURE 7. ELECTRONIC INSTL, SECTIONS 56 AND 58 (SHEET 2)

NOV 21/90

24-03-7

DETAILED PARTS LIST
24-03-7
PAGE 1

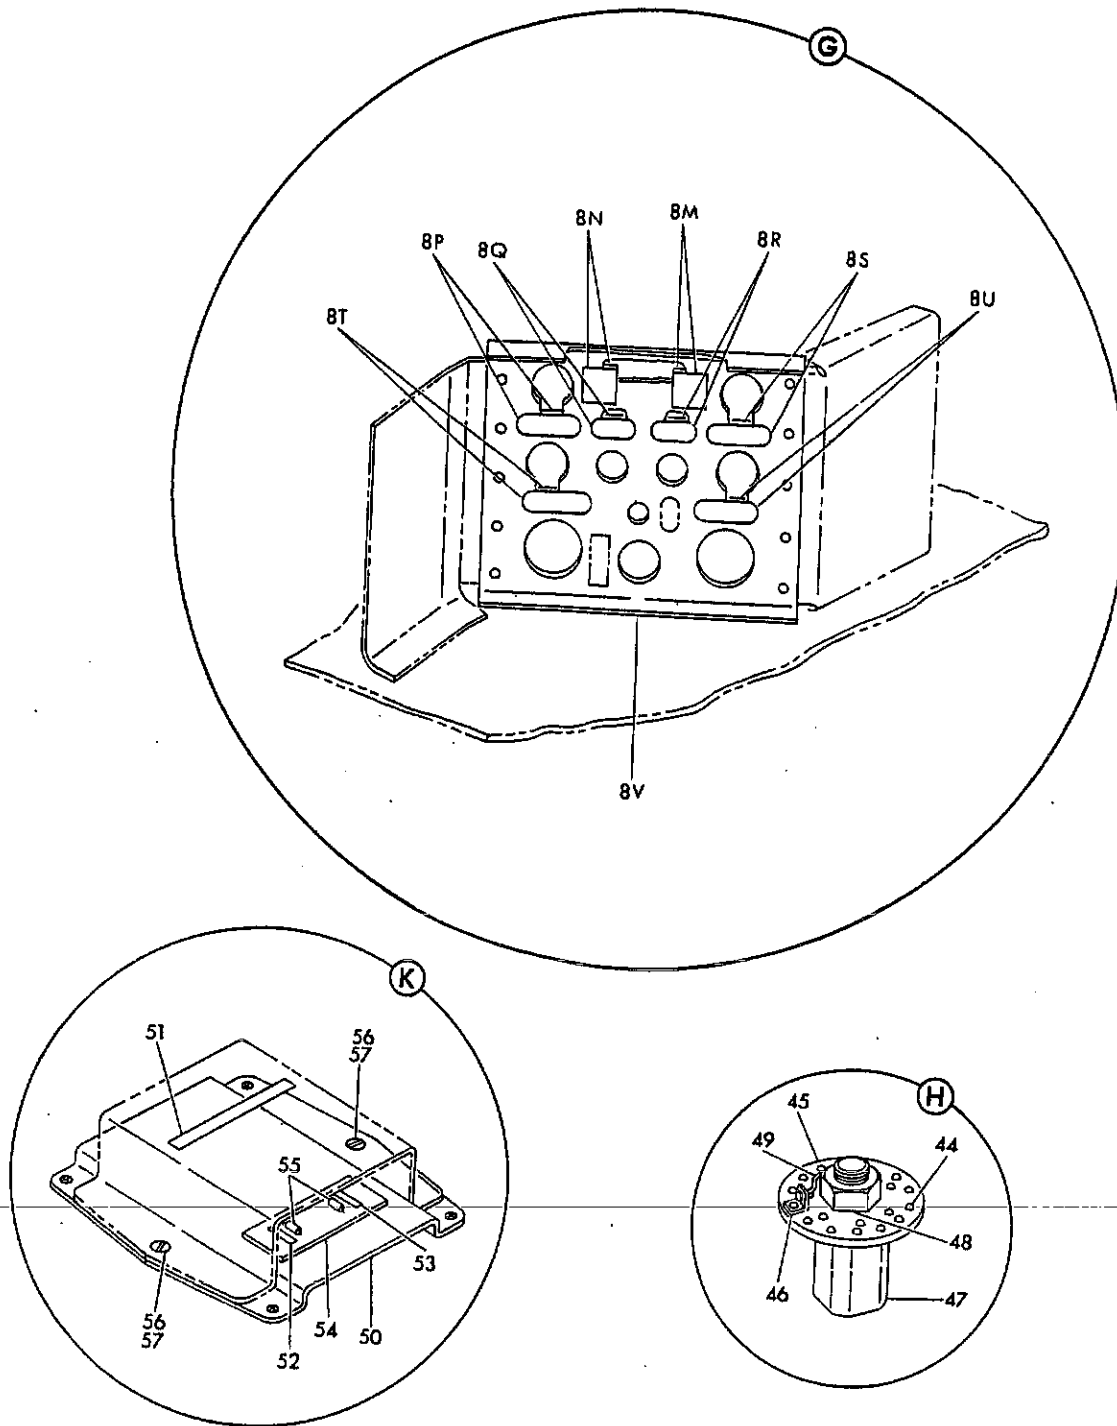


FIGURE 7. ELECTRONIC INSTL, SECTION 56 AND 58 (SHEET 3)





PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
7	50-6856		ELECTRONIC INSTL, SECTIONS 56 AND 58.		RF
			. ELECTRONIC INSTL, SECTION 56 (SEE 53-1, FIG. 3, . . . ITEM 5)		
1	65-39750-6		. . ANTENNA INSTL, LOW RANGE RADIO ALTIMETER (SEE 34-2, FIG. 9A)	0150	1
1	65-39750-6		. . ANTENNA INSTL, LOW RANGE RADIO ALTIMETER (VARIABLE DWG:65-39750-5009) (SEE 34-2, FIG. 9A)	5299	1
1	65-39750-9		. . ANTENNA INSTL, LOW RANGE RADIO ALTIMETER (VARIABLE DWG:65-39750-5003) (SEE 34-2, FIG. 9B)	5151	1
1D	65-36741-3		. . RACK INSTL, LOW RANGE RADIO ALTIMETER UNIT.	0150	1
1D	65-36741-13		. . RACK INSTL, LOW RANGE RADIO ALTIMETER UNIT.	5199	1
			. . NAVIGATION, (SEE 34-10, FIG. 2A).		
			. . REQUIRED PLACARDS, (SEE 11-2, FIG. 170)		
1E	65-38591-4		. . RACEWAY INSTL, LOW RANGE RADIO ALTIMETER COAXIAL. CABLES (SEE 34-10, FIG. 2A)		1
1H	65-36741-10		. . BRACKET INSTL, LOW RANGE RADIO ALTIMETER UNIT . . .	0150	1
1J	ARINC552		. . . BOX, TRIP TRIM (V81205) (CUSTOMER FURNISHED). . .	0150	2
1K	69-41989-1		. . BRACKET, DISCONNECT	0150	1
	65-1632		. . SEAL INSTL, FIN TO BODY DISCONNECT WIRING	0150	1
	65-1632		. . SEAL INSTL, FIN TO BODY DISCONNECT WIRING (VARIABLE DWG:65-1632-5001)	5199	1
2	BACS45A13		. . FITTING		6
	NAS601-BP		. . ATTACHING PARTS		6
	AN960-6		. . SCREW		6
			. . WASHER.		6
4	BACS45A26		. . PLATE		1
	NAS601-BP		. . ATTACHING PARTS		2
	AN960-6		. . SCREW		2
			. . WASHER.		2
5	NAS601-6P		. . SCREW		1
5A	NAS601-8		. . SCREW		2
6	BACS45A4		. . PLATE	5199	1
6A	65-1632-3		. . PLATE, (ALTERED FROM BACS45A4).		1
7	BACS45A7		. . FILLER.	5199	1
7A	65-1632-4		. . FILLER, (ALTERED FROM BACS45A7)		1
8	BACS45A8		. . FILLER.	5199	1
8A	65-1632-6		. . FILLER, (ALTERED FROM BACS45A8)		1
8B	65-1632-5		. . SEAL, FITTING HALF (ALTERED FROM BACS45A12) . . .		2
9	BACM10D10-12BBG		. . MARKER, HF COMM NO. 2 ALUMINUM FOIL		2
10	BACM10D10-12BBH		. . MARKER, VOR NO. 1 ALUMINUM FOIL		2
11	BACM10D10-12BBJ		. . MARKER, VOR NO. 2 ALUMINUM FOIL		2
12	BACM10D10-12BBF		. . MARKER, HF COMM NO. 1 ALUMINUM FOIL		2
13	BACM10L10-1BJU		. . MARKER, HF TUNER NO. 2 ALUMINUM FOIL.		2
15	BACM10D00-12BBK		. . MARKER, LORAN ALUMINUM FOIL		2
16A	BACM10L10-1BJT		. . MARKER, HF TUNER NO. 1 ALUMINUM FOIL.		2
16B	65-46627-1		. . SHELF INSTL, STATION 1440 VOICE RECORDER.	0250	1
			. . COMMUNICATIONS, (SEE 23-4, FIG. 45)	0250	
			. . REQUIRED PLACARDS, (SEE 11-2, FIG. 167)	0250	
	50-6856-1		. ELECTRONIC INSTL, SECTION 58 (SEE 53-1, FIG. 4, ITEM 10)		RF
17	69-5775		. . SEAL INSTL, STATION 1440 ELECTRONIC WIRE.		1
18	NAS601-7		. . SCREW		4
19	AN960PD6L		. . WASHER.		4
20	BACN10BY506		. . NUT		4
21	BACS45A20		. . SPACER.		1
22	BACS45A14		. . FITTING		2
23	69-2875		. . JACK INSTL, LIGHT SWITCH AND INTERPHONE (SEE 23-2, FIG. 43)		1
24	69-2394-1		. . JACK INSTL, TAIL CONE INTERPHONE (SEE 23-2, FIG. . 43)		1
26	65-45946-1		. . MODULATION UNIT INSTL, ELEVATOR SERVO TORQUE (SEE . 22-1, FIG. 35)		1
27	65-58789-1		. . RECORDER INSTL, FLIGHT (SEE 34-7, FIG. 15).	0150	1
28	65-61811-37		. . RECORDER INSTL, ARINC 542 FLIGHT (VARIABLE. DWG:65-61811-5004) (SEE 34-7, FIG. 17)	5199	1
	ALD97-60-12258-001		. TV AND VIDEO MONITOR SYSTEM INSTL, (VS2500) (ADDED. BY RAF 7211.019-225)	0150	RF
60	361-97-60-74210-005		. . ACCESS DOOR INSTL, (VS2500) (SEE 89-09, FIG. 3, . . ITEM 7)	0150	1
61	361-97-60-74210-003		. . CCU-1432 INSTL, (VS2500) (SEE 89-09, FIG. 3).	0150	1
62	361-97-60-74211-001		. . TANKER VIDEO SYSTEM ASSY, (VS2500) (SEE 89-09, . . FIG. 4)	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

R
R
R
R
R
R

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R R R R R R	7	. PASSENGER INTERCOM SYSTEM INSTL, (VS2500) (ADDED. . . BY RAF 7211.019-225)							0150	RF
	63	. . INTERCOM BOX INSTL, (VS2500) (SEE 23-02, FIG. 56A)							0150	1
	64	. . INTERCOM UNITS INSTL, L.H. (VS2500) (SEE 23-02, . . FIG. 57A)							0150	1
	64	. . INTERCOM UNITS INSTL, R.H. (VS2500) (SEE 23-02, . . FIG. 57A)							0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

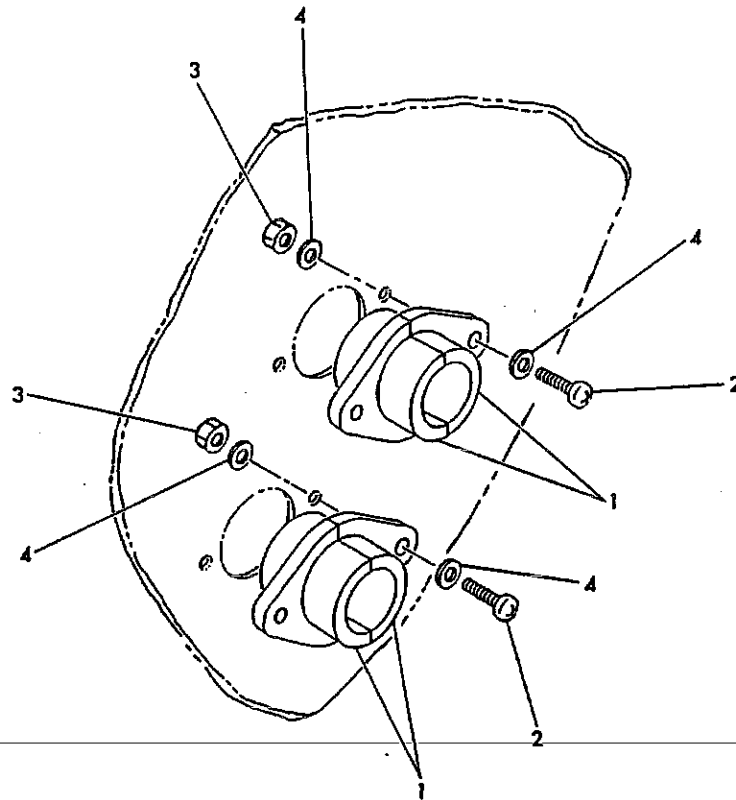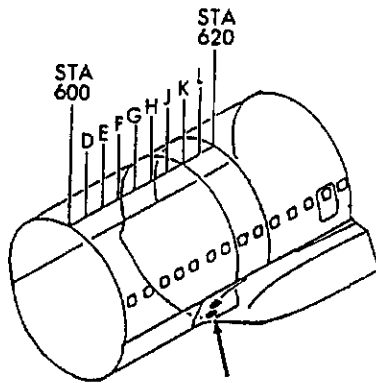

A 2403011A REV 265

FIGURE 11A. SEAL INSTL, ELECTRICAL WIRING STR 22



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R R R R	11A	391-89-90-72331-029	SEAL INSTL, ELECTRICAL WIRING STR 22 (L.H. ONLY). . . . (VS2500) (ADDED BY RAF 7211.019-225) (SEE FIG. 2, ITEM 179)							0150	RF
		391-89-90-72331-030	SEAL INSTL, ELECTRICAL WIRING STR 22 (R.H. ONLY). . . . (VS2500) (ADDED BY RAF 7211.019-225) (SEE FIG. 2, ITEM 179)							0150	RF
	1	BACS45A-13	. SEAL FITTING, HALF. ATTACHING PARTS							0150	4
	2	NAS603-B	. SCREW							0150	4
	3	NAS509-3	. NUT							0150	2
	4	AN960-JD10L	. WASHER. -----*							0150	8
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 04
MAIN AC POWER SHIELD

RAF
NOV 21/90

24-04
PAGE 1

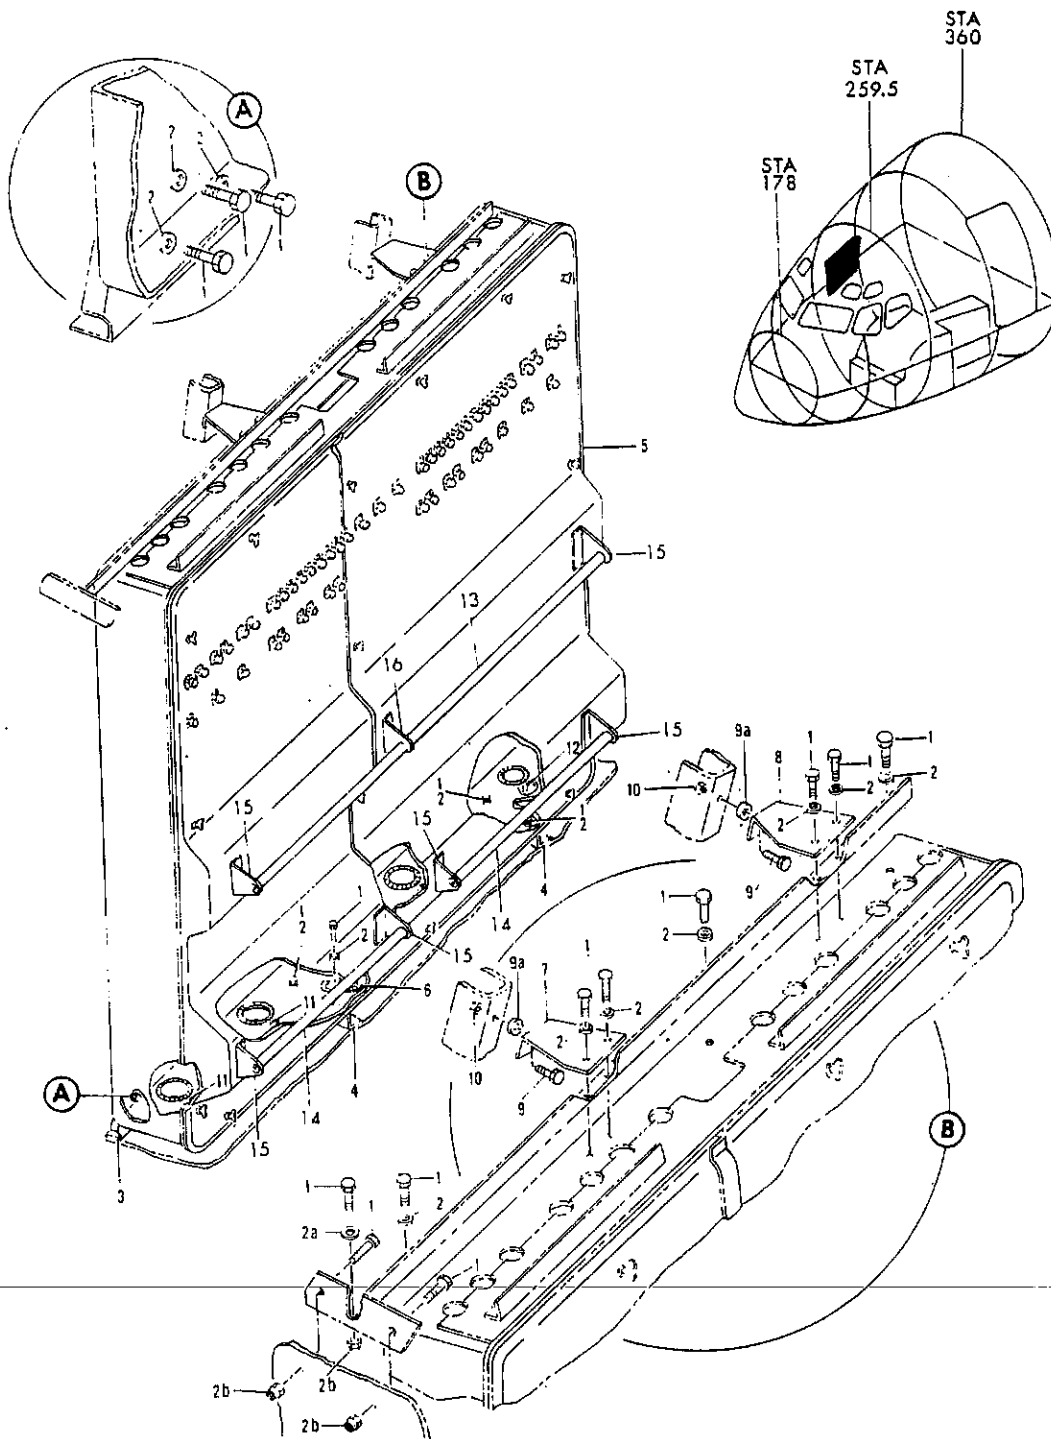


FIGURE 1. SHIELD INSTL. J6 MAIN AC POWER

DETAILED PARTS LIST
24-04-1
PAGE 0

24-04-1

NOV 21/90

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
R R R R R R R R R R R R	1 50-8224	SHIELD INSTL, J6 MAIN AC POWER (SEE 24-3, FIG. 1A, ITEM 2, 24-3, FIG. 1B, ITEM 2 AND 24-3, FIG. 1C, ITEM 2)	0150	RF
	50-8224	SHIELD INSTL, J6 MAIN AC POWER (VARIABLE. DWG;50-8224-5003) (SEE 24-3, FIG. 1C, ITEM 2)	5199	RF
	1 AN3-4A	. BOLT.		17
	2 AN970-3	. WASHER.		14
	2A BACW10P205L	. WASHER.		1
	2B NAS679A3W	. NUT		3
	3 60-6919	. BRACKET ASSY, MAIN AC POWER SHIELD SUPPORT.		1
	4 30-3092	. BRACKET ASSY, MAIN AC POWER SHIELD SUPPORT.		2
	5 50-8224-54	. SHIELD ASSY, J6 MAIN AC POWER (SEE FIG. 9A)	0150	1
	5 50-8224-71	. SHIELD ASSY, J6 (SEE FIG. 9C)	5199	1
	6 BACG20ZC472	. GROMMET		1
	7 30-3082	. ANGLE, MAIN AC POWER SHIELD SUPPORT		1
	8 30-3083	. ANGLE, MAIN AC POWER SHIELD SUPPORT ATTACHING PARTS		1
	9 AN3-5A	. BOLT.		2
	9A BACW10P205L	. WASHER.		2
	10 NAS679A3W	. NUT		2
	11 BACG20AD950	. GROMMET, CATERPILLAR.		3
	12 BACG20AD640	. GROMMET, CATERPILLAR.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

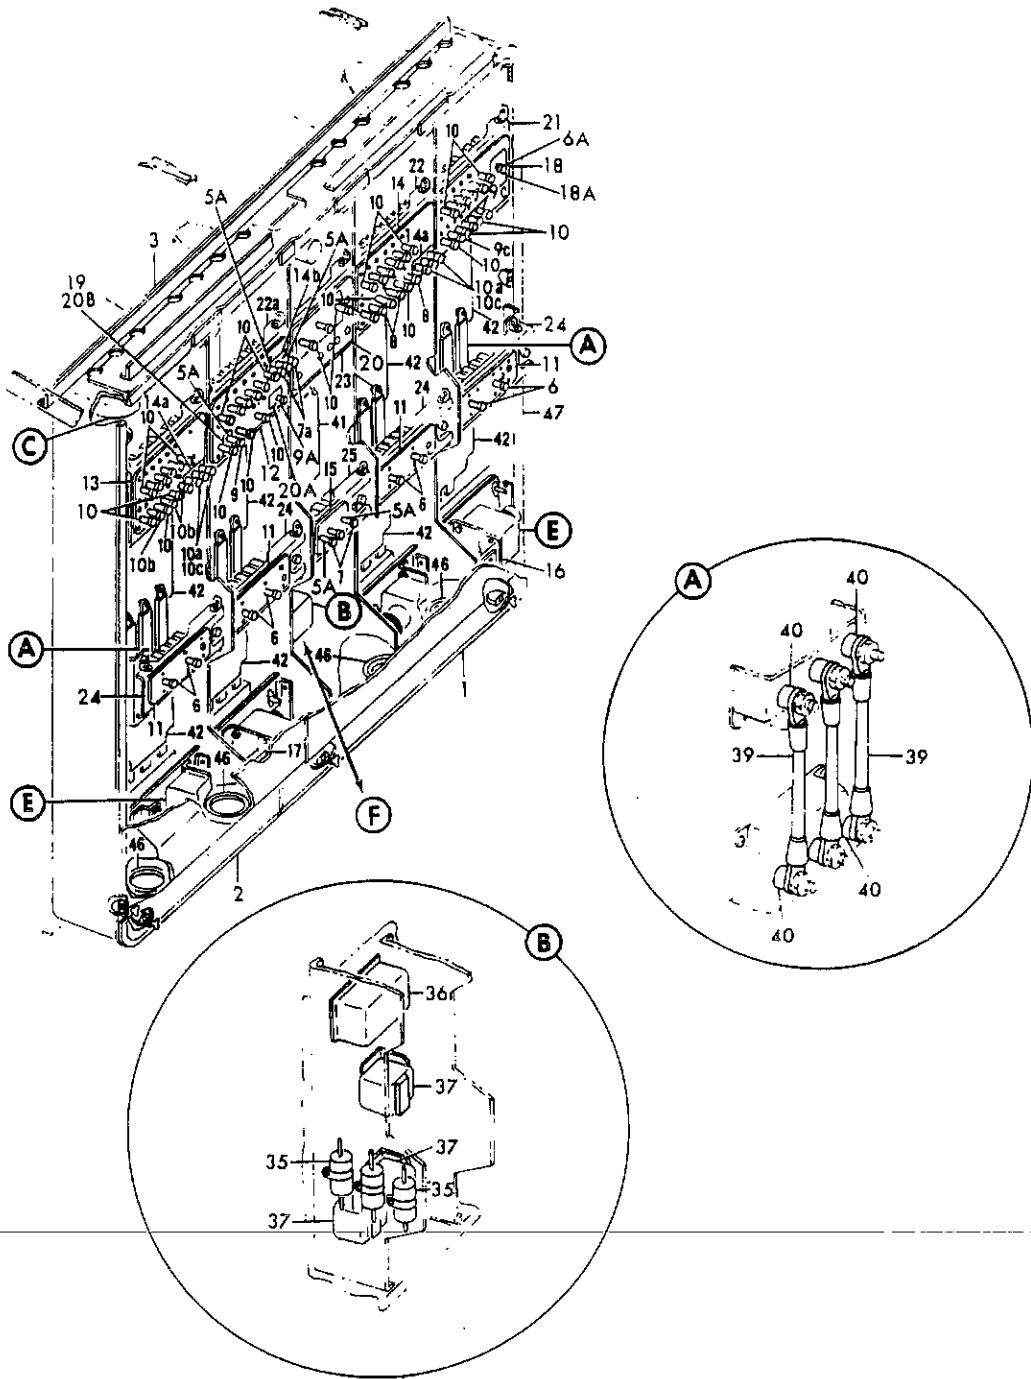


FIGURE 9A. SHIELD ASSY, J6 MAIN AC POWER (SHEET 1)

DETAILED PARTS LIST
24-04-9A
PAGE 3

24-04-9A

NOV 21/90

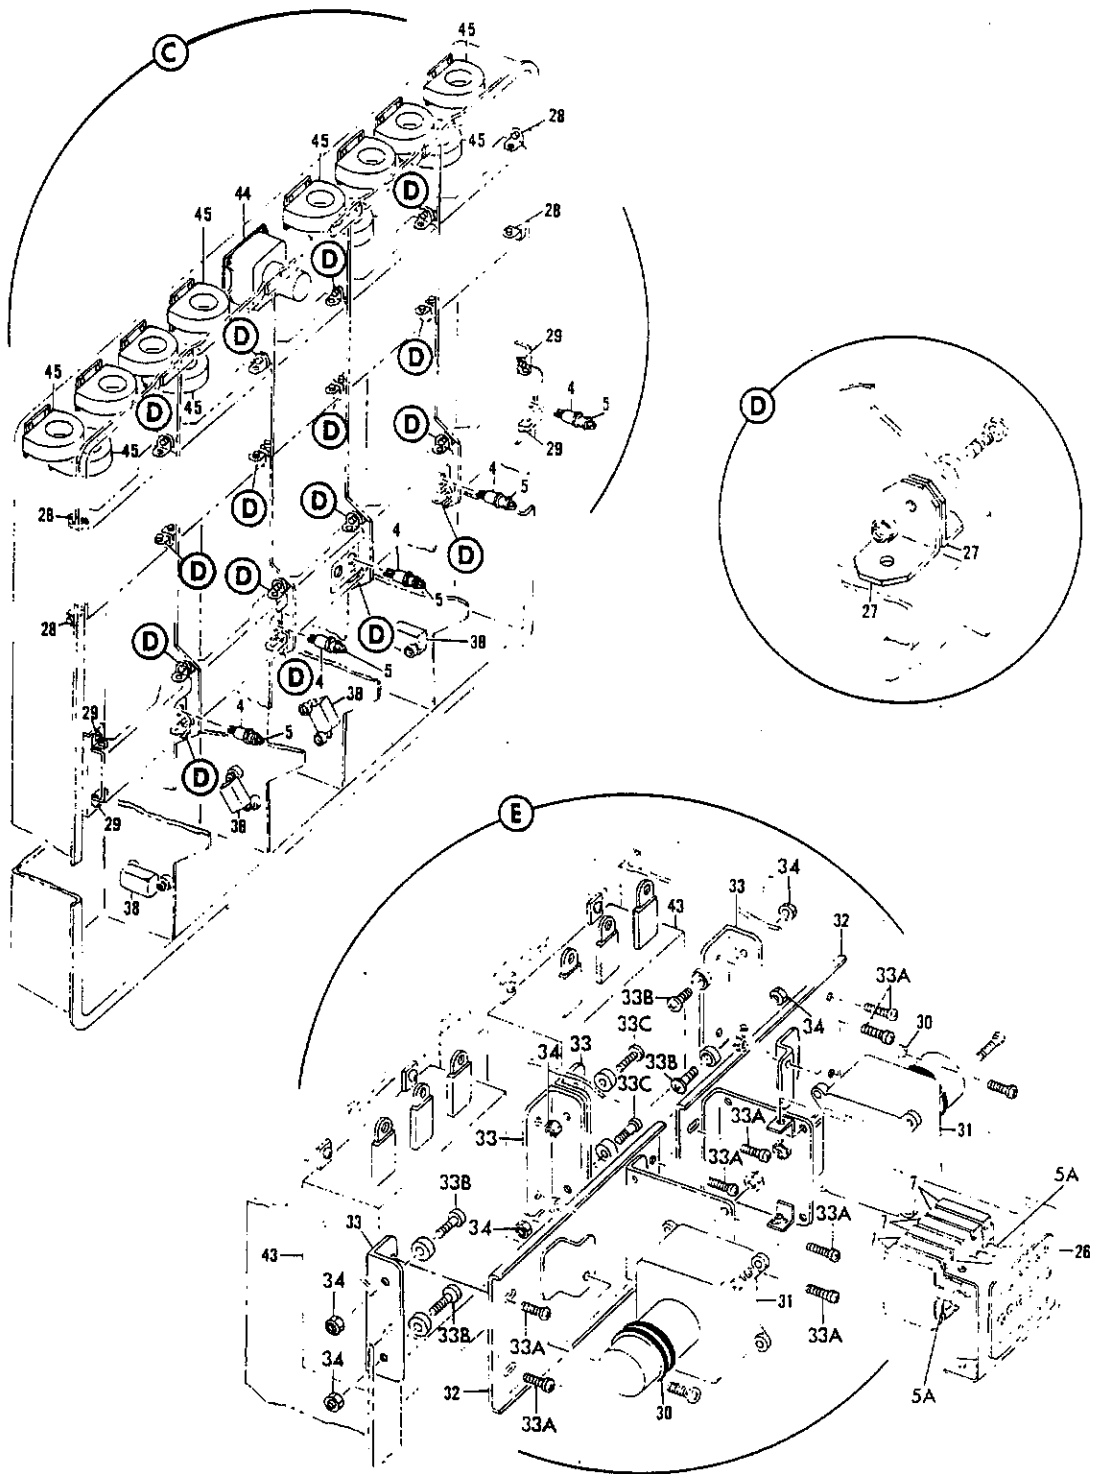


FIGURE 9A. SHIELD ASSY, J5 MAIN AC POWER (SHEET 2)

NOV 21/90

24-04-9A

DETAILED PARTS LIST
24-04-9A
PAGE 1

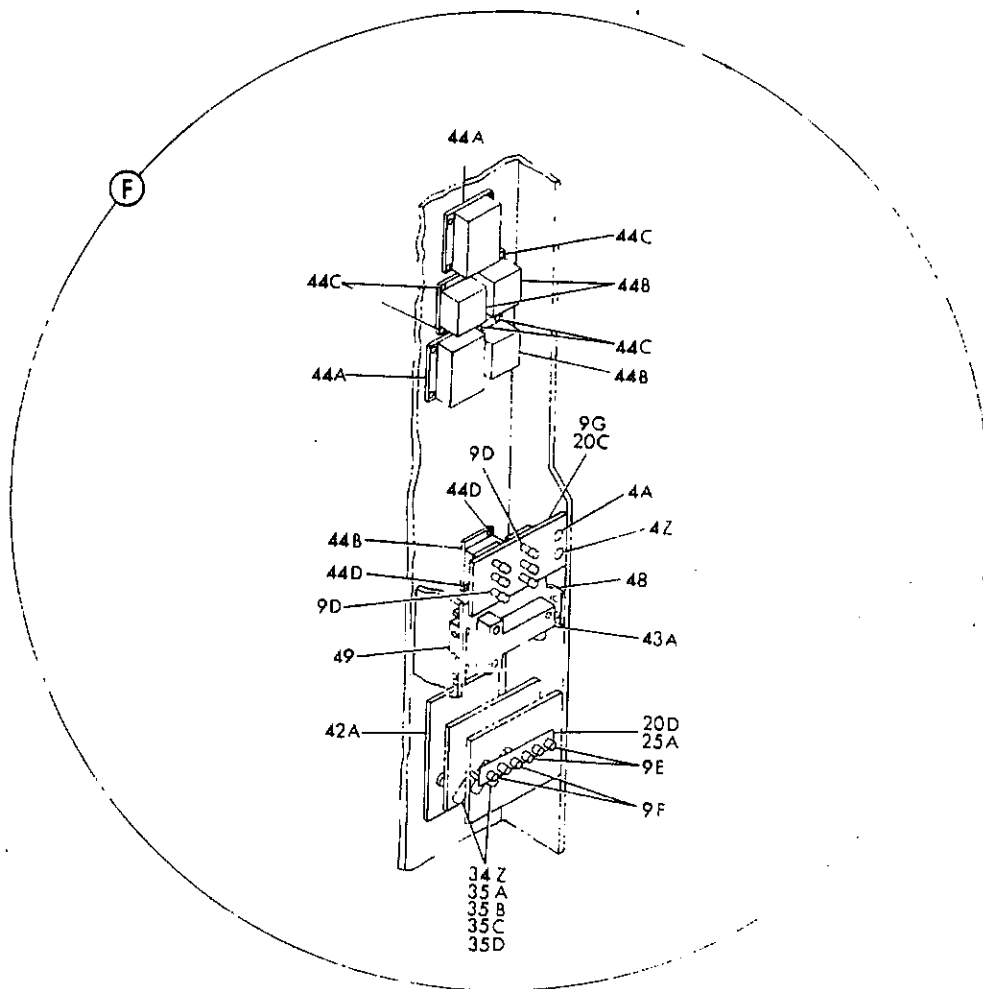


FIGURE 9A. SHIELD ASSY, J6 MAIN AC POWER (SHEET 3)

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 9A	50-8224-54		SHIELD ASSY, J6 MAIN AC POWER (SEE FIG. 1, ITEM 5) . . .	0150	RF
R	65-9006-30		SPARES ASSY, MAIN AC POWER SHIELD COVER (CONSISTS OF . .	0150	RF
R			PARTS DENOTED BY (S))		
R	65-9006-31		SPARES ASSY, MAIN AC POWER SHIELD COVER (CONSISTS OF . .	0150	RF
R			PARTS DENOTED BY (S))		
R 1	S 50-9362-61		. COVER ASSY, MAIN AC POWER SHIELD AFT (NOT USED ON . .	0150	1
R			65-9006-31) (FOR SPARES ONLY) (SEE FIG. 12)		
R 1	50-9362-61		. COVER ASSY, AFT (SEE FIG. 12)	0150	1
R 2	S 50-9362-67		. COVER ASSY, FORWARD (NOT USED ON 65-9006-30) (FOR . .	0150	1
R			SPARES ONLY) (SEE FIG. 15)		
R 2	50-9362-71		. COVER ASSY, MAIN AC POWER SHIELD FORWARD (SEE FIG. . .	0150	1
R			17)		
R 3	69-1035-2		. ANGLE, MAIN AC POWER SHIELD SUPPORT	0150	1
R 4	NE51		. LAMP, NEON (V08806)	0150	5
R 5	MS90287-23		. LIGHT	0150	5
R 5A	69-62450-1		. RING, SNAP (ADDED BY SB 2693)	0150	AR
R 6	BACC18L5A		. CIRCUIT BREAKER, (AFFECTED BY AD 69-20-6) (DELETED BY . .	0150	8
R			SB 2897)		
R 6	10-3344-5		. CIRCUIT BREAKER, (ADDED BY SB 2897)	0150	8
R 7	BACC18R5B		. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	15
R 7	700-013-5		. CIRCUIT BREAKER, (V763741 (ADDED BY SB 3391)	0150	15
R			(OPTIONAL 492-205-102 (V79405))		
R 7	492-205-102		. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391)	0150	15
R			(OPTIONAL TO 700-013-5 (V763741))		
R 7A	BACC18R15B		. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	3
R 7A	700-013-15		. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391)	0150	3
R			(OPTIONAL 492-215-102 (V79405))		
R 7A	492-215-102		. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391)	0150	3
R			(OPTIONAL TO 700-013-15 (V763741))		
R 9	BACC18R35B		. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	1
R 9	700-013-35		. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391)	0150	1
R			(OPTIONAL 492-235-102 (V79405))		
R 9	492-235-102		. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391)	0150	1
R			(OPTIONAL TO 700-013-35 (V763741))		
R 9C	BACC18R50C		. CIRCUIT BREAKER	0150	3
R 10	BACC18R50C		. CIRCUIT BREAKER	0150	39
R 10B	BACC18R50C		. CIRCUIT BREAKER	0150	3
R			ATTACHING PARTS		
R	NAS514P632-6		. SCREW	0150	AR
R			-----*		
R 11	BACM10C62-2AEW		. MARKER, CONTROL PANEL-VOLT REG ALUMINUM FOIL	0150	4
R 12	BACM10M18EB		. MARKER, GENERATOR NO. 3 CIRCUIT BREAKER IDENTIFYING . .	0150	1
R			ALUMINUM FOIL		
R 13	BACM10M18HL		. MARKER, GENERATOR NO. 4 CIRCUIT BREAKER IDENTIFYING . .	0150	1
R			ALUMINUM FOIL		
R 14	BACM10M18EE		. MARKER, GENERATOR NO. 2 CIRCUIT BREAKER IDENTIFYING . .	0150	1
R			ALUMINUM FOIL		
R 15	BACM10M22-1AXA		. MARKER, PHASE A, B, C NOISE FILTER CAPACITORS	0150	1
R			SYNCHRONIZING BUS ALUMINUM FOIL		
R 16	BACM10M52-6CJ		. MARKER, AC SYSTEM METERS-GENERATOR NO. 2, GENERATOR . .	0150	1
R			NO. 1 PHASE A B C ALUMINUM FOIL		
R 17	BACM10M52-6CK		. MARKER, AC SYSTEM METERS-GENERATOR NO. 4, GENERATOR . .	0150	1
R			NO. 3 PHASE A B C ALUMINUM FOIL		
R 18	BACM10M75-1ASR		. MARKER, GENERATOR NO. 1 CIRCUIT BREAKER IDENTIFYING . .	0150	1
R			ALUMINUM FOIL		
R 19	BACM10L4VU		. MARKER, COVE LIGHTS ALUMINUM FOIL	0150	1
R 20	BACM10P42-14GG		. MARKER, EXTERNAL POWER ALUMINUM FOIL	0150	1
R 21	60-6925		. PANEL ASSY, CIRCUIT BREAKER	0150	2
R 22	60-6925-6		. PANEL ASSY, CIRCUIT BREAKER	0150	1
R 22A	60-6925-12		. PANEL ASSY, CIRCUIT BREAKER	0150	1
R 23	60-6924		. PANEL ASSY, MAIN AC POWER SHIELD CIRCUIT BREAKER . . .	0150	1
R 24	60-6950-2		. PANEL ASSY, MAIN AC POWER SHIELD CIRCUIT BREAKER . . .	0150	4
R 25	60-6921-2		. PANEL ASSY, MAIN AC POWER SHIELD CIRCUIT BREAKER . . .	0150	1
R			ATTACHING PARTS		
R	NAS603-6		. SCREW	0150	36
R			-----*		
R 26	66-9083-3		. PANEL, CIRCUIT BREAKER	0150	2
R			ATTACHING PARTS		
R	NAS603-5		. SCREW	0150	8
R			-----*		
R 27	30-3136		. CLIP, MAIN AC POWER SHIELD SUPPORT	0150	32
R			ATTACHING PARTS		
R	NAS603-8		. SCREW	0150	16
R	NAS679A3W		. NUT	0150	16
			-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

RAF
NOV 21/91

24-04-9A

DETAILED PARTS LIST
24-04-9A
PAGE 3

PARTS CATALOG

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	9A 28	30-3136-1	.	CLIP, MAIN AC POWER SHIELD SUPPORT.	.	.	.	.	.	0150	4
R		NAS603-7	.	ATTACHING PARTS	.	.	.	.	.	0150	4
R		NAS679A3W	.	SCREW	.	.	.	.	.	0150	4
			.	NUT	.	.	.	.	.	0150	4
			.	-----*	.	.	.	.	.		
R	29	30-3136	.	CLIP, MAIN AC POWER SHIELD SUPPORT.	.	.	.	.	.	0150	4
R		NAS603-8	.	ATTACHING PARTS	.	.	.	.	.	0150	4
R		NAS679A3W	.	SCREW	.	.	.	.	.	0150	4
			.	NUT	.	.	.	.	.	0150	4
			.	-----*	.	.	.	.	.		
R	30	MS21919WDG25	.	CLAMP	.	.	.	.	.	0150	4
R		NAS603-6	.	ATTACHING PARTS	.	.	.	.	.	0150	4
R		NAS679A3W	.	SCREW	.	.	.	.	.	0150	4
			.	NUT	.	.	.	.	.	0150	4
			.	-----*	.	.	.	.	.		
R	31	9124-8075	.	RELAY, (V35344)	.	.	.	.	.	0150	4
R			.	(OPTIONAL 6042H22 (V27193))	.	.	.	.	.		
R	31	6042H22	.	RELAY, (V27193)	.	.	.	.	.	0150	4
R			.	(OPTIONAL TO 9124-8075 (V35344))	.	.	.	.	.		
			.	ATTACHING PARTS	.	.	.	.	.		
R		NAS603-6	.	SCREW	.	.	.	.	.	0150	16
R		NAS679A3W	.	NUT	.	.	.	.	.	0150	16
			.	-----*	.	.	.	.	.		
R	32	66-3742-2	.	CHANNEL ASSY, RELAY SUPPORT	.	.	.	.	.	0150	4
R		NAS603-5	.	ATTACHING PARTS	.	.	.	.	.	0150	16
			.	SCREW	.	.	.	.	.	0150	16
			.	-----*	.	.	.	.	.		
R	33	63-2079	.	ANGLE ASSY, RELAY SUPPORT	.	.	.	.	.	0150	8
R	33A	NAS603-5	.	ATTACHING PARTS	.	.	.	.	.	0150	16
R	33B	NAS603-6	.	SCREW	.	.	.	.	.	0150	8
R	33C	NAS603-7	.	SCREW	.	.	.	.	.	0150	4
R	34	NAS679A3W	.	SCREW	.	.	.	.	.	0150	4
			.	NUT	.	.	.	.	.	0150	12
			.	-----*	.	.	.	.	.		
R	35	121P20506T13	.	CAPACITOR, 2 UF (V56289).	.	.	.	.	.	0150	3
R	35A	NAS601-8	.	ATTACHING PARTS	.	.	.	.	.	0150	3
R	35C	NAS679A06W	.	SCREW	.	.	.	.	.	0150	3
			.	NUT	.	.	.	.	.	0150	3
			.	-----*	.	.	.	.	.		
R	36	10-3263	.	RELAY, 200V 3 PHASE 400 CYCLE NEGATIVE SEQUENCE	.	.	.	.	.	0150	1
R			.	SENSING	.	.	.	.	.		
R	37	10-3092	.	RELAY, HERMETICALLY SEALED 4PDT	.	.	.	.	.	0150	3
R		NAS602-10	.	ATTACHING PARTS	.	.	.	.	.	0150	16
			.	SCREW	.	.	.	.	.	0150	16
			.	-----*	.	.	.	.	.		
R	38	49F2204	.	CAPACITOR, 2 MF 660 V AC 400 CYCLE (V56289)	.	.	.	.	.	0150	4
R			.	(OPTIONAL AND FOR REPLACEMENT ORDER 121P20406T13	.	.	.	.	.		
R			.	(V56289))	.	.	.	.	.		
			.	ATTACHING PARTS	.	.	.	.	.		
R		NAS601-6	.	SCREW	.	.	.	.	.	0150	8
R		AN960D6L	.	WASHER.	.	.	.	.	.	0150	8
R		NAS679A06W	.	NUT	.	.	.	.	.	0150	8
			.	-----*	.	.	.	.	.		
R	39	66-18371-1	.	BUS ASSY, J6 MAIN POWER SHIELD.	.	.	.	.	.	0150	12
R	40	66-18526-1	.	SPACER, ELECTRICAL TERMINAL (OPTIONAL AN961-616 WITH	.	.	.	.	.	0150	48
R			.	MS20341-616)	.	.	.	.	.		
R	41	B1020	.	RELAY, AC GROUND POWER (V74063)	.	.	.	.	.	0150	1
R	42	50086-003	.	CIRCUIT BREAKER, (V31435)	.	.	.	.	.	0150	8
R		NAS603-10	.	ATTACHING PARTS	.	.	.	.	.	0150	36
			.	SCREW	.	.	.	.	.	0150	36
			.	-----*	.	.	.	.	.		
R	43	10-3262-1	.	TRANSFORMER ASSY, CURRENT	.	.	.	.	.	0150	4
R		NAS603-8	.	ATTACHING PARTS	.	.	.	.	.	0150	16
			.	SCREW	.	.	.	.	.	0150	16
			.	-----*	.	.	.	.	.		
R	44	9124-8075	.	RELAY, (V35344)	.	.	.	.	.	0150	1
R			.	(OPTIONAL 6042H22 (V27193))	.	.	.	.	.		
R	44	6042H22	.	RELAY, (V27193)	.	.	.	.	.	0150	1
R			.	(OPTIONAL TO 9124-8075 (V35344))	.	.	.	.	.		
R	45	10-3256	.	TRANSFORMER, CURRENT.	.	.	.	.	.	0150	12
			.	ATTACHING PARTS	.	.	.	.	.		
R		NAS603-10	.	SCREW	.	.	.	.	.	0150	52
R		NAS603-5	.	SCREW	.	.	.	.	.	0150	24
R		NAS679A3W	.	NUT	.	.	.	.	.	0150	24
			.	-----*	.	.	.	.	.		

MISSING ITEM NUMBERS ARE NOT APPLICABLE




PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
9A 46	50-8224-6	. GROMMET, J6 MAIN AC POWER SHIELD (ALTERED FROM. NMCG51H X 9.5 IN. LG TYPE C (V032961))	0150	4
47	50-9361-10 BAC27DEL431	. SHIELD ASSY, MAIN AC POWER (SEE FIG. 18). MARKER-ALUMINUM FOIL, AMPERE RATING (ADDED BY SB. 2693)	0150 0150	1 1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/91

24-04-9A

DETAILED PARTS LIST
24-04-9A
PAGE 5



NOV 21/90

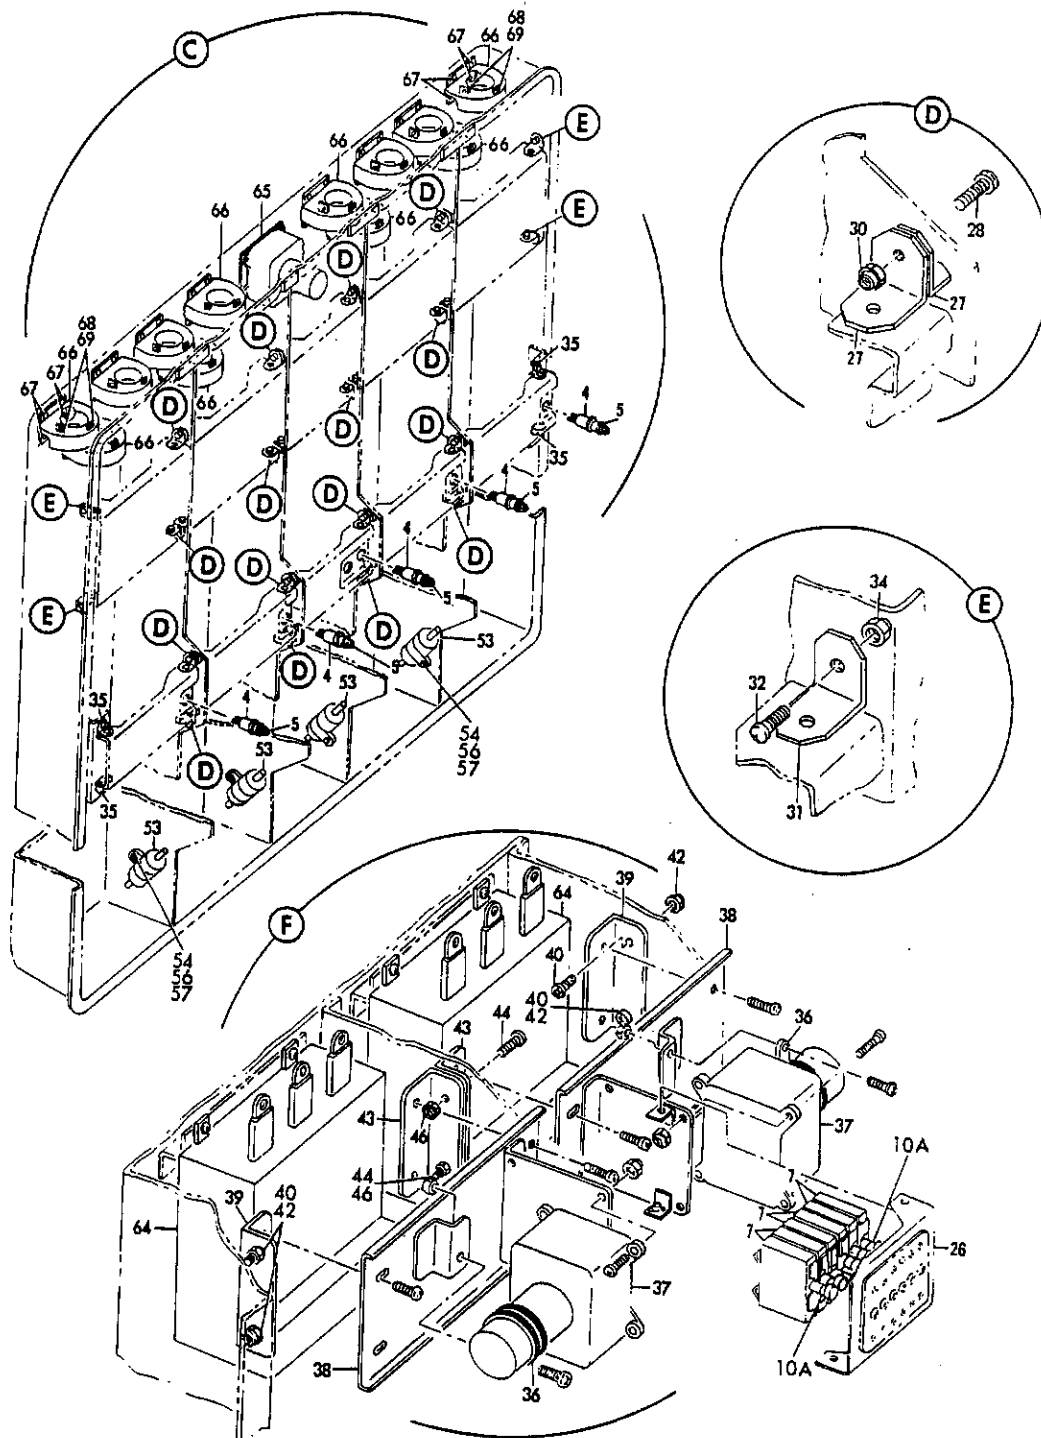


FIGURE 9C. SHIELD ASSY, J6 MAIN AC POWER (ELECTRICAL POWER ONLY) (SHEET 2)

NOV 21/90

DETAILED PARTS LIST
24-04-9C
PAGE 1

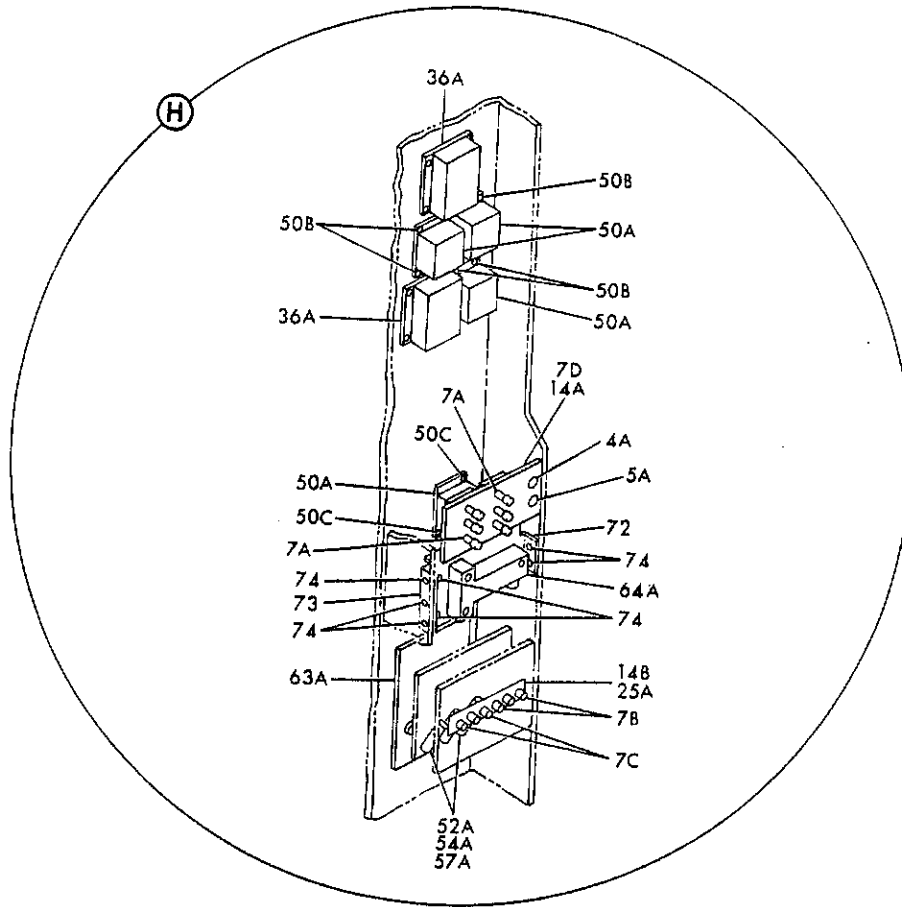


FIGURE 9C. SHIELD ASSY-J6 MAIN AC POWER (ELECTRICAL POWER ONLY)

DETAILED PARTS LIST
24-04-9C
PAGE 2

24-04-9C

NOV 21/90

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
9C	50-8224-71	SHIELD ASSY, J6 MAIN AC POWER (SEE FIG. 1, ITEM 5).	5199	RF
1	50-9362-61	. COVER ASSY, AFT (SEE FIG. 12)	5199	1
2	50-9362-53	. COVER ASSY, FORWARD (SEE FIG. 14)	5199	1
3	69-1035-2	. ANGLE, SUPPORT.	5199	1
4	NE51	. LAMP, NEON (V08806)	5199	5
5	MS90287-23	. LIGHT	5199	5
9	BACCL8R50C	. CIRCUIT BREAKER	5199	39
	NAS514P632-6	ATTACHING PARTS		
		. SCREW	5199	AR
11	BACM10C62-2AEW	. MARKER-ALUMINUM FOIL, CONTROL PANEL	5199	4
12	BACM10M1BEB	. MARKER-ALUMINUM FOIL, GENERATOR NO. 3 CIRCUIT BREAKER	5199	1
14	BACM10M1BEE	. MARKER-ALUMINUM FOIL, GENERATOR NO. 2 CIRCUIT BREAKER	5199	1
15	BACM10M22-1AXA	. MARKER-ALUMINUM FOIL, NOISE FILTER CAPACITORS	5199	1
		SYNCHRONIZING BUS VOLTMETER PLUS SYNCH. LIGHT		
		PHASE A B C		
16	BACM10M52-6CJ	. MARKER-ALUMINUM FOIL, AC SYSTEM METERS GENERATOR NO.	5199	1
		2 GENERATOR NO. 1 PHASE A B C		
17	BACM10M52-6CK	. MARKER-ALUMINUM FOIL, AC SYSTEM METERS GENERATOR NO.	5199	1
		4 GENERATOR NO. 3 PHASE A B C		
18	BACM10M75-1ASR	. MARKER-ALUMINUM FOIL, PHASE A B C DISTRIBUTION BUS.	5199	1
		NO. 4 ESSENTIAL GALLEY AC BUS		
20	BACM10P42-14GG	. MARKER-ALUMINUM FOIL, PHASE A B C AC BUS.	5199	1
23	60-6924	. PANEL ASSY, CIRCUIT BREAKER	5199	1
24	60-6950-2	. PANEL ASSY, CIRCUIT BREAKER	5199	4
25	60-6921-2	. PANEL ASSY, CIRCUIT BREAKER	5199	1
	NAS603-6P	ATTACHING PARTS		
		. SCREW	5199	40
26	66-9083-3	. PANEL, CIRCUIT BREAKER.	5199	2
	NAS603-5P	ATTACHING PARTS		
		. SCREW	5199	8
27	30-3136	. CLIP, SUPPORT	5199	32
		ATTACHING PARTS		
28	NAS603-8P	. SCREW	5199	16
30	BACN10JC3	. NUT	5199	16
31	30-3136-1	. CLIP, SUPPORT	5199	4
		ATTACHING PARTS		
32	NAS603-7P	. SCREW	5199	4
34	BACN10JC3	. NUT	5199	4
35	30-3136	. CLIP, SUPPORT	5199	4
		ATTACHING PARTS		
	NAS603-8P	. SCREW	5199	4
	BACN10JC3	. NUT	5199	4
	NAS603-6P	. SCREW	5199	4
	BACN10JC3	. NUT	5199	4
	NAS603-6P	. SCREW	5199	16
	BACN10JC3	. NUT	5199	16
38	66-3742-2	. CHANNEL ASSY, RELAY SUPPORT	5199	4
	NAS603-5P	ATTACHING PARTS		
		. SCREW	5199	16
39	63-2079	. ANGLE ASSY, RELAY SUPPORT	5199	4
		ATTACHING PARTS		
40	NAS603-6P	. SCREW	5199	8
42	BACN10JC3	. NUT	5199	8
43	63-2079	. ANGLE ASSY, RELAY SUPPORT	5199	4
		ATTACHING PARTS		
44	NAS603-7P	. SCREW	5199	4
46	BACN10JC3	. NUT	5199	4
47	121P20506T13	. CAPACITOR, 2 UF (V562B9).	5199	3
		ATTACHING PARTS		
48	NAS601-8P	. SCREW	5199	3
50	BACN10JC3	. NUT	5199	3
51	10-3263	. RELAY, 200V 3 PHASE 400 CYCLE NEGATIVE SEQUENCE	5199	1
		SENSING		
52	10-3092	. RELAY, HERMETICALLY SEALED 4PDT	5199	3

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/90

24-04-9C

DETAILED PARTS LIST
24-04-9C
PAGE 3

Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
9C	NAS602-10P	.	ATTACHING PARTS		
		.	SCREW	5199	16
53	121P20406T13	.	CAPACITOR, .2 UF (V56289)	5199	4
		.	(OPTIONAL 49F2204 (V24446))		
53	49F2204	.	CAPACITOR, .2 UF 600 V AC 400 CYCLE (V24446).	5199	4
		.	(OPTIONAL TO 121P20406T13 (V56289))		
		.	ATTACHING PARTS		
54	NAS601-8P	.	SCREW	5199	4
57	BACN10JC3	.	NUT	5199	4
58	66-18371-1	.	BUS ASSY.	5199	12
59	66-18526-1	.	SPACER, ELECTRICAL TERMINAL	5199	48
		.	(OPTIONAL AN961-616 WITH MS20341-616)		
60	AN961-616	.	WASHER, (USED WITH MS20341-616)	5199	48
		.	(OPTIONAL TO 66-18526-1)		
61	MS20341-616	.	NUT, (USED WITH AN961-616).	5199	48
62	8102F	.	RELAY, (V74063)	5199	1
63	50086-003	.	CIRCUIT BREAKER, (V31435)	5199	8
		.	ATTACHING PARTS		
	NAS603-10P	.	SCREW	5199	36
64	10-3262-1	.	TRANSFORMER ASSY, CURRENT	5199	4
		.	ATTACHING PARTS		
	NAS603-8P	.	SCREW	5199	16
65	9124-8075	.	RELAY, (V35344)	5199	1
		.	(OPTIONAL 6042H22 (V27193))		
65	6042H22	.	RELAY, (V27193)	5199	1
		.	(OPTIONAL TO 9124-8075 (V35344))		
		.	ATTACHING PARTS		
	NAS603-10P	.	SCREW	5199	4
66	10-3256	.	TRANSFORMER, CURRENT.	5199	12
		.	ATTACHING PARTS		
67	NAS603-10P	.	SCREW	5199	48
68	NAS603-5P	.	SCREW	5199	24
69	BACN10JC3	.	NUT	5199	24
70	50-8224-6	.	GROMMET, (ALTERED FROM NMCG51H X 9.5 IN. LG TYPE C.	5199	4
		.	(V03296))		
71	50-9361-10	.	SHIELD ASSY, (SEE FIG. 1B).	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

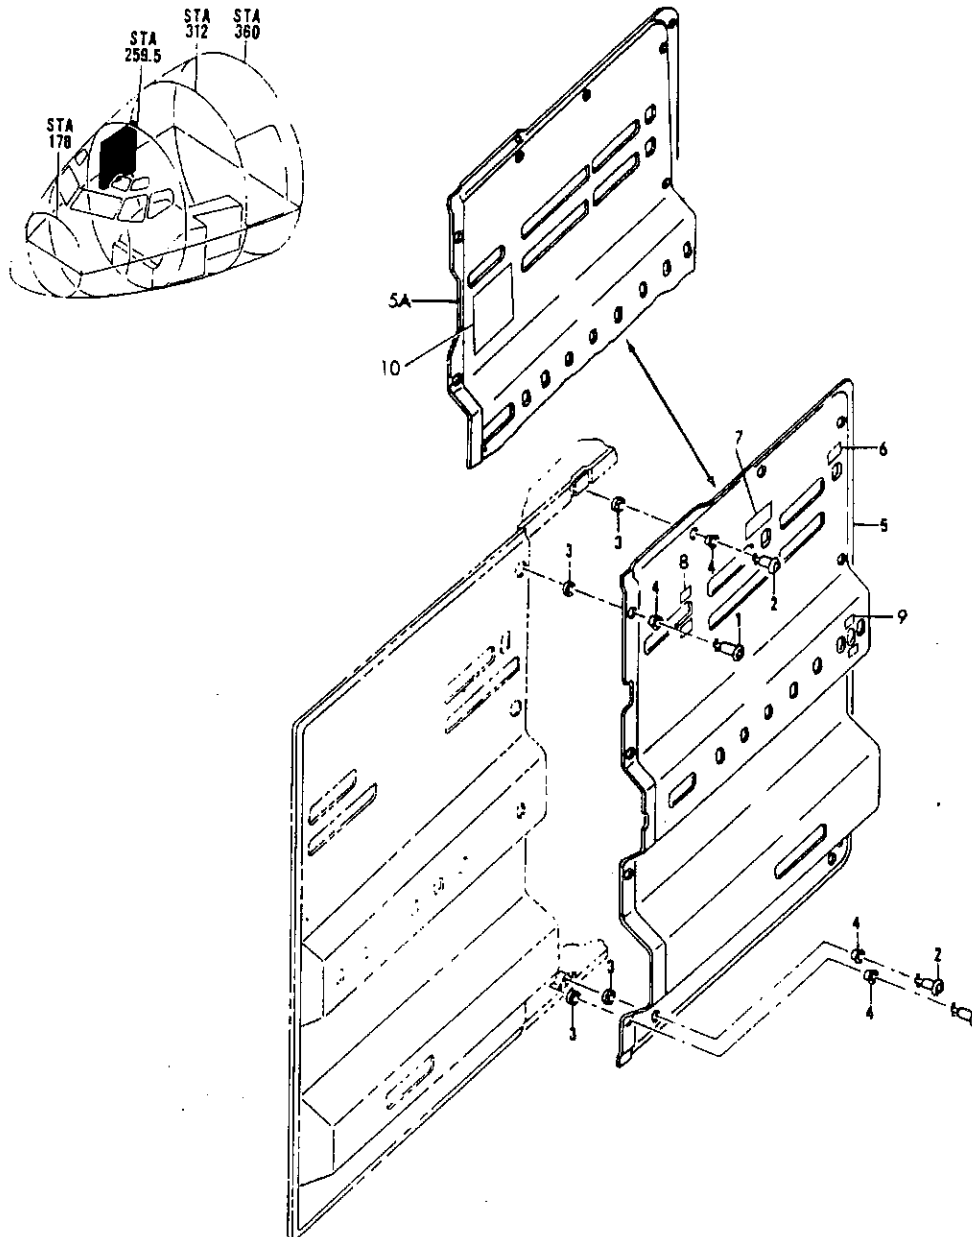


FIGURE 12. COVER ASSY, MAIN AC POWER SHIELD AFT

DETAILED PARTS LIST
24-04-12
PAGE 0

24-04-12

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
12	50-9362-61	COVER ASSY, MAIN AC POWER SHIELD AFT (SEE FIG. 2, ITEM 1, FIG. 6, ITEM 1, FIG. 9A, ITEM 1, FIG. 9B, ITEM 1 AND FIG. 9C, ITEM 1)		RF
1	BACS21Y6R	. STUD ASSY		4
2	BACS21Y9R	. STUD ASSY		7
3	BACW10X4	. WASHER.		11
4	BACG20AA1	. GRDMMET		11
5	50-9362-62	. COVER, MAIN AC POWER SHIELD AFT		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/90

24-04-12

DETAILED PARTS LIST
24-04-12
PAGE 1

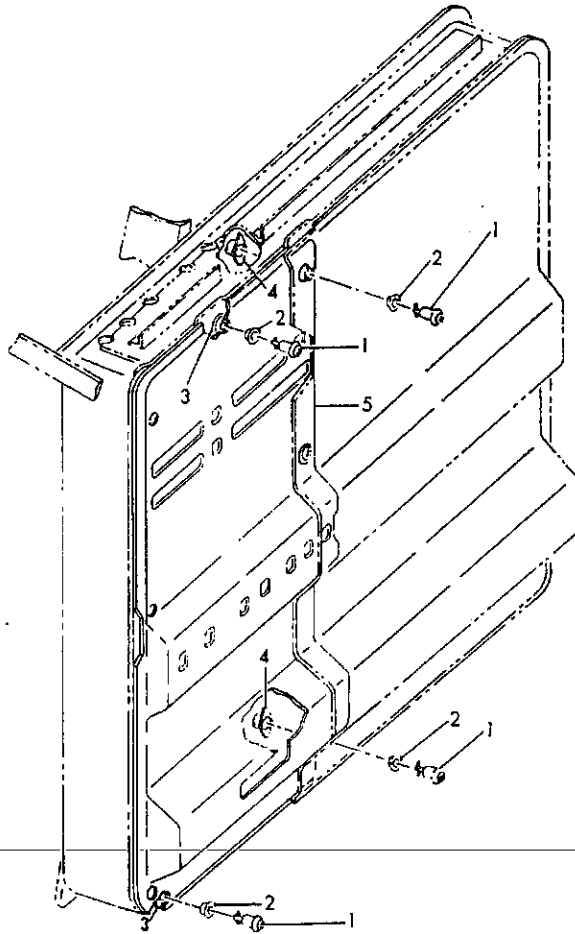
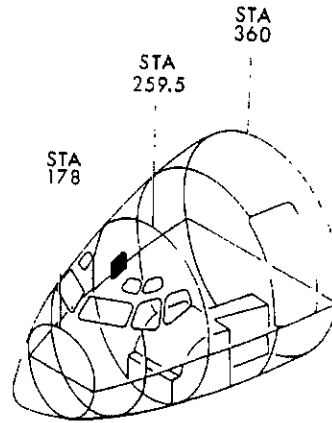


FIGURE 1A. COVER ASSY, MAIN AC POWER SHIELD FORWARD

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
14	50-9362-53		COVER ASSY, MAIN AC POWER SHIELD FORWARD (SEE FIG. 4, . ITEM 2, FIG. 7, ITEM 2, FIG. 9A, ITEM 2, FIG. 9C, ITEM 2, FIG. 9F, ITEM 2 AND FIG. 9H, ITEM 3)	5199	RF
1	BACS21Y9R		. STUD ASSY	5199	5
2	BACG20AA1		. GROMMET	5199	5
3	BACW10X4		. WASHER.	5199	5
4	BACR11Y3A		. RECEPTACLE.	5199	4
5	50-9362-55		. COVER, MAIN AC POWER SHIELD FORWARD	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

RAF
NOV 21/90

24-04-14

DETAILED PARTS LIST
24-04-14
PAGE 1

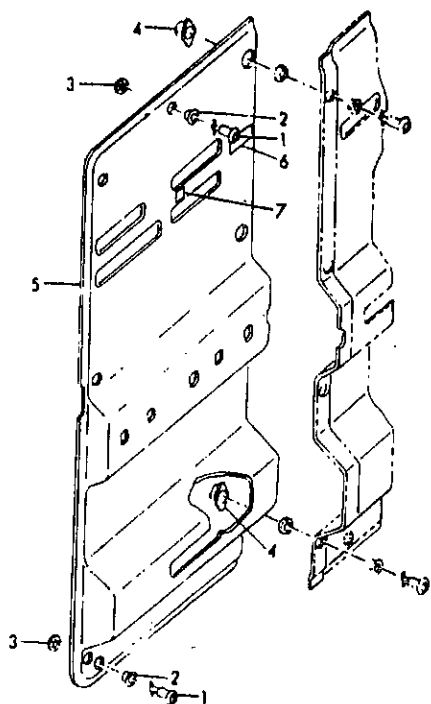
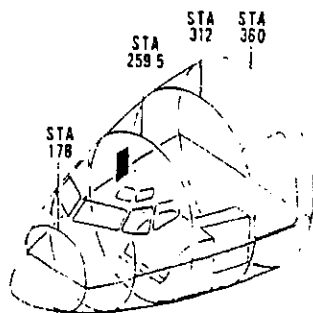


FIGURE 17. COVER ASSY, MAIN AC POWER SHIELD FORWARD

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
17	50-9362-71	COVER ASSY, MAIN AC POWER SHIELD FORWARD (SEE FIG. 2, . ITEM 2, FIG. 6, ITEM 2, FIG. 9A, ITEM 2, FIG. 9B, ITEM 2 AND FIG. 9C, ITEM 2)	0150	RF
1	BACS21Y9R	. STUD ASSY	0150	5
2	BACG20AA1	. GROMMET	0150	5
3	BACW10X4	. WASHER	0150	5
4	BACR11Y3A	. RECEPTACLE	0150	4
5	50-9362-72	. COVER, MAIN AC POWER SHIELD FORWARD	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/91

24-04-17

DETAILED PARTS LIST
24-04-17
PAGE 1


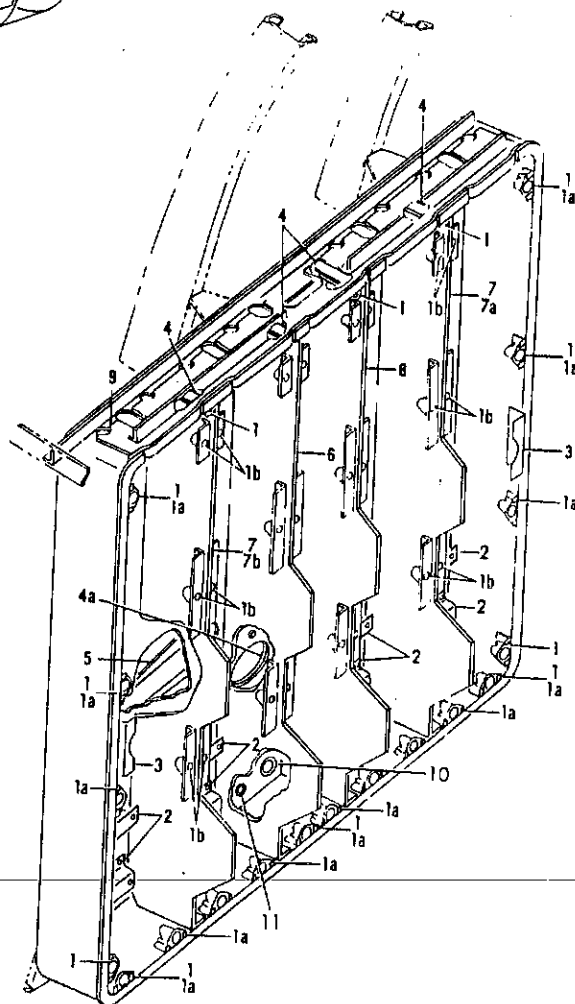


FIGURE 18. SHIELD ASSY, MAIN AC POWER

DETAILED PARTS LIST
24-04-18
PAGE 0

24-04-18

NOV 21/90

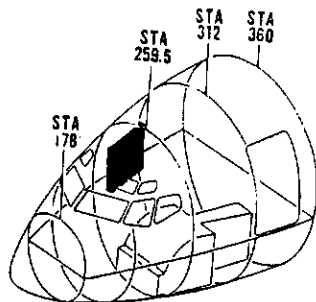

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
18	50-9361-10	SHIELD ASSY, MAIN AC POWER (SEE FIG. 2, ITEM 62, FIG. 3, ITEM 59, FIG. 6, ITEM 59, FIG. 9A, ITEM 47, FIG. 9B, ITEM 60 AND FIG. 9C, ITEM 71)								RF
1	BACRI1Y1	. RECEPTACLE.								12
2	6-73825	. SUPPORT ASSY, MAIN AC POWER SHIELD TRANSFORMER UNIT . ZEE								8
3	30-3070	. SUPPORT, MAIN AC POWER SHIELD ANGLE							0150	2
4	30-3071	. SUPPORT, MAIN AC POWER SHIELD DIVIDER BRACKET								4
4A	66-3099	. FITTING, AC POWER SHIELD.								1
	MS20470A4	ATTACHING PARTS								
		. RIVET								4
		-----*								
	5	. CHAMBER, MAIN AC POWER SHIELD SMOKE EVACUATION PLENUM								1
	6	. DIVIDER, MAIN AC POWER SHIELD							0150	1
	7	. DIVIDER, MAIN AC POWER SHIELD							0150	2
	8	. DIVIDER							0150	1
	9	. TOP, MAIN AC POWER SHIELD WIRE ACCESS								1
		ATTACHING PARTS								
	NAS603-10	. SCREW								19
		-----*								

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/91

24-04-18

DETAILED PARTS LIST
24-04-18
PAGE 1

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 05
TRANSFORMER SHIELDS AND PANELS

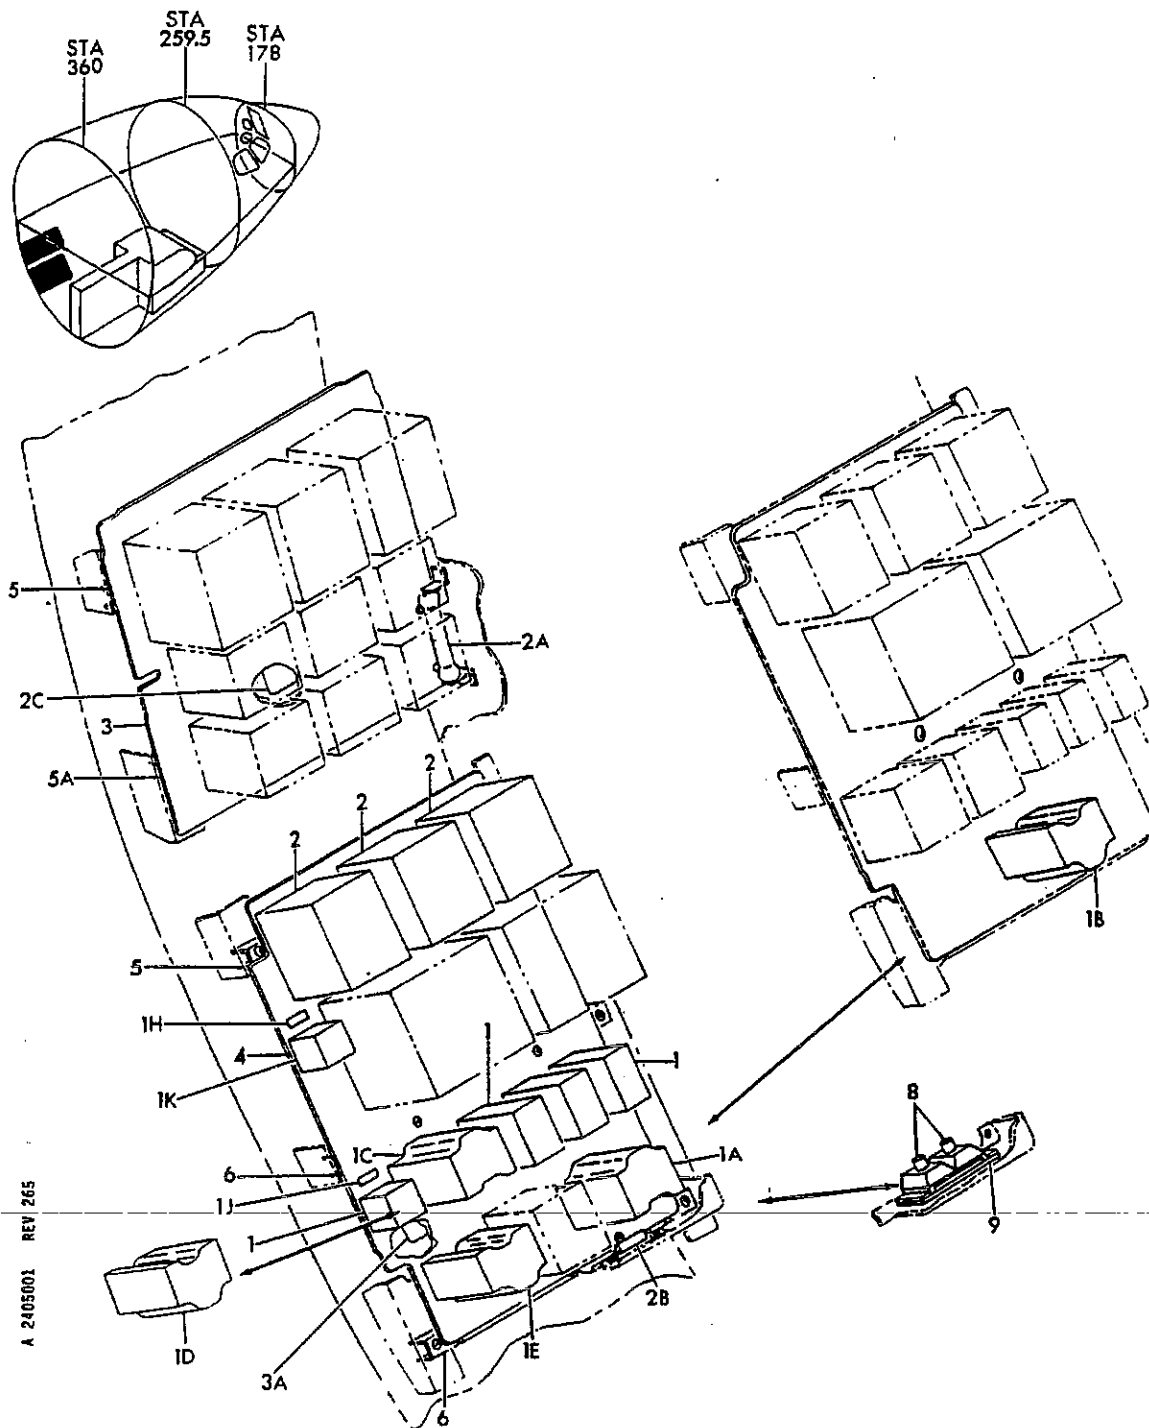


FIGURE 1. PANEL INSTL. STA 344 TO 360 TRANSFORMER (ELECTRICAL POWER ONLY)

BOEING **707** *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	1	50-11348	PANEL INSTL, STATION 344 TO 360 TRANSFORMER (ELECTRICAL							0150	RF
R			POWER ONLY) (SEE 24-3, FIG. 1A, ITEM 26, 24-3, FIG.								
R			18, ITEM 25 AND 24-3, FIG. 1C, ITEM 22)								
R	1	5970	. AUTOTRANSFORMER, 400 CYCLE 0.05 KVA 28 VOLT SEC . . .							0150	3
			(V95266)								
R		NAS603-8	ATTACHING PARTS								
			. SCREW							0150	12
			-----*								
R		10-3250-1	. TRANSFORMER, (T439) (ADDED BY RAF MOD 7211.019-134)							0203	1
R	2	10-3310-2	. TRANSFORMER, 115 TO 28 VOLTS.							0150	3
			ATTACHING PARTS								
R		NAS603-8	. SCREW							0150	12
			-----*								
R	3	50-10890-10	. PANEL ASSY, STATION 344 AND 360 TRANSFORMER							0150	1
			ATTACHING PARTS								
R		NAS603-6	. SCREW							0150	4
			-----*								
R	4	50-10890-6	. PANEL ASSY, STATION 344 AND 360 TRANSFORMER							0150	1
			ATTACHING PARTS								
R		NAS603-6	. SCREW							0150	6
			-----*								
R	5	66-1307-2	. CHANNEL ASSY, SUPPORT							0150	2
R	5A	66-1307-2	. CHANNEL ASSY, SUPPORT							0150	1
R	6	66-1307	. CHANNEL ASSY, SUPPORT							0150	2
			ATTACHING PARTS								
R		NAS514P1032-6	. SCREW							0150	10
R		BACN10FX1	. NUT							0150	10
			-----*								
R			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

RAF
NOV 21/91

24-05-1

DETAILED PARTS LIST
24-05-1
PAGE 1

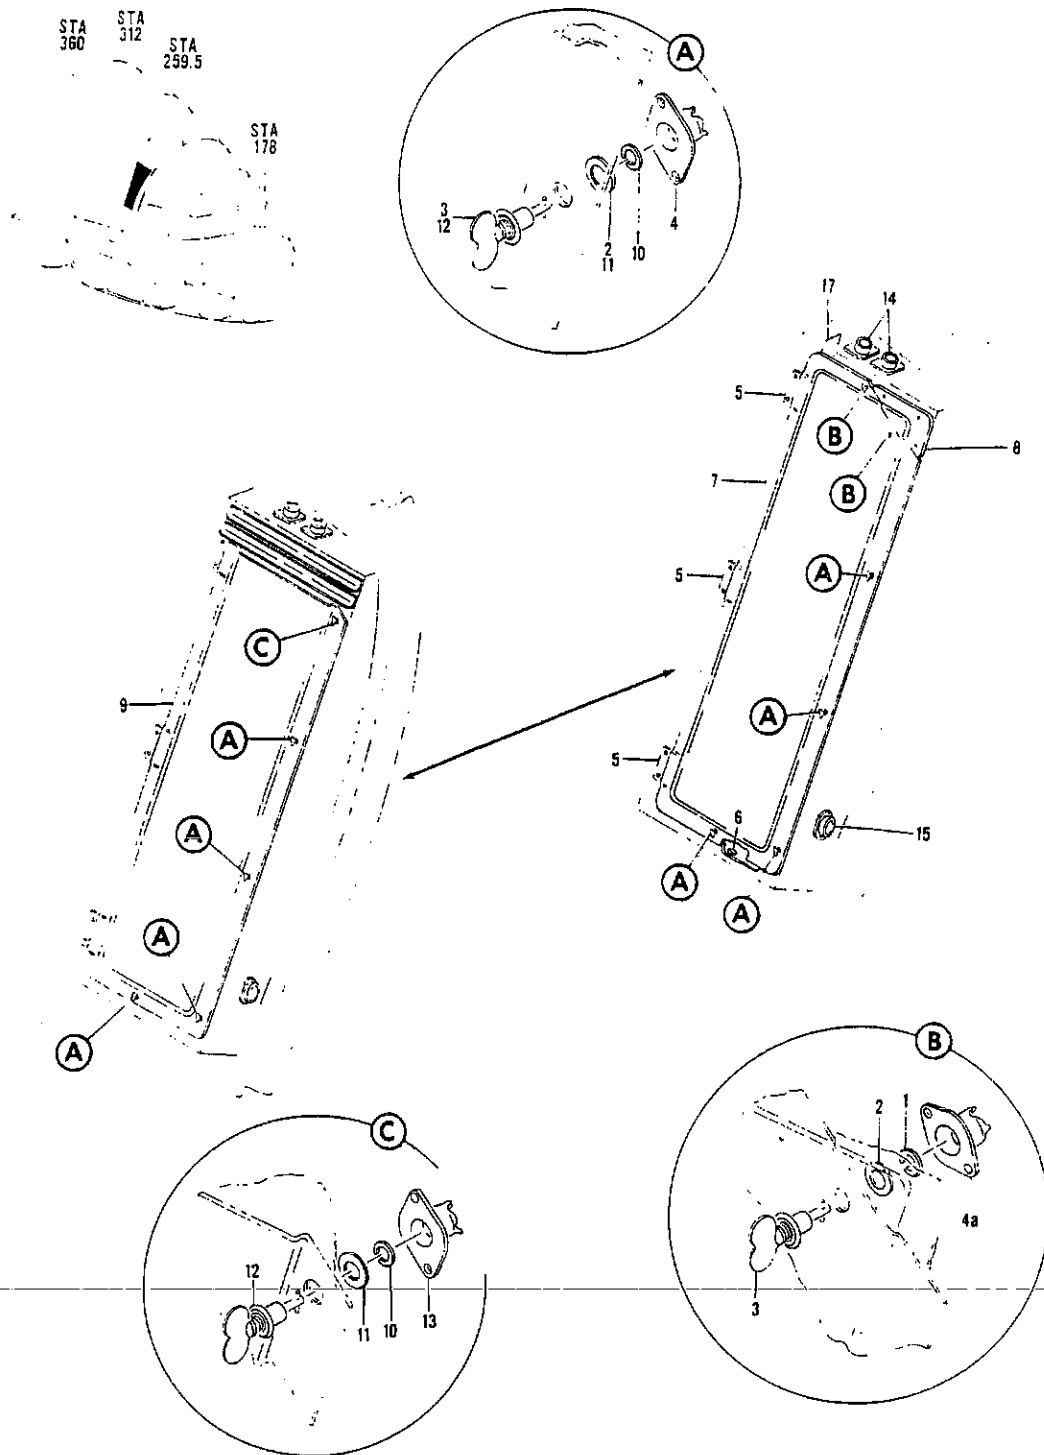


FIGURE 2. SHIELD INSTL, STATION 344 TO 360 TRANSFORMER (ELECTRICAL POWER ONLY)

DETAILED PARTS LIST
24-05-2
PAGE 0

24-05-2

NOV 21/90

BOEING **707**
Intercontinental
PARTS CATALOG

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R	2	50-9365	SHIELD, INSTL, STATION 344 AND 360 TRANSFORMER (ELECTRICAL POWER ONLY) (SEE 24-3, FIG. 1A, ITEM 10, 24-3, FIG. 1B, ITEM 9 AND 24-3, FIG. 1C, ITEM 8)	0150	RF
R	4	BACR11Y3A	. RECEPTACLE	0150	4
R	5	50-9365-14	. HINGE, STATION 344 AND 360 TRANSFORMER SHIELD (ALTERED FROM AN257-5-300)	0150	3
R			ATTACHING PARTS		
R		NAS602-5P	. SCREW	0150	6
R		AN960-8L	. WASHER	0150	6
R		NAS679A08W	. NUT	0150	6
R	6	BACG20ZA235	-----*		
R	9	50-9365-34	. GROMMET	0150	1
R	10	BACW10X2	. COVER ASSY, STATION 344 AND 360 TRANSFORMER SHIELD.	0150	1
R	11	AN960D416	. WASHER	0150	5
R	12	BACS21Y4W	. WASHER	0150	5
R		50-9365-44	. STUD ASSY	0150	5
R	13	BACR11Y3A	. TAB ASSY, STATION 344 AND 360 TRANSFORMER SHIELD.	0150	1
R	14	BACS45A1	. RECEPTACLE	0150	1
R			. FITTING	0150	2
R			ATTACHING PARTS		
R		NAS602-6	. SCREW	0150	8
R		AN960-8L	. WASHER	0150	8
R		NAS679A08W	. NUT	0150	8
R	15	66-1094	-----*		
R			. CONNECTOR, RELAY SHIELD	0150	1
R			. FOR REFERENCE TO OTHER SHIELD DETAILS SEE NHA	0150	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/91

24-05-2

DETAILED PARTS LIST
24-05-2
PAGE 1

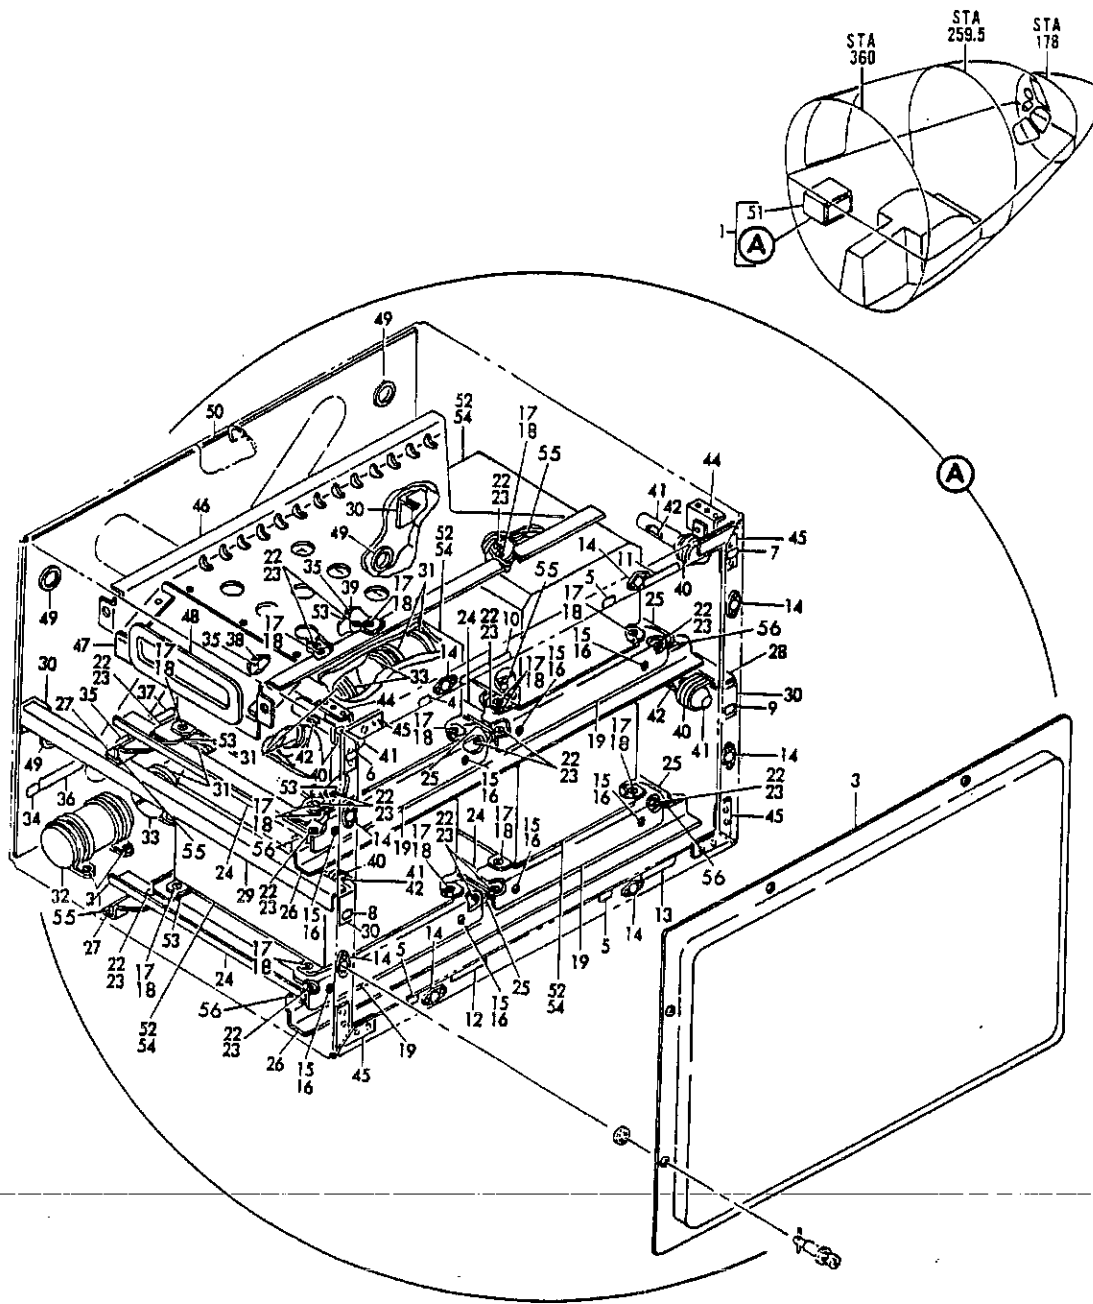


FIGURE 3 BOX INSTL, STATION 350 J26 TRANSFORMER RECTIFIER

DETAILED PARTS LIST
24-05-3
PAGE 0

NOV 21/90

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3	65-58626-1	BOX INSTL, STATION 350 J26 TRANSFORMER RECTIFIER. (VARIABLE DWG; 65-58626-5002) (SEE 24-3, FIG. 1A, ITEM 73 AND 24-3, FIG. 1C, ITEM 62)	5199	RF
1	65-58626-18	. . . BOX ASSY, (ELECTRICAL POWER ONLY).	5199	1
3	65-58626-10	. . . COVER	5199	1
	BACS21Y3R	. . . ATTACHING PARTS	5199	8
	BACW10X	. . . STUD ASSY, PANEL FASTENER	5199	8
		. . . WASHER.	5199	8
4	BACM9T7J	. . . SCOTCH-CAL, T11	5199	1
5	BACM9T7K	. . . SCOTCH-CAL, T17	5199	3
6	BAC27CEE-668	. . . MARKER-ALUMINUM FOIL, (C2008)	5199	1
7	BAC27CEE-669	. . . MARKER-ALUMINUM FOIL, (C2009)	5199	1
8	BAC27CEE-670	. . . MARKER-ALUMINUM FOIL, (C2010)	5199	1
9	BAC27CEE-671	. . . MARKER-ALUMINUM FOIL, (C2011)	5199	1
10	BACM10E20-5F	. . . MARKER-ALUMINUM FOIL, TRANSFORMER RECTIFIER	5199	1
		ESSENTIAL		
11	BACM10R10-20CS	. . . MARKER-ALUMINUM FOIL, TRANSFORMER RECTIFIER NO. 2	5199	1
12	BACM10R10-20CP	. . . MARKER-ALUMINUM FOIL, TRANSFORMER RECTIFIER NO. 3	5199	1
13	BACM10R10-20CR	. . . MARKER-ALUMINUM FOIL, TRANSFORMER RECTIFIER NO. 4	5199	1
14	BACR11Y2	. . . RECEPTACLE.	5199	8
15	BACS12CB3-10	. . . SCREW	5199	8
16	NAS1068A3	. . . NUT	5199	8
17	NAS514P428-6	. . . SCREW	5199	16
18	NAS679A4W	. . . NUT	5199	16
19	69-5852-2	. . . BRACKET, FRONT ATTACHMENT	5199	4
22	NAS514P1032-6	. . . SCREW	5199	16
23	NAS679A3W	. . . NUT	5199	16
24	65-7230-39	. . . RAIL.	5199	4
25	65-7230-40	. . . RAIL.	5199	4
26	65-58626-9	. . . ZEE	5199	2
26	65-58626-17	. . . ZEE	5199	2
27	65-58626-7	. . . ZEE	5199	2
28	65-58626-5	. . . ANGLE	5199	1
29	65-58626-6	. . . ANGLE	5199	1
30	65-58626-4	. . . ANGLE	5199	4
31	BACC10BH29RW	. . . CLAMP	5199	8
		ATTACHING PARTS		
31	BACS12CB3-7	. . . SCREW	5199	8
31	NAS679A3W	. . . NUT	5199	8
32	HLVB1050	. . . CAPACITOR, M211 (V56289). (OPTIONAL AND FOR REPLACEMENT ORDER HLVB1050D45566 (V56289))	5199	1
32	HLVB1050D45566	. . . CAPACITOR, M211 (V56289). (OPTIONAL TO AND REPLACEMENT FOR HLVB1050 (V56289))	5199	1
33	HLVB1050	. . . CAPACITOR, M217 (V56289). (OPTIONAL AND FOR REPLACEMENT ORDER HLVB1050D45566 (V56289))	5199	3
33	HLVB1050D45566	. . . CAPACITOR, M217 (V56289). (OPTIONAL TO AND REPLACEMENT FOR HLVB1050 (V56289))	5199	3
34	BACM9M5AF	. . . SCOTCH-CAL, M211.	5199	1
35	BACM9M5AG	. . . SCOTCH-CAL, M217.	5199	3
36	BACM10C20-28AC	. . . MARKER-ALUMINUM FOIL, ESS TR NOISE FILTER CAPACITOR	5199	1
37	BACM10C20-28AE	. . . MARKER-ALUMINUM FOIL, TR NO. 3 NOISE FILTER	5199	1
38	BACM10C20-28AD	. . . CAPACITOR	5199	1
39	BACM10C20-28AF	. . . MARKER-ALUMINUM FOIL, TR NO. 2 NOISE FILTER	5199	1
40	BACC10BH12RW	. . . CLAMP	5199	4
		ATTACHING PARTS		
	BACS12CB3-7	. . . SCREW	5199	4
	NAS679A3W	. . . NUT	5199	4
41	HKR	. . . FUSEHOLDER, (V71400).	5199	4
42	MDL5	. . . FUSE, (V71400). (OPTIONAL 313005 (V75915))	5199	4
42	313005	. . . FUSE, (V75915). (OPTIONAL TO MDL5 (V71400))	5199	4
44	65-58626-14	. . . BRACKET	5199	2
45	65-58626-8	. . . GUSSET.	5199	4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/90

24-05-3

DETAILED PARTS LIST
24-05-3
PAGE 1

Intercontinental

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
3	46	65-58626-12	.	.	PLENUM.	.	.	.	5199	1
	47	65-58626-13	.	.	PLATE	.	.	.	5199	1
	48	66-13597-1	.	.	GASKET	.	.	.	5199	1
	49	NAS557-16	.	.	GROMMET	.	.	.	5199	4
	50	65-58626-3	.	.	PLATE, SHEAR.	.	.	.	5199	1
	51	65-58626-11	.	.	BOX	.	.	.	5199	1
			.	.	REQUIRED PLACARDS, (SEE 11-2, FIG. 164)	.	.	.	5199	
	52	2-414	.	.	TRANSFORMER, RECTIFIER (V08748)	.	.	.	5199	4
	53	69-5852-1	.	.	PLATE, REAR WEDGE	.	.	.	5199	4
			.	.		.	.	.		
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 06
RELAY SHIELDS AND PANELS

RAF
NOV 21/90

24-06
PAGE 1

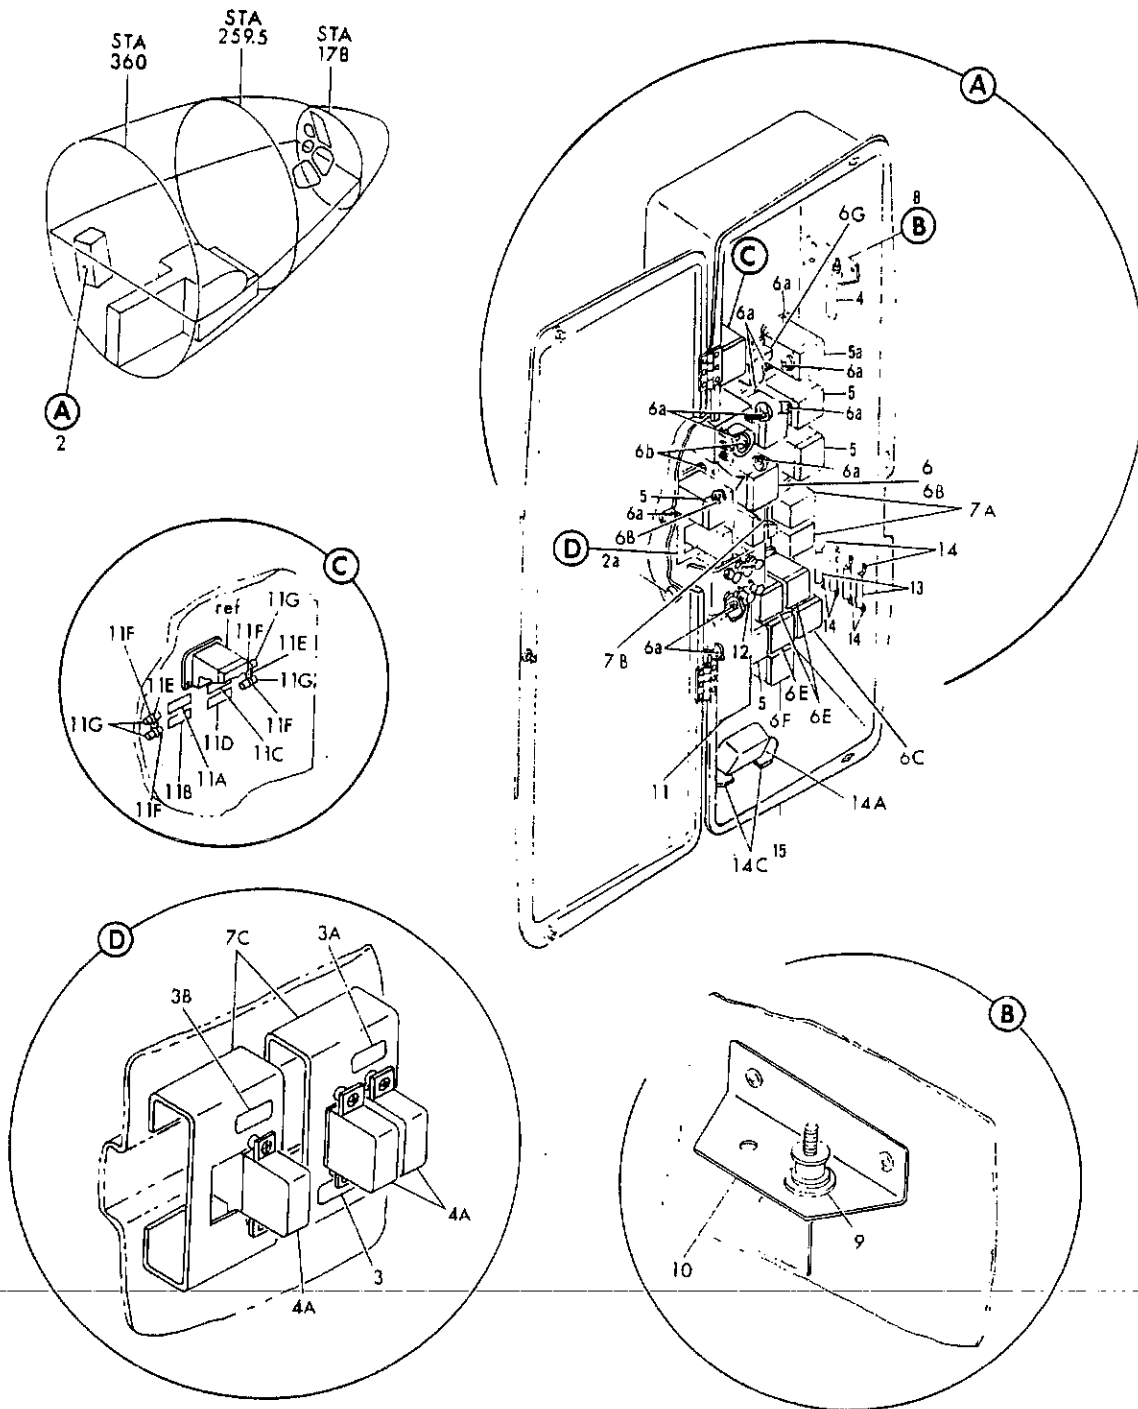


FIGURE 11B, SHIELD INSTL, SECTION 336 J4 RELAY

DETAILED PARTS LIST
24-06-11B
PAGE 2

24-06-11B

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
11B	50-8248	SHIELD INSTL, STATION 336 J4 RELAY (SEE 24-3, FIG. 1B, ITEM 3)	0150	RF
2	50-8248-4	. SHIELD ASSY, (ELECTRICAL POWER ONLY)	0150	1
	NAS603-8P	. ATTACHING PARTS	0150	6
	AN970-3	. SCREW	0150	6
		. WASHER		
2A	66-1094-1	. . CONNECTOR, RELAY SHIELD	0150	1
	NAS602-8P	. ATTACHING PARTS	0150	4
	AN960-8	. SCREW	0150	4
		. WASHER		
R	3	. . DECAL, R1047 (ADDED BY SB 3404)	0150	1
R	3A	. . DECAL, R1046 (ADDED BY SB 3404)	0150	1
R	3B	. . DECAL, R1048 (ADDED BY SB 3404)	0150	1
R	4	. . MARKER, BRACKET ALUMINUM FOIL	0150	1
	4A	. . RELAY, (ADDED BY SB 3404)	0150	3
	5	. . RELAY, HERMETICALLY SEALED 4PDT	0150	5
	5A	. . RELAY, HERMETICALLY SEALED 4PDT	0150	1
	6	. . RELAY, HERMETICALLY SEALED 2PDT	0150	1
	6A	. . ATTACHING PARTS		
	6B	. . SCREW	0150	11
		. . SCREW	0150	3
	6C	. . RELAY, HERMETICALLY SEALED 4PDT	0150	1
	6D	. . RELAY, HERMETICALLY SEALED 2PDT	0150	1
		. . ATTACHING PARTS		
	NAS602-8P	. . SCREW	0150	4
	NAS602-9	. . SCREW, (ADDED BY SB 2166)	0450	2
	AN960-8L	. . WASHER, (ADDED BY SB 2166)	0450	2
	NAS679A08W	. . NUT, (ADDED BY SB 2166)	0450	2
	6E	. . RELAY, HERMETICALLY SEALED 4PDT	0150	3
		. . ATTACHING PARTS		
	NAS602-8P	. . SCREW	0150	6
	6G	. . RELAY, (V35344) (ADDED BY RAF MOD 7211.019-179)	0150	1
		. . ATTACHING PARTS		
	NAS602-8P	. . SCREW	0150	4
	7	. . RELAY	0150	1
		. . ATTACHING PARTS		
	NAS603-10	. . SCREW	0150	2
	NAS603-12	. . SCREW	0150	2
	7A	. . RELAY, (V97896) (ADDED BY SB 3371)	0303	2
		. . ATTACHING PARTS		
	NAS514P832-7	. . SCREW	0303	6
	BACN10JC08	. . NUT	0303	6
	7B	. . PLATE, MOUNTING (ADDED BY SB 3371)	0303	1
		. . ATTACHING PARTS		
	NAS1808-08-8	. . SCREW	0303	3
	7C	. . BRACKET, (ADDED BY SB 3404)	0150	2
		. . ATTACHING PARTS		
	BACS12C808-6	. . SCREW	0150	4
	8	. . BRACKET ASSY, RECTIFIER	0150	1
		. . ATTACHING PARTS		
	NAS602-8P	. . SCREW	0150	2
	9	. . RECTIFIER, (V51589)	0150	1
	10	. . BRACKET, RECTIFIER	0150	1
	11	. . INVERTER, POWER SUPPLY (V08748)	0150	1
		. . ATTACHING PARTS		
	NAS603-8P	. . SCREW	0150	4
	11A	. . MARKER-ALUMINUM FOIL, M597 (ADDED BY SB 2981)	0150	1
	11B	. . MARKER-ALUMINUM FOIL, M599 (ADDED BY SB 2981)	0150	1
	11C	. . MARKER-ALUMINUM FOIL, M596 (ADDED BY SB 2981)	0150	1
	11D	. . MARKER-ALUMINUM FOIL, M598 (ADDED BY SB 2981)	0150	1
	11E	. . SCREW, (ADDED BY SB 2981 AND DELETED BY SB 3110)	0150	2
	11F	. . CLAMP, (ADDED BY SB 2981 AND DELETED BY SB 3110)	0150	4

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
11B 11G	TVA1308	.	.	CAPACITOR, (V56289) (ADDED BY SB 2981 AND	.	.	.	.	0150	4
		.	.	DELETED BY SB 3110)	.	.	.	.		
13	3790	.	.	RESISTOR, 330 OHM 10 WATT (V44655).	.	.	.	.	0150	4
14	N05	.	.	BRACKET, SPRING-GRIP TYPE MOUNTING (V44655)	.	.	.	.	0150	8
		.	.	ATTACHING PARTS	.	.	.	.		
	NAS600-7	.	.	SCREW	.	.	.	.	0103	8
	NAS600-8	.	.	SCREW, (ADDED BY SB 2166)	.	.	.	.	0450	8
	AN960-4L	.	.	WASHER, (ADDED BY SB 2166)	.	.	.	.	0450	8
	NAS679A04W	.	.	NUT, (ADDED BY SB 2166)	.	.	.	.	0450	8
		.	.	-----*	.	.	.	.		
15	50-9339-45	.	.	SHIELD ASSY, STATION 336 J4 RELAY (SEE FIG. 12)	.	.	.	.	0150	1
		.	.	COMMUNICATIONS, (SEE 23-4, FIG. 12A)	.	.	.	.	0150	
		.	.	FIRE PROTECTION, (SEE 26-1, FIG. 33 AND 34)	.	.	.	.	0150	
		.	.	FLIGHT CONTROLS, (SEE 27-7, FIG. 57)	.	.	.	.	0150	
		.	.	ICE AND RAIN PROTECTION, (SEE 30-3, FIG. 6)	.	.	.	.	0150	
		.	.	LIGHTS, (SEE 33-4, FIG. 70B)	.	.	.	.	0150	
		.	.	REQUIRED PLACARDS, (SEE 11-2, FIG. 126)	.	.	.	.	0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

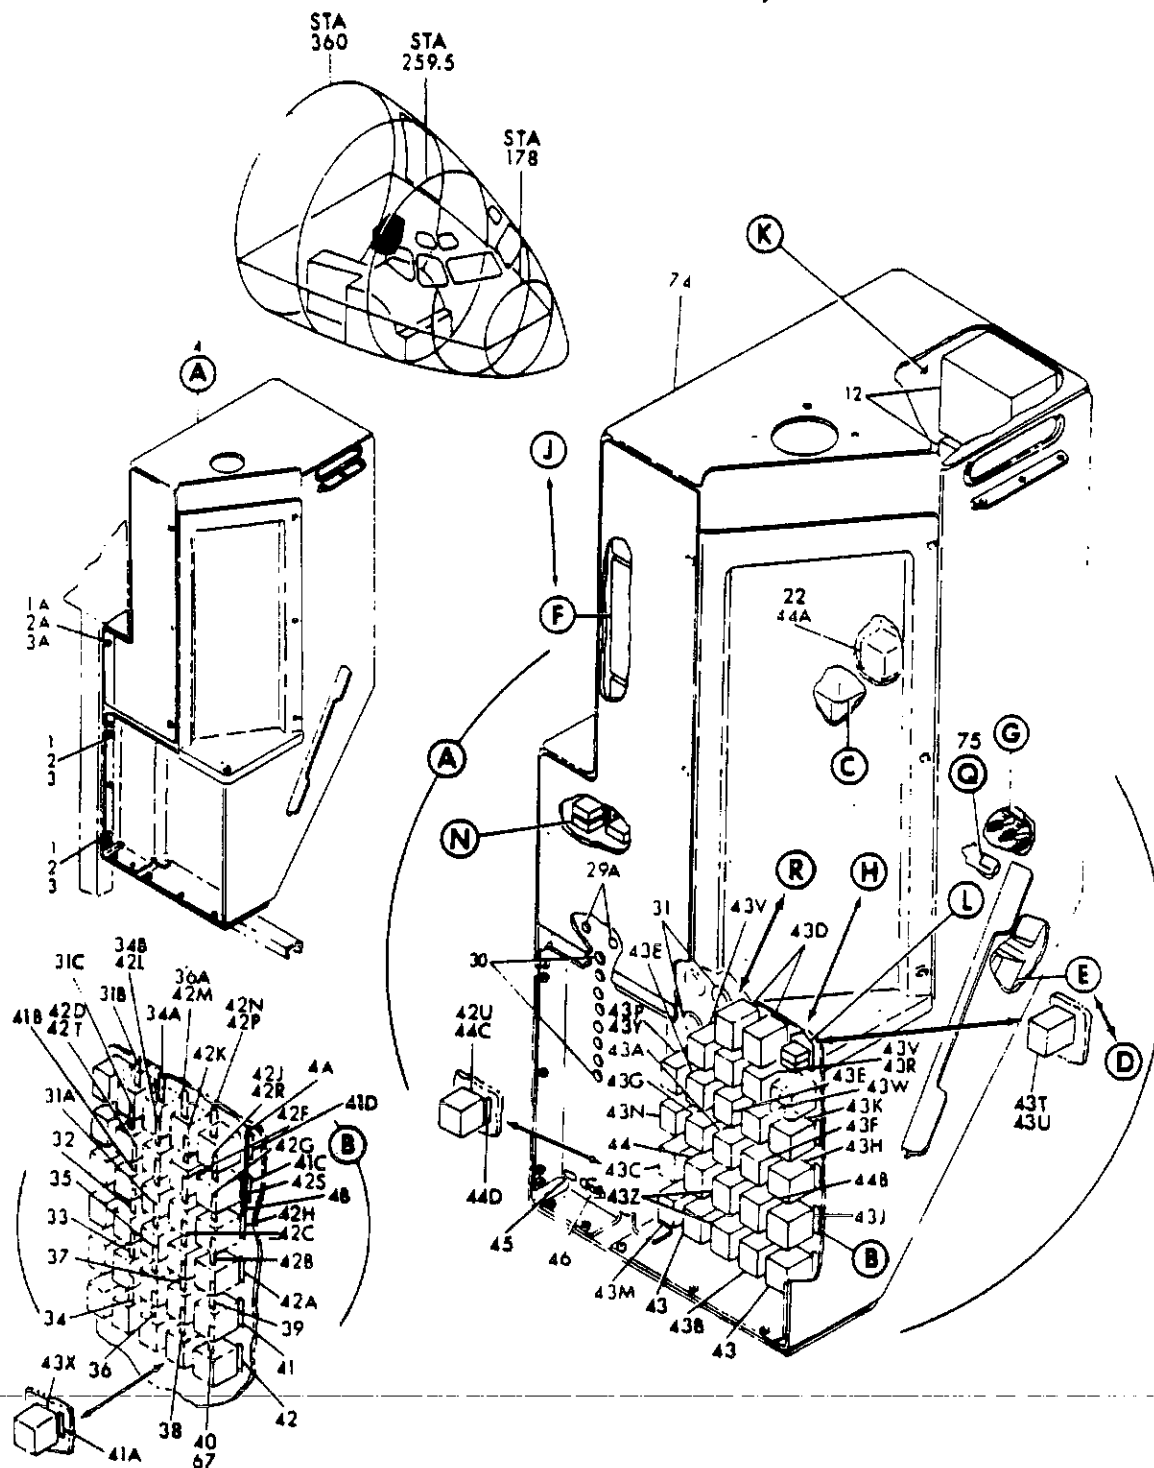


FIGURE 11N. SHIELD INSTL. STATION 335 J27 ELECTRICAL EQUIPMENT (SHEET 1)

DETAILED PARTS LIST
24-06-11N
PAGE 0

24-06-11N

NOV 21/90

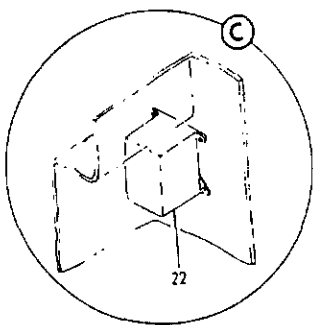


FIGURE 11N. SHIELD INSTL, STATION 335 J27 ELECTRICAL EQUIPMENT (SHEET 2)

NOV 21/90

24-06-117

DETAILED PARTS LIST
24-06-11N
PAGE 1

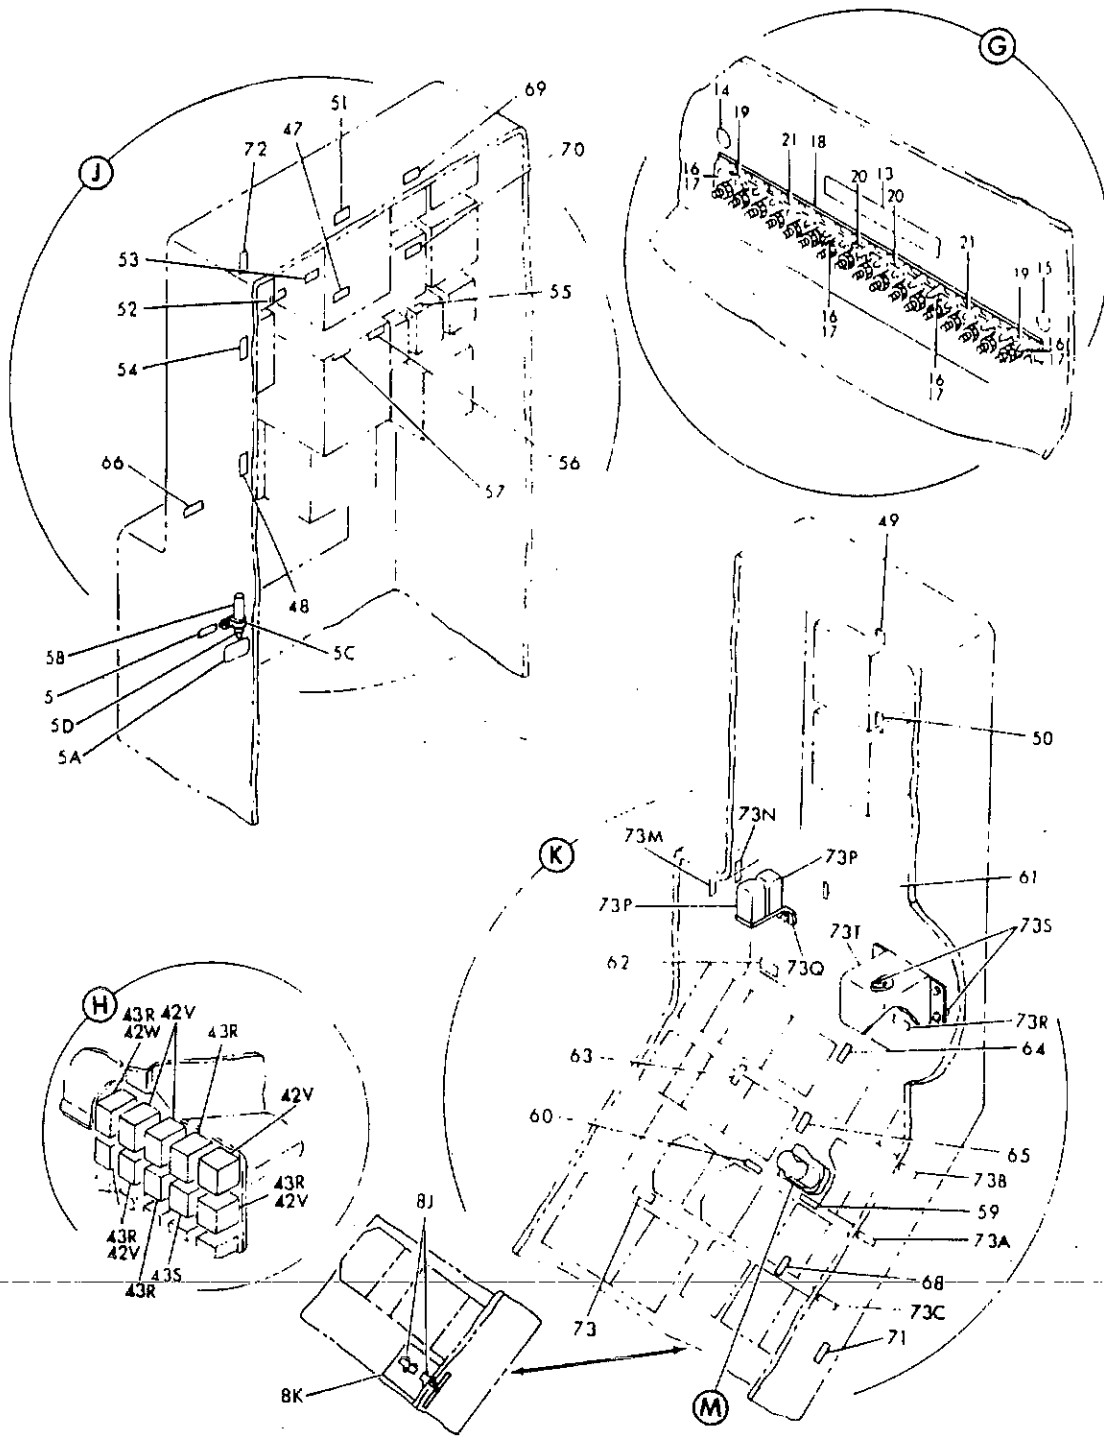


FIGURE 11N. SHIELD INSTL, STATION 335 J27 ELECTRICAL EQUIPMENT (SHEET 3)

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
11N	65-58627-1	SHIELD INSTL, STATION 335 J27 ELECTRICAL EQUIPMENT. . . (VARIABLE DWG; 65-58627-5005) (SEE 24-3, FIG. 1C, ITEM 3)	5199	RF
1	BACS12CB3-12	. SCREW	5199	2
1A	BACS12CB3-16	. SCREW	5199	1
2	BACS18K10-20W	. SPACER.	5199	2
2A	BACS18K10-47W	. SPACER.	5199	1
3	BACN10JC3	. NUT	5199	2
3A	BACN10JC3	. NUT	5199	1
4	65-58627-18	. SHIELD ASSY, (ELECTRICAL POWER ONLY).	5199	1
		ATTACHING PARTS		
	BACS12CB3-10	. SCREW	5199	6
	AN970-3	. WASHER.	5199	6
	BACN10JC3	. NUT	5199	6
6	10-3260-6	. AUTOTRANSFORMER	5199	2
		ATTACHING PARTS		
	NAS603-10P	. SCREW	5199	8
8	5970	. AUTOTRANSFORMER, 400 CYCLE 0.05 KVA 28 VOLT SEC . . . (V95266)	5199	3
		ATTACHING PARTS		
	NAS603-8P	. SCREW	5199	12
8A	9207	. TRANSFORMER, (V95266) (DELETED BY SB 3363).	5199	2
		ATTACHING PARTS		
	NAS602-8P	. SCREW	5199	4
8B	12433	. TRANSFORMER, (V95266)	5199	2
		ATTACHING PARTS		
	NAS603-10P	. SCREW	5199	8
8G	965-3025-001	. RELAY, (V97896) (ADDED BY SB 3363).	5199	5
		ATTACHING PARTS		
	NAS514P832-7	. SCREW	5199	15
	BACN10JC08	. NUT	5199	15
8H	65C21742-3	. PLATE, MOUNTING (ADDED BY SB 3363).	5199	1
		ATTACHING PARTS		
	NAS1801-08-8	. SCREW	5199	4
10	10-3254	. AUTOTRANSFORMER, 115 TO 28 VOLTS.	5199	4
11C	12627	. TRANSFORMER, (V95266)	5199	1
11D	12627	. TRANSFORMER, (V95266)	5199	1
12	10-3310-2	. TRANSFORMER, 115 TO 28 VOLTS.	5199	3
		ATTACHING PARTS		
	NAS603-10P	. SCREW	5199	24
12A	6042H33	. RELAY, (V27193)	5199	1
		ATTACHING PARTS		
	NAS603-10P	. SCREW	5199	4
	BACN10FX1	. NUT	5199	4
13	BAC27CEE117	. MARKER, T367 ALUMINUM FOIL.	5199	1
14	BACM10N002S	. MARKER, 1 ALUMINUM FOIL	5199	1
15	BACM10N002MB	. MARKER, 16 ALUMINUM FOIL.	5199	1
16	NAS600-5P	. SCREW	5199	4
17	BACN10JC04	. NUT	5199	4
18	MS27212-1-16	. TERMINAL BOARD.	5199	1
19	MS25227-1A	. STRIP, INSULATING	5199	2
20	MS25227-2A	. STRIP, INSULATING	5199	2
21	MS25226-2-6	. LINK, TERMINAL CONNECTOR.	5199	2
22	MS24143-1	. RELAY	5199	1
		(OPTIONAL AND FOR REPLACEMENT ORDER MS24143D1)		
	MS24143D1	. RELAY	5199	1
		(OPTIONAL TO AND REPLACEMENT FOR MS24143-1)		
		ATTACHING PARTS		
	NAS603-8P	. SCREW	5199	4
23	MS24140D2	. RELAY	5199	2
		ATTACHING PARTS		
	NAS602-10P	. SCREW	5199	4
		MISSING ITEM NUMBERS ARE NOT APPLICABLE		



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
11N 24	DR18E1	. . .	RELAY, (V74063) (OPTIONAL AND FOR REPLACEMENT ORDER DR18E5 (V74063))	5199	2
24	DR18E5	. . .	RELAY, (V74063) (OPTIONAL TO AND REPLACEMENT FOR DR18E1 (V74063))	5199	2
	NAS602-10P	. . .	ATTACHING PARTS SCREW	5199	8
26	9274-6686	. . .	RELAY, (V35344) ATTACHING PARTS	5199	2
	NAS602-8P	. . .	SCREW	5199	4
28A	BACR13CF2AB	. . .	RELAY, (ADDED BY SB 3404)	5199	3
30	BACP20B43	. . .	PLUG	5199	AR
31	BACP20B31	. . .	PLUG	5199	AR
31A	BAC27CEE508	. . .	MARKER, R597 ALUMINUM FOIL	5199	1
31B	BAC27CEE850	. . .	MARKER, R788 ALUMINUM FOIL	5199	1
32	BAC27CEE111	. . .	MARKER, R382 ALUMINUM FOIL	5199	1
33	BAC27CEE110	. . .	MARKER, R503 ALUMINUM FOIL	5199	1
34	BAC27CEE109	. . .	MARKER, R495 ALUMINUM FOIL	5199	1
35	BAC27CEE108	. . .	MARKER, R401 ALUMINUM FOIL	5199	1
36	BAC27CEE107	. . .	MARKER, R442 ALUMINUM FOIL	5199	1
37	BAC27CEE106	. . .	MARKER, R439 ALUMINUM FOIL	5199	1
38	BAC27CEE105	. . .	MARKER, R438 ALUMINUM FOIL	5199	1
39	BAC27CEE104	. . .	MARKER, R324 ALUMINUM FOIL	5199	1
41	BAC27CEE528	. . .	MARKER, R609 ALUMINUM FOIL	5199	1
42	BAC27CEE101	. . .	MARKER, R14 ALUMINUM FOIL	5199	1
42A	BAC27CEE320	. . .	MARKER, R508 ALUMINUM FOIL	5199	1
42B	BAC27CEE398	. . .	MARKER, R72 ALUMINUM FOIL	5199	1
42C	BAC27CEE399	. . .	MARKER, R447 ALUMINUM FOIL	5199	1
42D	BAC27CEE646	. . .	MARKER-ALUMINUM FOIL, R778	5199	1
42E	BAC27CEE-648	. . .	MARKER-ALUMINUM FOIL, R646	5199	1
42F	BAC27CEE618	. . .	MARKER-ALUMINUM FOIL, R652	5199	1
42G	BAC27CEE403	. . .	MARKER, R506 ALUMINUM FOIL	5199	1
42H	BAC27CEE617	. . .	MARKER-ALUMINUM FOIL, R651	5199	1
42R	BAC27CEE825	. . .	MARKER, R828 ALUMINUM FOIL	5199	1
43	10-60450-1	. . .	RELAY, 28V DC COIL	5199	2
43A	10-60450-1	. . .	RELAY, 28V DC COIL	5199	1
43C	10-60450-1	. . .	RELAY, 28V DC COIL	5199	1
43E	10-60450-1	. . .	RELAY, 28V DC COIL	5199	2
43F	10-60450-1	. . .	RELAY, 28V DC COIL	5199	1
43G	10-60450-1	. . .	RELAY, 28V DC COIL	5199	1
43H	10-60450-1	. . .	RELAY, 28V DC COIL	5199	1
43J	10-60450-1	. . .	RELAY, 28V DC COIL	5199	1
43K	10-60450-1	. . .	RELAY, 28V DC COIL	5199	1
43M	10-60450-1	. . .	RELAY, 28V DC COIL	5199	1
43N	10-60450-1	. . .	RELAY, 28V DC COIL	5199	1
43P	10-60450-1	. . .	RELAY, 28V DC COIL	5199	1
43S	10-60450-1	. . .	RELAY, 28V DC COIL	5199	1
43W	10-60450-1	. . .	RELAY, 28V DC COIL	5199	1
43Z	10-60450-1	. . .	RELAY, 28V DC COIL	5199	2
44	10-60450-2	. . .	RELAY, PLUG-IN 4 PDT 10 AMP 115V AC	5199	1
	BACN10JC06	. . .	ATTACHING PARTS NUT	5199	42
	BACN10JC06	. . .	NUT	5199	15
44B	10-60450-2	. . .	RELAY, PLUG-IN 4 PDT 10 AMP 115V AC	5199	1
45	BACM10L20-18PF	. . .	MARKER-ALUMINUM FOIL, 115V DC 400 CYCLE OUTLET	5199	1
45A	NAS1801-06-22	. . .	SCREW, (ADDED BY SB 3404)	5199	6
45B	NAS43001-64	. . .	SPACER, (ADDED BY SB 3404)	5199	6
45C	BACN10JC06	. . .	NUT, (ADDED BY SB 3404)	5199	6
45D	69-58624-17	. . .	BRACKET, RELAY SUPPORT (ADDED BY SB 3404)	5199	2
46	5258	. . .	RECEPTACLE, (V74545)	5199	1
	NAS602-4P	. . .	ATTACHING PARTS SCREW	5199	2
	AN960-BL	. . .	WASHER	5199	2
	MS35333-4	. . .	WASHER	5199	2
67A	BAC27CEE2566	. . .	DECAL, R1046 (ADDED BY SB 3404)	5199	1
67B	BAC27CEE2567	. . .	DECAL, R1047 (ADDED BY SB 3404)	5199	1
67C	BAC27DEX4471	. . .	DECAL, R1048 (ADDED BY SB 3404)	5199	1
74	65-58622-31	. . .	SHIELD ASSY, (SEE FIG. 15D)	5199	1
		. . .	ICE AND RAIN PROTECTION, (SEE 30-3, FIG. 6D)	5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

RAF
NOV 21/90

24-06-11N

DETAILED PARTS LIST
24-06-11N
PAGE 5

Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
11N		. . LIGHTS, (SEE 33-4, FIG. 70F). REQUIRED PLACARDS, (SEE 11-2, FIG. 127)							5199 5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

DETAILED PARTS LIST
24-06-11N
PAGE 6

24-06-11N

RAF
NOV 21/90

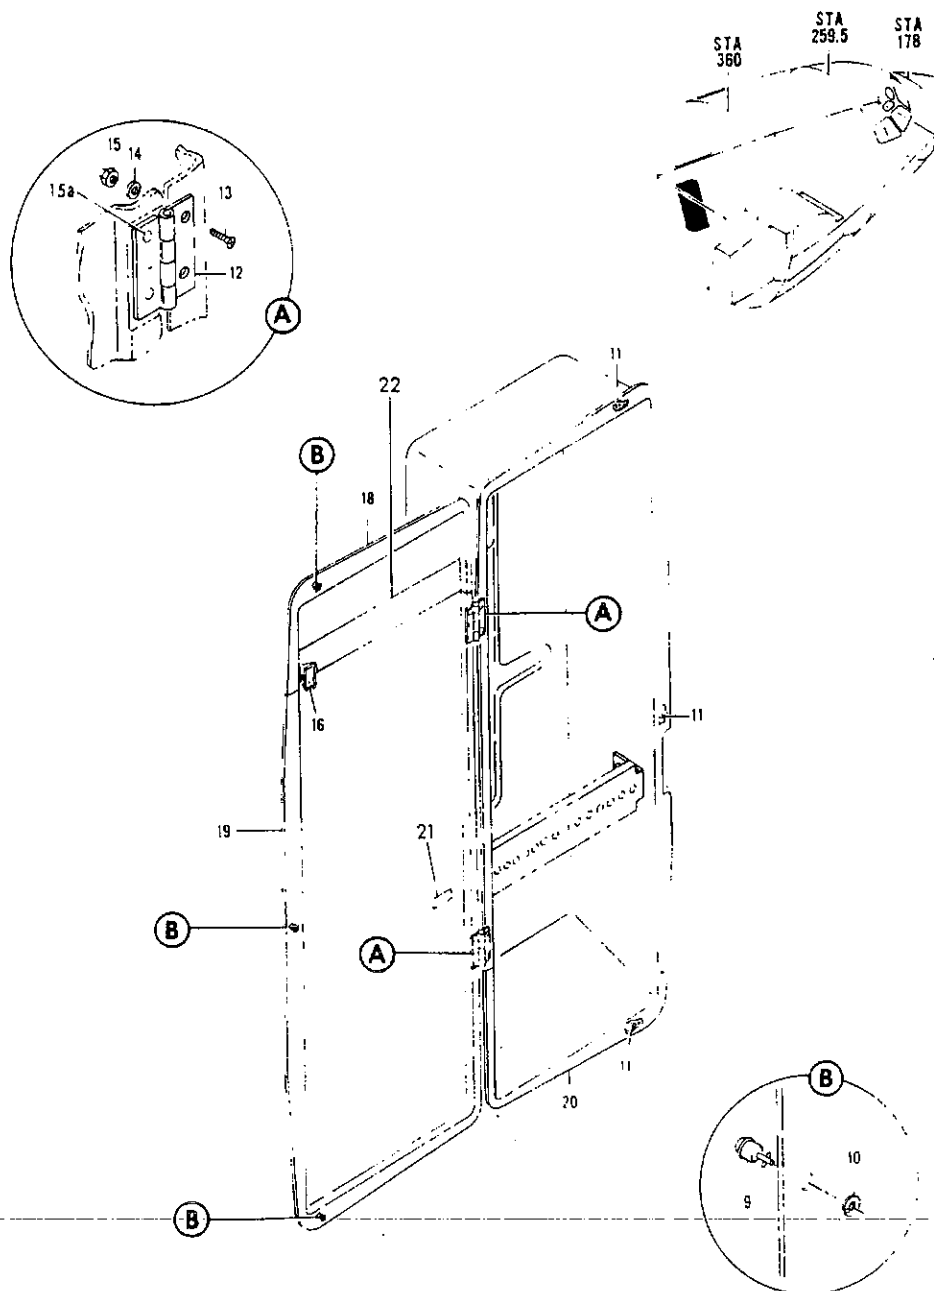


FIGURE 12. SHIELD ASSY, STATION 336 J4 RELAY



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
R 12	50-9339-45	SHIELD ASSY, STATION 336 J4 RELAY (SEE FIG. 5, ITEM 20, FIG. 7, ITEM 19, FIG. 9, ITEM 15, FIG. 11, ITEM 16, FIG. 11A, ITEM 16, FIG. 11B, ITEM 15, FIG. 11R, ITEM 17 AND FIG. 11T, ITEM 13)	0150	RF
R 9	BACR21Y4R	. STUD ASSY	0150	3
R 10	BACW10-4	. WASHER	0150	3
R 11	BACR11Y3A	. RECEPTACLE	0150	3
R 12	50-9339-3	. HINGE, STATION 336 J4 RELAY SHIELD (ALTERED FROM. AN257-4-300)	0150	2
R 13	NAS514P1032-7	ATTACHING PARTS		
R 14	AN960-10L	. SCREW	0150	4
R 15	NAS679A3W	. WASHER	0150	4
R 15A	MS20426A4N	. NUT	0150	4
R 16	50-9339-10	. RIVET	0150	6
R 18	50-9339-7	. HINGE, STATION 336 J4 RELAY SHIELD (ALTERED FROM. AN257-3-1200)	0150	1
R 19	50-9339-39	. COVER, STATION 336 J4 RELAY SHIELD UPPER.	0150	1
R 20	50-9339-46	. COVER, STATION 336 J4 RELAY LOWER	0150	1
		. SHIELD, STATION 336 J4 RELAY.	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

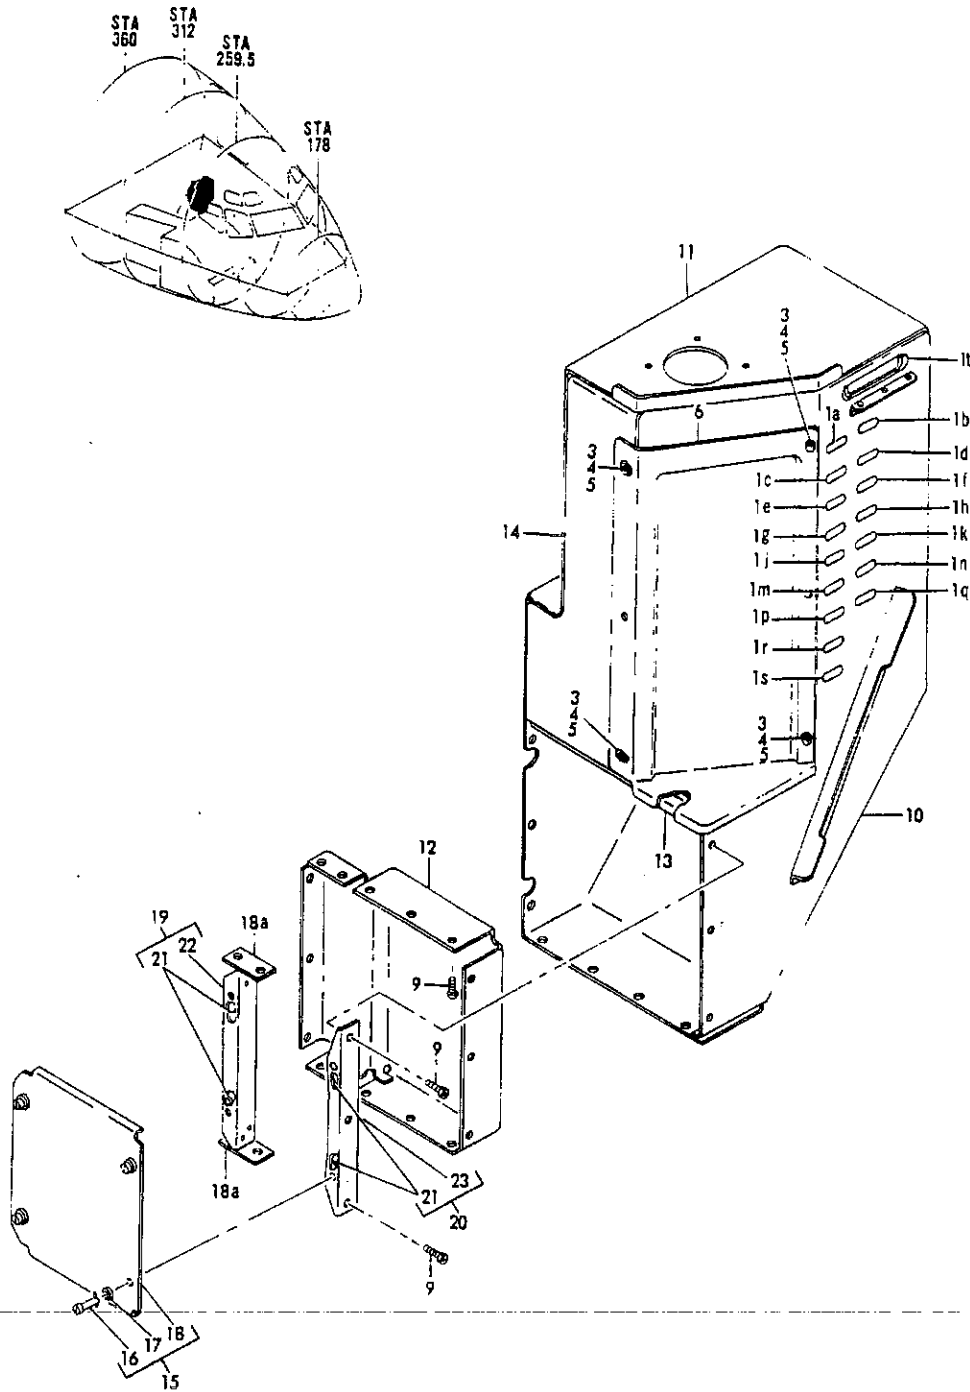


FIGURE 150, SHIELD ASSY, J27

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
15D	65-58622-31	SHIELD ASSY, J27 (SEE FIG. 11N, ITEM 74)	5199	RF
1A	BAC27CEE64	. DECAL, J27-A.	5199	1
1B	BAC27CEE65	. DECAL, J27-B.	5199	1
1C	BAC27CEE66	. DECAL, J27-C.	5199	1
1D	BAC27CEE67	. DECAL, J27-D.	5199	1
1E	BAC27CEE112	. DECAL, J27-E.	5199	1
1F	BAC27CEE113	. DECAL, J27-F.	5199	1
1G	BAC27CEE114	. DECAL, J27-G.	5199	1
1H	BAC27CEE127	. DECAL, J27-H.	5199	1
1J	BAC27CEE142	. DECAL, J27-J.	5199	1
1K	BAC27CEE165	. DECAL, J27-K.	5199	1
1M	BAC27CEE166	. DECAL, J27-L.	5199	1
1N	BAC27CEE167	. DECAL, J27-M.	5199	1
1P	BAC27CEE168	. DECAL, J27-N.	5199	1
1Q	BAC27CEE169	. DECAL, J27-P.	5199	1
1R	BAC27CEE282	. DECAL, J27-R.	5199	1
1S	BAC27CEE283	. DECAL, J27-S.	5199	1
1T	BACG20ZA630	. GROMMET	5199	1
3	BACS21Y5R	. STUD.	5199	4
4	BACW10X4	. WASHER.	5199	4
5	BACR11Y2	. RECEPTACLE.	5199	4
6	65-58622-5	. COVER	5199	1
9	NAS1068A3	. SCREW	5199	16
10	65-58622-3	. COVER	5199	1
11	65-58622-32	. BOX	5199	1
12	65-58622-35	. CHASSIS, RELAY.	5199	1
13	65-58622-17	. CHANNEL ASSY.	5199	1
14	65-58622-4	. PANEL	5199	1
15	65-58622-23	. COVER ASSY.	5199	1
16	BACS21Y3R	. STUD.	5199	4
17	BACW10X4	. WASHER.	5199	4
18	65-58622-22	. COVER	5199	1
18A	65-58622-30	. TEE	5199	2
		ATTACHING PARTS		
	BACS12C808-7	. SCREW	5199	4
	NAS679A08W	. NUT	5199	4
		-----*		
19	65-58622-26	. ANGLE ASSY.	5199	1
20	65-58622-29	. ANGLE ASSY.	5199	1
21	BACR11Y2D	. RECEPTACLE.	5199	2
22	65-58622-25	. ANGLE, (USED ON 65-58622-26).	5199	1
23	65-58622-28	. ANGLE, (USED ON 65-58622-29).	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

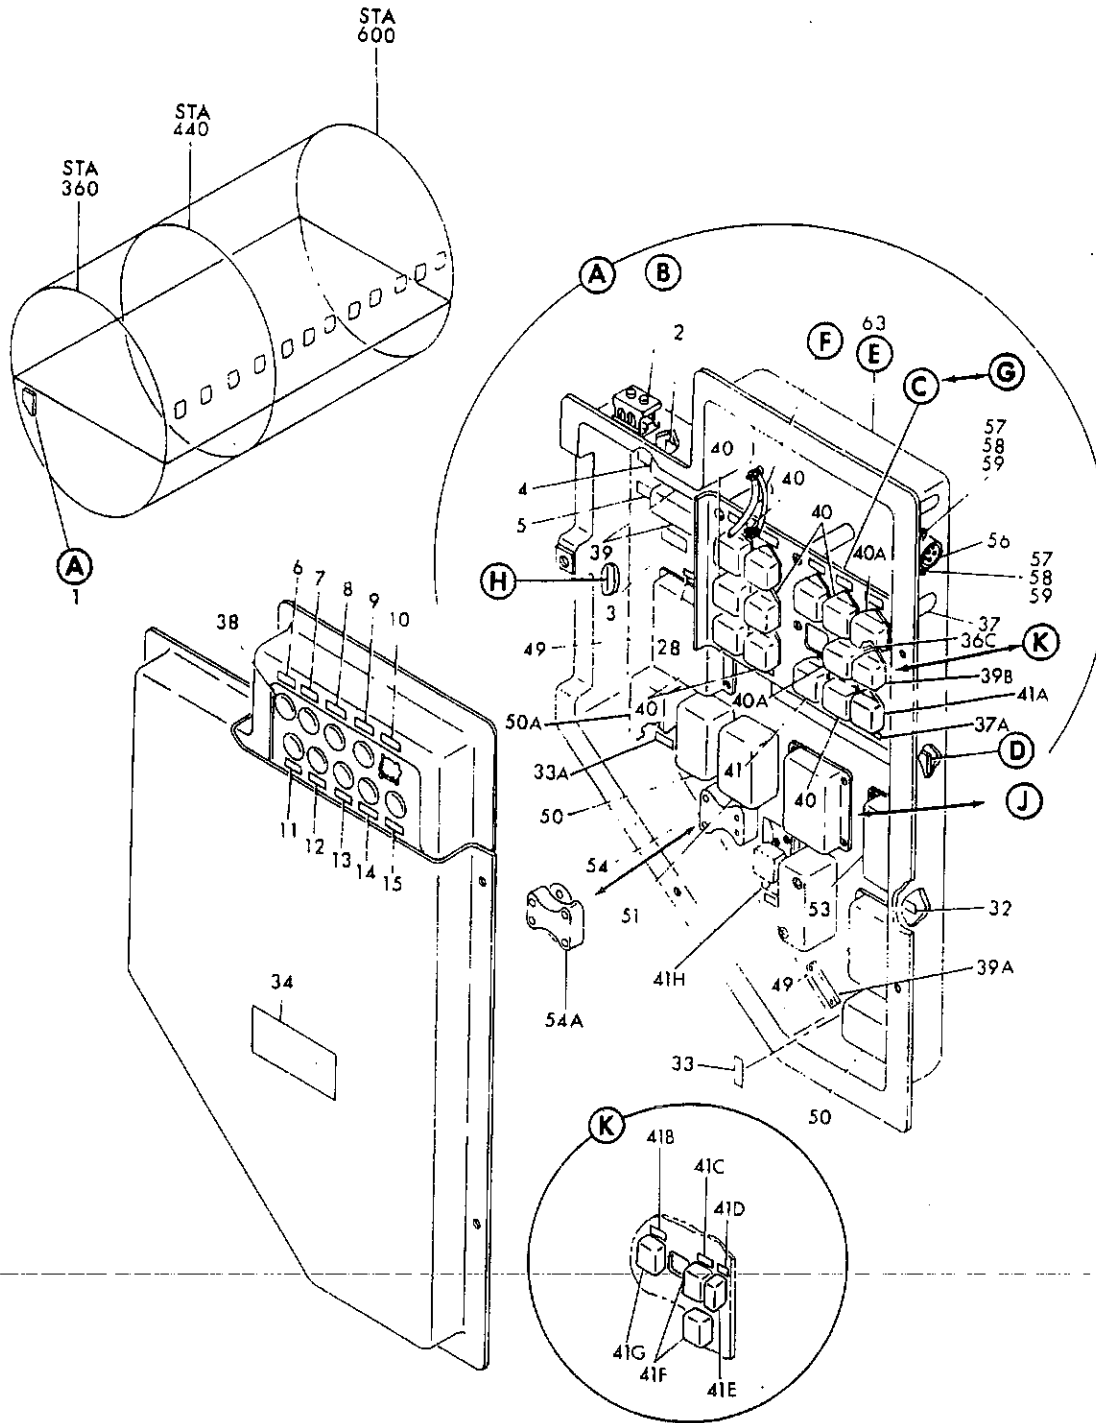


FIGURE 18E. PANEL INSTL. STATION 360 J2 RELAY (SHEET 1)

DETAILED PARTS LIST
24-06-18E
PAGE 0

24-06-18E

NOV 21/90

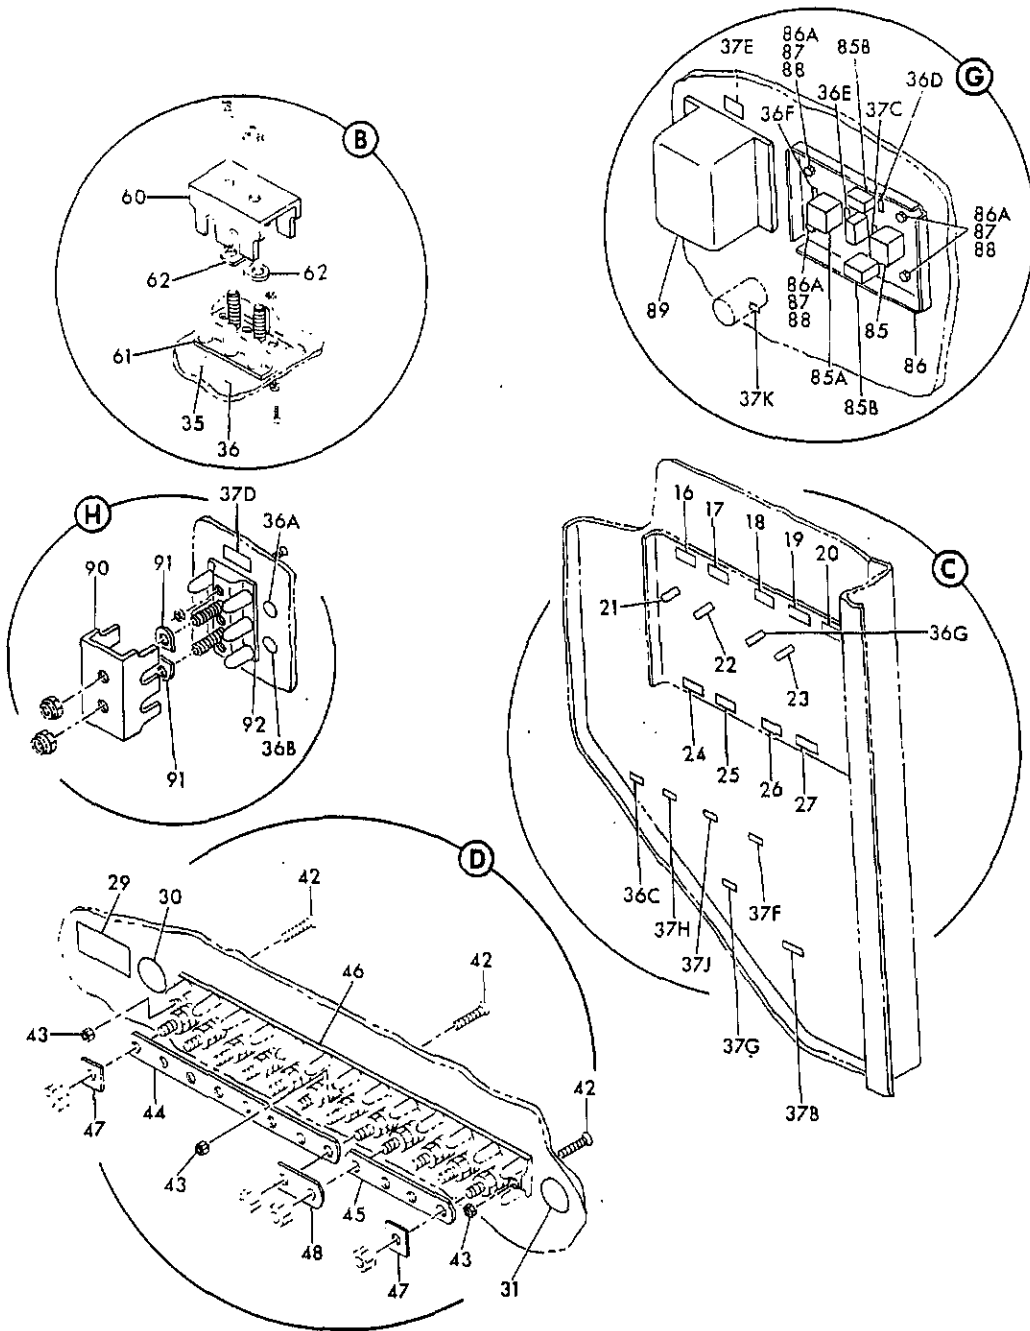


FIGURE 18E. PANEL INSTL. STATION 360 J2 RELAY (SHEET 2)

NOV 21/90

24-06-18E

DETAILED PARTS LIST
24-06-18E
PAGE 1

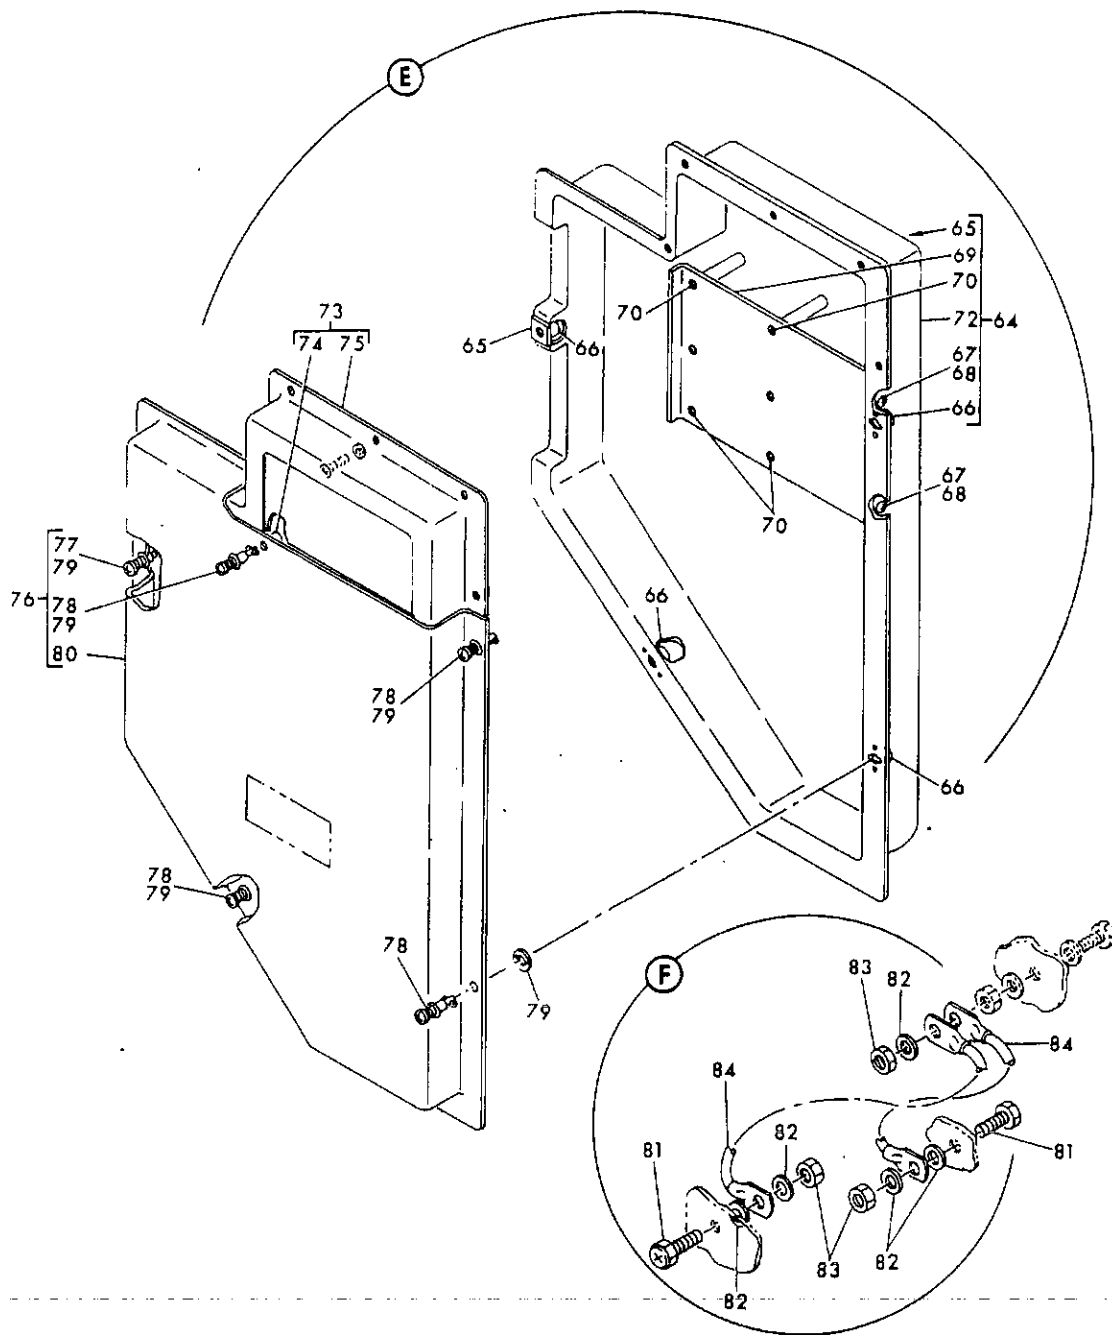


FIGURE 18E. PANEL INSTL, STATION 360 J2 RELAY (SHEET 3)

DETAILED PARTS LIST
24-06-18E
PAGE 2

24-06-18E

NOV 21/90

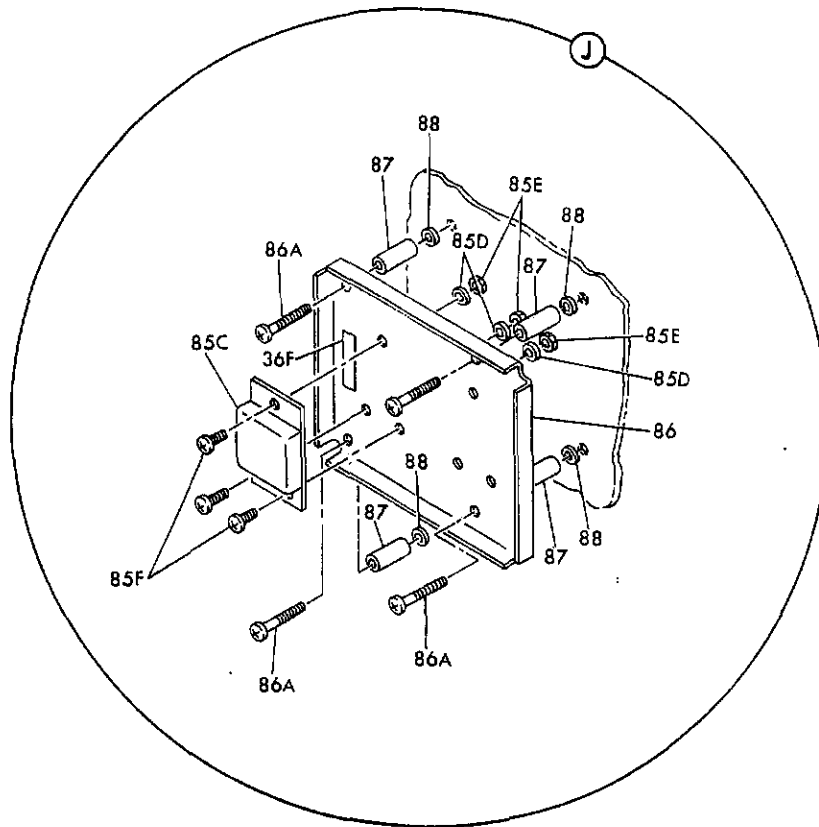


FIGURE 18E. PANEL INSTL, STATION 360 J2 RELAY (SHEET 4)

NOV 21/90

24-06-18E

DETAILED PARTS LIST
24-06-18E
PAGE 3

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
18E	65-58612-1		PANEL INSTL, STATION 360 J2 RELAY (VARIABLE DWG ;65-58612-5006) (SEE 24-3, FIG. 1A, ITEM 8 AND 24-3, FIG. 1C, ITEM 6)	5199	RF
1	65-58612-16		. PANEL ASSY, (ELECTRICAL POWER ONLY)	5199	1
2	BACM10E10-2CH		. . . MARKER-ALUMINUM FOIL, ENGINE NO. 3.	5199	1
3	BACM10E10-2CJ		. . . MARKER-ALUMINUM FOIL, ENGINE NO. 4.	5199	1
4	BAC27CEE59		. . . MARKER-ALUMINUM FOIL, R164.	5199	1
5	BAC27CEE60		. . . MARKER-ALUMINUM FOIL, R165.	5199	1
6	BAC27CEE134		. . . DECAL, J2E.	5199	1
7	BAC27CEE133		. . . DECAL, J2D.	5199	1
8	BAC27CEE132		. . . DECAL, J2C.	5199	1
9	BAC27CEE131		. . . DECAL, J2B.	5199	1
10	BAC27CEE130		. . . DECAL, J2A.	5199	1
11	BAC27CEE135		. . . DECAL, J2F.	5199	1
12	BAC27CEE139		. . . DECAL, J2K.	5199	1
13	BAC27CEE138		. . . DECAL, J2J.	5199	1
14	BAC27CEE137		. . . DECAL, J2H.	5199	1
15	BAC27CEE136		. . . DECAL, J2G.	5199	1
16	BAC27CEE71		. . . MARKER-ALUMINUM FOIL, R62.	5199	1
17	BAC27CEE72		. . . MARKER-ALUMINUM FOIL, R63.	5199	1
18	BAC27CEE73		. . . MARKER-ALUMINUM FOIL, R64.	5199	1
19	BAC27CEE74		. . . MARKER-ALUMINUM FOIL, R65.	5199	1
20	BAC27CEE76		. . . MARKER-ALUMINUM FOIL, R441.	5199	1
21	BAC27CEE81		. . . MARKER-ALUMINUM FOIL, R565.	5199	1
22	BAC27CEE80		. . . MARKER-ALUMINUM FOIL, R564.	5199	1
23	BAC27CEE75		. . . MARKER-ALUMINUM FOIL, R440.	5199	1
24	BAC27CEE82		. . . MARKER-ALUMINUM FOIL, R566.	5199	1
25	BAC27CEE83		. . . MARKER-ALUMINUM FOIL, R570.	5199	1
26	BAC27CEE84		. . . MARKER-ALUMINUM FOIL, R571.	5199	1
27	BAC27CEE37		. . . MARKER-ALUMINUM FOIL, R431.	5199	1
28	BAC27CEE62		. . . MARKER-ALUMINUM FOIL, R301.	5199	1
29	BAC27CEE116		. . . MARKER-ALUMINUM FOIL, T366.	5199	1
30	BACM10N002S		. . . MARKER-ALUMINUM FOIL, 1.	5199	1
31	BACM10N002FU		. . . MARKER-ALUMINUM FOIL, 12.	5199	1
32	BAC27CEE63		. . . MARKER-ALUMINUM FOIL, R302.	5199	1
33	BAC27CEE373		. . . MARKER-ALUMINUM FOIL, R587.	5199	1
34	BACM10W31-2UT		. . . MARKER-ALUMINUM FOIL, WARNING 200/115 VOLTS	5199	1
35	BACM10N00-2AAS		. . . MARKER-ALUMINUM FOIL, 2.	5199	1
36	BACM10N00-2PP		. . . MARKER-ALUMINUM FOIL, 1.	5199	1
37	BAC27CEE57		. . . MARKER-ALUMINUM FOIL, D415.	5199	1
37A	BAC27CEE425		. . . MARKER-ALUMINUM FOIL, R430.	5199	1
38	BACP20B31		. . . PLUG.	5199	AR
39	AN5534-2		. . . RESISTOR.	5199	2
	NAS602-10P		. . . ATTACHING PARTS SCREW	5199	4
40	10-60450-1		. . . RELAY, PLUG-IN 28 VDC COIL.	5199	9
40A	10-60450-1		. . . RELAY, PLUG-IN 28 VDC COIL.	5199	2
41	10-60450-2		. . . RELAY, PLUG-IN 115 VAC COIL.	5199	1
	BACN10JC06		. . . ATTACHING PARTS NUT	5199	36
41A	10-60450-1		. . . RELAY, PLUG-IN 28 VDC COIL.	5199	1
	BACN10JC06		. . . ATTACHING PARTS NUT	5199	3
42	NAS600-5P		. . . SCREW	5199	3
43	BACN10JC04		. . . NUT	5199	3
44	MS25226-2-8		. . . LINK.	5199	1
45	MS25226-2-4		. . . LINK.	5199	1
46	MS27212-1-12		. . . TERMINAL BOARD ASSY	5199	1
47	MS25227-1A		. . . STRIP	5199	2
48	MS25227-2A		. . . STRIP	5199	1
49	MS24168D1		. . . RELAY	5199	2
	NAS603-7P		. . . ATTACHING PARTS SCREW	5199	8
50	G60668		. . . RELAY, (V73949)	5199	2
50A	G60668		. . . RELAY, (V73949)	5199	1
51	G60144		. . . RELAY, (V73949)	5199	1
	NAS602-6P		. . . ATTACHING PARTS SCREW	5199	6
	NAS602-6P		. . . SCREW	5199	2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
18E 52	9123-8071	RELAY, (V35344) (OPTIONALS 6042H110, 6042H32 (V27193))	5199	1
52	6042H110	RELAY, (V27193) (OPTIONAL TO 9123-8071 (V35344))	5199	1
52	6042H32	RELAY, (V27193) (OPTIONAL TO 9123-8071 (V35344))	5199	1
53	MS24143D1	RELAY (OPTIONAL MS24143-1)	5199	1
53	MS24143-1	RELAY (OPTIONAL TO MS24143D1)	5199	1
	NAS603-7P	ATTACHING PARTS	5199	4
	NAS603-7P	SCREW	5199	4
54	MS24181D1	RELAY	5199	1
	NAS603-7P	ATTACHING PARTS	5199	2
55	965-3000-008	RELAY, (V97896)	5199	1
	NAS602-6P	ATTACHING PARTS	5199	2
56	5258	RECEPTACLE, (V74545)	5199	1
57	NAS602-4P	SCREW	5199	2
58	MS35333-4	WASHER	5199	2
59	AN960-8L	WASHER	5199	2
60	BACC50C18A	COVER ASSY.	5199	1
61	MS27212-2-2	TERMINAL BOARD ASSY	5199	1
	NAS600-6P	ATTACHING PARTS	5199	2
	AN960-4L	SCREW	5199	2
	NAS679A04W	WASHER	5199	2
62	MS25227-3	NUT	5199	2
63	50-9340-39	STRIP	5199	1
64	50-9340-25	PANEL ASSY.	5199	1
65	50-9340-6	BOX ASSY.	5199	1
66	BACR11Y3A	FILLER	5199	4
67	BACS12CB3-7	RECEPTACLE	5199	2
68	AN960-10L	SCREW	5199	2
69	69-46522-1	WASHER	5199	1
70	BACS12CB3-39	PLATE, MOUNTING	5199	6
72	50-9340-42	ATTACHING PARTS	5199	1
73	50-9340-40	SCREW	5199	1
74	BACR11Y3A	BOX	5199	1
75	50-9340-30	COVER ASSY, UPPER	5199	1
	NAS603-5P	RECEPTACLE	5199	5
	AN960-10L	COVER	5199	5
76	50-9340-27	ATTACHING PARTS	5199	1
77	BACS21Y8R	SCREW	5199	1
78	BACS21Y3R	STUD.	5199	4
79	BACW10X4	STUD.	5199	5
80	50-9340-28	WASHER	5199	1
81	BACS12CB3-10	COVER	5199	2
82	AN960D10L	SCREW	5199	5
83	NAS679A3W	WASHER	5199	3
84	BACJ40A20-6	NUT	5199	2
		JUMPER	5199	
		REQUIRED PLACARDS, (SEE 11-2, FIG. 137)	5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/90

24-06-18E

DETAILED PARTS LIST
24-06-18E
PAGE 5

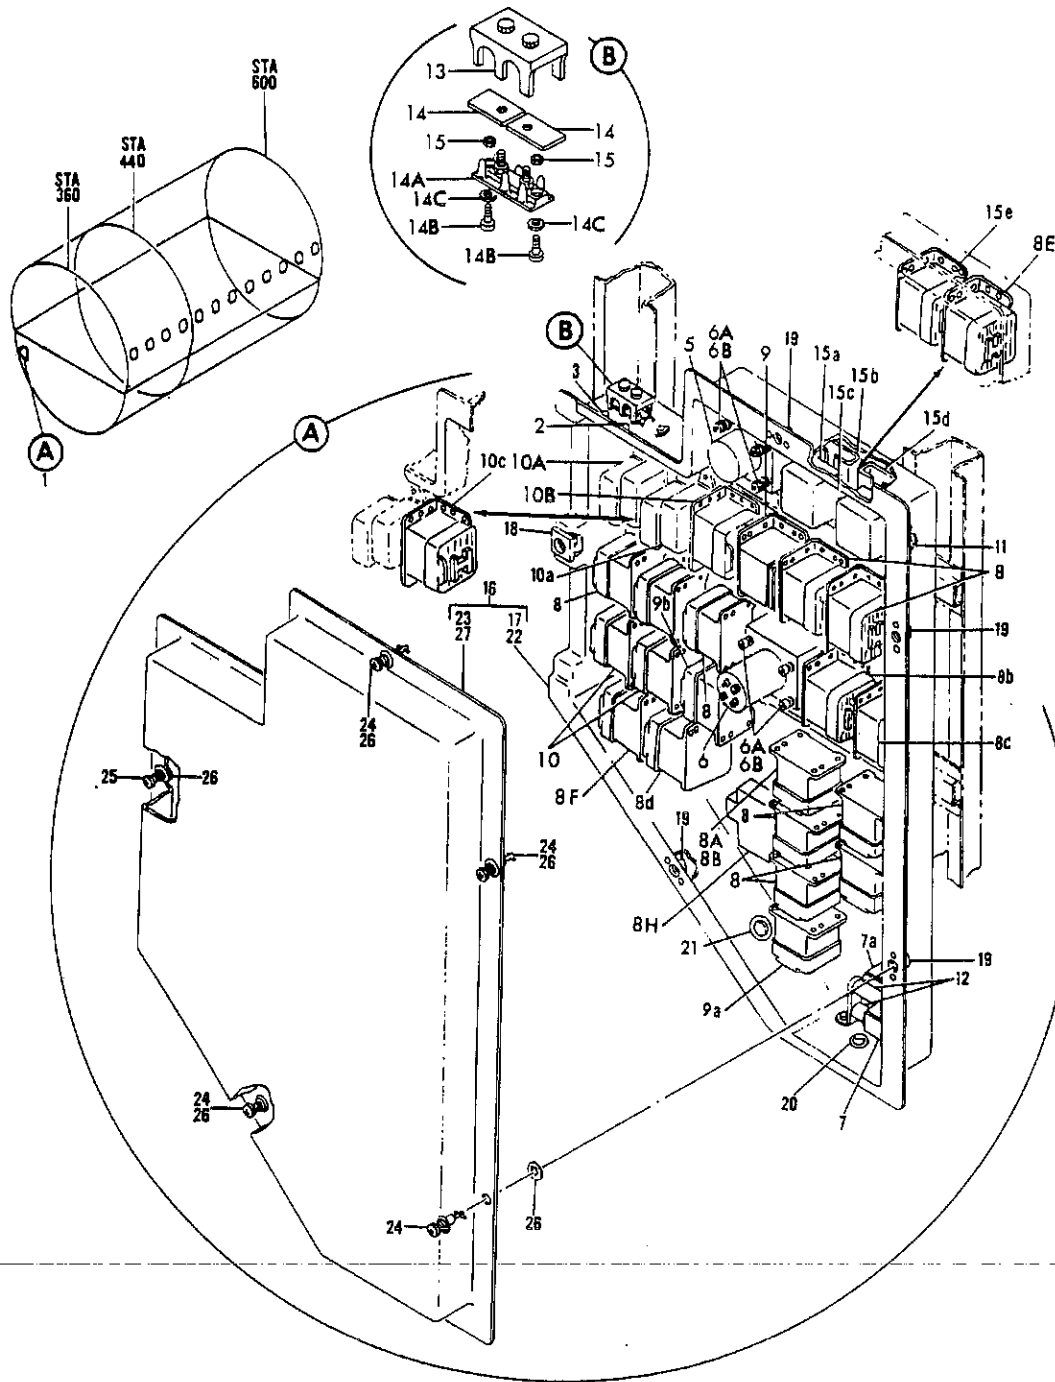


FIGURE 23A. PANEL INSTL, STATION 360 J2 RELAY

DETAILED PARTS LIST
24-06-23A
PAGE 0

24-06-23A

NOV 21/90

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 23A	50-8784	PANEL INSTL, STATION 360 J2 RELAY (SEE 24-3, FIG. 1A, .	0150	RF
R		ITEM 8, 24-3 FIG. 1B, ITEM 7 AND 24-3, FIG. 1C,		
R		ITEM 6)		
R 1	50-8784-1	. PANEL ASSY, (ELECTRICAL POWER ONLY)	0150	1
R		. ATTACHING PARTS		
R	NAS603-7	. SCREW	0150	7
R	AN960-10L	. WASHER.	0150	7
R		-----*		
R 2	BACM10N00-2PP	. . MARKER-ALUMINUM FOIL, 1	0150	1
R 3	BACM10N00-2AAS	. . MARKER-ALUMINUM FOIL, 2	0150	1
R 5	MS24143D1	. . RELAY	0150	1
R 6	9123-8071	. . RELAY, (V35344)	0150	1
R		. (OPTIONAL TO AND REPLACEMENT FOR 6042H32		
R		(V27193))		
R 6	6042H110	. . RELAY, (V27193)	0150	1
R		. (OPTIONAL TO AND REPLACEMENT FOR 6042H32		
R		(V27193))		
R 6	6042H32	. . RELAY, (V27193)	0150	1
R		. (OPTIONAL AND FOR REPLACEMENT ORDER 9123-8071		
R		(V35344) 6042H110 (V27193))		
R		. ATTACHING PARTS		
R 6B	NAS603-7P	. . SCREW	0150	4
R		-----*		
R 7	G57859	. . RELAY, (V73949)	0150	1
R		. ATTACHING PARTS		
R	NAS603-7P	. . SCREW	0150	2
R		-----*		
R 7A	G57859	. . RELAY, (V73949)	0150	1
R		. ATTACHING PARTS		
R	NAS603-7P	. . SCREW	0150	2
R		-----*		
R 8	10-3092	. . RELAY, HERMETICALLY SEALED 4PDT	0150	9
R		. ATTACHING PARTS		
R	NAS602-6P	. . SCREW	0150	18
R		-----*		
R 8A	10-3092	. . RELAY, HERMETICALLY SEALED 4PDT	0250	1
R		. ATTACHING PARTS		
R	NAS602-6P	. . SCREW	0250	2
R		-----*		
R 8C	10-3092	. . RELAY, HERMETICALLY SEALED 4PDT	0150	1
R		. ATTACHING PARTS		
R	NAS602-6P	. . SCREW	0150	2
R		-----*		
R 8D	10-3092	. . RELAY, HERMETICALLY SEALED 4PDT (ADDED BY SB 2719)	0150	1
R		. ATTACHING PARTS		
R	NAS602-6P	. . SCREW	0150	2
R		-----*		
R 8F	10-3092	. . RELAY, HERMETICALLY SEALED 4PDT (ADDED BY SB 2719)	0150	1
R		. ATTACHING PARTS		
R	NAS602-6P	. . SCREW	0150	2
R		-----*		
R 9	10-3301-3	. . RELAY, HERMETICALLY SEALED 2PDT	0150	1
R		. ATTACHING PARTS		
R	NAS602-6P	. . SCREW	0150	2
R		-----*		
R 9A	10-3092	. . RELAY, HERMETICALLY SEALED 4PDT	0450	1
R		. ATTACHING PARTS		
R	NAS602-6P	. . SCREW	0450	2
R		-----*		
R 9B	10-3301-3	. . RELAY, HERMETICALLY SEALED 2PDT	0150	1
R		. ATTACHING PARTS		
R	NAS602-6	. . SCREW	0150	2
R		-----*		
R 10	G60668	. . RELAY, (V73949)	0150	2
R		. ATTACHING PARTS		
R	NAS602-6P	. . SCREW	0150	4
R		-----*		
R 10B	10-3301-4	. . RELAY, HERMETICALLY SEALED.	0150	1
R		. ATTACHING PARTS		
R	NAS602-6P	. . SCREW	0150	2
R		-----*		
R 10C	10-3092	. . RELAY, HERMETICALLY SEALED 4PDT	0450	1
R		. ATTACHING PARTS		
R	NAS602-6P	. . SCREW	0450	2
		-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
			1	2	3	4	5	6	7			
R	23A 11	7255	.	.	.	.	.	.	.	RECEPTACLE, (V74545).	0150	1
			.	.	.	.	.	.	.	ATTACHING PARTS		
R		NAS602-4	.	.	.	.	.	.	.	SCREW	0150	2
R		MS35333-4	.	.	.	.	.	.	.	WASHER	0150	2
R		AN960-8L	.	.	.	.	.	.	.	WASHER	0150	2
			.	.	.	.	.	.	.			
R	12	0373	.	.	.	.	.	.	.	RESISTOR, (INCLUDES MOUNTING BRACKET) (V44655).	0150	2
			.	.	.	.	.	.	.	ATTACHING PARTS		
R		NAS603-7P	.	.	.	.	.	.	.	SCREW	0150	2
			.	.	.	.	.	.	.			
R	13	BACC50C18A	.	.	.	.	.	.	.	COVER ASSY.	0150	1
R	14	MS25227-3	.	.	.	.	.	.	.	STRIP	0150	2
R	14A	MS25123-2-2	.	.	.	.	.	.	.	TERMINAL BOARD ASSY	0150	1
			.	.	.	.	.	.	.	ATTACHING PARTS		
R	14B	NAS600-6	.	.	.	.	.	.	.	SCREW	0150	2
R	14C	AN960-4L	.	.	.	.	.	.	.	WASHER	0150	2
R	15	NAS679A04W	.	.	.	.	.	.	.	NUT	0150	2
			.	.	.	.	.	.	.			
R	15A	6623B	.	.	.	.	.	.	.	TRANSFORMER, (V95266)	0150	1
			.	.	.	.	.	.	.	ATTACHING PARTS		
R		NAS601-4P	.	.	.	.	.	.	.	SCREW	0150	4
R		NAS679A06W	.	.	.	.	.	.	.	NUT	0150	4
			.	.	.	.	.	.	.			
R	15B	66-11205-2	.	.	.	.	.	.	.	SUPPORT ASSY, FILTER (ALTERED FROM 66-11205-1).	0150	1
			.	.	.	.	.	.	.	ATTACHING PARTS		
R		NAS602-6P	.	.	.	.	.	.	.	SCREW	0150	2
			.	.	.	.	.	.	.			
R	15C	6623B	.	.	.	.	.	.	.	TRANSFORMER, (V95266)	0150	1
			.	.	.	.	.	.	.	ATTACHING PARTS		
R		NAS601-4P	.	.	.	.	.	.	.	SCREW	0150	4
R		NAS679A06W	.	.	.	.	.	.	.	NUT	0150	4
			.	.	.	.	.	.	.			
R	15D	66-11205-2	.	.	.	.	.	.	.	SUPPORT ASSY, FILTER (ALTERED FROM 66-11205-1).	0150	1
			.	.	.	.	.	.	.	ATTACHING PARTS		
R		NAS602-6P	.	.	.	.	.	.	.	SCREW	0150	2
			.	.	.	.	.	.	.			
R	16	50-9340-18	.	.	.	.	.	.	.	PANEL ASSY, STATION 360 RELAY	0150	1
R	17	50-9340-19	.	.	.	.	.	.	.	BOX ASSY, STATION 360 RELAY PANEL	0150	1
R	18	50-9340-6	.	.	.	.	.	.	.	FILLER, STATION 360 RELAY PANEL BOX	0150	1
R	19	BACR11Y3A	.	.	.	.	.	.	.	RECEPTACLE	0150	5
R	20	NAS557-6A	.	.	.	.	.	.	.	GROMMET	0150	1
R	21	NAS557-12A	.	.	.	.	.	.	.	GROMMET	0150	1
R	22	50-9340-20	.	.	.	.	.	.	.	BOX, STATION 360 RELAY PANEL	0150	1
R	23	50-9340-2	.	.	.	.	.	.	.	COVER ASSY, STATION 360 RELAY PANEL	0150	1
R	24	26S8-3	.	.	.	.	.	.	.	STUD, (V71286)	0150	4
R	25	26S8-8	.	.	.	.	.	.	.	STUD, (V71286)	0150	1
R	26	BACW10X4	.	.	.	.	.	.	.	WASHER	0150	5
R	27	50-9340-4	.	.	.	.	.	.	.	COVER, STATION 360 RELAY PANEL	0150	1
			.	.	.	.	.	.	.	REQUIRED PLACARDS, (SEE 11-2, FIG. 137)	0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE												

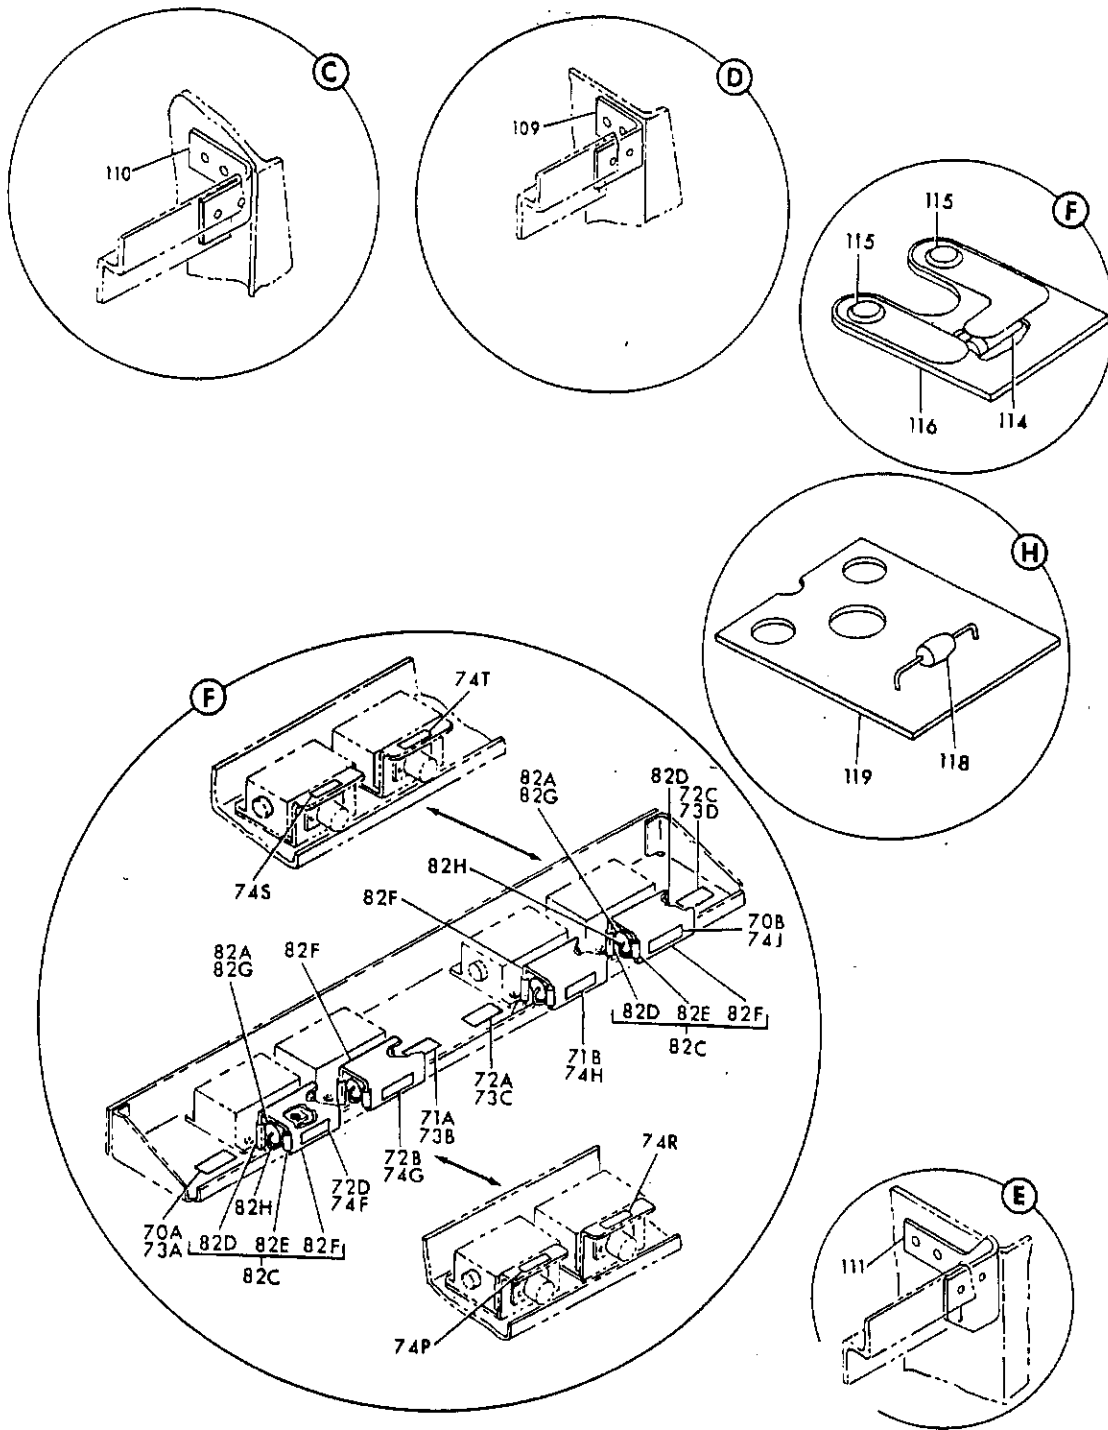


FIGURE 36C. SHIELD INSTL, STATION 300 J1 RELAY (SHEET 2)

NOV 21/90

24-06-36C

DETAILED PARTS LIST
24-06-36C
PAGE 1

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
36C	65-58611-12	SHIELD INSTL, STATION 300 J1 RELAY (VARIABLE. DWG:65-58611-5001) (SEE 24-3, FIG. 1C, ITEM 4B)	5199	AR
1	65-58611-13	SHIELD ASSY, (ELECTRICAL POWER ONLY).	5199	1
2	BAC27CEE36	MARKER, R325 ALUMINUM FOIL.	5199	1
3	BAC27CEE23	MARKER, R54 ALUMINUM FOIL.	5199	1
4	BAC27CEE54	MARKER, R546 ALUMINUM FOIL.	5199	1
5	BAC27CEE53	MARKER, R545 ALUMINUM FOIL.	5199	1
6	BAC27CEE35	MARKER, R323 ALUMINUM FOIL.	5199	1
7	BAC27CEE13	MARKER, R1 ALUMINUM FOIL.	5199	1
8	BAC27CEE171	MARKER, R574 ALUMINUM FOIL.	5199	1
10	BAC27CEE55	MARKER, R560 ALUMINUM FOIL.	5199	1
11	BAC27CEE22	MARKER, R36 ALUMINUM FOIL.	5199	1
12	BAC27CEE15	MARKER, R16 ALUMINUM FOIL.	5199	1
13	BAC27CEE50	MARKER, R522 ALUMINUM FOIL.	5199	1
14	BAC27CEE45	MARKER, R517 ALUMINUM FOIL.	5199	1
15	BAC27CEE21	MARKER, R35 ALUMINUM FOIL.	5199	1
16	BAC27CEE20	MARKER, R34 ALUMINUM FOIL.	5199	1
17	BAC27CEE17	MARKER, R20 ALUMINUM FOIL.	5199	1
18	BAC27CEE16	MARKER, R19 ALUMINUM FOIL.	5199	1
19	BAC27CEE24	MARKER, R60 ALUMINUM FOIL.	5199	1
20	BAC27CEE38	MARKER, R464 ALUMINUM FOIL.	5199	1
23	BAC27CEE102	MARKER, R26 ALUMINUM FOIL.	5199	1
24	BAC27CEE18	MARKER, R32 ALUMINUM FOIL.	5199	1
25	BAC27CEE40	MARKER, R466 ALUMINUM FOIL.	5199	1
26	BAC27CEE39	MARKER, R465 ALUMINUM FOIL.	5199	1
28	BAC27CEE103	MARKER, R27 ALUMINUM FOIL.	5199	1
29	BAC27CEE33	MARKER, R18 ALUMINUM FOIL.	5199	1
29A	BAC27CEE19	MARKER, R33 ALUMINUM FOIL.	5199	1
29B	BAC27CEE34	MARKER, R319 ALUMINUM FOIL.	5199	1
30	BAC27CEE43	MARKER, R469 ALUMINUM FOIL.	5199	1
31	BAC27CEE42	MARKER, R468 ALUMINUM FOIL.	5199	1
32	BAC27CEE41	MARKER, R467 ALUMINUM FOIL.	5199	1
34	BAC27CEE44	MARKER, R470 ALUMINUM FOIL.	5199	1
35	BAC27CEE52	MARKER, R538 ALUMINUM FOIL.	5199	1
36	BAC27CEE51	MARKER, R537 ALUMINUM FOIL.	5199	1
37	BAC27CEE14	MARKER, R4 ALUMINUM FOIL.	5199	1
38	BAC27CEE188	DECAL, J1-A.	5199	1
39	BAC27CEE190	DECAL, J1-C.	5199	1
40	BAC27CEE192	DECAL, J1-E.	5199	1
41	BAC27CEE194	DECAL, J1-G.	5199	1
42	BAC27CEE196	DECAL, J1-J.	5199	1
43	BAC27CEE189	DECAL, J1-B.	5199	1
46	BAC27CEE191	DECAL, J1-D.	5199	1
47	BAC27CEE193	DECAL, J1-F.	5199	1
48	BAC27CEE195	DECAL, J1-H.	5199	1
49	BAC27CEE197	DECAL, J1-K.	5199	1
50	BAC27CEE199	DECAL, J1-M.	5199	1
51	BAC27CEE201	DECAL, J1-P.	5199	1
52	BAC27CEE203	DECAL, J1-S.	5199	1
53	BAC27CEE205	DECAL, J1-W.	5199	1
54	BAC27CEE207	DECAL, J1-Y.	5199	1
55	BAC27CEE209	DECAL, J1-AA.	5199	1
56	BAC27CEE211	DECAL, J1-AC.	5199	1
59	BAC27CEE202	DECAL, J1-R.	5199	1
60	BAC27CEE204	DECAL, J1-T.	5199	1
61	BAC27CEE206	DECAL, J1-X.	5199	1
62	BAC27CEE208	DECAL, J1-Z.	5199	1
62A	BAC27CEE210	DECAL, J1-AB.	5199	1
63	BAC27CEE212	DECAL, J1-AD.	5199	1
64	BAC27CEE214	DECAL, J1-AF.	5199	1
65	BAC27CEE326	MARKER, R190 ALUMINUM FOIL.	5199	1
66	BAC27CEE327	MARKER, R191 ALUMINUM FOIL.	5199	1
67	BAC27CEE328	MARKER, R192 ALUMINUM FOIL.	5199	1
68	BAC27CEE329	MARKER, R193 ALUMINUM FOIL.	5199	1
69	BACM10B20-20A	MARKER, R206 AMOUNTING BRACKET ALUMINUM FOIL.	5199	1
70	BAC27CEE321	MARKER, M282 ALUMINUM FOIL.	5199	1
71	BAC27CEE322	MARKER, M283 ALUMINUM FOIL.	5199	1
72	BAC27CEE323	MARKER, M284 ALUMINUM FOIL.	5199	1
73	BAC27CEE324	MARKER, M285 ALUMINUM FOIL.	5199	1
74A	BAC27CEE412	MARKER, R898 ALUMINUM FOIL.	5199	1
74B	BAC27CEE413	MARKER, R899 ALUMINUM FOIL.	5199	1
74D	BAC27CEE519	MARKER, R603 ALUMINUM FOIL.	5199	1
74F	BAC27CEE586	MARKER, M596 ALUMINUM FOIL.	5199	1
74G	BAC27CEE587	MARKER, M597 ALUMINUM FOIL.	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
36C 74H	BAC27CEE588	.	MARKER, M598 ALUMINUM FOIL.	5199	1
74J	BAC27CEE589	.	MARKER, M599 ALUMINUM FOIL.	5199	1
74U	BAC27CEE868	.	MARKER-ALUMINUM FOIL, M812.	5199	1
74V	BACM10N002RT	.	MARKER-ALUMINUM FOIL, 19.	5199	1
75	BACP20B31	.	PLUG.	5199	AR
75B	10-60450-1	.	RELAY, PLUG-IN 28 VDC COIL.	5199	2
76	10-60450-1	.	RELAY, PLUG-IN 28 VDC COIL.	5199	20
76A	10-60450-3	.	RELAY, PLUG-IN 28 VAC COIL.	5199	1
76B	10-60450-1	.	RELAY, PLUG-IN 28 VDC COIL.	5199	2
76D	10-60450-1	.	RELAY, PLUG-IN 28 VDC COIL.	5199	1
76E	10-60450-2	.	RELAY, PLUG-IN 115 VAC COIL.	5199	1
76J	10-60450-1	.	RELAY, PLUG-IN 28 VDC COIL.	5199	1
76K	10-60450-1	.	RELAY, PLUG-IN 28 VDC COIL.	5199	1
77	10-60450-2	.	RELAY, PLUG-IN 115 VAC COIL.	5199	6
77C	10-60450-2	.	RELAY, PLUG-IN 115 VAC COIL.	5199	1
		.	ATTACHING PARTS		
	NAS679A06W	.	NUT	5199	107
78	3790	.	RESISTOR, FIXED (V44655).	5199	4
		.	ATTACHING PARTS		
	NAS601-6P	.	SCREW	5199	8
80	66-9079-7	.	BRACKET ASSY, RECTIFIER	5199	1
		.	ATTACHING PARTS		
	NAS514P1032-6	.	SCREW	5199	2
	NAS679A3W	.	NUT	5199	2
81	5P4	.	RECTIFIER, (V51589)	5199	1
82	66-9079-2	.	BRACKET	5199	1
83	NAS601-6P	.	SCREW	5199	9
84	NAS679A06W	.	NUT	5199	9
85	65-58621-11	.	BRACKET ASSY, MOUNTING.	5199	1
86	65-58621-12	.	BRACKET	5199	1
88	65-58621-13	.	CHASSIS	5199	1
89	65-58621-14	.	BRACKET, RECEPTACLE	5199	1
90	BACM10N002S	.	MARKER, 1 ALUMINUM FOIL	5199	1
91	BAC27CEE170	.	MARKER, T365 ALUMINUM FOIL.	5199	1
92	NAS557-10A	.	GROMMET	5199	1
93	MS25227-1A	.	STRIP	5199	2
94	MS25227-2A	.	STRIP	5199	3
95	AN960-6L	.	WASHER.	5199	AR
96	AN935-6L	.	WASHER.	5199	AR
97	MS2034-1-6S	.	NUT	5199	AR
98	MS25226-2-6	.	LINK.	5199	1
99	MS25226-2-10	.	LINK.	5199	1
100	MS27212-1-20	.	TERMINAL BOARD ASSY	5199	1
		.	ATTACHING PARTS		
	NAS600-8P	.	SCREW	5199	5
	NAS679A04W	.	NUT	5199	5
101	BACS21Y2R	.	STUD.	5199	4
102	BACW10X4	.	WASHER.	5199	4
103	BACR11Y2D	.	RECEPTACLE.	5199	4
104	65-58621-3	.	COVER	5199	1
		.	REQUIRED PLACARDS, (SEE 11-2, FIG. 131)	5199	
		.	FIRE PROTECTION, (SEE 26-1, FIG. 29J)	5199	
105	BACS21Y4R	.	STUD.	5199	8
106	BACR11Y2	.	RECEPTACLE.	5199	8
107	65-58621-9	.	ZEE	5199	1
108	65-58621-10	.	ZEE	5199	1
109	65-58611-11	.	BRACKET, (ALTERED FROM BAC82D9JP)	5199	1
110	65-58621-4	.	CLIP.	5199	2
111	65-58621-5	.	CLIP.	5199	1
117	65-38292-115	.	PLATE ASSY, PRINTED CIRCUIT DIODE	5199	1
		.	ATTACHING PARTS		
	AN960C6	.	WASHER.	5199	2
	BACN10JC06	.	NUT	5199	2
118	1N5061	.	DIODE, (V81349)	5199	1
119	65-38292-106	.	BOARD ASSY, ETCHED.	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
707
PARTS CATALOG (MAINTENANCE)

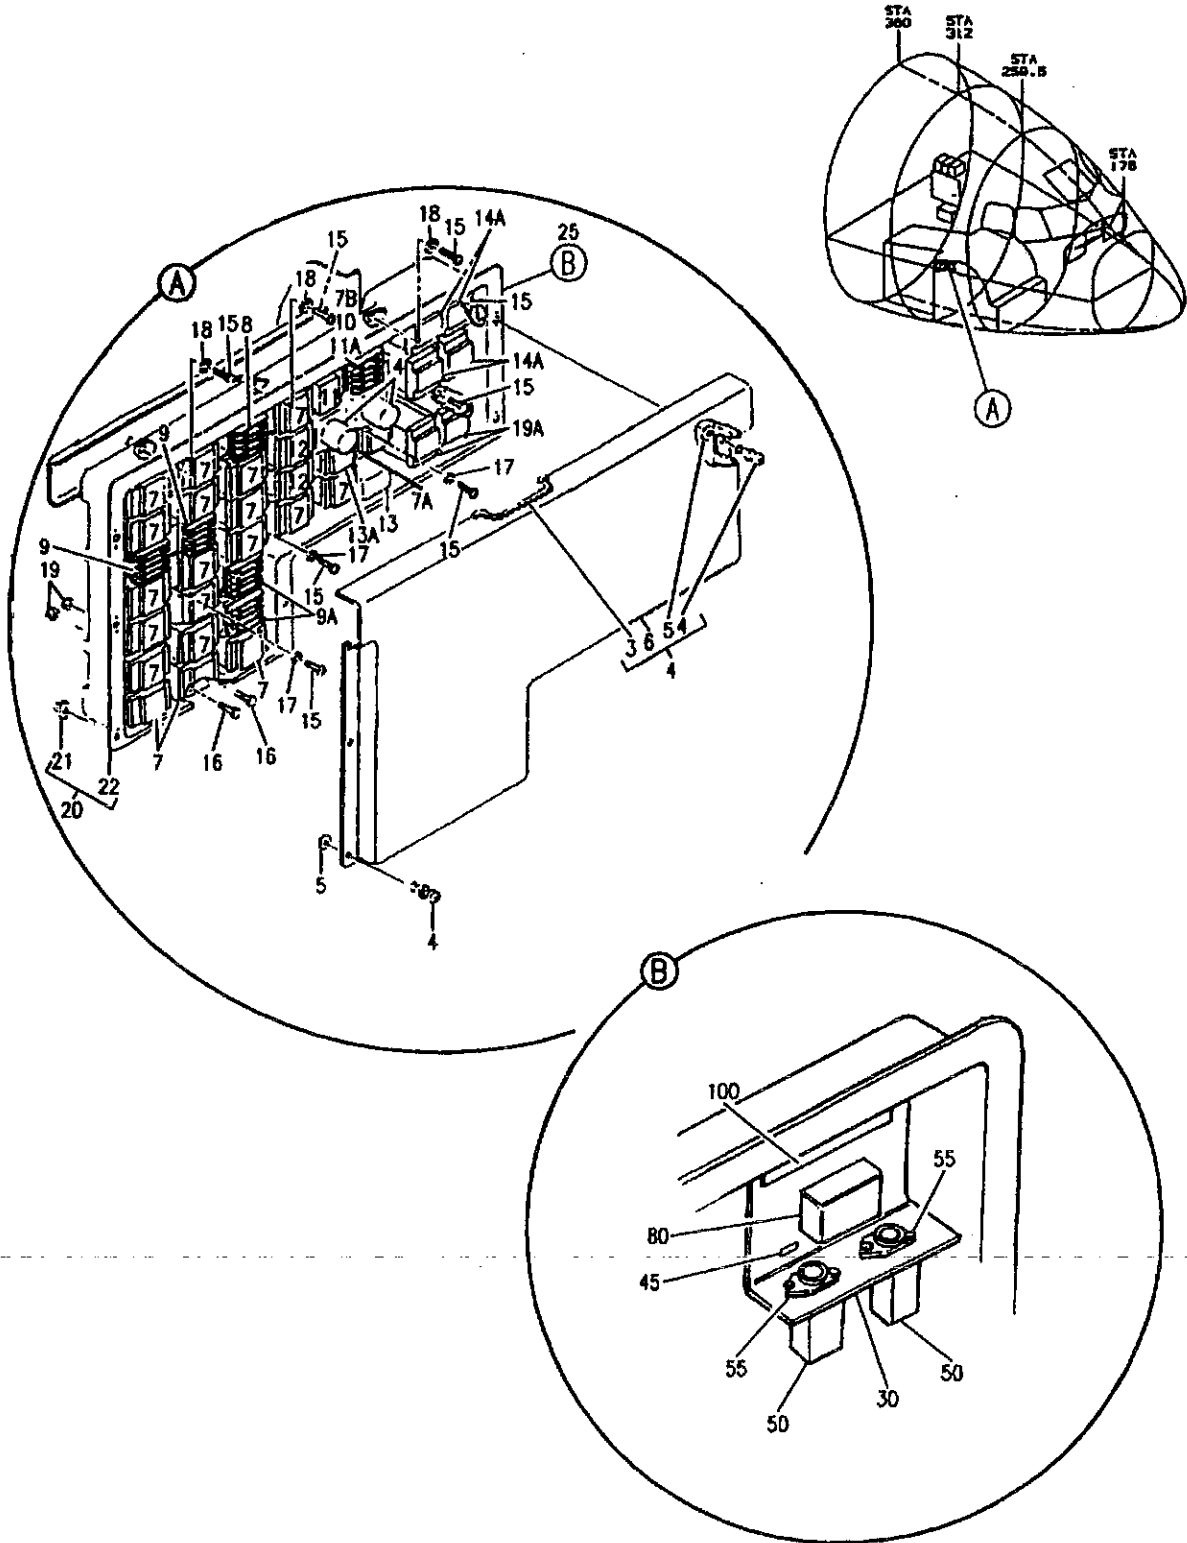


FIGURE 39A. SHIELD INSTALLATION, STATION 294.5, J-1 RELAY (ELECTRICAL POWER ONLY)

DETAILED PARTS LIST
24-06-39A
PAGE 0

24-06-39A

NOV 21/01

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
39A	65-7221	SHIELD INSTL, STATION 294.5 J-1 RELAY (ELECTRICAL POWER ONLY) (REWORKED TO 391-34-50-74473) (DELETED BY RAF MOD 7211.019-4) (SEE 24-3, FIG. 1B, ITEM 52)	0150	RF
	391-34-50-74473-001	RELAY INSTL, TACAN LIGHTING (VZ0031) (65-7221 MODIFIED BY RAF M OD 211.019-4) (SEE 24-3, FIG. 1B ITEM 52)	0150	RF
2	65-7222-15	. COVER ASSY, J-1 RELAY SHIELD.	0150	1
3	BAC620ZAB00	. GROMMET	0150	1
4	Z6SB-3	. STUD ASSY, (V71286)	0150	6
5	BACW10X4	. WASHER.	0150	6
6	65-7222-16	. COVER, J-1 RELAY SHIELD	0150	1
7	10-3092	. RELAY, HERMETICALLY SEALED 4PDT	0150	19
7A	10-3092	. RELAY, HERMETICALLY SEALED 4 PDT.	0150	1
8	10-3301-4	. RELAY, HERMETICALLY SEALED 2PDT	0150	1
9	10-3301-3	. RELAY, HERMETICALLY SEALED 2PDT	0150	2
9A	10-3301-3	. RELAY, HERMETICALLY SEALED 2 PDT.	0150	2
10	MS24181D1	. RELAY	0150	1
11	G60144	. RELAY, SPDT (V73949).	0150	1
12	9274-6686	. RELAY, (V35344)	0150	2
13	A677-1C	. DETECTOR, CURRENT FLOW (V97896)	0150	1
		ATTACHING PARTS		
	NAS602-7P	. SCREW	0150	54
	NAS602-7P	. SCREW	0150	4
	NAS602-7P	. SCREW	0150	2
13A	10-3092	. RELAY, HERMETICALLY SEALED 4 PDT.	0150	1
		ATTACHING PARTS		
	NAS602-7P	. SCREW	0150	2
14	9124-8073	. RELAY, (V35344)	0150	2
		(OPTIONAL TO AND REPLACEMENT FOR 6042H21 (V27193))		
14	6042H21	. RELAY, (V27193)	0150	2
		(OPTIONAL AND FOR REPLACEMENT ORDER 9124-8073 (V35344))		
		ATTACHING PARTS		
	NAS603-9P	. SCREW	0150	8
15	NAS603-9	. SCREW	0150	8
16	AN3-3A	. BOLT.	0150	2
17	AN970-3	. WASHER.	0150	3
18	65-7221-4	. WASHER, STATION 294.5 J-1 RELAY SHIELD (ALTERED FROM AN970-3)	0150	3
19	NAS679A3W	. NUT	0150	2
20	65-7222-6	. SHIELD ASSY, J-1 RELAY.	0150	1
21	BACR11Y3A	. RECEPTACLE.	0150	6
22	65-7222-8	. SHIELD, J-1 RELAY	0150	1
25	391-34-50-74473-003	. RELAY ASSY, TACAN LIGHTING (VZ0031) (ADDED BY RAF MOD 7211.019-4)	0150	1
30	391-34-50-74473-005	. PLATE ASSY, MOUNTING (VZ0031)	0150	1
		ATTACHING PARTS		
	MS35207-264	. SCREW	0150	4
	AN960-10L	. WASHER.	0150	4
45	391-34-50-73978-105	. DECAL, (VZ0031) (REF 11-06-18A)	0150	RF
50	MS25327A1	. RELAY	0150	2
55	MS25328-4	. SOCKET.	0150	2
		ATTACHING PARTS		
	MS25332-1	. SCREW	0150	2
	MS35206-215	. SCREW	0150	2
	MS35338-40	. WASHER.	0150	4
	MS21044N3	. NUT	0150	4
80	5970	. TRANSFORMER	0150	1
		ATTACHING PARTS		
	MS24693S50	. SCREW	0150	4
	AN960C6	. WASHER.	0150	4
	MS21042-08	. NUT	0150	4
100	MS27212-1-8	. TERMINAL BOARD.	0150	1
		ATTACHING PARTS		
	AN960C6	. WASHER.	0150	8
	MS21042-06	. NUT	0150	8

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
 707
PARTS CATALOG (MAINTENANCE)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	39A	MS25226-2-2	.	.	.	LINK.	.	.	.	0150	1
R		MS2469355	.	.	.	ATTACHING PARTS	.	.	.	0150	3
R		MS20365-440	.	.	.	SCREW	.	.	.	0150	3
			.	.	.	NUT	.	.	.	0150	3
			.	.	.	-----	.	.	.		
			.	.	.	FOR REFERENCE TO OTHER SHIELD DETAILS, SEE NHA.	.	.	.	0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

DETAILED PARTS LIST
 24-06-39A
 PAGE 2

24-06-39A

RAF
 NOV 21/01

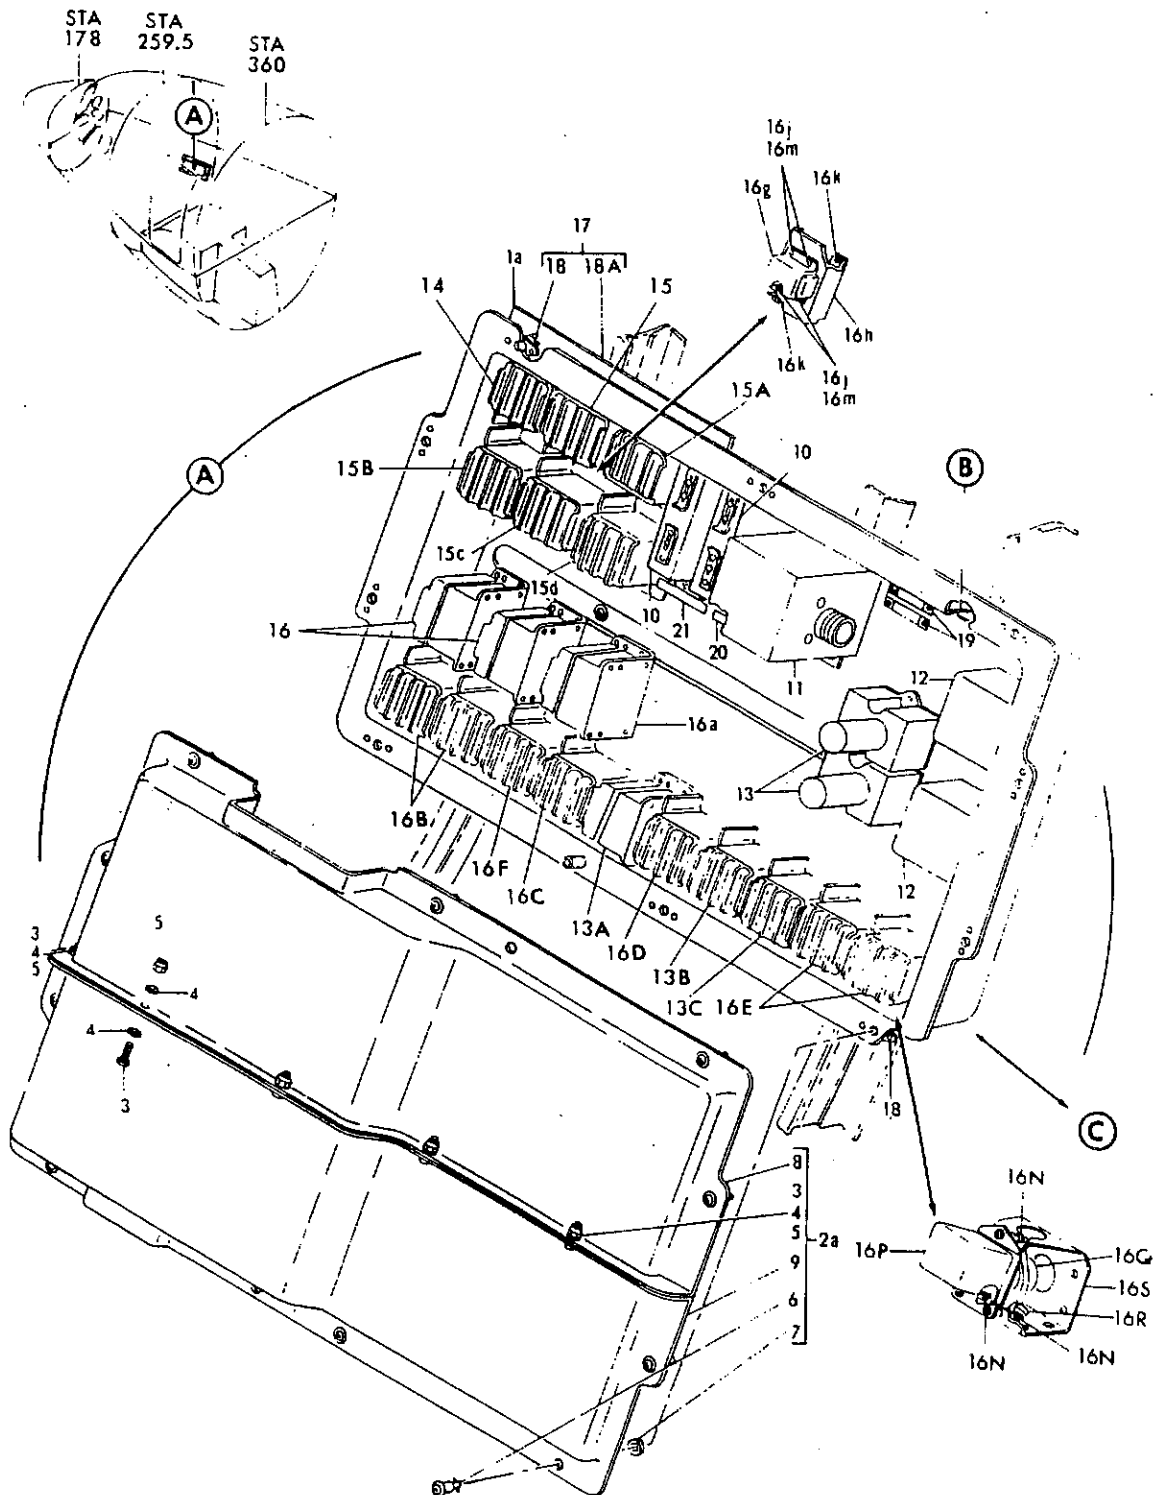


FIGURE 42B. SHIELD INSTL, STATION 243 J23 RELAY (SHEET 1)

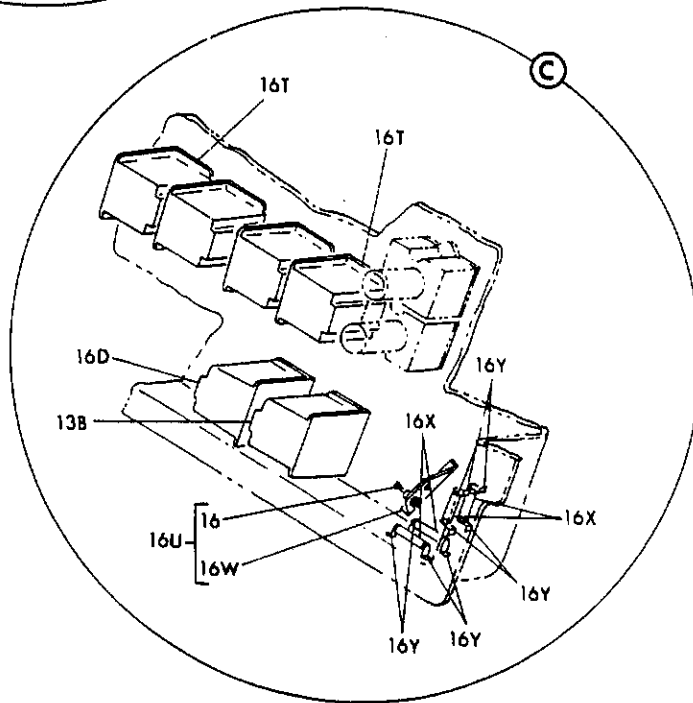
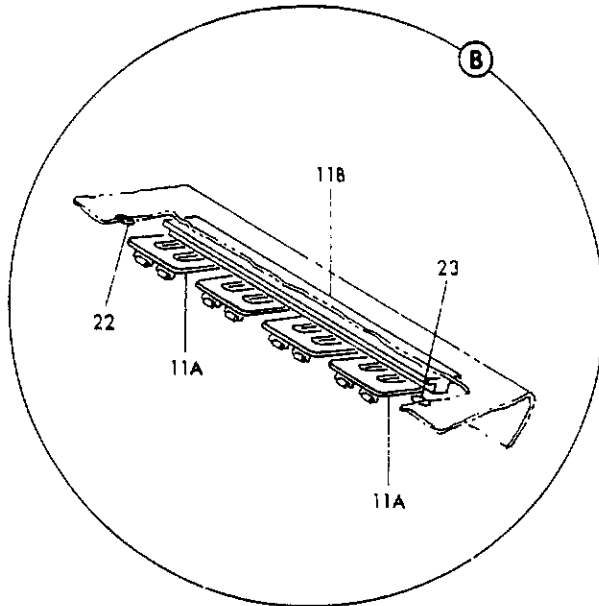


FIGURE 42B. SHIELD INSTL, STATION 243 J23 RELAY (SHEET 2)

NOV 21/90

24-06-42B

DETAILED PARTS LIST
24-06-42B
PAGE 1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

24-06-42B

RAF
NOV 21/91



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R 42B 16D	10-3092	.	.	.	.	.	.	.	0450	1
R	NAS602-7P	.	.	.	.	.	.	.	0450	2
R	16N BACN10JC06	.	.	.	.	.	.	.	0150	3
R	16P 10-60450-2	.	.	.	.	.	.	.	0150	1
R	16Q 000300-0445	.	.	.	.	.	.	.	0150	1
R		.	.	.	.	.	.	.		
R	16Q 82164-1F	.	.	.	.	.	.	.	0150	1
R		.	.	.	.	.	.	.		
R	16R NAS557-18A	.	.	.	.	.	.	.	0150	1
R	16S 69-58032-1	.	.	.	.	.	.	.	0150	1
R	NAS602-7P	.	.	.	.	.	.	.	0150	2
R	17 65-7071-12	.	.	.	.	.	.	.	0150	1
R	18 BACR11Y3A	.	.	.	.	.	.	.	0150	10
R	18A 65-7071-13	.	.	.	.	.	.	.	0150	1
R		.	.	.	.	.	.	.		
R	20 BACM10E10-2CH	.	.	.	.	.	.	.	0150	1
R	21 BACM10E10-2CJ	.	.	.	.	.	.	.	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

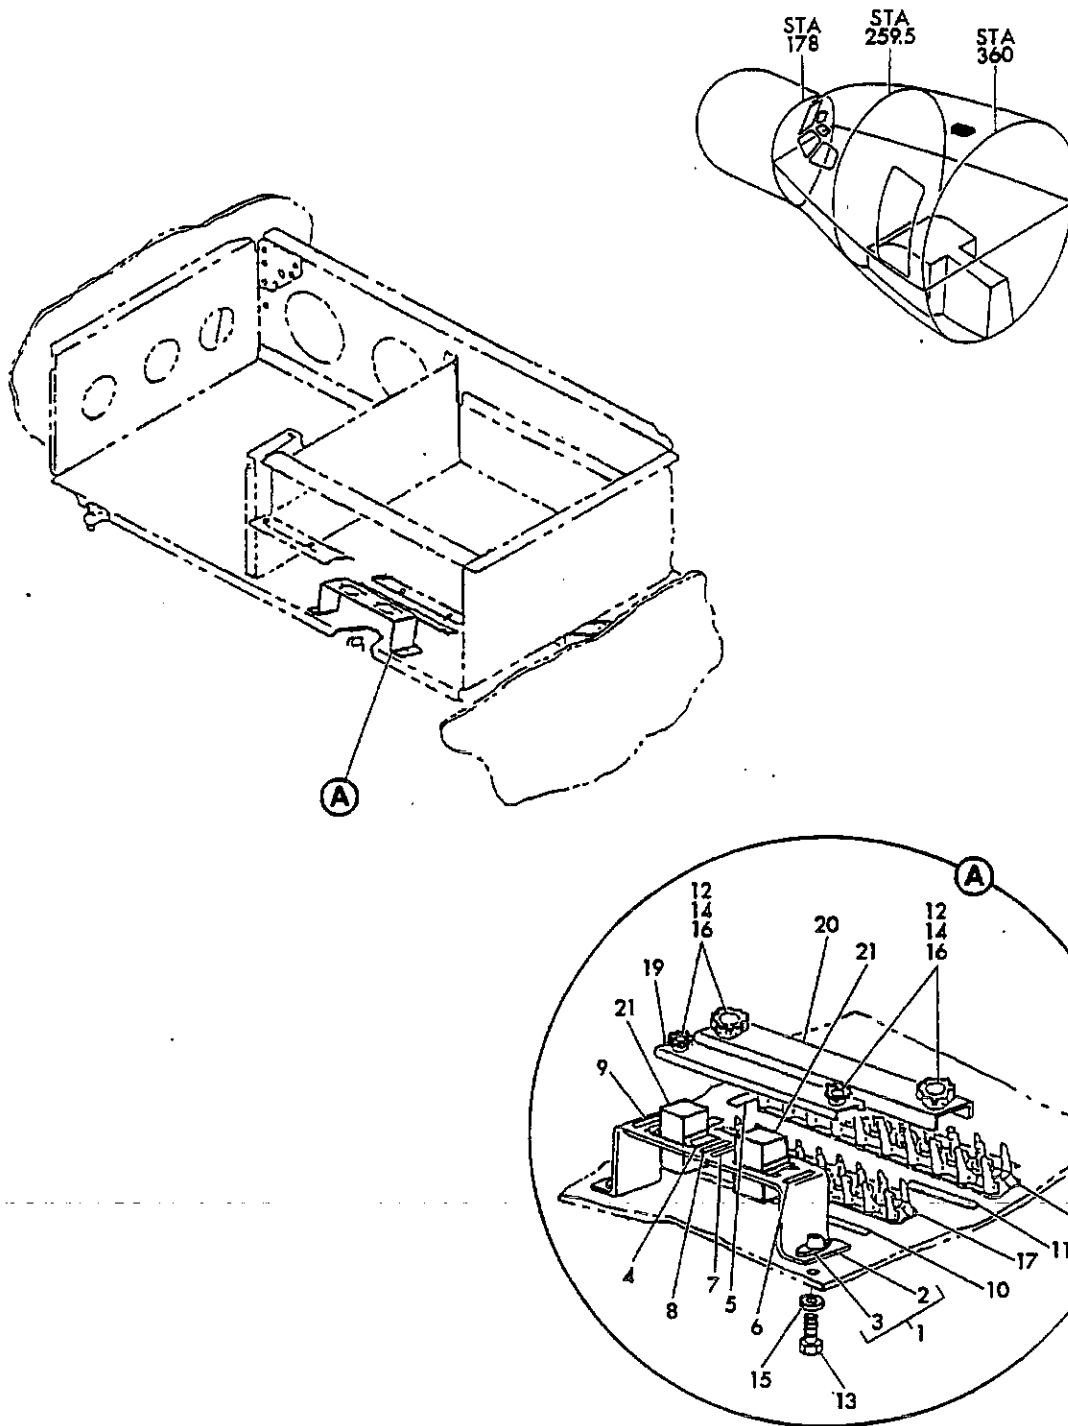


FIGURE 45N. ELECTRICAL COMPONENTS INSTL



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 45N	361-39-10-74349-001	ELECTRICAL COMPONENTS INSTL, (VS2500) (ADDED BY RAF . . .	0150	RF
R 1	361-39-10-74349-101	7211.019-225) (SEE 24-3, FIG. 5B, ITEM 238)		
R 2	361-39-10-74349-201	. BRACKET ASSY, (VS2500).	0150	1
R 3	MS21059L08	. BRACKET, (VS2500)	0150	1
R 4	361-39-10-74235-245	. NUT PLATE	0150	2
R 5	361-39-10-74235-247	. DECAL, (VS2500)	0150	1
R 6	361-39-10-74235-249	. DECAL, (VS2500)	0150	1
R 7	361-39-10-74235-251	. DECAL, (VS2500)	0150	1
R 8	361-39-10-74235-253	. DECAL, (VS2500)	0150	1
R 9	361-39-10-74235-255	. DECAL, (VS2500)	0150	1
R 10	361-39-10-74235-257	. DECAL, (VS2500)	0150	1
R 11	361-39-10-74235-267	. DECAL, (VS2500)	0150	1
R 12	NAS600-6P	. SCREW	0150	4
R 13	NAS600-7	. SCREW	0150	2
R 14	AN960JD4	. WASHER	0150	4
R 15	AN960JD8	. WASHER	0150	2
R 16	NAS679A04W	. NUT	0150	4
R 17	MS27212-1-10	. TERMINAL BOARD.	0150	1
R 18	MS27212-2-10	. TERMINAL BOARD.	0150	1
R 19	MS18029-15-10	. COVER	0150	1
R 20	MS18029-25-10	. COVER	0150	1
R 21	501048-8308	. SOCKET, (V0900B).	0150	2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/94

24-06-45N

DETAILED PARTS LIST
24-06-45N
PAGE 1

BOEING *Intercontinental* **707**
PARTS CATALOG

SECTION 07
CIRCUIT BREAKER PANELS

RAF
NOV 21/90

24-07
PAGE 1

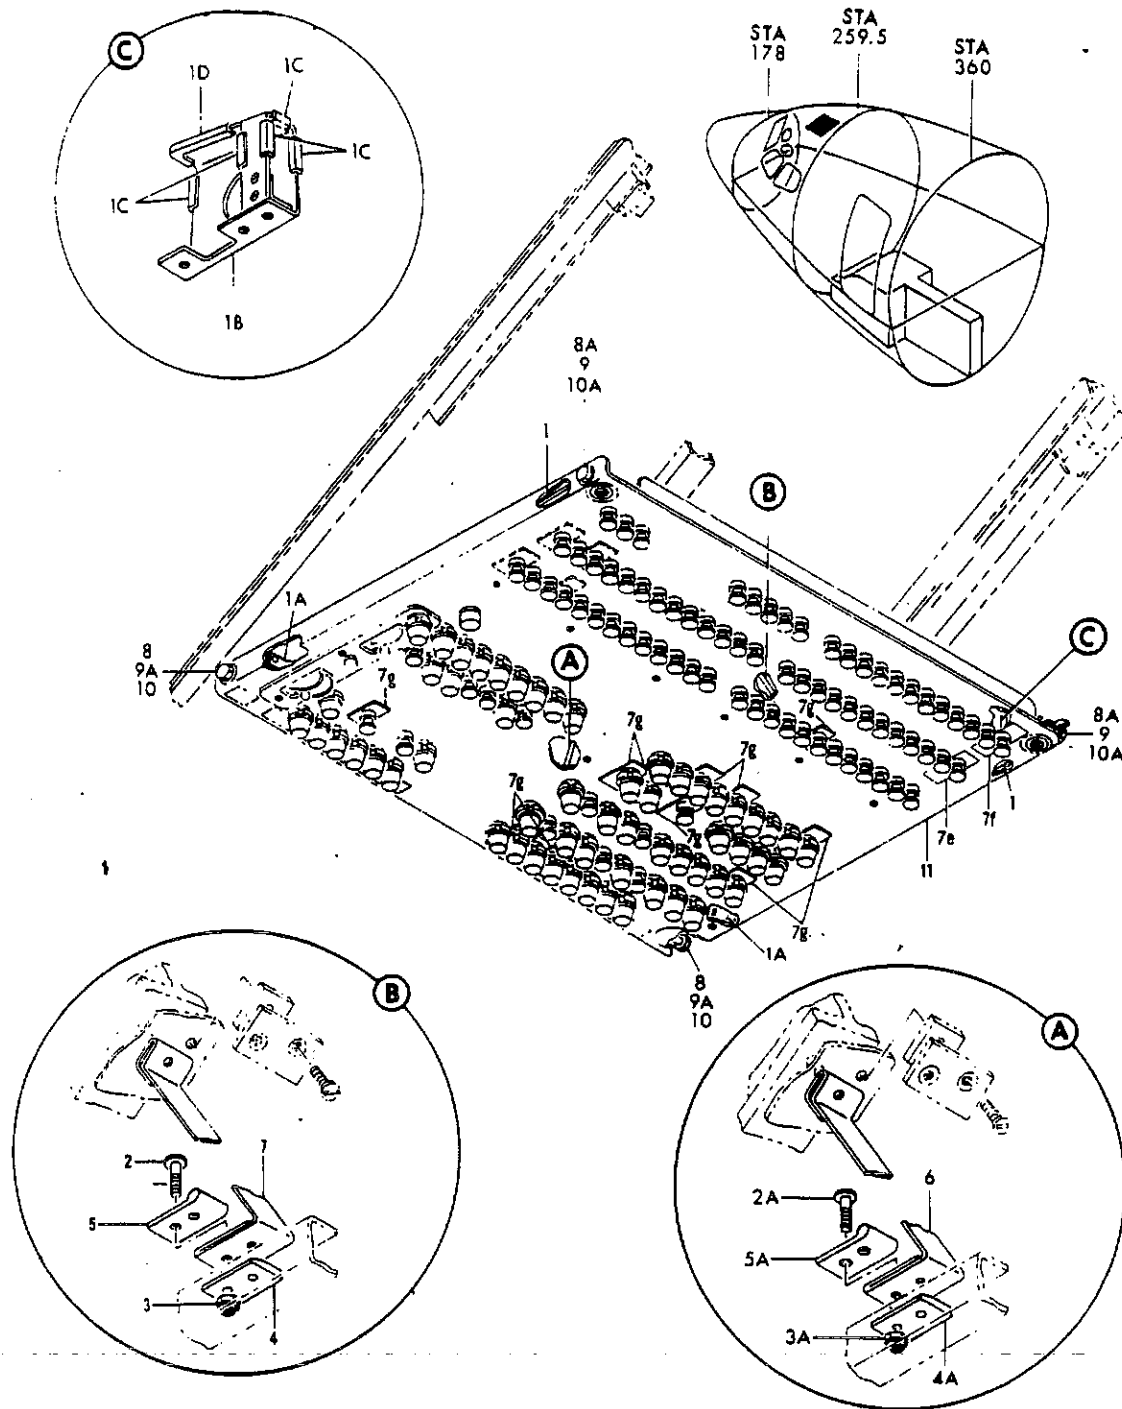


FIGURE 1. PANEL INSTL, RADIO AND T-R CIRCUIT BREAKER



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1	65-6447	PANEL INSTL, RADIO AND T-R CIRCUIT BREAKER (SEE 25-1, FIG. 1, ITEM 6, 25-1, FIG. 1C, ITEM 6, 25-1, FIG. 1D, ITEM 6, 25-1, FIG. 1E, ITEM 6, 25-1, FIG. 1F, ITEM 3, 25-1, FIG. 1G, ITEM 6, 25-1, FIG. 1H, ITEM 6, 25-1, FIG. 1J, ITEM 6, 25-1, FIG. 1K, ITEM 3, 25-1, FIG. 2B, ITEM 6, 25-1, FIG. 2C, ITEM 6, 25-1, FIG. 2D, ITEM 5, 25-1, FIG. 2E, ITEM 109, 25-1, FIG. 2F, ITEM 6, 25-1, FIG. 2G, ITEM 6 AND 25-1, FIG. 2H, ITEM 6)	0150	RF
	65-6447	PANEL INSTL, RADIO AND T-R CIRCUIT BREAKER (VARIABLE. DWG:65-6447-5015) (SEE 25-1, FIG. 2E, ITEM 109)	5199	RF
1	BACJ40F33-16	JUMPER ASSY.		2
		ATTACHING PARTS		
	NAS603-8P	SCREW		4
	AN960D10L	WASHER.		4
	BACN10JC3	NUT		4
2	NAS603-14P	SCREW		2
3	BACN10JC3	NUT		2
4	50-11364-4	FILLER, RADIUS.		1
5	50-11364-2	SPACER, STRAP STOP.		1
7	66-1923	STRAP, PANEL STOP.	0150	1
7	69-58460-1	STRAP ASSY.	5199	1
8A	NAS623-4-6	SCREW		2
9	NAS43DD4-15	SPACER.		2
10A	AN960PD416L	WASHER.		2
11	65-6447-77	PANEL ASSY, (SEE FIG. 24A).	0150	1
11	65-6447-124	PANEL ASSY.	5199	1
		ELECTRICAL POWER, (SEE FIG. 4, 10, 12, 13, 13A, 13B, 16, 18A, 19A, 19B, 19C, 19E, 19F, 19G, 19H, 19J, 19K, 19L, 19M, 20, 20A, 20B, 20C, 20D, 20E, 20F, 20G, 20H, 20J, 20K, 20L, 20M, 20N, 20P, 20Q, 20R, 20S, 20T, 21, 21A, 21C, 22, 22A, 23, 23G, 23M, 23N, 23P, 23Q, 23R, 23S, 23U, 23X, 23Y, 24B, 24D, 24G, 24H, 24J, 24K, 24L, 24M, 24N, 24P, 24Q, 24R, 24V, 24W, 24X, 24Y AND 24Z)		
		LIGHTS, (SEE 33-3, FIG. 39H).	5199	
		REQUIRED PLACARDS, (SEE 11-7, FIG. 1, 1A, 1B AND 2)	5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/91

24-07-1

DETAILED PARTS LIST
24-07-1
PAGE 1

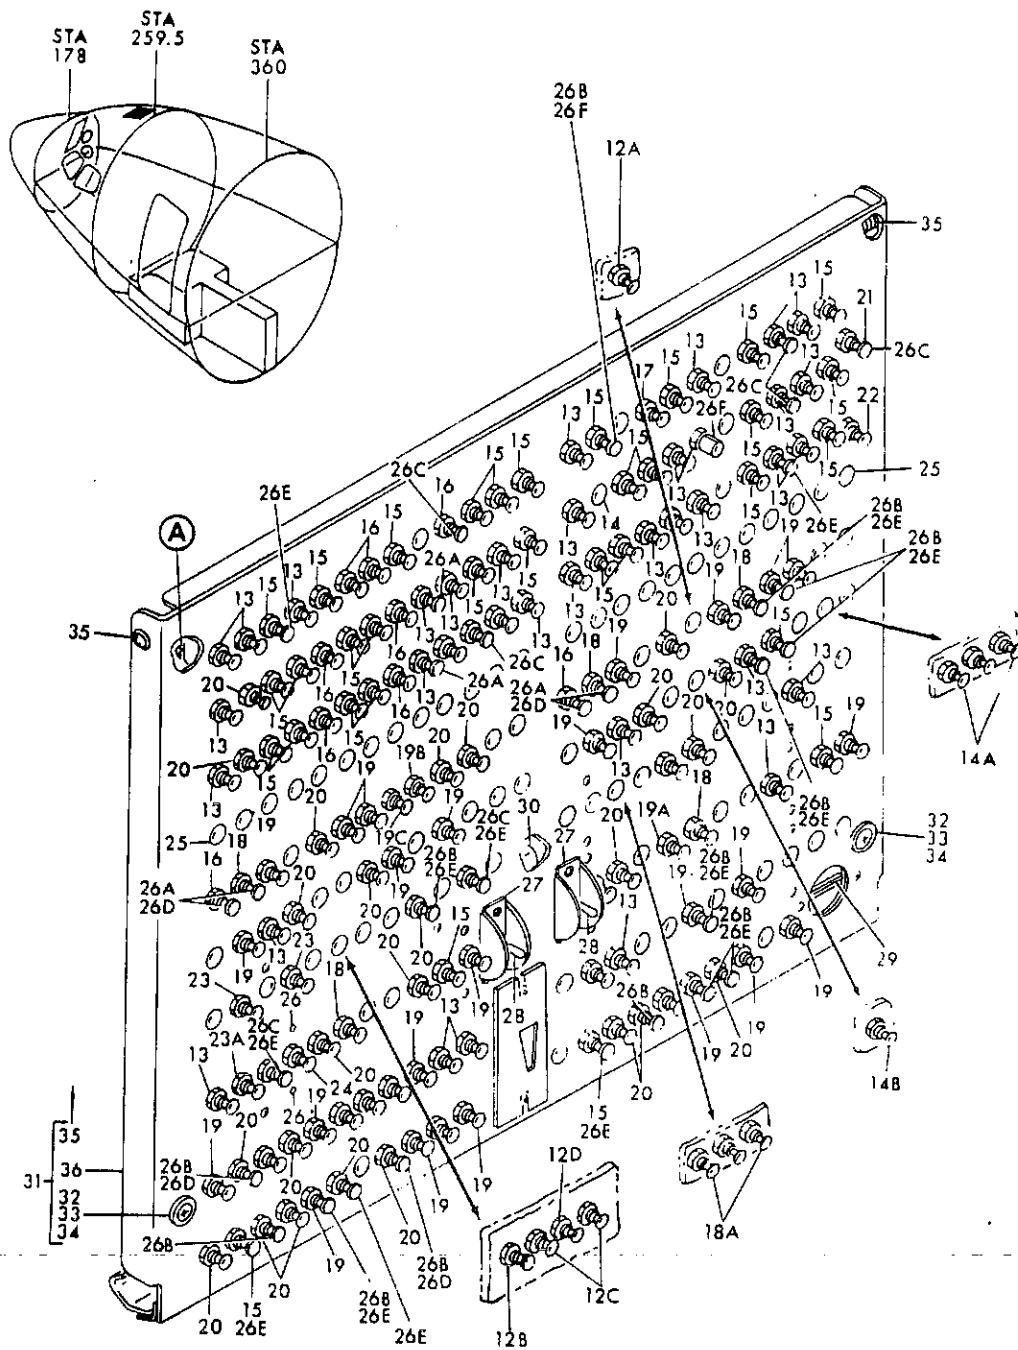


FIGURE 23Y. ELECTRICAL POWER, CIRCUIT BREAKER PANELS (SHEET 1)

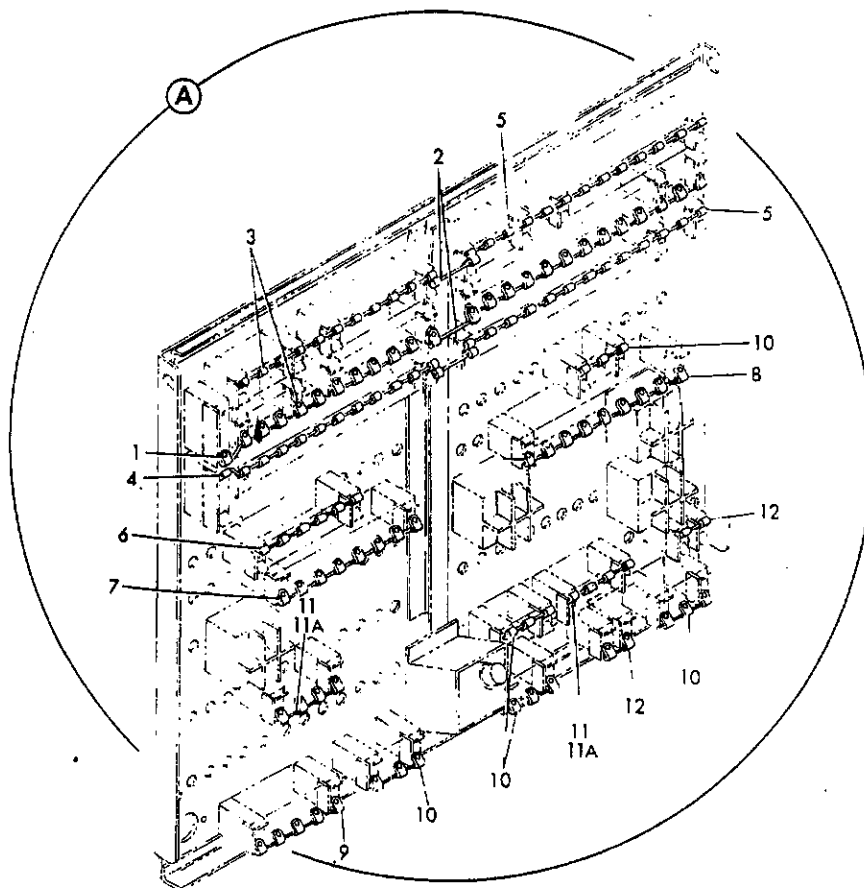


FIGURE 23Y. PANEL ASSY P. 5 RADIO AND T-R CIRCUIT BREAKER (ELECTRICAL POWER ONLY) (SHEET 2)

NOV 21/90

24-07-23Y

DETAILED PARTS LIST
24-07-23Y
PAGE 1

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF	UNITS
			FROM TO	PER ASSY
23Y	65-6447-124	PANEL ASSY, P5 RADIO AND T-R CIRCUIT BREAKER. (ELECTRICAL POWER ONLY) (SEE FIG. 1, ITEM 11)	5199	RF
1	65-6447-86	. JUMPER, (ALTERED FROM; BACB29B7-3)	5199	1
2	63-2566	. BUS ASSY.	5199	3
3	BACB29B7-11	. BUS ASSY, (ALTERED FROM; BACB29B7-20)	5199	2
4	BACB29B7-12	. BUS ASSY, (ALTERED FROM; BACB29B7-20)	5199	1
5	BACB29B7-13	. BUS ASSY, (ALTERED FROM; BACB29B7-20)	5199	3
6	BACB29B7-6	. BUS ASSY, (ALTERED FROM; BACB29B7-20)	5199	1
7	BACB29B7-8	. BUS ASSY, (ALTERED FROM; BACB29B7-20)	5199	1
8	BACB29B7-9	. BUS ASSY, (ALTERED FROM; BACB29B7-20)	5199	1
9	BACB29B7-5	. BUS ASSY, (ALTERED FROM; BACB29B7-20)	5199	1
10	BACB29B7-3	. BUS ASSY, (ALTERED FROM; BACB29B7-20)	5199	5
11	BACB29B7-4	. BUS ASSY, (ALTERED FROM; BACB29B7-20)	5199	2
12	BACB29B7-2	. BUS ASSY, (ALTERED FROM; BACB29B7-20)	5199	2
12A	7274-42-1	. CIRCUIT BREAKER, (V97896) (ADDED BY SVA REQUEST)	5199	1
13	BACC18U5	. CIRCUIT BREAKER (OPTIONAL BACC18R5B)	5199	36
13	BACC18R5B	. CIRCUIT BREAKER (OPTIONAL TO BACC18U5)	5199	36
14	BACC18R5B	. CIRCUIT BREAKER	5199	1
14A	MS25244-5	. CIRCUIT BREAKER, (ADDED BY SVA REQUEST)	5199	3
14B	7274-42-5	. CIRCUIT BREAKER, (V97896) (ADDED BY SVA REQUEST)	5199	1
15	BACC18U3	. CIRCUIT BREAKER (OPTIONAL BACC18R3A)	5199	33
15	BACC18R3A	. CIRCUIT BREAKER (OPTIONAL TO BACC18U3)	5199	33
16	BACC18U7	. CIRCUIT BREAKER (OPTIONAL BACC18R7B)	5199	9
16	BACC18R7B	. CIRCUIT BREAKER (OPTIONAL TO BACC18U7)	5199	9
17	BACC18R35B	. CIRCUIT BREAKER	5199	1
18	BACC18U10	. CIRCUIT BREAKER (OPTIONAL BACC18R10B)	5199	6
18	BACC18R10B	. CIRCUIT BREAKER (OPTIONAL TO BACC18U10)	5199	6
18A	MS25244-15	. CIRCUIT BREAKER, (ADDED BY SVA REQUEST)	5199	3
19	BACC18U1	. CIRCUIT BREAKER (OPTIONAL BACC18R1A)	5199	28
19	BACC18R1A	. CIRCUIT BREAKER (OPTIONAL TO BACC18U1)	5199	28
19A	BACC18U2	. CIRCUIT BREAKER (OPTIONAL BACC18R2A)	5199	1
19A	BACC18R2A	. CIRCUIT BREAKER (OPTIONAL TO BACC18U2)	5199	1
20	BACC18U2	. CIRCUIT BREAKER (OPTIONAL BACC18R2A)	5199	27
20	BACC18R2A	. CIRCUIT BREAKER (OPTIONAL TO BACC18U2)	5199	27
21	BACC18R75C	. CIRCUIT BREAKER	5199	1
22	BACC18R50C	. CIRCUIT BREAKER	5199	1
23	10-60806-5	. CIRCUIT BREAKER	5199	2
23A	10-60806-7	. CIRCUIT BREAKER	5199	1
24	10-60806-7	. CIRCUIT BREAKER	5199	1
	NAS601-6P	ATTACHING PARTS . SCREW, (USED WITH BACC18R75C, BACC18R50C, 10-60806-5, 10-60806-7)	5199	12
25	BACP20B43B	. PLUG.	5199	AR
26	BACP20B64B	. PLUG.	5199	AR
26A	10164-2	. BUTTON, YELLOW (V26835) (ADDED BY SVA E.O. 80927)	5199	6
26B	20266-8	. BUTTON, GRAY (V26835) (ADDED BY SVA E.O. 80927)	5199	15
26C	10164-3	. BUTTON, WHITE (V26835) (ADDED BY SVA E.O. 80927)	5199	7
27	MS25221-1	. GUARD	5199	2
28	BACS30CG3	. SWITCH.	5199	2
	NAS601-6P	ATTACHING PARTS . SCREW	5199	4
29	69-58784-1	. STRIP ASSY, INSULATING.	5199	1
	NAS514P632-6P	ATTACHING PARTS . SCREW	5199	4
30	69-37735-12	. RECTIFIER ASSY.	5199	1
	NAS601-5P	ATTACHING PARTS . SCREW	5199	2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

24-07-23Y



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF		UNITS
			FROM	TO	
23Y 31	50-11365-71	. PANEL ASSY.	5199		1
32	BACR12X1	. . RING.	5199		2
33	BACG20X2	. . GROMMET	5199		2
34	BACS21X3R	. . STUD ASSY	5199		2
35	BACB28B6-198	. . BUSHING	5199		2
36	50-11365-72	. . PANEL	5199		1
		. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	5199		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					



FIGURE 24A. PANEL ASSY, RADIO AND T-R CIRCUIT BREAKER (SHEET 1)

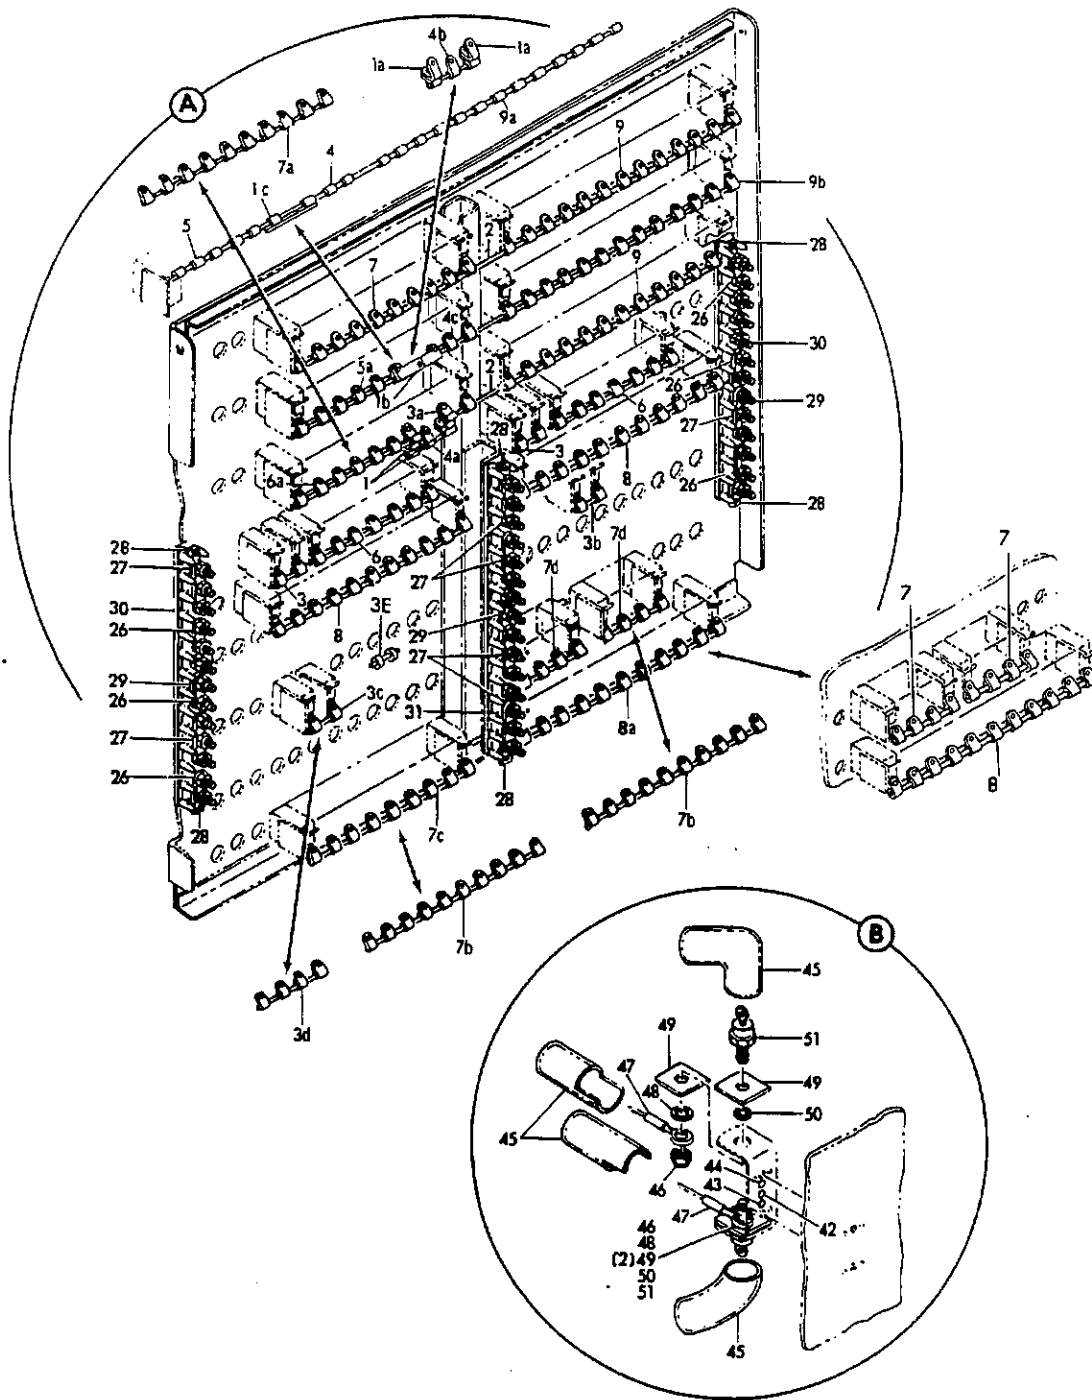


FIGURE 24A. PANEL ASSY. RADIO AND T-R CIRCUIT BREAKER (SHEET 2)

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
24A	65-6447-77	PANEL ASSY, RADIO AND T-R CIRCUIT BREAKER (SEE FIG. 1, ITEM 11)	0150	RF
1	63-10133	• JUMPER, CIRCUIT BREAKER	0150	2
		ATTACHING PARTS		
	NAS602-6P	• SCREW	0150	4
	AN960D8L	• WASHER	0150	4
	NAS679A0BW	• NUT	0150	4
1C	65-6447-74	• JUMPER, (ALTERED FROM BACB29B7-5)	0150	1
2	63-2566	• BUS ASSY, RADIO AND T-R CIRCUIT BREAKER	0150	3
3	BACB29B7-2	• BUS ASSY, (ALTERED FROM BACB29B7-20)	0150	2
3A	BACB29B7-2	• BUS ASSY, (ALTERED FROM BACB29B7-20)	0150	1
3B	BACB29B7-2	• BUS ASSY, (ALTERED FROM BACB29B7-20)	0150	1
3D	BACB29B7-4	• BUS ASSY, (ALTERED FROM BACB29B7-20)	0150	1
3E	BACB29B7-2	• BUS ASSY, (ALTERED FROM BACB29B7-20) (ADDED BY SB 2789)	0150	1
4	BACB29B7-3	• BUS ASSY, (ALTERED FROM BACB29B7-20)	0150	1
4A	BACB29B7-3	• BUS ASSY, (ALTERED FROM BACB29B7-20)	0150	1
4B	BACB29B7-3	• BUS ASSY, (ALTERED FROM BACB29B7-20)	0150	1
5	BACB29B7-6	• BUS ASSY, (ALTERED FROM BACB29B7-20)	0150	1
6	BACB29B7-7	• BUS ASSY, (ALTERED FROM BACB29B7-20)	0150	2
6A	BACB29B7-7	• BUS ASSY, (ALTERED FROM BACB29B7-20)	0150	1
7	BACB29B7-10	• BUS ASSY, (ALTERED FROM BACB29B7-20)	0150	1
7C	BACB29B7-9	• BUS ASSY, (ALTERED FROM BACB29B7-20)	0150	1
7D	BACB29B7-4	• BUS ASSY, (ALTERED FROM BACB29B7-20)	0150	2
8	BACB29B7-11	• BUS ASSY, (ALTERED FROM BACB29B7-20)	0150	2
8A	BACB29B7-11	• BUS ASSY, (ALTERED FROM BACB29B7-20)	0150	1
9	BACB29B7-13	• BUS ASSY, (ALTERED FROM BACB29B7-20)	0150	2
9A	BACB29B7-13	• BUS ASSY, (ALTERED FROM BACB29B7-20)	0150	1
10	BACC18R1A	• CIRCUIT BREAKER	0150	25
		(OPTIONAL BACC18U1)		
10	BACC18U1	• CIRCUIT BREAKER	0150	25
		(OPTIONAL TO BACC18R1A)		
10A	BACC18R1A	• CIRCUIT BREAKER	0150	3
		(OPTIONAL BACC18U1)		
10A	BACC18U1	• CIRCUIT BREAKER	0150	3
		(OPTIONAL TO BACC18R1A)		
10B	BACC18R2A	• CIRCUIT BREAKER	0150	2
		(OPTIONAL BACC18U2)		
10B	BACC18U2	• CIRCUIT BREAKER	0150	2
		(OPTIONAL TO BACC18R2A)		
10C	BACC18R1A	• CIRCUIT BREAKER	0150	2
		(OPTIONAL BACC18U1)		
10C	BACC18U1	• CIRCUIT BREAKER	0150	2
		(OPTIONAL TO BACC18R1A)		
10D	BACC18R2A	• CIRCUIT BREAKER	0101	1
		(OPTIONAL BACC18U2)		
10D	BACC18U2	• CIRCUIT BREAKER	0101	1
		(OPTIONAL TO BACC18R2A)		
10G	BACC18R5B	• CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	1
10G	700-013-5	• CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391)	0150	1
		(OPTIONAL 492-205-102 (V79405))		
10G	492-205-102	• CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391)	0150	1
		(OPTIONAL TO 700-013-5 (V76374))		
10H	BACC18R2A	• CIRCUIT BREAKER	0150	1
		(OPTIONAL BACC18U2)		
10H	BACC18U2	• CIRCUIT BREAKER	0150	1
		(OPTIONAL TO BACC18R2A)		
10J	BACC18R1A	• CIRCUIT BREAKER, (ADDED BY SB 2789)	0150	1
		(OPTIONAL BACC18U1)		
10J	BACC18U1	• CIRCUIT BREAKER, (ADDED BY SB 2789)	0150	1
		(OPTIONAL TO BACC18R1A)		
10K	BACC18R1A	• CIRCUIT BREAKER	0150	1
		(OPTIONAL BACC18U1)		
10K	BACC18U1	• CIRCUIT BREAKER	0150	1
		(OPTIONAL TO BACC18R1A)		
10N	BACC18R1A	• CIRCUIT BREAKER, (DELETED BY SB 2789)	0150	1
		(OPTIONAL BACC18U1)		
10N	BACC18U1	• CIRCUIT BREAKER, (DELETED BY SB 2789)	0150	1
		(OPTIONAL TO BACC18R1A)		
10P	BACC18R5A	• CIRCUIT BREAKER, (ADDED BY RAF MOD 7211.019-188	0150	2
		AND RAF MOD 7211.019-159)		
10Q	BACC18R5B	• CIRCUIT BREAKER, (ADDED BY RAF MOD 7211.019-179)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

24-07-24A

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE						EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6		
R R R R R	24A 10R	BACC18R1A	.	CIRCUIT BREAKER, (DELETED BY RAF MOD 7211-19-270) . .				0150	1
				(OPTIONAL BACC18U1)					
	10R	BACC18U1	.	CIRCUIT BREAKER, (DELETED BY RAF MOD 7211-19-270) . .				0150	1
				(OPTIONAL TO BACC18R1A)					
	10R	MSZZ073-1-1-2	.	CIRCUIT BREAKER, (ADDED BY RAF MOD 7211-19-270) . . .				0150	1
	11	BACC18R2A	.	CIRCUIT BREAKER				0150	17
				(OPTIONAL BACC18U2)					
	11	BACC18U2	.	CIRCUIT BREAKER				0150	17
				(OPTIONAL TO BACC18R2A)					
	11A	BACC18R1A	.	CIRCUIT BREAKER				0150	3
				(OPTIONAL BACC18U1)					
	11A	BACC18U1	.	CIRCUIT BREAKER				0150	3
				(OPTIONAL TO BACC18R1A)					
	11B	BACC18R2A	.	CIRCUIT BREAKER				0150	1
				(OPTIONAL BACC18U2)					
	11B	BACC18U2	.	CIRCUIT BREAKER				0150	1
				(OPTIONAL TO BACC18R2A)					
	11D	BACC18R2A	.	CIRCUIT BREAKER				0150	3
	11E	BACC18R2A	.	CIRCUIT BREAKER				0250	1
				(OPTIONAL BACC18U2)					
	11E	BACC18U2	.	CIRCUIT BREAKER				0250	1
				(OPTIONAL TO BACC18R2A)					
	11F	BACC18R2A	.	CIRCUIT BREAKER				0150	2
				(OPTIONAL BACC18U2)					
	11F	BACC18U2	.	CIRCUIT BREAKER				0150	2
				(OPTIONAL TO BACC18R2A)					
	11L	BACC18R2A	.	CIRCUIT BREAKER				0150	1
	12	BACC18R3A	.	CIRCUIT BREAKER				0150	4
				(OPTIONAL BACC18U3)					
	12	BACC18U3	.	CIRCUIT BREAKER				0150	4
				(OPTIONAL TO BACC18R3A)					
	12A	BACC18R3A	.	CIRCUIT BREAKER				0150	3
				(OPTIONAL BACC18U3)					
	12A	BACC18U3	.	CIRCUIT BREAKER				0150	3
				(OPTIONAL TO BACC18R3A)					
	12B	BACC18R2A	.	CIRCUIT BREAKER (DELETED BY RAF MOD 7211.019-119) . .				0150	1
	12B	BACC18Z5R	.	CIRCUIT BREAKER, (ADDED BY RAF MOD 7211.019-119) . .				0150	1
	12C	BACC18R10B	.	CIRCUIT BREAKER, (DELETED BY SB 3391)				0150	1
	12C	700-013-10	.	CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391 AND . . .				0150	1
				DELETED BY RAF MOD 7211.019-119)					
				(OPTIONAL 492-507-102 (V79405))					
	12C	492-210-102	.	CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391 AND . . .				0150	1
				DELETED BY RAF MOD 7211.019-119)					
				(OPTIONAL TO 700-013-7 (V76374))					
	12C	BACC18Z5R	.	CIRCUIT BREAKER, (ADDED BY RAF MOD 7211.019-119) . .				0150	1
	12D	BACC18Z2R	.	CIRCUIT BREAKER, (ADDED BY RAF MOD 7211.019-119) . .				0150	1
	13	BACC18R5B	.	CIRCUIT BREAKER, (DELETED BY SB 3391)				0150	58
	13	700-013-5	.	CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391)				0150	58
				(OPTIONAL 492-205-102 (V79405))					
	13	492-205-102	.	CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391)				0150	58
				(OPTIONAL TO 700-013-5 (V76374))					
	13A	BACC18R5B	.	CIRCUIT BREAKER, (DELETED BY SB 3391)				0150	1
	13A	700-013-5	.	CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391)				0150	1
				(OPTIONAL 492-205-102 (V79405))					
	13A	492-205-102	.	CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391)				0150	1
				(OPTIONAL TO 700-013-5 (V76374))					
	13B	BACC18R10B	.	CIRCUIT BREAKER, (DELETED BY SB 3391)				0150	1
	13B	700-013-10	.	CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391)				0150	1
				(OPTIONAL 492-210-102 (V79405))					
	13B	492-210-102	.	CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391)				0150	1
				(OPTIONAL TO 700-013-10 (V76374))					
	13C	BACC18R5B	.	CIRCUIT BREAKER, (DELETED BY SB 3391)				0150	1
	13C	700-013-5	.	CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391)				0150	1
				(OPTIONAL 492-205-102 (V79405))					
	13C	492-205-102	.	CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391)				0150	1
				(OPTIONAL TO 700-013-5 (V76374))					
	14	BACC18R7B	.	CIRCUIT BREAKER, (DELETED BY SB 3391)				0150	1
	14	700-013-7	.	CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391)				0150	1
				(OPTIONAL 492-507-102 (V79405))					
	14	492-507-102	.	CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391)				0150	1
				(OPTIONAL TO 700-013-7 (V76374))					
	15	BACC18R10B	.	CIRCUIT BREAKER, (DELETED BY SB 3391)				0150	2
	15	700-013-10	.	CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391)				0150	2
				(OPTIONAL 492-210-102 (V79405))					

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
PARTS CATALOG


FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
24A 15	492-210-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391). (OPTIONAL TO 700-013-10 (V76374))	0150	2
15A	BACC18R7B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	6
15A	700-013-7	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391). (OPTIONAL 492-507-102 (V79405))	0150	6
15A	492-507-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391). (OPTIONAL TO 700-013-7 (V76374))	0150	6
16	BACC18R15B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	2
16	700-013-15	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391). (OPTIONAL 492-215-102 (V79405))	0150	2
16	492-215-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391). (OPTIONAL TO 700-013-15 (V76374))	0150	2
17	BACC18R35B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	1
17	700-013-35	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391). (OPTIONAL 492-235-102 (V79405))	0150	1
17	492-235-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391). (OPTIONAL TO 700-013-35 (V76374))	0150	1
18	BACC18R75C	. CIRCUIT BREAKER	0150	1
18A	BACC18R50C	. CIRCUIT BREAKER	0150	1
19	BACC18L7A	. CIRCUIT BREAKER, (AFFECTED BY AD 69-20-6) (DELETED BY SB 2897)	0150	2
19	10-3344-7	. CIRCUIT BREAKER, (ADDED BY SB 2897)	0150	2
20	1526-014-305	. CIRCUIT BREAKER, (V76374) ATTACHING PARTS	0150	2
	NAS601-6P	. SCREW	0150	2
	NAS601-6P	. SCREW, (USED WITH BACC18R50C, BACC18R75C, BACC18L7A AND 1526-014-305)	0150	10
20A	69-62450-1	. RING, SNAP (ADDED BY SB 2693)	0150	AR
21	BACP20B64B	. PLUG	0150	AR
22	BACP20B43B	. PLUG	0150	AR
22C	AMD63	. PLUG, BUTTON (V96144) (ADDED BY SB 2789).	0150	1
32	MS25221-1	. GUARD	0150	2
33	AN3022-2	. SWITCH	0150	1
34	AN3022-2	. SWITCH ATTACHING PARTS	0150	1
	NAS601-6P	. SCREW	0150	4
34A	50-11365-49	. MASK, LIGHT ATTACHING PARTS	0150	1
	NAS601-7P	. SCREW	0150	2
34B	89735-2-1385	. LAMP ASSY, (V72914) ATTACHING PARTS	0150	1
	NAS601-7P	. SCREW	0150	2
35A	50-11365-60	. PANEL ASSY.	0150	1
36A	BACR12X1	. RING	0150	2
37A	BACG20X2	. GROMMET	0150	2
38A	BACS21X3R	. STUD ASSY	0150	2
39A	BACB28B6-198	. BUSHING	0150	2
40A	50-11365-61	. PANEL	0150	1
41	69-37735-12	. RECTIFIER ASSY, BLOCKING ATTACHING PARTS	0150	1
	NAS601-5P	. SCREW	0150	2
42	BACM9S1B5	. SCOTCH-CAL, SYMBOLS	0150	1
43	BACM9N001AM	. SCOTCH-CAL, 1	0150	1
44	BACM9N001AN	. SCOTCH-CAL, 2	0150	1
45	69-37735-14	. SLEEVE, INSULATING	0150	4
46	NAS679A3W	. NUT	0150	2
47	SE18N	. TERMINAL, (V09922). (OPTIONAL 36153 (V00779))	0150	2
47	36153	. TERMINAL, (V00779). (OPTIONAL TO SE18N (V09922))	0150	2
48	AN960PD10L	. WASHER	0150	2
49	69-37735-10	. WASHER	0150	4
50	BACW10P248TF	. WASHER	0150	2
51	1N1206	. DIODE, (V02735)	0150	2
	BAC27DEL431	. MARKER-ALUMINUM FOIL, AMPERE RATING (ADDED BY SB. 2693)	0150	1
51A	QE33803	. PLACARD, DMEA CIRCUIT BREAKER (V20268) (ADDED BY RAF MOD 7211.019-188 AND RAF MOD 7211.019-159)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE




PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
24A	QC34428	.	CIRCUIT BREAKER AND PLACARD INSTL, P5 CIRCUIT	0150	1
			BREAKER PANEL (VZ0268) (ADDED BY RAF MOD 7211.019-108)		
55	QC34430-2	.	PLACARD, U/C AUDIO CHECK (VZ0268)	0150	1
56	BACC18R2A	.	CIRCUIT BREAKER	0150	1
57	QD34854	.	PLACARD, W/R TR1 AC (VZ0268) (ADDED BY RAF MOD.	0150	1
			7211.019-119)		
58	QD34854-1	.	PLACARD, W/R TR2 AC (VZ0268) (ADDED BY RAF MOD.	0150	1
			7211.019-119)		
59	QD34854-2	.	PLACARD, W/R IND AC (VZ0268) (ADDED BY RAF MOD.	0150	1
			7211.019-119)		
60	BACC18Z7R	.	CIRCUIT BREAKER, (ADDED BY RAF MOD 7211.019-159).	0150	1
62	BACC18R10	.	CIRCUIT BREAKER, (ADDED BY RAF MOD 7211.019-159).	0150	1
64	BACC18R5B	.	CIRCUIT BREAKER, (ADDED BY RAF MOD 7211.019-159).	0150	1
66	BACC18L5A	.	CIRCUIT BREAKER, (ADDED BY RAF MOD 7211.019-159).	0150	1
68	QE33802-1	.	PLACARD, UHF CIRCUIT BREAKER (VZ0268) (ADDED.	0150	2
			BY RAF MOD 7211.019-159)		
70	QE33881	.	PLACARD, PAX CIRCUIT BREAKER (VZ0268) (ADDED.	0150	1
			BY RAF MOD 7211.019-159)		
72	SYE30390	.	PLACARD, SSB CIRCUIT BREAKER (VZ0268) (ADDED.	0150	1
			BY RAF MOD 7211.019-159)		
	361-39-10-74345-101	.	PANEL ASSY, MODIFICATION RADIO AND T-R CIRCUIT.	0150	RF
			BREAKER (VS2500) (ADDED BY RAF 7211.019-225)		
73	700-013-15	.	CIRCUIT BREAKER	0150	2
74	700-013-5	.	CIRCUIT BREAKER	0150	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

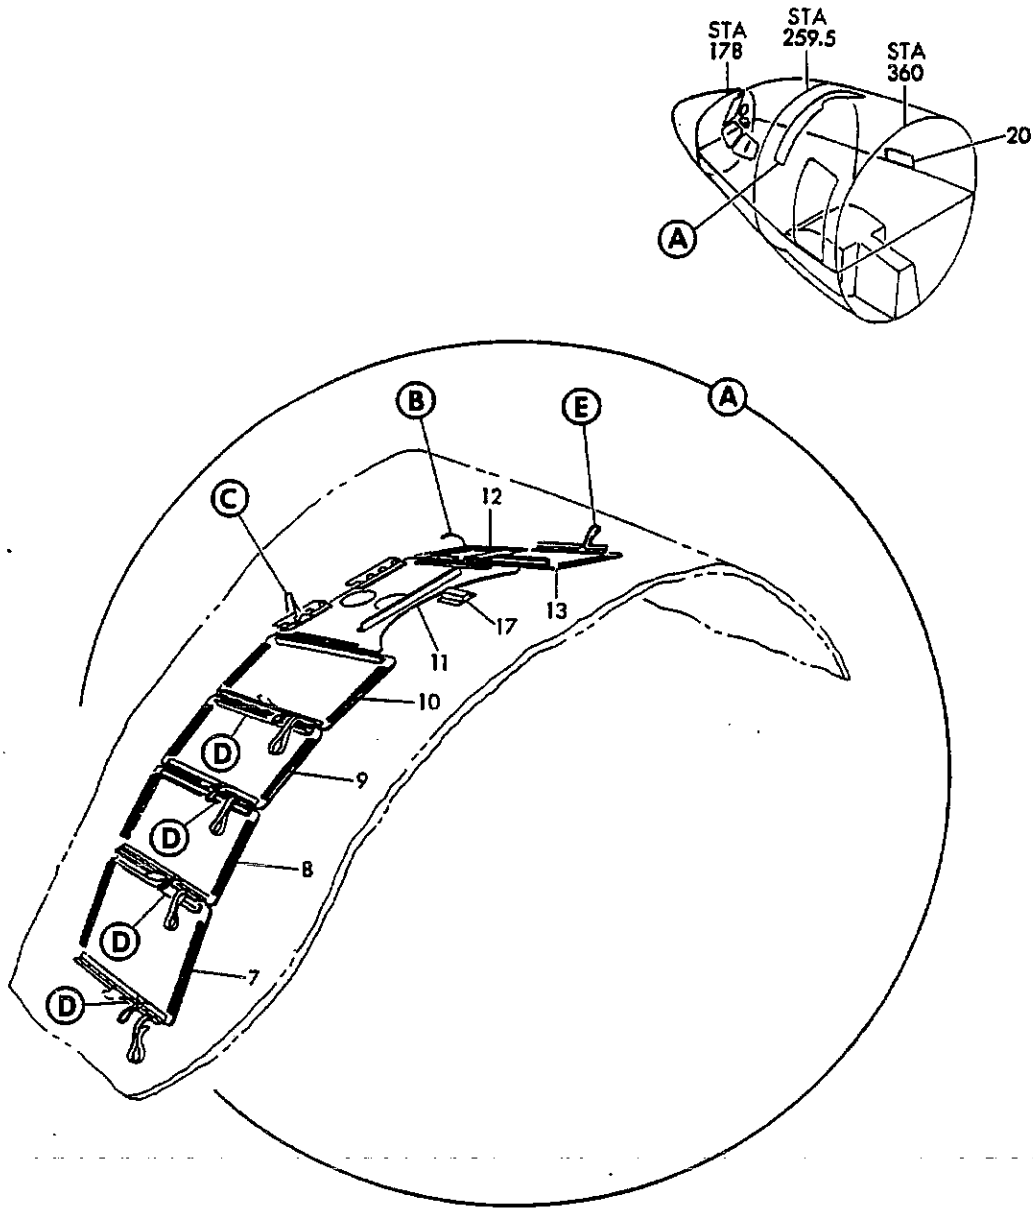

A 2407025 SHT 1 REV 265

FIGURE 25. PANEL INSTL, CIRCUIT BREAKER (SHEET 1)

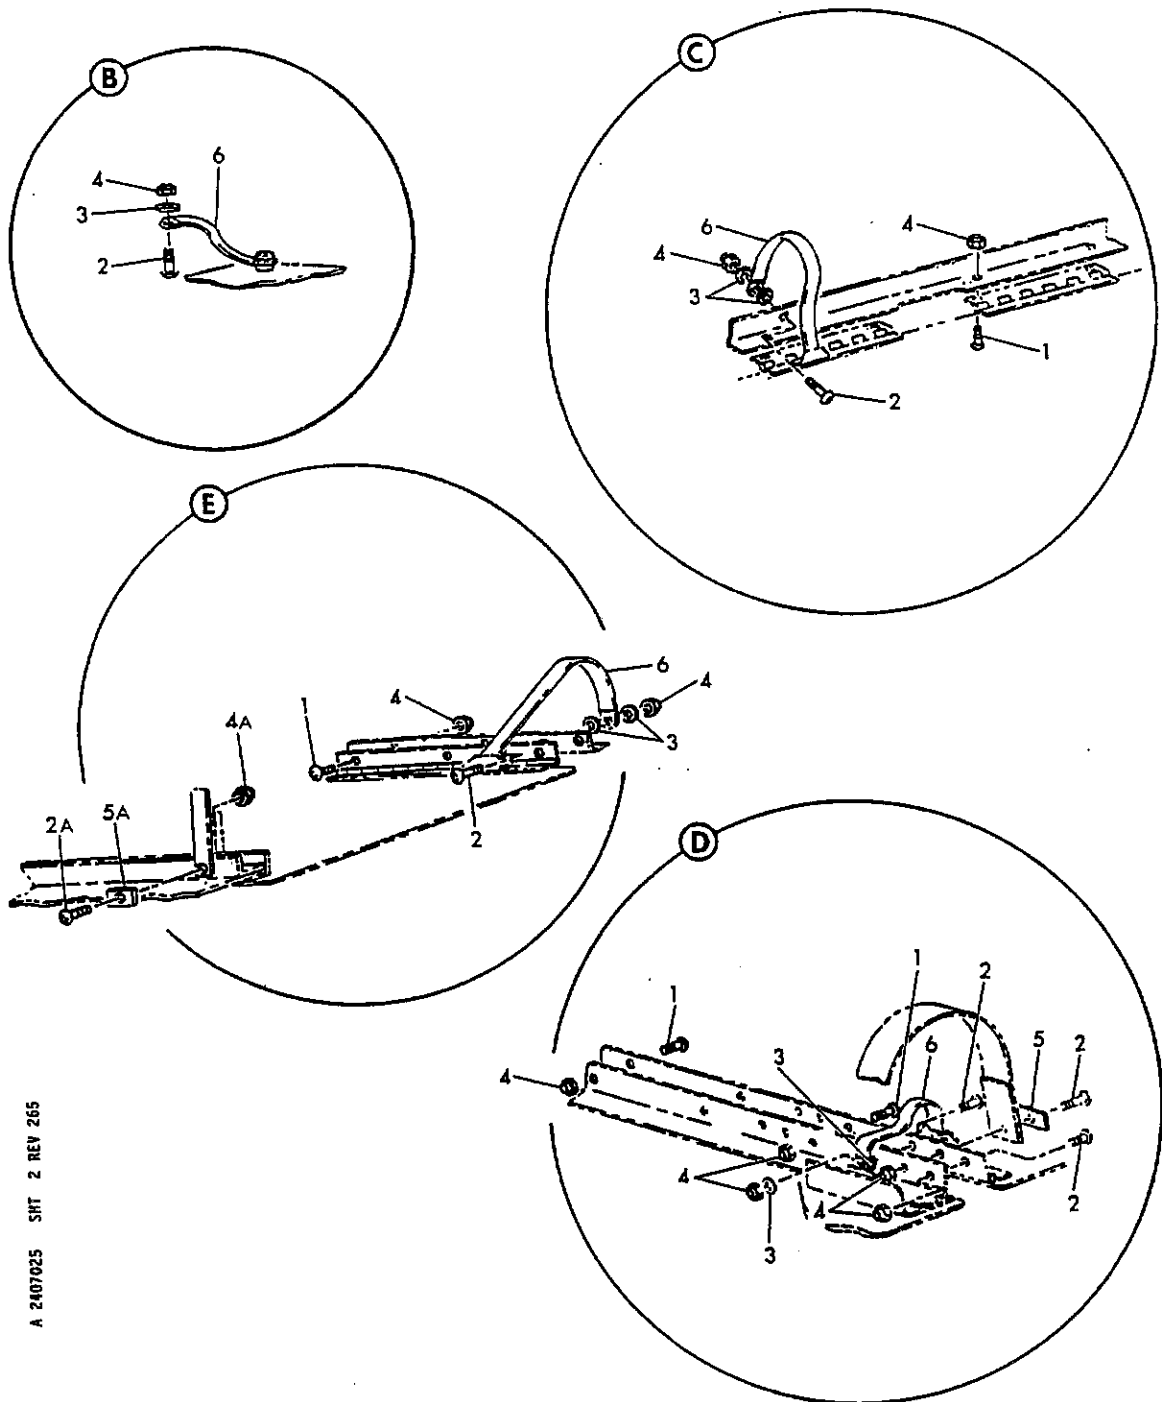

A 2407025 SHT 2 REV 265

FIGURE 25. PANEL INSTL, CIRCUIT BREAKER (SHEET 2)

NOV 21/94

24-07-25

DETAILED PARTS LIST
24-07-25
PAGE 1

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
25	50-11362	PANEL INSTL, CIRCUIT BREAKERS (SEE 25-1, FIG. 1, ITEM 5, 25-1, FIG. 1B, ITEM 5, 25-1, FIG. 1C, ITEM 5, 25-1, FIG. 1D, ITEM 5, 25-1 FIG. 1E, ITEM 5, 25-1, FIG. 1F, ITEM 3A, 25-1, FIG. 1G, ITEM 5, 25-1, FIG. 1H, ITEM 5, 25-1, FIG. 1J, ITEM 5, 25-1, FIG. 2B, ITEM 5, 25-1, FIG. 2C, ITEM 5, 25-1, FIG. 2D, ITEM 3, 25-1, FIG. 2E, ITEM 108, 25-1, FIG. 2F, ITEM 5, 25-1, FIG. 2G, ITEM 5 AND 25-1, FIG. 2H ITEM 5)		RF
1	NAS603-6	. SCREW		19
2	NAS603-8	. SCREW		15
3	AN960D10L	. WASHER.		13
4	NAS679A3W	. NUT		34
5	63-1723	. PLATE, STRAP ATTACHMENT		4
6	50-11362-1	. SLEEVING, CIRCUIT BREAKERS PANEL ELECTRICAL INSULATION		7
7	65-2842-111	. PANEL ASSY, P6 (SEE FIG. 140A).	0150	1
7	65-2842-183	. PANEL ASSY, P6 (SEE FIG. 140Z).	5199	1
8	65-2842-112	. PANEL ASSY, P7 (SEE FIG. 159M).	0150	1
8	65-2842-184	. PANEL ASSY, P7 (SEE FIG. 159Z).	5199	1
9	65-2840-65	. PANEL ASSY, P1 CIRCUIT BREAKER (SEE FIG. 46A)	0150	1
9	65-2840-176	. PANEL ASSY, P1 (SEE FIG. 45C)	5199	1
10	65-2840-66	. PANEL ASSY, P2 CIRCUIT BREAKER (SEE FIG. 65A)	0150	1
10	65-2840-177	. PANEL ASSY, P2 (SEE FIG. 64C)	5199	1
11	65-2841-97	. PANEL ASSY, P3	0150	1
11	65-2841-257	. PANEL ASSY, P3	5199	1
		. . ELECTRICAL POWER, (SEE FIG. 71, 73, 74, 75, 76, 77, 78, 79, 79A, 79C, 79H, 80, 80B, 81, 82, 82A, 82B, 82C, 83, 83A, 83B, 84, 84A, 84B, 84C, 84D, 84E, 84F, 84G, 84H, 84J, 84K, 84L, 84M, 84N, 84P, 84Q, 84R, 84U, 84V, 84W, 84X AND 159R)		
		. . LIGHTS, (SEE 33-3, FIG. 38)		
12	65-2841-99	. PANEL ASSY, P4 CIRCUIT BREAKER FORWARD.	0150	1
12	65-2841-259	. PANEL ASSY, P4 FORWARD.	5199	1
		. . ELECTRICAL POWER (SEE FIG. 98B, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 115, 116, 116A, 116B, 117, 117B, 118, 119, 120, 121, 121A, 121B, 121D, 121E, 121F, 121G, 121H, 121J, 121P, 121Q, 121R, 138A AND 138B)		
		. . REQUIRED PLACARDS, (SEE 11-7, FIG. 6)		
13	65-2841-98	. PANEL ASSY, P4 CIRCUIT BREAKER AFT (SEE FIG. 103A).	0150	1
13	65-2841-258	. PANEL ASSY, P4 AFT (SEE FIG. 102B).	5199	1
20	361-39-11-74195-101	. A/R CIRCUIT BREAKER PANEL ASSY, (VS2500) (ADDED BY. . . RAF 7211.019-225) (SEE 24-07, FIG. 161)	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
45C	65-2840-176		PANEL ASSY, P1 CIRCUIT BREAKER (SEE FIG. 25, ITEM 9).	5199	RF
1	BACB2987-3		. BUS ASSY, (ALTERED FROM; BACB2987-20).	5199	5
1B	BACB2987-2		. BUS ASSY, (ALTERED FROM; BACB2987-20).	5199	1
1C	BACB2987-3		. BUS ASSY, (ALTERED FROM; BACB2987-20).	5199	1
2	BACB2987-4		. BUS ASSY, (ALTERED FROM; BACB2987-20).	5199	1
3	BACB2987-5		. BUS ASSY, (ALTERED FROM; BACB2987-20).	5199	1
4	63-2597-1		. BUS	5199	3
4A	63-2597-1		. BUS	5199	3
5	65-2840-34		. SLEEVE, INSULATING.	5199	3
5A	65-2840-34		. SLEEVE, INSULATING.	5199	3
6	BACC18R2A		. CIRCUIT BREAKER	5199	1
7	BACC18R3A		. CIRCUIT BREAKER	5199	6
8	BACC18U3		. CIRCUIT BREAKER (OPTIONAL BACC18R3A)	5199	3
8	BACC18R3A		. CIRCUIT BREAKER (OPTIONAL TO BACC18U3)	5199	3
8A	BACC18U3		. CIRCUIT BREAKER (OPTIONAL BACC18R3A)	5199	1
8A	BACC18R3A		. CIRCUIT BREAKER (OPTIONAL TO BACC18U3)	5199	1
9	BACC18U5		. CIRCUIT BREAKER (OPTIONAL BACC18R5B)	5199	14
9	BACC18R5B		. CIRCUIT BREAKER (OPTIONAL TO BACC18U5)	5199	14
9A	BACC18U5		. CIRCUIT BREAKER (OPTIONAL BACC18R5B)	5199	1
9A	BACC18R5B		. CIRCUIT BREAKER (OPTIONAL TO BACC18U5)	5199	1
9C	BACC18U5		. CIRCUIT BREAKER (OPTIONAL BACC18R5B)	5199	1
9C	BACC18R5B		. CIRCUIT BREAKER (OPTIONAL TO BACC18U5)	5199	1
10	BACC18U7		. CIRCUIT BREAKER (OPTIONAL BACC18R7B)	5199	5
10	BACC18R7B		. CIRCUIT BREAKER (OPTIONAL TO BACC18U7)	5199	5
11	BACC18U10		. CIRCUIT BREAKER (OPTIONAL BACC18R10B)	5199	3
11	BACC18R10B		. CIRCUIT BREAKER (OPTIONAL TO BACC18U10)	5199	3
11B	BACC18R2A		. CIRCUIT BREAKER	5199	2
12	BACC18R25B		. CIRCUIT BREAKER	5199	1
13	10-60806-5		. CIRCUIT BREAKER	5199	1
14	10-60806-15		. CIRCUIT BREAKER	5199	1
15	10-60806-20		. CIRCUIT BREAKER	5199	1
16	10-60806-25		. CIRCUIT BREAKER	5199	1
	NAS601-5P		. SCREW, (USED WITH 10-60806-5, -15 AND -20). NO. 65C22565-1)	5199	6
	NAS601-5P		. SCREW, (USED WITH 10-60806-25).	5199	2
16B	20266-8		. BUTTON, GRAY (V26835) (ADDED BY SVA E.O. 80927)	5199	4
16C	10164-3		. BUTTON, WHITE (V26835) (ADDED BY SVA E.O. 80927)	5199	3
17	BACP20B43		. PLUG	5199	AR
18	BACP20B64		. PLUG	5199	AR
19	66-1923-1		. STRAP, PANEL STOP	5199	1
20	63-1743		. PLATE, STRAP ATTACHMENT	5199	1
	MS20470A5		. ATTACHING PARTS RIVET	5199	2
21	BACJ40F33-20C		. JUMPER ASSY ATTACHING PARTS	5199	1
	NAS603-6P		. SCREW	5199	1
	BACN10JC3		. NUT	5199	1
22	69-2190-39		. PANEL ASSY.	5199	1
23	BACR12X1		. RING	5199	2
24	BAC21X7R		. STUD ASSY	5199	2
25	BACG20X2		. GROMMET	5199	2
26	69-2190-2		. STRAP, INSULATING	5199	2
27	69-2190-6		. STRAP, INSULATING	5199	1
28	69-2190-7		. STRAP, INSULATING	5199	1
29	69-2190-3		. HINGE, (ALTERED FROM; AN257-4-1490).	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/90

24-07-45C

DETAILED PARTS LIST
24-07-45C
PAGE 1

Intercontinental

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
45C	MS20426D5	ATTACHING PARTS		
		. . RIVET	5199	11
30	69-2190-40	. . PANEL	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

DETAILED PARTS LIST
24-07-45C
PAGE 2

24-07-45C

RAF
NOV 21/90

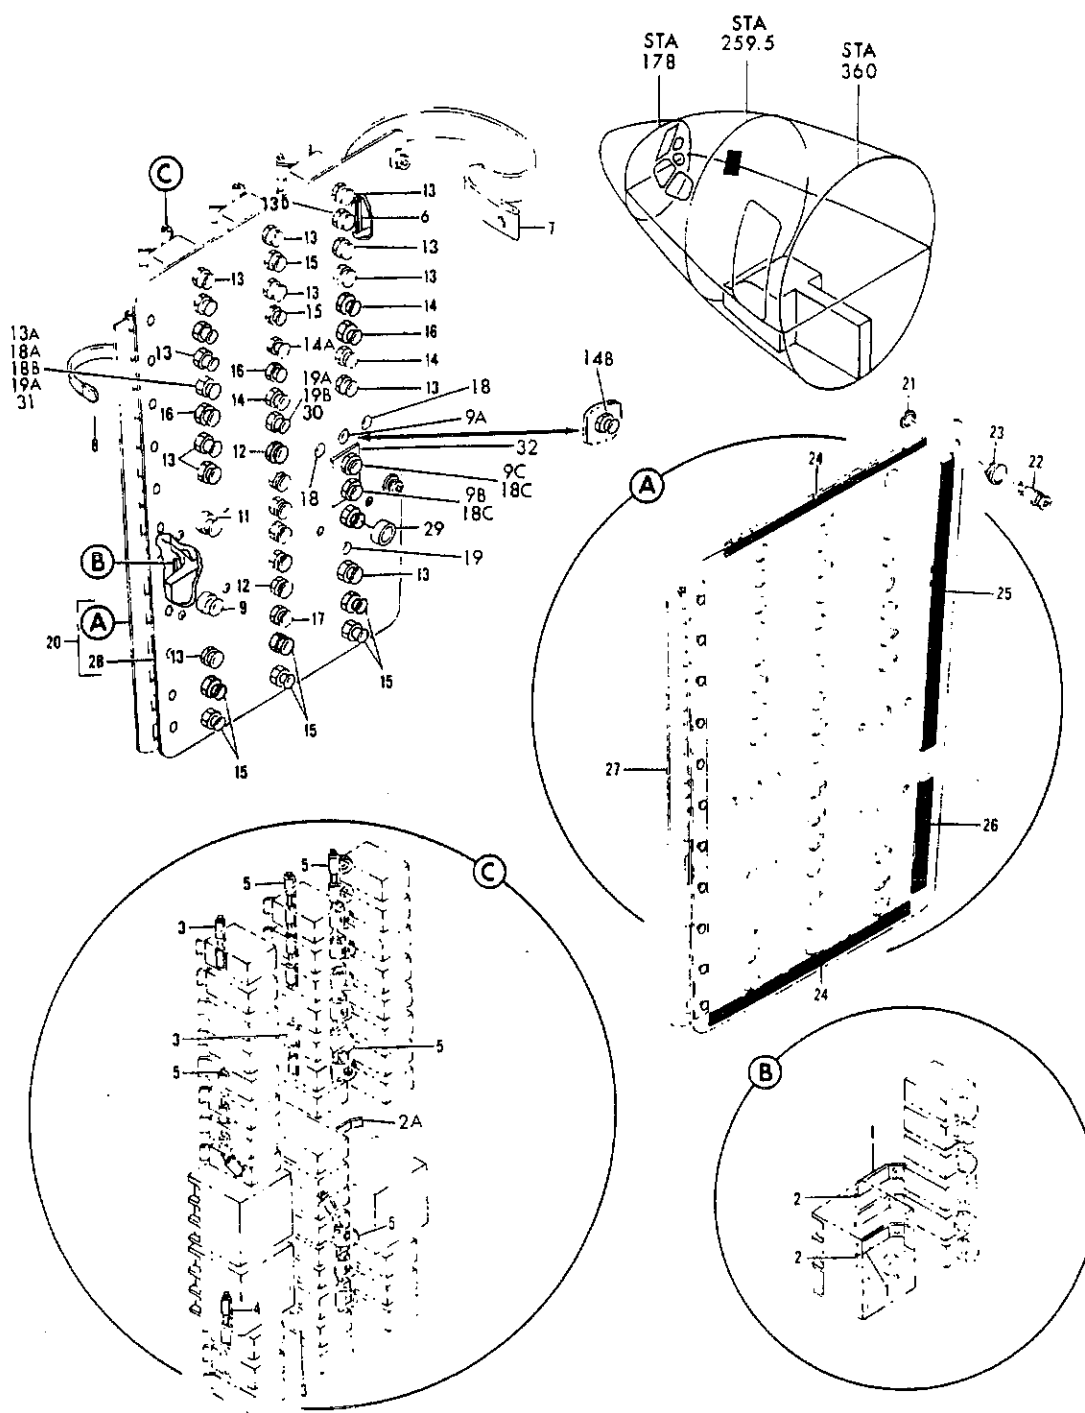


FIGURE 46A. PANEL ASSY, P1 CIRCUIT BREAKER



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 46A	65-2840-65	PANEL ASSY, P1 CIRCUIT BREAKER (SEE FIG. 25, ITEM 9).	0150	RF
R 1	65-2840-34	. SLEEVE, P1 CIRCUIT BREAKER PANEL INSULATING	0150	3
R 2	63-2597-1	. BUS, CIRCUIT BREAKER.	0150	3
R 3	BACB2987-2	. BUS ASSY, (ALTERED FROM BACB2987-20).	0150	3
R 4	BACB2987-3	. BUS ASSY, (ALTERED FROM BACB2987-20).	0150	1
R 5	BACB2987-4	. BUS ASSY, (ALTERED FROM BACB2987-20).	0150	5
R 6	63-1743	. PLATE, STRAP ATTACHMENT	0150	1
R	MS20470A5	. ATTACHING PARTS . RIVET	0150	2
R 7	66-1923-1	. STRAP, PANEL STOP	0150	1
R 8	BACJ40F33-20C	. JUMPER ASSY	0150	1
R	NAS603-6	. ATTACHING PARTS . SCREW	0150	1
R	NAS679A3W	. NUT	0150	1
R 9	BACC18L5A	. CIRCUIT BREAKER, (AFFECTED BY AD 69-20-6) (DELETED BY SB 2897)	0150	1
R 9	10-3344-5	. CIRCUIT BREAKER, (ADDED BY SB 2897)	0150	1
R 10	BACC18L15A	. CIRCUIT BREAKER, (AFFECTED BY AD 69-20-6) (DELETED BY SB 2897)	0150	1
R 10	10-3344-15	. CIRCUIT BREAKER, (ADDED BY SB 2897)	0150	1
R 11	BACC18L20A	. CIRCUIT BREAKER, (AFFECTED BY AD 69-20-6) (DELETED BY SB 2897)	0150	1
R 11	10-3344-20	. CIRCUIT BREAKER, (ADDED BY SB 2897)	0150	1
R	NAS601-5	. ATTACHING PARTS . SCREW	0150	6
R 12	BACC18R3A	. CIRCUIT BREAKER	0150	6
R 13	BACC18R5B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	13
R 13	700-013-5	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391). (OPTIONAL 492-205-102 (V79405))	0150	13
R 13	492-205-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391). (OPTIONAL TO 700-013-5 (V76374))	0150	13
R 13B	BACC18R5B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	1
R 13B	700-013-5	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391). (OPTIONAL 492-205-102 (V79405))	0150	1
R 13B	492-205-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391). (OPTIONAL TO 700-013-5 (V76374))	0150	1
R 14	BACC18R7B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	3
R 14	700-013-7	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391). (OPTIONAL 492-507-102 (V79405))	0150	3
R 14	492-507-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391). (OPTIONAL TO 700-013-7 (V76374))	0150	3
R 14A	BACC18R7B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	1
R 14A	700-013-7	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391). (OPTIONAL 492-220-102 (V79405))	0150	1
R 14A	492-507-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391). (OPTIONAL TO 700-013-7 (V76374))	0150	1
R 14B	BACC18L15A	. CIRCUIT BREAKER, (ADDED BY RAF MOD 7211.019-179).	0150	1
R 15	BACC18R10B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	7
R 15	700-013-10	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391). (OPTIONAL 492-210-102 (V79405))	0150	7
R 15	492-210-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391). (OPTIONAL TO 700-013-10 (V76374))	0150	7
R 16	BACC18R20B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	3
R 16	700-013-20	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391). (OPTIONAL 492-220-102 (V79405))	0150	3
R 16	492-220-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391). (OPTIONAL TO 700-013-20 (V76374))	0150	3
R 17	BACC18R25B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	1
R 17	700-013-25	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391). (OPTIONAL 492-225-102 (V79405))	0150	1
R 17	492-225-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391). (OPTIONAL TO 700-013-25 (V76374))	0150	1
R 18	BACP20B43	. PLUG.	0150	AR
R 18A	69-62450-1	. RING, SNAP (ADDED BY SB 2693)	0150	AR
R 19	BACP20B64	. PLUG.	0150	AR
R 20	69-2190-34	. PANEL ASSY, LH CIRCUIT BREAKER.	0150	1
R 21	BACR12X1	. RING.	0150	2
R 22	40S5-7	. STUD ASSY, (V71286)	0150	2
R 23	BACG20X2	. GROMMET	0150	2
R 24	69-2190-2	. STRIP, LH CIRCUIT BREAKER PANEL INSULATING.	0150	2
R 25	69-2190-6	. STRIP, LH CIRCUIT BREAKER PANEL INSULATING.	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/91

24-07-46A

DETAILED PARTS LIST
24-07-46A
PAGE 1

Intercontinental

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1	2	3	4	5	6	7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R	46A	26								. . STRIP, LH CIRCUIT BREAKER PANEL INSULATING.	0150	1
		27								. . HINGE, LH CIRCUIT BREAKER PANEL (ALTERED FROM AN257-4-1490)	0150	1
										ATTACHING PARTS		
			MS20426D5							. . RIVET	0150	11
										-----*		
		28	69-2190-28							. . PANEL, LH CIRCUIT BREAKER	0150	1
			BAC27DEL431							. MARKER-ALUMINUM FOIL, AMPERE RATING (ADDED BY SB. 2693)	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE												

DETAILED PARTS LIST
24-07-46A
PAGE 2

24-07-46A

RAF
NOV 21/91

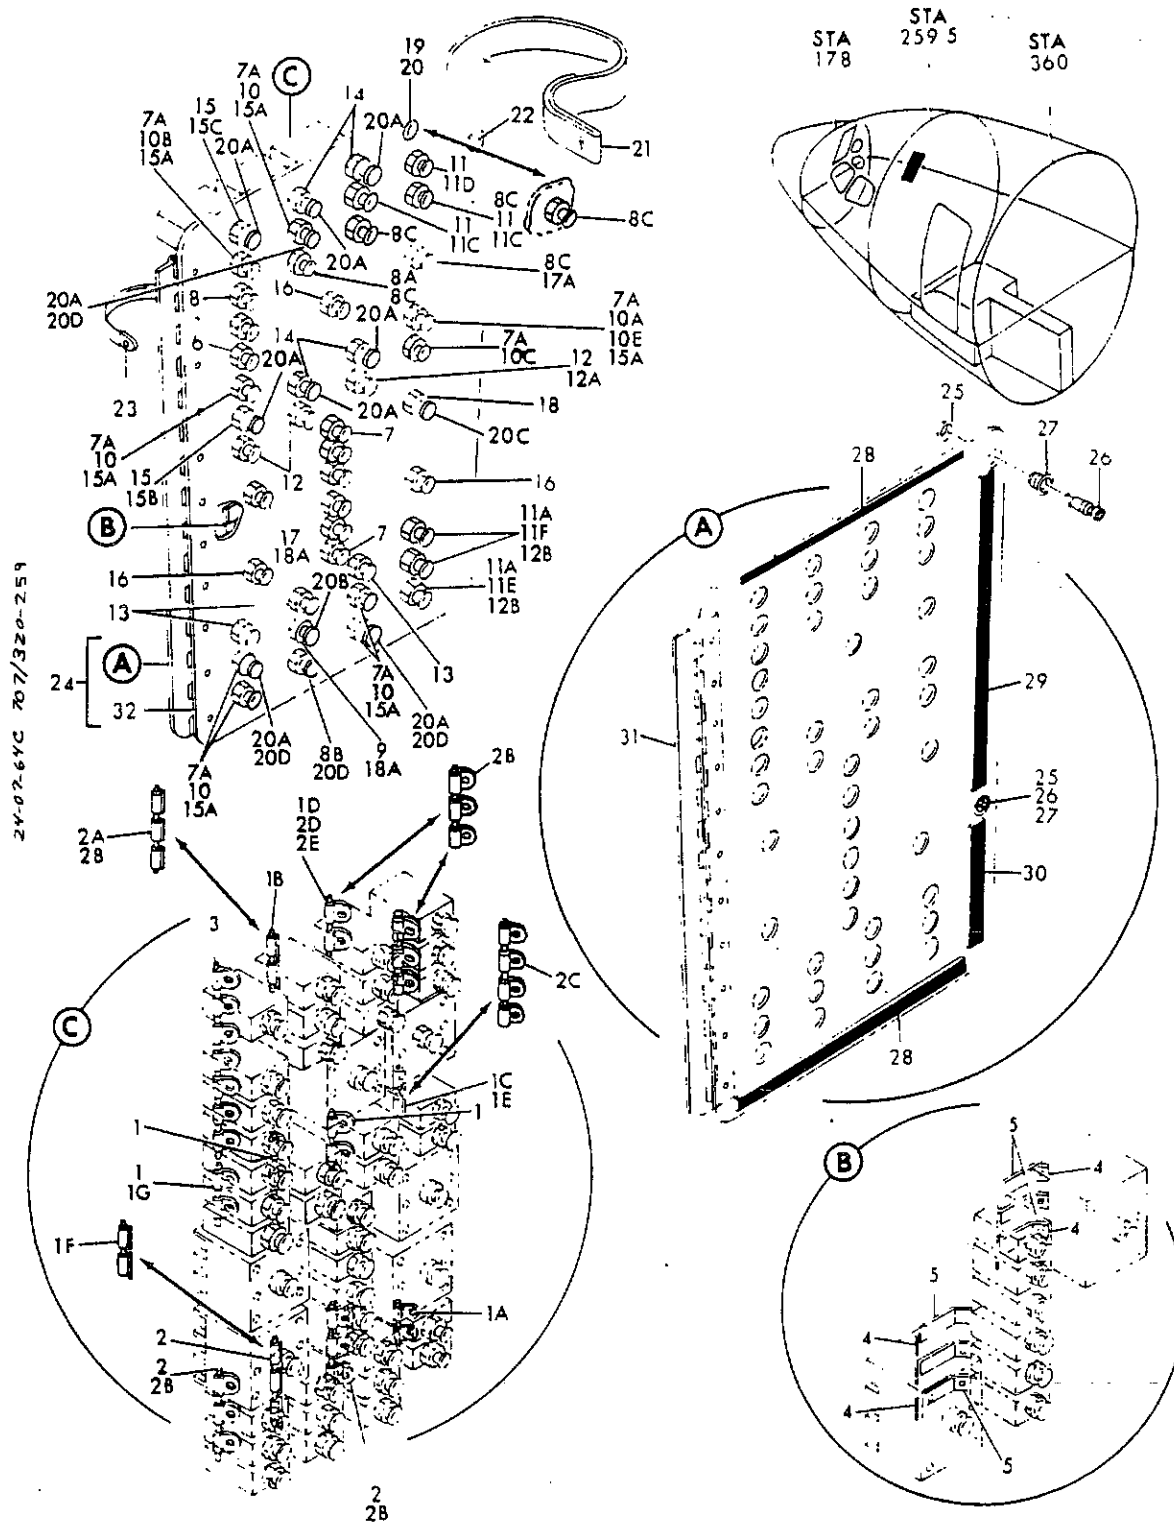


FIGURE 64C. PANEL ASSY, P2 CIRCUIT BREAKER

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 64C	65-2840-177	PANEL ASSY, P2 CIRCUIT BREAKER (SEE FIG. 25, ITEM 10)	5199	RF
R 1	BACB2987-2	. BUS ASSY, (ALTERED FROM; BACB2987-20)	5199	3
R 1B	BACB2987-2	. BUS ASSY, (ALTERED FROM; BACB2987-20)	5199	1
R 2	BACB2987-3	. BUS ASSY, (ALTERED FROM; BACB2987-20)	5199	3
R 3	BACB2987-6	. BUS ASSY, (ALTERED FROM; BACB2987-20)	5199	1
R 4	63-2597-1	. BUS	5199	6
R 5	65-2840-34	. SLEEVE, INSULATING	5199	6
R 6	BACC18R2A	. CIRCUIT BREAKER	5199	1
R 7	BACC18R3A	. CIRCUIT BREAKER	5199	6
R 8	BACC18U3	. CIRCUIT BREAKER	5199	2
R 8	BACC18R3A	(OPTIONAL BACC18R3A)		
R 8B	BACC18U3	. CIRCUIT BREAKER	5199	2
R 8B	BACC18R3A	(OPTIONAL TO BACC18U3)		
R 9	BACC18R5B	. CIRCUIT BREAKER	5199	1
R 10	BACC18U5	. CIRCUIT BREAKER	5199	6
R 10	BACC18R5B	(OPTIONAL BACC18R5B)		
R 10B	BACC18U5	. CIRCUIT BREAKER	5199	6
R 10B	BACC18R5B	(OPTIONAL TO BACC18U5)		
R 11	BACC18U7	. CIRCUIT BREAKER	5199	1
R 11	BACC18R7B	(OPTIONAL BACC18U7)		
R 12	BACC18U10	. CIRCUIT BREAKER	5199	3
R 12	BACC18R10B	(OPTIONAL BACC18U10)		
R 12B	BACC18U10	. CIRCUIT BREAKER	5199	3
R 12B	BACC18R10B	(OPTIONAL BACC18U10)		
R 13	BACC18R20B	. CIRCUIT BREAKER	5199	3
R 14	BACC18R25B	. CIRCUIT BREAKER	5199	4
R 15	BACC18R35B	. CIRCUIT BREAKER	5199	2
R 16	10-60806-7	. CIRCUIT BREAKER	5199	3
R 17	10-60806-10	. CIRCUIT BREAKER	5199	1
R 18	10-60806-20	. CIRCUIT BREAKER	5199	1
R	NAS601-5P	ATTACHING PARTS		
R		. SCREW, (USED WITH 10-60806-7, 10-60806-10 AND 10-60806-20)	5199	12
R 19	BACP20B43	. PLUG	5199	AR
R 20	BACP20B64	. PLUG	5199	AR
R 20A	10164-2	. BUTTON, YELLOW (V26835) (ADDED BY SVA E.O. 80927)	5199	9
R 20B	20266-8	. BUTTON, GRAY (V26835) (ADDED BY SVA E.O. 80927)	5199	1
R 20C	10164-3	. BUTTON, WHITE (V26835) (ADDED BY SVA E.O. 80927)	5199	1
R 21	66-1923-1	. STRAP, PANEL STOP	5199	1
R 22	63-1743	. PLATE, STRAP ATTACHMENT	5199	1
R	MS20470A5	ATTACHING PARTS		
R		. RIVET	5199	2
R 23	BACJ40F33-20C	. JUMPER ASSY	5199	1
R	NAS603-6P	ATTACHING PARTS		
R	BACN10JC3	. SCREW	5199	1
R		. NUT	5199	1
R 24	69-2190-41	. PANEL ASSY	5199	1
R 25	BACR12X1	. RING	5199	2
R 26	BACS21X7R	. STUD ASSY	5199	2
R 27	BACG20X2	. GROMMET	5199	2
R 28	69-2190-2	. STRIP, INSULATING	5199	2
R 29	69-2190-6	. STRIP, INSULATING	5199	1
R 30	69-2190-7	. STRIP, INSULATING	5199	1
R 31	69-2190-3	. HINGE, (ALTERED FROM; AN257-4-1490)	5199	1
R	MS20426D5	ATTACHING PARTS		
R		. RIVET	5199	11

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/91

24-07-64C

DETAILED PARTS LIST
24-07-64C
PAGE 1

Intercontinental
PARTS CATALOG

R	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
	64C 32	69-2190-42	. . PANEL							5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

DETAILED PARTS LIST
24-07-64C
PAGE 2

24-07-64C

RAF
NOV 21/91

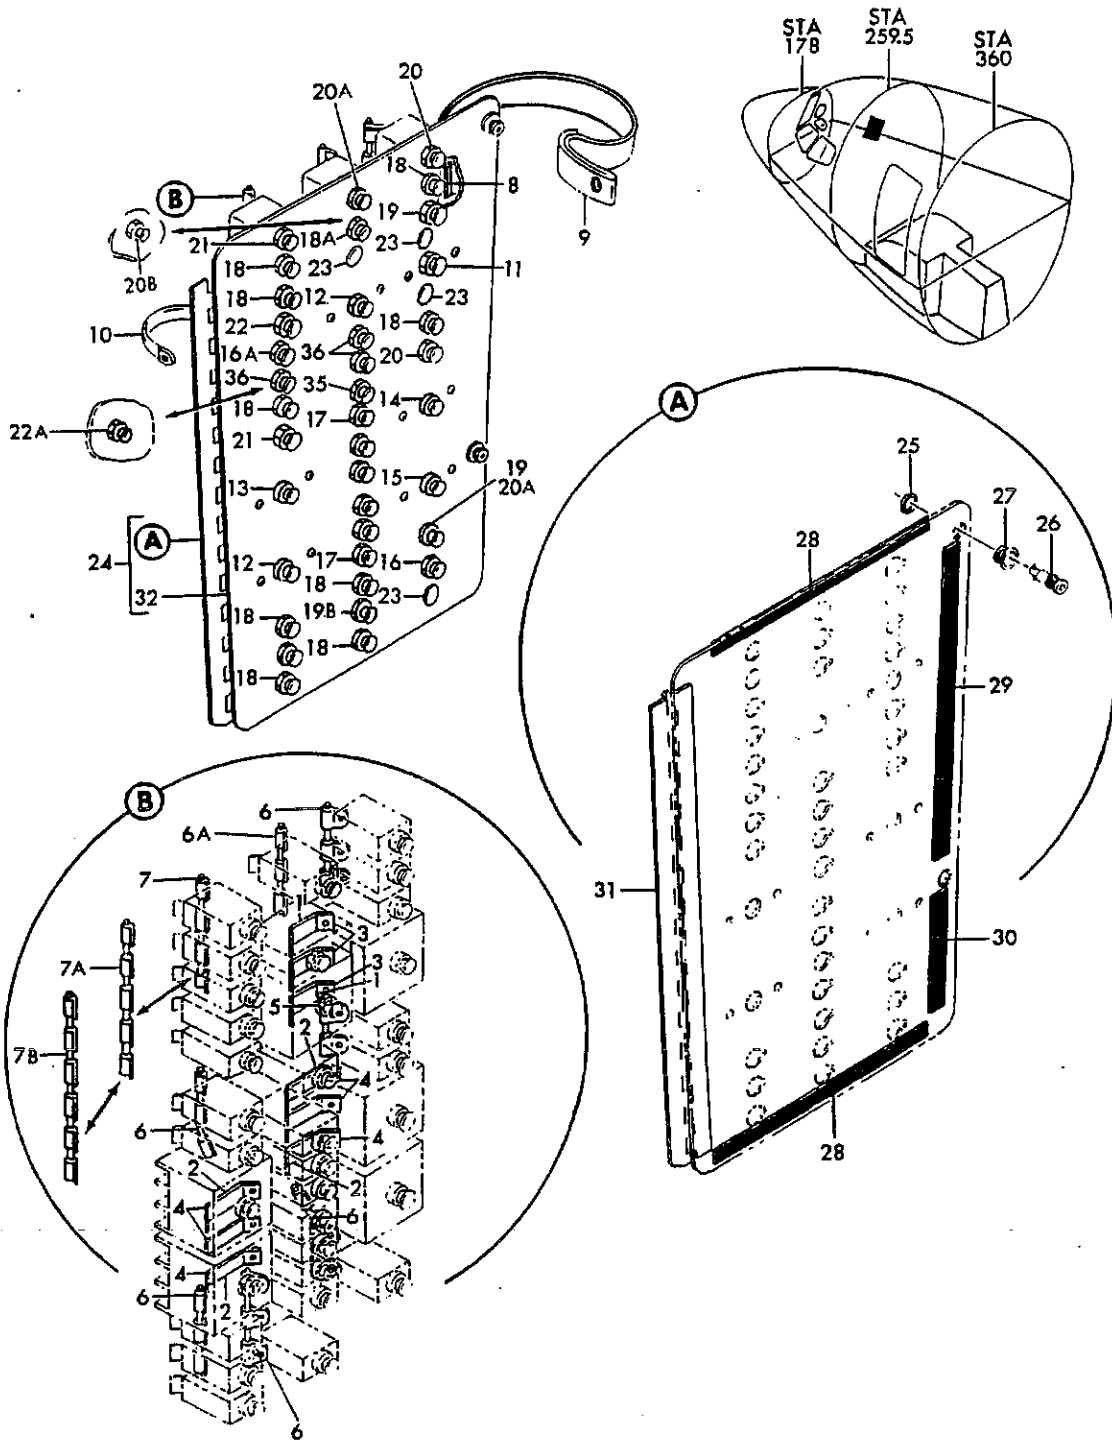


FIGURE 65A. PANEL ASSY. P2 CIRCUIT BREAKER



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
			1 2 3 4 5 6 7		
R	65A	65-2840-66	PANEL ASSY, P2 CIRCUIT BREAKER (SEE FIG. 25, ITEM 10)	0150	RF
R	1	65-2840-6	. SLEEVE, P2 CIRCUIT BREAKER INSULATING	0150	3
R	2	65-2840-34	. SLEEVE, P2 CIRCUIT BREAKER INSULATING	0150	6
R	3	63-2597	. BUS, CIRCUIT BREAKER.	0150	3
R	4	63-2597-1	. BUS, CIRCUIT BREAKER.	0150	6
R	5	BACB2987-2	. BUS ASSY.	0150	1
R	6	BACB2987-3	. BUS ASSY.	0150	5
R	6A	BACB2987-3	. BUS ASSY.	0150	1
R	7A	BACB2987-5	. BUS ASSY.	0150	1
R	8	63-1743	. PLATE, STRAP ATTACHMENT	0150	1
			ATTACHING PARTS		
R		MS20470A5	. RIVET	0150	2
			-----*		
R	9	66-1923-1	. STRAP, PANEL STOP	0150	1
	10	BACJ40F33-20C	. JUMPER ASSY	0150	1
			ATTACHING PARTS		
		NAS603-6P	. SCREW	0150	1
		NAS679A3W	. NUT	0150	1
			-----*		
R	11	BACC18L5A	. CIRCUIT BREAKER, (AFFECTED BY AD 69-20-6) (DELETED BY SB 2897)	0150	1
R	11	10-3344-5	. CIRCUIT BREAKER, (ADDED BY SB 2897)	0150	1
R	12	BACC18L7A	. CIRCUIT BREAKER, (AFFECTED BY AD 69-20-6) (DELETED BY SB 2897 AND 2898)	0150	2
R	12	10-3344-7	. CIRCUIT BREAKER, (ADDED BY SB 2897 AND 2898).	0150	2
R	13	BACC18L15A	. CIRCUIT BREAKER, (AFFECTED BY AD 69-20-6) (DELETED BY SB 2897)	0150	1
R	13	10-3344-15	. CIRCUIT BREAKER, (ADDED BY SB 2897)	0150	1
R	14	BACC18L20A	. CIRCUIT BREAKER, (AFFECTED BY AD 69-20-6) (DELETED BY SB 2897)	0150	1
R	14	10-3344-20	. CIRCUIT BREAKER, (ADDED BY SB 2897)	0150	1
R	15	BACC18L25A	. CIRCUIT BREAKER, (AFFECTED BY AD 69-20-6) (DELETED BY SB 2897)	0150	1
R	15	10-3344-25	. CIRCUIT BREAKER, (ADDED BY SB 2897)	0150	1
			ATTACHING PARTS		
R		NAS601-5P	. SCREW	0150	AR
			-----*		
R	16	BACC18R2A	. CIRCUIT BREAKER	0150	1
R	16A	BACC18R2A	. CIRCUIT BREAKER	0150	1
R	17	BACC18R3A	. CIRCUIT BREAKER	0150	6
R	18	BACC18R5B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	10
R	18	700-013-5	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391).	0150	10
			(OPTIONAL 492-205-102 (V79405))		
R	18	492-205-102	. CIRCUIT BREKER, (V79405) (ADDED BY SB 3391)	0150	10
			(OPTIONAL TO 700-013-5 (V76374))		
R	18A	BACC18R5B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	1
R	18A	700-013-5	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391).	0150	1
			(OPTIONAL 492-205-102 (V79405))		
R	18A	492-205-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391).	0150	1
			(OPTIONAL TO 700-013-5 (V76374))		
R	19	BACC18R7B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	1
R	19	700-013-7	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391).	0150	1
			(OPTIONAL 492-507-102 (V79405))		
R	19	492-507-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391).	0150	1
			(OPTIONAL TO 700-013-7 (V76374))		
R	19B	BACC18R10B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	2
R	19B	700-013-10	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391).	0150	2
			(OPTIONAL 492-210-102 (V79405))		
R	19B	492-210-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391).	0150	2
			(OPTIONAL TO 700-013-10 (V76374))		
R	20	BACC18R25B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	3
R	20	700-013-25	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391).	0150	3
			(OPTIONAL 492-225-102 (V79405))		
R	20	492-225-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391).	0150	3
			(OPTIONAL TO 700-013-25 (V76374))		
R	20A	BACC18R25B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	1
R	20A	700-013-25	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391).	0150	1
			(OPTIONAL 492-225-102 (V79405))		
R	20A	492-225-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391).	0150	1
			(OPTIONAL TO 700-013-25 (V76374))		
R	21	BACC18R35B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	2
R	21	700-013-35	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391).	0150	2
			(OPTIONAL 492-235-102 (V79405))		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

RAF
NOV 21/91

24-07-65A

DETAILED PARTS LIST
24-07-65A
PAGE 1

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
65A	21	492-235-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391). (OPTIONAL TO 700-013-35 (V76374))	0150	2
	22	1500-061-1	. CIRCUIT BREAKER, (V76374)	0150	1
	23	BACP20B43	. PLUG.	0150	AR
	23A	69-62450-1	. RING, SNAP (ADDED BY SB 2693)	0150	AR
	24	69-2190-35	. PANEL ASSY, LH CIRCUIT BREAKER.	0150	1
	25	BACR12X1	. . RING.	0150	2
	26	4055-7	. . STUD ASSY, (V71286)	0150	2
	27	BACG20X2	. . GROMMET	0150	2
	28	69-2190-2	. . STRIP, LH CIRCUIT BREAKER PANEL INSULATING.	0150	2
	29	69-2190-6	. . STRIP, LH CIRCUIT BREAKER PANEL INSULATING.	0150	1
	30	69-2190-7	. . STRIP, LH CIRCUIT BREAKER PANEL INSULATING.	0150	1
	31	69-2190-3	. . HINGE, LH CIRCUIT BREAKER PANEL (ALTERED FROM . . . AN257-4-1490)	0150	1
			ATTACHING PARTS		
		MS20426D5	. . RIVET	0150	11
			-----*		
	32	69-2190-31	. . PANEL, LH CIRCUIT BREAKER	0150	1
		BAC27DEL431	. MARKER-ALUMINUM FOIL, AMPERE RATING (ADDED BY SB. . . 2693)	0150	1
R R	35	700-013-10	. CIRCUIT BREAKER, (V76374) (ADDED BY RAF 7211.019-225)	0150	1
	36	700-013-15	. CIRCUIT BREAKER, (V76374) (ADDED BY RAF 7211.019-225)	0150	3
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

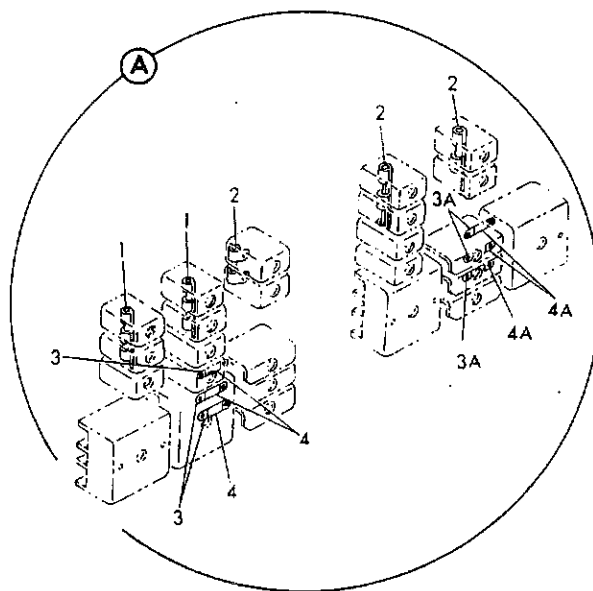
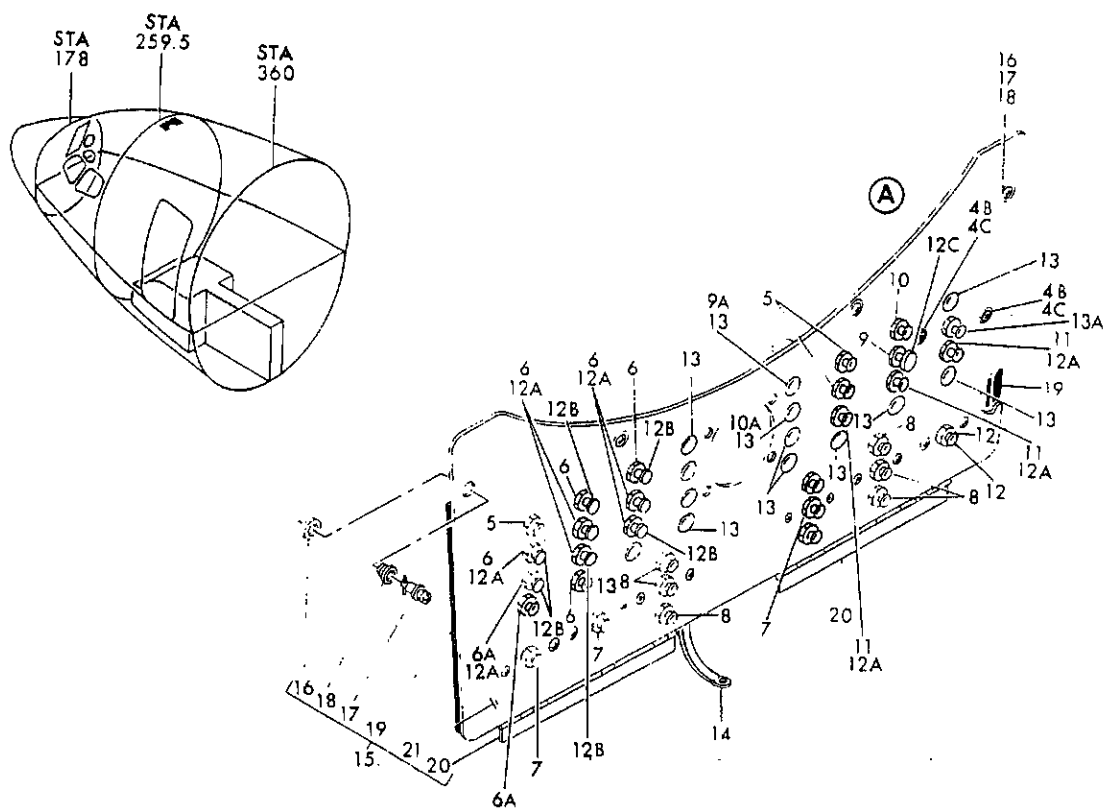


FIGURE 82B. PANEL ASSY, P3 CIRCUIT BREAKER

DETAILED PARTS LIST
24-07-82B
PAGE 0

24-07-02B

NOV 21/90

BOEING *Intercontinental*
PARTS CATALOG


FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
62B	65-2841-257	PANEL ASSY, P3 CIRCUIT BREAKER (ELECTRICAL POWER ONLY) (SEE FIG. 25, ITEM 11)	5199	RF
1	BACB2987-4	• BUS ASSY, (ALTERED FROM; BACB2987-20)	5199	2
2	BACB2987-3	• BUS ASSY, (ALTERED FROM; BACB2987-20)	5199	3
3	65-2841-49	• SLEEVE, INSULATING.	5199	3
3A	65-2841-49	• SLEEVE, INSULATING.	5199	3
4	63-2597-1	• BUS	5199	3
4A	63-2597-1	• BUS	5199	3
5	BACC18U5	• CIRCUIT BREAKER (OPTIONAL BACC18R5B)	5199	3
5	BACC18R5B	• CIRCUIT BREAKER (OPTIONAL TO BACC18U5)	5199	3
6	BACC18U10	• CIRCUIT BREAKER (OPTIONAL BACC18R10B)	5199	8
6	BACC18U10	• CIRCUIT BREAKER (OPT BACC18R10B)	5199	2
6	BACC18R10B	• CIRCUIT BREAKER (OPTIONAL TO BACC18U10)	5199	8
6	BACC18R10B	• CIRCUIT BREAKER (OPT BACC18U10)	5199	2
7	10-60806-7	• CIRCUIT BREAKER	5199	3
8	BACC18R3A	• CIRCUIT BREAKER	5199	6
9	BACC18U3	• CIRCUIT BREAKER (OPTIONAL BACC18R3A)	5199	1
9	BACC18R3A	• CIRCUIT BREAKER (OPTIONAL TO BACC18U3)	5199	1
10	BACC18R2A	• CIRCUIT BREAKER	5199	1
11	BACC18R15B	• CIRCUIT BREAKER	5199	3
12	10-60806-25	• CIRCUIT BREAKER	5199	1
	NAS601-5P	• ATTACHING PARTS • SCREW	5199	2
12B	20266-8	• BUTTON, GRAY (V26835) (ADDED BY SVA E.O. 80927)	5199	8
13	BACP20B43	• PLUG	5199	AR
14	BACJ40F33-20C	• JUMPER ASSY	5199	1
	NAS603-6P	• ATTACHING PARTS • SCREW	5199	1
	BACN10JC3	• NUT	5199	1
15	90-9139-20	• PANEL ASSY, CENTER.	5199	1
16	BACR12X1	• RING	5199	4
17	BACS21X6R	• STUD ASSY	5199	4
18	BACG20X2	• GROMMET	5199	2
19	90-9139-2	• STRIP	5199	2
20	90-9139-4	• HINGE ASSY, (ALTERED FROM; AN257-4-460)	5199	2
	MS20426D5	• ATTACHING PARTS • RIVET	5199	10
21	90-9139-21	• PANEL • FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/90

24-07-82B

DETAILED PARTS LIST
24-07-82B
PAGE 1

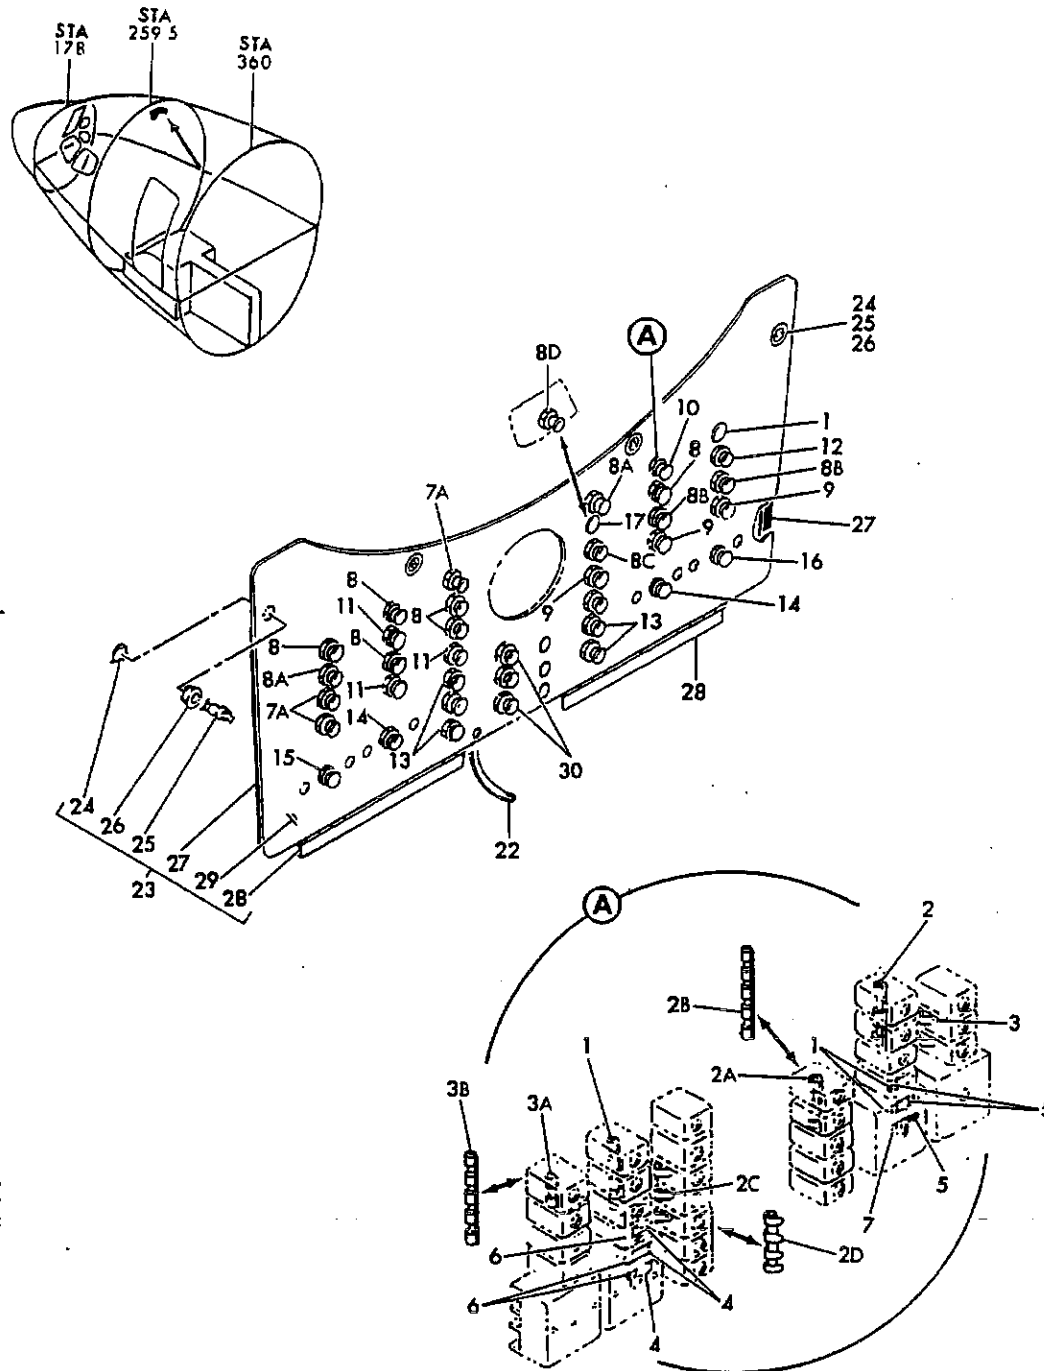

A 2407084A REV 265

FIGURE B4A. PANEL ASSY, P3 CIRCUIT BREAKER (ELECTRICAL POWER ONLY)

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 84A	65-2841-97	PANEL ASSY, P3 CIRCUIT BREAKER (ELECTRICAL POWER ONLY) (SEE FIG. 25, ITEM 11)	0150	RF
R 1	BACB2987-4	. BUS ASSY, (ALTERED FROM BACB2987-20)	0150	1
R 2	BACB2987-3	. BUS ASSY, (ALTERED FROM BACB2987-20)	0150	1
R 2B	BACB2987-5	. BUS ASSY, (ALTERED FROM BACB2987-20)	0150	1
R 2D	BACB2987-4	. BUS ASSY, (ALTERED FROM BACB2987-20)	0150	1
R 3B	BACB2987-5	. BUS ASSY, (ALTERED FROM BACB2987-20)	0150	1
R 4	65-2841-49	. SLEEVE, P3 CIRCUIT BREAKER PANEL INSULATING	0150	3
R 5	65-2841-9	. SLEEVE, P3 CIRCUIT BREAKER PANEL INSULATING	0150	3
R 6	63-2597-1	. BUS, CIRCUIT BREAKER.	0150	3
R 7	63-2597	. BUS, CIRCUIT BREAKER.	0150	3
R 7A	BACC18R3A	. CIRCUIT BREAKER (OPTIONAL BACC18U3)	0150	3
R 7A	BACC18U3	. CIRCUIT BREAKER (OPTIONAL TO BACC18R3A)	0150	3
R 8	BACC18R5B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	6
R 8	700-013-5	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391) (OPTIONAL 492-205-102 (V79405))	0150	6
R 8	492-205-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391) (OPTIONAL TO 700-013-5 (V76374))	0150	6
R 8A	BACC18R5B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	2
R 8A	700-013-5	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391) (OPTIONAL 492-205-102 (V79405))	0150	2
R 8A	492-205-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391) (OPTIONAL TO 700-013-5 (V76374))	0150	2
R 8B	BACC18R15B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	2
R 8B	700-013-15	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391) (OPTIONAL 492-215-102 (V79405))	0150	2
R 8B	492-215-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391) (OPTIONAL TO 700-013-15 (V76374))	0150	2
R 8C	BACC18R7B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	1
R 8C	700-013-7	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391) (OPTIONAL 492-507-102 (V79405))	0150	1
R 8C	492-507-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391) (OPTIONAL TO 700-013-7 (V76374))	0150	1
R 8D	BACC18R5B	. CIRCUIT BREAKER, (ADDED BY RAF MOD 7211.019-134)	0203	1
R 9	BACC18R20B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	3
R 9	700-013-20	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391) (OPTIONAL 492-220-102 (V79405))	0150	3
R 9	492-220-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391) (OPTIONAL TO 700-013-20 (V76374))	0150	3
R 10	BACC18R2A	. CIRCUIT BREAKER	0150	1
R 11	BACC18R10B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	3
R 11	700-013-10	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391) (OPTIONAL 492-210-102 (V79405))	0150	3
R 11	492-210-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391) (OPTIONAL TO 700-013-10 (V76374))	0150	3
R 13	BACC18R3A	. CIRCUIT BREAKER	0150	6
R 14	BACC18L7A	. CIRCUIT BREAKER, (AFFECTED BY AD 69-20-6) (DELETED BY SB 2897 AND 2898)	0150	2
R 14	10-3344-7	. CIRCUIT BREAKER, (ADDED BY SB 2897 AND 2898)	0150	2
R 15	BACC18L20A	. CIRCUIT BREAKER, (AFFECTED BY AD 69-20-6) (DELETED BY SB 2897)	0150	1
R 15	10-3344-20	. CIRCUIT BREAKER, (ADDED BY SB 2897)	0150	1
R 16	BACC18L25A	. CIRCUIT BREAKER, (AFFECTED BY AD 69-20-6) (DELETED BY SB 2897)	0150	1
R 16	10-3344-25	. CIRCUIT BREAKER, (ADDED BY SB 2897)	0150	1
R	NAS601-5P	. ATTACHING PARTS SCREW	0150	8
R 16A	69-62450-1	. RING, SNAP (ADDED BY SB 2693)	0150	AR
R 17	BACP20B43	. PLUG	0150	AR
R 22	BACJ40F33-20C	. JUMPER ASSY ATTACHING PARTS	0150	1
R	NAS603-6P	. SCREW	0150	1
R	NAS679A3H	. NUT	0150	1
R 23	90-9139-19	. PANEL ASSY, CENTER.	0150	1
R 24	BACR12X1	. RING.	0150	4
R 25	40S5-6	. STUD ASSY, (V71286)	0150	4
R 26	BACG20X2	. GROMMET	0150	4
R 27	90-9139-2	. STRIP, CENTER CIRCUIT BREAKER PANEL INSULATING.	0150	2
R 28	90-9139-4	. HINGE ASSY, CENTER CIRCUIT BREAKER PANEL (ALTERED FROM AN257-4-640)	0150	2

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
84A	MS20426D5	ATTACHING PARTS								
		. . RIVET							0150	10
		-----*								
29	90-9139-16	. . PANEL, CENTER CIRCUIT BREAKER							0150	1
	BAC27DEL431	. MARKER-ALUMINUM FOIL, AMPERE RATING (ADDED BY SB.							0150	1
		2693)								
30	700-013-10	. CIRCUIT BREAKER, (V76374) (ADDED BY RAF 7211.019-225)							0150	3
		. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

24-07-B4A

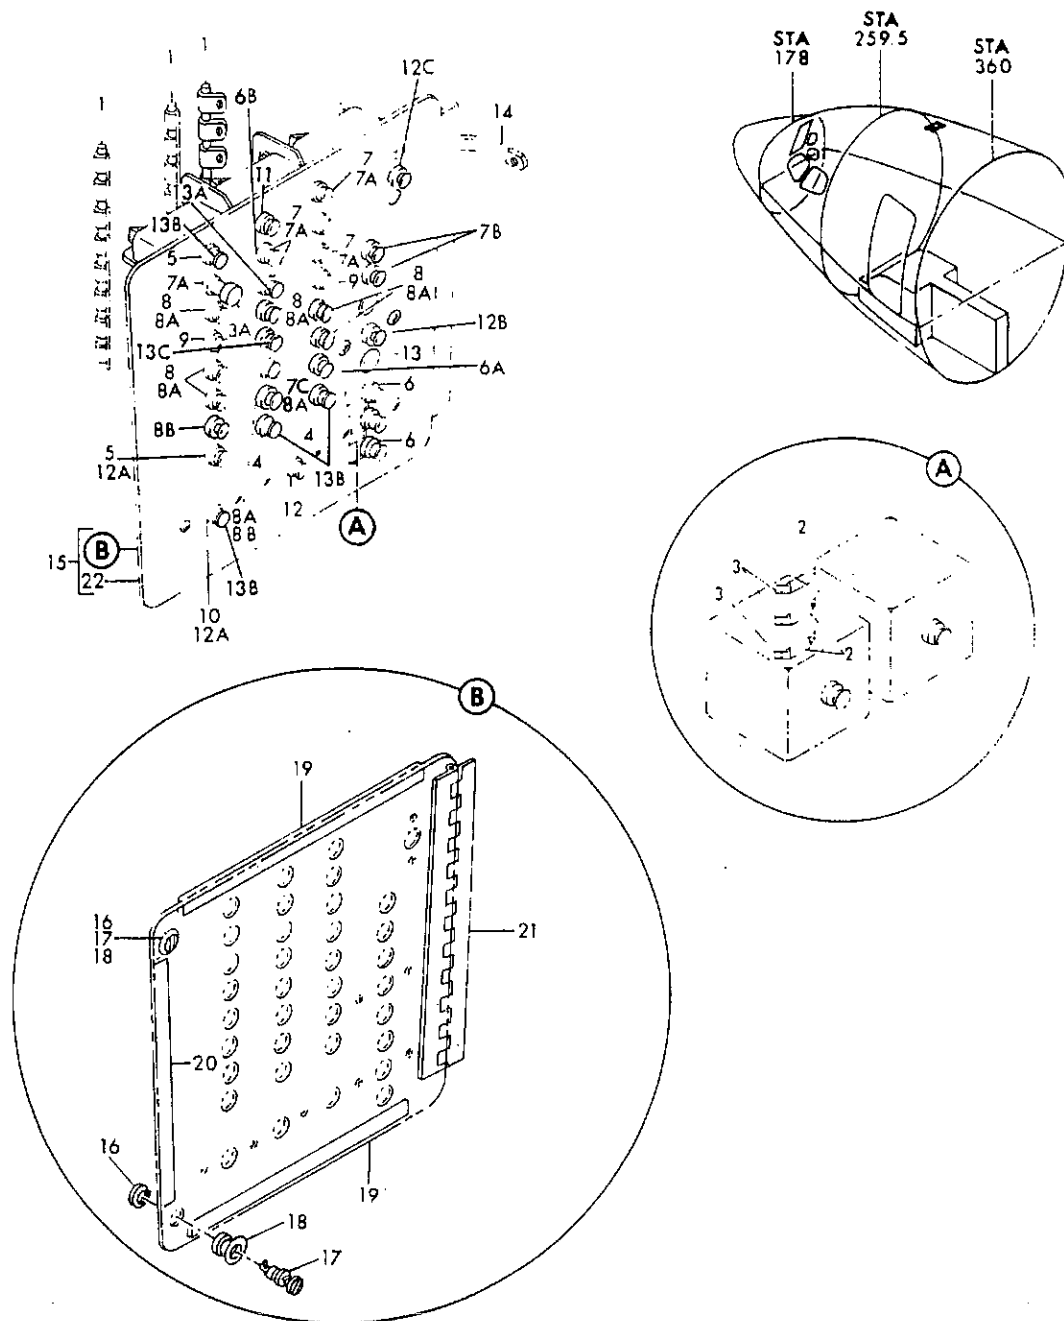


FIGURE 102B. PANEL ASSY, P4 CIRCUIT BREAKER AFT

DETAILED PARTS LIST
24-07-102B
PAGE 0

24-07-102B

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
102B	65-2841-225	PANEL ASSY, P4 CIRCUIT BREAKER AFT (SEE FIG. 25, ITEM 13)	5199	RF
	65-2841-258	PANEL ASSY, P4 CIRCUIT BREAKER AFT (SEE FIG. 25, ITEM 13)	5199	RF
1	BACB2987-8	. BUS ASSY, (ALTERED FROM; BACB2987-20)	5199	3
2	65-2841-49	. SLEEVE, INSULATING.	5199	3
3	63-2597-1	. BUS	5199	3
4	BACC18R10B	. CIRCUIT BREAKER	5199	2
5	BACC18U10	. CIRCUIT BREAKER (OPTIONAL BACC18R10B)	5199	2
5	BACC18R10B	. CIRCUIT BREAKER (OPTIONAL TO BACC18U10)	5199	2
6	BACC18R3A	. CIRCUIT BREAKER	5199	3
7A	BACC18U3	. CIRCUIT BREAKER (OPTIONAL BACC18R3A)	5199	6
7A	BACC18R3A	. CIRCUIT BREAKER (OPTIONAL TO BACC18U3)	5199	6
8A	BACC18U5	. CIRCUIT BREAKER (OPTIONAL BACC18R5B)	5199	9
8A	BACC18R5B	. CIRCUIT BREAKER (OPTIONAL TO BACC18U5)	5199	9
9	BACC18U7	. CIRCUIT BREAKER (OPTIONAL BACC18R7B)	5199	2
9	BACC18R7B	. CIRCUIT BREAKER (OPTIONAL TO BACC18U7)	5199	2
10	10-60806-10	. CIRCUIT BREAKER	5199	1
11	BACC18R2A	. CIRCUIT BREAKER	5199	1
12	10-60806-7	. CIRCUIT BREAKER	5199	1
	NAS601-5P	. ATTACHING PARTS . SCREW	5199	2
13	BACP20B43	. PLUG	5199	AR
13A	10164-2	. BUTTON, YELLOW (V26835) (ADDED BY SVA E.O. 80927)	5199	1
13B	20266-8	. BUTTON, GRAY (V26835) (ADDED BY SVA E.O. 80927)	5199	4
13C	10164-3	. BUTTON, WHITE (V26835) (ADDED BY SVA E.O. 80927)	5199	1
14	BACJ40F33-20C	. JUMPER ASSY ATTACHING PARTS . SCREW	5199	1
	NAS603-6P	. NUT	5199	1
	BACN10JC3		5199	1
15	69-2191-35	. PANEL ASSY, RH.	5199	1
16	BACR12X1	. RING.	5199	2
17	BACS21X7R	. STUD ASSY	5199	2
18	BACG20X2	. GROMMET	5199	2
19	69-2191-10	. GASKET.	5199	2
20	69-2191-6	. GASKET.	5199	1
21	69-2191-8	. HINGE, (ALTERED FROM; AN257-4-990) ATTACHING PARTS . RIVET	5199	1
	MS20426D5		5199	8
22	69-2191-36	. PANEL	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/90

24-07-102B

DETAILED PARTS LIST
24-07-102B
PAGE 1

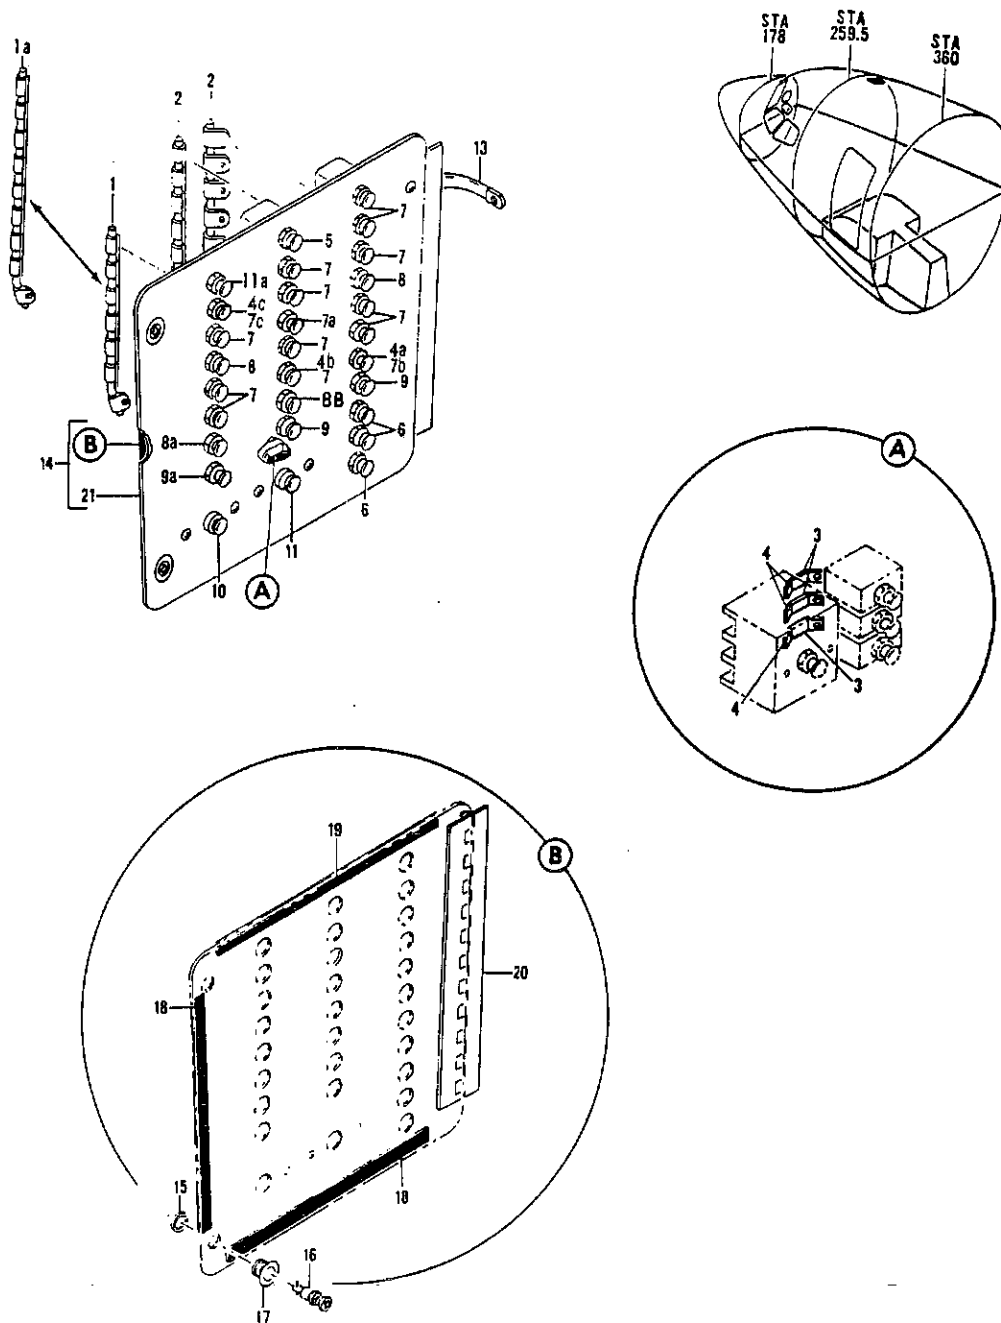


FIGURE 103A. PANEL ASSY, P4 CIRCUIT BREAKER AFT

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 103A	65-2841-98	PANEL ASSY, P4 CIRCUIT BREAKER AFT (SEE FIG. 25, ... ITEM 13)	0150	RF
R 1A	BACB2987-9	. BUS ASSY, (ALTERED FROM BACB2987-20).	0150	1
R 2	BACB2987-8	. BUS ASSY, (ALTERED FROM BACB2987-20).	0150	2
R 3	65-2841-49	. SLEEVE, P4 CIRCUIT BREAKER AFT PANEL INSULATING	0150	3
R 4	63-2597-1	. BUS, CIRCUIT BREAKER.	0150	3
R 4C	G57NB5	. PRESSLOC, (V03296).	0150	1
R 5	BACC18R2A	. CIRCUIT BREAKER	0150	1
R 6	BACC18R3A	. CIRCUIT BREAKER	0150	3
R 7	BACC18R5B	. CIRCUIT BREAKER, (DELETED BY SB 3391).	0150	12
R 7	700-013-5	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391). (OPTIONAL 492-205-102 (V79405))	0150	12
R 7	492-205-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391). (OPTIONAL TO 700-013-5 (V76374))	0150	12
R 7A	BACC18R5B	. CIRCUIT BREAKER, (DELETED BY SB 3391).	0150	1
R 7A	700-013-5	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391). (OPTIONAL 492-205-102 (V79405))	0150	1
R 7A	492-205-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391). (OPTIONAL TO 700-013-5 (V76374))	0150	1
R 7C	BACC18R5B	. CIRCUIT BREAKER, (DELETED BY SB 3391).	0150	1
R 7C	700-013-5	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391). (OPTIONAL 492-205-102 (V79405))	0150	1
R 7C	492-205-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391). (OPTIONAL TO 700-013-5 (V76374))	0150	1
R 8	BACC18R7B	. CIRCUIT BREAKER, (DELETED BY SB 3391).	0150	2
R 8	700-013-7	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391). (OPTIONAL 492-507-102 (V79405))	0150	2
R 8	492-507-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391). (OPTIONAL TO 700-013-7 (V76374))	0150	2
R 8A	BACC18R10B	. CIRCUIT BREAKER, (DELETED BY SB 3391).	0150	1
R 8A	700-013-10	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391). (OPTIONAL 492-210-102 (V79405))	0150	1
R 8A	492-210-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391). (OPTIONAL TO 700-013-10 (V76374))	0150	1
R 8B	BACC18R10B	. CIRCUIT BREAKER, (DELETED BY SB 3391).	0150	1
R 8B	700-013-10	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391). (OPTIONAL 492-210-102 (V79405))	0150	1
R 8B	492-210-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391). (OPTIONAL TO 700-013-10 (V76374))	0150	1
R 9	BACC18R10B	. CIRCUIT BREAKER, (DELETED BY SB 3391).	0150	2
R 9	700-013-10	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391). (OPTIONAL 492-210-102 (V79405))	0150	2
R 9	492-210-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391). (OPTIONAL TO 700-013-10 (V76374))	0150	2
R 10	BACC18L7A	. CIRCUIT BREAKER, (AFFECTED BY AD 69-20-6) (DELETED BY SB 2897 AND 2898)	0150	1
R 10	10-3344-7	. CIRCUIT BREAKER, (ADDED BY SB 2897 AND 2898). ATTACHING PARTS	0150	1
R	NAS601-5P	. SCREW	0150	2
R 11	10-3344-10	. CIRCUIT BREAKER, (ADDED BY SB 2897).	0150	1
R 11	BACC18L10A	. CIRCUIT BREAKER, (AFFECTED BY AD 69-20-6) (DELETED BY SB 2897)	0150	1
R	NAS601-5P	. ATTACHING PARTS SCREW	0150	2
R 11A	BACC18R10B	. CIRCUIT BREAKER, (DELETED BY SB 3391).	0150	1
R 11A	700-013-10	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391). (OPTIONAL 492-210-102 (V79405))	0150	1
R 11A	492-210-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391). (OPTIONAL TO 700-013-10 (V76374))	0150	1
R 13	BACP20B43	. PLUG.	0150	AR
R	BACJ40F33-20C	. JUMPER ASSY	0150	1
R	NAS603-6P	. ATTACHING PARTS SCREW	0150	1
R	BACN10JC3	. NUT	0150	1
R 13A	69-62450-1	. RING, SNAP (ADDED BY SB 2693).	0150	AR
R 14	69-2191-34	. PANEL ASSY, RH CIRCUIT BREAKER.	0150	1
R 15	BACR12X1	. RING.	0150	2
R 16	BACS21X7R	. STUD ASSY	0150	2
R 17	BACG20X2	. GROMMET	0150	2
R 18	69-2191-10	. GASKET, RH CIRCUIT BREAKER PANEL.	0150	2
R 19	69-2191-6	. GASKET, RH CIRCUIT BREAKER PANEL.	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/91

24-07-103A

DETAILED PARTS LIST
24-07-103A
PAGE 1

Intercontinental

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
			1	2	3	4	5	6	7			
R	103A	20	69-2191-8	.	.	HINGE, RH CIRCUIT BREAKER PANEL (ALTERED FROM . . .					0150	1
R						AN257-4-990)						
R			MS20426-5	.	.	ATTACHING PARTS					0150	8
R				.	.	RIVET					0150	
R				.	.	-----*						
R		21	69-2191-29	.	.	PANEL, RH CIRCUIT BREAKER					0150	1
R			BAC27DEL431	.	.	MARKER-ALUMINUM FOIL, AMPERE RATING (ADDED BY SB. . .					0150	1
						2693)						
MISSING ITEM NUMBERS ARE NOT APPLICABLE												

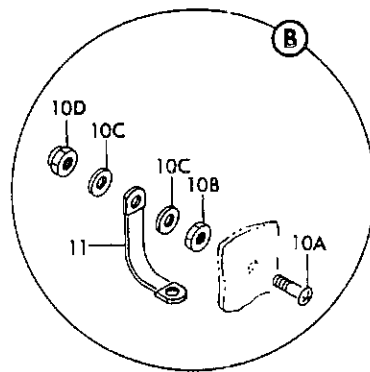
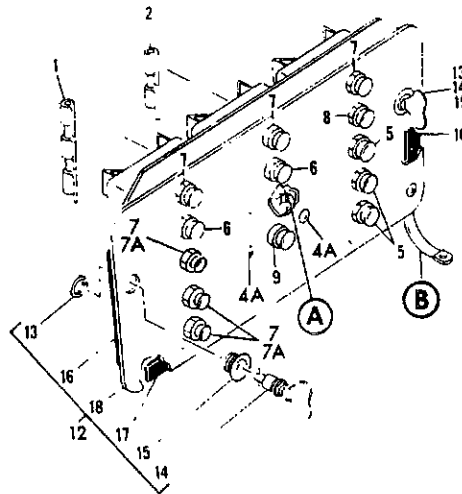
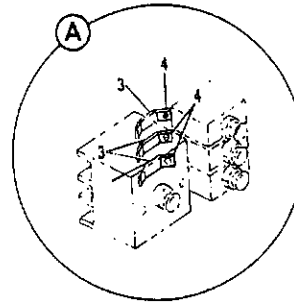
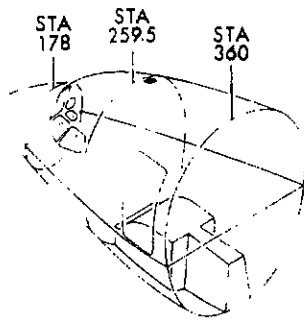


FIGURE 121A. PANEL ASSY, P4 CIRCUIT BREAKER FORWARD (ELECTRICAL POWER ONLY)

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 121A	65-2841-99	PANEL ASSY, P4 CIRCUIT BREAKER FORWARD (ELECTRICAL . . .	0150	RF
R 1	BACB2987-3	POWER ONLY) (SEE FIG. 25, ITEM 12)		
R 2	BACB2987-2	. BUS ASSY, (ALTERED FROM BACB2987-20)	0150	1
R 3	65-2841-49	. BUS ASSY, (ALTERED FROM BACB2987-20)	0150	1
R 4	63-2597-1	. SLEEVE, P4 CIRCUIT BREAKER FORWARD PANEL INSULATION .	0150	3
R 4A	NAS601-5P	. BUS, CIRCUIT BREAKER	0150	3
R 5	BACC18R3A	. SCREW	0150	2
R 6	BACC18R5B	. CIRCUIT BREAKER	0150	3
R 6	700-013-5	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	2
R 6	492-205-102	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391)	0150	2
R 7	BACC18R10B	(OPTIONAL 492-205-102 (V79405))		
R 7	700-013-10	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391)	0150	2
R 7	492-210-102	(OPTIONAL TO 700-013-5 (V76374))		
R 7A	G57NB5	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	6
R 8	BACC18R25B	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391)	0150	6
R 8	700-013-25	(OPTIONAL 492-210-102 (V79405))		
R 8	492-225-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391)	0150	6
R 9	BACC18L7A	(OPTIONAL TO 700-013-10 (V76374))		
R 9A	10-3344-7	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391)	0150	1
R 10A	69-62450-1	(OPTIONAL TO 700-013-25 (V76374))		
R 10B	NAS603-10P	. CIRCUIT BREAKER, (AFFECTED BY AD 69-20-6) (DELETED BY	0150	1
R 10C	MS20341-10	SB 2897 AND 2898)		
R 10D	AN960D10L	. CIRCUIT BREAKER, (ADDED BY SB 2897 AND 2898)	0150	1
R 11	BACN10JC3	. RING, SNAP (ADDED BY SB 2693)	0150	AR
R 12	BACJ40F33-20C	. SCREW	0150	1
R 13	69-2191-30	. NUT	0150	1
R 14	BACR12X1	. WASHER	0150	2
R 15	BACS21X7W	. NUT	0150	1
R 16	BACG20X2	. JUMPER ASSY	0150	1
R 17	69-2191-7	. PANEL ASSY, RH CIRCUIT BREAKER	0150	1
R 18	69-2191-9	. RING	0150	2
R 18	69-2191-31	. STUD ASSY	0150	2
R 18	BAC27DEL431	. GROMMET	0150	2
		. GASKET, RH CIRCUIT BREAKER PANEL	0150	2
		. GASKET, RH CIRCUIT BREAKER PANEL	0150	1
		. PANEL, RH CIRCUIT BREAKER	0150	1
		. MARKER-ALUMINUM FOIL, AMPERE RATING (ADDED BY SB. . .	0150	1
		2693)		
		. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	0150	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/91

24-07-121A

DETAILED PARTS LIST
24-07-121A
PAGE 1

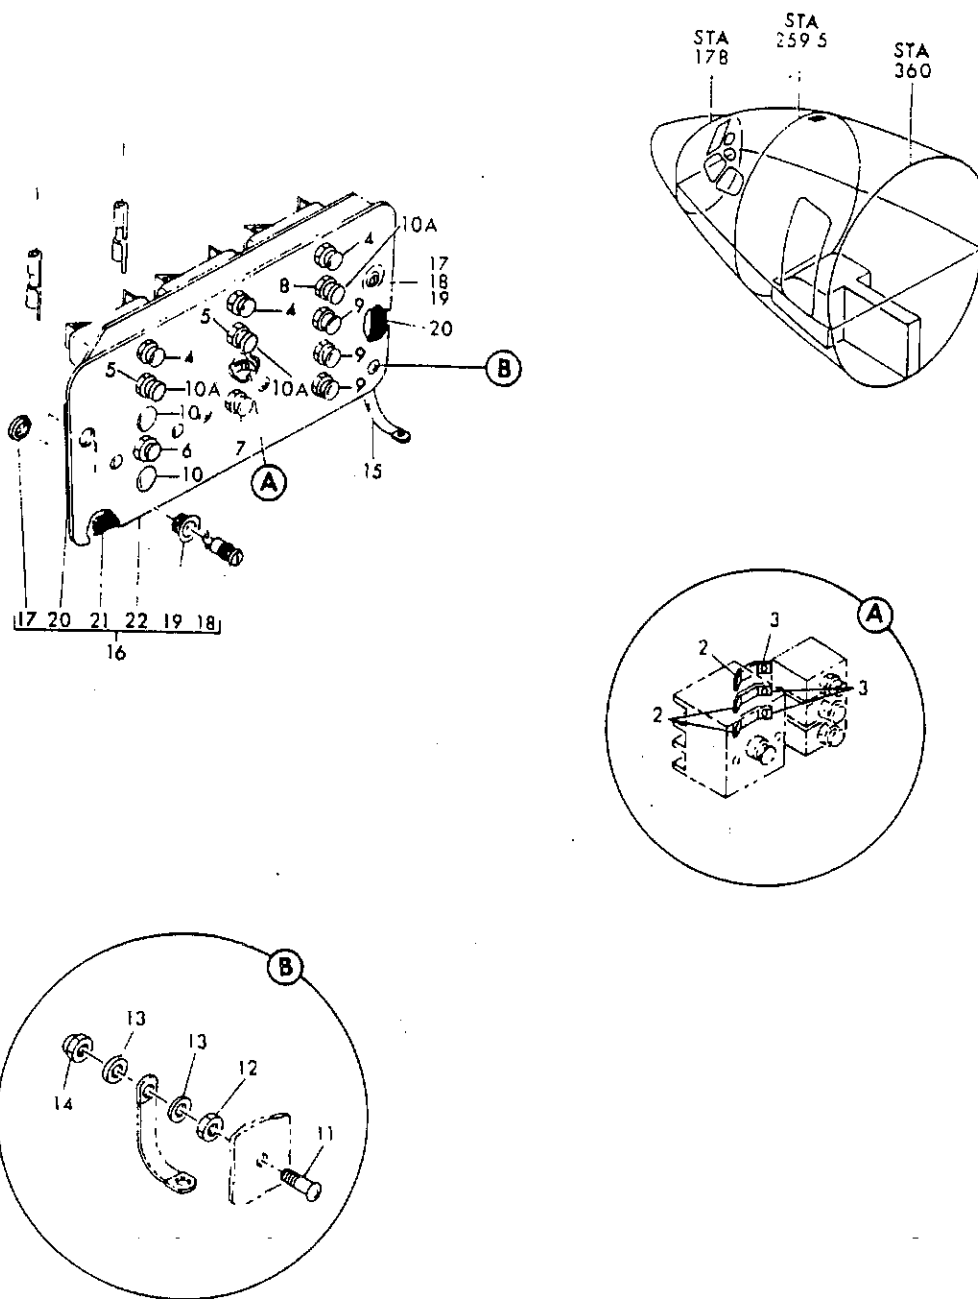


FIGURE 138B PANEL ASSY. P4 CIRCUIT BREAKER FORWARD

DETAILED PARTS LIST
24-07-138B
PAGE 0

24-07-138B

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
1388	65-2841-259	PANEL ASSY, P4 CIRCUIT BREAKER FORWARD (ELECTRICAL. . . POWER ONLY) (SEE FIG. 25, ITEM 12)							5199	RF
1	BACB29B7-2	. BUS ASSY, (ALTERED FROM; BACB29B7-20).							5199	2
2	65-2841-49	. SLEEVE, INSULATING.							5199	3
3	63-2597-1	. BUS							5199	3
4	BACC18U10	. CIRCUIT BREAKER (OPTIONAL BACC18R10B)							5199	3
4	BACC18R10B	. CIRCUIT BREAKER (OPTIONAL TO BACC18U10)							5199	3
5	BACC18U5	. CIRCUIT BREAKER (OPTIONAL BACC18R5B)							5199	2
5	BACC18R5B	. CIRCUIT BREAKER (OPTIONAL TO BACC18U5)							5199	2
6	10-60806-20	. CIRCUIT BREAKER							5199	1
7	10-60806-15	. CIRCUIT BREAKER							5199	1
	NAS601-5P	ATTACHING PARTS . SCREW, (USED ON 10-60806-15 AND -20).							5199	2
8	BACC18R25B	. CIRCUIT BREAKER							5199	1
9	BACC18R3A	. CIRCUIT BREAKER							5199	3
10	BACP20B43	. PLUG							5199	AR
10A	10164-3	. BUTTON, WHITE (V26835) (ADDED BY SVA E.D. B0927).							5199	3
11	NAS603-10P	. SCREW							5199	1
12	MS20341-10	. NUT							5199	1
13	AN960D10L	. WASHER							5199	2
14	BACN10JC3	. NUT							5199	1
15	BACJ40F33-20C	. JUMPER ASSY							5199	1
16	69-2191-30	. PANEL ASSY, RH.							5199	1
17	BACR12X1	. RING							5199	2
18	BACS21X7W	. STUD ASSY							5199	2
19	BACG20X2	. GROMMET							5199	2
20	69-2191-7	. GASKET							5199	2
21	69-2191-9	. GASKET							5199	1
22	69-2191-31	. PANEL							5199	1
		. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA							5199	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

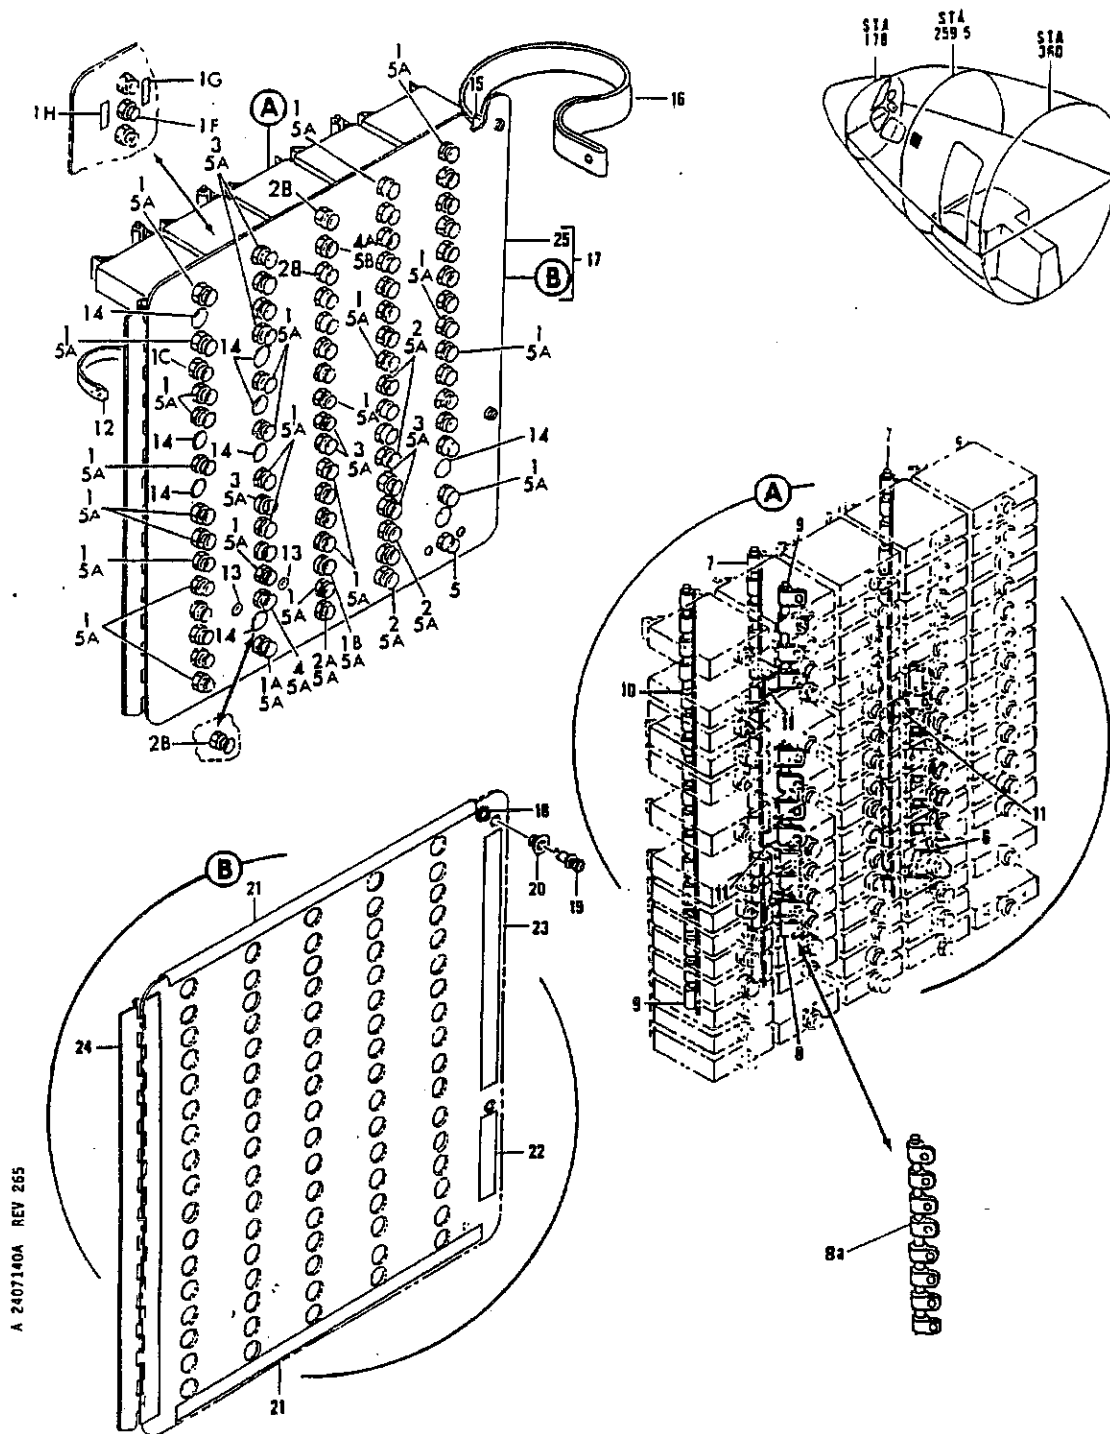


FIGURE 140A. PANEL ASSY, CIRCUIT BREAKER



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 140A	65-2842-111	PANEL ASSY, P6 CIRCUIT BREAKER (SEE FIG. 25, ITEM 7).	0150	RF
R 1	BACC18R5B	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	46
R 1	700-013-5	. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391)	0150	46
R 1		(OPTIONAL 492-205-102 (V79405))		
R 1	492-205-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391)	0150	46
R 1A	BACC18R10B	(OPTIONAL TO 700-013-5 (V76374))		
R 1A	700-013-10	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	1
R 1A		. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391)	0150	1
R 1A		(OPTIONAL 492-210-102 (V79405))		
R 1A	492-210-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391)	0150	1
R 1B	BACC18R3A	(OPTIONAL TO 700-013-10 (V76374))		
R 1B		. CIRCUIT BREAKER	0150	1
R 1B		(OPTIONAL TO BACC18U3)		
R 1B	BACC18U3	. CIRCUIT BREAKER	0150	1
R 1C	BACC18R3A	(OPTIONAL BACC18R3A)		
R 1D	BACC18R3A	. CIRCUIT BREAKER	0150	1
R 1E	BACC18R5B	. CIRCUIT BREAKER	0150	1
R 1E	700-013-5	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	1
R 1E		. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391)	0150	1
R 1E		(OPTIONAL 492-205-102 (V79405))		
R 1E	492-205-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391)	0150	1
R 2	BACC18R7B	(OPTIONAL TO 700-013-5 (V76374))		
R 2	700-013-7	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	7
R 2		. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391)	0150	7
R 2		(OPTIONAL 492-507-102 (V79405))		
R 2	492-507-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391)	0150	7
R 2A	BACC18R7B	(OPTIONAL TO 700-013-7 (V76374))		
R 2A	700-013-7	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	1
R 2A		. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391)	0150	1
R 2A		(OPTIONAL 492-507-102 (V79405))		
R 2A	492-507-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391)	0150	1
R 2B	MS24510A5	(OPTIONAL TO 700-013-7 (V76374))		
R 3	BACC18R10B	. CIRCUIT BREAKER, (ADDED BY RAF MOD 7211.019-150)	0150	1
R 3	700-013-10	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	14
R 3		. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391)	0150	14
R 3		(OPTIONAL 492-210-102 (V79405))		
R 3	492-210-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391)	0150	14
R 4	BACC18R35B	(OPTIONAL TO 700-013-10 (V76374))		
R 4	700-013-35	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	1
R 4		. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391)	0150	1
R 4		(OPTIONAL 492-235-102 (V79405))		
R 4	492-235-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391)	0150	1
R 4A	BACC18R35B	(OPTIONAL TO 700-013-35 (V76374))		
R 4A	700-013-35	. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	1
R 4A		. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391)	0150	1
R 4A		(OPTIONAL 492-235-102 (V79405))		
R 4A	492-235-102	. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391)	0150	1
R 5	BACC18R50C	(OPTIONAL TO 700-013-35 (V76374))		
R 5		. CIRCUIT BREAKER	0150	1
R 5A	NAS601-5P	ATTACHING PARTS		
R 5A		. SCREW	0150	2
R 5B	69-62450-1			
R 6	BACB2987-9	. RING, SNAP (ADDED BY SB 2693)	0150	AR
R 7	BACB2987-17	. RING, SNAP (ADDED BY SB 2693)	0150	AR
R 8A	BACB2987-9	. BUS ASSY, (ALTERED FROM BACB2987-20)	0150	1
R 9	BACB2987-4	. BUS ASSY, (ALTERED FROM BACB2987-20)	0150	2
R 10	BACB2987-13	. BUS ASSY, (ALTERED FROM BACB2987-20)	0150	1
R 11	63-8762-1	. BUS, CIRCUIT BREAKER	0150	3
R 12	BACJ40F33-20C	. JUMPER ASSY	0150	1
R 13	NAS603-6P	ATTACHING PARTS		
R 14	NAS679A3W	. SCREW	0150	1
R 15		. NUT	0150	1
R 16	BACP20B64			
R 17	BACP20B43	. PLUG	0150	2
R 18	63-1743	. PLUG	0150	AR
R 19	MS20470A5	. PLATE, STRAP ATTACHMENT	0150	1
R 20		ATTACHING PARTS		
R 21		. RIVET	0150	2
R 22	66-1923-2			
R 23	69-2192-14	. STRAP, PANEL STOP	0150	1
R 24	BACR12X1	. PANEL ASSY, DC CIRCUIT BREAKER	0150	1
R 25		. RING	0150	2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
140A	19	BACS21X7R	. .	STUD ASSY					0150	2
	20	BACG20X2	. .	GROMMET					0150	2
	21	69-2192-3	. .	STRIP, DC CIRCUIT BREAKER PANEL INSULATING.					0150	2
	22	69-2192-5	. .	STRIP, DC CIRCUIT BREAKER PANEL INSULATING.					0150	1
	23	69-2192-6	. .	STRIP, DC CIRCUIT BREAKER PANEL INSULATING.					0150	1
	24	69-2192-2	. .	HINGE, DC CIRCUIT BREAKER PANEL (ALTERED FROM					0150	1
				AN257-4-1490)						
				ATTACHING PARTS						
		MS20426D5	. .	RIVET					0150	11
				-----*						
R	25	69-2192-9	. .	PANEL, DC CIRCUIT BREAKER					0150	1
	28	700-013-5	. .	CIRCUIT BREAKER, (V76374) (ADDED BY RAF 7211.019-225)					0150	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

BOEING
707
PARTS CATALOG (MAINTENANCE)

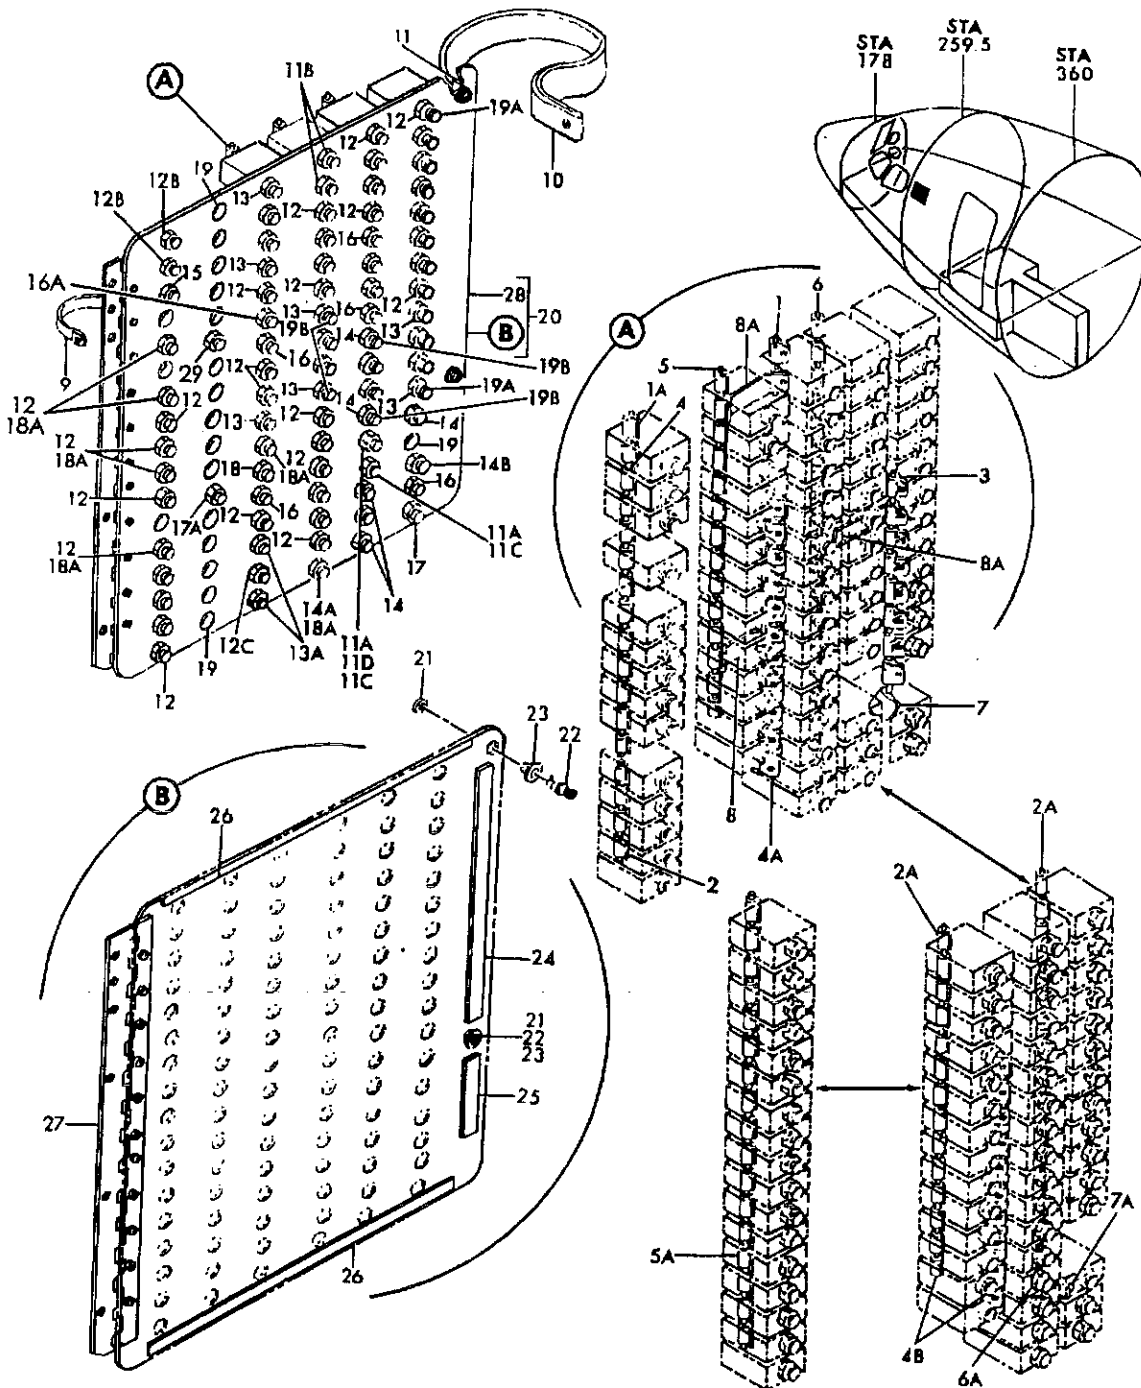


FIGURE 140Z PANEL ASSY, P6 CIRCUIT BREAKER

DETAILED PARTS LIST
24-07-140Z
PAGE 0

24-07-140Z

NOV 21/00



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 140Z	65-2842-183	PANEL ASSY, P6 CIRCUIT BREAKER (SEE FIG. 25, ITEM 7).	5199	RF
R	BACB2987-2	. BUS ASSY, (ALTERED FROM; BACB2987-20).	5199	1
R	BACB2987-2	. BUS ASSY, (ALTERED FROM; BACB2987-20).	5199	1
R	2	. BUS ASSY, (ALTERED FROM; BACB2987-20).	5199	1
R	3	. BUS ASSY, (ALTERED FROM; BACB2987-20).	5199	1
R	BACB2987-11	. BUS ASSY, (ALTERED FROM; BACB2987-20).	5199	1
R	BACB2987-11	. BUS ASSY, (ALTERED FROM; BACB2987-20).	5199	1
R	BACB2987-14	. BUS ASSY, (ALTERED FROM; BACB2987-20).	5199	1
R	BACB2987-17	. BUS ASSY, (ALTERED FROM; BACB2987-20).	5199	1
R	69-55624-1	. BUS	5199	1
R	63-8762	. BUS	5199	1
R	63-8762	. BUS	5199	2
R	9	. JUMPER ASSY	5199	1
R		ATTACHING PARTS		
R	NAS603-6P	. SCREW	5199	1
R	BACN10JC3	. NUT	5199	1
R	10	. STRAP, STOP	5199	1
R	11	. PLATE, STRAP ATTACHMENT	5199	1
R	MS20470A5	. RIVET	5199	2
R	11B	. CIRCUIT BREAKER	5199	2
R	11B	(OPTIONAL BACC18R5B)		
R	12	. CIRCUIT BREAKER	5199	2
R	12	(OPTIONAL TO BACC18U5)		
R	12	. CIRCUIT BREAKER	5199	38
R	12	(OPTIONAL BACC18R5B)		
R	12B	. CIRCUIT BREAKER	5199	38
R	12B	(OPTIONAL TO BACC18U5)		
R	12B	. CIRCUIT BREAKER	5199	2
R	12B	(OPTIONAL BACC18R5B)		
R	12C	. CIRCUIT BREAKER	5199	2
R	13	(OPTIONAL TO BACC18U5)		
R	13	. CIRCUIT BREAKER, (ADDED BY SVA E.O. 81506).	5199	1
R	13	. CIRCUIT BREAKER	5199	13
R	13	(OPTIONAL BACC18R10B)		
R	14	. CIRCUIT BREAKER	5199	13
R	14	(OPTIONAL TO BACC18U10)		
R	14	. CIRCUIT BREAKER	5199	8
R	14	(OPTIONAL BACC18R7B)		
R	14A	. CIRCUIT BREAKER	5199	8
R	14A	(OPTIONAL TO BACC18U7)		
R	14A	. CIRCUIT BREAKER	5199	1
R	14A	(OPTIONAL BACC18R7B)		
R	15	. CIRCUIT BREAKER	5199	1
R	16	(OPTIONAL TO BACC18U7)		
R	16	. CIRCUIT BREAKER	5199	1
R	16	(OPTIONAL BACC18R3A)		
R	16	. CIRCUIT BREAKER	5199	8
R	16A	(OPTIONAL TO BACC18U3)		
R	16A	. CIRCUIT BREAKER	5199	1
R	16A	(OPTIONAL BACC18R3A)		
R	16A	. CIRCUIT BREAKER	5199	1
R	17	(OPTIONAL TO BACC18U3)		
R	17	. CIRCUIT BREAKER	5199	1
R	NAS601-5P	ATTACHING PARTS		
R	18	. SCREW	5199	2
R	19	. CIRCUIT BREAKER	5199	1
R	19A	PLUG	5199	AR
R	20	. BUTTON, GRAY (V26835) (ADDED BY SVA E.O. 80927)	5199	12
R	21	. PANEL ASSY, DC.	5199	1
R	22	. RING	5199	2
R	23	. STUD	5199	2
R	24	. GROMMET	5199	2
R	25	. STRIP, INSULATING	5199	1
R	26	. STRIP, INSULATING	5199	1
R	27	. STRIP, INSULATING	5199	2
R	27	. HINGE, (ALTERED FROM; AN257-4-1490).	5199	1
R	MS20426D5	ATTACHING PARTS		
R		. RIVET	5199	11

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/91

24-07-1402

DETAILED PARTS LIST
24-07-1402
PAGE 1

BOEING
Intercontinental
707
PARTS CATALOG

R	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
	140Z 28	69-2192-16	. . PANEL							5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

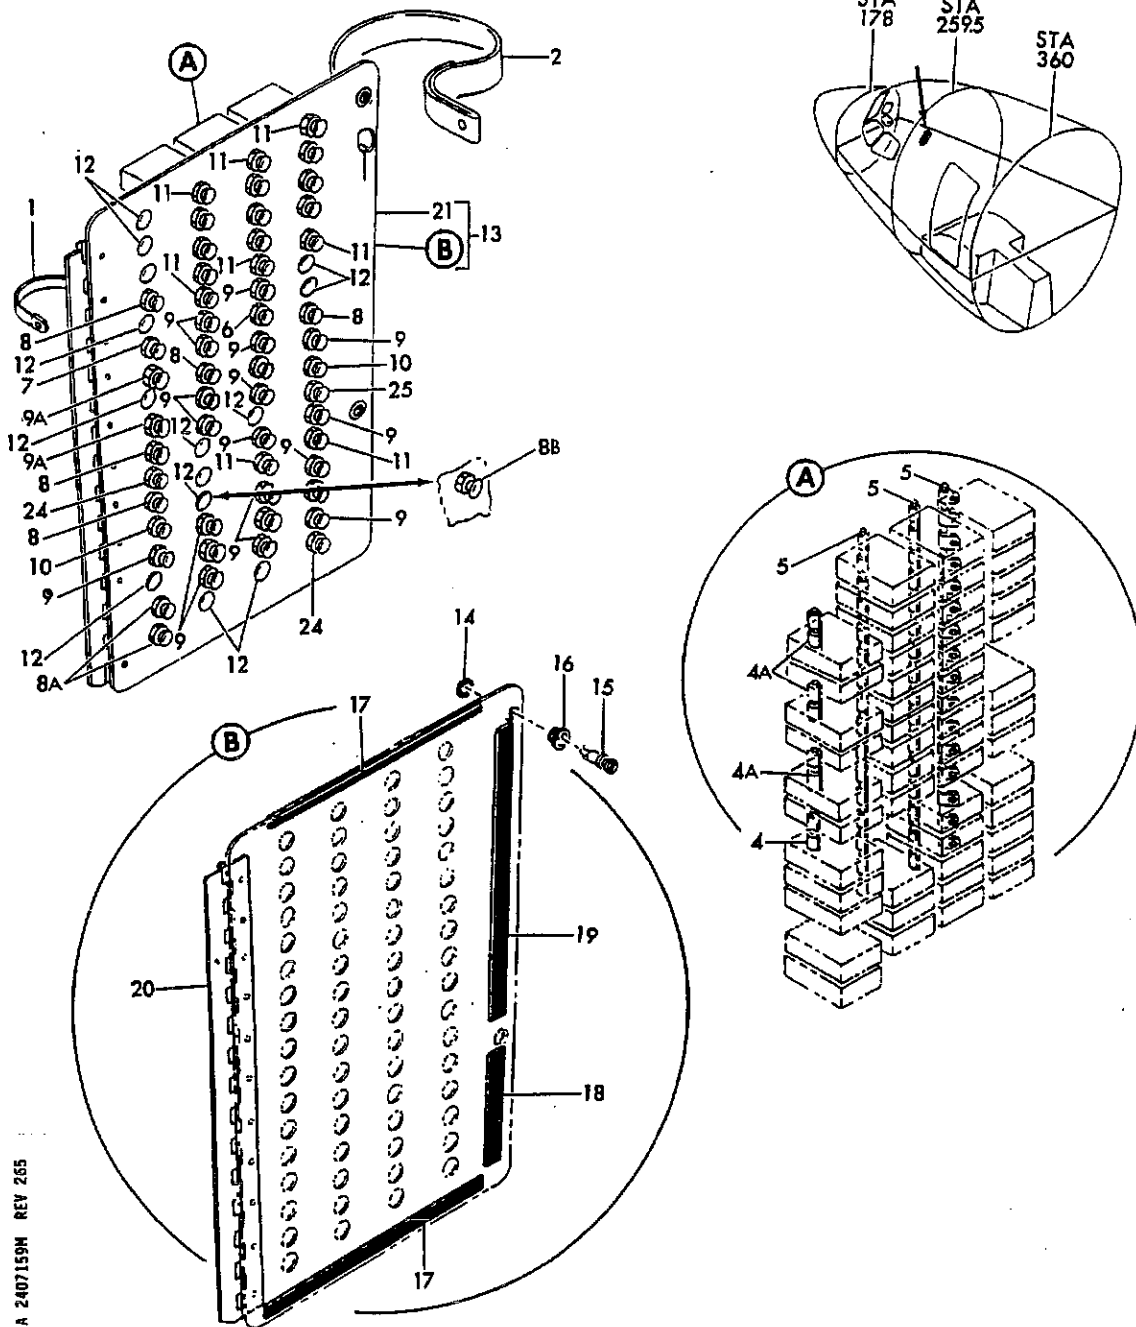


FIGURE 159M. PANEL ASSY, P7 CIRCUIT BREAKER



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
159M			PANEL ASSY, P7 CIRCUIT BREAKER (SEE FIG. 25, ITEM 8).	0150	RF
1	65-2842-112 BACJ40F33-20C		. JUMPER ASSY	0150	1
	NAS603-6P NAS679A3W		. ATTACHING PARTS		
			. SCREW	0150	1
			. NUT	0150	1
2	66-1923-1		. STRAP, PANEL STOP	0150	1
	MS20470A5		. ATTACHING PARTS		
			. RIVET	0150	2
3	63-1743		. PLATE, STRAP ATTACHMENT	0150	1
	MS20470A5		. ATTACHING PARTS		
			. RIVET	0150	2
4	BACB29B7-2		. BUS ASSY, (ALTERED FROM BACB29B7-20).	0150	1
4A	BACB29B7-2		. BUS ASSY, (ALTERED FROM BACB29B7-20).	0150	3
5	BACB29B7-16		. BUS ASSY, (ALTERED FROM BACB29B7-20).	0150	3
6	BACC18R1A		. CIRCUIT BREAKER	0150	1
7	BACC18R3A		. CIRCUIT BREAKER	0150	1
8	BACC18R3A		. CIRCUIT BREAKER	0150	5
8A	BACC18R3A		. CIRCUIT BREAKER	0150	2
8B	BACC18R3A		. CIRCUIT BREAKER, (ADDED BY SB 3371)	0303	1
9	BACC18R5B		. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	21
9	700-013-5		. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391).	0150	21
			(OPTIONAL 492-205-102 (V79405))		
9	492-205-102		. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391).	0150	21
			(OPTIONAL TO 700-013-5 (V76374))		
9A	BACC18R5B		. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	2
9A	700-013-5		. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391).	0150	2
			(OPTIONAL 492-205-102 (V79405))		
9A	492-205-102		. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391).	0150	2
			(OPTIONAL TO 700-013-5 (V76374))		
10	BACC18R7B		. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	2
10	700-013-7		. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391).	0150	2
			(OPTIONAL 492-507-102 (V79405))		
10	492-507-102		. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391).	0150	2
			(OPTIONAL TO 700-013-7 (V76374))		
11	BACC18R10B		. CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	17
11	700-013-10		. CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391).	0150	17
			(OPTIONAL 492-210-102 (VM9405))		
11	492-210-102		. CIRCUIT BREAKER, (V79405) (ADDED BY SB 3391).	0150	17
			(OPTIONAL TO 700-013-10 (V76374))		
12	BACP20B43		. PLUG	0150	AR
12A	69-62450-1		. RING, SNAP (ADDED BY SB 2693)	0150	AR
13	69-2190-37		. PANEL ASSY	0150	1
14	BACR12X1		. RING	0150	2
15	40S5-7		. STUD ASSY, (V71286)	0150	2
16	BACG20X2		. GROMMET	0150	2
17	69-2190-2		. STRIP, INSULATING	0150	2
18	69-2190-7		. STRIP, INSULATING	0150	1
19	69-2190-6		. STRIP, INSULATING	0150	1
20	69-2190-3		. HINGE, (ALTERED FROM AN257-4-1490).	0150	1
			. ATTACHING PARTS		
	MS20426D5		. RIVET	0150	11
21	69-2190-38 BAC27DEL431		. PANEL	0150	1
			. MARKER-ALUMINUM FOIL, AMPERE RATING (ADDED BY SB.	0150	1
			2693)		
	361-39-10-74347-101		. PANEL ASSY, MOD. P7 CIRCUIT BREAKER A/R ONLY (VS2500)	0150	RF
			(ADDED BY RAF 7211.019-225)		
24	700-013-5		. CIRCUIT BREAKER, (V76374)	0150	2
25	700-013-705		. CIRCUIT BREAKER, (V76374)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

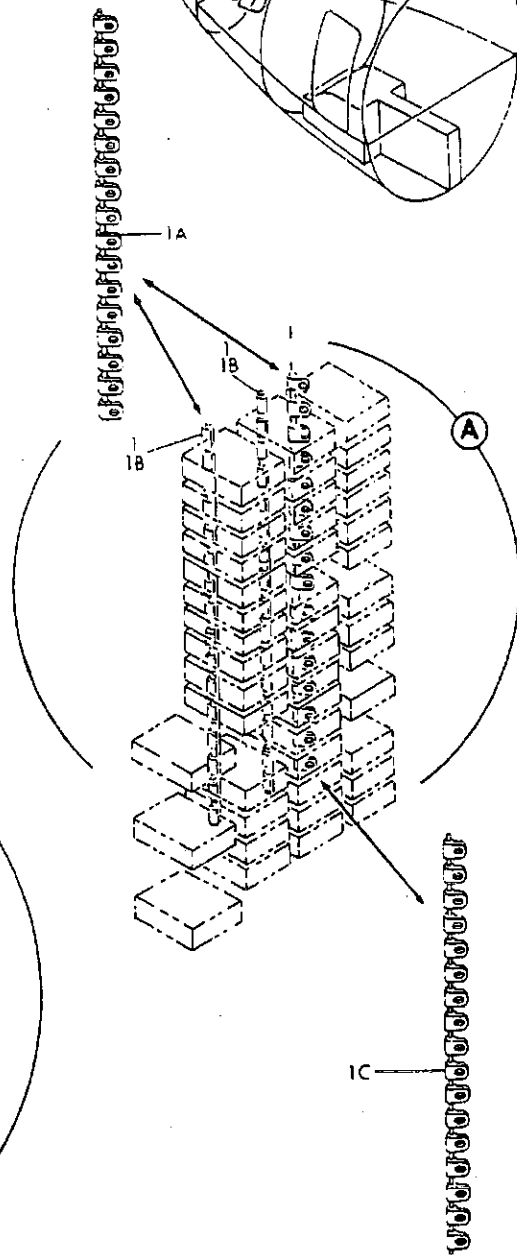
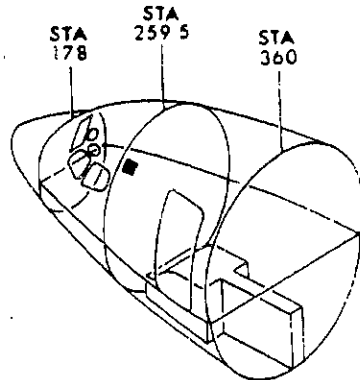
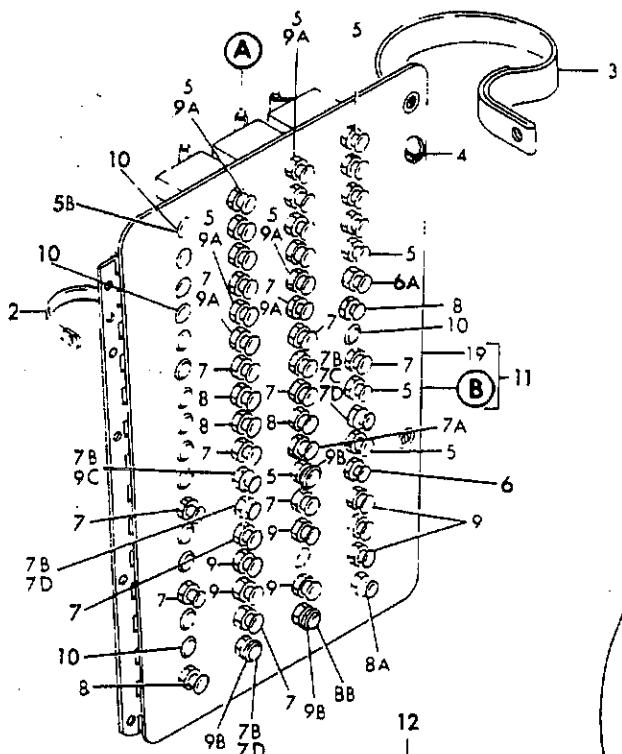


FIGURE 159Z. PANEL ASSY, P7 CIRCUIT BREAKER

24-7-1592 707/320 R-259

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
159Z	65-2842-184		PANEL ASSY, PT CIRCUIT BREAKER (SEE FIG. 25, ITEM B)	5199	RF
1B	BACB29B7-16		. BUS ASSY, (ALTERED FROM; BACB29B7-20)	5199	2
1C	BACB29B7-17		. BUS ASSY, (ALTERED FROM; BACB29B7-20)	5199	1
2	BACJ40F33-20C		. JUMPER ASSY	5199	1
			ATTACHING PARTS		
	NAS603-6P		. SCREW	5199	1
	BACN10JC3		. NUT	5199	1
			-----*		
3	66-1923-1		. STRAP, STOP	5199	1
4	63-1743		. PLATE, STRAP ATTACHMENT	5199	1
			ATTACHING PARTS		
	MS20470A5		. RIVET	5199	2
			-----*		
5	BACC18U10		. CIRCUIT BREAKER	5199	18
			(OPTIONAL BACC18R10B)		
5	BACC18R10B		. CIRCUIT BREAKER	5199	18
			(OPTIONAL TO BACC18U10)		
6	BACC18U10		. CIRCUIT BREAKER	5199	1
			(OPTIONAL BACC18R10B)		
6	BACC18R10B		. CIRCUIT BREAKER	5199	1
			(OPTIONAL TO BACC18U10)		
6A	BACC18U5		. CIRCUIT BREAKER	5199	1
			(OPTIONAL BACC18R5B)		
6A	BACC18R5B		. CIRCUIT BREAKER	5199	1
			(OPTIONAL TO BACC18U5)		
7	BACC18U5		. CIRCUIT BREAKER	5199	13
			(OPTIONAL BACC18R5B)		
7	BACC18R5B		. CIRCUIT BREAKER	5199	13
			(OPTIONAL TO BACC18U5)		
7C	BACC18U5		. CIRCUIT BREAKER	5199	1
7C	BACC18R5B		. CIRCUIT BREAKER	5199	1
			(OPTIONAL TO BACC18U5)		
8	BACC18R3A		. CIRCUIT BREAKER	5199	5
8A	BACC18U3		. CIRCUIT BREAKER	5199	1
			(OPTIONAL BACC18R3A)		
8A	BACC18R3A		. CIRCUIT BREAKER	5199	1
			(OPTIONAL TO BACC18U3)		
9	BACC18U3		. CIRCUIT BREAKER	5199	7
			(OPTIONAL BACC18R3A)		
9	BACC18R3A		. CIRCUIT BREAKER	5199	7
			(OPTIONAL TO BACC18U3)		
10	BACP20B43		. PLUG	5199	AR
11	69-2190-37		. PANEL ASSY	5199	1
12	BACR12X1		. RING	5199	2
13	BACS21X7R		. STUD	5199	2
14	BACG20X2		. GROMMET	5199	2
15	69-2910-2		. STRIP, INSULATING	5199	2
16	69-2910-6		. STRIP, INSULATING	5199	1
17	69-2910-7		. STRIP, INSULATING	5199	1
18	69-2910-3		. HINGE, (ALTERED FROM; AN527-4-1490)	5199	2
			ATTACHING PARTS		
	MS20426D5		. RIVET	5199	11
			-----*		
19	69-2910-38		. PANEL	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/90

24-07-1592

DETAILED PARTS LIST
24-07-1592
PAGE 1

101-101-101
101-101-101
101-101-101
101-101-101

101-101-101
101-101-101
101-101-101
101-101-101

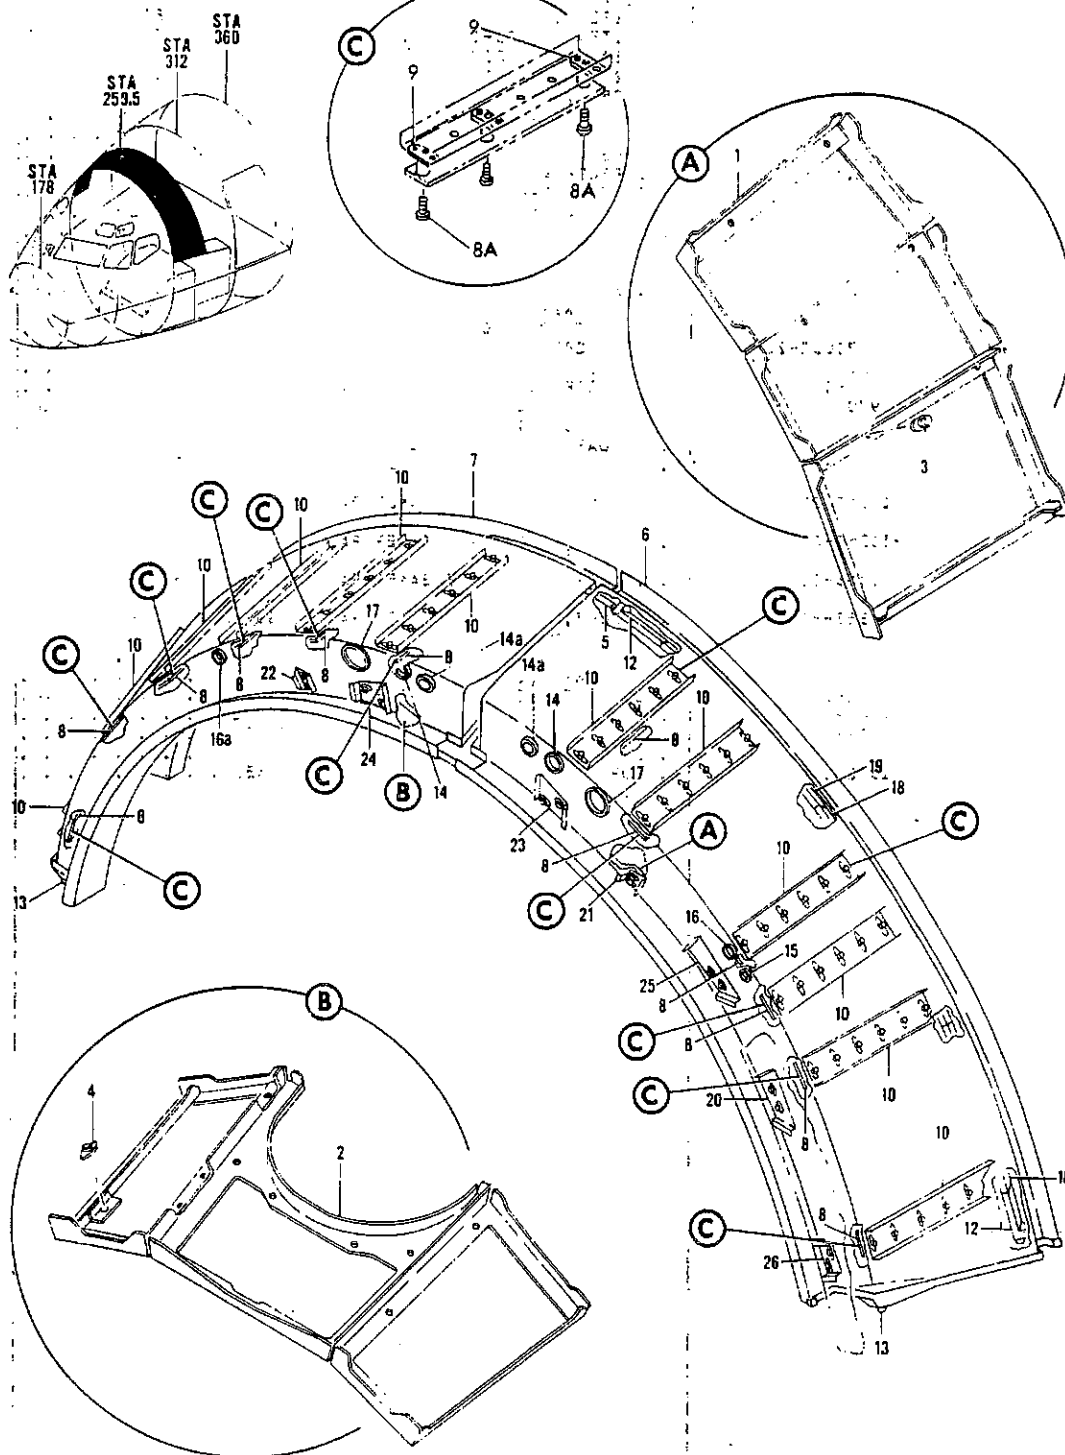


FIGURE 160. SUPPORT INSTL, CIRCUIT BREAKER PANELS

DETAILED PARTS LIST
24-07-160
PAGE 0

24-07-160

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
160	50-11363		SUPPORT INSTL, CIRCUIT BREAKER PANELS (SEE 25-1, FIG. 1; ITEM 11, 25-1, FIG. 1B, ITEM 14, 25-1, FIG. 1C, ITEM 14, 25-1, FIG. 1D, ITEM 12, 25-1, FIG. 1E, ITEM 10, 25-1, FIG. 1F, ITEM 9, 25-1, FIG. 2B, ITEM 10, 25-1, FIG. 2C, ITEM 10, 25-1, FIG. 2D, ITEM 8, 25-1, FIG. 2E, ITEM 1A, 25-1, FIG. 2F, ITEM 11, 25-1, FIG. 2G, ITEM 11 AND 25-1, FIG. 2H, ITEM 11)		RF
1	65-1787		. FRAME ASSY, CIRCUIT BREAKER PANEL SUPPORT (LH)		1
2	65-1787-1		. FRAME ASSY, CIRCUIT BREAKER PANEL SUPPORT (RH)		1
3	BACR11X3		. . . RECEPTACLE, (LH ONLY)		6
4	BACR11X3		. . . RECEPTACLE, (RH ONLY)		10
5	50-11363-31		. DUCT, SUPPORT CIRCUIT BREAKER PANEL SECTION		1
6	50-11363-2		. LINER ASSY, CIRCUIT BREAKER PANELS SUPPORT LH		1
7	50-11363-3		. LINER ASSY, CIRCUIT BREAKER PANELS SUPPORT RH		1
	65-6155		. . SUPPORT INSTL, SECTION 51 LH CIRCUIT BREAKER LINER WIRING (LH)		1
	65-6155-1		. . SUPPORT INSTL, SECTION 51 RH CIRCUIT BREAKER LINER WIRING (RH)		1
8	66-4401		. . . STRIP, SECTION 51 WIRING SUPPORT		6
BA	NAS514P1032-20		. . . SCREW		36
9	63-2455		. . . SPACER, SECTION 51 WIRING SUPPORT		36
10	66-4401-1		. . . STRIP, SECTION 51 WIRING BACKING		6
12	69-4970		. . PLENUM, CIRCUIT BREAKER PANEL AIR COOLING DUCT (LH ONLY)		2
13	63-1725		. . ADAPTER, CIRCUIT BREAKER LINER		1
15	50-11363-26		. . RING, CIRCUIT BREAKER PANELS SUPPORT FLANGED (LH . . ONLY)		1
16	50-11363-27		. . RING, CIRCUIT BREAKER PANELS SUPPORT FLANGED (LH . . ONLY)		1
16A	50-11363-27		. . RING, CIRCUIT BREAKER PANELS SUPPORT FLANGED (RH . . ONLY)		1
18	50-11363-29		. . DUCT, CIRCUIT BREAKER PANELS SUPPORT SECTION (LH . . ONLY)		2
19	50-11363-30		. . DUCT, CIRCUIT BREAKER PANELS SUPPORT SECTION (LH . . ONLY)		1
20	69-1500		. SUPPORT ASSY, CIRCUIT BREAKER PANEL		1
21	69-1501-1		. SUPPORT ASSY, CIRCUIT BREAKER PANEL		1
22	69-1501-2		. SUPPORT ASSY, CIRCUIT BREAKER PANEL		1
23	69-1501-3		. SUPPORT ASSY, CIRCUIT BREAKER PANEL		1
24	69-1501-4		. SUPPORT ASSY, CIRCUIT BREAKER PANEL		1
25	69-1502		. SUPPORT ASSY, CIRCUIT BREAKER PANEL		1
26	69-1502-1		. SUPPORT ASSY, CIRCUIT BREAKER PANEL		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

RAF
NOV 21/90

24-07-160

DETAILED PARTS LIST
24-07-160
PAGE 1


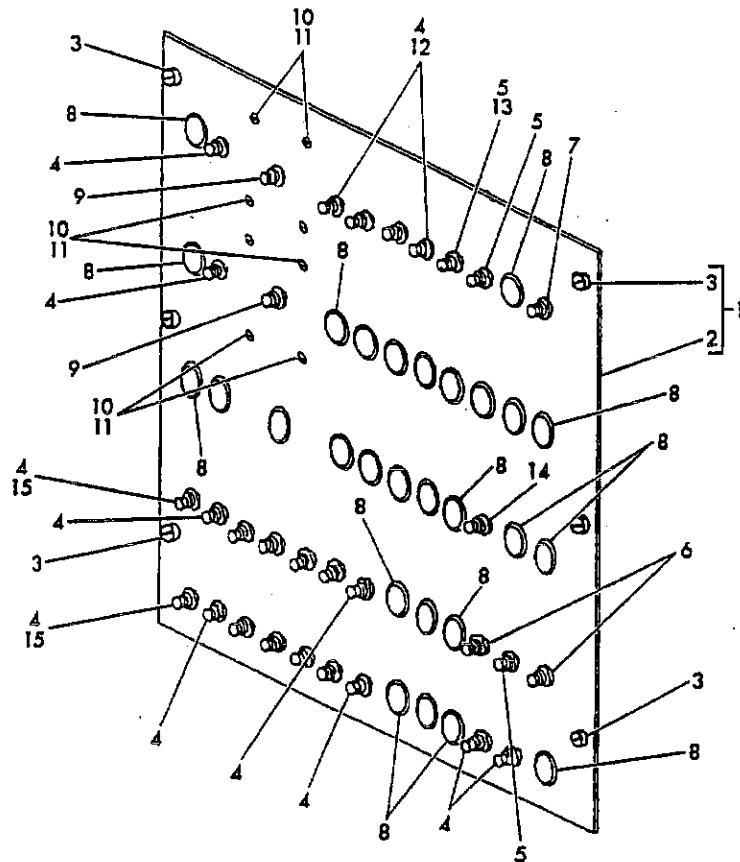


FIGURE 161C. PANEL ASSY, A/R CIRCUIT BREAKER

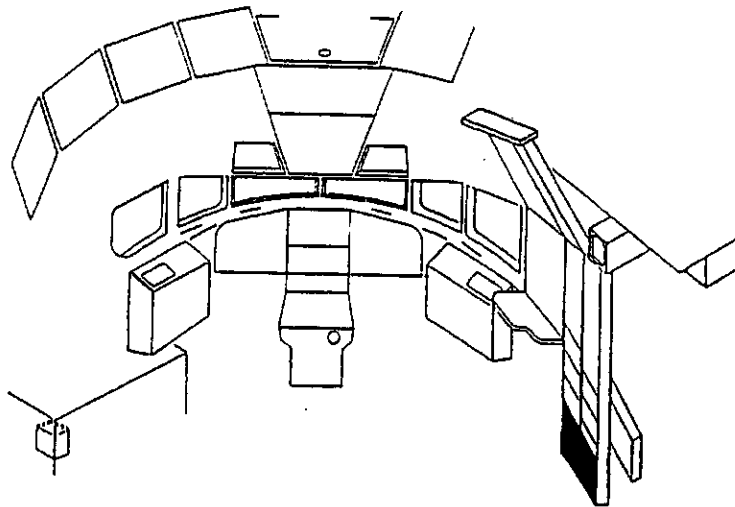



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R 161C	361-39-11-74195-101	A/R CIRCUIT BREAKER PANEL ASSY, (VS2500) (ADDED BY. . .							0150	RF
R		RAF 7211.019-225) (SEE 24-07, FIG. 25, ITEM 20)								
R	1	361-39-11-74195-203	.	.	PANEL ASSY, (VS2500).	.	.	.	0150	1
R	2	361-39-11-74195-207	.	.	PANEL, (VS2500)	.	.	.	0150	1
R	3	PFSC31-2-38A	.	.	STUD ASSY	.	.	.	0150	6
R	4	MS25244-5	.	.	CIRCUIT BREAKER	.	.	.	0150	22
R	5	1500-032-3	.	.	CIRCUIT BREAKER	.	.	.	0150	3
R	6	1500-032-5	.	.	CIRCUIT BREAKER	.	.	.	0150	2
R	7	1500-032-2	.	.	CIRCUIT BREAKER	.	.	.	0150	1
R	8	SS48152	.	.	PLUG	.	.	.	0150	28
R	9	MS21984-5	.	.	CIRCUIT BREAKER, (OPTIONAL TO KLIXON P/N 6760-1-5).	.	.	.	0150	2
R	9	6760-1-5	.	.	CIRCUIT BREAKER, (OPTIONAL TO MS21984-5).	.	.	.	0150	2
R	10	NAS601-6P	.	.	ATTACHING PARTS	.	.	.		
R	11	NAS620A6L	.	.	SCREW	.	.	.	0150	8
			.	.	WASHER	.	.	.	0150	8
R	12	BACB29B15-2	.	.	BUS ASSY	.	.	.	0150	4
R	13	BACB29B15-4	.	.	BUS ASSY	.	.	.	0150	1
R	14	1500-032-7-5	.	.	CIRCUIT BREAKER	.	.	.	0150	1
R	15	BACB29B15-13	.	.	BUS ASSY	.	.	.	0150	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

RAF
NOV 21/94

24-07-161C

DETAILED PARTS LIST
24-07-161C
PAGE 1

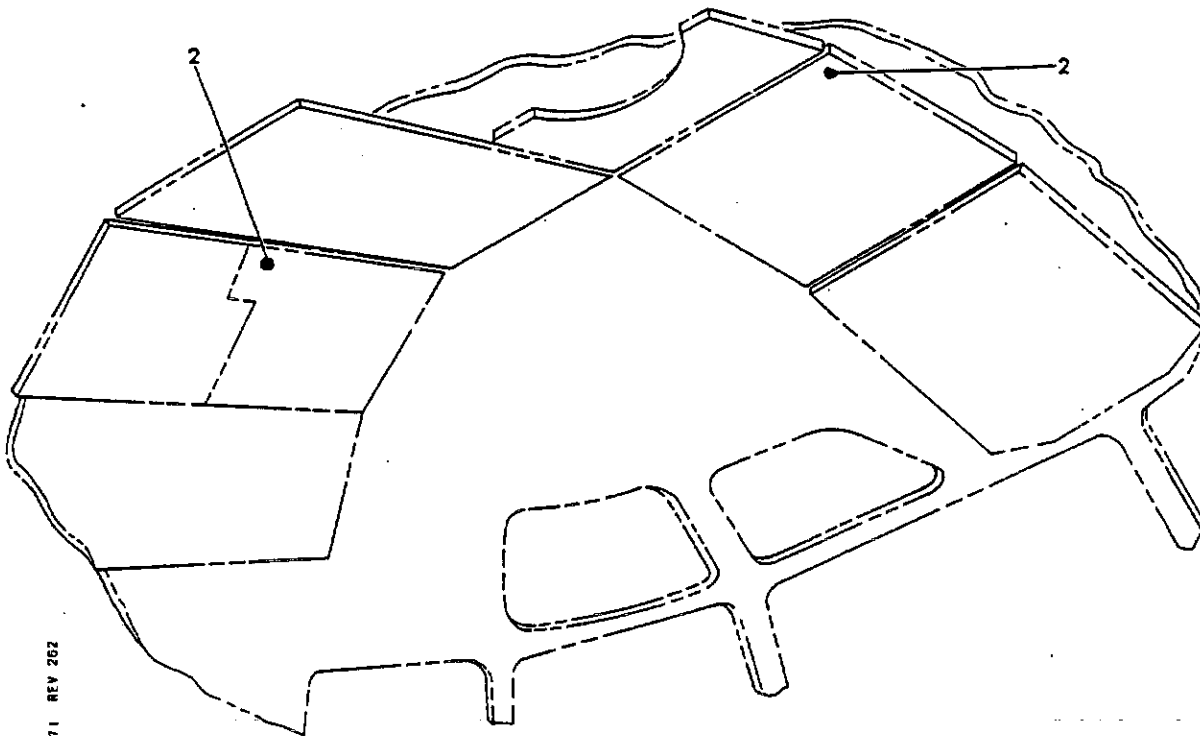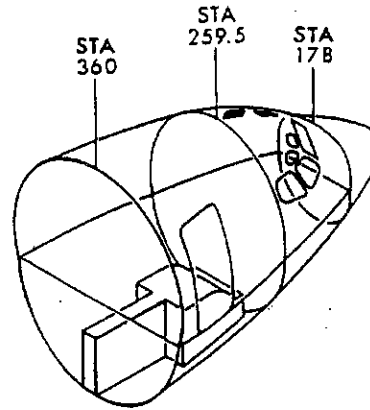

A 2407171 REV 262

FIGURE 171. ELECTRICAL POWER CIRCUIT BREAKER (SHEET 1)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF	UNITS
			FROM TO	PER ASSY
R R R	171	CIRCUIT BREAKER INSTL, 50 CYCLE POWER SUPPLY (VZ0268) (ADDED BY RAF MOD 7211.019-159)	0150	2
	2	CIRCUIT BREAKER	0150	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

BOEING *Intercontinental*
PARTS CATALOG

SECTION 08
ELECTRICAL RACK

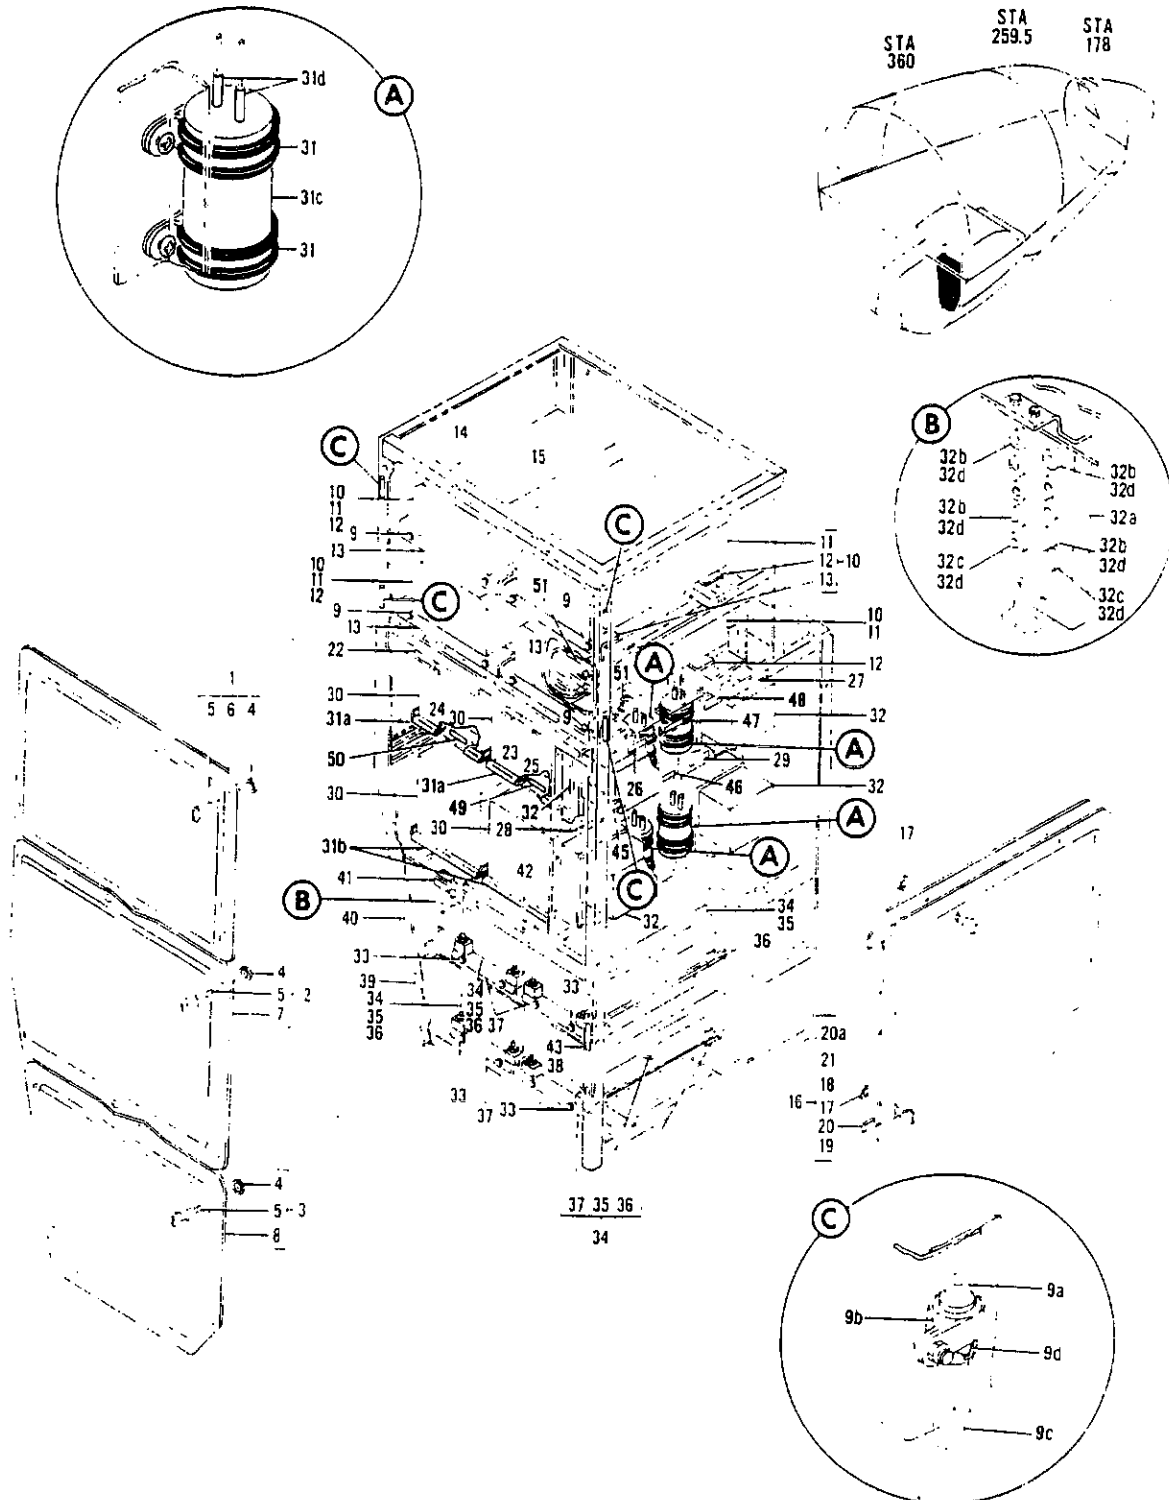


FIGURE 1. EQUIPMENT INSTL, STATION 335.05 ELECTRICAL RACK (ELECTRICAL POWER ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
1	65-7146	EQUIPMENT INSTL, STATION 335 J5 ELECTRICAL RACK (ELECTRICAL POWER ONLY) (SEE 24-3, FIG. 1A, ITEM 4, 24-3, FIG. 1B, ITEM 4 AND 24-3, FIG. 1C, ITEM 4)	0150	RF
1	65-7249	. DOOR ASSY, TRANSFORMER-RECTIFIER EQUIPMENT RACK ACCESS	0150	1
2	65-7250	. DOOR ASSY, CONTROL PANEL EQUIPMENT RACK ACCESS.	0150	1
3	65-7251	. DOOR ASSY, VOLTAGE REGULATOR EQUIPMENT RACK ACCESS.	0150	1
4	BACW10X4	. WASHER.	0150	5
4	BACW10X4	. WASHER, (USED ON 65-7249 AND 65-7250)	0150	1
5	26S8-4	. STUD ASSY, (V71286)	0150	5
5	26S8-4	. STUD ASSY, (V71286) (USED ON 65-7249 AND 65-7250)	0150	1
6	65-7249-1	. DOOR, TRANSFORMER-RECTIFIER EQUIPMENT RACK ACCESS (USED ON 65-7249)	0150	1
7	65-7250-1	. DOOR, CONTROL PANEL EQUIPMENT RACK ACCESS (USED ON 65-7250)	0150	1
8	65-7251-1	. DOOR, VOLTAGE REGULATOR EQUIPMENT RACK ACCESS (USED ON 65-7251)	0150	1
9	AN3-5A	. BOLT.	0150	8
9A	MDL5	. FUSE, 5 AMP (V71400). (OPTIONAL 313005 (V75915))	0150	4
9A	313005	. FUSE, 5 AMP (V75915). (OPTIONAL TO MDL5 (V71400))	0150	4
9B	BACC10DK13	. CLAMP	0150	4
		ATTACHING PARTS		
	NAS603-8	. SCREW	0150	4
	NAS679A3W	. NUT	0150	4
9C	HKR	. HOLDER, FUSE (V71400)	0150	4
9D	65-7146-6	. SLEEVE, STATION 335 J5 ELECTRICAL RACK EQUIPMENT. INSULATING	0150	4
10	65-7146-9	. TRANSFORMER-RECTIFIER ASSY, STATION 335 J5 ELECTRICAL RACK	0150	4
11	2-414	. TRANSFORMER-RECTIFIER, (V08748)	0150	1
12	69-5852-1	. PLATE, EQUIPMENT RACK REAR WEDGE FASTENING.	0150	1
13	69-5852-2	. BRACKET, EQUIPMENT RACK FRONT ATTACHMENT FASTENING ATTACHING PARTS	0150	1
	NAS514P428-6	. SCREW	0150	4
	NAS679A4W	. NUT	0150	4
14	BACM10E20-5F	. MARKER-ALUMINUM FOIL, TRANSFORMER RECTIFIER ESSENTIAL	0150	1
15	BACM10R10-20CS	. MARKER-ALUMINUM FOIL, TRANSFORMER RECTIFIER NO. 2	0150	1
16	65-7228	. DOOR ASSY, EQUIPMENT RACK LOAD CONTROL ACCESS	0150	1
17	BACW10X4	. WASHER.	0150	8
18	26S8-5	. STUD ASSY, (V71286)	0150	4
19	26S8-3	. STUD ASSY, (V71286)	0150	4
20	65-7228-6	. STRIP, EQUIPMENT RACK LOAD CONTROL ACCESS DOOR. FILLER	0150	1
20A	65-7228-7	. STRIP, EQUIPMENT RACK LOAD CONTROL ACCESS DOOR. FILLER	0150	1
21	65-7228-1	. DOOR, EQUIPMENT RACK LOAD CONTROL ACCESS.	0150	1
22	BACM10P10-20CP	. MARKER-ALUMINUM FOIL, TRANSFORMER RECTIFIER NO. 3	0150	1
23	BACM10P10-9PE	. MARKER-ALUMINUM FOIL, CONTROL PANEL NO. 2	0150	1
24	BACM10R10-9PD	. MARKER-ALUMINUM FOIL, CONTROL PANEL NO. 1	0150	1
25	BACM10R10-20CR	. MARKER-ALUMINUM FOIL, TRANSFORMER RECTIFIER NO. 4	0150	1
26	BACM10C10-3AA	. MARKER-ALUMINUM FOIL, LOAD CONTROLLER NO. 1	0150	1
27	BACM10C10-3AB	. MARKER-ALUMINUM FOIL, LOAD CONTROLLER NO. 2	0150	1
28	BACM10C10-3AC	. MARKER-ALUMINUM FOIL, LOAD CONTROLLER NO. 3	0150	1
29	BACM10C10-3AD	. MARKER-ALUMINUM FOIL, LOAD CONTROLLER NO. 4	0150	1
30	10-3324-19	. PANEL, 30 KVA AC GENERATING SYSTEM CONTROL.	0150	4
31	MS21919DG29	. CLAMP.	0150	8
		ATTACHING PARTS		
	NAS603-16	. SCREW	0150	8
	NAS43DD3-40	. SPACER.	0150	8
	BACN10FX1	. NUT	0150	8
31C	HLVB1050D45566	. CAPACITOR, (V56289) (OPTIONAL AND FOR REPLACEMENT ORDER HLVB1050 (V56289))	0150	4
31C	HLVB1050	. CAPACITOR, (V56289) (OPTIONAL TO AND REPLACEMENT FOR HLVB1050D45566 (V56289))	0150	4
31D	65-7146-5	. SLEEVE, STATION 335 J5 ELECTRICAL RACK EQUIPMENT. INSULATING	0150	8

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	1	32	10-60295-6	. CONTROLLER, 40 KVA AC GENERATOR CONSTANT SPEED DRIVE LOAD	0150	4
R				ATTACHING PARTS		
R			NAS603-6	. SCREW	0150	16
R		32A	66-26033	. PANEL ASSY, TEST JACK	0150	1
R				ATTACHING PARTS		
R			NAS603-6	. SCREW	0150	4
R			AN960D10L	. WASHER.	0150	2
R			NAS679A3W	. NUT	0150	4
R		32B	108-902	. . JACK, RED BANANA (V74970)	0150	8
R		32C	108-903	. . JACK, BLACK BANANA (V74970)	0150	2
R		32D	AN936B516	. . WASHER.	0150	10
R		33	AN3-5A	. BOLT.	0150	8
R		34	65-7146-3	. REGULATOR ASSY, STATION 335 JS ELECTRICAL RACK.	0150	4
R				EQUIPMENT VOLTAGE		
R		35	10-3324-6	. . REGULATOR, 30 KVA AC GENERATING SYSTEM VOLTAGE.	0150	1
R		36	69-5852-3	. . PLATE, EQUIPMENT RACK VOLTAGE REGULATOR REAR WEDGE FASTENING	0150	1
R		37	69-5852-4	. . BRACKET, EQUIPMENT RACK VOLTAGE REGULATOR FRONT	0150	1
R				ATTACHMENT FASTENING		
R				ATTACHING PARTS		
R			NAS514P1032-16	. . SCREW	0150	4
R			NAS679A3W	. . NUT	0150	4
R		38	BACM10V20-5D	. MARKER-ALUMINUM FOIL, VOLTAGE REG. NO. 4.	0150	1
R		39	BACM10V20-5B	. MARKER-ALUMINUM FOIL, VOLTAGE REG. NO. 3.	0150	1
R		40	BACM10V20-5A	. MARKER-ALUMINUM FOIL, VOLTAGE REG. NO. 1.	0150	1
R		41	BACM10P10-9PF	. MARKER-ALUMINUM FOIL, CONTROL PANEL NO. 3	0150	1
R		42	BACM10P10-9PG	. MARKER-ALUMINUM FOIL, CONTROL PANEL NO. 4	0150	1
R		43	BACM10V20-5C	. MARKER-ALUMINUM FOIL, VOLTAGE REG. NO. 2.	0150	1
R		45	BACM10C20-28AE	. MARKER-ALUMINUM FOIL, TR NO. 3 NOISE FILTER CAPACITOR	0150	1
R		46	BACM10C20-28AF	. MARKER-ALUMINUM FOIL, TR NO. 4 NOISE FILTER CAPACITOR	0150	1
R		47	BACM10C20-28AC	. MARKER-ALUMINUM FOIL, ESS TR NOISE FILTER CAPACITOR	0150	1
R		48	BACM10C20-28AD	. MARKER-ALUMINUM FOIL, TR NO. 2 NOISE FILTER CAPACITOR	0150	1
R		49	BACM9F4L	. SCOTCH-CAL, M223 NOISE FILTERS GENERATORS NO. 2 AND 4	0150	1
R		50	BACM9F4K	. SCOTCH-CAL, M222 NOISE FILTERS GENERATORS NO. 1 AND 3	0150	1
R				. FOR REFERENCE TO OTHER EQUIPMENT DETAILS, SEE NHA	0150	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

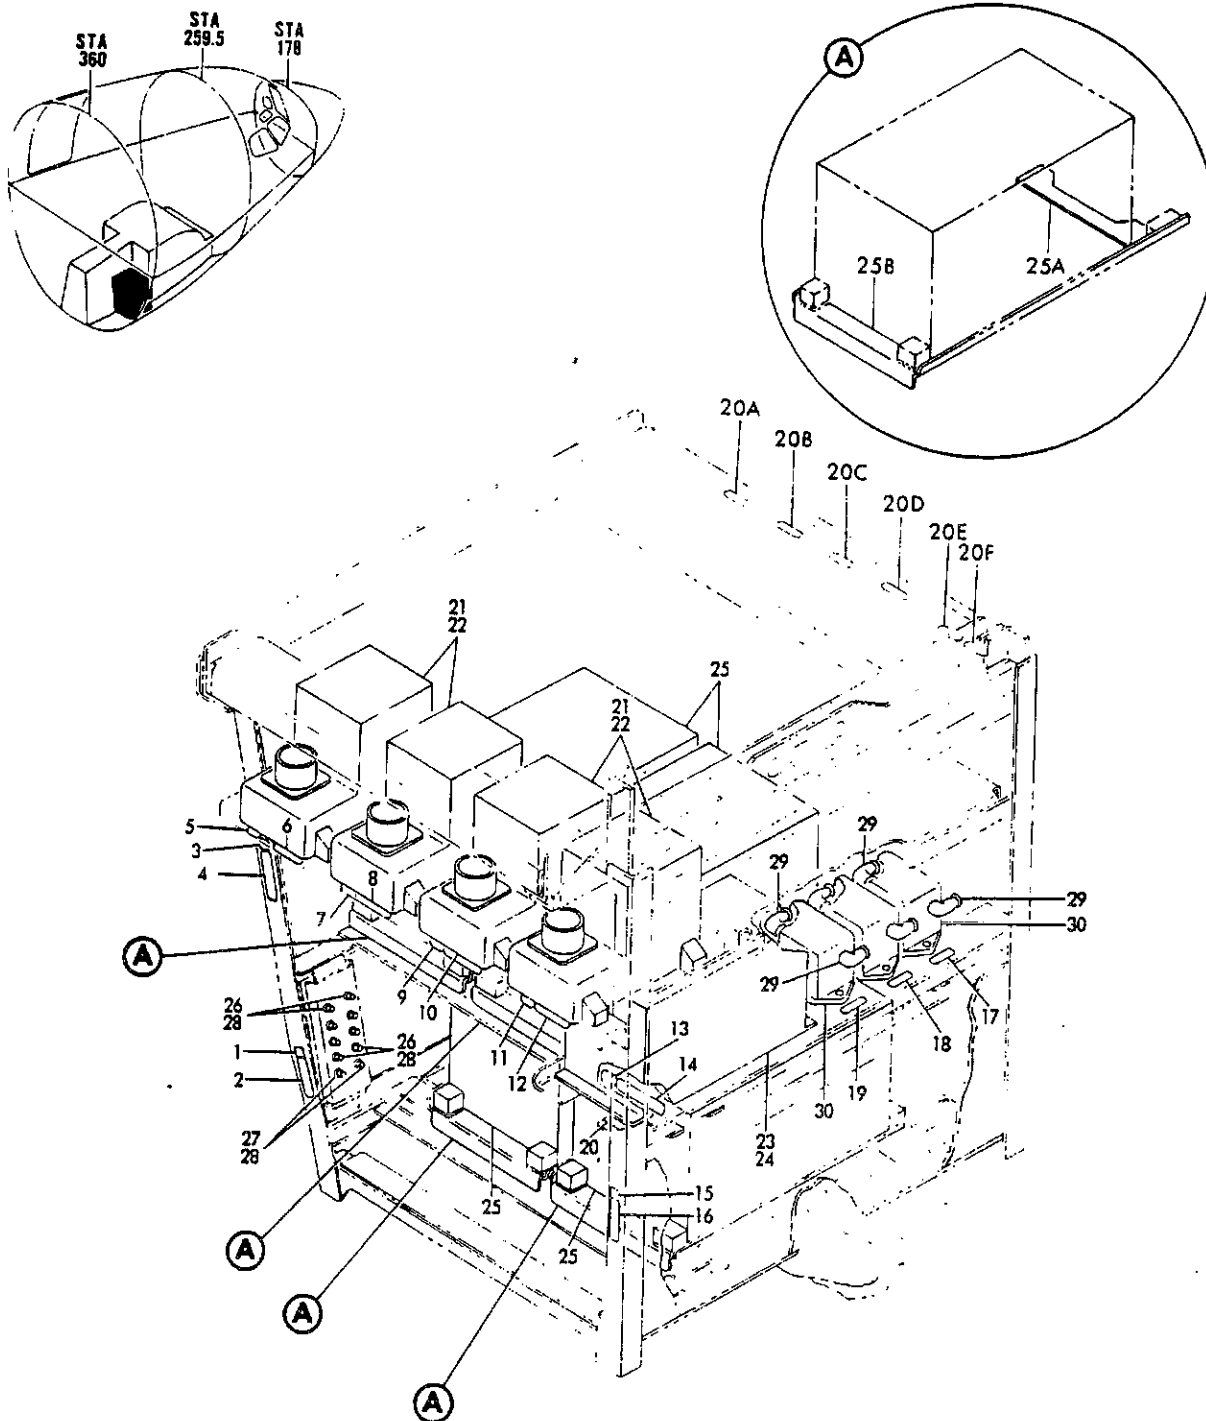


FIGURE 18. EQUIPMENT INSTL, STATION 335 J5 ELECTRICAL (ELECTRICAL POWER ONLY)

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1B	65-69905-1	EQUIPMENT INSTL, STATION 335 J5 ELECTRICAL (VARIABLE, DWG: 65-69905-5002) (ELECTRICAL POWER ONLY) (SEE 24-3, FIG. 3A, ITEM 4 AND 24-3, FIG. 1C, ITEM 4)	5199	RF
1	BACM9G5G	. SCOTCH-CAL, G8.	5199	1
2	BACM10V20-5B	. MARKER-ALUMINUM FOIL, VOLTAGE REG NO. 3	5199	1
3	BACM9G5E	. SCOTCH-CAL, G6.	5199	1
4	BACM10V20-5A	. MARKER-ALUMINUM FOIL, VOLTAGE REG NO. 1	5199	1
5	BACM9G5J	. SCOTCH-CAL, G11	5199	1
6	BACM10C10-3AA	. MARKER-ALUMINUM FOIL, LOAD CONTROLLER NO. 1	5199	1
7	BACM9G5K	. SCOTCH-CAL, G12	5199	1
8	BACM10C10-3AB	. MARKER-ALUMINUM FOIL, LOAD CONTROLLER NO. 2	5199	1
9	BACM9G5L	. SCOTCH-CAL, G13	5199	1
10	BACM10C10-3AC	. MARKER-ALUMINUM FOIL, LOAD CONTROLLER NO. 3	5199	1
11	BACM9G5M	. SCOTCH-CAL, G14	5199	1
12	BACM10C10-3AD	. MARKER-ALUMINUM FOIL, LOAD CONTROLLER NO. 4	5199	1
13	BACM9G5F	. SCOTCH-CAL, G7.	5199	1
14	BAC27CEE173	. MARKER-ALUMINUM FOIL, VOLTAGE REGULATOR NO. 2	5199	1
15	BACM9G5H	. SCOTCH-CAL, G9.	5199	1
16	BACM10V20-5D	. MARKER-ALUMINUM FOIL, VOLTAGE REGULATOR NO. 4	5199	1
20A	BAC27CEE573	. MARKER-ALUMINUM FOIL, J5-6.	5199	1
20B	BAC27CEE572	. MARKER-ALUMINUM FOIL, J5-5.	5199	1
20C	BAC27CEE571	. MARKER-ALUMINUM FOIL, J5-4.	5199	1
20D	BAC27CEE570	. MARKER-ALUMINUM FOIL, J5-3.	5199	1
20E	BAC27CEE569	. MARKER-ALUMINUM FOIL, J5-2.	5199	1
20F	BAC27CEE568	. MARKER-ALUMINUM FOIL, J5-1.	5199	1
21	65-69905-4	. CONTROLLER ASSY, LOAD	5199	4
	BACS12CB3-7	ATTACHING PARTS . SCREW	5199	8
22	10-60295-6	. CONTROLLER.	5199	4
25	10-3324-6	. REGULATOR, VOLTAGE (30KVA).	5199	4
25A	69-5852-3	. PLATE, REAR WEDGE	5199	4
25B	69-5852-4	. BRACKET, FRONT ATTACHMENT	5199	4
	NAS514P1032-16	ATTACHING PARTS . SCREW	5199	16
	NAS679A3W	. NUT	5199	16
26	108-902	. JACK, RED BANANA (V74970)	5199	8
27	108-903	. JACK, BLACK BANANA (V74970)	5199	2
28	AN9368516	. WASHER.	5199	10
		. FOR REFERENCE TO OTHER EQUIPMENT DETAILS, SEE NHA	5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

BOEING
Intercontinental
707
 PARTS CATALOG

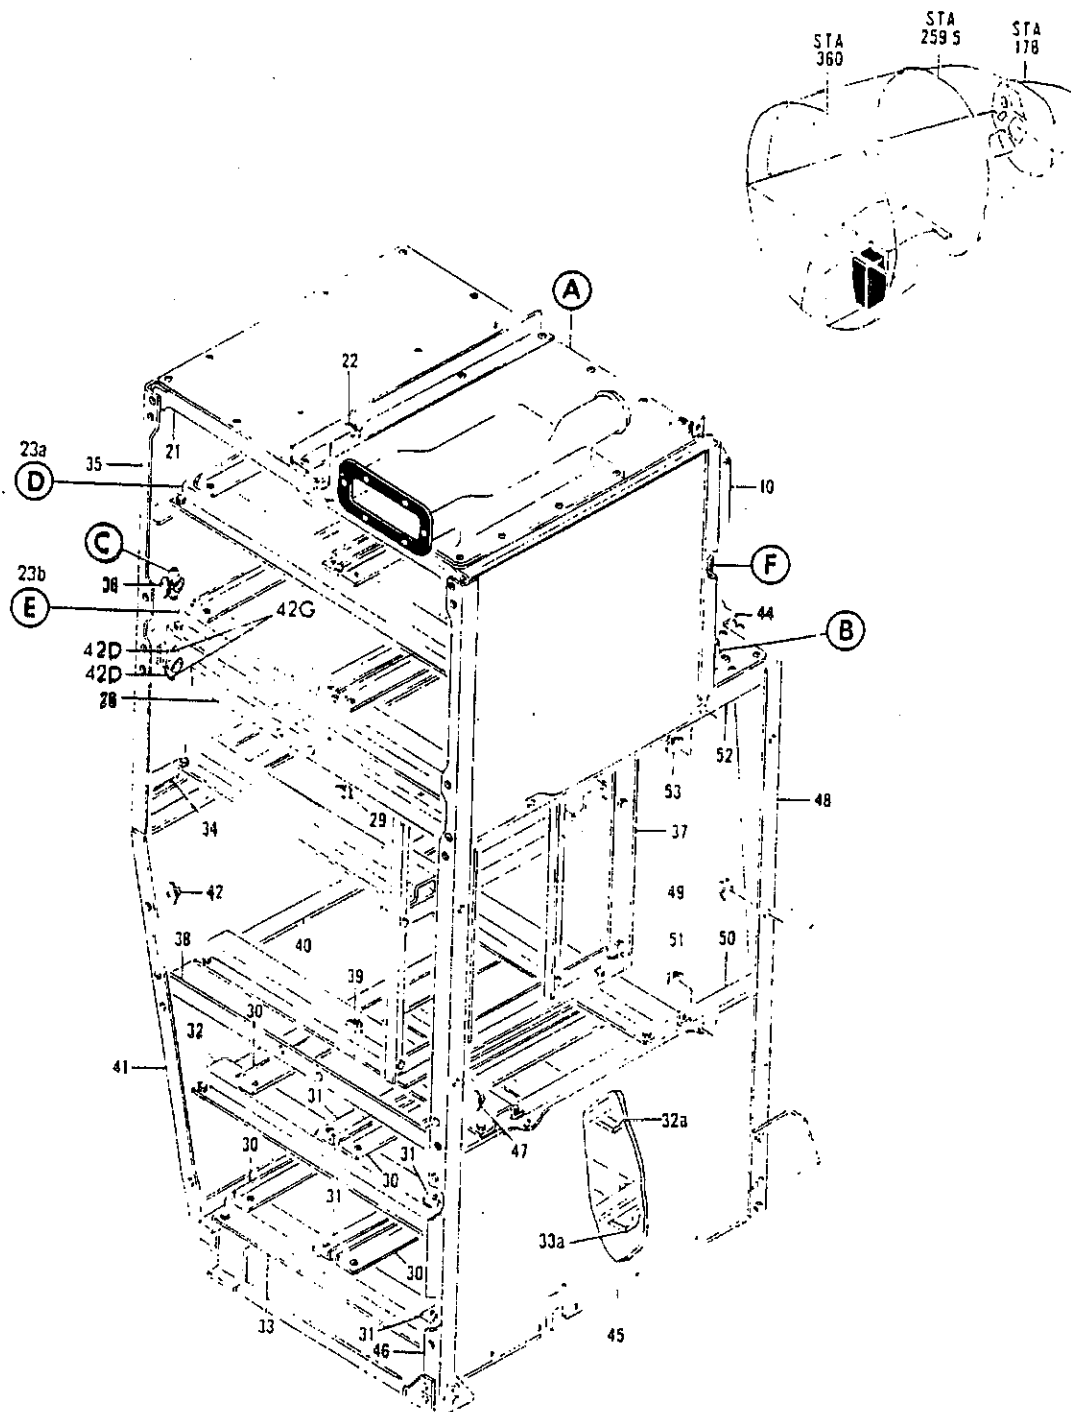


FIGURE 2. RACK INSTL, STATION 335 J5 ELECTRICAL EQUIPMENT (SHEET 1)

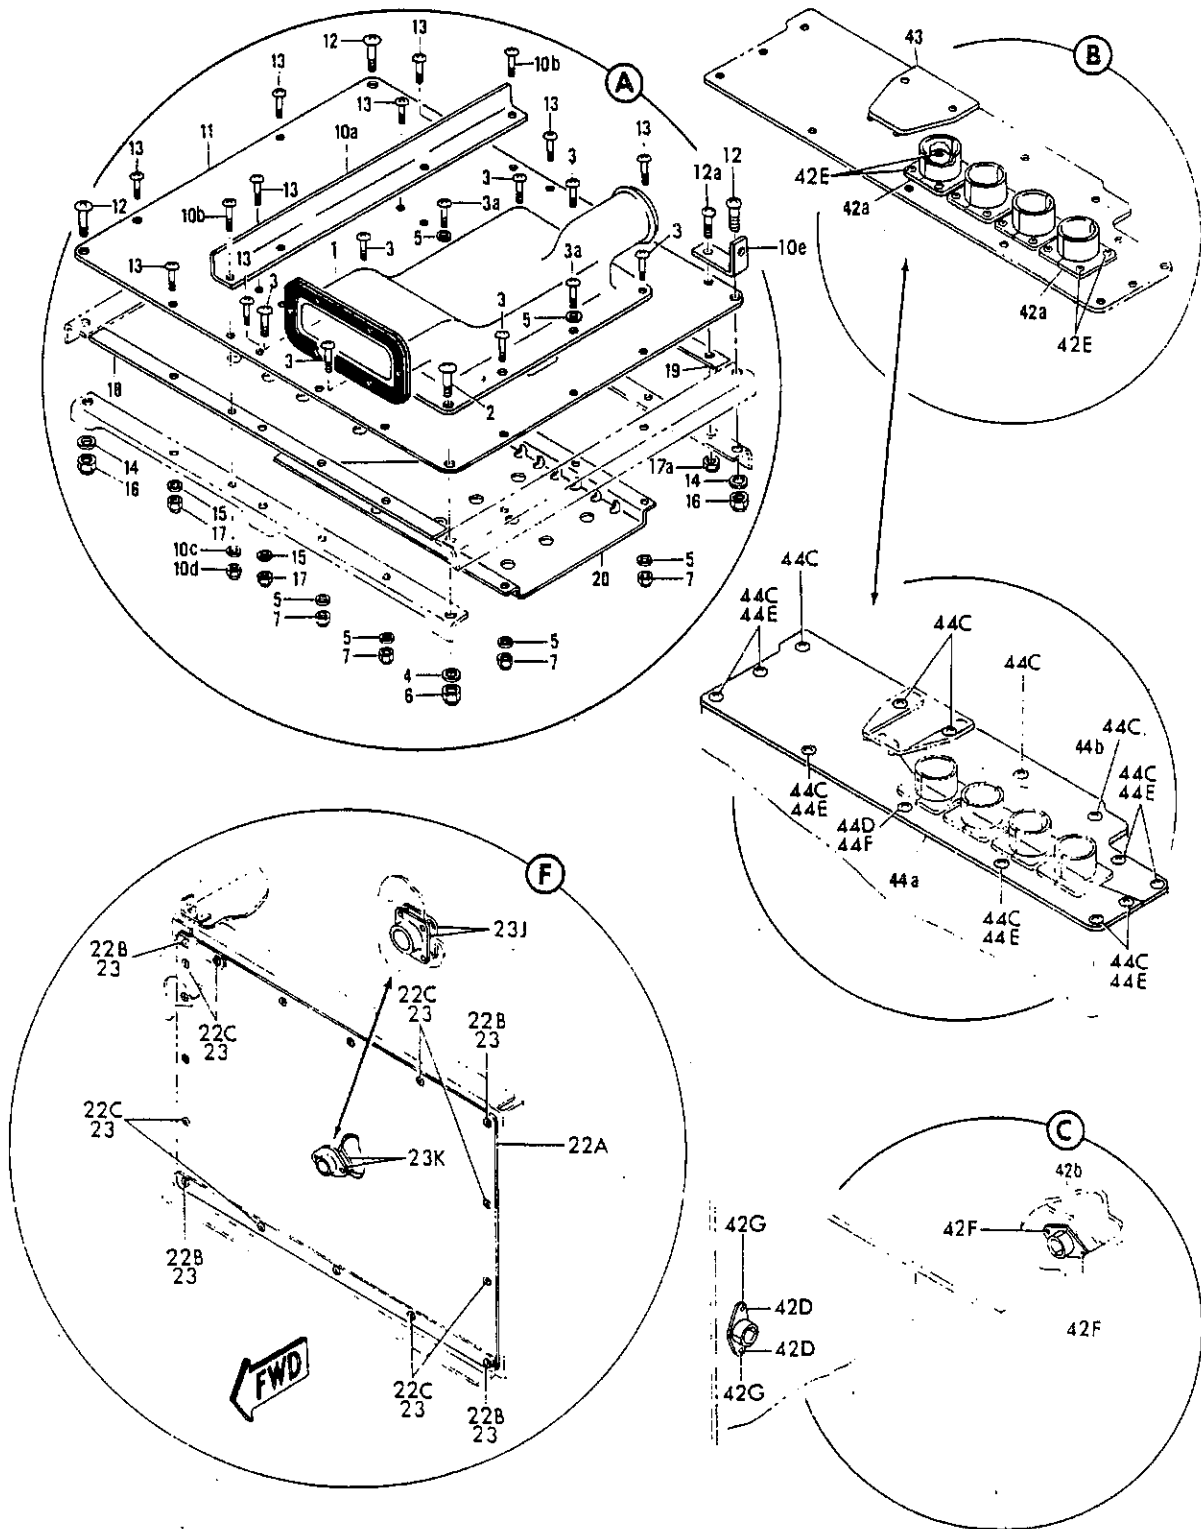


FIGURE 2. RACK INSTL, STATION 335 J5 ELECTRICAL EQUIPMENT (SHEET 2)

NOV 21/90

24-00-2

DETAILED PARTS LIST
24-00-2
PAGE 1


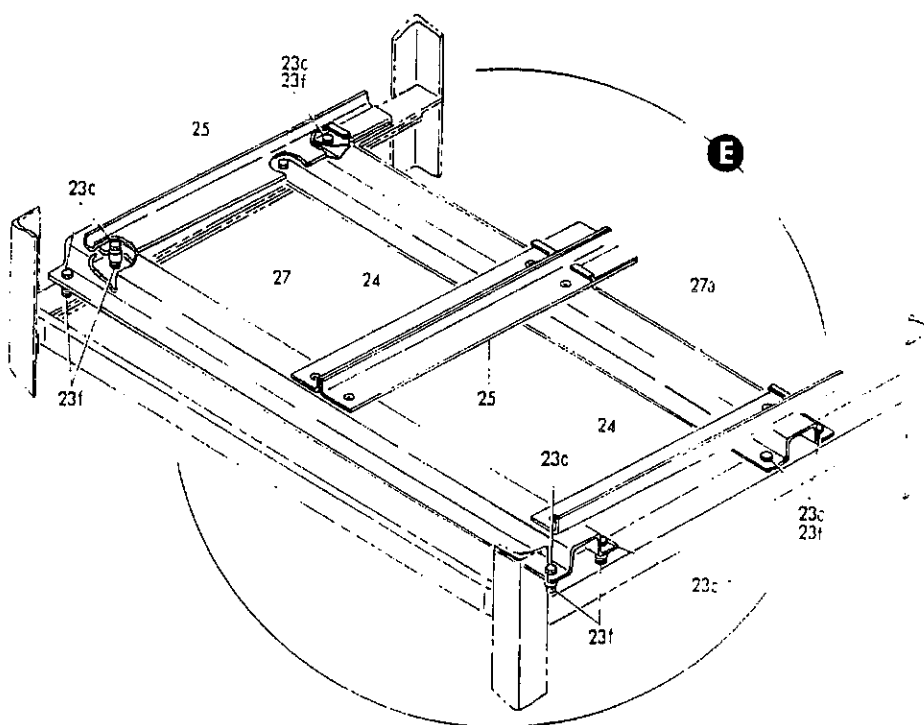


FIGURE 2. RACK INSTL. STATION 335 J5 ELECTRICAL EQUIPMENT (SHEET 3)



PARTS CATALOG

MISSING ITEM NUMBERS ARE NOT APPLICABLE

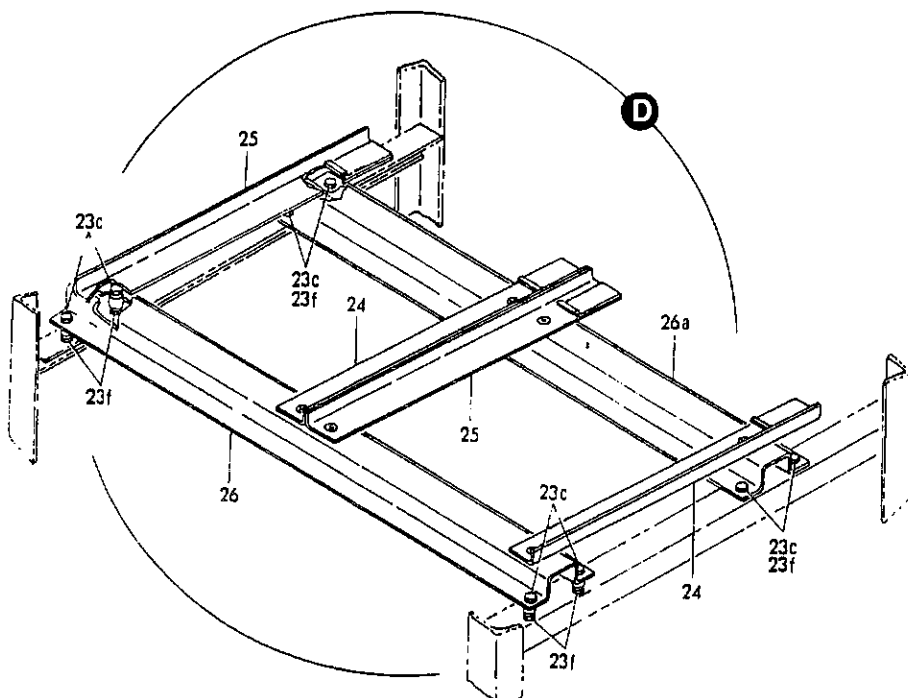

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	2 44B	65-7230-119	.	PANEL, STATION 335 J5 ELECTRICAL EQUIPMENT RACK . . .	0150	1
R	44C	NAS601-6P	.	ATTACHING PARTS		
R	44D	NAS603-8P	.	SCREW	0150	13
R	44E	NAS679A06W	.	SCREW	0150	1
R	44F	NAS679A3W	.	NUT	0150	8
			.	NUT	0150	1
			-----*			
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

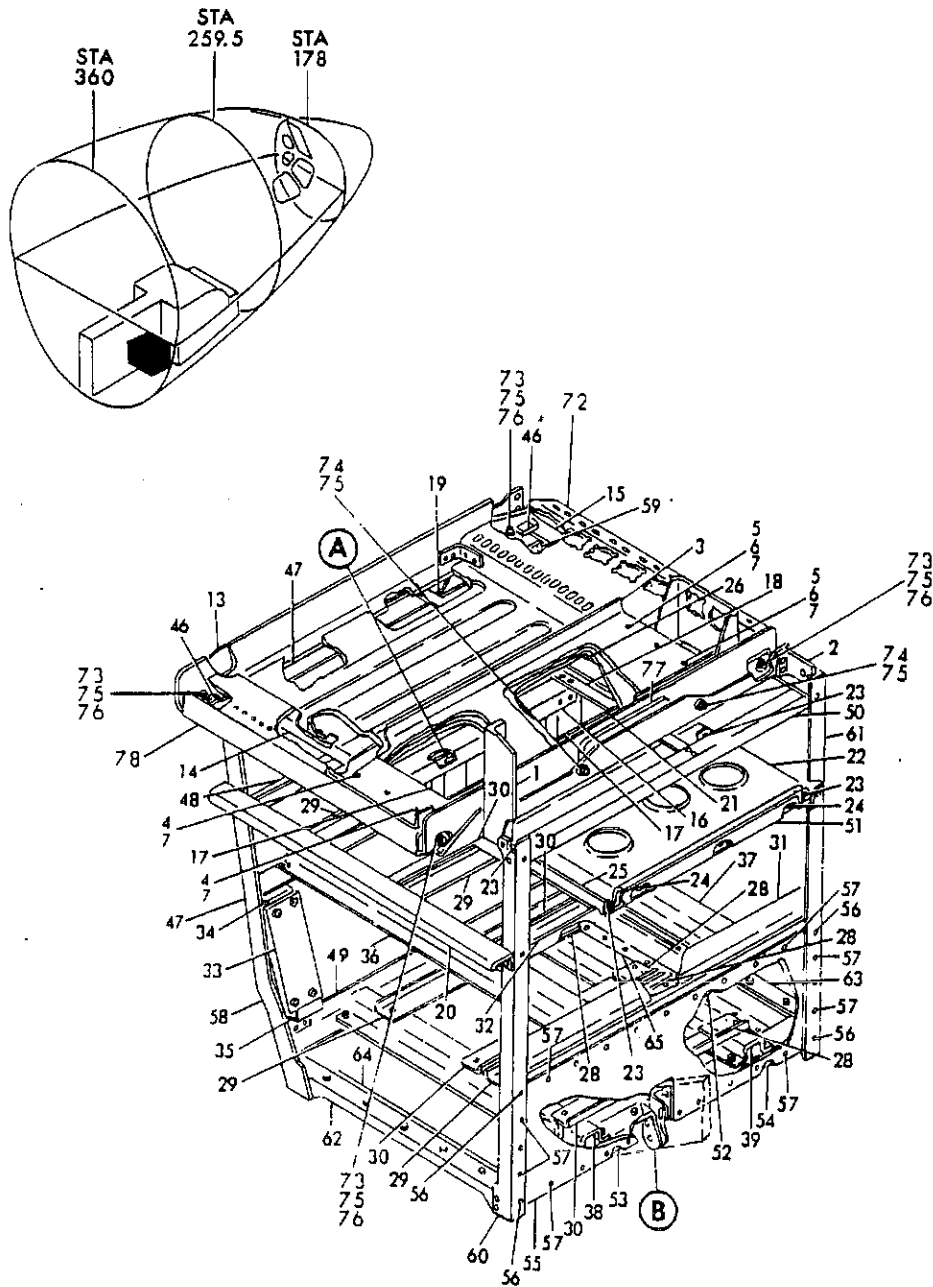


FIGURE 2B. RACK INSTL, STATION 335 J5 (SHEET 1)

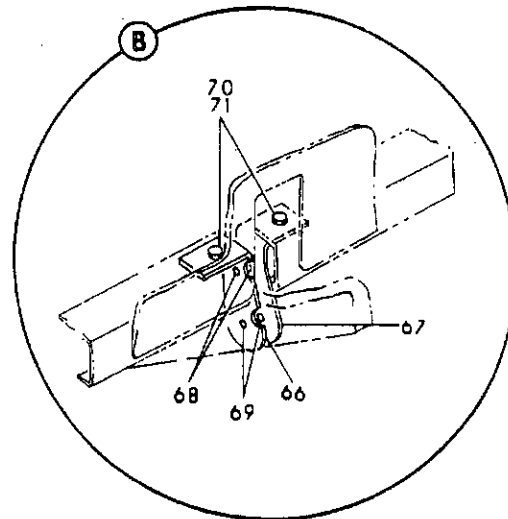
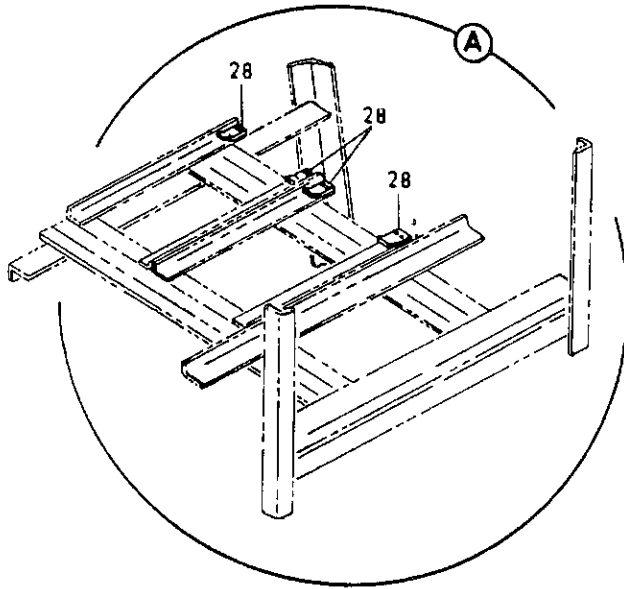


FIGURE 2B. RACK INSTL, STATION 335 J5 (SHEET 2)

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE						EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6		
2B	65-58614-1	RACK INSTL, STATION 335 J5 (VARIABLE DWG;65-58614-5002) (SEE 24-3, FIG. 1A, ITEM 6 AND 24-3, FIG. 1C, ITEM 5)						5199	RF
1	65-58614-60	. RACK ASSY						5199	1
	65-58614-61	. . ANGLE, PIPE SUPPORT						5199	1
2	65-58614-62	. . ANGLE, BRACKET.						5199	1
	MS20470D4	. . ATTACHING PARTS							
		. . RIVET						5199	4
13	65-58614-8	. . ANGLE, SUPPORT.						5199	1
	NAS514P1032-6	. . ATTACHING PARTS							
	NAS679A3W	. . SCREW						5199	3
		. . NUT						5199	3
14	65-58614-67	. . MEMBER, AFT SUPPORT						5199	1
15	65-58614-68	. . CHANNEL, FORWARD SUPPORT.						5199	1
	MS20470D4	. . ATTACHING PARTS							
		. . RIVET						5199	8
16	65-58614-82	. . ANGLE ASSY, SUPPORT						5199	1
	MS20470D4	. . ATTACHING PARTS							
		. . RIVET						5199	6
17	65-58614-78	. . ANGLE, SUPPORT.						5199	2
	MS20470D4	. . ATTACHING PARTS							
		. . RIVET						5199	4
18	65-58614-80	. . ANGLE, SUPPORT.						5199	1
	MS20470D4	. . ATTACHING PARTS							
		. . RIVET						5199	4
19	65-58614-61	. . ANGLE, BRACKET.						5199	1
	MS20470D4	. . ATTACHING PARTS							
		. . RIVET						5199	2
20	65-58614-85	. . CHANNEL ASSY, SUPPORT						5199	1
	MS20470D4	. . ATTACHING PARTS							
		. . RIVET						5199	4
21	65-58614-83	. . ANGLE ASSY, SUPPORT						5199	1
	MS20470D4	. . ATTACHING PARTS							
		. . RIVET						5199	4
22	65-58614-86	. . CHASSIS ASSY.						5199	1
23	MS20470D3	. . ATTACHING PARTS							
24	MS20426D3	. . RIVET						5199	4
		. . RIVET						5199	3
25	65-58614-84	. . ANGLE ASSY, SUPPORT						5199	1
	MS20470D4	. . ATTACHING PARTS							
		. . RIVET						5199	2
26	65-58614-34	. . ANGLE, SUPPORT.						5199	1
	MS20470D4	. . ATTACHING PARTS							
		. . RIVET						5199	2
28	69-5852	. . CLIP, EQUIPMENT HOLD DOWN						5199	8
	MS20470D6	. . ATTACHING PARTS							
		. . RIVET						5199	16
29	65-7230-52	. . ANGLE, ELECTRICAL EQUIPMENT						5199	4
	65-7230-53	. . ANGLE, ELECTRICAL EQUIPMENT						5199	4
31	65-58614-37	. . ANGLE, SUPPORT.						5199	1
32	65-58614-36	. . ANGLE, SUPPORT.						5199	1
	NAS514P1032-7	. . ATTACHING PARTS							
	NAS679A3W	. . SCREW						5199	20
		. . NUT						5199	20
33	65-58614-15	. . SUPPORT						5199	1
	NAS603-6P	. . ATTACHING PARTS							
	NAS679A3W	. . SCREW						5199	4
		. . NUT						5199	4
34	65-58614-17	. . ANGLE, SUPPORT.						5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE									

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2B 35	65-58614-18	. .	ANGLE, SUPPORT.	5199	1
	MS20470D3	. .	ATTACHING PARTS RIVET	5199	4
36	65-58614-39	. .	HAT SECTION, UPPER AFT.	5199	1
37	65-58614-40	. .	HAT SECTION, UPPER FORWARD.	5199	1
38	65-58614-41	. .	HAT SECTION, LOWER AFT.	5199	1
39	65-58614-42	. .	HAT SECTION, LOWER FORWARD.	5199	1
	BACS12CB3-7	. .	ATTACHING PARTS SCREW	5199	16
	NAS679A3W	. .	NUT	5199	16
46	65-58614-77	. .	BRACKET, SUPPORT.	5199	2
	MS20470D4	. .	ATTACHING PARTS RIVET	5199	4
47	65-58614-6	. .	ANGLE, SUPPORT.	5199	2
48	65-58614-63	. .	ANGLE, SUPPORT.	5199	1
49	65-58614-16	. .	ANGLE, SUPPORT.	5199	1
	MS20470D6	. .	ATTACHING PARTS RIVET	5199	2
50	65-58614-76	. .	ANGLE, SUPPORT.	5199	1
	MS20470D4	. .	ATTACHING PARTS RIVET	5199	2
51	65-58614-64	. .	ANGLE, SUPPORT.	5199	1
	MS20470D6	. .	ATTACHING PARTS RIVET	5199	2
52	65-58614-46	. .	CHANNEL, STRUCTURE.	5199	1
53	65-58614-47	. .	CHANNEL, STRUCTURE.	5199	1
54	65-58614-48	. .	CHANNEL, STRUCTURE.	5199	1
55	65-58614-49	. .	PANEL	5199	1
56	MS20470D6	. .	ATTACHING PARTS RIVET	5199	4
57	MS20470D3	. .	RIVET	5199	24
58	65-58614-73	. .	ANGLE, STRUCTURE.	5199	1
59	65-58614-74	. .	ANGLE, STRUCTURE.	5199	1
60	65-58614-23	. .	ANGLE, STRUCTURE.	5199	1
61	65-58614-24	. .	ANGLE, STRUCTURE.	5199	1
	MS20426D5	. .	ATTACHING PARTS RIVET	5199	8
62	65-58614-25	. .	ANGLE, STRUCTURE.	5199	1
63	65-58614-26	. .	ANGLE, STRUCTURE.	5199	1
	AN3-7P	. .	ATTACHING PARTS BOLT.	5199	10
64	65-58614-20	. .	SUPPORT ASSY.	5199	1
65	65-58614-12	. .	SUPPORT ASSY.	5199	1
	MS20470D4	. .	ATTACHING PARTS RIVET	5199	7
66	66-5365-5	. .	BRACKET, ELECTRICAL RACK SUPPORT.	5199	1
67	66-5365-6	. .	BRACKET, ELECTRICAL RACK SUPPORT.	5199	1
68	MS20470D6	. .	ATTACHING PARTS RIVET	5199	2
69	MS20470D8	. .	RIVET	5199	2
70	BACS12B3-7	. .	SCREW	5199	2
71	NAS679A3W	. .	NUT	5199	2
72	65-59880-4	. .	SHELF ASSY, ELECTRONIC.	5199	1
73	BACS12CB3-9	. .	ATTACHING PARTS SCREW	5199	4
74	BACS12CB3-10	. .	SCREW	5199	2
75	AN960D10	. .	WASHER.	5199	10
76	NAS679A3W	. .	NUT	5199	4
77	65-59880-2	. .	SEAL, RUBBER.	5199	1
78	65-59491-8	. .	PLENUM.	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

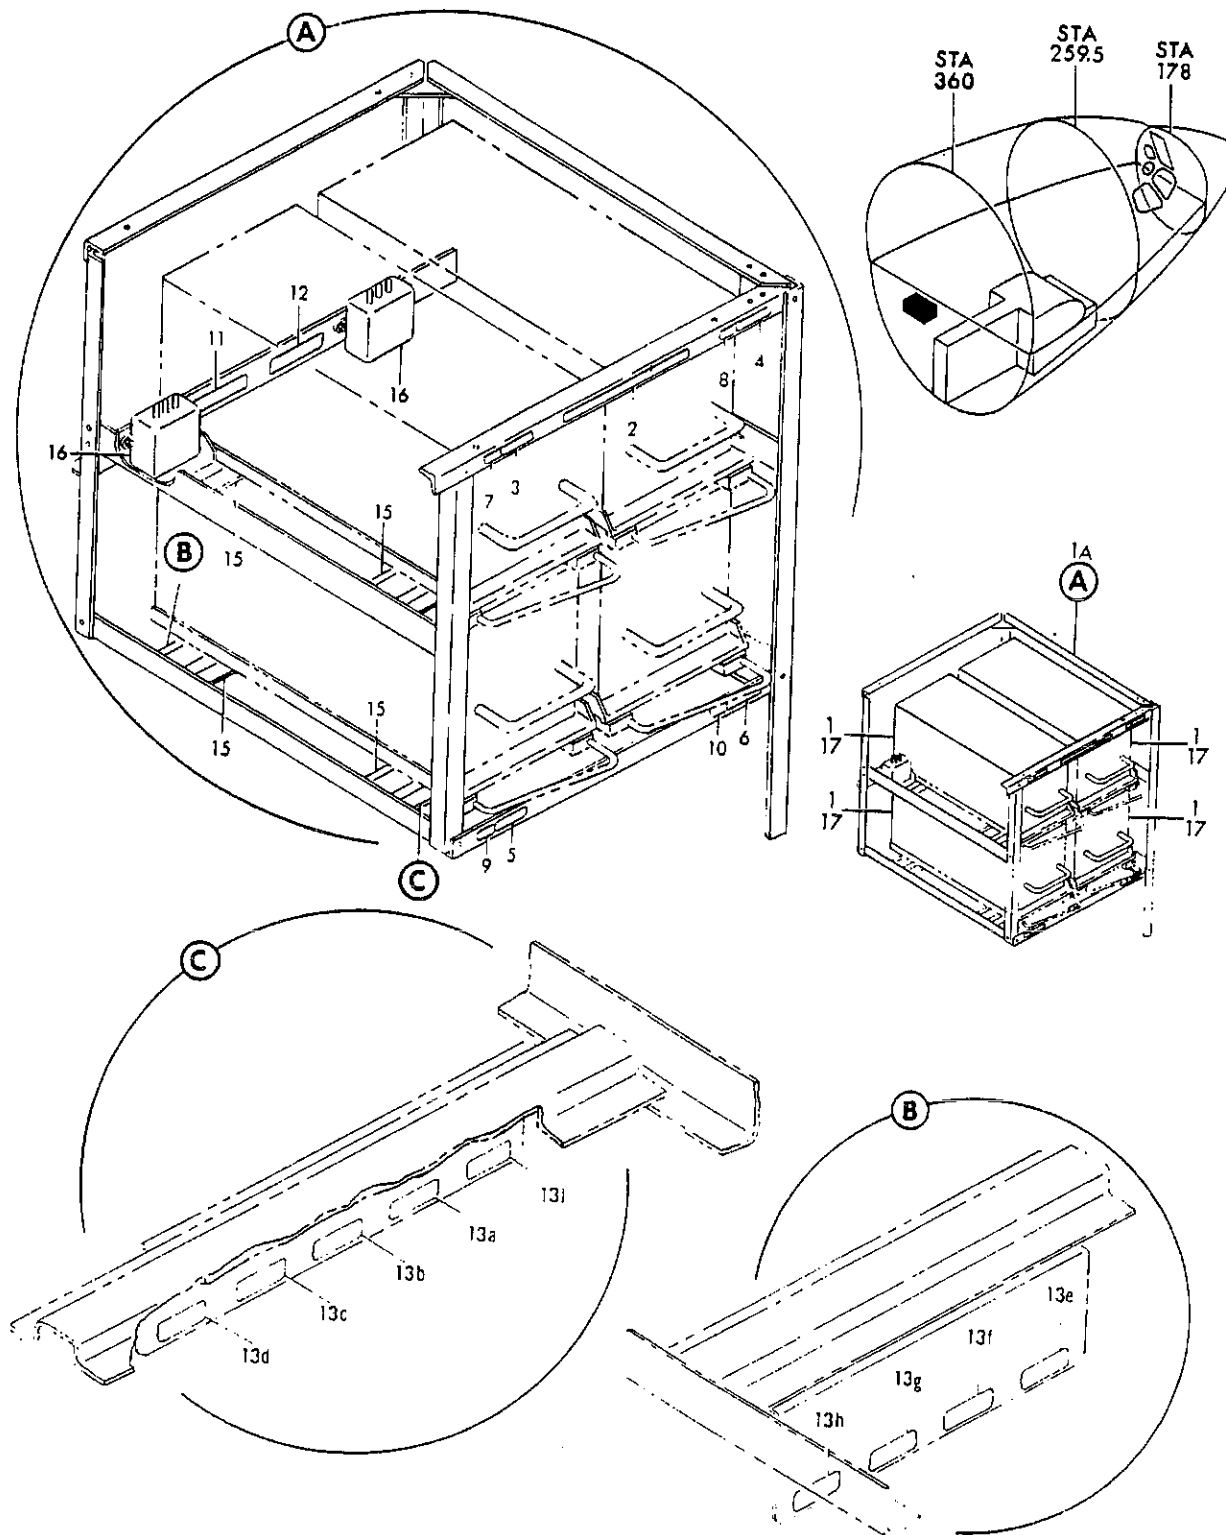


FIGURE 4. RACK INSTL, STATION 352 J25 CONTROL PANELS

BOEING
Intercontinental
777
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
4	65-58625-1		RACK INSTL, STATION 352 J25 CONTROL PANEL (VARIABLE . . . DWG:65-58625-5001) (SEE 24-3, FIG. 1A, ITEM 75, 24-3, FIG. 1B, ITEM 67 AND 24-3, FIG. 1C, ITEM 64)	5199	RF
1	10-3324-19		. PANEL ASSY, AC GENERATOR SYSTEM 30KVA CONTROL	5199	4
1A	65-58625-2		. RACK ASSY	5199	1
2	BAC27CEE174		. . MARKER-ALUMINUM FOIL, J25 GENERATOR CONTROL PANELS	5199	1
3	BACM10P10-9PD		. . MARKER-ALUMINUM FOIL, CONTROL PANEL NO. 1	5199	1
4	BACM10P10-9PE		. . MARKER-ALUMINUM FOIL, CONTROL PANEL NO. 2	5199	1
5	BACM10P10-9PF		. . MARKER-ALUMINUM FOIL, CONTROL PANEL NO. 3	5199	1
6	BACM10P10-9PG		. . MARKER-ALUMINUM FOIL, CONTROL PANEL NO. 4	5199	1
7	BACM9G5A		. . MARKER-ALUMINUM FOIL, G2.	5199	1
8	BACM9G5B		. . MARKER-ALUMINUM FOIL, G3.	5199	1
9	BACM9G5C		. . MARKER-ALUMINUM FOIL, G4.	5199	1
10	BACM9G5D		. . MARKER-ALUMINUM FOIL, G5.	5199	1
11	65-58625-18		. . MARKER-ALUMINUM FOIL, M222 NOISE FILTER GEN 1 AND 3 (ALTERED FROM; BACM9F4K)	5199	1
12	65-58625-19		. . MARKER-ALUMINUM FOIL, M223 NOISE FILTER GEN 2 AND 4 (ALTERED FROM; BACM9F4L)	5199	1
13A	BAC27CEE241		. . DECAL, J25-B.	5199	1
13B	BAC27CEE242		. . DECAL, J25-C.	5199	1
13C	BAC27CEE243		. . DECAL, J25-D.	5199	1
13D	BAC27CEE244		. . DECAL, J25-E.	5199	1
13E	BAC27CEE245		. . DECAL, J25-F.	5199	1
13F	BAC27CEE246		. . DECAL, J25-G.	5199	1
13G	BAC27CEE247		. . DECAL, J25-H.	5199	1
13H	BAC27CEE248		. . DECAL, J25-J.	5199	1
13J	BAC27CEE240		. . DECAL, J25-A.	5199	1
15	69-45641-1		. . SUPPORT, J25 ELECTRICAL EQUIPMENT	5199	4
16	DYR6110		. . CAPACITOR, (V14655) (OPTIONAL TO AND REPLACEMENT FOR CP53B4EF105V1 (V56289))	5199	2
16	CP53B4EF105V		. . CAPACITOR, (V56289) (OPTIONAL TO AND REPLACEMENT FOR CP53B4EF105V1 (V56289))	5199	2
16	CP53B4EF105V1		. . CAPACITOR, (V56289) (OPTIONAL AND FOR REPLACEMENT ORDER DYR6110 (V14655)), CP53B4EF105V (V56289))	5199	2
	BACSL2B08-6		ATTACHING PARTS . . SCREW	5199	4
			-----*		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 09
ELECTRONIC RACK

BOEING
707
PARTS CATALOG (MAINTENANCE)

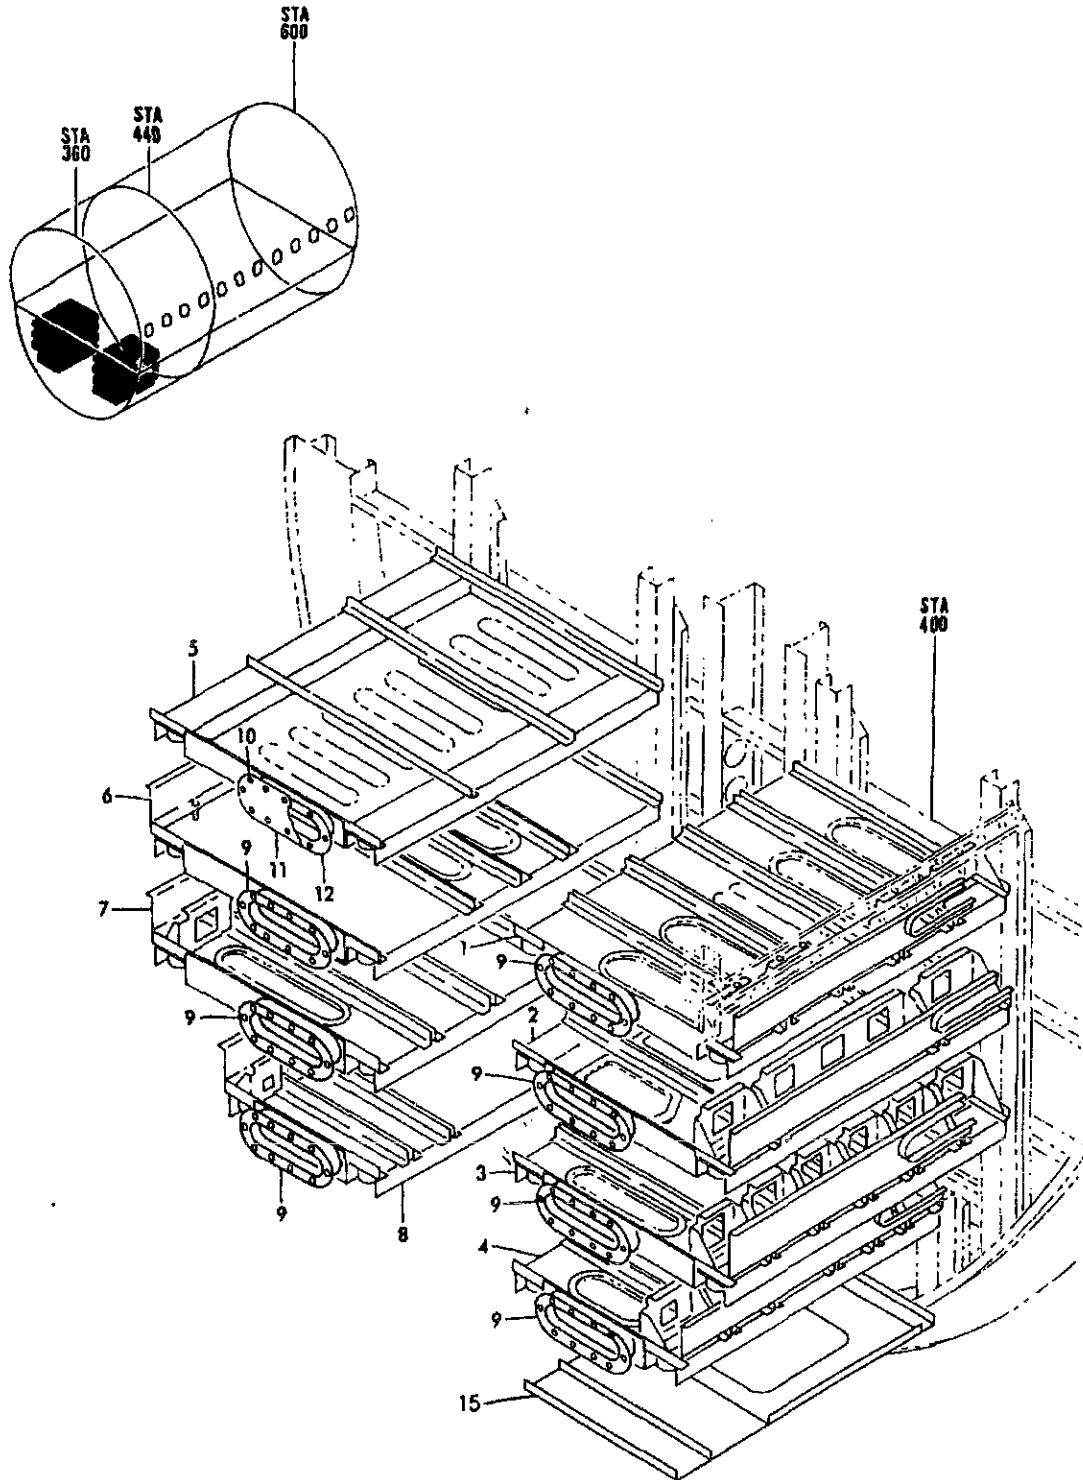


FIGURE 1B. SHELF INSTL, ELECTRONIC RACK

A 2409001B REV 272

DETAILED PARTS LIST
24-09-18
PAGE 0

24-09-18

NOV 21/01

BOEING

707

PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	18	65-2152-19		SHELF INSTL, ELECTRONIC RAC (DELETED BY RAF MOD 7211.019-4) (SEE 24-3, FIG. 6D ITEM 23)	0150	RF
R		391-25-50-74130-001		SHELF INSTL, LH ELECTRONIC RACK (VZ0031) (65-2152-19.. MODIFIED BY RAF MOD 7211.019-4) (SEE 24-3, FIG. 6D)	0203	RF
R		391-25-50-74130-003		SHELF INSTL, LH ELECTRONIC RACK (VZ0031) (65-2152-19.. MODIFIED BY RAF MOD 7211.019-4) (SEE 24-3, FIG. 6D)	0101	RF
R		391-25-50-74130-005		SHELF INSTL, RH ELECTRONIC RACK (VZ0031) (65-2152-19.. MODIFIED BY RAF MOD 7211.019-4) (SEE 24-3, FIG. 6D)	0450	RF
R	1	65-18711-3		. SHELF ASSY, SHELF NO. 1 LH SIDE HF EQUIPMENT. COMMUNICATIONS, (SEE 23-4, FIG. 34 AND 34A) ELECTRICAL POWER, (SEE FIG. 5, 5A, 6, 7, 8A, 8E . . AND 8M)	0150 0150 0150	1
R	2	65-18711-8		. SHELF ASSY, NO. 2 LH SIDE HF EQUIPMENT. (DELETED BY RAF MOD 7211.019-4) . . COMMUNICATIONS, (SEE 23-4, FIG. 34 AND 34A) ELECTRICAL POWER, (SEE FIG. 5A, 8A, 12, 14, 14A AND 15A, 15D)	0150 0150 0150	1
R	2	391-25-50-17017-001		. SHELF ASSY, LH RACK ASSY SHELF NO. 2 (VZ0031) (65-18711-8 MODIFIED BY RAF MOD 7211.019-4) . . COMMUNICATIONS, (SEE 23-04, FIG. 34). ELECTRICAL POWER, (SEE 24-09, FIG. 14A)	0203 0203 0203	1
R	2	391-25-50-74470-001		. SHELF ASSY, LH RACK SHELF NO. 2 (VZ0031). (65-18711-8 MODIFIED BY RAF MOD 7211.019-4) . . COMMUNICATIONS, (SEE 23-04, FIG. 34). ELECTRICAL POWER, (SEE 24-09, FIG. 14A)	0101 0450 0101 0450 0101 0450	1
R	3	391-25-50-74131-001		. SHELF ASSY, AUTOPILOT EQUIPMENT (SHELF NO. 3 LH). . . MODIFIED BY RAF MOD 7211.019-4) (SEE 24-09, FIG. 17A)	0150	1
R	3	391-25-50-74131-001		. SHELF ASSY, LH RACK SHELF NO. 3 (VZ0031) (65-18713-4 MODIFIED BY RAF MOD 7211.019-4) (SEE 24-09, FIG. 17A)	0150	1
R	4	65-18714-33		. SHELF ASSY, COMMUNICATION EQUIPMENT (SHELF NO. 4 LH) (DELETED BY RAF MOD 7211.019-4) (SEE FIG. 29G)	0150	1
R	4	391-25-50-74132-001		. SHELF ASSY, LH RACK SHELF NO. 4 (VZ0031) (65-18714-33 MODIFIED BY RAF MOD 7211.019-4) (SEE FIG. 29G)	0150	1
R	5	65-18715-3		. SHELF ASSY, DOPPLER EQUIPMENT (SHELF NO. 1 RH). . . . (DELETED BY RAF MOD 7211.019-194) (SEE FIG. 37)	0150	1
R	5	65-18715-3		. SHELF ASSY, NO. 1 RH (ADDED AND REWORKED BY RAF . . . MOD 7211.019-488 AND DELETED BY RAF MOD 7211.019-4) (SEE FIG. 31D)	0150	1
R	5	391-25-50-74127-001		. SHELF ASSY, RH RACK SHELF NO. 1 (VZ0031) (ADDED BY. . RAF MOD 7211.019-4) (SEE FIG. 37D)	0150	1
R	6	65-18716-17		. SHELF ASSY, SHELF NO. 2 RH NAVIGATION EQUIPMENT (SEE FIG. 51G)	0150	1
R	7	65-18717-13		. SHELF ASSY, SHELF NO. 3 RH NAVIGATION EQUIPMENT . . . (DELETED BY RAF MOD 7211.019-4) . . COMMUNICATIONS, (SEE 23-4, FIG. 38, 39, 41 AND 42) . . ELECTRICAL POWER, (SEE FIG. 57, 58, 61, 62, 62A, . . 62B AND 62C)	0150 0150 0150	1
R	7	391-25-50-74128-001		. SHELF ASSY, RH RACK SHELF NO. 3 (VZ0031) (65-18717-17 MODIFIED BY RAF MOD 7211.019-4) . . COMMUNICATIONS, (SEE 23-04, FI G. 39) ELECTRICAL POWER, (SEE 24-09, FIG. 62B)	0150 0150 0150	1
R	8	65-18718-15		. SHELF ASSY, FLIGHT INSTRUMENT EQUIPMENT (SHELF NO. 4 RH) (DELETED BY RAF MOD 7211.019-4) (SEE FIG. 73C)	0150	1
R	8	391-25-50-74129-001		. SHELF ASSY, RH RACK SHELF NO. 4 (VZ0031) (65-18718-15 MODIFIED BY RAF MOD 7211.019-4) (SEE 24-09, FIG. 73C)	0150	1
R		MS35297-6		ATTACHING PARTS		
R		MS35340-25		. SCREW WASHER.	0150 0150	32 32
R	9	66-1859		. RETAINER, AIR SEAL. ATTACHING PARTS	0150	7
R		NAS1303-2		. BOLT. (OPTIONAL BACS12CB3-7)	0150	70
R		BACS12CB3-7		. BOLT. (OPTIONAL TO NAS1303-2)	0150	70
R	10	NAS1303-2		. BOLT. (OPTIONAL BACS12CB3-7)	0150	10
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R	1B 10	BAC512C83-7	.	BOLT.	0150	10
	12	66-1859	.	(OPTIONAL TO NAS1303-2)		
	15	391-15-50-74134-001	.	RETAINER, AIR SEAL.	0150	1
			.	SHELF ASSY, SHELF NO. 5 (VZ001) (ADDED BY RAF MOD	0103	1
				7211.019-4)		
	15	391-15-50-74134-003	.	SHELF ASSY, SHELF NO. 5 (VZ0031) (ADDED BY RAF MOD.	0450	1
				7211.019-4) (SEE 34-08, FIG. 18A)		
				ATTACHING PARTS		
		NAS1096-3-6	.	SCREW	0150	4
		MS21042-3	.	NUT	0150	4
				-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

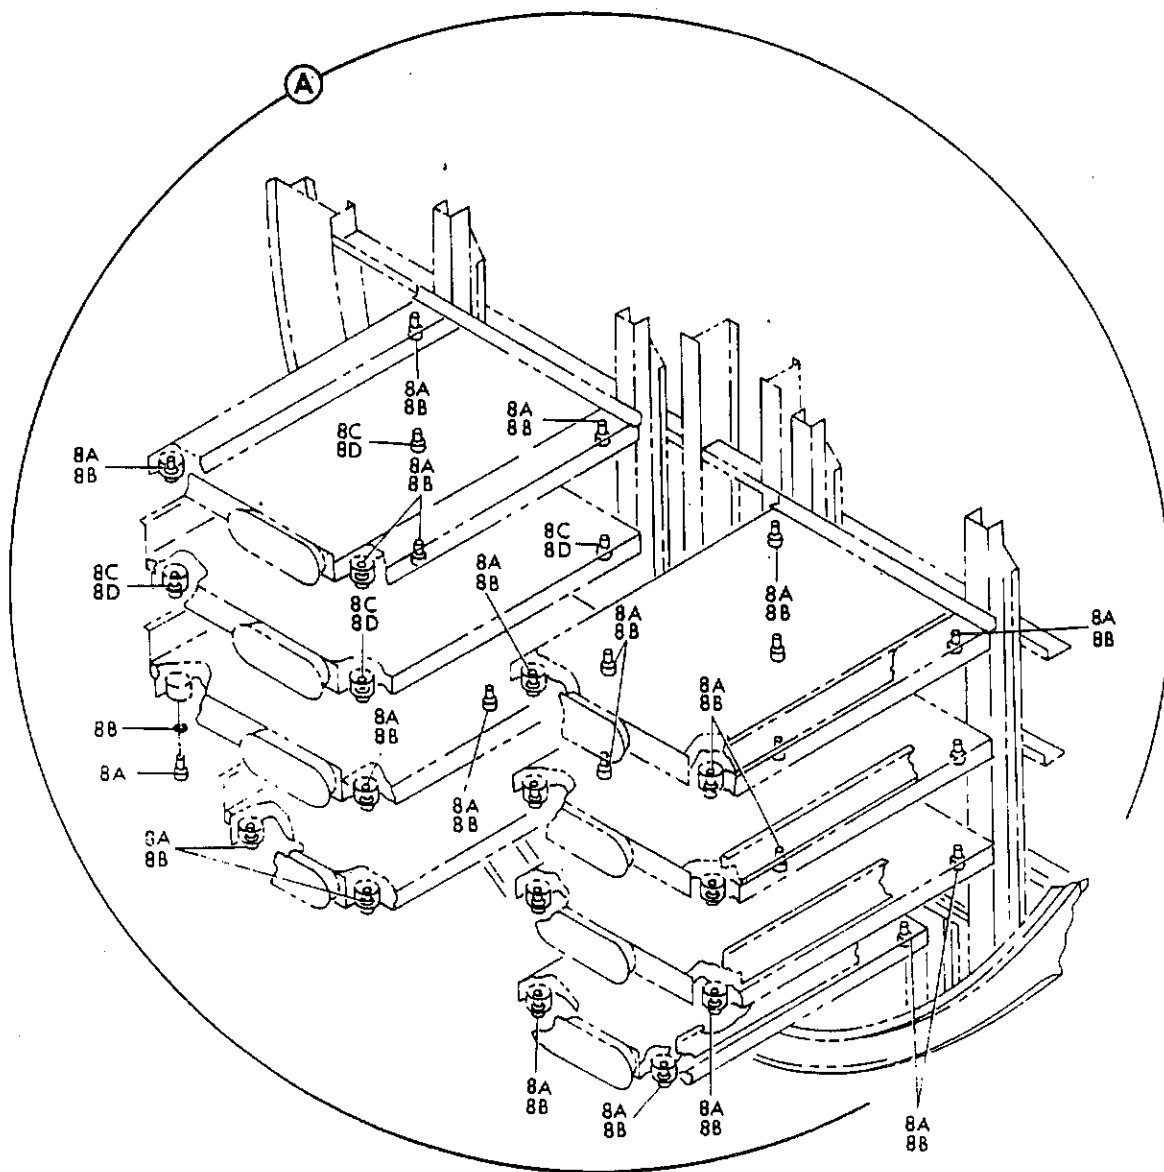


FIGURE 10. SHELF INSTL. ELECTRONIC RACK-SHEET 2



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
10	65-2152-47	SHELF INSTL, ELECTRONIC RACK (VARIABLE. DWG:65-2152-5015) (SEE 24-3, FIG. 6B, ITEM 19 AND 24-3, FIG. 6F, ITEM 19)							5151	RF
	65-2152-105	. SHELF INSTL, LH							5199	1
	65-2152-126	. SHELF INSTL, RH							5151	1
1	65-18711-40	. . SHELF ASSY, SHELF NO. 1 LH SIDE HF EQUIPMENT (SEE FIG. 8G)							5199	1
2	65-18711-23	. . SHELF ASSY, SHELF NO. 2 LH SIDE HF EQUIPMENT. COMMUNICATIONS, (SEE 23-4, FIG. 34 AND 34A) ELECTRICAL POWER, (SEE FIG. 8J, 14, 15A, 15G, 15M AND 15T)							5199 5199 5199	1
3	65-18713-4	. . SHELF ASSY, AUTOPILOT EQUIPMENT (SHELF NO. 3 LH). COMMUNICATIONS, (SEE 23-4, FIG. 40) ELECTRICAL POWER, (SEE FIG. 17 AND 17A)							5199 5199 5199	1
4	65-18714-32	. . SHELF ASSY, COMMUNICATION EQUIPMENT (SHELF NO. 4. LH) (SEE FIG. 29F)							5199	1
6	65-1775	. . SHELF ASSY, SHELF NO. 2 RH SIDE (SEE FIG. 30) . . .							5199	1
7	65-18717-42	. . SHELF ASSY, SHELF NO. 3 RH NAVIGATION EQUIPMENT . . (SEE FIG. 62N)							5199	1
8	65-18718-54	. . SHELF ASSY, FLIGHT INSTRUMENT EQUIPMENT (SHELF NO. 4 RH) (SEE FIG. 63B)							5151	1
8	65-18718-61	. . SHELF ASSY, FLIGHT INSTRUMENT EQUIPMENT (SHELF NO. 4 RH) (SEE FIG. 63C)							5299	1
		ATTACHING PARTS								
8A	MS35297-6	. . SCREW							5199	28
8B	MS35340-25	. . WASHER.							5199	28
		-----*								
9	66-1859	. . RETAINER, AIR SEAL.							5199	7
	NAS1303-2	. . BOLT. (OPTIONAL BACS12CB3-7)							5199	70
	BACS12CB3-7	. . BOLT. (OPTIONAL TO NAS1303-2)							5199	70
		-----*								
11A	66-1860	. . COVER, SHELF END DUCT							5199	1
12	66-1859	. . RETAINER, AIR SEAL.							5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

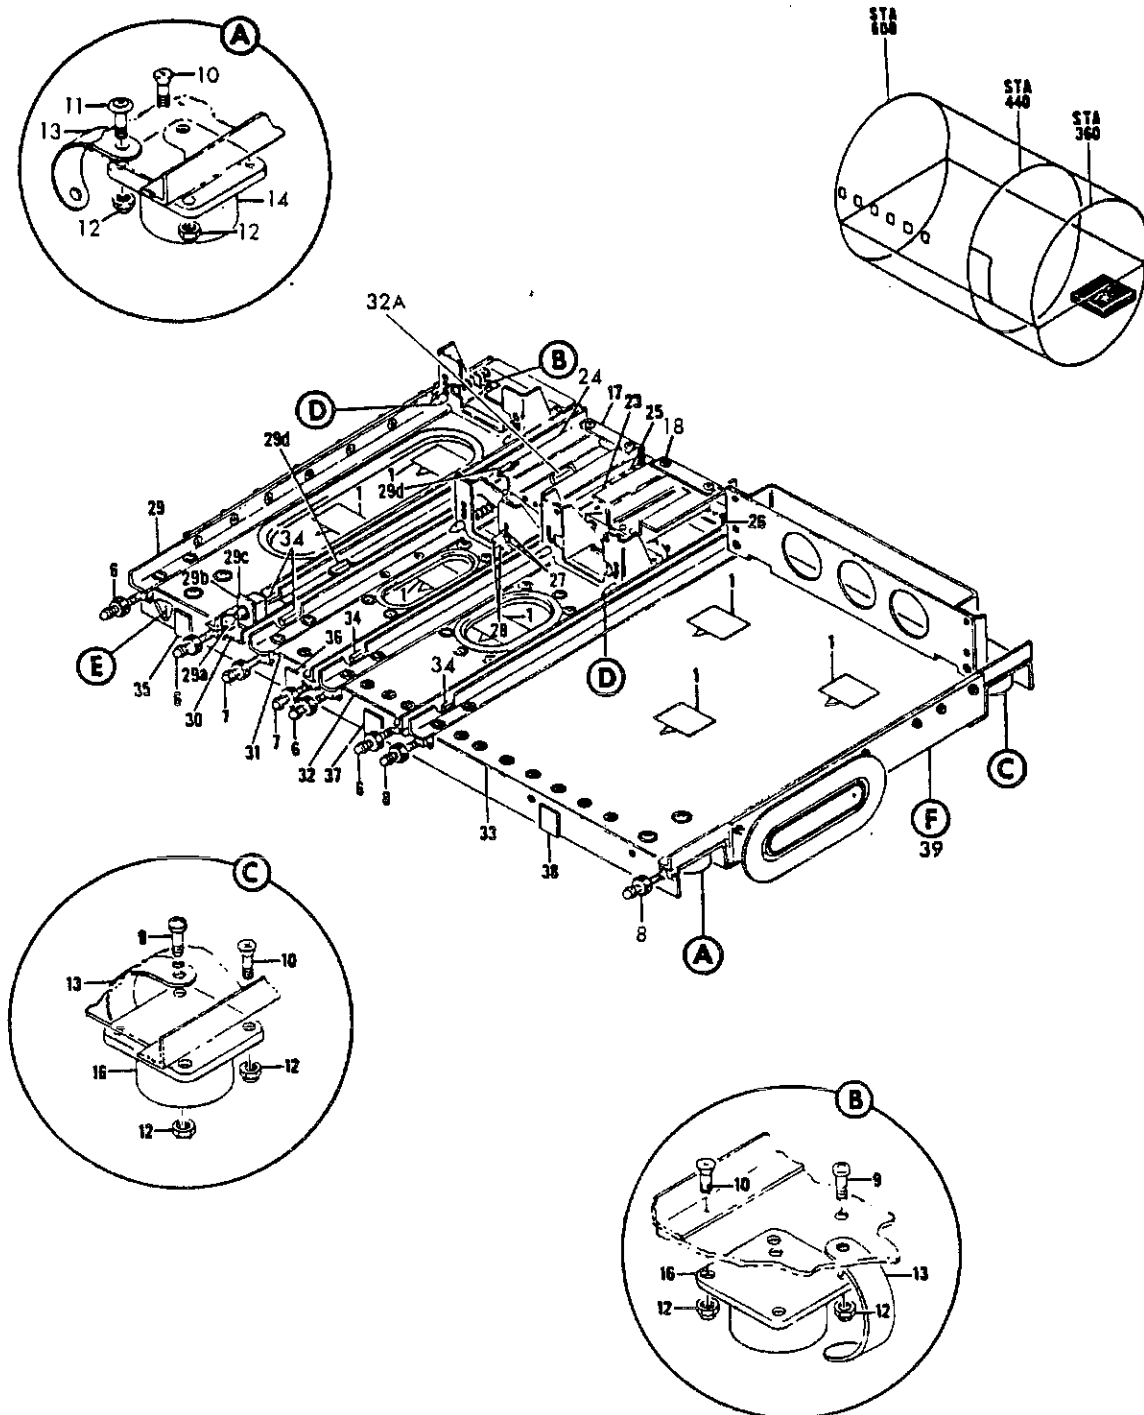


FIGURE 7. SHELF ASSY, SHELF NO. 1 LH SIDE ELECTRONIC RACK EQUIPMENT (ELECTRICAL POWER ONLY) (SHEET)

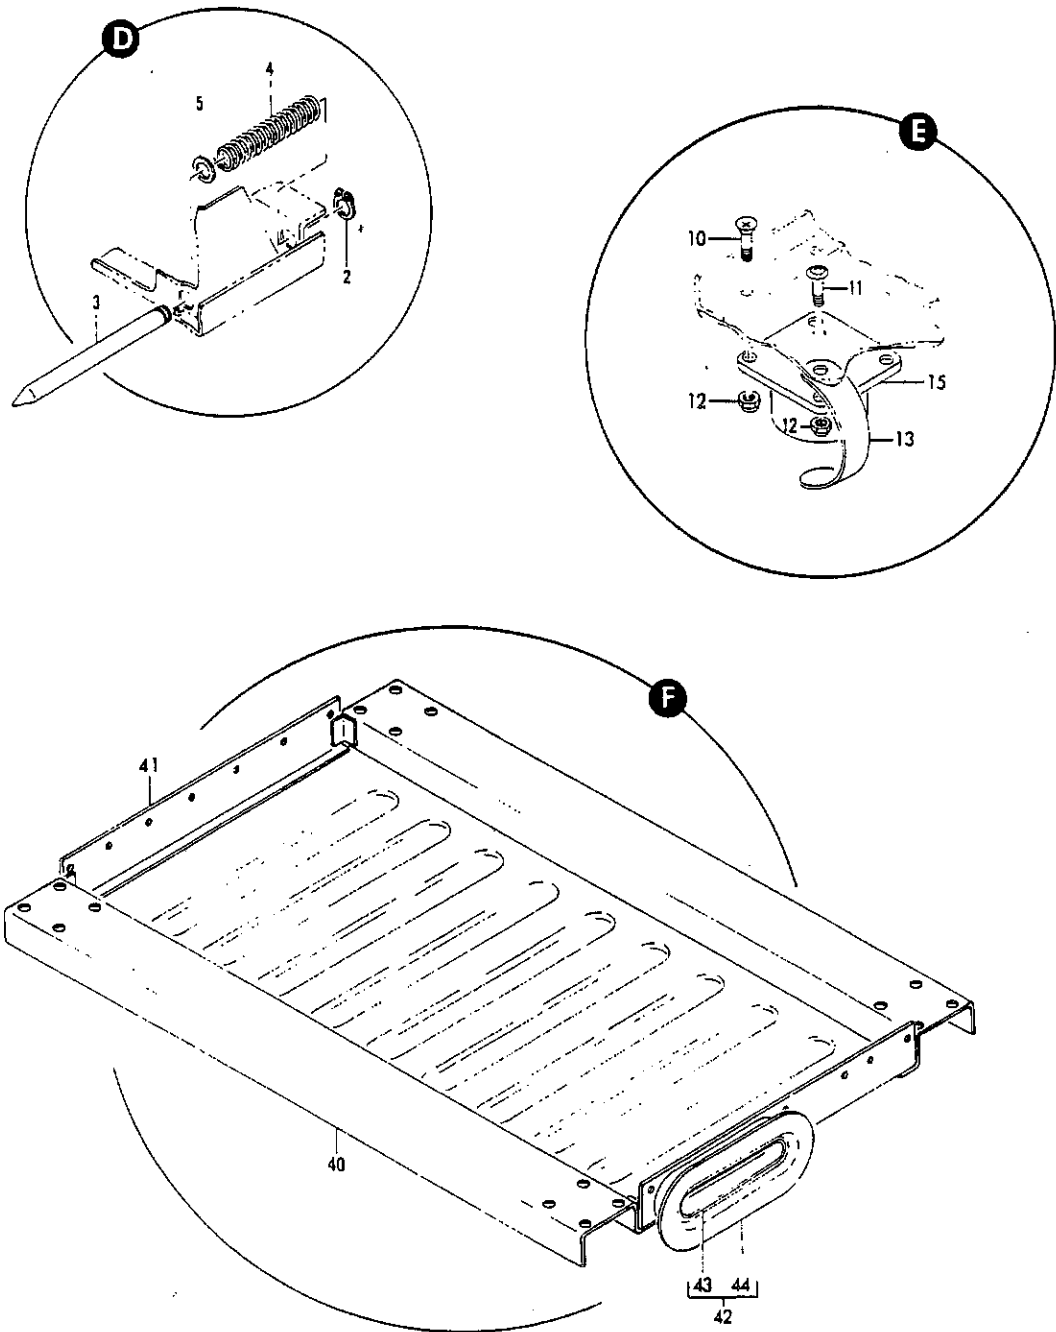


FIGURE 7. SHELF ASSY, SHELF NO. 1 LH SIDE ELECTRONIC RACK
HF EQUIPMENT (ELECTRICAL POWER ONLY) (SHEET 2)

NOV 21/90

24-09-7

DETAILED PARTS LIST
24-09-7
PAGE 1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF	UNITS
				FROM TO	PER ASSY
R R	7		ATTACHING PARTS		
	NAS603-10		. SCREW	0150	1
R R	31	65-18719-5	. NUT	0150	1
			. TRAY ASSY, ELECTRONIC RACK 3/8 ATR SHORT ON LONG. . .	0150	1
R R			EQUIPMENT MOUNTING (SEE FIG. 82)		
			ATTACHING PARTS		
R R		NAS603-10	. SCREW	0150	1
		NAS514P1032-10	. SCREW	0150	4
R R		NAS514P632-5	. SCREW	0150	1
		BACW10AL1	. WASHER.	0150	1
R R		NAS679A3W	. NUT	0150	5
		NAS679A06W	. NUT	0150	1
R R	32	65-18719-11	. TRAY ASSY, ELECTRONIC RACK 1/2 ATR SHORT ON LONG HF .	0150	1
			EQUIPMENT MOUNTING (SEE FIG. 89)		
R R			ATTACHING PARTS		
		NAS603-10	. SCREW	0150	2
R R		NAS514P1032-10	. SCREW	0150	4
		NAS514P632-5	. SCREW	0150	3
R R		BACW10AL1	. WASHER.	0150	3
		NAS679A3W	. NUT	0150	6
R R		NAS679A06W	. NUT	0150	3
R R	33	65-18719-18	. TRAY ASSY, ELECTRONIC RACK 1-1/2 ATR LONG COLLINS HF	0150	1
			EQUIPMENT MOUNTING (SEE FIG. 103)		
R R	33	65-18719-63	(OPTIONAL 65-18719-63)		
			. TRAY ASSY, ELECTRONIC RACK 1-1/2 ATR LONG COLLINS HF	0150	1
R R			EQUIPMENT MOUNTING (SEE FIG. 103)		
			(OPTIONAL TO 65-18719-18)		
R R			ATTACHING PARTS		
		MS20470D4	. RIVET	0150	4
R R		NAS514P1032-10	. SCREW	0150	4
		NAS601-6	. SCREW	0150	4
R R		NAS514P632-5	. SCREW	0150	12
		BACW10AL1	. WASHER.	0150	7
R R		NAS679A3W	. NUT	0150	4
		NAS679A06W	. NUT	0150	16
R R	34	66-1383-2	. SEAL, ELECTRONIC SHELF UNIT TRAY.	0150	4
			(OPTIONAL 66-1383)		
R R	34	66-1383	. SEAL, UNIT TRAY	0150	4
			(OPTIONAL TO 66-1383-2)		
R R	35	65-1945-9	. PLATE, ELECTRONIC EQUIPMENT IDENTIFICATION.	0150	1
	36	65-1945-24	. PLATE, ELECTRONIC EQUIPMENT IDENTIFICATION.	0150	1
R R	37	65-1945-3	. PLATE, ELECTRONIC EQUIPMENT IDENTIFICATION.	0150	1
	38	65-1945-66	. PLATE, ELECTRONIC EQUIPMENT IDENTIFICATION.	0150	1
R R			ATTACHING PARTS		
		NAS600-6	. SCREW	0150	8
R R		NAS679A06W	. NUT	0150	8
R R	39	65-5207-1	. SUPPORT ASSY, EQUIPMENT MOUNTING LONG LH TRAY	0150	1
	40	65-1649	. . SHELF ASSY, ELECTRONIC RACK LONG.	0150	1
R R	41	69-1327-1	. . PANEL, ELECTRONIC SHELF LONG END.	0150	1
	42	69-1334-1	. . PANEL ASSY, DUCT ATTACHING SHELF END.	0150	1
R R	43	69-1334-5	. . . WELD ASSY, DUCT ATTACHING SHELF END PANEL LONG. .	0150	1
	44	66-1337	. . . SEAL, ELECTRONIC RACK SHELF END AIR	0150	1
			. FOR REFERENCE TO OTHER SHELF DETAILS, SEE NHA	0150	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

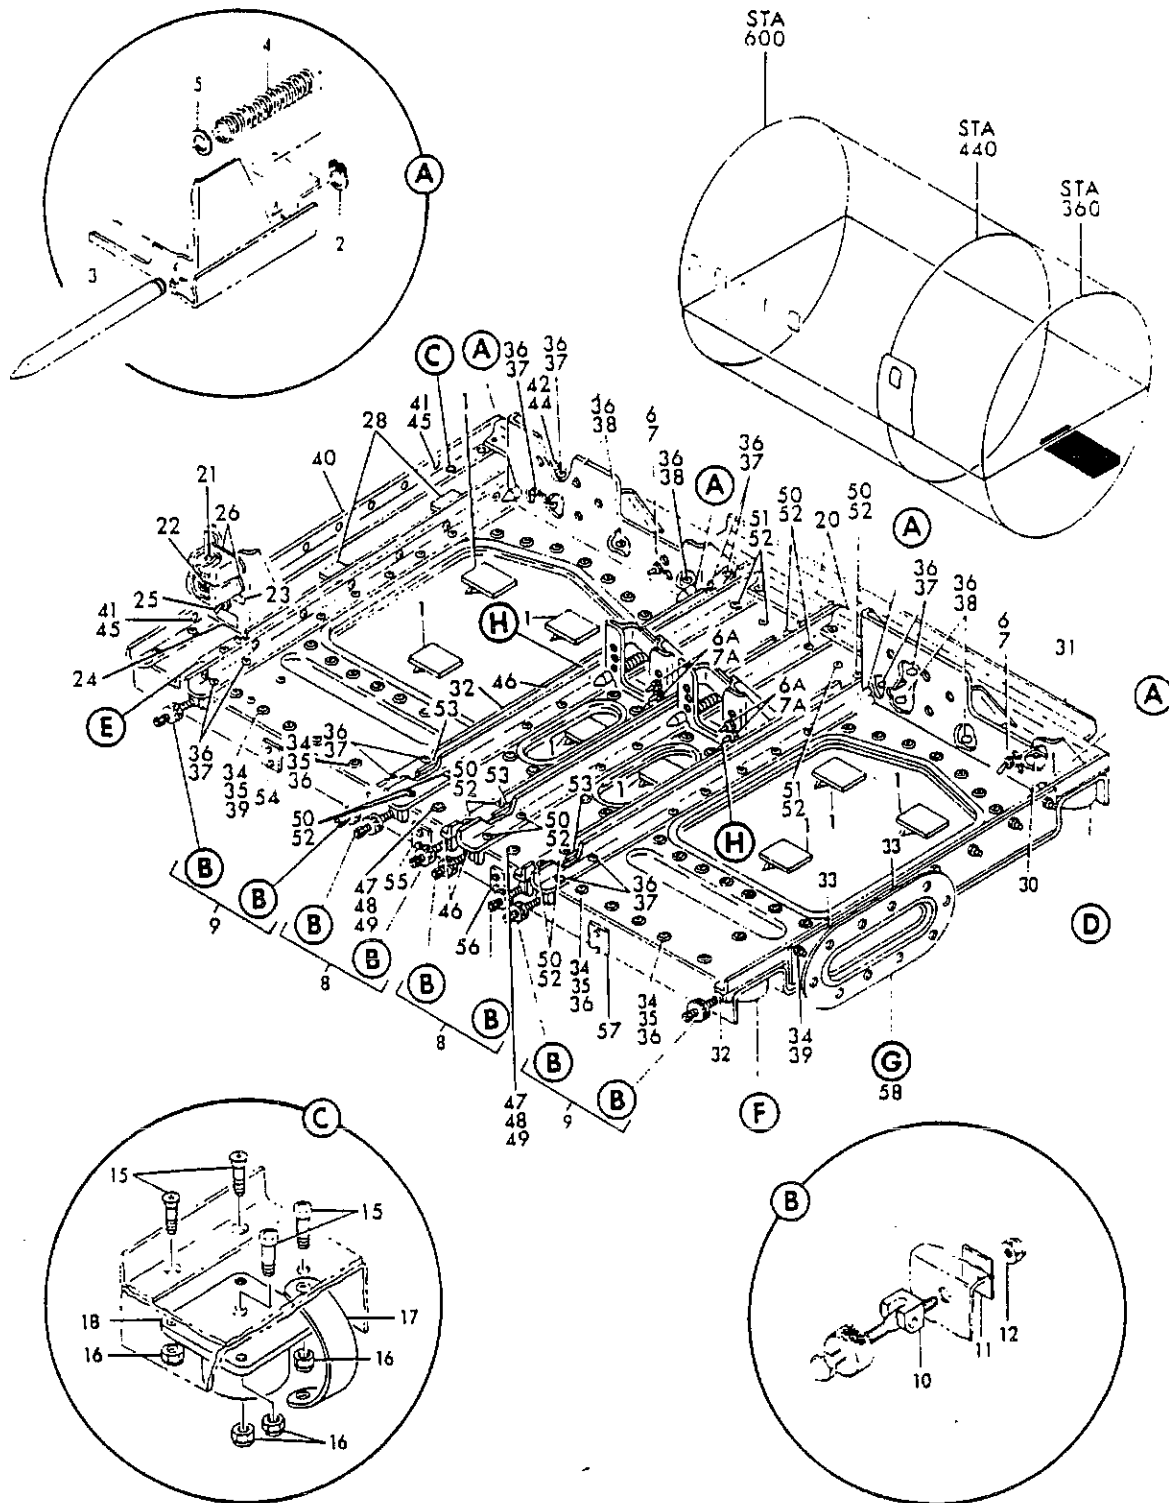


FIGURE 8G. SHELF ASSY, SHELF NO. 1 LH ELECTRONIC RACK HF EQUIPMENT (ELECTRICAL POWER ONLY) (SHEET 1)

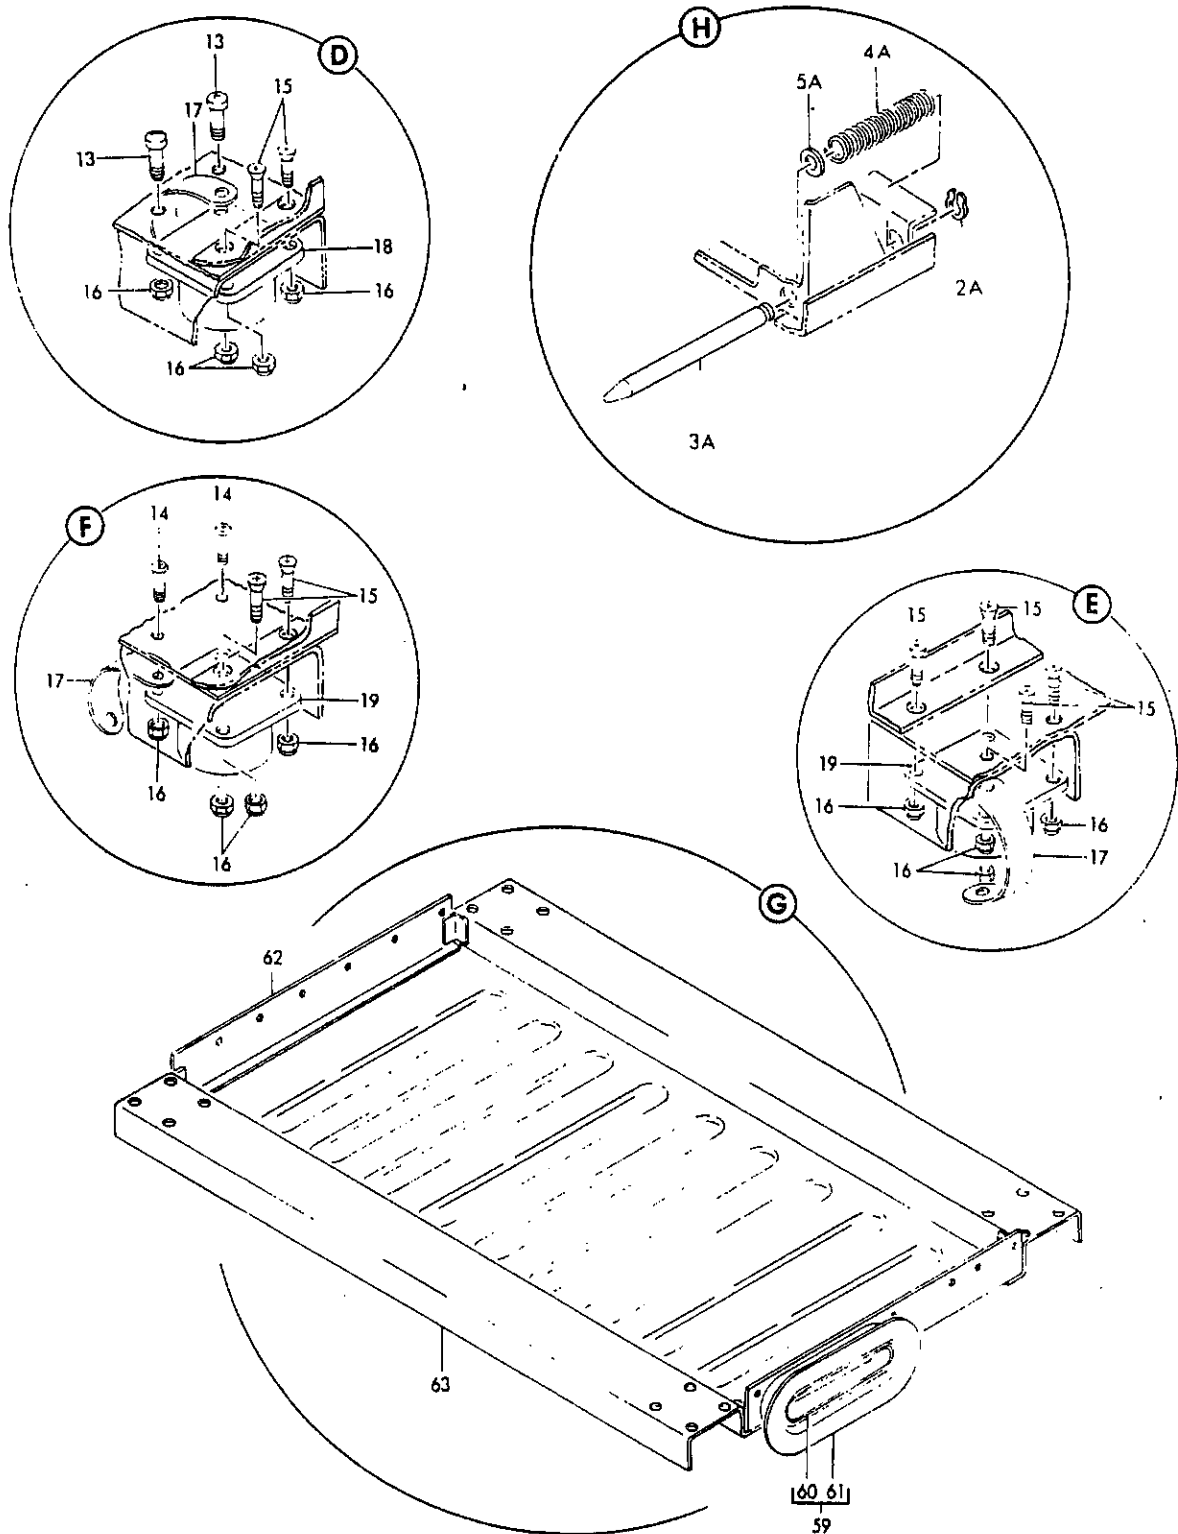


FIGURE 8G. SHELF ASSY, SHELF NO. 1 LH ELECTRONIC RACK HF EQUIPMENT (ELECTRICAL POWER ONLY) (SHEET 2)

NOV 21/90

24-09-80

DETAILED PARTS LIST
24-09-80
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8G	65-18711-40	SHELF ASSY, SHELF NO. 1 LH ELECTRONIC RACK HF EQUIPMENT (SEE FIG. 1D, ITEM 1)	5199	RF
1	66-12450-1	• PLATE, COOLING AIR ORIFICE COVER.	5199	8
2	NAS670-25	• RING.	5199	4
3	69-14507-2	• PIN, HOLD DOWN.	5199	4
4	63-1350	• SPRING, UNIT HOLD DOWN PIN COMPRESSION.	5199	4
5	NAS620-416	• WASHER.	5199	4
6A	NAS679A06W	• NUT.	5199	4
7A	66-1398-4	• PIN, UNIT INDEX.	5199	4
8	65-5270-1	• HOLD DOWN INSTL, 3/8 ATR CASE FRONT.	5199	2
9	65-5270-4	• HOLD DOWN INSTL, 1 ATR CASE FRONT.	5199	2
10	121366-707	• BOLT ASSY, (V30528) (OPTIONAL 66-1390 FIG. 106)	5199	2
10	66-1390	• BOLT ASSY, (SEE FIG. 106) (OPTIONAL TO 121366-707 (V30528))	5199	2
		ATTACHING PARTS		
11	66-1387	• FILLER, EXTRUDED.	5199	2
12	BACN108Y53	• NUT.	5199	2
		-----*		
13	BACS12CB3-10	• SCREW.	5199	2
14	BACS12N10-10	• SCREW ASSY.	5199	2
15	NAS514P1032-10	• SCREW.	5199	12
16	NAS679A3W	• NUT.	5199	16
17	66-1650	• STRAP, BONDING.	5199	4
18	BACS14E400B	• SHOCKMOUNT.	5199	2
19	BACS14E500B	• SHOCKMOUNT.	5199	2
20	69-15310-2	• BRACKET, RADIO WIRE SUPPORT.	5199	2
		ATTACHING PARTS		
	BACS12CB3-10	• SCREW.	5199	4
	66-2955-3	• WASHER, SPECIAL REPAIR.	5199	4
	NAS679A3W	• NUT.	5199	4
		-----*		
21	BAC27CEE311	• DECAL, RR-25.	5199	1
22	BAC27CEE310	• DECAL, RR-24.	5199	1
23	BAC27CEE312	• DECAL, RS-233.	5199	1
24	BACM9L10-10CH	• SCOTCH-CAL, HF RETUNE 2 1.	5199	1
25	MS35059-27	• SWITCH.	5199	1
26	9220-3591	• RELAY, (V35344).	5199	2
27	69-14501-10	• BRACKET ASSY, 1/4 ATR UNIT ELECTRICAL CONNECTOR.	5199	1
	65-51790-5	• SUPPORT INSTL, DISCONNECT.	5199	1
30	BACM9L14G	• SCOTCH-CAL, L1-9 THRU L1-1.	5199	1
31	65-51789-7	• SUPPORT ASSY.	5199	1
32	65-18719-45	• TRAY ASSY, 1 ATR DPE LONG ON LONG HF MOUNTING (SEE FIG. 98A)	5199	2
		ATTACHING PARTS		
33	MS20426B4	• RIVET.	5199	4
34	NAS514P632-5	• SCREW.	5199	14
35	BACW10AL1	• WASHER.	5199	9
36	NAS679A3W	• NUT.	5199	17
37	NAS514P1032-10	• SCREW.	5199	12
38	BACS12CB3-10	• SCREW.	5199	5
39	NAS679A06W	• NUT.	5199	14
		-----*		
40	69-1522-1	• COVER ASSY, 1/4 ATR.	5199	1
		ATTACHING PARTS		
41	NAS514P632-5	• SCREW.	5199	7
42	BACS12CB3-10	• SCREW.	5199	1
43	NAS514P1032-10	• SCREW.	5199	1
44	AN960PD10	• WASHER.	5199	1
45	NAS679A06W	• NUT.	5199	7
		-----*		
46	65-18719-5	• TRAY ASSY, 3/8 ATR SHORT ON LONG MOUNTING (SEE FIG. 82)	5199	2
		ATTACHING PARTS		
47	NAS514P632-5	• SCREW.	5199	2
48	BACW10AL1	• WASHER.	5199	2
49	NAS679A06W	• NUT.	5199	2
50	NAS514P1032-10	• SCREW.	5199	12
51	BACS12CB3-10	• SCREW.	5199	2
52	NAS679A3W	• NUT.	5199	14
		-----*		
53	66-1383-2	• SEAL, UNIT TRAY. (OPTIONAL 66-1383)	5199	4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

24-09-8G



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8G 53	66-1383		. SEAL, UNIT TRAY (OPTIONAL TO 66-1383-2)	5199	1
54	65-1945-67		. PLATE, IDENTIFICATION	5199	1
55	65-1945-25		. PLATE, IDENTIFICATION	5199	1
56	65-1945-24		. PLATE, IDENTIFICATION	5199	1
57	65-1945-66		. PLATE, IDENTIFICATION	5199	1
	BACS12CB04-6		ATTACHING PARTS		
	NAS679A04W		. SCREW	5199	8
			. NUT	5199	8
			-----*		
58	65-5207-1		. SUPPORT ASSY, MOUNTING LONG TRAY.	5199	1
59	69-1334-1		. . . PANEL ASSY, DUCT ATTACHING END.	5199	1
60	69-1334-5		. . . WELD ASSY	5199	1
61	66-1337		. . . SEAL, AIR	5199	1
62	69-1327-1		. . . PANEL, END.	5199	1
63	65-1649		. . . SHELF ASSY.	5199	1
64	65-87642-2		. TRAY ASSY, 1/4 ATR HF INTERLOCK RELAYS (SEE FIG. 748)	5199	1
			ATTACHING PARTS		
65	BACS12CB3-10		. SCREW	5199	1
66	NAS514P1032-10		. SCREW	5199	1
67	AN960PD10		. WASHER.	5199	1
			-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING
707
PARTS CATALOG (MAINTENANCE)

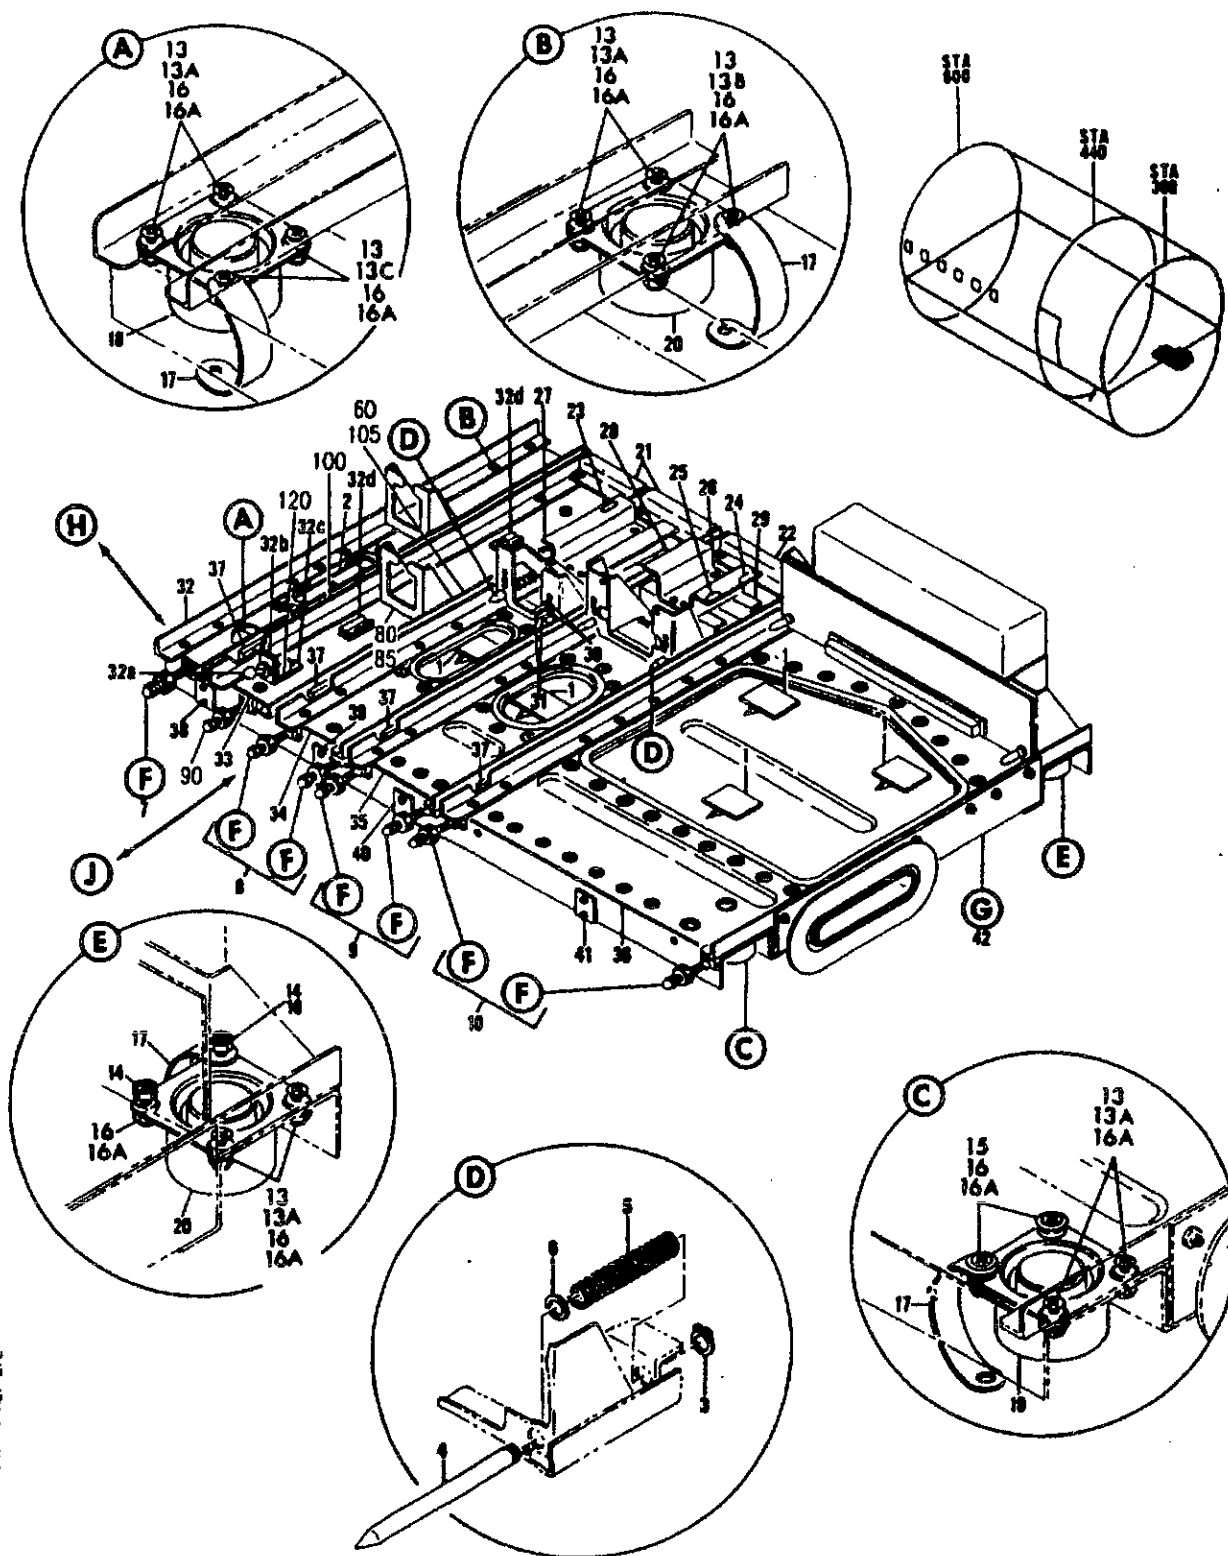


FIGURE 14A. SHELF ASSY, SHELF NO. 2 LH SIDE ELECTRONIC RACK HF EQUIPMENT (ELECTRICAL POWER ONLY) (SHEET 1)

DETAILED PARTS LIST
24-09-14A
PAGE 0

24-09-14A

NOV 21/01

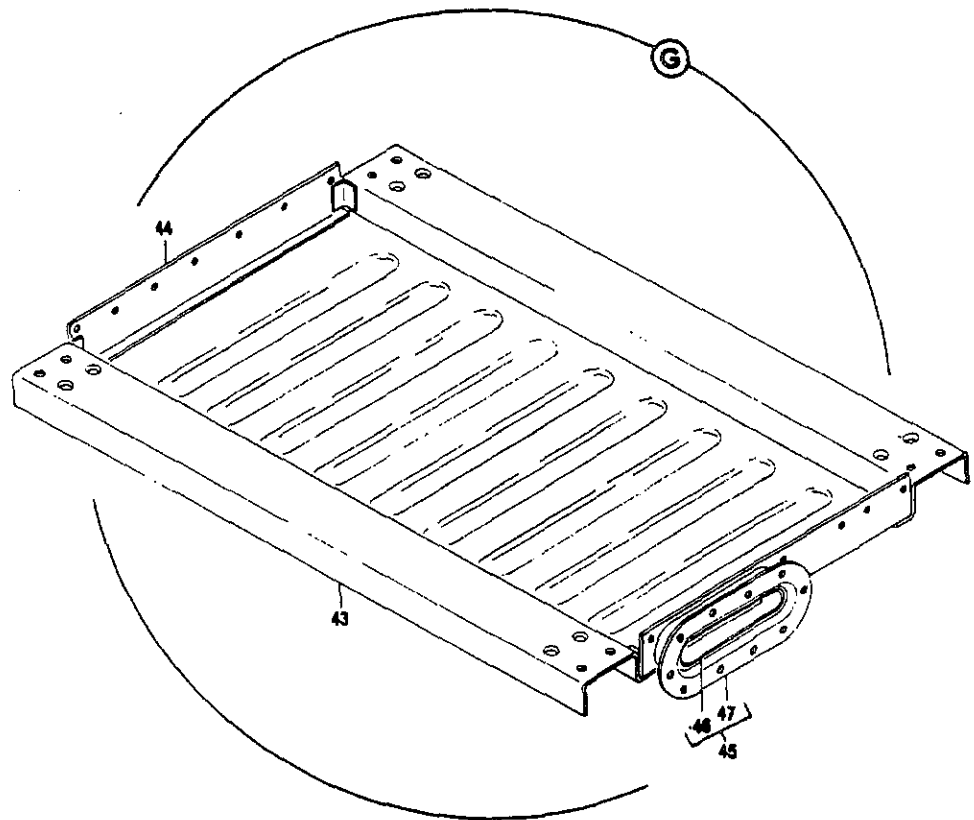
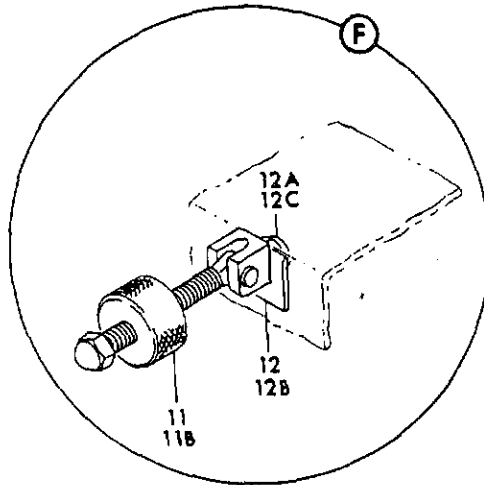


FIGURE 14A. SHELF ASSY. SHELF NO. 2 LH SIDE ELECTRONIC RACK HF EQUIPMENT (ELECTRICAL POWER ONLY) (SHEET 2)

NOV 21/90

24-09-14A

DETAILED PARTS LIST
24-09-14A
PAGE 1

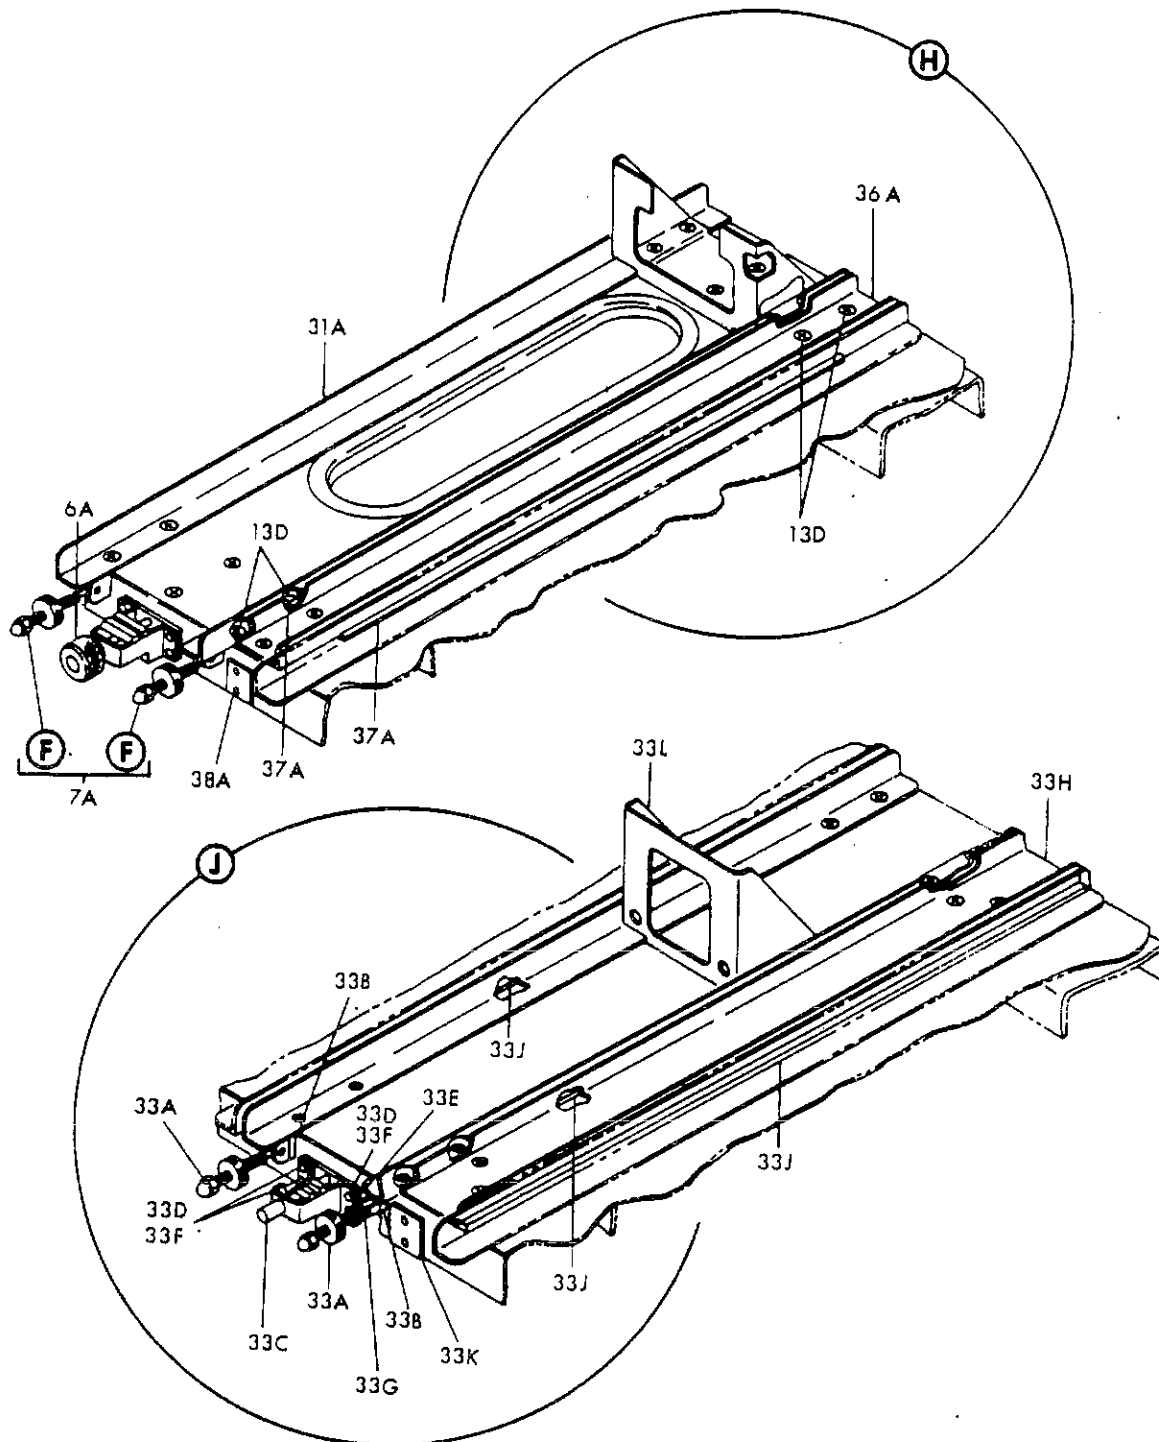


FIGURE 14A. SHELF ASSY, SHELF NO. 2 LH SIDE ELECTRONIC RACK HF EQUIPMENT (ELECTRICAL POWER ONLY) (SHEET 3)

BOEING

707

PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R R R R R R R R	14A 65-18711-8	SHELF ASSY, SHELF NO. 2 LH SIDE ELECTRONIC RACK HF. EQUIPMENT (ELECTRICAL POWER ONLY) (REWORKED TO 391-25-50-17017-001 AND 391-25-50-74470-001) (DELETED BY RAF MOD 7211.019-4) (SEE FIG. 18)	0150	RF
	391-25-50-17017-001	SHELF ASSY, SHELF NO. 2 LH SIDE ELECTRONIC RACK HF. EQUIPMENT (ELECTRICAL POWER ONLY) (VZ0031) (65-18711-8 MODIFIED BY RAD MOD 7211.019-4) (SEE FIG. 18)	0203	RF
	391-25-50-74470-001	SHELF ASSY, SHELF NO. 2 LH SIDE ELECTRONIC RACK HF. EQUIPMENT (ELECTRICAL POWER ONLY) (VZ0031) (65-18711-8 MODIFIED BY RAD MOD 7211.019-4) (SEE FIG. 18)	0101 0450	RF
	1 66-12450-1	. PLATE, COOLING AIR ORIFICE COVER.	0150	5
	2 66-12450-2	. PLATE, COOLING AIR ORIFICE COVER.	0150	1
	3 NAS670-25	. RING.	0150	4
	4 69-14507-2	. PIN, EQUIPMENT HOLD DOWN.	0150	4
	5 63-1350	. SPRING, UNIT HOLD DOWN PIN COMPRESSION.	0150	4
	6 NAS620-416	. WASHER.	0150	4
	7 65-5270	. HOLD DOWN INSTL, 1/4 ATR CASE FRONT.	0150	1
	8 65-5270-1	. HOLD DOWN INSTL, 3/8 ATR CASE FRONT.	0150	1
	9 65-5270-2	. HOLD DOWN INSTL, 1/2 ATR CASE FRONT.	0150	1
	10 65-5270-5	. HOLD DOWN INSTL, 1-1/2 ATR CASE FRONT.	0150	1
	11 121366-707	. . BOLT ASSY, (HOLLINGSHEAD-PRYOR ENTERPRISES) (USED ON 65-5270-1, -2 AND -5) (OPTIONAL 66-1390 FIG. 106) (OPTIONAL TO 121366-707 (HOLLINGSHEAD-PRYOR ENTERPRISES))	0150	2
	11 66-1390	. . BOLT ASSY, (USED ON 65-5270-1, -2 AND -5) (SEE FIG. 106) (OPTIONAL TO 121366-707 (HOLLINGSHEAD-PRYOR ENTERPRISES))	0150	2
	12 66-1387	ATTACHING PARTS . . FILLER, ELECTRONIC SHELF EXTRUDED.	0150	AR
	12A BACN10JC3	. . NUT.	0150	AR
	13 NAS514P1032-10	. . SCREW.	0150	12
	14 BACS12CB3-10	. . SCREW, (OPTIONAL NAS603-10).	0150	2
	15 BACS12N10-10	. . SCREW ASSY.	0150	2
	16 NAS679A3W	. . NUT.	0150	16
	17 66-1650	. . STRAP ELECTRONIC SHELF BONDING.	0150	4
	18 BACS14E400B	. . SHOCKMOUNT.	0150	1
	19 BACS14E500B	. . SHOCKMOUNT.	0150	1
	20 BACS14E300B	. . SHOCKMOUNT.	0150	2
	21 69-15310-2	. . BRACKET, RADIO RACK SHELVES WIRE SUPPORT.	0150	2
	22 69-15310-3	. . BRACKET, RADIO RACK SHELVES WIRE SUPPORT.	0150	1
		ATTACHING PARTS . . SCREW, (OPTIONAL NAS603-10).	0150	6
		. . WASHER, SPECIAL REPAIR.	0150	6
		. . NUT.	0150	6
	23 BACM9L00-9DU	. . SCOTCH-CAL, RM 933.	0150	1
	24 BACM9L00-9DT	. . SCOTCH-CAL, RM 932.	0150	1
	25 BACM9L00-9DS	. . SCOTCH-CAL, RM 931.	0150	1
	26 66-14958-1	. . CHANNEL, RADIO RACK SHELF FILTER MOUNT.	0150	1
	27 66-14958-2	. . CHANNEL, RADIO RACK SHELF FILTER MOUNT.	0150	1
		ATTACHING PARTS . . SCREW.	0150	8
		. . NUT.	0150	8
	28 66-14958-3	. . CHANNEL, RADIO RACK SHELF FILTER MOUNT.	0150	1
	29 66-14958-4	. . CHANNEL, RADIO RACK SHELF FILTER MOUNT.	0150	1
		ATTACHING PARTS . . SCREW.	0150	8
		. . WASHER, SPECIAL REPAIR.	0150	8
		. . NUT.	0150	8
	30 NAS679A06W	. . NUT.	0150	2
	31 66-1398-4	. . PIN, ELECTRONIC SHELF UNIT INDEX.	0150	2
	32 65-18719-37	. . TRAY ASSY, ELECTRONIC RACK 1/4 ATR DPXB SHORT ON LONG EQUIPMENT MOUNTING (SEE FIG. 76)	0150	1
		ATTACHING PARTS . . SCREW.	0150	2
		. . SCREW.	0150	7
		. . SCREW.	0150	2
		. . WASHER.	0150	2
		. . NUT.	0150	2
		NAS514P1032-10 NAS514P632-5 BACS12CB3-10 AN960PD10 AN256-10		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/01

24-09-14A

DETAILED PARTS LIST
24-09-14A
PAGE 3

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
14A	NAS679A06W	.	NUT	0150	7
33	69-1522-26	.	COVER, ELECTRONIC RACK 3/8 ATR LONG SHELF	0150	1
		.	ATTACHING PARTS		
	NAS514P1032-10	.	SCREW	0150	6
	NAS514P632-5	.	SCREW	0150	1
	BACS12CB06-6	.	SCREW, (OPTIONAL NAS601-6)	0150	1
	BACW10AL1	.	WASHER.	0150	1
	NAS679A3W	.	NUT	0150	6
	NAS679A06W	.	NUT	0150	1
	NAS679A06W	.	NUT	0150	1
34	65-18719-5	.	TRAY ASSY, ELECTRONIC RACK 3/8 ATR SHORT ON LONG. . .	0150	1
		.	EQUIPMENT MOUNTING (SEE FIG. 82)		
		.	ATTACHING PARTS		
	NAS514P1032-10	.	SCREW	0150	4
	NAS514P632-5	.	SCREW	0150	1
	BACS12CB3-10	.	SCREW, (OPTIONAL NAS603-10)	0150	1
	BACW10AL1	.	WASHER.	0150	1
	NAS679A3W	.	NUT	0150	5
	NAS679A06W	.	NUT	0150	1
35	65-18719-11	.	TRAY ASSY, ELECTRONIC RACK 1/2 ATR DPD EX-SHORT ON. .	0150	1
		.	LONG HF EQUIPMENT MOUNTING (SEE FIG. 89)		
		.	ATTACHING PARTS		
	NAS514P1032-10	.	SCREW	0150	4
	NAS514P632-5	.	SCREW	0150	3
	BACS12CB3-10	.	SCREW, (OPTIONAL NAS603-10)	0150	2
	BACW10AL1	.	WASHER.	0150	3
	NAS679A3W	.	NUT	0150	6
	NAS679A06W	.	NUT	0150	3
36	65-18719-18	.	TRAY ASSY, ELECTRONIC RACK 1-1/2 ATR LONG COLLINS HF	0150	1
		.	EQUIPMENT MOUNTING (SEE FIG. 103)		
		.	(OPTIONAL 65-18719-63)		
36	65-18719-63	.	TRAY ASSY, ELECTRONIC RACK 1-1/2 ATR LONG COLLINS HF	0150	1
		.	EQUIPMENT MOUNTING (SEE FIG. 103)		
		.	(OPTIONAL TO 65-18719-18)		
		.	ATTACHING PARTS		
	NAS514P1032-10	.	SCREW	0150	4
	NAS514P632-5	.	SCREW	0150	12
	BACS12CB06-6	.	SCREW, (OPTIONAL NAS601-6)	0150	4
	BACW10AL1	.	WASHER.	0150	7
	NAS679A3W	.	NUT	0150	4
	NAS679A06W	.	NUT	0150	16
37	66-1383	.	SEAL, UNIT TRAY	0150	4
		.	(OPTIONAL TO 66-1383-2)		
37	66-1383-2	.	SEAL, UNIT TRAY	0150	4
		.	(OPTIONAL 66-1383)		
38	65-1945-4	.	PLATE, ELECTRONIC EQUIPMENT IDENTIFICATION.	0150	1
39	65-1945-25	.	PLATE, ELECTRONIC EQUIPMENT IDENTIFICATION.	0150	1
40	65-1945-31	.	PLATE, ELECTRONIC EQUIPMENT IDENTIFICATION.	0150	1
		.	ATTACHING PARTS		
	BACS12CB04-6	.	SCREW	0150	8
	NAS679A04W	.	NUT	0150	8
41	65-1945-67	.	PLATE, ELECTRONIC EQUIPMENT IDENTIFICATION.	0150	1
42	65-5207-1	.	SUPPORT ASSY, EQUIPMENT MOUNTING LONG LH TRAY . . .	0150	1
43	65-1649	.	SHELF ASSY, ELECTRONIC RACK LONG.	0150	1
44	69-1327-1	.	PANEL, ELECTRONIC SHELF LONG END.	0150	1
45	69-1334-1	.	PANEL ASSY, DUCT ATTACHING SHELF END.	0150	1
46	69-1334-5	.	WELD ASSY, DUCT ATTACHING SHELF END LONG PANEL. .	0150	1
47	66-1337	.	SEAL, ELECTRONIC RACK SHELF END AIR	0150	1
60	391-25-50-74470-10	.	RAIL, (VZ0031) (USED ON 391-25-50-74470-001). . . .	0101	1
		.	(ADDED BY RAF MOD 7211.019-4)	0450	
		.	ATTACHING PARTS		
	NAS514P1032-8	.	SCREW	0101	2
	NAS1096-3-6	.	SCREW	0450	
		.		0101	1
		.		0450	
	MS21042-3	.	NUT	0101	3
		.		0450	
		.	-----*		
		.	MISSING ITEM NUMBERS ARE NOT APPLICABLE		

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R 14A 80	391-25-50-74470-103	.	SUPPORT, (VZ0031)	.	.	.	.	.	0150	1
R 85	391-25-50-17017-105	.	PACKER, (VZ0031)	.	.	.	.	.	0150	1
R 90	NAS573-1	.	CLAMP ASSY.	.	.	.	.	.	0150	1
		.	ATTACHING PARTS	.	.	.	.	.		
R	NAS1096-3-6	.	SCREW	.	.	.	.	.	0150	2
		.	-----*	.	.	.	.	.		
R 100	391-25-50-17017-102	.	RAIL, (VZ0031) (USED ON 391-25-50-17017-001)	.	.	.	.	.	0203	1
R 105	391-25-50-17017-101	.	RAIL, (VZ0031) (USED ON 391-25-50-17017-001)	.	.	.	.	.	0203	1
		.	ATTACHING PARTS	.	.	.	.	.		
R	NAS514P1032-8	.	SCREW	.	.	.	.	.	0203	2
R	MS21042-3	.	NUT	.	.	.	.	.	0203	4
		.	-----*	.	.	.	.	.		
R 120	391-25-50-17017-107	.	TRAY, (VZ0031)	.	.	.	.	.	0203	1
		.	FOR REFERENCE TO OTHER SHELF DETAILS, SEE NHA	.	.	.	.	.	0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

RAF
NOV 21/01

24-09-14A

DETAILED PARTS LIST
24-09-14A
PAGE 5

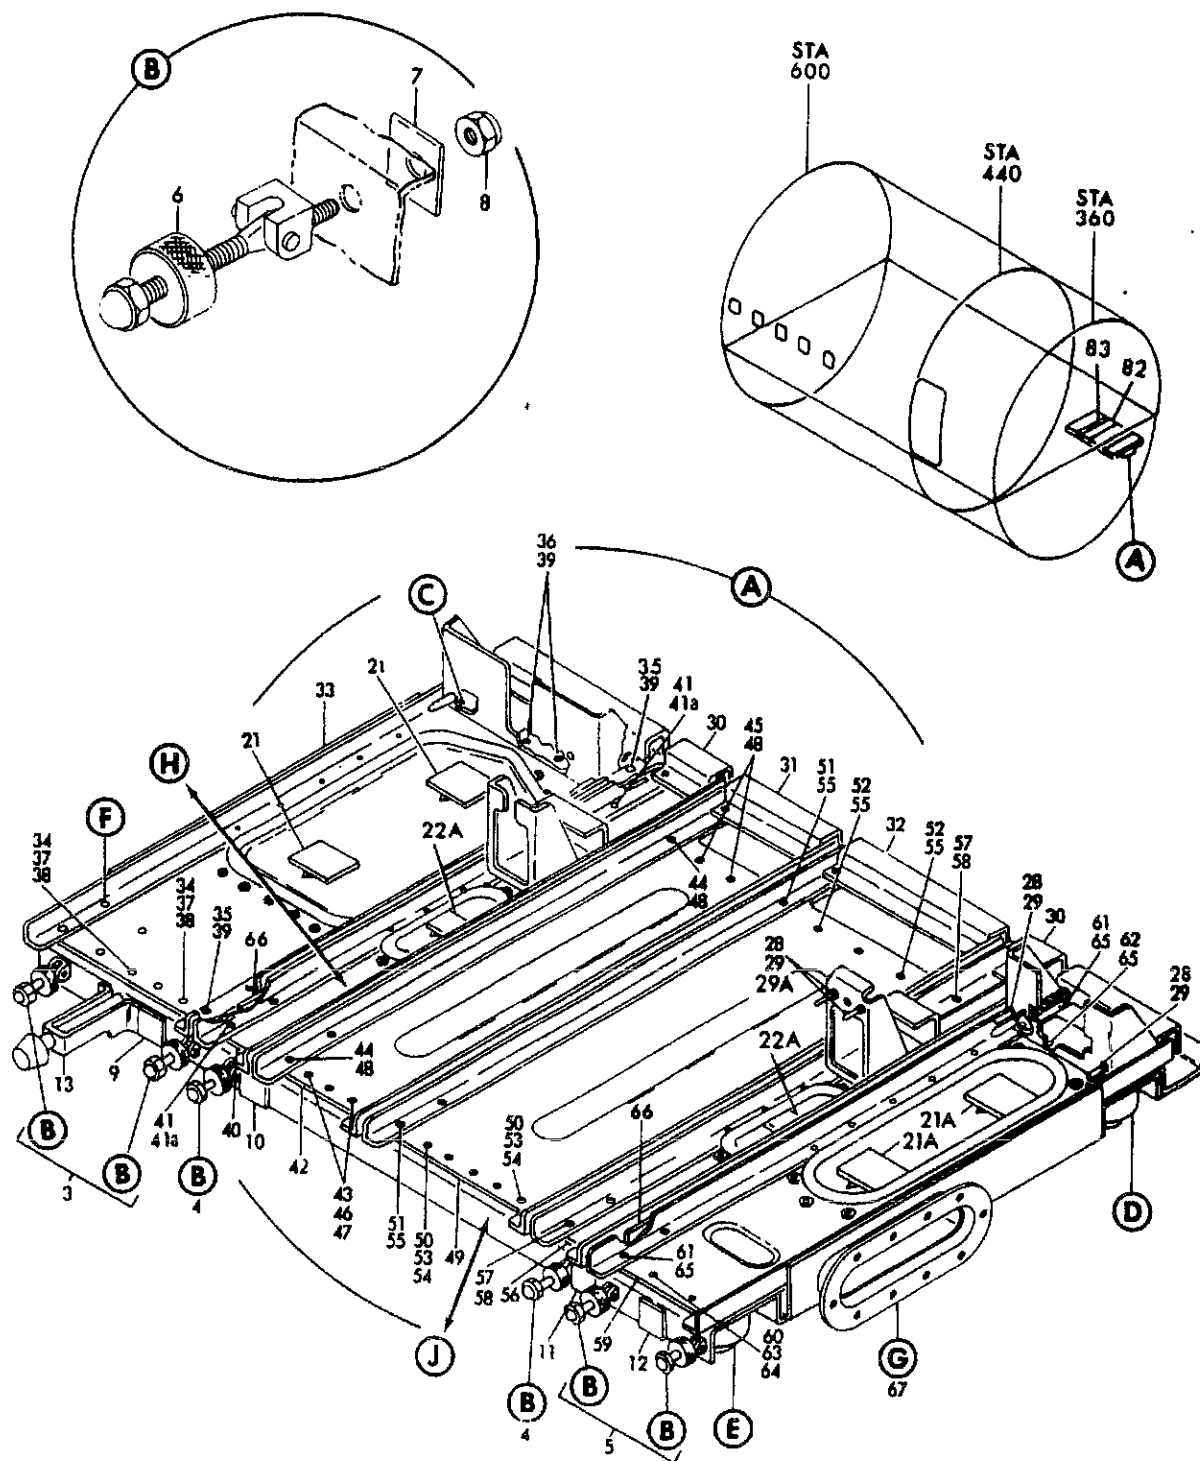


FIGURE 15G. SHELF ASSY, SHELF NO. 2 LH SIDE ELECTRONIC RACK HF EQUIPMENT (ELECTRICAL POWER ONLY) (SHEET 1)

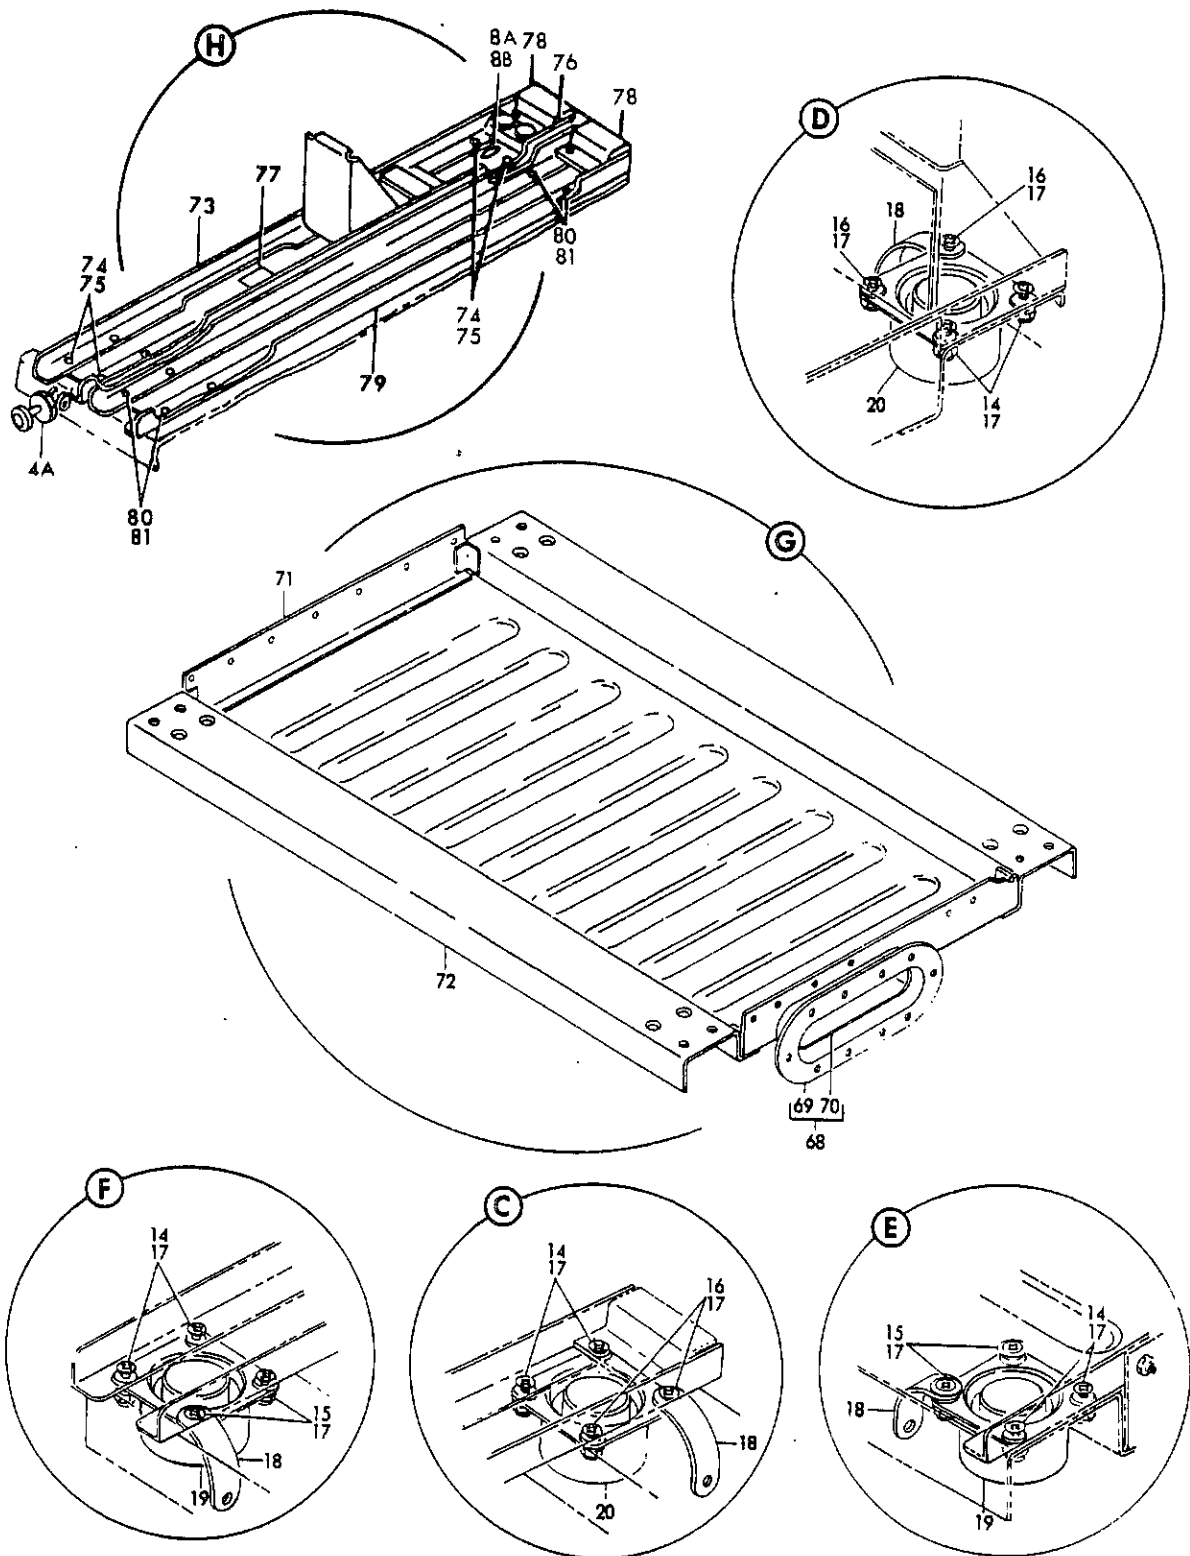


FIGURE 15G. SHELF ASSY, SHELF NO. 2 LH SIDE ELECTRONIC RACK HF EQUIPMENT (ELECTRICAL POWER ONLY) (SHEET 2)

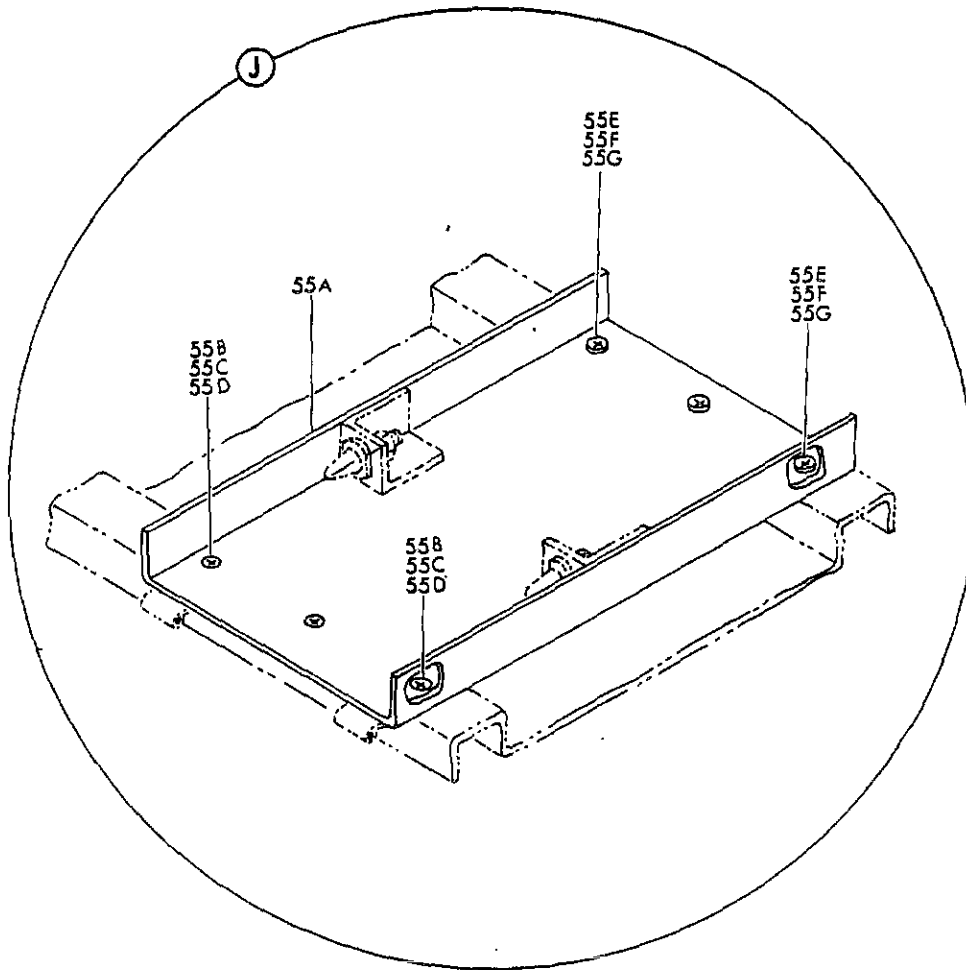


FIGURE 15G. SHELF ASSY, SHELF NO. 2 LH SIDE ELECTRONIC RACK HF EQUIPMENT (ELECTRICAL POWER ONLY) (SHEET 3)

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
15G	65-18711-23		SHELF ASSY, SHELF NO. 2 LH SIDE ELECTRONIC RACK HF. EQUIPMENT (ELECTRICAL POWER ONLY) (SEE FIG. 1C, ITEM 2 AND FIG. 1D, ITEM 2)	5199	RF
3	65-5270-3		. HOLD DOWN INSTL, 3/4 ATR CASE FRONT	5199	1
3	65-5270-3		. HOLD DOWN INSTL, 3/4 ATR CASE FRONT	5199	1
4	65-5270		. HOLD DOWN INSTL, 1/4 ATR CASE FRONT	5199	2
5	65-5270-2		. HOLD DOWN INSTL, 1/2 ATR CASE FRONT	5199	2
6	121366-707		. . BOLT ASSY, (V30528) (USED ON 65-5270-2 AND -3). (OPTIONAL 66-1390 FIG. 106)	5199	2
6	66-1390		. . BOLT ASSY, (USED ON 65-5270-2 AND -3) (SEE FIG. 106) (OPTIONAL TO 121366-707 (V30528))	5199	2
6	121366-707		. . BOLT ASSY, (V30528) (USED ON 65-5270) (OPTIONAL 66-1390 FIG. 106)	5199	1
6	66-1390		. . BOLT ASSY, (USED ON 65-5270) (SEE FIG. 106) (OPTIONAL TO 121366-707 (V30528))	5199	1
7	66-1387		ATTACHING PARTS		
8	BACN10BY53		. . FILLER, RADIUS.	5199	AR
			. . NUT.	5199	AR
9	65-1945-116		. PLATE, IDENTIFICATION	5199	1
10	65-1945-229		. PLATE, IDENTIFICATION	5199	1
11	65-1945-27		. PLATE, IDENTIFICATION	5199	1
12	65-1945-9		. PLATE, IDENTIFICATION	5199	1
			ATTACHING PARTS		
	BACS12CB04-6		. SCREW	5199	8
	NAS679A04W		. NUT	5199	8
13	69-23056-6		. EXTRACTOR INSTL, 3/4 ATR CASE (SEE FIG. 105).	5199	1
14	NAS514P1032-10		. SCREW	5199	8
15	BACS12N10-10		. SCREW	5199	4
16	BACS12CB3-10		. SCREW	5199	4
17	NAS679A3W		. NUT	5199	16
18	66-1650		. STRAP, BONDING.	5199	4
19	BACS14E300B		. SHOCKMOUNT.	5199	2
20	BACS14E200B		. SHOCKMOUNT.	5199	2
21	66-12450-1		. PLATE, COOLING AIR ORIFICE COVER.	5199	2
21A	66-12450-1		. PLATE, COOLING AIR ORIFICE COVER.	5199	2
22A	66-12450-2		. PLATE, COOLING AIR ORIFICE COVER.	5199	2
28	NAS679A06W		. NUT	5199	4
29A	66-1398-4		. PIN, INDEX.	5199	2
30	69-15310-1		. BRACKET, RADIO RACK SHELVES WIRE SUPPORT.	5199	2
			ATTACHING PARTS		
	BACS12CB3-10		. SCREW	5199	4
	66-2955-3		. WASHER, SPECIAL REPAIR.	5199	4
	NAS679A3W		. NUT	5199	4
31	69-15310-3		. BRACKET, RADIO RACK SHELVES WIRE SUPPORT.	5199	1
32	69-15310-4		. BRACKET, RADIO RACK SHELVES WIRE SUPPORT.	5199	1
			ATTACHING PARTS		
	BACS12CB3-10		. SCREW	5199	2
	66-2955-3		. WASHER, SPECIAL REPAIR.	5199	2
	NAS679A3W		. NUT	5199	2
33	65-18719-30		. TRAY ASSY, 3/4 ATR DPA LONG ON LONG MOUNTING (SEE FIG. 96)	5199	1
			ATTACHING PARTS		
34	NAS514P632-5		. SCREW	5199	3
35	NAS514P1032-10		. SCREW	5199	4
36	BACS12CB3-10		. SCREW	5199	2
37	BACW10AL1		. WASHER.	5199	3
38	NAS679A06W		. NUT	5199	3
39	NAS679A3W		. NUT	5199	6
40	65-18719-37		. TRAY ASSY, 1/4 ATR DPXB SHORT ON LONG MOUNTING (SEE FIG. 76)	5199	1
			ATTACHING PARTS		
41	NAS514P1032-10		. SCREW	5199	6
41A	NAS679A3W		. NUT	5199	6
42	69-1522-3		. COVER, 1/2 ATR.	5199	1
			ATTACHING PARTS		
43	NAS514P632-5		. SCREW	5199	3
44	NAS514P1032-10		. SCREW	5199	6

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
156 45	BAC512CB3-10	.	SCREW	5199	2
46	BACW10AL1	.	WASHER.	5199	3
47	NAS679A06W	.	NUT	5199	3
48	NAS679A3W	.	NUT	5199	8
			-----*		
49	69-1522-20	.	COVER, 3/4 ATR.	5199	1
		.	ATTACHING PARTS		
50	NAS514P632-5	.	SCREW	5199	5
51	NAS514P1032-10	.	SCREW	5199	6
52	BAC512CB3-10	.	SCREW	5199	3
53	BACW10AL1	.	WASHER.	5199	5
54	NAS679A06W	.	NUT	5199	5
55	NAS679A3W	.	NUT	5199	9
			-----*		
56	65-18719-2	.	TRAY ASSY, 1/4 ATR SHORT ON LONG MOUNTING (SEE FIG. 76)	5199	1
		.	ATTACHING PARTS		
57	NAS514P1032-10	.	SCREW	5199	6
58	NAS679A3W	.	NUT	5199	6
			-----*		
59	65-18719-13	.	TRAY ASSY, 1/2 ATR DPD LONG ON LONG MOUNTING (SEE FIG. 87)	5199	1
		.	ATTACHING PARTS		
60	NAS514P632-5	.	SCREW	5199	1
61	NAS514P1032-10	.	SCREW	5199	4
62	BAC512CB3-10	.	SCREW	5199	1
63	BACW10AL1	.	WASHER.	5199	1
64	NAS679A06W	.	NUT	5199	1
65	NAS679A3W	.	NUT	5199	5
			-----*		
66	66-1383-2	.	SEAL, UNIT TRAY	5199	5
67	65-5207-1	.	SUPPORT ASSY, MOUNTING TRAY	5199	1
68	69-1334-1	.	PANEL ASSY, SHELF END DUCT ATTACHING.	5199	1
69	66-1337	.	SEAL.	5199	1
70	69-1334-5	.	WELD ASSY	5199	1
71	69-1327-1	.	PANEL, LONG END	5199	1
72	65-1649	.	SHELF ASSY, LONG.	5199	1
82	704-0304-003	.	BASE ASSY, MTG (V97896) (ADDED BY SVA REQUEST).	5199	1
83	655-4080-002	.	BASE ASSY, MTG (V97896) (ADDED BY SVA REQUEST).	5199	1
		.	FOR REFERENCE TO OTHER SHELF DETAILS, SEE NHA	5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING
707
PARTS CATALOG (MAINTENANCE)

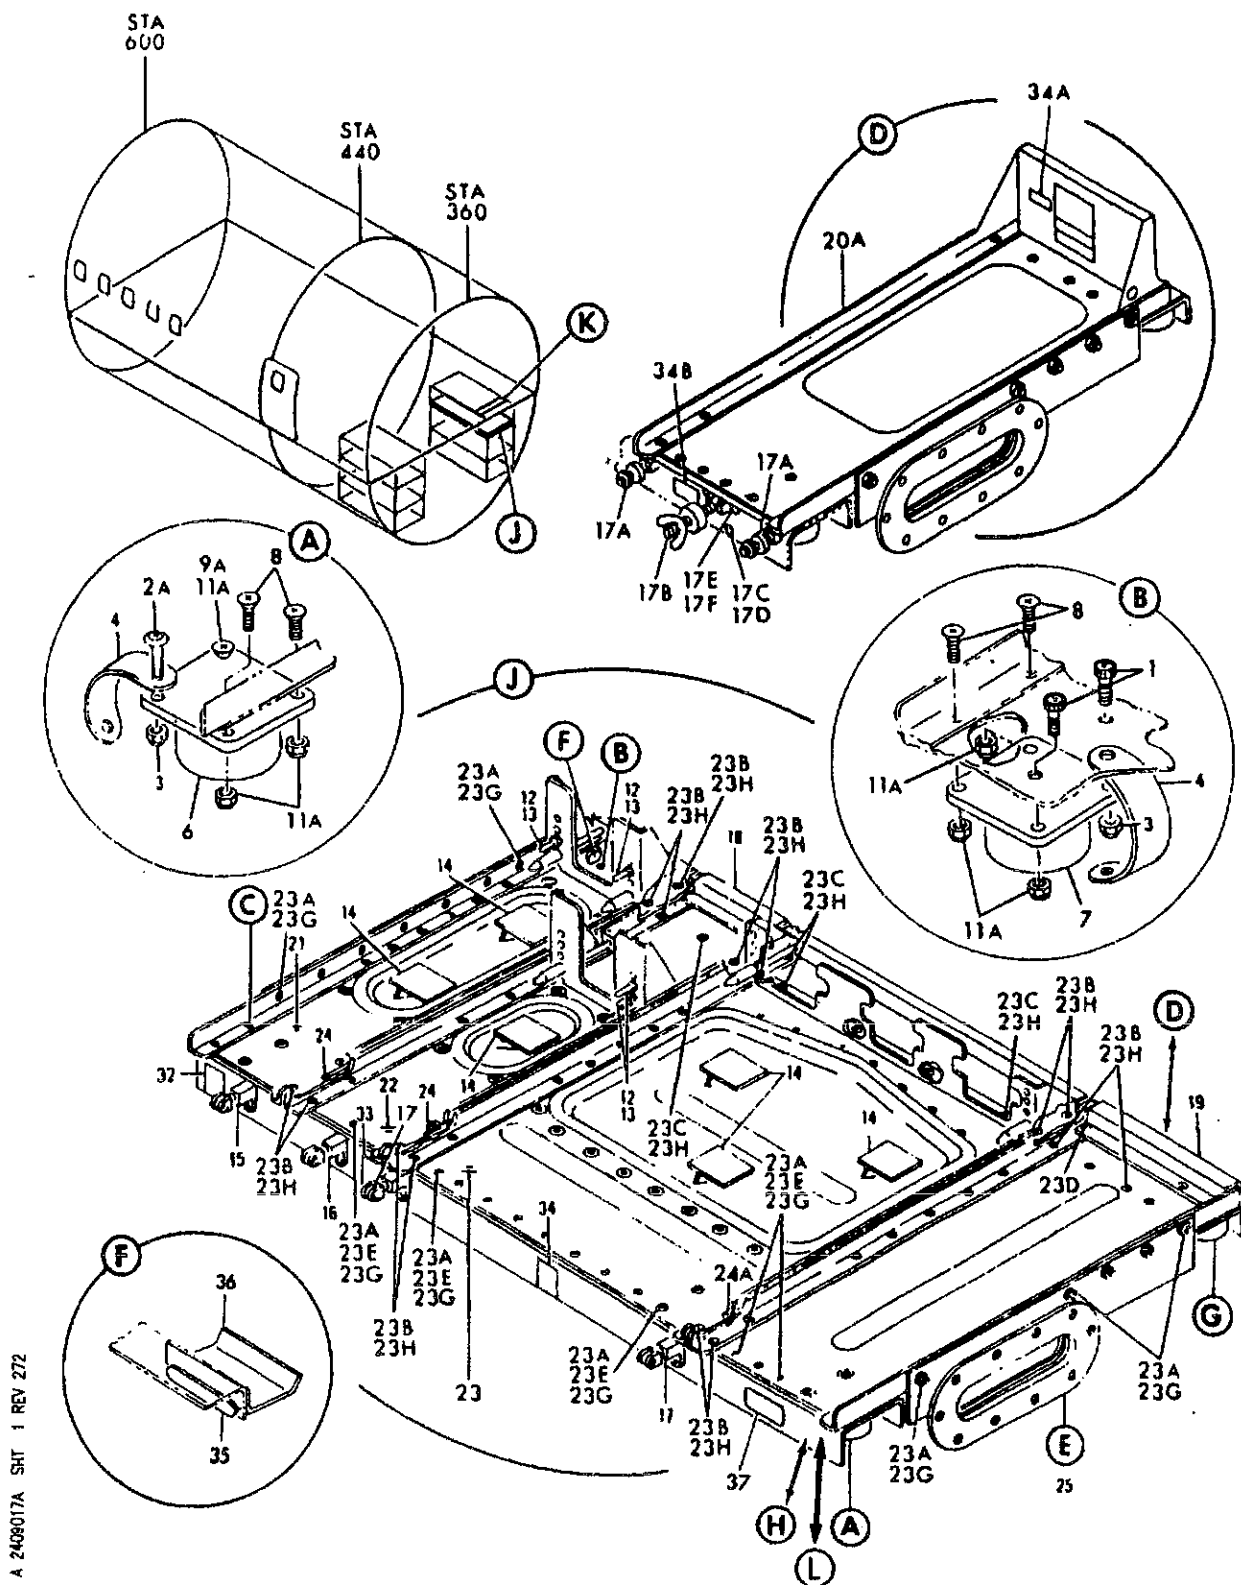


FIGURE 17A. SHELF ASSY, ELECTRONIC RACK AUTOPILOT EQUIPMENT (SHELF NO. 3 LH) (SHEET 1)

DETAILED PARTS LIST
24-09-17A
PAGE 0

24-09-17A

NOV 21/01

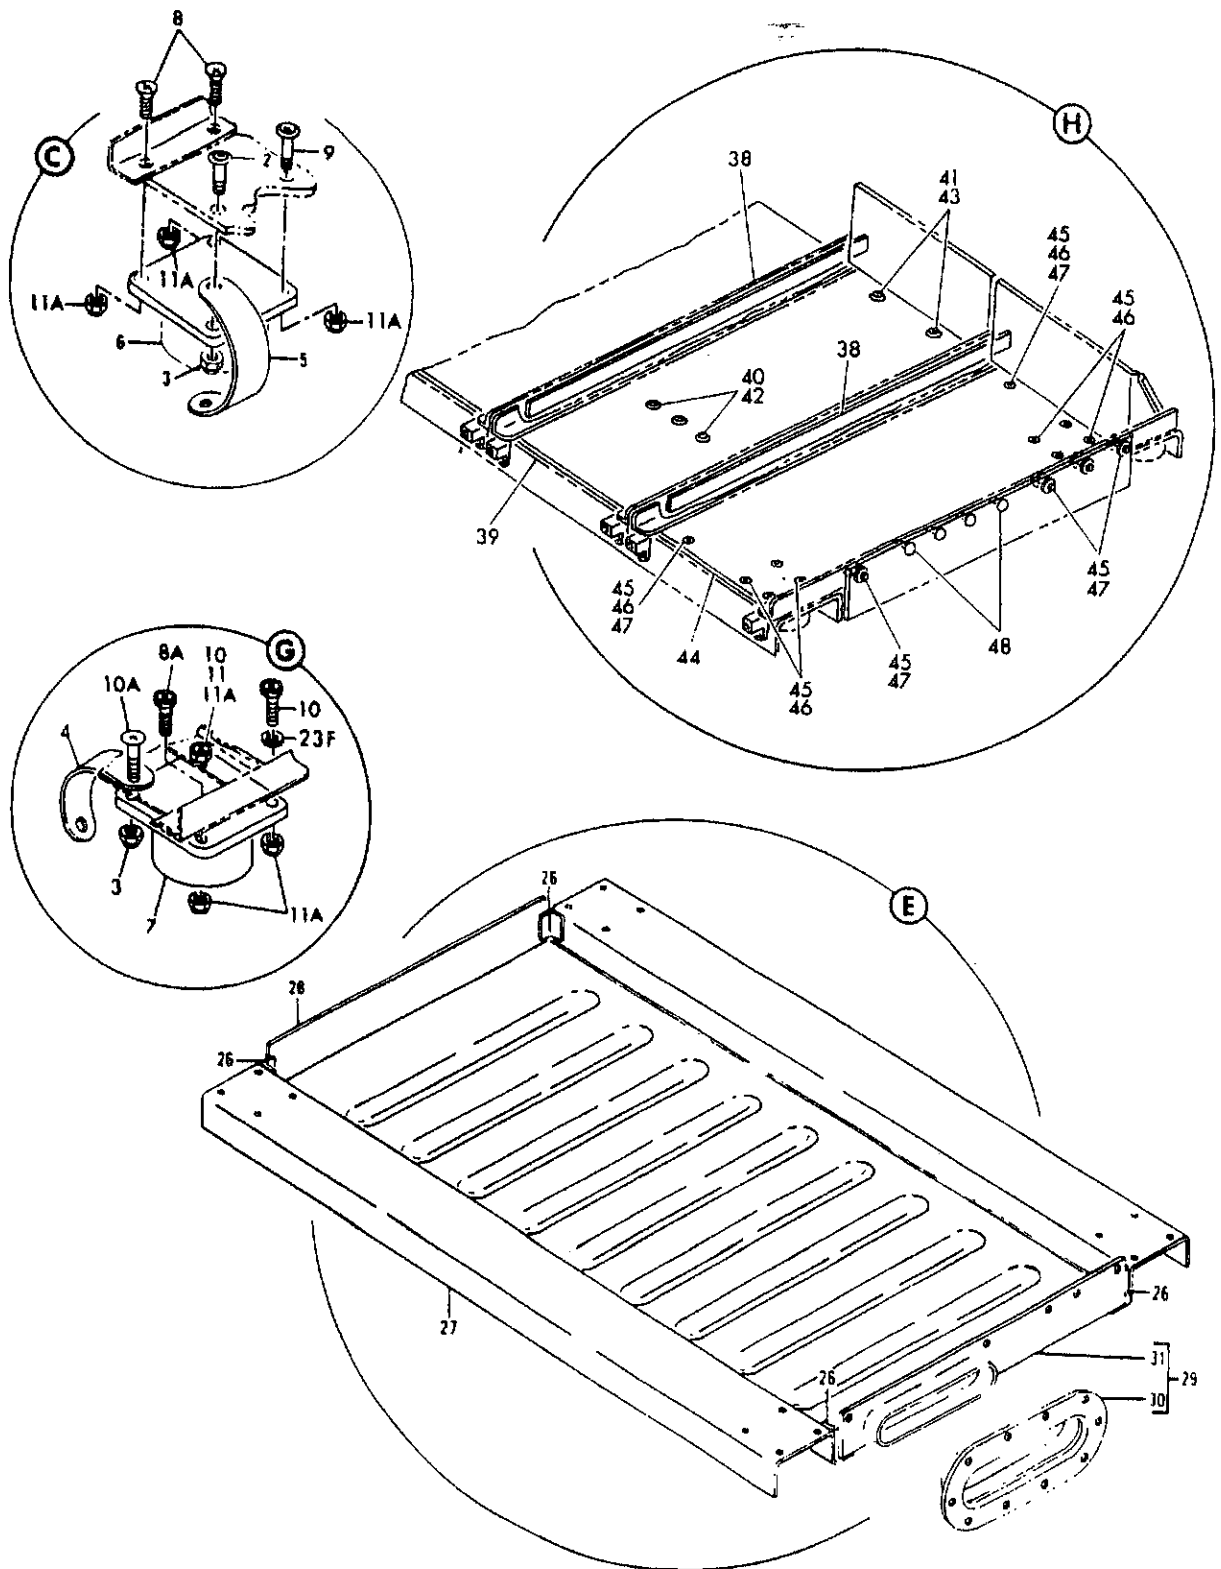


FIGURE 17A. SHELF ASSY, ELECTRONIC RACK AUTOPILOT EQUIPMENT (SHELF NO. 3LH) (SHEET 2)

BOEING
707
PARTS CATALOG (MAINTENANCE)

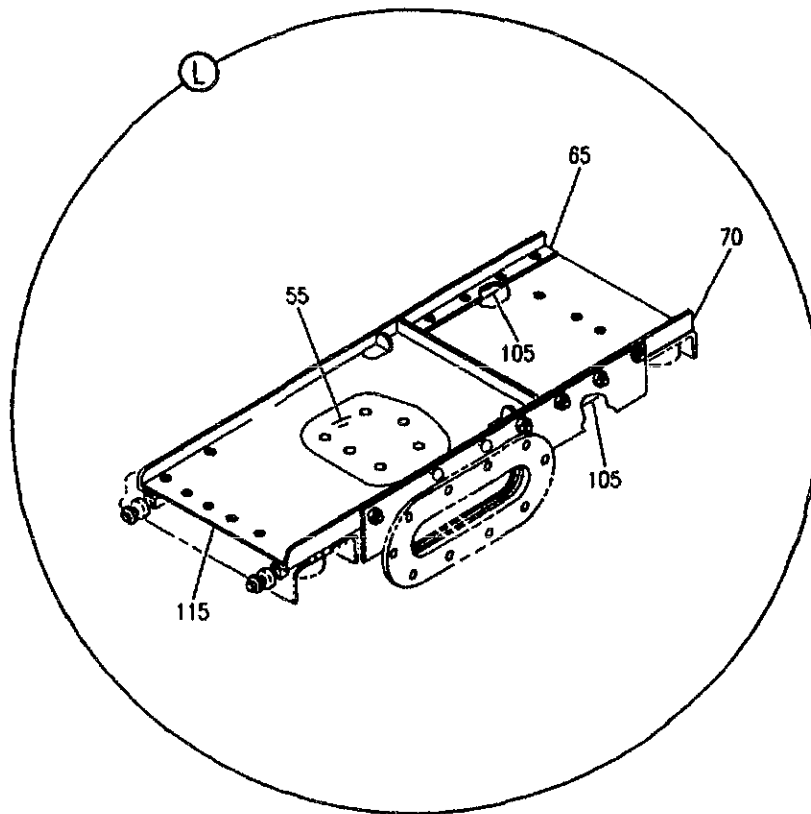
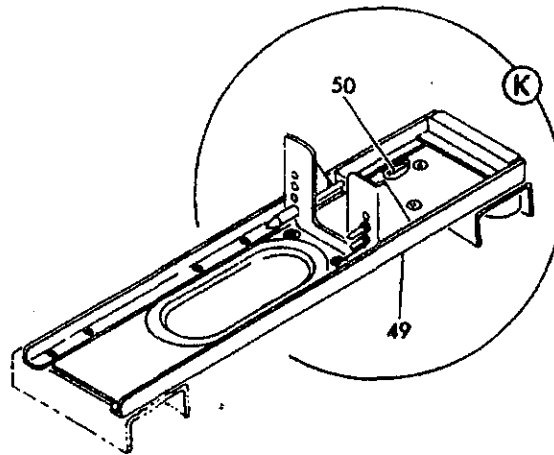


FIGURE 17A. SHELF ASSY, ELECTRONIC RACK AUTOPILOT EQUIPMENT (SHELF NO. 3 LH) (SHELF 3)

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
17A	65-18713-4		SHELF ASSY, ELECTRONIC RACK AUTOPILOT EQUIPMENT (SHELF NO. 3 LH) (ELECTRICAL POWER ONLY) (SEE FIG. 1C, ITEM 3 AND FIG. 1D, ITEM 3)	5199	RF
	65-18713-4		SHELF ASSY, ELECTRONIC RACK AUTOPILOT EQUIPMENT (SHELF NO. 3 LH) (REWORKED TO 391-25-50-74131-001) (DELETED BY RAF MOD 7211.019-4) (SEE FIG. 1B)	0150	RF
	391-25-50-74131-001		SHELF ASSY, ELECTRONIC RACK AUTOPILOT EQUIPMENT (SHELF NO. 3 LH) (VZ0031) (65-18713-4 MODIFIED BY RAF MOD 7211.019-4) (SEE FIG. 1B)	0150	RF
1	BACS12CB3-10		SCREW		2
2	BACS12N10-10		SCREW ASSY.		1
2A	BACS12N10-10		SCREW ASSY.		1
3	NAS679A3W		NUT		4
4	66-1650		STRAP, ELECTRONIC SHELF BONDING		3
5	66-1650-1		STRAP, ELECTRONIC SHELF BONDING		1
6	7002M		SHOCKMOUNT, (V51116).		2
7	7002U		SHOCKMOUNT, (V51116).		2
			ATTACHING PARTS		
8	NAS514P1032-10		SCREW		6
8A	NAS514P1032-10		SCREW.		1
9	BACS12N10-10		SCREW ASSY.		1
9A	BACS12N10-10		SCREW ASSY.		1
10	BACS12CB3-10		SCREW		2
10A	BACS12CB3-10		SCREW		1
11	AN960PD10		WASHER.		1
11A	NAS679A3W		NUT		12
			-----*		
12	66-1398-4		PIN, ELECTRONIC SHELF UNIT INDEX.	5199	4
13	NAS679A06W		NUT	5199	4
14	66-12450-1		PLATE, COOLING AIR ORIFICE COVER.		6
	65-5313-4		LATCH INSTL, 3/8 ATR CASE FORWARD		1
15	27L1-1		FORK ASSY, (V71286) (OPTIONAL 61L14-2-2AC (V71286))		1
15	61L14-2-2AC		FORK ASSY, (V71286) (OPTIONAL 27L1-1 (V71286)).		1
			ATTACHING PARTS		
	MS24678-10		SCREW		1
			(OPTIONAL BACS12CB3-8)		
	BACS12CB3-8		SCREW		1
			(OPTIONAL MS24678-10)		
	MS24678-13		SCREW		1
			(OPTIONAL BACS12CB3-14)		
	BACS12CB3-14		SCREW		1
			(OPTIONAL MS24678-13)		
	MS35338-43		WASHER.		1
	NAS679A3W		NUT		1
			-----*		
	65-5313-2		LATCH INSTL, 3/8 ATR CASE CENTER.		1
16	27L1-1		FORK ASSY, (V71286) (OPTIONAL 61L14-2-2AC (V71286))		1
16	61L14-2-2AC		FORK ASSY, (V71286) (OPTIONAL 27L1-1 (V71286)).		1
			ATTACHING PARTS		
	BACS12AG55FA		SCREW		1
			(OPTIONAL TO BACS12CB3-58)		
	BACS12CB3-58		SCREW		1
			(OPTIONAL BACS12AG55FA)		
	MS24678-13		SCREW		1
			(OPTIONAL TO BACS12CB3-14)		
	BACS12CB3-14		SCREW		1
			(OPTIONAL MS24678-13)		
	NAS43DD3-190		SPACER, (OPTIONAL NAS43DD3-190N).		1
	NAS43DD3-190N		SPACER, (OPTIONAL NAS43DD3-190).		1
	66-2895-3		SPACER, FORK SUPPORT.		1
	MS35338-43		WASHER.		1
			-----*		
	65-5313		LATCH INSTL, 1-1/2 ATR CASE CENTER.		1
17	27L1-1		FORK ASSY, (V71286) (OPTIONAL 61L14-2-2AC (V71286))		2
17	61L14-2-2AC		FORK ASSY, (V71286) (OPTIONAL 27L1-1 (V71286)).		2
			ATTACHING PARTS		
	BACS12AG55FA		SCREW		2
			(OPTIONAL TO BACS12CB3-58)		
	BACS12CB3-58		SCREW		2
			(OPTIONAL BACS12AG55FA)		
	MS24678-13		SCREW		2
			(OPTIONAL TO BACS12CB3-14)		
	BACS12CB3-14		SCREW		2
			(OPTIONAL MS24678-13)		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/01

24-09-17A

DETAILED PARTS LIST
24-09-17A
PAGE 3

BOEING 707 **PARTS CATALOG (MAINTENANCE)**

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
17A	NAS43DD3-190 NAS43DD3-190N 66-2895-3 MS35338-43	. . .	SPACER, (OPTIONAL NAS43DD3-190N). SPACER, (OPTIONAL NAS43DD3-190) SPACER, FORK SUPPORT. WASHER.		2 2 2 2
18	69-15310-2 BACS12CB3-10 66-2955-3 NAS679A3W	. . .	BRACKET, RADIO RACK SHELVES WIRE SUPPORT. ATTACHING PARTS SCREW WASHER, SPECIAL REPAIR. NUT		1 3 3 3
19	69-15310-4	. . .	BRACKET, RADIO RACK SHELVES WIRE SUPPORT.		1
20	69-1522-20	. . .	COVER ASSY, 3/4 ATR LONG ELECTRONIC RACK SHELF.		1
21	65-18719-6	. . .	TRAY ASSY, ELECTRONIC RACK 3/8 ATR LONG ON LONG EQUIPMENT MOUNTING (SEE FIG. 83)		1
22	65-18719-5	. . .	TRAY ASSY, ELECTRONIC RACK 3/8 ATR LONG ON LONG EQUIPMENT MOUNTING (SEE FIG. 82)		1
23	65-18719-17	. . .	TRAY ASSY, ELECTRONIC RACK 1-1/2 ATR 3DPD LONG DN LONG EQUIPMENT MOUNTING (SEE FIG. 102)		1
23A	NAS514P632-5	. . .	ATTACHING PARTS SCREW		27
23B	NAS514P1032-10	. . .	SCREW		27
23C	BACS12CB3-10	. . .	SCREW		7
23D	BACS12CB3-10	. . .	SCREW		1
23E	BACW10AL1	. . .	WASHER.		13
23F	66-2955-3	. . .	WASHER, SPECIAL REPAIR.		1
23G	NAS679A06W	. . .	NUT		25
23H	NAS679A3W	. . .	NUT		29
24	66-1383	. . .	SEAL, SHELF UNIT TRAY (OPTIONAL TO 66-1383-2)		2
24	66-1383-2	. . .	ATTACHING PARTS SEAL, SHELF UNIT TRAY (OPTIONAL 66-1383)		2
24A	66-1383	. . .	SEAL, SHELF UNIT TRAY (OPTIONAL TO 66-1383-2)		1
24A	66-1383-2	. . .	SEAL, SHELF UNIT TRAY (OPTIONAL 66-1383)		1
25	65-5207-1	. . .	SUPPORT ASSY, LH EQUIPMENT MOUNTING LONG TRAY		1
26	66-1685	. . .	CLIP, ELECTRONIC SHELF ATTACH ANGLE ATTACHING PARTS		4
	MS20470D4	. . .	RIVET		16
27	65-1649	. . .	SHELF ASSY, ELECTRONIC RACK LONG.		1
28	69-1327-1	. . .	PANEL, ELECTRONIC SHELF END		1
29	69-1334-1	. . .	PANEL ASSY, SHELF ATTACHING DUCT END.		1
30	66-1337	. . .	SEAL, ELECTRONIC RACK SHELF END AIR		1
31	69-1334-5	. . .	WELD ASSY, SHELF END DUCT ATTACHING PANEL LONG.		1
32	65-1945-61	. . .	PLATE, ELECTRONIC EQUIPMENT IDENTIFICATION.	5199	1
33	65-1945-28	. . .	PLATE, ELECTRONIC EQUIPMENT IDENTIFICATION.	5199	1
34	65-1945-14	. . .	PLATE, ELECTRONIC EQUIPMENT IDENTIFICATION. ATTACHING PARTS	5199	1
	BACS12CB04-6 NAS679A04W	. . .	SCREW NUT	5199 5199	6 6
35	65-51790-11	. . .	SUPPORT INSTL, DISCONNECT	5199	1
36	BAC27CEE184	. . .	SCOTCH-CAL, L3-2 L3-1	5199	1
35	65-51789-33	. . .	BRACKET	5199	1
R	391-25-50-74131-101	. . .	SHEET, (ADDED BY RAF MOD 7211.019-4). ATTACHING PARTS	0150	1
R	MS20426AD4	. . .	RIVET	0150	26
R	65	. . .	ANGLE, (VZ0031) (ADDED BY RAF MOD 7211.019-4)	0150	1
R	70	. . .	ANGLE, (VZ0031) (ADDED BY RAF MOD 7211.019-4) ATTACHING PARTS	0150	1
R	MS20470AD4	. . .	RIVET	0150	22
R	NAS514P632-6	. . .	SCREW, (ADDED BY RAF MOD 7211.019-4).	0150	10
R	NAS514P632-8	. . .	SCREW, (ADDED BY RAF MOD 7211.019-4).	0150	6
R	NAS1096-3-B	. . .	SCREW, (ADDED BY RAF MOD 7211.019-4).	0150	8
R	MS21042-06	. . .	NUT, (ADDED BY RAF MOD 7211.019-4).	0150	10
R	MS21042-3	. . .	NUT, (ADDED BY RAF MOD 7211.019-4).	0150	14
R	105	. . .	ANGLE, (VZ0031) (ADDED BY RAF MOD 7211.019-4)	0150	2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
707
PARTS CATALOG (MAINTENANCE)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R R R R	17A	391-25-50-74131-107	.	RUBBER, CELLULAR (VZ0031) (ADDED BY RAF MOD						0150	1
				7211.019-4)							
	115	2041900-0101	.	TRAY, MOUNTING (V29635) (ADDED BY RAF MOD						0150	1
				7211.019-4)							
			.	FOR REFERENCE TO OTHER SHELF DETAILS, SEE NHA						5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

RAF
NOV 21/01

24-09-17A

DETAILED PARTS LIST
24-09-17A
PAGE 5

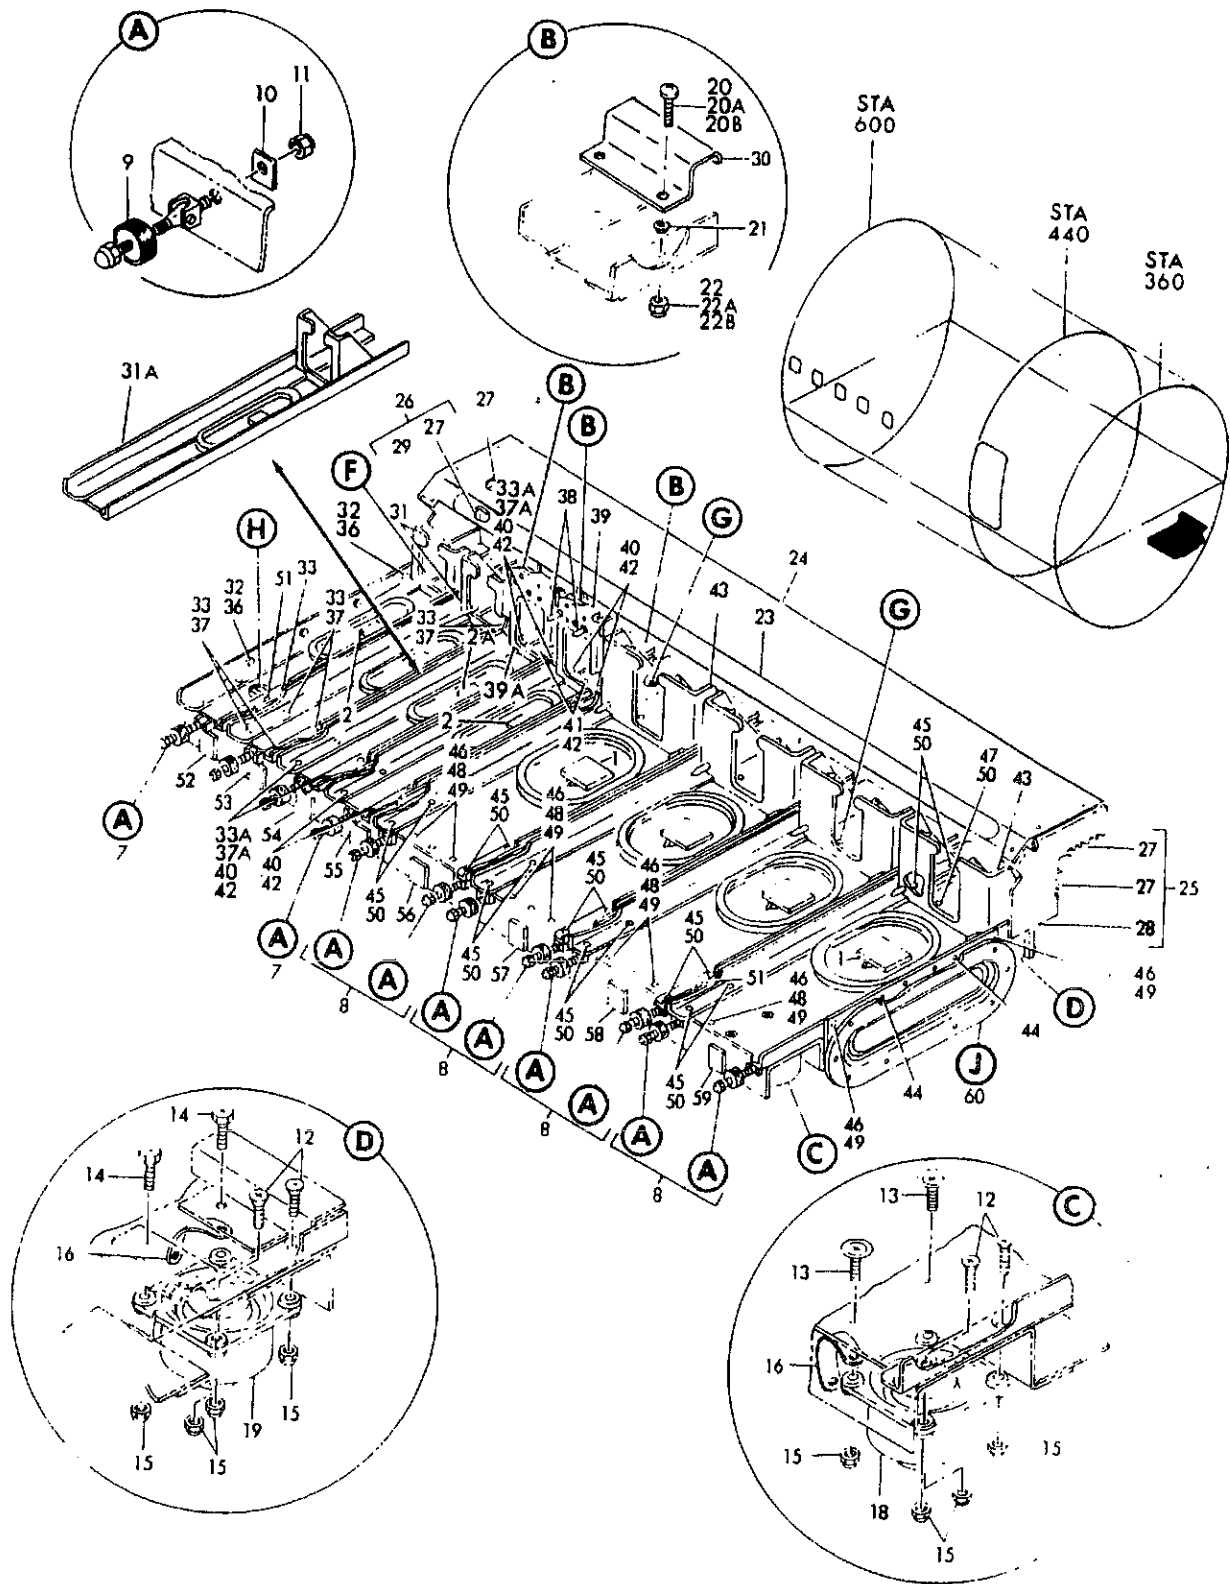


FIGURE 29F. SHELF ASSY, ELECTRONIC RACK COMMUNICATION EQUIPMENT (SHELF NO. 4 (H)) (SHEET 1)

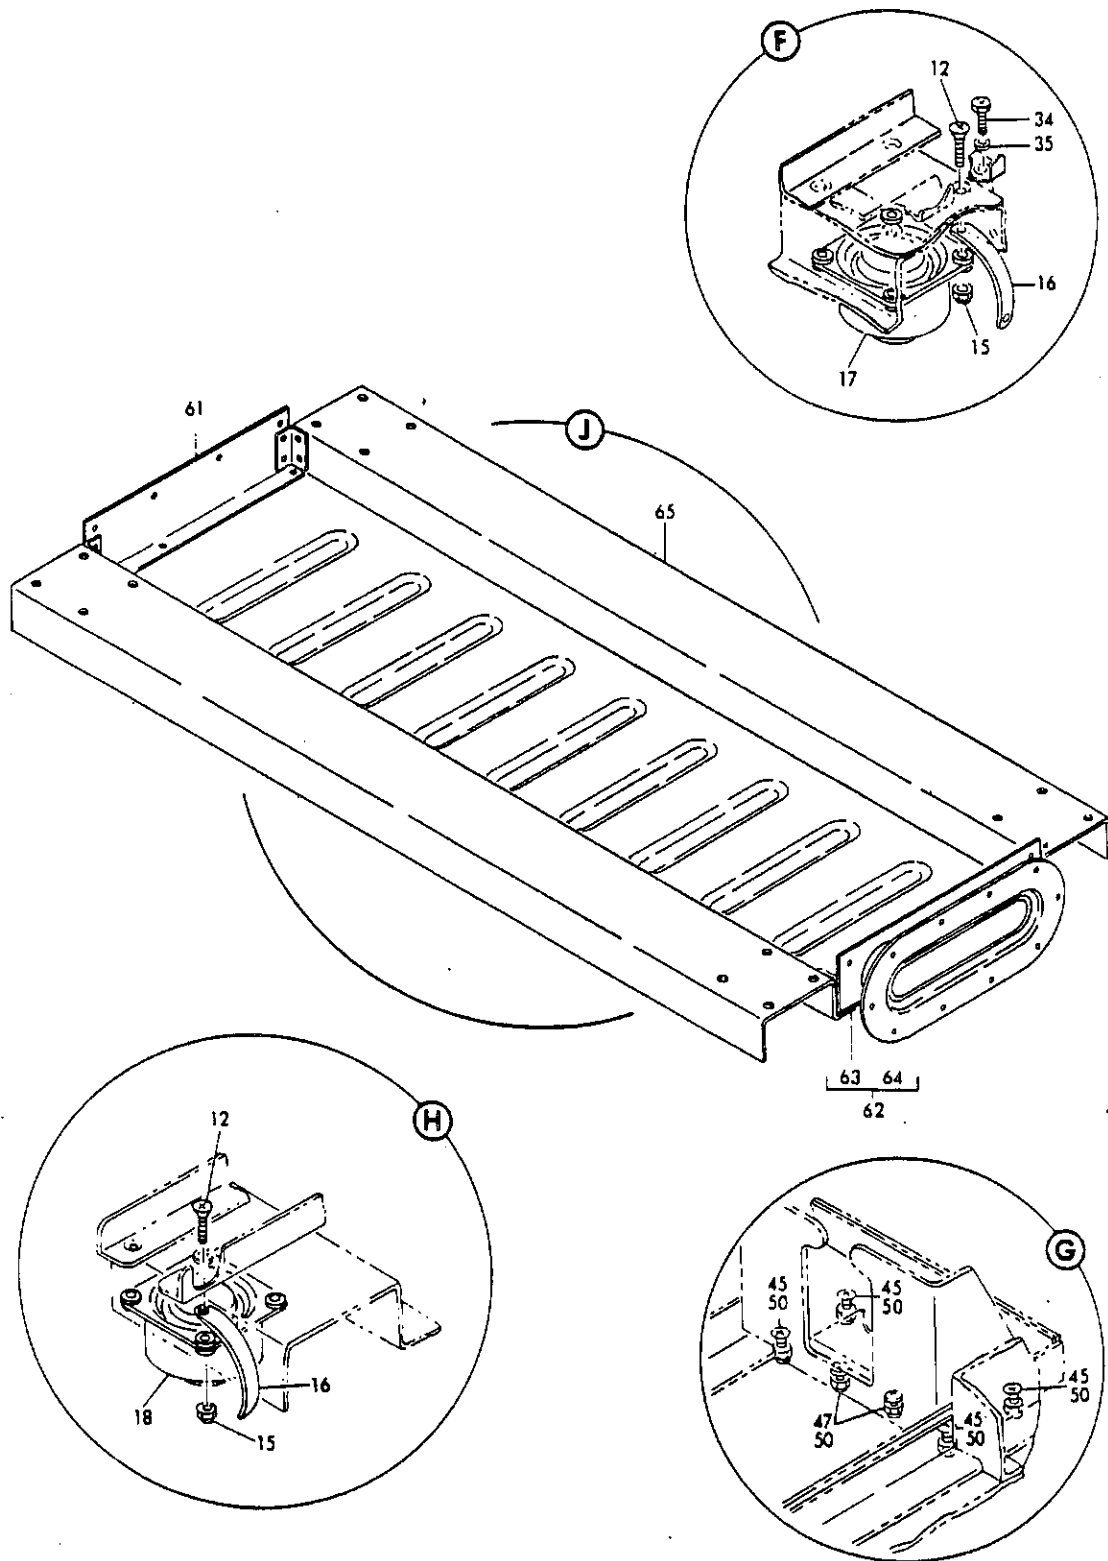


FIGURE 29F. SHELF ASSY, ELECTRONIC RACK COMMUNICATION EQUIPMENT (SHELF NO. 4 LH) (SHEET 2)

NOV 21/90

24-09-29F

DETAILED PARTS LIST
24-09-29F
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
29F	65-18714-32		SHELF ASSY, ELECTRONIC RACK COMMUNICATION EQUIPMENT . . . (SHELF NO. 4 LH) (SEE FIG. 1C, ITEM 4 AND FIG. 1D, ITEM 4)	5199	RF
1	66-12450-1		. PLATE, COOLING AIR ORIFICE COVER.	5199	4
2	66-12450-2		. PLATE, COOLING AIR ORIFICE COVER.	5199	3
2A	66-12450-2		. PLATE, COOLING AIR ORIFICE COVER.	5199	1
7	65-5270		. HOLD DOWN INSTL, 1/4 ATR CASE FRONT	5199	4
8	65-5270-2		. HOLD DOWN INSTL, 1/2 ATR CASE FRONT	5199	8
9	121366-707		. . BOLT ASSY, (HOLLINGSHEAD-PRYOR ENTERPRISES) (USED ON 65-5270) (OPTIONAL 66-1390 FIG. 106)	5199	1
9	66-1390		. . BOLT ASSY, (USED ON 65-5270) (SEE FIG. 106)	5199	1
9	121366-707		(OPTIONAL TO 121366-707 (HOLLINGSHEAD-PRYOR ENTERPRISES))	5199	2
9	66-1390		. . BOLT ASSY, (HOLLINGSHEAD-PRYOR ENTERPRISES) (USED ON 65-5270-2) (OPTIONAL 66-1390 FIG. 106)	5199	2
9	66-1390		. . BOLT ASSY, (USED ON 65-5270-2) (SEE FIG. 106) . . .	5199	2
9	66-1390		(OPTIONAL TO 121366-707 (HOLLINGSHEAD-PRYOR ENTERPRISES))	5199	2
10	66-1387		ATTACHING PARTS	5199	AR
11	BACN108Y53		. . FILLER, EXTRUDED.	5199	AR
11	BACN108Y53		. . NUT	5199	AR
12	NAS514P1032-10		. . SCREW	5199	12
13	BACSI2N10-10		. . SCREW ASSY.	5199	2
14	BACSI2CB3-10		. . SCREW	5199	2
15	NAS679A3W		. . NUT	5199	16
16	66-1650		. STRAP, BONDING.	5199	4
17	BACSI4E300B		. SHOCKMOUNT.	5199	1
18	BACSI4E500B		. SHOCKMOUNT.	5199	2
19	BACSI4E300BS		. SHOCKMOUNT.	5199	1
20	BACSI2CB3-10		. SCREW	5199	6
21	66-2955-3		. WASHER, SPECIAL REPAIR.	5199	6
22	NAS679A3W		. . NUT	5199	6
22	65-51790-14		. SUPPORT INSTL, DISCONNECT	5199	1
23	BAC27CEE306		. . SCOTCH-CAL, L4-A L4-9 L4-10 L4-F L4-G	5199	1
24	65-51789-32		. . BRACKET	5199	1
24	65-51789-32		ATTACHING PARTS	5199	8
24	65-51789-32		. . SCREW	5199	8
24	65-51789-32		. . NUT	5199	8
25	65-51789-25		. . BRACKET ASSY.	5199	1
26	65-51789-26		. . BRACKET ASSY.	5199	1
27	BACG20ZA150		. . GROMMET	5199	2
28	65-51789-23		. . BRACKET, (USED ON 65-51789-25).	5199	1
29	65-51789-24		. . BRACKET, (USED ON 65-51789-26).	5199	1
30	69-15310-1		. BRACKET, RADIO SHELVES WIRE SUPPORT	5199	3
31	65-18719-54		. TRAY ASSY, 1/4 ATR DPXB SHORT ON SHORT MOUNTING (SEE FIG. 76)	5199	2
31	65-18719-54		ATTACHING PARTS	5199	4
32	NAS514P632-5		. SCREW	5199	7
33	NAS514P1032-10		. SCREW	5199	1
34	BACSI2CB3-10		. SCREW	5199	1
35	AN960PD10		. WASHER.	5199	1
36	NAS679A06W		. . NUT	5199	4
37	NAS679A3W		. . NUT	5199	6
38	66-1398-6		. PIN, UNIT INDEX	5199	2
39	65-18719-1		. TRAY ASSY, 1/4 ATR SHORT ON SHORT MOUNTING (SEE FIG. 76)	5199	1
39A	65-18719-1		. TRAY ASSY, 1/4 ATR SHORT ON SHORT MOUNTING (SEE FIG. 76)	5199	1
39A	65-18719-1		ATTACHING PARTS	5199	12
40	NAS514P1032-10		. SCREW	5199	2
41	BACSI2CB3-10		. SCREW	5199	14
42	NAS679A3W		. . NUT	5199	14
43	65-18719-38		. TRAY ASSY, 1/2 ATR DPA SHORT ON SHORT MOUNTING (SEE FIG. 86)	5199	4
43	65-18719-38		ATTACHING PARTS	5199	4
44	MS20426B4		. RIVET	5199	4
45	NAS514P1032-10		. SCREW	5199	28
46	NAS514P632-5		. SCREW	5199	12

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
29F	47	BACS12CB3-10	.	SCREW	.	.	.	.	5199	7
	48	BACW10AL1	.	WASHER	.	.	.	.	5199	10
	49	NAS679A06W	.	NUT	.	.	.	.	5199	12
	50	NAS679A3W	.	NUT	.	.	.	.	5199	35
			.	-----*	.	.	.	.		
	51	66-1383-3	.	SEAL	.	.	.	.	5199	7
	52	65-1945-13	.	PLATE, IDENTIFICATION	.	.	.	.	5199	1
	53	65-1945-4	.	PLATE, IDENTIFICATION	.	.	.	.	5199	1
	54	65-1945-48	.	PLATE, IDENTIFICATION	.	.	.	.	5199	1
	55	65-1945-158	.	PLATE, IDENTIFICATION	.	.	.	.	5199	1
	56	65-1945-196	.	PLATE, IDENTIFICATION	.	.	.	.	5199	1
	57	65-1945-195	.	PLATE, IDENTIFICATION	.	.	.	.	5199	1
	58	65-1945-194	.	PLATE, IDENTIFICATION	.	.	.	.	5199	1
	59	65-1945-193	.	PLATE, IDENTIFICATION	.	.	.	.	5199	1
			.	ATTACHING PARTS	.	.	.	.		
		BACS12CB04-6	.	SCREW	.	.	.	.	5199	16
		NAS679A04W	.	NUT	.	.	.	.	5199	16
			.	-----*	.	.	.	.		
	60	65-5207-3	.	SUPPORT ASSY, MOUNTING SHORT TRAY	.	.	.	.	5199	1
	61	69-1327	.	PANEL, END.	.	.	.	.	5199	1
	62	69-1334-3	.	PANEL ASSY, DUCT ATTACHING LOWER SHELF END.	.	.	.	.	5199	1
	63	69-1334-7	.	WELD ASSY	.	.	.	.	5199	1
	64	66-1337	.	SEAL, AIR	.	.	.	.	5199	1
	65	65-1649-1	.	SHELF ASSY.	.	.	.	.	5199	1
			.		.	.	.	.		
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

BOEING
707
PARTS CATALOG (MAINTENANCE)

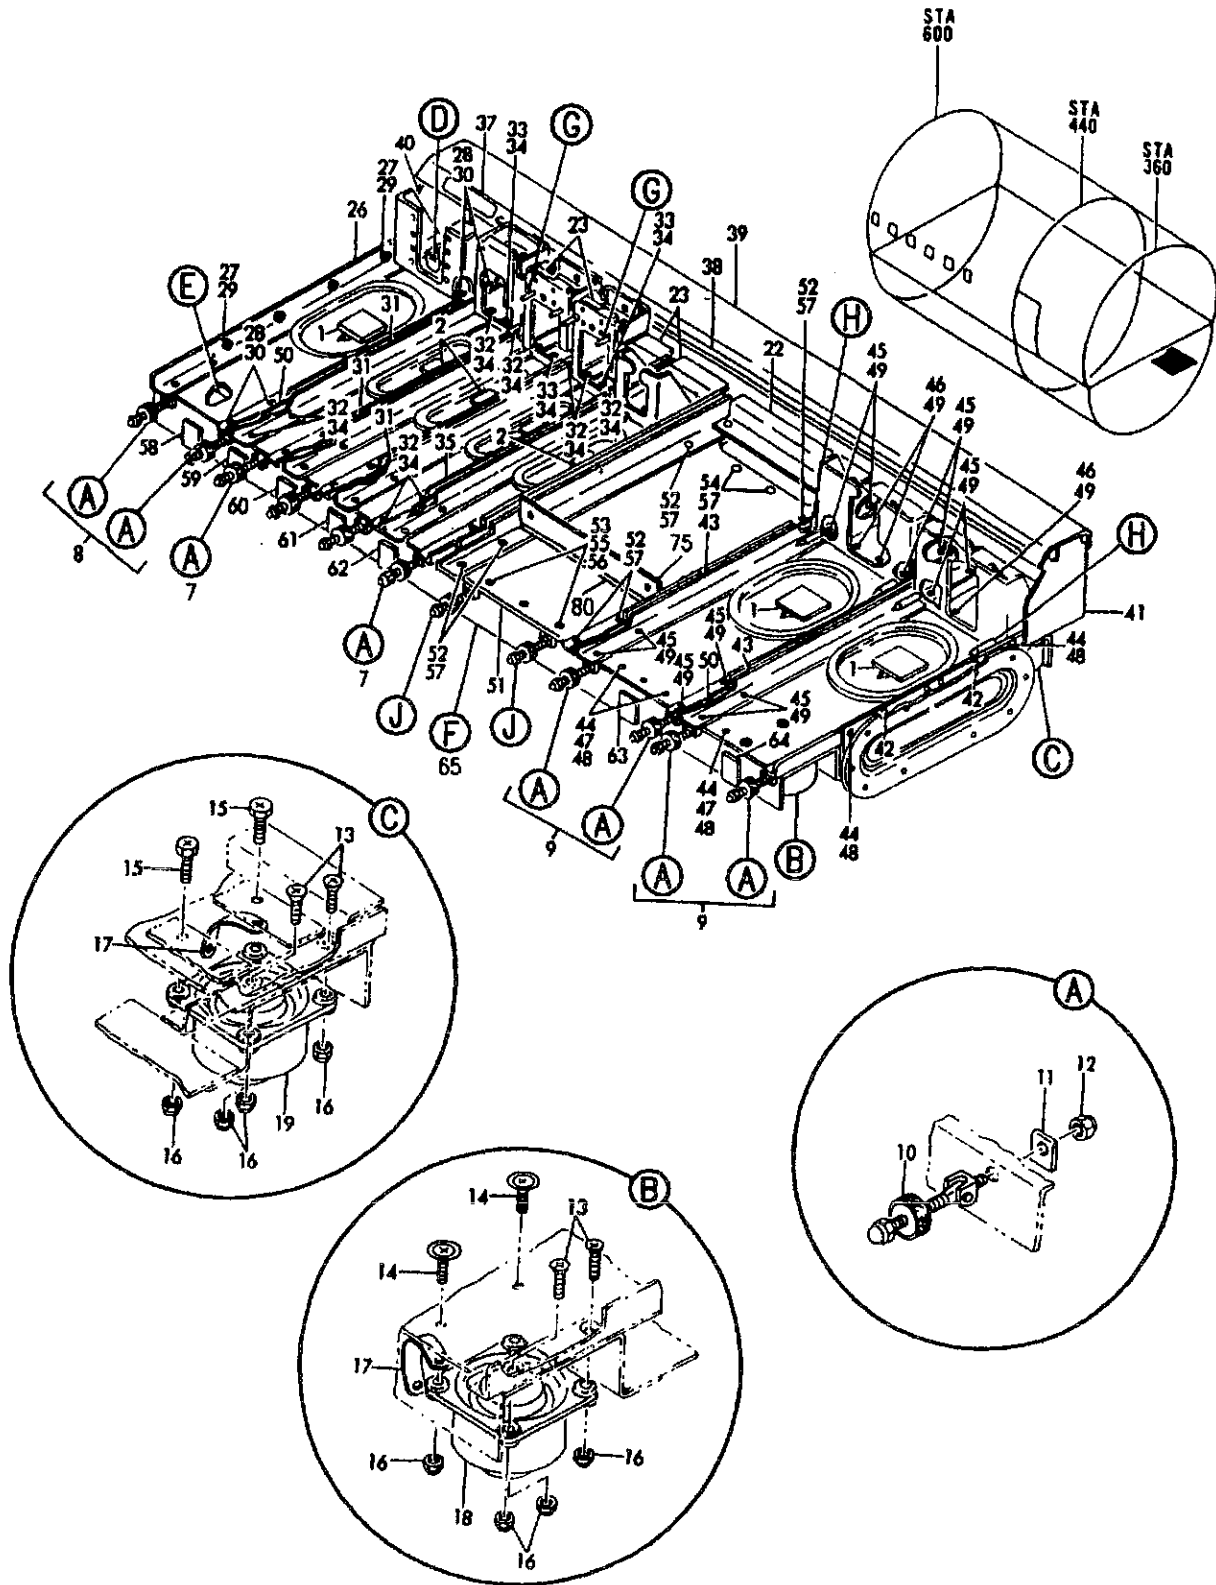



FIGURE 29G. SHELF ASSY, ELECTRONIC RACK COMMUNICATION EQUIPMENT (SHELF NO. 4 LH) (SHEET 1)

DETAILED PARTS LIST
24-09-29G
PAGE 0

24-09-29G

NOV 21/01

BOEING
707
PARTS CATALOG (MAINTENANCE)

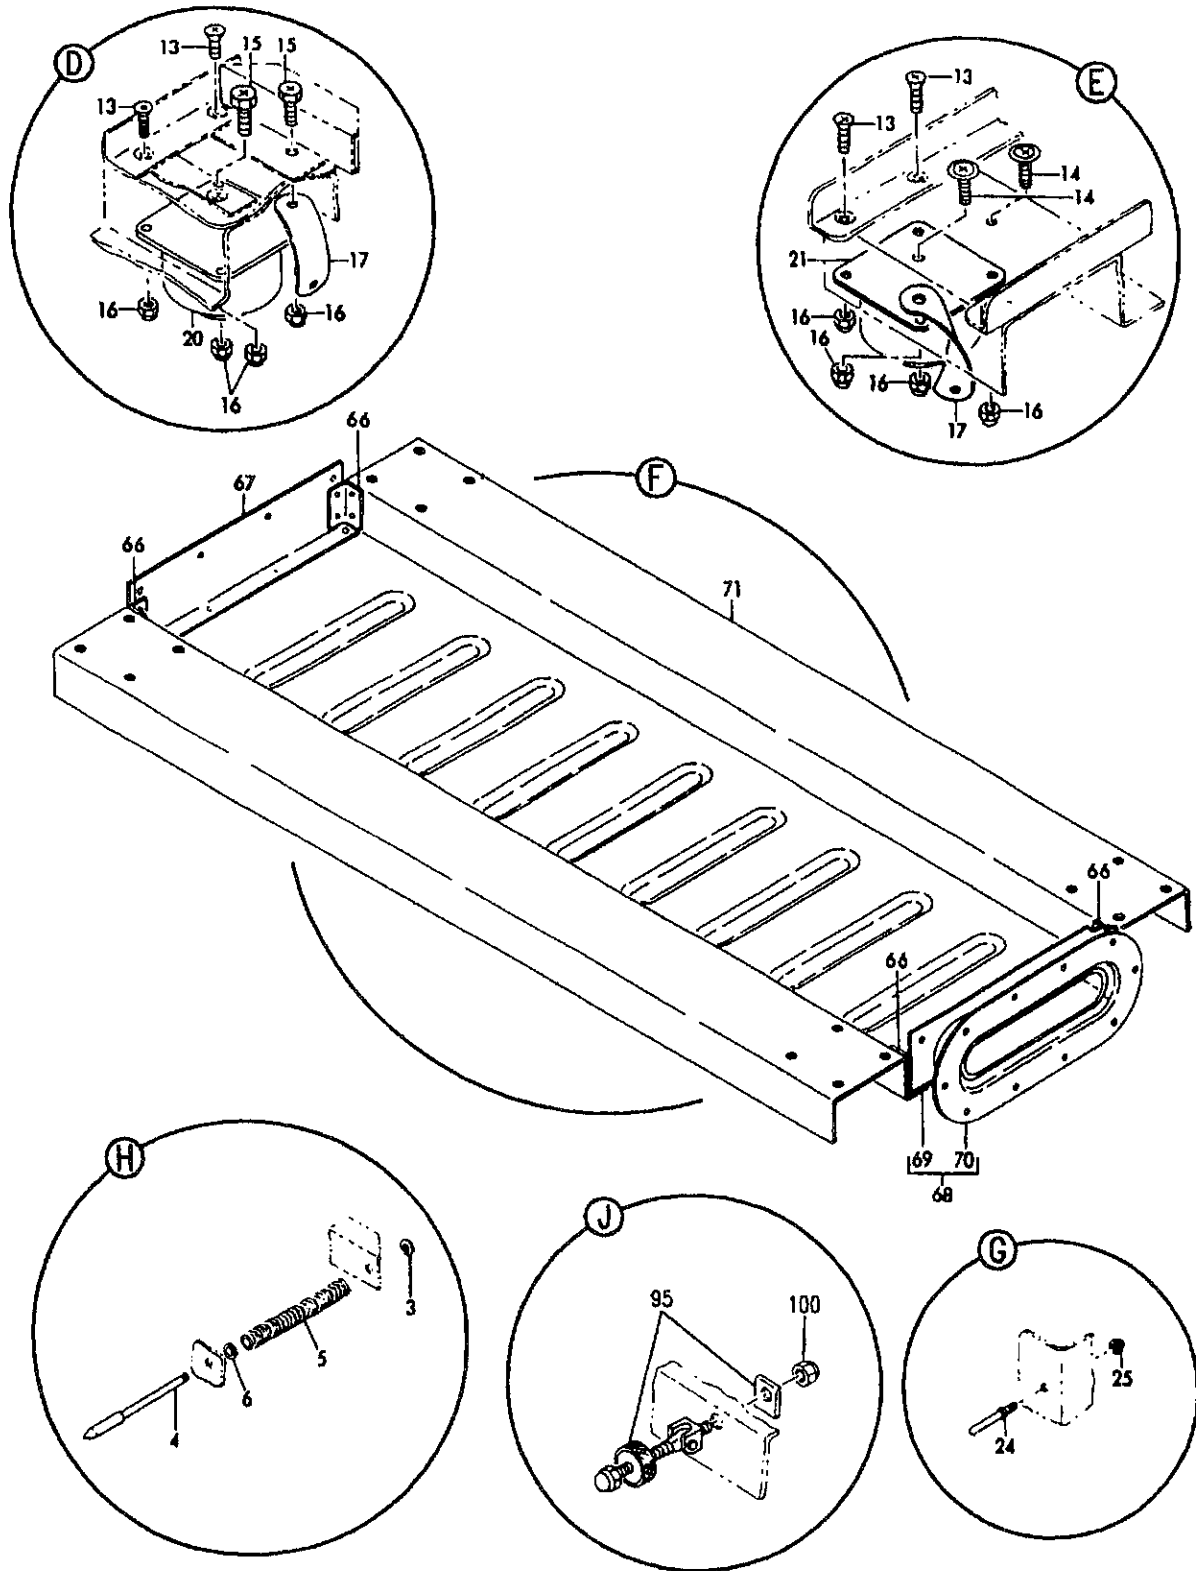

A 2409029G SHIT 2 REV 272

FIGURE 29G. SHELF ASSY, ELECTRONIC RACK COMMUNICATION EQUIPMENT (SHELF NO. 4 LH) (SHEET 2)

NOV 21/01

24-09-29G

DETAILED PARTS LIST
24-09-29G
PAGE 1

BOEING



707

PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
29G	65-18714-33	SHELF ASSY, ELECTRONIC RACK COMMUNICATION EQUIPMENT . . . (SHELF NO. 4 LH) (DELETED BY RAF MOD 7211.019-4) (SEE FIG. 18, ITEM 4)	0150	RF
	391-25-50-74132-001	SHELF ASSY, ELECTRONIC RACK COMMUNICATION EQUIPMENT . . . (SHELF NO. 4 LH) (VZ0031) (65-18714-33 MODIFIED BY RAF MOD 7211.019-4)	0150	RF
1	66-12450-1	. PLATE, COOLING AIR ORIFICE COVER.	0150	3
2	66-12450-2	. PLATE, COOLING AIR ORIFICE COVER.	0150	4
3	NAS670-25	. RING.	0150	4
4	69-14507-2	. PIN, HOLD DOWN.	0150	4
5	63-1350	. SPRING, UNIT HOLD DOWN PIN COMPRESSION.	0150	4
6	NAS620-416	. WASHER.	0150	4
7	65-5270	. HOLD DOWN INSTL, 1/4 ATR CASE FRONT	0150	4
8	65-5270-1	. HOLD DOWN INSTL, 3/8 ATR CASE FRONT	0150	1
9	65-5270-2	. HOLD DOWN INSTL, 1/2 ATR CASE FRONT	0150	2
10	121366-707	. . BOLT ASSY, (HOLLINGSHEAD-PRYOR ENTERPRISES) (USED ON 65-5270) (OPTIONAL 66-1390 FIG. 106)	0150	1
10	66-1390	. . BOLT ASSY, (USED ON 65-5270) (SEE FIG. 106) (OPTIONAL TO 121366-707 (HOLLINGSHEAD-PRYOR ENTERPRISES))	0150	1
10	121366-707	. . BOLT ASSY, (HOLLINGSHEAD-PRYOR ENTERPRISES) (USED ON 65-5270-1 AND -2) (OPTIONAL 66-1390 FIG. 106)	0150	2
10	66-1390	. . BOLT ASSY, (USED ON 65-5270-1 AND -2) (SEE FIG. . . 106) (OPTIONAL TO 121366-707 (HOLLINGSHEAD-PRYOR ENTERPRISES))	0150	2
		ATTACHING PARTS		
11	66-1387	. . FILLER, EXTRUDED.	0150	AR
12	BACN10BY53	. . NUT	0150	AR
		-----*		
13	NAS514P1032-10	. SCREW	0150	8
14	BACS12N10-10	. SCREW ASSY.	0150	4
15	BACS12CB3-10	. SCREW	0150	4
16	NAS679A3W	. NUT	0150	16
17	66-1650	. STRAP, BONDING.	0150	4
18	BACS14E400B	. SHOCKMOUNT.	0150	1
19	BACS14G200BS	. SHOCKMOUNT.	0150	1
20	BACS14E200B	. SHOCKMOUNT.	0150	1
21	BACS14E300B	. SHOCKMOUNT.	0150	1
22	69-15310-6	. BRACKET	0150	1
23	69-15310-1	. BRACKET	0150	4
		ATTACHING PARTS		
	BACS12CB3-10	. SCREW	0150	10
	66-2955-3	. WASHER, SPECIAL REPAIR.	0150	10
	NAS679A3W	. NUT	0150	10
		-----*		
24	66-1398-4	. PIN, INDEX.	0150	4
25	NAS679A06W	. NUT	0150	4
26	65-18719-19	. TRAY ASSY, 3/8 ATR DPX SHORT ON SHORT MOUNTING (SEE FIG. 82)	0150	1
		ATTACHING PARTS		
27	NAS514P632-5	. SCREW	0150	4
28	NAS514P1032-10	. SCREW	0150	4
29	NAS679A06W	. NUT	0150	4
30	NAS679A3W	. NUT	0150	4
		-----*		
31	65-18719-1	. TRAY ASSY, 1/4 ATR SHORT ON SHORT MOUNTING (SEE FIG. 76)	0150	3
		ATTACHING PARTS		
32	NAS514P1032-10	. SCREW	0150	18
33	BACS12CB3-10	. SCREW	0150	3
34	NAS679A3W	. NUT	0150	21
		-----*		
35	65-18719-54	. TRAY ASSY, 1/4 ATR SHORT ON SHORT MOUNTING (SEE FIG. 76)	0150	1
		ATTACHING PARTS		
	NAS514P1032-10	. SCREW	0150	6
	NAS679A3W	. NUT	0150	6
		-----*		
	65-51790-8	. SUPPORT INSTL, DISCONNECT	0150	1
37	BACM9L9CSB	. . SCOTCH-CAL, L4-B L4-A L4-C.	0150	1
38	BACM9L14J	. . SCOTCH-CAL, L4-1 THRU L4-11	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
29G 39	65-51789-27	. . .	BRACKET	0150	1
		. . .	ATTACHING PARTS		
	BAC512CB3-7	. . .	SCREW	0150	8
	BACN10FX1W	. . .	NUT	0150	8
		. . .	-----*		
40	65-51789-21	. . .	BRACKET	0150	1
41	65-51789-22	. . .	BRACKET	0150	1
		. . .	ATTACHING PARTS		
	MS20426D5	. . .	RIVET	0150	4
	BACS47G12D28F	. . .	SPACER.	0150	2
		. . .	-----*		
42	MS2042684	. . .	RIVET	0150	4
43	65-18719-38	. . .	TRAY ASSY, 1/2 ATR DPA SHORT ON SHORT MOUNTING (SEE FIG. 86)	0150	2
		. . .	ATTACHING PARTS		
44	NAS514P632-5	. . .	SCREW	0150	6
45	NAS514P1032-10	. . .	SCREW	0150	12
46	BACS12CB3-10	. . .	SCREW	0150	3
47	BACW10AL1	. . .	WASHER.	0150	4
48	NAS679A06W	. . .	NUT	0150	6
49	NAS679A3W	. . .	NUT	0150	15
		. . .	-----*		
50	66-1383-3	. . .	SEAL, UNIT TRAY	0150	7
51	69-1522-28	. . .	COVER ASSY.	0150	1
		. . .	ATTACHING PARTS		
52	NAS514P1032-10	. . .	SCREW	0150	6
53	NAS514P632-5	. . .	SCREW	0150	3
54	BACS12CB3-10	. . .	SCREW	0150	2
55	BACW10AL1	. . .	WASHER.	0150	3
56	NAS679A06W	. . .	NUT	0150	3
57	NAS679A3W	. . .	NUT	0150	8
		. . .	-----*		
58	65-1945-168	. . .	PLATE, IDENTIFICATION	0150	1
59	65-1945-48	. . .	PLATE, IDENTIFICATION	0150	1
60	65-1945-8	. . .	PLATE, IDENTIFICATION	0150	1
61	65-1945-27	. . .	PLATE, IDENTIFICATION	0150	1
62	65-1945-229	. . .	PLATE, IDENTIFICATION	0150	1
63	65-1945-194	. . .	PLATE, IDENTIFICATION	0150	1
64	65-1945-193	. . .	PLATE, IDENTIFICATION	0150	1
		. . .	ATTACHING PARTS		
	BACS12CB04-6	. . .	SCREW	0150	14
	NAS679A04W	. . .	NUT	0150	14
		. . .	-----*		
65	65-5207-3	. . .	SUPPORT ASSY, MOUNTING SHORT TRAY	0150	1
66	65-1685	. . .	CLIP, ATTACH ANGLE.	0150	4
		. . .	ATTACHING PARTS		
	MS20470D4	. . .	RIVET	0150	16
		. . .	-----*		
67	69-1327	. . .	PANEL, END.	0150	1
68	69-1334-3	. . .	PANEL ASSY, DUCT ATTACHING LOWER SHELF END.	0150	1
69	69-1334-7	. . .	WELD ASSY	0150	1
70	66-1337	. . .	SEAL, AIR	0150	1
71	65-1649-1	. . .	SHELF ASSY.	0150	1
R 75	391-25-50-74132-103	. . .	PLATE, WEAR (V20031) (ADDED BY 7211.019-4)	0150	1
R 80	391-25-50-74132-101	. . .	BRACKET, (V20031) (ADDED BY 7211.019-4)	0150	1
		. . .	ATTACHING PARTS		
R	NAS1096-3-9	. . .	SCREW	0150	2
R	MS21051-3	. . .	NUT, ANCHOR	0150	2
		. . .	-----*		
R 95	66-1390	. . .	HOLD DOWN ASSY, (ADDED BY RAF MOD 7211.019-4)	0150	2
R 100	MS21042-3	. . .	NUT	0150	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

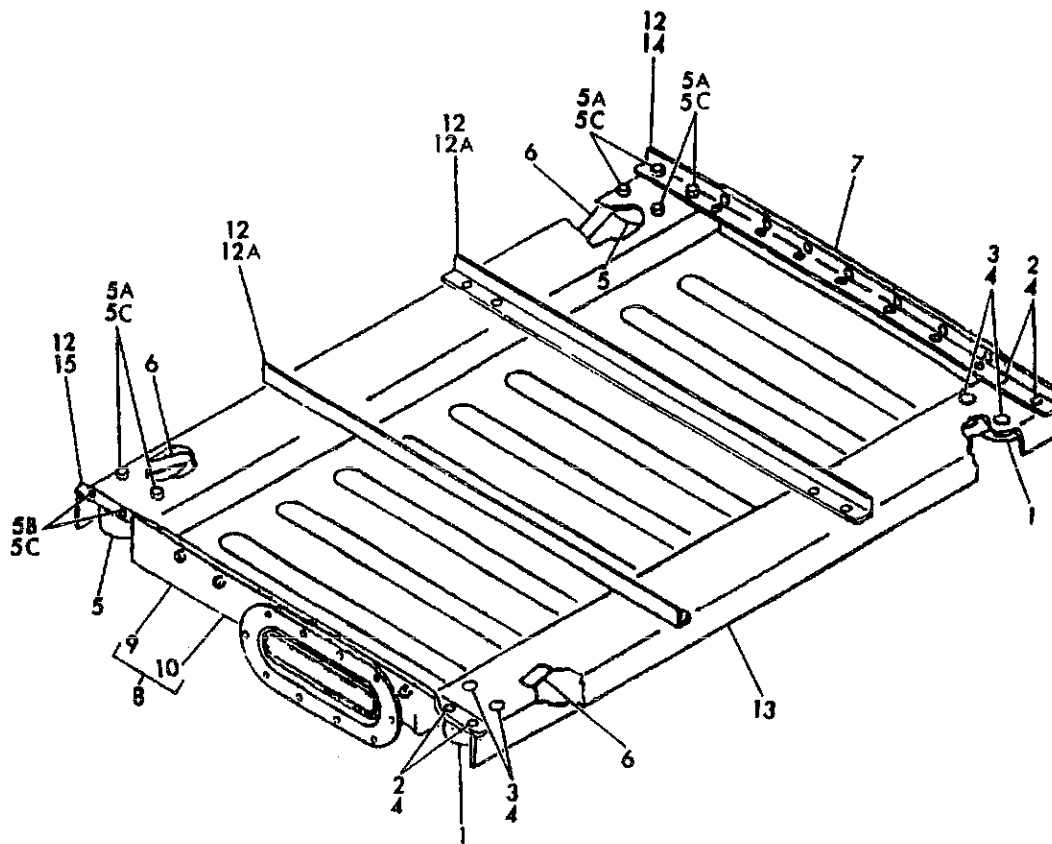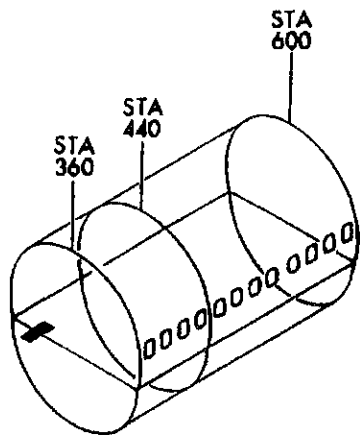

A 2409030 REV 265

FIGURE 30. SHELF ASSY, R.H. SIDE ELECTRONIC RACK (SHELF NO.1 AND 2)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
30	65-1775		SHELF ASSY, SHELF NO. 2 RH SIDE NAVIGATION EQUIPMENT. . (SEE FIG. 1A, ITEM 6, FIG. 1B, ITEM 6, FIG. 1C, ITEM 6 AND FIG. 1D, ITEM 6)	5199	RF
1	BACS14E400B		. SHOCKMOUNT.	5199	2
			ATTACHING PARTS		
2	NAS514P1032-10		. SCREW	5199	4
3	BACS12N10-10		. SCREW ASSY.	5199	4
4	NAS679A3W		. NUT	5199	8
			-----*		
5	BACS14E400B		. SHOCKMOUNT.	5199	2
			ATTACHING PARTS		
5A	AN3-5A		. BOLT.	5199	6
5B	NAS514P1032-10		. SCREW	5199	2
5C	NAS679A3W		. NUT	5199	8
			-----*		
6	66-1650		. STRAP, ELECTRONIC SHELF BONDING	5199	4
7	69-1327-1		. PANEL, ELECTRONIC SHELF END	5199	1
			ATTACHING PARTS		
	NAS514P632-5		. SCREW	5199	7
	NAS679A06W		. NUT	5199	7
			-----*		
8	69-1334-2		. PANEL ASSY, DUCT ATTACHING SHELF END.	5199	1
			ATTACHING PARTS		
	NAS514P632-5		. SCREW	5199	5
	NAS679A06W		. NUT	5199	5
			-----*		
9	69-1334-6		. . WELD ASSY, DUCT ATTACHING SHELF END PANEL LONG. . .	5199	1
10	66-1337		. . SEAL, ELECTRONIC RACK SHELF END AIR	5199	1
12	66-1370		. RAIL, ELECTRONIC RACK LONG UNIT TRAY.	5199	4
			ATTACHING PARTS		
	NAS514P1032-10		. SCREW	5199	8
	NAS679A3W		. NUT	5199	8
			-----*		
13	65-1649		. SHELF ASSY, ELECTRONIC RACK	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

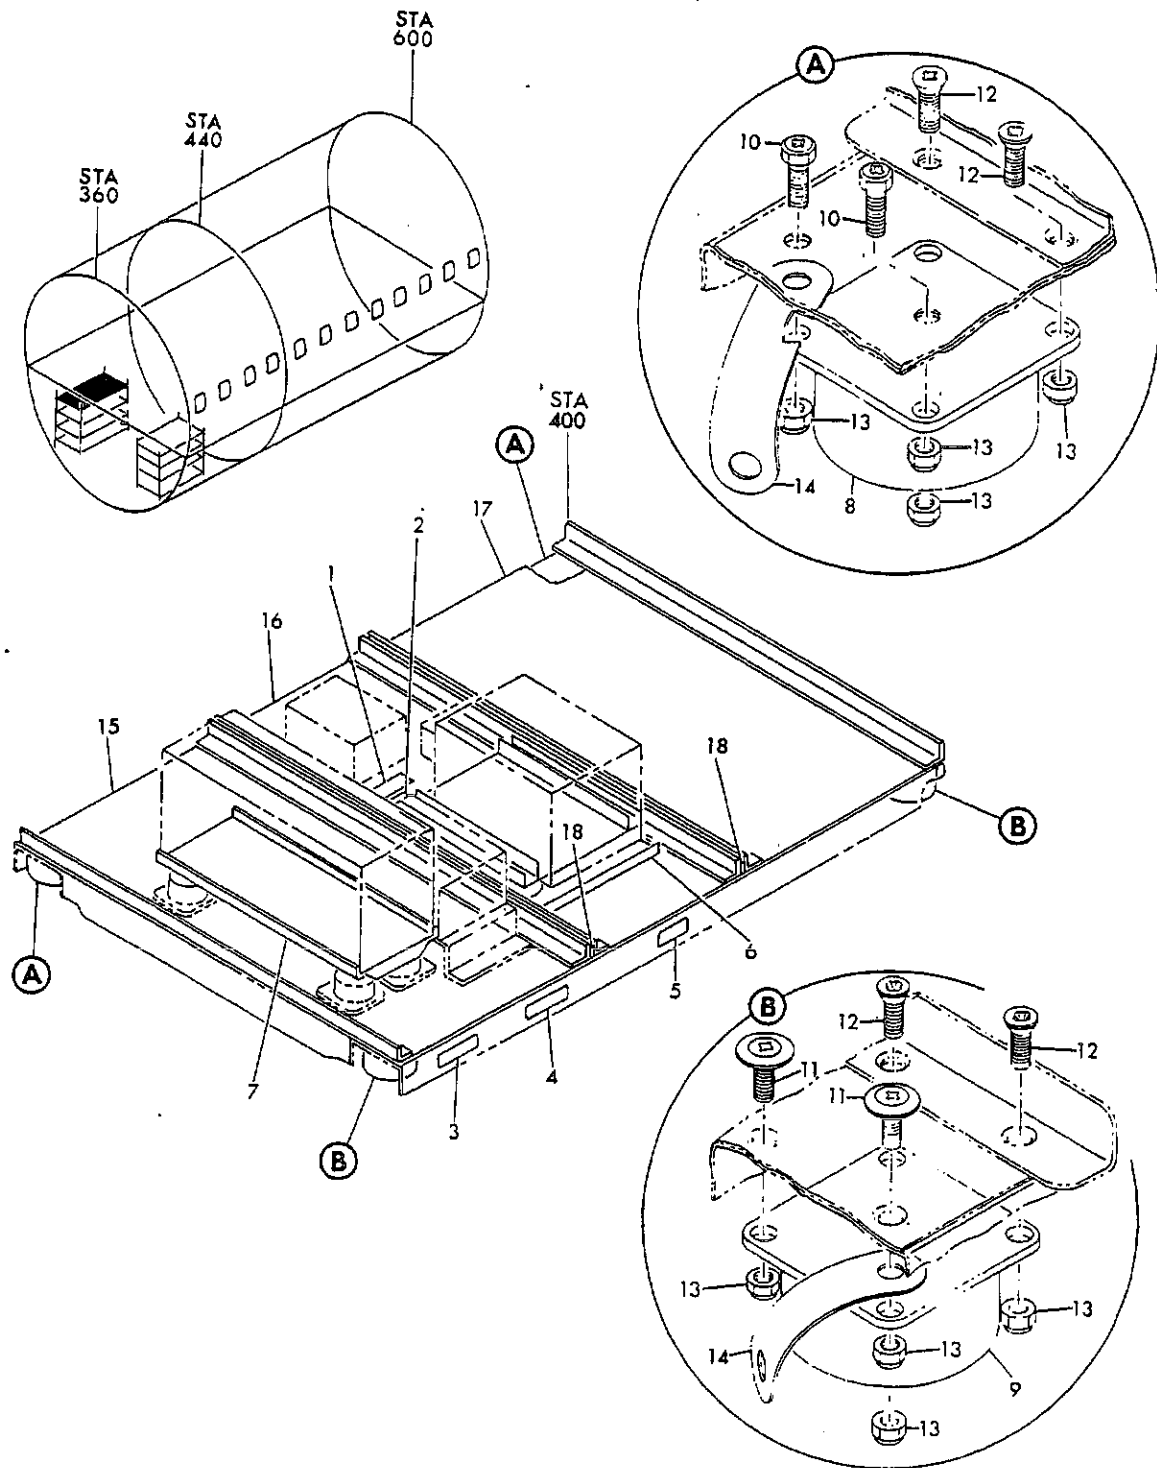


FIGURE 31D. SHELF ASSY, NUMBER 1 RIGHT HAND SIDE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
31D	65-18715-3		SHELF ASSY, NO. 1 RH SIDE (ADDED AND REWORKED BY RAF. MOD 7211.019-188) (SEE FIG. 18, ITEM 5)	0150	RF
1	QD33794-2		. PLACARD, ANTENNA SELECTOR (VZ0268).	0150	1
2	QD33794-3		. PLACARD, ANTENNA SWITCH (VZ0268).	0150	1
3	QD33794-1		. PLACARD, DME-A INTERROGATOR (VZ0268).	0150	1
4	QD33794		. PLACARD, DME-A POWER SUPPLY (VZ0268).	0150	1
5	QD33794-4		. PLACARD, UHF XCVR (VZ0268).	0150	1
6	MT4838ARCL64V		. RACK, UHF XCVR MOUNTING (VZ0268).	0150	1
7	RACK		. RACK, DME-A INTERROGATOR MOUNTING (VZ0268).	0150	1
	NAS602-7P		ATTACHING PARTS		
			. SCREW	0150	16
8	BACS14E3008		. SHOCKMOUNT.	0150	2
9	BACS14E4008		. SHOCKMOUNT.	0150	2
			ATTACHING PARTS		
10	BACS12CB3-10		. SCREW	0150	4
11	BACS12N10-10		. SCREW	0150	4
12	NAS514P1032-10		. SCREW	0150	8
13	BACN10JC3		. NUT	0150	16
14	66-1650		. STRAP, ELECTRONIC SHELF BONDING	0150	4
15	Q833749		. TRAY ASSY, DME (VZ0268)	0150	1
16	Q833748		. TRAY ASSY, (VZ0268)	0150	1
17	Q833748-3		. TRAY ASSY, (VZ0268)	0150	1
18	66-1383		. SEAL, TRAY.	0150	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

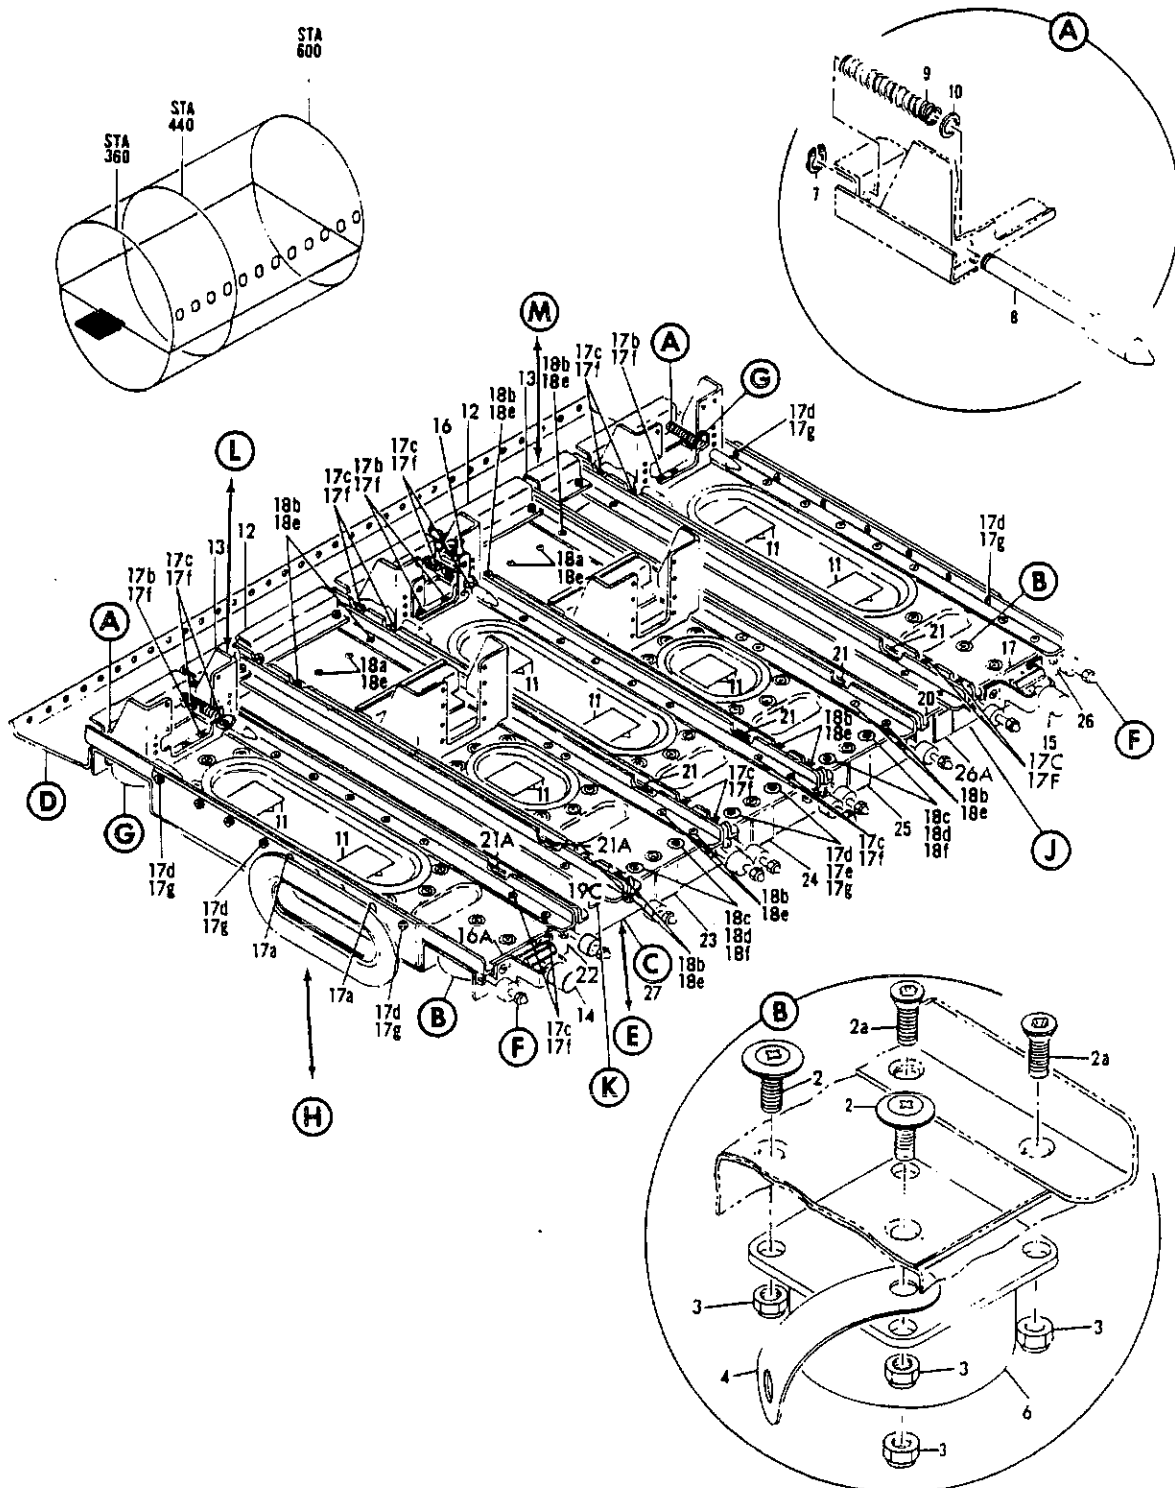


FIGURE 37. SHELF ASSY, ELECTRONIC RACK DOPPLER EQUIPMENT (SHELF NO. 1 RH) (SHEET 1)

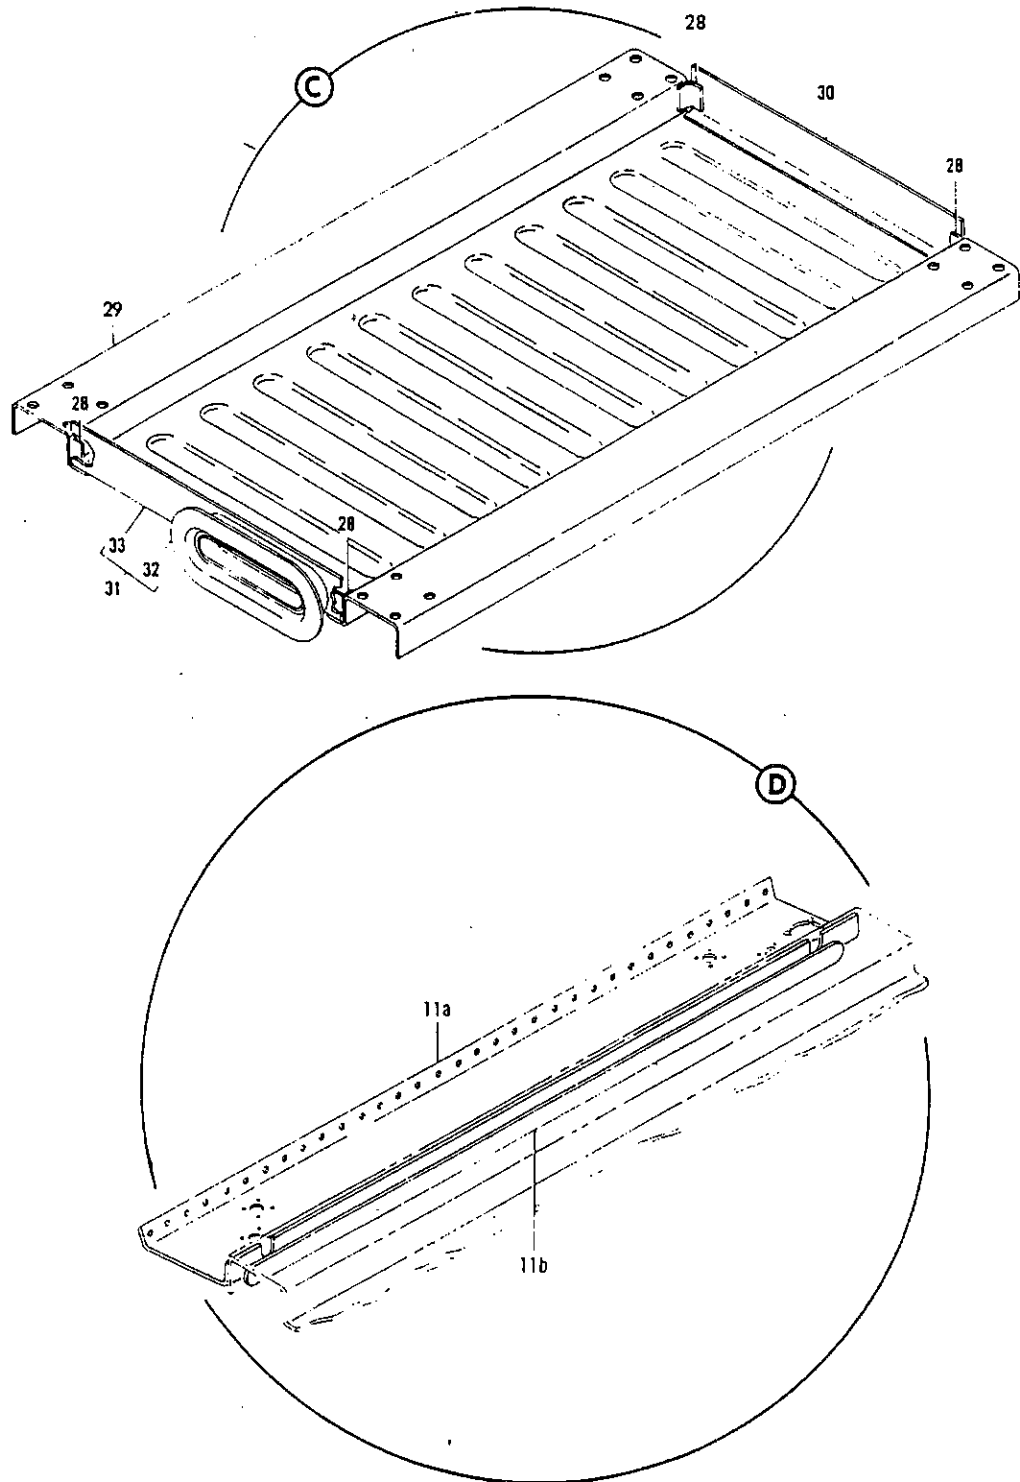


FIGURE 37. SHELF ASSY, ELECTRONIC RACK DOPPLER EQUIPMENT (SHELF NO. 1 RH) (SHEET 2)

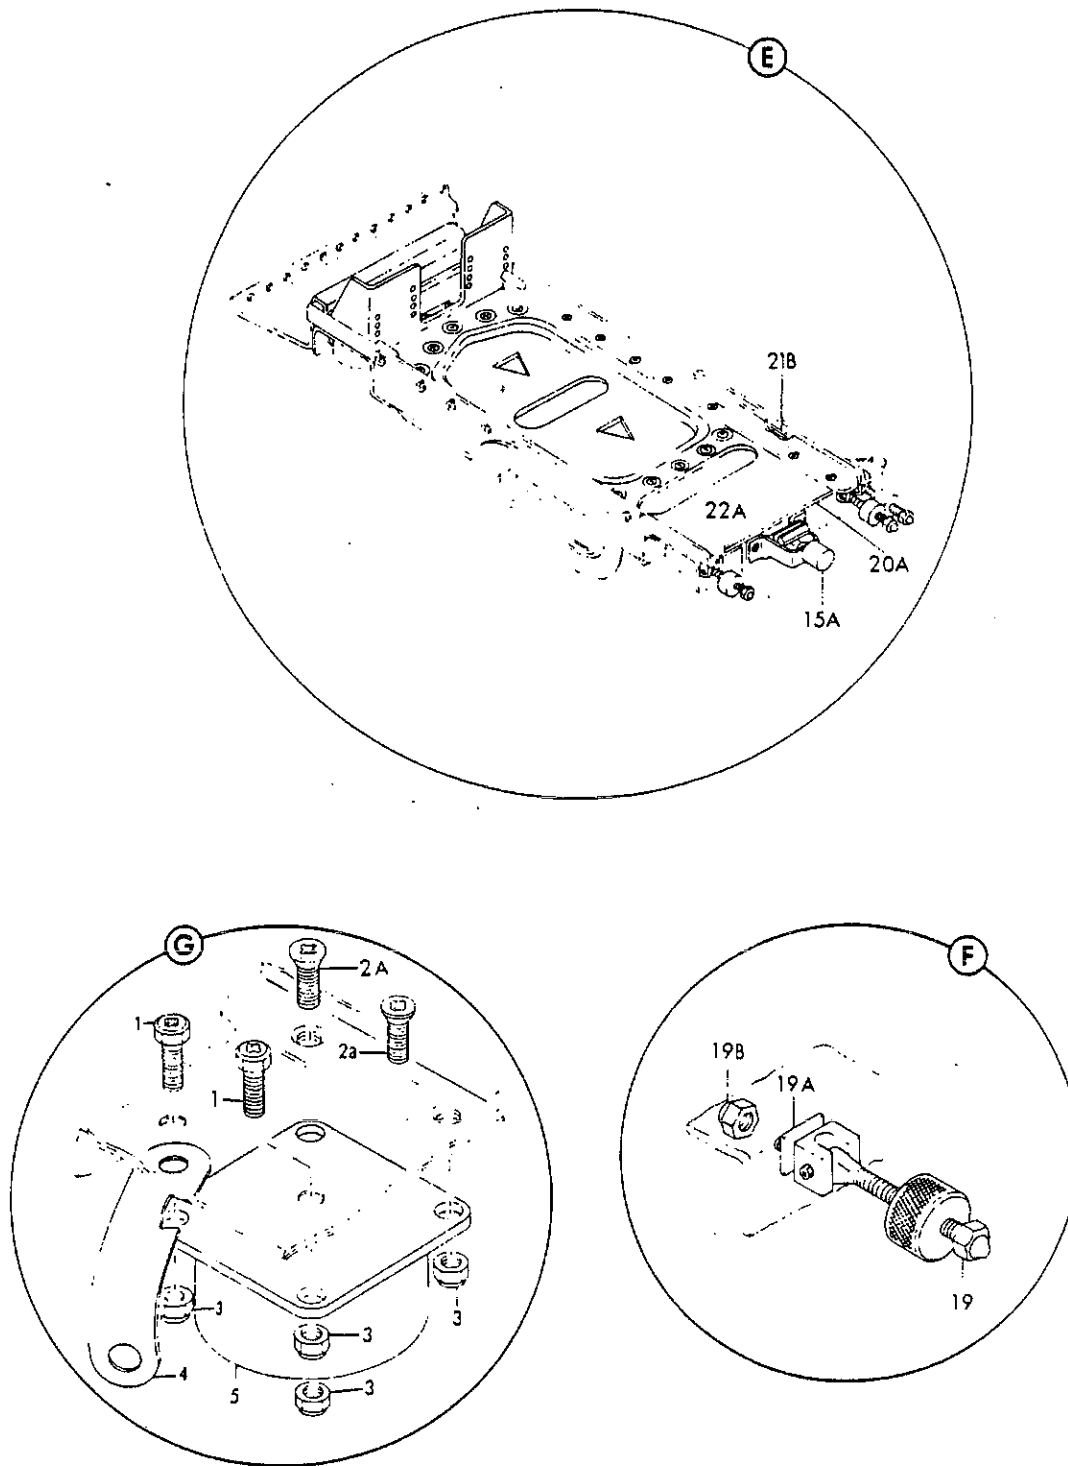


FIGURE 37. SHELF ASSY, ELECTRONIC RACK DOPPLER EQUIPMENT (SHELF NO. 1) (SHEET 3)

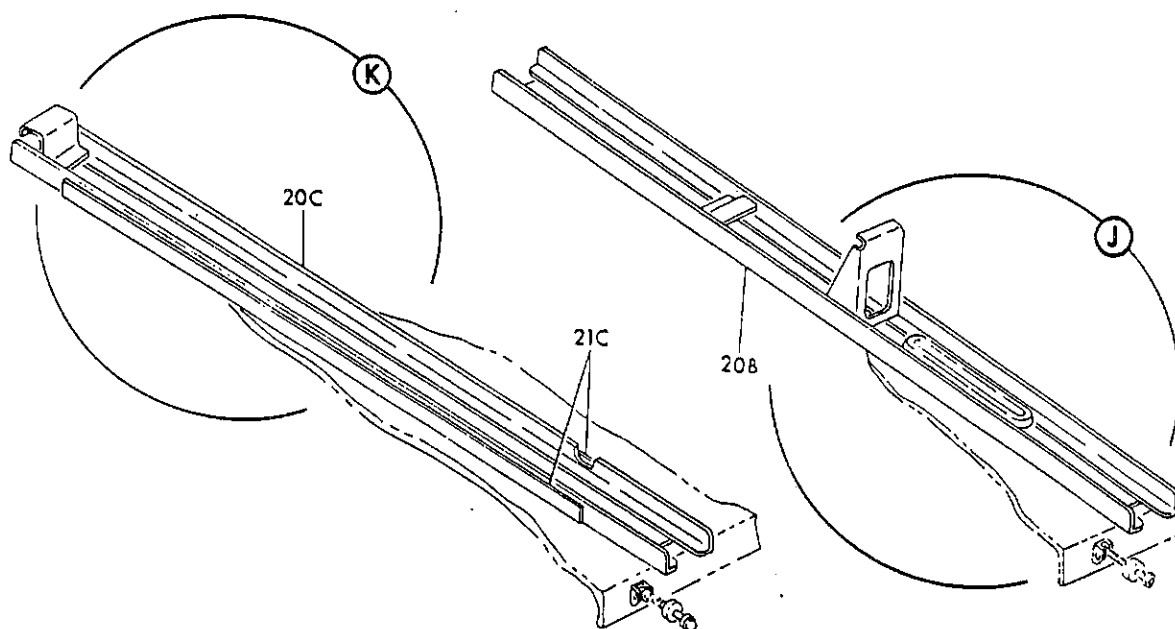
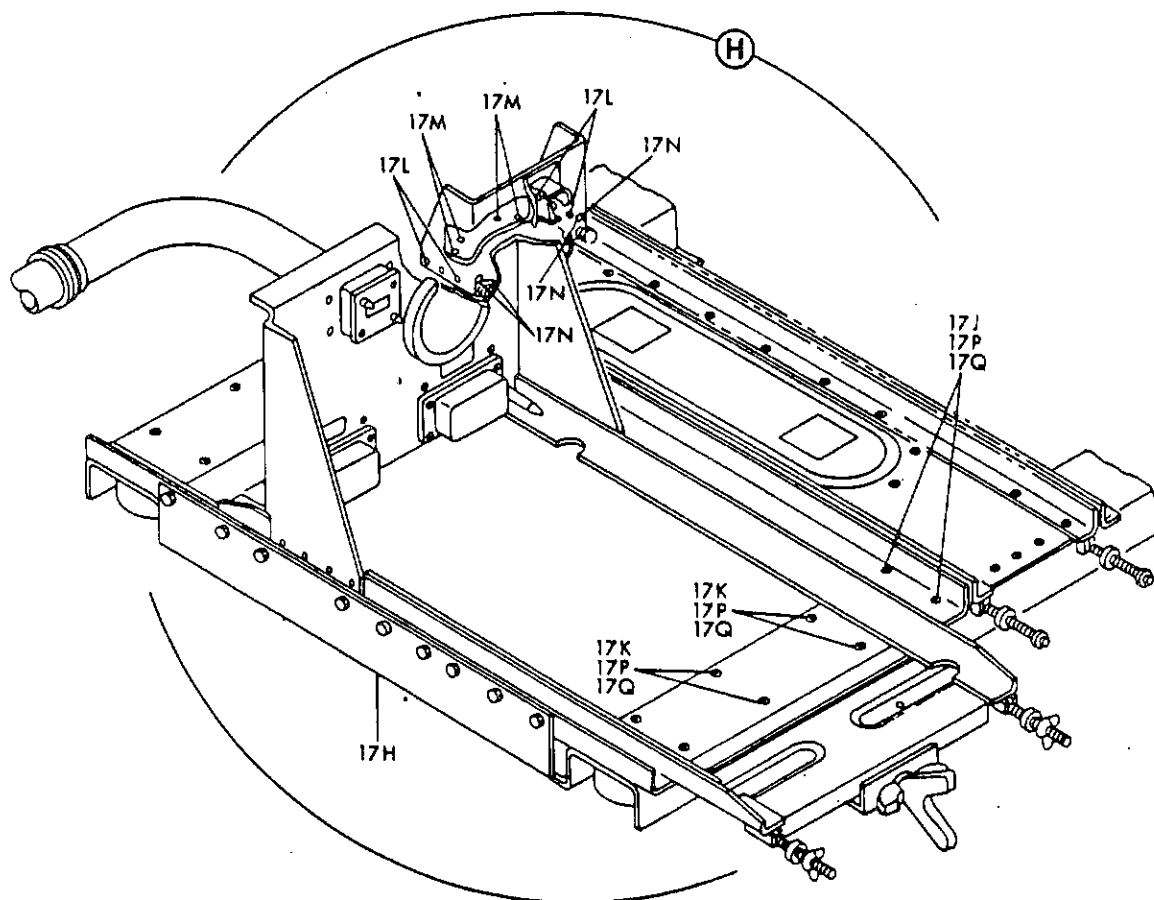


FIGURE 37. SHELF ASSY, ELECTRONIC RACK DOPPLER EQUIPMENT (SHELF NO. 1 RH) (SHEET 4)

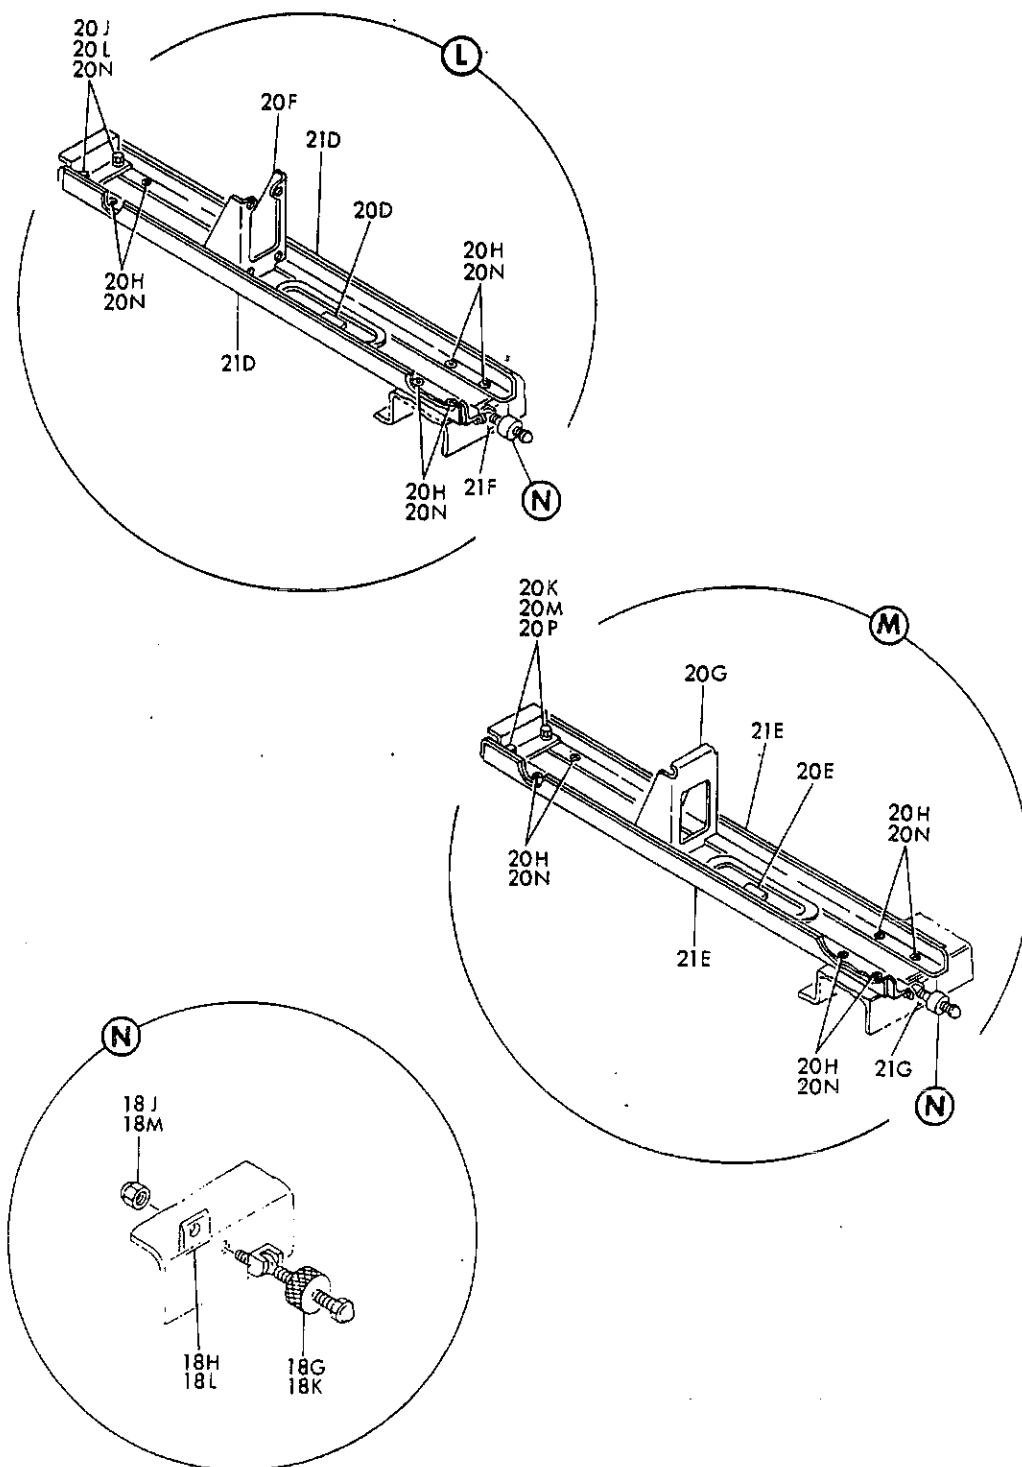


FIGURE 37. SHELF ASSY, ELECTRONIC RACK DOPPLER EQUIPMENT (SHELF NO. 1 RH) (SHEET 5)

BOEING
Intercontinental
707
PARTS CATALOG


FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 37	65-18715-3	SHELF ASSY, ELECTRONIC RACK DOPPLER EQUIPMENT (SHELF. . NO. 1 RH) (DELETED BY RAF MOD 7211.019-194) (SEE FIG. 1A, ITEM 5, FIG. 1B, ITEM 5, FIG. 1C, ITEM 5 AND FIG. 1D, ITEM 5)	0150	RF
R 1	BACS12CB3-10	. SCREW	0150	4
R 2	BACS12N10-10	. SCREW ASSY.	0150	4
R 2A	NAS514P1032-10	. SCREW	0150	8
R 3	NAS679A3W	. NUT	0150	16
R 4	66-1650	. STRAP, ELECTRONIC SHELF BONDING	0150	4
R 5	BACS14E300B	. SHOCKMOUNT.	0150	2
R 6	BACS14E400B	. SHOCKMOUNT.	0150	2
R 7	NAS670-25	. RING.	0150	6
R 8	69-14507-2	. PIN, EQUIPMENT HOLD DOWN.	0150	6
R 9	63-1350	. SPRING, COMPRESSION UNIT HOLD DOWN PIN.	0150	6
R 10	NAS620-416	. WASHER.	0150	6
R 11	66-12450-1	. PLATE, COOLING AIR ORIFICE COVER.	0150	8
R 11A	65-51790-1	. SUPPORT INSTL, ELEX RACKS DISCONNECT.	0150	1
R 11A	65-51789-1	. BRACKET	0150	1
R	MS20470D5	ATTACHING PARTS . RIVET	0150	4
R 11B	BACM9L9CRU	. SCOTCH-CAL, R1-1 TO R1-17	0150	1
R 12	69-15310-3	. BRACKET, RADIO RACK SHELVES WIRE SUPPORT.	0150	2
R 13	69-15310-1	. BRACKET, RADIO RACK SHELVES WIRE SUPPORT.	0150	2
R	BACS12CB3-10	ATTACHING PARTS . SCREW	0150	8
R	66-2955-3	. WASHER, SPECIAL REPAIR.	0150	8
R	NAS679A3W	. NUT	0150	8
R 14	69-23056-1	. EXTRACTOR INSTL, 1/2 ATR CASE (SEE FIG. 105).	0150	1
R 15	69-23056-2	. EXTRACTOR INSTL, 1/2 ATR CASE (SEE FIG. 105).	0150	1
R 16	66-1526-4	. SPACER, UNIT TRAY RECEPTACLE SUPPORT.	0150	1
R	NAS514P632-7	ATTACHING PARTS . SCREW	0150	4
R	BACN10FX61	. NUT	0150	4
R 16A	65-18719-13	. TRAY ASSY, 1/2 ATR DPA LONG ON LONG MOUNTING (SEE . . FIG. 87)	0150	1
R 17	65-18719-13	. TRAY ASSY, 1/2 ATR DPA LONG ON LONG MOUNTING (SEE . . FIG. 87)	0150	2
R	MS20426B4	ATTACHING PARTS . RIVET	0150	4
R 17B	BACS12CB3-10	. SCREW	0150	4
R 17C	NAS514P1032-10	. SCREW	0150	16
R 17D	NAS514P632-5	. SCREW	0150	15
R 17E	BACW10AL1	. WASHER.	0150	3
R 17F	NAS679A3W	. NUT	0150	20
R 17G	NAS679A06W	. NUT	0150	15
R 18	65-18719-33	. TRAY ASSY, ELECTRONIC RACK 1/2 ATR DPX2 SHORT ON LONG SPECIAL DOPPLER EQUIPMENT MOUNTING (SEE FIG. 90)	0150	2
R	BACS12CB3-10	ATTACHING PARTS . SCREW	0150	4
R 18B	NAS514P1032-10	. SCREW	0150	12
R 18C	NAS514P632-5	. SCREW	0150	6
R 18D	BACW10AL1	. WASHER.	0150	6
R 18E	NAS679A3W	. NUT	0150	16
R 18F	NAS679A06W	. NUT	0150	6
R 19	65-5270-2	. HOLD DOWN INSTL, 1/2 ATR CASE FRONT	0150	5
R 19	121366-707	. BOLT ASSY, (HOLLINGSHEAD-PRYOR ENTERPRISES) (OPTIONAL 66-1390 FIG. 106)	0150	2
R 19	66-1390	. BOLT ASSY, (SEE FIG. 106) (OPTIONAL TO 121366-707 (HOLLINGSHEAD-PRYOR ENTERPRISES))	0150	2
R 19A	66-1387	ATTACHING PARTS . FILLER, ELECTRONIC SHELF EXTRUDED	0150	2
R 19B	NAS679A3W	. NUT	0150	2
R 19C	69-1522-1	. COVER ASSY, 1/4 ATR SHELF	0150	1
R 20	69-1522-1	. COVER ASSY, 1/4 ATR SHELF	0150	1
R	NAS514P1032-10	ATTACHING PARTS . SCREW	0150	12
R	NAS679A3W	. NUT	0150	12

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

	FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
				1	2	3	4	5	6	7		
R	37	21	66-1383-2	.	SEAL, TRAY.	.	.	.	.	.	0150	2
R				.	(OPTIONAL 66-1383)	.	.	.	.	.		
R		21	66-1383	.	SEAL, TRAY.	.	.	.	.	.	0150	2
R				.	(OPTIONAL TO 66-1383-2)	.	.	.	.	.		
R		21A	66-1383-2	.	SEAL, TRAY.	.	.	.	.	.	0150	2
R				.	(OPTIONAL 66-1383)	.	.	.	.	.		
R		21A	66-1383	.	SEAL, TRAY.	.	.	.	.	.	0150	2
R				.	(OPTIONAL TO 66-1383-2)	.	.	.	.	.		
R		21C	66-1383-2	.	SEAL, TRAY.	.	.	.	.	.	0150	2
R				.	(OPTIONAL 66-1383)	.	.	.	.	.		
R		21C	66-1383	.	SEAL, TRAY.	.	.	.	.	.	0150	2
R				.	(OPTIONAL TO 66-1383-2)	.	.	.	.	.		
R		22	65-1945-176	.	PLATE, IDENTIFICATION	.	.	.	.	.	0150	1
R		23	65-1945-141	.	PLATE, ELECTRONIC EQUIPMENT IDENTIFICATION.	.	.	.	.	.	0150	1
R		24	65-1945-150	.	PLATE, ELECTRONIC EQUIPMENT IDENTIFICATION.	.	.	.	.	.	0150	1
R		25	65-1945-142	.	PLATE, ELECTRONIC EQUIPMENT IDENTIFICATION.	.	.	.	.	.	0150	1
R		26	65-1945-177	.	PLATE, IDENTIFICATION	.	.	.	.	.	0150	1
				.	ATTACHING PARTS	.	.	.	.	.		
R			BACS12C804-6	.	SCREW	.	.	.	.	.	0150	10
R			NAS679A04W	.	NUT	.	.	.	.	.	0150	10
				.	-----*	.	.	.	.	.		
R		27	65-5207-2	.	SUPPORT ASSY, LH EQUIPMENT MOUNTING LONG TRAY	.	.	.	.	.	0150	1
R		28	66-1685	.	CLIP, ELECTRONICS SHELF ATTACH ANGLE.	.	.	.	.	.	0150	4
				.	ATTACHING PARTS	.	.	.	.	.		
R			MS20470D4	.	RIVET	.	.	.	.	.	0150	8
				.	-----*	.	.	.	.	.		
R		29	65-1649	.	SHELF ASSY, ELECTRONIC RACK	.	.	.	.	.	0150	1
R		30	69-1327-1	.	PANEL, ELECTRONIC SHELF END	.	.	.	.	.	0150	1
R		31	69-1334-2	.	PANEL ASSY, SHELF END DUCT ATTACHING.	.	.	.	.	.	0150	1
R		32	66-1337	.	SEAL, ELECTRONIC RACK SHELF END AIR	.	.	.	.	.	0150	1
R		33	69-1334-6	.	WELD ASSY, SHELF END DUCT ATTACHING PANEL LONG.	.	.	.	.	.	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE												

BOEING
707
PARTS CATALOG (MAINTENANCE)

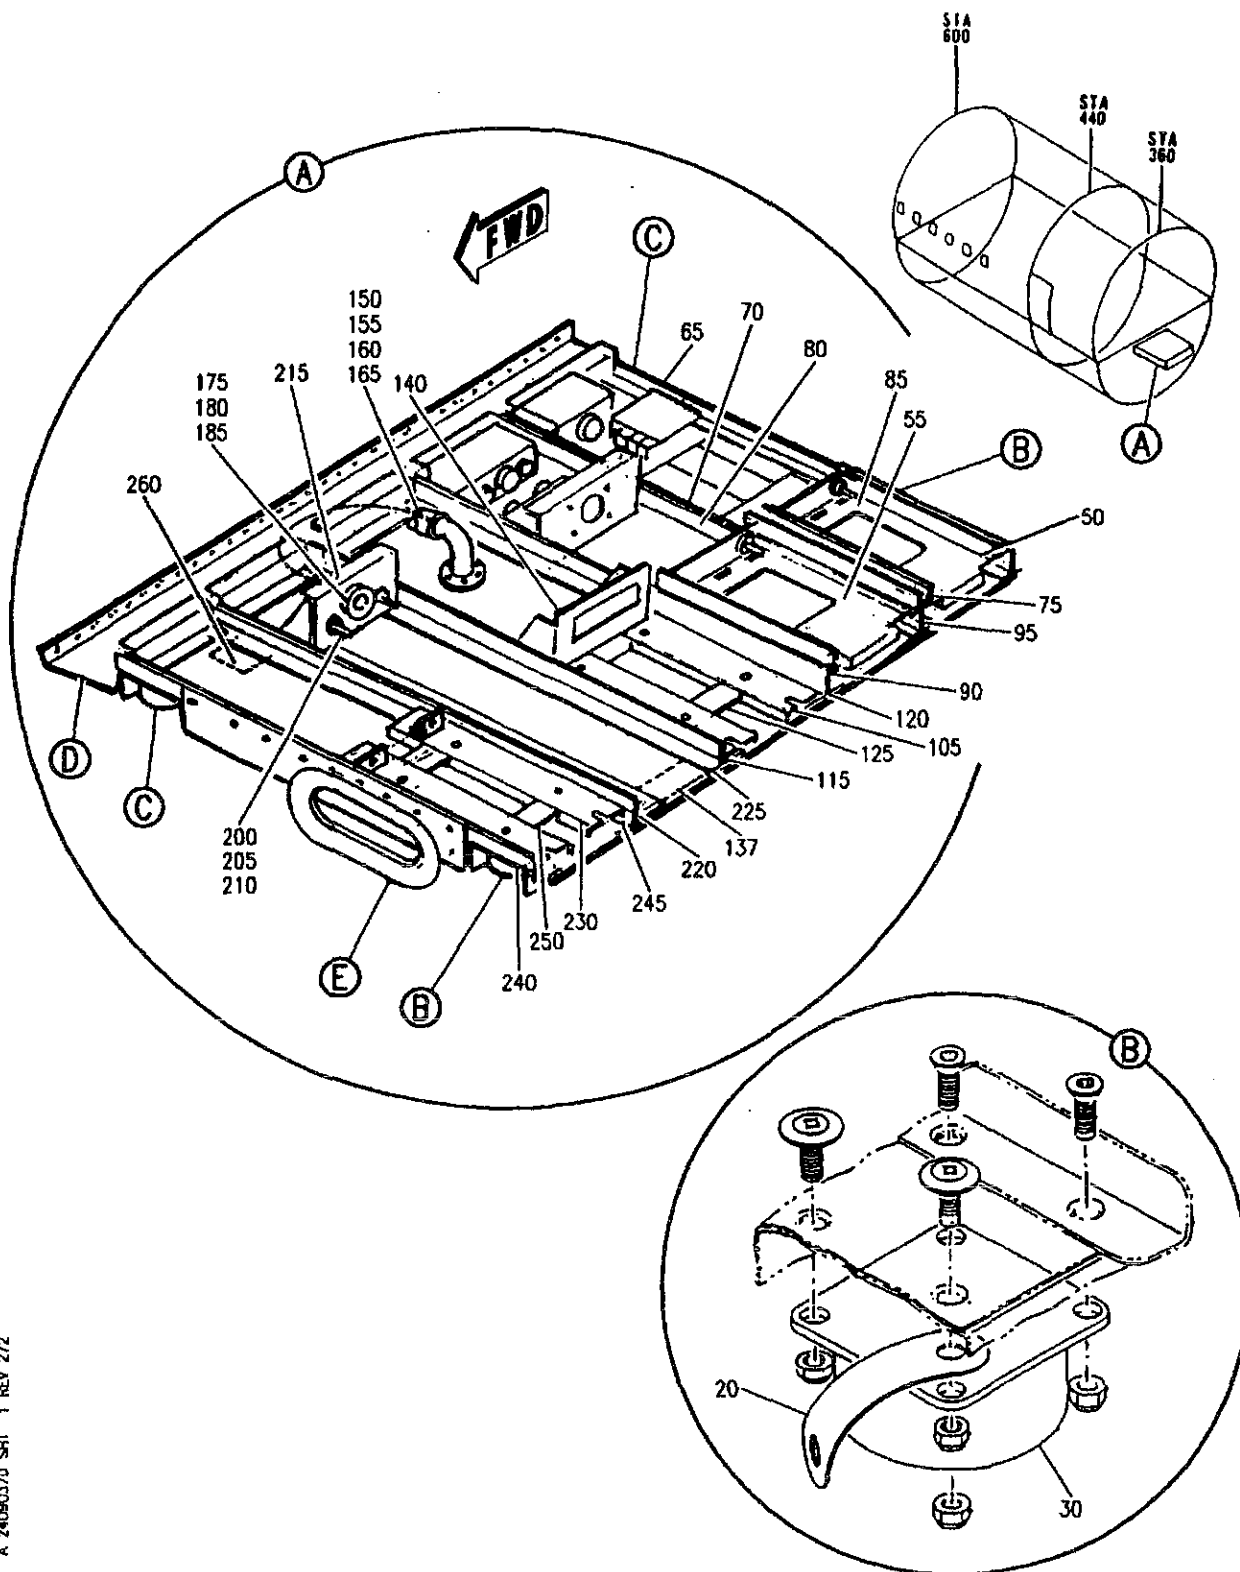


ELECTRICAL POWER- ELECTRONIC RACK
FIGURE 37D. SHELF ASSY, ELECTRONIC RACK DOPPLER EQUIPMENT (SHELF NO. 1 RH) (SHEET 1)

DETAILED PARTS LIST
24-09-37D
PAGE 0

24-09-37D

NOV 21/01

BOEING
707
PARTS CATALOG (MAINTENANCE)

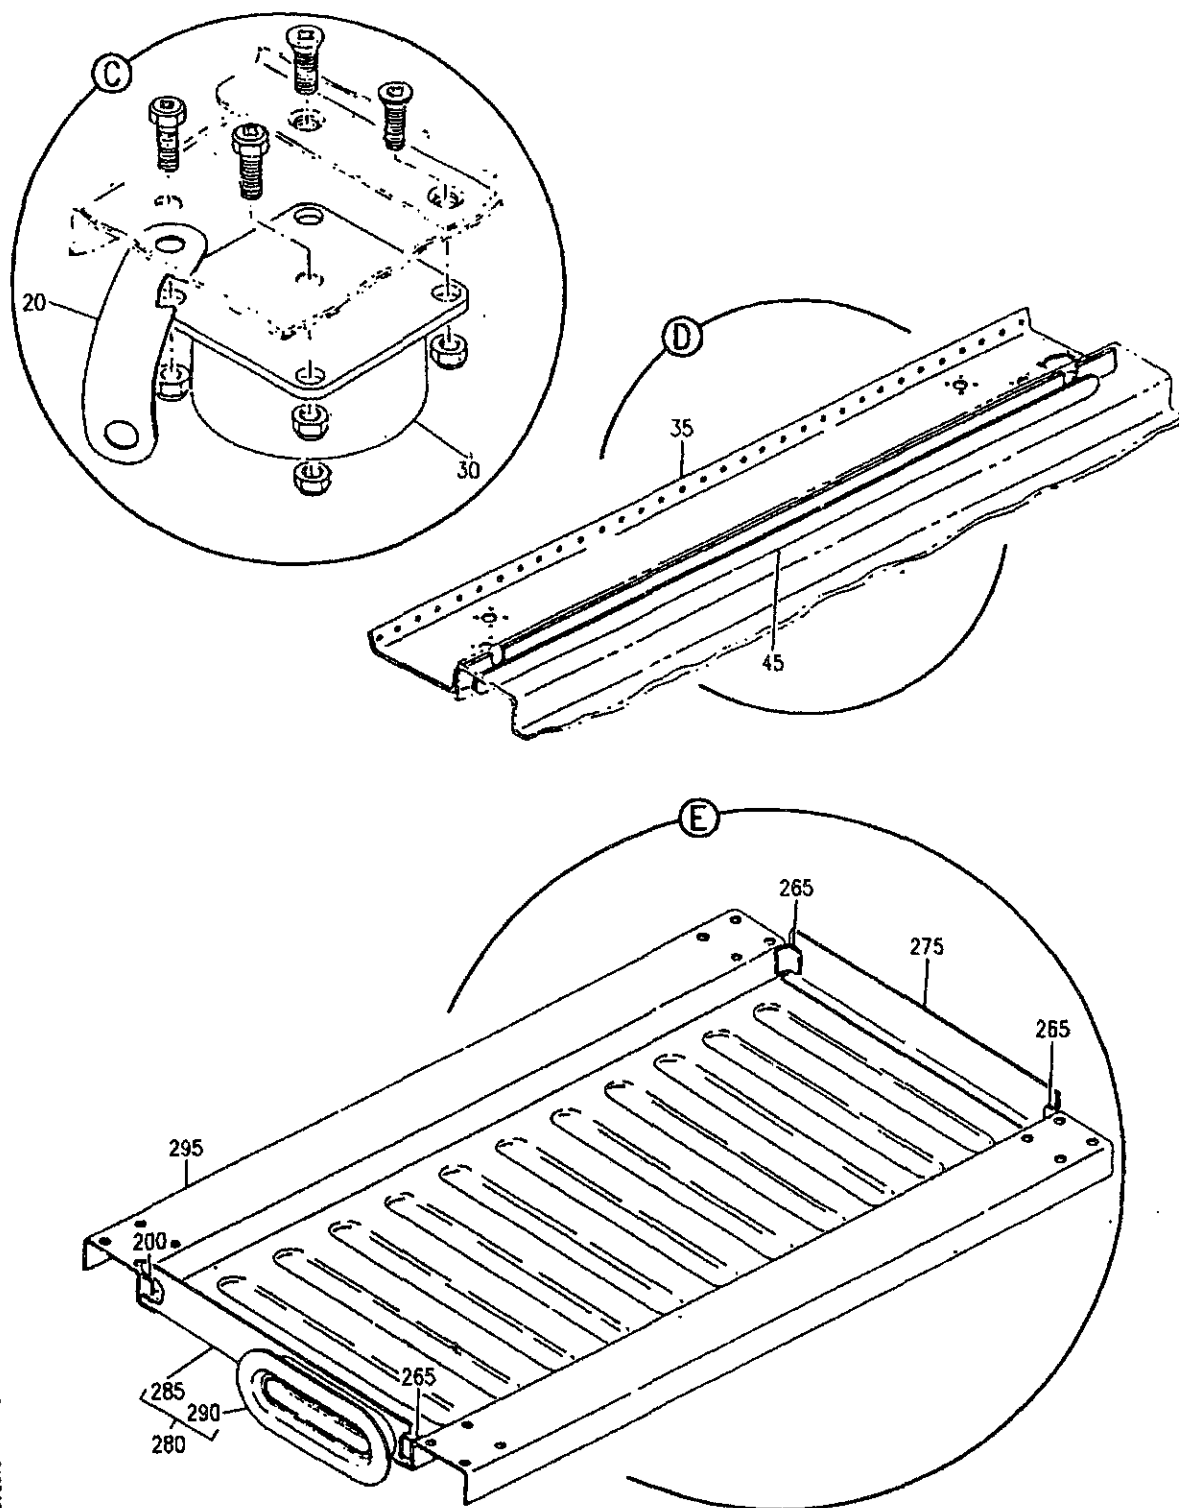

A 24090370 SHIT 2 REV 27Z

ELECTRICAL POWER- ELECTRONIC RACK
FIGURE 37D. SHELF ASSY. ELECTRONIC RACK DOPPLER EQUIPMENT (SHELF NO. 1 RH) (SHEET 2)

NOV 21/01

24-09-370

DETAILED PARTS LIST
24-09-370
PAGE 1

BOEING

707

PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	37D		SHELF ASSY, ELECTRONIC RACK DOPPLER EQUIPMENT (SHELF. .							0150	
R			NO. 1 RH)								
R		391-25-50-74127-001	SHELF ASSY, ELECTRONIC RACK DOPPLER EQUIPMENT (SHELF. .							0150	RF
R			NO. 1 RH) (VZ0031) (ADDED BY RAF MOD 7211.019-4)								
R			(SEE 24-0., FIG. 18)								
R		NAS1096-3-10	. SCREW							0150	12
R		NAS14P1032-10	. SCREW							0150	4
R		MS21042-3	. NUT							0150	16
R	20	66-1650	. STRAP, ELECTRONIC SHELF BONDING							0150	4
R	25	7002-M	. SHOCKMOUNT, (V88797)							0150	2
R	30	7002-U	. SHOCKMOUNT, (V88797)							0150	2
R	35	65-51789-1	. BRACKET							0150	1
R			ATTACHING PARTS								
R		MS2047005	. RIVET							0150	4
R			-----*								
R	45	65-5207-8	. SUPPORT ASSY, LH EQUIPMENT MOUNTING LONG TRAY							0150	1
R	50	MT4838ARC164	. BASE, MOUNTING (V80058)							0150	1
R	55	706177-801	. BASE, MOUNTING (V37695)							0150	1
R			ATTACHING PARTS								
R		NAS602-8	. SCREW							0150	8
R		MS21075-08	. NUT							0150	8
R			-----*								
R	70	391-25-50-74127-135	. RAIL, (VZ0031)							0150	1
R	75	391-25-50-74127-133	. RAIL, (VZ0031)							0150	1
R	80	391-25-50-74127-137	. RAIL, (VZ0031)							0150	1
R	85	391-25-50-74127-151	. RAIL, (VZ0031)							0150	1
R	90	391-25-50-74127-131	. RAIL, (VZ0031)							0150	1
R	95	391-25-50-74127-132	. RAIL, (VZ0031)							0150	1
R	100	391-25-50-74127-137	. BRACKET, (VZ0031)							0150	1
R	105	117625-1	. BASE, MOUNTING (V80249)							0150	1
R			ATTACHING PARTS								
R		NAS602-8	. SCREW							0150	4
R			-----*								
R	115	391-25-50-74127-129	. RAIL, (VZ0031)							0150	1
R	120	391-25-50-74127-130	. RAIL, (VZ0031)							0150	1
R	125	391-25-50-74127-113	. SUPPORT, (VZ0031)							0150	2
R			ATTACHING PARTS								
R		NAS1096-3-8	. SCREW							0150	20
R		MS21042-3	. NUT							0150	20
R			-----*								
R	137	391-25-50-74127-143	. DOUBLER, (VZ0031)							0150	1
R	140	117625-1	. BASE, MOUNTING (V80249)							0150	1
R			ATTACHING PARTS								
R		NAS603-9	. SCREW							0150	4
R			-----*								
R	150	AN737TW46	. CLAMP							0150	2
R	155	391-25-50-74127-147	. HOSE, (VZ0031)							0150	1
R	160	AN803D16	. CONNECTOR							0150	1
R	165	391-25-50-74127-145	. PLATE, ORIFICE (VZ0031)							0150	1
R			ATTACHING PARTS								
R		AN4-5A	. BOLT							0150	6
R			-----*								
R	175	MS20757D16	. CONNECTOR							0150	1
R	180	391-25-50-74127-111	. PACKER							0150	1
R	185	391-25-50-74127-141	. SEAL, (VZ0031)							0150	1
R			ATTACHING PARTS								
R		NAS514P1032-10	. SCREW							0150	2
R		MS21042-3	. NUT							0150	2
R			-----*								
R	200	391-25-50-74127-139	. PIN							0150	2
R	205	391-25-50-74127-140	. WASHER, (VZ0031)							0150	2
R	210	MS21042-4	. NUT							0150	2
R	215	391-25-50-74127-115	. SUPPORT, (VZ0031)							0150	1
R	220	391-25-50-74127-127	. RAIL, (VZ0031)							0150	1
R	225	391-25-50-74127-128	. RAIL, (VZ0031)							0150	1
R	230	117626-1	. BASE, MOUNTING							0150	1
R			ATTACHING PARTS								
R		NAS603-9	. SCREW							0150	4
R			-----*								
R	240	391-25-50-74127-123	. RAIL, (VZ0031)							0150	1
R	245	391-25-50-74127-125	. RAIL, (VZ0031)							0150	1
R	250	391-25-50-74127-113	. SUPPORT, (VZ0031)							0150	2
R			ATTACHING PARTS								
R		NAS1096-3-8	. SCREW							0150	24
			-----*								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

BOEING
707
PARTS CATALOG (MAINTENANCE)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	37D 260	391-25-50-74127-107	.	.	.	.	.	.	.	0150	1
R	265	66-1685	.	.	.	.	.	.	.	0150	1
R		MS20470D5	.	.	.	.	.	.	.	0150	8
R	275	69-1327-1	.	.	.	.	.	.	.	0150	1
R	280	69-1334-2	.	.	.	.	.	.	.	0150	1
R	285	69-1337	.	.	.	.	.	.	.	0150	1
R	290	69-1334-6	.	.	.	.	.	.	.	0150	1
R	295	65-1649	.	.	.	.	.	.	.	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

RAF
NOV 21/01

24-09-37D

DETAILED PARTS LIST
24-09-37D
PAGE 3

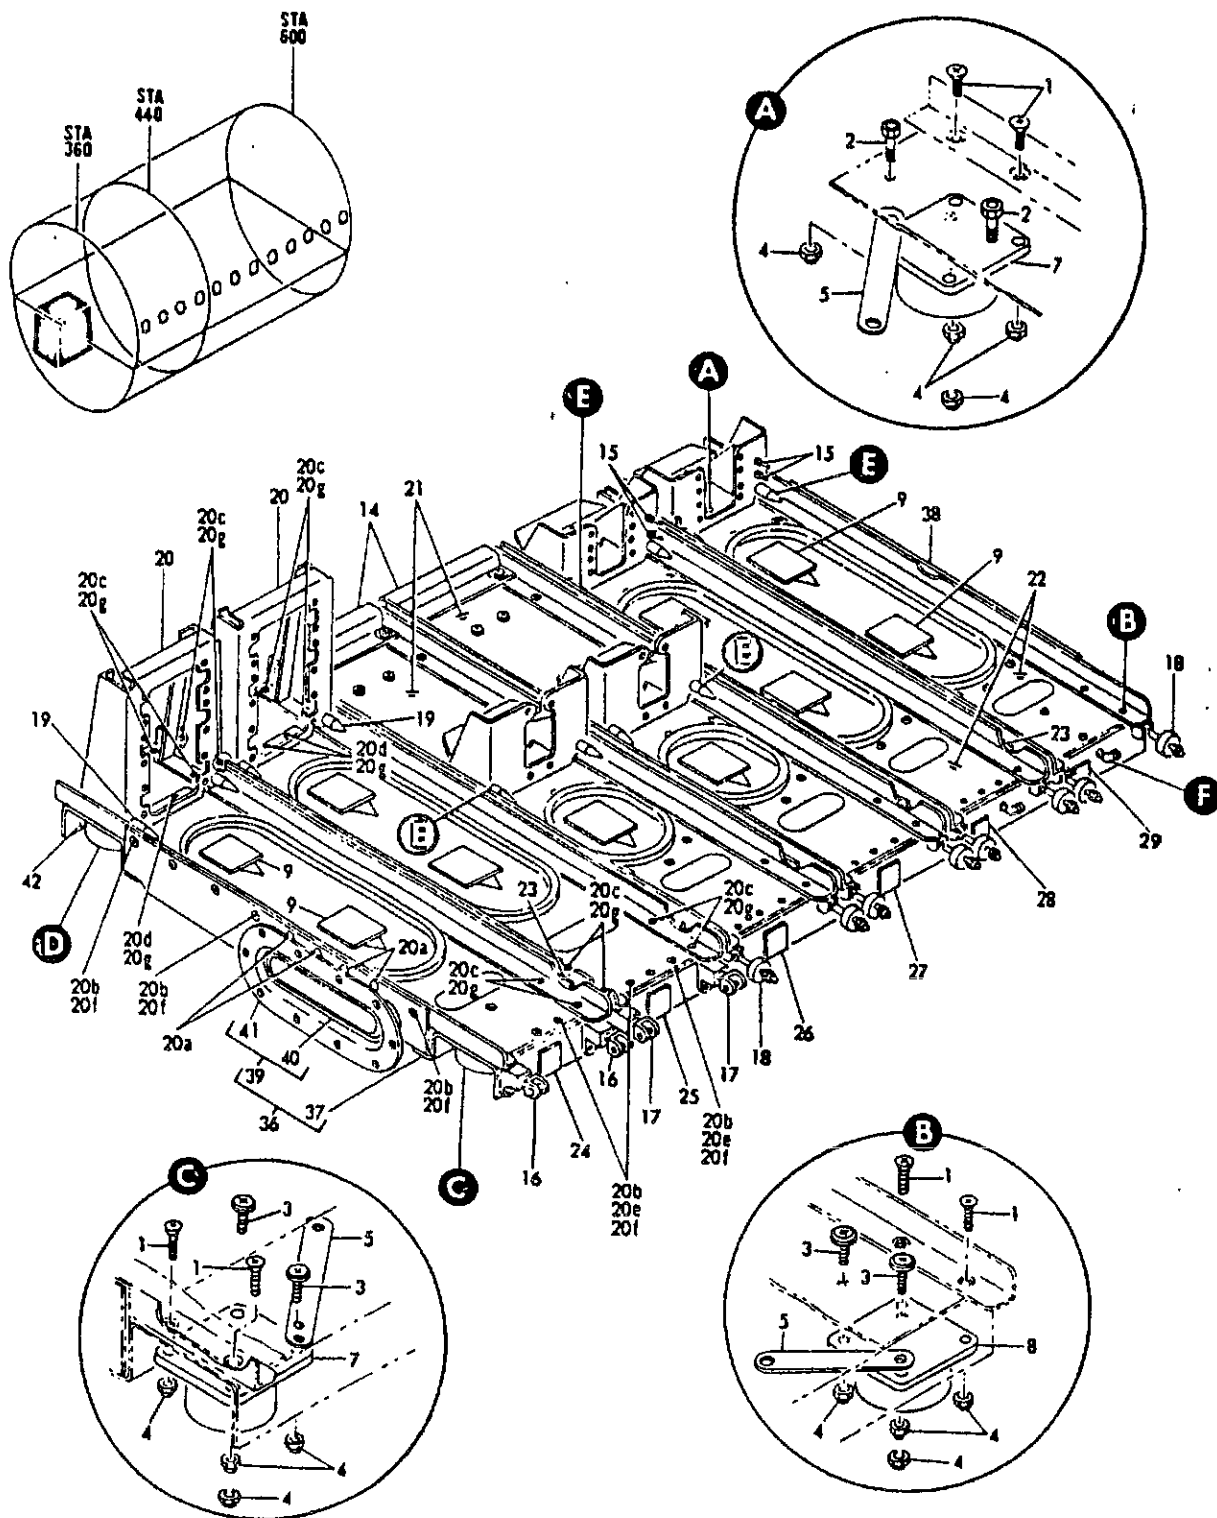


FIGURE 510. SHELF ASSY, SHELF NO. 2 RH SIDE ELECTRONIC RACK NAVIGATION EQUIPMENT (SHEET 1)

BOEING *707* Intercontinental
PARTS CATALOG

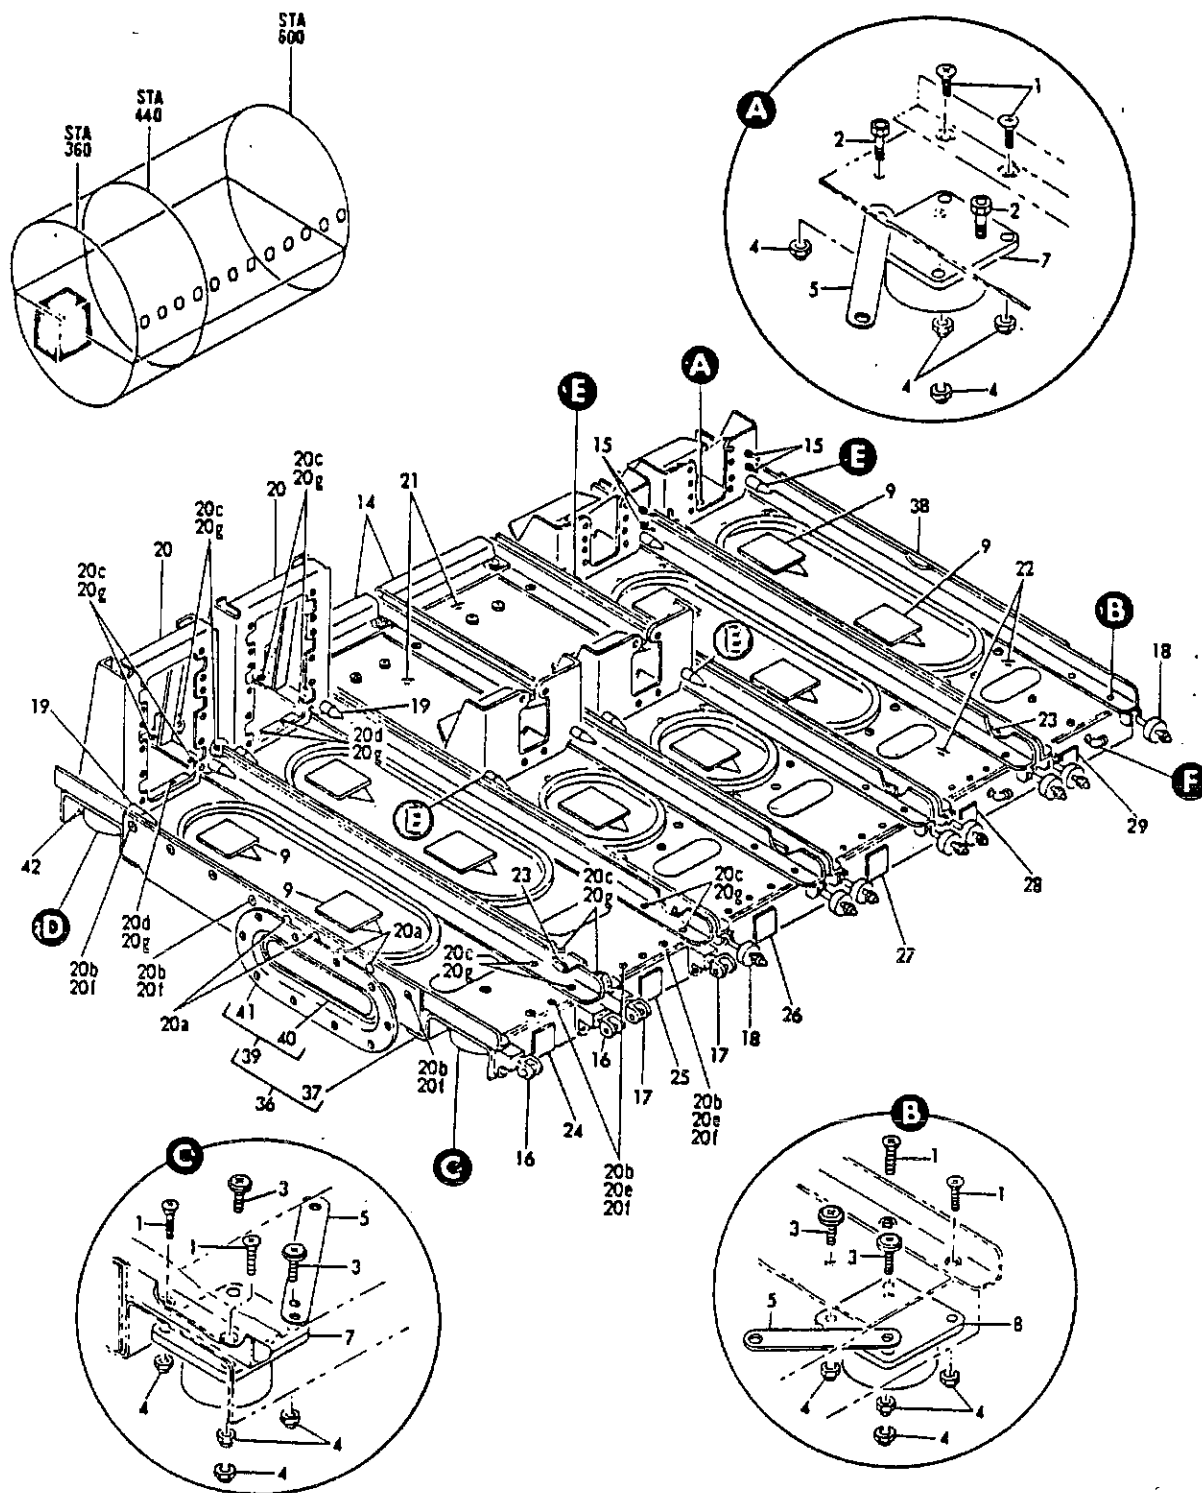


FIGURE 51G. SHELF ASSY, SHELF NO. 2 RH SIDE ELECTRONIC RACK NAVIGATION EQUIPMENT (SHEET 1)

BOEING *707* Intercontinental
PARTS CATALOG

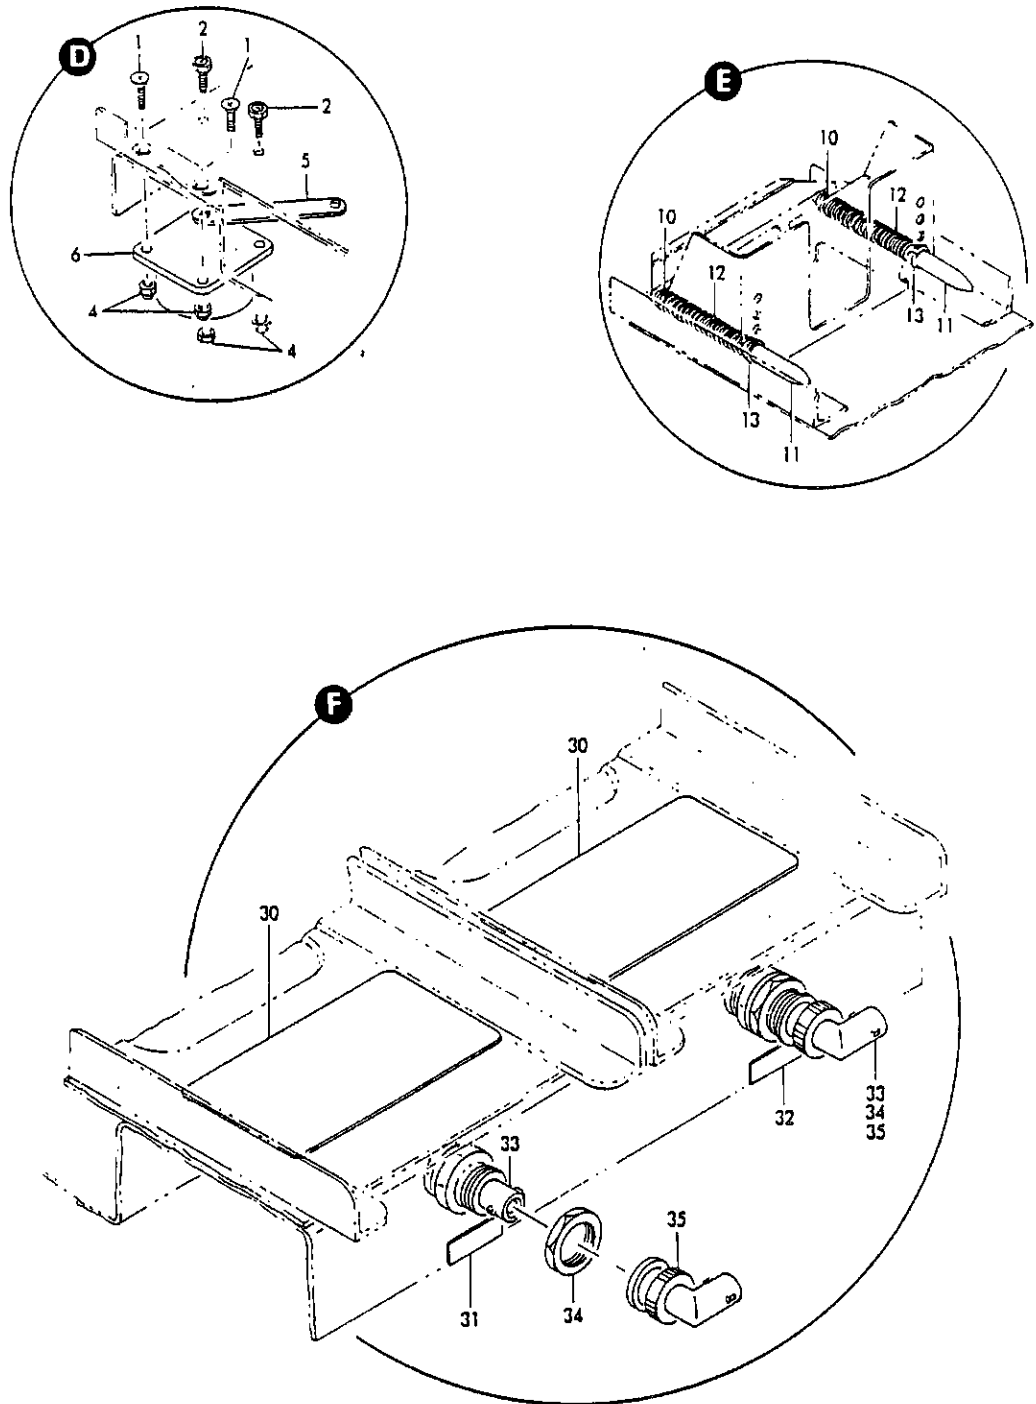


FIGURE 51G, SHELF ASSY, SHELF NO. 2 RH SIDE ELECTRONIC RACK NAVIGATION EQUIPMENT (SHEET 2)

NOV 21/90

24-09-51G

DETAILED PARTS LIST
24-09-51G
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	51G	65-18716-17	SHELF ASSY, SHELF NO. 2 RH SIDE ELECTRONIC RACK	0150 RF
R		NAVIGATION EQUIPMENT (SEE FIG. 1B, ITEM 6)		
R	1	NAS514P1032-10	. SCREW	0150 8
R	2	BACS12CB3-10	. SCREW	0150 4
R	3	BACS12N10-10	. SCREW	0150 4
R	4	NAS679A3W	. NUT	0150 16
R	5	66-1650	. STRAP, BONDING.	0150 4
R	6	BACS14E400B	. SHOCKMOUNT.	0150 1
R	7	BACS14E500B	. SHOCKMOUNT.	0150 2
R	8	BACS14E750B	. SHOCKMOUNT.	0150 1
R	9	66-12450-1	. PLATE, COOLING AIR ORIFICE COVER.	0150 12
R	10	NAS670-25	. RING.	0150 8
R	11	69-14507-2	. PIN, EQUIPMENT HOLD DOWN.	0150 8
R	12	63-1350	. SPRING, COMPRESSION UNIT HOLD DOWN.	0150 8
R	13	NAS620-416	. WASHER.	0150 8
R	14	69-15310-3	. BRACKET, RADIO SHELVES WIRE SUPPORT	0150 2
R		ATTACHING PARTS		
R		. SCREW	0150 4	
R		. WASHER, SPECIAL REPAIR.	0150 4	
R		. NUT	0150 4	
R	15	66-1398-4	. PIN, UNIT INDEX	0150 4
R		ATTACHING PARTS		
R		. NUT	0150 4	
R		-----*		
R		. LATCH INSTL, 1/2 ATR CASE	0150 1	
R	16	27L1-1	. FORK ASSY, (V71286) (OPTIONAL 61L14-2-2AC (V71286))	0150 2
R	16	614L14-2-2AC	. FORK ASSY, (V71286) (OPTIONAL 27L1-1 (V71286))	0150 2
R		ATTACHING PARTS		
R		. SCREW	0150 1	
R		(OPTIONAL MS24678-10)		
R		. SCREW	0150 1	
R		(OPTIONAL TO BACS12CB3-8)		
R		. SCREW	0150 2	
R		(OPTIONAL MS24678-13)		
R		. SCREW	0150 2	
R		(OPTIONAL TO BACS12CB3-14)		
R		. SCREW	0150 1	
R		(OPTIONAL BACS12AG55FA)		
R		. SCREW	0150 1	
R		(OPTIONAL TO BACS12CB3-58)		
R		. SPACER, FORK SUPPORT.	0150 1	
R		. SPACER, FORK SUPPORT.	0150 1	
R		. SPACER, (OPTIONAL NAS43DD3-190N).	0150 1	
R		. SPACER, (OPTIONAL NAS43DD3-190)	0150 1	
R		. WASHER.	0150 2	
R		. NUT	0150 1	
R		-----*		
R		. LATCH INSTL, 1/2 ATR CASE	0150 1	
R	17	27L1-1	. FORK ASSY, (V71286) (OPTIONAL 61L14-2-2AC (V71286))	0150 2
R	17	614L14-2-2AC	. FORK ASSY, (V71286) (OPTIONAL 27L1-1 (V71286))	0150 2
R		ATTACHING PARTS		
R		. SCREW	0150 2	
R		(OPTIONAL MS24678-13)		
R		. SCREW	0150 2	
R		(OPTIONAL TO BACS12CB3-14)		
R		. SCREW	0150 2	
R		(OPTIONAL BACS12AG55FA)		
R		. SCREW	0150 2	
R		(OPTIONAL TO BACS12CB3-58)		
R		. SPACER, FORK SUPPORT.	0150 2	
R		. SPACER, (OPTIONAL NAS43DD3-190N).	0150 2	
R		. SPACER, (OPTIONAL NAS43DD3-190)	0150 2	
R		. WASHER.	0150 2	
R		-----*		
R		. HOLD DOWN INSTL, 1/2 ATR CASE FRONT	0150 4	
R	18	121366-707	. BOLT ASSY, (HOLLINGSHEAD-PRYOR ENTERPRISES)	0150 2
R		(OPTIONAL 66-1390 FIG. 106)		
R	18	66-1390	. BOLT ASSY, (SEE FIG. 106.	0150 2
R		(OPTIONAL TO 121366-707 (HOLLINGSHEAD-PRYOR ENTERPRISES))		
R		ATTACHING PARTS		
R		. FILLER, EXTRUDED.	0150 2	
R		. NUT	0150 2	
R		-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 51G 19	116387	. HOLD DOWN ASSY, (WILCOX ELEC CO INC, HOLLYWOOD, . . . CALIF)	0150	4
R 20	65-18719-59	. TRAY ASSY, 1/2 ATR 30PD LONG ON LONG MOUNTING (SEE . FIG. 87)	0150	2
R		ATTACHING PARTS		
R 20A	MS20426B4	. RIVET	0150	4
R 20B	NAS514P632-5	. SCREW	0150	9
R 20C	NAS514P1032-10	. SCREW	0150	12
R 20D	BACS12CB3-10	. SCREW	0150	3
R 20E	BACW10AL1	. WASHER.	0150	4
R 20F	NAS679A06W	. NUT	0150	9
R 20G	NAS679A3W	. NUT	0150	15
R 21	65-18719-39	. TRAY ASSY, 1/2 ATR DPX2 SHORT ON LONG MOUNTING (SEE . FIG. 89)	0150	2
R		ATTACHING PARTS		
R	NAS514P632-5	. SCREW	0150	6
R	NAS514P1032-10	. SCREW	0150	12
R	BACS12CB3-10	. SCREW	0150	4
R	BACW10AL1	. WASHER.	0150	6
R	NAS679A06W	. NUT	0150	6
R	NAS679A3W	. NUT	0150	16
R 22	65-18719-12	. TRAY ASSY, 1/2 ATR DPA LONG ON LONG MOUNTING (SEE . FIG. 87)	0150	2
R		ATTACHING PARTS		
R	NAS514P632-5	. SCREW	0150	11
R	NAS514P1032-10	. SCREW	0150	12
R	BACS12CB3-10	. SCREW	0150	3
R	BACW10AL1	. WASHER.	0150	4
R	NAS679A06W	. NUT	0150	11
R	NAS679A3W	. NUT	0150	15
R 23	66-1383-2	. SEAL, UNIT TRAY (OPTIONAL 66-1383)	0150	5
R 23	66-1383	. SEAL, UNIT TRAY (OPTIONAL TO 66-1383-2)	0150	5
R 24	65-1945-231	. PLATE, IDENTIFICATION	0150	1
R 25	65-1945-232	. PLATE, IDENTIFICATION	0150	1
R 26	65-1945-195	. PLATE, IDENTIFICATION	0150	1
R 27	65-1945-196	. PLATE, IDENTIFICATION	0150	1
R 28	65-1945-146	. PLATE, IDENTIFICATION	0150	1
R 29	65-1945-147	. PLATE, IDENTIFICATION	0150	1
R		ATTACHING PARTS		
R	BACS12CB04-6	. SCREW	0150	12
R	NAS679A04W	. NUT	0150	12
R 30	69-51543-1	. ADAPTER INSTL, DME INTERROGATOR	0150	1
R 31	BAC27CEE-307	. SCOTH-CAL, INSTRUCTIONS	0150	2
R 32	BAC27CEE-308	. SCOTH-CAL, RD886.	0150	1
R 33	BAC27CEE-309	. SCOTH-CAL, RD887.	0150	1
R 34	MS35180-909B	. CONNECTOR	0150	2
R 35	MS90132-2	. NUT	0150	2
R 36	MS35368-306B	. ADAPTOR-CONNECTOR	0150	2
R 37	65-5207-2	. SUPPORT ASSY, TRAY EQUIPMENT MOUNTING	0150	1
R 38	65-1649	. SHELF ASSY, ELECTRONIC SHELF LONG	0150	1
R 39	69-1327-1	. PANEL, ELECTRONIC RACK SHELF END.	0150	1
R 40	69-1334-2	. PANEL ASSY, DUCT ATTACHING SHELF END.	0150	1
R 41	69-1334-5	. WELD ASSY, LONG	0150	1
R 42	66-1337	. SEAL, AIR	0150	1
R	65-51790-16	. SUPPORT INSTL, DISCONNECT	0150	1
R	BACM9L9CRW	. SCOTCH-CAL, R2-1 THRU R2-12	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
707
PARTS CATALOG (MAINTENANCE)

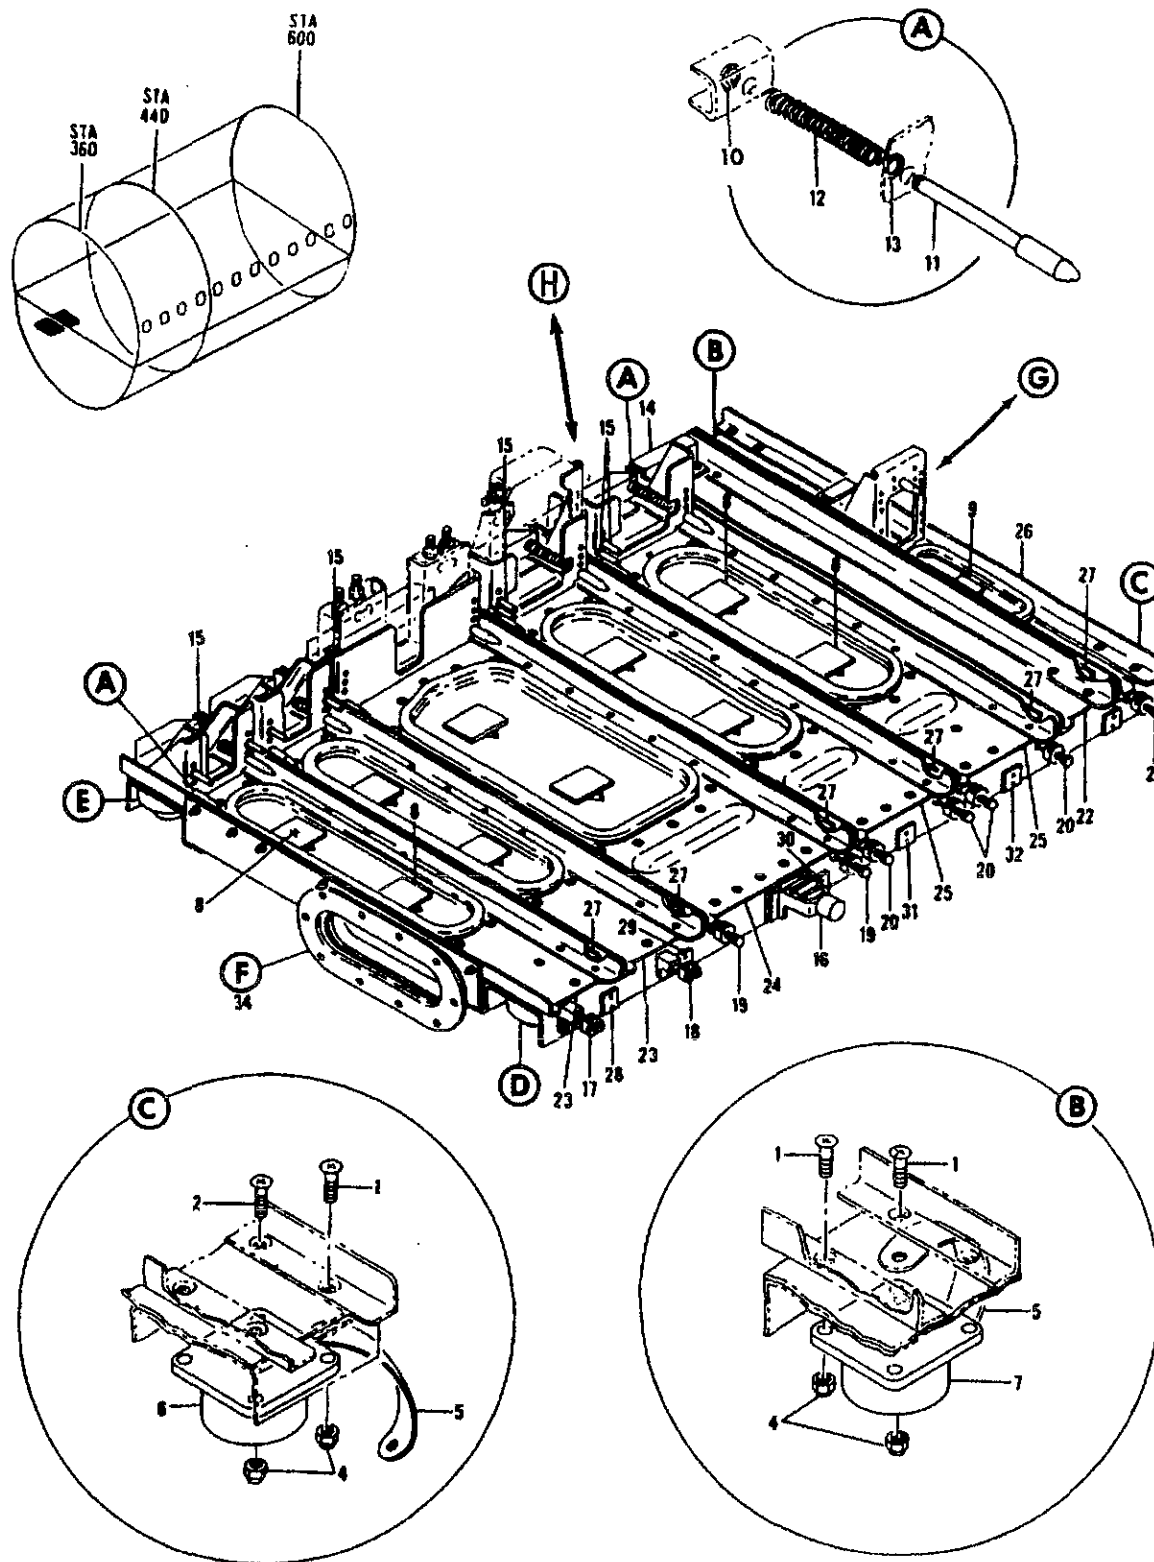


FIGURE 62B. SHELF ASSY, SHELF NO. 3 RH SIDE ELECTRONIC RACK NAVIGATION EQUIPMENT (ELECTRICAL POWER ONLY) (SHEET 1)

DETAILED PARTS LIST
24-09-62B
PAGE 0

24-09-62B

NOV 21/01

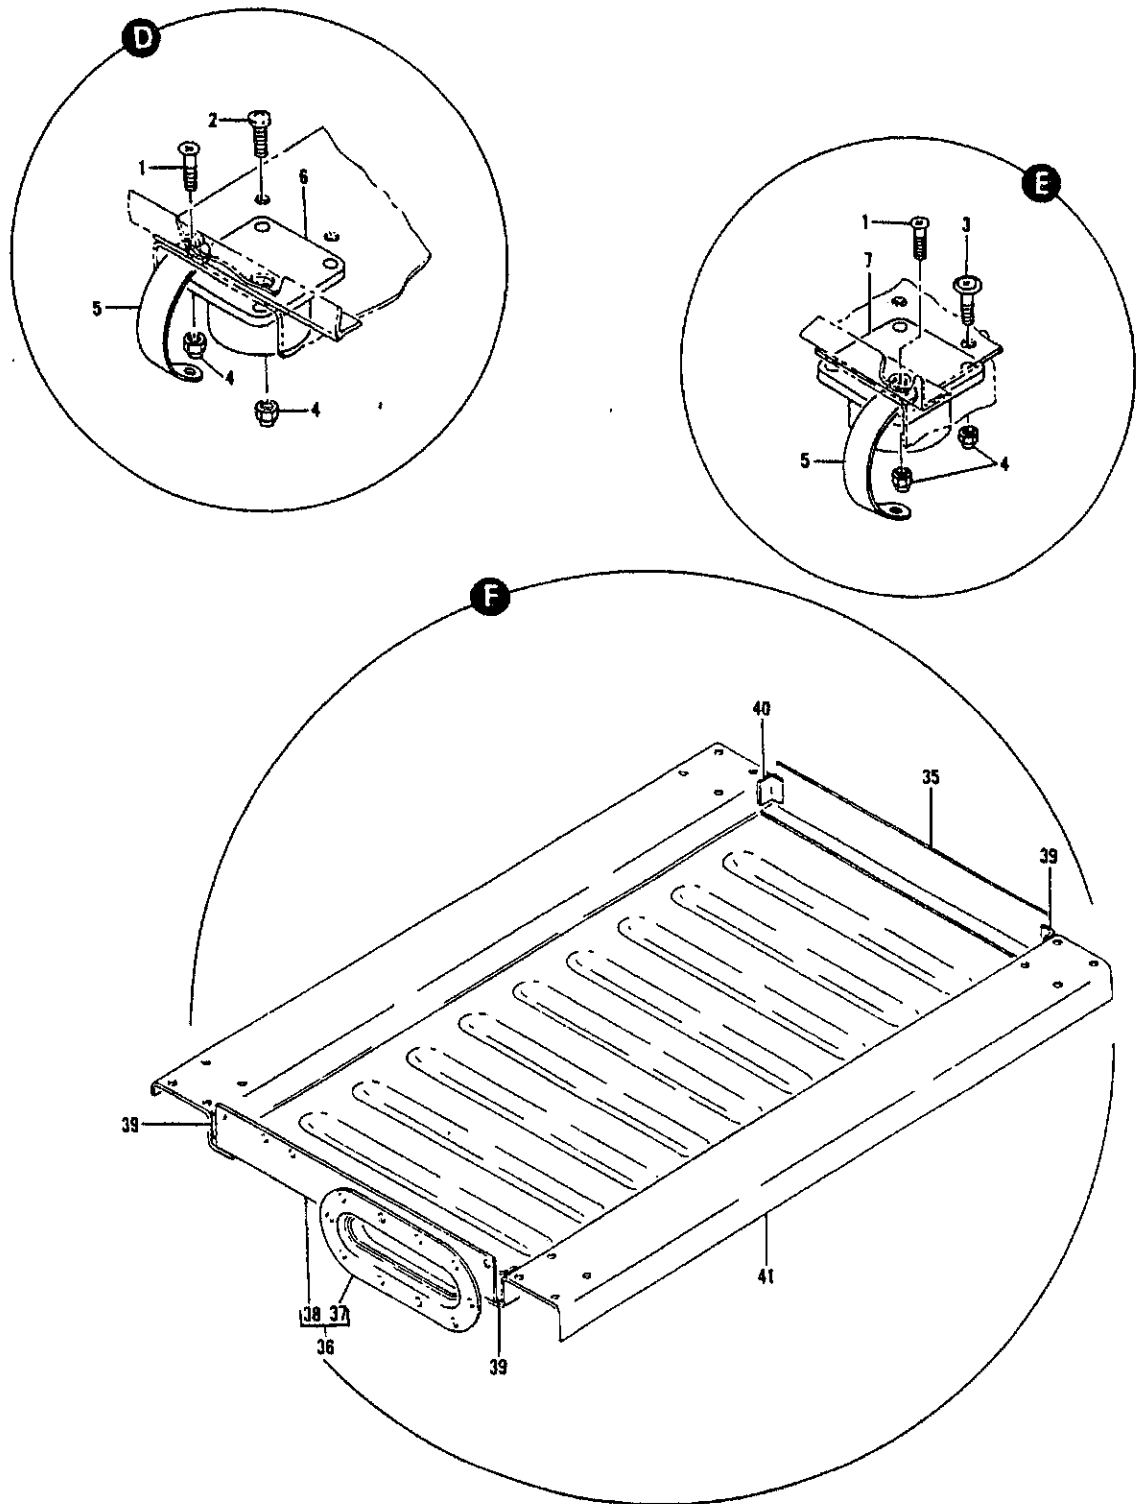


FIGURE 62B. SHELF ASSY, SHELF NO. 3 RH SIDE ELECTRONIC
RACK NAVIGATION EQUIPMENT (ELECTRICAL POWER ONLY) (SHEET 2)

NOV 21/90

24-09-62B

DETAILED PARTS LIST
24-09-62B
PAGE 1

BOEING
707
PARTS CATALOG (MAINTENANCE)

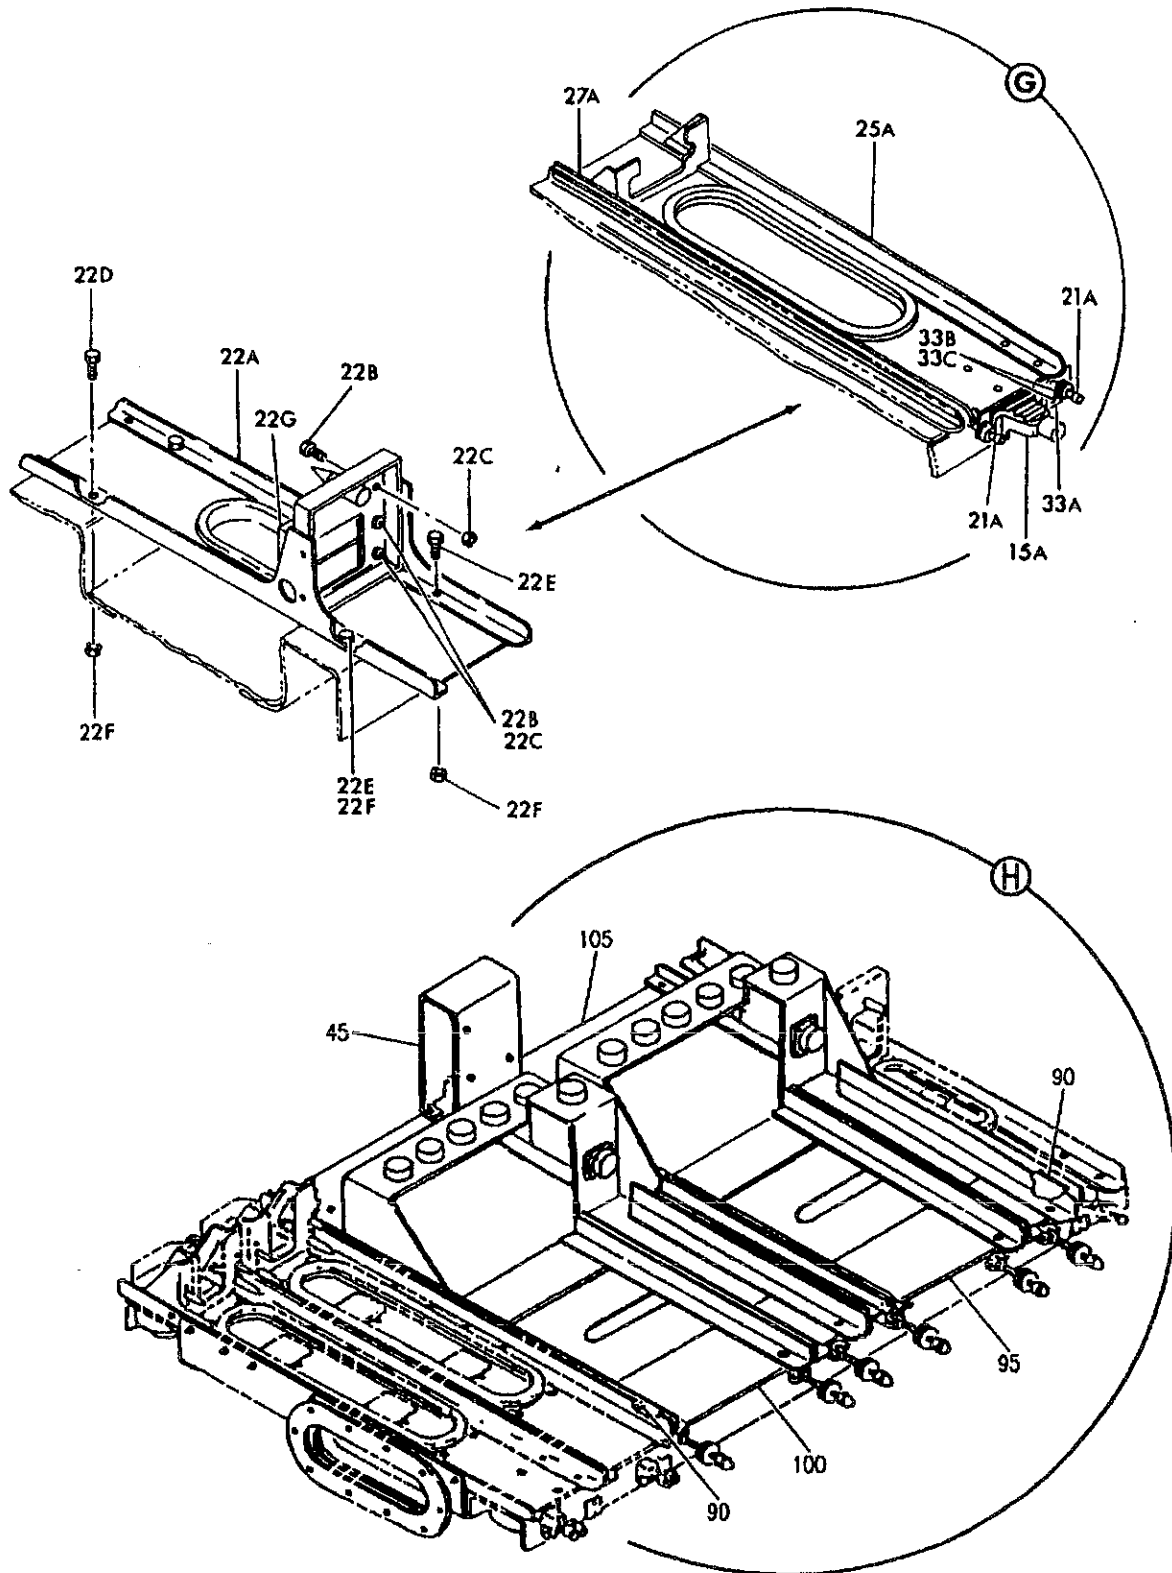


FIGURE 62B. SHELF ASSY. SHELF NO. 3 RH SIDE ELECTRONIC RACK NAVIGATION EQUIPMENT (ELECTRICAL POWER ONLY) (SHEET 3)

DETAILED PARTS LIST
24-09-62B
PAGE 2

24-09-62B

NOV 21/01

BOEING

707

PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R R R R R R R R R R R	628 65-18717-13	SHELF ASSY, SHELF NO. 3 RH SIDE ELECTRONIC RAC.	0150	RF
		NAVIGATION EQUIPMENT (ELECTRICAL POWER ONLY)		
		(DELETED BY RAF MOD 7211.019-4) (SEE FIG. 18)		
	391-25-50-74128-001	SHELF ASSY, SHELF NO. 3 RH SIDE ELECTRONIC RACK	0150	RF
		NAVIGATION EQUIPMENT (ELECTRICAL POWER ONLY)		
		(VZ0031) (65-18717-13 MODIFIED BY RAF MOD		
		7211.019-4) (SEE FIG. 18)		
	1 NAS514P1032-10	. SCREW	0150	12
	2 BACS12N10-10	. SCREW	0150	2
	3 BACS12C83-10	. SCREW, (OPTIONAL NAS603-10)	0150	2
	4 NAS679A3W	. NUT	0150	16
	5 66-1650	. STRAP, ELECTRONIC SHELF BONDING	0150	4
	6 BACS14E400B	. SHOCKMOUNT	0150	2
	7 BACS14E300B	. SHOCKMOUNT	0150	2
	8 66-12450-1	. PLATE, COOLING AIR ORIFICE COVER.	0150	10
	9 66-12450-2	. PLATE, COOLING AIR ORIFICE COVER.	0150	1
	10 NAS670-25	. RING	0150	10
	11 69-14507-2	. PIN, EQUIPMENT HOLD DOWN.	0150	10
	12 63-1350	. SPRING, UNIT HOLD DOWN PIN COMPRESSION.	0150	10
	13 NAS620-416	. WASHER.	0150	10
	14 69-15310-1	. BRACKET, RADIO RACK SHELVES WIRE SUPPORT.	0150	1
		ATTACHING PARTS		
	BACS12C83-10	. SCREW, (OPTIONAL NAS603-10)	0150	2
	66-2955-3	. WASHER, SPECIAL REPAIR.	0150	2
	NAS679A3W	. NUT	0150	2
	15 66-1398-4	. PIN, ELECTRONIC SHELF UNIT INDEX.	0150	8
		ATTACHING PARTS		
	NAS679A06W	. NUT	0150	8
	16 69-23056-6	. EXTRACTOR INSTL, 3/4 ATR CASE (SEE FIG. 105).	0150	1
	65-5313-7	. LATCH INSTL, FLIGHT INSTRUMENT AMPLIFIER LH FORWARD	0150	1
	17 27L1-1		0150	1
	17 614L14-2-2AC		0150	1
		ATTACHING PARTS		
	MS24678-13		0150	1
	MS35338-43		0150	1
	MS24678-10		0150	1
	NAS679A3W		0150	1
	65-5313-8	. LATCH INSTL, FLIGHT INSTRUMENT AMPLIFIER CENTER 3/8	0150	1
	18 27L1-1		0150	1
	18 614L14-2-2AC		0150	1
		ATTACHING PARTS		
	MS24678-13		0150	1
	66-2895-3		0150	1
	MS35338-43		0150	1
	BACS12AG55FA		0150	1
	NAS43DD3-190		0150	1
	NAS43DD3-190N		0150	1
	65-5270-3	. HOLD DOWN INSTL, 3/4 ATR CASE FRONT	0150	1
	19 66-1390		0150	2
	19 121366-707		0150	2
		ATTACHING PARTS		
	BACN10BY53		0150	2
	66-1387		0150	2
	65-5270-2	. HOLD DOWN INSTL, 1/2 ATR CASE FRONT	0150	2
	20 121366-707		0150	2
	20 66-1390		0150	2
		ATTACHING PARTS		
	BACN10BY53		0150	2
	66-1387		0150	2
	65-5270	. HOLD DOWN INSTL, 1/4 ATR CASE FRONT	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/01

24-09-62B

DETAILED PARTS LIST
24-09-62B
PAGE 3

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
62B 21	121366-707	. . BOLT ASSY, (V30528) (OPTIONAL 66-1390 FIG. 106)	0150	1
21	66-1390	. . BOLT ASSY, (SEE FIG. 106) (OPTIONAL TO 121366-707 (V30528))	0150	1
	BACN108Y53	ATTACHING PARTS	0150	1
	66-1387	. . NUT FILLER, ELECTRONIC SHELF EXTRUDED	0150	1
22	69-1522-1	. COVER ASSY, ELECTRONIC RACK 1/4 ATR SHELF ATTACHING PARTS	0150	1
	NAS514P1032-10	. SCREW	0150	6
	NAS679A3W	. NUT	0150	6
23	65-18719-6	. TRAY ASSY, ELECTRONIC RACK 3/8 ATR LONG ON LONG EQUIPMENT MOUNTING (SEE FIG. 83)	0150	2
	NAS514P1032-10	ATTACHING PARTS	0150	12
	NAS514P632-5	. SCREW	0150	6
	BACS12C83-10	. SCREW, (OPTIONAL NAS603-10)	0150	1
	BACW10AL1	. WASHER	0150	1
	NAS679A3W	. NUT	0150	13
	NAS679A06W	. NUT	0150	6
	MS20426D4	. RIVET	0150	4
24	65-18719-30	. TRAY ASSY, ELECTRONIC RACK 3/4 ATR DPA LONG ON LONG EQUIPMENT MOUNTING (SEE FIG. 96)	0150	1
	NAS514P1032-10	ATTACHING PARTS	0150	8
	NAS514P632-5	. SCREW	0150	5
	BACS12C83-10	. SCREW, (OPTIONAL NAS603-10)	0150	1
	BACW10AL1	. WASHER	0150	5
	NAS679A3W	. NUT	0150	9
	NAS679A06W	. NUT	0150	5
25	65-18719-13	. TRAY ASSY, ELECTRONIC RACK 1/2 ATR DPD LONG ON LONG EQUIPMENT MOUNTING (SEE FIG. 87)	0150	2
	NAS514P1032-10	ATTACHING PARTS	0150	16
	NAS514P632-5	. SCREW	0150	6
	BACS12C83-10	. SCREW, (OPTIONAL NAS603-10)	0150	4
	BACW10AL1	. WASHER	0150	6
	NAS679A3W	. NUT	0150	20
	NAS679A06W	. NUT	0150	6
26	65-18719-37	. TRAY ASSY, ELECTRONIC RACK 1/4 ATR DPXB SHORT ON LONG EQUIPMENT MOUNTING (SEE FIG. 76)	0150	1
	NAS514P632-5	ATTACHING PARTS	0150	7
	NAS679A06W	. SCREW NUT	0150	7
27	66-1383	. SEAL, UNIT TRAY (OPTIONAL TO 66-1383-2)	0150	6
27	66-1383-2	. SEAL, UNIT TRAY (OPTIONAL 66-1383)	0150	6
28	65-1945-32	. PLATE, ELECTRONIC EQUIPMENT IDENTIFICATION	0150	1
29	65-1945-33	. PLATE, ELECTRONIC EQUIPMENT IDENTIFICATION	0150	1
30	65-1945-49	. PLATE, ELECTRONIC EQUIPMENT IDENTIFICATION	0150	1
31	65-1945-60	. PLATE, ELECTRONIC EQUIPMENT IDENTIFICATION	0150	1
32	65-1945-59	. PLATE, ELECTRONIC EQUIPMENT IDENTIFICATION	0150	1
33	65-1945-13	. PLATE, ELECTRONIC EQUIPMENT IDENTIFICATION ATTACHING PARTS	0150	1
	BACS12C804-6	. SCREW	0150	12
	NAS679A04W	. NUT	0150	12
34	65-5207-5	. SUPPORT ASSY, EQUIPMENT MOUNTING LONG TRAY	0150	1
35	69-1327-1	. PANEL, ELECTRONIC SHELF END	0150	1
36	69-1334-2	. PANEL ASSY, SHELF END DUCT ATTACHING ATTACHING PARTS	0150	1
	AN470D4	. RIVET	0150	8
37	66-1337	. . . SEAL, ELECTRONIC RACK SHELF END AIR	0150	1
38	69-1334-6	. . WELD ASSY, SHELF END DUCT ATTACHING PANEL LONG	0150	1
39	66-1685	. . CLIP, ELECTRONIC SHELF ATTACH ANGLE	0150	3
40	66-1685-1	. . CLIP, ELECTRONIC SHELF ATTACH ANGLE	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
	62B	AN47004	ATTACHING PARTS								
			. . RIVET							0150	8
			-----*								
	41	65-1649-7	. . SHELF ASSY, ELECTRONIC RACK							0150	1
	45	391-25-50-74128-101	. BRACKET, (VZ0031) (ADDED BY RAF MOD 7211.019-4) . . .							0150	1
			ATTACHING PARTS								
		NAS1036-310	. SCREW							0150	4
		MS21042-3	. NUT							0150	4
			-----*								
		NAS514P1032-8	. SCREW, (ADDED BY RAF MOD 7211.019-4).							0150	5
		NAS514P632-6	. SCREW, (ADDED BY RAF MOD 7211.019-4).							0150	12
		NAS1169-6	. WASHER, (ADDED BY RAF MOD 7211.019-4)							0150	12
		MS21042-3	. NUT, (ADDED BY RAF MOD 7211.019-4).							0150	4
		MS21042-06	. NUT, (ADDED BY RAF MOD 7211.019-4).							0150	12
		391-25-50-74126-001	. SUPPORT ASSY, TRAY (VZ0031) (ADDED BY RAF MOD							0150	1
			7211.019-4)								
	90	391-25-50-74128-103	. RUBBER SEAL, (VZ0031) (ADDED BY RAF MOD 7211.019-4) .							0150	2
	95	622-5148-001	. TACAN MOUNTING, BASE (V13499) (ADDED BY RAF MOD . . .							0150	1
			7211.019-4)								
	100	622-4564-001	. TACAN MOUNTING, BASE (V13499) (ADDED BY RAF MOD . . .							0150	1
			7211.019-4)								
	105	7-54	. DIPLEXER, (ADDED BY RAF MOD 7211.019-4)							0150	1
			ATTACHING PARTS								
		NAS603-8	. SCREW							0150	3
		AN960KD10L	. WASHER.							0150	3
		MS21042-3	. NUT							0150	3
			-----*								
			. FOR REFERENCE TO OTHER SHELF DETAILS, SEE NHA							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

RAF
NOV 21/01

24-09-62B

DETAILED PARTS LIST
24-09-62B
PAGE 5

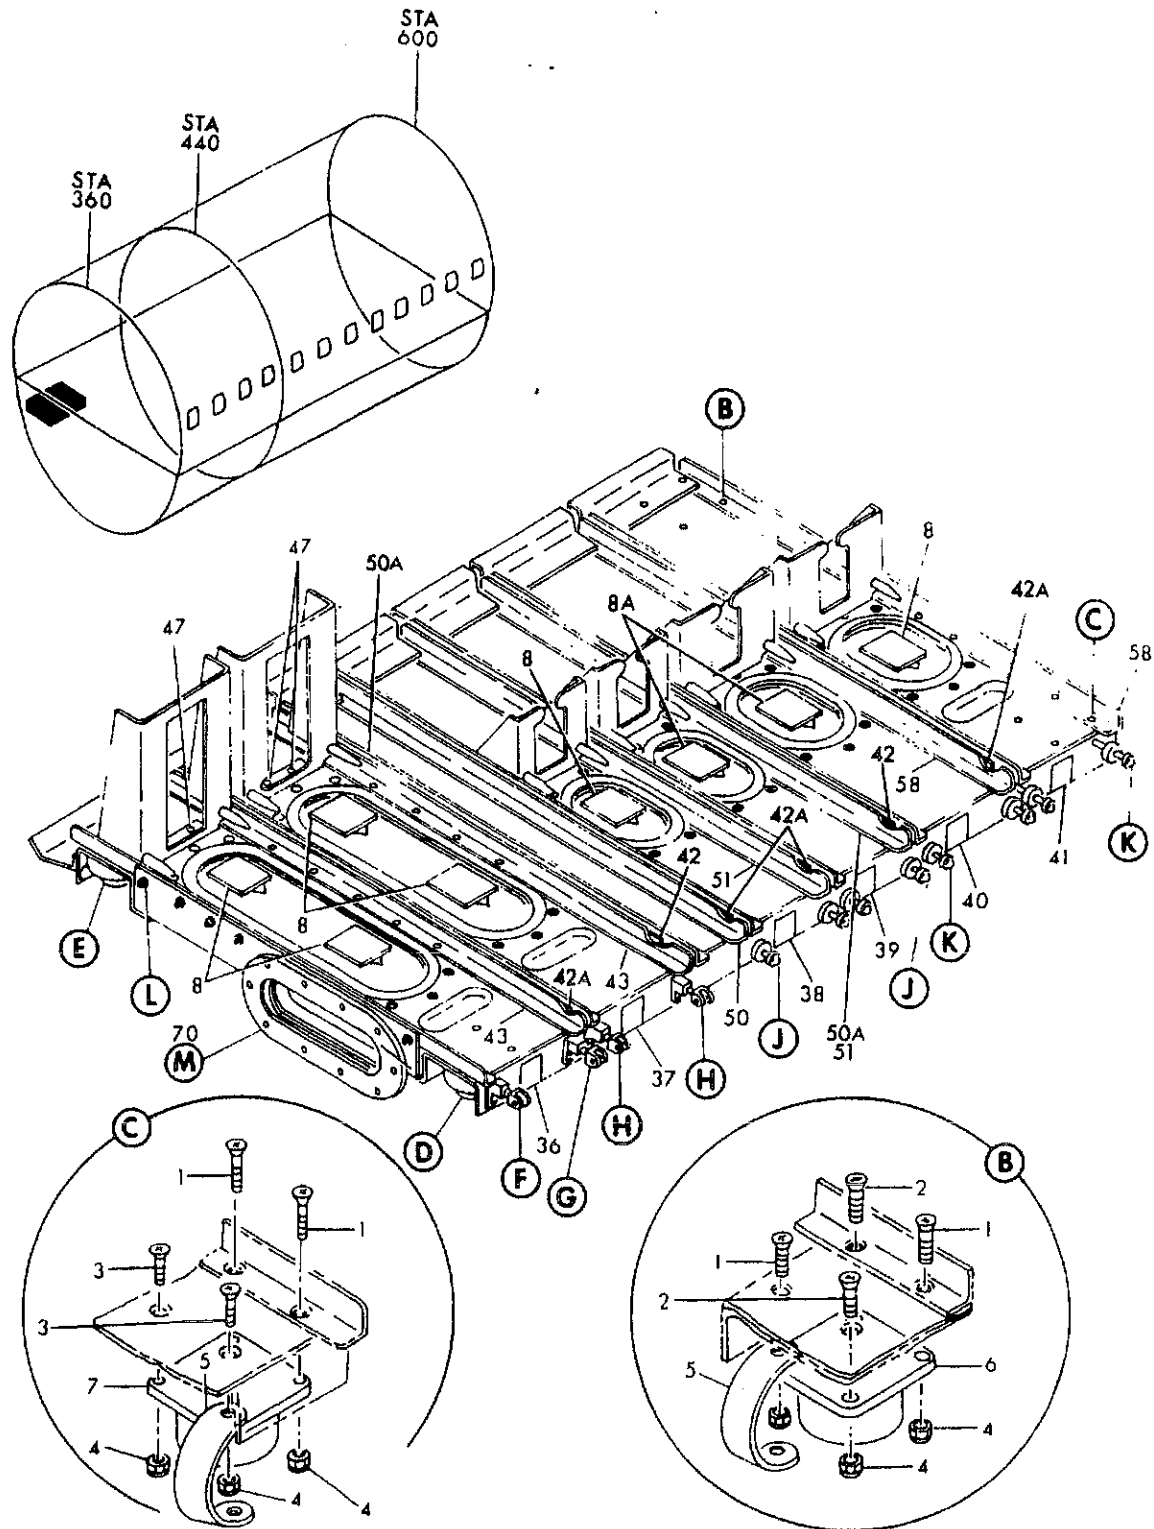


FIGURE 62N. SHELF ASSY, SHELF NO. 3 RH NAVIGATION EQUIPMENT (SHEET 1)

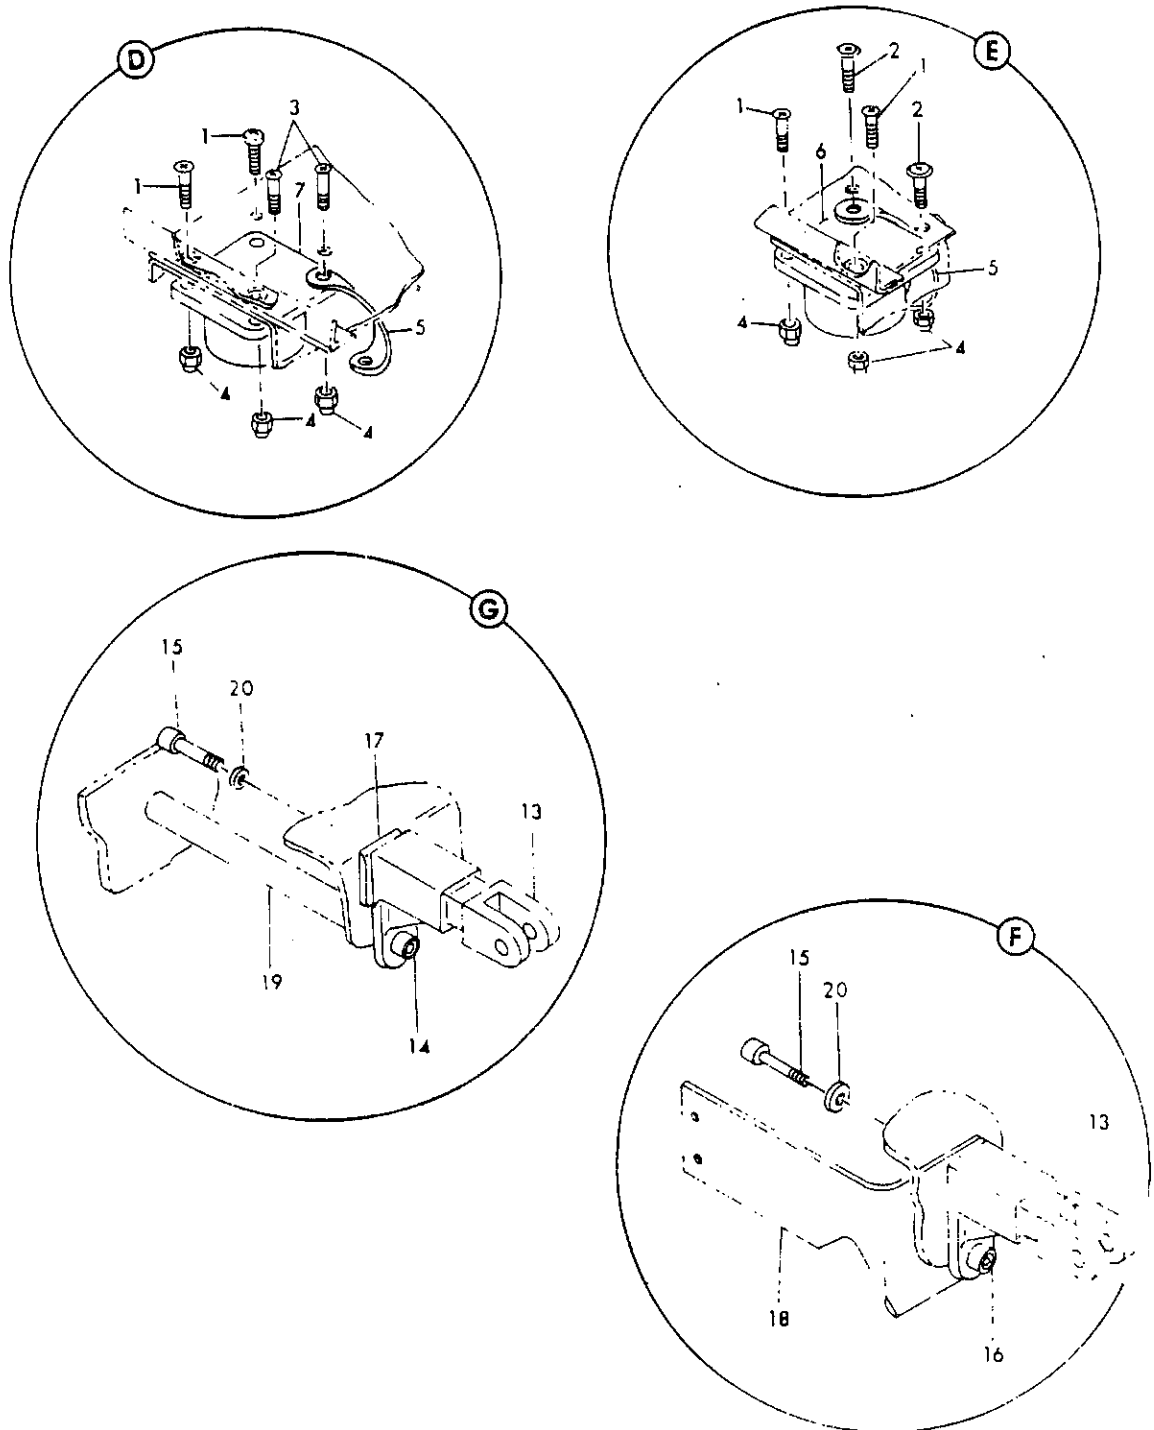


FIGURE 62N. SHELF ASSY, SHELF NO. 3 RH NAVIGATION EQUIPMENT (SHEET 2)

NOV 21/90

24-09-62N

DETAILED PARTS LIST
24-09-62N
PAGE 1

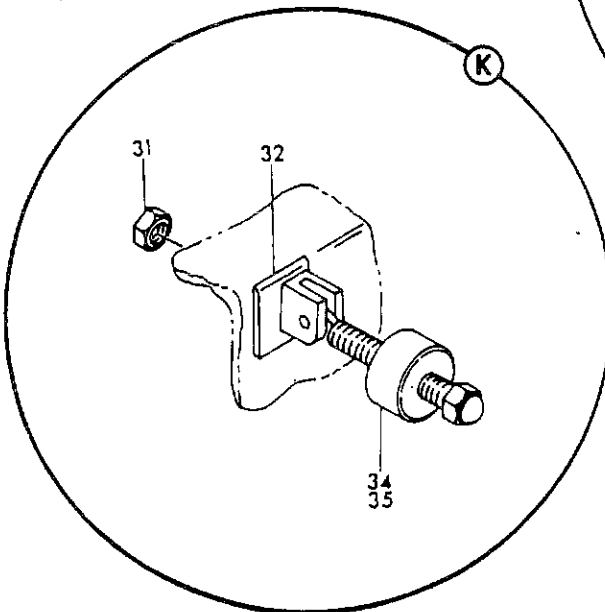
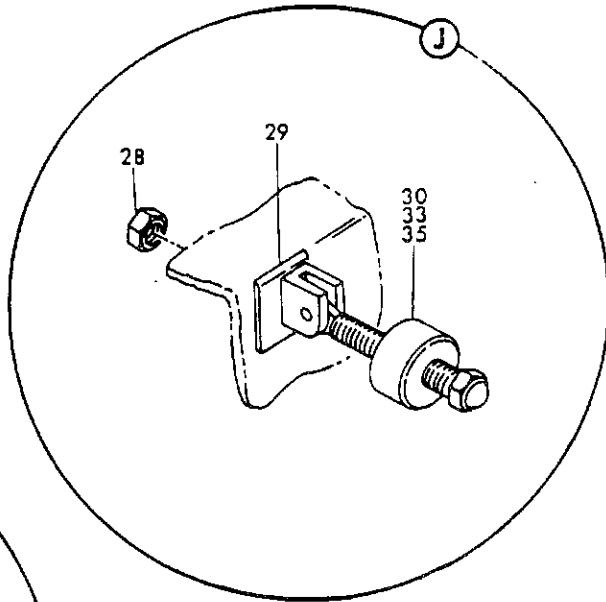
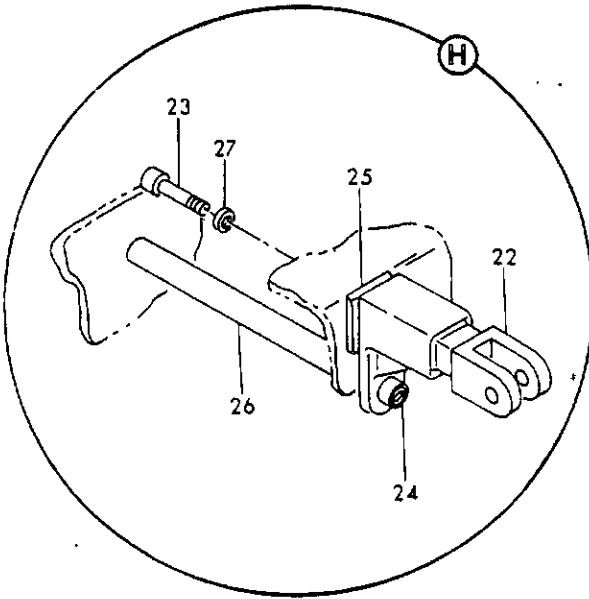


FIGURE 62N. SHELF ASSY, SHELF NO. 3 RH NAVIGATION EQUIPMENT (SHEET 3)

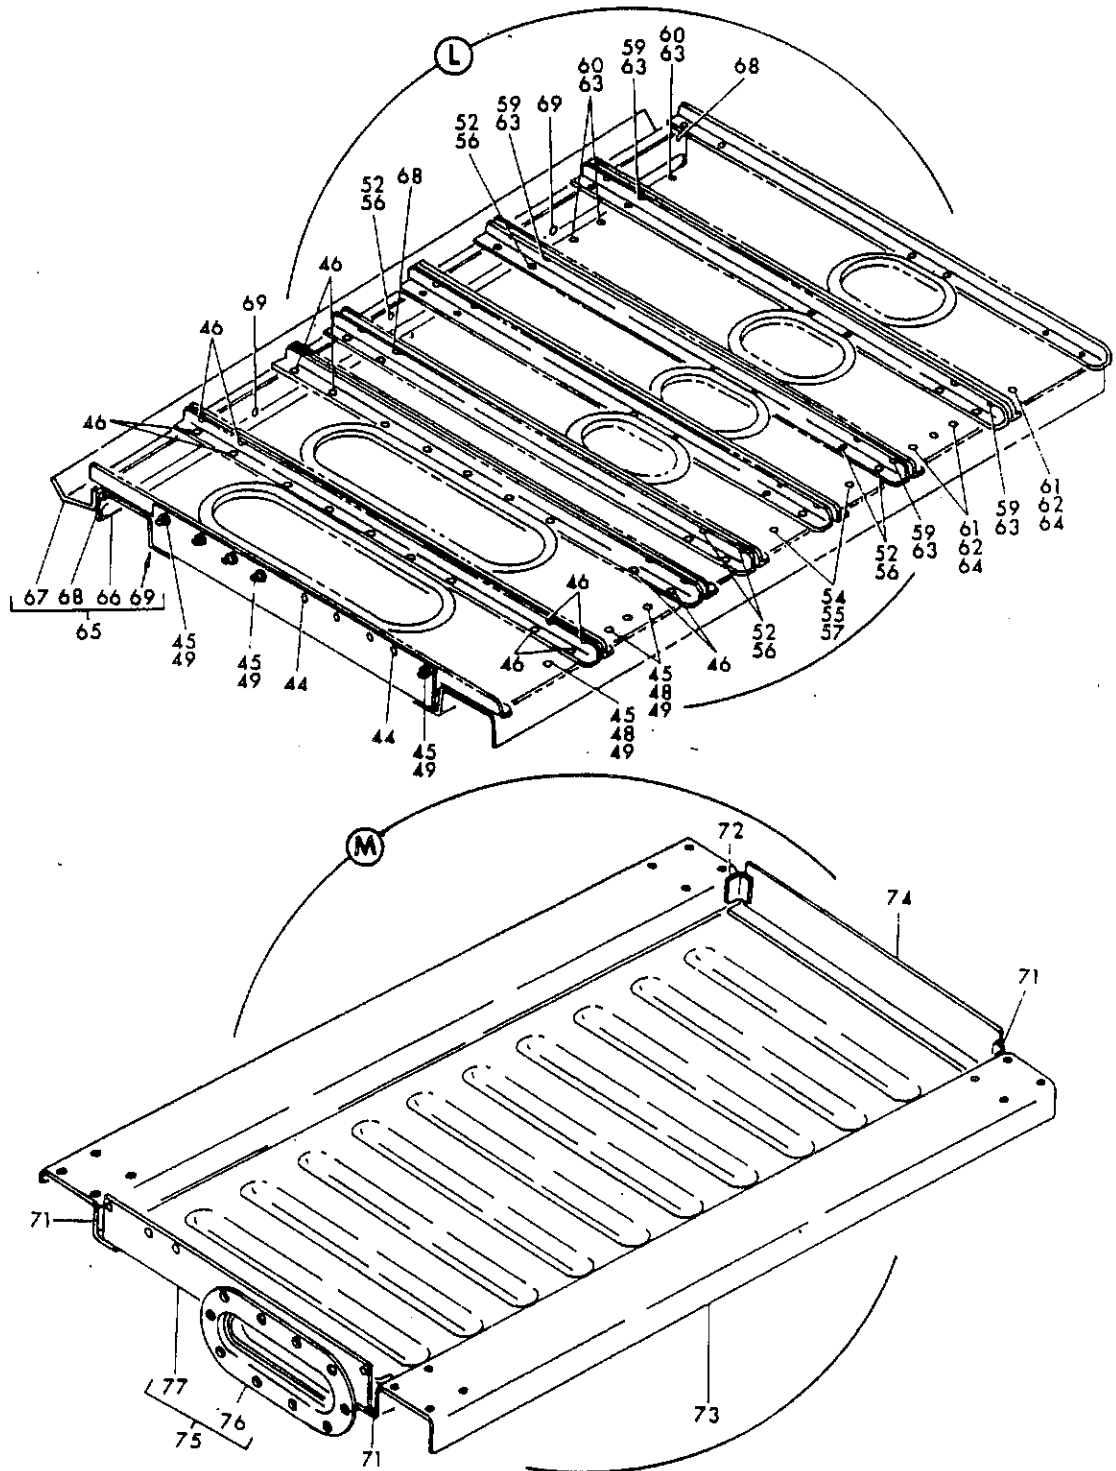


FIGURE 62N. SHELF ASSY, SHELF NO. 3 RH NAVIGATION EQUIPMENT (SHEET 4)

NOV 21/90

24-09-62N

DETAILED PARTS LIST
24-09-62N
PAGE 3



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
62N	65-18717-42		SHELF ASSY, SHELF NO. 3 RH NAVIGATION EQUIPMENT (SEE FIG. 1D, ITEM 7)	5199	RF
1	NAS514P1032-10		• SCREW	5199	8
2	BACS12CB3-10		• SCREW	5199	4
3	BACS12N10-10		• SCREW	5199	4
4	NAS679A3W		• NUT	5199	16
5	66-1650		• STRAP, BONDING.	5199	4
6	BACS14E400B		• SHOCKMOUNT.	5199	2
7	BACS14E500B		• SHOCKMOUNT.	5199	2
8	66-12450-1		• PLATE, COOLING ORIFICE COVER.	5199	6
8A	66-12450-1		• PLATE, COOLING ORIFICE COVER.	5199	2
	65-5313-18		• LATCH INSTL, 1/2 ATR CASE	5199	1
13	27L1-1		• FORK ASSY, (V71286) (OPTIONAL 61L14-2-2AC (V71286))	5199	2
13	614L14-2-2AC		• FORK ASSY, (V71286) (OPTIONAL 27L1-1 (V71286))	5199	2
14	BACS12CB3-8		• SCREW	5199	1
			(OPTIONAL MS24678-10)		
14	MS24678-10		• SCREW	5199	1
			(OPTIONAL TO BACS12CB3-8)		
15	BACS12CB3-14		• SCREW	5199	2
			(OPTIONAL MS24678-13)		
15	MS24678-13		• SCREW	5199	2
			(OPTIONAL TO BACS12CB3-14)		
16	BACS12CB3-58		• SCREW	5199	1
			(OPTIONAL BACS12AG55FA)		
16	BACS12AG55FA		• SCREW	5199	1
			(OPTIONAL TO BACS12CB3-58)		
17	66-2895-3		• SPACER, FORK SUPPORT.	5199	1
18	66-2895-6		• SPACER, FORK SUPPORT.	5199	1
19	NAS43DD3-190		• SPACER, (OPTIONAL NAS43DD3-190N)	5199	1
19	NAS43DD3-190N		• SPACER, (OPTIONAL NAS43DD3-190)	5199	1
20	MS35338-43		• WASHER.	5199	2
21	NAS679A3W		• NUT	5199	1
	65-5313-16		• LATCH INSTL, 1/2 ATR CASE	5199	1
22	27L1-1		• FORK ASSY, (V71286) (OPTIONAL 61L14-2-2AC (V71286))	5199	2
22	614L14-2-2AC		• FORK ASSY, (V71286) (OPTIONAL 27L1-1 (V71286))	5199	2
23	BACS12CB3-14		• SCREW	5199	2
			(OPTIONAL MS24678-13)		
23	MS24678-13		• SCREW	5199	2
			(OPTIONAL TO BACS12CB3-14)		
24	BACS12CB3-58		• SCREW	5199	2
			(OPTIONAL BACS12AG55FA)		
24	BACS12AG55FA		• SCREW	5199	2
			(OPTIONAL TO BACS12CB3-58)		
25	66-2895-3		• SPACER, FORK SUPPORT.	5199	2
26	NAS43DD3-190		• SPACER, (OPTIONAL NAS43DD3-190N)	5199	2
26	NAS43DD3-190N		• SPACER, (OPTIONAL NAS43DD3-190)	5199	2
27	MS35338-43		• WASHER.	5199	2
	65-5270-1		• HOLD DOWN INSTL, 3/8 ATR.	5199	2
28	BACN10JC3		• NUT	5199	2
29	66-1387		• FILLER, RADIUS.	5199	2
30	66-1390		• BOLT ASSY, UNIT HOLD DOWN (SEE FIG. 106).	5199	2
			(OPTIONAL TO 121366-707 (V30528))		
30	121366-707		• BOLT ASSY, UNIT HOLD DOWN (V30528).	5199	2
			(OPTIONAL 66-1390 FIG. 106)		
	65-5270-2		• HOLD DOWN INSTL, 1/2 ATR.	5199	2
31	BACN10JC3		• NUT	5199	2
32	66-1387		• FILLER, RADIUS.	5199	2
33	66-1390		• BOLT ASSY, UNIT HOLD DOWN (SEE FIG. 106).	5199	2
			(OPTIONAL TO 121366-707 (V30528))		
34	121366-707		• BOLT ASSY, UNIT HOLD DOWN (V30528).	5199	2
			(OPTIONAL 66-1390 FIG. 106)		
35	116387		• HOLD DOWN ASSY, (V65597).	5199	4
			(OPTIONAL 121266 (V30528))		
35	121266		• HOLD DOWN ASSY, (V30528).	5199	4
			(OPTIONAL TO 116387 (V65597))		
36	65-1945-231		• PLATE, IDENTIFICATION	5199	1
37	65-1945-232		• PLATE, IDENTIFICATION	5199	1
38	65-1945-59		• PLATE, IDENTIFICATION	5199	1
39	65-1945-60		• PLATE, IDENTIFICATION	5199	1
40	65-1945-146		• PLATE, IDENTIFICATION	5199	1
41	65-1945-147		• PLATE, IDENTIFICATION	5199	1
			ATTACHING PARTS		
	BACS12CB04-6		• SCREW	5199	12
	NAS679A04W		• NUT	5199	12

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
62N 42	66-1383-2	.	SEAL.	.	.	.	.	.	5199	2
42A	66-1383-2	.	SEAL.	.	.	.	.	.	5199	4
43	65-18719-59	.	TRAY ASSY, 1/2 ATR 3DPD LONG ON LONG EQUIPMENT.	.	.	.	.	.	5199	2
			MOUNTING (SEE FIG. 87)							
			ATTACHING PARTS							
44	MS2042684	.	RIVET	.	.	.	.	.	5199	4
45	NAS514P632-5	.	SCREW	.	.	.	.	.	5199	9
46	NAS514P1032-10	.	SCREW	.	.	.	.	.	5199	12
47	BACS12CB3-10	.	SCREW	.	.	.	.	.	5199	3
48	BACW10AL1	.	WASHER.	.	.	.	.	.	5199	4
49	NAS679A06W	.	NUT	.	.	.	.	.	5199	9
			-----*							
50	69-1522-1	.	COVER ASSY, 1/4 ATR	.	.	.	.	.	5199	1
			ATTACHING PARTS							
	NAS514P1032-10	.	SCREW	.	.	.	.	.	5199	6
	NAS679A3W	.	NUT	.	.	.	.	.	5199	6
			-----*							
51	65-18719-53	.	TRAY ASSY, 3/8 ARINC DPX2 SHORT ON LONG EQUIPMENT	.	.	.	.	.	5199	2
			MOUNTING (SEE FIG. 82)							
			ATTACHING PARTS							
52	NAS514P1032-10	.	SCREW	.	.	.	.	.	5199	12
53	BACS12CB3-10	.	SCREW	.	.	.	.	.	5199	2
54	NAS514P632-5	.	SCREW	.	.	.	.	.	5199	2
55	BACW10AL1	.	WASHER.	.	.	.	.	.	5199	2
56	NAS679A3W	.	NUT	.	.	.	.	.	5199	12
57	NAS679A06W	.	NUT	.	.	.	.	.	5199	2
			-----*							
58	65-18719-39	.	TRAY ASSY, 1/2 ATR DPX2 SHORT ON LONG EQUIPMENT	.	.	.	.	.	5199	2
			MOUNTING (SEE FIG. 89)							
			ATTACHING PARTS							
59	NAS514P1032-10	.	SCREW	.	.	.	.	.	5199	9
60	BACS12CB3-10	.	SCREW	.	.	.	.	.	5199	3
61	NAS514P632-5	.	SCREW	.	.	.	.	.	5199	4
62	BACW10AL1	.	WASHER.	.	.	.	.	.	5199	4
63	NAS679A3W	.	NUT	.	.	.	.	.	5199	12
64	NAS679A06W	.	NUT	.	.	.	.	.	5199	4
			-----*							
65	65-51790-19	.	SUPPORT INSTL, DISCONNECT	.	.	.	.	.	5199	1
66	BAC27CEE682	.	SCOTCH-CAL, R3-1, R3-12	.	.	.	.	.	5199	1
67	65-51789-39	.	BRACKET, SUPPORT	.	.	.	.	.	5199	1
			ATTACHING PARTS							
68	MS20470D5	.	RIVET	.	.	.	.	.	5199	3
69	MS20426D5	.	RIVET	.	.	.	.	.	5199	2
			-----*							
70	65-5207-5	.	SUPPORT ASSY.	.	.	.	.	.	5199	1
71	66-1685	.	CLIP, ATTACH ANGLE.	.	.	.	.	.	5199	3
72	66-1685-1	.	CLIP, ATTACH ANGLE.	.	.	.	.	.	5199	1
			ATTACHING PARTS							
	MS20470D4	.	RIVET	.	.	.	.	.	5199	14
			-----*							
73	65-1649-7	.	SHELF ASSY.	.	.	.	.	.	5199	1
74	69-1327-1	.	PANEL, END.	.	.	.	.	.	5199	1
75	69-1334-2	.	PANEL ASSY, END DUCT ATTACHING.	.	.	.	.	.	5199	1
76	66-1337	.	SEAL, AIR	.	.	.	.	.	5199	1
77	69-1334-6	.	WELD ASSY	.	.	.	.	.	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

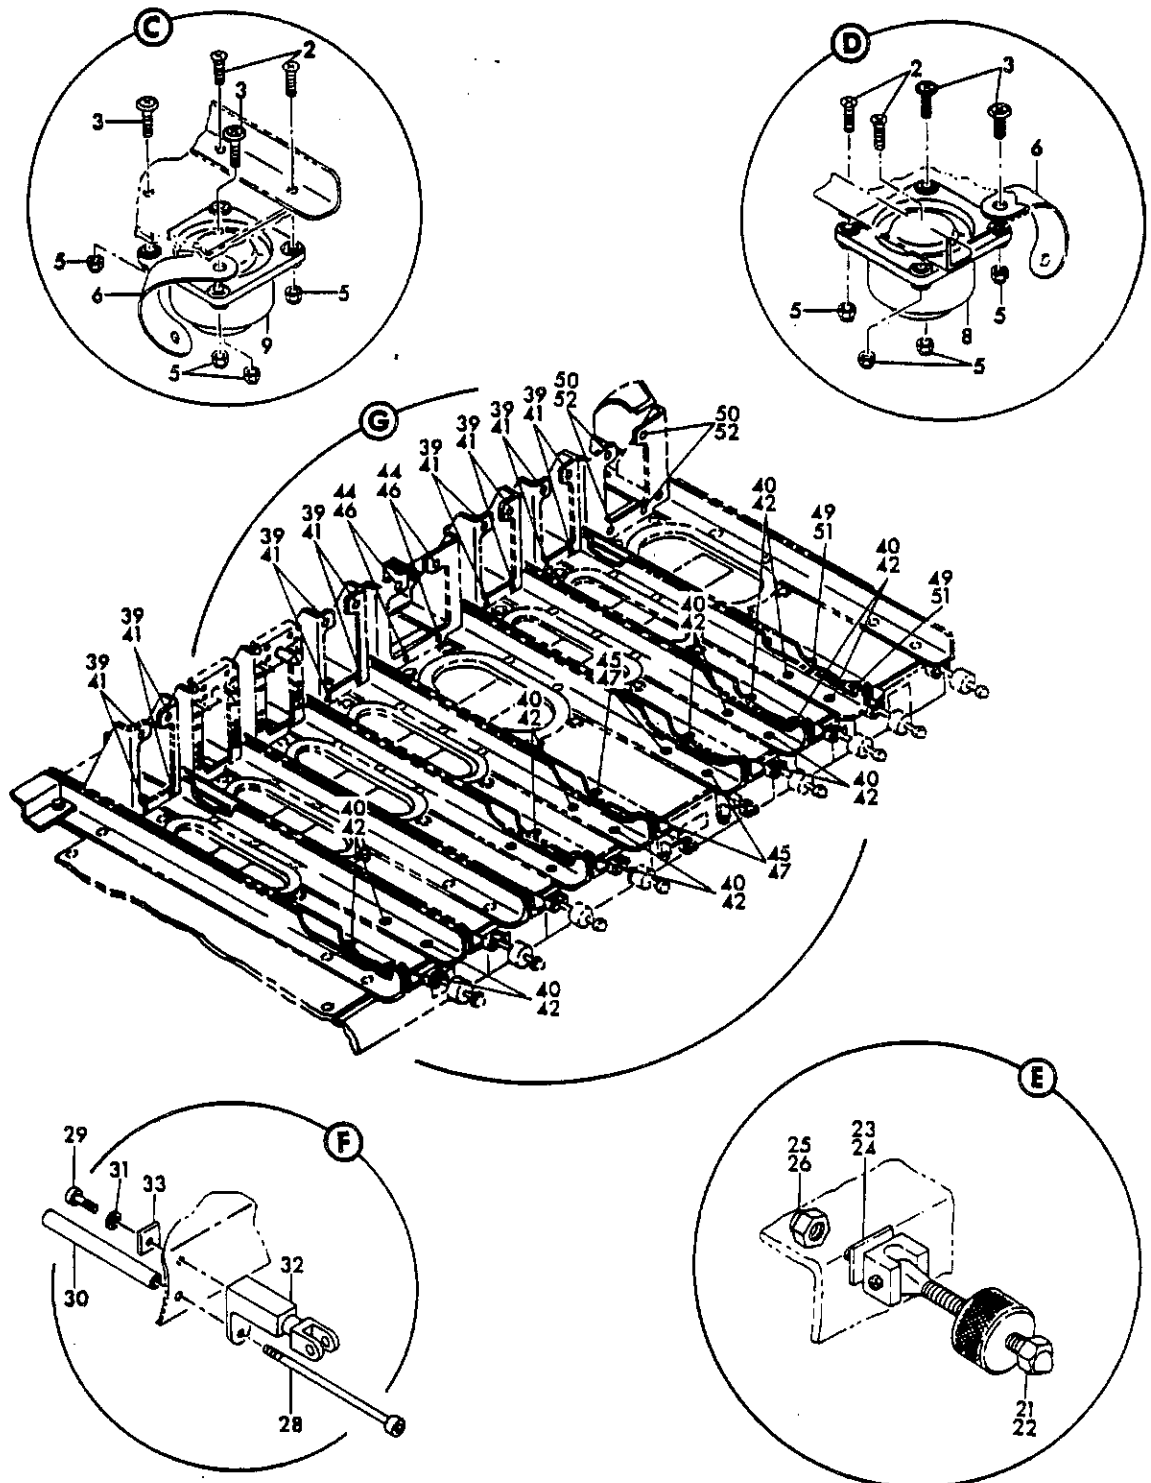


FIGURE 63B. SHELF ASSY, SHELF NO. 4 RH ELECTRONIC RACK (SHEET 2)

NOV 21/90

24-09-638

DETAILED PARTS LIST
24-09-638
PAGE 1

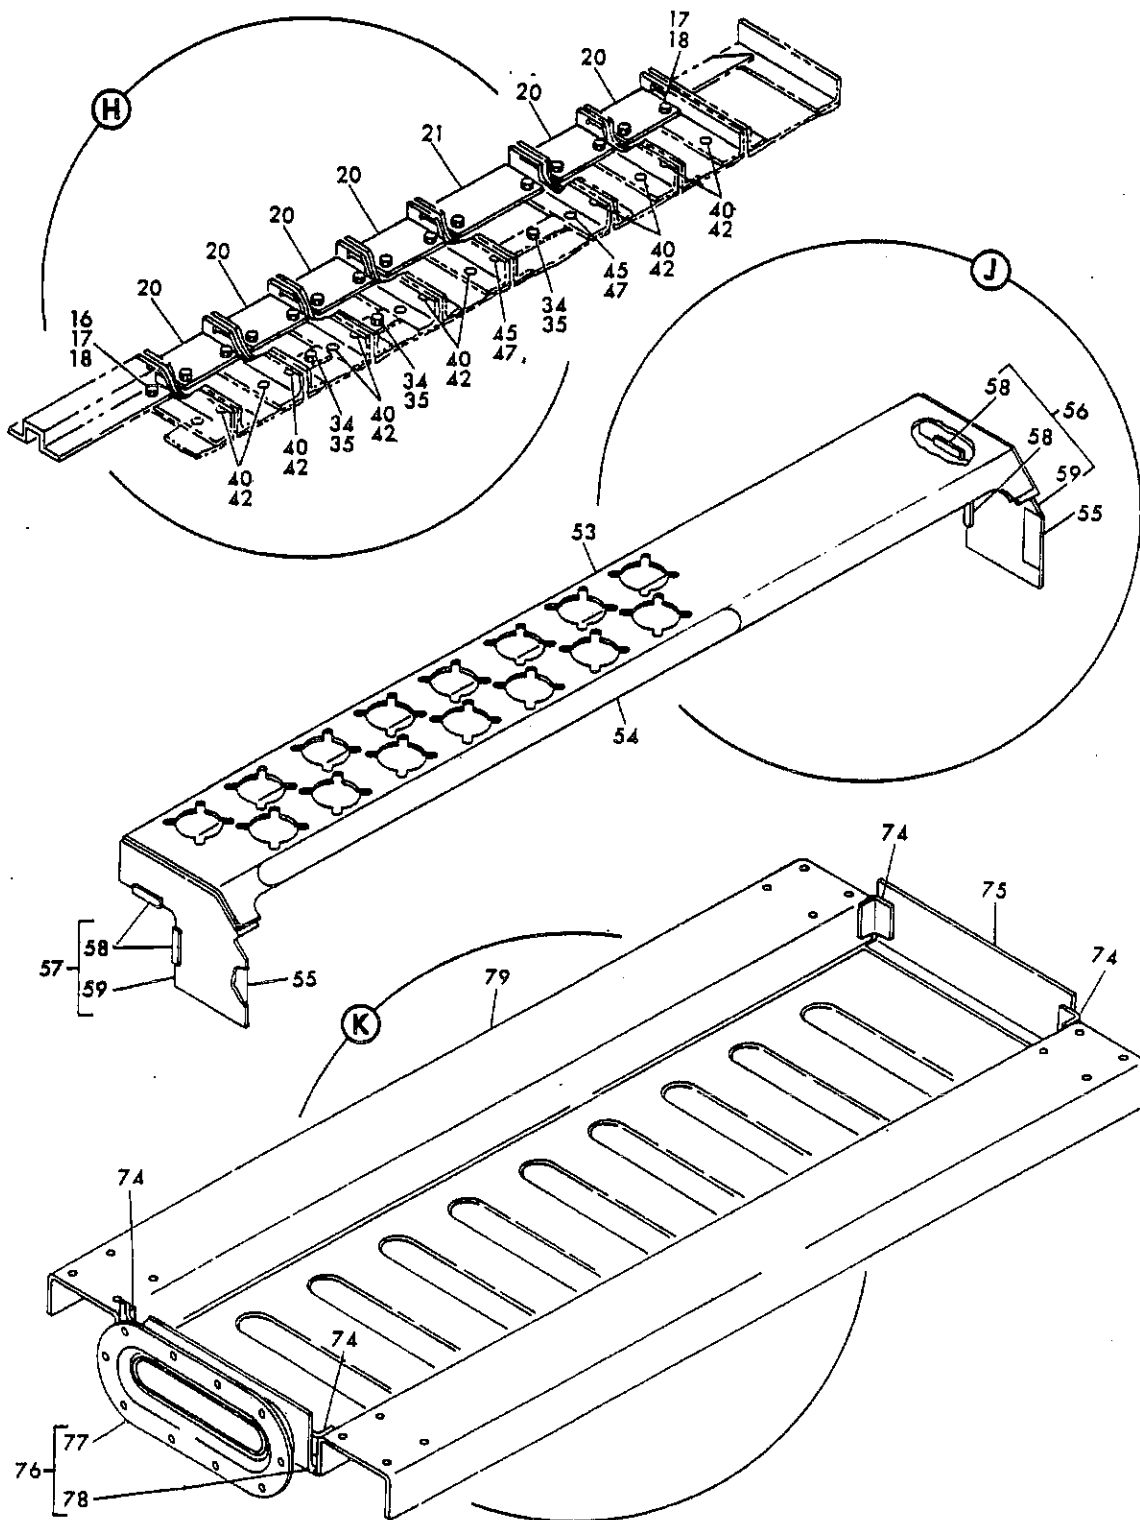


FIGURE 63B. SHELF ASSY, NO. 4 RH ELECTRONIC RACK (SHEET 3)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
63B	65-18718-54	SHELF ASSY, SHELF NO. 4 RH ELECTRONIC RACK (SEE FIG. 1D, ITEM 8)	5151	RF
1	BACS12CB3-10	SCREW	5151	4
2	NAS514P1032-10	SCREW	5151	8
3	BACS12N10-10	SCREW	5151	4
4	66-2955-3	WASHER, SPECIAL REPAIR.	5151	1
5	BACN10JC3	NUT	5151	16
6	66-1650	STRAP, BONDING.	5151	4
7	BACS14E125B5	SHOCKMOUNT.	5151	1
8	BACS14E200B	SHOCKMOUNT.	5151	2
9	BACS14E400B	SHOCKMOUNT.	5151	1
10	BACS12CB3-10	SCREW	5151	2
11	NAS514P632-5	SCREW	5151	2
12	BACW10AL1	WASHER.	5151	2
13	BACN10JC3	NUT	5151	2
14	BACN10JC06	NUT	5151	2
15	69-1522-2	COVER ASSY.	5151	1
16	BACS12CB3-10	SCREW	5151	15
17	66-2955-3	WASHER, SPECIAL REPAIR.	5151	15
18	BACN10JC3	NUT	5151	15
19	69-15310-4	BRACKET, WIRE SUPPORT	5151	1
19	65-5270	HOLD DOWN INSTL, 1/4 ATR CASE FRONT	5151	6
20	69-15310-1	BRACKET, WIRE SUPPORT	5151	6
20	65-5270-1	HOLD DOWN INSTL, 3/8 ATR CASE FRONT	5151	1
21	69-15310-2	BRACKET, WIRE SUPPORT	5151	1
21	121366-707	BOLT ASSY, (V30528) (USED ON 65-5270) (OPTIONAL 66-1390 (SEE FIG. 106))	5151	1
21	66-1390	BOLT ASSY, (USED ON 65-5270) (SEE FIG. 106) (OPTIONAL TO 121366-707 (V30528))	5151	1
22	66-1383-3	SEAL, RUBBER.	5151	1
22	121366-707	BOLT ASSY, (V30528) (USED ON 65-5270-1) (OPTIONAL 66-1390 (SEE FIG. 106))	5151	2
22	66-1390	BOLT ASSY, (USED ON 65-5270-1) (SEE FIG. 106) (OPTIONAL TO 121366-707 (V30528))	5151	2
23	66-1383-5	SEAL, RUBBER.	5151	7
23	66-1387	FILLER, EXTRUDED (USED ON 65-5270).	5151	1
24	66-1383-4	SEAL, RUBBER.	5151	7
24	66-1387	FILLER, EXTRUDED (USED ON 65-5270).	5151	2
25	BACN10JC3	NUT, (USED ON 65-5270).	5151	1
25	66-12450-2	PLATE, COOLING AIR DRIPICE COVER.	5151	6
26	66-12450-1	NUT, (USED ON 65-5270).	5151	2
26	BACN10JC3	NUT, (USED ON 65-5270).	5151	2
27	65-5313-2	LATCH INSTL, 3/8 ATR CASE	5151	1
28	BACS12CB3-58	SCREW (OPTIONAL BACS12AG55FA)	5151	1
28	BACS12AG55FA	SCREW (OPTIONAL TO BACS12CB3-58)	5151	1
29	BACS12CB3-14	SCREW (OPTIONAL MS24678-13)	5151	1
29	MS24678-13	SCREW (OPTIONAL TO BACS12CB3-14)	5151	1
30	NAS43DD3-190	SPACER, (OPTIONAL NAS43DD3-190N).	5151	1
30	NAS43DD3-190N	SPACER, (OPTIONAL NAS43DD3-190)	5151	1
31	MS35338-43	WASHER.	5151	1
32	27L1-1	FORK ASSY, (V71286) (OPTIONAL 61L14-2-2AC (V71286))	5151	1
32	614L14-2-2AC	FORK ASSY, (V71286) (OPTIONAL 27L1-1 (V71286))	5151	1
33	66-2895-3	SPACER, FORK SUPPORT.	5151	1
34	BACS12CB3-10	SCREW	5151	3
35	BACN10JC3	NUT	5151	3
36	66-1398-4	PIN, INDEX.	5151	4
37	65-18719-1	TRAY ASSY, 1/4 ATR DPX2 SHORT ON SHORT (SEE FIG. 76) ATTACHING PARTS	5151	2
	NAS514P1032-10	SCREW	5151	12
	BACN10JC3	NUT	5151	12
38	65-18719-41	TRAY ASSY, 1/4 ATR DPX2 SHORT ON SHORT (SEE FIG. 76) ATTACHING PARTS	5151	4
39	MS35190-225	SCREW	5151	16
40	NAS514P1032-10	SCREW	5151	24
41	BACN10JC06	NUT	5151	16
42	BACN10JC3	NUT	5151	24
43	65-18719-73	TRAY ASSY, 3/8 ATR DPX2 SHORT ON SHORT (SEE FIG. 82)	5151	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
638			ATTACHING PARTS		
44	MS35190-225	.	SCREW	5151	4
45	NAS514P1032-10	.	SCREW	5151	6
46	BACN10JC06	.	NUT	5151	4
47	BACN10JC3	.	NUT	5151	6
			-----*		
48	65-18719-48	.	TRAY ASSY, 3/8 ATR DPX2 SHORT ON SHORT (SEE FIG. 82)	5151	1
			ATTACHING PARTS		
49	NAS514P1032-10	.	SCREW	5151	4
50	BACS12CB04-7	.	SCREW	5151	4
51	BACN10JC3	.	NUT	5151	4
52	BACN10JC04	.	NUT	5151	4
			-----*		
	65-51790-4	.	SUPPORT INSTL, DISCONNECT	5151	1
53	65-51789-28	.	BRACKET ASSY.	5151	1
			ATTACHING PARTS		
	BACS12CB3-7	.	SCREW	5151	8
	BACN10FX1W	.	NUT	5151	8
			-----*		
54	BACM9R9CJ	.	SCOTCH-CAL, R4-1 THRU R4-15	5151	1
55	BACS47G12D28F	.	SPACER.	5151	1
56	65-51789-25	.	BRACKET ASSY.	5151	1
57	65-51789-26	.	BRACKET ASSY.	5151	1
58	BACG20ZA150	.	GROMMET	5151	2
59	65-51789-23	.	BRACKET, (USED ON 65-51789-25).	5151	1
59	65-51789-24	.	BRACKET, (USED ON 65-51789-26).	5151	1
	65-58937-11	.	FILTER INSTL, FLIGHT INSTRUMENT	5151	1
60	BACM9L00-9BN	.	SCOTCH-CAL, RM887	5151	1
61	BACM9L00-9BP	.	SCOTCH-CAL, RM878	5151	1
62	BACM9L00-9BW	.	SCOTCH-CAL, RM884	5151	1
63	BAC27CEE687	.	SCOTCH-CAL, M4013	5151	1
64	10S1034A	.	FILTER, (V56289).	5151	4
			ATTACHING PARTS		
	BACS12CB08-6	.	SCREW	5151	AR
			-----*		
65	65-53826-135	.	PLATE, GROUND PROXIMITY COMPUTER IDENTIFICATION	5151	1
66	65-53826-19	.	PLATE, FLT INST ACCESS IDENTIFICATION	5151	1
67	65-1945-32	.	PLATE, COMPASS AMPL 1 IDENTIFICATION.	5151	1
68	65-1945-33	.	PLATE, COMPASS AMPL 2 IDENTIFICATION.	5151	1
69	65-1945-200	.	PLATE, TURN RATE RACK IDENTIFICATION.	5151	1
70	65-1945-154	.	PLATE, STEER COMPUTER 1 IDENTIFICATION.	5151	1
71	65-1945-155	.	PLATE, STEER COMPUTER 2 IDENTIFICATION.	5151	1
72	65-1945-168	.	PLATE, NAV WARNING IDENTIFICATION	5151	1
			ATTACHING PARTS		
	BACS12CB04-6	.	SCREW	5151	12
	BACN10JC04	.	NUT	5151	12
			-----*		
73	65-5207-4	.	SUPPORT ASSY, SHORT MOUNTING TRAY	5151	1
74	66-1685	.	CLIP, ATTACH ANGLE.	5151	4
			ATTACHING PARTS		
	MS20470D4	.	RIVET	5151	8
			-----*		
75	69-1327	.	PANEL, END.	5151	1
76	69-1334-3	.	PANEL ASSY, SHELF END DUCT ATTACHING.	5151	1
77	66-1337	.	SEAL, AIR	5151	1
78	69-1334-7	.	WELD ASSY	5151	1
79	65-1649-6	.	SHELF ASSY.	5151	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

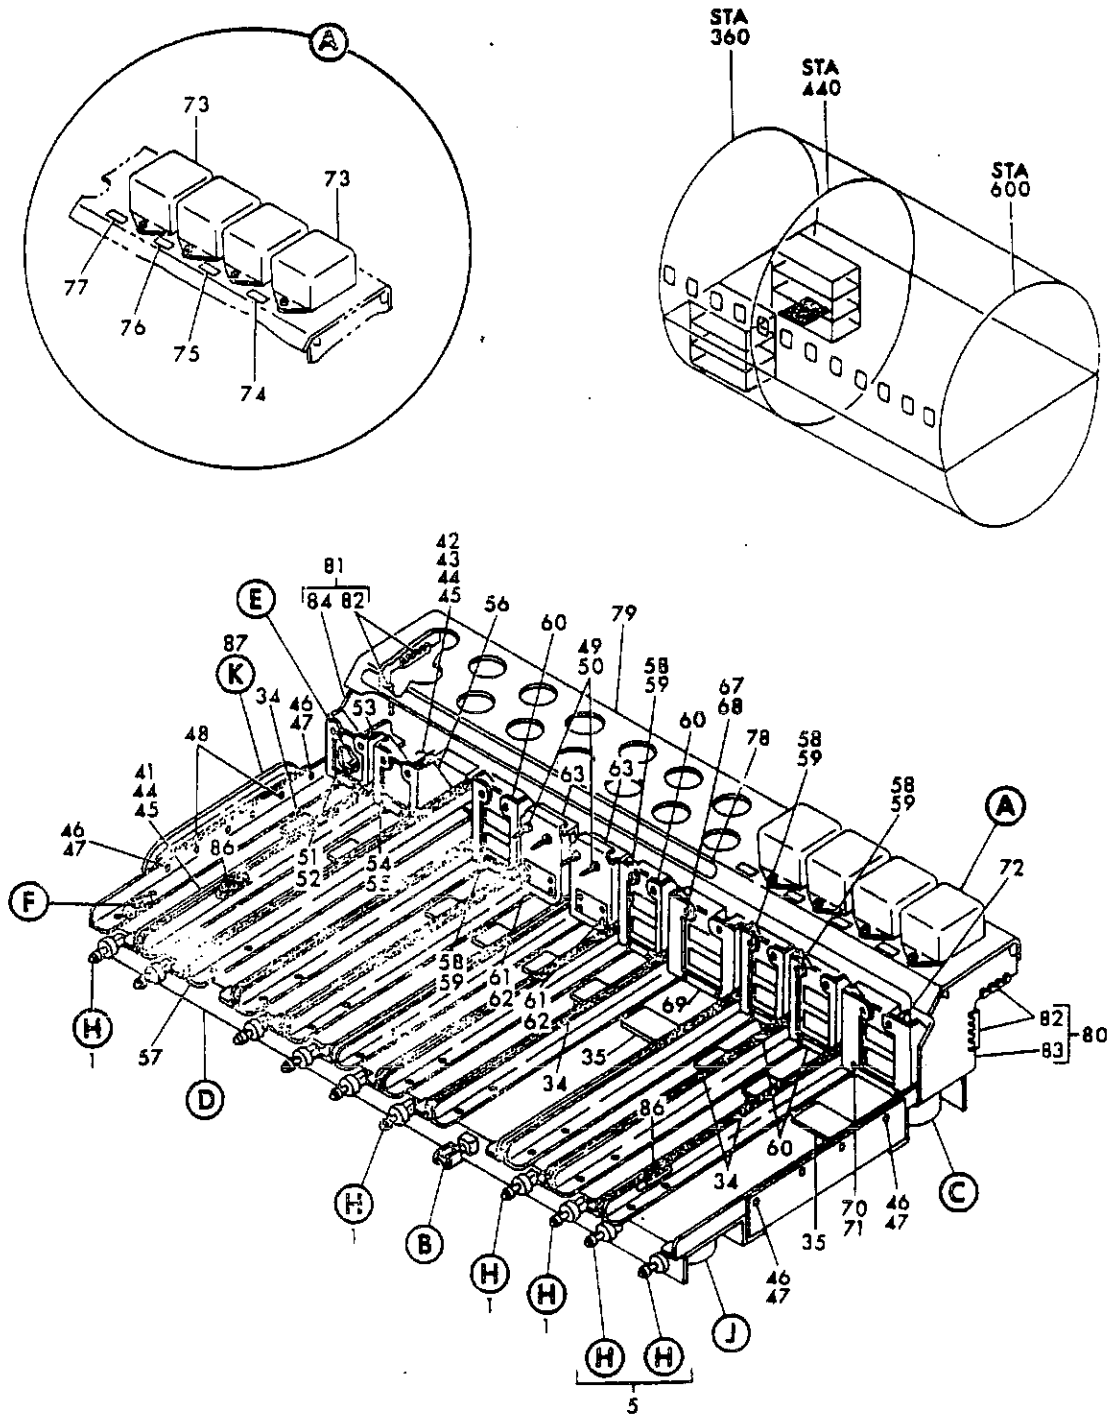


FIGURE 63C. SHELF ASSY, SHELF NO. 4 RH ELECTRONIC RACK (SHEET 1)

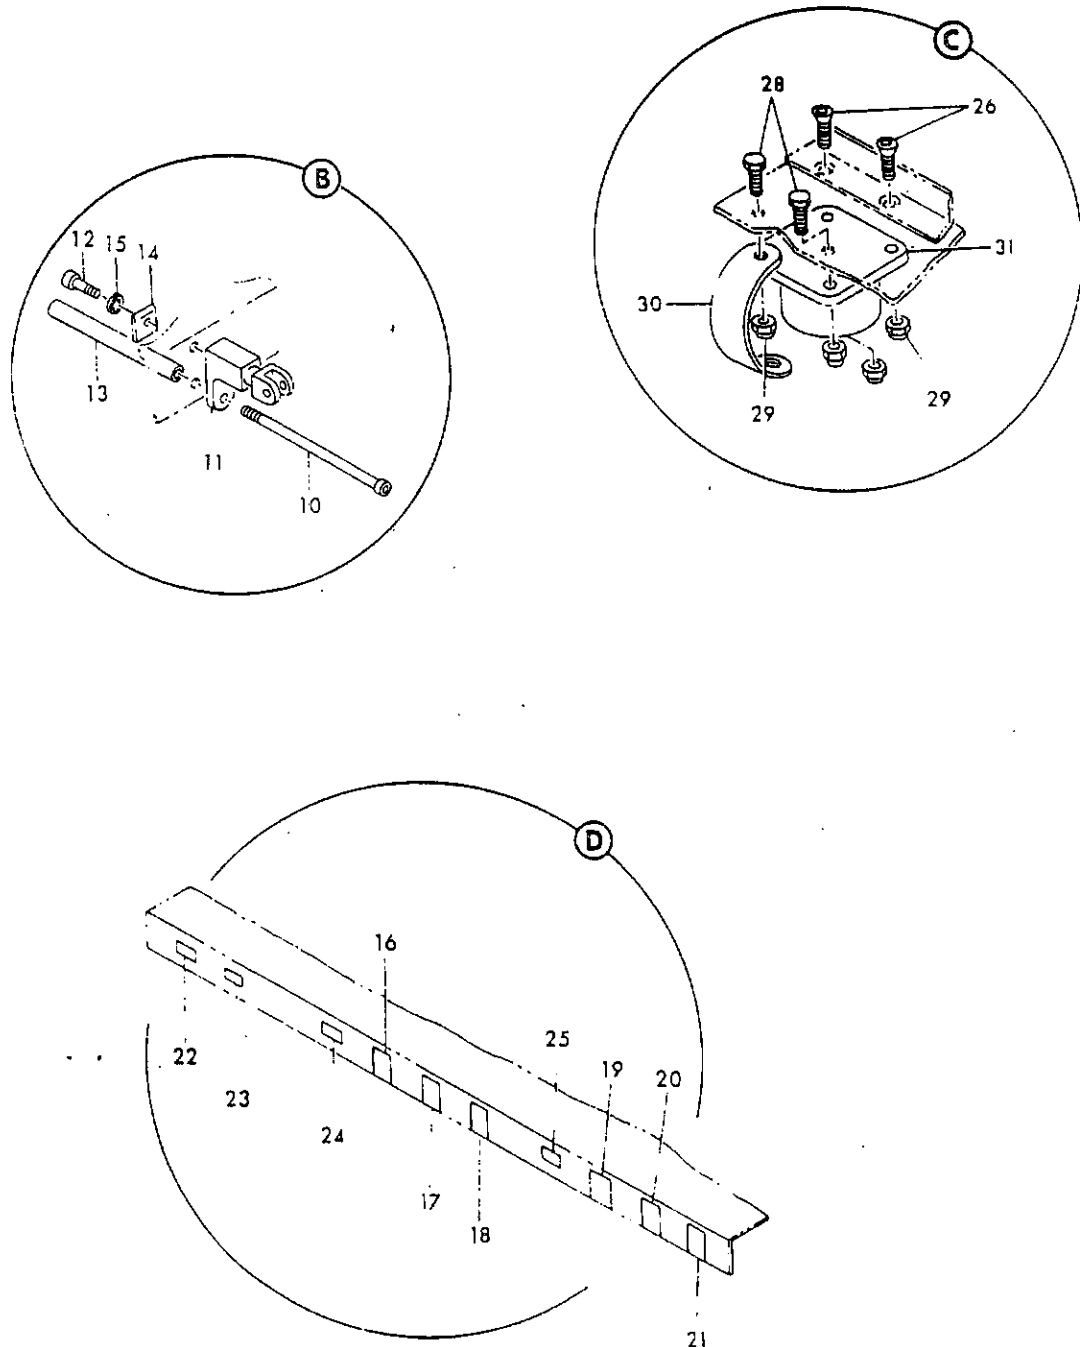


FIGURE 63C. SHELF ASSY. SHELF NO. 4 RH ELECTRONIC RACK (SHEET 2)

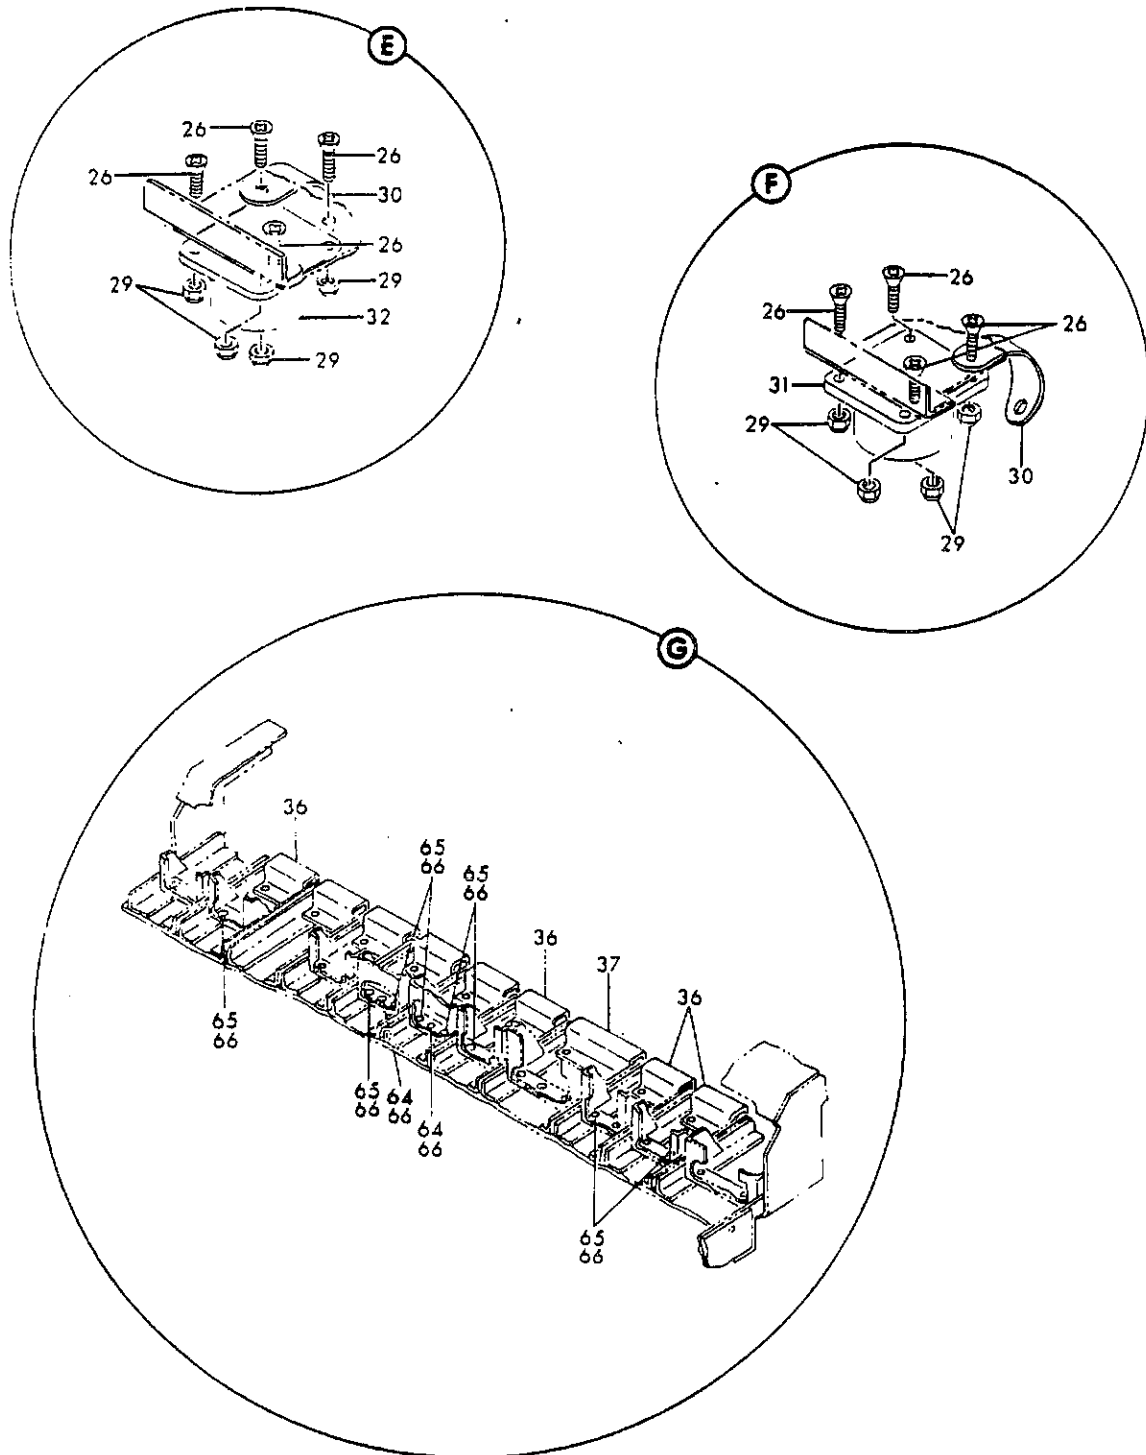


FIGURE 63C. SHELF ASSY, SHELF NO. 4 RH ELECTRONIC RACK (SHEET 3)

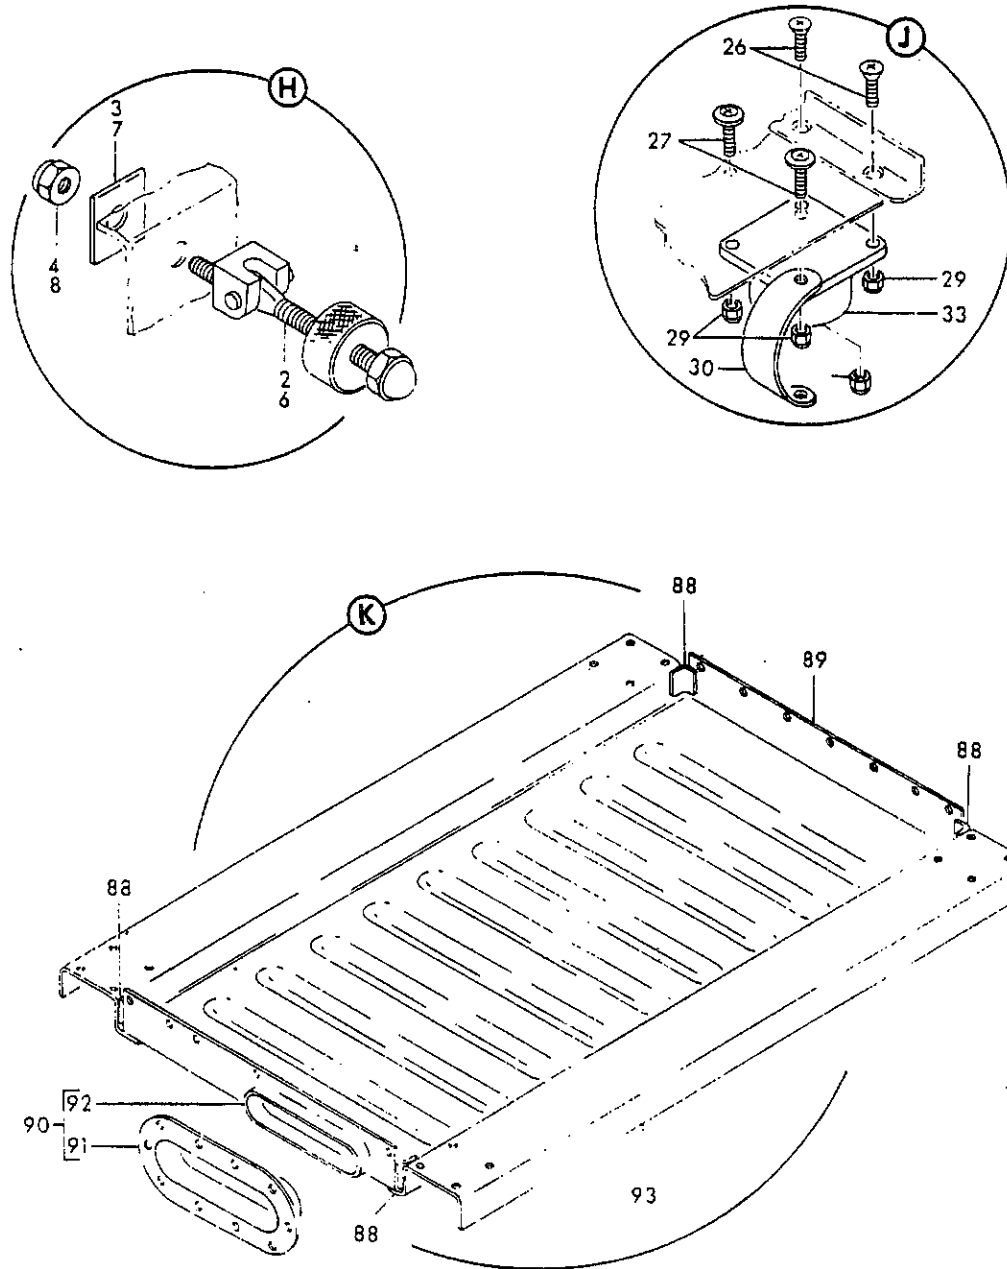


FIGURE 63C. SHELF ASSY, SHELF NO. 4 RH ELECTRONIC RACK (SHEET 4)

NOV 21/90

24-09-630

DETAILED PARTS LIST
24-09-630
PAGE 1

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
63C	65-18718-61	SHELF ASSY, SHELF NO. 4 RH.	5299	RF
1	65-5270	ELECTRONIC RACK (SEE FIG. 1D, ITEM 8)	5299	8
2	121366-707	HOLD DOWN INSTL, 1/4 ATR CASE FRONT	5299	1
2	66-1390	BOLT ASSY, (V30528)	5299	1
3	66-1387	(OPTIONAL 66-1390 FIG. 106)	5299	1
4	BACN10JC3	BOLT ASSY, (SEE FIG. 106)	5299	1
5	69-5270-1	(OPTIONAL TO 121366-707 (V30528))	5299	1
6	121366-707	FILLER, RADIUS.	5299	2
6	66-1390	NUT	5299	2
7	66-1387	HOLD DOWN INSTL, 1/2 ATR CASE FRONT	5299	2
8	BACN10JC3	BOLT ASSY, (V30528)	5299	2
10	65-5313-2	(OPTIONAL 66-1390 FIG. 106)	5299	2
10	27L1-1	BOLT ASSY, (SEE FIG. 106)	5299	2
10	614L14-2-2AC	(OPTIONAL TO 121366-707 (V30528))	5299	2
11	BACSI2CB3-58	FILLER, RADIUS.	5299	1
11	BACSI2AG55FA	NUT	5299	1
12	BACSI2CB3-14	LATCH INSTL, 3/8 ATR CASE CENTER.	5299	1
12	MS24678-13	FORK ASSY, (V71286) (OPTIONAL 61L14-2-2AC (V71286))	5299	1
13	NAS43DD3-190	FORK ASSY, (V71286) (OPTIONAL 27L1-1 (V71286)).	5299	1
13	NAS43DD3-190N	ATTACHING PARTS	5299	1
14	66-2895-3	SCREW	5299	1
15	MS35338-43	(OPTIONAL BACSI2AG55FA)	5299	1
16	65-1945-32	SCREW	5299	1
17	65-1945-33	(OPTIONAL TO BACSI2CB3-58)	5299	1
18	65-1945-200	SCREW	5299	1
19	65-1945-154	(OPTIONAL MS24678-13)	5299	1
20	65-1945-155	(OPTIONAL TO BACSI2CB3-14)	5299	1
21	65-1945-168	SPACER, (OPTIONAL NAS43DD3-190N).	5299	1
	BACSI2CB04-6	SPACER, (OPTIONAL NAS43DD3-190)	5299	1
	BACN10JC04	SPACER, FORK SUPPORT.	5299	1
		WASHER.	5299	1
		-----*		
22	65-53826-199	PLATE, COMPASS AMPL 1 IDENTIFICATION.	5299	1
23	65-53826-200	PLATE, COMPASS AMPL 2 IDENTIFICATION.	5299	1
24	65-53826-135	PLATE, TURN RATE RACK IDENTIFICATION.	5299	1
25	65-53826-19	PLATE, STEER COMPUTER 1 IDENTIFICATION.	5299	1
26	NAS514P1032-10	PLATE, STEER COMPUTER 2 IDENTIFICATION.	5299	1
27	BACSI2N10-10	PLATE, NAVIGATION WARNING IDENTIFICATION.	5299	1
28	BACSI2CB3-10	ATTACHING PARTS	5299	1
29	BACN10JC3	SCREW	5299	8
30	66-1650	NUT	5299	8
31	BACSI4E300B	-----*		
32	BACSI4E200B	PLATE, VMD ADAPTER NO. 1 IDENTIFICATION	5299	1
33	BACSI4E400B	PLATE, VMD ADAPTER NO. 2 IDENTIFICATION	5299	1
34	66-12450-2	PLATE, GROUND PROXIMITY COMPUTER IDENTIFICATION	5299	1
35	66-12450-1	PLATE, FLIGHT INSTRUMENT ACCESS IDENTIFICATION.	5299	1
36	69-15310-1	SCREW	5299	12
	BACSI2CB3-10	SCREW	5299	2
	66-2955-3	SCREW	5299	2
	BACN10JC3	SCREW	5299	2
		NUT	5299	16
		STRAP, BONDING.	5299	4
		SHOCKMOUNT.	5299	2
		SHOCKMOUNT.	5299	1
		SHOCKMOUNT.	5299	1
		PLATE, COOLING AIR ORIFICE COVER.	5299	8
		PLATE, COOLING AIR ORIFICE COVER.	5299	2
		BRACKET, RADIO RACK SHELVES WIRE SUPPORT.	5299	8
		ATTACHING PARTS		
		SCREW	5299	16
		WASHER, SPECIAL REPAIR.	5299	16
		NUT	5299	16
		-----*		
37	69-15310-2	BRACKET, RADIO RACK SHELVES WIRE SUPPORT.	5299	1
	BACSI2CB3-10	ATTACHING PARTS		
	66-2955-3	SCREW	5299	2
	BACN10JC3	WASHER, SPECIAL REPAIR.	5299	2
		NUT	5299	4
		-----*		
41	NAS514P1032-10	SCREW	5299	1
42	BACSI2CB3-10	SCREW	5299	1
43	AN960PD10	WASHER.	5299	1
44	AN256-10	NUT	5299	2
45	BACR158B3D	RIVET	5299	4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
63C 46	NAS514P632-5	. SCREW	5299	6
47	BACN10JC06	. NUT	5299	6
48	BACR158A48	. RIVET	5299	4
49	66-1398-4	. PIN, INDEX.	5299	4
50	BACN10JC06	. NUT	5299	4
51	MS35190-225	. SCREW	5299	4
52	BACN10JC04	. NUT	5299	4
53	65-18719-54	. TRAY ASSY, 1/4 ATR DPXB SHORT ON SHORT MOUNTING . . . (SEE FIG. 76)	5299	1
54	MS35190-225	. SCREW	5299	4
55	BACN10JC04	. NUT	5299	4
56	65-18719-54	. TRAY ASSY, 1/4 ATR DPXB SHORT ON SHORT MOUNTING . . . (SEE FIG. 76)	5299	1
	NAS514P1032-10	ATTACHING PARTS		
	BACN10JC3	. SCREW	5299	6
		. NUT	5299	6
57	69-1522-22	. COVER, 1/4 ATR SHORT SHELF.	5299	1
	NAS514P1032-10	ATTACHING PARTS		
	BACN10JC3	. SCREW	5299	6
		. NUT	5299	6
58	MS35190-225	. SCREW	5299	16
59	BACN10JC04	. NUT	5299	16
60	65-18719-41	. TRAY ASSY, 1/4 ATR DPXB SHORT ON SHORT MOUNTING (SEE FIG. 76)	5299	4
	NAS514P1032-10	ATTACHING PARTS		
	BACN10JC3	. SCREW	5299	16
		. NUT	5299	16
61	MS35190-213	. SCREW	5299	8
62	BACN10DN-26	. NUT	5299	8
63	65-18719-1	. TRAY ASSY, 1/4 ATR DPXB SHORT ON SHORT MOUNTING . . . (SEE FIG. 76)	5299	2
		ATTACHING PARTS		
64	BACS12CB3-10	. SCREW	5299	2
65	NAS514P1032-10	. SCREW	5299	14
66	BACN10JC3	. NUT	5299	16
67	MS35190-225	. SCREW	5299	4
68	BACN10JC04	. NUT	5299	4
69	65-18719-73	. TRAY ASSY 3/8 ATR SHORT ON SHORT MOUNTING (SEE FIG. 82)	5299	1
	NAS514P1032-10	ATTACHING PARTS		
	BACN10JC3	. SCREW	5299	6
		. NUT	5299	6
70	BACS12CB04-7	. SCREW	5299	4
71	BACN10JC04	. NUT	5299	4
72	65-18719-48	. TRAY ASSY, 3/8 ATR DPX2 SHORT ON SHORT MOUNTING (SEE FIG. 82)	5299	1
	NAS514P1032-10	ATTACHING PARTS		
	BACN10JC3	. SCREW	5299	3
		. NUT	5299	3
73	65-58937-11	. FILTER INSTL.	5299	1
	10S1034A	. . FILTER, (V56289).	5299	4
	BACS12CB08-6	ATTACHING PARTS		
		. SCREW	5299	8
74	BACM9L00-98W	. . SCOTCH-CAL, RM884	5299	1
75	BAC27CEE687	. . SCOTCH-CAL, M4013	5299	1
76	BACM9L00-98N	. . SCOTCH-CAL, RM887	5299	1
77	BACM9L00-98P	. . SCOTCH-CAL, RM878	5299	1
	65-51790-45	. SUPPORT INSTL, DISCONNECT	5299	1
78	BAC27CEE-2196	. . SCOTCH-CAL, R4-1 THRU R4-15	5299	1
79	65-51789-59	. . SUPPORT ASSY.	5299	1
	BACS12CB3-7	ATTACHING PARTS		
	BACN10FX1W	. SCREW	5299	8
		. NUT	5299	8
80	65-51789-25	. . BRACKET ASSY.	5299	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
63C	81	65-51789-26	. .	BRACKET ASSY.					5299	1
	82	BACG20ZA150	. . .	GROMMET					5299	2
	83	65-51789-23	. . .	BRACKET, (USED ON 65-51789-25)					5299	1
	84	65-51789-24	. . .	BRACKET, (USED ON 65-51789-26)					5299	1
	85	BACS47G12DZBF	. .	SPACER.					5299	2
	86	66-1383-3	. .	SEAL, UNIT TRAY					5299	10
	87	65-5207-4	. .	SUPPORT ASSY, SHORT MOUNTING TRAY					5299	1
	88	66-1685	. .	CLIP, ATTACH ANGLE.					5299	4
			. .	ATTACHING PARTS						
		MS2047004	. .	RIVET					5299	8
			. .	PANEL, END.					5299	1
	89	69-1327	. .	PANEL ASSY, SHELF END DUCT ATTACHING.					5299	1
	90	69-1334-3	. .	SEAL, AIR					5299	1
	91	66-1337	. .	WELD ASSY					5299	1
	92	69-1334-7	. .	SHELF ASSY.					5299	1
	93	65-1649-6	. .						5299	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

BOEING
707
PARTS CATALOG (MAINTENANCE)

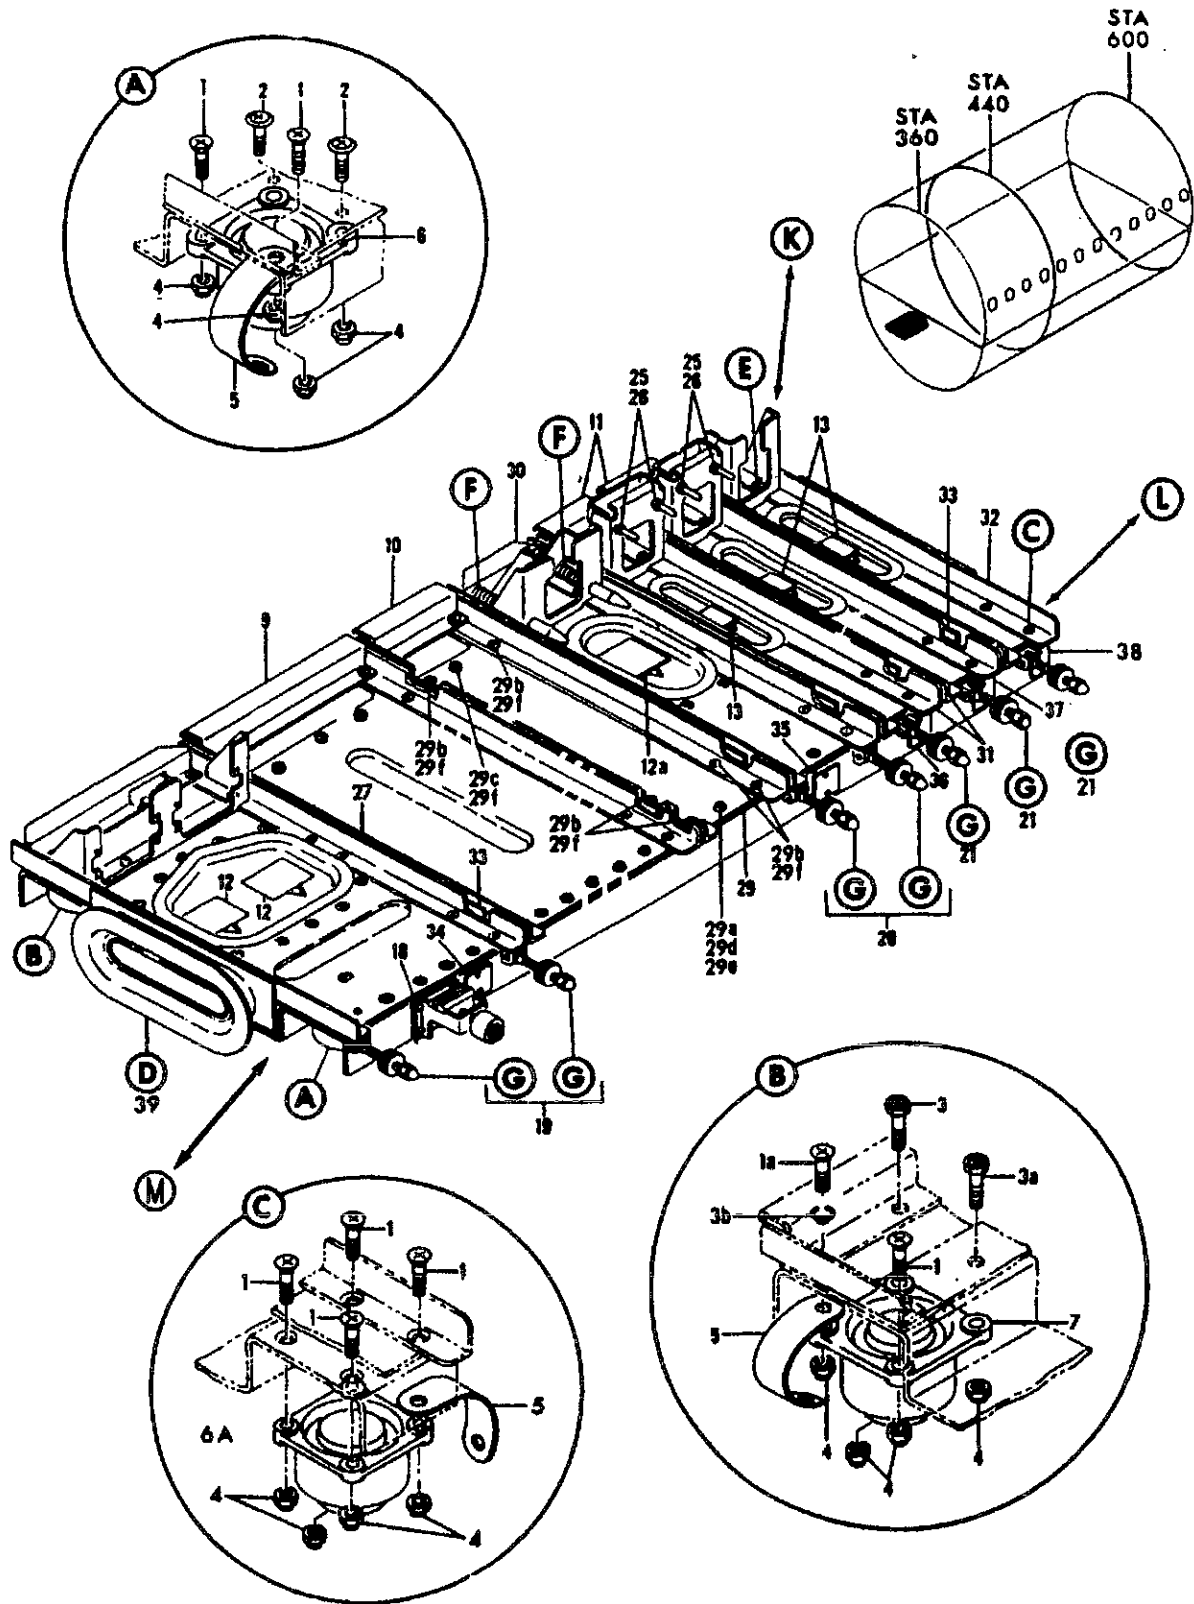


FIGURE 73C. SHELF ASSY, ELECTRONIC RACK FLIGHT INSTRUMENT EQUIPMENT (SHELF NO. 4 RH) (SHEET 1)

DETAILED PARTS LIST
24-09-73C
PAGE 0

24-09-73C

NOV 21/01


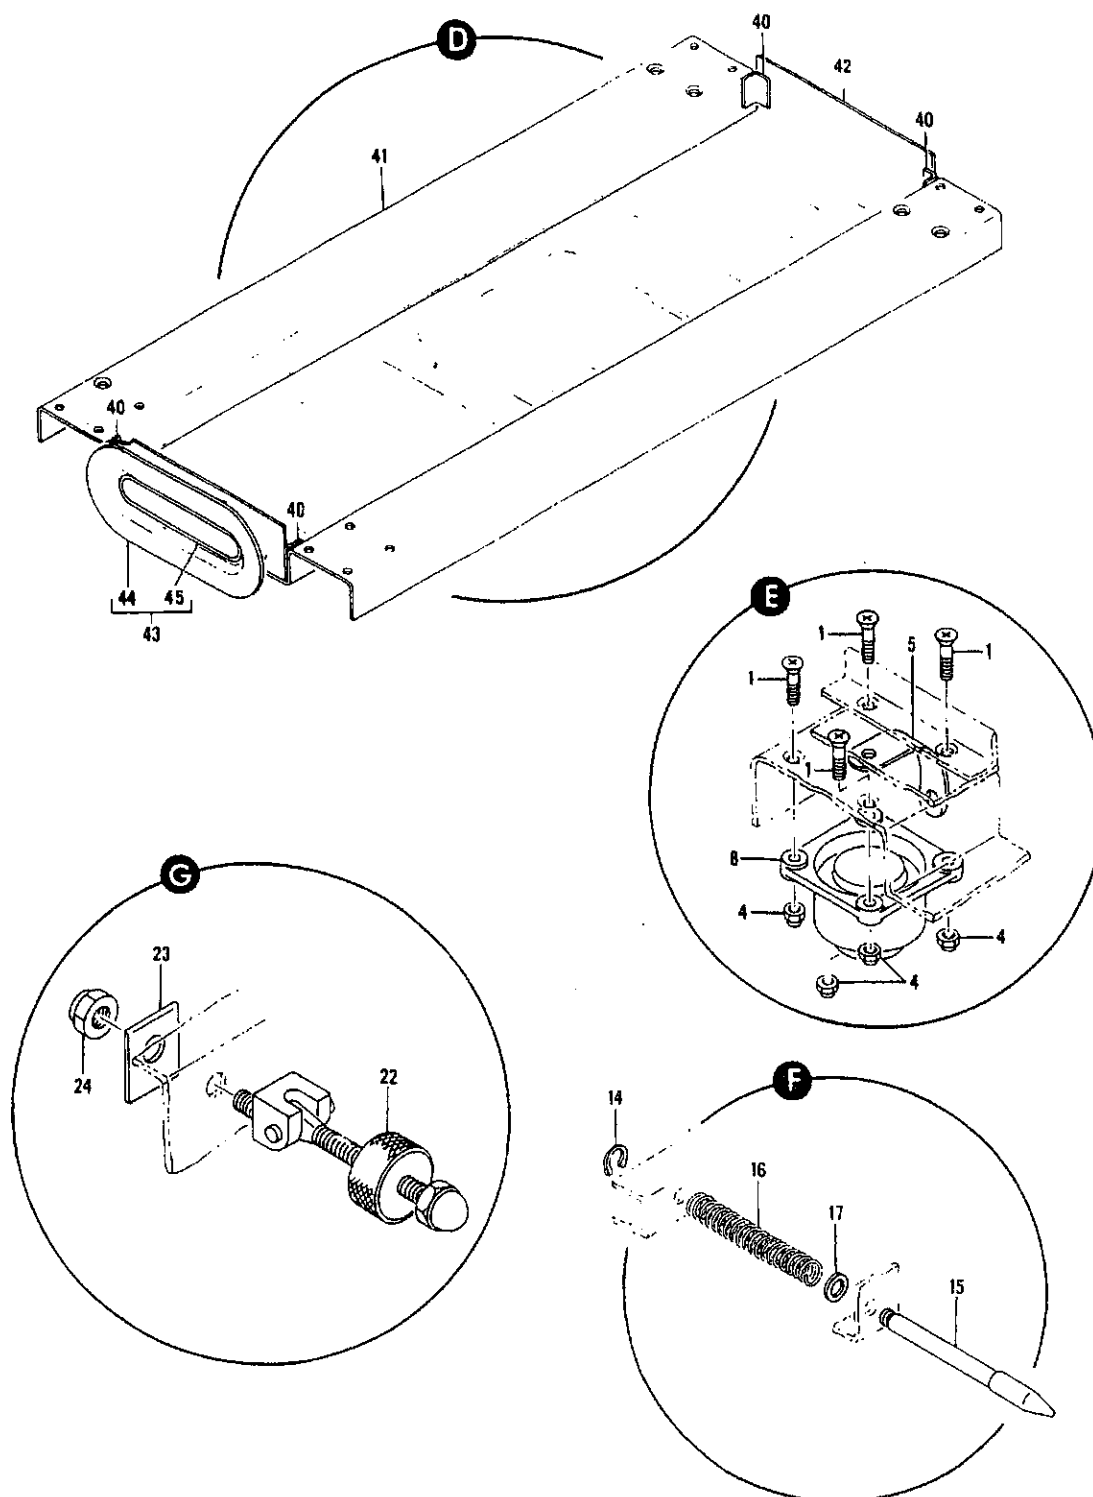


FIGURE 73C. SHELF ASSY, ELECTRONIC RACK FLIGHT INSTRUMENT EQUIPMENT (SHELF NO. 4RH) (SHEET 2)

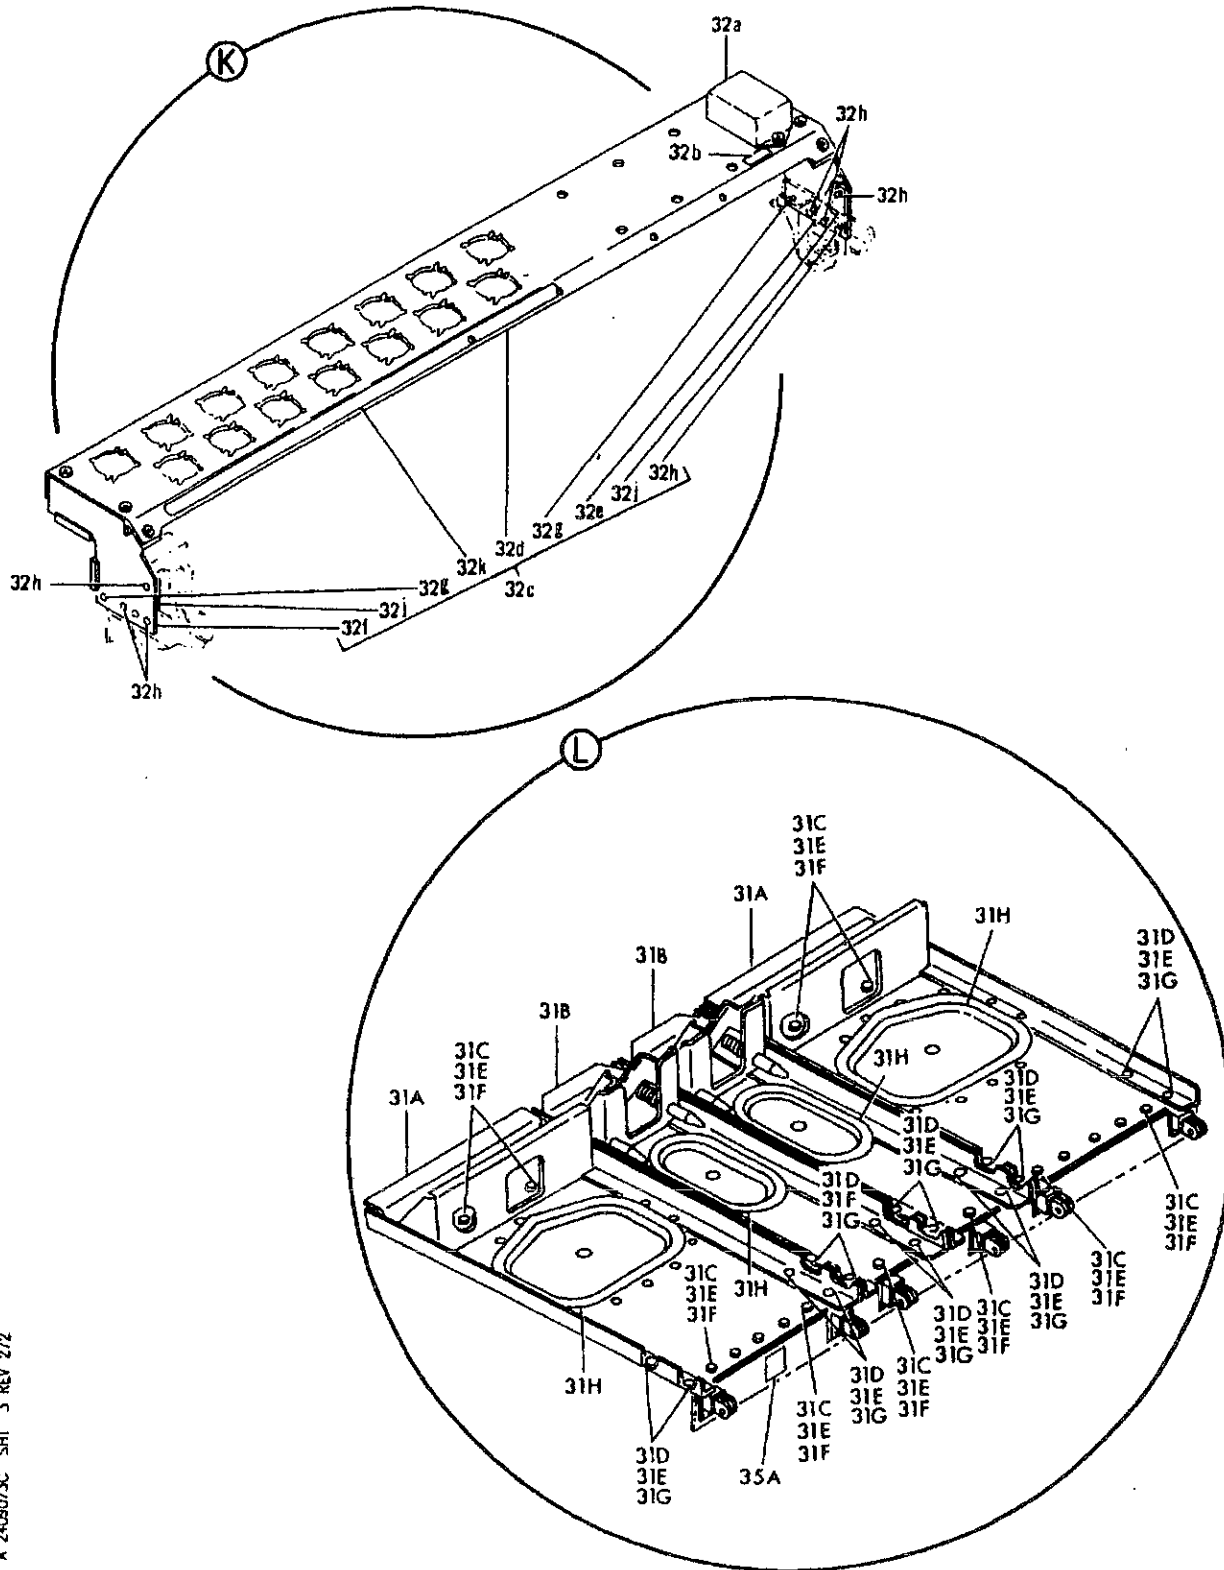

DETAILED PARTS LIST
24-09-73C
PAGE 2

24-09-73C

BOEING PROPRIETARY, CONFIDENTIAL, AND / OR TRADE SECRET COPYRIGHT © The Boeing Company Unpublished Work -All Rights Reserved

BOEING
707
PARTS CATALOG (MAINTENANCE)

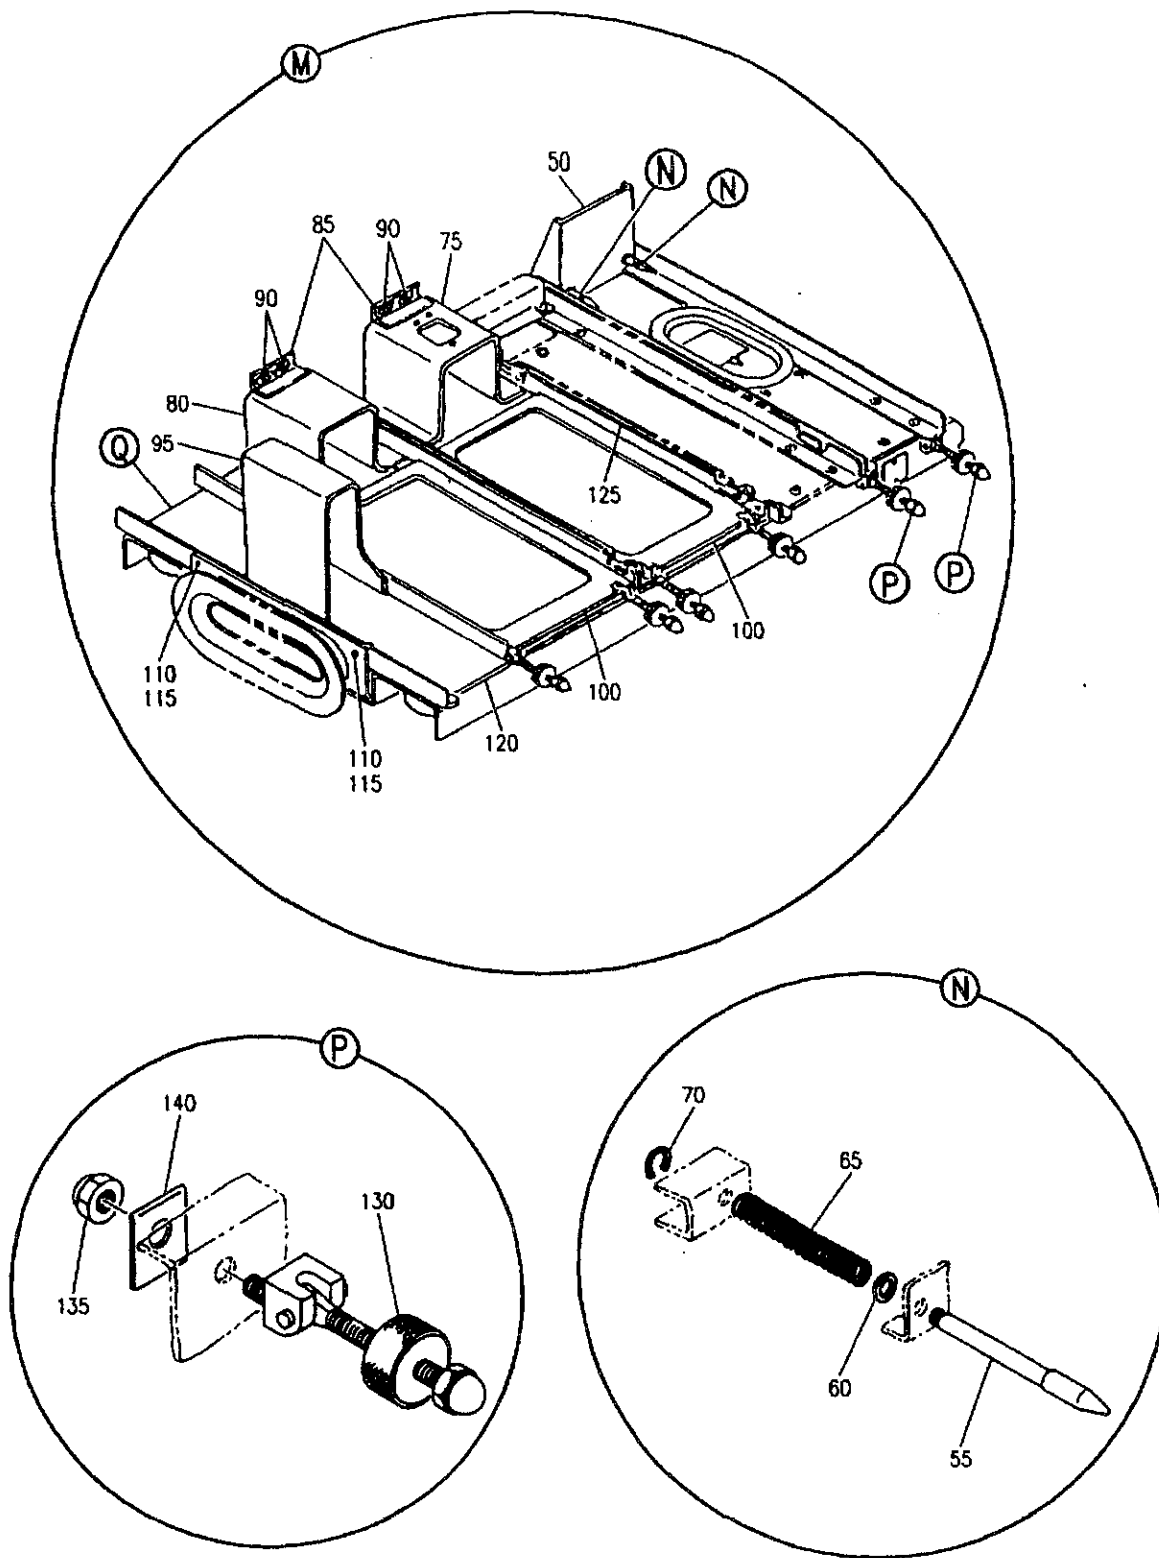


FIGURE 73C. SHELF ASSY, ELECTRONIC RACK FLIGHT INSTRUMENT EQUIPMENT (SHELF NO. 4 RH) (SHEET 4)

NOV 21/01

24-09-73C

DETAILED PARTS LIST
24-09-73C
PAGE 3

BOEING
707
PARTS CATALOG (MAINTENANCE)

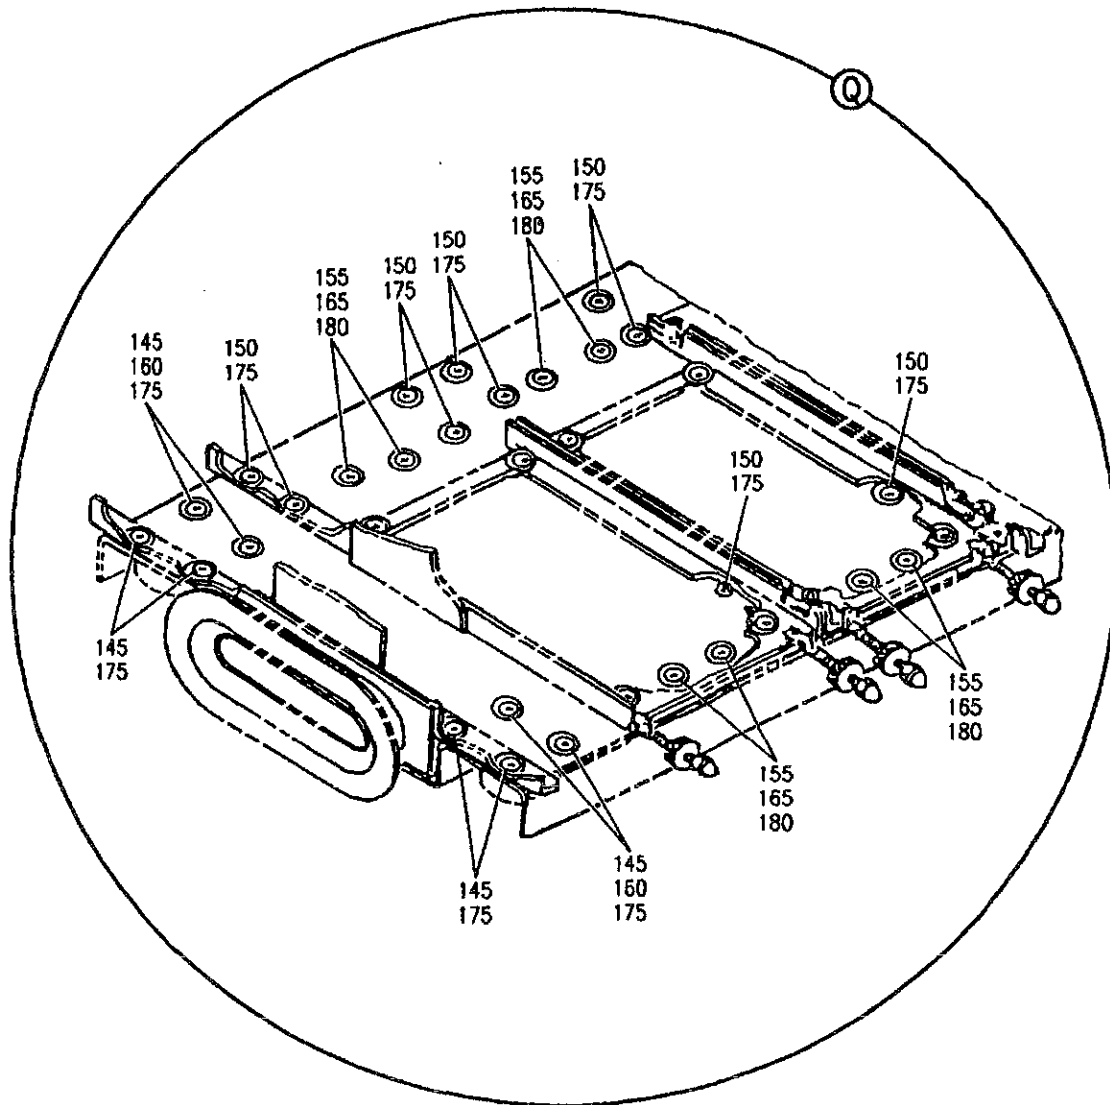


FIGURE 73C. SHELF ASSY. ELECTRONIC RACK FLIGHT INSTRUMENT EQUIPMENT (SHELF NO. 4 RH) (SHEET 5)

DETAILED PARTS LIST
24-09-73C
PAGE 4

24-09-73C

NOV 21/01

BOEING

707

PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R R R	73C	65-18718-15	SHELF ASSY, ELECTRONIC RACK FLIGHT INSTRUMENT EQUIPMENT (SHELF NO. 4 RH) (DELETED BY RAF MOD 7211.019.4) (SEE FIG. 18, ITEM B)	0150 RF
	391-25-50-74129-001	SHELF ASSY, ELECTRONIC RACK FLIGHT INSTRUMENT EQUIPMENT (SHELF NO. 4 RH) (65-18718-15 MODIFIED BY RAF MOD 7211.019-4)	0150	RF
	1	NAS514P1032-10	• SCREW	0150 11
	1A	BACS12CB3-10	• SCREW	0150 1
	2	BACS12N10-10	• SCREW ASSY.	0150 2
	3	BACS12CB3-10	• SCREW	0150 1
	3A	BACS12N10-10	• SCREW	0150 1
	3B	66-2955-3	• WASHER, SPECIAL REPAIR.	0150 1
	4	NAS679A3W	• NUT	0150 16
	5	66-1650	• STRAP, ELECTRONIC SHELF BONDING	0150 4
	6	BACS14E125B	• SHOCKMOUNT.	0150 1
	6A	BACS14E200B	• SHOCKMOUNT.	0150 1
	7	BACS14E125BS	• SHOCKMOUNT.	0150 1
	8	BACS14E125B	• SHOCKMOUNT.	0150 1
	9	69-15310-4	• BRACKET, RADIO RACK SHELVES WIRE SUPPRT.	0150 1
	10	69-15310-2	• BRACKET, RADIO RACK SHELVES WIRE SUPPORT.	0150 1
	11	69-15310-1	• BRACKET, RADIO RACK SHELVES WIRE SUPPORT.	0150 2
		ATTACHING PARTS		
		• SCREW	0150	8
		• WASHER, SPECIAL REPAIR.	0150	8
		• NUT	0150	8
R R	11A	69-15310-4	• BRACKET, RADIO RACK WIRE SUPPORT (DELETED BY RAF MOD 7211.019-4)	0150 1
		ATTACHING PARTS		
		• SCREW	0150	1
		• WASHER.	0150	1
		• NUT	0150	1
R R	11B	69-15310-2	• BRACKET, RADIO RACK SHELVES WIRE SUPPORT.	0150 1
	11B	69-15310-2	• BRACKET, RADIO RACK SHELVES WIRE SUPPORT (DELETED BY RAF MOD 7211.019-4)	0150 1
		ATTACHING PARTS		
		• SCREW	0150	2
		• WASHER.	0150	2
		• NUT	0150	2
	13	66-12450-2	• PLATE, COOLING AIR ORIFICE COVER.	0150 3
	21	65-5270	• HOLD DOWN INSTL, 1/4 ATR CASE FRONT	0150 3
	22	121366-707	• BOLT ASSY, ELECTRONIC SHELF UNIT HOLD DOWN. (HOLLINGSHEAD-PRYOR ENTERPRISES) (USED ON 65-5270) (OPTIONAL 66-1390 FIG. 106)	0150 1
	22	66-1390	• BOLT ASSY, ELECTRONIC SHELF UNIT HOLD DOWN (USED ON 65-5270) (SEE FIG. 106) (OPTIONAL TO 121366-707 (HOLLINGSHEAD-PRYOR ENTERPRISES))	0150 1
		ATTACHING PARTS		
	23	66-1387	• FILLER, ELECTRONIC SHELF EXTRUDED	0150 AR
	24	BACN10JC3	• NUT	0150 AR
		• NUT	0150	4
	25	NAS679A06W	• PIN, ELECTRONIC SHELF UNIT INDEX.	0150 4
R R	26	66-1398-4	• COVER ASSY, ELECTRONIC RACK 3/4 ATR SHELF (DELETED BY RAF MOD 7211.019-4)	0150 1
	28	69-1522-2	ATTACHING PARTS	
		• SCREW	0150	5
		• SCREW	0150	6
		• SCREW	0150	3
		• WASHER.	0150	5
		• NUT	0150	5
		• NUT	0150	9
R	28A	69-1522-2	• COVER ASSY, 3/4 ATR (DELETED BY RAF MOD 7211.019-4)	0150 1
		ATTACHING PARTS		
	28B	NAS514P1032-10	• SCREW	0150 3
	28C	BACS12CB3-10	• SCREW	0150 2
	28D	NAS514P632-5	• SCREW	0150 3
	28E	BACN10AL1	• WASHER.	0150 3
	28F	NAS679A3W	• NUT	0150 5
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/01

24-09-73C

DETAILED PARTS LIST
24-09-73C
PAGE 5

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
73C 28G	NAS679A06W	.	NUT	0150	3
28H	69-1522-4	.	COVER ASSY, ELECTRONIC RACK 3/8 ATR SHELF	0150	1
29	69-1522-4	.	COVER ASSY, ELECTRONIC RACK 3/8 ATR SHELF	0150	1
		.	ATTACHING PARTS		
29A	NAS514P632-5	.	SCREW	0150	2
29B	NAS514P1032-10	.	SCREW	0150	12
29C	BACS12CB3-10	.	SCREW	0150	2
29D	BACW1DAL1	.	WASHER.	0150	2
29E	NAS679A06W	.	NUT	0150	2
29F	NAS679A3W	.	NUT	0150	14
		.	TRAY ASSY, ELECTRONIC RACK 1/4 ATR SHORT ON SHORT	0150	2
31	65-18719-1	.	EQUIPMENT MOUNTING (SEE FIG. 76)		
		.	ATTACHING PARTS		
	NAS514P1032-10	.	SCREW	0150	12
	BACS12CB3-10	.	SCREW	0150	2
	NAS679A3W	.	NUT	0150	14
		.	TRAY ASSY, ELECTRONIC RACK 1/4 ATR DPX2 SHORT ON.	0150	1
32	65-18719-41	.	SHORT EQUIPMENT MOUNTING (SEE FIG. 76)		
		.	ATTACHING PARTS		
	NAS514P632-5	.	SCREW	0150	4
	NAS514P1032-10	.	SCREW	0150	1
	BACS12CB3-10	.	SCREW	0150	1
	AN960PD10	.	WASHER.	0150	1
	NAS670A06W	.	NUT	0150	4
		.	FILTER, (V56289)	0150	1
32A	10S1034A	.	ATTACHING PARTS		
	BACS12CB08-6	.	SCREW	0150	2
		.	SCOTCH-CAL, RM884	0150	1
32B	BACM9LD0-98W	.	SUPPORT INSTL, RACKS DISCONNECT	0150	1
32C	65-51790-4	.	SUPPORT ASSY, TOP	0150	1
32D	65-51789-28	.	ATTACHING PARTS		
	BACS12CB3-7	.	SCREW	0150	8
	BACN10FX1W	.	NUT	0150	8
		.	SUPPORT ASSY, SIDE.	0150	1
32E	65-51789-25	.	SUPPORT ASSY, SIDE.	0150	1
32F	65-51789-26	.	ATTACHING PARTS		
	MS20426D5	.	RIVET	0150	2
32G	MS20470D5	.	RIVET	0150	8
		.	SPACER.	0150	2
32J	BACS47G12D28F	.	SCOTCH-CAL, R4-1 THRU R4-15	0150	1
32K	BACM9R9CJ	.	SEAL, UNIT TRAY	0150	6
33	66-1383-1	.	(OPTIONAL TO 66-1383-3)		
		.	SEAL, UNIT TRAY	0150	6
		.	(OPTIONAL 66-1383-1)		
36	65-1945-51	.	PLATE, ELECTRONIC EQUIPMENT IDENTIFICATION.	0150	1
37	65-1945-52	.	PLATE, ELECTRONIC EQUIPMENT IDENTIFICATION.	0150	1
38	65-1945-36	.	PLATE, ELECTRONIC EQUIPMENT IDENTIFICATION.	0150	1
		.	ATTACHING PARTS		
	BACS12CB04-6	.	SCREW, (OPTIONAL NAS600-6).	0150	10
	NAS679A04W	.	NUT	0150	10
		.	SUPPORT ASSY, EQUIPMENT MOUNTING SHORT TRAY	0150	1
39	65-5207-4	.	CLIP, ELECTRONIC SHELF ATTACH ANGLE	0150	4
40	66-1685	.	ATTACHING PARTS		
	MS20470D4	.	RIVET	0150	8
		.	SHELF ASSY, ELECTRONIC RACK	0150	1
41	65-1649-6	.	PANEL, ELECTRONIC SHELF END	0150	1
42	69-1327	.	PANEL ASSY, SHELF END DUCT ATTACHING.	0150	1
43	69-1334-3	.	SEAL, ELECTRONIC SHELF END AIR.	0150	1
44	66-1337	.	WELD ASSY, SHELF END DUCT ATTACHING PANEL SHORT	0150	1
45	69-1334-7	.	PANEL, REAR (VZ0031) (ADDED BY RAF MOD 7211.019-4).	0150	1
50	391-25-50-74129-107	.	PIN	0150	2
55	69-14507-2	.	WASHER.	0150	2
60	NAS620-416	.	SPRING.	0150	2
65	63-1550	.	SPRING.	0150	2
70	NAS670-25	.	BRACKET ASSY, (VZ0031) (ADDED BY RAF MOD 7211.019-4)	0150	1
75	391-25-50-74129-105	.			

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 73C 80	391-25-50-74129-103	. BRACKET ASSY, (VZ0031) (ADDED BY RAF MOD 7211.019-4)	0150	1
R 85	391-25-50-74129-111	. . ANGLE, (VZ0031)	0150	1
R 90	MS21060L3	. . . NUTPLATE.	0150	2
R 95	391-25-50-74129-101	. BRACKET, DIPLEXER (VZ0031) (ADDED BY RAF MOD. 7211.019-4)	0150	1
R 100	C7188W3B1	. BASE, IFF MOUNTING (V13499) (ADDED BY RAF MOD 7211.019-4)	0150	2
R	NAS604-12	ATTACHING PARTS . SCREW	0150	4
R 110	NAS514632-6	. SCREW, (ADDED BY RAF MOD 7211.019-4).	0150	2
R 115	MS21042-06	. NUT, (ADDED BY RAF MOD 7211.019-4).	0150	2
R 120	391-25-50-74290-001	. SUPPORT ASSY, TRAY (VZ0031) (ADDED BY RAF MOD 7211.019-4)	0150	1
R 125	391-25-50-74129-109	. SEAL, (VZ0031) (ADDED BY RAF MOD 7211.019-4).	0150	1
R 130	66-1390	. BOLT ASSY, (ADDED BY RAF MOD 7211.019-4).	0150	2
R 135	MS21042-3	. NUT, (ADDED BY RAF MOD 7211.019-4).	0150	2
R 140	66-1387	. FILLER, RADIUS (ADDED BY RAF MOD 7211.019-4).	0150	2
R 145	NAS604-12	. SCREW, (ADDED BY RAF MOD 7211.019-4).	0150	8
R 150	NAS514P103-10	. SCREW, (ADDED BY RAF MOD 7211.019-4).	0150	10
R 155	NAS514P632-6	. SCREW, (ADDED BY RAF MOD 7211.019-4).	0150	8
R 160	NAS1169-10	. WASHER, (ADDED BY RAF MOD 7211.019-4).	0150	4
R 165	NAS1169-6	. WASHER, (ADDED BY RAF MOD 7211.019-4).	0150	8
R 175	MS21042-3	. NUT, (ADDED BY RAF MOD 7211.019-4).	0150	18
R 180	MS21042-06	. NUT, (ADDED BY RAF MOD 7211.019-4).	0150	8
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/01

24-09-73C

DETAILED PARTS LIST
24-09-73C
PAGE 7


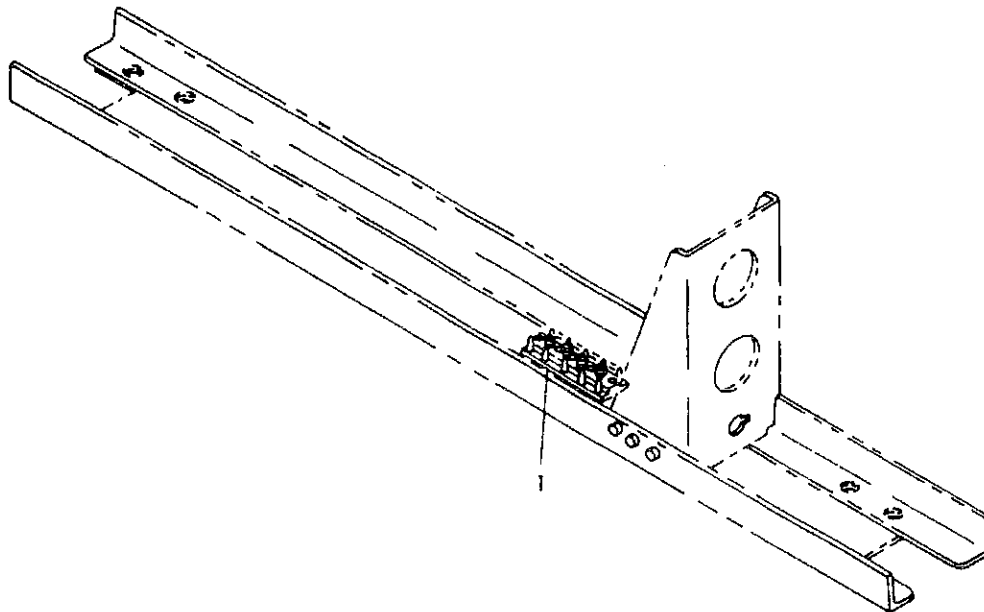


FIGURE 74B TRAY ASSY. ELECTRONIC RACK 1 4 ATR HF INTERLOCK RELAYS

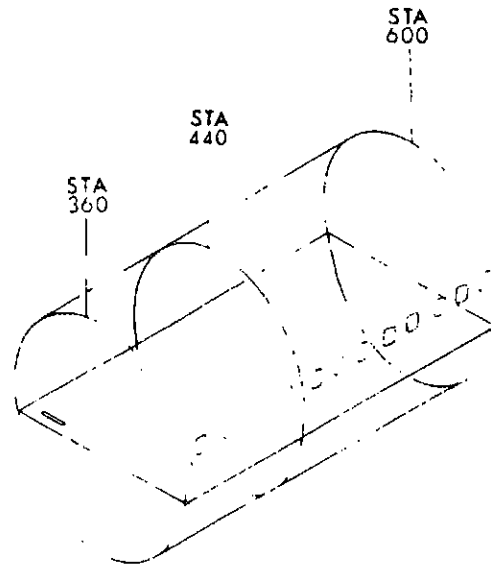

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE						EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6 7		
74B 1	65-87642-2	TRAY ASSY, 1/4 ATR HF INTERLOCK RELAYS (SEE FIG. 8G . .						5199	RF
		ITEM 64, FIG. 8J, ITEM 43 AND FIG. 8L, ITEM 6)							
	MS27212-1-4	. TERMINAL BOARD.						5199	1
	BACS12CB04-5	ATTACHING PARTS						5199	2
	BACN10JC04	. SCREW						5199	2
		. NUT						5199	2
		-----*							
MISSING ITEM NUMBERS ARE NOT APPLICABLE									

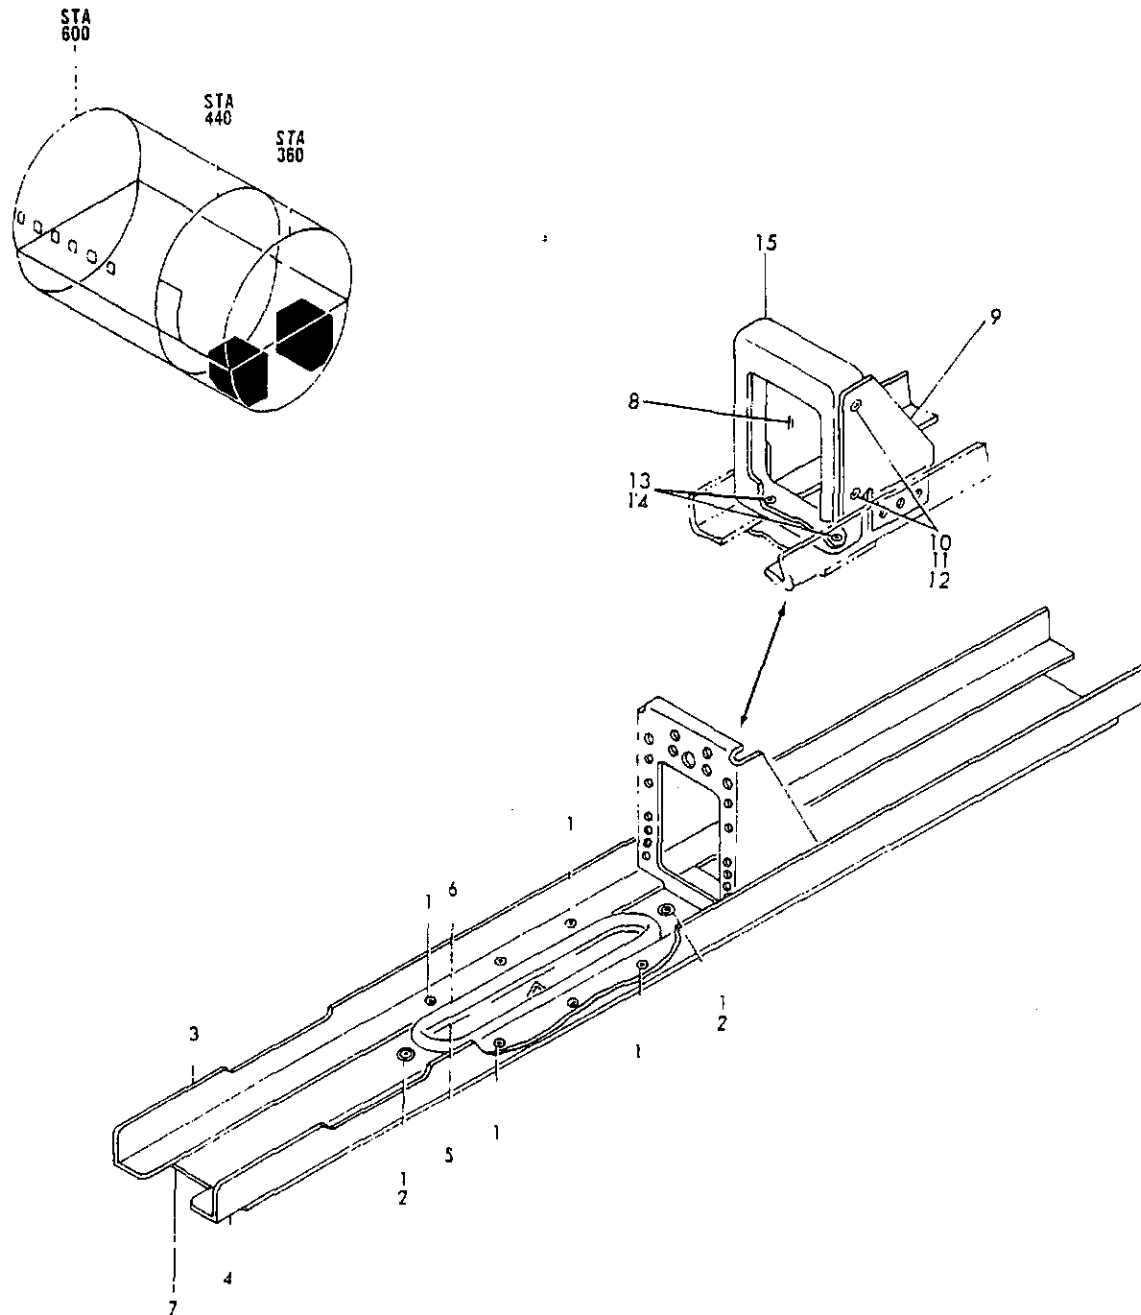


FIGURE 76. TRAY ASSY, ELECTRONIC RACK 1/4 ATR EQUIVALENT MOUNTING

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
76	65-18719-2	TRAY ASSY, ELECTRONIC RACK 1/4 ATR SHORT ON LONG. . . . EQUIPMENT MOUNTING (SEE FIG. 9A, ITEM 33, FIG. 15, ITEM 24, FIG. 15E, ITEM 50, FIG. 15G, ITEM 56, FIG. 15H, ITEM 53, FIG. 15L, ITEM 66, FIG. 15M, ITEM 52, FIG. 15N, ITEM 51, FIG. 38, ITEM 16, FIG. 47, ITEM 26 AND 27, FIG. 48, ITEM 26 AND 27, FIG. 49, ITEM 42 AND 43, FIG. 50, ITEM 34, FIG. 51, ITEM 26 AND 27, FIG. 51A, ITEM 21A, FIG. 51E, ITEM 45, FIG. 51F, ITEM 44, FIG. 60, ITEM 25F, FIG. 61F, ITEM 41 FIG. 142, ITEM 48 AND FIG. 143B, ITEM 37) EQUIPMENT MOUNTING (SEE NUMERICAL ITEM FOR APPLICABLE NHA)	5199	RF
	65-18719-1	TRAY ASSY, ELECTRONIC RACK 1/4 ATR SHORT ON SHORT . . .	0150	RF
	65-18719-1	TRAY ASSY, ELECTRONIC RACK 1/4 ATR SHORT ON SHORT . . . EQUIPMENT MOUNTING (RH) (SEE FIG. 63B, ITEM 37 AND FIG. 63C, ITEM 63)	5199	RF
	65-18719-41	TRAY ASSY, ELECTRONIC RACK 1/4 ATR DPX2 SHORT ON SHORT EQUIPMENT MOUNTING (SEE FIG. 21A, ITEM 37, FIG. 21B, ITEM 49, FIG. 63A, ITEM 26, FIG. 63B, ITEM 38, FIG. 63C, ITEM 60, FIG. 63D, ITEM 62, FIG. 67A, ITEM 24, FIG. 67B, ITEM 21, FIG. 69A, ITEM 22, FIG. 69C, ITEM 39, FIG. 71B, ITEM 36, FIG. 71D, ITEM 37, FIG. 73B, ITEM 31, FIG. 73C, ITEM 32, FIG. 73D, ITEM 23, FIG. 73F, ITEM 26, FIG. 73G, ITEM 21, FIG. 73H, ITEM 41, FIG. 73J, ITEM 37, FIG. 73K, ITEM 33A AND ITEM 34, FIG. 73L, ITEM 18, FIG. 73M, ITEM 35, FIG. 73N, ITEM 26, FIG. 73Q, ITEM 48, FIG. 73R, ITEM 29, FIG. 73T, ITEM 40, FIG. 73V, ITEM 38, FIG. 73W, ITEM 43 AND FIG. 129, ITEM 32)		RF
	65-18719-37	TRAY ASSY, ELECTRONIC RACK 1/4 ATR DPXB SHORT ON LONG . EQUIPMENT MOUNTING (SEE FIG. 14A, ITEM 32, FIG. 15A, ITEM 27, FIG. 15D, ITEM 28, FIG. 15F, ITEM 30, FIG. 15G, ITEM 40, FIG. 15H, ITEM 42, FIG. 15J, ITEM 26, FIG. 15L, ITEM 46, FIG. 15M, ITEM 24, FIG. 15N, ITEM 40, FIG. 40A, ITEM 39, FIG. 50B, ITEM 44, FIG. 61A, ITEM 28, FIG. 61B, ITEM 48, FIG. 61D, ITEM 59, FIG. 61J, ITEM 33, FIG. 62B, ITEM 26, FIG. 62E, ITEM 26, FIG. 62H, ITEM 52, FIG. 62J, ITEM 55, AND FIG. 62M, ITEM 73)		RF
	65-18719-54	TRAY ASSY, ELECTRONIC RACK 1/4 ATR DPXB SHORT ON SHORT EQUIPMENT MOUNTING (SEE FIG. 21A, ITEM 36, FIG. 21B, ITEM 48, FIG. 27, ITEM 25A, FIG. 29F, ITEM 31, FIG. 29G, ITEM 35, FIG. 29H, ITEM 24, FIG. 29L, ITEM 31, FIG. 63A, ITEM 29, FIG. 63C, ITEM 53, FIG. 63C, ITEM 56, FIG. 63D, ITEM 63, FIG. 73N, ITEM 41, FIG. 73T, ITEM 35 AND FIG. 132, ITEM 33A)		RF
1	NAS514P632-7	. SCREW		8
2	BACW10ALL	. WASHER		2
2	BACW10ALL	. WASHER	0150	2
3	66-1370-7	. RAIL, LONG UNIT (USED ON 65-18719-2, -24, -37 AND . . -42)		1
3	66-1541-1	. RAIL, SHORT UNIT TRAY	0150	1
3	66-1541-1	. RAIL, SHORT UNIT TRAY (USED ON 65-18719-1, -41, -54)	5199	1
3	66-1541-1	. RAIL, SHORT UNIT TRAY	0150	1
4	66-1370-8	. RAIL, LONG UNIT (USED ON 65-18719-2, -24, -37 AND . . -42)		1
4	66-1541-2	. RAIL, SHORT UNIT TRAY	0150	1
4	66-1541-2	. RAIL, SHORT UNIT TRAY (USED ON 65-18719-1, -41, -54)	5199	1
4	66-1541-2	. RAIL, SHORT UNIT TRAY	0150	1
	65-20685-1	. PAN ASSY, SHELF	0150	1
	65-20685-1	. PAN ASSY, SHELF	0150	1
	65-20685-1	. PAN ASSY, SHELF	5199	1
5	65-20685-11	. PAN	0150	1
5	65-20685-11	. PAN	0150	1
5	65-20685-11	. PAN	5199	1
6	65-1951-6	. SEAL ASSY, SHELF 1/4 ATR SHORT UNIT		1
6	65-1951-6	. SEAL ASSY, SHELF 1/4 ATR SHORT UNIT	0150	1
6	65-1951-6	. SEAL ASSY, SHELF 1/4 ATR SHORT UNIT	5199	1
7	65-1798-20	. PLATE, UNIT 1/4 ATR SHORT ON LONG BOTTOM (USED ON . . 65-18719-2, -24, -37 AND -42)		1
7	65-1798-21	. PLATE, UNIT TRAY 1/4 ATR SHORT BOTTOM	0150	1
7	65-1798-21	. PLATE, UNIT TRAY 1/4 ATR SHORT BOTTOM	0150	1
7	65-1798-21	. PLATE, UNIT TRAY 1/4 ATR SHORT BOTTOM	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE


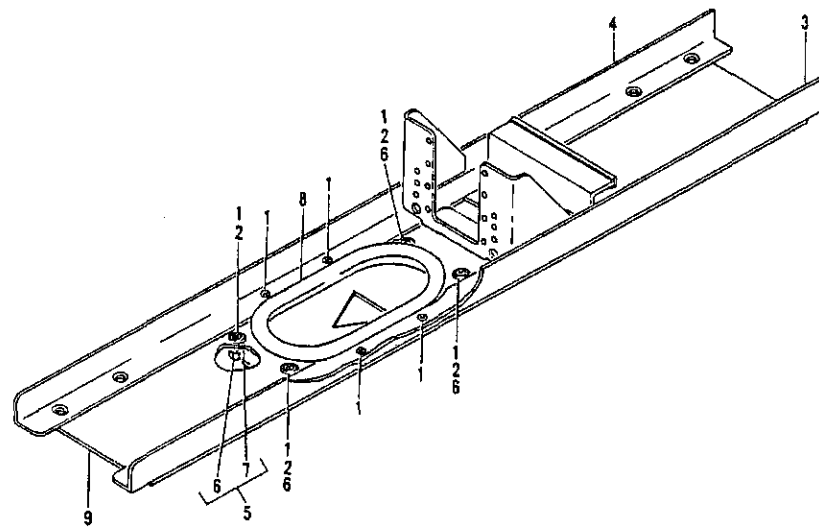


FIGURE 82. TRAY ASSY, ELECTRONIC RACK EQUIPMENT MOUNTING

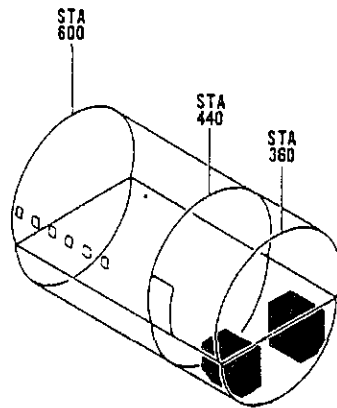

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
82	65-18719-5		TRAY ASSY, ELECTRONIC RACK 3/8 ATR SHORT ON LONG. . . . EQUIPMENT MOUNTING (SEE FIG. 5, ITEM 19, FIG. 5A, ITEM 6, FIG. 6, FIG. 6A, ITEM 39, FIG. 7, ITEM 31, FIG. 7B, ITEM 41, FIG. 8, ITEM 21, FIG. 8A, ITEM 31, FIG. 8B, ITEM 41, FIG. 8C, ITEM 38, FIG. 8E, ITEM 38, FIG. 8F, ITEM 45, FIG. 8G, ITEM 46, FIG. 8H, ITEM 46, FIG. 12, ITEM 19, FIG. 13, ITEM 25, FIG. 14, ITEM 31, FIG. 14A, ITEM 34, FIG. 15 ITEM 25, FIG. 15A, ITEM 30, FIG. 15C, ITEM 25, FIG. 15F, ITEM 49, FIG. 15J, ITEM 27, FIG. 15S, ITEM 55, FIG. 16A, ITEM 45, FIG. 17, ITEM 19, FIG. 17A, ITEM 22, FIG. 49, ITEM 44, FIG. 161, ITEM 34, FIG. 162, ITEM 41, FIG. 168, ITEM 37 AND FIG. 162A, ITEM 35)		
	65-18719-19		TRAY ASSY, ELECTRONIC RACK 3/8 ATR DPX SHORT ON SHORT . EQUIPMENT MOUNTING (SEE FIG. 23, ITEM 20, FIG. 23A, ITEM 23, FIG. 23C, ITEM 23, FIG. 24, ITEM 26, FIG. 27, ITEM 26, FIG. 29A, ITEM 30, FIG. 29B, ITEM 23, FIG. 29C, ITEM 9, FIG. 29G, ITEM 26, FIG. 29M, ITEM 33, FIG. 67, ITEM 18A, FIG. 67A, ITEM 25, FIG. 67B, ITEM 22, FIG. 70, ITEM 21, FIG. 71D, ITEM 38 AND FIG. 71E, ITEM 22)	0150	RF
	65-18719-48		TRAY ASSY, ELECTRONIC RACK 3/8 ATR DPXB SHORT ON SHORT EQUIPMENT MOUNTING (RH) (SEE FIG. 63B, ITEM 48 AND FIG. 63C, ITEM 72)	5199	RF
	65-18719-53		TRAY ASSY, ELECTRONIC RACK 3/8 ARINC DPX2 SHORT ON LONG EQUIPMENT MOUNTING (SEE FIG. 8B, ITEM 40, FIG. 8D, ITEM 50, FIG. 8G, ITEM 46, FIG. 8H, ITEM 46, FIG. 9A, ITEM 36, FIG. 15C, ITEM 26, FIG. 15D, ITEM 49, FIG. 16A, ITEM 58, FIG. 40A, ITEM 32, FIG. 50B, ITEM 42, FIG. 62G, ITEM 46, FIG. 62N, ITEM 51, FIG. 62Q, ITEM 42, FIG. 161, ITEM 35 AND FIG. 163, ITEM 39)	5199	RF
	65-18719-73		TRAY ASSY, 3/8 ATR AD2 SHORT ON SHORT EQUIPMENT MOUNTING (RH) (SEE FIG. 63B, ITEM 43, FIG. 63C, ITEM 69 AND FIG. 63D, ITEM 51)	5199	RF
	1 NAS514P632-7		. SCREW		8
	2 BACW10AL1		. WASHER.		4
	2 BACW10AL1		. WASHER.		4
	3 66-1541-3		. RAIL, UNIT TRAY SHORT (USED ON 65-18719-4, -19, . . . -40, -73)	0150	1
	3 66-1370-5		. RAIL, ELECTRONIC RACK LONG UNIT TRAY (USED ON 65-18719-5, -35 AND -53)		1
	3 66-1541-3		. RAIL, UNIT TRAY SHORT		1
	4 66-1541-4		. RAIL, UNIT TRAY SHORT (USED ON 65-18719-4, -19, . . . -40, -73)	0150	1
	4 66-1370-6		. RAIL, ELECTRONIC RACK LONG UNIT TRAY (USED ON 65-18719-5, -35 AND -53)		1
	4 66-1541-4		. RAIL, UNIT TRAY SHORT		1
	5 65-20685-3		. PAN ASSY, ELECTRONIC SHELF.		1
	5 65-20685-3		. PAN ASSY, ELECTRONIC SHELF.		1
	6 BACN10FX61		. NUT		4
	7 65-20685-13		. PAN, ELECTRONIC SHELF		1
	7 65-20685-13		. PAN, ELECTRONIC SHELF		1
	8 65-1951-5		. SEAL ASSY, ELECTRONIC SHELF 3/8 ATR SHORT UNIT TRAY .		1
	8 65-1951-5		. SEAL ASSY, ELECTRONIC SHELF 3/8 ATR SHORT UNIT TRAY .		1
	9 65-1798-24		. PLATE, UNIT TRAY 3/8 ATR SHORT BOTTOM (USED ON. . . . 65-18719-4, -19, -73)	0150	1
	9 65-1798-23		. PLATE, UNIT TRAY 3/8 ATR SHORT ON LONG BOTTOM (USED . ON 65-18719-5, -35 AND -53)		1
	9 65-1798-24		. PLATE, UNIT TRAY 3/8 ATR SHORT BOTTOM		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

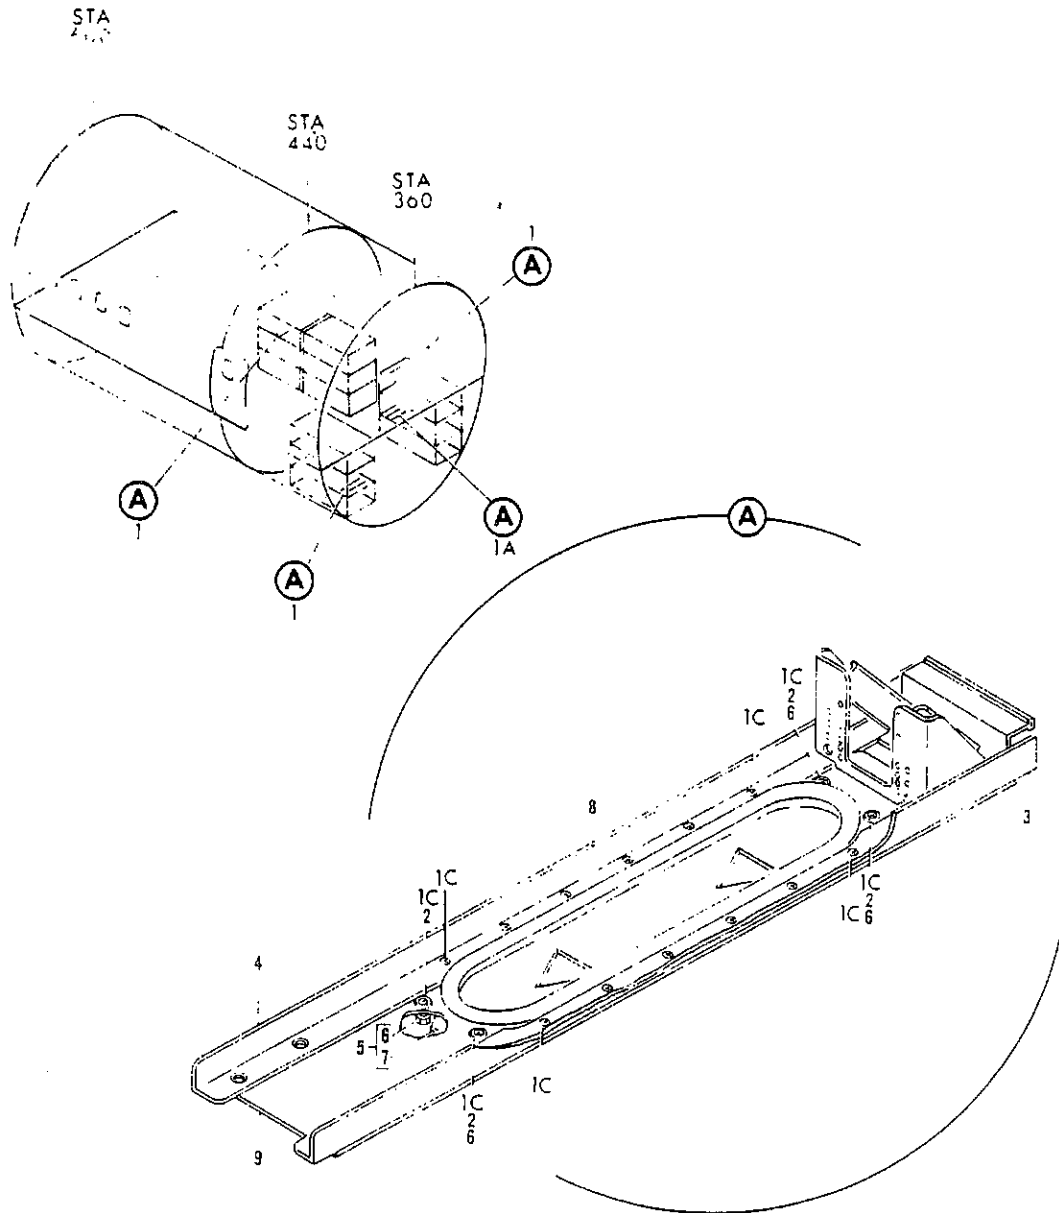


FIGURE 33. TRAY ASSY. ELECTRONIC RACK 3/8 ATR LONG ON LONG EQUIPMENT MOUNTING

BOEING

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
83 1	65-18719-6	1 2 3 4 5 6 7 TRAY ASSY, ELECTRONIC RACK 3/8 ATR LONG ON LONG EQUIPMENT MOUNTING (SEE FIG. 2, ITEM 22, FIG. 16A, ITEM 41, FIG. 17, ITEM 20, FIG. 17A, ITEM 21, FIG. 58, ITEM 23, FIG. 59, ITEM 22, FIG. 60, ITEM 23, FIG. 61E, ITEM 20, FIG. 62, ITEM 25, FIG. 62B, ITEM 23, FIG. 62C, ITEM 21, FIG. 62D, ITEM 20, FIG. 62H, ITEM 30A, FIG. 62J, ITEM 41, FIG. 62K, ITEM 32, FIG. 62L, ITEM 29, FIG. 62M, ITEM 48, FIG. 162, ITEM 31 FIG. 16B, ITEM 33 AND FIG. 162A)		RF
1C	NAS514P632-7	. SCREW		16
2	BACW10AL1	. WASHER		4
3	66-1370-3	. RAIL, ELECTRONIC RACK LONG UNIT TRAY.		1
4	66-1370-4	. RAIL, ELECTRONIC RACK LONG UNIT TRAY.		1
5	65-20685-4	. PAN ASSY, ELECTRONIC SHELF.		1
6	BACN10FX61	. NUT		4
7	65-20685-14	. PAN, ELECTRONIC SHELF		1
8	65-1951-10	. SEAL ASSY, ELECTRONICS RACK 3/8 ATR LONG ELECTRONIC SHELF UNIT TRAY		1
9	65-1798-22	. PLATE, UNIT TRAY 3/8 ATR LONG BOTTOM.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

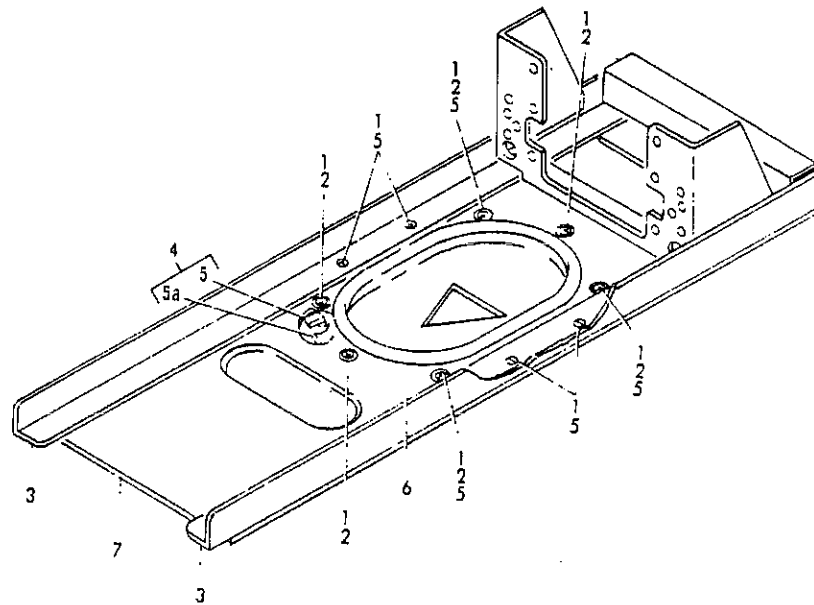
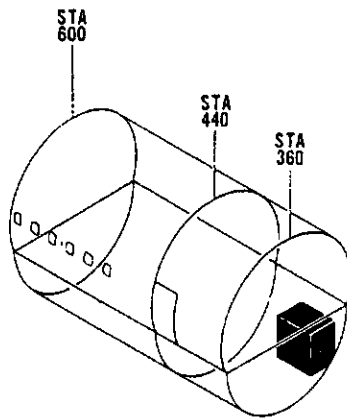


FIGURE 86. TRAY ASSY, ELECTRONIC RACK 1/2 ATR DPA AND DPX2 SHORT ON SHORT EQUIPMENT MOUNTING

BOEING **707** *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE										EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7						
R R R R R R R R R	86	65-18719-38	TRAY ASSY, ELECTRONIC RACK 1/2 ATR DPX2 SHORT ON SHORT EQUIPMENT MOUNTING (SEE FIG. 21A, ITEM 51, FIG. 22A, ITEMS 45 AND 46, FIG. 24, ITEM 47, FIG. 28A, ITEM 31, FIG. 28C, ITEM 30, FIG. 28D, ITEM 28, FIG. 28F, ITEM 50, FIG. 28G, ITEM 42, FIG. 29A, ITEM 32, FIG. 29C, ITEM 21, FIG. 29E, ITEM 27, FIG. 29F, ITEM 43, FIG. 29G, ITEM 43, FIG. 29H, ITEM 25, FIG. 29L, ITEM 43, FIG. 29M, ITEM 42, FIG. 51B, ITEM 48B, FIG. 63A, ITEM 14, FIG. 73J, ITEM 38, FIG. 73M, ITEM 36, FIG. 73N, ITEM 34, FIG. 73V, ITEM 27, FIG. 73W, ITEM 30, FIG. 73Y, ITEM 56, FIG. 127, ITEM 32, FIG. 141, ITEM 42, FIG. 145, ITEM 40, FIG. 145A, ITEM 30 AND FIG. 145B, ITEM 28)											RF
	1	NAS514P632-7	. SCREW											10
	2	BACW10AL1	. WASHER.											6
	3	66-1541	. RAIL, UNIT TRAY SHORT											2
	4	65-20685-5	. PAN ASSY, ELECTRONIC SHELF.											1
	5	BACN10FX61	. . NUT											8
	5A	65-20685-15	. . PAN, ELECTRONIC SHELF											1
	6	65-1951-9	. SEAL ASSY, ELECTRONICS RACK 1/2 ATR SHORT ELECTRONIC SHELF UNIT TRAY											1
	7	65-1798-27	. PLATE, UNIT TRAY 1/2 ATR SHORT BOTTOM											1
MISSING ITEM NUMBERS ARE NOT APPLICABLE														

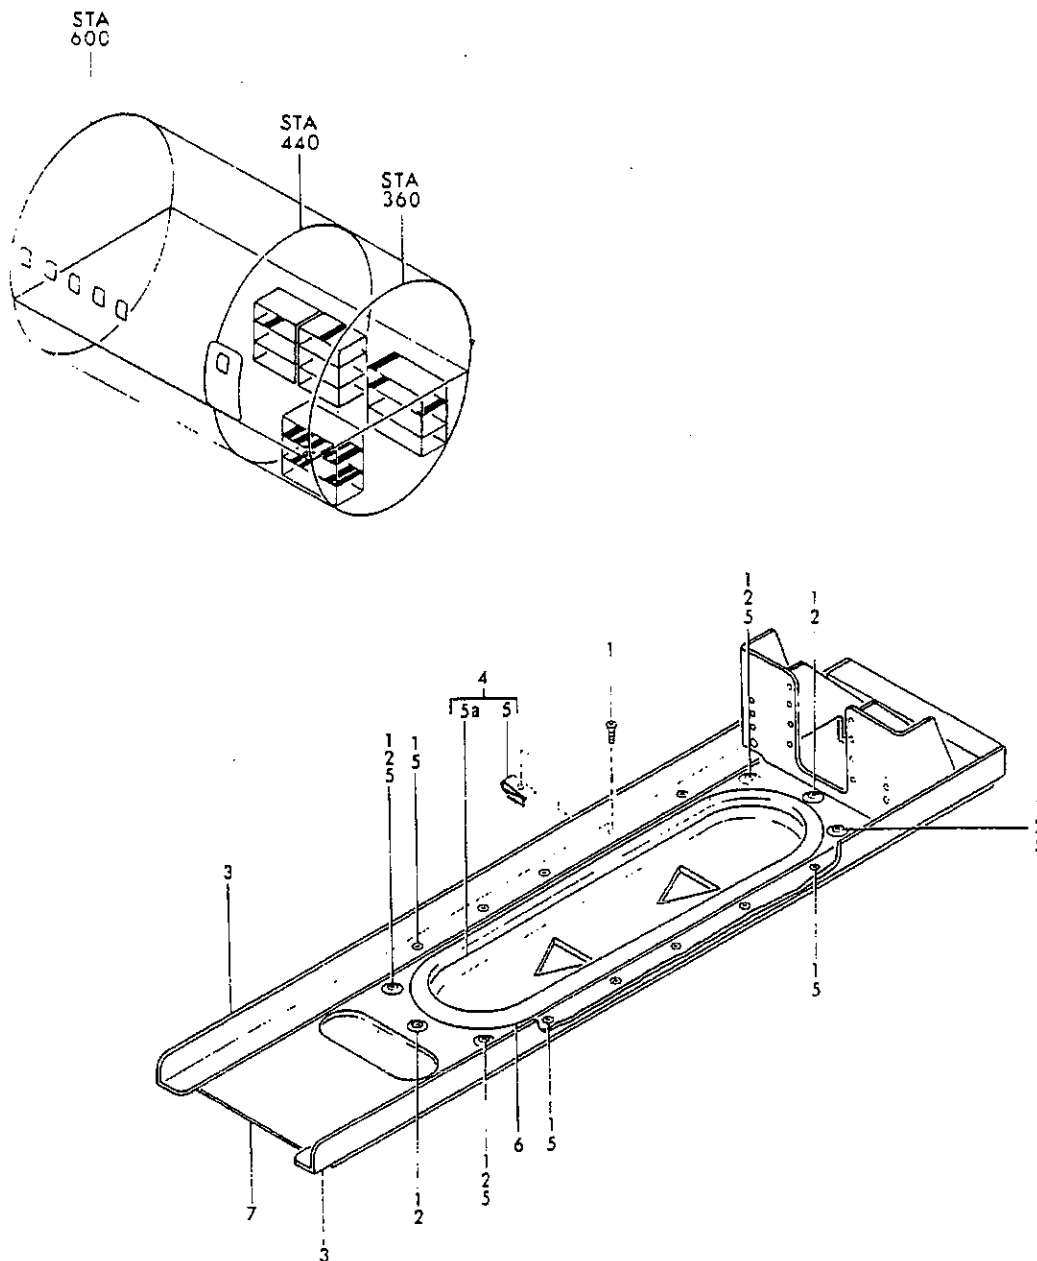


FIGURE 87. TRAY ASSY, ELECTRONIC RACK 1/2 ATR DPA LONG ON LONG EQUIPMENT MOUNTING



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R R R R	87	65-18719-12		TRAY ASSY, ELECTRONIC RACK 1/2 ATR DPD LONG ON LONG . . EQUIPMENT MOUNTING (SEE FIG. 47, ITEMS 29 AND 30, FIG. 48, ITEMS 29 AND 30, FIG. 49, ITEMS 45 AND 46, FIG. 50, ITEMS 35 AND 36, FIG. 51, ITEM 30, FIG. 51A, ITEM 23, FIG. 51B, ITEM 43, FIG. 51C, ITEM 35, FIG. 51E, ITEMS 46 AND 53, FIG. 51F, ITEM 45, FIG. 51G, ITEM 22, FIG. 57A, ITEM 18, FIG. 61G, ITEM 32, FIG. 62F, ITEM 51, FIG. 62G, ITEM 53, FIG. 62K, ITEM 47 AND FIG. 62Q, ITEM 49)	0150	RF
		65-18719-13		TRAY ASSY, ELECTRONIC RACK 1/2 ATR DPD LONG ON LONG . . EQUIPMENT MOUNTING (SEE NUMERICAL INDEX FOR APPLICABLE NHA)	0150	RF
		65-18719-59		TRAY ASSY, ELECTRONIC RACK 1/2 ATR 3DPD LONG ON LONG. . EQUIPMENT MOUNTING (SEE FIG. 51G, ITEM 20, FIG. 52A, ITEM 61, FIG. 61H, ITEM 33, FIG. 62F, ITEM 37, FIG. 62G, ITEM 16, FIG. 62N, ITEM 43 AND FIG. 62Q, ITEM 35)	0150	RF
	1	NAS514P632-7		. SCREW	0150	16
	2	BACW10AL1		. WASHER.	0150	6
	3	66-1370		. RAIL, ELECTRONIC RACK LONG UNIT TRAY.	0150	2
	4	65-20685-6		. PAN ASSY, ELECTRONIC SHELF.	0150	1
	5	BACN10FX61		. . NUT	0150	14
	5A	65-20685-16		. . PAN, ELECTRONIC SHELF	0150	1
	6	65-1951-4		. SEAL ASSY, ELECTRONIC SHELF 1/2 ATR LONG UNIT TRAY. .	0150	1
	7	65-1798-25		. PLATE, UNIT TRAY 1/2 ATR LONG BOTTOM.	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

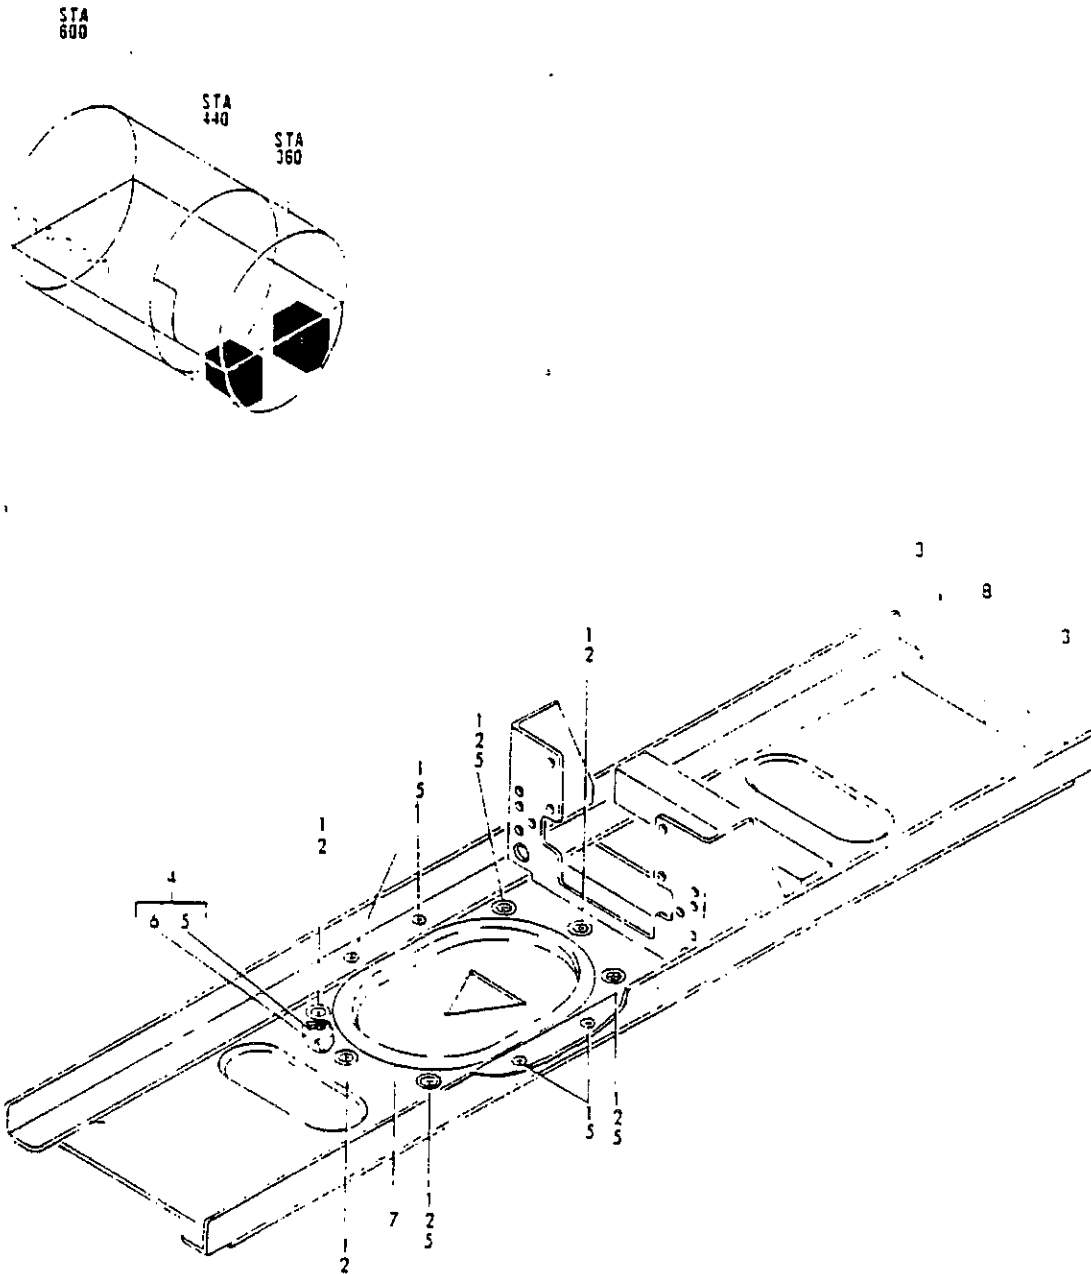


FIGURE 89. TRAY ASSY, ELECTRONIC RACK 1/2 ATR SHORT ON LONG HF EQUIPMENT BAY



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R R R R	89	65-18719-11	0150	RF
		TRAY ASSY, ELECTRONIC RACK 1/2 ATR SHORT ON LONG HF . . EQUIPMENT MOUNTING (SEE FIG. 7, ITEM 32, FIG. 8E, ITEM 39, FIG. 14, ITEM 32, FIG. 14A, ITEM 35 AND FIG. 15B, ITEM 20)		
		65-18719-39		RF
		TRAY ASSY, ELECTRONIC RACK 1/2 ATR DPX2 SHORT ON LONG . EQUIPMENT MOUNTING (SEE FIG. 9A, ITEM 40, FIG. 15H, ITEM 59, FIG. 15M, ITEM 35, FIG. 40A, ITEM 40, FIG. 51A, ITEM 22, FIG. 51B, ITEM 36, FIG. 51C, ITEM 21, FIG. 51G, ITEM 21, FIG. 52A, ITEM 79, FIG. 57A, ITEM 32, FIG. 61B, ITEM 27, FIG. 61G, ITEM 31, FIG. 61J, ITEM 31, FIG. 62H, ITEM 44 FIG. 62N, ITEM 58, FIG. 138, ITEM 33, FIG. 138A, ITEM 23 FIG. 161, ITEM 43, FIG. 163, ITEM 48 AND FIG. 163A ITEM 62)		
	1	NAS514P632-7		10
	2	BACW10ALL1		6
	3	66-1370		2
	4	65-20685-5		1
	5	BACN10FX61		8
	6	65-20685-15		1
	7	65-1951-9		1
	8	65-1798-26		1
		. SCREW		
		. WASHER.		
		. RAIL, ELECTRONIC RACK LONG UNIT TRAY.		
		. PAN ASSY, ELECTRONIC SHELF.		
		. . NUT		
		. . PAN, ELECTRONIC SHELF		
		. SEAL ASSY, ELECTRONIC SHELF 1/2 ATR SHORT UNIT TRAY .		
		. PLATE, UNIT TRAY 1/2 ATR LONG BOTTOM.		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				


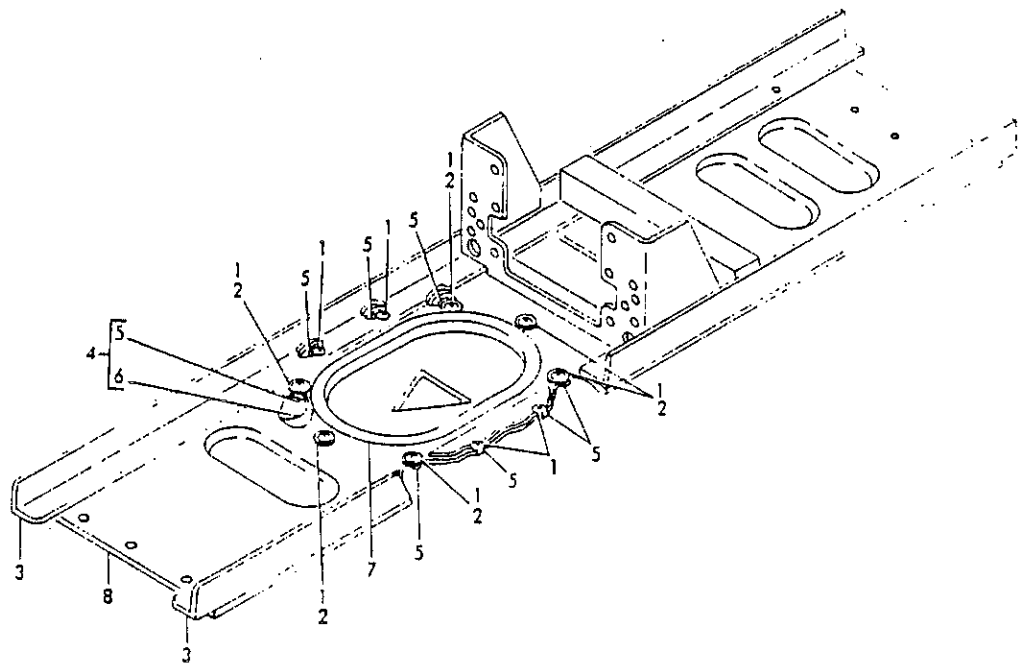


FIGURE 90. TRAY ASSY, ELECTRONIC RACK 1/2 ATR SHORT ON LONG SPECIAL DOPPLER EQUIPMENT MOUNTING

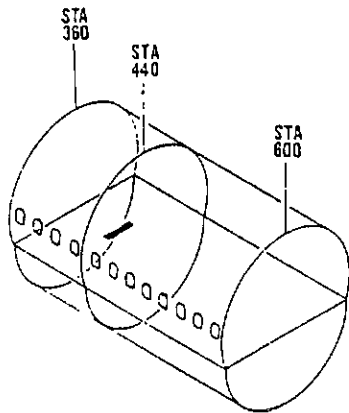

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R R R	90	65-18719-33	TRAY ASSY, ELECTRONIC RACK 1/2 ATR SHORT ON LONG. . . . SPECIAL DOPPLER EQUIPMENT MOUNTING (SEE FIG. 37, ITEM 18, FIG. 37B, ITEM 29, FIG. 37C, ITEM 25, FIG. 38A, ITEM 14, FIG. 38C, ITEM 34 AND FIG. 38P, ITEM 29)	0150 RF
	1	NAS514P632-7	. SCREW	0150 10
	2	BACW10AL1	. WASHER.	0150 6
	3	66-1370	. RAIL, ELECTRONIC RACK LONG UNIT TRAY.	0150 2
	4	65-20685-5	. PAN ASSY, ELECTRONIC SHELF.	0150 1
	5	BACN10FX61	. . NUT	0150 8
	6	65-20685-15	. . PAN, ELECTRONIC SHELF	0150 1
	7	65-1951-9	. SEAL ASSY, ELECTRONICS RACK 1/2 ATR SHORT ELECTRONIC SHELF UNIT TRAY	0150 1
	8	65-1798-26	. PLATE, UNIT TRAY 1/2 ATR SHORT BOTTOM	0150 1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

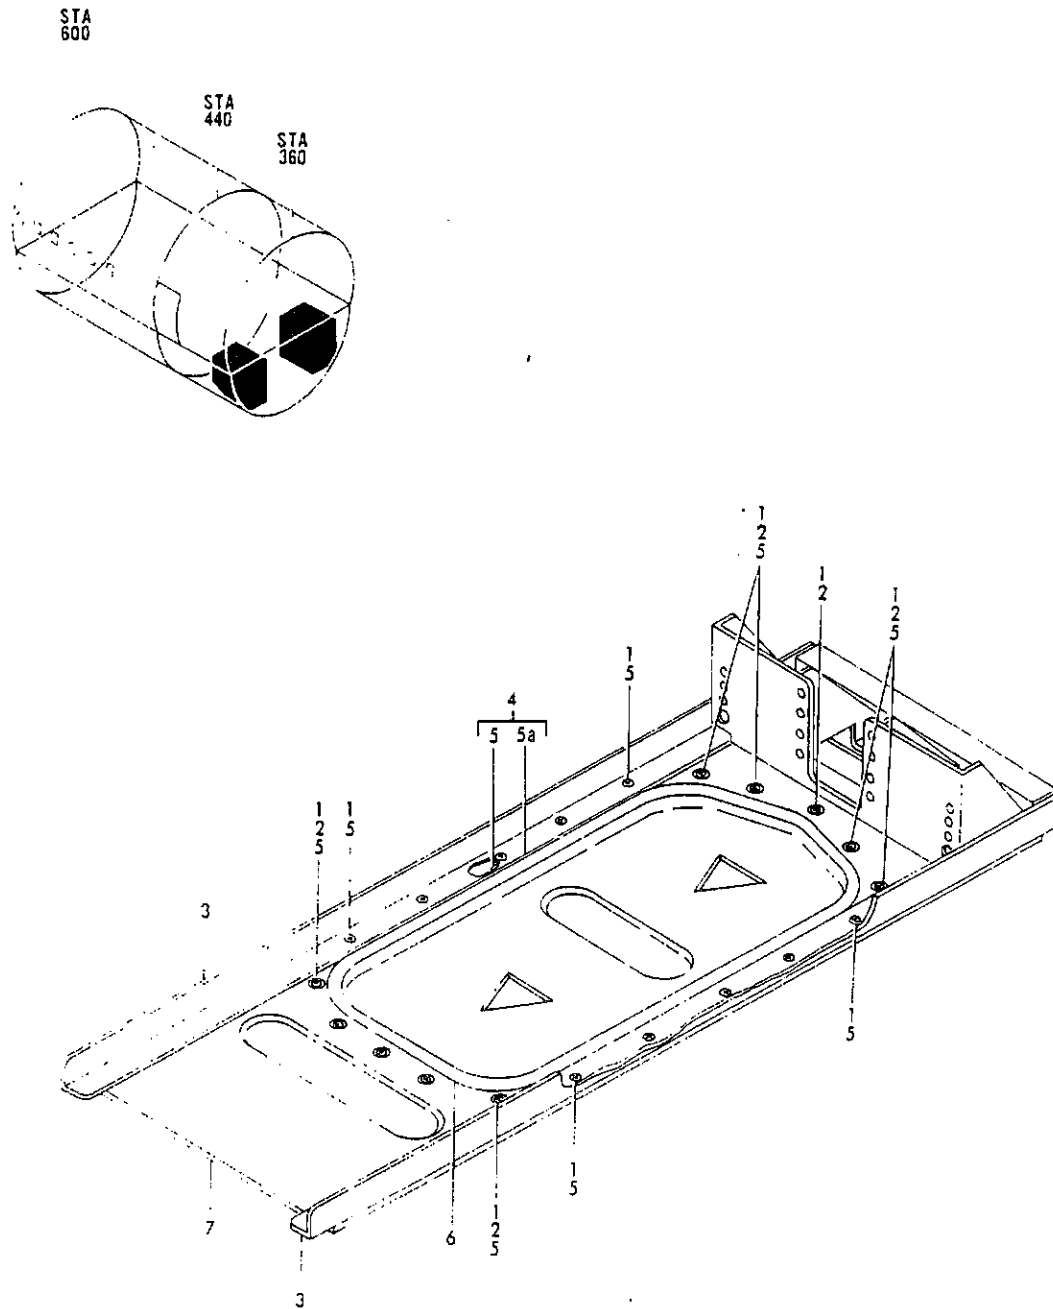


FIGURE 96. TRAY ASSY, ELECTRONIC 3/4 ATR DPD LONG ON LONG EQUIPMENT MOUNTING



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R	96	65-18719-36	TRAY ASSY, ELECTRONIC RACK 3/4 ATR OPX LONG ON LONG . .							0150	RF
		65-18719-30	EQUIPMENT MOUNTING (SEE FIG. 17, ITEM 17) TRAY ASSY, ELECTRONIC RACK 3/4 ATR OPA LONG ON LONG . . EQUIPMENT MOUNTING (SEE FIG. 8F, ITEM 37, FIG. 15E, ITEM 27, FIG. 15G, ITEM 33, FIG. 15H, ITEM 35, FIG. 15L, ITEM 39, FIG. 15M, ITEM 17, FIG. 51B, ITEM 29, FIG. 57, ITEM 24, FIG. 58, ITEM 24, FIG. 59, ITEM 24, FIG. 60, ITEM 24, FIG. 61, ITEM 24, FIG. 61A, ITEM 24, FIG. 61D, ITEM 37, FIG. 62, ITEM 27, FIG. 62A, ITEM 17, FIG. 62B, ITEM 24, FIG. 62C, ITEM 20, FIG. 62D, ITEM 21, FIG. 62E, ITEM 23 FIG. 62H, ITEM 37 FIG. 62T, ITEM 48 AND FIG. 8K, ITEM 23)								RF
	1	NAS514P632-7	. SCREW								20
	2	BACW10AL1	. WASHER.								10
	3	66-1370	. RAIL, ELECTRONIC RACK LONG UNIT TRAY.								2
	4	65-20685-8	. PAN ASSY, ELECTRONIC SHELF.								1
	5	BACN10FX61	. NUT								19
	5A	65-20685-18	. PAN, ELECTRONIC SHELF								1
	6	65-1951-2	. SEAL ASSY, ELECTRONIC SHELF 3/4 ATR LONG UNIT TRAY. .								1
	7	65-1798-28	. PLATE, UNIT TRAY 3/4 ATR LONG BOTTOM.								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

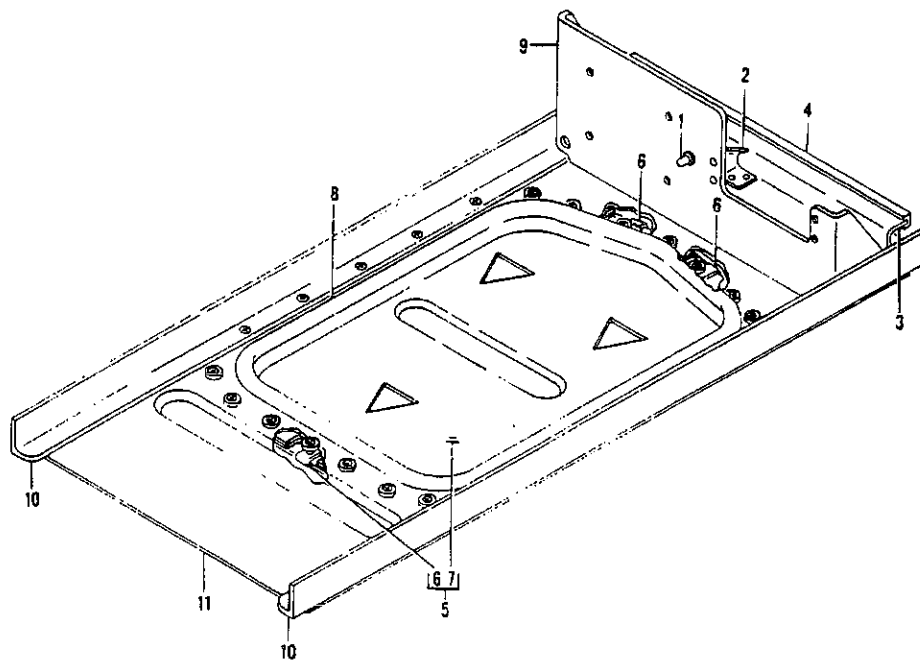
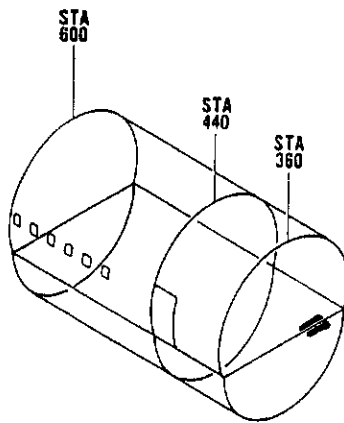


FIGURE 98A. TRAY ASSY, ELECTRONIC RACK 1 ATR DPE LONG ON LONG HF EQUIPMENT MOUNTING

MISSING ITEM NUMBERS ARE NOT APPLICABLE


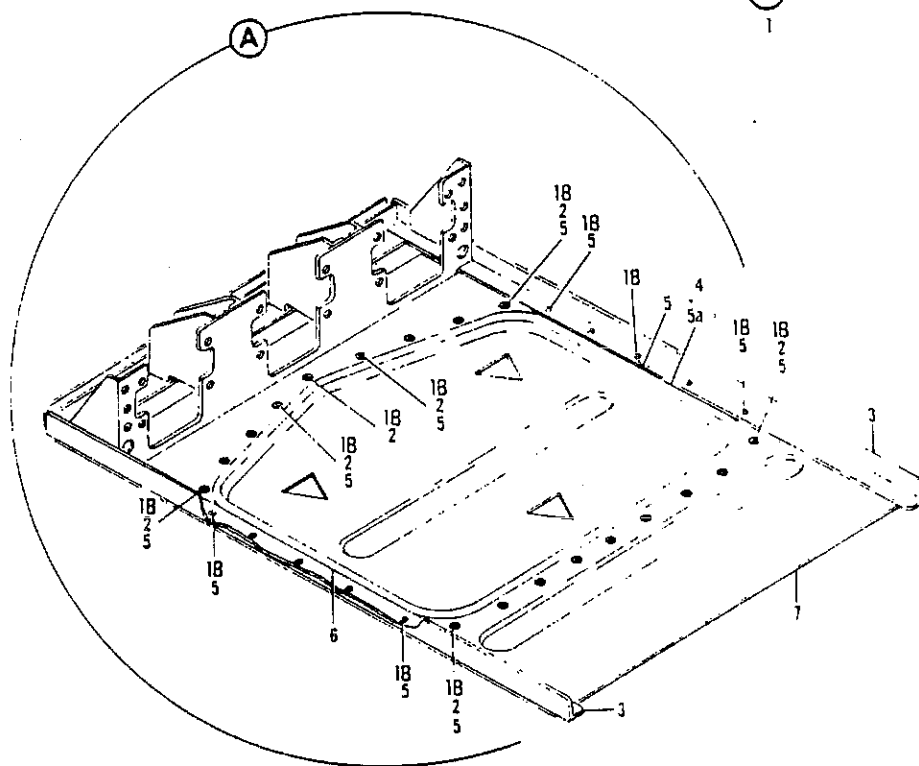


FIGURE 102. ELECTRICAL POWER-ELECTRONIC RACK

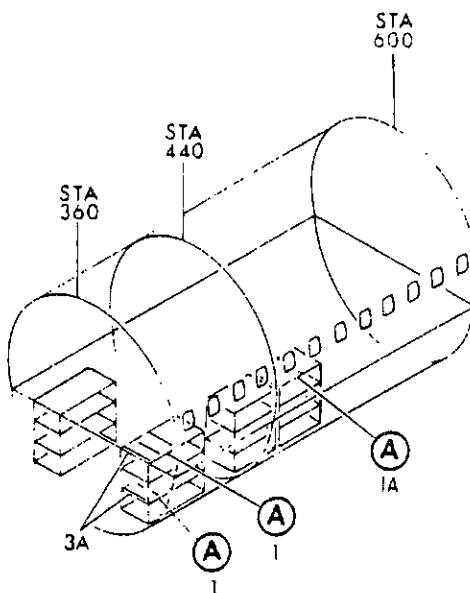

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
102	1	65-18719-17	TRAY ASSY, ELECTRONIC RACK 1-1/2 ATR 3DPD LONG ON LONG EQUIPMENT MOUNTING (SEE FIG. 8, ITEM 20, FIG. 16A, ITEM 51, FIG. 16B, ITEM 43, FIG. 17, ITEM 18, FIG. 17A, ITEM 23, FIG. 140, ITEM 27, FIG. 142, ITEM 33, FIG. 142A, ITEM 31, FIG. 142B, ITEM 35 AND FIG. 162, ITEM 47)								RF
	1B	NAS514P632-7	. SCREW								28
	2	BACW10AL1	. WASHER.								18
	3	66-1370	. RAIL, ELECTRONIC RACK LONG UNIT TRAY.								2
	4	65-20685-10	. PAN ASSY, ELECTRONIC SHELF.								1
	5	BACN10FX61	. . NUT								27
	5A	65-20685-20	. . PAN, ELECTRONIC SHELF								1
	6	65-1951	. SEAL ASSY, ELECTRONIC SHELF UNIT TRAY								1
	7	65-1798-10	. PLATE, UNIT TRAY 1-1/2 ATR LONG BOTTOM.								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

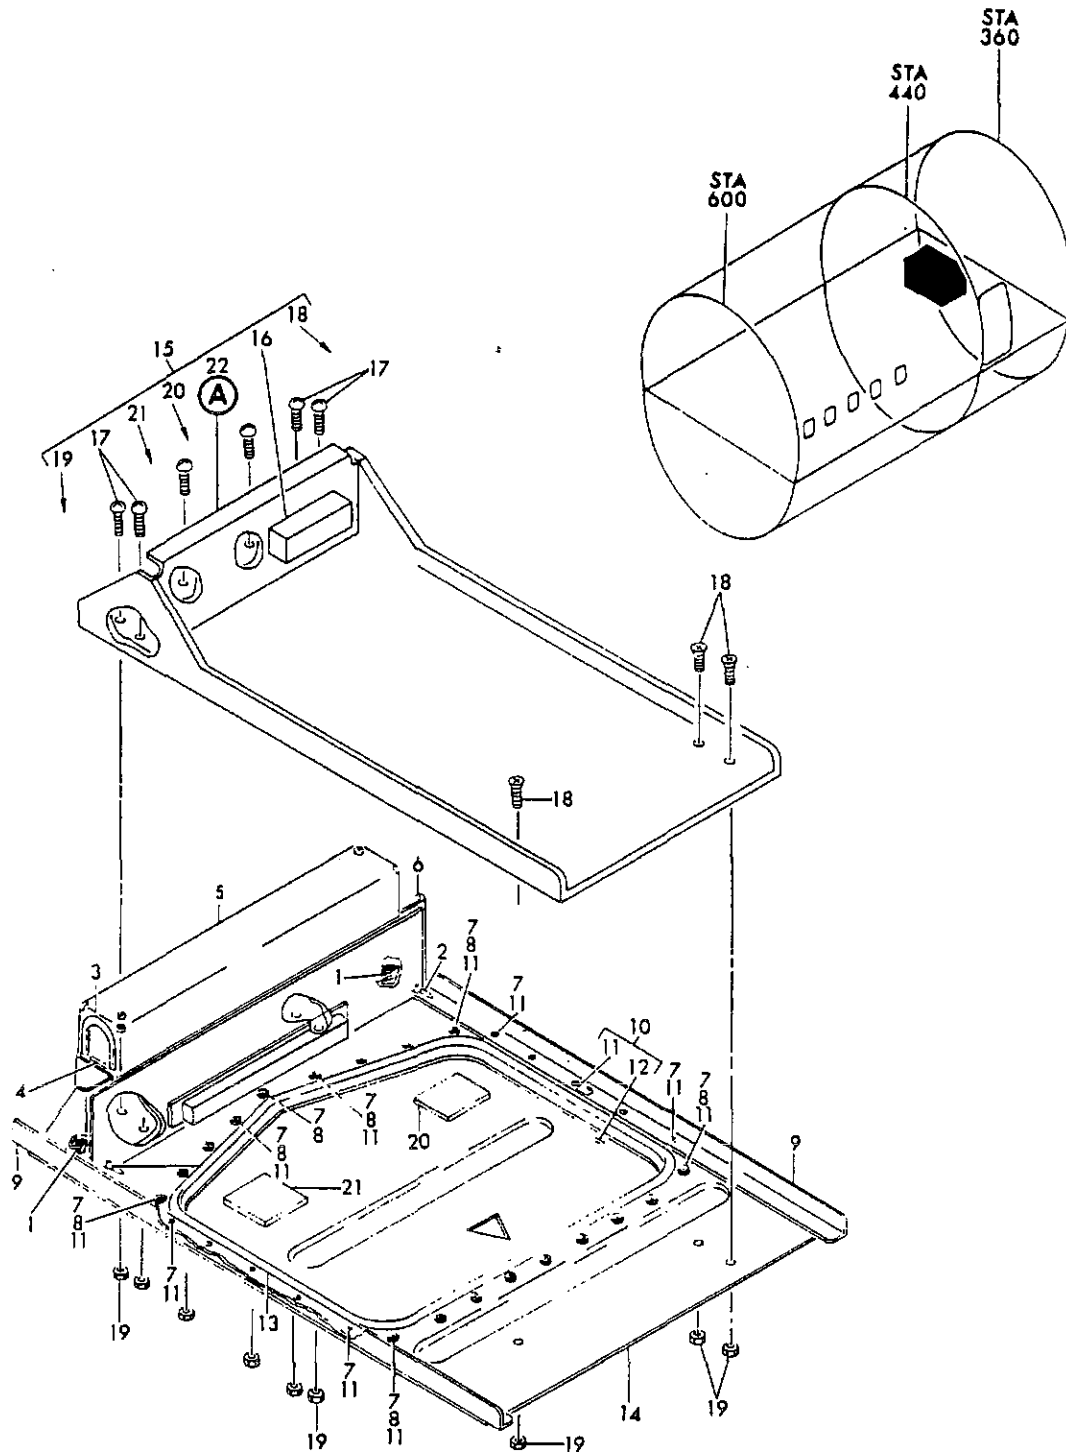


FIGURE 103. TRAY ASSY, ELECTRONIC RACK 1 1/2 ATR LONG COLLINS HF EQUIPMENT MOUNTING (SHEET 1)

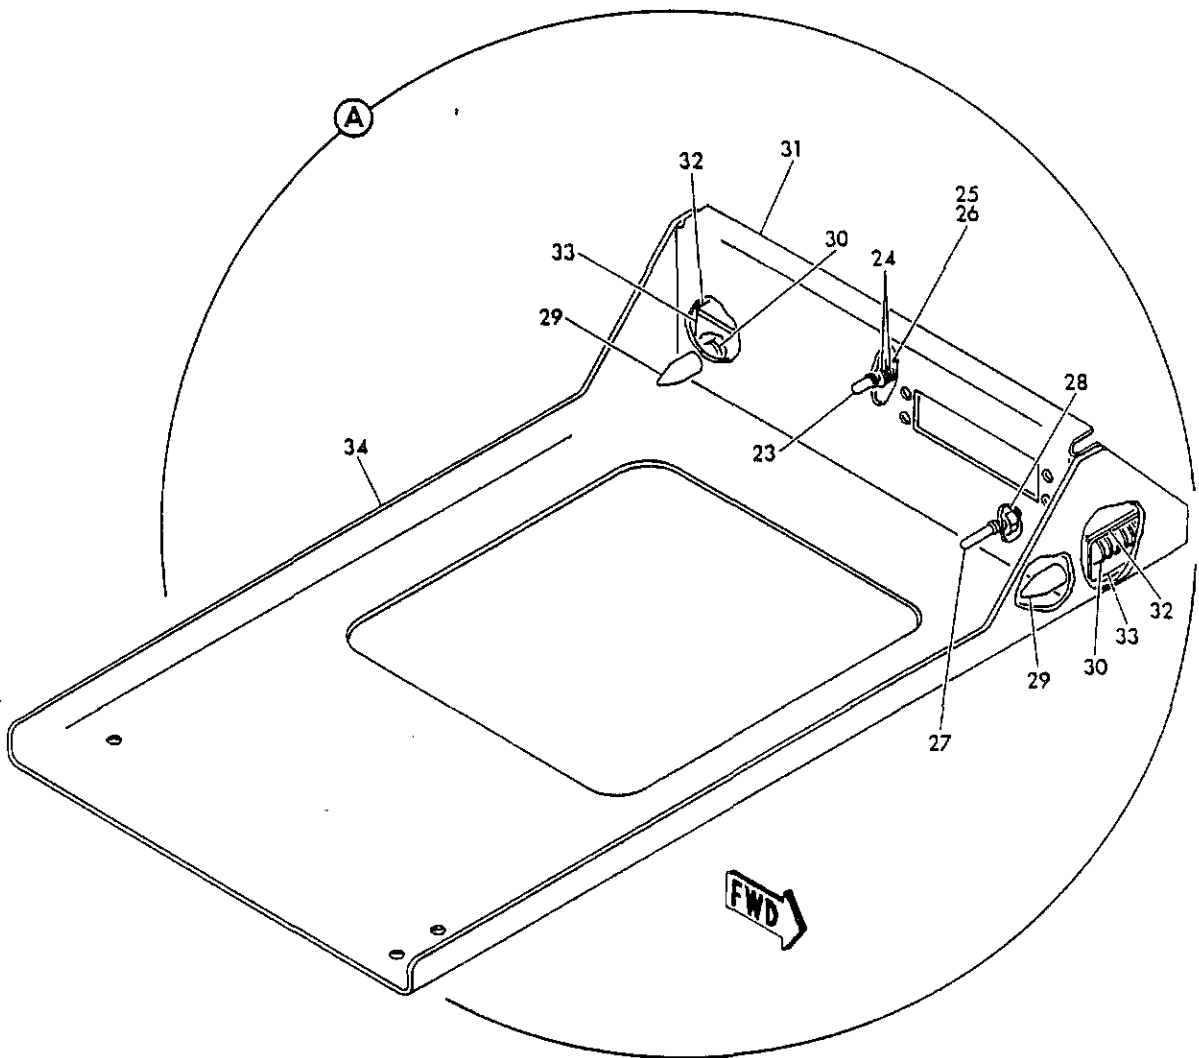


FIGURE 103. TRAY ASSY, ELECTRONIC RACK 1 1/2 ATR LONG COLLINS HF EQUIPMENT MOUNTING (SHEET 2)

BOEING **707** *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R 103	65-18719-18	TRAY ASSY, ELECTRONIC RACK 1-1/2 ATR LONG COLLINS HF.	0150	RF
R		EQUIPMENT MOUNTING (SEE FIG. 7, ITEM 33, FIG. 8E, ...		
R		ITEM 47, FIG. 14, ITEM 33, FIG. 14A, ITEM 36 AND		
R		FIG. 158, ITEM 21)		
R		(OPTIONAL 65-18719-63)		
R	65-18719-63	TRAY ASSY, ELECTRONIC RACK 1-1/2 ATR LONG COLLINS HF.	0150	RF
R		EQUIPMENT MOUNTING (SEE FIG. 7, ITEM 33, FIG. 8E, ...		
R		ITEM 47, FIG. 14, ITEM 33, FIG. 14A, ITEM 36 AND		
R		FIG. 158, ITEM 21)		
R		(OPTIONAL TO 65-18719-18)		
R	1 506-7511-002	. NUT, RETAINING (V13499)	0150	2
R	2 506-7514-002	. PIN, REAR LOCATING (V13499)	0150	2
R	3 65-5654-9	. SEAL, RUBBER.	0150	1
R	4 65-5654-10	. SEAL, RUBBER.	0150	1
R	5 506-7516-003	. CAP, FILTER BOX (V13499).	0150	1
R		ATTACHING PARTS		
R	NAS602-8	. SCREW	0150	2
R	AN960D8L	. WASHER.	0150	2
R		-----*		
R	6 540-5219-005	. BOX ASSY, FILTER (V13499)	0150	1
R		ATTACHING PARTS		
R	AN505-6-11	. SCREW	0150	4
R		-----*		
R	7 NAS514P632-7	. SCREW	0150	28
R	8 BACW10AL1	. WASHER.	0150	18
R	9 66-1370	. RAIL, ELECTRONIC RACK LONG UNIT TRAY.	0150	2
R	10 65-20685-10	. PAN ASSY, ELECTRONIC SHELF.	0150	1
R	11 BACN10FX61	. . NUT	0150	27
R	12 65-20685-20	. . PAN, ELECTRONIC SHELF	0150	1
R	13 65-1951	. SEAL ASSY, 1-1/2 ATR LONG ELECTRONIC SHELF UNIT TRAY	0150	1
R	14 65-1798-10	. PLATE, UNIT TRAY 1-1/2 ATR LONG BOTTOM.	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				


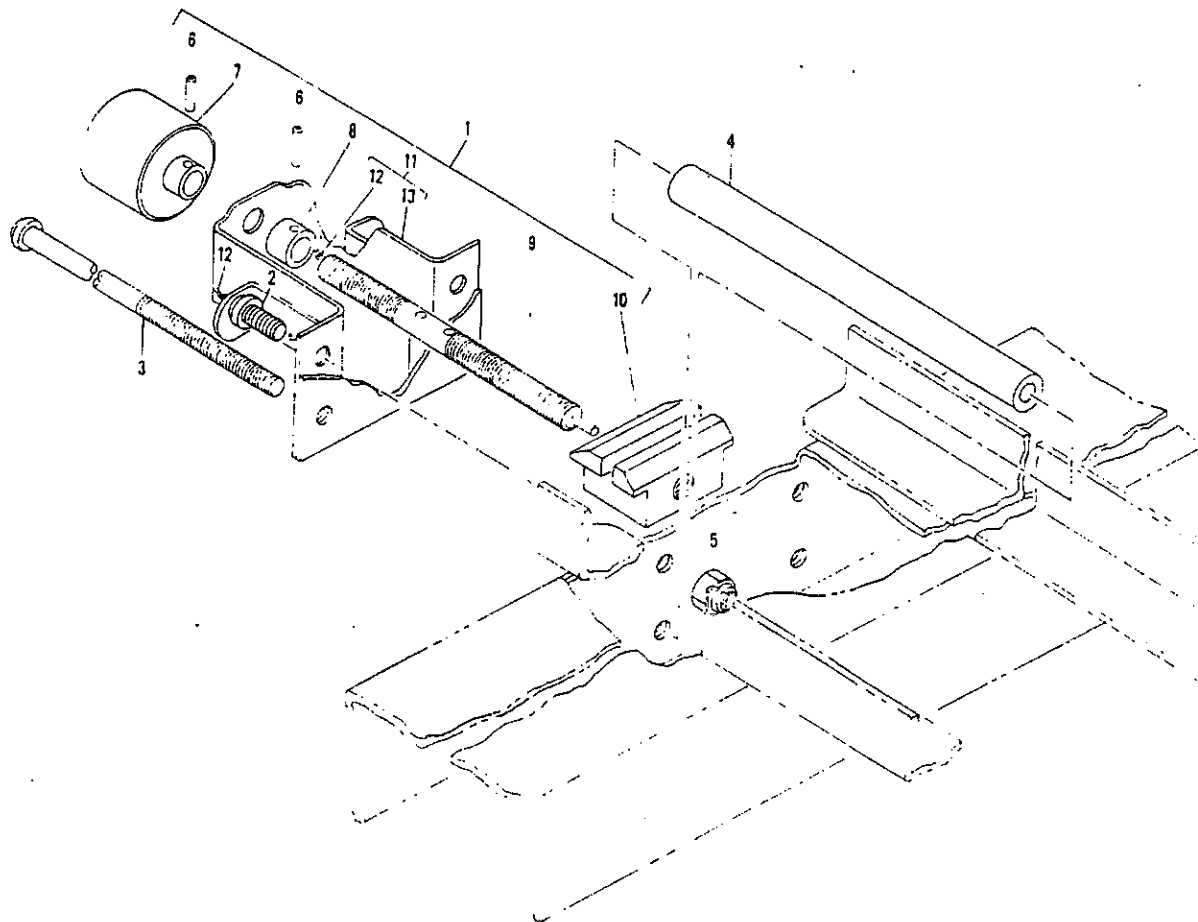


FIGURE 105. EXTRACTOR INSTL, ATR CASE

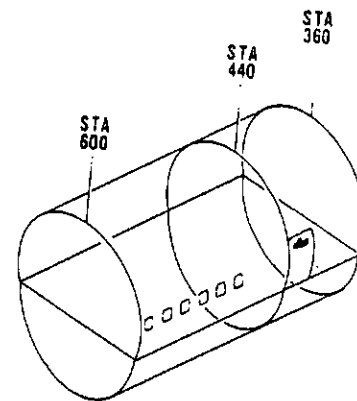

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R	105 69-23056-1	EXTRACTOR INSTL, 1/2 ATR CASE (SEE FIG. 6, ITEM 21, . . . FIG. 9, ITEM 24, FIG. 13, ITEM 21, FIG. 15C, ITEM 23A, FIG. 36, ITEM 14, FIG. 36B, ITEM 15, FIG. 37, ITEM 14, FIG. 37A, ITEM 23, FIG. 37B, ITEM 22, FIG. 38B, ITEM 16, FIG. 38C, ITEM 20 AND FIG. 38P, ITEM 26A)	0150	RF
	69-23056-6	EXTRACTOR INSTL, 3/4 ATR CASE		RF
	1 69-23056-9	SEE NUMERICAL INDEX FOR APPLICABLE NHA . EXTRACTOR ASSY, (USED ON 69-23056-1, -2 AND -6) . . .		1
	1 12167	(OPTIONAL TO 12167 (V30528)) . EXTRACTOR ASSY, (V30528)		1
	1 12167	(USED ON 69-23056-1, -2 AND -6) (OPTIONAL 69-23056-9) . EXTRACTOR ASSY, (W1517) (USED ON 69-23056-1, -2 AND .	5199	1
	1 69-23056-9	-6) (OPTIONAL 69-23056-9) . EXTRACTOR ASSY, (USED ON 69-23056-1, -2 AND -6) . . .	5199	1
	2 NAS603-6	(OPTIONAL TO 12167) (W1517) ATTACHING PARTS . SCREW		3
	3 NAS603-56	. SCREW		1
	4 NAS43DD3-188	. SPACER		1
	5 NAS679A3W	. NUT		3
	6 NAS561-2-6			2
	7 549-6472-002			1
	8 66-1628			1
	9 66-17075			1
	10 66-15078			1
	11 66-17074-3			1
	12 8ACG20ZC140			2
	13 66-17074-5			1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

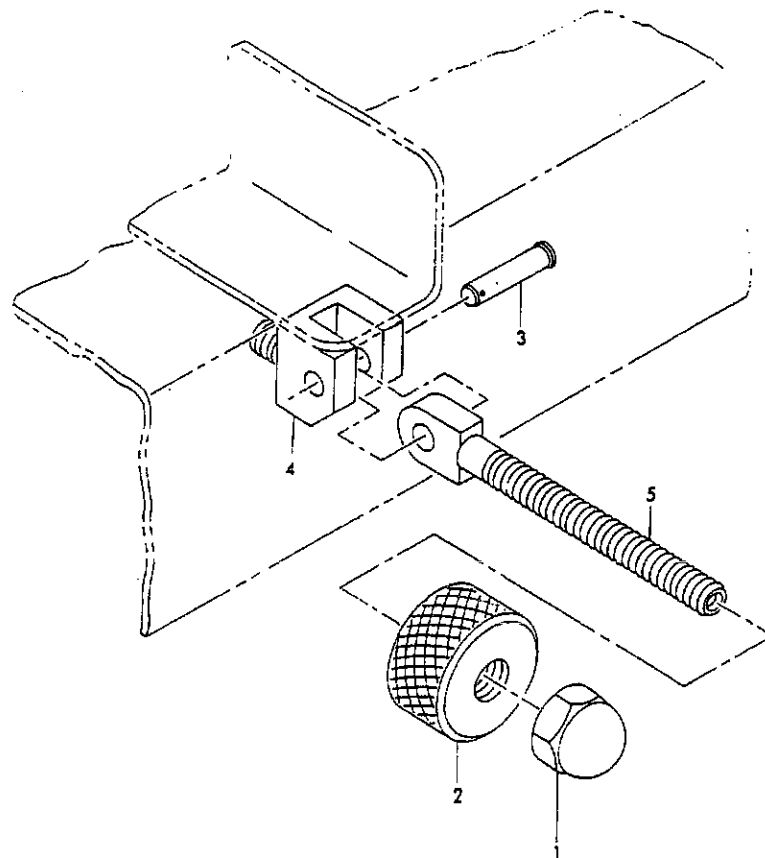
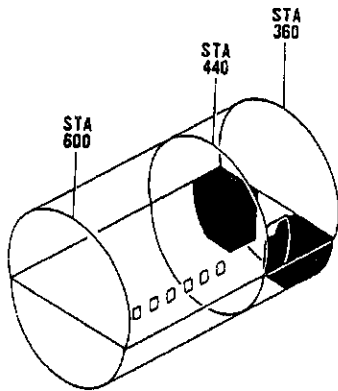


FIGURE 106. BOLT ASSY, ELECTRONIC SHELF UNIT HOLD DOWN

BOEING **707**
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
106	66-1390	BOLT ASSY, ELECTRONIC SHELF UNIT HOLD DOWN (SEE NUMERICAL PARTS ITEM FOR APPLICABLE NHA) (OPTIONAL TO 121366-707 (V30528)) (SEE NUMERICAL PARTS ITEM FOR APPLICABLE NHA)								RF
1	22K1-02	. NUT, (V72962)								1
2	NAS573-7	. NUT								1
3	AN392-17	. PIN								1
4	66-1384	. FITTING, ELECTRONIC SHELF UNIT HOLD DOWN.								1
5	66-1389	. BOLT, ELECTRONIC SHELF UNIT HOLD DOWN								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

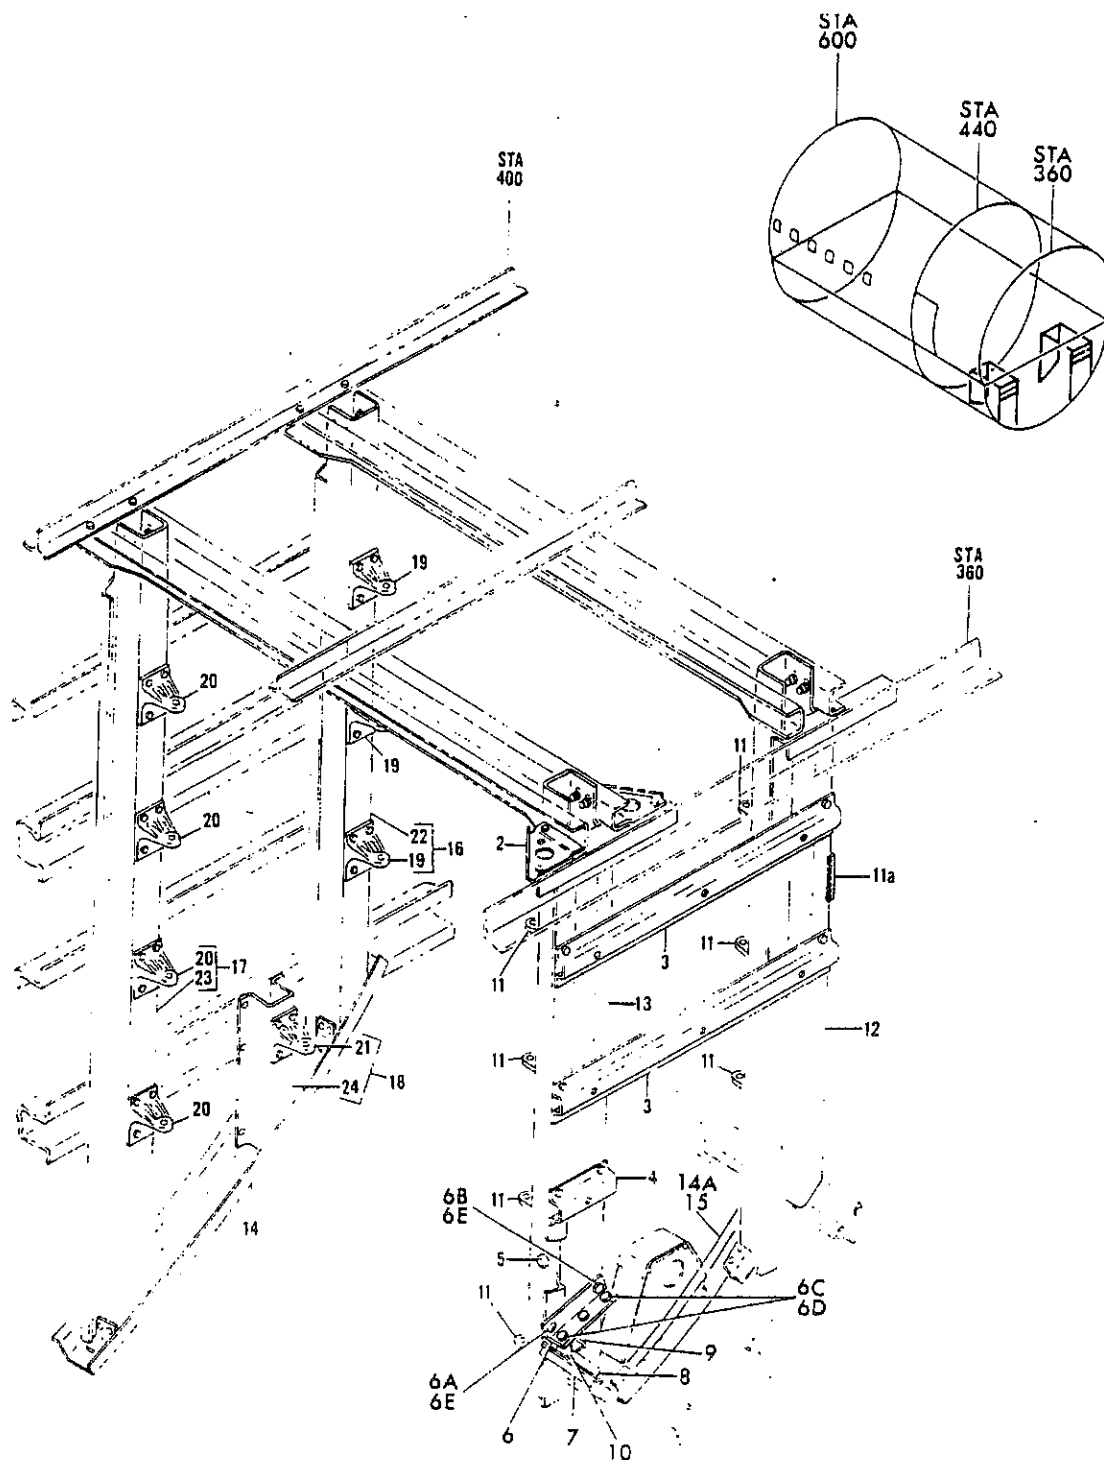


FIGURE 108. STANCHION INSTL., ELECTRONIC RACK SUPPORT



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
108	65-6814-1		STANCHION INSTL, ELECTRONIC RACK SUPPORT.		RF
			. STANCHION INSTL, ELECTRONIC RACK SUPPORT (LH) (SEE.		
			24-3, FIG. 6A, ITEM 19, 24-3, FIG. 6B, ITEM 16, ...		
			24-3, FIG. 6C, ITEM 14, 24-3, FIG. 6D, ITEM 21, ...		
			24-3, FIG. 6E, ITEM 25 AND 24-3, FIG. 6F, ITEM		
			17)		
	65-6814-2		. STANCHION INSTL, ELECTRONIC RACK SUPPORT (RH) (SEE.		RF
			24-3, FIG. 6A, ITEM 20, 24-3, FIG. 6B, ITEM 17, ...		
			24-3, FIG. 6C, ITEM 15, 24-3, FIG. 6D, ITEM 22, ...		
			24-3, FIG. 6E, ITEM 26 AND 24-3, FIG. 6F, ITEM		
			18)		
2	66-2633-3		. . GUSSET, ELECTRONICS RACK UPPER SUPPORT (LH ONLY).		1
2	66-2633-4		. . GUSSET, ELECTRONICS RACK UPPER SUPPORT (RH ONLY).		1
			ATTACHING PARTS		
	MS20470D5		. . RIVET		6
	NAS602-5		. . SCREW		2
	NAS679A08W		. . NUT		2
			*		
3	65-6814-39		. . CHANNEL ASSY, ELECTRONIC RACK RELAY PANEL SUPPORT		2
			STANCHION (RH ONLY)		
			ATTACHING PARTS		
	NAS603-6P		. . SCREW		4
	NAS679A3W		. . NUT		4
			*		
4	65-6814-6		. . CHANNEL ASSY, ELECTRONIC RACK RELAY PANEL SUPPORT		1
			STANCHION (RH ONLY)		
			ATTACHING PARTS		
	NAS603-6P		. . SCREW		2
	NAS514P632-4		. . SCREW		2
	NAS679A3W		. . NUT		2
	NAS679A06W		. . NUT		2
			*		
R	6	66-1604-1	. . CLIP.	5199	1
R	6	66-1604	. . CLIP, FORWARD INBOARD (DELETED BY SB 2709).	0150	1
			ATTACHING PARTS		
	6A	NAS514P1032-8	. . SCREW	5199	1
R	6A	NAS514P1032-8	. . SCREW, (DELETED BY SB 2709)	0150	1
R	6B	AN3-4A	. . BOLT.	5199	1
R	6B	AN3-4A	. . BOLT, (DELETED BY SB 2709).	0150	1
R	6C	AN3-5A	. . BOLT, (DELETED BY SB 2709).	0150	3
R	6D	NAS679A3W	. . NUT, (DELETED BY SB 2709)	0150	3
R	6E	NAS679A3W	. . NUT	5199	2
R	6E	NAS679A3W	. . NUT, (DELETED BY SB 2709)	0150	2
			*		
7	65-6814-9		. . TEE, ELECTRONIC RACK SUPPORT STANCHION.		1
			ATTACHING PARTS		
	NAS514P1032-8		. . SCREW		1
	AN3-4A		. . BOLT.		3
	AN3-5A		. . BOLT.		4
	NAS679A3W		. . NUT		8
			*		
8	65-6814-10		. . FILLER, ELECTRONIC RACK SUPPORT STANCHION RADIUS.		1
			(LH ONLY)		
8	65-6814-24		. . FILLER, ELECTRONIC RACK SUPPORT STANCHION RADIUS.		1
			(RH ONLY)		
9	65-6814-7		. . ANGLE, ELECTRONIC RACK SUPPORT STANCHION (LH ONLY)		1
9	65-6814-21		. . ANGLE, ELECTRONIC RACK SUPPORT STANCHION (RH ONLY)		1
10	65-6814-8		. . ANGLE, ELECTRONIC RACK SUPPORT STANCHION (LH ONLY)		1
10	65-6814-22		. . ANGLE, ELECTRONIC RACK SUPPORT STANCHION (RH ONLY)		1
			ATTACHING PARTS		
	NAS514P1032-8		. . SCREW, (USED WITH 65-6814-7 AND -21).		2
	AN3-3A		. . BOLT, (USED WITH 65-6814-8 AND -22)		2
	NAS679A3W		. . NUT		4
			*		
11	69-1031-2		. . FITTING, ELECTRONIC RACK SHELF SUPPORT.		7
			ATTACHING PARTS		
	AN3-5A		. . BOLT.		24
	AN3-4A		. . BOLT.		4
	65-6814-11		. . FILLER, ELECTRONIC RACK SUPPORT STANCHION RADIUS.		14
	NAS679A3W		. . NUT		28
			*		
11A	BACG20ZA350		. . GROMMET, (LH ONLY).		1
R	12	69-1079-3	. . STANCHION, ELECTRONIC RACK SHELF SUPPORT (LH ONLY)	0150	1
R	12	69-1079-20	. . STANCHION, (LH ONLY).	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
777
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
108	12 69-1079-15	.	STANCHION, ELECTRONIC RACK SHELF SUPPORT (RH ONLY)		1
	13 69-1079-10	.	STANCHION, ELECTRONIC RACK SHELF SUPPORT	0101	1
	13 69-1079-21	.	STANCHION	0299	1
			ATTACHING PARTS		
	AN3-4A	.	BOLT, (USED WITH 69-1079-10 AND -21)		8
	AN3-4A	.	BOLT, (USED WITH 69-1079-4 AND -15)		3
			(OPTIONAL MS35458-13)		
	MS35458-13	.	SCREW, (USED WITH 69-1079-4 AND -15)		3
			(OPTIONAL TO AN3-4A)		
	AN3-4A	.	BOLT, (USED WITH 69-1079-3 AND -20)		3
			(OPTIONAL MS35458-13)		
	MS35458-13	.	SCREW, (USED WITH 69-1079-3 AND -20)		3
			(OPTIONAL TO AN3-4A)		
	63-1711-3	.	SPACER, ELECTRONIC RACK SUPPORT STANCHION		8
	BACW10P42S	.	WASHER		8
	NAS679A3W	.	NUT		8
			-----*		
	14 69-1647-1	.	CHANNEL, ELECTRONIC RACK AFT STANCHION SUPPORT (LH ONLY)		1
	14 69-1647-2	.	CHANNEL, ELECTRONIC RACK AFT STANCHION SUPPORT (RH ONLY)		1
			ATTACHING PARTS		
	AN3-4A	.	BOLT		16
	1-29211	.	FILLER, STRINGER		16
	NAS679A3W	.	NUT		16
			-----*		
	15 69-1869	.	CHANNEL, FORWARD STANCHION (LH ONLY)		1
			ATTACHING PARTS		
	AN3-4A	.	BOLT		6
			-----*		
	15 69-1869	.	CHANNEL, FORWARD STANCHION (RH ONLY)		1
			ATTACHING PARTS		
	AN3-4A	.	BOLT		6
			-----*		
	65-6814-35	.	STANCHION INSTL, ELECTRONIC RACK SUPPORT (LH) (SEE. 24-13, FIG. 73B, ITEM 15A)		RF
	65-6814-36	.	STANCHION INSTL, ELECTRONIC RACK SUPPORT (RH) (SEE. 24-13, FIG. 73B, ITEM 15B)		RF
	16 65-6814-29	.	STANCHION ASSY, ELECTRONIC RACK SUPPORT (LH ONLY)		1
	16 65-6814-32	.	STANCHION ASSY, ELECTRONIC RACK SUPPORT (RH ONLY)		1
	17 65-6814-31	.	STANCHION ASSY, ELECTRONIC RACK SUPPORT (LH ONLY)		1
	17 65-6814-34	.	STANCHION ASSY, ELECTRONIC RACK SUPPORT (RH ONLY)		1
	18 65-6814-33	.	STANCHION ASSY, ELECTRONIC RACK SUPPORT (LH ONLY)		1
	18 65-6814-30	.	STANCHION ASSY, ELECTRONIC RACK SUPPORT (RH ONLY)		1
			ATTACHING PARTS		
	AN3-4A	.	BOLT		38
	63-1711-2	.	SPACER, ELECTRONIC RACK SUPPORT STANCHION (USED WITH 65-6814-29, -32, -31 AND -34)		8
	BACW10P42S	.	WASHER, (USED WITH 65-6814-29, -32, -31 AND -34)		8
	NAS679A3W	.	NUT		38
			-----*		
	19 69-1031-2	.	FITTING, ELECTRONICS RACK SHELF SUPPORT (USED ON 65-6814-29 AND -32)		3
	20 69-1031-2	.	FITTING, ELECTRONICS RACK SHELF SUPPORT (USED ON 65-6814-31 AND -34)		4
	21 69-1031-2	.	FITTING, ELECTRONICS RACK SHELF SUPPORT (USED ON 65-6814-33 AND -30)		1
			ATTACHING PARTS		
	AN3-5A	.	BOLT		32
	65-6814-12	.	FILLER, ELECTRONIC RACK SUPPORT STANCHION RADIUS (USED ON 65-6814-29 AND -32)		6
	65-6814-12	.	FILLER, ELECTRONIC RACK SUPPORT STANCHION RADIUS (USED ON 65-6814-31 AND -34)		8
	65-6814-11	.	FILLER, ELECTRONIC RACK SUPPORT STANCHION RADIUS (USED ON 65-6814-33 AND -30)		2
	NAS679A3W	.	NUT		32
			-----*		
	22 69-1079-1	.	STANCHION, ELECTRONICS RACK SHELF SUPPORT (USED ON 65-6814-29)		1
	22 69-1079-2	.	STANCHION, ELECTRONICS RACK SHELF SUPPORT (USED ON 65-6814-32)		1
	23 69-1079-7	.	STANCHION, ELECTRONICS RACK SHELF SUPPORT (USED ON 65-6814-31)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
108	23	69-1079-8	. . . STANCHION, ELECTRONICS RACK SHELF SUPPORT (USED . ON 65-6814-34)								1
	24	69-1079-5	. . . STANCHION, ELECTRONICS RACK SHELF SUPPORT (USED . ON 65-6814-33)								1
	24	69-1079-6	. . . STANCHION, ELECTRONICS RACK SHELF SUPPORT (USED . ON 65-6814-30)								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

BOEING *Intercontinental* **707**
PARTS CATALOG

SECTION 10
CONTROL CABIN ELECTRICAL

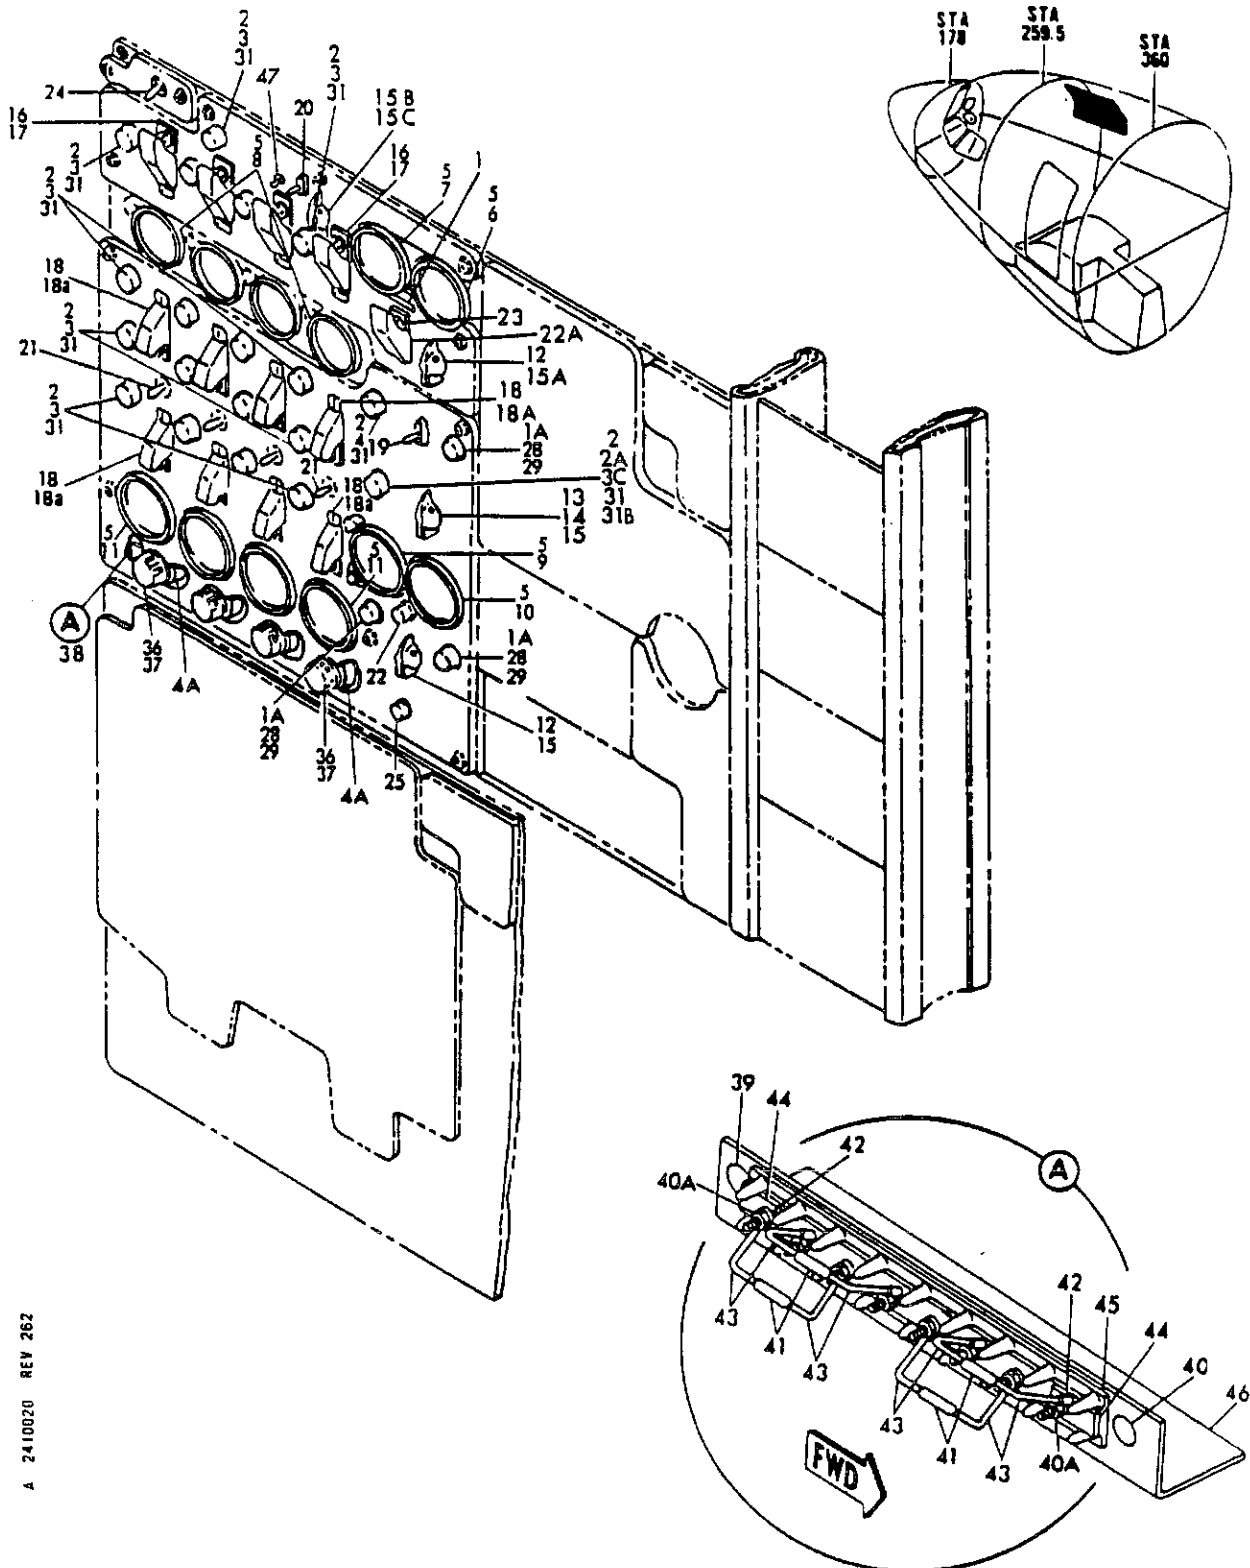


FIGURE 20. PANEL INSTL, FLIGHT ENGINEERS UPPER (ELECTRICAL POWER ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
20	65-58955-1		PANEL INSTL, FLIGHT ENGINEERS UPPER (ELECTRICAL POWER ONLY) (SEE 25-1, FIG. 1B, ITEM 8, 25-1, FIG. 1E, ITEM 8, 25-1, FIG. 1F, ITEM 5, 25-1, FIG. 2D, ITEM 6 AND 25-1, FIG. 2E ITEM 102)	5199	RF
1A	NE51		. LAMP, NEON (V08806)	5199	3
2	1864		. LAMP, (V08806)	5199	18
3	SHAP		. LIGHT CAP, (V81590)	5199	16
3A	ARP		. LIGHT CAP, (V81590)	5199	1
4	SH8P		. LIGHT CAP, (V81590)	5199	1
	65-58955-98		. UNIT ASSY, (ELECTRICAL POWER ONLY)	5199	RF
5	BACC10EL3		. CLAMP	5199	12
6	10-60757-141		. LOADMETER, DC	5199	1
8	10-3232-13		. INDICATOR, DIFFERENTIAL OIL TEMPERATURE	5199	4
9	10-60757-25		. METER, FREQUENCY	5199	1
10	10-60757-22		. VOLTMETER, AC	5199	1
10	124-832		. VOLTMETER, AC (V34830) (BAC SPEC NO. 10-60757-22)	5199	1
11	10-60757-26		. POWERMETER	5199	4
12	BACK20E2		. KNOB	5199	2
13	BACK20E2		. KNOB	5151	1
13	RB67-2P		. KNOB, (V86797)	5299	1
15	10-2568-13		. SWITCH ASSY, ROTARY	5199	2
15A	10-2568-13		. SWITCH ASSY, ROTARY	5199	1
16	11170		. GUARD, (V72914)	5199	4
17	MS35059-26		. SWITCH	5199	4
18	10272-1		. GUARD, (V72914)	5199	8
18A	MS35059-27		. SWITCH	5199	8
19	10-60112-1		. SWITCH, MAGNETICALLY HELD FOUR POLE	5199	1
20	10-60112-2		. SWITCH, MAGNETICALLY HELD FOUR POLE	5199	1
	NAS514P632-7		ATTACHING PARTS . SCREW	5199	4
			-----*		
21	2TL1-7E		. SWITCH, TOGGLE (V91929)	5199	4
22	W20095		. SWITCH, PUSHBUTTON (V81640)	5199	1
22A	11170-1		. GUARD, SWITCH (V72914)	5199	1
23	MS35058-23		. SWITCH	5199	1
24	T1003		. SWITCH, TOGGLE (V81640)	5199	1
25	10PB3		. SWITCH, PUSHBUTTON (V91929)	5199	1
	NAS514P632-7		ATTACHING PARTS . SCREW	5199	2
			-----*		
28	MS35337-40		. WASHER	5199	6
29	95-1308-0937-142		. LIGHTBASE, (V72619)	5199	3
31	STB130-4		. LIGHTBASE, (V81590)	5199	18
36	66-9088		. KNOB ASSY	5199	4
37	LL22XD62J3		. SETSCREW, (V03038)	5199	8
38	69-52916-4		. BRACKET ASSY, RESISTOR	5199	1
	NAS514P832-8		ATTACHING PARTS . SCREW	5199	3
	NAS679A08W		. NUT	5199	3
			-----*		
39	BACM10N00-2AAX		. MARKER-ALUMINUM FOIL, 8	5199	1
40	BACM10N00-2PP		. MARKER-ALUMINUM FOIL, 1	5199	1
40A	NAS679A06W		. NUT	5199	8
41	BACR14AH5622		. RESISTOR	5199	4
			(OPTIONAL TO RNC70K5622FM)		
41	RNC70K5622FM		. RESISTOR	5199	4
			(OPTIONAL BACR14AH5622)		
42	BACT12AC1		. TERMINAL	5199	8
43	69-52916-3		. TUBING, (ALTERED FROM BACT63A50-4)	5199	8
44	MS25227-1A		. STRIP	5199	2
45	MS27212-1-B		. TERMINAL BOARD	5199	1
	NAS600-6P		ATTACHING PARTS . SCREW	5199	2
	NAS679A04W		. NUT	5199	2
			-----*		
46	69-52916-5		. BRACKET	5199	1
			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	5199	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

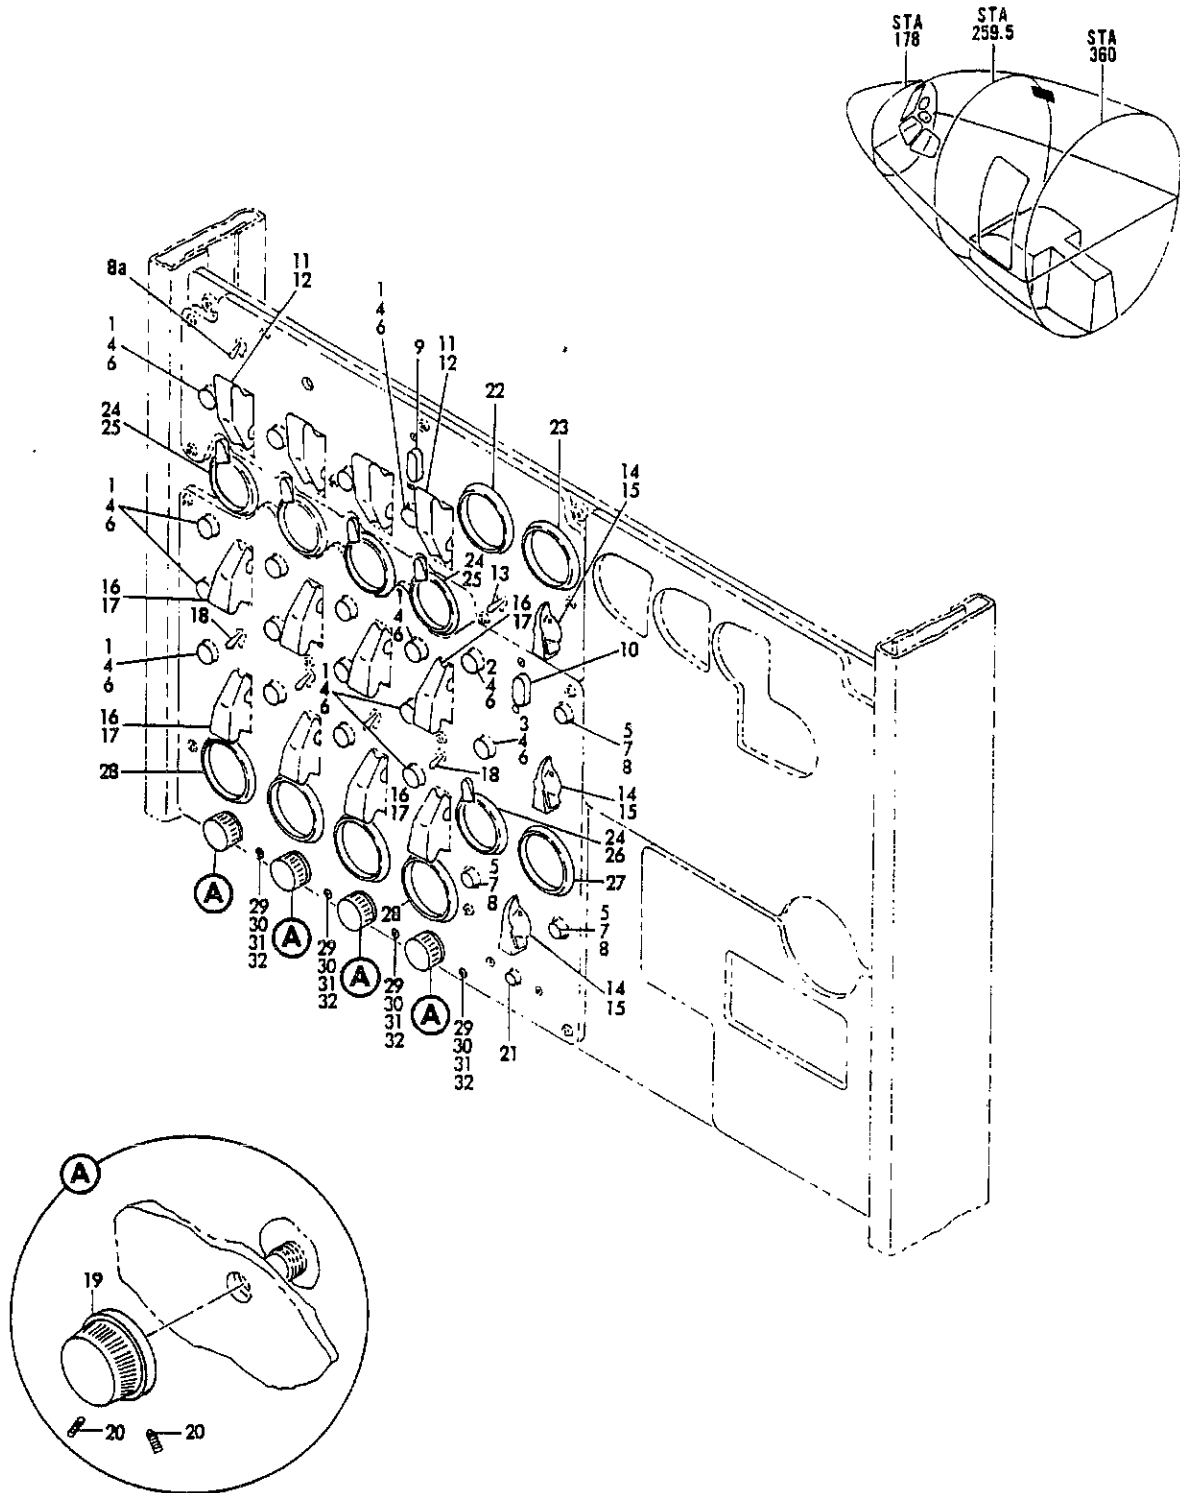


FIGURE 26. PANEL INSTL. FLIGHT ENGINEERS UPPER (ELECTRICAL POWER ONLY)

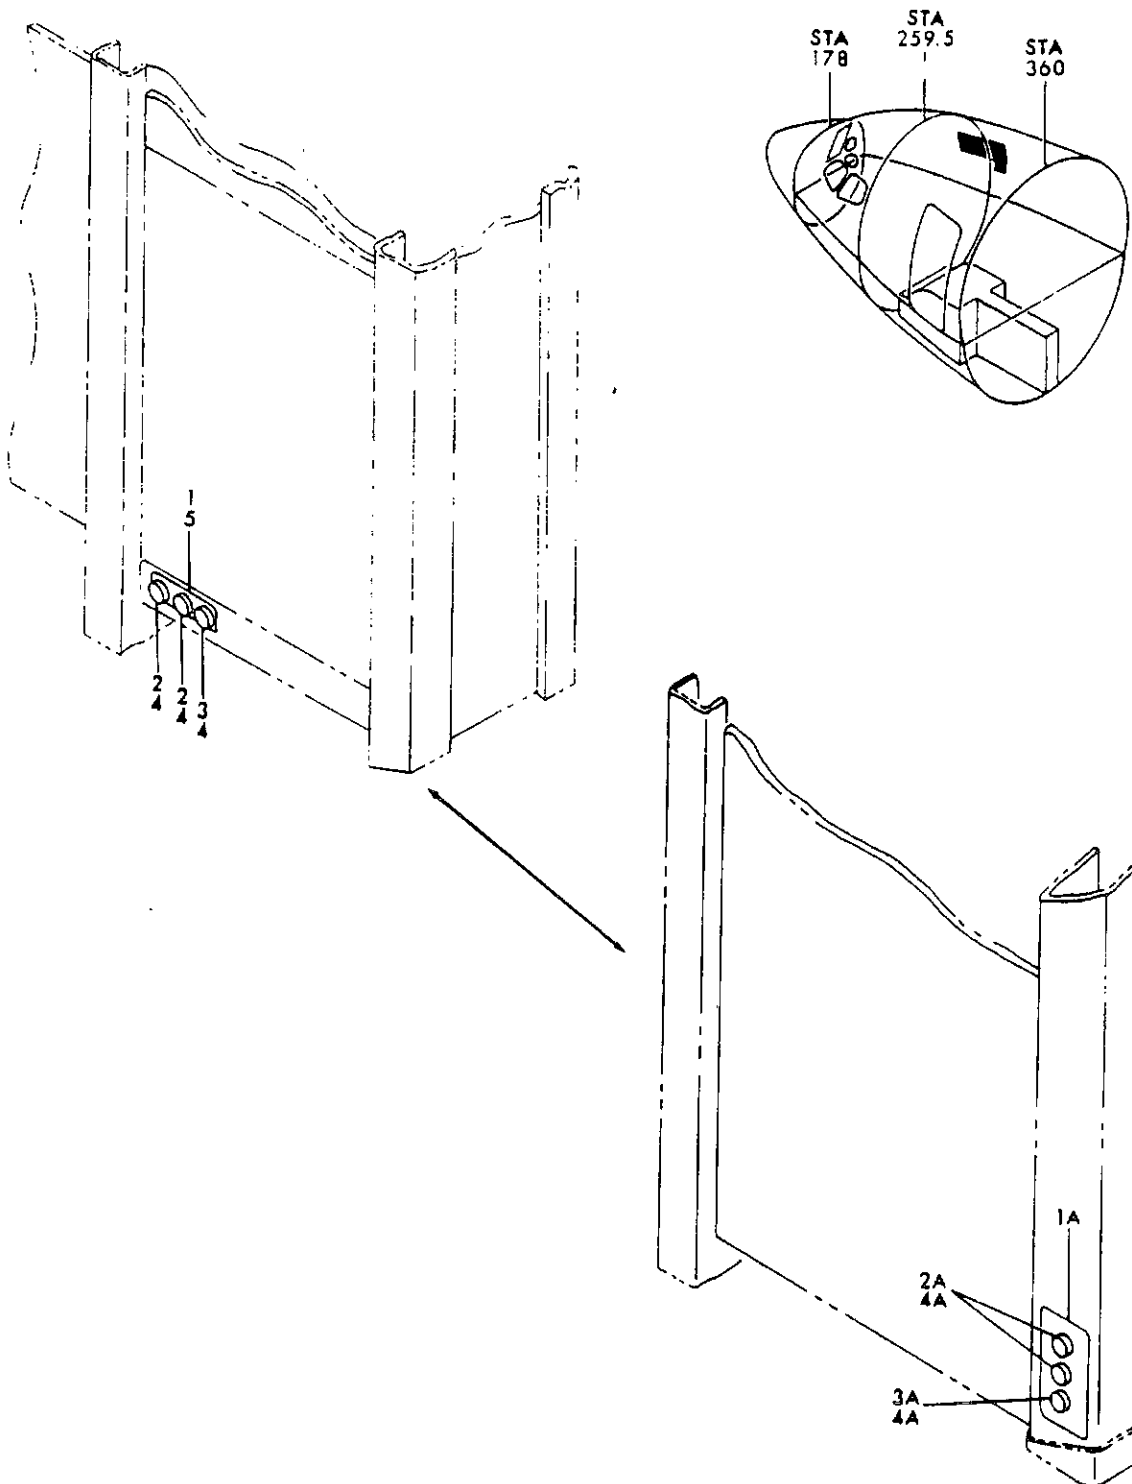


FIGURE 34. PANEL INSTL, FLIGHT ENGINEERS AUXILIARY (ELECTRICAL POWER ONLY)

BOEING **707**
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
34	65-58957-1	PANEL INSTL, FLIGHT ENGINEERS AUXILIARY (ELECTRICAL . . . POWER ONLY) (SEE 25-1, FIG. 1B, ITEM 8, 25-1, FIG. 1E, ITEM 8, 25-1, FIG 1F, ITEM 7, 25-1, FIG. 2D, ITEM 6 AND 25-1, FIG. 2E, ITEM 83)							5199	RF
1	65-40583-88	. SCOTCH-CAL, AC POTENTIAL.							5199	1
2	BACJ11A81-02	. JACK.							5199	2
3	BACJ11A81-03	. JACK.							5199	1
4	MS35335-34	. WASHER.							5199	3
		. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										


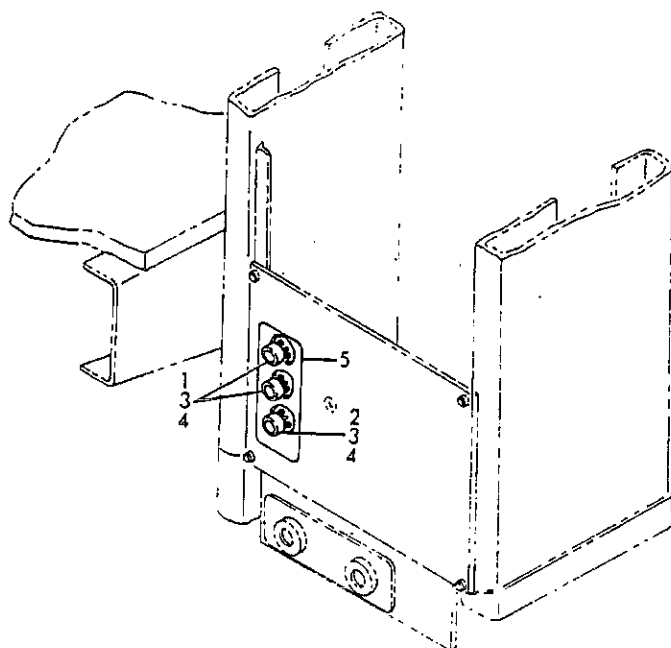


FIGURE 36. INTERPHONE INSTL, FLIGHT ENGINEER (ELECTRICAL POWER ONLY)

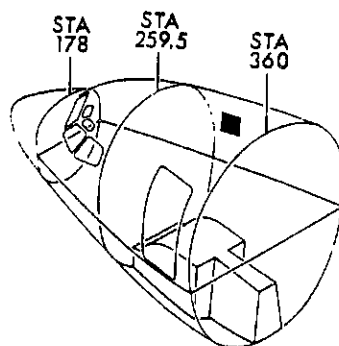

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF	UNITS	
			FROM TO	PER ASSY	
R R R R R R R R R R	36	65-12201	INTERPHONE INSTL, FLIGHT ENGINEER (ELECTRICAL POWER . . ONLY) (SEE 25-1, FIG. 1B, ITEM 97, 25-1, FIG. 1C, ITEM 113, 25-1, FIG. 1D, ITEM 112, 25-1, FIG. 1E, ITEM 107, 25-1, FIG. 1F, ITEM 88, 25-1, FIG. 1G, ITEM 92, 25-1, FIG. 1H, ITEM 105, 25-1, FIG. 1J, ITEM 106, 25-1, FIG. 1K, ITEM 101, 25-1, FIG. 2B, ITEM 104, 25-1, FIG. 2C, ITEM 95 AND 25-1, FIG. 2E, ITEM 110)	0150	RF
	1	108-902	. PLUG, BANANA JACK (RED) (V74970).	0150	2
	2	108-903	. PLUG, BANANA JACK (BLACK) (V74970).	0150	1
	4	MS35335-34	. WASHER.	0150	3
			. FOR REFERENCE TO OTHER INTERPHONE DETAILS, SEE NHA. .	0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

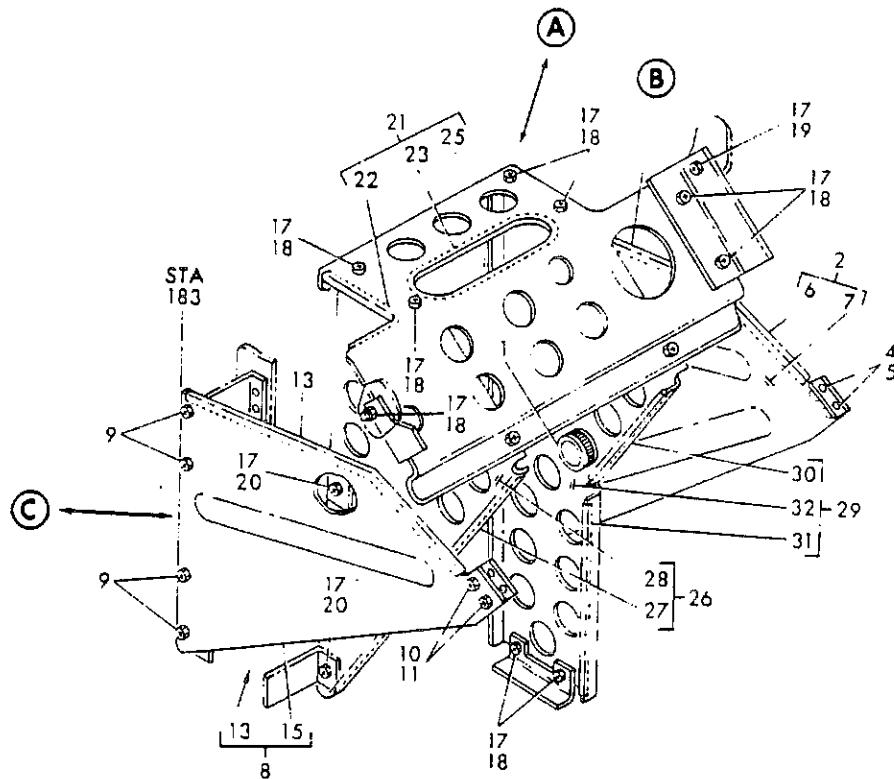
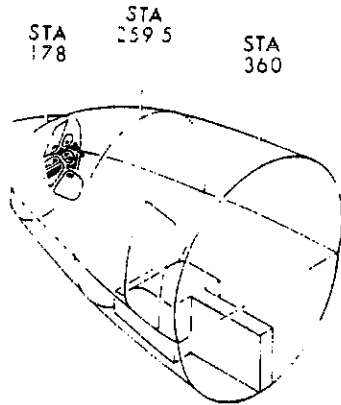


FIGURE 37. PANEL INSTL, PILOTS PANEL PLUG DISCONNECT (SHEET 1)

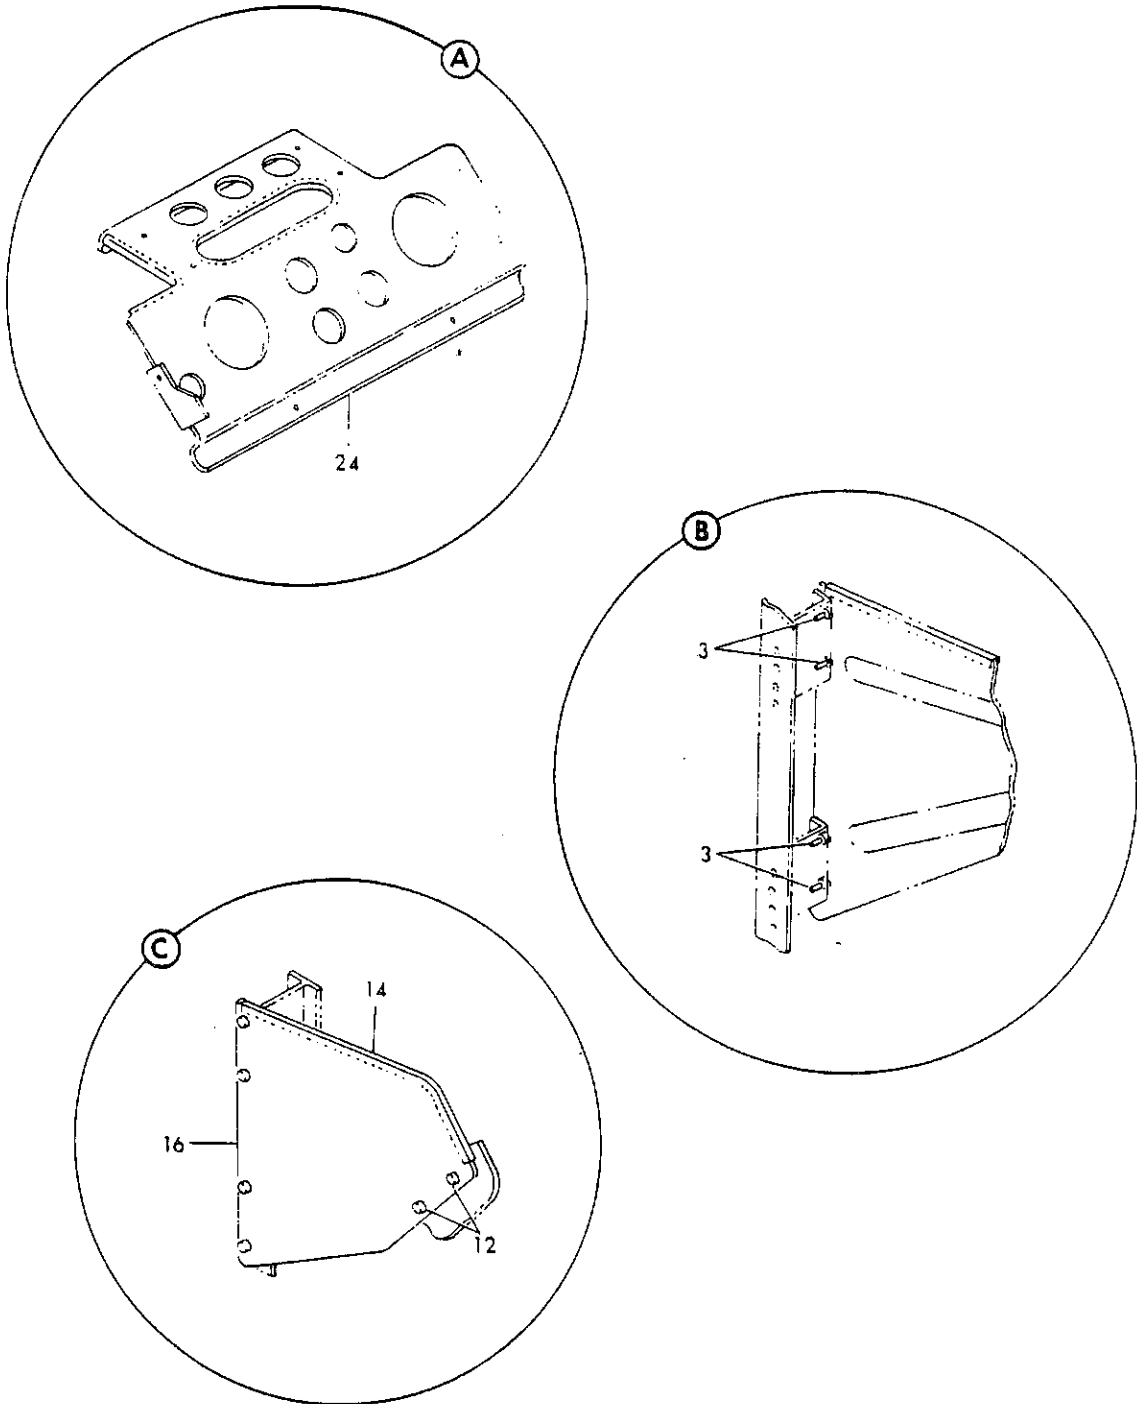


FIGURE 37. PANEL INSTL. PILOTS PANEL PLUG DISCONNECT (SHEET 2)

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	37	65-51700-1	PANEL INSTL, PILOTS PANEL PLUG DISCONNECT (SEE 24-3, . .							0150	RF
R			FIG. 5A, ITEM 233, 24-3, FIG. 5B, ITEM 233, 24-3,								
R			FIG. 5C, ITEM 222, 24-3, FIG. 5D, ITEM 226)								
R	1	48-7161	. CONNECTOR, (VO2660)							0150	1
R		NAS600-6P	ATTACHING PARTS								
R		BACN10NW1	. SCREW							0150	2
			. NUT							0150	2
			-----*								
R	2	65-51701-22	. GUARD ASSY, P-10.							0150	1
R	3	BACSI2CB3-6	ATTACHING PARTS								
			. SCREW							0150	4
			-----*								
R	4	NAS514P632-6	. SCREW							0150	2
R	5	BACN10FX61	. NUT							0150	2
R	6	65-51701-24	. RUBBER, EXTRUDED.							0150	1
R	7	65-51701-15	. GUARD, P-10							0150	1
R	8	65-51701-21	. GUARD ASSY, P-8 (USED ON 65-51700-1).							0150	1
			ATTACHING PARTS								
R	9	BACSI2CB3-6	. SCREW							0150	4
R	10	NAS514P632-6	. SCREW, (USED ON 65-51701-4, -21).							0150	2
R	11	BACN10FX61	. NUT, (USED ON 65-51701-4, -21).							0150	2
			-----*								
R	13	65-51701-24	. RUBBER, EXTRUDED.							0150	1
R	15	65-51701-14	. GUARD, P-8 (USED ON 65-51701-4, -21).							0150	1
R	17	BACSI2CB3-6	. SCREW							0150	12
R	18	BACN10FX1W	. NUT							0150	9
R	19	BACN10FX1	. NUT							0150	1
R	20	NAS679A3W	. NUT							0150	2
R	21	65-51701-1	. SUPPORT ASSY, P-9 (USED ON 65-51700-1, -2).							0150	1
R	22	BACG20ZB690	. GROMMET							0150	1
R	23	BACG20ZB152B	. GROMMET							0150	1
R	24	65-51701-11	. PANEL							0150	1
R	26	65-51701-2	. SUPPORT ASSY, P-8							0150	1
R	27	BACG20ZB1620	. GROMMET							0150	1
R	28	65-51701-12	. PANEL							0150	1
R	29	65-51701-3	. SUPPORT ASSY, P-10.							0150	1
R	30	BACG20ZB1480	. GROMMET							0150	1
R	31	BACG20ZC1630	. GROMMET							0150	1
R	32	65-51701-13	. PANEL							0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 11
GROUND POWER EQUIPMENT


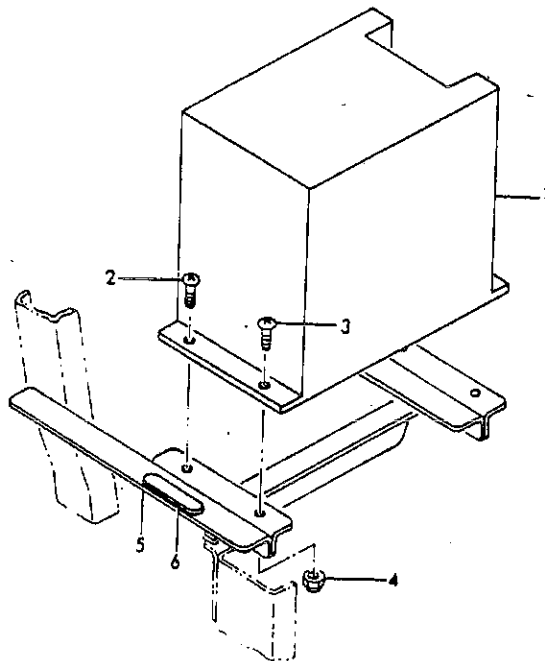


FIGURE 1. TRANSFORMER-RECTIFIER INSTL. GROUND POWER

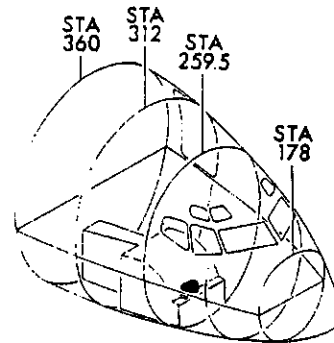

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1	65-8602		TRANSFORMER-RECTIFIER INSTL, GROUND POWER (SEE 24-3, . . . FIG. 1A, ITEM 20, 24-3, FIG. 1B, ITEM 19 AND 24-3, FIG. 1C, ITEM 18)		RF
1	10-60011-1		. TRANSFORMER-RECTIFIER, 20 AMPERE.		1
1	10-60011-2		. (OPTIONAL BAC SPEC NO. 10-60011-2) . TRANSFORMER-RECTIFIER, 12 AMPERE.		1
			. (OPTIONAL TO BAC SPEC NO. 10-60011-1)		
			ATTACHING PARTS		
2	NAS604-10		. SCREW		2
3	NAS604-6		. SCREW		2
4	MS20364-428		. NUT		2
			-----*		
5	65-8602-1		. BRACKET ASSY, TRANSFORMER-RECTIFIER GROUND POWER. . .		1
6	BACM10L10-18KP		. MARKER-ALUMINUM FOIL.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

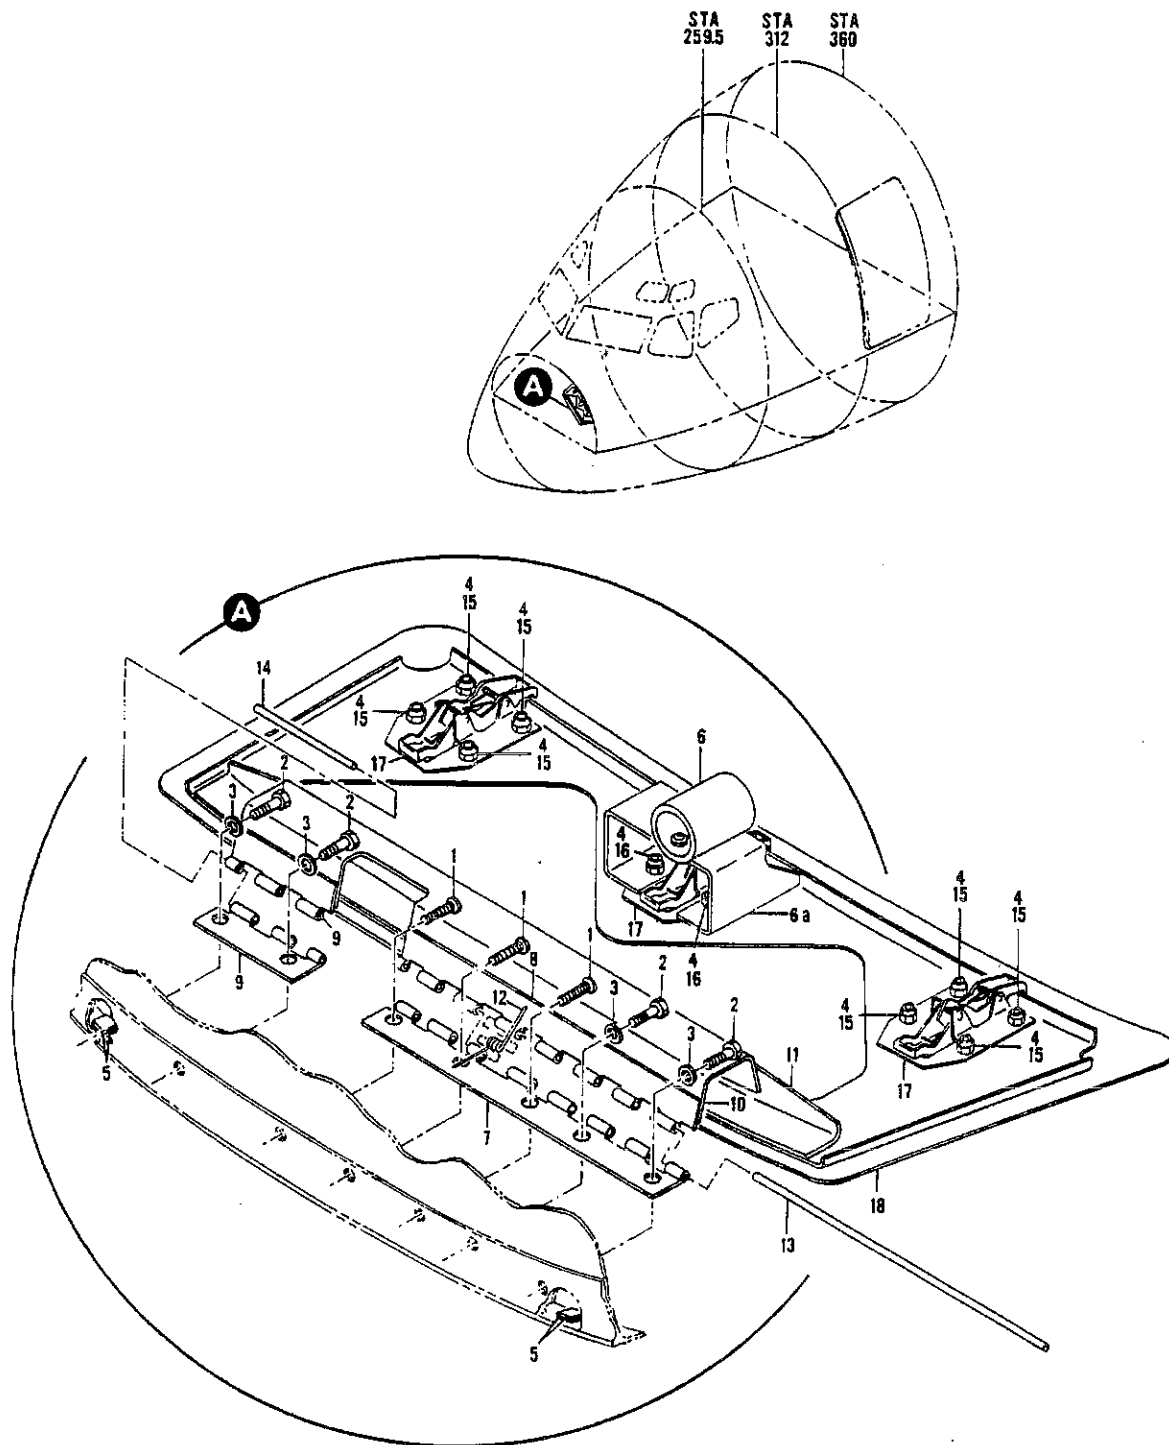


FIGURE 2. DOOR INSTL, EXTERNAL POWER RECEPTACLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
2	65-7093	DOOR INSTL, EXTERNAL POWER RECEPTACLE (SEE 53-1, FIG. 1, ITEM 31)								RF
1	NAS601-4	. SCREW								3
2	NAS1103-4W	. BOLT.								4
3	AN960D10L	. WASHER.								4
4	NAS679A06W	. NUT								12
5	BACS4088-10	. SHIM.								4
		(OPTIONAL 65-7093-4)								
5	65-7093-4	. SHIM, EXTERNAL POWER RECEPTACLE DOOR.								4
		(OPTIONAL TO BACS4088-10)								
	65-7093-10	. DOOR ASSY, EXTERNAL POWER RECEPTACLE.								1
6A	66-11575	. CHANNEL, DOOR RELEASE HANDLE RETAINER								1
7	65-7093-6	. HINGE HALF, EXTERNAL POWER RECEPTACLE DOOR (ALTERED FROM AN257H4-750)								1
8	65-7093-7	. HINGE HALF, EXTERNAL POWER RECEPTACLE DOOR (ALTERED FROM AN257H4-750)								1
9	65-7093-9	. HINGE HALF, EXTERNAL POWER RECEPTACLE DOOR (ALTERED FROM AN257H4-250)								2
10	69-9030-2	. CHANNEL, EXTERNAL POWER DOOR HINGE SUPPORT.								1
11	69-9030-3	. ANGLE, EXTERNAL POWER DOOR HINGE BEAM								1
12	66-8955	. SPRING, EXTERNAL POWER DOOR TORSION								1
13	AN253-2-725	. PIN								1
14	AN253-2-225	. PIN								1
15	NAS514P632-5	. SCREW								8
16	NAS514P632-6	. SCREW								4
17	BACL10X1	. LATCH								3
18	65-7093-8	. SPOTWELD ASSY, EXTERNAL POWER RECEPTACLE DOOR . . .								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

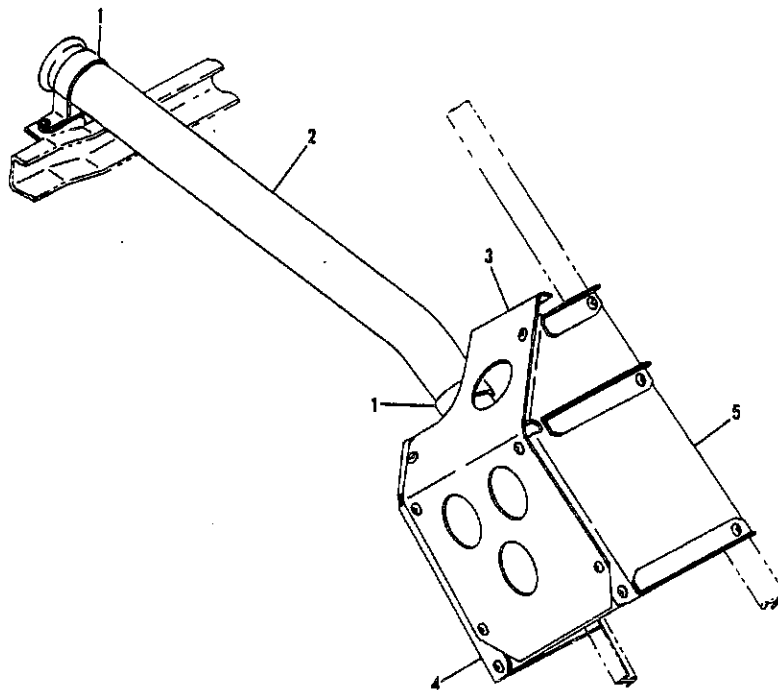
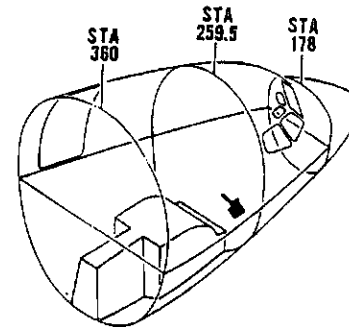


FIGURE 6. COVER INSTL. EXTERNAL POWER LEADS PROTECTIVE

MISSING ITEM NUMBERS ARE NOT APPLICABLE

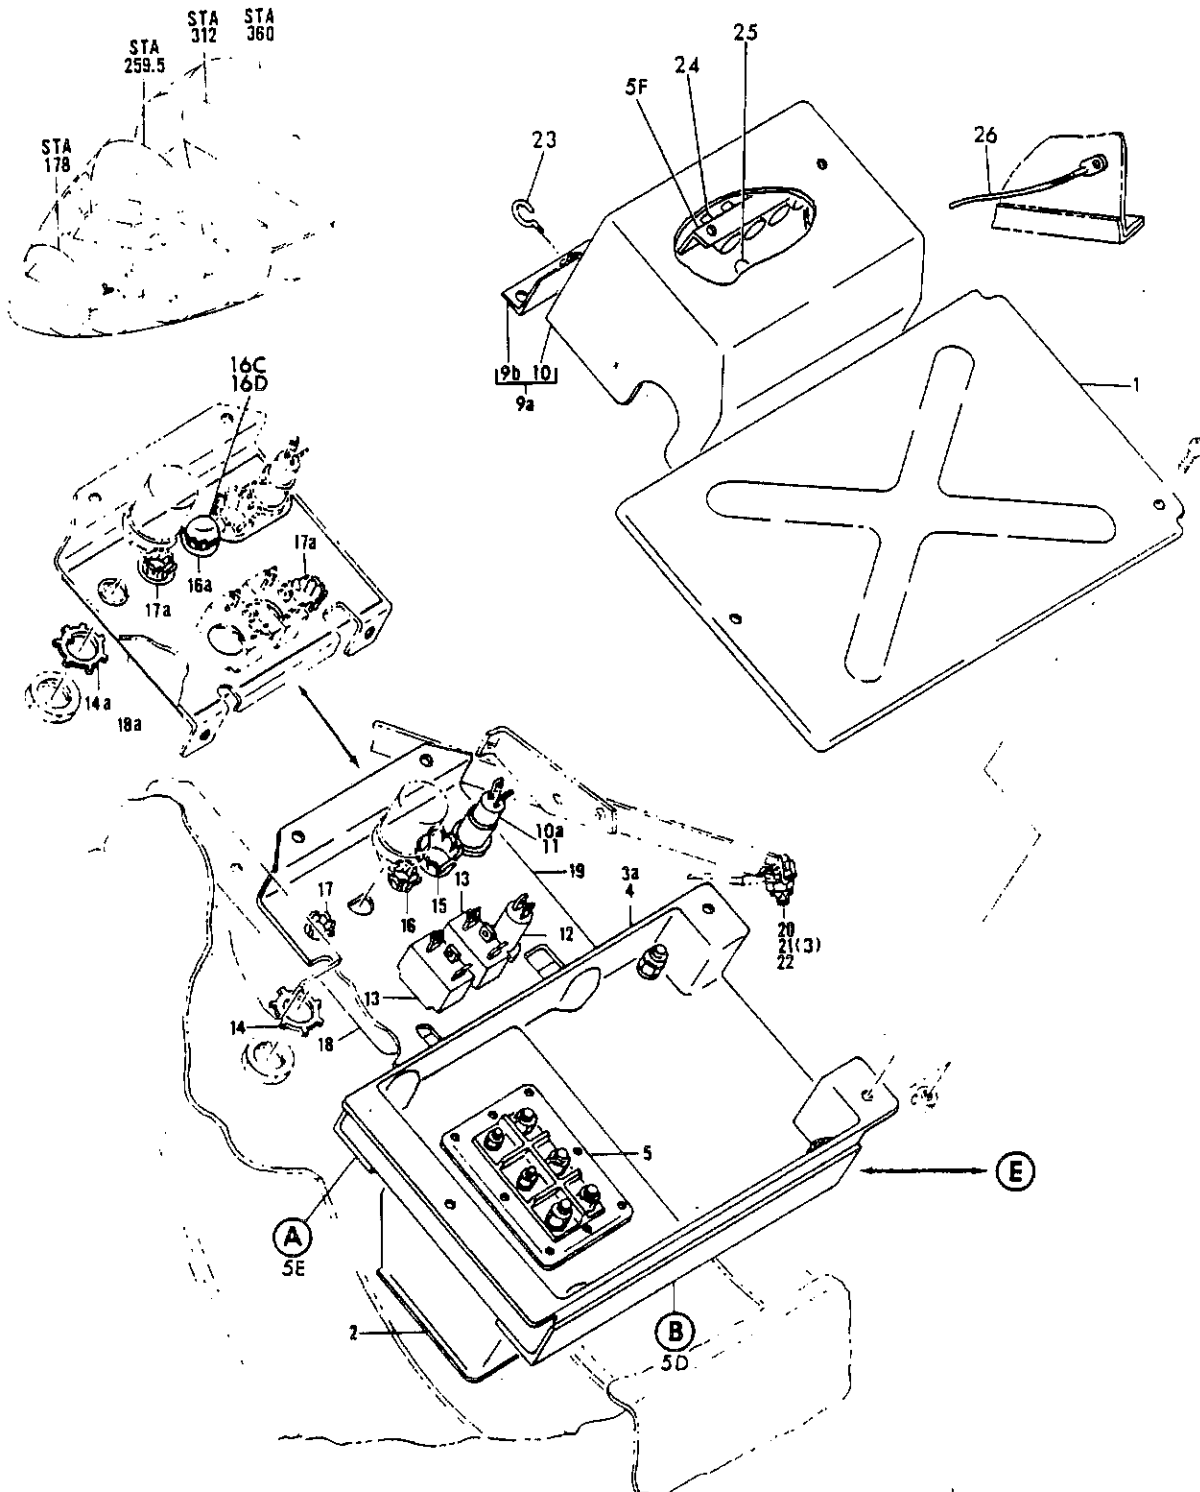


FIGURE 11. RECEPTACLE INSTL, EXTERNAL POWER (ELECTRICAL POWER ONLY) (SHEET 1)

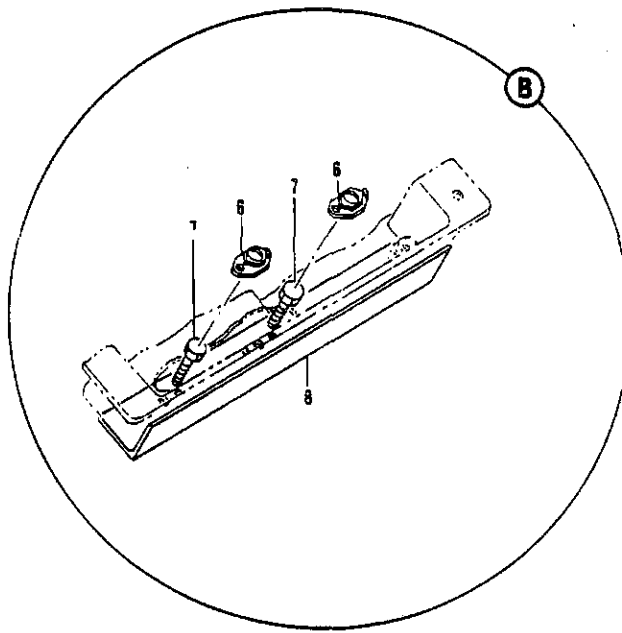
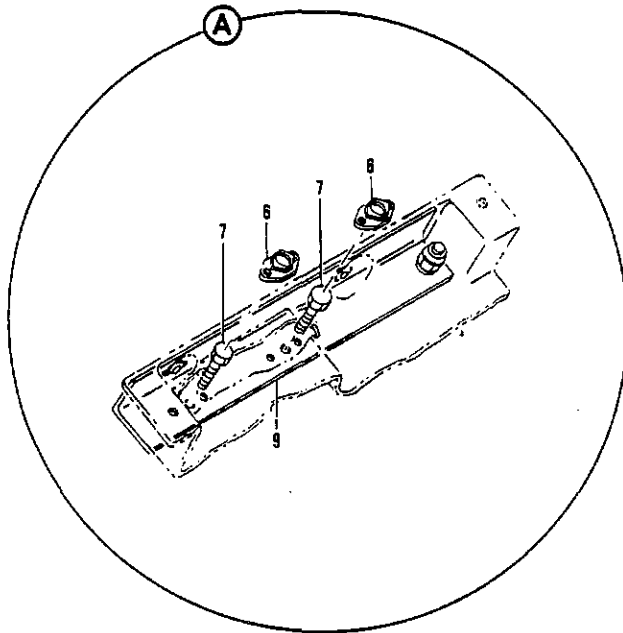


FIGURE 11. RECEPTACLE (INSTL. EXTERNAL POWER (ELECTRICAL POWER ONLY) (SHEET 2)

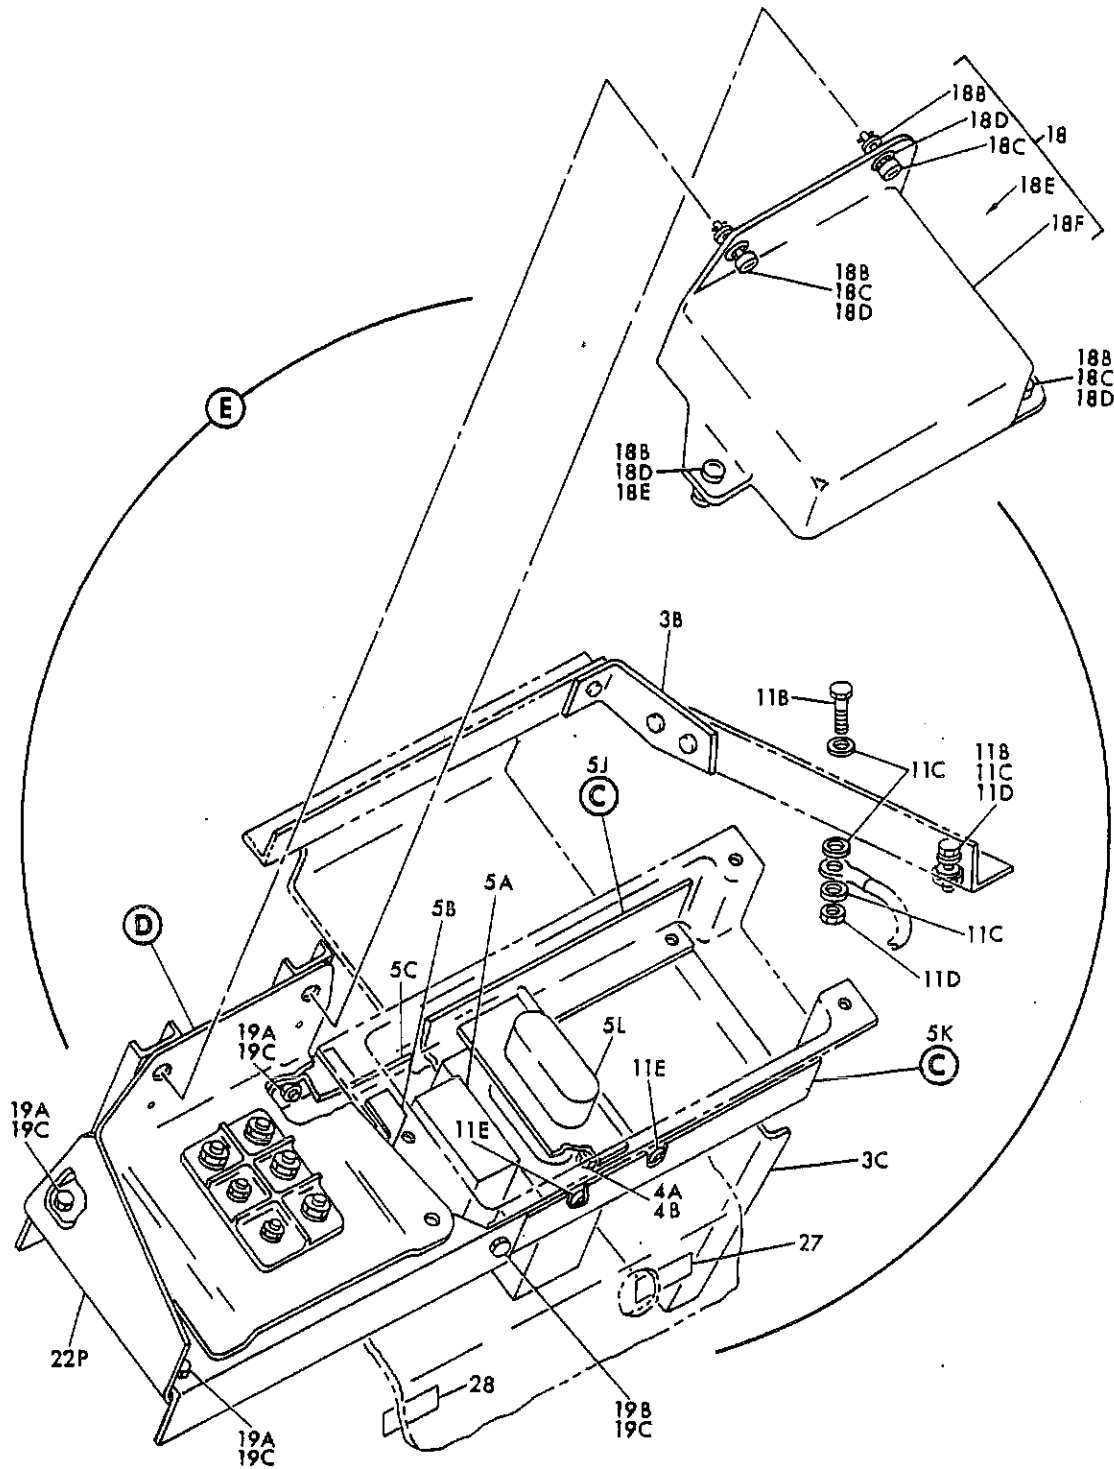


FIGURE 11. RECEPTACLE INSTL, EXTERNAL POWER (ELECTRICAL POWER ONLY) (SHEET 3)

MISSING ITEM NUMBERS ARE NOT APPLICABLE

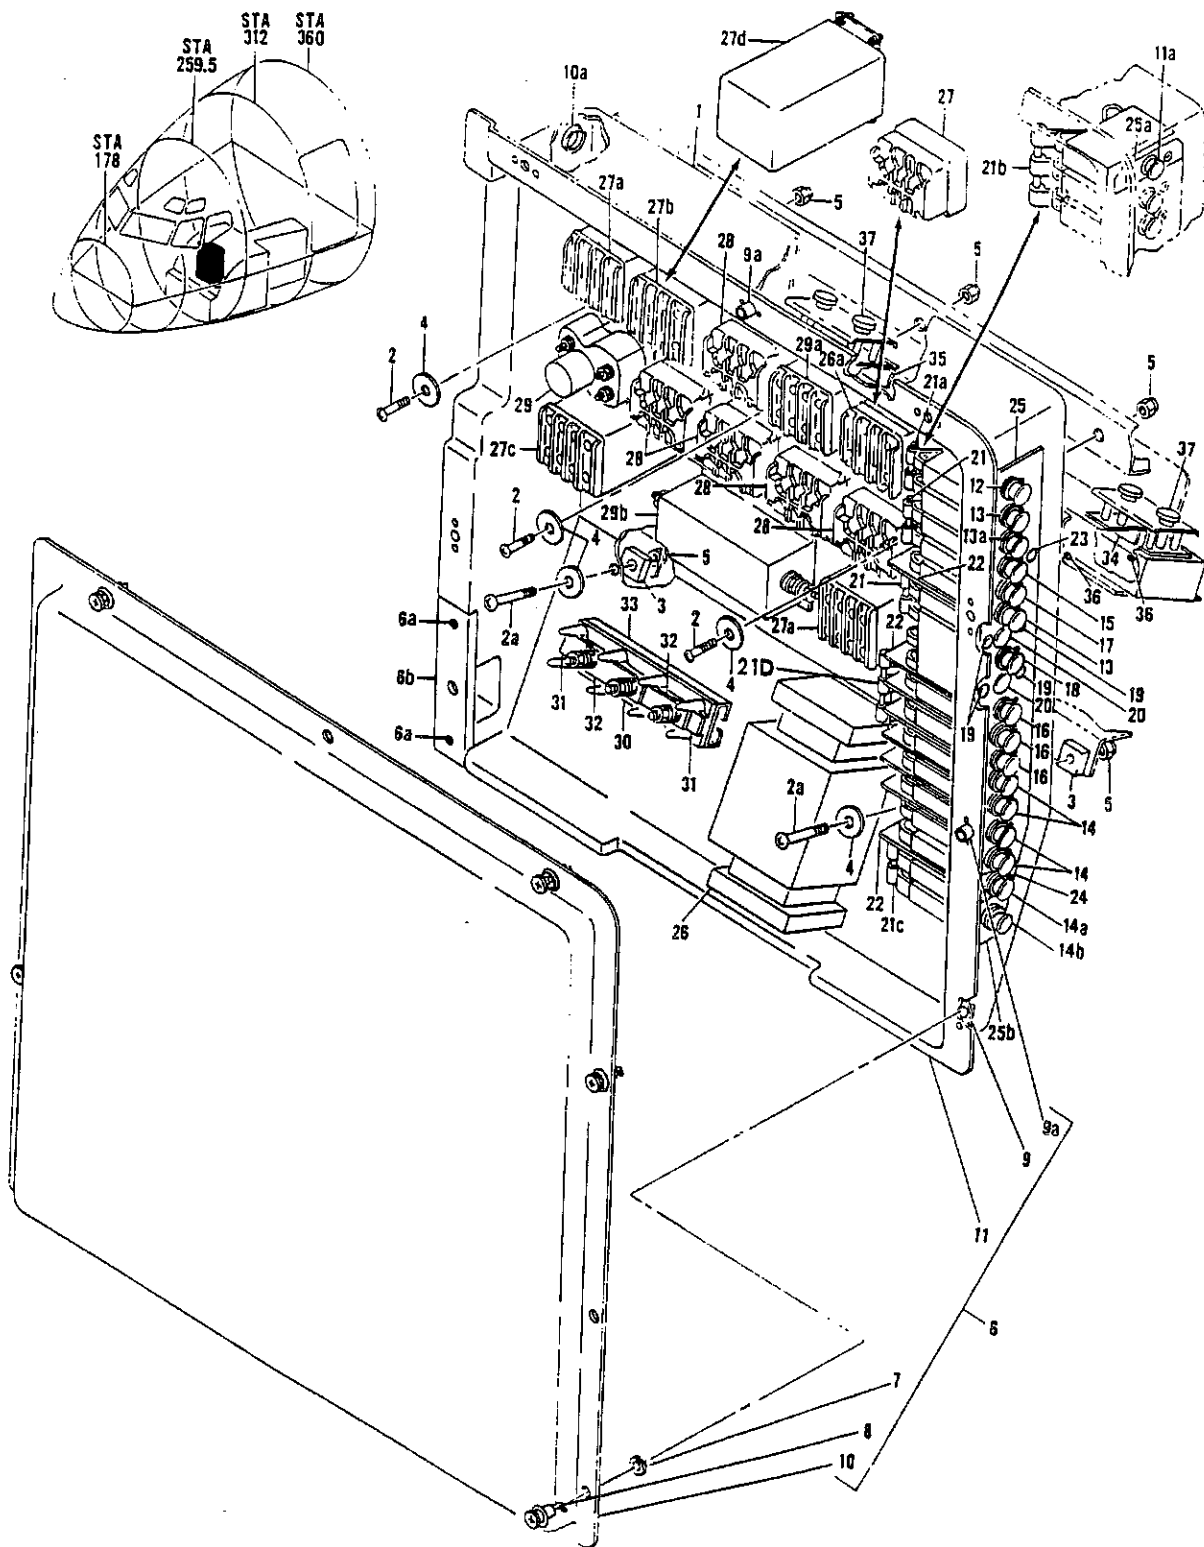


FIGURE 18. SHIELD INSTL. J9 GROUND POWER (ELECTRICAL POWER ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
18	65-3356	SHIELD INSTL, J9 GROUND POWER (ELECTRICAL POWER ONLY) . (SEE 24-3, FIG. 1A, ITEM 21, 24-3, FIG. 1B, ITEM 20 AND 24-3, FIG. 1C, ITEM 19)	5199	RF
1	65-3356-1	• SHIELD ASSY, J9 GROUND POWER.	5199	1
2	NAS603-8	• ATTACHING PARTS		
2A	NAS603-14	• SCREW	5199	3
3	65-3356-3	• SCREW	5199	2
4	AN970-3	• SPACER, J9 GROUND POWER SHIELD.	5199	2
5	NAS679A3W	• WASHER.	5199	5
		• NUT	5199	5
6	65-3354	• SHIELD ASSY, GROUND POWER	5199	1
6A	NAS514PB32-8	• SCREW	5199	2
6B	65-3354-4	• RETAINER, GROUND POWER SHIELD WIRE.	5199	1
7	BACW10X4	• WASHER.	5199	5
8	26S8-4	• STUD ASSY, (V71286)	5199	5
9	BACR11Y3A	• RECEPTACLE.	5199	5
9A	BACS18F50B	• SPACER.	5199	2
10	65-3354-2	• COVER, GROUND POWER SHIELD.	5199	1
10A	NAS557-8B	• GROMMET	5199	1
11	65-3354-1	• SHIELD, GROUND POWER.	5199	1
12	BACC18R50C	• CIRCUIT BREAKER	5199	1
		(OPTIONAL BACC18G50)		
12	BACC18G50	• CIRCUIT BREAKER	5199	1
		(OPTIONAL TO BACC18R50C)		
13	BACC18G5	• CIRCUIT BREAKER	5199	2
13A	BACC18G5	• CIRCUIT BREAKER	5199	2
14	BACC18G10	• CIRCUIT BREAKER	5199	4
15	BACC18G10	• CIRCUIT BREAKER	5199	1
16	BACC18G20	• CIRCUIT BREAKER	5199	3
17	BACC18G5	• CIRCUIT BREAKER	5199	1
20	BACP20B43	• PLUG.	5199	2
21	BACB29B7-2	• BUS ASSY, (ALTERED FROM BACB29-7-20)	5199	2
22	30-3078-1	• DIVIDER, MAIN AC POWER SHIELD PHASE	5199	8
25	BACM10M143-1ARR	• MARKER-ALUMINUM FOIL, MISCELLANEOUS	5199	1
26	6042H33	• RELAY, (V27193)	5199	1
		• ATTACHING PARTS		
	NAS603-6P	• SCREW	5199	4
27	10-3092	• RELAY, HERMETICALLY SEALED 4 PDT.	5199	1
28	10-3092	• RELAY, HERMETICALLY SEALED 4 PDT.	5199	5
29	MS24181D1	• RELAY	5199	1
		(OPTIONAL MS24181-1)		
29	MS24181-1	• RELAY	5199	1
		(OPTIONAL TO MS24181D1)		
		• ATTACHING PARTS		
	NAS602-6P	• SCREW	5199	14
30	MS27212-5-3	• TERMINAL BOARD ASSY	5199	1
		• ATTACHING PARTS		
	NAS601-26P	• SCREW	5199	4
	AN960D6L	• WASHER.	5199	4
	NAS679A06W	• NUT	5199	4
31	MS25227-9	• STRIP	5199	2
32	MS25227-10	• STRIP	5199	2
33	65-3356-4	• SUPPORT, J9 GROUND POWER SHIELD TERMINAL BLOCK.	5199	1
34	BACM10B20-21B	• MARKER-ALUMINUM FOIL, BALLAST	5199	1
35	BACM10B20-21C	• MARKER-ALUMINUM FOIL, BALLAST	5199	1
36	NAS603-7	• SCREW	5199	8
37	61-25-2	• BALLAST ASSY, 8W 2 LAMP DIMMING (V82255)	5199	2
		(OPTIONALS 563028 (V98571) 27882 (V88204) 4DBA8-2T (V82255))		
37	563028	• BALLAST ASSY, 8W 2 LAMP DIMMING (V98571)	5199	2
		(OPTIONAL TO 61-25-2 (V82255))		
37	27882	• BALLAST ASSY, 8W 2 LAMP DIMMING (V88204)	5199	2
		(OPTIONAL TO 61-25-2 (V82255))		
37	4DBA8-2T	• BALLAST ASSY, 8W 2 LAMP DIMMING (V82255)	5199	2
		(OPTIONAL TO 61-25-2 (V82255))		
		• FOR REFERENCE TO OTHER SHIELD DETAILS, SEE NHA.	5199	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

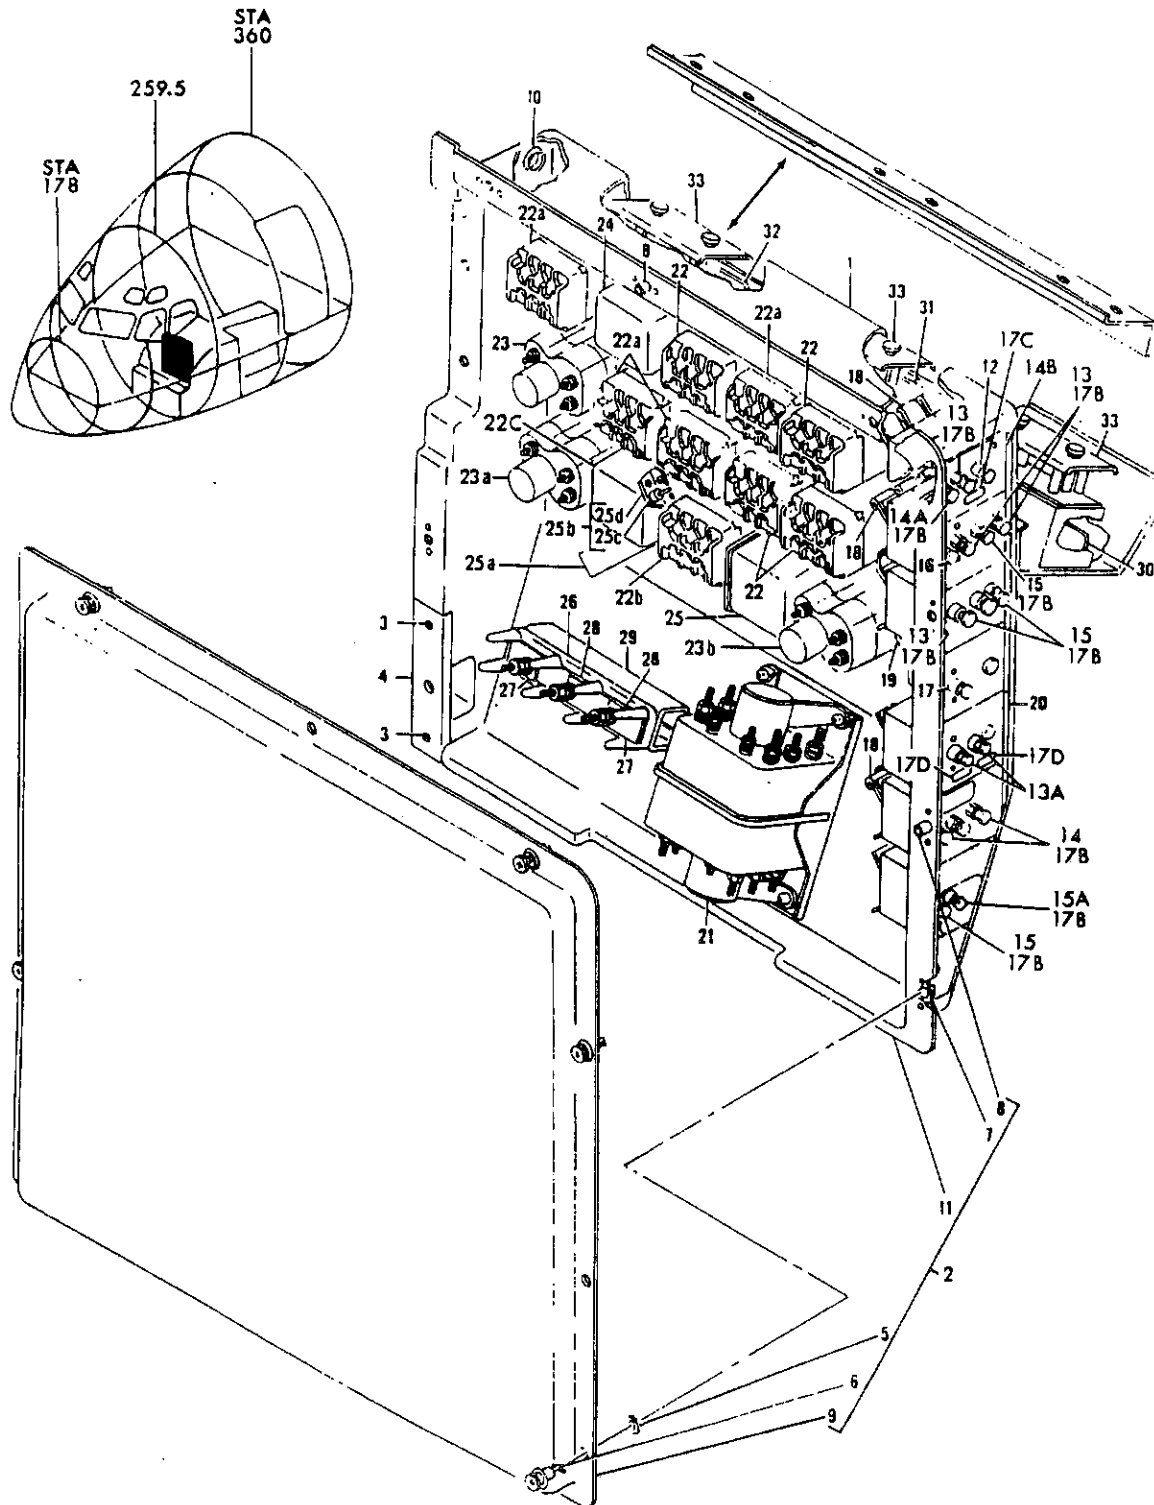


FIGURE 29. SHIELD INSTL, J9 GROUND POWER (ELECTRICAL POWER ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 29	65-3356	SHIELD INSTL, J9 GROUND POWER (ELECTRICAL POWER ONLY) . (SEE 24-3, FIG. 18, ITEM 20)	0150	RF
R 1	65-3356-1	. SHIELD ASSY, J9 GROUND POWER.	0150	1
R		ATTACHING PARTS		
R	NAS603-8	. SCREW	0150	3
R	NAS603-14	. SCREW	0150	2
R	65-3356-3	. SPACER, J9 GROUND POWER SHIELD.	0150	2
R	AN970-3	. WASHER.	0150	5
R	NAS679A3W	. NUT	0150	5
R	2	*-----*		
R	3	. . SHIELD ASSY, GROUND POWER	0150	1
R	4	. . . SCREW	0150	2
R	5	. . . RETAINER, GROUND POWER SHIELD WIRE.	0150	1
R	6	. . . WASHER.	0150	5
R	7	. . . STUD ASSY, (V71286)	0150	5
R	8	. . . RECEPTACLE.	0150	5
R	9	. . . SPACER.	0150	2
R	10	. . . COVER, GROUND POWER SHIELD.	0150	1
R	11	. . . GROMMET	0150	1
R	12	. . SHIELD, GROUND POWER.	0150	1
R	13	. . CIRCUIT BREAKER	0150	1
R	13	. . CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	4
R	13	. . CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391).	0150	4
R	13A	(OPTIONAL 492-205-102 (V79405))		
R	13A	. . CIRCUIT BREAKER, (ADDED BY SB 3391).	0150	4
R	13A	(OPTIONAL TO 700-013-5 (V76374))		
R	13A	. . CIRCUIT BREAKER, (ADDED BY SB 2719 AND DELETED BY .	0150	2
R	13A	SB 3391)		
R	13A	. . CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391).	0150	2
R	13A	(OPTIONAL 492-507-102 (V79405))		
R	13A	. . CIRCUIT BREAKER, (ADDED BY SB 3391).	0150	2
R	13A	(OPTIONAL TO 700-013-7 (V76374))		
R	14	. . CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	1
R	14	. . CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391).	0150	1
R	14	(OPTIONAL 492-220-102 (V79405))		
R	14	. . CIRCUIT BREAKER, (ADDED BY SB 3391).	0150	1
R	14A	(OPTIONAL TO 700-013-20 (V76374))		
R	14A	. . CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	1
R	14A	. . CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391).	0150	1
R	14A	(OPTIONAL 492-220-102 (V79405))		
R	14A	. . CIRCUIT BREAKER, (ADDED BY SB 3391).	0150	1
R	14A	(OPTIONAL TO 700-013-20 (V76374))		
R	15	. . CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	5
R	15	. . CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391).	0150	5
R	15	(OPTIONAL 492-210-102 (V79405))		
R	15	. . CIRCUIT BREAKER, (ADDED BY SB 3391).	0150	5
R	15	(OPTIONAL TO 700-013-10 (V76374))		
R	15A	. . CIRCUIT BREAKER, (DELETED BY SB 3391)	0150	1
R	15A	. . CIRCUIT BREAKER, (V76374) (ADDED BY SB 3391).	0150	1
R	15A	(OPTIONAL 492-210-102 (V79405))		
R	15A	. . CIRCUIT BREAKER, (ADDED BY SB 3391).	0150	1
R	15A	(OPTIONAL TO 700-013-10 (V76374))		
R	16	. . CIRCUIT BREAKER	0150	1
R	17	. . CIRCUIT BREAKER, (AFFECTED BY AD 69-20-6)	0103	1
R	17	. . CIRCUIT BREAKER, (AFFECTED BY AD 69-20-6) (DELETED .	0450	1
R	17	BY SB 2897)		
R	17	. . CIRCUIT BREAKER, (ADDED BY SB 2897)	0450	1
R		ATTACHING PARTS		
R	NAS601-5	. . SCREW	0150	4
R	17A	*-----*		
R	17B	. . MARKER, VAC CLEANER OUTLET ALUMINUM FOIL.	0150	1
R	17C	. . RING, SNAP (ADDED BY SB 2693)	0150	AR
R	17D	. . MARKER, BAT BUS ALUMINUM FOIL (ADDED BY SB 2719).	0150	1
R	17D	. . MARKER, EMER EXIT LT CONT ALUMINUM FOIL (ADDED BY .	0150	2
R	18	SB 2719)		
R	19	. . BUS ASSY, (ALTERED FROM BACB2987-20).	0150	3
R	20	. . BUS, CIRCUIT BREAKER.	0150	1
R	21	. . MARKER, MISCELLANEOUS ALUMINUM FOIL	0150	1
R	21	. . RELAY, (V15605)	0150	1
R		ATTACHING PARTS		
R	NAS603-6	. . SCREW	0150	4
R	22	*-----*		
R	22B	. . RELAY, HERMETICALLY SEALED 4 PDT.	0150	4
R	22B	. . RELAY, HERMETICALLY SEALED 4 PDT.	0150	1


MISSING ITEM NUMBERS ARE NOT APPLICABLE




PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
29	22C	10-3092	. . RELAY, HERMETICALLY SEALED 4 PDT (ADDED BY RAF MOD 7211.019-134)	0203 1
R	23	MS24181D1	. . RELAY, (OPTIONAL MS24181-1)	0150 1
R	23B	MS24181D1	. . RELAY (OPTIONAL MS24181-1)	0150 1
R	23B	MS24181-1	. . RELAY (OPTIONAL TO MS24181D1)	0150 1
R	24	10-60433-1	. . RELAY, AC OVERVOLTAGE PROTECTIVE.	0150 1
R		NAS602-6P	ATTACHING PARTS	
R	25	G58696	. . SCREW	0150 18
R		NAS603-6P	-----*	
R		BACN10FX1	. . RELAY, (V73949)	0150 1
R	25A	BACM10820-20A	ATTACHING PARTS	
R	25B	66-9079-9	. . SCREW	0150 2
R		NAS602-8P	. . NUT	0150 2
R	25C	1N1203A	-----*	
R	25D	66-9079-2	. . RECTIFIER, (V09214)	0150 1
R	26	MS27212-5-3	. . BRACKET	0150 1
R		NAS601-26P	. . TERMINAL BOARD ASSY	0150 1
R		AN960D6L	ATTACHING PARTS	
R		NAS679A06W	. . SCREW	0150 4
R	27	MS25227-9	. . WASHER	0150 4
R	28	MS25227-10	. . NUT	0150 4
R	29	65-3336-4	-----*	
R		BAC27DEL431	. . STRIP	0150 2
			. . STRIP	0150 2
			. . SUPPORT, J9 GROUND POWER SHIELD TERMINAL BLOCK.	0150 1
			. . MARKER-ALUMINUM FOIL, AMPERE RATING (ADDED BY SB. 2693)	0150 1
			. . FOR REFERENCE TO OTHER SHIELD DETAILS, SEE NHA.	0150

MISSING ITEM NUMBERS ARE NOT APPLICABLE

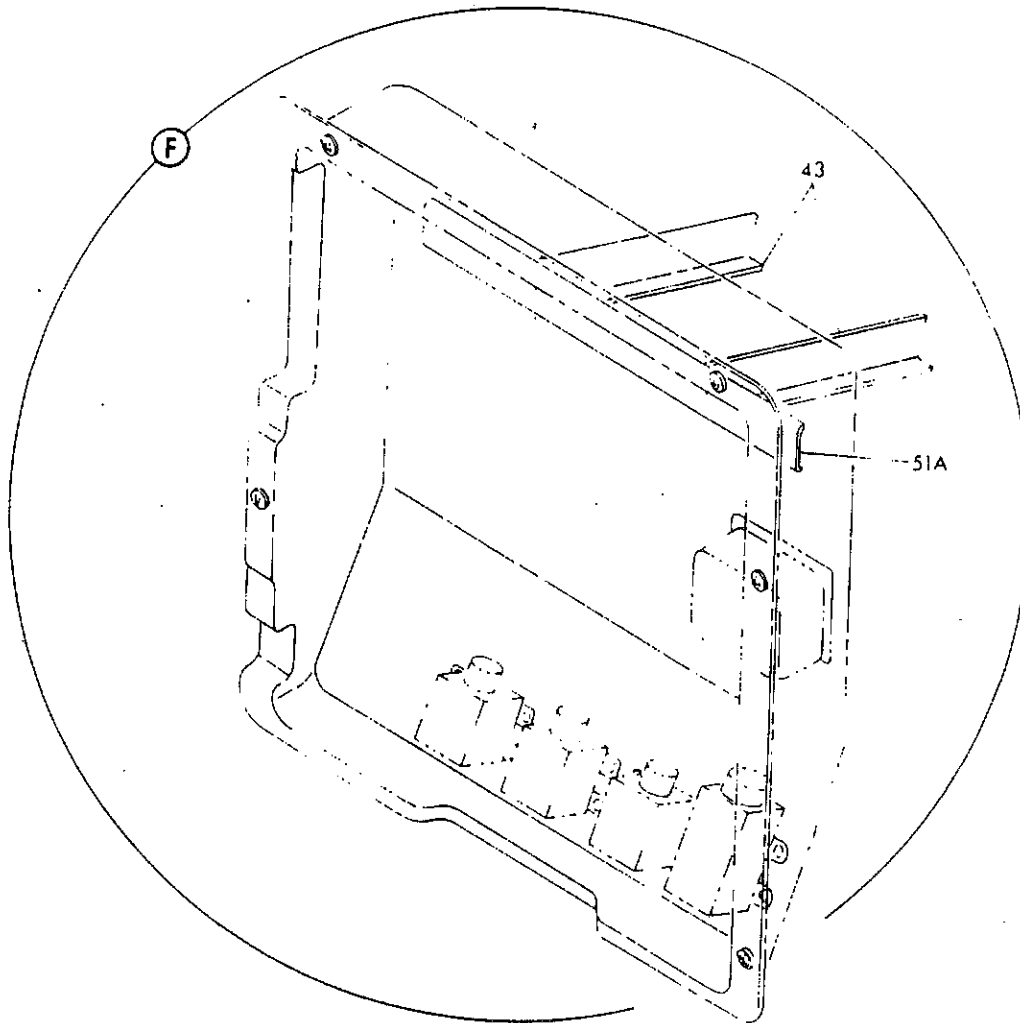

SHIELD INSTL J) GROUND POWER
FIGURE 35. RELAY BOX INSTL, APU-EXTERIOR BATTERY CHARGER (SHEET 3)

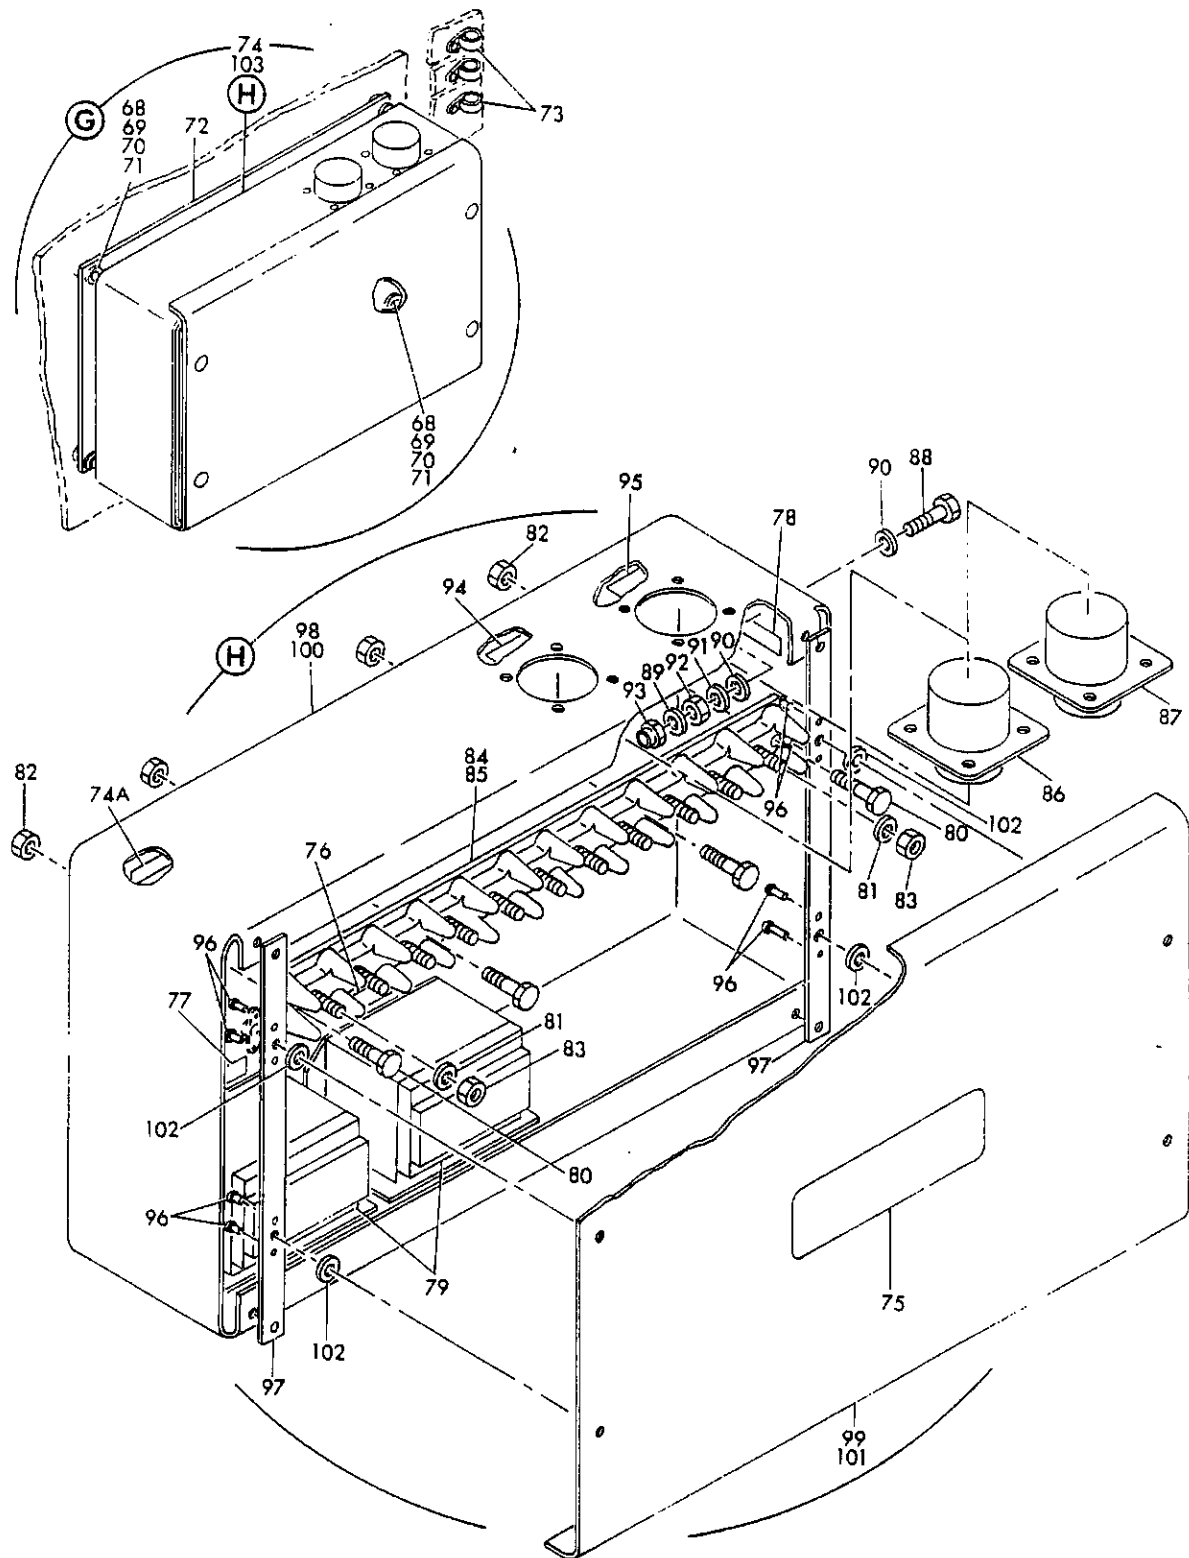

SHIELD INSTL-J9 GROUND POWER RELAY
FIGURE 35. BOX INSTL, APU -EXTERIOR BATTERY CHARGER (SHEET 4)

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 35		SHIELD INSTL, J9 GROUND POWER	5199	
R		RELAY BOX INSTL, APU-EXT BATTERY CHARGER.	5199	
R	65-58619-1	SHIELD INSTL, J9 GROUND POWER (VARIABLE	5199	RF
R		DWG; 65-58619-5004) (SEE 24-3, FIG. 1A, ITEM 21 AND		
R		24-3, FIG. 1C, ITEM 19)		
R	1 65-58619-12	. SHIELD ASSY, (ELECTRICAL POWER ONLY).	5199	1
R	2 BACM10S35U	. . MARKER-ALUMINUM FOIL, SYMBOLS	5199	1
R	4A BAC27CEE325	. . MARKER-ALUMINUM FOIL, R59	5199	1
R	5 BAC27CEE160	. . MARKER-ALUMINUM FOIL, RR31.	5199	1
R	6 BAC27CEE161	. . MARKER-ALUMINUM FOIL, RR32.	5199	1
R	6A BAC27CEE159	. . MARKER-ALUMINUM FOIL, R429.	5199	1
R	7 BAC27CEE162	. . MARKER-ALUMINUM FOIL, RR422.	5199	1
R	8 BAC27CEE163	. . MARKER-ALUMINUM FOIL, RR423.	5199	1
R	9A BAC27CEE164	. . MARKER-ALUMINUM FOIL T201	5199	1
R	10 BAC27CEE150	. . MARKER-ALUMINUM FOIL.	5199	1
R	10A BAC27CEE601	. . MARKER-ALUMINUM FOIL, R650.	5199	1
R	11 BAC27CEE153	. . MARKER-ALUMINUM FOIL, R37	5199	1
R	12 BAC27CEE154	. . MARKER-ALUMINUM FOIL, R55	5199	1
R	13 BAC27CEE155	. . MARKER-ALUMINUM FOIL, R56	5199	1
R	15C BACM10N00-25	. . MARKER-ALUMINUM FOIL, 1	5199	1
R	16 BACP20B6	. . PLUG.	5199	AR
R	16A BACP20B43	. . PLUG.	5199	AR
R	17 BACC18R78	. . CIRCUIT BREAKER	5199	1
R	18 BACB29B7-4	. . BUS ASSY, (ALTERED FROM BACB29B7-20).	5199	1
R	18B BACB29B7-3	. . BUS ASSY, (ALTERED FROM BACB29B7-20).	5199	1
R	20 63-2597	. . BUS, CIRCUIT BREAKER.	5199	1
R	23 63-10133	. . JUMPER.	5199	2
		ATTACHING PARTS		
R	NAS602-6P	. . SCREW	5199	2
R	AN960D8L	. . WASHER.	5199	2
R	NAS679A08W	. . NUT	5199	2
		-----*		
R	24A MS25227-9A	. . STRIP	5199	2
R	25C MS27212-5-3	. . TERMINAL BOARD ASSY	5199	1
		ATTACHING PARTS		
R	NAS601-8P	. . SCREW	5199	2
R	AN960DL	. . WASHER.	5199	2
R	NAS679A06W	. . NUT	5199	2
		-----*		
R	25D MS20341-616S	. . NUT	5199	3
R	25E AN960-616L	. . WASHER.	5199	3
R	26 10-60450-1	. . RELAY	5199	3
R	27 10-60450-1	. . RELAY	5199	1
		ATTACHING PARTS		
R	NAS679A06W	. . NUT	5199	21
		-----*		
R	28 10-60433-1	. . RELAY	5199	1
		ATTACHING PARTS		
R	BACS12CB08-6	. . SCREW	5199	4
		-----*		
R	30B MS24181D1	. . RELAY	5199	1
R	31 MS24181D1	. . RELAY	5199	2
		ATTACHING PARTS		
R	NAS603-6P	. . SCREW	5199	6
		-----*		
R	32 9124-8073	. . RELAY, (V35344)	5199	2
R		(OPTIONAL 6042H21 (V27193))		
R	32 6042H21	. . RELAY, (V27193)	5199	2
R		(OPTIONAL TO 9124-8073 (V35344))		
		ATTACHING PARTS		
R	NAS603-6P	. . SCREW	5199	8
		-----*		
R	33 6042H33	. . RELAY, (V27193)	5199	1
		ATTACHING PARTS		
R	NAS603-6P	. . SCREW	5199	4
		-----*		
R	35 BACC18R50C	. . CIRCUIT BREAKER	5199	1
		ATTACHING PARTS		
R	NAS601-5P	. . SCREW	5199	2
		-----*		
R	36 BACC18R15B	. . CIRCUIT BREAKER	5199	2
R	36A BACC18R7B	. . CIRCUIT BREAKER	5199	1
R	37 BACC18R3A	. . CIRCUIT BREAKER	5199	1
R		(OPTIONAL BACC18U3)		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

BOEING *Intercontinental*
PARTS CATALOG


	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	35	37	BACC18U3	.	.	CIRCUIT BREAKER	.	.	.	5199	1
R				.	.	(OPTIONAL TO BACC18R3A)	.	.	.		
R		37A	BACC18R15B	.	.	CIRCUIT BREAKER	.	.	.	5199	1
R		38	BACC18R10B	.	.	CIRCUIT BREAKER	.	.	.	5199	1
R		38A	BACC18R10B	.	.	CIRCUIT BREAKER	.	.	.	5199	1
R		38B	BACC18R10B	.	.	CIRCUIT BREAKER	.	.	.	5199	1
R		38C	BACC18R10B	.	.	CIRCUIT BREAKER	.	.	.	5199	1
R		39	BACC18R7B	.	.	CIRCUIT BREAKER	.	.	.	5199	1
R			NAS601-5P	.	.	ATTACHING PARTS SCREW	.	.	.	5199	2
R		40A	BACC18R5B	.	.	CIRCUIT BREAKER	.	.	.	5199	1
R		41	BACC18R20B	.	.	CIRCUIT BREAKER	.	.	.	5199	1
R		41A	BACC18R10B	.	.	CIRCUIT BREAKER	.	.	.	5199	1
R		42	BACC18R2A	.	.	CIRCUIT BREAKER	.	.	.	5199	1
R		42D	BACJ40A20-2	.	.	JUMPER	.	.	.	5199	1
R				.	.	ATTACHING PARTS SCREW	.	.	.	5199	1
R		42E	BACS12CB3-10	.	.	WASHER	.	.	.	5199	2
R		42F	AN960D10L	.	.	WASHER	.	.	.	5199	1
R		42G	MS35338-43	.	.	NUT	.	.	.	5199	1
R		42H	NAS679A3W	.	.		.	.	.		
R		43	65-3354-23	.	.	BRACKET ASSY.	.	.	.	5199	1
R			NAS604-8P	.	.	ATTACHING PARTS SCREW	.	.	.	5199	7
R		44	BAC27CEE118	.	.	DECAL, J9-A	.	.	.	5199	1
R		45	BAC27CEE119	.	.	DECAL, J9-B	.	.	.	5199	1
R		46	BAC27CEE120	.	.	DECAL, J9-C	.	.	.	5199	1
R		47	BAC27CEE121	.	.	DECAL, J9-D	.	.	.	5199	1
R		48	BAC27CEE122	.	.	DECAL, J9-E	.	.	.	5199	1
R		49	BAC27CEE123	.	.	DECAL, J9-F	.	.	.	5199	1
R		50	BAC27CEE124	.	.	DECAL, J9-G	.	.	.	5199	1
R		51	BACG20ZB750	.	.	GROMMET	.	.	.	5199	2
R		51A	65-3354-24	.	.	BRACKET	.	.	.	5199	1
R		52	65-3354-18	.	.	SHIELD ASSY	.	.	.	5199	1
R				.	.	ATTACHING PARTS SCREW	.	.	.	5199	2
R		53	NAS603-14P	.	.	SCREW	.	.	.	5199	2
R		54	NAS604-8P	.	.	SCREW	.	.	.	5199	2
R		55	65-3356-3	.	.	SPACER	.	.	.	5199	2
R		56	AN970-3	.	.	WASHER	.	.	.	5199	2
R		57	NAS679A3W	.	.	NUT	.	.	.	5199	2
R		58	65-3354-20	.	.	SUPPORT ASSY.	.	.	.	5199	1
R			NAS603-6	.	.	ATTACHING PARTS SCREW	.	.	.	5199	6
R		59	65-3354-4	.	.	RETAINER	.	.	.	5199	1
R		60	26S8-4	.	.	STUD ASSY, (V71286)	.	.	.	5199	5
R		61	BACR11Y3A	.	.	RECEPTACLE	.	.	.	5199	5
R		62	65-3354-2	.	.	COVER	.	.	.	5199	1
R		63	BACG20ZB750	.	.	GROMMET	.	.	.	5199	1
R		63A	NAS557-88	.	.	GROMMET	.	.	.	5199	1
R		64	BAC27CEE125	.	.	DECAL, J9-H	.	.	.	5199	1
R		65	BAC27CEE126	.	.	DECAL, J9-J	.	.	.	5199	1
R		66	65-3354-19	.	.	SHIELD	.	.	.	5199	1
				.	.	REQUIRED PLACARDS, (SEE 11-2, FIG. 128A).	.	.	.	5199	

MISSING ITEM NUMBERS ARE NOT APPLICABLE


BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 12
BATTERY EQUIPMENT

BOEING
707
PARTS CATALOG (MAINTENANCE)

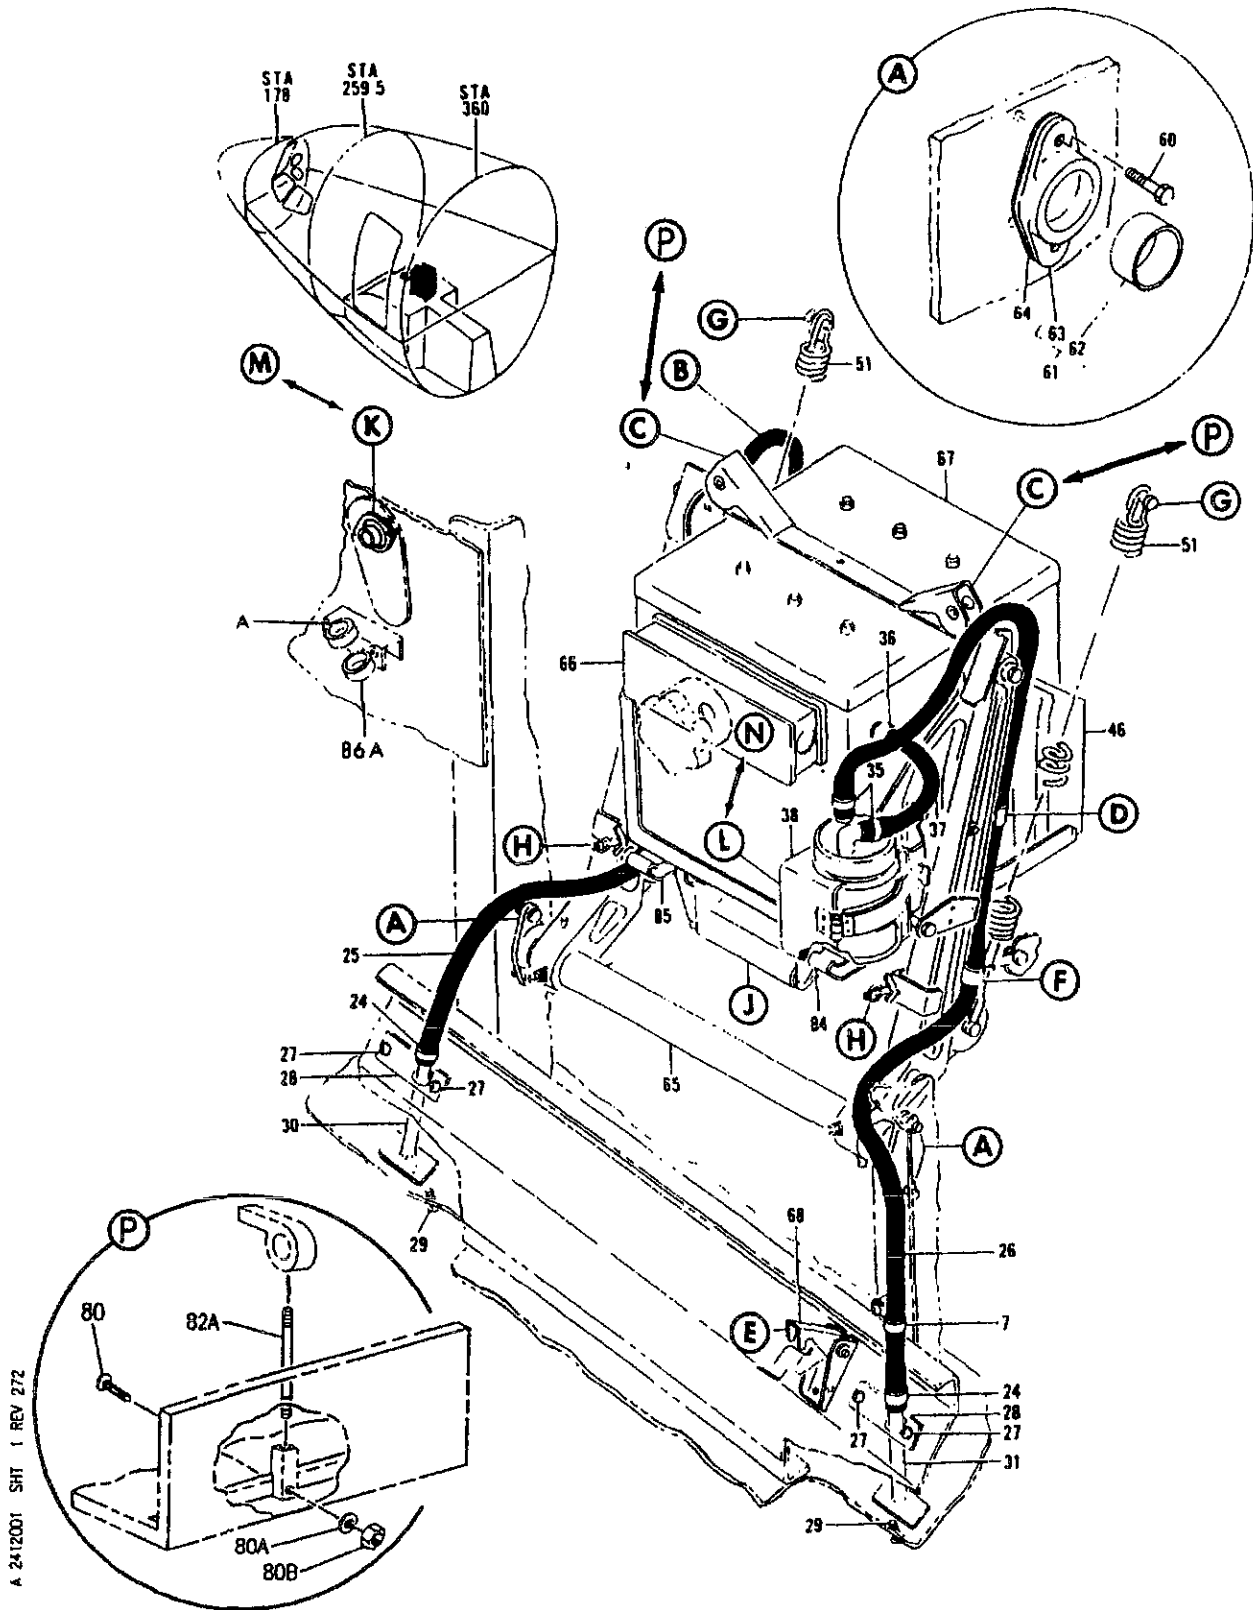


BATTERY INSTL, NOSE WHEEL WELL ELECTRIC STORAGE
WIRE INSTL, NOSE WHEEL WELL BATTERY
FIGURE 1. DOUBLER INSTL, WIRE ROUTING NOSE WHEEL WELL BATTERY (SHEET 1)


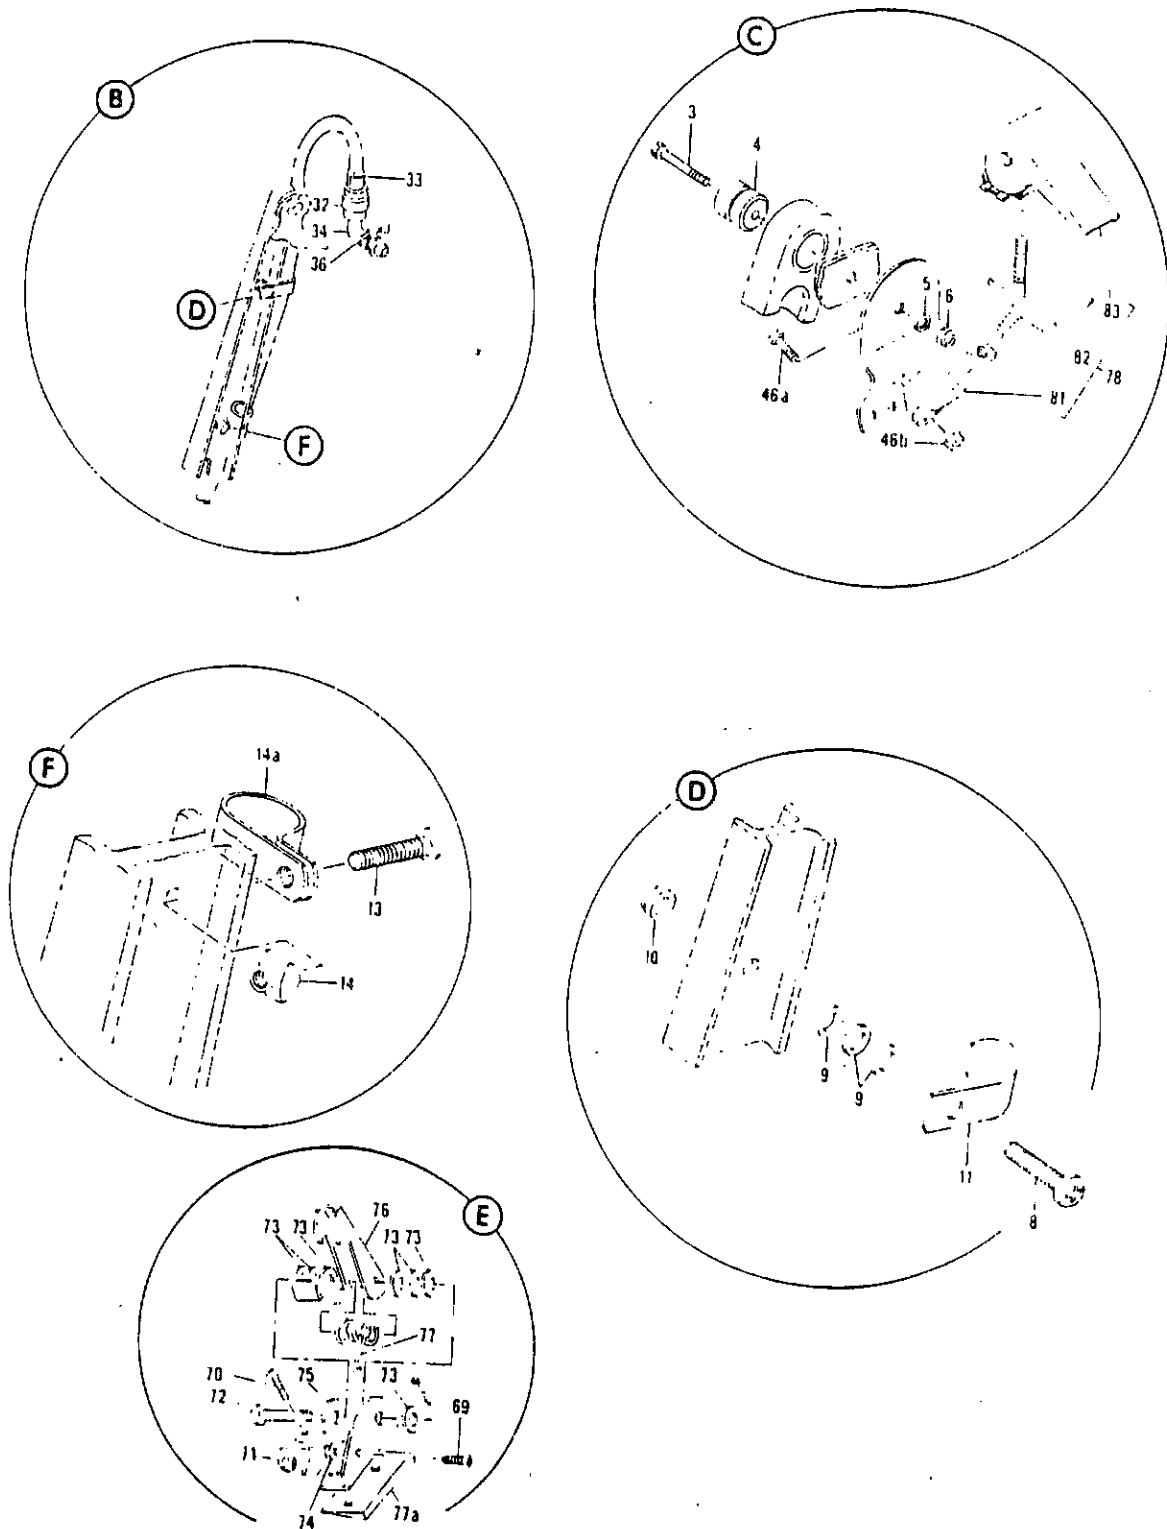


BATTERY INSTL, NOSE WHEEL WELL ELECTRIC STORAGE
WIRE INSTL, NOSE WHEEL WELL BATTERY
FIGURE 1. DOUBLER INSTL, WIRE ROUTING NOSE WHEEL WELL BATTERY (SHEET 2)

BOEING **707** *Intercontinental*
PARTS CATALOG

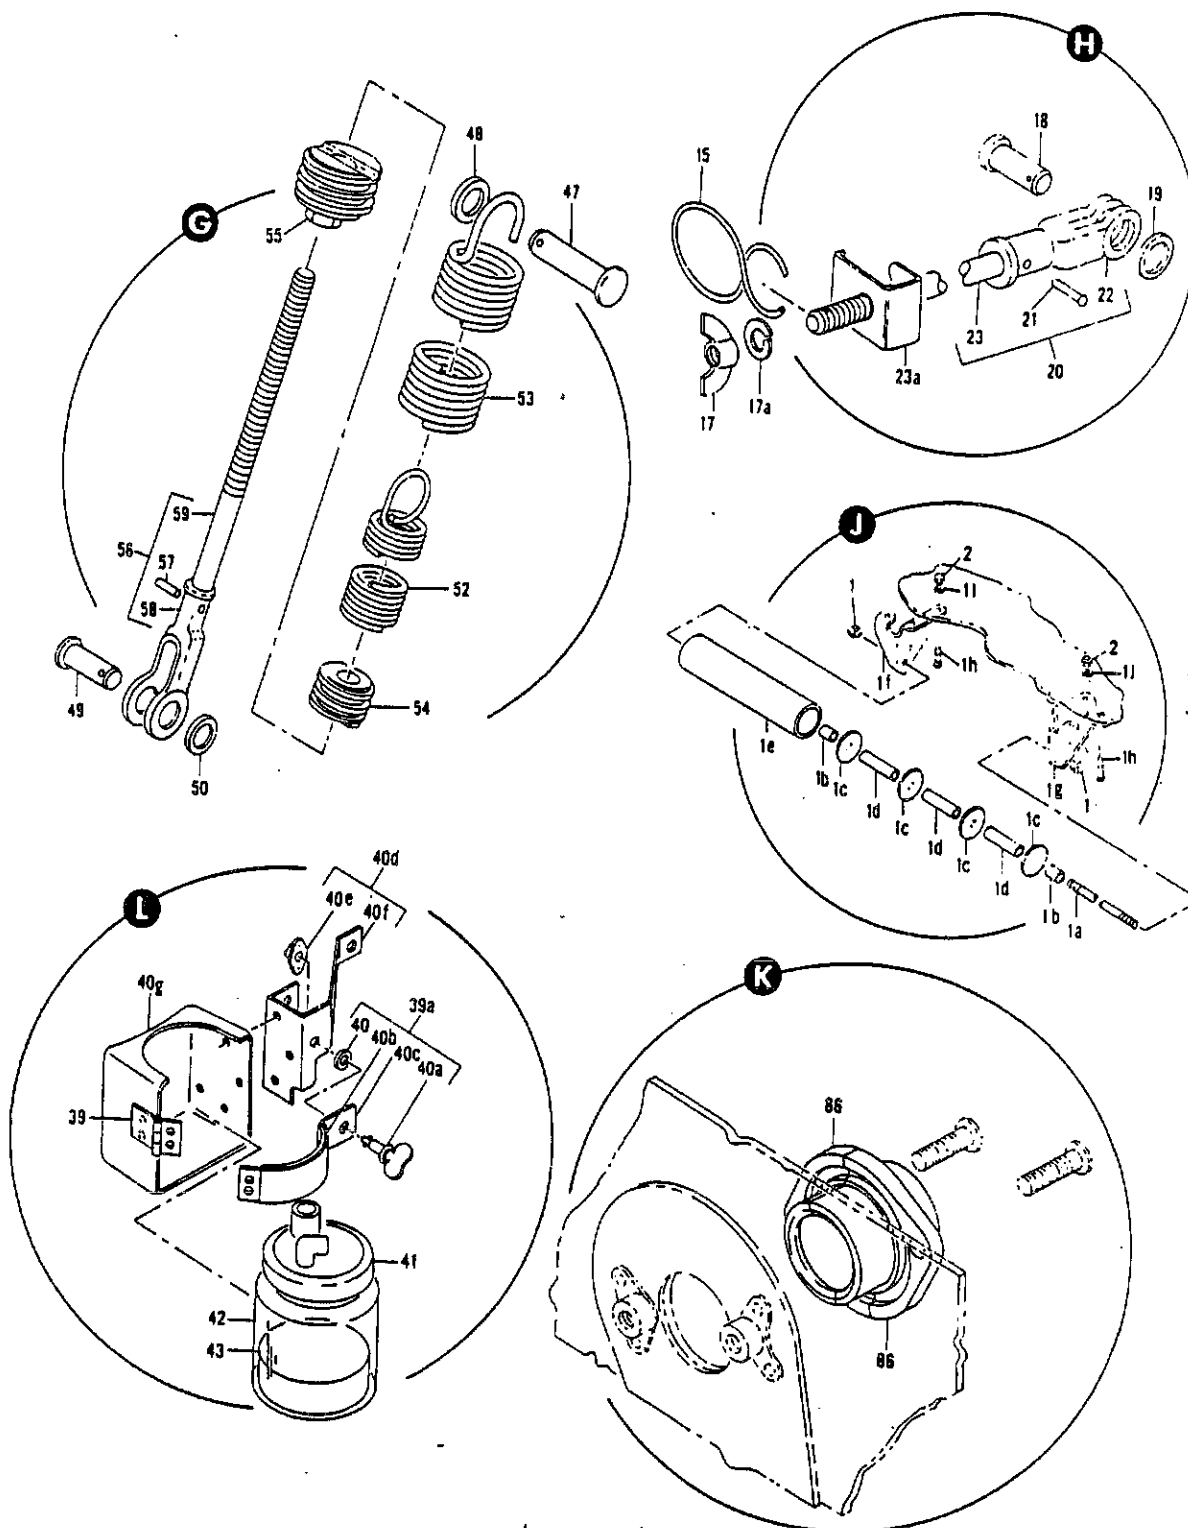

WIRE INSTL, NOSE WHEEL WELL BATTERY (SHEET 3)
FIGURE 1. BATTERY INSTL, NOSE WHEEL ELECTRIC STORAGE

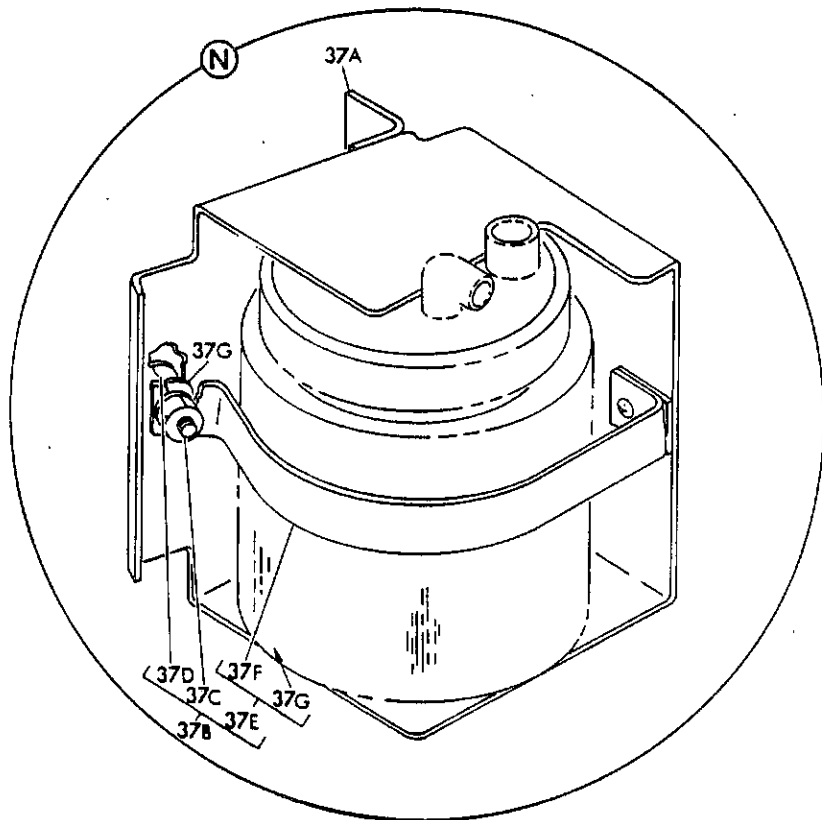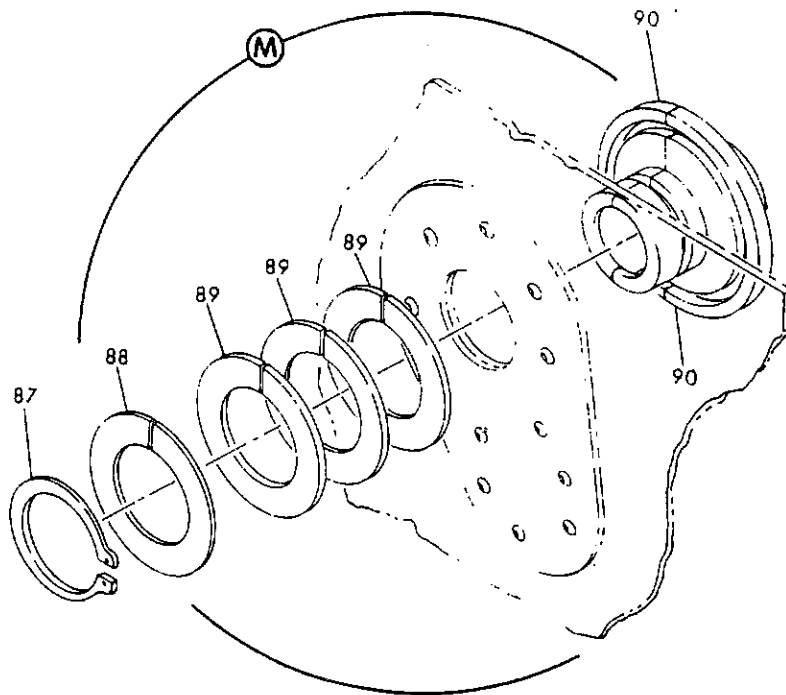

BATTERY INSTL, NOSE WHEEL WELL ELECTRIC STORAGE
WIRE INSTL, NOSE WHEEL WELL BATTERY
FIGURE 1. DOUBLER INSTL, WIRE ROUTING NOSE WHEEL WELL BATTERY (SHEET 4)

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
1	65-6468	BATTERY INSTL, NOSE WHEEL WELL ELECTRIC STORAGE WIRE INSTL, NOSE WHEEL WELL BATTERY BATTERY INSTL, NOSE WHEEL WELL ELECTRIC STORAGE (SEE 24-3, FIG. 1A, ITEM 54, 24-3, FIG. 1B, ITEM 49 AND 24-3, FIG. 1C, ITEM 45)		RF
1	NAS679A3W	. . . NUT		2
1A	63-2612	. . . SHAFT, HANDLE RETRACTING BATTERY.		1
1B	NAS43-3-16	. . . SPACER.		2
1C	AN970-3	. . . WASHER.		4
1D	NAS43-3-87	. . . SPACER.		3
1E	65-6468-2	. . . HANDLE, NOSE WHEEL WELL ELECTRIC STORAGE RETRACTING BATTERY		1
1F	69-8849-3	. . . BRACKET, RETRACTING BATTERY HANDLE.		1
1G	69-8849-4	. . . BRACKET, RETRACTING BATTERY HANDLE. ATTACHING PARTS		1
1H	NAS603-5	. . . SCREW		6
1J	AN960PD10L	. . . WASHER.		6
2	NAS679A3W	. . . NUT		6
3	AN3C13A	. . . BOLT.		2
4	NAS72-3E012	. . . BUSHING		2
5	BACW10P5C	. . . WASHER.		2
6	NAS679A3W	. . . NUT		2
7	AN742D10	. . . CLAMP ATTACHING PARTS		1
	NAS603-24	. . . SCREW		1
	NAS43DD3-48	. . . SPACER.		1
	BACN10EN3E	. . . NUT		1
8	NAS603-10	. . . SCREW		2
9	AN960-10	. . . WASHER.		6
10	NAS679A3W	. . . NUT		2
11	63-2675	. . . CLIP, BATTERY VENT HOSE		2
13	NAS603-18	. . . SCREW		2
14	BACN10CP3L	. . . NUT		2
14A	AN742D10	. . . CLAMP		2
15	BACC19B0	. . . CHAIN HOOK.		2
17	AN350-4	. . . NUT		2
17A	AN935-416	. . . WASHER.		2
18	AN394-13	. . . PIN		2
19	AN960-416L	. . . WASHER.		2
20	66-4977-2	. . . ROD ASSY, RETRACTING BATTERY STOWING.		2
21	AN470D2	. . . RIVET		1
22	AN486-2	. . . CLEVIS.		1
23	66-4977-3	. . . ROD, RETRACTING BATTERY STOWING		1
23A	69-8849-2	. . . HOLD DOWN, RETRACTING BATTERY		2
24	NAS397-12	. . . CLAMP		2
25	63-2660-4	. . . HOSE, BATTERY VENTILATION		1
26	63-2660-5	. . . HOSE, BATTERY VENTILATION		1
27	NAS603-8	. . . SCREW		4
28	63-2668	. . . PLATE, BATTERY VENT OUTLET SUPPORT.		2
29	NAS514P1032-8	. . . SCREW		4
30	69-31054	. . . VENT ASSY, RETRACTING BATTERY INLET		1
31	69-31055	. . . VENT ASSY, RETRACTING BATTERY OUTLET.		1
32	NAS397-16	. . . CLAMP		1
33	65-6468-1	. . . PIPE, NOSE WHEEL WELL ELECTRIC STORAGE BATTERY 1/4 IN. RIGID POLYVINYL CHLORIDE		1
34	66-5048-1	. . . ELBOW, BATTERY VENT FLEXIBLE (OPTIONAL 66-5048)		1
34	66-5048	. . . ELBOW, BATTERY VENT FLEXIBLE. (OPTIONAL TO 66-5048-1)		1
35	NAS397-14	. . . CLAMP		2
36	BACC10B12	. . . CLAMP, ADJUSTABLE		2
37	63-2660-2	. . . HOSE, BATTERY VENTILATION		1
38	69-9092-5	. . . RETAINER ASSY, ACID JAR ATTACHING PARTS		1
	NAS601-9	. . . SCREW		2
	NAS603-3	. . . SCREW		3
	AN960D6L	. . . WASHER.		4
	AN960PD10L	. . . WASHER.		3
	NAS679A06W	. . . NUT		2
	NAS679A3W	. . . NUT		3
39	69-9092-2	. . . HINGE, ACID JAR RETAINER (ALTERED FROM. MS20257-4-100)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING

707

PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1 39A	66-8981-2	.	STRAP ASSY, ACID JAR.		1
40	BACW10X4	.	WASHER.		1
40A	BACS21Y5W	.	STUD ASSY.		1
40B	66-8981-3	.	CUSHION, ACID JAR STRAP		1
40C	66-8981-1	.	STRAP, ACID JAR		1
40D	69-8849-5	.	BRACKET ASSY, RETRACTING BATTERY.		1
40E	BACR11Y3A	.	RECEPTACLE.		1
40F	69-8849-6	.	BRACKET, RETRACTING BATTERY SUPPORT		1
40G	69-9092-4	.	RETAINER, ACID JAR.		1
41	OP264	.	COVER, BATTERY SUMP JAR (V81872).		1
42	BACJ10A62	.	JAR		1
		.	(OPTIONAL OP240 (V81872))		
42	OP240	.	JAR, (V81872)		1
		.	(OPTIONAL TO BACJ10A62)		
43	5-97840-4	.	DISK, STORAGE BATTERY		1
46	65-10029	.	CRADLE ASSY, RETRACTING BATTERY		1
46A	AN3C5	.	BOLT.		2
46B	AN320C3	.	NUT		2
47	AN394-25	.	PIN		2
48	AN960-416L	.	WASHER.		2
49	AN394-19	.	PIN		2
50	AN960-416L	.	WASHER.		2
51	69-5458	.	SPRING ASSY, RETRACTING BATTERY		2
52	69-4962	.	SPRING, INNER RETRACTING BATTERY.		1
53	69-4961	.	SPRING, OUTER RETRACTING BATTERY.		1
54	66-4582	.	PLUG, BATTERY RETRACTING INNER SPRING		1
55	66-4583	.	PLUG, BATTERY RETRACTING OUTER SPRING		1
56	66-4706	.	ROD ASSY, BATTERY RETRACTING SPRING ADJUSTING		1
57	AN470D2	.	RIVET		1
58	AN486-1	.	CLEVIS.		1
59	66-4706-1	.	ROD, BATTERY RETRACTING SPRING ADJUSTING.		1
60	AN3-6A	.	BOLT.		4
61	66-5002	.	FITTING ASSY, RETRACTING BATTERY ATTACH		2
62	BACB10D175	.	BEARING		1
63	66-5002-1	.	FITTING, RETRACTING BATTERY ATTACH.		1
64	63-2629	.	SHIM, RETRACTING BATTERY ATTACH FITTING		2
65	65-6698	.	ARM ASSY, BATTERY SUPPORT (SEE FIG. 2).		1
66	11749-2	.	KIT, (V71468) (USED WITH AN3150-2).		1
		.	(OPTIONAL A39693 (V31741) 41815 (V20038))		
66	11749-1	.	KIT, (V71468) (USED WITH AN3150-2).		1
		.	(OPTIONAL A39693 (V31741) 41815 (V20038))		
66	BACK18A11-749	.	KIT, (USED WITH AN3150-2)		1
		.	(OPTIONAL A39693 (V31741) 41815 (V20038))		
67	AN3150-2	.	BATTERY, (USED WITH BACK18A11-749, 11749-1.		1
		.	OR 11749-2 (V71468))		
		.	(OPTIONAL A39693 (V31741) 41815 (V20038))		
67	BB638U	.	BATTERY, (V84375)		1
		.	(OPTIONAL TO A39693 (V88219) 41815 (V20038))		
67	41815	.	BATTERY, (V20038)		1
		.	(OPTIONAL TO AN3150-2 (USED WITH BACK18A11-749, 11749-1 OR 11749-2 (V71468))		
		.	(OPTIONAL BB638U (V84375))		
68	69-9647	.	LATCH ASSY, BATTERY ARM		1
		.	ATTACHING PARTS		
	NAS603-12	.	SCREW		2
	AN960C10L	.	WASHER.		2
69	69-9647-1	.	SCREW, BATTERY ARM LATCH MACHINE (ALTERED FROM. NAS603-8)		1
70	NAS601-12	.	SCREW		1
71	BACN10V62-3SN	.	NUT		1
72	AN393-39	.	PIN		1
73	AN960C10	.	WASHER.		7
74	BACN10B53W	.	NUT		1
75	66-9307-1	.	BRACKET, BATTERY LATCH HOLD DOWN.		1
76	66-9307	.	LINK, BATTERY LATCH		1
77	63-8816	.	SPRING, LATCH BATTERY ARM		1
77A	65-6468-3	.	SHIM, NOSE WHEEL WELL ELECTRIC STORAGE BATTERY.		1
78	69-9101	.	LATCH ASSY, HOLD DOWN BATTERY		2
81	69-9101-1	.	FITTING, BATTERY LATCH HOLD DOWN END.		1
82	69-9101-2	.	ROD, BATTERY HOLD DOWN.		1
83	AN3156-3	.	CLAMP		1
84	66-8995-1	.	TRACK ASSY, BATTERY		1
85	66-8995-2	.	TRACK ASSY, BATTERY		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *707*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1	NAS514P1032-5	.	ATTACHING PARTS		6
	AN960PD10L	.	SCREW		6
	NAS679A3W	.	WASHER.		6
		.	NUT		6
	69-8709	.	-----*		
		.	WIRE INSTL, NOSE WHEEL WELL BATTERY (SEE 24-3, FIG. .		RF
		.	1A, ITEM 99, 24-3, FIG. 1B, ITEM 90 AND 24-3,		
		.	FIG. 1C ITEM 87)		
	86 BACS45A3	.	SEAL.		2
	NAS602-10P	.	ATTACHING PARTS		
86A		.	SCREW, (REQUIRED ON 69-8709-1).		2
		.	-----*		
	BACC10DK8	.	CLAMP		2
	NAS603-7P	.	ATTACHING PARTS		
	BACN10JC3	.	SCREW		2
		.	NUT		2
		.	-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					


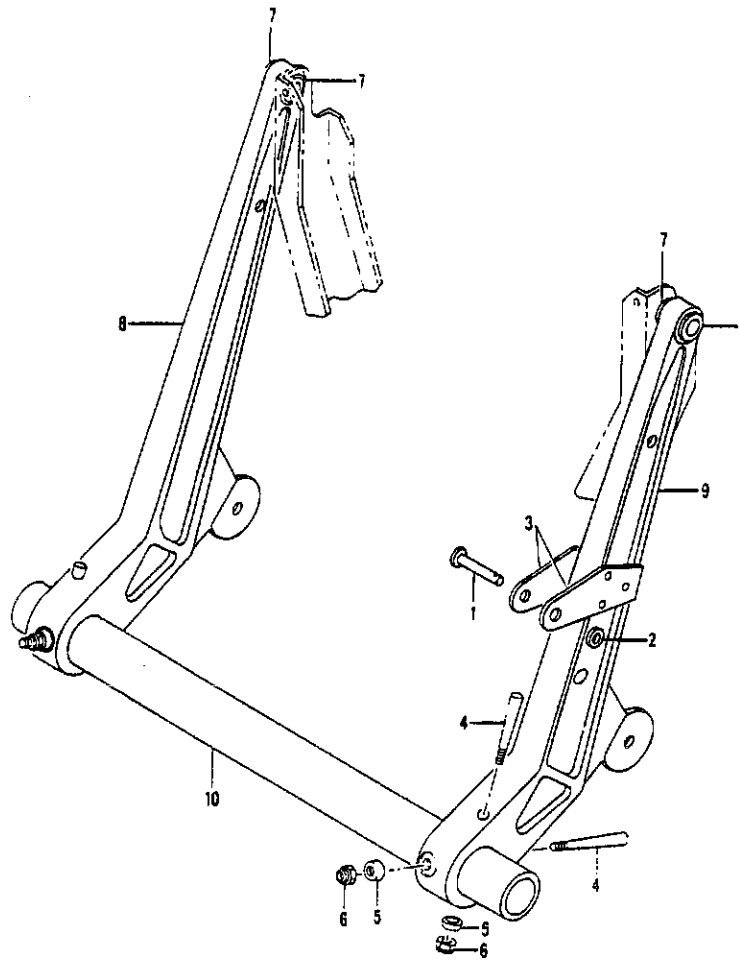


FIGURE 2. ARM ASSY, BATTERY SUPPORT

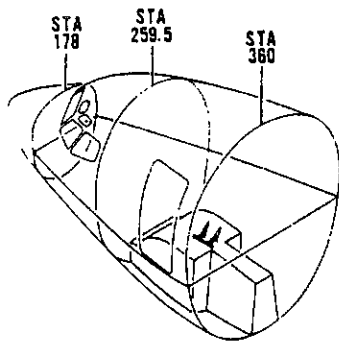

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2	65-6698		ARM ASSY, BATTERY SUPPORT (SEE FIG. 1, ITEM 65)		RF
1	AN393-37		. PIN		1
2	AN960-10		. WASHER.		1
3	66-9307-2		. PLATE, BATTERY LATCHING PIN		2
4	AN386-1-20A		. PIN		4
5	AN975-3		. WASHER.		4
6	AN364-1032		. NUT		4
7	BACB10D20F		. BEARING		4
8	65-6342-5		. ARM, NOSE WHEEL WELL RETRACTING BATTERY		1
9	65-6342-6		. ARM, NOSE WHEEL WELL RETRACTING BATTERY		1
10	65-6698-1		. TUBE, BATTERY SUPPORT ARM		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					


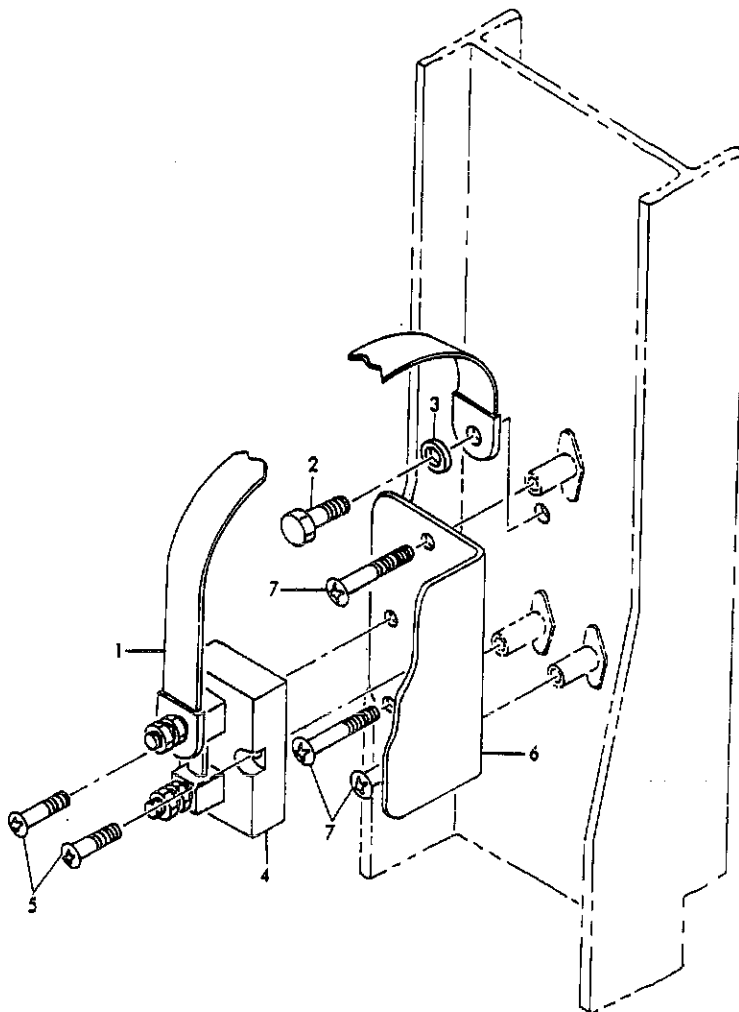


FIGURE 3. SHUNT INSTL, ELECTRIC STORAGE BATTERY AMMETER

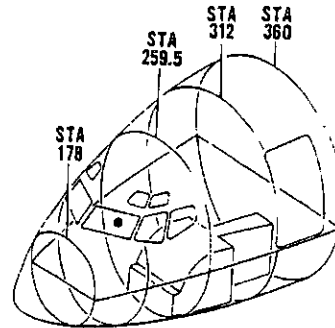

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
3	66-5166	SHUNT INSTL, ELECTRIC STORAGE BATTERY AMMETER (SEE. . . 24-3, FIG. 1A, ITEM 55, 24-3, FIG. 1B, ITEM 50 AND 24-3, FIG. 1C, ITEM 46)								RF
1	BACJ40CG6G	. JUMPER ASSY								1
2	AN5-6A	. ATTACHING PARTS								1
3	AN960D516L	. BOLT.								1
4	MS91586-3	. WASHER.								1
5	NAS603-12P	-----*								2
6	63-2832	. SHUNT								1
7	NAS603-22P	. ATTACHING PARTS								3
		. SCREW								
		-----*								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										



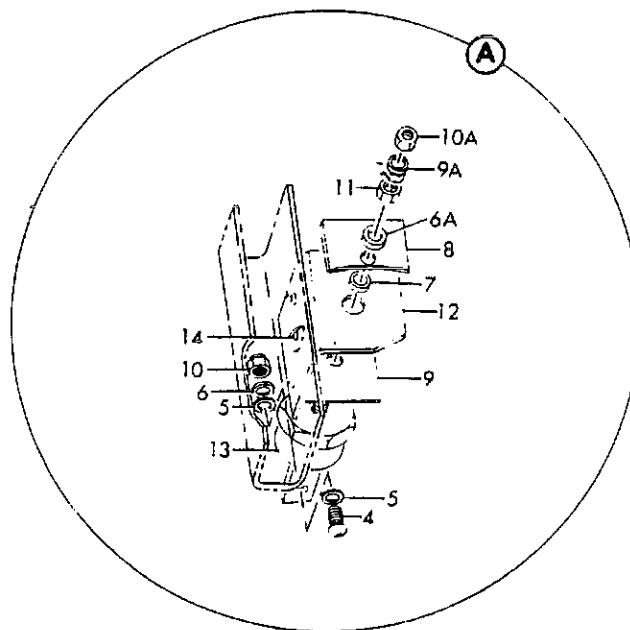


FIGURE 6. SHIELD INSTL, DC JUNCTION

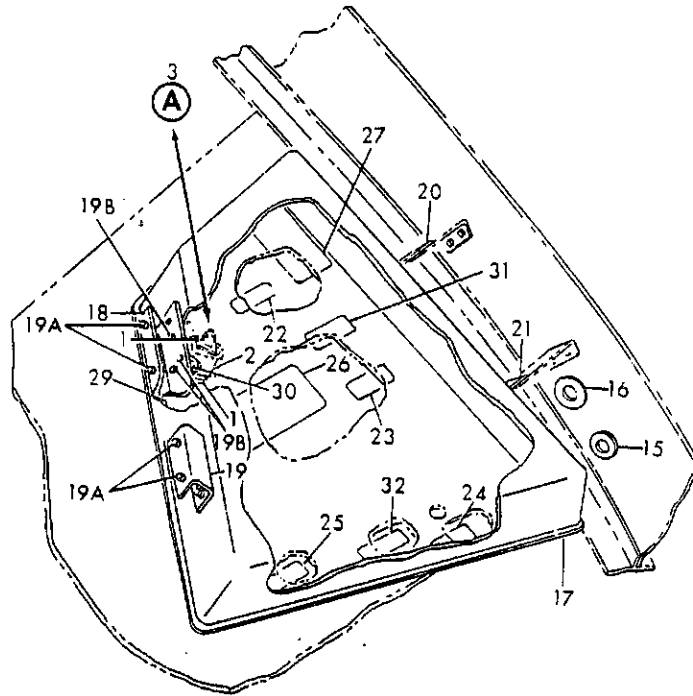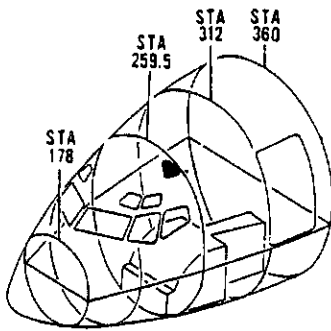

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
6	65-1638	SHIELD INSTL, DC JUNCTION (SEE 24-3, FIG. 1A, ITEM 1, . 24-3, FIG. 1B, ITEM 1 AND 24-3, FIG. 1C, ITEM 1)		RF
R 3	69-37735-1	. RECTIFIER ASSY, BLOCKING.	0150	1
R	AN3-4A	. ATTACHING PARTS . BOLT.	0150	2
R 3	69-37735-18	. RECTIFIER ASSY, BLOCKING.	5199	1
R	AN3-4A	. ATTACHING PARTS . BOLT.	5199	2
	4			1
	5			2
	6			1
	6A			1
	7			1
R 8	69-37735-3		0150	1
R 8	69-37735-16		5199	1
R 9	69-37735-3		0150	1
R 9	69-37735-17		5199	1
	9A			1
	10			1
	10A			1
	11			1
	12			1
	13			1
	13			1
	14			1
	15			1
	16			1
	17			1
	NAS603-7			6
	NAS603-8			2
	AN960D10L			8
	18			1
	19			1
	19A			4
	19B			3
	20			1
	21			1
	NAS603-5			4
	BACN10JC3			4
	22			1
	23			1
	24			1
	25			1
	27			1
R 29	BACM9S18S		0150	1
R 30	BACM9S18T		0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

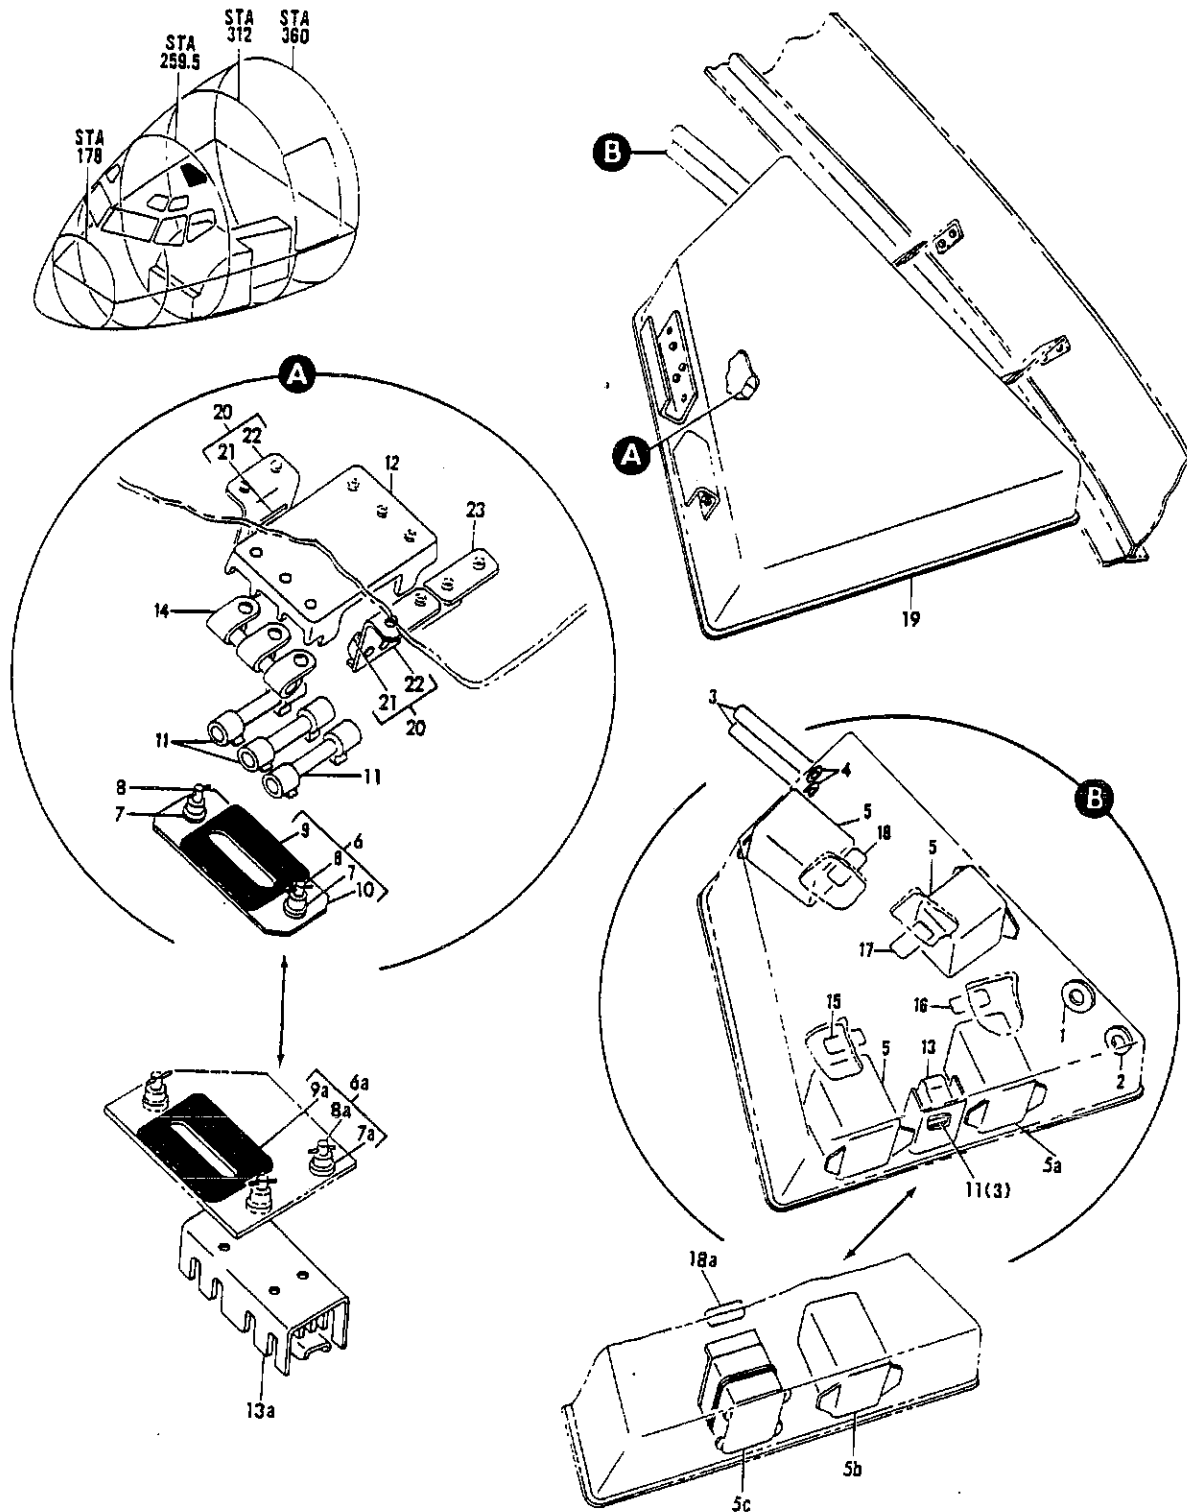


FIGURE 8. SHIELD ASSY, DC JUNCTION

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8	65-2126		SHIELD ASSY, DC JUNCTION (SEE FIG. 6, ITEM 17).		RF
1	NAS557-20B		. GROMMET		1
2	NAS557-16B		. GROMMET		1
3	65-2126-3		. SLEEVING, DC JUNCTION SHIELD INSULATING		2
4	63-1779		. RING, DC JUNCTION SHIELD FLANGE		2
5	10-60000-3		. CONTACTOR,		3
5A	10-60000-3		. CONTACTOR		1
			ATTACHING PARTS		
	NAS604-7		. SCREW		8
			-----*		
6	66-1630		. PLATE ASSY, FUSE RETAINER		1
7	BACW10X4		. . WASHER.		2
8	BACS21Y2W		. . STUD ASSY		2
10	66-1630-1		. . PLATE, FUSE RETAINER.		1
11	BACF30G50		. FUSE, (OPTIONAL BACF30F50).		6
12	BACF31A2		. FUSE HOLDER		1
			ATTACHING PARTS		
	NAS514P1032-10		. SCREW		2
			-----*		
13	66-9992		. HOLDER ASSY, SPARE FUSE		1
			(OPTIONAL 65-2126-4)		
13	65-2126-4		. HOLDER ASSY, SPARE FUSE		1
			(OPTIONAL TO 66-9992)		
14	63-1601		. BUS ASSY, DC JUNCTION SHIELD FUSE		1
15	BACM10C20-25BP		. MARKER-ALUMINUM FOIL, REVERSE CURRENT CONTACTOR		1
			ESSENTIAL		
16	BACM10C20-25BN		. MARKER-ALUMINUM FOIL, REVERSE CURRENT CONTACTOR TR.		1
			NO. 4		
17	BACM10C20-25BM		. MARKER-ALUMINUM FOIL, REVERSE CURRENT CONTACTOR TR.		1
18	BACM10C20-25BL		. MARKER-ALUMINUM FOIL, REVERSE CURRENT CONTACTOR TR.		1
			NO. 2		
	65-2126-1		. SHIELD ASSY, DC JUNCTION.		1
19	65-2126-2		. . SHIELD, DC JUNCTION		1
20	63-1386		. BRACKET ASSY, FUSE RETAINER PLATE SUPPORT		2
21	BACR11Y1		. . RECEPTACLE.		1
22	63-1386-1		. . BRACKET, FUSE RETAINER PLATE SUPPORT.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 13
FUSELAGE MISCELLANEOUS


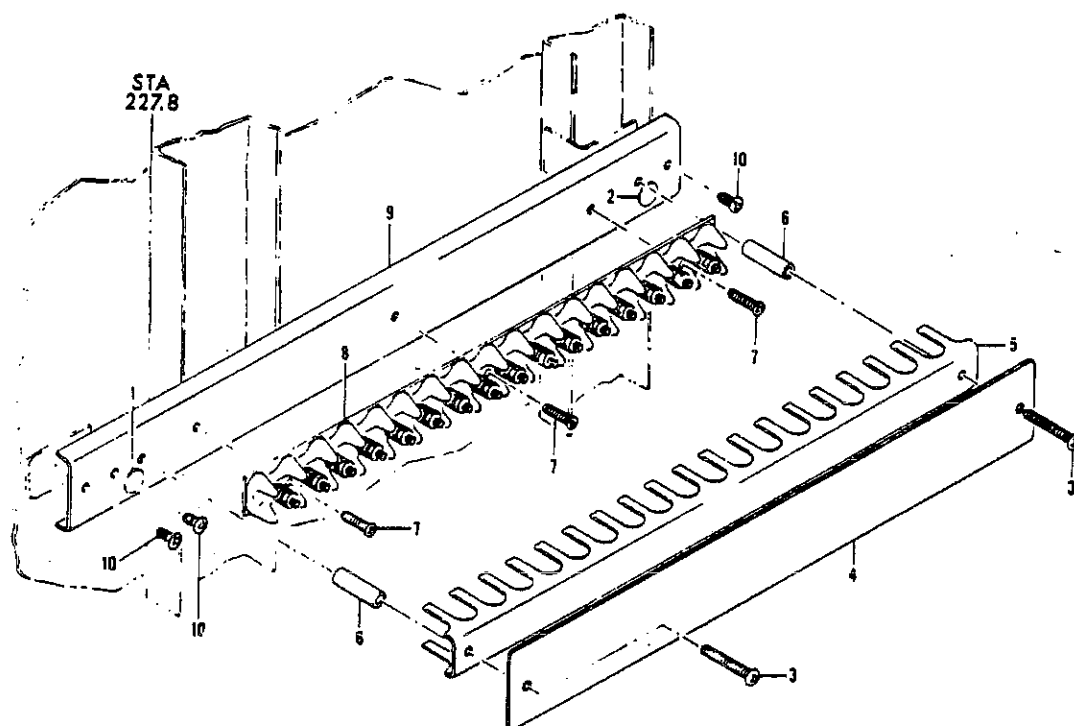


FIGURE 1. STRIP INSTL, SECTION 51 T-207 TERMINAL (ELECTRICAL POWER ONLY)

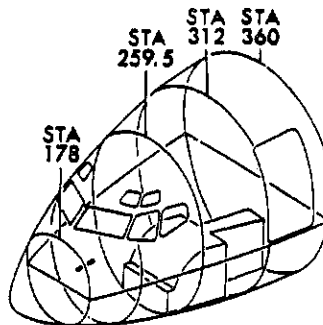

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1	65-6438		STRIP INSTL, SECTION 51 T-207 TERMINAL (SEE 24-3, FIG. 1A, ITEM 45, 24-3, FIG. 1B, ITEM 42 AND 24-3, FIG. 1C, ITEM 38)		RF
1	BACM10N00-2PP		. METAL-CAL, 1.		1
2	BACM10N00-2MB		. METAL-CAL, 16		1
3	NAS603-24		. SCREW		2
4	63-8747		. COVER, TERMINAL STRIP		1
5	BACC50C16		. COVER ASSY.		1
6	NAS430D3-70		. SPACER.		2
7	NAS600-6		. SCREW		3
8	AN3436-4-16		. TERMINAL BLOCK ASSY		1
9	66-4487-3		. CHANNEL ASSY, T-207 TERMINAL STRIP SUPPORT.		1
10	NAS603-7		. ATTACHING PARTS		
			. SCREW		3
			-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

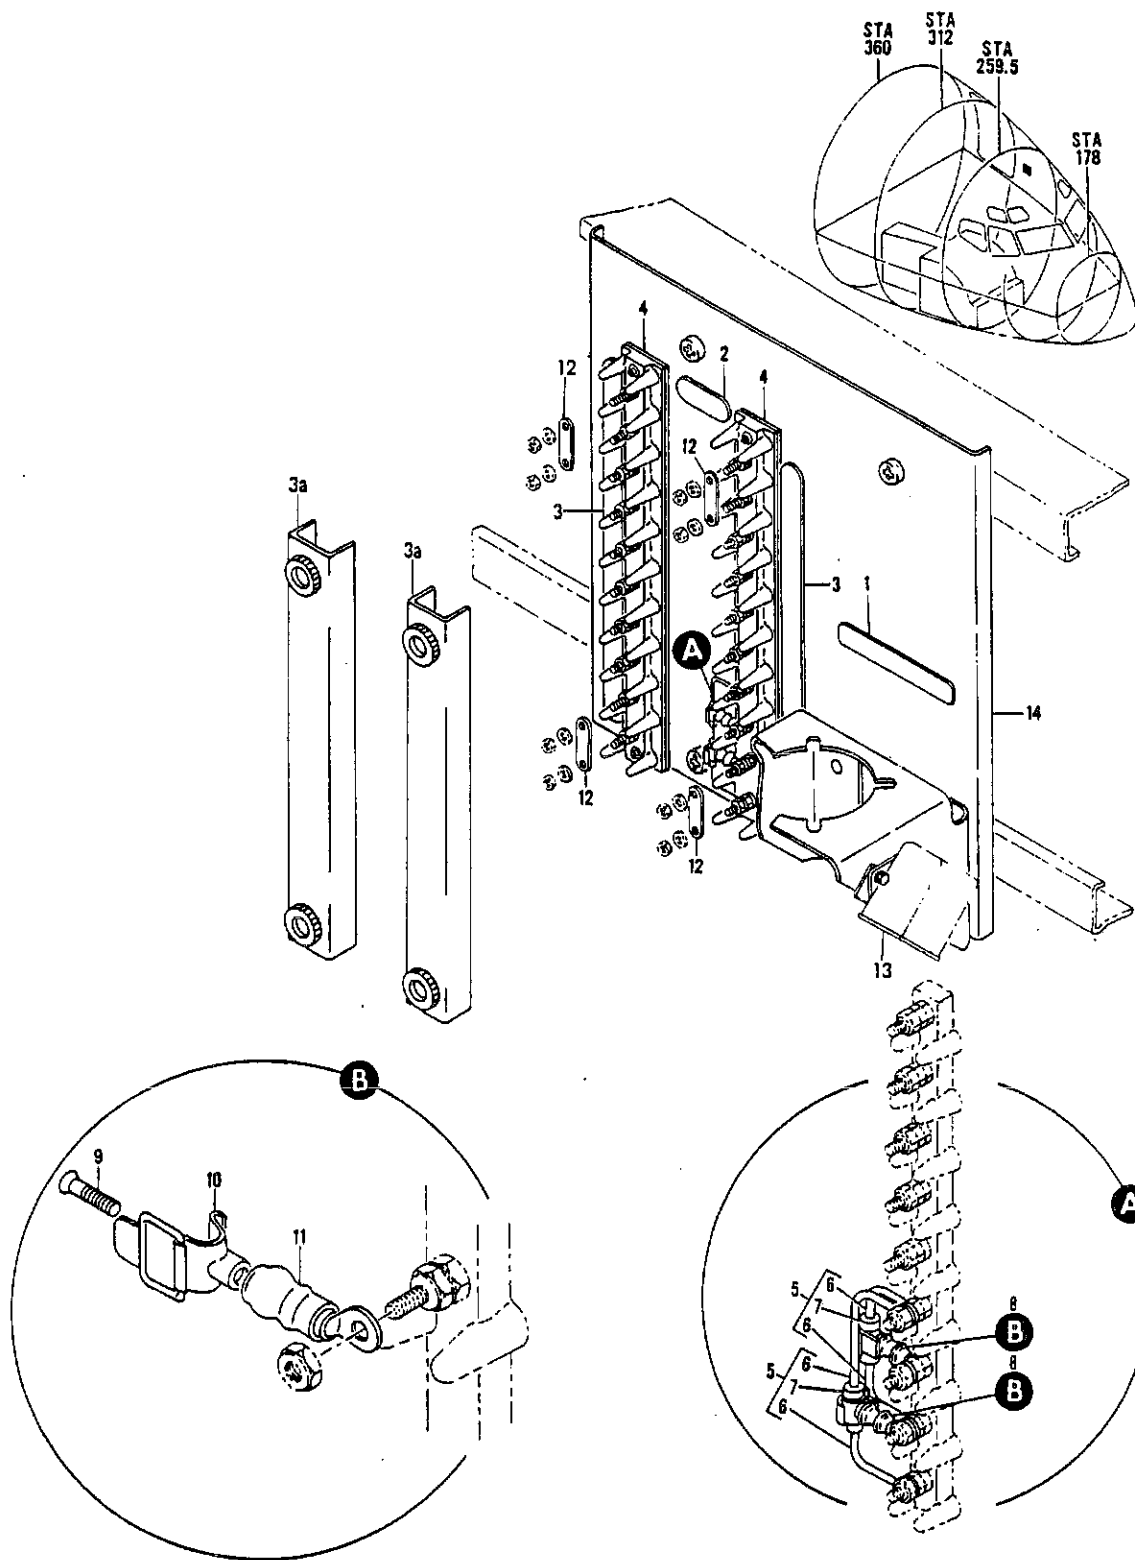


FIGURE 2. STRIP INSTL, NAVIGATORS STATION TERMINAL

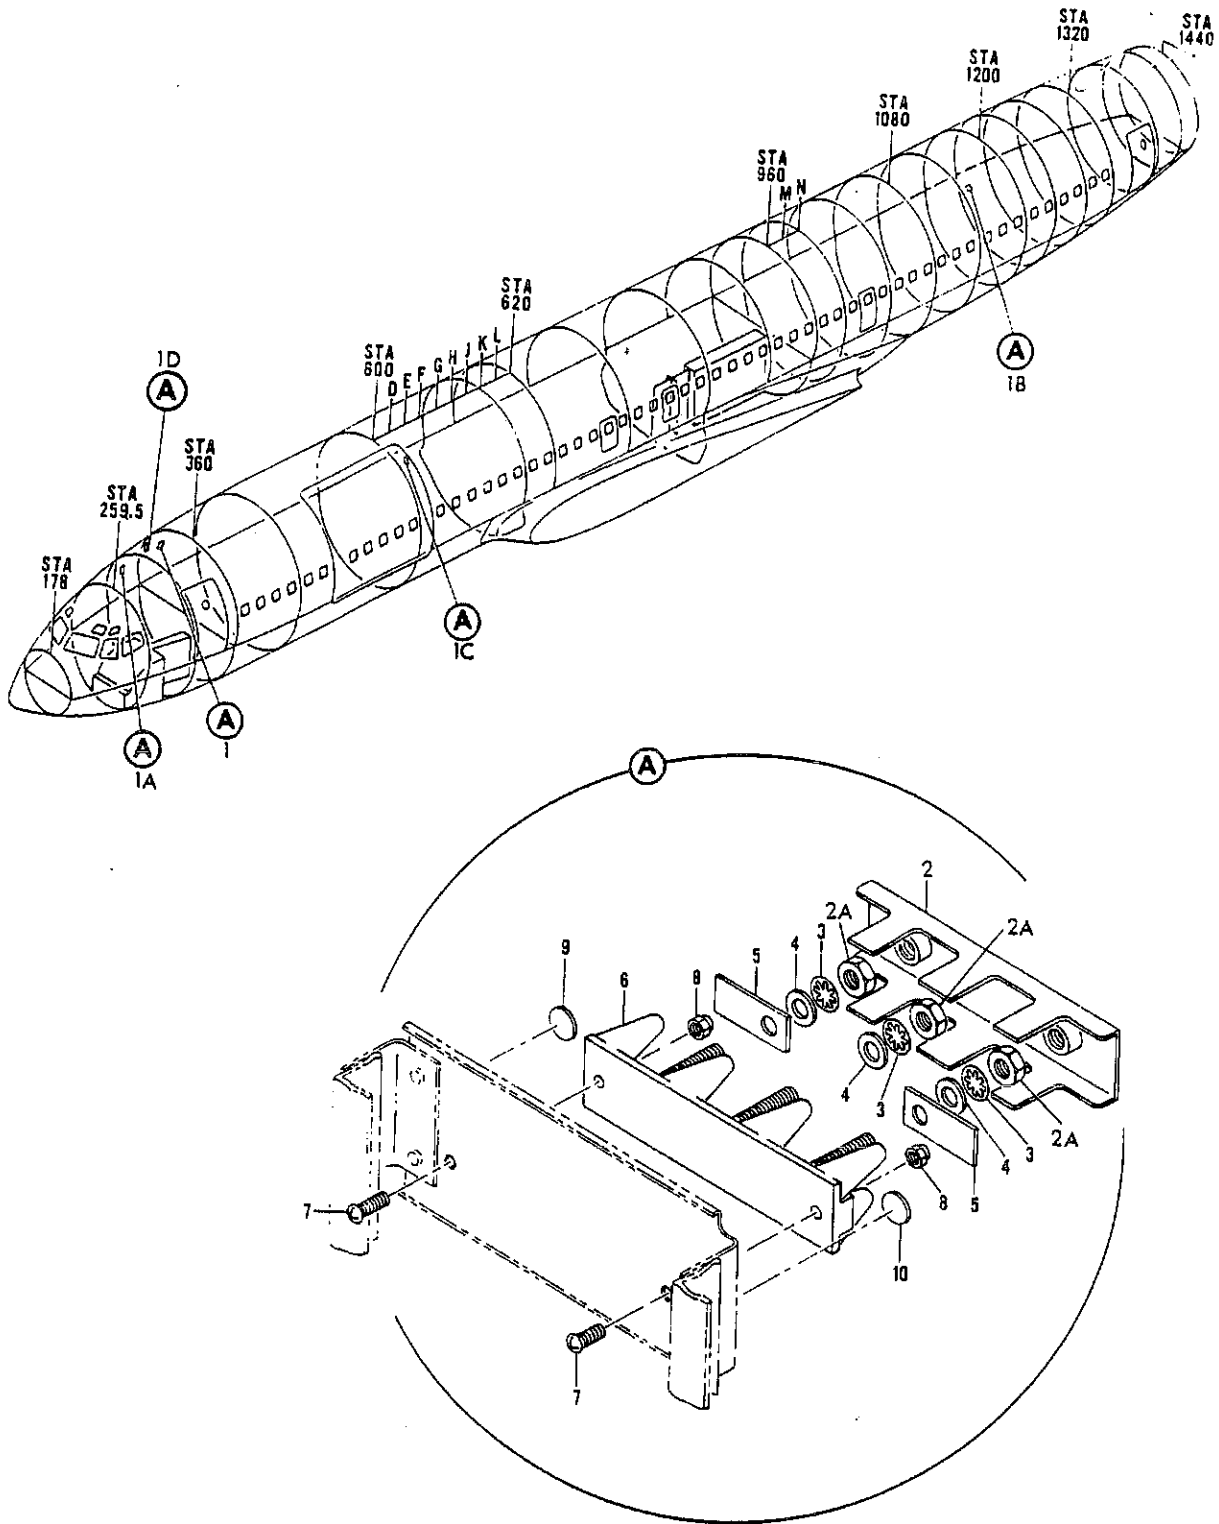


FIGURE 7. STRIP INSTL. FORWARD GALLEY AC SERVICE OUTLET TERMINAL



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
7	18	65-36064-2	STRIP INSTL, AFT GALLEY AC SERVICE OUTLET TERMINAL. . . (SEE 24-3, FIG. 3, ITEM 19)								RF
	1D	65-36064-5	STRIP INSTL, FORWARD GALLEY AC SERVICE OUTLET TERMINAL (SEE 24-3, FIG. 2, ITEM 588)								RF
	2	MS18029-3S3	. COVER ASSY. (OPTIONAL OP134S3 (V81872))								1
	2	OP134S3	. COVER ASSY, (V81872). (OPTIONAL TO MS18029-3S3)								1
	2A	AN341-416	. NUT, (USED ON 65-36064 AND -2).								3
	3	AN936A416B	. WASHER, (USED ON 65-36064 AND -2).								3
	4	AN961-416	. WASHER, (USED ON 65-36064 AND -2).								3
	5	MS25227-5A	. STRIP								2
	6	MS27212-3-3	. TERMINAL BLOCK ASSY, (USED ON 65-36064, -2 AND -4). . .								1
	6	BACT42D3-3	. TERMINAL BLOCK ASSY, (USED ON 65-36064-3 AND -5). . . ATTACHING PARTS								1
	7	NAS600-6P	. SCREW								2
	8	NAS679A04W	. NUT, (USED ON 65-36064, -3, -4 AND -5). -----*								2
	9	BACM10N00-2AAT	. MARKER-ALUMINUM FOIL, 3 (USED ON 65-36064-3, -4, AND -5)								1
	10	BACM10N00-2PP	. MARKER-ALUMINUM FOIL, 1 (USED ON 65-36064-3, -4, AND -5)								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											


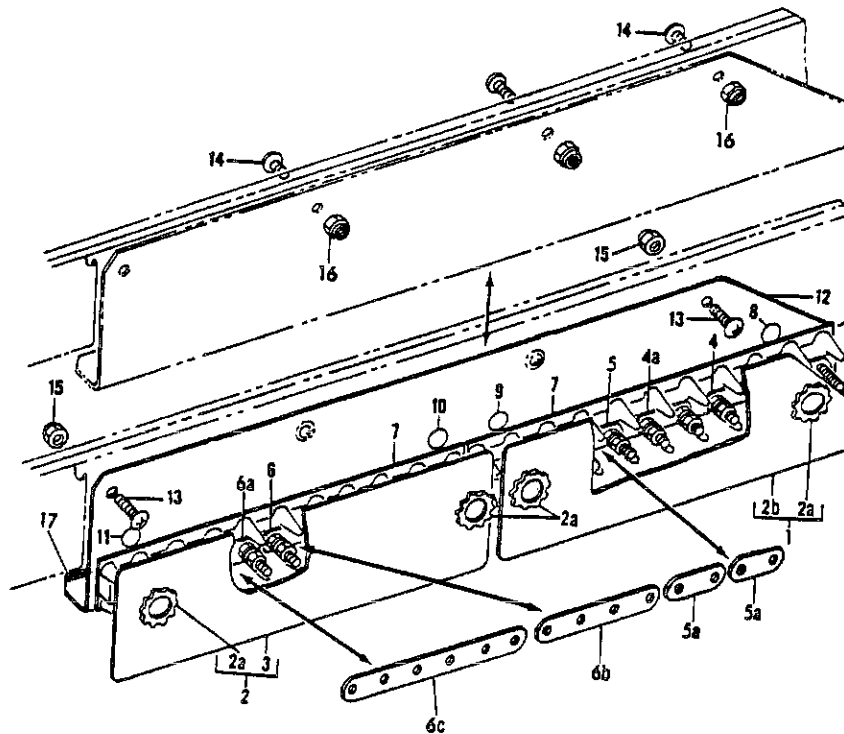


FIGURE 11. TERMINAL BLOCK INSTL. FLIGHT ENGINEERS TABLE

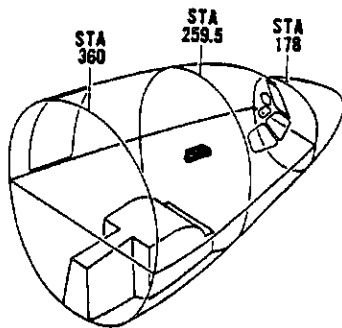

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
11	65-36069	1 2 3 4 5 6 7 TERMINAL BLOCK INSTL, FLIGHT ENGINEER TABLE (SEE 24-3, FIG. 1A, ITEM 41, 24-3, FIG. 1B, ITEM 39 AND 24-3, FIG. 1C, ITEM 35)	0150	RF
	65-36069	TERMINAL BLOCK INSTL, FLIGHT ENGINEER TABLE (VARIABLE DWG; 65-36069-5001) (SEE 24-3, FIG. 1A, ITEM 41, 24-3, FIG. 1B, ITEM 39 AND 24-3, FIG. 1C, ITEM 35)	5199	RF
1	66-15089	. COVER ASSY, TERMINAL BLOCK.		1
2	66-15089-1	. COVER ASSY, TERMINAL BLOCK.		1
2A	OP5115-10	. . NUT, SELF-LOCKING (V81872).		2
2B	66-15089-2	. . COVER, TERMINAL BLOCK (USED ON 66-15089).		1
3	66-15089-3	. . COVER, TERMINAL BLOCK (USED ON 66-15089-1).		1
4	MS25226-4-4	. BUS		1
4A	MS25226-4-2	. BUS		1
5	MS25226-4-4	. BUS		1
6	MS25226-4-6	. BUS		1
6A	MS25226-4-4	. BUS		1
7	MS25123-2-10	. TERMINAL BOARD ASSY		2
		ATTACHING PARTS		
	NAS600-6P	. SCREW		6
	BACN10JC04	. NUT		6
		-----*		
8	BACM10N00-2AAS	. MARKER, 2 ALUMINUM FOIL		1
9	BACM10N00-2FP	. MARKER, 10 ALUMINUM FOIL.		1
10	BACM10N00-2FT	. MARKER, 11 ALUMINUM FOIL.		1
11	BACM10N00-2MW	. MARKER, 20 ALUMINUM FOIL.		1
12	66-15090	. BRACKET, TERMINAL BLOCK SUPPORT		1
		ATTACHING PARTS		
13	NAS603-8P	. SCREW		2
15	BACN10JC3	. NUT		2
		-----*		
17	BACG20ZA1570	. GROMMET		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

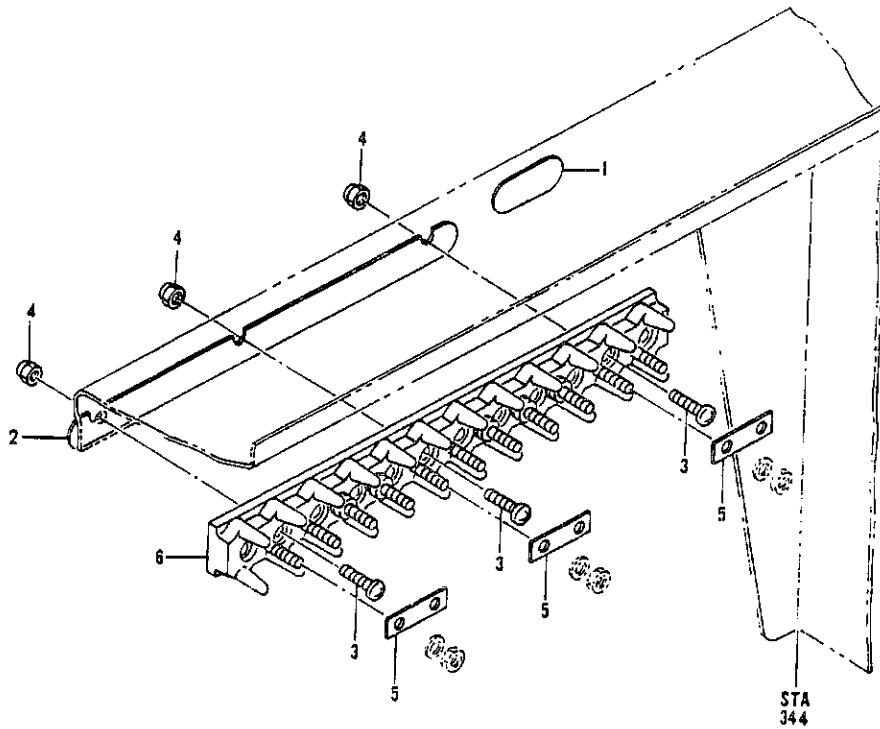
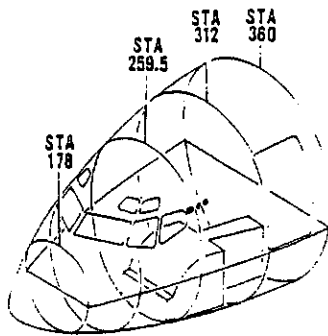


FIGURE 14., PANEL INSTL. RADIO RACK TERMINAL"

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
14	65-19483-1	PANEL INSTL, RADIO RACK TERMINAL (SEE 24-3, FIG. 5A, . . . ITEM 66, 24-3, FIG. 5B, ITEM 66, 24-3, FIG. 5C, ITEM 82, 24-3, FIG. 5D, ITEM 73, 24-3, FIG. 5E, ITEM 51 AND 24-3, FIG. 5F, ITEM 44)							0102	RF
1	BACM10L10-12XD	. METAL-CAL, RT-74.							0102	1
2	BACM10N70-2DPD	. METAL-CAL, 1 THRU 10.							0102	1
3	NAS600-6P	. SCREW							0102	3
4	BACN10JCQ4	. NUT							0102	3
5	MS25227-2A	. STRIP							0102	3
6	MS27212-1-11	. TERMINAL BOARD ASSY							0102	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

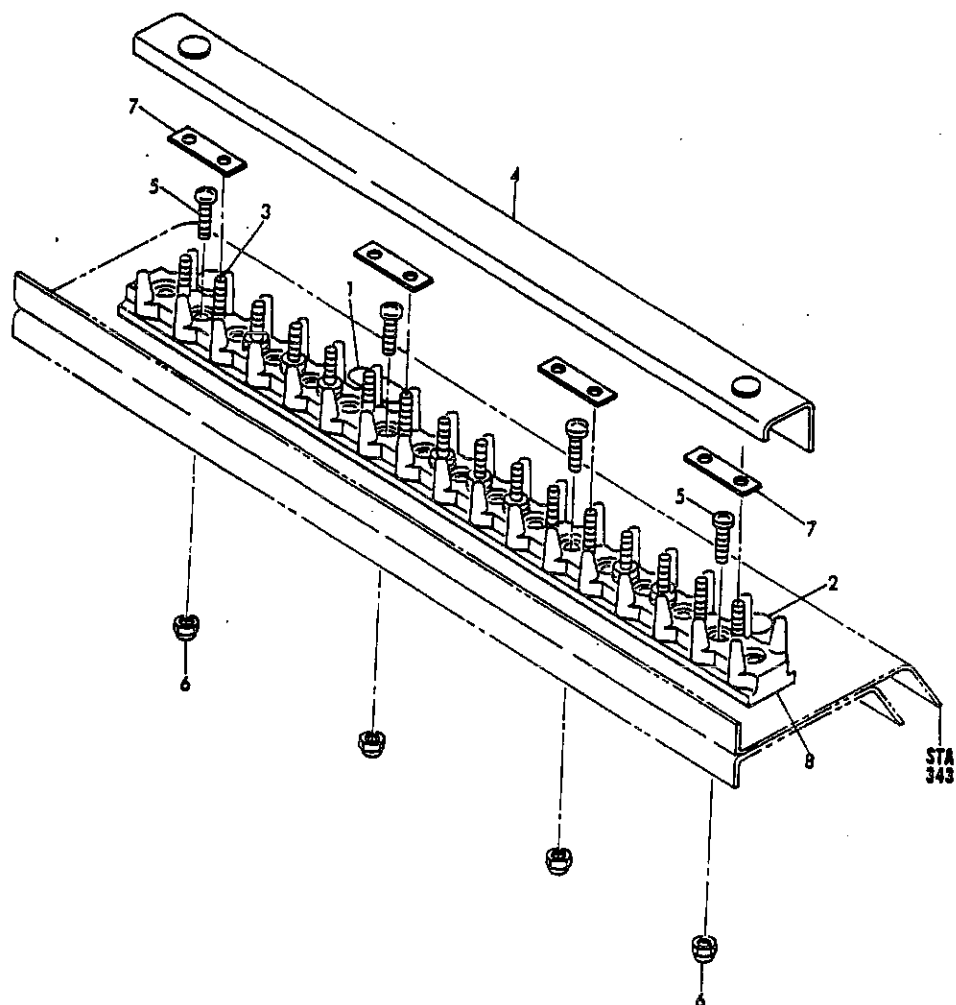
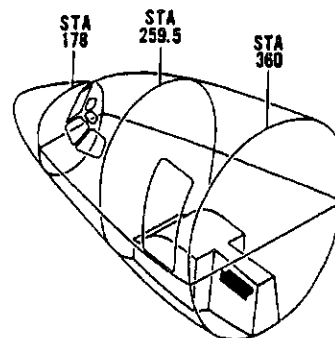


FIGURE 148. PANEL INSTL, RADIO RACK TERMINAL

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
148	65-19483-4	PANEL INSTL, RADIO RACK TERMINAL (SEE 24-3, FIG. 5, . . . ITEM 66, 24-3, FIG. 5A, ITEM 66, 24-3, FIG. 5B, ITEM 66, 24-3, FIG. 5C, ITEM 82, 24-3, FIG. 5D, ITEM 73, 24-3, FIG. 5E, ITEM 51 AND 24-3, FIG. 5F, ITEM 44)							0399	RF
1	BACML0L10-12XD	. MARKER-ALUMINUM FOIL, RT-74							0399	1
2	BACM10N00-2PP	. MARKER-ALUMINUM FOIL, 1							0399	1
3	BACM10N00-2MB	. MARKER-ALUMINUM FOIL, 16.							0399	1
4	MS18029-1L16	. COVER ASSY.							0399	1
5	NAS600-6P	. SCREW							0399	4
6	NAS679A04W	. NUT							0399	4
7	MS25227-2A	. STRIP							0399	4
8	MS27212-1-16	. TERMINAL BOARD ASSY							0399	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

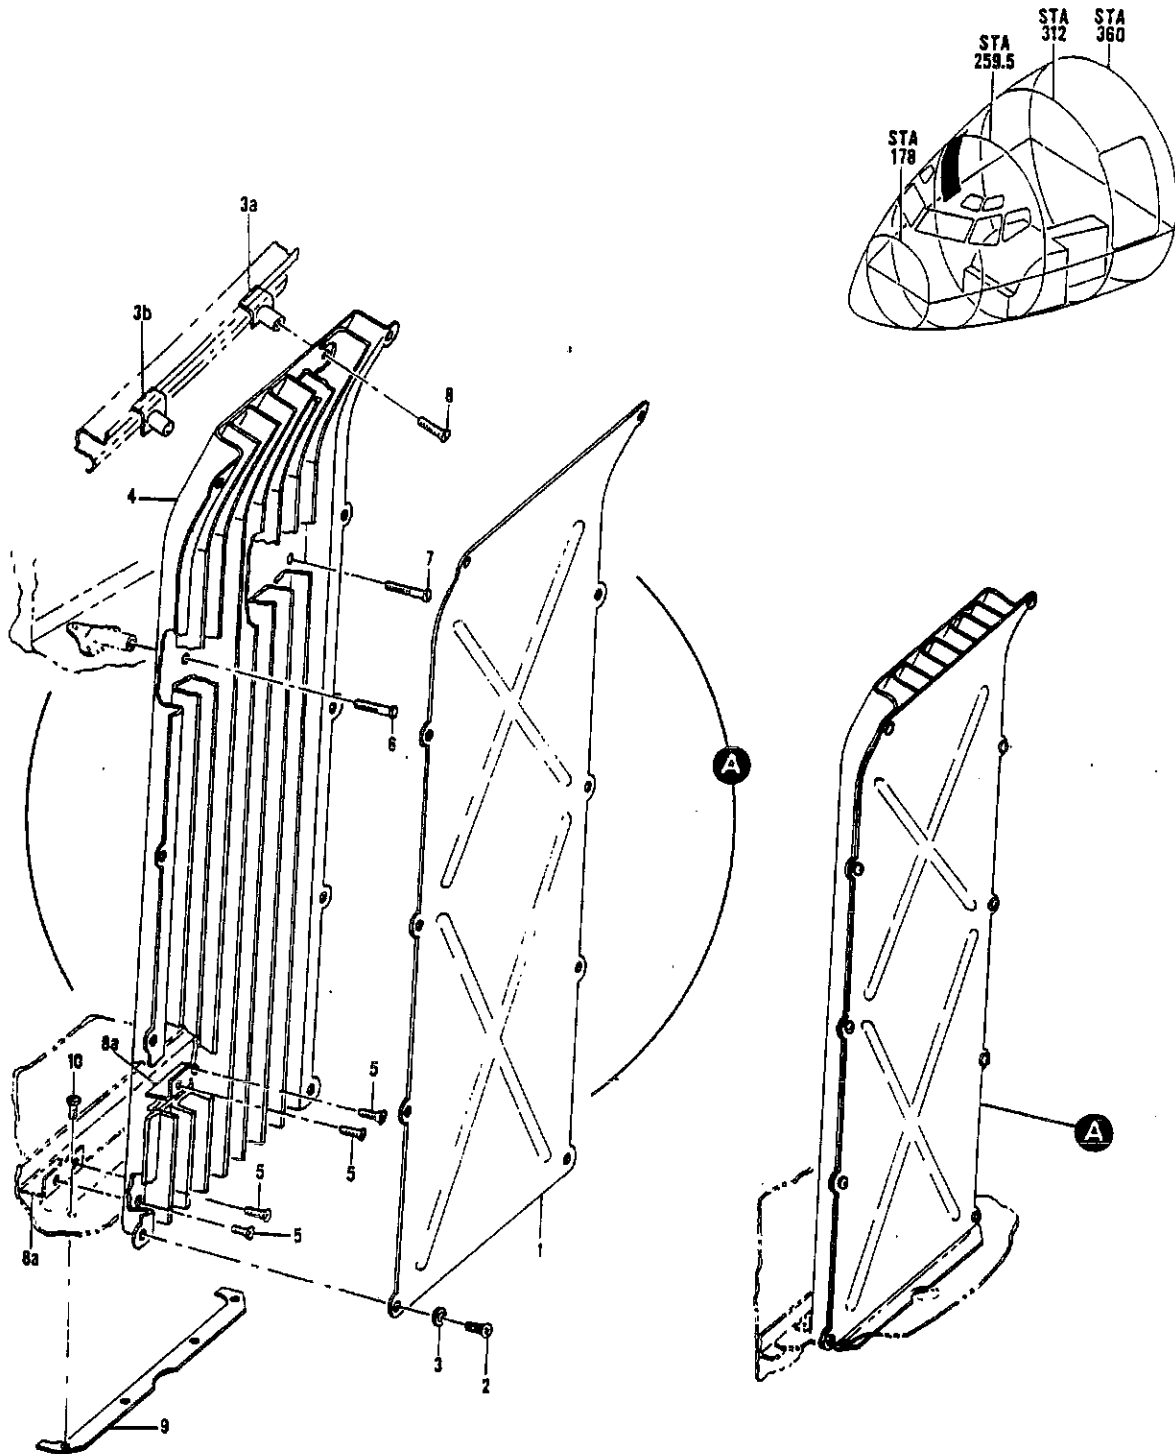


FIGURE 17. RACEWAY INSTL. SECTION 51 ELECTRICAL WIRE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
17	50-10228	RACEWAY INSTL, SECTION 51 ELECTRICAL WIRE (SEE 24-3, . . FIG. 1A, ITEM 88, 24-3, FIG. 1B, ITEM 79 AND 24-3, FIG. 1C, ITEM 76)								RF
1	50-9394-2	. COVER, RACEWAY.								1
2	NAS603-6	. ATTACHING PARTS								10
3	AN960D10L	. SCREW								10
		. WASHER.								
		-----*								
3A	60-6918	. ANGLE ASSY, RACEWAY SUPPORT								1
3B	60-6918-2	. ANGLE ASSY, RACEWAY SUPPORT								1
4	50-9394-8	. RACEWAY ASSY.								1
		. ATTACHING PARTS								
5	NAS514P1032-8	. SCREW								4
6	NAS514P1032-24	. SCREW								1
7	NAS514P1032-26	. SCREW								1
8	NAS514P1032-20	. SCREW								2
		-----*								
8A	30-3077	. ANGLE ASSY, RACEWAY SUPPORT								2
9	50-10228-1	. STRIP, SECTION 51 ELECTRICAL WIRE INSULATING RUB. . .								1
		. ATTACHING PARTS								
10	NAS601-6	. SCREW								4
		-----*								

MISSING ITEM NUMBERS ARE NOT APPLICABLE

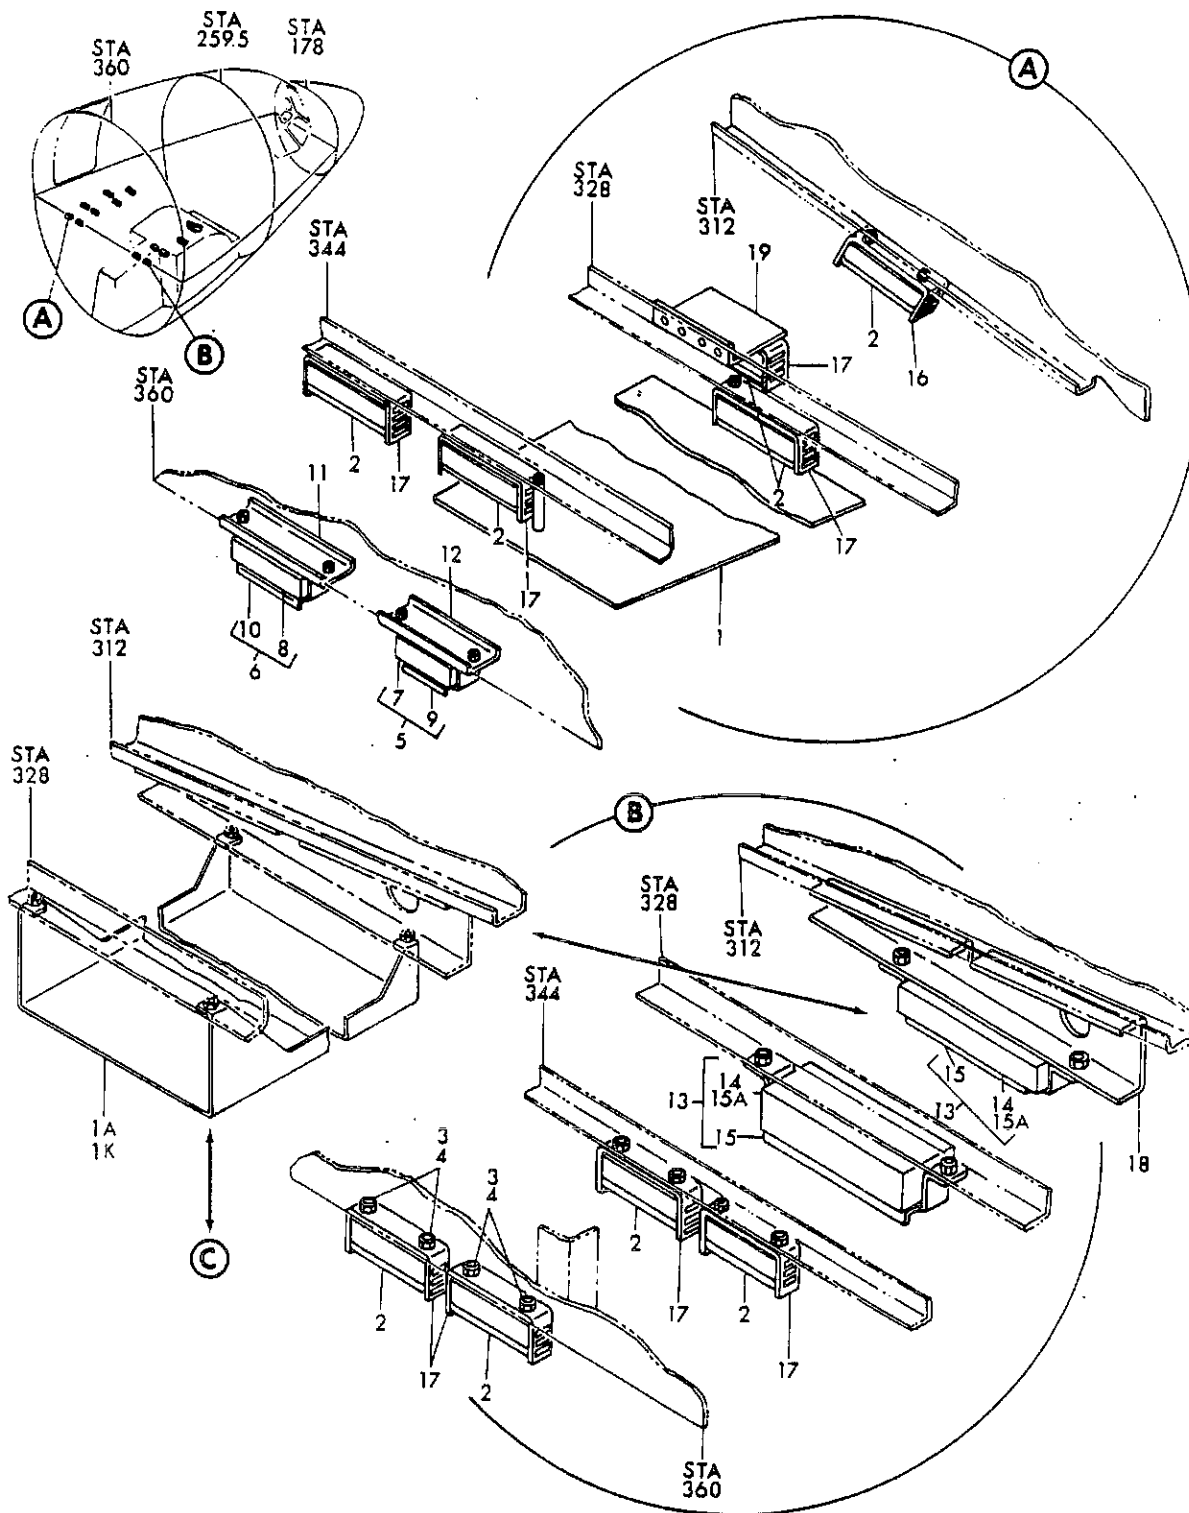


FIGURE 17B. CLAMP INSTL, SECTION 51 WIRE (SHEET 1)


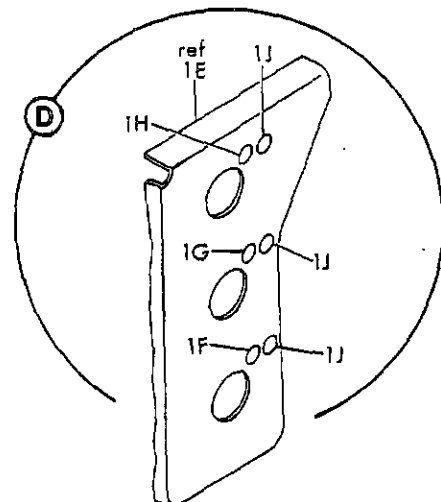


FIGURE 17B. CLAMP INSTL, SECTION 51 WIRE (SHEET 2)

NOV 21/90

24-13-178

DETAILED PARTS LIST
24-13-178
PAGE 1

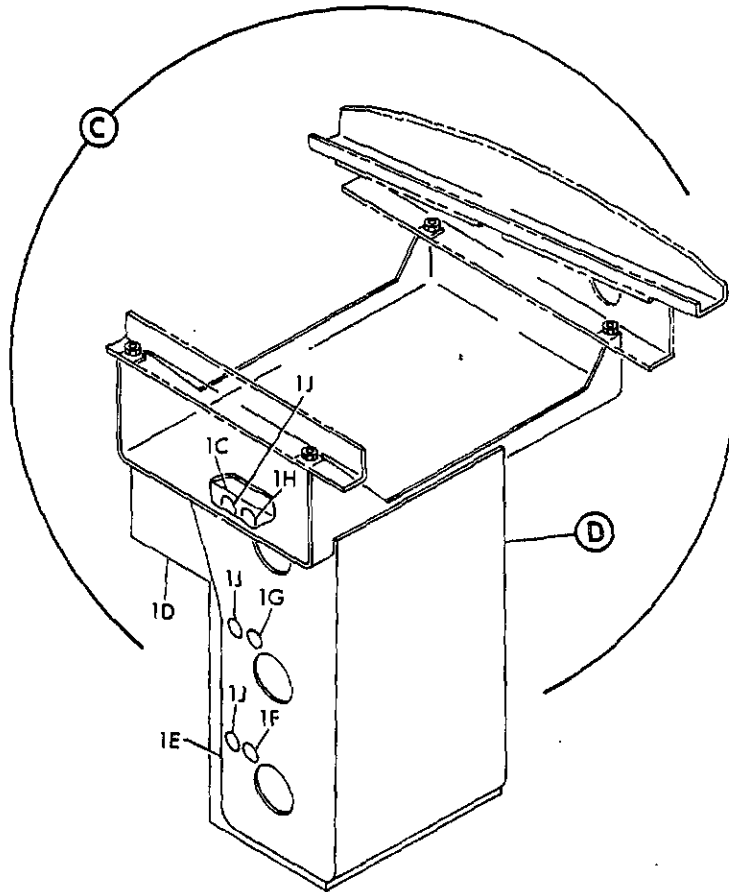

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF	UNITS
			FROM TO	PER ASSY
17B	65-60484-2	CLAMP INSTL, SECTION 51 WIRE (SEE 24-3, FIG. 5B, ITEM 128, 24-3, FIG. 5D, ITEM 203, 24-3, FIG. 5E, ITEM 182 AND 24-3, FIG. 5F, ITEM 172)	5199	RF
1	69-52101-1	. COVER	5199	1
	NAS603-40P	. ATTACHING PARTS	5199	6
	AN960-10L	. SCREW	5199	6
	NAS43DD3-128	. WASHER	5199	6
		. SPACER	5199	6
2	BACC10DS3	. CLAMP	5199	9
3	NAS603-9P	. SCREW	5199	4
4	BACN10JC3	. NUT	5199	4
5	65-22976-43	. CLAMP ASSY, ELECTRONIC.	5199	1
6	65-22976-63	. CLAMP ASSY, ELECTRONIC.	5199	1
7	65-22976-33	. CUSHION, (USED ON 65-22976-43).	5199	1
8	65-22976-65	. CUSHION, (USED ON 65-22976-63).	5199	1
9	65-22976-53	. CLAMP, (USED ON 65-22976-43).	5199	1
10	65-22976-64	. CLAMP, (USED ON 65-22976-63).	5199	1
11	65-60484-4	. CHANNEL	5199	1
12	65-60484-5	. CHANNEL	5199	1
13	65-22976-57	. CLAMP ASSY, ELECTRONIC.	5199	2
	NAS603-10P	. ATTACHING PARTS	5199	4
	BACN10JC3	. SCREW	5199	4
		. NUT	5199	4
14	65-22976-59	. CUSHION, (USED ON 65-22976-57).	5199	1
15	65-22976-54	. CLAMP, (USED ON 65-22976-57).	5199	1
15	65-22976-57	. CLAMP	5199	1
15A	65-60484-6	. CUSHION	5199	2
16	BACC10DR7	. CHANNEL	5199	1
17	BACC10DR8	. CHANNEL	5199	8
	NAS514P1032-10	. ATTACHING PARTS	5199	19
	BACN10JC3	. SCREW	5199	19
		. NUT	5199	19
18	66-8962-2	. BRACKET	5199	1
	NAS603-6P	. ATTACHING PARTS	5199	5
19	65-60484-3	. SCREW	5199	1
		. ANGLE	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

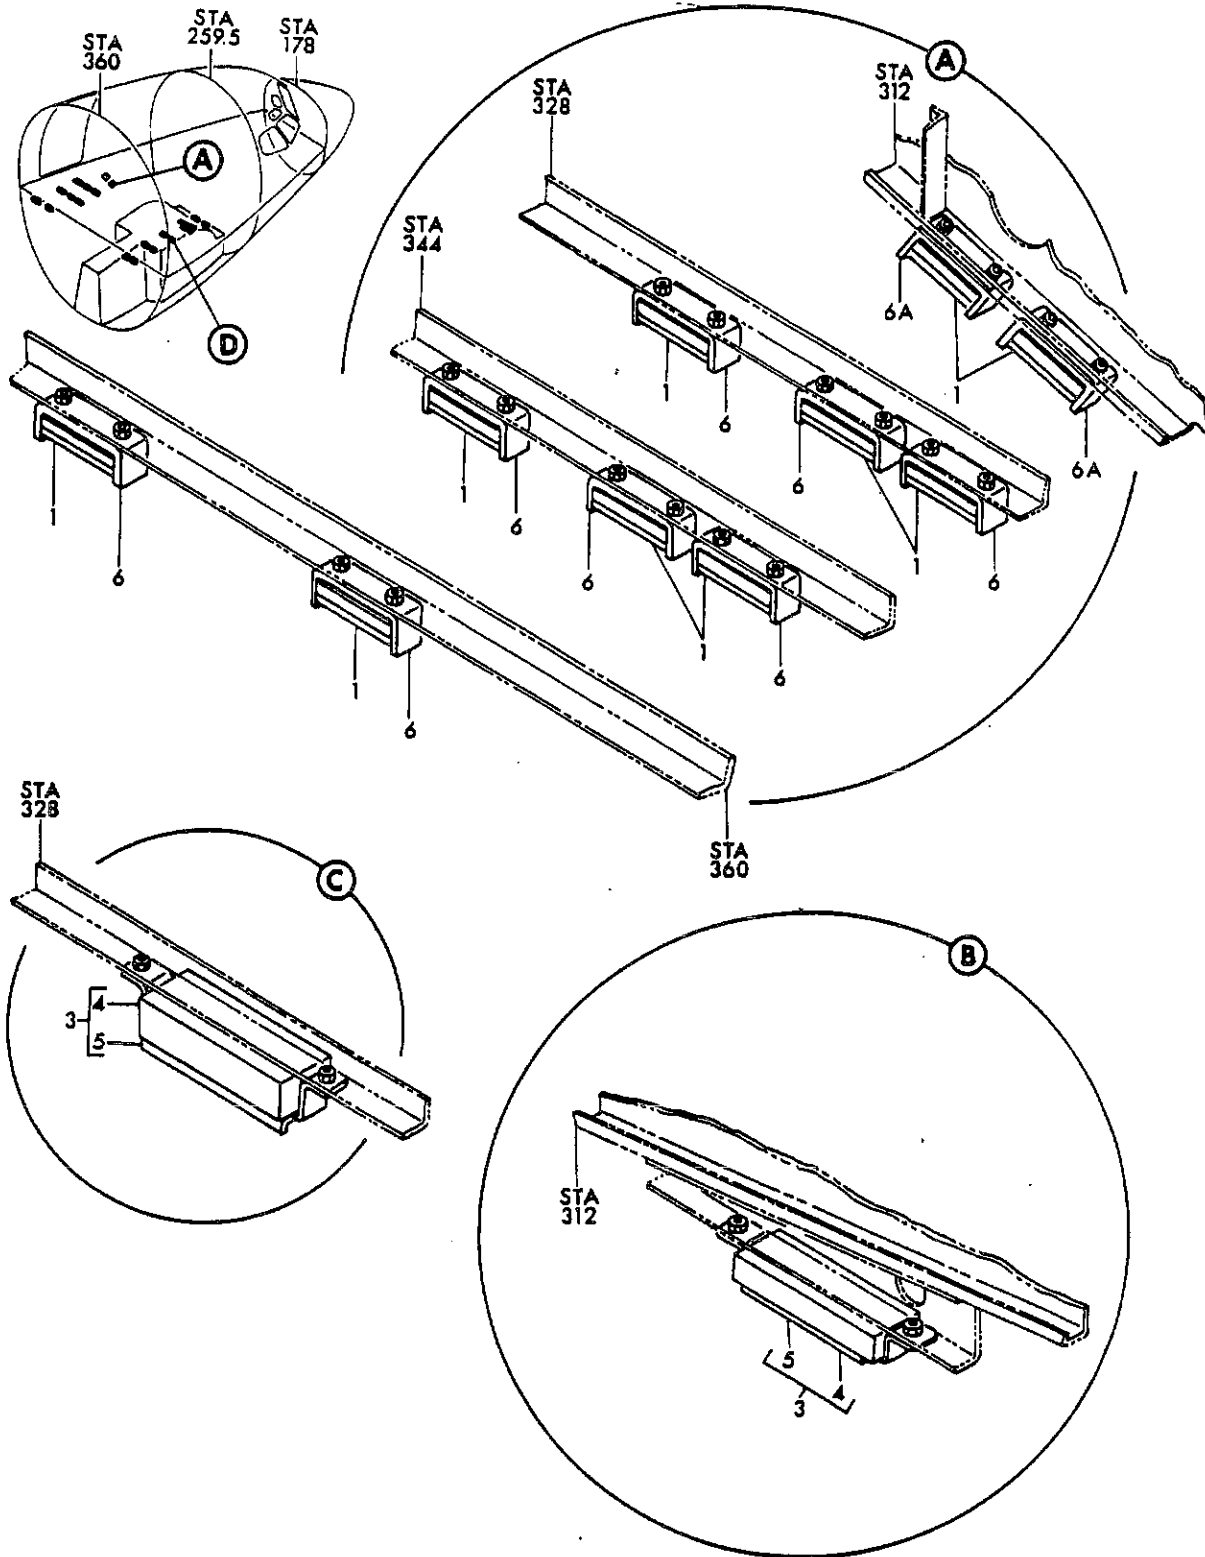


FIGURE 17C. CLAMP INSTL. SECTION 51 WIRE (SHEET 1)

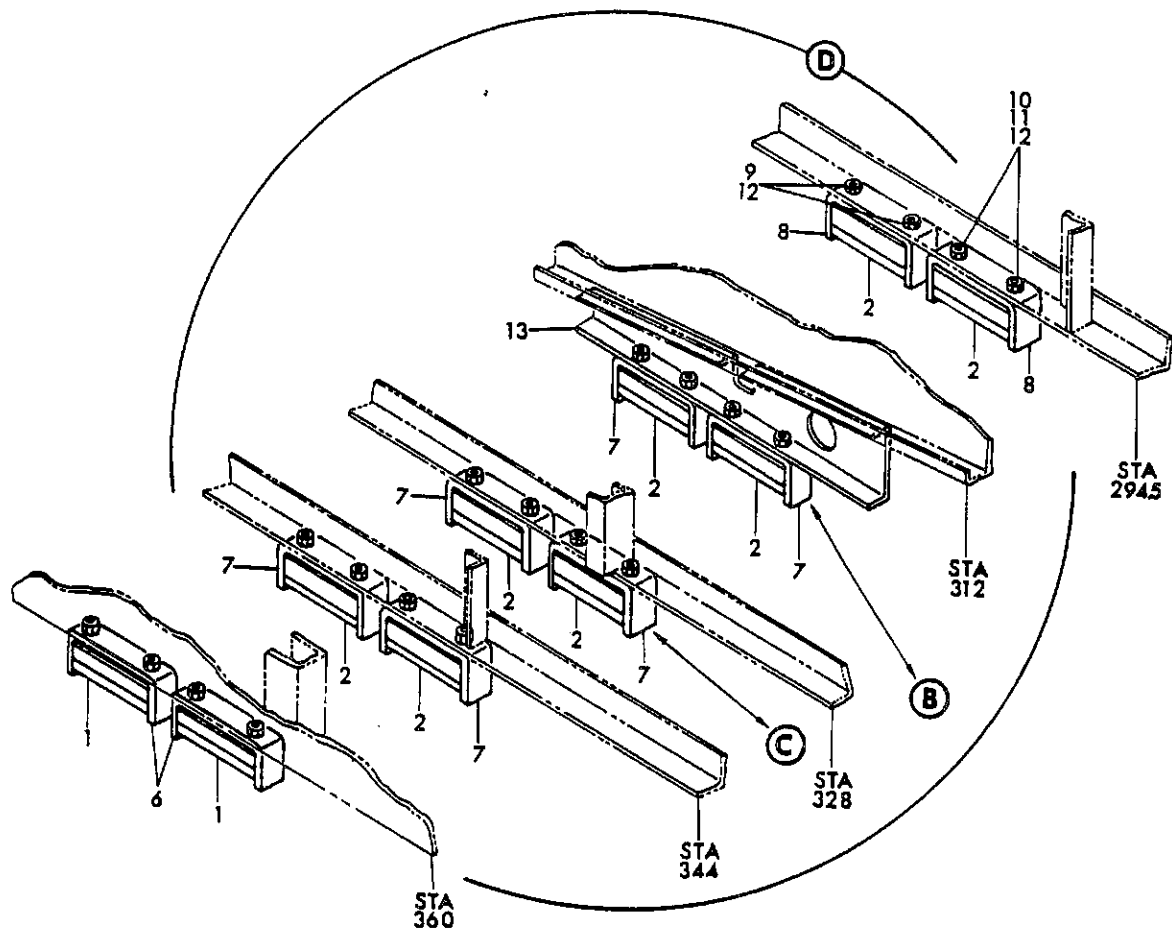


FIGURE 17C. CLAMP INSTL. SECTION 51 WIRE (SHEET 2)

NOV 21/90

24-13-170

DETAILED PARTS LIST
24-13-170
PAGE 1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
18	65-12018		RACEWAY INSTL, SECTION 51	0150	RF
			. RACEWAY INSTL, SECTION 51 ELECTRICAL WIRE (SEE 24-3, FIG. 1A, ITEM 101, 24-3, FIG. 1B, ITEM 92 AND 24-3, FIG. 1C, ITEM 89)		
R	1	69-9181-2	. . COVER, WIRE RACEWAY	0150	1
R		NAS603-6	. . ATTACHING PARTS	0150	10
R		AN960D10L	. . SCREW	0150	10
			. . WASHER		
R	2	69-9181	. . RACEWAY ASSY, WIRE	0150	1
			. . ATTACHING PARTS		
R		NAS514P1032-6	. . SCREW	0150	3
R		NAS603-6	. . SCREW	0150	2
R	3	66-9057-2	. . ANGLE ASSY, WIRE RACEWAY SUPPORT	0150	1
R	4	66-9317	. . CLAMP, WIRE RACEWAY HALF (USED WITH 66-9318).	0150	2
			. . ATTACHING PARTS		
R		NAS603-28	. . SCREW	0150	2
R	4A	BACC10DS2F	. . CLAMP, (USED WITH 66-9318-2).	0150	1
R	4B	BACC10DR4S	. . CHANNEL, (USED WITH 66-9318-2).	0150	1
			. . ATTACHING PARTS		
R		NAS514P1032-8	. . SCREW	0150	2
R		NAS679A3W	. . NUT	0150	2
R	4C	65-12018-1	. . BRACKET ASSY, SECTION 51 ELECTRICAL WIRE RACEWAY.	0150	1
R	4D	66-9318	. . . BRACKET ASSY, WIRE CLAMP SUPPORT (USED WITH	0150	1
			66-9317) (OPTIONAL 66-9318-2 WITH BACC10DS2F AND BACC10DR4S)		
R	5	66-9318-2	. . . BRACKET ASSY, WIRE CLAMP SUPPORT (USED WITH	0150	1
R			BACC10DS2F AND BACC10DR4S) (OPTIONAL TO 66-9318 WITH 66-9317)		
R		65-3835	. RACEWAY INSTL, MAIN AC POWER SHIELD EXTERNAL POWER.		RF
			WIRES (SEE 24-3, FIG. 1A, ITEM 100, 24-3, FIG. 1B, ITEM 91 AND 24-3, FIG. 1C, ITEM 88)		
	11	BACC10BN212LSH	. . CLAMP		1
	12	BACD40A8-72-5A2	. . DUCT		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					


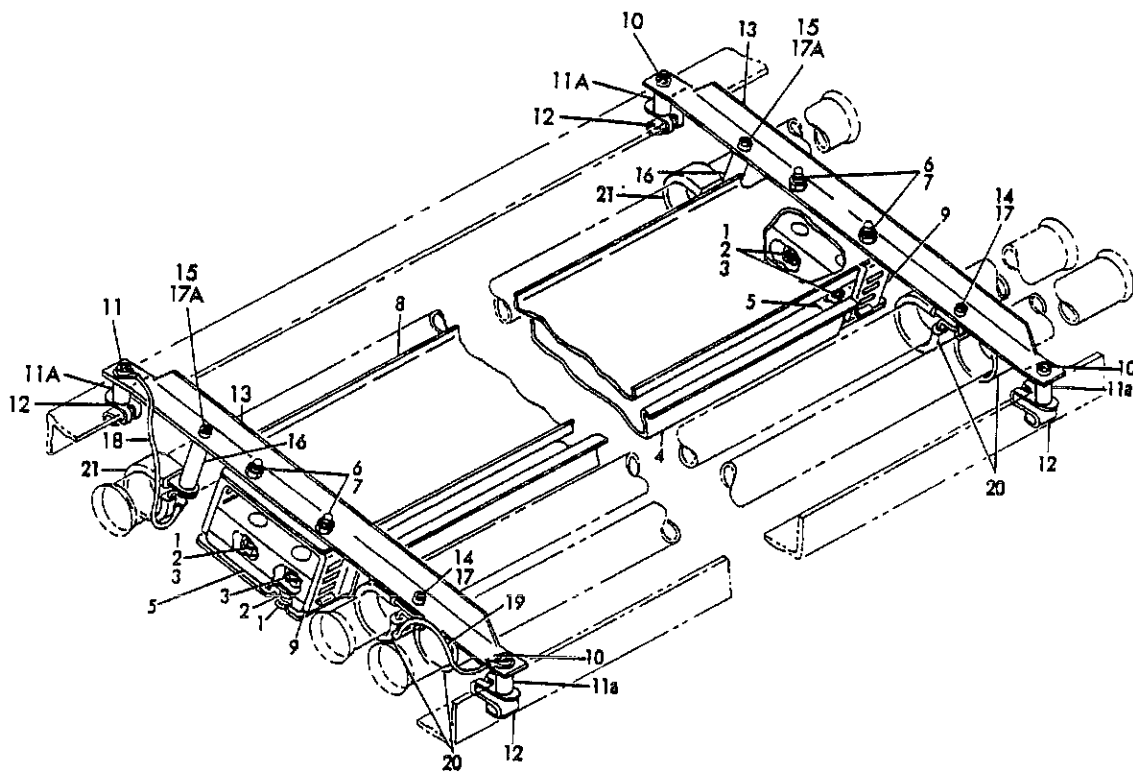


FIGURE 18D. RACEWAY INSTL, STATION 296 MAIN CROSS FEED

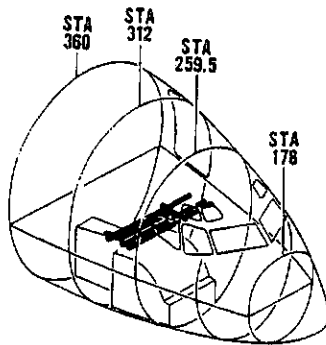

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
18D	65-58603-1	RACEWAY INSTL, STATION 296 MAIN CROSS FEED (SEE 24-3, . FIG. 1A, ITEM 116, 24-3, FIG. 1B, ITEM 106 AND 24-3, FIG. 1C, ITEM 104)	0150	RF
	65-58603-2	RACEWAY INSTL, STATION 296 MAIN CROSS FEED (SEE 24-3, . FIG. 1A, ITEM 116, 24-3, FIG. 1B, ITEM 106 AND 24-3, FIG. 1C, ITEM 104)	5199	RF
1	NAS603-8P	. SCREW		4
2	NAS42006-16	. SPACER.		4
3	NAS679A3W	. NUT		4
4	65-58604-1	. TRAY.		1
5	BACC10DS2F	. CLAMP		2
6	NAS514P1032-8	. SCREW		4
7	NAS679A3W	. NUT		4
8	65-58604-2	. COVER		1
9	BACC10DR5S	. CHANNEL		2
10	NAS603-20P	. SCREW		3
11	NAS603-22P	. SCREW		1
11A	NAS42006-48	. SPACER.		4
12	BACN10FX2	. NUT		4
13	69-45823-1	. SUPPORT		2
14	NAS603-11P	. SCREW		2
15	NAS603-32P	. SCREW	0150	2
16	NAS43003-96	. SPACER.	0150	2
17	NAS679A3W	. NUT		2
17A	NAS679A3W	. NUT	0150	2
18	MS25083-18B4	. JUMPER.	0150	1
19	MS25083-18B5	. JUMPER.		1
20	AN742020	. CLAMP		4
21	AN742020	. CLAMP	0150	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

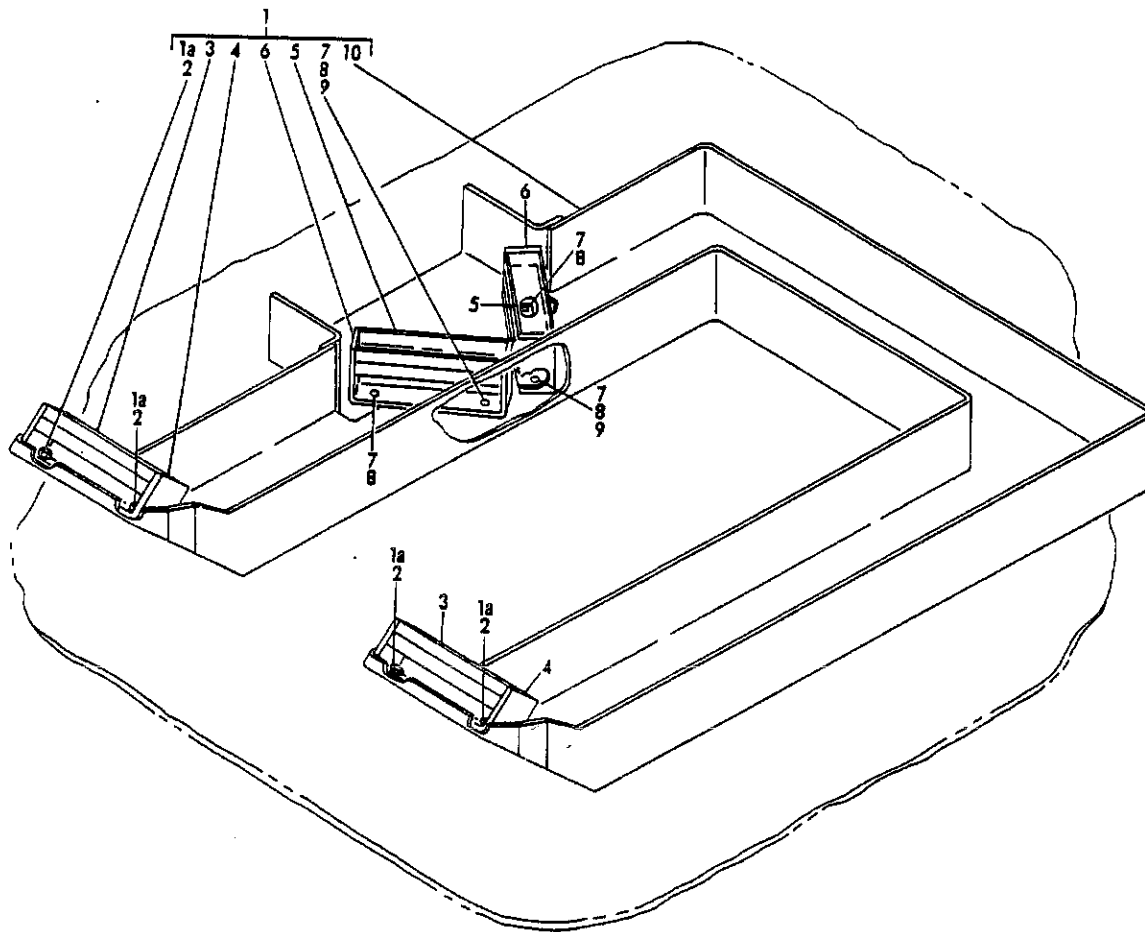
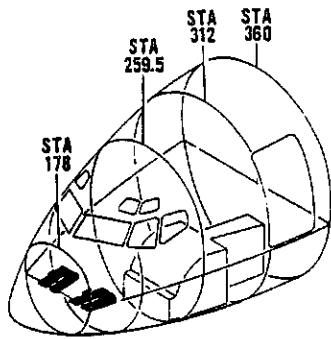


FIGURE 18G. RACEWAY INSTL, PILOTS HEEL REST

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
186	65-59977-1	RACEWAY INSTL, PILOTS HEEL REST (LH) (SEE 24-3, FIG. 5B, ITEM 123, 24-3, FIG. 5D, ITEM 119, 24-3, FIG. 5E, ITEM 80, 24-3, FIG. 5F, ITEM 176 AND (24-3, FIG. 12, ITEM 55)							5199	RF
	65-59977-2	RACEWAY INSTL, PILOTS HEEL REST (RH) (SEE 24-3, FIG. 5B, ITEM 124, 24-3, FIG. 5D, ITEM 120, 24-3, FIG. 5E, ITEM 81, 24-3, FIG. 5F ITEM 177, (24-3, FIG. 12, ITEM 55)							5199	RF
1	65-59977-11	. RACEWAY ASSY, (LH).							5199	1
1	65-59977-12	. RACEWAY ASSY, (RH).							5199	1
		ATTACHING PARTS								
	BACS12N10-10	. SCREW							5199	7
	BACN10JC3	. NUT							5199	7
		-----*								
1A	NAS514P1032-8	. . SCREW							5199	4
2	BACN10JC3	. . NUT							5199	4
3	BACC10DS3	. . CLAMP							5199	2
4	BACC10DR9	. . CHANNEL							5199	2
5	BACC10DS3	. . CLAMP							5199	2
6	BACC10DR8	. . CHANNEL							5199	2
		ATTACHING PARTS								
7	BACR15BA6A	. . RIVET							5199	4
8	AN960PD10L	. . WASHER.							5199	4
9	AN960PD10	. . WASHER.							5199	2
		-----*								
10	65-59977-9	. . RACEWAY, (LH ONLY).							5199	1
10	65-59977-10	. . RACEWAY, (RH ONLY).							5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

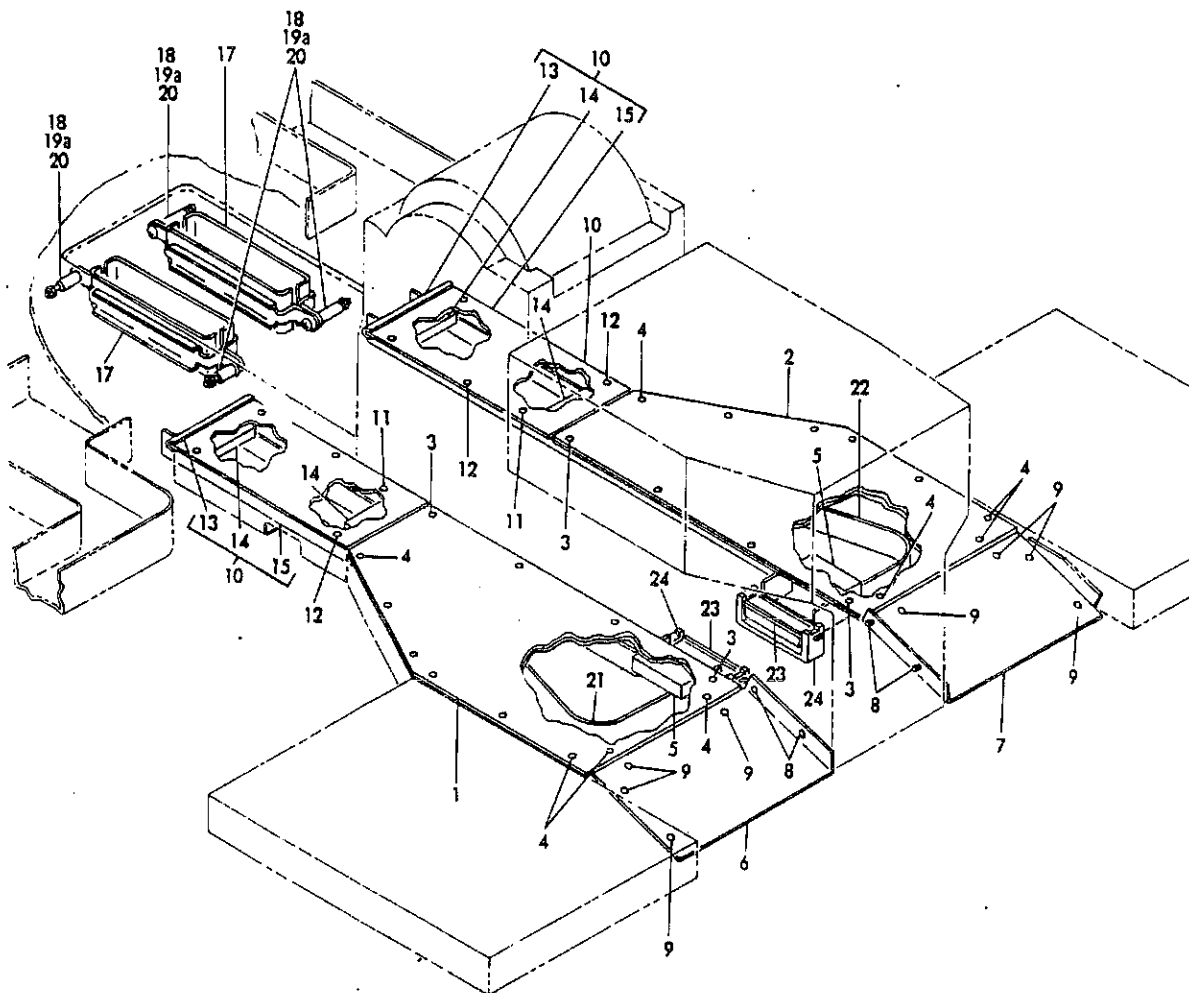
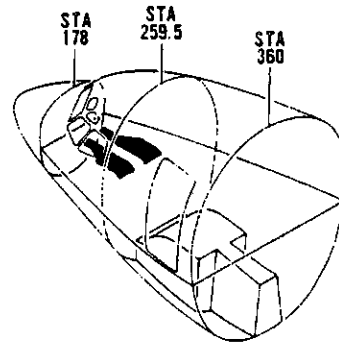


FIGURE 18J. COVER INSTL, CONTROL CABIN FLOOR WIRING RACEWAY
RACEWAY INSTL, PILOTS CONTROL STAND

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 18J			COVER INSTL, CONTROL CABIN FLOOR WIRING RACEWAY	5199	
	65-60389-3		RACEWAY INSTL, PILOTS CONTROL STAND		RF
			. COVER INSTL, CONTROL CABIN FLOOR WIRING RACEWAY (LH) (SEE 24-3, FIG. 5A, ITEM 162, 24-3, FIG. 5B, ITEM 157, 24-3, FIG. 5C, ITEM 160, 24-3, FIG. 5D, ITEM 150, 24-3, FIG. 5E, ITEM 116, 24-3, FIG. 5F, ITEM 101 AND 24-3, FIG. 12, ITEM 55)		
	65-60389-4		. COVER INSTL, CONTROL CABIN FLOOR WIRING RACEWAY (RH) (SEE 24-3, FIG. 5A, ITEM 163, 24-3, FIG. 5B, ITEM 158, 24-3, FIG. 5C, ITEM 161, 24-3, FIG. 5D, ITEM 151, 24-3, FIG. 5E, ITEM 117, 24-3, FIG. 5F, ITEM 102 AND 24-3, FIG. 12, ITEM 55)		RF
R 1	65-60389-11		. . PANEL ASSY, FLOOR (USED ON 65-60389-3).	0150	1
R 1	65-60389-63		. . PANEL ASSY, FLOOR (USED ON 65-60389-3).	5199	1
R 2	65-60389-12		. . PANEL ASSY, FLOOR (USED ON 65-60389-4).	0150	1
R 2	65-60389-64		. . PANEL ASSY, FLOOR (USED ON 65-60389-4).	5199	1
			ATTACHING PARTS		
	3 NAS514P428-8		. . SCREW		4
	4 NAS514P1032-8		. . SCREW		8
			-----*		
R 5	65-60389-68		. . . PAD, WIRE PROTECTION.	5199	1
R 6	65-60389-13		. . PANEL ASSY, FLOOR (USED ON 65-60389-3).	0150	1
R 6	65-60389-65		. . PANEL ASSY, FLOOR (USED ON 65-60389-3).	5199	1
R 7	65-60389-14		. . PANEL ASSY, FLOOR (USED ON 65-60389-4).	0150	1
R 7	65-60389-66		. . PANEL ASSY, FLOOR (USED ON 65-60389-4).	5199	1
			ATTACHING PARTS		
	8 NAS514P428-8		. . SCREW		2
	9 NAS514P1032-8		. . SCREW		4
			-----*		
R 10	65-60389-29		. . PANEL ASSY, FLOOR	0150	1
R 10	65-60389-73		. . PANEL ASSY, FLOOR	5199	1
			ATTACHING PARTS		
	11 NAS514P438-8		. . SCREW		1
	12 NAS514P1032-8		. . SCREW		4
			-----*		
	13 65-60389-59		. . . GROMMET, (EXTRUSION NO. BAC1521-365 X 5.28 IN.. LG)		1
R 14	65-60389-68		. . . PAD, WIRE PROTECTION.	5199	2
R 15	65-60389-58		. . . PANEL		1
R 17	65-22976-57		. . CLAMP	5199	2
			ATTACHING PARTS		
R 18	NAS603-28P		. . SCREW	5199	2
R 19A	NAS43DD3-80		. . SPACER.	5199	2
R 20	NAS679A3W		. . NUT	5199	2
			-----*		
R	65-60418-1		. RACEWAY INSTL, PILOTS CONTROL STAND (LH) (SEE 24-3, . FIG. 5B, ITEM 159, 24-3, FIG. 5D, ITEM 152, 24-3, FIG. 5E, ITEM 118 AND 24-3, FIG. 5F, ITEM 99A AND 24-3, FIG. 12 ITEM 55)	5199	RF
R			. RACEWAY INSTL, PILOTS CONTROL STAND (RH) (SEE 24-3, . FIG. 5B, ITEM 160, 24-3, FIG. 5D, ITEM 153 AND 24-3, FIG. 5E, ITEM 119, 24-3, FIG. 5F, ITEM 99B AND 24-3, FIG. 12 ITEM 55)	5199	RF
R 21	65-60389-5		. . RACEWAY, (USED ON 65-60418-1)	5199	1
R 22	65-60389-6		. . RACEWAY, (USED ON 65-60418-2)	5199	1
			ATTACHING PARTS		
R	BACS12N10-10		. . SCREW	5199	4
R	NAS679A3W		. . NUT	5199	4
			-----*		
R 23	BACC10DS2F		. . CLAMP	5199	1
R 24	BACC10DR3S		. . CHANNEL	5199	1
			ATTACHING PARTS		
R	NAS514P1032-8		. . SCREW	5199	2
R	NAS679A3W		. . NUT	5199	2
			-----*		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

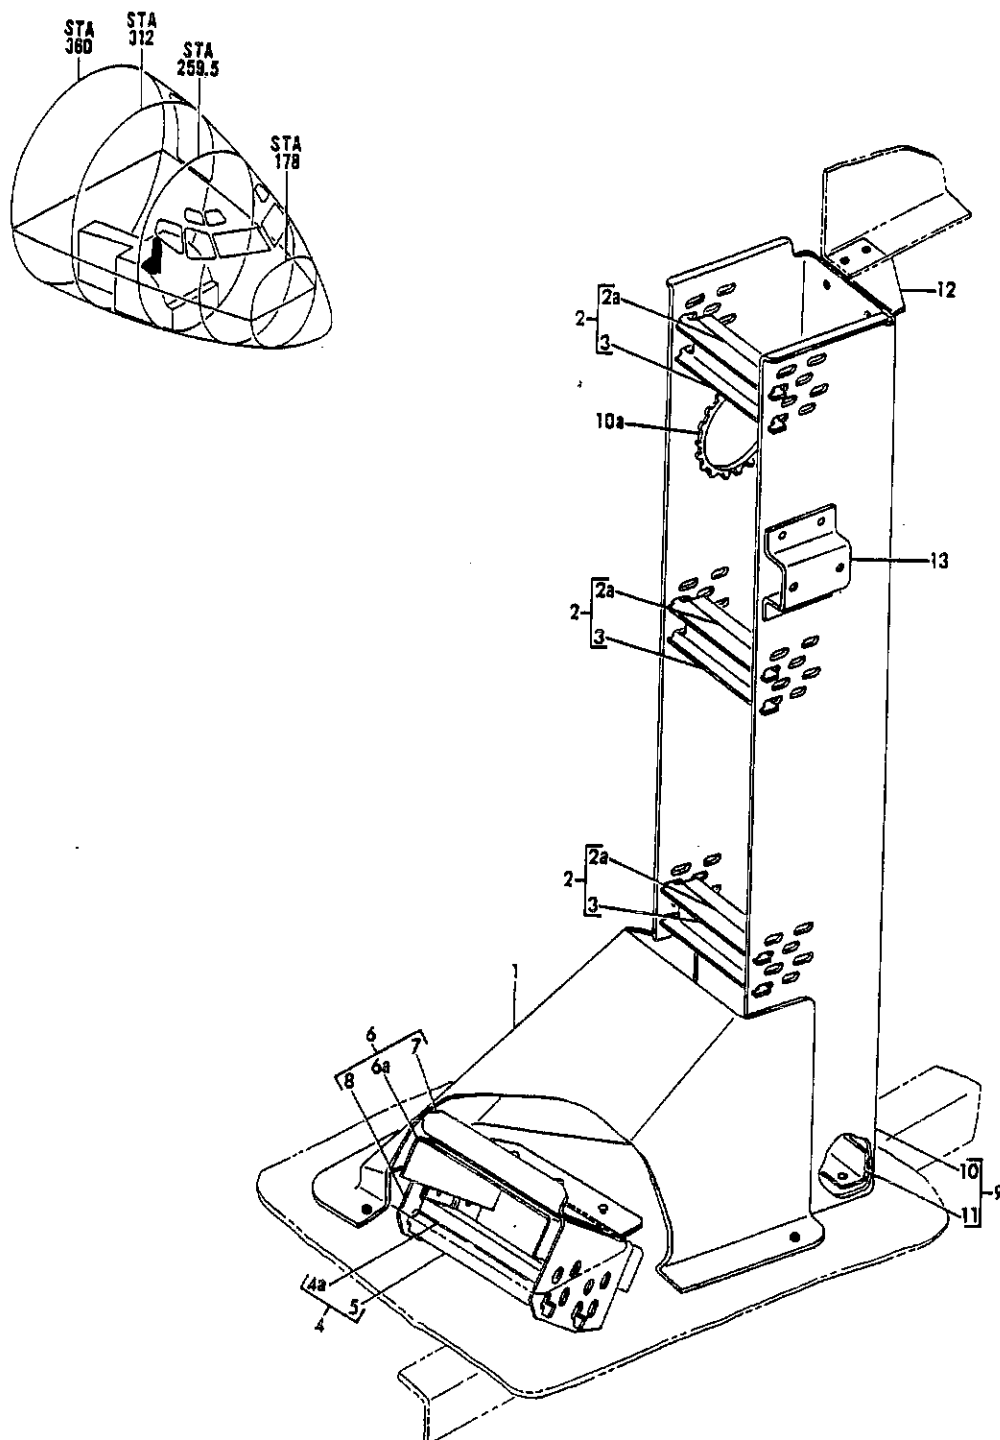


FIGURE 18K. RACEWAY INSTL, FLIGHT ENGINEERS TABLE P11 PANELS WIRE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
18K	65-61544-6		RACEWAY INSTL, FLIGHT ENGINEERS TABLE P11 PANELS WIRE . (SEE 24-3, FIG. 1A, ITEM 95, 24-3, FIG. 1B, ITEM, 86, 24-3, FIG. 1C, ITEM 83 AND 24-3 FIG. 12, ITEM 55)	5199	RF
1	65-61524-2		. HOOD.	5199	1
	NAS602-8P		. ATTACHING PARTS		
			. SCREW	5199	6
2	65-64231-11		. CLAMP ASSY, RACEWAY	5199	3
2A	65-64231-13		. . CUSHION, FOAM RUBBER.	5199	1
3	65-64231-12		. . CLAMP	5199	1
4	65-64231-8		. CLAMP ASSY, FLOOR	5199	1
4A	65-64231-10		. . CUSHION, FOAM RUBBER.	5199	1
5	65-64231-9		. . CLAMP	5199	1
6	65-64231-4		. CHANNEL ASSY, FLOOR	5199	1
	NAS603-8P		. ATTACHING PARTS		
	NAS679A3W		. SCREW	5199	3
			. NUT	5199	3
6A	65-64231-7		. . CUSHION, FOAM RUBBER.	5199	1
7	65-64231-5		. . PLATE	5199	1
8	65-64231-6		. . CHANNEL	5199	1
9	65-64231-15		. CHUTE ASSY.	5199	1
	BACS12N8-8		. ATTACHING PARTS		
	AN960P08		. SCREW	5199	2
	NAS679A08		. WASHER.	5199	2
			. NUT	5199	2
10	65-64231-16		. . CHUTE	5199	1
10A	BACG20AD490		. . GROMMET	5199	1
11	65-64231-3		. . BRACKET, SUPPORT.	5199	1
12	65-64231-14		. CLIP.	5199	1
	NAS603-6P		. ATTACHING PARTS		
	NAS679A3W		. SCREW	5199	2
			. NUT	5199	2
13	65-61544-2		. BRACKET, LAMP SUPPORT	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

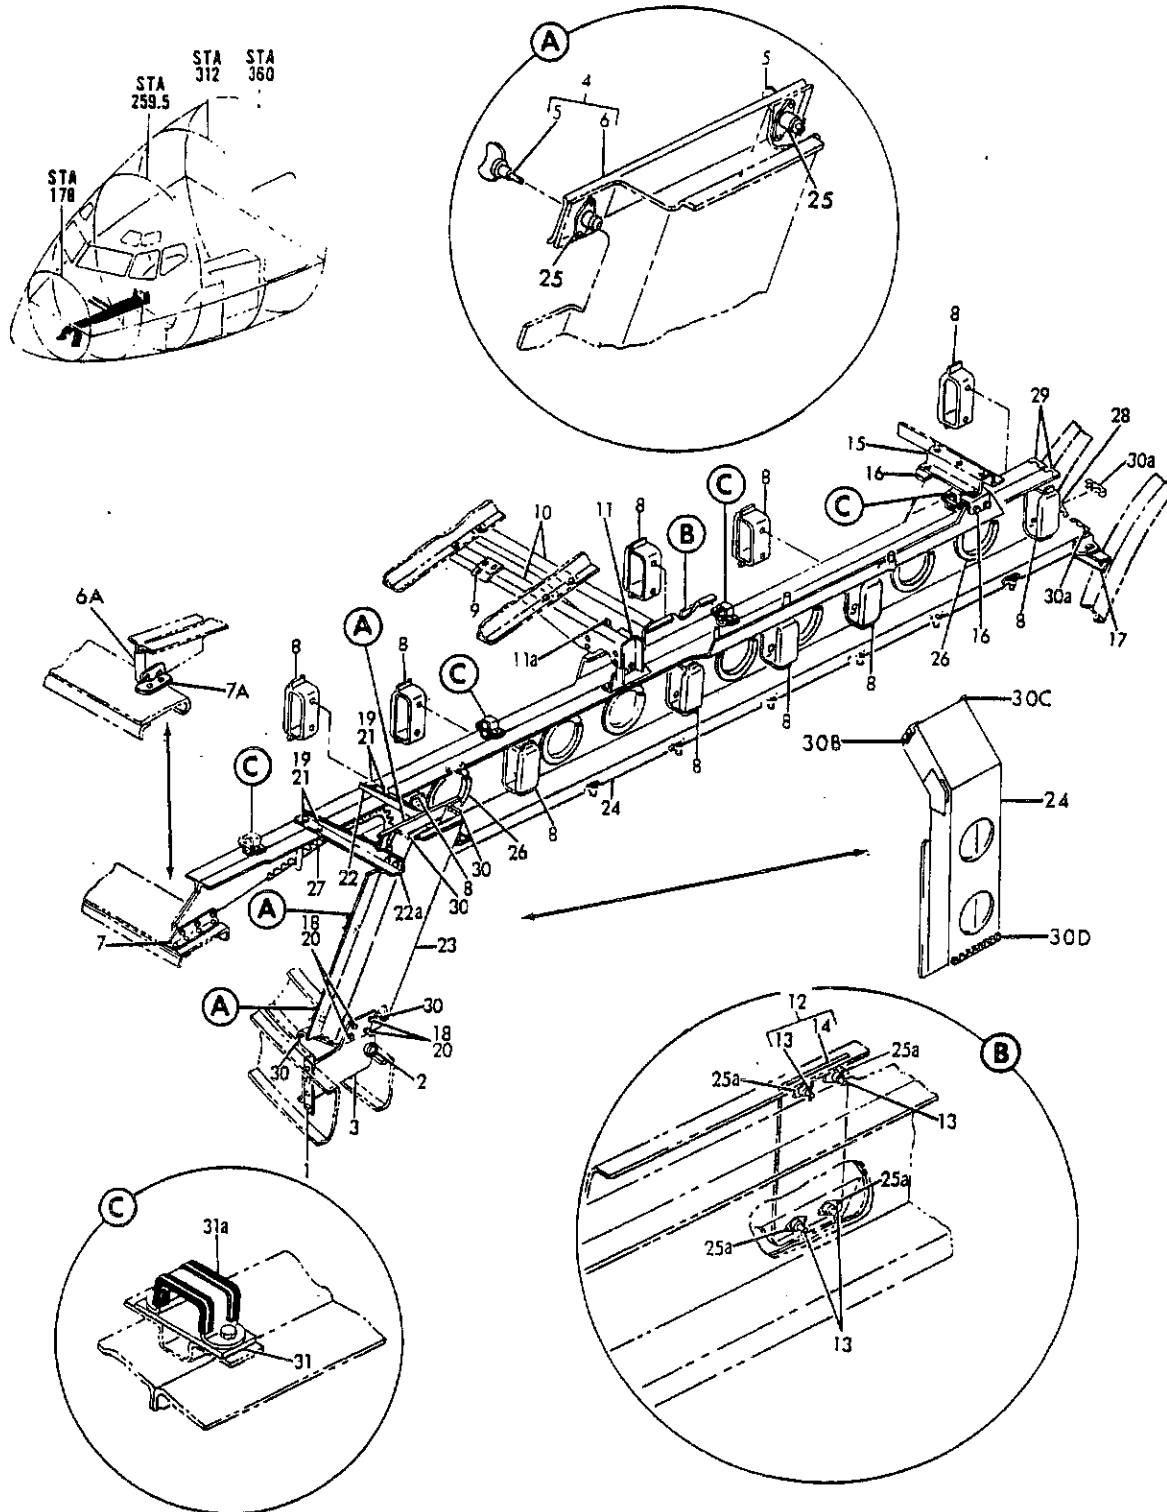


FIGURE 20A. RACEWAY INSTL, STATION 178 TO 270 ELECTRONIC WIRE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
20A	65-51310-1	RACEWAY INSTL, STATION 178 TO 270 ELECTRONIC WIRE (SEE 24-3, FIG. 5A, ITEM 145, 24-3, FIG. 5B, ITEM 140, 24-3, FIG. 5C, ITEM 159, 24-3, FIG. 5D, ITEM 147, 24-3, FIG. 5E, ITEM 99, 24-3, FIG. 5F, ITEM 86 AND 24-3, FIG. 11, ITEM 5)		RF
R	1	69-16921-1	. BRACKET, STATION 188 RACEWAY MOUNTING ANGLE	1
R		MS20470D4	ATTACHING PARTS	
R		MS20470D5	. RIVET	3
R			. RIVET	3
R	2	65-51309-12	. BRACKET, ELECTRONIC WIRE RACEWAY ANGLE.	1
R		BACS12CB3-6	ATTACHING PARTS	
R		NAS679A3W	. SCREW	4
R			. NUT	4
R	3	65-51309-19	. BRACKET, ANGLE.	1
R		NAS514P632-5	ATTACHING PARTS	
R		NAS679A06W	. BOLT.	4
R			. NUT	4
R	4	65-51309-3	. BRACKET ASSY, ELECTRONIC WIRE RACEWAY	3
R	5	BACS21Y4W	. STUD ASSY	2
R	6	65-51309-11	. CHANNEL, ELECTRONIC WIRE RACEWAY BRACKET.	1
R	6A	65-51310-4	. GUARD, RUBBER (EXTRUSION NO. BAC1521-365 X 2.9 IN. LG)	1
R	7	30-3155	. ANGLE, STATION 178 RACEWAY ATTACH	1
R		BACS12CB3-6	ATTACHING PARTS	
R		NAS679A3W	. SCREW	3
R			. NUT	3
R	7A	65-51309-66	. ANGLE, STATION 178 RACEWAY ATTACH	1
R		NAS514P1032-8	ATTACHING PARTS	
R		AN960PD10L	. SCREW	3
R		BACN10JC3	. WASHER.	3
R			. NUT	3
R	8	BACC10DS2F	. CLAMP	11
R	9	65-1346-2	. BRACKET, ELECTRONIC WIRE RACEWAY.	1
R		MS20470D5	ATTACHING PARTS	
R			. RIVET	2
R	10	60-7255	. ANGLE, STATION 225 RACEWAY SUPPORT ATTACH	2
R		MS20470D5	ATTACHING PARTS	
R		BACS12CB3-7	. RIVET	8
R		NAS679A3W	. SCREW	4
R			. NUT	4
R	11	63-1623-1	. CHANNEL, STATION 225 SUPPORT RACEWAY.	1
R	11A	63-1623-2	. CHANNEL, STATION 225 SUPPORT RACEWAY.	1
R		BACS12CB3-6	ATTACHING PARTS	
R		NAS679A3W	. SCREW	4
R			. NUT	4
R	12	65-51309-4	. GUARD ASSY, ELECTRONIC WIRE RACEWAY	1
R	13	BACS21Y3R	. STUD ASSY	4
R	14	65-51309-15	. GUARD, ELECTRONIC WIRE RACEWAY.	1
R	15	66-1682	. ZEE, ELECTRONIC WIRE RACEWAY SUPPORT.	1
R		BACS12CB3-6	ATTACHING PARTS	
R		NAS679A3W	. SCREW	5
R		BACN10FX1	. NUT	3
R			. NUT	2
R	16	30-3153-2	. ANGLE, STATION 259.5 RACEWAY ATTACH	2
R		BACS12CB3-6	ATTACHING PARTS	
R		NAS679A3W	. SCREW	4
R			. NUT	4
R	17	66-13868-1	. ANGLE, ELECTRONIC WIRE RACEWAY SUPPORT.	1
R		MS20470D5	ATTACHING PARTS	
R		BACS12CB3-6	. RIVET	2
R		NAS43DD3-3	. SCREW	2
R		AN970-3	. SPACER.	2
R		NAS679A3W	. WASHER.	2
R			. NUT	2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *707* *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 20A 18	NAS514P632-5	. BOLT.	0150	4
R 19	NAS514P1032-5	. BOLT.	0150	4
R 20	NAS679A06W	. NUT	0150	4
R 21	NAS679A3W	. NUT	0150	4
R 22	65-51309-48	. SUPPORT, ANGLE.	0150	1
R 22A	65-51309-49	. SUPPORT, ANGLE.	0150	1
R 23	65-51309-51	. RACEWAY ASSY, ELECTRONIC WIRE	0150	1
R 24	65-51309-1	. RACEWAY ASSY, ELECTRONIC WIRE	0150	1
R 24	65-51309-63	. RACEWAY ASSY.	5199	1
R 25	8ACR11Y2	. . RECEPTACLE, (USED ON 65-51309-51)	0150	6
R 25A	BACR11Y2	. . RECEPTACLE, (USED ON 65-51309-1, -63, -45, -64, . . -56, -65, -69) ATTACHING PARTS		4
	MS2042603	. . RIVET		8
R	MS20426D3	. . RIVET	0150	12
		-----*		
	26 NAS557-48C	. . GROMMET, (USED ON 65-51309-1, -63, -45, -64, -56, . -65, -69)		7
	27 BACG20ZC1500	. . GROMMET, (USED ON 65-51309-1, -63, -45, -64, -56, . -65, -69)		1
	28 BACG20ZCS20	. . GROMMET, (USED ON 65-51309-1, -63, -45, -64, -56, . -65, -69)		1
	29 BACG20ZB160	. . GROMMET, (USED ON 65-51309-1, -63, -45, -64, -56, . -65, -69)		2
R	30 BACG20ZB170	. . GROMMET, (USED ON 65-51309-51)	0150	4
	30A BACG20ZB170	. . GROMMET, (USED ON 65-51309-1, -63, -45, -64, -56, . -65, -69)		2
R	31 65-51309-14	. SHIM, ELECTRONIC WIRE RACEWAY	5199	4
R 31A	TA9C8D8-16SR	. CLAMP, (V84971)	5199	4
R 31A	TA9C8D12-22SR	. CLAMP, (V84971)	0150	4
		ATTACHING PARTS		
	BACS12CB3-8	. SCREW		8
	BACN10FX1	. NUT		8
		-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

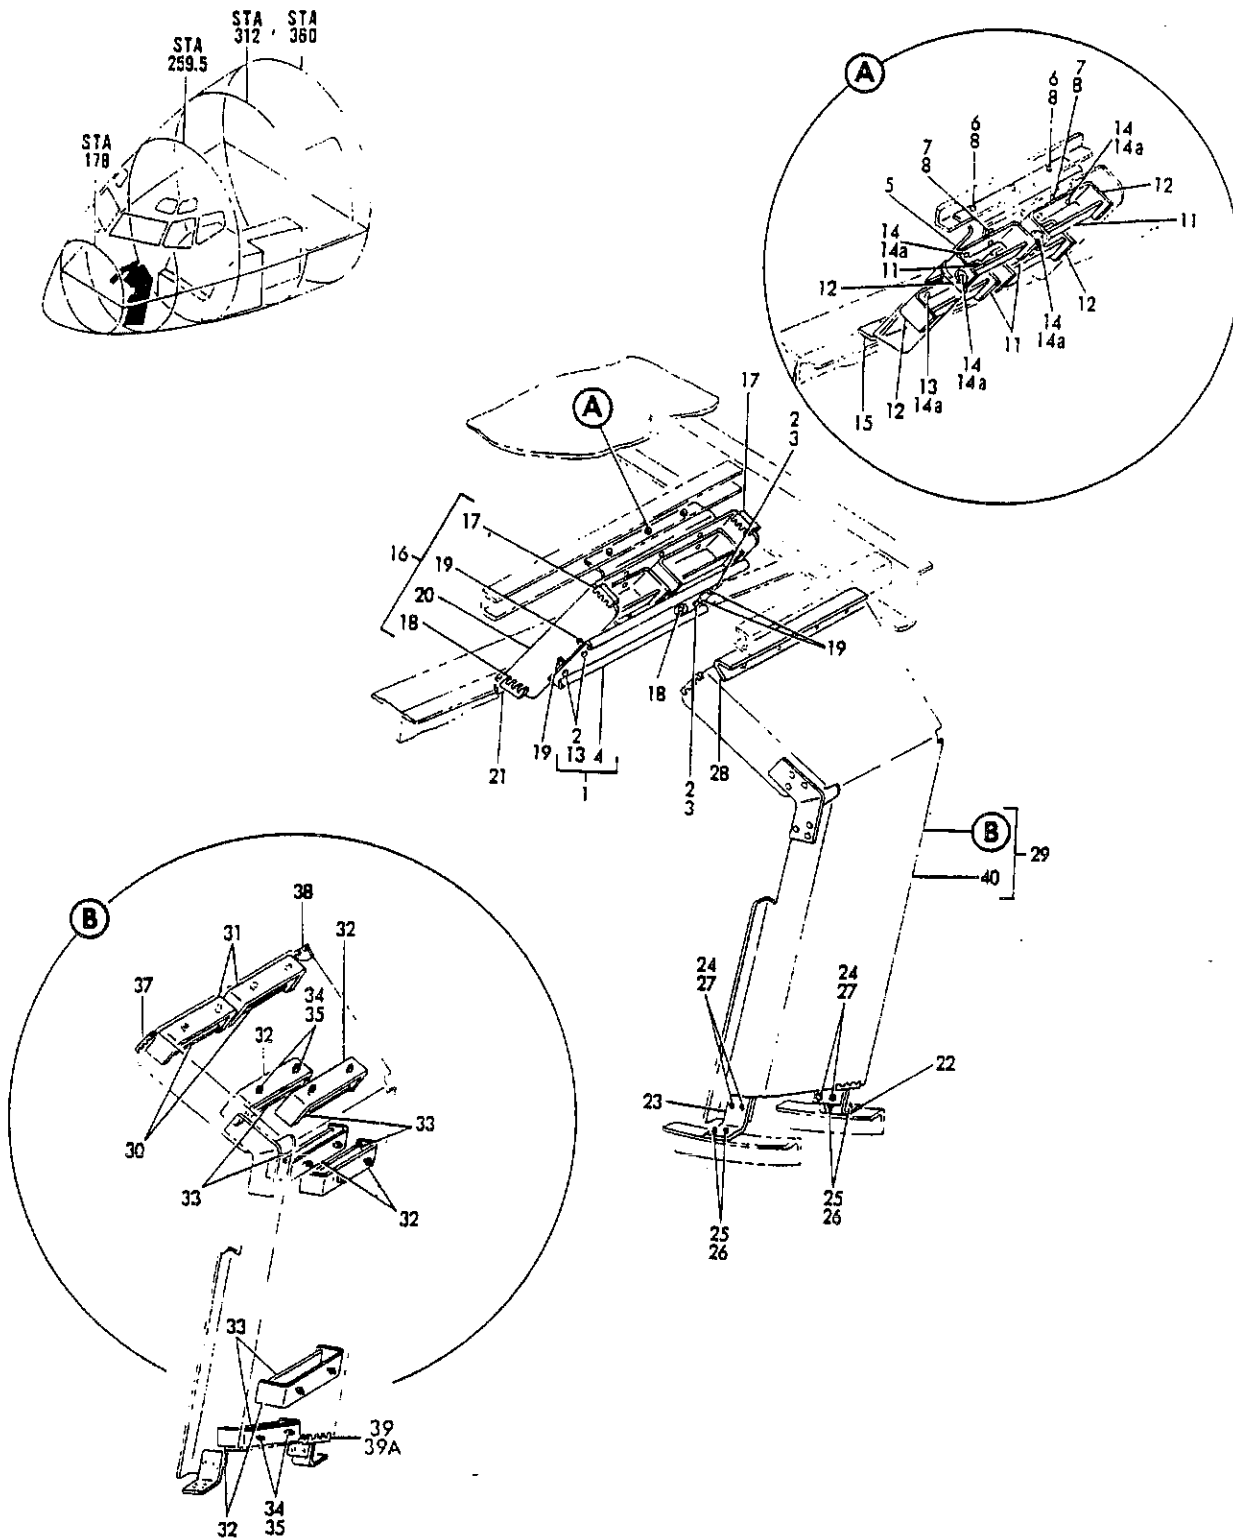


FIGURE 208. RACEWAY INSTL, STATION 178 TO 270 ELECTRONIC WIRE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
20B	65-51310-2	RACEWAY INSTL, STATION 178 TO 270 ELECTRONIC WIRE . . .	5199	RF
		. RACEWAY INSTL, STATION 178 TO 270 ELECTRONIC WIRE . . . (SEE 24-3, FIG. 5B, ITEM 141, 24-3, FIG. 5D, ITEM 14B, 24-3, FIG. 5E, ITEM 100, 24-3, FIG. 5F, ITEM 85A AND 24-3, FIG. 11, ITEM 3)	5199	
1	65-51309-52	. . . COVER ASSY.	5199	1
2	BACW10X5	. . . WASHER.	5199	4
3	BACS21Z3R	. . . STUD.	5199	4
4	65-51309-55	. . . COVER.	5199	1
5	65-51309-23	. . . ANGLE	5199	1
		ATTACHING PARTS		
6	NAS601-8P	. . . SCREW	5199	3
7	NAS514P1032-6P	. . . SCREW	5199	3
8	NAS679A06W	. . . NUT	5199	6

11	BACC10DS2F	. . . CLAMP	5199	4
12	BACC10DR5S	. . . CHANNEL	5199	4
		ATTACHING PARTS		
13	NAS514P1032-8	. . . SCREW	5199	1
14	NAS514P1032-8P	. . . SCREW	5199	7
14A	NAS679A3W	. . . NUT	5199	8

15	65-51309-22	. . . ANGLE	5199	1
		ATTACHING PARTS		
	NAS514P632-6P	. . . SCREW	5199	7
	NAS679A06W	. . . NUT	5199	7

16	65-51309-53	. . . RACEWAY ASSY.	5199	1
17	BACG20ZA150	. . . GROMMET	5199	2
18	BACG20ZA180	. . . GROMMET	5199	2
19	BACR11AB1	. . . RECEPTACLE.	5199	4
20	65-51309-54	. . . RACEWAY	5199	1
21	BACG20ZB970	. . . GROMMET	5199	1
	65-51310-3	. RACEWAY INSTL, STATION 178 TO 270 ELECTRONIC WIRE . . . (SEE 24-3, FIG. 5B, ITEM 142, 24-3, FIG. 5D, ITEM 149, 24-3, FIG. 5E, ITEM 101, 24-3, FIG. 5F, ITEM 85B AND 24-3, FIG. 11, ITEM 4)	5199	RF
22	65-51309-28	. . . ANGLE	5199	1
23	65-51309-29	. . . ANGLE	5199	1
		ATTACHING PARTS		
24	NAS514P1032-5P	. . . SCREW	5199	4
25	NAS603-6P	. . . SCREW	5199	4
26	NAS679A3W	. . . NUT	5199	4
27	BACN10FX1W	. . . NUT	5199	4

28	65-51309-27	. . . ANGLE	5199	1
29	65-51309-67	. . . RACEWAY ASSY.	5199	1
31	BACC10DS2F	. . . CHANNEL	5199	2
		ATTACHING PARTS		
	NAS514P1032-8P	. . . SCREW	5199	4
	NAS679A3W	. . . NUT	5199	4

37	BACG20ZA170	. . . GROMMET	5199	1
38	BACG20ZA160	. . . GROMMET	5199	1
40	65-51309-68	. . . RACEWAY	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

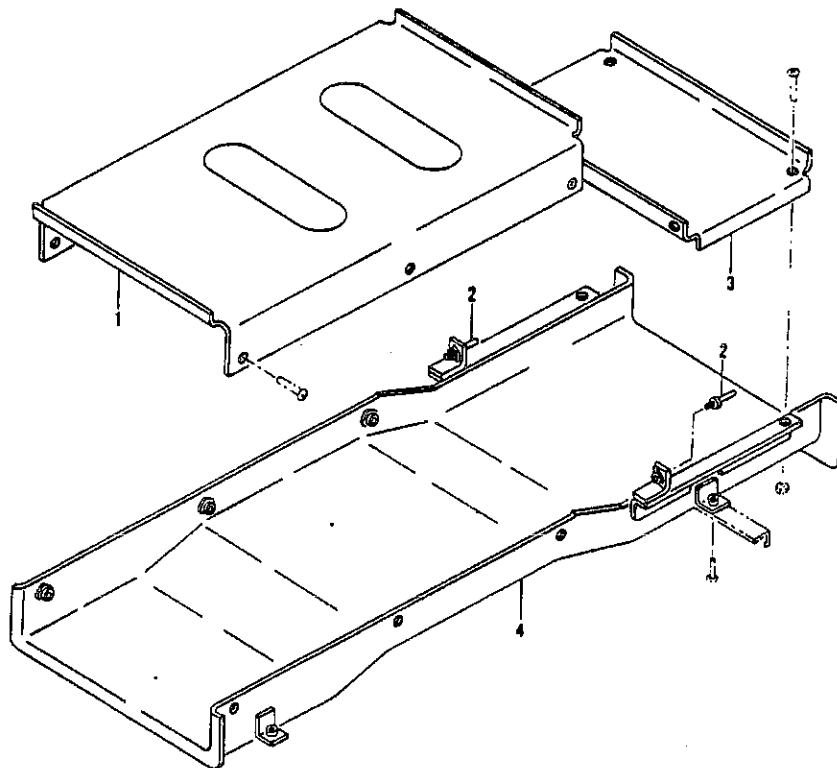
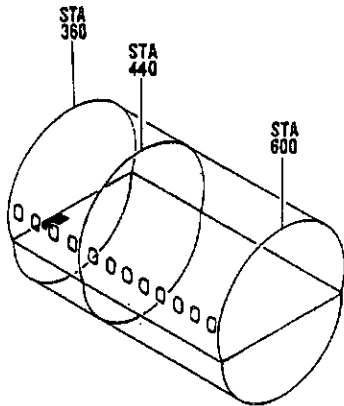


FIGURE 21. RACEWAY INSTL, STATION 360 TO 380 ELECTRONIC WIRING (LH)

BOEING *707* Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
21	65-19804-1	RACEWAY INSTL, STATION 360 TO 380 ELECTRONIC WIRING . . (LH) (SEE 24-3, FIG. 6A, ITEM 150, 24-3, FIG. 6B, ITEM 125, 24-3, FIG. 6C, ITEM 104, 24-3, FIG. 6D, ITEM 65, 24-3, FIG. 6E, ITEM 74 AND 24-3, FIG. 6F, ITEM 53)								RF
1	65-18982-1	. COVER, STATION 360 TO 380 ELECTRONIC WIRING RACEWAY .								1
	NAS603-6	. ATTACHING PARTS								6
2	66-1398-6	. SCREW, (OPTIONAL BACS12CB3-6)								2
	NAS679A06W	. PIN, ELECTRONIC SHELF UNIT INDEX.								2
3	69-15461-1	. ATTACHING PARTS								2
	NAS603-6	. NUT								2
	NAS679A3W	. GUARD, CABLE COVER.								1
4	65-19833-1	. ATTACHING PARTS								2
	NAS603-B	. SCREW, (OPTIONAL BACS12CB3-8)								4
MISSING ITEM NUMBERS ARE NOT APPLICABLE										


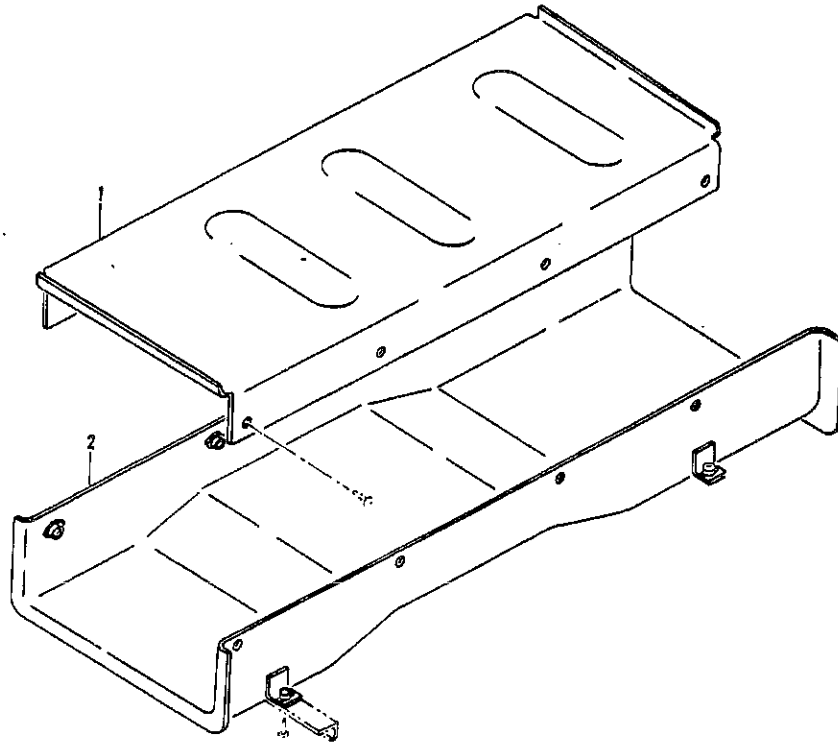


FIGURE 22. RACEWAY INSTL. STATION 360 TO 380 ELECTRONIC WIRING (RH)

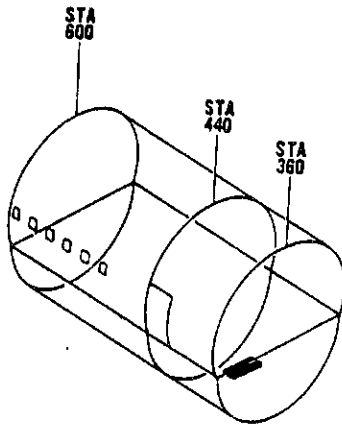

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
22	65-19804-2	RACEWAY INSTL, STATION 360 TO 380 ELECTRONIC WIRING . . (RH) (SEE 24-3, FIG. 6A, ITEM 151, 24-3, FIG. 6B, ITEM 126, 24-3, FIG. 6C, ITEM 105, 24-3, FIG. 6D, ITEM 66, 24-3, FIG. 6E, ITEM 75 AND 24-3, FIG. 6F, ITEM 54)								RF
1	65-18982-2	. COVER, STATION 360 TO 380 ELECTRONIC WIRING RACEWAY .								1
	NAS603-6	. ATTACHING PARTS								8
2	65-19833-2	. RACEWAY ASSY, STATION 360 TO 380 ELECTRONIC WIRING. .								1
	NAS603-8	. ATTACHING PARTS								4
		. SCREW, (OPTIONAL BACS12CB3-8)								
		-----*-----								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

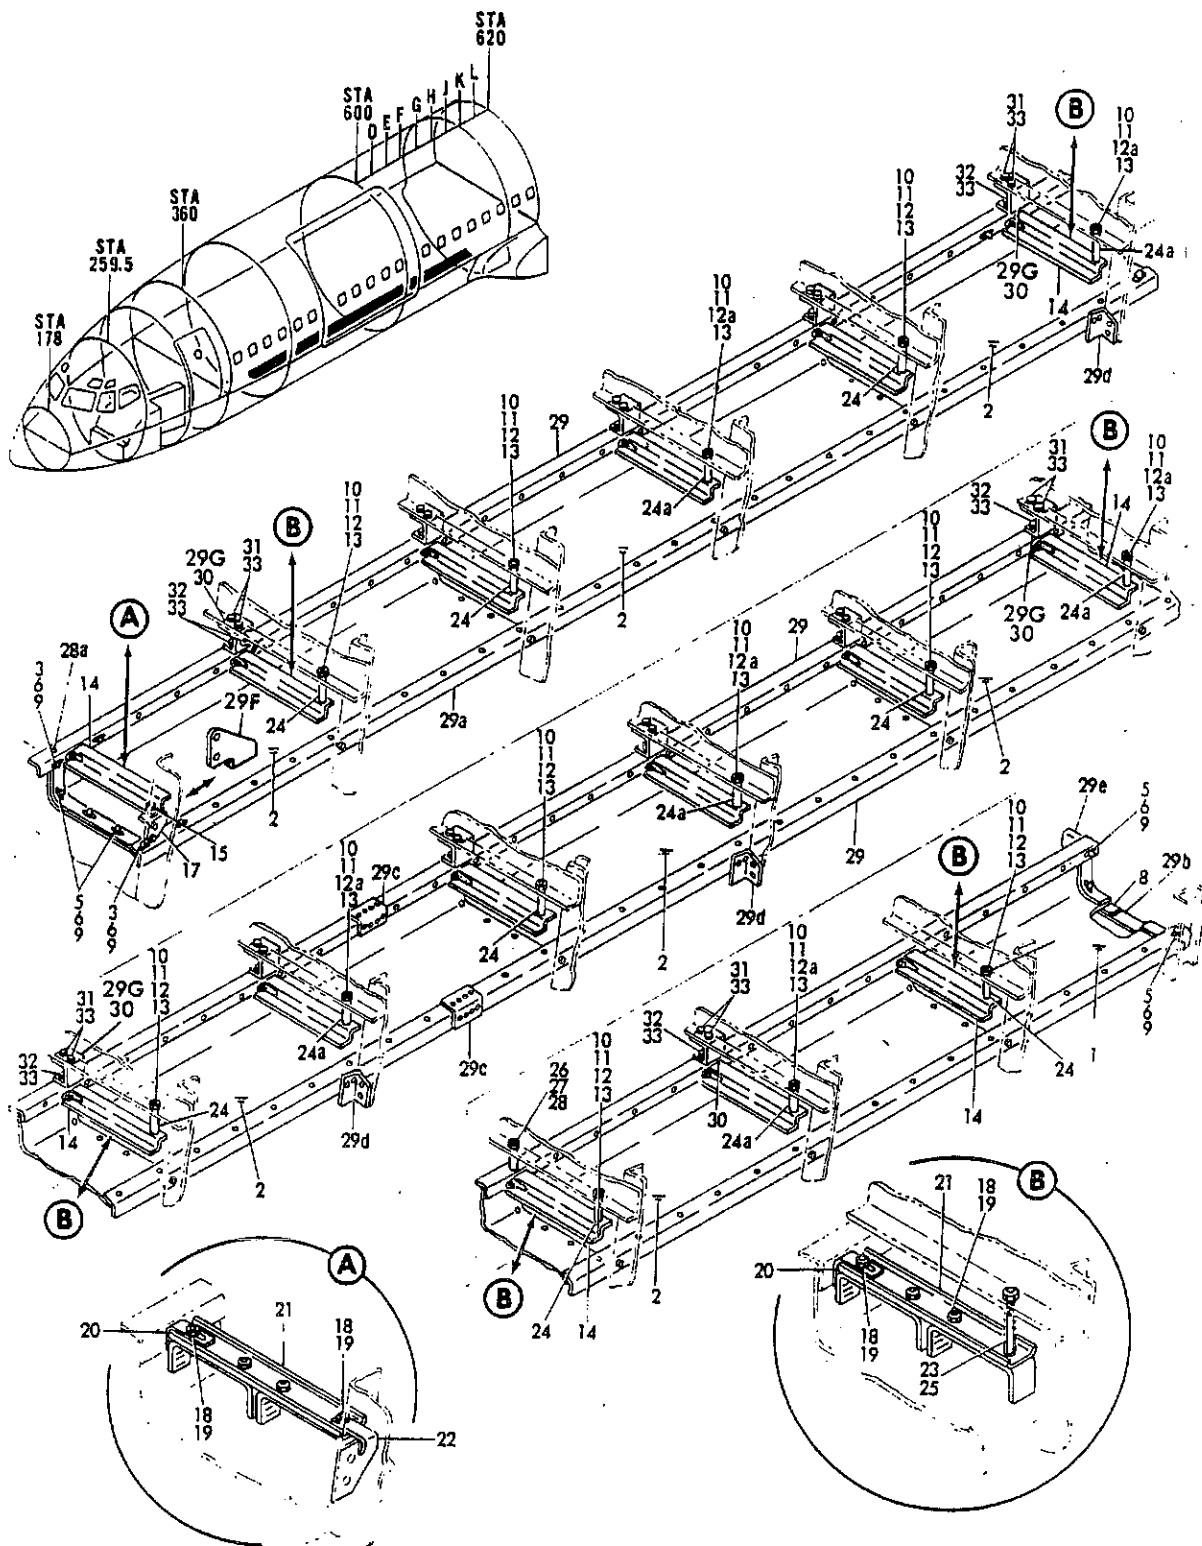


FIGURE 24A. RACEWAY INSTL, CARGO COMPARTMENT ELECTRONIC WIRE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
24A	65-34736-1	RACEWAY INSTL, CARGO COMPARTMENT ELECTRONIC WIRE (SEE . 24-3, FIG. 6B, ITEM 146A, 24-3, FIG. 6C, ITEM 133, 24-3, FIG. 6D, ITEM 76, 24-3, FIG. 6E, ITEM 84 AND 24-3, FIG. 6F, ITEM 60)								RF
	65-34736-4	COVER INSTL								1
1	65-34737-5	COVER ASSY.								1
2	65-34737-1	COVER ASSY.							5199	7
		ATTACHING PARTS								
3	BACS21Y7R	STUD ASSY, (DO NOT MIX OPTIONAL PARTS WITH. PREFERRED PARTS ON ANY AIRPLANE) (USED ON 65-34737-1) (OPTIONAL BACS21Y7 (DO NOT MIX OPTIONAL PARTS WITH PREFERRED PARTS ON ANY AIRPLANE))							5199	2
		STUD ASSY, (DO NOT MIX OPTIONAL PARTS WITH. PREFERRED PARTS ON ANY AIRPLANE) (USED ON 65-34737-1) (OPTIONAL TO BACS21Y7R (DO NOT MIX OPTIONAL PARTS WITH PREFERRED PARTS ON ANY AIRPLANE))							5199	2
3	BACS21Y7	STUD ASSY, (DO NOT MIX OPTIONAL PARTS WITH. PREFERRED PARTS ON ANY AIRPLANE) (USED ON 65-34737-1) (OPTIONAL TO BACS21Y7R (DO NOT MIX OPTIONAL PARTS WITH PREFERRED PARTS ON ANY AIRPLANE))							5199	2
		STUD ASSY, (DO NOT MIX OPTIONAL PARTS WITH. PREFERRED PARTS ON ANY AIRPLANE) (OPTIONAL BACS21Y4 (DO NOT MIX OPTIONAL PARTS WITH PREFERRED PARTS ON ANY AIRPLANE))							5199	AR
5	BACS21Y4R	STUD ASSY, (DO NOT MIX OPTIONAL PARTS WITH. PREFERRED PARTS ON ANY AIRPLANE) (OPTIONAL BACS21Y4 (DO NOT MIX OPTIONAL PARTS WITH PREFERRED PARTS ON ANY AIRPLANE))							5199	AR
		STUD ASSY, (DO NOT MIX OPTIONAL PARTS WITH. PREFERRED PARTS ON ANY AIRPLANE) (OPTIONAL TO BACS21Y4R (DO NOT MIX OPTIONAL PARTS WITH PREFERRED PARTS ON ANY AIRPLANE))							5199	AR
5	BACS21Y4	WASHER.								AR
		*-----								
6	BACW10X4	SEAL.								1
		RECEPTACLE.								AR
8	65-34737-4	SUPPORT INSTL								1
9	BACR11Y2K	SCREW								46
	65-34736-8	NUT								46
18	NAS514P1032-10	ANGLE								15
19	BACN10FX1W	CHANNEL ASSY.								15
20	69-39347-3	ANGLE								1
21	69-39347-1	BOLT.								14
22	69-39347-4	SPACER.								8
23	NAS333CPA25	SPACER.								6
24	NAS43DD3-139	NUT								14
24A	NAS43DD3-143	SUPPORT INSTL								1
25	NAS679A3W	SCREW								1
	65-34736-2	SPACER.								1
26	NAS514P1032-40	NUT								1
27	NAS43DD3-128	SCREW								1
28	NAS679A3W	SPACER.								1
28A	NAS514P1032-7	NUT								1
29	65-34736-5	SCREW								3
29A	65-34736-6	ANGLE								1
29B	69-28777-2	ANGLE								1
29C	69-28777-5	ANGLE								2
29D	69-28777-7	ANGLE								3
29E	69-28777-8	ANGLE								1
30	65-34736-7	CHANNEL								12
		ATTACHING PARTS								
31	BACS12CB3-12	SCREW								24
32	NAS514P1032-7	SCREW								24
33	NAS679A3W	NUT								48
		*-----								

MISSING ITEM NUMBERS ARE NOT APPLICABLE

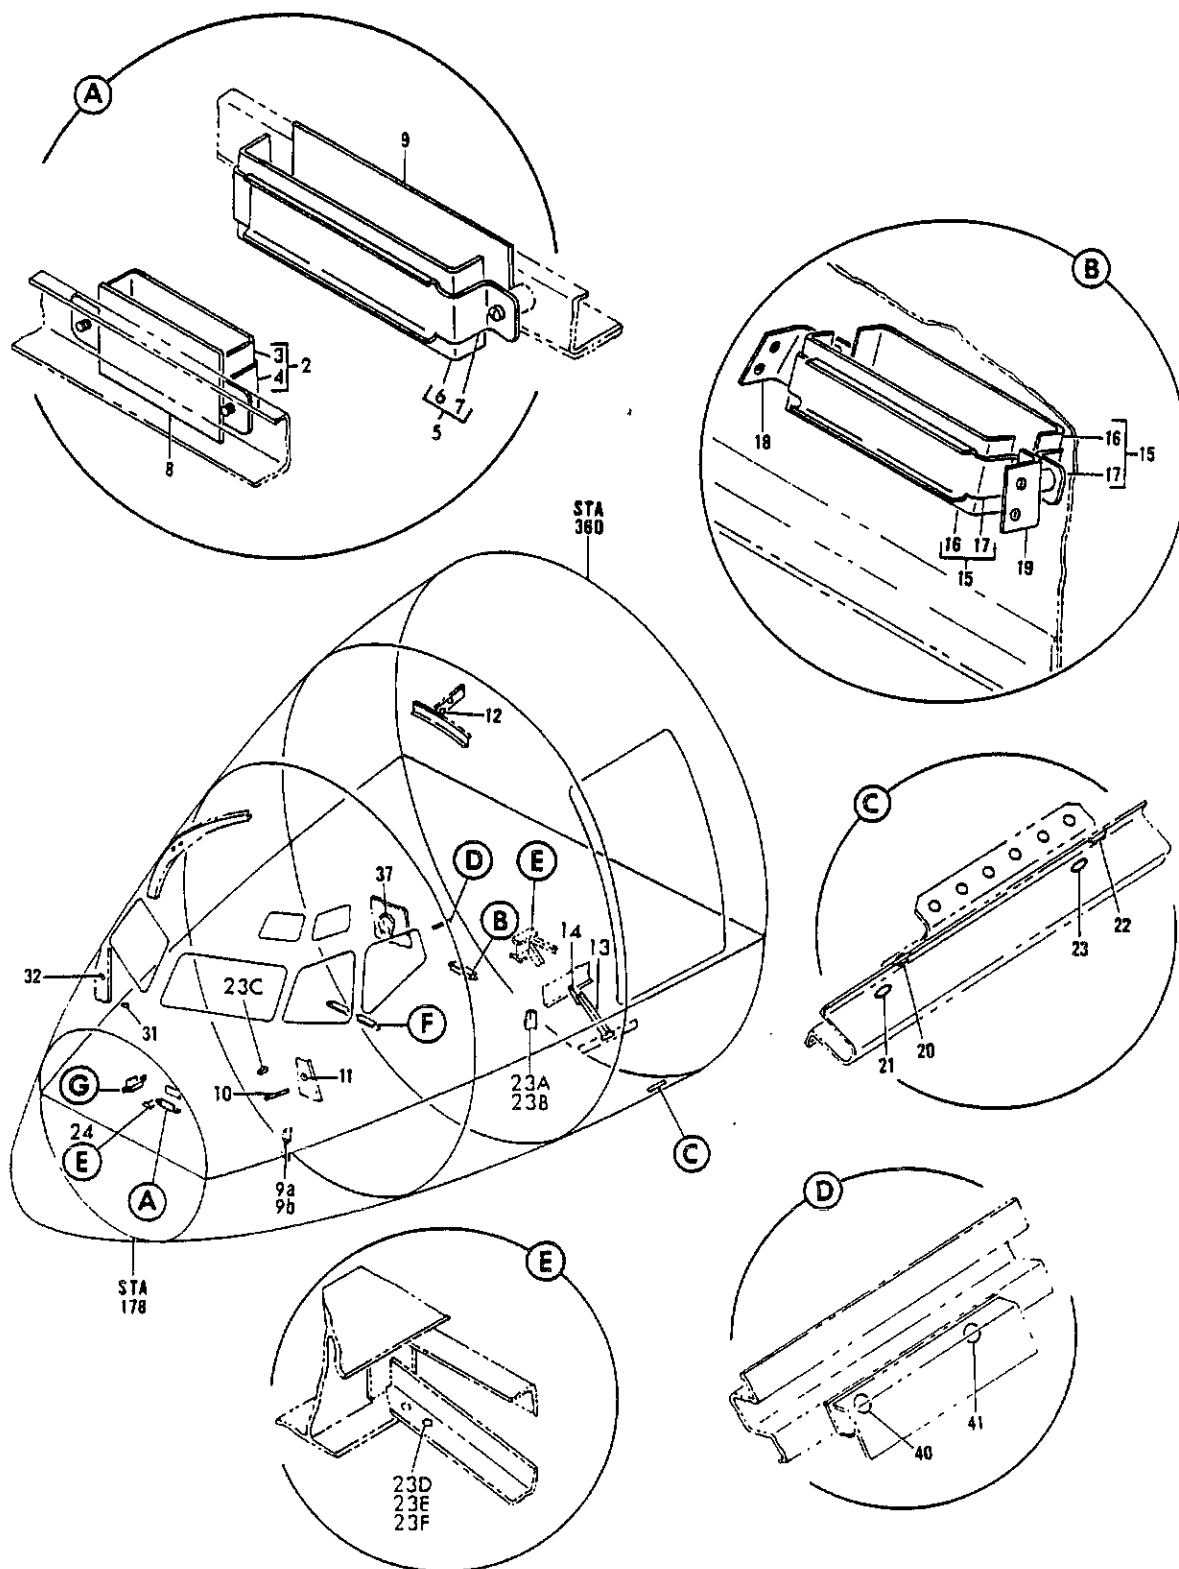


FIGURE 26. BRACKET INSTL, SECTION 51 WIRING (SHEET 1)

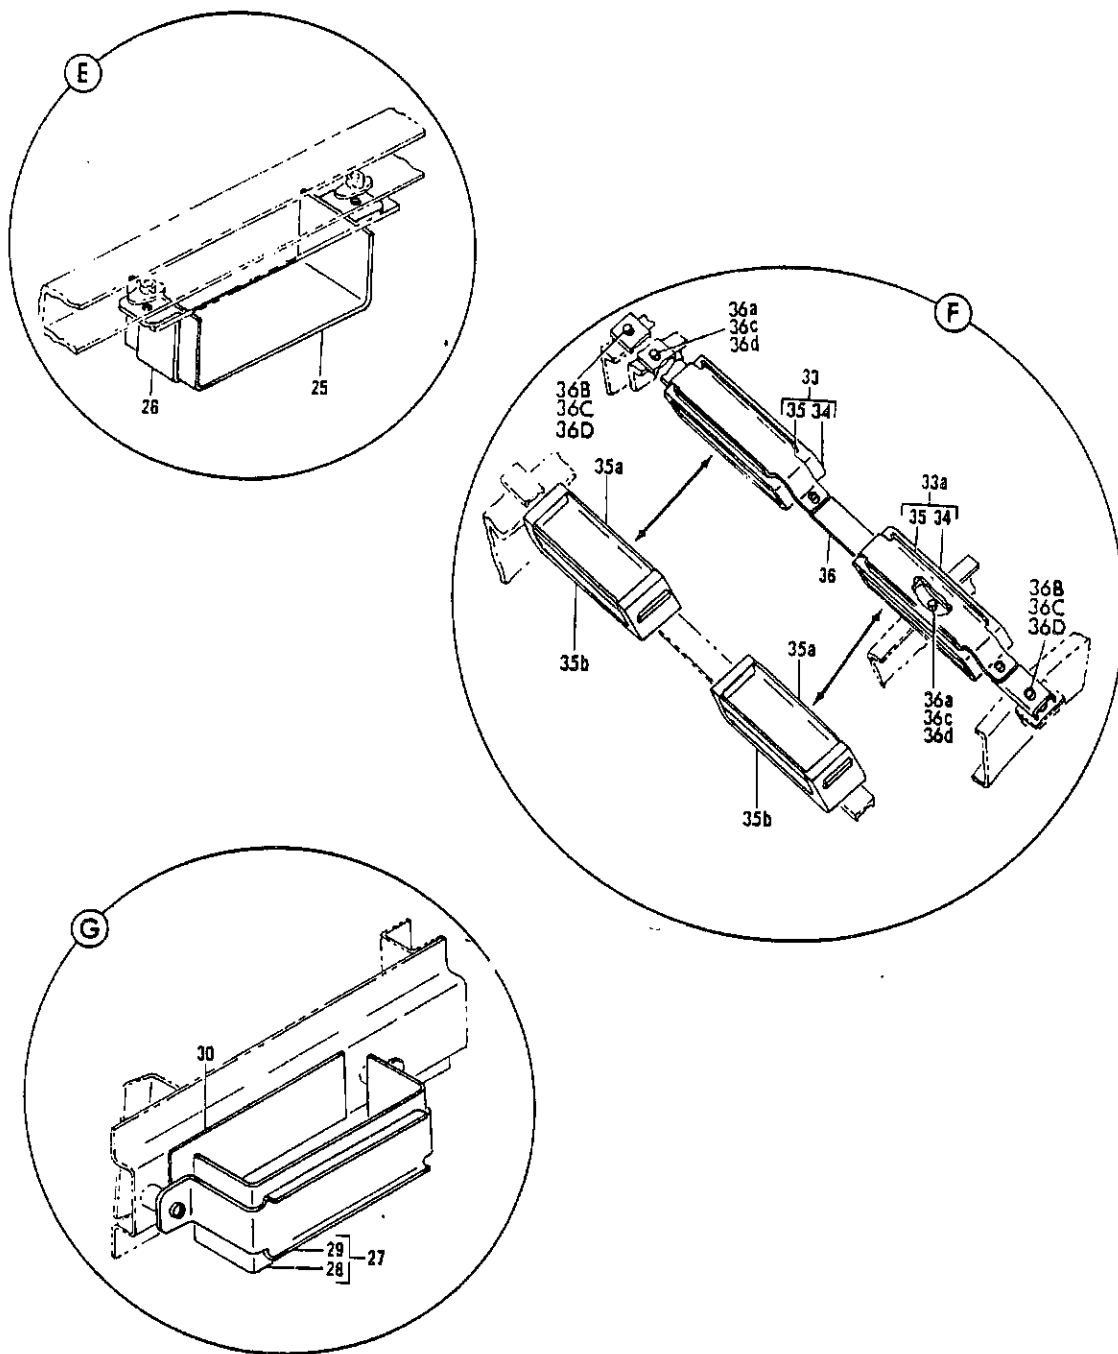


FIGURE 26 BRACKET INSTL, SECTION 51 W'RING (SHEET 2)

NOV 21/90

24-13-26

DETAILED PARTS LIST
24-13-26
PAGE 1

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
26	65-6135-165	BRACKET INSTL, SECTION 51 WIRING.	0150	RF
		. BRACKET INSTL, SECTION 51 WIRING LH (SEE 24-3, FIG. 1A, ITEM 97, 24-3, FIG. 1B, ITEM 88 AND 24-3, FIG. 1C, ITEM 85)		
	65-6135-253	. BRACKET INSTL, SECTION 51 WIRING LH (SEE 24-3, FIG. 1A, ITEM 97, 24-3, FIG. 1B, ITEM 88 AND 24-3, FIG. 1C, ITEM 85)	5199	RF
	65-6135-245	. . CLAMP AND COVER INSTL, SECTION 51 WIRING STATION.	0150	1
	65-6135-244	. . SUPPORT INSTL, SECTION 51 WIRING STATION 205 UPPER FRAME BRACKET		1
9A	NAS603-5	. . . SCREW		1
9B	NAS679A3W	. . . NUT		1
	65-6135-184	. . TERMINAL STRIP INSTL, SECTION 51 WIRING STATION 290 UPPER BRACKET		1
12	MS25123-2-1	. . . TERMINAL BOARD ASSY		1
	NAS603-3	. . . SCREW		2
	NAS679A04W	. . . NUT		2
	65-6135-215	. . SUPPORT INSTL, SECTION 51 WIRING STATION 305 FLOOR WIRE BRACKET		1
13	66-4840	. . . BRACKET, SECTION 51 WIRING SUPPORT.		1
		ATTACHING PARTS		
	NAS603-6	. . . SCREW		1
	NAS603-7	. . . SCREW		2
	AN970-3	. . . WASHER.		4
	NAS679A3W	. . . NUT		3
14	63-2534	. . . BRACKET, SECTION 51 WIRING SUPPORT.		1
		ATTACHING PARTS		
	NAS603-6	. . . SCREW		1
	NAS679A3W	. . . NUT		1
	65-6135-212	. . SUPPORT INSTL, SECTION 51 WIRING STATION 325.	0150	1
		STRINGER 5-23 GROUND STUD BRACKET		
20	BACM10N00-2FU	. . . MARKER-ALUMINUM FOIL, 12.	0150	1
21	BACM10N00-2AAW	. . . MARKER-ALUMINUM FOIL, 6	0150	1
22	BACM10N00-2AAN	. . . MARKER-ALUMINUM FOIL, 7	0150	1
23	BACM10N00-2PP	. . . MARKER-ALUMINUM FOIL, 1	0150	1
	65-6135-254	. BRACKET INSTL SECTION 51 WIRING RH (SEE 24-3, FIG. 1A, ITEM 98, 24-3, FIG. 1B, ITEM 89 AND 24-3, FIG. 1C, ITEM 86)	5199	RF
	65-6135-166	. BRACKET INSTL, SECTION 51 WIRING RH (SEE 24-3, FIG. 1A, ITEM 98, 24-3, FIG. 1B, ITEM 89 AND 24-3, FIG. 1C, ITEM 86)	0150	RF
	65-6135-255	. . CLAMP INSTL, STATION 275 WHEEL WELL TOP PANEL	5199	1
	65-6135-247	. . CLAMP INSTL, SECTION 51 WIRING STATION 275 WHEEL WELL TOP PANEL BRACKET	0150	1
33	65-22976-60	. . . CLAMP ASSY, ELECTRONIC WIRE	0150	1
		ATTACHING PARTS		
	BACS12B3-7	. . . SCREW	0150	2
	NAS679A3W	. . . NUT	0150	2
34	65-22976-62	. . . CUSHION, ELECTRONIC WIRE CLAMP.	0150	1
35	65-22976-61	. . . CLAMP, ELECTRONIC WIRE.	0150	1
35A	BACC10DS2F	. . . CLAMP	5199	2
35B	BACC10DR3S	. . . CHANNEL	5199	2
		ATTACHING PARTS		
	NAS514P1032-10	. . . SCREW	5199	4
	NAS679A3W	. . . NUT	5199	4
36	69-16984-1	. . . CHANNEL ASSY, ELECTRONIC WIRING SUPPORT	0150	1
36	69-16984-3	. . . CHANNEL ASSY, ELECTRONIC WIRING SUPPORT	5199	1
		ATTACHING PARTS		
36A	NAS514P1032-16	. . . SCREW	0150	2
36A	NAS514P1032-16P	. . . SCREW	5199	2
36B	NAS603-18P	. . . SCREW		2
36C	AN960PD10	. . . WASHER.		8
36D	NAS679A3W	. . . NUT		4
	65-6135-211	. . SUPPORT INSTL, SECTION 51 WIRING STATION 350 LOWER GROUND STUD BRACKET		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
26	40	BACM10N00-2PP	.	.	.	MARKER-ALUMINUM	FOIL, 1	.	.	.	1
	41	BACM10N00-2AAW	.	.	.	MARKER-ALUMINUM	FOIL, 6	.	.	.	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

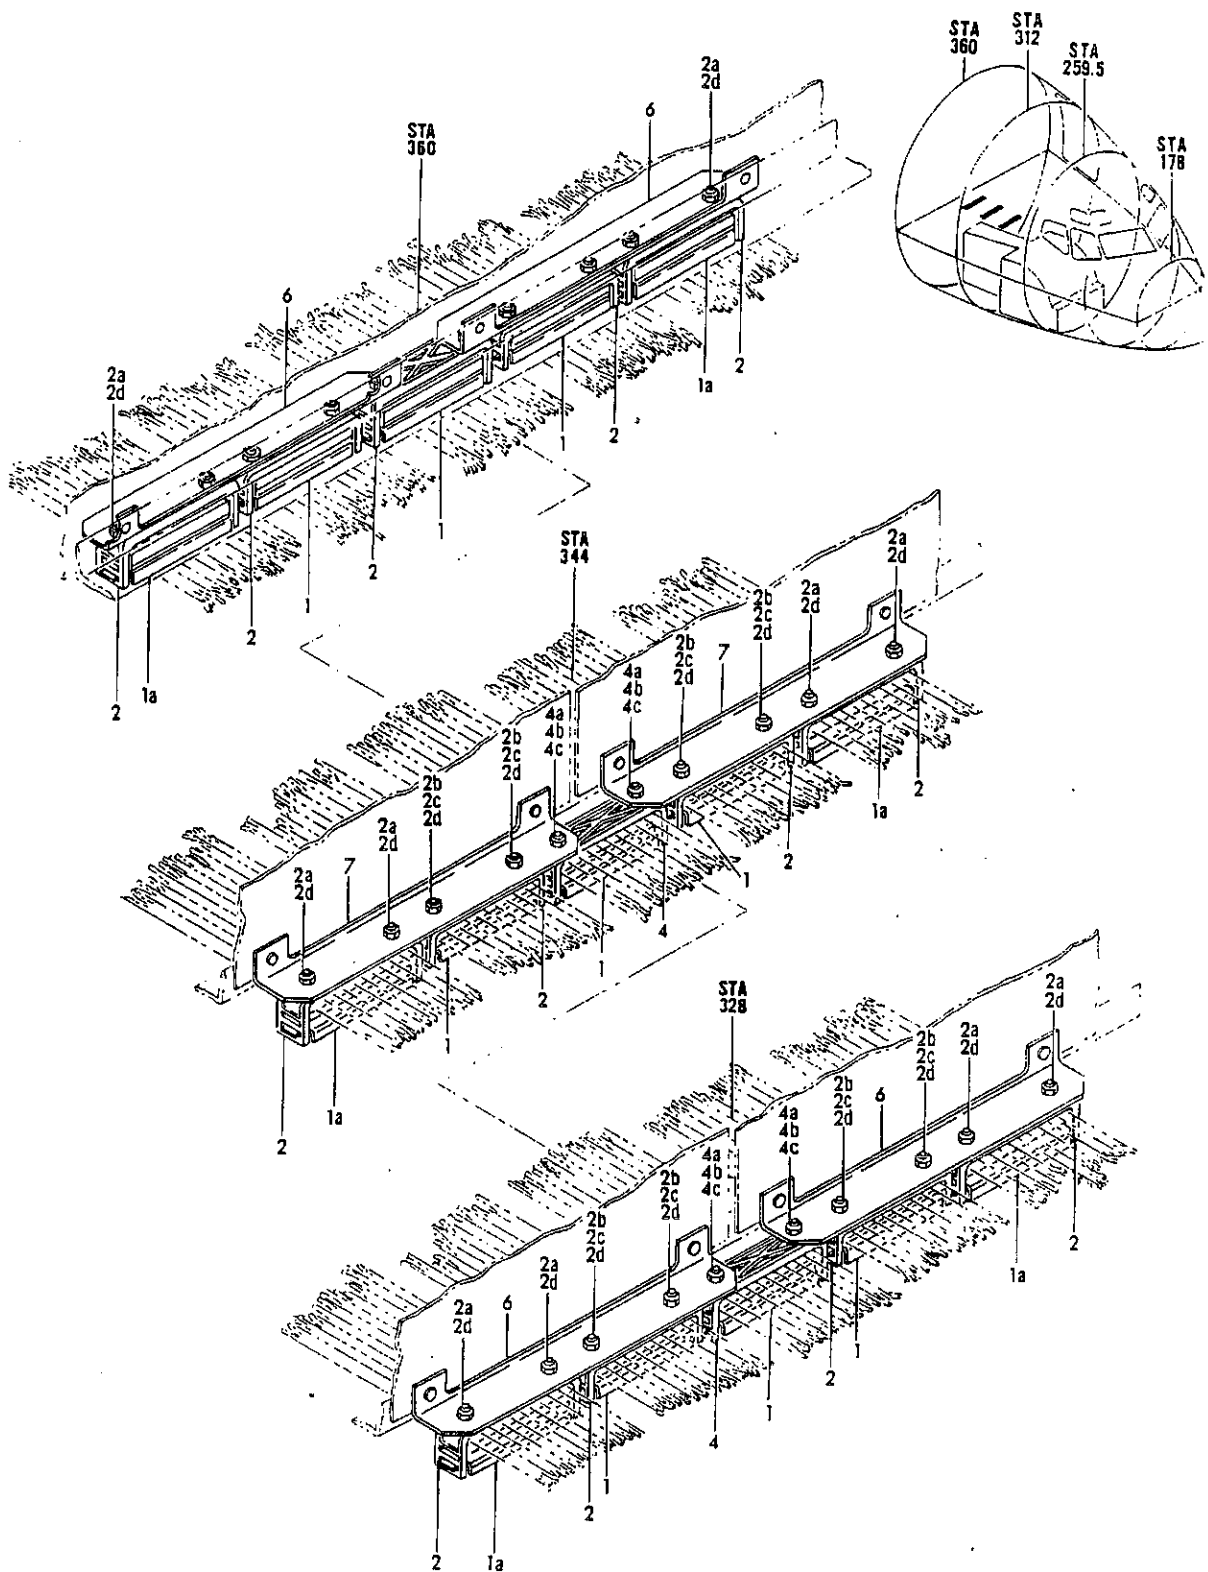


FIGURE 26C. CLAMP INSTL, STATION 328 TO 360 ELECTRONIC WIRE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R R	26C	65-52322-1	CLAMP INSTL, STATION 328 TO 360 ELECTRONIC WIRE (SEE. . 24-3, FIG. 5A, ITEM 169, 24-3, FIG. 5B, ITEM 164, 24-3, FIG. 5C, ITEM 182, 24-3, FIG. 5D, ITEM 166, 24-3, FIG. 5E, ITEM 123 AND 24-3, FIG. 5F, ITEM 104)								RF
	1	BACC10DS3	.	.	.	.	.	.	.		9
	1A	BACC10DS3	.	.	.	.	.	.	.	0150	6
	1B	BACC10DR7	.	.	.	.	.	.	.	0150	6
	2	BACC10DR7	.	.	.	.	.	.	.		7
			ATTACHING PARTS								
	2A	NAS514P1032-10P	.	.	.	.	.	.	.		18
	2B	NAS514P1032-14P	.	.	.	.	.	.	.		8
	2C	NAS43DD3-6	.	.	.	.	.	.	.		8
	2D	BACN10JC3	.	.	.	.	.	.	.		26
R R	4	BACC10DR6	.	.	.	.	.	.	.		2
			ATTACHING PARTS								
	4A	NAS514P1032-14P	.	.	.	.	.	.	.		4
	4B	NAS43DD3-19	.	.	.	.	.	.	.		4
	4C	BACN10JC3	.	.	.	.	.	.	.		4
			-----*								
	6	66-24329-1	.	.	.	.	.	.	.		4
	7	66-24329-1	.	.	.	.	.	.	.	0150	2
	7	66-24329-2	.	.	.	.	.	.	.	5199	2
			ANGLE, CLAMP SUPPORT.								
		ANGLE, CLAMP SUPPORT.									
		ANGLE, CLAMP SUPPORT.									
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

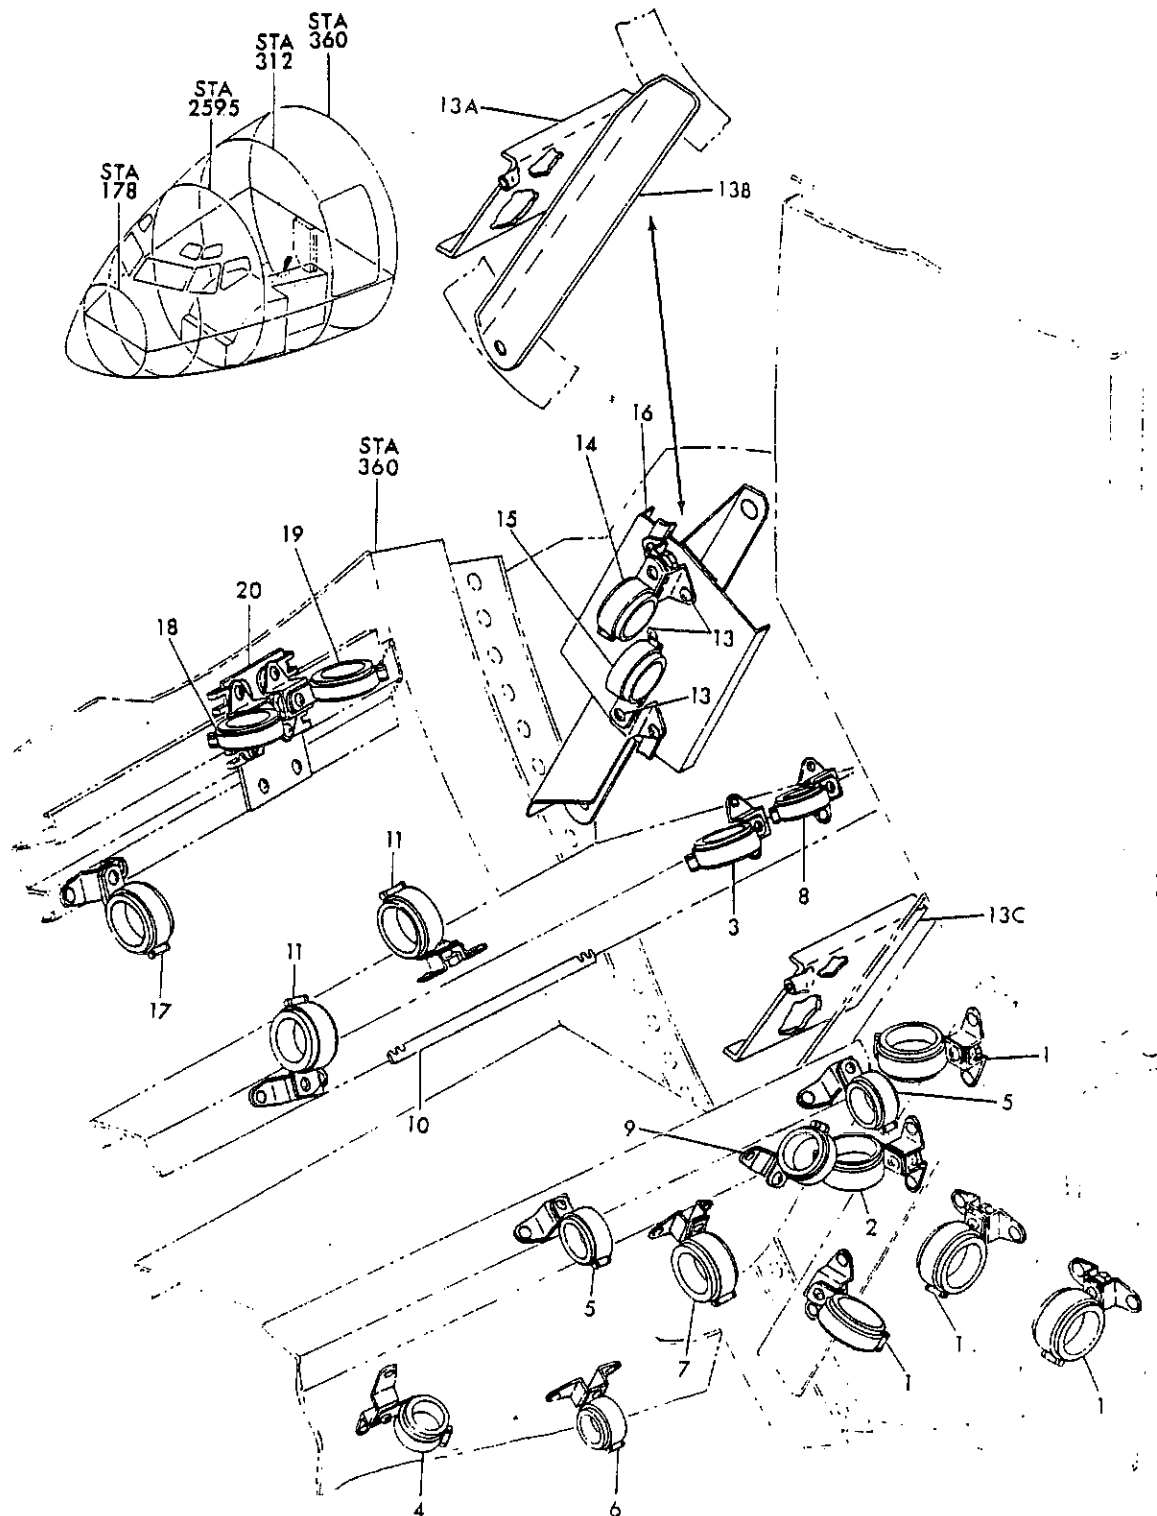


FIGURE 26D. CLAMP INSTL, VERTICAL GYROS WIRE (BENDIX)

MISSING ITEM NUMBERS ARE NOT APPLICABLE

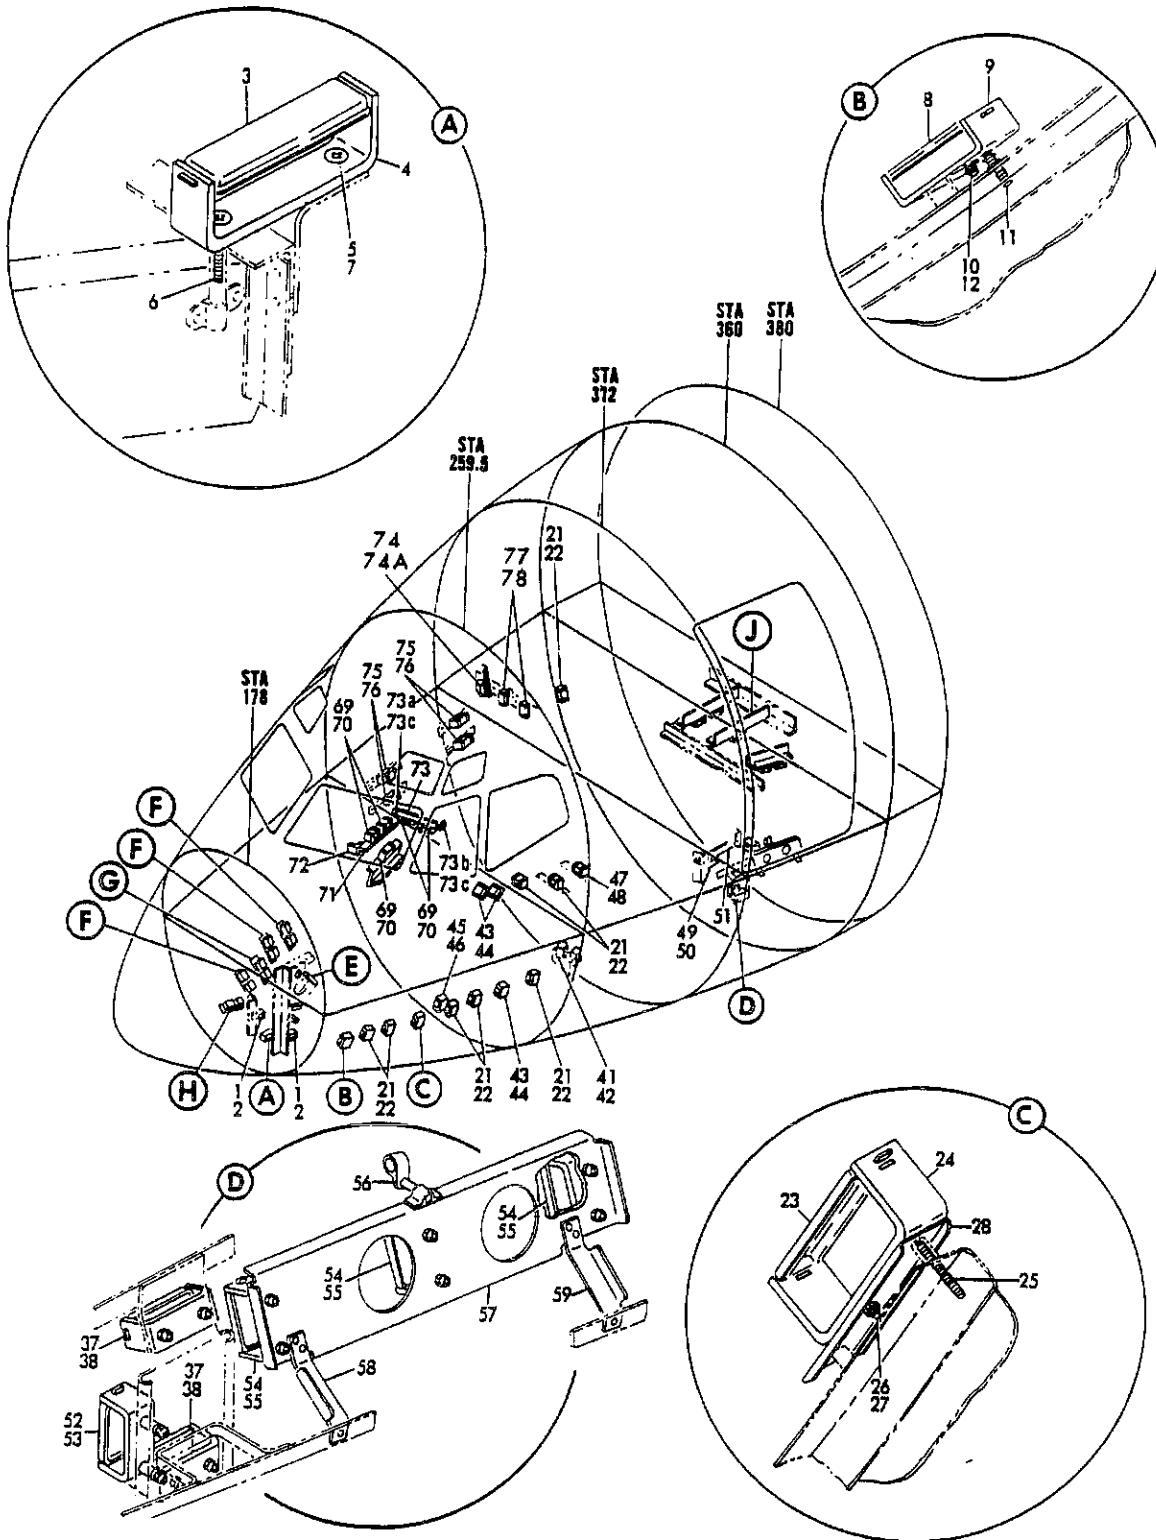


FIGURE 26E. CLAMP INSTL, SECTION 51 WIRE (SHEET 1)

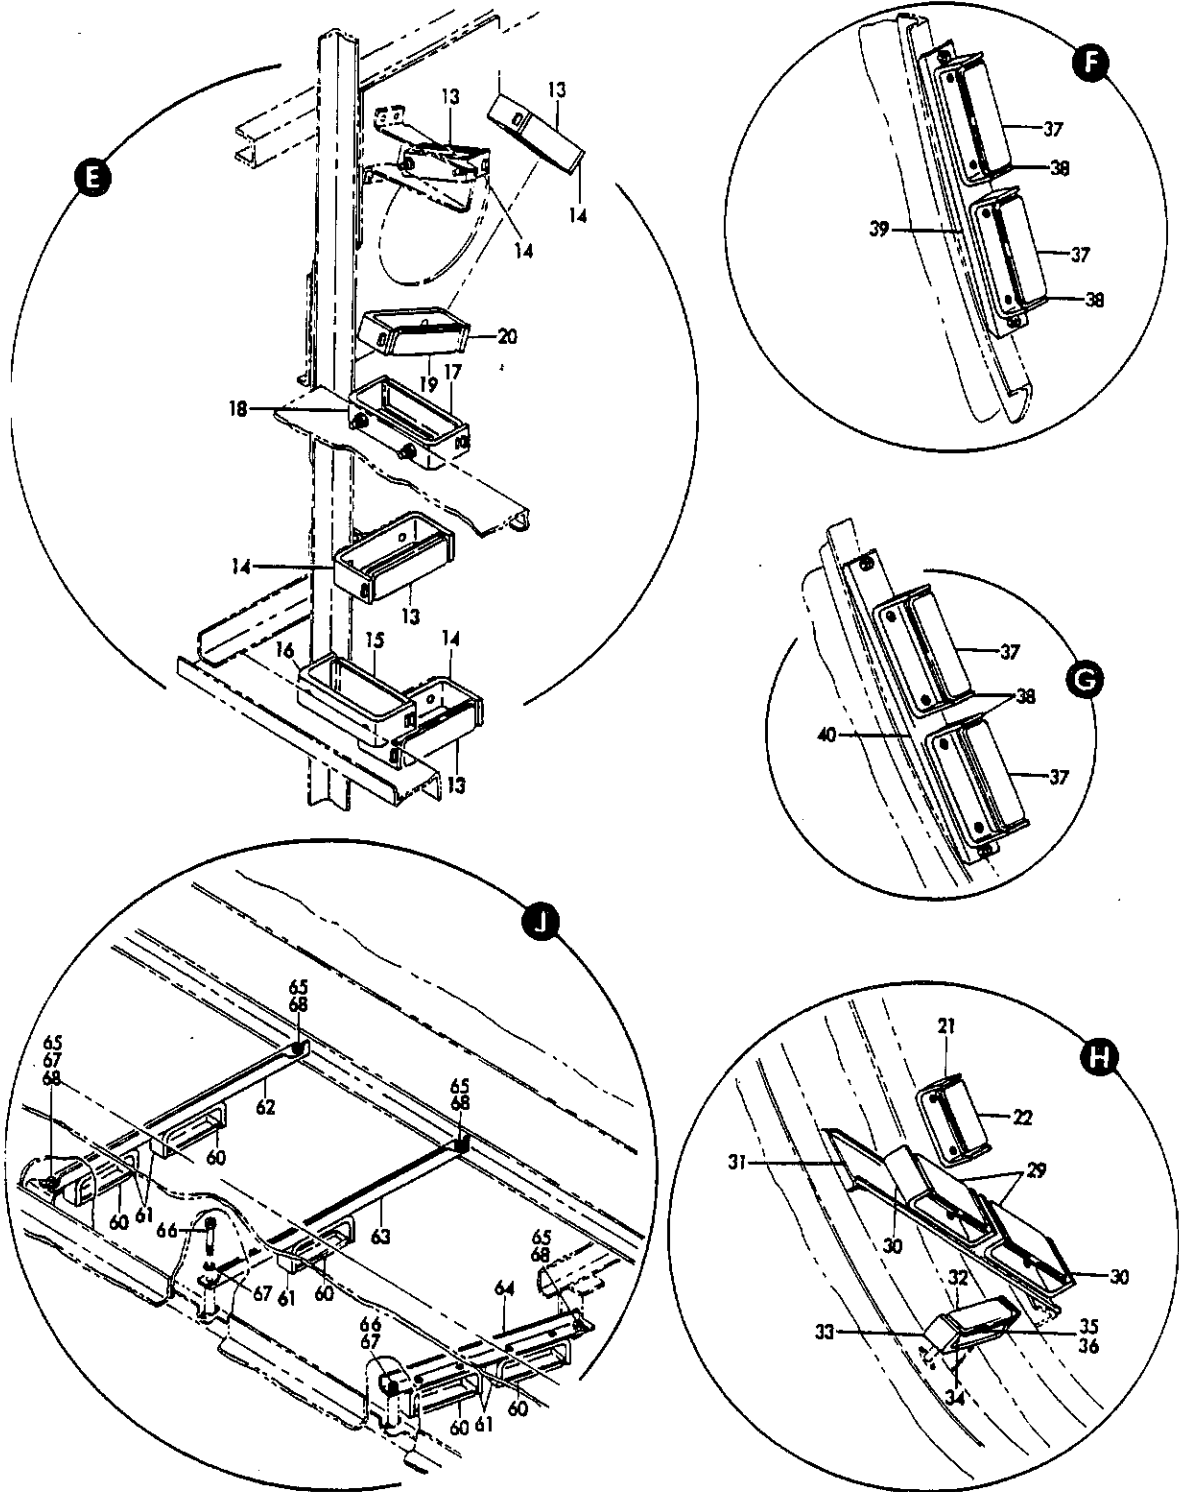


FIGURE 26E. CLAMP INSTL. SECTION 51 WIRE (SHEET 2)

BOEING
Intercontinental
PARTS CATALOG

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	26E	65-51381-13	CLAMP INSTL, SECTION 51 WIRE (SEE 24-3, FIG. 1A, ITEM 115, 24-3, FIG. 1B, ITEM 105 AND 24-3, FIG. 1C, ITEM 103)							0150	RF
R	1	BACC10DS2F	. CLAMP							0150	2
R	2	BACC10DR3S	. CHANNEL							0150	2
R		NAS514P1032-10	. ATTACHING PARTS							0150	4
R	3	BACC10DS2F	. CLAMP							0150	1
R	4	BACC10R3S	. CHANNEL							0150	1
R	5	NAS514P1032-7	. ATTACHING PARTS							0150	1
R	6	NAS514P1032-10	. SCREW							0150	1
R	7	BACN1QFX1W	. SCREW							0150	1
R	8	BACC10DS2F	. NUT							0150	1
R	9	BACC10DR3S	. CLAMP							0150	1
R	10	NAS514P1032-7	. CHANNEL							0150	1
R	11	NAS514P1032-14	. ATTACHING PARTS							0150	1
R	12	BACN1QFX1W	. SCREW							0150	1
R	13	BACC10DS2F	. SCREW							0150	4
R	14	BACC10DR5S	. CHANNEL							0150	4
R		NAS514P1032-7	. ATTACHING PARTS							0150	8
R		BACN1QFX1W	. SCREW							0150	8
R	15	BACC10DS2F	. NUT							0150	1
R	16	BACC10DR5S	. CLAMP							0150	1
R		NAS514P1032-16	. CHANNEL							0150	2
R		NAS680A3	. ATTACHING PARTS							0150	2
R	17	BACC10DS2F	. SCREW							0150	1
R	18	BACC10DR5S	. NUT							0150	1
R		NAS514P1032-7	. CLAMP							0150	2
R		NAS680A3	. CHANNEL							0150	2
R	19	BACC10DS2F	. ATTACHING PARTS							0150	1
R	20	BACC10DR5S	. SCREW							0150	1
R		NAS514P1032-18	. SCREW							0150	2
R	21	BACC10DS2F	. NUT							0150	9
R	22	BACC10DR4S	. CLAMP							0150	9
R		NAS514P1032-10	. CHANNEL							0150	18
R	23	BACC10DS2F	. ATTACHING PARTS							0150	1
R	24	BACC10DR4S	. SCREW							0150	1
R	25	NAS514P1032-12	. SCREW							0150	1
R	26	NAS514P1032-8	. SCREW							0150	1
R	27	NAS679A3W	. NUT							0150	1
R	28	65-51381-2	. CHANNEL							0150	1
R		BACS12CB3-8	. ATTACHING PARTS							0150	1
R	29	BACC10DS2F	. SCREW							0150	2
R	30	BACC10DR4S	. CHANNEL							0150	2
R		NAS514P1032-12	. ATTACHING PARTS							0150	4
R		NAS680A3	. SCREW							0150	4
R	31	65-51381-6	. NUT							0150	1
R		BACS12CB3-6	. CHANNEL							0150	2
R		AN960PD10L	. ATTACHING PARTS							0150	2
R		BACN1QFX1W	. SCREW							0150	2
R	32	BACC10DS2F	. WASHER							0150	1
R	33	BACC10DR4S	. NUT							0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
	26E		ATTACHING PARTS								
R	34	NAS514P1032-12	. SCREW							0150	1
R	35	NAS514P1032-10	. SCREW							0150	1
R	36	BACN10FX1W	. NUT							0150	1

R	37	BACC10DS2F	. CLAMP							0150	10
R	38	BACC10DR4S	. CHANNEL							0150	10
			ATTACHING PARTS								
R		NAS514P1032-8	. SCREW							0150	20
R		NAS679A3W	. NUT							0150	20

R	39	69-25715-2	. CHANNEL, STATION 480 TO 1090 WIRE PROVISION SUPPORT .							0150	3
R	40	69-25715-1	. CHANNEL, STATION 480 TO 1090 WIRE PROVISION SUPPORT .							0150	1
			ATTACHING PARTS								
R		BACS12CB3-8	. SCREW							0150	8

R	41	BACC10DS2F	. CLAMP							0150	2
R	42	BACC10DR4S	. CHANNEL							0150	2
			ATTACHING PARTS								
R		NAS514P1032-10	. SCREW							0150	4
R		NAS620A10L	. WASHER							0150	4
R		NAS679A3W	. NUT							0150	4

R	43	BACC10DS2F	. CLAMP							0150	3
R	44	BACC10DR4S	. CHANNEL							0150	3
			ATTACHING PARTS								
R		NAS514P1032-12	. SCREW							0150	6

R	45	BACC10DS2F	. CLAMP							0150	1
R	46	BACC10DR4S	. CHANNEL							0150	1
			ATTACHING PARTS								
R		NAS514P1032-8	. SCREW							0150	1
R		BACN10FX1W	. NUT							0150	1

R	47	BACC10DS2F	. CLAMP							0150	1
R	48	BACC10DR4S	. CHANNEL							0150	1
			ATTACHING PARTS								
R		NAS514P1032-10	. SCREW							0150	2
R		NAS679A3W	. NUT							0150	2

R	49	BACC10DS2F	. CLAMP							0150	1
R	50	BACC10DR3S	. CHANNEL							0150	1
			ATTACHING PARTS								
R		NAS514P1032-8	. SCREW							0150	2
R		NAS679A3W	. NUT							0150	2

R	51	65-51381-9	. ANGLE							0150	1
			ATTACHING PARTS								
R		BACS12CB3-8	. SCREW							0150	2
R		AN960PD10L	. WASHER							0150	2
R		NAS679A3W	. NUT							0150	2

R	52	BACC10DS2F	. CLAMP							0150	1
R	53	BACC10DR5S	. CHANNEL							0150	1
			ATTACHING PARTS								
R		NAS514P1032-20	. SCREW							0150	2
R		NAS42DD6-46	. SPACER							0150	2
R		NAS679A3W	. NUT							0150	2

R	54	BACC10DS2F	. CLAMP							0150	3
R	55	BACC10DR4S	. CHANNEL							0150	3
			ATTACHING PARTS								
R		NAS514P1032-10	. SCREW							0150	6
R		AN960P10	. WASHER							0150	6
R		NAS679A3W	. NUT							0150	6

R	56	BACC10DK14	. CLAMP							0150	1
			ATTACHING PARTS								
R		NAS603-10P	. SCREW							0150	1


R	57	65-60401-8	. SUPPORT ASSY, WIRE CLAMP							0150	1
R	58	65-60401-12	. BRACKET							0150	1
R	59	65-60401-13	. BRACKET							0150	1
R	60	BACC10DS2F	. CLAMP							0150	5
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
			1	2	3	4	5	6	7			
R	26E 61	BACC10DR4S	.	CHANNEL	.	.	.	.	.	.	0150	5
R		NAS514P1032-10	.	ATTACHING PARTS	.	.	.	.	.	.	0150	10
R		NAS679A3W	.	SCREW	.	.	.	.	.	.	0150	10
			.	NUT	.	.	.	.	.	.		
			.	-----*	.	.	.	.	.	.		
R	62	65-51381-3	.	ANGLE	.	.	.	.	.	.	0150	1
R	63	65-51381-4	.	ANGLE	.	.	.	.	.	.	0150	1
R	64	65-51381-5	.	ANGLE	.	.	.	.	.	.	0150	1
			.	ATTACHING PARTS	.	.	.	.	.	.		
R	65	BACS12CB3-8	.	SCREW	.	.	.	.	.	.	0150	4
R	66	BACS12CB3-32	.	SCREW	.	.	.	.	.	.	0150	2
R	67	NAS960PD10L	.	WASHER	.	.	.	.	.	.	0150	3
R	68	NAS679A3W	.	NUT	.	.	.	.	.	.	0150	4
			.	-----*	.	.	.	.	.	.		
R	69	BACC10DS2F	.	CLAMP	.	.	.	.	.	.	0150	5
R	70	BACC10DR5S	.	CHANNEL	.	.	.	.	.	.	0150	5
			.	ATTACHING PARTS	.	.	.	.	.	.		
R		NAS514P1032-8P	.	SCREW	.	.	.	.	.	.	0150	10
R		NAS679A3W	.	NUT	.	.	.	.	.	.	0150	10
			.	-----*	.	.	.	.	.	.		
R	71	65-51381-14	.	ANGLE	.	.	.	.	.	.	0150	1
			.	ATTACHING PARTS	.	.	.	.	.	.		
R		NAS603-10	.	SCREW	.	.	.	.	.	.	0150	2
			.	-----*	.	.	.	.	.	.		
R	72	65-60401-1	.	ANGLE ASSY.	.	.	.	.	.	.	0150	1
R	73	65-60401-3	.	BRACKET, ANGLE.	.	.	.	.	.	.	0150	1
			.	ATTACHING PARTS	.	.	.	.	.	.		
R	73A	NAS603-6	.	SCREW	.	.	.	.	.	.	0150	1
R	73B	NAS603-10P	.	SCREW	.	.	.	.	.	.	0150	1
R	73C	NAS679A3W	.	NUT	.	.	.	.	.	.	0150	2
			.	-----*	.	.	.	.	.	.		
R	74	BACC10DS2F	.	CLAMP	.	.	.	.	.	.	0150	1
R	74A	BACC10DR3S	.	CHANNEL	.	.	.	.	.	.	0150	1
			.	ATTACHING PARTS	.	.	.	.	.	.		
R		NAS514P1032-10	.	SCREW	.	.	.	.	.	.	0150	2
			.	-----*	.	.	.	.	.	.		
R	75	BACC10DS2F	.	CLAMP	.	.	.	.	.	.	0150	4
R	76	BACC10DR3S	.	CHANNEL	.	.	.	.	.	.	0150	4
			.	ATTACHING PARTS	.	.	.	.	.	.		
R		NAS514P1032-10	.	SCREW	.	.	.	.	.	.	0150	8
			.	-----*	.	.	.	.	.	.		
R	77	BACC10DS2F	.	CLAMP	.	.	.	.	.	.	0150	2
R	78	BACC10DR3S	.	CHANNEL	.	.	.	.	.	.	0150	2
			.	ATTACHING PARTS	.	.	.	.	.	.		
R		NAS514P1032-10	.	SCREW	.	.	.	.	.	.	0150	4
R		NAS679A3W	.	NUT	.	.	.	.	.	.	0150	4
			.	-----*	.	.	.	.	.	.		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

MISSING ITEM NUMBERS ARE NOT APPLICABLE

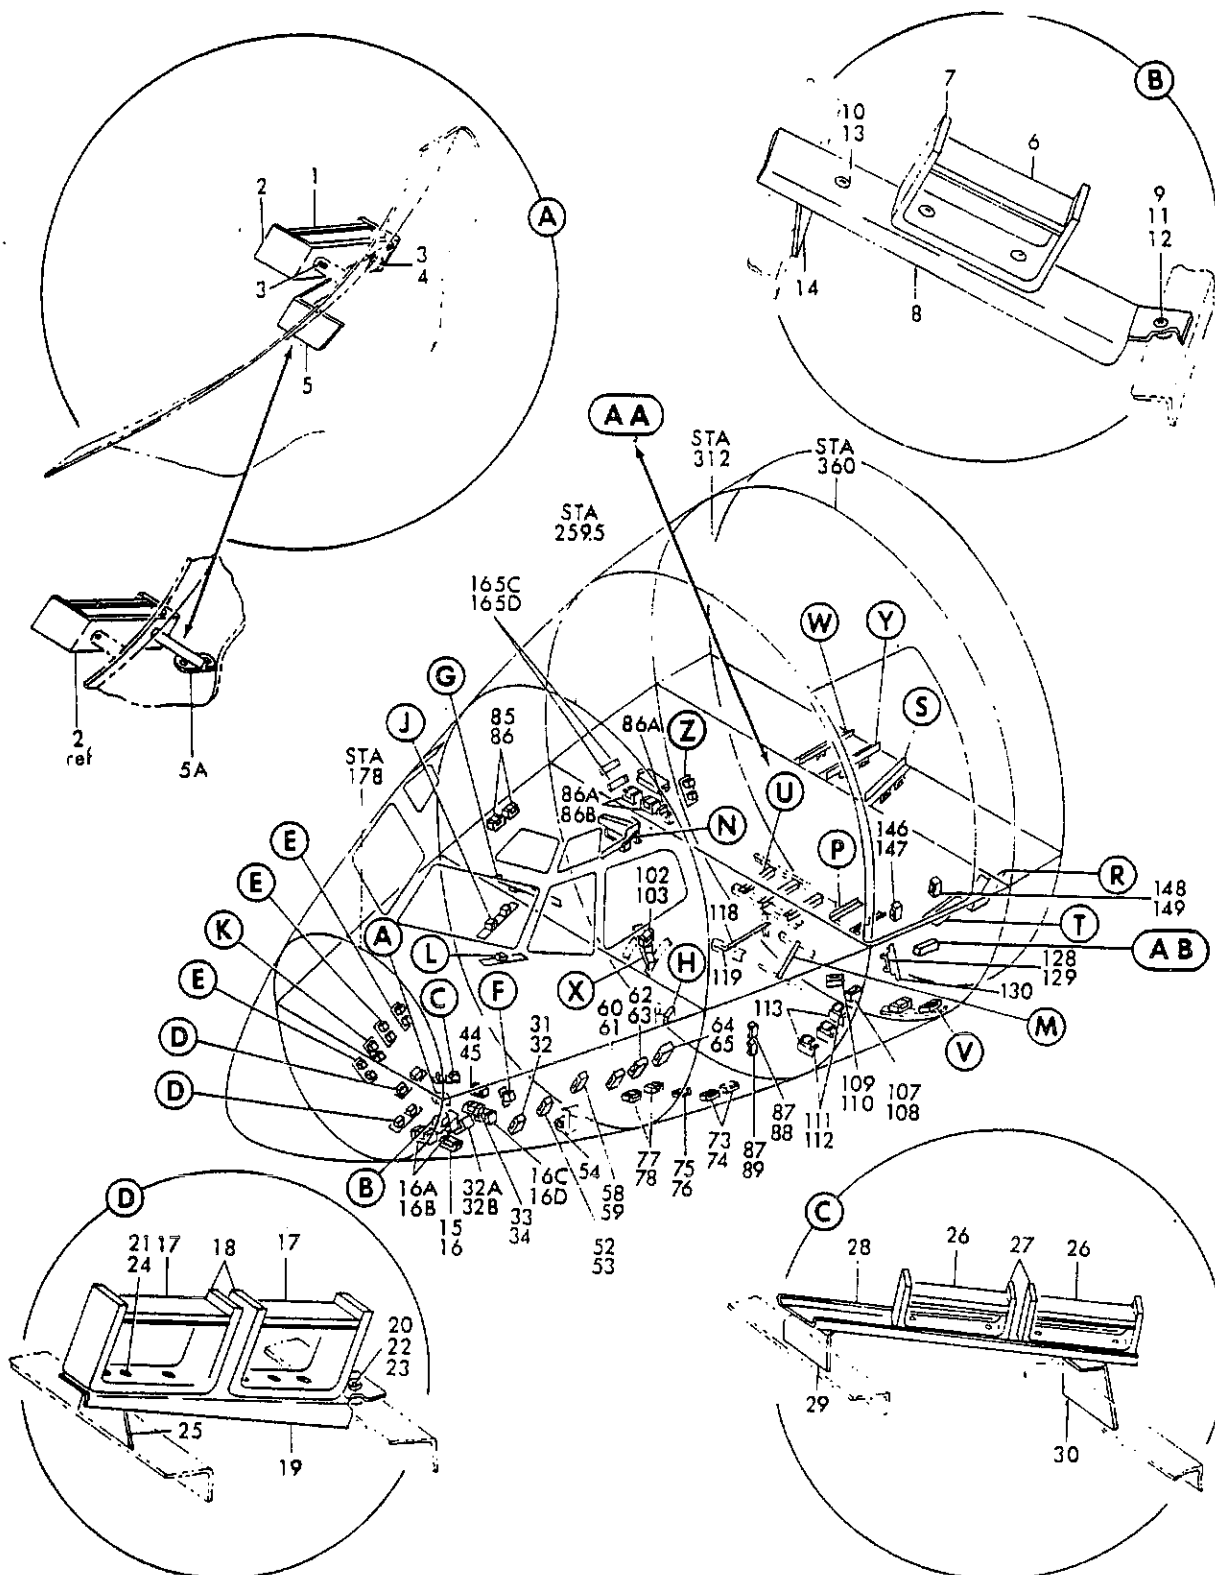

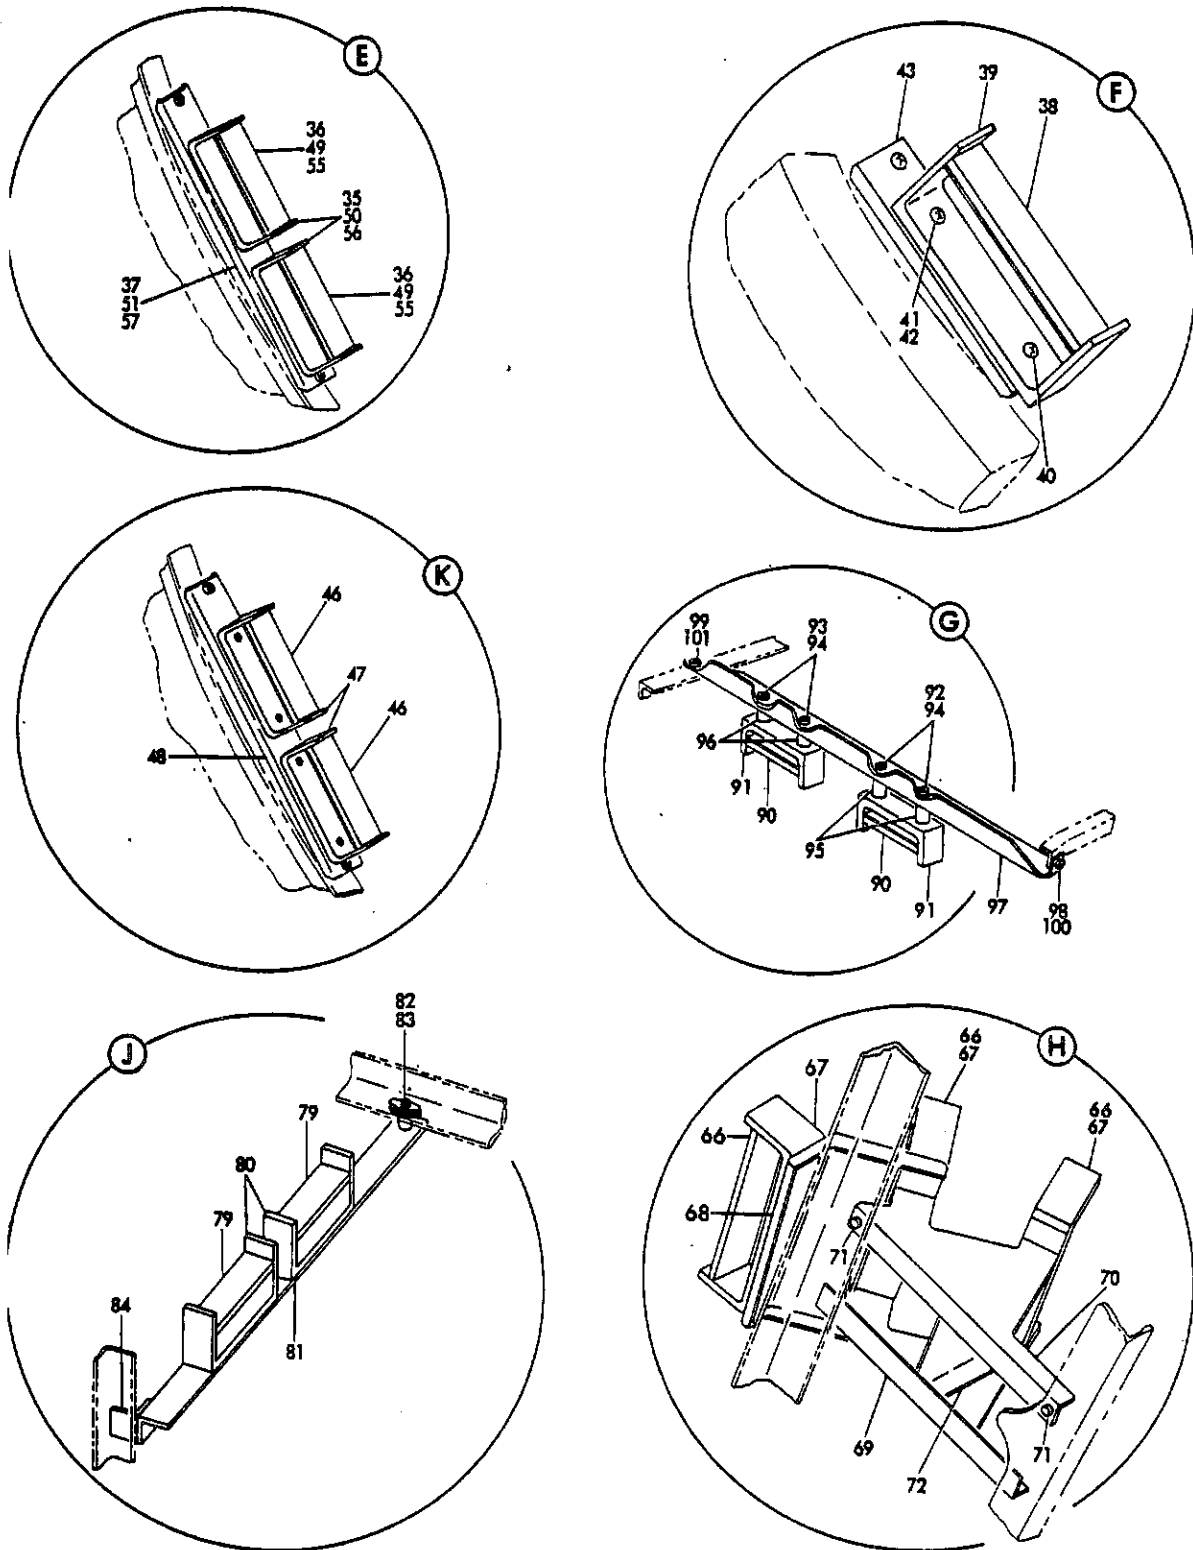


FIGURE 26F. CLAMP INSTL, SECTION 51 WIRE (SHEET 2)

NOV 21/90

24-13-26F

DETAILED PARTS LIST
24-13-26F
PAGE 1

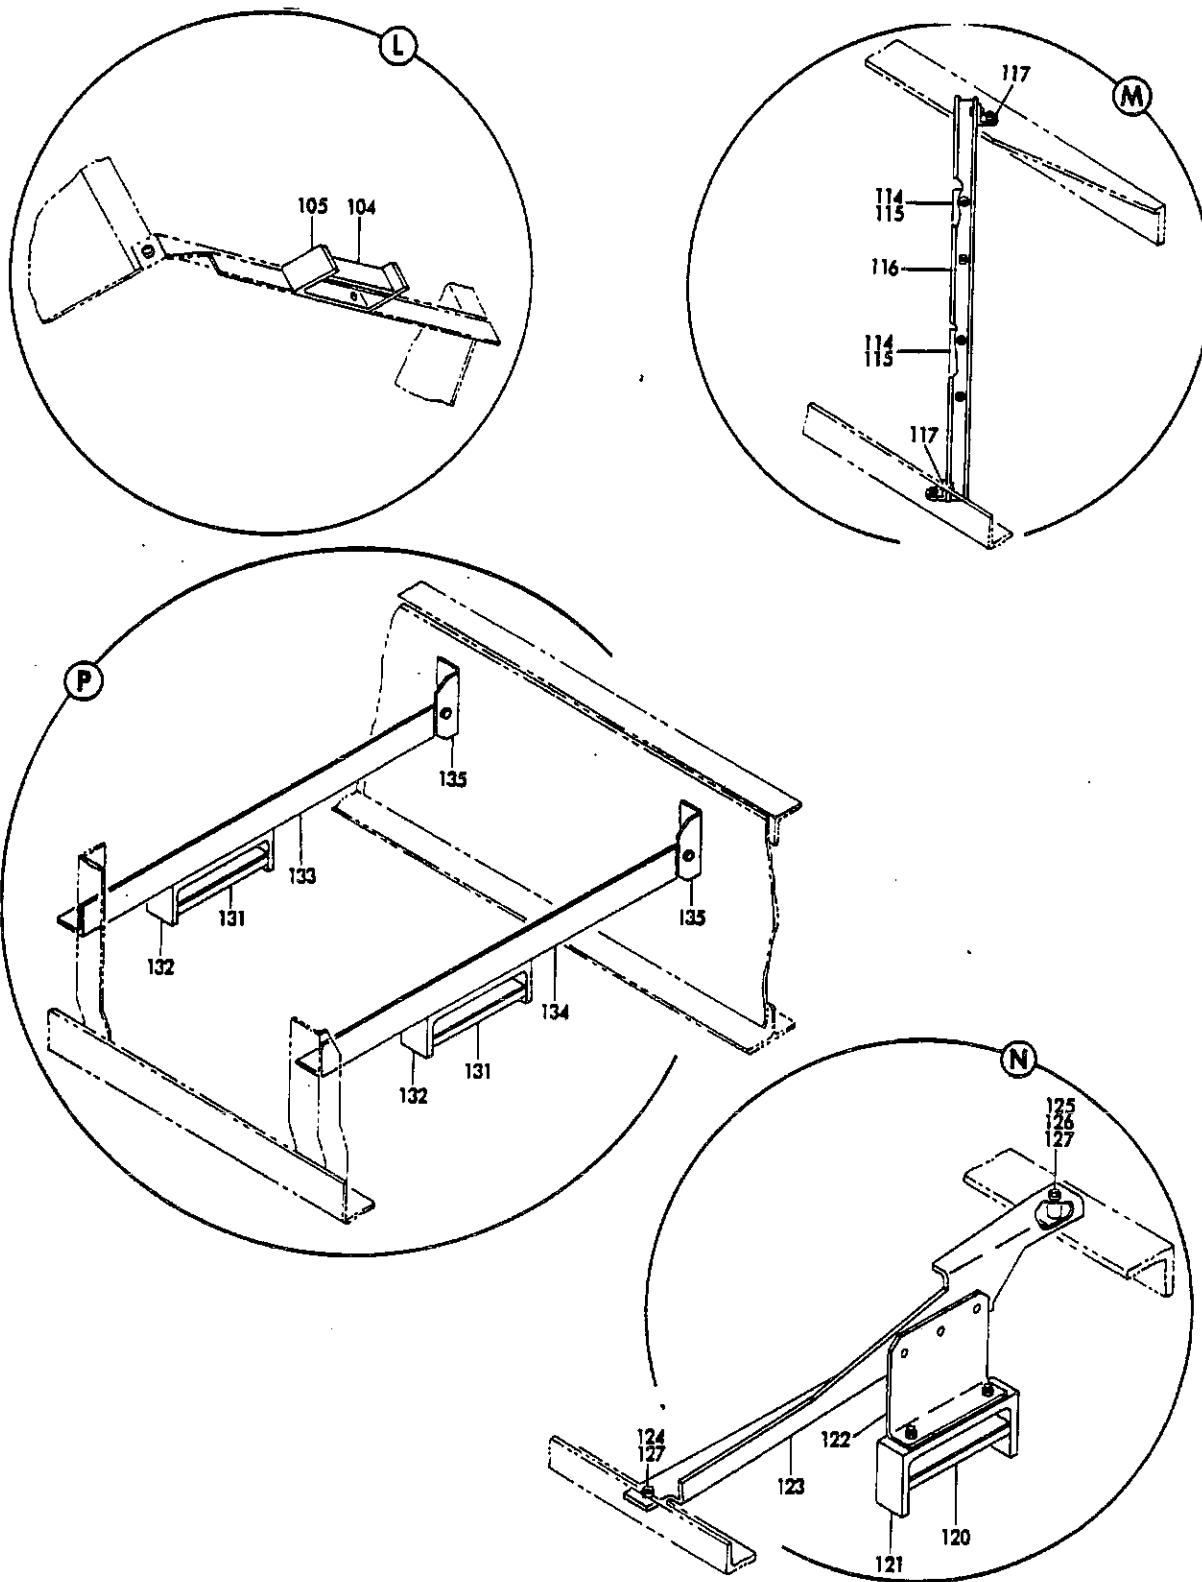


FIGURE 26F. CLAMP INSTL, SECTION 51 WIRE (SHEET 3)

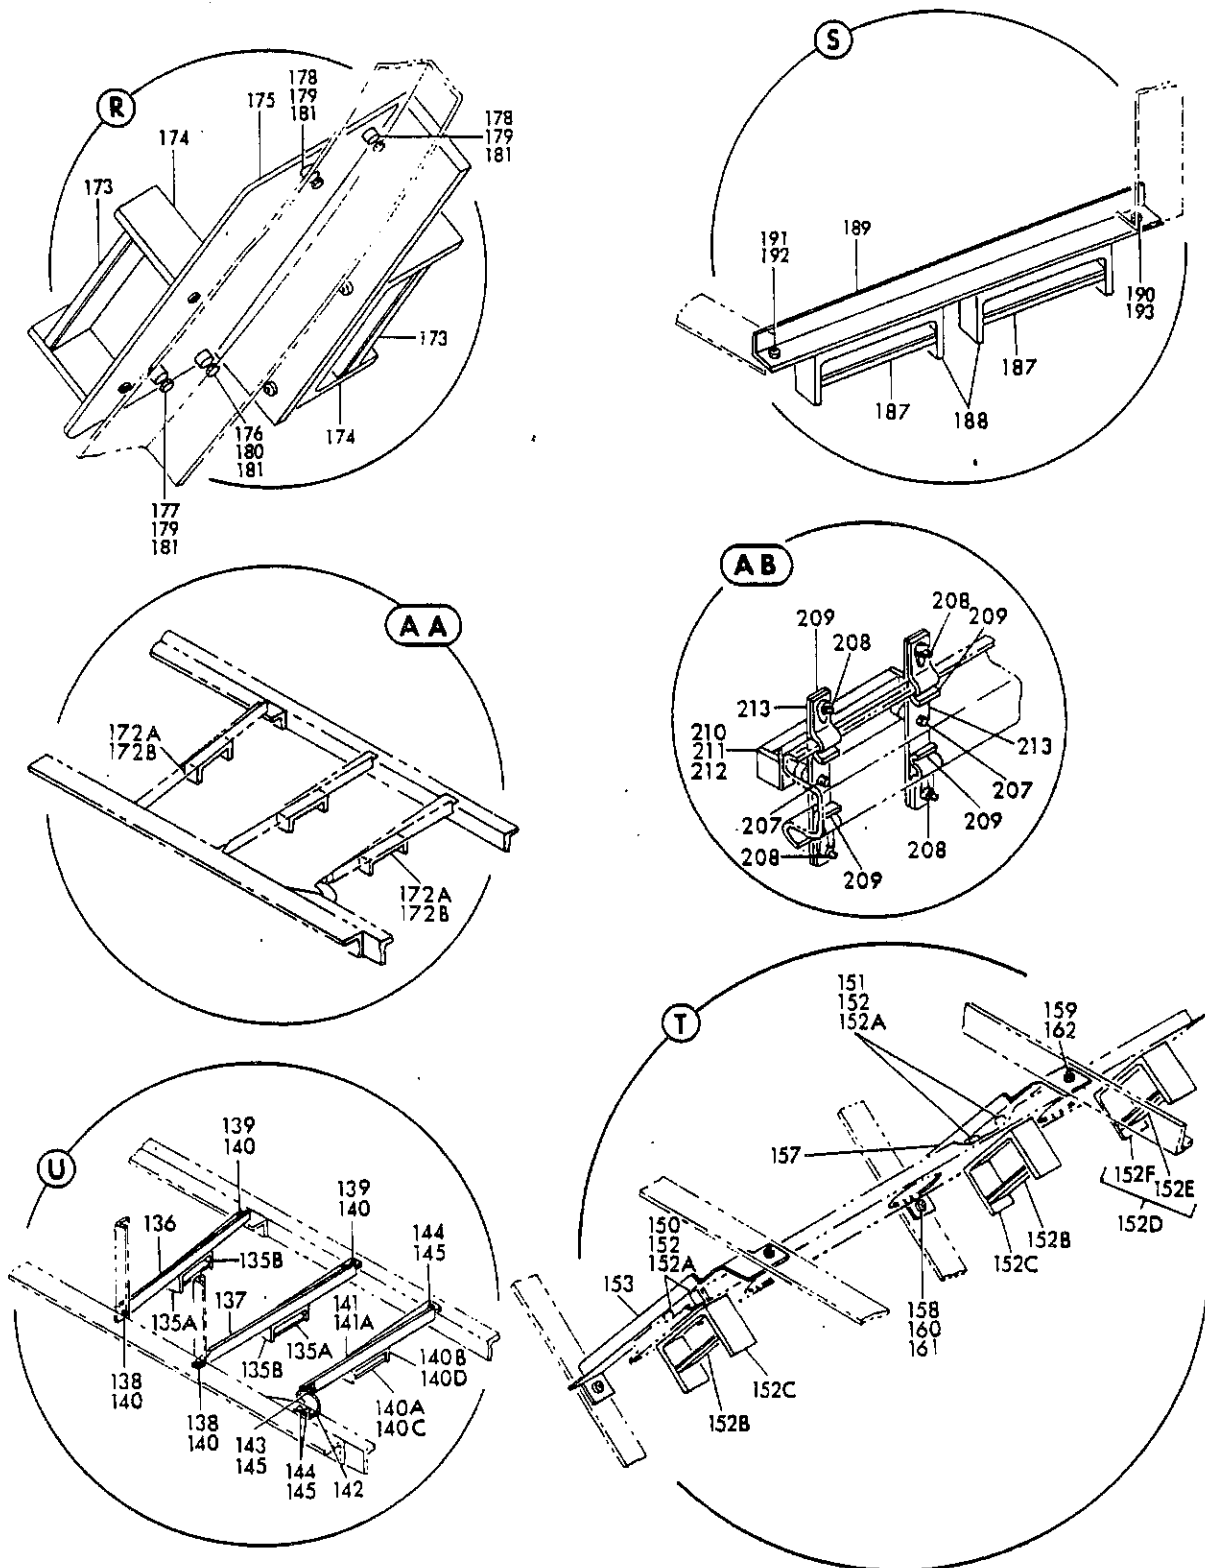


FIGURE 26F. CLAMP INSTL, SECTION 51 WIRE (SHEET 4)

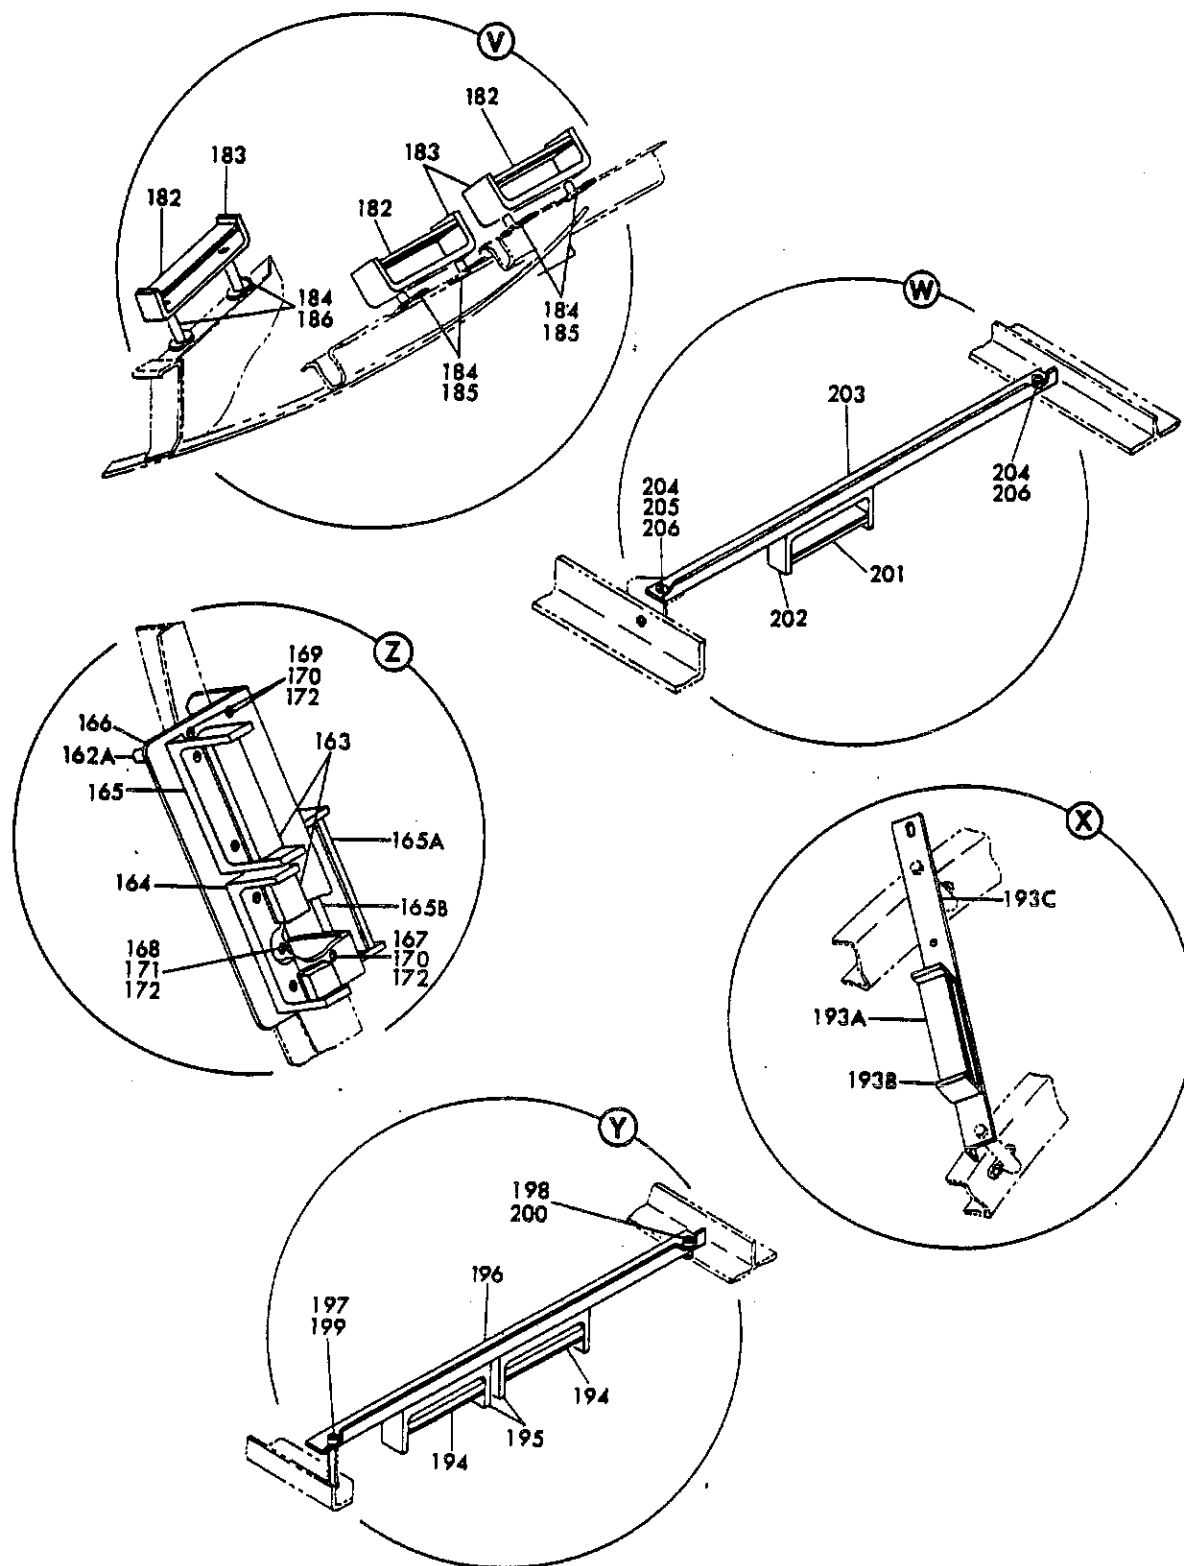


FIGURE 26F. CLAMP INSTL, SECTION 51 WIRE (SHEET 5)

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
26F	65-51381-22	CLAMP INSTL, SECTION 51 WIRE (SEE 24-3, FIG. 1B, ITEM 105 AND 24-3, FIG. 1C, ITEM 103)							5199	RF
6	BACC10DS2F	•	CLAMP	•	•	•	•	•	5199	1
7	BACC10DR5S	•	CHANNEL	•	•	•	•	•	5199	1
	NAS514P1032-10	•	ATTACHING PARTS	•	•	•	•	•	5199	2
		•	SCREW	•	•	•	•	•	5199	2
8	65-62457-5	•	BRACKET	•	•	•	•	•	5199	1
9	NAS603-10P	•	ATTACHING PARTS	•	•	•	•	•	5199	1
10	NAS514P1032-8	•	SCREW	•	•	•	•	•	5199	1
11	BACS18F25B	•	SPACER	•	•	•	•	•	5199	1
12	NAS680A3	•	NUT	•	•	•	•	•	5199	1
13	NAS679A3W	•	NUT	•	•	•	•	•	5199	1
14	65-62457-8	•	BRACKET	•	•	•	•	•	5199	1
15	BACC10DS2F	•	CLAMP	•	•	•	•	•	5199	1
16	BACC10DR5S	•	CHANNEL	•	•	•	•	•	5199	1
	NAS514P1032-10	•	ATTACHING PARTS	•	•	•	•	•	5199	2
		•	SCREW	•	•	•	•	•	5199	2
17	BACC10DS2F	•	CLAMP	•	•	•	•	•	5199	4
18	BACC10DR5S	•	CHANNEL	•	•	•	•	•	5199	4
	NAS514P1032-10	•	ATTACHING PARTS	•	•	•	•	•	5199	8
	NAS679A3W	•	NUT	•	•	•	•	•	5199	8
19	65-62457-5	•	BRACKET	•	•	•	•	•	5199	2
20	NAS603-10P	•	ATTACHING PARTS	•	•	•	•	•	5199	2
21	NAS514P1032-8	•	SCREW	•	•	•	•	•	5199	2
22	BACS18F25B	•	SPACER	•	•	•	•	•	5199	2
23	NAS680A3	•	NUT	•	•	•	•	•	5199	2
24	NAS679A3W	•	NUT	•	•	•	•	•	5199	2
25	65-62457-8	•	BRACKET	•	•	•	•	•	5199	2
26	BACC10DS2F	•	CLAMP	•	•	•	•	•	5199	2
27	BACC10DR4S	•	CHANNEL	•	•	•	•	•	5199	2
	NAS514P1032-12P	•	ATTACHING PARTS	•	•	•	•	•	5199	4
	BACS18F25B	•	SCREW	•	•	•	•	•	5199	4
	NAS680A3	•	SPACER	•	•	•	•	•	5199	4
		•	NUT	•	•	•	•	•	5199	4
28	65-51381-6	•	CHANNEL	•	•	•	•	•	5199	1
	BACS12CB3-6	•	ATTACHING PARTS	•	•	•	•	•	5199	2
	AN960PD10L	•	SCREW	•	•	•	•	•	5199	2
	BACN10FX1W	•	WASHER	•	•	•	•	•	5199	2
		•	NUT	•	•	•	•	•	5199	2
29	65-51880-10	•	CLIP	•	•	•	•	•	5199	1
30	65-51880-19	•	CLIP	•	•	•	•	•	5199	1
31	BACC10DS2F	•	CLAMP	•	•	•	•	•	5199	1
32	BACC10DR4S	•	CHANNEL	•	•	•	•	•	5199	1
	NAS514P1032-10	•	ATTACHING PARTS	•	•	•	•	•	5199	1
		•	SCREW	•	•	•	•	•	5199	1
32A	BACC10DS2F	•	CLAMP	•	•	•	•	•	5199	1
32B	BACC10DR4S	•	CHANNEL	•	•	•	•	•	5199	1
	NAS514P1032-10	•	ATTACHING PARTS	•	•	•	•	•	5199	2
		•	SCREW	•	•	•	•	•	5199	2
33	BACC10DS2F	•	CLAMP	•	•	•	•	•	5199	1
34	BACC10DR5S	•	CHANNEL	•	•	•	•	•	5199	1
	NAS514P1032-10	•	ATTACHING PARTS	•	•	•	•	•	5199	2
		•	SCREW	•	•	•	•	•	5199	2
35	BACC10DS2F	•	CLAMP	•	•	•	•	•	5199	6
36	BACC10DR4S	•	CHANNEL	•	•	•	•	•	5199	6
	NAS514P1032-8	•	ATTACHING PARTS	•	•	•	•	•	5199	12
	NAS679A3W	•	SCREW	•	•	•	•	•	5199	12
		•	NUT	•	•	•	•	•	5199	12
37	69-25715-2	•	CHANNEL	•	•	•	•	•	5199	3

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
26F	BACS12CB3-8	.	ATTACHING PARTS	5199	6
		.	SCREW	5199	1
		.	-----*		
38	BACC10DS2F	.	CLAMP	5199	1
39	BACC10DR4S	.	CHANNEL	5199	1
		.	ATTACHING PARTS		
40	NAS514P1032-12P	.	SCREW	5199	1
41	NAS514P1032-8P	.	SCREW	5199	1
42	NAS679A3W	.	NUT	5199	1
		.	-----*		
43	65-51381-2	.	CHANNEL	5199	1
		.	ATTACHING PARTS		
	BACS12CB3-8	.	SCREW	5199	1
		.	-----*		
44	BACC10DS2F	.	CLAMP	5199	1
45	BACC10DR5S	.	CHANNEL	5199	1
		.	ATTACHING PARTS		
	NAS514P1032-12P	.	SCREW	5199	2
	BACS18F25B	.	SPACER.	5199	2
	NAS679A3W	.	NUT	5199	2
		.	-----*		
46	BACC10DS2F	.	CLAMP	5199	2
47	BACC10DR4S	.	CHANNEL	5199	2
		.	ATTACHING PARTS		
	NAS514P1032-8	.	SCREW	5199	4
	NAS679A3W	.	NUT	5199	4
		.	-----*		
48	69-25715-1	.	CHANNEL	5199	1
		.	ATTACHING PARTS		
	BACS12CB3-8	.	SCREW	5199	2
		.	-----*		
52	BACC10DS2F	.	CLAMP	5199	1
53	BACC10DR4S	.	CHANNEL	5199	1
		.	ATTACHING PARTS		
	NAS514P1032-10P	.	SCREW	5199	2
		.	-----*		
54	BACC10DK8	.	CLAMP	5199	1
		.	ATTACHING PARTS		
	NAS603-7P	.	SCREW	5199	1
	NAS680A3	.	NUT	5199	1
		.	-----*		
55	BACC10DS2F	.	CLAMP	5199	6
56	BACC10DR4S	.	CHANNEL	5199	6
		.	ATTACHING PARTS		
	NAS514P1032-8	.	SCREW	5199	12
	NAS679A3W	.	NUT	5199	12
		.	-----*		
57	69-25715-2	.	CHANNEL	5199	3
		.	ATTACHING PARTS		
	BACS12CB3-8	.	SCREW	5199	6
		.	-----*		
58	BACC10DS2F	.	CLAMP	5199	1
59	BACC10DR4S	.	CHANNEL	5199	1
		.	ATTACHING PARTS		
	NAS514P1032-10	.	SCREW	5199	2
		.	-----*		
60	BACC10DS2F	.	CLAMP	5199	1
61	BACC10DR4S	.	CHANNEL	5199	1
		.	ATTACHING PARTS		
	NAS514P1032-10	.	SCREW	5199	2
		.	-----*		
62	BACC10DS2F	.	CLAMP	5199	1
63	BACC10DR4S	.	CHANNEL	5199	1
		.	ATTACHING PARTS		
	NAS514P1032-12	.	SCREW	5199	2
		.	-----*		
64	BACC10DS2F	.	CLAMP	5199	1
65	BACC10DR4S	.	CHANNEL	5199	1
		.	ATTACHING PARTS		
	NAS514P1032-10	.	SCREW	5199	2
		.	-----*		
66	BACC10DS2F	.	CLAMP	5199	3
67	BACC10DR4S	.	CHANNEL	5199	3

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
26F	NAS514P1032-10 NAS620A10L NAS679A3W	ATTACHING PARTS • SCREW • WASHER • NUT	5199 5199 5199	6 6 6
68	69-47694-1	• GUARD, CABLE.	5199	1
69	65-60401-9	• ANGLE	5199	1
70	65-60401-10	• ANGLE	5199	1
71	NAS42DD6-5	• SPACER.	5199	2
72	65-60401-11	• BRACKET	5199	1
73	BACC10DS2F	• CLAMP	5199	2
74	BACC10DR5S	• CHANNEL	5199	2
	NAS514P1032-8	ATTACHING PARTS • SCREW	5199	4
75	BACC10DS2F	• CLAMP	5199	1
76	BACC10DR5S	• CHANNEL	5199	1
	NAS514P1032-10	ATTACHING PARTS • SCREW	5199	2
77	BACC10DS2F	• CLAMP	5199	2
78	BACC10DR5S	• CHANNEL	5199	2
	NAS514P1032-10	ATTACHING PARTS • SCREW	5199	4
79	BACC10DS2F	• CLAMP	5199	2
80	BACC10DR5S	• CHANNEL	5199	2
	NAS514P1032-8P NAS679A3W	ATTACHING PARTS • SCREW • NUT	5199 5199	4 4
81	65-51381-14	• ANGLE	5199	1
82	BACS18F50B	• SPACER.	5199	1
83	NAS680A3	• NUT	5199	1
84	65-60401-1	• ANGLE ASSY.	5199	1
	NAS603-10	ATTACHING PARTS • SCREW	5199	2
85	BACC10DS2F	• CLAMP	5199	2
86	BACC10DR5S	• CHANNEL	5199	2
	NAS514P1032-10	ATTACHING PARTS • SCREW	5199	4
87	BACC10DS2F	• CLAMP	5199	2
88	BACC10DR4S	• CHANNEL	5199	1
89	BACC10DR3S	• CHANNEL	5199	1
	NAS514P1032-10 BACS18F25B NAS680A3W	ATTACHING PARTS • SCREW • SPACER. • NUT	5199 5199 5199	4 4 4
90	BACC10DS2F	• CLAMP	5199	2
91	BACC10DR4S	• CHANNEL	5199	2
92	NAS514P1032-28P	ATTACHING PARTS • SCREW	5199	2
93	NAS514P1032-24P	• SCREW	5199	2
94	NAS679A3W	• NUT	5199	4
95	NAS42DD6-90	• SPACER.	5199	2
96	NAS42DD6-64	• SPACER.	5199	2
97	65-60401-3	• BRACKET	5199	1
98	NAS603-6P	ATTACHING PARTS • SCREW	5199	1
99	NAS604-10P	• SCREW	5199	1
100	NAS679A3W	• NUT	5199	1
101	NAS679A4W	• NUT	5199	1
102	BACC10DS2F	• CLAMP	5199	1
103	BACC10DR4S	• CHANNEL	5199	1
	NAS514P1032-10	ATTACHING PARTS • SCREW	5199	2
104	BACC10DS2F	• CLAMP	5199	1
105	BACC10DR5S	• CHANNEL	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
26F	NAS514P1032-8P NAS679A3W	.	ATTACHING PARTS		
		.	SCREW	5199	2
		.	NUT	5199	2
		-----*			
107	BACC10DS2F	.	CLAMP	5199	1
108	BACC10DR5S	.	CHANNEL	5199	1
	NAS514P1032-12P BACS18F25B NAS680A3	.	ATTACHING PARTS		
		.	SCREW	5199	2
		.	SPACER.	5199	2
		.	NUT	5199	2
		-----*			
109	BACC10DS2F	.	CLAMP	5199	1
110	BACC10DR5S	.	CHANNEL	5199	1
	NAS514P1032-12P BACS18F25B NAS680A3	.	ATTACHING PARTS		
		.	SCREW	5199	2
		.	SPACER.	5199	2
		.	NUT	5199	2
		-----*			
111	BACC10DS2F	.	CLAMP	5199	3
112	BACC10DR5S	.	CHANNEL	5199	3
	NAS514P1032-8P NAS43DD3-12 NAS679A3W	.	ATTACHING PARTS		
		.	SCREW	5199	6
		.	SPACER.	5199	6
		.	NUT	5199	6
		-----*			
113	65-51381-20	.	ANGLE	5199	3
	NAS603-6P NAS679A3W	.	ATTACHING PARTS		
		.	SCREW	5199	6
		.	NUT	5199	6
		-----*			
114	BACC10DS2F	.	CLAMP	5199	2
115	BACC10DR2S	.	CHANNEL	5199	2
	NAS514P1032-16 NAS42DD6-32 NAS679A3W	.	ATTACHING PARTS		
		.	SCREW	5199	4
		.	SPACER.	5199	4
		.	NUT	5199	4
		-----*			
116	65-51381-18	.	BRACKET	5199	1
	NAS603-8P NAS679A3W	.	ATTACHING PARTS		
		.	SCREW	5199	2
		.	NUT	5199	2
		-----*			
117	BAC820E6A12H	.	BRACKET	5199	2
118	65-51381-8	.	ANGLE	5199	1
	BACS12CB3-6 AN960PD10L NAS679A3W	.	ATTACHING PARTS		
		.	SCREW	5199	2
		.	WASHER.	5199	2
		.	NUT	5199	2
		-----*			
119	65-51880-15	.	CLIP.	5199	1
120	BACC10DS2F	.	CLAMP	5199	1
121	BACC10DR5S	.	CHANNEL	5199	1
	NAS514P1032-8 NAS679A3W	.	ATTACHING PARTS		
		.	SCREW	5199	2
		.	NUT	5199	2
		-----*			
122	65-62457-1	.	BRACKET	5199	1
123	65-62457-6	.	BRACKET	5199	1
	NAS603-7P NAS603-22P NAS43DD3-48 NAS679A3W	.	ATTACHING PARTS		
		.	SCREW	5199	1
		.	SCREW	5199	1
		.	SPACER.	5199	1
		.	NUT	5199	2
		-----*			
128	BACC10DS2F	.	CLAMP	5199	1
129	BACC10DR5S	.	CHANNEL	5199	1
	NAS514P1032-8 NAS679A3W	.	ATTACHING PARTS		
		.	SCREW	5199	2
		.	NUT	5199	2
		-----*			
130	65-62457-2	.	BRACKET	5199	1
	NAS603-10P BACS18F25B	.	ATTACHING PARTS		
		.	SCREW	5199	1
		.	SPACER.	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
26F	NAS680A3	.	NUT	5199	1
131	BACC10DS2F	.	CLAMP	5199	2
132	BACC10DR3S	.	CHANNEL	5199	2
	NAS514P1032-8	.	ATTACHING PARTS		
	NAS679A3W	.	SCREW	5199	4
		.	NUT	5199	4
133	65-51381-9	.	ANGLE	5199	1
134	65-51381-10	.	ANGLE	5199	1
135	65-51381-11	.	CLIP	5199	2
	BACS12CB3-8	.	ATTACHING PARTS		
	AN960PD10L	.	SCREW	5199	4
	NAS679A3W	.	WASHER	5199	4
		.	NUT	5199	4
135A	BACC10DS2F	.	CLAMP	5199	2
135B	BACC10DR4S	.	CHANNEL	5199	2
	NAS514P1032-10	.	ATTACHING PARTS		
	NAS679A3W	.	SCREW	5199	4
		.	NUT	5199	4
136	69-49910-4	.	BRACKET	5199	1
137	69-49910-3	.	BRACKET	5199	1
	NAS603-6P	.	ATTACHING PARTS		
138	NAS603-8P	.	SCREW	5199	2
139	NAS603-8P	.	SCREW	5199	2
140	NAS679A3W	.	NUT	5199	4
141A	69-49910-5	.	BRACKET ASSY.	5199	1
142	69-49910-1	.	BRACKET	5199	1
	NAS603-6P	.	ATTACHING PARTS		
143	NAS603-8P	.	SCREW	5199	1
144	NAS603-8P	.	SCREW	5199	3
150	NAS514P1032-16	.	SCREW	5199	2
151	NAS514P1032-16P	.	SCREW	5199	2
152	NAS43DD3-32	.	SPACER	5199	4
152A	BACN10FX1	.	NUT	5199	4
152D	65-62457-13	.	BRACKET ASSY.	5199	1
152E	BACC10DS2F	.	CLAMP	5199	2
152F	BACC10DR5S	.	CHANNEL	5199	2
	NAS514P1032-10	.	ATTACHING PARTS		
	BACB30LU3-3	.	SCREW	5199	2
		.	(OPTIONAL BACB30LU3-3)		
	NAS679A3W	.	BOLT	5199	2
		.	(OPTIONAL TO NAS514P1032-10)		
		.	NUT	5199	2
153	65-62457-12	.	BRACKET	5199	1
	NAS603-10P	.	ATTACHING PARTS		
	BACS18F25B	.	SCREW	5199	1
	NAS680A3	.	SPACER	5199	1
		.	NUT	5199	1
157	65-62457-14	.	BRACKET	5199	1
	NAS603-10P	.	ATTACHING PARTS		
158	NAS514P1032-8	.	SCREW	5199	1
159	BACS18F25B	.	SCREW	5199	1
160	NAS680A3	.	SPACER	5199	1
161	NAS679A3W	.	NUT	5199	1
162		.	NUT	5199	1
162A	BACN10DZ3-200	.	BRACKET	5199	1
166	65-62457-10	.	ATTACHING PARTS		
167	NAS603-12P	.	SCREW	5199	1
168	NAS514P1032-11P	.	SCREW	5199	1
169	NAS603-10P	.	SCREW	5199	2
170	NAS43DD3-16	.	SPACER	5199	3
171	BACS18G30B	.	SPACER	5199	1
172	NAS679A3W	.	NUT	5199	4
172A	BACC10DR5S	.	CLAMP	5199	3

MISSING ITEM NUMBERS ARE NOT APPLICABLE

MISSING ITEM NUMBERS ARE NOT APPLICABLE

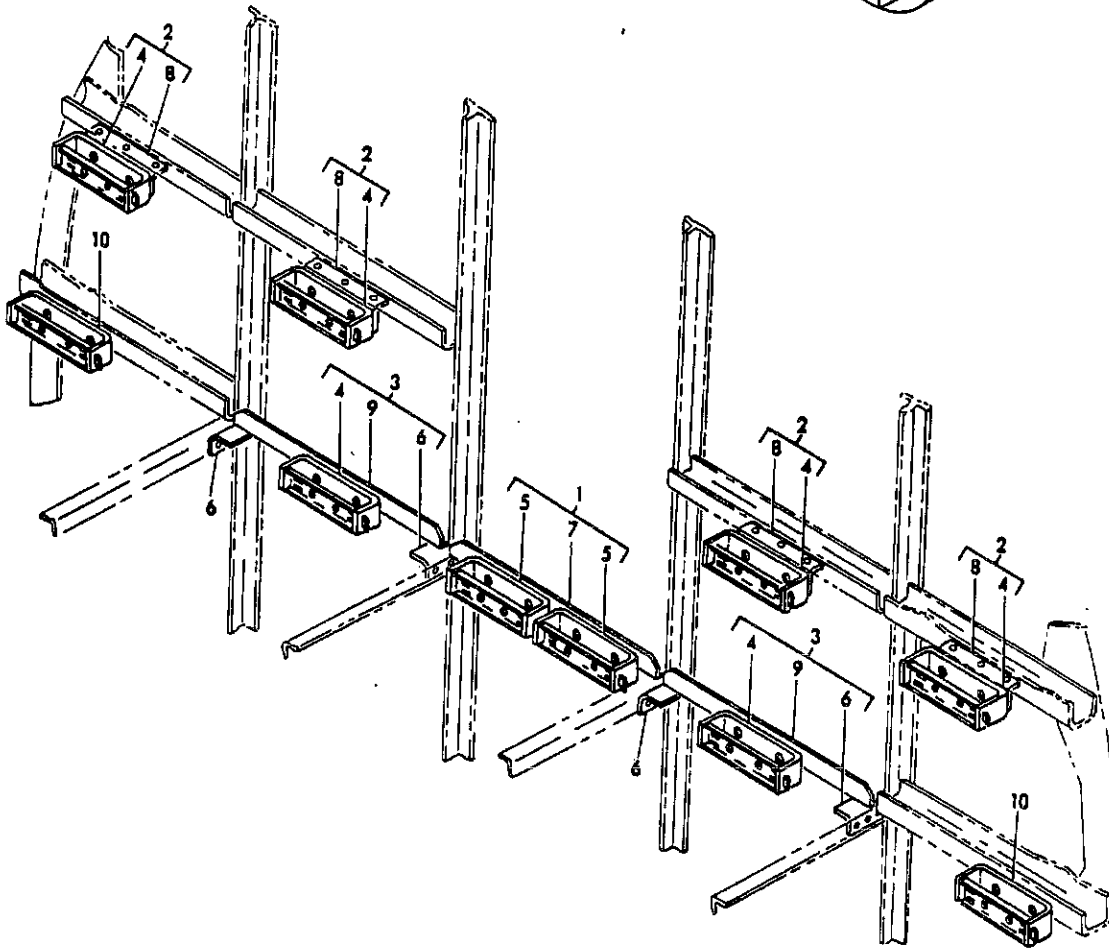
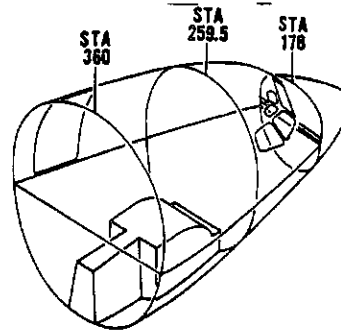


FIGURE 26G. CLAMP INSTL. STATION 178 WIRE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
26G	65-61930-1		CLAMP INSTL, STATION 178 WIRE (SEE 24-3, FIG. 5B, ITEM 163, 24-3, FIG. 5D, ITEM 165, 24-3, FIG. 5E, ITEM 122, 24-3, FIG. 5F, ITEM 175 AND 24-3, FIG. 12, ITEM 55)	5199	RF
1	65-61930-3		. BRACKET ASSY, SUPPORT	5199	1
2	65-61930-5		. BRACKET ASSY, SUPPORT	5199	4
3	65-61930-8		. BRACKET ASSY, SUPPORT	5199	2
4	BACC10DS2F		. CLAMP	5199	1
5	BACC10DS2F		. CLAMP, (USED ON 65-61930-3)	5199	2
			ATTACHING PARTS		
	NAS514P1032-16		. SCREW	5199	16
	BACS18F30B		. SPACER.	5199	16
6	65-61930-6		. . ANGLE, MOUNTING (ALTERED FROM BACB2D22E2T) (USED ON 65-61930-8)	5199	2
			ATTACHING PARTS		
	NAS603-10P		. SCREW	5199	4
	NAS679A3W		. NUT	5199	4
7	65-61930-2		. BRACKET, ANGLE (USED ON 65-61930-3)	5199	1
8	65-61930-4		. BRACKET, ANGLE (ALTERED FROM BACB2C40DCT3) (USED ON 65-61930-5)	5199	1
9	65-61930-7		. BRACKET, ANGLE (USED ON 65-61930-8)	5199	2
10	BACC10DS2F		. CLAMP	5199	2
			ATTACHING PARTS		
	NAS514P1032-16		. SCREW	5199	4
	BACS18F30B		. SPACER.	5199	4
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

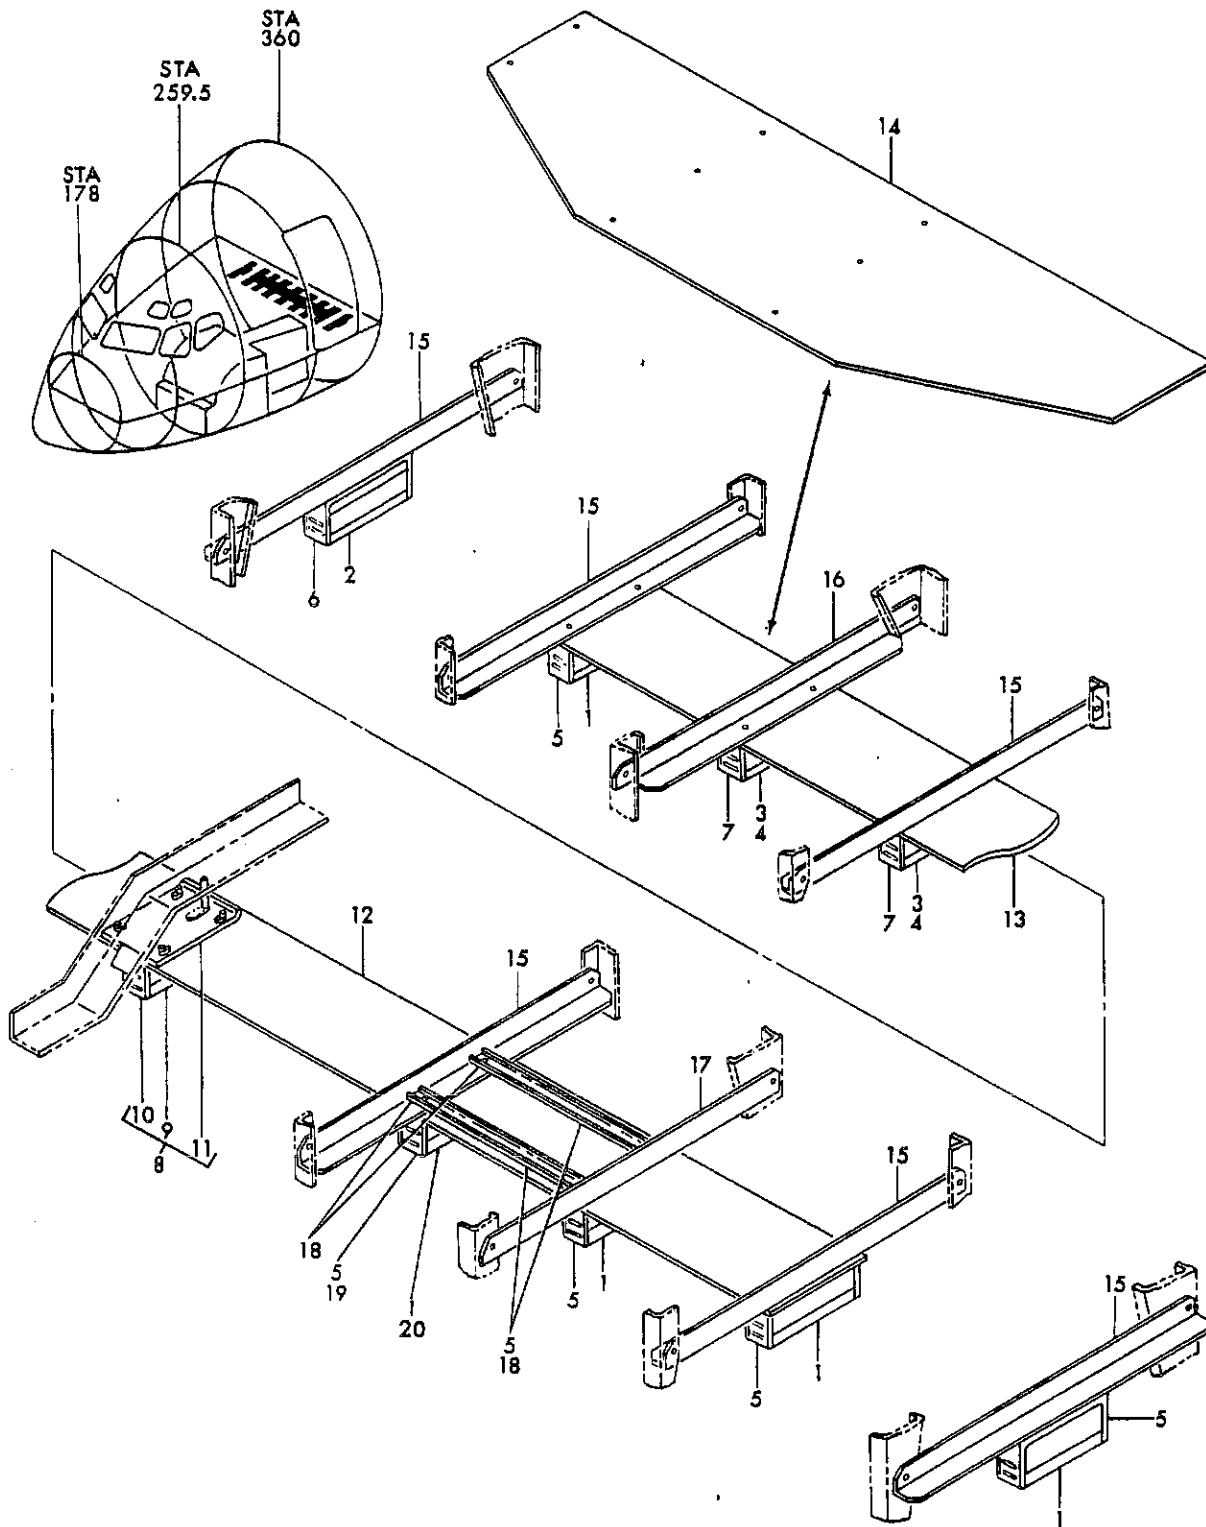


FIGURE 26H. CLAMP INSTL. STATION 344 TO 360 RACEWAY



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
26H	65-61833-1		CLAMP INSTL, STATION 344 TO 360 RACEWAY (SEE 24-3, FIG. 5B, ITEM 162, 24-3, FIG. 5D, ITEM 164, 24-3, FIG. 5E, ITEM 121 AND 24-3, FIG. 5F, ITEM 103A)	5199	RF
1	BACC10DS3	.	CLAMP	5199	5
2	BACC10DS3	.	CLAMP	5199	1
3	BACC10DS3	.	CLAMP	5199	2
5	BACC10DR7	.	CHANNEL	5199	5
6	BACC10DR7	.	CHANNEL	5199	1
7	BACC10DR7	.	CHANNEL	5199	2
			ATTACHING PARTS		
	NAS514P1032-8	.	SCREW	5199	16
	BACN10JC3	.	NUT	5199	16
			-----*		
8	65-61833-7	.	SUPPORT ASSY.	5199	1
			ATTACHING PARTS		
	NAS514P1032-14	.	SCREW	5199	2
	BACN10JC3	.	NUT	5199	2
			-----*		
9	BACC10DS3	.	CLAMP	5199	1
			ATTACHING PARTS		
	NAS603-6P	.	SCREW	5199	2
			-----*		
10	BACC10DR9	.	CHANNEL	5199	1
			ATTACHING PARTS		
	NAS679A3W	.	NUT	5199	2
			-----*		
11	65-61833-8	.	SUPPORT	5199	1
12	65-61833-5	.	SHIELD	5199	1
15	65-61833-2	.	SUPPORT	5199	6
16	65-61833-3	.	SUPPORT	5199	1
17	65-61833-4	.	SUPPORT	5199	1
			ATTACHING PARTS		
	NAS603-6P	.	SCREW	5199	16
	NAS679A3W	.	NUT	5199	16
			-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

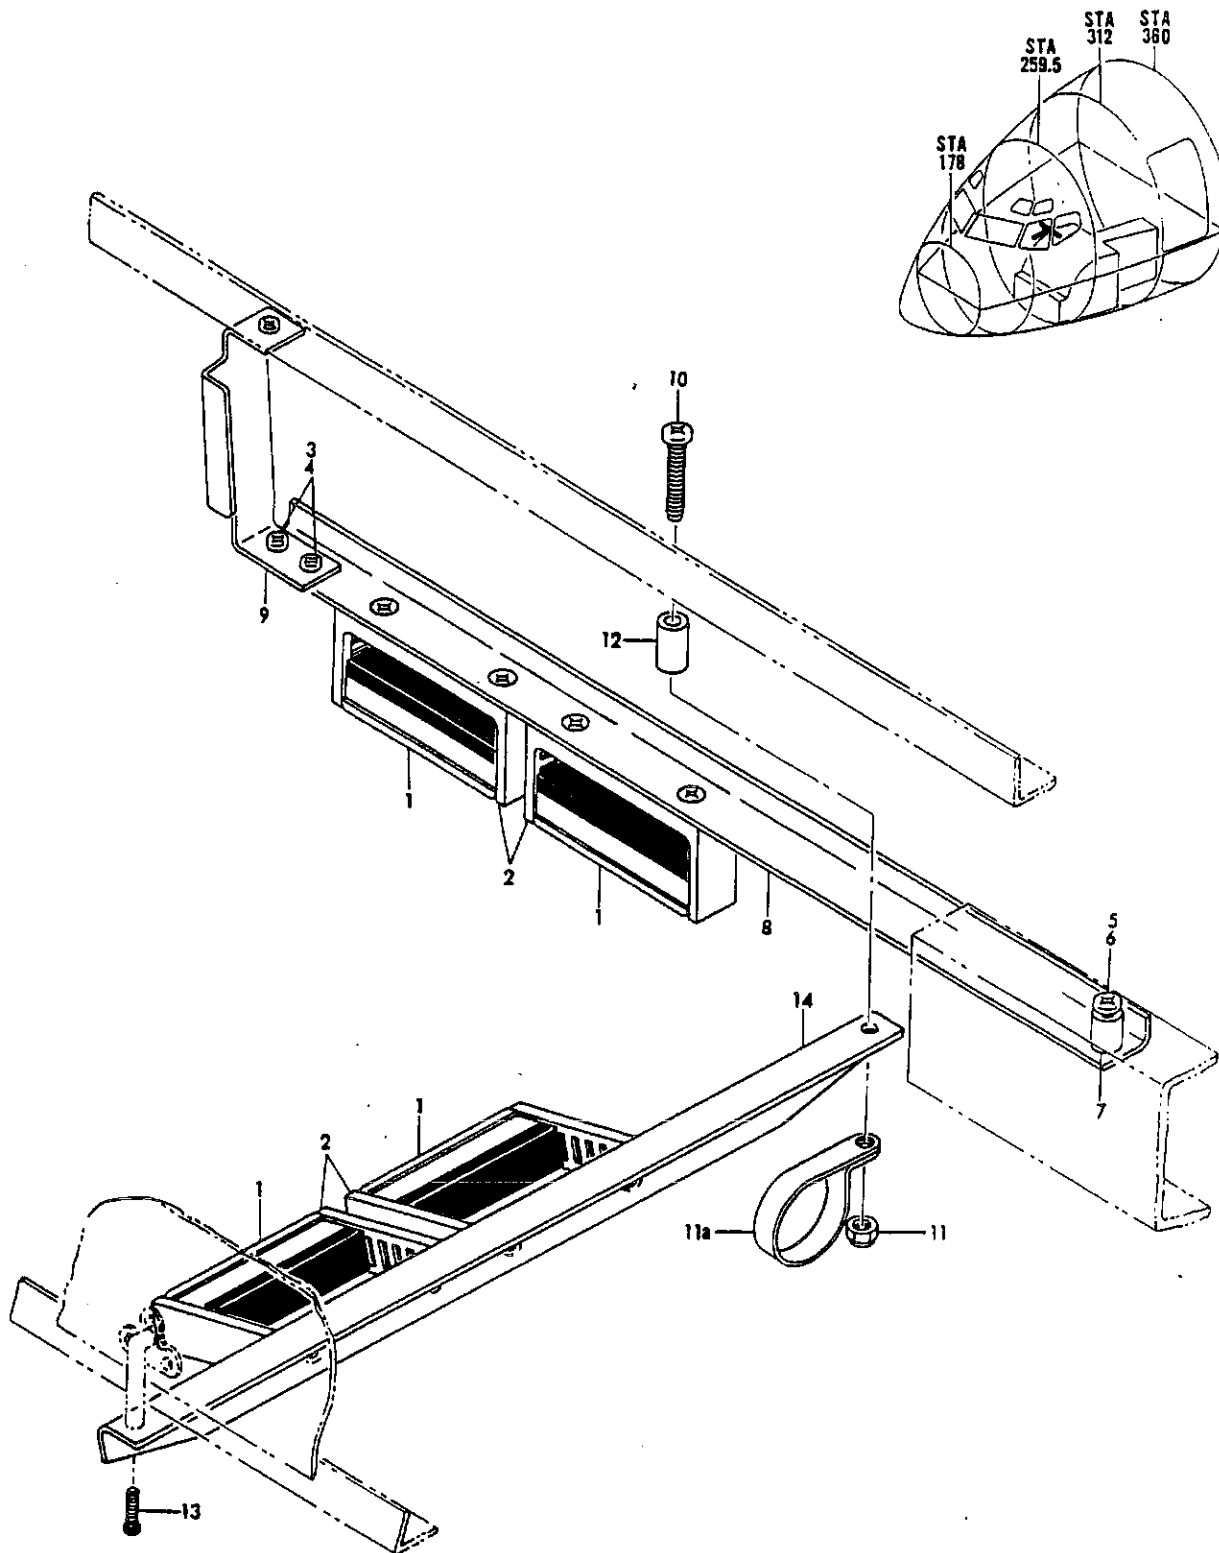


FIGURE 26J. CLAMP INSTL, STATION 277 P11 WIRE BUNDLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
26J	65-61862-1	CLAMP INSTL, STATION 277 P11 WIRE BUNDLE (SEE 24-3, . . FIG. 1A, ITEM 117, 24-3, FIG. 1B, ITEM 107, 24-3, FIG. 1C, ITEM 105 AND 24-3, FIG. 11, ITEM 7)							5199	RF
1	BACC10DS2F	. CLAMP							5199	4
2	BACC10DR5S	. CHANNEL							5199	4
	NAS514P1032-10	. ATTACHING PARTS							5199	4
	NAS679A3W	. SCREW							5199	4
		. NUT							5199	4
		-----*								
3	NAS603-6P	. SCREW							5199	2
4	NAS679A3W	. NUT							5199	2
5	NAS603-20P	. SCREW							5199	1
6	NAS679A3W	. NUT							5199	1
7	BACS18K10-48W	. SPACER.							5199	1
8	69-49252-3	. ANGLE							5199	1
9	69-49252-1	. ANGLE							5199	1
	NAS603-BP	. ATTACHING PARTS							5199	1
	NAS679A3W	. SCREW							5199	1
		. NUT							5199	1
		-----*								
10	NAS603-24P	. SCREW							5199	1
11	NAS679A3W	. NUT							5199	1
11A	AN742D32	. CLAMP							5199	1
12	BACS18K10-54W	. SPACER.							5199	1
13	NAS603-28P	. SCREW							5199	1
14	69-49252-2	. ANGLE							5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

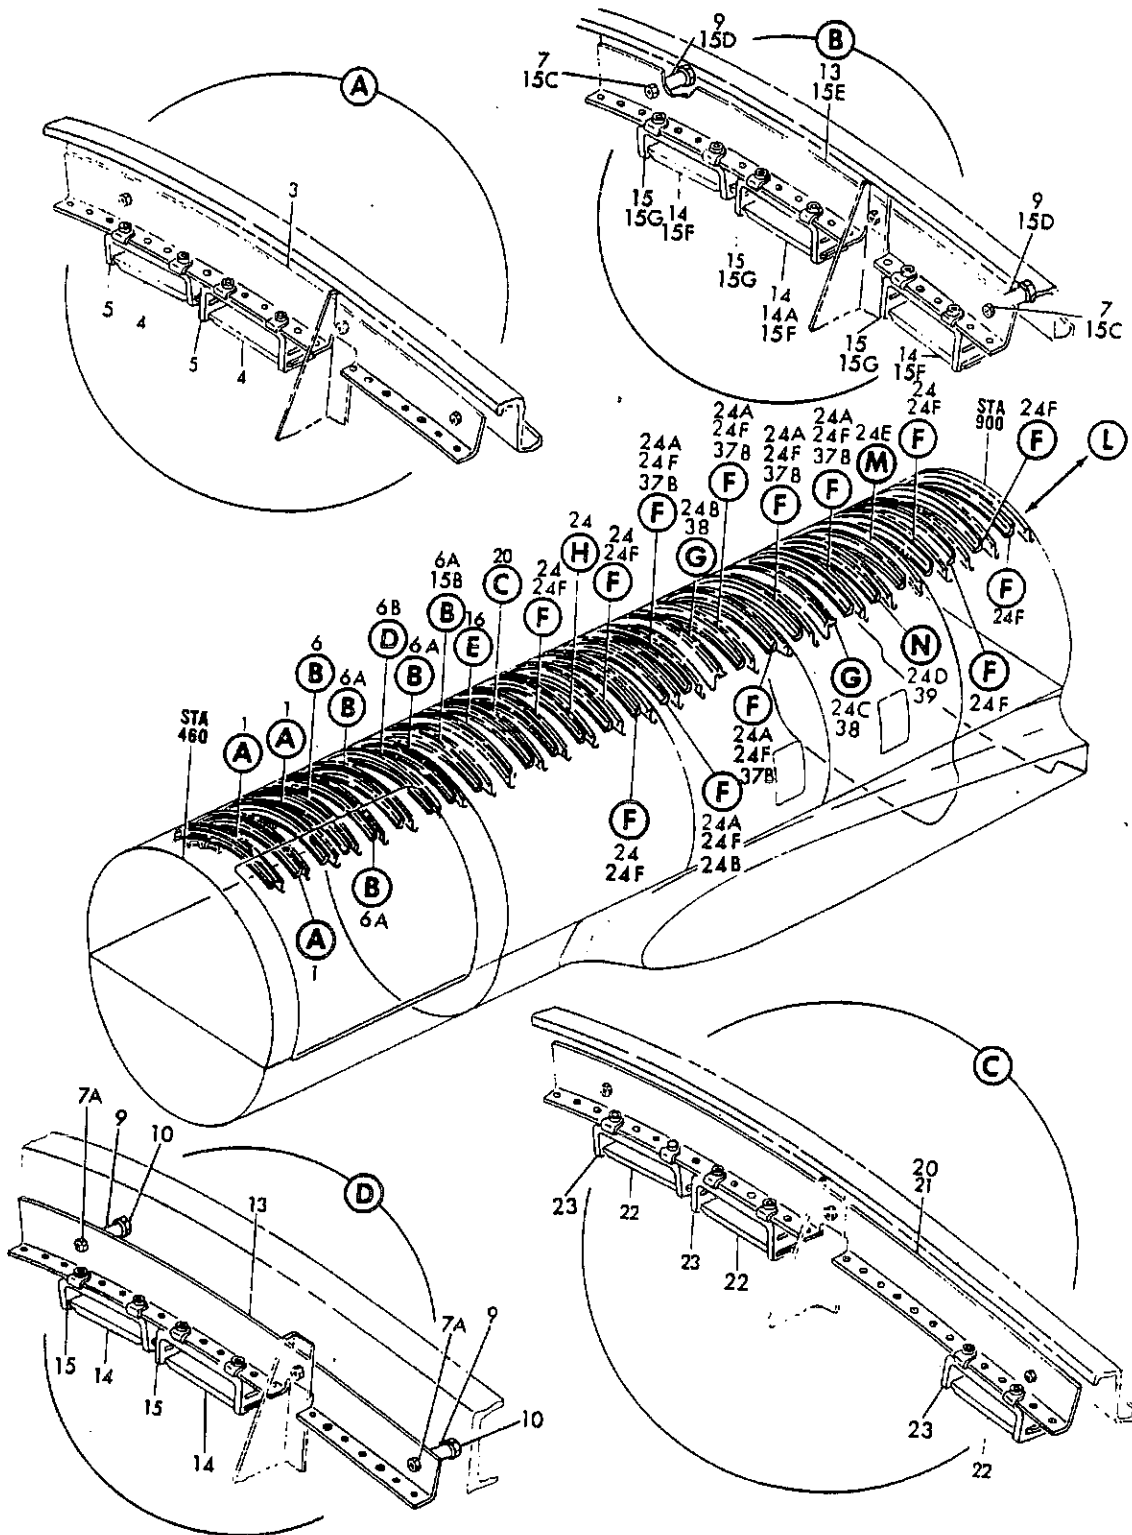


FIGURE 26P. CLAMP INSTL, SECTION 53 AND 56 OVERHEAD WIRING (SHEET 1)

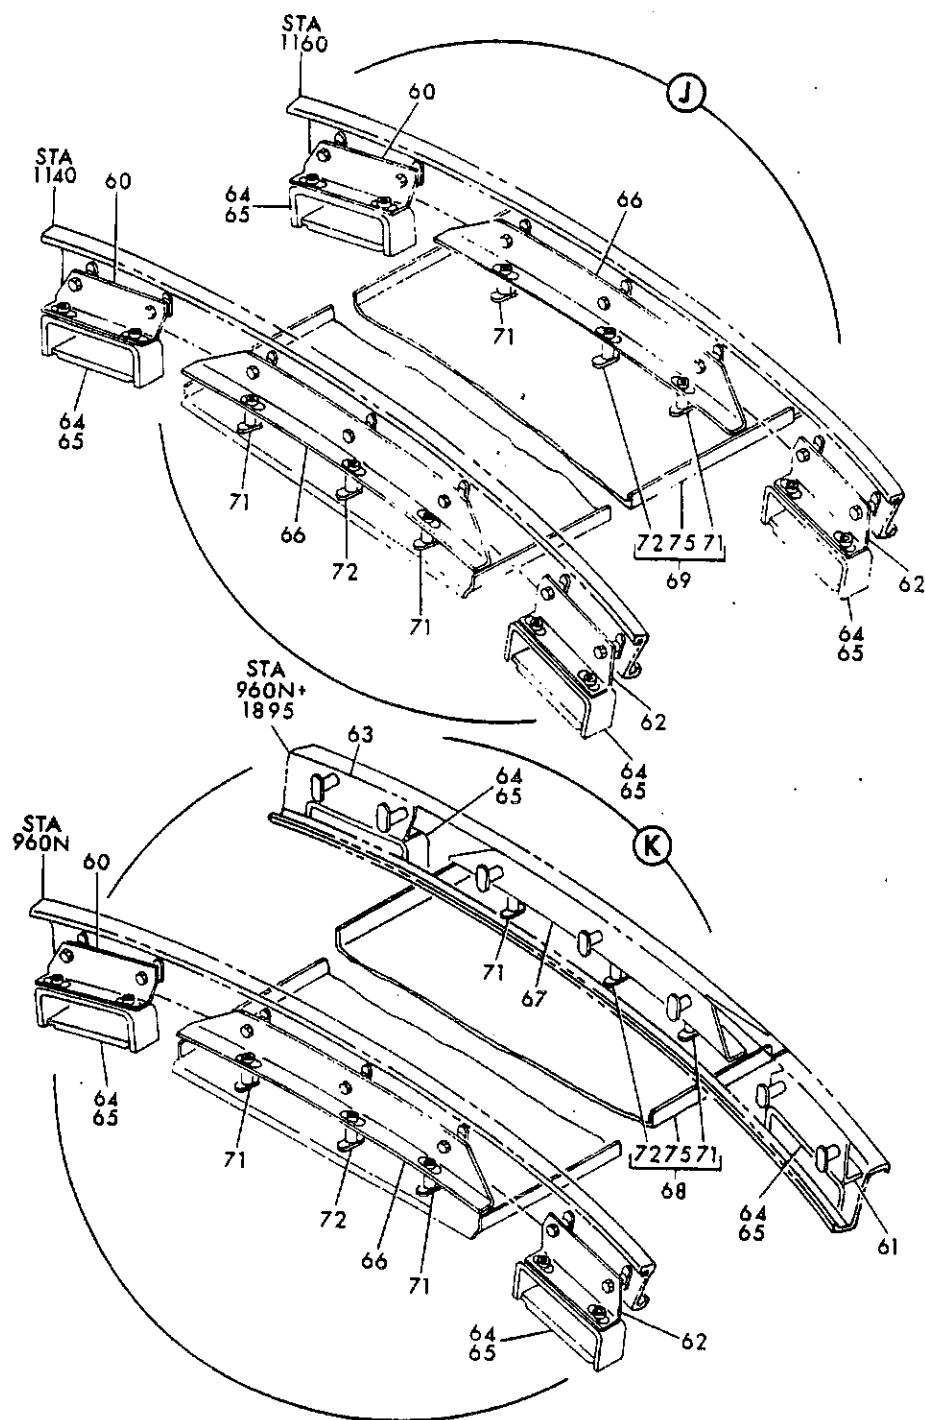


FIGURE 26P. CLAMP INSTL, SECTION 53 AND 56 OVERHEAD WIRING (SHEET 3)

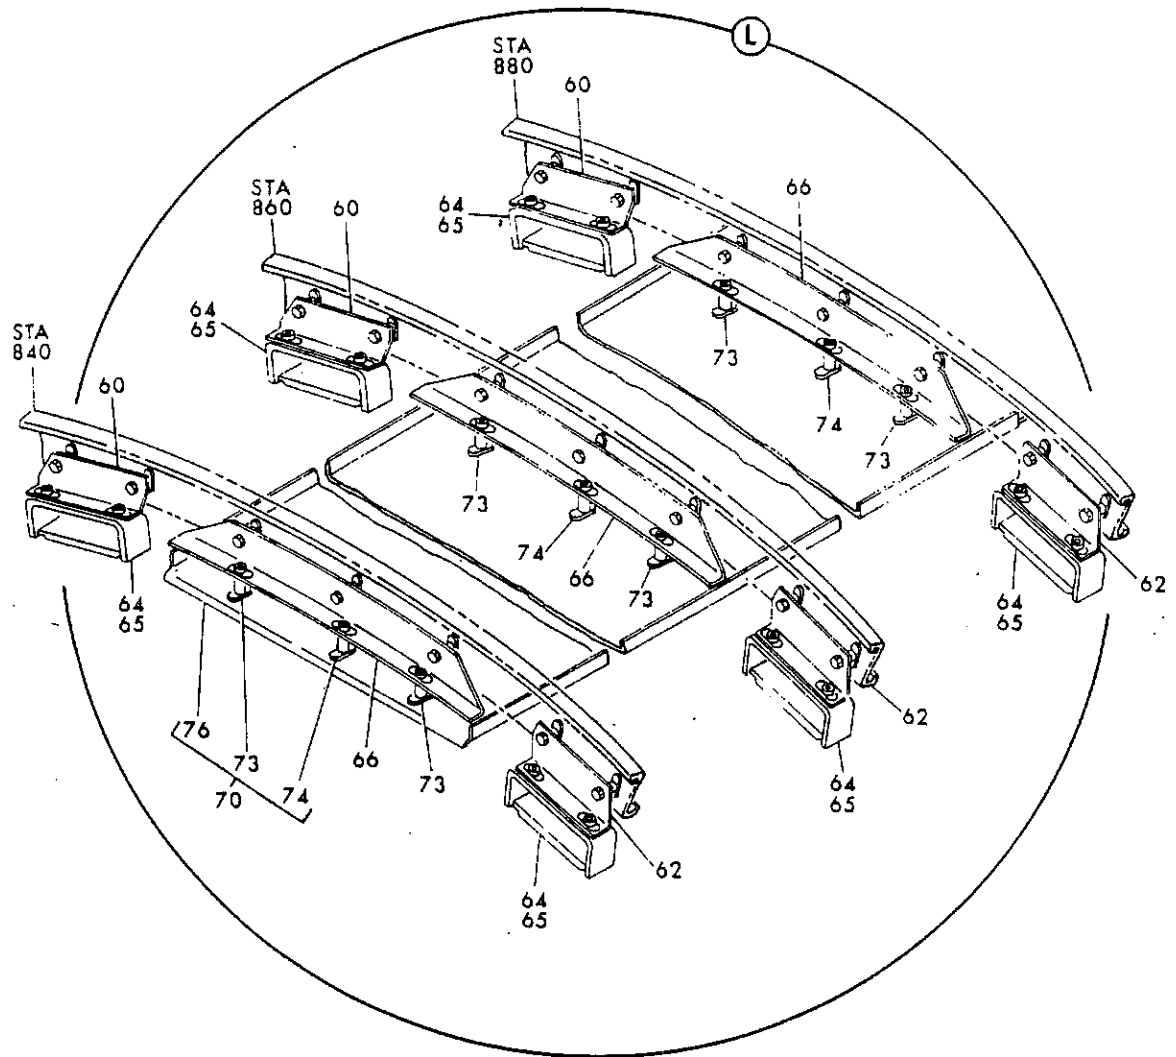


FIGURE 26P. CLAMP INSTL, SECTION 53 AND 56 OVERHEAD WIRING (SHEET 4)

NOV 21/90

24-13-26P

DETAILED PARTS LIST
24-13-26P
PAGE 3

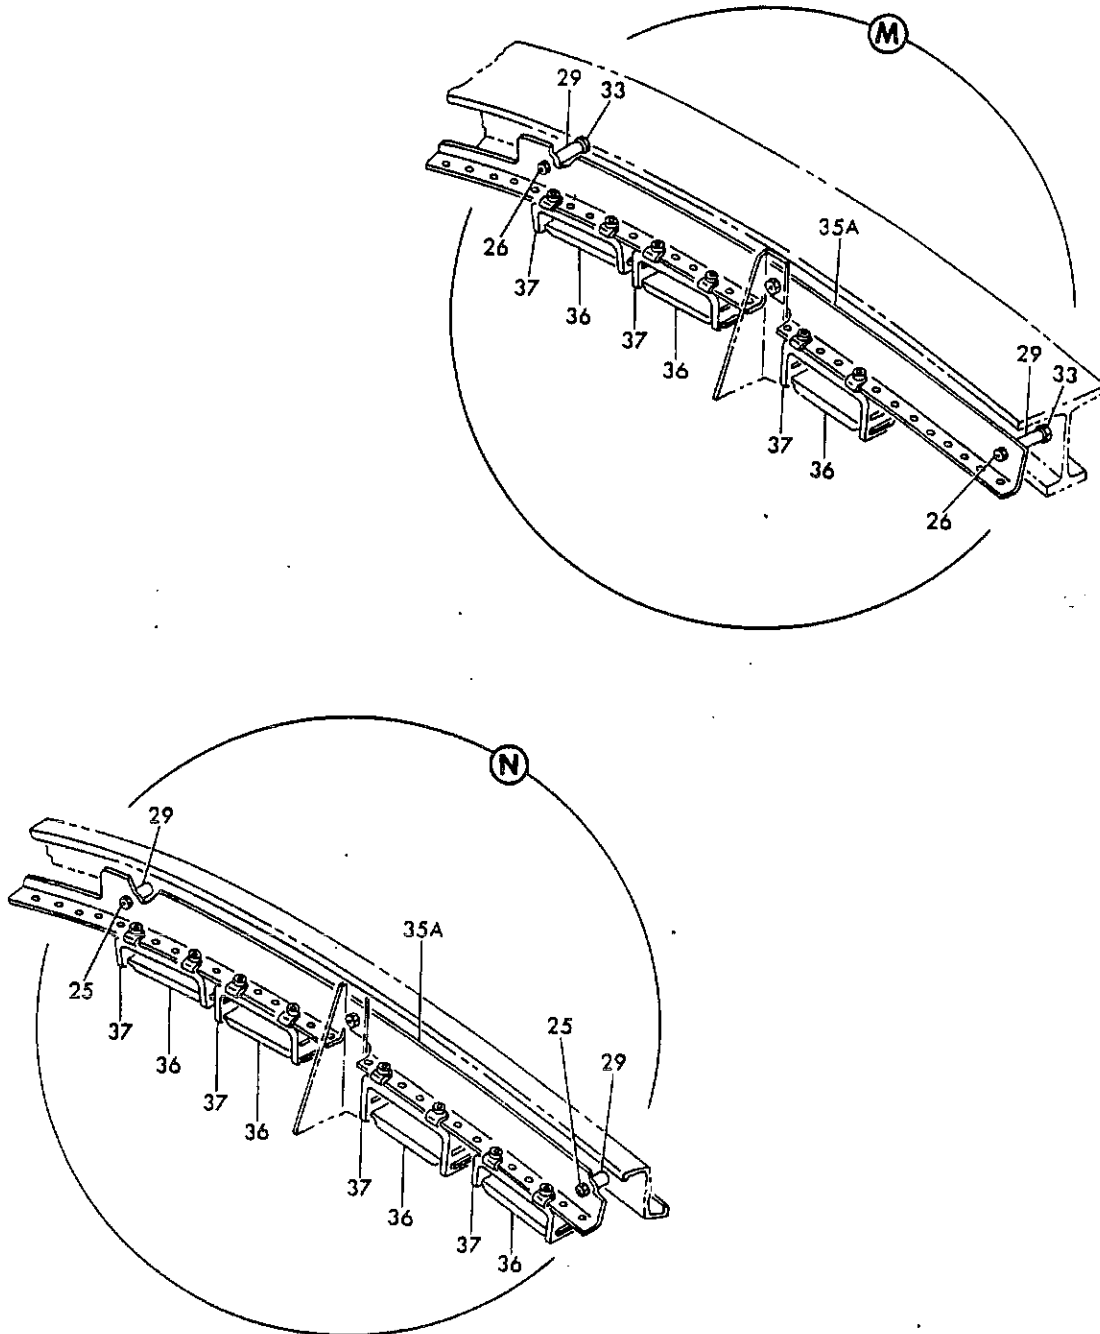


FIGURE 26P. CLAMP INSTL. SECTION 53 AND 56 OVERHEAD WIRING (SHEET 5)

BOEING **707**
Intercontinental

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R R R R	26P	CLAMP INSTL, SECTION 53 AND 56 OVERHEAD WIRING.							0150	RF
		. CLAMP INSTL, SECTION 53 OVERHEAD WIRING (SEE 24-3, . . .								
		FIG. 2, ITEM 101)							5199	RF
		. CLAMP INSTL, SECTION 53 OVERHEAD WIRING (VARIABLE . .								
		DWG:65-51346-5001) (SEE 24-3, FIG. 2, ITEM 101)								
	1	65-51346-4	. . BRACKET ASSY.							3
			ATTACHING PARTS							
		BACS12CB3-14	. . SCREW							6
		BACS18G48B3	. . SPACER.							6
			-----*							
	3	69-25491-4	. . BRACKET							1
	4	BACC10DS3	. . CLAMP							2
	5	BACC10DR7	. . CHANNEL							2
			ATTACHING PARTS							
		BACR15BA6A	. . RIVET							4
			(OPTIONAL NAS514P1032-10 WITH BACN10FX1W)							
		NAS514P1032-10	. . SCREW, (WITH BACN10FX1W).							4
			(OPTIONAL TO BACR15BA6A)							
		BACN10FX1W	. . NUT, (USED WITH NAS514P1032-10)							4
			-----*							
	6	65-51346-5	. . BRACKET ASSY.							1
	6A	65-51346-5	. . BRACKET ASSY.							4
	6B	65-51346-5	. . BRACKET ASSY.							1
			ATTACHING PARTS							
	7	BACS12CB3-14	. . SCREW							10
	7A	BACS12CB3-18	. . SCREW							2
	9	BACS18G48B3	. . SPACER.							10
	9	NAS43DD3-32	. . SPACER.							2
	10	BACN10JC3	. . NUT							2
			-----*							
	13	69-25491-4	. . BRACKET							1
	14	BACC10DS3	. . CLAMP							2
	14A	BACC10DS3	. . CLAMP, (USED ON 65-51346-5)							1
	15	BACC10DR7	. . CHANNEL							2
	15A	BACC10DR7	. . CHANNEL, (USED ON 65-51346-5)							1
			ATTACHING PARTS							
		BACR15BA6A	. . RIVET							6
			(OPTIONAL NAS514P1032-10 WITH BACN10FX1W)							
		NAS514P1032-10	. . SCREW, (WITH BACN10FX1W).							6
			(OPTIONAL TO BACR15BA6A)							
		BACN10FX1W	. . NUT, (USED WITH NAS514P1032-10)							6
			-----*							
	16	65-51346-3	. . BRACKET ASSY.							1
			ATTACHING PARTS							
		BACS12CB3-32	. . SCREW							3
		NAS43DD3-94	. . SPACER.							3
		BACN10JC3	. . NUT							3
			-----*							
	17	69-25491-3	. . BRACKET							1
	18	BACC10DS3	. . CLAMP							3
	19A	BACC10DR7	. . CHANNEL							3
			ATTACHING PARTS							
		BACR15BA6A	. . RIVET							6
			(OPTIONAL NAS514P1032-10 WITH BACN10FX1W)							
		NAS514P1032-10	. . SCREW, (WITH BACN10FX1W).							6
			(OPTIONAL TO BACR15BA6A)							
		BACN10FX1W	. . NUT, (USED WITH NAS514P1032-10)							6
			-----*							
	20	65-51346-8	. . BRACKET ASSY.							1
			ATTACHING PARTS							
		BACS12CB3-14	. . SCREW							2
		BACS18G48B3	. . SPACER.							2
			-----*							
	21	69-25491-2	. . BRACKET							1
	22	BACC10DS3	. . CLAMP							3
	23	BACC10DR7	. . CHANNEL							3
			ATTACHING PARTS							
		BACR15BA6A	. . RIVET							6
			(OPTIONAL NAS514P1032-10 WITH BACN10FX1W)							
		NAS514P1032-10	. . SCREW, (WITH BACN10FX1W).							6
			(OPTIONAL TO BACR15BA6A)							
		BACN10FX1W	. . NUT, (USED WITH NAS514P1032-10)							6
			-----*							
	24	65-51346-6	. . BRACKET ASSY.							11

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R R R R R R	26P 24A	65-51346-6	•	•	BRACKET ASSY.	•	•	•	0150 5199 0150 5199	6
	24B	65-51346-7	•	•	BRACKET ASSY.	•	•	•		1
	24C	65-51346-7	•	•	BRACKET ASSY.	•	•	•		1
	24D	65-51346-11	•	•	BRACKET ASSY.	•	•	•		1
	24E	65-51346-23	•	•	BRACKET ASSY.	•	•	•		1
	24E	65-51346-11	•	•	BRACKET ASSY.	•	•	•		1
	24E	65-51346-23	•	•	BRACKET ASSY.	•	•	•		1
	25.	BACS12CB3-14	•	•	ATTACHING PARTS	•	•	•	0150	24
	25	BACS12CB3-14	•	•	SCREW	•	•	•		18
	26	BACS12CB3-28	•	•	SCREW, (USED WITH 65-51346-11, -31)	•	•	•		2
	29	BACS18G48B3	•	•	SPACER.	•	•	•		24
	29	BACS18G48B3	•	•	SPACER.	•	•	•		18
	33	BACN10JC3	•	•	NUT, (USED WITH 65-51346-11, -31)	•	•	•		2
R R R R R R	35	69-25491-2	•	•	BRACKET	•	•	•	0150	1
	35A	69-25491-19	•	•	BRACKET, (USED ON 65-51346-11, -23, -30, -31)	•	•	•		1
	35A	69-25491-1	•	•	BRACKET, (USED ON 65-51346-7)	•	•	•		1
	36	BACC10DS3	•	•	CLAMP	•	•	•		4
	37.	BACC10DR7	•	•	CHANNEL	•	•	•		4
		BACR15BA6A	•	•	ATTACHING PARTS	•	•	•	0150	8
		NAS514P1032-10	•	•	SCREW, (WITH BACN10FX1W)	•	•	•		8
		BACN10FX1W	•	•	NUT, (USED WITH NAS514P1032-10)	•	•	•		8
		65-51346-2	•	•	CLAMP INSTL, SECTION 56 OVERHEAD WIRING (SEE 24-3, FIG. 3, ITEM 44)	•	•	•		RF
		65-51346-2	•	•	CLAMP INSTL, SECTION 56 OVERHEAD WIRING (VARIABLE DWG; 65-51346-5004) (SEE 24-3, FIG. 3, ITEM 44)	•	•	•		RF
R R R R R R	43	65-51346-6	•	•	BRACKET ASSY.	•	•	•	0151 5299	6
	43	65-51346-26	•	•	BRACKET ASSY.	•	•	•		1
	43A	65-51346-6	•	•	BRACKET ASSY.	•	•	•		2
		BACS12CB3-14	•	•	ATTACHING PARTS	•	•	•		16
		BACS18G48B3	•	•	SCREW	•	•	•		16
		BACS12CB3-14	•	•	SCREW	•	•	•		4
		BACS18G48B3	•	•	SPACER.	•	•	•		4
	44	69-25491-2	•	•	BRACKET	•	•	•	0151 5299	1
	44A	69-25491-2	•	•	BRACKET	•	•	•		1
	45	BACC10DS3	•	•	CLAMP	•	•	•		4
	45A	BACC10DS3	•	•	CLAMP	•	•	•		4
	46	BACC10DR7	•	•	CHANNEL	•	•	•		4
	46A	BACC10DR7	•	•	CHANNEL	•	•	•		4
R R R R R R		BACR15BA6A	•	•	ATTACHING PARTS	•	•	•	0151 5299	8
		NAS514P1032-10	•	•	SCREW, (WITH BACN10FX1W)	•	•	•		8
		BACN10FX1W	•	•	NUT, (USED WITH NAS514P1032-10)	•	•	•		8
	47	65-51346-7	•	•	BRACKET ASSY.	•	•	•		1
	47	65-51346-28	•	•	BRACKET ASSY.	•	•	•		1
		BACS12CB3-14	•	•	ATTACHING PARTS	•	•	•		2
		BACS18G48B3	•	•	SCREW	•	•	•		2
	48	69-25491-1	•	•	BRACKET	•	•	•	0150 5199	1
	49	BACC10DS3	•	•	CLAMP	•	•	•		4
	50	BACC10DR7	•	•	CHANNEL	•	•	•		4
		BACR15BA6A	•	•	ATTACHING PARTS	•	•	•		8
		NAS514P1032-10	•	•	SCREW, (WITH BACN10FX1W)	•	•	•		8
		BACN10FX1W	•	•	NUT, (USED WITH NAS514P1032-10)	•	•	•		8
R R	51	65-51346-11	•	•	BRACKET ASSY.	•	•	•	0150 5199	1
	51	65-51346-23	•	•	BRACKET ASSY.	•	•	•		1
	51A	65-51346-11	•	•	BRACKET ASSY.	•	•	•		1
		BACS12CB3-14	•	•	ATTACHING PARTS	•	•	•		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
26P	BACS18G48B3	. .	SPACER.		2
52	69-25491-19	. . .	BRACKET		1
53	BACC10DS3	. . .	CLAMP		4
54	BACC10DR7	. . .	CHANNEL		4
			ATTACHING PARTS		
	BACR15BA6A	. . .	RIVET		8
			(OPTIONAL NAS514P1032-10 WITH BACN10FX1W)		
	NAS514P1032-10	. . .	SCREW, (WITH BACN10FX1W).		8
			(OPTIONAL TO BACR15BA6A)		
	BACN10FX1W	. . .	NUT, (USED WITH NAS514P1032-10)		8
56	65-51346-6	. .	BRACKET ASSY.		3
			ATTACHING PARTS		
	BACS12CB3-14	. .	SCREW		6
	BACS18G48B3	. .	SPACER.		6
57	69-25491-2	. . .	BRACKET		1
58	BACC10DS3	. . .	CLAMP		4
59	BACC10DR7	. . .	CHANNEL		4
			ATTACHING PARTS		
	BACR15BA6A	. . .	RIVET		8
			(OPTIONAL NAS514P1032-10 WITH BACN10FX1W)		
	NAS514P1032-10	. . .	SCREW, (WITH BACN10FX1W).		8
			(OPTIONAL TO BACR15BA6A)		
	BACN10FX1W	. . .	NUT, (USED WITH NAS514P1032-10)		8
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

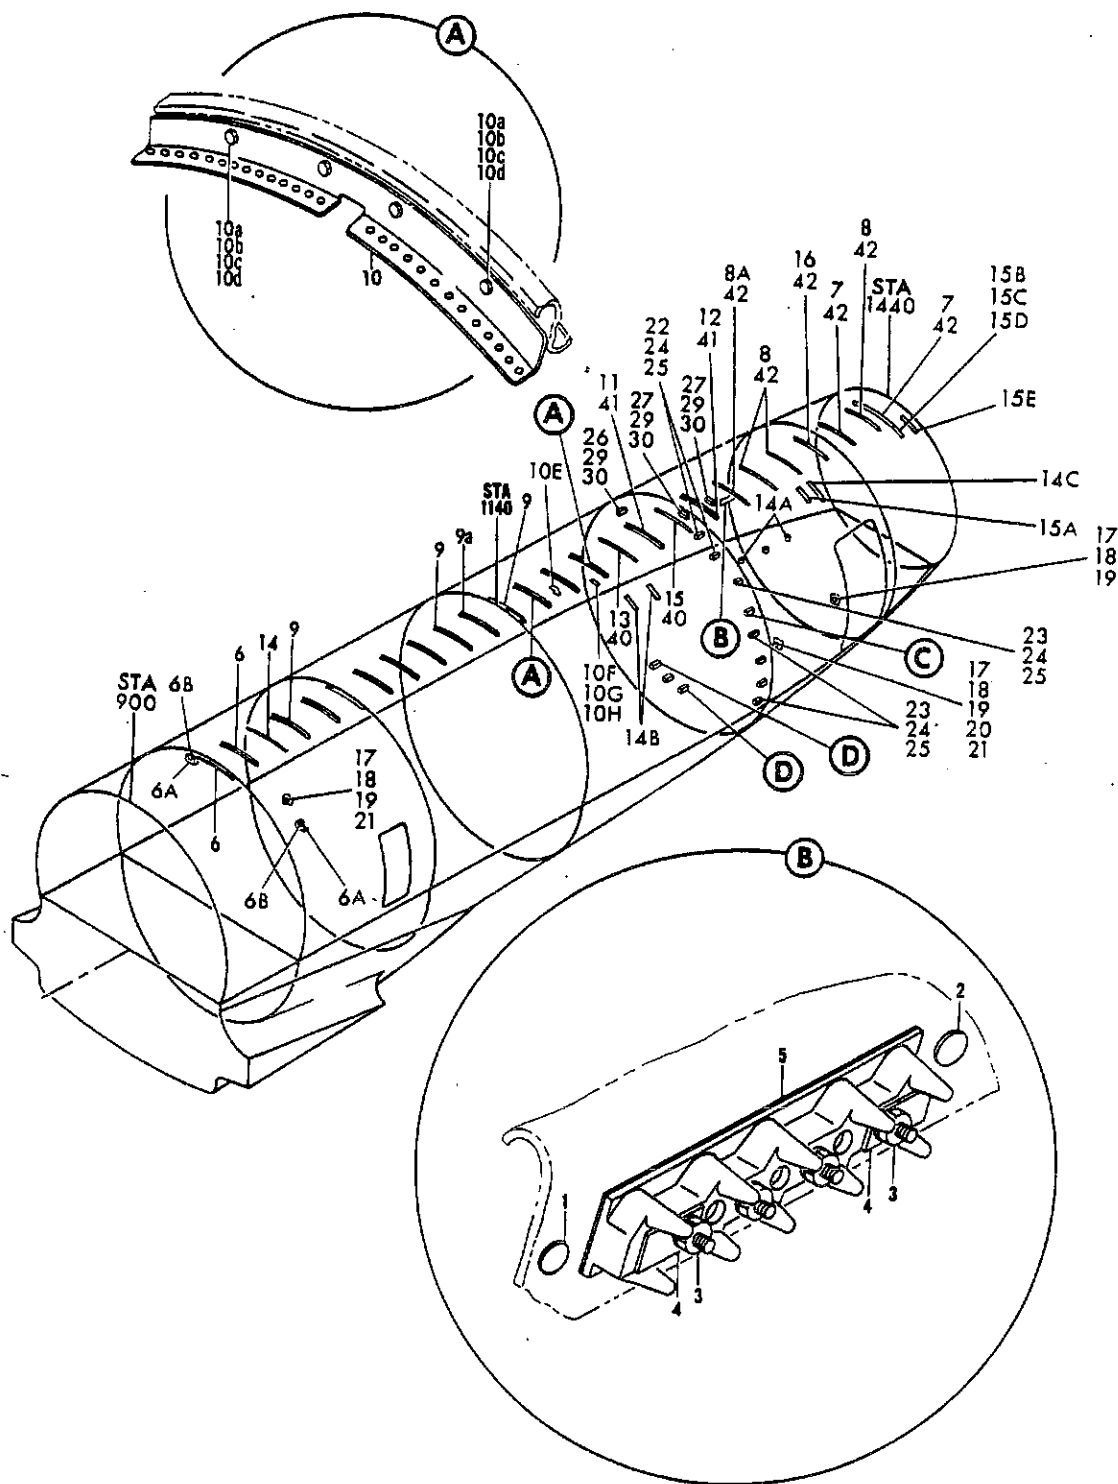


FIGURE 28. BRACKET INSTL, SECTION 56 WIRING (SHEET 1)


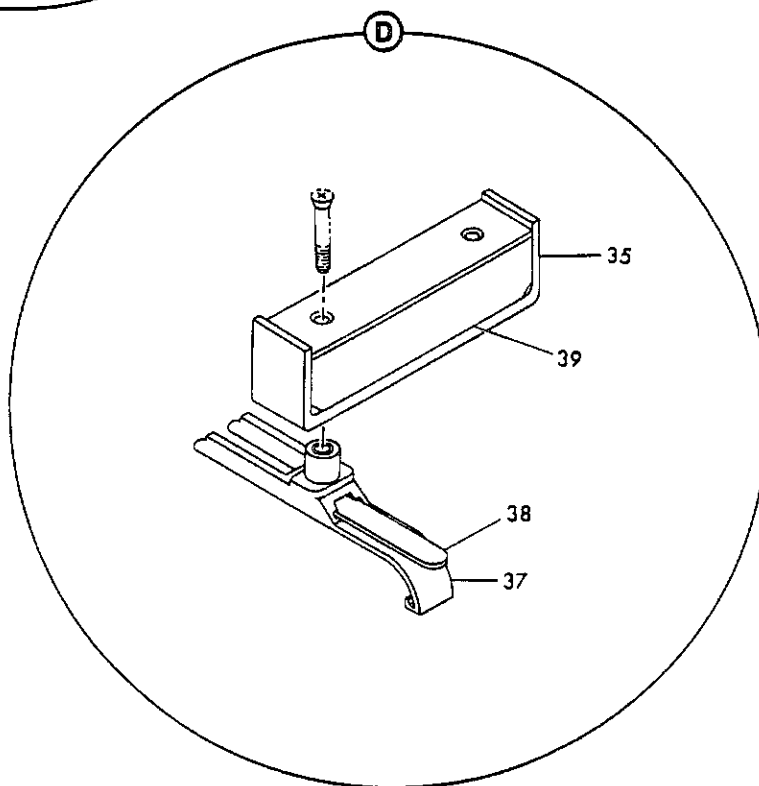


FIGURE 28. BRACKET INSTL, SECTION 56 WIRING (SHEET 2)

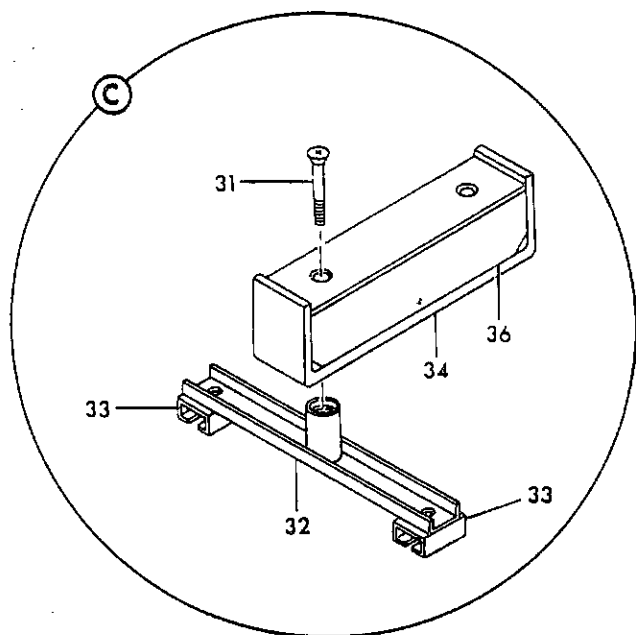

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
28	65-6843-71	BRACKET INSTL, SECTION 56 WIRING.								RF
		. BRACKET INSTL, SECTION 56 WIRING (SEE 24-3, FIG. 3, .								
		ITEM 53)								
7	69-25491-7	. . BRACKET, WIRE SUPPORT								1
		ATTACHING PARTS								
	BACS12CB3-32	. . SCREW								3
	BACS18F152B	. . SPACER.								3
		-----*								
8	69-25491-7	. . BRACKET, WIRE SUPPORT								3
		ATTACHING PARTS								
	BACS12CB3-32	. . SCREW								9
	BACS18F152B	. . SPACER.								9
		-----*								
8A	69-25491-7	. . BRACKET, WIRE SUPPORT							5199	1
8A	69-25491-21	. . BRACKET, WIRE SUPPORT							0150	1
		ATTACHING PARTS								
	BACS12CB3-32	. . SCREW								3
	BACS18F152B	. . SPACER.								3
		-----*								
11	69-25491-2	. . BRACKET, WIRE SUPPORT								1
		ATTACHING PARTS								
	BACS12CB3-18	. . SCREW								3
	BACS18F70B	. . SPACER.								3
		-----*								
12	69-25491-2	. . BRACKET, WIRE SUPPORT								1
		ATTACHING PARTS								
	BACS12CB3-18	. . SCREW								3
	BACS18F70B	. . SPACER.								3
		-----*								
13	69-25491-1	. . BRACKET, WIRE SUPPORT								1
		ATTACHING PARTS								
	BACS12CB3-30	. . SCREW								3
	BACS18F145B	. . SPACER.								3
		-----*								
15	69-25491-1	. . BRACKET, WIRE SUPPORT								1
		ATTACHING PARTS								
	BACS12CB3-30	. . SCREW								3
	BACS18F145B	. . SPACER.								3
		-----*								
16	69-25491-7	. . BRACKET, WIRE SUPPORT								1
		ATTACHING PARTS								
	BACS12CB3-32	. . SCREW								3
	BACS18F152B	. . SPACER.								3
		-----*								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										


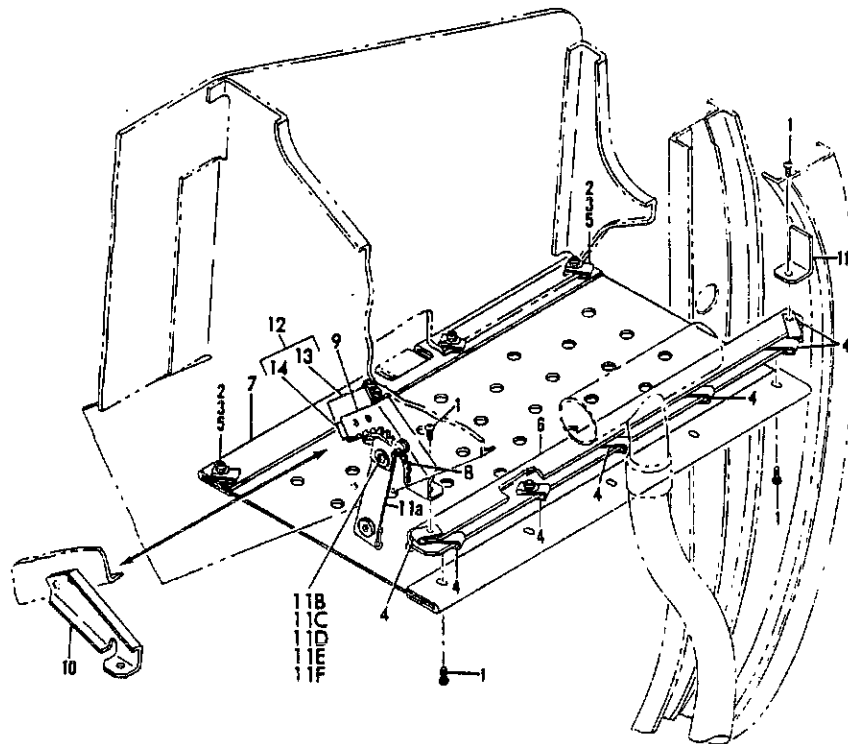


FIGURE 29. GUARD INSTL, PILOT AND COPILOT MAIN INSTRUMENT PANEL WIRE

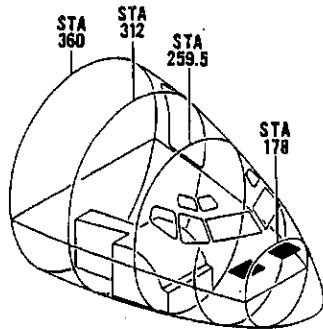

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R 29	65-15576-1	GUARD INSTL, PILOT AND COPILOT MAIN INSTRUMENT PANEL. .							0150	RF
R		WIRE (LH) (SEE 24-3, FIG. 1A, ITEM 103, 24-3, FIG.								
R		1B, ITEM 93 AND 24-3, FIG. 1C, ITEM 91)								
R	65-15576-2	GUARD INSTL, PILOT AND COPILOT MAIN INSTRUMENT PANEL. .							0150	RF
R		WIRE (RH) (SEE 24-3, FIG. 1A, ITEM 104, 24-3, FIG.								
R		1B, ITEM 94 AND 24-3, FIG. 1C, ITEM 92)								
R 1	NAS603-6P	. SCREW							0150	7
R 2	NAS603-7P	. SCREW							0150	4
R 3	AN960C10L	. WASHER.							0150	4
R 4	BACN10FX1W	. NUT							0150	7
R 5	BACN10FX4	. NUT							0150	4
R 6	69-12627-1	. CHANNEL, WIRE GUARD SUPPORT BRACKET							0150	1
R 7	65-15568-3	. GUARD ASSY.							0150	1
R	69-12627-15	. BRACKET ASSY, LH (LH ONLY).							0150	1
R	69-12627-16	. BRACKET ASSY, RH (RH ONLY).							0150	1
R 9	69-12627-13	. . BRACKET, LH							0150	1
R 9	69-12627-14	. . BRACKET, RH							0150	1
R 11	69-12627-17	. CLIP, LH.							0150	1
R 11	69-12627-18	. CLIP, RH.							0150	1
R 11A	69-48161-1	. STRAP ASSY, WIRE BUNDLE SUPPORT NYLON							0150	1
		ATTACHING PARTS								
R 11C	NAS603-12P	. SCREW							0150	1
R 11E	AN960C10L	. WASHER.							0150	4
		-----*								

MISSING ITEM NUMBERS ARE NOT APPLICABLE

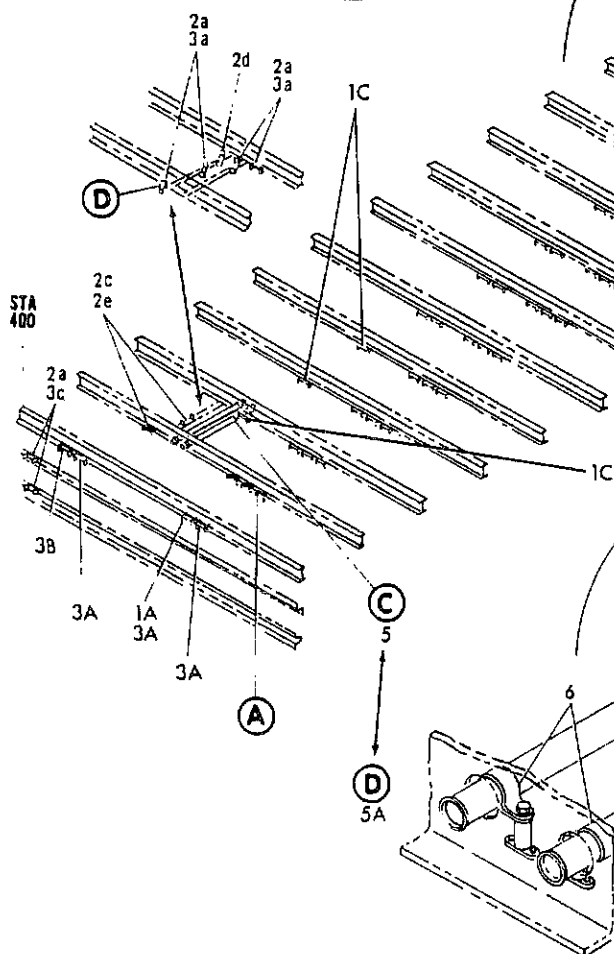
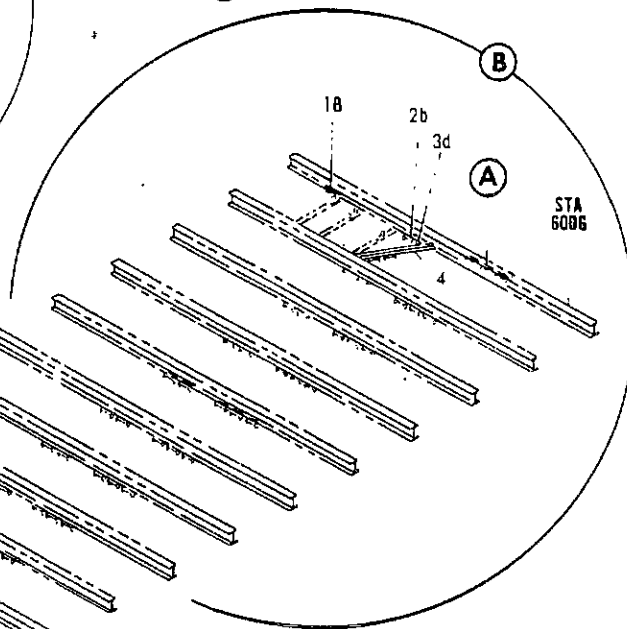
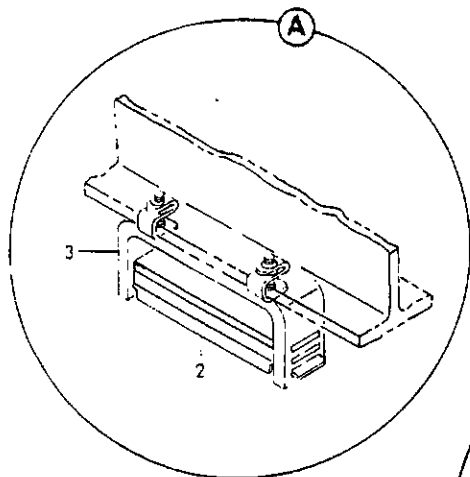
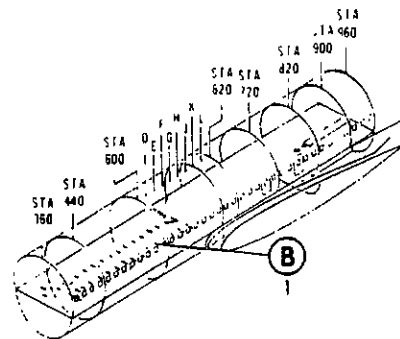


FIGURE 29A. GUARD INSTL, FORWARD CARGO COMPARTMENT WIRE (SHEET 1)

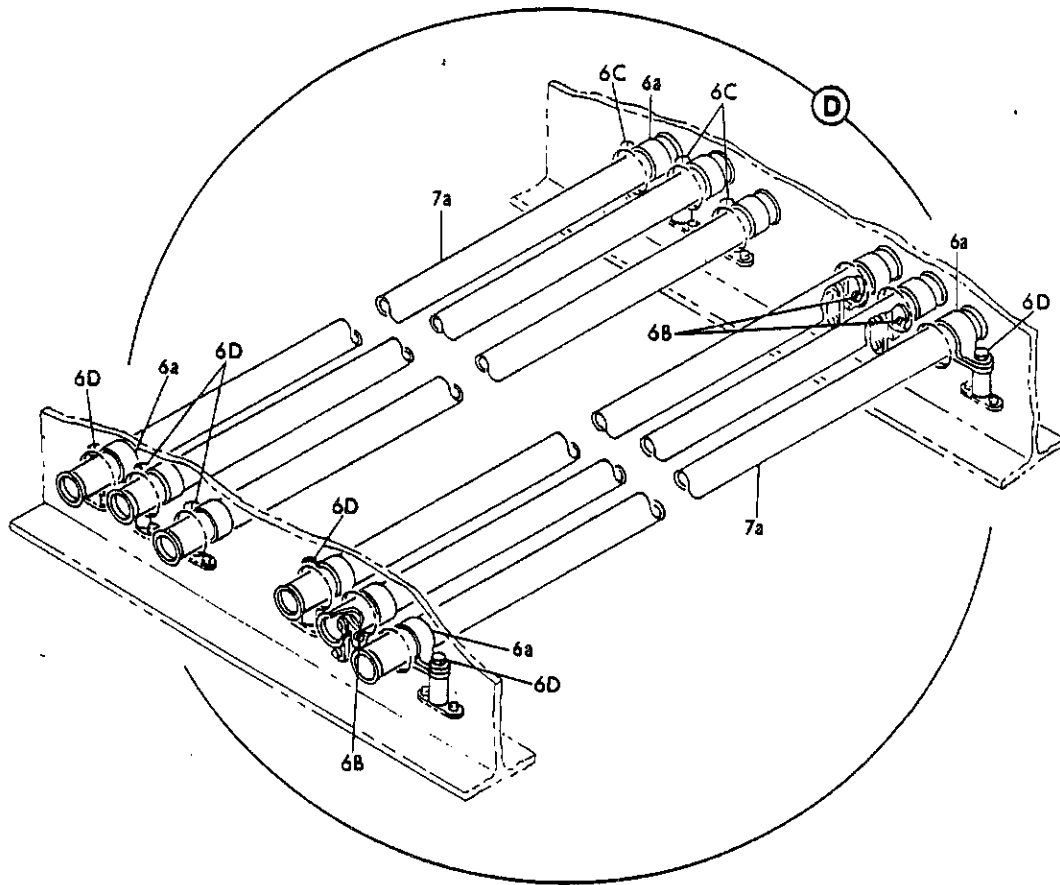


FIGURE 29A. CHANNEL INSTL. FORWARD CARGO COMPARTMENT WIRE BUNDLE
GUARD INSTL. FORWARD CARGO COMPARTMENT WIRE (SHEET 2)

MISSING ITEM NUMBERS ARE NOT APPLICABLE

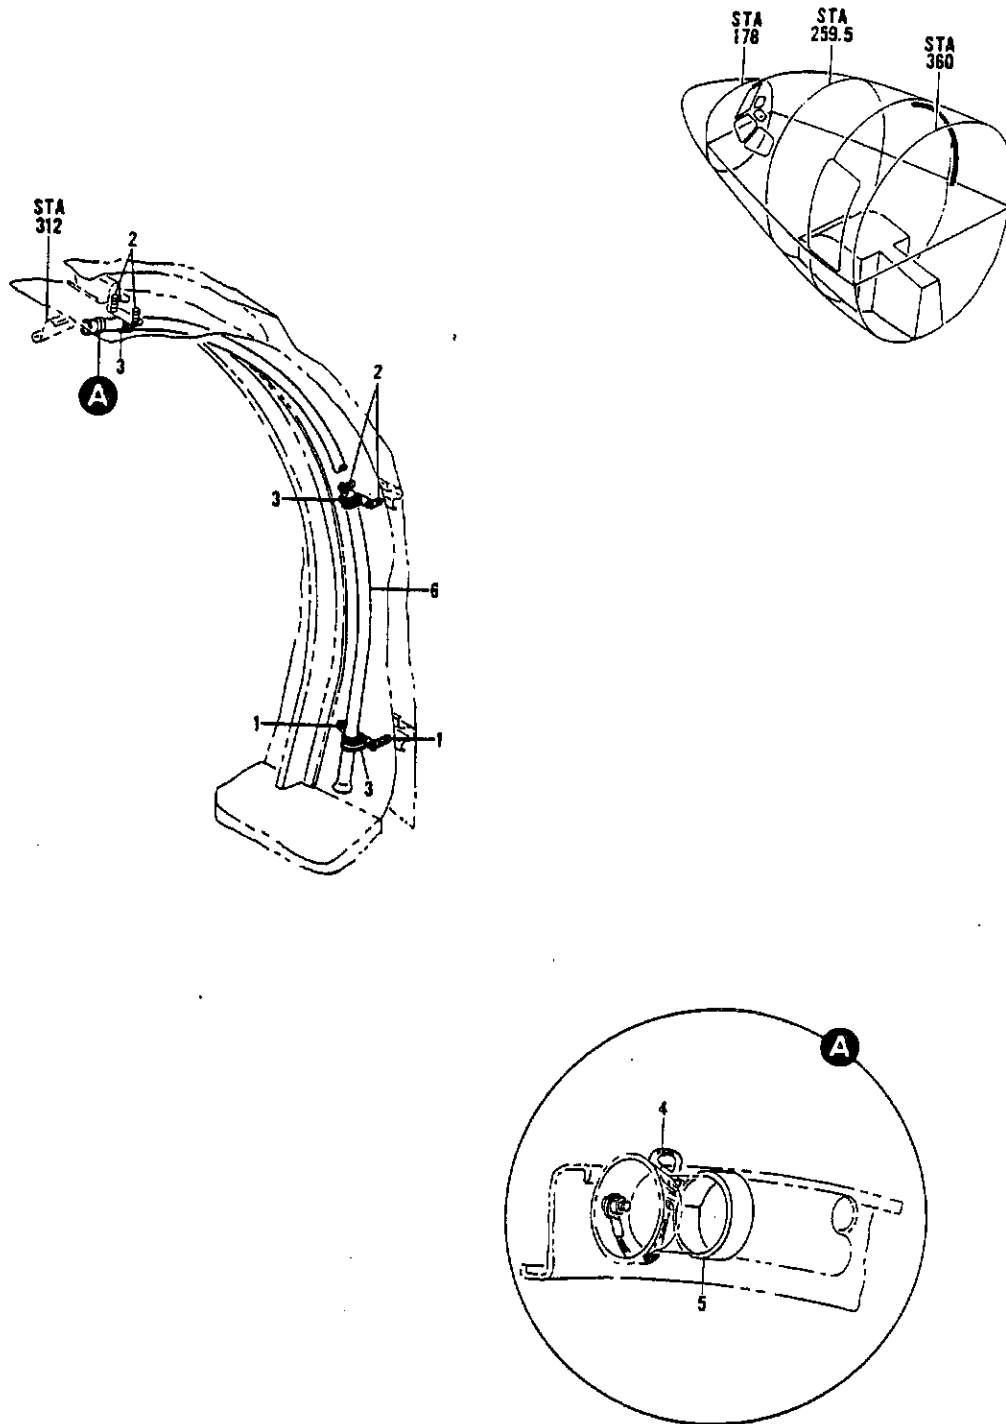


FIGURE 30. CONDUIT INSTL, STATION 312 ELECTRONIC WIRE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
30	65-24104-1	CONDUIT INSTL, STATION 312 ELECTRONIC WIRE (SEE 24-3, . FIG. 5A, ITEM 218, 24-3, FIG. 5B, ITEM 216, 24-3, FIG. 5C, ITEM 217, 24-3, FIG. 5D, ITEM 197, 24-3, FIG. 5E, ITEM 166 AND 24-3, FIG. 5F, ITEM 156)								RF
1	NAS603-32	. SCREW								2
2	NAS603-24	. SCREW								4
3	BACC10BA28	. CLAMP								3
4	MS25083-28B6	. JUMPER ASSY								1
		ATTACHING PARTS								
	NAS603-7	. SCREW								2
	AN960D10L	. WASHER								5
	NAS679A3W	. NUT								2
		-----*								
5	AN735D28	. CLAMP								1
6	65-24104-2	. TUBE, STATION 312 ELECTRONIC WIRE CONDUIT								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										


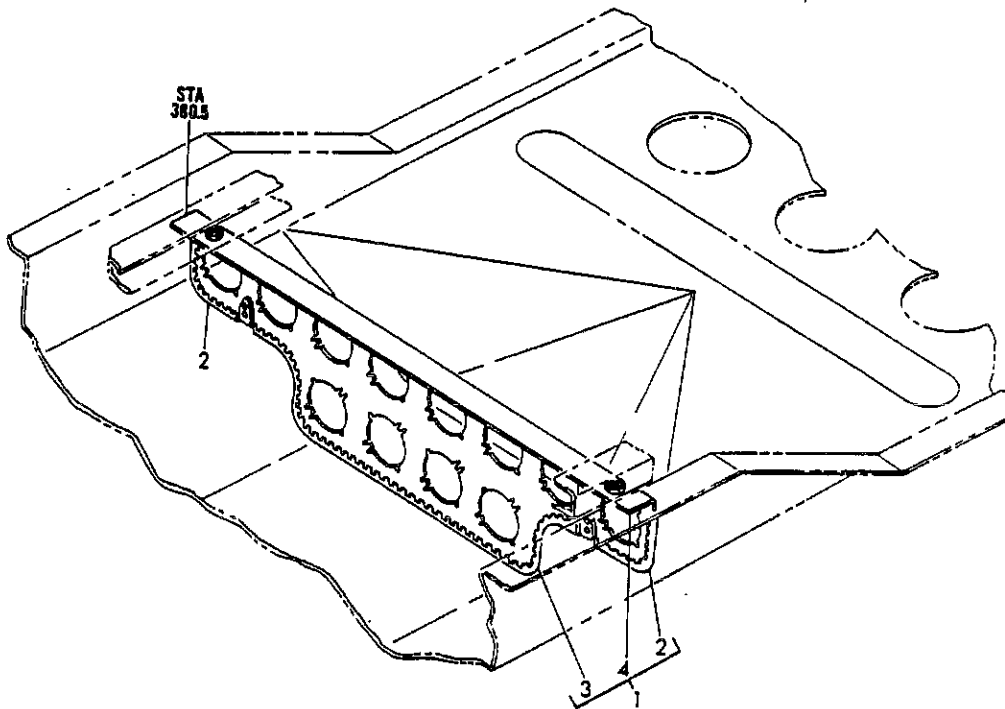


FIGURE 33A. DISCONNECT INSTL, RJ13 FLIGHT INSTRUMENT PANEL

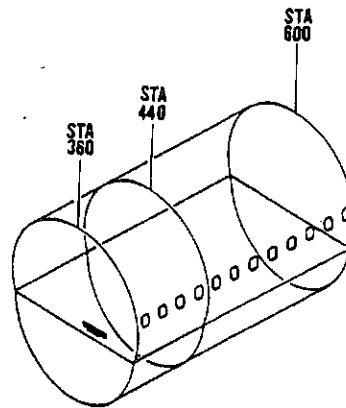

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	33A	65-51807-1	DISCONNECT INSTL, RJ13 FLIGHT INSTRUMENT PANEL (SEE . .							0150	RF
R			24-3, FIG. 6B, ITEM 141, 24-3, FIG. 6C, ITEM 131,								
R			24-3, FIG. 6D, ITEM 74, 24-3, FIG. 6E, ITEM 82 AND								
R			24-3, FIG. 6F, ITEM 59)								
	1	69-38454-1	. PANEL ASSY.							0150	1
			ATTACHING PARTS								
R		NAS603-7	. SCREW							0150	2
R		NAS679A3W	. NUT							0150	2
			-----*								
R	2	BACG20ZB350	. . GROMMET							0150	2
R	3	BACG20ZB1410	. . GROMMET							0150	1
R	4	69-38454-2	. . PANEL							0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											


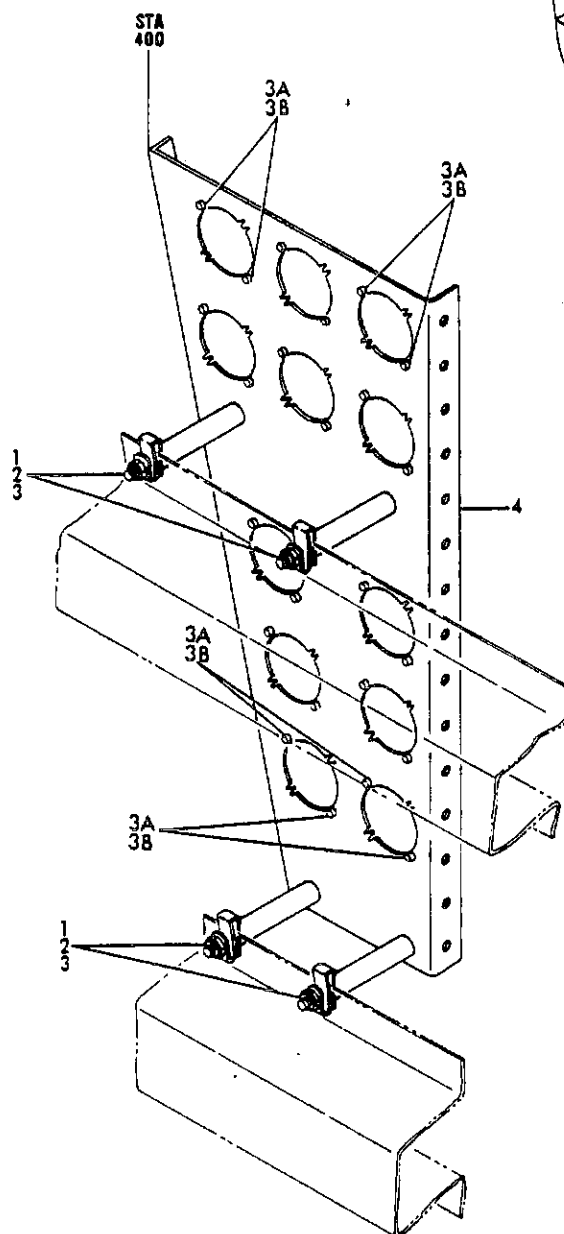


FIGURE 33B. DISCONNECT INSTL, STATION 400 RJ11 PANEL

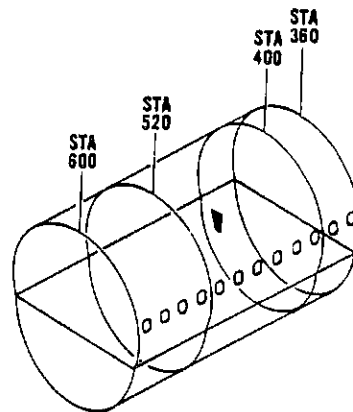

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
338	65-51390-1		DISCONNECT INSTL, STATION 400 RJ11 PANEL (SEE 24-3, . . FIG. 6B, ITEM 144, 24-3, FIG. 6C, ITEM 134, 24-3, FIG. 6D, ITEM 77, 24-3, FIG. 6E, ITEM 85 AND 24-3, FIG. 6F, ITEM 61)		RF
1	BACS12CB3-44		. SCREW		4
2	NAS43DD3-144		. SPACER.		4
3	BACN10FX1W		. NUT		4
3A	NAS600-5P		. SCREW		24
3B	BACN10NWI		. NUT		24
4	69-38598-1		. PANEL, DISCONNECT		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

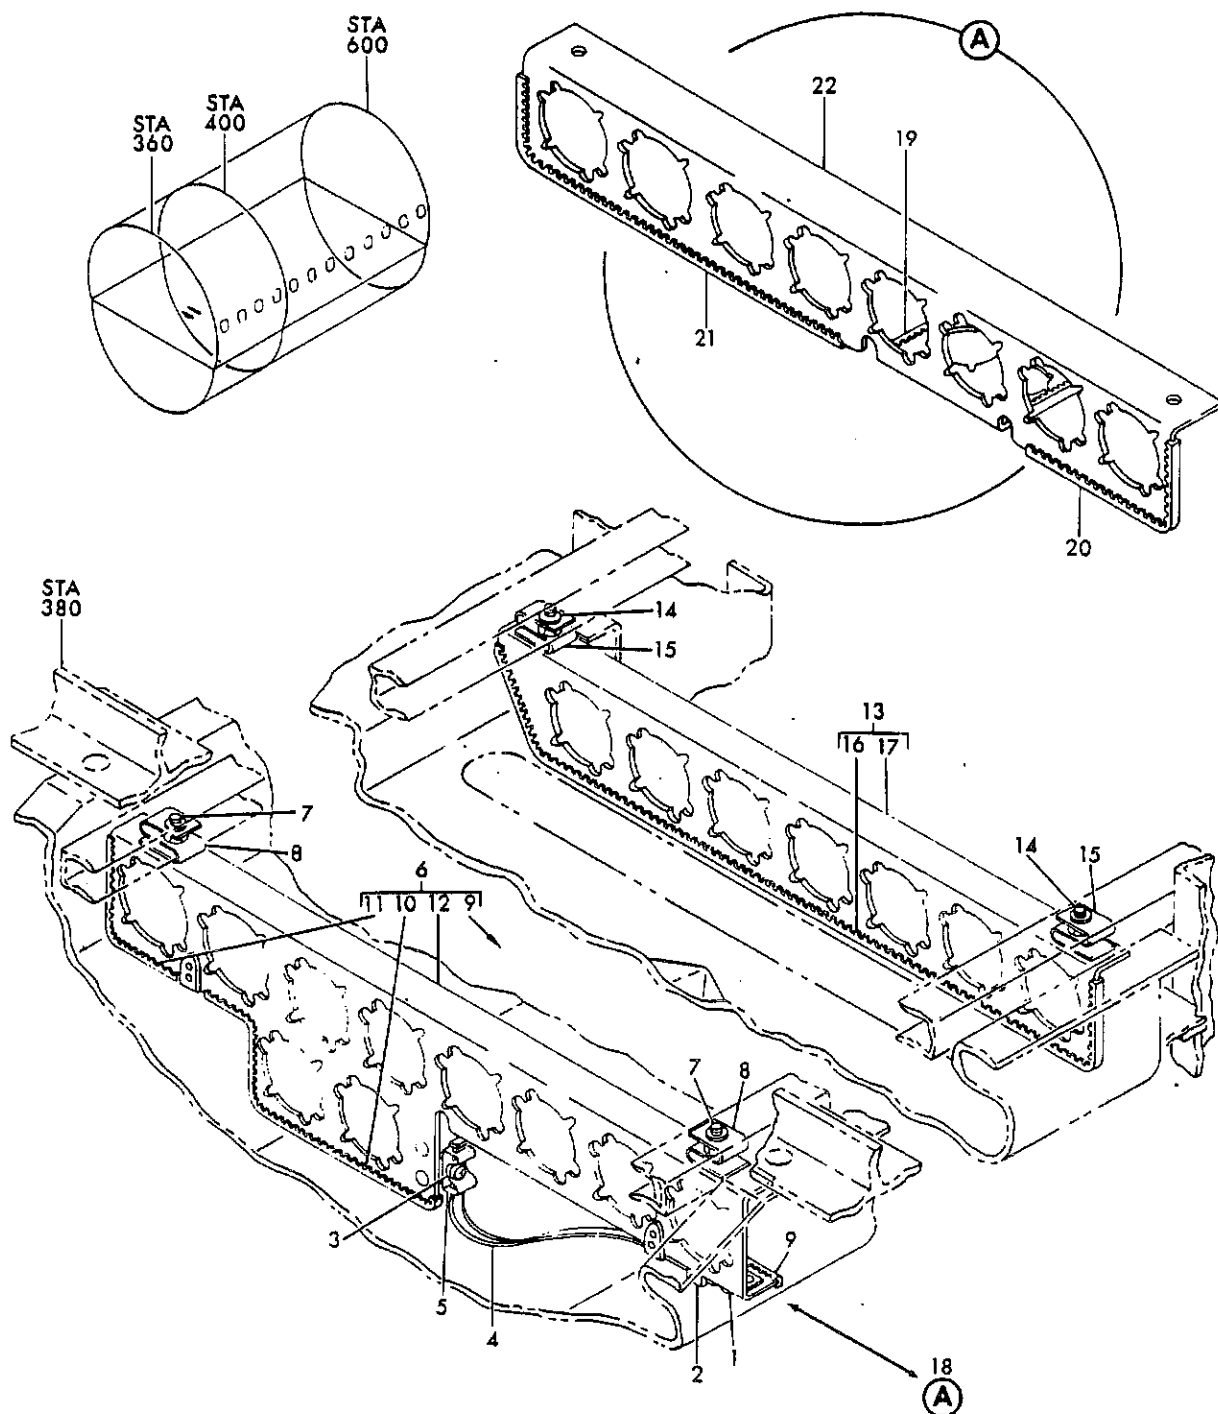



FIGURE 33C. DISCONNECT INSTL. RJ13 FLIGHT INSTRUMENT PANEL



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
33C	65-70766-2	DISCONNECT INSTL, RJ13 FLIGHT INSTRUMENT PANEL (SEE . . . 24-3, FIG. 6B, ITEM 141 AND 24-3, FIG. 6F, ITEM 60)	5199	RF
1	NAS604-8P	. SCREW	5199	1
2	SSC4H	. CLAMP, (V06383)	5199	1
3	NAS514P1032-7	. SCREW	5199	1
4	SST4H	. TIE, (V06383) (CUT AS REQUIRED)	5199	1
5	TM3S10C	. ANCHOR, (V06383)	5199	1
6	65-71123-1	. PANEL ASSY.	5199	1
7	NAS603-6P	ATTACHING PARTS		
8	BACN10FX1	. SCREW	5199	2
		. NUT	5199	2
9	BACG20ZB745			
10	BACG20ZB740	. . GROMMET	5199	1
11	BACG20ZB380	. . GROMMET	5199	1
12	65-71123-3	. . GROMMET	5199	1
18	65-71123-5	. . PANEL	5199	1
		. PANEL ASSY.	5199	1
	NAS603-6P	ATTACHING PARTS		
	BACN10FX1	. SCREW	5199	2
		. NUT	5199	2
19	BACG20ZB740	. . GROMMET	5199	1
20	BACG20ZB510	. . GROMMET	5199	1
21	BACG20ZB770	. . GROMMET	5199	1
22	65-71123-6	. . PANEL	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

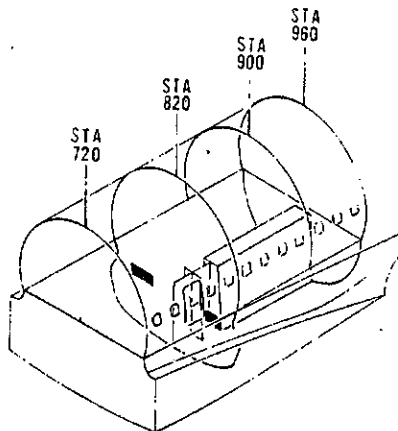

24-13-35



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
35	65-5469	SEAL INSTL, STATION 820 WIRING.		RF
		SUPPORT INSTL, STATION 820 WIRING.		
		. SEAL INSTL, STATION 820 LH SIDE WIRING (SEE 24-3, . .		
		FIG. 2, ITEM 111)		
1	NAS601-10	. . SCREW		8
1A	NAS601-10	. . SCREW		4
2	BACS45A20	. . SPACER, (USED ON WIRES SMALLER THAN NO. 8).		AR
2A	500015-2	. . SPIRAP, (AIRCRAFT MARINE PRODUCTS) (USED ON WIRES .		AR
		LARGER THAN NO. 8)		
3	BACS45A3	. . FITTING		2
4	BACS45A3	. . FITTING		2
5	BACS45A3	. . FITTING		6
6	BACS45A3	. . FITTING		2
8	BACS45A21	. . PLATE, (COVER UNUSED HOLES)		AR
	65-5469-1	. SEAL INSTL, STATION 820 RH SIDE WIRING (SEE 24-3, . .		RF
		FIG. 2, ITEM 112)		
9	NAS601-10	. . SCREW		16
10	BACS45A20	. . SPACER, (USED ON WIRES SMALLER THAN NO. 8).		AR
10A	500015-2	. . SPIRAP, (AIRCRAFT MARINE PRODUCTS) (USED ON WIRES .		AR
		LARGER THAN NO. 8)		
11	BACS45A3	. . FITTING		10
11A	BACS45A3	. . FITTING		2
11C	BACS45A21	. . PLATE, (COVER UNUSED HOLES)		AR
12	BACS45A3	. . FITTING		4
12A	BACS45A21	. . PLATE, (COVER UNUSED HOLES)		1
	65-5469-2	. SUPPORT INSTL, STATION 820 LH SIDE WIRING (SEE 24-3, .		RF
		FIG. 2, ITEM 113)		
13	NAS603-7	. . SCREW		1
13A	AN960PD10	. . WASHER.		1
14	NAS603-5	. . SCREW		1
15	BACB20G10B7M3	. . BRACKET		1
16	63-2192-5	. . SUPPORT ASSY, STATION 820 WIRE.		1
	65-5469-3	. SUPPORT INSTL, STATION 820 RH SIDE WIRING (SEE 24-3, .		RF
		FIG. 2, ITEM 114)		
17	NAS603-7	. . SCREW		1
17A	AN960PD10	. . WASHER.		1
18	NAS603-5	. . SCREW		1
19	BACB20G10B7M3	. . BRACKET		1
20	63-12098	. . SUPPORT ASSY, STATION 820 WIRE.		1
21	NAS603-7	. . SCREW		1
21A	AN960PD10	. . WASHER.		1
22	NAS603-5	. . SCREW		1
22A	BACB20G10B7M3	. . BRACKET		1
23	63-2092-2	. . SUPPORT ASSY, STATION 820 WIRE.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

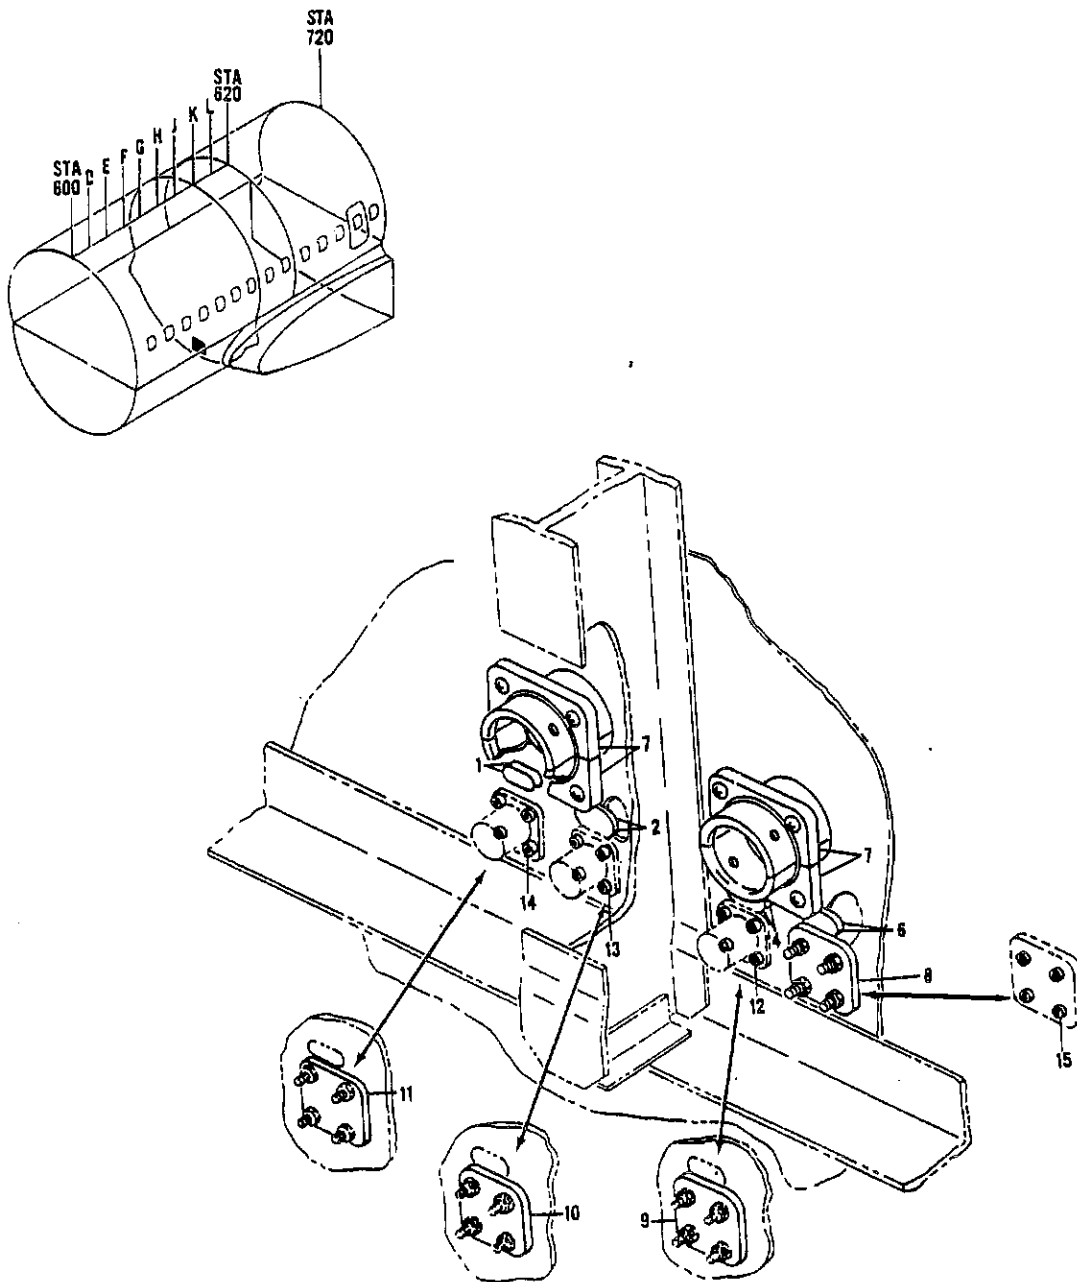


FIGURE 36. SEAL INSTL. STATION 600K LOWER FRAME WIRING DISCONNECT

BOEING *707* Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF	UNITS	
		1	2	3	4	5	6	7	FROM TO	PER ASSY	
R R R R R R R R R R R R R R R R R R	36	65-6486	SEAL INSTL, STATION 600K LOWER FRAME WIRING DISCONNECT (SEE 24-3, FIG. 6A, ITEM 116, 24-3, FIG. 6B, ITEM 116, 24-3, FIG. 6C, ITEM 96, 24-3, FIG. 6D, ITEM 57, 24-3, FIG. 6E, ITEM 66 AND 24-3, FIG. 6F, ITEM 44)							0150	RF
		65-6486	SEAL INSTL, STATION 600K LOWER FRAME WIRING DISCONNECT (VARIABLE DWG:65-6486-5001) (SEE 24-3, FIG. 6B, ITEM 116 AND 24-3, FIG. 6F, ITEM 44)							5199	RF
	1	BACM9L10EA	. SCOTCH-CAL, DMET-1.								2
	2	BACM9L00-2C	. SCOTCH-CAL, SPARE								2
	4	BACM10N00-2CRP	. MARKER, DMET-2 ALUMINUM FOIL.								2
	6	BACM10N00-2CRR	. MARKER, VHF-3 ALUMINUM FOIL								2
	7	BACS45A1	. FITTING								4
			ATTACHING PARTS								
		NAS601-6	. SCREW								8
		AN960-6	. WASHER.								8
		NAS679A06W	. NUT								8
			-----*								
	8	63-1026	. PLATE, CUTOUT DISCONNECT COVER.								1
	10	63-1026	. PLATE, CUTOUT DISCONNECT COVER.								1
			ATTACHING PARTS								
		NAS601-4	. SCREW								8
		NAS679A06W	. NUT								8
			-----*								
12	BACS12AE3	. SCREW								4	
14	BACS12AE3	. SCREW								4	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

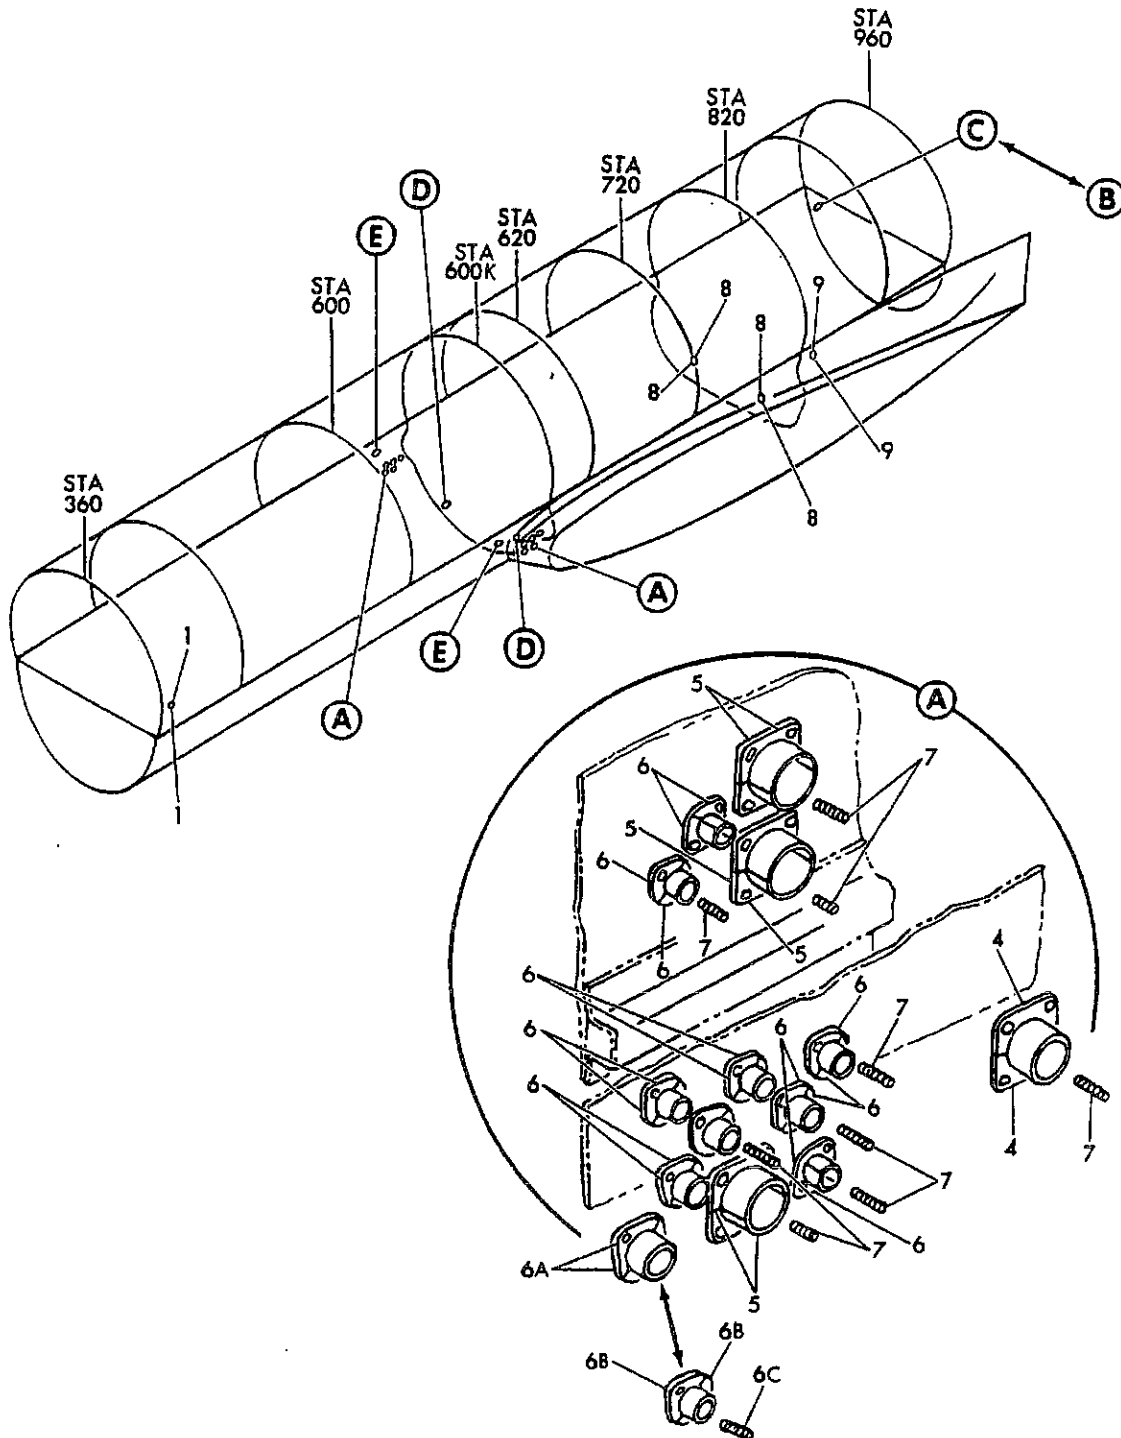


FIGURE 38. SEAL INSTL. WING JUNCTION BODY ELECTRICAL (SHEET 1)

A 2413038 SHT 1 REV 265

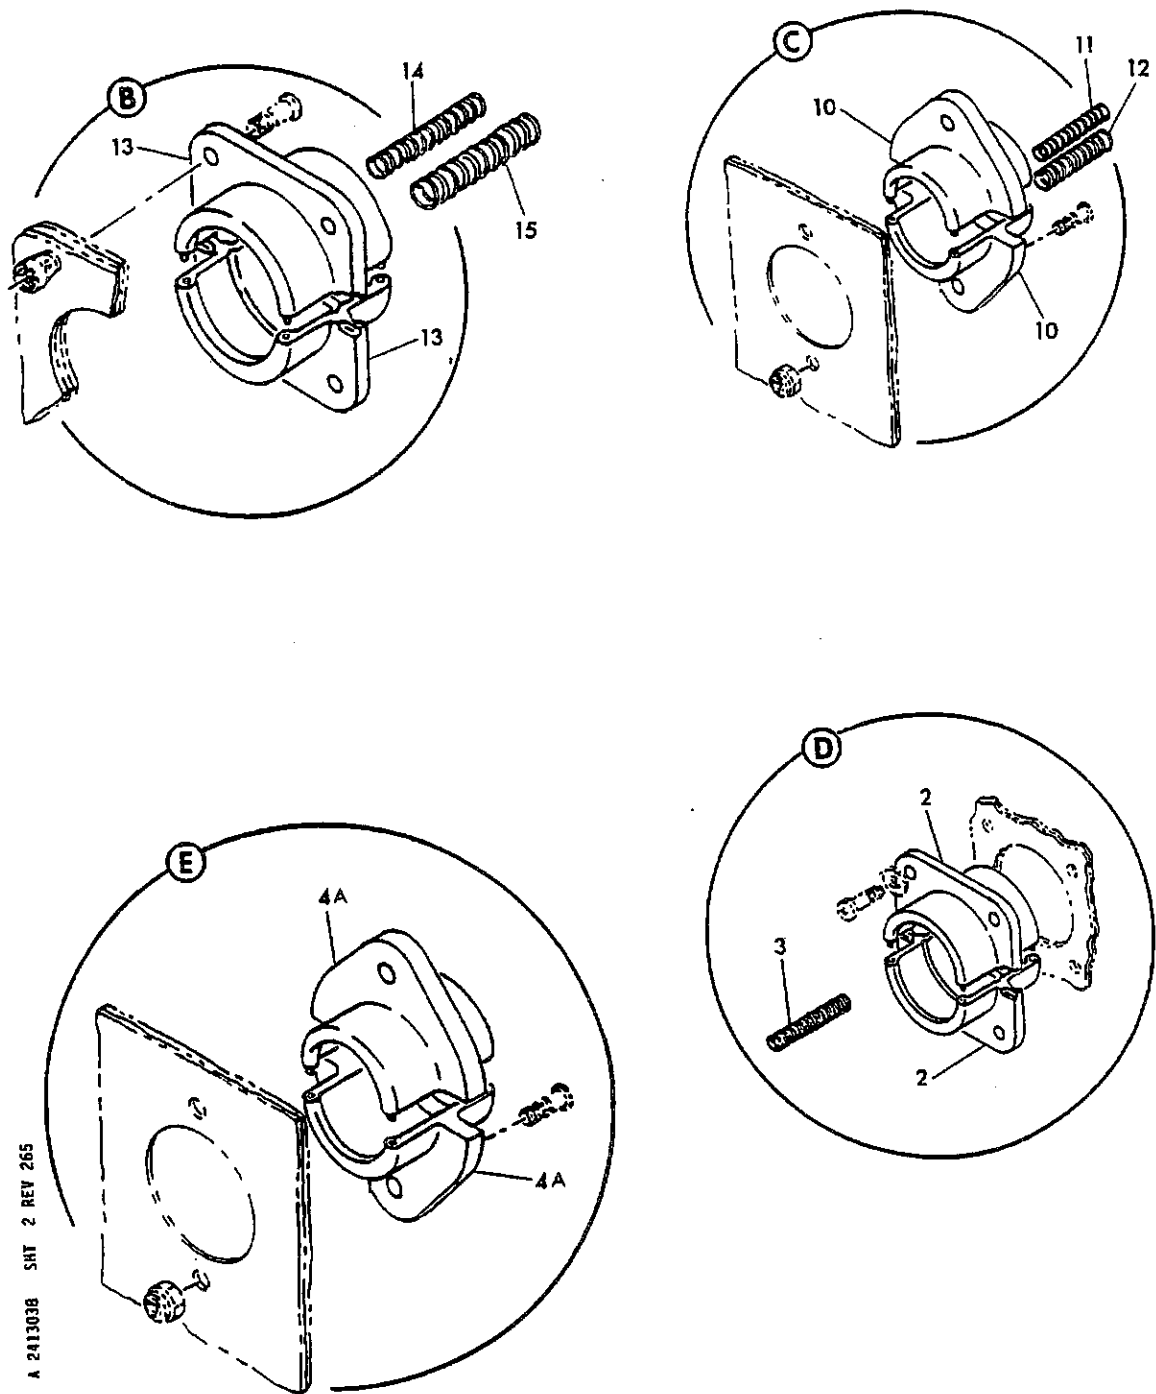


FIGURE 38. SEAL INSTL. WING JUNCTION BODY ELECTRICAL (SHEET 2)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
38	69-18082-1	SEAL INSTL, SECTION 53 ELECTRICAL								RF
	69-18082-2	. SEAL INSTL, STATION 600K BULKHEAD (LH) (SEE 24-3, . . FIG. 2, ITEM 146)								RF
2	BACS45A1	. SEAL								2
	NAS601-8	. ATTACHING PARTS								4
	AN960D6L	. SCREW								4
		. WASHER.								
		-----*								
3	BACS45A20	. SPACER.								1
	69-8882-1	. SEAL INSTL, WING JUNCTION BODY ELECTRICAL (LH) (SEE . 24-3, FIG. 2, ITEM 122)								RF
	69-8882-2	. SEAL INSTL, WING JUNCTION BODY ELECTRICAL (RH) (SEE . 24-3, FIG. 2, ITEM 123)								RF
5	BACS45A1	. SEAL								6
	NAS601-8P	. ATTACHING PARTS								12
	AN960D6L	. SCREW								12
		. WASHER.								
		-----*								
6	BACS45A3	. SEAL								18
	NAS601-8P	. ATTACHING PARTS								18
	AN960D6L	. SCREW								18
		. WASHER.								
		-----*								
7	BACS45A20	. SPACER.								9
	69-18085-1	. SEAL INSTL, STATION 820 BULKHEAD ELECTRICAL (LH) (SEE 24-3, FIG. 2, ITEM 120)								RF
	69-18085-2	. SEAL INSTL, STATION 820 BULKHEAD ELECTRICAL (RH) (SEE 24-3, FIG. 2, ITEM 121)								RF
8	BACS45A1	. SEAL								2
	NAS601-8P	. ATTACHING PARTS								4
		. SCREW								
		-----*								
	66-13049	. SEAL INSTL, STATION 820 TO 860 KEEL BEAM ELECTRICAL . (SEE 24-3, FIG. 2, ITEM 124)								RF
9	BACS45A3	. SEAL								2
	NAS601-8	. ATTACHING PARTS								2
	AN960D6L	. SCREW								2
		. WASHER.								
		-----*								
	69-48002	. SEAL INSTL, STATION 960 BULKHEAD ELECTRICAL (SEE. . . 24-3, FIG. 2, ITEM 117)								RF
13	BACS45A1	. SEAL								2
	NAS601-10P	. ATTACHING PARTS								4
		. SCREW								
		-----*								
14	BACS45A20	. SPACER.								1
15	69-48002-1	. SPIRAP, STATION 960 BULKHEAD ELECTRICAL SEAL. . . . (ALTERED FROM 500015-2 (V00779))								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

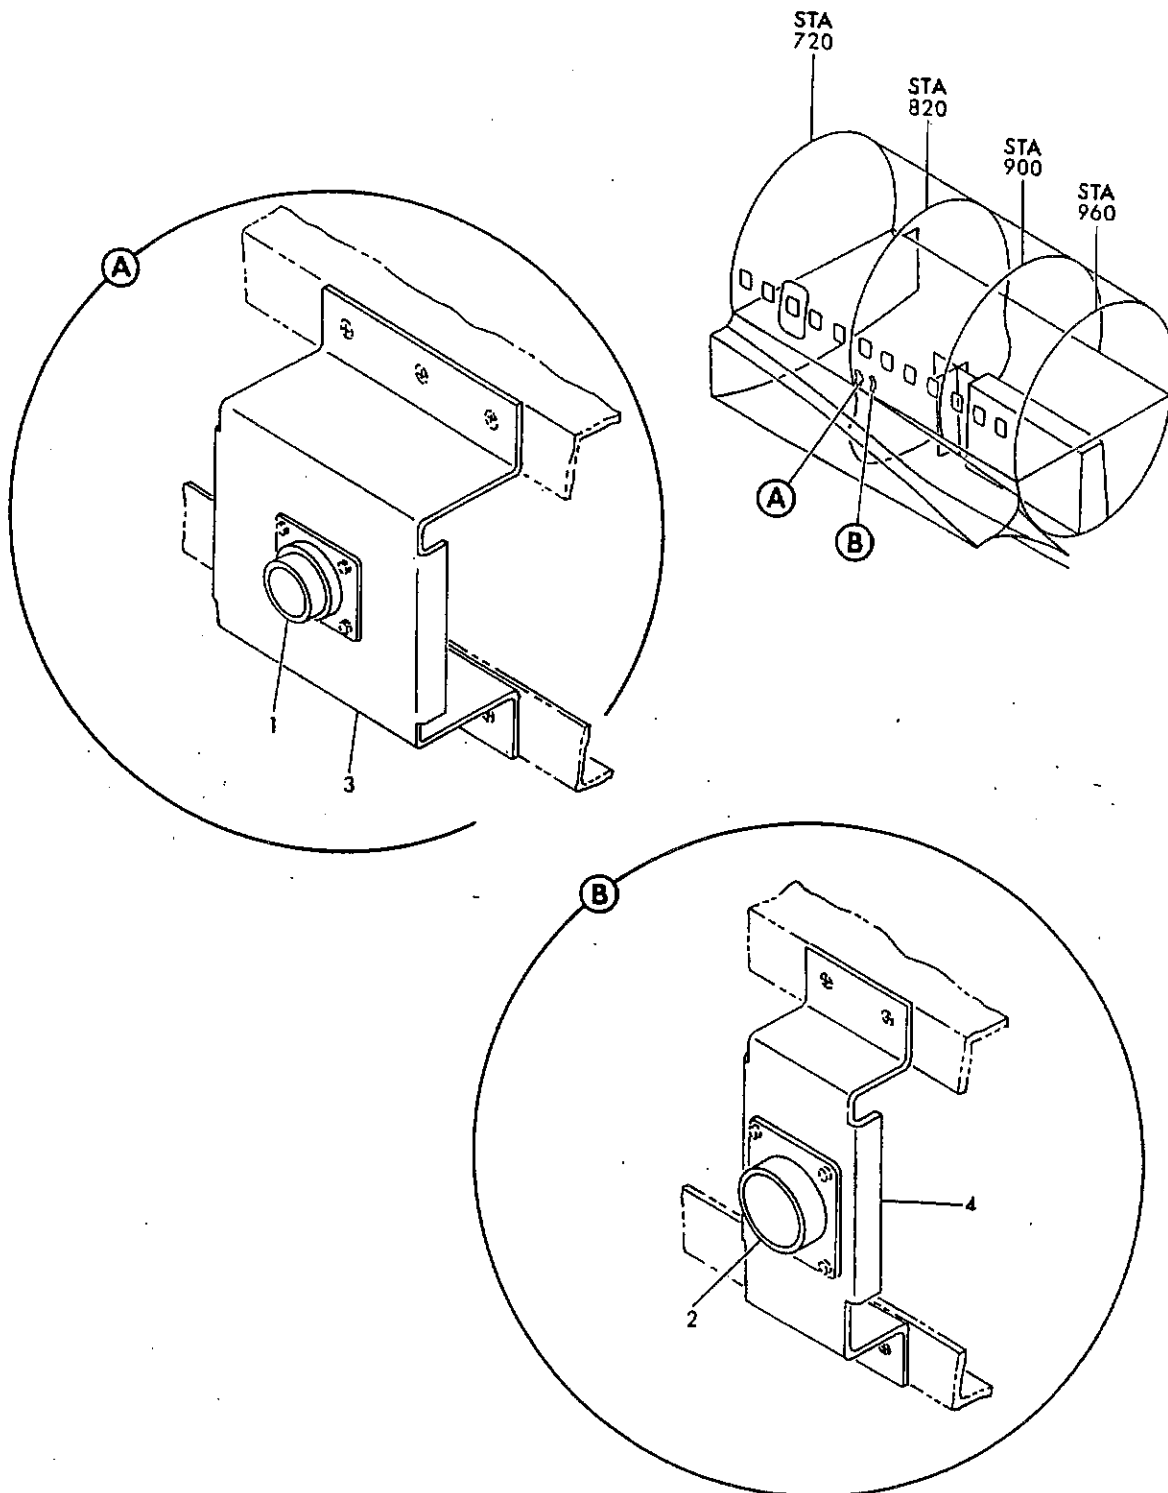


FIGURE 40H. CONNECTOR INSTL. TYPEWRITER AND PHOTOCOPIER POWER PROVISIONS



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
40H	CONNECTOR-INSTL	CONNECTOR INSTL, TYPEWRITER AND PHOTOCOPIER POWER . . . PROVISIONS (VZ0268) (ADDED BY RAF MOD 7211.019-179)	0150	RF
1	BACC45FN22-12S	. CONNECTOR, (PHOTOCOPIER).	0150	1
	NAS600	ATTACHING PARTS		
	AN960XCA	. SCREW	0150	4
	BACN10JC04	. WASHER.	0150	4
		. NUT	0150	4
2	MS3102R18-BS	. CONNECTOR, (TYPEWRITER)	0150	1
3	42865-1	. BRACKET, CONNECTOR MTG (VZ0268)	0150	1
4	42865-4	. BRACKET, CONNECTOR MTG (VZ0268)	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

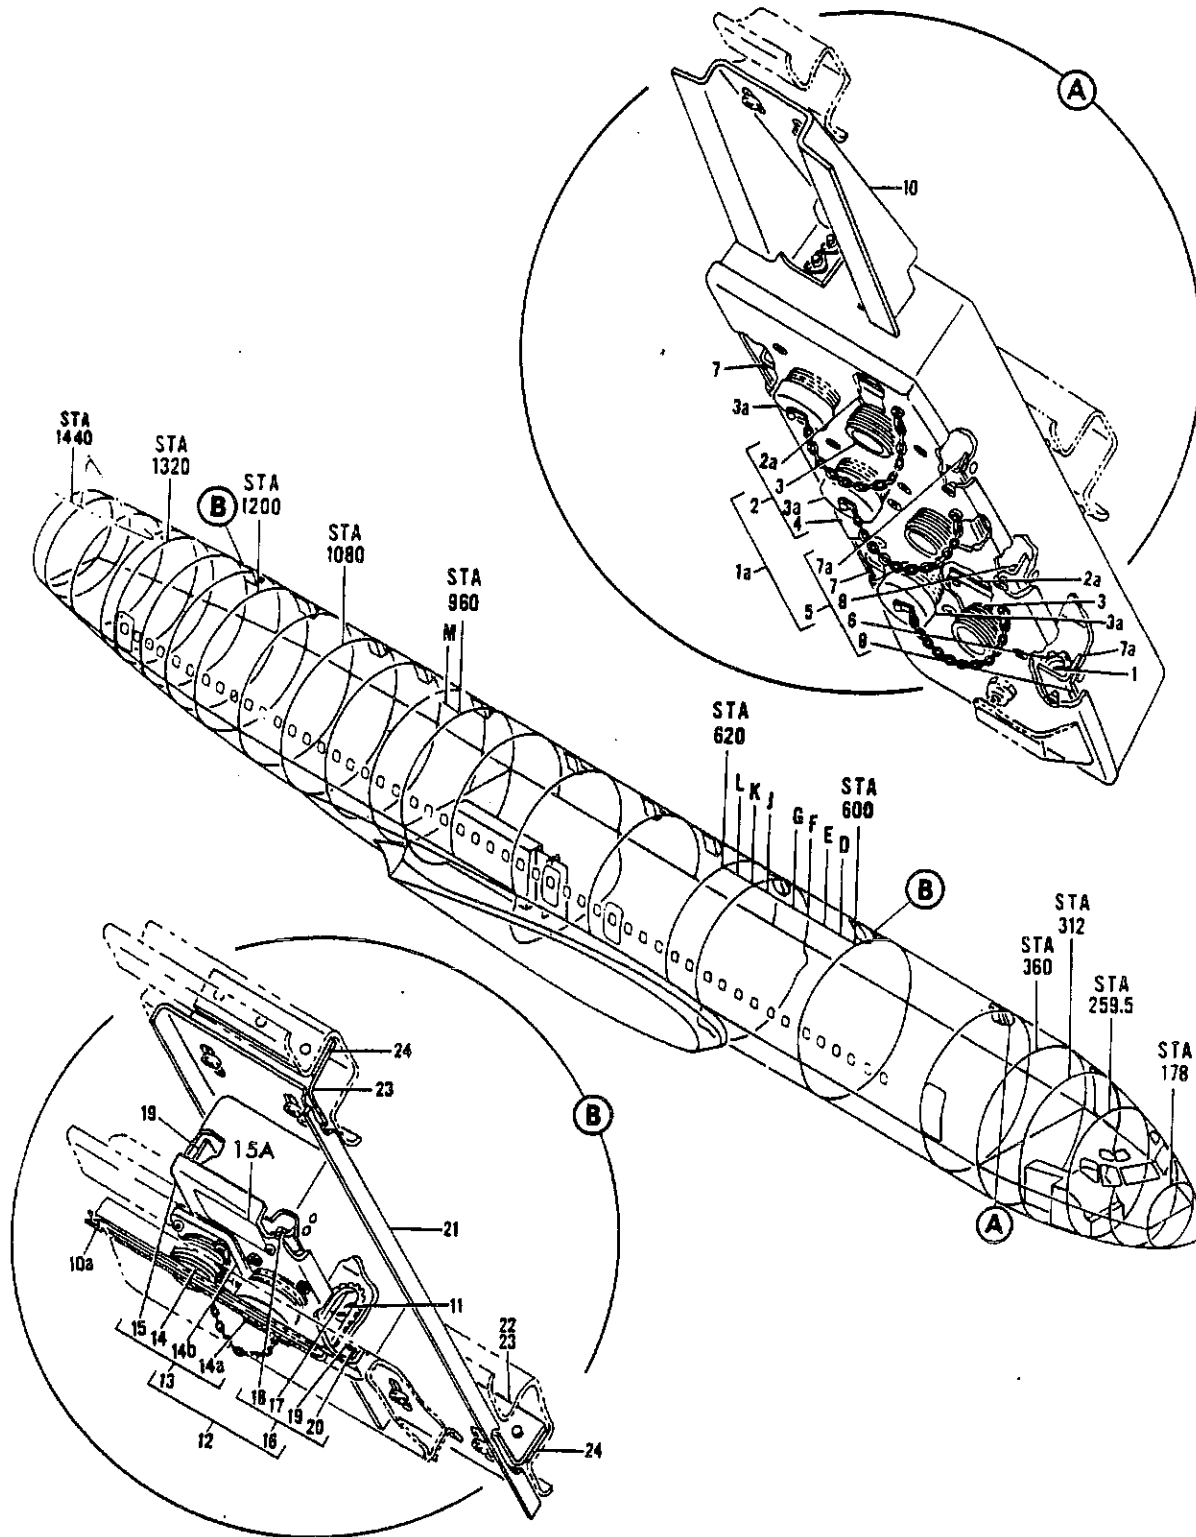


FIGURE 42. RECEPTACLE AND JACK INSTL, CARGO PALLET ELECTRICAL POWER

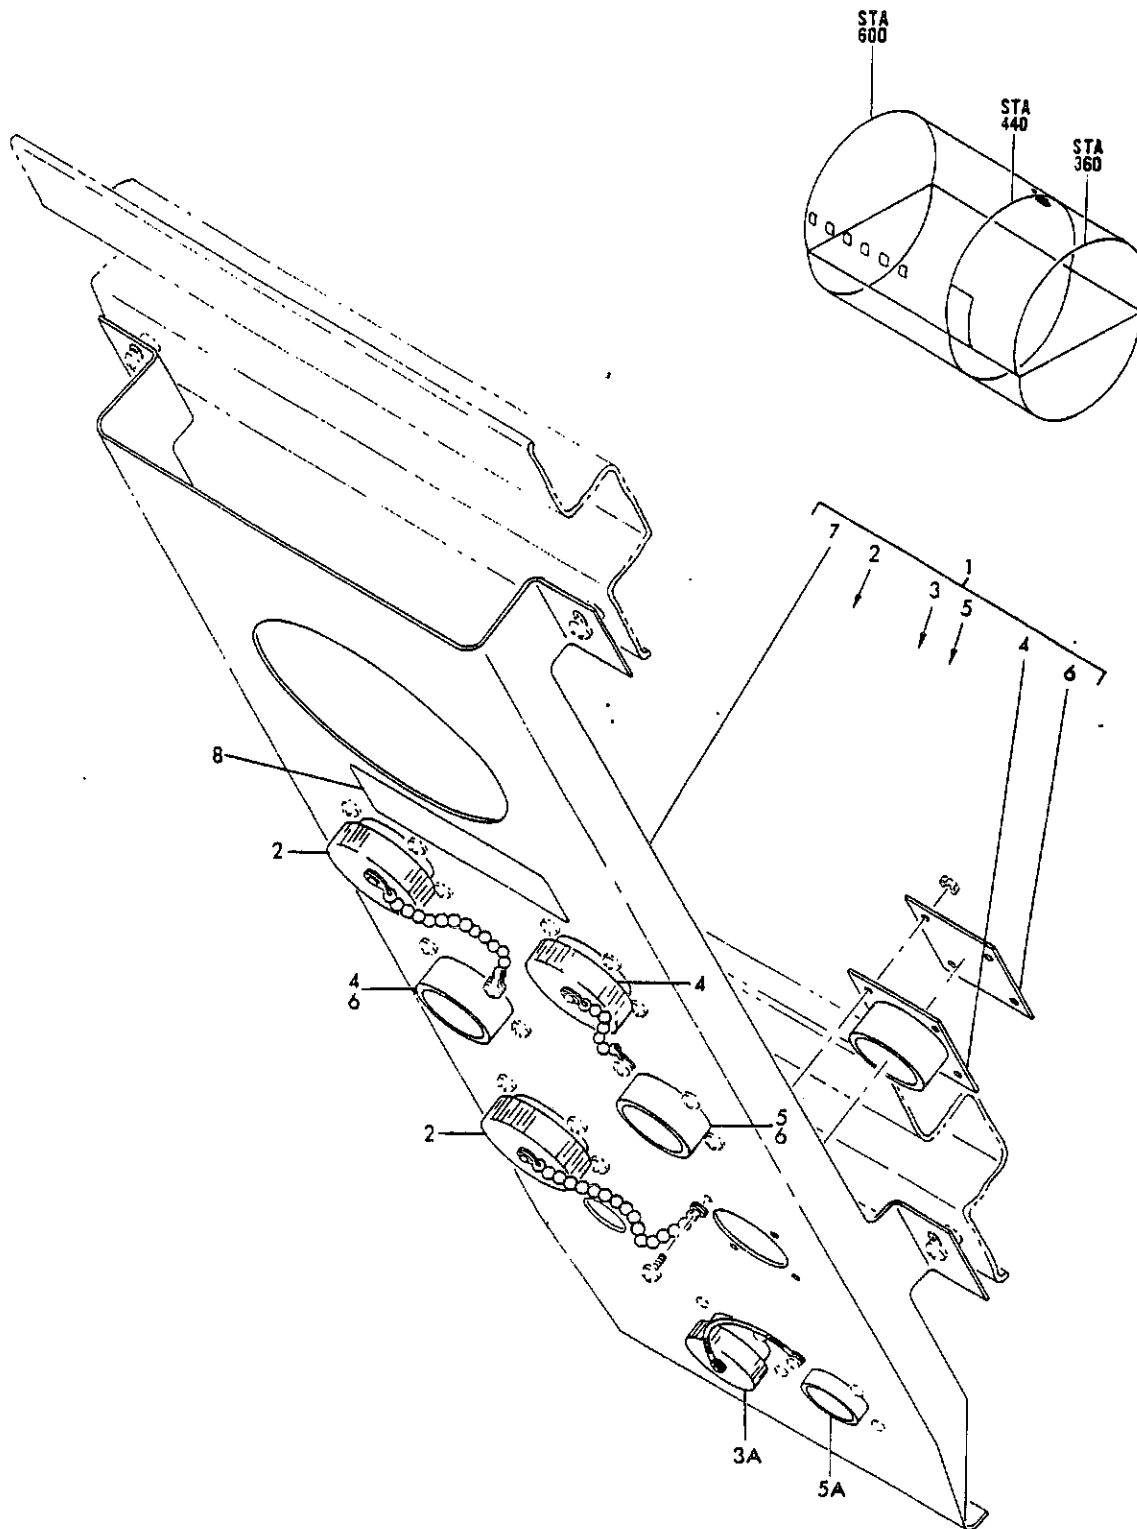


FIGURE 42A. RECEPTACLE AND JACK INSTL. NO. 1, 2 AND 3 ELECTRICAL

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	42A	65-33133-5	RECEPTACLE AND JACK INSTL, NO. 1, 2 AND 3 ELECTRICAL, . (SEE 25-1, FIG. 20N, ITEM 17, 25-1, FIG. 20P, ITEM 17, 25-1, FIG. 20Q, ITEM 17, 25-1, FIG. 20R, ITEM 17, 25-1, FIG. 20S, ITEM 17, 25-1, FIG. 21, ITEM 18, 25-1, FIG. 21A, ITEM 17, 25-1, FIG. 21J, ITEM 17, 25-1, FIG. 21K, ITEM 17, 25-1, FIG. 21L, ITEM 18, 25-1, FIG. 21N, ITEM 17, 25-1, FIG. 22 ITEM 17, 25-1, FIG. 23, ITEM 13A, 25-1, FIG. 23A, ITEM 17, 25-1, FIG. 23B, ITEM 17, 25-1, FIG. 23C, ITEM 17, 25-1, FIG. 23D, ITEM 17, 25-1, FIG. 23E, ITEM 17, 25-1, FIG. 23F, ITEM 17, 25-1, FIG. 23G, ITEM 17, 25-1, FIG. 23H, ITEM 17, 25-1, FIG. 23J, ITEM 17, 25-1, FIG. 23K, ITEM 17, 25-1, FIG. 23L, ITEM 17, 25-1, FIG. 23M, ITEM 17, 25-1, FIG. 23N, ITEM 17, 25-1, FIG. 23P, ITEM 17, 25-1, FIG. 23R, ITEM 17, 25-1, FIG. 23S, ITEM 17, 25-1, FIG. 23T, ITEM 17, 25-1, FIG. 23X, ITEM 17, 25-1, FIG. 23Z, ITEM 17 AND 25-10, FIG. 35U, ITEM 22B)							0150	RF
R	1	65-33133-10	. RECEPTACLE ASSY, ELECTRICAL (ELECTRICAL POWER ONLY) . ATTACHING PARTS							0150	1
R		NAS603-16	. SCREW							0150	4
R		BACS18F50B	. SPACER.							0150	4
			-----*								
R	2	MS25043-20C	. CAP							0150	3
R	3	MS27295-1	. CAP							0150	1
R	4	NAS1196-10X	. RECEPTACLE. ATTACHING PARTS							0150	3
R		NAS600-7	. SCREW							0150	12
R		NAS679A04W	. NUT							0150	12
			-----*								
R	5	MS27297-1	. RECEPTACLE. ATTACHING PARTS							0150	1
R		NAS600-6	. SCREW							0150	8
R		NAS679A04W	. NUT							0150	8
			-----*								
R	6	66-21747-1	. PLATE							0150	3
R	7	69-43771-4	. BRACKET							0150	1
R	8	BAC27CPA31	. COMMUNICATIONS, (SEE 23-2, FIG. 172A) MARKER-ALUMINUM FOIL 115/200 VOLT 3 PHASE, 400 CYCLE							0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											



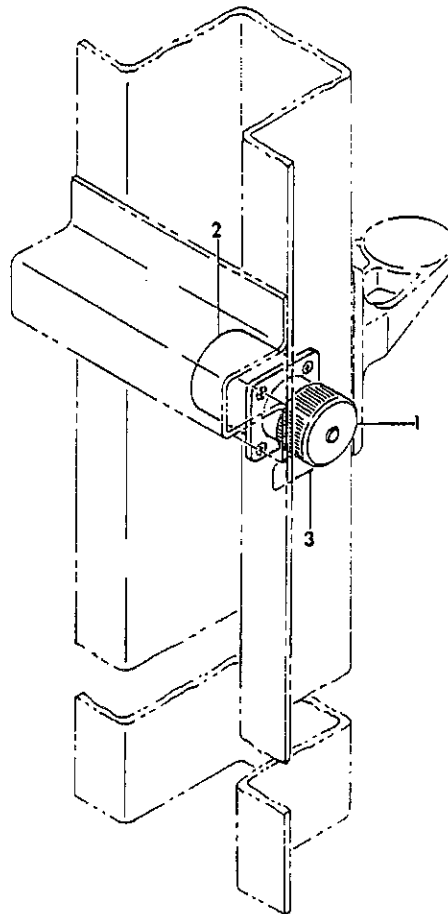


FIGURE 45D. OUTLET INSTL, RADIO TEST EQUIPMENT POWER

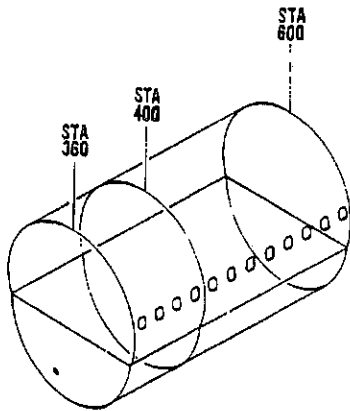

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	45D	65-58653-1	OUTLET INSTL, RADIO TEST EQUIPMENT POWER (SEE 24-3, . . .							0150	RF
R			FIG. 6B, ITEM 93A AND 24-3, FIG. 6D, ITEM 48)								
R	1	MS25043-12C	. COVER							0150	1
R		NAS601-5P	ATTACHING PARTS							0150	1
R		NAS679A06W	. SCREW							0150	1
			. NUT								
			-----*								
R	3	BAC27CEE6	. DECAL, TEST RECP.							0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

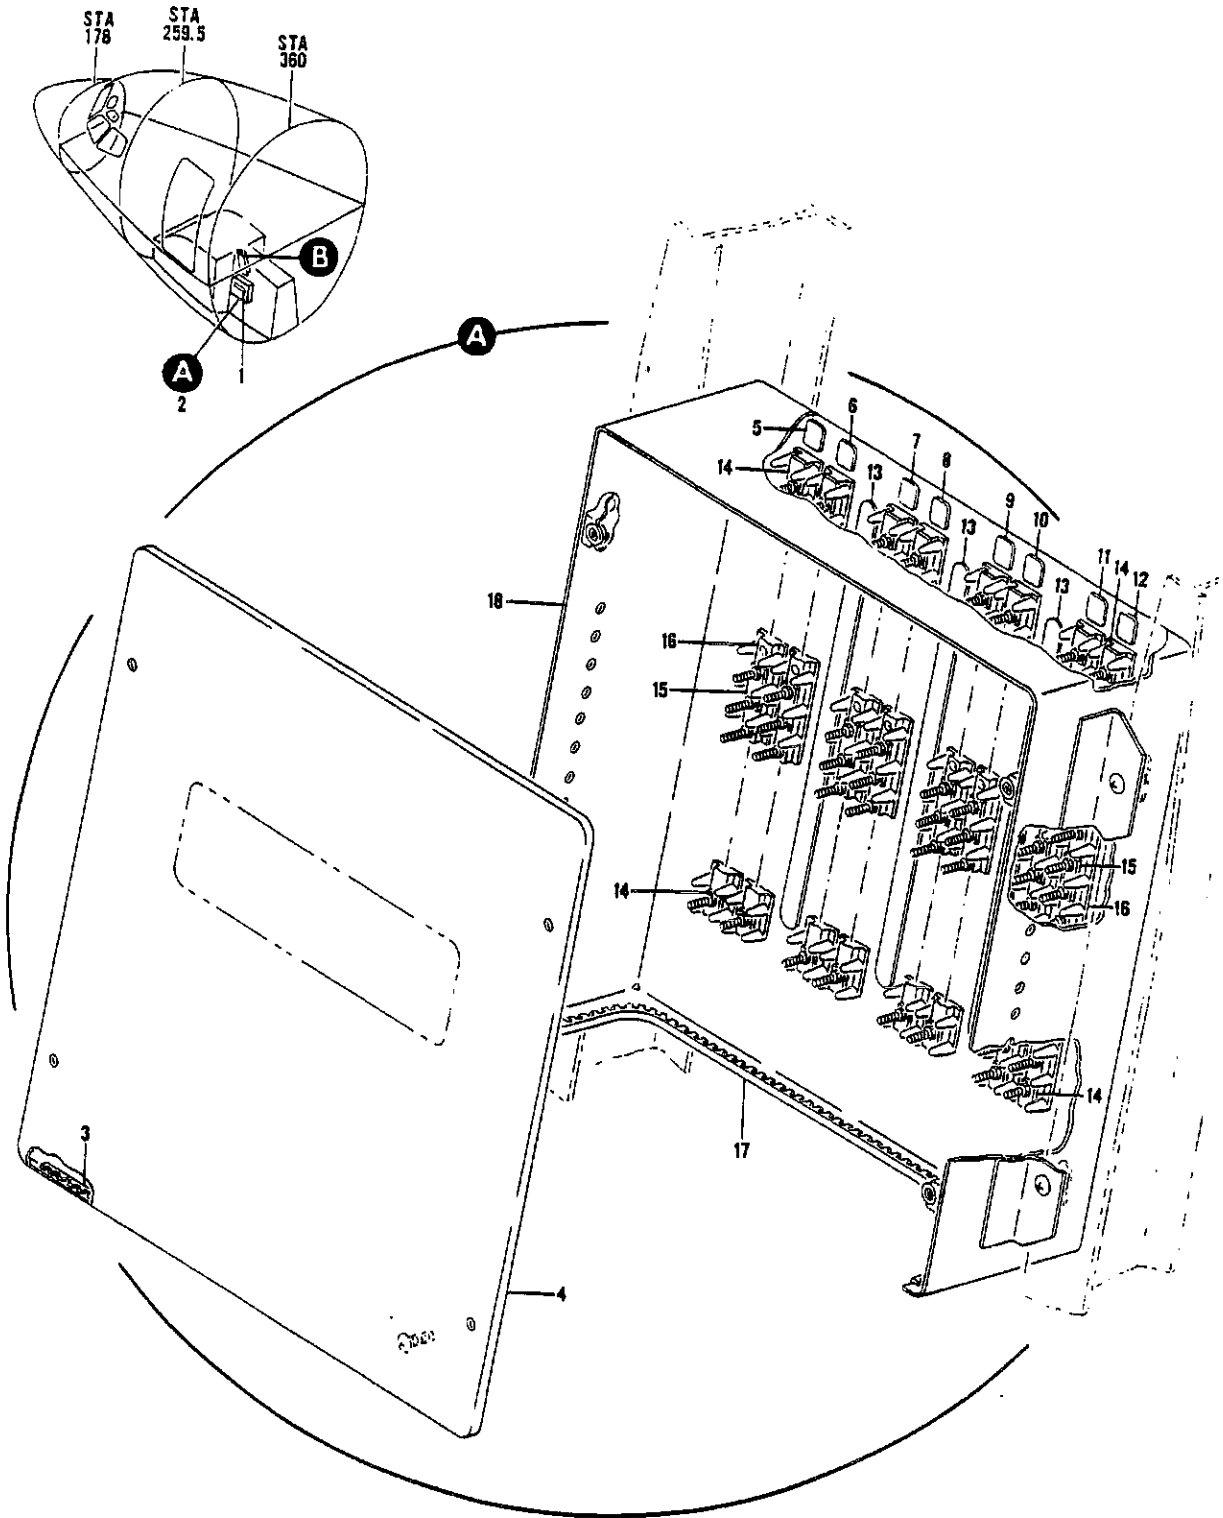

RACEWAY INSTL, FLIGHT INSTRUMENTS WIRE (SHEET 1)

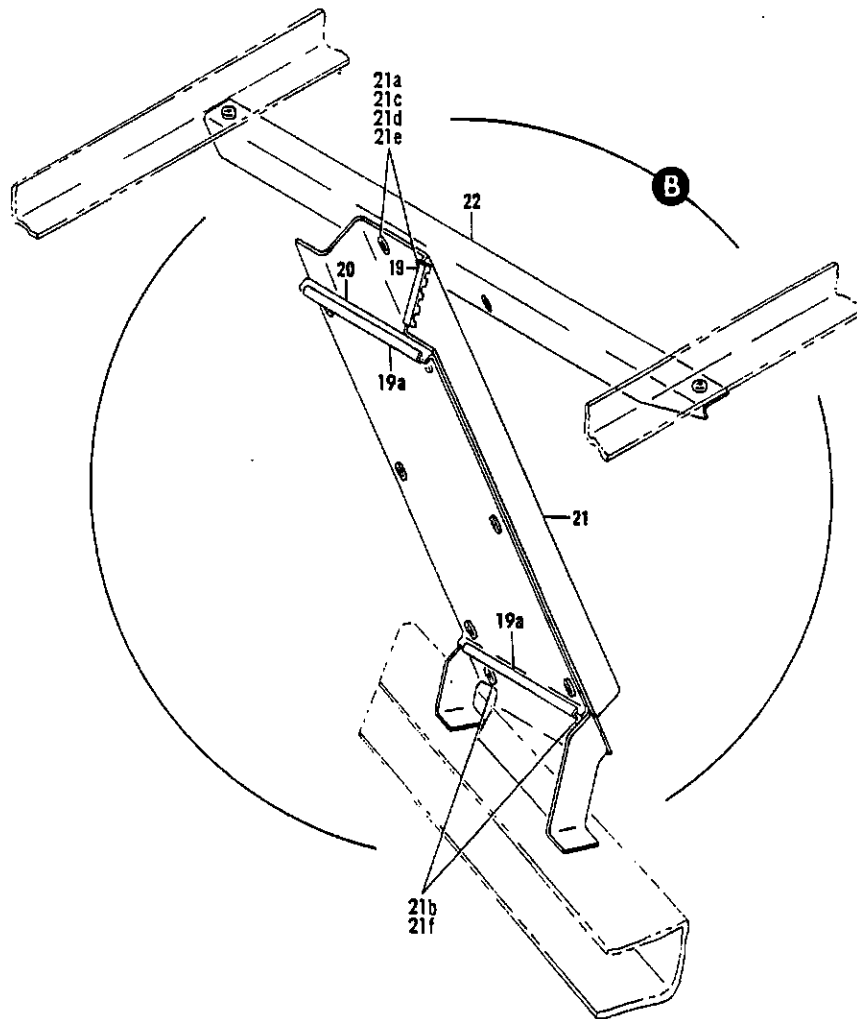



FIGURE 49. BOX INSTL, FLIGHT INSTRUMENT RJ15 JUNCTION
RACEWAY INSTL, FLIGHT INSTRUMENTS WIRE (SHEET 2)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 49		BOX INSTL, FLIGHT INSTRUMENT RJ15 JUNCTION.	0150	RF
R		RACEWAY INSTL, FLIGHT INSTRUMENT WIRE	0150	
R	65-19834-1	. BOX INSTL, FLIGHT INSTRUMENTS RJ15 JUNCTION (SEE	0150	
R		24-3, FIG. 5, ITEM 29, 24-3, FIG. 5A, ITEM 29,		
R		24-3, FIG. 5B, ITEM 29, 24-3, FIG. 5C, ITEM 47,		
R		24-3, FIG. 5D, ITEM 44, 24-3, FIG. 5E, ITEM 21,		
R		AND 24-3, FIG. 5F, ITEM 21)		
R	1 BACM982E	. . SCOTCH-CAL, FLIGHT INSTRUMENT JUNCTION BOX RJ-15. .	0150	1
R	2 65-19838-1	. . BOX ASSY.	0150	1
R		ATTACHING PARTS		
R	NAS603-14	. . SCREW	0150	4
R		-----*		
R	65-19838-3	. . . COVER ASSY.	0150	1
R		ATTACHING PARTS		
R	NAS603-6	. . . SCREW	0150	4
R		-----*		
R	3 BACG20Z81055	 GROMMET	0150	1
R	4 65-19838-5	 COVER	0150	1
R	5 BACM10L00-10GF	. . . MARKER-ALUMINUM FOIL, A	0150	1
R	6 BACM10L00-10GG	. . . MARKER-ALUMINUM FOIL, B	0150	1
R	7 BACM10L00-10GH	. . . MARKER-ALUMINUM FOIL, C	0150	1
R	8 BACM10L00-10GJ	. . . MARKER-ALUMINUM FOIL, D	0150	1
R	9 BACM10L00-10GK	. . . MARKER-ALUMINUM FOIL, E	0150	1
R	10 BACM10L00-10GL	. . . MARKER-ALUMINUM FOIL, F	0150	1
R	11 BACM10L00-10GM	. . . MARKER-ALUMINUM FOIL, G	0150	1
R	12 BACM10L00-10GN	. . . MARKER-ALUMINUM FOIL, H	0150	1
R	13 BACM10N110-2CRB	. . . MARKER-ALUMINUM FOIL, 7	0150	3
R	14 MS25227-1	. . . STRIP	0150	16
R	15 MS25227-2	. . . STRIP	0150	8
R	16 MS25123-1-16	. . . TERMINAL BOARD ASSY	0150	8
R		ATTACHING PARTS		
R	NAS600-6	. . . SCREW	0150	24
R	NAS679A04W	. . . NUT	0150	1
R		-----*		
R	65-19838-2	. . . BOX ASSY.	0150	1
R	17 BACG20Z81640	 GROMMET	0150	1
R	18 65-19838-4	 BOX, FLIGHT INSTRUMENTS RJ15 JUNCTION	0150	1
R	65-14647-4	. RACEWAY INSTL, FLIGHT INSTRUMENTS WIRE (SEE 24-3, ...	0150	RF
R		FIG. 5, ITEM 120, 24-3, FIG. 5A, ITEM 166, 24-3,		
R		FIG. 5B, ITEM 161, 24-3, FIG. 5C, ITEM 180, 24-3,		
R		FIG. 5D, ITEM 163, 24-3, FIG. 5E, ITEM 120 AND		
R		24-3, FIG. 5F, ITEM 103)		
R	19 BACG20ZA170	. . GROMMET	0150	1
R	19A BAC1521-365	. . SECTION, RUBBER EXTRUDED (4.00 IN. LG).	0150	2
R	20 65-14647-3	. . PLATE, DOPPLER COMPUTER RJ10 JUNCTION BOX RACEWAY .	0150	1
R		COVER		
R	NAS603-6P	ATTACHING PARTS		
R	BACN10FX1	. . SCREW :	0150	6
R		. . NUT	0150	6
R		-----*		
R	21 65-14647-1	. . RACEWAY, DOPPLER COMPUTER RJ10 JUNCTION BOX	0150	1
R		ATTACHING PARTS		
R	21A NAS603-7P	. . SCREW	0150	2
R	21B NAS603-6P	. . SCREW	0150	2
R	21C BACW10P43AL	. . WASHER.	0150	2
R	21D NAS43DD3-4	. . SPACER.	0150	2
R	21E BACN10FX1	. . NUT	0150	2
R	21F BACN10FX2	. . NUT	0150	2
R		-----*		
R	22 65-14647-2	. . ANGLE, DOPPLER COMPUTER RJ10 JUNCTION BOX SUPPORT .	0150	1
R		ATTACHING PARTS		
R	NAS603-6P	. . SCREW	0150	2
R	NAS679A3W	. . NUT	0150	2
R		-----*		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

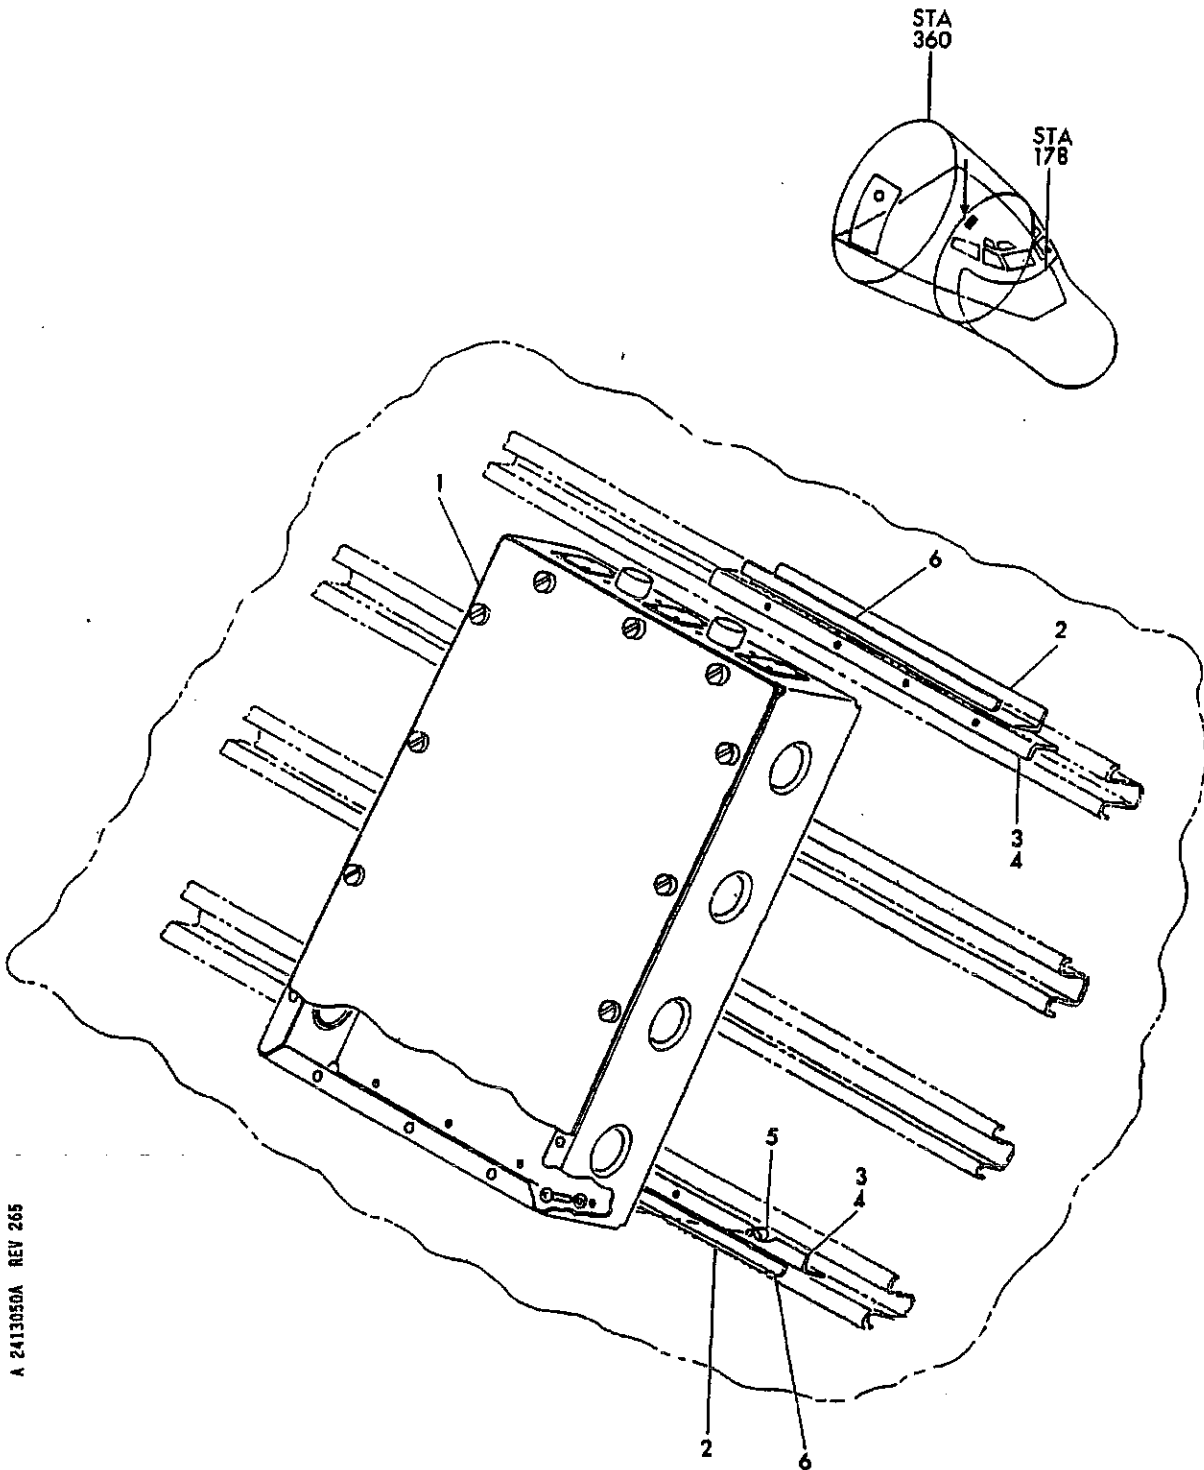

A 2413050A REV 265

FIGURE 50A. A/R JUNCTION BOX INSTL



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R R R R R	50A	ADR39-10-11728-003	A/R JUNCTION BOX INSTL, (VS2500) (ADDED BY RAF.							0150	RF
	1	361-39-10-74338-101	7211.019.225) (SEE 24-03, FIG. 1B, ITEM 131)							0150	1
			. A/R JUNCTION BOX ASSY, EQUIPMENT ARRANGEMENT (VS2500)								
			(SEE FIG. 52)								
		MS35207-262 AN960J010L	ATTACHING PARTS							0150	8
			. SCREW							0150	8
			. WASHER.							0150	8
	2	ADR39-10-11728-203 ADR39-10-11728-103 ADR39-10-11728-205 MS21059L3 ADR39-10-11728-207	-----*-----							0150	2
			. SUPPORT, (VS2500)							0150	2
			. SUPPORT ASSY, (VS2500).							0150	2
			. . SUPPORT, (VS2500)							0150	2
			. NUT PLATE							0150	8
6		. STRAP, (VS2500)							0150	2	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

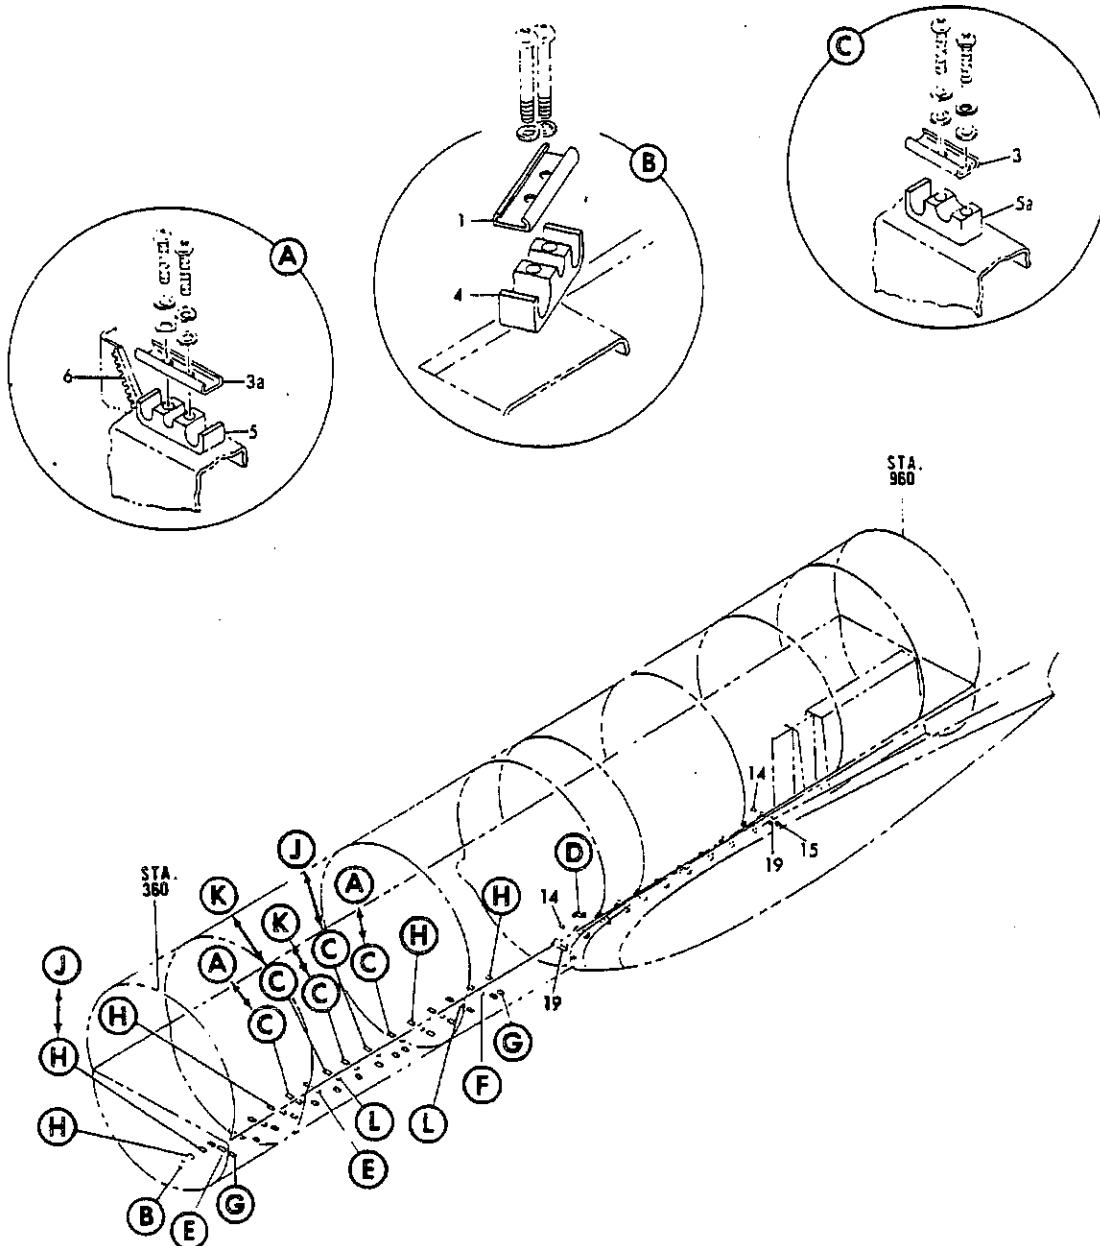


FIGURE 51A. SUPPORT INSTL. KEEL BEAM ELECTRONIC WIRING (SHEET 1)

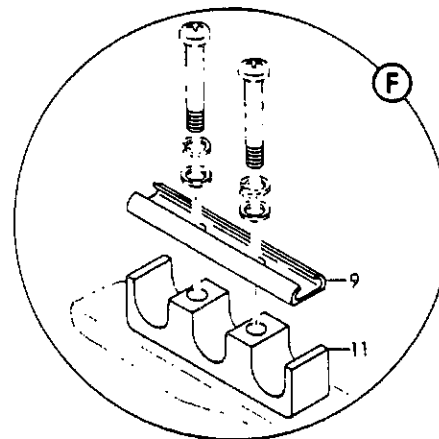
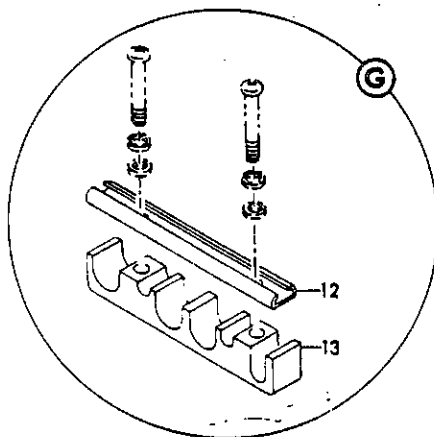
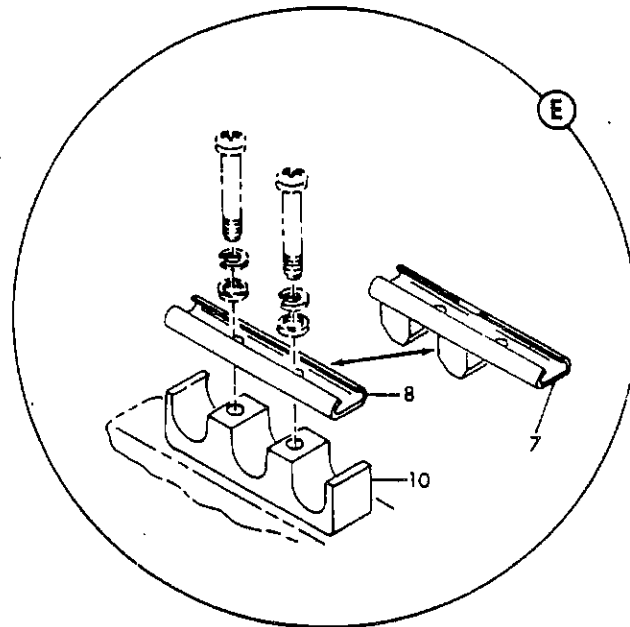
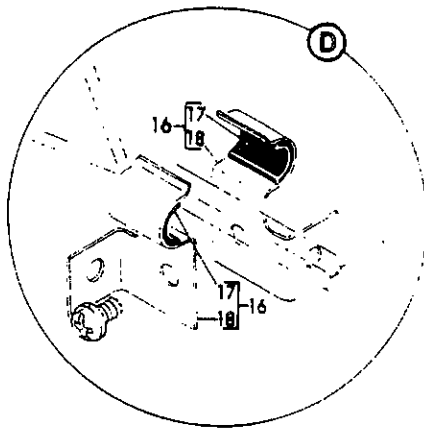


FIGURE 51A. SUPPORT INSTL. KEEL BEAM ELECTRONIC WIRING (SHEET 2)

NOV 21/90

24-13-51A

DETAILED PARTS LIST
24-13-51A
PAGE 1


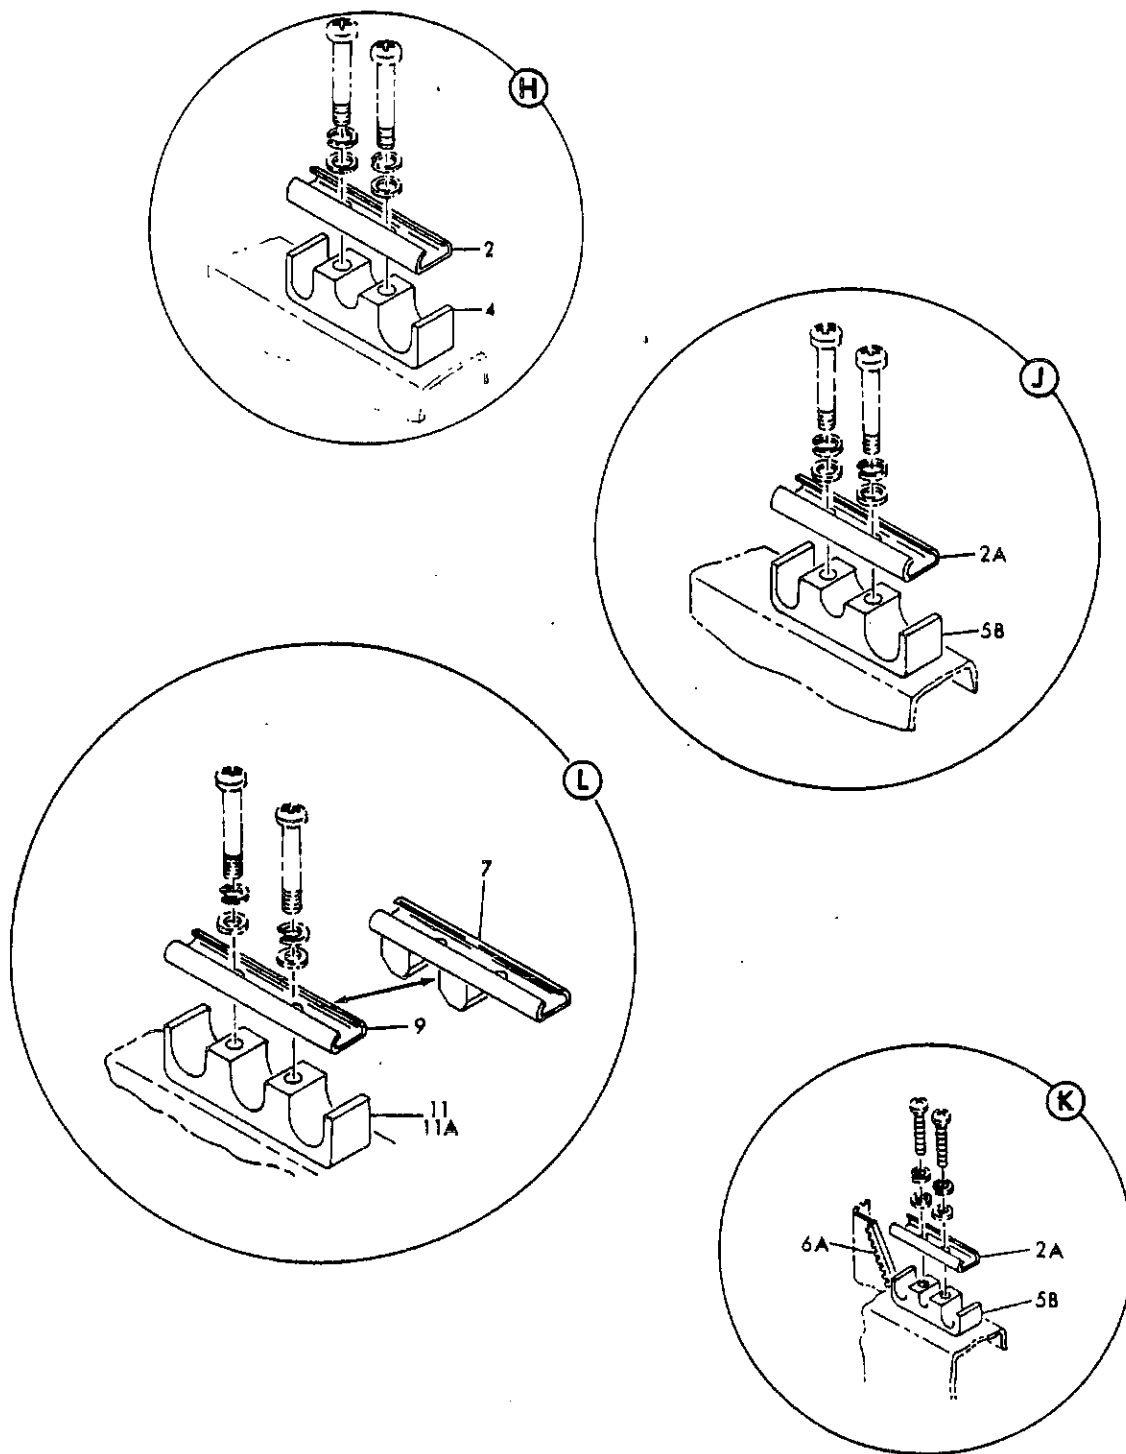


FIGURE 51A. SUPPORT INSTL., KEEL BEAM ELECTRONIC WIRING (SHEET 3)

BOEING *Intercontinental*
PARTS CATALOG

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R R R R R R R	51A	65-1324	SUPPORT INSTL, KEEL BEAM ELECTRONIC WIRING (SEE 24-3, FIG. 6A, ITEM 111, 24-3, FIG. 6B, ITEM 114, 24-3, FIG. 6D, ITEM 56, 24-3, FIG. 6E, ITEM 65 AND 24-3, FIG. 6F, ITEM 43)							0150	RF
		65-1324	SUPPORT INSTL, KEEL BEAM ELECTRONIC WIRING (VARIABLE DWG; 65-1324-5001) (SEE 24-3, FIG. 6B, ITEM 114, 24-3, FIG. 6E, ITEM 65 AND 24-3, FIG. 6F, ITEM 43)							5199	RF
	1	66-14589-1	. RETAINER.								1
		NAS601-20P	. ATTACHING PARTS								2
		NAS620-6L	. SCREW								2
		NAS680A06	. WASHER.								2
			. NUT								2
	2	66-14589-1	. RETAINER.								11
	3A	66-14589-1	. RETAINER.								6
		NAS601-16P	. ATTACHING PARTS								34
R R R R R R R		MS35338-22	. SCREW								34
		NAS620-6L	. WASHER.								34
			. WASHER.								34
	4	66-14160-1	. CLAMP								12
	5A	66-14160-1	. CLAMP								6
	6	BACG20ZB130	. GROMMET								9
	8	66-14589-2	. RETAINER.								6
		NAS601-16P	. ATTACHING PARTS								54
		MS35338-22	. SCREW								54
		NAS620-6L	. WASHER.								54
R R R R R R R	10	66-14224-1	. CLAMP								6
	12	66-14589-3	. RETAINER.								15
		NAS601-16P	. ATTACHING PARTS								30
		MS35338-22	. SCREW								30
		NAS620-6L	. WASHER.								30
			. WASHER.								30
	13	66-13764-1	. CLAMP							0150	15
	13	66-13764-2	. CLAMP							5199	15
	14	66-1556	. BRACKET								2
	15	66-1556	. BRACKET							5199	1
R R R R R R R		NAS514P832-7	. ATTACHING PARTS								6
		BACN10BY308W	. SCREW								6
			. NUT								6
	16	69-2361	. BRACKET ASSY.								2
		NAS603-4	. ATTACHING PARTS								4
		BACN10BY53W	. SCREW								4
			. NUT								4
	17	69-2361-4	. CUSHION, RUBBER								1
	18	69-2361-2	. BRACKET								1
		65-42067	. BRACKET INSTL, UPPER.							0150	1
R R R R R R R		65-42067	. BRACKET INSTL, UPPER (VARIABLE DWG; 65-42067-5001)							5199	1
	19	3-93333-2000	. BRACKET, UPPER.								11
		BACS12CB08-5	. ATTACHING PARTS								22
		MS20470D5	. SCREW, (USED WITH NAS679A08W)								22
			. (OPTIONAL MS20470D5)								22
		MS20470D5	. RIVET								22
		NAS679A08W	. (OPTIONAL TO BACS12CB08-5 (USED WITH NAS679A08W))								22
			. NUT								22
			-----*								
			-----*								

MISSING ITEM NUMBERS ARE NOT APPLICABLE

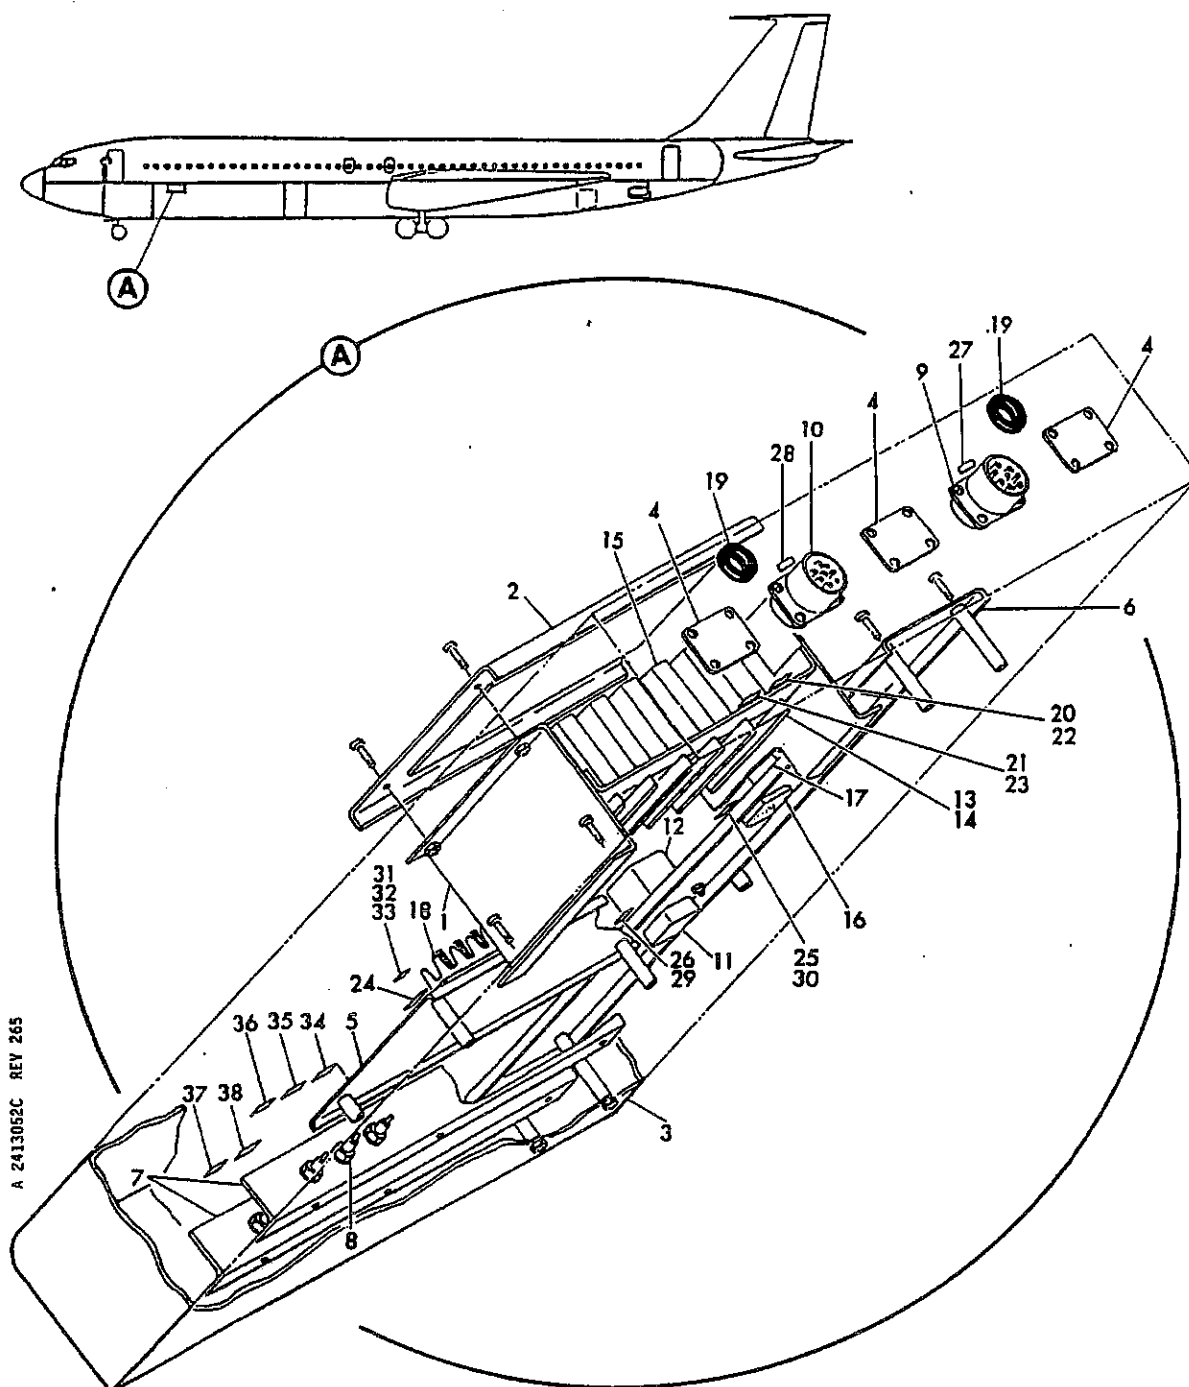

A 2413052C REV 265

FIGURE 52C. A/R JUNCTION BOX ASSY, EQUIPMENT ARRANGEMENT



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	52C	361-39-10-74338-101	A/R JUNCTION BOX ASSY, EQUIPMENT ARRANGEMENT (VS2500)							0150	RF
R			(ADDED BY RAF 7211.019-225) (SEE FIG. 50, ITEM 1)								
R	1	361-39-10-74338-111	. BASE ASSY, (VS2500)							0150	1
R		MS35207-262	ATTACHING PARTS							0150	4
R		AN960JD10L	. SCREW							0150	4
			. WASHER							0150	4
			-----*								
R	2	361-39-10-74338-113	. COVER ASSY, (VS2500)							0150	1
R		MS35207-262	ATTACHING PARTS							0150	4
R		AN960JD10L	. SCREW							0150	4
			. WASHER							0150	4
			-----*								
R	3	ADR39-10-11751-101	. A/R JUNCTION BOX ASSY, (VS2500) (SEE FIG. 53)							0150	1
R	4	361-39-10-74338-201	. PLATE, (VS2500)							0150	3
			ATTACHING PARTS								
R		NAS600-6	. SCREW							0150	12
R		AN960JD4L	. WASHER							0150	24
R		NAS679A04	. NUT							0150	12
			-----*								
R	5	361-39-10-74338-203	. BRACKET, (VS2500)							0150	1
			ATTACHING PARTS								
R		MS35207-269	. SCREW							0150	4
R		NAS43DD3-64	. SPACER							0150	4
R		AN960JD10L	. WASHER							0150	4
			-----*								
R	6	361-39-10-74338-205	. BRACKET, (VS2500)							0150	1
			ATTACHING PARTS								
R		MS35207-273	. SCREW							0150	4
R		AN960JD10L	. WASHER							0150	4
R		NAS43DD3-128	. SPACER							0150	4
			-----*								
R	7	361-39-10-74338-207	. ANGLE, (VS2500)							0150	2
			ATTACHING PARTS								
R		MS35207-262	. SCREW							0150	6
R		AN960JD10L	. WASHER							0150	6
			-----*								
R	8	1N27988	. DIODE							0150	5
			ATTACHING PARTS								
R		361-39-10-74338-219	. RING, (VS2500)							0150	5
R		NAS549-10	. WASHER							0150	10
R		MS35333-73	. WASHER							0150	5
R		AN960-10L	. WASHER							0150	5
R		MS21044-N3	. NUT							0150	5
			-----*								
R	9	MS3470L20-41P	. CONNECTOR							0150	1
R	10	MS3470L22-55P	. CONNECTOR							0150	1
R	11	MS27743-6	. RELAY							0150	1
R	12	SD1057-8912	. SOCKET							0150	1
R	13	AR2-760-11-07	. PRINTED CIRCUIT							0150	1
R	14	00-6024-036-980-001	. CONNECTOR							0150	2
R	15	AR2-760-10-00	. PRINTED CIRCUIT							0150	1
R	16	MS25329-D1	. RELAY							0150	1
R	17	SO-1018-7119	. SOCKET							0150	1
R	18	MS27212-2-10	. TERMINAL BOARD							0150	1
			ATTACHING PARTS								
R		NAS600-6	. SCREW							0150	2
R		AN960JDAL	. WASHER							0150	2
R		NAS679A04	. NUT							0150	2
			-----*								
R	19	MS35409-14	. GROMMET							0150	2
R	20	ADR39-10-11752-215	. DECAL, (VS2500)							0150	1
R	21	ADR39-10-11752-223	. DECAL, (VS2500)							0150	1
R	22	ADR39-10-11752-225	. DECAL, (VS2500)							0150	1
R	23	ADR39-10-11752-233	. DECAL, (VS2500)							0150	1
R	24	ADR39-10-11752-239	. DECAL, (VS2500)							0150	1
R	25	ADR39-10-11752-245	. DECAL, (VS2500)							0150	1
R	26	ADR39-10-11752-249	. DECAL, (VS2500)							0150	1
R	27	ADR39-10-11752-255	. DECAL, (VS2500)							0150	1
R	28	ADR39-10-11752-257	. DECAL, (VS2500)							0150	1
R	29	ADR39-10-11752-275	. DECAL, (VS2500)							0150	1
R	30	ADR39-10-11752-279	. DECAL, (VS2500)							0150	1
R	31	ADR39-10-11752-267	. DECAL, (VS2500)							0150	1
R	32	ADR39-10-11752-269	. DECAL, (VS2500)							0150	1
R	33	ADR39-10-11752-271	. DECAL, (VS2500)							0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
707
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R R R R R	52C 34	ADR39-10-11752-301	.	DECAL, (VS2500)	.	.	.	.	.	0150	1
	35	ADR39-10-11752-303	.	DECAL, (VS2500)	.	.	.	.	.	0150	1
	36	ADR39-10-11752-305	.	DECAL, (VS2500)	.	.	.	.	.	0150	1
	37	ADR39-10-11752-307	.	DECAL, (VS2500)	.	.	.	.	.	0150	1
	38	ADR39-10-11752-309	.	DECAL, (VS2500)	.	.	.	.	.	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

BOEING **707** *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
52D	65-72913-1	SUPPORT INSTL, INS CONDUIT (SEE 24-3, FIG. 5B, ITEM . . 231, 24-3, FIG. 5D, ITEM 204 AND 24-3, FIG. 5F, ITEM 180)							5199	RF
1	69-58058-5	. BRACKET							5199	1
		ATTACHING PARTS								
	AN3-6A	. BOLT.							5199	3
	BACN10JC3	. NUT							5199	3
		-----*								
2	69-58058-4	. BRACKET							5199	1
		ATTACHING PARTS								
	AN3-4A	. BOLT.							5199	4
		-----*								
3	69-58058-1	. SUPPORT ASSY.							5199	1
4	AN3-4A	. BOLT.							5199	2
5	BACN10JC3	. NUT							5199	2
6	69-58058-7	. CHANNEL ASSY.							5199	1
6	69-58058-6	. CHANNEL							5199	1
7	69-58058-3	. STRAP							5199	1
8	69-58058-2	. BRACKET							5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

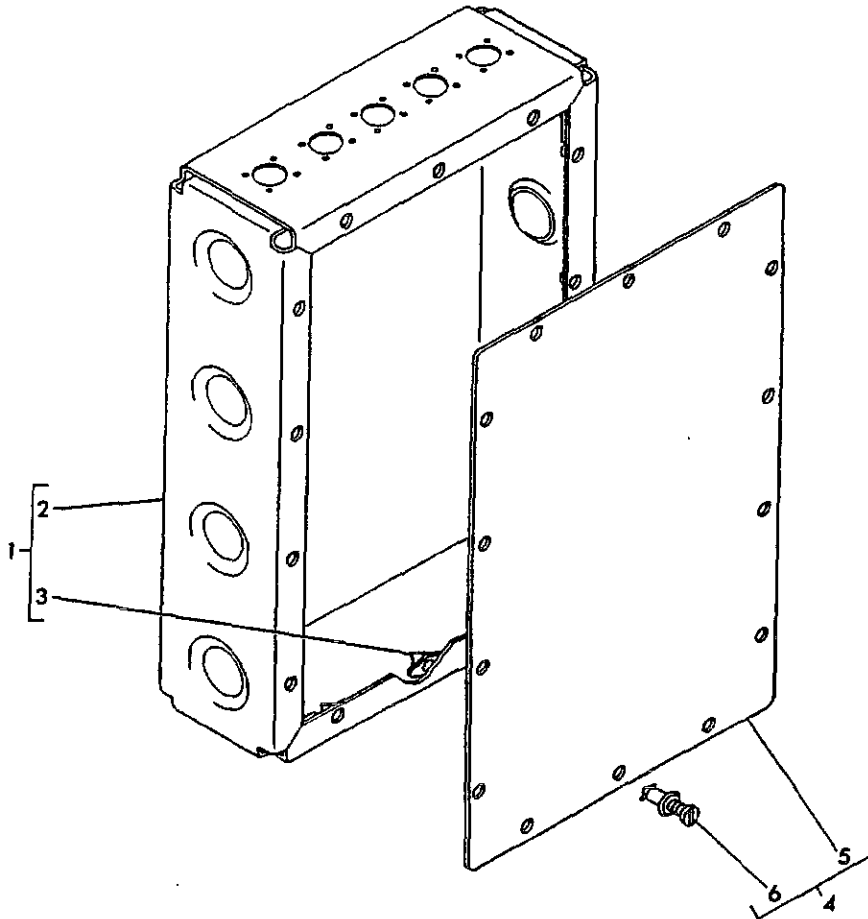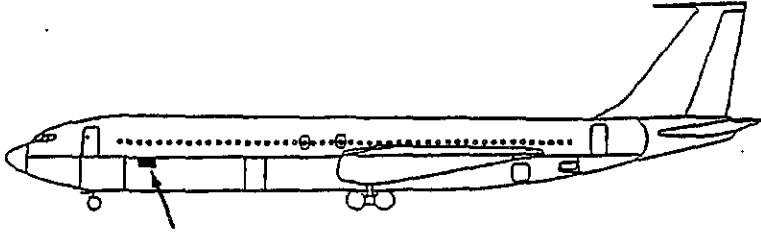

A 2413053 REV 265

FIGURE 53. A/R JUNCTION BOX ASSY



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R R R	53	ADR39-10-11751-101	A/R JUNCTION BOX ASSY, (VS2500) (ADDED BY RAF							0150	RF
			7211.019-225) (SEE FIG. 52, ITEM 3)								
	1	ADR39-10-11751-105	. . . BOX ASSY, (VS2500).							0150	1
	2	ADR39-10-11894-201	. . . BOX, (VS2500)							0150	1
	3	212-12A	. . . RECEPTACLE.							0150	14
	4	ADR39-10-11751-103	. . . COVER ASSY, (VS2500).							0150	1
	5	ADR39-10-11751-203	. . . PANEL, (VS2500)							0150	1
	6	2600-4	. . . STUD.							0150	14
MISSING ITEM NUMBERS ARE NOT APPLICABLE											


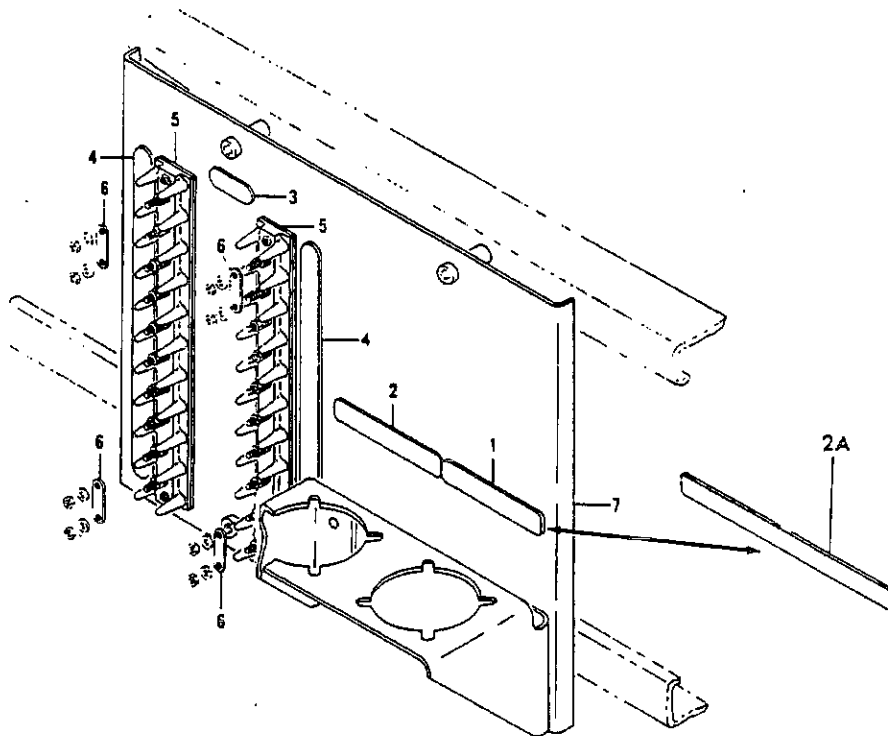


FIGURE 56. PLATE INSTL, NAVIGATORS STATION DISCONNECT AND TERMINAL MOUNTING

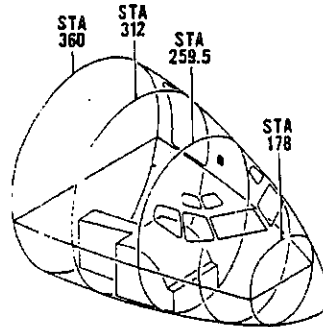

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
56	69-22609-4	PLATE INSTL, NAVIGATORS STATION DISCONNECT AND TERMINAL MOUNTING (SEE 24-3, FIG. 5D, ITEM 13 AND 24-3, FIG. 5F, ITEM 6)							5199	RF
2A	BAC27CEE-785	. SCOTCH-CAL.							5199	1
3	BACM10L10-12XA	. MARKER-ALUMINUM FOIL.							5199	1
4	BACM10N110-2CRB	. MARKER-ALUMINUM FOIL, (CUT AS REQUIRED -2 LOCATIONS)							5199	1
5	MS27212-1-10	. TERMINAL BOARD ASSY							5199	2
		ATTACHING PARTS								
	BACS12CB04-6	. SCREW, (OPTIONAL NAS600-6).							5199	4
	NAS679A04W	. NUT							5199	4
		-----*								
6	MS25227-2	. STRIP							5199	4
7	69-22608-1	. PLATE ASSY.							5199	1
		ATTACHING PARTS								
	BACS12CB3-14	. SCREW, (OPTIONAL NAS603-14)							5199	2
	BACS12CB3-22	. SCREW, (OPTIONAL NAS603-22)							5199	2
	BACS18F508	. SPACER.							5199	2
	BACS18F100B	. SPACER.							5199	2
		-----*								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

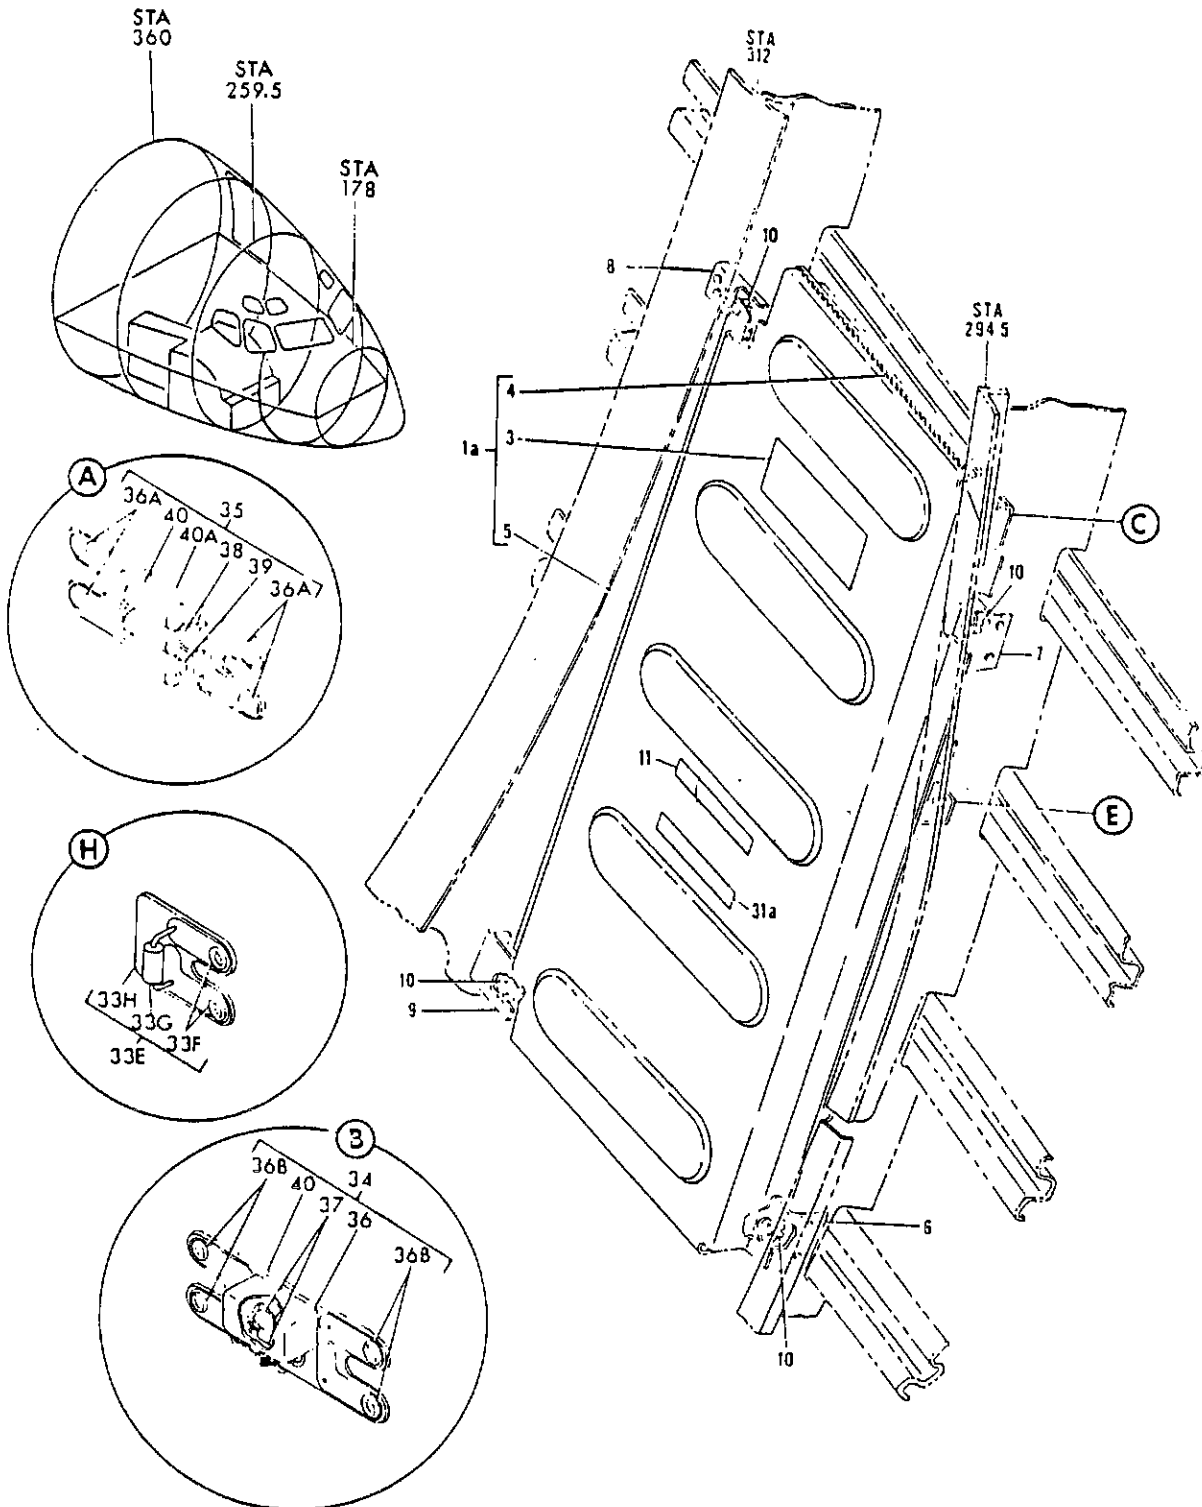


FIGURE 61A. SHIELD INSTL. STATION 294.5 TO 312 RJ20 (SHEET 1)

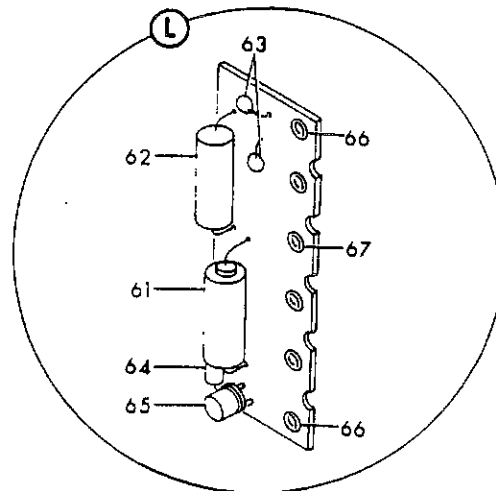
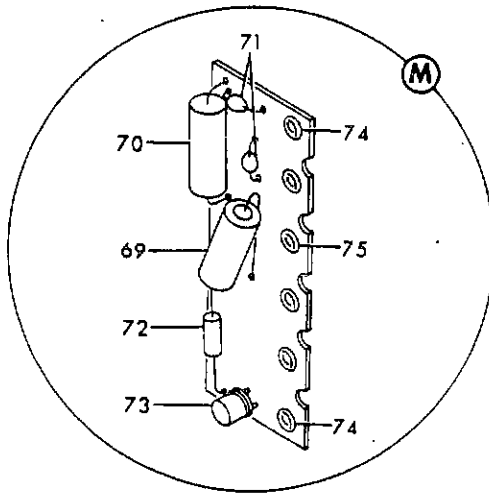
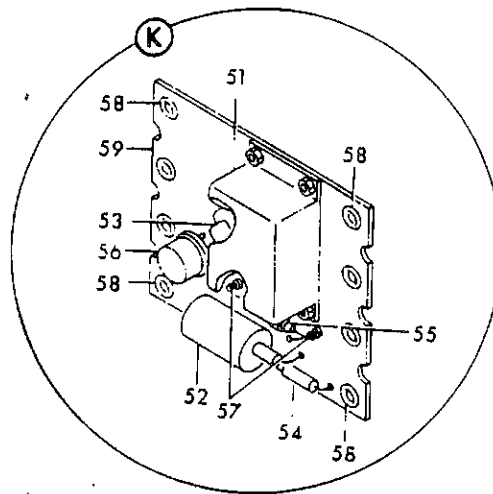
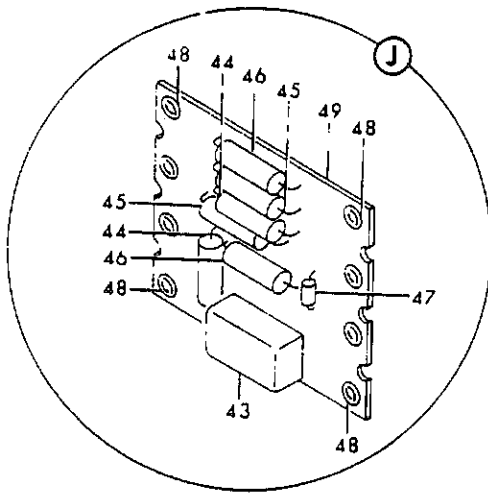


FIGURE 61A. SHIELD INSTL. STATION 294.5 TO 312 RJ20 (SHEET 3)
COVER INSTL. STATION 294.5 TO 312 RJ20 SHIELD

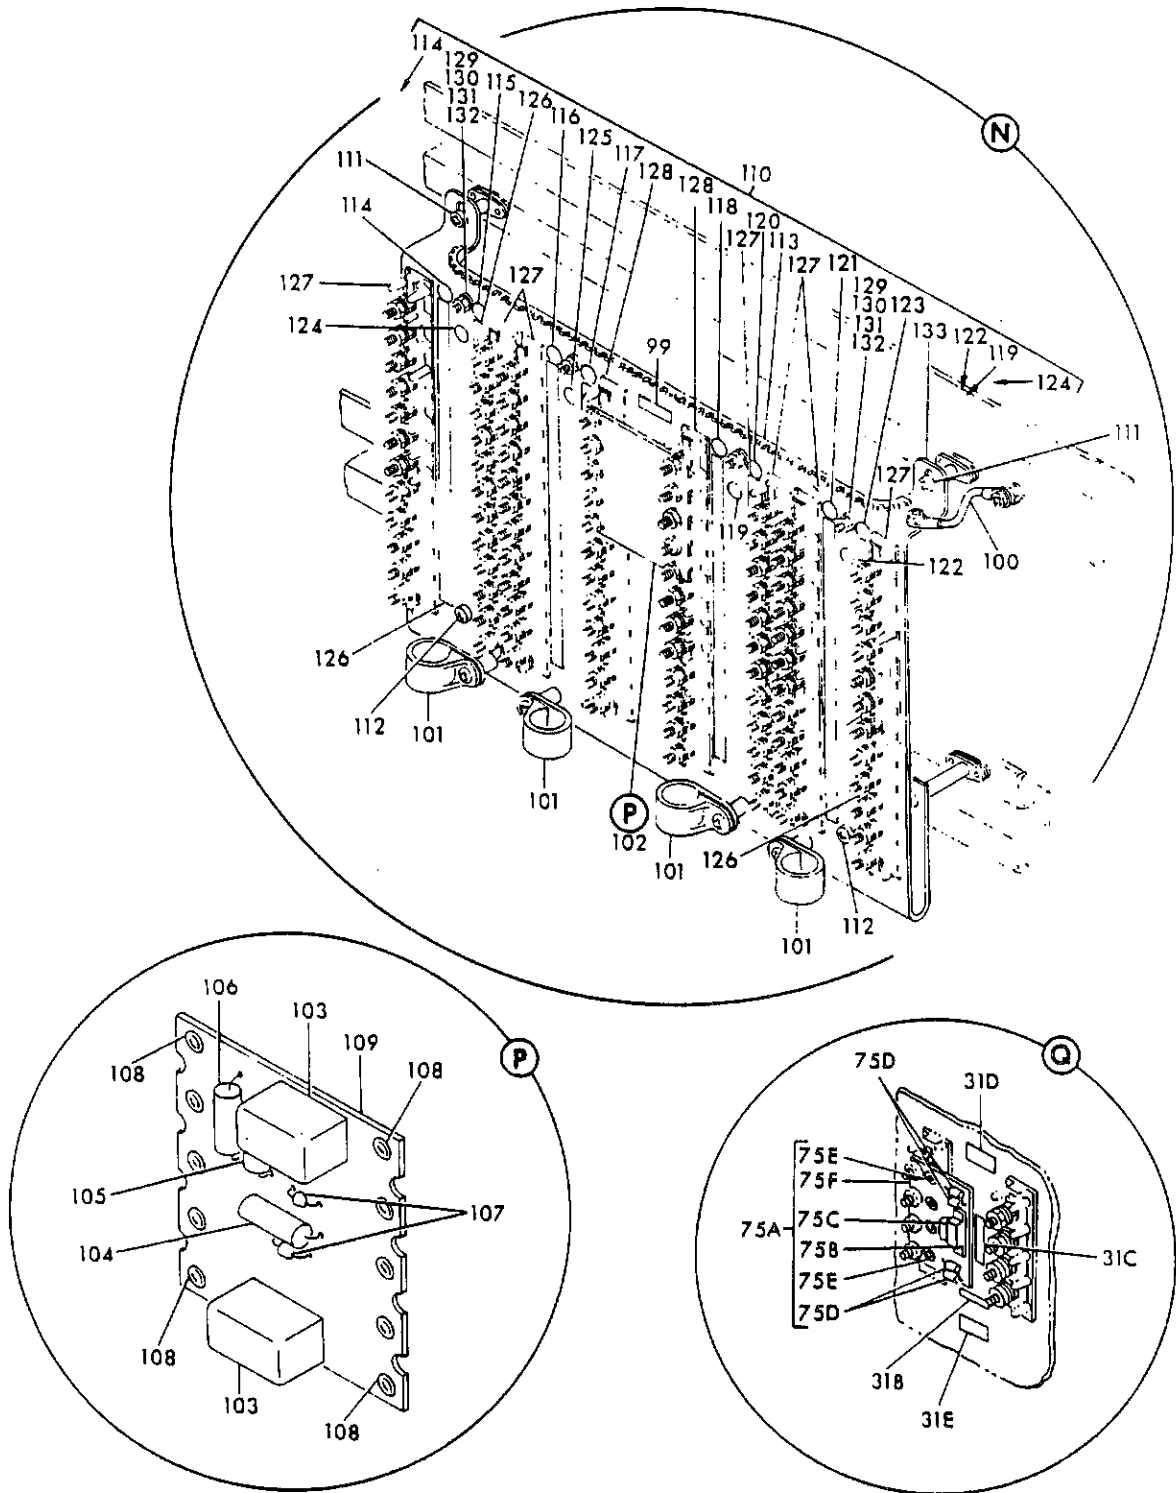


FIGURE 61A. SHIELD INSTL, STATION 294.5 TO 312 RJ20 (SHEET 4)
COVER INSTL, STATION 294.5 TO 312 RJ20 SHIELD



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
61A			COVER INSTL, STATION 294.5 TO 312 RJ20 SHIELD (ELECTRICAL POWER ONLY)		
	65-37656-18		SHIELD INSTL, STATION 294.5 TO 312 RJ20 COVER INSTL, STATION 294.5 TO 312 RJ20 SHIELD (ELECTRICAL POWER ONLY) (SEE 24-3, FIG. 5A, ITEM 101, 24-3, FIG. 5B, ITEM 101, 24-3, FIG. 5C, ITEM 123, 24-3, FIG. 5D, ITEM 106, 24-3, FIG. 5E, ITEM 64 AND 24-3, FIG. 5F, ITEM 62)		RF
1A	65-40342-11		. . COVER ASSY, JUNCTION BOX (ELECTRICAL POWER ONLY). . ATTACHING PARTS		1
	BACS21Y4R		. . STUD ASSY		1
	BACS21Y3R		. . STUD ASSY		3
	BACW10X4		. . WASHER.		4

3	BACM9L9CKC		. . . SCOTCH-CAL, RJ 20		1
5	65-40342-12		. . . COVER, RJ20 JUNCTION BOX.		1
6	65-37656-4		. . ANGLE ASSY, STATION 294.5 TO 312 RJ20 SHIELD COVER SUPPORT		1
7	65-37656-5		. . ANGLE ASSY, STATION 294.5 TO 312 RJ20 SHIELD COVER SUPPORT		1
8	65-37656-6		. . ANGLE ASSY, STATION 294.5 TO 312 RJ20 SHIELD COVER SUPPORT		1
9	65-37656-7		. . ANGLE ASSY, STATION 294.5 TO 312 RJ20 SHIELD COVER SUPPORT		1
10	BACR11Y2		. . . RECEPTACLE.		1
	65-37656-2		. SHIELD INSTL, STATION 294.5 TO 312 RJ20 (SEE 24-3, . . FIG. 5A, ITEM 102, 24-3, FIG. 5B, ITEM 102, 24-3, FIG. 5C, ITEM 124, 24-3, FIG. 5D, ITEM 107, 24-3, FIG. 5E, ITEM 65 AND 24-3, FIG. 5F, ITEM 63)		RF
11	BACM9L10ACS		. . SCOTCH-CAL, RADIO ALTIMETER		1
12	BACJ40A20-5		. . JUMPER ASSY		1
			ATTACHING PARTS		
	BACS12CB3-5		. . SCREW		2
	AN960D10L		. . WASHER.		2
	NAS679A3W		. . NUT		2
	BACS12CB3-26		. . SCREW		4
	NAS43DD3-64		. . SPACER.		4
	BACN10FX1		. . NUT		4

13A	66-13940-1		. . CLIP ASSY, RESISTOR MOUNTING.	0150	2
13B	69-2695-3		. . RESISTOR ASSY	0150	2
13C	36151		. . . TERMINAL, (V00779).	0150	2
13D	RC30GF102K		. . . RESISTOR, 1000 OHM 1 WATT (B0033) (OPTIONAL RC32GF102K (B0033))	0150	1
13D	RC32GF102K		. . . RESISTOR, 1000 OHM 1W (V29762). (OPTIONAL TO RC30GF102K (V29762)) (OPTIONAL RCR32G102KM (V29762))	0150	1
13D	RCR32G102KM		. . . RESISTOR, 1000 OHM 1W (V29762). (OPTIONAL TO RC32GF102K (V29762))	0150	1
14	65-40342-4		. . PAN ASSY, RJ20 JUNCTION BOX TERMINAL. ATTACHING PARTS		1
	BACS12CB3-34		. . SCREW		4


15	BACM9N1GN		. . . SCOTCH-CAL, 1 THRU 12 (TRIM AS REQUIRED).		8
16	BACM9L9CKG		. . . SCOTCH-CAL, G13 H13		1
17	BACM9L9CKF		. . . SCOTCH-CAL, E13 F13		1
18	BACM9L9CKE		. . . SCOTCH-CAL, C13 D13		1
19	BACM9L9CKD		. . . SCOTCH-CAL, A13 B13		1
20	BACM9L1BP		. . . SCOTCH-CAL, LETTER F.		1
21	BACM9L1BS		. . . SCOTCH-CAL, LETTER H.		1
22	BACM9L1BR		. . . SCOTCH-CAL, LETTER G.		1
23	BACM9L1BN		. . . SCOTCH-CAL, LETTER E.		1
24	BACM9L1BM		. . . SCOTCH-CAL, LETTER D.		1
25	BACM9L1BL		. . . SCOTCH-CAL, LETTER C.		1
26	BACM9L1BK		. . . SCOTCH-CAL, LETTER B.		1
27	BACM9L1BJ		. . . SCOTCH-CAL, LETTER A.		1
28	MS25227-1		. . . STRIP		16
29	MS25123-1-12		. . . TERMINAL BOARD ASSY ATTACHING PARTS		8
	BACS12CB04-6		. . . SCREW		16
	NAS679A04W		. . . NUT		16

29A	BACS12CB06-11		. . . SCREW		8
29B	AN960D6L		. . . WASHER.		16
MISSING ITEM NUMBERS ARE NOT APPLICABLE					



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE										EFF FROM TO	UNITS PER ASSY																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																														
			1	2	3	4	5	6	7																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																			
61A	29C	MS35338-41	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..	..

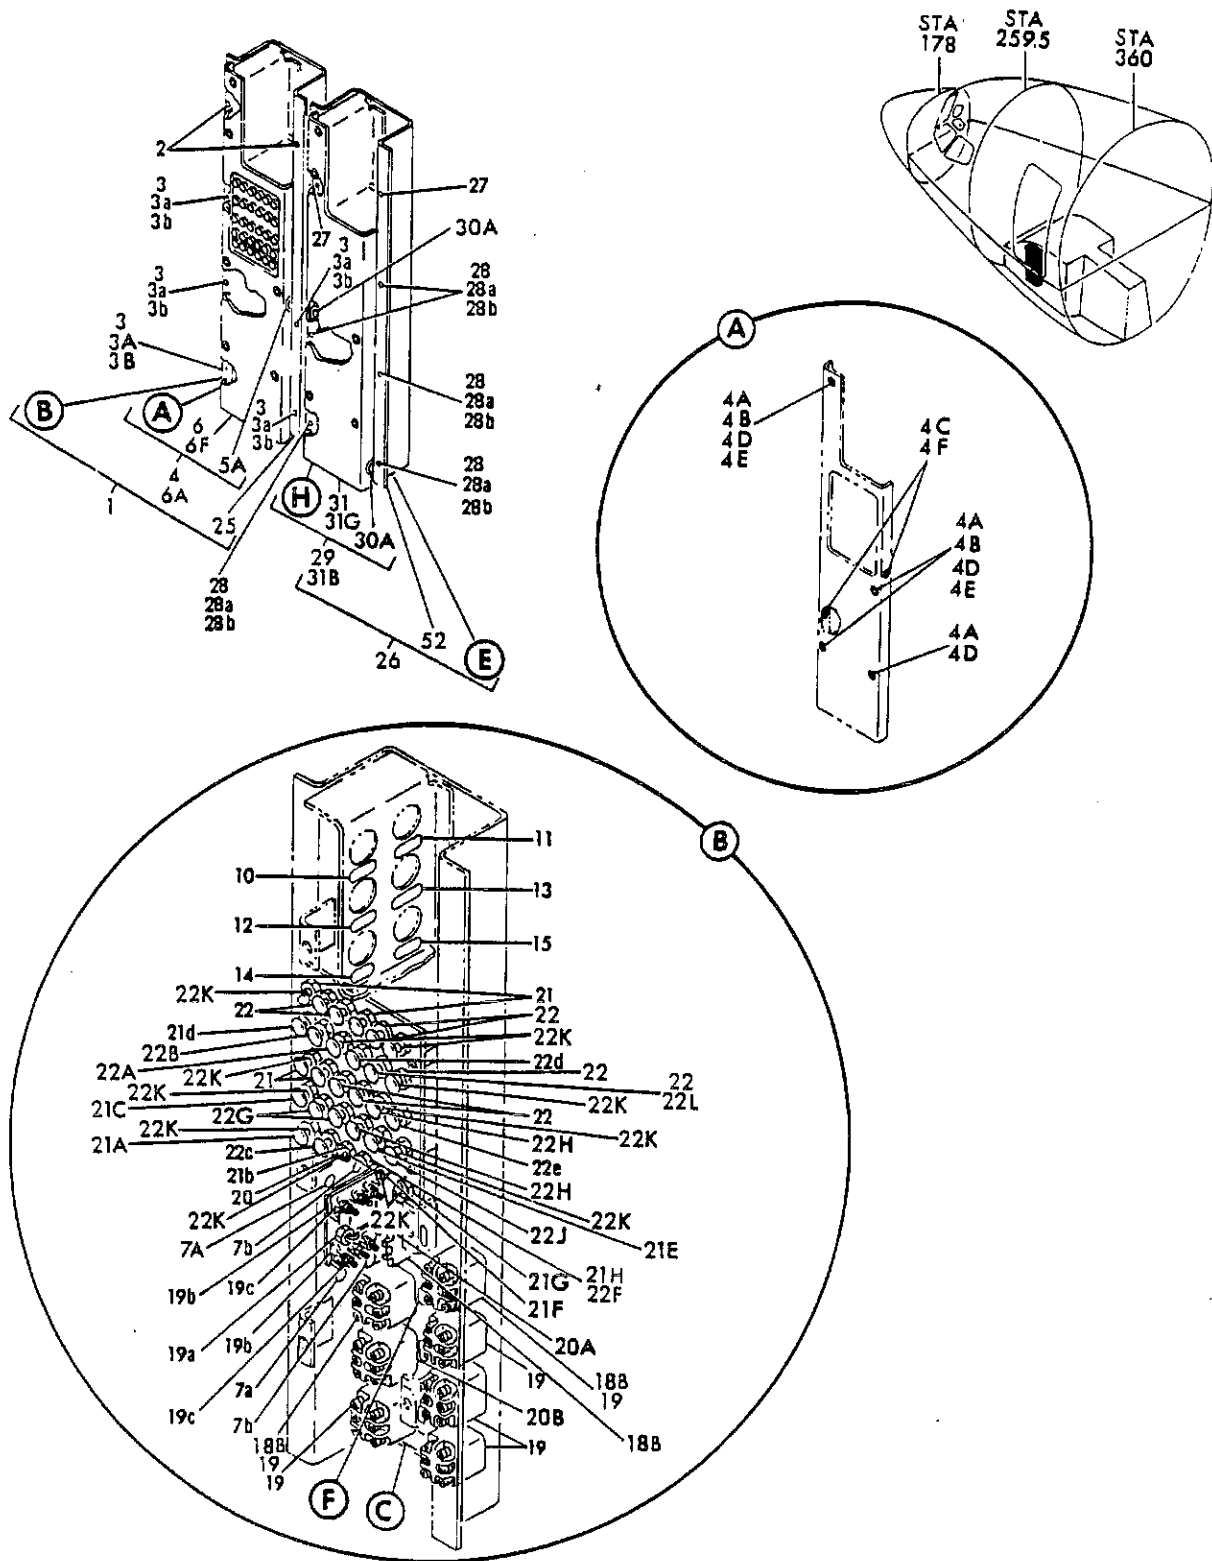

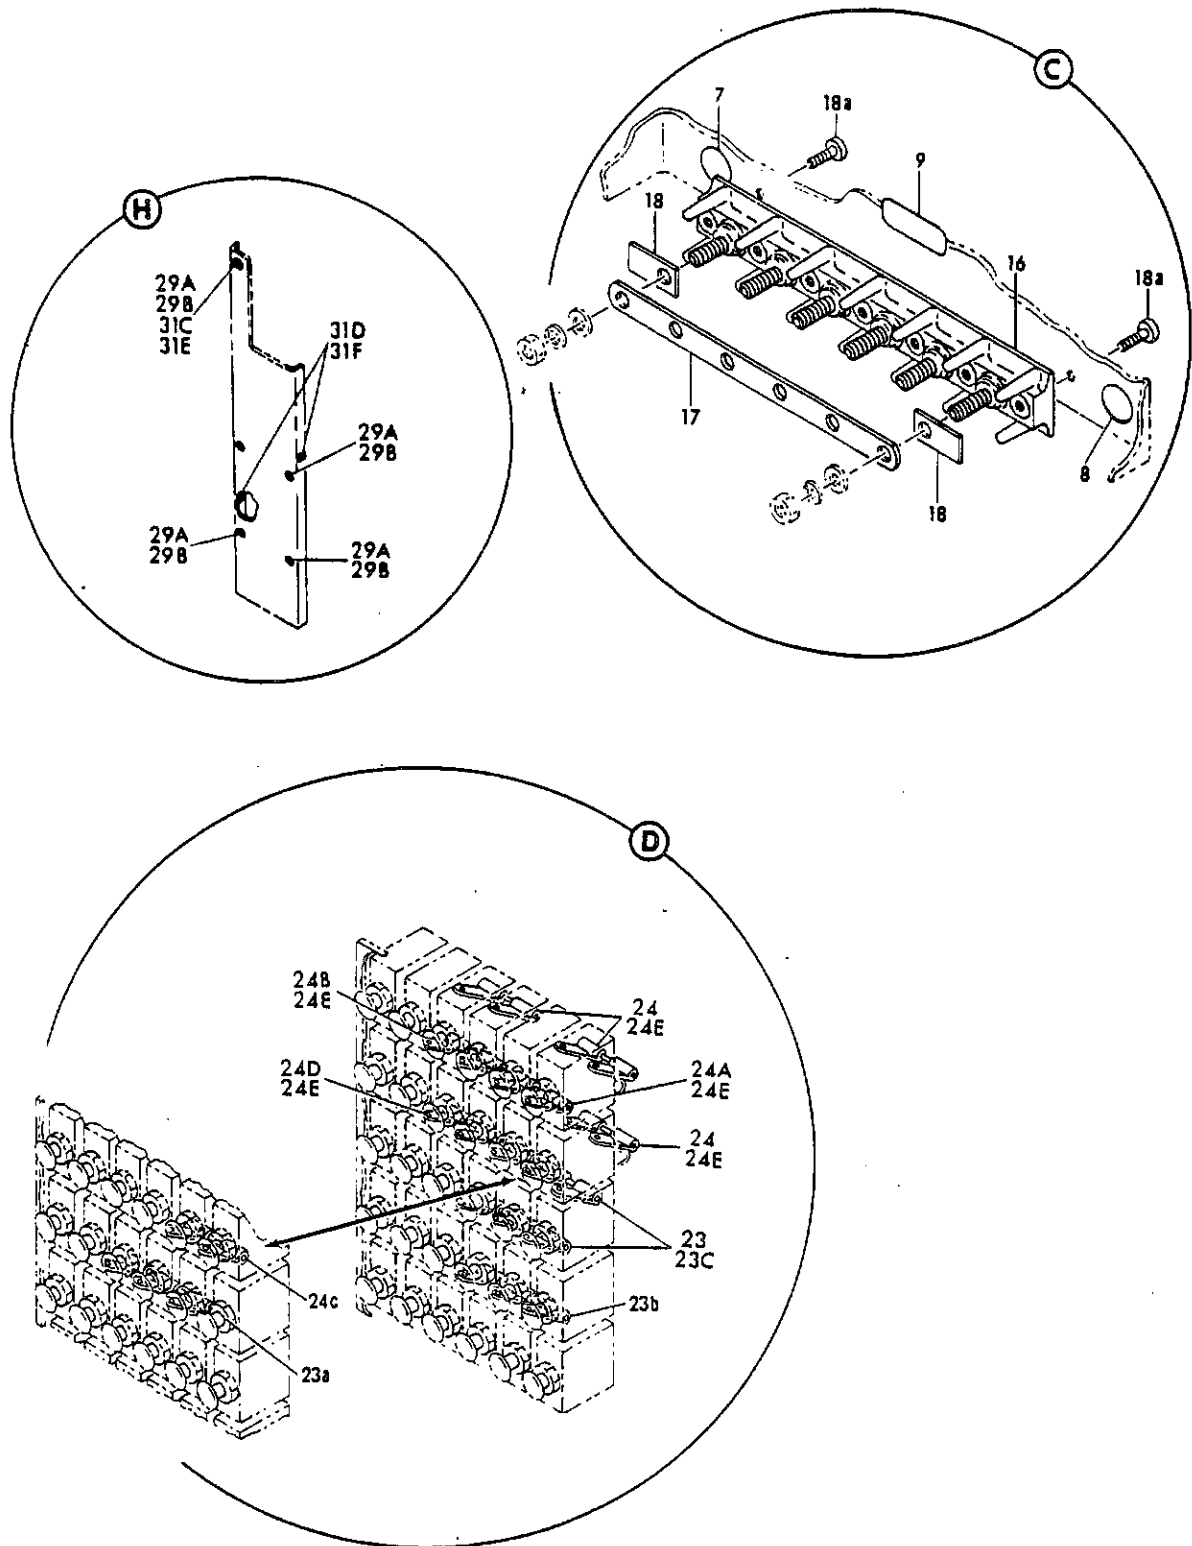


FIGURE 61D. SHIELD INSTL, STATION 294 J28 ELECTRICAL EQUIPMENT (LH) (ELECTRICAL POWERONLY) (SHEET 2)


PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
610	65-58618-1	SHIELD INSTL, STATION 294 J28 ELECTRICAL EQUIPMENT LH . (ELECTRICAL POWER ONLY) (VARIABLE DWG:65-58618-5004) (SEE 24-3, FIG. 1A, ITEM 74 AND 24-3, FIG. 1C, ITEM 63)	5199	RF
1	65-58618-77	. SHIELD ASSY, FORWARD (ELECTRICAL POWER ONLY).	5199	1
2	NAS603-20P	. ATTACHING PARTS		
3	NAS603-7P	. SCREW	5199	2
3A	AN960D10L	. SCREW	5199	5
3B	BACN10NX32-4	. WASHER.	5199	5
		. NUT	5199	5
6A	65-58618-32	. . . COVER ASSY.	5199	1
6B	BACS21Y3R	. . . STUD ASSY	5199	1
6C	BACS21Z4R	. . . STUD ASSY	5199	2
6D	BACW10X4	. . . WASHER.	5199	1
6E	BACW10X5	. . . WASHER.	5199	2
6F	65-58618-34	. . . COVER	5199	1
7	BACM10N002S	. . . MARKER, 1 ALUMINUM FOIL	5199	1
8	BACM10N002AAW	. . . MARKER, 6 ALUMINUM FOIL	5199	1
8A	BAC27CEE488	. . . MARKER, T461 ALUMINUM FOIL.	5199	1
8B	BAC27CEE455	. . . MARKER, T431 ALUMINUM FOIL.	5199	1
8C	BAC27CEE487	. . . MARKER, T460 ALUMINUM FOIL.	5199	1
8D	BAC27CEE452	. . . MARKER, T54 ALUMINUM FOIL	5199	1
8E	BAC27CEE456	. . . MARKER, T437 ALUMINUM FOIL.	5199	1
8F	BAC27CEE454	. . . MARKER, T430 ALUMINUM FOIL.	5199	1
8G	BAC27CEE472	. . . MARKER, T52 ALUMINUM FOIL	5199	1
8H	BAC27CEE451	. . . MARKER, T53 ALUMINUM FOIL	5199	1
9	BAC27CEE17Z	. . . MARKER-ALUMINUM FOIL, T369.	5199	1
10	BAC27CEE249	. . . DECAL, J28AA.	5199	1
11	BAC27CEE250	. . . DECAL, J28AB.	5199	1
12	BAC27CEE251	. . . DECAL, J28AC.	5199	1
13	BAC27CEE252	. . . DECAL, J28AD.	5199	1
14	BAC27CEE253	. . . DECAL, J28AE.	5199	1
15	BAC27CEE254	. . . DECAL, J28AF.	5199	1
16	MS27212-2-6	. . . TERMINAL BOARD.	5199	1
17	MS25226-4-6	. . . LINK.	5199	1
18	MS25227-3A	. . . STRIP	5199	2
18A	NAS600-5P	. . . SCREW	5199	2
19	10-60828-2	. . . TRANSFORMER, (SAME AS 9445 (V95266)).	5199	6
19	9445	. . . TRANSFORMER, (SAME AS BAC SPEC DWG 10-60828-2). (V95266)	5199	6
		. ATTACHING PARTS		
	NAS601-4P	. . . SCREW	5199	24
20	65-58618-8	. . . PANEL, CIRCUIT BREAKER.	5199	1
		. ATTACHING PARTS		
	NAS603-4P	. . . SCREW	5199	4
20A	10-60828-2	. . . TRANSFORMER, (SAME AS 9445 (V95266)).	5199	1
20A	9445	. . . TRANSFORMER, (SAME AS BAC SPEC DWG 10-60828-2). (V95266)	5199	1
20B	9445	. . . TRANSFORMER, (SAME AS BAC SPEC DWG 10-60828-2). (V95266)	5199	1
20B	10-60828-2	. . . TRANSFORMER, (SAME AS 9445 (V95266)).	5199	1
		. ATTACHING PARTS		
	NAS601-4P	. . . SCREW	5199	8
24	BACB29B7-2	. . . BUS ASSY, (ALTERED FROM BACB29B7-20).	5199	3
24B	BACB29B7-2	. . . BUS ASSY, (ALTERED FROM BACB29B7-20).	5199	1
25	65-58618-30	. . . CHANNEL ASSY, FORWARD	5199	1
26	65-58618-78	. SHIELD ASSY, AFT (ELECTRICAL POWER ONLY).	5199	1
		. ATTACHING PARTS		
27	NAS603-20P	. . . SCREW	5199	2
28	NAS603-7P	. . . SCREW	5199	5
28A	AN960D10L	. . . WASHER.	5199	5
28B	BACN10NX32-4	. . . NUT	5199	5
31B	65-58618-31	. . . COVER ASSY.	5199	1
31C	BACS21Y3R	. . . STUD ASSY	5199	1
31D	BACS21Z4R	. . . STUD ASSY	5199	2
31E	BACW10X4	. . . WASHER.	5199	1
31F	BACW10X5	. . . WASHER.	5199	2
31G	65-58618-33	. . . COVER	5199	1
32	BACM10N002S	. . . MARKER, 1 ALUMINUM FOIL	5199	4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
61D 32A	BAC27CEE491	.	MARKER, 7 ALUMINUM FOIL	5199	4
33	BAC27CEE261	.	DECAL, T377	5199	1
34	BAC27CEE262	.	DECAL, T378	5199	1
35	BAC27CEE263	.	DECAL, T379	5199	1
36	BAC27CEE264	.	DECAL, T374	5199	1
36A	BAC27CEE457	.	MARKER, T469 ALUMINUM FOIL.	5199	1
36B	BAC27CEE489	.	MARKER, T468 ALUMINUM FOIL.	5199	1
36C	BAC27CEE490	.	MARKER, T470 ALUMINUM FOIL.	5199	1
37	BAC27CEE255	.	DECAL, J28BA.	5199	1
38	BAC27CEE256	.	DECAL, J28BB.	5199	1
39	BAC27CEE257	.	DECAL, J28BC.	5199	1
40	BAC27CEE258	.	DECAL, J28BD.	5199	1
41	BAC27CEE259	.	DECAL, J28BE.	5199	1
42	BAC27CEE260	.	DECAL, J28BF.	5199	1
42A	10-60828-2	.	TRANSFORMER, (SAME AS 9445 (V95266)).	5199	1
42A	9445	.	TRANSFORMER, (SAME AS BAC SPEC DWG 10-60828-2). (V95266)	5199	1
42B	10-60828-2	.	TRANSFORMER, (SAME AS 9445 (V95266)).	5199	1
42B	9445	.	TRANSFORMER, (SAME AS BAC SPEC DWG 10-60828-2). (V95266)	5199	1
42C	10-60828-2	.	TRANSFORMER, (SAME AS 9445 (V95266)).	5199	1
42C	9445	.	TRANSFORMER, (SAME AS BAC SPEC DWG 10-60828-2). (V95266)	5199	1
	NAS601-4P	.	ATTACHING PARTS SCREW (V95266)	5199	12
43A	65-38292-21	.	DIODE ASSY.	5199	2
43B	65-38292-8	.	BLANK, CIRCUIT BOARD.	5199	1
43C	CE123	.	EYELET, (V04264).	5199	2
43D	1N2484	.	RECTIFIER, SILICON.	5199	1
44	65-38292-50	.	DIODE ASSY.	5199	7
44B	65-38292-8	.	BLANK, CIRCUIT BOARD.	5199	1
44C	CE123	.	EYELET, (V04264).	5199	2
44D	1N33138	.	DIODE	5199	1
44E	MS25082-4	.	NUT	5199	1
44F	65-38292-30	.	PLATE, HEAT SINK.	5199	1
45	MS27212-1-7	.	TERMINAL BOARD.	5199	4
46	MS25226-2-4	.	LINK.	5199	1
46A	MS25226-2-2	.	LINK.	5199	1
47	MS25227-1A	.	STRIP	5199	8
	NAS600-5P	.	ATTACHING PARTS SCREW	5199	8
48	10-60450-1	.	RELAY, 28VDC.	5199	2
	NAS679A06W	.	ATTACHING PARTS NUT	5199	4
49	BAC27CEE265	.	DECAL, R575	5199	1
50	BAC27CEE266	.	DECAL, R576	5199	1
51	65-58618-7	.	BRACKET, RELAY.	5199	1
	NAS603-4P	.	ATTACHING PARTS SCREW (OPTIONAL BACS12CB3)	5199	2
	BACS12CB3	.	SCREW (OPTIONAL TO NAS603-4P)	5199	2
52	65-58618-29	.	CHANNEL ASSY, AFT	5199	1
56	BAC27CEE552	.	MARKER-ALUMINUM FOIL, RT295	5199	1
57	BAC27CEE553	.	MARKER-ALUMINUM FOIL, RT296	5199	1
		.	FOR REFERENCE TO OTHER SHIELD DETAILS, SEE NHA.	5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE					



DETAILED PARTS LIST
24-13-73B
PAGE 0

24-13-73B

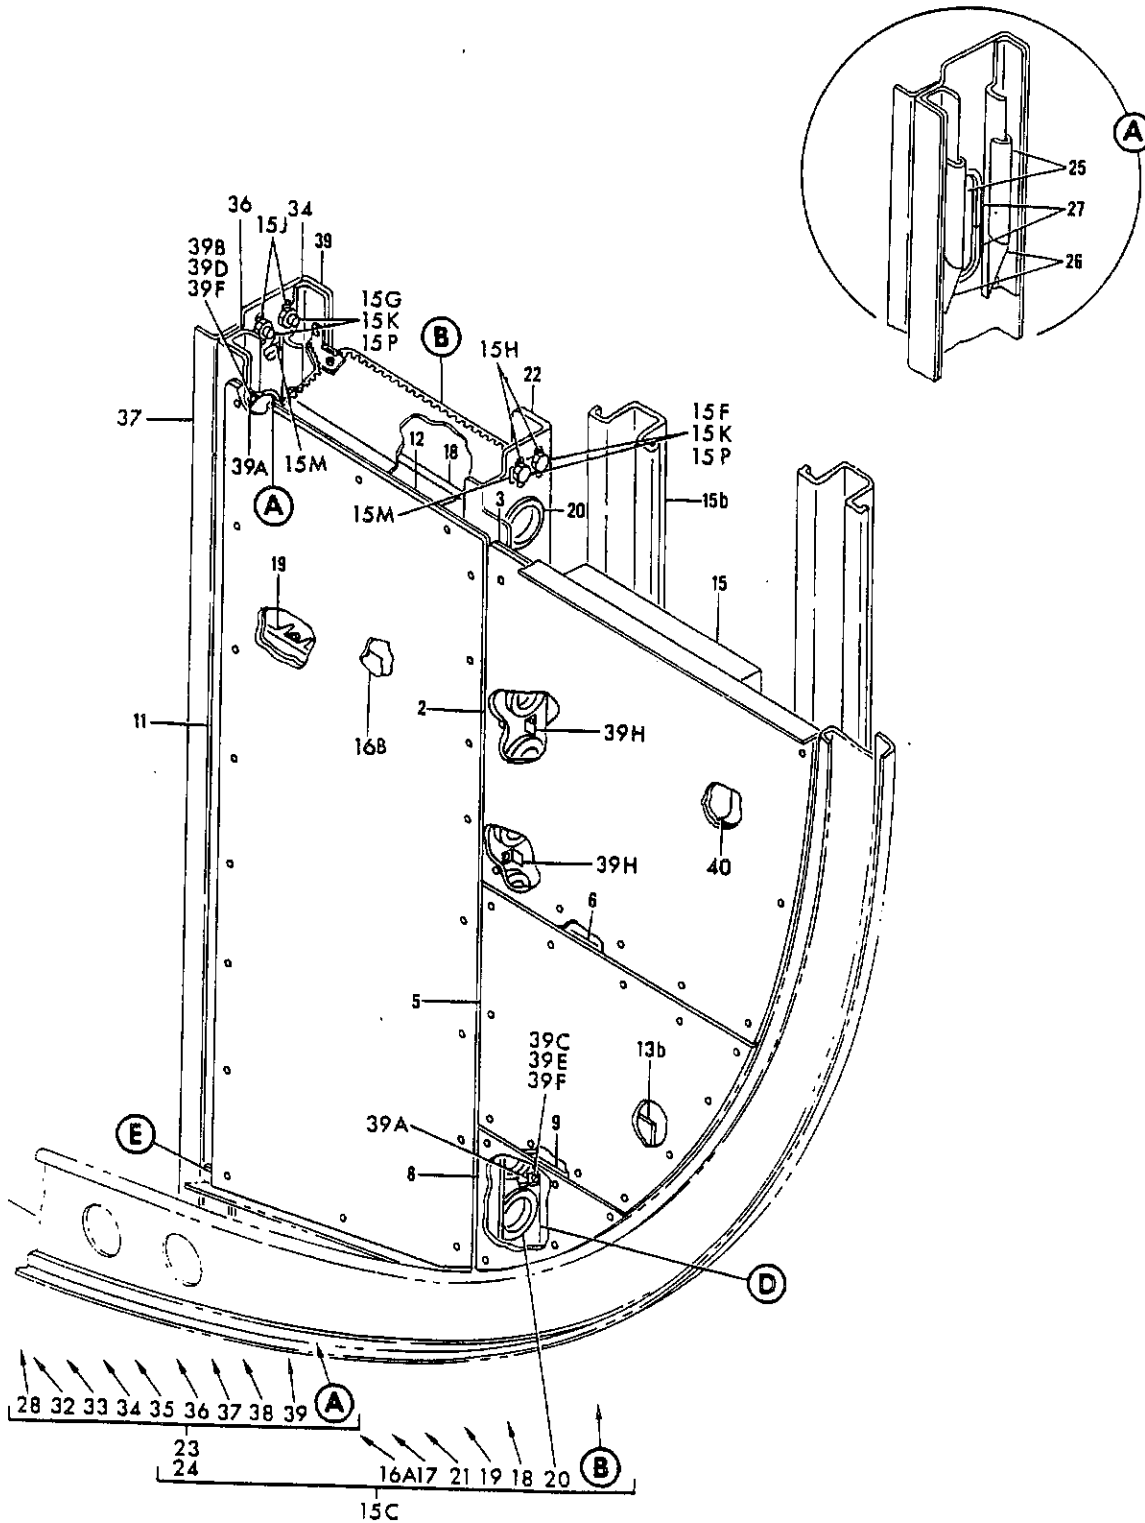


FIGURE 73B. SHIELD INSTL, STATION 400 ELECTRONIC WIRE TERMINAL (SHEET 2)

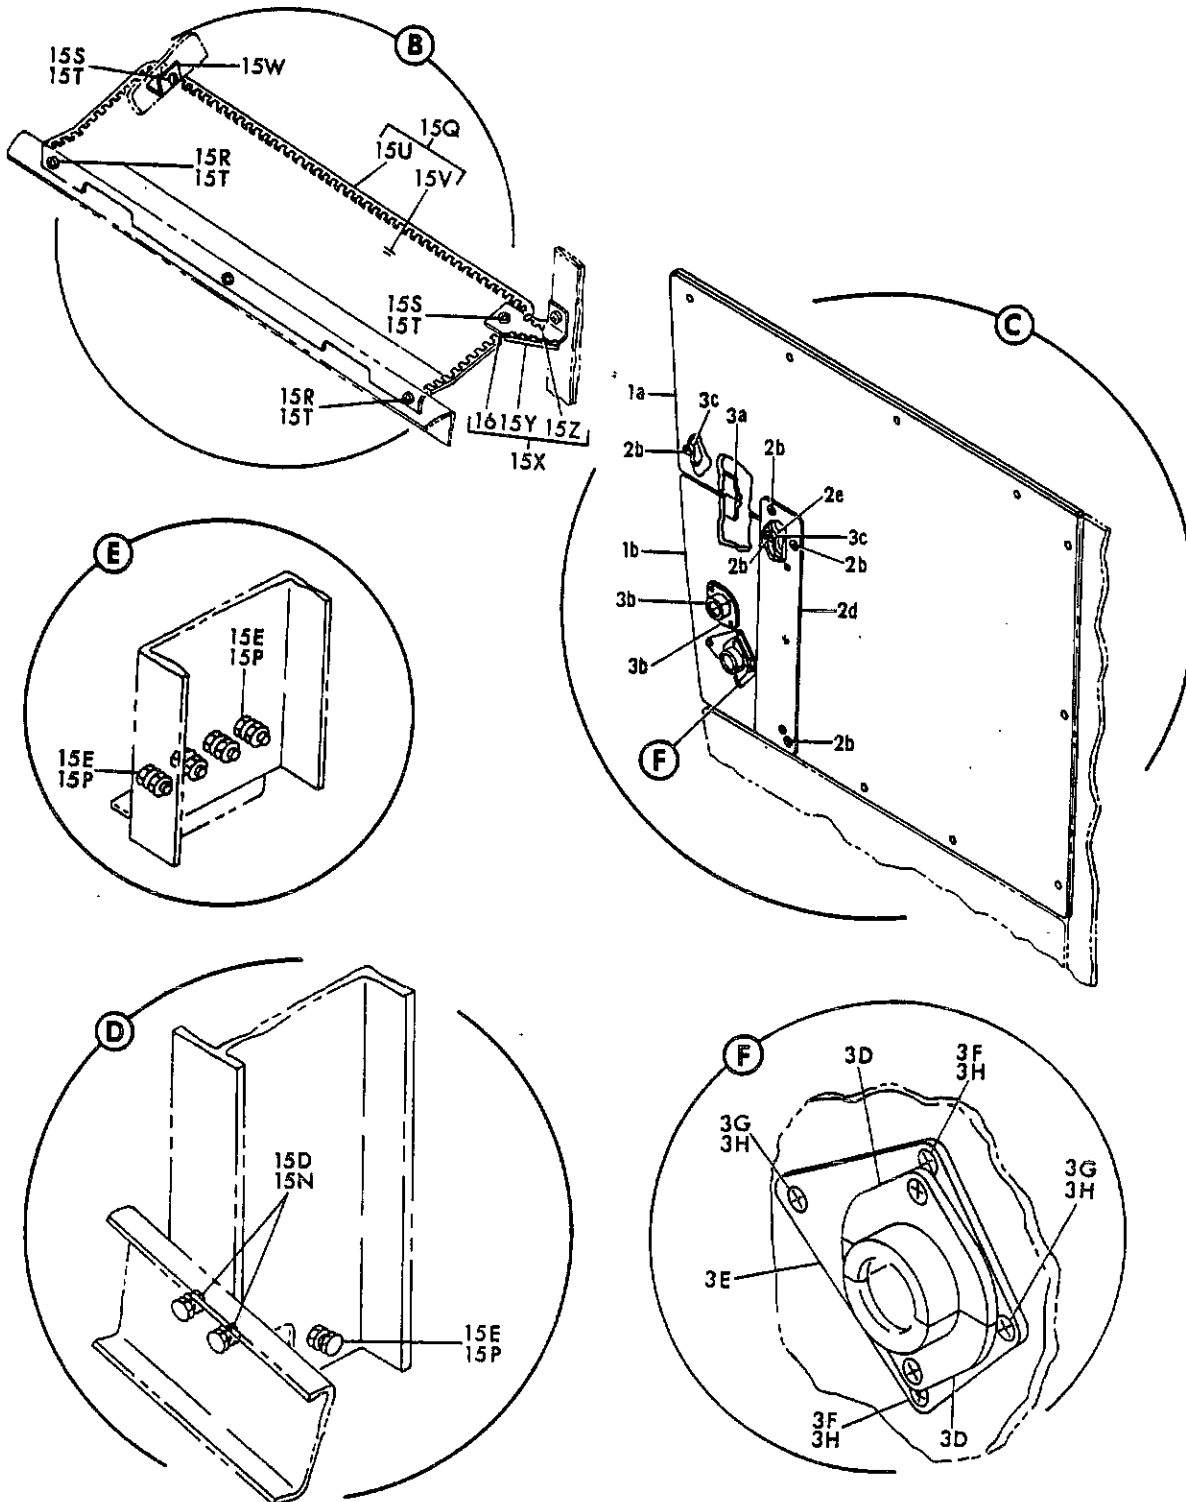


FIGURE 73B. SHIELD INSTL. STATION 400 ELECTRONIC WIRE TERMINAL (SHEET 3)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
73B	64-1051	SHIELD INSTL, STATION 400 ELECTRONIC WIRE TERMINAL (SEE 24-3, FIG. 6A, ITEM 38, 24-3, FIG. 6B, ITEM 27, 24-3, FIG. 6C, ITEM 26, 24-3, FIG. 6D, ITEM 29, 24-3, FIG. 6E, ITEM 36 AND 24-3, FIG. 6F, ITEM 24)	0150	RF
	64-1051	SHIELD INSTL, STATION 400 ELECTRONIC WIRE TERMINAL. . . (VARIABLE DWG; 64-1051-5002) (SEE 24-3, FIG. 6B, ITEM 27 AND 24-3, FIG. 6F, ITEM 24)	5199	RF
1	64-1051-95	. PANEL ASSY, STATION 400 ELECTRONIC WIRE TERMINAL. . . SHIELD UPPER LH		1
2	64-1051-80	. PANEL ASSY, STATION 400 ELECTRONIC WIRE TERMINAL. . . SHIELD UPPER RH		1
2A	NAS514P1032-14	ATTACHING PARTS		26
2C	NAS42DD6-13	. SCREW		26
		. SPACER.		
3	64-1051-94	. . SEAL, RUBBER (EXTRUSION NO. BAC1521-446 X 110 IN. LG) (USED ON 64-1051-95 AND 1-71717-2)		1
3	64-1051-36	. . SEAL, STATION 400 ELECTRONIC WIRE TERMINAL SHIELD . UPPER PANEL RUBBER (EXTRUSION NO. BAC1521-446 X 110 IN. LG) (RH ONLY)		1
4	64-1051-81	. PANEL ASSY, STATION 400 ELECTRONIC WIRE TERMINAL. . . SHIELD CENTER LH		1
5	64-1051-82	. PANEL ASSY, STATION 400 ELECTRONIC WIRE TERMINAL. . . SHIELD CENTER RH		1
	NAS514P1032-14	ATTACHING PARTS		24
	NAS42DD6-13	. SCREW		24
		. SPACER.		
6	64-1051-37	. . SEAL, STATION 400 ELECTRONIC WIRE TERMINAL SHIELD . CENTER PANEL RUBBER (EXTRUSION NO. BAC1521-446 X 92 IN. LG) (LH ONLY)		1
6	64-1051-38	. . SEAL, STATION 400 ELECTRONIC WIRE TERMINAL SHIELD . CENTER PANEL RUBBER (EXTRUSION NO. BAC1521-446 X 92 IN. LG) (RH ONLY)		1
7	64-1051-5	. PANEL ASSY, STATION 400 ELECTRONIC WIRE TERMINAL. . . SHIELD LOWER LH		1
8	64-1051-6	. PANEL ASSY, STATION 400 ELECTRONIC WIRE TERMINAL. . . SHIELD LOWER RH		1
	NAS514P1032-14	ATTACHING PARTS		14
	NAS42DD6-13	. SCREW		14
		. SPACER.		
9	64-1051-39	. . SEAL, STATION 400 ELECTRONIC WIRE TERMINAL SHIELD . LOWER PANEL RUBBER (EXTRUSION NO. BAC1521-446 X 60 IN. LG) (LH ONLY)		1
9	64-1051-40	. . SEAL, STATION 400 ELECTRONIC WIRE TERMINAL SHIELD . LOWER PANEL RUBBER (EXTRUSION NO. BAC1521-446 X 60 IN. LG) (RH ONLY)		1
10	64-1051-7	. PANEL ASSY, STATION 400 ELECTRONIC WIRE TERMINAL. . . SHIELD INBOARD LH		1
11	64-1051-8	. PANEL ASSY, STATION 400 ELECTRONIC WIRE TERMINAL. . . SHIELD INBOARD RH		1
	NAS514P1032-16	ATTACHING PARTS		38
	NAS42DD6-13	. SCREW		38
		. SPACER.		
12	64-1051-41	. . SEAL, STATION 400 ELECTRONIC WIRE TERMINAL SHIELD . INBOARD PANEL RUBBER (EXTRUSION NO. BAC1521-446 X 146 IN. LG) (LH ONLY)		1
12	64-1051-42	. . SEAL, STATION 400 ELECTRONIC WIRE TERMINAL SHIELD . INBOARD PANEL RUBBER (EXTRUSION NO. BAC1521-446 X 146 IN. LG) (RH ONLY)		1
13	64-1051-9	. PANEL ASSY, STATION 400 ELECTRONIC WIRE TERMINAL. . . SHIELD DOORWAY		1
	NAS514P1032-14	ATTACHING PARTS		4
	NAS42DD6-13	. SCREW		4
		. SPACER.		
14	65-19378-1	. SHIELD INSTL, STATION 400 RJ11 ELECTRONIC WIRE (SEE FIG. 136)		1
15	65-19378-2	. SHIELD INSTL, STATION 400 RJ14 ELECTRONIC WIRE (SEE FIG. 142)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
738	64-1051-72	• SHIELD ASSY, STATION 400 ELECTRONIC WIRE TERMINAL . . (LH)		1
	64-1051-73	• SHIELD ASSY, STATION 400 ELECTRONIC WIRE TERMINAL . . (RH)		1
15A	65-6814-35	• . STANCHION INSTL, ELECTRONIC RACK SUPPORT (LH ONLY) (SEE 24-9, FIG. 108)		1
15B	65-6814-36	• . STANCHION INSTL, ELECTRONIC RACK SUPPORT (RH ONLY) (SEE 24-9, FIG. 108)		1
15C	64-1051-74	• SHIELD ASSY, STATION 400 ELECTRONIC WIRE TERMINAL . . ATTACHING PARTS		1
15D	AN3-4A	• BOLT.		4
15E	AN4-5A	• BOLT.		10
15F	AN4-6A	• BOLT.		4
15G	NAS1104-5W	• BOLT.		4
15H	63-1711	• SPACER, ELECTRONIC RACK SUPPORT STANCHION		4
15J	63-1711-1	• SPACER, ELECTRONIC RACK SUPPORT STANCHION		4
15K	BACW10P116S	• WASHER.		8
15M	69-1816-4	• FILLER, STATION 400 TERMINAL SHIELD		4
15N	BACN10BY53W	• NUT		4
15P	BACN10BY54W	• NUT		18
		-----*		
R	65-24117-1	• . COVER INSTL, STATION 400 WATER PROTECTION (LH). . . (DELETED BY SB 2801)	0150	1
R	65-24117-2	• . COVER INSTL, WATER PROTECTION (RH) (DELETED BY SB 2801)	0150	1
R	15Q	• . COVER ASSY, STATION 400 WATER PROTECTION. ATTACHING PARTS	0150	1
R	15R	• . SCREW	0150	3
R	15S	• . SCREW	0150	2
R	15T	• . NUT	0150	5
		-----*		
R	15U	• . GROMMET	0150	1
R	15V	• . COVER, STATION 400 WATER PROTECTION	0150	1
R	15W	• . CLIP, WATER PROTECTION COVER.	0150	1
R	15X	• . CLIP ASSY, STATION 400 WATER PROTECTION COVER . . (LH ONLY)	0150	1
R	15X	• . CLIP ASSY, WATER PROTECTION COVER (RH ONLY) . . . ATTACHING PARTS	0101	1
R		• . SCREW	0150	2
R		• . NUT	0150	2
		-----*		
R	15Y	• . GROMMET	0150	1
R	15Z	• . GROMMET	0150	1
R	16	• . CLIP, STATION 400 WATER PROTECTION COVER (LH. ONLY)	0150	1
R	16	• . CLIP, WATER PROTECTION COVER (RH ONLY).	0101	1
R	16A	• . TERMINALS AND SUPPORT INSTL, RJ12 (SEE FIG. 137). .	0150	1
R	17	• . SHIELD INSTL, STATION 400 FLIGHT INSTRUMENT . . . AUXILIARY TERMINALS (SEE FIG. 143)	0150	1
R	17	• . SHIELD INSTL, STATION 400 FLIGHT INSTRUMENT . . . AUXILIARY TERMINALS (SEE FIG. 143)	5199	1
R	18	• . SUPPORT INSTL, STATION 400 RJ13 FLIGHT INSTRUMENT . ELECTRONIC COMPONENTS (SEE FIG. 139)	0150	1
R	19	• . TERMINAL INSTL, STATION 400 ELECTRONIC WIRES (SEE FIG. 100)	0150	1
R	19	• . TERMINAL INSTL, STATION 400 ELECTRONIC WIRES. . . . (VARIABLE DWG:65-1752-5001) (SEE FIG. 100)	5199	1
R	20	• . GROMMET		32
R	21	• . SUPPORT, STATION 400 TERMINAL SHIELD VERTICAL LH. .		1
R	22	• . SUPPORT, STATION 400 TERMINAL SHIELD VERTICAL RH. .		1
R	23	• . CHANNEL ASSY, STATION 400 TERMINAL SHIELD SUPPORT . (LH)	0150	1
R	23	• . CHANNEL ASSY, STATION 400 TERMINAL SHIELD SUPPORT . (LH)	5199	1
R	24	• . CHANNEL ASSY, STATION 400 TERMINAL SHIELD SUPPORT . (RH)	0150	1
R	24	• . CHANNEL ASSY, STATION 400 TERMINAL SHIELD SUPPORT . (RH)	5199	1
R	25	• . GUARD, (EXTRUSION NO. BAC1521-353 X 5.5 IN. LG) . .		2
R	26	• . GUARD, (EXTRUSION NO. BAC1521-353 X 2.5 IN. LG) . .		2
R	27	• . GROMMET, CATERPILLAR.		2
R	28	• . HINGE ASSY, COMPARTMENT DOOR (LH ONLY). (OPTIONAL TO 66-2598-4)		3
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
73B 28	66-2598-4	. . . HINGE ASSY, COMPARTMENT DOOR (LH ONLY). (OPTIONAL 66-2598)								3
	AN426D6	. . . ATTACHING PARTS RIVET								9
		-----*								
30	66-2598-1	. . . HINGE HALF, (USED ON 66-2598)								1
30	66-2598-5	. . . HINGE HALF, (USED ON 66-2598-4)								1
31	66-2598-2	. . . HINGE HALF, (USED ON 66-2598)								1
31	66-2598-6	. . . HINGE HALF, (USED ON 66-2598-4)								1
31A	AN253-2-275	. . . PIN								1
32	69-1316-5	. . . SPACER, (LH ONLY)								2
33	69-4640-1	. . . CHANNEL, DOOR FRAME (LH ONLY)								1
34	69-4640-2	. . . CHANNEL, DOOR FRAME (RH ONLY)								1
35	69-4640-3	. . . CHANNEL, DOOR FRAME (LH ONLY)								1
36	69-4640-4	. . . CHANNEL, DOOR FRAME (RH ONLY)								1
37	69-1316-6	. . . ANGLE								1
38	69-1316-9	. . . CHANNEL, (LH ONLY)								1
39	69-1316-10	. . . CHANNEL, (RH ONLY)								1
R 39A	AN743-12	. BRACKET							0150	3
		. . . ATTACHING PARTS								
R 39B	NAS603-6P	. SCREW							0150	2
R 39C	NAS603-7P	. SCREW							0150	1
R 39D	AN960C10	. WASHER							0150	2
R 39E	AN960PD10	. WASHER							0150	1
R 39F	BACN10JC3	. NUT							0150	3
		-----*								
R 39G	AN743-12	. BRACKET							0150	2
		. . . ATTACHING PARTS								
R	NAS603-7P	. SCREW							0150	2
R	AN960PD10	. WASHER							0150	2
R	BACN10JC3	. NUT							0150	2
		-----*								
R 40	65-19378-6	. CAPACITOR INSTL, STATION 400 (SEE FIG. 128)							0350	1
R 41	65-77172-1	. TERMINAL AND SUPPORT INSTL, STATION 400 RJ12 (SEE . . . FIG. 145)							5199	1
R 42	65-77172-2	. TERMINAL AND SUPPORT INSTL, STATION 400 RJ13 (SEE . . . FIG. 89J, 89R AND 146)							5199	1
R										

MISSING ITEM NUMBERS ARE NOT APPLICABLE

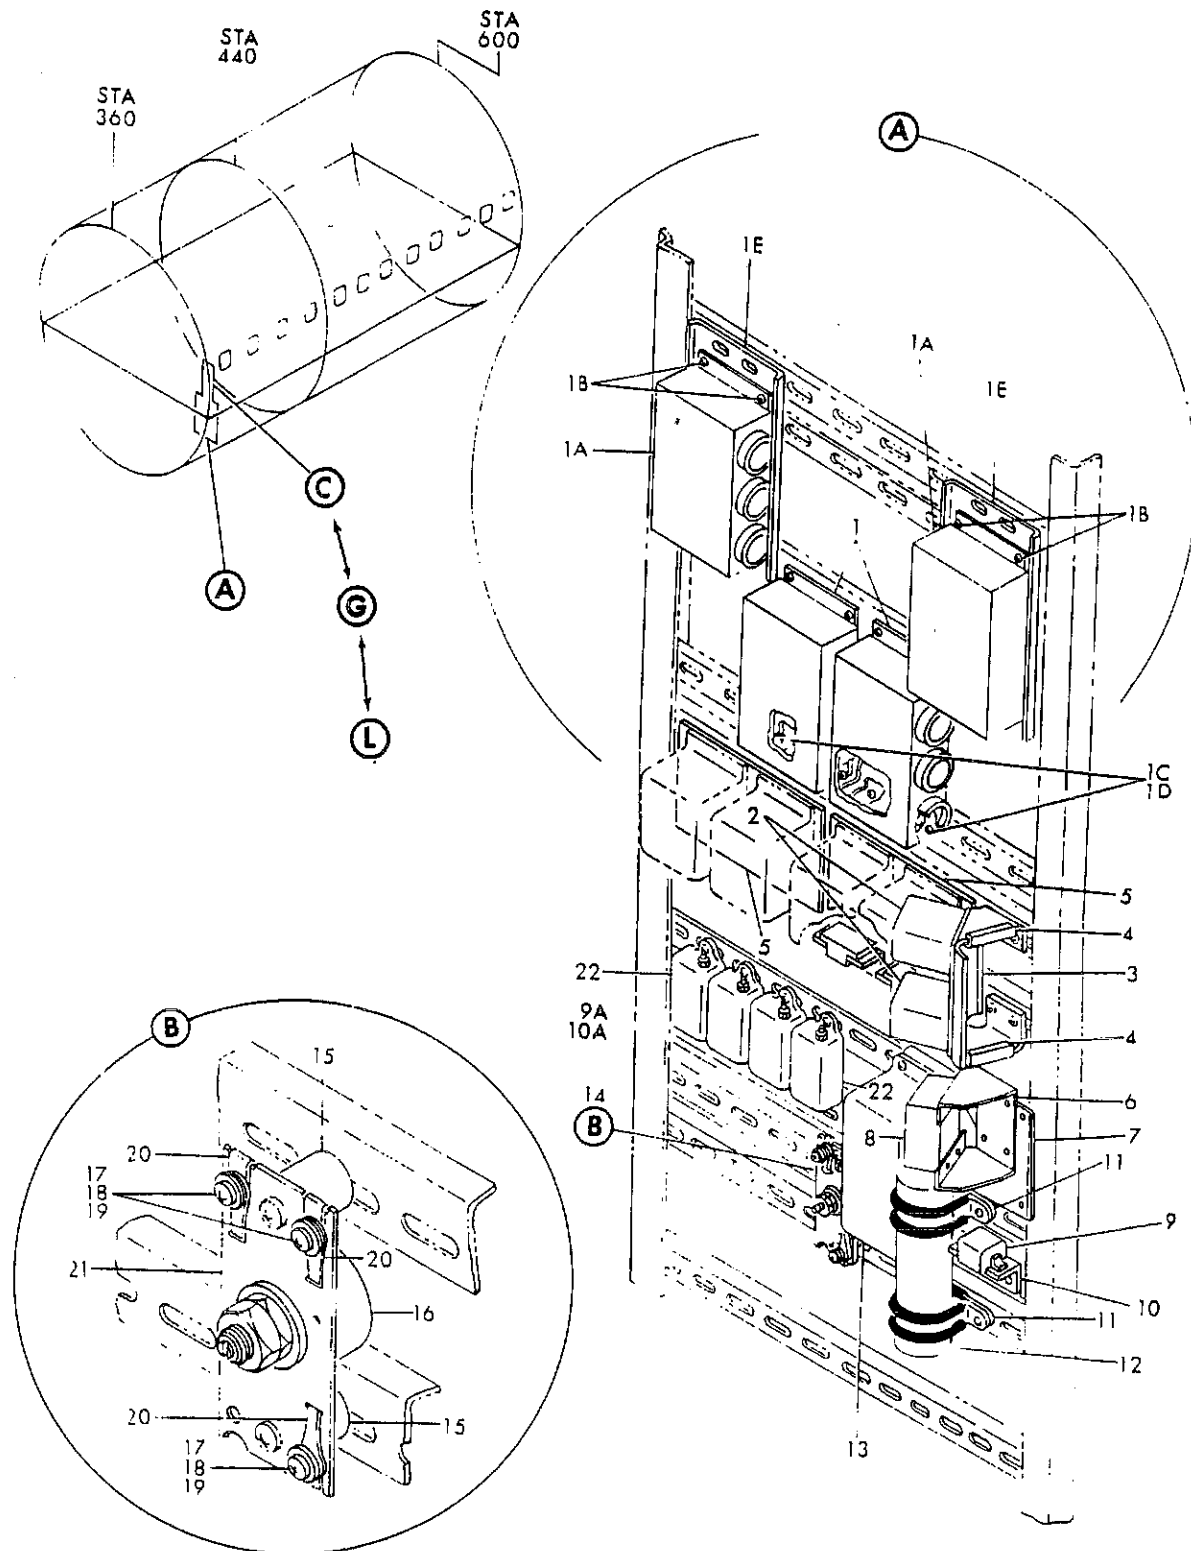


FIGURE 81Q. SHIELD INSTL, RJ12 ELECTRONIC TERMINAL (SHEET 1)

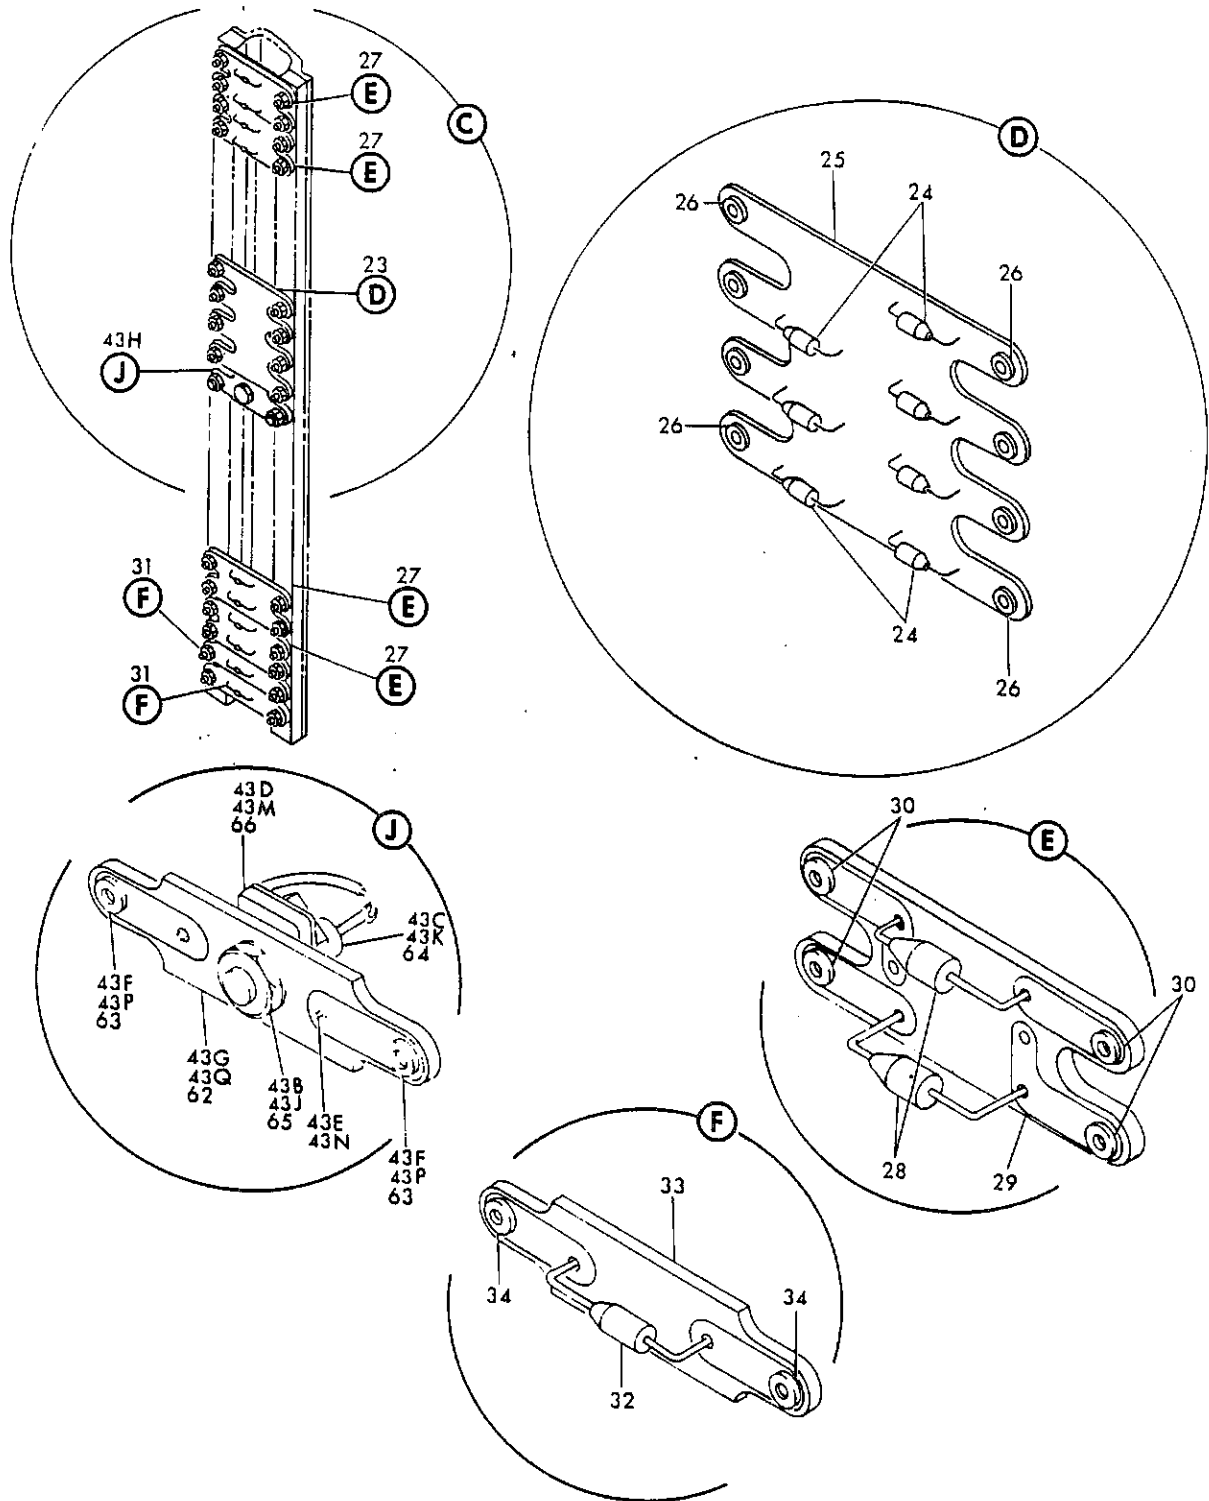


FIGURE 810. SHIELD INSTL, RJ 12 ELECTRONIC TERMINAL (SHEET 2)

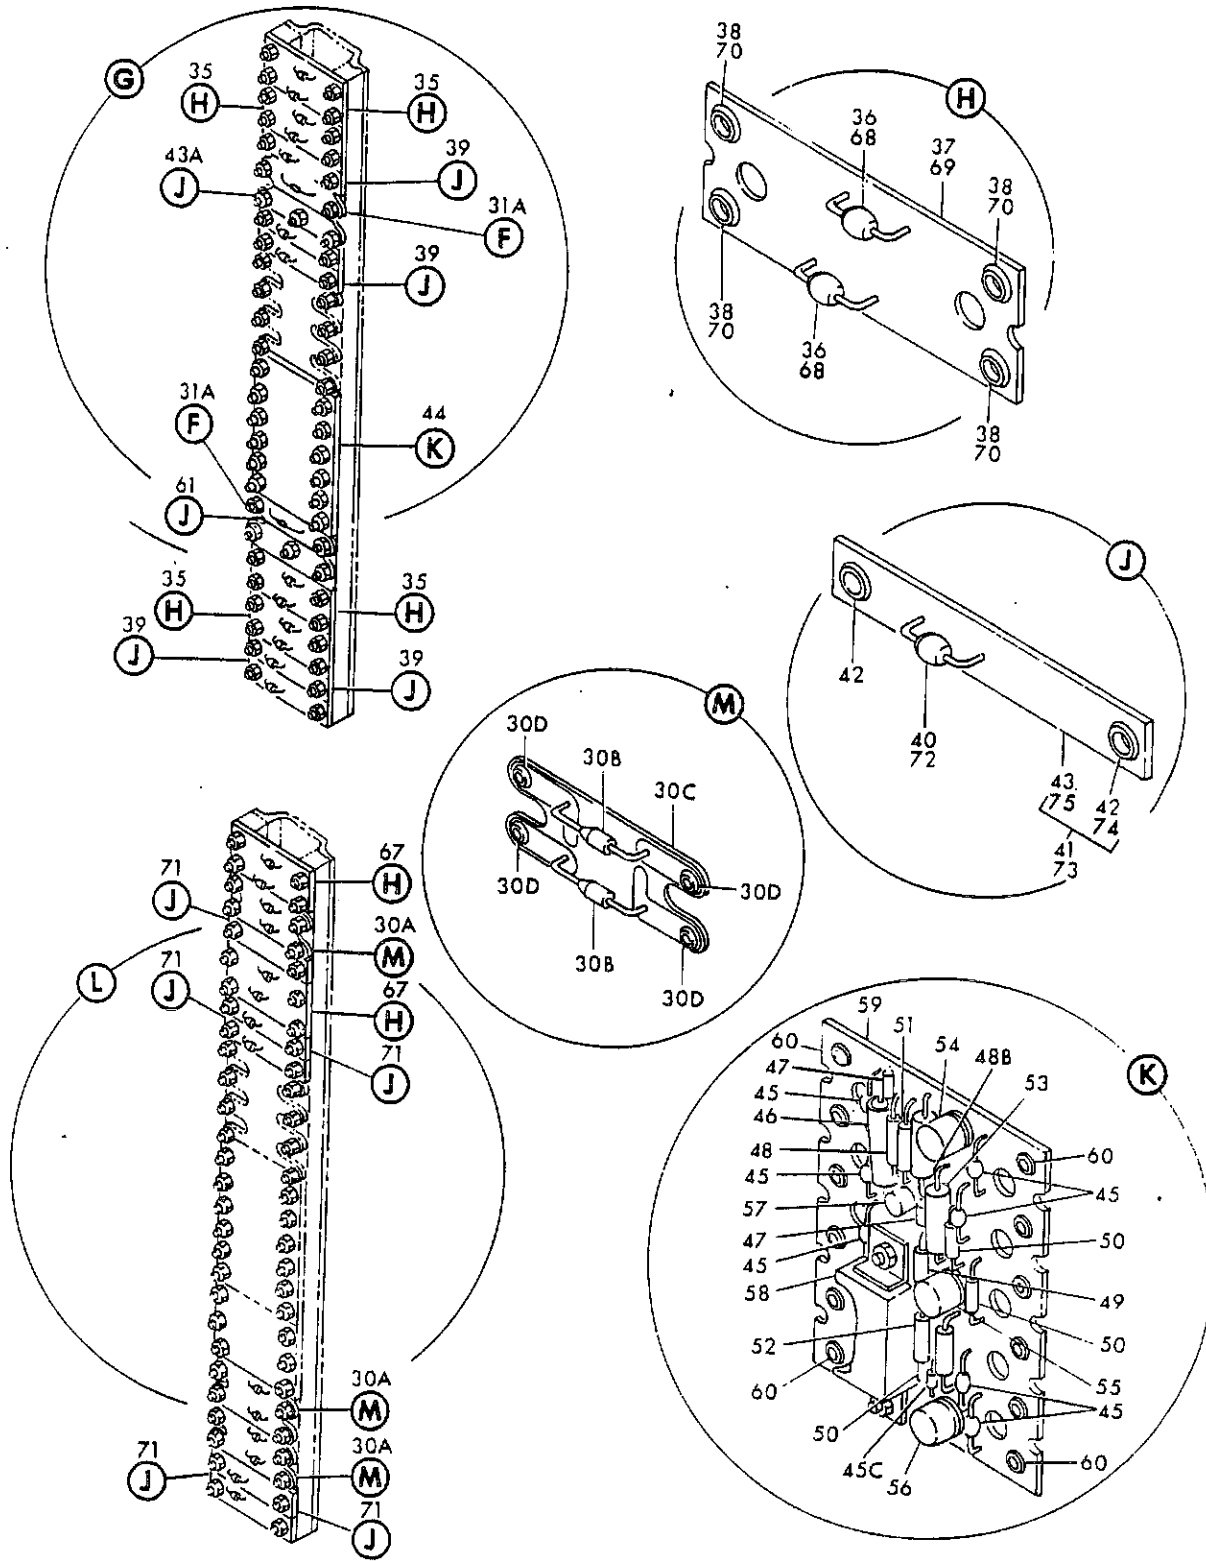


FIGURE 810. SHIELD INSTL. RJ 12 ELECTRONIC TERMINAL (SHEET 3)



PARTS CATALOG


FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
81Q	65-19418-68	SHIELD INSTL, RJ12 ELECTRONIC TERMINAL (SEE 24-3, FIG. 6F, ITEM 26)	5199	RF
1	172934-001	. RELAY, (V81840)	5199	2
	BACS12CB08-6	. ATTACHING PARTS	5199	8
	BACN10FX83	. SCREW	5199	8
		. NUT	5199	8
1A	172934-001	. RELAY, (V81840)	5199	2
1B	BACS12CB08-6	. ATTACHING PARTS	5199	4
1C	BACS12CB08-8	. SCREW	5199	4
1D	BACN10FX83	. SCREW	5199	4
		. NUT	5199	4
1E	69-58624-6	. BRACKET, RELAY MOUNTING	5199	2
	BACS12CB08-6	. ATTACHING PARTS	5199	2
	BACN10FX83	. SCREW	5199	2
		. NUT	5199	2
2	9220-3591	. RELAY, (V35344)	5199	2
3	66-12430-1	. BRACKET, RELAY MOUNTING	5199	1
	BACS12CB08-6	. ATTACHING PARTS	5199	4
	BACN10FX83	. SCREW	5199	4
		. NUT	5199	4
4	BACG20ZA150	. GROMMET	5199	2
6	66-12666-1	. BRACKET, RELAY MOUNTING	5199	1
	BACS12CB08-6	. ATTACHING PARTS	5199	2
	BACN10FX83	. SCREW	5199	2
		. NUT	5199	2
7	65-58624-5	. PLATE, RELAY MOUNTING	5199	1
	BACS12CB08-11	. ATTACHING PARTS	5199	4
	NAS43DD3-20	. SCREW	5199	4
	BACN10FX83	. SPACER	5199	4
		. NUT	5199	4
8	9226-3592	. RELAY, (V35344)	5199	1
	BACS12CB08-6	. ATTACHING PARTS	5199	4
	BACN10FX83	. SCREW	5199	4
		. NUT	5199	4
9A	BACR13CD2	. RELAY	5199	2
10A	69-55337-2	. BRACKET, RELAY MOUNTING	5199	2
11	MS21919WDG29	. CLAMP	5199	2
	BACS12CB08-6	. ATTACHING PARTS	5199	1
	BACN10FX83	. SCREW	5199	1
		. NUT	5199	1
12	HLVB2050D45567	. CAPACITOR, (V56289)	5199	1
13	64566	. FILTER, (V56289)	5199	1
	BACS12CB08-6	. ATTACHING PARTS	5199	4
	BACN10FX83	. SCREW	5199	4
		. NUT	5199	4
14	65-18739-9	. PLATE ASSY, POTENTIOMETER	5199	1
	BACS12CB08-16	. ATTACHING PARTS	5199	2
	BACN10FX83	. SCREW	5199	2
		. NUT	5199	2
15	65-18738-5	. SPACER	5199	2
16	43C2-5000	. POTENTIOMETER, (V12697)	5199	1
17	NAS601-7	. SCREW	5199	3
18	AN961-6	. WASHER	5199	3
19	BACN10FX61	. NUT	5199	3
20	65-18735-6	. TERMINAL, ELECTRICAL (ALTERED FROM BACT12R1)	5199	3
		(OPTIONALS T163 (V92219) 355 (V79963))	5199	3
20	T163	. TERMINAL, ELECTRICAL (V92219)	5199	3
		(OPTIONAL TO 65-18735-6 (ALTERED FROM BACT12R1))	5199	3
20	355	. TERMINAL, ELECTRICAL (V79963)	5199	3
		(OPTIONAL TO 65-18735-6 (ALTERED FROM BACT12R1))	5199	3

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
81Q	MS20470B2	.	ATTACHING PARTS		
		.	RIVET	5199	3
		.	(OPTIONAL MS20470A2)		
	MS20470A2	.	RIVET	5199	3
		.	(OPTIONAL TO MS20470B2)		
		.	-----*		
21	65-18739-B	.	PLATE	5199	1
22	18005A	.	FILTER, (V56289)	5199	4
		.	ATTACHING PARTS		
	BACSI2C808-6	.	SCREW	5199	2
	BACN10FX83	.	NUT	5199	2
		.	-----*		
23	65-38292-111	.	PLATE ASSY, DIODE RESISTOR CIRCUIT.	5199	1
24	1N5061	.	DIODE, (V81349)	5199	7
25	65-38292-112	.	CIRCUIT BOARD, BLANK.	5199	1
26	CE123	.	EYELET, (V04264)	5199	8
31A	65-38292-21	.	PLATE ASSY, DIODE RESISTOR CIRCUIT.	5199	2
32	IN2484	.	RECTIFIER, (V80131)	5199	1
33	65-38292-8	.	CIRCUIT BOARD, BLANK.	5199	1
34	CE123	.	EYELET, (V04264)	5199	2
35	65-38292-117	.	PLATE ASSY, DIODE RESISTOR CIRCUIT.	5199	4
36	1N5061	.	DIODE, (V81349)	5199	2
37	65-38292-102	.	BOARD ASSY, ETCHED.	5199	1
38	CE123	.	EYELET, (V04264)	5199	4
39	65-38292-113	.	PLATE ASSY, DIODE RESISTOR CIRCUIT.	5199	5
40	1N5061	.	DIODE, (V81349)	5199	1
41	65-38292-114	.	BOARD ASSY, ETCHED.	5199	1
42	CE123	.	EYELET, (V04264)	5199	2
43	65-38292-118	.	BOARD	5199	1
43A	65-38292-37	.	PLATE ASSY, DIODE RESISTOR CIRCUIT.	5199	1
43B	MS25082-4	.	NUT	5199	1
43C	1N3314	.	DIODE, (V81349)	5199	1
43D	65-38292-30	.	PLATE	5199	1
43E	BACT12AB1	.	LUG	5199	1
43F	CE123	.	EYELET, (V04264)	5199	2
43G	65-38292-8	.	BOARD, BLANK.	5199	1
61	65-38292-50	.	DIODE ASSY.	5199	1
62	65-38292-8	.	BLANK, CIRCUIT BOARD.	5199	1
63	CE123	.	EYELET, (V04264)	5199	2
64	1N3313B	.	DIODE, (V81349)	5199	1
65	MS25082-4	.	NUT	5199	1
66	65-38292-30	.	PLATE, HEAT SINK.	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING
707
PARTS CATALOG (MAINTENANCE)

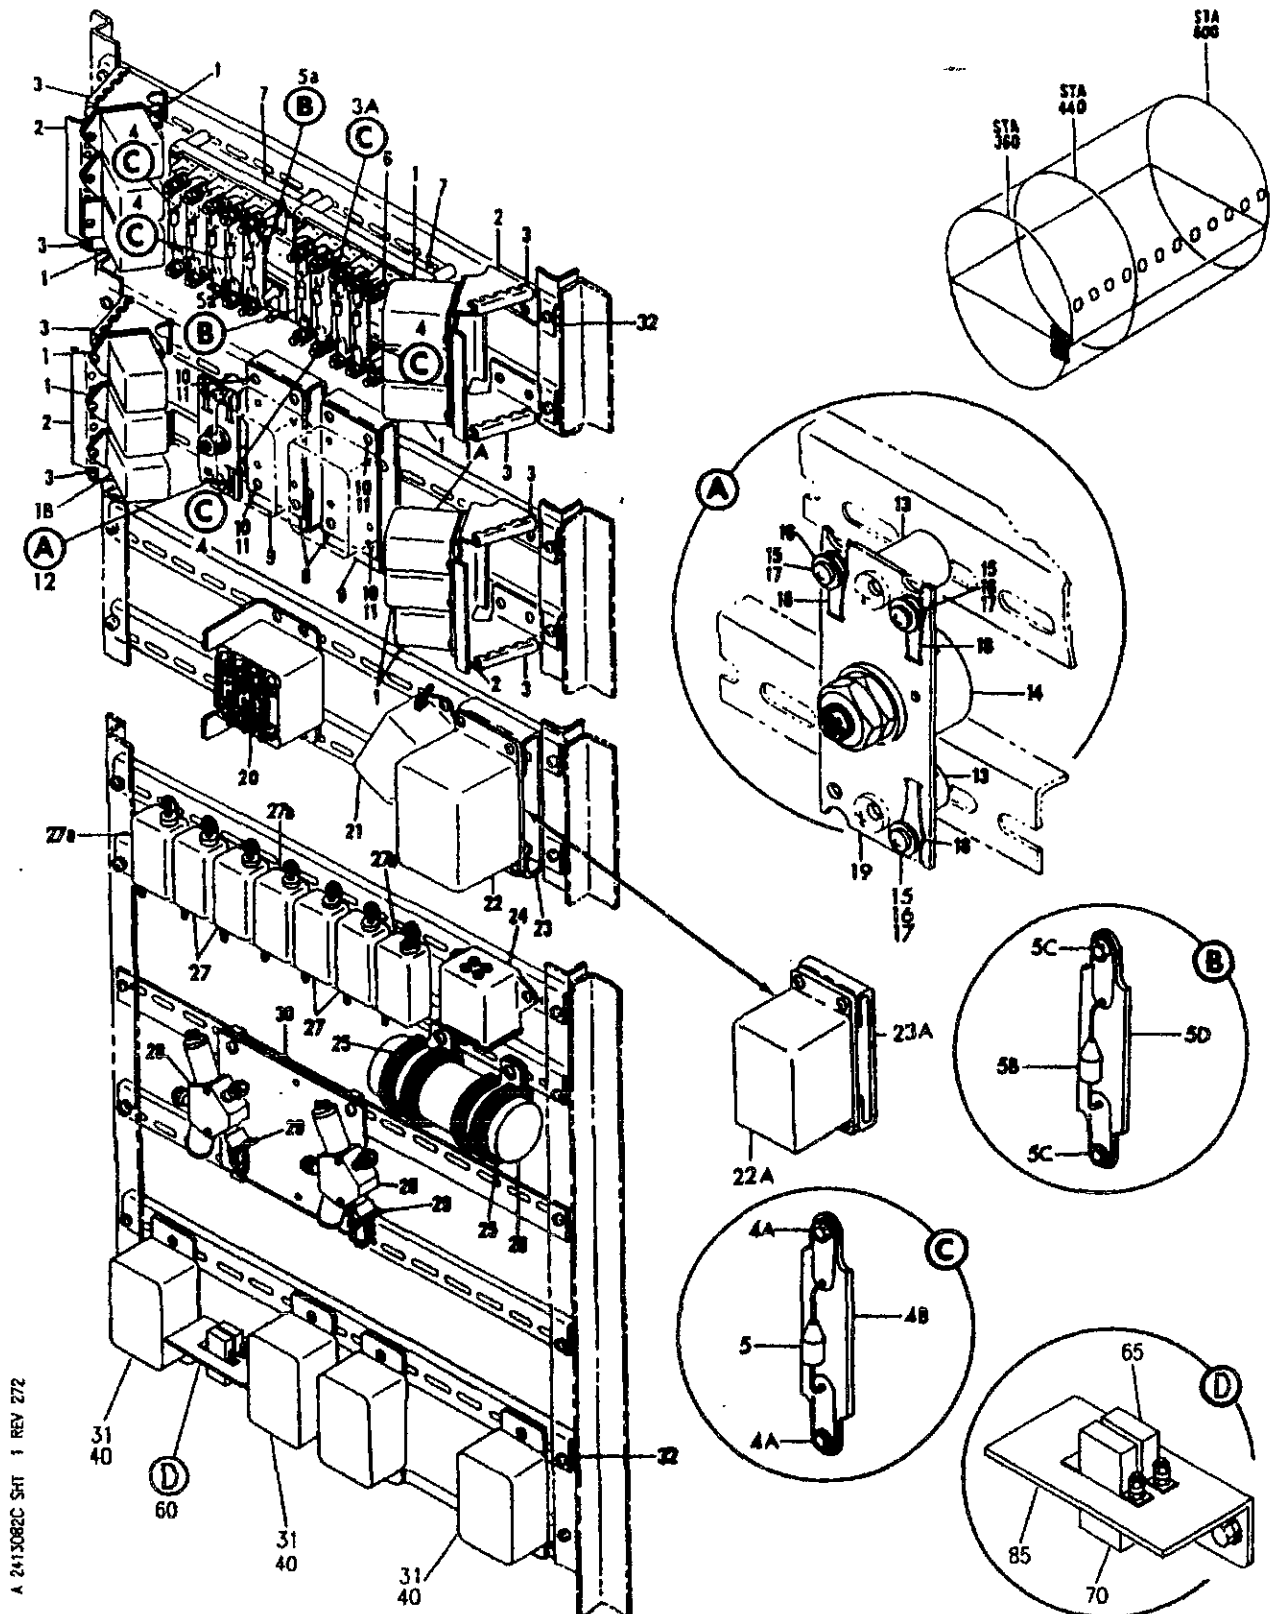

A 2413082C SHT 1 REV 272

FIGURE 82C. COMPONENTS INSTL. RJ 12 ELECTRONIC TERMINAL

DETAILED PARTS LIST
24-13-82C
PAGE 0

24-13-82C

NOV 21/01



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	82C	65-19418-17	COMPONENTS INSTL, RJ12 ELECTRONIC TERMINAL (SEE 24-3, FIG. 60, ITEM 31)	0150 RF
R	1	9220-3591	RELAY, (V35344)	0150 10
R	1A	9220-3591	RELAY, (V35344) (DELETED BY TWA M.O. 97007)	0150 1
R	2	66-12430-1	BRACKET ASSY, RJ12 RELAY MOUNTING	0150 4
R		ATTACHING PARTS		
R		SCREW	0150	16
R		NUT	0150	16
R	3	BACG202A150	GROMMET	0150 6
R	3A	65-38292-6	DIODE ASSY, RESISTOR CIRCUIT PLATE (DELETED BY TWA M.O. 97007)	0150 1
R	4	65-38292-6	DIODE ASSY, RESISTOR CIRCUIT PLATE	0150 7
R	4A	CE123	EYELET, (V04264)	0150 2
R	4B	65-38292-8	BOARD BLANK	0150 1
R	5	IN648	DIODE, (V99407)	0150 1
R	5A	65-38292-21	DIODE ASSY, RESISTOR CIRCUIT PLATE	0150 2
R	5B	IN2484	RECTIFIER, SILICON (V80131)	0150 1
R	5C	CE123	EYELET, (V04264)	0150 2
R	5D	65-38292-8	BOARD BLANK	0150 1
R	6	MS25226-2-2	BUS	0150 1
R	7	69-30607-3	CHANNEL ASSY, DIODE MOUNTING	0150 2
R		ATTACHING PARTS		
R		SCREW	0150	8
R		SPACER	0150	8
R		NUT	0150	8
R	8	66-12428-1	PLATE, ELECTRONIC SHIELD RJ2 FILTER MOUNTING	0150 2
R	9	66-12429-2	BRACKET, ELECTRONIC SHIELD RJ2 FILTER SUPPORT	0150 2
R		ATTACHING PARTS		
R		SCREW	0150	16
R		NUT	0150	16
R	10	BACS12CB06-5	SCREW	0150 8
R	11	MS35337-3	WASHER	0150 8
R	12	65-18739-10	PLATE ASSY, DIODE AND POTENTIOMETER MOUNTING	0150 1
R		ATTACHING PARTS		
R		SCREW	0150	4
R		NUT	0150	4
R	13	65-18739-5	SPACER, DIODE AND POTENTIOMETER MOUNTING PLATE	0150 2
R	14	43C2-50K	POTENTIOMETER, (V12697)	0150 1
R	15	NAS601-7	SCREW	0150 3
R	16	AN961-6	WASHER	0150 3
R	17	BACN10FX61	NUT	0150 3
R	18	65-18739-6	TERMINAL, DIODE AND POTENTIOMETER MOUNTING PLATE ELECTRICAL (ALTERED FROM BACT12R1 (OPTIONALS T163 (V92219) 355 (V79963)))	0150 3
R		ATTACHING PARTS		
R		RIVET	0150	3
R		(OPTIONAL MS20470A2)		
R		RIVET	0150	3
R		(OPTIONAL TO MS20470B2)		
R	19	65-18739-8	PLATE, DIODE AND POTENTIOMETER MOUNTING	0150 1
R	21	10S1034A	FILTER, (V56289)	0150 1
R		ATTACHING PARTS		
R		SCREW	0150	2
R		NUT	0150	2
R	22	64566	FILTER, (V56289)	0150 1
R		ATTACHING PARTS		
R		SCREW	0150	2
R		SCREW	0150	2
R		SPACER	0150	2
R		NUT	0150	4
R	23	66-12429-2	BRACKET, ELECTRONIC SHIELD RJ2 FILTER SUPPORT	0150 1
R		ATTACHING PARTS		
R		SCREW	0150	2
R		NUT	0150	2
R	24	A410-361471-00	RELAY, (V73949)	0150 1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
82C	BACS12CB08-6 BACN10FX82W	.	ATTACHING PARTS	0150	2
		.	SCREW	0150	2
		.	NUT		
25	MS21919DG30	.	CLAMP	0150	2
	BACS12CB08-6 BACN10FX82W	.	ATTACHING PARTS	0150	2
		.	SCREW	0150	2
		.	NUT	0150	2
26	HLVB2050	.	CAPACITOR, (V56289) (OPTIONAL AND FOR REPLACEMENT ORDER HLVB2050D45567 (V56289))	0150	1
26	HLVB2050D45567	.	CAPACITOR, (V56289) (OPTIONAL TO AND REPLACEMENT FOR HLVB2050 (V56289))	0150	1
27	1B005A	.	FILTER, (V56289).	0150	4
	BACS12CB08-6 BACN10FX82W	.	ATTACHING PARTS	0150	14
		.	SCREW	0150	14
		.	NUT		
28	11350	.	SWITCH, COAXIAL SPDT (V82152)	0150	2
	BACS12CB04-18 NAS679A04W	.	ATTACHING PARTS	0150	4
		.	SCREW	0150	4
		.	NUT		
29	13700	.	CAP, SHORTING (V74868).	0150	2
	BACS12CB06-5 NAS679A06W	.	ATTACHING PARTS	0150	2
		.	SCREW	0150	2
		.	NUT		
30	66-18601-1	.	PLATE, RJ12 RELAY SUPPORT	0150	1
	BACS12CB08-6 BACN10FX82W	.	ATTACHING PARTS	0150	4
		.	SCREW	0150	4
		.	NUT		
32	69-13223-1	.	ANGLE, SUPPORT.	0150	11
	BACS12CB3-6 BACN10FX1W	.	ATTACHING PARTS	0150	22
		.	SCREW	0150	22
		.	NUT		
R	35	.	RELAY, (V35344) (DELETED BY RAF MOD 7211.019-4)	0150	2
R	40	.	RELAY, (V35344)	0150	4
R		.	ATTACHING PARTS		
R		.	SCREW	0150	12
R		.	NUT	0150	12
R		.	RELAY INSTL, (VZ0031) (ADDED BY RAF MOD 7211.019-4)	0150	RF
R		.	(SEE 24-03, FIG. 60)		
R	60	.	COMPONENT ASSY, (VZ0031) (MAKE FROM 65-19418-17	0150	1
R		.	ELECTRONIC TERMINAL RJ12)		
R	65	.	RELAY, (V35344)	0150	2
R	70	.	SOCKET, (V35344).	0150	2
R		.	ATTACHING PARTS		
R		.	SCREW	0150	4
R		.	NUT	0150	4
R	85	.	ANGLE, (VZ0031)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

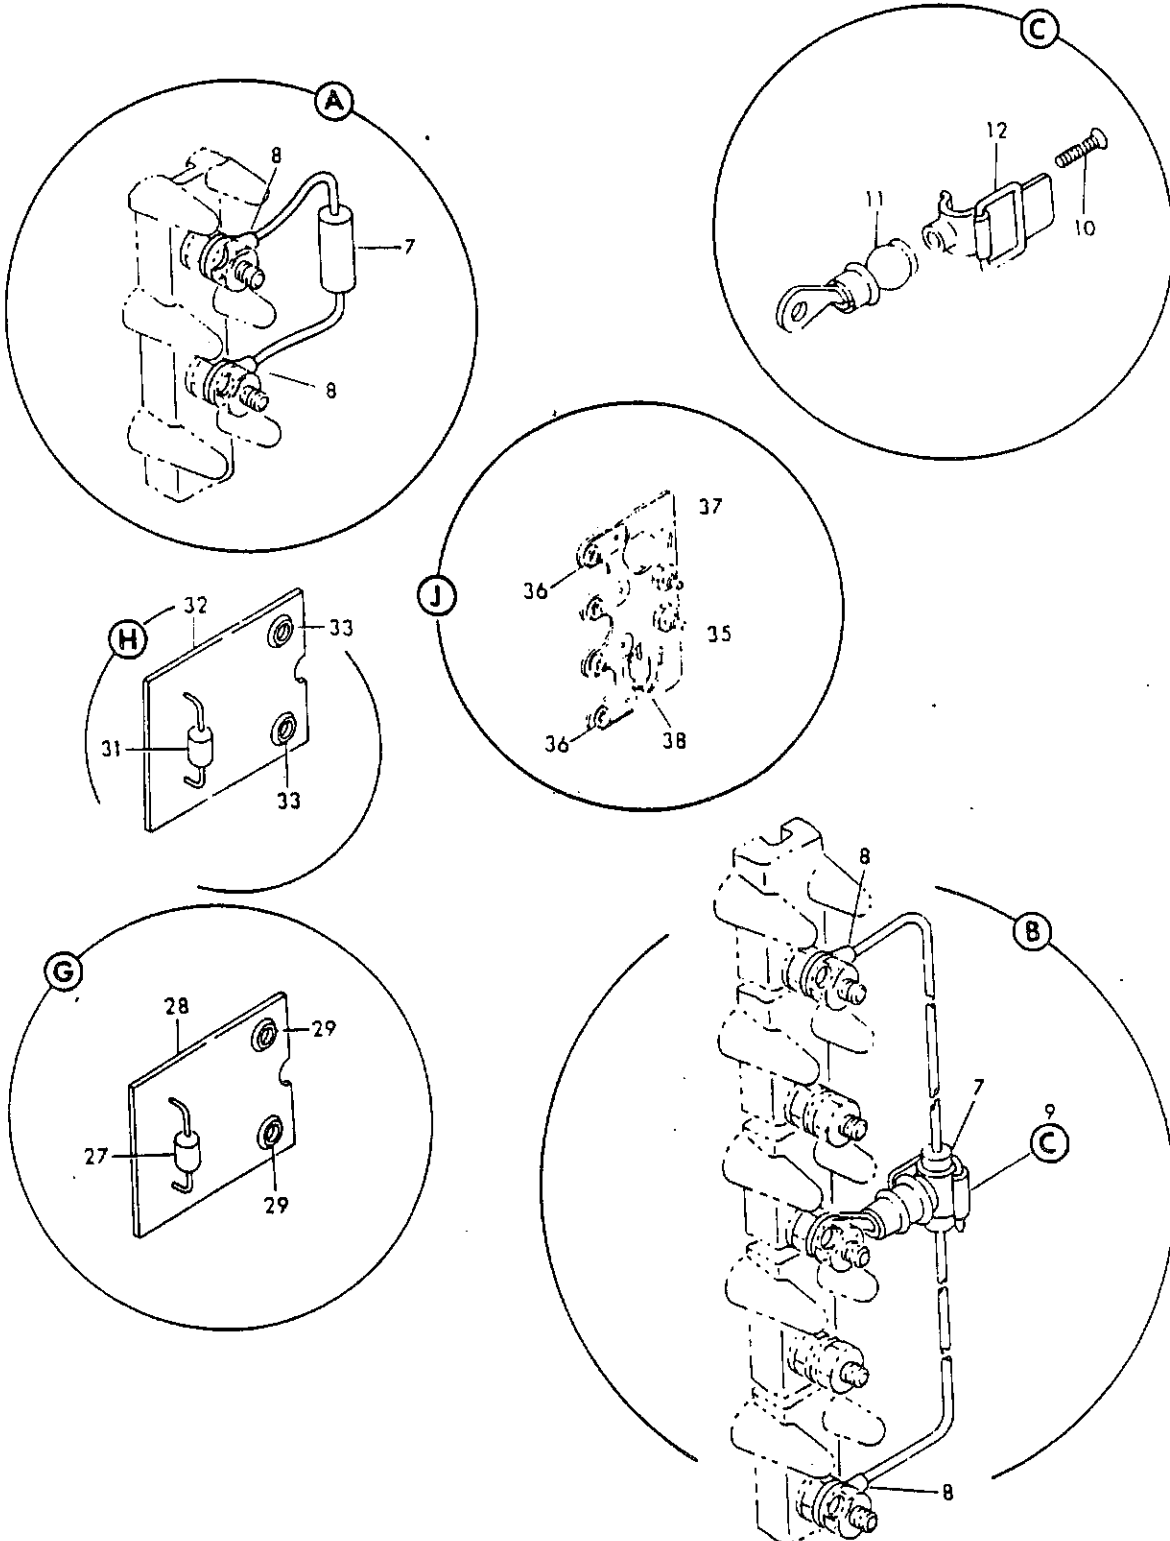


FIGURE 83F. RESISTOR INSTL, RADIO TERMINAL SHIELD STATION 400 RJ13 (SHEET 2)

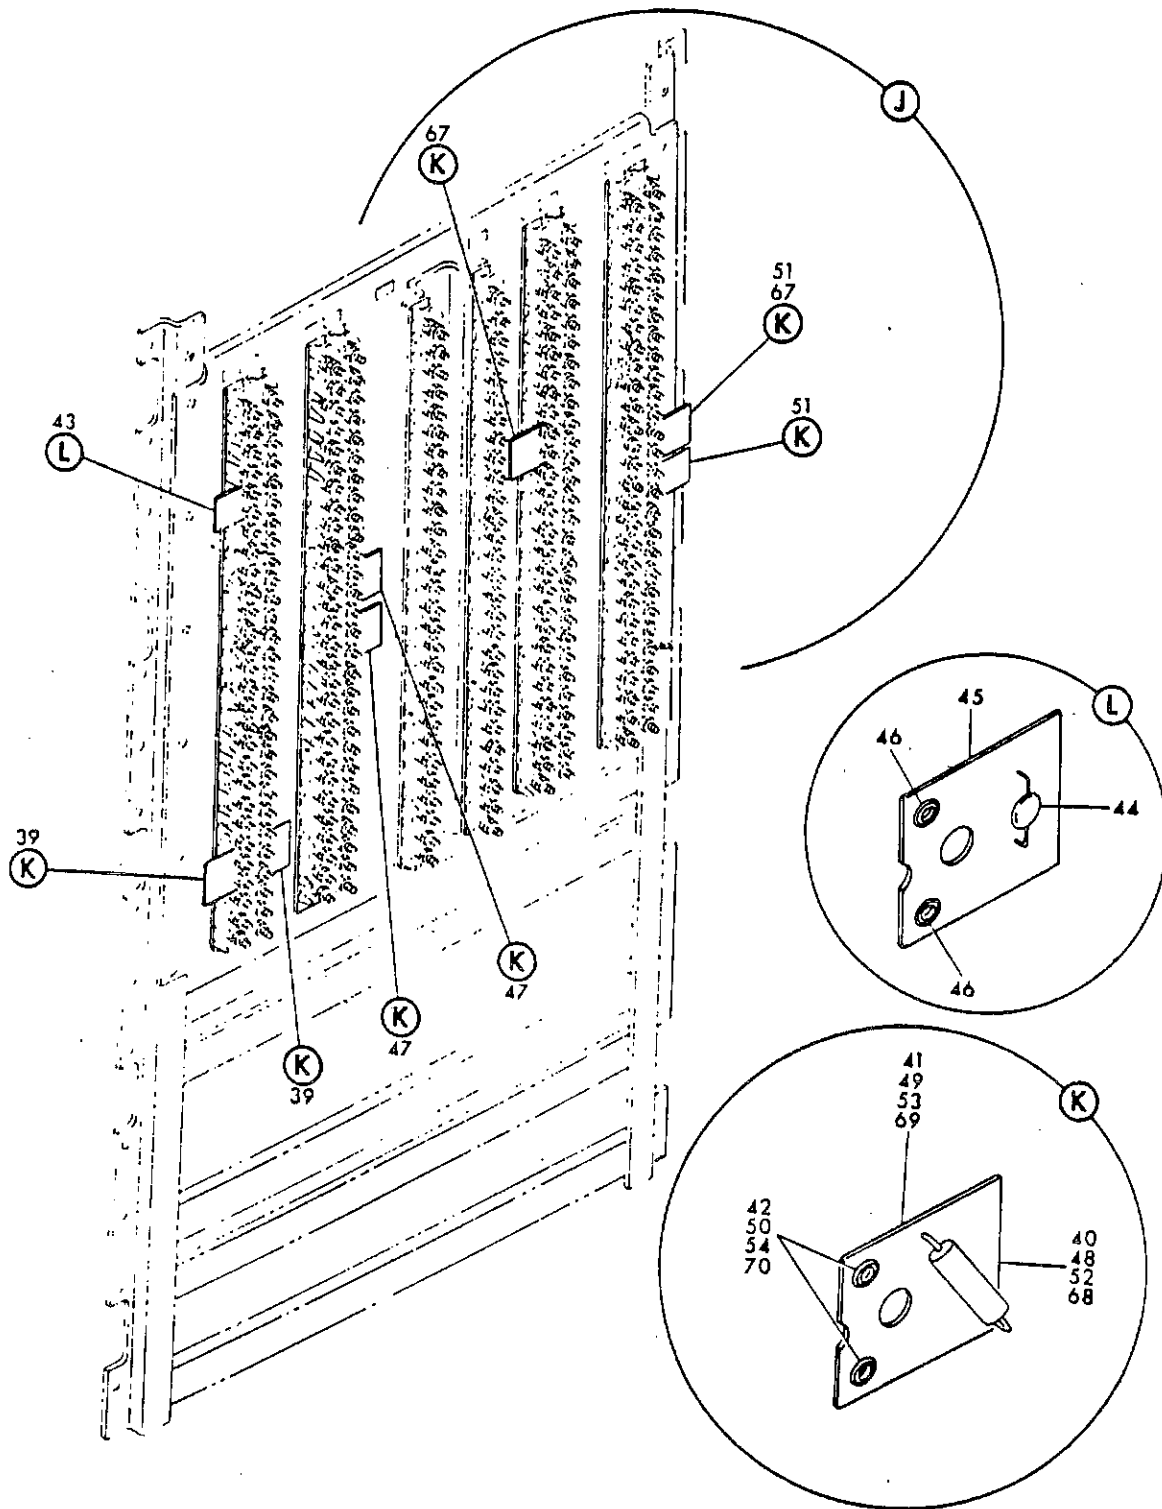


FIGURE 83F. RESISTOR INSTL, RADIO TERMINAL SHIELD STATION 400RJ13 (SHEET 3)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
83F	65-22914-64	RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD (FOR ADDITIONAL DETAILS SEE FIG. 323A, 324A, 325A AND 326A) (SEE 24-3, FIG. 6F, ITEM 31)							5199	RF
14	65-38292-152	. CIRCUIT ASSY, PRINTED							5199	2
15	RCR32G392JM	. . RESISTOR, (V29762).							5199	1
16	65-38292-106	. . BOARD ASSY, ETCHED.							5199	1
17	CE123	. . . EYELET, (V04264).							5199	2
200		TERMINAL AND SUPPORT INSTL, STATION 400 RJ13 (FOR REF . SEE FIG. 146)							5199	RF
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

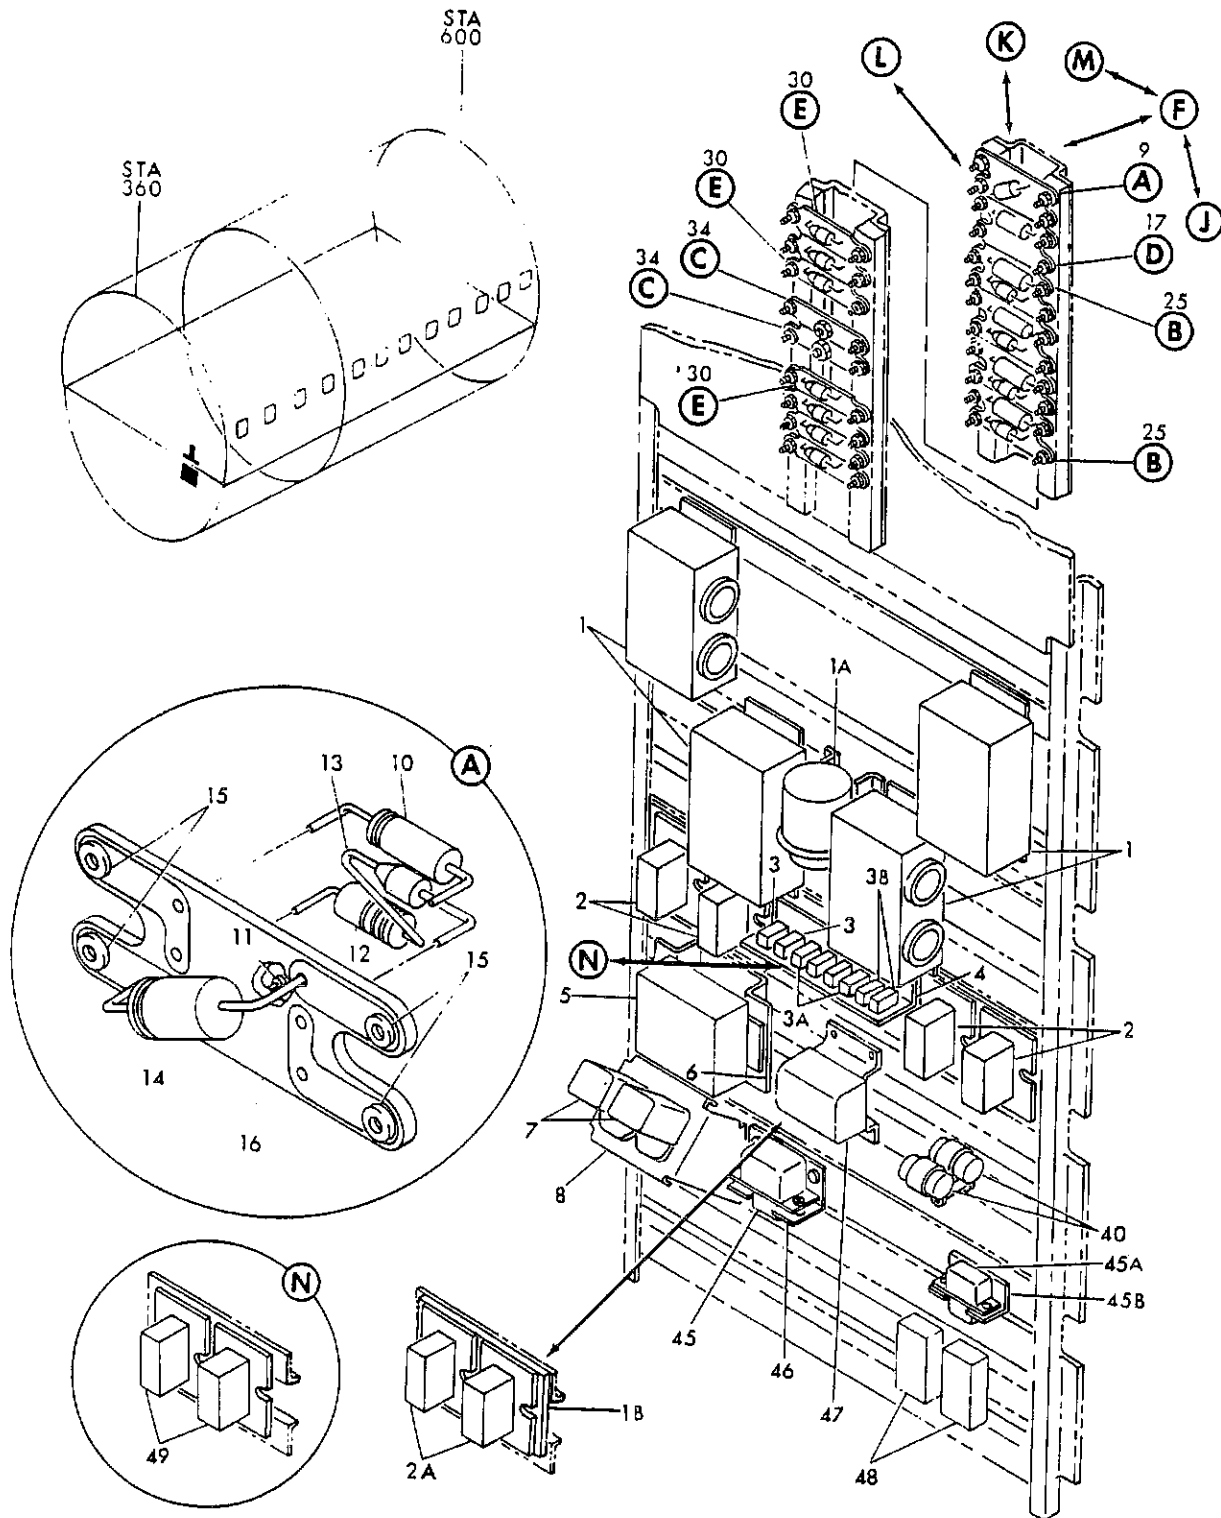


FIGURE 86F. COMPONENTS INSTL. STATION 400 RJ13 FLIGHT INSTRUMENT (SHEET 1)

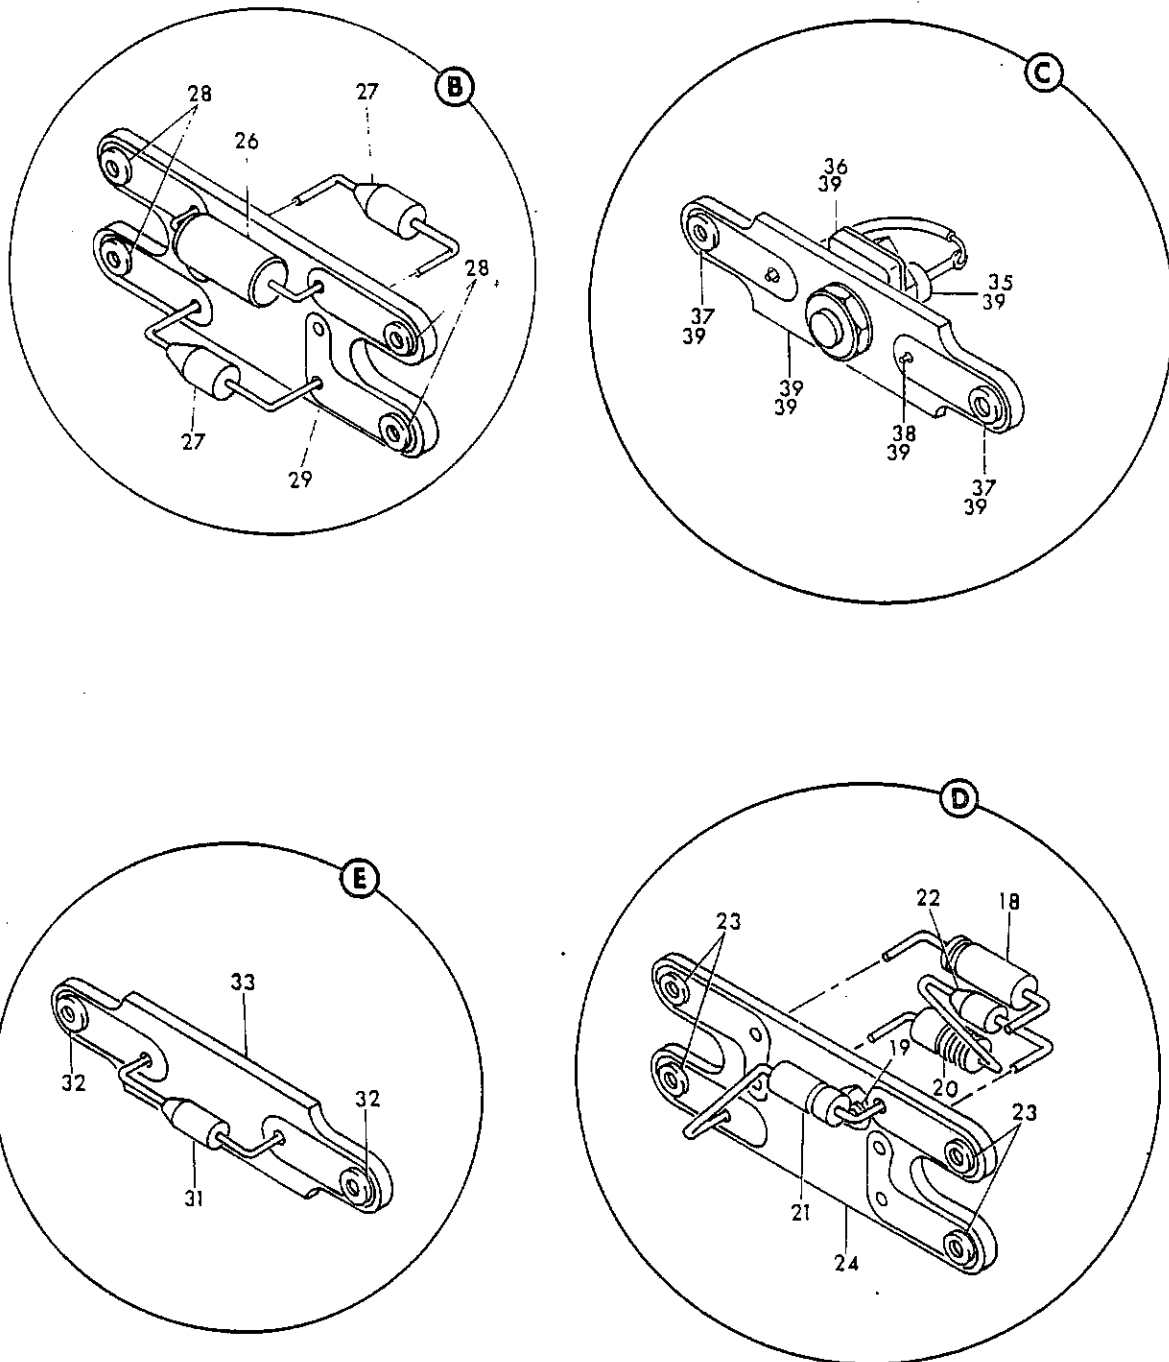


FIGURE 86F. COMPONENTS INSTL. STATION 400 RJ13 FLIGHT INSTRUMENT (SHEET 2)

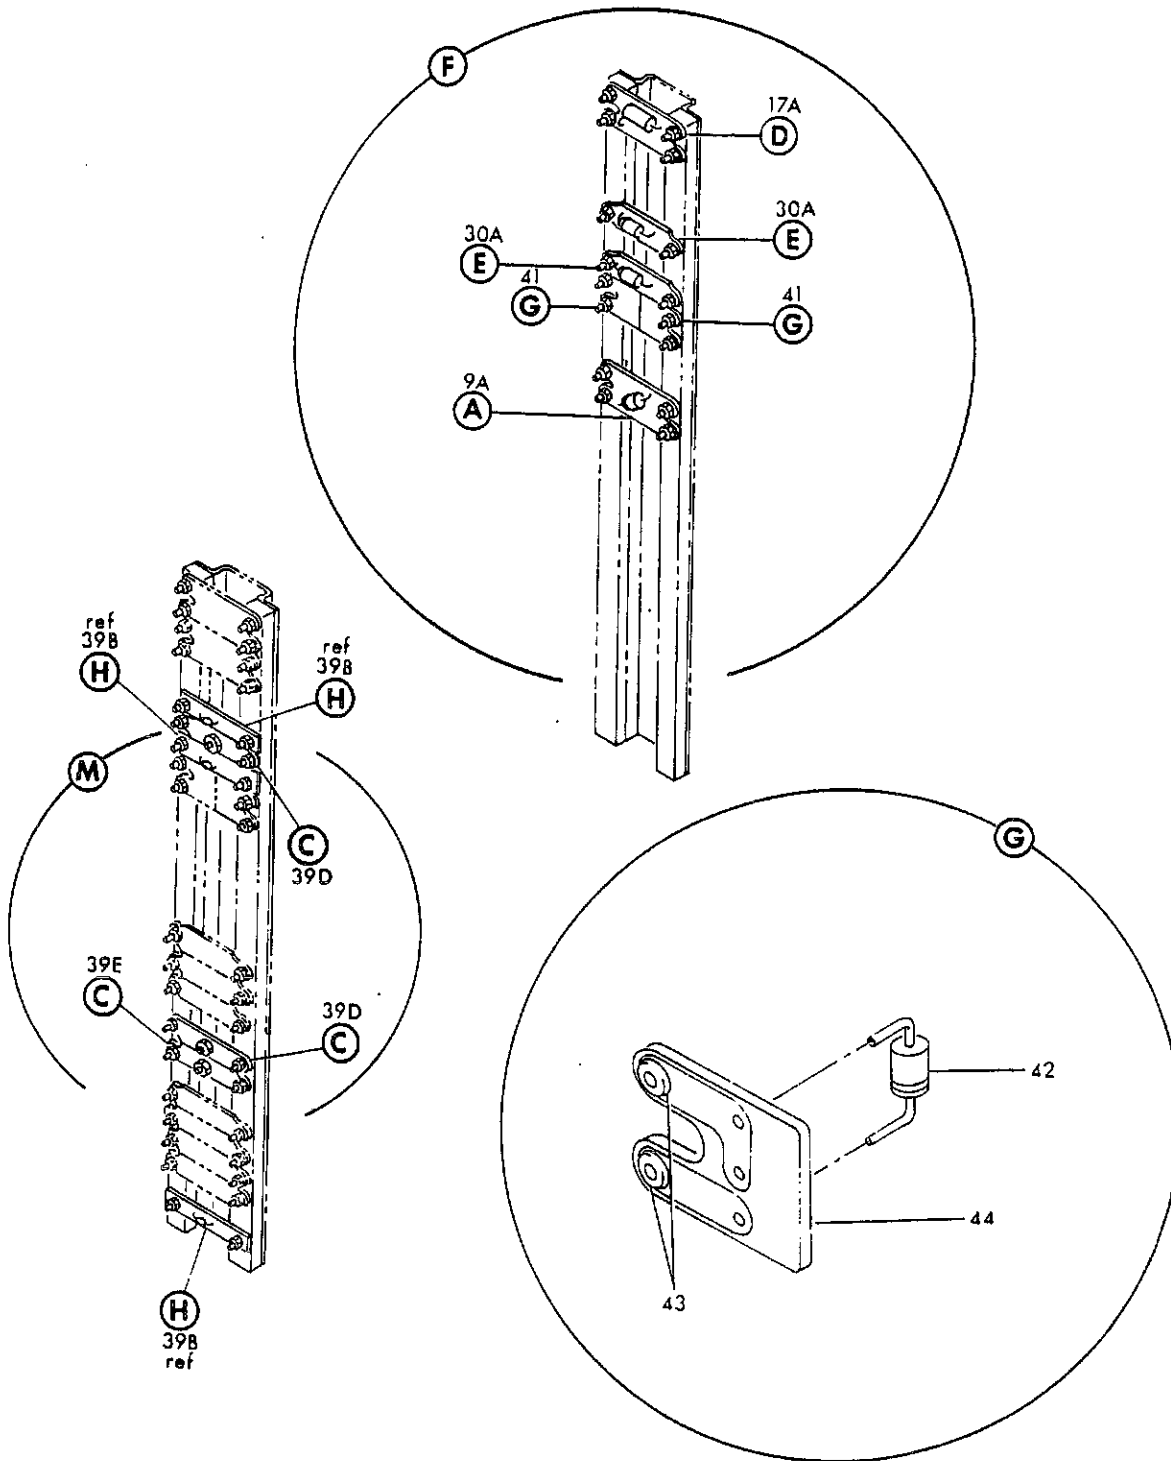


FIGURE 86F. COMPONENTS INSTL STATION 400 RJ13 FLIGHT INSTRUMENT (SHEET 3)

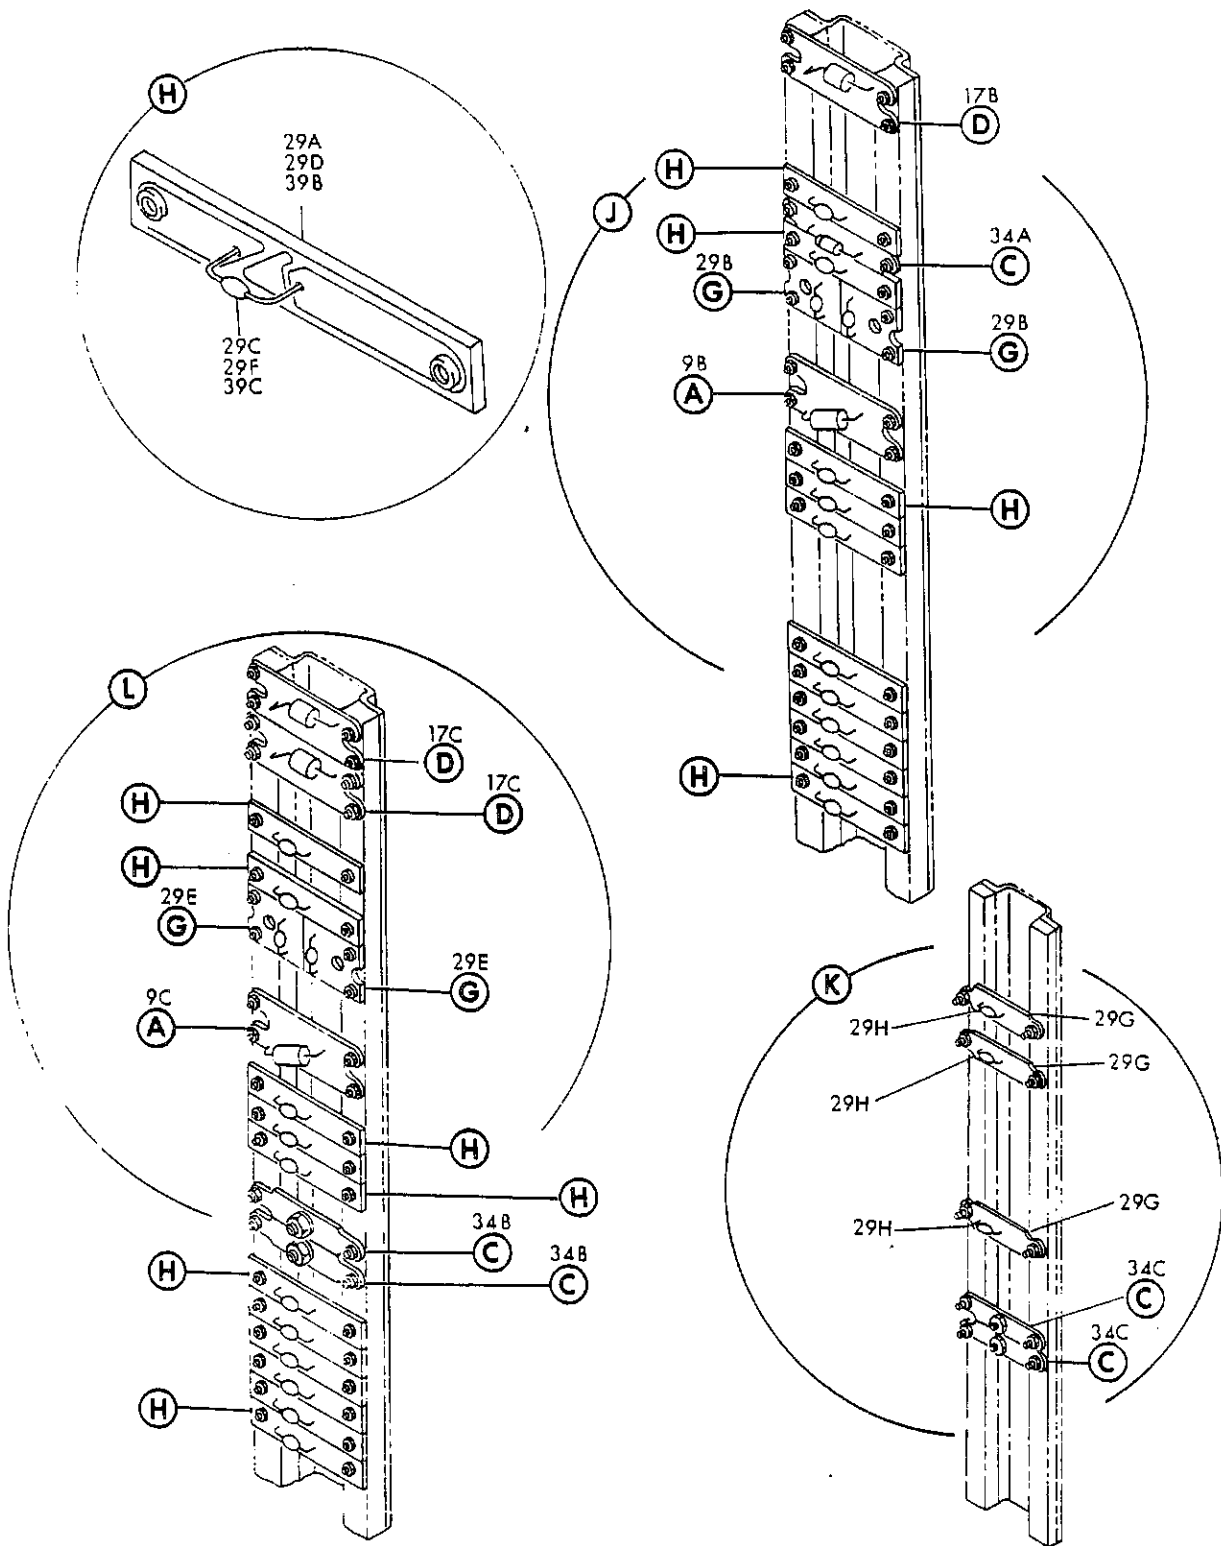


FIGURE 86F. COMPONENTS INSTL. STATION 400 RJ13 FLIGHT INSTRUMENTS (SHEET 4)

BOEING *707* Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	86F	65-19439-79	COMPONENTS INSTL, STATION 400 RJ13 FLIGHT INSTRUMENT. .							5199	RF
R			(SEE 24-3, FIG. 6F, ITEM 25)								
R	1	172935-001	. RELAY, (V81840)							5199	4
R		BACSI2CB08-6	. ATTACHING PARTS							5199	16
R		BACN10FX83	. SCREW							5199	16
R			. NUT							5199	
R	1A	GA410-160679-00	. RELAY, (V73949)							5199	1
R			(OPTIONAL G60679 (V73949))								
R	1A	G60679	. RELAY, (V73949)							5199	1
R			(OPTIONAL TO GA410-160679-00 (V73949))								
R		BACSI2CB08-8	. ATTACHING PARTS							5199	4
R		AN960D8	. SCREW							5199	4
R		BACN10FX83	. WASHER.							5199	4
R			. NUT							5199	
R	2	6746	. TRANSFORMER, AUTO (V95266).							5199	4
R		BACSI2CB08-6	. ATTACHING PARTS							5199	16
R		BACN10FX83	. SCREW							5199	16
R			. NUT							5199	
R	5	TSG420-101	. INVERTER, STATIC (VF6306)							5199	1
R		BACSI2CB08-6	. ATTACHING PARTS							5199	4
R		BACN10FX83	. SCREW							5199	4
R			. NUT							5199	
R	6	69-58624-2	. PLATE, STATIC INVERTER MOUNTING							5199	1
R		BACSI2CB08-6	. ATTACHING PARTS							5199	4
R		BACN10FX83	. SCREW							5199	4
R			. NUT							5199	
R	29G	65-38292-113	. PLATE ASSY, DIODE							5199	3
R	29H	IN5061	. DIODE, (V81349)							5199	1
R	34C	65-38292-50	. PLATE ASSY, DIODE							5199	2
R	35	1N2982	. DIODE, (V80131)							5199	1
R	36	65-38292-30	. PLATE							5199	1
R	37	CE123	. EYELET, (V04264).							5199	2
R	38	BACT12AB1	. TERMINAL.							5199	1
R	39	65-38292-8	. CIRCUIT BOARD, BLANK.							5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

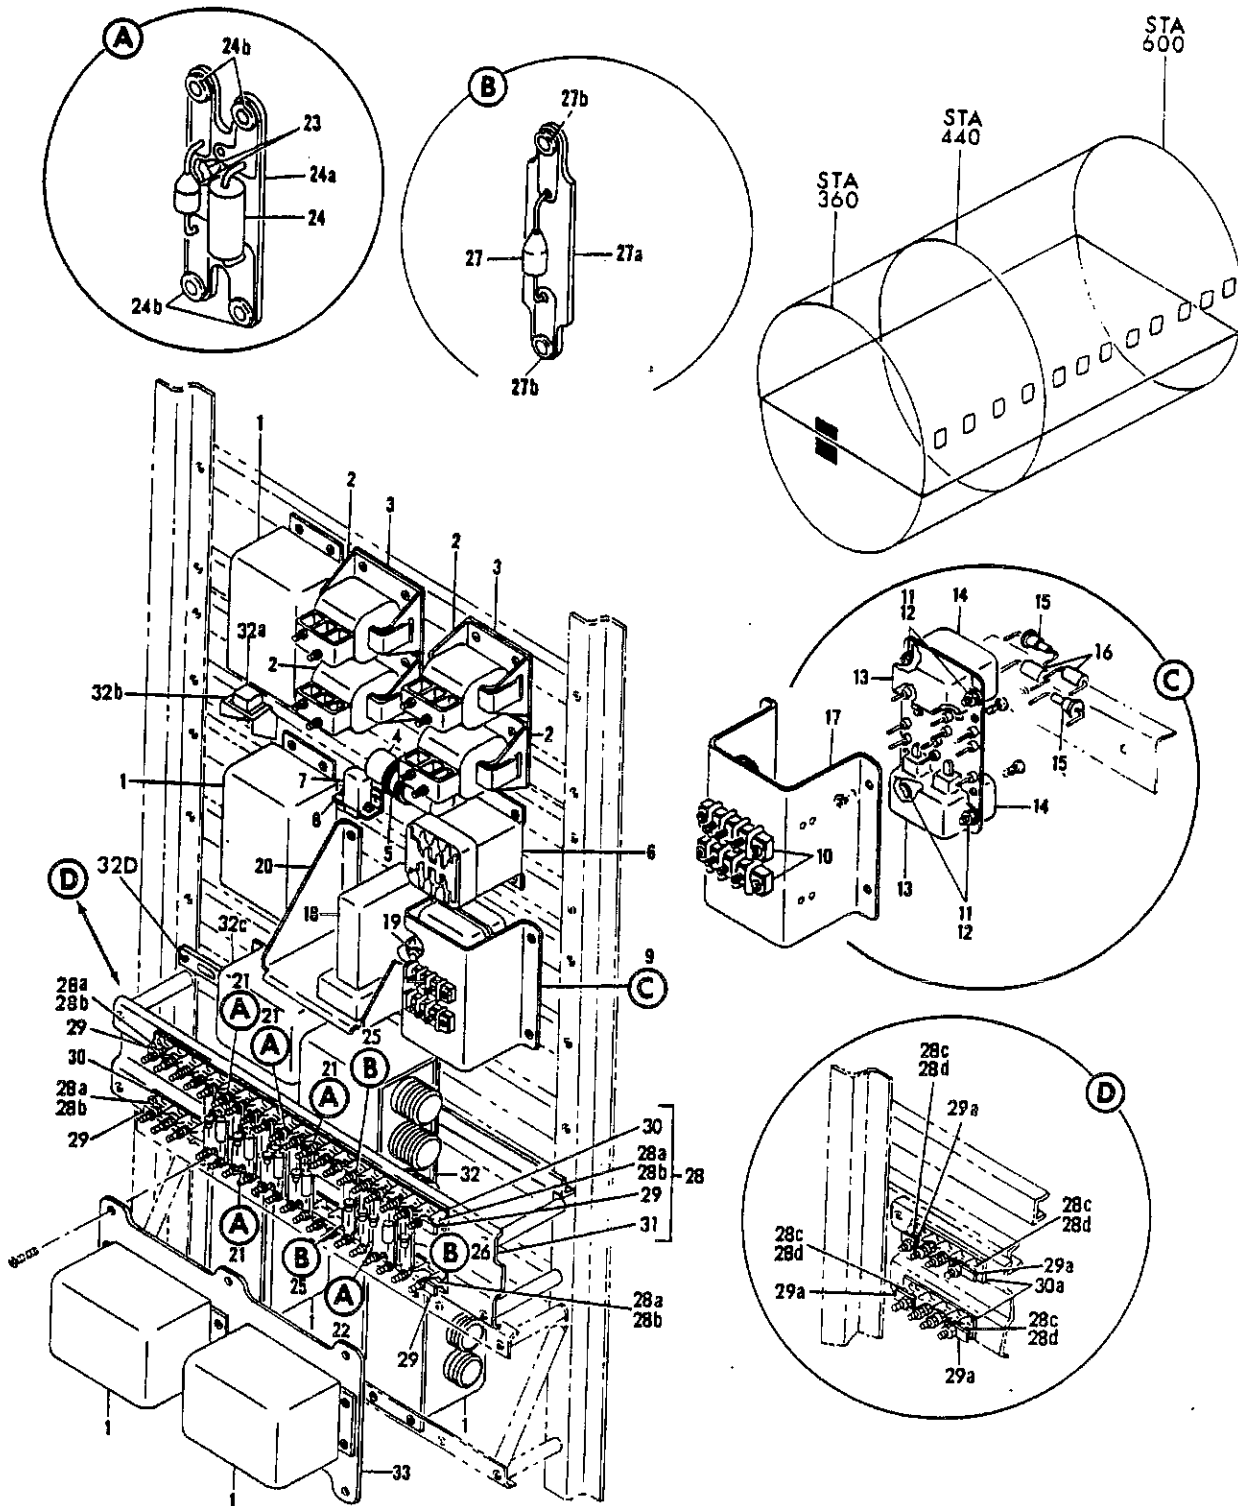


FIGURE 92C. COMPONENT INSTL. STATION 400 RJ13 FLIGHT INSTRUMENT



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	92C	65-19439-25	COMPONENTS INSTL, STATION 400 RJ13 FLIGHT INSTRUMENT. .							0150	RF
R			(SEE 24-3, FIG. 6D, ITEM 30)								
R	1	D9312-001	. RELAY, (VB1840)							0150	6
R		BACS12CB08-6	. ATTACHING PARTS							0150	24
R		AN96008	. SCREW							0150	8
R		BACN10FX82W	. WASHER.							0150	20
R		NAS679A08W	. NUT							0150	4
R	2	6746	. TRANSFORMER, (V95266)							0150	4
R		BACS12CB08-6	. ATTACHING PARTS							0150	16
R		BACN10FX82W	. SCREW							0150	16
R			. NUT								
R	3	69-30273-2	. PLATE, RJ13 COMPONENT MOUNTING.							0150	2
R	4	D16255	. CAPACITOR, (V56289)							0150	1
R	5	MS21919WDG15	. CLAMP							0150	1
R		BACS12CB08-6	. ATTACHING PARTS							0150	1
R		BACN10FX82W	. SCREW							0150	1
R			. NUT								
R	6	10-3092	. RELAY, HERMETICALLY SEALED 4POT							0150	1
R		BACS12CB08-6	. ATTACHING PARTS							0150	4
R		BACN10FX82W	. SCREW							0150	4
R			. NUT								
R	7	M270D4-040AA	. RELAY, (V35344)							0150	1
R			(OPTIONAL BR12K4KA18-26V (V82050))								
R	7	BR12K4KA18-26V	. RELAY, (V82050)							0150	1
R			(OPTIONAL TO M270D4-040AA (V35344))								
R	8	66-21884-1	. ANGLE, RJ13 RELAY SUPPORT							0150	1
R		BACS12CB08-6	. ATTACHING PARTS							0150	2
R		BACN10FX82W	. SCREW							0150	2
R			. NUT								
R	9	65-28797-1	. RECTIFIER ASSY, RMI SERVO AMPLIFIER DUAL.							0150	1
R		BACS12CB08-6	. ATTACHING PARTS							0150	4
R		BACN10FX82W	. SCREW							0150	4
R			. NUT								
R	10	699-2100-3	. TERMINAL BLOCK, (V75382).							0150	2
R		BACS12CB08-9	. ATTACHING PARTS							0150	4
R		NAS620-8L	. SCREW							0150	4
R		NAS679A08W	. WASHER.							0150	4
R			. NUT								
R	11	BACS12CB06-5	. SCREW							0150	4
R	12	NAS679A06W	. WASHER.							0150	4
R	13	BS36	. CAPACITOR, (V37942)							0150	2
R	14	BS39	. CAPACITOR, (V37942)							0150	2
R	15	1N538	. DIODE, (V81350)							0150	2
R	16	MS35044-7	. RESISTOR.							0150	2
R	17	65-28797-2	. HOUSING ASSY, RMI SERVO AMPLIFIER DUAL RECTIFIER. .							0150	1
R	18	341C1	. AMPLIFIER, RMI SERVO (V13499)							0150	1
R	19	MS35489-6	. GROMMET							0150	1
R	20	69-30146-1	. BRACKET, RMI AMPLIFIER SUPPORT.							0150	1
R		BACS12CB08-6	. ATTACHING PARTS							0150	4
R		BACN10FX82W	. SCREW							0150	4
R			. NUT								
R	21	65-38292-2	. PLATE ASSY, DIODE AND RESISTOR CIRCUIT.							0150	4
R	22	65-38292-5	. PLATE ASSY, DIODE AND RESISTOR CIRCUIT.							0150	1
R	23	1N538	. DIODE, (V81350)							0150	2
R	24	RC42GF240J	. RESISTOR, (USED ON 65-38292-2).							0150	1
R	24	RC42GF180J	. RESISTOR, (USED ON 65-38292-5).							0150	1
R	24A	65-38292-33	. CIRCUIT BOARD, BLANK.							0150	1
R			(OPTIONAL 65-38292-7)								
R	24A	65-38292-7	. CIRCUIT BOARD, BLANK.							0150	1
R			(OPTIONAL TO 65-38292-33)								
R	24B	CE123	. EYELET, (V04264).							0150	4
R	25	65-38292-4	. PLATE ASSY, DIODE AND RESISTOR CIRCUIT.							0150	2
R	26	65-38292-3	. PLATE ASSY, DIODE AND RESISTOR CIRCUIT.							0150	1
R	27	1N538	. DIODE, (V81350) (USED ON 65-38292-4).							0150	1
R	27	1N560	. DIODE, (V06228) (USED ON 65-38292-3).							0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

BOEING *707* *Intercontinental*
PARTS CATALOG

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	92C	27A	65-38292-8	.	.	CIRCUIT BOARD, BLANK.	.	.	.	0150	1
R		27B	CE123	.	.	EYELET, (V04264).	.	.	.	0150	2
R		28	69-30607-5	.	.	CHANNEL ASSY, DIODE MOUNTING.	.	.	.	0150	1
				.	.	ATTACHING PARTS	.	.	.		
R			BACS12CB08-50	.	.	SCREW, (OPTIONAL NAS602-50)	.	.	.	0150	4
R			NAS43DD3-183	.	.	SPACER.	.	.	.	0150	4
R			BACN10FX82W	.	.	NUT	.	.	.	0150	4
				.	.	-----*	.	.	.		
R		28A	BACS12CB04-5	.	.	SCREW	.	.	.	0150	4
R		28B	NAS679A04W	.	.	NUT	.	.	.	0150	4
R		28C	BACS12CB04-5	.	.	SCREW, (USED WITH MS27212-1-4).	.	.	.	0150	4
R		28D	NAS679A04W	.	.	NUT, (USED WITH MS27212-1-4).	.	.	.	0150	4
R		29	MS25227-1	.	.	STRIP	.	.	.	0150	4
R		29A	MS25227-1	.	.	STRIP	.	.	.	0150	4
R		30	MS27212-1-20	.	.	TERMINAL BOARD ASSY	.	.	.	0150	2
R		30A	MS27212-1-2	.	.	TERMINAL BOARD ASSY	.	.	.	0150	2
R		31	69-30607-2	.	.	CHANNEL, DIODE MOUNTING	.	.	.	0150	1
R		32	09262-001	.	.	RELAY, (V81840)	.	.	.	0150	1
				.	.	ATTACHING PARTS	.	.	.		
R			BACS12CB08-6	.	.	SCREW	.	.	.	0150	4
R			AN960D8	.	.	WASHER.	.	.	.	0150	4
R			BACN10FX82W	.	.	NUT	.	.	.	0150	4
				.	.	-----*	.	.	.		
R		32A	9226-3592	.	.	RELAY, (V35344)	.	.	.	0150	1
R		32B	66-12666-1	.	.	BRACKET, RELAY MOUNTING	.	.	.	0150	1
				.	.	ATTACHING PARTS	.	.	.		
R			BACN10FX82W	.	.	NUT	.	.	.	0150	2
R			BACS12CB08-6	.	.	SCREW	.	.	.	0150	2
				.	.	-----*	.	.	.		
R		32C	TSG420	.	.	INVERTER, STATIC (VF6306)	.	.	.	0150	1
R		33	69-30273-1	.	.	PLATE, RJ13 COMPONENT MOUNTING.	.	.	.	0150	1
				.	.	ATTACHING PARTS	.	.	.		
R			BACS12CB08-6	.	.	SCREW	.	.	.	0150	6
R			AN960D8	.	.	WASHER.	.	.	.	0150	6
R			BACN10FX82W	.	.	NUT	.	.	.	0150	6
				.	.	-----*	.	.	.		

MISSING ITEM NUMBERS ARE NOT APPLICABLE


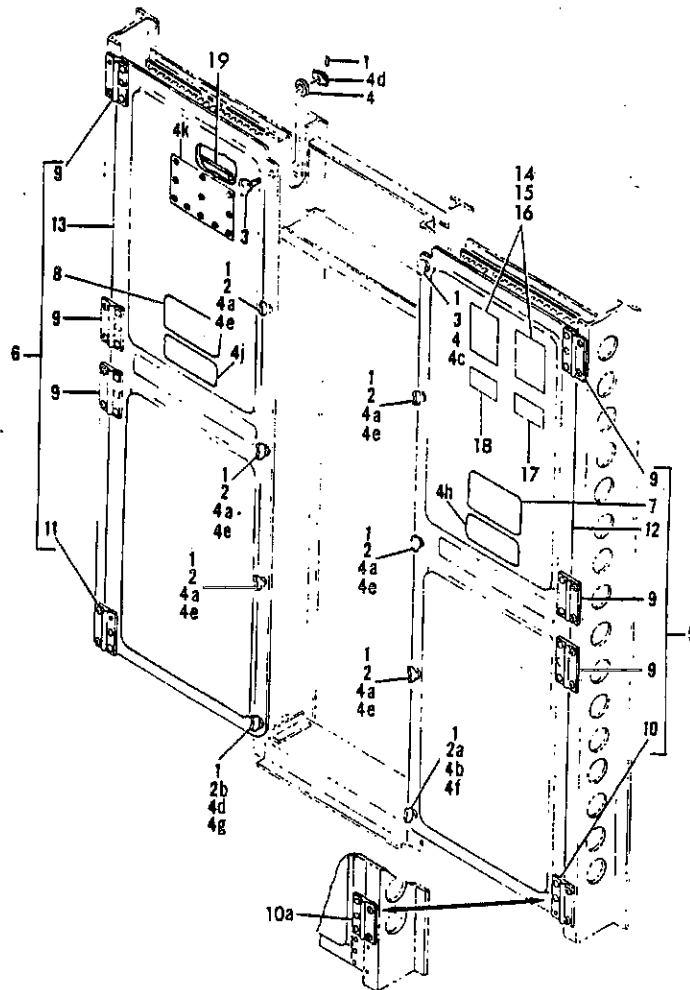


FIGURE 100. TERMINAL INSTL, STATION 400 ELECTRONIC WIRES

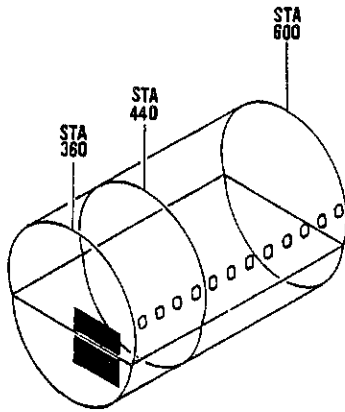

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R	100	65-1752-2	0150	RF
		65-1752-2	5199	RF
	2	BACS21Y6W		6
	3	BACS21Y7W		2
	4	BACW10X4		2
	4A	BACW10X4		6
	4D	BACR11Y3A		2
	4E	26R16-1		6
	4H	BACM9B2G		1
	4J	BACM9B2H		1
	5	65-1697-23		1
	6	65-1697-24		1
		NAS603-11		12
		NAS603-11		2
		NAS603-11		2
	10	65-1697-5		1
	11	65-1697-5		1
		AN470A5		3
		AN960PD10L		3
	12	65-1697-13		1
	13	65-1697-25		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

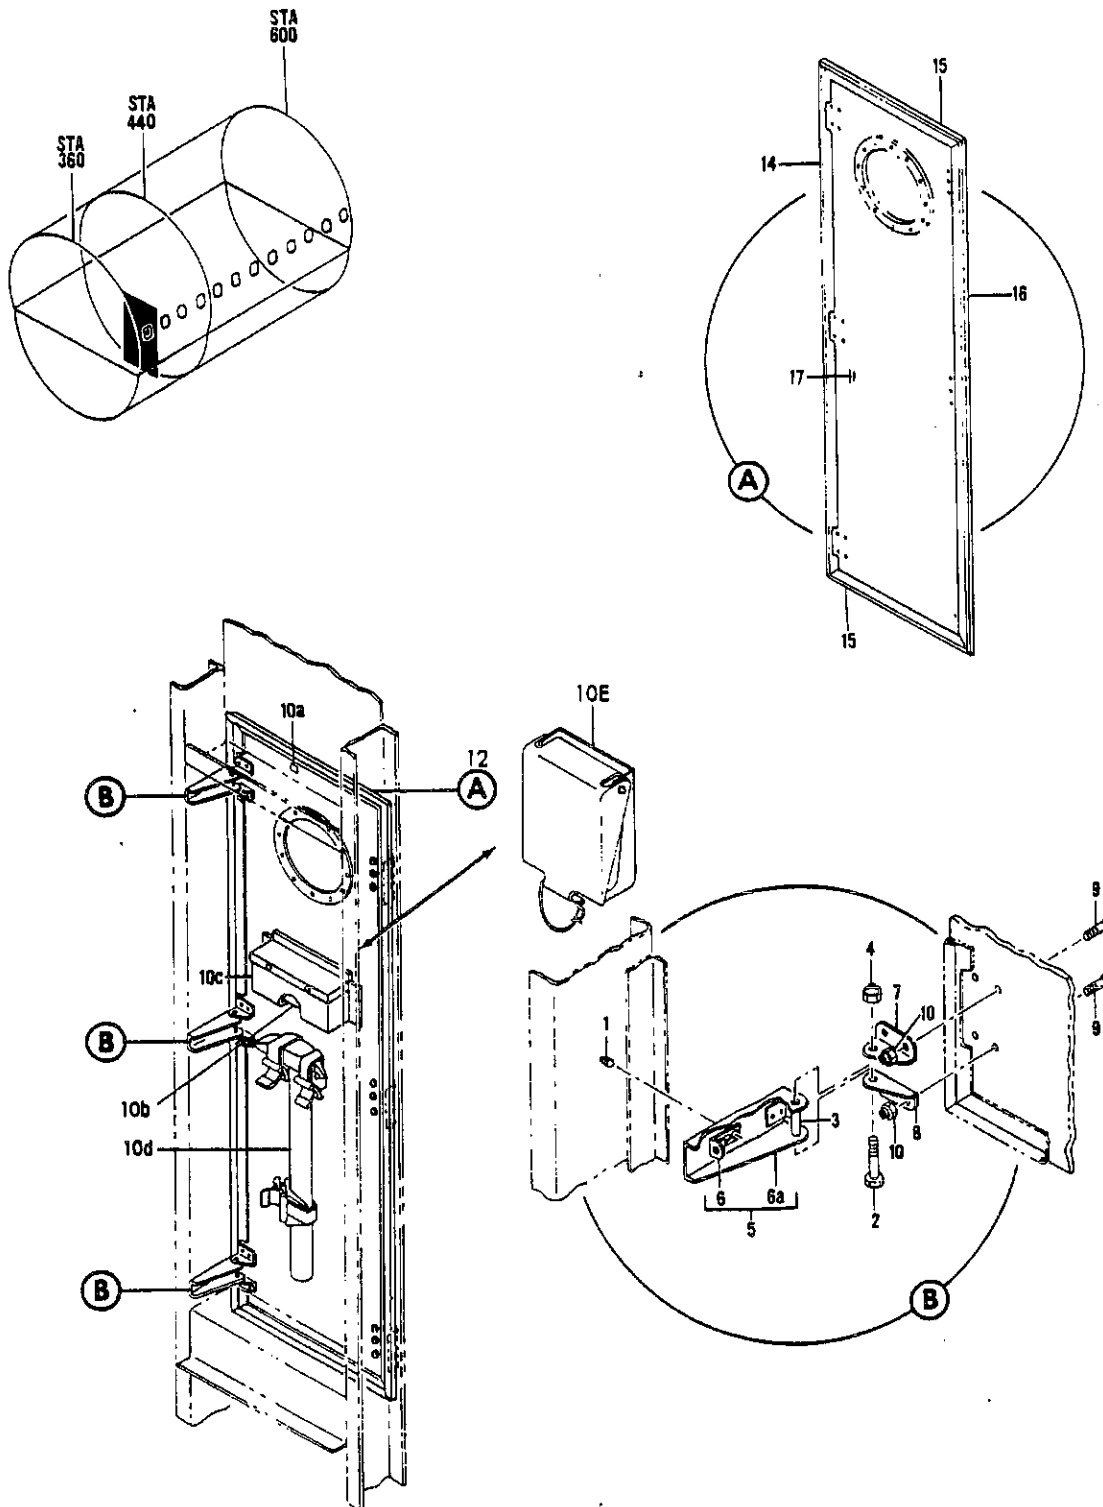


FIGURE 102. DOOR INSTL, STATION 400 ELECTRONIC COMPARTMENT (ELECTRICAL POWER ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R	102 65-1995		DOOR INSTL, STATION 400 ELECTRONIC COMPARTMENT. (ELECTRICAL POWER ONLY) (SEE 24-3, FIG. 6A, ITEM 16, 24-3, FIG. 6B, ITEM 13, 24-3, FIG. 6C, ITEM 13, 24-3, FIG. 6D, ITEM 20, 24-3, FIG. 6E, ITEM 24 AND 24-3, FIG. 6F, ITEM 16)	0150	RF
R R R R R	65-1995-18		DOOR INSTL, STATION 400 ELECTRONIC COMPARTMENT. (ELECTRICAL POWER ONLY) (SEE 24-1, FIG. 6B ITEM 13, 24-3, FIG. 6C, ITEM 13 AND 24-3, FIG. 6E, ITEM 24)	5199	RF
	1 AN3198-4		. STUD.		3
	2 AN3-17A		. BOLT.		3
	3 NAS43-3-69		. SPACER.		3
R	4 BACN10JC3		. NUT	0150	3
R	4 NAS679A04W		. NUT	5199	3
	5 66-2547		. HANDLE ASSY, ELECTRONIC COMPARTMENT DOOR.		3
	6 AN3195-4		. FASTENER.		1
	6A 66-2547-1		. HANDLE, ELECTRONIC COMPARTMENT DOOR		1
	7 63-1635-1		. ANGLE, STATION 400 DOOR LATCH ATTACHING		3
	8 63-1635-2		. ANGLE, STATION 400 DOOR LATCH ATTACHING ATTACHING PARTS		3
	9 NAS514P440-7		. SCREW		12
R	10 NAS679A04W		. NUT	5199	12
R	10 BACN10JC04		. NUT	0150	12
	100 69-25973-1		. STOWAGE INSTL, STARTER VALVE OVERRIDE TOOL (SEE 80-1, FIG. 48)		1
R	12 65-1995-1		. DOOR ASSY, STATION 400 ELECTRONIC COMPARTMENT (ELECTRICAL POWER ONLY)	0150	1
R	12 65-1995-19		. DOOR ASSY, (ELECTRICAL POWER ONLY). ATTACHING PARTS	5199	1
R	NAS514P440-7		. SCREW	0150	9
R	BACS12CB06-10		. SCREW	5199	9
	BACN10JC04		. NUT		9
R	14 65-1995-8		. SEAL, STATION 400 ELECTRONIC COMPARTMENT DOOR RUBBER (EXTRUSION NO. BAC1521-446 X 48.38 IN. LG)	0150	1
R	14 65-1995-25		. SEAL, RUBBER (EXTRUSION NO. BAC1521-446 X 44.38 IN. LG)	5199	1
R	15 65-1995-3		. SEAL, STATION 400 ELECTRONIC COMPARTMENT DOOR RUBBER (EXTRUSION NO. BAC1521-446 X 14.8 IN. LG)		2
R	16 65-1995-9		. SEAL, STATION 400 ELECTRONIC COMPARTMENT DOOR RUBBER (EXTRUSION NO. BAC1521-446 X 48.38 IN. LG)	0150	1
R	16 65-1995-21		. SEAL, RUBBER (EXTRUSION NO. BAC1521-446 X 44.38 IN. LG)	5199	1
R	17 65-1995-2		. PANEL ASSY, STATION 400 ELECTRONIC COMPARTMENT. DOOR	0150	1
R	17 65-1995-20		. PANEL ASSY.	5199	1
			. WINDOWS, (SEE 56-2, FIG. 4)		
			. FOR REFERENCE TO OTHER DOOR DETAILS, SEE NHA.		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

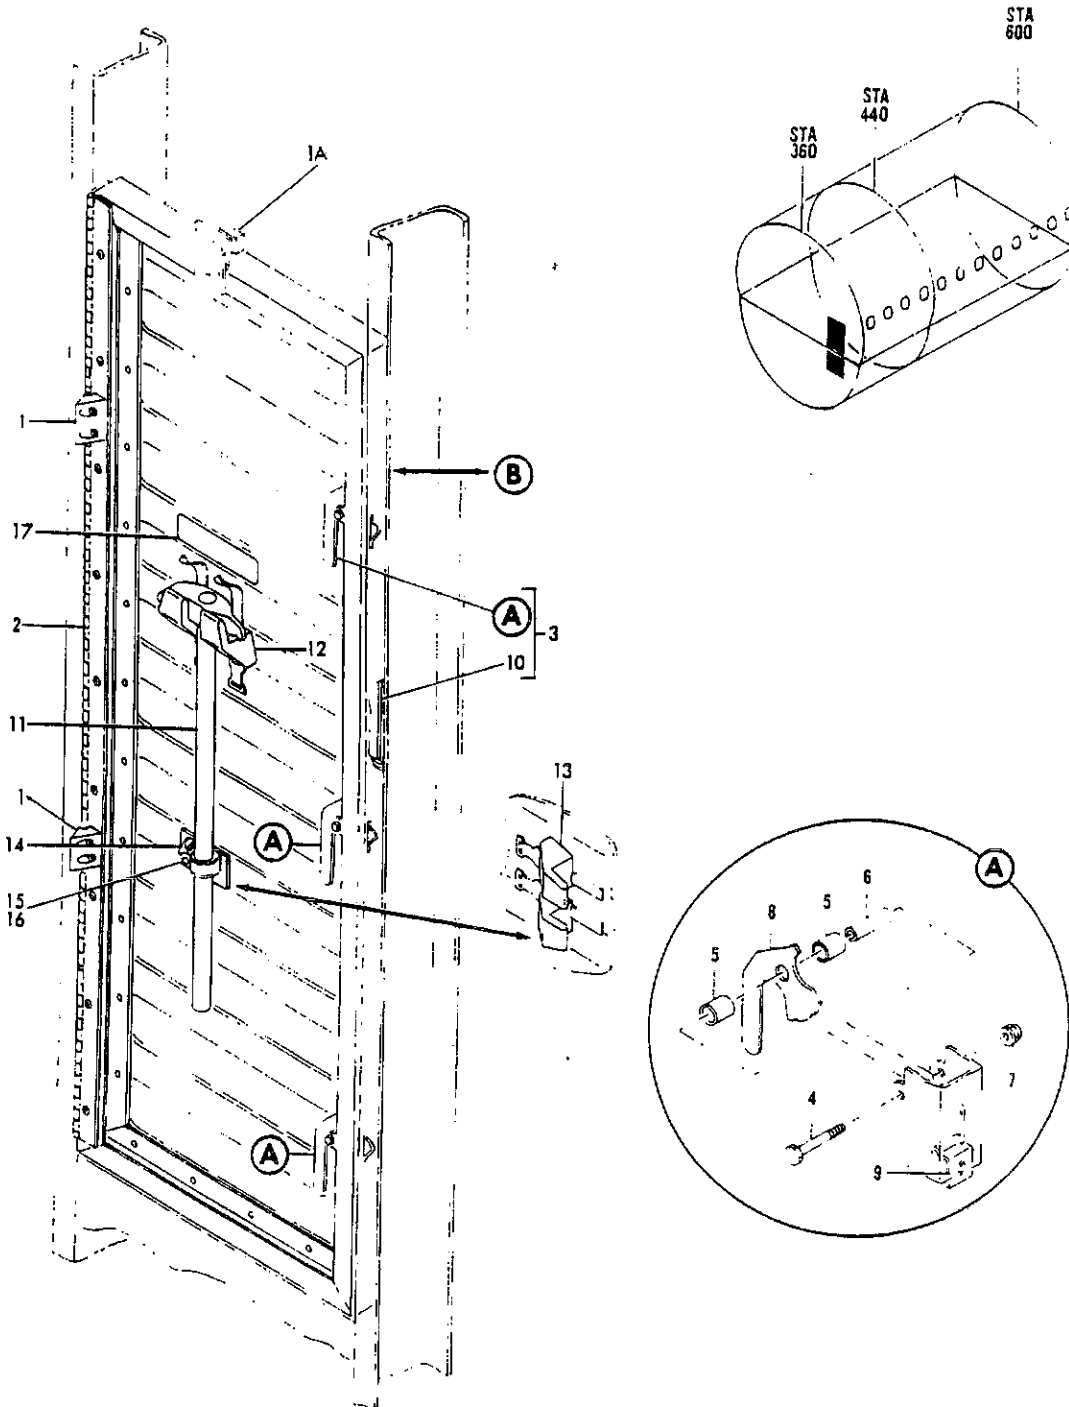


FIGURE 103. DOOR INSTL. STATION 400 (SHEET 1)

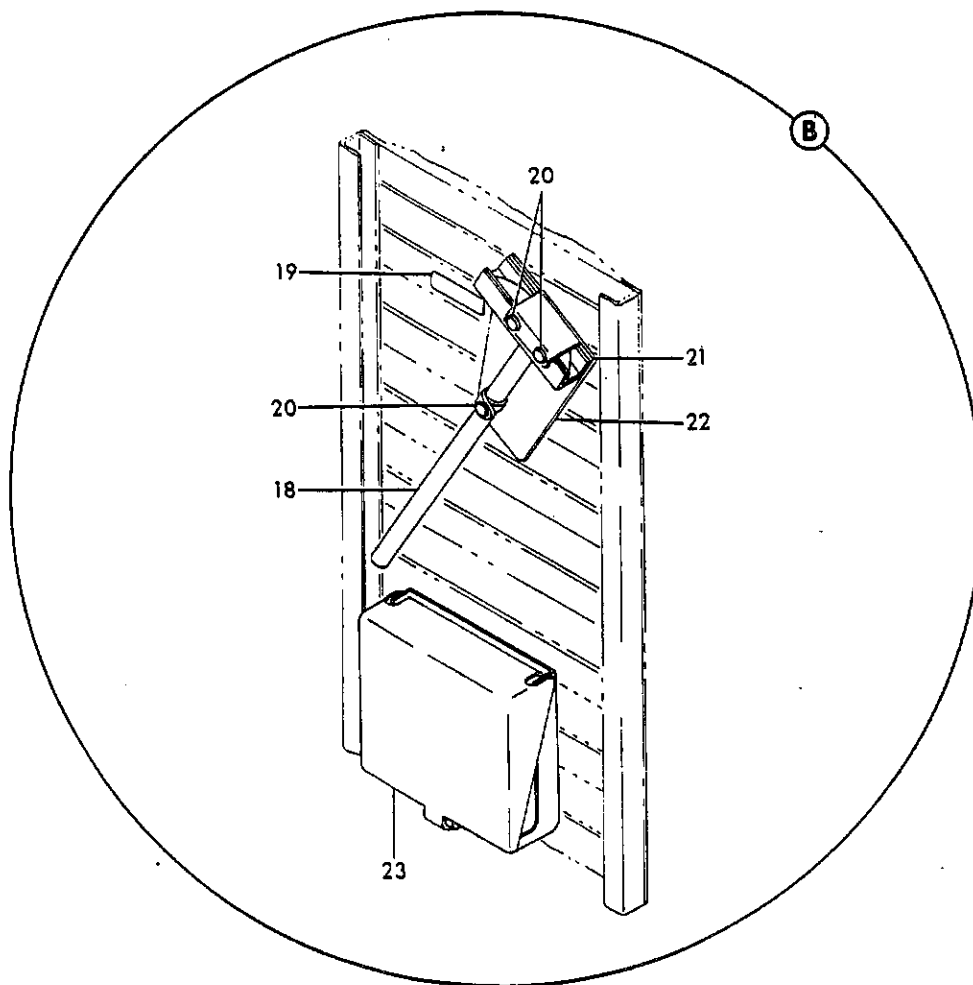


FIGURE 103. DOOR INSTL, STATION 400 (SHEET 2)

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
103	65-8393	DOOR INSTL, STATION 400 (VARIABLE DWG:65-8393-5001) . . (SEE 24-3, FIG. 6B, ITEM 13 AND 24-3, FIG. 6F, ITEM 15A)							5199	RF
1	65-8393-3	. STOP, STATION 400 DOOR.							5199	2
	NAS514P1032-8	. ATTACHING PARTS							5199	4
	BACN10JC3	. SCREW							5199	4
		. NUT							5199	
2	65-8393-2	. HINGE, STATION 400 DOOR (ALTERED FROM AN257-5-4310) .							5199	1
	MS20426D5-7	. ATTACHING PARTS							5199	18
	NAS514P1032-8	. RIVET							5199	9
	BACN10JC3	. SCREW							5199	9
		. NUT							5199	
3	65-8393-6	. DOOR ASSY, STATION 400 (ELECTRICAL POWER ONLY). . .							5199	1
4	BAC830NE3-22	. BOLT.							5199	3
5	NAS43HT5-41	. SPACER.							5199	6
6	NAS43HT3-90	. SPACER.							5199	3
7	BACN10R10L	. NUT							5199	3
8	63-8354	. LATCH, STATION 400 DOOR							5199	3
9	66-8659	. SPRING, STATION 400 DOOR.							5199	3
	MS20470D6-7	. ATTACHING PARTS							5199	6
		. RIVET							5199	
10	65-8392-5	. PANEL, STATION 400 DOOR							5199	1
	65-54124-1	. WINDOWS, (SEE 56-2, FIG. 5)							5199	
11	69-25959-1	. STOWAGE INSTL, OVERRIDE TOOL.							5199	1
12	66-19225-1	. TOOL, STARTER VALVE OVERRIDE OPERATING.							5199	1
	NAS603-11	. BRACKET ASSY, STARTER VALVE OVERRIDE TOOL							5199	1
	AN960-10L	. ATTACHING PARTS							5199	2
	NAS679A3W	. SCREW							5199	4
		. WASHER.							5199	2
		. NUT							5199	
14	7C34-12-2A	. CLAMP, (V71286)							5199	1
15	8ACS12CB3-9	. SCREW							5199	1
16	NAS679A3W	. NUT							5199	1
17	BACM9V1BH	. SCOTCH-CAL, STARTER VALVE OVERRIDE TOOL.							5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

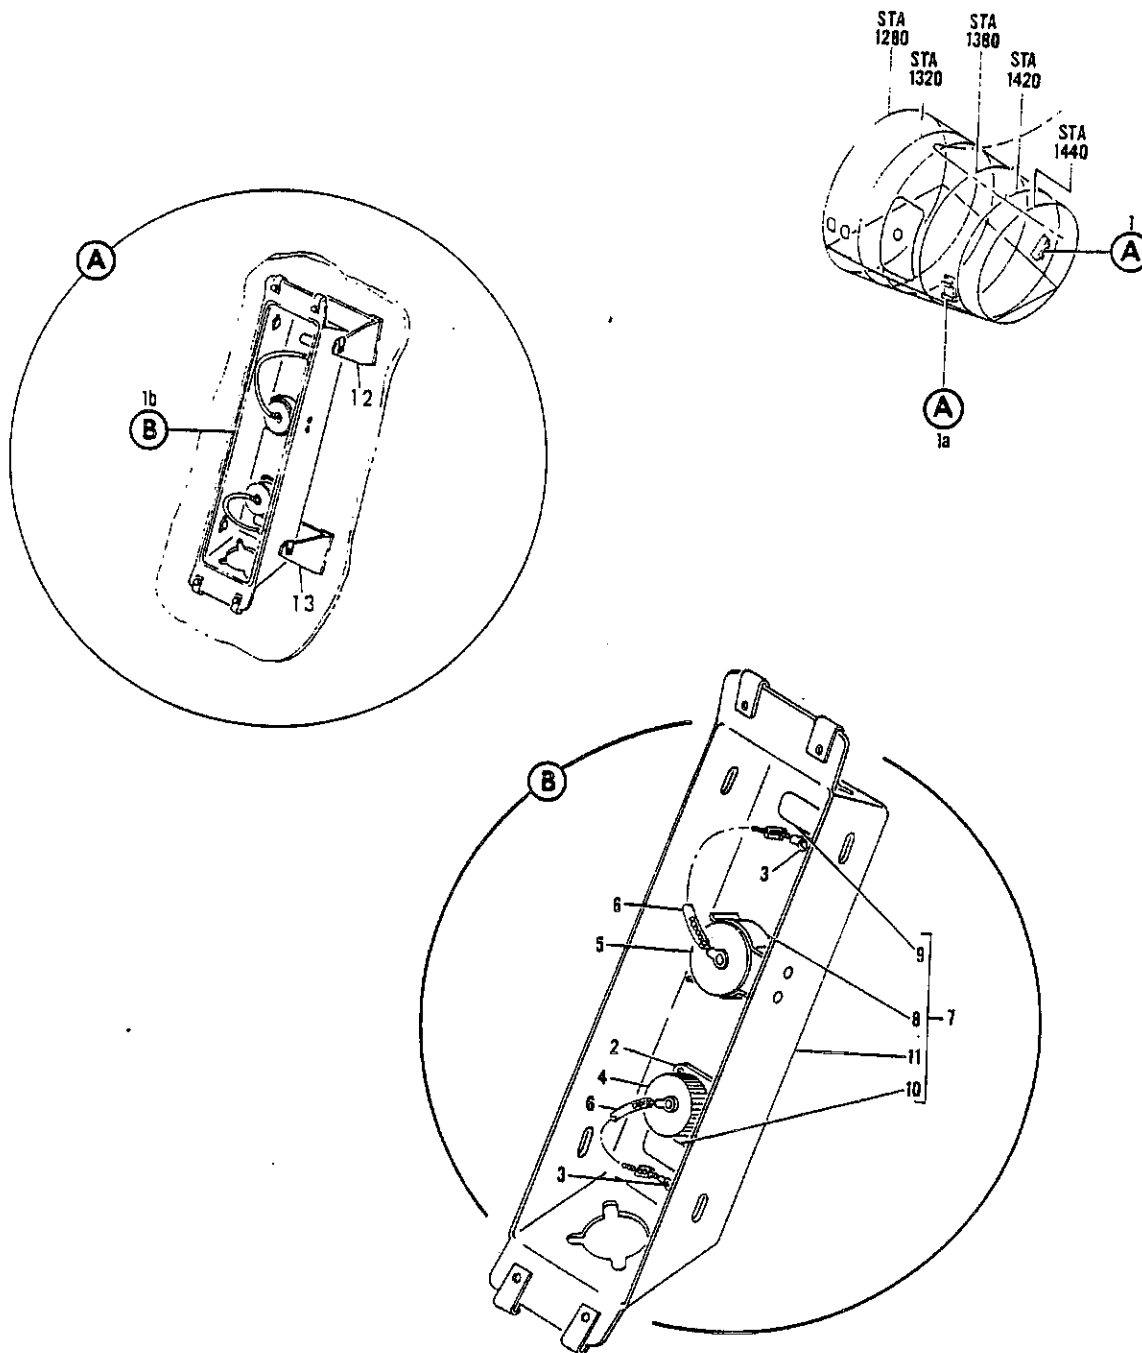


FIGURE 108. BOX INSTL, COMPARTMENT E AND Q LAVATORY SERVICES ELECTRICAL



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
			1	2	3	4	5	6	7			
R	108	1	65-38916-1	BOX INSTL, COMPARTMENT E LAVATORY SERVICES ELECTRICAL . (SEE 25-15, FIG. 1, ITEM 42A, 25-15, FIG. 4, ITEM 53, 25-15, FIG. 6, ITEM 54, 25-15, FIG. 8, ITEM 56, 25-15, FIG. 9, ITEM 59, 25-15, FIG. 13, ITEM 41, 25-15, FIG. 13M, ITEM 41, 25-15, FIG. 14A, ITEM 43, 25-15, FIG. 14B, ITEM 23, 25-15, FIG. 14C, ITEM 36, 25-15, FIG. 14D, ITEM 47, 25-15, FIG. 14E, ITEM 40, 25-15, FIG. 14H, ITEM 38, 25-15, FIG. 14J, ITEM 40, 25-15, FIG. 14K, ITEM 41, 25-15, FIG. 14L, ITEM 43, 25-15, FIG. 14M, ITEM 40, 25-15, FIG. 14N, ITEM 39 AND 25-15, FIG. 14P, ITEM 39)							5199	RF
R		1	65-38916-4	BOX INSTL, COMPARTMENT E LAVATORY SERVICES ELECTRICAL . (SEE 25-15, FIG. 14A, ITEM 43)							0150	RF
R		1B	65-38916-2	. BOX ASSY, (USED ON 65-38916-1).							5199	1
R		1B	65-38916-5	. BOX ASSY.							0150	1
			NAS603-8	. ATTACHING PARTS								8
			AN960D10L	. SCREW								8
			BACN10FX1	. WASHER.								4
				. NUT								
				-----*								
R		2	BACR11AD20	. . RECEPTACLE.							5199	1
R		2	BACR11AD10P	. . RECEPTACLE.							0150	1
				. . ATTACHING PARTS								
			NAS600-7P	. . SCREW								4
			AN960D4L	. . WASHER.								4
			NAS679A04W	. . NUT								4
				-----*								
		3	NAS600-7P	. . SCREW								2
R		4	MS25043-20C	. . CAP							5199	1
R		4	MS27295-1	. . CAP							0150	1
		5	48-2145	. . CAP AND CHAIN ASSY, (V02660).								1
		6	65-38916-3	. . SLEEVE.								2
R		7	65-38914-1	. . BOX ASSY.							5199	1
R		7	65-38914-3	. . BOX ASSY.							0150	1
		8	69-25865-2	. . CLIP, COMPARTMENT E LAVATORY SERVICES SPRING.								1
				. . ATTACHING PARTS								
			MS20470D4	. . RIVET								2
				-----*								
		9	BACM9L10ABF	. . SCOTCH-CAL, LAVATORY NO. 1.								1
		10	BACM9L10ABG	. . SCOTCH-CAL, LAVATORY NO. 2.								1
R		11	65-38914-2	. . BOX							5199	1
R		11	65-38914-4	. . BOX							0150	1
		12	69-31314-1	. CHANNEL, COMPARTMENT E LAVATORY SERVICES SUPPORT.								1
		13	69-31314-2	. CHANNEL, COMPARTMENT E LAVATORY SERVICES SUPPORT.								1
				. . ATTACHING PARTS								
			MS20470D4	. RIVET								4
			69-26669-4	. SHIM, LAVATORY SERVICE BOX.								4
				-----*								
MISSING ITEM NUMBERS ARE NOT APPLICABLE												

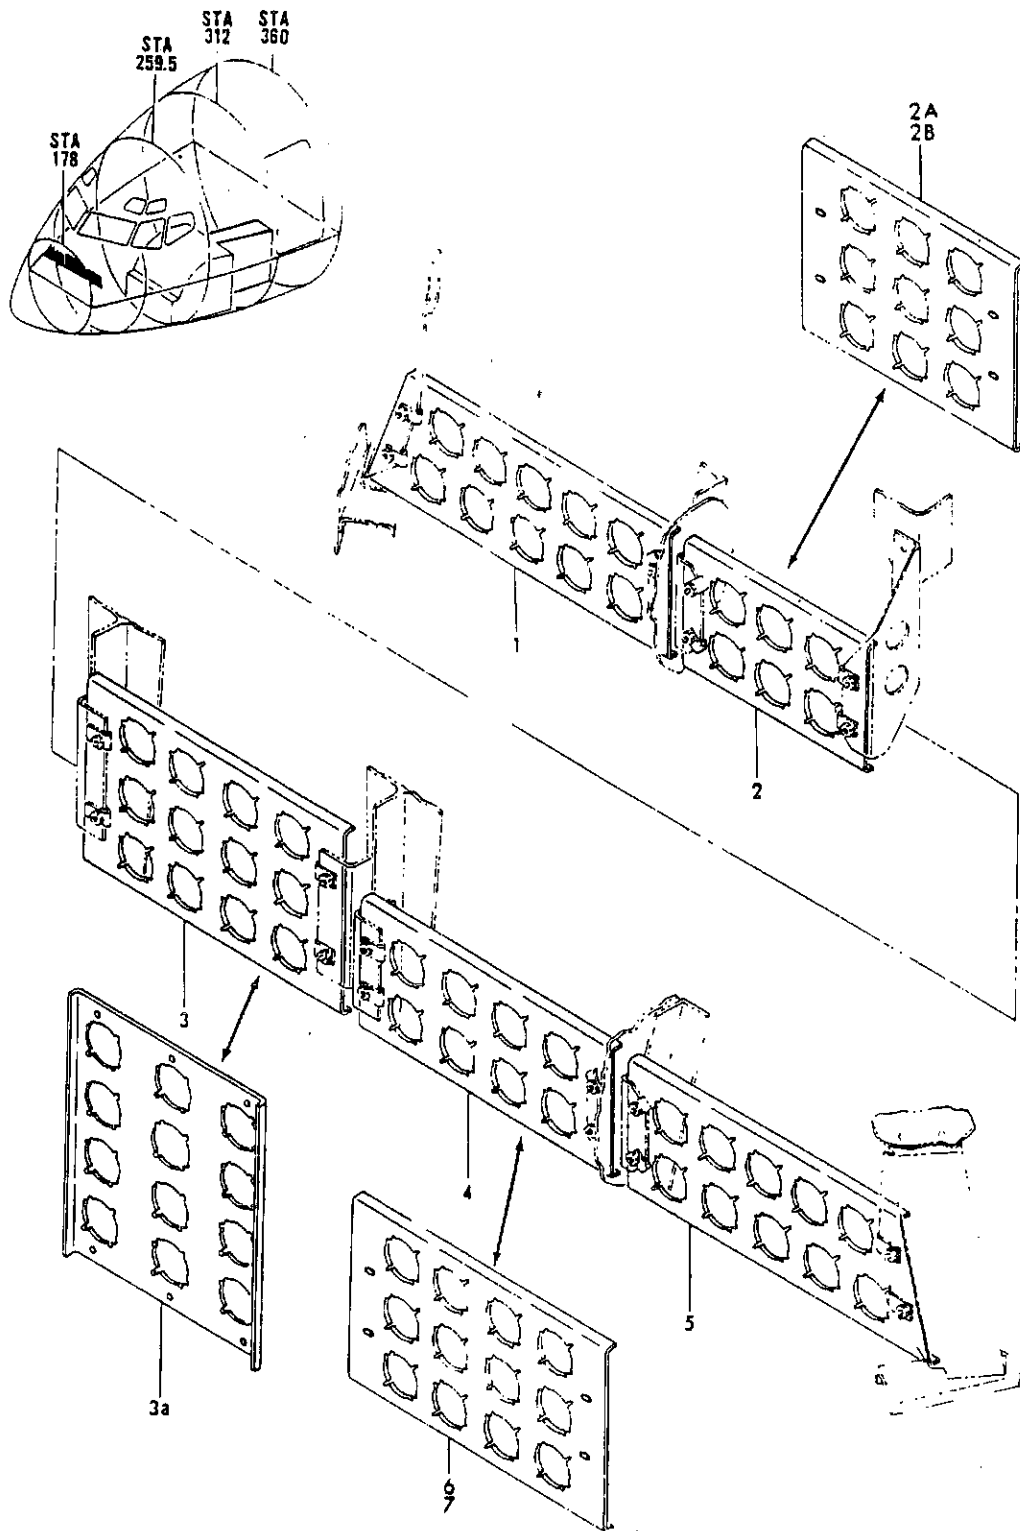


FIGURE 115. SUPPORT INSTL. MAIN INSTRUMENT PANELS WIRING DISCONNECTS

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE						EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7		
115	65-59878-10	SUPPORT INSTL, MAIN INSTRUMENT PANELS WIRING.							5199	RF
		DISCONNECTS (SEE 24-3, FIG. 5D, ITEM 145 AND 24-3, FIG. 5F, ITEM 84A)								
1	65-60230-2	. SUPPORT							5199	1
	BACS12CB3-6	. ATTACHING PARTS							5199	8
	BACN10FX1	. SCREW							5199	8
		. NUT							5199	8
		-----*								
2A	65-60230-15	. SUPPORT ASSY.							5199	1
	BACS12CB3-6	. ATTACHING PARTS							5199	4
	BACN10FX21	. SCREW							5199	4
		. NUT							5199	4
		-----*								
2B	65-60230-13	. . SUPPORT, DISCONNECT							5199	1
3A	65-60230-10	. SUPPORT							5199	1
		. ATTACHING PARTS								
	NAS603-7P	. SCREW							5199	6
		-----*								
5	65-60230-1	. SUPPORT							5199	1
	BACS12CB3-6	. ATTACHING PARTS							5199	8
	BACN10FX1	. SCREW							5199	8
		. NUT							5199	8
		-----*								
6	65-60230-14	. SUPPORT ASSY.							5199	1
	BACS12CB3-6	. ATTACHING PARTS							5199	4
	BACN10FX21	. SCREW							5199	4
		. NUT							5199	4
		-----*								
7	65-60230-12	. . SUPPORT, DISCONNECT							5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

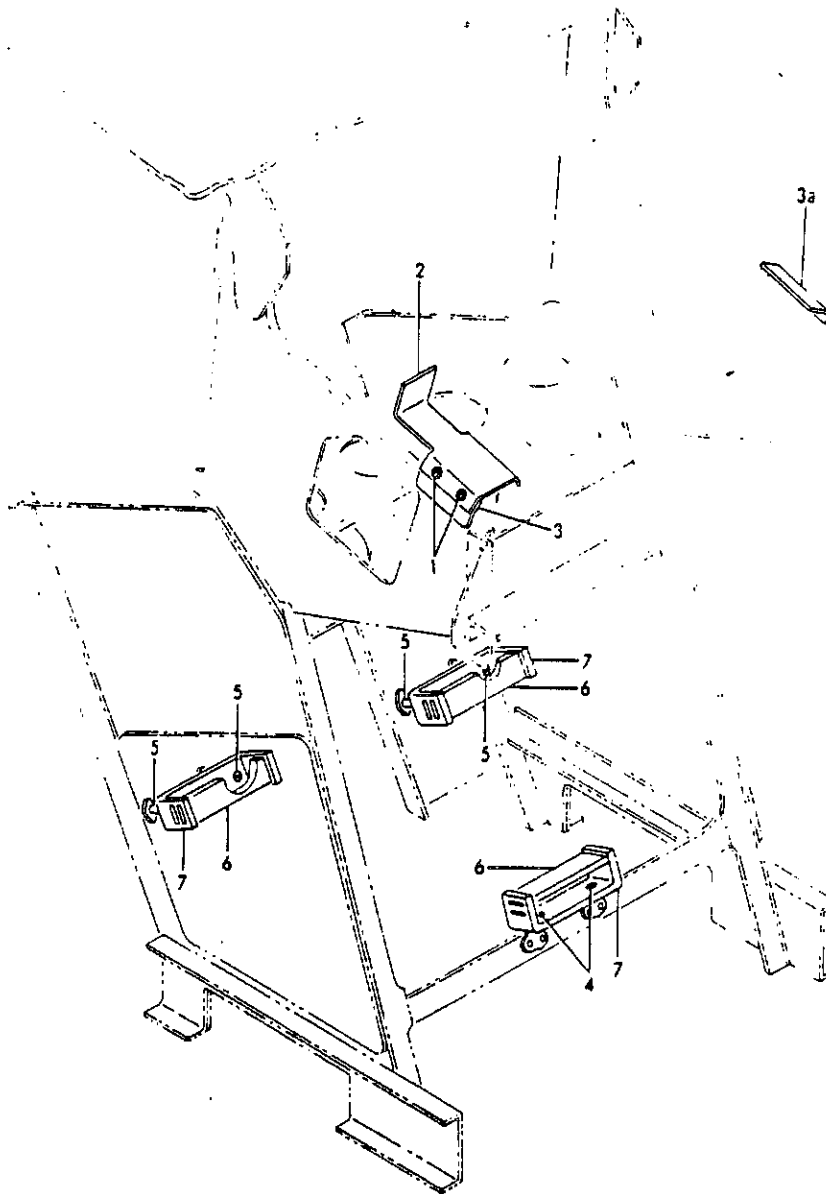
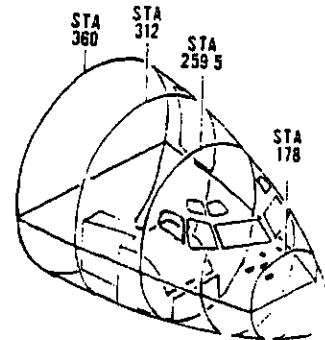


FIGURE 1150. SUPPORT INSTL. MAIN INSTRUMENT PANEL WIRING CLAMP

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
115D	65-61999-1		SUPPORT INSTL, MAIN INSTRUMENT PANEL WIRING CLAMP (SEE 24-3, FIG. 5B, ITEM 139, 24-3, FIG. 5D, ITEM 146, 24-3, FIG. 5E, ITEM 98, 24-3, FIG. 5F, ITEM 178 AND 24-3, FIG. 12, ITEM 55)	5199	RF
1	NAS603-10		. SCREW	5199	2
2	69-49645-4		. GUARD, CABLE.	5199	1
3	69-49645-1		. SUPPORT ASSY.	5199	1
3A	65-61999-4		. ANGLE	5199	1
	MS20470D5		ATTACHING PARTS . RIVET	5199	3
4	NAS5141032-22		. SCREW	5199	2
4A	NAS42DD6-60		. SPACER.	5199	2
4B	BACN10JC3		. NUT	5199	2
5	NAS5141032-15P		. SCREW	5199	4
6	BACC10DS2F		. CLAMP	5199	3
7	BACC10DR3S		. CHANNEL	5199	3
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

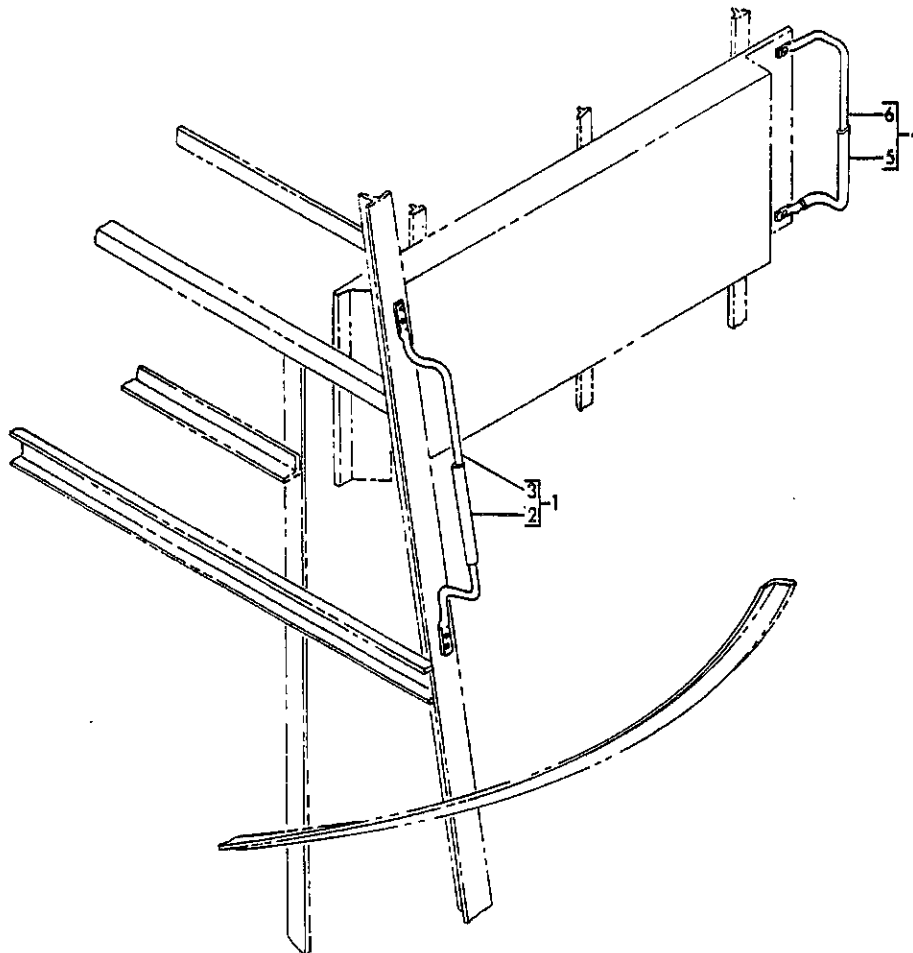
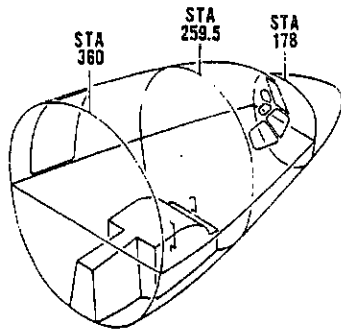


FIGURE 116. SUPPORT INSTL, J1 AND J5 WIRING

BOEING

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
116	65-61913-1	SUPPORT INSTL, J1 AND J5 WIRING							5199		
		. SUPPORT INSTL, J1 AND J5 WIRING (SEE 24-3, FIG. 5B, .							5199	RF	
		ITEM 129, 24-3, FIG. 5D, ITEM 122 AND 24-3, FIG.									
		5E, ITEM 89)									
	1	65-61913-3	. . SUPPORT ASSY.							5199	1
			ATTACHING PARTS								
		NAS600-12P	. . SCREW							5199	4
		AN960PD4	. . WASHER.							5199	4
		BACN10JC04	. . NUT							5199	4
			-----*								
	2	65-61913-7	. . . TUBE, 3/8 IN. PLASTIC							5199	1
	3	65-61913-5	. . . SUPPORT, 1/4 IN. .020 AISI304							5199	1
		65-61913-2	. SUPPORT INSTL, J1 AND J5 WIRING (SEE 24-3, FIG. 5B, .							5199	RF
			ITEM 130, 24-3, FIG. 5D, ITEM 123, 24-3, FIG. 5E,								
			ITEM 90 AND 24-3, FIG. 5F, ITEM 173)								
	4	65-61913-4	. . SUPPORT ASSY.							5199	1
			ATTACHING PARTS								
		NAS601-8P	. . SCREW							5199	2
		AN960PD6	. . WASHER.							5199	2
		BACN10JC06	. . NUT							5199	2
			-----*								
	5	65-61913-8	. . . TUBE, 3/8 IN. PLASTIC							5199	1
	6	65-61913-6	. . . SUPPORT, 1/4 IN. .020 AISI304							5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

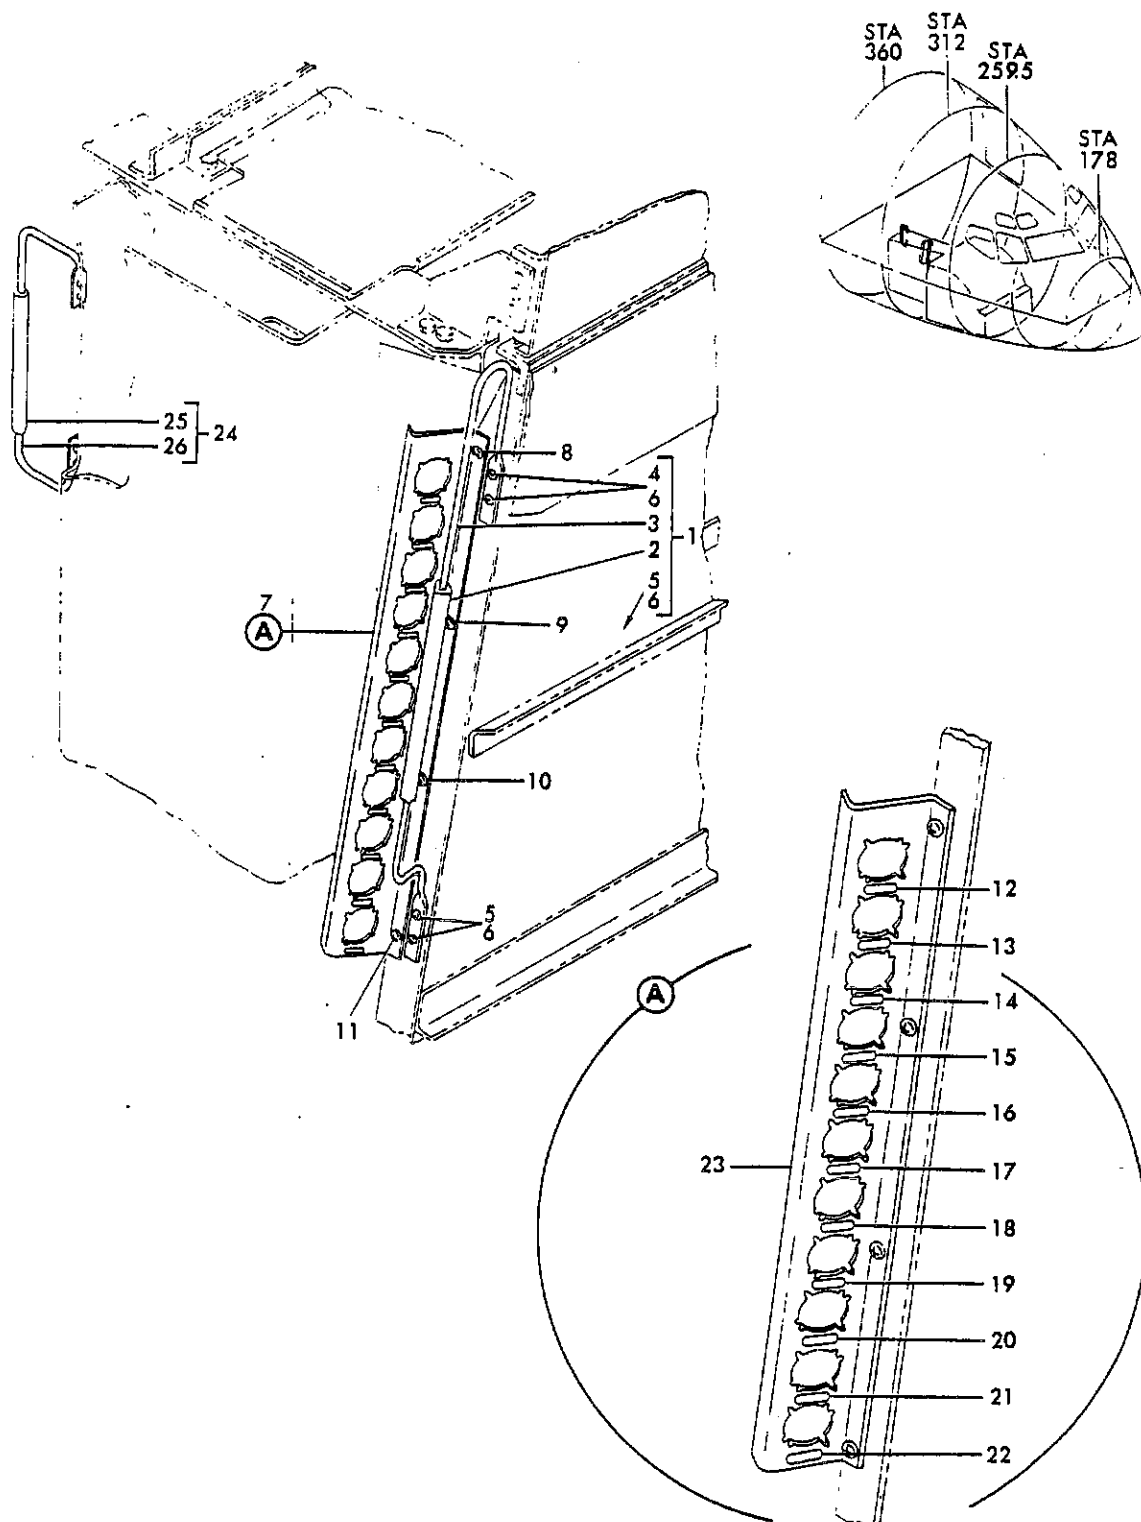


FIGURE 116A. SUPPORT INSTL, J1 AND J5 WIRING



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
116A	65-61913-9		SUPPORT INSTL, J1 AND J5 WIRING	5199	
			. SUPPORT INSTL, J1 AND J5 WIRING (SEE 24-3, FIG. 5B, ITEM 129, 24-3, FIG. 5D, ITEM 122 AND 24-3, FIG. 5F, ITEM 174)	5199	RF
1	65-61913-11		. . . SUPPORT ASSY.	5199	1
2	65-61913-15		. . . TUBE, PLASTIC 3/8 X 31.4 IN.	5199	1
3	65-61913-13		. . . SUPPORT, 1/4 X .020 X 37.8 IN. AISI304.	5199	1
			ATTACHING PARTS		
4	NAS603-9P		. . . SCREW	5199	2
5	NAS601-13P		. . . SCREW	5199	2
6	BACN10JC06		. . . NUT	5199	4

7	65-72908-1		. . . BRACKET ASSY, DISCONNECT.	5199	1
			ATTACHING PARTS		
8	NAS603-9P		. . . SCREW	5199	1
9	NAS603-11P		. . . SCREW	5199	1
10	NAS603-12P		. . . SCREW	5199	1
11	NAS603-13P		. . . SCREW	5199	1

12	BAC27CEE216		. . . DECAL, J5-A	5199	1
13	BAC27CEE217		. . . DECAL, J5-B	5199	1
14	BAC27CEE218		. . . DECAL, J5-C	5199	1
15	BAC27CEE219		. . . DECAL, J5-D	5199	1
16	BAC27CEE220		. . . DECAL, J5-E	5199	1
17	BAC27CEE221		. . . DECAL, J5-F	5199	1
18	BAC27CEE222		. . . DECAL, J5-G	5199	1
19	BAC27CEE223		. . . DECAL, J5-H	5199	1
20	BAC27CEE224		. . . DECAL, J5-J	5199	1
21	BAC27CEE225		. . . DECAL, J5-K	5199	1
22	BAC27CEE226		. . . DECAL, J5-L	5199	1
23	65-72908-2		. . . BRACKET	5199	1
	65-61913-10		. SUPPORT INSTL, J1 AND J5 WIRING (SEE 24-3, FIG. 5B, ITEM 130A, 24-3, FIG. 5D, ITEM 123A AND 24-3, FIG. 5F, ITEM 179)	5199	RF
24	65-61913-12		. . . SUPPORT ASSY.	5199	1
25	65-61913-16		. . . TUBE, PLASTIC 3/8 X 24.1 IN.	5199	1
26	65-61913-14		. . . SUPPORT, 1/4 X .020 X 28.7 IN.	5199	1
			ATTACHING PARTS		
	NAS601-6P		. . . SCREW	5199	4
	BACN10JC06		. . . NUT	5199	4

MISSING ITEM NUMBERS ARE NOT APPLICABLE					

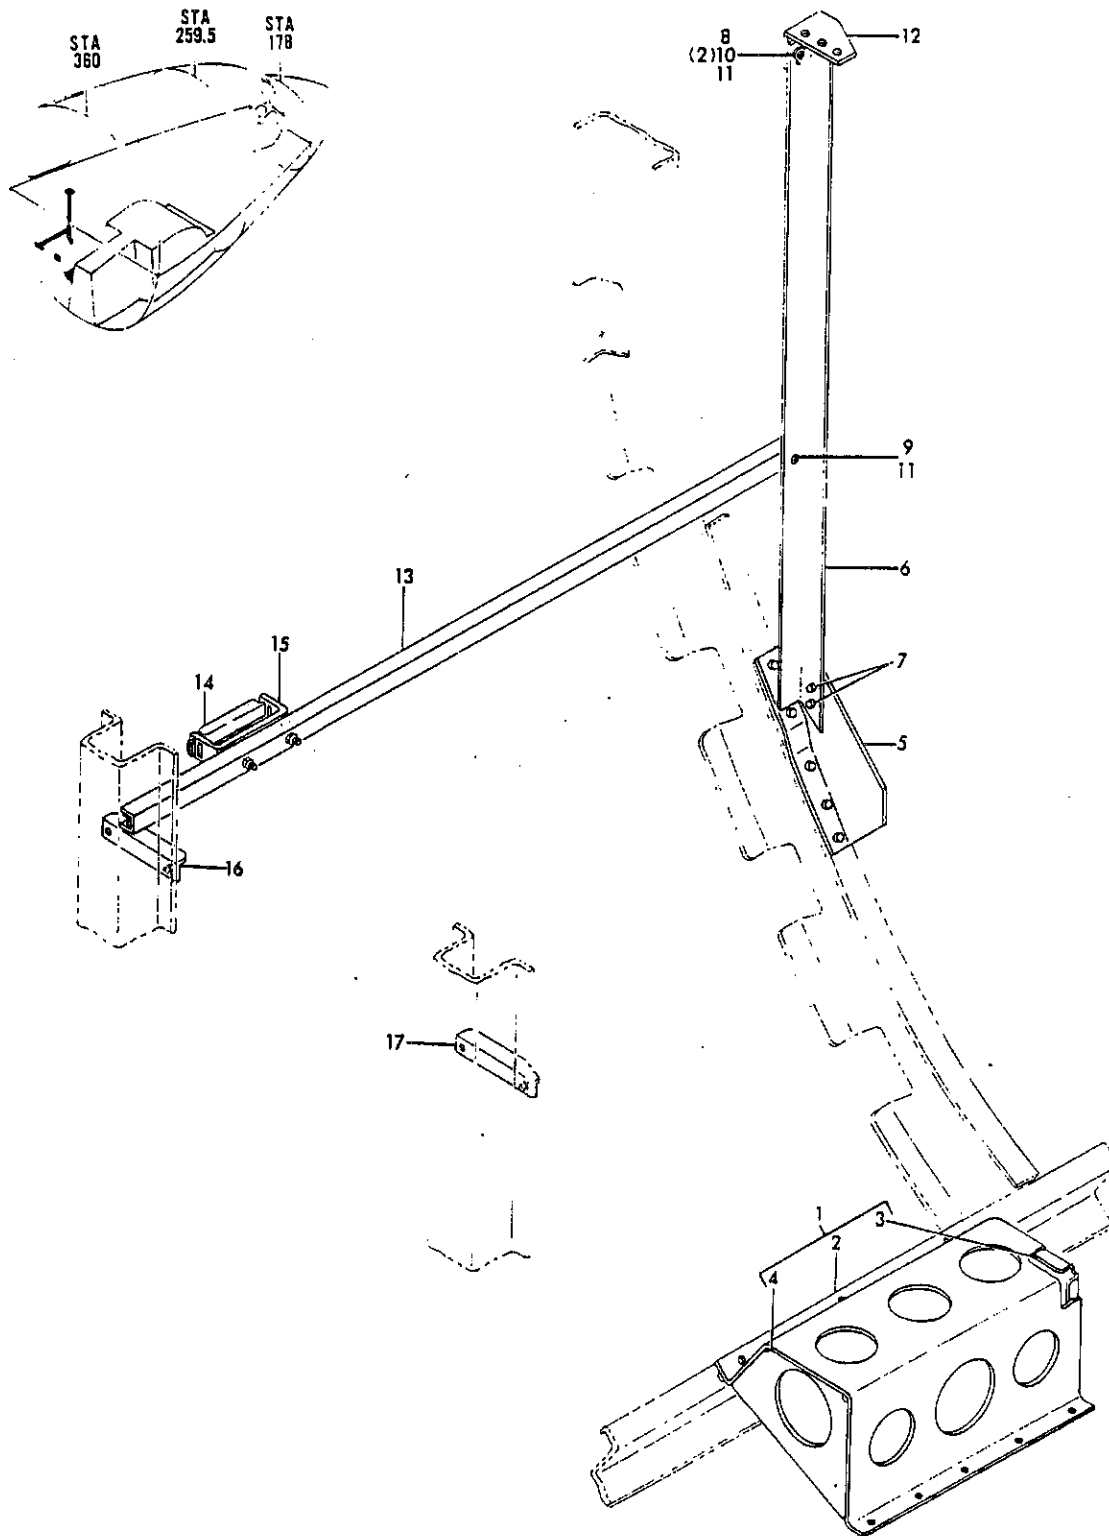


FIGURE 117. SUPPORT INSTL, J25, J26 AND J27 ELECTRICAL EQUIPMENT



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
117	65-58623-1		SUPPORT INSTL, J25, J26 AND J27 ELECTRICAL EQUIPMENT. (SEE 24-3, FIG. 1A, ITEM 76, 24-3, FIG. 1B, ITEM 67A AND 24-3, FIG. 1C, ITEM 65)	5199	RF
1	65-58623-11		. BRACKET ASSY.	5199	1
	BACS12CB3-20		. ATTACHING PARTS	5199	3
	BACS18F758		. SCREW	5199	3
	BACN10LFA3		. SPACER.	5199	3
			. NUT	5199	3
2	65-58623-10		. BRACKET	5199	1
3	65-58623-9		. BRACKET, (FORWARD END).	5199	1
4	65-58623-8		. BRACKET, (AFT END).	5199	1
	MS20470D3		. ATTACHING PARTS	5199	15
			. RIVET	5199	15
5	65-58623-2		. BRACKET	5199	1
	MS20470D5		. ATTACHING PARTS	5199	3
			. RIVET	5199	3
6	65-58623-3		. STANCHION	5199	1
	MS20470D5		. ATTACHING PARTS	5199	2
	BACS12CB3-10		. RIVET	5199	1
	NAS514P1032-7		. SCREW	5199	1
	AN960-10		. SCREW	5199	2
	NAS679A3W		. WASHER.	5199	2
			. NUT	5199	2
12	65-58623-7		. ANGLE	5199	1
	BACS12CB3-10		. ATTACHING PARTS	5199	3
	NAS679A3W		. SCREW	5199	3
			. NUT	5199	3
13	65-58623-4		. CHANNEL	5199	1
	BASC12CB3-7		. ATTACHING PARTS	5199	1
	NAS679A3W		. SCREW	5199	1
			. NUT	5199	1
14	BACC10DS2F		. CLAMP	5199	1
15	BACC10DR3S		. CHANNEL	5199	1
	NAS514P1032-18		. ATTACHING PARTS	5199	2
	NAS43DD3-48		. SCREW	5199	2
	NAS679A3W		. SPACER.	5199	2
			. NUT	5199	2
16	65-58623-6		. ANGLE	5199	1
	MS20470D5		. ATTACHING PARTS	5199	2
			. RIVET	5199	2
17	65-58623-5		. ANGLE	5199	1
	MS20470D5		. ATTACHING PARTS	5199	2
			. RIVET	5199	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

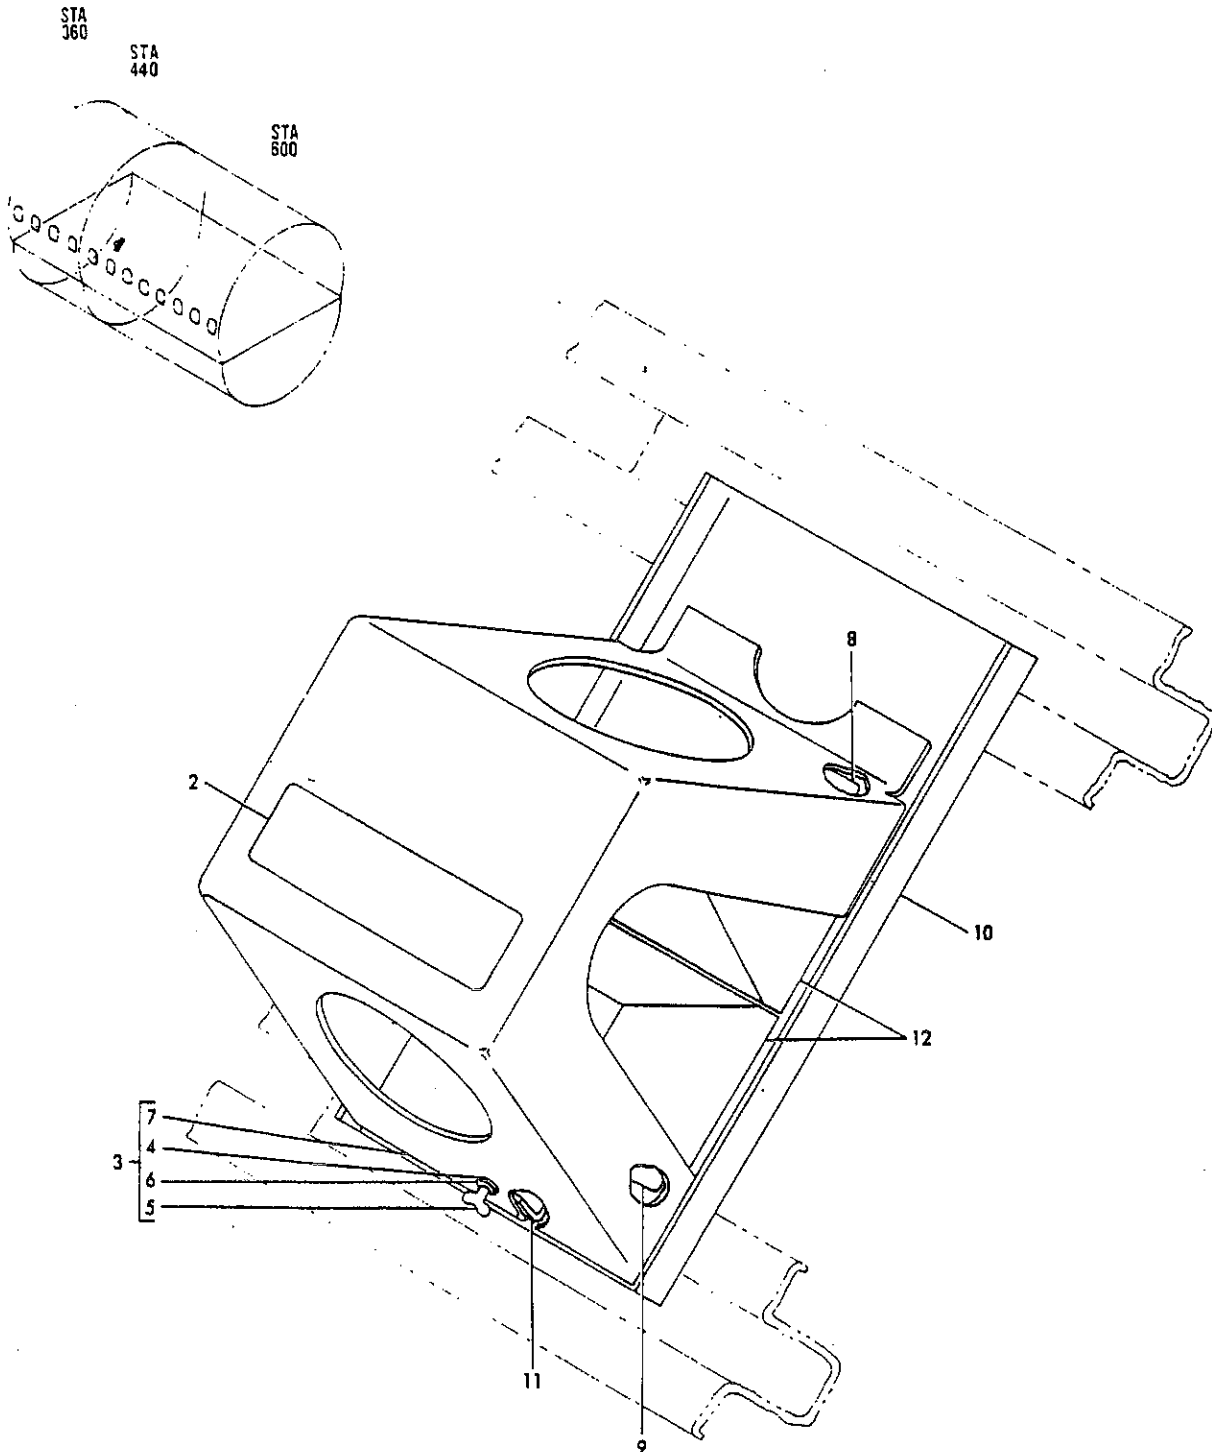


FIGURE 12U. TRANSFORMER INSTL., STATION 367.75 (ELECTRICAL POWER ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
120	65-65179-1	TRANSFORMER INSTL, STATION 367. 75 (ELECTRICAL POWER. . ONLY) (SEE 24-3, FIG. 6B, ITEM 102, 24-3, FIG. 6C, ITEM 86, 24-3, FIG. 6D, ITEM 50, 24-3, FIG. 6E, ITEM 58 AND 24-3, FIG. 6F, ITEM 38)								RF
2	BAC27CEE356	. MARKER-ALUMINUM FOIL, AUTO TRANSFORMERS								1
3	69-52678-1	. COVER ASSY, STATION 367.75 TRANSFORMER.								1
4	BACW10X2	. . WASHER, STUD RETAINING.								1
5	BACS21Y5W	. . STUD.								1
6	BACG20AA	. . GROMMET								1
7	69-52678-2	. . COVER								1
8	BAC27CEE300	. SCOTCH-CAL, RT 274.								1
9	BAC27CEE302	. SCOTCH-CAL, RT 276.								1
10	69-52677-1	. TRAY ASSY, STATION 367.75 TRANSFORMER								1
11	69-52677-3	. . CLIP ASSY								1
12	6746	. TRANSFORMER, AUTO (V95266).								2
		ATTACHING PARTS								
	BACS12CB3-7	. SCREW								8
		. FOR REFERENCE TO OTHER TRANSFORMER DETAILS, SEE NHA .								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

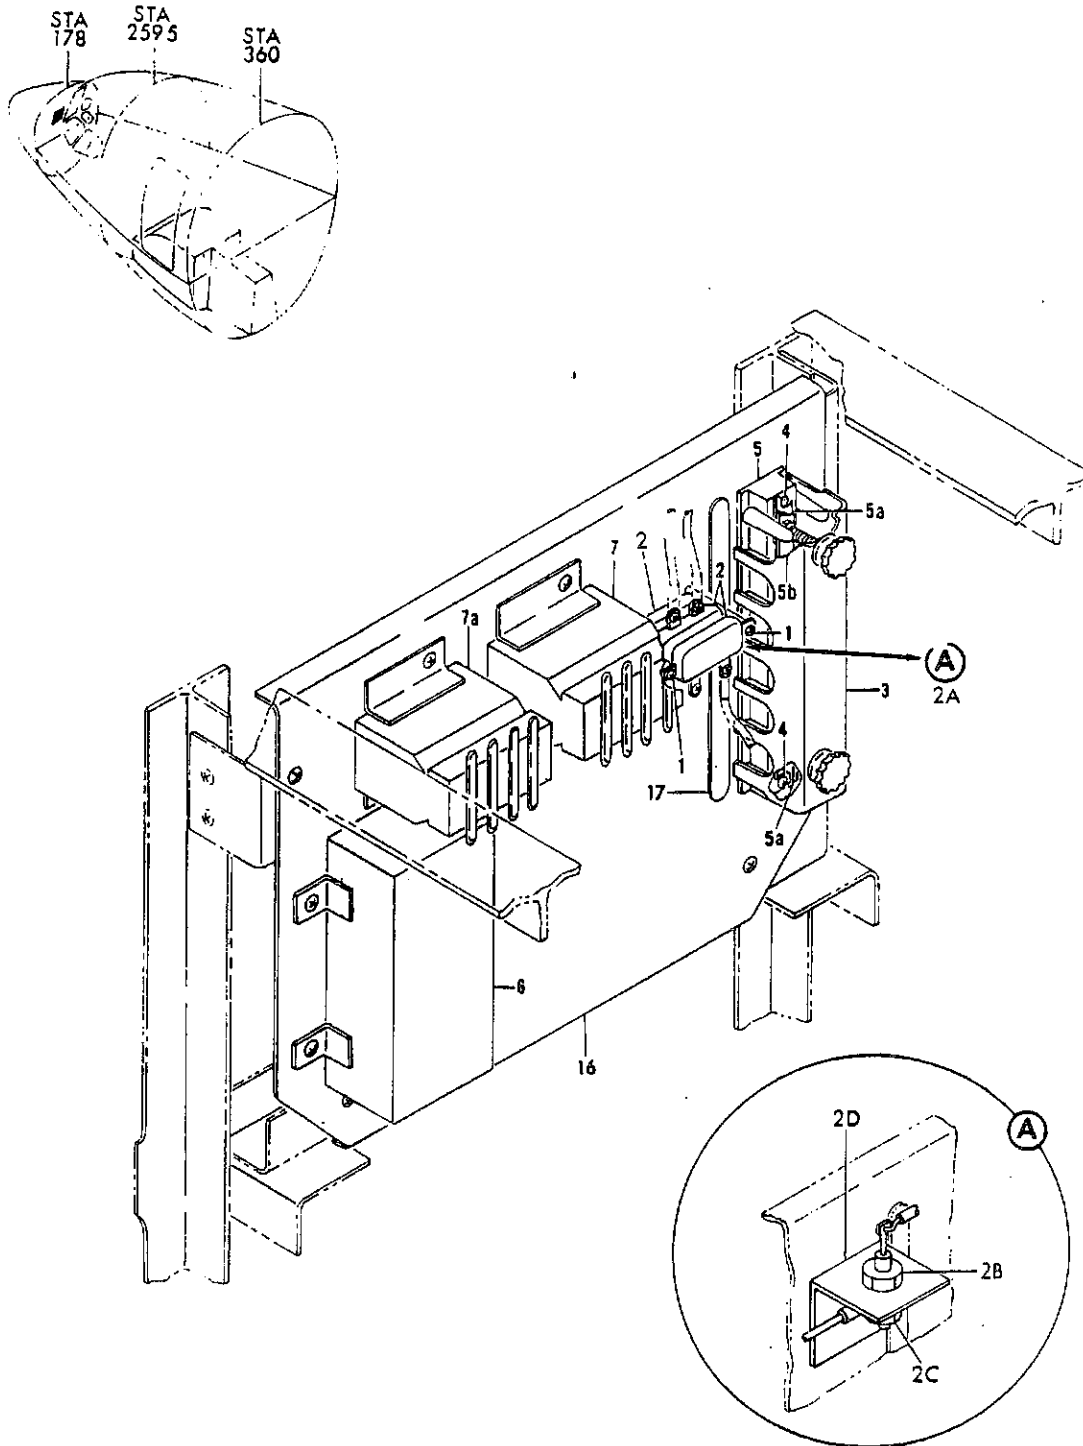


FIGURE 122. LIGHTING INSTL, STATION 178 RESISTORS AND INTEGRAL LIGHTING TRANSFORMER LH (ELECTRICAL POWER ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 122	65-16007	LIGHTING INSTL, STATION 178 RESISTORS AND INTEGRAL. . .	0150	RF
R		LIGHTING TRANSFORMER LH (SEE 24-3, FIG. 1A, ITEM		
R		66, 24-3, FIG. 1B, ITEM 59 AND 24-3, FIG. 1C, ITEM		
R		55)		
R 7	66238	. AUTOTRANSFORMER, (V95266)	0150	1
R		(OPTIONAL 6623 (V95266))		
R 7	6623	. AUTOTRANSFORMER, (V95266)	0150	1
R		(OPTIONAL TO 66238 (V95266))		
R	NAS601-5	ATTACHING PARTS		
		. SCREW	0150	2
		-----*		
R 7A	66238	. AUTOTRANSFORMER, (V95266)	0150	1
R		(OPTIONAL 6623 (V95266))		
R 7A	6623	. AUTOTRANSFORMER, (V95266)	0150	1
R		(OPTIONAL TO 66238 (V95266))		
R	NAS601-5	ATTACHING PARTS		
		. SCREW	0150	2
		-----*		
R 16	65-17043-1	. PANEL ASSY, STATION 178 LIGHTING EQUIPMENT.	0150	1
R		ATTACHING PARTS		
R	NAS603-11	. SCREW	0150	4
		-----*		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

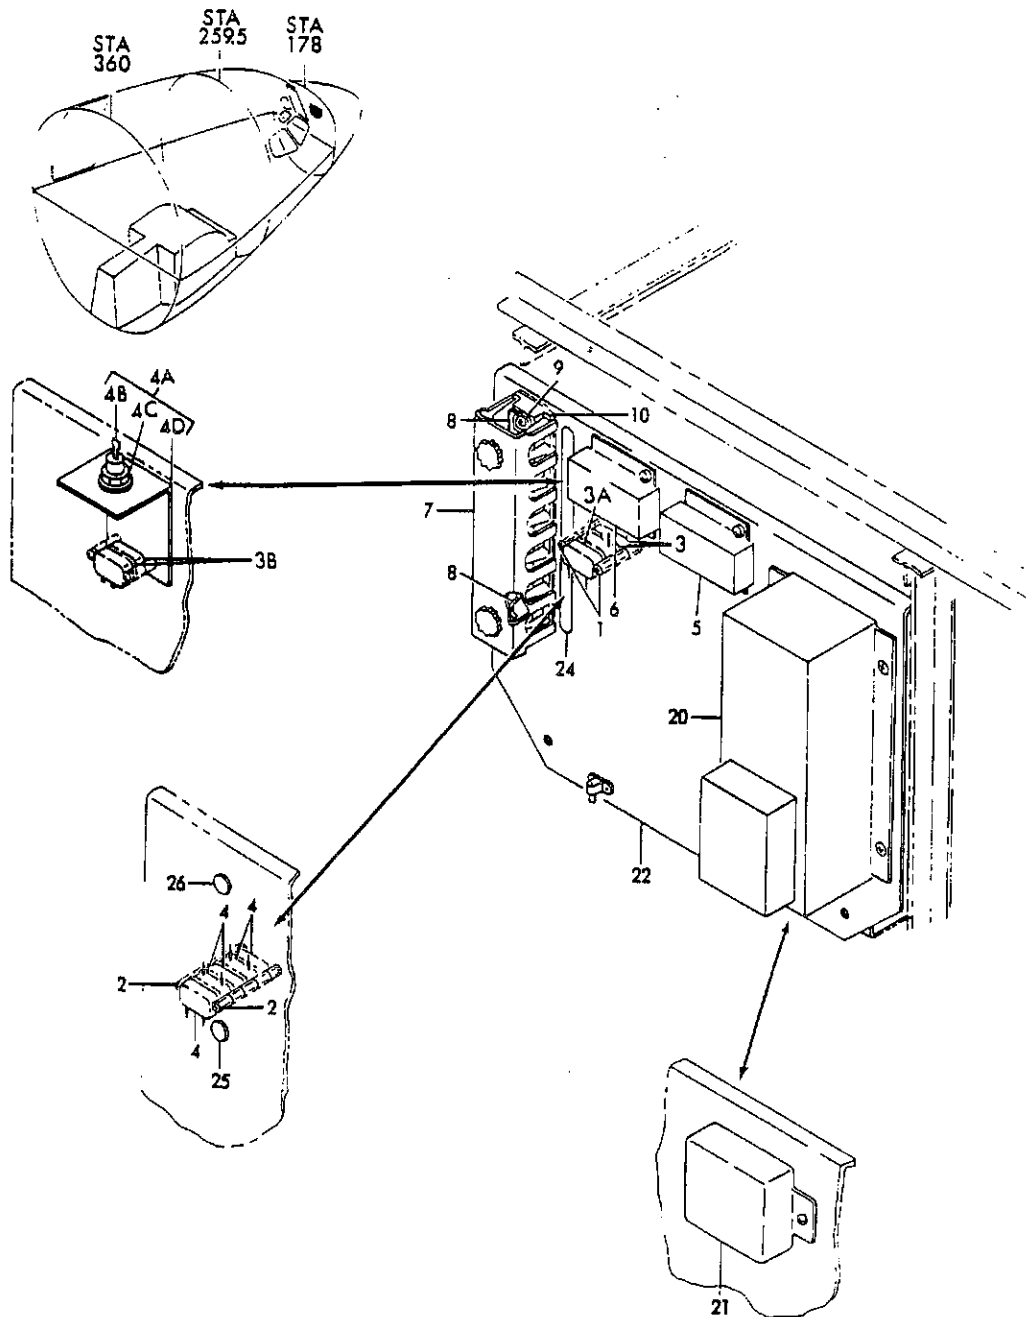


FIGURE 123. LIGHTING INSTL. STATION 178 4 WATT BALLAST AND LIGHTING RESISTORS RH (ELECTRICAL POWER ONLY)

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	123	65-16005	LIGHTING INSTL, STATION 178 4 WATT BALLAST AND LIGHTING							0150	RF
R			RESISTORS RH (ELECTRICAL POWER ONLY) (SEE 24-3,								
R			FIG. 1A, ITEM 67, 24-3, FIG. 1B, ITEM 60 AND 24-3,								
R	6	6623B	FIG. 1C, ITEM 56)								
R		NAS601-5P	. AUTOTRANSFORMER (V95266).							0150	1
R			ATTACHING PARTS								
R			. SCREW							0150	2
R			-----*								
R	22	65-17043-11	. PANEL ASSY, STATION 178 LIGHT EQUIPMENT							0150	1
R		NAS603-11	ATTACHING PARTS								
R		NAS603-11	. SCREW							0150	3
R		NAS603-11	. SCREW							0150	1
R			-----*								
			. FOR REFERENCE TO OTHER LIGHTING DETAILS, SEE NHA. . .							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											


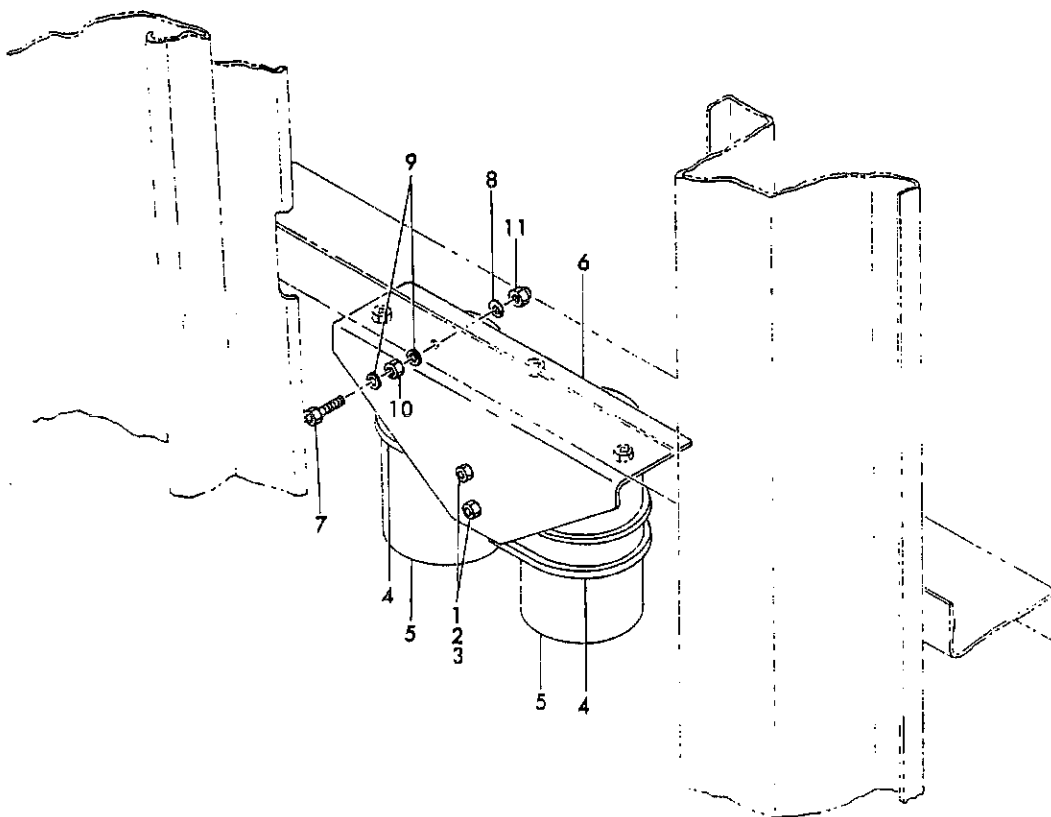


FIGURE 128. CAPACITOR INSTL, STATION 400

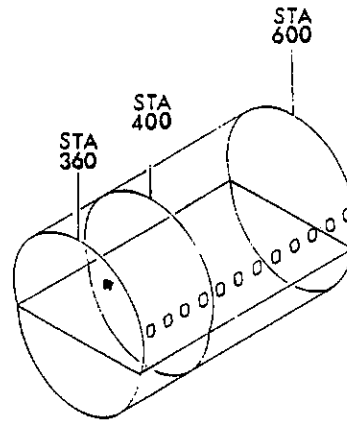

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 128	65-19378-6	CAPACITOR INSTL, STATION 400 (SEE FIG. 73B, ITEM 40).	0350	RF
R 1	BACSI2CB3-10	. SCREW	0350	2
R 2	AN960D3	. WASHER	0350	2
R 3	BACN10JC3	. NUT	0350	2
R 4	MS21919WDG29	. CLAMP	0350	2
R 5	HLVB1050	. CAPACITOR, (V56289)	0350	2
R 6	69-58485-1	. BRACKET, SUPPORT.	0350	1
		ATTACHING PARTS		
R	BACSI2CB3-6	. SCREW	0350	3
R	BACN10JC3	. NUT	0350	3
		-----*		
R 7	BACSI2CB3-12	. SCREW	0350	1
R 8	MS35338-100	. WASHER	0350	1
R 9	AN960D10L	. WASHER	0350	2
R 10	MS20341-10A	. NUT	0350	1
R 11	BACN10JC3	. NUT	0350	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

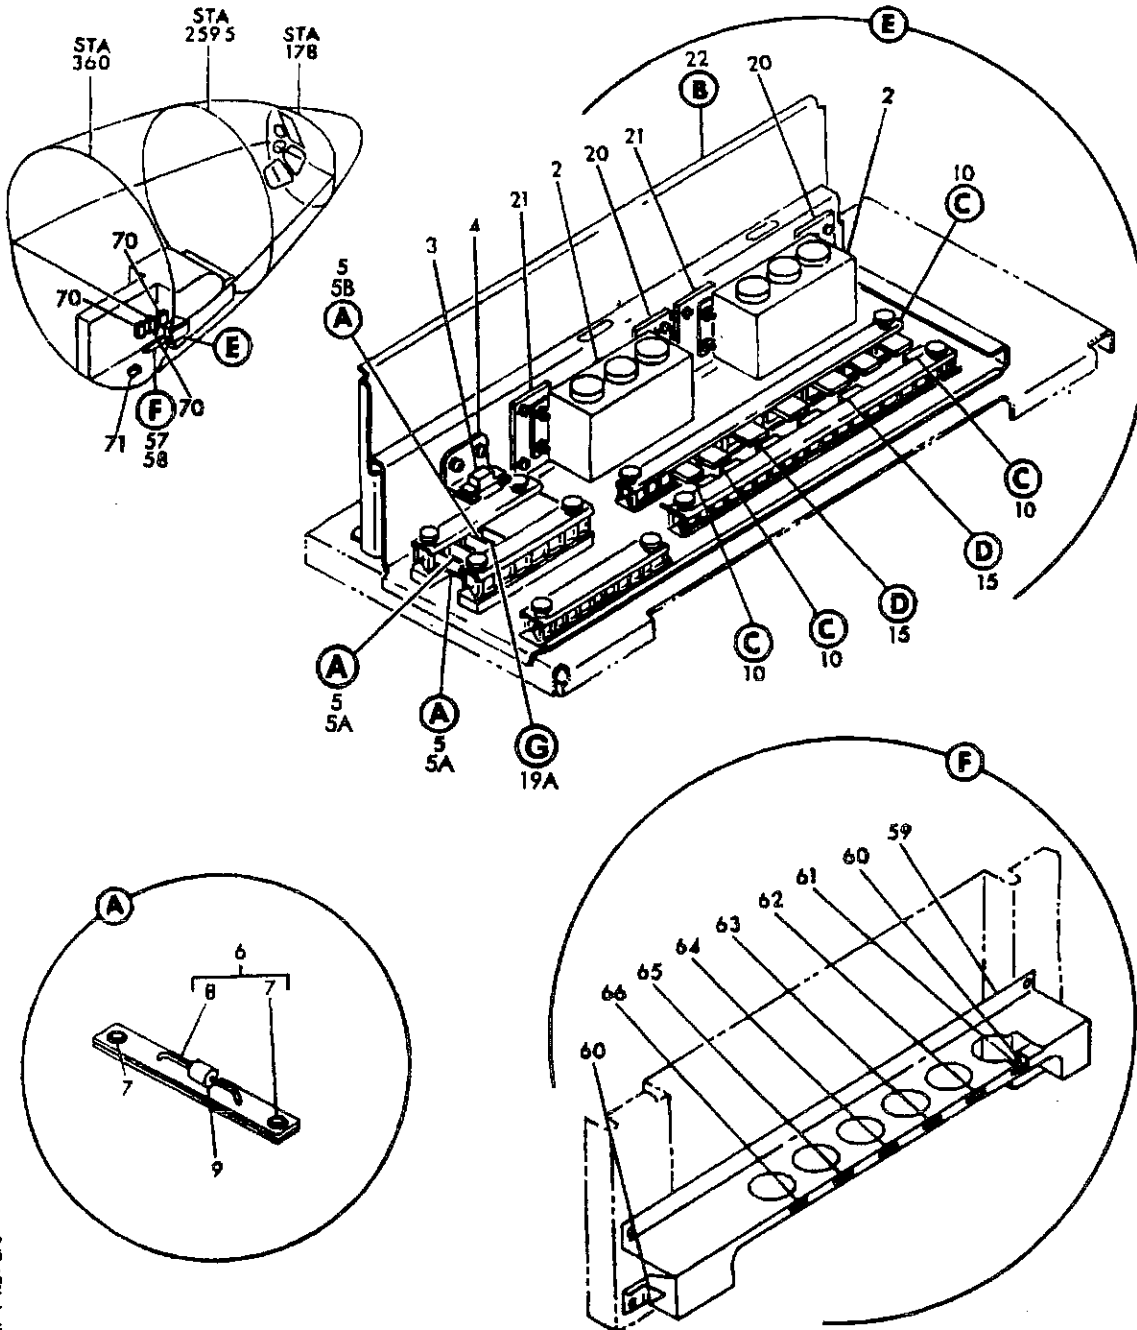


FIGURE 130G. TRAY INSTL, STATION 330 AL29 SWITCHING RELAYS (ELECTRICAL POWER ONLY) (SHEET 1)

A 2413130G SHT 1 REV 270

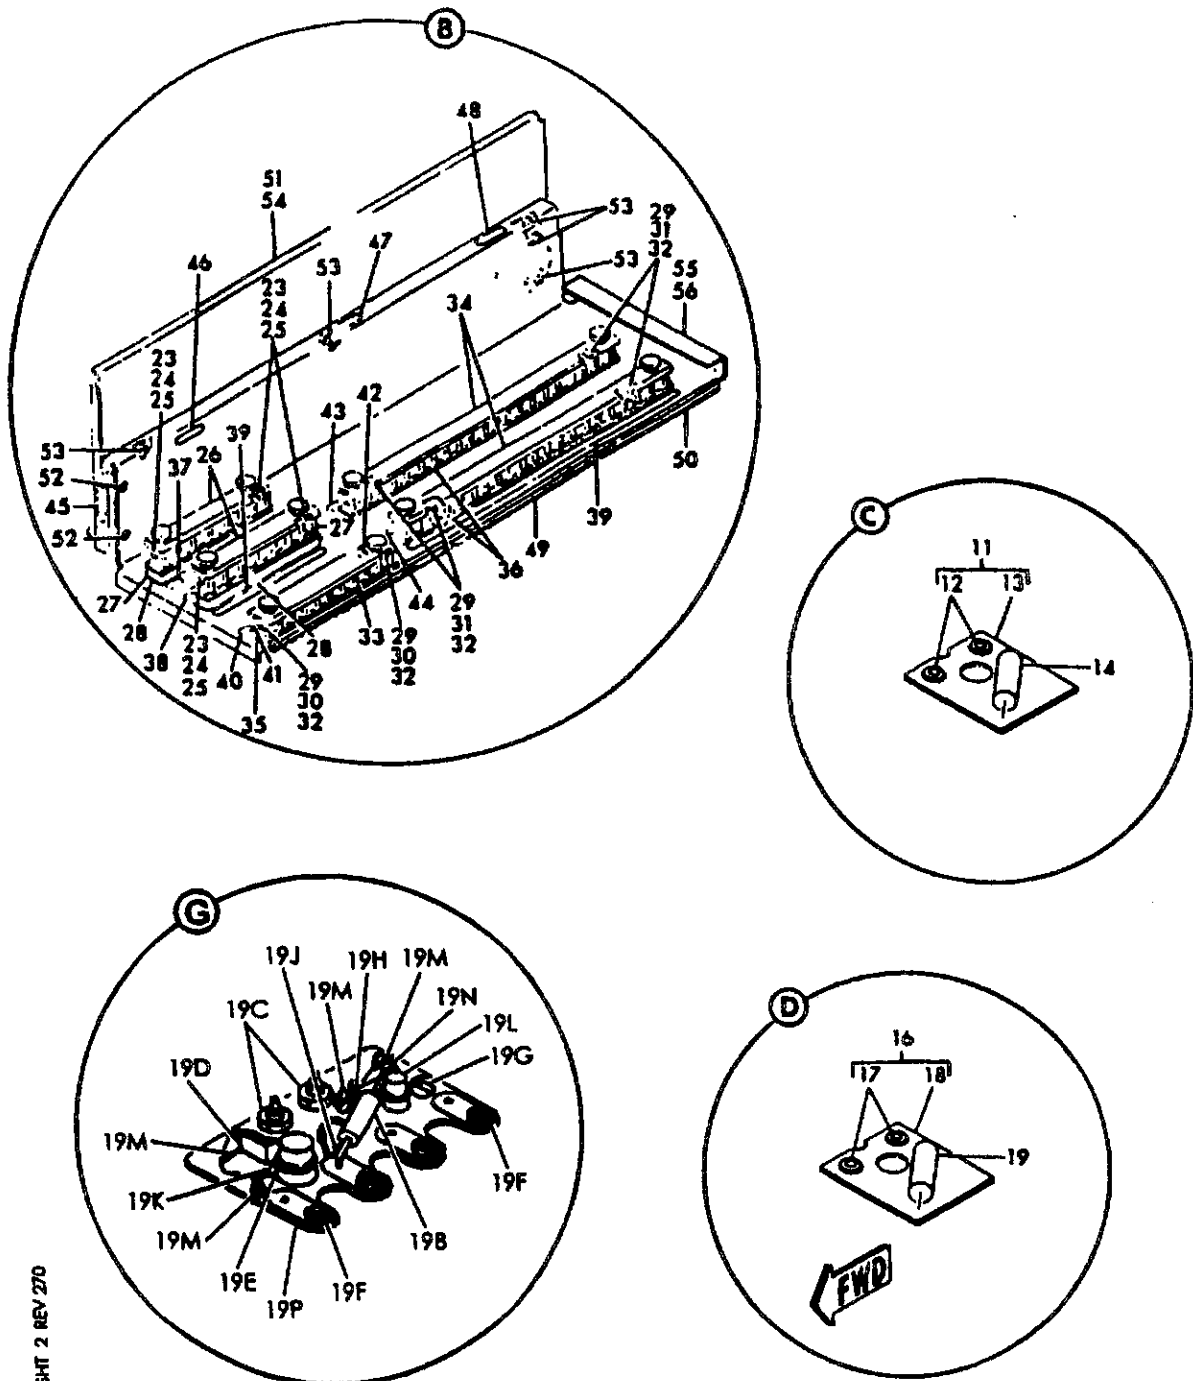


FIGURE 130G. TRAY INSTL. STATION 330 R229 SWITCHING RELAYS (ELECTRICAL POWER ONLY) (SHEET 2)

A 2413130G SHT 2 REV 270

BOEING

707

PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
130G	65-77233-1		TRAY INSTL, STATION 330 RJ29 SWITCHING RELAYS (ELECTRICAL POWER ONLY) (VARIABLE DWG:65-77233-5013) (SEE 24-3, FIG. 1C, ITEM 31)	5199	RF
	65-77233-27		TRAY ASSY, EQUIPMENT (ELECTRICAL POWER ONLY).	5199	1
	NAS603-7P		ATTACHING PARTS	5199	6
	BACN10JC3		SCREW	5199	6
			NUT	5199	6
2	172934-001		RELAY, (V81840)	5199	2
	NAS514P1032-8		ATTACHING PARTS	5199	8
	BACN10JC3		SCREW	5199	8
			NUT	5199	8
R	3		RELAY (DELETED BY RAF ALLM 4560A20-004)	5199	1
R	4		BRACKET (DELETED BY RAF ALLM 4560A20-004)	5199	1
	NAS602-79		ATTACHING PARTS	5199	2
			SCREW	5199	2
R	5A		CIRCUIT ASSY, PRINTED	5199	2
R	5B		CIRCUIT ASSY, PRINTED (DELETED BY RAF	5199	1
R			ALLM 4560A20-004)		
	6		BOARD ASSY, ETCHED	5199	1
	7		EYELET, (V04264)	5199	2
	8		BOARD, ETCHED	5199	1
	9		DIODE, (V81349)	5199	1
	10		CIRCUIT ASSY, PRINTED	5199	10
	11		BOARD ASSY, ETCHED	5199	1
	12		EYELET, (V04264)	5199	2
	13		BOARD, ETCHED	5199	1
	14		RESISTOR	5199	1
	15		CIRCUIT ASSY, PRINTED	5199	3
	16		BOARD ASSY, ...	5199	1
	17		EYELET, (V04264)	5199	2
	18		BOARD, ETCHED	5199	1
	19		RESISTOR	5199	1
R	19A		PLATE ASSY, DIODE AND RELAY CIRCUIT (ADDED BY RAF ALLM 4560A20-004)	5199	1
R	19B		CAPACITOR, (V56289)	5199	1
R	19C		NUT	5199	2
R	19D		RELAY, (V82050)	5199	1
R	19E		RECTIFIER, SILICON CONTROL (V13688) (V13688)) (OPTIONAL C6B (V13688))	5199	1
R	19E		RECTIFIER, SILICON CONTROL (V13688) JANTX2N2329S (V13688))	5199	1
R	19E		RECTIFIER, SILICON CONTROL (V13688)	5199	1
R	19E		RECTIFIER, SILICON CONTROL (V13688)	5199	1
R	19F		EYELET, ROLLED FLANGE, GOLD PLATED. (V04264)	5199	4
R	19F		EYELET, ROLLED FLANGE, GOLD PLATED. (V04264)	5199	4
R	19F		EYELET, ROLLED FLANGE, GOLD PLATED. (V04264)	5199	4
R	19G		RESISTOR	5199	1
R	19H		RESISTOR	5199	1
R	19J		RESISTOR	5199	1
R	19K		RESISTOR	5199	1
R	19L		TRANSISTOR, UNIUNCTION (V81349)	5199	1
R	19M		TERMINAL	5199	4
R	19N		TERMINAL	5199	1
R	19P		BOARD	5199	1
	20		PLATE, ADAPTER	5199	2
	21		PLATE, ADAPTER	5199	2
			ATTACHING PARTS		
	NAS603-10P		SCREW	5199	8
			TRAY ASSY, (ELECTRICAL POWER ONLY).	5199	1
	22		SCREW	5199	4
	23		WASHER	5199	4
	24		NUT	5199	4
	25		COVER ASSY.	5199	2
	26		BOARD ASSY, TERMINAL	5199	2
	27		BLOCK, TERMINAL MOUNTING.	5199	2
	28		SCREW	5199	6
	29		WASHER	5199	2
	30		WASHER	5199	2

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
130G 31	MS25227-2A	. . .	WASHER.	5199	4
32	BACN10JC04	. . .	NUT	5199	6
33	MS18029-1S10	. . .	COVER ASSY.	5199	1
34	MS18029-1S20	. . .	COVER ASSY.	5199	2
35	MS27212-1-10	. . .	BOARD ASSY, TERMINAL.	5199	1
36	MS27212-1-20	. . .	BOARD ASSY, TERMINAL.	5199	2
37	BACM10L00-10GK	. . .	MARKER-ALUMINUM FOIL, E	5199	1
38	BACM10L00-10GL	. . .	MARKER-ALUMINUM FOIL, F	5199	1
39	BACM10N110-2CR8	. . .	MARKER-ALUMINUM FOIL, 1 20.	5199	2
40	BACM10L00-10GJ	. . .	MARKER-ALUMINUM FOIL, D	5199	1
41	BACM10N00-2S	. . .	MARKER-ALUMINUM FOIL, 1	5199	1
42	BACM10N00-2PF	. . .	MARKER-ALUMINUM FOIL, 10.	5199	1
43	BACM10L00-10GF	. . .	MARKER-ALUMINUM FOIL, A	5199	1
44	BACM10L00-10GG	. . .	MARKER-ALUMINUM FOIL, B	5199	1
45	BAC27CEE575	. . .	MARKER-ALUMINUM FOIL, RJ29.	5199	1
46	BAC27CEE801	. . .	MARKER-ALUMINUM FOIL, R4324.	5199	1
47	BAC27CEE800	. . .	MARKER-ALUMINUM FOIL, R4323.	5199	1
48	BAC27CEE799	. . .	MARKER-ALUMINUM FOIL, R4322.	5199	1
49	BACG20ZA1275	. . .	GROMMET	5199	1
50	BACG20ZA745	. . .	GROMMET	5199	1
51	65-77233-5	. . .	SIDE ASSY	5199	1
			ATTACHING PARTS		
52	NAS603-7P	. . .	SCREW	5199	2
53	NAS514P1032-7	. . .	SCREW	5199	5
			-----*		
54	65-77233-8	. . .	MEMBER, SIDE.	5199	1
55	65-77233-17	. . .	BASE ASSY	5199	1
56	65-77233-16	. . .	MEMBER, BASE.	5199	1
57	65-77233-30	. . .	BRACKET INSTL, CONNECTOR.	5199	1
58	65-77233-29	. . .	BRACKET ASSY, CONNECTOR	5199	1
59	65-77233-28	. . .	BRACKET	5199	1
60	BACG20ZA2360	. . .	GROMMET	5199	AR
61	BAC27CEE2117	. . .	MARKER-ALUMINUM FOIL, RJ29-1.	5199	1
62	BAC27CEE2118	. . .	MARKER-ALUMINUM FOIL, RJ29-2.	5199	1
63	BAC27CEE2119	. . .	MARKER-ALUMINUM FOIL, RJ29-3.	5199	1
64	BAC27CEE2120	. . .	MARKER-ALUMINUM FOIL, RJ29-4.	5199	1
65	BAC27CEE2121	. . .	MARKER-ALUMINUM FOIL, RJ29-5.	5199	1
66	BAC27CEE2122	. . .	MARKER-ALUMINUM FOIL, RJ29-6.	5199	1
			FOR REFERENCE TO OTHER TRAY DETAILS, SEE NHA.	5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

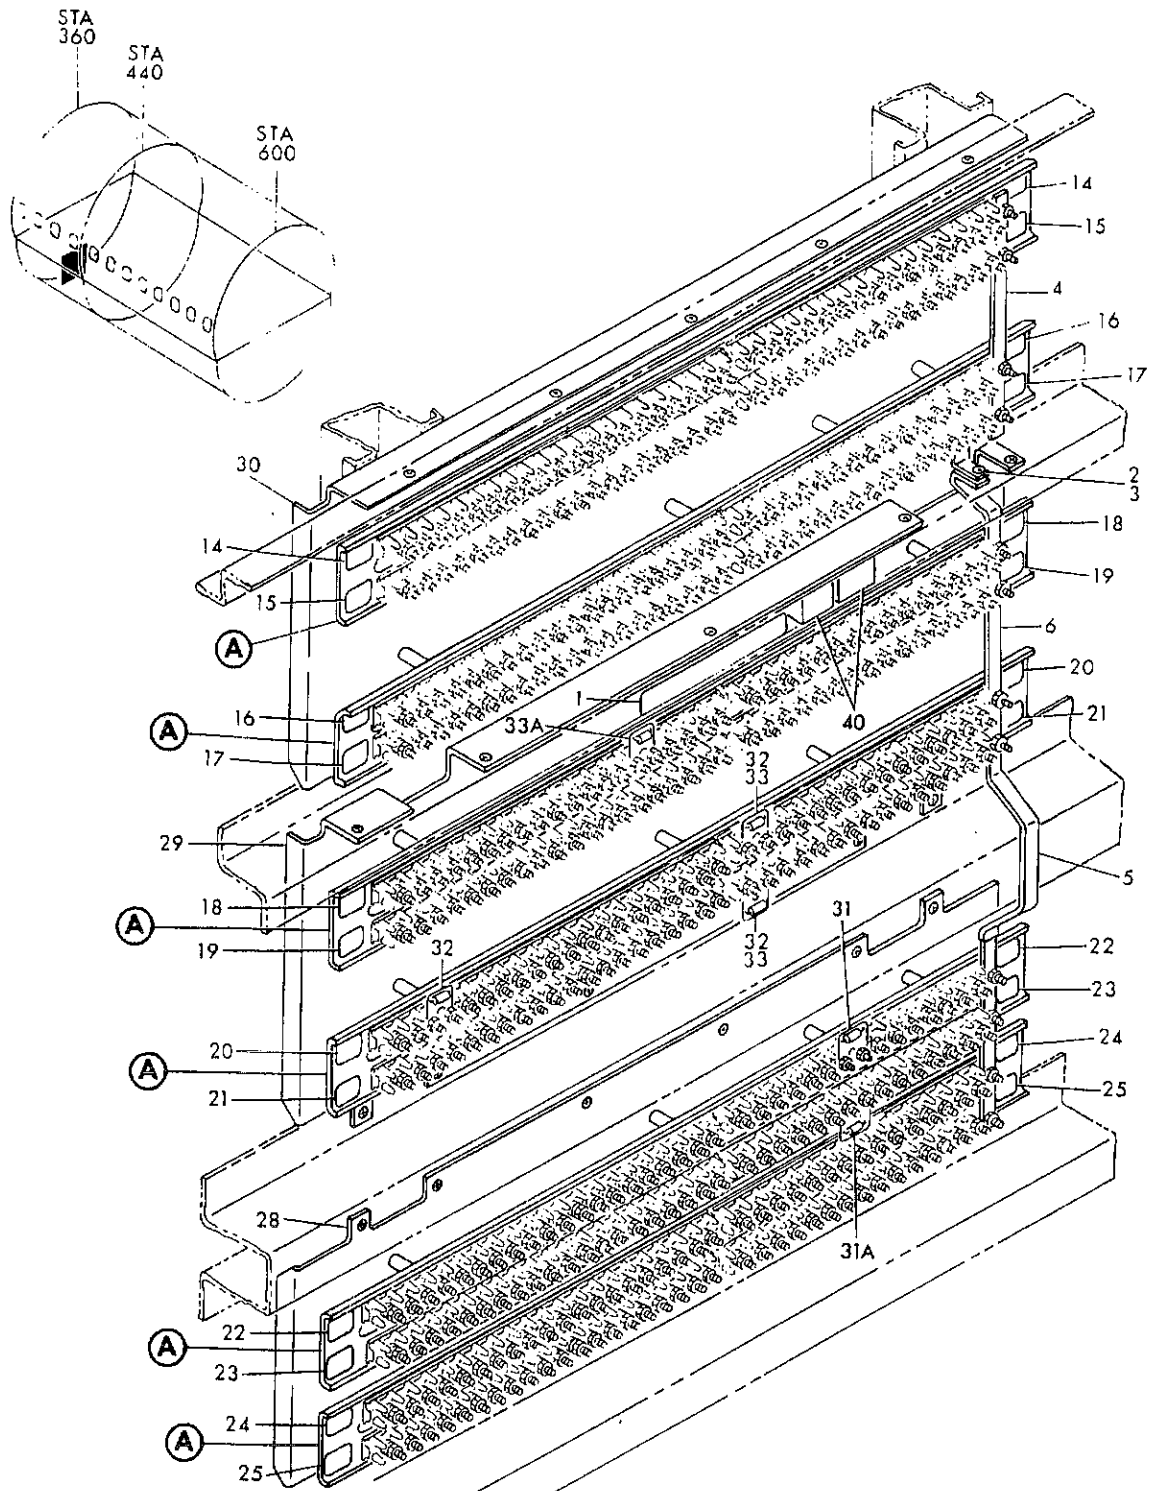


FIGURE 136. SHIELD INSTL, STATION 400 RJ11ELECTRONIC WIRE (SHEET 1)

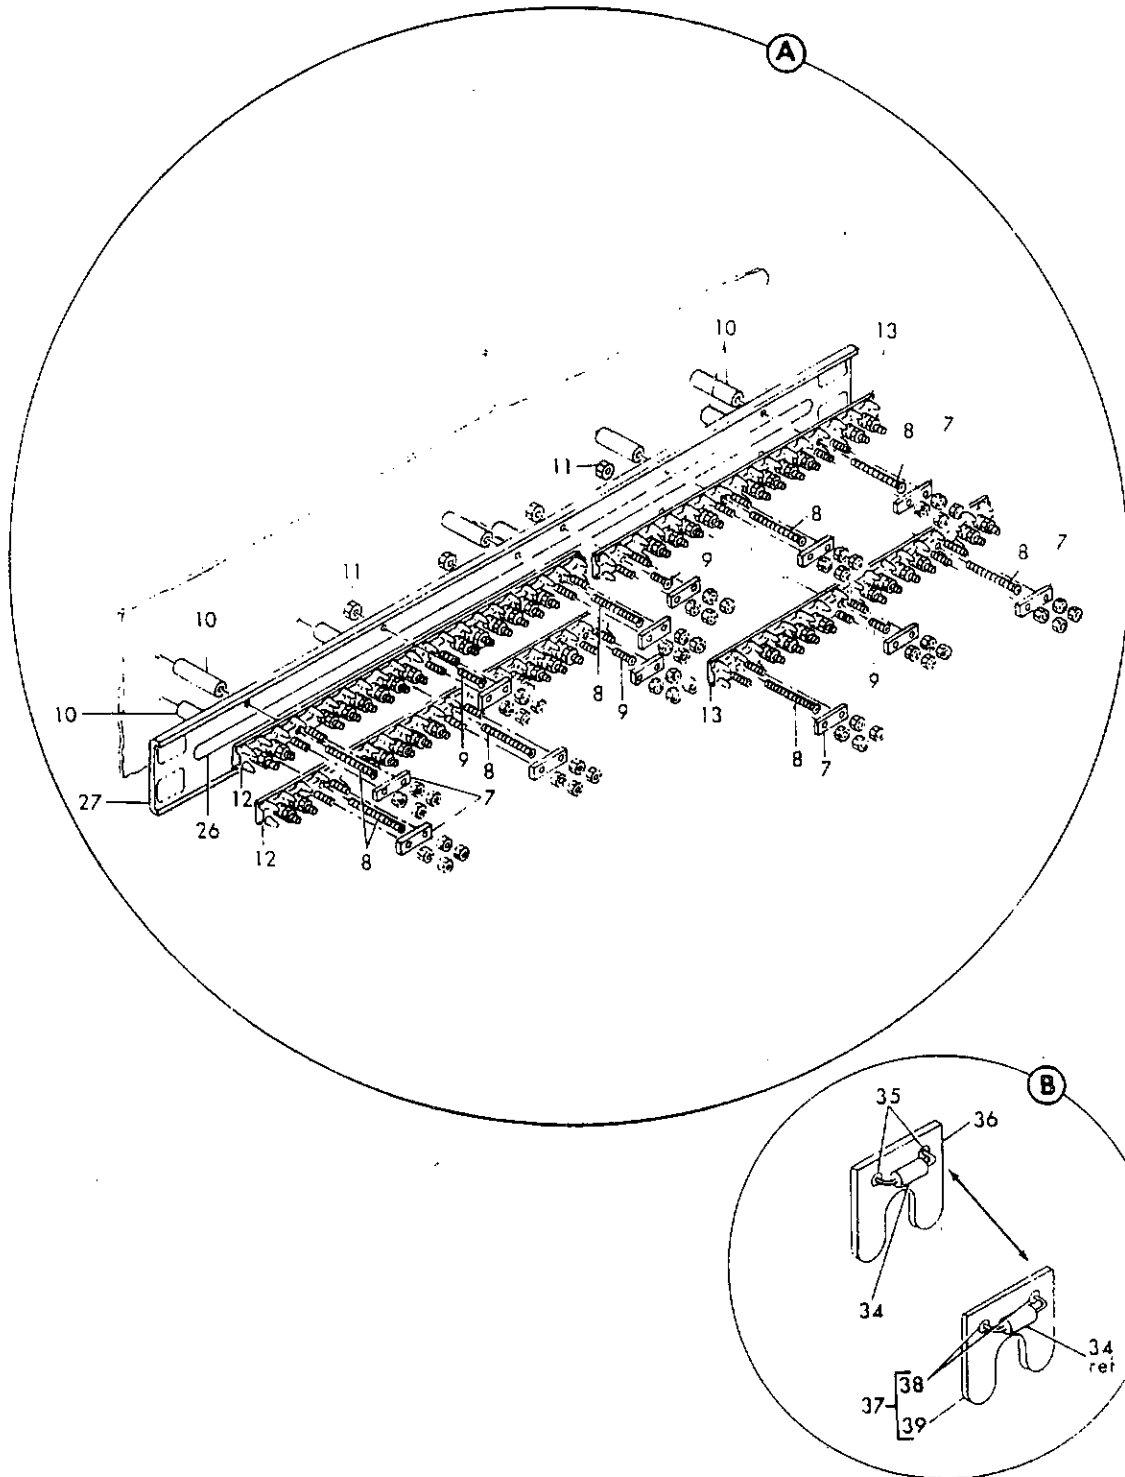


FIGURE 136. SHIELD INSTL, STATION 400 RJ11 ELECTRONIC WIRE (SHEET 2)

NOV 21/90

24-13-136

DETAILED PARTS LIST
24-13-136
PAGE 1

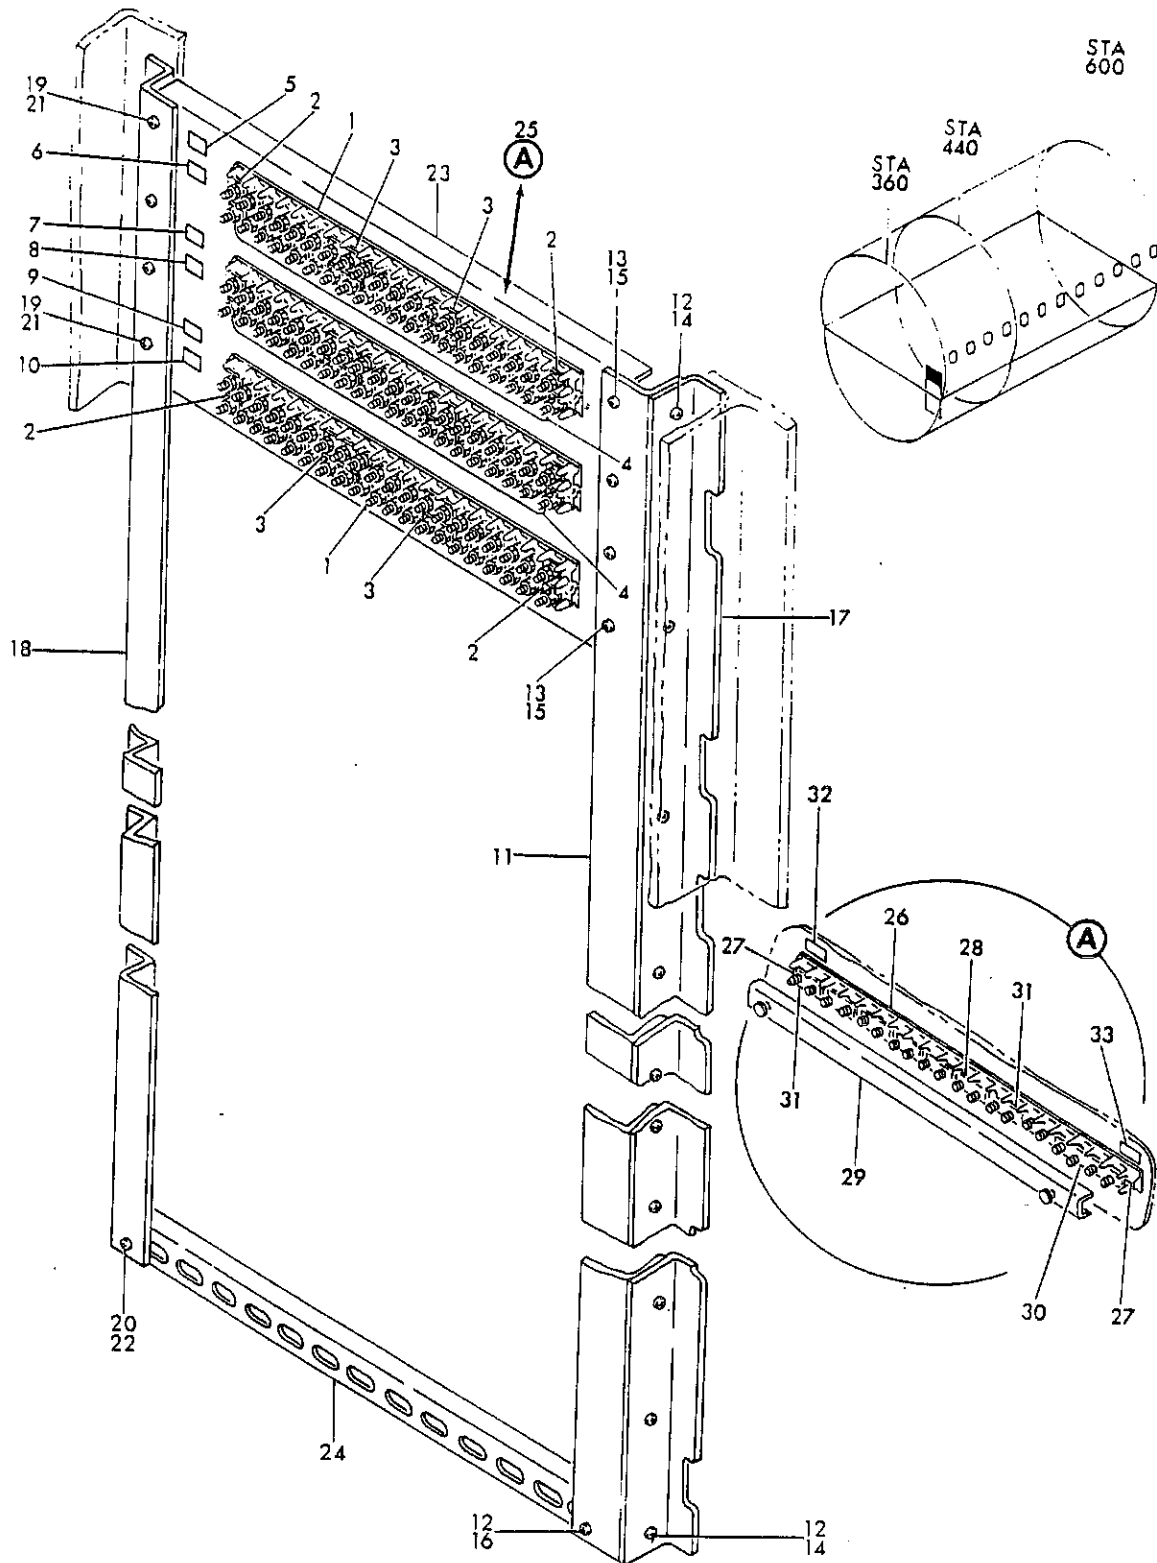


FIGURE 137. TERMINAL AND SUPPORT INSTL, RJ12



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 137	65-19418-1	TERMINAL AND SUPPORT INSTL, RJ12 (SEE FIG. 73B, ITEM. 16A)	0150	RF
R 1	MS27212-1-20	TERMINAL BOARD ASSY	0150	6
R	NAS600-6P	ATTACHING PARTS		
R	NAS679A04W	SCREW	0150	24
		NUT	0150	24
		-----*		
R 2	MS25227-2A	STRIP	0150	12
R 3	MS25227-1A	STRIP	0150	12
R 4	BACM10N110-2CRB	MARKER-ALUMINUM FOIL, 1 THRU 20	0150	2
R 5	BACM10U00-10GU	MARKER-ALUMINUM FOIL, N	0150	1
R 6	BACM10U00-10GV	MARKER-ALUMINUM FOIL, P	0150	1
R 7	BACM10U00-10GW	MARKER-ALUMINUM FOIL, R	0150	1
R 8	BACM10U00-10GX	MARKER-ALUMINUM FOIL, S	0150	1
R 9	BACM10U00-10GY	MARKER-ALUMINUM FOIL, T	0150	1
R 10	BACM10U00-10GZ	MARKER-ALUMINUM FOIL, U	0150	1
R 11	65-11011-3	SUPPORT, ELECTRONIC TERMINAL SHIELD LH SIDE ANGLE	0150	1
		ATTACHING PARTS		
R 12	NAS603-6P	SCREW	0150	11
R 13	NAS602-6P	SCREW	0150	4
R 14	NAS679A3W	NUT	0150	10
R 15	BACN10FX82W	NUT	0150	4
R 16	BACN10FX1W	NUT	0150	1
		-----*		
R 17	69-9156-9	SUPPORT, ELECTRONICS CIRCUITRY COMPONENT ANGLE.	0150	1
R 18	69-9156-12	SUPPORT, ELECTRONICS CIRCUITRY COMPONENT.	0150	1
		ATTACHING PARTS		
R 19	NAS602-6P	SCREW	0150	4
R 20	NAS603-6P	SCREW	0150	1
R 21	BACN10FX82W	NUT	0150	4
R 22	BACN10FX1W	NUT	0150	1
		-----*		
R 23	69-15293-1	CHANNEL, FJ12 TERMINAL SUPPORT.	0150	1
R 24	69-13223-1	SUPPORT, ELECTRONIC COMPONENTS ANGLE.	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R 139	65-19439-22	SUPPORT INSTL, STATION 400 RJ13 FLIGHT INSTRUMENT . . .	0150	RF
R		ELECTRONIC COMPONENT (SEE FIG. 738, ITEM 18)		
R 1	65-31917-3	. PANEL ASSY, COMPONENT MOUNTING.	0150	1
R	MS20470D5	ATTACHING PARTS		
		. RIVET	0150	12
		-----*		
R 2	BACM9N1DY	. . MARKER-ALUMINUM FOIL, 1 THRU 23	0150	6
R 3	BACM10L00-10JJ	. . MARKER-ALUMINUM FOIL, 8D.	0150	2
R 4	BACM10L00-10JK	. . MARKER-ALUMINUM FOIL, 8E.	0150	2
R 5	BACM10L00-10JL	. . MARKER-ALUMINUM FOIL, 8F.	0150	2
R 6	BACM10L00-10JM	. . MARKER-ALUMINUM FOIL, 8G.	0150	2
R 7	BACM10L00-10JN	. . MARKER-ALUMINUM FOIL, 8H.	0150	2
R 8	BACM10L00-10JP	. . MARKER-ALUMINUM FOIL, 8J.	0150	2
R 9	BACM10L00-10JR	. . MARKER-ALUMINUM FOIL, 8K.	0150	2
R 10	BACM10L00-10JS	. . MARKER-ALUMINUM FOIL, 8L.	0150	2
R 11	BACM10L00-10JT	. . MARKER-ALUMINUM FOIL, 8M.	0150	2
R 12	BACM10L00-10JU	. . MARKER-ALUMINUM FOIL, 8N.	0150	2
R 13	BACM10L00-10JV	. . MARKER-ALUMINUM FOIL, 8P.	0150	2
R 14	BACM10L00-10JW	. . MARKER-ALUMINUM FOIL, 8R.	0150	2
R 15	BACM10L00-10KB	. . MARKER-ALUMINUM FOIL, 8W.	0150	2
R 16	MS25227-1	. . STRIP	0150	52
R 17	MS25227-2	. . STRIP	0150	13
R 18	MS25123-1-3	. . TERMINAL BOARD ASSY	0150	13
R 19	MS25123-1-20	. . TERMINAL BOARD ASSY	0150	13
R 20	65-31917-7	. . PANEL	0150	1
R 21	65-23900-1	. SUPPORT, TERMINAL SHIELD.	0150	1
R 22	65-23900-2	. SUPPORT, TERMINAL SHIELD.	0150	1
R 23	69-30282-2	. ANGLE	0150	4
		ATTACHING PARTS		
R	MS20470D5	. RIVET	0150	44
		-----*		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

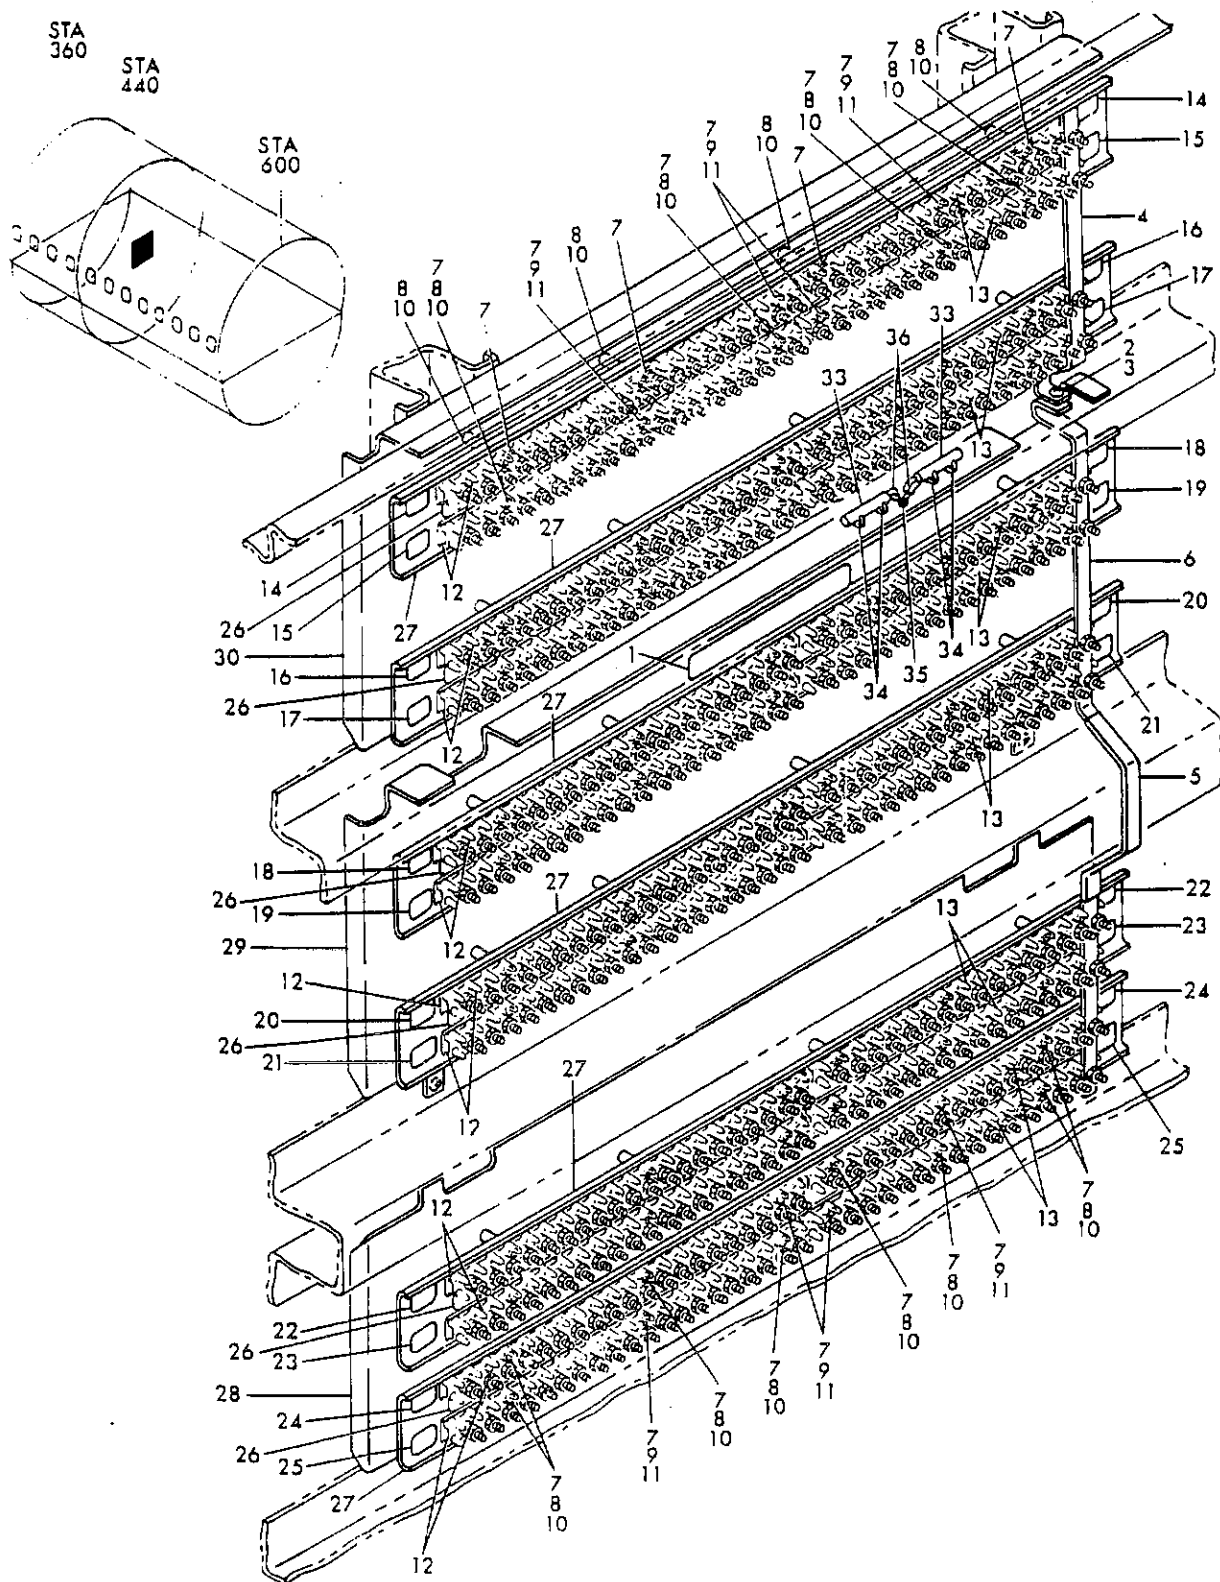


FIGURE 142. SHIELD INSTL. STATION 400 RJ14 ELECTRONIC WIRE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
142	65-19378-2	SHIELD INSTL, STATION 400 RJ14 ELECTRONIC WIRE (SEE . . FIG. 73B, ITEM 15)		RF
1	BACM9E1M	. SCOTCH-CAL, ELECTRONIC JUNCTION BOX RJ14.		1
2	NAS601-4	. SCREW		1
3	NAS679A06W	. NUT		1
4	69-15943-2	. BUS		1
5	65-19378-5	. SLEEVE.		1
6	69-15943-1	. BUS		1
7	MS25227-2	. STRIP		72
8	NAS600-22	. SCREW		48
9	NAS600-6	. SCREW		24
10	NAS430D0-64	. SPACER.		48
11	NAS679A04W	. NUT		24
12	MS25123-1-20	. TERMINAL BOARD ASSY		12
13	MS25123-1-16	. TERMINAL BOARD ASSY		12
14	BACM10L00-10HN	. MARKER-ALUMINUM FOIL, AH.		2
15	BACM10L00-10HP	. MARKER-ALUMINUM FOIL, AJ.		2
16	BACM10L00-10HR	. MARKER-ALUMINUM FOIL, AK.		2
17	BACM10L00-10HS	. MARKER-ALUMINUM FOIL, AL.		2
18	BACM10L00-10HT	. MARKER-ALUMINUM FOIL, AM.		2
19	BACM10L00-10HU	. MARKER-ALUMINUM FOIL, AN.		2
20	BACM10L00-10HV	. MARKER-ALUMINUM FOIL, AP.		2
21	BACM10L00-10HW	. MARKER-ALUMINUM FOIL, AR.		2
22	BACM10L00-10HX	. MARKER-ALUMINUM FOIL, AS.		2
23	BACM10L00-10HY	. MARKER-ALUMINUM FOIL, AT.		2
24	BACM10L00-10HZ	. MARKER-ALUMINUM FOIL, AU.		2
25	BACM10L00-10JA	. MARKER-ALUMINUM FOIL, AV.		2
26	BACM9N1DW	. SCOTCH-CAL, 1 THRU 36		6
27	69-15884-1	. CHANNEL, TERMINAL STRIP SUPPORT		6
28	69-15910-1	. PLATE, TERMINAL MOUNTING.		1
		ATTACHING PARTS		
	NAS603-6	. SCREW		12
	BACN10FX1W	. NUT		12
		-----*		
29	69-15284-1	. PLATE, JUNCTION BOX MOUNTING.		1
30	69-15284-2	. PLATE, JUNCTION BOX MOUNTING.		1
		ATTACHING PARTS		
	NAS603-6	. SCREW		34
	BACN10FX1W	. NUT		34
		-----*		
33	HLVB1050	. CAPACITOR, (V56289) (ADDED BY SB 2752).	0102	2
		(OPTIONAL HC5010A (V90201) (ADDED BY SB 2752))		
33	HC5010A	. CAPACITOR, (V90201) (ADDED BY SB 2752).	0102	2
		(OPTIONAL TO HLVB1050 (V56289) (ADDED BY SB 2752))		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

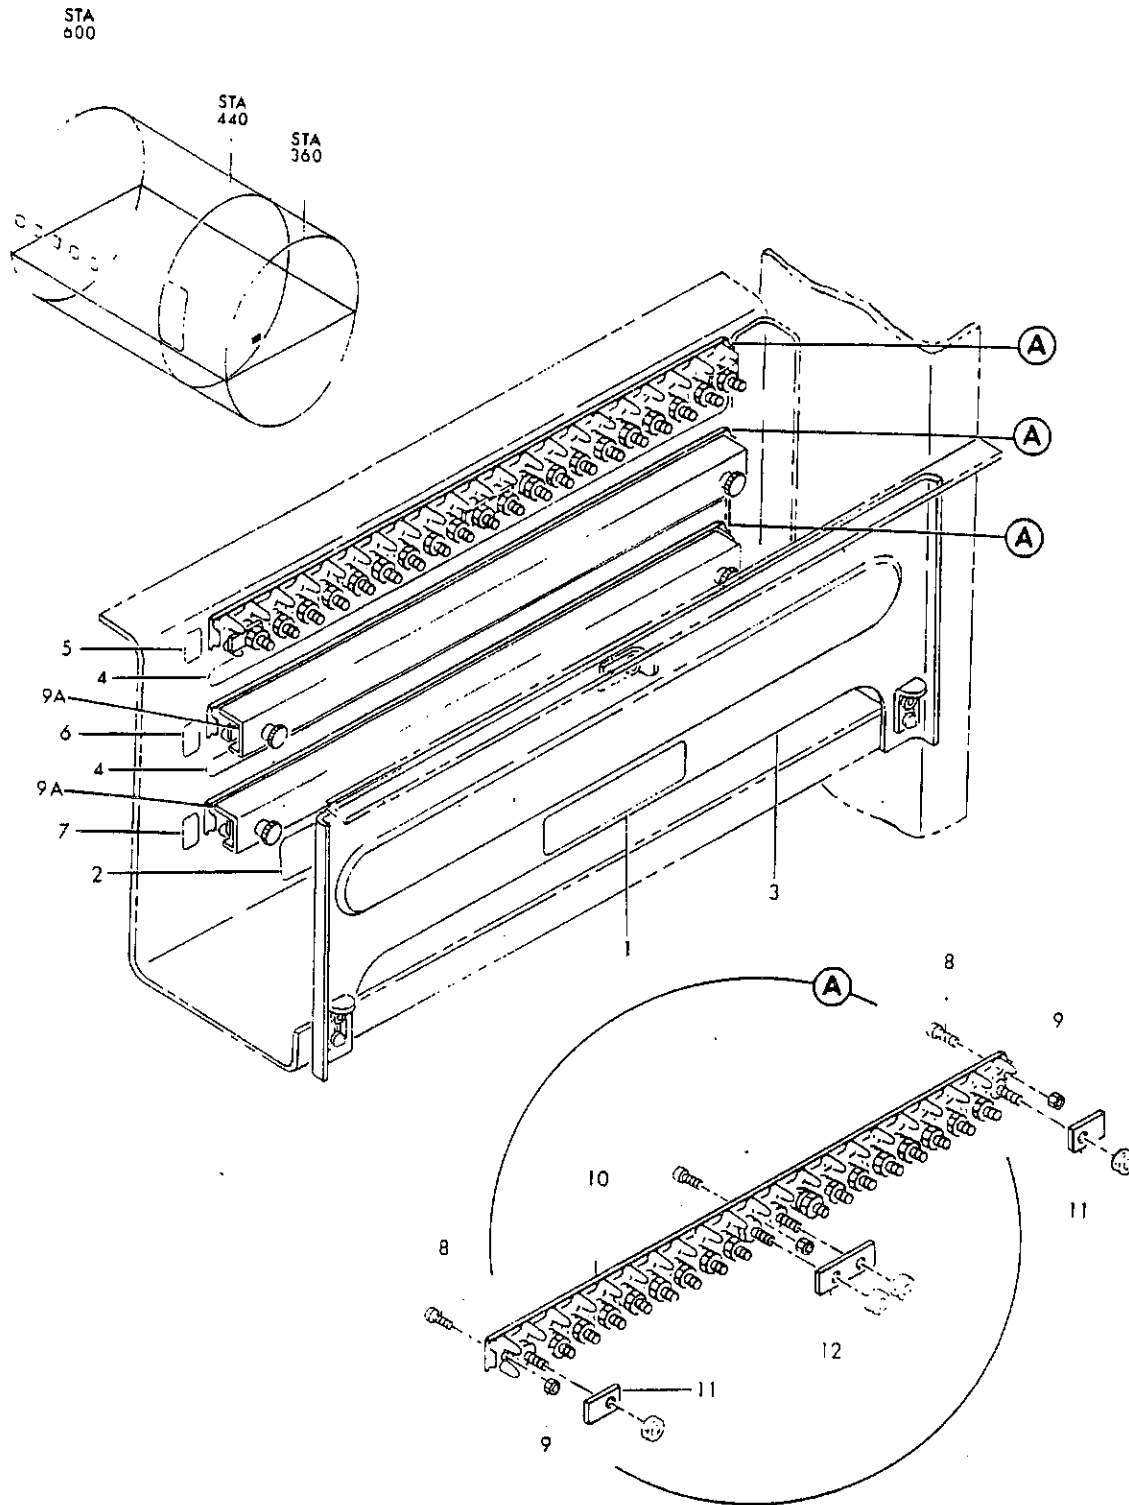


FIGURE 143. SHIELD INSTL. STATION 400 AUXILIARY TERMINALS



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R R R R R R R R R	143	65-22457-1	SHIELD INSTL, STATION 400 FLIGHT INSTRUMENT AUXILIARY . TERMINALS (SEE FIG. 738, ITEM 17)	0150 RF
		65-22457-4	SHIELD INSTL, STATION 400 FLIGHT INSTRUMENT AUXILIARY . TERMINALS (SEE FIG. 738, ITEM 17)	5199 RF
	1	BACM9T3C	. MARKER-ALUMINUM FOIL, FLIGHT INSTRUMENTS AUXILIARY . TERMINALS	5199 1
	2	BACM9T3C	. MARKER-ALUMINUM FOIL, FLIGHT INSTRUMENTS AUXILIARY . TERMINALS	0150 1
	3	69-16669-1	. COVER ASSY, FLIGHT INSTRUMENTS AUXILIARY TERMINALS . ATTACHING PARTS	1
		AN3198-4	. STUD.	2
		AN960PD10	. WASHER.	2
			-----*	
	4	BACM10N110-2CRB	. MARKER-ALUMINUM FOIL, 1 THRU 20	2
	5	BACM10L00-10JF	. MARKER-ALUMINUM FOIL, BA.	1
	6	BACM10L00-10JG	. MARKER-ALUMINUM FOIL, BB.	1
	7	BACM10L00-10JH	. MARKER-ALUMINUM FOIL, BC.	1
	8	BACS12CB04-6	. SCREW	9
	9	BACN10JC04	. NUT	9
	9A	MS18029-1S20	. COVER ASSY.	5199 2
	10	MS25123-1-20	. TERMINAL BOARD ASSY	0150 3
	10	MS27212-1-20	. TERMINAL BOARD ASSY	5199 3
	11	MS25227-1	. STRIP	0150 6
	12	MS25227-2	. STRIP	0150 3
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

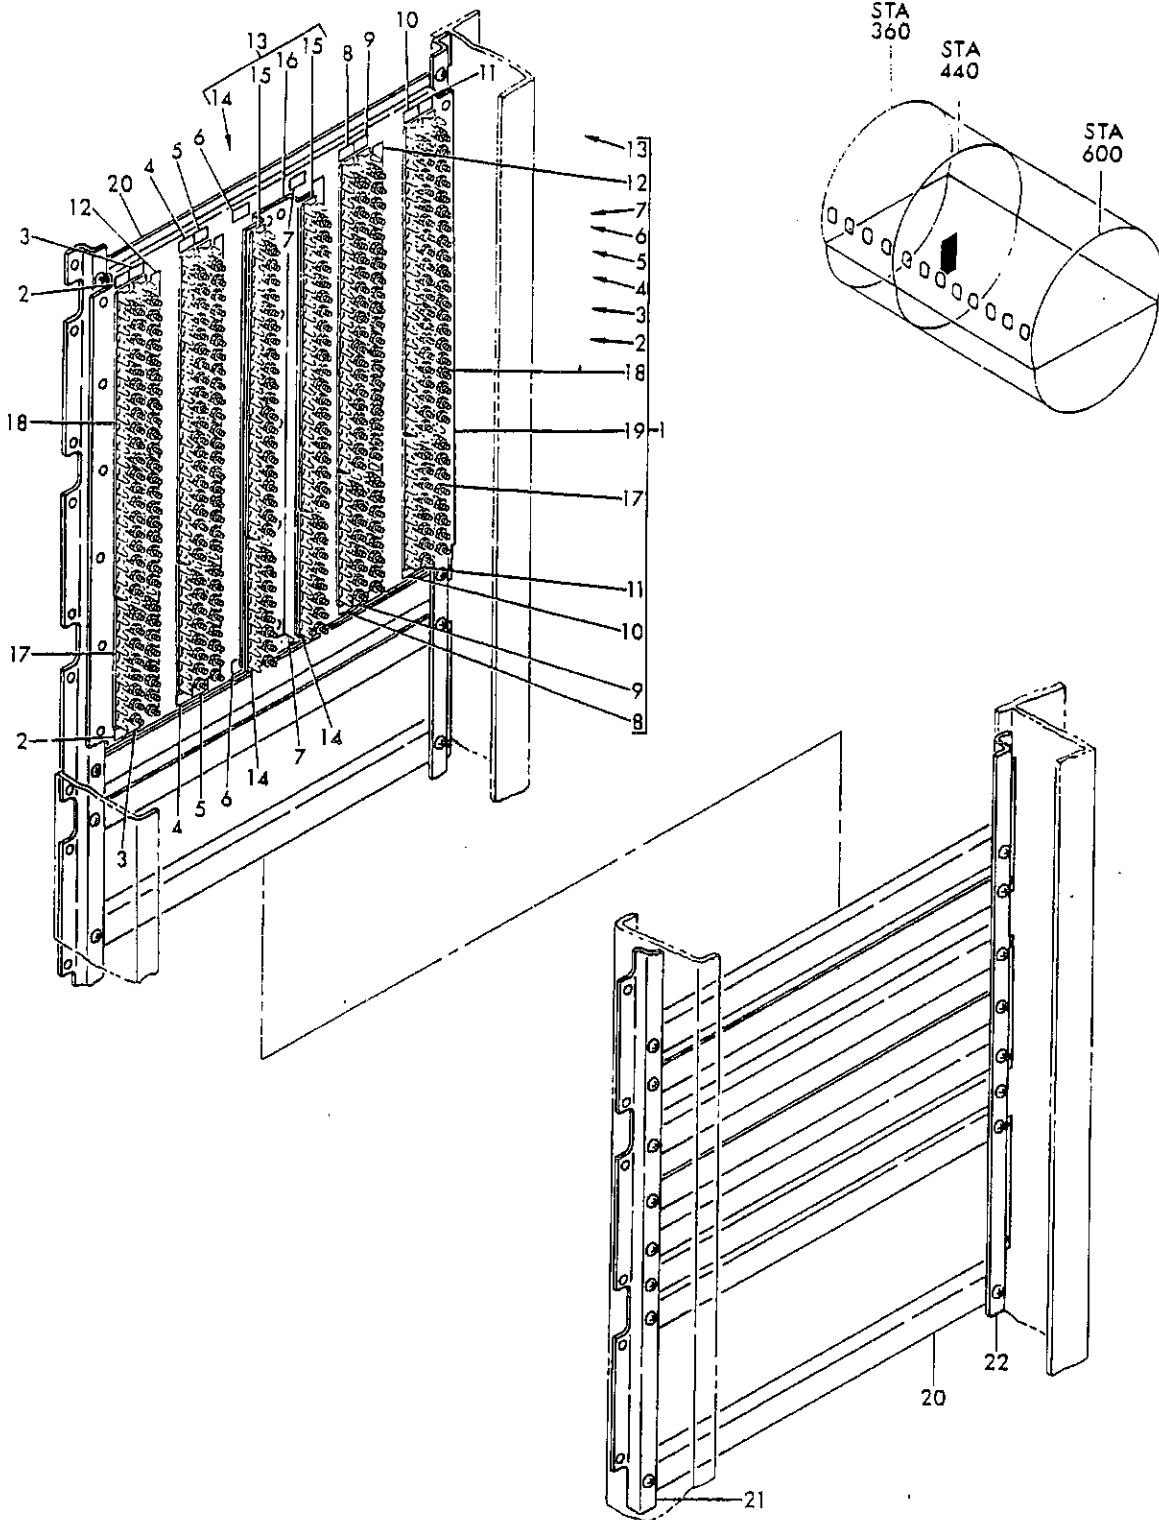


FIGURE 145. TERMINAL AND SUPPORT INSTL, STATION 400 RJ12



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE										EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7					
145	65-77172-1	TERMINAL AND SUPPORT INSTL, STATION 400 RJ12 (SEE FIG. 73B, ITEM 41)										5199	RF
1	65-77173-6	. PANEL ASSY.										5199	1
	MS204070D5	. ATTACHING PARTS										5199	12
		. RIVET										5199	12
2	BACM10L00-10GU	. . MARKER-ALUMINUM FOIL, N										5199	2
3	BACM10L00-10GV	. . MARKER-ALUMINUM FOIL, P										5199	2
4	BACM10L00-10GW	. . MARKER-ALUMINUM FOIL, R										5199	2
5	BACM10L00-10GX	. . MARKER-ALUMINUM FOIL, S										5199	2
6	BACM10L00-10GY	. . MARKER-ALUMINUM FOIL, T										5199	2
7	BACM10L00-10GZ	. . MARKER-ALUMINUM FOIL, U										5199	2
8	BACM10L00-10HA	. . MARKER-ALUMINUM FOIL, V										5199	2
9	BACM10L00-10HB	. . MARKER-ALUMINUM FOIL, W										5199	2
10	BACM10L00-10HC	. . MARKER-ALUMINUM FOIL, X										5199	2
11	BACM10L00-10HD	. . MARKER-ALUMINUM FOIL, Y										5199	2
12	BAC27CEE567	. . MARKER-ALUMINUM FOIL, 1 THRU 28										5199	4
13	65-77173-5	. CHANNEL ASSY.										5199	1
		. ATTACHING PARTS											
	BACS12CB08-6	. . SCREW										5199	10
	BACN10JC08	. . NUT										5199	10
14	MS27212-1-B	. . . TERMINAL BOARD ASSY										5199	2
15	MS27212-1-20	. . . TERMINAL BOARD ASSY										5199	2
		. ATTACHING PARTS											
	BACS12CB04-5	. . . SCREW										5199	10
	BACN10JC04	. . . NUT										5199	10
16	65-77173-4	. . . CHANNEL										5199	1
17	MS27212-1-B	. . . TERMINAL BOARD ASSY										5199	8
18	MS27212-1-20	. . . TERMINAL BOARD ASSY										5199	8
		. ATTACHING PARTS											
	BACS12CB04-5	. . . SCREW										5199	40
	BACN10JC04	. . . NUT										5199	40
19	65-77173-3	. . . PANEL										5199	1
20	69-30282-1	. . . SUPPORT ANGLE										5199	12
		. ATTACHING PARTS											
	BACS12CB08-6	. . . SCREW										5199	24
	BACN10FX82W	. . . NUT										5199	24
21	65-77173-1	. . . SUPPORT SHIELD.										5199	1
22	65-77173-2	. . . SUPPORT SHIELD.										5199	1
		. ATTACHING PARTS											
	MS204070D5	. RIVET										5199	42
MISSING ITEM NUMBERS ARE NOT APPLICABLE													

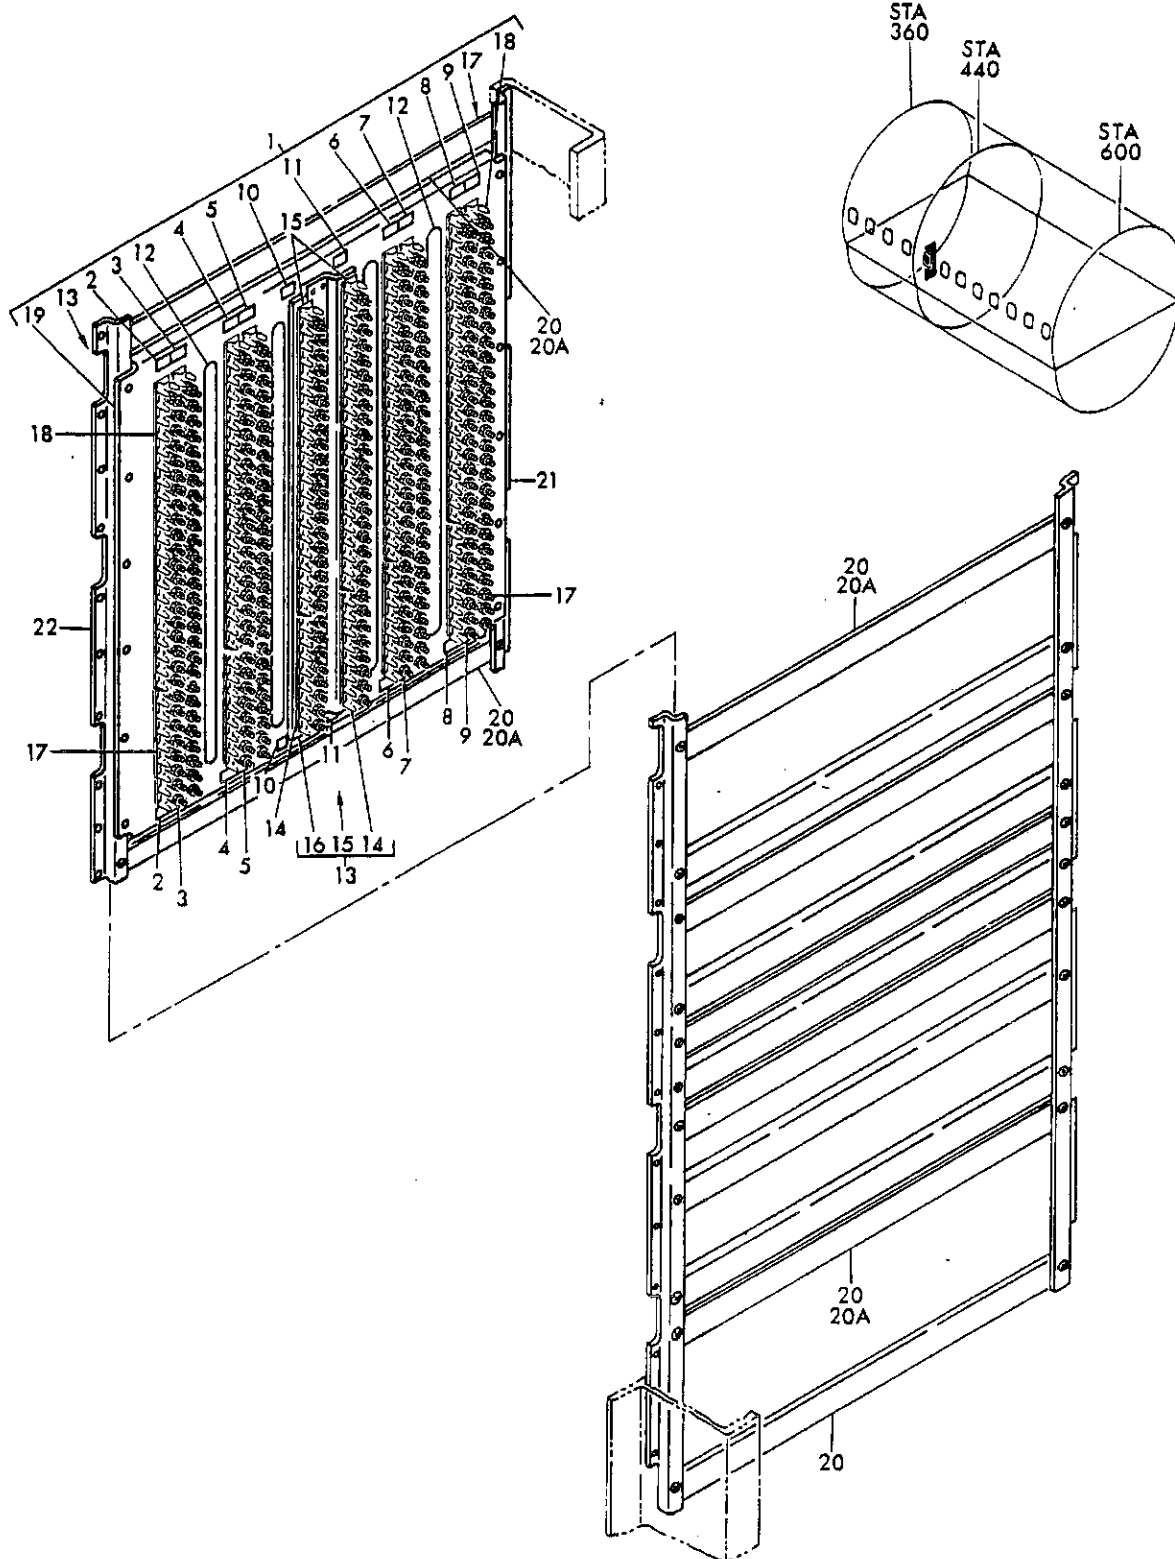


FIGURE 146. TERMINAL AND SUPPORT INSTL, STATION 400 RJ13



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
146	65-77172-2	TERMINAL AND SUPPORT INSTL, STATION 400 RJ13 (SEE FIG. 738, ITEM 42)							5199	RF
1	65-77173-7	. PANEL ASSY, COMPONENT MOUNTING.							5199	1
	MS20407005	. ATTACHING PARTS							5199	12
		. RIVET							5199	12
2	BACM10L00-10JJ	. . . MARKER-ALUMINUM FOIL, BD.							5199	2
3	BACM10L00-10JK	. . . MARKER-ALUMINUM FOIL, BE.							5199	2
4	BACM10L00-10JL	. . . MARKER-ALUMINUM FOIL, BF.							5199	2
5	BACM10L00-10JM	. . . MARKER-ALUMINUM FOIL, BG.							5199	2
6	BACM10L00-10JN	. . . MARKER-ALUMINUM FOIL, BH.							5199	2
7	BACM10L00-10JP	. . . MARKER-ALUMINUM FOIL, BJ.							5199	2
8	BACM10L00-10JR	. . . MARKER-ALUMINUM FOIL, BK.							5199	2
9	BACM10L00-10JS	. . . MARKER-ALUMINUM FOIL, BL.							5199	2
10	BACM10L00-10JT	. . . MARKER-ALUMINUM FOIL, BM.							5199	2
11	BACM10L00-10JU	. . . MARKER-ALUMINUM FOIL, BN.							5199	2
12	BAC27CEE567	. . . MARKER-ALUMINUM FOIL, 1 THRU 28							5199	4
13	65-77173-5	. . . CHANNEL ASSY.							5199	1
		. ATTACHING PARTS								
	BACS12CB08-6	. . . SCREW							5199	10
	BACN10JC08	. . . NUT							5199	10
14	MS27212-1-8	 TERMINAL BOARD ASSY							5199	2
15	MS27212-1-20	 TERMINAL BOARD ASSY							5199	2
		. ATTACHING PARTS								
	BACS12CB04-5	 SCREW							5199	10
	BACN10JC04	 NUT							5199	10
16	65-77173-4	 CHANNEL							5199	1
17	MS27212-1-8	 TERMINAL BOARD ASSY							5199	8
18	MS27212-1-20	 TERMINAL BOARD ASSY							5199	8
		. ATTACHING PARTS								
	BACS12CB04-5	 SCREW							5199	40
	BACN10JC04	 NUT							5199	40
19	65-77173-3	 PANEL							5199	1
20	69-30282-1	 ANGLE, SUPPORT.							5199	13
		. ATTACHING PARTS								
	BACS12CB08-6	 SCREW							5199	26
	BACN10FX82W	 NUT							5199	26
21	65-77173-1	 SUPPORT							5199	1
22	65-77173-2	 SUPPORT							5199	1
		. ATTACHING PARTS								
	MS20407005	 RIVET							5199	42
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

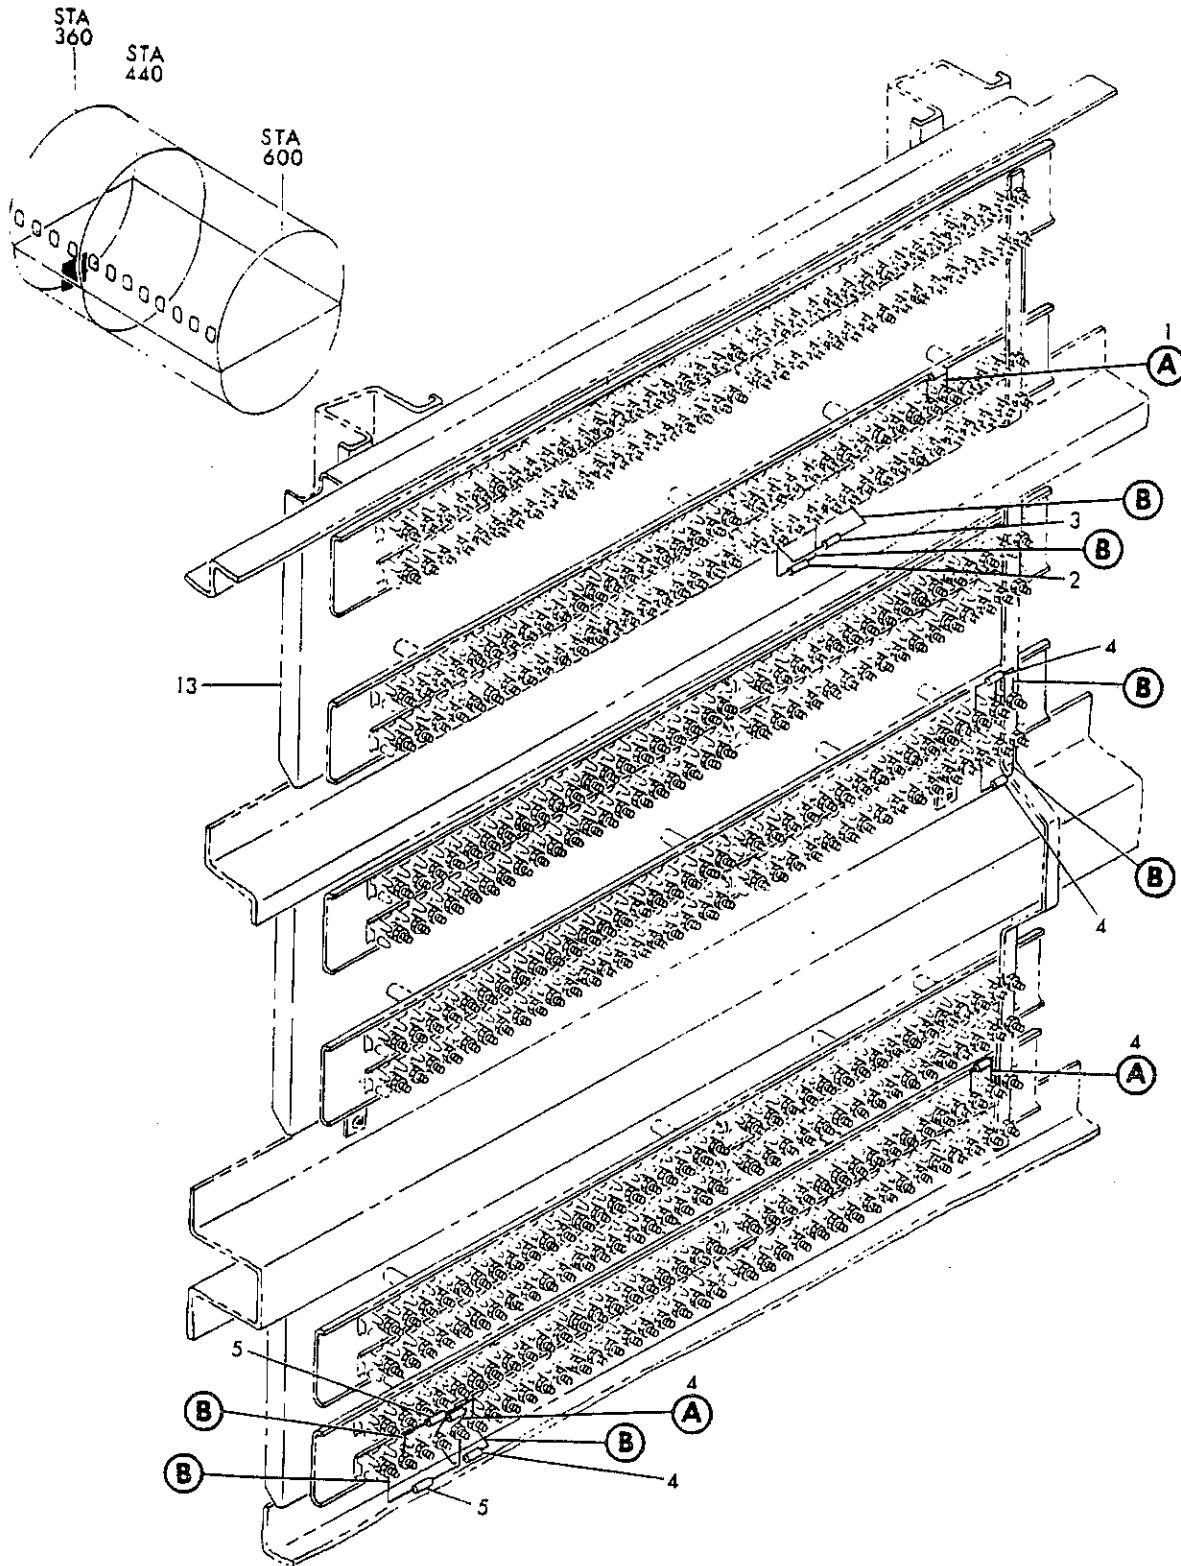


FIGURE 185. RESISTOR INSIL, STATION 400 RADIO TERMINAL SHIELD (SHEET 1)

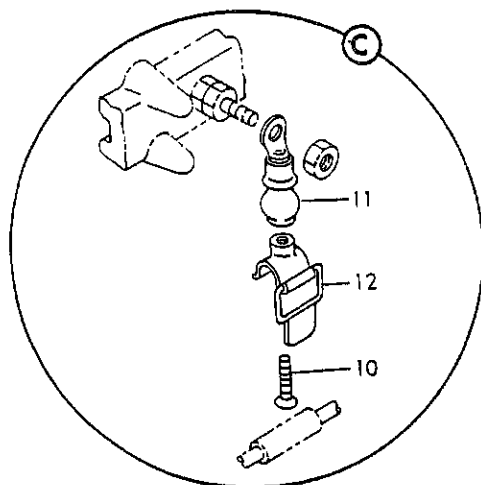
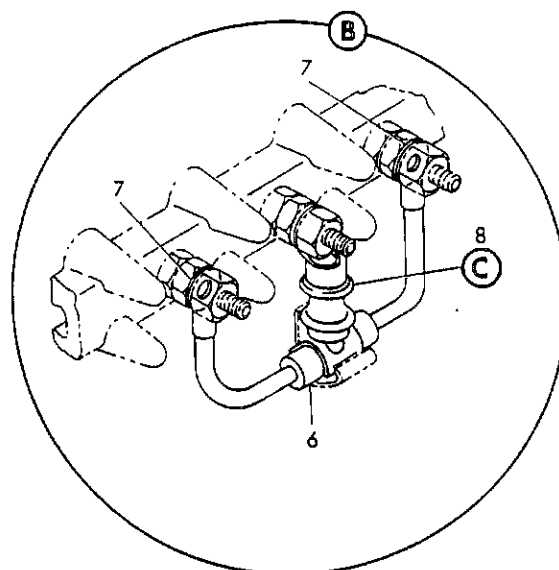
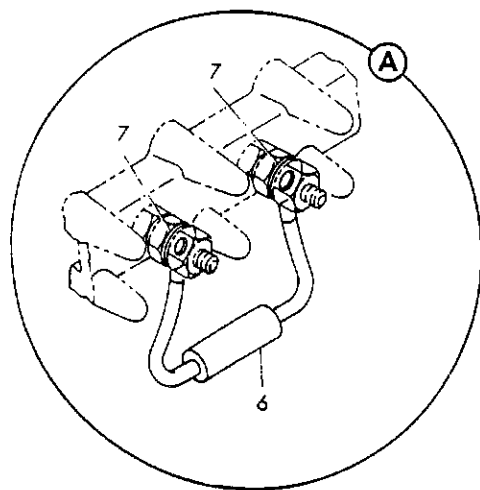


FIGURE 185. RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD (SHEET 2)

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE					EFF FROM TO	UNITS PER ASSY		
			1	2	3	4	5	6	7		
R	185	65-22914-16	RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD (FOR							0150	RF
R			ADDITIONAL DETAILS SEE FIG. 186, 187 AND 188) (SEE								
R			24-3, FIG. 60, ITEM 38)								
R	2	69-2695-39	. RESISTOR ASSY							0150	1
R	3	69-2695-40	. RESISTOR ASSY							0150	1
R	4	69-2695-14	. RESISTOR ASSY							0150	5
R	5	69-2695-15	. RESISTOR ASSY							0150	2
R	6	RC32GF101J	. . RESISTOR, 100 OHM 1W (V29762) (USED ON 69-2695-39)							0150	1
R			(OPTIONAL RCR32G101JM (V29762))								
R	6	RCR32G101JM	. . RESISTOR, 100 OHM 1W (V29762) (USED ON 69-2695-39)							0150	1
R			(OPTIONAL TO RC32GF101J (V29762))								
R	6	RC32GF240J	. . RESISTOR, 24 OHM 1W (V29762) (USED ON 69-2695-40)							0150	1
R			(OPTIONAL RCR32G240JM (V29762))								
R	6	RCR32G240JM	. . RESISTOR, 24 OHM 1W (V29762) (USED ON 69-2695-40)							0150	1
R			(OPTIONAL TO RC32GF240J (V29762))								
R	6	RC32GF471K	. . RESISTOR, 470 OHM 1W (V29762) (USED ON 69-2695-14)							0150	1
R			(OPTIONAL RCR32G471KM (V29762))								
R	6	RCR32G471KM	. . RESISTOR, 470 OHM 1W (V29762) (USED ON 69-2695-14)							0150	1
R			(OPTIONAL TO RC32GF471K (V29762))								
R	6	RC32GF222K	. . RESISTOR, 2200 OHM 1W (V29762) (USED ON 69-2695-15)							0150	1
R			(OPTIONAL RCR32G222KM (V29762))								
R	6	RCR32G222KM	. . RESISTOR, 2200 OHM 1W (V29762) (USED ON 69-2695-15)							0150	1
R			(OPTIONAL TO RC32GF222K (V29762))								
R	7	36151	. . TERMINAL, (V00779)							0150	2
R	9	66-13940-1	. CLIP ASSY, MOUNTING							0150	9
R	10	BACS12BF02CB	. . SCREW							0150	1
R			(OPTIONAL AN505-2R8)								
R	10	AN505-2R8	. . SCREW							0150	1
R			(OPTIONAL TO BACS12BF02CB)								
R	11	BACT12B108	. . TERMINAL							0150	1
R	12	CO PLUS NO	. . CLIP AND CAPTIVE, (V06229)							0150	1
R	13		SHIELD INSTL, STATION 400 RJ11 ELECTRONIC WIRE (FOR REF							0150	RF
R			SEE FIG. 136)								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

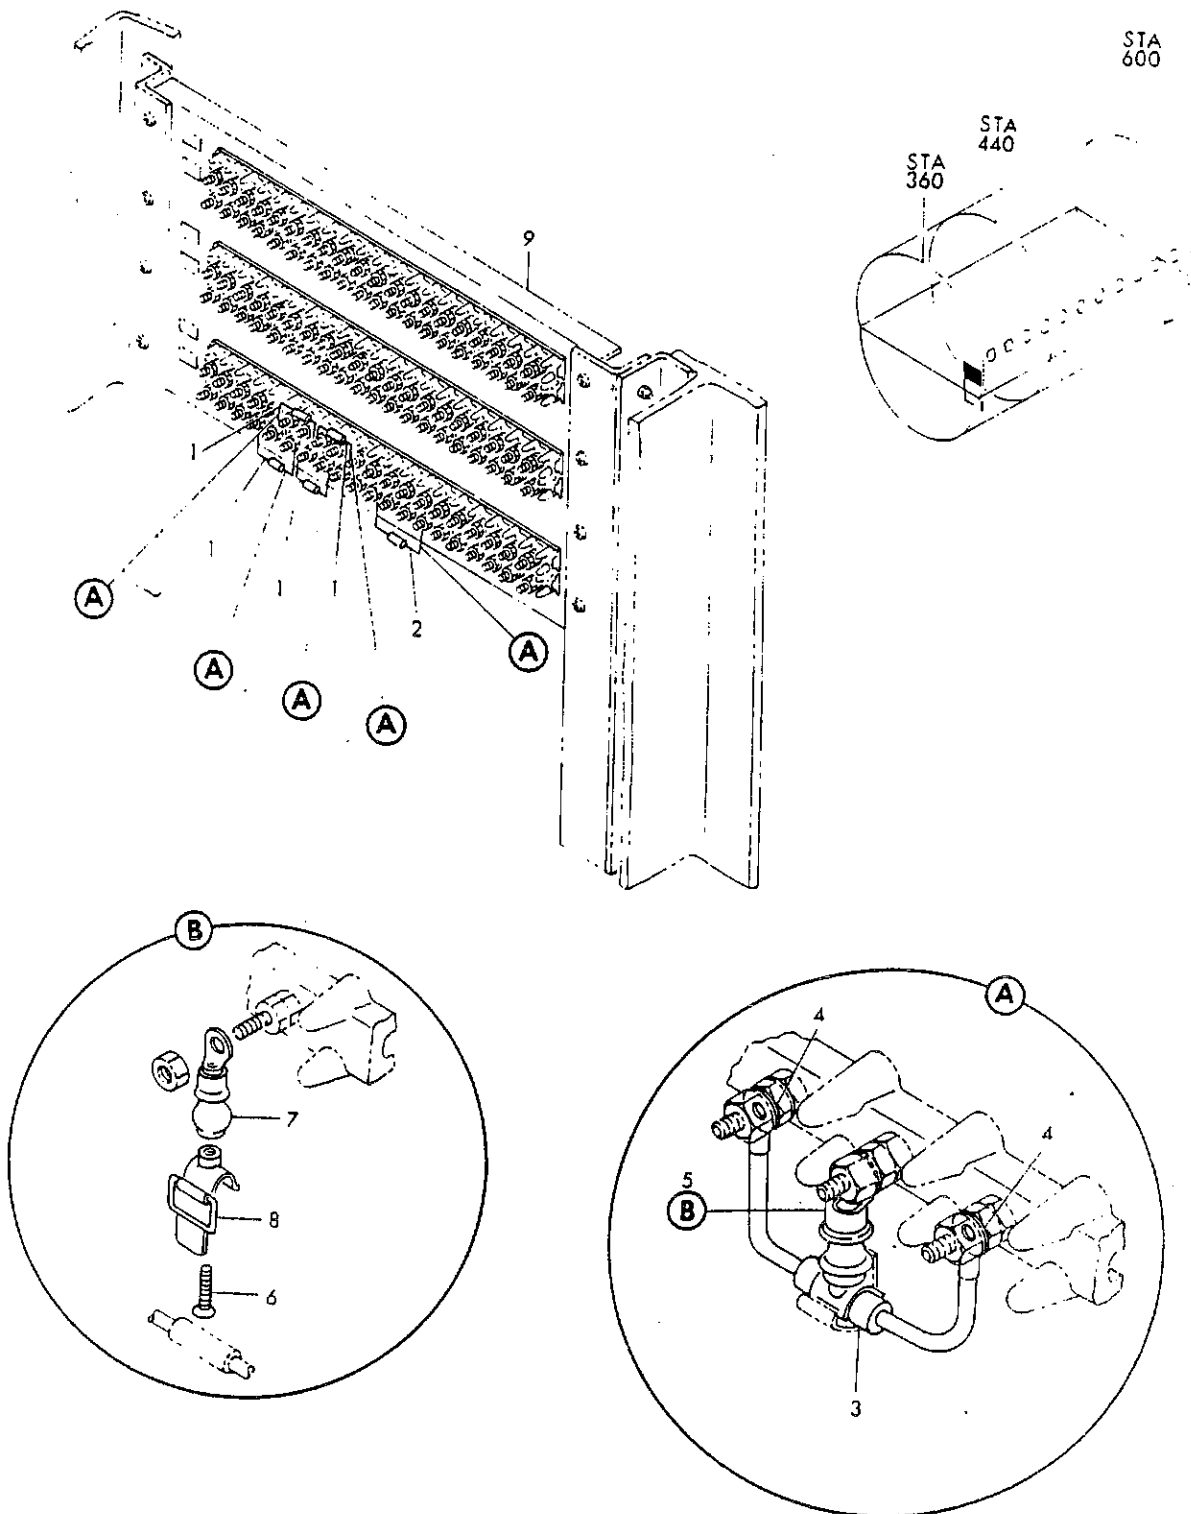


FIGURE 186. RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD

BOEING *707* Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE					EFF FROM TO	UNITS PER ASSY		
			1	2	3	4	5	6	7		
R	186	65-22914-16	RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD (FOR ADDITIONAL DETAILS SEE FIG. 185, 187 AND 188) (SEE 24-3, FIG. 6D, ITEM 38)							0150	RF
R		1 69-2695-14	. RESISTOR ASSY							0150	4
R		2 69-2695-8	. RESISTOR ASSY							0150	1
R		3 RC32GF471K	. . RESISTOR, 470 OHM 1W (V29762) (USED ON 69-2695-14) (OPTIONAL RCR32G471KM (V29762))							0150	1
R		3 RCR32G471KM	. . RESISTOR, 470 OHM 1W (V29762) (USED ON 69-2695-14) (OPTIONAL TO RC32GF471K (V29762))							0150	1
R		3 RC32GF472J	. . RESISTOR, 4700 OHM 1W (V29762) (USED ON 69-2965-8) (OPTIONAL RCR32G472JM (V29762))							0150	1
R		3 RCR32G472JM	. . RESISTOR, 4700 OHM 1W (V29762) (USED ON 69-2965-8) (OPTIONAL TO RC32GF472J (V29762))							0150	1
R		4 36151	. . TERMINAL, (V00779)							0150	2
R		5 66-13940-1	. CLIP ASSY, MOUNTING							0150	5
R		6 BACS12BF02C8	. . SCREW (OPTIONAL AN508-2R8)							0150	1
R		6 AN508-2R8	. . SCREW (OPTIONAL TO BACS12BF02C8)							0150	1
R		7 BACT12B108	. . TERMINAL							0150	1
R		8 CO PLUS NO	. . CLIP AND CAPTIVE (V06229)							0150	1
R		9	TERMINAL AND SUPPORT INSTL, RJ12 (FOR REF SEE FIG. 137)							0150	RF
MISSING ITEM NUMBERS ARE NOT APPLICABLE											



STA
600

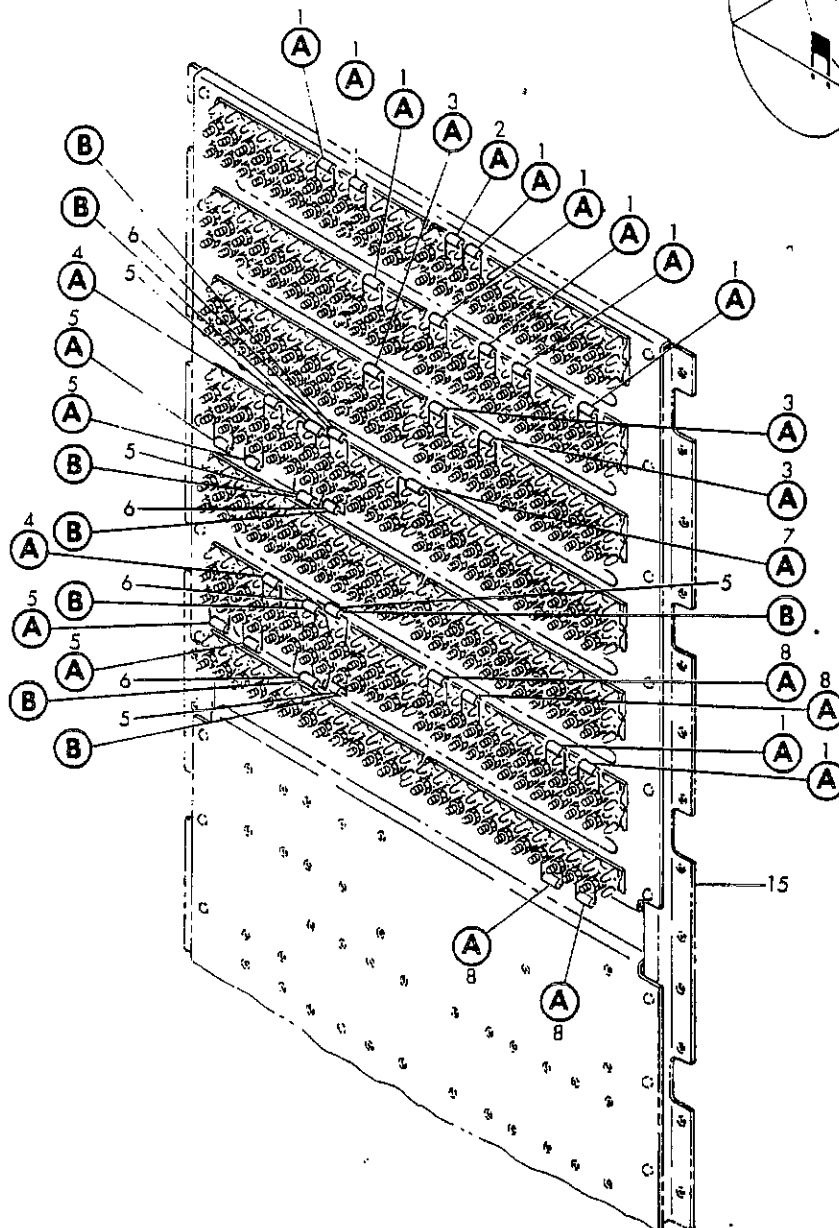
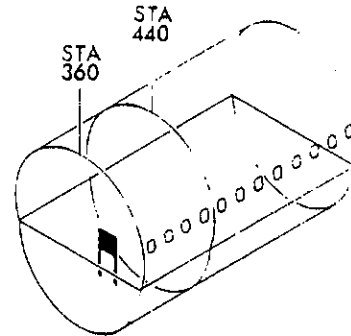


FIGURE 187. RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD (SHEET 1)

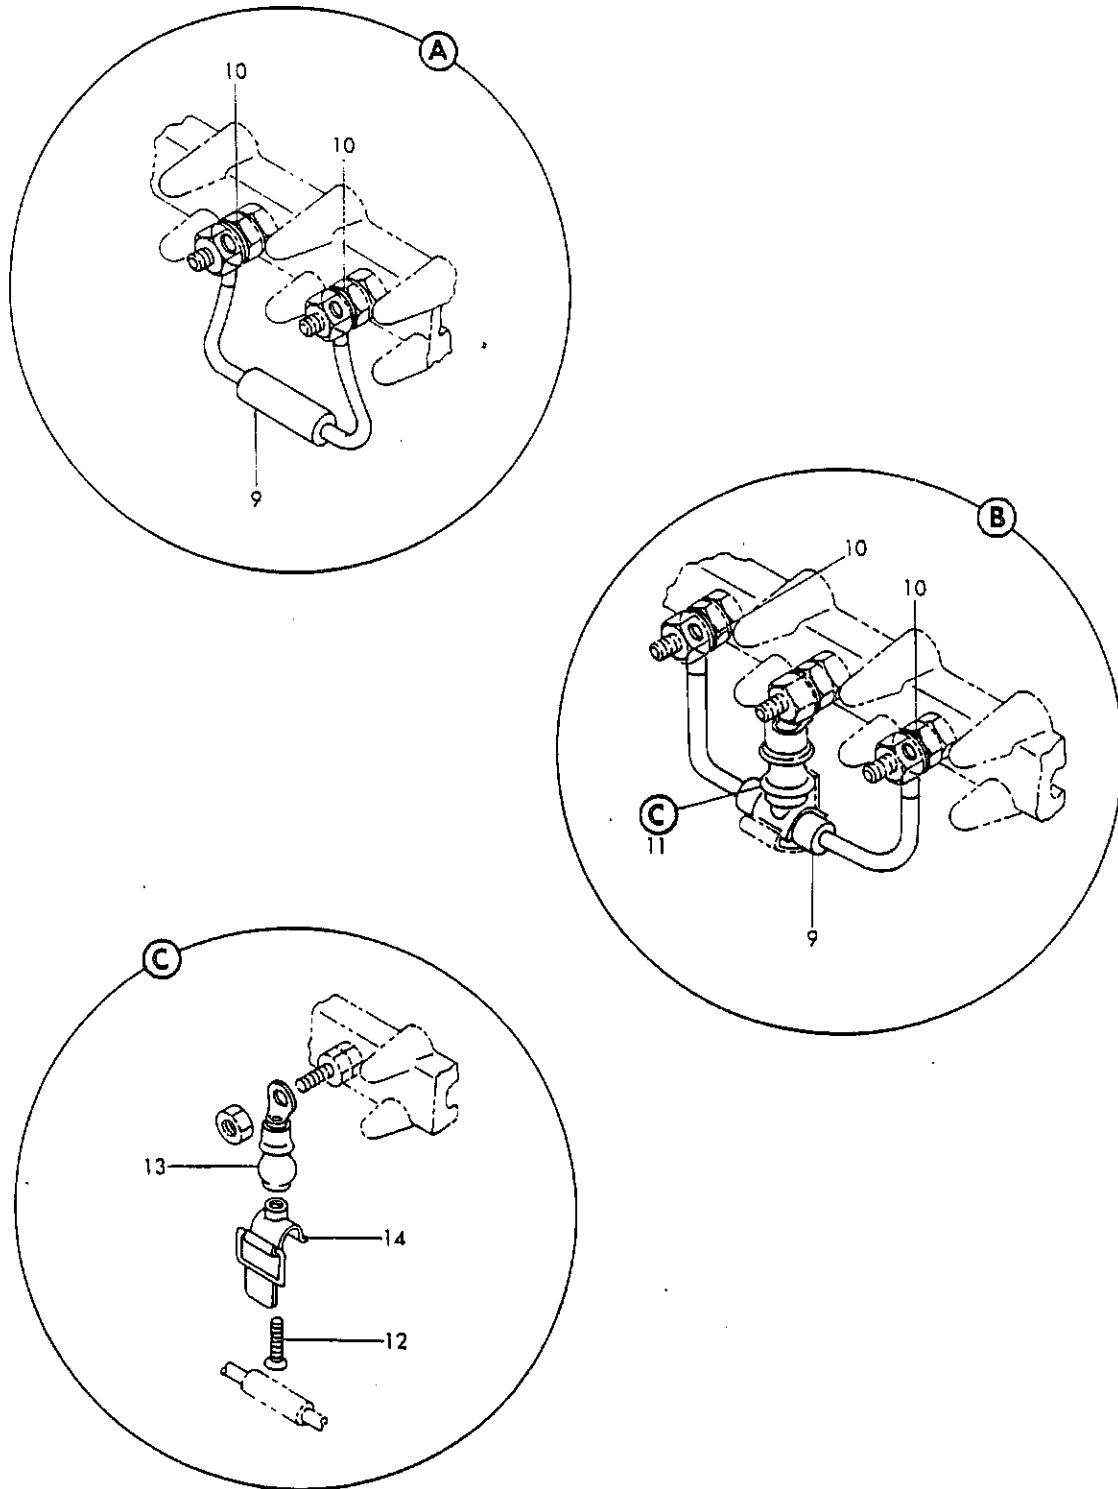


FIGURE 187. RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD (SHEET 2)

NOV 21/90

24-13-187

DETAILED PARTS LIST
24-13-187
PAGE 1

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE					EFF FROM TO	UNITS PER ASSY		
			1	2	3	4	5	6	7		
R	187	65-22914-16	RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD (FOR ADDITIONAL DETAILS SEE FIG. 185, 186 AND 188) (SEE 24-3, FIG. 60, ITEM 38)							0150	RF
R	1	69-2695-6	. RESISTOR ASSY							0150	10
R	2	69-2695-37	. RESISTOR ASSY							0150	1
R	3	69-2695-19	. RESISTOR ASSY							0150	3
R	4	69-2695-50	. RESISTOR ASSY							0150	2
R	5	69-2695-3	. RESISTOR ASSY							0150	8
R	6	69-2695-34	. RESISTOR ASSY							0150	4
R	7	69-2695-59	. RESISTOR ASSY							0150	1
R	8	69-2695-13	. RESISTOR ASSY							0150	4
R	9	RC32GF103J	. . RESISTOR, 10000 OHM 1W (V29762) (USED ON 69-2695-6) (OPTIONAL RCR32G103JM (V29762))							0150	1
R	9	RCR32G103JM	. . RESISTOR, 10000 OHM 1W (V29762) (USED ON 69-2695-6) (OPTIONAL TO RC32GF103J (V29762))							0150	1
R	9	RC32GF393J	. . RESISTOR, 39000 OHM 1W (V29762) (USED ON 69-2695-37)							0150	1
R	9	RCR32G393JM	. . RESISTOR, 39000 OHM 1W (V29762) (USED ON 69-2695-37)							0150	1
R	9	RC30GF512J	. . RESISTOR, 5100 OHM 1W (V29762) (USED ON 69-2695-19) (OPTIONAL RC32GF512J (V29762))							0150	1
R	9	RC32GF512J	. . RESISTOR, 5100 OHM 1W (V29762) (USED ON 69-2695-19) (OPTIONAL TO RC30GF512J (V29762))							0150	1
R	9	RCR32G512JM	. . RESISTOR, 5100 OHM 1W (V29762) (USED ON 69-2695-19) (OPTIONAL TO RC32GF512J (V29762))							0150	1
R	9	RC32GF241J	. . RESISTOR, 240 OHM 1W (V29762) (USED ON 69-2695-50) (OPTIONAL RCR32G241JM (V29762))							0150	1
R	9	RCR32G241JM	. . RESISTOR, 240 OHM 1W (V29762) (USED ON 69-2695-50) (OPTIONAL TO RC32GF241J (V29762))							0150	1
R	9	RC30GF102J	. . RESISTOR, 1000 OHM 1W (V29762) (USED ON 69-2695-3) (OPTIONAL RC32GF102K (V29762))							0150	1
R	9	RC32GF102K	. . RESISTOR, 1000 OHM 1W (V29762) (USED ON 69-2695-3) (OPTIONAL TO RC30GF102J (V29762))							0150	1
R	9	RCR32G102KM	. . RESISTOR, 1000 OHM 1W (V29762) (USED ON 69-2695-3) (OPTIONAL TO RC32GF102K (V29762))							0150	1
R	9	RC30GF511J	. . RESISTOR, 510 OHM 1W (V29762) (USED ON 69-2695-34) (OPTIONAL RC32GF511J (V29762))							0150	1
R	9	RC32GF511J	. . RESISTOR, 510 OHM 1W (V29762) (USED ON 69-2695-34) (OPTIONAL TO RC30GF511J (V29762))							0150	1
R	9	RCR32G511JM	. . RESISTOR, 510 OHM 1W (V29762) (USED ON 69-2695-34) (OPTIONAL TO RC32GF511J (V29762))							0150	1
R	9	RC32GF390J	. . RESISTOR, 39 OHM 1W (V29762) (USED ON 69-2695-59) (OPTIONAL RCR32G390JM (V29762))							0150	1
R	9	RCR32G390JM	. . RESISTOR, 39 OHM 1W (V29762) (USED ON 69-2695-59) (OPTIONAL TO RC32GF390J (V29762))							0150	1
R	9	RC30GF201J	. . RESISTOR, 200 OHM 1W (V29762) (USED ON 69-2695-13) (OPTIONAL RC32GF201J (V29762))							0150	1
R	9	RC32GF201J	. . RESISTOR, 200 OHM 1W (V29762) (USED ON 69-2695-13) (OPTIONAL TO RC30GF201J (V29762))							0150	1
R	9	RCR32G201JM	. . RESISTOR, 200 OHM 1W (V29762) (USED ON 69-2695-13) (OPTIONAL TO RC32GF201J (V29762))							0150	1
R	10	36151	. . TERMINAL, (V00779)							0150	2
R	11	66-13940-1	. CLIP ASSY, MOUNTING							0150	8
R	12	BACS128F02C8	. . SCREW (OPTIONAL AN505-2R8)							0150	1
R	12	AN505-2R8	. . SCREW (OPTIONAL TO BACS128F02C8)							0150	1
R	13	BACT128108	. . TERMINAL							0150	1
R	14	CO PLUS NO	. . CLIP AND CAPTIVE, (V06229)							0150	1
R	15		SUPPORT INSTL, STATION 400 RJ13 FLIGHT INSTRUMENTS. . . ELECTRONIC COMPONENTS (FOR REF SEE FIG. 139)							0150	RF
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

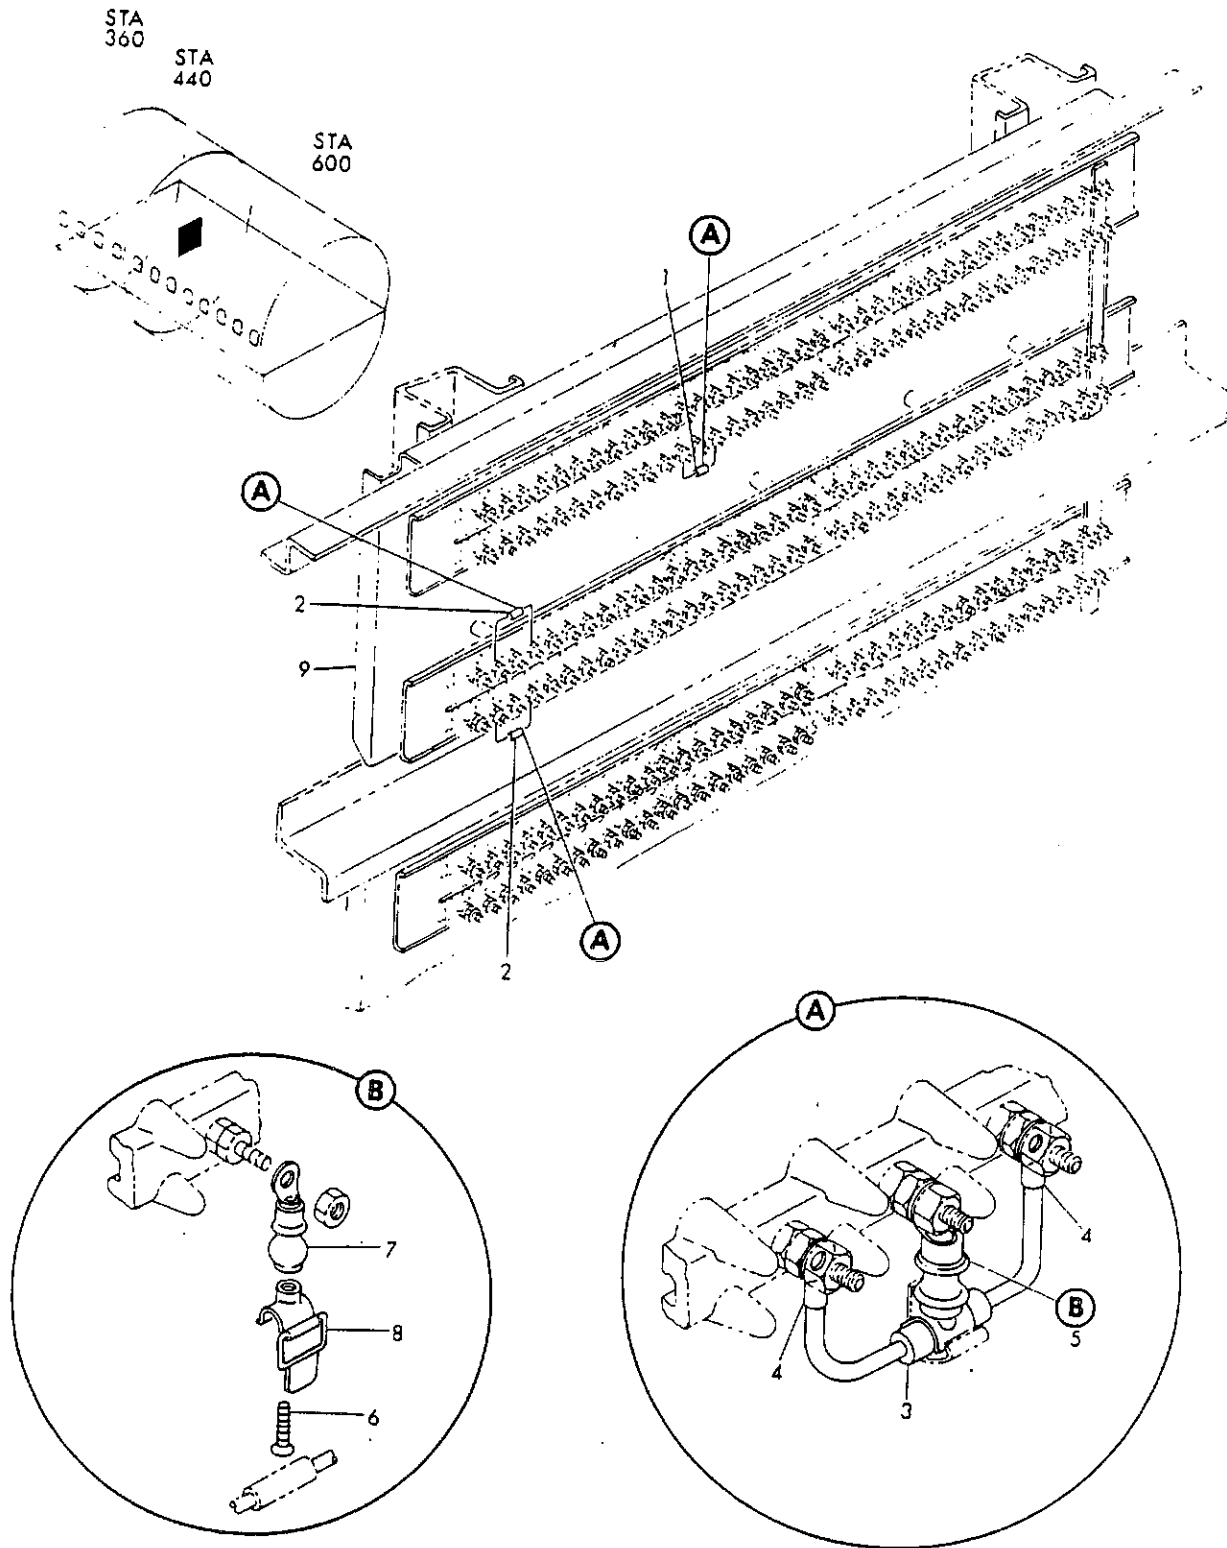


FIGURE 188. RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R R R R R R R R R R R	188	65-22914-16	RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD (FOR ADDITIONAL DETAILS SEE FIG. 185, 186 AND 187) (SEE 24-3, FIG. 6D, ITEM 38)							0150	RF
	1	69-2695-7	. RESISTOR ASSY							0150	1
	2	69-2695-14	. RESISTOR ASSY							0150	2
	3	RC42GF151K	. . RESISTOR, 150 OHM 2W (V29762) (USED ON 69-2695-7) .							0150	1
	3	RC32GF471K	. . RESISTOR, 470 OHM 1W (V29762) (USED ON 69-2695-14) (OPTIONAL RCR32G471KM (V29762))							0150	1
	3	RCR32G471KM	. . RESISTOR, 470 OHM 1W (V29762) (USED ON 69-2695-14) (OPTIONAL TO RC32GF471K (V29762))							0150	1
	4	36151	. . TERMINAL, (V00779)							0150	2
	5	66-13940-1	. CLIP ASSY, MOUNTING							0150	3
	6	BACSI2BF02C8	. . SCREW (OPTIONAL AN505-2R8)							0150	1
	6	AN505-2R8	. . SCREW (OPTIONAL TO BACSI2BF02C8)							0150	1
	7	BACT12B108	. . TERMINAL							0150	1
8	CO PLUS NO	. . CLIP AND CAPTIVE, (V06229)							0150	1	
9		SHIELD INSTL, STATION 400 RJ14 ELECTRONIC WIRE (FOR REF SEE FIG. 142)							0150	RF	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

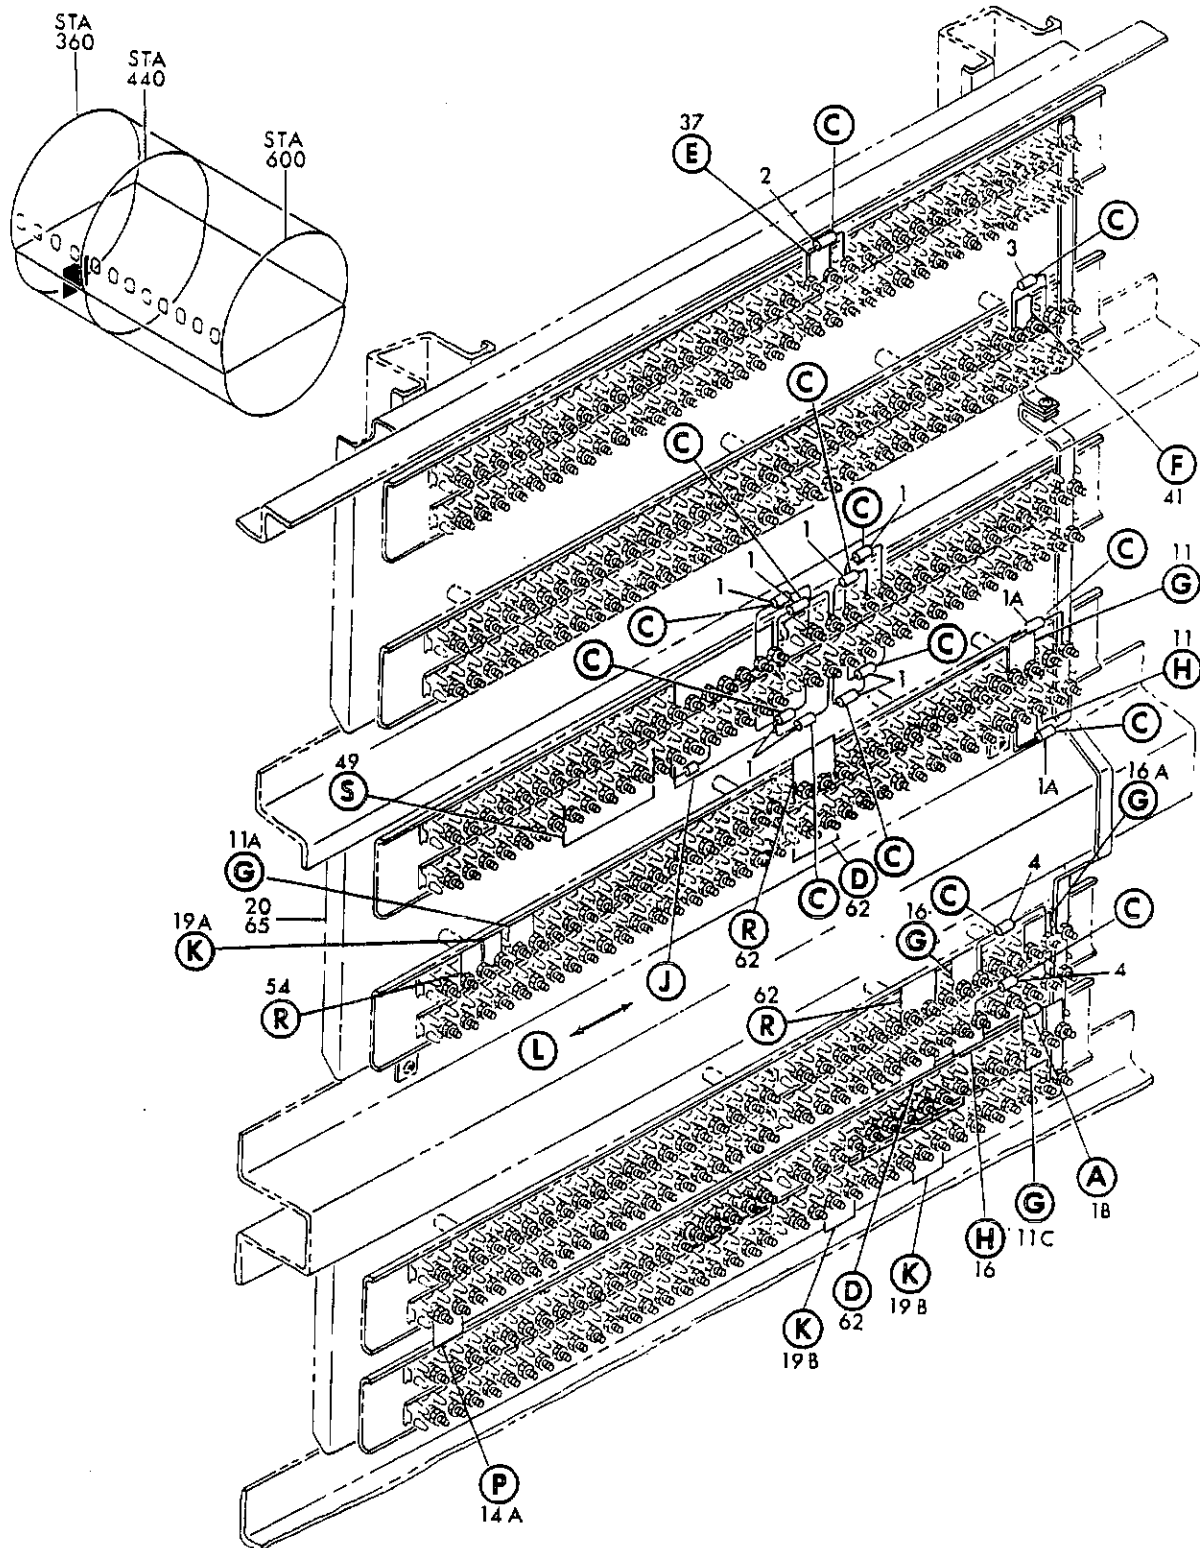


FIGURE 323A. RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD (SHEET 1)

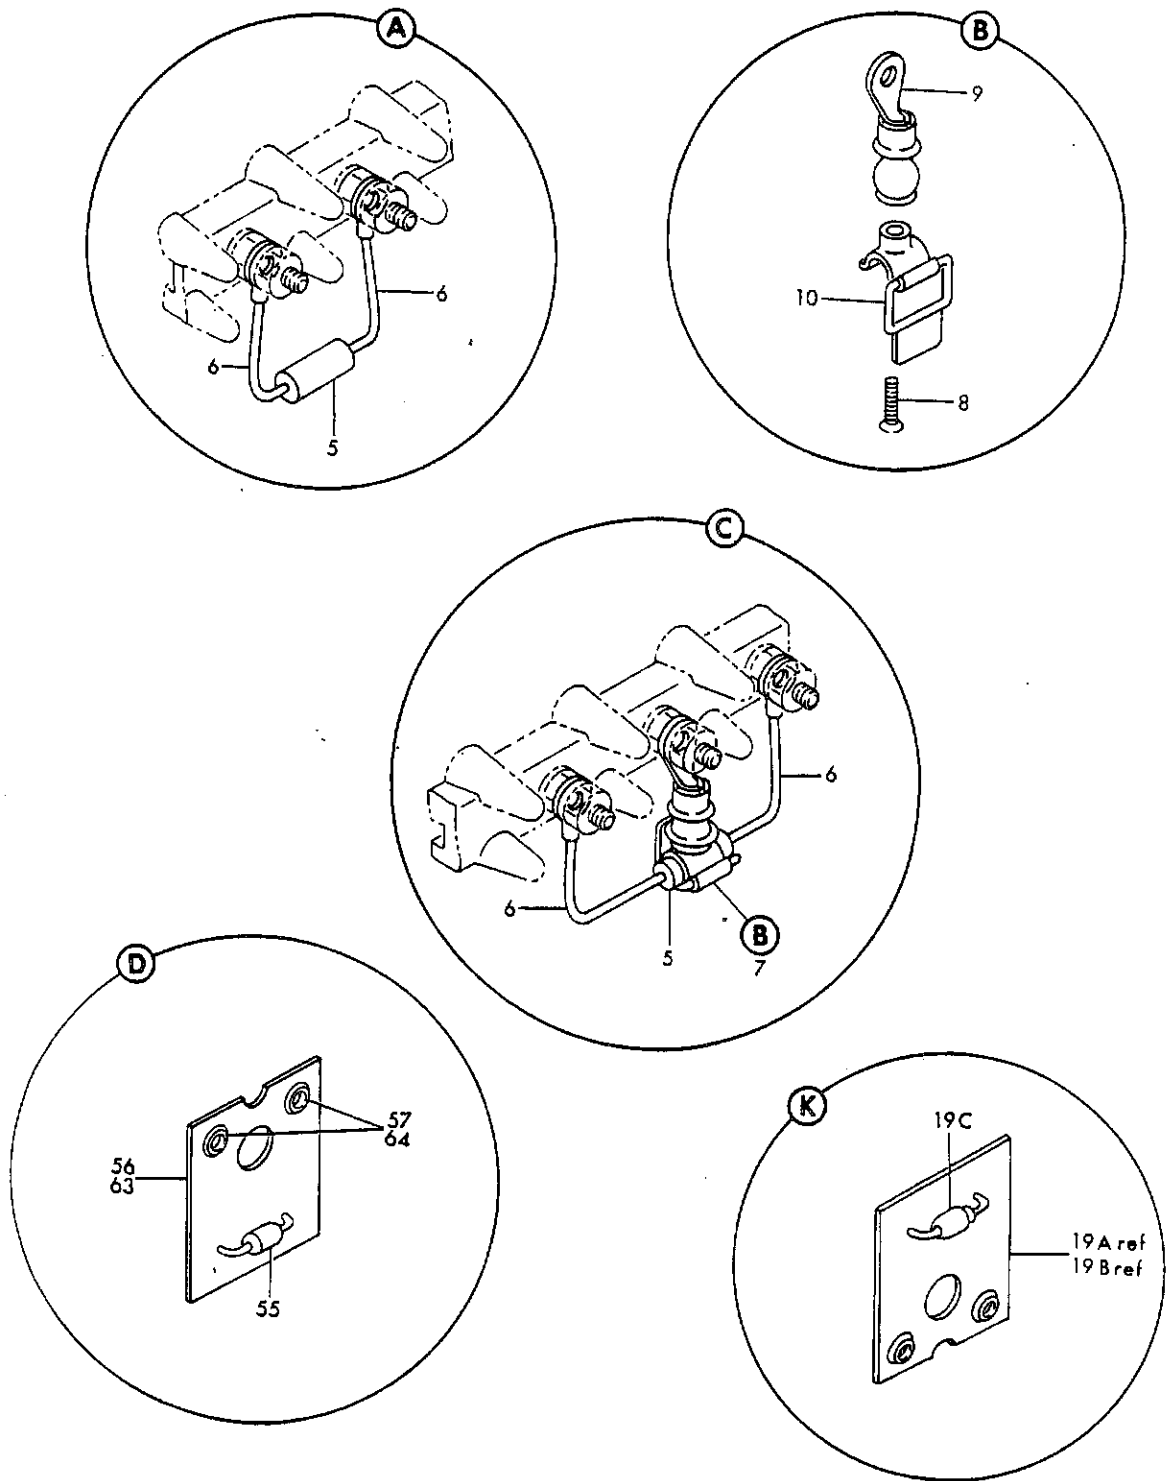


FIGURE 323A. RESISTER INSTL, STATION 400 RADIO TERMINAL SHIELD (SHEET 2)

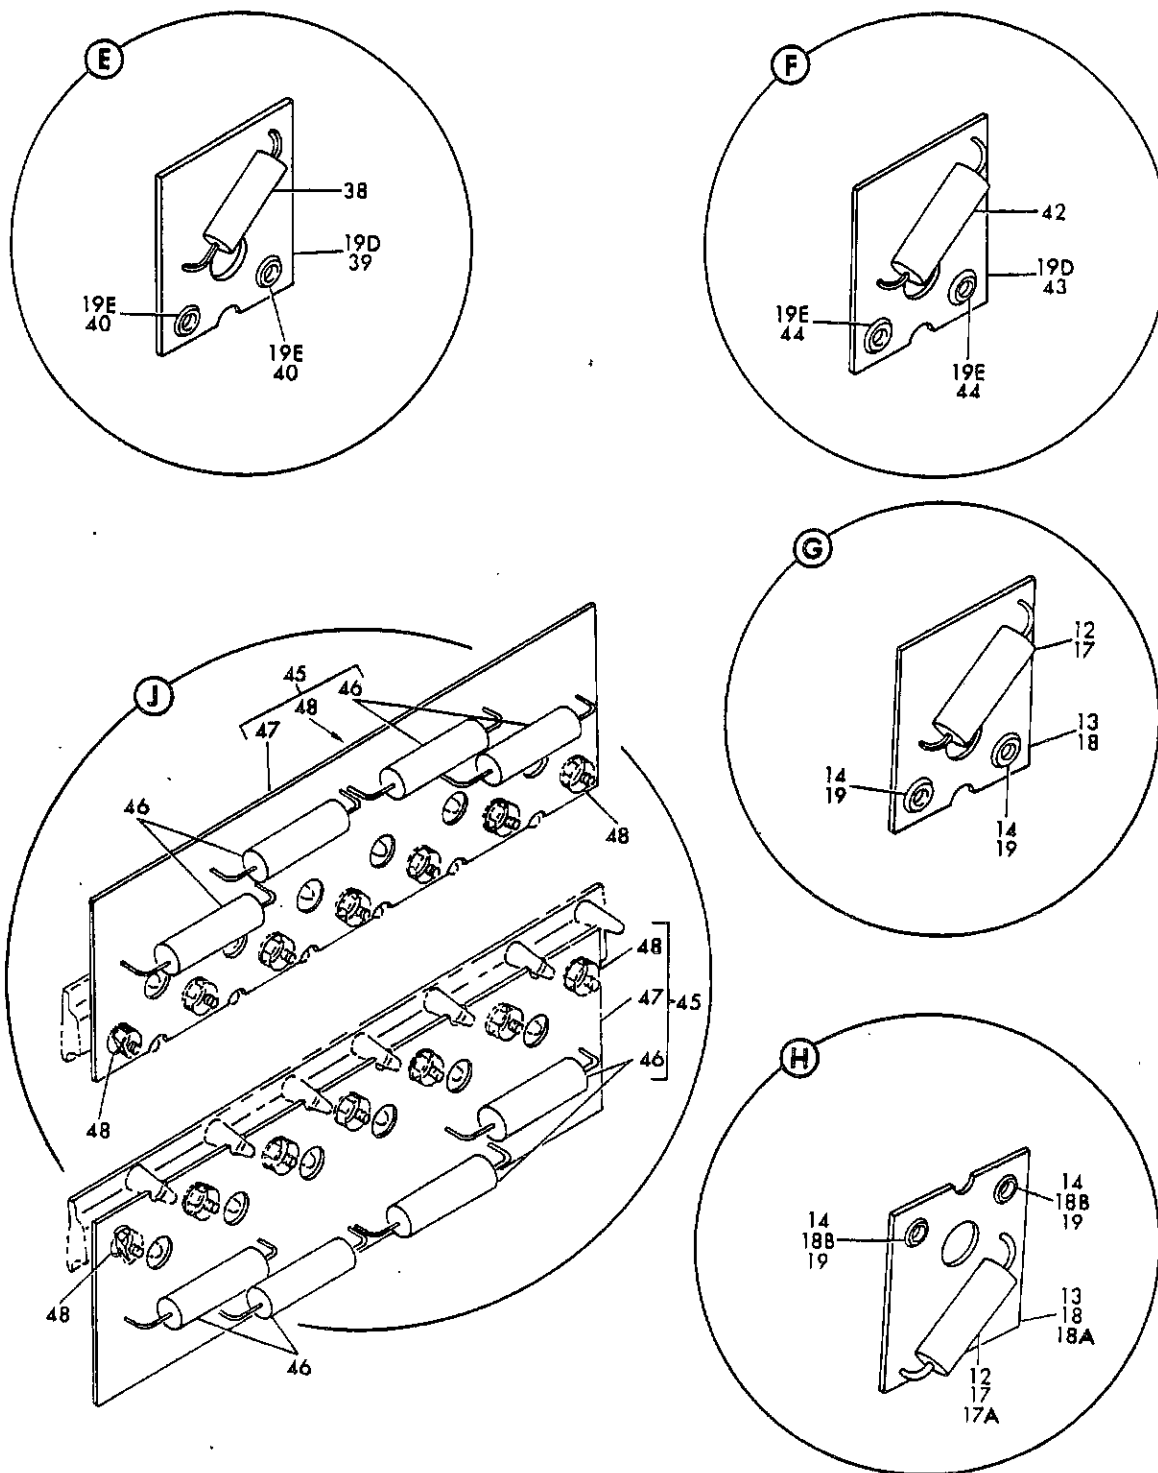


FIGURE 323A, RESISTOR INSTL. STATION 400 RADIO TERMINAL SHIELD (SHEET 3)

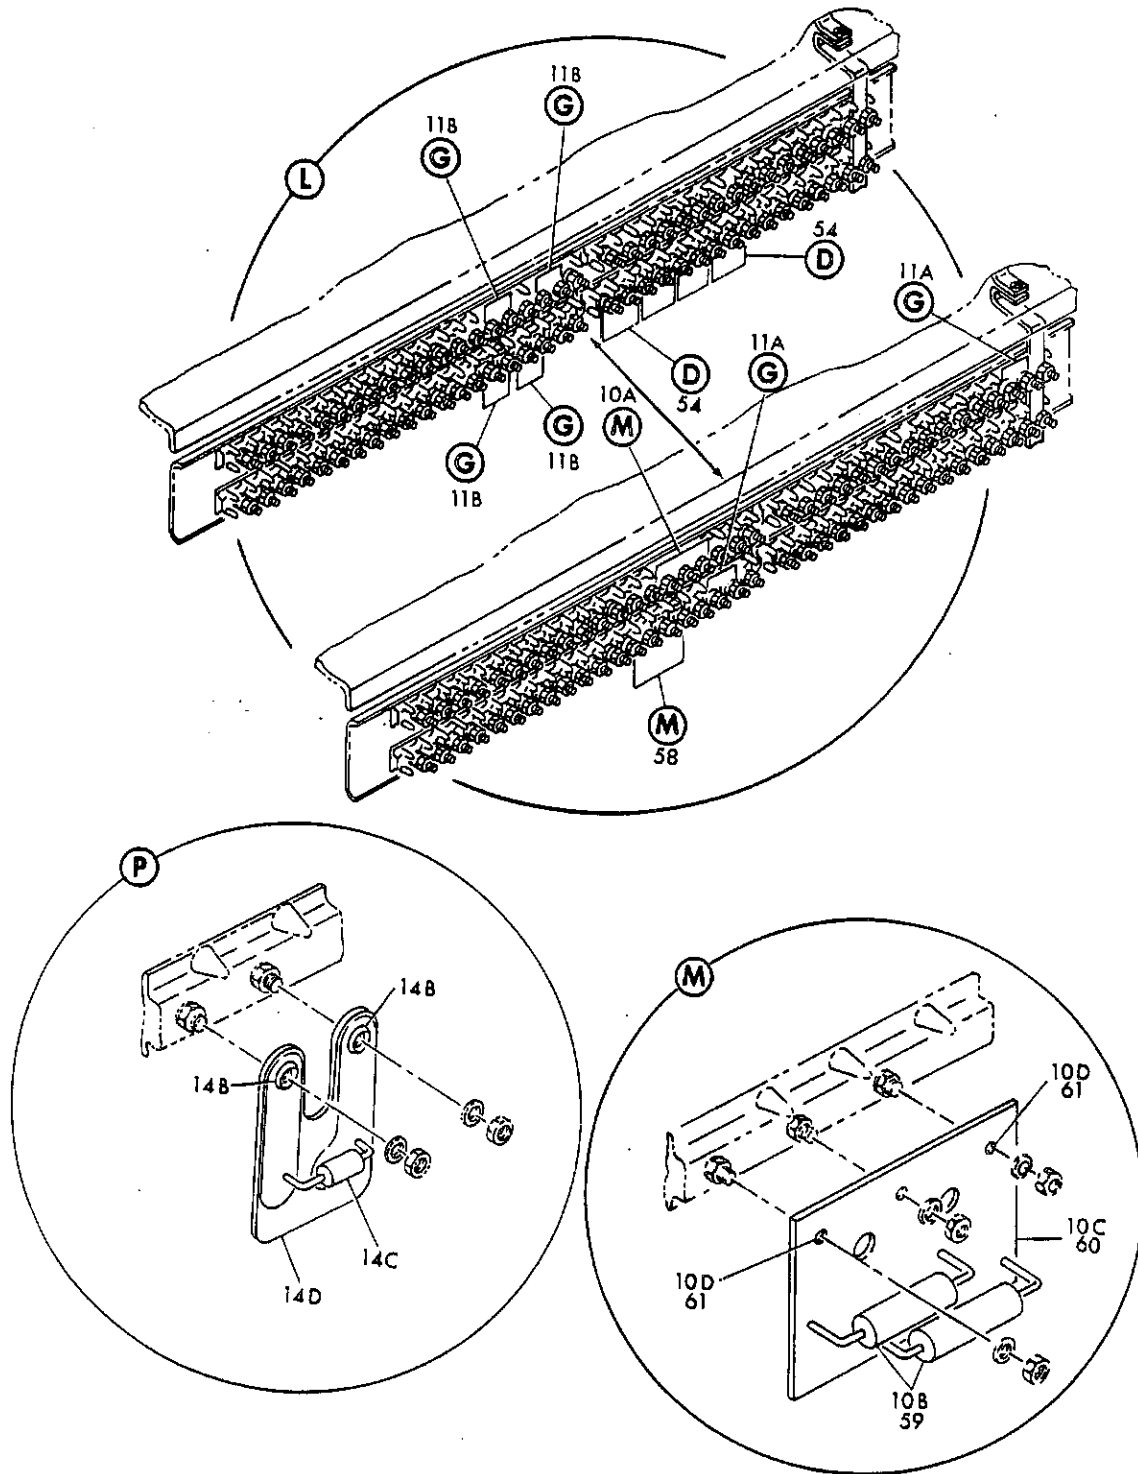


FIGURE 323A. RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD (SHEET 4)

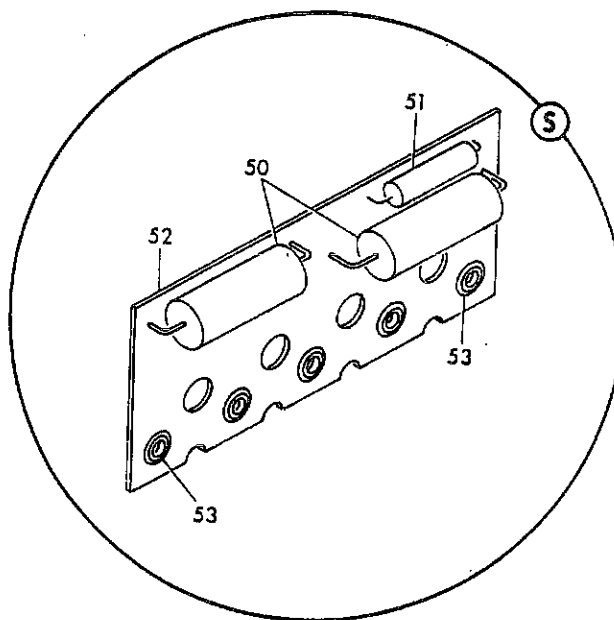
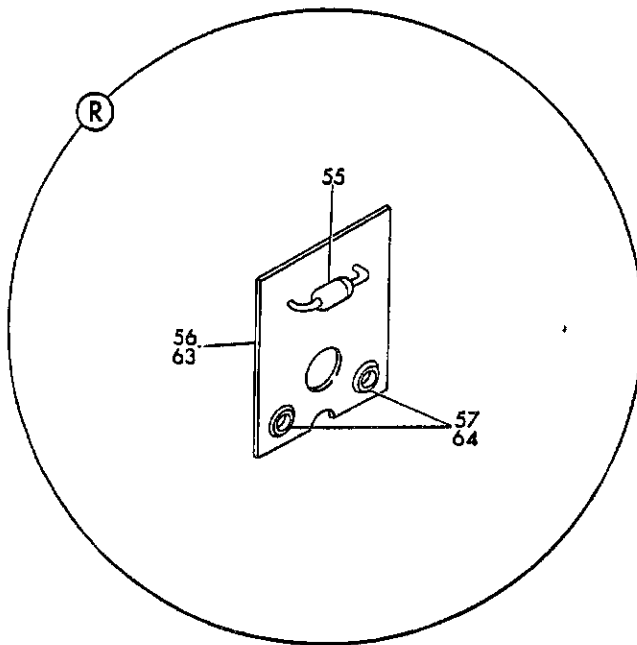


FIGURE 323A. RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD (SHEET 5)

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
323A	65-22914-64	RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD (FOR ADDITIONAL DETAILS SEE FIG. 324A, 325A AND 326A) (SEE 24-3, FIG. 6F, ITEM 31)							5199	RF
11	65-38292-122	. CIRCUIT ASSY, PRINTED							5199	2
11B	65-38292-122	. CIRCUIT ASSY, PRINTED							5199	4
11C	65-38292-122	. CIRCUIT ASSY, PRINTED							5199	1
12	RCR32G471JM	. . RESISTOR, 470 OHM 1W (V29762)							5199	1
12	RCR32G471JM	. . RESISTOR, 470 OHM 1W (V29762)							5199	1
12	RC32G471JM	. . RESISTOR, 470 OHM 1W (V29762)							5199	1
13	65-38292-106	. . BOARD ASSY, ETCHED.							5199	1
13	65-38292-106	. . BOARD ASSY, ETCHED.							5199	1
13	65-38292-106	. . BOARD ASSY, ETCHED.							5199	1
14	CE123	. . . EYELET, (V04264).							5199	2
14	CE123	. . . EYELET, (V04264).							5199	2
14	CE123	. . . EYELET, (V04264).							5199	2
16	65-38292-125	. CIRCUIT ASSY, PRINTED							5199	2
17	RCR32G331JM	. . RESISTOR, 330 OHM 1W (V29762)							5199	1
18	65-38292-106	. . BOARD ASSY, ETCHED.							5199	1
19	CE123	. . . EYELET, (V04264).							5199	2
37	65-38292-126	. CIRCUIT ASSY, PRINTED							5199	1
38	RW49V2R0	. . RESISTOR, (V44655).							5199	1
39	65-38292-106	. . BOARD ASSY, ETCHED.							5199	1
40	CE123	. . . EYELET, (V04264).							5199	2
41	65-38292-124	. CIRCUIT ASSY, PRINTED							5199	1
42	RCR32G511JM	. . RESISTOR, 510 OHM 1W (V29762)							5199	1
43	65-38292-106	. . BOARD ASSY, ETCHED.							5199	1
44	CE123	. . . EYELET, (V04264).							5199	2
65		SHIELD INSTL, STATION 400 RJ11 ELECTRONIC WIRE (FOR REF SEE FIG. 136)							5199	RF
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

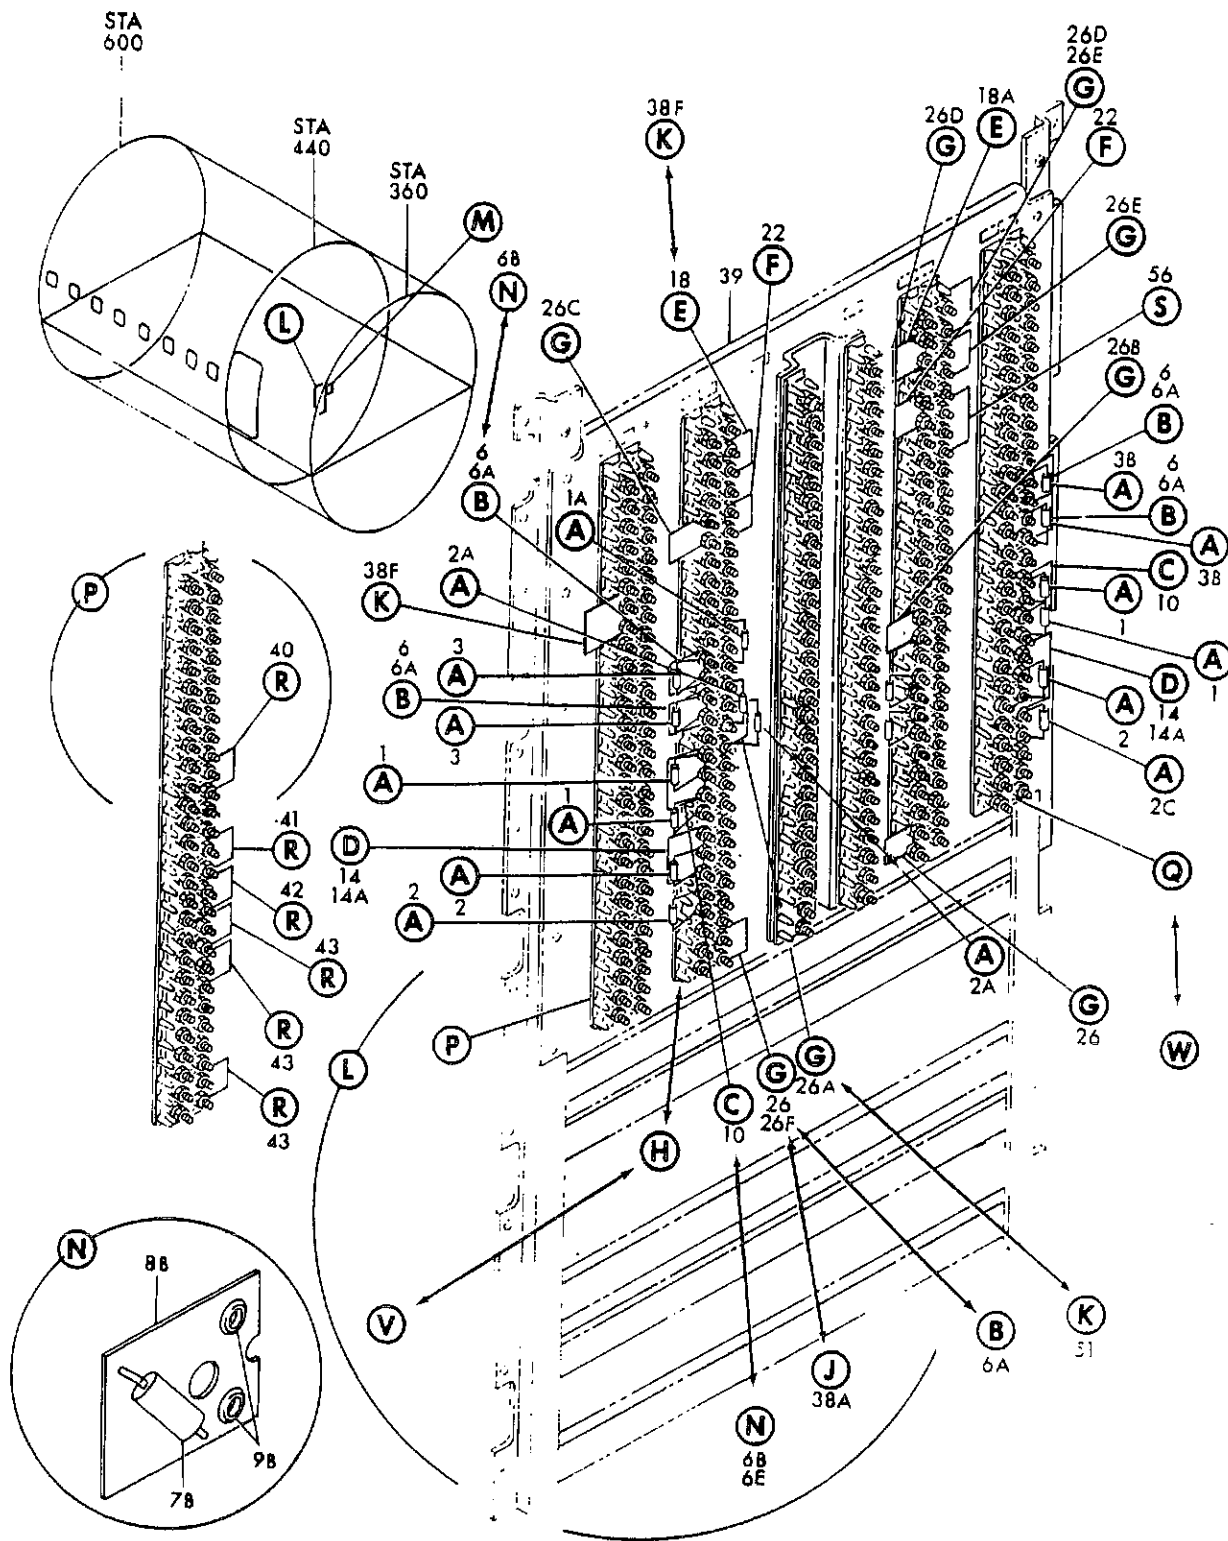


FIGURE 342A. RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD (SHEET 1)

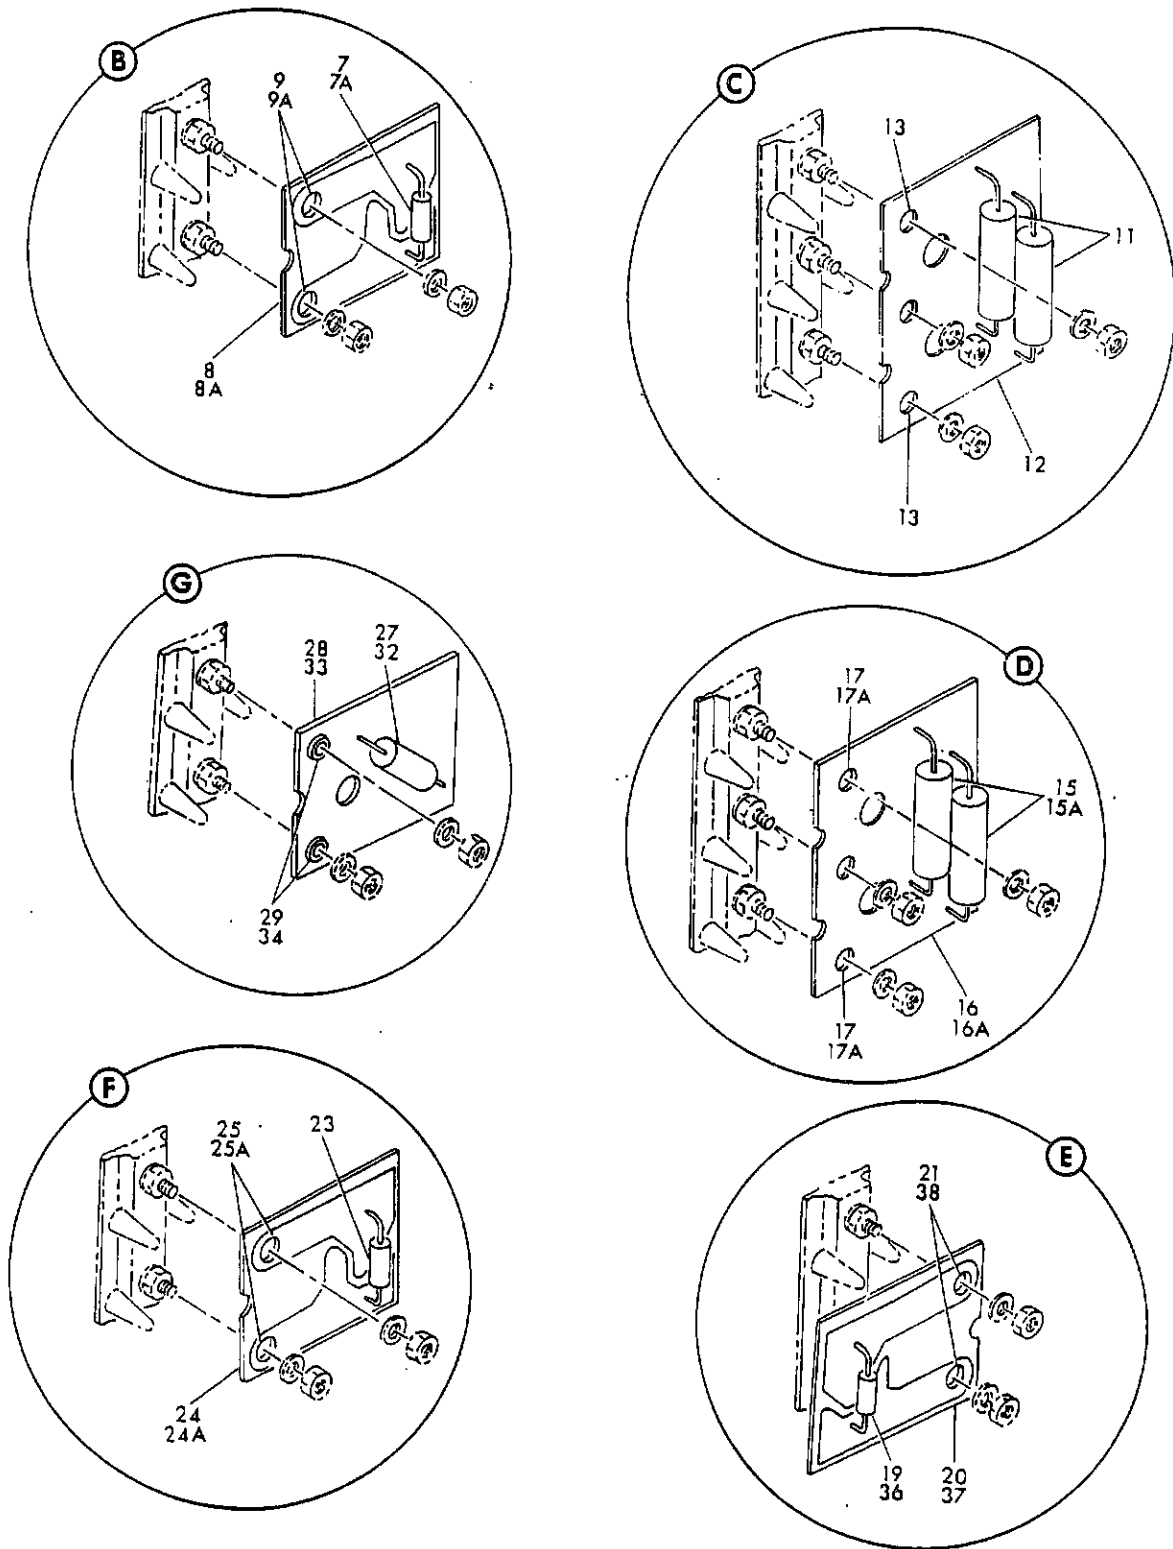


FIGURE 324A, RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD (SHEET 2)

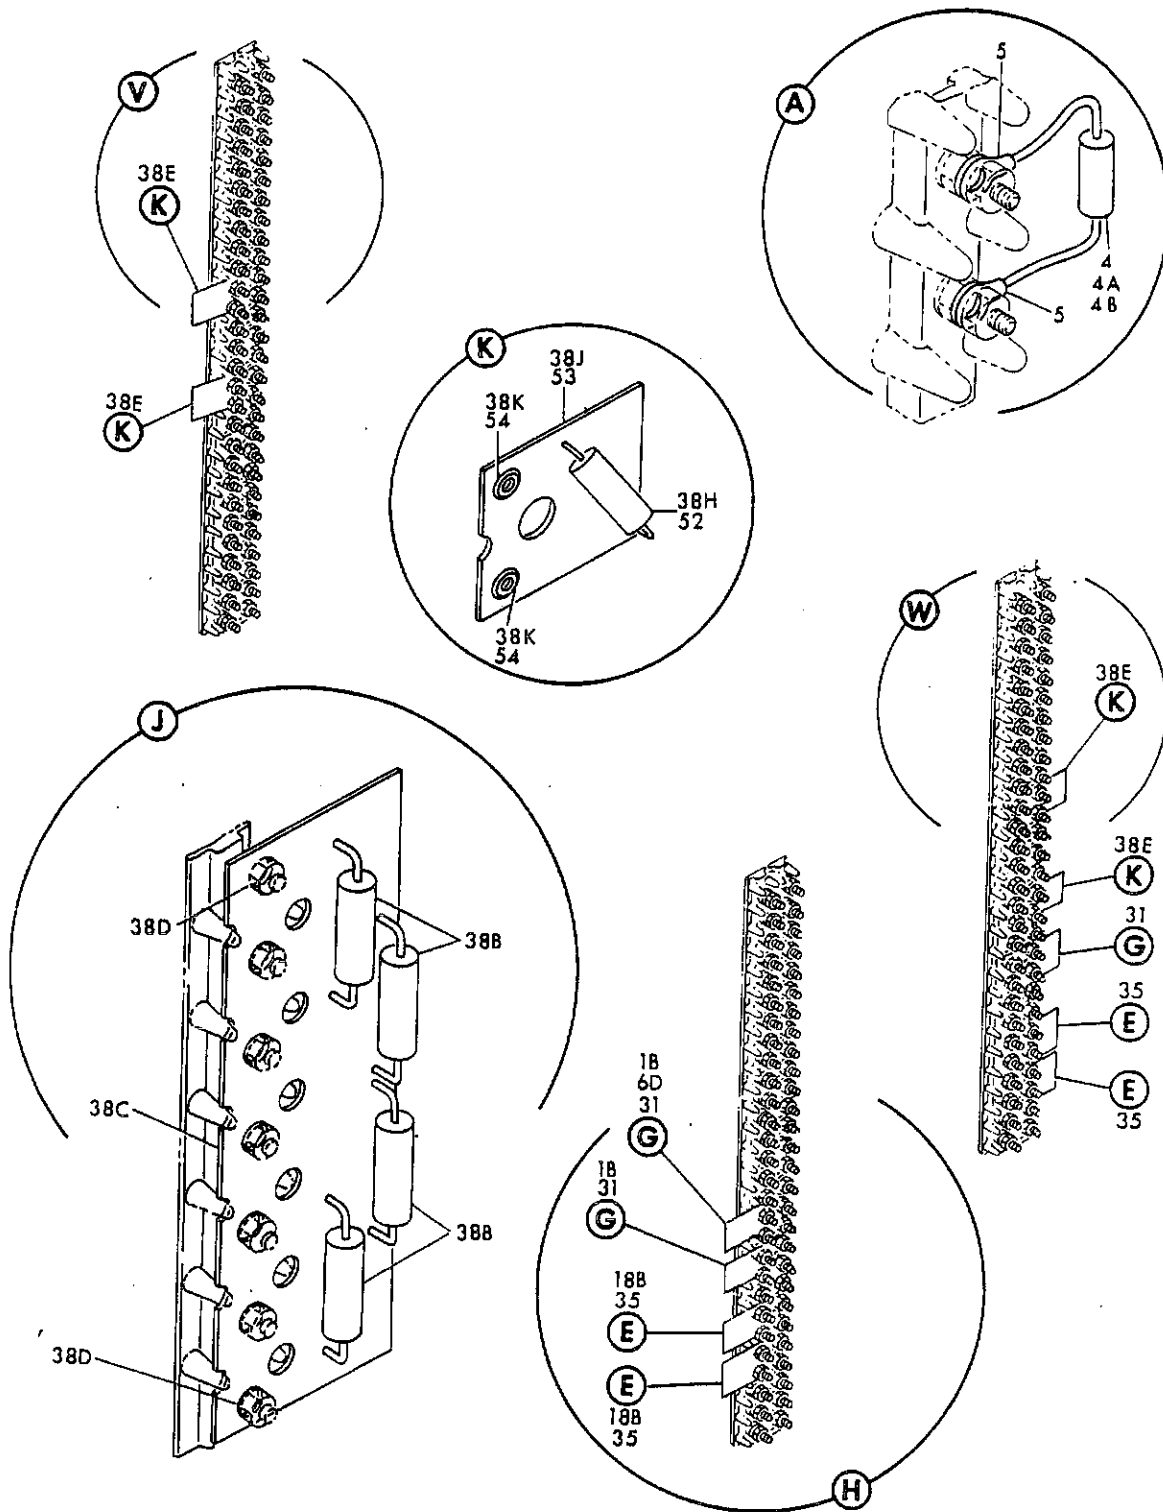


FIGURE 324A. RESISTOR INSTL-STA 400 RADIO TERMINAL SHIELD. (SHEET 3)

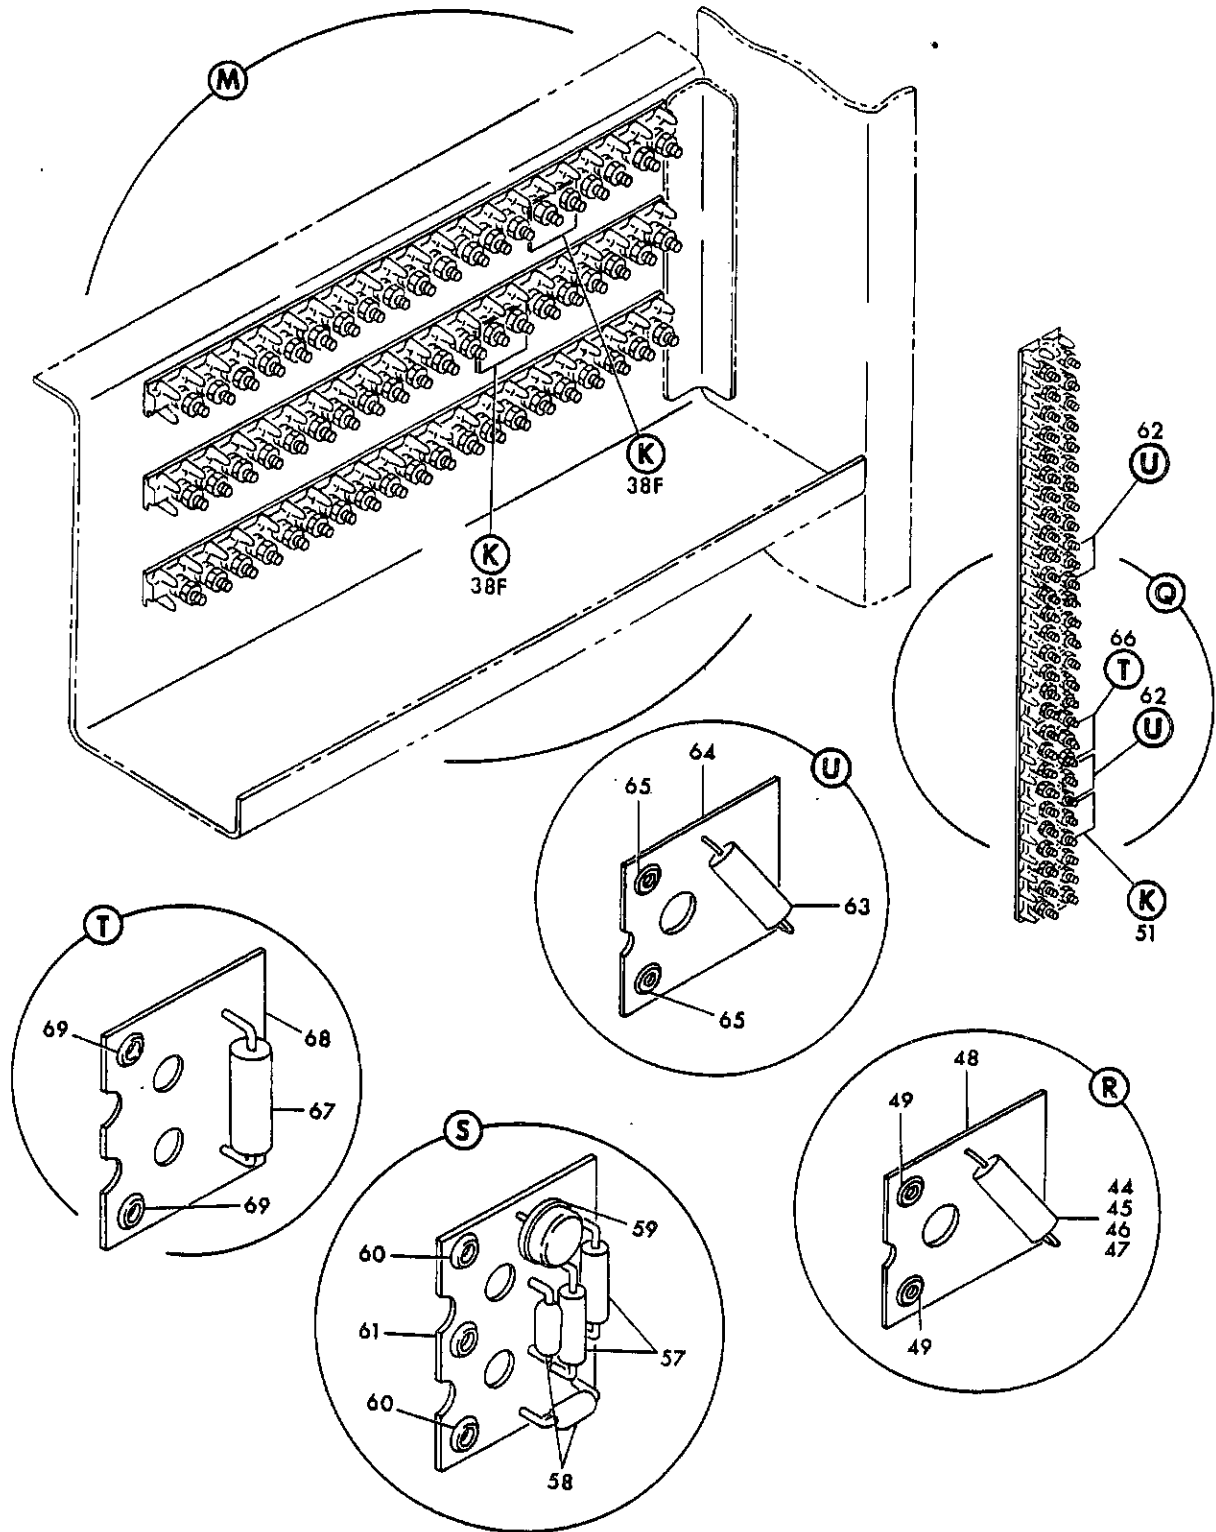


FIGURE 324A. RESISTOR INSTL., STATION 400 RADIO TERMINAL SHIELD (SHEET 4)

NOV 21/90

24-13-324A

DETAILED PARTS LIST
24-13-324A
PAGE 3

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
324A	65-22914-64		RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD . . . (FOR ADDITIONAL DETAILS SEE FIG. 323A, 325A AND 326A) (SEE 24-3, FIG. 6F, ITEM 31)	5199	RF
18	65-38292-121		. . . CIRCUIT ASSY, PRINTED	5199	1
18A	65-38292-121		. . . CIRCUIT ASSY, PRINTED	5199	1
19	RCR32G201JM		. . . RESISTOR, 200 OHM 1W (V29762)	5199	1
20	65-38292-106		. . . BOARD ASSY, ETCHED.	5199	1
21	CE123		. . . EYELET, (V04264).	5199	2
22	65-38292-151		. . . CIRCUIT ASSY, PRINTED	5199	2
23	RCR32G241JM		. . . RESISTOR, 240 OHM 1W (V29762)	5199	1
24A	65-38292-106		. . . BOARD ASSY, ETCHED.	5199	1
25A	CE123		. . . EYELET, (V04264).	5199	2
26A	65-38292-151		. . . CIRCUIT ASSY, PRINTED	5199	1
26B	65-38292-151		. . . CIRCUIT ASSY, PRINTED	5199	1
26D	65-38292-119		. . . CIRCUIT ASSY, PRINTED	5199	2
27	RCR32G102JM		. . . RESISTOR, (V29762) (USED ON 65-38292-119)	5199	1
27	RCR32G241JM		. . . RESISTOR, 240 OHM 1W (V29762) (USED ON. 65-38292-151)	5199	1
28	65-38292-106		. . . BOARD ASSY, PRINTED	5199	1
28	65-38292-106		. . . BOARD ASSY, ETCHED.	5199	1
29	CE123		. . . EYELET, (V04264).	5199	2
29	CE123		. . . EYELET, (V04264).	5199	2
100			TERMINAL AND SUPPORT INSTL, STATION 400 RJ12 (FOR REF. SEE FIG. 82J AND 145)	5199	RF
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

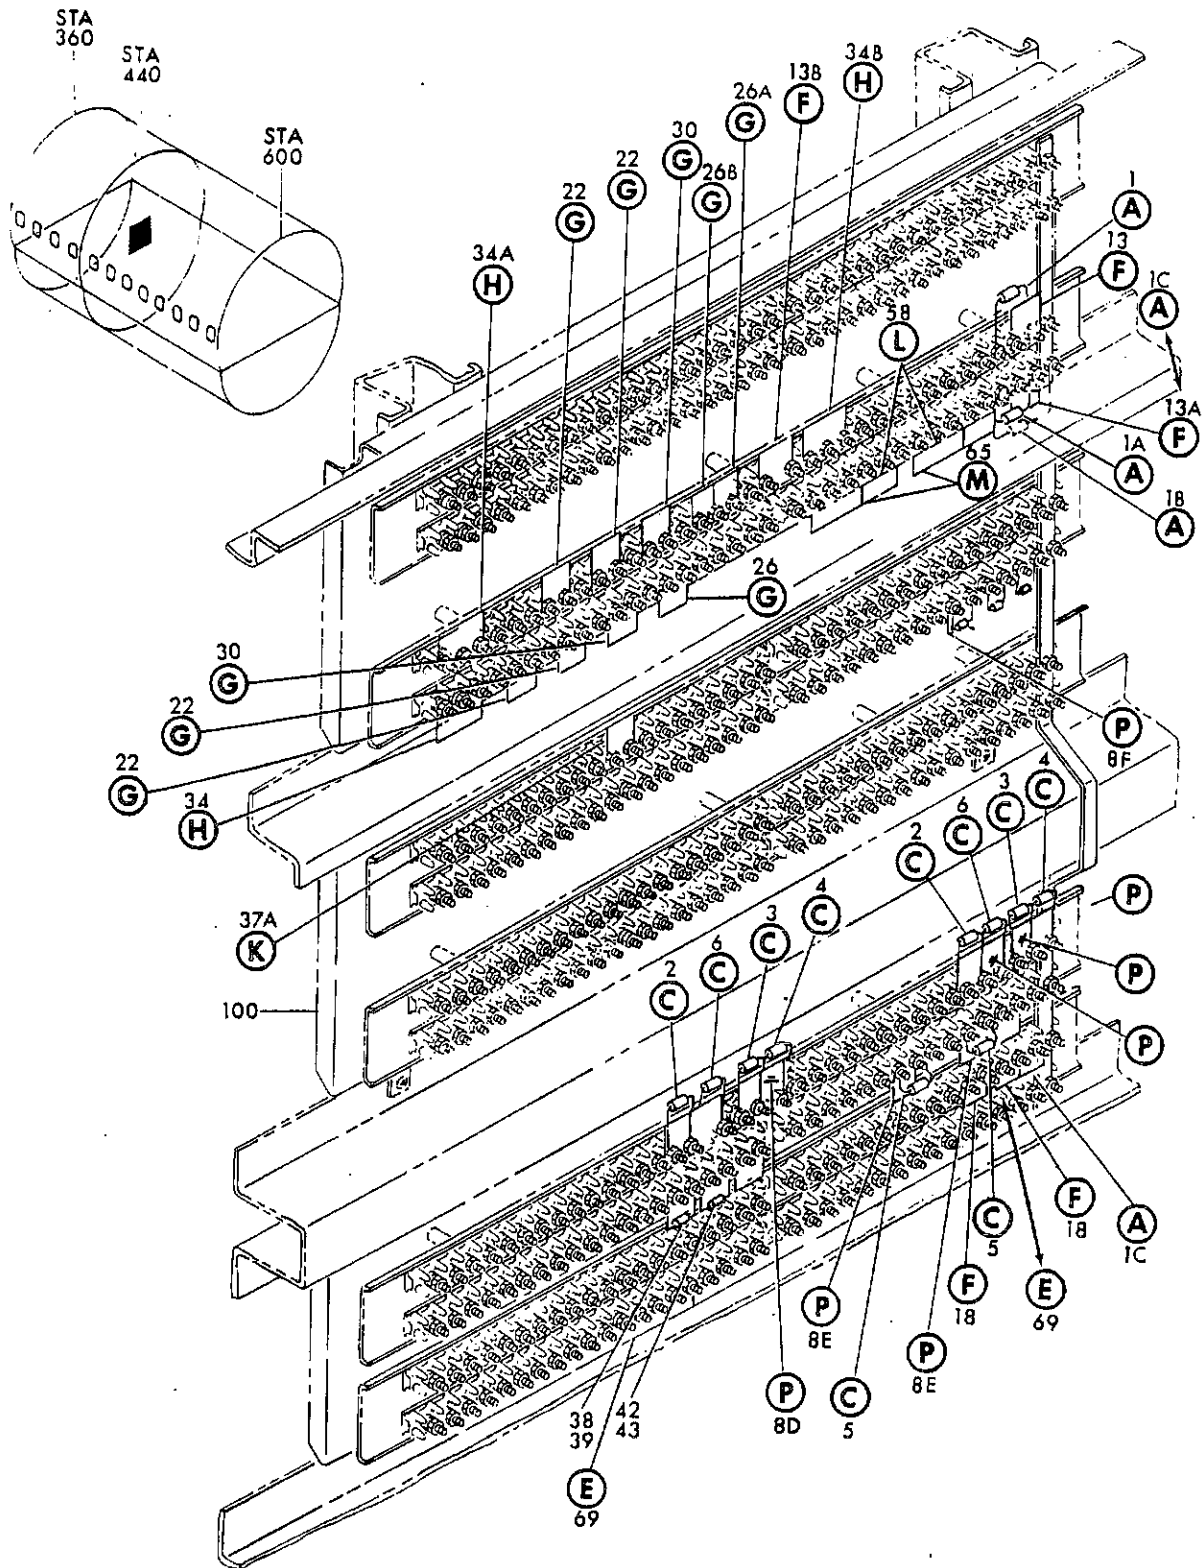


FIGURE 325A. RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD (SHEET 1)

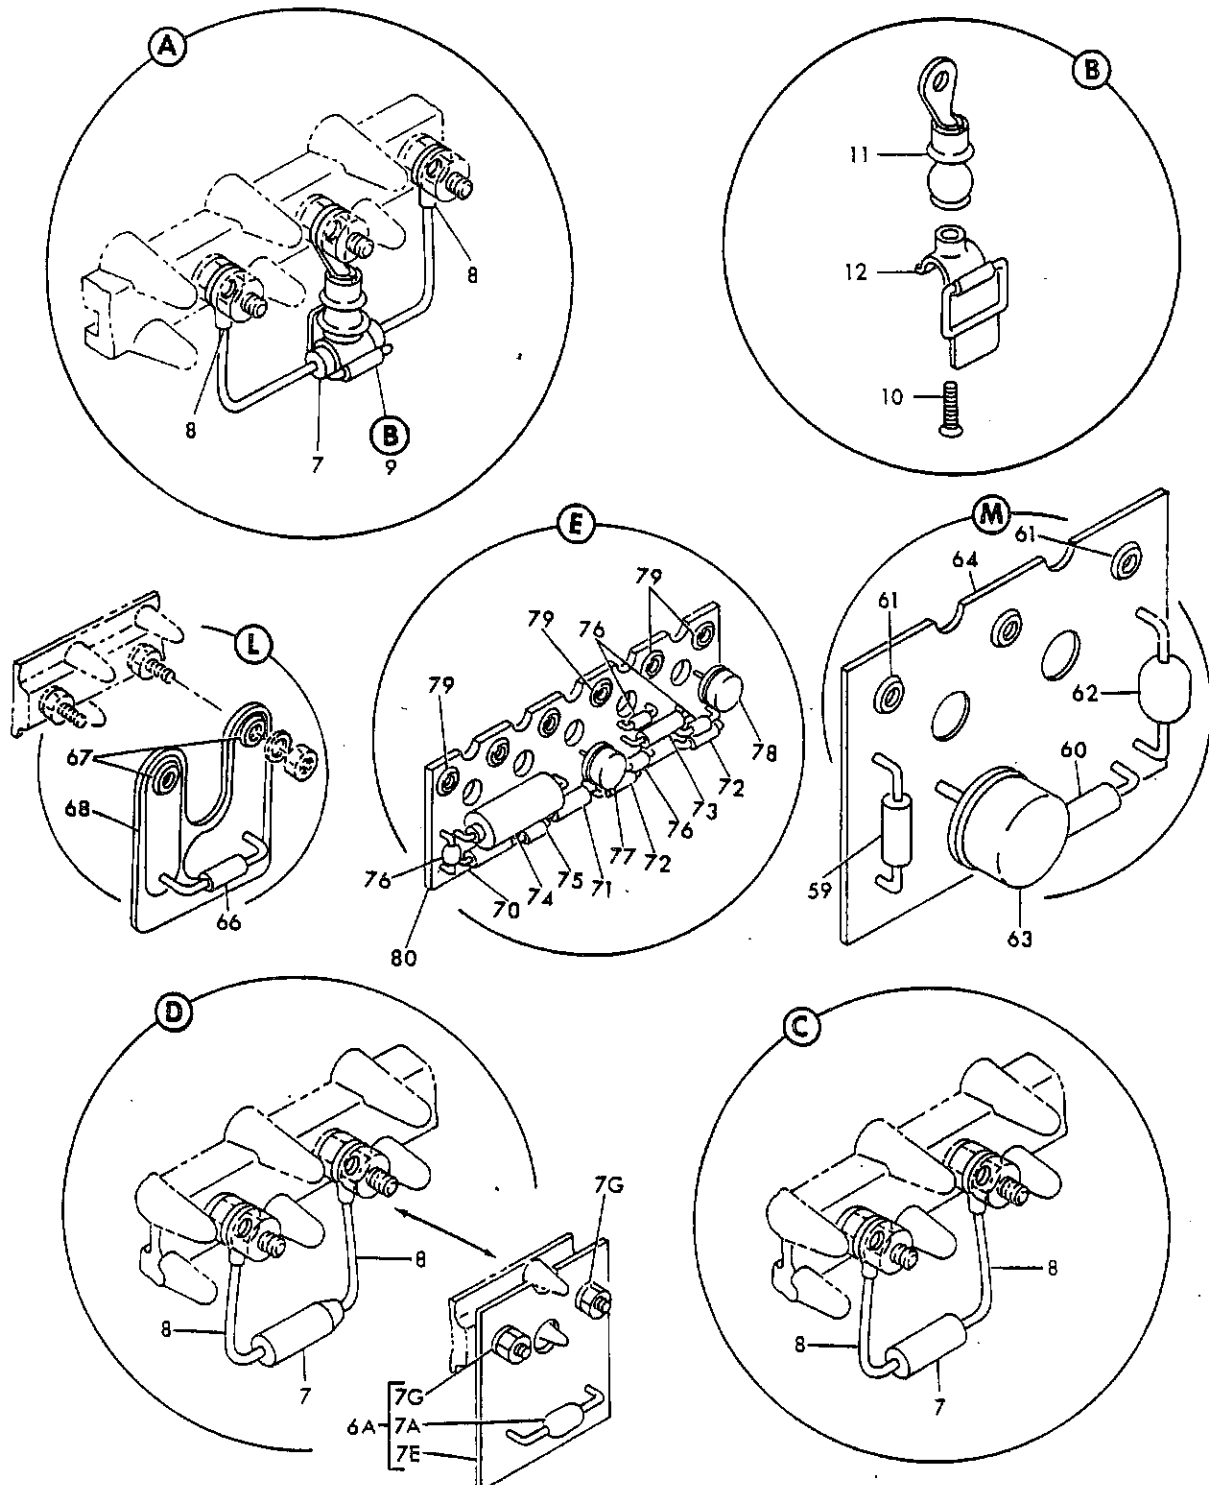


FIGURE 325A. RESISTOR INSTL. STATION 400 RADIO TERMINAL SHIELD (SHEET 2)

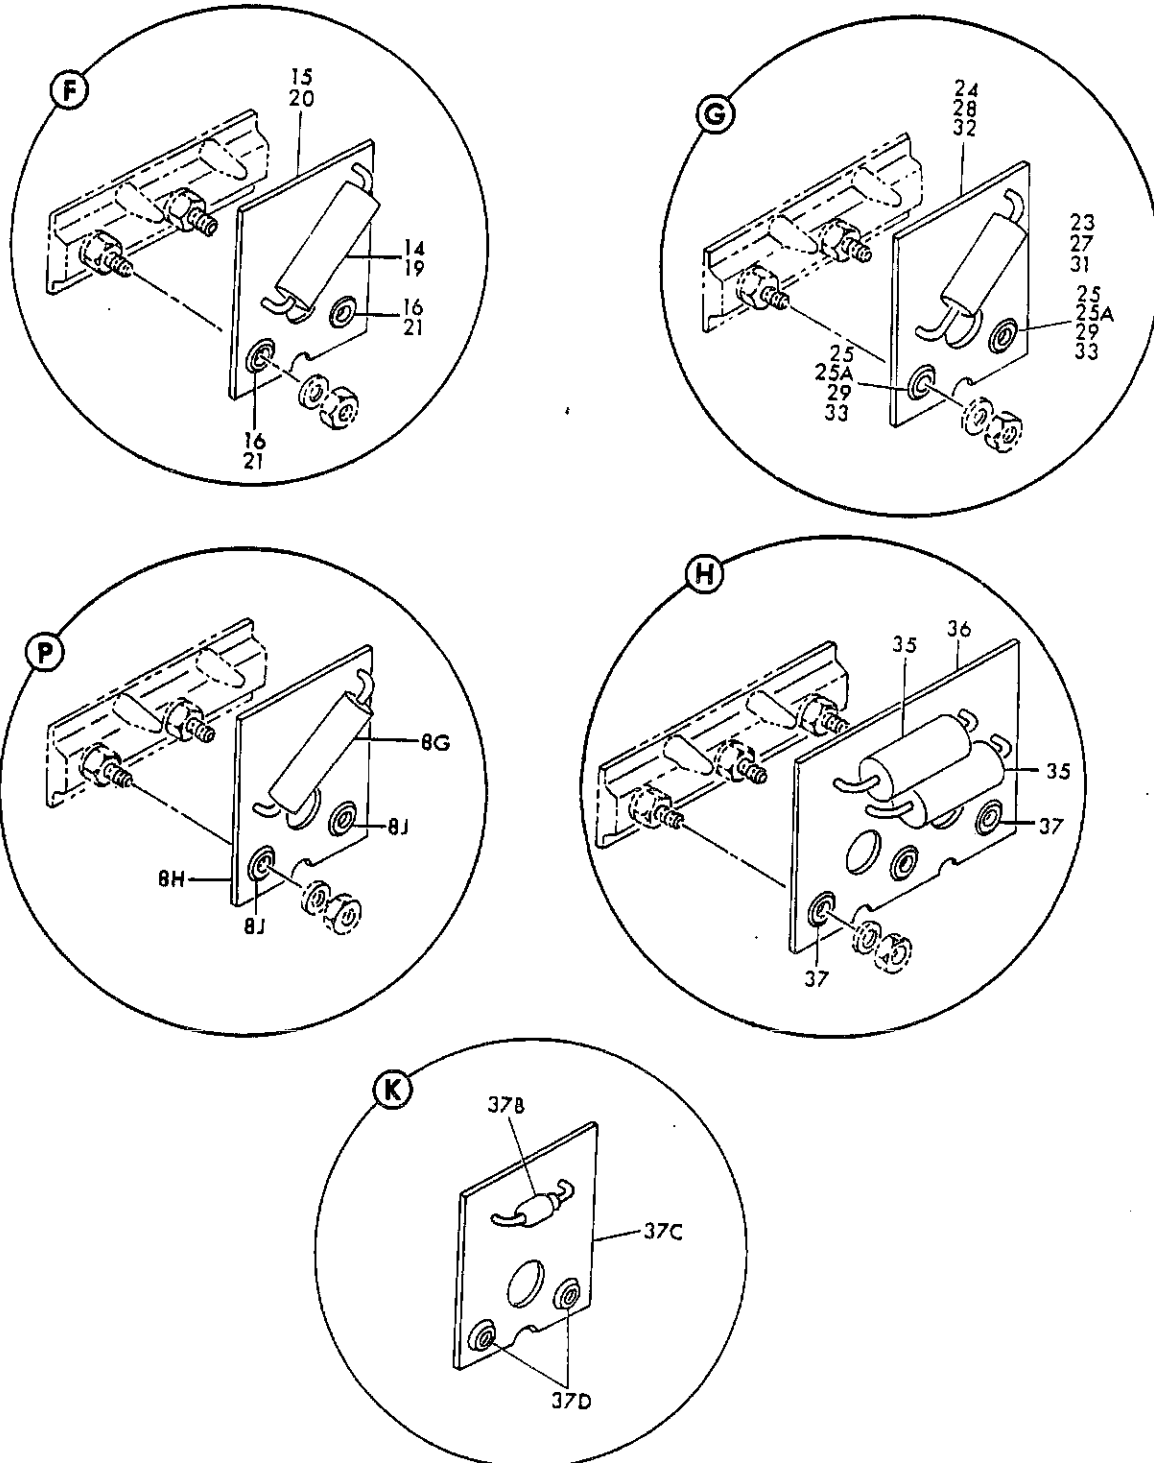


FIGURE 325A. RESISTOR INSTL. STATION 400 RADIO TERMINAL SHIELD (SHEET 3)

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
325A	65-22914-64		RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD (FOR ADDITIONAL DETAILS SEE FIG. 323A, 324A AND 326A) (SEE 24-3, FIG. 6F, ITEM 31)	5199	RF
8F	65-38292-124		. CIRCUIT ASSY, PRINTED	5199	1
8G	RCR326511JM		. . RESISTOR, 510 OHM 1W (V29762) (USED ON 65-38292-124)	5199	1
8H	65-38292-106		. . BOARD ASSY, ETCHED (USED ON 65-38292-124)	5199	1
8J	CE123		. . . EYELET, (V04264)	5199	2
13	65-38292-122		. CIRCUIT ASSY, PRINTED	5199	1
13A	65-38292-122		. CIRCUIT ASSY, PRINTED	5199	1
14	RCR326471JM		. . RESISTOR, 470 OHM 1W (V29762)	5199	1
15	65-38292-106		. . BOARD ASSY, ETCHED	5199	1
16	CE123		. . . EYELET, (V04264)	5199	2
22	65-38292-136		. CIRCUIT ASSY, PRINTED	5199	4
23	RW69V181		. . RESISTOR, (V44655)	5199	1
24	65-38292-106		. . BOARD ASSY, ETCHED	5199	1
25	CE123		. . . EYELET, (V04264)	5199	2
26	65-38292-137		. CIRCUIT ASSY, PRINTED	5199	1
26A	65-38292-137		. CIRCUIT ASSY	5199	1
27	RW69V201		. . RESISTOR, (V44655)	5199	1
28	65-38292-106		. . BOARD ASSY, ETCHED	5199	1
29	CE123		. . . EYELET, (V04264)	5199	2
30	65-38292-138		. CIRCUIT ASSY, PRINTED	5199	2
31	RW69V391		. . RESISTOR, (V44655)	5199	1
32	65-38292-106		. . BOARD ASSY, ETCHED	5199	1
33	CE123		. . . EYELET, (V04264)	5199	2
34	65-38292-139		. CIRCUIT ASSY, PRINTED	5199	1
34A	65-38292-139		. CIRCUIT ASSY, PRINTED	5199	1
35	RW69V361		. . RESISTOR, (V44655)	5199	2
36	65-38292-130		. . BOARD ASSY, ETCHED	5199	1
37	CE123		. . . EYELET, (V04264)	5199	3
100			SHIELD INSTL, STATION 400 RJ14 ELECTRONIC WIRE (FOR REF	5199	RF

MISSING ITEM NUMBERS ARE NOT APPLICABLE

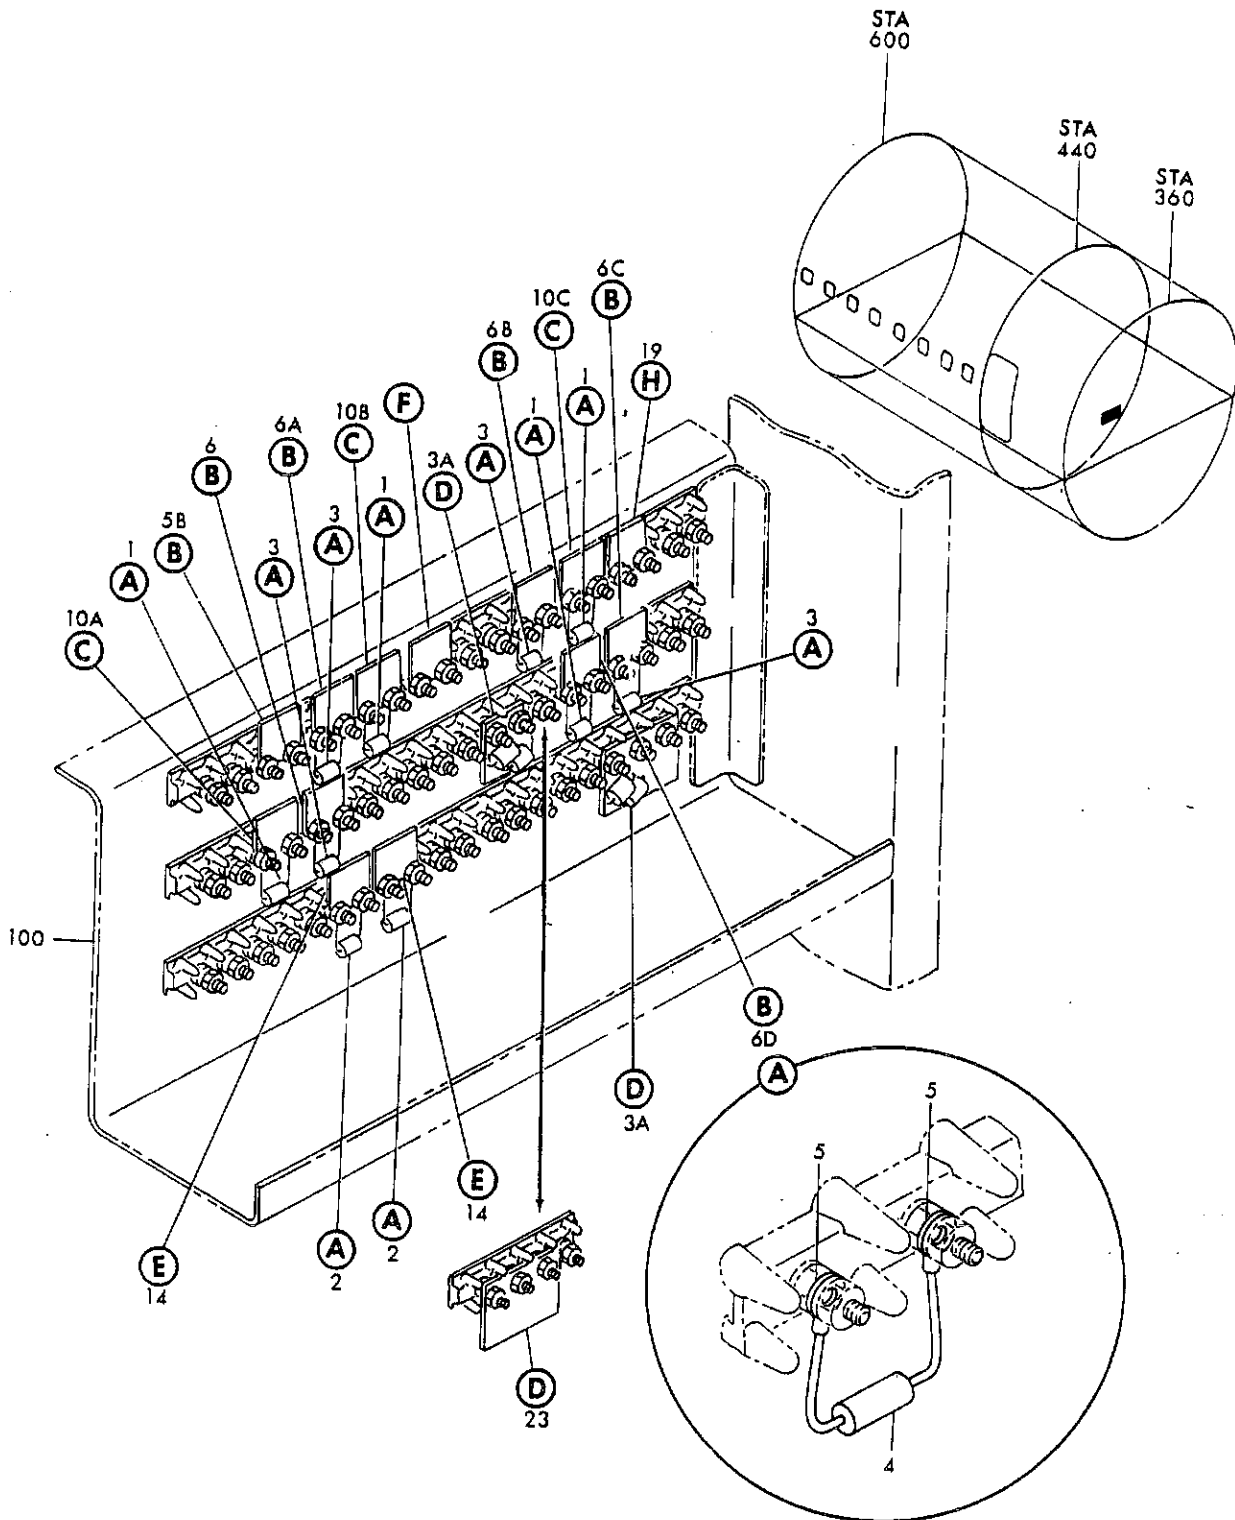


FIGURE 326A. RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD (SHEET 1)


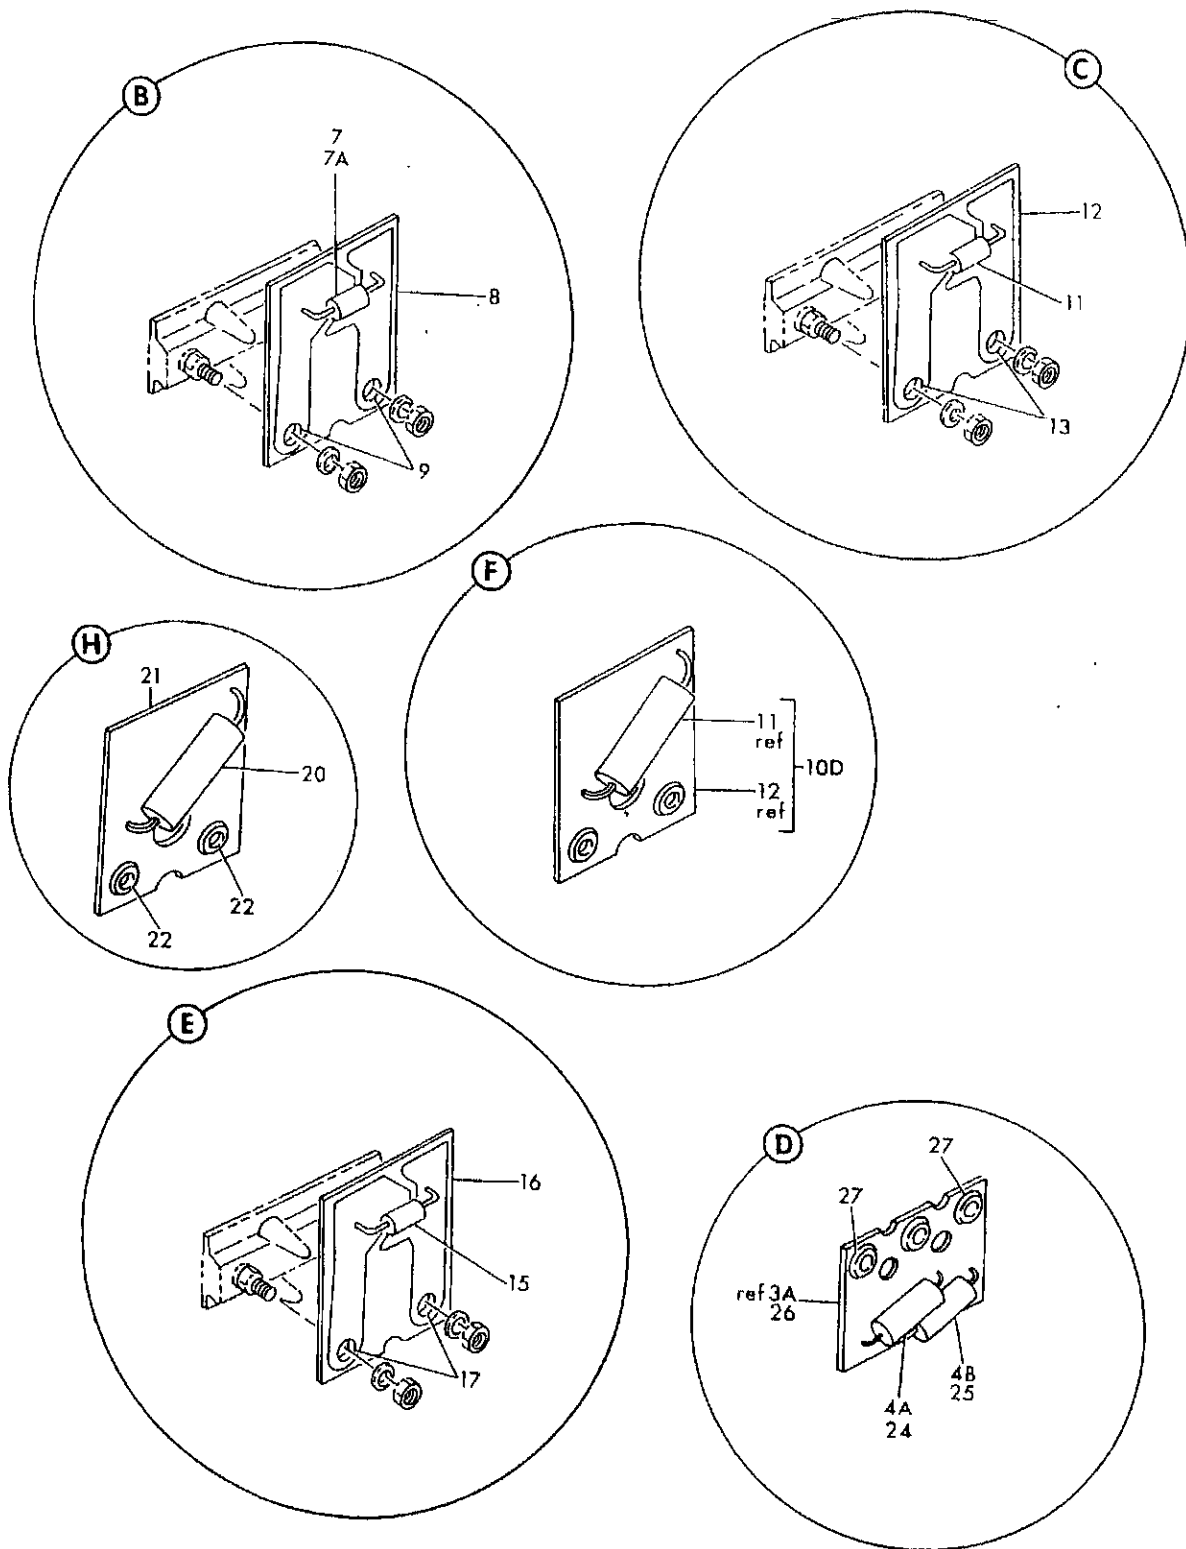


FIGURE 326A. RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD (SHEET 2)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
326A	65-22914-64		RESISTOR INSTL, STATION 400 RADIO TERMINAL SHIELD (FOR ADDITIONAL DETAILS SEE FIG. 323A, 324A, 325A) (SEE 24-3, FIG. 6F, ITEM 31)	5199	RF
5B	65-38292-124		. CIRCUIT ASSY, PRINTED	5199	1
6	65-38292-124		. CIRCUIT ASSY, PRINTED	5199	1
6B	65-38292-124		. CIRCUIT ASSY, PRINTED	5199	1
6C	65-38292-124		. CIRCUIT ASSY, PRINTED	5199	1
6D	65-38292-119		. CIRCUIT ASSY, PRINTED	5199	1
7	RCR32G102JM		. . RESISTOR, 1000 OHM 1W (V29762) (USED ON	5199	1
			65-38292-119)		
7	RCR32G511JM		. . RESISTOR, 510 OHM 1W (V29762) (USED ON.	5199	1
			65-38292-124)		
8	65-38292-106		. . BOARD ASSY, ETCHED.	5199	1
9	CE123		. . . EYELET, (V04264).	5199	2
10A	65-38292-119		. CIRCUIT ASSY, PRINTED	5199	1
10B	65-38292-119		. CIRCUIT ASSY, PRINTED	5199	1
10C	65-38292-119		. CIRCUIT ASSY, PRINTED	5199	1
11	RCR32G102JM		. . RESISTOR, 1000 OHM 1W (V29762) (USED ON	5199	1
			65-38292-119)		
12	65-38292-106		. . BOARD ASSY, ETCHED.	5199	1
13	CE123		. . . EYELET, (V04264).	5199	2
14	65-38292-120		. CIRCUIT ASSY, PRINTED	5199	2
15	RCR32G103JM		. . RESISTOR, 10000 OHM 1W (V29762)	5199	1
16	65-38292-106		. . BOARD ASSY, ETCHED.	5199	1
17	CE123		. . . EYELET, (V04264).	5199	2
100			SHIELD INSTL, STATION 400 FLIGHT INSTRUMENT AUXILIARY	5199	RF
			(FOR REF SEE 143)		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

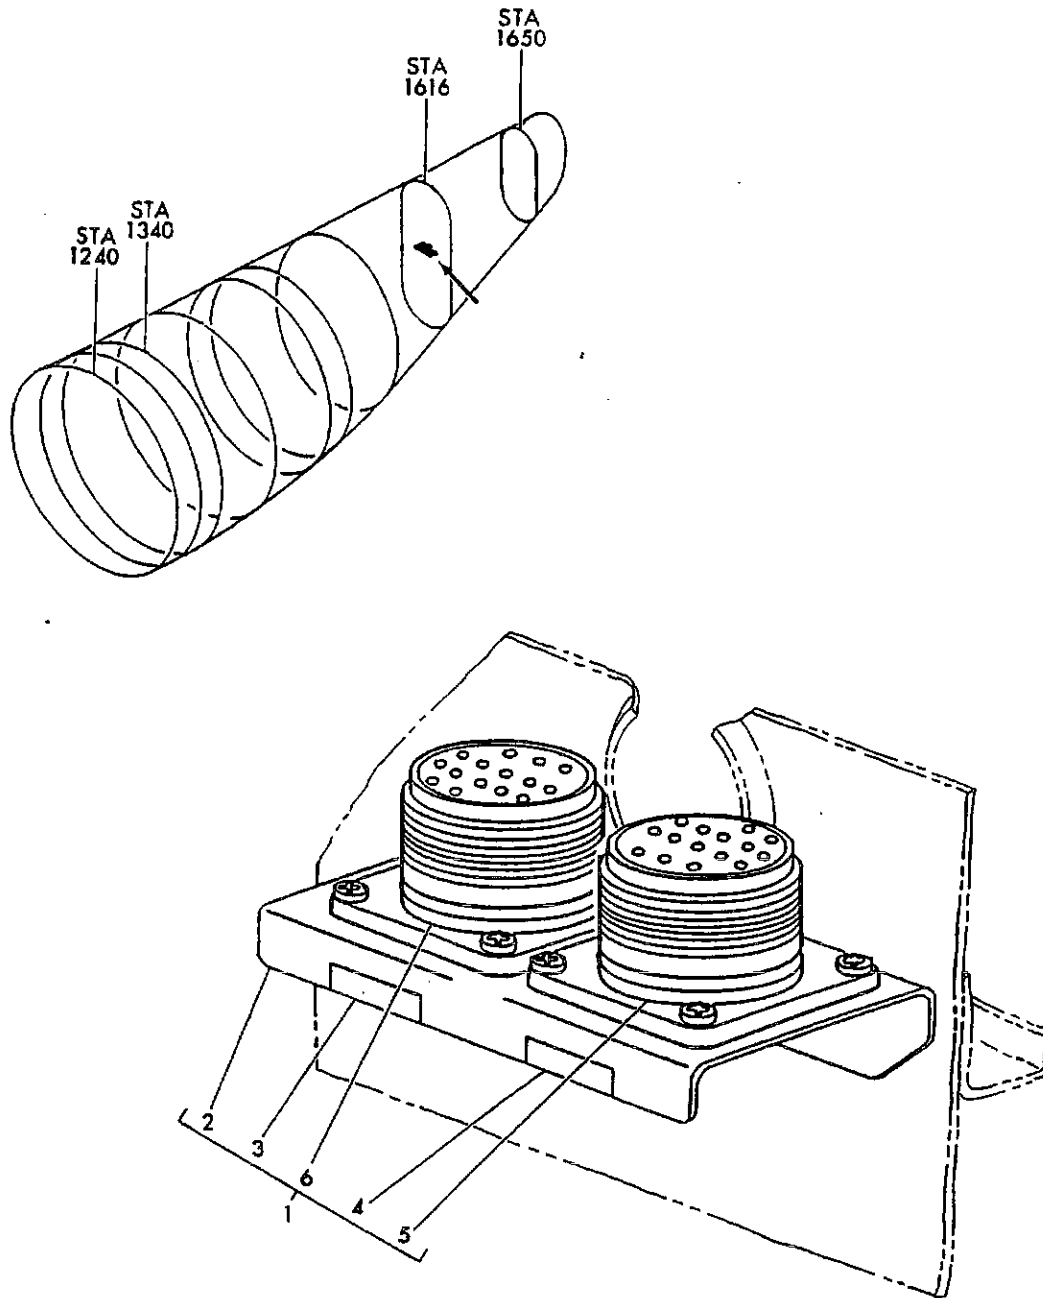


A 2413370 REV 265

FIGURE 370. CONNECTORS INSTL. I.R. LIGHTS




PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	370	ALD33-00-12260-001	GENERAL LIGHTING, (ADDED BY RAF 7211,019-225)							0150	1
R	1	361-33-40-72046-001	. CONNECTORS INSTL, I.R. LIGHTS (VS2500).							0150	1
R	2	361-33-40-72046-101	. . BRACKET, (VS2500)							0150	RF
R	3	361-33-40-72046-103	. . DECAL, (VS2500)							0150	RF
R	4	361-33-40-72046-105	. . DECAL, (VS2500)							0150	RF
R	5	MS3450L28-9S	. . CONNECTOR							0150	1
R	6	MS3450L28-9SW	. . CONNECTOR							0150	1
			ATTACHING PARTS								
R		MS35206-228	. . SCREW							0150	8
R		AN960-6	. . WASHER.							0150	8
R		MS21042-03	. . NUT							0150	8
			-----*								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

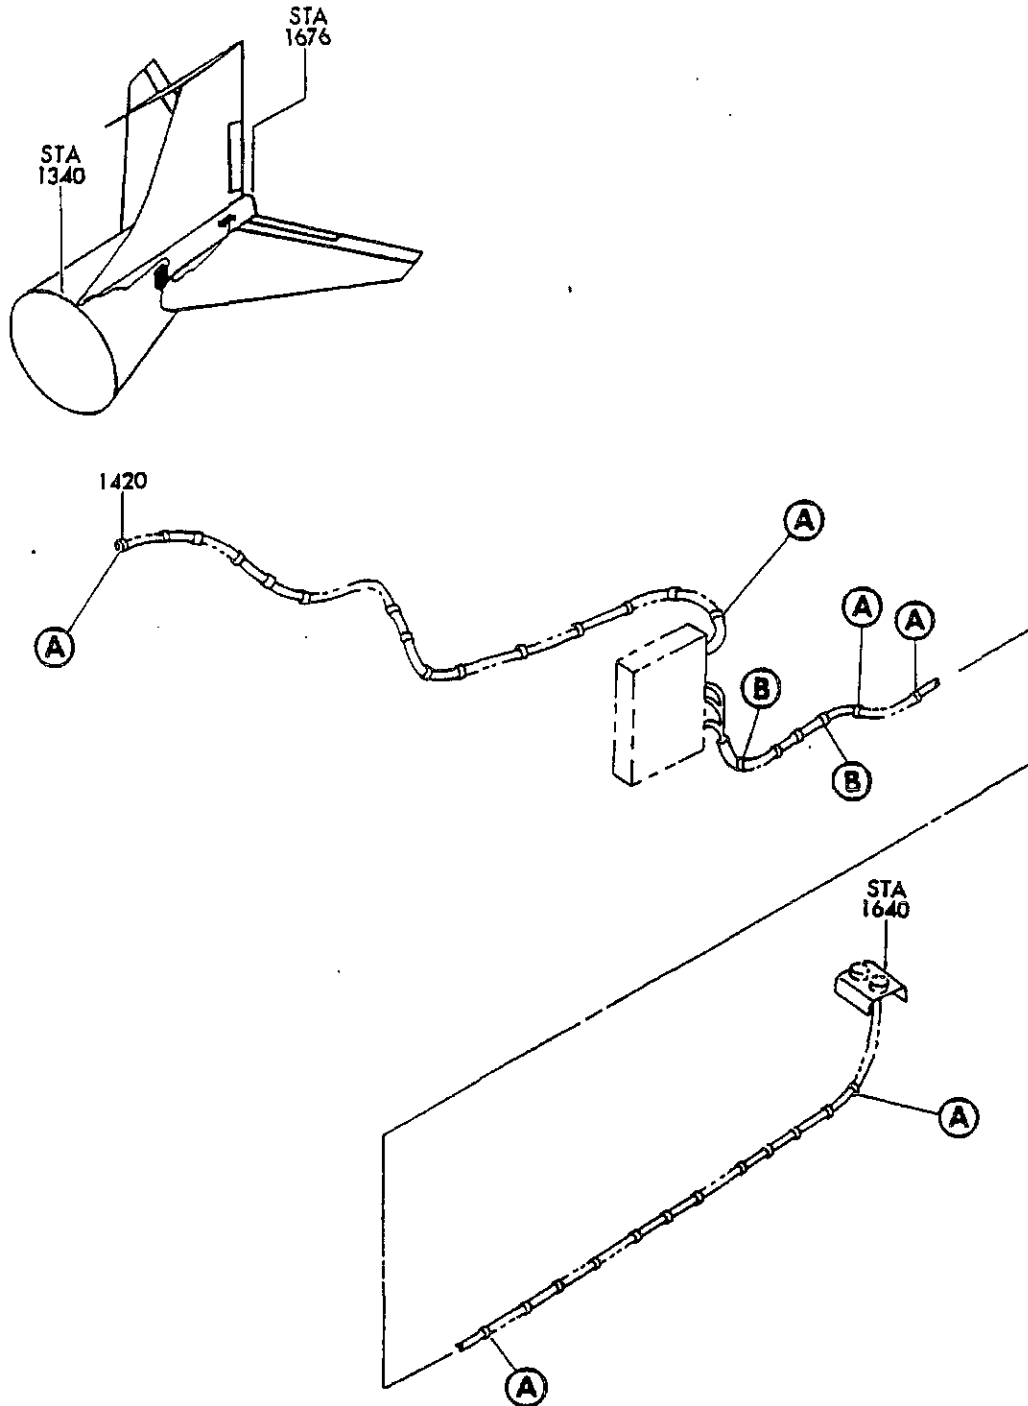

A 2413371 SHT 1 REV 265

FIGURE 371. ELECTRICAL WIRE INSTL, INFRA-RED LIGHTS JUNCTION BOX (A/R ONLY) (SHEET 1)

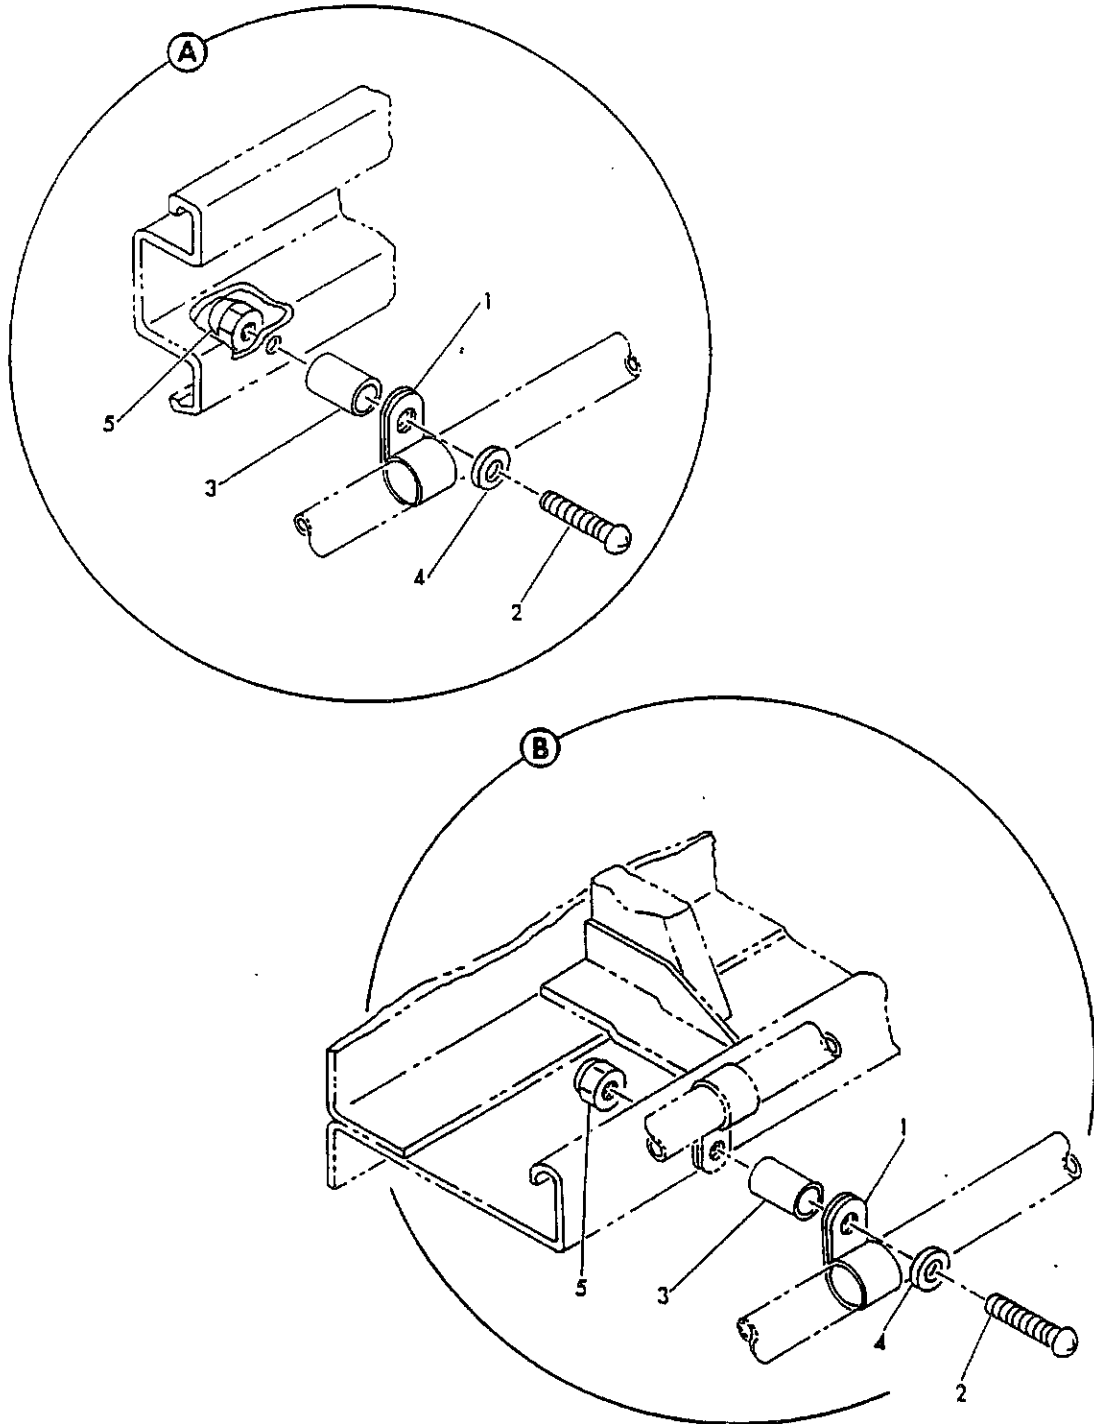

A 2413371 SHIT 2 REV 265

FIGURE 371. ELECTRICAL WIRE INSTL. INFRA-RED LIGHTS JUNCTION BOX (A/R ONLY) (SHEET 2)

NOV 21/94

24-13-371

DETAILED PARTS LIST
24-13-371
PAGE 1



PARTS CATALOG

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	371	361-33-40-72683-001		ELECTRICAL WIRE INSTL, INFRA-RED LIGHTS JUNCTION BOX. .	0150	RF
R				(A/R ONLY) (VS2500) (ADDED BY RAF 7211.019-225)		
R				(SEE 24-03, FIG. 4, ITEM 63)		
R	1	MS25281-R9		. CLAMP	0150	33
R	2	MS35207-265		ATTACHING PARTS		
R	3	NAS43003-16		. SCREW	0150	33
R	4	AN960-10L		. SPACER.	0150	AR
R	5	NAS679A3W		. WASHER.	0150	33
				. NUT	0150	33
				-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE						



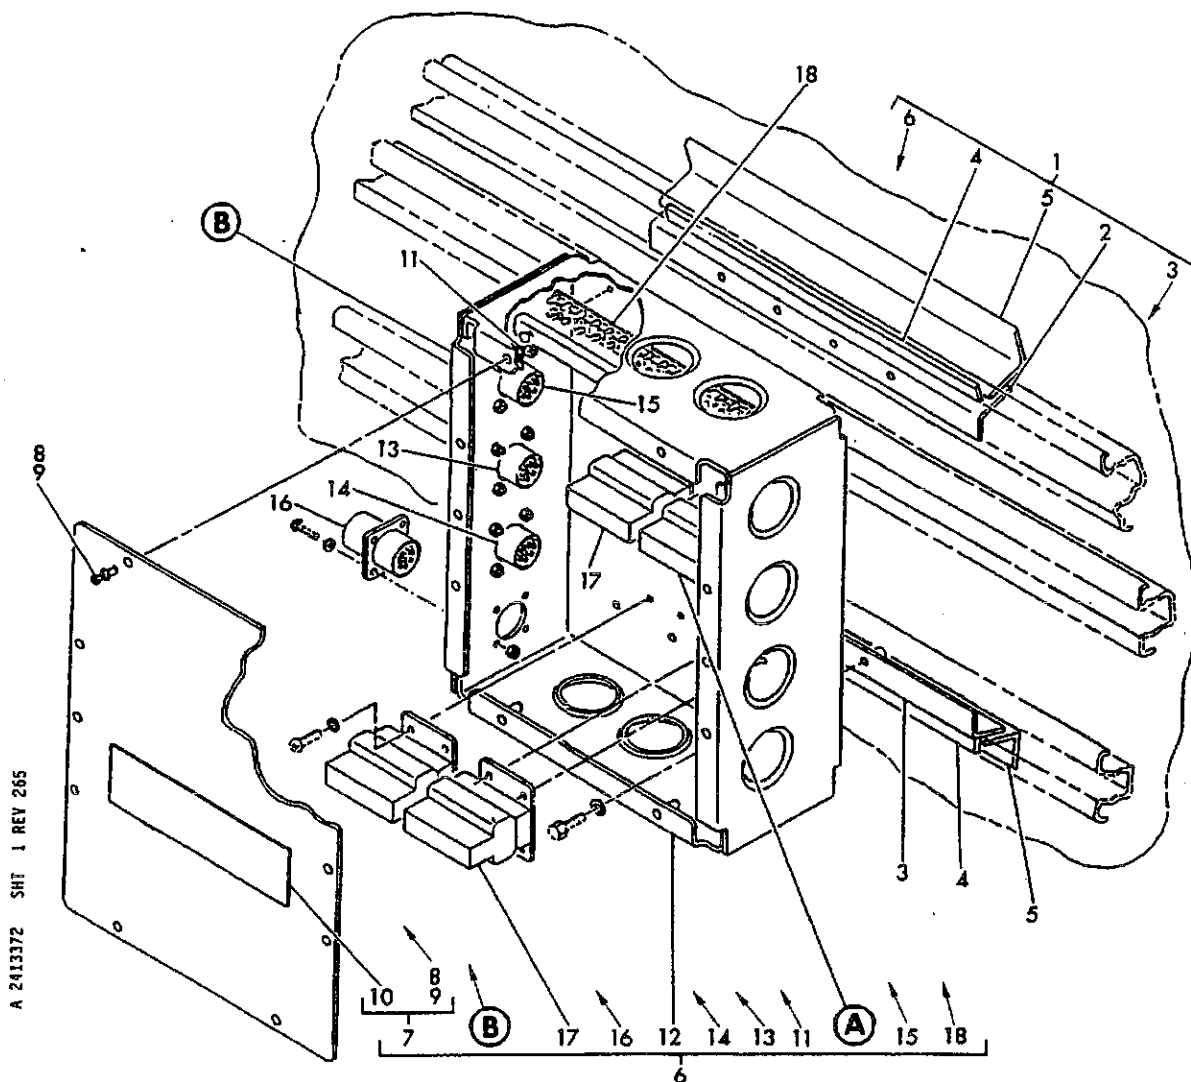


FIGURE 372. INFRA-RED JUNCTION BOX INSTL (SHEET 1)

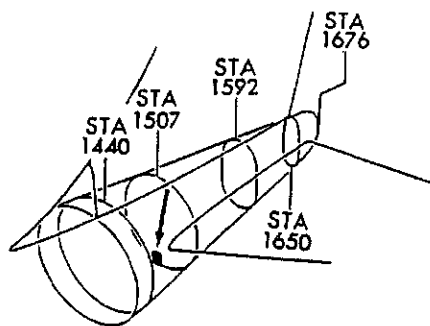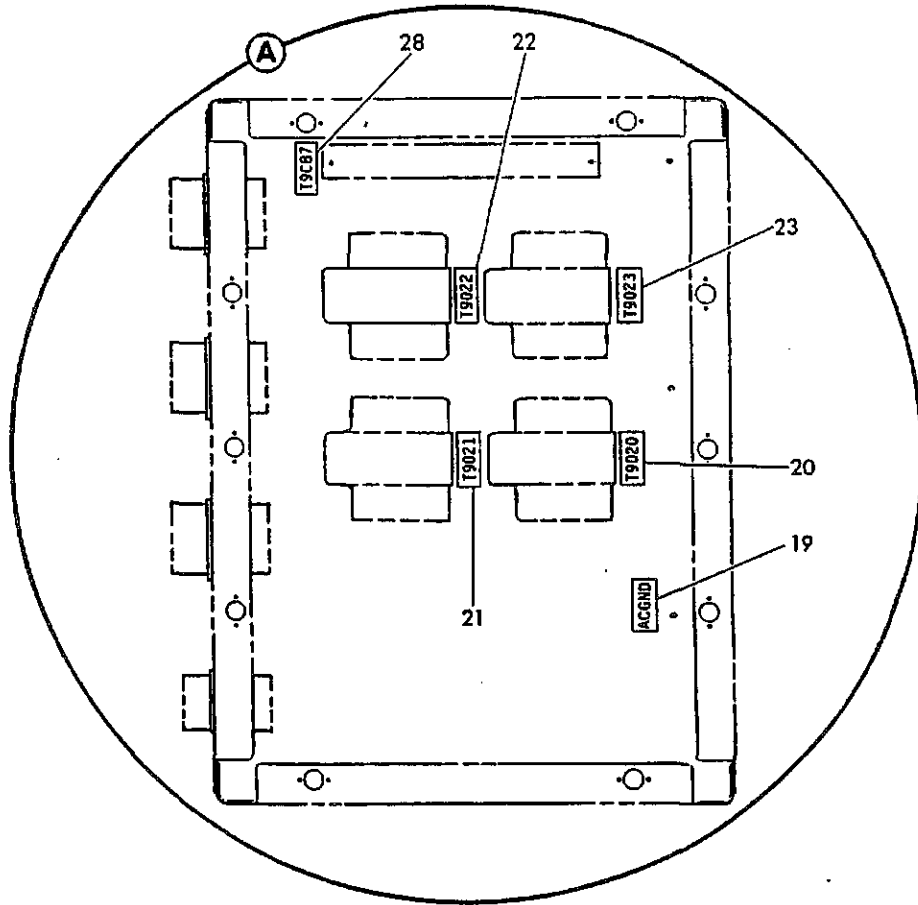


A 2413372 SHT 2 REV 265

FIGURE 372. INFRA-RED JUNCTION BOX INSTL (SHEET 2)

NOV 21/94

24-13-372

DETAILED PARTS LIST
24-13-372
PAGE 1

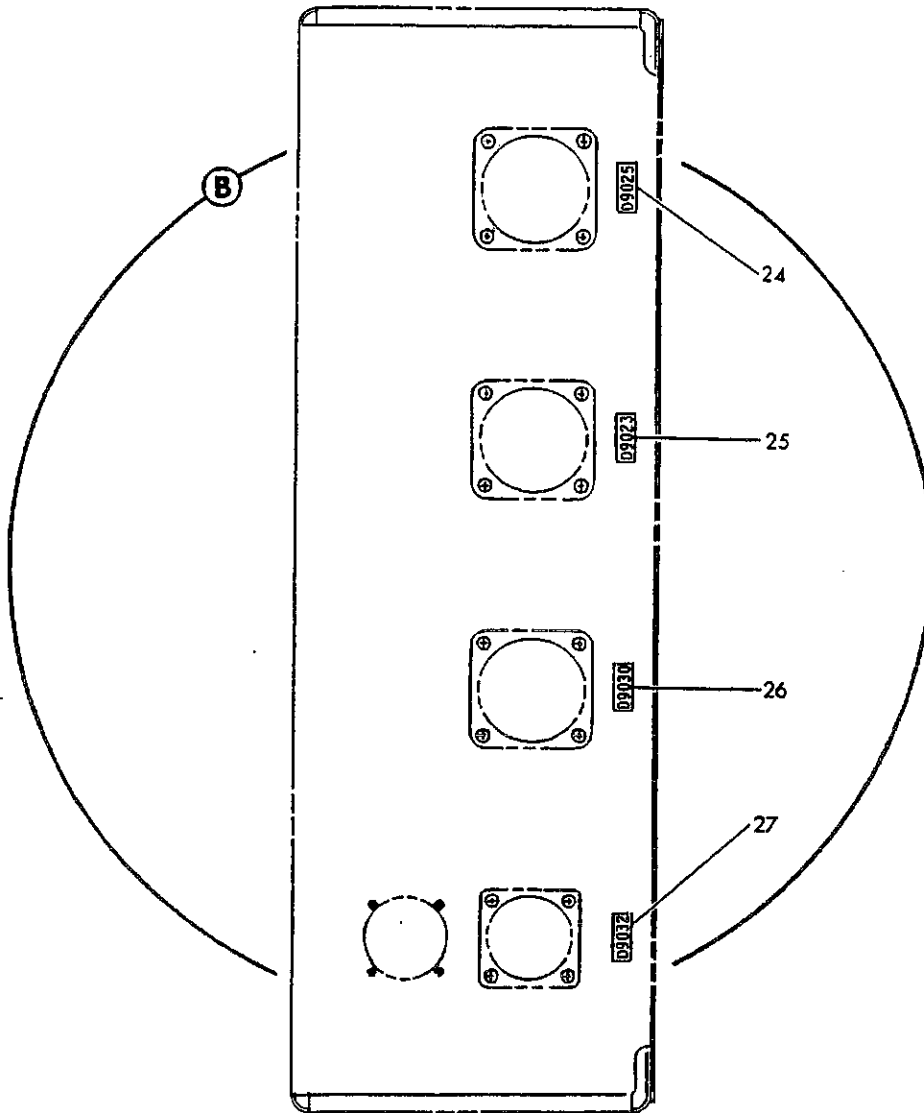

A 2413372 SHT 3 REV 265

FIGURE 372. INFRA-RED JUNCTION BOX INSTL (SHEET 3)

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	372	ALD33-00-12260-001	GENERAL LIGHTING, (ADDED BY RAF 7211.019-225)							0150	1
R	1	361-33-40-72117-003	. INFRA-RED JUNCTION BOX INSTL, (VS2500).							0150	RF
R			(SEE 24-03, FIG. 4, ITEM 69)								
R	2	361-33-40-72117-209	. . . SUPPORT, (VS2500)							0150	1
R	3	361-33-40-72117-210	. . . SUPPORT, (VS2500)							0150	1
R	4	361-33-40-72117-207	. . . STRAP, (VS2500)							0150	2
R	5	ADR39-10-11728-203	. . . SUPPORT, (VS2500)							0150	2
R	6	361-33-40-72114-199	. . . INFRA-RED BOX ASSY, (VS2500).							0150	1
			ATTACHING PARTS								
R		AN4-3	. . . BOLT.							0150	8
R		AN960-416	. . . WASHER.							0150	8
R		MS21059L4	. . . NUT PLATE							0150	8
			-----*								
R	7	361-33-40-72114-103	. . . COVER, (VS2500)							0150	1
R	8	2600-4	. . . STUD ASSY							0150	10
R	9	2600-LW	. . . RETAINING RING.							0150	10
R	10	361-33-40-72114-131	. . . DECAL, (VS2500)							0150	1
R	11	212-12A	. . . RECEPTACLE.							0150	10
R	12	361-33-40-72114-105	. . . BOX, (VS2500)							0150	1
R	13	MS3450L28-9S	. . . RECEPTACLE.							0150	1
			ATTACHING PARTS								
R		MS35206-228	. . . SCREW							0150	4
R		AN960-6	. . . WASHER.							0150	4
R		MS21042-06	. . . NUT							0150	4
			-----*								
R	14	MS3450L28-9SW	. . . RECEPTACLE.							0150	1
			ATTACHING PARTS								
R		MS35206-228	. . . SCREW							0150	4
R		AN960-6	. . . WASHER.							0150	4
R		MS21042-06	. . . NUT							0150	4
			-----*								
R	15	MS3450L28-9P	. . . RECEPTACLE.							0150	1
			ATTACHING PARTS								
R		MS35206-228	. . . SCREW							0150	4
R		AN960-6	. . . WASHER.							0150	4
R		MS21042-06	. . . NUT							0150	4
			-----*								
R	16	MS3450L22-22S	. . . RECEPTACLE.							0150	1
			ATTACHING PARTS								
R		MS35206-214	. . . SCREW							0150	4
R		AN960-4	. . . WASHER.							0150	8
R		MS21042-04	. . . NUT							0150	4
			-----*								
R	17	6332	. . . TRANSFORMER							0150	4
			ATTACHING PARTS								
R		MS35207-260	. . . SCREW							0150	16
R		AN960-10L	. . . WASHER.							0150	16
R		MS21059-3	. . . NUT PLATE							0150	RF
			-----*								
R	18	MS27212-2-9	. . . TERMINAL BOARD.							0150	1
			ATTACHING PARTS								
R		NA600-3	. . . SCREW, (VS2500)							0150	2
R		AN960-4	. . . WASHER.							0150	4
R		NA679-A04	. . . NUT, (VS2500)							0150	2
			-----*								
R	19	361-33-40-72114-107	. . . DECAL, (VS2500)							0150	1
R	20	361-33-40-72114-111	. . . DECAL, (VS2500)							0150	1
R	21	361-33-40-72114-113	. . . DECAL, (VS2500)							0150	1
R	22	361-33-40-72114-115	. . . DECAL, (VS2500)							0150	1
R	23	361-33-40-72114-121	. . . DECAL, (VS2500)							0150	1
R	24	361-33-40-72114-123	. . . DECAL, (VS2500)							0150	1
R	25	361-33-40-72114-125	. . . DECAL, (VS2500)							0150	1
R	26	361-33-40-72114-127	. . . DECAL, (VS2500)							0150	1
R	27	361-33-40-72114-129	. . . DECAL, (VS2500)							0150	1
R	28	361-33-40-72114-141	. . . DECAL, (VS2500)							0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

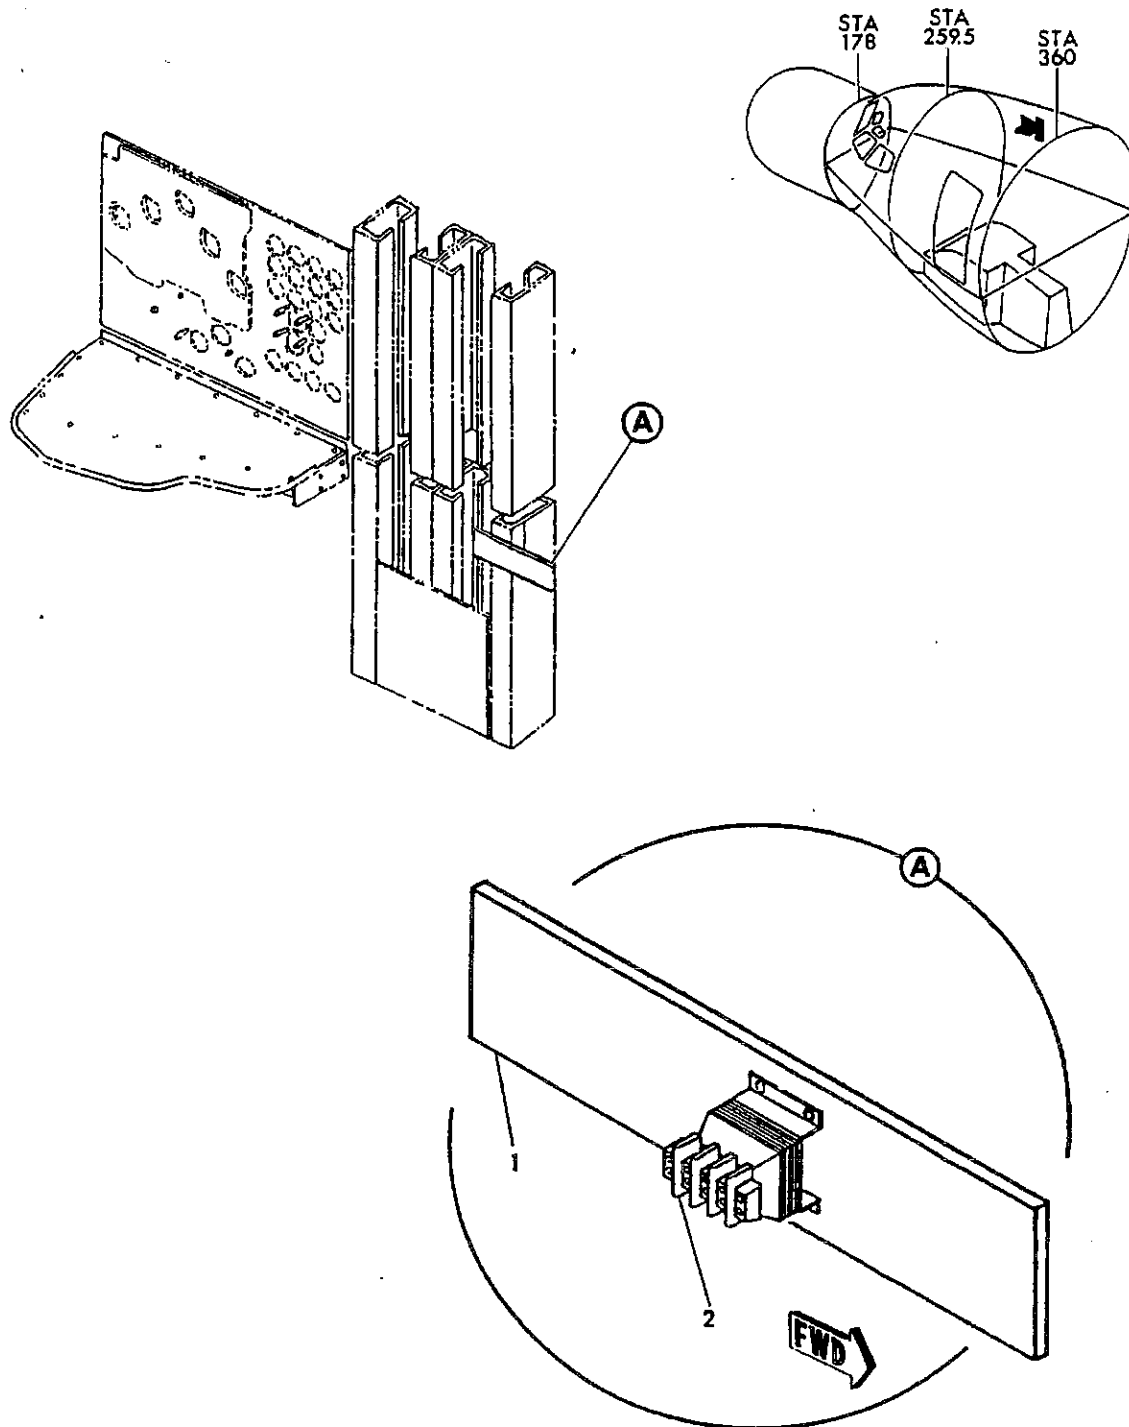


FIGURE 373. AUTOTRANSFORMER INSTL. (A/R PANEL LIGHTS)

A 2413373 REV 265



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	373	361-39-10-74349-005	AUTOTRANSFORMER INSTL, (A/R PANEL LIGHTS) ECP 045 . . .							0150	RF
R			(VS2500) (ADDED BY RAF 7211.019-225) (SEE 24-03,								
R			FIG. 1B, ITEM 130)								
R	1	361-39-10-74349-205	.	BASE PLATE, (VS2500).						0150	1
R	2	6623B	.	AUTOTRANSFORMER						0150	1
			.	ATTACHING PARTS							
R		MS24693-A23	.	SCREW						0150	4
R		AN960JD6	.	WASHER.						0150	4
R		NAS679A06W	.	NUT						0150	4
			-----*								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

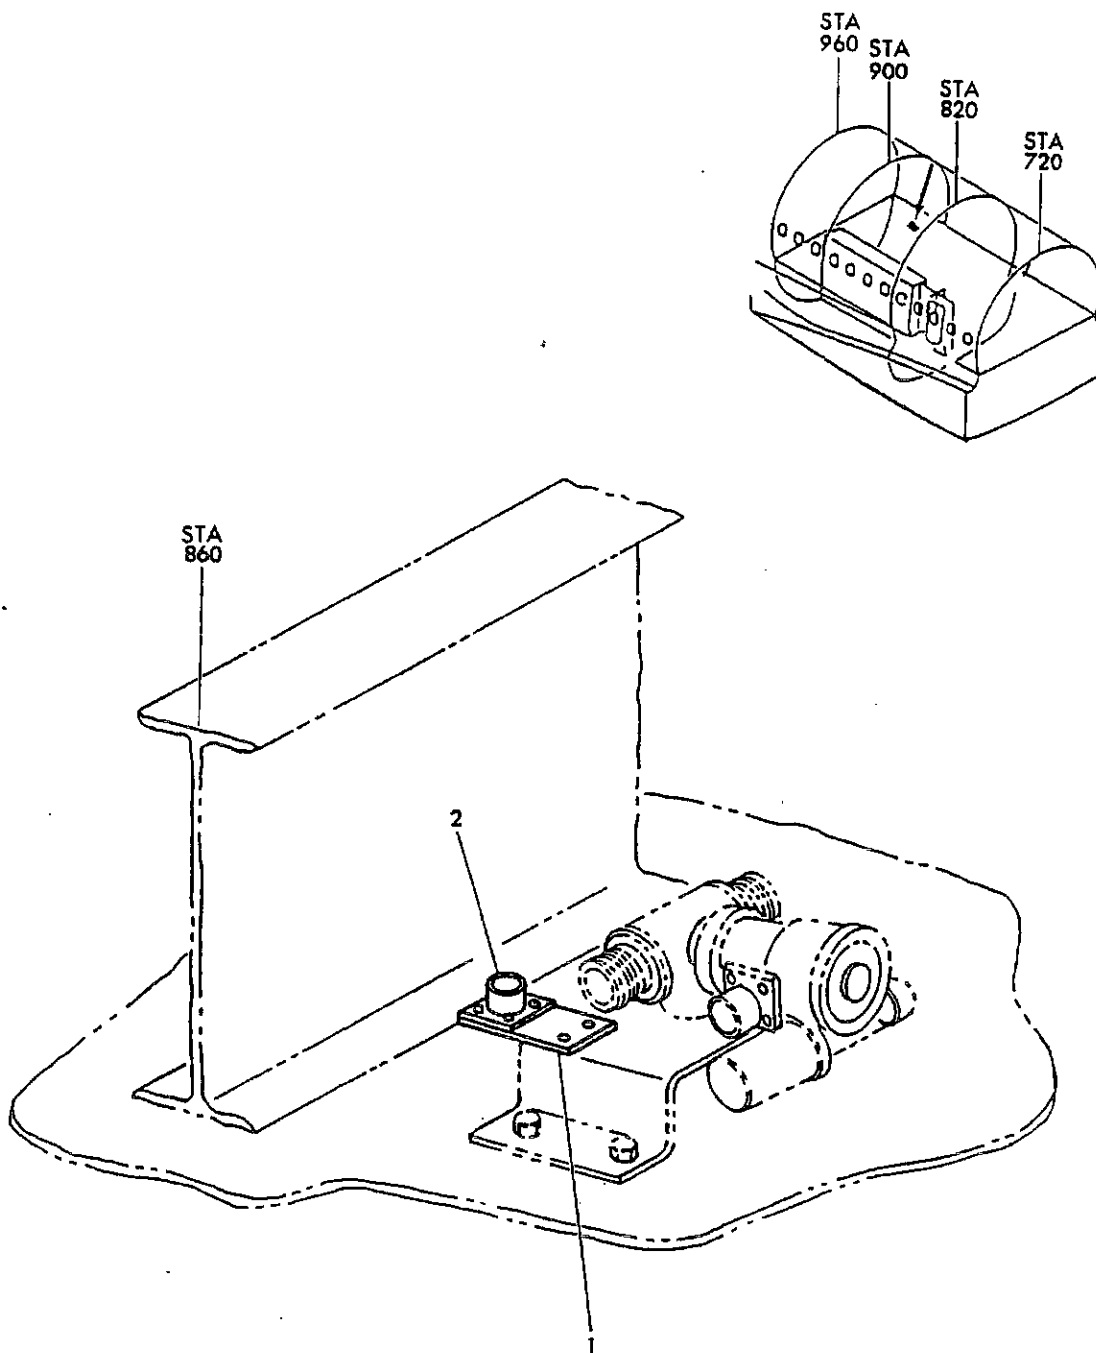


FIGURE 374. DUMMY RECEPTACLE INSTL, A/R PUMP S.O.V. AFT

A 2413374 REV 265



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
			1	2	3	4	5	6	7			
R R R R R R R R R R	374	391-89-70-73169-007	DUMMY RECEPTACLE INSTL, L.H. A/R PUMP S.O.V. AFT. . . .							0150	RF	
			(VS2500) (ADDED BY RAF 7211.019-225) (SEE 24-03, FIG. 2, ITEM 177)									
		391-89-70-73169-008	DUMMY RECEPTACLE INSTL, R.H. A/R PUMP S.O.V. AFT. . . .							0150	RF	
			(VS2500) (ADDED BY RAF 7211.019-225) (SEE 24-03, FIG. 2, ITEM 177)									
		1	391-89-70-72525-203	. PLATE, (VS2500)							0150	1
		2	MS3105-14S	. DUMMY RECEPTACLE.							0150	1
				ATTACHING PARTS								
			NAS600-8P	. SCREW							0150	4
			AN960JD4L	. WASHER.							0150	8
			NAS679A04W	. NUT							0150	4
-----*												
MISSING ITEM NUMBERS ARE NOT APPLICABLE												

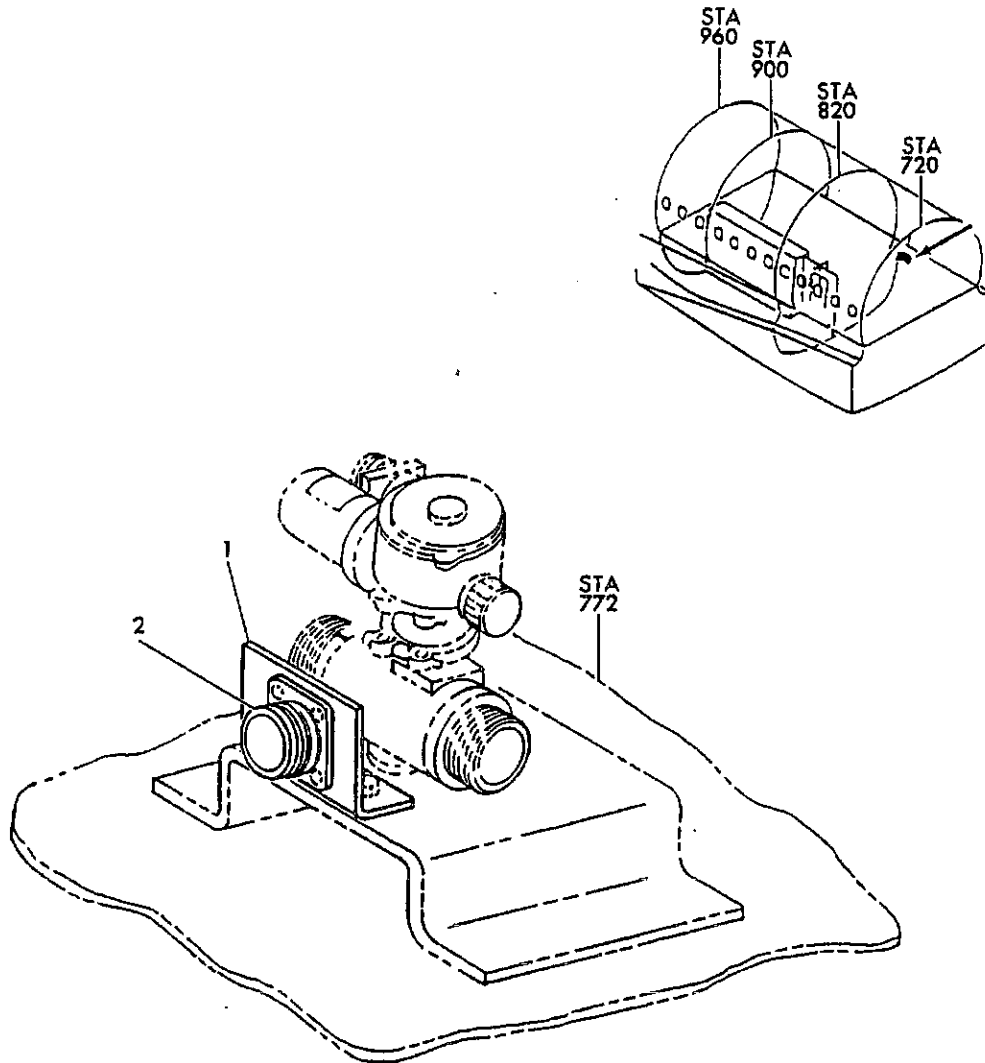


FIGURE 375. DUMMY RECEPTACLE INSTL, A/R PUMP S.O.V. FWD

A 2413375 REV 265



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 375	391-89-70-73167-007	DUMMY RECEPTACLE INSTL, L.H. A/R PUMP S.O.V. FWD. (VS2500) (ADDED BY RAF 7211.019-225) (SEE 24-03, FIG. 2, ITEM 176)	0150	RF
R 1	391-89-70-72525-201	. ANGLE, (VS2500)	0150	1
R	NAS1801-3-10	. ATTACHING PARTS	0150	2
R	AN960JD10	. SCREW	0150	2
R		. WASHER.		
R 2	MS3105-14S	. DUMMY RECEPTACLE.	0150	1
R	NAS600-8P	. ATTACHING PARTS		
R	AN960JDAL	. SCREW	0150	4
R	NAS679A04W	. WASHER.	0150	8
		. NUT	0150	4
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

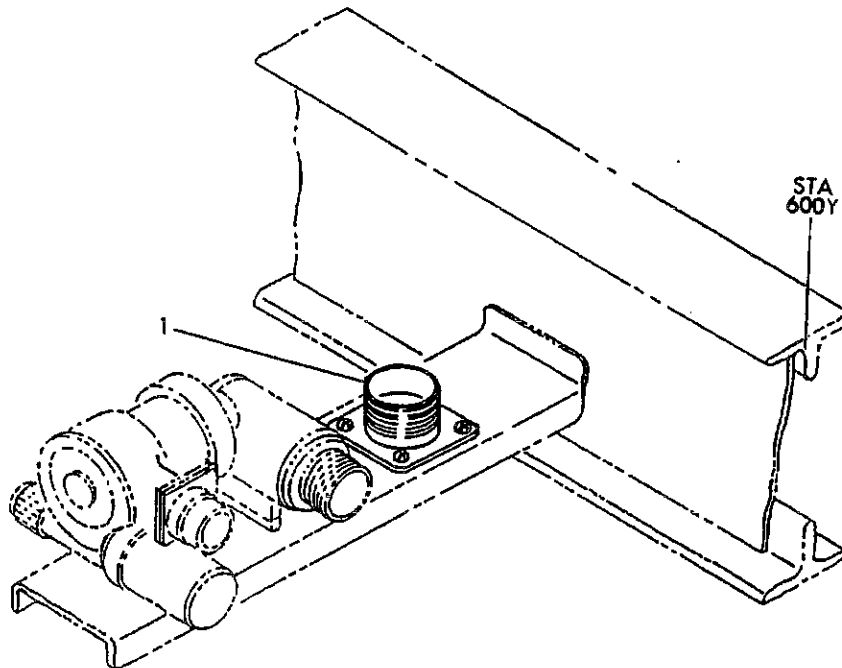
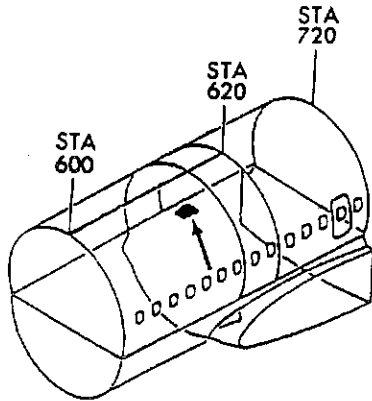


FIGURE 376. DUMMY RECEPTACLE INSTL, R.H. A/R PUMP S.D.V. FWD

A 2413376 REV 265

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R R R R R R	376	391-89-70-73168-011	DUMMY RECEPTACLE INSTL, R.H. A/R PUMP S.O.V. FWD. . . .							0150	RF
			(VS2500) (ADDED BY RAF 7211.019-225) (SEE 24-03, FIG. 2, ITEM 178)								
	1	MS3105-14S	. DUMMY RECEPTACLE.							0150	1
		NAS600-8P	. ATTACHING PARTS							0150	4
		AN960JD4L	. SCREW							0150	8
	NAS679A04W	. WASHER.							0150	4	
			. NUT							0150	4
			-----*								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											