CHAPTER 27

FLIGHT CONTROL

TABLE OF CONTENTS

SECTION		FIGURE
27-01	CONTROL COLUMN AND CONTROL STAND	
	COLUMN ASSY, AILERON AND ELEVATOR CONTROL	4
	COLUMN INSTL, AILERON AND ELEVATOR CONTROL	2
	MECHANISM ASSY, CONTROL STAND UPPER	8
	QUADRANT ASSY, ELEVATOR CONTROL	6
	STAND ASSY, PILOT AND COPILOT CONTROL	11
	STAND ASSY, PILOT AND COPILOT CONTROL	13
	WHEEL ASSY, CONTROL COLUMN	5
27-02	AILERONS	
	AILERON ASSY, INBOARD	10
	AILERON ASSY, OUTBOARD WING	3
	AILERON ASSY, OUTBOARD WING	3A
	AILERON INSTL, INBOARD WING	8
	AILERON INSTL, OUTBOARD WING	1
	DOOR INSTL, AILERON SNUBBER ACCESS	17
	END INSTL, INBOARD AILERON	11
	PANEL ASSY, INBOARD AILERON BALANCE	13
	PANEL ASSY, WING STATION 752.90 TO 779.96 OUTBOARD AILERON BALANCE	7
	PANEL ASSY, WING STATION 779.96 TO 835.10 OUTBOARD AILERON BALANCE	6
	PANEL ASSY, WING STATION 835.10 TO 890.21 OUTBOARD AILERON BALANCE	5
	PANEL ASSY, WING STATION 890.21 TO 948.77 OUTBOARD AILERON BALANCE	4
	PANEL INSTL, INBOARD AILERON AND BALANCE	9
	PANEL INSTL, OUTBOARD AILERON AND BALANCE	2
	RIB INSTL, AILERON HINGE	16
	RIB INSTL, OUTBOARD WING TRAILING EDGE	15
	SNUBBER ASSY, AILERON CONTROL SURFACE	18
	STRUCTURE INSTL, INBOARD AILERON NOSE	12
	TAB ASSY, HONEYCOMB OUTBOARD AILERON	20
	TAB INSTL, INBOARD AILERON	14
27-03	AILERON CONTROL	
	BRACKET INSTL, STATION 820 LH SIDE AILERON BUS AND AILERON TRIM CONTROL	3
	BRACKET INSTL, STATION 820 RH SIDE AILERON BUS CONTROL	4
	BRACKET INSTL, STATION 820 TO 830 AILERON CONTROL	5
	BRACKET INSTL, WING STATION 140 AILERON AND SPEED BRAKE	8
	BRACKET INSTL, WING STATION 160 AILERON TRIM AND BUS	9
	BRACKET INSTL, WING STATION 248 AILERON AND SPEED BRAKE	10
	BRACKET INSTL, WING STATION 248 AILERON AND SPEED BRAKE	10A
	BRACKET INSTL, WING STATION 315 AILERON BUS AND CONTROL	11
	BRACKET INSTL, WING STATION 315 AILERON BUS AND CONTROL	11A
	BRACKET INSTL, WING STATION 387 AILERON AND AILERON BUS	12
	BRACKET INSTL, WING STATION 405, 420 AND 501 AILERON CONTROL AND BUS	13
	BRACKET INSTL, WING STATION 520 AND 620 AILERON BUS	14
	CARTRIDGE ASSY, INBOARD AILERON SPRING	29A
	CARTRIDGE INSTL, STATION 820 AILERON BUS SPRING	6
	CONTROL INSTL, AILERON AND SPOILER LH	26
	CONTROL INSTL, AILERON AND SPOILER RH	26
	CONTROL INSTL, AILERON AND SPOILER	1
	CONTROL INSTL, AILERON AND SPOILER	2
	CONTROL INSTL, AILERON AND SPOILER	7
	CONTROL INSTL, AILERON AND SPOILER	24
	CONTROL INSTL, AILERON	20
	CONTROL INSTL, AILERON	21
	CONTROL INSTL, SECTION 26 AILERON TRIM LH	29
	CONTROL INSTL, SECTION 26 AILERON TRIM RH	29
	CONTROL INSTL, SECTION 51 AILERON TRIM	27
	CONTROL INSTL, SECTION 53 AILERON TRIM	28
	DRAIN INSTL, INBOARD AILERON TRIM TAB MECHANISM	31
	FAIRLEAD INSTL, WING STATION 653.88 AILERON BUS CABLES	16
	FAIRLEAD INSTL, WING TRAILING EDGE STATION 554.12 AILERON BUS CABLES	15
	FAIRLEAD INSTL, WING TRAILING EDGE STATION 691.40 AILERON BUS CABLES	17
	GEAR BOX ASSY, OUTBOARD AILERON LOCKOUT MECHANISM	24A
	QUADRANT INSTL, INBOARD AILERON BUS AND CONTROL LH	18
	QUADRANT INSTL, INBOARD AILERON BUS AND CONTROL RH	18
	QUADRANT INSTL, OUTBOARD AILERON CONTROL	25

BOEING PROPRIETARY, CONFIDENTIAL, AND / OR TRADE SECRET COPYRIGHT © The Boeing Company Unpublished Work -All Rights Reserved

SECTION FIGURE

27-04 SPOILERS

SEAL INSTL, INBOARD SPOILER LEADING EDGE 9
SEAL INSTL, OUTBOARD SPOILER. 4
SPOILER ASSY, INBOARD 7
SPOILER ASSY, OUTBOARD. 3
SPOILER INSTL 1

27-05 SPOILER CONTROL

ACTUATOR AND SWIVEL JOINT INSTL, SPOILER. 25
ACTUATOR ASSY, SPOILER. 29
BRACKET INSTL, KEEL BEAM WHEEL WELL CONTROL 8
BRACKET INSTL, OUTBOARD SPOILER FOLLOW-UP DIFFERENTIAL CRANK. 20
BRACKET INSTL, SPEED BRAKE BUS 10
BRACKET INSTL, STATION 820 LH SIDE SPEED BRAKE CONTROL. 4
BRACKET INSTL, STATION 820 RH SIDE SPEED BRAKE. 5
BRACKET INSTL, STATION 820 TO 830 AND BODY BUTTOCK LINE 78.1 SPEED BRAKE CONTROL . . 6
BRACKET INSTL, WING STATION 602.72 FOLLOW-UP CRANK. 19
CONTROL INSTL, SECTION 26 SPEED BRAKE LH. 9
CONTROL INSTL, SECTION 26 SPEED BRAKE RH. 9
CONTROL INSTL, SECTION 51 SPEED BRAKE 1
CONTROL INSTL, SECTION 53 SPEED BRAKE 2
CRANK INSTL, INBOARD SPEED BRAKE FOLLOW-UP LINKAGE. 22
CRANK INSTL, WING STATION 449.56 INBOARD SPOILER IDLER. 23
DRUM INSTL, STATION 820 RH SIDE SPEED BRAKE 3
JOINT ASSY, HYDRAULIC SWIVEL 32
JOINT ASSY, SWIVEL 32
LINKAGE INSTL, INBOARD SPOILER DIFFERENTIAL 21
VALVE ASSY, FLAP CONTROL. 14A
VALVE INSTL, INBOARD SPOILER CONTROL. 13
VALVE INSTL, INBOARD SPOILER CONTROL. 14
VALVE INSTL, MOTOR OPERATED HYDRAULIC 18
VALVE INSTL, OUTBOARD SPOILER CONTROL LH. 11
VALVE INSTL, OUTBOARD SPOILER CONTROL RH. 12

27-06 FLAPS

BEAM INSTL, WING BUTTOCK LINE 1.90 WING TRAILING EDGE 72
CARRIAGE ASSY, INBOARD FLAP 18
CARRIAGE ASSY, INBOARD FLAP 21
CARRIAGE ASSY, OUTBOARD FLAP CENTER 10
CARRIAGE ASSY, OUTBOARD FLAP INBOARD END. 6
CARRIAGE ASSY, OUTBOARD FLAP OUTBOARD END 6
CRANK ASSY, FLAPERETTE ACTUATION. 25
CRANK ASSY, FLAPERETTE ACTUATION. 26
DOOR ASSY, FILLET FLAP COVE LIP 70
DOOR ASSY, INBOARD COVE LIP 47
DOOR ASSY, INBOARD COVE LIP 49
DOOR ASSY, INBOARD COVE LIP 51
DOOR ASSY, OUTBOARD COVE LIP. 38
DOOR ASSY, OUTBOARD COVE LIP. 40
DOOR ASSY, OUTBOARD COVE LIP. 42
DOOR INSTL, INBOARD COVE LIP. 45
DOOR INSTL, INBOARD WING FILLET FLAP COVE LIP 69
DOOR INSTL, OUTBOARD COVE LIP 36
FAIRING ASSY, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP. 86
FAIRING ASSY, FRONT SPAR STATION 222.59 TO 305.80 WING LEADING EDGE FLAP. 87
FAIRING ASSY, FRONT SPAR STATION 305.80 TO 373 WING LEADING EDGE FLAP 88
FENCE INSTL, FILLET FLAP. 32
FLAP ASSY, FILLET 24
FLAP ASSY, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE. 79
FLAP ASSY, FRONT SPAR STATION 222.59 TO 305.80 WING LEADING EDGE. 80
FLAP ASSY, FRONT SPAR STATION 305.80 TO 382.66 WING LEADING EDGE. 81
FLAP INSTL, FILLET. 23
FLAP INSTL, FRONT SPAR STATION 146.76 TO 382.66 WING LEADING EDGE 78
FLAP INSTL, INBOARD WING. 12
FLAP INSTL, OUTBOARD. 3
NOSE INSTL, OUTBOARD FILLET FLAP. 73
PANEL ASSY, STATION 930 TO 960M PLUS 10 WING TO BODY FAIRING FENCE RECESS 33
PANEL INSTL, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT. 83
RIB INSTL, FLAP STATION 123.558 INBOARD FLAP CENTER TRACK 14
RIB INSTL, FLAP STATION 128.218 INBOARD FLAP CENTER TRACK 14
RIB INSTL, FLAP STATION 190.337 INBOARD FLAP CENTER TRACK 15
RIB INSTL, FLAP STATION 194.997 INBOARD FLAP CENTER TRACK 15
RIB INSTL, INBOARD FLAP INBOARD ACTUATOR AND TRACK. 13
RIB INSTL, INBOARD FLAP OUTBOARD ACTUATOR 16

BOEING PROPRIETARY, CONFIDENTIAL, AND / OR TRADE SECRET COPYRIGHT © The Boeing Company Unpublished Work -All Rights Reserved

SECTION FIGURE

RIB INSTL, OUTBOARD FLAP INBOARD ACTUATOR AND TRACK 7
RIB INSTL, WING BUTTOCK LINE 1.0 FILLET FLAP. 71
SEAL INSTL, FILLET FLAP OUTBOARD END LH 29
SEAL INSTL, FILLET FLAP OUTBOARD END RH 29
STRUCTURE ASSY, FILLET FLAP 28
STRUCTURE INSTL, FLAP STATION 125.888 63
STRUCTURE INSTL, FLAP STATION 192.665 61
STRUCTURE INSTL, FLAP STATION 270.507 59
STRUCTURE INSTL, FLAP STATION 47.307. 65
STRUCTURE INSTL, WING STATION 546.30 FLAP TRACK SUPPORT 58
STRUCTURE INSTL, WING STATION 615 FLAP TRACK SUPPORT. 57
STRUCTURE INSTL, WING STATION 683.10 SIDE BRACE ATTACHMENT 56
STRUCTURE INSTL, WING STATION 700.50 FLAP TRACK SUPPORT 55
SUPPORT ASSY, WING STATION 444 INBOARD FLAP SCREW 56
SUPPORT INSTL, FILLET FLAP OUTBOARD HINGE 31
TRACK INSTL, FLAP 66

27-07 FLAP CONTROL AND DRIVE

ACTUATION INSTL, INBOARD COVE LIP DOOR. 53
ACTUATION INSTL, INBOARD COVE LIP DOOR. 54
ACTUATION INSTL, OUTBOARD COVE LIP DOOR 51
ACTUATION INSTL, OUTBOARD COVE LIP DOOR 52
ACTUATOR INSTL, FILLET FLAP 32
ACTUATOR INSTL, FILLET FLAP SEAL LH 46
ACTUATOR INSTL, FILLET FLAP SEAL RH 46
ACTUATOR INSTL, INBOARD LEADING EDGE FLAP 16
BRACKET INSTL, BODY STATION 830 FLAP DRIVE VALVE CONTROL. 8
BRACKET INSTL, STATION 820 WING FLAP CONTROL. 6
CONTROL INSTL, SECTION 51 WING FLAP 2
CONTROL INSTL, SECTION 53 WING FLAP 5
DRIVE INSTL, SECTION 26 FLAP LH 37
DRIVE INSTL, SECTION 26 FLAP RH 37
DRIVE INSTL, SECTION 53 FLAP. 29
GEAR BOX ASSY, FILLET FLAP DRIVE ANGLE. 31A
GEAR BOX ASSY, FILLET FLAP DRIVE TEE. 29A
GEAR BOX ASSY, INBOARD FLAP DRIVE ANGLE 39B
GEAR BOX ASSY, INBOARD FLAP DRIVE ELL 37E
GEAR BOX ASSY, INBOARD FLAP DRIVE TEE 37D
GEAR BOX ASSY, OUTBOARD FLAP DRIVE ANGLE. 37A
GEAR BOX ASSY, OUTBOARD FLAP DRIVE ANGLE. 39A
GEAR BOX INSTL, FILLET FLAP ANGLE 31
GEAR BOX INSTL, WING STATION 122 FLAP DRIVE ANGLE 39
GUARD INSTL, FLAP DRIVE TORQUE TUBE 40
HANDLE ASSY, CONTROL STAND FLAP CONTROL 1
LINK INSTL, FRONT SPAR STATION 170.00 INBOARD WING LEADING EDGE FLAP FAIRING MECHANISM 49
LINK INSTL, FRONT SPAR STATION 200.86 INBOARD WING LEADING EDGE FLAP FAIRING MECHANISM 49
LINK INSTL, FRONT SPAR STATION 234.46 INBOARD WING LEADING EDGE FLAP FAIRING MECHANISM 49
LINK INSTL, FRONT SPAR STATION 293.05 INBOARD WING LEADING EDGE FLAP FAIRING MECHANISM 49
LINK INSTL, FRONT SPAR STATION 367.61 AND 319.05 INBOARD WING LEADING EDGE FLAP FAIRING MECHANISM 49
POWER UNIT ASSY, INBOARD AND FILLET FLAP DRIVE. 35B
POWER UNIT ASSY, SECTION 53 FLAP DRIVE. 35A
POWER UNIT INSTL, INBOARD AND FILLET FLAP DRIVE 35
SHIELD ASSY, STATION 336 J4 RELAY 57
SPAR INSTL, OUTBOARD WING FRONT 20
SUPPORT ASSY, INBOARD WING ACTUATOR 18
SUPPORT INSTL, INBOARD WING ACTUATOR 18
SUPPORT INSTL, INBOARD WING ACTUATOR 21
SWITCH INSTL, ALTITUDE ALERTING FLAP POSITION 3A
SWITCH INSTL, INBOARD WING LEADING EDGE FLAP POSITION INDICATION. 26
SWITCH INSTL, LEADING EDGE WARNING SYSTEM 22A
TEE ASSY, INBOARD WING ATTACHMENT 22
TRANSMISSION ASSY, FILLET FLAP DRIVE BALLSCREW. 33
TRANSMISSION ASSY, FLAP DRIVE BALL SCREW. 37B
TRANSMISSION ASSY, FLAP DRIVE BALL SCREW. 56
TRANSMITTER ASSY, FLAP POSITION 44
TRANSMITTER INSTL, OUTBOARD FLAP POSITION LH. 43
TRANSMITTER INSTL, OUTBOARD FLAP POSITION RH. 43
TRANSMITTER INSTL, TRAILING EDGE STATION 166.14 FLAP POSITION 41
VALVE ASSY, FLAP CONTROL. 8A
VALVE INSTL, BODY STATION 820 LEADING EDGE FLAP CONTROL 30
VALVE INSTL, LEADING EDGE FLAP HYDRAULIC SYSTEM MANUAL SHUTOFF. 9D
VALVE INSTL, MOTOR OPERATED HYDRAULIC 10

BOEING PROPRIETARY, CONFIDENTIAL, AND / OR TRADE SECRET COPYRIGHT © The Boeing Company Unpublished Work -All Rights Reserved

SECTION FIGURE

27-08 RUDDER

INTERSPAR AND TRAILING EDGE ASSY, VERTICAL TAIL 11
PANEL ASSY, RUDDER BALANCE. 8
PANEL ASSY, RUDDER BALANCE. 9
PANEL ASSY, RUDDER BALANCE. 10
RIB INSTL, RUDDER NOSE 5
RUDDER AND BALANCE ASSY, VERTICAL TAIL. 1
RUDDER ASSY, VERTICAL TAIL. 3
SEAL INSTL, RUDDER BALANCE CAVITY 7
SPAR INSTL, RUDDER. 4
SPARES ASSY, VERTICAL TAIL RUDDER 3
SPARES ASSY, VERTICAL TAIL RUDDER AND BALANCE 2
TAB ASSY, RUDDER CONTROL. 6

27-09 RUDDER CONTROL

ACTUATOR ASSY, RUDDER TRIM CONTROL. 50
COMPENSATOR ASSY, RUDDER POWER CONTROL. 43A
COMPENSATOR INSTL, RUDDER POWER CONTROL SYSTEM. 43
CONTROL INSTL, RUDDER 14A
CONTROL INSTL, RUDDER 1
CONTROL INSTL, RUDDER 8
CONTROL INSTL, RUDDER 9
CONTROL INSTL, SECTION 51 RUDDER TRIM 26
CONTROL INSTL, SECTION 53 RUDDER TRIM 27
CONTROL INSTL, SECTION 58 RUDDER TRIM 28A
CONTROL INSTL, SECTIONS 86 AND 88 RUDDER TRIM 30A
CRANK INSTL, RUDDER PEDAL ADJUSTMENT. 4
DAMPER ASSY, RUDDER CONTROL TAB 52
DOOR INSTL, VERTICAL TAIL RUDDER CONTROLS 24
FEEL MECHANISM INSTL, RUDDER. 14B
GEAR BOX ASSY 51
GEAR BOX ASSY, RUDDER TRIM. 51
GEARBOX ASSY, RUDDER POWER TRIM 32B
GEARBOX INSTL, RUDDER CONTROL POWER TRIM. 32A
JACKSHAFT ASSY, RUDDER CONTROL. 3
JACKSHAFT INSTL, RUDDER CONTROL 2
LINK INSTL, STATION 102.18 FIN TRAILING EDGE RUDDER BALANCE 33
LINK INSTL, STATION 11.95 FIN TRAILING EDGE RUDDER BALANCE. 33
LINK INSTL, STATION 48.67 FIN TRAILING EDGE RUDDER BALANCE. 33
PEDAL ASSY, COPILOT RUDDER LH 6
PEDAL ASSY, COPILOT RUDDER RH 6
PEDAL ASSY, PILOT RUDDER LH 6
PEDAL ASSY, PILOT RUDDER RH 6
PEDAL INSTL, COPILOT RUDDER 5
PEDAL INSTL, PILOT RUDDER 5
PUMP INSTL, RUDDER POWER CONTROL SYSTEM 45
QUADRANT INSTL, RUDDER CONTROL. 22A
REST INSTL, COPILOTS RUDDER PEDAL HEEL. 7
REST INSTL, PILOTS RUDDER PEDAL HEEL. 7
SNUBBER INSTL, RUDDER STATION 7.15. 35
SPRING ASSY, DIRECTIONAL CONTROL Q. 18
SPRING INSTL, DIRECTIONAL CONTROL Q 16A
SUPPORT INSTL, RUDDER BOOST 19A
SWITCH INSTL, RUDDER HYDRAULIC PRESSURE 48
SWIVEL INSTL, RUDDER POWER CONTROL. 44
TRACK ASSY, STATION 102.18 FIN TRAILING EDGE RUDDER BALANCE LINK. 34
TRACK ASSY, STATION 11.95 FIN TRAILING EDGE RUDDER BALANCE LINK 34
TRACK ASSY, STATION 48.67 FIN TRAILING EDGE RUDDER BALANCE LINK 34
TRANSMITTER INSTL, RUDDER POSITION. 49
TRANSMITTER INSTL, RUDDER POWER CONTROL PRESSURE. 40
TUBE INSTL, VERTICAL TAIL Q CAN 18D
VALVE INSTL, MOTOR OPERATED HYDRAULIC 47
VALVE INSTL, RUDDER SHUTOFF MANUALLY OPERATED 36

27-10 ELEVATORS

ELEVATOR ASSY, SECTION 84 . . . . . 4A
ELEVATOR INSTL, HORIZONTAL TAIL 1
PANEL ASSY, BAY NO. 0 LH SIDE ELEVATOR BALANCE. 3
PANEL ASSY, BAY NO. 0 RH SIDE ELEVATOR BALANCE. 3
PANEL ASSY, BAY NO. 1 LH SIDE ELEVATOR BALANCE. 3
PANEL ASSY, BAY NO. 1 RH SIDE ELEVATOR BALANCE. 3
PANEL ASSY, BAY NO. 2 LH SIDE ELEVATOR BALANCE. 3
PANEL ASSY, BAY NO. 2 RH SIDE ELEVATOR BALANCE. 3
PANEL ASSY, BAY NO. 3 LH SIDE ELEVATOR BALANCE. 3

BOEING PROPRIETARY, CONFIDENTIAL, AND / OR TRADE SECRET COPYRIGHT © The Boeing Company Unpublished Work -All Rights Reserved

SECTION FIGURE

PANEL ASSY, BAY NO. 3 RH SIDE ELEVATOR BALANCE. 3
PANEL ASSY, BAY NO. 4 LH SIDE ELEVATOR BALANCE. 3
PANEL ASSY, BAY NO. 4 RH SIDE ELEVATOR BALANCE. 3
PANEL ASSY, BAY NO. 5 LH SIDE ELEVATOR BALANCE. 3
PANEL ASSY, BAY NO. 5 RH SIDE ELEVATOR BALANCE. 3
RIB INSTL, ELEVATOR NOSE 5
RIB INSTL, STABILIZER TRAILING EDGE 8
SEAL INSTL, BAY NO. 0 ELEVATOR BALANCE CAVITY 2
SEAL INSTL, ELEVATOR BALANCE CAVITY BAY NO. 1 2
SEAL INSTL, ELEVATOR BALANCE CAVITY BAY NO. 2 2
SEAL INSTL, ELEVATOR BALANCE CAVITY BAY NO. 3 2
SEAL INSTL, ELEVATOR BALANCE CAVITY BAY NO. 4 2
SEAL INSTL, ELEVATOR BALANCE CAVITY BAY NO. 5 2
SPAR INSTL, ELEVATOR FRONT. 6
SPAR INSTL, ELEVATOR TRAILING EDGE. 7
TAB INSTL, ELEVATOR CONTROL 9
TAB INSTL, STABILIZER ACTUATED ELEVATOR 10

27-11 ELEVATOR CONTROL

BELLCRANK INSTL, ELEVATOR ANTI-BALANCE TAB. 26
BRACKET INSTL, BODY STATION 1462 FLIGHT CONTROLS. 8
BRACKET INSTL, STATION 1519 ELEVATOR CONTROL PULLEY 9
CONTROL INSTL, SECTION 51 ELEVATOR. 1
CONTROL INSTL, SECTION 53 ELEVATOR. 2
CONTROL INSTL, SECTION 56 ELEVATOR. 5
CONTROL INSTL, SECTION 58 ELEVATOR. 6
CONTROL INSTL, SECTION 82 ELEVATOR LH 14
CONTROL INSTL, SECTION 82 ELEVATOR RH 14
CONTROL INSTL, SECTION 84 ELEVATOR LH 17
CONTROL INSTL, SECTION 84 ELEVATOR RH 17
CRANK ASSY, ELEVATOR CONTROL CENTERING SPRING 12
CRANK INSTL, STABILIZER ELEVATOR CONTROL LH 15
CRANK INSTL, STABILIZER ELEVATOR CONTROL RH 16
IDLER INSTL, STATION 480 CONTROL CABLES LH. 3
IDLER INSTL, STATION 480 CONTROL CABLES RH. 3
MECHANISM INSTL, ELEVATOR ACTUATOR ANTI-BALANCE TAB 25
MECHANISM INSTL, ELEVATOR STATION 0 TO 10.26 BALANCE PANEL SUPPORT. 19
MECHANISM INSTL, ELEVATOR STATION 115.18 BALANCE PANEL SUPPORT. 22
MECHANISM INSTL, ELEVATOR STATION 159.98 BALANCE PANEL SUPPORT. 23
MECHANISM INSTL, ELEVATOR STATION 204.78 BALANCE PANEL SUPPORT. 24
MECHANISM INSTL, ELEVATOR STATION 25.58 BALANCE PANEL SUPPORT 20
MECHANISM INSTL, ELEVATOR STATION 70.38 BALANCE PANEL SUPPORT 21
QUADRANT ASSY, ELEVATOR CONTROL 11
QUADRANT INSTL, ELEVATOR CONTROL. 10
SEAL INSTL, STATION 1440 CONTROL CABLE. 7
SNUBBER INSTL, ELEVATOR 18
SUPPORT INSTL, ELEVATOR ANTI-BALANCE TAB. 28
TRANSMITTER INSTL, ELEVATOR POSITION. 30

27-12 HORIZONTAL STABILIZER TRIM

ACTUATOR ASSY, ROTARY 12B
ACTUATOR ASSY, STABILIZER TRIM. 13A
ACTUATOR ASSY, STABILIZER TRIM. 13B
BRAKE INSTL, STABILIZER TRIM SYSTEM 5A
CONTROL INSTL, SECTION 51 STABILIZER TRIM 4
CONTROL INSTL, SECTION 53 STABILIZER TRIM 8
CONTROL INSTL, SECTION 58 STABILIZER TRIM 9
FITTING ASSY, HORIZONTAL STABILIZER ACTUATOR. 12A
FITTING ASSY, STABILIZER JACKING SCREW. 12
FOLLOW-UP INSTL, MACH BALANCE COMPENSATOR 11
JACK ASSY, CONTROL STAND STABILIZER TRIM. 3
MECHANISM ASSY, SECTION 51 STABILIZER TRIM FORWARD. 6
MECHANISM INSTL, SECTION 51 STABILIZER TRIM 5A
MECHANISM INSTL, SECTION 51 STABILIZER TRIM 5
SHIELD INSTL, J-18 STABILIZER TRIM CONTROL. 7
SHROUD INSTL, STABILIZER TRIM 10
SPARES ASSY, CONTROL STAND STABILIZER TRIM WHEEL HANDLE 2
SWITCH INSTL, STABILIZER TRIM ACTUATOR LIMIT. 17
WHEEL ASSY, CONTROL COLUMN. 15
WHEEL ASSY, CONTROL STAND STABILIZER TRIM 1
WHEEL ASSY, CONTROL STAND STABILIZER TRIM 2

27-13 INSTRUMENT PANELS

MODULE INSTL, CAPTAINS AND FIRST OFFICERS 31
MODULE INSTL, P13 PILOTS OVERHEAD 26H

BOEING PROPRIETARY, CONFIDENTIAL, AND / OR TRADE SECRET COPYRIGHT © The Boeing Company Unpublished Work -All Rights Reserved

SECTION FIGURE

MODULE INSTL, P13 PILOTS OVERHEAD 26J
PANEL INSTL, P9 ENGINE INSTRUMENT 13R

27-14 SLATS

CARRIAGE INSTL, WING LEADING EDGE SLAT 15A
CARRIAGE INSTL, WING LEADING EDGE SLAT SWITCH 15A
DOOR INSTL, LEADING EDGE SLAT HINGE 17
DUMMY SLAT INSTL. 4B
FAIRING INSTL, INBOARD WING LEADING EDGE SLAT 12
FAIRING INSTL, INBOARD WING LEADING EDGE SLAT 13
FAIRING INSTL, INBOARD WING LEADING EDGE SLAT 13A
FAIRING INSTL, INBOARD WING LEADING EDGE SLAT 14
FAIRING INSTL, INBOARD WING LEADING EDGE SLAT 14A
PANEL INSTL, INBOARD WING LEADING EDGE SLAT SEAL SUPPORT. 16
SLAT ASSY, FRONT SPAR STATION 619.76 TO NACELLE INBOARD WING LEADING EDGE 9
SLAT ASSY, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING 8
SLAT ASSY, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING 8A
SLAT ASSY, INBOARD NACELLE TO FRONT SPAR STATION 463.22 WING LEADING EDGE 11
SLAT ASSY, INBOARD WING LEADING EDGE CENTER 10
SLAT ASSY, SECTION 15 OUTBOARD WING LEADING EDGE. 3
SLAT ASSY, SECTION 15 OUTBOARD WING LEADING EDGE. 4
SLAT ASSY, SECTION 15 OUTBOARD WING LEADING EDGE. 4A
SLAT INSTL, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING. 6
SLAT INSTL, INBOARD WING LEADING EDGE 7
SLAT INSTL, SECTION 15 OUTBOARD WING LEADING EDGE 2

27-15 SLAT CONTROL

ACTUATOR INSTL, MID WING LEADING EDGE FLAP. 8
ACTUATOR INSTL, OUTBOARD LEADING EDGE FLAP. 7
LINK INSTL, INBOARD WING LEADING EDGE SLAT MECHANISM. 3
LINK INSTL, INBOARD WING LEADING EDGE SLAT MECHANISM. 3A
MANIFOLD INSTL, LEADING EDGE FLAP HYDRAULIC SYSTEM. 9
MANIFOLD INSTL, LEADING EDGE FLAP HYDRAULIC SYSTEM. 10
MECHANISM INSTL, OUTBOARD WING LEADING EDGE SLAT NOSE FAIRING 12
MECHANISM INSTL, OUTBOARD WING LEADING EDGE SLAT NOSE FAIRING 13
SWITCH INSTL, FRONT SPAR STATION 434 WING LEADING EDGE FLAPS POSITION 6
SWITCH INSTL, OUTBOARD WING LEADING EDGE SLATS POSITION 5

BOEING PROPRIETARY, CONFIDENTIAL, AND / OR TRADE SECRET COPYRIGHT © The Boeing Company Unpublished Work -All Rights Reserved

BOEING Intercontinental 707

PARTS CATALOG

SECTION 01

CONTROL COLUMN AND CONTROL STAND

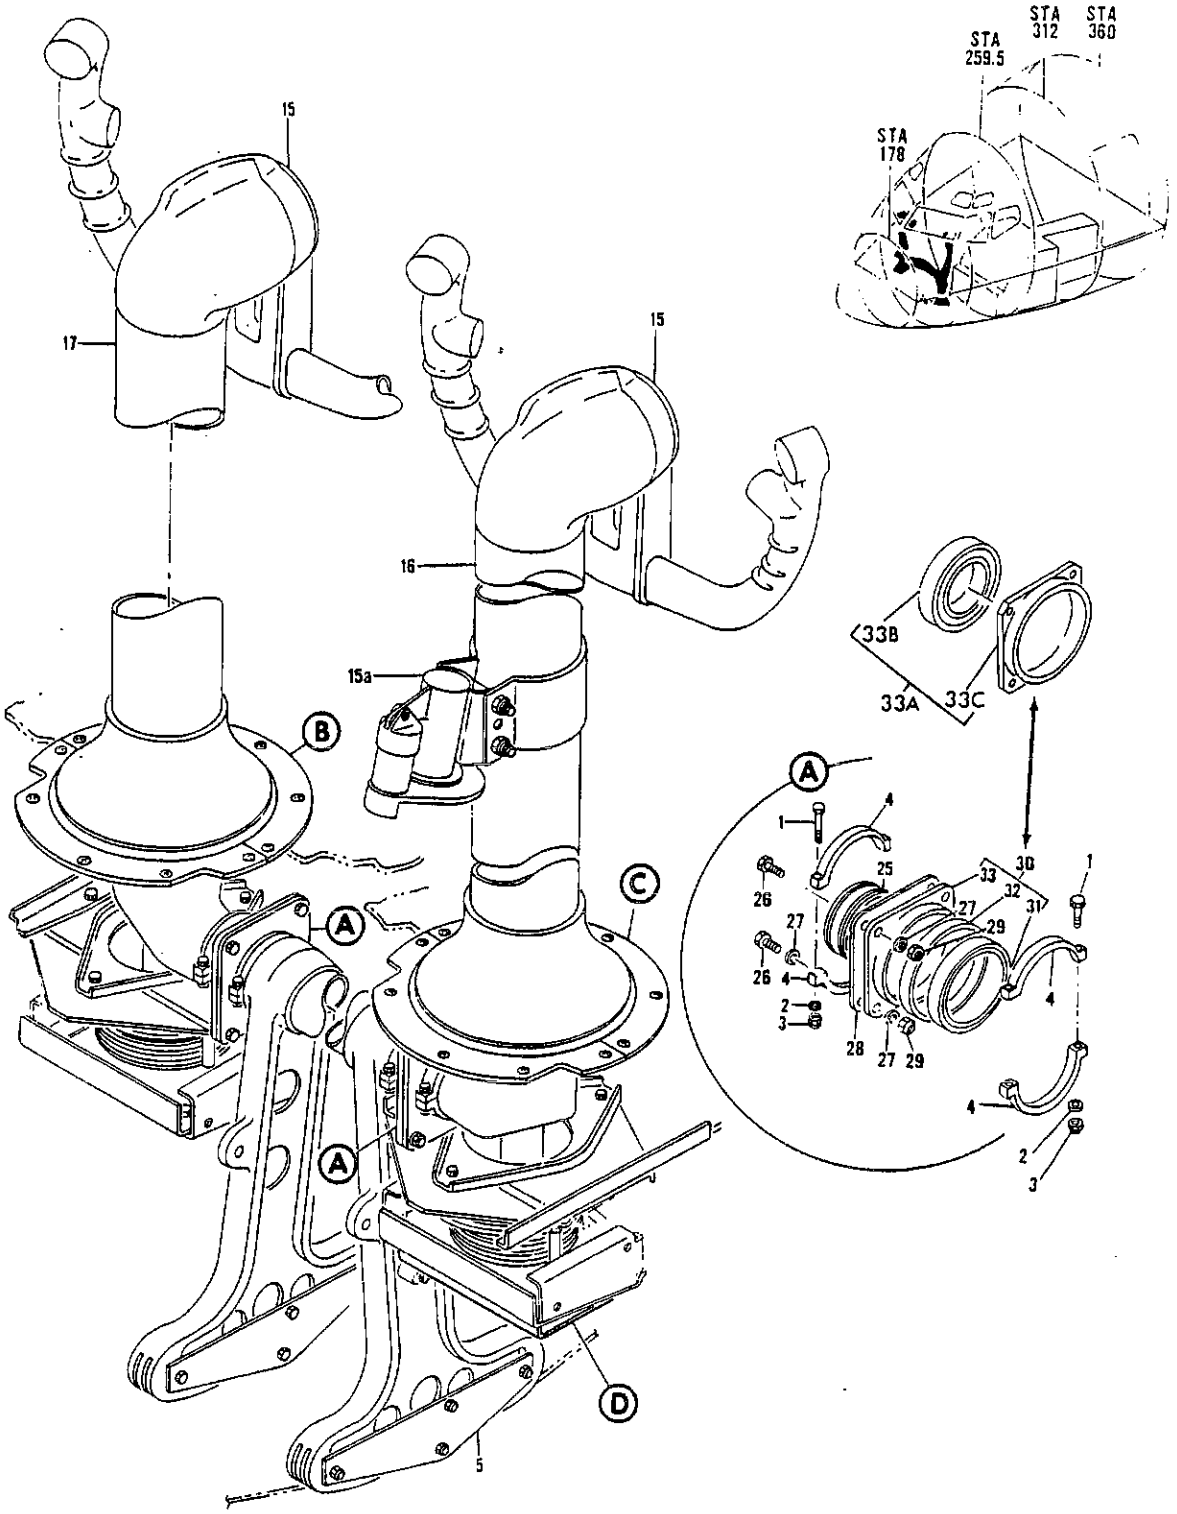


FIGURE 2. COLUMN INSTL, AILERON AND ELEVATOR CONTROL (SHEET 1)

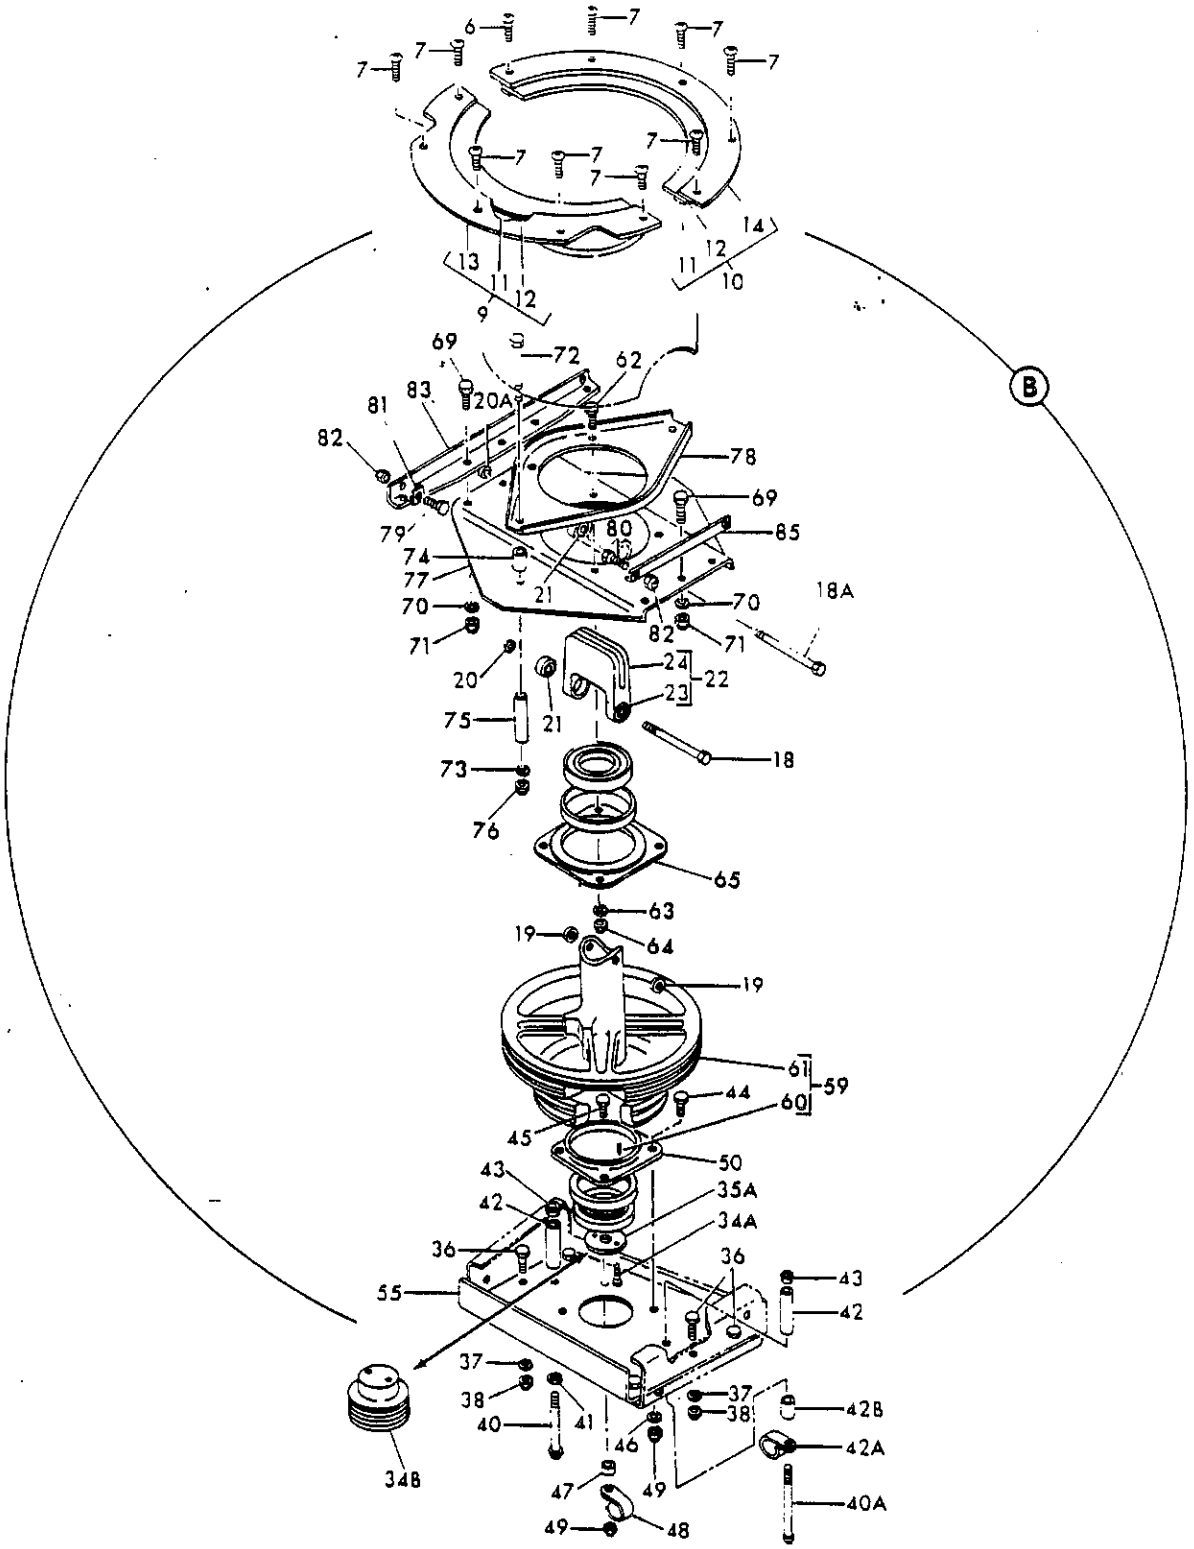


FIGURE 2. COLUMN INSTL, AILERON AND ELEVATOR CONTROL (SHEET 2)

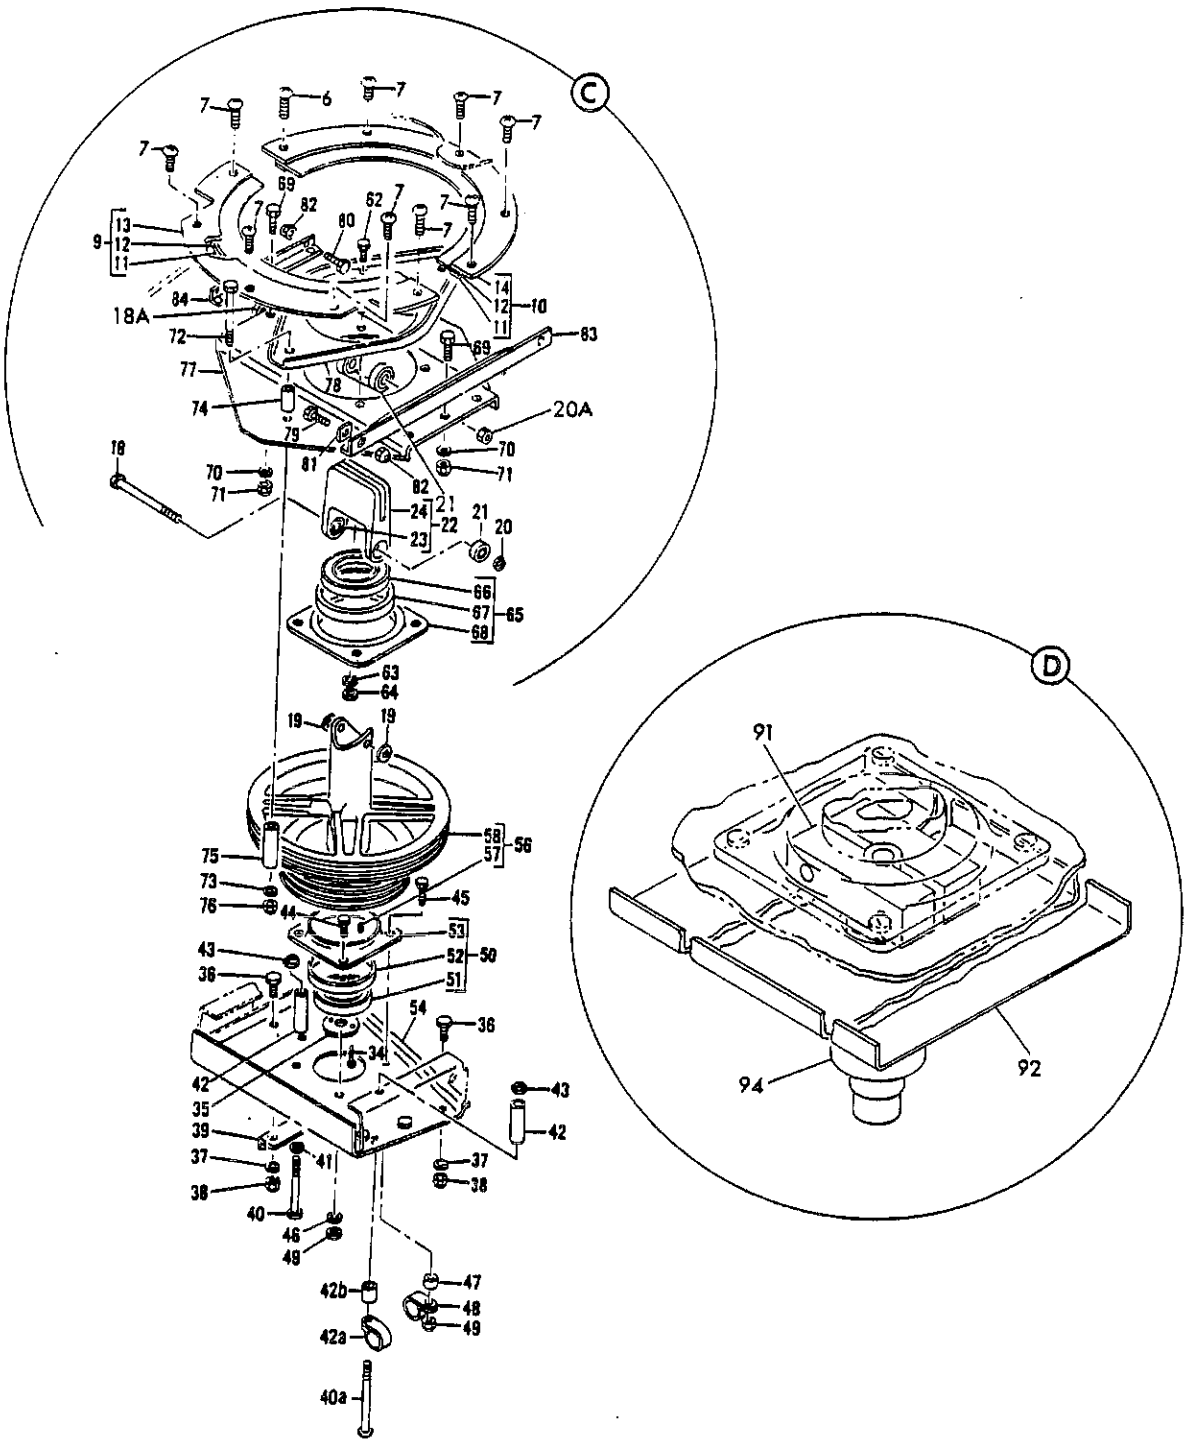


FIGURE 2. COLUMN INSTL, AILERON AND ELEVATOR CONTROL (SHEET 3)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	2	5-87879-3003	COLUMN INSTL, AILERON AND ELEVATOR CONTROL (SEE 27-3, FIG. 1, ITEM 14)	0150	RF
R		5-87879-3003	COLUMN INSTL, AILERON AND ELEVATOR CONTROL (VARIABLE DWG;5-87879-5001) (SEE 27-3, FIG. 1, ITEM 14)	5199	RF
	1	AN4-22A	. BOLT		8
	2	AN960D416	. WASHER		8
	4	9-8290-2	. CLAMP, COUPLING		8
R	5	5-97801-3002	. QUADRANT ASSY, (SEE FIG. 6)	0150	1
R	5	5-97801-3004	. QUADRANT ASSY	5199	1
R			. . FLIGHT CONTROL, (SEE FIG. 6)	5199	
R			. . REQUIRED PLACARDS, (SEE 11-2, FIG. 115)	5199	
	6	NAS603-6	. SCREW		2
	7	NAS603-8	. SCREW		18
	9	90-1565-3000	. RING ASSY, CONTROL COLUMN DUST SEAL FORWARD HALF		2
	10	90-1565-3001	. RING ASSY, CONTROL COLUMN DUST SEAL AFT HALF		2
	11	60-1570	. . RING, CONTROL COLUMN DUST SEAL		1
	12	60-1569	. . RING, CONTROL COLUMN DUST SEAL WIPER		1
	13	60-1537-3000	. . COLLAR, CONTROL COLUMN DUST SEAL (USED ON 90-1565-3000)		1
	14	60-1537-3001	. . COLLAR, CONTROL COLUMN DUST SEAL (USED ON 90-1565-3001)		1
	15	10-60015-5	. MEDALLION ASSY, WHEEL (OPTIONAL BAC SPEC NO. 10-60015-1)		2
	15	10-60015-1	. MEDALLION ASSY, WHEEL (OPTIONAL TO BAC SPEC NO. 10-60015-5)		2
	15A	65-14218	. SHAKER INSTL, ATTITUDE WARNING SYSTEM COLUMN (SEE 34-10, FIG. 4)		1
R	16	5-87879-3023	. COLUMN ASSY, AILERON AND ELEVATOR CONTROL (SEE FIG. 4)	0150	1
R	16	5-87879-3085	. COLUMN ASSY, (SEE FIG. 4)	5199	1
R	17	5-87879-3036	. COLUMN ASSY, (SEE FIG. 4)	0150	1
R	17	5-87879-3086	. COLUMN ASSY, (SEE FIG. 4)	5199	1
R	18	NAS1104-37DW	. BOLT	0150	2
R	18	BACB30NF4-37	. BOLT	5199	2
R	18A	NAS1104-37DW	. BOLT	0150	2
R	18A	69-40961-1	. BOLT	5199	2
	19	AN960D416	. WASHER		4
R	20	AN320-4	. NUT	0150	2
R	20	BACN10JC4	. NUT	5199	2
R	20A	AN320-4	. NUT	0150	2
R	20A	BACN10JC4	. NUT	5199	2
	21	AN201KP4A	. BEARING		4
	22	6-60428	. FORK ASSY, AILERON CONTROL SWIVEL JOINT		2
	23	AN201KP4A	. . BEARING		1
	24	6-60428-1	. . FORK, AILERON CONTROL SWIVEL JOINT		1
	25	9-11303-1	. CONNECTOR, CONTROL COLUMN		2
	26	AN4-6A	. BOLT		8
	27	AN960D416	. WASHER		12
	28	6-61501	. SHIM, AILERON AND ELEVATOR CONTROL COLUMN LAMINATED		2
	29	NAS679A4W	. NUT		8
R	30	3-47096-1	. BEARING ASSY, KP49B SELF-ALIGNING	0150	2
R	30	3-47096-1	. BEARING ASSY, KP49B SELF-ALIGNING (OPTIONAL 69-44188-3)	5199	2
	31	BACB10A557	. . BEARING		1
	32	6-31758-1	. . RETAINER, KP49B SELF-ALIGNING BEARING		1
	33	6-31757-1	. . HOUSING, KP49B SELF-ALIGNING BEARING		1
R	33A	69-44188-3	. BEARING ASSY, AILERON CONTROL (OPTIONAL TO 3-47096-1)	5199	2
R	33B	BACB10A242	. . BEARING	5199	1
R	33C	69-44188-4	. . HOUSING	5199	1
	34	BACS12AG8F	. SCREW		2
	34A	BACS12AG8F	. SCREW		2
	35	3-84430	. WASHER, CONTROL COLUMN AILERON DRUM		1
	35A	3-84430	. WASHER		1
	36	AN4-5A	. BOLT		12
	37	AN960D416	. WASHER		12
	38	NAS679A4W	. NUT		12
	39	30-1521-1	. ANGLE, CONTROL COLUMN RIGGING PIN		1
	40	NAS623-3-32W	. SCREW		2
	40A	NAS623-3-40W	. SCREW		2
	41	AN960D10	. WASHER		2
	42	NAS42D06-122	. SPACER		4
	42A	BACC10DK10	. CLAMP, (OPTIONAL MS21919H10)		2
	42B	NAS43DD3-32	. SPACER		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
2 43	NAS679A3W	. NUT		4
44	NAS1103-3W	. BOLT		6
45	NAS1103-7W	. BOLT		2
46	AN960D10	. WASHER		6
47	NAS43DD3-16	. SPACER		2
48	BACC10DK10	. CLAMP, (OPTIONAL MS21919H10)		2
49	NAS679A3W	. NUT		8
50	69-34519-1	. BEARING ASSY, SELF ALIGNING		2
51	BACB10A829	. . BEARING, (USED ON 69-34519-1)		1
53	69-34519-2	. . HOUSING, SELF ALIGNING BEARING (ALTERED FROM 9-19230-2) (USED ON 69-34519-1)		1
54	6-84959-3	. CHANNEL, AILERON CONTROL LOWER BEARING SUPPORT		1
55	6-84959-4	. CHANNEL, AILERON CONTROL LOWER BEARING SUPPORT		1
56	5-97653-4	. DRUM ASSY, PILOTS CONTROL COLUMN AILERON		1
57	BACS13P3CN4	. . SLEEVE		2
58	5-97653-3	. . DRUM, PILOTS CONTROL COLUMN AILERON		1
59	50-9569	. DRUM ASSY, COPILOT CONTROL COLUMN AILERON		1
60	BACS13P3CN4	. . SLEEVE		2
61	50-9569-1	. . DRUM, COPILOT CONTROL COLUMN AILERON		1
62	NAS1104-5W	. BOLT		8
63	AN960D416	. WASHER		8
64	NAS679A4W	. NUT		8
65	69-34514-1	. STOP ASSY, AILERON CONTROL FIXED		2
66	BACB10A238	. . BEARING, (USED ON 69-34514-1)		1
68	69-34514-2	. . STOP, FIXED (ALTERED FROM 9-18455-2) (USED ON 69-34514-1)		1
69	AN4-5A	. BOLT		12
70	AN960D416	. WASHER		12
71	NAS679A4W	. NUT		12
72	AN3-22A	. BOLT		4
73	AN960D10	. WASHER		4
74	NAS42DD6-37	. SPACER		4
75	NAS42DD6-80	. SPACER		4
76	NAS679A3W	. NUT		4
77	90-1410-2	. CHANNEL, AILERON UPPER BEARING SUPPORT		2
78	60-1444-2	. CHANNEL, AILERON CONTROL CABLE GUARD SUPPORT		2
79	AN3-5A	. BOLT		4
80	AN3-4A	. BOLT		4
81	9-19092-46	. FILLER, RADIUS		AR
82	NAS679A3W	. NUT		8
83	60-1441	. ANGLE, AILERON CONTROL CHANNEL SUPPORT		2
84	6-60445-1	. ANGLE, AILERON CONTROL CHANNEL SUPPORT		1
85	6-60445-2	. ANGLE, AILERON CONTROL CHANNEL SUPPORT		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

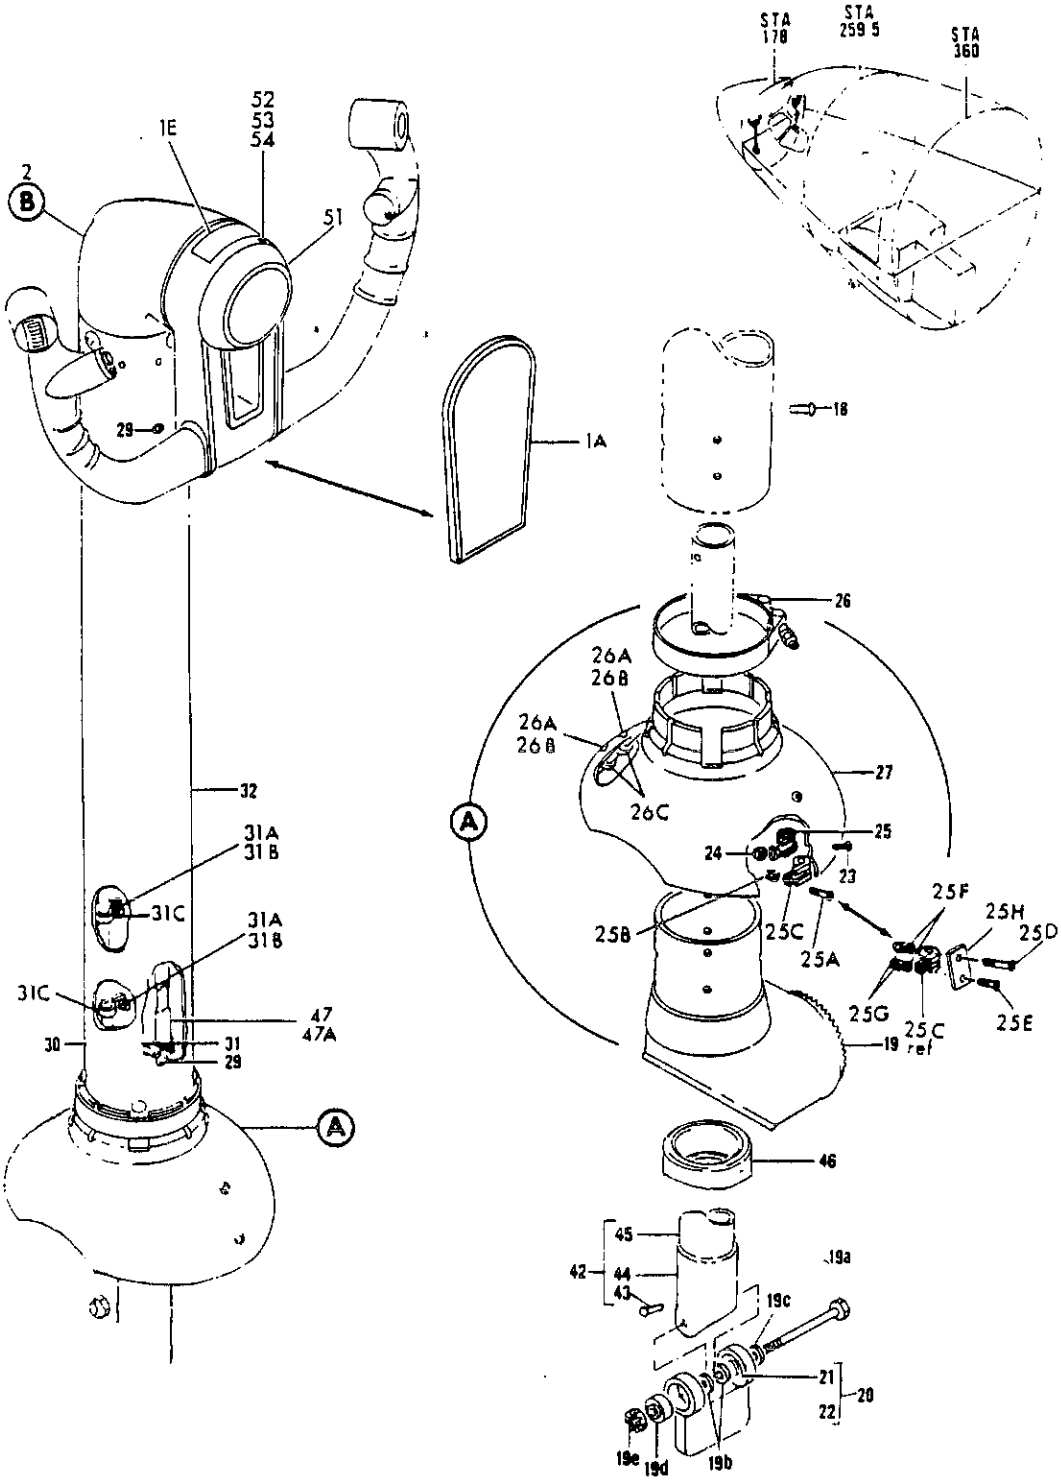


FIGURE 4. COLUMN ASSY, AILERON AND ELEVATOR CONTROL (PILOT) (SHEET 1)

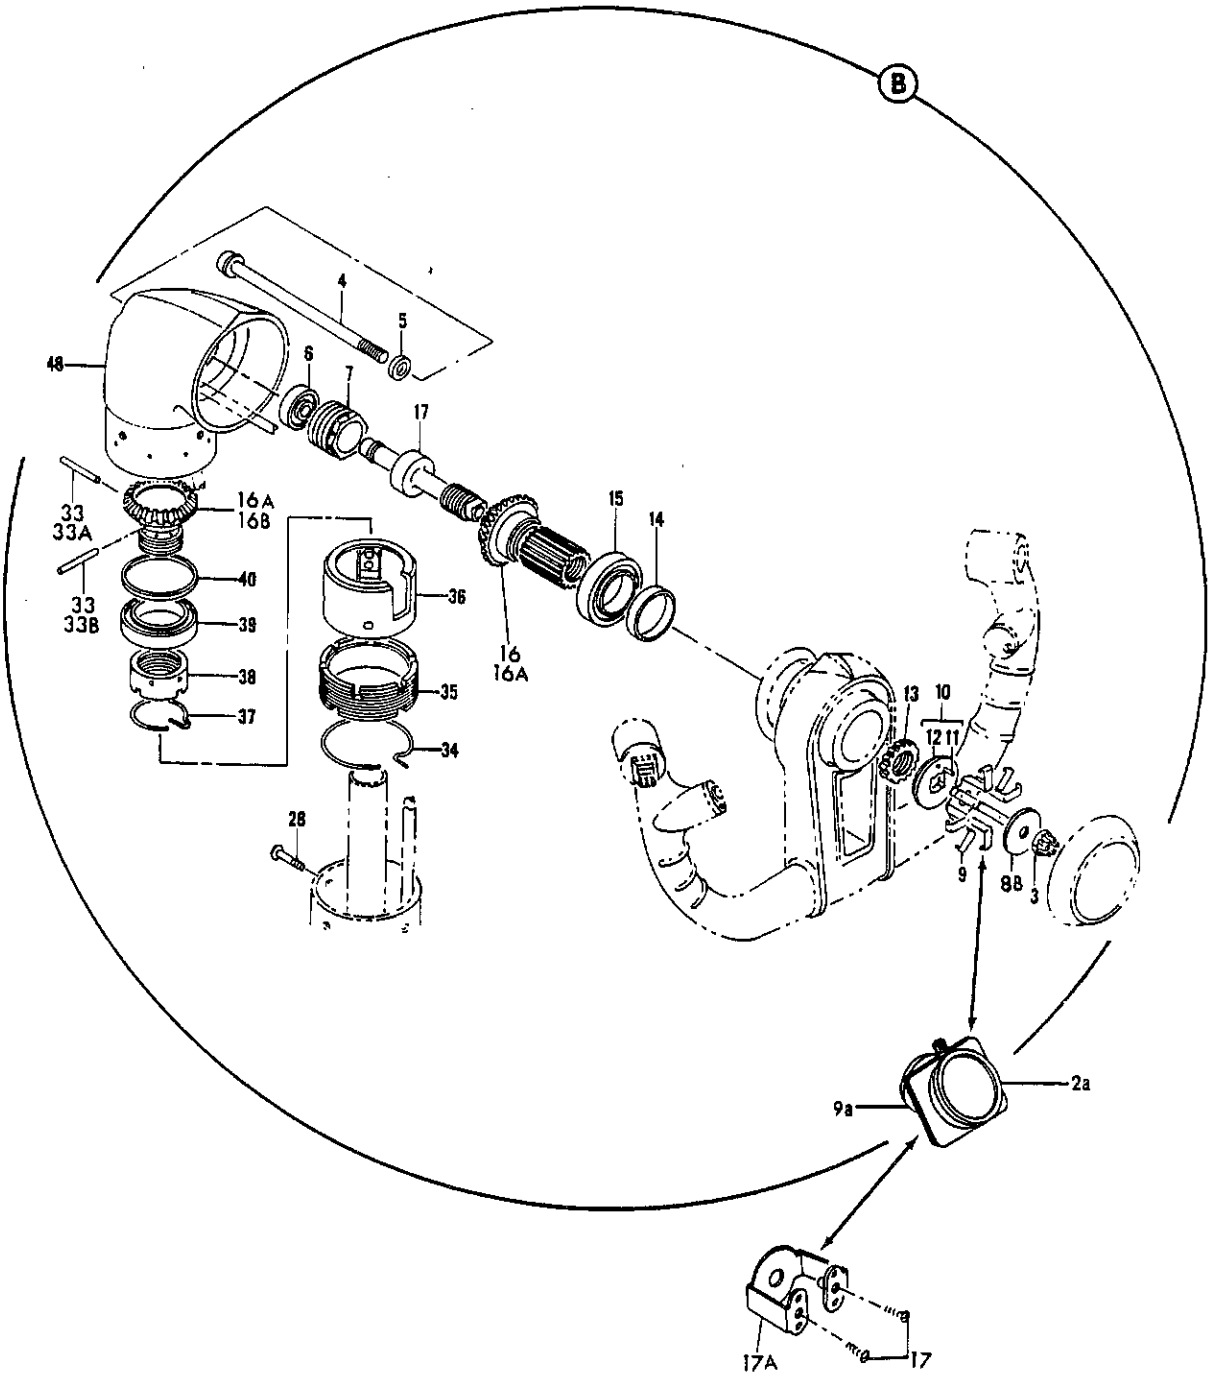


FIGURE 4. COLUMN ASSY, AILERON AND ELEVATOR CONTROL (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R	4	5-87879-3085	COLUMN ASSY, AILERON AND ELEVATOR CONTROL (PILOT) (SEE FIG 2, ITEM 16)	5199	RF
R		5-87879-3023	COLUMN ASSY, AILERON AND ELEVATOR CONTROL (PILOT) . . . (SEE FIG. 2, ITEM 16)	0150	RF
R		5-87879-3036	COLUMN ASSY, AILERON AND ELEVATOR CONTROL (COPILOT) . . (SEE FIG. 2, ITEM 17)	0150	RF
R		5-87879-3086	COLUMN ASSY, AILERON AND ELEVATOR CONTROL (COPILOT) . . (SEE FIG. 2, ITEM 17)	5199	RF
R	1	65-22960-61	. WHEEL ASSY, (PILOT)	0150	1
R	1	65-22960-81	. WHEEL ASSY, (PILOT)	5199	1
R	1	65-22960-62	. WHEEL ASSY, (COPILOT)	0150	1
R	1	65-22960-82	. WHEEL ASSY, (COPILOT)	5199	1
			. . AUTOPILOT, (SEE 22-1, FIG. 22, 22A)		
			. . COMMUNICATIONS, (SEE 23-2, FIG. 12, 12A).		
			. . FLIGHT CONTROL, (SEE FIG. 5, 5A AND 27-12, FIG. 15, 15A)		
R	2	65-23466-1	. COLUMN ASSY, (PILOT) (USED ON 5-87879-3029, -3031,. . -3023, -3027, -3025, -3033 AND -3047)	0150	1
R	2	65-23466-13	. COLUMN ASSY, (PILOT) (USED ON 5-87879-3061, -3065,. . -3069, -3073, -3081, -3087, -3091)	5199	1
R	2	65-23466-9	. COLUMN ASSY, (COPILOT) (USED ON 5-87879-3042, -3044, -3036, -3040, -3038, -3046, -3050 AND -3030)	0150	1
	3	AN310-6	. . NUT		1
	4	66-14778-1	. . BOLT.		1
	5	30-3681	. . SPACER, CONTROL COLUMN CONTROL WHEEL (ALTERED FROM NAS42DD12-8)		1
	6	AN201KP8A	. . BEARING		1
	7	3-85291	. . NUT, CONTROL WHEEL BEARING.		1
	8	30-3567	. . WASHER, CONTROL WHEEL RADIUS FILLER		1
	9	60-5740	. . SPRING, CONTROL WHEEL MEDALLION RETAINER.		1
	10	3-85293-2	. . WASHER ASSY, CONTROL COLUMN CONTROL WHEEL		1
	11	NAS561P3-4	. . . PIN		1
	12	3-85293-1	. . . WASHER, CONTROL COLUMN CONTROL WHEEL.		1
	13	66-25058	. . NUT, CONTROL WHEEL BEVEL GEAR		1
	14	60-5795	. . SPACER, CONTROL COLUMN WHEEL.		1
	15	AN202KP218	. . BEARING		1
	16	9-49084-3000	. . GEAR, CONTROL COLUMN CONTROL WHEEL (USED WITH . . . 9-48067-1) (OPTIONAL 65-45122-4)		1
	16A	9-48067-1	. . GEAR, CONTROL COLUMN (USED WITH 9-49084-3000) . . . (OPTIONAL 65-45122-4)		1
	16B	65-45122-4	. . GEAR ASSY, MATCHED SET. . . . . (OPTIONAL TO 9-49084-3000 AND 9-48067-1)		1
	17	6-62607	. . SLEEVE, CONTROL COLUMN CONTROL WHEEL.		1
	18	MS20470D8	. . RIVET		8
	19	15-14521-2002	. . ELL		1
	19A	NAS1104-37D	. . BOLT.		1
	19B	AN960D416	. . WASHER.		2
	19C	AN960D416L	. . WASHER.		1
	19D	AN201KP4A	. . BEARING		1
	19E	AN320-4	. . NUT		1
	20	6-60429	. . PLATE ASSY, AILERON CONTROL SWIVEL JOINT.		1
	21	AN201KP4A	. . . BEARING		1
	22	6-60429-1	. . . PLATE, AILERON CONTROL SWIVEL JOINT		1
	23	NAS514P1032-6	. . SCREW		1
	24	NAS679A3W	. . NUT		1
	25	MS21919WDG6	. . CLAMP		1
	25A	NAS514P1032-6	. . SCREW		1
	25B	NAS679A3W	. . NUT		1
	25C	MS21919WDG6	. . CLAMP		1
	26	BACC10P3-62-312SH	. . CLAMP		1
R	27	9-48032	. . COVER, DUST SEAL (USED ON 65-23466-1 AND -11) . . .	0150	1
R	27	9-48032-1	. . COVER, DUST SEAL (USED ON 65-23466-7, -8, -13, -10, -14 AND 65-45122-1, -2)	5199	1
R	27	9-48032	. . COVER, DUST SEAL (USED ON 65-23466-2, -9 AND -12) .	0150	1
	28	NAS222-12	. . BOLT.		4
	29	NAS603-6	. . SCREW		2
	30	NAS679A3W	. . NUT		2
	31	AN742-8	. . CLAMP		2
R	32	9-67622	. . TUBE, (USED ON 65-23466-1 AND -11).	0150	1
R	32	9-67622-1	. . TUBE, (USED ON 65-23466-7, -8, -13, -10, -14 AND. . 65-45122-1, -2)	5199	1
R	32	9-67622	. . TUBE, (USED ON 65-23466-2, -9 AND -12).	0150	1
R	33	BACP18L10P1250	. . PIN	0150	2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R	4 33	69-51259-1	. . PIN	5199	2
	34	3-85967	. . LOCK, CONTROL COLUMN RING		1
	35	60-5747	. . NUT, CONTROL COLUMN BEARING RETAINER.		1
	36	6-62608-3	. . SPACER ASSY, BEARING RETAINER (OPTIONAL TO 6-62608-5)		1
	36	6-62608-5	. . SPACER ASSY, BEARING RETAINER (OPTIONAL 6-62608-3)		1
	37	3-85966	. . LOCK, CONTROL COLUMN RING		1
	38	3-85290-1	. . NUT, CONTROL COLUMN BEARING RETAINER.		1
	39	AN202KP218	. . BEARING		1
	40	30-2282	. . SHIM, LAMINATED		1
	42	6-84648	. . SHAFT ASSY, CONTROL COLUMN.		1
	43	AN426D5	. . . RIVET		4
	44	6-60488	. . . TERMINAL, AILERON SHAFT		1
	45	6-84648-1	. . . SHAFT, CONTROL COLUMN		1
	46	BACB10B28PLT	. . BEARING		1
	47	60-1463-1	. . TUBE, CONTROL COLUMN CABLE SHIELD		1
R	48	5-63089-2004	. . HOUSING, (USED ON 65-23466-1 AND -11)	0150	1
R	48	5-63089-2006	. . HOUSING, (USED ON 65-23466-7 AND -13)	5199	1
R	48	5-63089-2007	. . HOUSING, (USED ON 65-23466-9 AND -12)	0150	1
R	48	5-63089-2008	. . HOUSING, (USED ON 65-23466-10 AND -14).	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

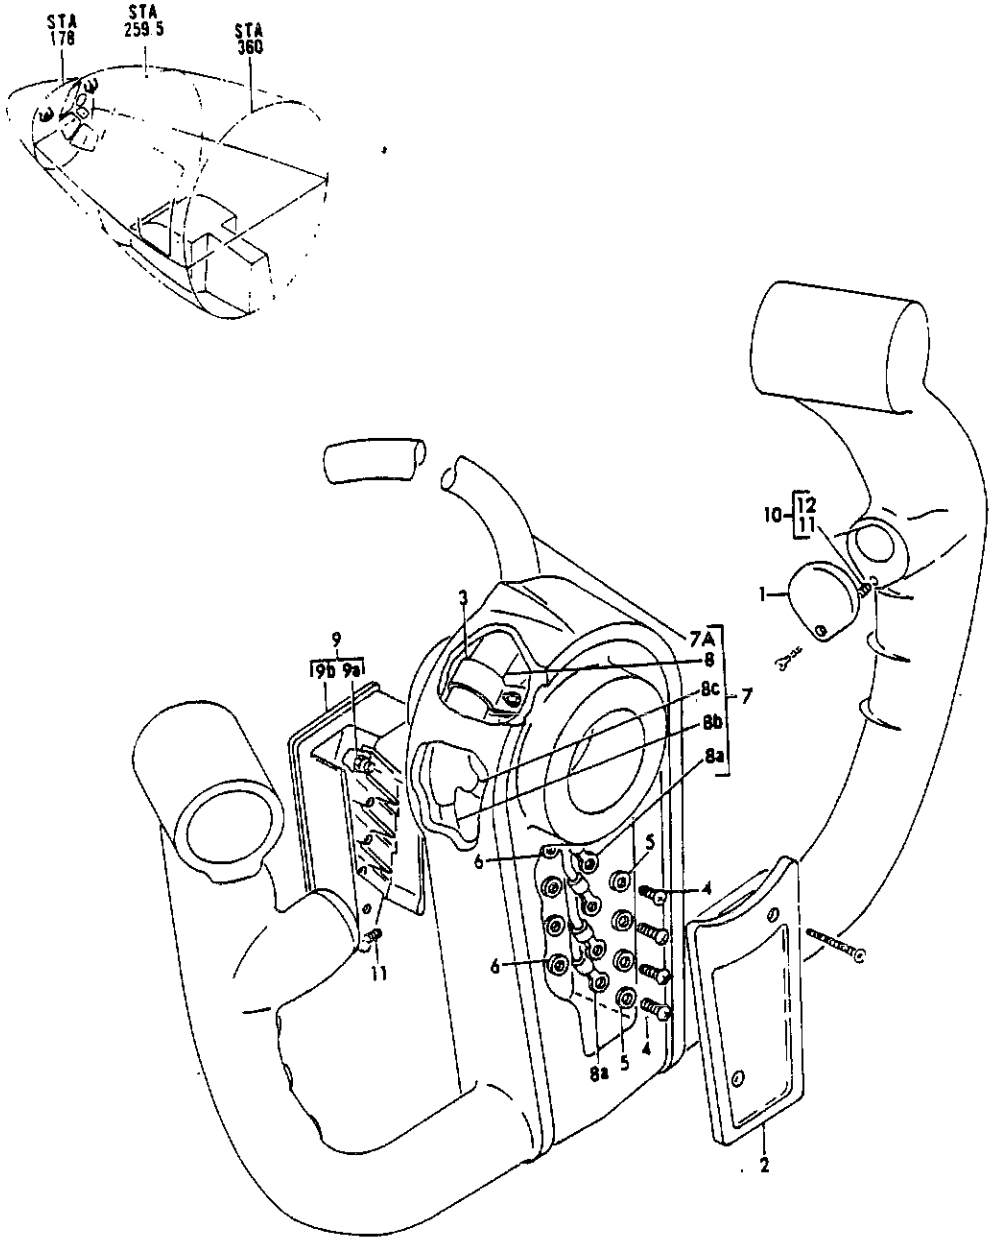


FIGURE 5. WHEEL ASSY, CONTROL COLUMN (FLIGHT CONTROL (CONTROL COLUMN AND CONTROL STAND) ONLY)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	5	65-22960-81	WHEEL ASSY, CONTROL COLUMN (PILOT) (FLIGHT CONTROL. . . (CONTROL COLUMN AND CONTROL STAND) ONLY) (SEE FIG. 4, ITEM 1)	5199	RF
R		65-22960-61	WHEEL ASSY, CONTROL COLUMN (PILOT) (FLIGHT CONTROL. . . (CONTROL COLUMN AND CONTROL STAND) ONLY) (SEE FIG. 4, ITEM 1)	0150	RF
R		65-22960-62	WHEEL ASSY, CONTROL COLUMN (COPILOT) (FLIGHT CONTROL. . (CONTROL COLUMN AND CONTROL STAND) ONLY) (SEE FIG. 4, ITEM 1)	0150	RF
R		65-22960-82	WHEEL ASSY, CONTROL COLUMN (COPILOT) (FLIGHT CONTROL. . (CONTROL COLUMN AND CONTROL STAND) ONLY) (SEE FIG. 4, ITEM 1)	5199	RF
	1	6-72490-1	. CAP, CONTROL WHEEL.		1
			ATTACHING PARTS		
		NAS514P632-7B	. SCREW		1
			-------*-------		
	2	65-19806-9	. COVER, WIRE SPLICE TERMINAL BLOCK (PILOT)		1
	2	65-19806-15	. COVER, WIRE SPLICE TERMINAL BLOCK (COPILOT)		1
			ATTACHING PARTS		
		NAS514P632-10B	. SCREW		2
			-------*-------		
	3	BACC10BJ4	. CLAMP		1
			ATTACHING PARTS		
		NAS602-8	. SCREW		1
		NAS679A08W	. NUT		1
			-------*-------		
	4	NAS601-6	. SCREW		4
	5	MS35337-41	. WASHER.		4
	6	NAS620B6L	. WASHER.		4
R	7	65-22960-71	. BUNDLE ASSY, CABLE.	0150	1
R	7	65-22960-91	. BUNDLE ASSY, WIRE (PILOT)	5199	1
R	7	65-22960-93	. BUNDLE ASSY, WIRE (COPILOT)	5199	1
R	7A	61-27051-1	. . BUNDLE ASSY, CABLE (PILOT).	5199	1
R	7A	61-27053-1	. . BUNDLE ASSY, CABLE (COPILOT).	5199	1
	8	10-60816-12	. . CABLE ASSY, MULTI CONDUCTOR		1
	8A	BACT12AC-2	. . TERMINAL.		4
	8B	65-22960-12	. . SLEEVE, CONTROL COLUMN WHEEL CABLE BUNDLE		1
	8C	65-22960-13	. . SLEEVE, CONTROL COLUMN WHEEL CABLE BUNDLE		1
	9	65-19806-7	. TERMINAL BLOCK ASSY, WIRE SPLICE.		1
	9	65-19806-13	. TERMINAL BLOCK ASSY, WIRE SPLICE (COPILOT).		1
	9A	69-15994-2	. . NUT, CONTROL COLUMN TRIM SWITCH		6
	9B	65-19806-8	. . TERMINAL BLOCK, (PILOT)		1
	9B	65-19806-14	. . TERMINAL BLOCK, (COPILOT)		1
R	10	65-21047-43	. WHEEL ASSY, AILERON (PILOT)	5199	1
R	10	65-21047-41	. WHEEL ASSY, AILERON (PILOT)	0150	1
R	10	65-21047-44	. WHEEL ASSY, AILERON (COPILOT)	5199	1
R	10	65-21047-42	. WHEEL ASSY, AILERON (COPILOT)	0150	1
	11	BACS13P06C4	. . SLEEVE.		2
R	12	65-21047-49	. . WHEEL, (PILOT).	5199	1
R	12	65-21047-47	. . WHEEL, (PILOT).	0150	1
R	12	65-21047-50	. . WHEEL, (COPILOT).	5199	1
R	12	65-21047-48	. . WHEEL, (COPILOT).	0150	1
			. FOR REFERENCE TO OTHER WHEEL DETAILS, SEE NHA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

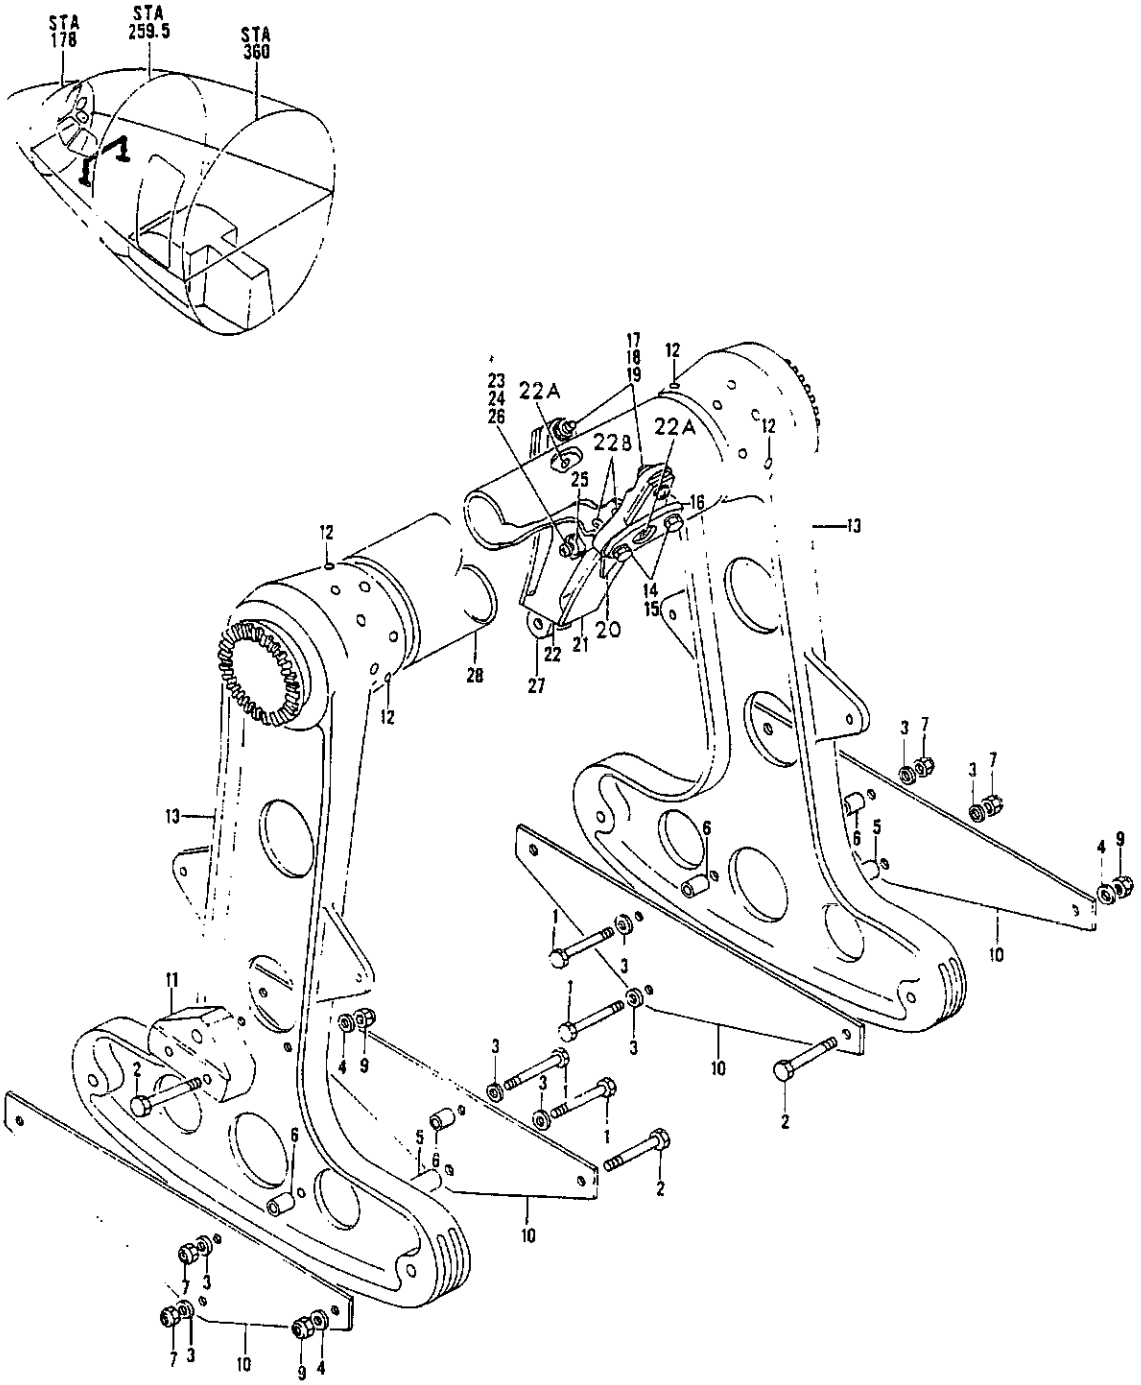


FIGURE 6. QUADRANT ASSY, ELEVATOR CONTROL

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	6	5-97801-3002	QUADRANT ASSY, ELEVATOR CONTROL (SEE FIG. 2, ITEM 5). .	0150	RF
R		5-97801-3004	QUADRANT ASSY, ELEVATOR CONTROL (SEE FIG. 2, ITEM 5). .	5199	RF
	1	AN3-15A	. BOLT.		4
	2	AN4-15A	. BOLT.		6
	3	AN960D10	. WASHER.		8
	4	AN960D416	. WASHER.		6
	5	63-8731	. SPACER, ELEVATOR QUADRANT CABLE GUARD		2
	6	NAS42DD6-28	. SPACER.		4
	7	NAS679A3W	. NUT		4
	9	NAS679A4W	. NUT		6
	10	3-85292	. GUARD, ELEVATOR QUADRANT CONTROL COLUMN CABLE		4
	11	6-67432-2	. BLOCK, QUADRANT COLUMN STOP		1
	12	MS20470D6	. RIVET		24
	13	15-14513-3	. QUADRANT, ELEVATOR.		2
R	14	NAS1104-5	. BOLT.	5199	4
R	15	AN960PD416L	. WASHER.	5199	4
R	16	66-19375-1	. RETAINER, BRAKE SYSTEM STAB TRIM LEAF SPRING. . . .	5199	2
R	17	NAS623-3-7	. SCREW	5199	2
R	18	AN960PD10L	. WASHER.	5199	4
R	19	NAS679A3W	. NUT	5199	2
R	20	69-26478-2	. SPRING, BRAKE SYSTEM STAB TRIM LEAF	5199	2
R	21	69-26478-1	. SPRING, BRAKE SYSTEM STAB TRIM LEAF	5199	2
R	22	65-33287-4	. CRANK ASSY, BRAKE SYSTEM STAB TRIM MOUNT.	5199	1
			ATTACHING PARTS		
R	22A	NAS1399D6	. RIVET	5199	2
R			(OPTIONAL MS20426D6)		
R	22A	MS20426D6	. RIVET	5199	2
R			(OPTIONAL TO NAS1399D6)		
R	22B	MS20470D6	. RIVET	5199	2
			-------*-------		
R	23	NAS623-3-13	. SCREW	5199	1
R	24	AN960PD10L	. WASHER.	5199	2
R	25	NAS75-3-027	. BUSHING	5199	1
R	26	NAS679A3W	. NUT	5199	1
R	27	65-33290-1	. FORK, BRAKE SYSTEM STAB TRIM.	5199	1
	28	6-17859-2000	. TUBE, ELEVATOR CONTROL.		1
R			. FOR REFERENCE TO OTHER QUADRANT DETAILS, SEE NHA. . .	5199	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

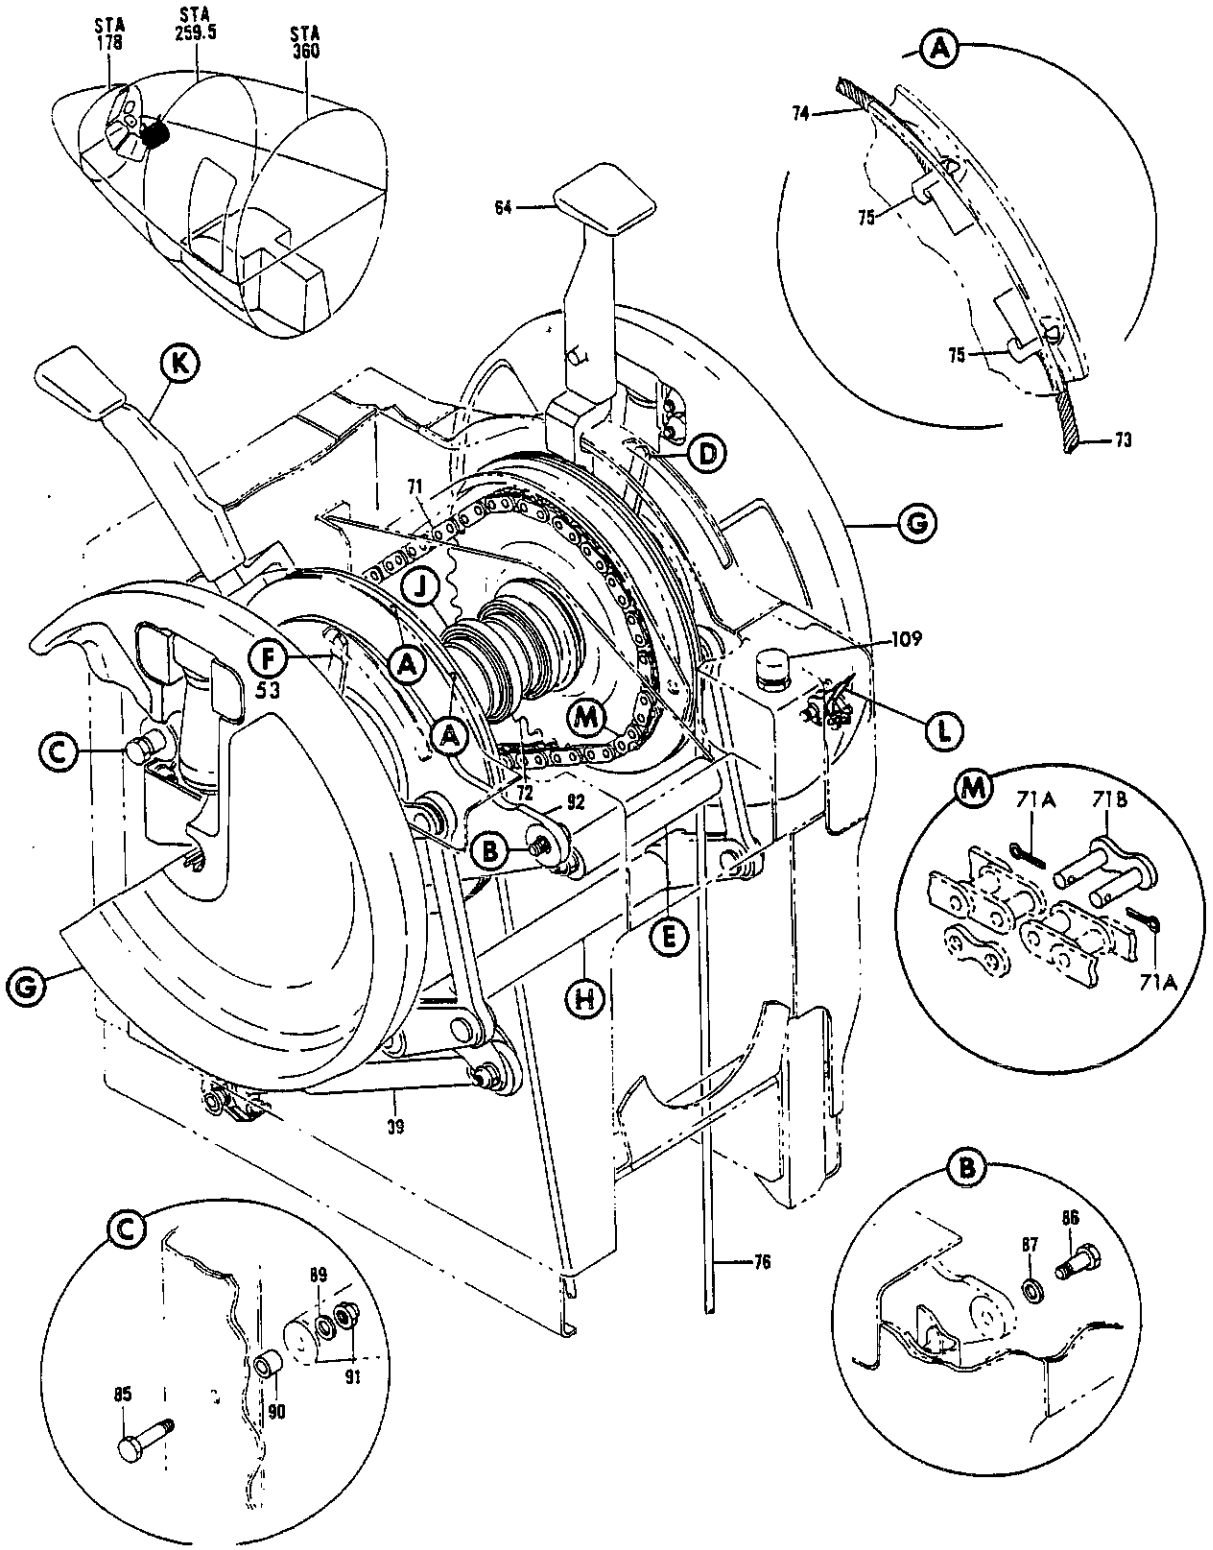


FIGURE 8. MECHANISM ASSY, CONTROL STAND UPPER (FLIGHT CONTROL ONLY) (SHEET 1)

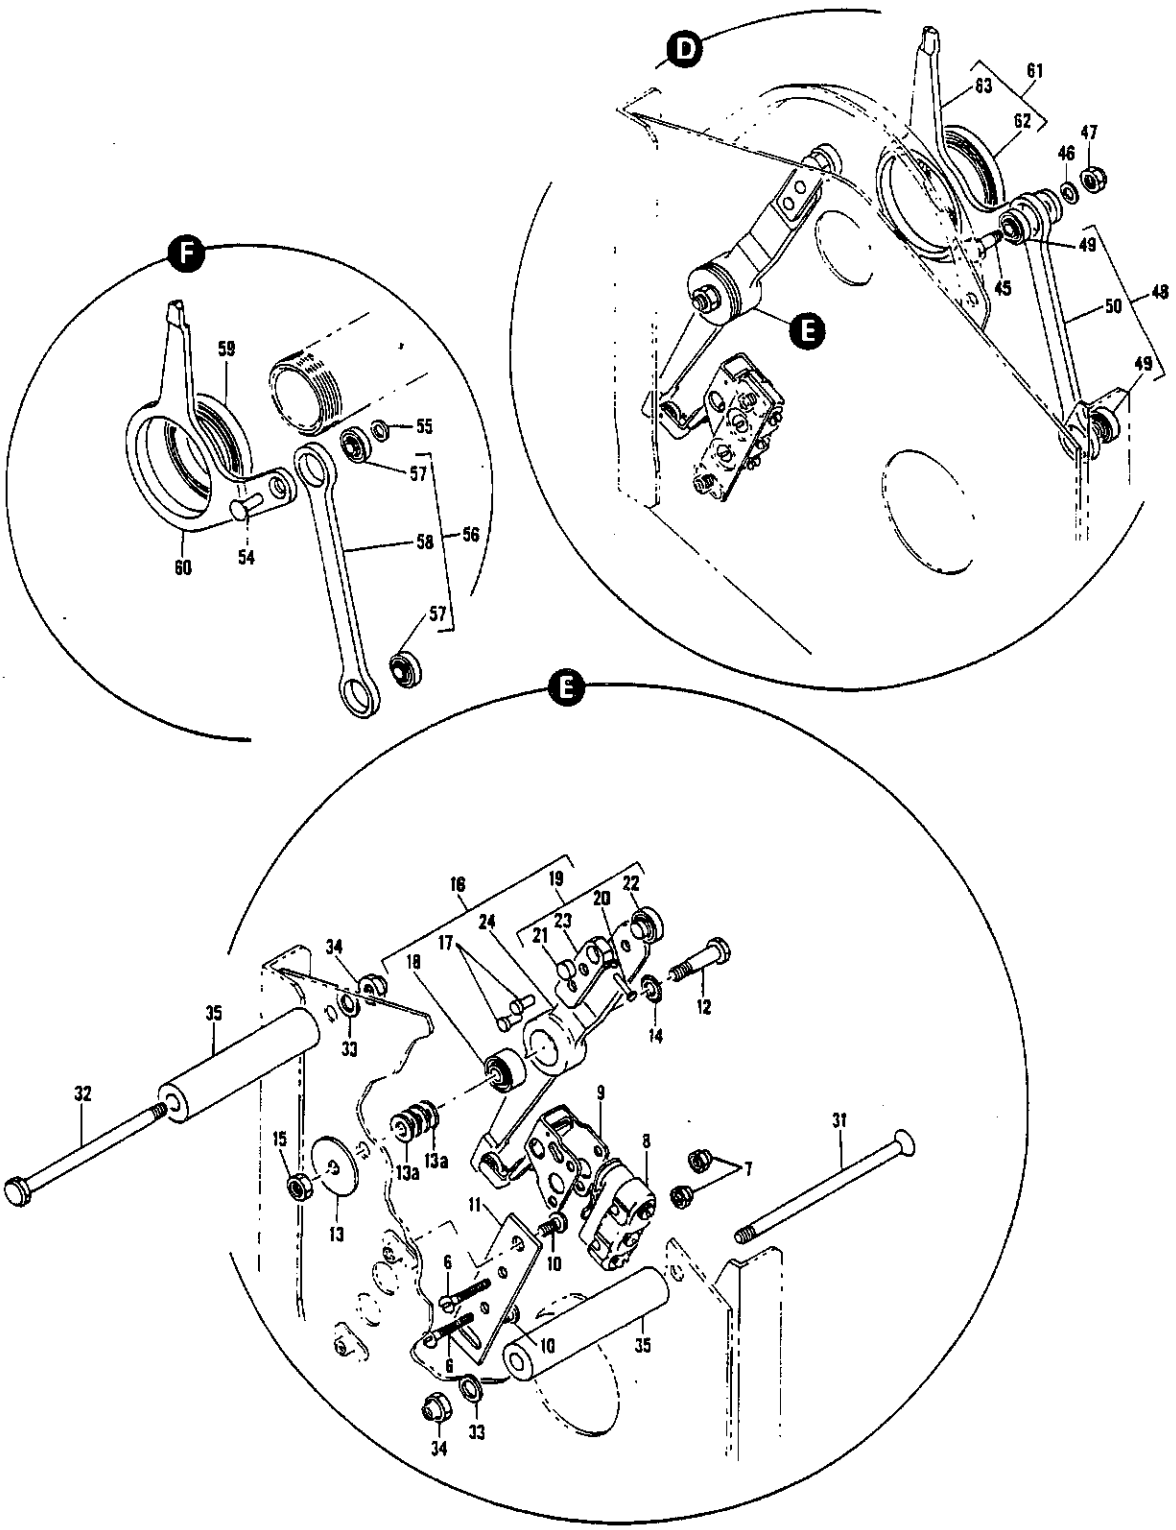


FIGURE 8. MECHANISM ASSY, CONTROL STAND UPPER (FLIGHT CONTROL ONLY) (SHEET 2)

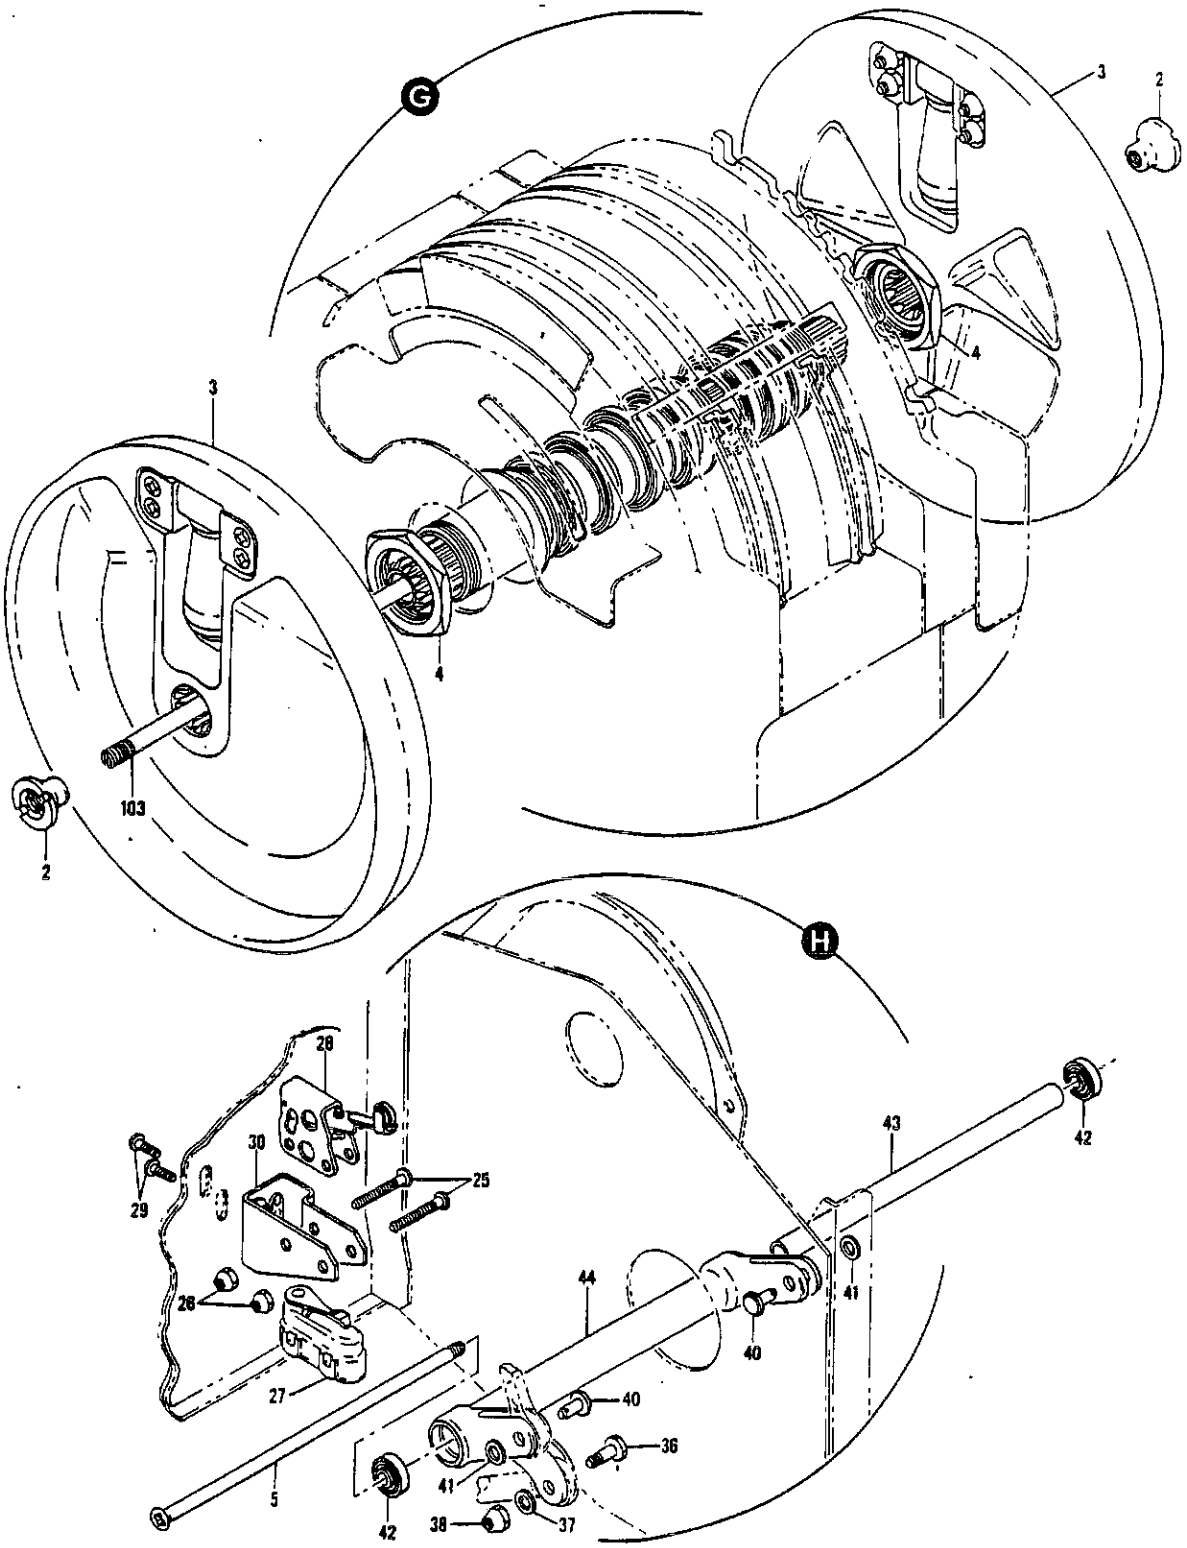


FIGURE 8. MECHANISM ASSY, CONTROL STAND UPPER (FLIGHT CONTROL ONLY) (SHEET 3)

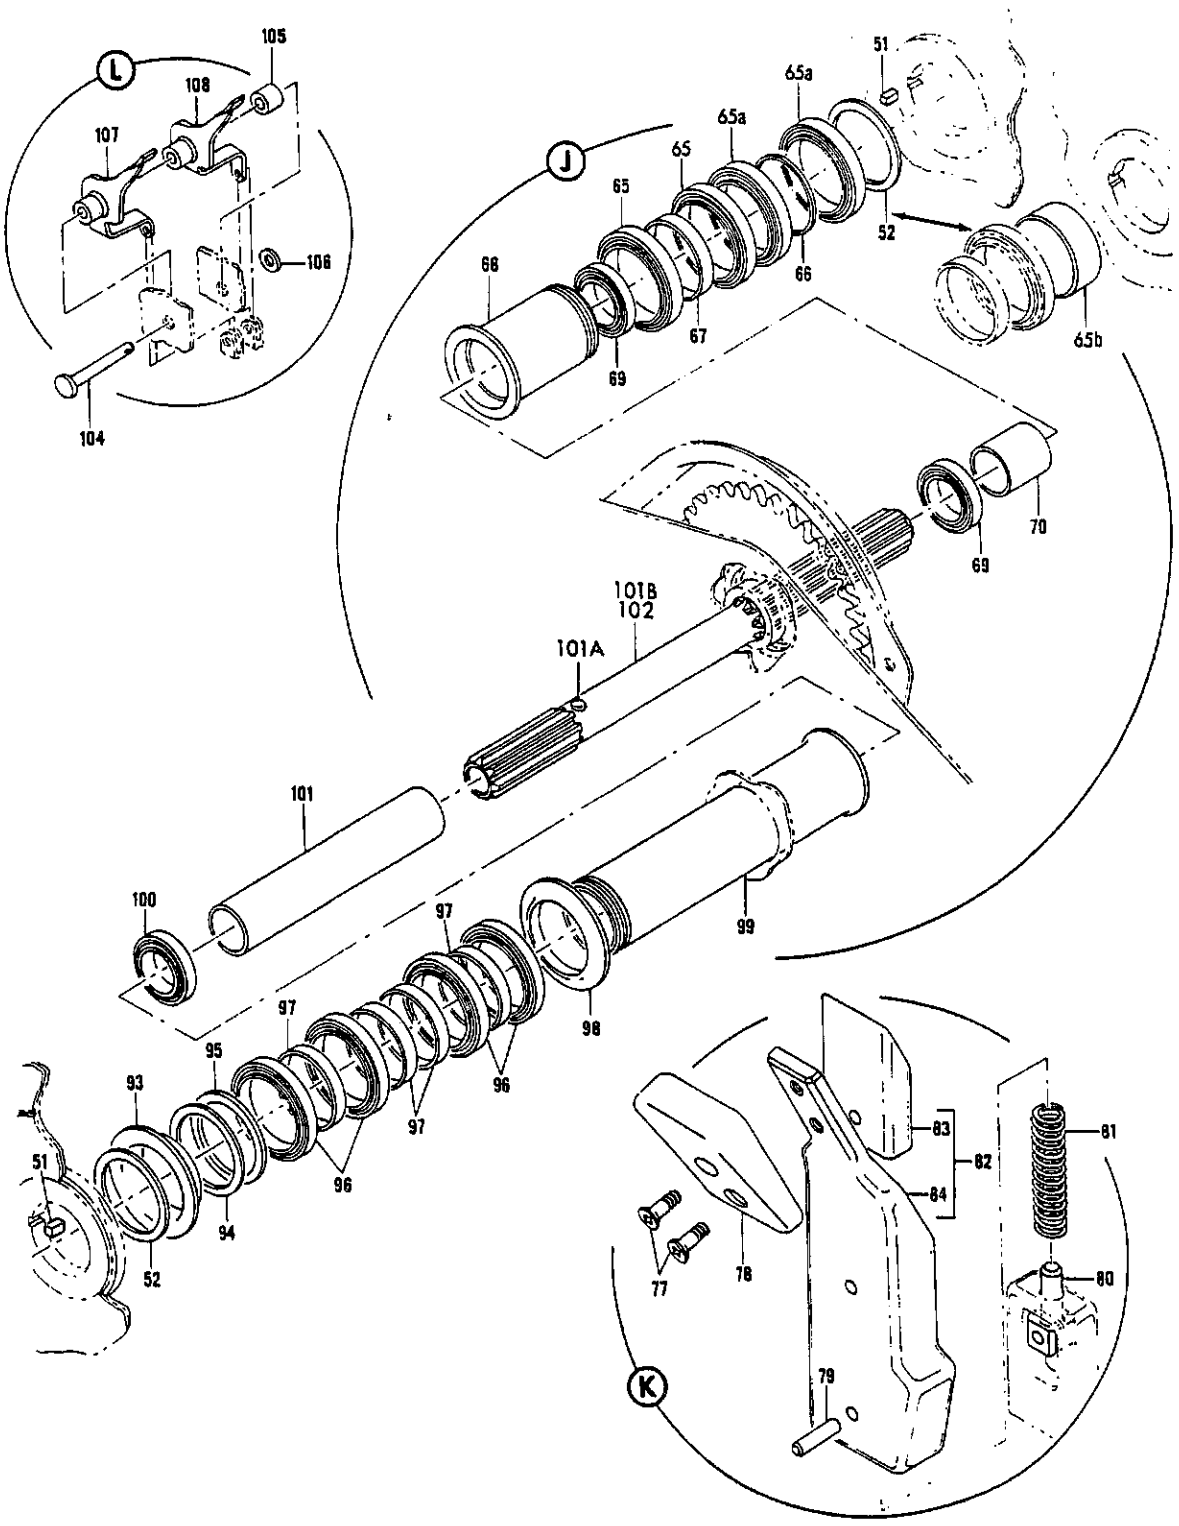


FIGURE 8. MECHANISM ASSY, CONTROL STAND UPPER (FLIGHT CONTROL ONLY) (SHEET 4)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	8	50-5560-17	MECHANISM ASSY, CONTROL STAND UPPER (FLIGHT CONTROL	0150	RF
R			ONLY) (SEE 76-3, FIG. 1, ITEM 64)		
R		50-5560-42	MECHANISM ASSY, CONTROL STAND UPPER (FLIGHT CONTROLS	5199	RF
R			ONLY) (SEE 76-3, FIG. 1, ITEM 64)		
	2	BACN10A048	. NUT		2
	3	65-24721-1	. WHEEL ASSY, CONTROL STAND STABILIZER TRIM (OPTIONAL		2
			65-2992) (SEE 27-12, FIG. 2)		
	3	65-2992	. WHEEL ASSY, CONTROL STAND STABILIZER TRIM (OPTIONAL		2
			TO 65-24721-1) (SEE 27-12, FIG. 1)		
	4	9-50172-2	. NUT, CONTROL STAND SHAFT.		2
	5	66-2605	. BOLT, STABILIZER TRIM CRANK SUPPORT		1
	25	NAS601-18	. SCREW		2
	26	NAS679A06W	. NUT		2
	27	MS25011-1	. SWITCH.		1
	28	BACA12D2	. ACTUATOR.		1
	29	NAS603-6	. SCREW		2
	30	66-2632	. SUPPORT ASSY, SPEED BRAKE SWITCH.		1
	31	BACB30LU3-62	. BOLT.		1
	32	BACB30NE3-30	. BOLT.		1
	33	AN960D10	. WASHER.		2
	34	BACN10JC3	. NUT		2
	35	63-1471	. GUARD, CONTROL STAND CABLE.		2
R	36	NAS1103-8DW	. BOLT.	0150	1
R	36	NAS1103-8D	. BOLT.	5199	1
R	37	AN960-10L	. WASHER.	0150	1
R	37	AN960D10	. WASHER.	5199	1
	38	BACN10JD103	. NUT		1
	39	6-63931-1	. JACK ASSY, STABILIZER TRIM (SEE 27-12, FIG. 3).		1
	40	MS20392-2C17	. PIN		2
R	41	AN960D10	. WASHER.	0150	2
R	41	AN960-10L	. WASHER.	5199	2
	42	BACB10A682	. BEARING		2
	43	NAS43DD3-478	. SPACER.		1
	44	50-10877	. CRANK, CONTROL STAND STABILIZER TRIM.		1
	45	NAS1103-7DW	. BOLT.		1
	46	AN960D10L	. WASHER.		1
	47	AN320-3	. NUT		1
	48	6-63610-3000	. LINK ASSY, CONTROL STAND STABILIZER TRIM.		1
	49	AN200KS3L	. . BEARING		2
	50	6-63610-3001	. . LINK, CONTROL STAND STABILIZER TRIM		1
	51	3-87075	. KEY, CONTROL STAND UPPER MECHANISM.		2
	52	3-94317	. SHIM, CONTROL STAND SHAFT LAMINATED		2
	53	50-11343-1	. INDICATOR ASSY, CONTROL STAND STABILIZER TRIM		1
	54	MS20426D6-10	. . RIVET		1
	55	BACW10Q3	. . WASHER.		1
	56	6-63610-3000	. . LINK ASSY, CONTROL STAND STABILIZER TRIM.		1
	57	BACB10AC3L	. . . BEARING		2
	58	6-63610-3001	. . . LINK, CONTROL STAND STABILIZER TRIM		1
	59	BACB10A300DD	. . BEARING		1
	60	50-11343-3	. . INDICATOR, CONTROL STAND STABILIZER TRIM.		1
	61	50-11343-2	. INDICATOR ASSY, CONTROL STAND STABILIZER TRIM		1
	62	BACB10A300DD	. . BEARING		1
	63	50-11343-4	. . INDICATOR, CONTROL STAND STABILIZER TRIM.		1
	64	69-1814-2	. HANDLE ASSY, CONTROL STAND FLAP CONTROL (SEE 27-7,		1
			FIG. 1)		
	65	BACB10CF25PP	. BEARING		2
R	65B	66-22199-1	. SPACER, CONTROL STAND UPPER MECHANISM	0150	1
	66	63-1322	. SPACER, CONTROL STAND BEARING		1
	67	6-65852-2001	. SPACER, CONTROL STAND SHAFT		1
	68	69-1977-1	. SHAFT, CONTROL STAND.		1
	69	BACB10CF14PP	. BEARING		2
	70	NAS43DD14-70	. SPACER.		1
	71	50-5560-11	. CHAIN ASSY, CONTROL STAND UPPER MECHANISM		1
M	71A	303741	. . PIN, COTTER (V72625).		2
M	71A	MS24665-1012	. . PIN		2
M	71B	C323741	. . LINK, CONNECTING (V72625)		1
	72	6-63629-2000	. SPROCKET, CONTROL STAND STABILIZER TRIM		1
	73	BACC13G469-865	. CABLE ASSY.		1
	74	BACC13G469-1037	. CABLE ASSY.		1
		AN669L4LH	. . TERMINAL.		1
		BACT14A4	. . TERMINAL.		1
	75	60-6624	. RETAINER, DRUM CABLE.		2
			(OPTIONAL 60-4827)		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
8 75	60-4827	. RETAINER, DRUM CABLE. (OPTIONAL TO 60-6624)		2
76	66-24025	. CABLE ASSY, STEEL 3/32 7X7 137.6 IN. LG		1
	AN669L3LH	. . TERMINAL.		2
	BACT14B3	. . TERMINAL.		2
77	AN509-10R7	. SCREW		2
78	6-73865-2000	. KNOB, CONTROL STAND SPEED BRAKE (OPTIONAL TO 65C14183-361		1
78	65C14183-36	. KNOB, CONTROL STAND SPEED BRAKE (OPTIONAL 6-73865-2000)		1
79	MS16562-214	. PIN		1
80	63-1327	. STOP, CONTROL LEVER		1
81	63-1406	. SPRING, CONTROL HANDLE COMPRESSION.		1
82	65-1970	. HANDLE ASSY, CONTROL STAND SPEED BRAKE.		1
83	63-1326-1	. . PLUG, CONTROL HANDLE.		1
84	65-1970-1	. . HANDLE, CONTROL STAND SPEED BRAKE		1
85	NAS1104-12	. BOLT.		1
86	NAS1104-7	. BOLT.		1
87	NAS1197-416	. WASHER.		1
89	NAS1197-416L	. WASHER.		2
90	NAS43HT4-23	. SPACER.		1
92	10-3277-1	. LEVER ASSY, SPEED BRAKE CONTROL		1
93	66-1314	. SPACER, CONTROL STAND SPECIAL		1
94	3-86451	. SHIM, CONTROL STAND SHAFT		AR
95	3-94317	. SHIM, CONTROL STAND SHAFT LAMINATED		AR
96	BACB10CF25PP	. BEARING		4
97	6-65852-2000	. SPACER, CONTROL STAND SHAFT		4
98	66-1314-1	. SPACER, CONTROL STAND SPECIAL		1
99	69-1977	. SHAFT, CONTROL STAND.		1
100	BACB10CF14PP	. BEARING		1
101	NAS43DD14-347	. SPACER.		1
102	66-1905	. SHAFT, STABILIZER WHEEL		1
103	66-14147-1	. ROD, CONTROL STAND STABILIZER TRIM TIE (OPTIONAL. 66-1904)		1
103	66-1904	. ROD, CONTROL STAND STABILIZER TRIM TIE. (OPTIONAL TO 66-14147-1)		1
104	MS24665-132	. PIN		1
105	NAS43-3-21	. SPACER.		1
106	AN960PD10L	. WASHER.		1
107	69-17095	. LEVER, MACH TRIM SWITCH		1
108	69-17095-1	. LEVER, STABILIZER TRIM SWITCH		1
109	STB130-4SHAP	. LIGHT, INDICATOR (V81590)		1
		. FOR REFERENCE TO OTHER MECHANISM DETAILS, SEE NHA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

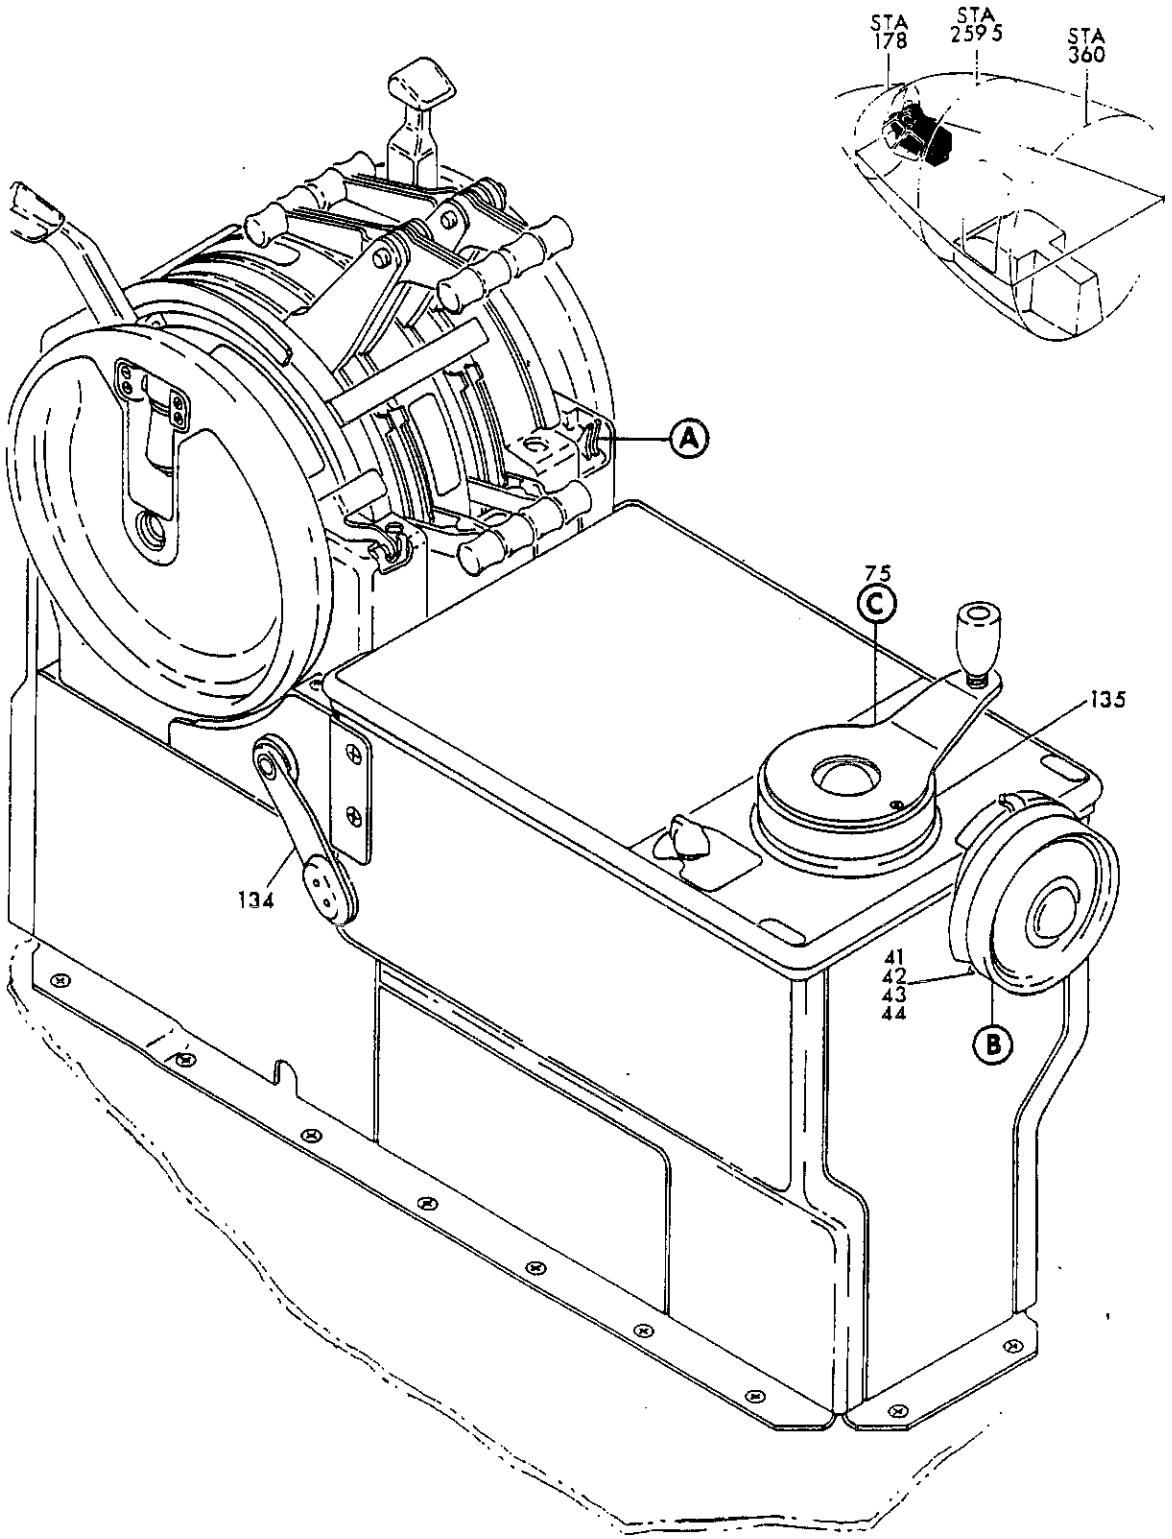


FIGURE 11. STAND ASSY, PILOT AND COPILOT CONTROL (FLIGHT CONTROL ONLY) (SHEET 1)

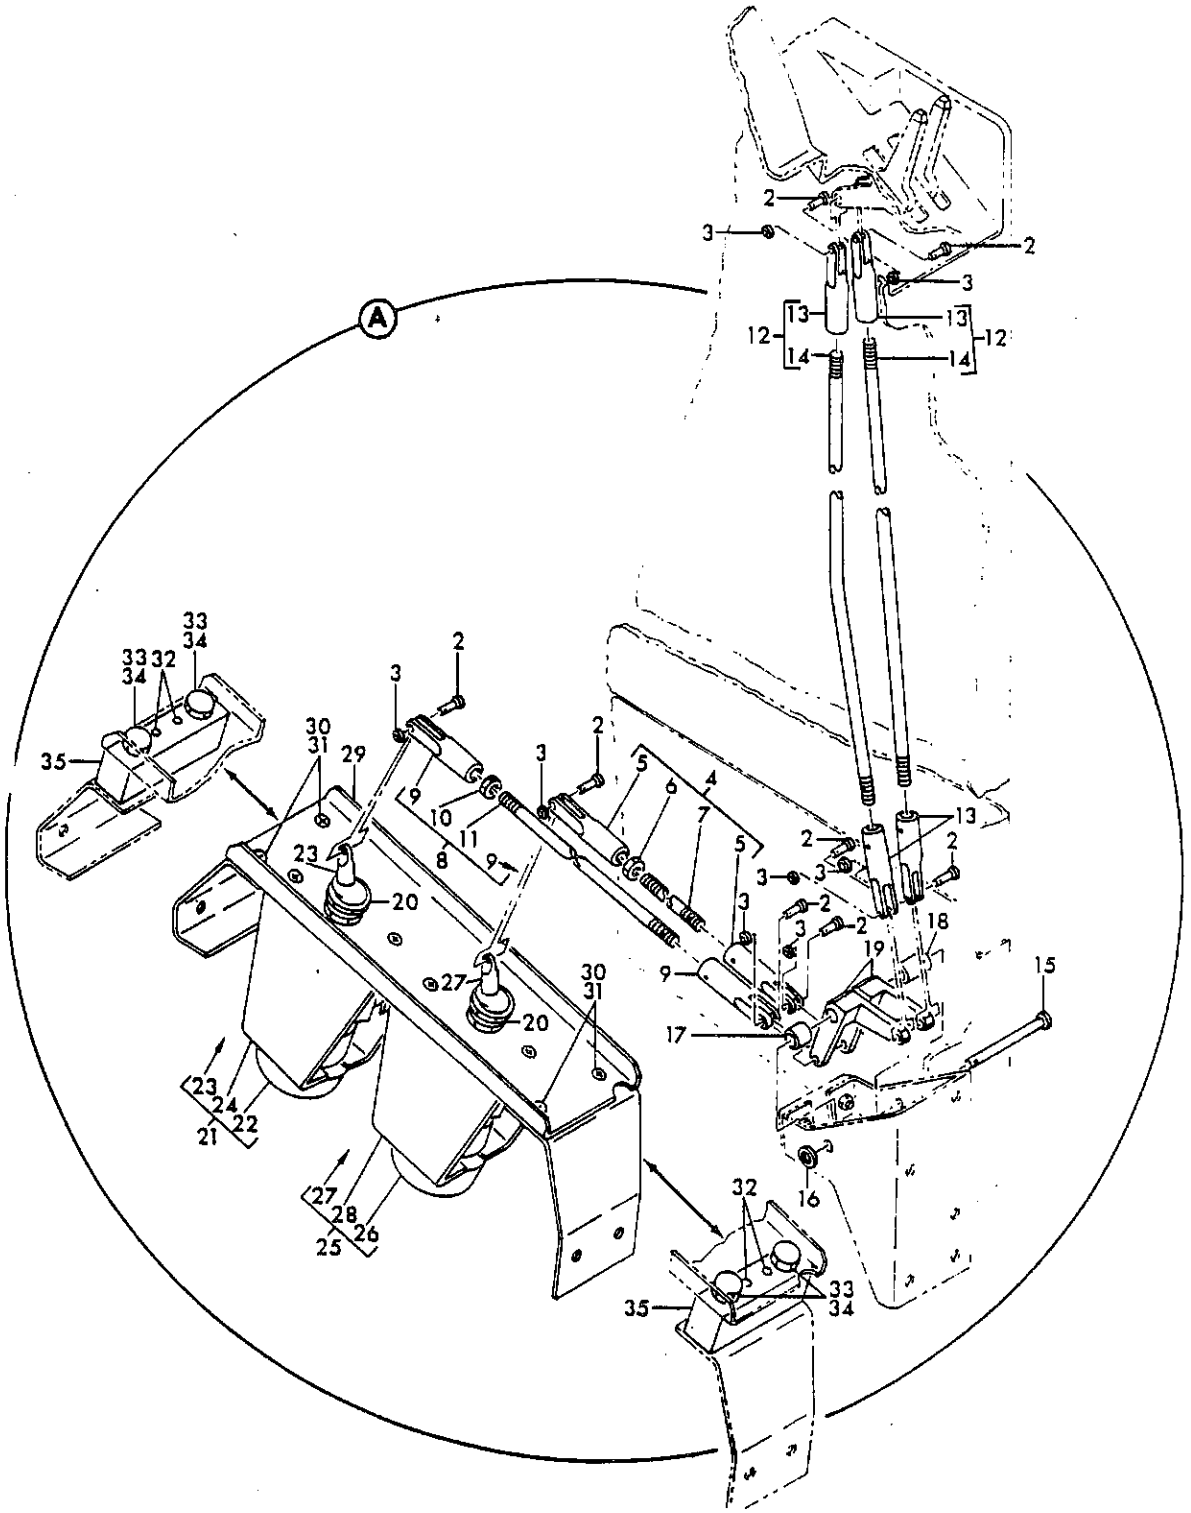


FIGURE 11. STAND ASSY, PILOT AND COPILOT CONTROL (FLIGHT CONTROL ONLY) (SHEET 2)

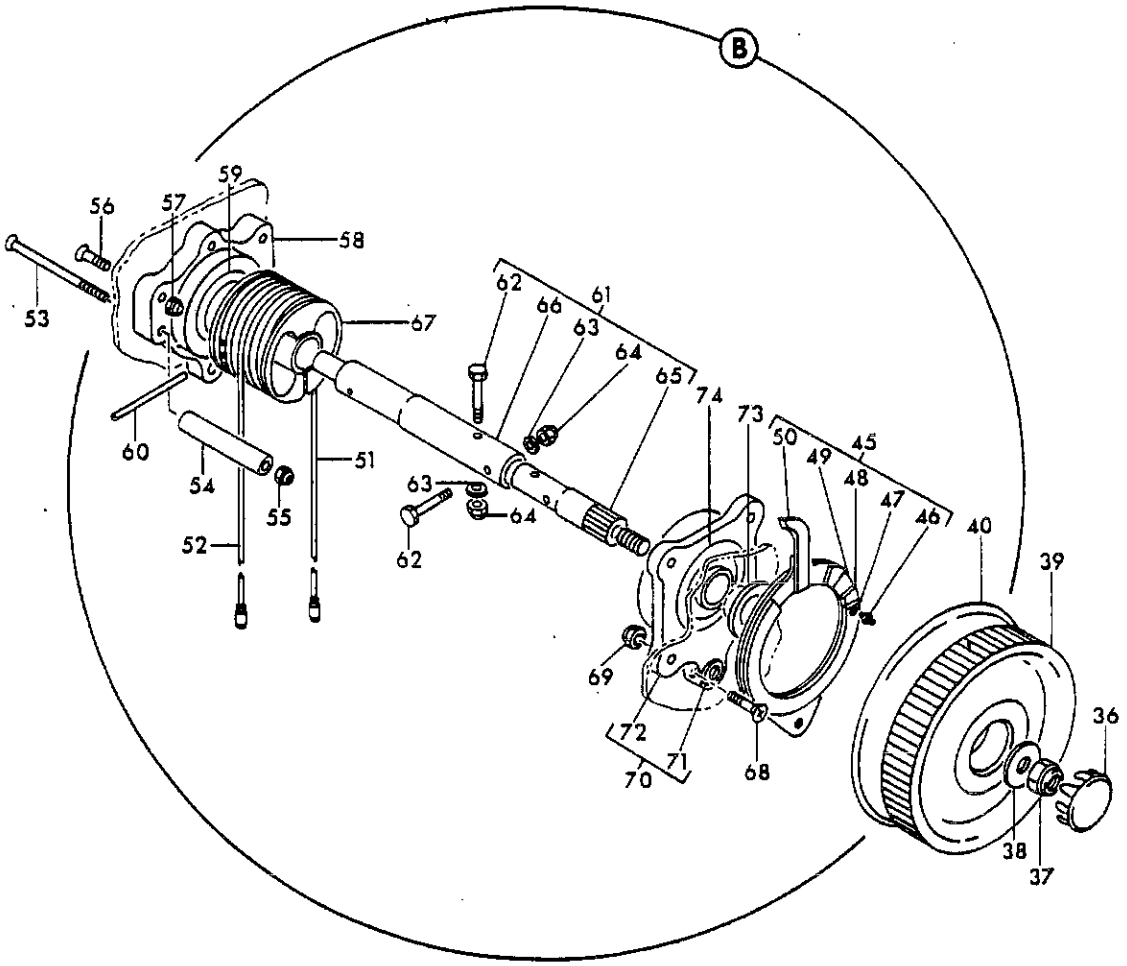


FIGURE 11. STAND ASSY, PILOT AND COPILOT CONTROL (FLIGHT CONTROL ONLY) (SHEET 3)

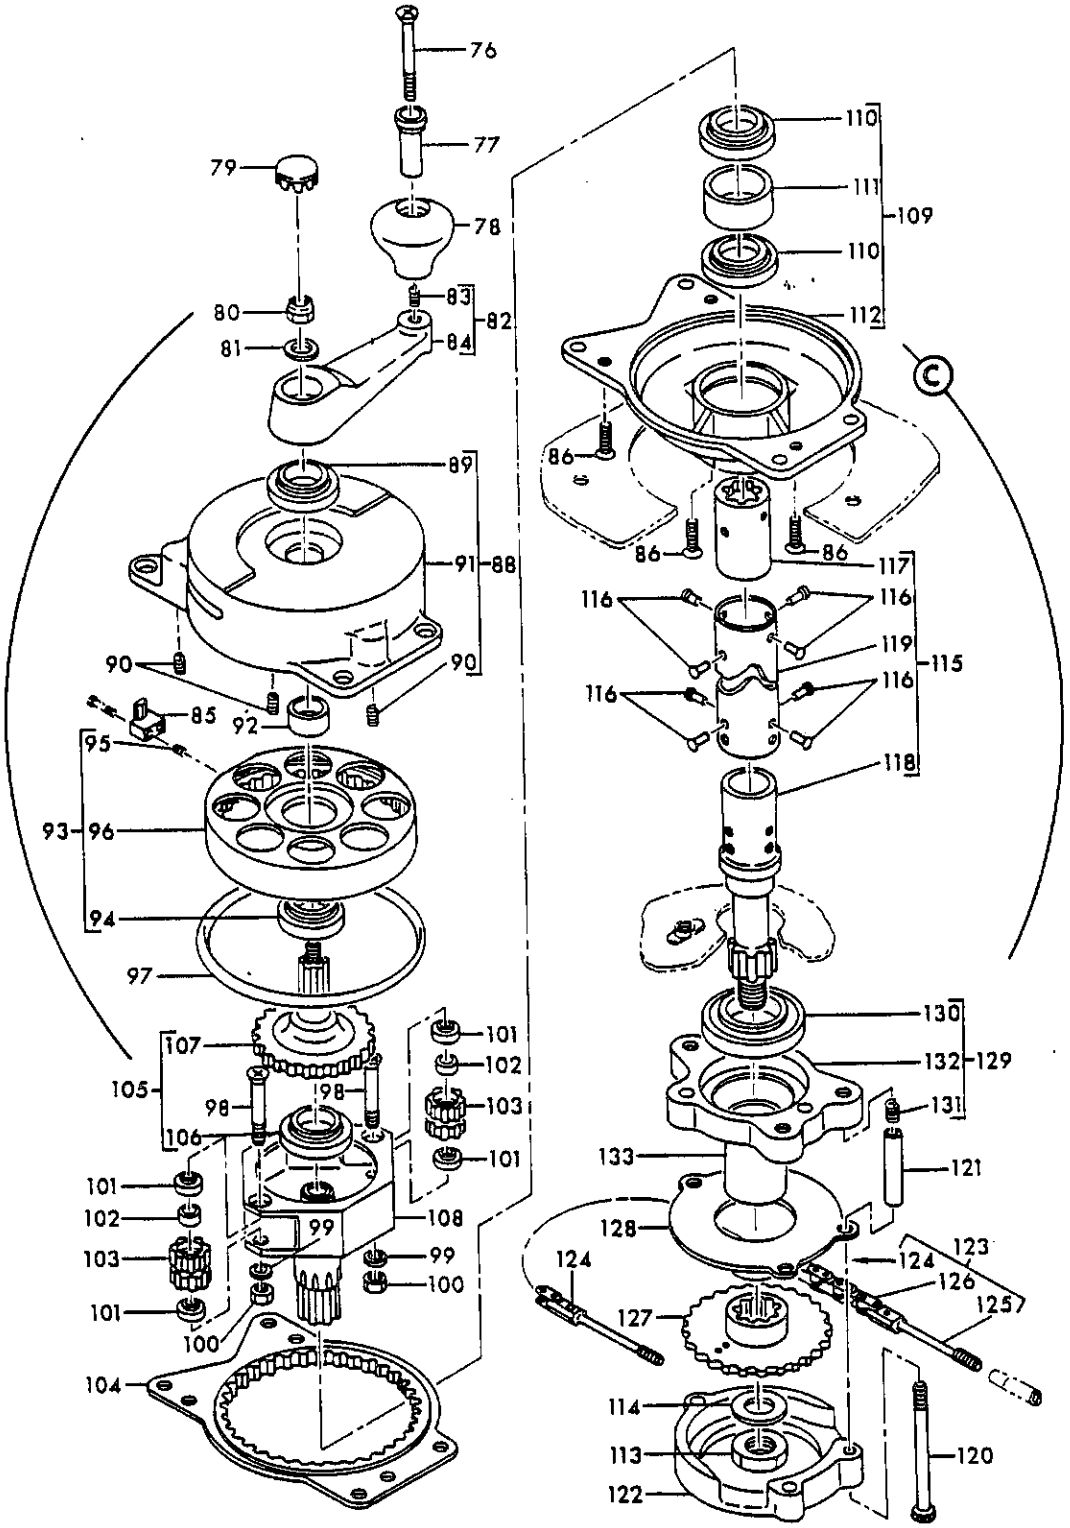


FIGURE 11. STAND ASSY, PILOT AND COPILOT CONTROL (FLIGHT CONTROL ONLY) (SHEET 4)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	11	50-5561-94	STAND ASSY, PILOT AND COPILOT CONTROL (FLIGHT CONTROL ONLY) (SEE 25-2, FIG. 15, ITEM 12)	0150	RF
R	1	10-60017	. SHAFT, STABILIZER TRIM INDICATOR DRIVE FLEX (SAME AS 124111-020-24 (V19527)) (OPTIONAL 10-60017-1)	0150	1
R	1	124111-020-24	. SHAFT, STABILIZER TRIM INDICATOR FLEX (SAME AS BAC SPEC DWG 10-60017) (V19527) (OPTIONAL 140357-1 (V15285))	0150	1
R	1	10-60017-1	. SHAFT, STABILIZER TRIM INDICATOR DRIVE FLEX (SAME AS 140357-1 (V15285)) (OPTIONAL TO 10-60017)	0150	1
R	1	140357-1	. SHAFT, STABILIZER TRIM INDICATOR FLEX (SAME AS BAC SPEC DWG 10-60017-1) (V15285) (OPTIONAL TO 124111-020-24 (V19527))	0150	1
R	2	66-11092	. PIN, STABILIZER TRIM AND MACH TRIM FLAT HEAD SPECIAL	0150	8
R	3	AN960C3L	. WASHER	0150	8
R	4	69-9126	. ROD ASSY, STABILIZER AND MACH TRIM SWITCH	0150	1
R	5	66-11035	. . END, ACTUATOR	0150	2
R	6	AN345-10	. . NUT	0150	1
R	7	69-9126-3	. . ROD	0150	1
R	8	69-9126-1	. ROD ASSY, STABILIZER AND MACH TRIM SWITCH	0150	1
R	9	66-11035	. . END, ACTUATOR	0150	2
R	10	AN345-10	. . NUT	0150	1
R	11	69-9126-4	. . ROD	0150	1
R	12	69-9126-2	. ROD ASSY, STABILIZER AND MACH TRIM SWITCH	0150	2
R	13	66-11035	. . END, ACTUATOR	0150	2
R	14	69-9126-5	. . ROD	0150	1
R	15	MS20392-2C45	. PIN	0150	1
R	16	AN960PD10L	. WASHER	0150	1
R	17	NAS43-3-10	. SPACER	0150	1
R	18	NAS43-3-16	. SPACER	0150	1
R	19	66-11021	. BELLCRANK, STABILIZER AND MACH TRIM SWITCH ACTUATOR	0150	2
R	20	MS24371-1	. BOOT	0150	2
R	21	65-28070-4	. SWITCH ASSY, STABILIZER TRIM CUTOUT	0150	1
			ATTACHING PARTS		
R		NAS603-6	. SCREW	0150	2
			-------*-------		
R	22	PT02E20-16P	. . CONNECTOR, (V77820) (OPTIONAL AND FOR REPLACEMENT ORDER PT00E20-16P (V77820))	0150	1
R	22	PT00E20-16P	. . CONNECTOR, (V77820) (OPTIONAL TO AND REPLACEMENT FOR PT02E20-16P (V77820))	0150	1
R	23	65-28070-3	. . SWITCH	0150	1
R	24	66-11012-4	. . BRACKET ASSY, SUPPORT	0150	1
R	25	65-28070-1	. SWITCH ASSY, MACH TRIM CUTOUT	0150	1
			ATTACHING PARTS		
R		NAS603-6	. SCREW	0150	2
			-------*-------		
R	26	PT02E18-32P	. . CONNECTOR, (V77820)	0150	1
R	27	65-28070-3	. . SWITCH	0150	1
R	28	66-11012-1	. . BRACKET ASSY, SUPPORT	0150	1
R	29	69-17094-6	. BRACKET ASSY, STABILIZER AND MACH TRIM SUPPORT	0150	1
			ATTACHING PARTS		
R	30	NAS603-6	. SCREW	0150	4
			-------*-------		
R	36	BACP20B51	. PLUG	0150	1
R	37	NAS679A6	. NUT	0150	1
R	38	MS15795-213	. WASHER	0150	1
R	39	3-14308-1	. WHEEL, TAB	0150	1
R	40	3-37948-2	. DISK, ACTUATING	0150	1
R	41	AN21-16	. BOLT	0150	1
R	42	AN960-6	. WASHER	0150	1
R	43	AN320-1	. NUT	0150	1
R	44	3-87065	. BUSHING, TRIM INDICATOR	0150	1
R	45	66-2657-1	. INDICATOR ASSY, AILERON TRIM	0150	1
R	46	3-86447	. . RIVET, FOLLOWER	0150	1
R	47	3-86443-1	. . RIVET, RUBBER FILLER	0150	1
R	48	6-63997-2001	. . INDICATOR	0150	1
R	49	3-93980	. . RING, FILLER	0150	1
R	50	63-1679-1	. . INDICATOR	0150	1
R	51	BACC13G320-1142	. CABLE ASSY	0150	1
R	52	BACC13G319-1154	. CABLE ASSY	0150	1
R		AN669L3RH	. . TERMINAL, (USED ON BACC13G320-1142)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	11	AN669L3LH	. . TERMINAL, (USED ON BACC13G319-1154)	0150	1
R		BACT14A3	. . TERMINAL.	0150	1
R	53	NAS517-3-39	. SCREW	0150	3
R	54	NAS42DD6-143	. SPACER.	0150	3
R	55	NAS679A3W	. NUT	0150	3
R	56	NAS517-3-5	. SCREW	0150	3
R	57	NAS679A3W	. NUT	0150	3
R	58	65-2963	. HOUSING, AILERON TRIM FORWARD BEARING	0150	1
R	59	AN200KS8	. BEARING	0150	1
R	60	3-85994	. PIN, RUDDER TRIM DRUM	0150	1
R	61	66-2592	. SHAFT ASSY, TAB	0150	1
R	62	NAS464P3A12	. . BOLT.	0150	2
R	63	AN960-10L	. . WASHER.	0150	2
R	64	BACN10BY53	. . NUT	0150	2
R	65	66-2575	. . TERMINAL.	0150	1
R	66	66-2574	. . SHAFT	0150	1
R	67	5-89328	. DRUM, AILERON TRIM.	0150	1
R	68	NAS517-3-5	. SCREW	0150	4
R	69	NAS679A3W	. NUT	0150	4
R	70	65-2964	. HOUSING ASSY, AILERON TRIM AFT BEARING.	0150	1
R	71	BACB28B4-515P	. . BUSHING	0150	1
R	72	65-2964-1	. . HOUSING	0150	1
R	73	50-5561-5	. WASHER, LAMINATED	0150	1
R	74	AN200KS10	. BEARING	0150	1
R	75	65-11875	. GEAR BOX ASSY, RUDDER TRIM.	0150	1
			ATTACHING PARTS		
R		NAS517-3-9	. SCREW	0150	4
			-------*-------		
R	76	NAS517-4-21	. . SCREW	0150	1
R	77	66-10218	. . SPACER.	0150	1
R	78	66-37096	. . KNOB.	0150	1
R	79	BACP20B21B	. . PLUG.	0150	1
R			(OPTIONAL BACP20B21)		
R	79	BACP20B21	. . PLUG.	0150	1
R			(OPTIONAL TO BACP20B21B)		
R	80	MS20364-720	. . NUT	0150	1
R			(OPTIONAL NAS679A7)		
R	80	NAS679A7	. . NUT	0150	1
R			(OPTIONAL TO MS20364-720)		
R	81	AN960-716	. . WASHER.	0150	1
R	82	65-11844	. . HANDLE ASSY	0150	1
R	83	BACS13W4CN4	. . . SLEEVE.	0150	1
R	84	65-11844-1	. . . HANDLE.	0150	1
R	85	66-10606	. . INDICATOR	0150	1
			ATTACHING PARTS		
R		NAS514P440-12B	. . SCREW	0150	2
			-------*-------		
R	86	NAS517-3-1	. . SCREW	0150	3
R	88	65-11848	. . HOUSING ASSY, UPPER	0150	1
R	89	BACB10A27DD	. . . BEARING	0150	1
R	90	BACS13P3CN2	. . . SLEEVE.	0150	3
R	91	65-11848-1	. . . HOUSING	0150	1
R	92	NAS43DD10-25	. . SPACER.	0150	1
R	93	69-10826-2	. . GEAR ASSY, INDICATOR.	0150	1
R	94	BACB10A27DD	. . . BEARING	0150	1
R	95	1185-04CNX168	. . . SLEEVE, STEEL WIRE (V91767)	0150	2
R	96	69-10826-3	. . . GEAR.	0150	1
R	97	MS29513-241	. . PACKING	0150	1
R	98	NAS333CP13	. . BOLT.	0150	2
R	99	AN960D10	. . WASHER.	0150	2
R	100	AN320-3	. . NUT	0150	2
R	101	BACB10A122	. . BEARING	0150	4
R	102	NAS43DD3-19	. . SPACER.	0150	2
R	103	69-10841	. . GEAR, PLANET.	0150	2
R	104	69-10842	. . GEAR, RING.	0150	1
R	105	69-11231	. . GEAR ASSY, SUN.	0150	1
R	106	BACB10A27DD	. . . BEARING	0150	1
R	107	69-11231-1	. . . GEAR.	0150	1
R	108	69-10817	. . CAGE.	0150	1
R	109	65-11839	. . HOUSING ASSY, LOWER	0150	1
R	110	BACB10A28DD	. . . BEARING	0150	2
R	111	66-10627	. . . SPACER.	0150	1
R	112	65-11839-1	. . . HOUSING	0150	1
R	113	NAS509-9	. NUT	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	11 114	AN960C916	. WASHER.	0150	1
R	115	69-10926	. SHAFT ASSY, RUDDER TRIM	0150	1
R	116	AN470	. . RIVET	0150	8
R	117	69-10923	. . FITTING, UPPER.	0150	1
R	118	69-10918	. . FITTING, LOWER.	0150	1
R	119	66-10635	. . SHAFT	0150	1
R	120	AN3H26A	. BOLT.	0150	3
R	121	NAS42DD6-110	. SPACER.	0150	3
R	122	69-10924	. GUARD, RUDDER TRIM SPROCKET	0150	1
R	123	69-10931-4	. CHAIN ASSY, RUDDER TRIM	0150	1
R	124	69-10931-1	. . TERMINAL.	0150	1
R	125	69-10931-2	. . TERMINAL.	0150	1
R	126	69-10931-5	. . CHAIN	0150	1
R	127	69-10919	. SPROCKET, RUDDER TRIM	0150	1
R	128	69-10925	. SHIELD, RUDDER TRIM SPROCKET.	0150	1
R	129	65-11937	. HOUSING ASSY, RUDDER TRIM BEARING	0150	1
			ATTACHING PARTS		
R		NAS623-3-10W	. SCREW	0150	3
R			(OPTIONAL AN3-10A)		
R		AN3-10A	. SCREW	0150	3
R			(OPTIONAL TO NAS623-3-10W)		
			-------*-------		
R	130	BACB10A371	. . BEARING	0150	1
R	131	BACS13P3CN3	. . SLEEVE.	0150	3
R	132	65-11937-1	. . HOUSING	0150	1
R	133	NAS43DD16-97	. SPACER.	0150	1
R			. FOR REFERENCE TO OTHER STAND DETAILS, SEE NHA	0150	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

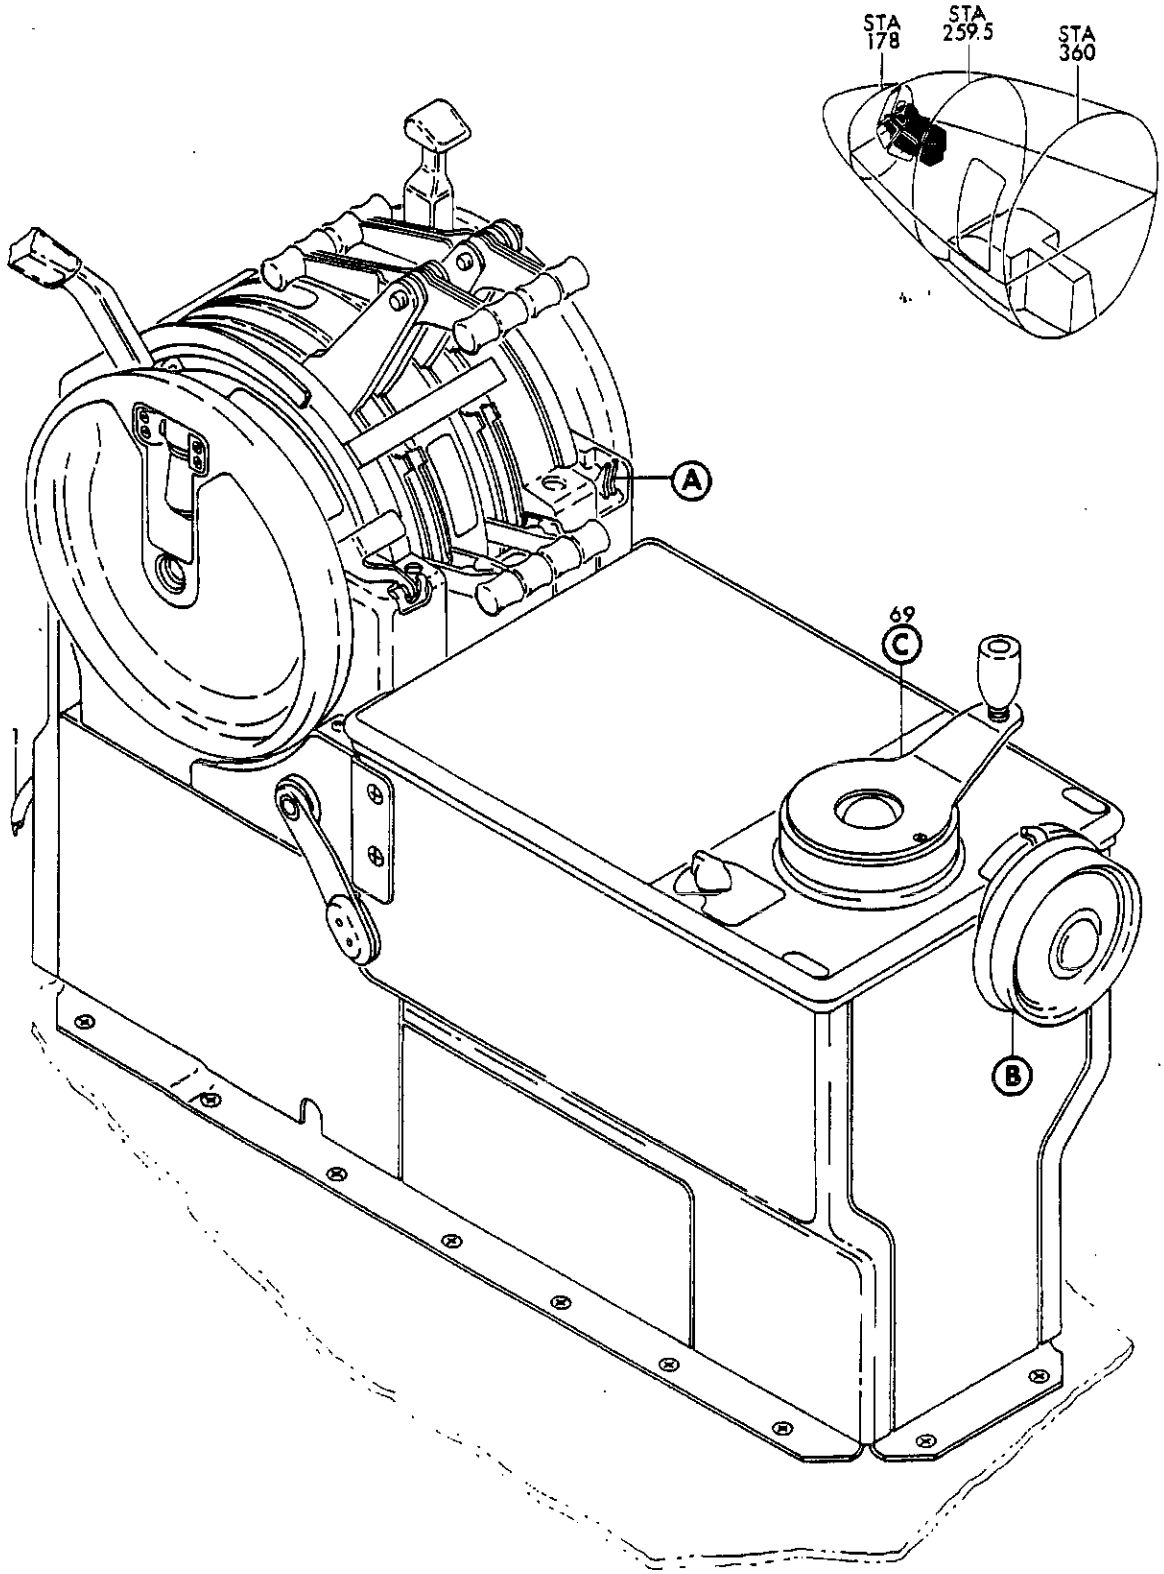


FIGURE 13. STAND ASSY, PILOT AND COPILOT CONTROL (FLIGHT CONTROL ONLY) (SHEET 1)

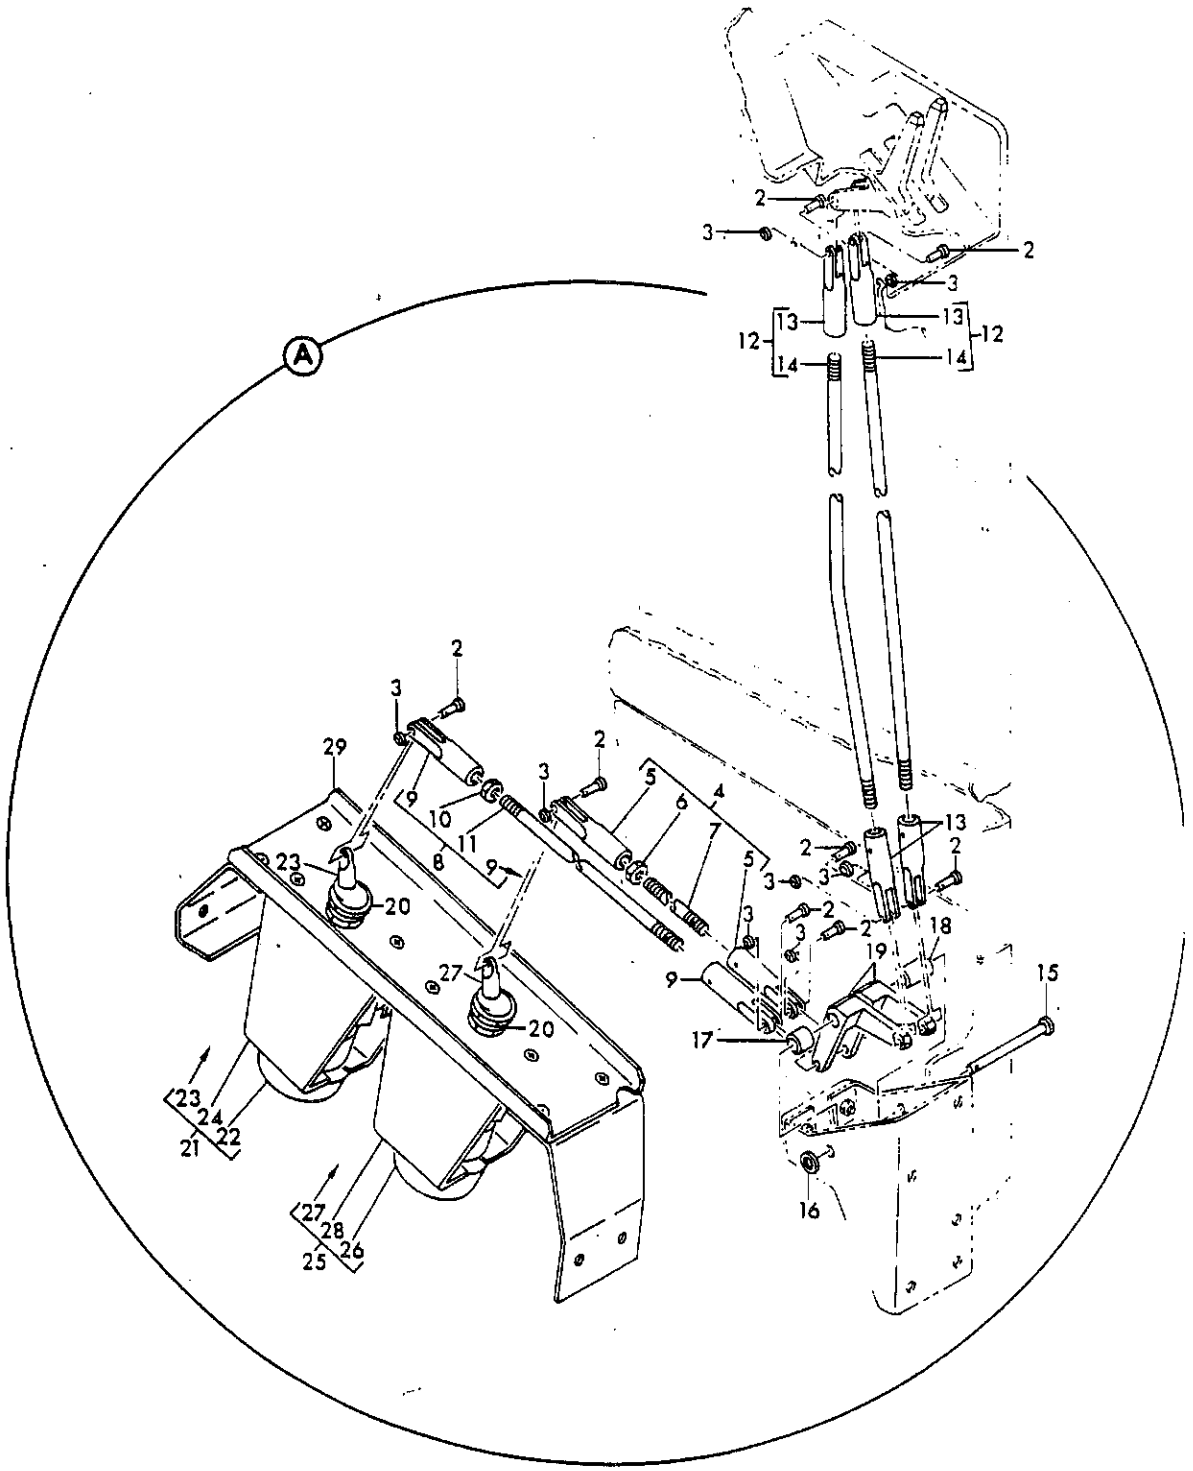


FIGURE 13. STAND ASSY, PILOT AND COPILOT CONTROL (FLIGHT CONTROL ONLY) (SHEET 2)

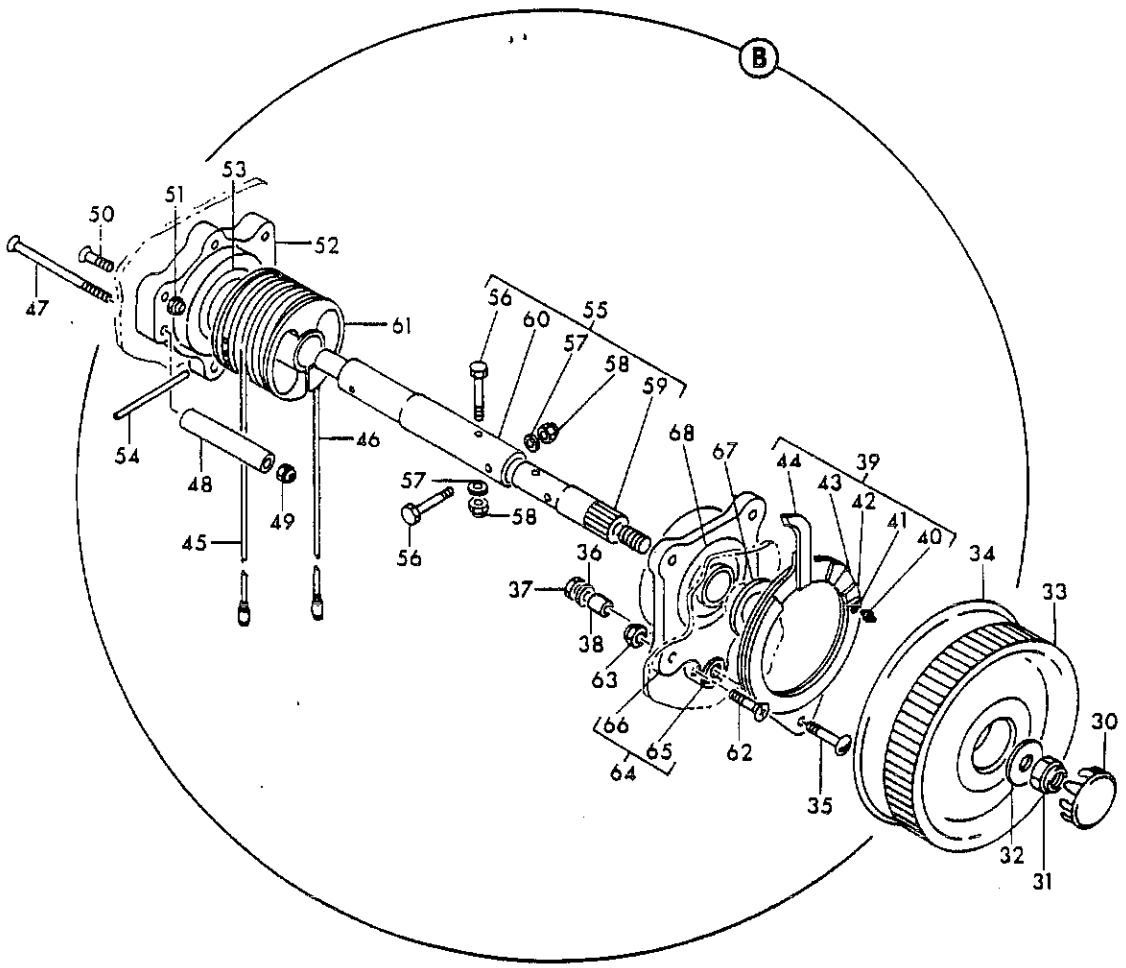


FIGURE 13. STAND ASSY, PILOT AND COPILOT CONTROL (FLIGHT CONTROL ONLY) (SHEET 3)

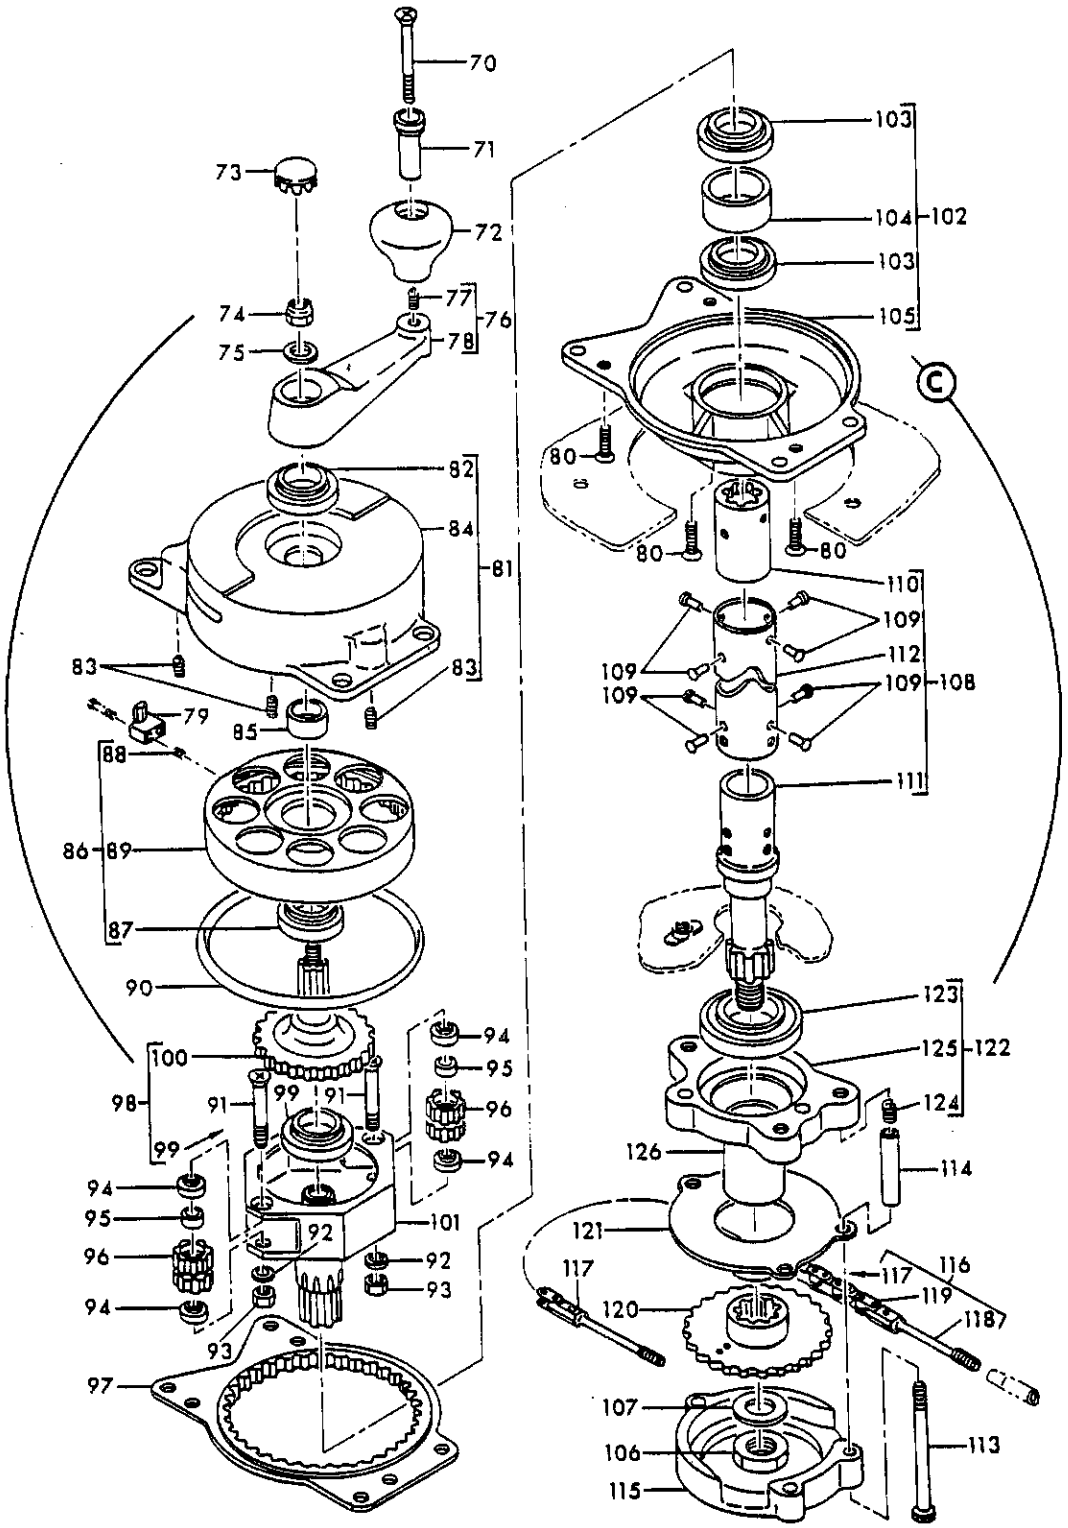


FIGURE 13. STAND ASSY, PILOT AND COPILOT CONTROL (FLIGHT CONTROL ONLY) (SHEET 4)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
13	50-5561-149	STAND ASSY, PILOT AND COPILOT CONTROL (FLIGHT CONTROL ONLY) (SEE 25-2, FIG. 15, ITEM 12)	5199	RF
1	10-60017	. SHAFT, STABILIZER TRIM INDICATOR DRIVE FLEX (SAME AS 124111-020-24 (V19527)) (OPTIONAL 10-60017-1)	5199	1
1	124111-020-24	. SHAFT, STABILIZER TRIM INDICATOR FLEX (SAME AS BAC SPEC DWG 10-60017) (V19527) (OPTIONAL 140357-1 (V15285))	5199	1
1	10-60017-1	. SHAFT, STABILIZER TRIM INDICATOR DRIVE FLEX (SAME AS 140357-1 (V15285)) (OPTIONAL TO 10-60017)	5199	1
1	140357-1	. SHAFT, STABILIZER TRIM INDICATOR FLEX (SAME AS BAC SPEC DWG 10-60017-1) (V15285) (OPTIONAL TO 124111-020-24 (V19527))	5199	1
2	66-11092	. PIN, STABILIZER AND MACH TRIM HEAD SPECIAL	5199	8
3	AN960C3L	. WASHER	5199	8
4	69-9126	. ROD ASSY, STABILIZER AND MACH TRIM SWITCH	5199	1
5	66-11035	. . END, ACTUATOR	5199	2
6	AN345-10	. . NUT	5199	1
7	69-9126-3	. . ROD	5199	1
8	69-9126-1	. ROD ASSY, STABILIZER AND MACH TRIM SWITCH	5199	1
9	66-11035	. . END, ACTUATOR	5199	2
10	AN345-10	. . NUT	5199	1
11	69-9126-4	. . ROD	5199	1
12	69-9126-2	. ROD ASSY, STABILIZER AND MACH TRIM SWITCH	5199	2
13	66-11035	. . END, ACTUATOR	5199	2
14	69-9126-5	. . ROD	5199	1
15	MS20392-2-45	. PIN	5199	1
16	AN960PD10L	. WASHER	5199	1
17	NAS43-3-10	. SPACER	5199	1
18	NAS43-3-16	. SPACER	5199	1
19	66-11021	. BELLCRANK, STABILIZER AND MACH TRIM SWITCH ACTUATOR	5199	2
20	MS24371-1	. BOOT	5199	2
21	65-28070-4	. SWITCH ASSY, STABILIZER TRIM CUTOUT	5199	1
		ATTACHING PARTS		
	NAS603-6	. SCREW	5199	2
		-------*-------		
22	PT02E20-16P	. . CONNECTOR, (V77820) (OPTIONAL AND FOR REPLACEMENT ORDER PT00E20-16P (V77820)	5199	1
22	PT00E20-16P	. . CONNECTOR, (V77820) (OPTIONAL TO AND REPLACEMENT FOR PT02E20-16P (V77820)	5199	1
23	65-28070-3	. . SWITCH	5199	1
24	66-11012-4	. . BRACKET ASSY, SUPPORT	5199	1
25	65-28070-1	. SWITCH ASSY, MACH TRIM CUTOUT	5199	1
		ATTACHING PARTS		
	NAS603-6	. SCREW	5199	2
		-------*-------		
26	PT02E18-32P	. . CONNECTOR, (V77820)	5199	1
27	65-28070-3	. . SWITCH	5199	1
28	66-11012-1	. . BRACKET ASSY, SUPPORT	5199	1
29	69-17094-6	. BRACKET ASSY, STABILIZER AND MACH TRIM SWITCH SUPPORT	5199	1
		ATTACHING PARTS		
	NAS603-6	. SCREW	5199	4
		-------*-------		
30	BACP20B51	. PLUG	5199	1
31	NAS679A6	. NUT	5199	1
32	MS15795-213	. WASHER	5199	1
33	3-14308-1	. WHEEL, TAB	5199	1
34	3-37948-2	. DISK, ACTUATING	5199	1
35	AN21-16	. BOLT	5199	1
36	AN960-6	. WASHER	5199	1
37	AN320-1	. NUT	5199	1
38	3-87065	. BUSHING, TRIM INDICATOR	5199	1
39	66-2657-1	. INDICATOR ASSY, AILERON TRIM	5199	1
40	3-86447	. . RIVET, FOLLOWER	5199	1
41	3-86443-1	. . RIVET, RUBBER FILLER	5199	1
42	6-63997-2001	. . INDICATOR	5199	1
43	3-93980	. . RING, FILLER	5199	1
44	63-1679-1	. . INDICATOR	5199	1
45	BACC13G320-1142	. CABLE ASSY	5199	1
46	BACC13G319-1154	. CABLE ASSY	5199	1
	AN669L3RH	. . TERMINAL, (USED ON BACC13G320-1142)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM	EFF TO	UNITS PER ASSY
13	AN669L3LH	. . TERMINAL, (USED ON BACC13G319-1154)	5199		1
	BACT14A3	. . TERMINAL.	5199		1
47	NAS517-3-39	. SCREW	5199		3
48	NAS42DD6-143	. SPACER.	5199		3
49	NAS679A3W	. NUT	5199		3
50	NAS517-3-5	. SCREW	5199		3
51	NAS679A3W	. NUT	5199		3
52	65-2963-3	. HOUSING, AILERON TRIM FORWARD BEARING	5199		1
53	AN200KS8	. BEARING	5199		1
54	3-85994	. PIN, RUDDER TRIM DRUM	5199		1
55	66-2592	. SHAFT ASSY, TAB	5199		1
56	NAS464P3A12	. . BOLT.	5199		2
57	AN960-10L	. . WASHER.	5199		2
58	BACN10BY53	. . NUT	5199		2
59	66-2575	. . TERMINAL.	5199		1
60	66-2574	. . SHAFT	5199		1
61	5-89328	. DRUM, AILERON TRIM.	5199		1
62	NAS517-3-5	. SCREW	5199		4
63	NAS679A3W	. NUT	5199		4
64	65-2964-3	. HOUSING ASSY, AILERON TRIM AFT BEARING.	5199		1
65	BACB28B4-515P	. . BUSHING	5199		1
66	65-2964-4	. . HOUSING, (USED ON 65-2964-3).	5199		1
67	50-5561-5	. WASHER, LAMINATED	5199		1
68	AN200KS10	. BEARING	5199		1
69	65-11875	. GEAR BOX ASSY, RUDDER TRIM.	5199		1
		ATTACHING PARTS			
	NAS517-3-9	. SCREW	5199		4
		-------*-------			
70	NAS517-4-21	. . SCREW	5199		1
71	66-10218	. . SPACER.	5199		1
72	66-37096	. . KNOB.	5199		1
73	BACP20B21B	. . PLUG.	5199		1
		(OPTIONAL BACP20B21)			
73	BACP20B21	. . PLUG.	5199		1
		(OPTIONAL TO BACP20B21B)			
74	MS20364-720	. . NUT	5199		1
		(OPTIONAL NAS679A7)			
74	NAS679A7	. . NUT	5199		1
		(OPTIONAL TO MS20364-720)			
75	AN960-716	. . WASHER.	5199		1
76	65-11844	. . HANDLE ASSY	5199		1
77	BACS13W4CN4	. . . SLEEVE.	5199		1
78	65-11844-1	. . . HANDLE.	5199		1
79	66-10606	. . INDICATOR	5199		1
		ATTACHING PARTS			
	NAS514P440-12B	. . SCREW	5199		2
		-------*-------			
80	NAS517-3-1	. . SCREW	5199		3
81	65-11848	. . HOUSING ASSY, UPPER	5199		1
82	BACB10A27DD	. . . BEARING	5199		1
83	BACS13P3CN2	. . . SLEEVE.	5199		3
84	65-11848-1	. . . HOUSING	5199		1
85	NAS43DD10-25	. . SPACER.	5199		1
86	69-10826-2	. . GEAR ASSY, INDICATOR.	5199		1
87	BACB10A27DD	. . . BEARING	5199		1
88	1185-04CNX168	. . . SLEEVE, STEEL WIRE (V91767)	5199		2
89	69-10826-3	. . . GEAR.	5199		1
90	MS29513-241	. . PACKING	5199		1
91	NAS333CP13	. . BOLT.	5199		2
92	AN960D10	. . WASHER.	5199		2
93	AN320-3	. . NUT	5199		2
94	BACB10A122	. . BEARING	5199		4
95	NAS43DD3-19	. . SPACER.	5199		2
96	69-10841	. . GEAR, PLANET.	5199		2
97	69-10842	. . GEAR, RING.	5199		1
98	69-11231	. . GEAR ASSY, SUN.	5199		1
99	BACB10A27DD	. . . BEARING	5199		1
100	69-11231-1	. . . GEAR.	5199		1
101	69-10817	. . CAGE.	5199		1
102	65-11839	. . HOUSING ASSY, LOWER	5199		1
103	BACB10A28DD	. . . BEARING	5199		2
104	66-10627	. . . SPACER.	5199		1
105	65-11839-1	. . . HOUSING	5199		1
106	NAS509-9	. NUT	5199		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
13 107	AN960C916	. WASHER.	5199	1
108	69-10926	. SHAFT ASSY, RUDDER TRIM	5199	1
109	AN470	. . RIVET	5199	8
110	69-10923	. . FITTING, UPPER.	5199	1
111	69-10918	. . FITTING, LOWER.	5199	1
112	66-10635	. . SHAFT	5199	1
113	AN3H26A	. BOLT.	5199	3
114	NAS42DD6-110	. SPACER.	5199	3
115	69-10924	. GUARD, RUDDER TRIM SPROCKET	5199	1
116	69-10931-4	. CHAIN ASSY, RUDDER TRIM	5199	1
117	69-10931-1	. . TERMINAL.	5199	1
118	69-10931-2	. . TERMINAL.	5199	1
119	69-10931-5	. . CHAIN	5199	1
120	69-10919	. SPROCKET, RUDDER TRIM	5199	1
121	69-10925	. SHIELD, RUDDER TRIM SPROCKET.	5199	1
122	65-11937-5	. HOUSING ASSY, RUDDER TRIM BEARING	5199	1
		ATTACHING PARTS		
	NAS623-3-10W	. SCREW	5199	3
		(OPTIONAL AN3-10A)		
	AN3-10A	. SCREW	5199	3
		(OPTIONAL TO NAS623-3-10W)		
		-------*-------		
123	BACB10A371	. . BEARING	5199	1
124	MS21209F1-25	. . SLEEVE, (USED ON 65-11937-5).	5199	3
125	65-11937-6	. . HOUSING, (USED ON 65-11937-5)	5199	1
126	NAS43DD16-97	. SPACER.	5199	1
		. FOR REFERENCE TO OTHER STAND DETAILS, SEE NHA	5199	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING Intercontinental 707

PARTS CATALOG

SECTION 02

AILERONS

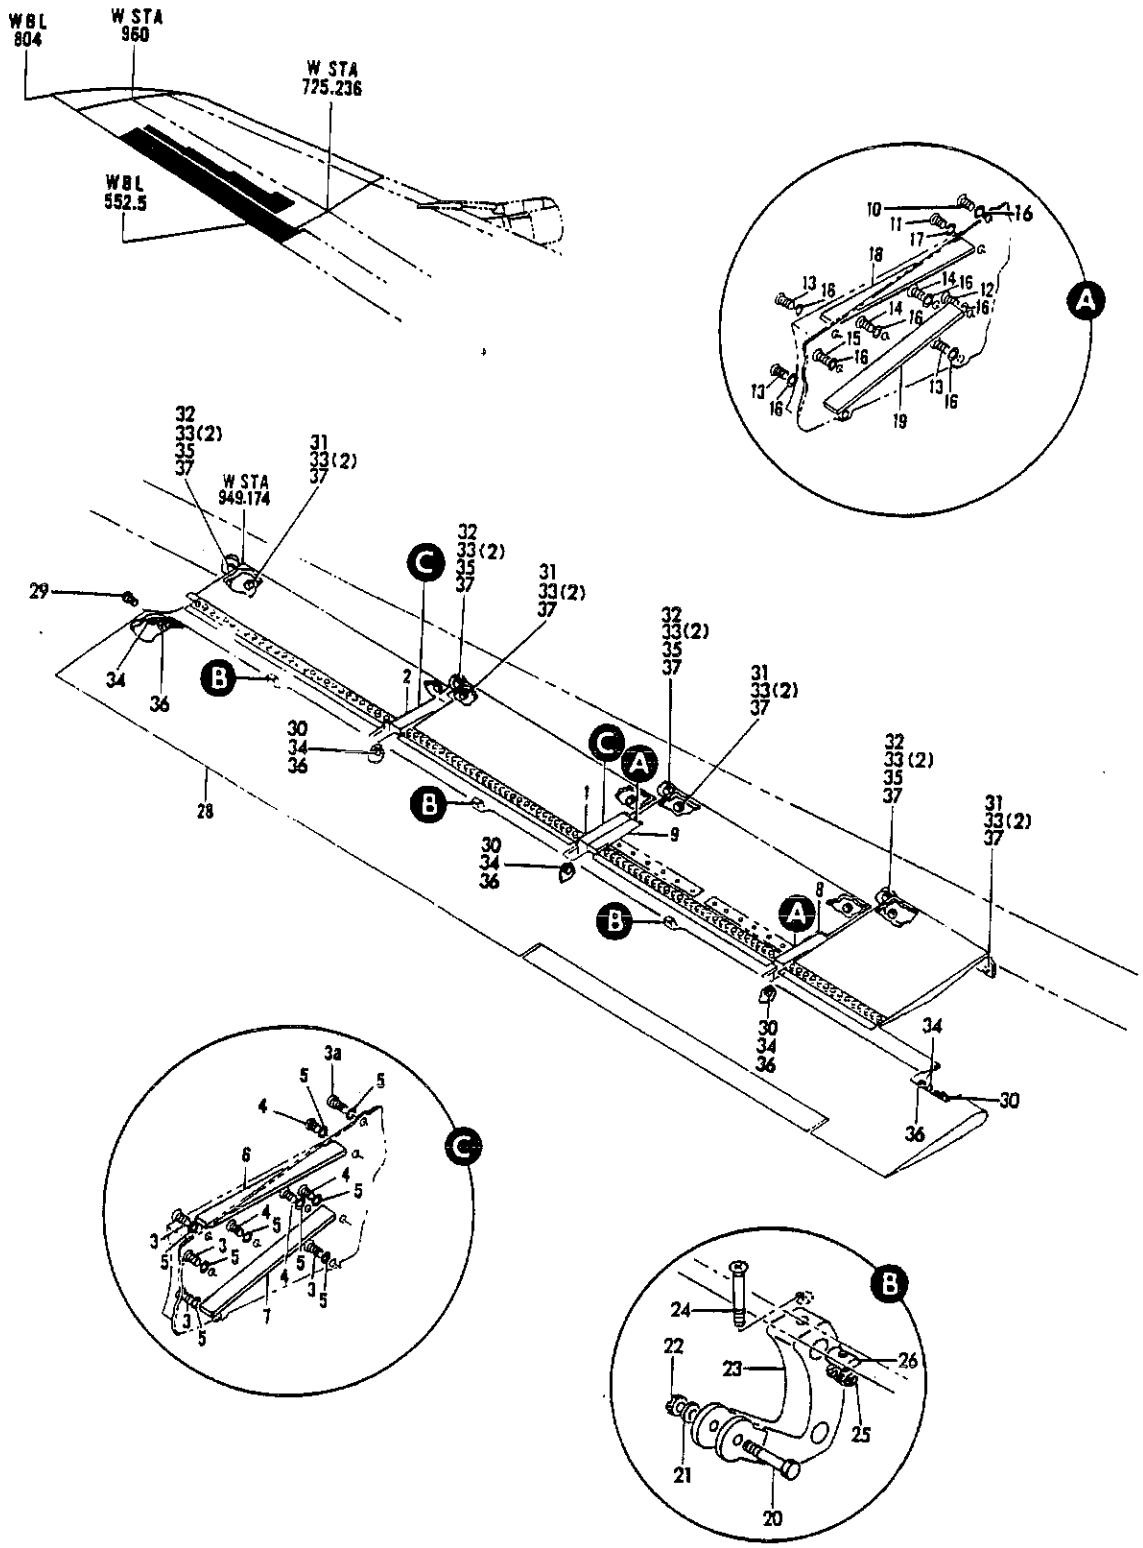


FIGURE 1. AILERON INSTL, OUTBOARD WING

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1	5-73134-3001	AILERON INSTL, OUTBOARD WING (LH) (SEE 57-1, FIG. 1, ITEM 29)		RF
	5-73134-3002	AILERON INSTL, OUTBOARD WING (RH) (SEE 57-1, FIG. 1, ITEM 29)		RF
	9-65352-9	. VALVE INSTL, OUTBOARD AILERON BALANCE BAY NO. 4 (LH ONLY)		1
	9-65352-10	. VALVE INSTL, OUTBOARD AILERON BALANCE BAY NO. 4 (RH ONLY)		1
	9-65352-10	. VALVE INSTL, OUTBOARD AILERON BALANCE BAY NO. 4 (LH ONLY)		1
	9-65352-9	. VALVE INSTL, OUTBOARD AILERON BALANCE BAY NO. 4 (RH ONLY)		1
1	9-65352-11	. . VALVE ASSY, OUTBOARD AILERON BALANCE BAY NO. 4 (LH ONLY)		1
1	9-65352-12	. . VALVE ASSY, OUTBOARD AILERON BALANCE BAY NO. 4 (RH ONLY)		1
2	9-65352-12	. . VALVE ASSY, OUTBOARD AILERON BALANCE BAY NO. 4 (LH ONLY)		1
2	9-65352-11	. . VALVE ASSY, OUTBOARD AILERON BALANCE BAY NO. 4 (RH ONLY)		1
		ATTACHING PARTS		
3	NAS221-10	. . SCREW		4
3A	BACS12AGN10F	. . SCREW		1
4	NAS221-8	. . SCREW		4
5	AN960D10	. . WASHER.		9
		-------*-------		
6	9-65352-7	. . SEAL, OUTBOARD AILERON BALANCE BAY NO. 4.		1
7	9-65352-8	. . SEAL, OUTBOARD AILERON BALANCE BAY NO. 4.		1
	9-65351-9	. VALVE INSTL, OUTBOARD AILERON BALANCE BAY NO. 3 (LH ONLY)		1
	9-65351-10	. VALVE INSTL, OUTBOARD AILERON BALANCE BAY NO. 3 (RH ONLY)		1
	9-65351-10	. VALVE INSTL, OUTBOARD AILERON BALANCE BAY NO. 3 (LH ONLY)		1
	9-65351-9	. VALVE INSTL, OUTBOARD AILERON BALANCE BAY NO. 3 (RH ONLY)		1
8	9-65351-11	. . VALVE ASSY, OUTBOARD AILERON BALANCE BAY NO. 3 (LH ONLY)		1
8	9-65351-12	. . VALVE ASSY, OUTBOARD AILERON BALANCE BAY NO. 3 (RH ONLY)		1
9	9-65351-12	. . VALVE ASSY, OUTBOARD AILERON BALANCE BAY NO. 3 (LH ONLY)		1
9	9-65351-11	. . VALVE ASSY, OUTBOARD AILERON BALANCE BAY NO. 3 (RH ONLY)		1
		ATTACHING PARTS		
10	NAS221-10	. . SCREW		1
11	NAS221-8	. . SCREW		1
12	NAS221-8	. . SCREW		1
13	NAS221-10	. . SCREW		3
14	NAS221-8	. . SCREW		2
15	NAS221-10	. . SCREW		1
16	AN960PD10	. . WASHER.		8
17	AN960PD10	. . WASHER.		1
		-------*-------		
18	9-65351-7	. . SEAL, OUTBOARD AILERON BALANCE BAY NO. 3.		1
19	9-65351-8	. . SEAL, OUTBOARD AILERON BALANCE BAY NO. 3.		1
20	NAS1105-21DW	. BOLT.		3
21	AN960D516	. WASHER.		3
22	AN320-5	. NUT		3
23	6-83215	. SUPPORT, OUTBOARD AILERON HINGE		3
		ATTACHING PARTS		
24	NAS517-5-22	. SCREW		6
25	BACR10V5	. RETAINER.		6
26	BACN10CP5L	. NUT		6
		-------*-------		
28	65-1034-9	. PANEL INSTL, OUTBOARD AILERON AND BALANCE (LH ONLY) (SEE FIG. 2)		1
28	65-1034-10	. PANEL INSTL, OUTBOARD AILERON AND BALANCE (RH ONLY) (SEE FIG. 2)		1
		ATTACHING PARTS		
29	NAS1105-18DW	. BOLT.		1
30	NAS1105-21DW	. BOLT.		4
31	AN3-4A	. BOLT.		AR
32	AN3-6A	. BOLT.		4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
1 33	AN960D10L	. WASHER.		AR
34	AN960D516	. WASHER.		5
35	5-73134-1650	. SPACER.		4
36	AN320-5	. NUT		5
37	NAS679A3W	. NUT		99
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

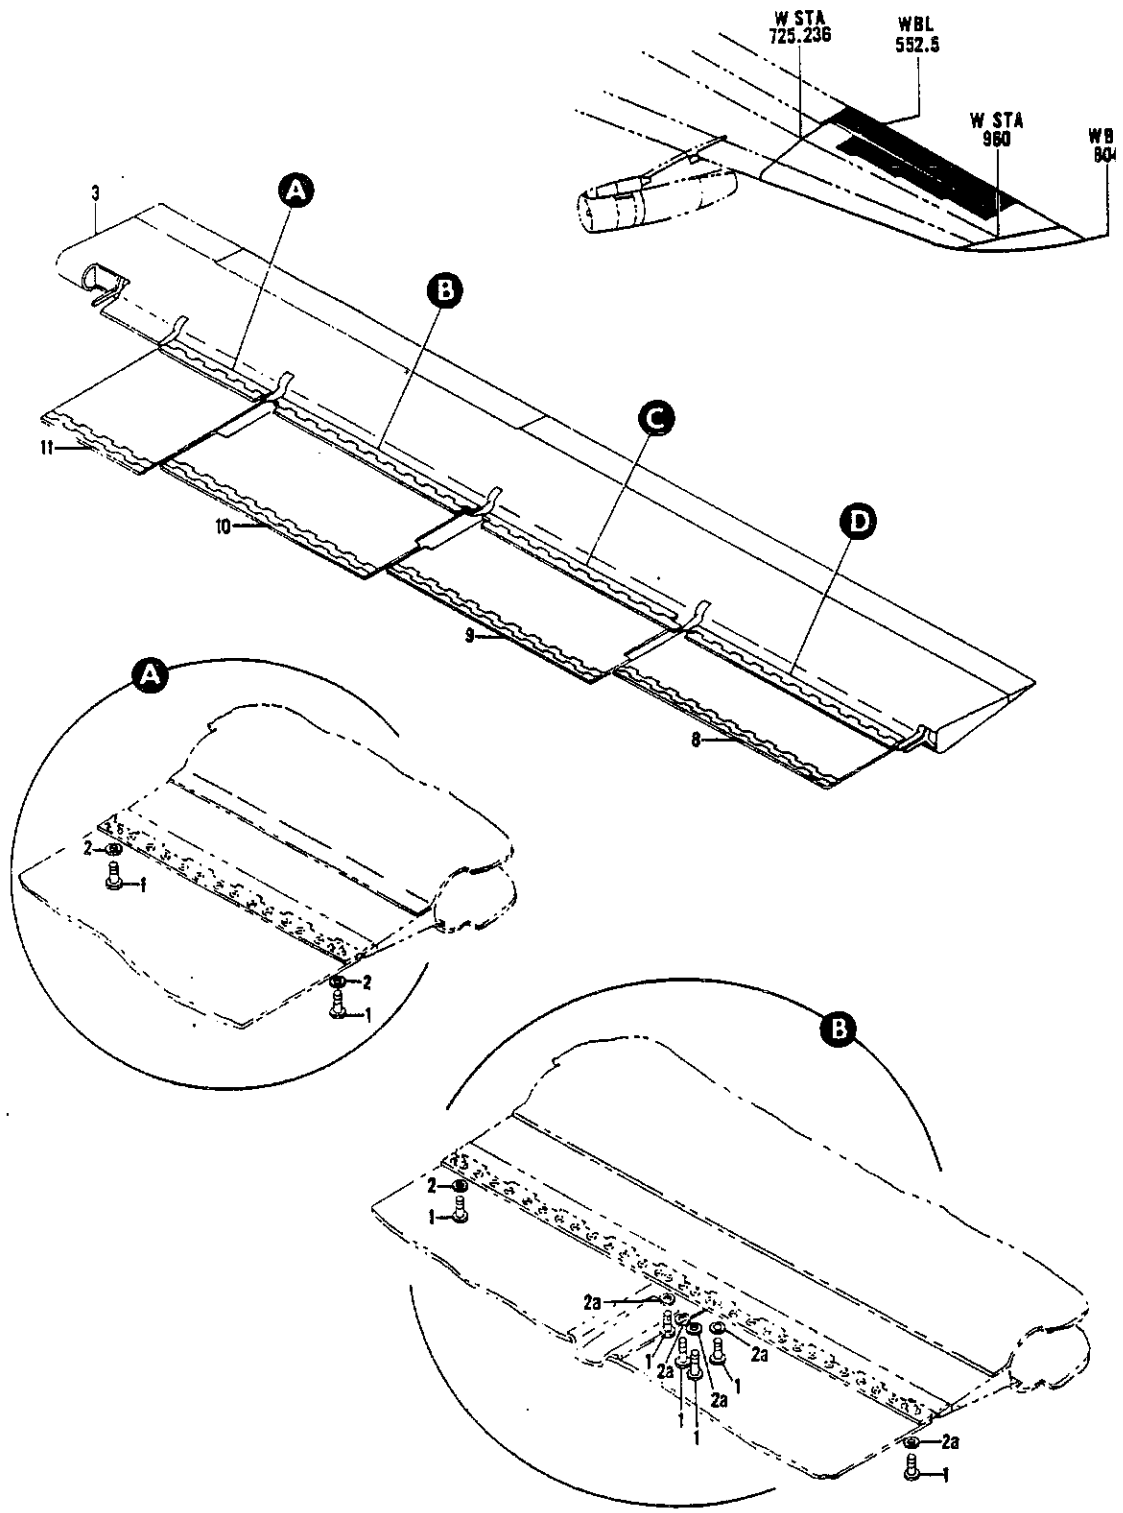


FIGURE 2. PANEL INSTL. OUTBOARD AILERON AND BALANCE (SHEET 1)

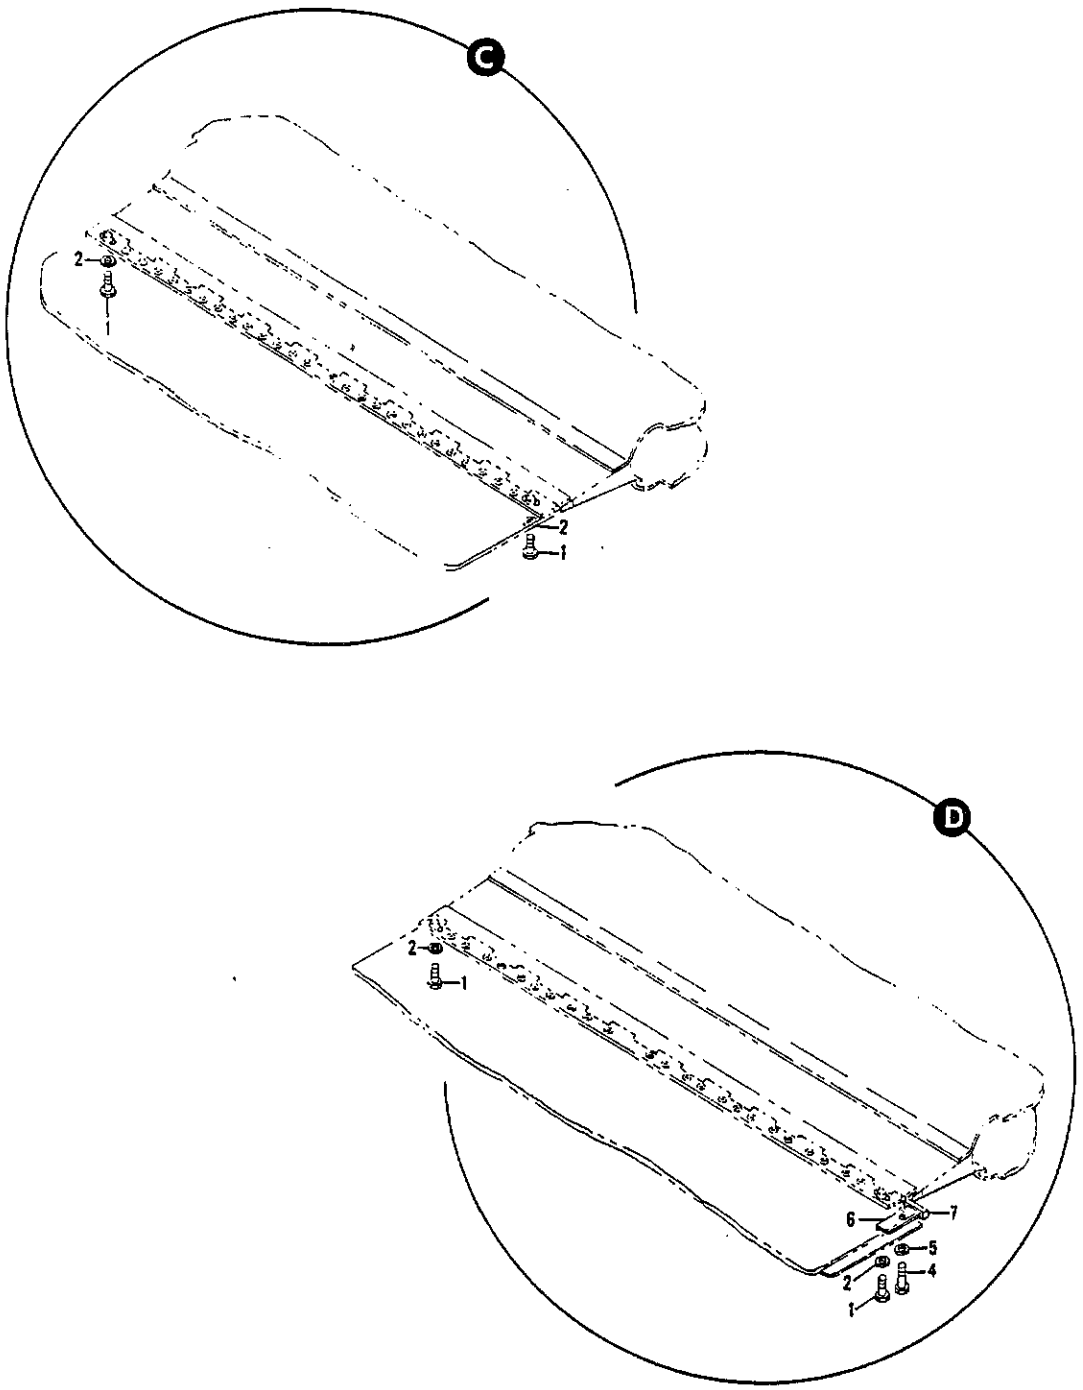


FIGURE 2. PANEL INSTL, OUTBOARD AILERON AND BALANCE (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	2	65-1034-9	PANEL INSTL, OUTBOARD AILERON AND BALANCE (LH). . . . . (SEE FIG. 1, ITEM 28)		RF
		65-1034-10	PANEL INSTL, OUTBOARD AILERON AND BALANCE (RH). . . . . (SEE FIG. 1, ITEM 28)		RF
	1	AN3-5A	. BOLT.		94
	2	AN960D10	. WASHER.		67
	2A	AN960D10L	. WASHER.		27
	3	5-88190-3167	. AILERON ASSY, OUTBOARD WING (LH ONLY) (SEE FIG. 3). . (SEE FIG. 3A FOR SPARES ASSEMBLY)	0102	1
R R	3	5-88190-3159A	. AILERON ASSY, OUTBOARD WING (LH ONLY) (SEE FIG. 3). . (SEE FIG. 3A FOR SPARES ASSEMBLY)	5151	1
R R R	3	5-88190-3159H	. AILERON ASSY, OUTBOARD WING (LH ONLY) (SEE FIG. 3). . (SEE FIG. 3A FOR SPARES ASSEMBLY)	5299	1
R R R	3	5-88190-3159	. AILERON ASSY, OUTBOARD WING (LH ONLY) (SEE FIG. 3). . (SEE FIG. 3A FOR SPARES ASSEMBLY)	0350	1
	3	5-88190-3168	. AILERON ASSY, OUTBOARD WING (RH ONLY) (SEE FIG. 3). . (SEE FIG. 3A FOR SPARES ASSEMBLY)	0102	1
R R	3	5-88190-3160	. AILERON ASSY, OUTBOARD WING (RH ONLY) (SEE FIG. 3). . (SEE FIG. 3A FOR SPARES ASSEMBLY)	0350	1
R R R	3	5-88190-3160A	. AILERON ASSY, OUTBOARD WING (RH ONLY) (SEE FIG. 3). . (SEE FIG. 3A FOR SPARES ASSEMBLY)	5151	1
R R R	3	5-88190-3160H	. AILERON ASSY, OUTBOARD WING (RH ONLY) (SEE FIG. 3). . (SEE FIG. 3A FOR SPARES ASSEMBLY)	5299	1
	4	NAS464P3A3	. BOLT.		1
	5	AN960D10L	. WASHER.		1
	6	60-3541-1	. SEAL ASSY, OUTBOARD AILERON (LH ONLY)		1
	6	60-3541-2	. SEAL ASSY, OUTBOARD AILERON (RH ONLY)		1
	7	60-3541-6	. . SEAL, OUTBOARD AILERON (BAC1523-13 X 2.7 IN. LG). .		1
	8	5-96130-3003	. PANEL ASSY, WING STATION 890.21 TO 948.77 OUTBOARD. . AILERON BALANCE (LH ONLY) (SEE FIG. 4)		1
	8	5-96130-3004	. PANEL ASSY, WING STATION 890.21 TO 948.77 OUTBOARD. . AILERON BALANCE (RH ONLY) (SEE FIG. 4)		1
	9	5-96129-3001	. PANEL ASSY, WING STATION 835.10 TO 890.21 OUTBOARD. . AILERON BALANCE (SEE FIG. 5)		1
	10	5-96128-3001	. PANEL ASSY, WING STATION 779.96 TO 835.10 OUTBOARD. . AILERON BALANCE (SEE FIG. 6)		1
	11	5-96127-3001	. PANEL ASSY, WING STATION 752.90 TO 779.96 OUTBOARD. . AILERON BALANCE (SEE FIG. 7)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

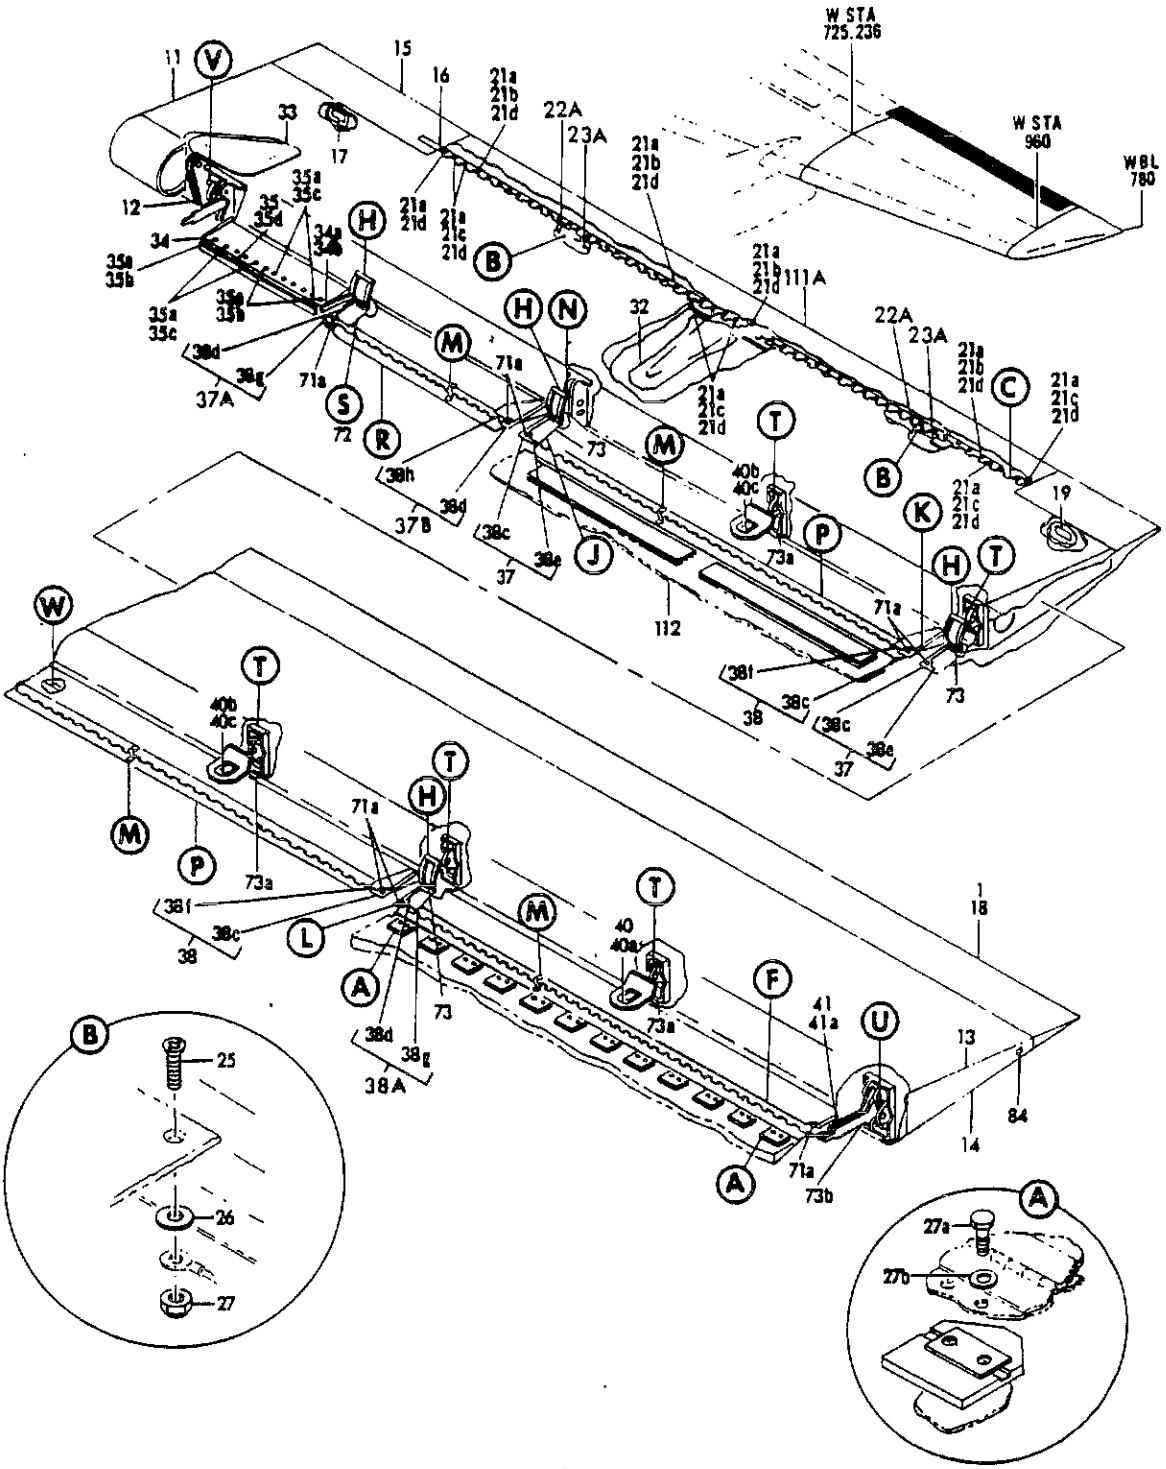


FIGURE 3. AILERON ASSY, OUTBOARD WING (SHEET 1)

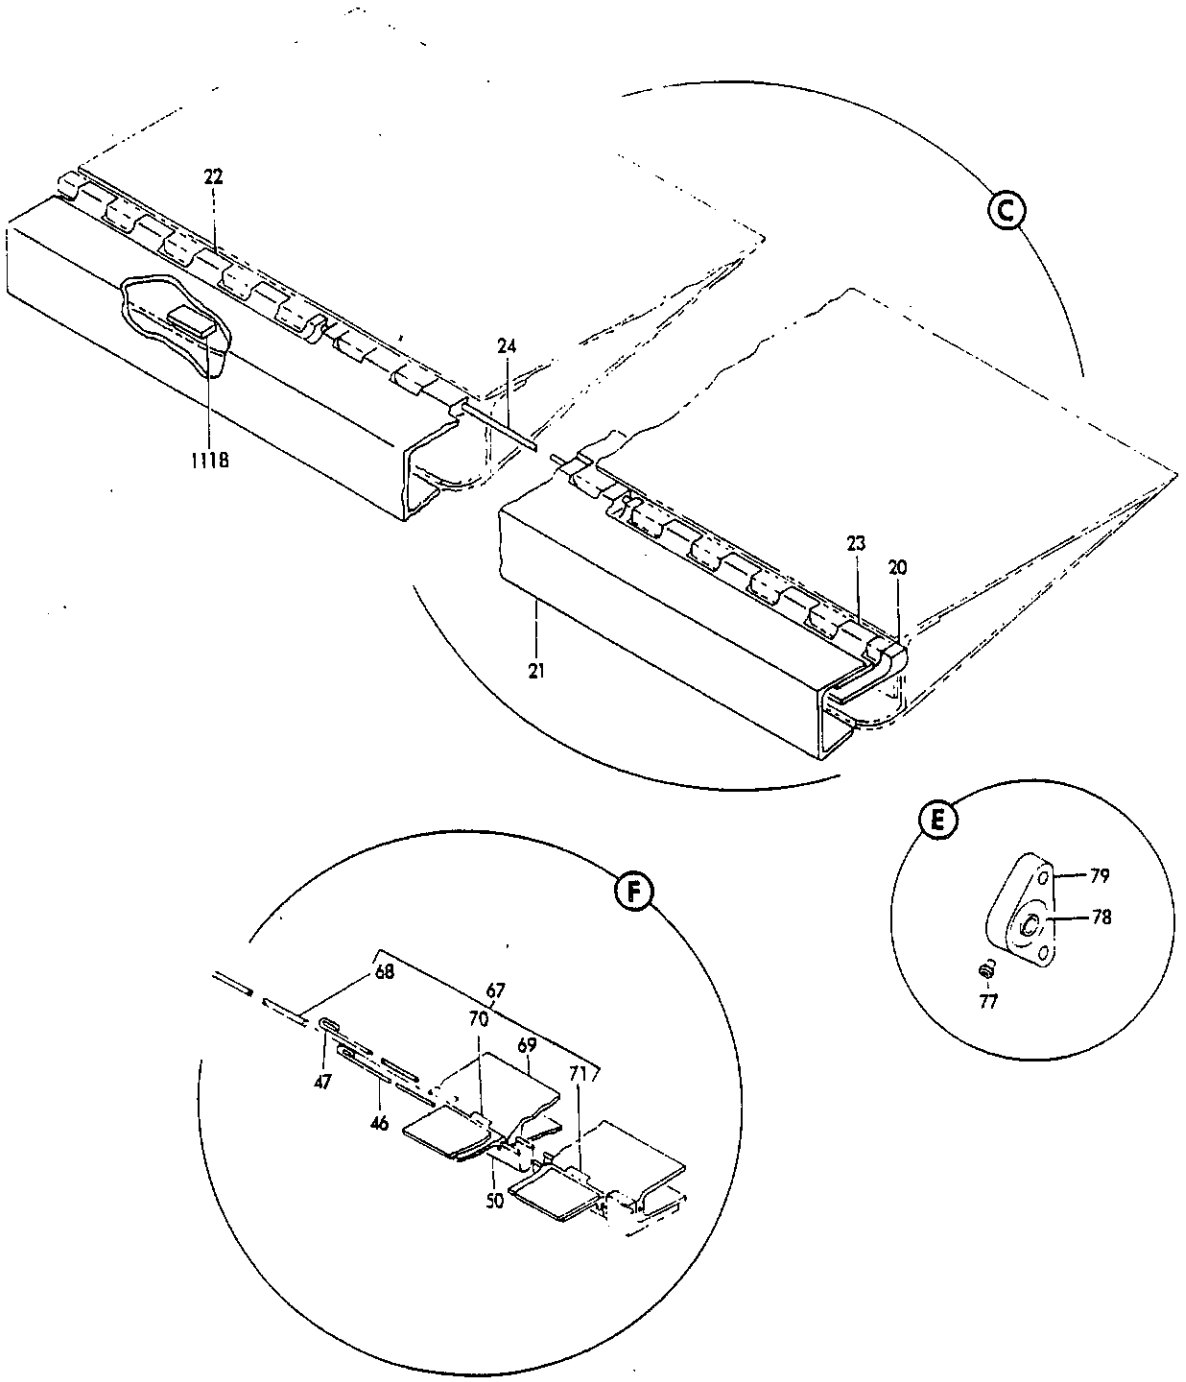


FIGURE 3. AILERON ASSY, OUTBOARD WING (SHEET 2)

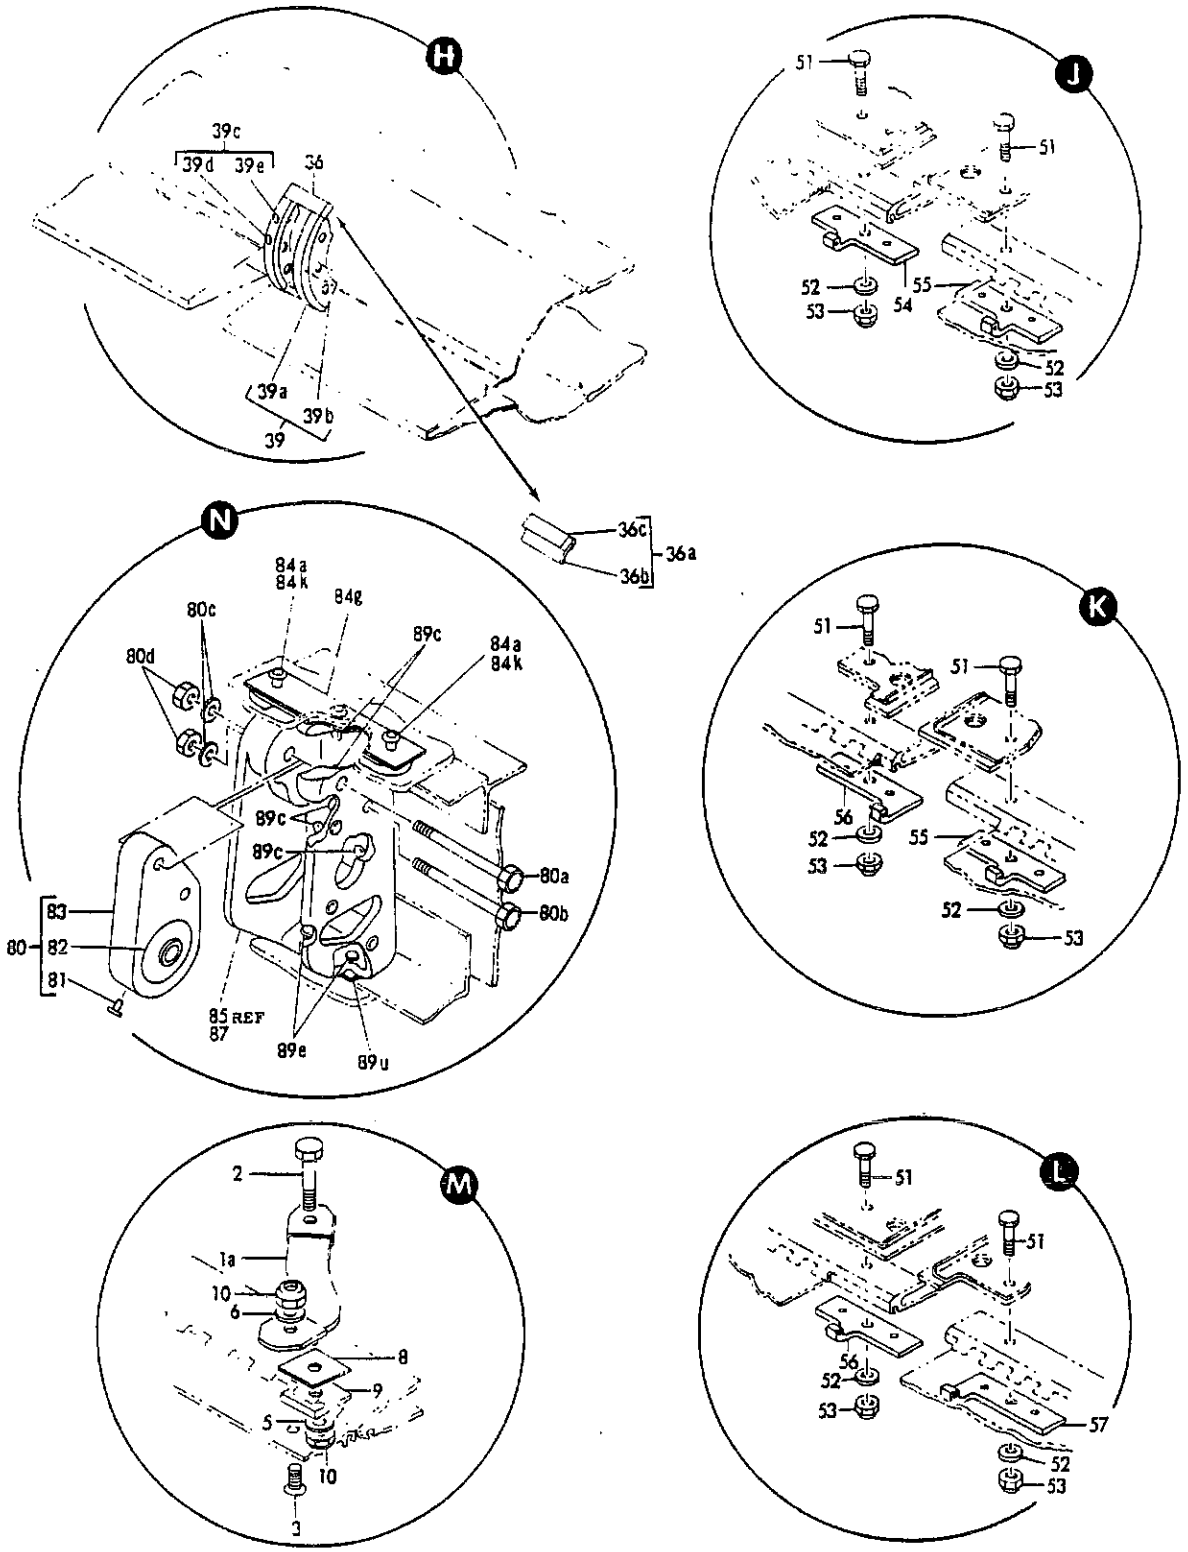


FIGURE 3. AILERON ASSY, OUTBOARD WING (SHEET 3)

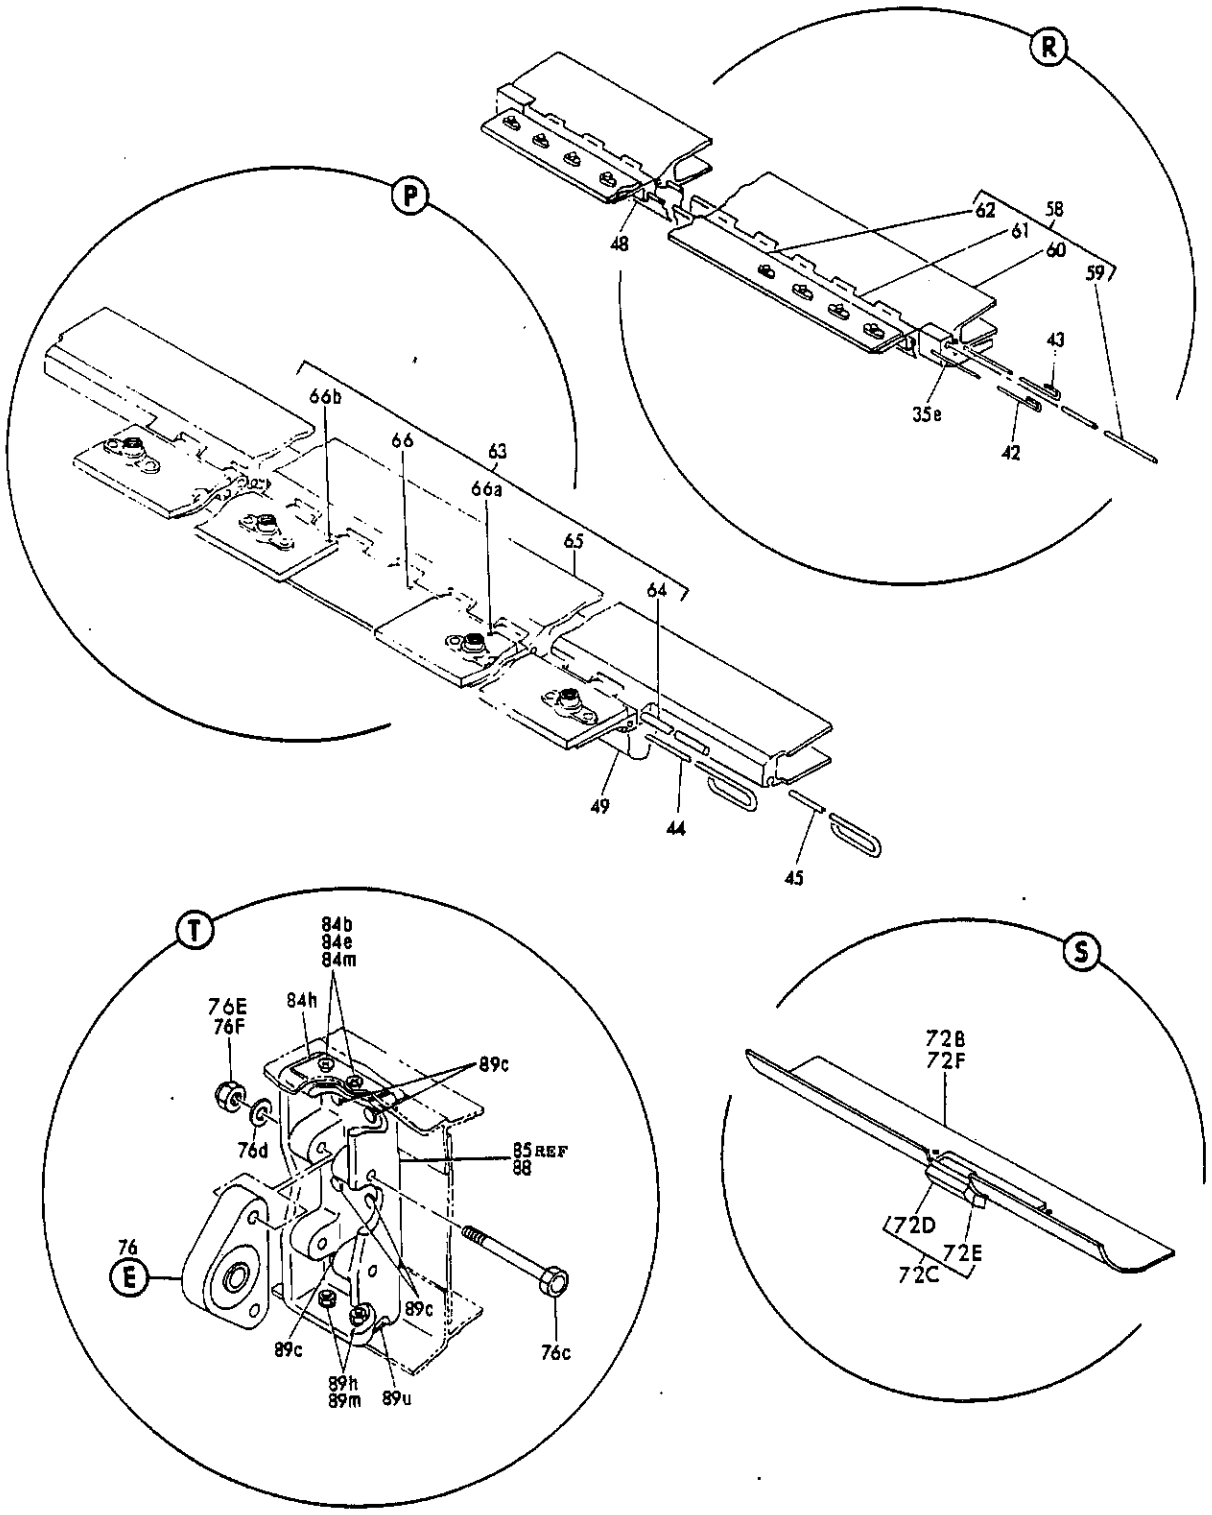


FIGURE 3. AILERON ASSY, OUTBOARD WING (SHEET 4)

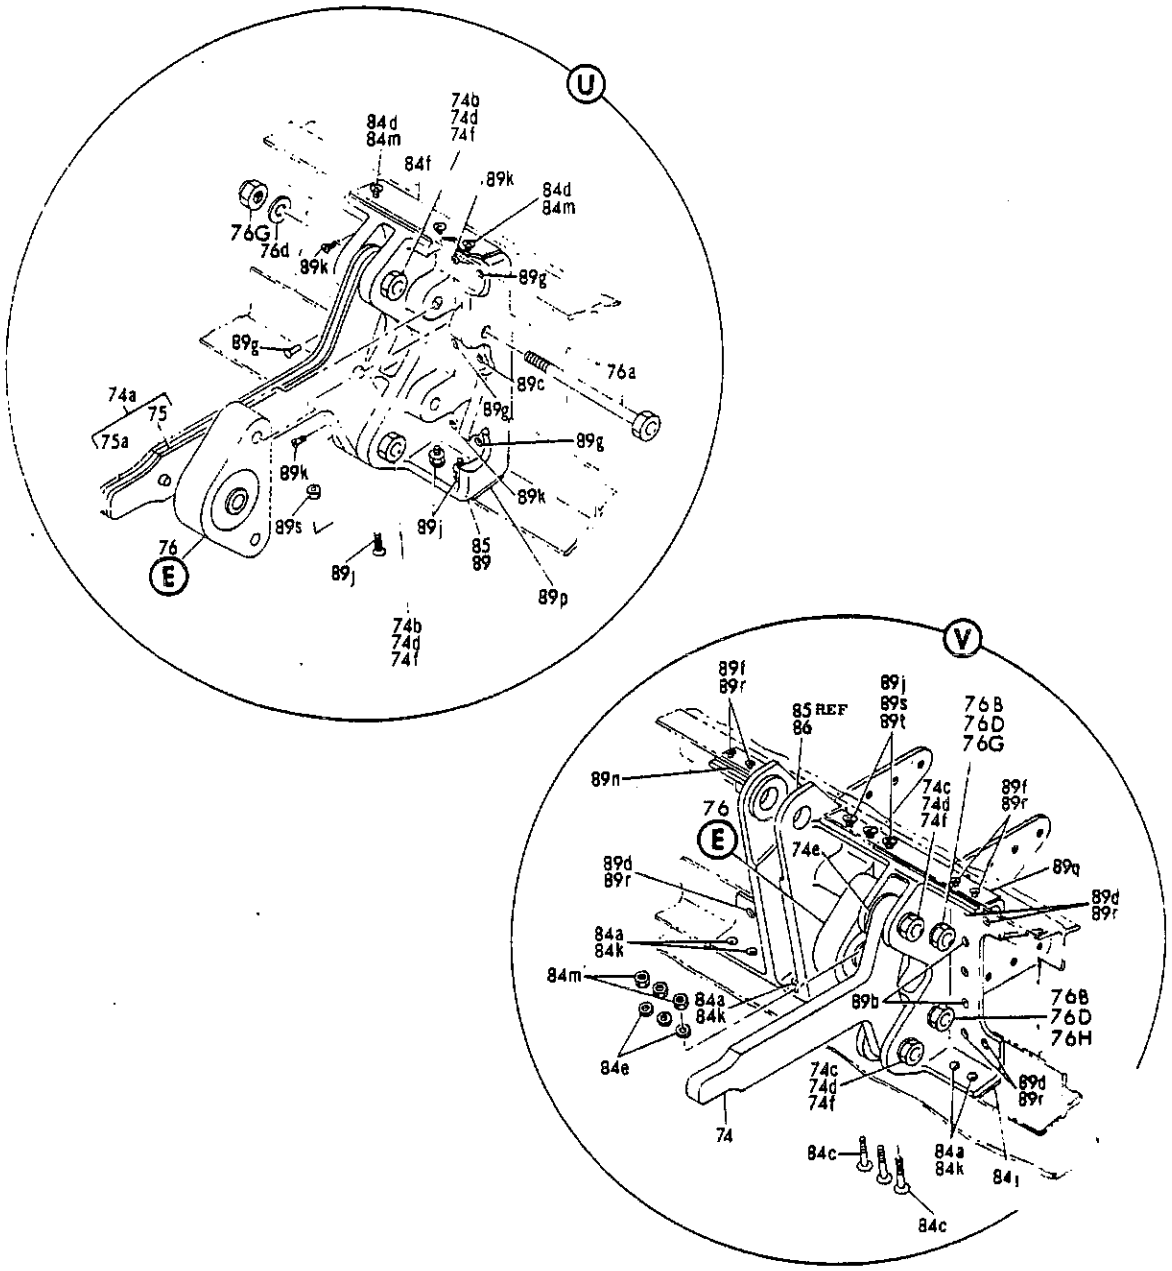


FIGURE 3. AILERON ASSY, OUTBOARD WING (SHEET 5)

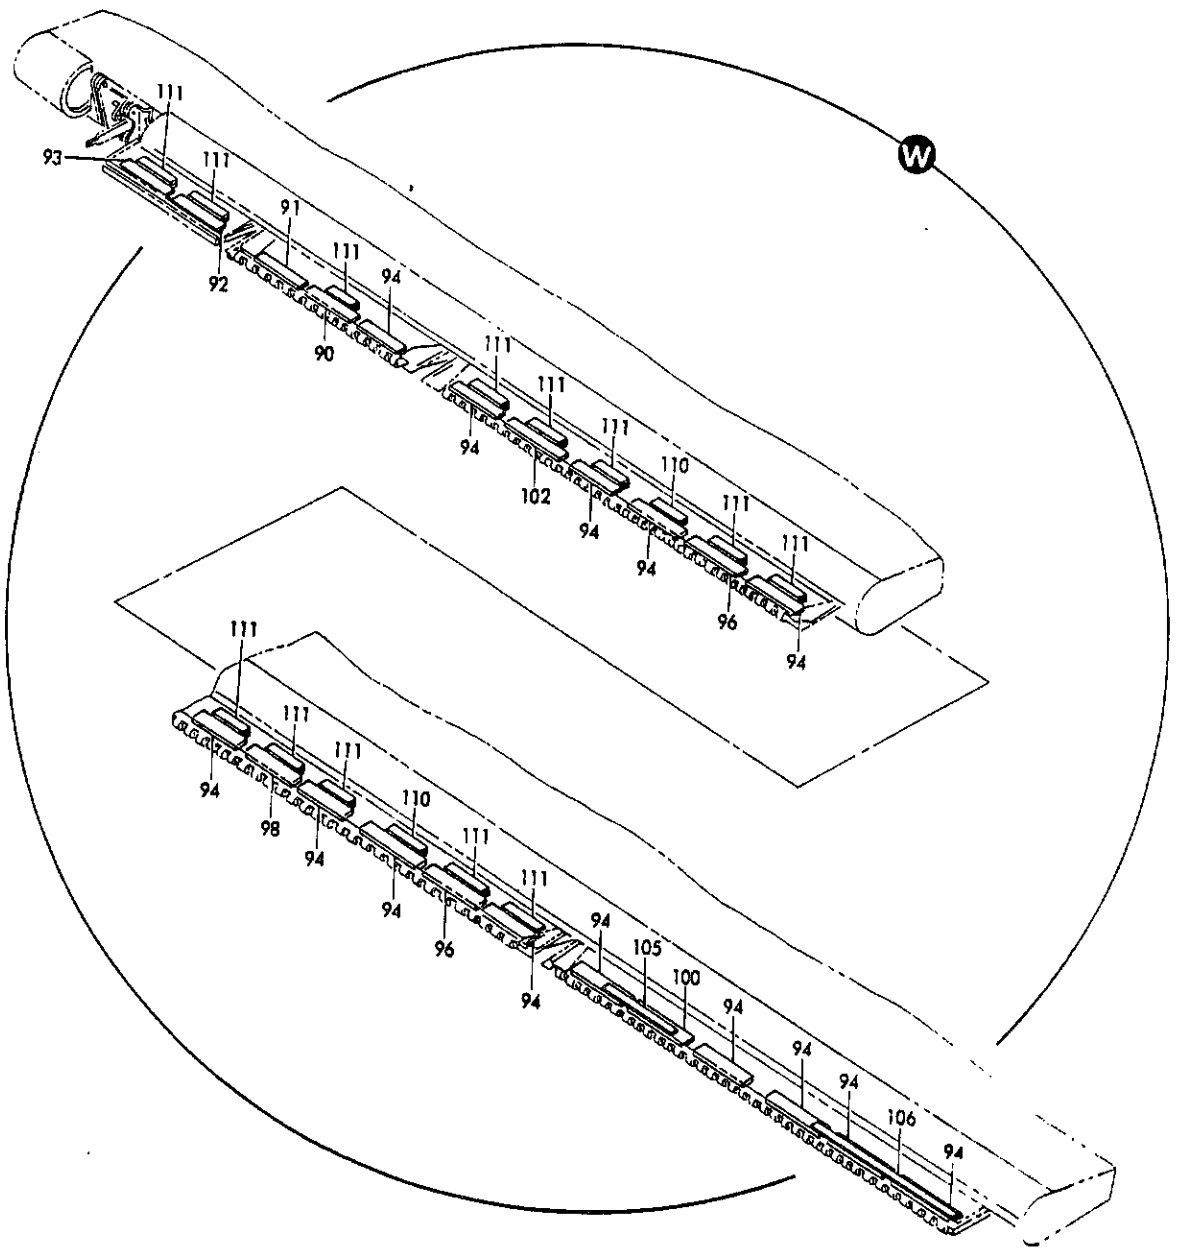


FIGURE 3. AILERON ASSY, OUTBOARD WING (SHEET 6)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	3	5-88190-3167	AILERON ASSY, OUTBOARD WING (LH) (SEE FIG. 2, ITEM 3) .	0102	RF
R		5-88190-3159A	AILERON ASSY, OUTBOARD WING (LH) (SEE FIG. 2, ITEM 3) .	5151	RF
RR		5-88190-3159	AILERON ASSY, OUTBOARD WING (LH) (SEE FIG. 2, ITEM 3) .	0350	RF
R		5-88190-3159H	AILERON ASSY, OUTBOARD WING (LH) (SEE FIG. 2, ITEM 3) .	5299	RF
		5-88190-3168	AILERON ASSY, OUTBOARD WING (RH) (SEE FIG. 2 ITEM 3). .	0102	RF
R		5-88190-3160H	AILERON ASSY, OUTBOARD WING (RH) (SEE FIG. 2, ITEM 3) .	5299	RF
RR		5-88190-3160A	AILERON ASSY, OUTBOARD WING (RH) (SEE FIG. 2, ITEM 3) .	5151	RF
R		5-88190-3160	AILERON ASSY, OUTBOARD WING (RH) (SEE FIG. 2, ITEM 3) .	0350	RF
	1	5-88190-3165	. AILERON ASSY, (USED ON 5-88190-3167).	0102	1
R	1	5-88190-3163	. AILERON ASSY, (USED ON 5-88190-3159).	0350	1
RR	1	5-88190-3163A	. AILERON ASSY, (USED ON 5-88190-3159A)	5151	1
R	1	5-88190-3163H	. AILERON ASSY, (USED ON 5-88190-3159H)	5299	1
	1	5-88190-3166	. AILERON ASSY, (USED ON 5-88190-3168).	0102	1
R	1	5-88190-3164	. AILERON ASSY, (USED ON 5-88190-3160).	0350	1
RR	1	5-88190-3164A	. AILERON ASSY, (USED ON 5-88190-3160A)	5151	1
R	1	5-88190-3164H	. AILERON ASSY, (USED ON 5-88190-3160H)	5299	1
	1A	BACJ40D10-12	. . JUMPER ASSY		4
			ATTACHING PARTS		
	2	AN3-11A	. . BOLT.		4
	3	NAS517-3-3	. . SCREW		4
	5	BACW10P44AL	. . WASHER.		4
	6	BACW10P63AL	. . WASHER.		4
	8	BACS40A13-29	. . SHIM.		AR
	9	5-88190-23	. . FILLER.		4
	10	NAS679A3W	. . NUT		8
			-------*-------		
	11	65-8435-3003	. . PANEL ASSY, UPPER INBOARD HALF HONEYCOMB SKIN (LH ONLY)		1
	11	65-8435-3004	. . PANEL ASSY, UPPER INBOARD HALF HONEYCOMB SKIN (RH ONLY)		1
	12	65-8435-3001	. . PANEL ASSY, LOWER INBOARD HALF HONEYCOMB SKIN (LH ONLY)		1
	12	65-8435-3002	. . PANEL ASSY, LOWER INBOARD HALF HONEYCOMB SKIN (RH ONLY)		1
	13	5-97697-3012	. . PANEL ASSY, UPPER OUTBOARD HALF HONEYCOMB SKIN. . .		1
	14	5-97697-3013	. . PANEL ASSY, LOWER OUTBOARD HALF HONEYCOMB SKIN. . .		1
		9-64577-83	. . TRAILING EDGE INSTL, (LH ONLY).		1
		9-64577-84	. . TRAILING EDGE INSTL, (RH ONLY).		1
	15	9-64577-3037	. . . TRAILING EDGE ASSY, (LH ONLY)		1
	15	9-64577-3038	. . . TRAILING EDGE ASSY, (RH ONLY)		1
	16	3-93581-1650	. . . . RETAINER ASSY, TAB HINGE PIN.		1
	17	9-64577-3030	. . . . NAMEPLATE		1
	18	9-64577-3035	. . . TRAILING EDGE ASSY, (LH ONLY)		1
	18	9-64577-3036	. . . TRAILING EDGE ASSY, (RH ONLY)		1
	19	9-64577-3030	. . . . NAMEPLATE		1
	20	66-14038-1	. . . RETAINER, HINGE PIN (LH ONLY)		1
	20	66-14038-2	. . . RETAINER, HINGE PIN (RH ONLY)		1
	21	9-64577-35	. . . HINGE HALF, (LH ONLY)		1
	21	9-64577-36	. . . HINGE HALF, (RH ONLY)		1
			ATTACHING PARTS		
	21A	BACB30ABP3-3A	. . . BOLT.		54
	21B	AN960PD10	. . . WASHER.		42
	21C	AN960PD10L	. . . WASHER.		11
	21D	NAS679A3W	. . . NUT		54
			-------*-------		
	22	69-6177-1	. . . HINGE HALF, BEAM.		1
	23	69-6177-2	. . . HINGE HALF, BEAM.		1
	24	5-88190-3027	. . PIN, HINGE (ALTERED FROM MS20253-2-8080).		1
	25	BACB30LU3-2	. . BOLT.		2
	26	BACW10P41AL	. . WASHER.		2
	27	NAS679A3W	. . NUT		2
	27A	AN3-6A	. . BOLT, (WHEN WEIGHTS ARE USED)		AR
	27A	NAS221-7	. . SCREW, (USED WITH AN960-10L) (WHEN NO WEIGHTS ARE USED)		AR
	27B	AN960-10L	. . WASHER, (USED WITH NAS221-7) (WHEN NO WEIGHTS ARE USED)		AR
		69-8929-1	. . FAIRING INSTL, TAB MAST (LH ONLY)		2
		69-8929-2	. . FAIRING INSTL, TAB MAST (RH ONLY)		2
	32	69-8929-3	. . . FAIRING, (LH ONLY).		1
	32	69-8929-4	. . . FAIRING, (RH ONLY).		1
		5-97849-1	. . FAIRING INSTL, CONTROL MAST (LH ONLY)		1
		5-97849-2	. . FAIRING INSTL, CONTROL MAST (RH ONLY)		1
	33	5-97849-3	. . . FAIRING, (LH ONLY).		1
	33	5-97849-4	. . . FAIRING, (RH ONLY).		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	3		ATTACHING PARTS		
		NAS514P1032-12	. . . SCREW		5
			-------*-------		
	35E	66-4382-1651	. . RETAINER, (LH ONLY) (OPTIONAL 66-3656-3)		1
	35E	66-3656-3	. . RETAINER, (LH ONLY) (OPTIONAL TO 66-4382-1651)		1
	35E	66-4382-1652	. . RETAINER, (RH ONLY) (OPTIONAL 66-3656-4)		1
	35E	66-3656-4	. . RETAINER, (RH ONLY) (OPTIONAL TO 66-3656-1652)		1
	36	5-88190-24	. . SEAL, (ALTERED FROM EXTRUSION NO. BAC1523-17 X 2.1 IN. LG) (USED ON 5-88190-3053, -3165, -3054 AND -3166)	0102	4
	36A	69-50627-1	. . SEAL ASSY, (USED ON 5-88190-3155, -3163, -3156 AND -3164)	0399	4
	36B	69-50627-5	. . . RETAINER, (USED ON 69-50627-1)	0399	1
	36C	69-50627-3	. . . SEAL, (ALTERED FROM EXTRUSION NO. BAC1523-17 X 2.1 IN. LG) (USED ON 69-50627-1)	0399	1
R	37	66-14032-1	. . SEAL ASSY, (LH ONLY)	0150	2
R	37	66-14032-2	. . SEAL ASSY, (RH ONLY)	0150	2
R	37	66-14032-9	. . SEAL ASSY, (LH ONLY)	5199	2
R	37	66-14032-10	. . SEAL ASSY, (RH ONLY)	5199	2
	37A	60-2078-2	. . SEAL ASSY, (RH ONLY)		1
	37A	60-2078-1	. . SEAL ASSY, (LH ONLY)		1
	37B	60-2078-2	. . SEAL ASSY, (LH ONLY)		1
	37B	60-2078-1	. . SEAL ASSY, (RH ONLY)		1
	38	66-14032-2	. . SEAL ASSY, (LH ONLY)		2
	38	66-14032-1	. . SEAL ASSY, (RH ONLY)		2
R	38B	60-2078-2	. . SEAL ASSY, (LH ONLY)	0150	1
R	38B	60-2078-1	. . SEAL ASSY, (RH ONLY)	0150	1
R	38B	60-2078-7	. . SEAL ASSY, (LH ONLY)	5199	1
R	38B	60-2078-8	. . SEAL ASSY, (RH ONLY)	5199	1
			ATTACHING PARTS		
		AN3-11A	. . BOLT		5
		AN3-10A	. . BOLT		6
		AN3-5A	. . BOLT		8
		AN3-6A	. . BOLT		6
		AN960D10L	. . WASHER		1
		BACW10AN3	. . WASHER		6
		BACW10P43AL	. . WASHER		8
		NAS620-10	. . WASHER		4
		NAS679A3W	. . NUT		5
		BACN10FD35	. . NUT		6
			-------*-------		
	38C	66-14032-7	. . . SEAL, (USED ON 66-14032-1 AND -2)		1
	38D	60-2078-5	. . . SEAL, (USED ON 60-2078-1 AND -2)		1
	38E	66-14032-5	. . . RETAINER, (USED ON 66-14032-1)		1
	38F	66-14032-6	. . . RETAINER, (USED ON 66-14032-2)		1
	38G	60-2078-3	. . . RETAINER, (USED ON 60-2078-1)		1
	38H	60-2078-4	. . . RETAINER, (USED ON 60-2078-2)		1
	39	60-2077-7	. . SEAL ASSY, TYPICAL HINGE		4
			ATTACHING PARTS		
		AN3-4A	. . BOLT		12
		AN960D10	. . WASHER		12
		NAS679A3W	. . NUT		12
			-------*-------		
	39A	60-2077-5	. . . SEAL, (EXTRUSION NO. BAC1523-13 X 5.2 IN. LG)		1
	39B	60-2077-9	. . . RETAINER		1
	39C	60-2077-8	. . SEAL ASSY, HINGE		4
			ATTACHING PARTS		
		AN3-4A	. . BOLT		12
		AN960D10	. . WASHER		12
		NAS679A3W	. . NUT		12
			-------*-------		
	39D	60-2077-5	. . . SEAL, (EXTRUSION NO. BAC1523-13 X 5.2 IN. LG)		1
	39E	60-2077-10	. . . RETAINER		1
	40	60-1593-3000	. . SEAL ASSY		1
			ATTACHING PARTS		
		AN3-5A	. . BOLT		12
		AN960D10	. . WASHER		6
		NAS679A3W	. . NUT		6
			-------*-------		
	40A	60-1593-2002	. . . SEAL		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
3 40B	60-1593-3000	. . SEAL ASSY		2
		ATTACHING PARTS		
	AN3-5A	. . BOLT.		12
	AN960D10	. . WASHER.		6
	NAS679A3W	. . NUT		6
		-------*-------		
40B	60-1593-2001	. . . RETAINER.		1
40C	60-1593-2002	. . . SEAL.		1
41	60-1469-1	. . SEAL ASSY, (LH ONLY).		1
41	60-1469-2	. . SEAL ASSY, (RH ONLY).		1
		ATTACHING PARTS		
	AN3-4A	. . BOLT.		2
	AN960D10	. . WASHER.		2
		-------*-------		
41A	60-1469-5	. . . SEAL, (EXTRUSION NO. BAC1523-17 X 4.6 IN. LG)		1
42	BACP18G1-2476	. . PIN		1
43	BACP18G2-2495	. . PIN		1
44	BACP18G1-4874	. . PIN		2
45	BACP18G2-5218	. . PIN		2
46	BACP18G1-5504	. . PIN		1
47	BACP18G2-5474	. . PIN		1
48	60-2099	. . SEAL, FABRIC.		1
49	60-2099-1	. . SEAL, FABRIC.		2
50	60-2099-2	. . SEAL, FABRIC.		1
51	AN3-11A	. . BOLT.		6
52	AN960D10L	. . WASHER.		6
53	BACN10BY53W	. . NUT		6
54	66-3656-2	. . RETAINER, HINGE PIN		1
55	66-3655-1	. . RETAINER, HINGE PIN		2
56	66-3655-2	. . RETAINER, HINGE PIN		2
57	66-3656-1	. . RETAINER, HINGE PIN		1
58	65-27063-14	. . HINGE ASSY, (ALTERED FROM 69-1893-6).		1
59	69-1893-5	. . . PIN, NOSE HINGE (ALTERED FROM AN253-2-2492)		1
60	69-1893-7	. . . HINGE HALF, NOSE.		1
61	69-1893-2	. . . HINGE HALF, NOSE.		1
62	65-27063-13	. . . WEIGHT, HINGE BALANCE		1
63	65-27063-17	. . HINGE ASSY, (ALTERED FROM 5-96763-23) (LH ONLY)		2
63	65-27063-18	. . HINGE ASSY, (ALTERED FROM 5-96763-23) (RH ONLY)		2
64	MS20253-2-4882	. . . PIN		1
65	5-96763-9	. . . HINGE HALF, NOSE.		1
66	5-96763-10	. . . HINGE HALF, NOSE (ALTERED FROM;6-84583)		1
66A	65-27063-9	. . . WEIGHT, HINGE BALANCE		1
66B	65-27063-10	. . . WEIGHT, HINGE BALANCE		1
67	65-27063-15	. . HINGE ASSY, (ALTERED FROM 5-96763-19) (LH ONLY)		1
67	5-96763-19	. . HINGE ASSY, (ALTERED TO 65-27063-15) (LH ONLY).		1
67	65-27063-16	. . HINGE ASSY, (ALTERED FROM 5-96763-20) (RH ONLY)		1
67	5-96763-20	. . HINGE ASSY, (ALTERED TO 65-27063-16) (RH ONLY).		1
68	MS20253-2-5449	. . . PIN		1
69	5-96763-11	. . . HINGE HALF, NOSE (LH ONLY).		1
69	5-96763-12	. . . HINGE HALF, NOSE (RH ONLY).		1
70	5-96763-17	. . . HINGE HALF, NOSE (LH ONLY) (ALTERED FROM;6-84583)		1
70	5-96763-18	. . . HINGE HALF, NOSE (RH ONLY).		1
71	65-27063-8	. . . WEIGHT, BALANCE (LH ONLY)		1
71	65-27063-8	. . . WEIGHT, BALANCE (RH ONLY)		1
71A	MS16562-32	. . PIN, SPRING (USED ON 5-88190-3165, -3163, -3166 AND -3164)	0102	8
72	69-1898-17	. . DOOR ASSY, ACCESS (LH ONLY) (USED ON 5-88190-3155 AND -3163)	0399	1
72	69-1898-18	. . DOOR ASSY, ACCESS (RH ONLY) (USED ON 5-88190-3156 AND -3164)	0399	1
72C	69-50627-2	. . . SEAL ASSY, (USED ON 69-1898-17 AND -18)	0399	1
72D	69-50627-4	. . . . SEAL, (EXTRUSION NO. BAC1523-17 X 2.1 IN. LG)	0399	1
72E	69-50627-6	. . . . RETAINER.	0399	1
72F	69-1898-9	. . . DOOR, (RH ONLY) (USED ON 69-1898-18).	0399	1
73	90-1417-3000	. . DOOR ASSY, ACCESS (USED ON 5-88190-3053, -3165, -3054 AND -3166)	0102	3
73	90-1417-3009	. . DOOR ASSY, ACCESS (USED ON 5-88190-3155, -3163, -3156 AND -3164)	0399	3
73A	90-2866-3000	. . DOOR ASSY, ACCESS (USED ON 5-88190-3053, -3165, -3054 AND -3166)	0102	3
73A	90-2866-3001	. . DOOR ASSY, ACCESS (USED ON 5-88190-3155, -3156, -3163 AND -3164)	0399	3
73B	90-1417-3003	. . DOOR ASSY, ACCESS (LH ONLY) (USED ON 5-88190-3155 AND -3163)	0399	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	3 73B	90-1417-3004	. . DOOR ASSY, ACCESS (RH ONLY) (USED ON 5-88190-3156 AND -3164)	0399	1
			ATTACHING PARTS		
		BACB30LU3-2	. . BOLT.		58
			-------*-------		
	74	6-84526	. . STOP.		1
	74A	6-84526-2	. . STOP ASSY		1
			ATTACHING PARTS		
	74B	BACB30NF5-15	. . BOLT.		2
	74C	BACB30NF5-16	. . BOLT.		2
	74D	AN960D516	. . WASHER.		4
	74E	5-88190-1651	. . SHIM.		AR
	74F	BACN10JC5	. . NUT		4
			-------*-------		
	75	6-84526-3	. . . STOP.		2
	75A	6-84526-4	. . . STOP.		1
			ATTACHING PARTS		
		BACB30DX6-5	. . . BOLT.		3
		NAS1080-6	. . . COLLAR.		3
			-------*-------		
	76	6-83219-2	. . SUPPORT ASSY, HINGE BEARING		7
			ATTACHING PARTS		
	76A	BACB30NF4-41	. . BOLT.		2
R	76B	BACB30NF4-61	. . BOLT.	5199	2
R	76B	BACB30NE4-61	. . BOLT, (DELETED BY 707 S/LTR 27-3)	0150	2
R	76B	BACB30LE4-61	. . BOLT, (ADDED BY 707 S/LTR 27-3)	0150	2
	76C	BACB30NF4-35	. . BOLT.		10
	76D	AN960D416	. . WASHER.		14
	76D	AN960D416	. . WASHER.		2
	76F	BACN10JC4	. . NUT		10
	76G	BACN10JC3	. . NUT		2
R	76H	BACN10JC4	. . NUT, (DELETED BY 707 S/LTR 27-3).	0150	2
R	76H	BACN10JC4	. . NUT	5199	2
R	76H	BACN10JC4	. . NUT, (ADDED BY SAB REQUEST)	5199	2
R	76H	BACN10HR4CS	. . NUT, (ADDED BY 707 S/LTR 27-3).	0150	2
			-------*-------		
	77	NAS516-1	. . . FITTING		1
	78	BACB10C135	. . . BEARING		1
	79	6-83219-3	. . . SUPPORT		1
	80	6-83592-4	. . SUPPORT ASSY, WING STATION 779.96 BEARING		1
			ATTACHING PARTS		
	80A	NAS1104-33W	. . BOLT.		1
	80B	NAS1104-35W	. . BOLT.		1
	80C	AN960D416	. . WASHER.		2
	80D	NAS679A4W	. . NUT		2
			-------*-------		
	81	NAS516-1	. . . FITTING		1
	82	BACB10C135	. . . BEARING		1
	83	6-83592-3	. . . SUPPORT, WING STATION 779.96.		1
	84	AN7510-1	. . PLATE		1
		9-64578-41	. . SPAR INSTL, (LH ONLY)		1
		9-64578-42	. . SPAR INSTL, (RH ONLY)		1
	84A	BACR15AZ6-5	. . . RIVET		8
	84B	BACB30LU3-4	. . . SCREW		10
	84C	BACB30LU3-5	. . . SCREW		3
	84D	BACB30LU3-6	. . . SCREW		3
	84E	AN960D10	. . . WASHER.		13
	84F	BACS40A13-55	. . . SHIM.		1
	84G	BACS40A13-61	. . . SHIM.		1
	84H	BACS40A13-32	. . . SHIM.		5
	84J	BACS40A13-131	. . . SHIM.		1
	84K	BACC30K6	. . . COLLAR.		8
	84M	BACN10JC3	. . . NUT		16
	85	9-64578-39	. . . SPAR ASSY, (LH ONLY).		1
	85	9-64578-40	. . . SPAR ASSY, (RH ONLY).		1
	86	5-96179-1	. . . . SUPPORT, WING STATION 730.95 (LH ONLY).		1
	86	5-96179-2	. . . . SUPPORT, WING STATION 730.95 (RH ONLY).		1
	87	50-8315	. . . . SUPPORT, WING STATION 779.96.		1
	88	5-95846	. . . . SUPPORT		5
	89	5-96181	. . . . SUPPORT, WING STATION 949.174		1
			ATTACHING PARTS		
	89B	AN470D5	. . . . RIVET		6
	89C	AN470D6	. . . . RIVET		36
	89D	BACR15AY6-4	. . . . RIVET		8

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	3 89E	BACR15AZ6-4	. . . . RIVET		2
	89F	BACR15AZ6-5	. . . . RIVET		4
	89G	BACR15AY6-6	. . . . RIVET		4
	89H	BAC830LU3-3	. . . . SCREW		10
	89J	BAC830LU3-5	. . . . SCREW		6
	89K	BAC830AL10-8	. . . . BOLT		4
	89N	BACS40A13-24	. . . . SHIM		1
	89P	BACS40A13-55	. . . . SHIM		1
	89Q	BACS40A13-78	. . . . SHIM		1
	89S	BACN10JC3	. . . . NUT		16
	89T	AN960D10	. . . . WASHER		3
	89U	BACS40A13-32	. . . . SHIM		6
			-------*-------		
	90	65-2312-1	. . WEIGHT, NOSE BALANCE		1
	91	65-2312-2	. . WEIGHT, NOSE BALANCE		1
	92	65-2312-3	. . WEIGHT, NOSE BALANCE		1
	93	65-2312-4	. . WEIGHT, NOSE BALANCE		1
	94	50-2477-17	. . WEIGHT, NOSE BALANCE		14
	96	50-2477-18	. . WEIGHT, NOSE BALANCE		2
	98	50-2477-19	. . WEIGHT, NOSE BALANCE		1
	100	50-2477-20	. . WEIGHT, NOSE BALANCE		1
	102	50-2477-21	. . WEIGHT, NOSE BALANCE		1
	105	5-88190-3117	. . WEIGHT, BALANCE		1
	106	5-88190-3118	. . WEIGHT, BALANCE		1
	110	66-9900	. . WEIGHT, NOSE BALANCE		AR
	111	66-9900-1	. . WEIGHT, NOSE BALANCE		AR
R	111A	9-64026-3023	. TAB ASSY, HONEYCOMB (USED ON 5-88190-3069, -3141, -3159 AND -3167) (SEE FIG. 20) (FOR OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (LH ONLY)	0150	1
R	111A	9-64026-3023A	. TAB ASSY, HONEYCOMB (USED ON 5-88190-3069, -3141, -3159, -3167) (SEE FIG. 20) (FOR OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (LH ONLY)	5151	1
R	111A	9-64026-3024	. TAB ASSY, HONEYCOMB (USED ON 5-88190-3070, -3142, -3160 AND -3168) (SEE FIG. 20) (FOR OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (RH ONLY)	0150	1
R	111A	9-64026-3024A	. TAB ASSY, HONEYCOMB (USED ON 5-88190-3070, -3142, -3160, -3168) (SEE FIG. 20) (FOR OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (RH ONLY)	5151	1
	112		AILERON INSTL, OUTBOARD WING (FOR REF SEE FIG. 1)		RF

MISSING ITEM NUMBERS ARE NOT APPLICABLE

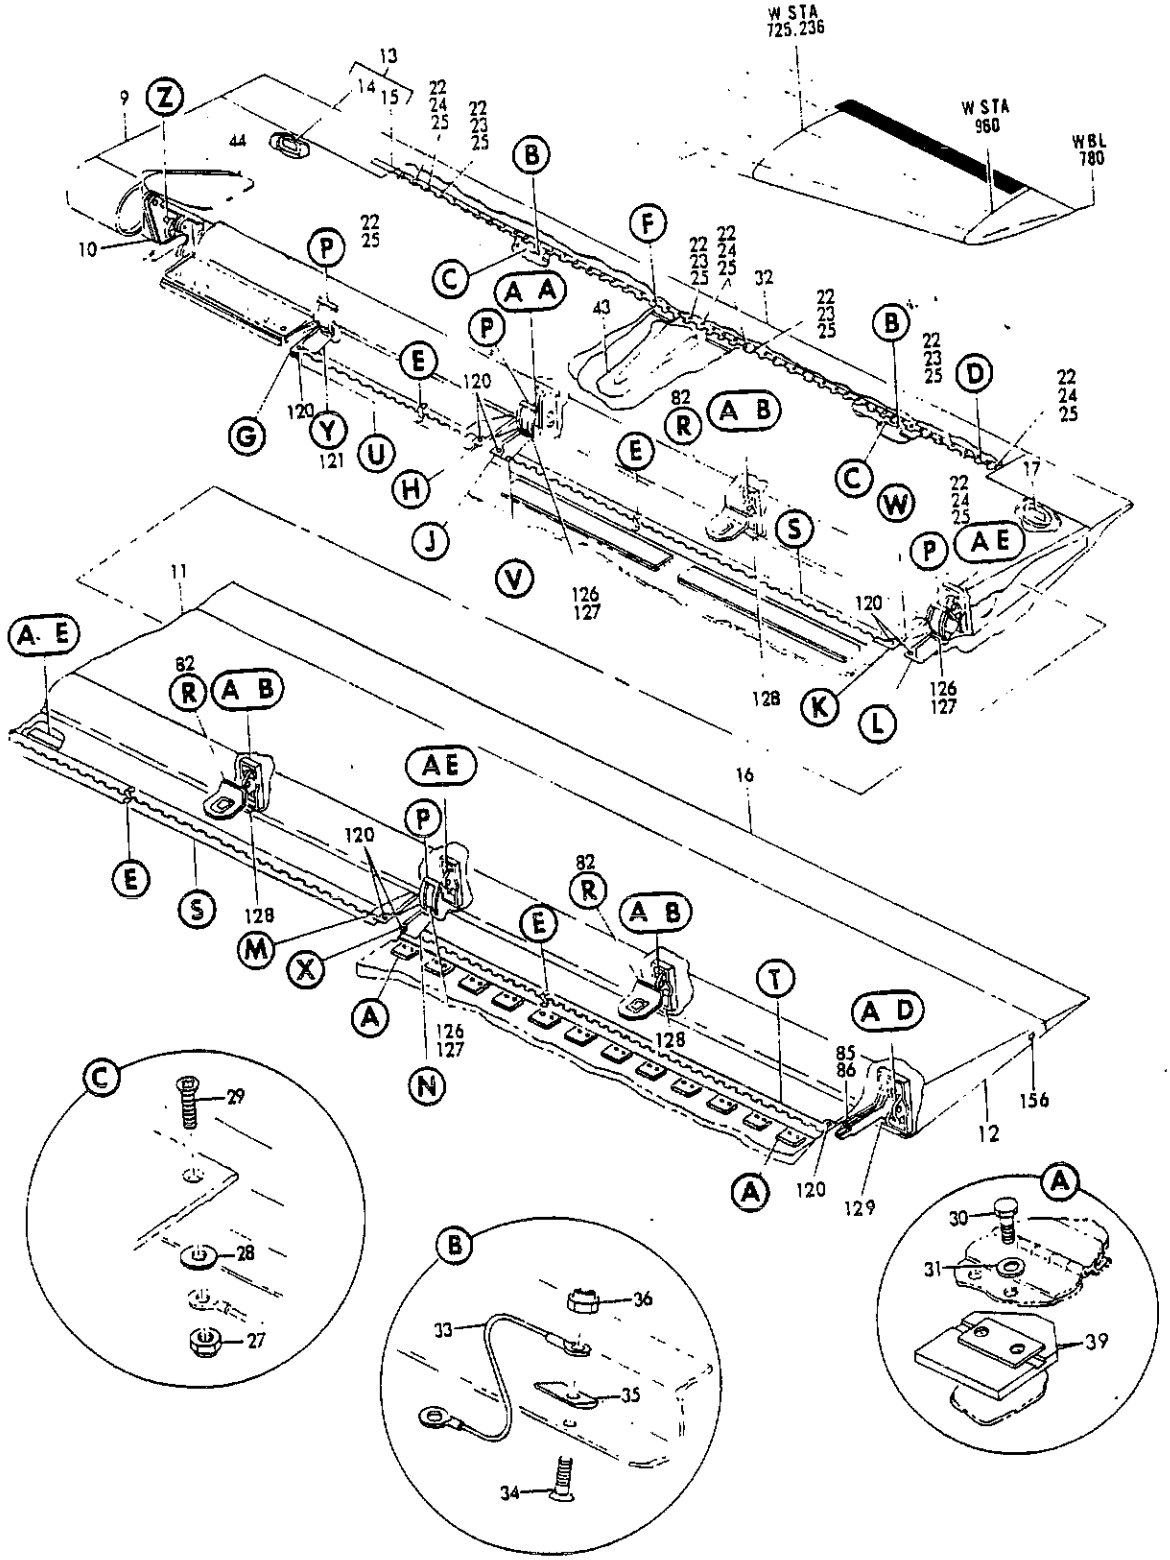


FIGURE 3A. AILERON ASSY, OUTBOARD WING (SHEET 1)

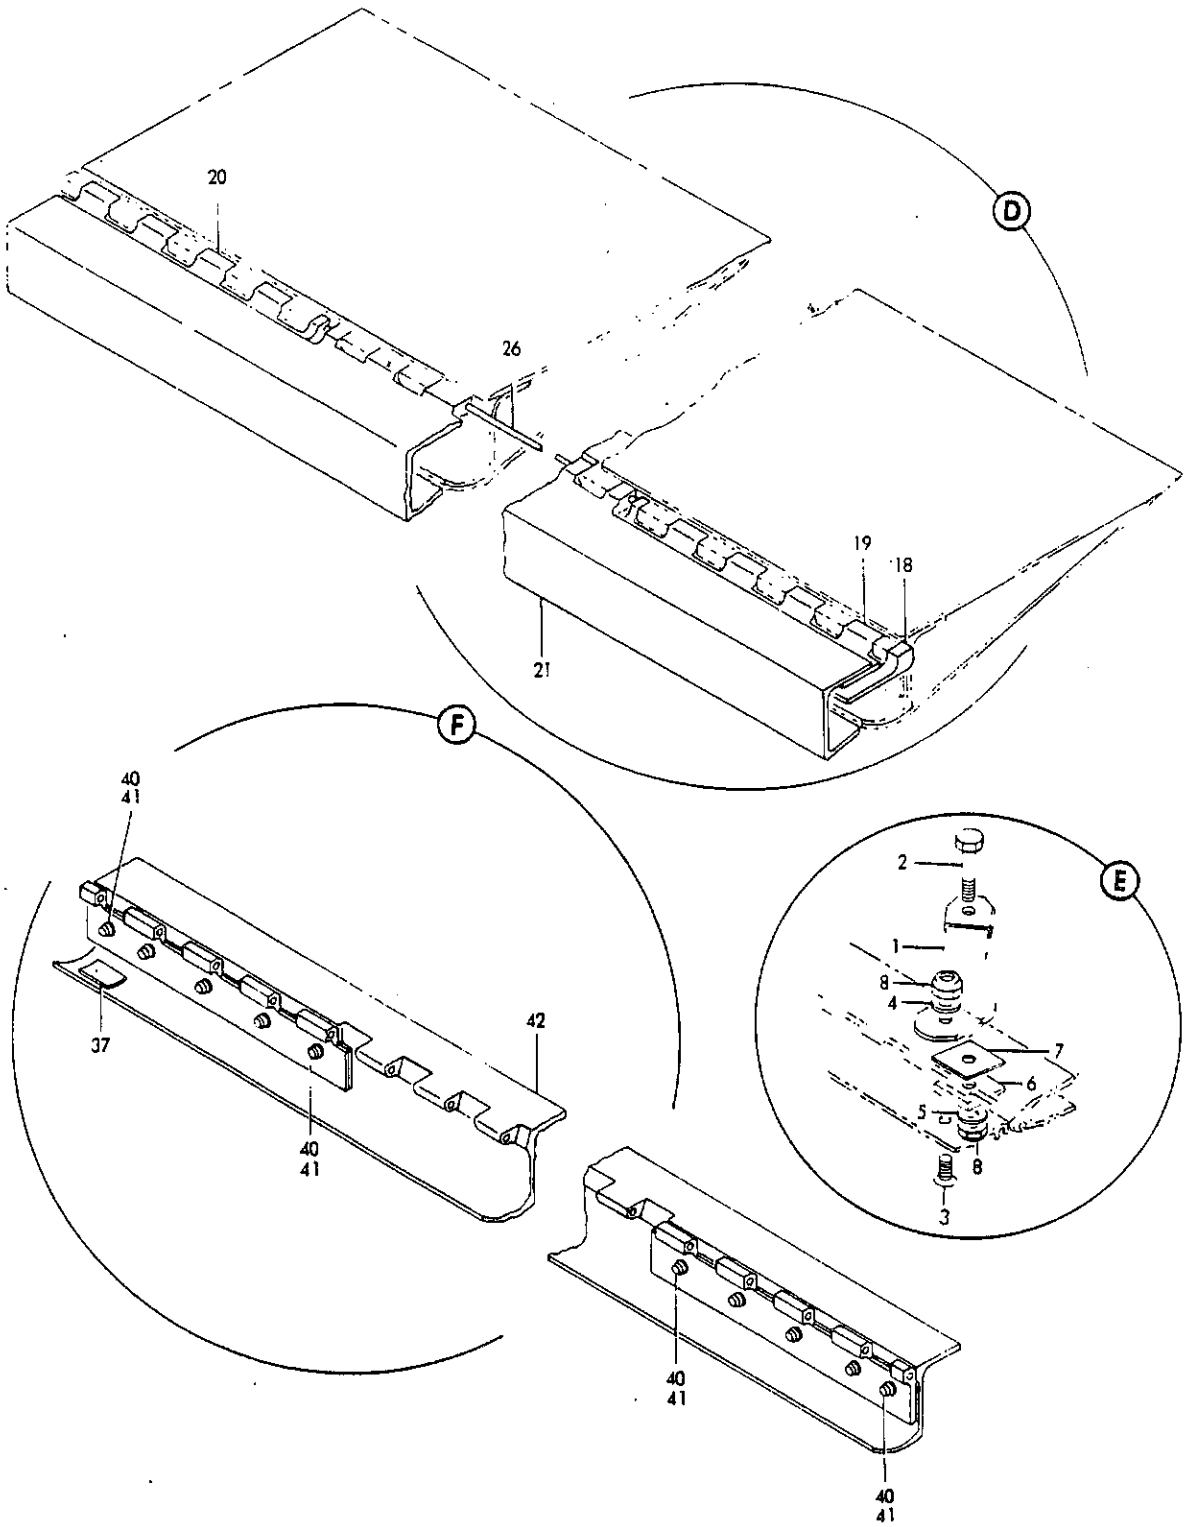


FIGURE 3A. AILERON ASSY, OUTBOARD WING (SHEET 2)

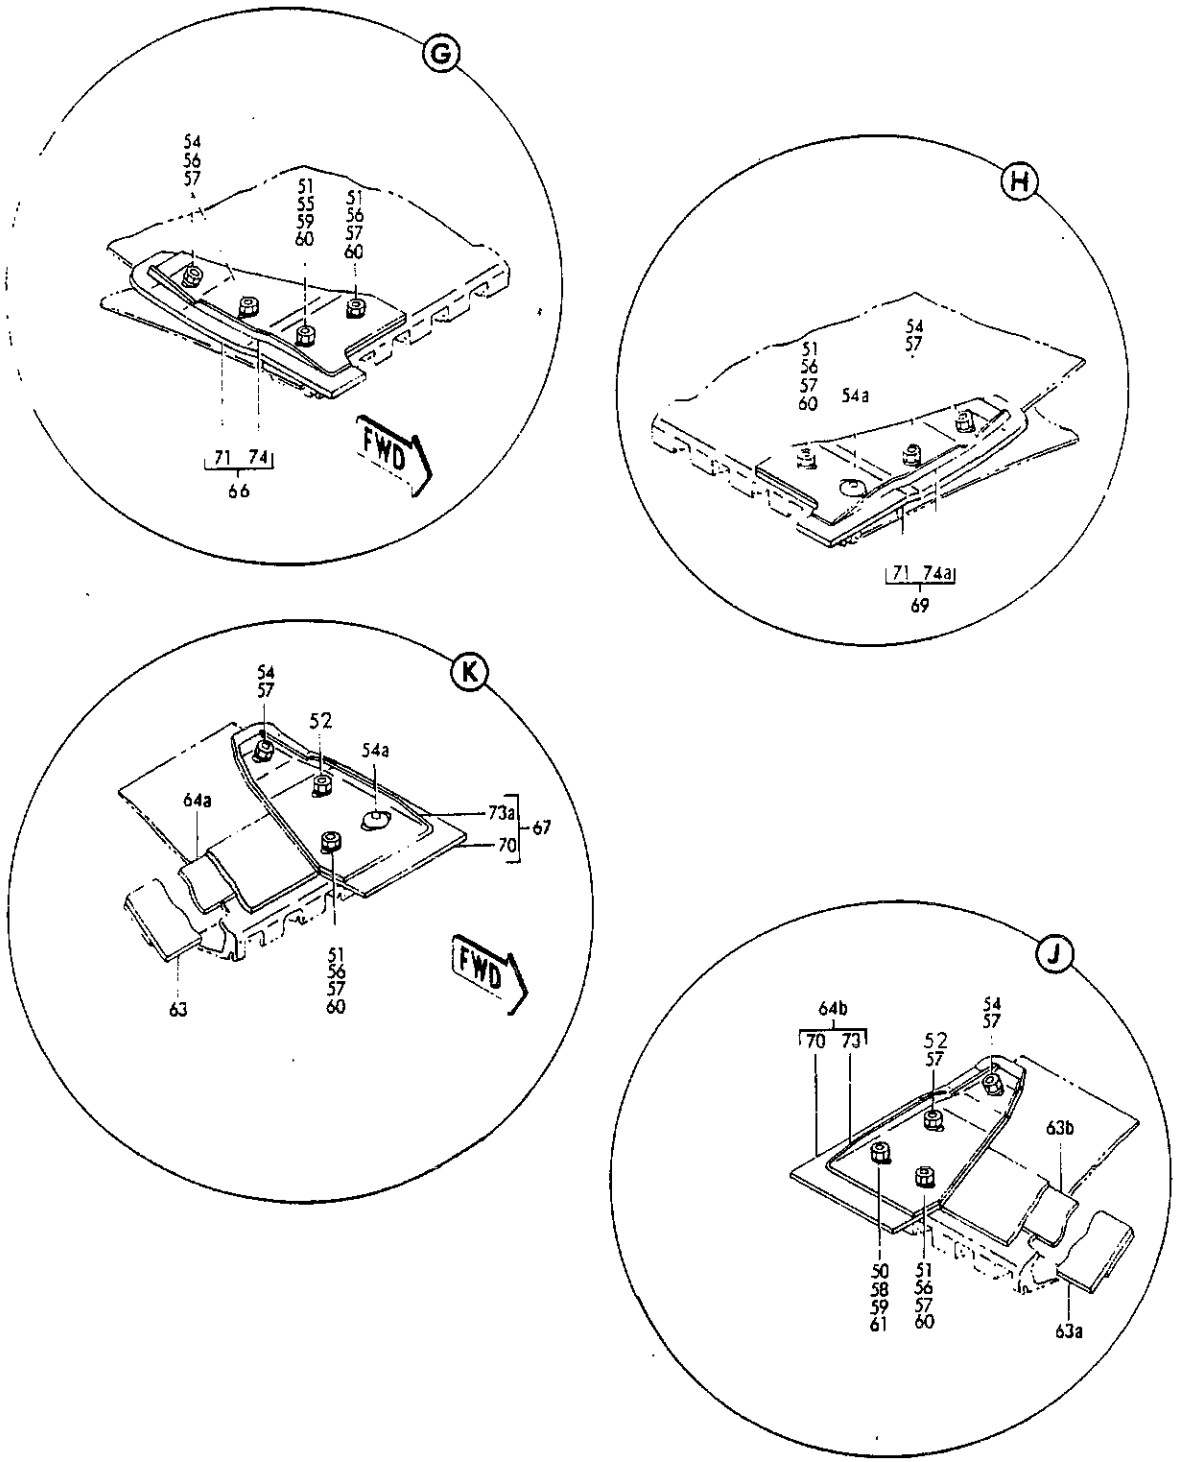


FIGURE 3A. AILERON ASSY, OUTBOARD WING (SHEET 3)

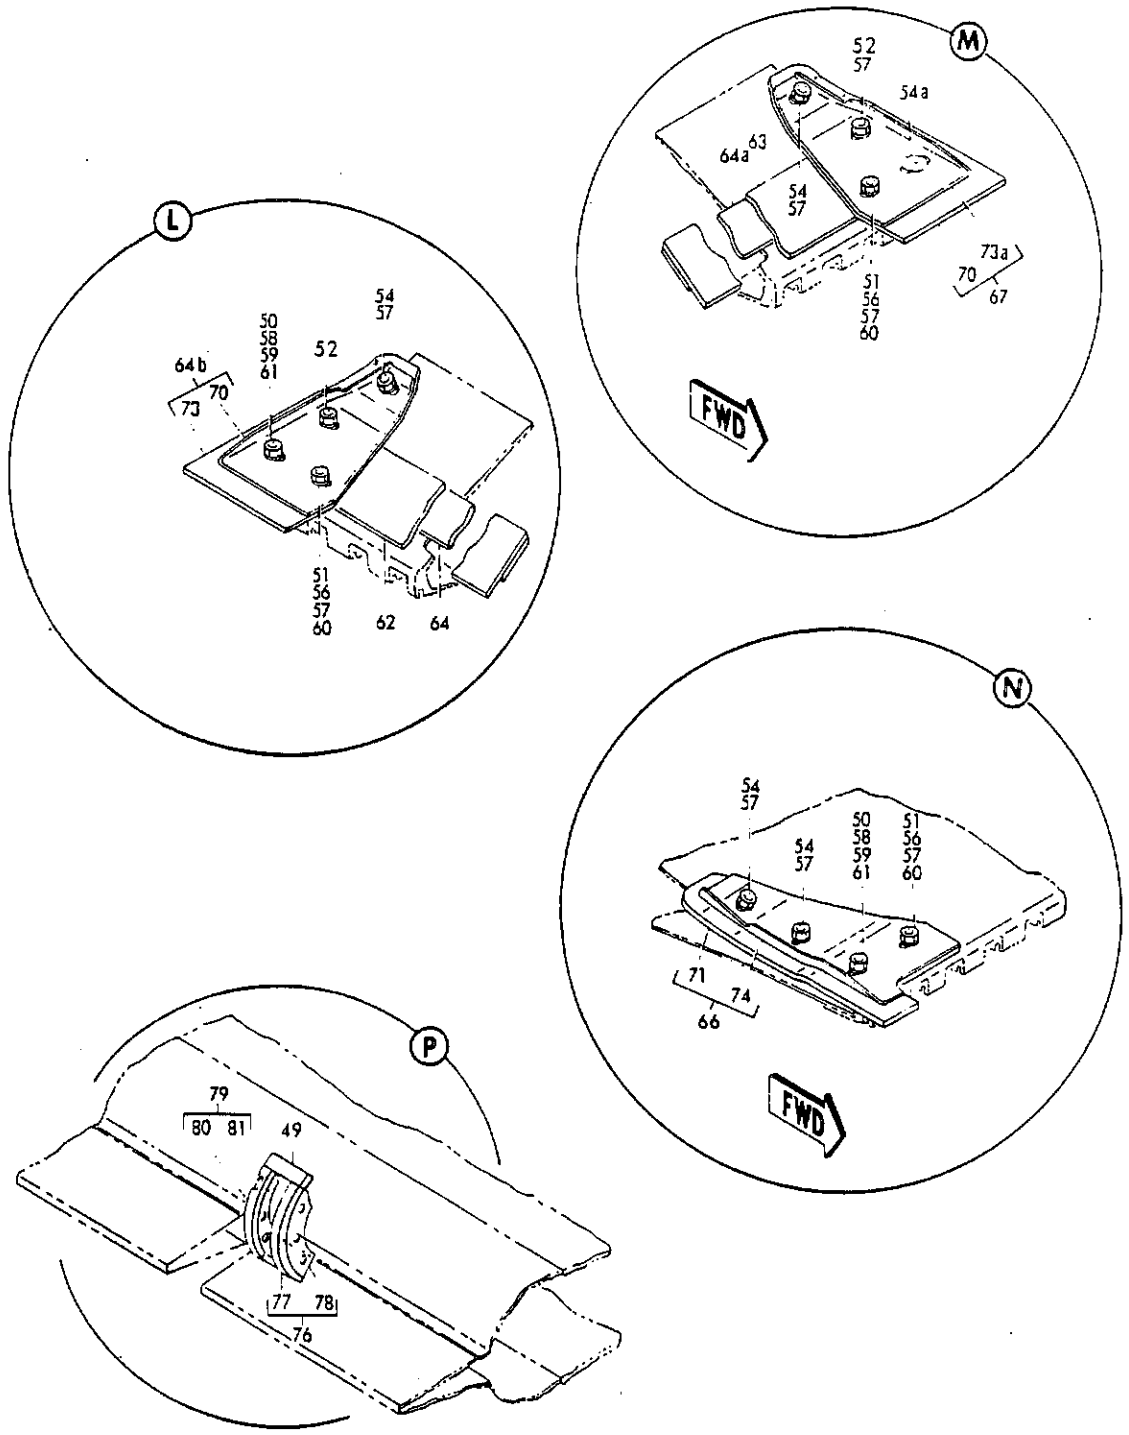


FIGURE 3A. AILERON ASSY, OUTBOARD WING (SHEET 4)

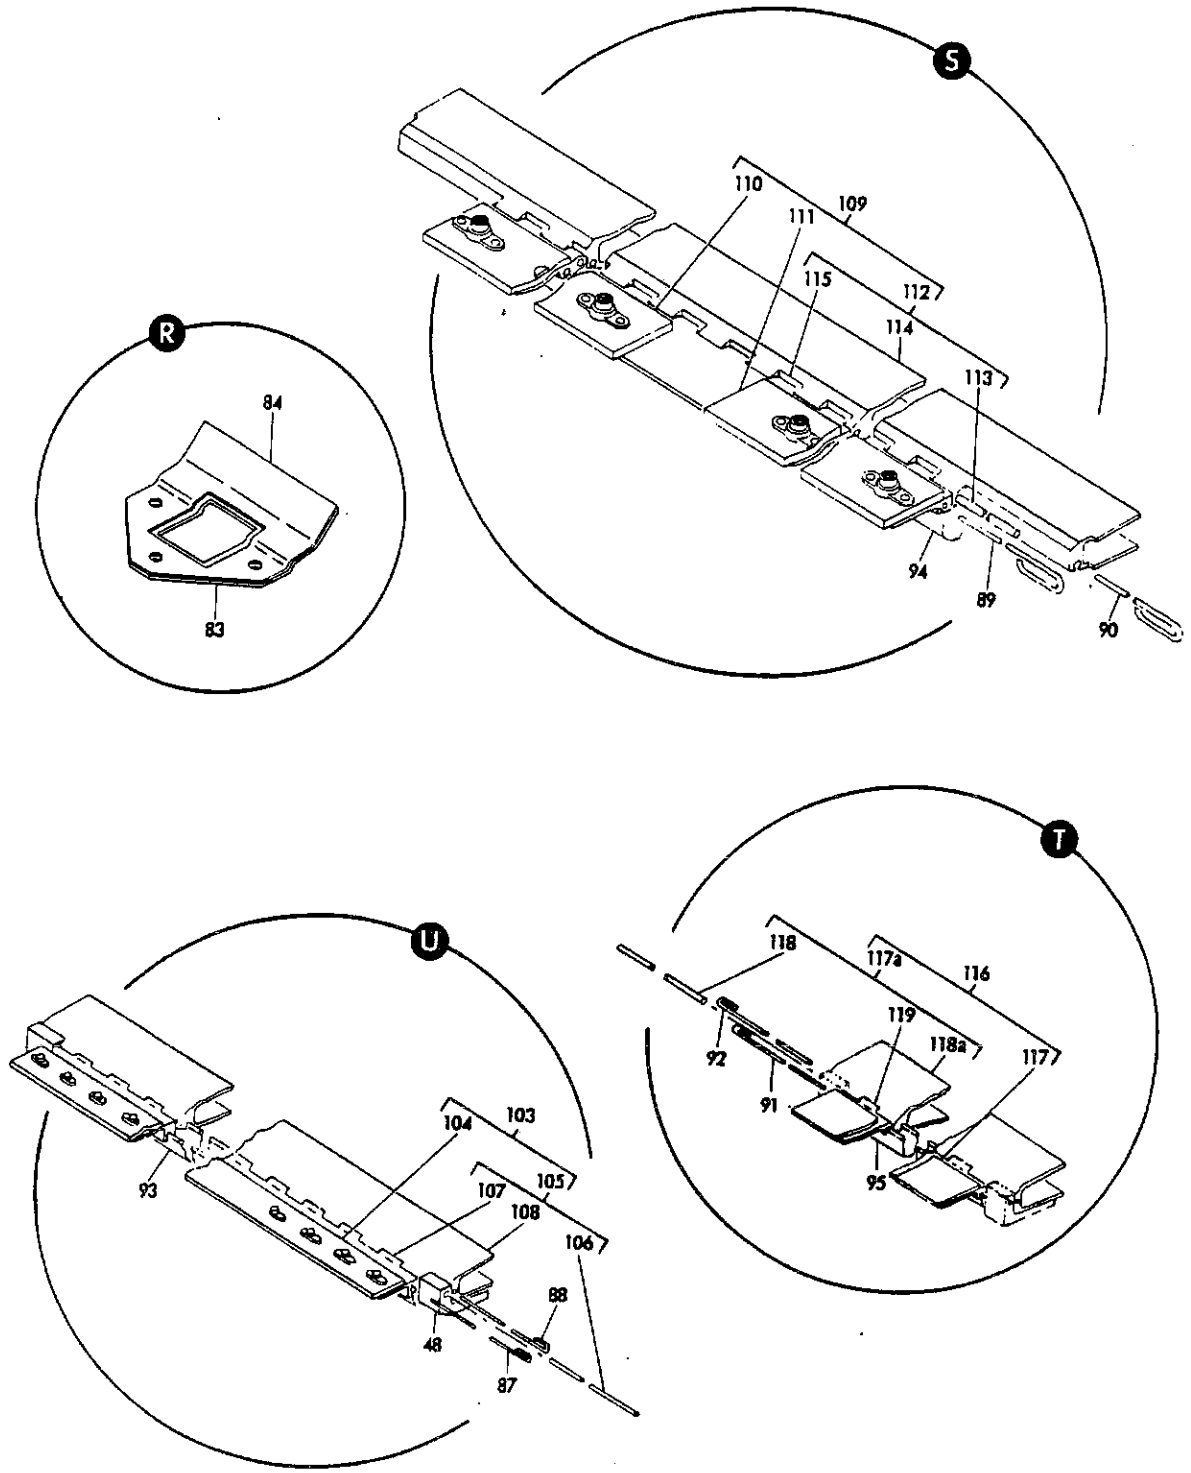


FIGURE 3A. AILERON ASSY, OUTBOARD WING (SHEET 5)

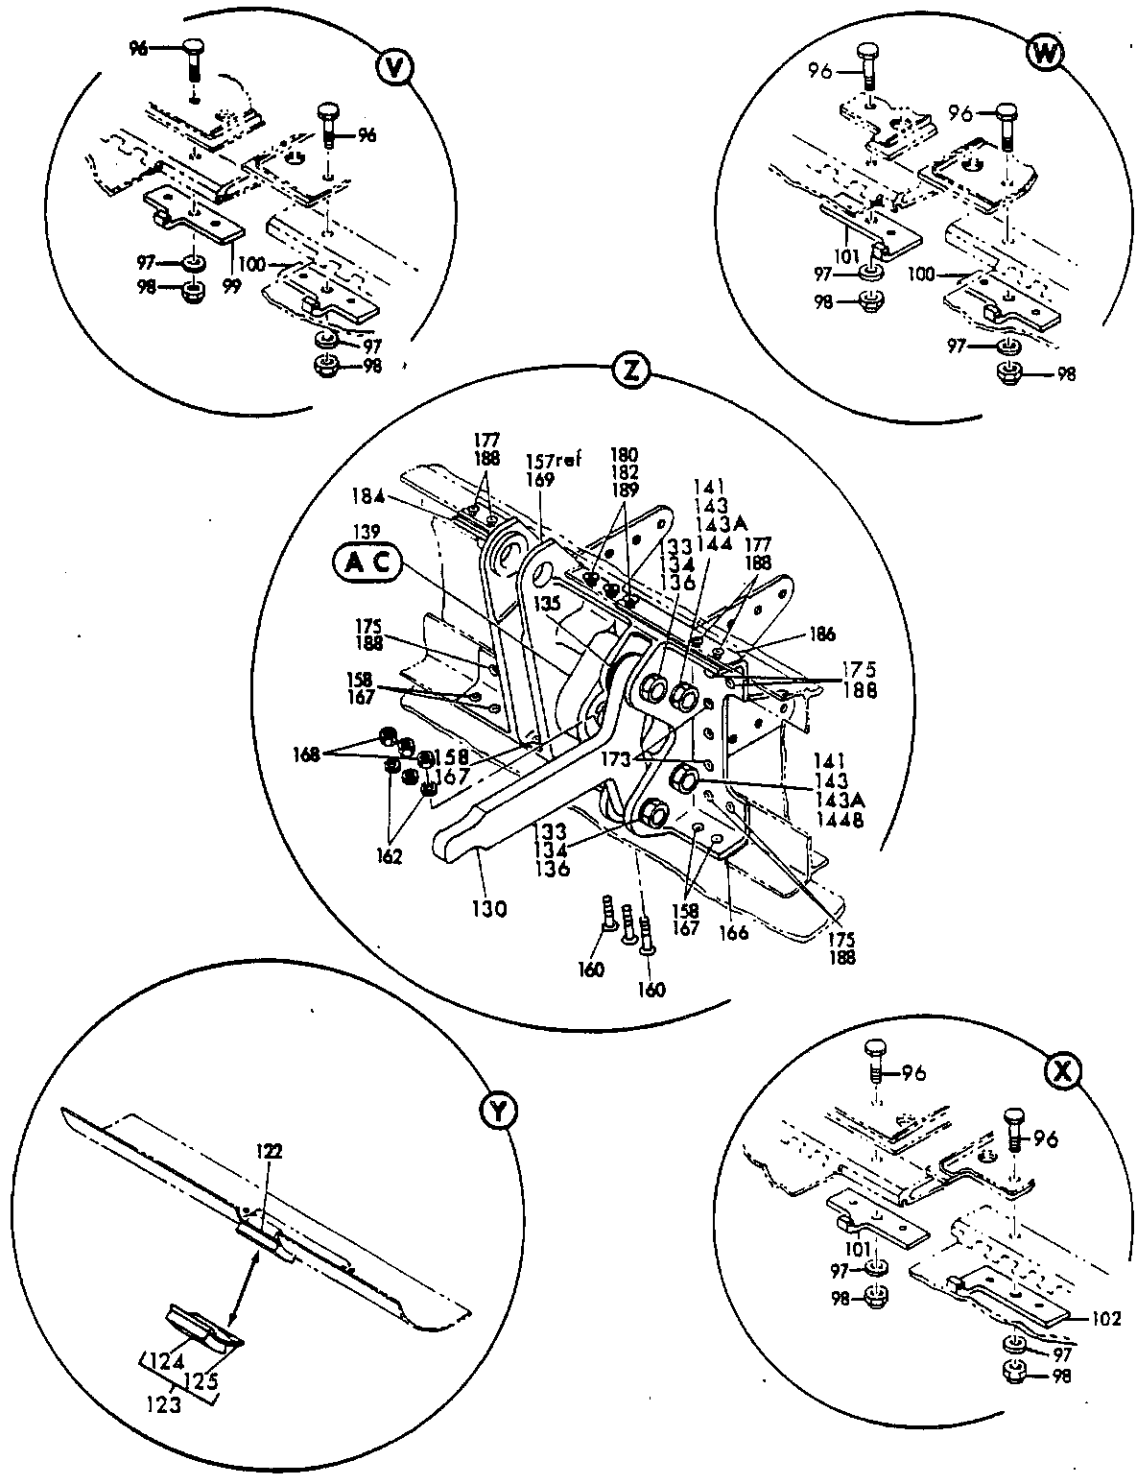


FIGURE 3A. AILERON ASSY, OUTBOARD WING (SHEET 6)

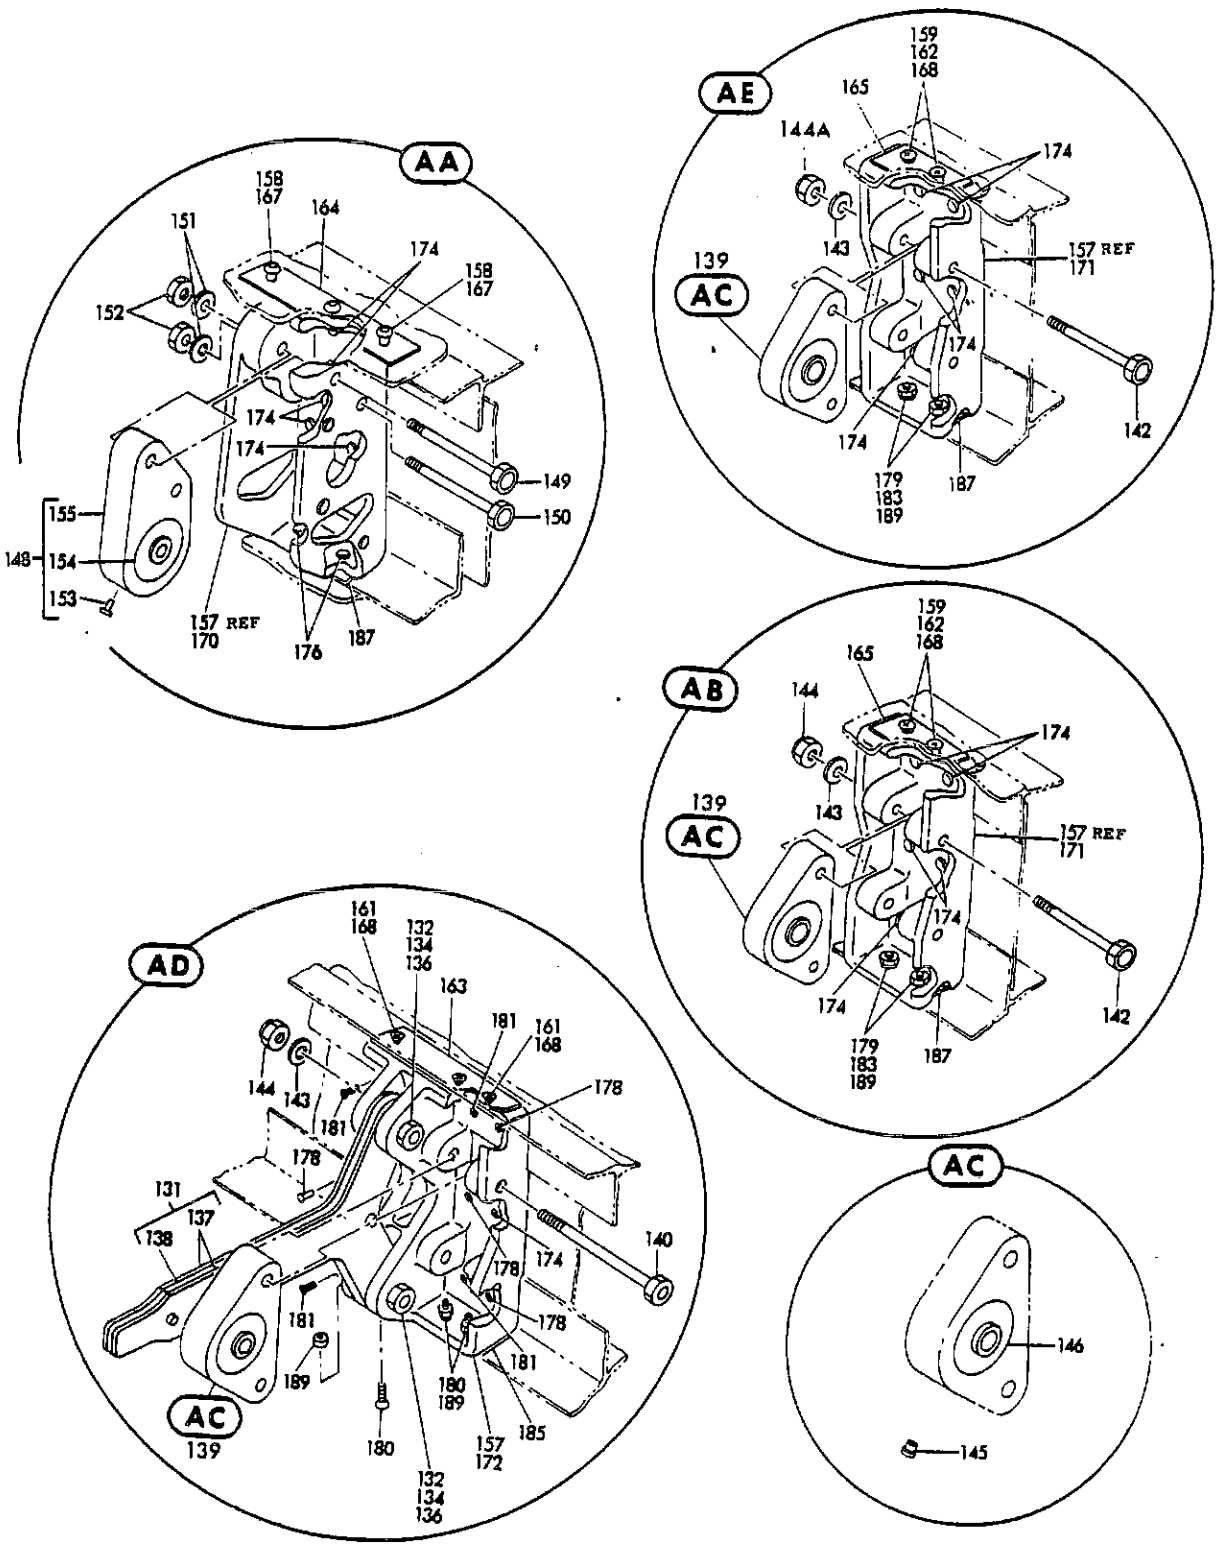


FIGURE 3A. AILERON ASSY, OUTBOARD WING (SHEET 7)

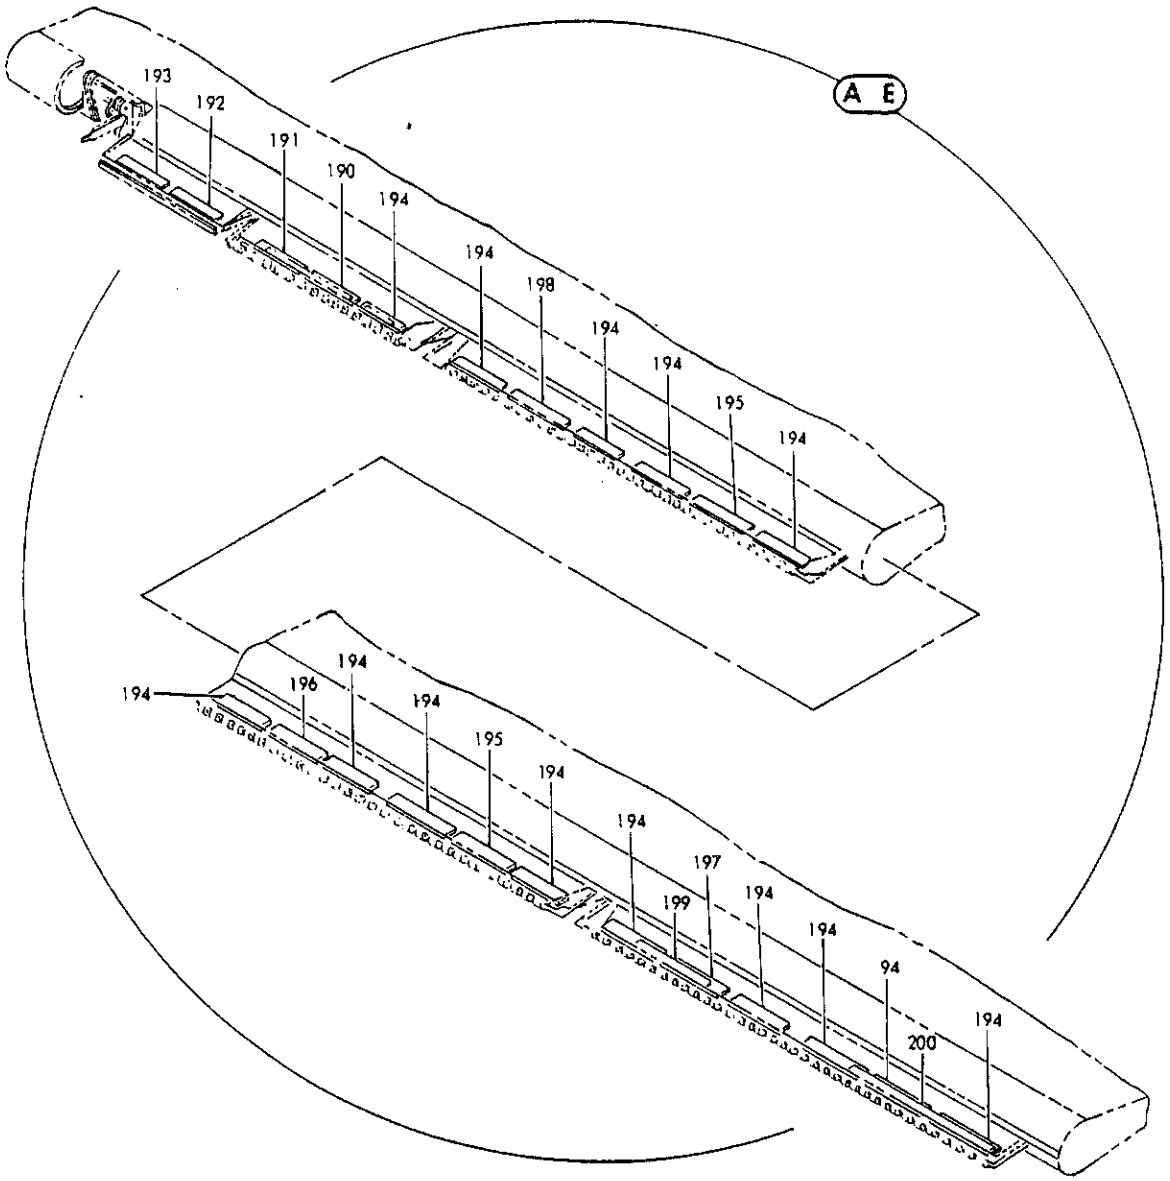


FIGURE 3A. AILERON ASSY, OUTBOARD WING (SHEET 8)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3A		5-88190-3163	AILERON ASSY, OUTBOARD WING (LH) (WITHOUT TAB) (FOR . . OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (FOR SPARES ONLY) (CONSISTS OF PARTS DENOTED BY (S)) (REPLACEMENT FOR 5-88190-3097, -3145, -3107 AND -3147) (FOR OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (FOR SPARES ONLY)		RF
		5-88190-3107	AILERON ASSY, OUTBOARD WING (LH) (WITHOUT TAB) (FOR . . OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (FOR SPARES ONLY) (CONSISTS OF PARTS DENOTED BY (S)) (FOR REPLACEMENT ORDER 5-88190-3163 (FOR OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (FOR SPARES ONLY))		RF
		5-88190-3147	AILERON ASSY, OUTBOARD WING (LH) (WITHOUT TAB) (FOR . . OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (FOR SPARES ONLY) (CONSISTS OF PARTS DENOTED BY (S)) (FOR REPLACEMENT ORDER 5-88190-3163 (FOR OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (FOR SPARES ONLY))		RF
		5-88190-3164	AILERON ASSY, OUTBOARD WING (RH) (WITHOUT TAB) (FOR . . OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (FOR SPARES ONLY) (CONSISTS OF PARTS DENOTED BY (S)) (REPLACEMENT FOR 5-88190-3098, -3146, -3108 AND -3148) (FOR OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (FOR SPARES ONLY))		RF
		5-88190-3108	AILERON ASSY, OUTBOARD WING (RH) (WITHOUT TAB) (FOR . . OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (FOR SPARES ONLY) (CONSISTS OF PARTS DENOTED BY (S)) (FOR REPLACEMENT ORDER 5-88190-3164 (FOR OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (FOR SPARES ONLY))		RF
		5-88190-3148	AILERON ASSY, OUTBOARD WING (RH) (WITHOUT TAB) (FOR . . OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (FOR SPARES ONLY) (CONSISTS OF PARTS DENOTED BY (S)) (FOR REPLACEMENT ORDER 5-88190-3164 (FOR OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (FOR SPARES ONLY))		RF
1	S	BACJ40D10-12	. JUMPER ASSY		4
			ATTACHING PARTS		
2		BAC830LU3-3	. BOLT.		4
3	S	AN3-11A	. BOLT.		4
4	S	BACW10P63AL	. WASHER.		4
5	S	BACW10P44AL	. WASHER.		4
6	S	5-88190-23	. FILLER.		4
7	S	BACS40A13-29	. SHIM.		AR
8	S	NAS679A3W	. NUT		8
			-------*-------		
9	S	65-8435-3	. PANEL ASSY, (LH ONLY) UPPER INBOARD HALF HONEYCOMB. . SKIN (USED ON 5-88190-3103, -3069, -3097, -3145 AND -3107)		1
9	S	65-8435-3003	. PANEL ASSY, (LH ONLY) UPPER INBOARD HALF HONEYCOMB. . SKIN (FOR SPARES ONLY) (USED ON 5-88190-3163)		1
9	S	65-8435-4	. PANEL ASSY, (RH ONLY) UPPER INBOARD HALF HONEYCOMB. . SKIN (USED ON 5-88190-3104, -3070, -3098, -3146 AND -3108)		1
9	S	65-8435-3004	. PANEL ASSY, (RH ONLY) UPPER INBOARD HALF HONEYCOMB. . SKIN (FOR SPARES ONLY) (USED ON 5-88190-3164)		1
10	S	65-8435-1	. PANEL ASSY, (LH ONLY) LOWER INBOARD HALF HONEYCOMB. . SKIN (USED ON 5-88190-3103, -3069, -3163, -3097, -3145, -3107 AND -3147)		1
10	S	65-8435-3001	. PANEL ASSY, (LH ONLY) LOWER INBOARD HALF HONEYCOMB. . SKIN (USED ON 5-88190-3069 AND -3163)		1
10	S	65-8435-2	. PANEL ASSY, (RH ONLY) LOWER INBOARD HALF HONEYCOMB. . SKIN (USED ON 5-88190-3104, -3070, -3164, -3098, -3146, -3108 AND -3148)		1
10	S	65-8435-3002	. PANEL ASSY, (RH ONLY) LOWER INBOARD HALF HONEYCOMB. . SKIN (USED ON 5-88190-3070 AND -3164)		1
11	S	5-97697-1	. PANEL ASSY, UPPER HALF HONEYCOMB SKIN (NOT USED ON. . 5-88190-3163 AND -3164)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
3A 11	S 5-97697-3012	. PANEL ASSY, UPPER HALF HONEYCOMB SKIN (FOR SPARES ONLY) (USED ON 5-88190-3163 AND -3164)		1
12	S 5-97697-2	. PANEL ASSY, UPPER HALF HONEYCOMB SKIN (FOR SPARES ONLY) (USED ON 5-88190-3097, 3145, 3107, 3098, -3146 AND -3108)		1
12	S 5-97697-3013	. PANEL ASSY, UPPER HALF HONEYCOMB SKIN (FOR SPARES ONLY) (USED ON 5-88190-3163 AND -3164)		1
	S 9-64577-65	. TRAILING EDGE INSTL, (LH ONLY) (FOR SPARES ONLY). (USED ON 5-88190-3097 AND -3107) (OPTIONAL 9-64577-3027)		1
	S 9-64577-3027	. TRAILING EDGE INSTL, (LH ONLY) (9-64577-47 REWORKED BY DWG NO. 69-24044) (FOR SPARES ONLY) (USED ON 5-88190-3098 AND -3108) (OPTIONAL TO 9-64577-65)		1
	S 9-64577-83	. TRAILING EDGE INSTL, (LH ONLY) (USED ON 5-88190-3069, -3163, -3145 AND -3147)		1
	S 9-64577-66	. TRAILING EDGE INSTL, (RH ONLY) (FOR SPARES ONLY). (USED ON 5-88190-3098 AND -3108) (OPTIONAL 9-64577-3028)		1
	S 9-64577-3028	. TRAILING EDGE INSTL, (RH ONLY) (9-64577-47 REWORKED BY DWG NO. 69-24044) (FOR SPARES ONLY) (USED ON 5-88190-3097 AND -3107) (OPTIONAL TO 9-64577-66)		1
	S 9-64577-84	. TRAILING EDGE INSTL, (RH ONLY) (USED ON 5-88190-3070, -3164, -3146 AND -3148)		1
13	S 9-64577-57	. . TRAILING EDGE ASSY, INBOARD (USED ON 9-64577-3027)		1
13	S 9-64577-73	. . TRAILING EDGE ASSY, INBOARD (USED ON 9-64577-65).		1
13	S 9-64577-3037	. . TRAILING EDGE ASSY, INBOARD (USED ON 9-64577-83).		1
13	S 9-64577-58	. . TRAILING EDGE ASSY, INBOARD (USED ON 9-64577-3028)		1
13	S 9-64577-74	. . TRAILING EDGE ASSY, INBOARD (USED ON 9-64577-66).		1
13	S 9-64577-3038	. . TRAILING EDGE ASSY, INBOARD (USED ON 9-64577-84).		1
14	S 9-64577-3030	. . . NAMEPLATE		1
15	S 3-93581-4	. . . RETAINER ASSY, (USED ON 9-64577-57, -73, -58 AND -74)		1
16	S 9-64577-49	. . TRAILING EDGE ASSY, (USED ON 9-64577-3027).		1
16	S 9-64577-67	. . TRAILING EDGE ASSY, (USED ON 9-64577-65).		1
16	S 9-64577-3035	. . TRAILING EDGE ASSY, (USED ON 9-64577-83).		1
16	S 9-64577-50	. . TRAILING EDGE ASSY, (USED ON 9-64577-3028).		1
16	S 9-64577-68	. . TRAILING EDGE ASSY, (USED ON 9-64577-66).		1
16	S 9-64577-3036	. . TRAILING EDGE ASSY, (USED ON 9-64577-84).		1
17	S 9-64577-3030	. . . NAMEPLATE		1
18	S 63-2859-1	. . RETAINER, (LH ONLY) TAB HINGE PIN (USED ON. 9-64577-3027)		1
18	S 66-14038-1	. . RETAINER, (LH ONLY) HINGE PIN (USED ON 9-64577-65 AND -83)		1
18	S 63-2859-2	. . RETAINER, (RH ONLY) TAB HINGE PIN (USED ON. 9-64577-3028)		1
18	S 66-14038-2	. . RETAINER, (RH ONLY) HINGE PIN (USED ON 9-64577-66 AND -84)		1
19	S 69-6177-2	. . HINGE HALF, BEAM.		1
20	S 69-6177-1	. . HINGE HALF, BEAM.		1
21	S 9-64577-35	. . HINGE HALF, (LH ONLY)		1
21	S 9-64577-36	. . HINGE HALF, (RH ONLY)		1
		ATTACHING PARTS		
22	S BACB30ABP3-3A	. . BOLT.		54
23	S AN960PD10	. . WASHER.		42
24	S AN960PD10L	. . WASHER.		11
25	S NAS679A3W	. . NUT		54
		-------*-------		
26	S 5-88190-3027	. PIN, (ALTERED FROM MS20253-2-8080).		1
27	S NAS679A3W	. NUT		2
28	S BACW10P41AL	. WASHER.		2
29	S BACB30LU3-2	. BOLT.		2
30	S AN3-6A	. BOLT, (WHEN WEIGHTS ARE USED)		AR
30	S NAS221-7	. SCREW, (USED WITH AN960-10L) (WHEN NO WEIGHTS ARE USED)		AR
31	S AN960-10L	. WASHER, (USED WITH NAS221-7) (WHEN NO WEIGHTS ARE USED)		AR
	S 69-8929-1	. FAIRING INSTL, (LH ONLY).		1
	S 69-8929-2	. FAIRING INSTL, (RH ONLY).		1
43	S 69-8929-3	. . FAIRING, (LH ONLY).		1
43	S 69-8929-4	. . FAIRING, (RH ONLY).		1
	S 5-97849-1	. FAIRING INSTL, (LH ONLY).		1
	S 5-97849-2	. FAIRING INSTL, (RH ONLY).		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
3A 44	S 5-97849-3	. . FAIRING, (LH ONLY).		1
44	S 5-97849-4	. . FAIRING, (RH ONLY).		1
		ATTACHING PARTS		
	S NAS514P1032-12	. . SCREW		5
		-------*-------		
48	S 66-4382-1651	. RETAINER, (LH ONLY)		1
		(OPTIONAL 66-3656-3)		
48	S 66-3656-3	. RETAINER, (LH ONLY)		1
		(OPTIONAL TO 66-4382-1651)		
48	S 66-4382-1652	. RETAINER, (RH ONLY)		1
		(OPTIONAL 66-3656-4)		
48	S 66-3656-4	. RETAINER, (RH ONLY)		1
		(OPTIONAL TO 66-4382-1652)		
49	S 5-88190-24	. SEAL, (BAC1523-17 X 2.1 IN. LG)		4
50	S NAS1303-10	. BOLT.		3
51	S NAS1303-12	. BOLT.		8
52	S AN3-5A	. BOLT.		4
54	S AN3-5A	. BOLT.		10
54A	S AN470D6	. RIVET		3
55	S AN960D10L	. WASHER.		1
57	S BACW10P43AL	. WASHER.		19
58	S BACW10AN3	. WASHER.		3
59	S NAS620-10	. WASHER.		4
60	S NAS679A3W	. NUT		8
61	S BACN10FD35	. NUT		3
62	S 69-21053-1	. WEIGHT.		1
63	S 69-21053-3	. WEIGHT.		2
63A	S 69-21053-7	. WEIGHT.		1
63B	S 69-21054-1	. FILLER.		1
64	S 69-21054-2	. FILLER.		1
64A	S 69-21054-3	. FILLER.		2
64B	S 66-14032-1	. SEAL ASSY		2
66	S 60-2078-1	. SEAL ASSY		2
67	S 66-14032-2	. SEAL ASSY		2
69	S 60-2078-2	. SEAL ASSY		1
70	S 66-14032-7	. . SEAL, (USED ON 66-14032-1 AND -2)		1
71	S 60-2078-5	. . SEAL, (USED ON 60-2078-1 AND -2).		1
73	S 66-14032-5	. . RETAINER, (USED ON 66-14032-1).		1
73A	S 66-14032-6	. . RETAINER, (USED ON 66-14032-2).		1
74	S 60-2078-3	. . RETAINER, (USED ON 60-2078-1)		1
74A	S 60-2078-4	. . RETAINER, (USED ON 60-2078-2)		1
76	S 60-2077-7	. SEAL ASSY		4
		ATTACHING PARTS		
	S AN3-4A	. BOLT.		12
	S AN960D10	. WASHER.		12
	S NAS679A3W	. NUT		12
		-------*-------		
77	S 60-2077-5	. . SEAL, (BAC1523-13 X 5.2 IN. LG)		1
78	S 60-2077-9	. . RETAINER.		1
79	S 60-2077-8	. SEAL ASSY		4
		ATTACHING PARTS		
	S AN3-4A	. BOLT.		12
	S AN960D10	. WASHER.		12
	S NAS679A3W	. NUT		12
		-------*-------		
80	S 60-2077-5	. . SEAL, (BAC1523-13 X 5.2 IN. LG)		1
81	S 60-2077-10	. . RETAINER.		1
82	S 60-1593-3000	. SEAL ASSY		3
		ATTACHING PARTS		
	S AN3-5A	. BOLT.		36
	S AN960D10	. WASHER.		18
	S NAS679A3W	. NUT		18
		-------*-------		
83	S 60-1593-2002	. . SEAL.		1
84	S 60-1593-2001	. . RETAINER.		1
85	S 60-1469-1	. SEAL ASSY, (LH ONLY).		1
85	S 60-1469-2	. SEAL ASSY, (RH ONLY).		1
		ATTACHING PARTS		
	S AN3-4A	. BOLT.		2
	S AN960D10	. WASHER.		2
		-------*-------		
86	S 60-1469-5	. . SEAL, (BAC1523-17 X 4.6 IN. LG)		AR
87	S BACP18G1-2476	. PIN		1
88	S BACP18G2-2495	. PIN		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3A 89	S BACP18G1-4874	. PIN		2
90	S BACP18G2-5218	. PIN		2
91	S BACP18G1-5504	. PIN		1
92	S BACP18G2-5474	. PIN		1
93	S 60-2099	. SEAL, FABRIC.		1
94	S 60-2099-1	. SEAL, FABRIC.		2
95	S 60-2099-2	. SEAL, FABRIC.		1
96	S AN3-11A	. BOLT.		6
97	S AN960D10L	. WASHER.		6
98	S BACN10BY53W	. NUT		6
99	S 66-3656-2	. RETAINER.		1
100	S 66-3655-1	. RETAINER.		2
101	S 66-3655-2	. RETAINER.		2
102	S 66-3656-1	. RETAINER.		1
103	S 65-27063-14	. HINGE ASSY.		1
104	S 65-27063-13	. . WEIGHT.		1
105	S 69-1893-6	. . HINGE ASSY.		1
106	S 69-1893-5	. . . PIN, ALTERED FROM AN253-2-2492)		1
107	S 69-1893-2	. . . HINGE HALF.		1
108	S 69-1893-7	. . . HINGE HALF.		1
109	S 65-27063-17	. HINGE ASSY, (LH ONLY)		2
109	S 65-27063-18	. HINGE ASSY, (RH ONLY)		2
110	S 65-27063-9	. . WEIGHT.		1
111	S 65-27063-10	. . WEIGHT.		1
112	S 5-96763-23	. . HINGE ASSY.		1
113	S MS20253-2-4882	. . . PIN		1
114	S 5-96763-9	. . . HINGE HALF.		1
115	S 5-96763-10	. . . HINGE HALF, (ALTERED FROM;6-84583).		1
116	S 65-27063-15	. HINGE ASSY, (LH ONLY)		1
116	S 65-27063-16	. HINGE ASSY, (RH ONLY)		1
117	S 65-27063-8	. . WEIGHT.		1
117A	S 5-96763-19	. . HINGE ASSY, (LH ONLY)		1
117A	S 5-96763-20	. . HINGE ASSY, (RH ONLY)		1
118	S MS20253-2-5449	. . . PIN		1
118A	S 5-96763-11	. . . HINGE HALF, (LH ONLY)		1
118A	S 5-96763-12	. . . HINGE HALF, (RH ONLY)		1
119	S 5-96763-17	. . . HINGE HALF, (LH ONLY) (ALTERED FROM;6-84583).		1
119	S 5-96763-18	. . . HINGE HALF, (RH ONLY)		1
120	S NAS561P4-7	. PIN, SPRING		8
121	S 69-1898-1	. DOOR ASSY, (LH ONLY) (USED ON 5-88190-3107 AND -3147) (SPARES ONLY)		1
121	S 69-1898-17	. DOOR ASSY, (LH ONLY) (USED ON 5-88190-3163) (SPARES ONLY)		1
121	S 69-1898-2	. DOOR ASSY, (RH ONLY) (USED ON 5-88190-3108 AND -3148) (SPARES ONLY)		1
121	S 69-1898-18	. DOOR ASSY, (RH ONLY) (USED ON 5-88190-3164) (SPARES ONLY)		1
		ATTACHING PARTS		
	S BACB30LU3-2	. BOLT. -------*-------		64
122	S 69-1898-6	. . SEAL, (BAC1523-17 X 2.1 IN. LG) (USED ON 69-1898-1, -7, -2 AND -8)		1
123	S 69-50627-2	. . SEAL ASSY, (USED ON 69-1898-17 AND -18) (SPARES ONLY)		1
124	S 69-50627-4	. . . SEAL, (BAC1523-17 X 2.1 IN. LG) (USED ON. 69-50627-2) (SPARES ONLY)		1
125	S 69-50627-6	. . . RETAINER, (USED ON 69-50627-2) (SPARES ONLY).		1
126	S 90-1417-3000	. DOOR ASSY, (USED ON 5-88190-3107, -3147, -3108 AND. -3148) (SPARES ONLY)		1
		ATTACHING PARTS		
	S BACB30LU3-2	. BOLT. -------*-------		64
127	S 90-1417-9	. . SEAL, (BAC1523-17 X 2.1 IN. LG)		1
128	S 90-2866-3001	. DOOR ASSY, (SPARES ONLY).		1
129	S 90-1417-3003	. DOOR ASSY, (LH ONLY) (USED ON 5-88190-3163) (SPARES ONLY)		1
129	S 90-1417-3004	. DOOR ASSY, (RH ONLY) (USED ON 5-88190-3164) (SPARES ONLY)		1
		ATTACHING PARTS		
	S BACB30LU3-2	. BOLT. -------*-------		58
130	S 6-84526	. STOP.		1
131	S 6-84526-2	. STOP ASSY .		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	3A		ATTACHING PARTS		
	132	S BACB30NF5-15	. BOLT.		2
	133	S BACB30NF5-16	. BOLT.		2
	134	S AN960D516	. WASHER.		4
	135	S 5-88190-1651	. SHIM.		AR
	136	S BACN10JC5	. NUT		4
			-------*-------		
	137	S 6-84526-3	. . STOP.		2
	138	S 6-84526-4	. . STOP.		1
			ATTACHING PARTS		
		S BACB30DX6-5	. . BOLT.		3
		S NAS1080-6	. . COLLAR.		3
			-------*-------		
	139	S 6-83219-2	. SUPPORT ASSY.		7
			ATTACHING PARTS		
	140	S BACB30NF4-41	. BOLT.		2
R	141	S BACB30NF4-61	. BOLT.	5199	2
R	141	BACB30NF4-61	. BOLT, (DELETED BY 707 S/LTR 27-3)	0150	2
R	141	BACB30LE4-61	. BOLT, (ADDED BY 707 S/LTR 27-3)	0150	2
	142	S BACB30NF4-35	. BOLT.		10
	143	S AN960D416	. WASHER.		14
	143A	AN960D416	. WASHER.		2
	144	S BACN10JC4	. NUT		8
	144A	BACN10JC3	. NUT		4
R	144B	BACN10JC4	. NUT, (DELETED BY 707 S/LTR 27-3).	0150	2
R	144B	BACN10HR4CS	. NUT, (ADDED BY 707 S/LTR 27-3).	0150	2
R	144B	BACN10JC4	. NUT	5199	2
			-------*-------		
	145	S NAS516-1	. . FITTING		1
	146	S BACB10C135	. . BEARING		1
	148	S 6-83592-4	. SUPPORT ASSY, WING STATION 779.96		1
			ATTACHING PARTS		
	149	S NAS1104-33W	. BOLT.		1
	150	S NAS1104-35W	. BOLT.		1
	151	S AN960D416	. WASHER.		2
	152	S NAS679A4W	. NUT		2
			-------*-------		
	153	S NAS516-1	. . FITTING		1
	154	S BACB10C135	. . BEARING		1
	155	S 6-83592-3	. . SUPPORT		1
			(OPTIONAL 6-83592-5)		
	155	S 6-83592-5	. . SUPPORT		1
			(OPTIONAL TO 6-83592-3)		
	156	S AN7510-1	. PLATE		1
		S 9-64578-41	. SPAR INSTL, (LH ONLY)		1
		S 9-64578-42	. SPAR INSTL, (RH ONLY)		1
	157	S 9-64578-39	. . SPAR ASSY, (LH ONLY).		1
	157	S 9-64578-40	. . SPAR ASSY, (RH ONLY).		1
			ATTACHING PARTS		
	158	S BACR15AZ6-5	. . RIVET		8
	159	S BACB30LU3-4	. . SCREW		10
	160	S BACB30LU3-5	. . SCREW		3
	161	S BACB30LU3-6	. . SCREW		3
	162	S AN960D10	. . WASHER.		13
	163	S BACS40A13-55	. . SHIM.		1
	164	S BACS40A13-61	. . SHIM.		1
	165	S BACS40A13-32	. . SHIM.		5
	166	S BACS40A13-131	. . SHIM.		1
	167	S BACC30K6	. . COLLAR.		8
	168	S BACN10JC3	. . NUT		16
			-------*-------		
	169	S 5-96179-1	. . . SUPPORT, (LH ONLY) (WING STATION 730.95).		1
	169	S 5-96179-2	. . . SUPPORT, (RH ONLY) (WING STATION 730.95).		1
	170	S 50-8315	. . . SUPPORT, (WING STATION 779.96).		1
	171	S 5-95846	. . . SUPPORT		5
	172	S 5-96181	. . . SUPPORT, (WING STATION 949.174)		1
			ATTACHING PARTS		
	173	S AN470D5	. . . RIVET		6
	174	S AN470D6	. . . RIVET		36
	175	S BACR15AY6-4	. . . RIVET		8
	176	S BACR15AZ6-4	. . . RIVET		2
	177	S BACR15AZ6-5	. . . RIVET		4
	178	S BACR15AY6-6	. . . RIVET		4
	179	S BACB30LU3-3	. . . SCREW		10

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3A 180	S BACB30LU3-5	. . . SCREW		6
181	S BACB30AL10-8	. . . BOLT.		4
182	S AN960D10	. . . WASHER.		3
183	S AN960D10L	. . . WASHER.		10
184	S BACS40A13-24	. . . SHIM.		1
185	S BACS40A13-55	. . . SHIM.		1
186	S BACS40A13-78	. . . SHIM.		1
187	S BACS40A13-32	. . . SHIM.		6
188	S BACC30K6	. . . COLLAR.		12
189	S BACN10JC3	. . . NUT		16
		--------*--------		
190	S 65-2312-1	. WEIGHT.		1
191	S 65-2312-2	. WEIGHT.		1
192	S 65-2312-3	. WEIGHT.		1
193	S 65-2312-4	. WEIGHT.		1
194	S 50-2477-17	. WEIGHT.		14
195	S 50-2477-18	. WEIGHT.		2
196	S 50-2477-19	. WEIGHT.		1
197	S 50-2477-20	. WEIGHT.		1
198	S 50-2477-21	. WEIGHT.		1
199	S 5-88190-3117	. WEIGHT.		1
200	S 5-88190-3118	. WEIGHT.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

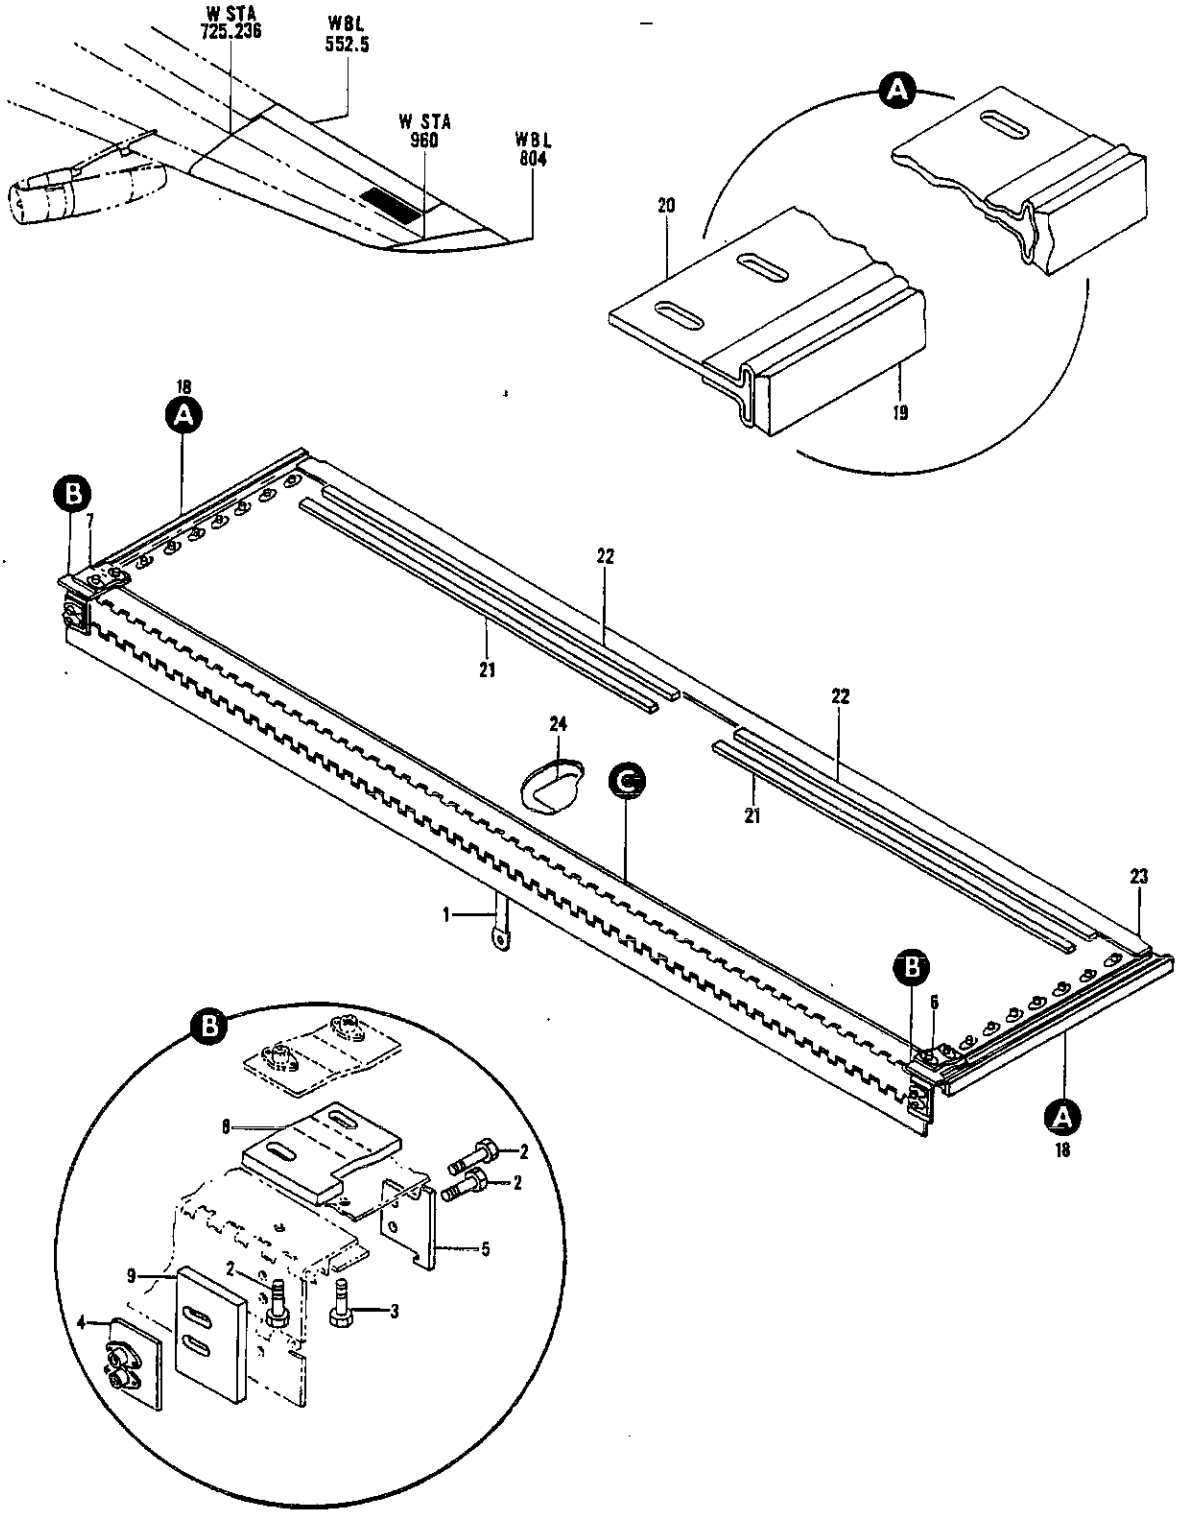


FIGURE 4. PANEL ASSY, WING STATION 890.21 TO 948.77 OUTBOARD AILERON BALANCE (SHEET 1)

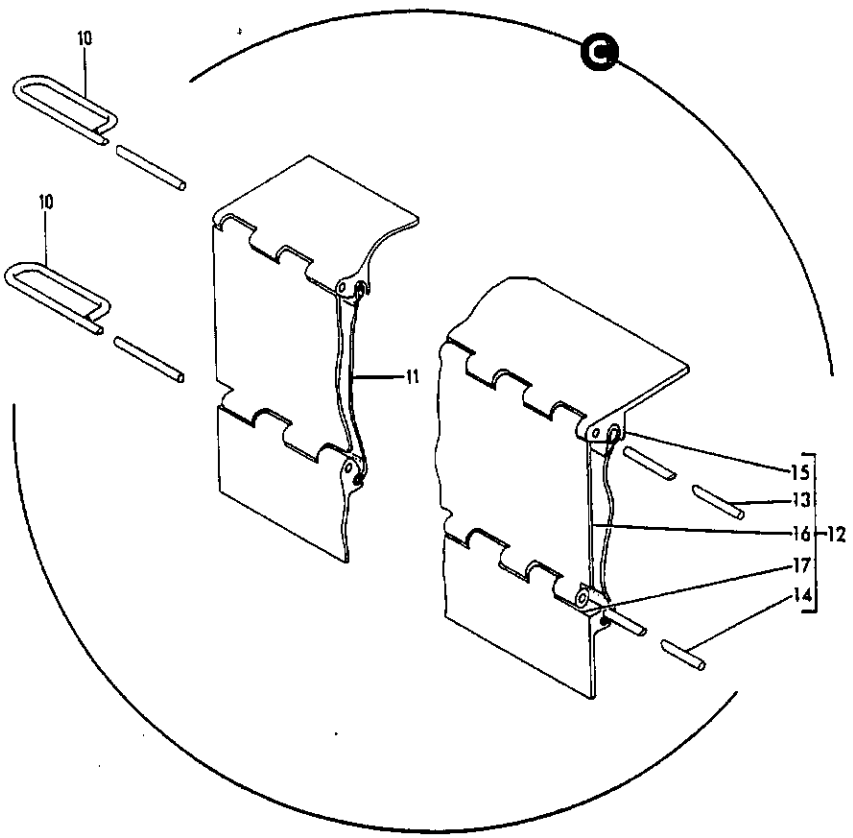


FIGURE 4. PANEL ASSY, WING STATION 890.21 TO 948.77 OUTBOARD AILERON BALANCE (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
4	5-96130-3003	PANEL ASSY, WING STATION 890.21 TO 948.77 OUTBOARD. . . AILERON BALANCE (LH) (SEE FIG. 2, ITEM 8)		RF
	5-96130-3004	PANEL ASSY, WING STATION 890.21 TO 948.77 OUTBOARD. . . AILERON BALANCE (RH) (SEE FIG. 2, ITEM 8)		RF
1	BACJ40D10-32	. JUMPER ASSY		1
		ATTACHING PARTS		
	AN3DD3A	. BOLT.		1
	BACW10P44AL	. WASHER.		1
		-------*-------		
2	AN3-5A	. BOLT.		6
3	AN3-4A	. BOLT.		2
	3-93582-4	. RETAINER ASSY, OUTBOARD AILERON BALANCE SEAL.		2
4	3-93582-3	. . RETAINER, OUTBOARD AILERON BALANCE SEAL		1
5	66-4439-1	. RETAINER, OUTBOARD AILERON BALANCE SEAL		2
6	3-95650-1	. RETAINER ASSY, OUTBOARD AILERON BALANCE SEAL.		1
7	3-95650-2	. RETAINER ASSY, OUTBOARD AILERON BALANCE SEAL.		1
8	3-93580	. SEAL, OUTBOARD AILERON BALANCE PANEL.		2
9	3-93580-1	. SEAL, OUTBOARD AILERON BALANCE PANEL.		2
10	BACP18G1-5712	. PIN		2
11	9-61952-3	. SEAL, OUTBOARD AILERON BALANCE PANEL FABRIC		1
12	5-89301-2	. HINGE ASSY, OUTBOARD AILERON NOSE		1
13	AN253-2-5665	. . PIN		1
14	AN253-2-5611	. . PIN		1
15	5-89301-9	. . HINGE HALF, OUTBOARD AILERON NOSE		1
16	5-89301-10	. . HINGE HALF, OUTBOARD AILERON NOSE		1
17	5-89301-11	. . HINGE HALF, OUTBOARD AILERON NOSE		1
18	6-84308	. SEAL ASSY, OUTBOARD AILERON BALANCE PANEL		2
		ATTACHING PARTS		
	AN3-4A	. BOLT.		14
		-------*-------		
19	6-84308-1	. . SEAL, OUTBOARD AILERON BALANCE PANEL.		1
20	6-84308-2	. . TEE, OUTBOARD AILERON BALANCE PANEL SEAL.		1
21	69-12022-10	. WEIGHT, INBOARD AND OUTBOARD AILERON BALANCE.		AR
22	69-12022-11	. WEIGHT, INBOARD AND OUTBOARD AILERON BALANCE.		2
23	5-96130-9	. PANEL ASSY, WING STATION 890.21 TO 948.77 OUTBOARD. . AILERON BALANCE BONDED		1
24	AN7510F1	. PLATE		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

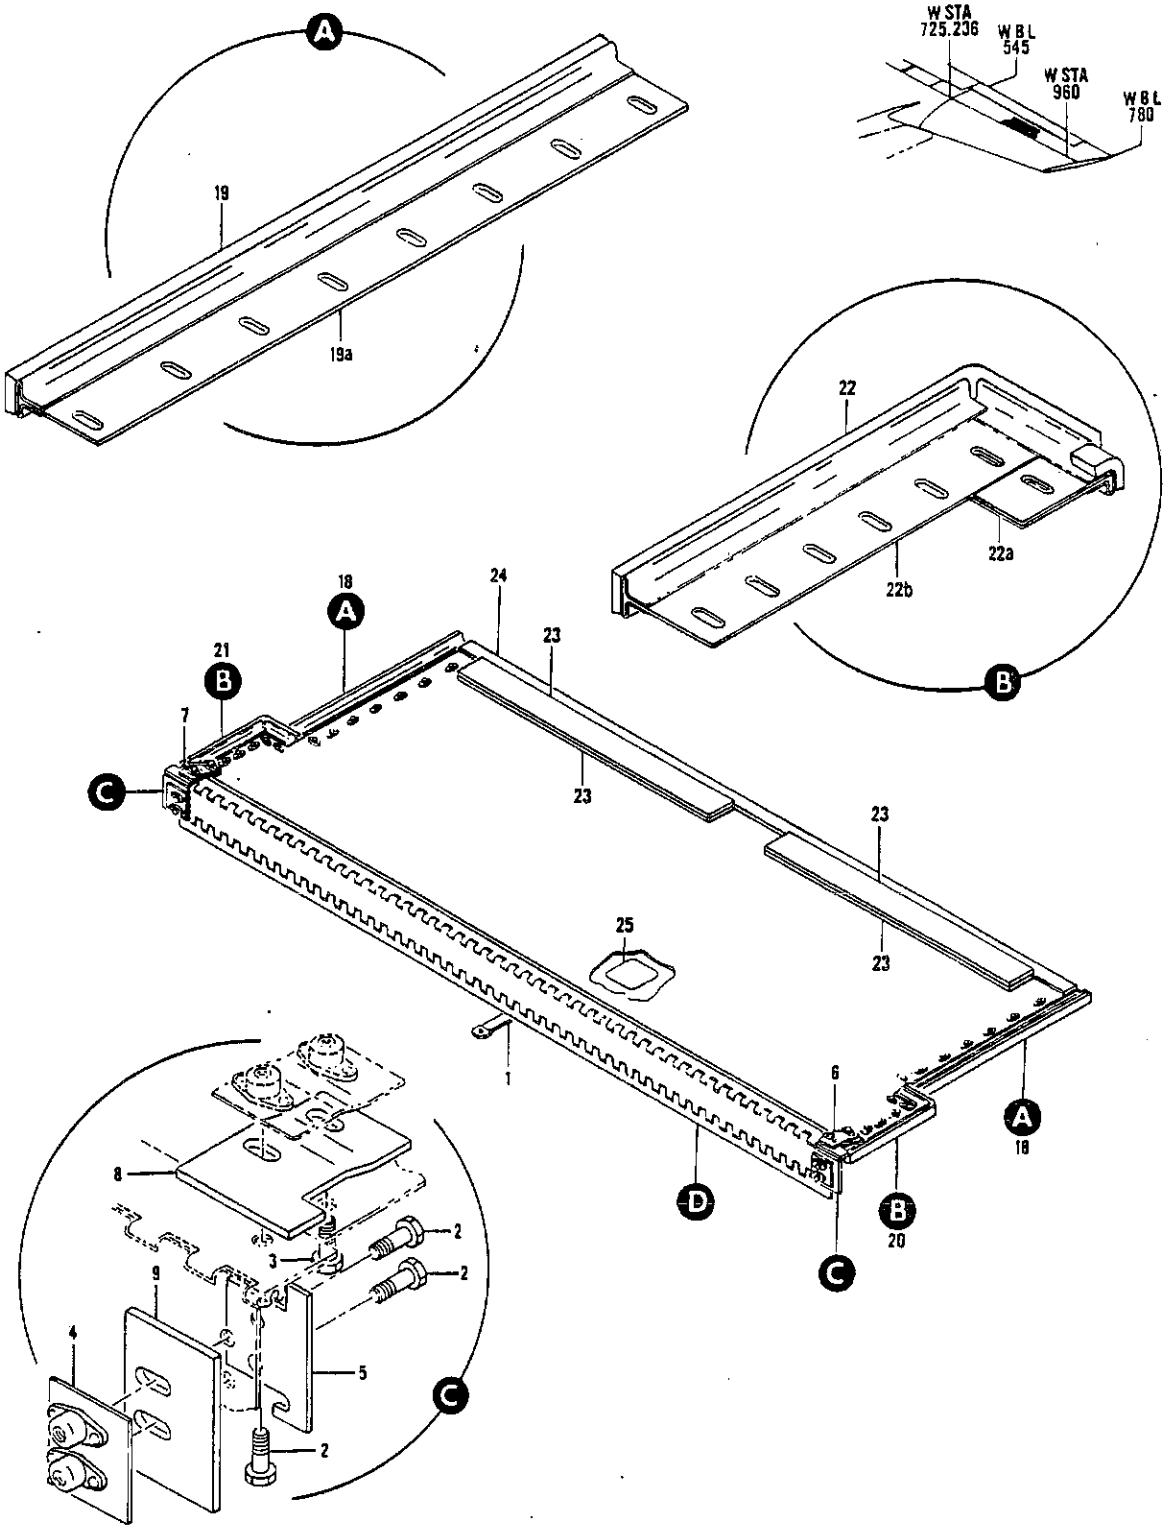


FIGURE 5. PANEL ASSY, WING STATION 835.10 TO 890.21 OUTBOARD AILERON BALANCE (SHEET 1)"

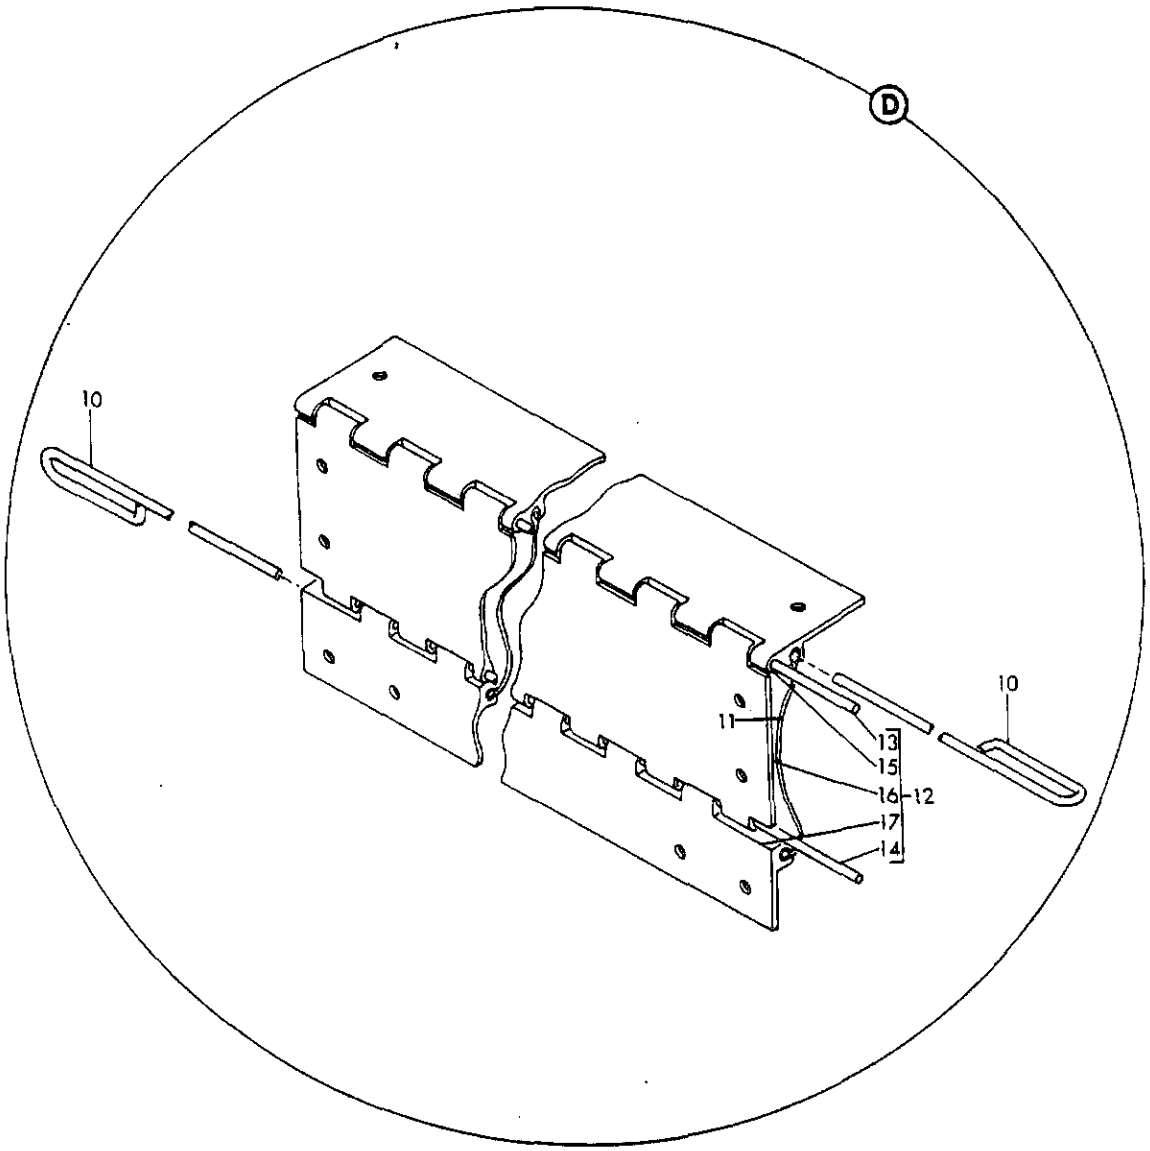


FIGURE 5. PANEL ASSY, WING STATION 835.10 TO 890.21 OUTBOARD AILERON BALANCE (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5	5-96129-3001	PANEL ASSY, WING STATION 835.10 TO 890.21 OUTBOARD. . . AILERON BALANCE (SEE FIG. 2, ITEM 9)		RF
1	BACJ40D10-32	. JUMPER ASSY		1
		ATTACHING PARTS		
	AN3DD3A	. SCREW		1
	AN960D10	. WASHER.		1
		--------*--------		
2	AN3-5A	. BOLT.		6
3	AN3-4A	. BOLT.		2
4	3-93582-4	. RETAINER ASSY, OUTBOARD AILERON BALANCE SEAL.		2
5	66-4439-1	. RETAINER, OUTBOARD AILERON BALANCE SEAL		2
6	3-95650-1	. RETAINER ASSY, OUTBOARD AILERON BALANCE SEAL.		1
7	3-95650-2	. RETAINER ASSY, OUTBOARD AILERON BALANCE SEAL.		1
8	3-93580	. SEAL, OUTBOARD AILERON BALANCE PANEL.		2
9	3-93580-1	. SEAL, OUTBOARD AILERON BALANCE PANEL.		2
10	BACP18G1-5320	. PIN		2
11	9-61952-2	. SEAL, OUTBOARD AILERON BALANCE PANEL FABRIC		1
12	5-89301-1	. HINGE ASSY, OUTBOARD AILERON NOSE		1
13	AN253-2-5270	. . PIN		1
14	AN253-2-5212	. . PIN		1
15	5-89301-6	. . HINGE HALF, OUTBOARD AILERON NOSE		1
16	5-89301-7	. . HINGE HALF, OUTBOARD AILERON NOSE		1
17	5-89301-8	. . HINGE HALF, OUTBOARD AILERON NOSE		1
18	6-83671	. SEAL ASSY, OUTBOARD AILERON BALANCE PANEL		2
		ATTACHING PARTS		
	AN3-4A	. BOLT.		14
		--------*--------		
19	6-83671-1	. . SEAL, OUTBOARD AILERON BALANCE PANEL.		1
19A	6-83671-2	. . TEE, OUTBOARD AILERON BALANCE PANEL SEAL.		1
20	9-65491-3	. SEAL ASSY, OUTBOARD AILERON BALANCE PANEL END		1
21	9-65491-4	. SEAL ASSY, OUTBOARD AILERON BALANCE PANEL END		1
		ATTACHING PARTS		
	AN3-4A	. BOLT.		6
	AN3-5A	. BOLT.		4
		--------*--------		
22	9-65491-11	. . SEAL, OUTBOARD AILERON BALANCE PANEL END. . . . . (BAC1523-17 X 10.0 IN. LG)		1
22A	9-65491-5	. . TEE, OUTBOARD AILERON BALANCE PANEL END SEAL (USED ON 9-65491-3)		1
	9-65491-6	. . TEE, OUTBOARD AILERON BALANCE PANEL END SEAL (USED ON 9-65491-4)		1
22B	9-65491-8	. . TEE, OUTBOARD AILERON BALANCE PANEL END SEAL. . .		1
23	69-12022-3	. WEIGHT, INBOARD AND OUTBOARD AILERON BALANCE. . . .		4
24	5-96129-10	. PANEL ASSY, WING STATION 835.10 TO 890.21 OUTBOARD. . AILERON BALANCE BONDED		1
25	AN7510F1	. PLATE		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

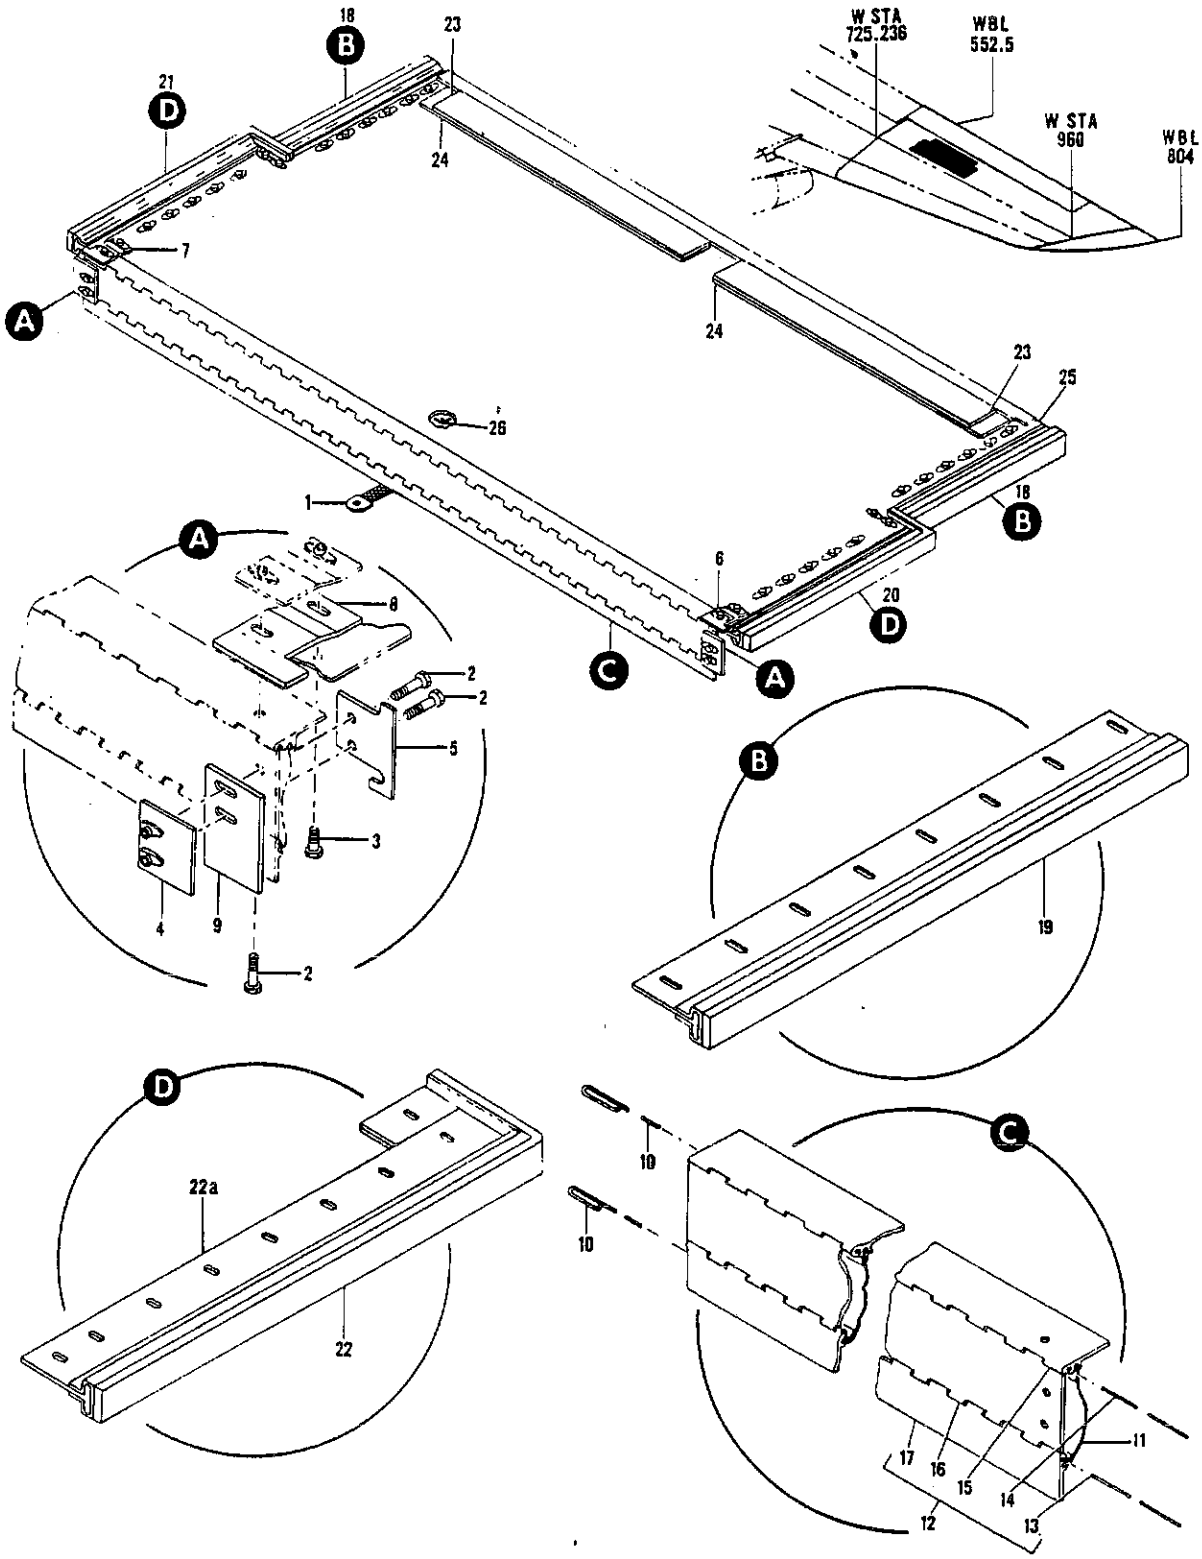


FIGURE 6. PANEL ASSY, WING STATION 779.96 TO 835.10 OUTBOARD AILERON BALANCE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
6	5-96128-3001	PANEL ASSY, WING STATION 779.96 TO 835.10 OUTBOARD. AILERON BALANCE (SEE FIG. 2, ITEM 10)		RF
1	BACJ40D10-32	. JUMPER ASSY		1
		ATTACHING PARTS		
	AN3DD3A	. BOLT.		1
	AN960D10	. WASHER.		1
		-------*-------		
2	AN3-5A	. BOLT.		6
3	AN3-4A	. BOLT.		2
4	3-93582-4	. RETAINER ASSY, OUTBOARD AILERON BALANCE SEAL.		2
5	66-4439-1	. RETAINER, OUTBOARD AILERON BALANCE SEAL		2
6	3-95650-1	. RETAINER ASSY, OUTBOARD AILERON BALANCE SEAL.		1
7	3-95650-2	. RETAINER ASSY, OUTBOARD AILERON BALANCE SEAL.		1
8	3-93580	. SEAL, OUTBOARD AILERON BALANCE PANEL.		2
9	3-93580-1	. SEAL, OUTBOARD AILERON BALANCE PANEL.		2
10	BACP18G1-5320	. PIN		2
11	9-61952-2	. SEAL, OUTBOARD AILERON BALANCE PANEL FABRIC		1
12	5-89301-1	. HINGE ASSY, OUTBOARD AILERON NOSE		1
13	AN253-2-5270	. . PIN		1
14	AN253-2-5212	. . PIN		1
15	5-89301-6	. . HINGE HALF, OUTBOARD AILERON NOSE		1
16	5-89301-7	. . HINGE HALF, OUTBOARD AILERON NOSE		1
17	5-89301-8	. . HINGE HALF, OUTBOARD AILERON NOSE		1
18	6-83671	. SEAL ASSY, OUTBOARD AILERON BALANCE PANEL		2
		ATTACHING PARTS		
	AN3-4A	. BOLT.		14
		-------*-------		
19	6-83671-1	. . SEAL, OUTBOARD AILERON BALANCE PANEL.		1
20	9-65491-1	. SEAL ASSY, OUTBOARD AILERON BALANCE PANEL END		1
21	9-65491-2	. SEAL ASSY, OUTBOARD AILERON BALANCE PANEL END		1
		ATTACHING PARTS		
	AN3-5A	. BOLT.		2
	AN3-4A	. BOLT.		5
		-------*-------		
22	9-65491-10	. . SEAL, OUTBOARD AILERON BALANCE PANEL END. (BAC1523-17 X 15.00 IN. LG)		1
22A	9-65491-7	. . SEAL, OUTBOARD AILERON BALANCE PANEL END TEE.		1
23	69-12022-1	. WEIGHT, INBOARD AND OUTBOARD AILERON BALANCE.		2
24	90-5044-1	. WEIGHT, OUTBOARD AILERON BALANCE PANEL.		2
25	5-96128-10	. PANEL ASSY, WING STATION 779.96 TO 835.10 OUTBOARD. AILERON BALANCE BONDED		1
26	AN7510F1	. NAMEPLATE		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

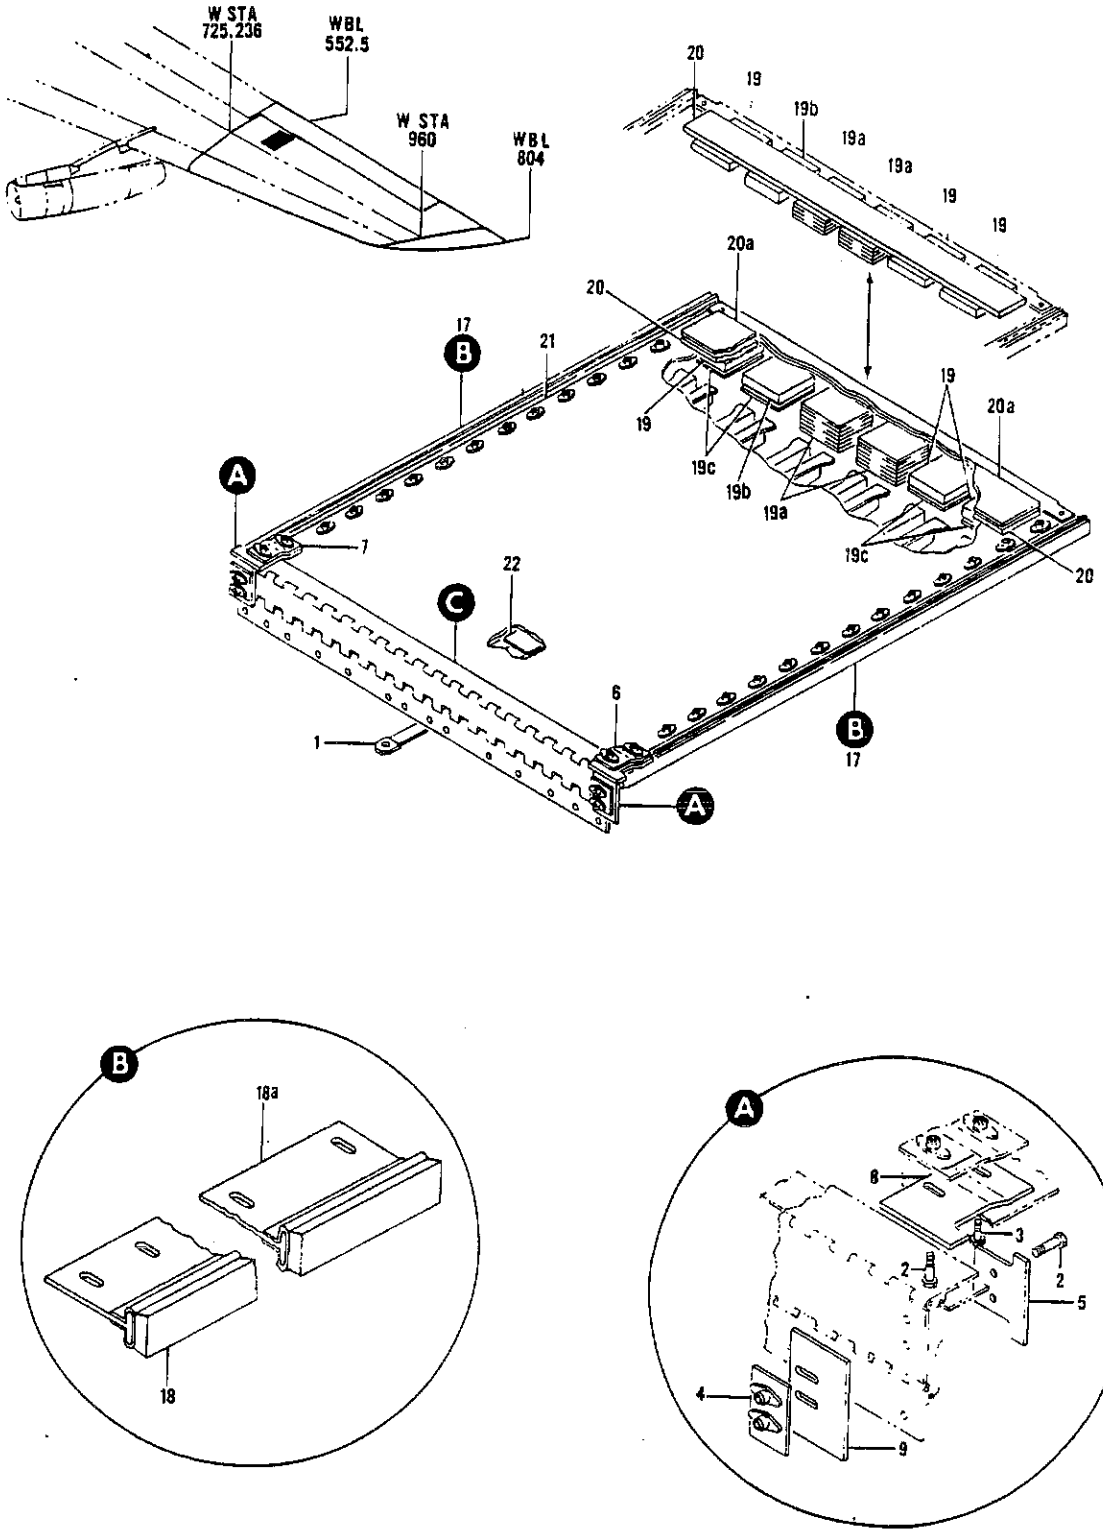


FIGURE 7. PANEL ASSY, WING STATION 752.90 TO 779.96 OUTBOARD AILERON BALANCE (SHEET 1)

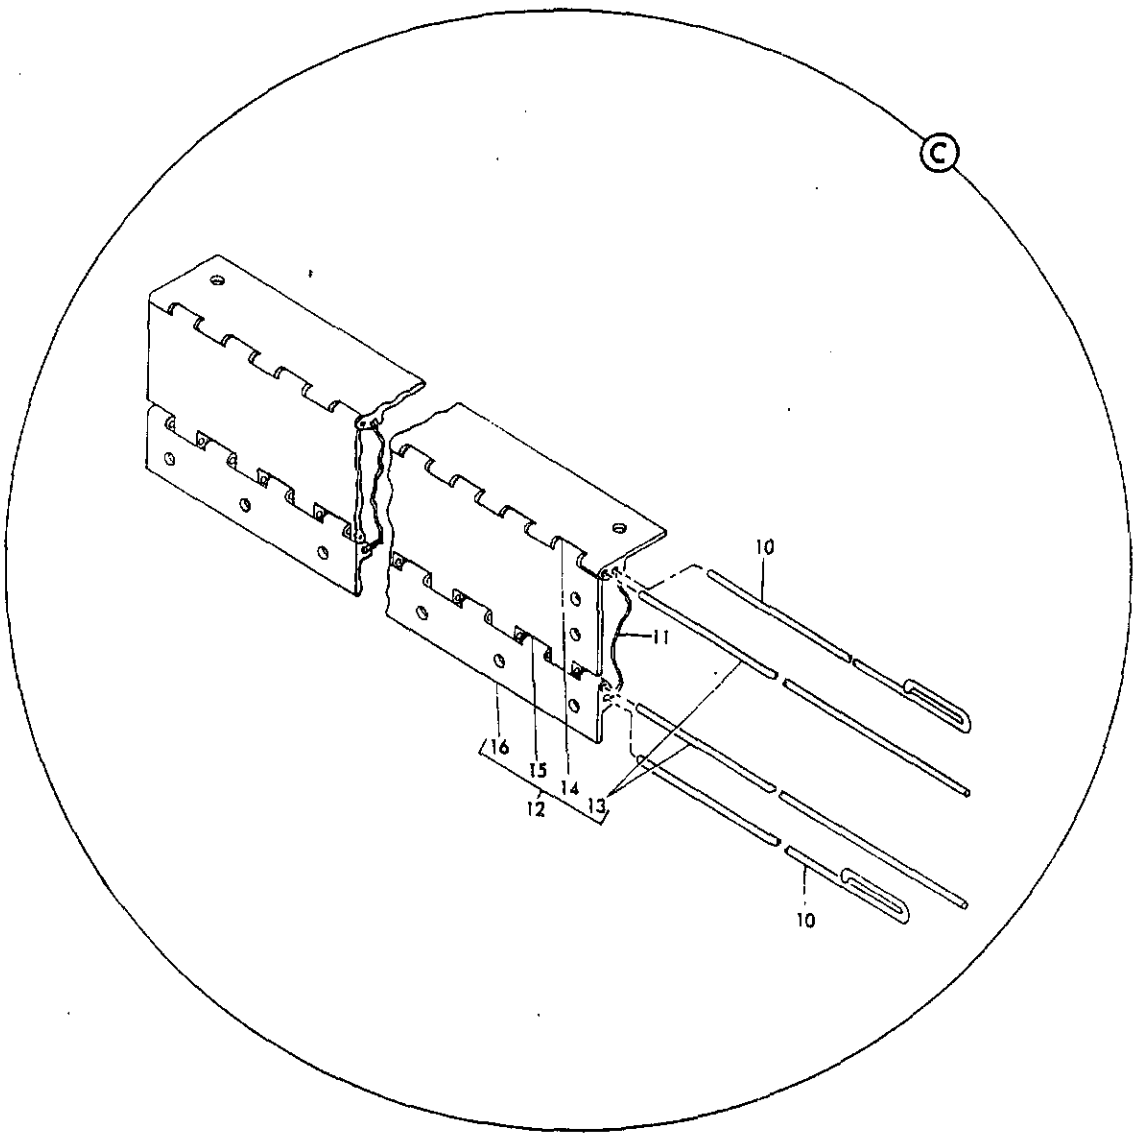


FIGURE 7. PANEL ASSY, WING STA 752.90 TO 779.96 OUTBOARD AILERON BALANCE (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
7	5-96127-3001	PANEL ASSY, WING STATION 752.90 TO 779.96 OUTBOARD. . . AILERON BALANCE (SEE FIG. 2, ITEM 11)		RF
1	BACJ40D10-32	. JUMPER ASSY		1
		ATTACHING PARTS		
	AN3DD3A	. BOLT.		1
	AN960D10	. WASHER.		1
		-------*-------		
2	AN3-5A	. BOLT.		6
3	AN3-4A	. BOLT.		2
4	3-93582-4	. RETAINER ASSY, OUTBOARD AILERON BALANCE SEAL. . . .		2
5	66-4439	. RETAINER, OUTBOARD AILERON BALANCE SEAL		2
6	3-95650-1	. RETAINER ASSY, OUTBOARD AILERON BALANCE SEAL. . . .		1
7	3-95650-2	. RETAINER ASSY, OUTBOARD AILERON BALANCE SEAL. . . .		1
8	3-93580	. SEAL, OUTBOARD AILERON BALANCE PANEL.		2
9	3-93580-1	. SEAL, OUTBOARD AILERON BALANCE PANEL.		2
10	BACP18G1-2560	. PIN		2
11	9-61952-1	. SEAL, OUTBOARD AILERON BALANCE PANEL FABRIC		1
12	5-89301	. HINGE ASSY, OUTBOARD AILERON NOSE		1
13	AN253-2-2515	. . PIN		2
14	5-89301-3	. . HINGE HALF, OUTBOARD AILERON NOSE		1
15	5-89301-4	. . HINGE HALF, OUTBOARD AILERON NOSE		1
16	5-89301-5	. . HINGE HALF, OUTBOARD AILERON NOSE		1
17	9-61748	. SEAL ASSY, OUTBOARD AILERON BALANCE PANEL		2
		ATTACHING PARTS		
	AN3-4A	. BOLT.		26
		-------*-------		
18	9-61748-1	. . SEAL, OUTBOARD AILERON BALANCE PANEL (BAC1523-17 X 30.0 IN. LG)		1
18A	9-61748-2	. . TEE, OUTBOARD AILERON BALANCE PANEL SEAL.		1
19	66-9942	. WEIGHT, OUTBOARD AILERON BALANCE PANEL BALANCE. . . .		3
19A	69-12022-7	. WEIGHT, OUTBOARD AILERON BALANCE.		AR
19B	66-9942	. WEIGHT, OUTBOARD AILERON BALANCE PANEL BALANCE. . . .		1
19C	69-12022-4	. WEIGHT, OUTBOARD AILERON BALANCE.		4
20	69-12022-5	. WEIGHT, OUTBOARD AILERON BALANCE.		1
20A	69-12022-6	. WEIGHT, OUTBOARD AILERON BALANCE.		1
21	5-96127-5	. PANEL ASSY, WING STATION 752.90 TO 779.96 OUTBOARD. . AILERON BALANCE BONDED		1
22	AN7510F1	. NAMEPLATE		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

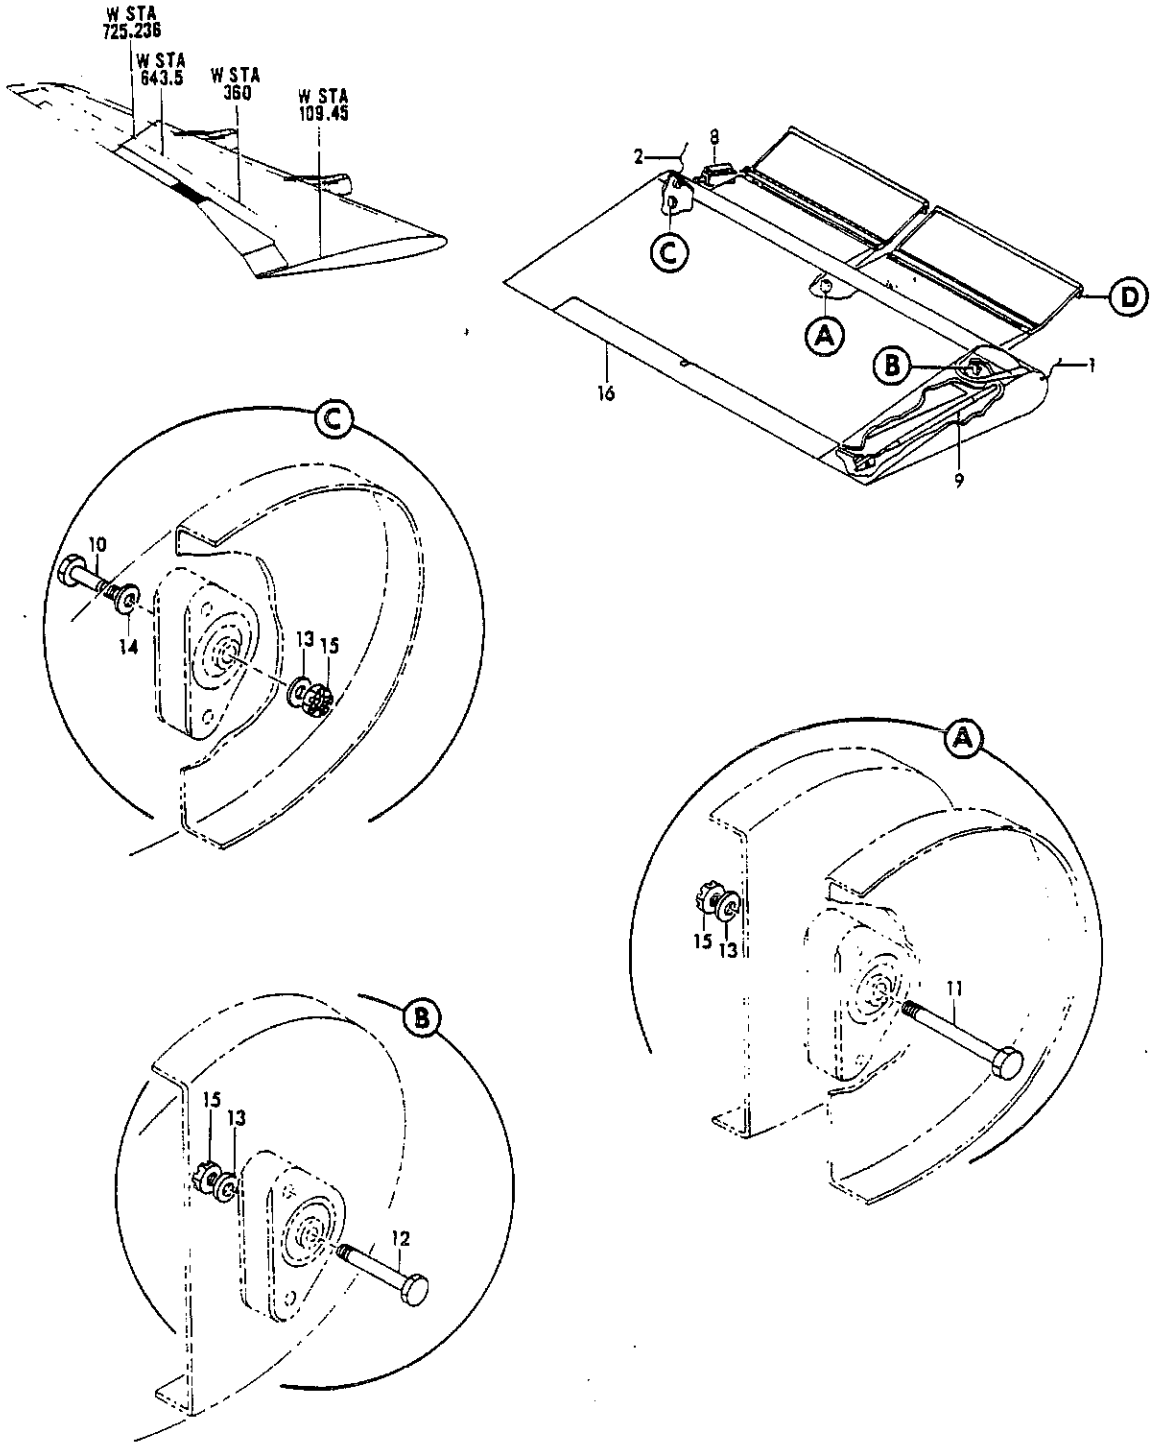


FIGURE 8. AILERON INSTL, INBOARD WING (SHEET 1)

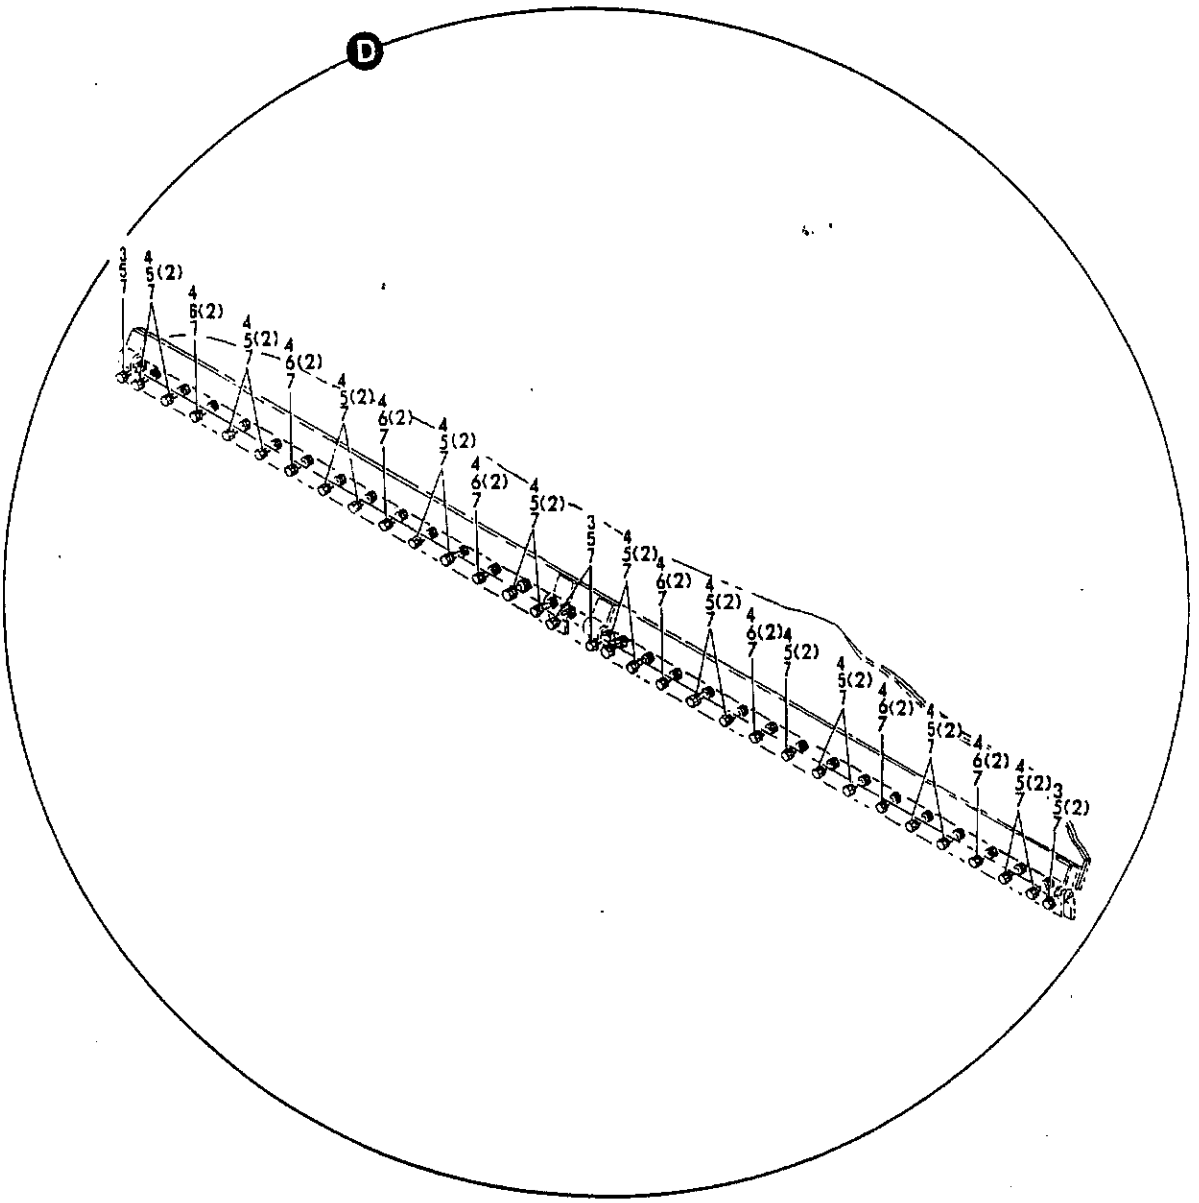


FIGURE 8. AILERON INSTL, INBOARD WING (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
8	65-1096-1	AILERON INSTL, INBOARD WING (LH) (SEE 57-1, FIG. 1, ITEM 18)		RF
	65-1096-2	AILERON INSTL, INBOARD WING (RH) (SEE 57-1, FIG. 1, ITEM 18)		RF
1	MS25083-2B83	. JUMPER ASSY, (MUST BE INSTALLED WITH TERMINAL POINTING OUTBOARD)		1
		ATTACHING PARTS		
	NAS603-8	. SCREW		1
	NAS603-4	. SCREW		1
	AN960D10L	. WASHER		3
	BACW10T10L	. WASHER		1
	BACW10P151AL	. WASHER		2
	NAS679A3W	. NUT		2
		-------*-------		
2	MS25083-2B84	. JUMPER ASSY		1
		ATTACHING PARTS		
	NAS603-8	. SCREW		1
	AN960D10L	. WASHER		2
	BACW10P151AL	. WASHER		1
	NAS679A3W	. NUT		1
		-------*-------		
3	NAS1103-2W	. BOLT		4
4	NAS1103-3W	. BOLT		29
5	AN960D10	. WASHER		46
6	AN960D10L	. WASHER		16
7	NAS679A3W	. NUT		33
	5-87412-3000	. SNUBBER INSTL, INBOARD AILERON (FLIGHT CONTROL ONLY)		1
8	5-88763-10	. . SNUBBER ASSY, AILERON CONTROL SURFACE (SEE FIG. 18)		1
		ATTACHING PARTS		
	NAS464P5-18	. . BOLT		1
	NAS464P5-16	. . BOLT		1
	90-9600-4	. . WASHER, PLAIN		4
	AN960-516	. . WASHER		2
	AN310-5	. . NUT		2
		-------*-------		
		. . REQUIRED PLACARDS, (SEE 11-3, FIG. 63)		
9	50-8701-38	. CONTROL INSTL, SECTION 38 AILERON (TAB CONTROL) (LH ONLY) (SEE 27-3, FIG. 19 AND 20)		1
9	50-8701-138	. CONTROL INSTL, SECTION 38 AILERON (TAB CONTROL) (RH ONLY) (SEE 27-3, FIG. 21, 22 AND 23)		1
10	NAS1105-49DW	. BOLT		1
11	NAS1105-26DW	. BOLT		1
12	NAS1105-27DW	. BOLT		1
13	AN960D516	. WASHER		3
14	AN960D516L	. WASHER		1
15	AN320-5	. NUT		3
16	65-1016-13	. PANEL INSTL, INBOARD AILERON AND BALANCE (LH ONLY). (SEE FIG. 9)		1
16	65-1016-14	. PANEL INSTL, INBOARD AILERON AND BALANCE (RH ONLY). (SEE FIG. 9)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

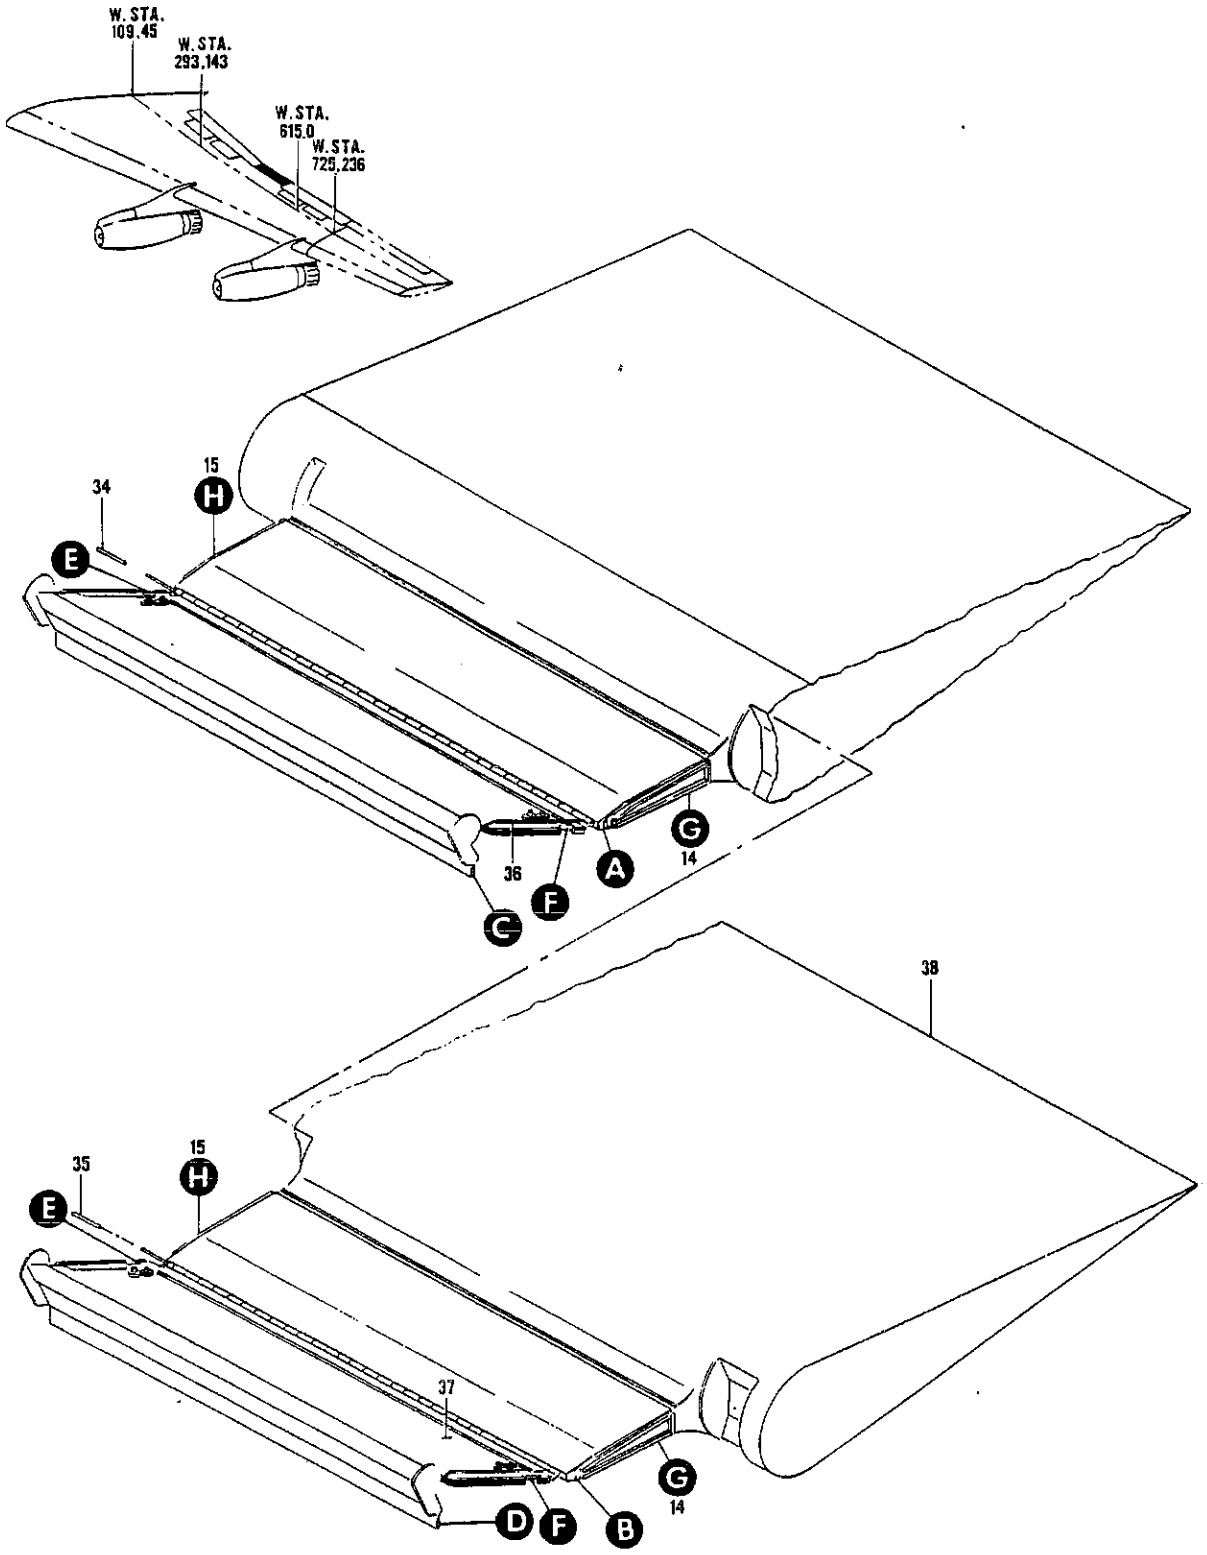


FIGURE 9. PANEL INSTL, INBOARD AILERON AND BALANCE (SHEET 1)

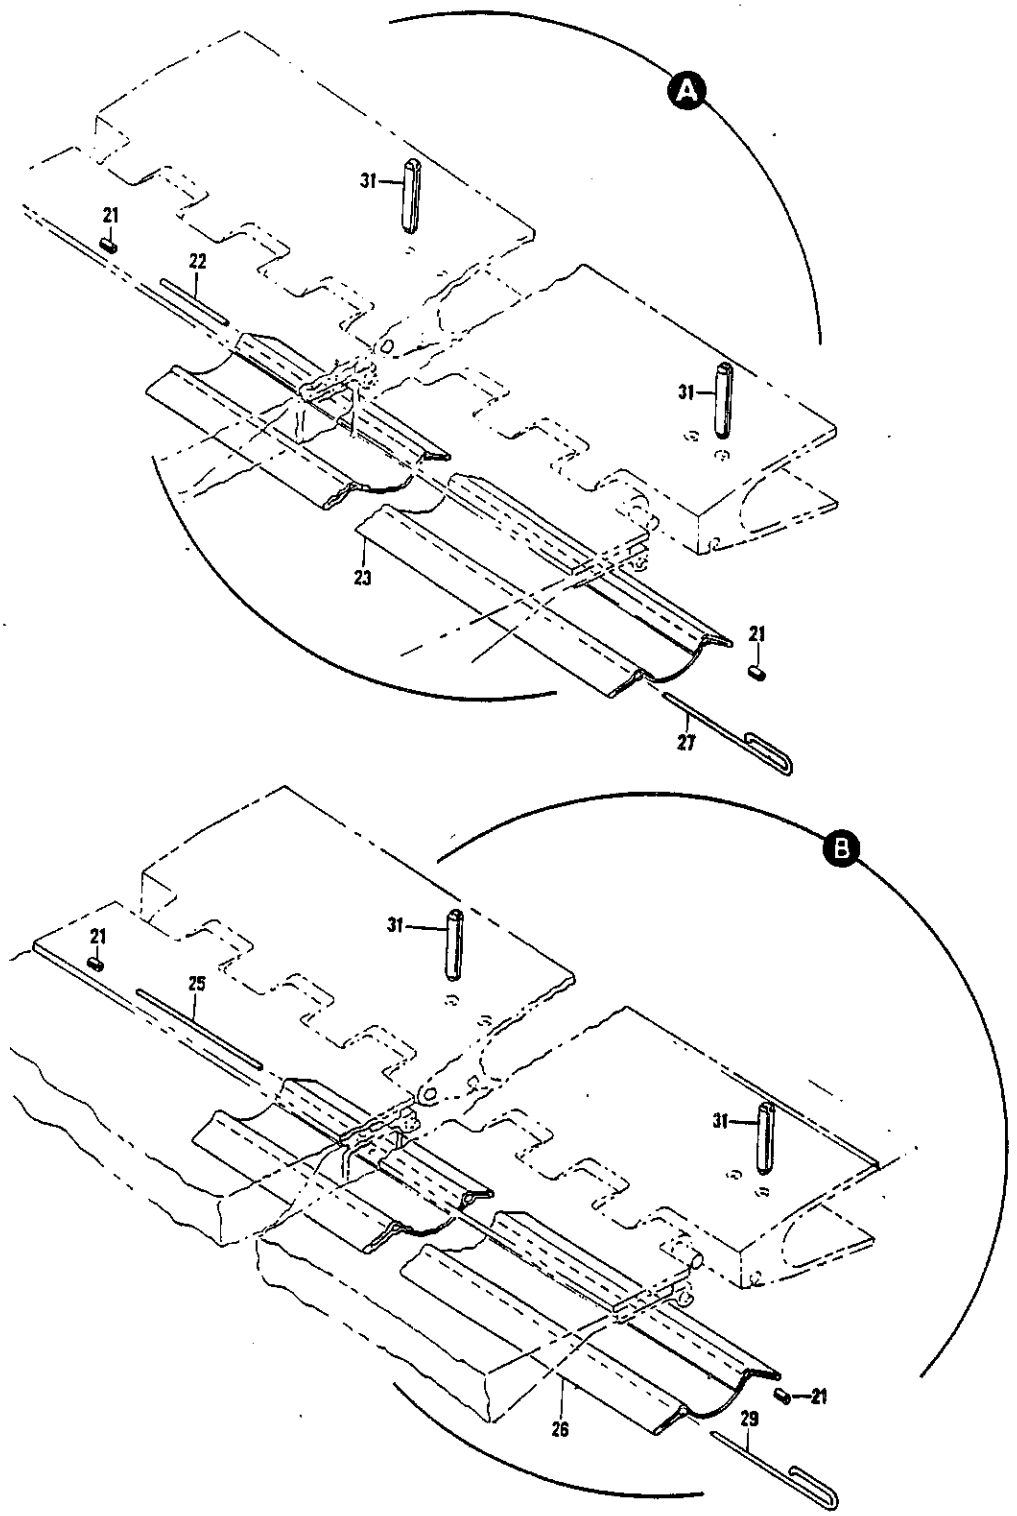


FIGURE 9. PANEL INSTL, INBOARD AILERON AND BALANCE (SHEET 2)

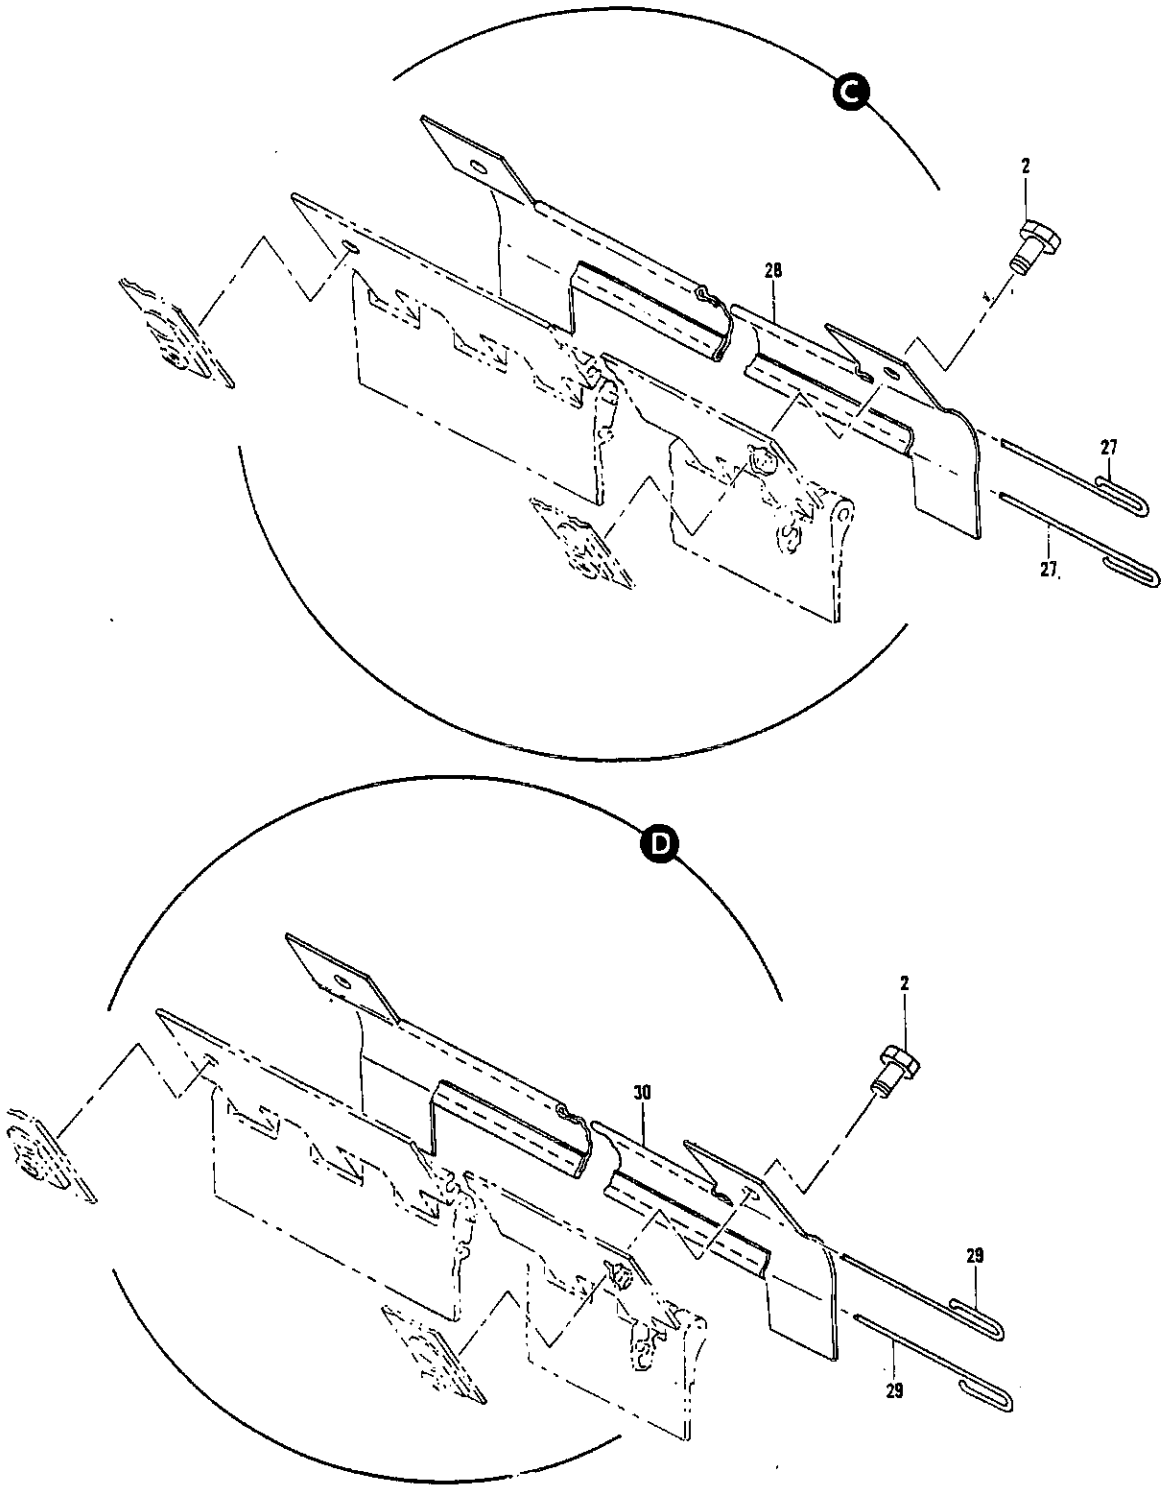


FIGURE 9. PANEL INSTL, INBOARD AILERON AND BALANCE (SHEET 3)

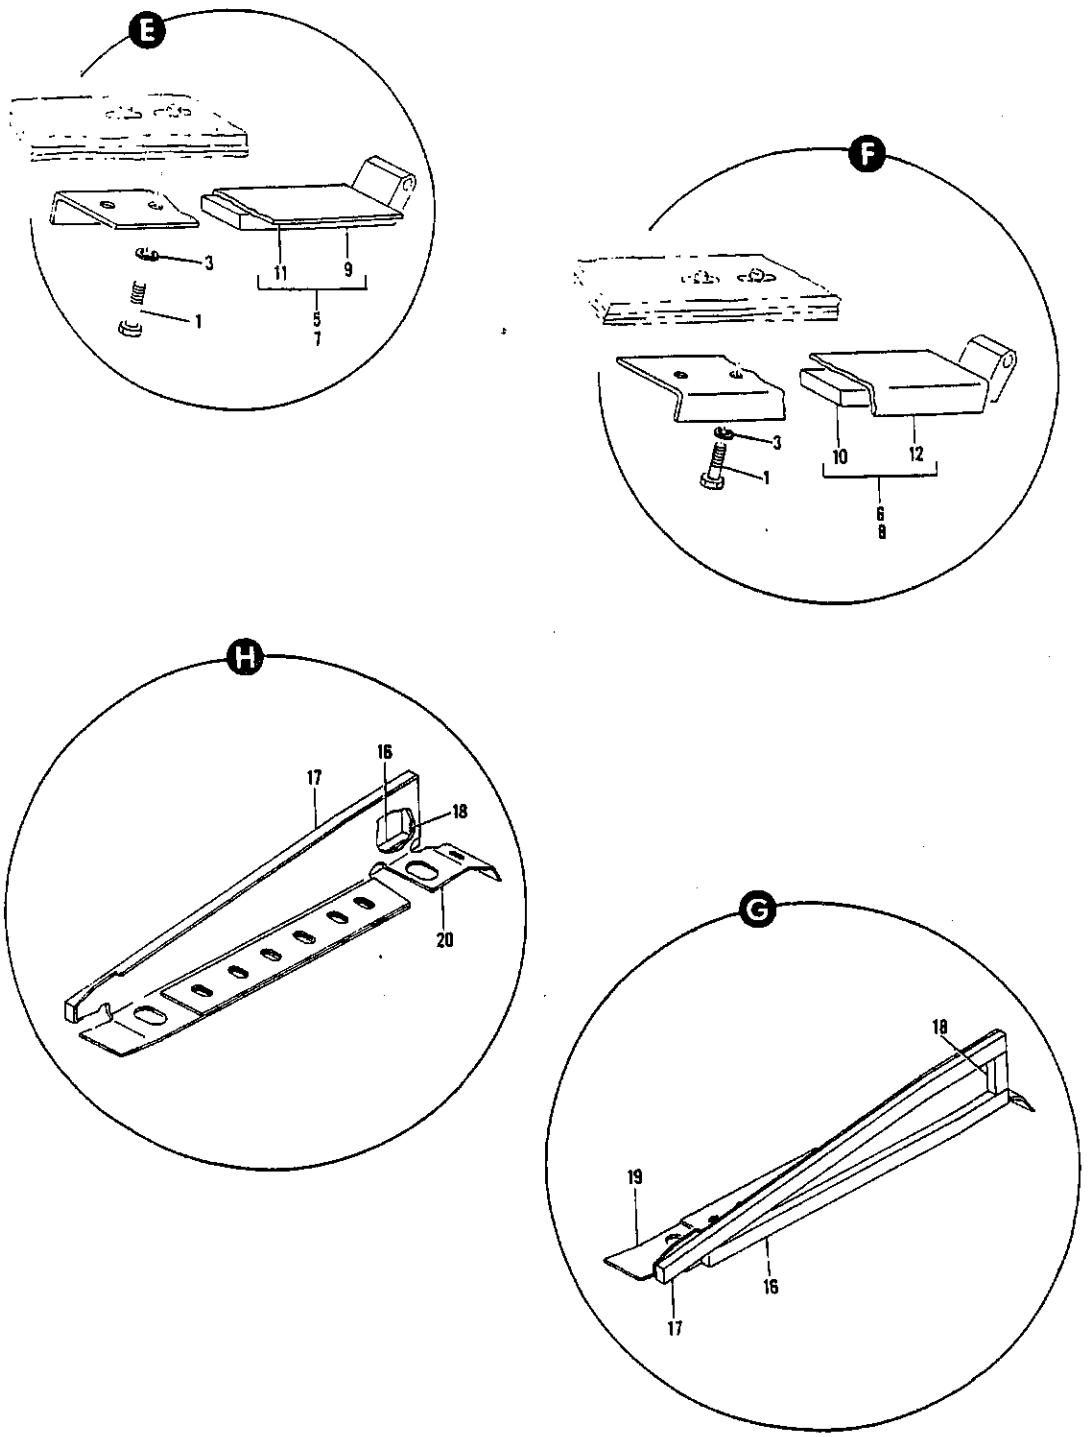


FIGURE 9. PANEL INSTL, INBOARD AILERON AND BALANCE (SHEET 4)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	9	65-1016-13	PANEL INSTL, INBOARD AILERON AND BALANCE (LH) (SEE FIG. 8, ITEM 16)		RF
		65-1016-14	PANEL INSTL, INBOARD AILERON AND BALANCE (RH) (SEE FIG. 8, ITEM 16)		RF
	1	AN3-6A	. BOLT.		8
	2	NAS1303-3W	. BOLT.		4
	3	AN960D10	. WASHER.		8
	5	69-4012-3001	. RETAINER ASSY, INBOARD AILERON HINGE PIN (LH ONLY). .		1
	5	69-4012-3002	. RETAINER ASSY, INBOARD AILERON HINGE PIN (RH ONLY). .		1
	6	69-4012-3002	. RETAINER ASSY, INBOARD AILERON HINGE PIN (LH ONLY). .		1
	6	69-4012-3001	. RETAINER ASSY, INBOARD AILERON HINGE PIN (RH ONLY). .		1
	7	69-4012-3003	. RETAINER ASSY, INBOARD AILERON HINGE PIN (LH ONLY). .		1
	7	69-4012-3004	. RETAINER ASSY, INBOARD AILERON HINGE PIN (RH ONLY). .		1
	8	69-4012-3004	. RETAINER ASSY, INBOARD AILERON HINGE PIN (LH ONLY). .		1
	8	69-4012-3003	. RETAINER ASSY, INBOARD AILERON HINGE PIN (RH ONLY). .		1
	9	66-3650-2001	. . RETAINER, INBOARD AILERON HINGE PIN (USED ON. . . . 69-4012-3001 AND -3003)		1
	10	66-3650-2002	. . RETAINER, INBOARD AILERON HINGE PIN (USED ON. . . . 69-4012-3002 AND -3004)		1
	11	69-4012-2005	. . ANGLE, INBOARD AILERON HINGE PIN RETAINER (USED ON 69-4012-3001 AND -3003)		1
	12	69-4012-2006	. . ANGLE, INBOARD AILERON HINGE PIN RETAINER (USED ON 69-4012-3002 AND -3004)		
	14	6-72093-3001	. SEAL ASSY, INBOARD AILERON NOSE END		2
	15	6-72093-3002	. SEAL ASSY, INBOARD AILERON NOSE END		2
	16	6-72093-8	. . SEAL, INBOARD AILERON NOSE END (BAC1523-9 X 8.40. . IN. LG)		1
	17	6-72093-9	. . SEAL, INBOARD AILERON NOSE END (BAC1523-9 X 9.50. . IN. LG)		1
	18	6-72093-10	. . SEAL, INBOARD AILERON NOSE END (BAC1523-9 X 1.00. . IN. LG)		1
	19	6-72093-3003	. . SPOTWELD ASSY, INBOARD AILERON NOSE END SEAL (USED ON 6-72093-3001)		1
	20	6-72093-3004	. . SPOTWELD ASSY, INBOARD AILERON NOSE END SEAL (USED ON 6-72093-3002)		1
	21	NAS561P4-7	. PIN		4
	22	BACP18G2-3162	. PIN		1
	23	9-64838-8	. SEAL, INBOARD AILERON BALANCE PANEL HINGE NO. 3 . . . INBOARD		1
	25	BACP18G2-2974	. PIN		1
	26	9-64838-9	. SEAL, INBOARD AILERON BALANCE PANEL HINGE NO. 3 . . . OUTBOARD		1
	27	BACP18G1-3140	. PIN		3
	28	9-64838-11	. SEAL, INBOARD AILERON BALANCE PANEL HINGE NO. 1 . . . INBOARD		1
	29	BACP18G1-2960	. PIN		3
	30	9-64838-12	. SEAL, INBOARD AILERON BALANCE PANEL HINGE NO. 1 . . . OUTBOARD		1
	31	BACP18L6P0687	. PIN		8
	34	65-1016-5	. PIN, INBOARD AILERON AND BALANCE PANEL ASSEMBLY . . . INBOARD HINGE (ALTERED FROM AN253-4-3168)		1
	35	65-1016-6	. PIN, INBOARD AILERON AND BALANCE PANEL ASSEMBLY . . . OUTBOARD HINGE (ALTERED FROM AN253-4-2988)		1
	36	5-87140-3019	. PANEL ASSY, (SEE FIG. 13)		1
	37	5-87140-3020	. PANEL ASSY, (SEE FIG. 13)		1
R R	38	5-86072-3095	. AILERON ASSY, INBOARD (REWORKED BY SB 2971) (LH ONLY) (SEE FIG. 10)	0150	1
R	38	5-86072-3095A	. AILERON ASSY, INBOARD (LH ONLY) (SEE FIG. 10)	5151	1
R	38	5-86072-3095H	. AILERON ASSY, (LH ONLY) (SEE FIG. 10)	5299	1
R	38	5-86072-3076	. AILERON ASSY, INBOARD (RH ONLY) (SEE FIG. 10)	0250	1
R	38	5-86072-3076A	. AILERON ASSY, INBOARD (RH ONLY) (SEE FIG. 10)	5151	1
R	38	5-86072-3076H	. AILERON ASSY, (RH ONLY) (SEE FIG. 10)	5299	1
	38	5-86072-3076	. AILERON ASSY, INBOARD (RH ONLY) (REWORKED BY. . . . 3148) (SEE FIG. 10)	0101	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

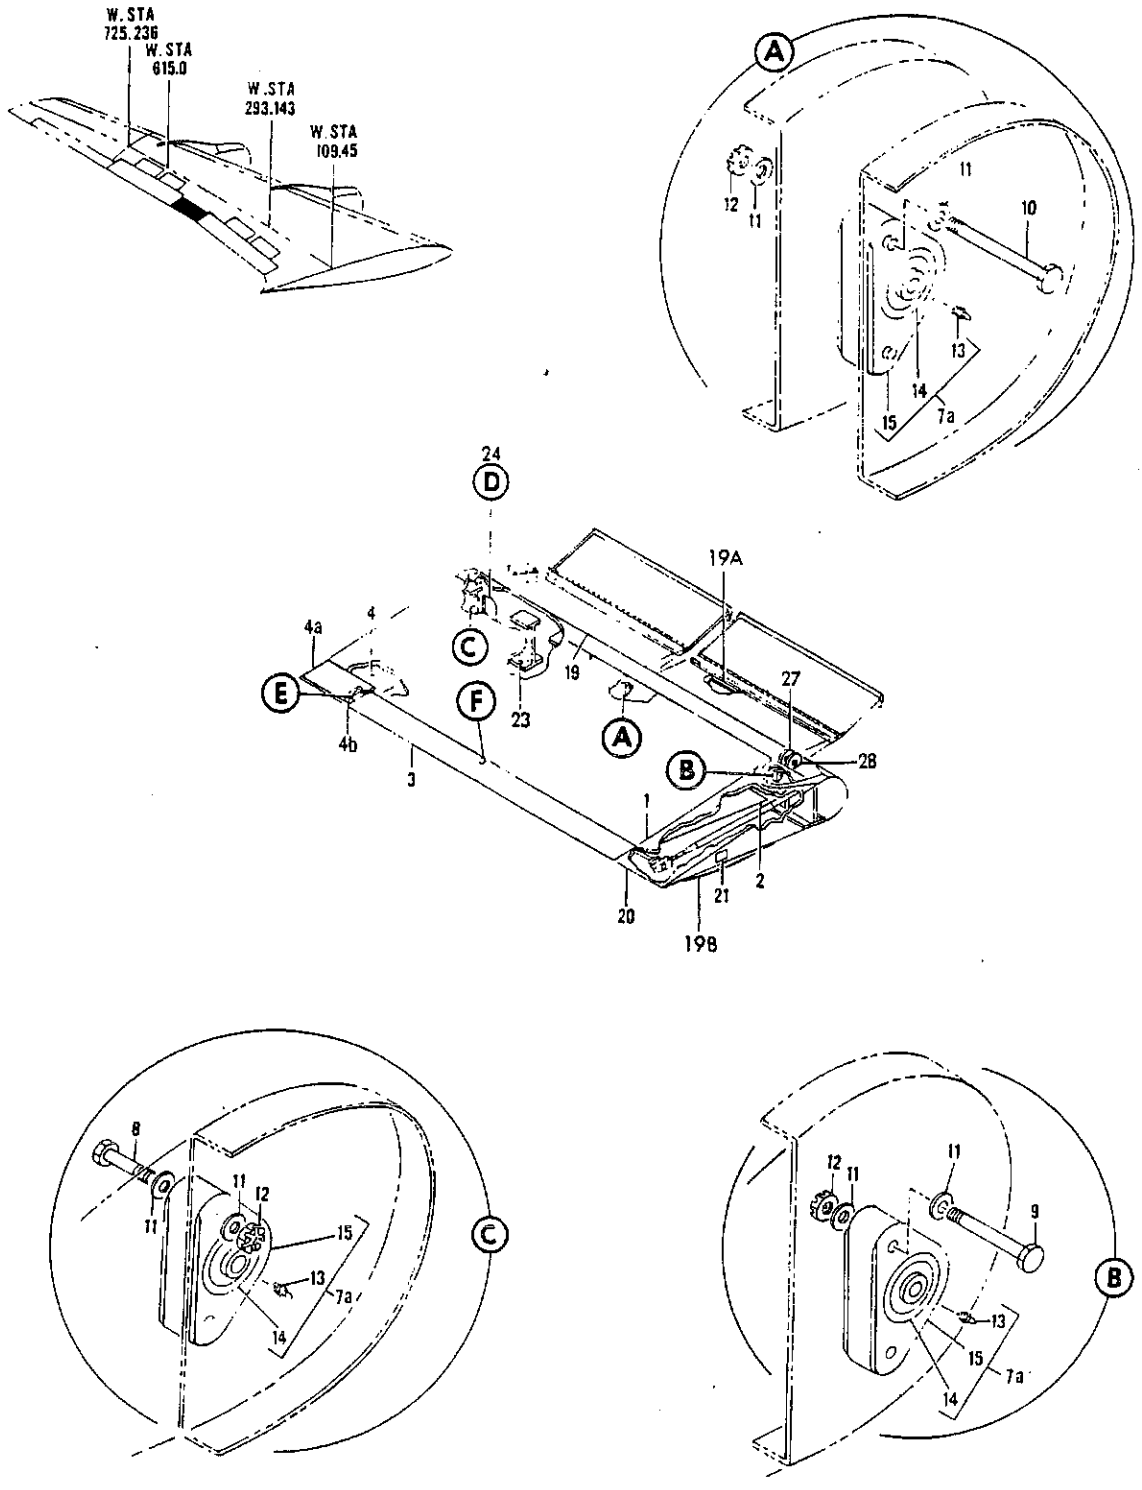


FIGURE 10. AILERON ASSY, INBOARD (SHEET 1)

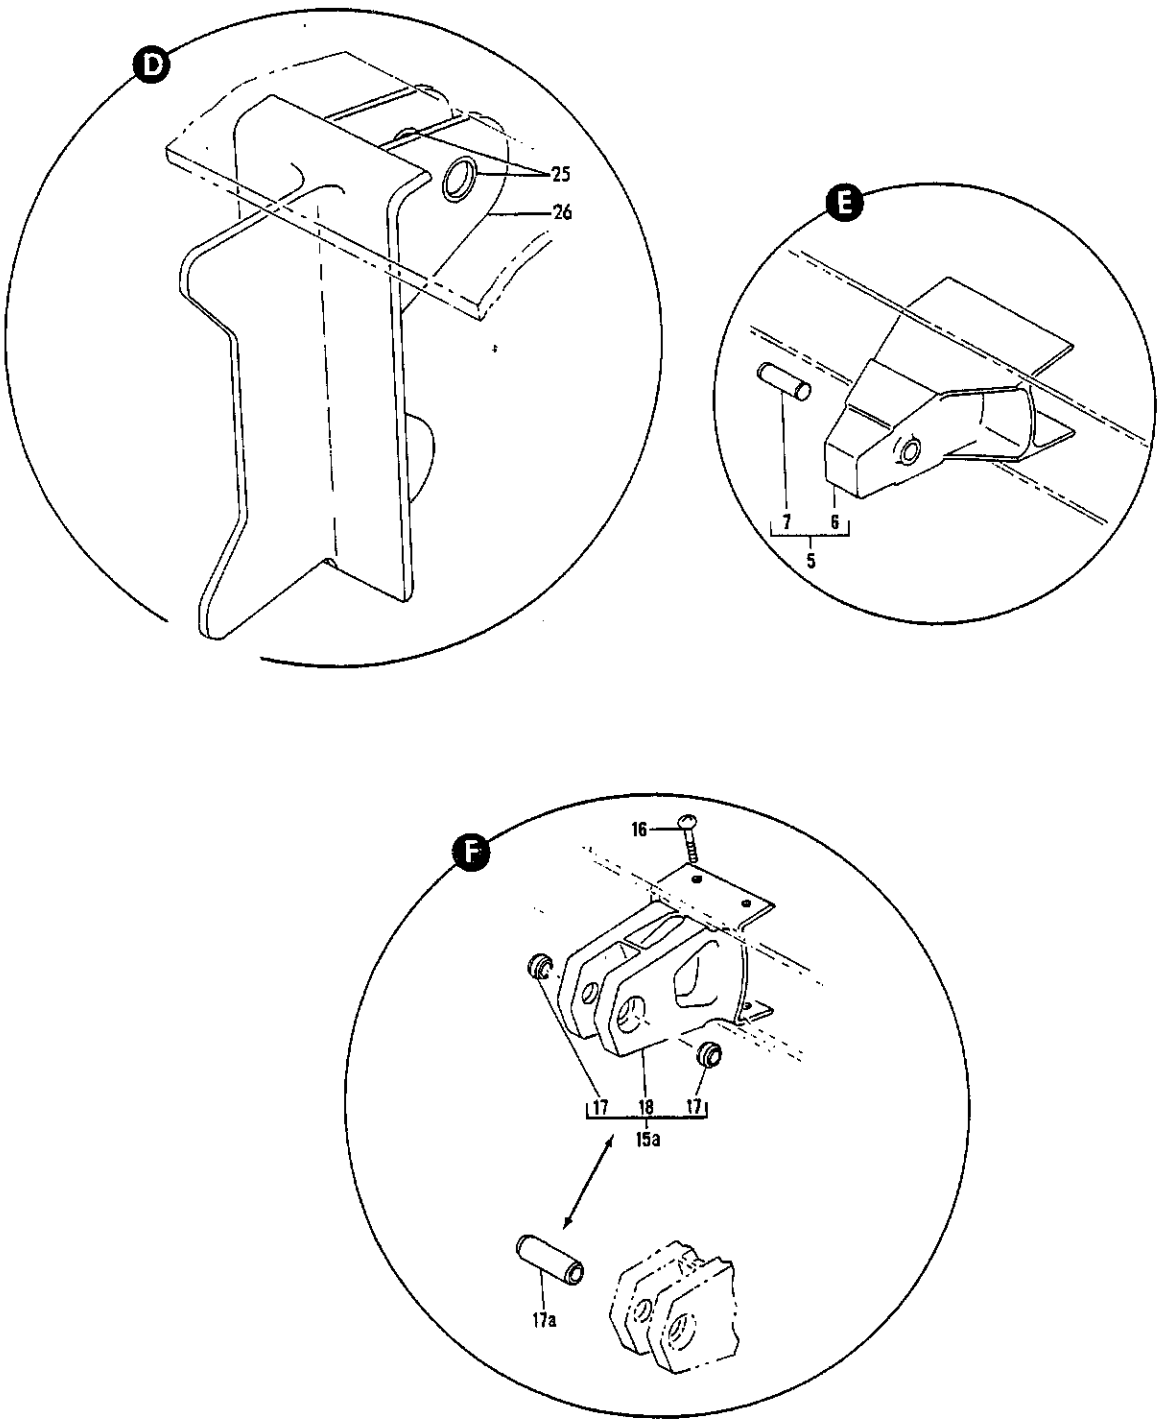


FIGURE 10. AILERON ASSY, INBOARD (SHEET 2)

	FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	10		5-86072-3095H	AILERON ASSY, INBOARD (LH) (ALTERED FROM 5-86072-3099H) (SEE FIG. 9, ITEM 38)	5299	RF
R			5-86072-3095	AILERON ASSY, INBOARD (LH) (ALTERED FROM 5-86072-3099) (REWORKED BY SB 2971) (SEE FIG. 9, ITEM 38)	0150	RF
R			5-86072-3095A	AILERON ASSY, INBOARD (LH) (ALTERED FROM 5-86072-3099A) (SEE FIG. 9, ITEM 38)	5151	RF
			5-86072-3087	AILERON ASSY, INBOARD (LH) (FOR SPARES ONLY-LESS TAB) . (CONSISTS OF PARTS DENOTED BY (S))		RF
			5-86072-3076	AILERON ASSY, INBOARD (RH) (SEE FIG. 9, ITEM 38). . . .	0203	RF
R			5-86072-3076H	AILERON ASSY, INBOARD (RH) (SEE FIG. 9, ITEM 38). . . .	5299	RF
R			5-86072-3076	AILERON ASSY, INBOARD (RH) (REWORKED BY SB 3148) (SEE . FIG. 9, ITEM 38)	0101 0450	RF
R			5-86072-3076A	AILERON ASSY, INBOARD (RH) (SEE FIG. 9, ITEM 38). . . .	5151	RF
			5-86072-3088	AILERON ASSY, INBOARD (RH) (FOR SPARES ONLY-LESS TAB) . (CONSISTS OF PARTS DENOTED BY (S))		RF
	1		4-5205-3005	. PANEL ASSY, INBOARD AILERON SKIN UPPER (LH ONLY). . .		1
	1		4-5205-3006	. PANEL ASSY, INBOARD AILERON SKIN UPPER (RH ONLY). . .		1
	2		4-5205-3007	. PANEL ASSY, INBOARD AILERON SKIN LOWER (LH ONLY). . .		1
	2		4-5205-3008	. PANEL ASSY, INBOARD AILERON SKIN LOWER (RH ONLY). . .		1
				ATTACHING PARTS		
			NAS517-3-4	. SCREW		22
				-------*-------		
	3		65-6774-3007	. TAB INSTL, INBOARD AILERON (LH ONLY) (SEE FIG. 14). .		1
	3		65-6774-3008	. TAB INSTL, INBOARD AILERON (RH ONLY) (SEE FIG. 14). .		1
	4	S	5-86072-3059	. PANEL ASSY, ACCESS (LH ONLY).		1
	4	S	5-86072-3060	. PANEL ASSY, ACCESS (RH ONLY).		1
				ATTACHING PARTS		
		S	NAS517-3-3	. SCREW		7
		S	NAS517-3-6	. SCREW		1
				-------*-------		
	4A	S	5-86072-3061	. PANEL ASSY, INBOARD AILERON SKIN (LH ONLY).		1
	4A	S	5-86072-3062	. PANEL ASSY, INBOARD AILERON SKIN (RH ONLY).		1
	4B	S	5-86072-3063	. PANEL ASSY, INBOARD AILERON SKIN (LH ONLY).		1
	4B	S	5-86072-3064	. PANEL ASSY, INBOARD AILERON SKIN (RH ONLY).		1
	5	S	65-7273-3001	. FITTING ASSY, INBOARD AILERON OUTBOARD TAB HINGE. . . SUPPORT (LH ONLY)		1
	5	S	65-7273-3002	. FITTING ASSY, INBOARD AILERON OUTBOARD TAB HINGE. . . SUPPORT (RH ONLY)		1
	6	S	65-7273-2003	. . FITTING, INBOARD AILERON OUTBOARD TAB HINGE SUPPORT (LH ONLY)		1
	6	S	65-7273-2004	. . FITTING, INBOARD AILERON OUTBOARD TAB HINGE SUPPORT (RH ONLY)		1
	7	S	90-9473-28	. . BUSHING, PRESSED FIT STRUCTURAL		1
	7A	S	6-68450-3000	. SUPPORT ASSY, INBOARD AILERON BEARING		3
				ATTACHING PARTS		
	8	S	NAS1104-17DW	. BOLT.		2
	9	S	NAS1104-39DW	. BOLT.		2
	10	S	NAS1104-42DW	. BOLT.		2
	11	S	AN960D416L	. WASHER.		12
	12	S	AN320-4	. NUT		6
				-------*-------		
	13	S	NAS516-1	. . FITTING		1
	14	S	BACB10C78Y	. . BEARING		1
	15	S	6-68450-2001	. . SUPPORT, INBOARD AILERON BEARING.		1
	15A	S	6-72071-3006	. FITTING ASSY, INBOARD AILERON CENTER TAB HINGE. . . SUPPORT		1
				ATTACHING PARTS		
	16	S	NAS221-14	. SCREW		4
				-------*-------		
	17A	S	90-9473-29	. . BUSHING, PRESSED FIT STRUCTURAL		1
	18	S	6-72071-3005	. . FITTING, INBOARD AILERON CENTER TAB HINGE SUPPORT .		1
	19	S	5-86074-3015	. STRUCTURE INSTL, INBOARD AILERON NOSE (LH ONLY) (SEE FIG. 12)		1
	19	S	5-86074-3016	. STRUCTURE INSTL, INBOARD AILERON NOSE (RH ONLY) (SEE FIG. 12)		1
	20	S	5-86071-3119	. END INSTL, INBOARD AILERON (LH ONLY) (SEE FIG. 11). .		1
	20	S	5-86071-3064	. END INSTL, INBOARD AILERON (RH ONLY) (REWORKED BY . . SB 3148) (MAY USE 5-86071-3138 AFTER SB 3148 INCORPORATION) (SEE FIG. 11)	0101	1
	20		5-86071-3138	. END INSTL, INBOARD AILERON (RH ONLY) (SEE FIG. 11). .	0299	1
	21	S	AN7510-1	. PLATE		1
				ATTACHING PARTS		
			BACR15BT3-4	. RIVET		4
				-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
10	5-86075-3009	. SPAR INSTL, INBOARD AILERON (LH).		1
	5-86075-3010	. SPAR INSTL, INBOARD AILERON (RH).		1
	5-86075-3009	. SPAR INSTL, INBOARD AILERON (LH).		1
	5-86075-3010	. SPAR INSTL, INBOARD AILERON (RH).		1
23	NAS517-3-4	. . SCREW		31
24	69-1353-4	. . SUPPORT ASSY, INBOARD AILERON SNUBBER AND HINGE . .		1
25	90-9473-6	. . . BUSHING, PRESSED FIT STRUCTURAL		2
26	69-1353-5	. . . SUPPORT, INBOARD SNUBBER AND HINGE.		1
27	9-61957-3001	. . SUPPORT, INBOARD AILERON CONTROL MECHANISM (LH) . .		1
27	9-61957-2004	. . SUPPORT, INBOARD AILERON CONTROL MECHANISM (RH) . .		1
28	9-62401-3001	. . SUPPORT, INBOARD AILERON CONTROL MECHANISM (LH) . .		1
28	9-62401-2004	. . SUPPORT, INBOARD AILERON CONTROL MECHANISM (RH) . .		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

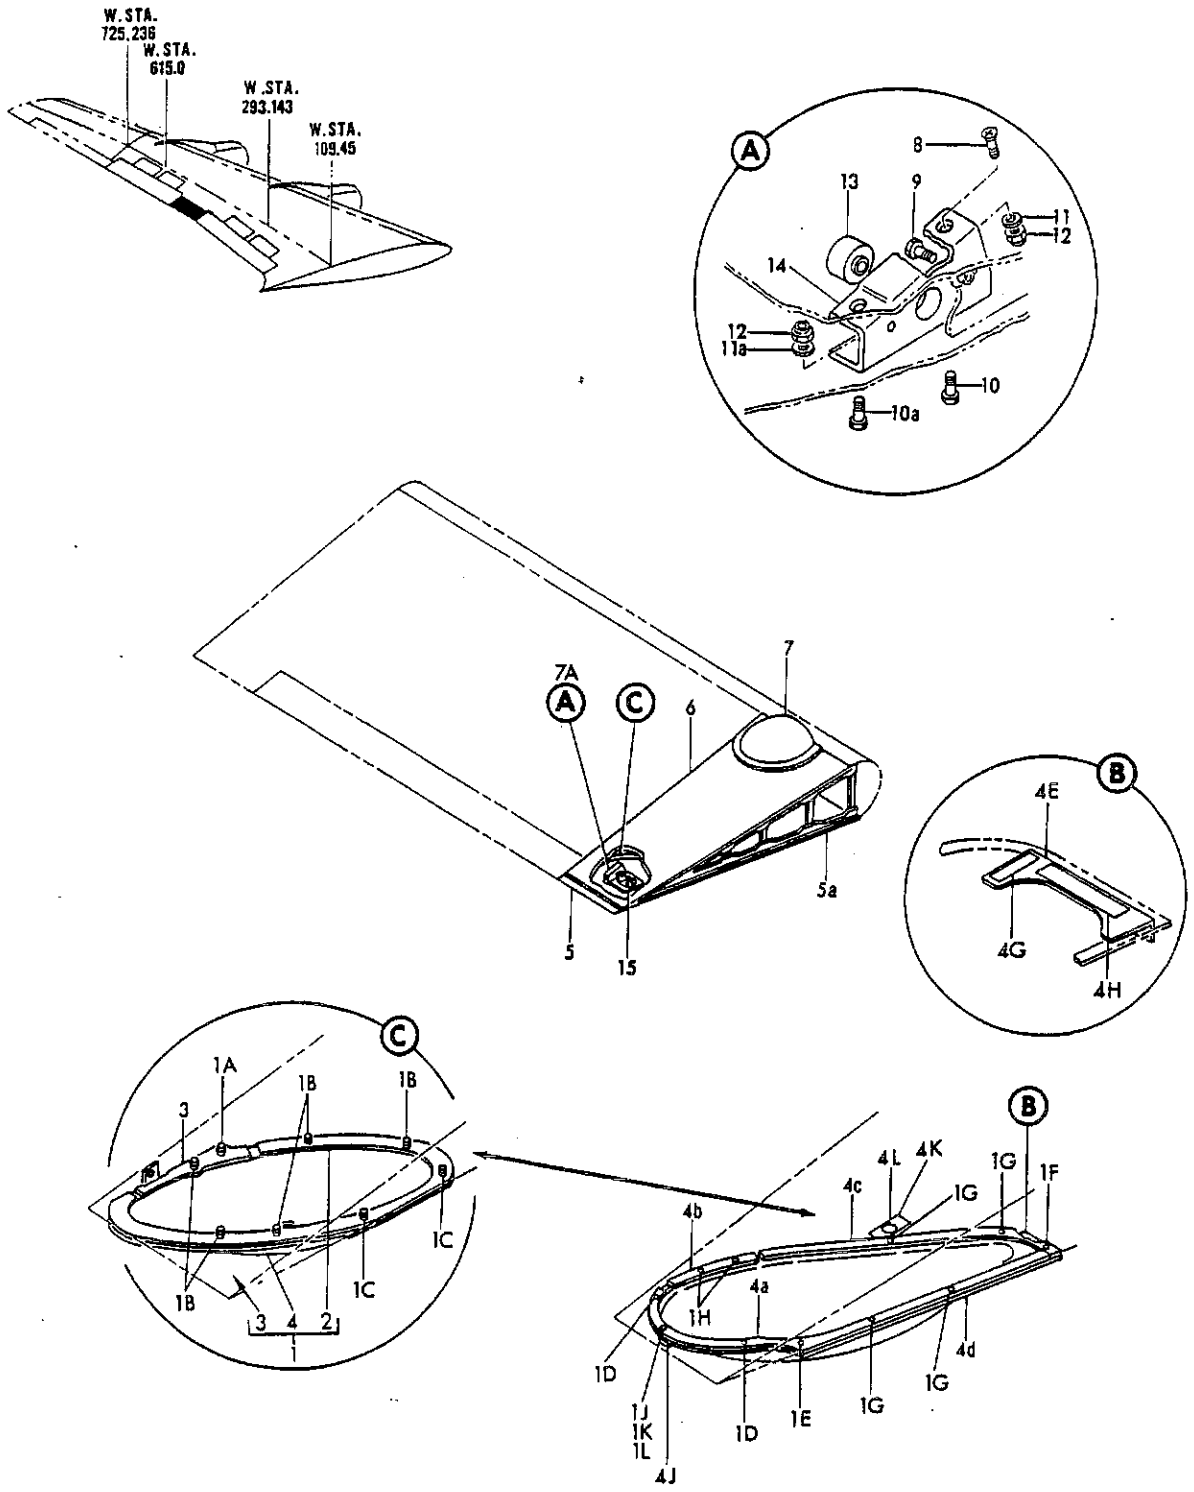


FIGURE 11. END INSTL, INBOARD AILERON

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
11	5-86071-3119	END INSTL, INBOARD AILERON (LH) (SEE FIG. 10, ITEM 20)		RF
	S 5-86071-3064	END INSTL, INBOARD AILERON (RH) (REWORKED BY SB 3148) . (MAY USE 5-86071-3138 AFTER SB 3148 INCORPORATION) (SEE FIG. 10, ITEM 20)	0101	RF
	5-86071-3138	END INSTL, INBOARD AILERON (RH) (SEE FIG. 10, ITEM 20)	0299	RF
1	69-11735-3	. FAIRING ASSY, INBOARD AILERON INBOARD END (LH ONLY) .		1
1	69-8606-3002	. FAIRING ASSY, INBOARD END (REWORKED BY SB 3148) . . . (RH ONLY) (MAY USE 69-8606-3004 OR 69-11735-4 AFTER SB 3148 INCORPORATION) (OPTIONAL 69-8606-3004)	0101	1
1	69-8606-3004	. FAIRING ASSY, INBOARD END (REWORKED BY SB 3148) . . . (RH ONLY) (OPTIONAL TO 69-8606-3002)	0101	1
1	69-11735-4	. FAIRING ASSY, INBOARD AILERON INBOARD END (RH ONLY) . ATTACHING PARTS	0299	1
1A	NAS517-3-6	. SCREW, (USED WITH 69-8606-3002)	0101	1
1B	NAS517-3-3	. SCREW, (USED WITH 69-8606-3002)	0101	5
1C	NAS517-3-2	. SCREW, (USED WITH 69-8606-3002)	0101	2
1D	NAS517-3-3	. SCREW, (USED WITH 69-11735-3 AND -4).		2
1E	NAS517-3-6	. SCREW, (USED WITH 69-11735-3)		1
1E	NAS517-3-3	. SCREW, (USED WITH 69-11735-4)		1
1F	NAS517-3-4	. SCREW, (USED WITH 69-11735-3)		1
1F	NAS517-3-2	. SCREW, (USED WITH 69-11735-4)		1
1G	NAS517-3-3	. SCREW, (USED WITH 69-11735-3 AND -4).		4
1H	NAS517-3-6	. SCREW, (USED WITH 69-11735-3 AND -4).		2
		-------*-------		
2	69-8606-3	. . STRIP, INBOARD AILERON INBOARD END FAIRING RUB (RH ONLY)	0101	1
3	69-8606-4	. . STRIP, INBOARD AILERON INBOARD END FAIRING RUB (RH ONLY)	0101	1
4	69-5808-3002	. . FAIRING, INBOARD AILERON INBOARD END (RH ONLY). . .	0101	1
4A	69-11735-5	. . STRIP, INBOARD AILERON INBOARD END RUB (USED ON . . 69-11735-1, -2, -3 AND -4)		1
4B	69-11735-6	. . STRIP, INBOARD AILERON INBOARD END RUB (USED ON . . 69-11735-1, -2, -3 AND -4)		1
4C	69-11735-7	. . STRIP, INBOARD AILERON INBOARD END RUB (USED ON . . 69-11735-1, -2, -3 AND -4)		1
4D	69-11407-5	. . FAIRING, INBOARD AILERON INBOARD END (LH ONLY). . .		1
4D	69-11407-6	. . FAIRING, INBOARD AILERON INBOARD END (RH ONLY). . .	0299	1
5	5-86071-1627	. FILLER, INBOARD AILERON END TRAILING EDGE (LH ONLY) .		1
5	5-86071-1628	. FILLER, INBOARD AILERON END TRAILING EDGE (RH ONLY) .		1
5A	5-86071-3121	. PANEL ASSY, INBOARD AILERON END LOWER BONDED (LH. . . ONLY)		1
5A	5-86071-3068	. PANEL ASSY, LOWER BONDED (RH ONLY) (USED ON . . . . . 5-86071-3064)	0101	1
5A	5-86071-3142	. PANEL ASSY, LOWER BONDED (RH ONLY) (USED ON . . . . . 5-86071-3138, -3146)	0299	1
6	5-86071-3069	. PANEL ASSY, INBOARD AILERON END UPPER BONDED (LH. . . ONLY)		1
6	5-86071-3070	. PANEL ASSY, INBOARD AILERON END UPPER BONDED (RH. . . ONLY)		1
7	9-66805-2001	. FAIRING, INBOARD AILERON MAST (LH ONLY)		1
7	9-66805-2002	. FAIRING, INBOARD AILERON MAST (RH ONLY) . . . . . ATTACHING PARTS		1
	NAS517-3-3	. SCREW		4
	NAS517-3-2	. SCREW		1
	NAS517-3-4	. SCREW		3
	NAS517-3-5	. SCREW		1
	AN960D10	. WASHER.		1
	NAS679A3W	. NUT		1
		-------*-------		
7A	66-3062-11	. FITTING ASSY, INBOARD TAB BEARING SUPPORT (LH ONLY) .		1
7A	66-3062-12	. FITTING ASSY, INBOARD TAB BEARING SUPPORT (RH ONLY) . ATTACHING PARTS		1
8	NAS517-3-3	. SCREW		2
9	NAS1103-3W	. BOLT.		2
10	BACB30EL3-4	. BOLT, (LH ONLY)		1
10	NAS1103-4W	. BOLT, (RH ONLY)		1
10A	NAS1103-4W	. BOLT.		1
11	AN960D10L	. WASHER.		2
11A	AN960PD10L	. WASHER, (LH ONLY)		2
11A	AN960D10L	. WASHER, (RH ONLY)		2
12	NAS679A3W	. NUT		4
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
11 13	BACB10C134RH	. . BEARING		1
14	66-3062-3	. . FITTING, INBOARD TAB BEARING SUPPORT (LH ONLY).		1
14	66-3062-4	. . FITTING, INBOARD TAB BEARING SUPPORT (RH ONLY).		1
15	66-10922-3	. FITTING, INBOARD AILERON TAB CONTROL SUPPORT (LH. ONLY)		1
		ATTACHING PARTS		
	NAS517-3-5	. SCREW -------*-------		6
	NAS333CP20	. SCREW		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

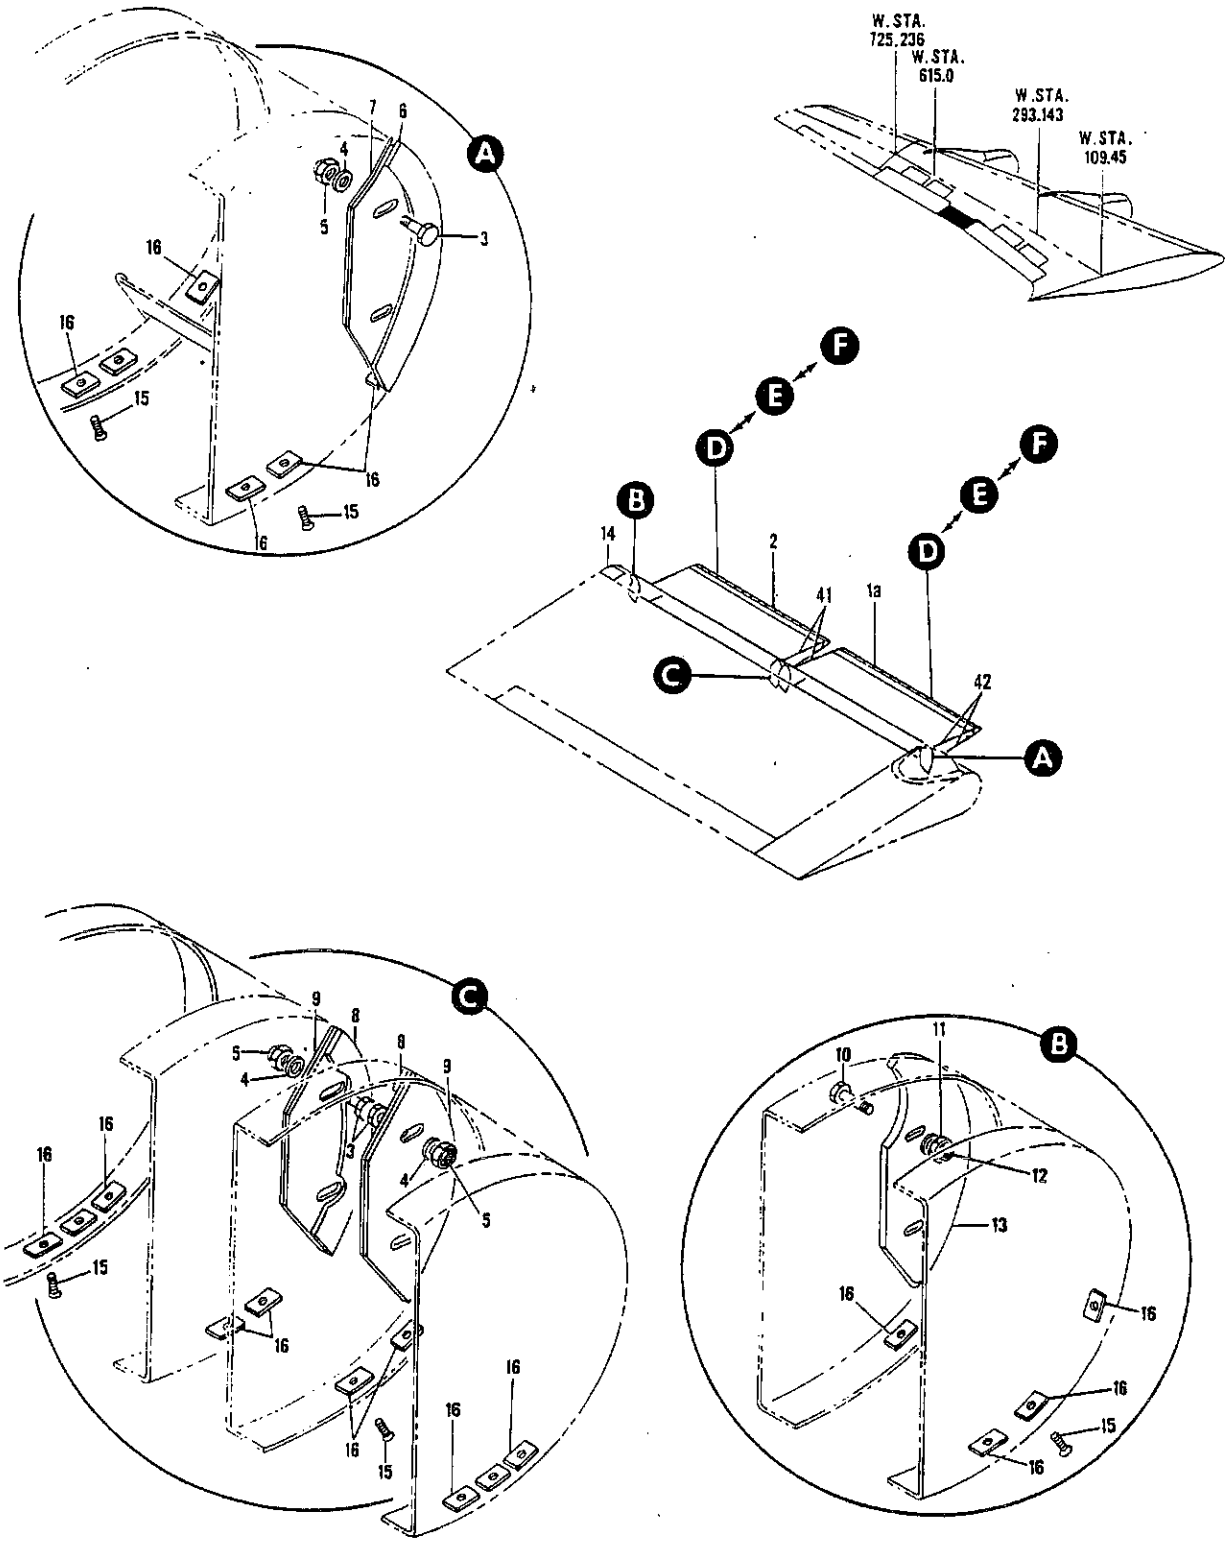


FIGURE 12. STRUCTURE INSTL, INBOARD AILERON NOSE (SHEET 1)

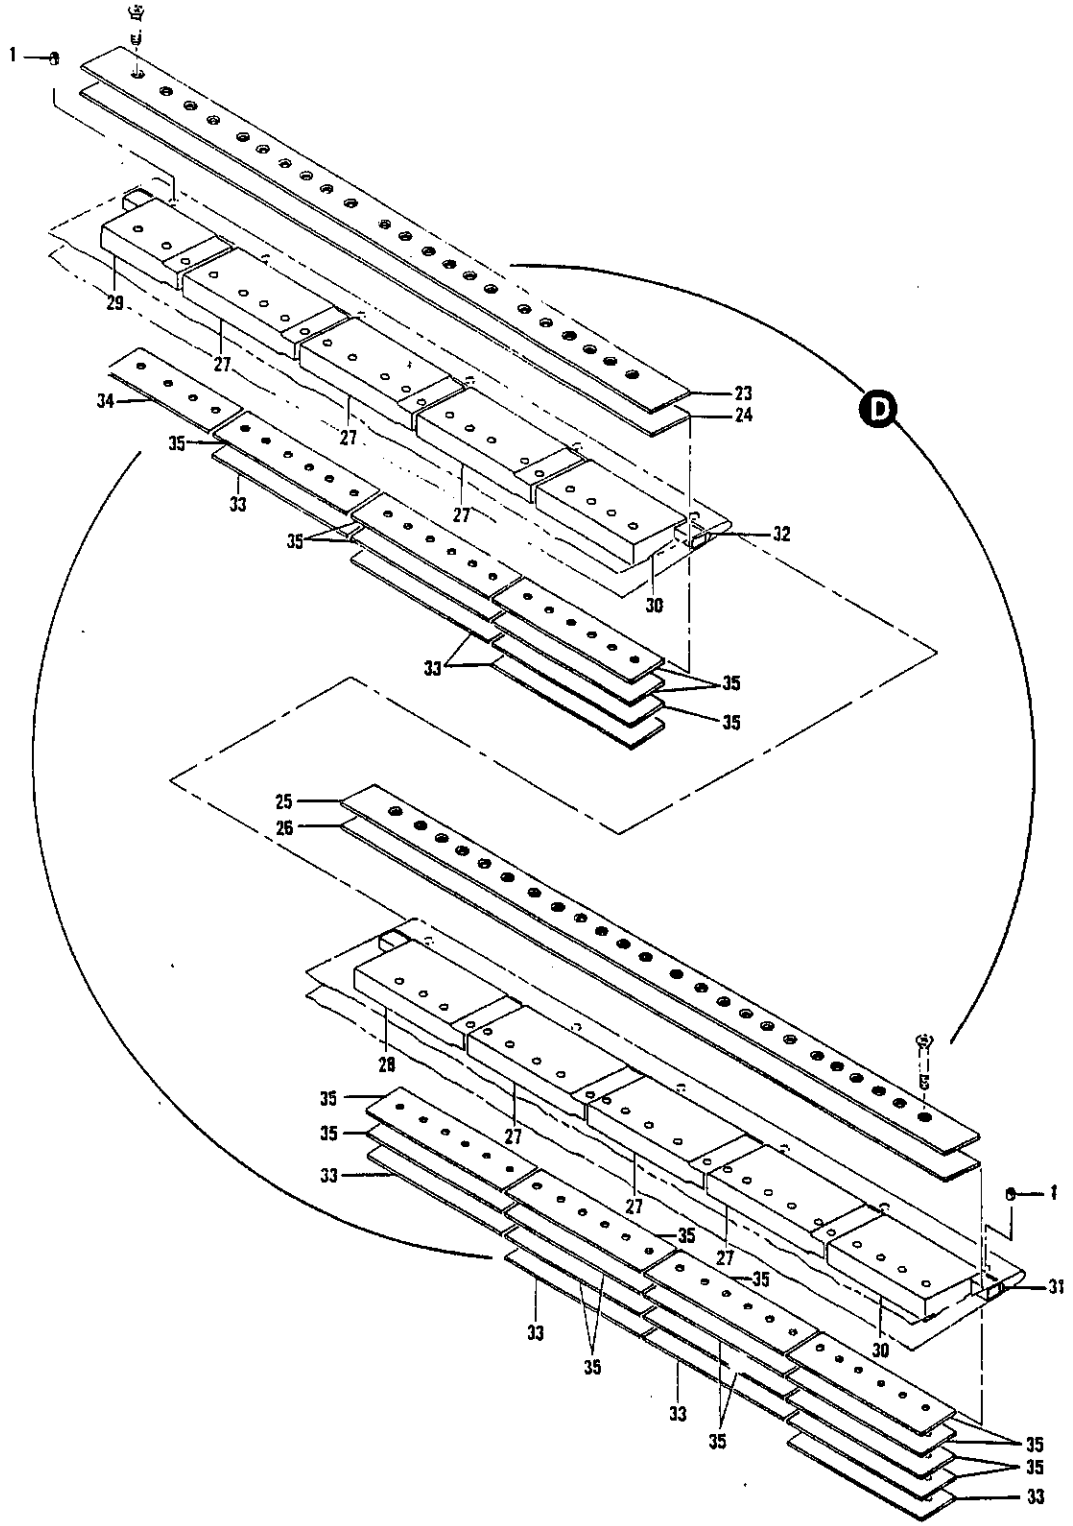


FIGURE 12. STRUCTURE INSTL, INBOARD AILERON NOSE (SHEET 2)

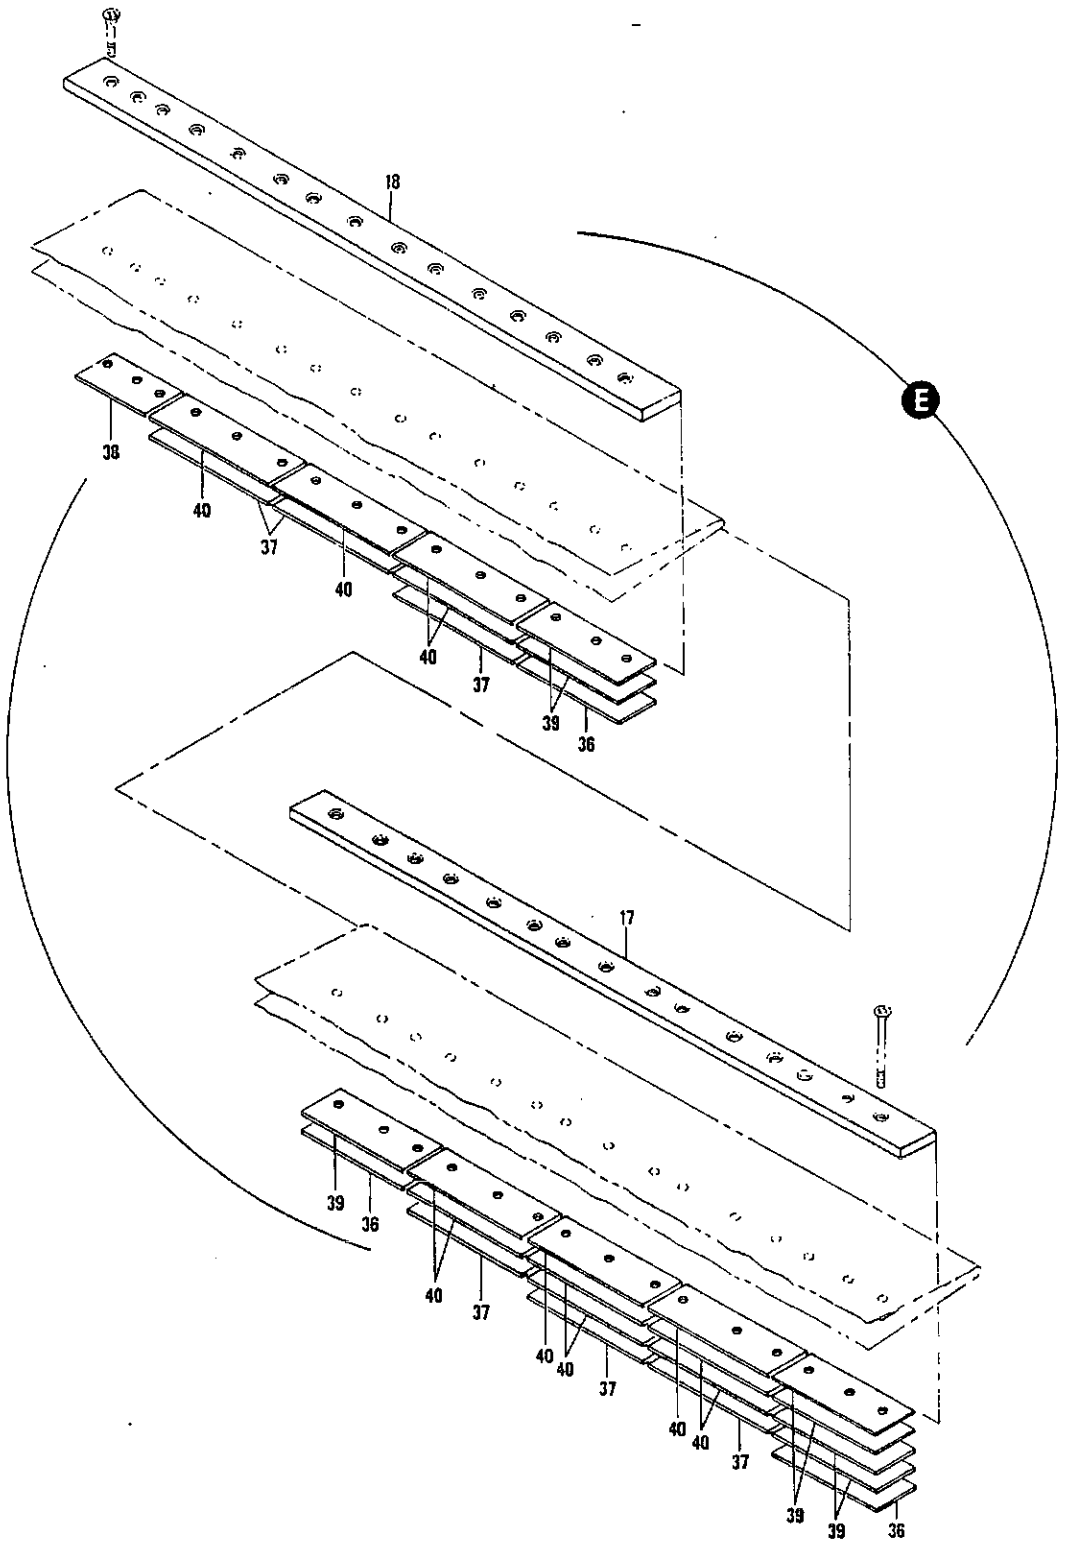


FIGURE 12. STRUCTURE INSTL, INBOARD AILERON NOSE (SHEET 3)

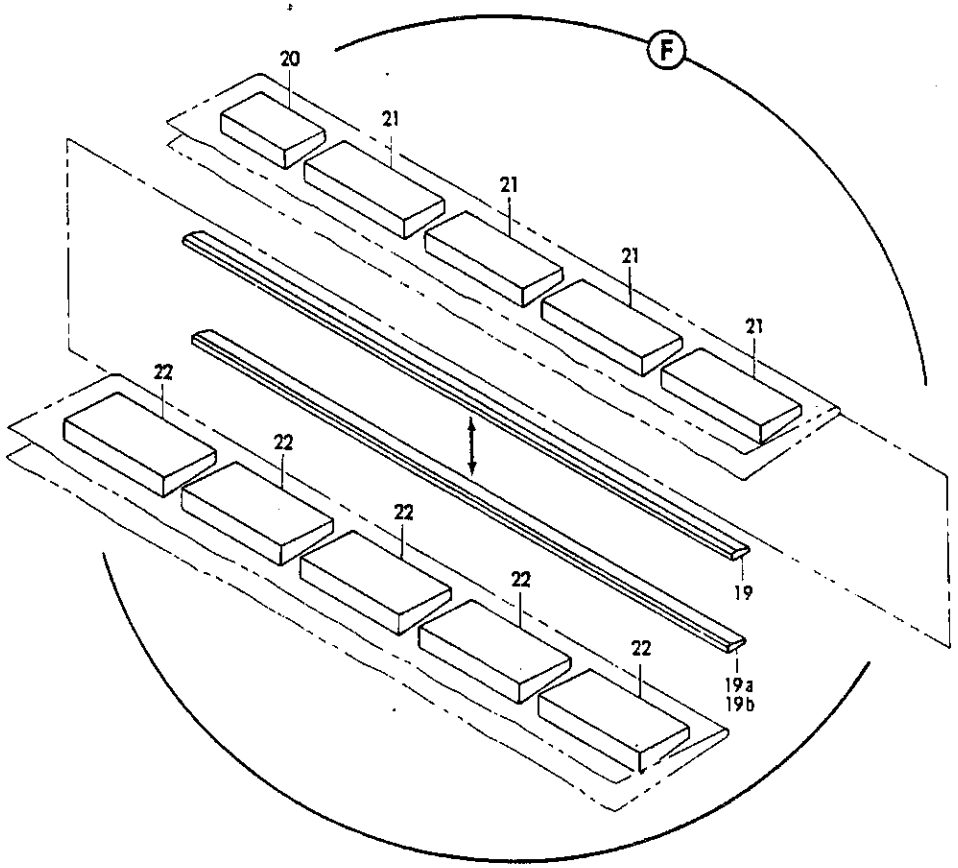


FIGURE 12. STRUCTURE INSTL, INBOARD AILERON NOSE (SHEET 4)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
12	5-86074-3015	STRUCTURE INSTL, INBOARD AILERON NOSE (LH) (SEE FIG.. 10, ITEM 19)		RF
	5-86074-3016	STRUCTURE INSTL, INBOARD AILERON NOSE (RH) (SEE FIG.. 10, ITEM 19)		RF
1	NAS561P3-11	. PIN		12
1A	9-61122-3019	. HINGE HALF, INBOARD AILERON BALANCE PANEL (LH ONLY) .		1
1A	9-61122-3020	. HINGE HALF, INBOARD AILERON BALANCE PANEL (RH ONLY) .		1
2	9-61122-3021	. HINGE HALF, INBOARD AILERON BALANCE PANEL (LH ONLY) .		1
2	9-61122-3022	. HINGE HALF, INBOARD AILERON BALANCE PANEL (RH ONLY) .		1
	90-5529-3000	. SEAL ASSY, INBOARD AILERON HINGE CAVITY		1
	90-5529-3003	. SEAL ASSY, INBOARD AILERON HINGE CAVITY		2
		ATTACHING PARTS		
3	AN3-5A	. BOLT.		6
4	AN960D10	. WASHER.		6
5	NAS679A3W	. NUT		6
		-------*-------		
6	90-5529-4	. . SEAL, INBOARD AILERON HINGE CAVITY (USED ON . . . . 90-5529-3000)		1
7	90-5529-6	. . SEAL, INBOARD AILERON HINGE CAVITY (USED ON . . . . 90-5529-3000)		1
8	90-5529-5	. . SEAL, INBOARD AILERON HINGE CAVITY (USED ON . . . . 90-5529-3003)		1
9	90-5529-7	. . SEAL, INBOARD AILERON HINGE CAVITY (USED ON . . . . 90-5529-3003)		1
	90-5529-3001	. SEAL ASSY, INBOARD AILERON HINGE CAVITY (LH ONLY) . .		1
	90-5529-3002	. SEAL ASSY, INBOARD AILERON HINGE CAVITY (RH ONLY) . .		1
		ATTACHING PARTS		
10	AN3-6A	. BOLT.		2
11	AN960D10	. WASHER.		2
12	NAS679A3W	. NUT		2
		-------*-------		
13	90-5529-8	. . SEAL, INBOARD AILERON HINGE CAVITY.		1
14	66-9351-1	. DOOR ASSY, INBOARD AILERON SNUBBER ACCESS (LH ONLY) .		1
14	66-9351-2	. DOOR ASSY, INBOARD AILERON SNUBBER ACCESS (RH ONLY) .		1
		ATTACHING PARTS		
	NAS517-3-1	. SCREW		2
		-------*-------		
15	NAS517-3-3	. SCREW		20
16	3-93700-2000	. SHIM, INBOARD AILERON ANCHOR NUT.		20
19A	65-4731-3001	. WEIGHT, INBOARD AILERON NOSE BALANCE (LH ONLY). . . .		3
23	69-12022-16	. WEIGHT, INBOARD AILERON NOSE BALANCE.		1
24	69-18086-1	. WEIGHT, INBOARD AILERON NOSE BALANCE.		AR
25	69-12022-15	. WEIGHT, INBOARD AILERON NOSE BALANCE.		1
26	69-18086	. WEIGHT, INBOARD AILERON NOSE BALANCE.		AR
27	69-17040-1	. WEIGHT, INBOARD AILERON BALANCE		6
28	69-17040-2	. WEIGHT, INBOARD AILERON BALANCE		1
29	69-17040-3	. WEIGHT, INBOARD AILERON BALANCE		1
30	69-17040-4	. WEIGHT, INBOARD AILERON BALANCE		2
31	60-2641-3001	. WEIGHT, INBOARD AILERON NOSE BALANCE.		1
32	60-2641-3002	. WEIGHT, INBOARD AILERON NOSE BALANCE.		1
33	65-1091-1	. WEIGHT, INBOARD AILERON BALANCE (LH ONLY)		7
33	65-1091-2	. WEIGHT, INBOARD AILERON BALANCE (RH ONLY)		7
34	65-1091-3	. WEIGHT, INBOARD AILERON BALANCE (LH ONLY)		1
34	65-1091-4	. WEIGHT, INBOARD AILERON BALANCE (RH ONLY)		1
35	65-1091-16	. WEIGHT, INBOARD AILERON BALANCE (LH ONLY)		AR
35	65-1091-16	. WEIGHT, INBOARD AILERON BALANCE (RH ONLY)		AR
		ATTACHING PARTS		
	NAS517-3-5	. SCREW		8
	NAS517-3-19	. SCREW, (OPTIONALS NAS517-3-17, NAS517-3-18)		18
	NAS517-3-18	. SCREW, (OPTIONALS NAS517-3-16, NAS517-3-17)		12
	NAS517-3-17	. SCREW, (OPTIONALS NAS517-3-15, NAS517-3-16)		6
	NAS517-3-16	. SCREW, (OPTIONALS NAS517-3-14, NAS517-3-15)		4
	NAS517-3-20	. SCREW, (OPTIONALS NAS517-3-18, NAS517-3-19)		6
		-------*-------		
41	5-86074-2003	. SKIN, INBOARD AILERON NOSE STRUCTURE.		2
42	5-86074-2004	. SKIN, INBOARD AILERON NOSE STRUCTURE.		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

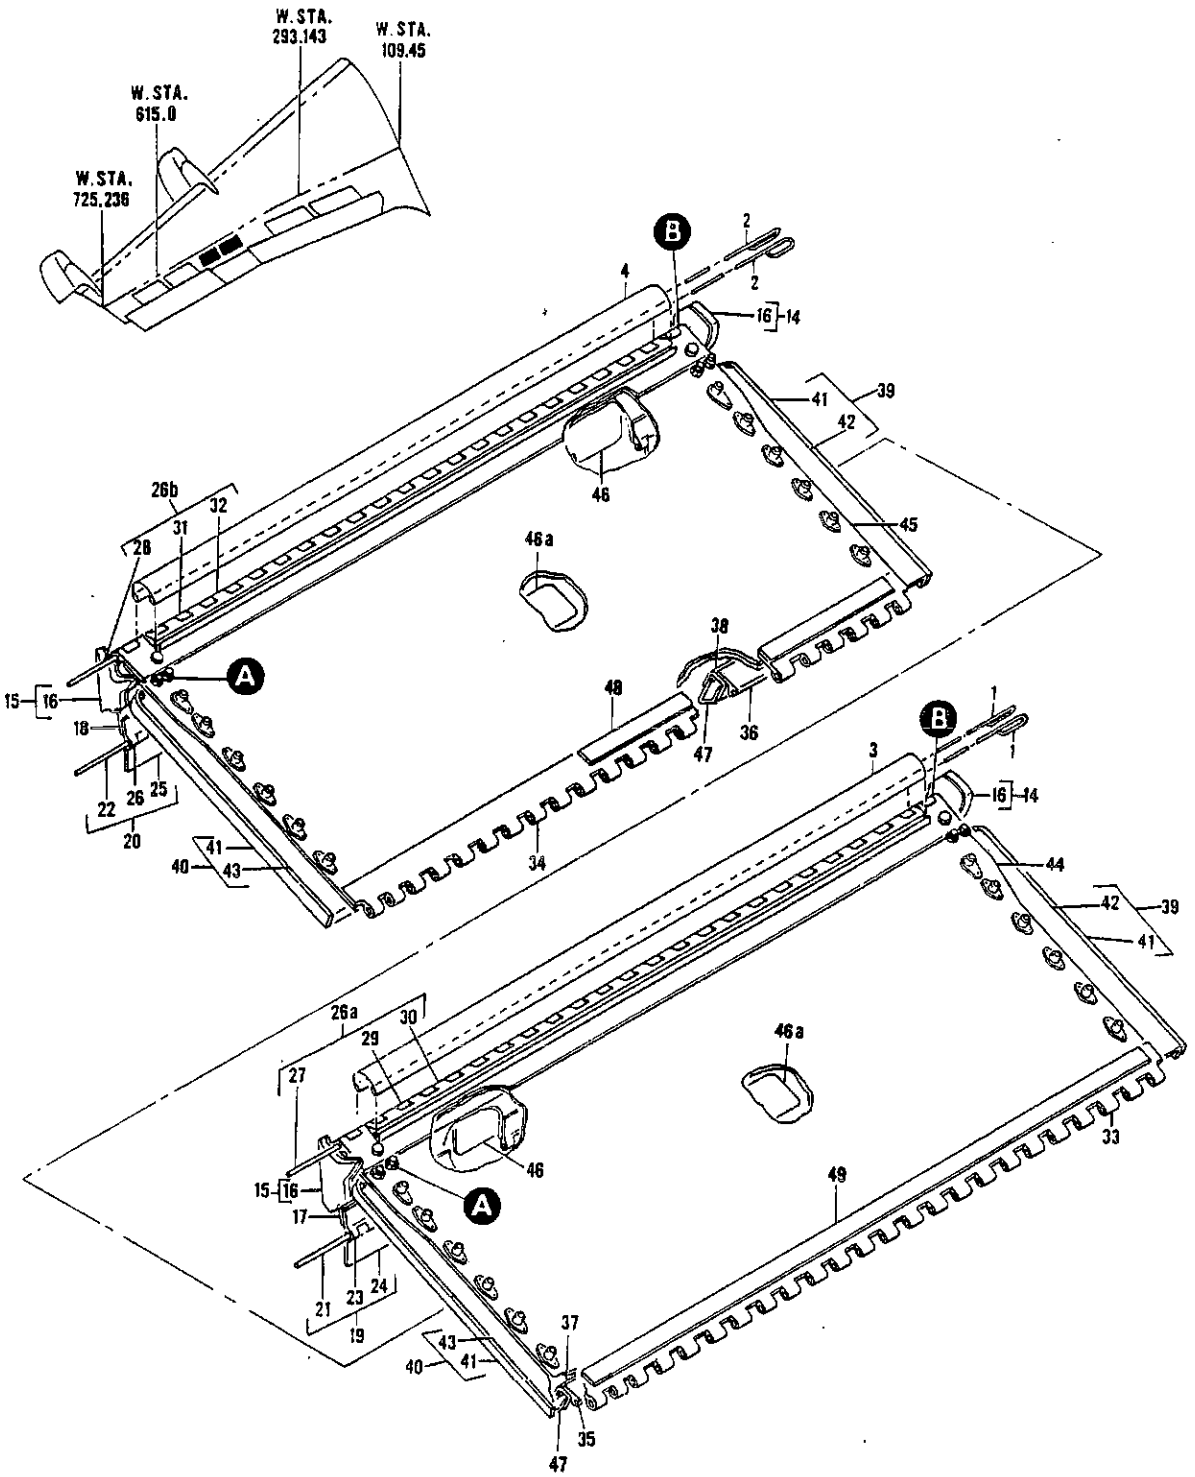


FIGURE 13. PANEL ASSY, INBOARD AILERON BALANCE (SHEET 1)

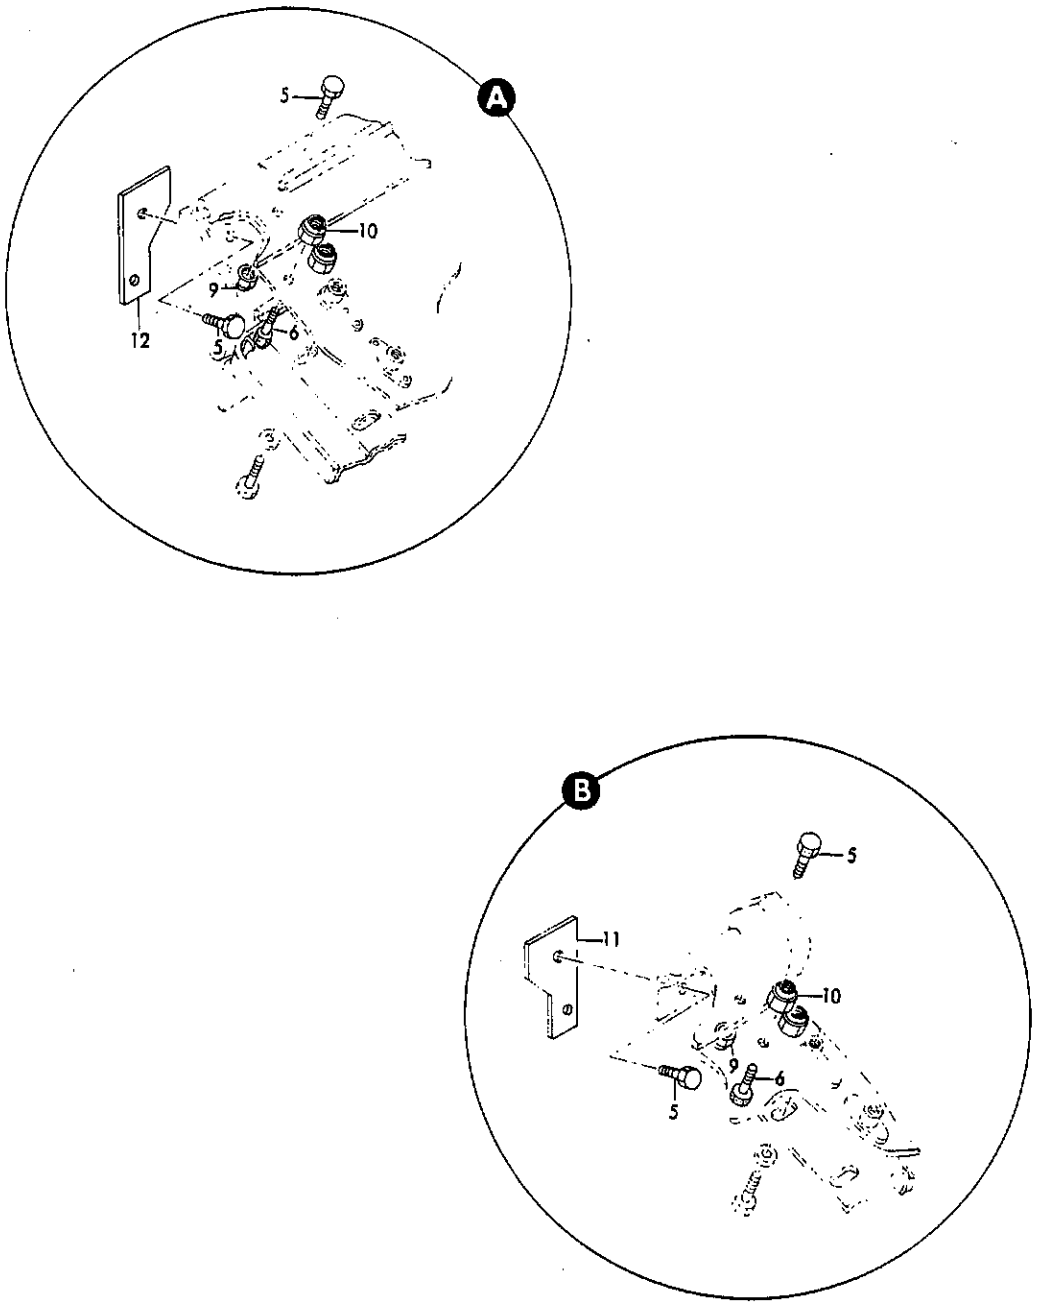


FIGURE 13. PANEL ASSY, INBOARD AILERON BALANCE (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
13	5-87140-3019	PANEL ASSY, INBOARD AILERON BALANCE (SEE FIG. 9, ITEM 36)		RF
	5-87140-3020	PANEL ASSY, INBOARD AILERON BALANCE (SEE FIG. 9, ITEM 37)		RF
1	BACP18G1-3010	. PIN, (USED ON 5-87140-3015, -3017, -3019 AND -3023)		2
2	BACP18G1-2830	. PIN, (USED ON 5-87140-3016, -3018, -3020 AND -3024)		2
3	9-64838-13	. SEAL, INBOARD AILERON BALANCE PANEL FABRIC (USED ON 5-87140-3015, -3017, -3019 AND -3023)		1
4	9-64838-14	. SEAL, INBOARD AILERON BALANCE PANEL FABRIC (USED ON 5-87140-3016, -3018, -3020 AND -3024)		1
5	NAS1303-3W	. BOLT.		2
6	NAS1303-4W	. BOLT.		2
9	NAS679A3W	. NUT		2
10	NAS679A06W	. NUT		4
11	63-1123-3001	. RETAINER ASSY, INBOARD AILERON BALANCE PANEL SEAL		1
12	63-1123-3002	. RETAINER ASSY, INBOARD AILERON BALANCE PANEL SEAL		1
14	6-72099-3007	. SEAL ASSY		1
15	6-72099-3008	. SEAL ASSY		1
16	6-72099-2021	. . SEAL, INBOARD AILERON BALANCE PANEL		1
17	5-87140-2004	. WEB, INBOARD AILERON BALANCE PANEL (USED ON 5-87140-3015, -3017, -3019 AND -3023)		1
18	5-87140-2005	. WEB, INBOARD AILERON BALANCE PANEL (USED ON 5-87140-3016, -3018, -3020 AND -3024)		1
19	9-63228-3001	. HINGE ASSY, INBOARD AILERON BALANCE PANEL HINGE NO. 1 (USED ON 5-87140-3015, -3017, -3019 AND -3023)		1
20	9-63228-3002	. HINGE ASSY, INBOARD AILERON BALANCE PANEL HINGE NO. 1 (USED ON 5-87140-3016, -3018, -3020 AND -3024)		1
21	9-63228-8	. . PIN, INBOARD AILERON BALANCE PANEL HINGE NO. 1. (USED ON 9-63228-3001)		1
22	9-63228-7	. . PIN, INBOARD AILERON BALANCE PANEL HINGE NO. 1. (USED ON 9-63228-3002)		1
23	9-63228-2003	. . HINGE HALF, INBOARD AILERON BALANCE PANEL HINGE NO. 1 (USED ON 9-63228-3001)		1
24	9-63228-2004	. . HINGE HALF, INBOARD AILERON BALANCE PANEL HINGE NO. 1 (USED ON 9-63228-3001)		1
25	9-63228-2005	. . HINGE HALF, INBOARD AILERON BALANCE PANEL HINGE NO. 1 (USED ON 9-63228-3002)		1
26	9-63228-2006	. . HINGE HALF, INBOARD AILERON BALANCE PANEL HINGE NO. 1 (USED ON 9-63228-3002)		1
26A	9-63229-3001	. HINGE ASSY, INBOARD AILERON BALANCE PANEL HINGE NO. 2 (USED ON 5-87140-3015, -3017, -3019 AND -3023)		1
26B	9-63229-3002	. HINGE ASSY, INBOARD AILERON BALANCE PANEL HINGE NO. 2 (USED ON 5-87140-3016, -3018, -3020 AND -3024)		1
27	9-63229-7	. . PIN, INBOARD AILERON BALANCE PANEL HINGE NO. 2. (USED ON 9-63229-3001)		1
28	9-63229-8	. . PIN, INBOARD AILERON BALANCE PANEL HINGE NO. 2. (USED ON 9-63229-3002)		1
29	9-63229-2003	. . HINGE HALF, INBOARD AILERON BALANCE PANEL HINGE NO. 2 (USED ON 9-63229-3001)		1
30	9-63229-2004	. . HINGE HALF, INBOARD AILERON BALANCE PANEL HINGE NO. 2 (USED ON 9-63229-3001)		1
31	9-63229-2005	. . HINGE HALF, INBOARD AILERON BALANCE PANEL HINGE NO. 2 (USED ON 9-63229-3002)		1
32	9-63229-2006	. . HINGE HALF, INBOARD AILERON BALANCE PANEL HINGE NO. 2 (USED ON 9-63229-3002)		1
33	9-61122-3013	. HINGE HALF, INBOARD AILERON BALANCE PANEL HINGE NO. 3 (USED ON 5-87140-3015, -3017, -3019 AND -3023)		1
34	9-61122-2010	. HINGE HALF, INBOARD AILERON BALANCE PANEL HINGE NO. 3 (USED ON 5-87140-3016, -3018, -3020 AND -3024)		1
35	5-87140-3005	. EXTRUSION, INBOARD AILERON HINGE RETAINER SEAL (USED ON 5-87140-3015, -3017, -3019 AND -3023)		1
36	5-87140-3006	. EXTRUSION, INBOARD AILERON HINGE RETAINER SEAL (USED ON 5-87140-3016, -3018, -3020 AND -3024)		1
37	69-21079-1	. CHANNEL ASSY, INBOARD AILERON ADJUSTABLE WEIGHT RETAINER (USED ON 5-87140-3015, -3017, -3019 AND -3023)		1
38	69-21079-2	. CHANNEL ASSY, INBOARD AILERON ADJUSTABLE WEIGHT RETAINER (USED ON 5-87140-3016, -3018, -3020 AND -3024)		1
39	6-72425-3001	. SEAL ASSY, INBOARD AILERON END BALANCE PANEL.		1
40	6-72425-3002	. SEAL ASSY, INBOARD AILERON END BALANCE PANEL.		1
		ATTACHING PARTS		
	AN3-5A	. BOLT.		8
	AN960D10	. WASHER.		8
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
13 41	6-72425-5	. . SEAL, INBOARD AILERON END BALANCE PANEL MOHAIR. . . (BAC1523-17 X 12 IN. LG)		1
42	6-72425-7	. . SPOTWELD ASSY, INBOARD AILERON END BALANCE PANEL. . SEAL (USED ON 6-72425-3001)		1
43	6-72425-8	. . SPOTWELD ASSY, INBOARD AILERON END BALANCE PANEL. . SEAL (USED ON 6-72425-3002)		1
44	5-86073-3004	. PANEL ASSY, INBOARD AILERON BALANCE (USED ON. . . . . 5-87140-3017, -3019 AND -3023)		1
45	5-86073-3005	. PANEL ASSY, INBOARD AILERON BALANCE (USED ON. . . . . 5-87140-3018, -3020 AND -3024)		1
46A	AN7510F1	. PLATE		1
47	5-87140-3013	. WEIGHT, INBOARD AILERON BALANCE PANEL ADJUSTABLE. . . (USED ON 5-87140-3015, -3017, -3019 AND -3023)		1
47	5-87140-3014	. WEIGHT, INBOARD AILERON BALANCE PANEL ADJUSTABLE. . . (USED ON 5-87140-3016, -3018, -3020 AND -3024)		1
48	69-12022-8	. BALANCE WEIGHT, INBOARD AND OUTBOARD AILERON (USED ON 5-87140-3016, -3018, -3020 AND -3024)		1
49	69-12022-9	. BALANCE WEIGHT, INBOARD AND OUTBOARD AILERON (USED ON 5-87140-3015, -3017, -3019 AND -3023)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

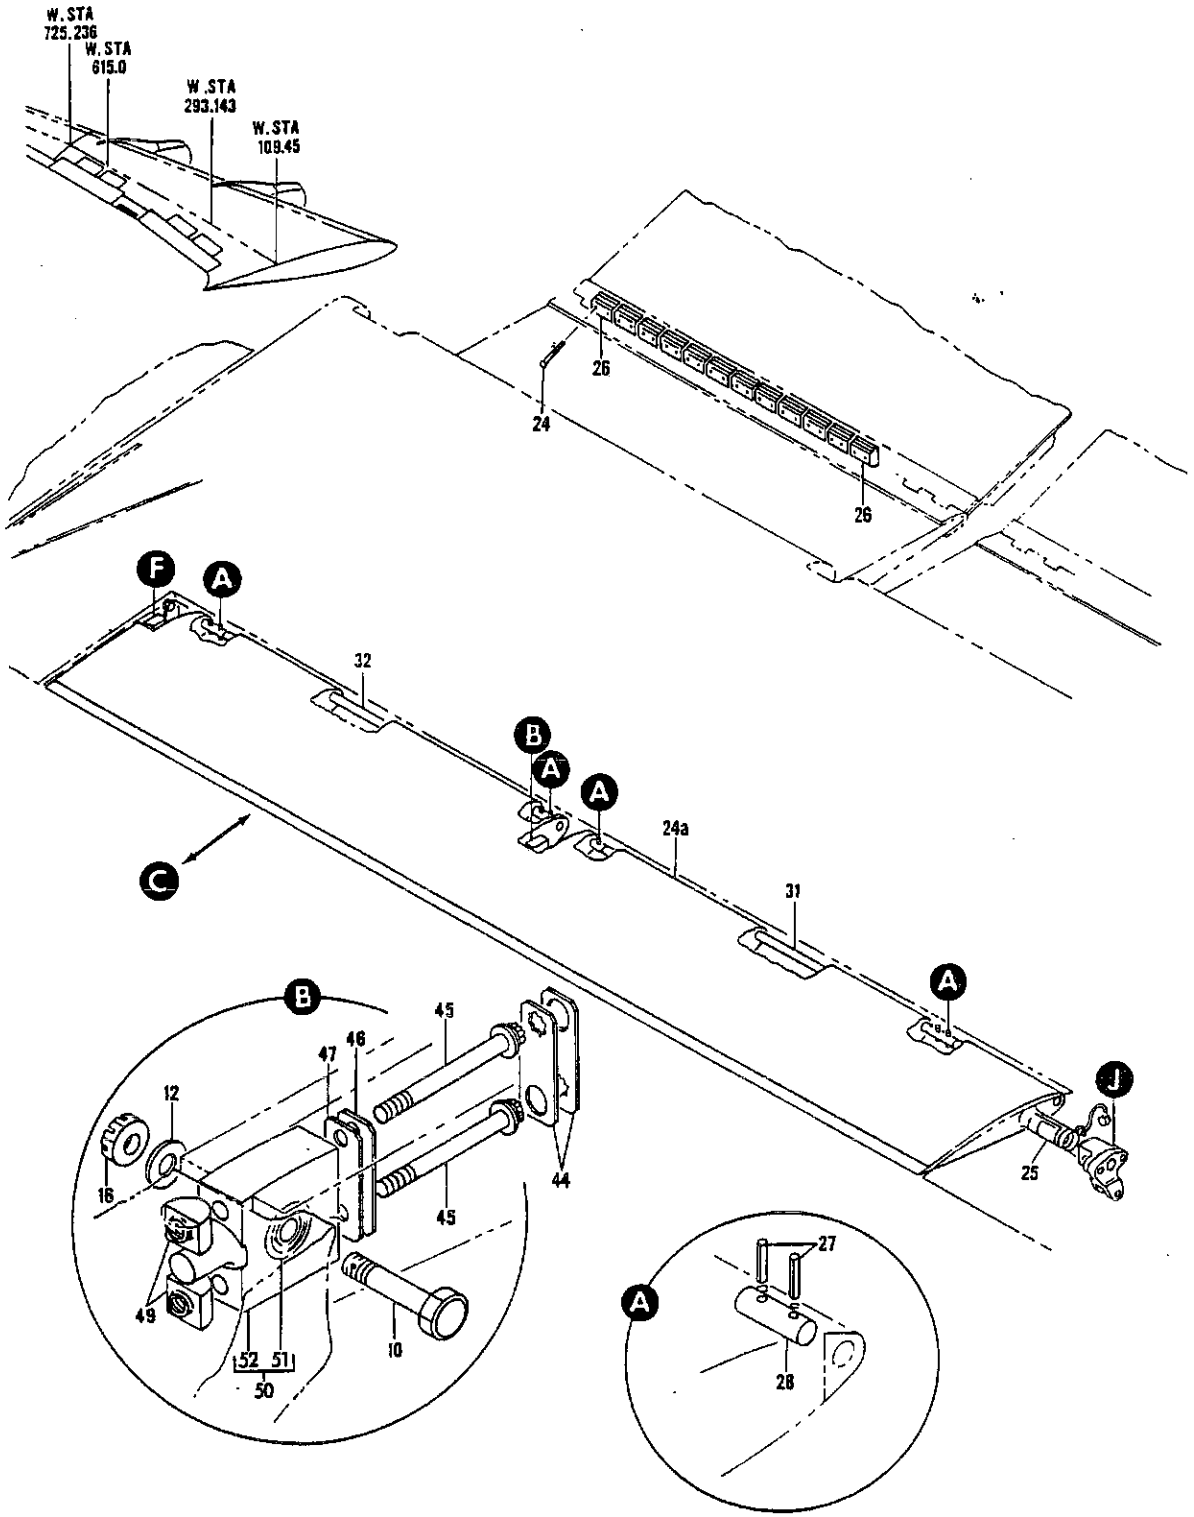


FIGURE 14. TAB INSTL, INBOARD AILERON (SHEET 1)

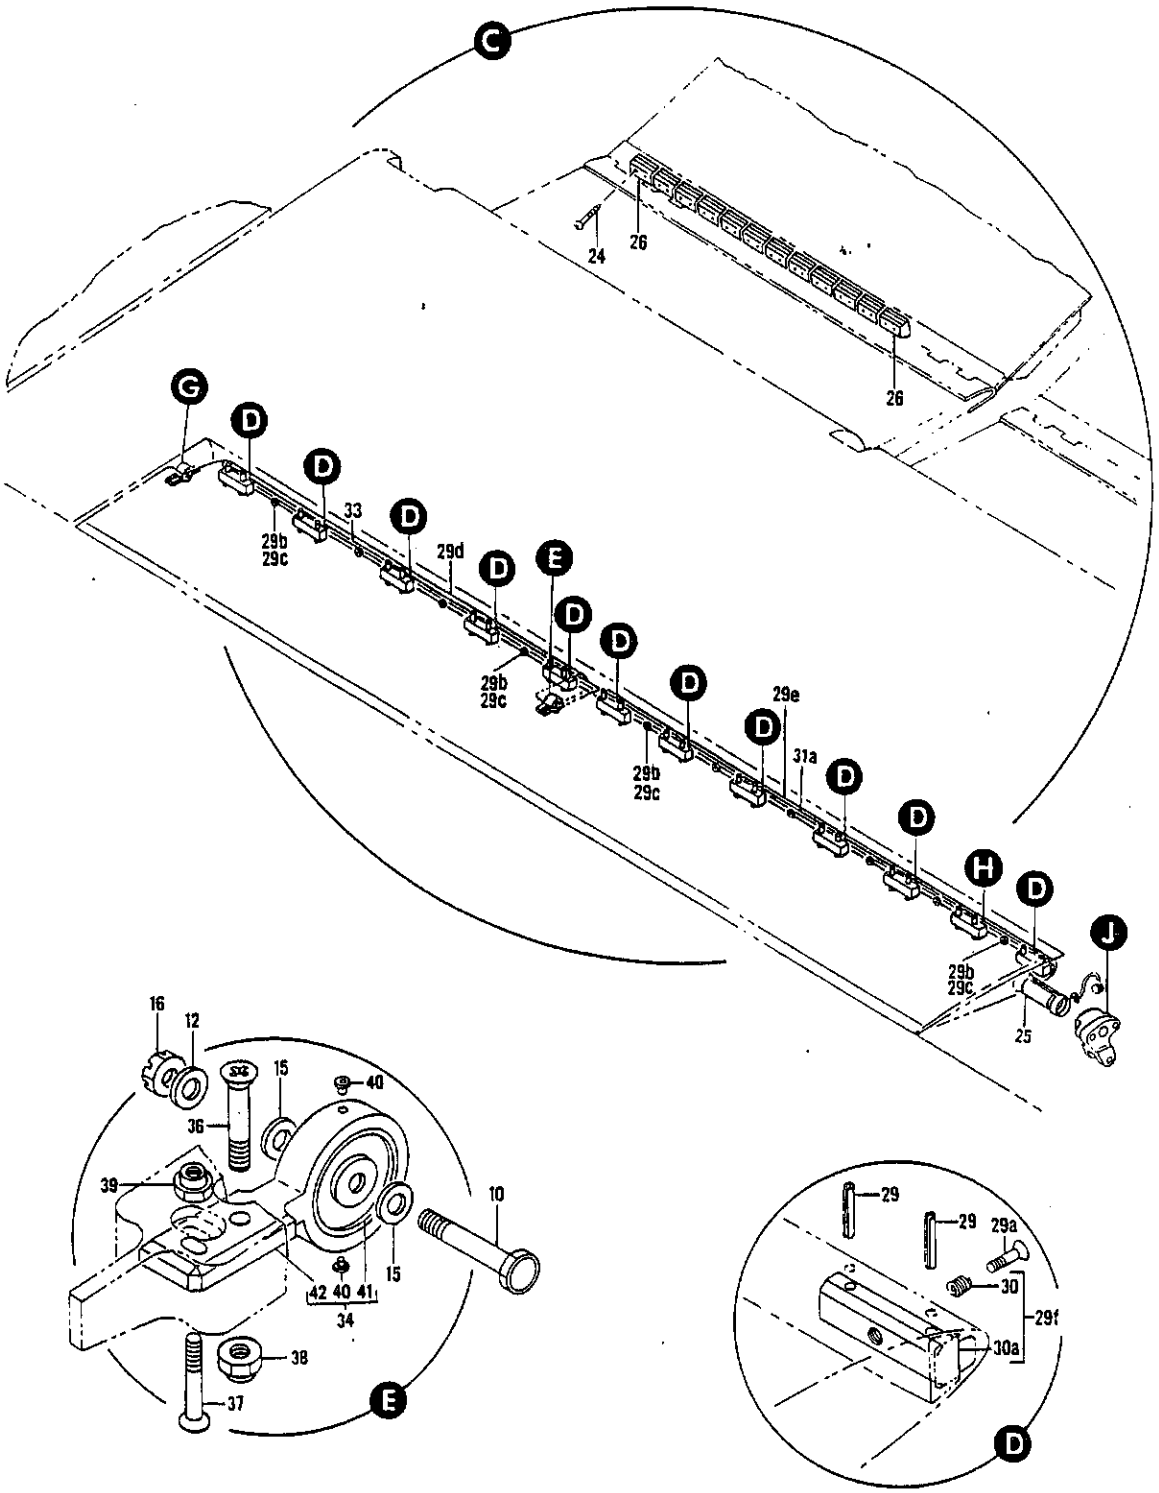


FIGURE 14. TAB INSTL, INBOARD AILERON (SHEET 2)

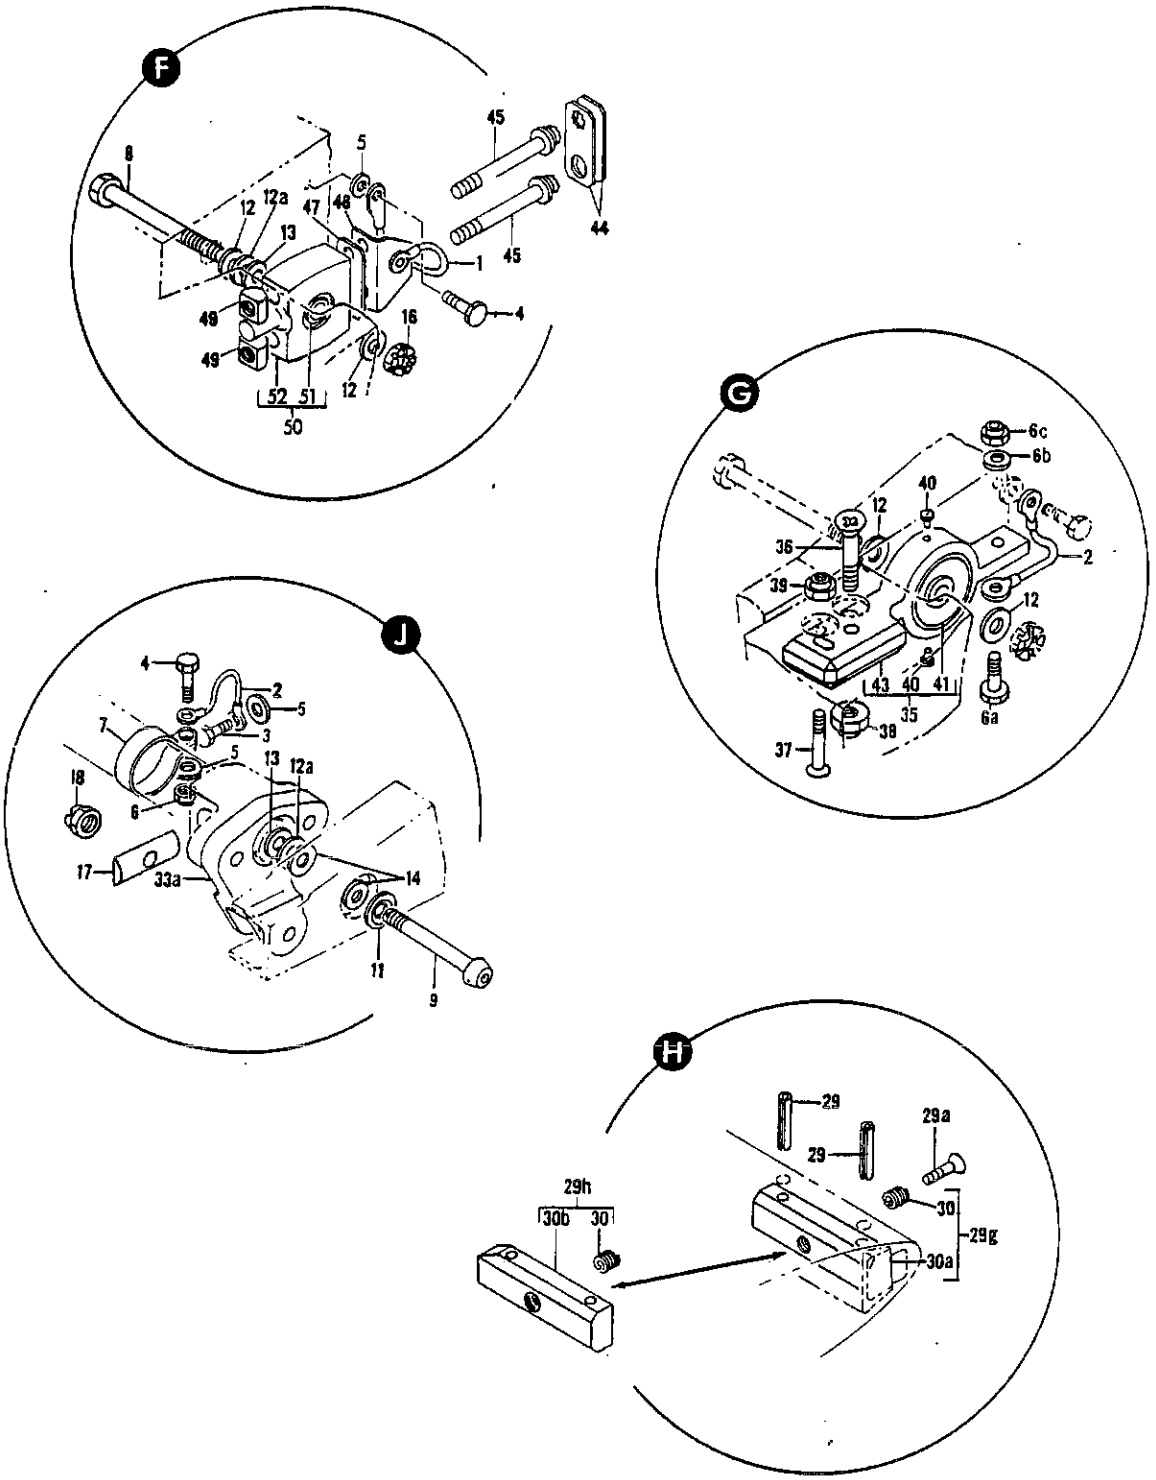


FIGURE 14. TAB INSTL, INBOARD AILERON (SHEET 3)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	14	65-6774-3007	TAB INSTL, INBOARD AILERON (LH) (SEE FIG. 10, ITEM 3) .		RF
		65-6774-3008	TAB INSTL, INBOARD AILERON (RH) (SEE FIG. 10, ITEM 3) .		RF
	2	MS25083-2B83	. JUMPER ASSY		2
			ATTACHING PARTS		
	3	AN3DD3A	. BOLT.		1
	4	AN3DD4A	. BOLT.		2
	5	AN960D10L	. WASHER.		3
	6	NAS679A3W	. NUT		1
	6A	AN3DD5A	. BOLT.		1
	6B	AN960D10	. WASHER.		1
	6C	NAS679A3W	. NUT		1
			-------*-------		
	7	AN735D16	. CLAMP		1
	8	NAS1104-32DW	. BOLT.		1
	9	66-11344-1	. BOLT, INBOARD AILERON TAB HINGE (OPTIONAL NAS144A37)		1
	10	NAS1104-13DW	. BOLT.		1
	11	NAS143-4C	. WASHER.		1
	12	AN960-416	. WASHER.		3
	14	AN960-416L	. WASHER.		2
	15	AN960-416L	. WASHER.		2
	16	AN320-4	. NUT		2
	17	63-8489	. FILLER, INBOARD AILERON TAB HINGE		1
	18	AN310-4	. NUT		1
	24	NAS221-22	. SCREW		AR
R	24A	5-87421-3053	. TAB ASSY, INBOARD AILERON HONEYCOMB (LH ONLY)	0150	1
R			(REWORKED BY SB 2971)		
R	24A	5-87421-3053A	. TAB ASSY, INBOARD AILERON HONEYCOMB (LH ONLY)	5199	1
R	24A	5-87421-3054A	. TAB ASSY, INBOARD AILERON HONEYCOMB (RH ONLY)	5199	1
R	24A	5-87421-3054	. TAB ASSY, INBOARD AILERON HONEYCOMB (RH ONLY)	0150	1
R			(REWORKED BY SB 2971)		
	25	BACM10L22-1BYB	. . MARKER-ALUMINUM FOIL, MODIFICATION INCORP		1
	26	69-21080-1	. . WEIGHT ASSY, INBOARD AILERON TAB ADJUST		AR
	29	BACP18L5P1000	. . PIN		24
	29A	NAS583-6	. . BOLT.		12
	29B	NAS583-4	. . BOLT.		AR
	29C	NAS679A3W	. . NUT		AR
	29D	5-87421-2053	. . NOSE, INBOARD AILERON HONEYCOMB TAB		1
	29E	5-87421-2054	. . NOSE, INBOARD AILERON HONEYCOMB TAB		1
	29F	66-8838	. . BLOCK ASSY, INBOARD AILERON TAB RETAINER.		11
	30	BACS13W3CN3	. . . SLEEVE.		1
	30A	66-8838-1	. . . BLOCK, INBOARD AILERON TAB RETAINER (USED ON. . .		1
			66-8838)		
	31A	5-87421-2052	. . WEIGHT, INBOARD AILERON HONEYCOMB TAB		1
	33	5-87421-2051	. . WEIGHT, INBOARD AILERON HONEYCOMB TAB		1
	33A	66-10943-2	. . ARM, INBOARD AILERON TAB CONTROL LINKAGE (LH ONLY)		1
	33A	66-8463-2000	. . ARM, INBOARD AILERON TAB CONTROL LINKAGE (RH ONLY)		1
	34	69-47055-1	. . RETAINER ASSY, INBOARD AILERON TAB BEARING.		1
	35	69-47055-2	. . RETAINER ASSY, INBOARD AILERON TAB BEARING.		1
			ATTACHING PARTS		
	36	BACB30LU4-10	. . BOLT.		2
	37	BAC830ABP3-11A	. . BOLT.		2
	38	NAS679A4W	. . NUT		2
	39	NAS679A3W	. . NUT		2
			-------*-------		
	40	NAS516-1	. . . FITTING		2
	41	BACB10C79	. . . BEARING		1
	42	69-47055-3	. . . RETAINER, INBOARD AILERON TAB BEARING (USED ON. .		1
			69-47055-1)		
	43	69-47055-4	. . . RETAINER, INBOARD AILERON TAB BEARING (USED ON. .		1
			69-47055-2)		
R	53	5-87421-96	. . CORE ASSY, (ALTERED FROM;5-87421-95) (USED ON . . .	5199	1
R			5-87421-3053, -3054, -3055, -3056)		
R	54	65-6726-5	. . . FITTING	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

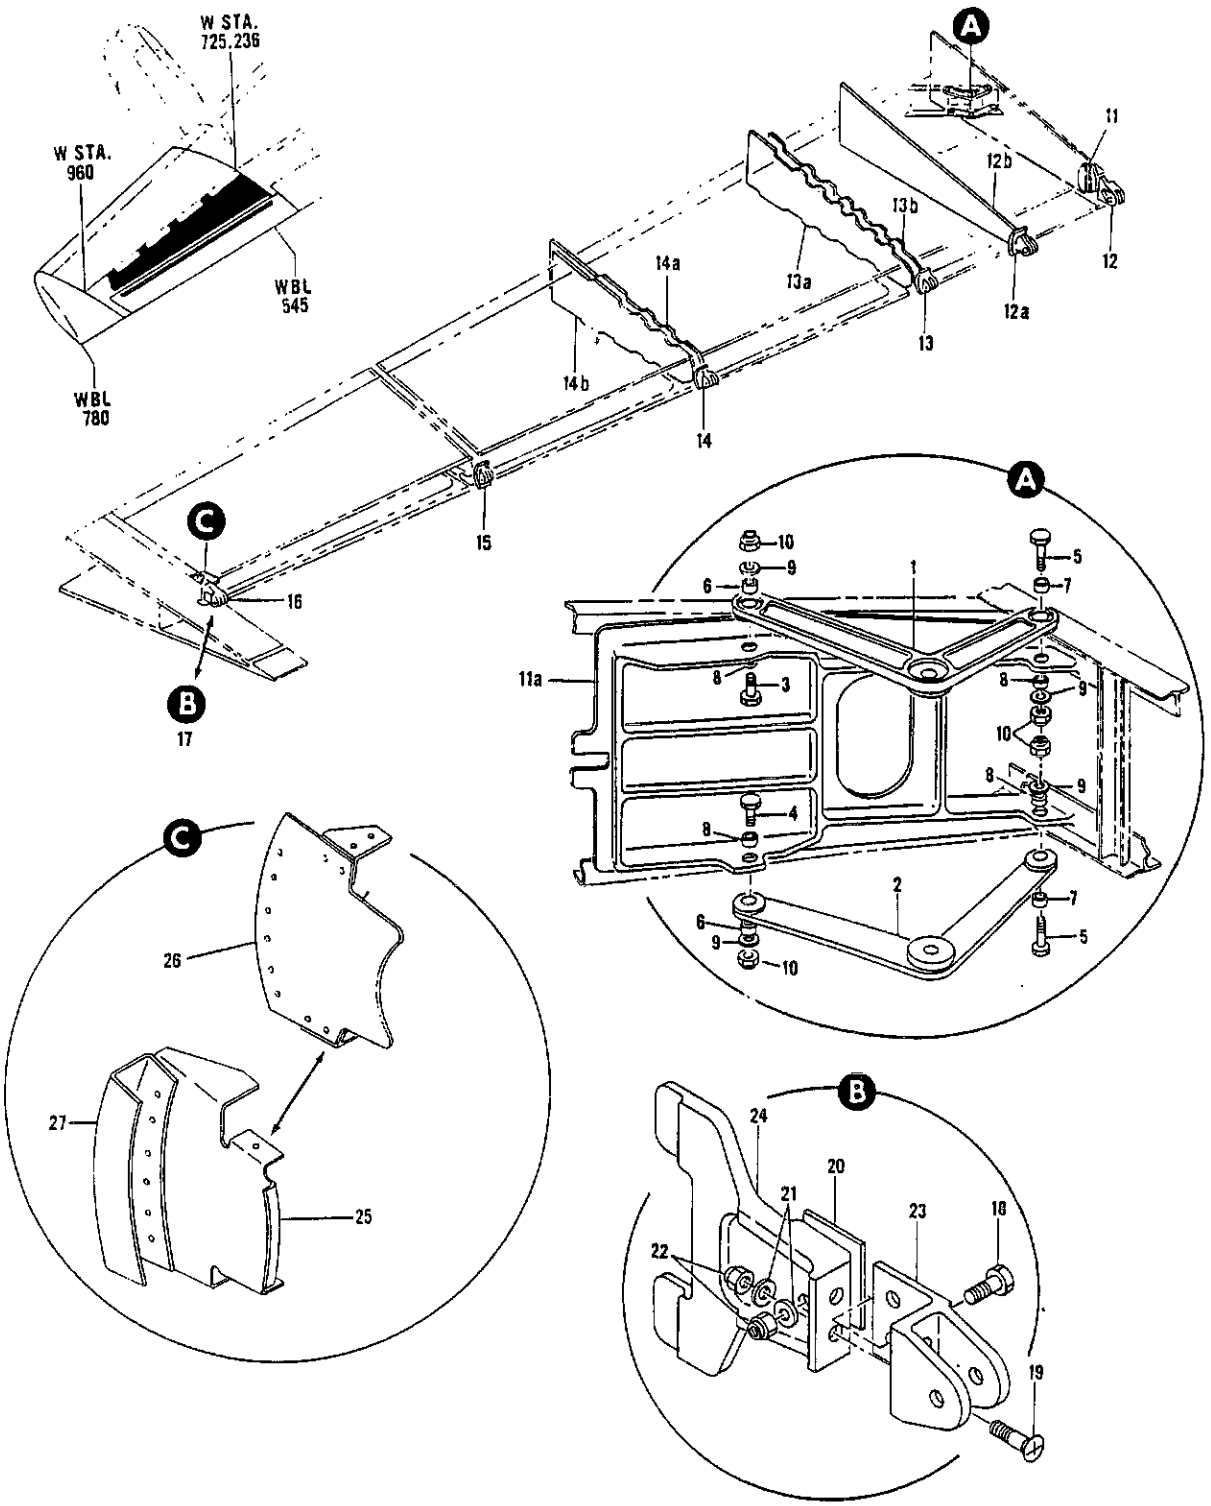



FIGURE 15. RIB INSTL, OUTBOARD WING TRAILING EDGE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	15		RIB INSTL, OUTBOARD WING TRAILING EDGE.		
		5-88766-3001	. RIB INSTL, WING STATION 731.35 TRAILING EDGE (LH) . . (SEE 57-2, FIG. 9, ITEM 28)		RF
		5-88766-3002	. RIB INSTL, WING STATION 731.35 TRAILING EDGE (RH) . . (SEE 57-2, FIG. 9, ITEM 28)		RF
	1	5-89561-2001	. . SUPPORT, AILERON LOCKOUT CRANK (LH ONLY). . . . . (OPTIONAL 5-89561-5)		1
	1	5-89561-5	. . SUPPORT, AILERON LOCKOUT CRANK (LH ONLY). . . . . (OPTIONAL TO 5-89561-2001)		1
	1	5-89561-2002	. . SUPPORT, AILERON LOCKOUT CRANK (RH ONLY). . . . . (OPTIONAL 5-89561-6)		1
	1	5-89561-6	. . SUPPORT, AILERON LOCKOUT CRANK (RH ONLY). . . . . (OPTIONAL TO 5-89561-2002)		1
	2	5-89561-3002	. . SUPPORT, AILERON LOCKOUT CRANK (LH ONLY). . . . . (OPTIONAL 5-89561-8)		1
	2	5-89561-8	. . SUPPORT, AILERON LOCKOUT CRANK (LH ONLY). . . . . (OPTIONAL TO 5-89561-3002)		1
	2	5-89561-3001	. . SUPPORT, AILERON LOCKOUT CRANK (RH ONLY). . . . . (OPTIONAL 5-89561-7)		1
	2	5-89561-7	. . SUPPORT, AILERON LOCKOUT CRANK (RH ONLY). . . . . (OPTIONAL TO 5-89561-3001)		1
			ATTACHING PARTS		
	3	NAS1105-10W	. . BOLT.		1
	4	NAS679A5	. . BOLT.		1
	5	NAS1105-11W	. . BOLT.		2
	6	NAS537B5P0-28	. . BUSHING		2
	7	NAS537B5P0-41	. . BUSHING		2
	8	NAS537B5P0-25	. . BUSHING		4
	9	AN960-516L	. . WASHER.		4
	10	NAS679A5	. . NUT		4
			-------*-------		
	11	6-83812-2000	. . CHANNEL, WING STATION 731.35 TRAILING EDGE AILERON STOP		1
	11A	5-88762-3001	. . SUPPORT ASSY, OUTBOARD WING AILERON ACTUATOR (LH. . ONLY)		1
	11A	5-88762-3002	. . SUPPORT ASSY, OUTBOARD WING AILERON ACTUATOR (RH. . ONLY)		1
	12	5-89599-3001	. . SUPPORT, WING STATION 730.95 AILERON HINGE (LH. . . ONLY)		1
	12	5-89599-3002	. . SUPPORT, WING STATION 730.95 AILERON HINGE (RH. . . ONLY)		1
R		5-88767-3001	. RIB INSTL, WING STATION 752.90 TRAILING EDGE (LH) . . (SEE 57-2, FIG. 9, ITEM 39)	0150	RF
R		5-88767-3001	. RIB INSTL, WING STATION 752.90 TRAILING EDGE (LH) . . (VARIABLE DWG;5-88767-5001) (SEE 57-2, FIG. 9, ITEM 39)	5199	RF
R		5-88767-3002	. RIB INSTL, WING STATION 752.90 TRAILING EDGE (RH) . . (SEE 57-2, FIG. 9, ITEM 39)	0150	RF
R		5-88767-3001	. RIB INSTL, WING STATION 752.90 TRAILING EDGE (RH) . . (VARIABLE DWG;5-88767-5002) (SEE 57-2, FIG. 9, ITEM 39)	5199	RF
	12A	65-1769-7	. . FITTING, WING STATION 752.90 TRAILING EDGE SUPPORT (LH ONLY)		1
	12A	65-1769-8	. . FITTING, WING STATION 752.90 TRAILING EDGE SUPPORT (RH ONLY)		1
	12B	69-9755-5	. . WEB ASSY, WING STATION 752.90 TRAILING EDGE RIB . . BONDED (LH ONLY)		1
	12B	69-9755-6	. . WEB ASSY, WING STATION 752.90 TRAILING EDGE RIB . . BONDED (RH ONLY)		1
R		65-6426-35	. RIB INSTL, WING STATION 779.96 TRAILING EDGE (LH) . . (SEE 57-2, FIG. 9, ITEM 40)	0150	RF
R		65-6426-36	. RIB INSTL, WING STATION 779.96 TRAILING EDGE (RH) . . (SEE 57-2, FIG. 9, ITEM 40)	0150	RF
R		65-6426-35	. RIB INSTL, WING STATION 779.96 TRAILING EDGE (LH) . . (VARIABLE DWG;65-6426-5001) (SEE 57-2, FIG. 9, ITEM 40)	5199	RF
R		65-6426-36	. RIB INSTL, WING STATION 779.96 TRAILING EDGE (RH) . . (VARIABLE DWG;65-6426-5002) (SEE 57-2, FIG. 9, ITEM 40)	5199	RF
	13	65-6428-1	. . SUPPORT, OUTBOARD WING AILERON HINGE.		1
	13A	65-6426-37	. . WEB ASSY, WING STATION 779.96 TRAILING EDGE BONDED (LH ONLY)		1
	13B	65-6426-39	. . WEB ASSY, WING STATION 779.96 TRAILING EDGE BONDED (LH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	15 13B	65-6426-38	. . WEB ASSY, WING STATION 779.96 TRAILING EDGE BONDED (RH ONLY)		1
	13B	65-6426-40	. . WEB ASSY, WING STATION 779.96 TRAILING EDGE BONDED (RH ONLY)		1
R		65-6427-33	. RIB INSTL, WING STATION 835.10 TRAILING EDGE (LH) . . (SEE 57-2, FIG. 9, ITEM 41)	0150	RF
R		65-6427-33	. RIB INSTL, WING STATION 835.10 TRAILING EDGE (LH) . . (VARIABLE DWG;65-6427-5001) (SEE 57-2, FIG. 9, ITEM 41)	5199	1
R		65-6427-34	. RIB INSTL, WING STATION 835.10 TRAILING EDGE (RH) . . (SEE 57-2, FIG. 9, ITEM 41)	0150	RF
R		65-6427-34	. RIB INSTL, WING STATION 835.10 TRAILING EDGE (RH) . . (VARIABLE DWG;65-6427-5002) (SEE 57-2, FIG. 9, ITEM 41)	5199	1
	14	65-6428-2	. . SUPPORT, OUTBOARD WING AILERON HINGE.		1
	14A	65-6427-3	. . WEB ASSY, WING STATION 835.10 TRAILING EDGE BONDED (LH ONLY)		1
	14B	65-6427-35	. . WEB ASSY, WING STATION 835.10 TRAILING EDGE BONDED (LH ONLY)		1
	14B	65-6427-4	. . WEB ASSY, WING STATION 835.10 TRAILING EDGE BONDED (RH ONLY)		1
	14B	65-6427-36	. . WEB ASSY, WING STATION 835.10 TRAILING EDGE BONDED (RH ONLY)		1
R		5-88770-1	. RIB INSTL, WING STATION 890.21 TRAILING EDGE (LH) . . (SEE 57-2, FIG. 9, ITEM 42)	0150	RF
R		5-88770-1	. RIB INSTL, WING STATION 890.21 TRAILING EDGE (LH) . . (VARIABLE DWG;5-88770-5001) (SEE 57-2, FIG. 9, ITEM 42)	5199	RF
R		5-88770-2	. RIB INSTL, WING STATION 890.21 TRAILING EDGE (RH) . . (SEE 57-2, FIG. 9, ITEM 42)	0150	RF
R		5-88770-2	. RIB INSTL, WING STATION 890.21 TRAILING EDGE (RH) . . (VARIABLE DWG;5-88770-5002) (SEE 57-2, FIG. 9, ITEM 42)	5199	RF
	15	5-89562-2	. . SUPPORT, OUTBOARD WING AILERON HINGE.		1
R		5-88771-1	. RIB INSTL, WING STATION 948.774 TRAILING EDGE (LH). . (SEE 57-2, FIG. 9, ITEM 43)	0150	RF
R		5-88771-1	. RIB INSTL, WING STATION 948.774 TRAILING EDGE (LH). . (VARIABLE DWG;5-88771-5001) (SEE 57-2, FIG. 9, ITEM 43)	5199	RF
R		5-88771-2	. RIB INSTL, WING STATION 948.774 TRAILING EDGE (RH). . (SEE 57-2, FIG. 9, ITEM 43)	0150	RF
R		5-88771-2	. RIB INSTL, WING STATION 948.774 TRAILING EDGE (RH). . (VARIABLE DWG;5-88771-5002) (SEE 57-2, FIG. 9, ITEM 43)	5199	RF
R	17	69-18099	. . FITTING ASSY, WING STATION 949.174 AILERON HINGE. . (OPTIONAL TO 69-18099-1)	0150	1
R	17	69-18099-1	. . FITTING ASSY, WING STATION 949.174 AILERON HINGE. . (OPTIONAL 69-18099)	0150	1
R	17	69-18099-1	. . FITTING ASSY, WING STATION 949.174 AILERON HINGE. .	5199	1
	18	NAS1104-6W	. . . BOLT.		2
	19	NAS334-7	. . . BOLT.		2
	20	BACS40B24-30	. . . SHIM.		1
	21	AN960D416	. . . WASHER.		4
	22	BACN10BY54W	. . . NUT		4
R	23	69-18097	. . . CLEVIS, WING STATION 949.174 AILERON HINGE (USED ON 69-18099)	0150	1
	23	69-18097-1	. . . CLEVIS, WING STATION 949.174 AILERON HINGE (USED ON 69-18099-1)		1
	24	69-18098	. . . FITTING, WING STATION 949.174 AILERON HINGE . . .		1
	26	69-42070-1	. . PLATE INSTL, OUTBOARD WING TRAILING EDGE AIR SEAL . (LH ONLY)		1
	26	69-42070-2	. . PLATE INSTL, OUTBOARD WING TRAILING EDGE AIR SEAL . (RH ONLY)		1
	27	6-83585	. . CHANNEL, WING STATION 948.774 TRAILING EDGE AILERON STOP		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

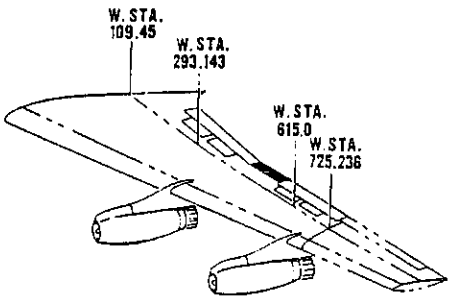

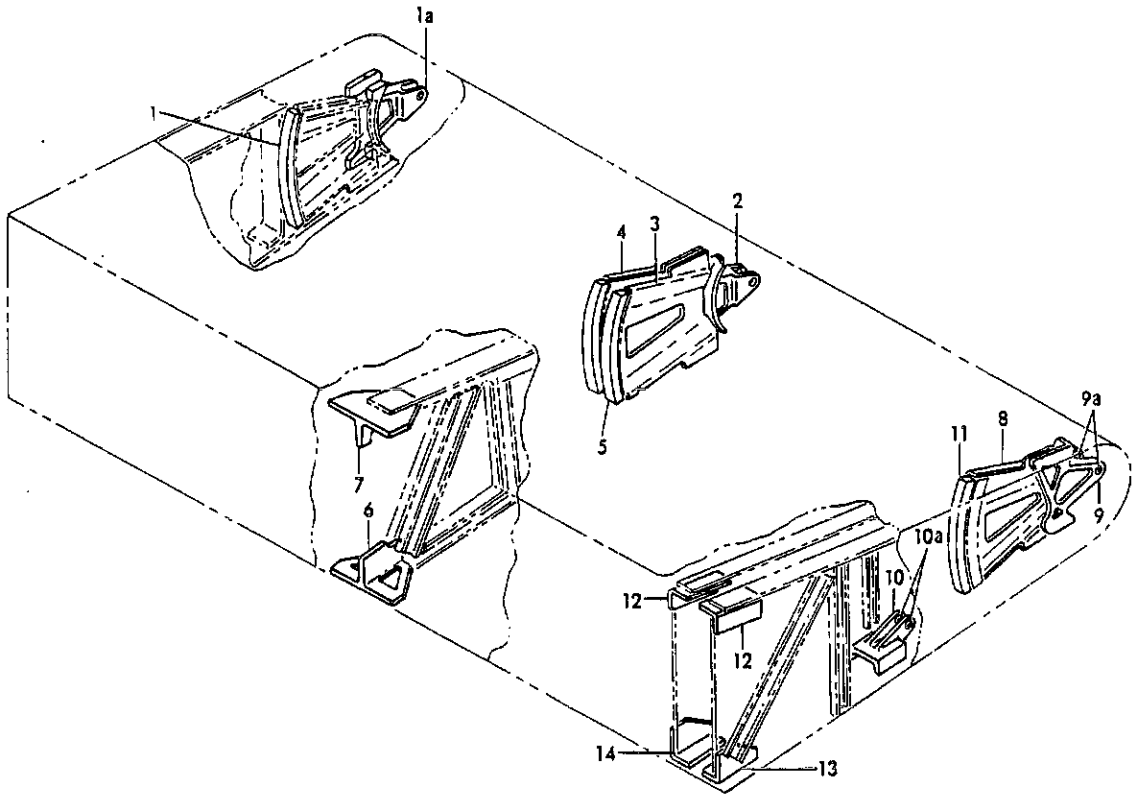


FIGURE 16. RIB INSTL, AILERON HINGE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	16		RIB INSTL, AILERON HINGE.		
		5-86060-3001	. RIB INSTL, WING STATION 466.36 AILERON HINGE (LH) . . (SEE 57-3, FIG. 12, ITEM 111)		RF
		5-86060-3002	. RIB INSTL, WING STATION 466.36 AILERON HINGE (RH) . . (SEE 57-3, FIG. 12, ITEM 111)		RF
		6-72091-3001	. . SEAL ASSY, WING STATION 466.56 INBOARD AILERON. . . VENT VALVE		1
		6-72091-3002	. . SEAL ASSY, WING STATION 466.36 INBOARD AILERON. . . VENT VALVE		1
	1	6-72091-5	. . . SEAL, WING STATION 466.36 INBOARD AILERON VENT. . VALVE (BAC1523-19 X 11.0 IN. LG)		1
R	1A	65-6388-1	. . FITTING, SUPPORT (LH ONLY).	0150	1
R			(OPTIONAL 65-6388-5)		
R	1A	65-6388-5	. . FITTING, SUPPORT (LH ONLY).	0150	1
R			(OPTIONAL TO 65-6388-1)		
R	1A	65-6388-2	. . FITTING, SUPPORT (RH ONLY).	0150	1
R			(OPTIONAL 65-6388-6)		
R	1A	65-6388-6	. . FITTING, SUPPORT (RH ONLY).	0150	1
R			(OPTIONAL TO 65-6388-2)		
R	1A	65-6388-5	. . FITTING, SUPPORT (LH ONLY).	5199	1
R	1A	65-6388-6	. . FITTING, SUPPORT (RH ONLY).	5199	1
		5-86061-3001	. RIB INSTL, WING STATION 501.00 AILERON HINGE (LH) . . (SEE 57-3, FIG. 12, ITEM 112)		RF
		5-86061-3002	. RIB INSTL, WING STATION 501.00 AILERON HINGE (RH) . . (SEE 57-3, FIG. 12, ITEM 112)		RF
R	2	65-6385-2	. . FITTING, SUPPORT.	0150	1
R			(OPTIONAL 65-6385-3)		
R	2	65-6385-3	. . FITTING, SUPPORT.	0150	1
R			(OPTIONAL TO 65-6385-2)		
R	2	65-6385-3	. . FITTING, SUPPORT.	5199	1
		5-86061-3015	. . RIB ASSY, WING STATION 501.00 AILERON HINGE		1
		5-86061-3016	. . RIB ASSY, WING STATION 501.00 AILERON HINGE		1
	3	69-5876-5	. . . BAFFLE, WING STATION 501.00 INBOARD AILERON AIR . BLEED (LH) (USED ON 5-86061-3015)		1
	4	69-5876-6	. . . BAFFLE, WING STATION 501.00 INBOARD AILERON AIR . BLEED (RH) (USED ON 5-86061-3016)		1
		6-72476-3003	. . . SEAL ASSY, WING STATION 501.00 INBOARD AILERON. . VENT VALVE		1
	5	6-72476-5	. . . . SEAL, WING STATION 501.00 INBOARD AILERON VENT VALVE		1
R	6	9-60361-2000	. . FITTING, WING STATION 501.00 LOWER.	0150	1
	7	9-60357-2000	. . FITTING, WING STATION 501.00 UPPER.	0102	1
		5-86062-3001	. RIB INSTL, WING STATION 535.14 AILERON HINGE (LH) . . (SEE 57-3, FIG. 12, ITEM 113)		RF
		5-86062-3002	. RIB INSTL, WING STATION 535.14 AILERON HINGE (RH) . . (SEE 57-3, FIG. 12, ITEM 113)		RF
	8	69-5762-5	. . BAFFLE, INBOARD AILERON AIR BLEED (LH ONLY)		1
	8	69-5762-6	. . BAFFLE, INBOARD AILERON AIR BLEED (RH ONLY)		1
	9	65-6391-9	. . FITTING ASSY, WING STATION 535.14 AILERON HINGE . . SUPPORT (OPTIONAL 65-6391-5) (LH ONLY)		1
	9	65-6391-10	. . FITTING ASSY, WING STATION 535.14 AILERON HINGE . . SUPPORT (OPTIONAL 65-6391-6) (RH ONLY)		1
	9A	NAS53785P90	. . . BUSHING, (USED ON 65-6391-9 AND 65-6391-10) . . .		2
	10	90-9469-7	. . SUPPORT ASSY, INBOARD AILERON SNUBBER		1
	10A	90-9473-6	. . . BUSHING, PRESSED FIT STRUCTURAL		2
		6-73129-3003	. . SEAL ASSY, WING STATION 535.14 INBOARD AILERON VENT VALVE		1
	11	6-73129-5	. . . SEAL, WING STATION 535.14 INBOARD AILERON VENT. . VALVE		1
	12	3-93703-2000	. . FITTING, WING STATION 535.14 AILERON RIB.		2
	13	3-93572-2001	. . FITTING, WING STATION 535.14 AILERON RIB.		1
	14	3-93572-2002	. . FITTING, WING STATION 535.14 AILERON RIB.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

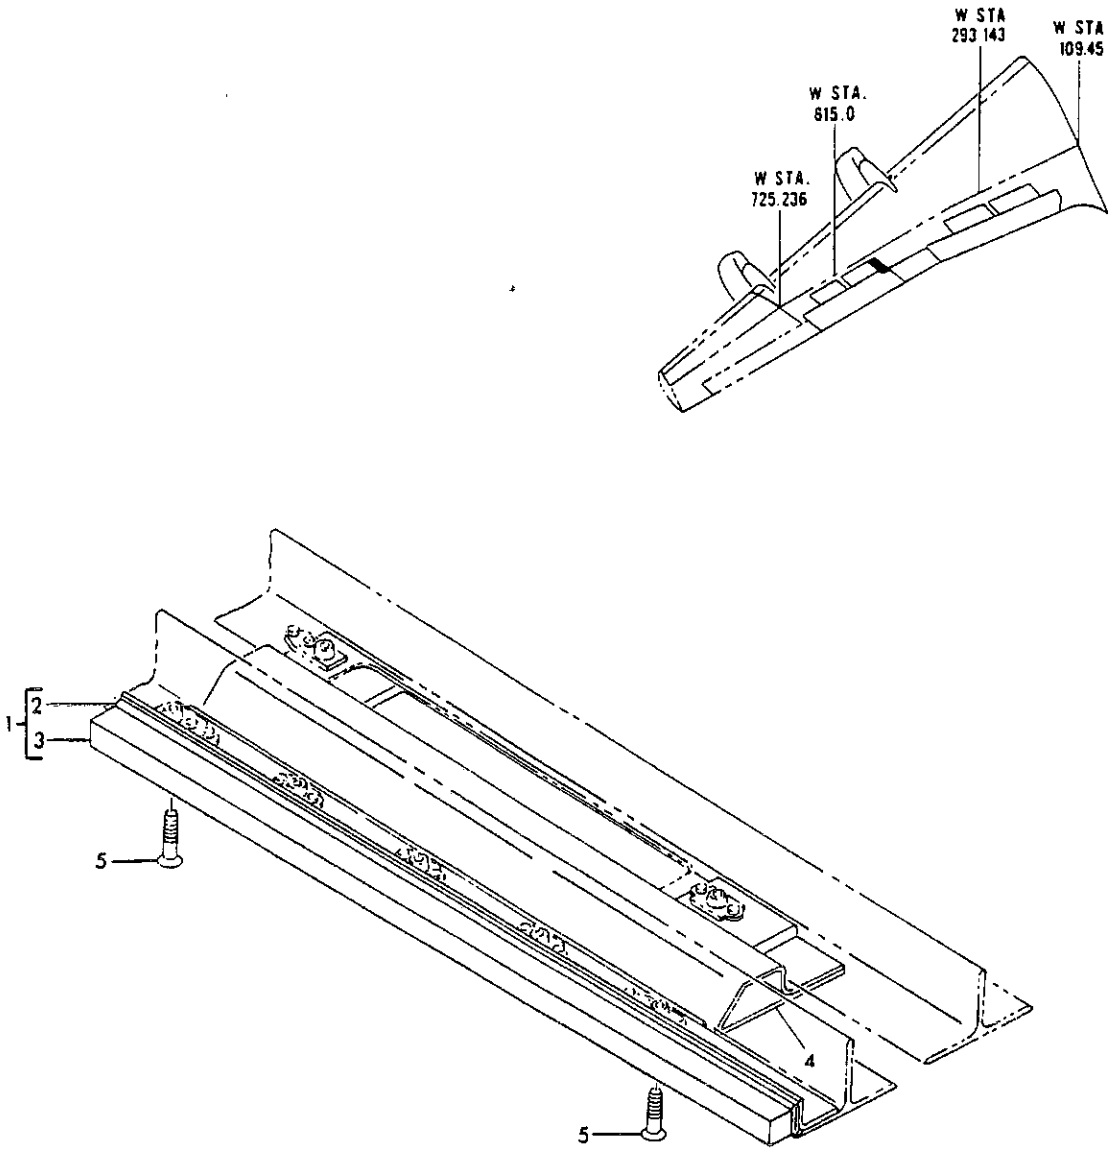


FIGURE 17. DOOR INSTL, AILERON SNUBBER ACCESS

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	17	9-65126-3001	DOOR INSTL, AILERON SNUBBER ACCESS (LH) (SEE 57-3, FIG. 12, ITEM 104)		RF
		9-65126-3002	DOOR INSTL, AILERON SNUBBER ACCESS (RH) (SEE 57-3, FIG. 12)		RF
		69-24078-1	. SEAL ASSY, OUTBOARD FLAP (LH ONLY).		1
		69-24078-2	. SEAL ASSY, OUTBOARD FLAP (RH ONLY).		1
	1	69-24078-6	. . SEAL ASSY, OUTBOARD FLAP (OPTIONAL 69-24078-5 . . . (BAC1523-22 X 14.0 IN. LG))		1
	1	69-24078-5	. . SEAL ASSY, OUTBOARD FLAP (BAC1523-22 X 14.0 IN. LG) (OPTIONAL TO 69-24078-6)		1
			ATTACHING PARTS		
		NAS600-6	. . SCREW		14
		AN960D6L	. . WASHER.		14
		BACN10BY504W	. . NUT		14
			-------*-------		
	2	69-24078-7	. . . STRIP, OUTBOARD FLAP SEAL RETAINER.		1
	3	69-24078-8	. . . SEAL, OUTBOARD FLAP (BAC1523-7 X 14.0 IN. LG) . .		1
R	4	9-65126-3003	. DOOR ASSY, AILERON SNUBBER ACCESS (LH ONLY)	5299	1
R			(OPTIONAL TO 9-65126-3011)		
R	4	9-65126-3004	. DOOR ASSY, AILERON SNUBBER ACCESS (RH ONLY)	5299	1
R			(OPTIONAL TO 9-65126-3012)		
R	4	9-65126-3011	. DOOR ASSY, AILERON SNUBBER ACCESS (LH ONLY)	5299	1
R			(OPTIONAL 9-65126-3003)		
R	4	9-65126-3012	. DOOR ASSY, AILERON SNUBBER ACCESS (RH ONLY)	5299	1
R			(OPTIONAL 9-65126-3004)		
R	4C	9-65126-3003	. DOOR ASSY, AILERON SNUBBER ACCESS (LH ONLY)	0151	1
R	4D	9-65126-3004	. DOOR ASSY, AILERON SNUBBER ACCESS (RH ONLY)	0151	1
			ATTACHING PARTS		
	5	NAS517-3-6	. SCREW		7
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

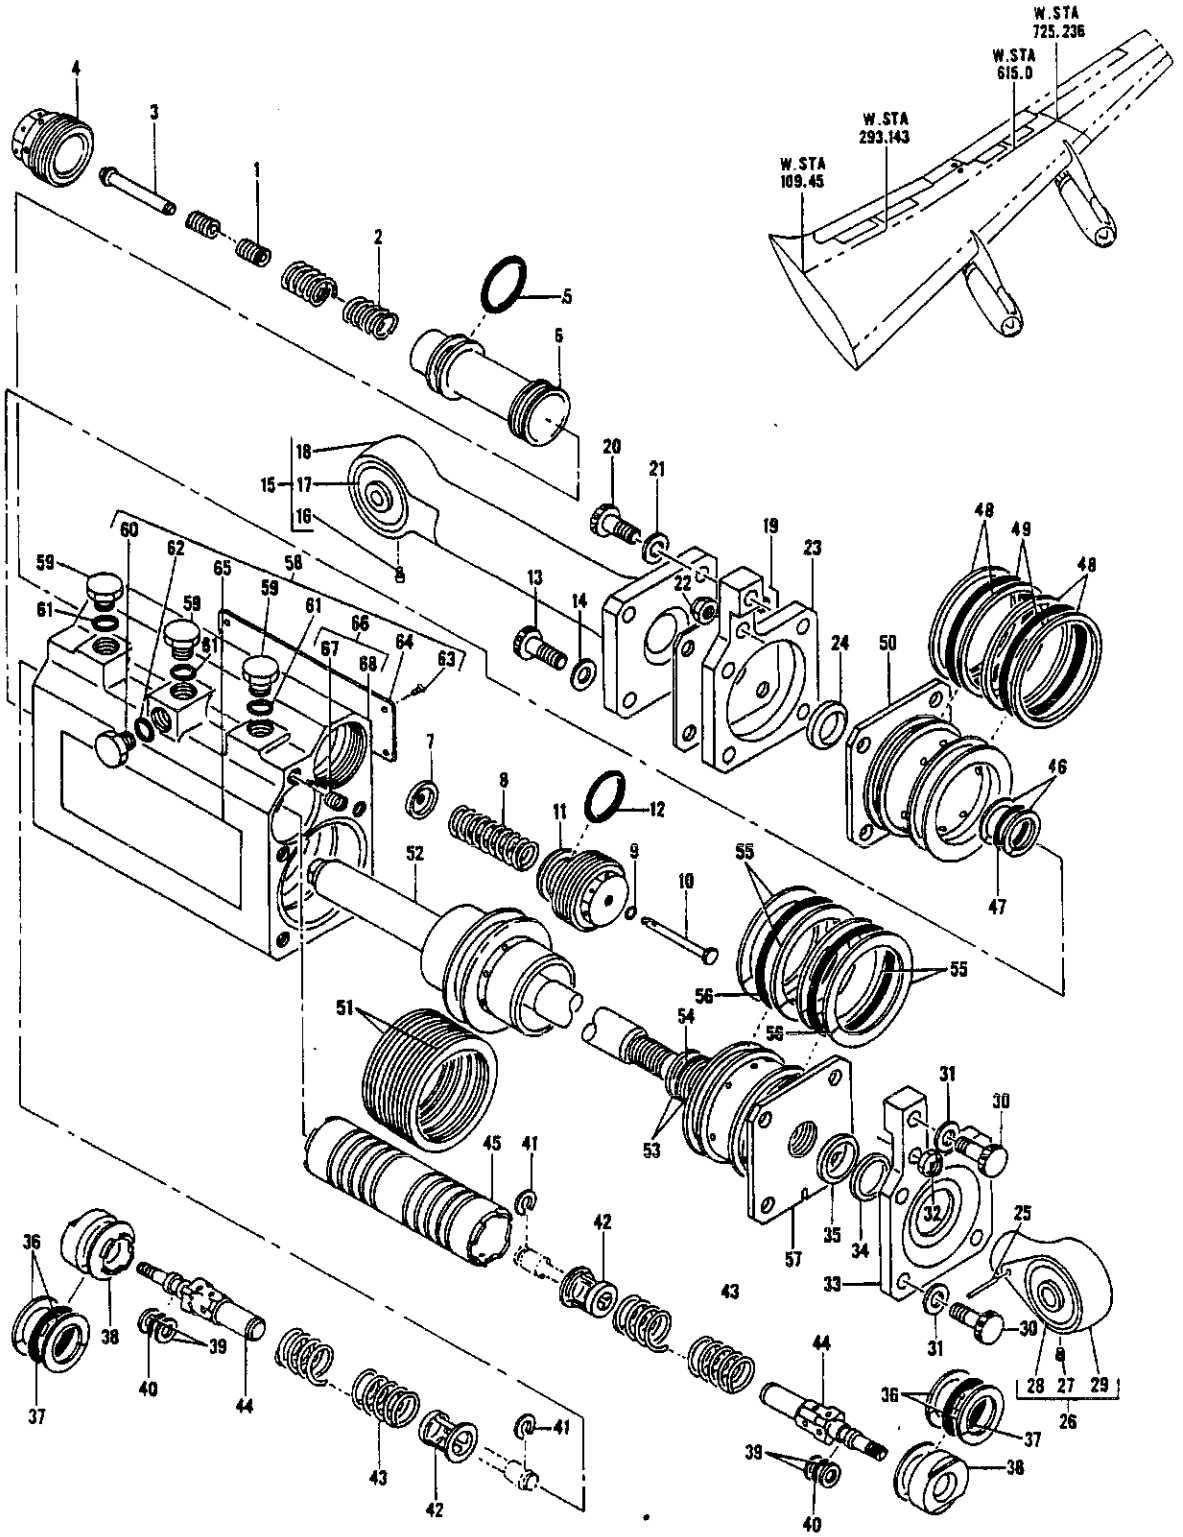


FIGURE 18. SNUBBER ASSY, AILERON CONTROL SURFACE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
18	5-88763-10	SNUBBER ASSY, AILERON CONTROL SURFACE (SEE FIG. 8, ITEM 8)		RF
1	3-94768	. SPRING, AILERON SNUBBER COMPRESSION		1
2	3-94766	. SPRING, AILERON SNUBBER COMPRESSION		1
3	66-12853-1	. GUIDE, SNUBBER RESERVOIR SPRING		1
4	6-84601-1	. PLUG, CONTROL SURFACE SNUBBER RESERVOIR		1
5	AN6227-15	. PACKING		1
6	9-65151	. PISTON, AILERON GUST DAMPER RESERVOIR		1
7	6-84554	. RETAINER, CONTROL SURFACE SNUBBER INDICATOR SPRING.		1
8	3-94517	. SPRING, CONTROL SURFACE SNUBBER COMPRESSION		1
9	AN6227-1	. PACKING		1
10	6-84544	. INDICATOR, CONTROL SURFACE SNUBBER FLUID VOLUME		1
11	9-66860	. PLUG, CONTROL SURFACE SNUBBER		1
12	AN6227-15	. PACKING		1
13	NAS1304-11HW	. BOLT.		4
14	AN960-416	. WASHER.		4
15	5-89535-2	. TERMINAL ASSY, CONTROL SURFACE SNUBBER HEAD END		1
16	NAS516-1	. . FITTING		1
17	BACB10C135	. . BEARING (OPTIONAL TO BACB10C135H)		1
17	BACB10C135H	. . BEARING (OPTIONAL BACB10C135)		1
18	5-89535-3	. . TERMINAL, CONTROL SURFACE SNUBBER HEAD END.		1
19	6-84953	. SHIM, AILERON CONTROL SURFACE SNUBBER		AR
20	NAS1304-7HW	. BOLT.		1
21	AN960-416	. WASHER.		1
22	NAS679A4W	. NUT		1
23	90-2414	. CAP, AILERON CONTROL SURFACE SNUBBER END.		1
24	MS28932C02-00	. FELT STRIP.		1
25	BACP18L5P0687	. PIN		1
26	9-63027	. ROD END ASSY, CONTROL SURFACE SNUBBER (OPTIONAL BACB10C174)		1
27	NAS516-1	. . FITTING		1
28	BACB10C135	. . BEARING (OPTIONAL TO BACB10C135H)		1
28	BACB10C135H	. . BEARING (OPTIONAL BACB10C135)		1
29	9-63027-1	. . ROD END, CONTROL SURFACE SNUBBER.		1
30	NAS1304-7HW	. BOLT.		5
31	AN960-416	. WASHER.		5
32	NAS679A4W	. NUT		1
33	6-84686	. CAP, AILERON CONTROL SURFACE SNUBBER HOUSING.		1
34	BACS34A3	. SCRAPER		1
35	MS28932C02-00	. FELT STRIP.		1
36	MS28782-15	. RING.		4
37	AN6227-15	. PACKING		2
38	90-2429-2	. RETAINER, AILERON CONTROL SURFACE SNUBBER REGULATOR		2
39	MS28782-5	. RING.		4
40	AN6227-5	. PACKING		2
41	63-1513	. RING, AILERON CONTROL SURFACE SNUBBER RETAINING		2
42	66-2418	. RETAINER, AILERON CONTROL SURFACE SNUBBER SPRING.		2
43	63-1514	. SPRING, AILERON SNUBBER COMPRESSION		2
44	69-2211	. SUPPORT, AILERON CONTROL SURFACE SNUBBER SPRING		2
45	90-3142-2	. PISTON, AILERON GUST SNUBBER REGULATOR.		1
46	MS28782-12	. RING.		2
47	AN6227-12	. PACKING		1
48	MS28783-2	. RING.		4
49	AN6230-2	. GASKET.		2
50	5-97877-1	. BEARING, AILERON CONTROL SURFACE SNUBBER.		1
51	MS28782-29	. RING.		6
52	5-96759-2	. PISTON, AILERON GUST SNUBBER. (OPTIONAL 5-96759-1)		1
52	5-96759-1	. PISTON, AILERON GUST SNUBBER. (OPTIONAL TO 5-96759-2)		1
53	MS28782-12	. RING.		2
54	AN6227-12	. PACKING		1
55	MS28783-2	. RING.		4
56	AN6230-2	. PACKING		2
57	5-97877-1	. BEARING, AILERON CONTROL SURFACE SNUBBER.		1
58	5-88763-11	. HOUSING ASSY, AILERON CONTROL SURFACE SNUBBER (OPTIONAL 5-88763-12)		1
58	5-88763-12	. HOUSING ASSY, AILERON CONTROL SURFACE SNUBBER (OPTIONAL TO 5-88763-11)		1
59	AN814-2L	. . PLUG.		3

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
18 60	AN814-2L	. . PLUG, (USED ON 5-88763-9 AND -12)		1
61	MS28778-2	. . PACKING		3
62	MS28778-2	. . PACKING, (USED ON 5-88763-9 AND -12)		1
63	MS21318-7	. . SCREW, (USED ON 5-88763-9 AND -12)		4
64	BACN12S7R	. . NAMEPLATE, (USED ON 5-88763-11)		1
64	BACN12S7P	. . NAMEPLATE, (USED ON 5-88763-12)		1
65	BACN12W22-2K	. . NAMEPLATE, (USED ON 5-88763-8 AND -11)		1
65	BACN12W21-2RY	. . NAMEPLATE, (USED ON 5-88763-9 AND -12)		1
66	5-97855-2	. . HOUSING ASSY, AILERON CONTROL SURFACE SNUBBER		1
67	BACS13P4C4	. . . SLEEVE		1
68	5-97855-3	. . . HOUSING, AILERON CONTROL SURFACE SNUBBER		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

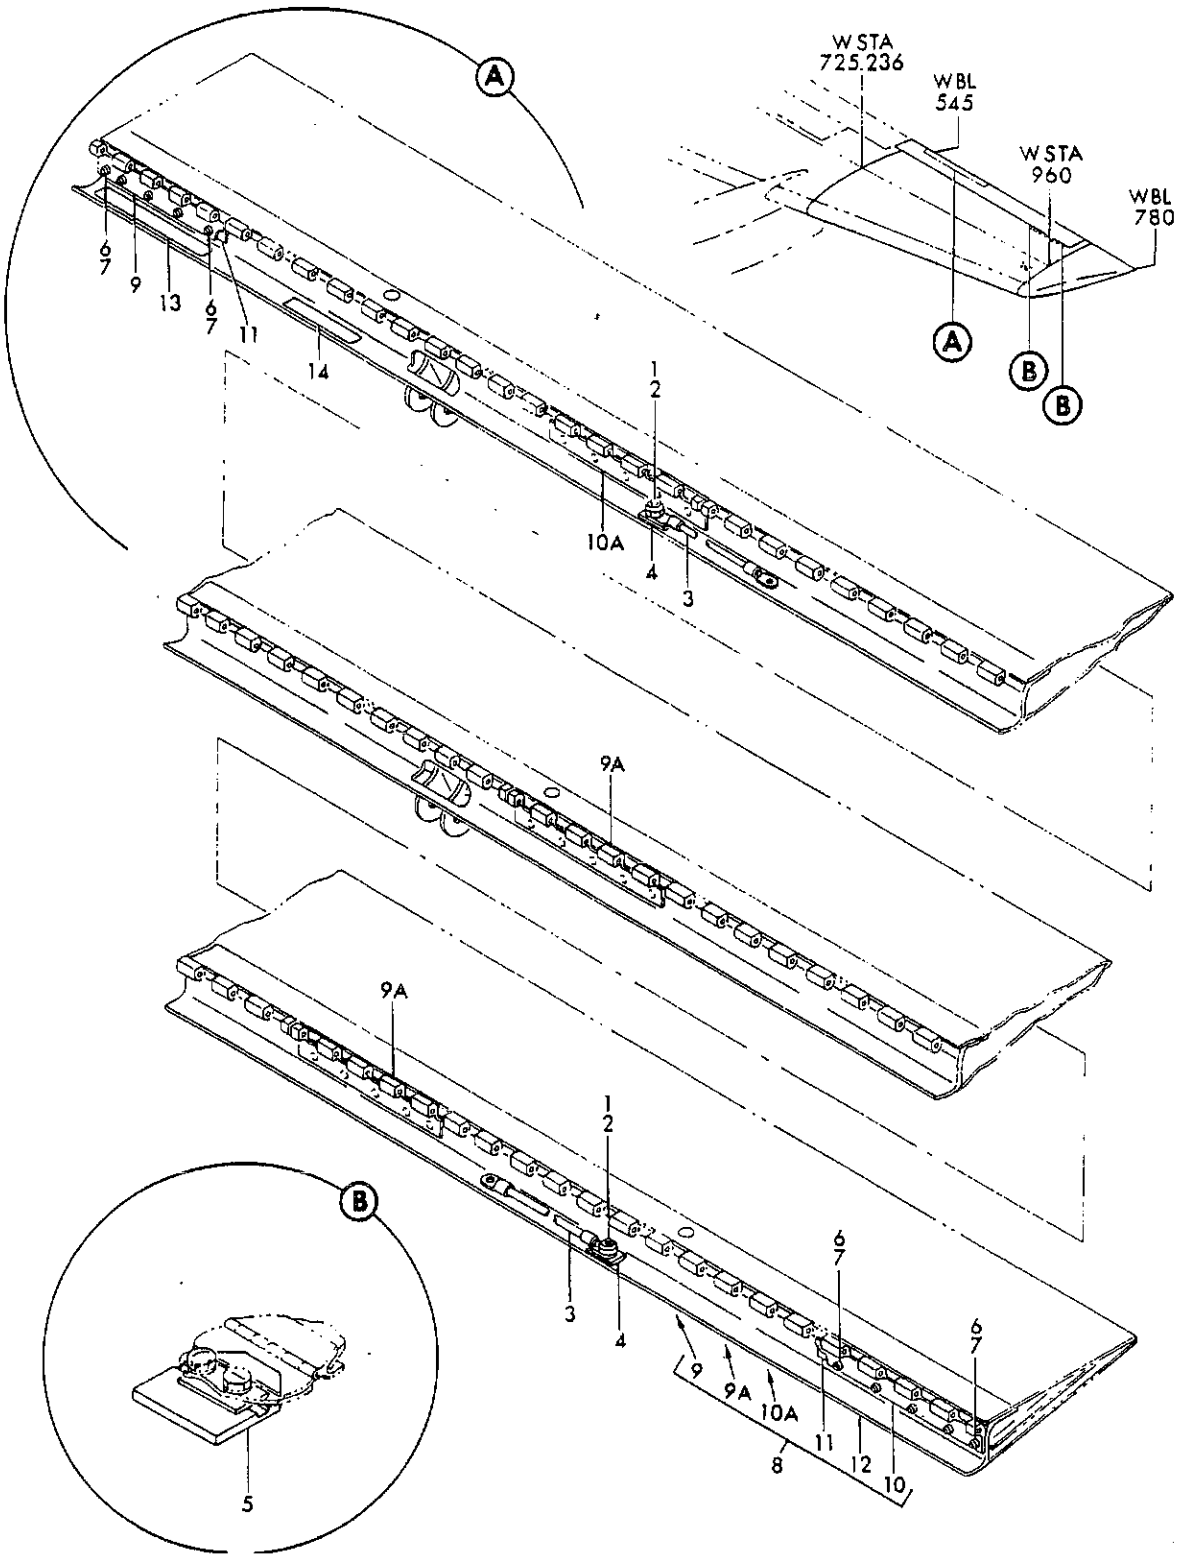


FIGURE 20. TAB ASSY, HONEYCOMB OUTBOARD AILERON

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R	20	9-64026-3023	TAB ASSY, HONEYCOMB OUTBOARD AILERON (LH) (FOR OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (SEE FIG. 3, ITEM 111A AND FIG. 3C, ITEM 268)	0150	RF
R R R		9-64026-3023A	TAB ASSY, HONEYCOMB OUTBOARD AILERON (LH) (FOR OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (SEE FIG. 3, ITEM 111A)	5199	RF
R R R R		9-64026-3024	TAB ASSY, HONEYCOMB OUTBOARD AILERON (RH) (FOR OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (SEE FIG. 3, ITEM 111A AND FIG. 3C, ITEM 268)	0150	RF
R R R		9-64026-3024A	TAB ASSY, HONEYCOMB OUTBOARD AILERON (RH) (FOR OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (SEE FIG. 3, ITEM 111A)	5199	RF
	1	NAS517-3-2	. SCREW		2
	2	NAS679A3W	. NUT		2
	3	BACJ40K5A5A6	. JUMPER		2
	4	9-64026-49	. FILLER		2
	5	66-8420-3001	. WEIGHT ASSY, BALANCE (MATCHED PARTS ORDER IN SETS ONLY) (USED ON 9-64026-53, -63, -3023, -54, -64 AND -3024)		AR
	6	BACB30AR6-2	. BOLT		10
	7	BACC30AC6	. COLLAR		10
	8	9-64026-3012	. CORE ASSY, (ALTERED FROM 9-64026-3019) (USED ON 9-64026-3023)		1
	8	9-64026-3022	. CORE ASSY, (ALTERED FROM 9-64026-3020) (USED ON 9-64026-3024)		1
		9-64026-3017	. SPAR ASSY, (USED ON 9-64026-3023)		1
		9-64026-3018	. SPAR ASSY, (USED ON 9-64026-3024)		1
	9	69-8420-1	. . HINGE HALF		1
	10	69-8420-2	. . HINGE HALF		1
	11	BACS40A10-72	. . SHIM		2
	12	9-64026-3015	. . HINGE HALF, (USED ON 9-64026-3017)		1
	12	9-64026-3016	. . HINGE HALF, (USED ON 9-64026-3018)		1
	13	BACN12M30-1CD	. NAMEPLATE		1
	14	9-64026-93	. PLATE		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING Intercontinental 707

PARTS CATALOG

SECTION 03

AILERON CONTROL

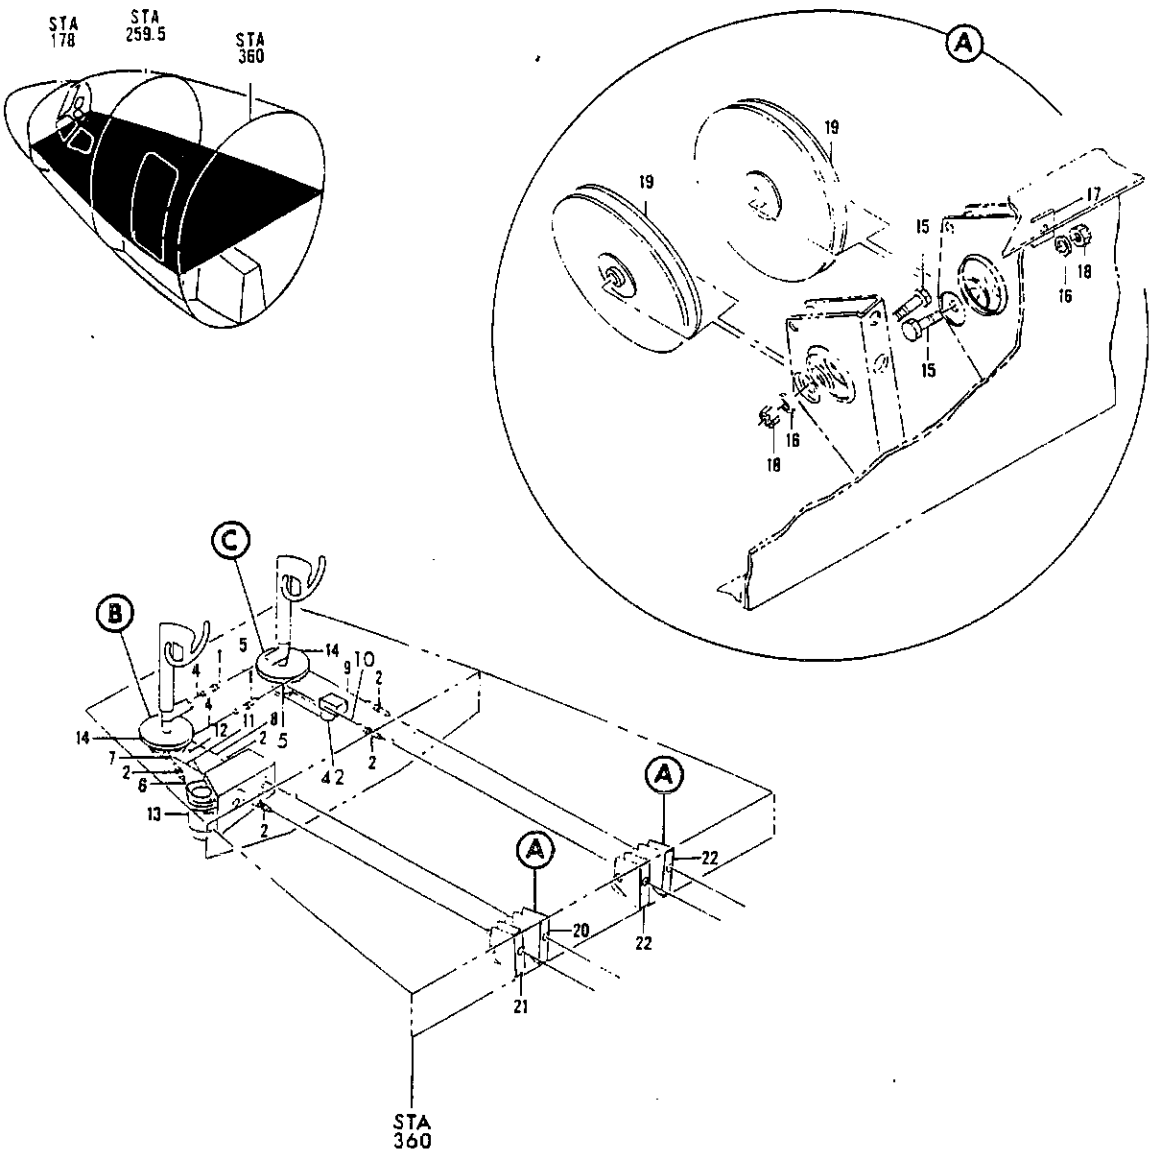


FIGURE 1. CONTROL INSTL, AILERON AND SPOILER (SHEET 1)

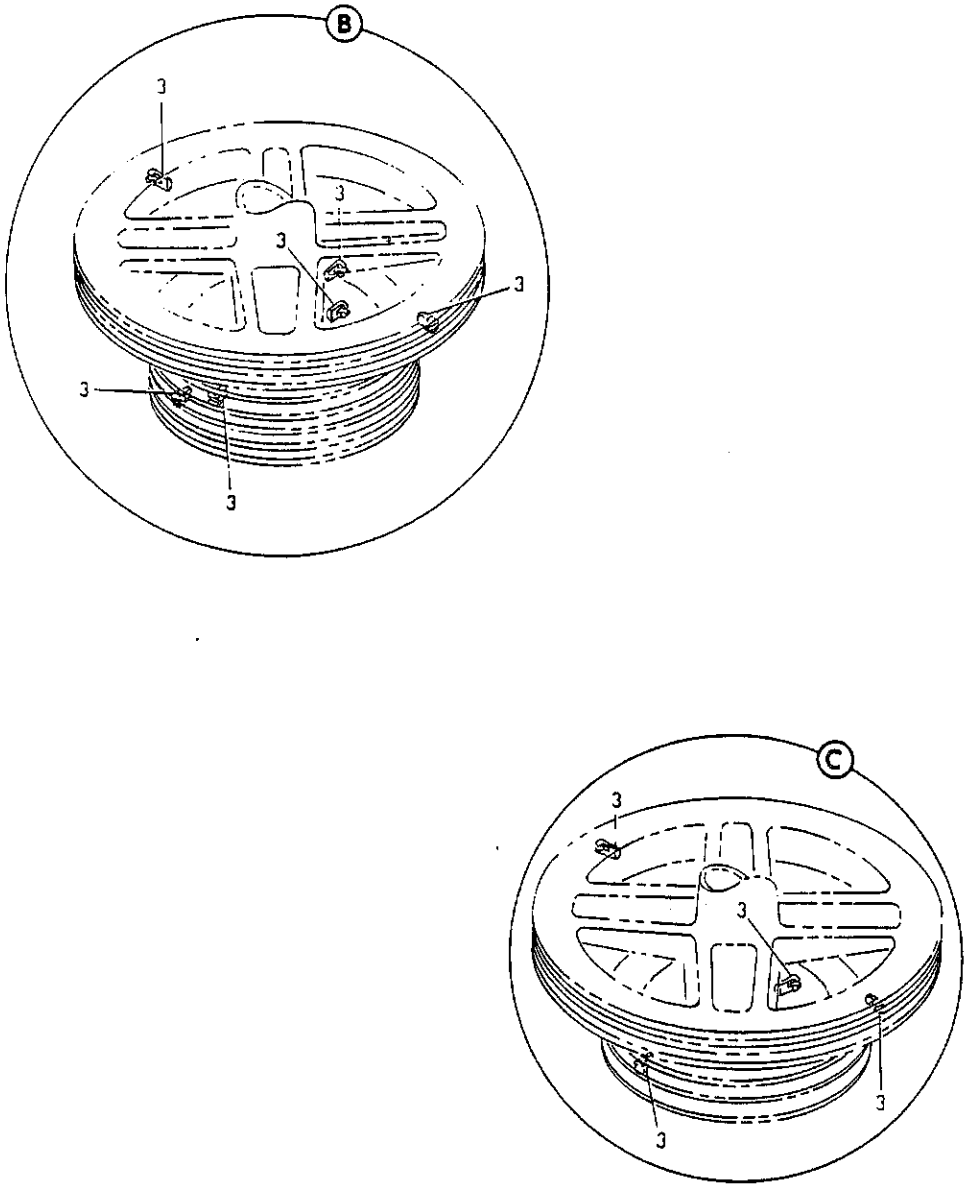


FIGURE 1 CONTROL INSTL, AILERON AND SPOILER (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	1	50-8701-51	CONTROL INSTL, AILERON AND SPOILER (SEE 53-1, FIG. 1, ITEM 1 AND 53-1, FIG. 6, ITEM 4)		RF
	1	AN155-32S	. BARREL.		2
	2	MS21251B5L	. BARREL.		5
	3	60-6624	. RETAINER, CONTROL DRUM 1/8 IN. CABLE.		10
	4	BACC13G466-320	. CABLE ASSY.		2
		AN669S4LH	. . TERMINAL.		1
		BACT14A4	. . TERMINAL.		1
	5	BACC13G465-320	. CABLE ASSY.		2
		AN669S4RH	. . TERMINAL.		1
		BACT14A4	. . TERMINAL.		1
	6	BACC13G468-235	. CABLE ASSY.		1
		AN669L4RH	. . TERMINAL.		1
		BACT14A4	. . TERMINAL.		1
	7	BACC13G469-215	. CABLE ASSY.		1
	8	BACC13G469-235	. CABLE ASSY.		1
	9	BACC13G469-285	. CABLE ASSY.		1
	10	BACC13G469-385	. CABLE ASSY.		1
	11	BACC13G469-400	. CABLE ASSY.		1
		AN669L4LH	. . TERMINAL.		1
		BACT14A4	. . TERMINAL.		1
	12	BACC13G470-460	. CABLE ASSY.		1
		BACT14A4	. . TERMINAL.		2
	13	65-3784	. SERVO INSTL, STATION 235.8 TO 243.7 AILERON CONTROL (SEE 22-1, FIG. 15)		1
R	14	5-87879-3003	. COLUMN INSTL, AILERON AND ELEVATOR CONTROL (SEE 27-1, FIG. 1 AND 2)	0150	1
R	14	5-87879-3003	. COLUMN INSTL, AILERON AND ELEVATOR CONTROL (VARIABLE DWG;5-87879-5001) (SEE 27-1, FIG. 2)	5199	1
		50-8299-1	. BRACKET INSTL, STATION 360 AILERON PULLEY (LH).		1
		50-8299-2	. BRACKET INSTL, STATION 360 AILERON PULLEY (RH).		1
	15	BACB30NF5-12	. . BOLT.		2
	16	AN960D516L	. . WASHER.		2
	17	50-8299-3	. . FILLER, STATION 360 AILERON PULLEY BRACKET.		2
	18	BACN10JC5	. . NUT		2
	19	AN220-4	. . PULLEY.		2
	20	90-7830	. . BRACKET ASSY, STATION 360 AILERON PULLEY (LH ONLY)		1
	21	90-7830-3	. . BRACKET ASSY, STATION 360 AILERON PULLEY (LH ONLY)		1
	22	90-7830	. . BRACKET ASSY, STATION 360 AILERON PULLEY (RH ONLY)		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

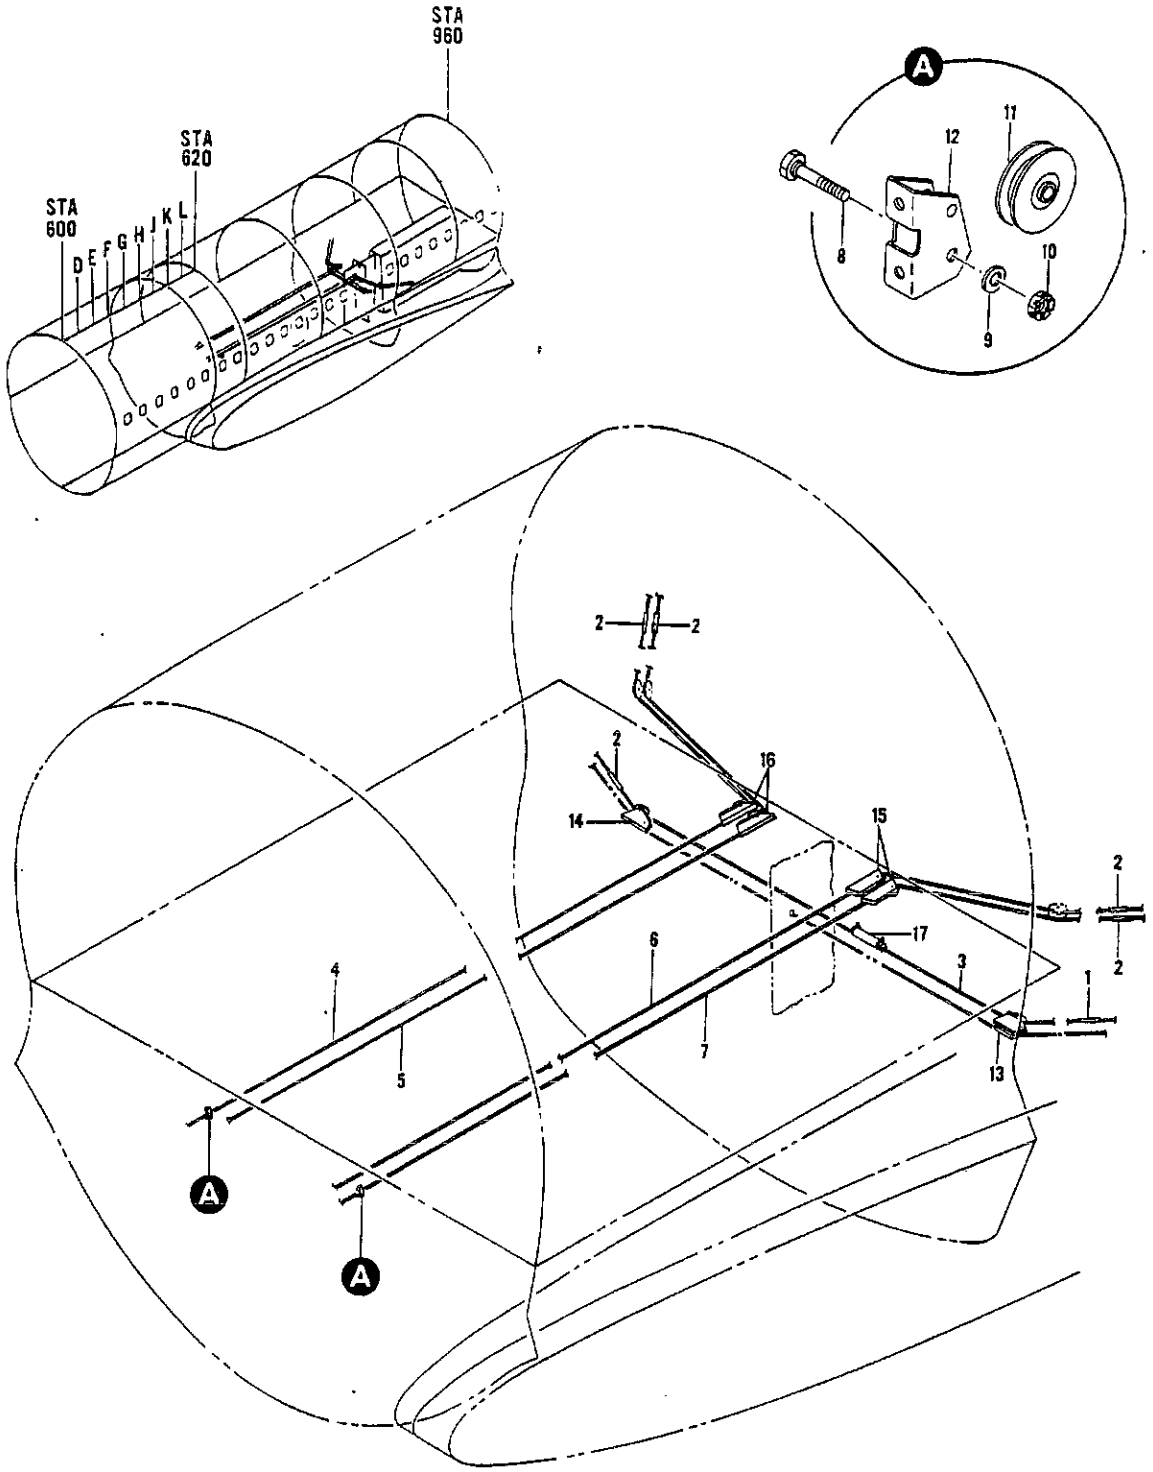


FIGURE 2. CONTROL INSTL, AILERON AND SPOILER

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R	2	50-8701-353	CONTROL INSTL, AILERON AND SPOILER (SEE 53-1, FIG. 2, ITEM 4)	0150	RF
R R		50-8701-353	CONTROL INSTL, AILERON AND SPOILER (VARIABLE DWG;50-8701-5001) (SEE 53-1, FIG. 2, ITEM 4)	5199	RF
R	1	AN155-46L	. BARREL	0150	1
R	1	MS21251B6L	. BARREL	5199	1
	2	MS21251B5L	. BARREL		5
R	3	NAS304-45-734	. CABLE ASSY	0150	1
R	3	65-75195-44	. CABLE ASSY, NYLON COATED	5199	1
	4	NAS304-44-10523	. CABLE ASSY		1
	6	NAS304-44-10284	. CABLE ASSY		1
	7	NAS304-45-10407	. CABLE ASSY		1
		50-8723-12	. PULLEY INSTL, STATION 620 AILERON CABLE IDLER		1
	8	BACB30NF5-11	. . BOLT		2
	9	AN960D516	. . WASHER		2
	10	BACN10JC5	. . NUT		2
	11	AN220-1	. . PULLEY		2
	12	60-3106-2000	. . BRACKET ASSY, IDLER PULLEY CONTROL		2
R R	13	65-6366	. BRACKET INSTL, STATION 820 LH SIDE AILERON BUS AND AILERON TRIM CONTROL (SEE FIG. 3)	0150	1
R R	13	65-6366-1	. BRACKET INSTL, STATION 820 LH SIDE AILERON BUS AND AILERON TRIM CONTROL (SEE FIG. 3)	5199	1
R R	14	65-6458	. BRACKET INSTL, STATION 820 RH SIDE AILERON BUS CONTROL (SEE FIG. 4)	0150	1
R R	14	65-6458-1	. BRACKET INSTL, STATION 820 RH SIDE AILERON BUS CONTROL (SEE FIG. 4)	5199	1
	15	65-7133-3	. BRACKET INSTL, STATION 820 TO 830 AILERON CONTROL (LH) (SEE FIG. 5)		1
	16	65-7133-4	. BRACKET INSTL, STATION 820 TO 830 AILERON CONTROL (RH) (SEE FIG. 5)		1
	17	65-6491-1	. CARTRIDGE INSTL, STATION 820 AILERON BUS SPRING (SEE FIG. 6)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

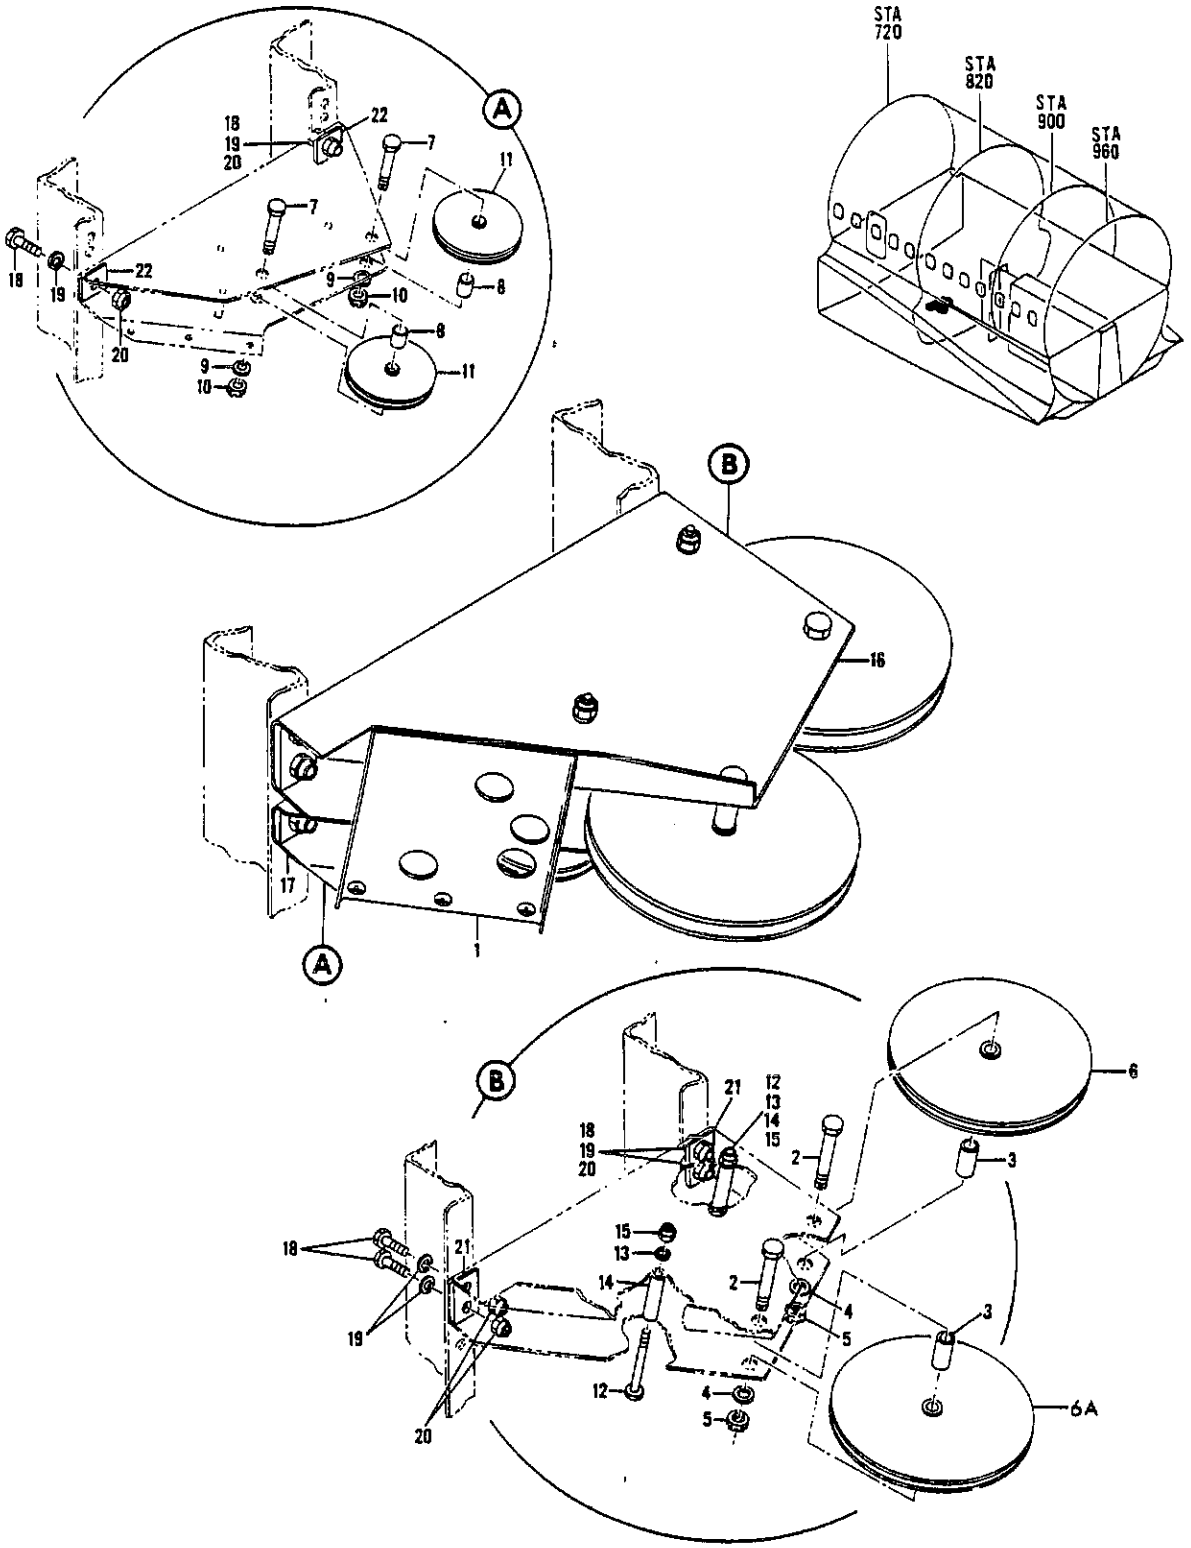
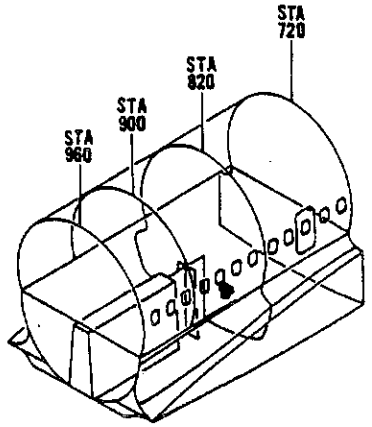


FIGURE 3. BRACKET INSTL, STATION 820 LH SIDE AILERON BUS AND AILERON TRIM CONTROL

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R	3	65-6366	BRACKET INSTL, STATION 820 LH SIDE AILERON BUS AND. . . AILERON TRIM CONTROL (SEE FIG. 2, ITEM 13)	0150	RF
		65-6366-1	BRACKET INSTL, STATION 820 LH SIDE AILERON BUS AND. . . AILERON TRIM CONTROL (SEE FIG. 2, ITEM 13)	5199	RF
	1	66-5130-1	. PLATE, CONTROL BRACKET SHEAR.		1
			ATTACHING PARTS		
		NAS220-8	. SCREW		3
		AN960D8L	. WASHER.		3
		NAS679A08W	. NUT		3
			-------*-------		
	2	NAS464P5-26	. BOLT.		2
	3	NAS43DD5-56	. SPACER.		2
	4	AN960D516	. WASHER.		2
	5	AN320-5	. NUT		2
	6	AN220-4	. PULLEY.		1
R	6A	AN220-4	. PULLEY.	0150	1
R	6A	1967-24-501	. PULLEY, (V12210).	5199	1
	7	NAS464P4-15	. BOLT.		2
	8	NAS43DD4-23	. SPACER.		2
	9	AN960D416	. WASHER.		2
	10	AN320-4	. NUT		2
	11	AN219-4	. PULLEY.		2
	12	AN3-20A	. BOLT.		2
	13	AN960D10	. WASHER.		2
	14	NAS42DD6-96	. SPACER.		2
	15	NAS679A3W	. NUT		2
	16	69-4869	. BRACKET, AILERON BUS CONTROL.		1
	17	69-4870-2	. BRACKET ASSY, AILERON TRIM CONTROL.		1
			ATTACHING PARTS		
	18	AN4-6A	. BOLT.		6
	19	AN960D416L	. WASHER.		6
	20	NAS679A4W	. NUT		6
			-------*-------		
	21	63-2822	. FILLER, RADIUS SPECIAL.		2
	22	50-3361-3049	. FILLER, RADIUS.		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE



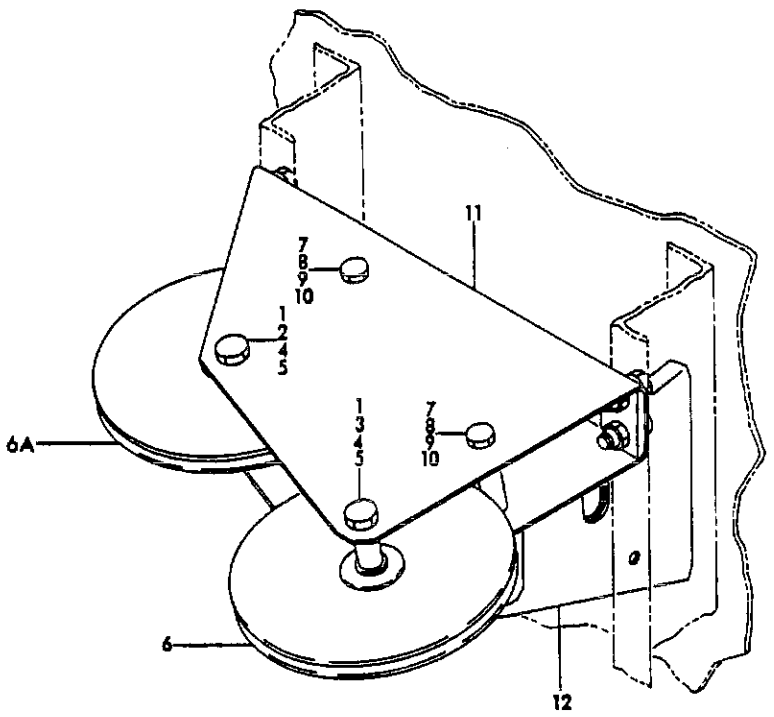


FIGURE 4. BRACKET INSTL, STATION 820 RH SIDE AILERON BUS CONTROL

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	4	65-6458	BRACKET INSTL, STATION 820 RH SIDE AILERON BUS CONTROL	0150	RF
R			(SEE FIG. 2, ITEM 14)		
R		65-6458-1	BRACKET INSTL, STATION 820 RH SIDE AILERON BUS CONTROL	5199	RF
R			(SEE FIG. 2, ITEM 14)		
	1	NAS464P5-26	. BOLT.		2
	2	AN960D516	. WASHER.		1
	3	AN960D516L	. WASHER.		1
	4	NAS43DD5-57	. SPACER.		2
	5	AN320-5	. NUT		2
R	6	AN220-4	. PULLEY.	0150	1
R	6	1967-24-501	. PULLEY, (V12210).	5199	1
	6A	AN220-4	. PULLEY.		1
	7	AN3-20A	. BOLT.		2
	8	AN960D10L	. WASHER.		2
	9	NAS42DD6-97	. SPACER.		2
	10	NAS679A3W	. NUT		2
	11	69-4972	. BRACKET, AILERON BUS CONTROL.		1
			ATTACHING PARTS		
		AN4-6A	. BOLT.		4
		AN960D416L	. WASHER.		4
		63-2822	. FILLER, RADIUS SPECIAL.		2
		NAS679A4W	. NUT		4
			-------*-------		
	12	69-5804-3	. BRACKET ASSY, AILERON BUS CONTROL SUPPORT		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

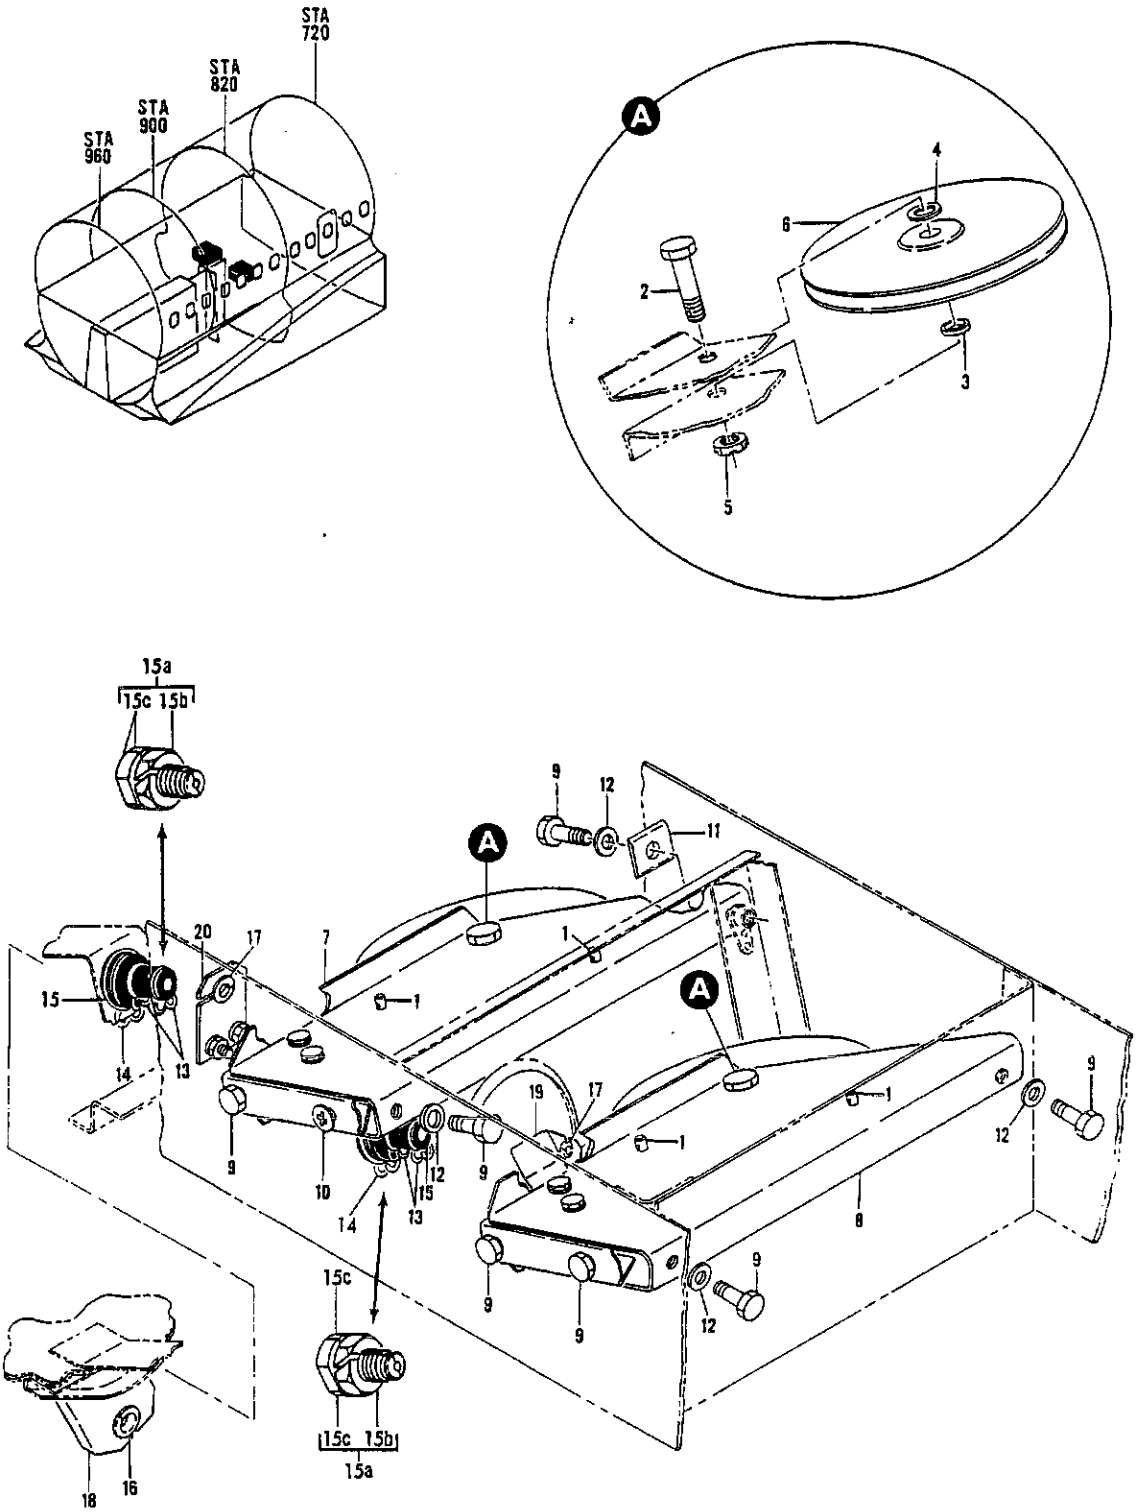


FIGURE 5. BRACKET INSTL, STATION 820 TO 830 AILERON CONTROL

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5	65-7133-3	BRACKET INSTL, STATION 820 TO 830 AILERON CONTROL (LH) (SEE FIG. 2, ITEM 15)		RF
	65-7133-4	BRACKET INSTL, STATION 820 TO 830 AILERON CONTROL (RH) (SEE FIG. 2, ITEM 16)		RF
1	BACP18CDD3-123	. PIN		4
2	NAS1105-15DW	. BOLT		2
3	NAS430D5-8	. SPACER		2
4	AN960D516	. WASHER		2
5	AN320-5	. NUT		2
6	ANZ20-4	. PULLEY		2
7	69-4876-1	. BRACKET ASSY, AILERON CONTROL (LH ONLY)		1
7	69-4876-2	. BRACKET ASSY, AILERON CONTROL (RH ONLY)		1
8	69-4877-5	. BRACKET ASSY, AILERON CONTROL (LH ONLY)		1
8	69-4877-6	. BRACKET ASSY, AILERON CONTROL (RH ONLY)		1
		ATTACHING PARTS		
9	AN4-6A	. BOLT		7
10	NAS517-4-5	. SCREW		1
11	50-3361-3053	. FILLER, RADIUS CONTROL		1
12	AN960D416L	. WASHER		4
		-------*-------		
13	BACS11L161C	. SEAL		4
14	BACS11L162C	. SEAL		2
15	S11K4RA	. SEAL, CONTROL CABLE AIR (V74687)		2
16	NAS557-8A	. GROMMET		1
18	69-13208-5	. RETENTION, CONTROL CABLE SEAL (LH ONLY)		1
18	69-13208-4	. RETENTION, CONTROL CABLE SEAL (RH ONLY)		1
		ATTACHING PARTS		
	NAS1303-1W	. BOLT		2
	AN960D10L	. WASHER		2
	NAS679A3W	. NUT		2
		-------*-------		
19	69-13209-17	. RETENTION ASSY, CONTROL CABLE SEAL (LH ONLY)		1
19	69-13209-18	. RETENTION ASSY, CONTROL CABLE SEAL (RH ONLY)		1
		ATTACHING PARTS		
	NAS1303-1W	. BOLT		2
	AN960D10L	. WASHER		2
		-------*-------		
20	66-17932-1	. RETENTION, AILERON CONTROL CABLE		1
		ATTACHING PARTS		
	NAS1103-2W	. BOLT		2
	AN960D10L	. WASHER		2
	NAS679A3W	. NUT		2
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

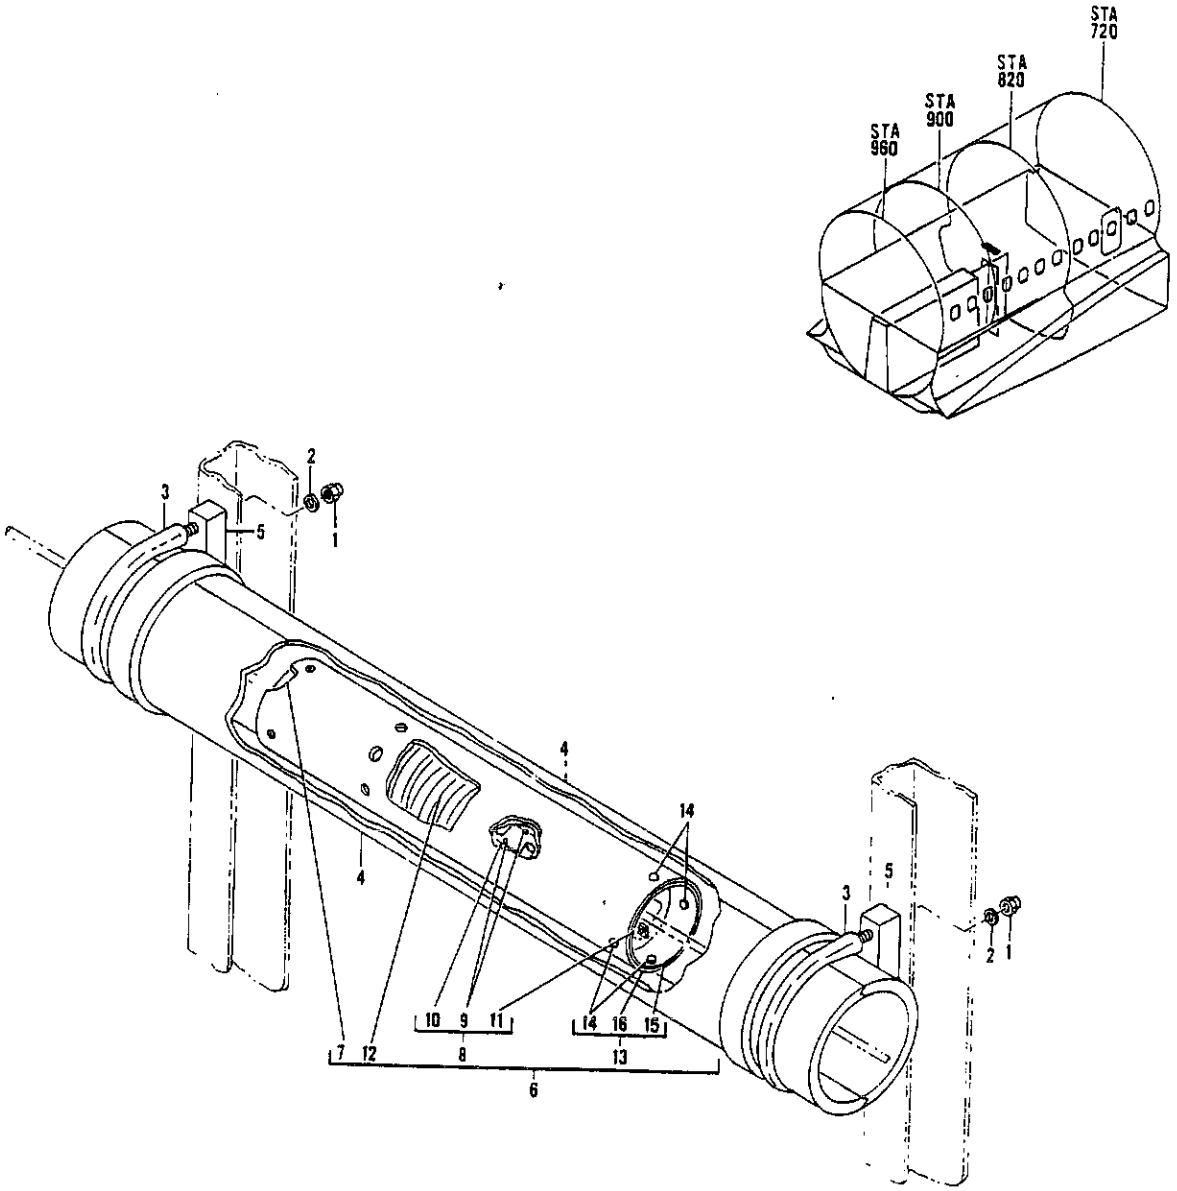


FIGURE 6. CARTRIDGE INSTL, STATION 820 AILERON BUS SPRING

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
6	65-6491-1	CARTRIDGE INSTL, STATION 820 AILERON BUS SPRING (SEE. FIG. 2, ITEM 17)		RF
1	NAS679A3W	. NUT		4
2	AN960D10L	. WASHER.		4
3	BACC10Y44P12	. CLAMP		2
4	69-8758-3	. GUARD ASSY, (USED ON 65-6491-1)		2
5	BACC10X44P	. BLOCK		2
6	9-54539-3007	. CARTRIDGE ASSY, CABLE (USED ON 65-6491-1)		1
7	6-67417	. . END CAP, AILERON BUS SPRING CARTRIDGE		1
		ATTACHING PARTS		
	AN520-10R7	. . SCREW		3
	BACN10BY53W	. . NUT		3
		-------*-------		
8	9-54539-3009	. . SLIDE ASSY, (USED ON 9-54539-3007).		1
9	AN470D5	. . . RIVET		2
10	66-9109-1	. . . RETAINER, (USED ON 9-54539-3009).		1
11	6-67415-3001	. . . SLIDE, AILERON BUS SPRING CARTRIDGE		1
12	66-23666-1	. . SPRING, COMPRESSION (USED ON 9-54539-3007).		1
13	9-54539-3008	. . HOUSING ASSY, (USED ON 9-54539-3007).		1
14	AN470D5	. . . RIVET		4
15	6-67414-3002	. . . GUIDE, SPRING (USED ON 9-54539-3008).		1
16	6-67413-3001	. . . HOUSING, AILERON BUS SPRING CARTRIDGE		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

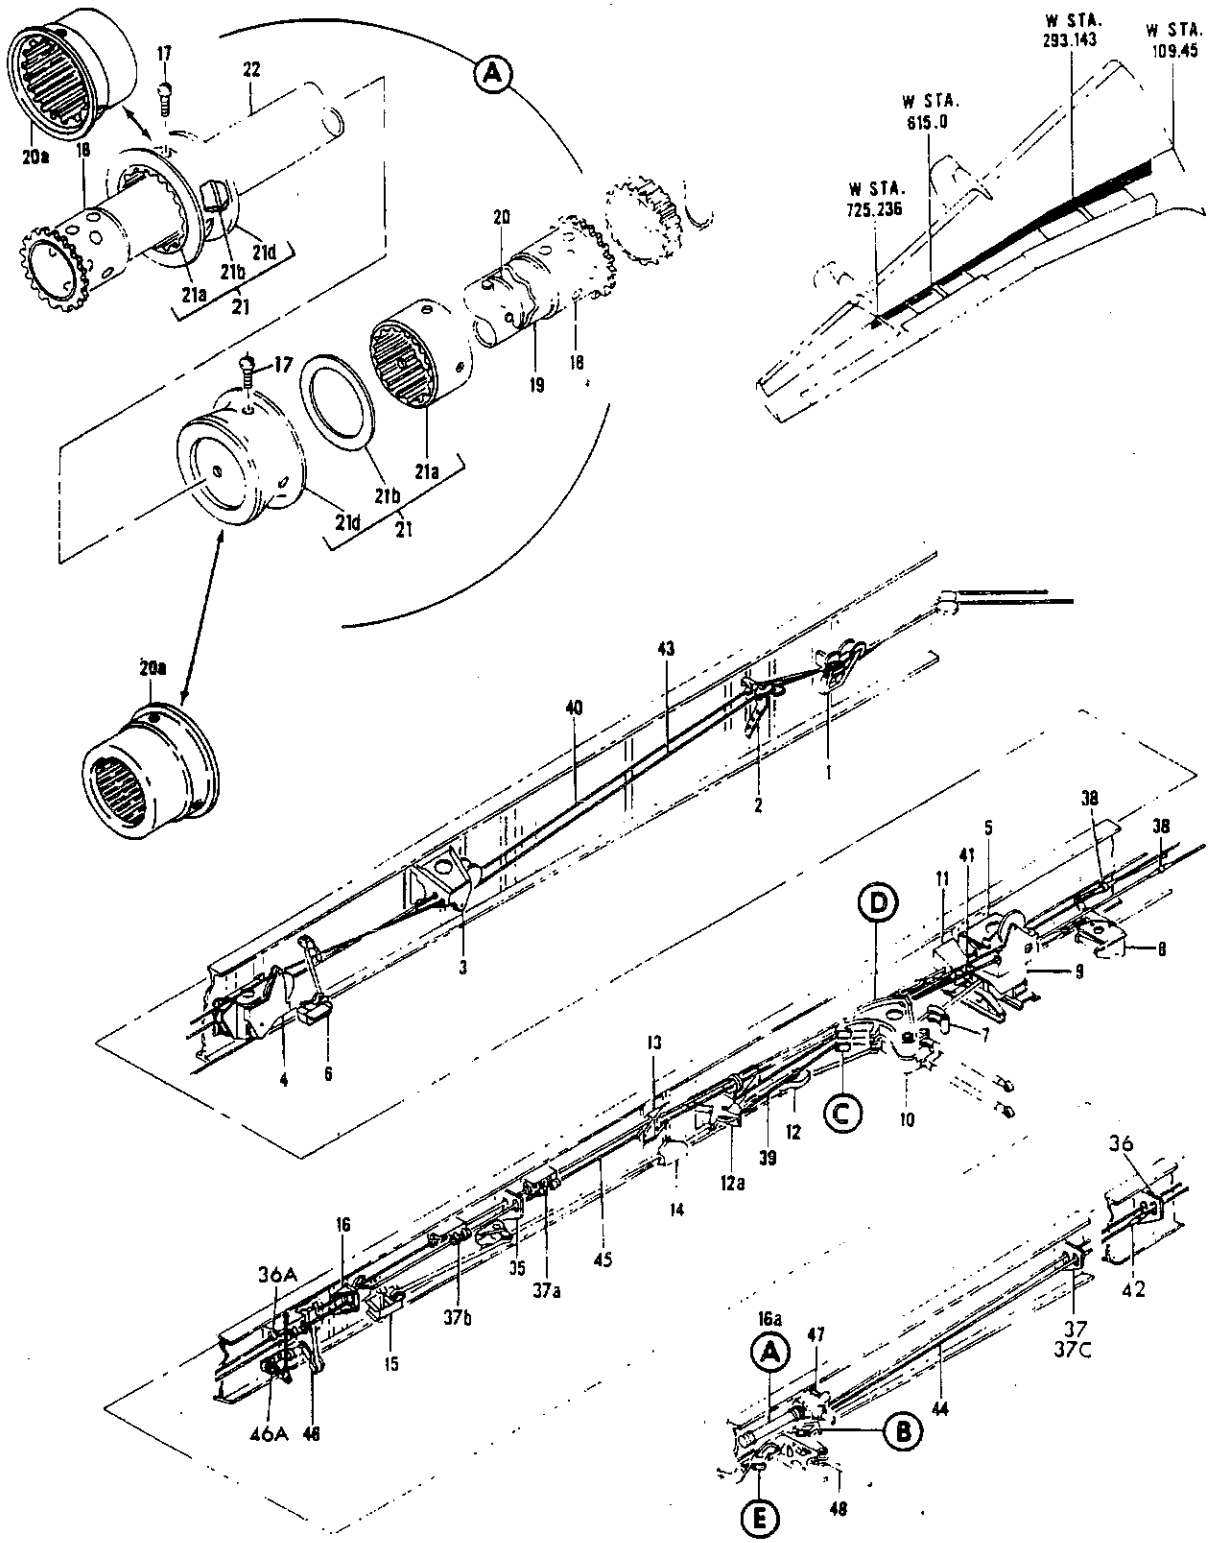


FIGURE 7. CONTROL INSTALLATION, AILERON AND SPOILER (SHEET 1)

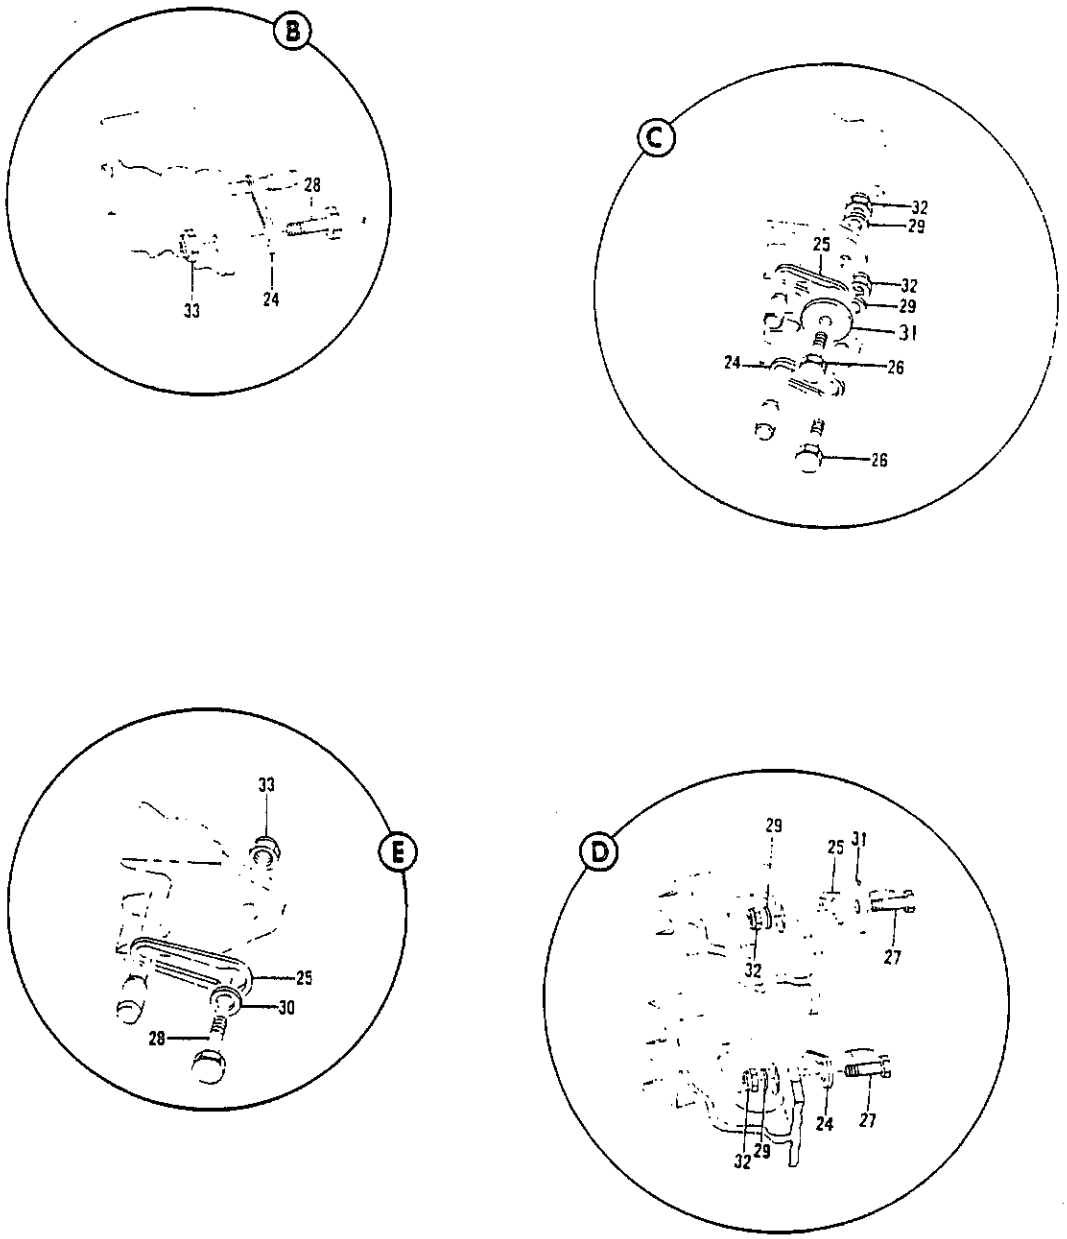


FIGURE 7. CONTROL INSTL, AILERON AND SPOILER (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R	7	50-8701-326	CONTROL INSTL, AILERON AND SPOILER (LH) (SEE 57-3, FIG.	0150	RF
R			1, ITEM 13)		
R		50-8701-326	CONTROL INSTL, AILERON AND SPOILER (LH) (VARIABLE . . .	5199	RF
R			DWG;50-8701-5003) (SEE 57-3, FIG. 1, ITEM 13)		
R		50-8701-426	CONTROL INSTL, AILERON AND SPOILER (RH) (SEE 57-3, FIG.	0150	RF
R			1, ITEM 13)		
R		50-8701-426	CONTROL INSTL, AILERON AND SPOILER (RH) (VARIABLE . . .	5199	RF
R			DWG;50-8701-5005) (SEE 57-3, FIG. 1, ITEM 13)		
	1	65-7246-1	. BRACKET INSTL, WING STATION 140 AILERON AND SPEED . . BRAKE (LH) (SEE FIG. 8)		1
	1	65-7246-2	. BRACKET INSTL, WING STATION 140 AILERON AND SPEED . . BRAKE (RH) (SEE FIG. 8)		1
R	2	65-22059	. BRACKET INSTL, WING STATION 160 TRIM AND BUS (LH) . .	0150	1
R			(SEE FIG. 9)		
R	2	65-22059-4	. BRACKET INSTL, WING STATION 160 TRIM AND BUS (LH) . .	5199	1
R			(SEE FIG. 9)		
R	2	65-22059-1	. BRACKET INSTL, WING STATION 160 TRIM AND BUS (RH) . .	0150	1
R			(SEE FIG. 9)		
R	2	65-22059-5	. BRACKET INSTL, WING STATION 160 TRIM AND BUS (RH) . .	5199	1
R			(SEE FIG. 9)		
R	3	65-7050-1	. BRACKET INSTL, WING STATION 248 AND SPEED BRAKE . . .	0150	1
R			(LH ONLY) (SEE FIG. 10)		
R	3	65-7050-7	. BRACKET INSTL, WING STATION 248 SPEED BRAKE (LH ONLY)	5199	1
R			(SEE FIG. 10A)		
R	3	65-7050-2	. BRACKET INSTL, WING STATION 248 AND SPEED BRAKE . . .	0150	1
R			(RH ONLY) (SEE FIG. 10)		
R	3	65-7050-8	. BRACKET INSTL, WING STATION 248 SPEED BRAKE (RH ONLY)	5199	1
R			(SEE FIG. 10A)		
R	4	65-6875-1	. BRACKET INSTL, WING STATION 315 BUS AND CONTROL . . .	0150	1
R			(LH ONLY) (SEE FIG. 11)		
R	4	65-6875-7	. BRACKET INSTL, WING STATION 315 BUS AND CONTROL (LH .	5199	1
R			ONLY) (SEE FIG. 11A)		
R	4	65-6875-2	. BRACKET INSTL, WING STATION 315 BUS AND CONTROL . . .	0150	1
R			(RH ONLY) (SEE FIG. 11)		
R	4	65-6875-8	. BRACKET INSTL, WING STATION 315 BUS AND CONTROL (RH .	5199	1
R			ONLY) (SEE FIG. 11A)		
R	5	65-7444-1	. BRACKET INSTL, WING STATION 387 BUS (LH ONLY)	0150	1
R			(SEE FIG. 12)		
R	5	65-7444-13	. BRACKET INSTL, WING STATION 387 BUS (LH ONLY) (SEE. .	5199	1
R			FIG. 12)		
R	5	65-7444-2	. BRACKET INSTL, WING STATION 387 BUS (RH ONLY)	0150	1
R			(SEE FIG. 12)		
R	5	65-7444-14	. BRACKET INSTL, WING STATION 387 BUS (RH ONLY) (SEE. .	5199	1
R			FIG. 12)		
	6	65-8303-1	. CRANK INSTL, INBOARD SPEED BRAKE FOLLOW-UP LINKAGE. . (LH ONLY) (SEE 27-5, FIG. 22)		1
	6	65-8303-2	. CRANK INSTL, INBOARD SPEED BRAKE FOLLOW-UP LINKAGE. . (RH ONLY) (SEE 27-5, FIG. 22)		1
	7	65-19002-1	. CRANK INSTL, WING STATION 449.56 INBOARD SPOILER. . . IDLER (LH ONLY) (SEE 27-5, FIG. 23)		1
	7	65-19002-2	. CRANK INSTL, WING STATION 449.56 INBOARD SPOILER. . . IDLER (RH ONLY) (SEE 27-5, FIG. 23)		1
	8	65-19000-1	. LINKAGE INSTL, INBOARD SPOILER DIFFERENTIAL (LH ONLY) (SEE 27-5, FIG. 21)		1
	8	65-19000-2	. LINKAGE INSTL, INBOARD SPOILER DIFFERENTIAL (RH ONLY) (SEE 27-5, FIG. 21)		1
	9	65-19001-1	. VALVE INSTL, INBOARD (LH ONLY).		1
	9	65-19001-2	. VALVE INSTL, INBOARD (RH ONLY).		1
			. . FLIGHT CONTROL (SEE 27-5, FIG. 13 AND 14)		
			. . . REQUIRED PLACARDS (SEE 11-3, FIG. 43)		
	10	5-98334-3003	. QUADRANT INSTL, INBOARD BUS AND CONTROL (LH ONLY) . . (SEE FIG. 18) (OPTIONAL 5-98334-3005)		1
	10	5-98334-3005	. QUADRANT INSTL, INBOARD BUS AND CONTROL (LH ONLY) . . (SEE FIG. 18) (OPTIONAL TO 5-98334-3003)		1
	10	5-98334-3004	. QUADRANT INSTL, INBOARD BUS AND CONTROL (RH ONLY) . . (SEE FIG. 18) (OPTIONAL 5-98334-3006)		1
	10	5-98334-3006	. QUADRANT INSTL, INBOARD BUS AND CONTROL (RH ONLY) . . (SEE FIG. 18) (OPTIONAL TO 5-98334-3004)		1
	11	65-6615-1	. BRACKET INSTL, WING STATIONS 405 AND 420 CONTROL. . . AND BUS (LH ONLY) (SEE FIG. 13)		1

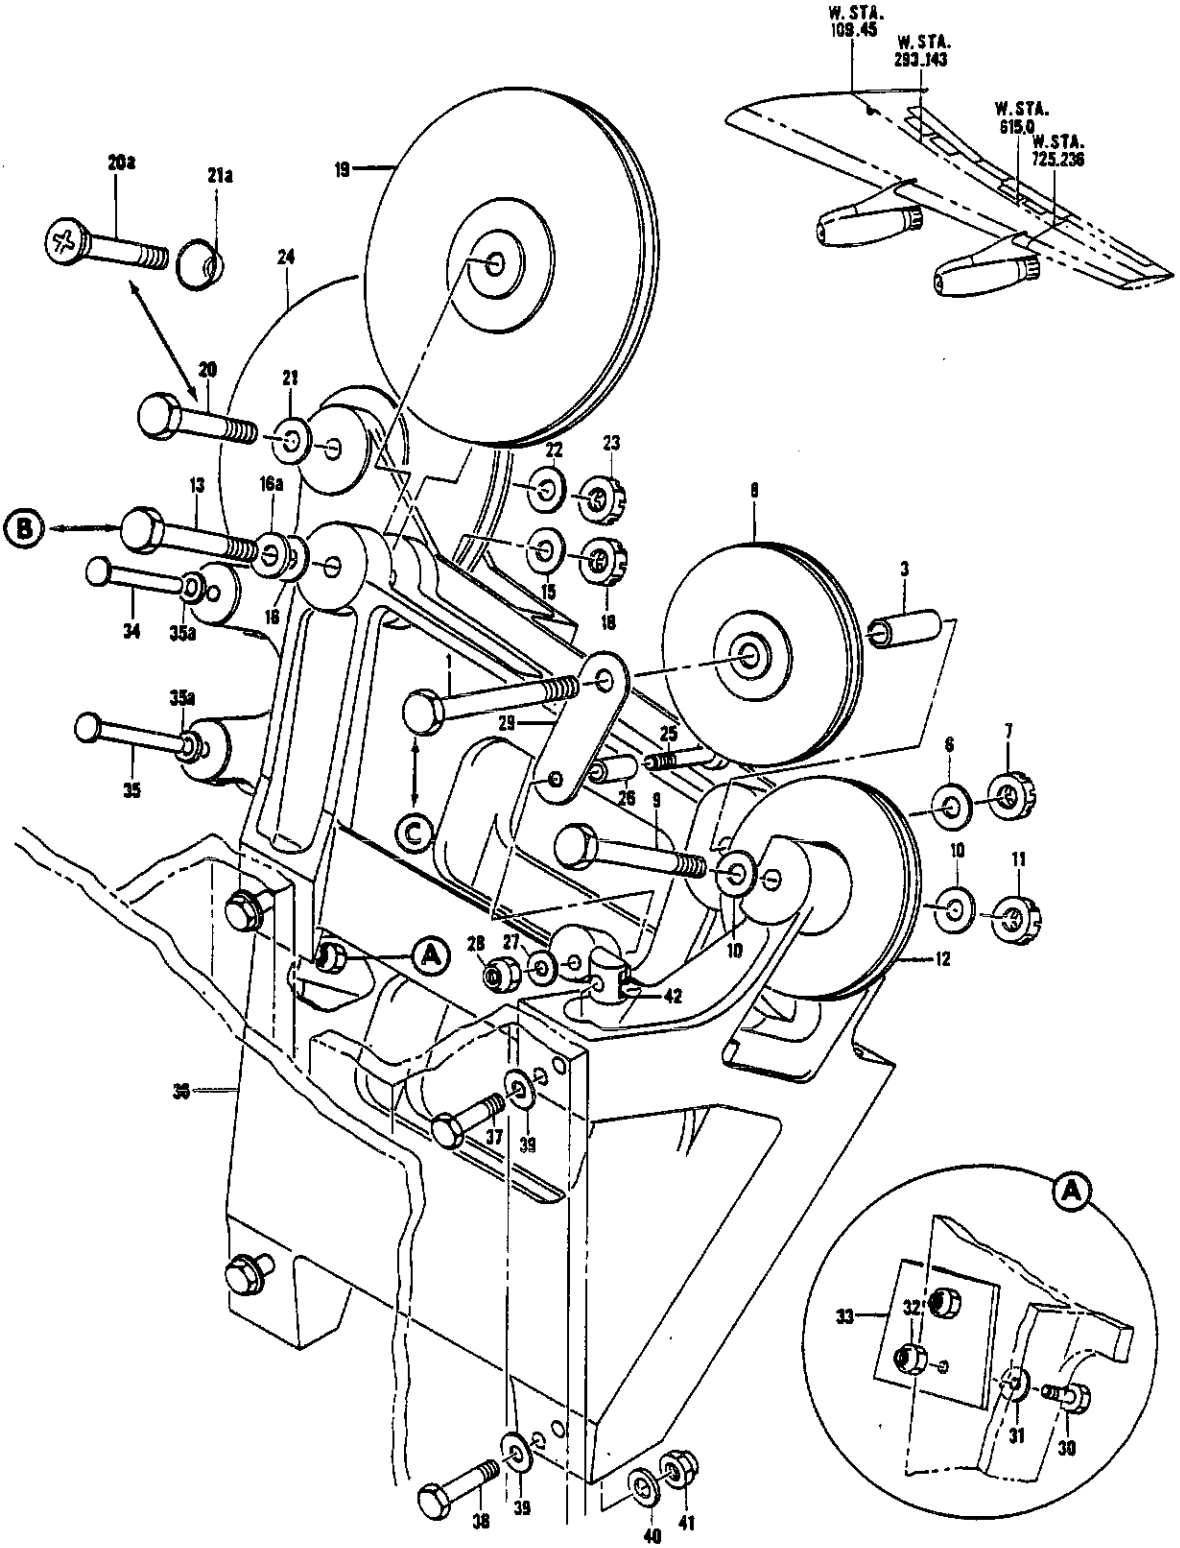
MISSING ITEM NUMBERS ARE NOT APPLICABLE


	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	7 11	65-6615-2	. BRACKET INSTL, WING STATIONS 405 AND 420 CONTROL. . . AND BUS (RH ONLY) (SEE FIG. 13)		1
	12	5-98386-3001	. VALVE INSTL, OUTBOARD LH (LH ONLY).		1
	12	5-98386-3002	. VALVE INSTL, OUTBOARD RH (RH ONLY).		1
			. . FLIGHT CONTROL (SEE 27-5, FIG. 11 AND 27-5, FIG.. . 12)		
			. . REQUIRED PLACARDS (SEE 11-3, FIG. 44)		
	12A	65-6694-1	. BRACKET INSTL, WING STATION 501 AILERON CONTROL AND . BUS (LH ONLY) (SEE FIG. 13)		1
	12A	65-6694-2	. BRACKET INSTL, WING STATION 501 AILERON CONTROL AND . BUS (RH ONLY) (SEE FIG. 13)		1
R	13	50-1504-3001	. BRACKET INSTL, WING STATION 520 BUS (LH ONLY)	0150	1
R			(SEE FIG. 14)		
R	13	50-1504-3003	. BRACKET INSTL, WING STATION 520 BUS (LH ONLY) (SEE. .	5199	1
R			FIG. 14)		
R	13	50-1504-3002	. BRACKET INSTL, WING STATION 520 BUS (RH ONLY)	0150	1
R			(SEE FIG. 14)		
R	13	50-1504-3004	. BRACKET INSTL, WING STATION 520 BUS (RH ONLY) (SEE. .	5199	1
R			FIG. 14)		
	14	5-98304-3001	. BRACKET INSTL, OUTBOARD SPOILER FOLLOW-UP . . . . . DIFFERENTIAL CRANK (LH ONLY) (SEE 27-5, FIG. 20)		1
	14	5-98304-3002	. BRACKET INSTL, OUTBOARD SPOILER FOLLOW-UP . . . . . DIFFERENTIAL CRANK (RH ONLY) (SEE 27-5, FIG. 20)		1
	15	50-1514-3001	. BRACKET INSTL, WING STATION 602.72 FOLLOW-UP CRANK. . (LH ONLY) (SEE 27-5, FIG. 19)		1
	15	50-1514-3002	. BRACKET INSTL, WING STATION 602.72 FOLLOW-UP CRANK. . (RH ONLY) (SEE 27-5, FIG. 19)		1
R	16	50-1505-3001	. BRACKET INSTL, WING STATION 620 BUS (LH ONLY)	0150	1
R			(SEE FIG. 14)		
R	16	50-1505-3003	. BRACKET INSTL, WING STATION 620 BUS (LH ONLY) (SEE. .	5199	1
R			FIG. 14)		
R	16	50-1505-3002	. BRACKET INSTL, WING STATION 620 BUS (RH ONLY)	0150	1
R			(SEE FIG. 14)		
R	16	50-1505-3004	. BRACKET INSTL, WING STATION 620 BUS (RH ONLY) (SEE. .	5199	1
R			FIG. 14)		
	16A	9-49684-3002	. SHAFT ASSY, OUTBOARD AILERON LOCKOUT DRIVE. . . . . ATTACHING PARTS		1
R	17	AN501A10-6	. SCREW	0150	6
R	17	66-25875-1	. SCREW	5199	6
			-------*-------		
	18	6-61583	. . COUPLING, FLAP DRIVE SPLINE		2
	19	3-88463	. . ADAPTER, OUTBOARD AILERON LOCKOUT DRIVE		1
	20	3-88464	. . SLEEVE, OUTBOARD AILERON LOCKOUT DRIVE.		1
	20A	69-33513-1	. . SLEEVE, FLAP DRIVE COUPLING		2
	22	9-49684-2002	. . SHAFT, OUTBOARD AILERON LOCKOUT DRIVE		1
R	24	3-89042-3001	. PLATE, 1/8 IN. CONTROL CABLE RETAINING.	0150	3
R	24	69-67555-1	. PLATE, 1/8 IN. CONTROL CABLE RETAINING.	5199	3
R	25	3-74691-3001	. PLATE, 3/16 IN. CONTROL CABLE RETAINING	0150	3
R	25	69-67556-1	. PLATE, 3/16 IN. CONTROL CABLE RETAINING	5199	3
			ATTACHING PARTS		
	26	AN3-5A	. BOLT.		2
	27	AN3-6A	. BOLT.		2
	28	AN4-5A	. BOLT.		2
	29	BACW10T10	. WASHER.		4
	30	AN960-416	. WASHER.		1
	31	AN970-3	. WASHER.		1
	31A	AN960PD10	. WASHER.		3
	32	NAS679A3W	. NUT		4
	33	NAS679A4W	. NUT		2
			-------*-------		
	35	66-1796-1	. FAIRLEAD INSTL, WING TRAILING EDGE STATION 554.12 . . AILERON BUS CABLES (LH ONLY) (SEE FIG. 15)		1
	35	66-1796-2	. FAIRLEAD INSTL, WING TRAILING EDGE STATION 554.12 . . AILERON BUS CABLES (RH ONLY) (SEE FIG. 15)		1
	36	69-17441-1	. FAIRLEAD INSTL, WING STATION 653.88 AILERON BUS . . . CABLES (LH ONLY) (SEE FIG. 16)		1
	36	69-17441-2	. FAIRLEAD INSTL, WING STATION 653.88 AILERON BUS . . . CABLES (RH ONLY) (SEE FIG. 16)		1
	37	66-1798-1	. FAIRLEAD INSTL, WING TRAILING EDGE STATION 691.40 . . AILERON BUS CABLE (LH ONLY) (SEE FIG. 17)		1
	37	66-1798-2	. FAIRLEAD INSTL, WING TRAILING EDGE STATION 691.40 . . AILERON BUS CABLE (RH ONLY) (SEE FIG. 17)		1
R	38	AN155-32L	. BARREL.	0150	2
R	38	MS21251B5L	. BARREL.	5199	2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	7 39	BACC13G468-1735	. CABLE ASSY, (LH ONLY)		1
	39	BACC13G469-1735	. CABLE ASSY, (RH ONLY)		1
R	40	BACC13G469-7146	. CABLE ASSY, (LH ONLY)	0150	1
R	40	65-75195-43	. CABLE ASSY, (LH ONLY)	5199	1
R	40	BACC13G468-6764	. CABLE ASSY, (RH ONLY)	0150	1
R	40	65-75195-45	. CABLE ASSY, (RH ONLY)	5199	1
		BACT14A4	. . TERMINAL.		1
R		AN669L4LH	. . TERMINAL, (LH ONLY)	0150	1
R		MS21260L4LH	. . TERMINAL, (LH ONLY)	5199	1
		MS21260L4RH	. . TERMINAL, (RH ONLY)		1
	41	BACC13G469-1352	. CABLE ASSY, (LH ONLY)		1
	41	BACC13G468-1352	. CABLE ASSY, (RH ONLY)		1
R	42	AN155-46L	. BARREL.	0150	1
R	42	MS21251B6L	. BARREL.	5199	1
R	43	BACC13G626-3654	. CABLE ASSY, (LH ONLY)	0150	1
R	43	65-75195-27	. CABLE ASSY, (LH ONLY)	5199	1
	43	BACC13G625-4838	. CABLE ASSY, (RH ONLY)		1
R	43	65-75195-28	. CABLE ASSY, (RH ONLY)	5199	1
R	44	BACC13G626-650	. CABLE ASSY, (LH ONLY)	0150	1
R	44	65-75195-25	. CABLE ASSY, (LH ONLY)	5199	1
R	44	BACC13G625-650	. CABLE ASSY, (RH ONLY)	0150	1
R	44	65-75195-30	. CABLE ASSY, (RH ONLY)	5199	1
		BACT14A6	. . TERMINAL.		1
		MS21260L6LH	. . TERMINAL, (LH ONLY)		1
		MS21260L6RH	. . TERMINAL, (RH ONLY)		1
R	45	BACC13G625-2173	. CABLE ASSY, (LH ONLY)	0150	1
R	45	65-75195-26	. CABLE ASSY, (LH ONLY)	5199	1
R	45	BACC13G626-2173	. CABLE ASSY, (RH ONLY)	0150	1
R	45	65-75195-29	. CABLE ASSY, (RH ONLY)	5199	1
		BACT14A6	. . TERMINAL.		1
		MS21260L6LH	. . TERMINAL, (RH ONLY)		1
		MS21260L6RH	. . TERMINAL, (LH ONLY)		1
	46	65-21085-1	. BRACKET INSTL, SPOILER POSITION TRANSMITTER (LH ONLY) (SEE 22-1, FIG. 16)		1
	46	65-21085-2	. BRACKET INSTL, SPOILER POSITION TRANSMITTER (RH ONLY) (SEE 22-1, FIG. 16)		1
	47		DRIVE INSTL, SECTION 26 FLAP (FOR REF SEE 27-7, FIG. 36 AND 37)		RF
	48		QUADRANT INSTL, OUTBOARD AILERON CONTROL (FOR REF SEE FIG. 25)		RF

MISSING ITEM NUMBERS ARE NOT APPLICABLE


W.STA. 109.45
W.STA. 293.143
W.STA. 615.0
W.STA. 725.236
20a
21a
19
24
20
21
22
23
13
16a
B
8
3
34
35a
16
15
18
29
25
35a
35
26
9
6
7
C
10
11
A
28
27
10
12
42
36
37
39
A
33
32
31
30
38
39
40
41

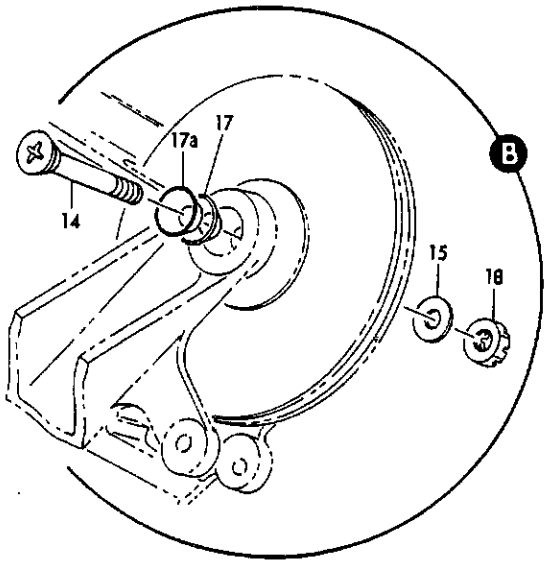

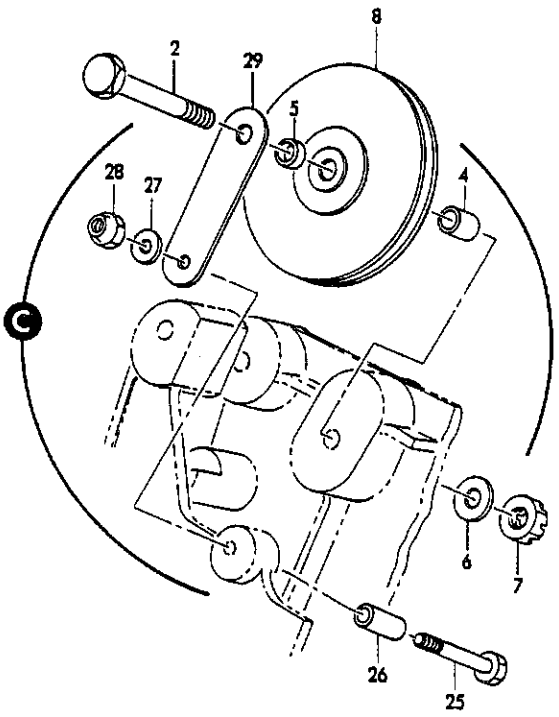


FIGURE 8. BRACKET INSTL, WING STATION 140 AILERON AND SPEED BRAKE (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	8	65-7246-1	BRACKET INSTL, WING STATION 140 AILERON AND SPEED BRAKE (LH) (SEE FIG. 7, ITEM 1)		RF
		65-7246-2	BRACKET INSTL, WING STATION 140 AILERON AND SPEED BRAKE (RH) (SEE FIG. 7, ITEM 1)		RF
	1	NAS1105-41DW	. BOLT, (LH ONLY)		1
	2	NAS1105-39DW	. BOLT, (RH ONLY)		1
	3	NAS43DD5-54	. SPACER, (LH ONLY)		1
	4	NAS43DD5-35	. SPACER, (RH ONLY)		1
	5	NAS43DD5-15	. SPACER, (RH ONLY)		1
	6	BACW10T516	. WASHER.		1
	7	AN320-5	. NUT		1
	8	AN220-2	. PULLEY.		1
	9	NAS1105-40DW	. BOLT.		1
	10	BACW10T516	. WASHER.		2
	11	AN320-5	. NUT		1
	12	AN220-2	. PULLEY.		1
	13	NAS1105-25DW	. BOLT, (LH ONLY)		1
	14	BACB30ABP5-25	. BOLT, (RH ONLY)		1
	15	BACW10T516L	. WASHER.		1
	16	BACW10T516L	. WASHER, (LH ONLY)		1
	16A	BACW10T516L	. WASHER, (LH ONLY)		AR
	17	BACW10Z5	. WASHER.		1
	17A	BACW10Z5	. WASHER, (RH ONLY)		AR
	18	AN320-5	. NUT		1
	19	AN220-4	. PULLEY.		1
	20A	BACB30ABP5-26	. BOLT.		1
	21A	BACW10Z5	. WASHER.		1
	22	BACW10T516	. WASHER, (LH ONLY)		1
	23	AN320-5	. NUT		1
	24	AN220-4	. PULLEY.		1
	25	AN3-13A	. BOLT.		1
	26	NAS42DD6-34	. SPACER.		1
	27	BACW10T10	. WASHER.		1
	28	NAS679A3W	. NUT		1
	29	66-5313	. STRAP, WING STATION 140 SPEED BRAKE PULLEY BRACKET.		1
	30	AN3-5A	. BOLT, (LH ONLY)		2
	31	BACW10T10	. WASHER, (LH ONLY)		2
	32	NAS679A3W	. NUT, (LH ONLY).		2
	33	63-9266-1	. CLIP, SECTION 26 HYDRAULIC TUBING SUPPORT (LH ONLY)		1
	34	AN393-51	. PIN		1
	35	AN393-55	. PIN		1
	35A	BACW10T10L	. WASHER.		2
R R R	36	65-7235-6	. BRACKET, WING STATION 140 AILERON AND SPEED BRAKE PULLEY (LH ONLY) (OPTIONAL TO 65-7235-9)	0150	1
R R R	36	65-7235-9	. BRACKET, WING STATION 140 AILERON AND SPEED BRAKE PULLEY (LH ONLY) (OPTIONAL 65-7235-6)	0150	1
R R	36	65-7235-9	. BRACKET, WING STATION 140 AILERON AND SPEED BRAKE PULLEY (LH ONLY)	5199	1
R R R	36	65-7235-7	. BRACKET, WING STATION 140 AILERON AND SPEED BRAKE PULLEY (RH ONLY) (OPTIONAL TO 65-7235-10)	0150	1
R R R	36	65-7235-10	. BRACKET, WING STATION 140 AILERON AND SPEED BRAKE PULLEY (RH ONLY) (OPTIONAL 65-7235-7)	0150	1
R R	36	65-7235-10	. BRACKET, WING STATION 140 AILERON AND SPEED BRAKE PULLEY (RH ONLY)	5199	1
			ATTACHING PARTS		
	37	AN4-11A	. BOLT.		2
	38	AN4-12A	. BOLT.		2
	39	AN960D416	. WASHER.		4
	40	BACW10T416	. WASHER.		2
	41	NAS679A4W	. NUT		2
	42	NAS577-4A	. NUT		2
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

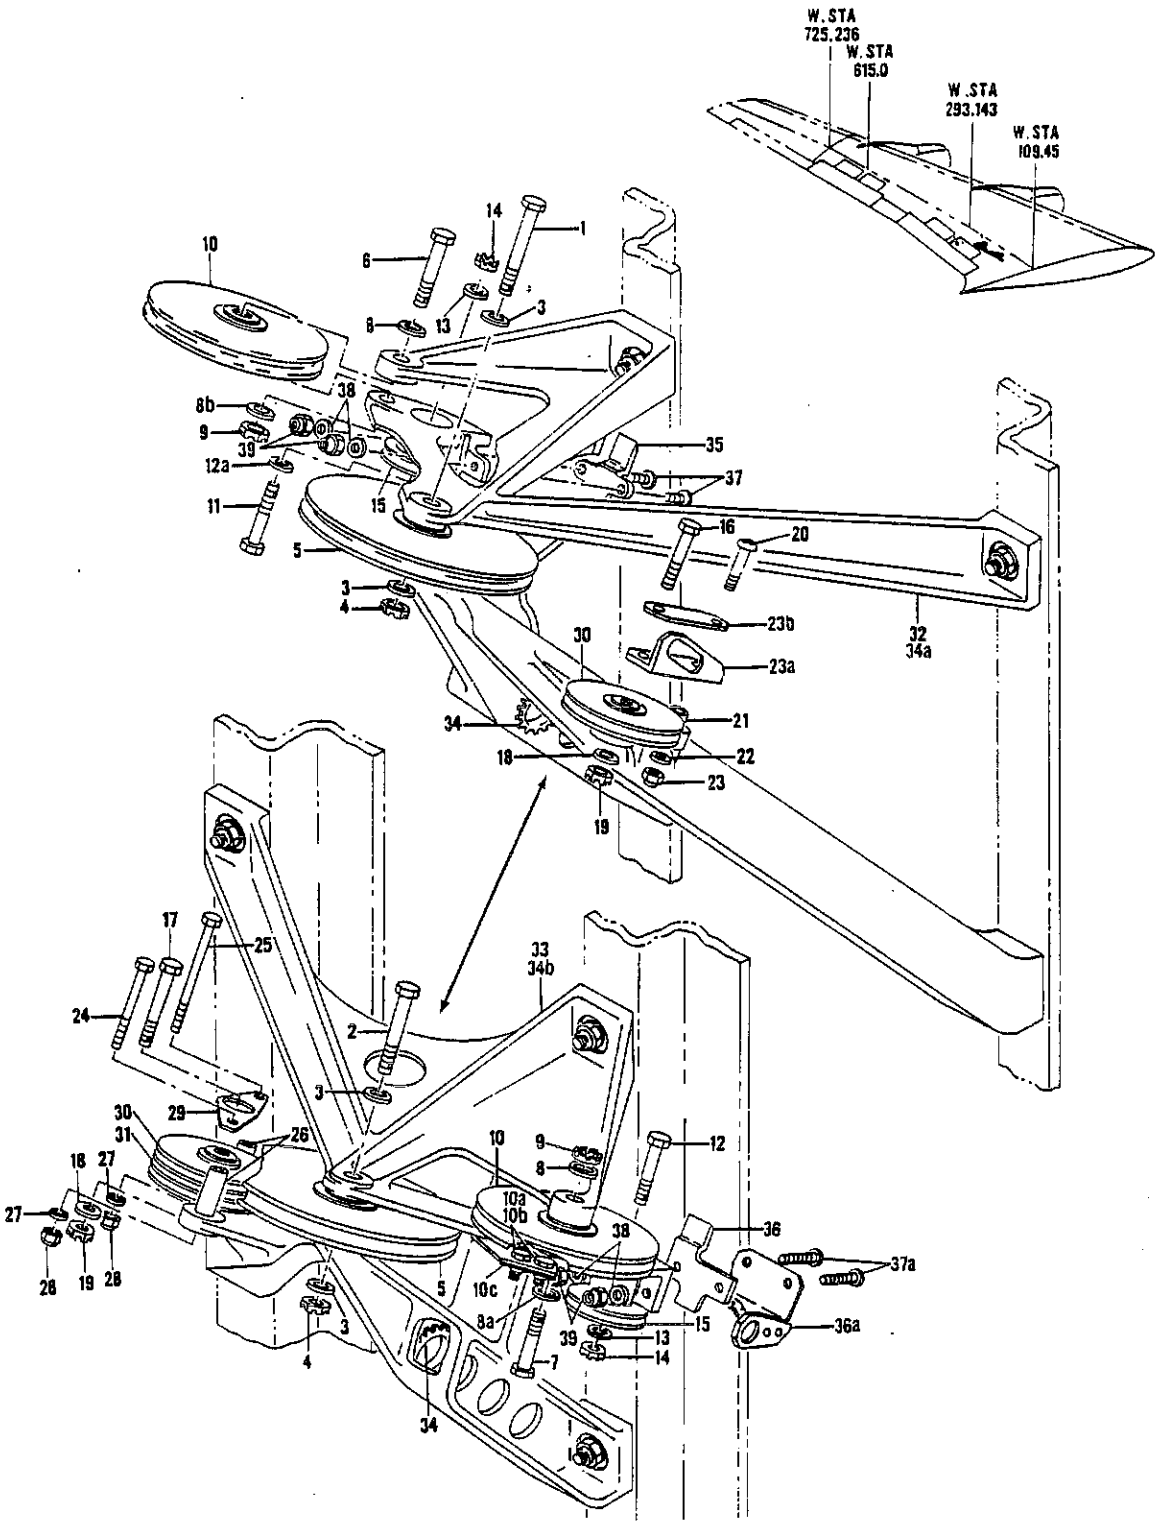


FIGURE 9. BRACKET INSTL, WING STATION 160 AILERON TRIM AND BUS

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R	9	65-22059	BRACKET INSTL, WING STATION 160 AILERON TRIM AND BUS. (LH) (SEE FIG. 7, ITEM 2)	0150	RF
R		65-22059-4	BRACKET INSTL, WING STATION 160 AILERON TRIM AND BUS. (LH) (SEE FIG. 7, ITEM 2)	5199	RF
R		65-22059-1	BRACKET INSTL, WING STATION 160 AILERON TRIM AND BUS. (RH) (SEE FIG. 7, ITEM 2)	0150	RF
R		65-22059-5	BRACKET INSTL, WING STATION 160 AILERON TRIM AND BUS. (RH) (SEE FIG. 7, ITEM 2)	5199	RF
	1	NAS1105-26DW	. BOLT, (OPTIONAL NAS464P5-26) (LH ONLY).		1
	2	NAS1105-25DW	. BOLT, (RH ONLY)		1
	3	BACW10T516	. WASHER.		2
	4	AN320-5	. NUT		1
R	5	AN220-4	. PULLEY.	0150	1
R	5	1967-24-501	. PULLEY, (V12210).	5199	1
	6	NAS1105-21DW	. BOLT, (OPTIONAL NAS464P5-21) (LH ONLY).		1
	7	NAS1105-22DW	. BOLT, (RH ONLY)		1
	7	AN5H15	. BOLT, (RH ONLY)		1
	8	BACW10T516	. WASHER.		1
	8A	BACW10T516L	. WASHER, (RH ONLY)		1
	8B	BACW10T516	. WASHER, (LH ONLY)		1
	9	AN320-5	. NUT		1
R	10	AN220-3	. PULLEY.	5199	1
R	10A	NAS1103-2W	. BOLT, (RH ONLY)	5199	2
R	10B	NAS679A3W	. NUT, (RH ONLY).	5199	2
R	10C	66-20214-2	. BRACKET, WING STATION 160 AILERON TRIM AND BUS BOLT RETAINER (RH ONLY)	5199	1
	11	BAC830ABP4-21	. BOLT, (LH ONLY)		1
	12	NAS1104-22DW	. BOLT, (RH ONLY)		1
	12A	66-16890-1	. WASHER, 100& COUNTERSUNK (LH ONLY).		1
	13	BACW10T416	. WASHER.		1
	14	AN320-4	. NUT		1
R	15	AN219-2	. PULLEY.	5199	1
	16	NAS1104-17DW	. BOLT, (OPTIONAL NAS464P4-17) (LH ONLY).		1
	17	NAS1104-24DW	. BOLT, (RH ONLY)		1
	18	BACW10T416	. WASHER.		1
	19	AN320-4	. NUT		1
	20	NAS221-21	. SCREW, (LH ONLY).		1
	21	NAS42DD6-28	. SPACER, (LH ONLY)		1
	22	BACW10T10	. WASHER, (LH ONLY)		1
	23	NAS679A3W	. NUT, (LH ONLY).		1
	23A	66-33074	. FAIRLEAD, WING STATION 160 AILERON TRIM AND BUS (LH ONLY)		1
	24	AN3-17A	. BOLT, (RH ONLY)		1
	25	AN3-26A	. BOLT, (RH ONLY)		1
	26	NAS42DD6-60	. SPACER, (RH ONLY)		2
	27	BACW10T10	. WASHER, (RH ONLY)		2
	28	NAS679A3W	. NUT, (RH ONLY).		2
	29	66-11098-1	. GUARD, AILERON CONTROL BRACKET CABLE (RH ONLY).		1
R	30	AN219-4	. PULLEY, (LH ONLY)	5199	1
R	31	AN219-4	. PULLEY, (RH ONLY)	5199	2
R	32	65-21064-3	. BRACKET ASSY, PULLEY (USED ON 65-22059 AND -2).	0150	1
R	32	65-21064-6	. BRACKET ASSY, PULLEY (USED ON 65-22059-4)	5199	1
R	33	65-21064-2	. BRACKET ASSY, PULLEY (USED ON 65-22059-1 AND -3).	0150	1
R	33	65-21064-7	. BRACKET ASSY, PULLEY (USED ON 65-22059-5)	5199	1
			ATTACHING PARTS		
		AN4-11A	. BOLT.		4
		AN960D416	. WASHER.		4
		BACW10T416	. WASHER.		4
		NAS679A4W	. NUT		4
			-------*--------		
	34	BACG20ZC260	. . GROMMET		1
R	34A	65-21064	. . BRACKET, (USED ON 65-21064-3)	0150	1
R	34A	65-21064-8	. . BRACKET, (USED ON 65-21064-6)	5199	1
R	34B	65-21064-1	. . BRACKET, (USED ON 65-21064-2 AND -4).	0150	1
R	34B	65-21064-9	. . BRACKET, (USED ON 65-21064-7)	5199	1
	35	69-12037	. GUARD, WING STATION 160 AILERON TRIM AND BUS CABLE. (LH ONLY)		1
	36	69-12037-1	. GUARD, WING STATION 160 AILERON TRIM AND BUS CABLE. (RH ONLY)		1
	36A	66-33088	. BRACKET ASSY, WING STATION 160 AILERON TRIM AND BUS FAIRLEAD (RH ONLY)		1
	37	NAS602-10	. SCREW, (LH ONLY).		2
	37A	NAS602-11	. SCREW, (RH ONLY).		2
	38	BACW10T8	. WASHER.		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
9 39	NAS679A08W	. NUT		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

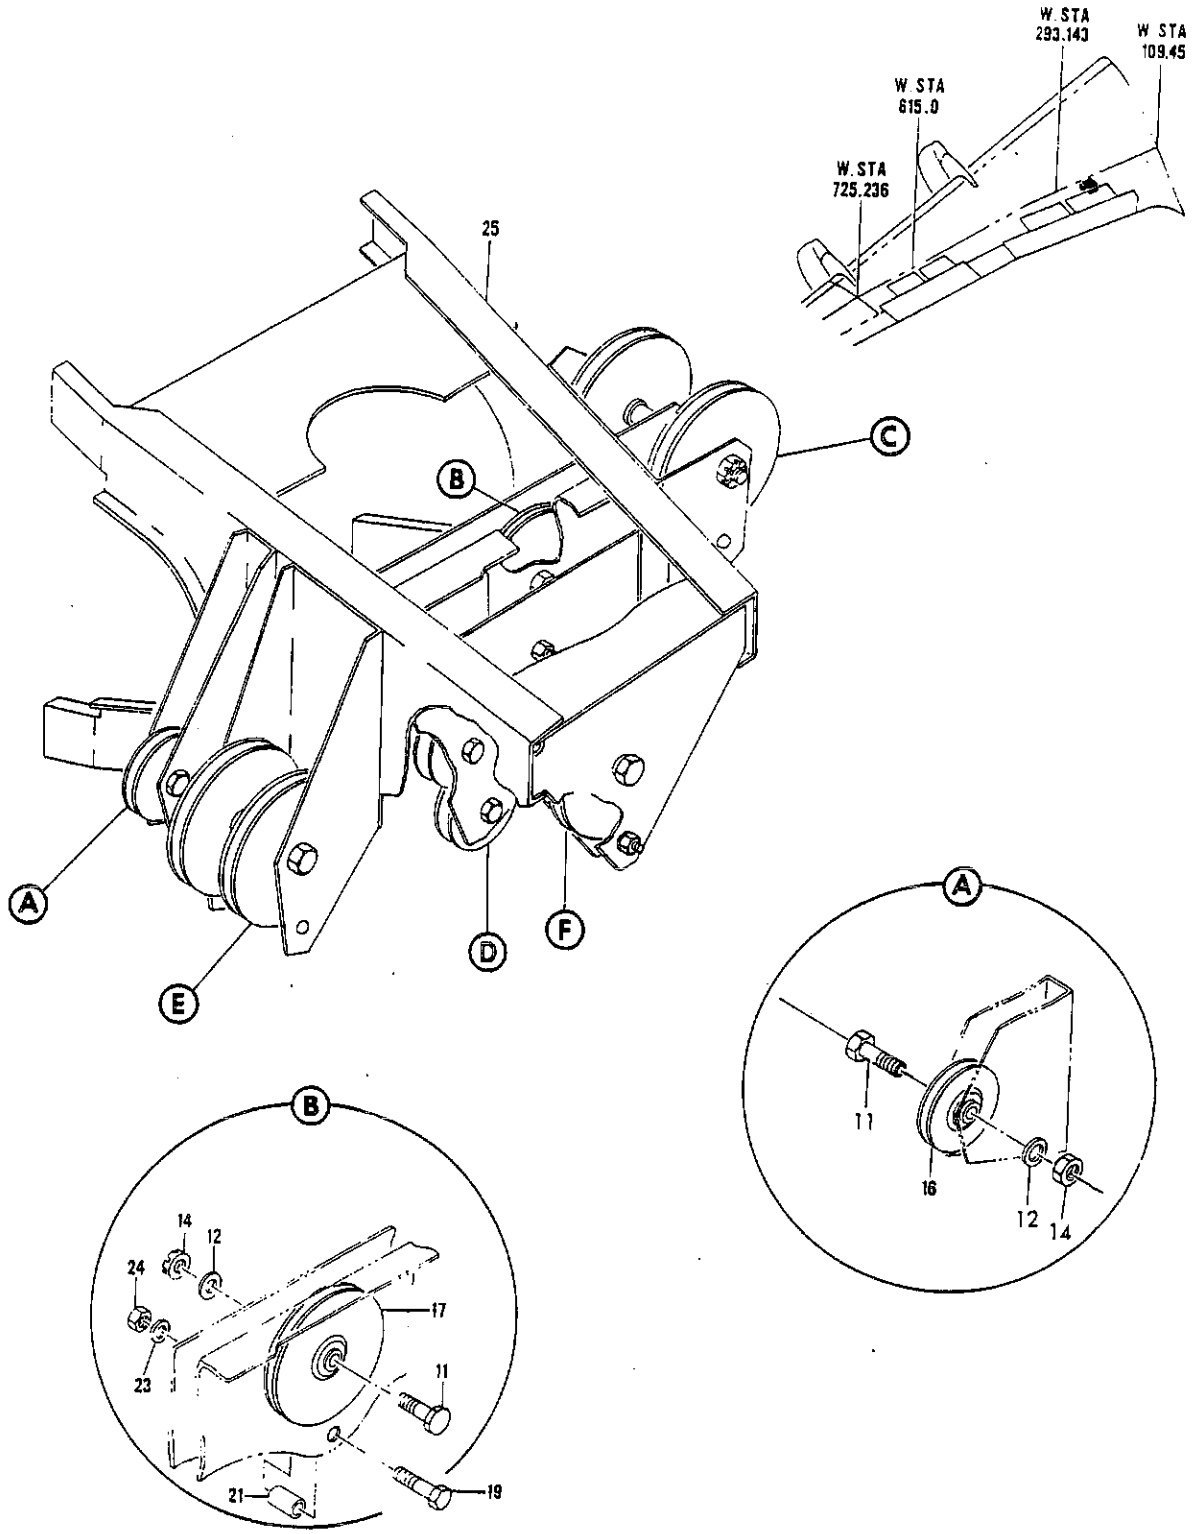


FIGURE 10. BRACKET INSTL, WING STATION 248 AILERON AND SPEED BRAKE (SHEET 1)

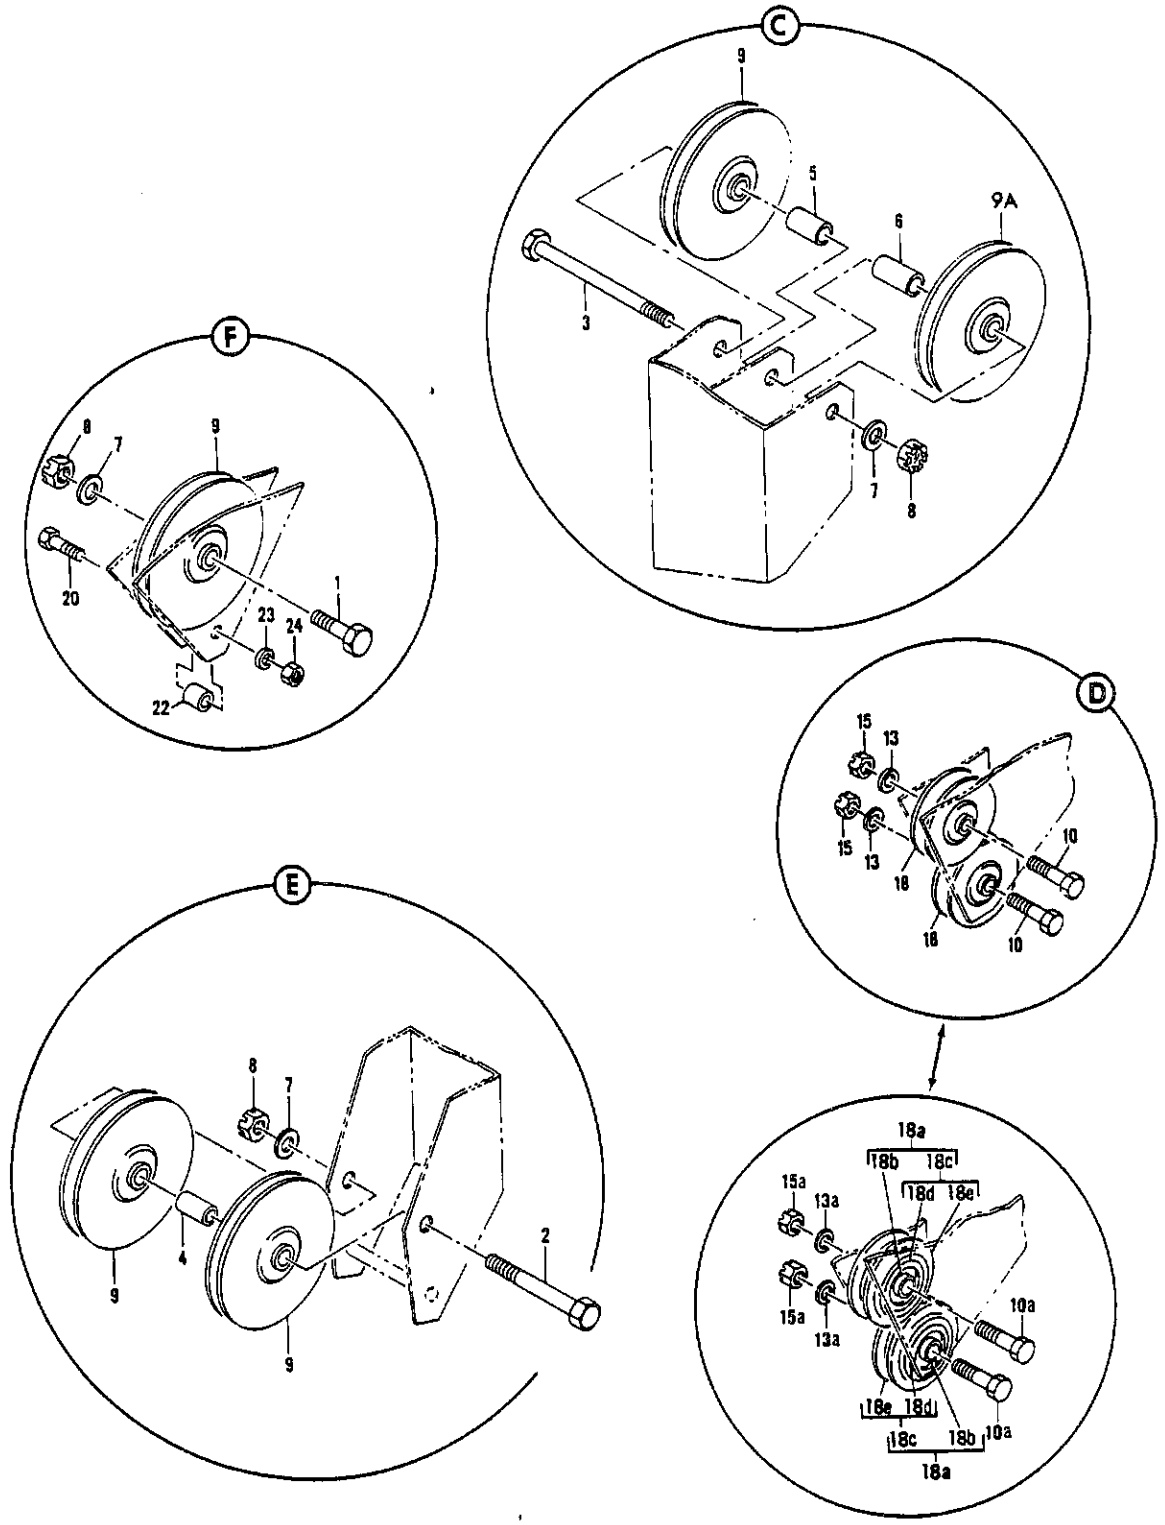


FIGURE 10. BRACKET INSTL, WING STATION 248 AILERON AND SPEED BRAKE (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	10	65-7050-1	BRACKET INSTL, WING STATION 248 AILERON AND SPEED BRAKE (LH) (SEE FIG. 7, ITEM 3)	0150	RF
R		65-7050-2	BRACKET INSTL, WING STATION 248 AILERON AND SPEED BRAKE (RH) (SEE FIG. 7, ITEM 3)	0150	RF
R	1	NAS1105-12DW	. BOLT	0150	1
R	2	NAS1105-34DW	. BOLT	0150	1
R	3	NAS1105-49DW	. BOLT	0150	1
R	4	NAS43DD5-48	. SPACER	0150	1
R	5	NAS43DD5-49	. SPACER	0150	1
R	6	NAS43DD5-56	. SPACER	0150	1
R	7	AN960D516	. WASHER	0150	3
R	8	AN320-5	. NUT	0150	3
R	9	MS20220-2	. PULLEY	0150	4
R	10A	NAS1104-12DW	. BOLT	0150	2
R	11	NAS1104-9DW	. BOLT	0150	2
R	12	AN960D416	. WASHER	0150	2
R	13A	AN960D416	. WASHER	0150	2
R	14	AN320-4	. NUT	0150	2
R	15A	AN320-4	. NUT	0150	2
R	16	MS20219-2	. PULLEY	0150	1
R	17	MS20219-4	. PULLEY	0150	1
R	18A	69-18330-3	. PULLEY ASSY, 1/8 AND 3/16 IN. DIAMETER CABLE IDLER	0150	2
R	18B	BACB10A581	. . BEARING	0150	1
R	18C	69-18329-1	. . SHEAVE ASSY, IDLER PULLEY	0150	1
R	18D	66-14882-1	. . . BUSHING	0150	1
R	18E	69-18329-3	. . . SHEAVE	0150	1
R	19	NAS1303-8W	. BOLT	0150	1
R	20	NAS1303-12W	. BOLT	0150	1
R	21	NAS42DD6-28	. SPACER	0150	1
R	22	NAS42DD6-40	. SPACER	0150	1
R	23	AN960D10	. WASHER	0150	2
R	24	NAS679A3W	. NUT	0150	2
R	25	65-7050-5	. BRACKET ASSY, WING STATION 248 AILERON AND SPEED BRAKE (LH ONLY)	0150	1
R	25	65-7050-6	. BRACKET ASSY, WING STATION 248 AILERON AND SPEED BRAKE (RH ONLY)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

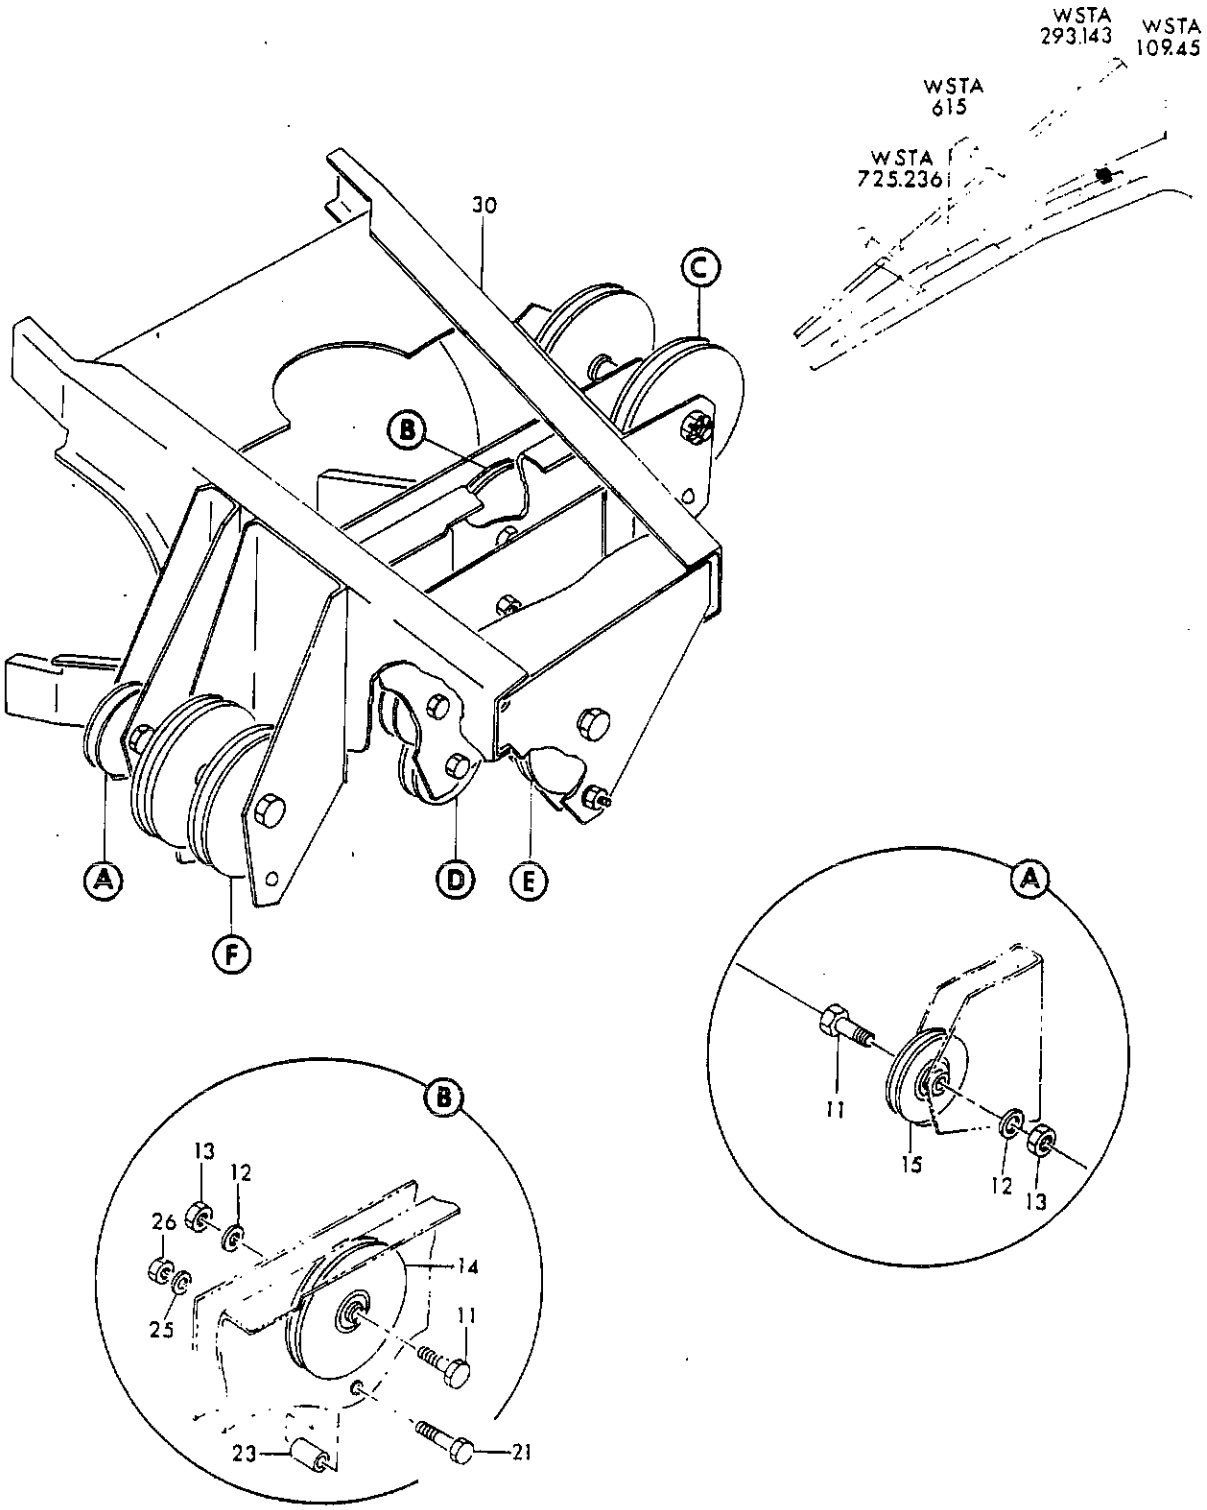


FIGURE 10A. BRACKET INSTL, WING STATION 248 AILERON AND SPEED BRAKE (SHEET 1)

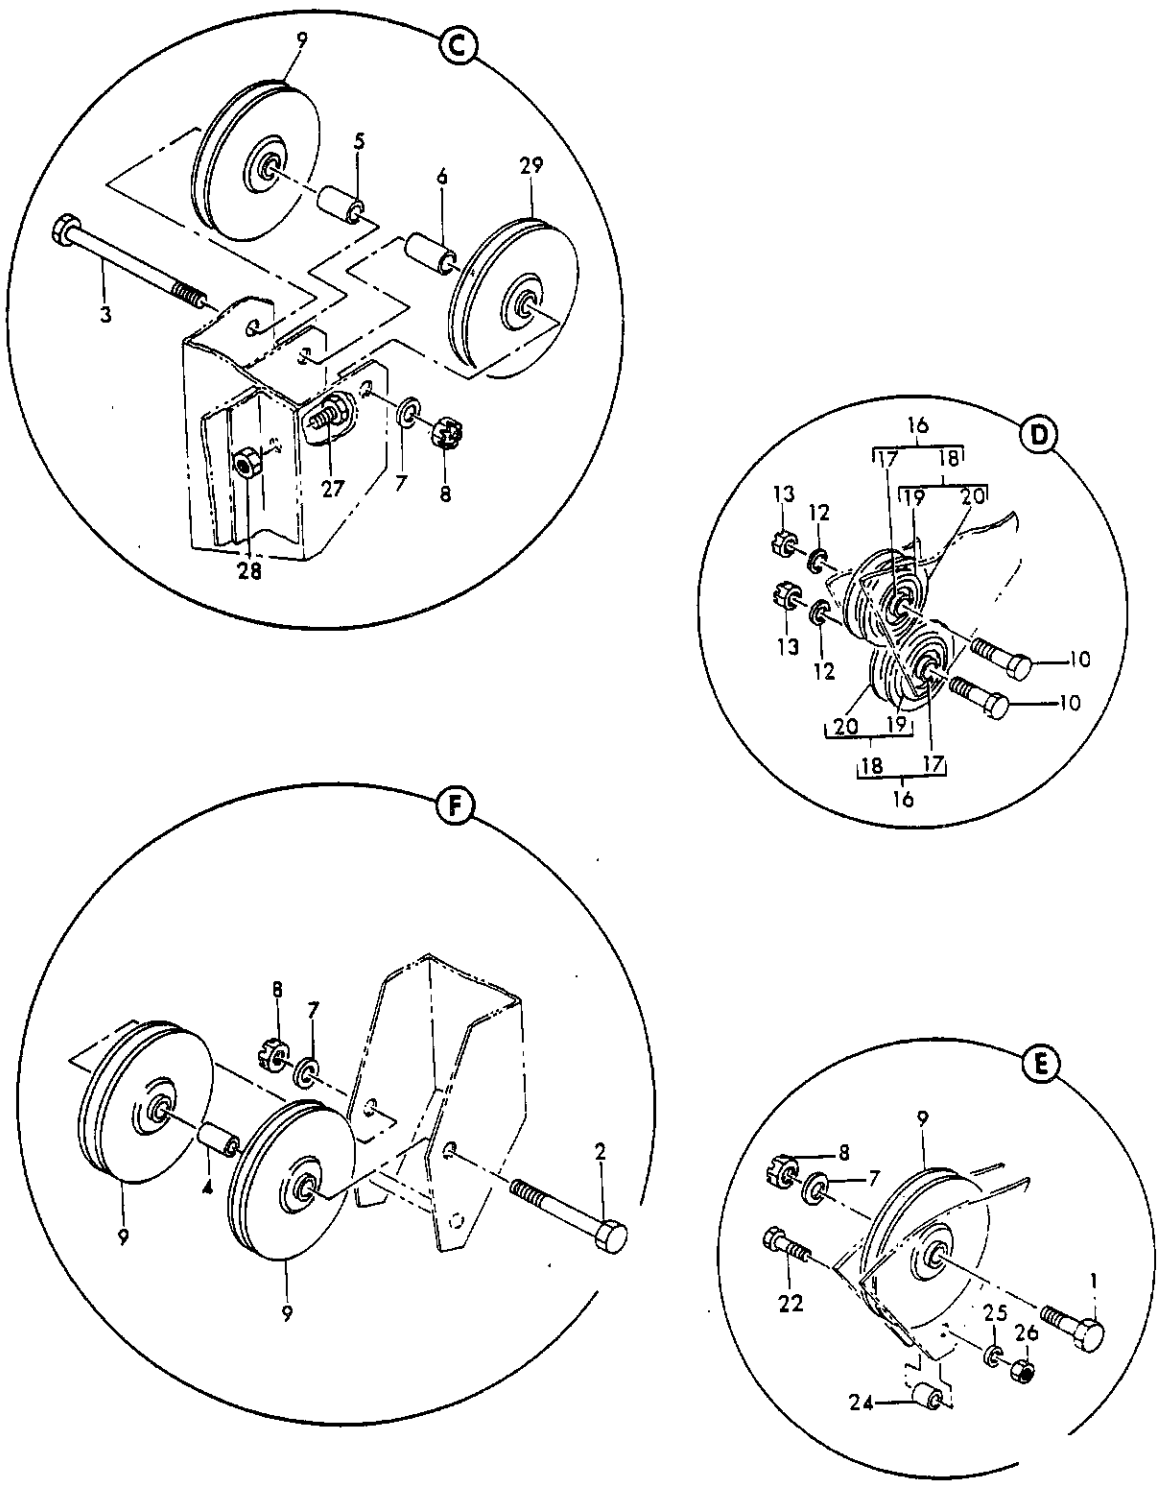


FIGURE 10A. BRACKET INSTL, WING STATION 248 AILERON AND SPEED BRAKE (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
10A	65-7050-7	BRACKET INSTL, WING STATION 248 AILERON AND SPEED BRAKE (LH) (SEE FIG. 7, ITEM 3)	5199	RF
	65-7050-8	BRACKET INSTL, WING STATION 248 AILERON AND SPEED BRAKE (RH) (SEE FIG. 7, ITEM 3)	5199	RF
1	NAS1105-12DW	. BOLT.	5199	1
2	NAS1105-34DW	. BOLT.	5199	1
3	NAS1105-49DW	. BOLT.	5199	1
4	NAS43DD5-48	. SPACER.	5199	1
5	NAS43DD5-49	. SPACER.	5199	1
6	NAS43DD5-56	. SPACER.	5199	1
7	AN960D516	. WASHER.	5199	3
8	AN320-5	. NUT	5199	3
9	MS20220-2	. PULLEY.	5199	4
10	NAS1104-12DW	. BOLT.	5199	2
11	NAS1104-9DW	. BOLT.	5199	2
12	AN960D416	. WASHER.	5199	4
13	AN320-4	. NUT	5199	4
14	MS20219-4	. PULLEY.	5199	1
15	MS20219-2	. PULLEY.	5199	1
16	69-18330-3	. PULLEY ASSY, 1/8 AND 3/16 IN. DIAMETER CABLE IDLER.	5199	2
17	BACB10A581	. . BEARING, (USED ON 69-18330-3)	5199	1
18	69-18329-1	. . SHEAVE ASSY	5199	1
19	69-14882-1	. . . BUSHING	5199	1
20	69-18329-3	. . . SHEAVE.	5199	1
21	NAS1303-8W	. BOLT.	5199	1
22	NAS1303-12W	. BOLT.	5199	1
23	NAS42DD6-28	. SPACER.	5199	1
24	NAS42DD6-40	. SPACER.	5199	1
25	AN960D10	. WASHER.	5199	2
26	NAS679A3W	. NUT	5199	2
27	NAS1103-3	. BOLT.	5199	1
28	NAS679A3W	. NUT	5199	1
29	1967-24-505	. PULLEY, (V12210).	5199	1
30	65-7050-5	. BRACKET ASSY, (LH ONLY)	5199	1
30	65-7050-6	. BRACKET ASSY, (RH ONLY)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

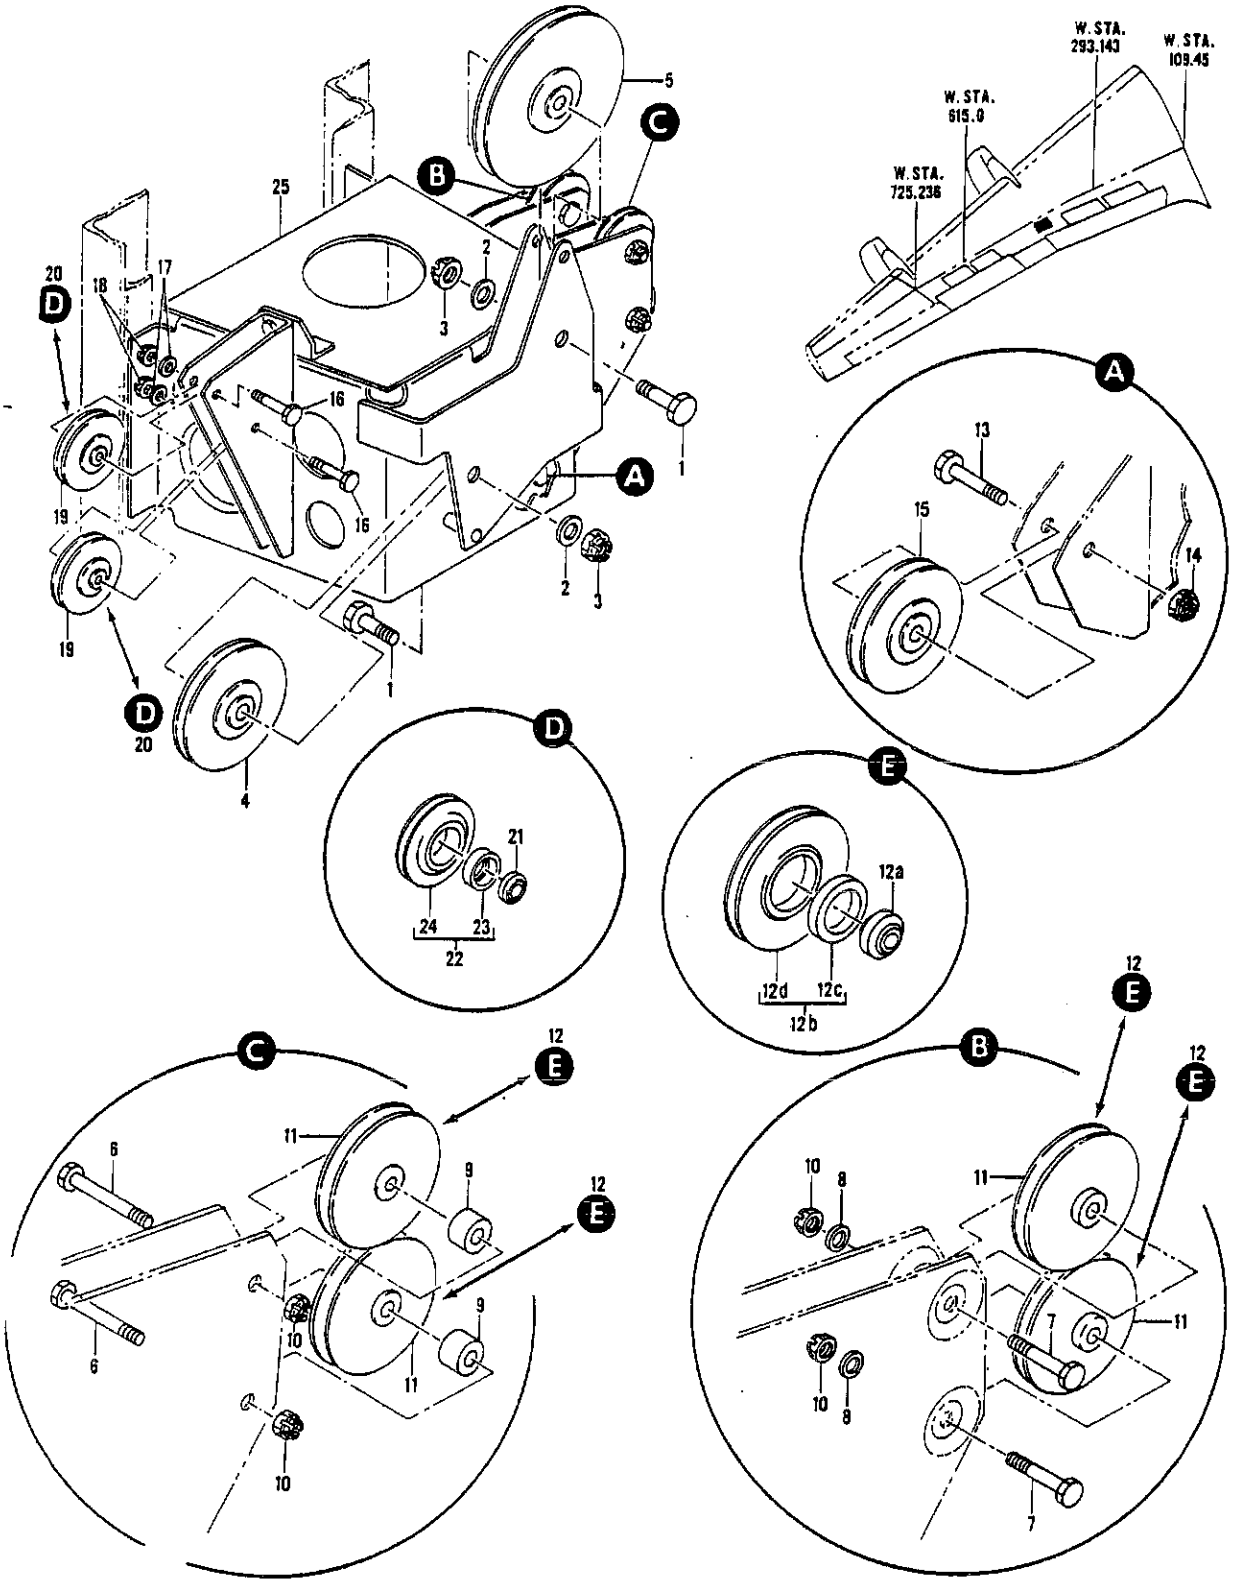


FIGURE 11. BRACKET INSTL, WING STATION 315 AILERON BUS AND CONTROL

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	11	65-6875-1	BRACKET INSTL, WING STATION 315 AILERON BUS AND CONTROL	0150	RF
R			(LH) (SEE FIG. 7, ITEM 4)		
R		65-6875-2	BRACKET INSTL, WING STATION 315 AILERON BUS AND CONTROL	0150	RF
R			(RH) (SEE FIG. 7, ITEM 4)		
R	1	NAS1105-12D	. BOLT.	0150	2
R	2	AN960D516	. WASHER.	0150	2
R	3	AN320-5	. NUT	0150	2
R	4	MS20220-2	. PULLEY.	0150	1
R	5	MS20220-3	. PULLEY.	0150	1
R	6	NAS1104-13D	. BOLT.	0150	2
R	7	NAS1104-9D	. BOLT.	0150	2
R	8	AN960D416	. WASHER.	0150	2
R	9	NAS43DD4-18	. SPACER.	0150	2
R	10	AN320-4	. NUT	0150	4
R	12	69-18497-2	. PULLEY ASSY, 3/32 IN. DIAMETER CABLE IDLER.	0150	4
R	12A	BACB10A102	. . BEARING	0150	1
R	12B	69-18634-2	. . SHEAVE ASSY, IDLER PULLEY	0150	1
R	12C	66-14882-4	. . . BUSHING	0150	1
R	12D	69-18634-4	. . . SHEAVE, IDLER PULLEY.	0150	1
R	13	NAS1105-13D	. BOLT.	0150	1
R	14	AN320-5	. NUT	0150	1
R	15	MS20220-1	. PULLEY.	0150	1
R	16	NAS1104-12D	. BOLT.	0150	2
R	17	AN960D416	. WASHER.	0150	2
R	18	AN320-4	. NUT	0150	2
R	20	69-18330-3	. PULLEY ASSY, 1/8 AND 3/16 IN. DIA CABLE IDLER	0150	2
R	21	BACB10A581	. . BEARING, (USED ON 69-18330-3)	0150	1
R	22	69-18329-1	. . SHEAVE ASSY, IDLER PULLEY	0150	1
R	23	66-14882-1	. . . BUSHING	0150	1
R	24	69-18329-3	. . . SHEAVE, IDLER PULLEY.	0150	1
R	25	65-6875-5	. BRACKET ASSY, WING STATION 315 AILERON BUS AND.	0150	1
R			CONTROL (LH ONLY)		
R	25	65-6875-6	. BRACKET ASSY, WING STATION 315 AILERON BUS AND.	0150	1
R			CONTROL (RH ONLY)		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

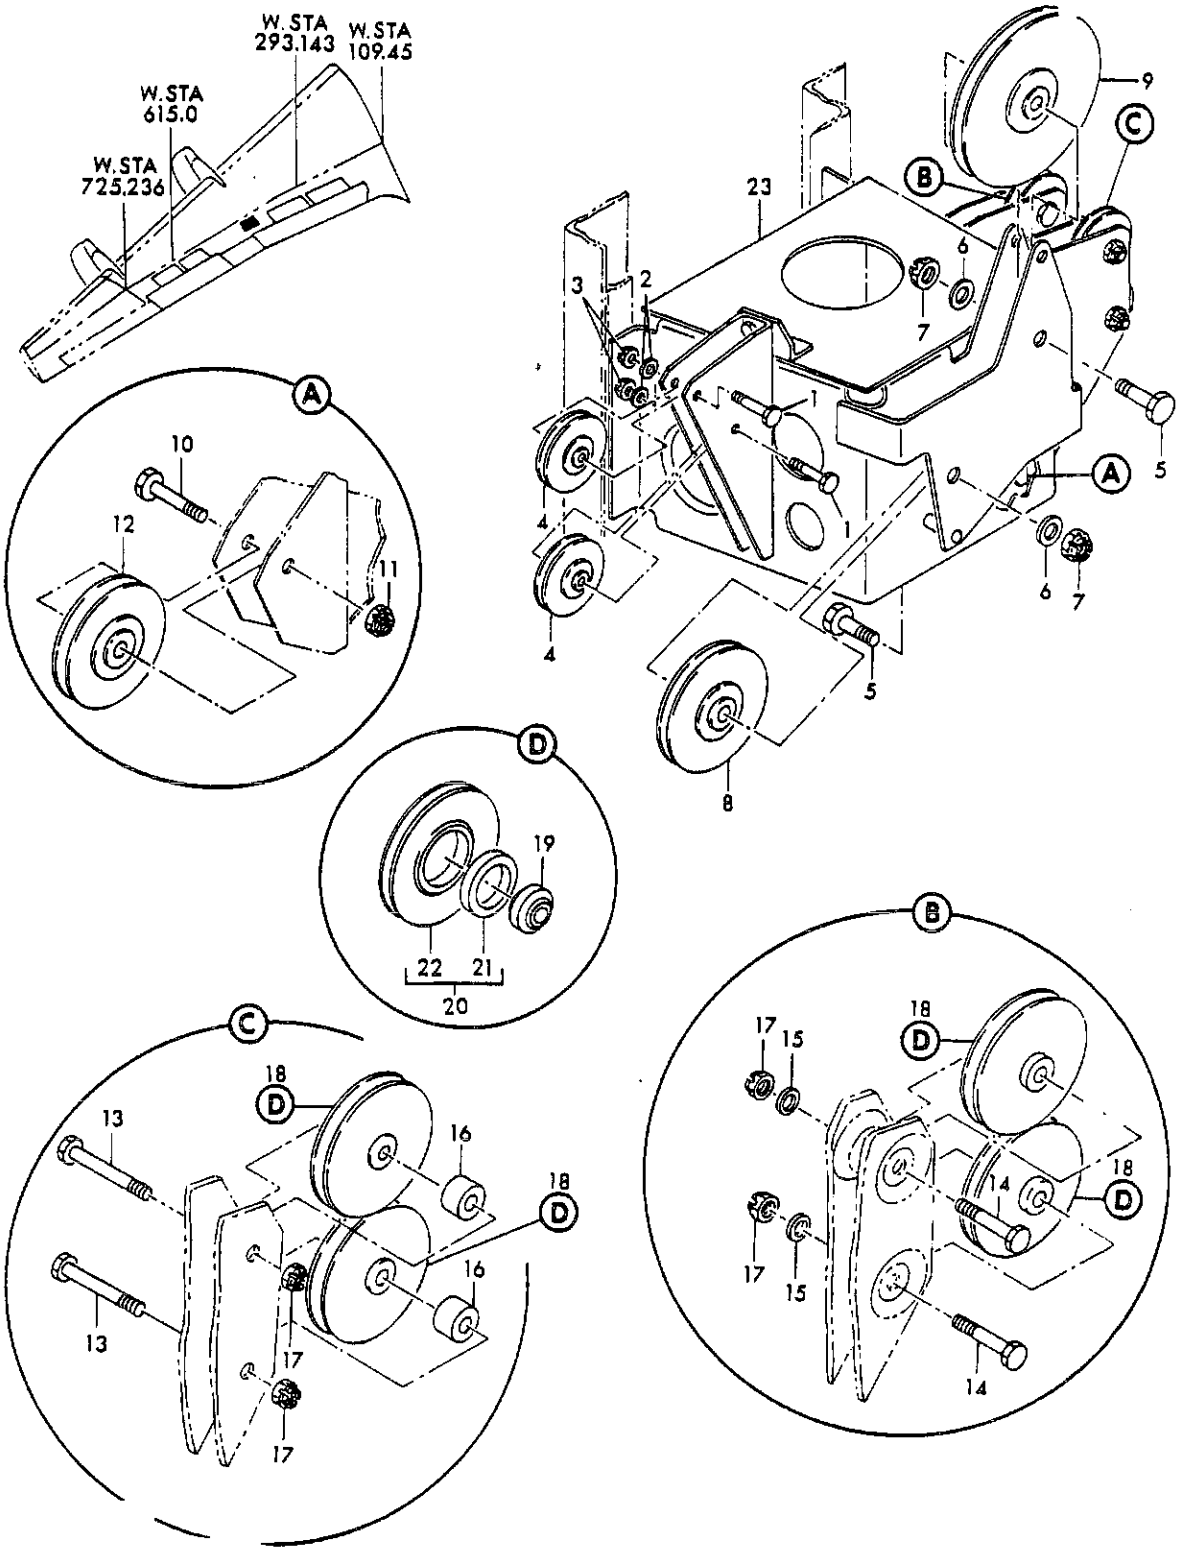


FIGURE 11A. BRACKET INSTL, WING STATION 315 AILERON BUS AND CONTROL

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
11A	65-6875-7	BRACKET INSTL, WING STATION 315 AILERON BUS AND CONTROL (LH) (SEE FIG. 7, ITEM 4)	5199	RF
	65-6875-8	BRACKET INSTL, WING STATION 315 AILERON BUS AND CONTROL (RH) (SEE FIG. 7, ITEM 4)	5199	RF
1	NAS1104-12D	. BOLT	5199	2
2	AN960D416	. WASHER	5199	2
3	AN320-4	. NUT	5199	2
4	1967-24	. PULLEY, (V29965)	5199	2
5	NAS1105-12D	. BOLT	5199	2
6	AN960D516	. WASHER	5199	2
7	AN320-5	. NUT	5199	2
8	MS20220-2	. PULLEY	5199	1
9	1967-24-503	. PULLEY, (V12210)	5199	1
10	NAS1105-13D	. BOLT	5199	1
11	AN320-5	. NUT	5199	1
12	MS20220-1	. PULLEY	5199	1
13	NAS1104-13D	. BOLT	5199	2
14	NAS1104-9D	. BOLT	5199	2
15	AN960D416	. WASHER	5199	2
16	NAS43DD4-18	. SPACER	5199	2
17	AN320-4	. NUT	5199	4
18	69-18497-2	. PULLEY ASSY, 3/32 IN. DIA CABLE IDLER	5199	4
19	BACB10A102	. . BEARING	5199	1
20	69-18634-2	. . SHEAVE ASSY	5199	1
21	66-14882-4	. . . BUSHING	5199	1
22	69-18634-4	. . . SHEAVE	5199	1
23	65-6875-5	. BRACKET ASSY, (LH ONLY)	5199	1
23	65-6875-6	. BRACKET ASSY, (RH ONLY)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

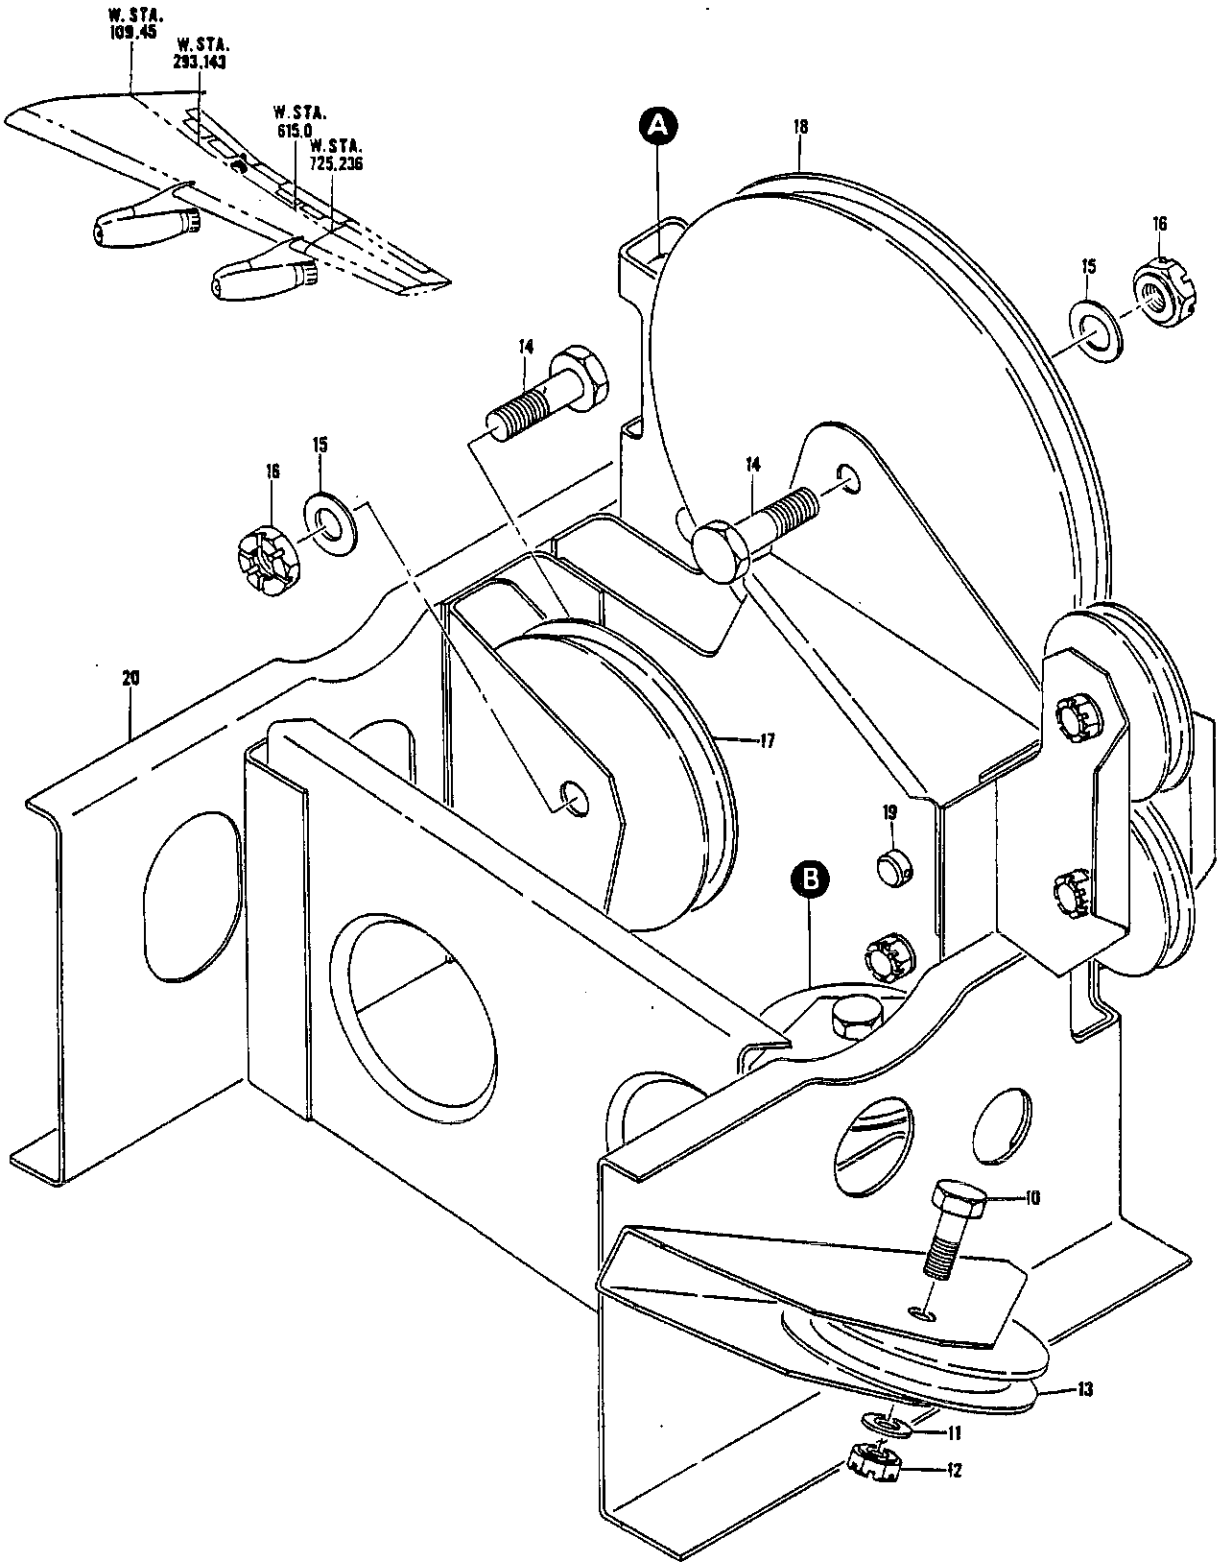


FIGURE 12. BRACKET INSTL, WING STATION 387 AILERON BUS (SHEET 1)

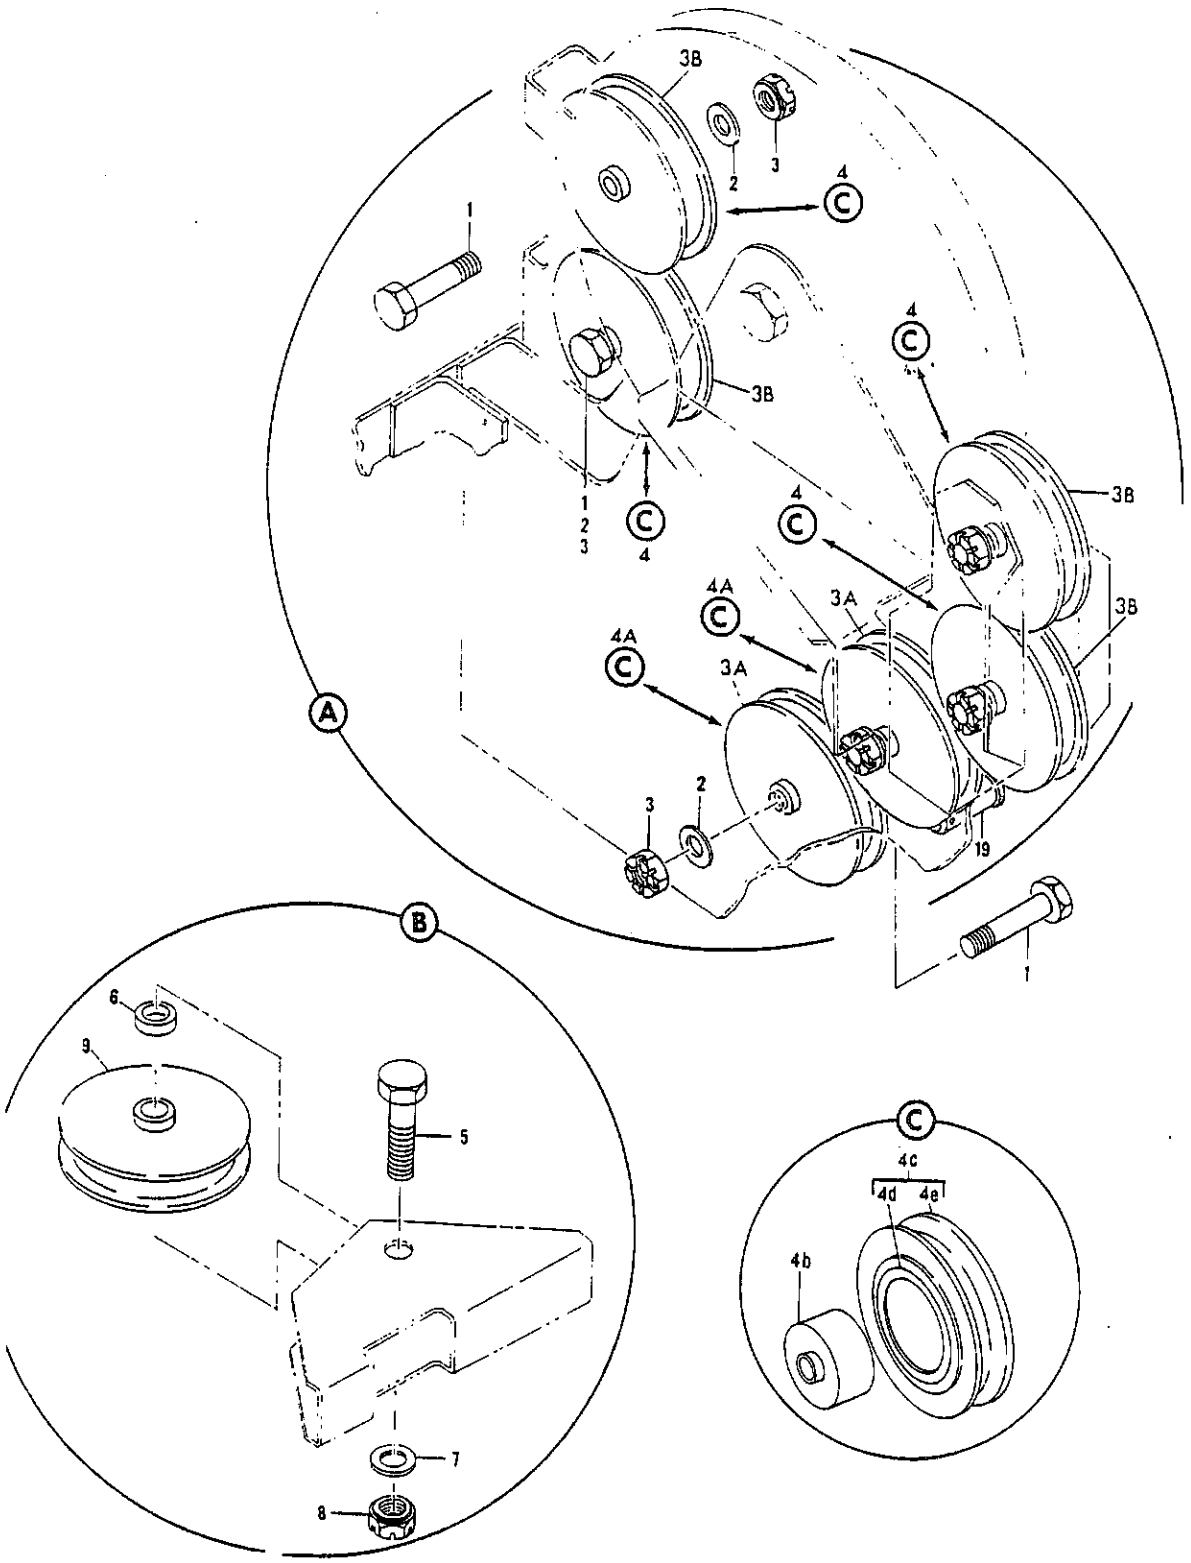


FIGURE 12. BRACKET INSTL, WING STATION 387 AILERON BUS (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	12	65-7444-1	BRACKET INSTL, WING STATION 387 AILERON AND AILERON BUS (LH) (SEE FIG. 7, ITEM 5)	0150	RF
R		65-7444-2	BRACKET INSTL, WING STATION 387 AILERON AND AILERON BUS (RH) (SEE FIG. 7, ITEM 5)	0150	RF
R		65-7444-13	BRACKET INSTL, WING STATION 387 AILERON AND AILERON BUS (LH) (SEE FIG. 7, ITEM 5)	5199	RF
R		65-7444-14	BRACKET INSTL, WING STATION 387 AILERON AND AILERON BUS (RH) (SEE FIG. 7, ITEM 5)	5199	RF
	1	NAS1104-12DW	. BOLT.		6
	2	AN960D416	. WASHER.		6
	3	AN320-4	. NUT		6
	4A	69-18330-3	. PULLEY ASSY, 1/8 AND 3/16 IN. DIAMETER CABLE IDLER.		2
	4B	BACB10A581	. . BEARING		1
	4C	69-18329-1	. . SHEAVE ASSY, IDLER PULLEY		1
	4D	66-14882-1	. . . BUSHING		1
	4E	69-18329-3	. . . SHEAVE.		1
	5	NAS1104-9DW	. BOLT.		1
	6	NAS43DD4-7	. SPACER.		1
	7	AN960D416	. WASHER.		1
	8	AN320-4	. NUT		1
R	9	MS20219-2	. PULLEY.	5199	1
	10	NAS1104-8DW	. BOLT.		1
	11	AN960D416	. WASHER.		1
	12	AN320-4	. NUT		1
R	13	MS20219-4	. PULLEY.	5199	1
	14	NAS1105-12DW	. BOLT.		2
	15	AN960D516	. WASHER.		2
	16	AN320-5	. NUT		2
R	17	MS20220-2	. PULLEY.	5199	1
R	18	MS20220-4	. PULLEY.	0150	1
R	18	1967-24-501	. PULLEY, (V12210).	5199	1
	19	MS20392-2C23	. PIN		2
	20	65-7444-11	. BRACKET ASSY, WING STATION 387 AILERON AND AILERON BUS (LH ONLY)		1
	20	65-7444-12	. BRACKET ASSY, WING STATION 387 AILERON AND AILERON BUS (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

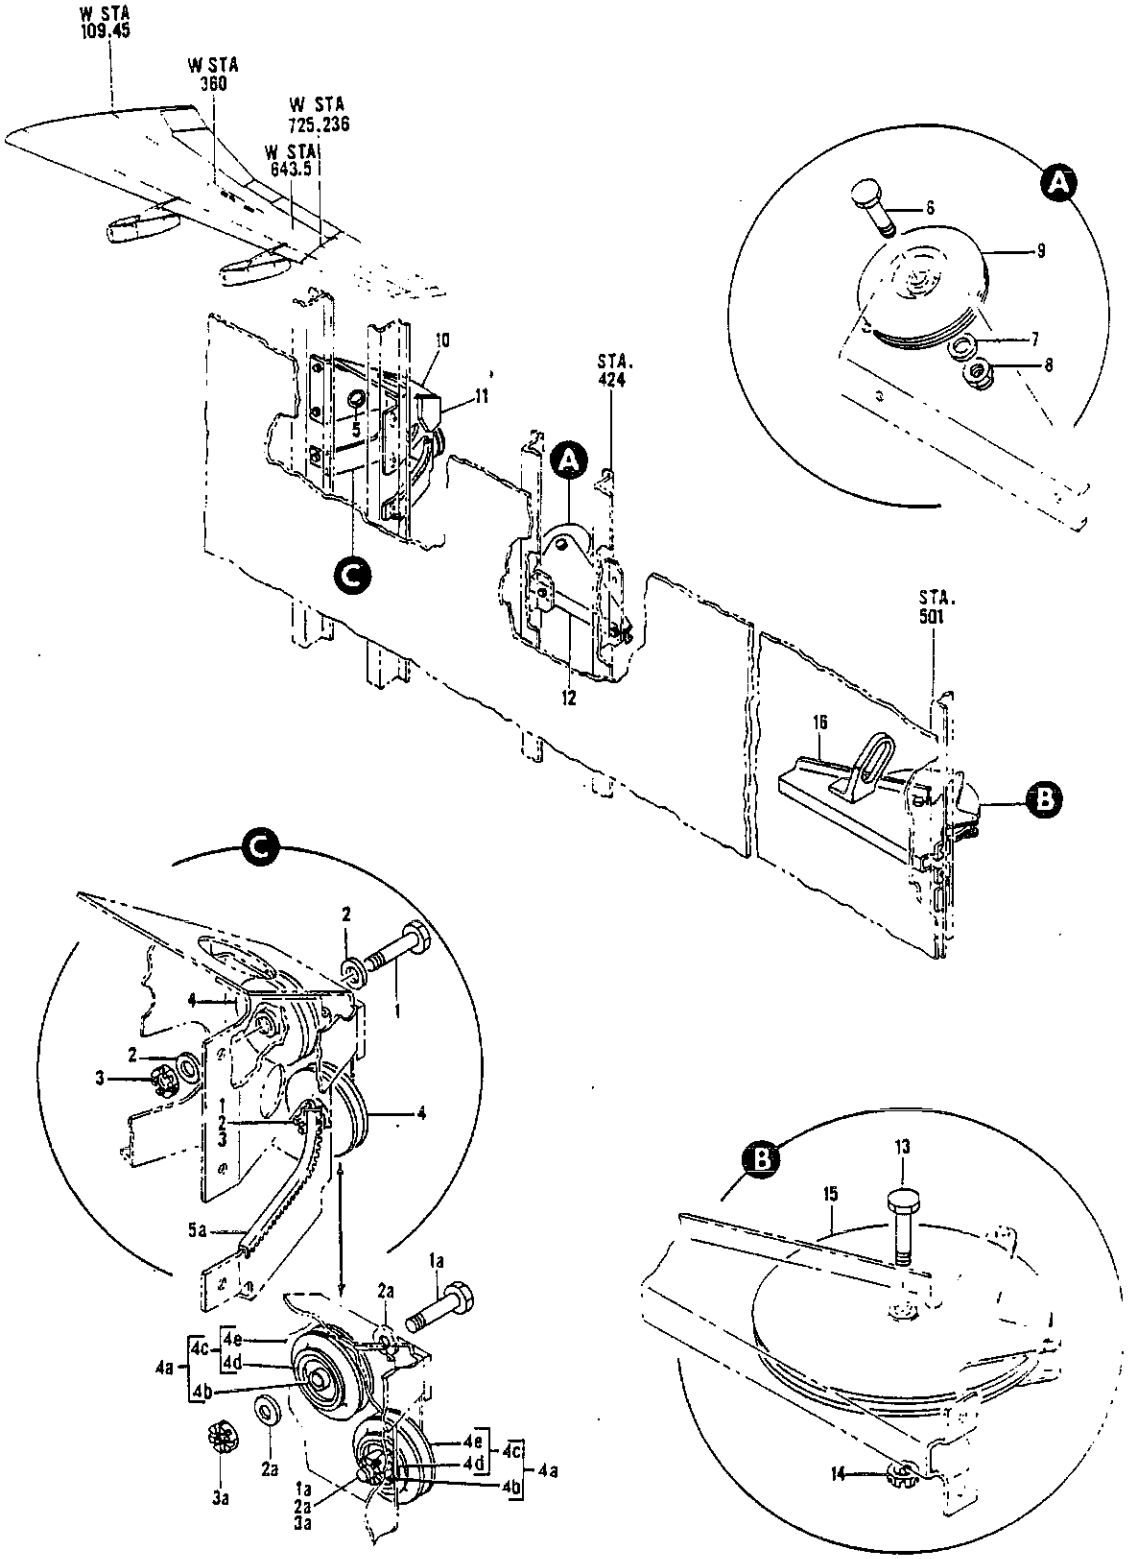


FIGURE 13. BRACKET INSTL, WING STATIONS 405, 420 AND 501 AILERON CONTROL AND BUS

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
13		BRACKET INSTL, WING STATION 405, 420 AND 501 AILERON CONTROL AND BUS		
	65-6615-1	. BRACKET INSTL, WING STATIONS 405 AND 420 AILERON CONTROL AND BUS (LH) (SEE FIG. 7, ITEM 11)		RF
	65-6615-2	. BRACKET INSTL, WING STATIONS 405 AND 420 AILERON CONTROL AND BUS (RH) (SEE FIG. 7, ITEM 11)		RF
1A	NAS1104-12DW	. . BOLT		2
2A	AN960D416	. . WASHER		2
3A	AN320-4	. . NUT		2
4A	69-18330-3	. . PULLEY ASSY, 1/8 AND 3/16 IN. DIAMETER CABLE IDLER		2
4B	BACB10A581	. . . BEARING		1
4C	69-18329-1	. . . SHEAVE ASSY, IDLER PULLEY		1
4D	66-14882-1	. . . . BUSHING		1
4E	69-18329-3	. . . . SHEAVE		1
5	BACG20H3N	. . GROMMET		1
5A	BACG20ZA400	. . GROMMET		1
6	NAS1105-12DW	. . BOLT		1
7	AN960D516	. . WASHER		1
8	AN320-5	. . NUT		1
9	MS20220-2	. . PULLEY		1
10	65-6615-5	. . BRACKET ASSY, WING STATION 405 AILERON CONTROL AND BUS PULLEY (LH ONLY)		1
10	65-6615-6	. . BRACKET ASSY, WING STATION 405 AILERON CONTROL AND BUS PULLEY (RH ONLY)		1
		ATTACHING PARTS		
	BACB30HC6-2	. . BOLT, (USED WITH NAS1080-6) (OPTIONAL NAS1103-3 WITH AN960D10, NAS679A3W)		3
	NAS1103-3	. . BOLT, (USED WITH AN960D10 AND NAS679A3W). (OPTIONAL TO BACB30HC6-2 WITH NAS1080-6)		3
	AN960D10	. . WASHER, (USED WITH NAS1103-3)		3
	NAS679A3W	. . NUT, (USED WITH NAS1103-3)		3
	NAS1080-6	. . COLLAR, (USED WITH BACB30HC6-2)		3
		-------*-------		
11	66-4838-1	. . . STRIP, WING STATION 405 AILERON CONTROL BRACKET RUB		1
12	69-5355-1	. . BRACKET ASSY, WING STATION 420 AILERON BUS PULLEY		1
		ATTACHING PARTS		
	NAS1304-3	. . BOLT		2
	AN960D416	. . WASHER		2
		-------*-------		
	65-6694-1	. BRACKET INSTL, WING STATION 501 AILERON CONTROL (LH) (SEE FIG. 7, ITEM 12A)		RF
	65-6694-2	. BRACKET INSTL, WING STATION 501 AILERON CONTROL (RH) (SEE FIG. 7, ITEM 12A)		RF
13	NAS464P5-13	. . BOLT		1
14	AN320-5	. . NUT		1
15	BACP30F9	. . PULLEY		1
16	69-4238-1	. . BRACKET ASSY, WING STATION 501 AILERON CONTROL (LH ONLY)		1
16	69-4238-2	. . BRACKET ASSY, WING STATION 501 AILERON CONTROL (RH ONLY)		1
		ATTACHING PARTS		
	BACB30AL6-3	. . BOLT		2
	BACC30A6	. . COLLAR		2
	NAS679A3W	. . NUT		2
		------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

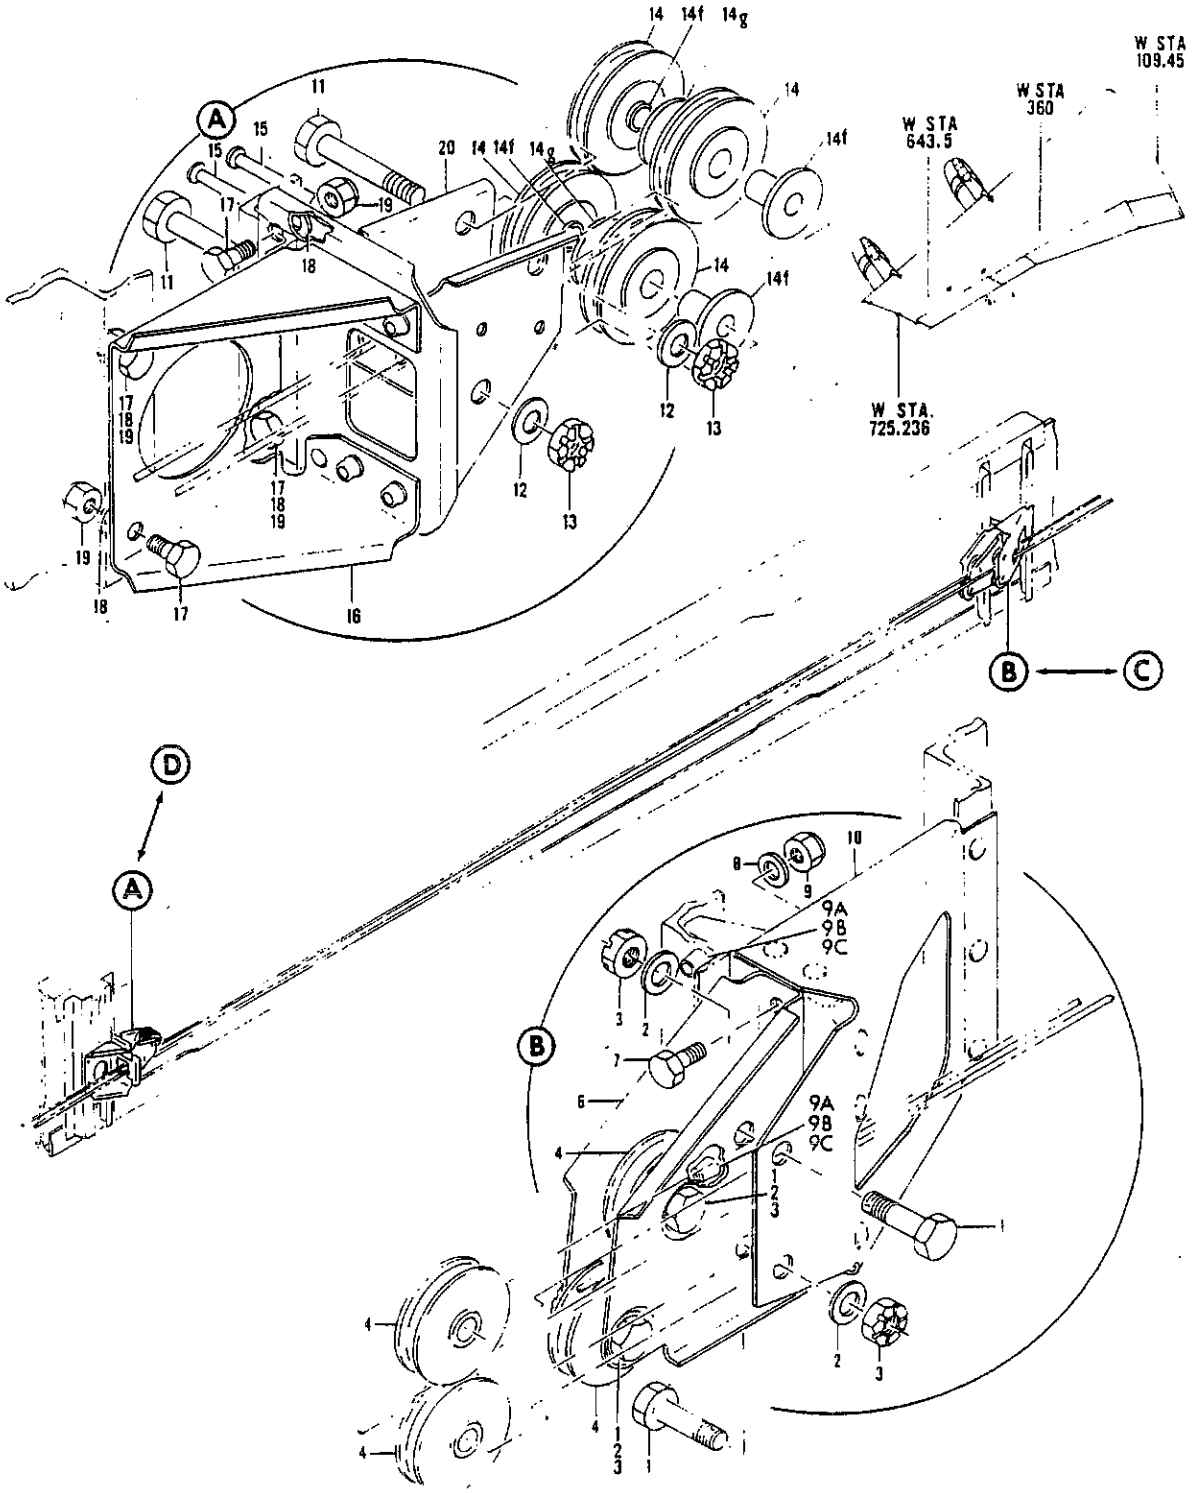


FIGURE 14. BRACKET INSTL, WING STATIONS 520 AND 620 AILERON BUS (SHEET 1)

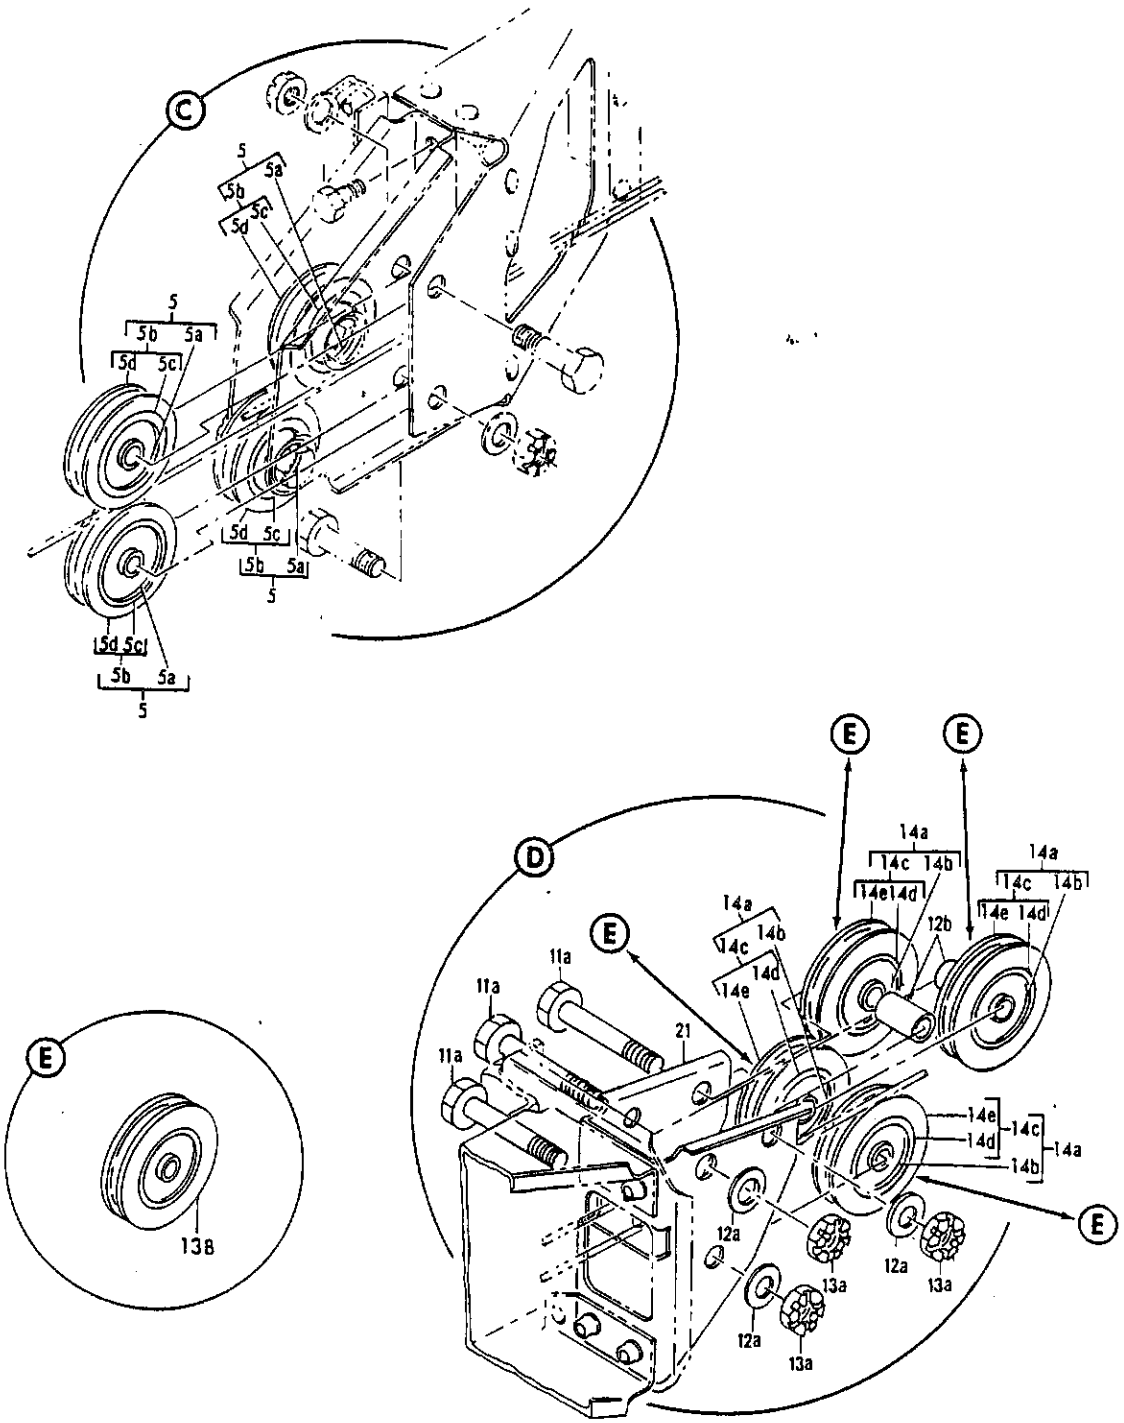
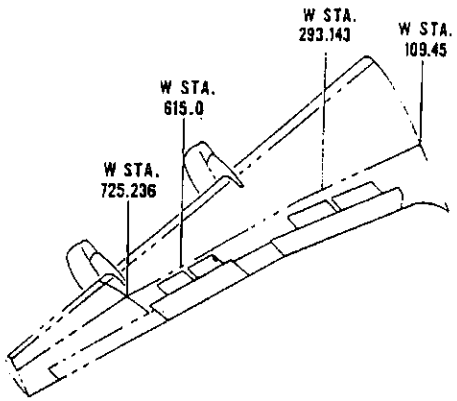


FIGURE 14 BRACKET INSTL, WING STATIONS 520 AND 620 AILERON BUS (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	14		BRACKET INSTL, WING STATION 520 AND 620 AILERON BUS . .		
R		50-1504-3001	. BRACKET INSTL, WING STATION 520 AILERON BUS (LH) (SEE FIG. 7, ITEM 13)	0150	RF
R		50-1504-3003	. BRACKET INSTL, WING STATION 520 AILERON BUS (LH) (SEE FIG. 7, ITEM 13)	5199	RF
R		50-1504-3002	. BRACKET INSTL, WING STATION 520 AILERON BUS (RH) (SEE FIG. 7, ITEM 13)	0150	RF
R		50-1504-3004	. BRACKET INSTL, WING STATION 520 AILERON BUS (RH) (SEE FIG. 7, ITEM 13)	5199	RF
	1	NAS1104-12D	. . BOLT.		4
	2	AN960D416	. . WASHER.		4
	3	AN320-4	. . NUT		4
R	4	1967-24	. . PULLEY, (V29965).	5199	4
R	5	69-18330-3	. . PULLEY ASSY, 1/8 AND 3/16 IN. DIAMETER CABLE IDLER	0150	4
R	5A	BACB10A581	. . . BEARING	0150	1
R	5B	69-18329-1	. . . SHEAVE ASSY, IDLER PULLEY	0150	1
R	5C	66-14882-1	. . . . BUSHING	0150	1
R	5D	69-18329-3	. . . . SHEAVE.	0150	1
	6	69-18906-5	. . BRACKET, WING STATION 520 AILERON BUS PULLEY (LH. ONLY)		1
	6	69-18906-6	. . BRACKET, WING STATION 520 AILERON BUS PULLEY (RH. ONLY)		1
			ATTACHING PARTS		
	7	NAS1304-1	. . BOLT.		2
	8	AN960D416L	. . WASHER.		2
	9	NAS679A4W	. . NUT		2
			-------*-------		
	9A	NAS1304-3	. . BOLT, (USED WITH AN960D416 AND NAS679A4W) (OPTIONAL BACB30GP6-2 WITH NAS1080D6)		2
	9A	BACB30GP6-2	. . BOLT, (USED WITH NAS1080D6) (OPTIONAL TO NAS1304-3 WITH AN960D416 AND NAS679A4W)		2
	9B	AN960D416	. . WASHER, (USED WITH NAS1304-3)		2
	9C	NAS679A4W	. . NUT, (USED WITH NAS1304-3).		2
	9C	NAS1080D6	. . COLLAR, (USED WITH BACB30GP6-2)		2
	10	69-18906-1	. . SUPPORT, WING STATION 520 AILERON BUS PULLEY. BRACKET (LH ONLY)		1
	10	69-18906-2	. . SUPPORT, WING STATION 520 AILERON BUS PULLEY. BRACKET (RH ONLY)		1
R		50-1505-3001	. BRACKET INSTL, WING STATION 620 AILERON BUS (LH) (SEE FIG. 7, ITEM 16)	0150	RF
R		50-1505-3003	. BRACKET INSTL, WING STATION 620 AILERON BUS (LH) (SEE FIG. 7, ITEM 16)	5199	RF
R		50-1505-3002	. BRACKET INSTL, WING STATION 620 AILERON BUS (RH) (SEE FIG. 7, ITEM 16)	0150	RF
R		50-1505-3004	. BRACKET INSTL, WING STATION 620 AILERON BUS (RH) (SEE FIG. 7, ITEM 16)	5199	RF
	11A	NAS1104-22DW	. . BOLT.		3
	12A	AN960D416	. . WASHER.		3
	12B	NAS43DD4-39	. . SPACER.		2
	13A	AN310-4	. . NUT		3
R	13B	1967-24	. . PULLEY, (V29965).	5199	4
R	14A	69-18330-3	. . PULLEY ASSY, 1/8 AND 3/16 IN. DIAMETER CABLE IDLER	0150	4
R	14B	BACB10A581	. . . BEARING	0150	1
R	14C	69-18329-1	. . . SHEAVE ASSY, IDLER PULLEY	0150	1
R	14D	66-14882-1	. . . . BUSHING	0150	1
R	14E	69-18329-3	. . . . SHEAVE.	0150	1
	16	90-1562-3001	. . BRACKET ASSY, WING STATION 619.62 AILERON BUS CABLE PULLEY SUPPORT		1
			ATTACHING PARTS		
	17	AN4-4A	. . BOLT.		4
	18	AN960D416	. . WASHER.		4
	19	NAS679A4W	. . NUT		4
			-------*-------		
	21	69-18939-1	. . BRACKET, WING STATION 619.62 AILERON BUS CABLE. PULLEY SUPPORT		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



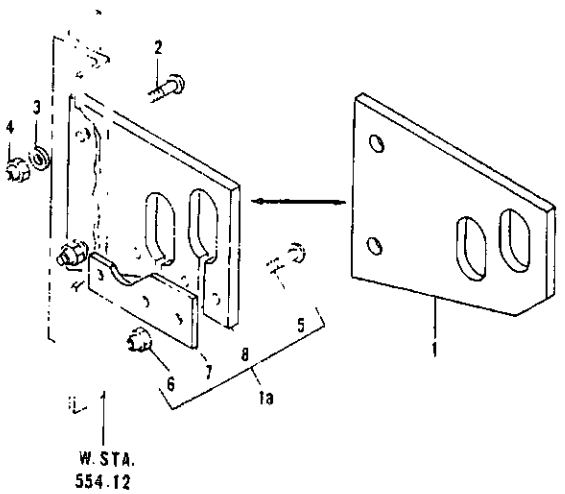


FIGURE 15. FAIRLEAD INSTL, WING TRAILING EDGE STATION 554.12 AILERON BUS CABLES

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
15	66-1796-1	FAIRLEAD INSTL, WING TRAILING EDGE STATION 554.12 . . . AILERON BUS CABLES (LH) (SEE FIG. 7, ITEM 35)		RF
	66-1796-2	FAIRLEAD INSTL, WING TRAILING EDGE STATION 554.12 . . . AILERON BUS CABLES (RH) (SEE FIG. 7, ITEM 35)		RF
1	66-1794	. FAIRLEAD, WING TRAILING EDGE STATION 554.12 AILERON . BUS CABLES (OPTIONAL 66-1794-1)		1
1A	66-1794-1	. FAIRLEAD ASSY, WING TRAILING EDGE STATION 554.12. . . AILERON BUS CABLES (OPTIONAL TO 66-1794)		1
		ATTACHING PARTS		
2	NAS221-11	. SCREW		2
3	AN960D10L	. WASHER.		2
4	NAS679A3W	. NUT		2
		--------*--------		
5	NAS220-8	. . SCREW		3
6	BACN10BY508	. . NUT		3
7	66-1794-3	. . STRAP, WING TRAILING EDGE STATION 554.12 AILERON. . BUS CABLES FAIRLEAD		1
8	66-1794-2	. . FAIRLEAD, WING TRAILING EDGE STATION 554.12 . . . . AILERON BUS CABLES		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

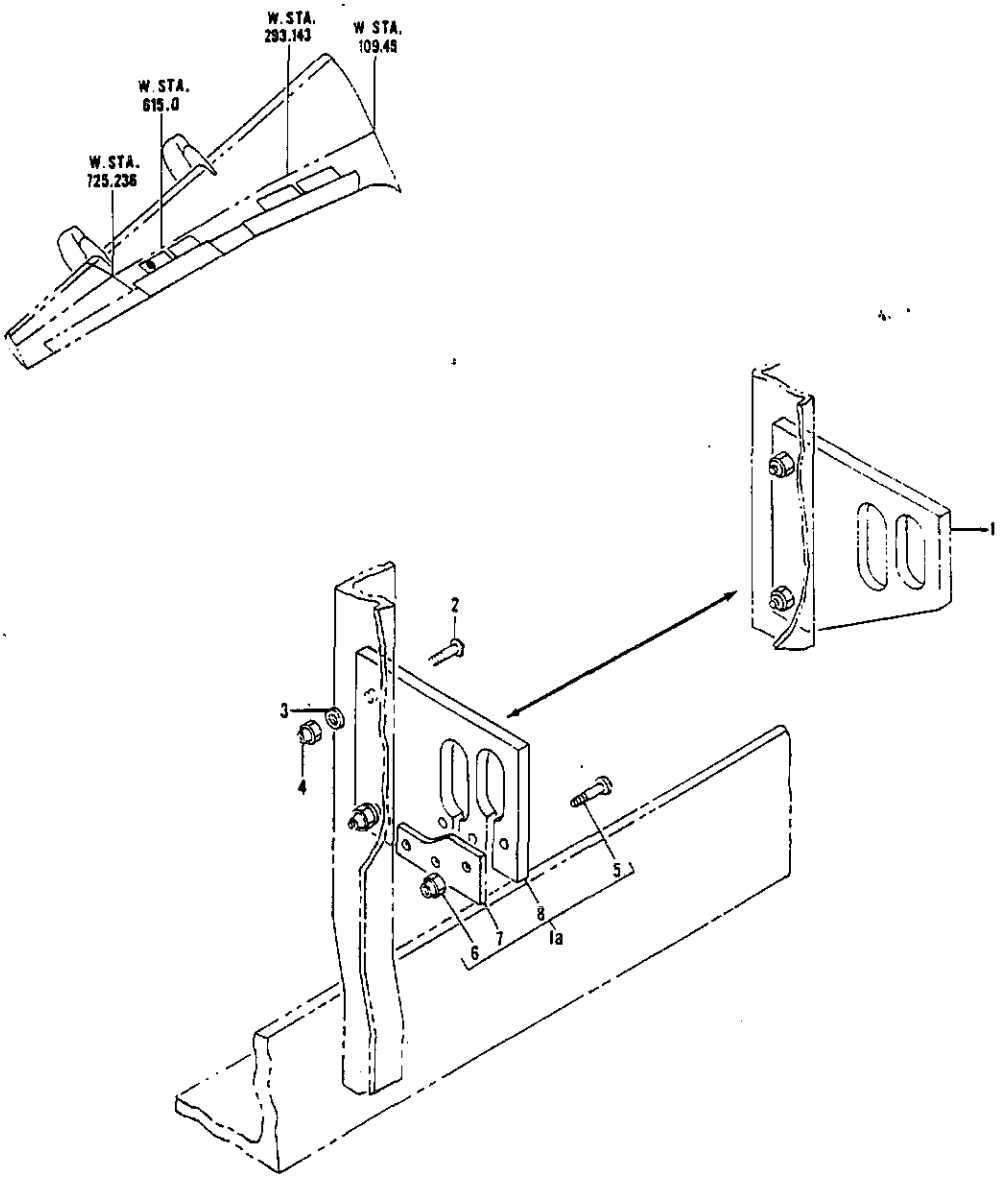


FIGURE 16. FAIRLEAD INSTL, WING TRAILING EDGE STATION 653.88 AND 658.62 AILERON BUS CABLES

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
16	69-17441-1	FAIRLEAD INSTL, WING STATION 653.88 AILERON BUS CABLES (LH) (SEE FIG. 7, ITEM 36)		RF
	69-17441-2	FAIRLEAD INSTL, WING STATION 653.88 AILERON BUS CABLES (RH) (SEE FIG. 7, ITEM 36)		RF
1	66-2411	. FAIRLEAD. . . . . (OPTIONAL 66-2411-1)		1
		ATTACHING PARTS		
	AN3-5A	. BOLT.		2
	AN960D10L	. WASHER.		2
	NAS679A3W	. NUT		2
		-------*-------		
1A	66-2411-1	. FAIRLEAD ASSY . . . . . (OPTIONAL TO 66-2411)		1
		ATTACHING PARTS		
2	NAS221-11	. SCREW		2
3	AN960D10L	. WASHER.		2
4	NAS679A3W	. NUT		2
		-------*-------		
5	NAS220-8	. . SCREW		3
6	BACN10BY508	. . NUT		3
7	66-2411-3	. . STRAP		1
8	66-2411-2	. . FAIRLEAD.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

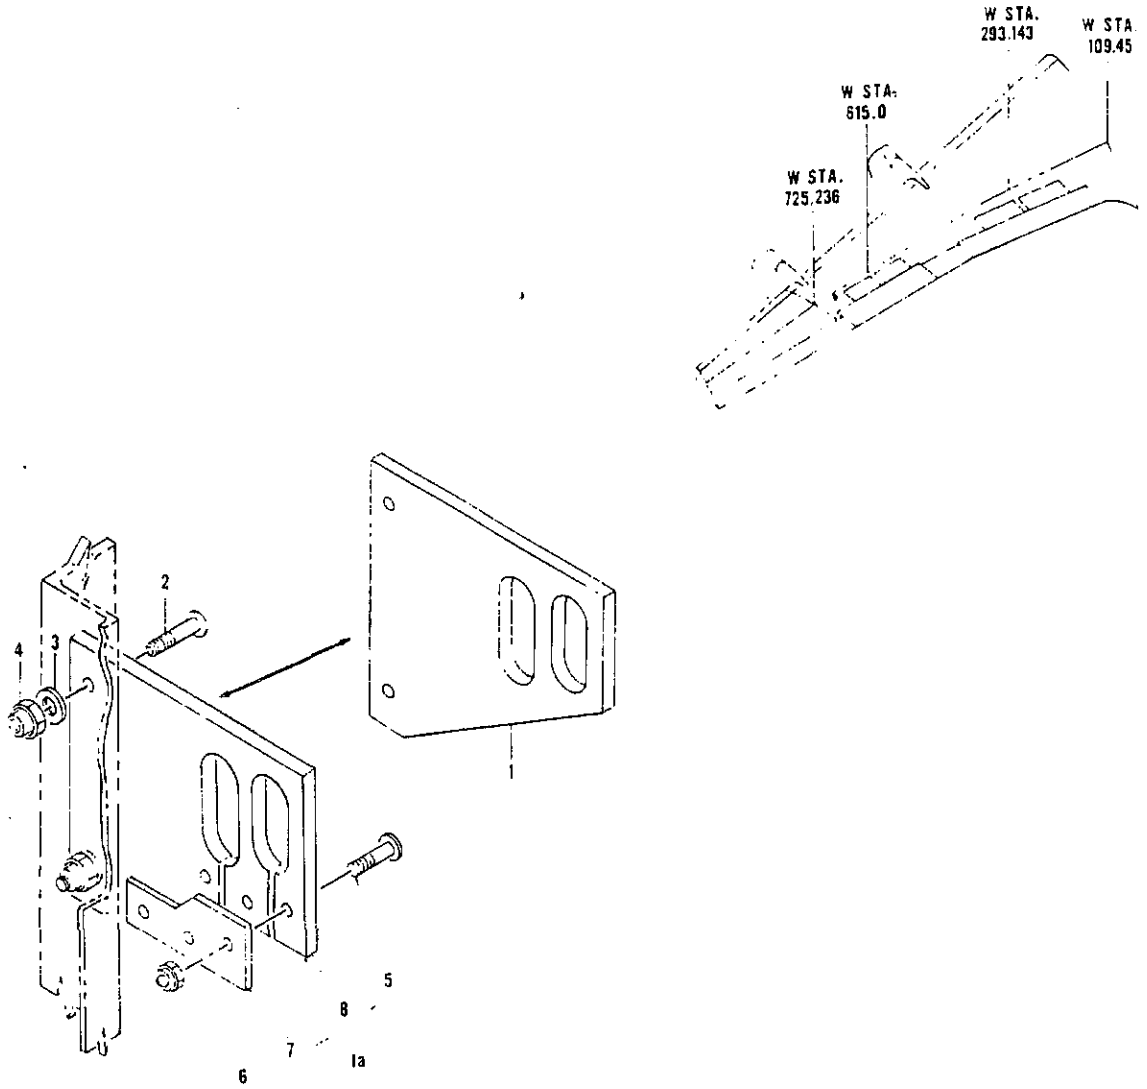


FIGURE 17. FAIRLEAD INSTL, WING TRAILING EDGE STATION 691.40 AILERON BUS CABLES

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
17	66-1798-1	FAIRLEAD INSTL, WING TRAILING EDGE STATION 691.40 . . . AILERON BUS CABLES (LH) (SEE FIG. 7, ITEM 37)		RF
	66-1798-2	FAIRLEAD INSTL, WING TRAILING EDGE STATION 691.40 . . . AILERON BUS CABLES (RH) (SEE FIG. 7, ITEM 37)		RF
1	66-1795	. FAIRLEAD, WING TRAILING EDGE STATION 691.40 AILERON . BUS CABLES (OPTIONAL 66-1795-1)		1
1A	66-1795-1	. FAIRLEAD ASSY, WING TRAILING EDGE STATION 691.40. . . AILERON BUS CABLES (OPTIONAL TO 66-1795)		1
		ATTACHING PARTS		
2	NAS220-11	. SCREW		2
3	AN960D10L	. WASHER.		2
4	NAS679A3W	. NUT		2
		-------*-------		
5	NAS220-8	. . SCREW		3
6	NAS679A3	. . NUT		3
7	66-1795-3	. . STRAP, WING TRAILING EDGE STATION 691.40 AILERON. . BUS CABLES FAIRLEAD		1
8	66-1795-2	. . FAIRLEAD, WING TRAILING EDGE STATION 691.40 AILERON BUS CABLES		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

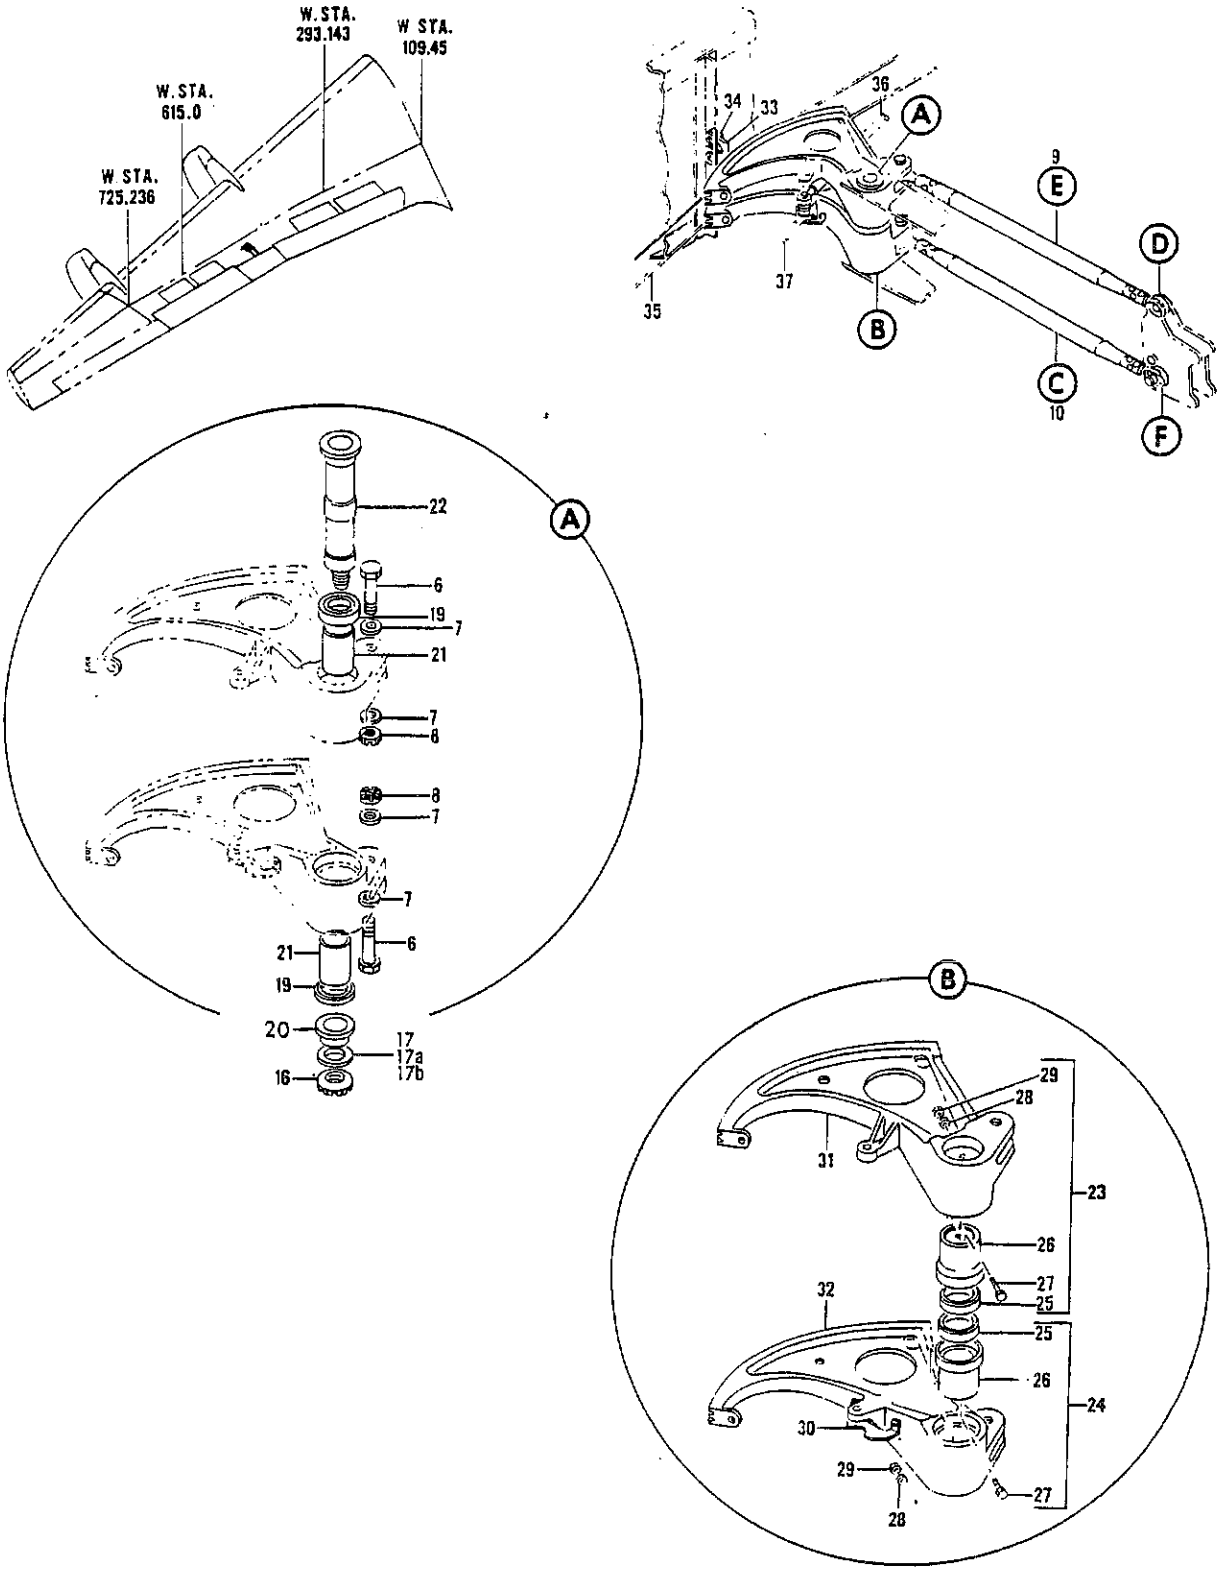


FIGURE 18. QUADRANT INSTL, INBOARD AILERON BUS AND CONTROL (SHEET 1)

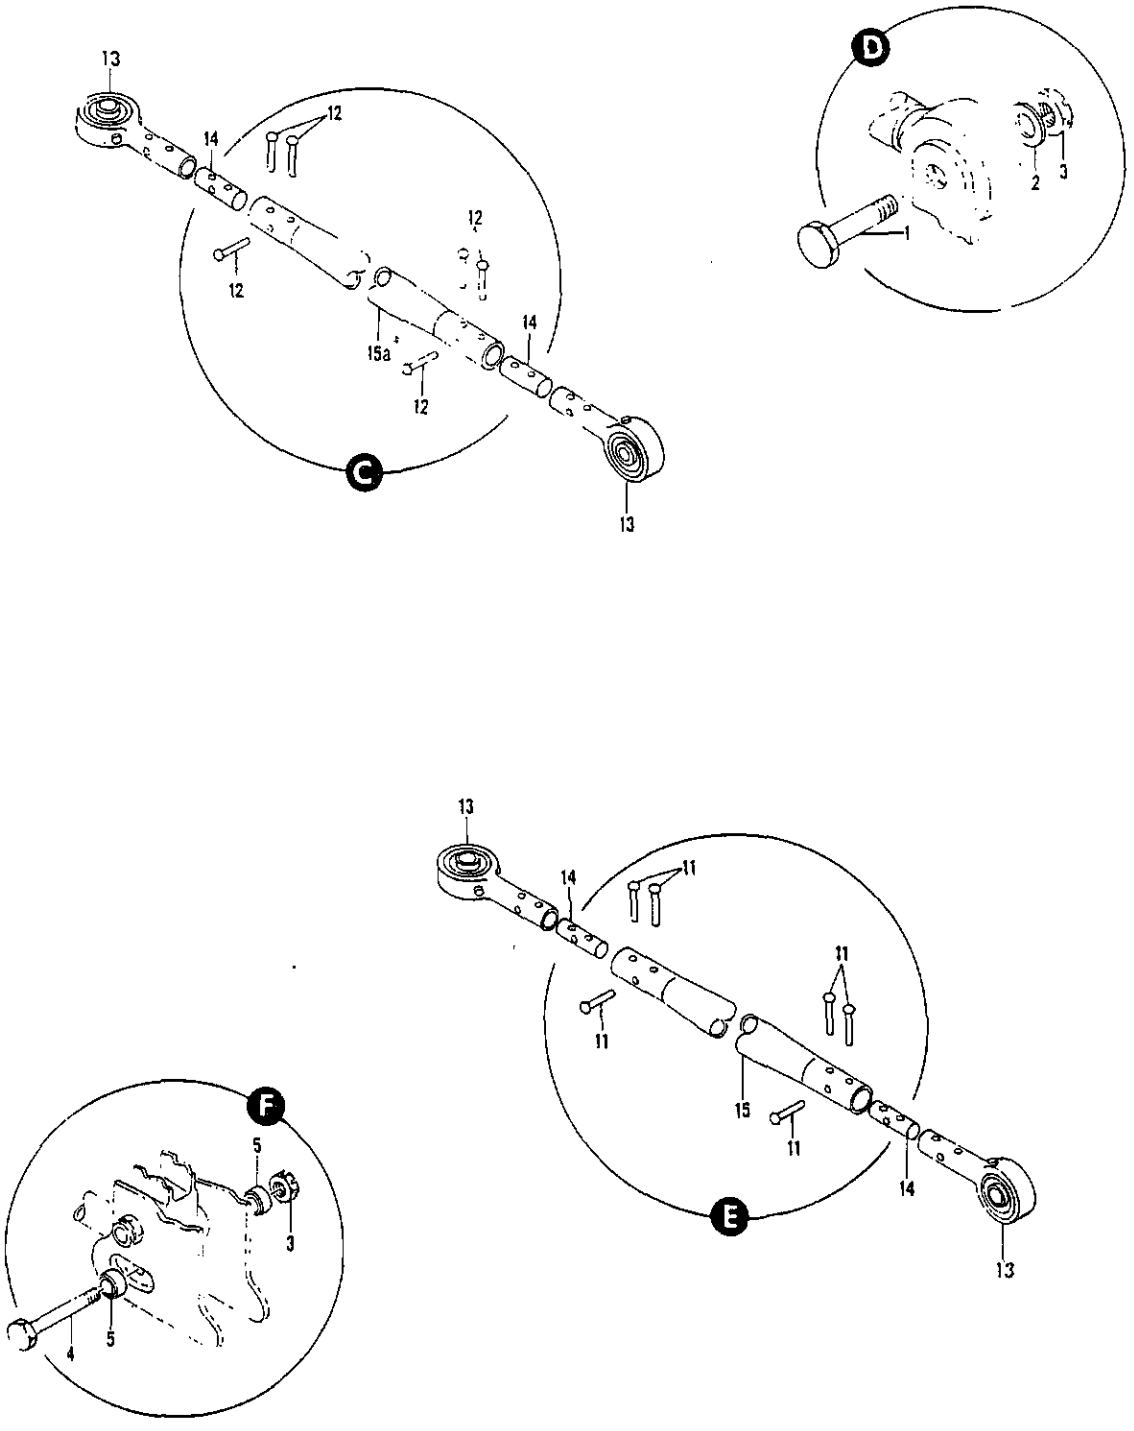


FIGURE 18. QUADRANT INSTL, INBOARD AILERON BUS AND CONTROL (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	18	5-98334-3003	QUADRANT INSTL, INBOARD AILERON BUS AND CONTROL LH (SEE FIG. 7, ITEM 10) (OPTIONAL 5-98334-3005)		RF
		5-98334-3005	QUADRANT INSTL, INBOARD AILERON BUS AND CONTROL LH (SEE FIG. 7, ITEM 10) (OPTIONAL TO 5-98334-3003)		RF
		5-98334-3004	QUADRANT INSTL, INBOARD AILERON BUS AND CONTROL RH (SEE FIG. 7, ITEM 10) (OPTIONAL 5-98334-3006)		RF
		5-98334-3006	QUADRANT INSTL, INBOARD AILERON BUS AND CONTROL RH (SEE FIG. 7, ITEM 10) (OPTIONAL TO 5-98334-3004)		RF
	1	NAS1108-26DW	. BOLT.		1
	2	AN960D816	. WASHER.		1
	3	AN320-8	. NUT		2
	4	NAS1108-38DW	. BOLT.		1
	5	3-85993	. STOP, INBOARD AILERON CONTROL MECHANISM		2
	6	NAS1108-30DW	. BOLT.		2
	7	BACW10T816	. WASHER.		4
	8	AN320-8	. NUT		2
R	9	90-3220-3002	. ROD ASSY, INBOARD AILERON BUS	5199	1
R	9	90-3220-3001	. ROD ASSY, INBOARD AILERON BUS (DELETED BY SB 3094).	0150	1
	9	90-3220-3002	. ROD ASSY, INBOARD AILERON BUS (ADDED BY SB 3094).	0103	1
R R	9	90-3220-3002	. ROD ASSY, INBOARD AILERON BUS (REPLACES 90-3220-3001 BY SB 3094)	0450	1
	10	90-3221-3001	. ROD ASSY, INBOARD AILERON CONTROL		1
R R	10A	BAC27DCT203	. . MARKER-ALUMINUM FOIL, FORWARD INSTRUCTIONS. (USED ON 90-3220-3002)	5199	1
R R R	10A	BAC27DCT203	. . MARKER-ALUMINUM FOIL, FORWARD INSTRUCTIONS (ADDED BY SB 3094)	0150	1
	11	NAS508M8	. . RIVET, (USED ON 90-3220-3001 AND -3002)		6
	12	MS20470D8	. . RIVET, (USED ON 90-3221-3001)		6
	13	BAC810C171M	. . BEARING		2
	14	60-3111	. . PLUG, INBOARD AILERON ROD END BEARING		2
	15	90-3220-2002	. . ROD, (USED ON 90-3220-3001 AND -3002) (OPTIONAL 90-3220-2001)		1
	15	90-3220-2001	. . ROD, (USED ON 90-3220-3001 AND -3002) (OPTIONAL TO 90-3220-2002)		1
	15A	90-3221-2001	. . ROD, INBOARD AILERON CONTROL (USED ON 90-3221-3001)		1
	16	AN320-14	. NUT		1
	17	66-9432	. WASHER, FLAT.		1
	17A	AN960PD1416	. WASHER.		1
	17B	AN960PD1416L	. WASHER.		1
	19	AN202KP218	. BEARING		2
	20	66-9431	. BUSHING, INBOARD AILERON BUS AND CONTROL QUADRANT (OPTIONAL 66-9431-1)		1
	21	6-65295-2000	. SPACER, INBOARD AILERON BUS AND CONTROL QUADRANT. BEARING		2
	22	69-9801	. SHAFT, INBOARD AILERON BUS AND CONTROL QUADRANT		1
	23	5-98324-3001	. QUADRANT ASSY, INBOARD AILERON BUS AND CONTROL (LH. ONLY)	0103	1
	23	5-98324-3005	. QUADRANT ASSY, (LH ONLY).	0499	1
	23	5-98324-3002	. QUADRANT ASSY, INBOARD AILERON BUS AND CONTROL (RH. ONLY)	0103	1
	23	5-98324-3006	. QUADRANT ASSY, (RH ONLY).	0499	1
	24	5-98324-3004	. QUADRANT ASSY, INBOARD AILERON BUS AND CONTROL (LH. ONLY)	0103	1
	24	5-98324-3008	. QUADRANT ASSY, (LH ONLY).	0499	1
	24	5-98324-3003	. QUADRANT ASSY, INBOARD AILERON BUS AND CONTROL (RH. ONLY)	0103	1
	24	5-98324-3007	. QUADRANT ASSY, (RH ONLY).	0499	1
	25	BAC810A822	. . BEARING (OPTIONAL MS20202KP21B)	0103	1
	25	MS20202KP21B	. . BEARING (OPTIONAL TO BAC810A822)	0103	1
	25	BAC810A822	. . BEARING	0499	1
	26	6-65231-2000	. . SLEEVE, INBOARD AILERON BUS AND CONTROL BEARING RETAINER		1
	27	NAS1105-8W	. . BOLT.		1
	28	NAS1197-516L	. . WASHER, (USED ON 5-98324-3001, -3002, -3003, -3004, M9782-1 AND -2)	0103	1
	28	AN960PD516L	. . WASHER, (USED ON 5-98324-3005, -3006, -3007, -3008, M9782-1 AND -2)	0499	1
	29	NAS679A5	. . NUT		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
18 30	60-3580-2000	. . CLIP, PUSH ROD RETAINER (USED ON 5-98324-3004, . . . -3008, -3003 AND -3007)		1
31	5-98324-2015	. . QUADRANT, (USED ON 5-98324-3001 AND M9782-1 . . . . (V16873)) (LH ONLY)	0103	1
31	5-98324-3009	. . QUADRANT, (USED ON 5-98324-3005 AND M9782-1 . . . . (V16873)) (LH ONLY)	0499	1
31	5-98324-2016	. . QUADRANT, (USED ON 5-98324-3002 AND M9782-2 . . . . (V16873)) (RH ONLY)	0103	1
31	5-98324-3010	. . QUADRANT, (USED ON 5-98324-3006 AND M9782-2 . . . . (V16873)) (RH ONLY)	0499	1
32	5-98324-2018	. . QUADRANT, (USED ON 5-98324-3004 AND M9782-1 . . . . (V16873)) (LH ONLY)	0103	1
32	5-98324-3012	. . QUADRANT, (USED ON 5-98324-3008 AND M9782-1 . . . . (V16873)) (LH ONLY)	0499	1
32	5-98324-2017	. . QUADRANT, (USED ON 5-98324-3003 AND M9782-2 . . . . (V16873)) (RH ONLY)	0103	1
32	5-98324-3011	. . QUADRANT, (USED ON 5-98324-3007 AND M9782-2 . . . . (V16873)) (RH ONLY)	0499	1
33	66-5021	. GUARD, INBOARD AILERON BUS AND CONTROL QUADRANT . . .		1
34	66-5021-1	. GUARD, INBOARD AILERON BUS AND CONTROL QUADRANT . . . ATTACHING PARTS		1
	AN4-10A	. BOLT.		3
	AN960D416	. WASHER.		3
	BACN10BY54W	. NUT		3
		-------*-------		
35		CONTROL INSTL, AILERON TAB CONTROL (FOR REF SEE FIG. . . 19, 20 AND 21)		RF
36		VALVE INSTL, INBOARD SPOILER CONTROL (FOR REF SEE 27-5, FIG. 13 AND 14)		RF
37		VALVE INSTL, OUTBOARD SPOILER CONTROL (FOR REF SEE. . . 27-5, FIG. 11 AND 12)		RF

MISSING ITEM NUMBERS ARE NOT APPLICABLE

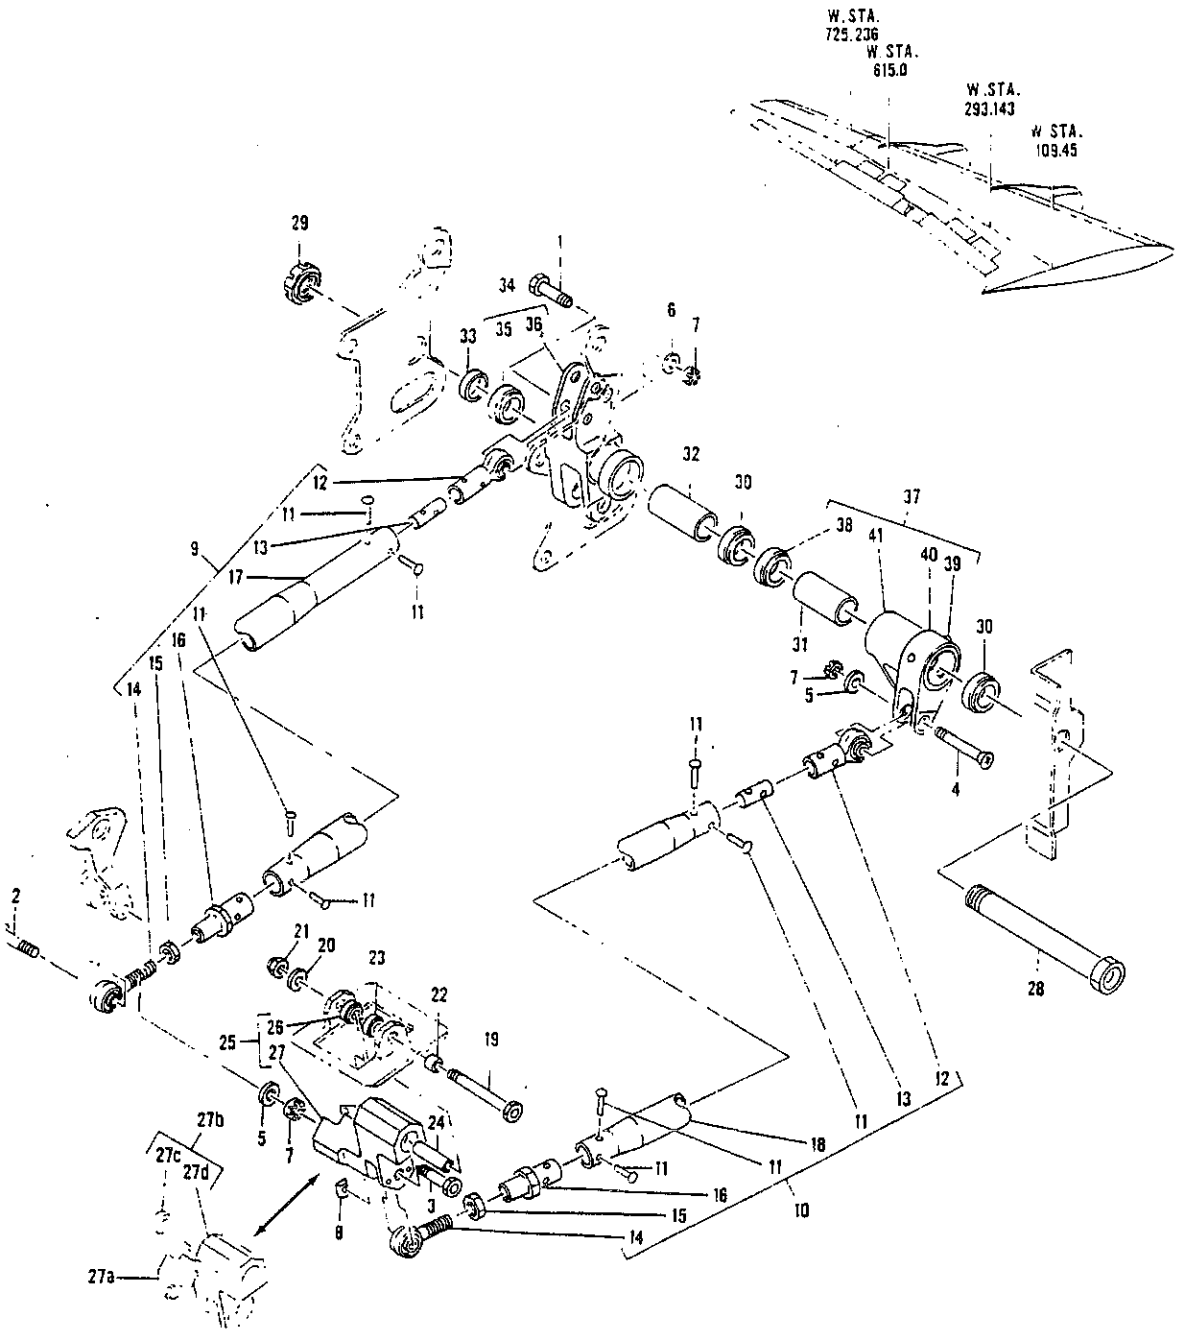


FIGURE 20. CONTROL INSTL, AILERON (TAB CONTROL) (LH)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
20	50-8701-38	CONTROL INSTL, AILERON (TAB CONTROL) (LH) (SEE 27-2, FIG. 8, ITEM 9)		RF
	65-12992-2	. LINKAGE INSTL, INBOARD AILERON TAB CONTROL.		1
1	NAS1104-14DW	. . BOLT.		1
2	NAS1104-17DW	. . BOLT.		1
3	NAS1304-19HW	. . BOLT.		1
4	BACB30ABP4-14	. . BOLT.		1
5	AN960D416	. . WASHER.		2
6	AN960D416L	. . WASHER.		1
7	AN320-4	. . NUT		3
8	BACN10CP4L	. . NUT		1
9	6-63233-3003	. . ROD ASSY, INBOARD AILERON TRIM TAB.		1
10	69-11426-2	. . ROD ASSY, INBOARD AILERON TRIM TAB.		1
11	AN470D6	. . . RIVET		4
12	BACB10A456	. . . BEARING		1
13	3-55365-1	. . . PLUG, THROTTLE CONTROL ROD END.		1
14	BACB10A436	. . . BEARING		1
15	AN316-6R	. . . NUT		1
16	3-58187-2001	. . . TERMINAL, INBOARD AILERON TRIM TAB ROD.		1
17	6-63233-2001	. . . ROD, INBOARD AILERON TRIM TAB (USED ON. 6-63233-3003)		1
18	69-11426-3	. . . ROD, INBOARD AILERON TRIM TAB (USED ON. 69-11426-2)		1
19	NAS1104-40W	. . BOLT.		1
20	AN960D416	. . WASHER.		1
21	NAS679A4W	. . NUT		1
22	NAS75-4-009	. . BUSHING		1
23	AN201KP4A	. . BEARING		1
24	NAS43DD4-94	. . SPACER.		1
27A	66-12410-1	. . PLATE, INBOARD AILERON TAB CONTROL CLAMP.		1
		ATTACHING PARTS		
	AN4-16A	. . BOLT.		1
	NAS679A4W	. . NUT		1
		--------*--------		
27B	65-18410-1	. . CRANK ASSY, INBOARD AILERON TAB CONTROL		1
27C	AN201KP4A	. . . BEARING		1
27D	65-18410-2	. . . CRANK, INBOARD AILERON TAB CONTROL.		1
28	63-10292	. . BOLT, INBOARD AILERON CONTROL MECHANISM		1
29	AN320-12	. . NUT		1
30	BACB10A35DD	. . BEARING		2
31	NAS43DD12-120	. . SPACER.		1
32	NAS43DD12-136	. . SPACER.		1
33	NAS75-12-013	. . BUSHING, (OPTIONAL NAS75-12-010 USED WITH AN960-1216 OR AN960-1216L)		1
34	65-12361-1	. . CRANK ASSY, INBOARD AILERON CONTROL MECHANISM		1
35	BACB10A35DD	. . . BEARING		1
36	65-12361-3	. . . CRANK, INBOARD AILERON CONTROL MECHANISM.		1
37	65-12379-1	. . CRANK ASSY, INBOARD AILERON CONTROL		1
38	BACB10A35DD	. . . BEARING		1
39	AN470D5	. . . RIVET		3
40	69-11290	. . . CRANK, INBOARD AILERON CONTROL MECHANISM.		1
41	65-12379-3	. . . CRANK, INBOARD AILERON CONTROL.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

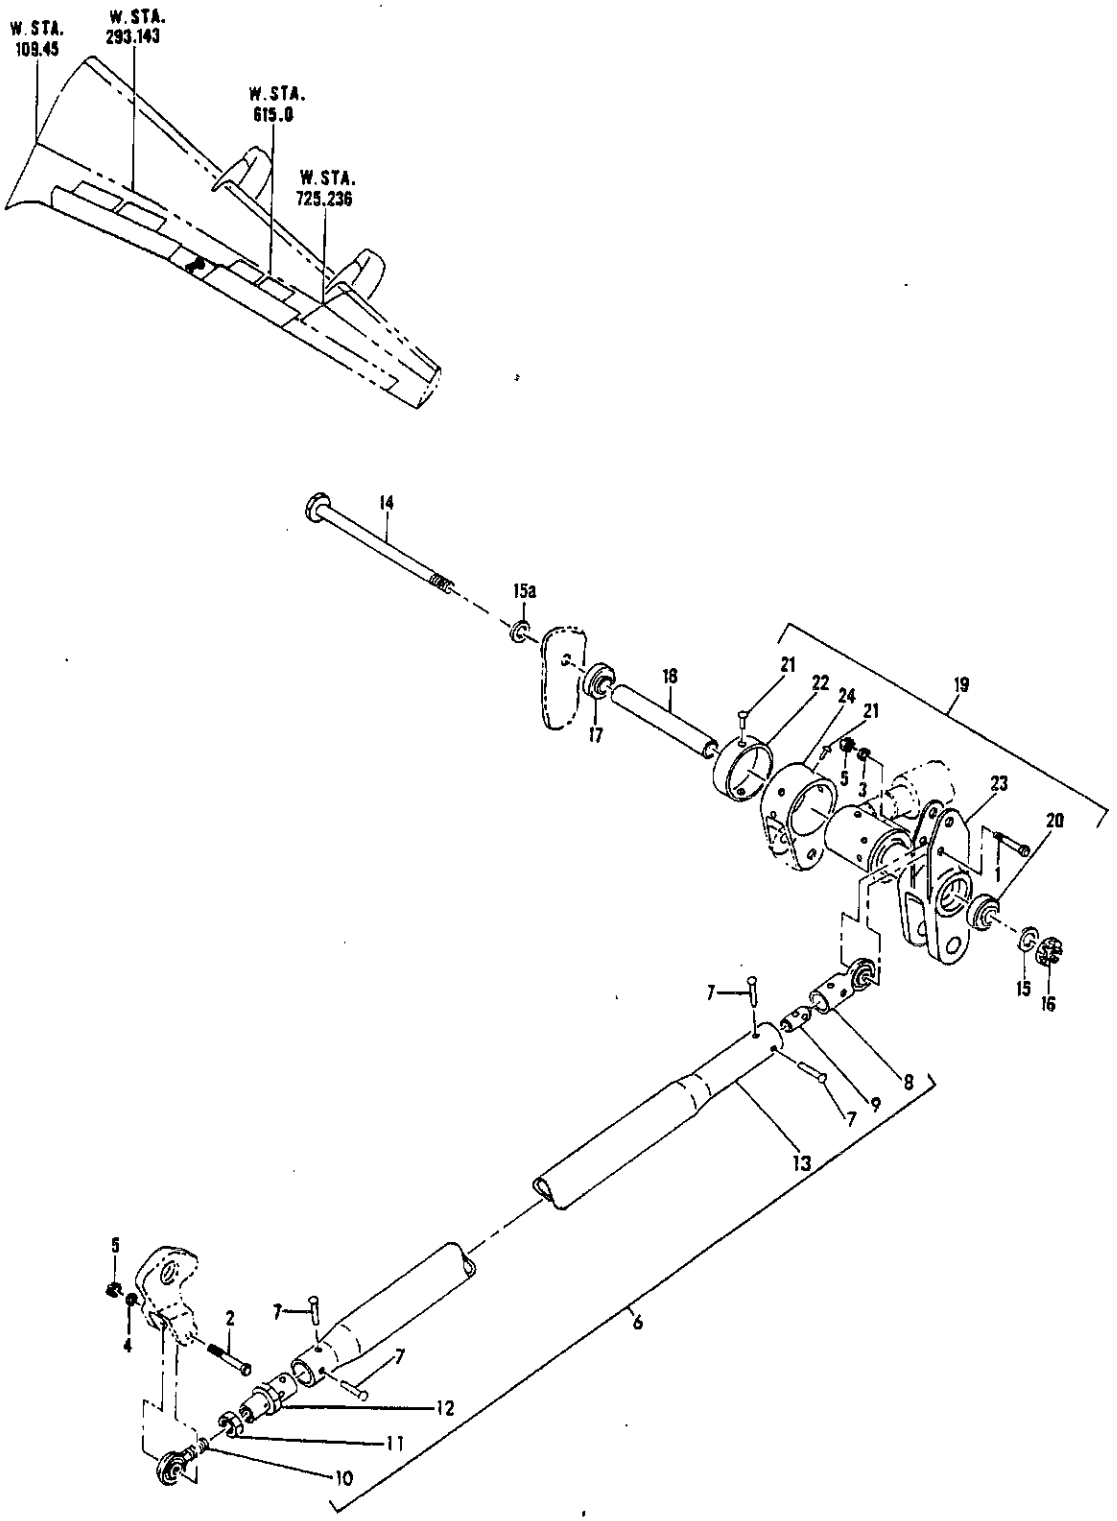


FIGURE 21. CONTROL INSTL, AILERON (TAB CONTROL) (RH)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
21	50-8701-138	CONTROL INSTL, AILERON (TAB CONTROL) (RH) (SEE 27-2, FIG. 8, ITEM 9)		RF
	50-3142-3002	. LINKAGE INSTL, INBOARD AILERON TAB CONTROL.		1
1	NAS1104-13DW	. . BOLT.		1
2	NAS1104-15DW	. . BOLT.		1
3	AN960D416L	. . WASHER.		1
4	AN960D416	. . WASHER.		1
5	AN320-4	. . NUT		2
6	6-63233-3003	. . ROD ASSY, INBOARD AILERON TRIM TAB.		1
7	AN470D6	. . . RIVET, (USED ON 6-63233-3003)		4
8	BACB10A456	. . . BEARING		1
9	3-55365-1	. . . PLUG, THROTTLE CONTROL ROD END.		1
10	BACB10A436	. . . BEARING		1
11	AN316-6R	. . . NUT		1
12	3-58187-2001	. . . TERMINAL, RUDDER CONTROL TAB FOLLOW-UP MECHANISM		1
13	6-63233-2001	. . . ROD, INBOARD AILERON TRIM TAB		1
14	NAS1108-86DW	. . BOLT.		1
15	AN960D816	. . WASHER.		1
15A	AN960D816	. . WASHER.		AR
15A	AN960D816L	. . WASHER.		AR
16	AN320-8	. . NUT		1
17	AN201KP8A	. . BEARING		1
18	NAS43DD8-282	. . SPACER.		1
19	60-3321-3002	. . CRANK ASSY, INBOARD AILERON CONTROL MECHANISM		1
20	AN201KP8A	. . . BEARING		1
21	MS20470D5	. . . RIVET		6
22	30-2504-2000	. . . STOP, INBOARD AILERON CONTROL MECHANISM		1
23	50-3167-2002	. . . CRANK, INBOARD AILERON CONTROL MECHANISM.		1
24	6-63911-2000	. . . CRANK, INBOARD AILERON CONTROL MECHANISM.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

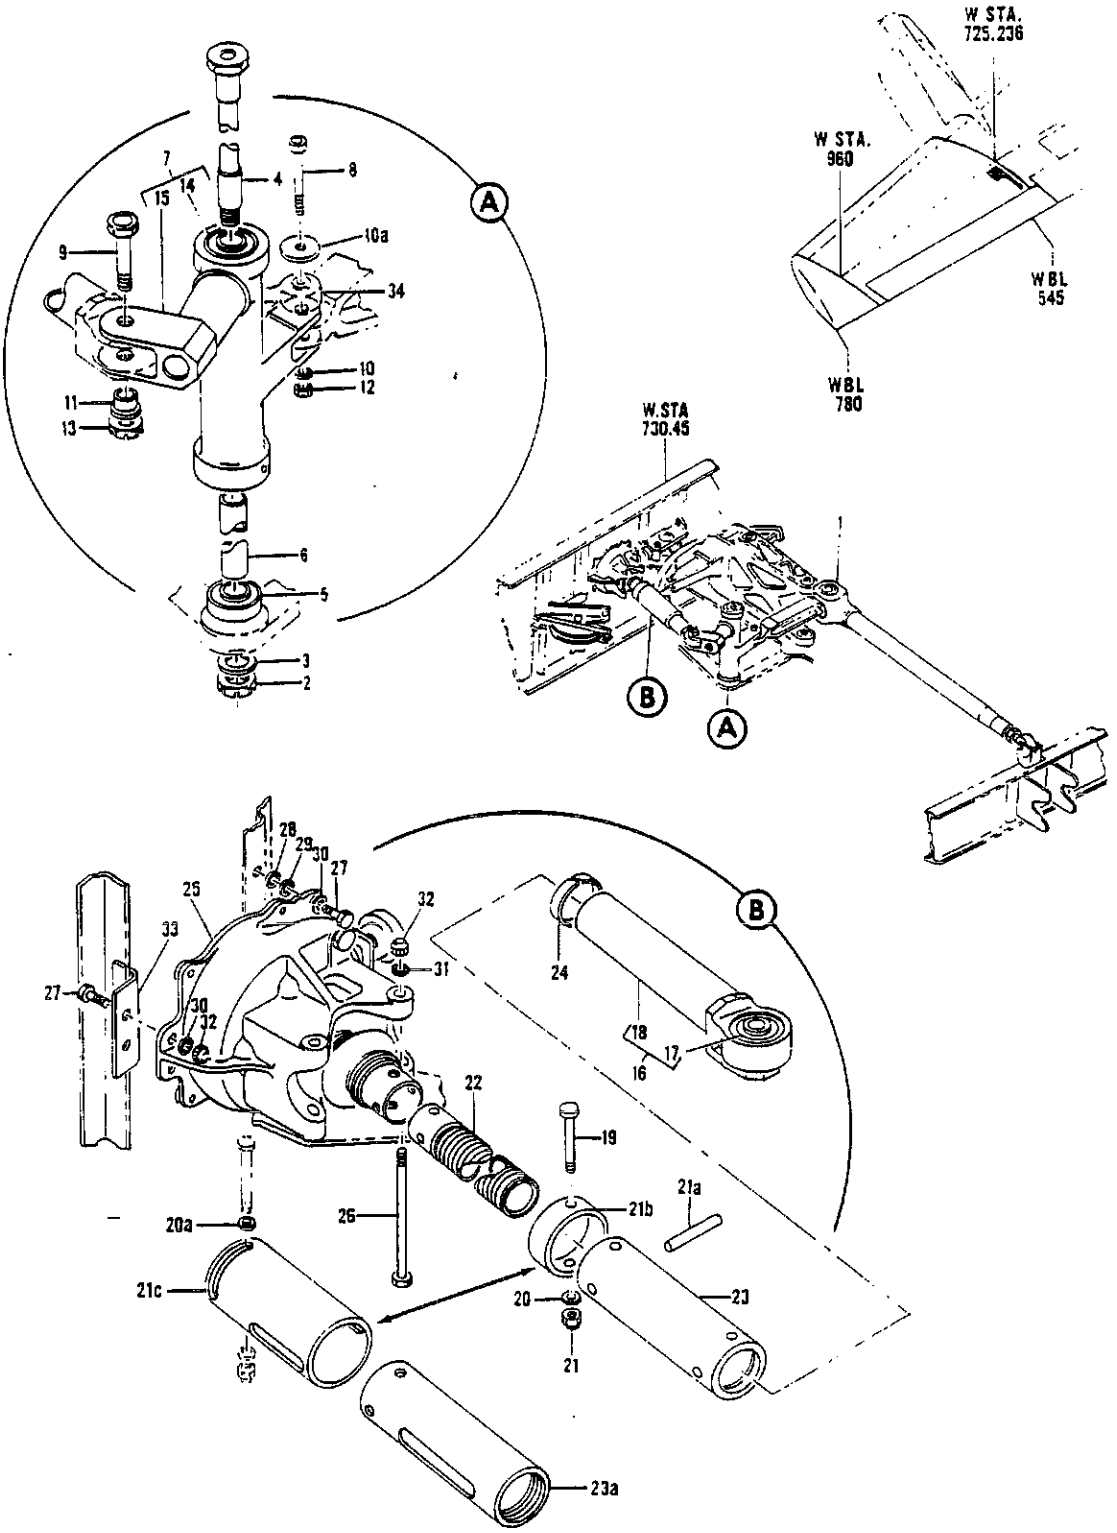


FIGURE 24. CONTROL INSTL, AILERON AND SPOILER

	FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	24		50-8701-27	CONTROL INSTL, AILERON AND SPOILER (LH) (SEE 57-2, FIG. 1, ITEM 6)		RF
			50-8701-127	CONTROL INSTL, AILERON AND SPOILER (RH) (SEE 57-2, FIG. 1, ITEM 6)		RF
		1	5-97885-3001	. QUADRANT INSTL, OUTBOARD (LH ONLY) (SEE FIG. 25). . .		1
		1	5-97885-3002	. QUADRANT INSTL, OUTBOARD (RH ONLY) (SEE FIG. 25). . .		1
R			5-87198-3001	. MECHANISM INSTL, OUTBOARD LOCKOUT (LH ONLY)	0150	1
R R R R			5-87198-3003	. GEAR BOX AND SCREW ASSY, OUTBOARD LOCKOUT MECHANISM . LH (SPARES ONLY) (CONSISTS OF PARTS DENOTED BY (S))	5199	RF
			5-87198-3005	. GEAR BOX AND SCREW ASSY, OUTBOARD LOCKOUT MECHANISM . LH (SPARES ONLY) (CONSISTS OF PARTS DENOTED BY (S))		RF
R			5-87198-3002	. MECHANISM INSTL, OUTBOARD LOCKOUT (RH ONLY)	0150	1
R R R R			5-87198-3004	. GEAR BOX AND SCREW ASSY, OUTBOARD LOCKOUT MECHANISM . RH (SPARES ONLY) (CONSISTS OF PARTS DENOTED BY (S))	5199	RF
			5-87198-3006	. GEAR BOX AND SCREW ASSY, OUTBOARD LOCKOUT MECHANISM . RH (SPARES ONLY) (CONSISTS OF PARTS DENOTED BY (S))		RF
		2	AN320D10	. . NUT		1
		3	AN960D1016	. . WASHER.		1
		4	60-2834-2000	. . SHAFT		1
		5	BACB10A685	. . BEARING . . . . . (OPTIONAL MS20201KP12A)		1
		5	MS20201KP12A	. . BEARING . . . . . (OPTIONAL TO BACB10A685)		1
		6	30-2208	. . SPACER.		1
		7	65-51821-1	. . CRANK ASSY, OUTBOARD AILERON LOCKOUT MECHANISM (LH ONLY) (OPTIONAL 65-56471-1)		1
		7	65-56471-1	. . CRANK ASSY, OUTBOARD AILERON LOCKOUT MECHANISM (LH ONLY) (OPTIONAL TO 65-51821-1)		1
		7	65-51821-2	. . CRANK ASSY, OUTBOARD AILERON LOCKOUT MECHANISM (RH ONLY) (OPTIONAL 65-56471-2)		1
		7	65-56471-2	. . CRANK ASSY, OUTBOARD AILERON LOCKOUT MECHANISM (RH ONLY) (OPTIONAL TO 65-51821-2)		1
				ATTACHING PARTS		
		8	NAS1105-21D	. . BOLT.		1
		9	NAS1108-28D	. . BOLT.		1
		10	AN960D516	. . WASHER.		1
		11	3-88479	. . SPACER.		1
		12	AN320-5	. . NUT		1
		13	AN320-8	. . NUT . . . . . -------*-------		1
		14	BACB10A685	. . . BEARING . . . . . (OPTIONAL MS20201KP12A)		1
		14	AN201KP12A	. . . BEARING . . . . . (OPTIONAL TO BACB10A685)		1
		15	65-51821-3	. . . CRANK, (USED ON 65-51821-1)		1
		15	65-51821-4	. . . CRANK, (USED ON 65-51821-2)		1
		15	65-56471-3	. . . CRANK, OUTBOARD AILERON LOCKOUT MECHANISM (USED ON 65-56471-1)		1
		15	65-56471-4	. . . CRANK, OUTBOARD AILERON LOCKOUT MECHANISM (USED ON 65-56471-2)		1
		17	BACB10C161H	. . . BEARING . . . . . (OPTIONAL BACB10C161)		1
		17	BACB10C161	. . . BEARING . . . . . (OPTIONAL TO BACB10C161H)		1
		17A	S 9-53145-1	. . NUT ASSY, (LH ONLY)		1
		17A	S 9-53145-2	. . NUT ASSY, (RH ONLY)		1
		18	9-53145-3	. . . NUT, (LH ONLY).		1
		18	9-53145-4	. . . NUT, (RH ONLY).		1
		19	S NAS1104-30W	. . BOLT.		1
		20	S AN960D416L	. . WASHER.		1
		20A	AN960D416L	. . WASHER.		1
		20A	S AN960D416L	. . WASHER, (USED ON 5-87198-3005 AND -3006).		1
		21	S NAS679A4W	. . NUT		1
		21A	S 66-9604	. . PIN		1
		21B	S 66-9603	. . RING, OUTBOARD AILERON LOCKOUT MECHANISM RETAINER . (USED ON 5-87198-3003 AND -3004)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	24 21C		66-11523	. . SLEEVE, OUTBOARD AILERON LOCKOUT MECHANISM.		1
	21C	S	66-11523	. . SLEEVE, (USED ON 5-87198-3005 AND -3006).		1
	22	S	60-1588-1	. . SCREW, (LH THREAD) (LH ONLY).		1
	22	S	60-1588-2	. . SCREW, (RH THREAD) (RH ONLY).		1
	23	S	60-1587-2000	. . COVER, OUTBOARD AILERON LOCKOUT MECHANISM SCREW . . (USED ON 5-87198-3003 AND -3004)		1
	23A		60-1587-2001	. . COVER, OUTBOARD AILERON LOCKOUT MECHANISM SCREW . .		1
	23A	S	60-1587-2001	. . COVER, SCREW (USED ON 5-87198-3005 AND -3006) . . .		1
	24	S	MS28932C04-15	. . FELT.		1
R	25		5-87199-3003	. . GEAR BOX ASSY,.	0150	1
R				(OPTIONAL 5-87199-3002)		
R	25		5-87199-3002	. . GEAR BOX ASSY,.	0150	1
R				(OPTIONAL TO 5-87199-3003)		
R	25		5-87199-3004	. . GEAR BOX ASSY	5199	1
				ATTACHING PARTS		
	26		NAS1304-61	. . BOLT.		2
	27		NAS1304-7	. . BOLT.		4
	28		NAS1197-416	. . WASHER.		AR
	29		NAS1197-416L	. . WASHER.		AR
	30		NAS1197-416	. . WASHER.		4
	31		AN960D416	. . WASHER.		2
	32		BACN10JR4F	. . NUT		4
				-------*--------		
				. . . FLIGHT CONTROL, (SEE FIG. 24A).		
				. . . REQUIRED PLACARDS, (SEE 11-3, FIG. 55).		
	33		3-88474-2000	. . CLIP.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

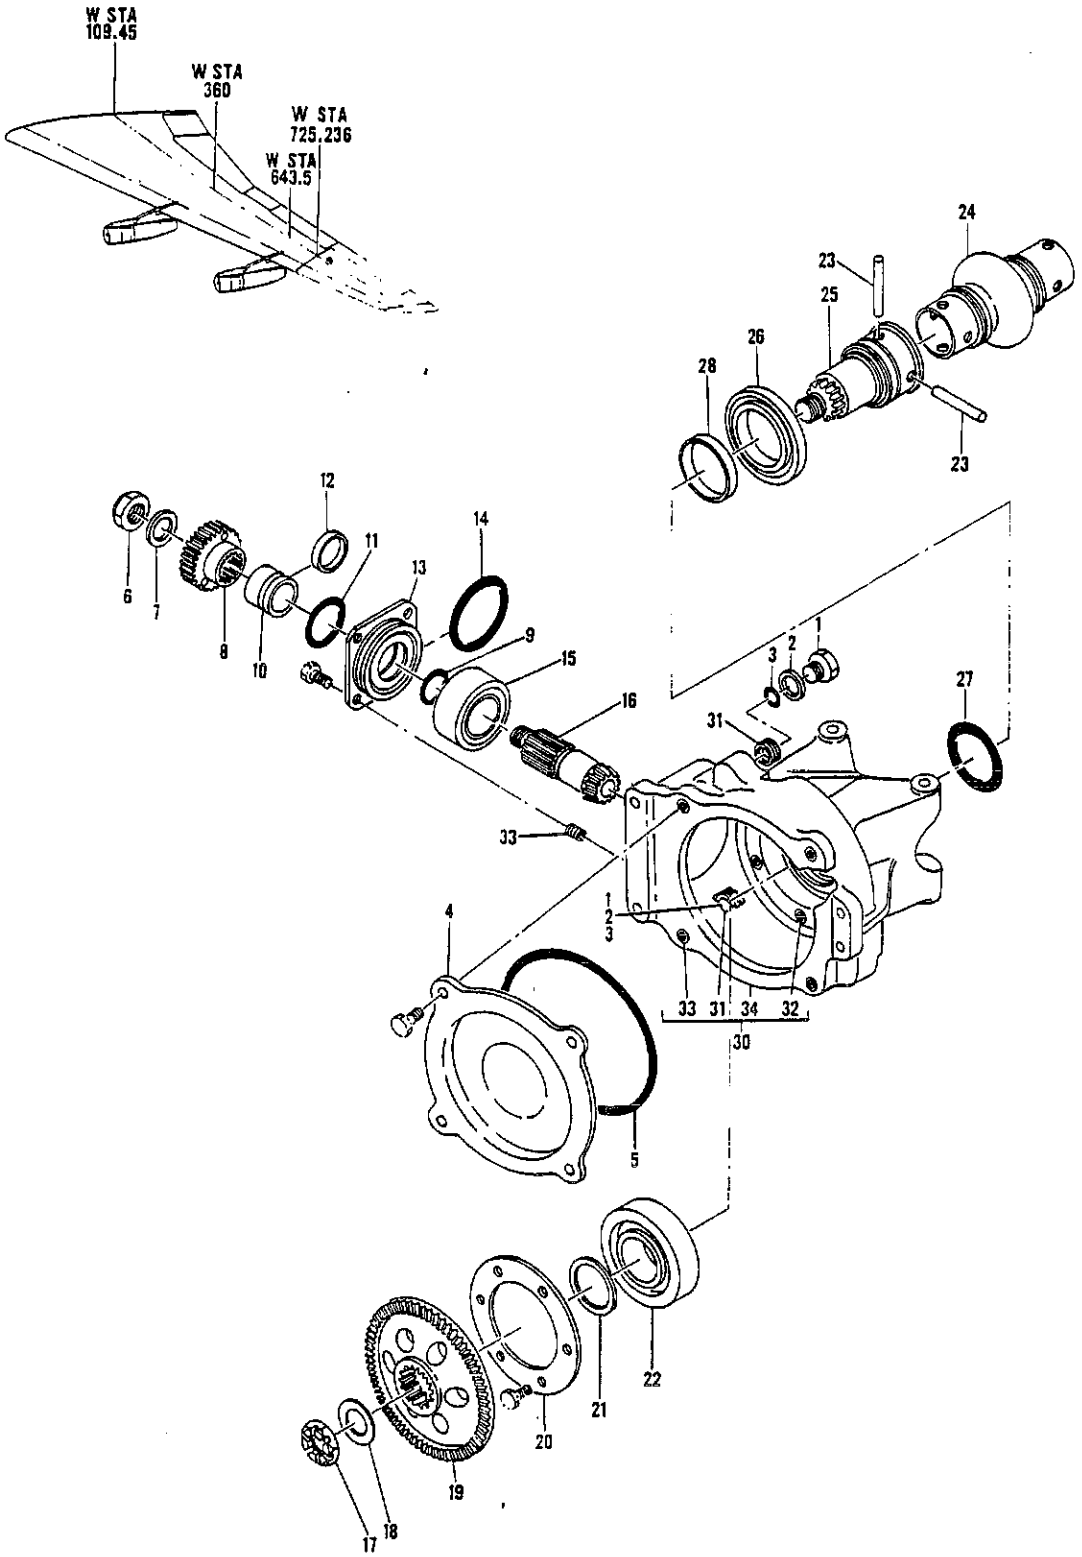


FIGURE 24A. GEAR BOX ASSY, OUTBOARD AILERON LOCKOUT MECHANISM

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	24A	5-87199-3003	GEAR BOX ASSY, OUTBOARD AILERON LOCKOUT MECHANISM . . .	0150	RF
R			(FLIGHT CONTROL ONLY) (SEE FIG. 24, ITEM 25)		
R			(OPTIONAL 5-87199-3002)		
R		5-87199-3002	GEAR BOX ASSY, OUTBOARD AILERON LOCKOUT MECHANISM . . .	0150	RF
R			(FLIGHT CONTROL ONLY) (SEE FIG. 24, ITEM 25)		
R			(OPTIONAL TO 5-87199-3003)		
R		5-87199-3004	GEAR BOX ASSY, OUTBOARD AILERON LOCKOUT MECHANISM . . .	5199	RF
R			(FLIGHT CONTROL ONLY) (SEE FIG. 24, ITEM 25)		
	1	AN814-4DL	. PLUG AND BLEEDER.		2
	2	BACW10T716L	. WASHER.		2
	3	AN6227B8	. PACKING		2
R	4	9-61767-2000	. PLATE, OUTBOARD AILERON LOCKOUT MECHANISM SEAL (USED	0150	1
R			ON 5-87199-3001, -3002 AND -3003)		
R	4	9-61767-2001	. PLATE, OUTBOARD AILERON LOCKOUT MECHANISM SEAL (USED	5199	1
R			ON 5-87199-3004)		
			ATTACHING PARTS		
		AN3H3A	. BOLT.		4
			-------*-------		
	5	AN6230B24	. GASKET.		1
	6	NAS1022A9	. NUT		1
	7	AN960-916	. WASHER.		1
	8	69-4083	. COUPLING HALF, FLAP DRIVE SPLINED		1
			(OPTIONAL TO 69-46619-1)		
	9	AN6227B15	. PACKING		1
	10	6-98755	. SLEEVE, OUTBOARD AILERON LOCKOUT MECHANISM.		1
	11	AN6227B22	. PACKING		1
	12	69-27219-14	. RING, LOW PRESSURE ROTARY SEAL.		1
	13	6-72442-2000	. RETAINER, OUTBOARD AILERON LOCKOUT MECHANISM. . . .		1
			ATTACHING PARTS		
		AN3H3A	. BOLT.		4
			-------*-------		
	14	AN6230B3	. GASKET.		1
	15	BACB10A279	. BEARING		1
	16	9-61766	. SHAFT, OUTBOARD AILERON LOCKOUT MECHANISM BEVEL GEAR		1
	17	AN320-10	. NUT		1
	18	AN960-1016	. WASHER.		1
	19	9-66368	. GEAR, OUTBOARD AILERON LOCKOUT MECHANISM BEVEL. . . .		1
	20	6-72443	. RETAINER, OUTBOARD AILERON LOCKOUT MECHANISM BEARING		1
			ATTACHING PARTS		
		AN4H4A	. BOLT.		6
			-------*-------		
	21	9-61297-11	. SHIM, LAMINATED		1
	22	BACB10A326	. BEARING		1
	23	3-94588	. PIN, OUTBOARD AILERON LOCKOUT MECHANISM		2
	24	6-72441	. JOINT, OUTBOARD AILERON LOCKOUT MECHANISM UNIVERSAL .		1
	25	9-66369	. SHAFT, OUTBOARD AILERON LOCKOUT MECHANISM		1
	26	MS20202KP29B	. BEARING		1
	27	AN6230B2	. GASKET.		1
	28	69-27219-22	. RING, LOW PRESSURE ROTARY SEAL.		1
R	30	5-87400-3001	. HOUSING ASSY, (USED ON 5-87198-3007, 5-87199-3001,. .	0150	1
R			-3002)		
	30	5-87400-3002	. HOUSING ASSY, (USED ON 5-87199-3003, -3004, -3005). .		1
	31	BACS13P7CN2	. . SLEEVE.		2
	32	BACS13P4CN3	. . SLEEVE.		6
	33	BACS13P3CN3	. . SLEEVE.		8
R	34	5-87400-4	. . HOUSING, (USED ON 5-87400-3001)	0150	1
	34	5-87400-3003	. . HOUSING, (USED ON 5-87400-3002)		1
			. FOR REFERENCE TO OTHER GEAR BOX DETAILS, SEE NHA. . .		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

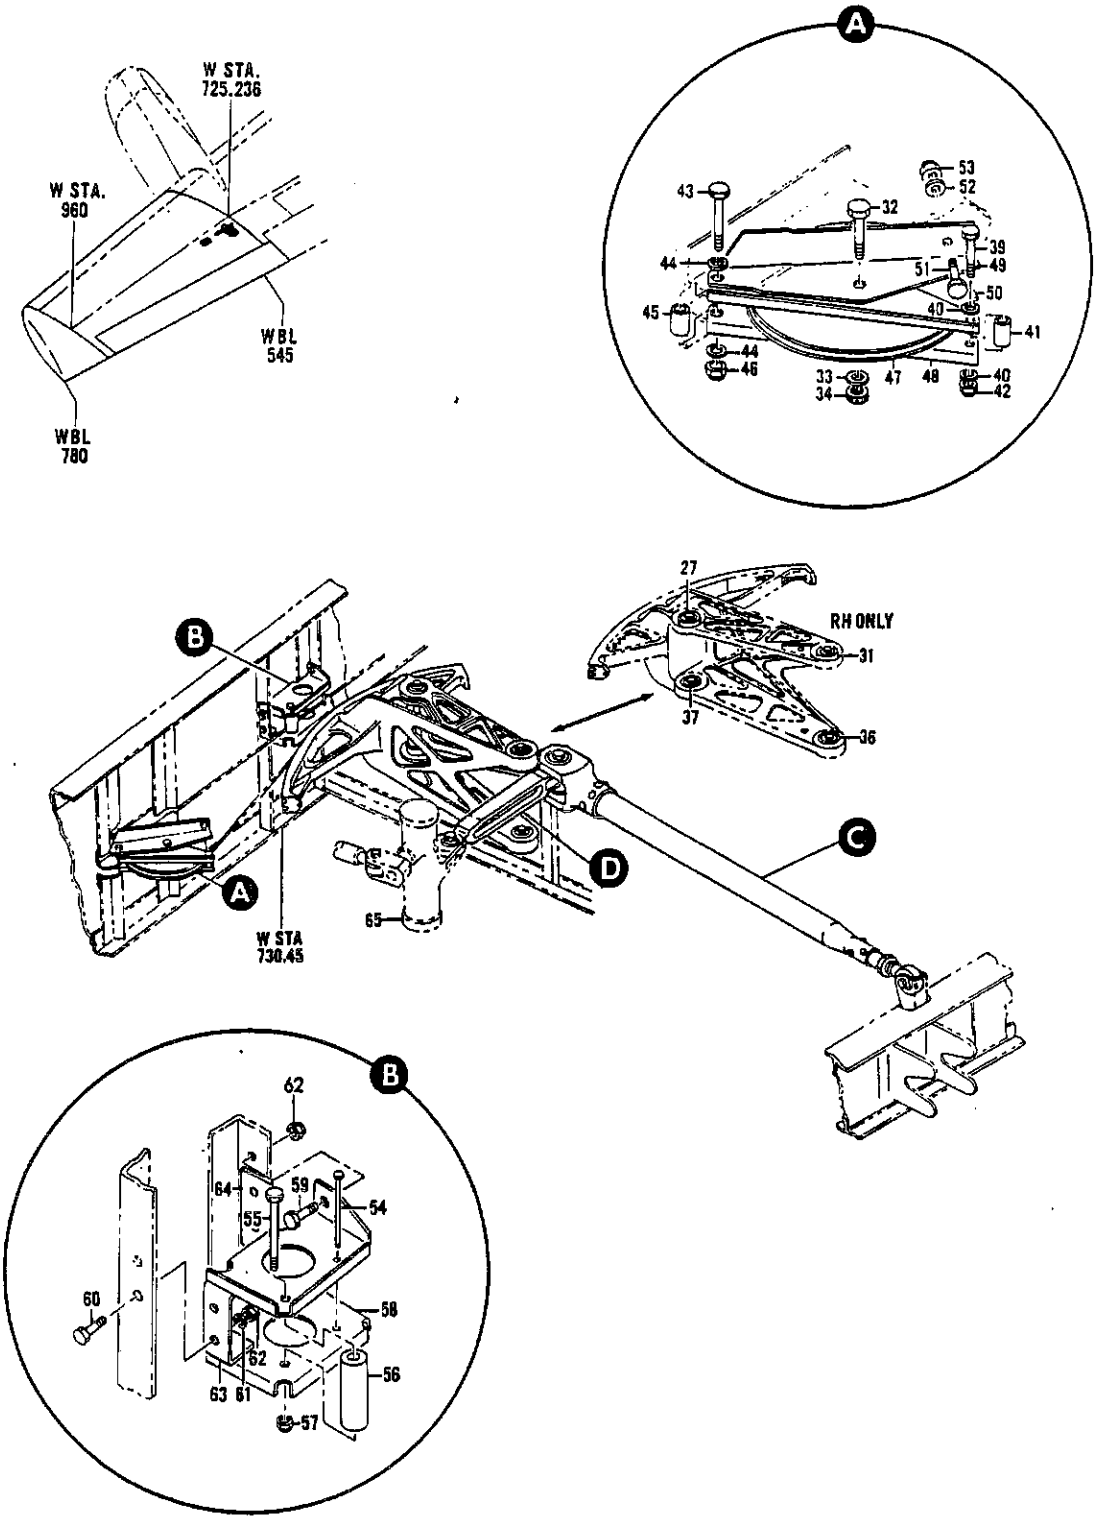


FIGURE 25. QUADRANT INSTL, OUTBOARD AILERON CONTROL (SHEET 1)

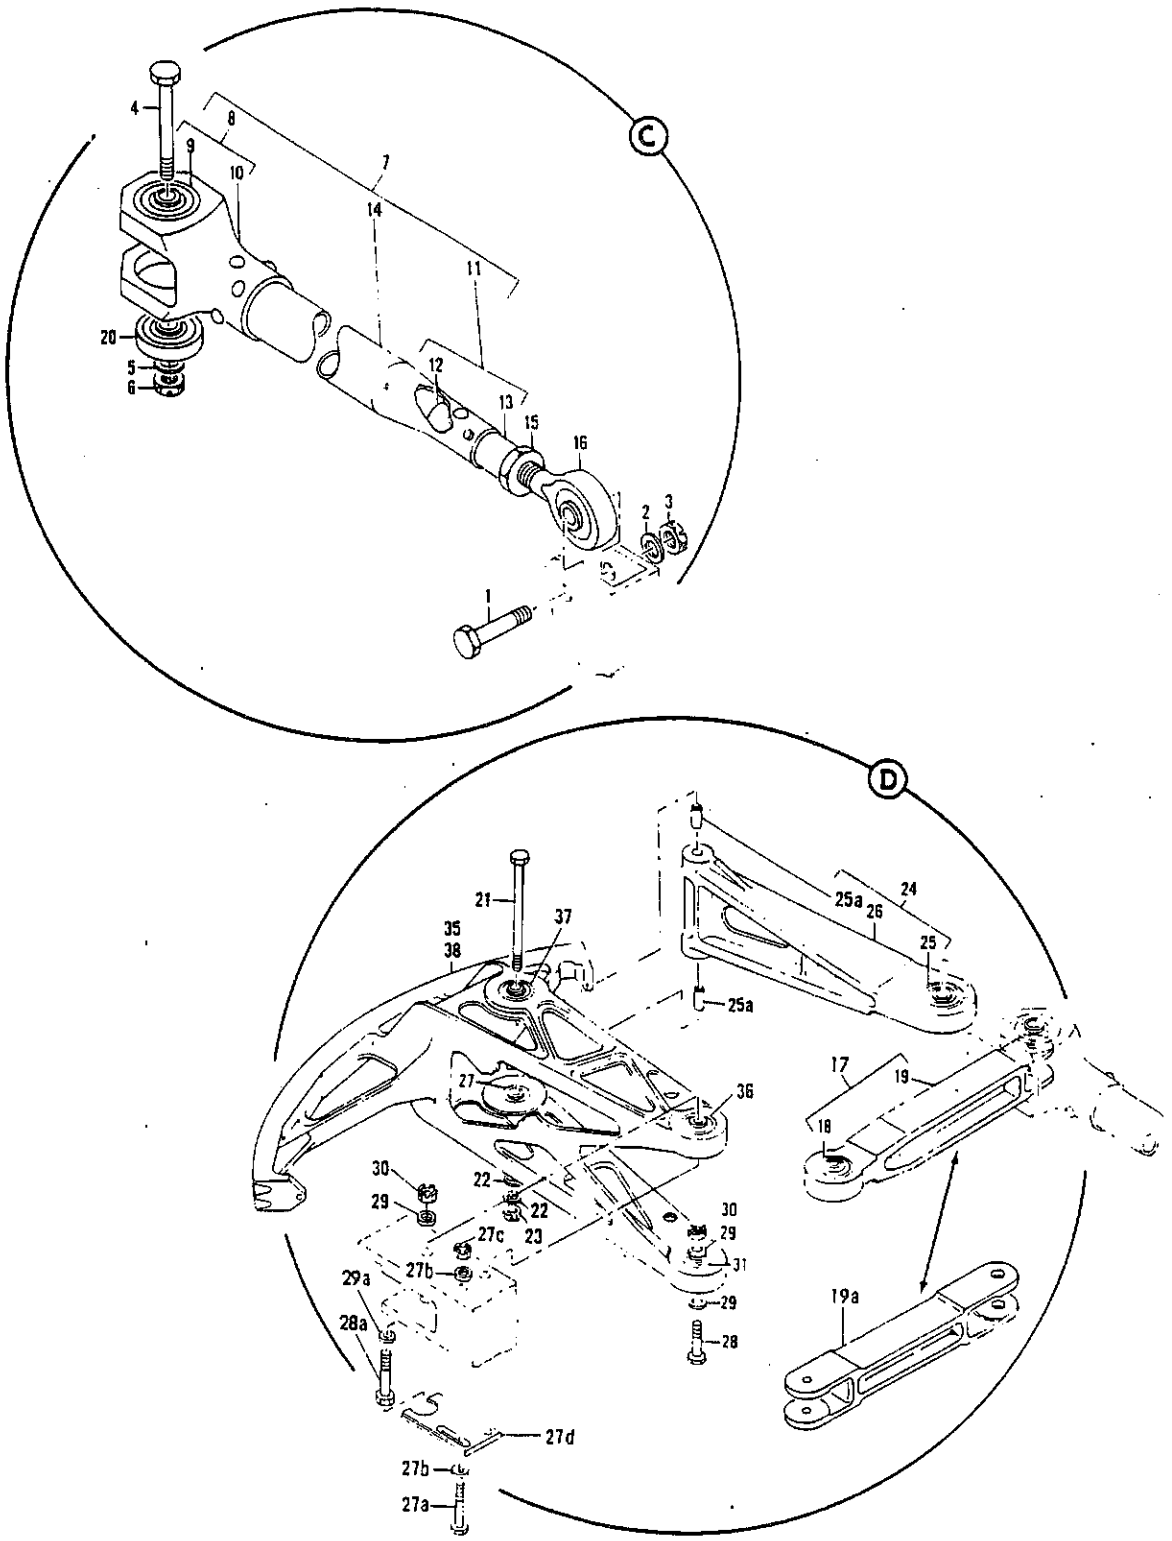


FIGURE 25. QUADRANT INSTL, OUTBOARD AILERON CONTROL (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
25	5-97885-3001	QUADRANT INSTL, OUTBOARD AILERON CONTROL (LH) (SEE FIG. 24, ITEM 1)		RF
	5-97885-3002	QUADRANT INSTL, OUTBOARD AILERON CONTROL (RH) (SEE FIG. 24, ITEM 1)		RF
1	NAS1108-20D	. BOLT.		1
2	AN960D816	. WASHER.		1
3	AN320-8	. NUT		1
4	NAS1108-42D	. BOLT.		1
5	AN960-816L	. WASHER.		1
6	AN320-8	. NUT		1
7	69-10829	. ROD ASSY, OUTBOARD AILERON CONTROL.		1
8	90-2905-1	. . CLEVIS ASSY, OUTBOARD AILERON CONTROL ROD		1
		ATTACHING PARTS		
	NAS1104-4W	. . BOLT.		6
	AN960-416L	. . WASHER.		6
	BACN10BY54W	. . NUT		6
		-------*-------		
9	AN200KP8	. . . BEARING		1
10	90-2905-2000	. . . CLEVIS, OUTBOARD AILERON CONTROL ROD.		1
11	60-2705	. . TERMINAL ASSY, OUTBOARD AILERON CONTROL ROD		1
		ATTACHING PARTS		
	AN470D8	. . RIVET		1
	AN470D10	. . RIVET		2
		-------*-------		
12	30-2040	. . . PLUG, TERMINAL ROD END.		1
13	60-2705-1	. . . TERMINAL, OUTBOARD AILERON CONTROL ROD.		1
14	66-10594	. . TUBE, OUTBOARD AILERON CONTROL ROD.		1
15	AN316-10R	. NUT		1
16	BACB10C172H	. BEARING		1
		(OPTIONAL BACB10C172)		
16	BACB10C172	. BEARING		1
		(OPTIONAL TO BACB10C172H)		
19A	65-51851-1	. LINK, OUTBOARD AILERON LOCKOUT.		1
20	BACB10A692	. BEARING		1
		(OPTIONAL AN200KP8)		
20	AN200KP8	. BEARING		1
		(OPTIONAL TO BACB10A692)		
21	NAS1105-81D	. BOLT.		1
22	AN960-516	. WASHER.		2
23	AN320-5	. NUT		1
24	50-1447-3003	. LINK ASSY, OUTBOARD AILERON CONTROL		1
25	BACB10C163	. . BEARING		1
25A	NAS537-5P071	. . BUSHING		2
26	50-1447-3002	. . LINK, OUTBOARD AILERON CONTROL.		1
27	BACB10A690	. BEARING		1
		(OPTIONAL AN200KP5)		
27	AN200KP5	. BEARING		1
		(OPTIONAL TO BACB10A690)		
27A	NAS1103-27	. BOLT.		2
27B	AN960D10	. WASHER.		4
27C	NAS679A3W	. NUT		2
27D	66-14988-1	. RETAINER, OUTBOARD AILERON QUADRANT BOLT.		1
28	NAS1105-23D	. BOLT.		1
28	NAS1105-23D	. BOLT, (DELETED BY SB 1730).		1
28A	NAS1105-22D	. BOLT.		1
29	AN960D516	. WASHER.		3
30	AN320-5	. NUT		2
31	BACB10C161H	. BEARING		1
		(OPTIONAL BACB10C161)		
31	BACB10C161	. BEARING		1
		(OPTIONAL TO BACB10C161H)		
32	NAS1105-14D	. BOLT.		1
33	AN960PD516	. WASHER.		1
34	AN320-5	. NUT		1
35	5-65509-3001	. QUADRANT ASSY, OUTBOARD AILERON BUS CONTROL		1
36	BACB10C161	. . BEARING		1
37	AN200KP5	. . BEARING		1
38	5-65509-2001	. . QUADRANT, OUTBOARD AILERON BUS CONTROL.		1
39	NAS1303-12	. BOLT.		1
40	AN960D10L	. WASHER.		2
41	NAS42DD6-40	. SPACER.		1
42	NAS679A3W	. NUT		1
43	NAS1304-17	. BOLT.		1
44	AN960D416	. WASHER.		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
25 45	NAS42DD8-40	. SPACER.		1
46	NAS679A4W	. NUT		1
47	BACP30F9	. PULLEY.		1
48	90-2298-2000	. BRACKET, CONTROL PULLEY AILERON BUS		1
49	60-2270-2001	. ANGLE, CONTROL PULLEY AILERON BUS SUPPORT (LH ONLY)		1
49	60-2270-2002	. ANGLE, CONTROL PULLEY AILERON BUS SUPPORT (RH ONLY)		1
50	60-2270-2003	. ANGLE, CONTROL PULLEY AILERON BUS SUPPORT (LH ONLY)		1
50	60-2270-2004	. ANGLE, CONTROL PULLEY AILERON BUS SUPPORT (RH ONLY)		1
		ATTACHING PARTS		
51	NAS1304-5	. BOLT.		2
52	AN960D416	. WASHER.		2
53	NAS679A4W	. NUT		2
		-------*-------		
54	MS20392-2C59	. PIN		1
55	NAS1303-30	. BOLT.		1
56	3-85263	. SPACER, OUTBOARD AILERON CABLE GUARD BOLT		1
57	NAS679A3W	. NUT		1
58	6-65209-2000	. BRACKET, OUTBOARD AILERON QUADRANT CABLE GUARD.		1
		ATTACHING PARTS		
59	NAS1303-2	. BOLT.		2
60	NAS1303-1	. BOLT.		2
61	AN960D10L	. WASHER.		2
62	NAS679A3W	. NUT		4
		-------*-------		
63	6-65209-2003	. CLIP, OUTBOARD AILERON QUADRANT CABLE GUARD BRACKET		1
64	6-65209-2	. STRIP, OUTBOARD AILERON QUADRANT CABLE GUARD BRACKET RUB		1
65		MECHANISM INSTL, OUTBOARD AILERON LOCKOUT (FOR REF. SEE FIG. 24)		RF

MISSING ITEM NUMBERS ARE NOT APPLICABLE

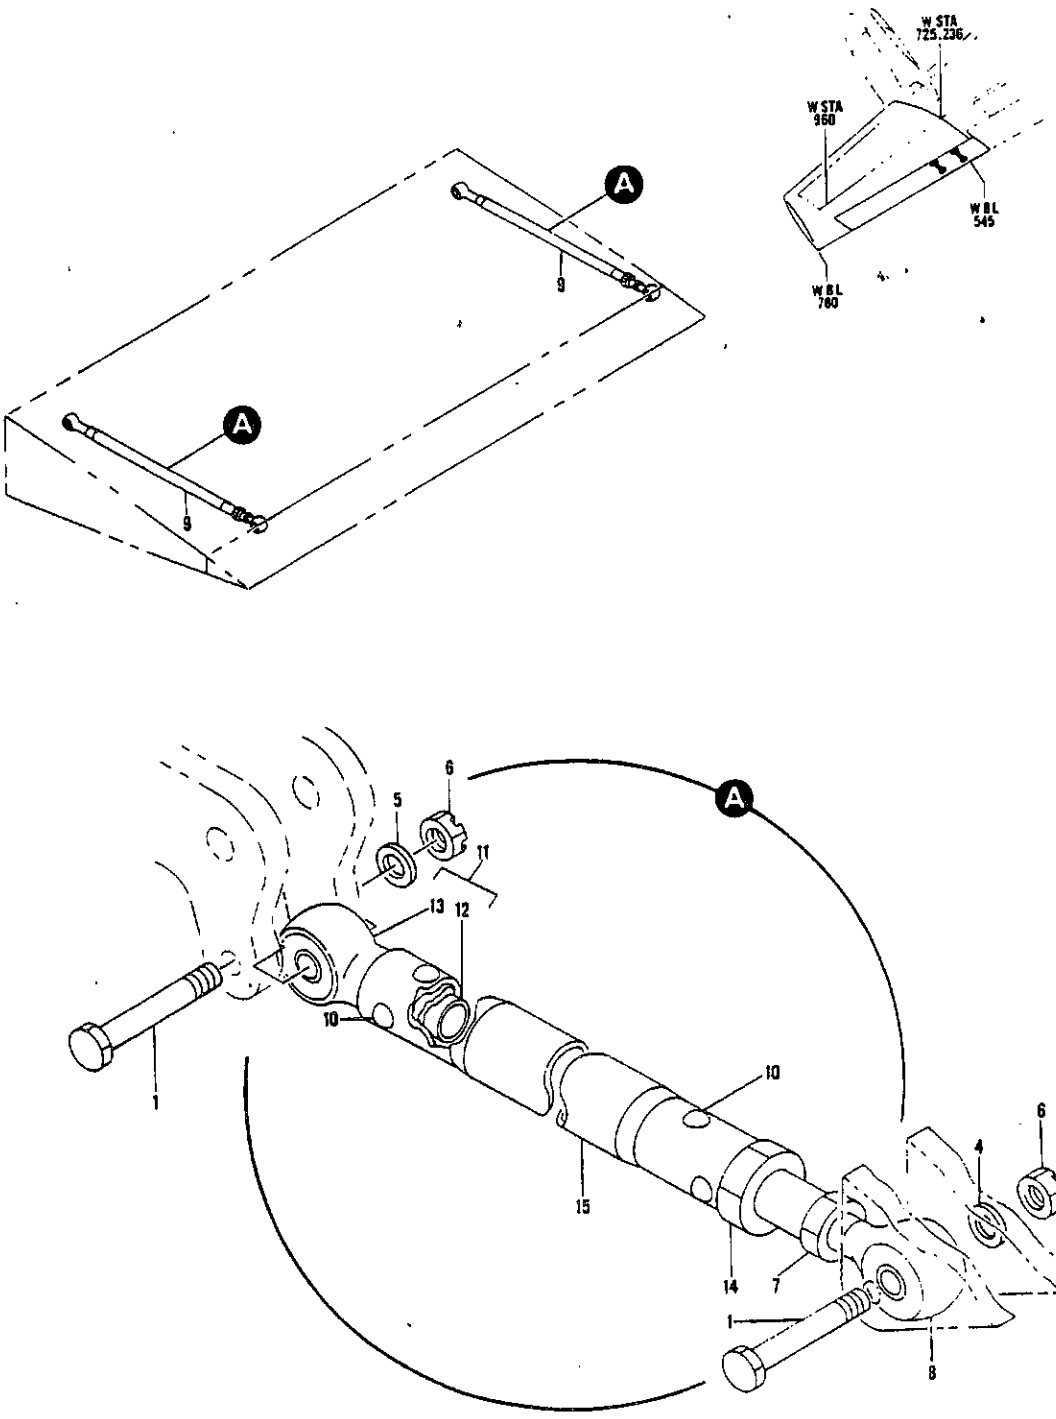


FIGURE 26. CONTROL INSTL, AILERON AND SPOILER

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
26	50-8701-39	CONTROL INSTL, AILERON AND SPOILER LH (SEE 57-1, FIG. 1, ITEM 24)		RF
	50-8701-139	CONTROL INSTL, AILERON AND SPOILER RH (SEE 57-1, FIG. 1, ITEM 24)		RF
1	NAS1104-15DW	. BOLT.		4
4	AN960D416L	. WASHER.		2
5	AN960D416	. WASHER.		2
6	AN320-4	. NUT		4
7	NAS509-6	. NUT		2
8	BACB10A436	. BEARING		2
9	90-2377-3008	. ROD ASSY, CONTROL		2
10	AN470D6	. . RIVET, (USED ON 90-2377-3008)		4
11	60-2293	. . BEARING ASSY, ROD END BALL.		1
12	60-2293-1	. . . PLUG, ROD END BALL BEARING.		1
13	BACB10A457	. . . BEARING		1
14	60-2271-2003	. . PLUG, THREADED ROD END.		1
15	90-2377-2007	. . ROD, CONTROL.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

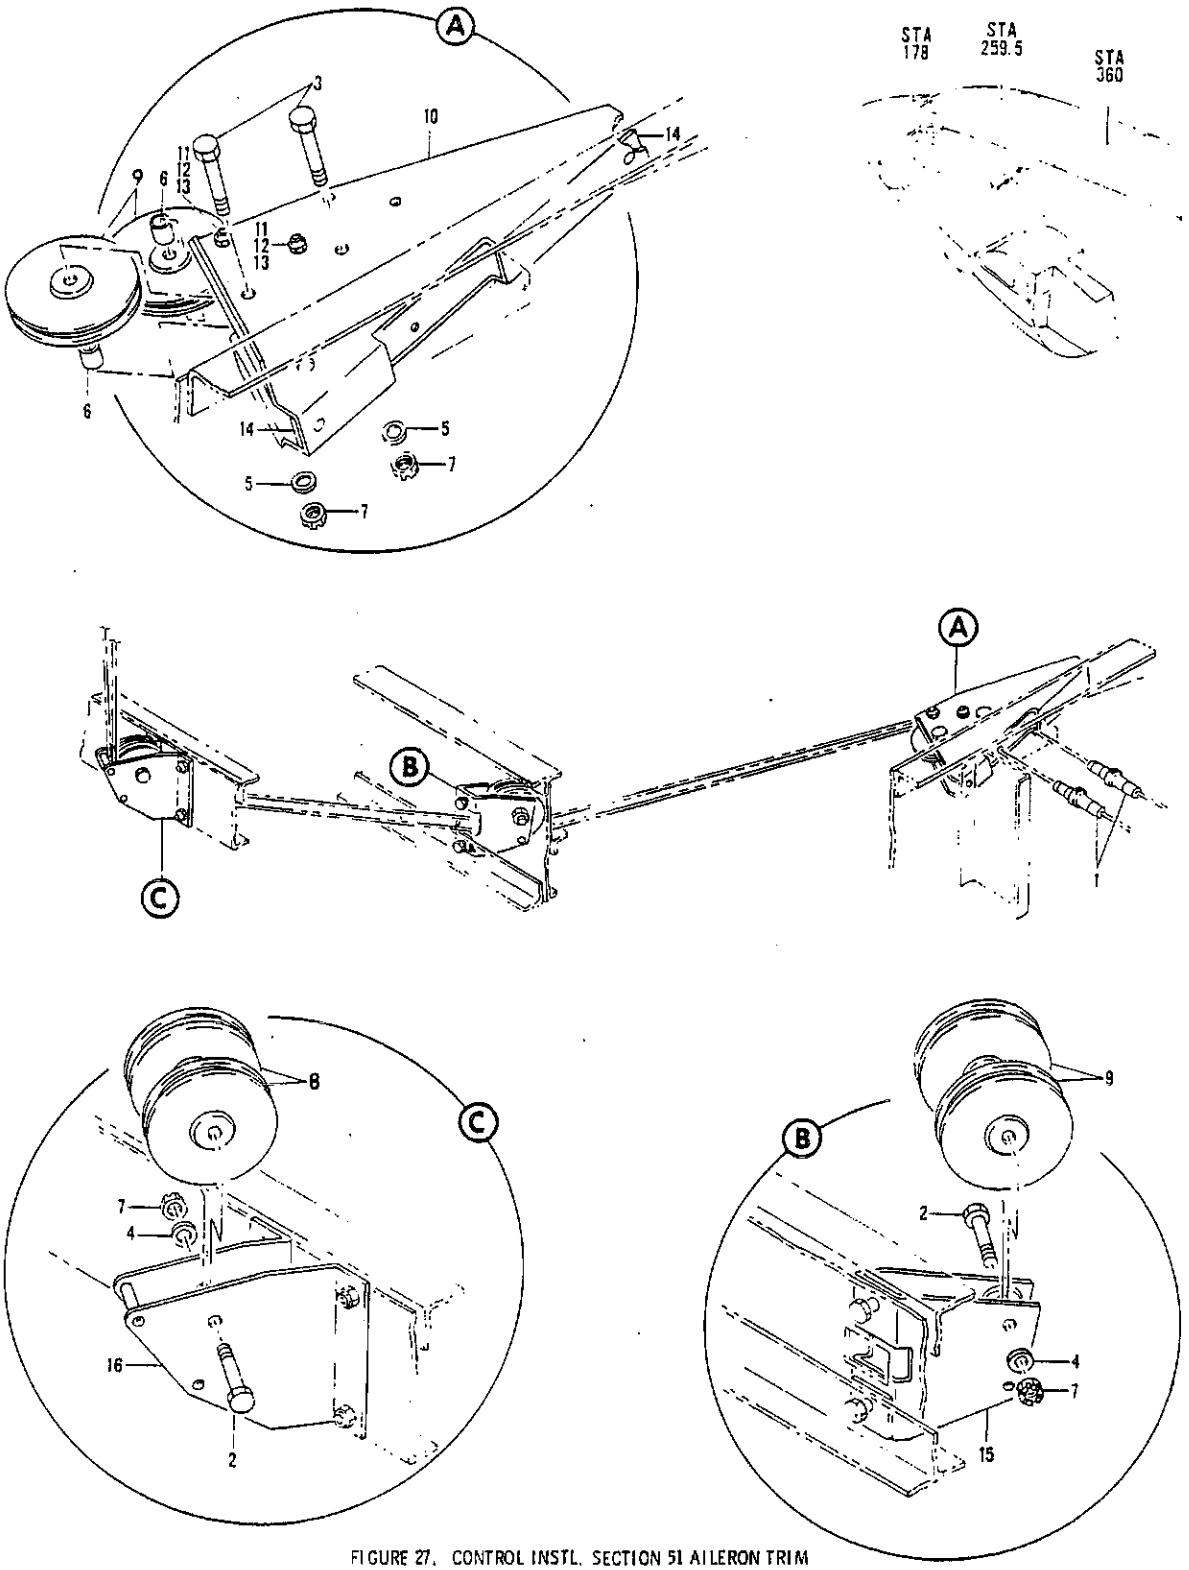


FIGURE 27. CONTROL INSTL. SECTION 51 AILERON TRIM

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
27	50-8705-351	CONTROL INSTL, SECTION 51 AILERON TRIM (SEE 53-1, FIG. 1, ITEM 2 AND 53-1, FIG. 6, ITEM 13)		RF
	65-1384-2	. BRACKET INSTL, SECTION 51 AILERON TRIM PULLEY		1
2	NAS1104-16DW	. . BOLT.		2
3	NAS1104-17DW	. . BOLT.		2
4	AN960D416	. . WASHER.		2
5	AN960D416L	. . WASHER.		2
6	NAS43DD4-33	. . SPACER.		2
7	AN320-4	. . NUT		4
8	MS20219-4	. . PULLEY.		2
9	MS20219-4	. . PULLEY.		4
10	69-1064-4	. . BRACKET ASSY, STATION 259.5 AILERON TRIM PULLEY . .		1
11	NAS221-14	. . . SCREW		2
12	NAS42DD6-26	. . . SPACER.		2
13	NAS679A3W	. . . NUT		2
14	50-3361-3066	. . FILLER, CONTROLS RADIUS		2
15	66-1038	. . BRACKET ASSY, RIGHT BUTTOCK LINE 15.33 AILERON TRIM PULLEY		1
		ATTACHING PARTS		
	NAS1104-6W	. . BOLT.		1
	NAS1104-7W	. . BOLT.		1
	AN960D416	. . WASHER.		1
	AN960D416L	. . WASHER.		1
	50-3361-3081	. . FILLER, CONTROLS RADIUS		1
	65-1384-1	. . FILLER, SECTION 51 AILERON TRIM PULLEY BRACKET. . .		1
	NAS679A4W	. . NUT		2
		-------*-------		
16	66-1032-8	. . BRACKET ASSY, RIGHT BUTTOCK LINE 3.58 AILERON TRIM PULLEY		1
		ATTACHING PARTS		
	NAS221-9	. . SCREW		2
	NAS221-10	. . SCREW		2
	NAS679A3W	. . NUT		4
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

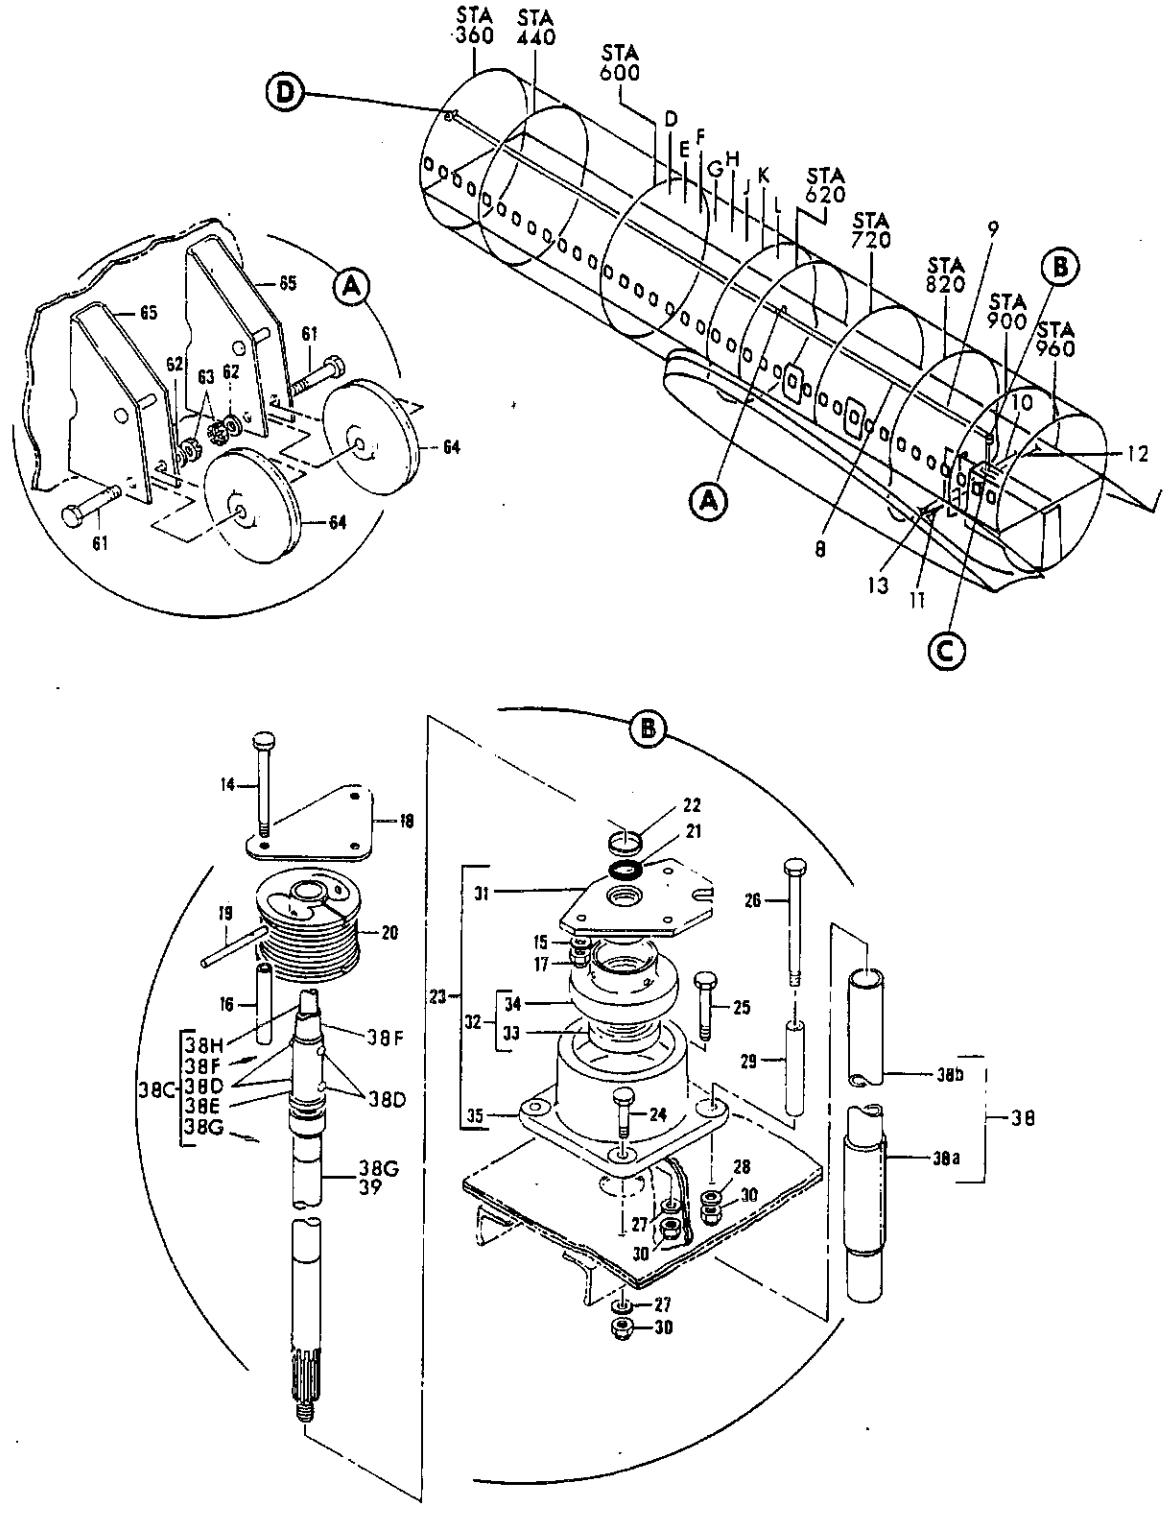


FIGURE 28. CONTROL INSTL, SECTION 53 AILERON TRIM (SHEET 1)

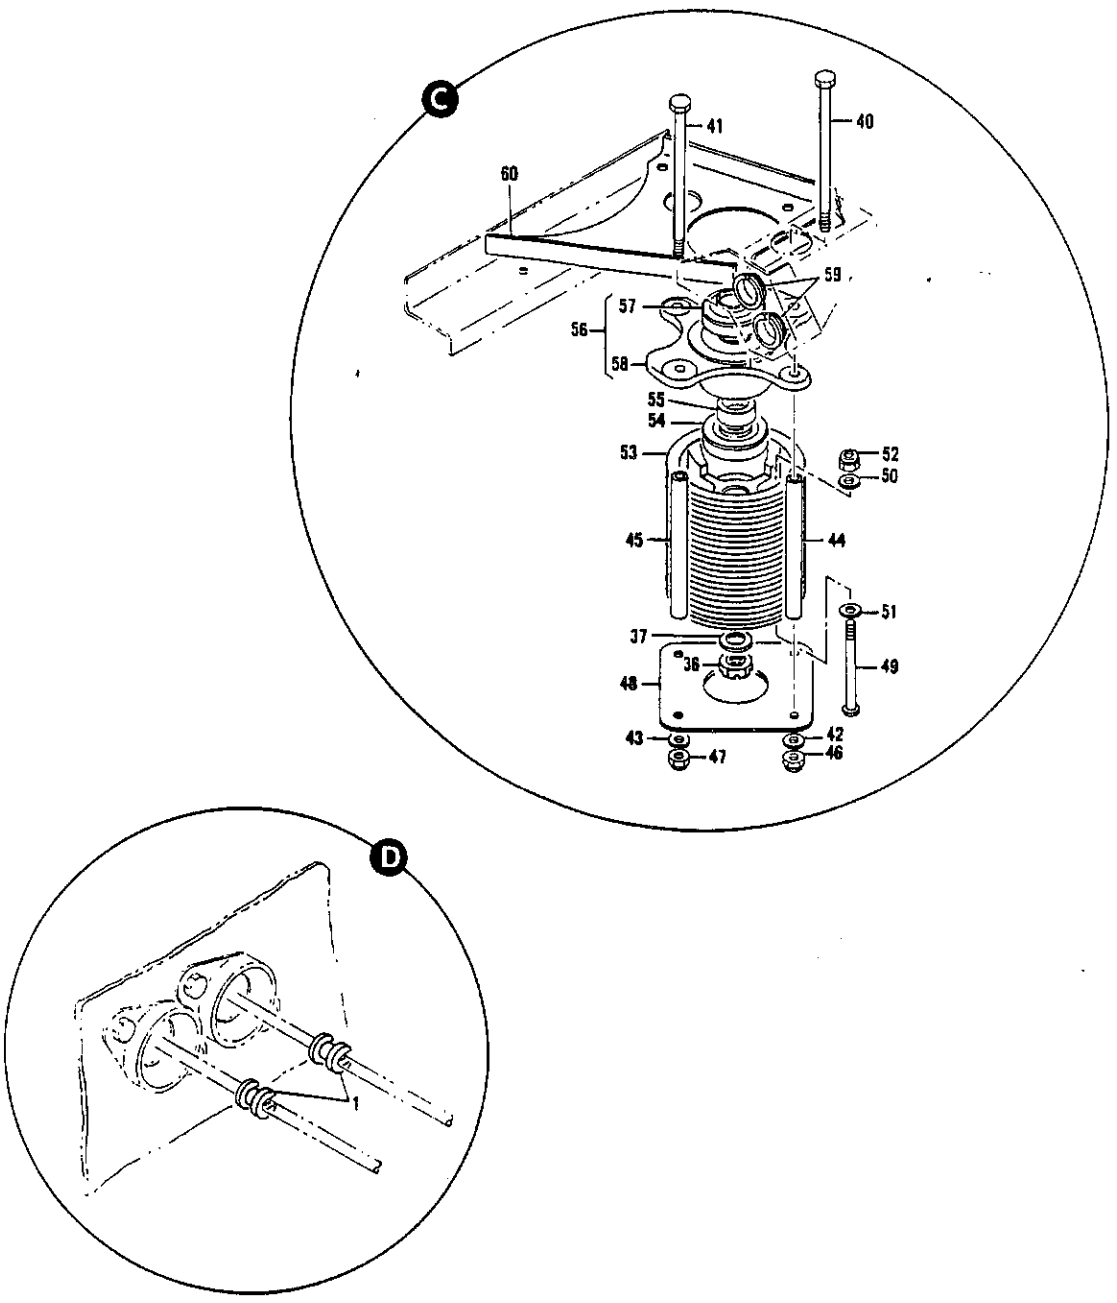


FIGURE 28. CONTROL INSTL, SECTION 53 AILERON TRIM (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	28	50-8705-353	CONTROL INSTL, SECTION 53 AILERON TRIM (SEE 53-1, FIG. 2, ITEM 6 AND FIG. 5, ITEM 3)		RF
	1	3-27673	. STOP, 3/32 DIAMETER CABLE		2
		65-6193	. DRUM INSTL, STATION 820 AILERON TRIM.		1
R R R R R	8	BACC13G319-7230	. CABLE ASSY, (ZINC-ONLY AND TIN-OVER-ZINC COATED CABLES ARE INTERCHANGEABLE AND MAY BE INTERMIXED WITHIN A SYSTEM PROVIDING OPPOSITE CABLES WITHIN A GIVEN CABLE LOOP ARE REPLACE WITH CABLES OF THE SAME TYPE) (PER SL20-15)		1
		AN669L3LH	. . . TERMINAL.		1
		BACT14A3	. . . TERMINAL.		1
	9	BACC13G320-7230	. . CABLE ASSY.		1
		AN669L3RH	. . . TERMINAL.		1
		BACT14A3	. . . TERMINAL.		1
	10	BACC13G320-3135	. . CABLE ASSY.		1
	11	BACC13G319-3760	. . CABLE ASSY.		1
		AN669L3LH	. . . TERMINAL, (USED ON BACC13G319-3110 AND -3760)		1
		AN669L3RH	. . . TERMINAL, (USED ON BACC13G320-3135)		1
		BACT14A3	. . . TERMINAL.		1
	12	BACC13G319-3063	. . CABLE ASSY.		1
	13	BACC13G320-3803	. . CABLE ASSY.		1
		AN669L3RH	. . . TERMINAL, (USED ON BACC13G320-3088 AND -3803)		1
		AN669L3LH	. . . TERMINAL, (USED ON BACC13G319-3063)		1
		BACT14A3	. . . TERMINAL.		1
	14	AN3-23A	. . BOLT.		3
	15	AN960D10L	. . WASHER.		3
	16	NAS42DD6-122	. . SPACER.		3
	17	NAS679A3	. . NUT		3
	18	6-65858-1	. . GUARD, AILERON TRIM DRUM.		1
	19	3-85994	. . PIN, RUDDER TRIM DRUM		1
	20	5-89328	. . DRUM, AILERON TRIM CONTROL STAND.		1
	21	NAS1612-10	. . PACKING		1
	22	90-2295-2	. . RING, LOW PRESSURE ROTARY SEAL.		1
	23	60-2778	. . HOUSING ASSY, AILERON TRIM DRUM SHAFT BEARING ATTACHING PARTS		1
	24	AN3-7A	. . BOLT.		2
	25	AN3-10A	. . BOLT.		1
	26	AN3-32A	. . BOLT.		1
	27	AN960D10	. . WASHER.		3
	28	AN960D10L	. . WASHER.		1
	29	NAS42DD6-152	. . SPACER.		1
	30	NAS679A3W	. . NUT -------*-------		4
	31	60-2777	. . . RETAINER, AILERON TRIM DRUM SHAFT SEAL. ATTACHING PARTS		1
		BACR15F162C4-4	. . . RIVET (OPT BACR15B4-12)		3
		BACR15B4-12	. . . RIVET, (OPT TO BACR15F162C4-4) -------*-------		3
	32	9-53116-2	. . . HOUSING ASSY, AILERON TRIM DRUM SHAFT SEAL. BEARING		1
	33	AN201KP10A	. . . . BEARING		1
	34	9-53116-4	. . . . HOUSING, AILERON TRIM DRUM SHAFT BEARING.		1
	35	9-66052	. . . HOUSING, AILERON TRIM DRUM SHAFT BEARING BASE		1
	36	AN320D7	. . NUT		1
	37	AN960D716	. . WASHER.		1
	38	66-8330	. . SPACER ASSY, AILERON TRIM DRUM SHAFT.		1
	38A	66-8330-2	. . . GUARD, AILERON TRIM DRUM SHAFT SPACER		1
	38B	66-8330-1	. . . SPACER, AILERON TRIM DRUM SHAFT		1
	39	9-64530-3001	. . SHAFT, AILERON TRIM DRUM.		1
	40	AN3-43A	. . BOLT.		2
	41	AN4-44A	. . BOLT.		2
	42	AN960D10L	. . WASHER.		2
	43	AN960D416	. . WASHER.		2
	44	NAS42DD6-240	. . SPACER.		2
	45	NAS43DD4-240	. . SPACER.		2
	46	NAS679A3W	. . NUT		2
	47	NAS679A4W	. . NUT		2
	48	3-93337-2000	. . GUARD, AILERON TRIM DRUM.		1
	49	NAS603-40	. . SCREW		1
	50	AN960D10L	. . WASHER.		1
	51	BACW10P69S	. . WASHER.		1
	52	NAS679A3W	. . NUT		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
28 53	5-89870-2002	. . DRUM, AILERON TRIM LOWER.		1
53	5-89870-2002	. . DRUM, AILERON TRIM LOWER.		1
54	AN201KP10A	. . BEARING		1
55	NAS43HT10-24	. . SPACER.		1
56	9-64392-3002	. . HOUSING ASSY, AILERON TRIM DRUM SUPPORT		1
57	AN201KP10A	. . . BEARING		1
58	9-64392-2007	. . . HOUSING, AILERON TRIM DRUM SUPPORT (USED ON 9-64392-3002)		1
59	BACG20H3N	. . GROMMET		2
60	69-5793	. . BRACKET, AILERON TRIM CONTROL SUPPORT		1
		ATTACHING PARTS		
	AN4-5A	. . BOLT.		2
	AN960D416	. . WASHER.		4
	NAS679A4W	. . NUT		2
		-------*-------		
	50-8723-6	. PULLEY INSTL, STATION 620 AILERON TRIM CABLE IDLER.		1
61	BACB30NF4-9	. . BOLT.		2
62	AN960D416	. . WASHER.		2
63	BACN10JC4	. . NUT		2
64	NAS530	. . PULLEY.		2
65	60-4433	. . BRACKET ASSY, IDLER PULLEY CONTROL.		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

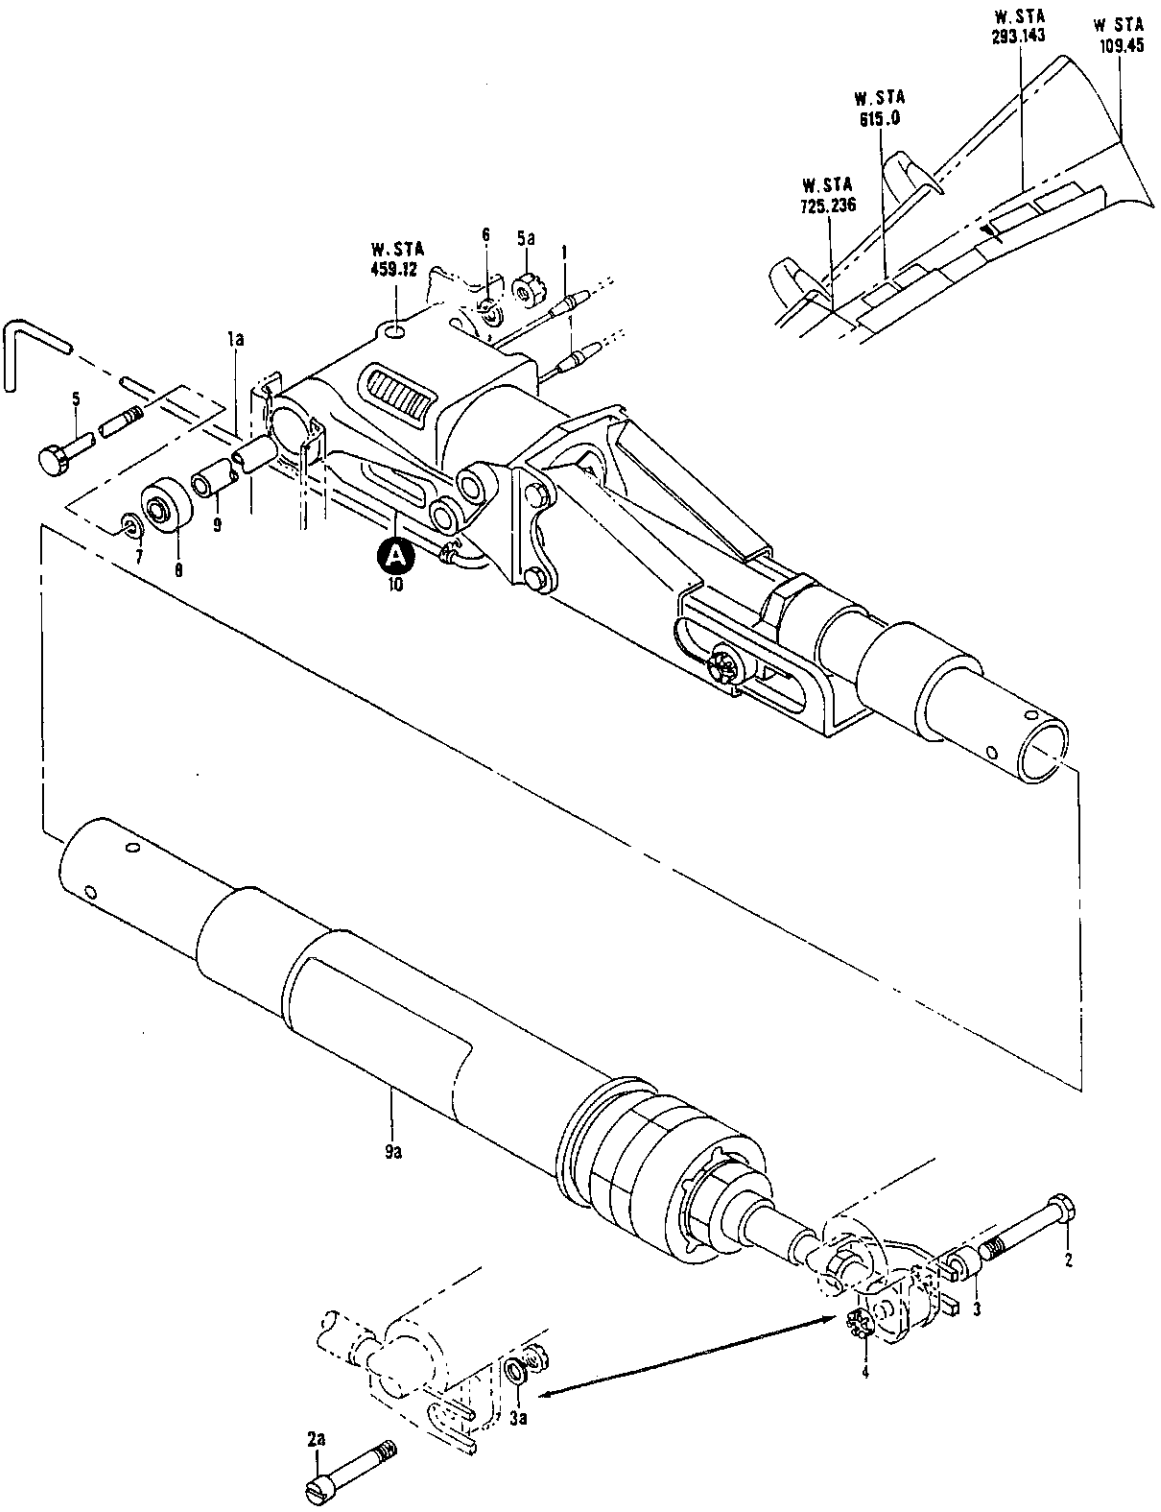


FIGURE 29. CONTROL INSTL, SECTION 26 AILERON TRIM (SHEET 1)

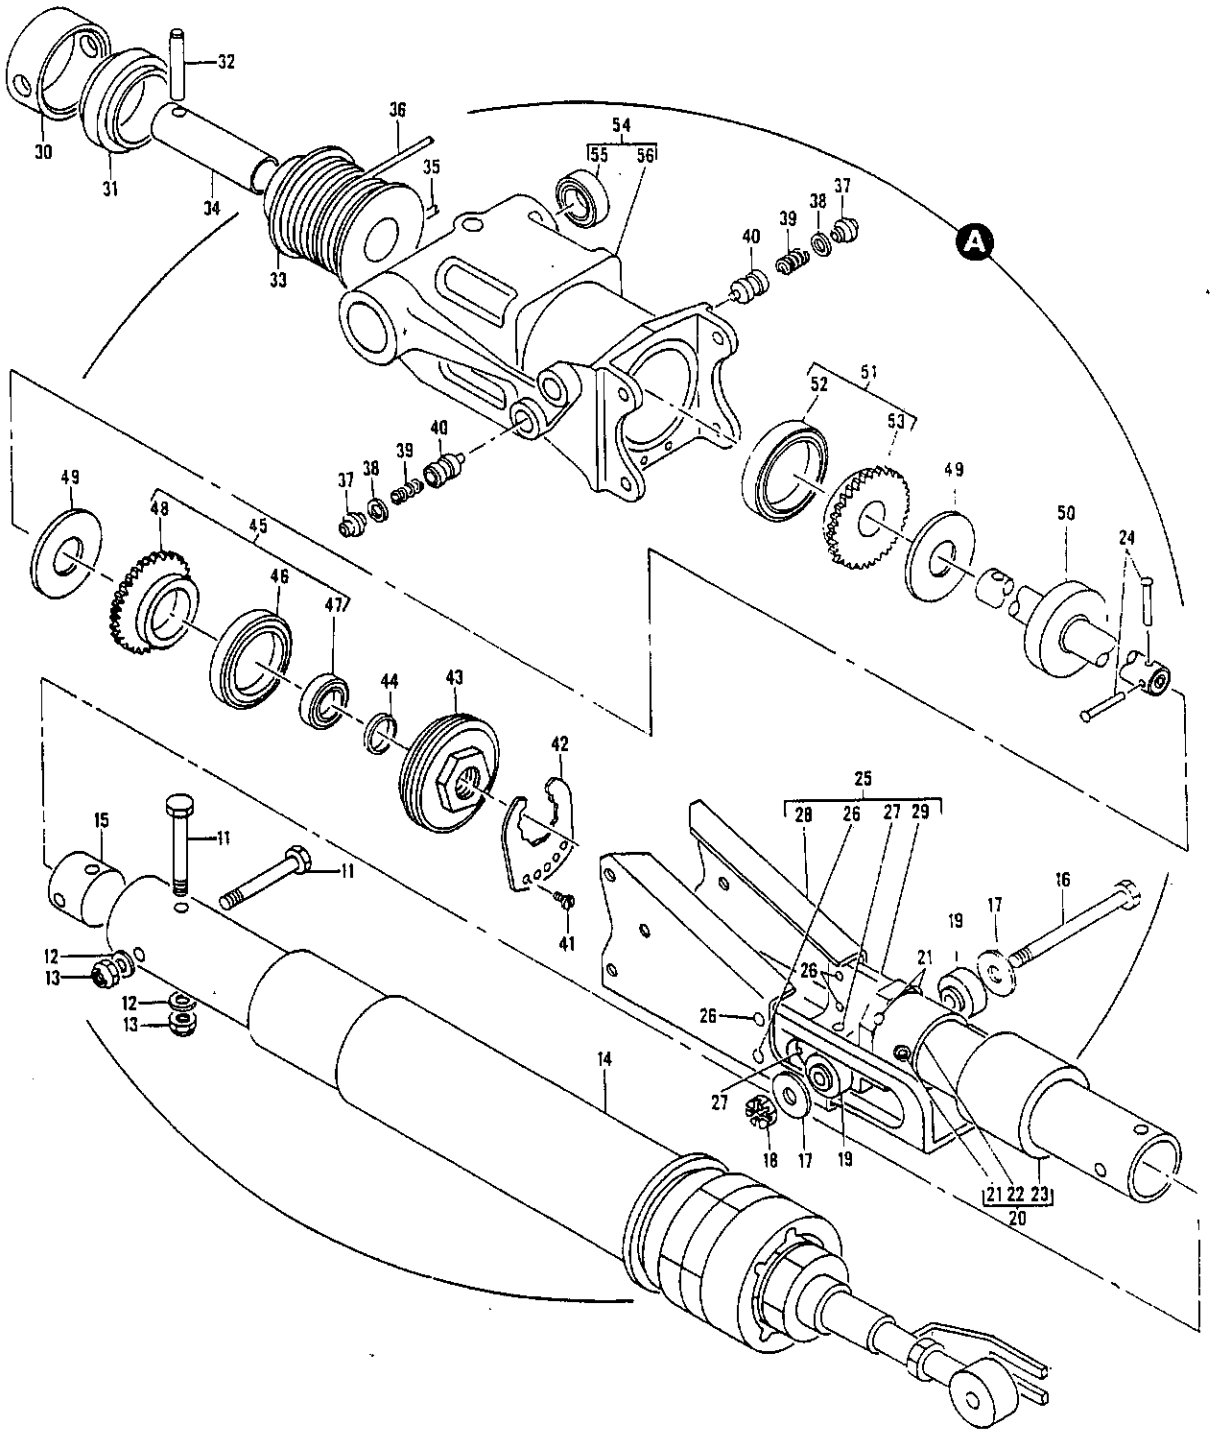


FIGURE 29. CONTROL INSTL, SECTION 26 AILERON TRIM (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	29	50-8705-326	CONTROL INSTL, SECTION 26 AILERON TRIM LH (SEE 57-3, FIG. 1, ITEM 14)		RF
		50-8705-426	CONTROL INSTL, SECTION 26 AILERON TRIM RH (SEE 57-3, FIG. 1, ITEM 14)		RF
	1	AN155-16L	. BARREL		2
R	1A	65-57294-1	. DRAIN INSTL, INBOARD AILERON TRIM TAB MECHANISM (LH ONLY) (SEE FIG. 31)	5199	1
RRR	1A	65-57294-1	. DRAIN INSTL, INBOARD AILERON TRIM TAB MECHANISM (LH ONLY) (DELETED BY SB 3166) (SEE FIG. 31)	0150	1
RRR	1A	65-57294-2	. DRAIN INSTL, INBOARD AILERON TRIM TAB MECHANISM (RH ONLY) (SEE FIG. 31)	5199	1
RRR	1A	65-57294-2	. DRAIN INSTL, INBOARD AILERON TRIM TAB MECHANISM (RH ONLY) (DELETED BY SB 3166) (SEE FIG. 31)	0150	1
		65-74039-7	. MECHANISM INSTL, INBOARD AILERON TAB CONTROL (LH. . . ONLY)		1
		65-74039-8	. MECHANISM INSTL, INBOARD AILERON TAB CONTROL (RH. . . ONLY)		1
	2	NAS1105-23DW	. . BOLT, (RH ONLY)		1
	2A	66-10907	. . BOLT, INBOARD AILERON SPECIAL (LH ONLY)		1
	3	NAS43HT5-20	. . SPACER, (RH ONLY)		1
	3A	AN960D516	. . WASHER, (LH ONLY)		1
	4	AN320-5	. . NUT		1
	5	AN174-47	. . BOLT		1
	5A	AN320-4	. . NUT		1
	6	AN960D416L	. . WASHER		AR
	7	AN960D416	. . WASHER		1
	8	AN200KP4	. . BEARING		1
	9	NAS42DD8-208	. . SPACER		1
	10	65-74038-43	. . MECHANISM ASSY, (LH ONLY)	0103	1
R	10	65-74038-43	. . MECHANISM ASSY, (DELETED BY SB 3033) (LH ONLY)	0450	1
RR	10	65-74038-47	. . MECHANISM ASSY, (LH ONLY)	5199	1
R	10	65-74038-47	. . MECHANISM ASSY, (ADDED BY SB 3033) (LH ONLY)	0450	1
	10	65-74038-46	. . MECHANISM ASSY, (RH ONLY)	0103	1
R	10	65-74038-46	. . MECHANISM ASSY, (DELETED BY SB 3033) (RH ONLY)	0450	1
RR	10	65-74038-48	. . MECHANISM ASSY, (RH ONLY)	5199	1
R	10	65-74038-48	. . MECHANISM ASSY, (ADDED BY SB 3033) (RH ONLY)	0450	1
	11	NAS1103-25W	. . . BOLT		2
	12	AN960-10	. . . WASHER		2
	13	NAS679A3W	. . . NUT		2
	14	5-66177-3012	. . . CARTRIDGE ASSY, INBOARD AILERON SPRING (USED ON 65-74038-29 AND -43) (SEE FIG. 29A)	0103	1
R	14	5-66177-3027	. . . CARTRIDGE ASSY, SPRING (LH ONLY) (SEE FIG. 29A)	5199	1
RR	14	5-66177-3027	. . . CARTRIDGE ASSY, SPRING (ADDED BY SB 3033) (LH ONLY) (SEE FIG. 29A)	0450	1
	14	5-66177-3022	. . . CARTRIDGE ASSY, INBOARD AILERON SPRING (RH ONLY) (SEE FIG. 29A)	0103	1
R	14	5-66177-3022	. . . CARTRIDGE ASSY, SPRING (DELETED BY SB 3033) (RH ONLY) (SEE FIG. 29A)	0450	1
RR	14	5-66177-3028	. . . CARTRIDGE ASSY, SPRING (RH ONLY) (SEE FIG. 29A)	5199	1
RR	14	5-66177-3028	. . . CARTRIDGE ASSY, SPRING (ADDED BY SB 3033) (RH ONLY) (SEE FIG. 29A	0450	1
	15	3-84438	. . . PLUG, RUDDER TRIM CONTROL ACTUATOR SEAL		1
	16	NAS1104-42DW	. . . BOLT		1
	17	BACW10P71S	. . . WASHER		2
	18	AN320-4	. . . NUT		1
	19	AN200KP4	. . . BEARING		2
	20	65-74038-3	. . . SCREW AND ARM ASSY, INBOARD AILERON CONTROL TAB MECHANISM		1
	21	MS20470D5-5	. . . . RIVET		3
	22	6-64674-2000	. . . . ARM, INBOARD AILERON TRIM TAB MECHANISM ROLLER		1
	23	10-60173-1	. . . . ACTUATOR ASSY, BALL BEARING (OPTIONAL 10-60173-2)		1
	23	10-60173-2	. . . . ACTUATOR ASSY, BALL BEARING (OPTIONAL TO 10-60173-1)		1
	24	NAS508M5-16	. . . RIVET		2
	25	65-74038-4	. . . SUPPORT ASSY, INBOARD AILERON CONTROL TAB MECHANISM ROLLER		1
			ATTACHING PARTS		
		NAS1104-4W	. . . BOLT		4
		AN960D416	. . . WASHER		4
		NAS679A4W	. . . NUT		4
			-------*-------		
	26	MS20470D5	. . . . RIVET		4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
29 27	MS20426D5	. . . . RIVET		4
28	66-35034	. . . . SUPPORT, INBOARD AILERON TRIM TAB MECHANISM		1
29	66-35032	. . . . SUPPORT, INBOARD AILERON TRIM TAB MECHANISM ROLLER		1
30	30-2221	. . . SPACER, INBOARD AILERON TRIM TAB MECHANISM. RETAINER		1
31	AN202KP23B	. . . BEARING		1
32	3-89073-1	. . . PIN, 1/4 IN. DIA CLOSE TOLERANCE.		1
33	65-13196	. . . DRUM, (USED ON 65-74038-12, -13, -20, -21, -25, -26, -29, -30, -34, -36, -40, -43, -44, -46, -47, -48, -49, AND -50)		1
35	BACC13G320-1487	. . . CABLE ASSY, (ATA) (USED ON 65-74038-12, -20, -25, -29, -43 AND -47)		1
35	BACC13G319-1467	. . . CABLE ASSY, (ATA) (USED ON 65-74038-13, -21, -26, -30, -34, -36, -40, -44, -46 AND -48)		1
36	BACC13G319-1467	. . . CABLE ASSY, (ATB) (USED ON 65-74038-12, -20, -25, -29, -43 AND -47)		1
36	BACC13G320-1487	. . . CABLE ASSY, (ATB) (USED ON 65-74038-13, -21, -26, -30, -34, -36, -40, -44, -46 AND -48)		1
37	3-53245-1	. . . RETAINER, AILERON TAB BRAKE SPRING.		4
38	NAS50-43	. . . RING.		4
39	3-53244-1	. . . SPRING, AILERON TAB BRAKE RATCHET		4
40	6-36734-1	. . . PLUNGER, AILERON TAB BRAKE RATCHET.		4
41	AN500A8-6	. . . SCREW		1
42	3-60588-2001	. . . RETAINER, ACTUATOR TAB NUT.		1
43	3-48179-1	. . . NUT, BRAKE SCREW RETAINER		1
44	3-53457-1	. . . SEAL, AILERON TAB BREAK HOUSING		1
45	90-4011-1	. . . PLATE ASSY, BRAKE SCREW		1
46	BACB10A30DD	. . . . BEARING		1
47	BACB10A27DD	. . . . BEARING		1
48	90-4011-3	. . . . PLATE, BRAKE SCREW.		1
49	3-48230-1	. . . WASHER, BRAKE SCREW THRUST (ALTERED FROM T1702. (V70417))		2
50	60-2872	. . . SHAFT, INBOARD AILERON MECHANISM.		1
51	90-4011-2	. . . PLATE ASSY, BRAKE SCREW		1
52	BACB10A30DD	. . . . BEARING		1
53	90-4011-4	. . . . PLATE, BRAKE SCREW.		1
54	50-3145-3009	. . . HOUSING ASSY.		1
55	AN200KP4	. . . . BEARING		1
56	50-3145-3010	. . . . HOUSING		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

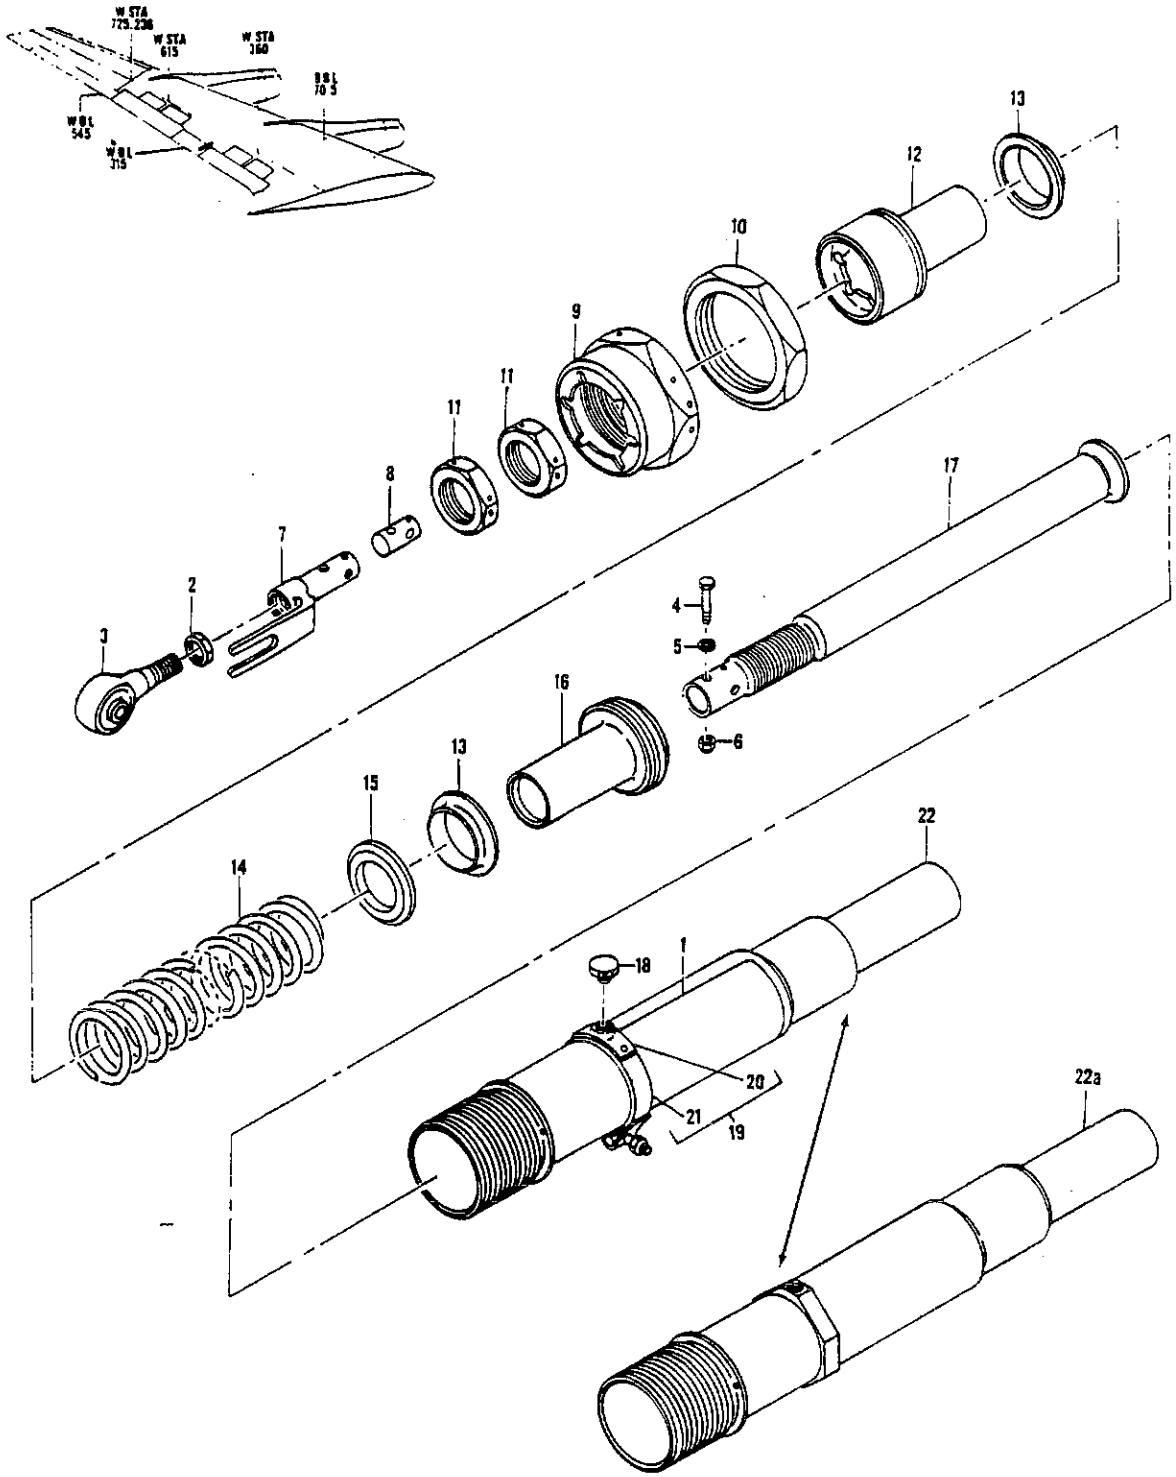
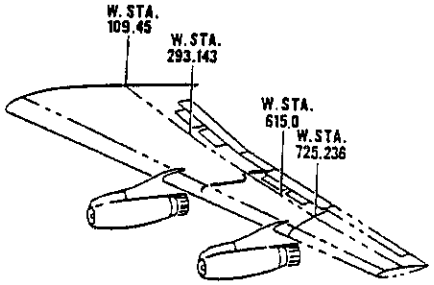


FIGURE 29A. CARTRIDGE ASSY, INBOARD AILERON SPRING

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R	29A	5-66177-3027	CARTRIDGE ASSY, INBOARD AILERON SPRING (LH) (ADDED BY SB 3033) (SEE FIG. 29, ITEM 14)	0450	RF
R R R R	1	BACM10L6M	. MARKER, LUBRICATION (400 HRS.) ALUMINUM FOIL (USED ON 5-66177-3012, -3009, -3013, -3010, -3016, -3018 AND -3022)	0103	1
	2	AN316-7R	. NUT		1
	3	BACB10A74	. BEARING		1
	4	NAS1103-12W	. BOLT		2
	5	AN960D10L	. WASHER		2
	6	NAS679A3W	. NUT		2
	7	6-63220	. FITTING, INBOARD AILERON SPRING CARTRIDGE END		1
	8	3-85999	. PLUG, SHAFT FILLER		1
	9	6-63221-2000	. NUT, INBOARD AILERON SPRING CARTRIDGE RETAINER		1
	10	3-85972-2000	. NUT, INBOARD AILERON SPRING CARTRIDGE CHECK		1
	11	NAS509-16	. NUT		2
	12	6-63222-2001	. RETAINER, INBOARD AILERON SPRING CARTRIDGE (USED ON 5-66177-3012, -3013, -3016, -3018 AND -3022)	0103	1
	12	69-63220-2	. RETAINER, (ADDED BY SB 3033)	0450	1
	12	69-63220-2	. RETAINER, (USED ON 5-66177-3027 AND -3028)	5199	1
	13	66-12416-1	. SPACER,, SPRING CENTERING (USED ON 5-66177-3008, -3013, -3010, -3016, -3018, -3022 AND -3028)		2
	14	63-10560	. SPRING, INBOARD AILERON COMPRESSION (USED ON 5-66177-3007, -3012, -3005, -3009 AND -3027)		1
	14	66-17993-1	. SPRING, COMPRESSION (USED ON 5-66177-3022 AND -3028)		1
	16	6-63223-2001	. RETAINER, INBOARD AILERON SPRING CARTRIDGE (USED ON 5-66177-3012, -3013, -3016, -3018 AND -3022)	0103	1
R R R	17	9-50128-2001	. SHAFT, INBOARD AILERON SPRING CARTRIDGE (USED ON 5-66177-3012, -3013, -3009, -3010, -3016, -3018, -3022, -3027 AND -3028)		1
	18	66-13238-1	. PLUG, INBOARD AILERON SPRING CARTRIDGE (ALTERED FROM AN6H5A) (USED ON 5-66177-3012, -3013, -3009, -3010, -3016, -3018, -3022, -3027 AND -3028)		1
	22A	65-20983-3	. CASING, INBOARD AILERON SPRING CARTRIDGE (USED ON 5-66177-3012 AND -3027)		1
	22A	65-20983-2	. CASING, INBOARD AILERON SPRING CARTRIDGE (USED ON 5-66177-3013, -3018, -3022 AND -3028)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



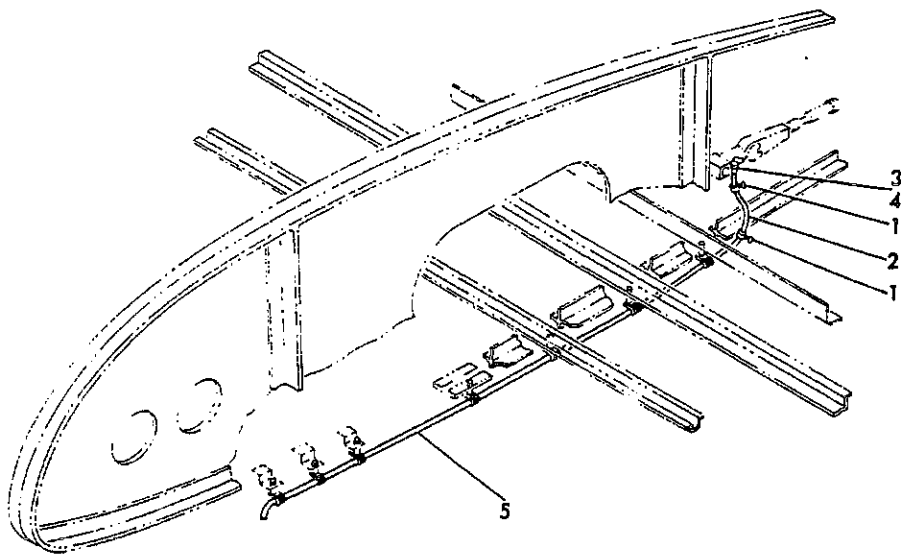


FIGURE 31. DRAIN INSTL., INBOARD AILERON TRIM TAB MECHANISM

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	31	65-57294-1	DRAIN INSTL, INBOARD AILERON TRIM TAB MECHANISM (LH). .		RF
R			(DELETED BY SB 3166) (SEE FIG. 29, ITEM 1A)		
R		65-57294-2	DRAIN INSTL, INBOARD AILERON TRIM TAB MECHANISM (RH). .		RF
R			(DELETED BY SB 3166) (SEE FIG. 29, ITEM 1A)		
	1	AN737TW22	. CLAMP		2
	2	65-57294-5	. HOSE.		1
	3	69-43791-1	. ADAPTER		1
	4	MS20002C6	. WASHER.		1
	5	69-44174-1	. TUBE, DRAIN 3/8 IN. .035 6061-T6 (LH ONLY).		1
	5	69-44174-2	. TUBE, DRAIN 3/8 IN. .035 6061-T6 (RH ONLY).		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING Intercontinental 707

PARTS CATALOG

SECTION 04

SPOILERS

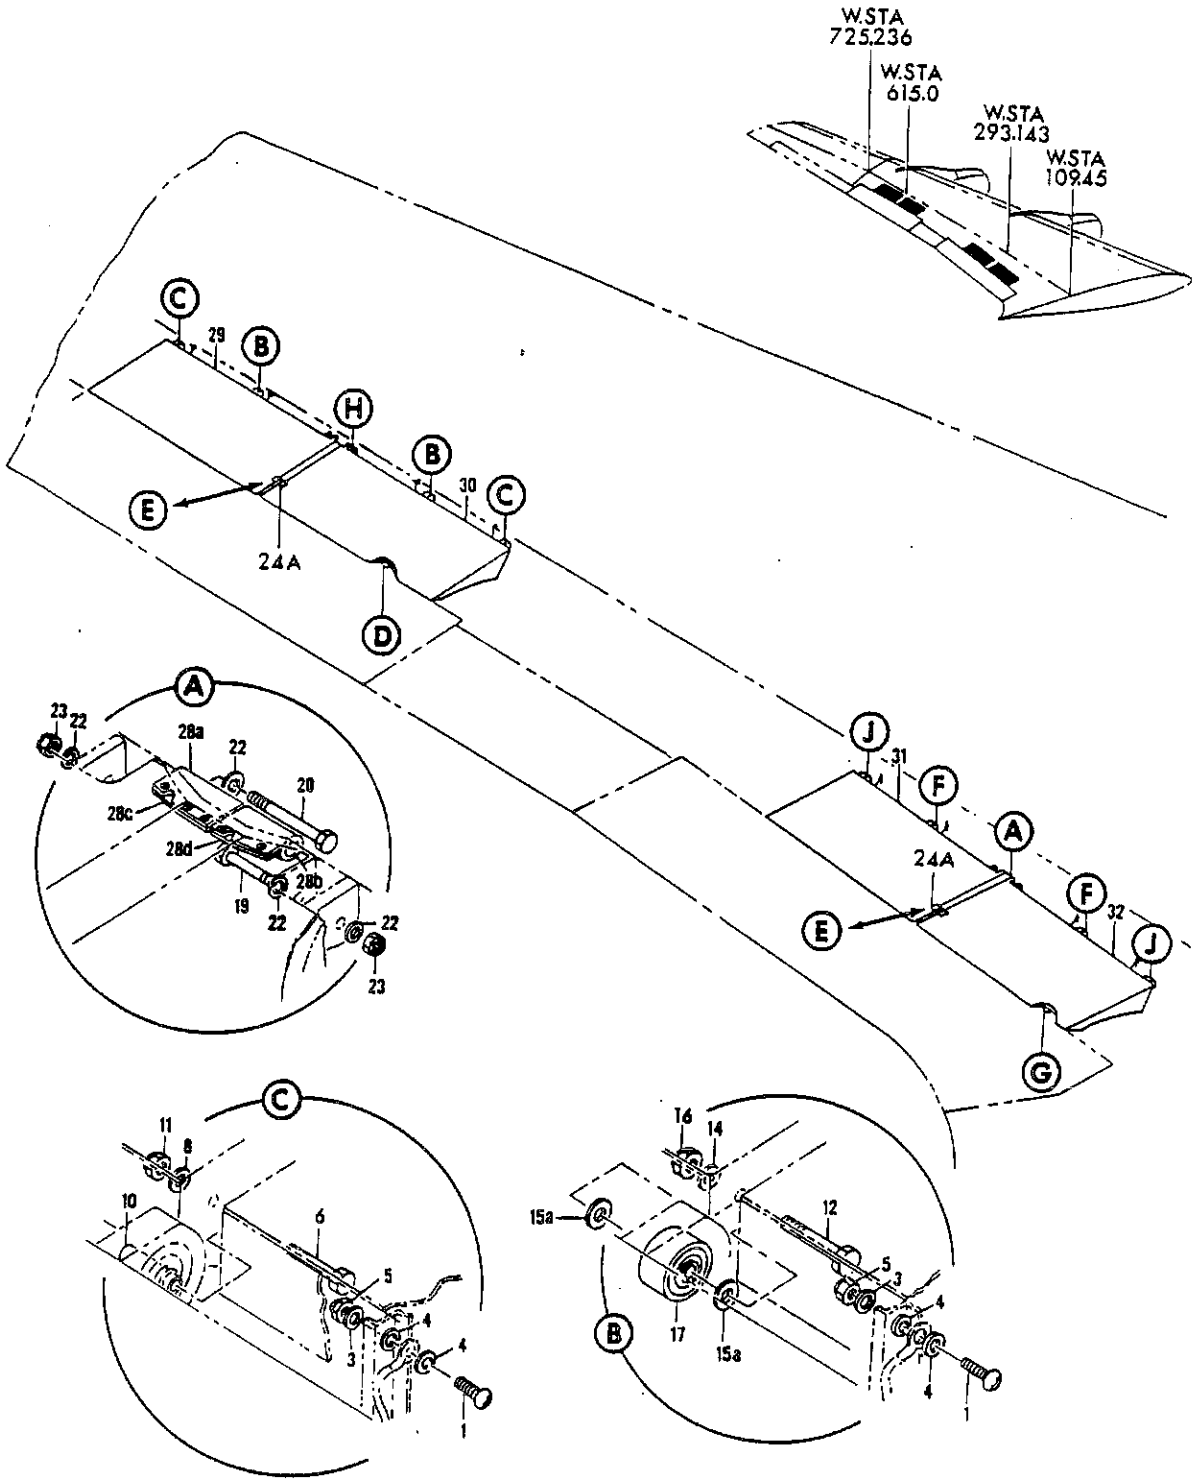


FIGURE 1. SPOILER INSTL (SHEET 1)

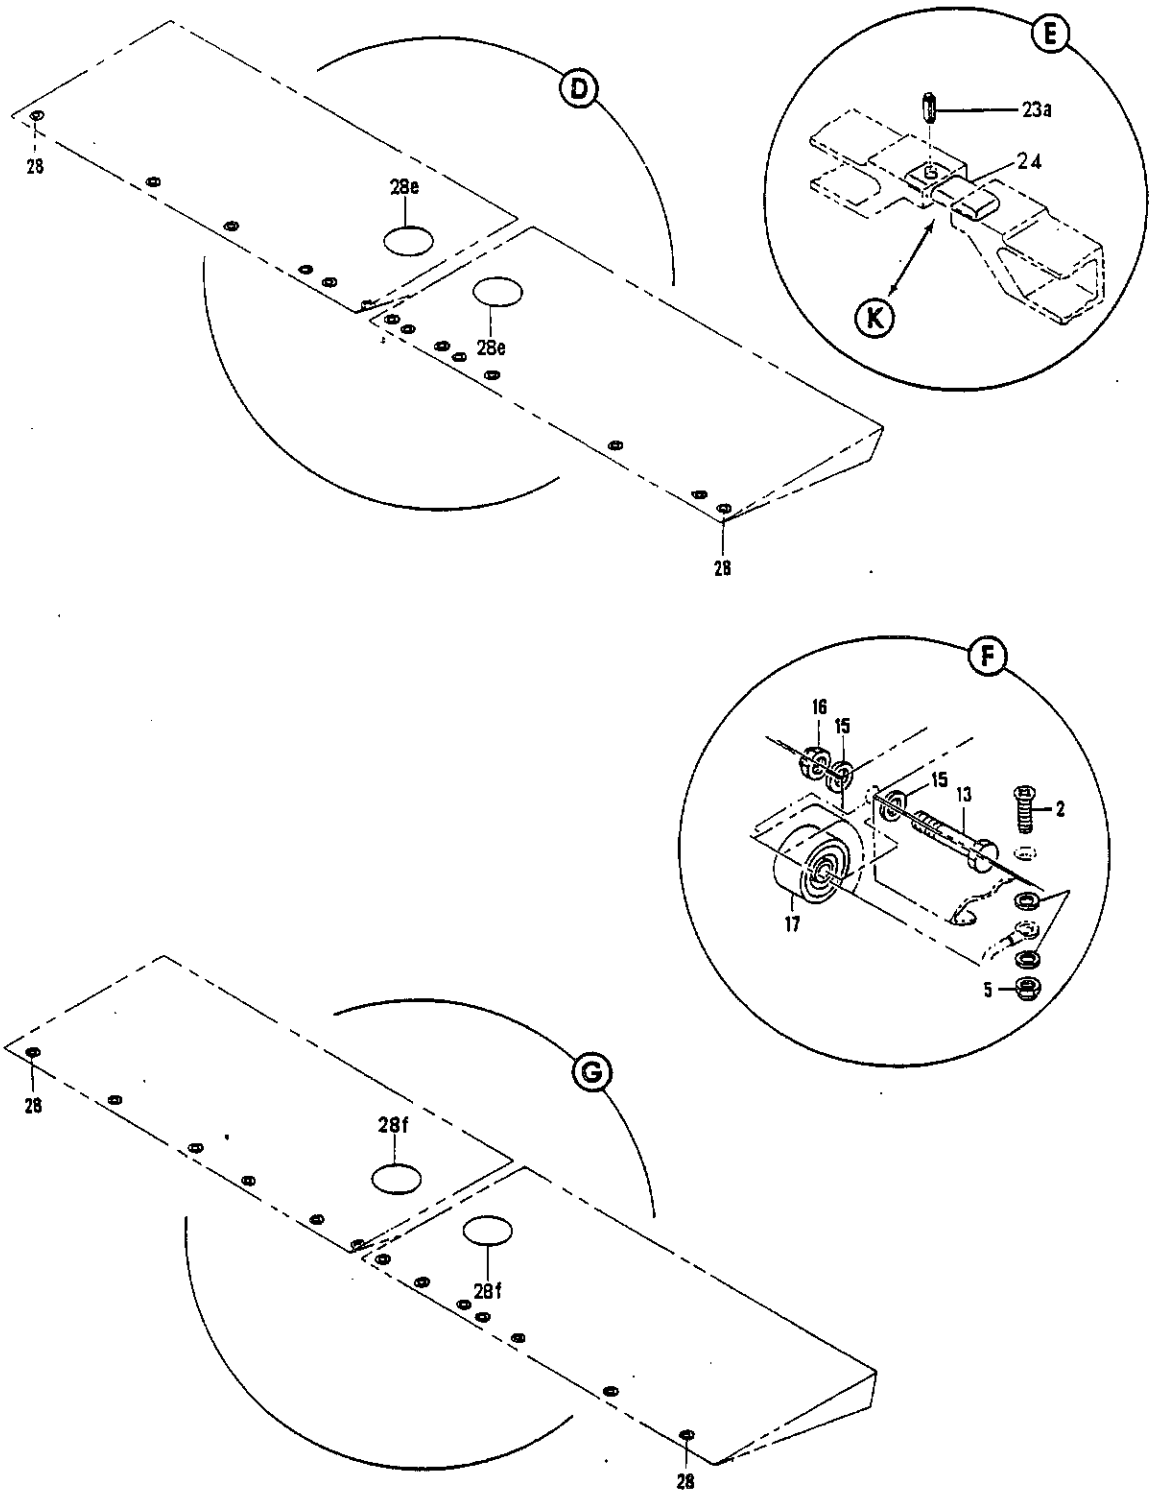


FIGURE 1. SPOILER INSTL, (SHEET 2)

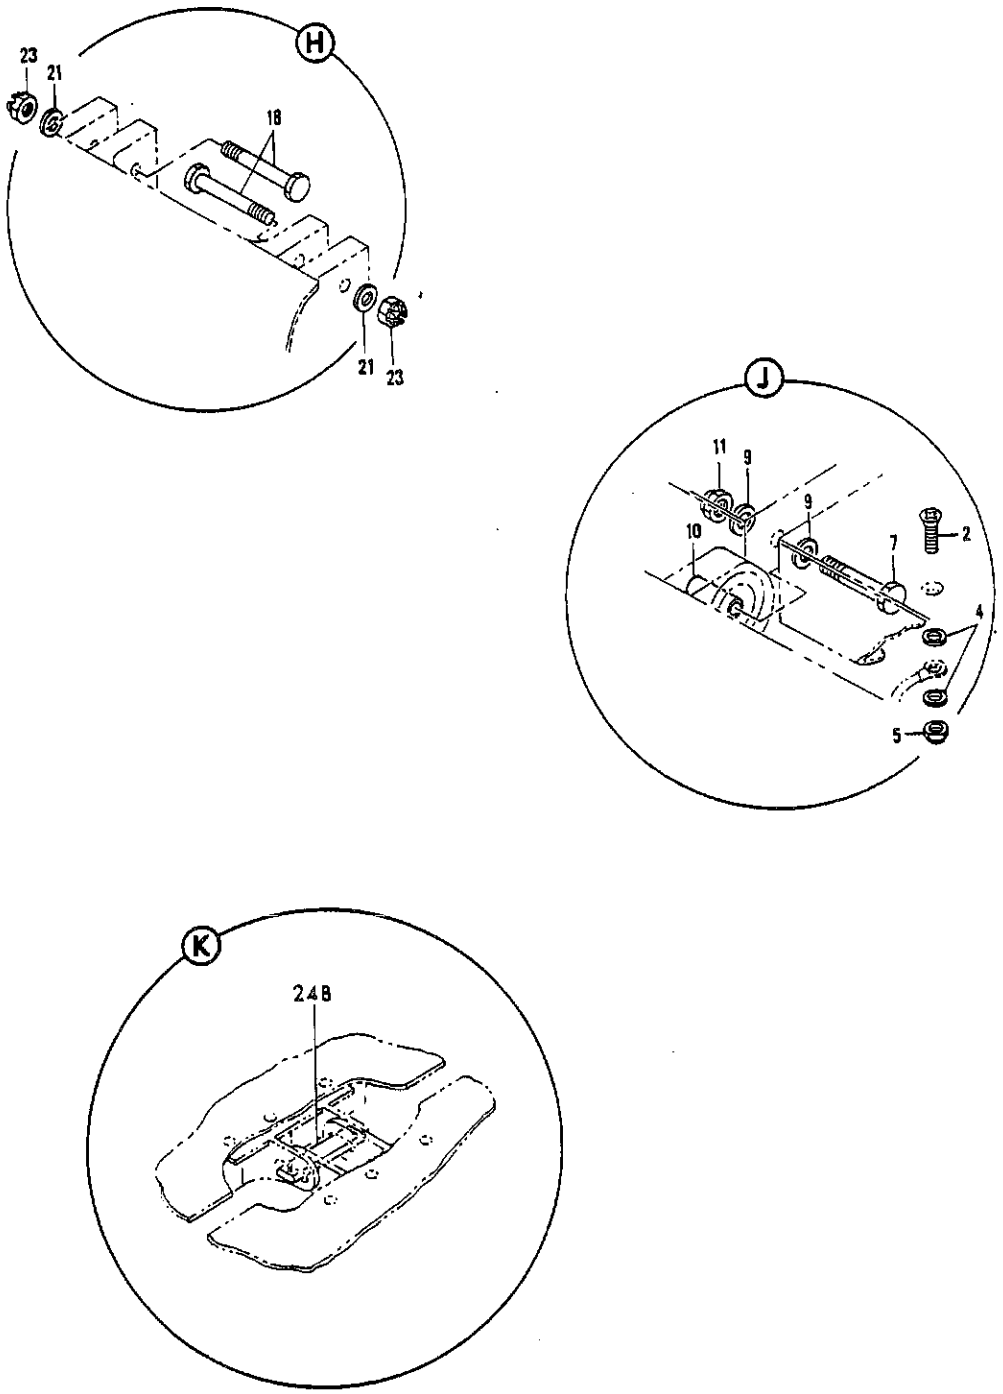


FIGURE 1. SPOILER INSTL. (SHEET 3)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	1	65-1066-1	SPOILER INSTL, (SEE 57-1, FIG. 1, ITEM 16).		RF
		5-84478-3001	. SPOILER INSTL, OUTBOARD LH.		1
		5-84478-3002	. SPOILER INSTL, OUTBOARD RH.		1
		65-1067-1	. SPOILER INSTL, INBOARD LH		1
		65-1067-2	. SPOILER INSTL, INBOARD RH		1
	1	NAS603-6	. . SCREW, (OUTBOARD)		4
	2	NAS517-3-5	. . SCREW, (INBOARD).		4
	3	AN960D10	. . WASHER, (OUTBOARD).		4
	4	AN960D10L	. . WASHER.		8
	5	NAS679A3W	. . NUT		4
	6	NAS1304-25DW	. . BOLT, (OUTBOARD).		2
	7	NAS1304-27DW	. . BOLT, (INBOARD)		2
	8	AN960PD416	. . WASHER, (OUTBOARD).		2
	9	AN960D416	. . WASHER, (INBOARD)		2
	10	3-93760	. . SPACER, SPOILER HINGE BEARING		2
	11	AN310-4	. . NUT		2
	12	NAS1306-17DW	. . BOLT, (OUTBOARD).		2
	13	NAS1306-19DW	. . BOLT, (INBOARD)		2
	14	AN960PD616	. . WASHER, (OUTBOARD).		2
	15	AN960D616	. . WASHER, (INBOARD)		2
	16	AN310-6	. . NUT		2
	17	KSBN6-20	. . BEARING . . . . . (OPTIONAL BAC810M38)		2
	18	NAS1308-38DW	. . BOLT, (OUTBOARD).		2
	19	NAS1308-35DW	. . BOLT, (INBOARD)		1
	20	NAS1308-39DW	. . BOLT, (INBOARD)		1
	21	AN960PD816	. . WASHER, (OUTBOARD).		2
	22	AN960D816	. . WASHER, (INBOARD)		4
	23	AN310-8	. . NUT		2
	24B	69-44837-1	. . PIN, INTERCONNECT		1
	28	66-2809-3	. . BUTTON, WING TRAILING EDGE RUB (OUTBOARD)		14
	28	66-2809-3	. . BUTTON, WING TRAILING EDGE RUB (INBOARD).		12
	28	66-2809-3	. . BUTTON, WING TRAILING EDGE RUB (INBOARD). . . . . ATTACHING PARTS		11
		MS20426B4	. . RIVET		14
		BACW10P245G	. . WASHER, (OUTBOARD). . . . . -------*-------		14
		65-24122-13	. . SEAL INSTL, INBOARD SPOILER (INBOARD) (OPTIONAL . . 65-24122-1)		1
	28A	65-24122-8	. . . SEAL, INBOARD SPOILER (EXTRUSION NO. BAC1530-6 X 2.8 IN. LG)		1
	28B	65-24122-9	. . . SEAL, INBOARD SPOILER (EXTRUSION NO. BAC1530-6 X 2.3 IN. LG) ATTACHING PARTS		1
		NAS514P632-6	. . . SCREW		5
		AN960PD6	. . . WASHER.		5
		NAS679A06W	. . . NUT . . . . . -------*-------		5
	28C	66-16891-3	. . . RETAINER, INBOARD SPOILER SEAL.		1
	28D	66-16891-4	. . . RETAINER, INBOARD SPOILER SEAL.		1
	29	5-84479-3059	. . SPOILER ASSY, OUTBOARD (NO. 1) (DELETED BY SB 3410) (USED ON 5-84478-3001) (SEE FIG. 3)	0101	1
R R	29	5-84479-3057A	. . SPOILER ASSY, OUTBOARD (NO. 1) (USED ON . . . . . 5-84478-3001) (SEE FIG. 3)	5151	1
R R	29	5-84479-3057	. . SPOILER ASSY, OUTBOARD (NO. 1) (DELETED BY SB 3410) (USED ON 5-84478-3001) (SEE FIG. 3)	0250	1
R R	29	65C25616-7	. . SPOILER ASSY, OUTBOARD (NO. 1) (ADDED BY SB 3410) . (USED ON 5-84478-3001) (SEE FIG. 3)	0150	1
R R R R R	29	5-84479-3057H	. . SPOILER ASSY, OUTBOARD (NO. 1) (USED ON . . . . . 5-84478-3001) (SEE FIG. 3) (OPTIONAL AND FOR REPLACEMENT ORDER 5-84479-3077H)	5299	1
R R R R R	29	5-84479-3069H	. . SPOILER ASSY, OUTBOARD (NO. 1) (USED ON . . . . . 5-84478-3001) (SEE FIG. 3) (OPTIONAL AND FOR REPLACMENT ORDER 5-84479-3077H)	5299	1
R R R R	29	5-84479-3077H	. . SPOILER ASSY, OUTBOARD (NO. 1) (USED ON . . . . . 5-84478-3001) (SEE FIG. 3) (OPTIONAL TO AND REPLACEMENT FOR 5-84479-3057H, -30569H)	5299	1
	29	5-84479-3060	. . SPOILER ASSY, OUTBOARD (NO. 8) (DELETED BY SB 3410) (USED ON 5-84478-3002) (SEE FIG. 3)	0101	1
R R	29	5-84479-3058A	. . SPOILER ASSY, OUTBOARD (NO. 8) (USED ON . . . . . 5-84478-3002) (SEE FIG. 3)	5151	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	1 29	5-84479-3058	. . SPOILER ASSY, OUTBOARD (NO. 8) (DELETED BY SB 3410) (SEE FIG. 3)	0250	1
R	29	65C25616-8	. . SPOILER ASSY, OUTBOARD (NO. 8) (ADDED BY SB 3410) . (USED ON 5-84478-3002) (SEE FIG. 3)	0150	1
R	29	5-84479-3058H	. . SPOILER ASSY, OUTBOARD (NO. 8) (USED ON . . . . . 5-84478-3002) (SEE FIG. 3) (OPTIONAL AND FOR REPLACEMENT ORDER 5-84479-3078H)	5299	1
R	29	5-84479-3070H	. . SPOILER ASSY, OUTBOARD (NO. 8) (USED ON . . . . . 5-84478-3002) (SEE FIG. 3) (OPTIONAL AND FOR REPLACEMENT ORDER 5-84479-3078H)	5299	1
R	29	5-84479-3078H	. . SPOILER ASSY, OUTBOARD (NO. 8) (USED ON . . . . . 5-84478-3002) (SEE FIG. 3) (OPTIONAL TO AND REPLACEMENT FOR 5-84479-3058H, -3070H)	5299	1
R	30	5-84479-3058A	. . SPOILER ASSY, OUTBOARD (NO. 2) (USED ON . . . . . 5-84478-3001) (SEE FIG. 3)	5151	1
R	30	5-84479-3058	. . SPOILER ASSY, OUTBOARD (NO. 2) (DELETED BY SB 3410) (USED ON 5-84478-3001) (SEE FIG. 3)	0250	1
R	30	65C25616-8	. . SPOILER ASSY, OUTBOARD (NO. 2) (ADDED BY SB 3410) . (USED ON 5-84478-3001) (SEE FIG. 3)	0150	1
	30	5-84479-3060	. . SPOILER ASSY, OUTBOARD (NO. 2) (DELETED BY SB 3410) (USED ON 5-84478-3001) (SEE FIG. 3)	0101	1
R	30	5-84479-3058H	. . SPOILER ASSY, OUTBOARD (NO. 2) (USED ON . . . . . 5-84478-3001) (SEE FIG. 3) (OPTIONAL AND FOR REPLACEMENT ORDER -3078H)	5299	1
R	30	5-84479-3070H	. . SPOILER ASSY, OUTBOARD (NO. 2) (USED ON . . . . . 5-84478-3001) (SEE FIG. 3) (OPTIONAL AND FOR REPLACEMENT ORDER 5-84479-3078H)	5299	1
R	30	5-84479-3078H	. . SPOILER ASSY, OUTBOARD (NO. 2) (USED ON . . . . . 5-84478-3001) (SEE FIG. 3) (OPTIONAL TO AND REPLACEMENT FOR 5-84479-3058H, -3070H)	5299	1
	30	5-84479-3059	. . SPOILER ASSY, OUTBOARD (NO. 7) (DELETED BY SB 3410) (USED ON 5-84478-3002) (SEE FIG. 3)	0101	1
R	30	65C25616-7	. . SPOILER ASSY, (NO. 7) (ADDED BY SB 3410) (USED ON . 5-84478-3002) (SEE FIG. 3)	0150	1
R	30	5-84479-3057	. . SPOILER ASSY, (NO. 7) (DELETED BY SB 3410) (USED ON 5-84478-3002) (SEE FIG. 3)	0250	1
R	30	5-84479-3057A	. . SPOILER ASSY, OUTBOARD (NO. 7) (USED ON . . . . . 5-84478-3002) (SEE FIG. 3)	5151	1
R	30	5-84479-3057H	. . SPOILER ASSY, OUTBOARD (NO. 7) (USED ON . . . . . 5-84478-3002) (SEE FIG. 3) (OPTIONAL AND FOR REPLACEMENT ORDER 5-84479-3077H)	5299	1
R	30	5-84479-3069H	. . SPOILER ASSY, OUTBOARD (NO. 7) (USED ON . . . . . 5-84478-3002) (SEE FIG. 3) (OPTIONAL AND FOR REPLACEMENT ORDER 5-84479-3077H)	5299	1
R	30	5-84479-3077H	. . SPOILER ASSY, OUTBOARD (NO. 7) (USED ON . . . . . 5-84478-3002) (SEE FIG. 3) (OPTIONAL TO AND REPLACEMENT FOR 5-84479-3057H, -3069H)	5299	1
R	31	65C25616-9	. . SPOILER ASSY, (NO. 3) (ADDED BY SB 3410) (USED ON . 65-1067-1) (SEE FIG. 7)	0150	1
R	31	5-84477-3057	. . SPOILER ASSY, INBOARD (NO. 3) (DELETED BY SB 3410) (USED ON 65-1067-1) (SEE FIG. 7)	0250	1
	31	5-84477-3059	. . SPOILER ASSY, INBOARD (NO. 3) (DELETED BY SB 3410) (USED ON 65-1067-1) (SEE FIG. 7)	0101	1
R	31	5-84477-3057A	. SPOILER ASSY, INBOARD (NO. 3) (USED ON 65-1067-1) . . (SEE FIG. 7) (OPTIONAL 5-84477-3081A)	5151	1
R	31	5-84477-3081A	. . SPOILER ASSY, INBOARD (NO. 3) (USED ON 65-1067-1) . (SEE FIG. 7) (OPTIONAL TO 5-84477-3057A)	5151	1
R	31	5-84477-3057	. . SPOILER ASSY, INBOARD (NO. 3) (USED ON 65-1067-1) . (SEE FIG. 7) (OPTIONAL TO 5-84477-3057)	5151	1
R	31	5-84477-3081	. . SPOILER ASSY, INBOARD (NO. 3) (USED ON 65-1067-1) . (SEE FIG. 7) (OPTIONAL TO 5-84477-3057)	5151	1
R	31	65C25616-10	. . SPOILER ASSY, (NO. 6) (ADDED BY SB 3410) (USED ON . 65-1067-2) (SEE FIG. 7)	0150	1
	31	5-84477-3060	. . SPOILER ASSY, INBOARD (NO. 6) (DELETED BY SB 3410) (USED ON 65-1067-2) (SEE FIG. 7)	0101	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	1 31	5-84477-3058	. . SPOILER ASSY, INBOARD (NO. 6) (DELETED ON SB 3410) (USED ON 65-1067-2) (SEE FIG. 7)	0250	1
R	31	5-84477-3058	. . SPOILER ASSY, INBOARD (NO. 6) (USED ON 65-1067-2) . (SEE FIG. 7) (OPTIONAL 5-84477-3082)	5151	1
R	31	5-84477-3082	. . SPOILER ASSY, INBOARD (NO. 6) (USED ON 65-1067-2) . (SEE FIG. 7) (OPTIONAL TO 5-84477-3058)	5151	1
R	31	5-84477-3058A	. . SPOILER ASSY, INBOARD (NO. 6) (USED ON 65-1067-2) . (SEE FIG. 7) (OPTIONAL 5-84477-3082A)	5151	1
R	31	5-84477-3082A	. . SPOILER ASSY, INBOARD (NO.6) (USED ON 65-1067-2). . (SEE FIG. 7) (OPTIONAL TO 5-84477-3058A)	5151	1
R	31	5-84477-3058H	. . SPOILER ASSY, INBOARD (NO. 6) (USED ON 65-1067-1) . (SEE FIG. 7) (OPTIONAL AND FOR REPLACEMENT ORDER 5-84477-3070H)	5299	1
R	31	5-84477-3070H	. . SPOILER ASSY, INBOARD (NO. 6) (USED ON 65-1067-1) . (SEE FIG. 7) (OPTIONAL TO AND REPLACEMENT FOR 5-84477-3058H, -3078)	5299	1
R	32	65C25616-10	. . SPOILER ASSY, INBOARD (NO. 4) (ADDED BY SB 3410). . (USED ON 65-1067-1) (SEE FIG. 7)	0150	1
R	32	5-84477-3058	. . SPOILER ASSY, INBOARD (NO. 4) (DELETED BY SB 3410) (USED ON 65-1067-1) (SEE FIG. 7)	0250	1
R	32	5-84477-3058A	. . SPOILER ASSY, INBOARD (NO. 4) (USED ON 65-1067-1) . (SEE FIG. 7) (OPTIONAL 5-84477-3082A)	5151	1
R	32	5-84477-3082A	. . SPOILER ASSY, INBOARD (NO. 4) (USED ON 65-1067-1) . (SEE FIG. 7) (OPTIONAL TO 5-84477-3058A)	5151	1
	32	5-84477-3060	. . SPOILER ASSY, INBOARD (NO. 4) (DELETED BY SB 3410) (USED ON 65-1067-1) (SEE FIG. 7)	0101	1
R	32	5-84477-3058	. . SPOILER ASSY, INBOARD (NO. 4) (USED ON 65-1067-1) . (SEE FIG. 7) (OPTIONAL 5-84477-3082)	5151	1
R	32	5-8477-3082	. . SPOILER ASSY, INBOARD (NO. 4) (USED ON 65-1067-1) . (SEE FIG. 7) (OPTIONAL TO 5-84477-3058)	5151	1
R	32	5-84477-3058H	. . SPOILER ASSY, INBOARD (NO. 4) (USED ON 65-1067-1) . (SEE FIG. 7) (OPTIONAL AND FOR REPLACEMENT ORDER 5-84477-3070H)	5299	1
R	32	5-84477-3070H	. . SPOILER ASSY, INBOARD (NO. 4) (USED ON 65-1067-1) . (SEE FIG. 7) (OPTIONAL TO AND REPLACEMENT FOR 5-84477-3058H, -3078)	5299	1
R	32	65C25616-9	. . SPOILER ASSY, INBOARD (NO. 5) (ADDED BY SB 3410). . (USED ON 65-1067-2) (SEE FIG. 7)	0150	1
R	32	5-84477-3057	. . SPOILER ASSY, INBOARD (NO. 5) (USED ON 65-1067-2) . (SEE FIG. 7) (OPTIONAL 5-84477-3081)	5151	1
R	32	5-84477-3081	. . SPOILER ASSY, INBOARD (NO. 5) (USED ON 65-1067-2) . (SEE FIG. 7) (OPTIONAL TO 5-84477-3057)	5151	1
R	32	5-84477-3057	. . SPOILER ASSY, INBOARD (NO. 5) (DELETED BY SB 3410) (USED ON 65-1067-2) (SEE FIG. 7)	0250	1
	32	5-84477-3059	. . SPOILER ASSY, INBOARD (NO. 5) (DELETED BY SB 3410) (USED ON 65-1067-2) (SEE FIG. 7)	0101	1
R	32	5-84477-3057A	. . SPOILER ASSY, INBOARD (NO. 5) (USED ON 65-1067-2) . (SEE FIG. 7) (OPTIONAL 5-84477-3081A)	5151	1
R	32	5-84477-3081A	. . SPOILER ASSY, INBOARD (NO. 5) (USED ON 65-1067-2) . (SEE FIG. 7) (OPTIONAL TO 5-84477-3057A)	5151	1
R	32	5-84477-3057H	. . SPOILER ASSY, INBOARD (NO. 5) (USED ON 65-1067-2) . (SEE FIG. 7) (OPTIONAL AND FOR REPLACEMENT ORDER 5-84477-3069H)	5299	1
R	32	5-84477-3069H	. . SPOILER ASSY, INBOARD (NO. 5) (USED ON 65-1067-2) . (SEE FIG. 7) (OPTIONAL TO AND REPLACEMENT FOR 5-84477-3057H, -3077)	5299	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

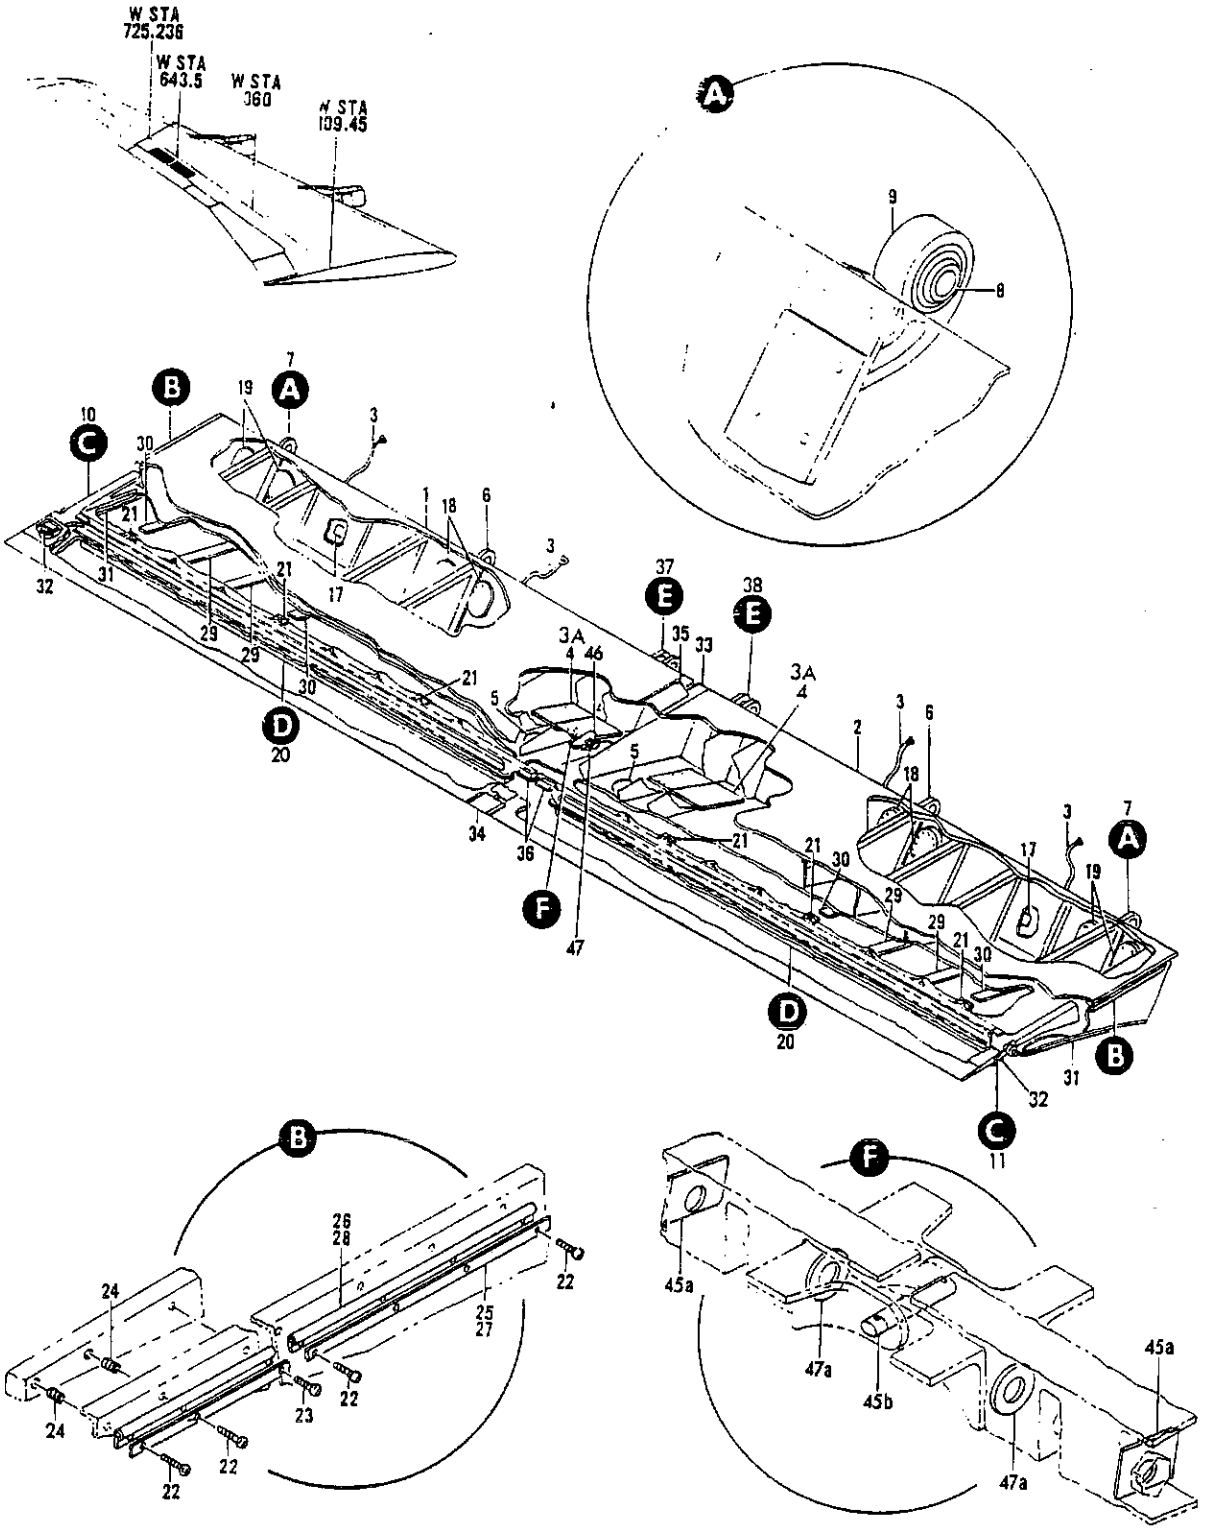


FIGURE 3. SPOILER ASSY, OUTBOARD (SHEET 1)

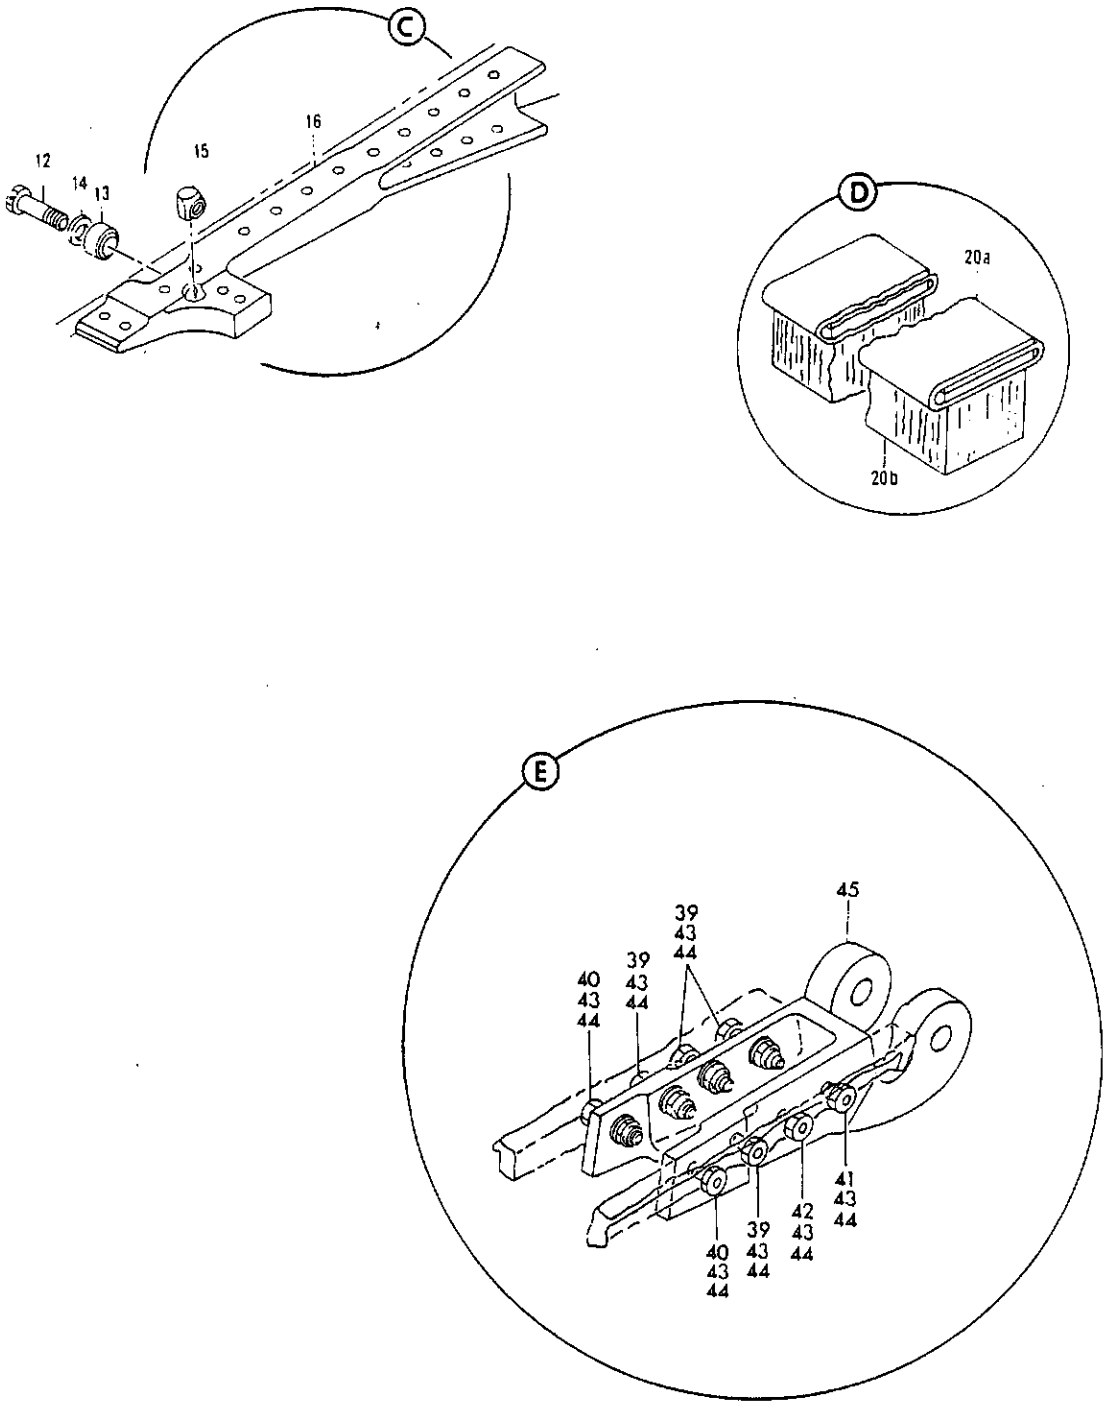


FIGURE 3. SPOILER ASSY, OUTBOARD (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	3 1	5-84479-3059	SPOILER ASSY, OUTBOARD (NO. 1) (DELETED BY SB 3410) . . (SEE FIG. 1, ITEM 29)	0101	RF
R	1	5-84479-3057A	SPOILER ASSY, OUTBOARD (NO. 1) (SEE FIG. 1, ITEM 29). .	5151	RF
R R	1	65C25616-7	SPOILER ASSY, OUTBOARD (NO. 1) (ADDED BY SB 3410) (SEE FIG. 1, ITEM 29)	0150	RF
R R	1	5-84479-3057	SPOILER ASSY, OUTBOARD (NO. 1) (DELETED BY SB 3410) . . (SEE FIG. 1, ITEM 29)	0250	RF
R R	1	5-84479-3057H	SPOILER ASSY, OUTBOARD (NO. 1) (SEE FIG. 1, ITEM 29). . (OPTIONAL AND FOR REPLACEMENT ORDER 5-84479-3077H)	5299	RF
R R	1	5-84479-3069H	SPOILER ASSY, OUTBOARD (NO. 1) (SEE FIG. 1, ITEM 29). . (OPTIONAL AND FOR REPLACEMENT ORDER 5-84479-3077H)	5299	RF
R R R	1	5-84479-3077H	SPOILER ASSY, OUTBOARD (NO. 1) (SEE FIG. 1, ITEM 29). . (OPTIONAL TO AND REPLACEMENT FOR 5-84479-3057H, -3069H)	5299	RF
	1	5-84479-3060	SPOILER ASSY, OUTBOARD (NO. 8) (DELETED BY SB 3410) . . (SEE FIG. 1, ITEM 29)	0101	RF
R R	1	65C25616-8	SPOILER ASSY, OUTBOARD (NO. 8) (ADDED BY SB 3410) (SEE FIG. 1, ITEM 29)	0150	RF
R R	1	5-84479-3058	SPOILER ASSY, OUTBOARD (NO. 8) (DELETED BY SB 3410) . . (SEE FIG. 1, ITEM 29)	0250	RF
R	1	5-84479-3058A	SPOILER ASSY, OUTBOARD (NO. 8) (SEE FIG. 1, ITEM 29). .	5151	RF
R R	1	5-84479-3058H	SPOILER ASSY, OUTBOARD (NO. 8) (SEE FIG. 1, ITEM 29). . (OPTIONAL AND FOR REPLACEMENT ORDER 5-84479-3078H)	5299	RF
R R	1	5-84479-3070H	SPOILER ASSY, OUTBOARD (NO. 8) (SEE FIG. 1, ITEM 29). . (OPTIONAL AND FOR REPLACEMENT ORDER 5-84479-3078H)	5299	RF
R R R	1	5-84479-3078H	SPOILER ASSY, OUTBOARD (NO. 8) (SEE FIG. 1, ITEM 29). . (OPTIONAL TO AND REPLACEMENT FOR 5-84479-3058H, -3070H)	5299	RF
R R	2	5-84479-3058	SPOILER ASSY, OUTBOARD (NO. 2) (DELETED BY SB 3410) . . (SEE FIG. 1, ITEM 30)	0250	RF
	2	5-84479-3060	SPOILER ASSY, OUTBOARD (NO. 2) (DELETED BY SB 3410) . . (SEE FIG. 1, ITEM 30)	0101	RF
R	2	5-84479-3058A	SPOILER ASSY, OUTBOARD (NO. 2) (SEE FIG. 1, ITEM 30). .	5151	RF
R R	2	65C25616-8	SPOILER ASSY, OUTBOARD (NO. 2) (ADDED BY SB 3410) (SEE FIG. 1, ITEM 30)	0150	RF
R R	2	5-84479-3058H	SPOILER ASSY, OUTBOARD (NO. 2) (SEE FIG. 1, ITEM 30). . (OPTIONAL AND FOR REPLACEMENT ORDER 5-84479-3078H)	5299	RF
R R	2	5-84479-3070H	SPOILER ASSY, OUTBOARD (NO. 2) (SEE FIG. 1, ITEM 30). . (OPTIONAL AND FOR REPLACEMENT ORDER 5-84479-3078H)	5299	RF
R R R	2	5-84479-3078H	SPOILER ASSY, OUTBOARD (NO. 2) (SEE FIG. 1, ITEM 30). . (OPTIONAL TO AND REPLACEMENT FOR 5-84479-3058H, -3070H)	5299	RF
	2	5-84479-3059	SPOILER ASSY, OUTBOARD (NO. 7) (DELETED BY SB 3410) . . (SEE FIG. 1, ITEM 30)	0101	RF
R R	2	65C25616-7	SPOILER ASSY, OUTBOARD (NO. 7) (ADDED BY SB 3410) . . . (SEE FIG. 1, ITEM 30)	0150	RF
R R	2	5-84479-3057	SPOILER ASSY, OUTBOARD (NO. 7) (DELETED BY SB 3410) . . (SEE FIG. 1, ITEM 30)	0250	RF
R	2	5-84479-3057A	SPOILER ASSY, OUTBOARD (NO. 7) (SEE FIG. 1, ITEM 30). .	5151	RF
R R	2	5-84479-3057H	SPOILER ASSY, OUTBOARD (NO. 7) (SEE FIG. 1, ITEM 30). . (OPTIONAL AND FOR REPLACEMENT ORDER 5-84479-3077H)	5299	RF
R R	2	5-84479-3069H	SPOILER ASSY, OUTBOARD (NO. 7) (SEE FIG. 1, ITEM 30). . (OPTIONAL AND FOR REPLACEMENT ORDER 5-84479-3077H)	5299	RF
R R R	2	5-84479-3077H	SPOILER ASSY, OUTBOARD (NO. 7) (SEE FIG. 1, ITEM 30). . (OPTIONAL TO AND REPLACEMENT FOR 5-84479-3057H, -3069H)	5299	RF
	3	BACJ40K5A5A6	. JUMPER.		2
			ATTACHING PARTS		
		NAS603-8	. SCREW		2
		AN960PD10L	. WASHER.		2
			-------*-------		
	3A	6-68048-2003	. PANEL, SPOILER ACCESS	0299	1
	4	6-68048-2005	. PANEL, SPOILER ACCESS		1
			ATTACHING PARTS		
		NAS1103-5W	. BOLT.		35
		NAS1104-5W	. BOLT.		4
		AN960D10	. WASHER.		35
		AN960D416	. WASHER.		4
			-------*-------		
	5	66-3616-2000	. COVER, OUTBOARD SPOILER ACTUATOR ACCESS		1
			ATTACHING PARTS		
		NAS601-7	. SCREW		4
		AN960D10L	. WASHER.		4
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
3 6	65-23469-3	. FITTING, SPOILER CENTER HINGE		1
7	65-23375-5	. FITTING ASSY, SPOILER END HINGE		1
		ATTACHING PARTS		
	NAS1104-8W	. BOLT		12
	AN960D416	. WASHER		12
	6-74848-2001	. FILLER, OUTBOARD SPOILER HINGE TEE RADIUS (USED ON 5-84479-3037, -3059, -3035, -3057, -3063, -3069, -3071 AND -3077)		2
	6-74848-2002	. FILLER, OUTBOARD SPOILER HINGE TEE RADIUS (USED ON 5-84479-3038, -3060, -3036, -3058, -3064, -3070, -3072 AND -3078)		2
	6-74848-2003	. FILLER, HINGE TEE RADIUS (USED ON 5-84479-3037, -3059, -3035, -3057, -3063, -3069, -3071 AND -3077)		2
	6-74848-2004	. FILLER, OUTBOARD SPOILER HINGE TEE RADIUS (USED ON 5-84479-3038, -3060, -3036, -3058, -3064, -3070, -3072 AND -3078)		2
	NAS679A4W	. NUT		12
		-------*-------		
8	BACB10M38	. . BEARING (OPTIONAL AND FOR REPLACEMENT ORDER KSBN6-20 (V97613))		1
8	KSBN6-20	. . BEARING, (V97613) (OPTIONAL TO AND REPLACEMENT FOR BACB10M38)		1
9	65-23375-6	. . FITTING		1
10	9-64043-3005	. CAM ASSY, OUTBOARD SPOILER (USED ON 5-84479-3037, -3035, -3059, -3057, -3069 AND -3077) (OPTIONAL TO 9-64043-3007)		1
10	9-64043-3007	. CAM ASSY, OUTBOARD SPOILER (USED ON 5-84479-3037, -3035, -3059, -3057, -3069 AND -3077) (OPTIONAL 9-64043-3005)		1
11	9-64043-3006	. CAM ASSY, OUTBOARD SPOILER (USED ON 5-84479-3038, -3036, -3058, -3060, -3070 AND -3078) (OPTIONAL TO 9-64043-3008)		1
11	9-64043-3008	. CAM ASSY, OUTBOARD SPOILER (USED ON 5-84479-3038, -3036, -3058, -3060, -3070 AND -3078) (OPTIONAL 9-64043-3006)		1
12	NAS1304-17H	. . BOLT		1
13	BACB10B131S	. . BEARING		1
14	MS20002C4	. . WASHER		1
15	BACN10CP4L	. . NUT		1
16	9-64043-2009	. . CAM, OUTBOARD SPOILER (USED ON 9-64043-3005)		1
16	9-64043-3009	. . CAM, OUTBOARD SPOILER (USED ON 9-64043-3007)		1
16	9-64043-2010	. . CAM, OUTBOARD SPOILER (USED ON 9-64043-3006)		1
16	9-64043-3010	. . CAM, OUTBOARD SPOILER (USED ON 9-64043-3008)		1
17	AN7510-1	. PLATE		1
	9-60318-3003	. WEB ASSY, OUTBOARD SPOILER SPAR (USED ON 5-84479-3037, -3059, -3035, -3057, -3063, -3069, -3071 AND -3077) (OPTIONAL 9-60318-3001)		1
	9-60318-3001	. WEB ASSY, OUTBOARD SPOILER SPAR (USED ON 5-84479-3037, -3059, -3035, -3057, -3063, -3069, -3071 AND -3077) (OPTIONAL TO 9-60318-3003)		1
	9-60318-3004	. WEB ASSY, OUTBOARD SPOILER SPAR (USED ON 5-84479-3038, -3060, -3036, -3058, -3064, -3070, -3072 AND -3078) (OPTIONAL 9-60318-3002)		1
	9-60318-3002	. WEB ASSY, OUTBOARD SPOILER SPAR (USED ON 5-84479-3038, -3060, -3036, -3058, -3064, -3070, -3072 AND -3078) (OPTIONAL TO 9-60318-3004)		1
18	3-95639-2000	. . COVER, SPOILER SPAR ACCESS HOLE		2
		ATTACHING PARTS		
	AN3-3A	. . BOLT		24
		-------*-------		
19	3-95639-2001	. . COVER, SPOILER SPAR ACCESS HOLE		2
		ATTACHING PARTS		
	AN3-4A	. . BOLT		8
	AN960D10L	. . WASHER		8
		-------*-------		
20	66-11771-2	. SEAL ASSY, SPOILER		1
20A	66-11771-6	. . STRIP, SPOILER SEAL RETAINING		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	3 20B	66-11771-4	. . SEAL, SPOILER MOHAIR (ALTERED FROM. . . . . BAC1523-7N X 61.9 IN. LG)		1
	21	66-11760-1	. BLOCK, SPOILER RUB.		3
	22	NAS601-7	. SCREW		6
	23	NAS601-9	. SCREW		1
	24	BACS13P06C3	. SLEEVE.		2
	25	5-84479-3047	. RETAINER, OUTBOARD SPOILER SEAL (USED ON. . . . . 5-84479-3037, -3059, -3035, -3057, -3063, -3069, -3071 AND -3077)		1
	26	5-84479-3045	. SEAL, OUTBOARD SPOILER (EXTRUSION NO. BAC1530-24 X 24 IN. LG) (USED ON 5-84479-3037, -3059, -3035, -3057, -3063, -3069, -3071 AND -3077)		1
	27	5-84479-3048	. RETAINER, OUTBOARD SPOILER SEAL (USED ON. . . . . 5-84479-3038, -3060, -3036, -3058, -3064, -3070, -3072 AND -3078)		1
	28	5-84479-3046	. SEAL, OUTBOARD SPOILER (EXTRUSION NO. BAC1530-24 X 24 IN. LG) (USED ON 5-84479-3038, -3060, -3036, -3058, -3064, -3070, -3072 AND -3078)		1
	29	63-2005-6	. STRIP, OUTBOARD SPOILER RUB		2
	30	63-2005-8	. STRIP, OUTBOARD SPOILER RUB		2
	31	63-2005-3	. STRIP, OUTBOARD SPOILER RUB		1
	32	63-2005-4	. STRIP, OUTBOARD SPOILER RUB		1
	33	63-1875-4	. STRIP, OUTBOARD SPOILER SEALER RUB (USED ON . . . . 5-84479-3038, -3060, -3036, -3058, -3064, -3070, -3072 AND -3078)		1
		69-3331-2	. SEAL INSTL, OUTBOARD SPOILER (USED ON 5-84479-3037, . -3059, -3035, -3057, -3063 AND -3071)		1
	34	69-3331-4	. . SEAL, OUTBOARD SPOILER. . . . . (OPTIONAL B00257-6 (VT0001))		1
	35	69-3331-3	. . SEAL, OUTBOARD SPOILER. . . . . (OPTIONAL B00257-5 (VT0001))		1
	36	63-10301-2	. STRIP, SPOILER RUB.		1
R R R	37	65-23417-1	. RIB ASSY, SPOILER ACTUATOR OUTBOARD (USED ON. . . . . 5-84479-3037, -3059, -3035, -3057, -3063, -3069, -3071 AND -3077)	0150	1
R R R	37	65-23417-5	. RIB ASSY, ACTUATOR (USED ON 5-84479-3037, -3057,. . . -3063, -3069, -3071 AND -3077)	5199	1
R R R R	38	65-23417-2	. RIB ASSY, SPOILER ACTUATOR OUTBOARD (USED ON. . . . . 5-84479-3038, -3060, -3036, -3058, -3064, -3070, -3072 AND -3078)	0150	1
R R R	38	65-23417-6	. RIB ASSY, ACTUATOR (USED ON 5-84479-3038, -3058,. . . -3064, -3070 AND -3072)	5199	1
	39	NAS1104-11W	. . BOLT.		4
	40	NAS1104-8W	. . BOLT.		2
	41	NAS1104-7W	. . BOLT.		1
	42	NAS1104-9W	. . BOLT.		1
	43	AN960-416L	. . WASHER.		8
	44	NAS679A4W	. . NUT		8
	45	69-16964-1	. . FITTING, HINGE (USED ON 65-23417-1 AND -5). . . . . (OPTIONAL TO 69-17218-1)		1
R R	45	69-17218-1	. . FITTING, HINGE (USED ON 65-23417-1) . . . . . (OPTIONAL 69-16964-1)	0150	1
	45	69-16964-2	. . FITTING, HINGE (USED ON 65-23417-2 AND -6). . . . . (OPTIONAL TO 69-17218-2)		1
R R	45	69-17218-2	. . FITTING, HINGE (USED ON 65-23417-2) . . . . . (OPTIONAL 69-16964-2)	0150	1
R R	45	69-17218-1	. . FITTING, HINGE (USED ON 65-23417-5) . . . . . (OPTIONALS 69-16964-1, 69-17218-3)	5199	1
R R	45	69-17218-3	. . FITTING, HINGE (USED ON 65-23417-5) . . . . . (OPTIONAL TO 69-17218-1)	5199	1
R R	45	69-17218-2	. . FITTING, HINGE (USED ON 65-23417-6) . . . . . (OPTIONALS 69-16964-2, 69-17218-4)	5199	1
R R	45	69-17218-4	. . FITTING, HINGE (USED ON 65-23417-6) . . . . . (OPTIONAL TO 69-17218-2)	5199	1
	45A	69-44838-1	. FILLER, INTERCONNECT (USED ON 5-84479-3059, -3057,. . -3063, -3060, -3058, -3064, -3069 AND -3077) (OPTIONAL 69-44838-2)		1
	45A	69-44838-2	. FILLER, INTERCONNECT (USED ON 5-84479-3059, -3057,. . -3063, -3060, -3058, -3064, -3069 AND -3077) (OPTIONAL TO 69-44838-1)		1
	46	69-44836-2	. FITTING, INTERCONNECT (USED ON 5-84479-3059, -3057, . -3063, -3069 AND -3077) (OPTIONAL 65-59572-2)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3 46	65-59572-2	. FITTING, INTERCONNECT (USED ON 5-84479-3059, -3057, . -3063, -3069 AND -3077) (OPTIONAL TO 69-44836-2)		1
47	69-44835-2	. FITTING, INTERCONNECT (USED ON 5-84479-3060, -3058, . -3064, -3070 AND -3078) (OPTIONAL 65-59573-2)		1
47	65-59573-2	. FITTING, INTERCONNECT (USED ON 5-84479-3060, -3058, . -3064, -3070 AND -3078) (OPTIONAL TO 69-44835-2)		1
		ATTACHING PARTS		
	BACB30FN8-6	. LOCKBOLT.		3
	BACC30M8	. COLLAR.		3
	BACS40R10E42F	. SHIM.		1
		-------*-------		
47A	69-44838-3	. FILLER, INTERCONNECT (USED ON 5-84479-3059, -3057, . -3063, -3060, -3058, -3064, -3069, -3070, -3077 AND -3078)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

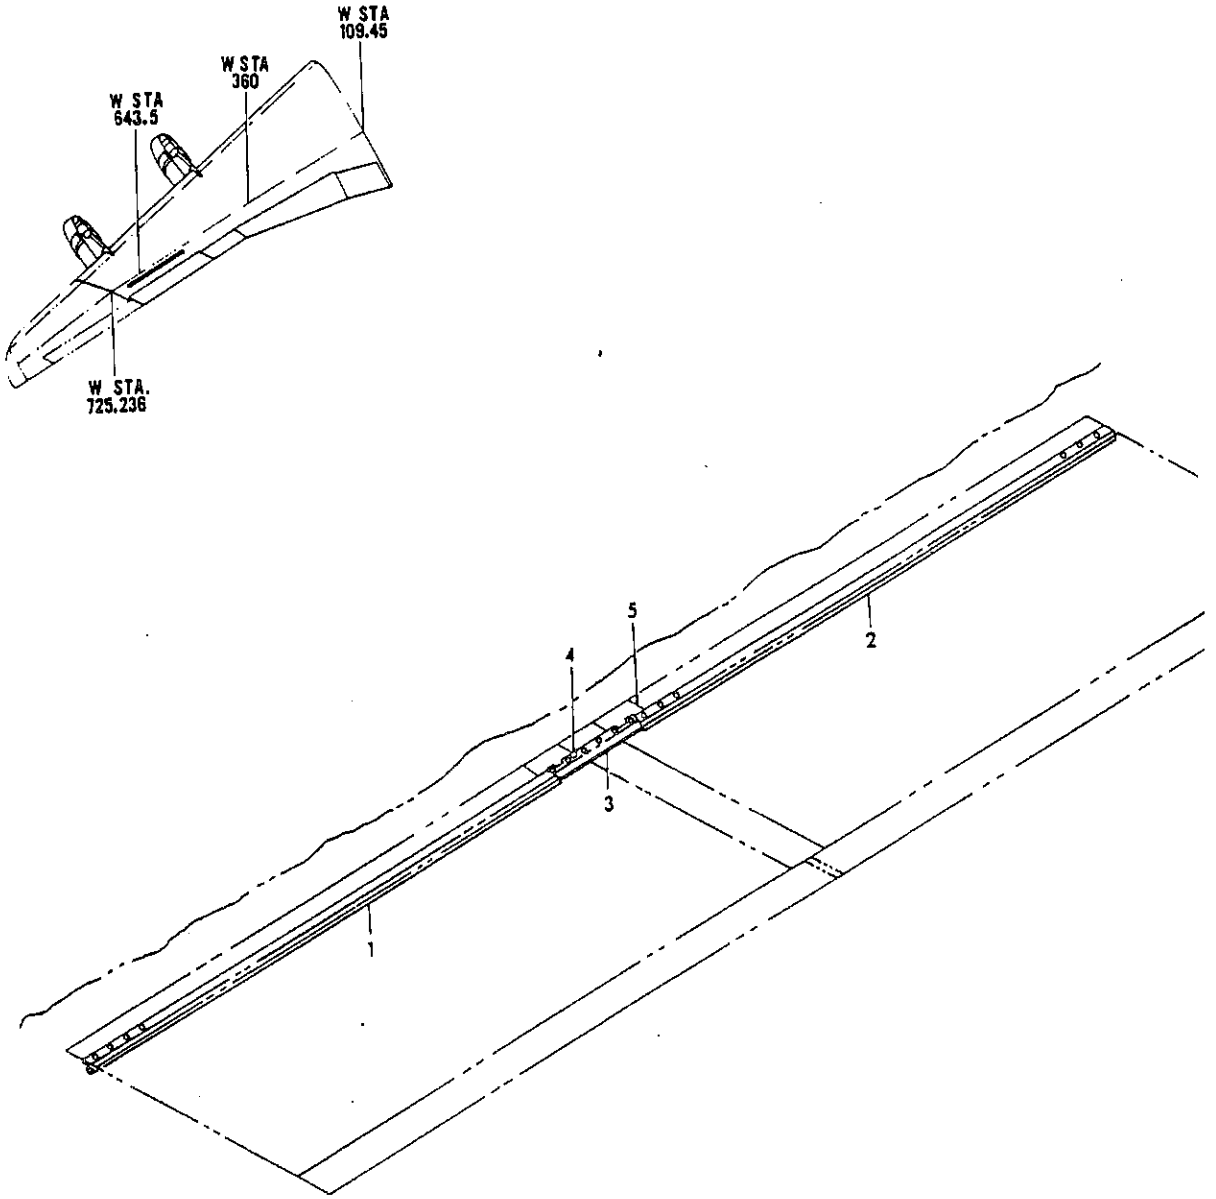


FIGURE 4. SEAL INSTL, OUTBOARD SPOILER

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
4	69-17599-9	SEAL INSTL, OUTBOARD SPOILER (LH) (SEE 57-3, FIG. 12, ITEM 64)		RF
	69-17599-10	SEAL INSTL, OUTBOARD SPOILER (RH) (SEE 57-3, FIG. 12, ITEM 64)		RF
1	69-17599-11	. SEAL, (EXTRUSION NO. BAC1530-10 X 60.84 IN. LG) . . .		1
2	69-17599-12	. SEAL, (EXTRUSION NO. BAC1530-10 X 60.84 IN. LG) . . .		1
		ATTACHING PARTS		
	NAS514P632-6	. SCREW		60
	69-17599-7	. NUT, SELF LOCKING GANG CHANNEL (LH) . . . . . (OPTIONAL G1031-06-16-30 (V15653))		1
	G1031-06-16-30	. NUT, SELF LOCKING GANG CHANNEL (LH) (V15653). . . . (OPTIONAL TO 69-17599-7)		1
	69-17599-8	. NUT, SELF LOCKING GANG CHANNEL (RH)		1
		--------*--------		
3	69-17599-13	. SEAL, (EXTRUSION NO. BAC1530-10 X 6.85 IN. LG). . . .		1
		ATTACHING PARTS		
	NAS514P632-6	. SCREW		6
		--------*--------		
4	69-17599-15	. RETAINER, SEAL.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

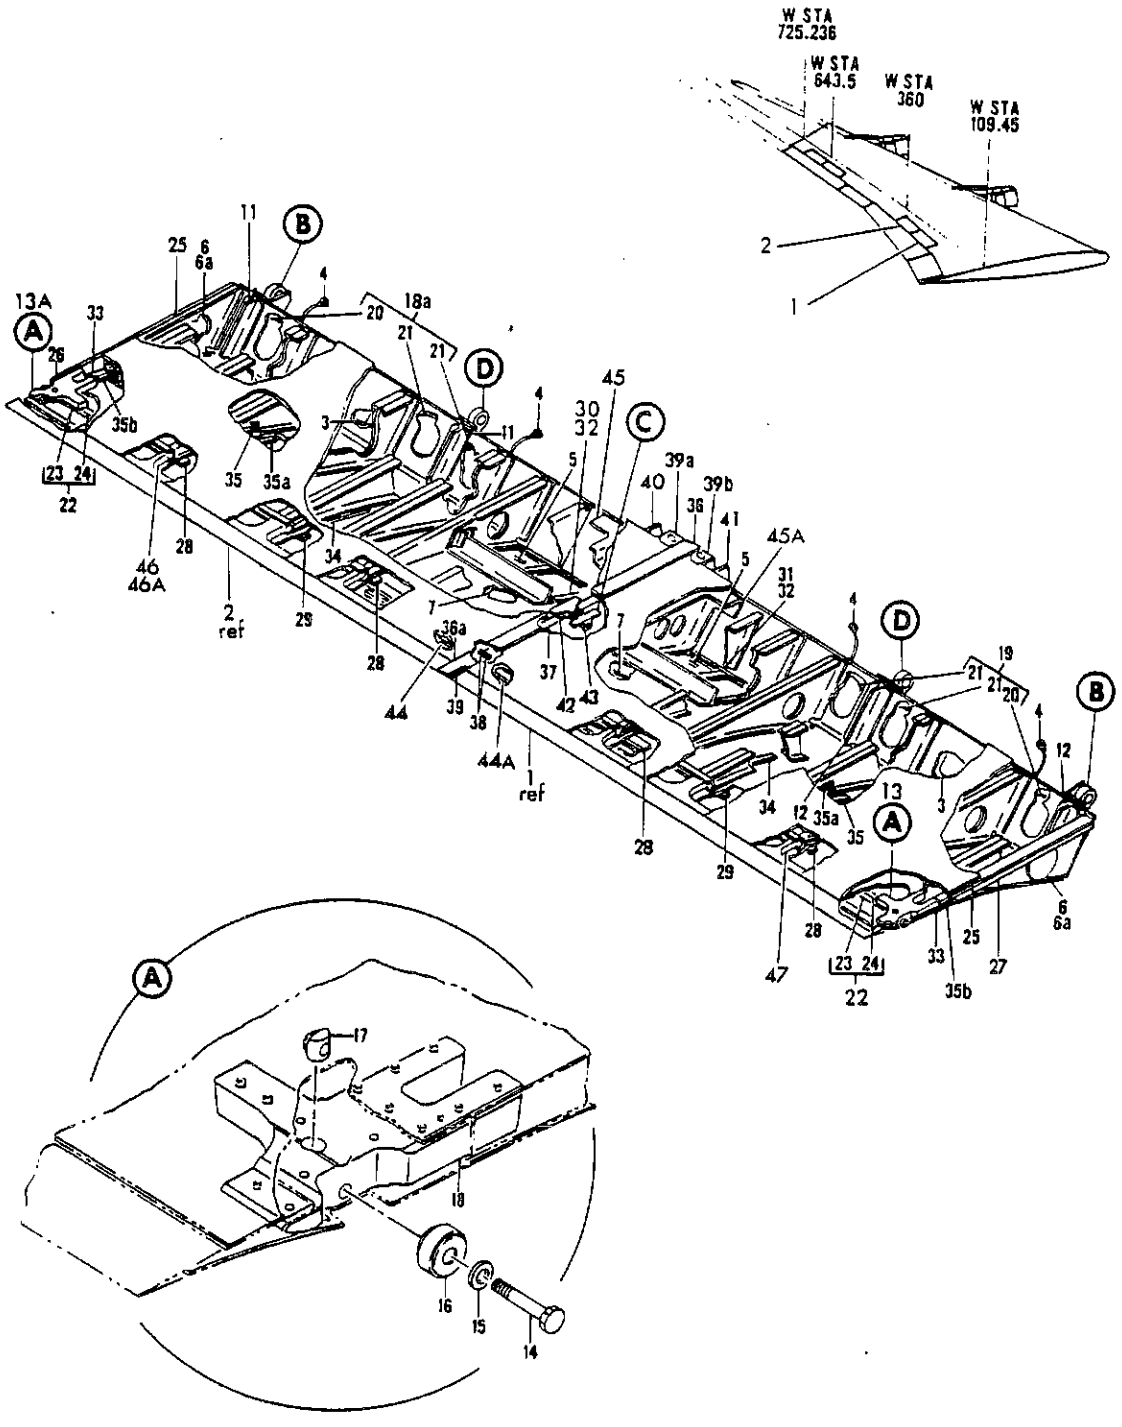


FIGURE 7. SPOILER ASSY, INBOARD (SHEET 1)

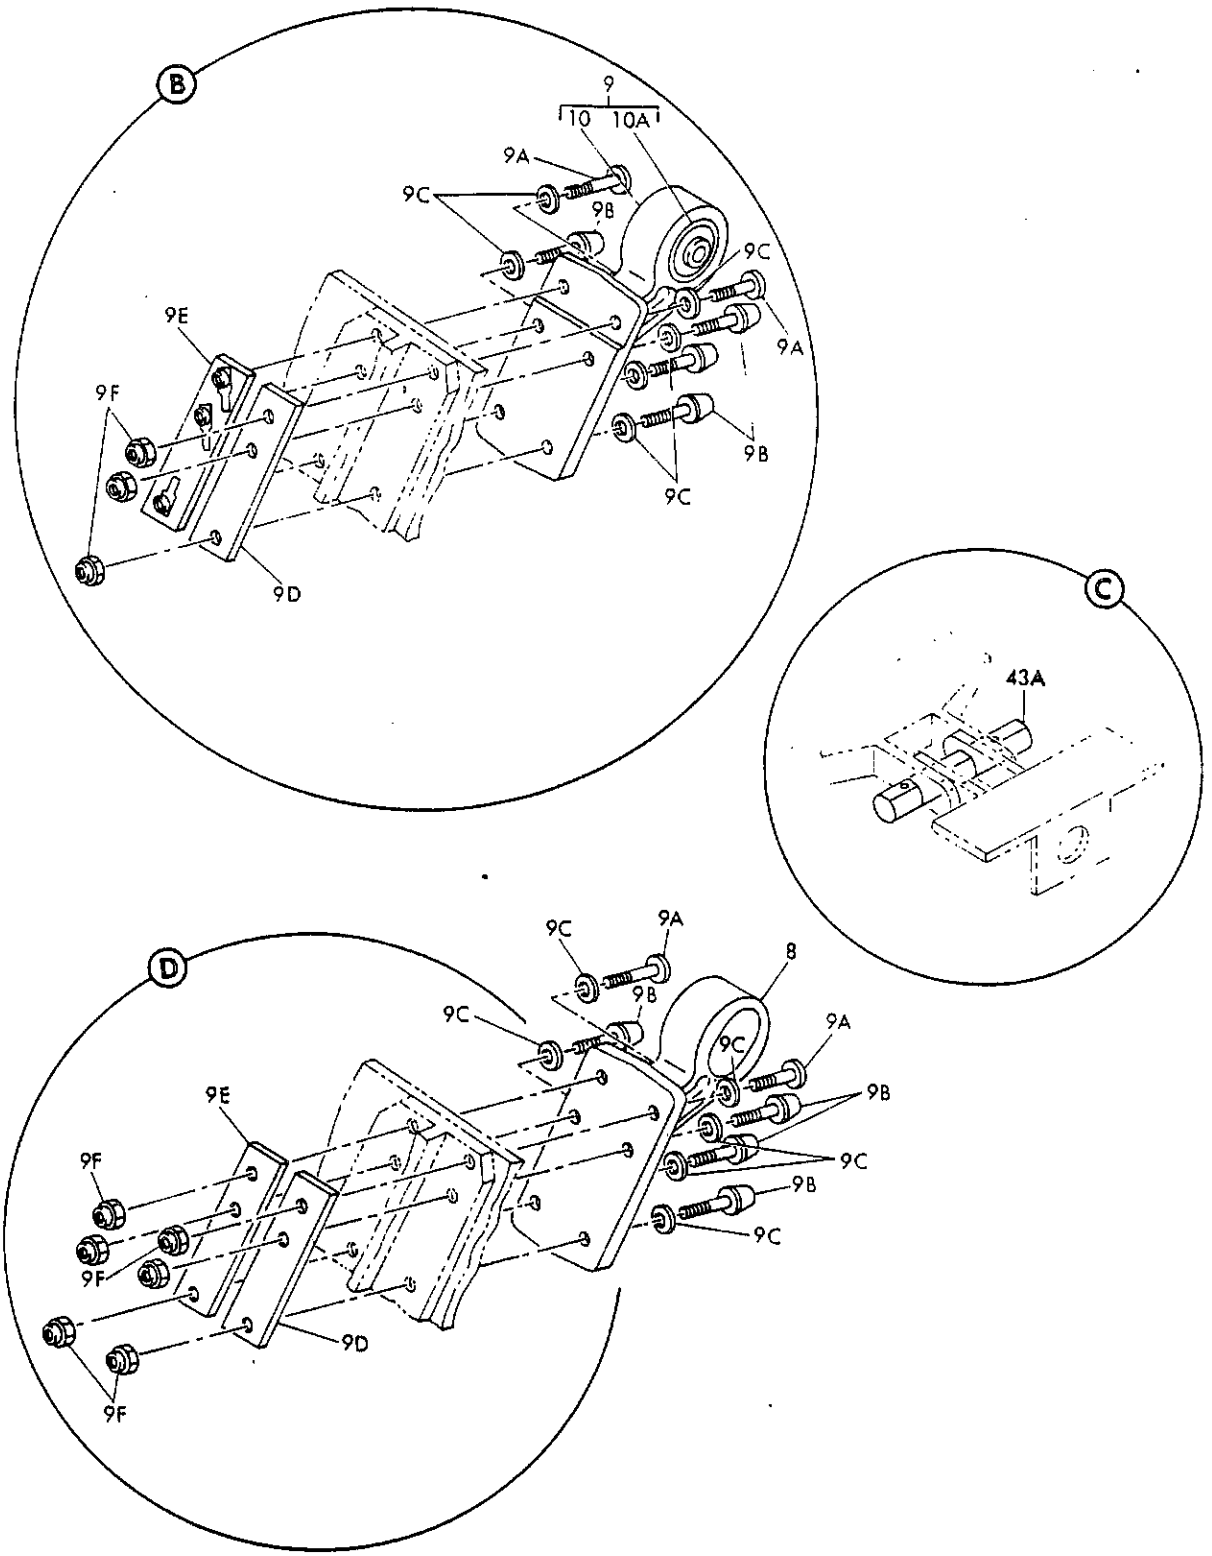


FIGURE 7. SPOILER ASSY, INBOARD (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM	EFF TO	UNITS PER ASSY
	7 1	5-84477-3059	SPOILER ASSY, INBOARD (NO. 3) (DELETED BY SB 3410) (SEE FIG. 1, ITEM 31)	0101		RF
R R	1	5-84477-3057	SPOILER ASSY, INBOARD (NO. 3) (DELETED BY SB 3410). . . (SEE FIG. 1, ITEM 31)	0250		RF
R R	1	65C25616-9	SPOILER ASSY, INBOARD (NO. 3) (ADDED BY SB 3410) (SEE . FIG. 1, ITEM 31)	0150		RF
R R	1	5-84477-3057	SPOILER ASSY, INBOARD (NO. 3) (SEE FIG. 1, ITEM 31) . . (OPTIONAL 5-84477-3081)	5151		RF
R R	1	5-84477-3081	SPOILER ASSY, INBOARD (NO. 3) (SEE FIG. 1, ITEM 31) . . (OPTIONAL TO 5-84477-3057)	5151		RF
R R R	1	5-84477-3057H	SPOILER ASSY, INBOARD (NO. 3) (SEE FIG. 1, ITEM 31) . . (OPTIONAL TO AND FOR REPLACEMENT ORDER 5-84477-3069H)	5299		RF
R R R	1	5-84477-3069H	SPOILER ASSY, INBOARD (NO. 3) (SEE FIG. 1, ITEM 31) . . (OPTIONAL AND REPLACEMENT FOR 5-84477-3057H AND -3077)	5299		RF
	1	5-84477-3060	SPOILER ASSY, INBOARD (NO. 6) (DELETED BY SB 3410) (SEE FIG. 1, ITEM 31)	0101		RF
R R	1	5-84477-3081J	SPOILER ASSY, INBOARD (NO. 3) (SEE FIG. 1, ITEM 31) . . (OPTIONAL TO 5-84477-3057J)	5151		RF
R R	1	5-84477-3081A	SPOILER ASSY, INBOARD (NO. 3) (SEE FIG. 1, ITEM 31) . . (OPTIONAL TO 5-84477-3057A)	5151		RF
R R	1	65C25616-10	SPOILER ASSY, INBOARD (NO. 6) (ADDED BY SB 3410) (SEE . FIG. 1, ITEM 31)	0150		RF
R R	1	5-84477-3058	SPOILER ASSY, INBOARD (NO. 6) (DELETED BY SB 3410). . . (SEE FIG. 1, ITEM 31)	0250		RF
R R	1	5-84477-3058	SPOILER ASSY, INBOARD (NO. 6) (SEE FIG. 1, ITEM 31) . . (OPTIONAL 5-84477-3082)	5151		RF
R R	1	5-84477-3082	SPOILER ASSY, INBOARD (NO. 6) (SEE FIG. 1, ITEM 31) . . (OPTIONAL TO 5-84477-3058)	5151		RF
R R	1	5-84477-3058A	SPOILER ASSY, INBOARD (NO. 6) (SEE FIG. 1, ITEM 31) . . (OPTIONAL 5-84477-3082A)	5151		RF
R R	1	5-84477-3082A	SPOILER ASSY, INBOARD (NO. 6) (SEE FIG. 1, ITEM 31) . . (OPTIONAL TO 5-84477-3058A)	5151		RF
R R R	1	5-84477-3058H	SPOILER ASSY, INBOARD (NO. 6) (SEE FIG. 1, ITEM 31) . . (OPTIONAL TO AND FOR REPLACEMENT ORDER 5-84477-3070H)	5299		RF
R R R	1	5-84477-3070H	SPOILER ASSY, INBOARD (NO. 6) (SEE FIG. 1, ITEM 31) . . (OPTIONAL AND REPLACEMENT FOR 5-84477-3058H AND -3078)	5299		RF
	2	5-84477-3060	SPOILER ASSY, INBOARD (NO. 4) (DELETED BY SB 3410). . . (SEE FIG. 1, ITEM 32)	0101		RF
R R	2	65C25616-10	SPOILER ASSY, INBOARD (NO. 4) (ADDED BY SB 3410) (SEE . FIG. 1, ITEM 32)	0150		RF
R R	2	5-84477-3058	SPOILER ASSY, INBOARD (NO. 4) (DELETED BY SB 3410). . . (SEE FIG. 1, ITEM 32)	0250		RF
R R	2	5-84477-3058H	SPOILER ASSY, INBOARD (NO. 4) (SEE FIG. 1, ITEM 31) . . (OPTIONAL TO AND FOR REPLACEMENT ORDER 5-84477-3070H)	5299		RF
R R R	2	5-84477-3070H	SPOILER ASSY, INBOARD (NO. 4) (SEE FIG. 1, ITEM 31) . . (OPTIONAL AND REPLACEMENT FOR 5-84477-3058H AND -3078)	5299		RF
	2	5-84477-3059	SPOILER ASSY, INBOARD (NO. 5) (DELETED BY SB 3410). . . (SEE FIG. 1, ITEM 32)	0101		RF
R R	2	5-84477-3058	SPOILER ASSY, INBOARD (NO. 4) (SEE FIG. 1, ITEM 32) . . (OPTIONAL 5-84477-3082)	5151		RF
R R	2	5-84477-3082	SPOILER ASSY, INBOARD (NO. 4) (SEE FIG. 1, ITEM 32) . . (OPTIONAL TO 5-84477-3058)	5151		RF
R R	2	5-84477-3058A	SPOILER ASSY, INBOARD (NO. 4) (SEE FIG. 1, ITEM 32) . . (OPTIONAL 5-84477-3082A)	5151		RF
R R	2	5-84477-3082A	SPOILER ASSY, INBOARD (NO. 6) (SEE FIG. 1, ITEM 31) . . (OPTIONAL 5-84477-3058A)	5151		RF
R R	2	65C25616-9	SPOILER ASSY, INBOARD (NO. 5) (ADDED BY SB 3410) (SEE . FIG. 1, ITEM 32)	0150		RF
R	2	5-84477-3057	SPOILER ASSY, INBOARD (NO. 5) (SEE FIG. 1, ITEM 32) . .	5151		RF
R	2	5-84477-3057A	SPOILER ASSY, INBOARD (NO. 5) (SEE FIG. 1, ITEM 32) . .	5151		RF
R R	2	5-84477-3057	SPOILER ASSY, INBOARD (NO. 5) (DELETED BY SB 3410). . . (SEE FIG. 1, ITEM 32)	0250		RF
R R R	2	5-84477-3057H	SPOILER ASSY, INBOARD (NO. 5) (SEE FIG. 1, ITEM 32) . . (OPTIONAL TO AND FOR REPLACEMENT ORDER 5-84477-3069H)	5299		RF
R R R	2	5-84477-3069H	SPOILER ASSY, INBOARD (NO. 5) (SEE FIG. 1, ITEM 32) . . (OPTIONAL AND REPLACEMENT FOR 5-84477-3057H AND -3077)	5299		RF

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R R R	7 2	5-84477-3077H	SPOILER ASSY, INBOARD (NO. 3) (SEE FIG. 1, ITEM 31) . . (OPTIONAL AND FOR REPLACEMENT ORDER 5-84477-3069H)	5299	RF
R R R	2	5-84477-3078H	SPOILER ASSY, INBOARD (NO. 6) (SEE FIG. 1, ITEM 31) . . (OPTIONAL AND FOR REPLACEMENT ORDER 5-84477-3070H)	5299	RF
R R R	2	5-84478-3078H	SPOILER ASSY, INBOARD (NO. 4) (SEE FIG. 1, ITEM 32) . . (OPTIONAL AND FOR REPLACEMENT ORDER 5-84477-3070H)	5299	RF
R R R	2	5-84477-3077H	SPOILER ASSY, INBOARD (NO. 5) (SEE FIG. 1, ITEM 32) . . (OPTIONAL AND FOR REPLACEMENT ORDER 5-84477-3069H)	5299	RF
	3	AN7510-1	. PLATE		1
			ATTACHING PARTS		
		BACR15AP4-49	. RIVET		4
			-------*-------		
	4	BACJ40K5A5A6	. JUMPER ASSY		2
			ATTACHING PARTS		
		NAS603-8	. SCREW		2
		AN960D10L	. WASHER.		4
			-------*-------		
	5	6-68048-2005	. PANEL, SPOILER ACCESS (SPOILERS NO. 3 AND 5). . . .		1
	5	6-68048-3003	. PANEL, SPOILER ACCESS (SPOILERS NO. 4 AND 6). . . .		1
			ATTACHING PARTS		
		NAS1104-6W	. BOLT.		4
		NAS1103-6W	. BOLT.		35
		AN960D416	. WASHER.		4
		AN960D10	. WASHER.		35
			-------*-------		
	6	5-84477-3019	. COVER, INBOARD SPOILER ACCESS	0101	1
		65-28197-2	. COVER INSTL, INBOARD SPOILER ACCESS HOLE.	0299	1
	6A	65-28197-4	. . COVER, INBOARD SPOILER ACCESS HOLE.	0299	1
			ATTACHING PARTS		
		NAS601-5	. . SCREW	0299	5
		AN960PD6L	. . WASHER.	0299	5
			-------*-------		
	7	66-3616-2000	. COVER, INBOARD SPOILER ACTUATOR ACCESS.		1
			ATTACHING PARTS		
		NAS603-7	. SCREW		4
		AN960D10L	. WASHER.		4
			-------*-------		
	8	65-23469-3	. FITTING, SPOILER CENTER HINGE		1
	9	65-23375-5	. FITTING ASSY, SPOILER END HINGE		1
			ATTACHING PARTS		
	9A	NAS623-4-8W	. SCREW		4
	9B	NAS1104-8W	. BOLT.		8
	9C	AN960D416	. WASHER.		12
	9D	6-74848-2001	. FILLER, INBOARD SPOILER HINGE TEE RADIUS (SPOILERS. . NO. 3 AND 5)		2
	9D	6-74848-2002	. FILLER, INBOARD SPOILER HINGE TEE RADIUS (SPOILERS. . NO. 4 AND 6)		2
	9E	6-74848-2003	. FILLER, INBOARD SPOILER HINGE TEE RADIUS (SPOILERS. . NO. 3 AND 5)		2
	9E	6-74848-2004	. FILLER, INBOARD SPOILER HINGE TEE RADIUS (SPOILERS. . NO. 4 AND 6)		2
	9F	NAS679A4W	. NUT		9
			-------*-------		
	10	65-23375-6	. . FITTING, SPOILER END HINGE.		1
	10A	BACB10M38	. . BEARING . . . . . (OPTIONAL AND FOR REPLACEMENT ORDER KSBN6-20 (V97613))		1
	10A	KSBN6-20	. . BEARING, (V97613) . . . . . (OPTIONAL TO AND REPLACEMENT FOR BACB10M38)		1
	11	6-68054-2001	. TEE, SPOILER HINGE SUPPORT (SPOILERS NO. 3 AND 5) . .		2
	12	6-68054-2002	. TEE, SPOILER HINGE SUPPORT (SPOILERS NO. 4 AND 6) . .		2
	13	9-64042-3006	. CAM ASSY, INBOARD SPOILER (SPOILERS NO. 4 AND 6). . .	0101	1
	13	9-64042-3006	. CAM ASSY, INBOARD SPOILER (SPOILERS NO. 4 AND 6). . . (USED ON 5-84477-3058, -3066) (OPTIONAL 9-64042-3008)	0299	1
	13	9-64042-3008	. CAM ASSY, (SPOILERS NO. 4 AND 6). . . . . (USED ON 5-84477-3058, -3066) (OPTIONAL TO 9-64042-3006)	0299	1
	13A	9-64042-3005	. CAM ASSY, INBOARD SPOILER (SPOILERS NO. 3 AND 5). . .	0101	1
	13A	9-64042-3005	. CAM ASSY, INBOARD SPOILER (SPOILERS NO. 3 AND 5). . . (USED ON 5-84477-3057, -3065) (OPTIONAL 9-64042-3007)	0299	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
7 13A	9-64042-3007	. CAM ASSY, (SPOILERS NO. 3 AND 5). (USED ON 5-84477-3057, -3065) (OPTIONAL TO 9-64042-3005)	0299	1
		ATTACHING PARTS		
	BACR15CE6	. RIVET		2
	BACR15CE5	. RIVET		11
	BACS40B11-46	. SHIM.		2
	BACS40C12-12	. SHIM.		1
	BACS40B16-61	. SHIM.		AR
	BACS40B13-16	. SHIM.		AR
	BACS40B12-28	. SHIM.		AR
		-------*-------		
14	NAS1304-18H	. . BOLT.		1
15	MS20002C4	. . WASHER.		1
16	BACB10B131S	. . BEARING		1
17	BACN10CP4L	. . NUT		1
18	9-64042-2003	. . CAM, INBOARD SPOILER (USED ON 9-64042-3005)		1
18	9-64042-2004	. . CAM, INBOARD SPOILER (USED ON 9-64042-3006)		1
18A	9-60319-3003	. WEB ASSY, SPAR (SPOILERS NO. 3 AND 5) (OPTIONAL 9-60319-3001)		1
18A	9-60319-3001	. WEB ASSY, SPAR (SPOILERS NO. 3 AND 5) (OPTIONAL TO 9-60319-3003)		1
19	9-60319-3004	. WEB ASSY, SPAR (SPOILERS NO. 4 AND 6) (OPTIONAL 9-60319-3002)		1
19	9-60319-3002	. WEB ASSY, SPAR (SPOILERS NO. 4 AND 6) (OPTIONAL TO 9-60319-3004)		1
		ATTACHING PARTS		
	AN470D5	. RIVET		83
	AN470D6	. RIVET		52
		-------*-------		
20	3-95639-2000	. . COVER, ACCESS HOLE.		1
		ATTACHING PARTS		
	AN3-3A	. . BOLT.		12
		-------*-------		
21	3-95639-2001	. . COVER, ACCESS HOLE.		2
		ATTACHING PARTS		
	AN426D6	. . RIVET		12
	AN3-4A	. . BOLT.		8
	AN960D10L	. . WASHER.		8
		-------*-------		
22	66-11771-1	. SEAL ASSY, SPOILER.		1
23	66-11771-3	. . SEAL, SPOILER MOHAIR (BAC1523-7N X 56.32 IN. LG).		1
24	66-11771-5	. . STRIP, SPOILER SEAL RETAINING		1
25	5-84477-3039	. RETAINER, INBOARD SPOILER UPPER END SEAL.		1
		ATTACHING PARTS		
	NAS601-6	. SCREW		1
	NAS514P632-6	. SCREW		6
	AN960D6	. WASHER.		1
	AN960D6L	. WASHER.		6
		-------*-------		
26	5-84477-3037	. SEAL, INBOARD SPOILER UPPER END (EXTRUSION NO. BAC1530-24 X 23.8 IN. LG) (SPOILERS NO. 3 AND 5)		1
27	5-84477-3038	. SEAL, INBOARD SPOILER UPPER END (EXTRUSION NO. BAC1530-24 X 23.8 IN. LG) (SPOILERS NO. 4 AND 6)		1
28	66-11760-1	. BLOCK, SPOILER RUB.		2
29	66-11760-2	. BLOCK, SPOILER RUB.		1
		ATTACHING PARTS		
	NAS517-2-5	. SCREW		6
		-------*-------		
30	66-2404-3001	. STRIP ASSY, INBOARD SPOILER NUTPLATE (SPOILERS NO. 3 AND 5)		1
31	66-2404-3002	. STRIP ASSY, INBOARD SPOILER NUTPLATE (SPOILERS NO. 4 AND 6)		1
		ATTACHING PARTS		
	AN426D3	. RIVET		6
		-------*-------		
32	66-2404-2003	. . STRIP, INBOARD SPOILER NUTPLATE		1
33	63-2005-2	. STRIP, INBOARD SPOILER RUB.		1
34	63-2005-7	. STRIP, INBOARD SPOILER RUB.		1
35	5-84477-3046	. STRIP, INBOARD SPOILER RUB.		1
		ATTACHING PARTS		
	BACR15AQ6-217	. RIVET		6
	BACR15AQ6-180	. RIVET		6
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	7 35A	5-84477-3047	. STRIP, INBOARD SPOILER RUB.		1
			ATTACHING PARTS		
		BACR15AQ6-291	. RIVET		2
			-------*-------		
	35B	5-84477-3048	. STRIP, INBOARD SPOILER RUB.		1
			ATTACHING PARTS		
		NAS1398B4-4	. RIVET		8
			-------*-------		
R		69-3330-3	. SEAL INSTL, INBOARD SPOILER (SPOILERS NO. 3 AND 5).	0151	1
	36	69-3330-2	. . SEAL, INBOARD SPOILER		1
	36A	69-3330-4	. . SEAL, INBOARD SPOILER		1
			ATTACHING PARTS		
		BACR15CE5B4	. . RIVET		16
			-------*-------		
	37	63-1875-3	. STRIP, INBOARD SPOILER SEAL RUB (SPOILERS NO. 4 AND 6)		1
	38	63-10301	. STRIP, SPOILER RUB.		1
	39	5-84477-45	. STRIP, INBOARD SPOILER RUB (SPOILERS NO. 4 AND 6)		1
			ATTACHING PARTS		
		BACR15CE5B4	. RIVET		4
			-------*-------		
	39A	69-43662-1	. FAIRING, (SPOILERS NO. 3 AND 5)		1
	39B	69-43662-2	. FAIRING, (SPOILERS NO. 4 AND 6)		1
			ATTACHING PARTS		
		BACR15BE6	. RIVET		3
			-------*-------		
	40	69-18181-3	. PLATE ASSY, INBOARD SPOILER SEAL (SPOILERS NO. 3 AND 5)		1
	41	69-18181-4	. PLATE ASSY, INBOARD SPOILER SEAL (SPOILERS NO. 4 AND 6)		1
			ATTACHING PARTS		
		NAS514P632-5	. SCREW		2
			-------*-------		
	42	65-59572-1	. FITTING, INTERCONNECT (SPOILERS NO. 3 AND 5). (OPTIONAL 69-44836-1)		1
	42	69-44836-1	. FITTING, INTERCONNECT (SPOILERS NO. 3 AND 5). (OPTIONAL TO 65-59572-1)		1
	43	65-59573-1	. FITTING, INTERCONNECT (SPOILERS NO. 4 AND 6). (OPTIONAL 69-44835-1)		1
	43	69-44835-1	. FITTING, INTERCONNECT (SPOILERS NO. 4 AND 6). (OPTIONAL 65-59573-1)		1
			ATTACHING PARTS		
		NAS517-4-6	. SCREW		1
		AN960D416	. WASHER.		1
		8ACS40R10E49F	. SHIM.		1
		69-44838-3	. SHIM.		1
		69-44838-1	. SHIM.		1
		69-44838-2	. SHIM.		1
		NAS679A4W	. NUT		1
			-------*-------		
	44	9-60353-3003	. STOP, TRAVEL (SPOILERS NO. 3 AND 5)		1
	44A	9-60353-3004	. STOP, TRAVEL (SPOILERS NO. 4 AND 6)		1
			ATTACHING PARTS		
		BACR15CE6	. RIVET		28
			-------*-------		
R	45	65-23373-1	. RIB, ACTUATOR	0150	1
R	45	65-23373-3	. RIB, ACTUATOR	5199	1
R	45A	65-23373-4	. RIB, ACTUATOR	5199	1
R	45A	65-23373-2	. RIB, ACTUATOR	0150	1
	46	9-63878-3001	. FILLER. (OPTIONAL TO 9-63878-2001)		1
	46	9-63878-2001	. FILLER. (OPTIONAL 9-63878-3001)		1
	47	9-63878-3002	. FILLER. (OPTIONAL TO 9-63878-2002)		1
	47	9-63878-2002	. FILLER. (OPTIONAL 9-63878-3002)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

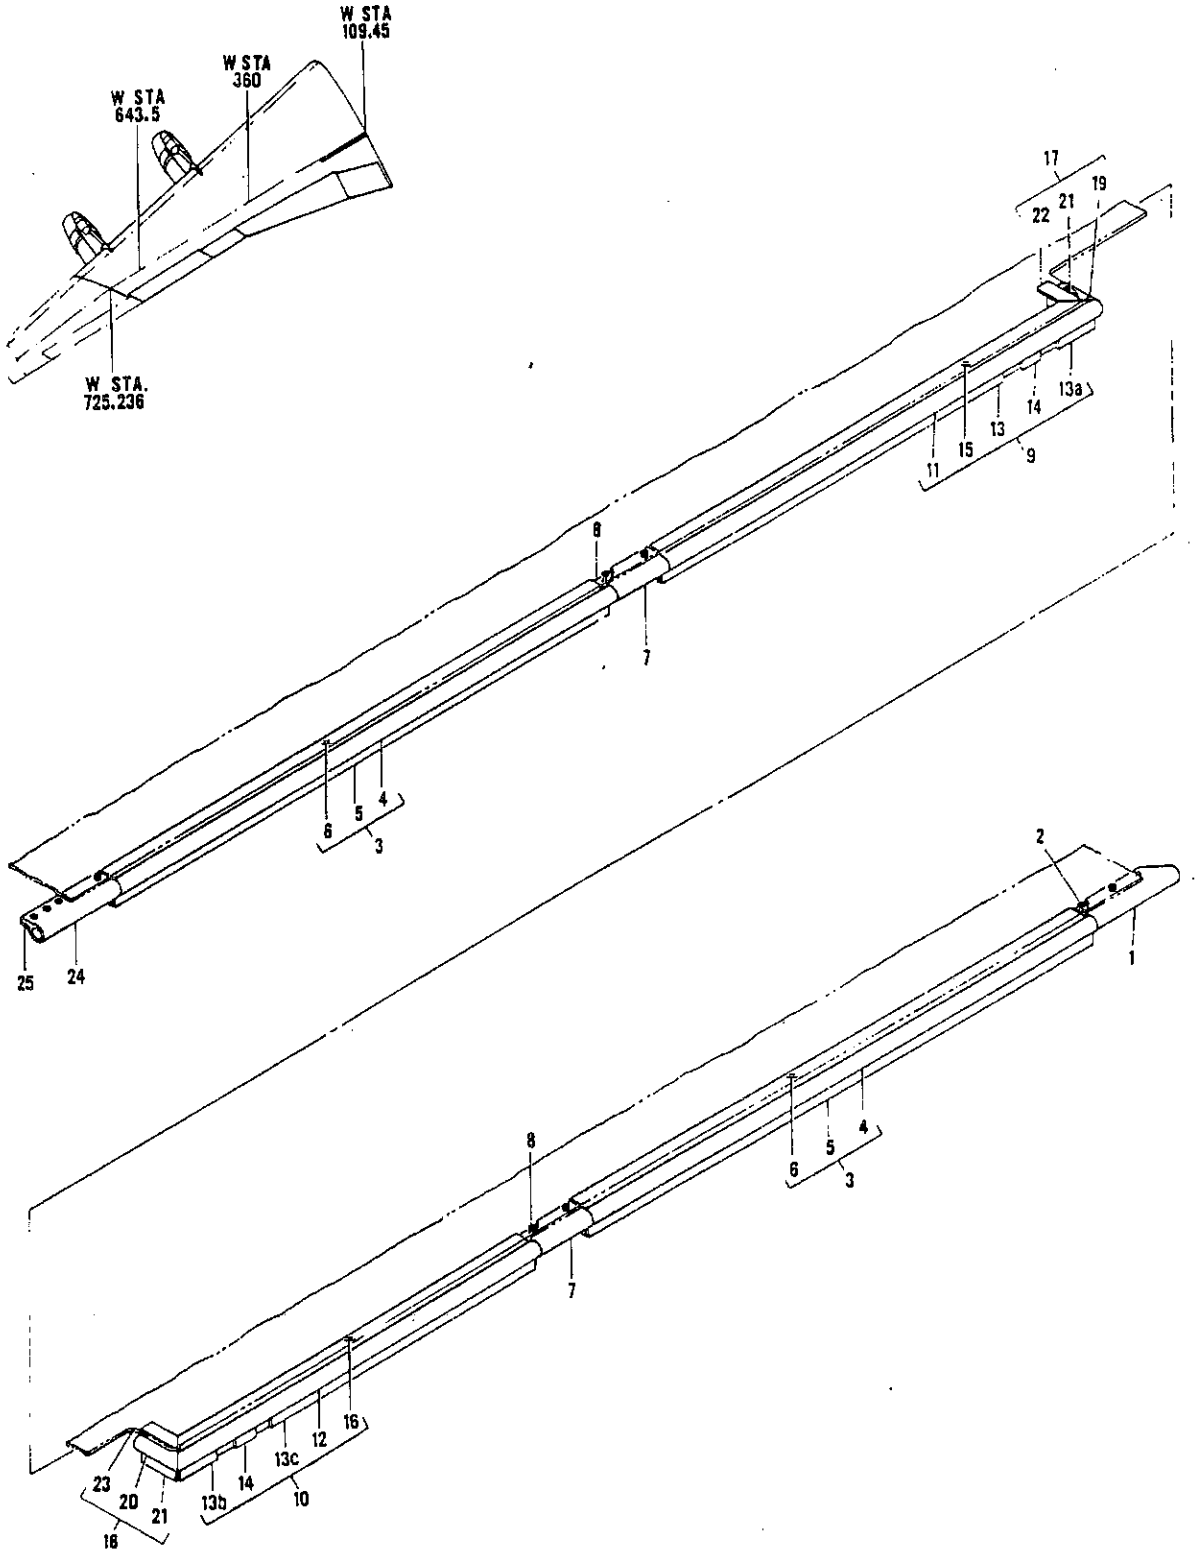


FIGURE 9. SEAL INSTL, INBOARD SPOILER LEADING EDGE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
9	65-68069-29	SEAL INSTL, INBOARD SPOILER LEADING EDGE (LH) (SEE. . . 57-3, FIG. 12, ITEM 129)		RF
	65-68069-30	SEAL INSTL, INBOARD SPOILER LEADING EDGE (RH) (SEE. . . 57-3, FIG. 12, ITEM 129)		RF
1	65-68069-39	. SEAL, INBOARD SPOILER LEADING EDGE (EXTRUSION) NO.. . BAC1530-10 X 4.3 IN. LG) (LH ONLY)		1
1	65-68069-40	. SEAL, INBOARD SPOILER LEADING EDGE (EXTRUSION) NO.. . BAC1530-10 X 4.3 IN. LG) (RH ONLY)		1
2	65-68069-47	. RETAINER, INBOARD SPOILER LEADING EDGE SEAL (LH ONLY)		1
2	65-68069-48	. RETAINER, INBOARD SPOILER LEADING EDGE SEAL (RH ONLY)		1
		ATTACHING PARTS		
	NAS514P632-6	. SCREW		3
	NAS679A06W	. NUT		3
		-------*-------		
3	65-68069-31	. SEAL ASSY, INBOARD SPOILER LEADING EDGE		2
4	65-68069-36	. . SEAL, INBOARD SPOILER LEADING EDGE (EXTRUSION) NO. BAC1530-10 X 25.8 IN. LG)		1
5	65-68069-53	. . RETAINER, INBOARD SPOILER LEADING EDGE SEAL		1
		ATTACHING PARTS		
	NAS601-5	. . SCREW		20
	NAS679A06W	. . NUT		20
		-------*-------		
6	65-68069-54	. . ANGLE, INBOARD SPOILER LEADING EDGE SEAL SUPPORT. .		1
7	65-68069-43	. SEAL, INBOARD SPOILER LEADING EDGE (EXTRUSION NO. . . BAC1530-10 X 2.6 IN. LG)		2
8	65-68069-44	. RETAINER, INBOARD SPOILER LEADING EDGE SEAL		2
		ATTACHING PARTS		
	NAS514P632-6	. SCREW		4
	NAS679A06W	. NUT		4
		-------*-------		
9	65-68069-33	. SEAL ASSY, INBOARD SPOILER LEADING EDGE		1
10	65-68069-34	. SEAL ASSY, INBOARD SPOILER LEADING EDGE		1
11	65-68069-37	. . SEAL, (EXTRUSION NO. BAC1530-10 X 22.3 IN. LG). . . (USED ON 65-68069-33)		1
12	65-68069-38	. . SEAL, INBOARD SPOILER LEADING EDGE (EXTRUSION NO. . BAC1530-10 X 22.3 IN. LG) (USED ON 65-68069-34)		1
13	65-68069-67	. . RETAINER, INBOARD SPOILER LEADING EDGE SEAL (USED . ON 65-68069-33)		1
13A	65-68069-65	. . RETAINER, INBOARD SPOILER LEADING EDGE SEAL (USED . ON 65-68069-33)		1
13B	65-68069-66	. . RETAINER, INBOARD SPOILER LEADING EDGE SEAL (USED . ON 65-68069-34)		1
13C	65-68069-68	. . RETAINER, INBOARD SPOILER LEADING EDGE SEAL (USED . ON 65-68069-34)		1
14	65-68069-88	. . RETAINER, INBOARD SPOILER LEADING EDGE SEAL		1
		ATTACHING PARTS		
	NAS601-5	. . SCREW		16
	NAS679A06W	. . NUT		16
		-------*-------		
15	65-68069-57	. . ANGLE, SUPPORT (USED ON 65-68069-33).		1
16	65-68069-58	. . ANGLE, INBOARD SPOILER LEADING EDGE SEAL SUPPORT. . (USED ON 65-68069-34)		1
17	65-68069-51	. SEAL ASSY, INBOARD SPOILER LEADING EDGE		1
18	65-68069-52	. SEAL ASSY, INBOARD SPOILER LEADING EDGE		1
19	65-68069-41	. . SEAL, INBOARD SPOILER LEADING EDGE (EXTRUSION NO. . BAC1530-10 X 2.2 IN. LG) (USED ON 65-68069-51)		1
20	65-68069-42	. . SEAL, INBOARD SPOILER LEADING EDGE (EXTRUSION NO. . BAC1530-10 X 2.2 IN. LG) (USED ON 65-68069-52)		1
21	65-68069-55	. . RETAINER, INBOARD SPOILER LEADING EDGE SEAL		1
		ATTACHING PARTS		
	NAS601-5	. . SCREW		2
	NAS679A06W	. . NUT		2
		-------*-------		
22	65-68069-59	. . ANGLE, INBOARD SPOILER LEADING EDGE SEAL SUPPORT. . (USED ON 65-68069-51)		1
23	65-68069-60	. . ANGLE, INBOARD SPOILER LEADING EDGE SEAL SUPPORT. . (USED ON 65-68069-52)		1
24	65-68069-35	. SEAL, INBOARD SPOILER LEADING EDGE (EXTRUSION NO. . . BAC1530-10 X 4.4 IN. LG)		1
25	65-68069-45	. RETAINER, INBOARD SPOILER LEADING EDGE SEAL (LH ONLY)		1
25	65-68069-46	. RETAINER, INBOARD SPOILER LEADING EDGE SEAL (RH ONLY)		1
		ATTACHING PARTS		
	NAS514P632-6	. SCREW		4
	NAS679A06W	. NUT		4
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING Intercontinental 707

PARTS CATALOG

SECTION 05

SPOILER CONTROL

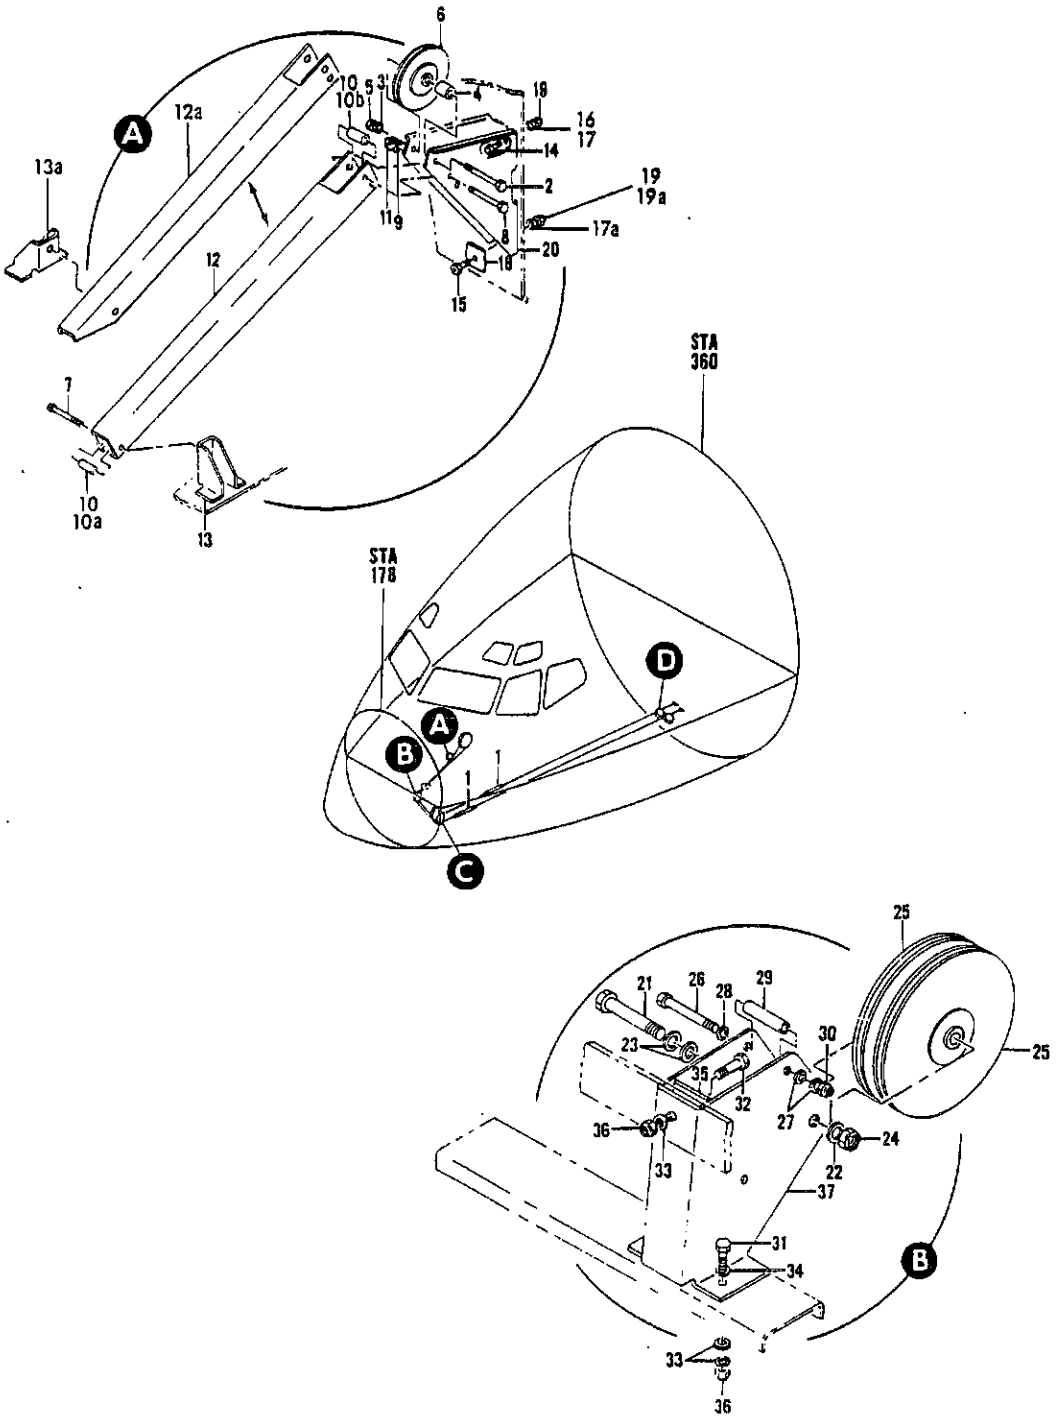


FIGURE 1. CONTROL INSTL, SECTION 51 SPEED BRAKE (SHEET 1)

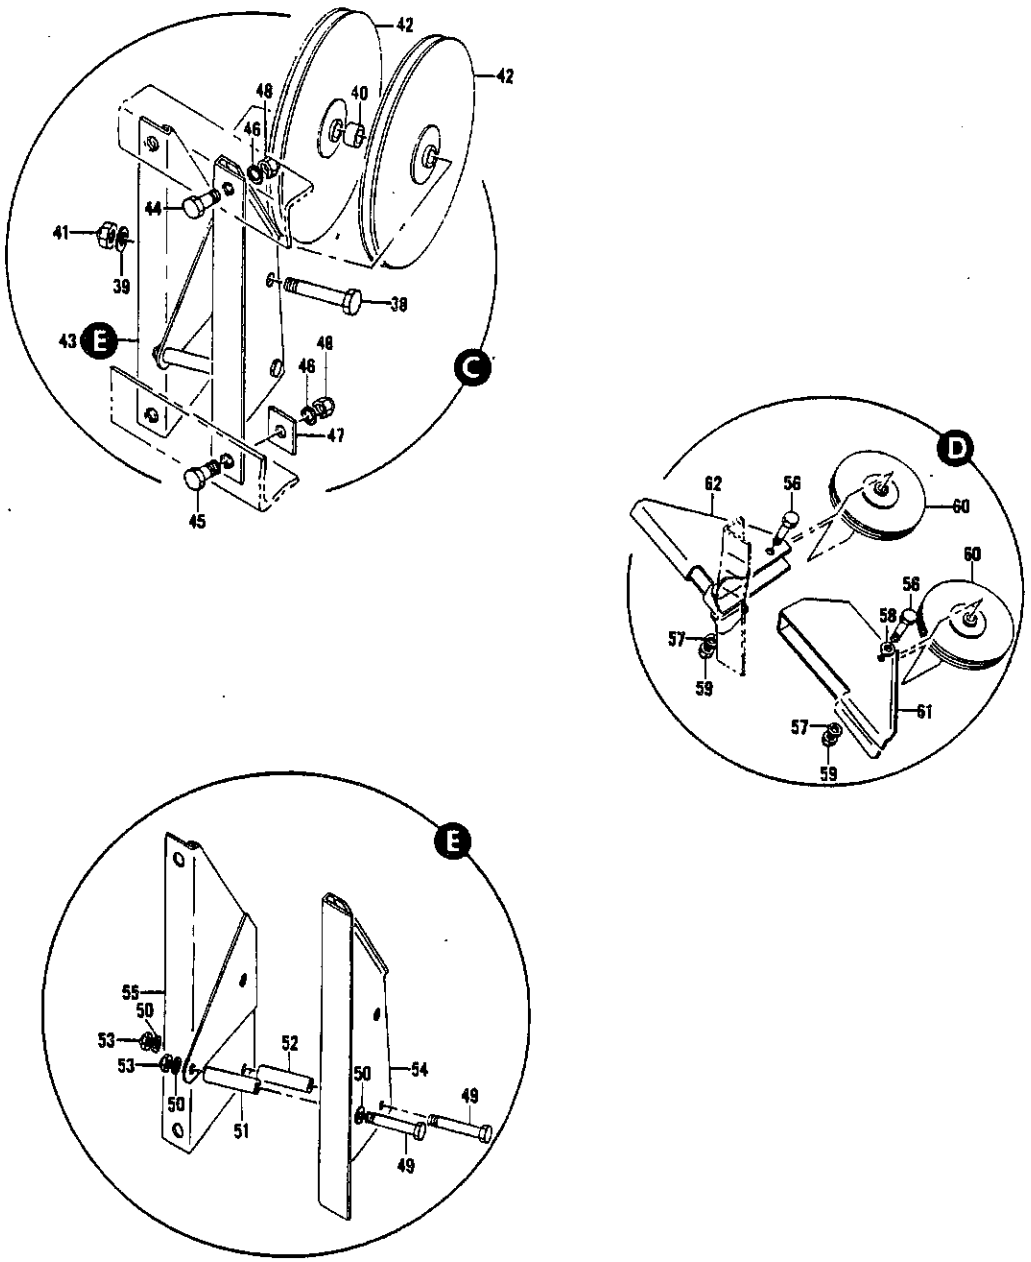


FIGURE 1. CONTROL INSTL, SECTION 51 SPEED BRAKE (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
1	50-8716-51	CONTROL INSTL, SECTION 51 SPEED BRAKE (SEE 53-1, FIG. 1, ITEM 3 AND 53-1, FIG. 6, ITEM 5)		RF
1	AN155-32L	. BARREL.		2
	65-3287	. BRACKET INSTL, SPEED BRAKE CONTROL STAND.		1
2	NAS1105-11D	. . BOLT.		1
3	AN960D516	. . WASHER.		1
5	AN320-5	. . NUT		1
6	MS20220-2	. . PULLEY.		1
7	NAS1303-15	. . BOLT.		1
8	NAS1303-13	. . BOLT.		2
9	AN960D10L	. . WASHER.		2
10A	NAS43DD3-56	. . SPACER.		1
10B	NAS43DD6-40	. . SPACER.		2
11	BACN10BY53W	. . NUT		2
12A	69-52999-3	. . GUARD ASSY, CABLE		1
13A	69-52999-1	. . BRACKET ASSY, CABLE GUARD		1
14	NAS1304-6	. . BOLT.		1
15	NAS1304-6	. . BOLT.		1
17	AN960D416	. . WASHER.		1
17A	AN960D416	. . WASHER.		1
18	50-5531-3026	. . FILLER, RADIUS.		1
19A	NAS679A4W	. . NUT		1
20	69-52682-1	. . BRACKET ASSY, PULLEY.		1
	50-8700	. BRACKET INSTL, STATION 178 SPEED BRAKE PULLEY		1
21	NAS1105-22DW	. . BOLT.		1
22	AN960D516	. . WASHER.		1
23	BACW10T516L	. . WASHER.		2
24	AN310-5	. . NUT		1
25	AN220-3	. . PULLEY.		2
26	AN3DD16A	. . BOLT.		2
27	AN960D10	. . WASHER.		2
28	BACW10T10L	. . WASHER.		2
29	NAS42DD6-80	. . SPACER.		2
30	NAS679A5	. . NUT		2
31	AN4-5A	. . BOLT.		2
32	AN4-7A	. . BOLT.		1
33	AN960D416	. . WASHER.		5
34	BACW10T416L	. . WASHER.		2
35	3-93990-1	. . FILLER, CONTROL PULLEY BRACKET RADIUS		1
36	NAS679A4W	. . NUT		3
37	66-1697	. . BRACKET, STATION 178 SPEED BRAKE PULLEY		1
	65-1960	. BRACKET INSTL, STATION 185.50 SPEED BRAKE PULLEY.		1
38	NAS1105-26D	. . BOLT.		1
39	AN960D516	. . WASHER.		1
40	NAS43DD5-16	. . SPACER.		1
41	AN320-5	. . NUT		1
42	AN220-4	. . PULLEY.		2
43	69-1894	. . BRACKET ASSY, STATION 185 SPEED BRAKE ATTACHING PARTS		1
44	AN4-5A	. . BOLT.		2
45	AN4-6A	. . BOLT.		2
46	AN960D416L	. . WASHER.		4
47	50-3361-35	. . FILLER, CONTROLS RADIUS		2
48	BACN10BY54W	. . NUT		4
		-------*-------		
49	AN3-20	. . . BOLT.		2
50	AN960D10	. . . WASHER.		3
51	NAS42DD6-98	. . . SPACER.		1
52	NAS42DD6-101	. . . SPACER.		1
53	BACN10BY53	. . . NUT		2
54	69-1894-5	. . . BRACKET, STATION 185 SPEED BRAKE.		1
55	69-1894-4	. . . BRACKET ASSY, STATION 185 SPEED BRAKE		1
	50-7961	. BRACKET INSTL, STATION 312 SPEED BRAKE.		1
56	NAS464P5-12	. . BOLT.		2
57	AN960D516	. . WASHER.		2
58	BACW10T516L	. . WASHER.		1
59	AN320-5	. . NUT		2
60	AN220-2	. . PULLEY.		2
61	69-1837-2	. . BRACKET ASSY, STATION 312 SPEED BRAKE PULLEY.		1
62	90-7831	. . BRACKET ASSY, STATION 312 SPEED BRAKE PULLEY.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

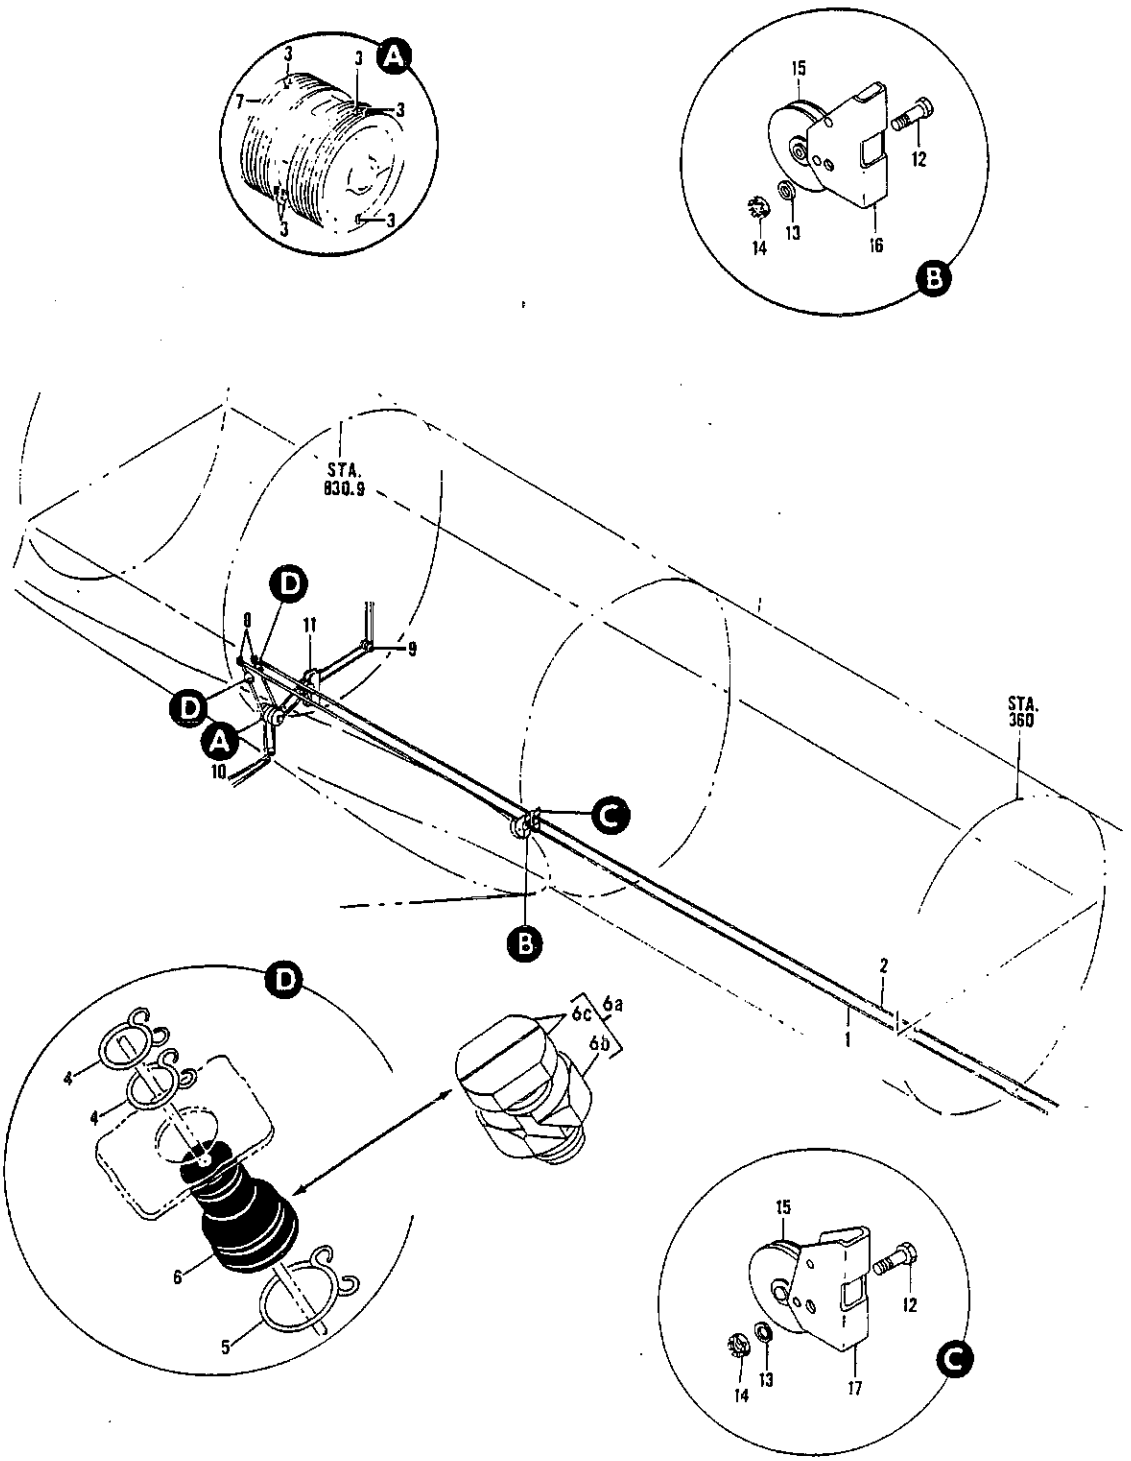


FIGURE 2. CONTROL INSTL, SECTION 53 SPEED BRAKE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2	50-8716-353	CONTROL INSTL, SECTION 53 SPEED BRAKE (SEE 53-1, FIG. 2, ITEM 8 AND 53-1, FIG. 5, ITEM 8)		RF
1	BACC13G468-8046	. CABLE ASSY.		1
2	BACC13G468-8105	. CABLE ASSY.		1
	AN669L4RH	. . TERMINAL.		1
	BACT14A4	. . TERMINAL.		1
3	60-6624	. RETAINER, CONTROL DRUM 1/8 CABLE.		6
4	BACS11L161C	. SEAL.		4
5	BACS11L162C	. SEAL.		2
6	S11K4RA	. SEAL, CABLE (V74687).		2
7	65-5422	. DRUM INSTL, STATION 820 RH SIDE SPEED BRAKE (SEE FIG. 3)		1
8	65-7101	. BRACKET INSTL, STATION 820 TO 830 SPEED BRAKE CONTROL (SEE FIG. 6)		1
9	65-6410	. BRACKET INSTL, STATION 820 LH SIDE SPEED BRAKE. . . . CONTROL (SEE FIG. 4)		1
10	65-6130	. BRACKET INSTL, STATION 820 RH SIDE SPEED BRAKE (SEE FIG. 5)		1
11	65-6097	. BRACKET INSTL, KEEL BEAM WHEEL WELL CONTROL (SEE FIG. 7 AND 8)		1
11	50-8723-9	. PULLEY INSTL, STATION 620 CABLE IDLER		1
12	BACB30NF5-11	. . BOLT.		2
13	AN960D516	. . WASHER.		2
14	BACN10JC5	. . NUT		2
15	AN220-1	. . PULLEY.		2
16	66-3950-2	. . BRACKET ASSY, CONTROL IDLER PULLEY.		1
17	66-3950-2	. . BRACKET ASSY, CONTROL IDLER PULLEY.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

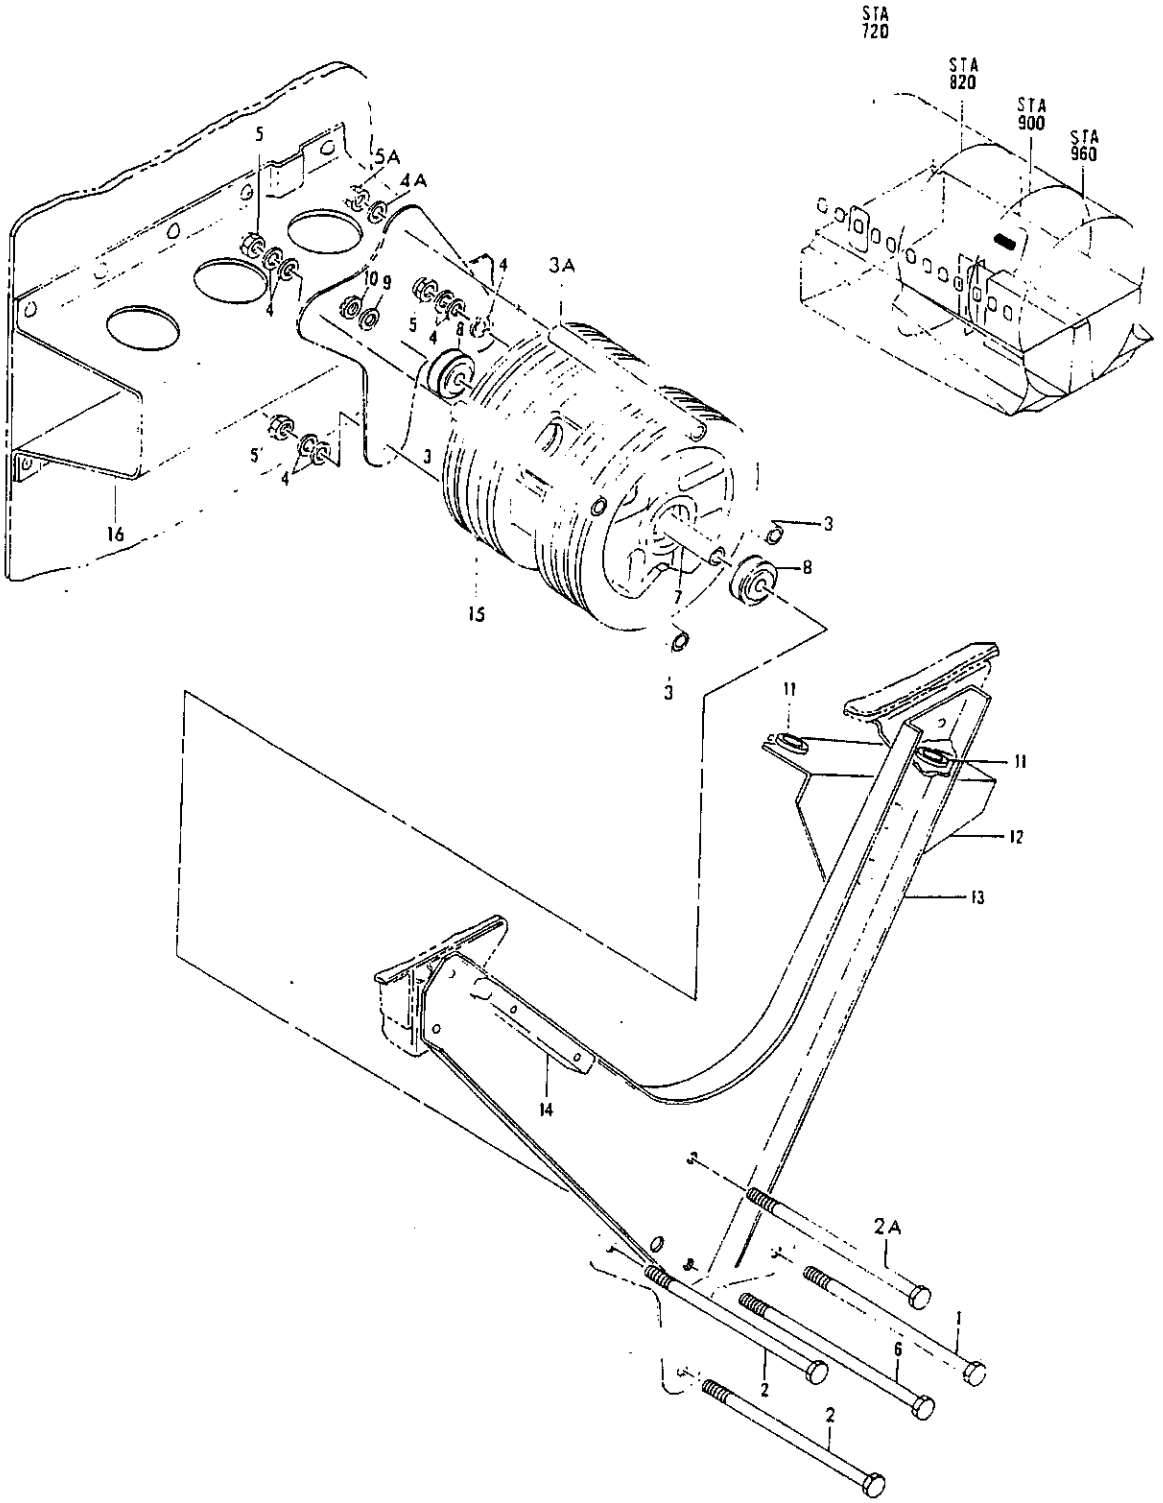


FIGURE 3. DRUM INSTL, STATION 820 RH SIDE SPEED BRAKE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	3	65-5422	DRUM INSTL, STATION 820 RH SIDE SPEED BRAKE (SEE FIG. 2, ITEM 7)		RF
	1	AN4-47A	. BOLT		1
	2	AN4-45A	. BOLT		2
	2A	AN4-45A	. BOLT		1
	3	NAS43DD4-259	. SPACER		3
	3A	NAS43DD4-259	. SPACER		1
	4	AN960D416	. WASHER		7
	4A	AN960D416	. WASHER		1
	5	BACN10BY54W	. NUT		3
	5A	BACN10BY54W	. NUT		1
	6	NAS464P4-72	. BOLT		1
	7	NAS43DD4-197	. SPACER		1
	8	AN200KP4	. BEARING		2
	9	AN960D416	. WASHER		1
	10	AN310-4	. NUT		1
	11	NAS557-8A	. GROMMET		2
	12	69-13208-1	. RETENTION, CONTROL CABLE SEAL		1
			ATTACHING PARTS		
		NAS1303-1W	. BOLT		2
		AN960D10L	. WASHER		2
		NAS679A3W	. NUT		2
			-------*-------		
	13	69-3997-3	. BRACE ASSY, SPEED BRAKE DRUM SUPPORT		1
	14	63-2120	. . STRIP, SPEED BRAKE BRACKET RUB		1
			ATTACHING PARTS		
		AN426B3	. . RIVET		2
			-------*-------		
R	15	5-67923-2000	. DRUM, STATION 820 DRAG SPOILER CONTROL	0150	1
R			(OPTIONAL TO 5-67923-2, -4)		
R	15	5-67923-4	. DRUM, STATION 820 DRAG SPOILER CONTROL	0150	1
R			(OPTIONAL TO 5-67923-2 AND -2000)		
R	15	5-67923-2	. DRUM, STATION 820 DRAG SPOILER CONTROL	0150	1
R			(OPTIONAL 5-67923-2000, -4)		
R	15	5-67923-2	. DRUM, STATION 820 DRAG SPOILER CONTROL	5199	1
R			(OPTIONAL 5-67923-4)		
R	15	5-67923-4	. DRUM, STATION 820 DRAG SPOILER CONTROL	5199	1
R			(OPTIONAL TO 5-67923-2)		
	16	69-3990	. BRACKET ASSY, SPEED BRAKE DRUM SUPPORT		1
			ATTACHING PARTS		
		MS20470D5	. RIVET		11
		MS20470D8	. RIVET		1
		65-5422-1	. FILLER, SPEED BRAKE DRUM SUPPORT BRACKET		5
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

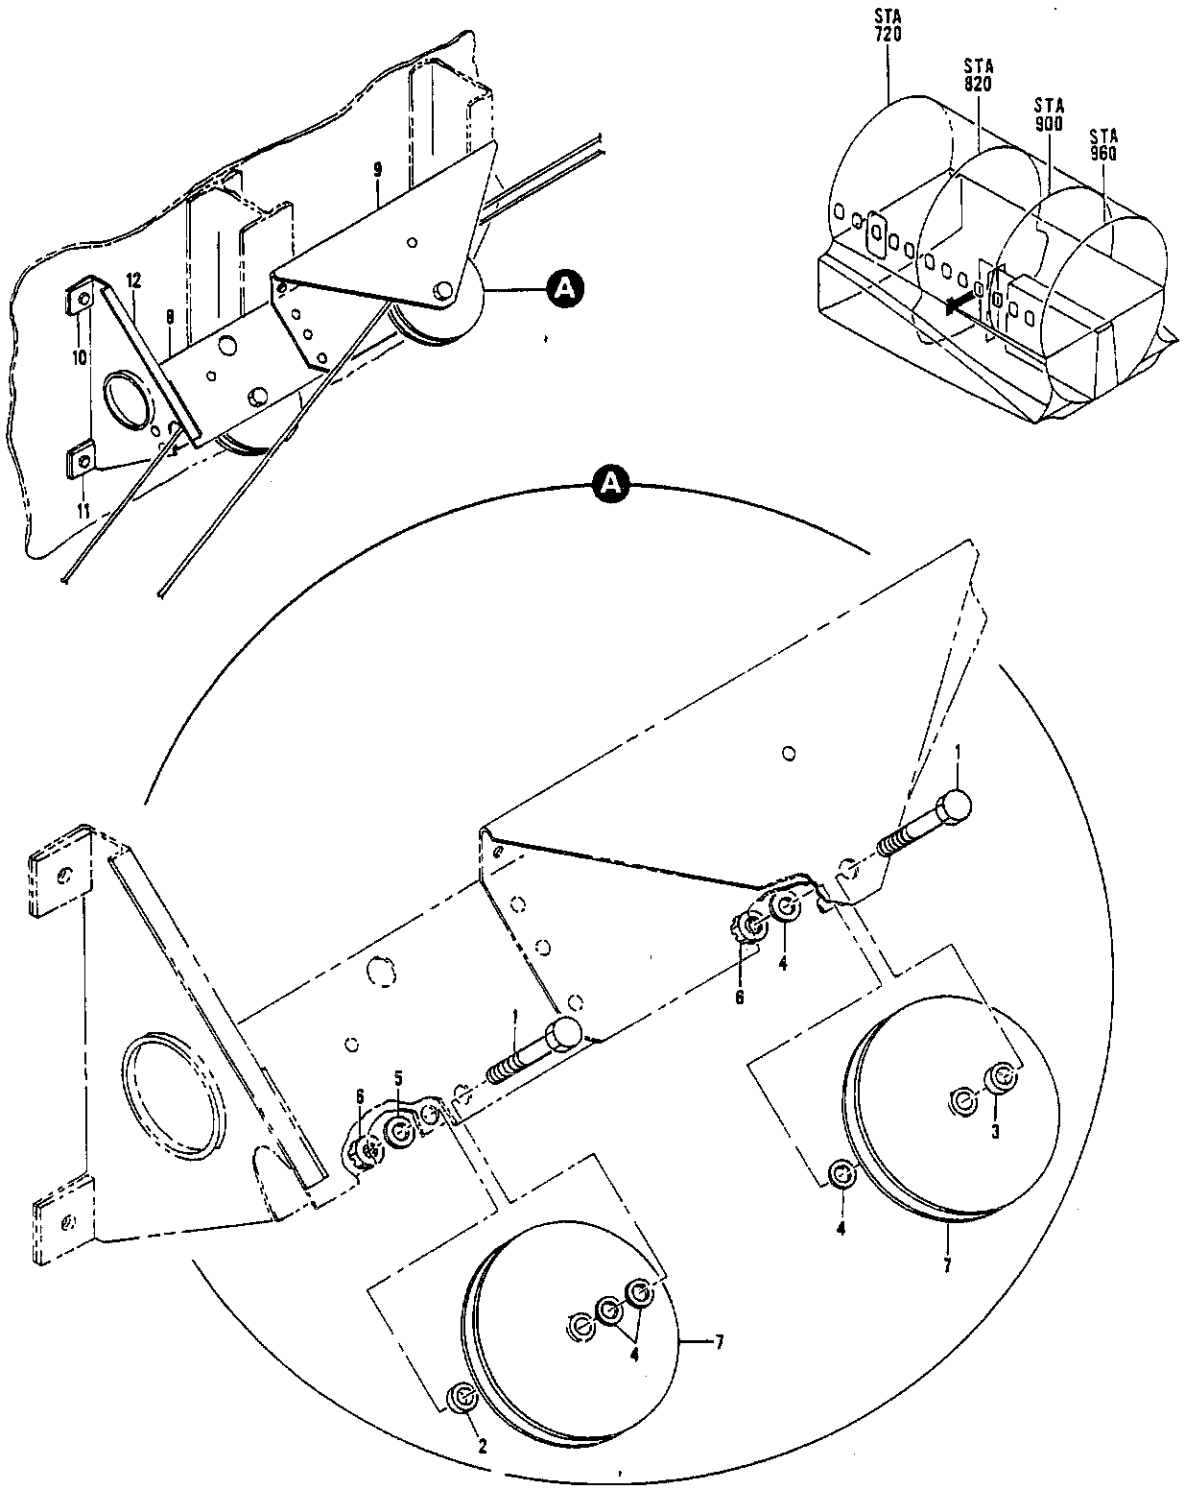
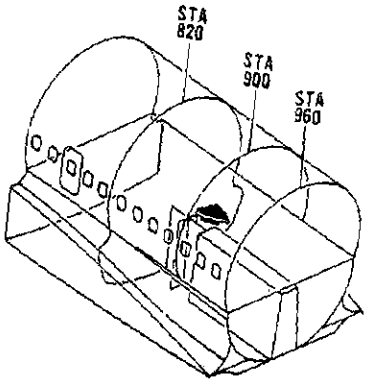


FIGURE 4. BRACKET INSTL, STATION 820 LH SIDE SPEED BRAKE CONTROL

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
4	65-6410	BRACKET INSTL, STATION 820 LH SIDE SPEED BRAKE CONTROL (SEE FIG. 2, ITEM 9)		RF
1	NAS464P5-15	. BOLT.		2
2	NAS43DD5-9	. SPACER.		1
3	NAS43DD5-12	. SPACER.		1
4	AN960D516L	. WASHER.		4
5	AN960D516	. WASHER.		1
6	AN320-5	. NUT		2
7	AN220-2	. PULLEY.		2
8	69-4918	. BRACKET ASSY, SPEED BRAKE CONTROL		1
		ATTACHING PARTS		
	NAS464P4-4A	. BOLT.		1
	AN960D416	. WASHER.		1
	NAS679A4W	. NUT		1
		-------*-------		
9	69-4917	. BRACKET ASSY, SPEED BRAKE CONTROL (OPTIONAL TO 69-4917-2)		1
9	69-4917-2	. BRACKET ASSY, SPEED BRAKE CONTROL (OPTIONAL 69-4917)		1
		ATTACHING PARTS		
	AN4-6A	. BOLT.		2
	AN960D416	. WASHER.		2
	50-3361	. FILLER, CONTROLS RADIUS		2
	NAS679A4W	. NUT		2
		-------*-------		
10	66-4968	. FILLER, SPECIAL RADIUS.		1
11	66-4968-1	. FILLER, SPECIAL RADIUS.		1
12	69-5738	. BRACKET, SPEED BRAKE SUPPORT.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



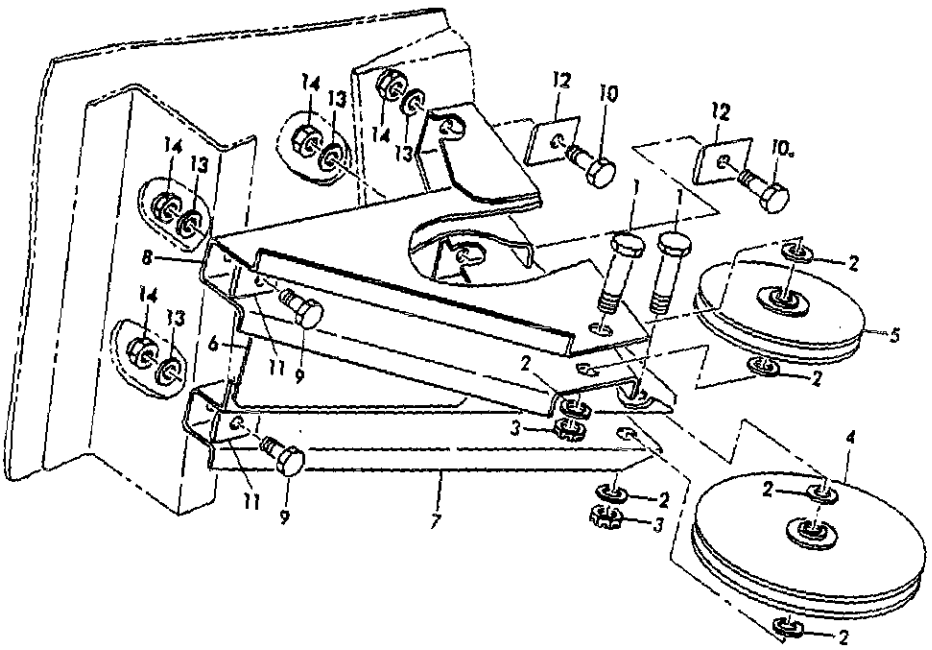


FIGURE 5. BRACKET INSTL. STATION 820 RH SIDE SPEED BRAKE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
5	65-6130	BRACKET INSTL, STATION 820 RH SIDE SPEED BRAKE (SEE FIG. 2, ITEM 10)		RF
1	NAS1105-14DW	. BOLT.		2
2	AN960D516	. WASHER.		6
3	AN320-5	. NUT		2
4	AN220-3	. PULLEY.		1
5	AN220-2	. PULLEY.		1
6	69-5385-3	. WEB, SPEED BRAKE BRACKET CONTROL.		1
7	69-5385	. BRACKET ASSY, SPEED BRAKE CONTROL		1
8	69-5386-3	. BRACKET ASSY, SPEED BRAKE		1
		ATTACHING PARTS		
9	AN4-6A	. BOLT.		2
10	AN4-10A	. BOLT.		2
11	50-3361-49	. FILLER, CONTROLS RADIUS		2
12	63-2087	. FILLER, SPEED BRAKE BRACKET RADIUS.		2
13	AN960D416	. WASHER.		4
14	BACN10BY54W	. NUT		4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

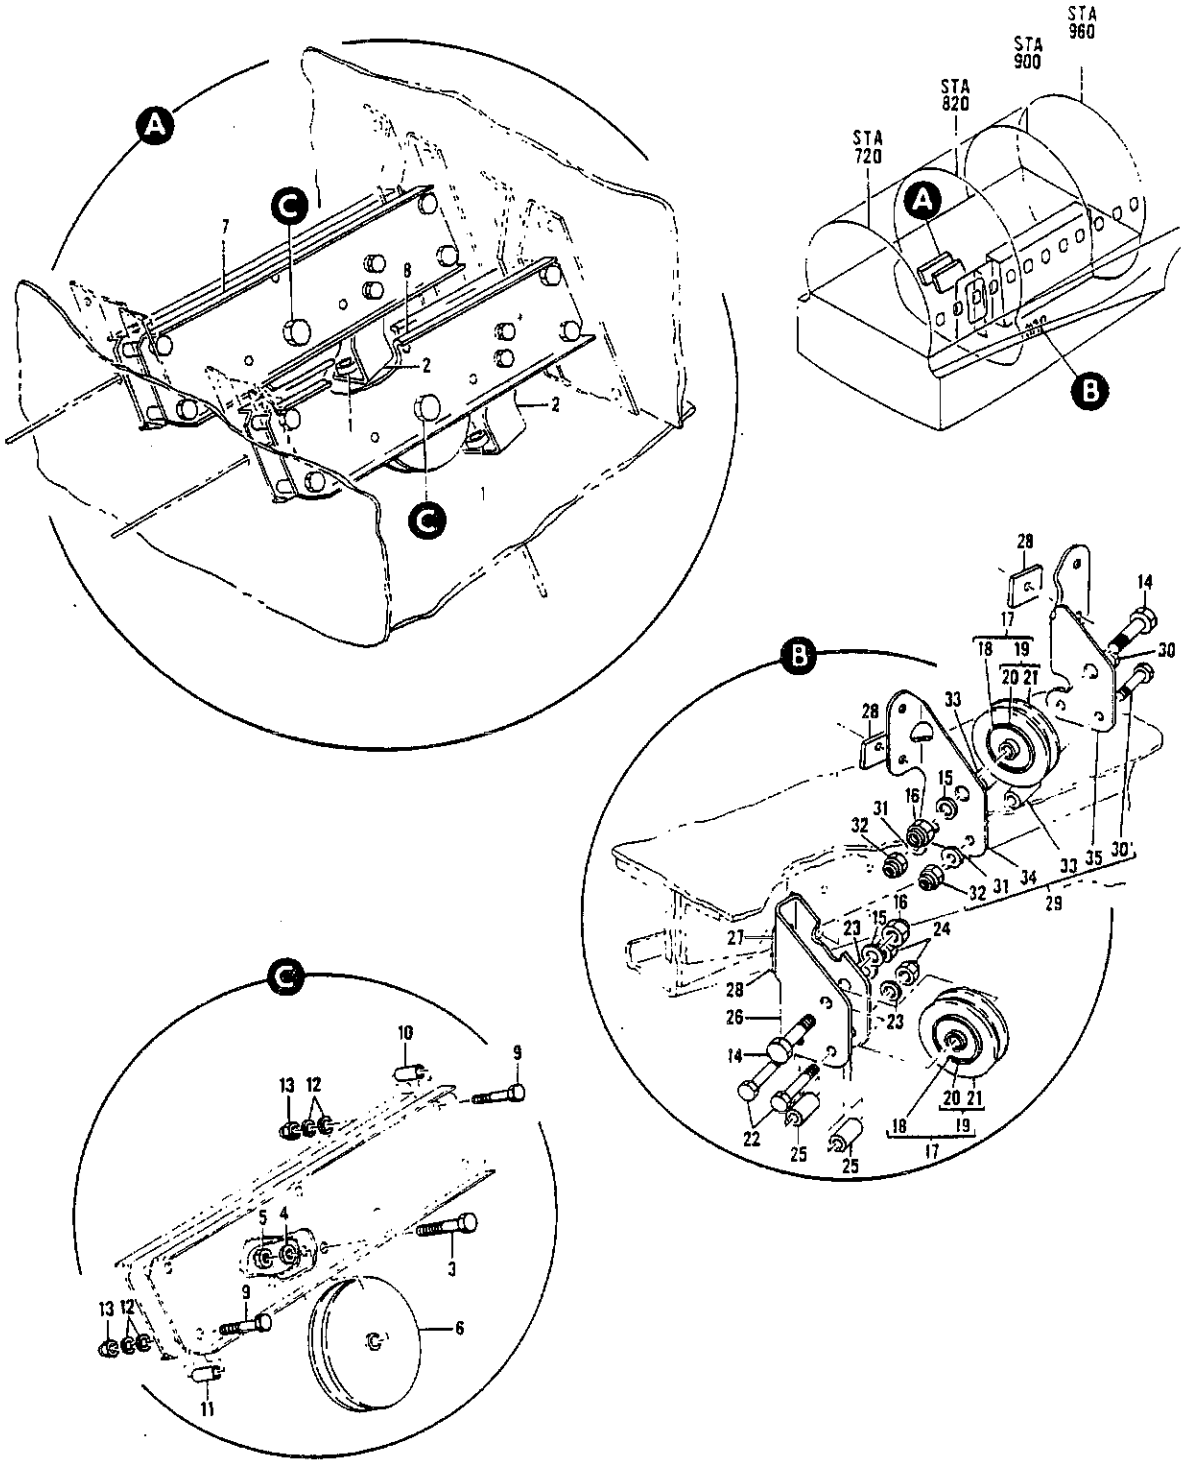
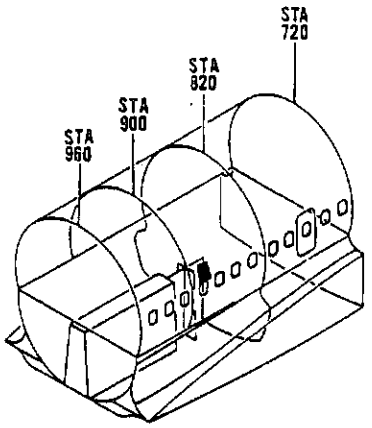


FIGURE 6. BRACKET INSTL, STATION 820 TO 830 AND BODY BUTTOCK LINE 78.1 SPEED BRAKE CONTROL

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
6		BRACKET INSTL, STATION 820 TO 830 AND BODY BUTTOCK. . . LINE 78.1 SPEED BRAKE CONTROL		
	65-7101	. BRACKET INSTL, STATION 820 TO 830 SPEED BRAKE CONTROL (SEE FIG. 2, ITEM 8)		RF
1	NAS557-6A	. . GROMMET		2
2	69-13209-21	. . RETENTION ASSY, CONTROL CABLE SEAL.		2
		ATTACHING PARTS		
	NAS1303-1W	. . BOLT.		4
	AN960D10L	. . WASHER.		4
		-------*-------		
3	NAS464P5-12	. . BOLT.		2
4	AN960D516	. . WASHER.		2
5	AN320-5	. . NUT		2
6	AN220-2	. . PULLEY.		2
7	9-66351-3001	. . BRACKET ASSY, STATION 820 TO 830 SPEED BRAKE. . . . CONTROL		1
8	9-66351-3002	. . BRACKET ASSY, STATION 820 TO 830 SPEED BRAKE. . . . CONTROL		1
		ATTACHING PARTS		
9	AN4-12A	. . BOLT.		8
10	NAS43DD4-33	. . SPACER.		4
11	NAS43DD4-32	. . SPACER.		4
12	AN960D416	. . WASHER.		16
13	BACN10BY54W	. . NUT		8
		-------*-------		
	65-29918-1	. BRACKET INSTL, BODY BUTTOCK LINE 78.1 SPEED BRAKE . . PULLEY (SEE 57-5, FIG. 6, ITEM 9)		RF
14	NAS1104-12DW	. . BOLT.		2
15	AN960D416	. . WASHER.		2
16	AN320-4	. . NUT		2
17	69-18330-1	. . PULLEY ASSY, 1/8 AND 3/16 IN. DIA CABLE IDLER . . . (OPTIONAL TO 69-18330-3)		2
17	69-18330-3	. PULLEY ASSY, 1/8 AND 3/16 IN. DIAMETER CABLE IDLER. . (OPTIONAL 69-18330-1)		2
18	AN207DPP4	. . . BEARING		1
19	69-18329-1	. . . SHEAVE ASSY, IDLER PULLEY		1
20	66-14882-1	. . . . BUSHING, PULLEY		1
21	69-18329-3	. . . . SHEAVE, IDLER PULLEY.		1
22	NAS1103-12W	. . BOLT.		2
23	AN960D10	. . WASHER.		2
24	NAS679A3W	. . NUT		2
25	66-17963-1	. . SPACER, SPEED BRAKE PULLEY BRACKET.		2
26	66-17967-1	. . BRACKET, BODY BUTTOCK LINE 78.1 SPEED BRAKE CABLE . SBB PULLEY		1
27	66-17967-2	. . FILLER, BODY BUTTOCK LINE 78.1 SPEED BRAKE CABLE. . SBB PULLEY BRACKET		1
28	65-29918-2	. . FILLER, BODY BUTTOCK LINE 78.1 SPEED BRAKE PULLEY . BRACKET		3
29	65-29918-3	. . BRACKET ASSY, BODY BUTTOCK LINE 78.1 SPEED BRAKE. . PULLEY		1
30	NAS1103-12W	. . . BOLT.		2
31	AN960D10	. . . WASHER.		2
32	NAS679A3W	. . . NUT		2
33	66-17963-1	. . . SPACER, SPEED BRAKE PULLEY BRACKET.		2
34	69-24170-1	. . . BRACKET, BODY BUTTOCK LINE 78.1 SPEED BRAKE CABLE SBA PULLEY		1
35	69-24170-2	. . . BRACKET, BODY BUTTOCK LINE 78.1 SPEED BRAKE CABLE S8A PULLEY		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



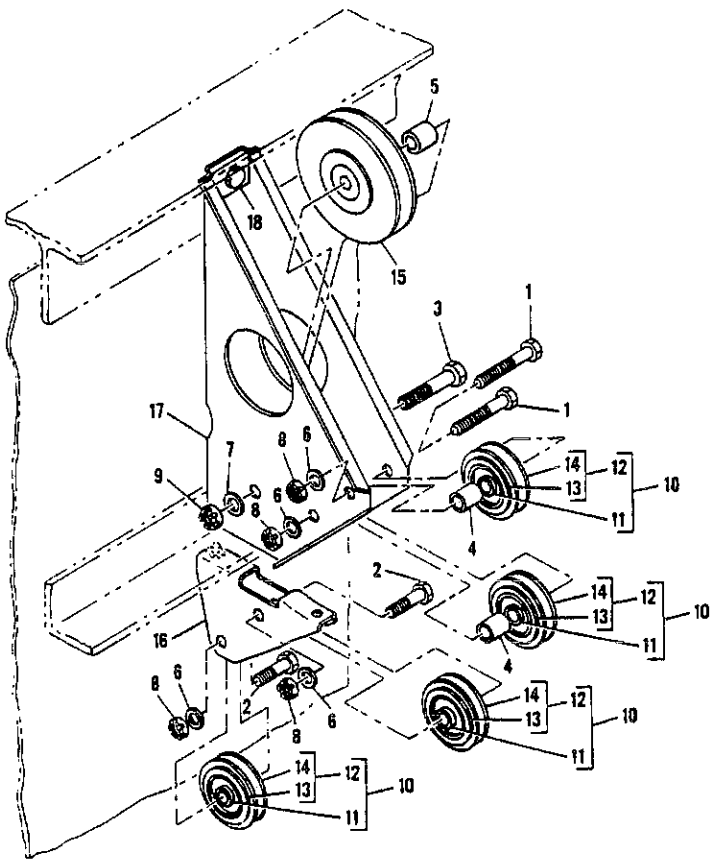


FIGURE 8. BRACKET INSTL, KEEL BEAM WHEEL WELL CONTROL

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8	65-6097	BRACKET INSTL, KEEL BEAM WHEEL WELL CONTROL (SEE FIG. 2, ITEM 11)		RF
1	NAS1104-22D	. BOLT.		2
2	NAS1104-12D	. BOLT.		2
3	NAS1105-22D	. BOLT.		1
4	NAS43DD-4-40	. SPACER.		2
5	NAS43DD-5-40	. SPACER.		1
6	AN960D416	. WASHER.		4
7	AN960D516	. WASHER.		1
8	AN320-4	. NUT		4
9	AN320-5	. NUT		1
10	69-18330-3	. PULLEY ASSY, 1/8 AND 3/16 IN. DIAMETER CABLE IDLER.		4
11	BACB10A581	. . BEARING		1
12	69-18329-1	. . SHEAVE ASSY, IDLER PULLEY		1
13	66-14882-1	. . . BUSHING, PULLEY		1
14	69-18329-3	. . . SHEAVE, IDLER PULLEY.		1
15	MS20220-2	. PULLEY.		1
16	66-15258-1	. BRACKET, AILERON BUS CONTROL.		1
		ATTACHING PARTS		
	BACB30AL6-3	. BOLT.		1
		-------*-------		
17	69-18992-1	. BRACKET ASSY, SPEED BRAKE CONTROL		1
18	50-3361-3041	. FILLER, CONTROLS RADIUS		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

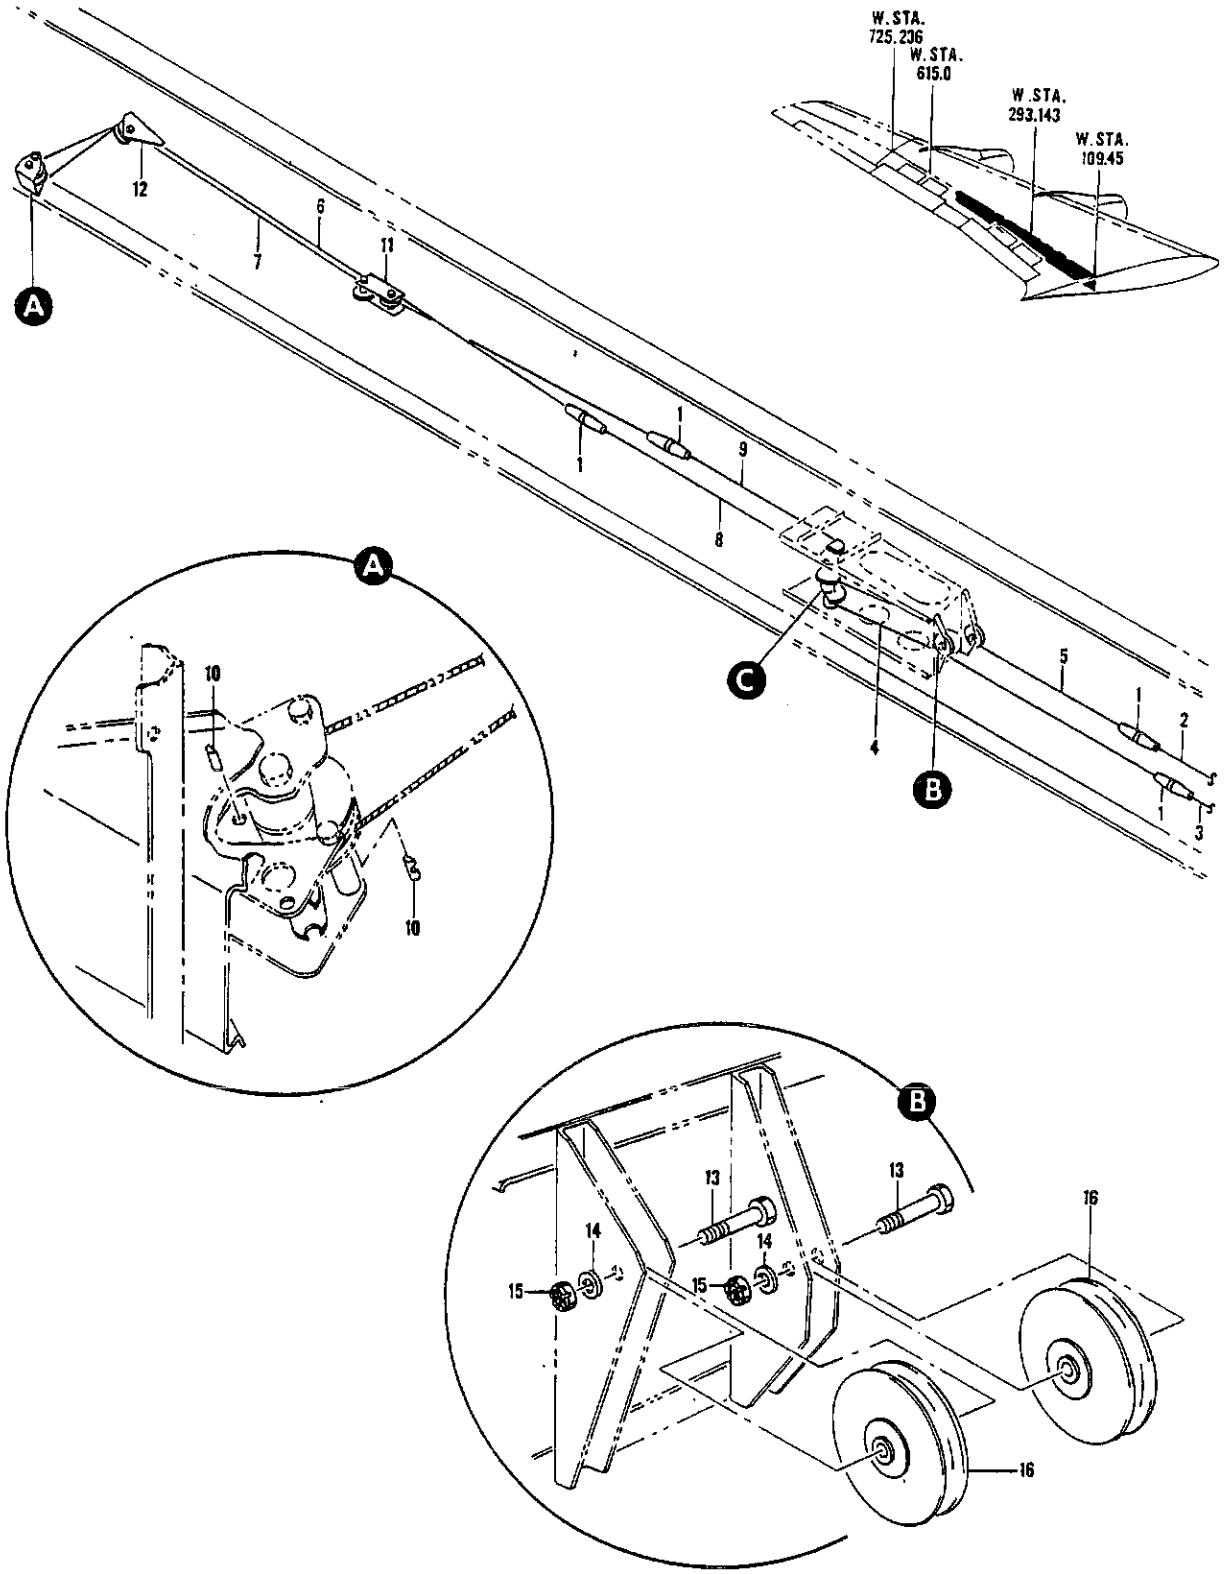


FIGURE 9. CONTROL INSTL, SECTION 26 SPEED BRAKE (SHEET 1)

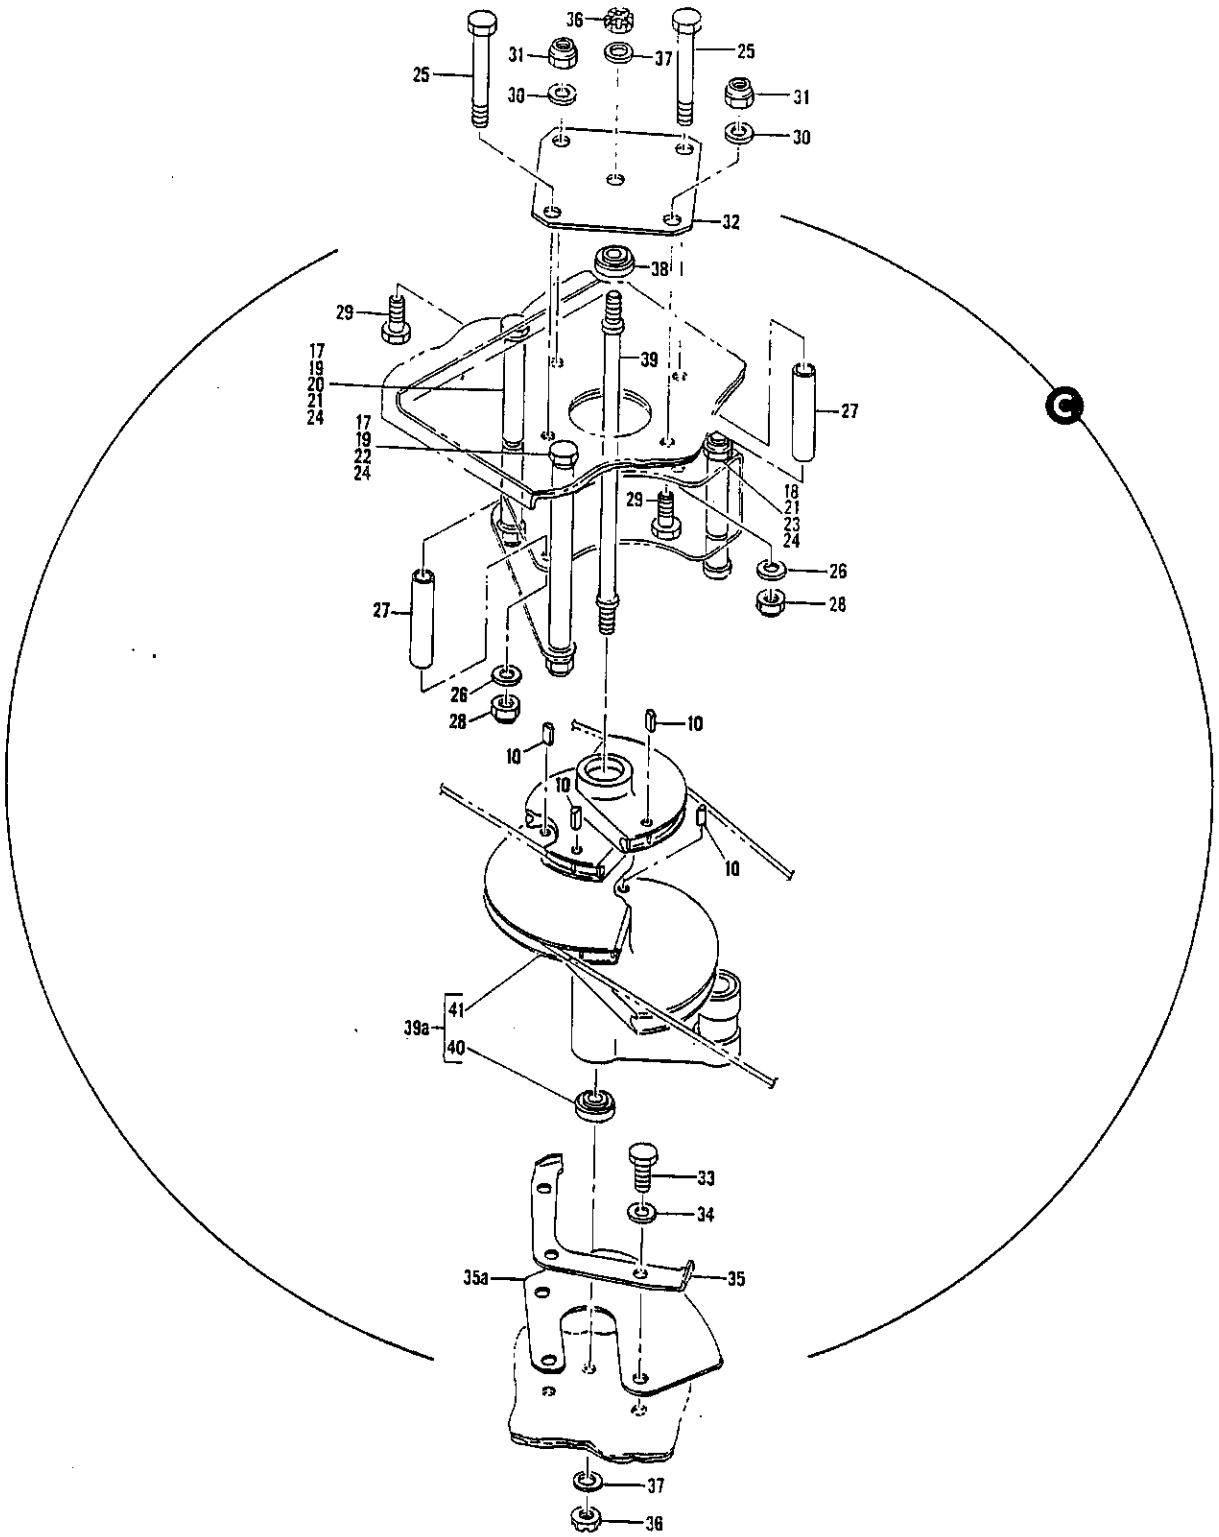


FIGURE 9. CONTROL INSTL, SECTION 26 SPEED BRAKE (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
9	50-8716-326	CONTROL INSTL, SECTION 26 SPEED BRAKE LH (SEE 57-3, FIG. 1, ITEM 17)		RF
	50-8716-426	CONTROL INSTL, SECTION 26 SPEED BRAKE RH (SEE 57-3, FIG. 1, ITEM 17)		RF
1	AN155-32L	. BARREL.		4
2	BACC13G468-2822	. CABLE ASSY, (LH ONLY)		1
2	BACC13G469-1940	. CABLE ASSY, (RH ONLY)		1
3	BACC13G468-2927	. CABLE ASSY, (LH ONLY)		1
3	BACC13G469-2040	. CABLE ASSY, (RH ONLY)		1
4	BACC13G469-326	. CABLE ASSY, (LH ONLY)		1
4	BACC13G468-326	. CABLE ASSY, (RH ONLY)		1
5	BACC13G469-450	. CABLE ASSY, (LH ONLY)		1
5	BACC13G468-450	. CABLE ASSY, (RH ONLY)		1
6	BACC13G469-1338	. CABLE ASSY, (LH ONLY)		1
6	BACC13G468-1338	. CABLE ASSY, (RH ONLY)		1
7	BACC13G469-1419	. CABLE ASSY, (LH ONLY)		1
7	BACC13G468-1419	. CABLE ASSY, (RH ONLY)		1
8	BACC13G468-561	. CABLE ASSY, (LH ONLY)		1
8	BACC13G469-561	. CABLE ASSY, (RH ONLY)		1
9	BACC13G468-459	. CABLE ASSY, (LH ONLY)		1
9	BACC13G469-459	. CABLE ASSY, (RH ONLY)		1
	AN669L4LH	. . TERMINAL, (LH ONLY)		1
	AN669L4RH	. . TERMINAL, (RH ONLY)		1
	BACT14A4	. . TERMINAL.		1
10	30-2657	. RETAINER, SPEED BRAKE CABLE TERMINAL.		6
11	65-5960-1	. BRACKET INSTL, WING STATION 426 SPEED BRAKE (LH ONLY) (SEE FIG. 10)		1
11	65-5960-2	. BRACKET INSTL, WING STATION 426 SPEED BRAKE (RH ONLY) (SEE FIG. 10)		1
12	65-6086-1	. BRACKET INSTL, WING STATION 492 TO 501 SPEED BRAKE. BUS (LH ONLY) (SEE FIG. 10)		1
12	65-6086-2	. BRACKET INSTL, WING STATION 492 TO 501 SPEED BRAKE. BUS (RH ONLY) (SEE FIG. 10)		1
	65-6616-1	. DRUM AND BRACKET INSTL, TRAILING EDGE STATION 135.884 TO 155.071 SPEED BRAKE (LH ONLY)		1
	65-6616-2	. DRUM AND BRACKET INSTL, TRAILING EDGE STATION 135.884 TO 155.071 SPEED BRAKE (RH ONLY)		1
13	NAS464P5-13	. . BOLT.		2
14	AN960D10L	. . WASHER.		2
15	AN320-5	. . NUT		2
16	AN220-2	. . PULLEY.		2
17	AN3-40A	. . BOLT.		2
18	NAS623-3-38W	. . SCREW		1
19	AN960D10L	. . WASHER.		2
20	NAS43DD3-124	. . SPACER.		1
21	NAS43DD3-104	. . SPACER.		2
22	NAS43DD3-234	. . SPACER.		1
23	NAS43DD3-48	. . SPACER.		1
24	NAS679A3W	. . NUT		3
25	AN3-24A	. . BOLT.		2
26	AN960D10L	. . WASHER.		2
27	NAS43DD3-124	. . SPACER.		2
28	NAS679A3W	. . NUT		2
29	AN3-5A	. . BOLT.		2
30	AN960D10L	. . WASHER.		2
31	NAS679A3W	. . NUT		2
32	66-8347	. . RETAINER, WING STATION 318 BEARING.		3
33	AN3-5A	. . BOLT.		3
34	AN960D10L	. . WASHER.		3
35	66-10613-5	. . STOP, SPEED BRAKE DRUM (LH ONLY).		1
35	66-10613-6	. . STOP, SPEED BRAKE DRUM (RH ONLY).		1
36	AN320-4	. . NUT		2
37	AN960D416	. . WASHER.		2
38	AN201KP4A	. . BEARING		1
39	66-8348	. . SHAFT, DRUM WING STATION 318 INBOARD SPEED BRAKE.		1
39A	65-8302-15	. . DRUM ASSY, SPEED BRAKE BUS (LH ONLY).		1
39A	65-8302-16	. . DRUM ASSY, SPEED BRAKE BUS (RH ONLY).		1
40	AN201KP4A	. . . BEARING		1
41	65-8302-17	. . . DRUM, SPEED BRAKE BUS (LH ONLY)		1
41	65-8302-18	. . . DRUM, SPEED BRAKE BUS (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

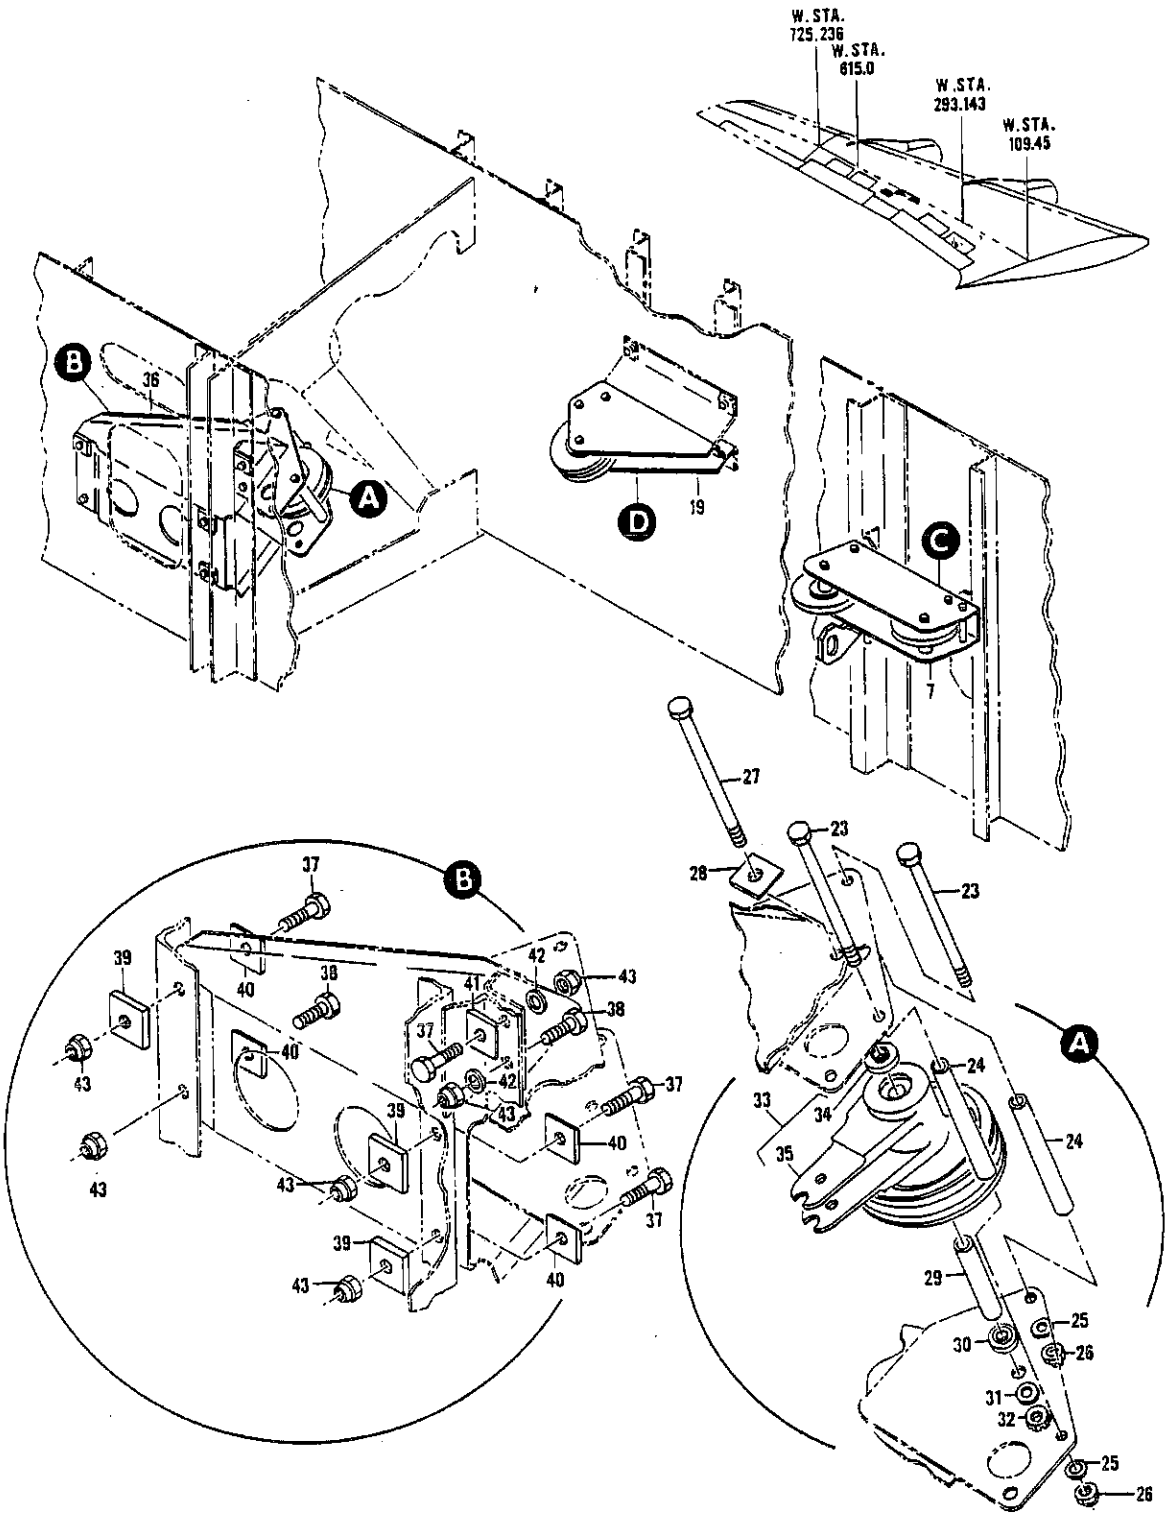


FIGURE 10. BRACKET INSTL, SPEED BRAKE BUS (SHEET 1)

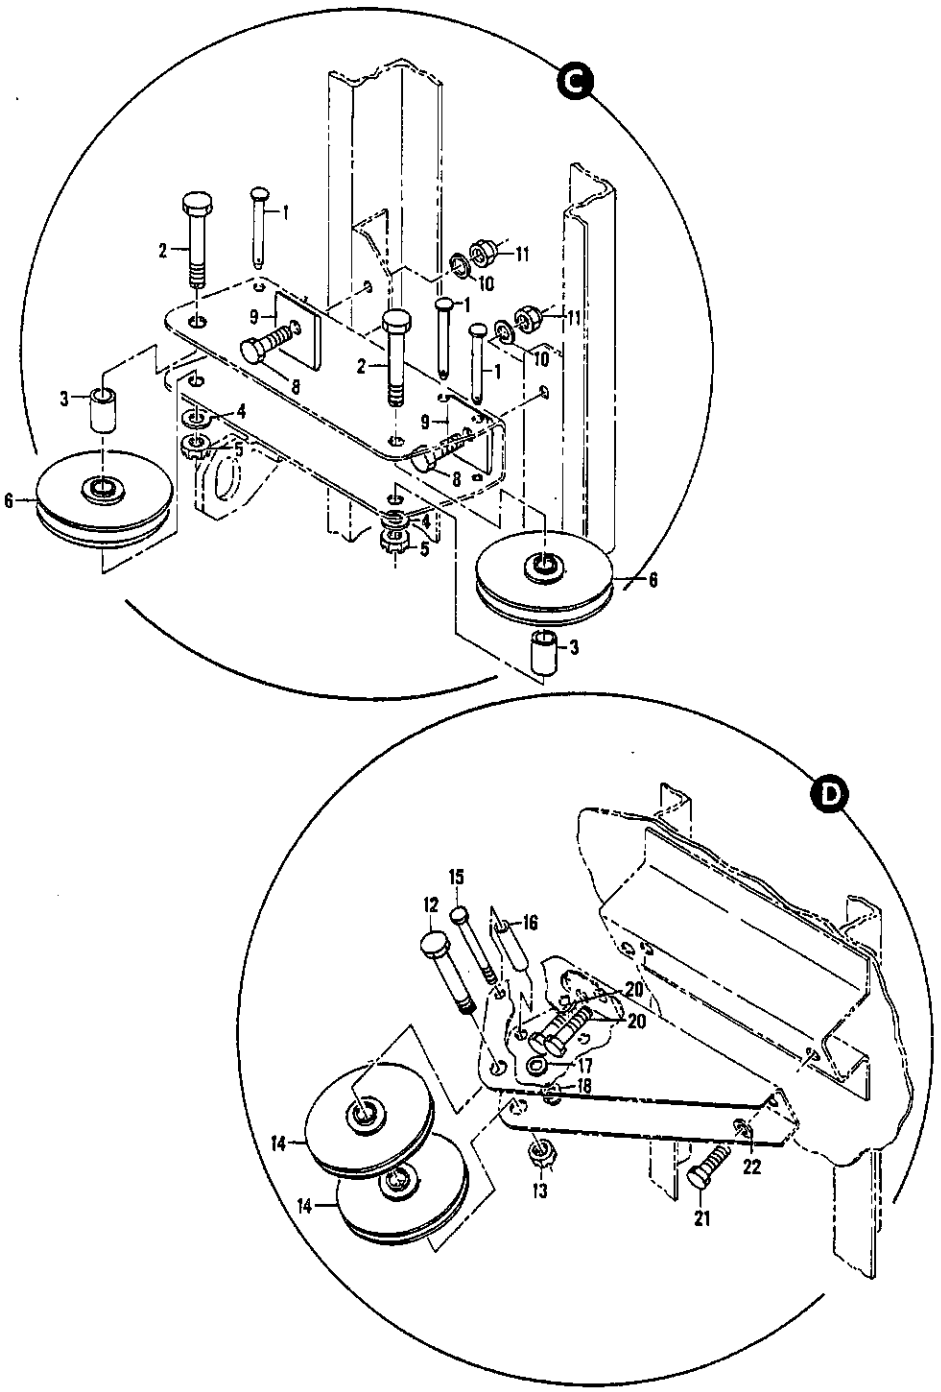


FIGURE 10. BRACKET INSTL, SPEED BRAKE BUS (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	10		BRACKET INSTL, SPEED BRAKE BUS.		
		65-5960-1	. BRACKET INSTL, WING STATION 426 SPEED BRAKE (LH) (SEE FIG. 9, ITEM 11)		RF
		65-5960-2	. BRACKET INSTL, WING STATION 426 SPEED BRAKE (RH) (SEE FIG. 9, ITEM 11)		RF
	1	AN393-45	. . PIN		3
	2	NAS464P5-22	. . BOLT.		2
	3	NAS43DD5-40	. . SPACER.		2
	4	AN960D516	. . WASHER.		2
	5	AN320-5	. . NUT		2
	6	AN220-2	. . PULLEY.		2
	7	69-4282-1	. . BRACKET ASSY, WING STATION 426 (LH ONLY).		1
	7	69-4282-2	. . BRACKET ASSY, WING STATION 426 (RH ONLY).		1
			ATTACHING PARTS		
	8	AN4-6A	. . BOLT.		2
	9	50-3361-3039	. . FILLER, RADIUS CONTROL.		2
	10	AN960D416L	. . WASHER.		2
	11	BACN10BY54	. . NUT		2
			-------*-------		
		65-6086-1	. BRACKET INSTL, WING STATION 492 AND 501 SPEED BRAKE BUS (LH) (SEE FIG. 9, ITEM 12)		RF
		65-6086-2	. BRACKET INSTL, WING STATION 492 AND 501 SPEED BRAKE BUS (RH) (SEE FIG. 9, ITEM 12)		RF
	12	NAS464P5-22	. . BOLT.		1
	13	AN320-5	. . NUT		1
	14	AN220-2	. . PULLEY.		2
	15	AN3-16A	. . BOLT.		2
	16	NAS42DD6-80	. . SPACER.		2
	17	AN960D10	. . WASHER.		2
	18	BACN10BY53	. . NUT		2
	19	66-3911-1	. . BRACKET ASSY, WING STATION 492.36 SPEED BRAKE (LH ONLY)		1
	19	66-3911-2	. . BRACKET ASSY, WING STATION 492.36 SPEED BRAKE (RH ONLY)		1
			ATTACHING PARTS		
	20	AN4-6A	. . BOLT.		2
	21	AN4-5A	. . BOLT.		1
	22	AN960D416	. . WASHER.		1
			-------*-------		
	23	AN3-30A	. . BOLT.		2
	24	NAS42DD6-165	. . SPACER.		2
	25	AN960D10	. . WASHER.		2
	26	BACN10BY53W	. . NUT		2
	27	NAS464P4-47	. . BOLT.		1
	28	50-3361-2014	. . FILLER, RADIUS CONTROL.		1
	29	NAS43DD4-130	. . SPACER.		1
	30	AN201KP4A	. . BEARING		1
	31	AN960D416	. . WASHER.		1
	32	AN320-4	. . NUT		1
R R R	33	5-97205-3001	. . DRUM ASSY, WING STATION 501.38 DRAG SPOILER (LH ONLY) (OPTIONAL TO 5-97205-6)	0150	1
R R R	33	5-97205-6	. . DRUM ASSY, WING STATION 501.38 DRAG SPOILER (LH ONLY) (OPTIONAL 5-97205-3001)	0150	1
R R R	33	5-97205-3002	. . DRUM ASSY, WING STATION 501.38 DRAG SPOILER (RH ONLY) (OPTIONAL TO 5-97205-7)	0150	1
R R R	33	5-97205-7	. . DRUM ASSY, WING STATION 501.38 DRAG SPOILER (RH ONLY) (OPTIONAL 5-97205-3002)	0150	1
R R	33	5-97205-6	. . DRUM ASSY, WING STATION 501.38 DRAG SPOILER (LH ONLY)	5199	1
R R	33	5-97205-7	. . DRUM ASSY, WING STATION 501.38 DRAG SPOILER (RH ONLY)	5199	1
	34	AN201KP4A	. . . BEARING		1
R	35	5-97205-2013	. . . DRUM, (USED ON 5-97205-3001).	0150	1
	35	5-97205-8	. . . DRUM, (USED ON 5-97205-6)		1
R	35	5-97205-2014	. . . DRUM, (USED ON 5-97205-3002).	0150	1
	35	5-97205-9	. . . DRUM, (USED ON 5-97205-7)		1
	36	90-3147-3001	. . BRACKET ASSY, WING STATION 501.38 DRAG SPOILER. PULLEY CONTROL (LH ONLY)		1
	36	90-3147-3002	. . BRACKET ASSY, WING STATION 501.38 DRAG SPOILER. PULLEY CONTROL (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
10		ATTACHING PARTS		
37	AN4-6A	. . BOLT.		4
38	AN4-5A	. . BOLT.		2
39	65-6086-3	. . FILLER, RADIUS CONTROL.		AR
40	50-3361-2014	. . FILLER, RADIUS CONTROL.		4
41	50-3361-2015	. . FILLER, RADIUS CONTROL.		1
42	AN960D416	. . WASHER.		2
43	BACN10BY54W	. . NUT		6
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

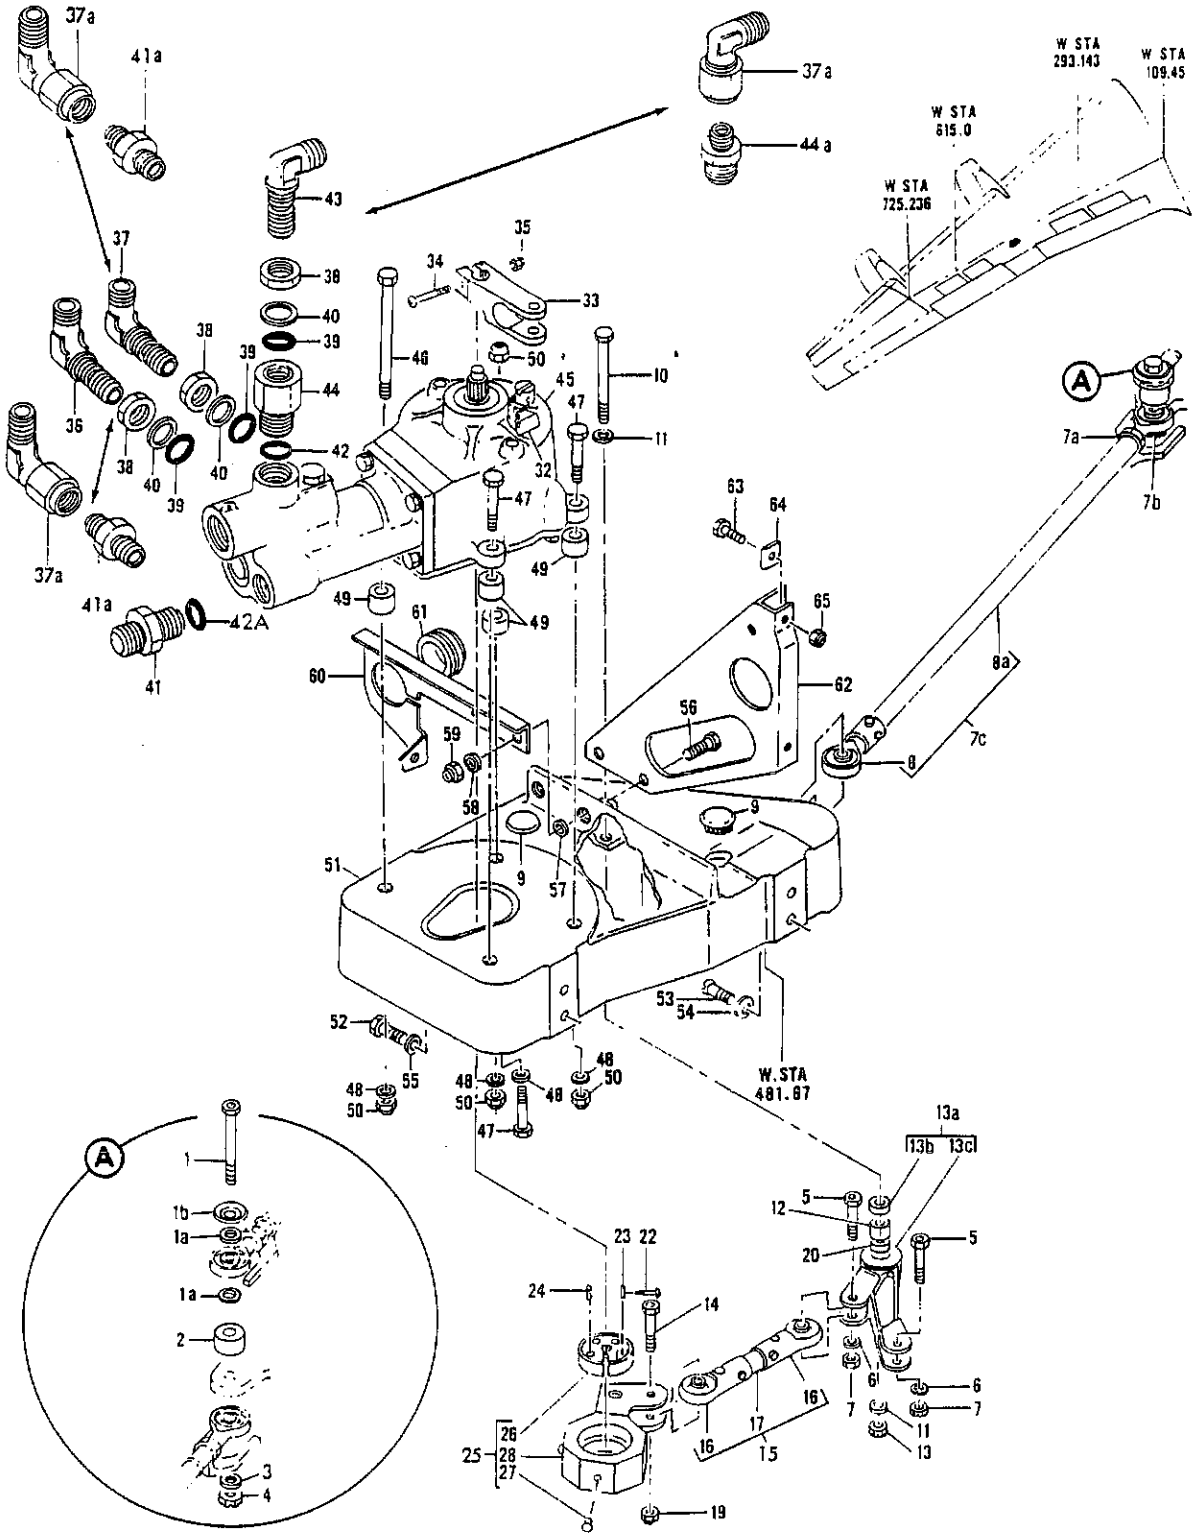


FIGURE 11. VALVE INSTL, OUTBORAD SPOILER CONTROL (LH) (FLIGHT CONTROL ONLY)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	11	5-98386-3001	VALVE INSTL, OUTBOARD SPOILER CONTROL LH (FLIGHT CONTROL ONLY) (SEE 27-3, FIG. 7, ITEM 12)		RF
	1	NAS1104-35DW	. BOLT		1
	1A	AN960-416L	. WASHER		AR
	1B	BACW10Q4	. WASHER		1
	2	3-89046-2000	. SPACER, SPOILER VALVE ROD		1
	3	AN970-4	. WASHER		1
	4	AN320-4	. NUT		1
	5	NAS1104-13DW	. BOLT, (USED WITH 65-74053)		2
	5	NAS1104-15DW	. BOLT, (USED WITH 65-74053-3)		2
	6	AN960D416	. WASHER, (USED WITH 65-74053-3)		2
	7	AN320-4	. NUT		2
	7A	AN316-6R	. NUT		1
	7B	BACB10A436	. BEARING		1
	7C	69-8895-4	. ROD ASSY, CONTROL		1
	8	REP4H8	. . BEARING, BALL (V21335)		1
	8A	69-8895-5	. . ROD, CONTROL		1
	9	BACP20B17	. PLUG		2
	10	NAS1104-32DW	. BOLT		1
	11	NAS1197-416L	. WASHER		2
	12	NAS43DD4-66	. SPACER		1
	13	AN320-4	. NUT		1
	13A	65-74053	. ARM ASSY, OUTBOARD SPOILER VALVE CRANK (OPTIONAL 65-74053-3)		1
	13A	65-74053-3	. ARM ASSY, OUTBOARD SPOILER VALVE CRANK (OPTIONAL TO 65-74053)		1
	13B	AN201KP4A	. . BEARING		1
	13C	65-74053-1	. . CRANK, OUTBOARD SPOILER VALVE (USED ON 65-74053)		1
	13C	65-74053-4	. . CRANK, OUTBOARD SPOILER VALVE (USED ON 65-74053-3)		1
	14	NAS1104-13DW	. BOLT		1
	15	66-36059-2	. ROD ASSY, CONTROL		1
	16	REP4H8	. . BEARING, BALL (V21335)		2
	17	66-36059-3	. . ROD, CONTROL		1
	19	AN320-4	. NUT		1
	20	MS20201KP4A	. BEARING		1
	22	MS16998-31	. SCREW		1
	23	AN960D10L	. WASHER		1
	24	BACN10CP3L	. NUT		1
	25	65-74062	. CRANK ASSY, OUTBOARD SPOILER VALVE CONTROL		1
	26	9-54082	. . BUSHING, SPOILER CONTROL VALVE SHEAR LINK		1
	27	AN470D3	. . RIVET		3
	28	69-50030	. . ARM, OUTBOARD SPOILER VALVE LH CRANK		1
	32	BACN12M10-1FS	. NAMEPLATE		1
	33	60-2058-2000	. ARM, SPOILER VALVE CONTROL MECHANISM		1
			ATTACHING PARTS		
	34	MS16998-32	. SCREW		1
	35	NAS679A3W	. NUT		1
			-------*-------		
	37A	BACE21AW0606	. ELBOW		3
	39	B55106-6	. GASKET, (V77308)		3
	41	MS21902D8	. UNION		1
	41A	MS21902-6	. UNION		2
	42A	B55106-8	. GASKET, (V77308)		1
	44A	MS21916-8-6	. REDUCER		1
	45	50-6875-1	. VALVE ASSY, FLAP CONTROL (SEE FIG. 14A)		1
			ATTACHING PARTS		
	46	AN4-32A	. BOLT		1
	47	AN4-13A	. BOLT		3
	48	BACW10T416L	. WASHER		4
	49	30-1489-2001	. SPACER, OUTBOARD SPOILER VALVE		4
	50	NAS679A4W	. NUT		4
			-------*-------		
R	51	50-6293-3003	. SUPPORT, WING STATION 487.50 (OPTIONAL 50-6293-3001)	0150	1
RRR	51	50-6293-3001	. SUPPORT, WING STATION 487.50 (OPTIONAL TO 50-6293-3003)	0150	1
R	51	50-6293-3003	. SUPPORT, WING STATION 487.50	5199	1
			ATTACHING PARTS		
	52	AN4-7A	. BOLT		2
	53	NAS517-4-6	. SCREW		2
	54	BACW10Z4	. WASHER		2
	55	BACW10T416L	. WASHER		2
			-------*-------		
	56	AN3-5A	. BOLT		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
11 57	BACW10T10	. WASHER.		2
58	AN960D10L	. WASHER.		2
59	NAS679A3W	. NUT		2
60	66-29084-1	. BRACKET, WING STATION 482.75 AILERON CABLE.		1
		ATTACHING PARTS		
	NAS1303-2	. BOLT.		1
	NAS1197-10L	. WASHER.		1
	AN960D10L	. WASHER.		1
	NAS679A3W	. NUT		1
		-------*-------		
61	BACG20H5N	. GROMMET		1
62	90-3130-2001	. BRACKET, OUTBOARD SPOILER VALVE SUPPORT		1
		ATTACHING PARTS		
63	NAS1303-4	. BOLT.		2
64	50-3361-2028	. FILLER, CONTROLS RADIUS		2
65	NAS679A3W	. NUT		2
		-------*-------		
		FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

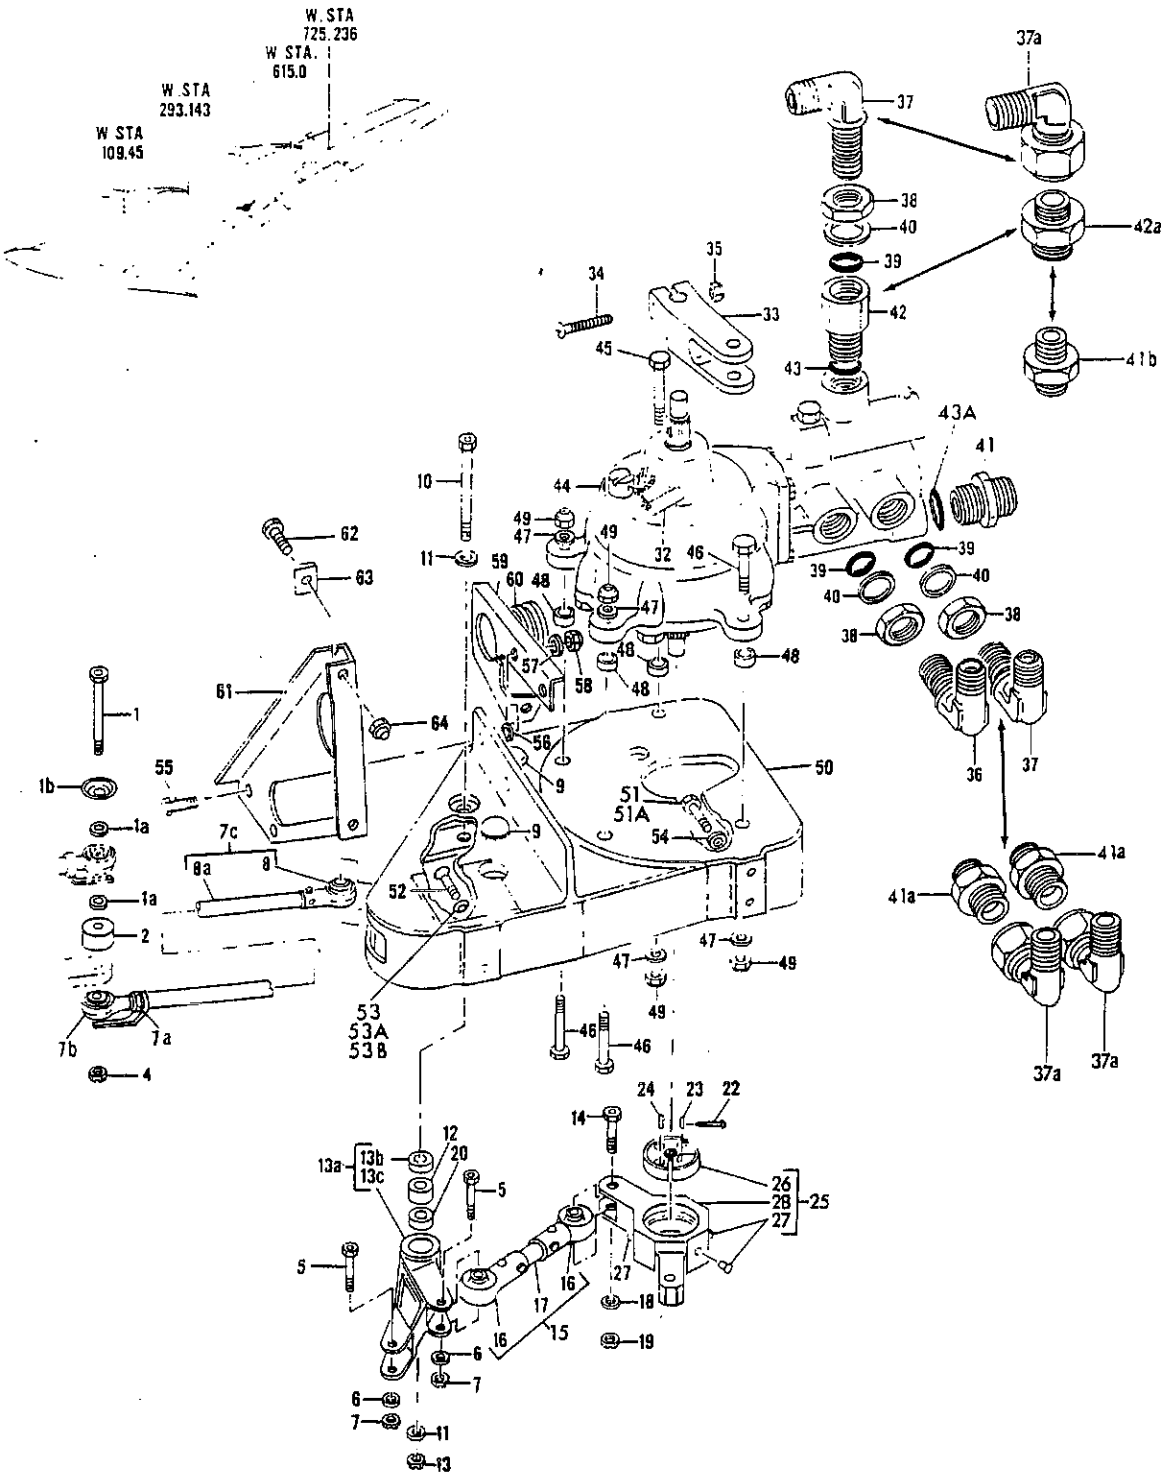


FIGURE 12. VALVE INSTL, OUTBOARD SPOILER CONTROL (RH) (FLIGHT CONTROL ONLY)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	12	5-98386-3002	VALVE INSTL, OUTBOARD SPOILER CONTROL RH (FLIGHT CONTROL ONLY) (SEE 27-3, FIG. 7, ITEM 12)		RF
	1	NAS1104-35DW	. BOLT		1
	1A	AN960-416L	. WASHER		AR
	1B	BACW10Q4	. WASHER		1
	2	3-89046-2000	. SPACER, SPOILER VALVE ROD		1
	4	AN320-4	. NUT		1
	5	NAS1104-13DW	. BOLT, (USED WITH 65-74053)		2
	5	NAS1104-15DW	. BOLT, (USED WITH 65-74053-3)		2
	6	AN960D416	. WASHER, (USED WITH 65-74053-3)		2
	7	AN320-4	. NUT		2
	7A	AN316-6R	. NUT		1
	7B	BAC810A436	. BEARING		1
	7C	69-8895-4	. ROD ASSY, CONTROL		1
	8	REP4H8	. . BEARING, BALL (V21335)		1
	8A	69-8895-5	. . ROD, CONTROL		1
	9	BACP20B17	. PLUG		2
	10	NAS1104-32DW	. BOLT		1
	11	NAS1197-416L	. WASHER		2
	12	NAS43DD4-66	. SPACER		1
	13	AN320-4	. NUT		1
	13A	65-74053	. ARM ASSY, OUTBOARD SPOILER VALVE CRANK (OPTIONAL 65-74053-3)		1
	13A	65-74053-3	. ARM ASSY, OUTBOARD SPOILER VALVE CRANK (OPTIONAL TO TO 65-74053)		1
	13B	AN201KP4A	. . BEARING		1
	13C	65-74053-1	. . CRANK, OUTBOARD SPOILER VALVE (USED ON 65-74053)		1
	13C	65-74053-4	. . CRANK, OUTBOARD SPOILER VALVE (USED ON 65-74053-3)		1
	14	NAS1104-13DW	. BOLT		1
	15	66-36059-2	. ROD ASSY, CONTROL		1
	16	REP4H8	. . BEARING, BALL (V21335)		2
	17	66-36059-3	. . ROD, CONTROL		1
	18	AN960D416	. WASHER		1
	19	AN320-4	. NUT		1
	20	MS20201KP4A	. BEARING		1
	22	MS16998-31	. SCREW		1
	23	AN960D10L	. WASHER		AR
	24	BACN10CP3L	. NUT		1
	25	65-74062-1	. CRANK ASSY, OUTBOARD SPOILER VALVE CONTROL		1
	26	9-54082	. . BUSHING, SPOILER CONTROL VALVE SHEAR LINK		1
	27	AN47DD3	. . RIVET		3
	28	69-50034	. . ARM, OUTBOARD SPOILER VALVE RH CRANK		1
	32	BACN12M10-1FS	. NAMEPLATE, SERVICE WITH SKYDROL 500 ONLY		1
	33	60-2058-2000	. ARM, SPOILER VALVE CONTROL MECHANISM		1
			ATTACHING PARTS		
	34	MS16998-32	. SCREW		1
	35	NAS679A3W	. NUT		1
			-------*-------		
	37A	BACE21AW0606	. ELBOW		3
	41	MS21902D8	. UNION		1
	41A	MS21902-6	. UNION		2
	42A	MS21916-8-6	. REDUCER		1
	44	50-6875-1	. VALVE ASSY, FLAP CONTROL (SEE FIG. 14A)		1
			ATTACHING PARTS		
	45	NAS1304-45	. BOLT		1
	46	NAS1304-15	. BOLT		3
	47	NAS1197-416L	. WASHER		4
	48	30-1489-2001	. SPACER, OUTBOARD SPOILER VALVE		4
	49	NAS679A4W	. NUT		4
			-------*-------		
R	50	50-6293-3004	. SUPPORT, WING STATION 487.50 (OPTIONAL 50-6293-3002)	0150	1
R	50	50-6293-3002	. SUPPORT, WING STATION 487.50 (OPTIONAL TO 50-6293-3004)	0150	1
R	50	50-6293-3004	. SUPPORT, WING STATION 487.50	5199	1
			ATTACHING PARTS		
	51	AN4-7A	. BOLT		2
	52	NAS517-4-6	. SCREW		2
	53	BACW10Z4	. WASHER		2
	54	NAS1197-416L	. WASHER		2
			-------*-------		
	55	NAS1303-4	. BOLT		2
	56	NAS1197-10	. WASHER		2
	57	AN960D10L	. WASHER		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
12 58	NAS679A3W	. NUT		2
59	66-29084-2	. BRACKET, WING STATION 482.75 AILERON CABLE		1
		ATTACHING PARTS		
	NAS1303-2	. BOLT		1
	NAS1197-10L	. WASHER		1
	AN960D10L	. WASHER		1
	NAS679A3W	. NUT		1
		-------*-------		
60	BACG20H5N	. GROMMET		1
61	90-3130-2002	. BRACKET, OUTBOARD SPOILER VALVE SUPPORT		1
		ATTACHING PARTS		
62	NAS1303-4	. BOLT		2
63	50-3361-2028	. FILLER, CONTROLS RADIUS		2
64	NAS679A3W	. NUT		2
		-------*-------		
		FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

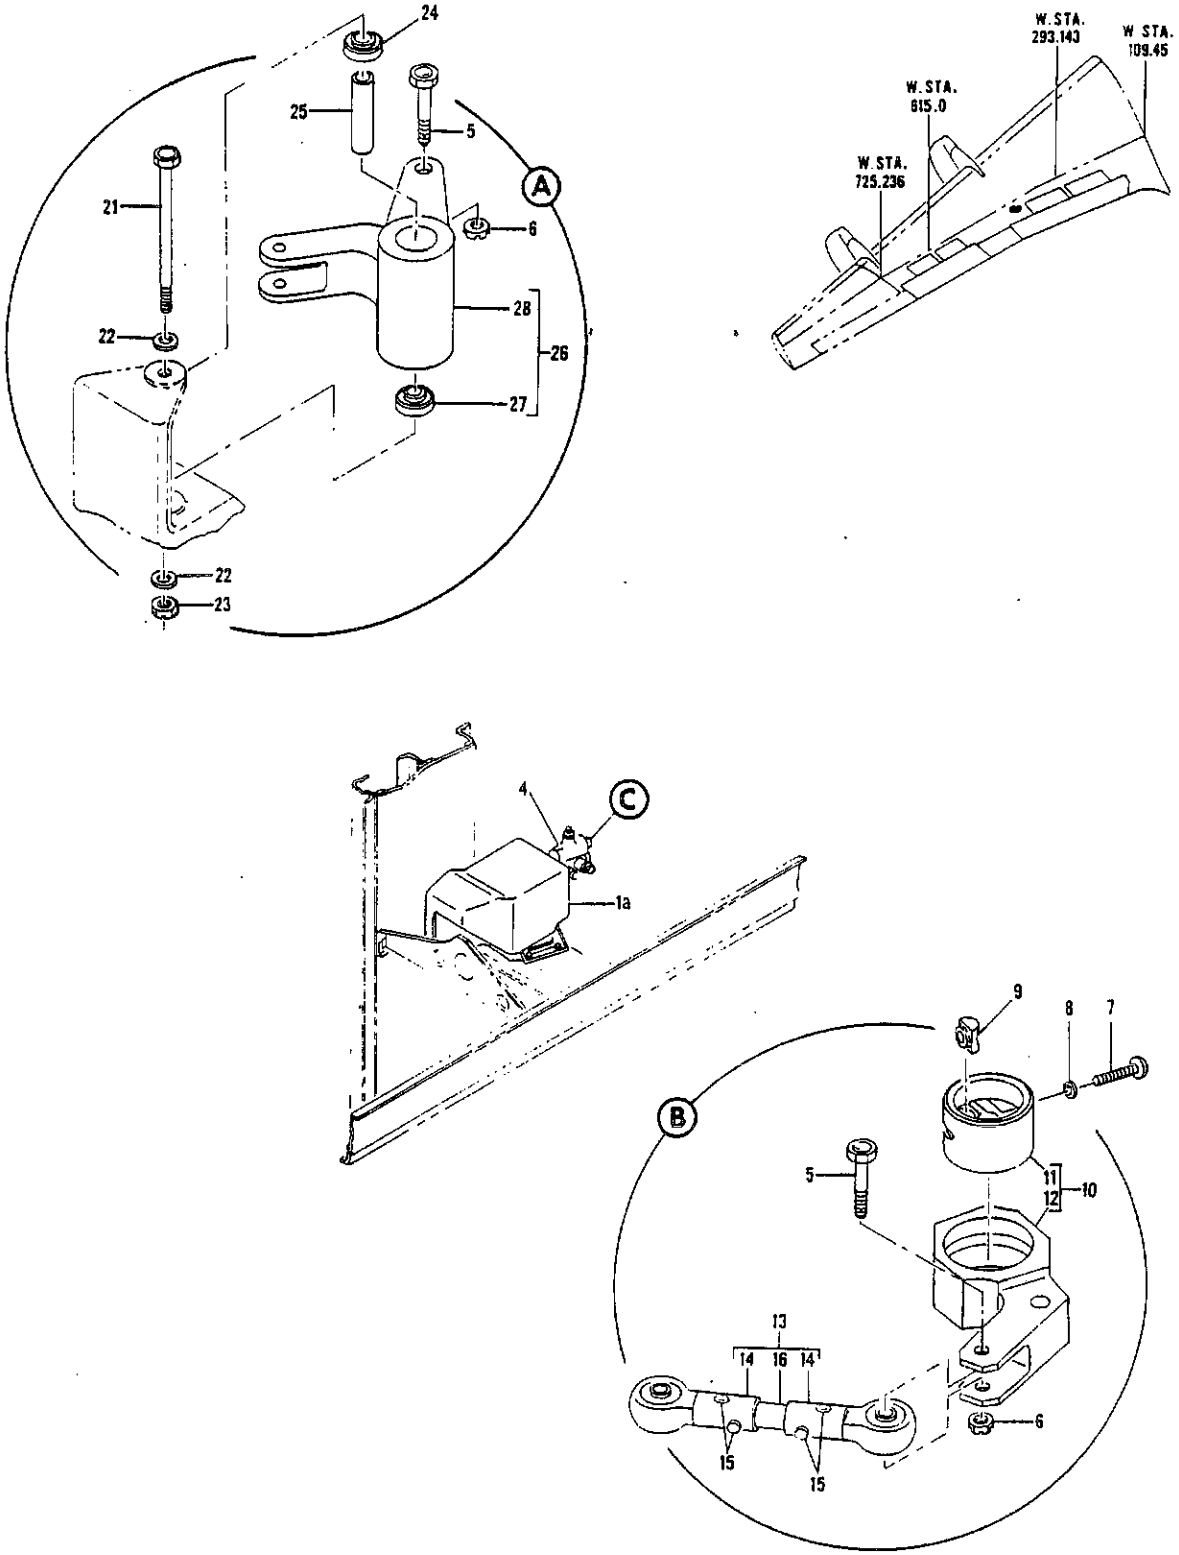


FIGURE 13. VALVE INSTL, INBOARD SPOILER CONTROL (LH) (FLIGHT CONTROL ONLY) (SHEET 1)

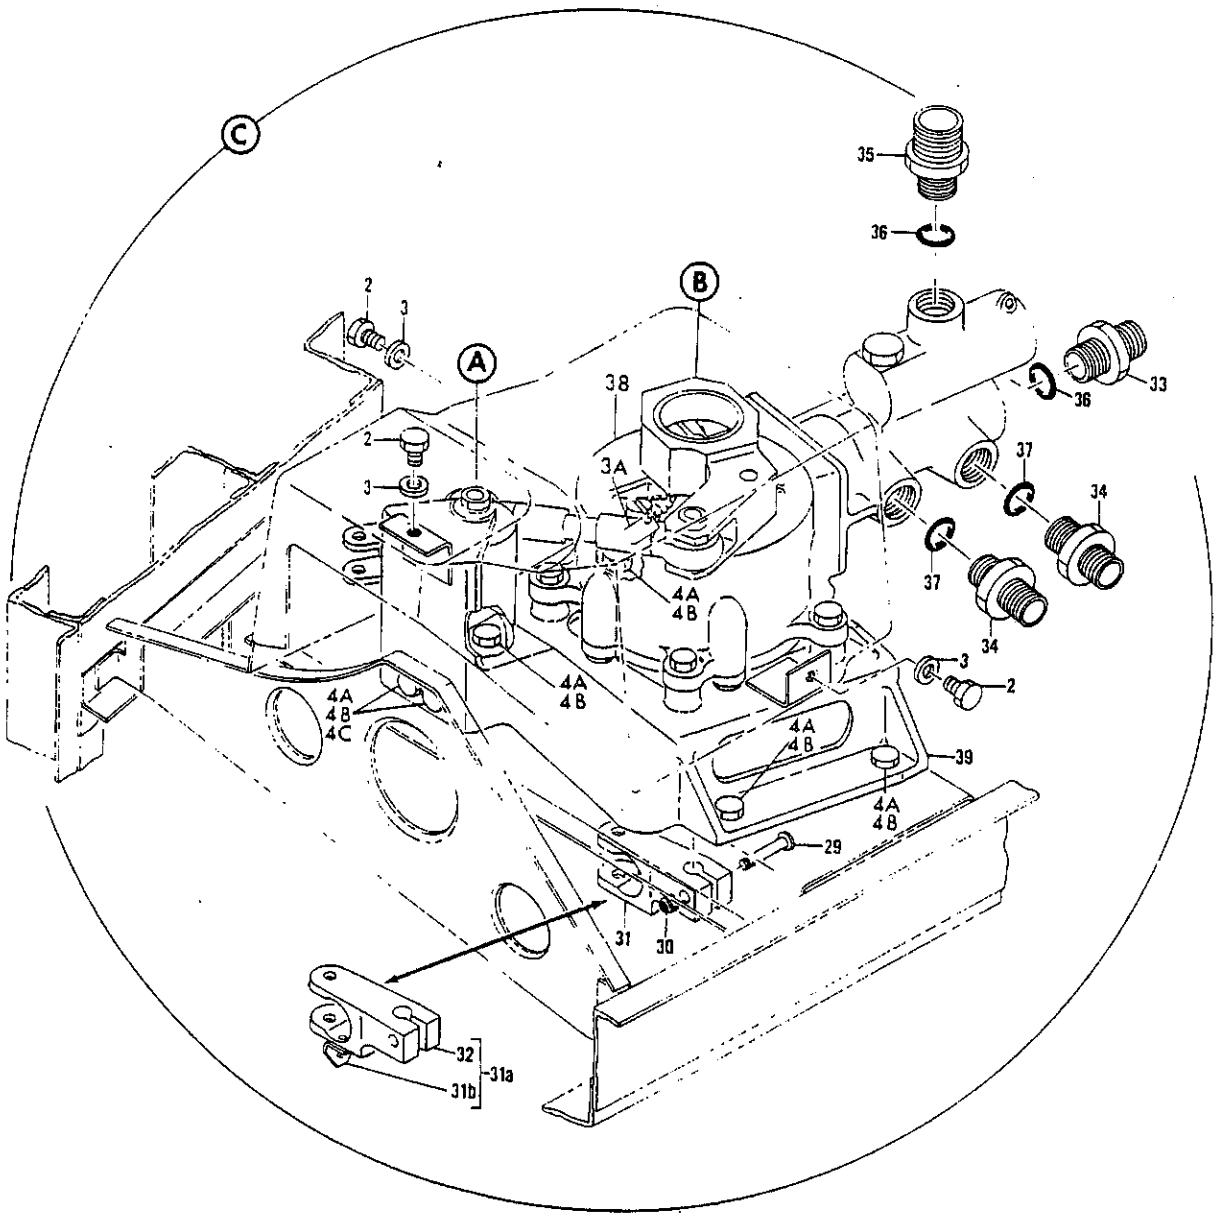


FIGURE 13. VALVE INSTL, INBOARD SPOILER CONTROL (LH) (FLIGHT CONTROL ONLY) (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
13	65-19001-1	VALVE INSTL, INBOARD SPOILER CONTROL (LH) (FLIGHT CONTROL ONLY) (SEE 27-3, FIG. 7, ITEM 9)		RF
1A	69-9820-3	. COVER, INBOARD SPOILER VALVE.		1
		ATTACHING PARTS		
2	NAS1303-2	. BOLT.		3
3	AN960D10	. WASHER.		3
		-------*-------		
3A	BACN12M10-1FS	. NAMEPLATE		1
4	65-19001-19	. VALVE ASSY, INBOARD SPOILER CONTROL		1
		ATTACHING PARTS		
4A	NAS1304-7	. BOLT.		6
4B	NAS1197-416	. WASHER.		6
4C	NAS679A4W	. NUT		2
		-------*-------		
5	NAS1104-13DW	. . BOLT.		2
6	AN320-4	. . NUT		2
7	MS16998-30	. . BOLT.		1
8	AN960D10L	. . WASHER.		1
9	BACN10CP3L	. . NUT		1
10	65-74062-4	. . CRANK ASSY, SPOILER CONTROL		1
11	9-54082-1	. . . BUSHING, SPOILER CONTROL VALVE SHEAR LINK		1
12	69-50026-1	. . . ARM, LH SPOILER VALVE CRANK INBOARD		1
13	66-36059-4	. . ROD ASSY, CONTROL		1
14	REP4H8FS210	. . . BEARING, BALL (V21335).		2
15	AN470D5	. . . RIVET		4
16	66-36059-1	. . . ROD, CONTROL.		1
21	NAS1104-43DW	. . BOLT.		1
22	NAS1197-416	. . WASHER.		2
23	AN320-4	. . NUT		1
24	MS20201KP4A	. . BEARING		1
25	NAS43DD4-110	. . SPACER.		1
26	69-50028-9	. . ARM ASSY, INBOARD SPOILER VALVE CRANK		1
27	AN201KP4A	. . . BEARING		1
28	69-50028-11	. . . ARM, INBOARD SPOILER VALVE CRANK (USED ON 69-50028-9)		1
29	MS16998-32	. . BOLT.		1
30	NAS679A3W	. . NUT		1
31	66-9440-1	. . ARM, INBOARD SPOILER VALVE CONTROL MECHANISM.		1
33	MS21902D8	. . UNION		1
34	MS21902-6	. . UNION		2
35	MS21916-8-6	. . REDUCER		1
36	NAS1612-8	. . PACKING		2
37	NAS1612-6	. . PACKING		2
38	50-6875-1	. . VALVE ASSY, FLAP CONTROL (USED ON 65-19001-19 AND -21) (SEE FIG. 14A)		1
		ATTACHING PARTS		
	NAS1304-17	. . BOLT.		4
	NAS1197-416	. . WASHER.		4
	NAS1197-416L	. . WASHER.		AR
	NAS679A4W	. . NUT		4
		-------*-------		
39	65-7422	. . BRACKET ASSY, INBOARD SPOILER CONTROL VALVE		1
		. FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

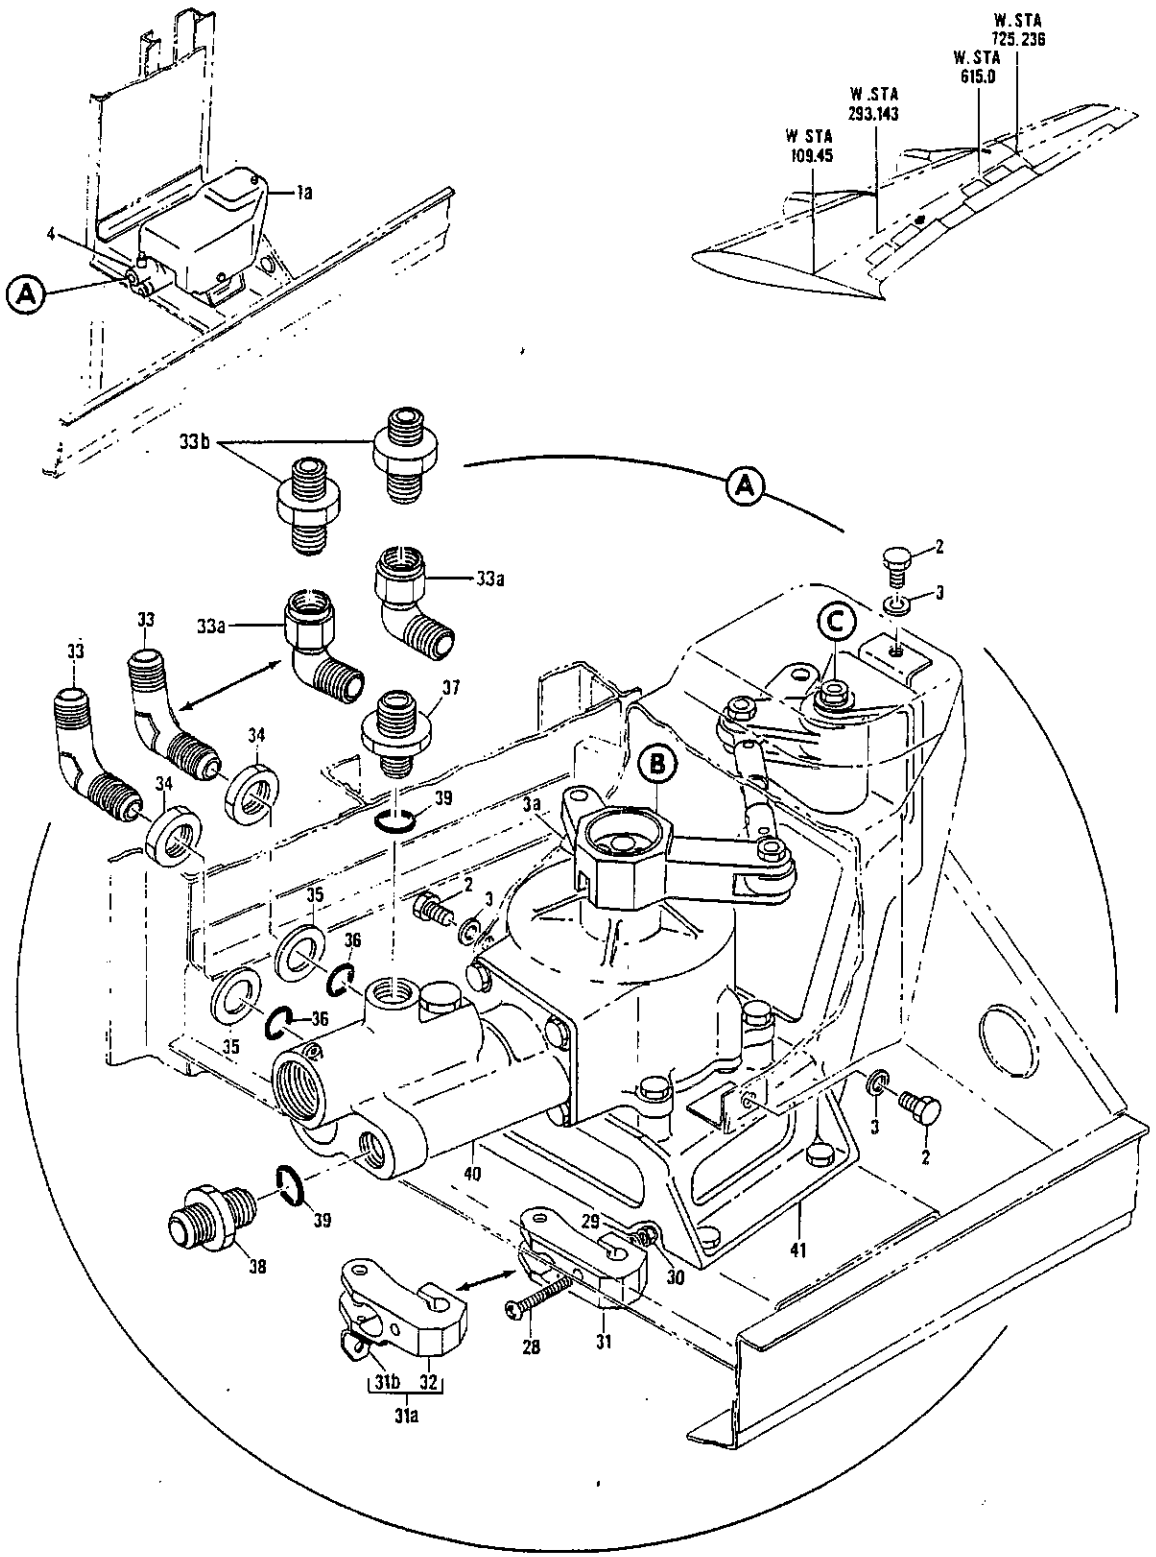


FIGURE 14. VALVE INSTL, INBOARD SPOILER CONTROL (RH) (FLIGHT CONTROL ONLY) (SHEET 1)

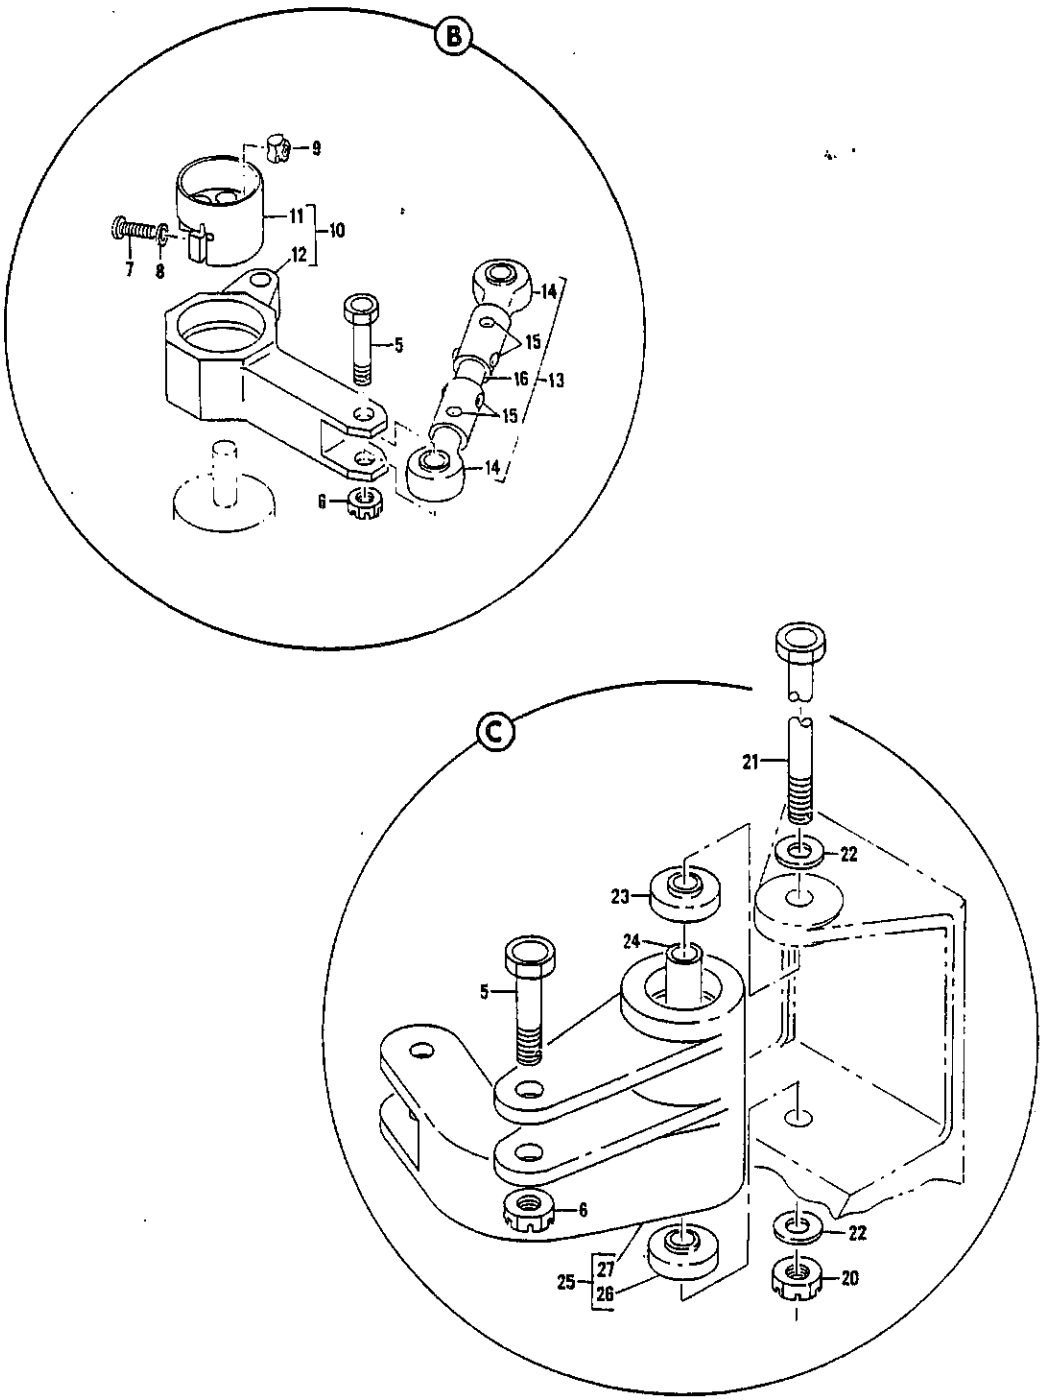


FIGURE 14. VALVE INSTL, INBOARD SPOILER CONTROL (RH) (FLIGHT CONTROL ONLY) (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
14	65-19001-2	VALVE INSTL, INBOARD SPOILER CONTROL (RH) (FLIGHT CONTROL ONLY) (SEE 27-3, FIG. 7, ITEM 9)		RF
1A	69-9820-4	. COVER, INBOARD SPOILER VALVE.		1
		ATTACHING PARTS		
	AN3-4A	. BOLT.		3
	AN960D10	. WASHER.		3
		-------*-------		
3A	BACN12M10-1FS	. NAMEPLATE		1
4	65-19001-20	. VALVE ASSY, INBOARD SPOILER CONTROL		1
		ATTACHING PARTS		
	AN4-7A	. BOLT.		6
	BACW10T416	. WASHER.		6
	NAS679A4W	. NUT		2
		-------*-------		
5	NAS1104-13DW	. . BOLT.		2
6	AN320-4	. . NUT		2
7	MS16998-30	. . BOLT.		1
8	AN960D10L	. . WASHER.		1
9	BACN10CP3L	. . NUT		1
10	65-74062-5	. . CRANK ASSY, SPOILER CONTROL		1
11	9-54082-1	. . . BUSHING, SPOILER CONTROL VALVE SHEAR LINK		1
12	69-50032-1	. . . ARM, SPOILER VALVE CRANK INBOARD.		1
13	66-36059-4	. . ROD ASSY, CONTROL		1
14	REP4H8FS210	. . . BEARING		2
15	AN470D5	. . . RIVET		4
16	66-36059-1	. . . ROD, CONTROL.		1
20	AN320-4	. . NUT		1
21	NAS1104-43DW	. . BOLT.		1
22	BACW10T416	. . WASHER.		2
23	AN201KP4A	. . BEARING		1
24	NAS43DD4-110	. . SPACER.		1
25	69-50028-10	. . ARM ASSY, INBOARD SPOILER VALVE CRANK		1
26	AN201KP4A	. . . BEARING		1
27	69-50028-12	. . . ARM, INBOARD SPOILER VALVE CRANK (USED ON 69-50028-10)		1
28	MS16998-33	. . BOLT.		1
29	AN960D10L	. . WASHER.		1
30	NAS679A3W	. . NUT		1
31	66-9463-2	. . ARM, INBOARD SPOILER VALVE CONTROL MECHANISM.		1
33A	BACE21AW0606	. . ELBOW		2
33B	MS21902-6	. . UNION		2
36	NAS1612-6	. . PACKING		2
37	MS21916-8-6	. . REDUCER		1
38	MS21902D8	. . UNION		1
39	NAS1612-8	. . PACKING		2
40	50-6875-1	. . VALVE ASSY, FLAP CONTROL (SEE FIG. 14A)		1
		ATTACHING PARTS		
	AN4-14A	. . BOLT.		4
	BACW10T416	. . WASHER.		4
	BACW10T416L	. . WASHER.		AR
	NAS679A4W	. . NUT		4
		-------*-------		
41	65-7422	. . BRACKET ASSY, INBOARD SPOILER CONTROL VALVE		1
		. FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

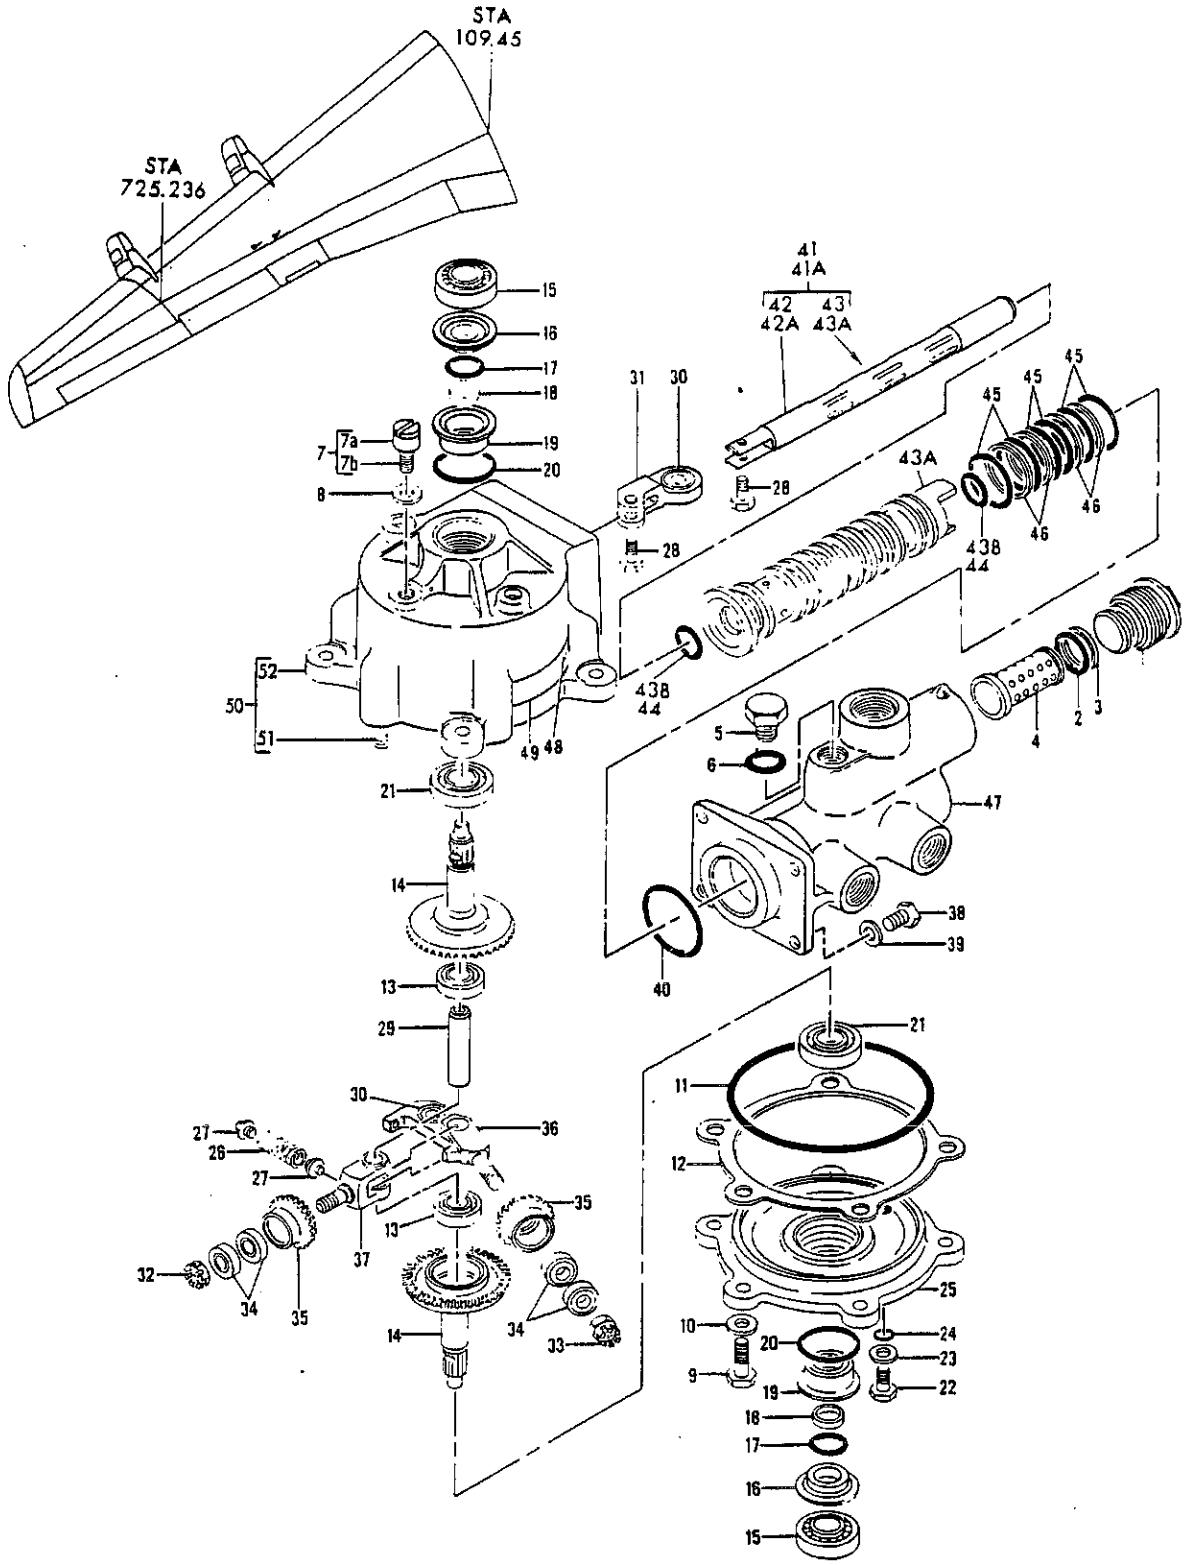



FIGURE 14A. VALVE ASSY, SPOILER AND FLAP CONTROL

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
14A	50-6875-1	VALVE ASSY, FLAP CONTROL (SEE FIG. 11, ITEM 45, FIG. 12, ITEM 44, FIG. 13, ITEM 38 AND FIG. 14, ITEM 40)		RF
1	60-4339	. PLUG, FLAP AND SPOILER CONTROL VALVE.		1
2	NAS1611-115	. PACKING		1
3	MS28782-13	. RING.		1
4	37938	. STRAINER ASSY, (V05228)		1
5	AN814-4DL	. PLUG AND BLEEDER.		1
6	NAS1612-4	. PACKING		1
7	3-87089	. PLUG ASSY, FLAP AND SPOILER CONTROL VALVE		1
7A	3-87091	. . SLEEVE.		1
7B	3-87090	. . PLUG.		1
8	BACW10T516	. WASHER.		1
9	AN4H5A	. BOLT.		5
10	BACW10T416L	. WASHER.		5
11	NAS1611-238	. PACKING		1
12	6-84183	. SHIM, FLAP AND SPOILER CONTROL VALVE.		1
13	BACB10AT6	. BEARING		2
14	9-48743	. GEAR, FLAP AND SPOILER CONTROL VALVE BEVEL.		2
15	BACB10BX8	. BEARING		2
16	6-84185	. SEAT, FLAP AND SPOILER CONTROL VALVE.		2
17	NAS1611-112	. PACKING		2
18	6-61913	. RING, LOW PRESSURE ROTARY SEAL.		2
19	6-84184	. GLAND, FLAP AND SPOILER CONTROL VALVE		2
20	NAS1611-213	. PACKING		2
21	BACB10AT8	. BEARING		2
22	AN4H3A	. BOLT.		1
23	BACW10T416L	. WASHER.		1
24	NAS1611-010	. PACKING		1
25	5-63428-2002	. CAP (OPTIONAL 5-63428-2000)		1
25	5-63428-2000	. CAP (OPTIONAL TO 5-63428-2002)		1
26	3-84485	. SPRING, CONTROL VALVE COMPRESSION		1
27	3-84486	. GUIDE, FLAP AND SPOILER CONTROL VALVE SPRING.		2
28	3-84484	. BOLT, FLAP AND SPOILER CONTROL VALVE SPECIAL.		2
29	3-84487	. SHAFT, FLAP AND SPOILER CONTROL VALVE		1
30	MS27645-3A	. BEARING		2
31	6-61566	. LINK, FLAP AND SPOILER CONTROL VALVE.		1
32	BACN10JD104	. NUT		1
33	3-94311	. NUT, FLAP AND SPOILER CONTROL VALVE SPECIAL		1
34	BACB10AT4	. BEARING		4
35	9-66385	. PINION, FLAP AND SPOILER CONTROL VALVE.		2
36	9-66387-1	. CRANK, FLAP AND SPOILER CONTROL VALVE		1
37	6-84186-1	. FORK, FLAP AND SPOILER CONTROL VALVE.		1
38	AN4H5A	. BOLT.		4
39	BACW10T416L	. WASHER.		4
40	NAS1611-219	. PACKING		1
41	60-4340-3	. SLEEVE ASSY, FLAP AND SPOILER CONTROL VALVE (OPTIONAL;60-4340-4, 60-4340-5 AND 60-4340-6)		1
41	60-4340-4	. SLEEVE ASSY, FLAP AND SPOILER CONTROL VALVE (OPTIONAL TO;60-4340-3)		1
41	60-4340-5	. SLEEVE ASSY, FLAP AND SPOILER CONTROL VALVE (OPTIONAL TO;60-4340-3)		1
41	60-4340-6	. SLEEVE ASSY, FLAP AND SPOILER CONTROL VALVE (OPTIONAL TO;60-4340-3)		1
42	9-48744	. . SLIDE, FLAP AND SPOILER CONTROL VALVE (USED ON 60-4340, -1 AND -3)		1
42	9-48744-2	. . SLIDE, (USED ON 60-4340-4).		1
42	9-48744-3	. . SLIDE, (USED ON 60-4340-5).		1
42	9-48744-4	. . SLIDE, (USED ON 60-4340-6).		1
43	50-6881-1	. . SLEEVE, FLAP AND SPOILER CONTROL VALVE (USED ON 60-4340-1, -2 AND -3)		1
43	50-6881	. . SLEEVE, FLAP AND SPOILER CONTROL VALVE (DELETED BY SB 2314) (USED ON 60-4340)		1
43	50-6881-2	. . SLEEVE, (USED ON 60-4340-4)		1
43	50-6881-3	. . SLEEVE, (USED ON 60-4340-5)		1
43	50-6881-4	. . SLEEVE, (USED ON 60-4340-6)		1
44	NAS1611-112	. PACKING		2
45	NAS1611-212	. PACKING		6
46	MS28774-212	. RING, (OPTIONAL MS28782-17)		4
46	MS28782-17	. RING, (OPTIONAL TO MS28774-212)		4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
14A 47	50-6880-1	. BODY, FLAP AND SPOILER CONTROL VALVE. . . . . 50-6880)		1
47	50-6880	. BODY. . . . . (OPTIONAL TO 50-6880-1)		1
48	AN535-0-2	. SCREW		2
49	BACN12F21-1G	. NAMEPLATE, CONTROL VALVE FLAP		1
50	50-9320	. HOUSING ASSY, FLAP AND SPOILER CONTROL VALVE. . . .		1
51	BACS13P4-3	. . SLEEVE.		9
52	50-9320-1	. . HOUSING, FLAP AND SPOILER CONTROL VALVE		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

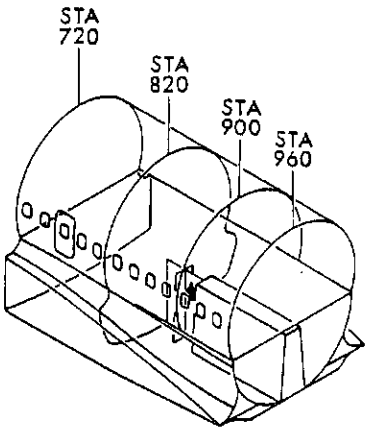

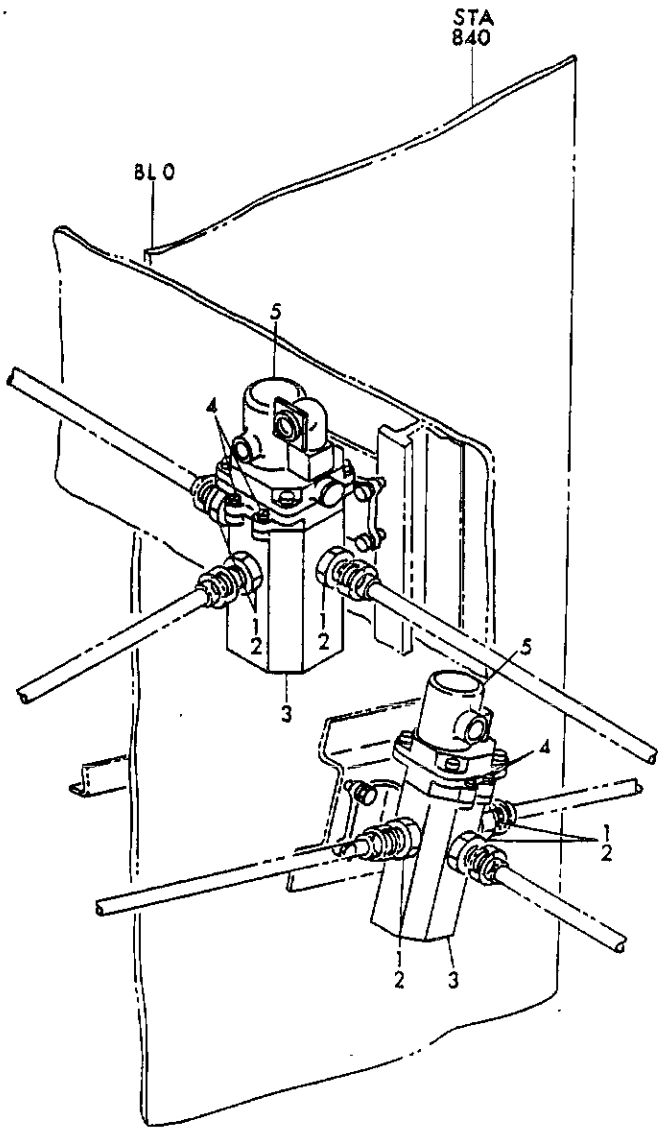


FIGURE 18. VALVE INSTL, MOTOR OPERATED HYDRAULIC (FLIGHT CONTROL (SPOILER CONTROL ONLY)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	18	65-23419-1	VALVE INSTL, MOTOR OPERATED HYDRAULIC (FLIGHT CONTROL . (SPOILER CONTROL) ONLY) (SEE 53-1, FIG. 2, ITEM 12A)		RF
	1	MS21916-8-6	. REDUCER		6
	2	NAS1612-8	. PACKING		6
R	3	10-60710-7	. VALVE ASSY, DC ACTUATED	5299	2
R	3	10-60710-3	. VALVE ASSY, DC ACTUATED	0151	2
R			(OPTIONAL BAC SPEC NO. 10-60710-4)		
R	3	10-60710-4	. VALVE ASSY, DC ACTUATED	0151	2
R			(OPTIONAL TO BAC SPEC NO. 10-60710-3 AND		
R			OPTIONAL BAC SPEC NO. 10-60710-7)		
R	3	10-60710-7	. VALVE ASSY, DC ACTUATED	0151	2
R			(OPTIONAL TO 10-60710-4)		
			ATTACHING PARTS		
		AN4-6A	. BOLT.		8
		AN960D416	. WASHER.		8
			-------*-------		
			. FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

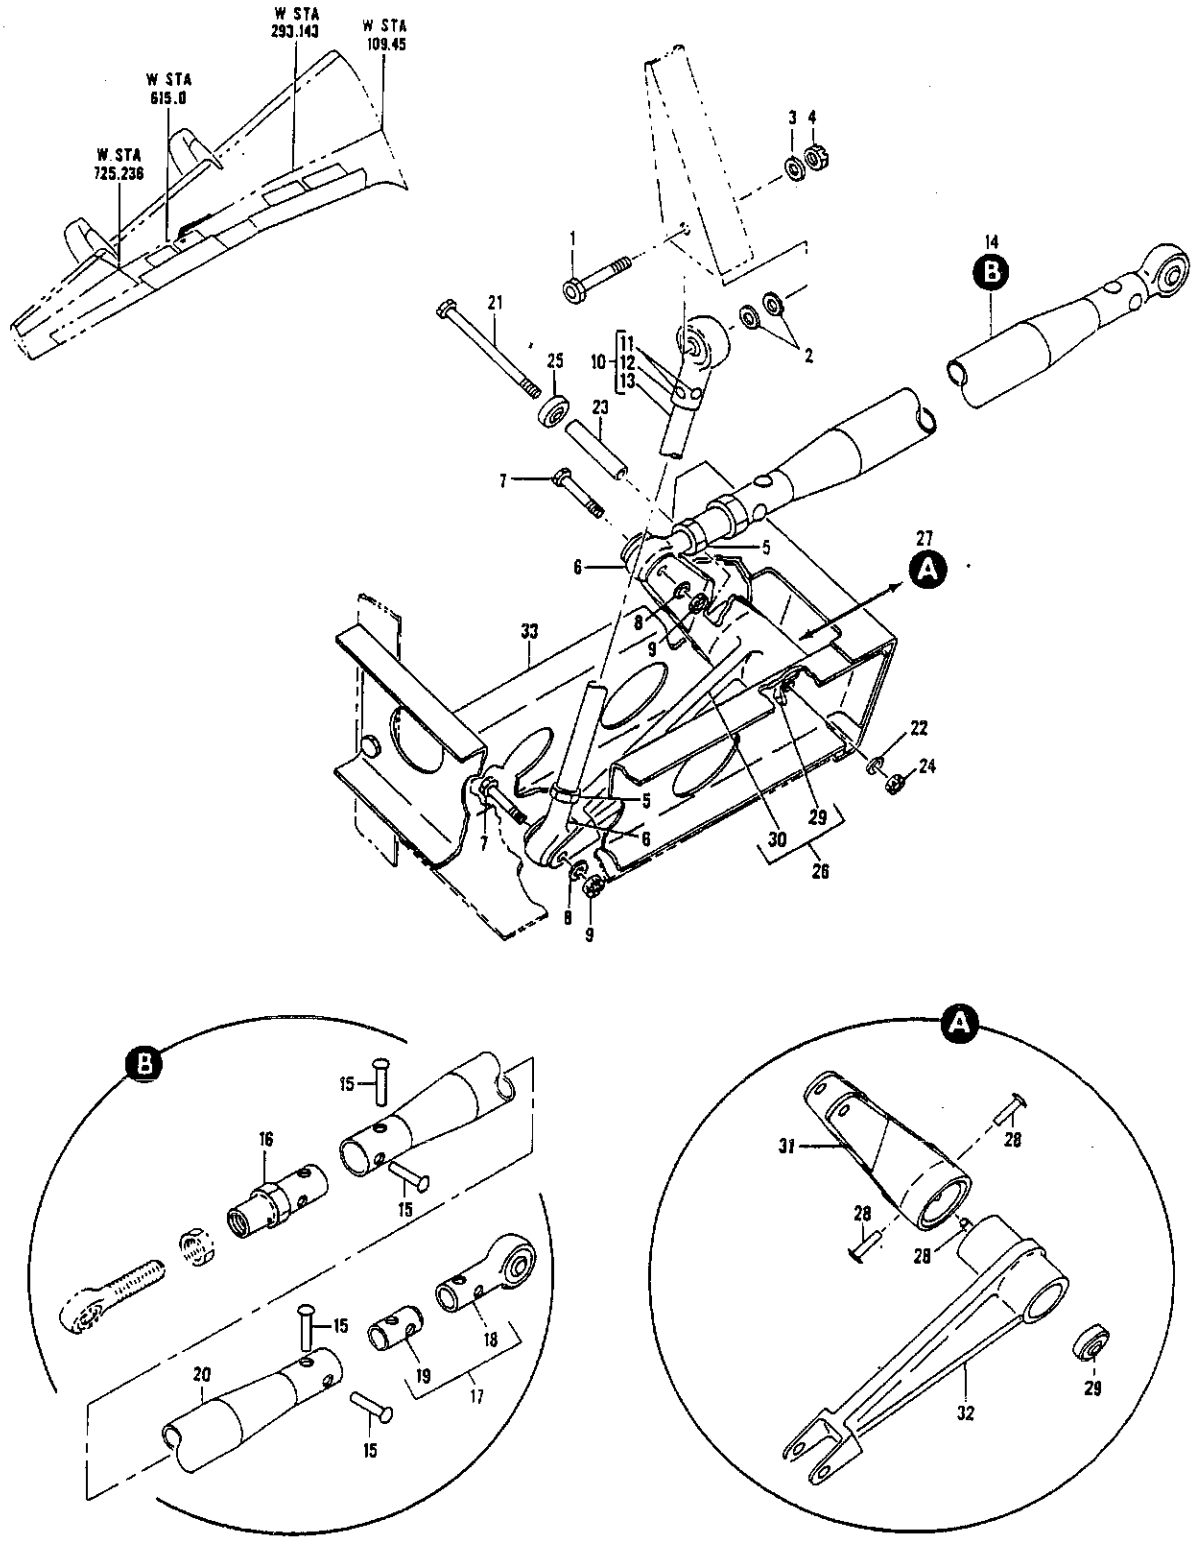


FIGURE 19. BRACKET INSTL, WING STATION 602.72 FOLLOW-UP CRANK

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	19	50-1514-3001	BRACKET INSTL, WING STATION 602.72 FOLLOW-UP CRANK (LH) (SEE 27-3, FIG. 7, ITEM 15)		RF
		50-1514-3002	BRACKET INSTL, WING STATION 602.72 FOLLOW-UP CRANK (RH) (SEE 27-3, FIG. 7, ITEM 15)		RF
	1	NAS1104-14DW	. BOLT.		1
	2	AN960D416L	. WASHER.		AR
	3	AN960D416	. WASHER.		1
	4	AN320-4	. NUT		1
	5	AN316-6R	. NUT		2
	6	BACB10A436	. BEARING		2
	7	NAS1104-13DW	. BOLT.		2
	8	AN960D416	. WASHER.		2
	9	AN320-4	. NUT		2
	10	60-2747-3002	. ROD ASSY, INBOARD SPOILER FOLLOW-UP LINKAGE		1
	11	AN470D6	. . RIVET		2
	12	BACB10A457	. . BEARING		1
	13	60-2747-2007	. . TUBE, INBOARD SPOILER FOLLOW-UP LINKAGE ROD		1
	14	90-3212-3002	. ROD ASSY, CONTROL		1
	15	AN470D5	. . RIVET		4
	16	60-2271-2002	. . PLUG, THREADED ROD END.		1
	17	60-2293	. . BEARING ASSY, ROD END BALL.		1
	18	BACB10A457	. . . BEARING		1
	19	60-2293-1	. . . PLUG, ROD END BALL BEARING.		1
	20	90-3212-2001	. . ROD, CONTROL.		1
	21	NAS1104-38DW	. BOLT.		1
	22	AN960D416	. WASHER.		1
	23	NAS43DD4-108	. SPACER.		1
	24	AN320-4	. NUT		1
	25	AN201KP4A	. BEARING		1
R R	26	65-13742-1	. ARM ASSY, OUTBOARD SPOILER (LH ONLY) (OPTIONAL TO 65-13742-7)	0150	1
R R	26	65-13742-7	. ARM ASSY, OUTBOARD SPOILER (LH ONLY) (OPTIONAL 65-13742-1)	0150	1
R	26	65-13742-7	. ARM ASSY, OUTBOARD SPOILER (LH ONLY).	5199	1
R R	26	65-13742-2	. ARM ASSY, OUTBOARD SPOILER (RH ONLY) (OPTIONAL TO 65-13742-8)	0150	1
R R	26	65-13742-8	. ARM ASSY, OUTBOARD SPOILER (RH ONLY) (OPTIONAL 65-13742-2)	0150	1
R	26	65-13742-8	. ARM ASSY, OUTBOARD SPOILER (RH ONLY).	5199	1
	29	AN201KP4A	. . BEARING		1
R R	30	65-13742-3	. . ARM, OUTBOARD SPOILER FOLLOW-UP LINKAGE (USED ON 65-13742-1)	0150	1
R R	30	65-13742-4	. . ARM, OUTBOARD SPOILER FOLLOW-UP LINKAGE (USED ON 65-13742-2)	0150	1
	30	65-13742-9	. . ARM, (USED ON 65-13742-7)		1
	30	65-13742-10	. . ARM, (USED ON 65-13742-8)		1
	33	50-1514-3005	. BRACKET ASSY, WING STATION 602.72 FOLLOW-UP CRANK (LH ONLY)		1
	33	50-1514-3006	. BRACKET ASSY, WING STATION 602.72 FOLLOW-UP CRANK (RH ONLY)		1
			ATTACHING PARTS		
		AN4-5A	. BOLT.		5
		AN960D416	. WASHER.		5
		NAS679A4W	. NUT		5
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

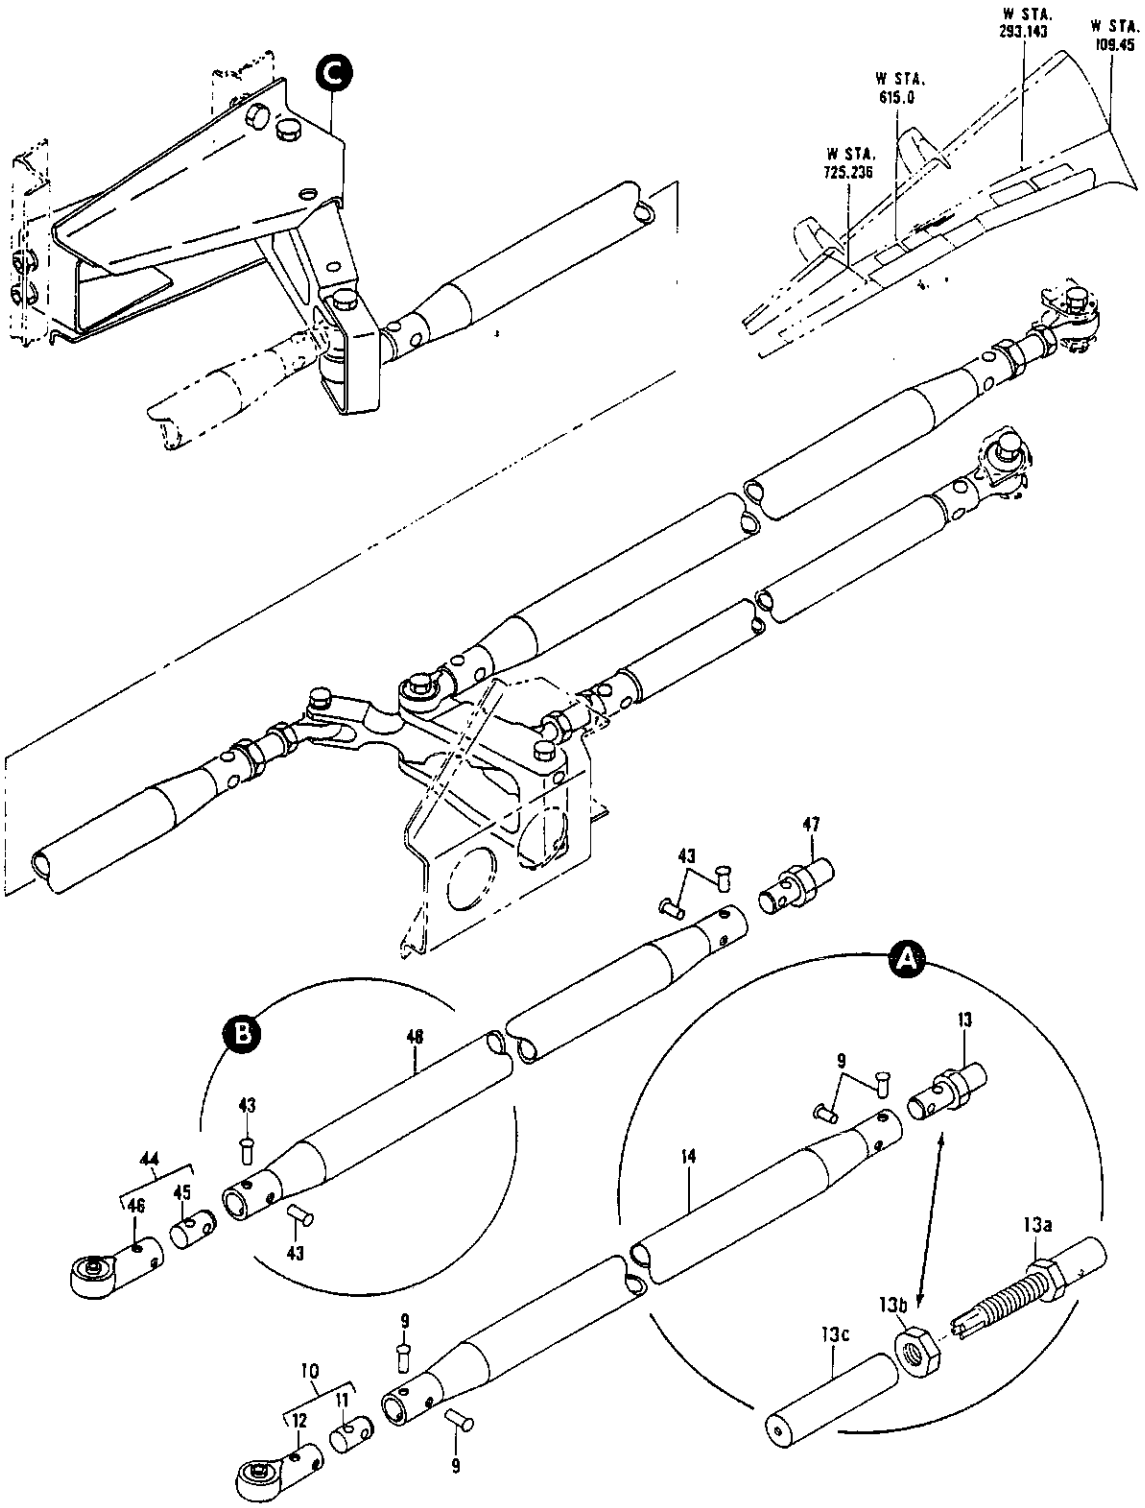


FIGURE 20. BRACKET INSTL, OUTBOARD SPOILER FOLLOW-UP DIFFERENTIAL CRANK (SHEET 1)

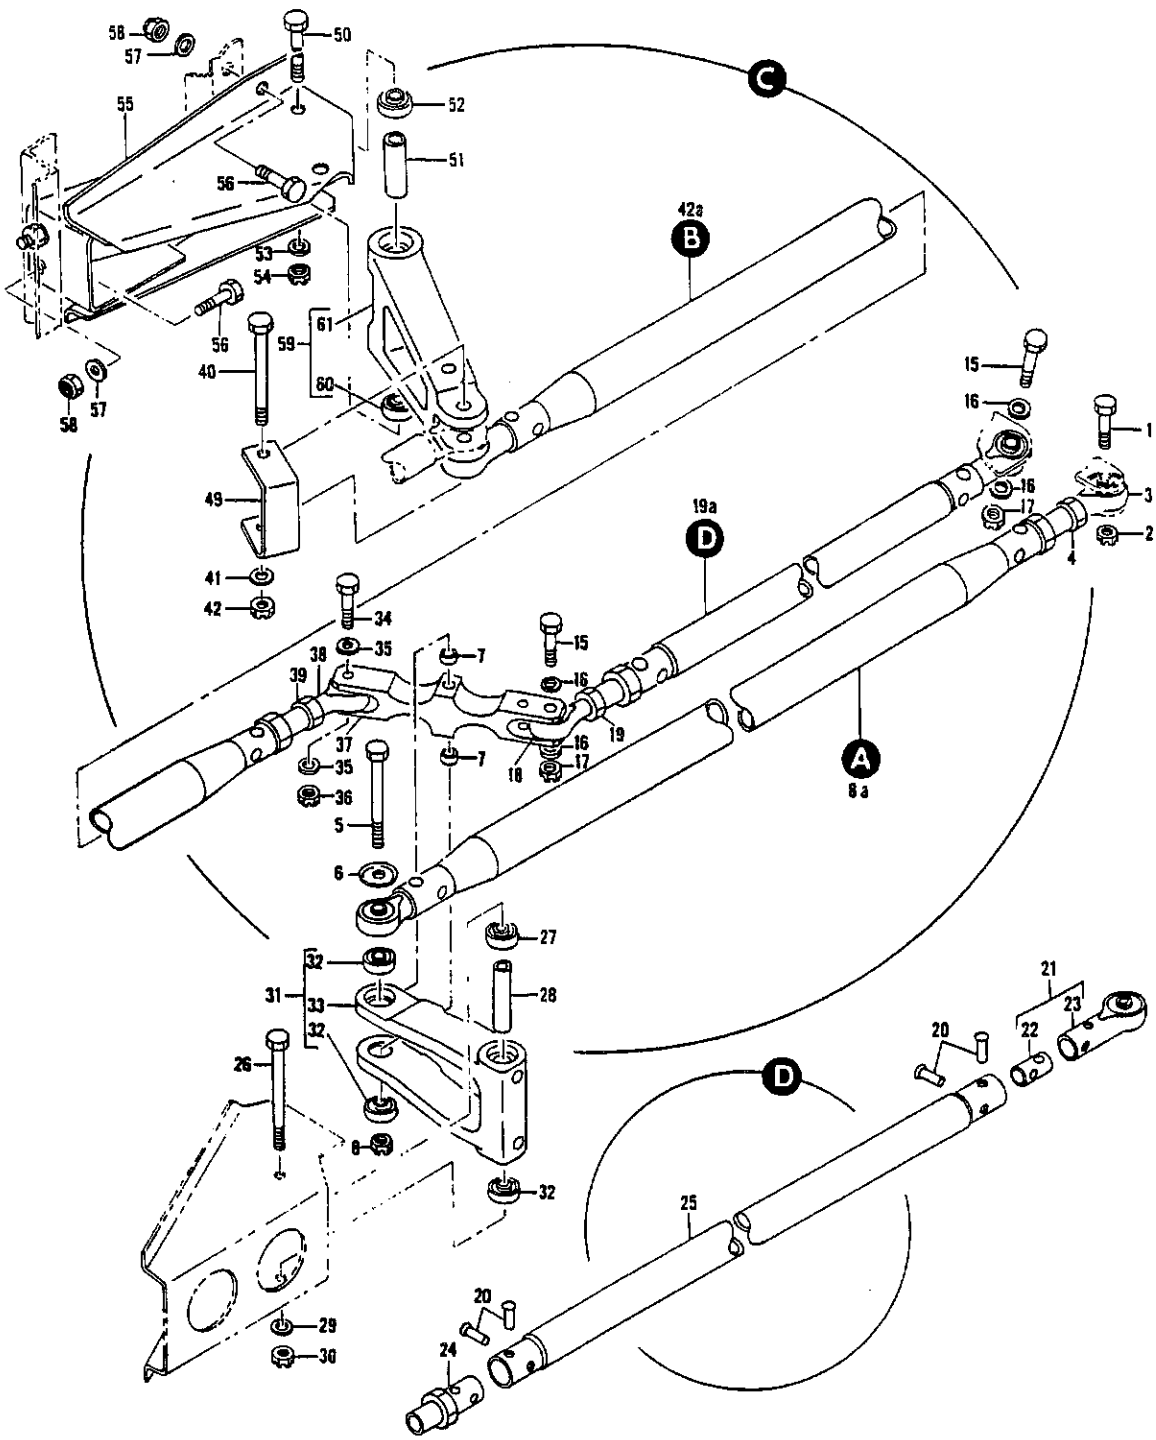


FIGURE 20. BRACKET INSTL, OUTBOARD SPOILER FOLLOW-UP DIFFERENTIAL CRANK (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	20	5-98304-3001	BRACKET INSTL, OUTBOARD SPOILER FOLLOW-UP DIFFERENTIAL CRANK (LH) (SEE 27-3, FIG. 7, ITEM 14)		RF
		5-98304-3002	BRACKET INSTL, OUTBOARD SPOILER FOLLOW-UP DIFFERENTIAL CRANK (RH) (SEE 27-3, FIG. 7, ITEM 14)		RF
	1	NAS464P4-16	. BOLT.		1
	2	AN320-4	. NUT		1
	3	BACB10A436	. BEARING		1
	4	AN316-6R	. NUT		1
	5	NAS464P4-43	. BOLT.		1
	6	BACW10Q4	. WASHER.		1
	7	NAS43DD4-7	. SPACER.		2
	8	AN320-4	. NUT		1
	8A	69-39399-2	. ROD ASSY, ADJUSTABLE CONTROL.		1
	9	MS20470D6	. . RIVET		4
	10	BACB10AE10A	. . BEARING ASSY, END BALL. (OPTIONAL TO 60-2293-3)		1
	10	60-2293-3	. . BEARING ASSY, END BALL. (OPTIONAL BACB10AE10A)		1
	11	60-2293-1	. . . PLUG, ROD END BALL THREADED		1
	12	BACB10AE10	. . . BEARING		1
	13A	69-39702-1	. . PLUG.		1
	13B	AN316-8R	. . NUT		1
	13C	69-39701-1	. . INSERT.		1
	14	69-39399-4	. . ROD		1
	15	NAS464P4-14	. BOLT.		2
	16	BACW10T416L	. WASHER.		4
	17	AN320-4	. NUT		2
	18	BACB10A436	. BEARING		1
	19	AN316-6R	. NUT		1
R R	19A	90-2377-3002	. ROD ASSY, CONTROL (OPTIONAL TO 90-2377-3009)	0151	1
R R	19A	90-2377-3009	. ROD ASSY, CONTROL (OPTIONAL 90-2377-3002)	0151	1
R	19A	90-2377-3009	. ROD ASSY, CONTROL	5299	1
	20	AN470D5	. . RIVET		4
	21	60-2293	. . BEARING ASSY, ROD END BALL.		1
	22	60-2293-1	. . . PLUG, ROD END BALL BEARING.		1
	23	BACB10A457	. . . BEARING		1
	24	60-2271-2002	. . PLUG, ROD END THREADED.		1
R	25	90-2377-2015	. . ROD, CONTROL (USED ON 90-2377-3002)	0151	1
	25	90-2377-3010	. . ROD, CONTROL (USED ON 90-2377-3009)		1
	26	NAS464P4-47	. BOLT.		1
	27	MS20201KP4A	. BEARING		1
	28	NAS43DD4-144	. SPACER.		1
	29	AN960D416	. WASHER.		1
	30	AN320-4	. NUT		1
	31	5-97628-3001	. ARM ASSY, SPOILER DIFFERENTIAL SUPPORT.		1
	32	MS20201KP4A	. . BEARING		3
	33	5-97628-2001	. . ARM, SPOILER DIFFERENTIAL SUPPORT		1
	34	NAS464P4-14	. BOLT.		1
	35	BACW10T416L	. WASHER.		2
	36	AN320-4	. NUT		1
R	37	6-84607-2001	. BAR, SPOILER DIFFERENTIAL FOLLOW-UP	5199	1
R R	37	6-84607-2001	. BAR, SPOILER DIFFERENTAIL FOLLOW-UP (OPTIONAL TO 6-84607-2)	0150	1
R R	37	6-84607-2	. BAR, SPOILER DIFFERENTAIL FOLLOW-UP (OPTIONAL 6-84607-2001)	0150	1
	38	BACB10A436	. BEARING		1
	39	AN316-6R	. NUT		1
	40	NAS464P4-27	. BOLT.		1
	41	BACW10T416L	. WASHER.		1
	42	AN320-4	. NUT		1
	42A	90-3212-3002	. ROD ASSY, CONTROL		1
	43	AN470D5	. . RIVET		4
	44	60-2293	. . BEARING ASSY, ROD END BALL.		1
	45	60-2293-1	. . . PLUG, ROD END BALL THREADED		1
	46	BACB10A457	. . . BEARING		1
	47	60-2271-2002	. . PLUG, ROD END THREADED.		1
	48	90-3212-2001	. . ROD, CONTROL.		1
	49	30-2602-2000	. CLIP, SPOILER FOLLOW-UP PUSH ROD RETAINER		1
	50	NAS464P4-35	. BOLT.		1
	51	NAS43DD4-91	. SPACER.		1
	52	MS20201KP4A	. BEARING		1
	53	AN960D416	. WASHER.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	20 54	AN320-4	. NUT		1
	55	9-67519-3001	. BRACKET ASSY, SPOILER FOLLOW-UP IDLER LH.		1
	55	9-67519-3002	. BRACKET ASSY, SPOILER FOLLOW-UP IDLER RH.		1
			ATTACHING PARTS		
	56	AN4-5A	. BOLT.		4
	57	AN960D416	. WASHER.		4
	58	BACN10BY54W	. NUT		4
			-------*-------		
R	59	9-67067-3003	. ARM ASSY, OUTBOARD SPOILER FOLLOW-UP IDLER.	5199	1
R	59	9-67067-3002	. ARM ASSY, OUTBOARD SPOILER FOLLOW-UP IDLER.	0150	1
R			(OPTIONAL TO 9-67067-3003)		
R	59	9-67067-3003	. ARM ASSY, OUTBOARD SPOILER FOLLOW-UP IDLER.	0150	1
R			(OPTIONAL 9-67067-3002)		
	60	AN201KP4A	. . BEARING		1
	61	9-67067-2004	. . ARM, OUTBOARD SPOILER FOLLOW-UP IDLER		1
	61	9-67067-3004	. . ARM, OUTBOARD SPOILER FOLLOW-UP IDLER		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

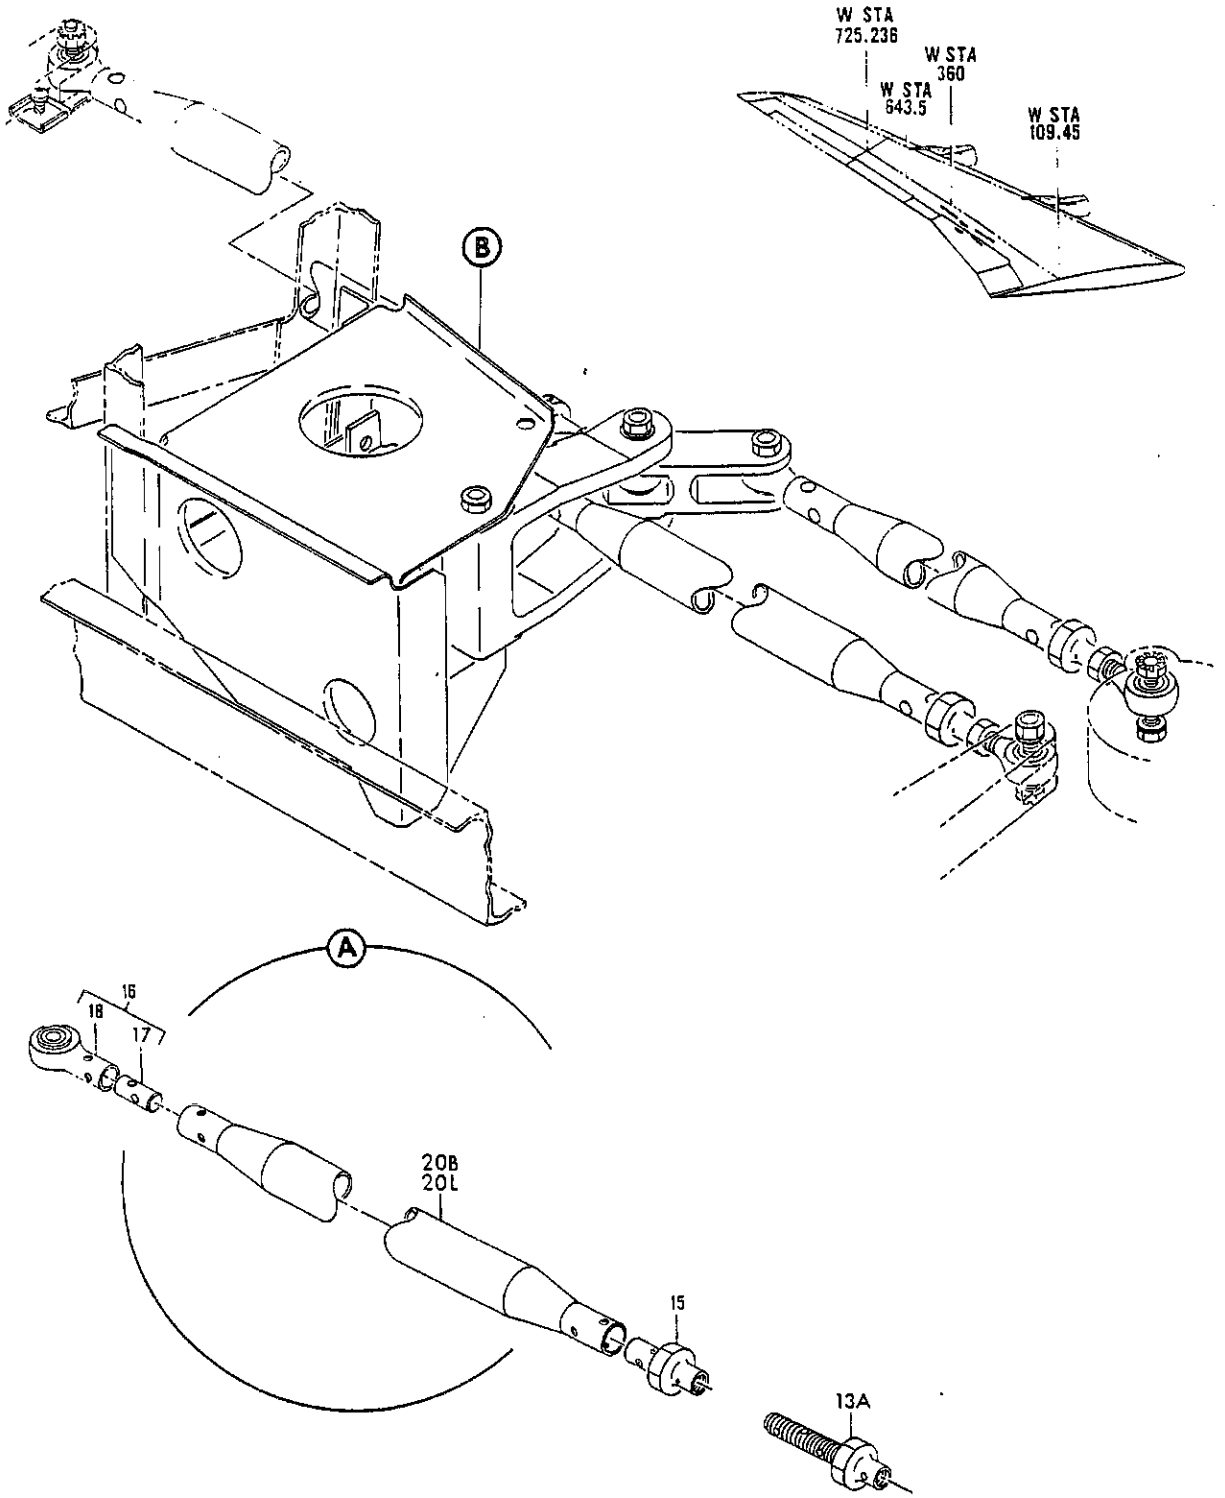


FIGURE 21. LINKAGE INSTL, INBOARD SPOILER DIFFERENTIAL (SHEET 1)

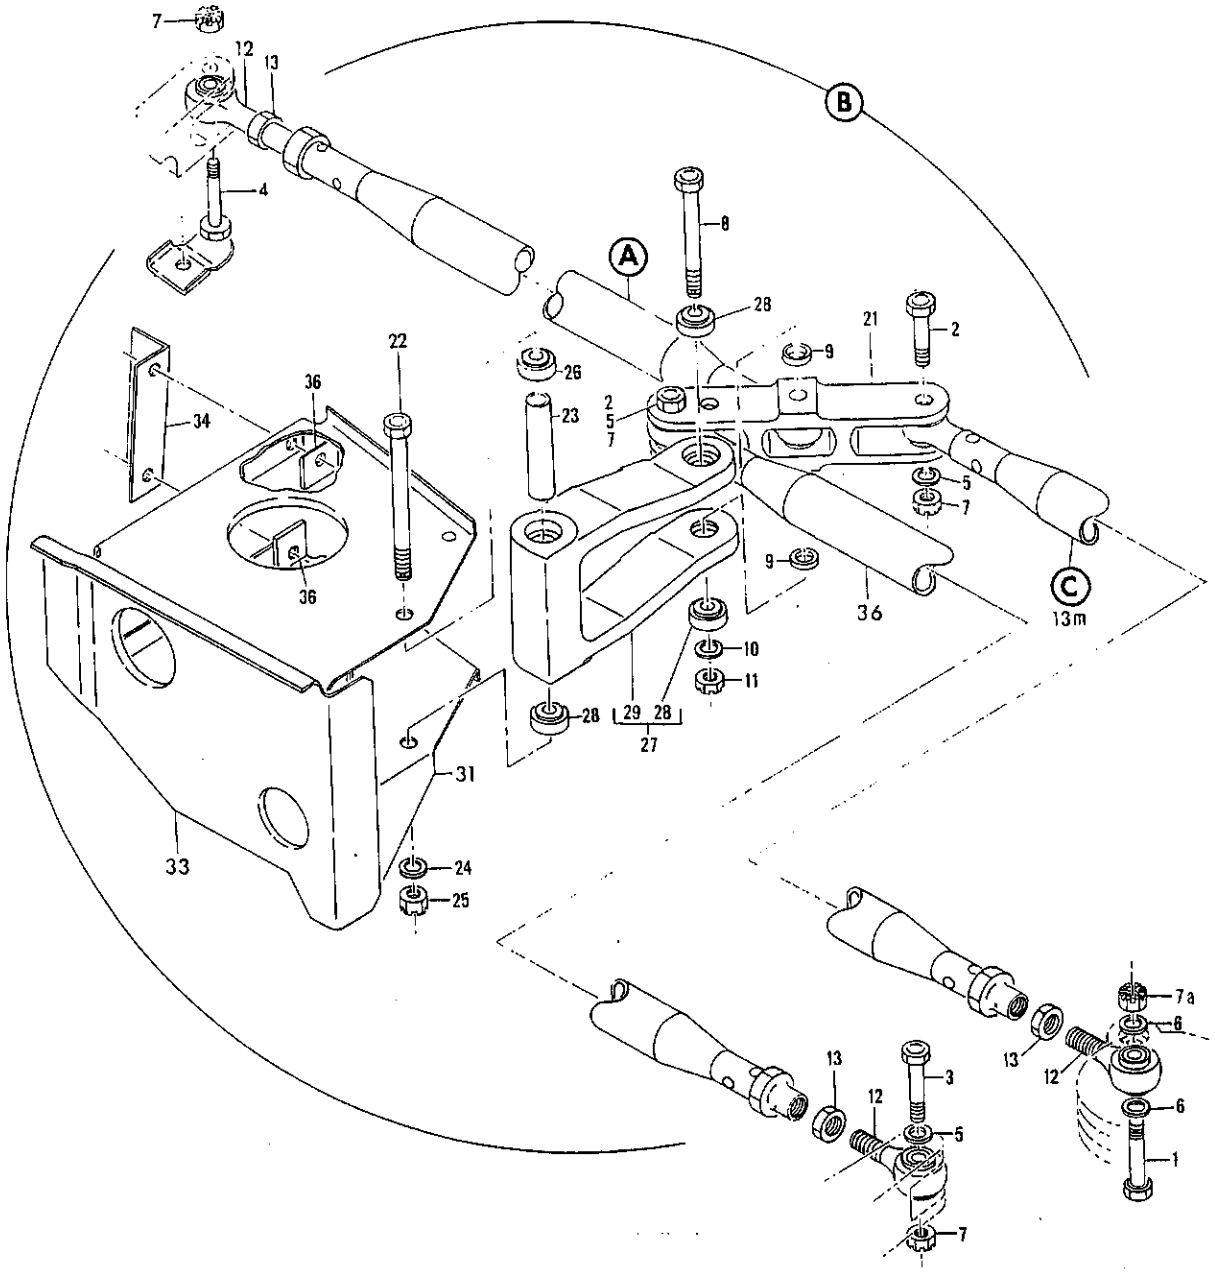
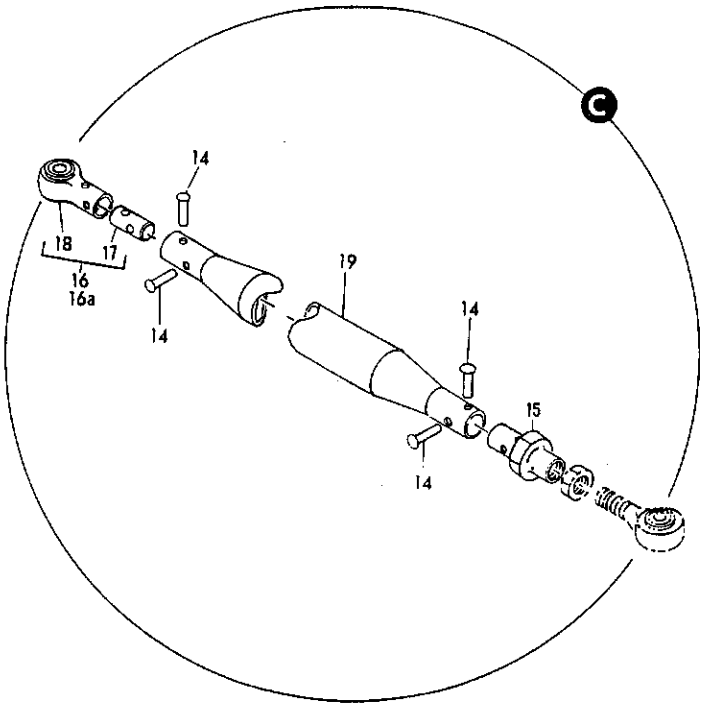


FIGURE 21. LINKAGE INSTL, INBOARD SPOILER DIFFERENTIAL (SHEET 2)



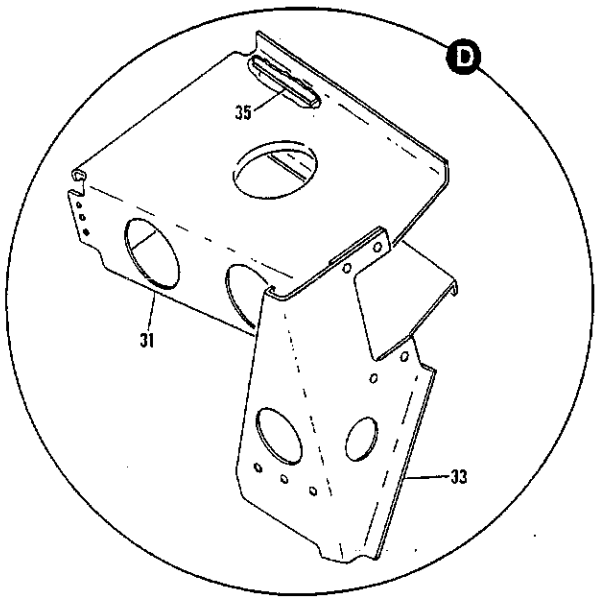
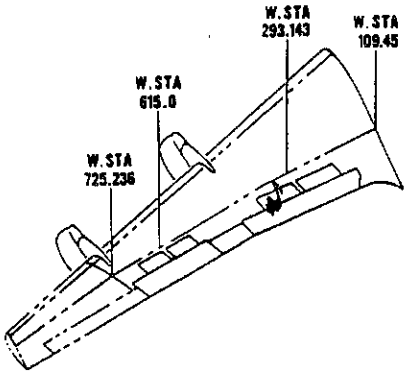


FIGURE 21. LINKAGE INSTL, INBOARD SPOILER DIFFERENTIAL (SHEET 3)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
21	65-19000-1	LINKAGE INSTL, INBOARD SPOILER DIFFERENTIAL (LH) (SEE 27-3, FIG. 7, ITEM 8)		RF
	65-19000-2	LINKAGE INSTL, INBOARD SPOILER DIFFERENTIAL (RH) (SEE 27-3, FIG. 7, ITEM 8)		RF
1	NAS1304H12	. BOLT.		1
2	NAS1104-16D	. BOLT.		2
3	NAS1104-13DW	. BOLT.		1
4	BACB30GN4D15	. BOLT.		1
5	AN960D416L	. WASHER.		3
6	BACW10T416L	. WASHER.		2
7	AN320-4	. NUT		4
7A	AN310-4	. NUT		1
8	NAS1104-32D	. BOLT.		1
9	NAS43DD4-7	. SPACER.		2
10	AN960D416L	. WASHER.		1
11	AN320-4	. NUT		1
12	BACB10A436	. BEARING		3
13	AN316-6R	. NUT		3
13A	AN316-8R	. NUT, (USED WITH 69-11772-2 AND 69-35242-1).		2
13L	69-11754	. PLUG, SPOILER CONTROL ROD (USED WITH 69-11772-2 AND 69-35242-1)		1
13M	90-2423-3008	. ROD ASSY, CONTROL		1
13Q	69-11772-2	. ROD ASSY, ADJUSTABLE CONTROL. (OPTIONAL 69-35242-1)		1
13Q	69-35242-1	. ROD ASSY, ADJUSTABLE CONTROL. (OPTIONAL TO 69-11772-2)		1
14	AN470D5	. . RIVET, (USED ON 90-2423-3008)		4
14B	MS20470D6	. . RIVET, (USED ON 69-11772-2 AND 69-35242-1).		4
15	60-2271-2002	. . PLUG, ROD END THREADED (USED ON 90-2423-3008)		1
16	60-2293	. . BEARING ASSY, ROD END BALL.		1
17	60-2293-1	. . . PLUG, ROD END BALL BEARING.		1
18	BACB10A457	. . . BEARING		1
19	90-2423-3009	. . ROD, CONTROL (USED ON 90-2423-3008)		1
20A	69-11772-3	. . ROD, ADJUSTABLE CONTROL (USED ON 69-11772-2).		1
20A	69-35242-2	. . ROD, ADJUSTABLE CONTROL (USED ON 69-35242-1).		1
20B	69-39717-1	. ROD ASSY, ADJUSTABLE CONTROL.		1
20D	MS20470D6	. . RIVET		1
20E	AN316-8R	. . NUT		1
20F	69-39702-2	. . PLUG, SPOILER CONTROL ROD		1
20G	69-39701-2	. . INSERT, SPOILER CONTROL ROD		1
20H	60-2293-3	. . BEARING ASSY, ROD END BALL. (OPTIONAL TO BACB10AE10A)		1
20H	BACB10AE10A	. . BEARING, ROD END. (OPTIONAL 60-2293-3)		1
20J	60-2293-1	. . . PLUG.		1
20K	BACB10AE10	. . . BEARING		1
20L	69-39717-2	. . ROD, ADJUSTABLE CONTROL		1
21	69-8673	. BAR, SPOILER DIFFERENTIAL FOLLOW-UP		1
22	NAS1104A7DW	. BOLT.		1
23	NAS43DD4-143	. SPACER.		1
24	AN960D416L	. WASHER.		1
25	AN320-4	. NUT		1
26	AN201KP4A	. BEARING		1
27	5-97628-3001	. ARM ASSY, SPOILER DIFFERENTIAL SUPPORT.		1
28	AN201KP4A	. . BEARING		3
29	5-97628-2001	. . ARM, SPOILER DIFFERENTIAL SUPPORT		1
31	69-20877-1	. BRACKET, INBOARD SPOILER DIFFERENTIAL SUPPORT (LH ONLY)		1
31	69-20877-2	. BRACKET, INBOARD SPOILER DIFFERENTIAL SUPPORT (RH ONLY)		1
33	69-20883-1	. BRACKET, INBOARD SPOILER DIFFERENTIAL (LH ONLY)		1
33	69-20883-2	. BRACKET, INBOARD SPOILER DIFFERENTIAL (RH ONLY)		1
35	69-20883-3	. CLIP, INBOARD SPOILER DIFFERENTIAL BRACKET (LH ONLY)		1
35	69-20883-4	. CLIP, INBOARD SPOILER DIFFERENTIAL BRACKET (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



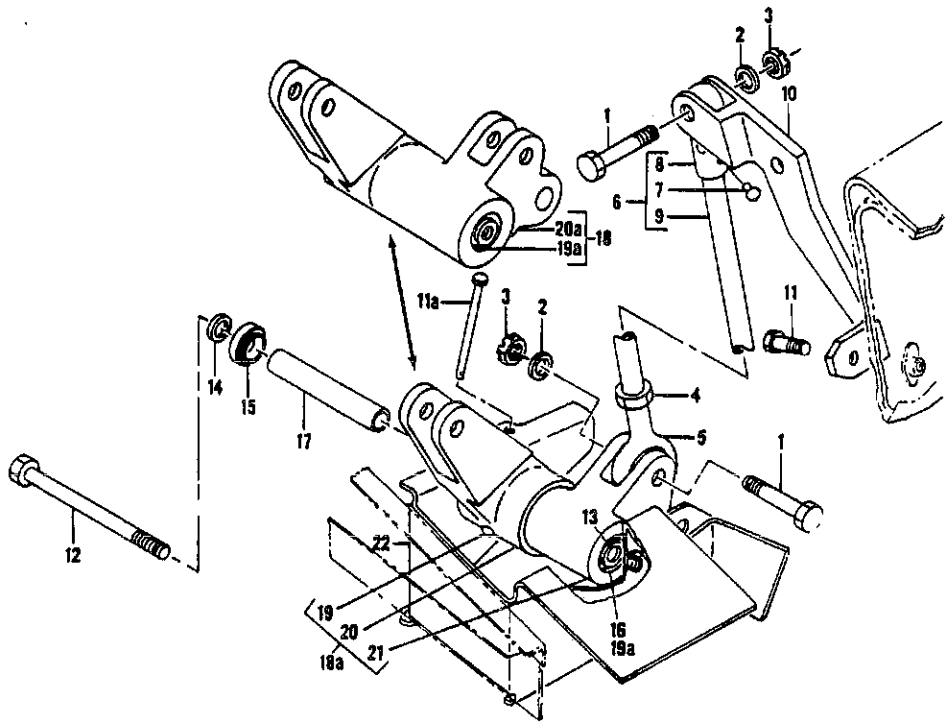


FIGURE 22. CRANK INSTL, INBOARD SPEED BRAKE FOLLOW-UP LINKAGE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	22	65-8303-1	CRANK INSTL, INBOARD SPEED BRAKE FOLLOW-UP LINKAGE (LH) (SEE 27-3, FIG. 7, ITEM 6)		RF
		65-8303-2	CRANK INSTL, INBOARD SPEED BRAKE FOLLOW-UP LINKAGE (RH) (SEE 27-3, FIG. 7, ITEM 6)		RF
	1	NAS1104-13DW	. BOLT.		2
	2	AN960D416L	. WASHER.		2
	3	AN320-4	. NUT		2
	4	AN316-6R	. NUT		1
	5	BACB10A436	. BEARING		1
	6	60-2747-3003	. ROD ASSY, INBOARD SPOILER FOLLOW-UP LINKAGE		1
	7	AN470D6	. . RIVET		2
	8	BACB10A457	. . BEARING		1
	9	60-2747-2008	. . TUBE, INBOARD SPOILER FOLLOW-UP LINKAGE ROD		1
	10	6-84665-2005	. BRACKET, INBOARD SPOILER FOLLOW-UP LINKAGE (LH ONLY)		1
	10	6-84665-2006	. BRACKET, INBOARD SPOILER FOLLOW-UP LINKAGE (RH ONLY) ATTACHING PARTS		1
	11	AN4H6A	. BOLT. -------*-------		1
	12	NAS1304-41HW	. BOLT.		1
	13	AN960D416L	. WASHER.		1
	14	AN960D416	. WASHER.		1
	15	AN201KP4A	. BEARING		1
	17	NAS43DD4-121	. SPACER.		1
R	18	65-13743-3	. ARM ASSY, INBOARD SPOILER FOLLOW UP (LH ONLY) (OPTIONAL 65-8303-7, OPTIONAL TO 65-13743-15)	0150	1
R	18	65-13743-15	. ARM ASSY, INBOARD SPOILER FOLLOW UP (LH ONLY) (OPTIONAL 65-13743-3)	0150	1
R	18	65-13743-15	. ARM ASSY, INBOARD SPOILER FOLLOW UP (LH ONLY)	5199	1
R	18	65-13743-4	. ARM ASSY, INBOARD SPOILER FOLLOW UP (RH ONLY) (OPTIONAL 65-8303-8, OPTIONAL TO 65-13743-16)	0150	1
R	18	65-13743-16	. ARM ASSY, INBOARD SPOILER FOLLOW UP (RH ONLY) (OPTIONAL 65-13743-4)	0150	1
R	18	65-13743-16	. ARM ASSY, INBOARD SPOILER FOLLOW UP (RH ONLY)	5199	1
R	18A	65-8303-7	. CRANK ASSY, INBOARD SPEED BRAKE FOLLOW-UP LINKAGE (LH ONLY) (OPTIONAL TO 65-13743-3)	0150	1
R	18A	65-8303-8	. CRANK ASSY, INBOARD SPEED BRAKE FOLLOW-UP LINKAGE (RH ONLY) (OPTIONAL TO 65-13743-4)	0150	1
R	19	MS20470D6	. . RIVET, (USED ON 65-8303-7, -8).	0150	3
	19A	AN201KP4A	. . BEARING, (USED ON 65-8303-7, -8, 65-13743-3, -4, -15, -16)		1
R	20	9-67699-2002	. . ARM, INBOARD SPOILER FOLLOW-UP LINKAGE (USED ON 65-8303-5, -6, -7 AND -8)	0150	1
R	20A	65-13743-7	. . ARM, INBOARD SPOILER FOLLOW-UP (USED ON 65-13743-3)	0150	1
	20A	65-13743-17	. . ARM, (USED ON 65-13743-15).		1
R	20A	65-13743-8	. . ARM, INBOARD SPOILER FOLLOW-UP (USED ON 65-13743-4)	0150	1
	20A	65-13743-18	. . ARM, (USED ON 65-13743-16).		1
R	21	60-2739-2005	. . CRANK, INBOARD SPOILER FOLLOW-UP LINKAGE (USED ON 65-8303-7)	0150	1
R	21	60-2739-2006	. . CRANK, INBOARD SPOILER FOLLOW-UP LINKAGE (USED ON 65-8303-8)	0150	1
	22	69-20958-1	. BRACKET ASSY, INBOARD SPEED BRAKE FOLLOW-UP CRANK SUPPORT (LH ONLY)		1
	22	69-20958-2	. BRACKET ASSY, INBOARD SPEED BRAKE FOLLOW-UP CRANK SUPPORT (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

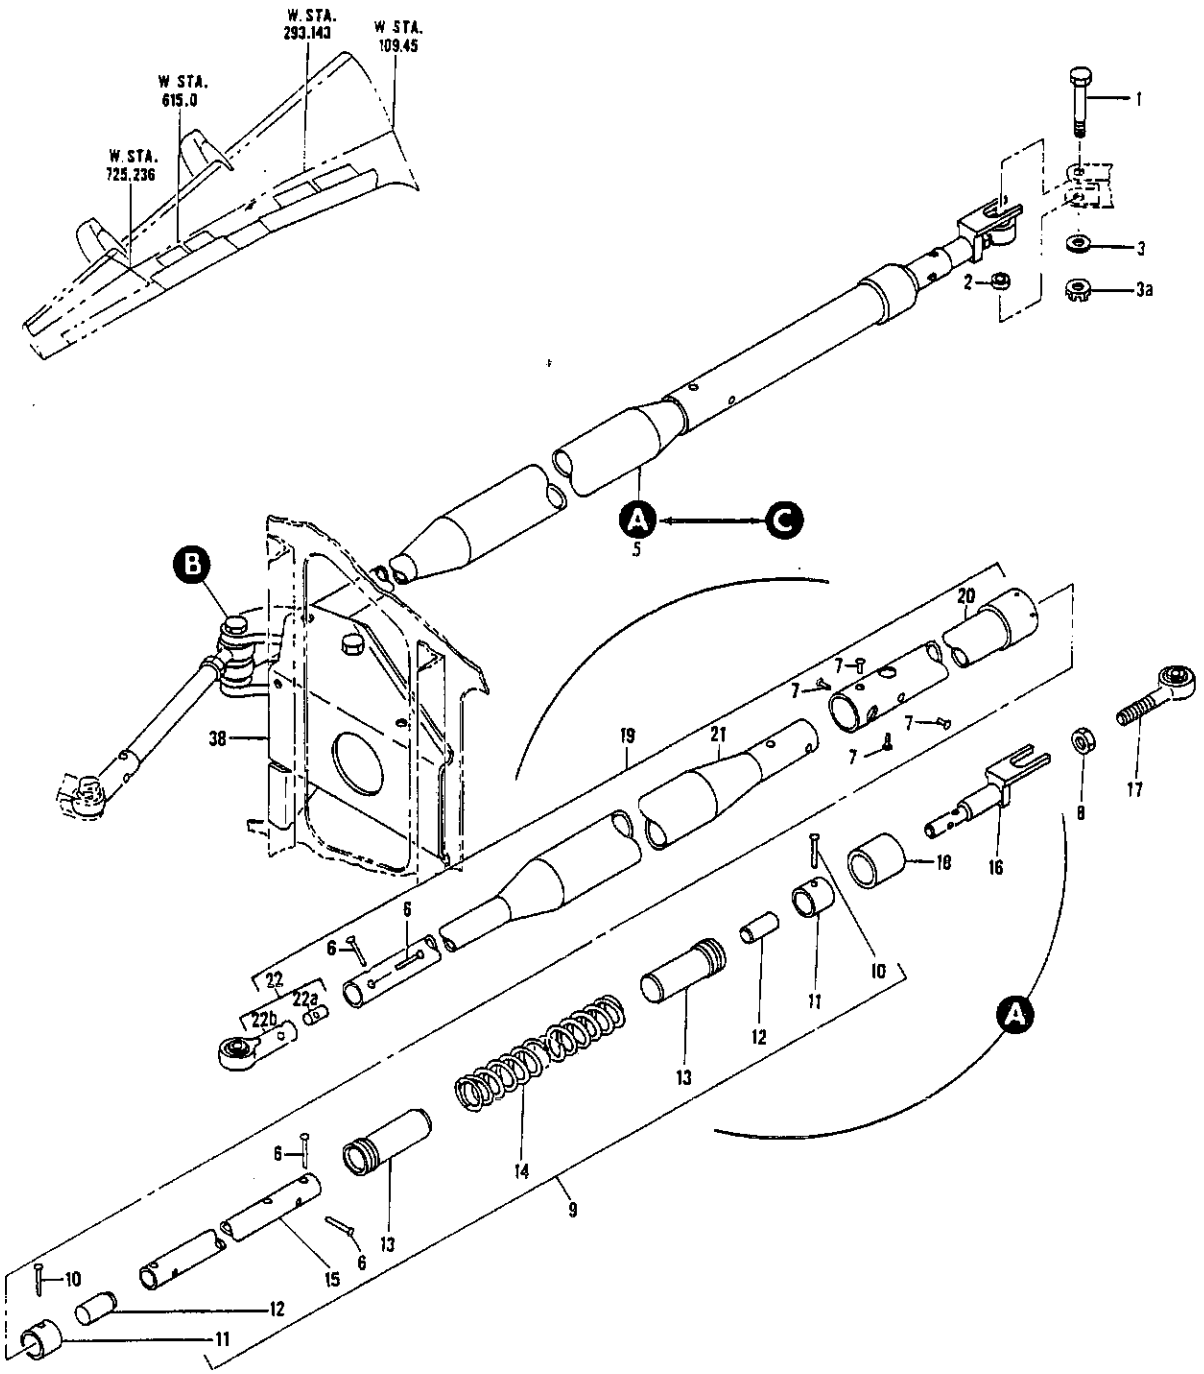


FIGURE 23. CRANK INSTL, WING STATION 449.56 INBOARD SPOILER IDLER (SHEET 1)

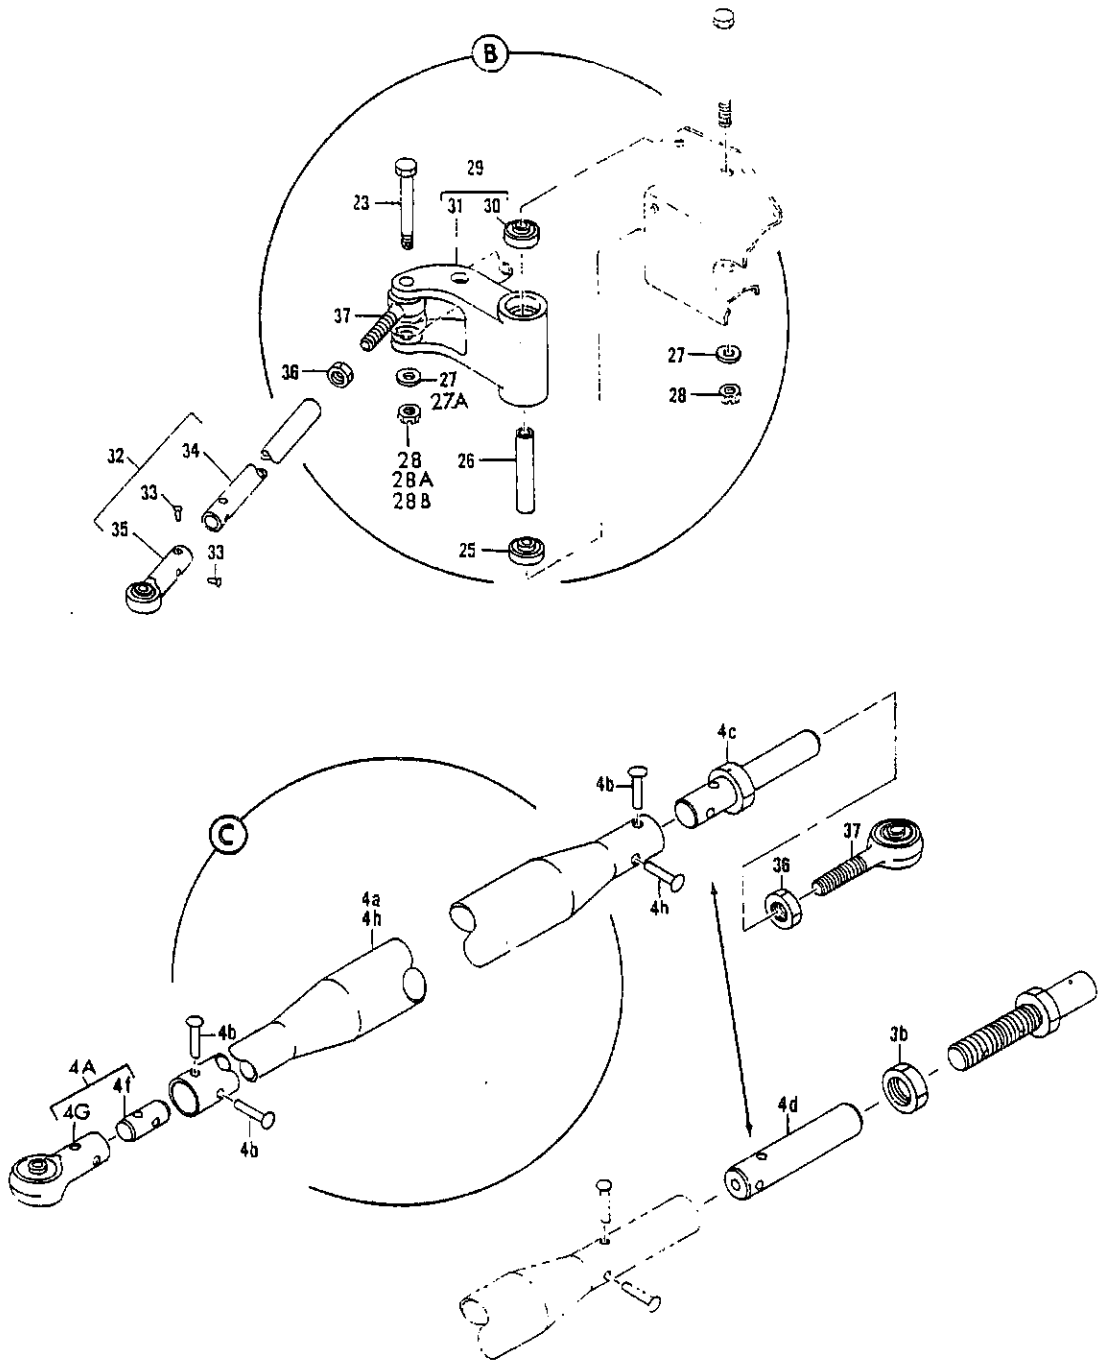


FIGURE 23. CRANK INSTL, WING STATION 449.56 INBOARD SPOILER IDLER (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
23	65-19002-1	CRANK INSTL, WING STATION 449.56 INBOARD SPOILER IDLER (LH) (SEE 27-3, FIG. 7, ITEM 7)		RF
	65-19002-2	CRANK INSTL, WING STATION 449.56 INBOARD SPOILER IDLER (RH) (SEE 27-3, FIG. 7, ITEM 7)		RF
1	NAS464P4-14	. BOLT, (USED WITH 69-50035, -2, -4 AND 69-11772-4)		1
3	AN960D416	. WASHER.		1
3A	AN320-4	. NUT		1
3B	AN316-8R	. NUT		1
4	69-11754	. PLUG, CONTROL ROD SPOILER		1
4A	69-11772-4	. ROD ASSY, ADJUSTABLE CONTROL.		1
4B	MS20470D6-6	. . RIVET, (USED ON 69-11772-4)		4
4D	69-11753	. . PLUG, ROD END THREADED (USED ON 69-11772-4)		1
4E	60-2293	. . BEARING ASSY, END BALL.		1
4F	60-2293-1	. . . PLUG, ROD END BALL BEARING.		1
4G	BACB10A457	. . . BEARING		1
4H	69-11772-5	. . ROD, ADJUSTABLE CONTROL (USED ON 69-11772-4).		1
23	NAS464P4-30	. BOLT.		1
24	NAS464P4-45	. BOLT.		1
25	AN201KP4A	. BEARING		1
26	NAS43DD4-136	. SPACER.		1
27	AN960D416	. WASHER.		2
28	AN320-4	. NUT		2
29	65-17081-1	. CRANK ASSY, INBOARD SPOILER LINKAGE IDLER (LH ONLY)		1
29	65-17081-2	. CRANK ASSY, INBOARD SPOILER LINKAGE IDLER (RH ONLY)		1
30	AN201KP4A	. . BEARING		1
31	65-17081-3	. . CRANK, INBOARD SPOILER LINKAGE IDLER (LH ONLY).		1
31	65-17081-4	. . CRANK, INBOARD SPOILER LINKAGE IDLER (RH ONLY).		1
32	69-8895	. ROD ASSY, CONTROL		1
33	AN470D6	. . RIVET		2
34	69-8895-1	. . ROD, CONTROL.		1
35	REP4H8	. . BEARING, ROD END BALL (V21335).		1
36	AN316-6R	. NUT		2
37	BACB10A436	. BEARING		2
38	69-9786-1	. BRACKET ASSY, INBOARD SPOILER IDLER CRANK (LH ONLY)		1
38	69-9786-2	. BRACKET ASSY, INBOARD SPOILER IDLER CRANK (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

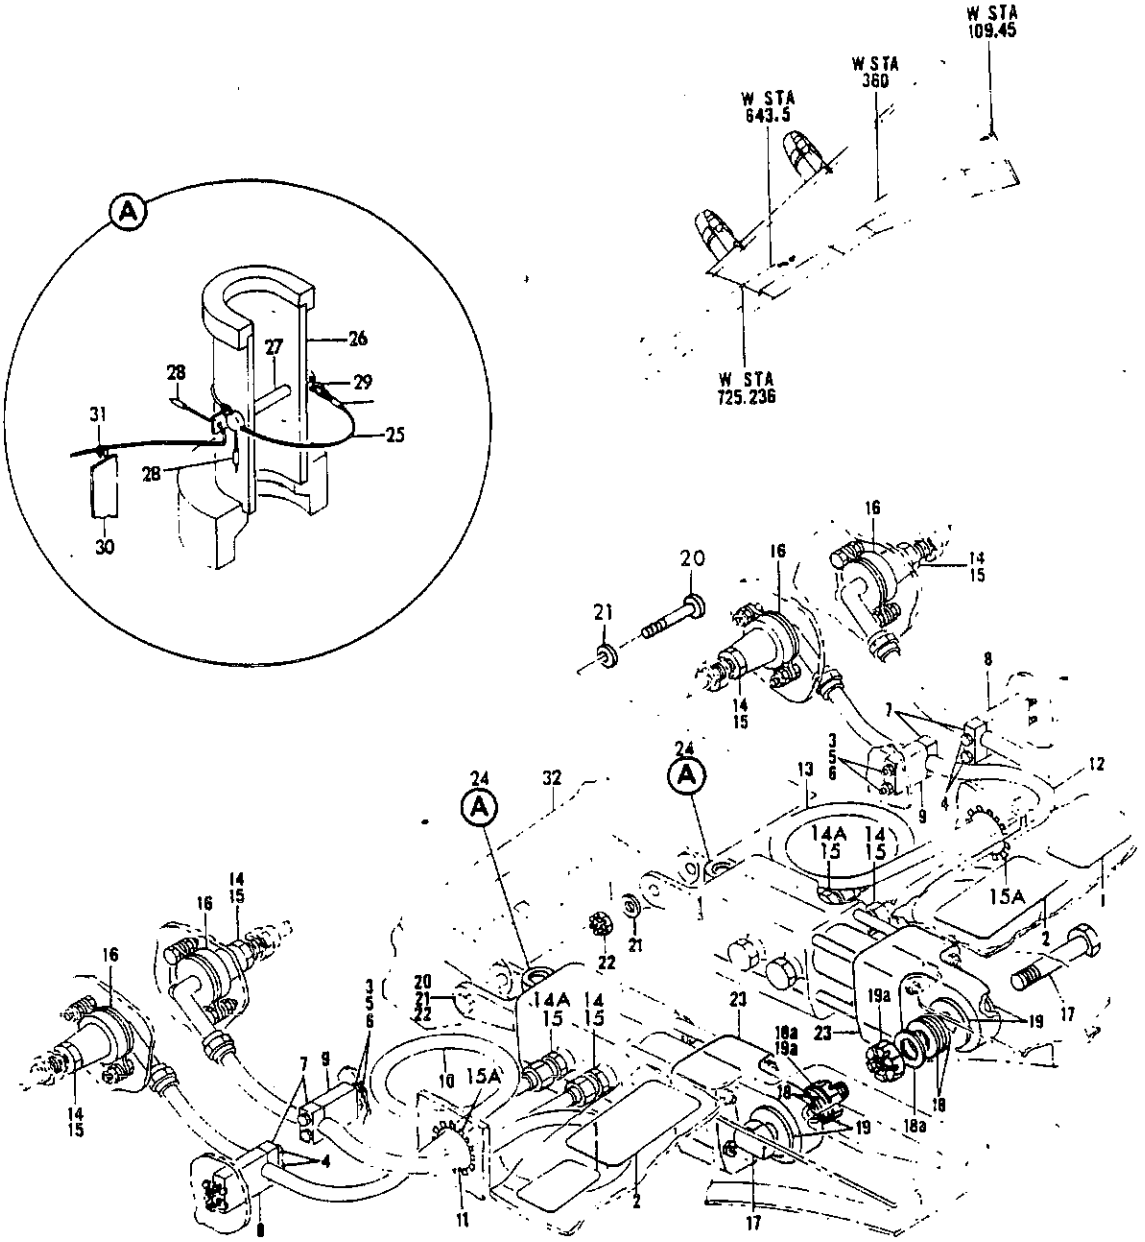


FIGURE 25. ACTUATOR AND SWIVEL JOINT INSTL, SPOILER

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	25	65-23970-1	ACTUATOR AND SWIVEL JOINT INSTL, SPOILER (LH SHOWN, RH IDENTICAL) (SEE 29-2, FIG. 2, ITEM 76, 29-2, FIG. 2A, ITEM 73, 29-2, FIG. 6, ITEM 66, AND 29-2, FIG. 6A, ITEM 65)		RF
	3	AN3-23A	. BOLT.		4
	4	AN3-30A	. BOLT.		4
	5	AN960D10	. WASHER.		4
	6	BACN10JC3	. NUT		4
	7	6-63963	. SEGMENT, SPOILER ACTUATOR TUBE SUPPORT.		4
	8	6-63963-5	. SEGMENT, SPOILER ACTUATOR TUBE SUPPORT.		2
	9	6-63963-7	. SEGMENT, SPOILER ACTUATOR TUBE SUPPORT.		2
R	10	65-23970-5	. TUBE ASSY, SPOILER DOWN 3/8 IN. .035 AISI304. (OPTIONALS AISI321, AISI347) (DELETED BY SB 2926)	0150	1
R	10	AE703260-2	. HOSE ASSY, (V00624) (ADDED BY SB 2926). (OPTIONALS B4408DB0174C (V98441) R11599 (V06851) (ADDED BY SB 2926))	0150	1
R	10	B4408DB0174C	. HOSE ASSY, (V98441) (ADDED BY SB 2926). (OPTIONAL TO AE703260-2 (V00624) (ADDED BY SB 2926))	0150	1
R	10	R11599	. HOSE ASSY, (V06851) (ADDED BY SB 2926). (OPTIONAL TO AE703260-2 (V00624) (ADDED BY SB 2926))	0150	1
R	10	10-60563-57	. HOSE ASSY	5199	1
R	11	65-23970-3	. TUBE ASSY, SPOILER UP 3/8 IN. .035 AISI304 (OPTIONALS AISI321, AISI347) (DELETED BY SB 2926)	0150	1
R	11	AE703261-2	. HOSE ASSY, (V00624) (ADDED BY SB 2926). (OPTIONALS B439DDB0144C (V98441) R11598 (V06851) (ADDED BY SB 2926))	0150	1
R	11	B439DDB0144C	. HOSE ASSY, (V98441) (ADDED BY SB 2926). (OPTIONAL TO AE703261-2 (V00624) (ADDED BY SB 2926))	0150	1
R	11	10-60563-58	. HOSE ASSY	5199	1
R	11	R11598	. HOSE ASSY, (V06851) (ADDED BY SB 2926). (OPTIONAL TO AE703261-2 (V00624) (ADDED BY SB 2926))	0150	1
R	12	65-23970-4	. TUBE ASSY, SPOILER UP 3/8 IN. .035 AISI304 (OPTIONALS AISI321, AISI347) (DELETED BY SB 2926)	0150	1
R	12	AE703261-2	. HOSE ASSY, (V00624) (ADDED BY SB 2926). (OPTIONALS B439DDB0144C (V98441) R11598 (V06851) (ADDED BY SB 2926))	0150	1
R	12	B439DDB0144C	. HOSE ASSY, (V98441) (ADDED BY SB 2926). (OPTIONAL TO AE703261-2 (V00624) (ADDED BY SB 2926))	0150	1
R	12	10-60563-57	. HOSE ASSY	5199	1
R	12	R11598	. HOSE ASSY, (V06851) (ADDED BY SB 2926). (OPTIONAL TO AE703261-2 (V00624) (ADDED BY SB 2926))	0150	1
R	13	65-23970-6	. TUBE ASSY, SPOILER DOWN 3/8 IN. .035 AISI304. (OPTIONALS AISI321, AISI347) (DELETED BY SB 2926)	0150	1
R	13	AE703260-2	. HOSE ASSY, (V00624) (ADDED BY SB 2926). (OPTIONALS B4408DB0174C (V98441) R11599 (V06851) (ADDED BY SB 2926))	0150	1
R	13	B4408DB0174C	. HOSE ASSY, (V98441) (ADDED BY SB 2926). (OPTIONAL TO AE703260-2 (V00624) (ADDED BY SB 2926))	0150	1
R	13	10-60563-58	. HOSE ASSY	5199	1
R	13	R11599	. HOSE ASSY, (V06851) (ADDED BY SB 2926). (OPTIONAL TO AE703260-2 (V00624) (ADDED BY SB 2926))	0150	1
R		BACN10CS6	. . NUT	0150	1
R		MS21921-6	. . NUT	0150	1
R		MS21922-6	. . SLEEVE.	0150	2
R	14	MS21902-6	. UNION	5199	6
R	14A	MS21902-6	. UNION, (DELETED BY SB 2926)	0150	2
R	14A	MS21916-6-4	. REDUCER	5199	2
R	14A	MS21916-6-4	. REDUCER, (ADDED BY SB 2926)	0150	2
	15	NAS1612-6	. PACKING		8
R	15A	BACG20ZN980B	. GROMMET	5199	2
R	15A	NMCG51TEB	. GROMMET, (V03296) (ADDED BY SB 2926). (OPTIONAL S11801-2B (V97820) (ADDED BY SB 2926))	0150	2
R	15A	S11801-2B	. GROMMET, (V97820) (ADDED BY SB 2926). (OPTIONAL TO NMCG51TEB (V03296)	0150	2
R	16	AE95615G	. JOINT ASSY, SWIVEL (V70128) (SAME AS BAC SPEC NO. 10-3203-3) (ADDED BY SB 2926)	0150	4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	25 16	10-51191	. JOINT ASSY, HYDRAULIC SWIVEL (V70709) (SAME AS BAC.	0150	RF
R			SPEC NO.;10-3203-2) (DELETED BY 2926) (SEE FIG.		
R			32)		
R			(OPTIONAL AND FOR REPLACEMENT ORDER AE95615G		
R			(V70128) (DELETED BY 2926))		
R	16	10-3203-3	. JOINT, SWIVEL (SAME AS AE95615G (V70128))	5199	4
R	16	10-3203-2	. JOINT, SWIVEL (SAME AS 10-51191 (V70709)) (DELETED BY	0150	4
R			SB 2926)		
R	16	AE95615G	. JOINT ASSY, (V70128) (SAME AS BAC SPEC NO..	5199	RF
R			10-3203-3) (SEE FIG. 32)		
R	16	10-3203-3	. JOINT, SWIVEL (SAME AS AE95615G (V70128))	0150	4
R			(OPTIONAL TO AND REPLACEMENT FOR BAC SPEC		
R			NO.;10-3203-2 (DELETED BY SB 2926))		
			ATTACHING PARTS		
		AN4-4A	. BOLT.		12
		AN960D416	. WASHER.		12
		BACN10JC4	. NUT		12
			-------*-----r--		
	17	66-17106-2	. BOLT, SPOILER ACTUATOR.		2
	18	AN960PD816	. WASHER.		2
	18A	BACW10P209AL	. WASHER.		AR
	19	66-14592-1	. WASHER, ACTUATOR AND SWIVEL JOINT		4
	19A	69-44870-1	. NUT		2
R	20	NAS1108-30DW	. BOLT.	0150	2
R	20	BACB30LM8DU30	. BOLT.	5199	2
	21	AN960PD816	. WASHER.		2
R	22	AN320-8	. NUT	0150	2
R	22	BACN10JD108	. NUT	5199	2
	23	65-58558-1	. ACTUATOR ASSY, SPOILER (SEE FIG. 29).		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

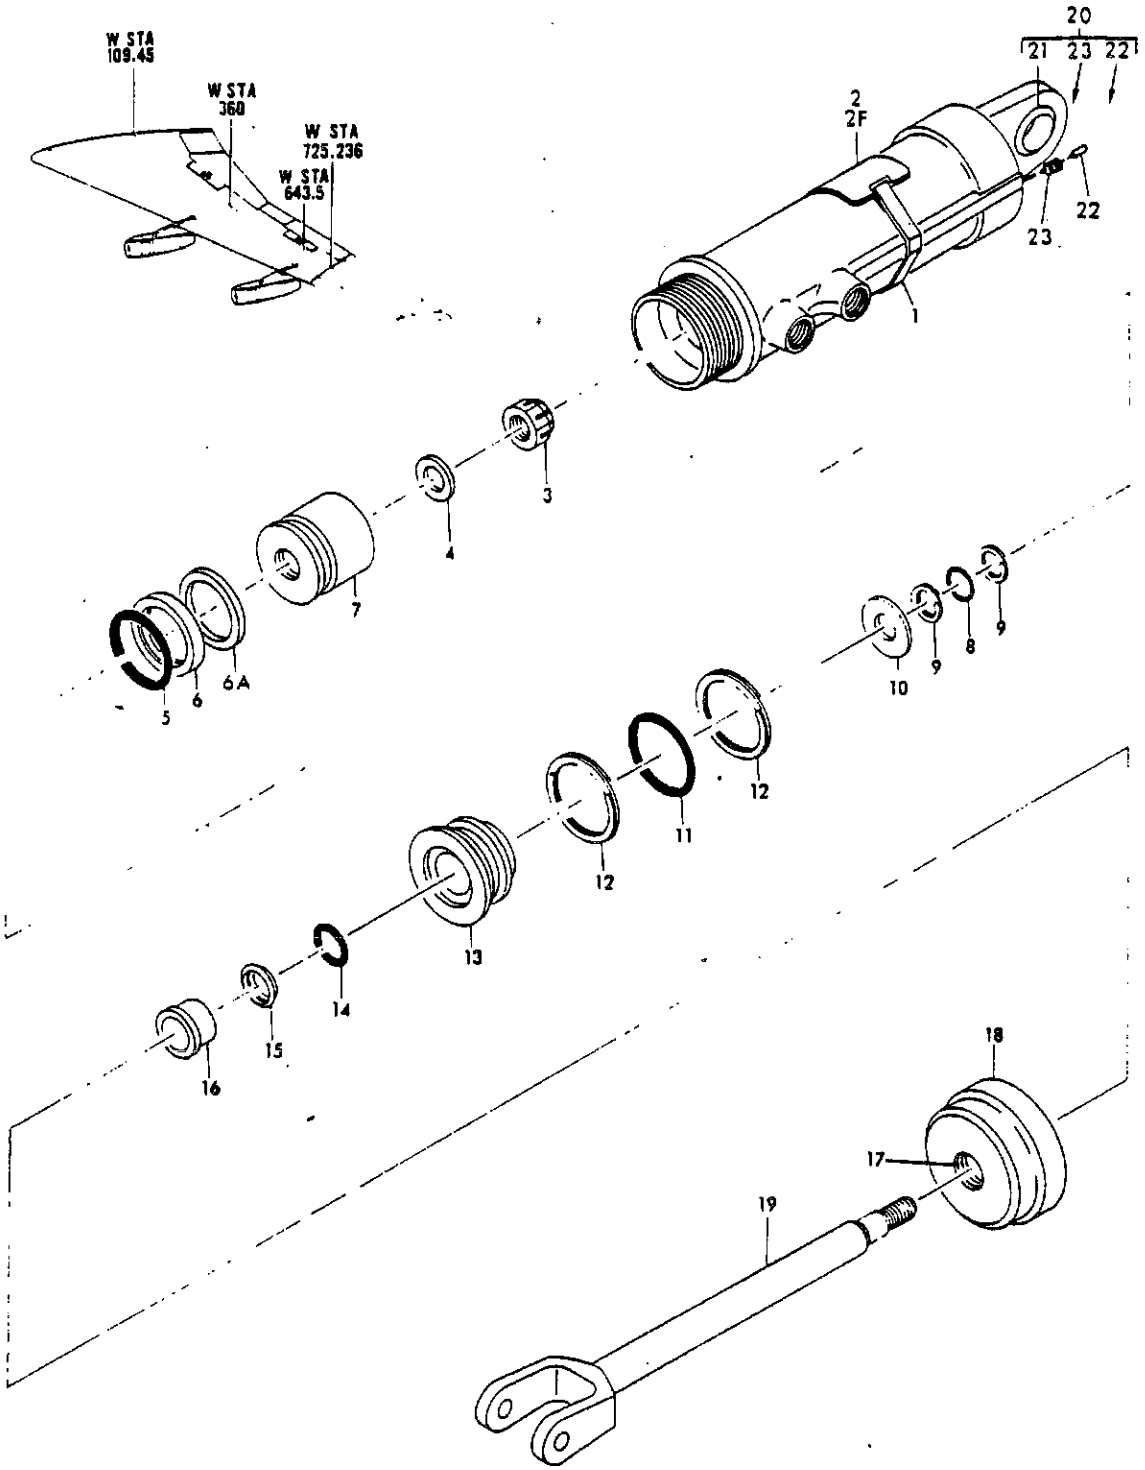


FIGURE 29. ACTUATOR ASSY, SPOILER

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
29	65-58558-1	ACTUATOR ASSY, SPOILER (SEE FIG. 25, ITEM 23)		RF
1	69-35587-2	. STRAP		1
2	BACN12A3MY	. NAMEPLATE		1
3	AN310-8	. NUT		1
4	AN960C816	. WASHER		1
5	NAS1611-222	. PACKING		1
6	66-14295-2	. CHANNEL, PISTON SEAL		1
7	66-23957-1	. PISTON		1
8	NAS1611-112	. PACKING		1
9	MS28782-10	. RING (OPTIONAL MS28774-112 (1 REQUIRED))		2
9	MS28774-112	. RING (OPTIONAL TO MS28782-10 (2 REQUIRED))		1
10	66-14183-2	. WASHER		1
11	NAS1611-222	. PACKING		1
12	MS28782-27	. RING		2
13	66-14174-2	. BEARING		1
14	NAS1611-115	. PACKING		1
14	MS28775-115	. PACKING		1
15	BACS11AA115	. SEAL		1
16	66-14272-1	. SLEEVE		1
17	BACS34A4	. RING		1
18	69-44850-1	. CAP, ROD END		1
19	69-37761-1	. ROD		1
20	65-58366-1	. HOUSING ASSY		1
21	BACP20AX18	. . PLUG		1
22	BACP20AX18P	. . PIN		1
23	MS21232-8	. . BEARING (OPTIONAL KSBG8N3 (V97613))		1
23	KSBG8N3	. . BEARING (V97613) (OPTIONAL TO MS21232-8 AND MS14101-8)		1
23	MS14101-8	. . BEARING (OPTIONAL KSBG8N3 (V97613))		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

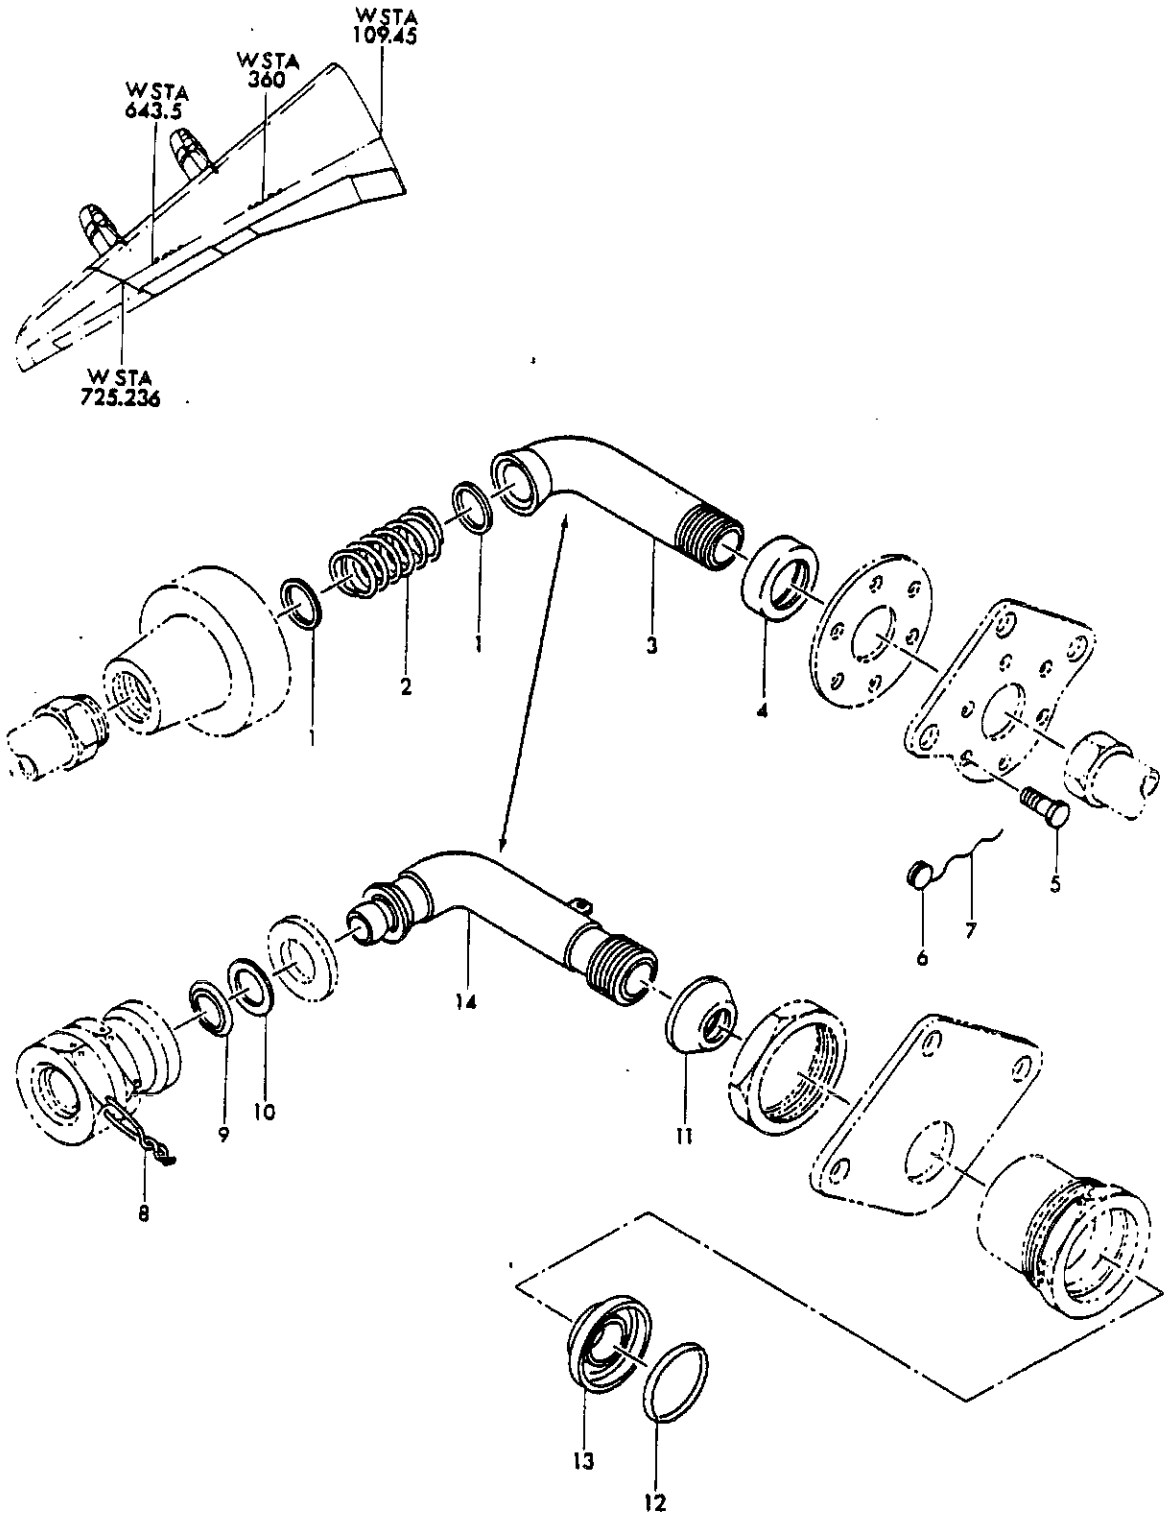


FIGURE 32 JOINT ASSY, HYDRAULIC SWIVEL

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	32		JOINT ASSY, HYDRAULIC SWIVEL.	0150	
			JOINT ASSY, SWIVEL.		
R		10-51191	. JOINT ASSY, HYDRAULIC SWIVEL (V70709) (SAME AS BAC. .	0150	RF
R			SPEC NO. 10-3203-2) (DELETED BY SB 2926) (SEE		
R			FIG. 24, ITEM 4 AND FIG. 25, ITEM 16)		
R	M	06-08304	. . PLUG AND BLEEDER, (V70709) (NOT USED WHEN	0150	1
R			INSTALLED)		
R	M	06-09322	. . GASKET, (V70709) (NOT USED WHEN INSTALLED).	0150	1
R	M 1	01-20218	. . SEAT, SPRING (V70709)	0150	2
R	M 2	01-24318	. . SPRING, (V70709).	0150	1
R	M 3	01-26286	. . BALL, 90 DEG MALE (V70709).	0150	1
R	M 4	01-22281	. . GASKET, JOINT (V70709).	0150	1
R	M 5	06-07514	. . BOLT, (V70709).	0150	6
R	M 6	01-23341	. . SEAL, LOCK WIRE (V70709).	0150	1
R	M 7	01-24156	. . WIRE, LOCK (V70709)	0150	AR
R	M	06-08682	. . CAP, PRESSURE SEAL (V70709) (NOT USED WHEN.	0150	1
R			INSTALLED)		
R		AE95615G	. JOINT ASSY, SWIVEL (V70128) (SAME AS BAC SPEC NO. . .	5199	RF
R			10-3203-3) (SEE FIG. 24, ITEM 4 AND FIG. 25, ITEM		
R			16)		
R		AE95615G	. JOINT ASSY, SWIVEL (V70128) (SAME AS BAC SPEC NO. . .	0150	RF
R			10-3203-3) (REPLACES 10-51191 BY SB 2926) (SEE		
R			FIG. 24, ITEM 4 AND FIG. 25, ITEM 16)		
	M 8	900010-41C	. . WIRE, (V70128).		AR
	M 9	22610-110	. . PACKING, (V70128)		1
	M 10	AE15037-001	. . RETAINER, (V70128).		1
	M 11	AE95621G	. . SEAT, (V70128).		1
	M 12	AE15070-001	. . RING, (V70128).		1
	M 13	AE95682G	. . SEAL, (V70128).		1
	M 14	AE95616G	. . SWIVEL, (70128)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING Intercontinental 707

PARTS CATALOG

SECTION 06

FLAPS

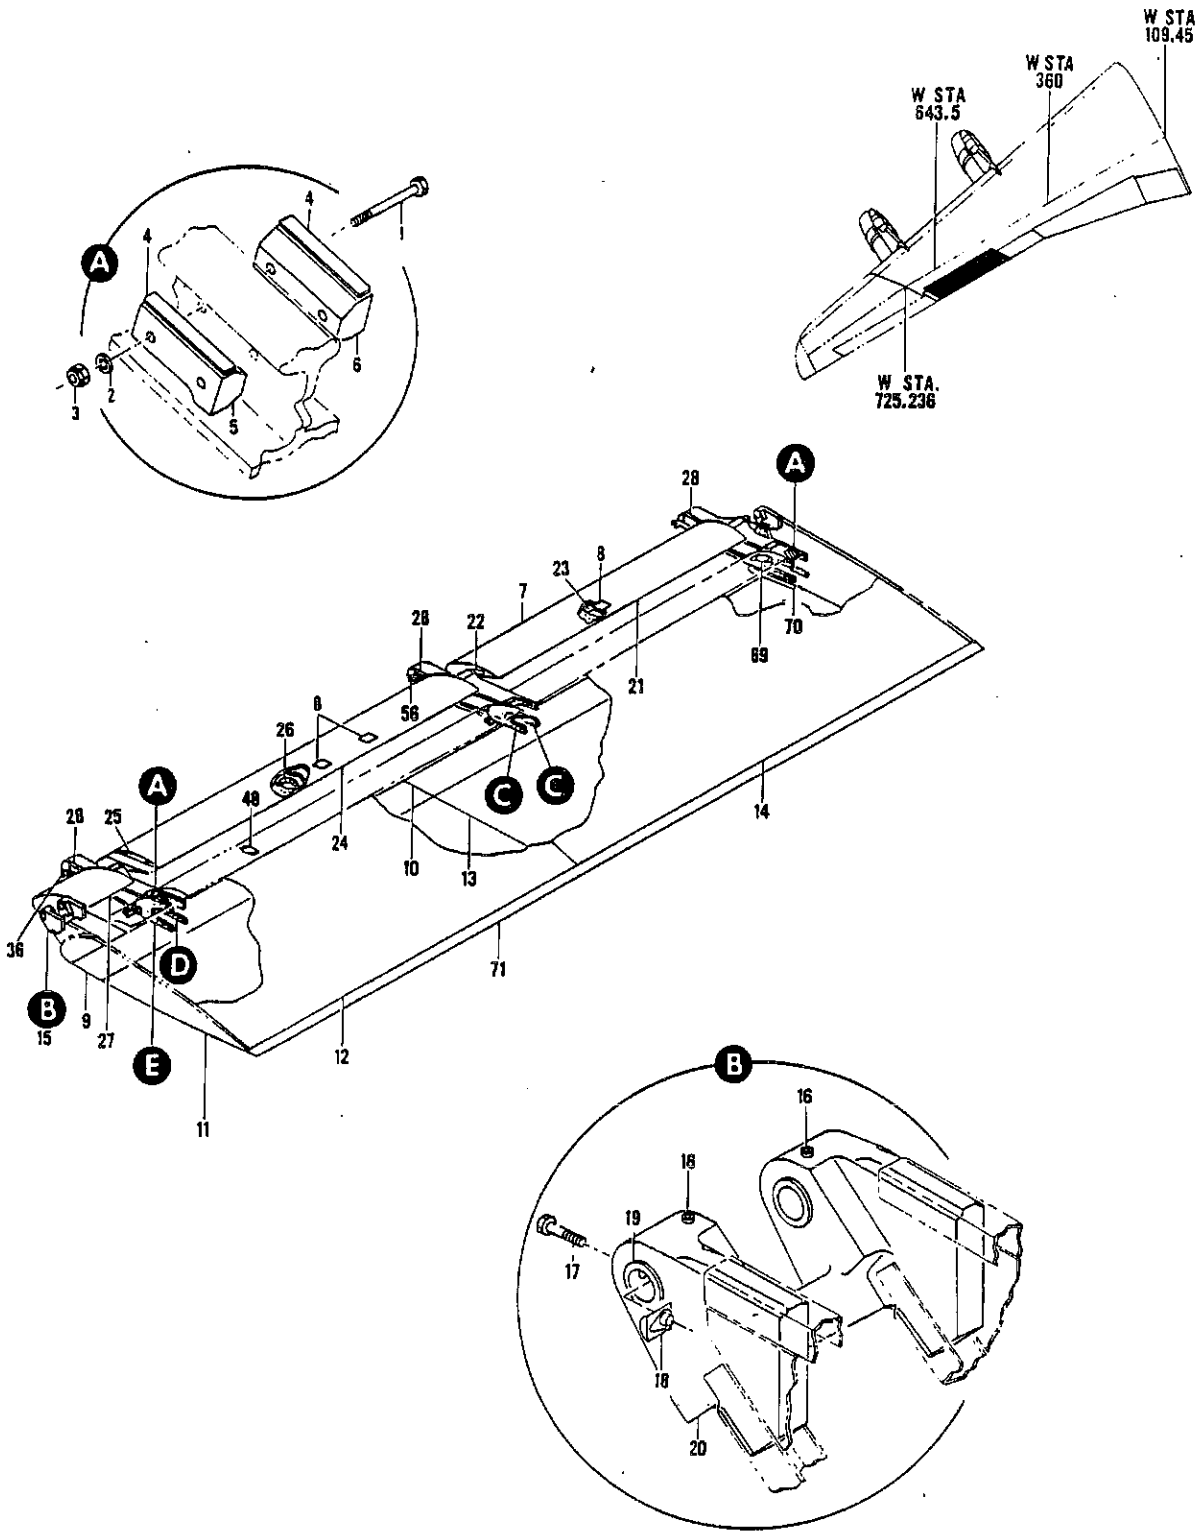


FIGURE 3. FLAP INSTL, OUTBOARD (SHEET 1)

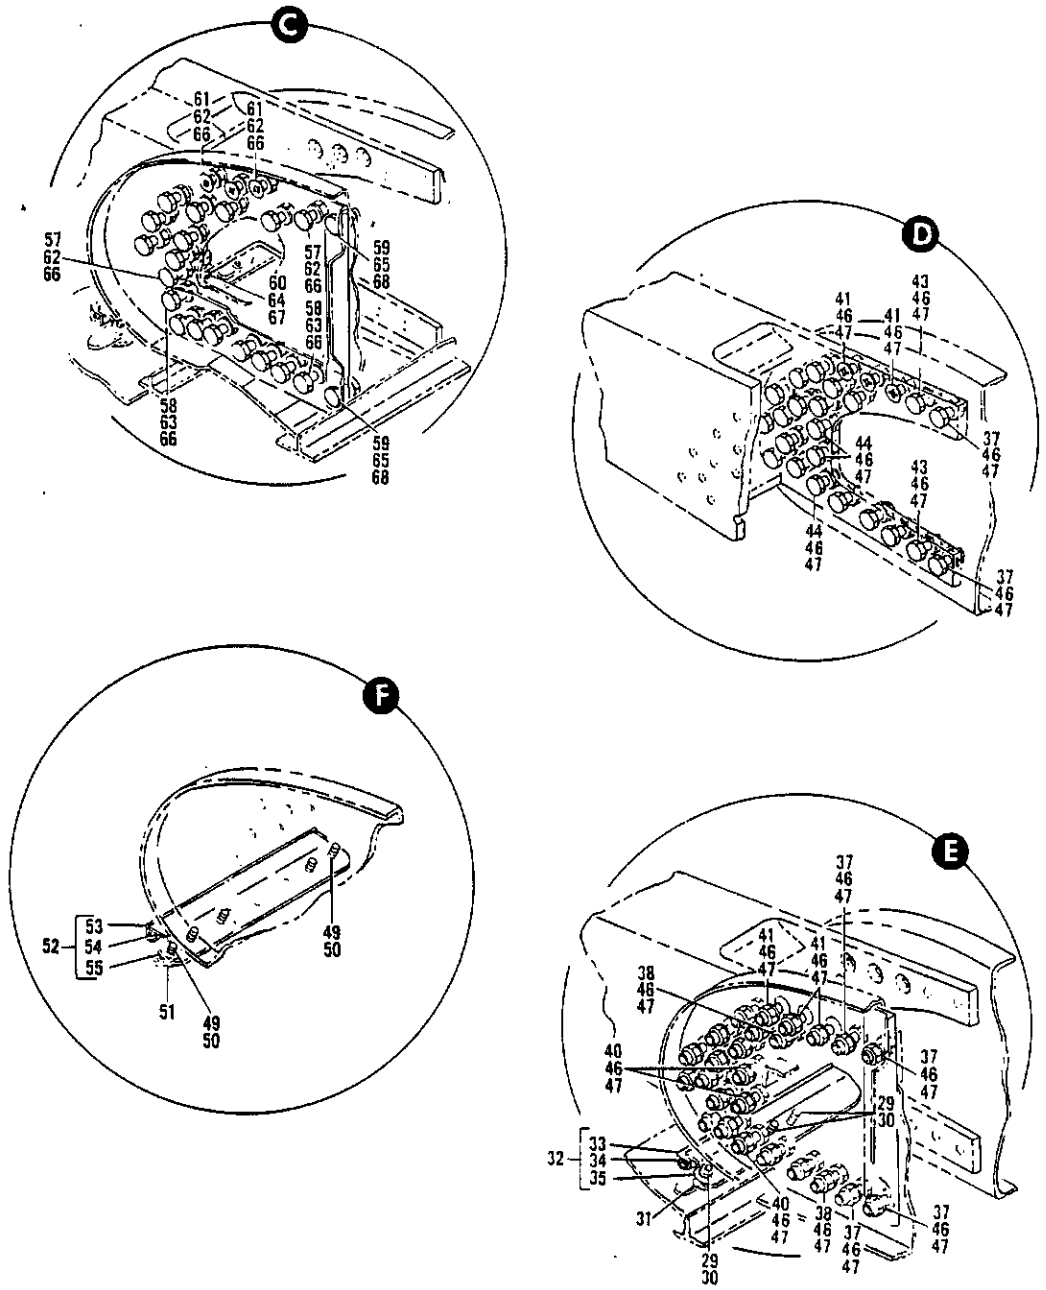


FIGURE 3. FLAP INSTL, OUTBOARD (SHEET 2)

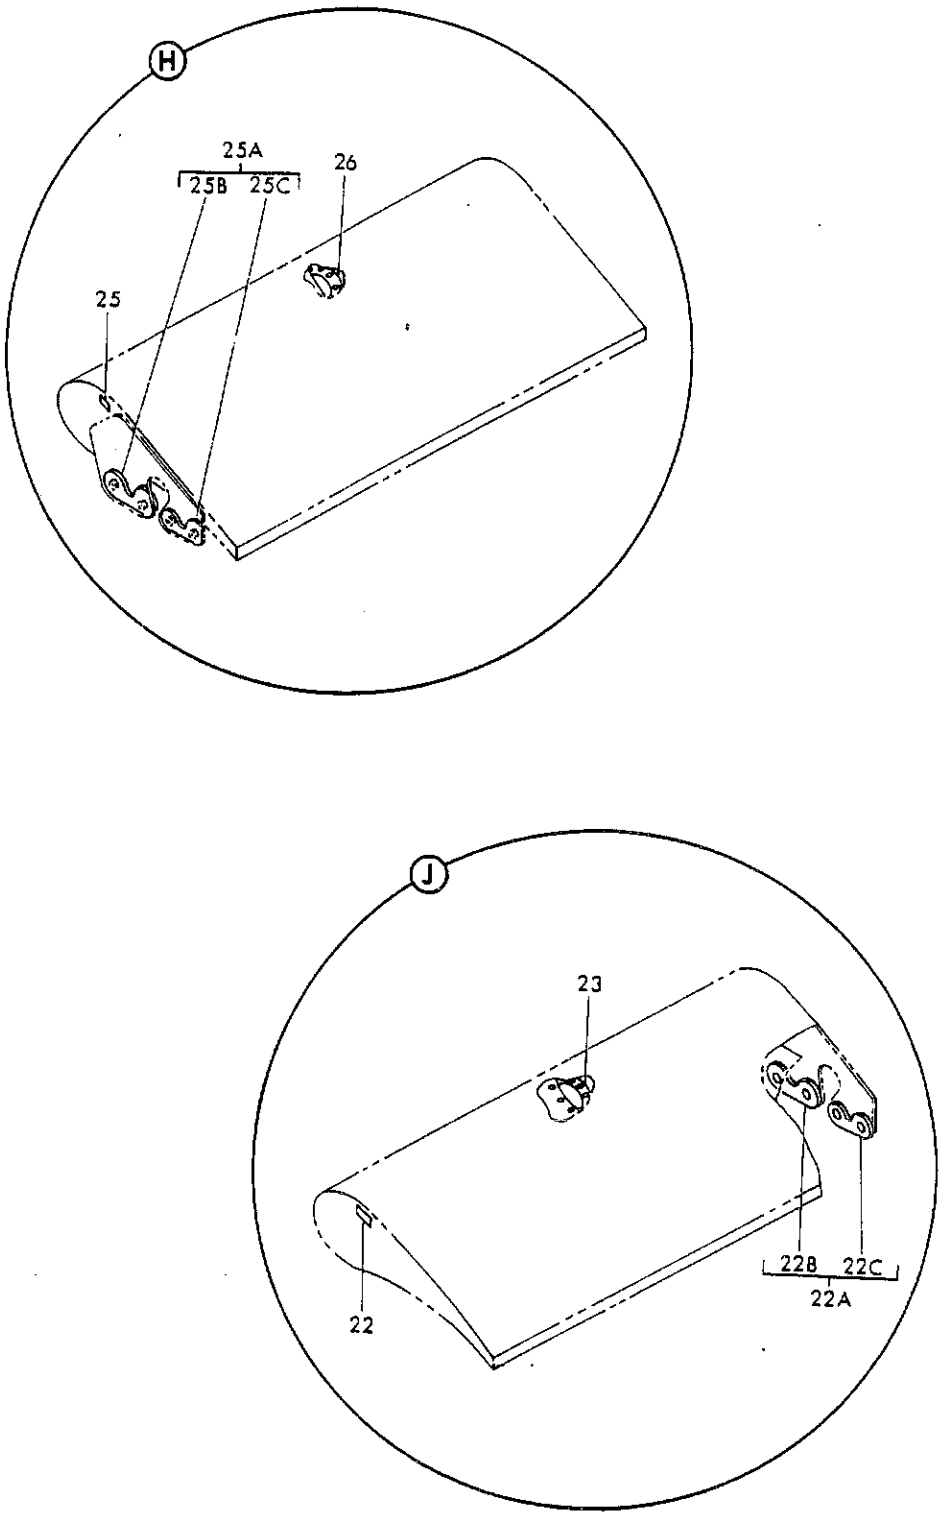


FIGURE 3. FLAP INSTL, OUTBOARD (SHEET 3)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	3	5-73132-3001	FLAP INSTL, OUTBOARD (LH) (SEE 57-1, FIG. 1, ITEM 19) .	0150	RF
R		5-73132-3001	FLAP INSTL, OUTBOARD (LH) (VARIABLE DWG	5199	RF
R			NO.;5-73132-5001) (57-1, FIG. 1, ITEM 19)		
R		5-73132-3002	FLAP INSTL, OUTBOARD (RH) (SEE 57-1, FIG. 1, ITEM 19) .	0150	RF
R		5-73132-3002	FLAP INSTL, OUTBOARD (RH) (VARIABLE DWG	5199	RF
R			NO.;5-73132-5002) (57-1, FIG. 1, ITEM 19)		
		5-96315-3001	. STOP INSTL, OUTBOARD FLAP DOWN POSITION		2
	1	NAS1104-25W	. . BOLT.		2
	2	AN960D416L	. . WASHER.		2
	3	NAS679A4W	. . NUT		2
	4	BACS40A7-37	. . SHIM, (OPTIONALS BACS40B7-37, BACS40C7-37). . . .		AR
	5	3-93742-3001	. . STOP, DOWN POSITION FLAP.		1
	6	3-93742-3002	. . STOP, DOWN POSITION FLAP.		1
R	7	5-87851-3113A	. FLAP ASSY, OUTBOARD (LH ONLY)	5199	1
R	7	5-87851-3113	. FLAP ASSY, OUTBOARD (LH ONLY)	0150	1
R	7	5-87851-3114A	. FLAP ASSY, OUTBOARD (RH ONLY)	5199	1
R	7	5-87851-3114	. FLAP ASSY, OUTBOARD (RH ONLY)	0150	1
	8	66-10962-1	. . PATCH, FLAP RUB		3
	9	5-88723-3009	. . PANEL ASSY, OUTBOARD FLAP SKIN LOWER FORWARD. . . . OUTBOARD HALF HONEYCOMB (USED ON 5-87851-3113, -3125, -3127)		1
	9	5-88723-3010	. . PANEL ASSY, OUTBOARD FLAP SKIN LOWER FORWARD. . . . OUTBOARD HALF HONEYCOMB (USED ON 5-87851-3114, -3126, -3128)		1
	10	5-88722-3009	. . PANEL ASSY, OUTBOARD FLAP SKIN LOWER FORWARD. . . . INBOARD HALF HONEYCOMB (USED ON 5-87851-3113, -3125, -3127)		1
	10	5-88722-3010	. . PANEL ASSY, OUTBOARD FLAP SKIN LOWER FORWARD. . . . INBOARD HALF HONEYCOMB (USED ON 5-87851-3114, -3126, -3128)		1
	11	50-4671-3017	. . PANEL ASSY, OUTBOARD FLAP LOWER OUTBOARD HALF . . . HONEYCOMB SKIN (USED ON 5-87851-3113, -3125, -3127)		1
	11	50-4671-3018	. . PANEL ASSY, OUTBOARD FLAP LOWER OUTBOARD HALF . . . HONEYCOMB SKIN (USED ON 5-87851-3114, 3126, -3128)		1
	12	50-4671-3019	. . PANEL ASSY, OUTBOARD FLAP UPPER OUTBOARD HALF . . . HONEYCOMB SKIN (USED ON 5-87851-3113, -3125, -3127)		1
	12	50-4671-3020	. . PANEL ASSY, OUTBOARD FLAP UPPER OUTBOARD HALF . . . HONEYCOMB SKIN (USED ON 5-87851-3114, -3126, -3128)		1
	13	50-4670-3017	. . PANEL ASSY, OUTBOARD FLAP LOWER INBOARD HALF. . . . HONEYCOMB SKIN (USED ON 5-87851-3113, -3125, -3127)		1
	13	50-4670-3018	. . PANEL ASSY, OUTBOARD FLAP LOWER INBOARD HALF. . . . HONEYCOMB SKIN (USED ON 5-87851-3108, -3114, -3126, -3128)		1
	14	50-4670-3019	. . PANEL ASSY, OUTBOARD FLAP UPPER INBOARD HALF. . . . HONEYCOMB SKIN (USED ON 5-87851-3107, -3113, -3125, -3127)		1
	14	50-4670-3020	. . PANEL ASSY, OUTBOARD FLAP UPPER INBOARD HALF. . . . HONEYCOMB SKIN (USED ON 5-87851-3107, -3114, -3126, -3128)		1
		5-88107-3003	. . RIB INSTL, OUTBOARD FLAP OUTBOARD ACTUATOR (LH. . . ONLY)		1
		5-88107-3004	. . RIB INSTL, OUTBOARD FLAP OUTBOARD ACTUATOR (RH. . . ONLY)		1
	15	9-61951-3003	. . . FITTING ASSY, FLAP SCREW SUPPORT.		1
	16	NAS516-1	. . . . FITTING		2
	17	AN4-10A	. . . . BOLT.		2
	18	63-1519-3000	. . . . NUTPLATE ASSY, WINGS FLAPS CONVEX		2
	19	3-98762	. . . . BEARING, FLAP SCREW SUPPORT		2
	20	9-61951-2007	. . . . FITTING, FLAP SCREW SUPPORT		1
	21	65-7360-3127	. . FLAP ASSY, FORE (USED ON 5-87851-3113, -3125, . . . -3127)		1
	21	65-7360-3128	. . FLAP ASSY, FORE (USED ON 5-87851-3114, -3126, . . . -3128)		1
			ATTACHING PARTS		
		AN4-10A	. . BOLT.		8
		BACS40B12-34	. . SHIM.		AR
		BACS40B12-40	. . SHIM.		AR
		AN960D416	. . WASHER.		8
		AN960PD416L	. . WASHER.		AR
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
3 22	BACN12M30-1CD	. . . NAMEPLATE		1
		ATTACHING PARTS		
	BACR15E157C5-4	. . . RIVET		2
		-------*-------		
22A	69-1159-3015	. . . FLAP ASSY, CENTER END RIB (LH ONLY)		1
22A	69-1159-3016	. . . FLAP ASSY, CENTER END RIB (RH ONLY)		1
22B	69-24914-1	. . . . DOUBLER		1
22C	69-24914-2	. . . . DOUBLER		1
	65-23320-1	. . . DAMPER INSTL, FORE FLAP INERTIA (LH ONLY)		1
	65-23320-2	. . . DAMPER INSTL, FORE FLAP INERTIA (RH ONLY)		1
23	69-16934-1	. . . . DAMPER ASSY (OPTIONAL TO 69-16934-7)		1
23	69-16934-7	. . . . DAMPER ASSY (OPTIONAL 69-16934-1)		1
		ATTACHING PARTS		
	BACR15CE6D	. . . . RIVET		16
		-------*-------		
24	65-7360-3129	. . FLAP ASSY, FORE (USED ON 5-87851-3113, -3125, -3127)		1
24	65-7360-3130	. . FLAP ASSY, FORE (USED ON 5-87851-3114, -3126, -3128)		1
		ATTACHING PARTS		
	AN4-10A	. . BOLT.		8
	BACS40B12-34	. . SHIM.		AR
	BACS40B12-40	. . SHIM.		AR
	AN960D416	. . WASHER.		8
	AN960PD416L	. . WASHER.		AR
		-------*-------		
25	BACN12M30-1CD	. . . NAMEPLATE		1
		ATTACHING PARTS		
	BACR15E157C5-4	. . . RIVET		2
		-------*-------		
25A	69-1159-3016	. . . FLAP ASSY, CENTER END RIB (LH ONLY)		1
25A	69-1159-3015	. . . FLAP ASSY, CENTER END RIB (RH ONLY)		1
25B	69-24914-1	. . . . DOUBLER		1
25C	69-24914-2	. . . . DOUBLER		1
	65-23320-1	. . . DAMPER INSTL, FORE FLAP INERTIA (LH ONLY)		1
	65-23320-2	. . . DAMPER INSTL, FORE FLAP INERTIA (RH ONLY)		1
26	69-16934-1	. . . . DAMPER ASSY (OPTIONAL TO 69-16934-7)		1
26	69-16934-7	. . . . DAMPER ASSY (OPTIONAL 69-16934-1)		1
		ATTACHING PARTS		
	BACR15CE6D	. . . . RIVET		16
		-------*-------		
27	65-7360-3009	. . FLAP ASSY, FORE (LH ONLY)		1
27	65-7360-3010	. . FLAP ASSY, FORE (RH ONLY)		1
		ATTACHING PARTS		
	AN4-10A	. . BOLT.		4
	NAS1104-3W	. . BOLT.		2
	BACS40B12-34	. . SHIM.		AR
	BACS40B12-40	. . SHIM.		AR
	AN960D416	. . WASHER.		6
	AN960PD416L	. . WASHER.		AR
	NAS679A4W	. . NUT		2
		-------*-------		
28	65-18412-1	. . FAIRING, FLAP CARRIAGE (LH ONLY).		3
28	65-18412-2	. . FAIRING, FLAP CARRIAGE (RH ONLY).		3
		ATTACHING PARTS		
	NAS517-3-4	. . SCREW		3
	NAS517-4-14	. . SCREW		6
	NAS517-4-16	. . SCREW		9
		-------*-------		
	5-87852-3089	. . RIB INSTL, OUTBOARD FLAP OUTBOARD TRACK (USED ON 5-87851-3113, -3125, -3127)		1
	5-87852-3090	. . RIB INSTL, OUTBOARD FLAP OUTBOARD TRACK (USED ON 5-87851-3114, -3126, -3128)		1
29	NAS603-10	. . . SCREW		3
30	AN960D10L	. . . WASHER.		3
31	65-28928-13	. . . BLOCK, OUTBOARD FLAP SEAL PHENOLIC (LH ONLY).		1
31	65-28928-14	. . . BLOCK, OUTBOARD FLAP SEAL PHENOLIC (RH ONLY).		1
32	65-28784-13	. . . SEAL ASSY, COVE LIP DOOR FLAP (LH ONLY)		1
32	65-28784-14	. . . SEAL ASSY, COVE LIP DOOR FLAP (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	3 33	65-28784-20	. . . . SEAL, COVE LIP DOOR FLAP (EXTRUSION NO. . . . . BAC1530-2 X 7.00 IN. LG (OPTIONAL EXTRUSION NO. BAC1530-7 X 7.00 IN. LG))		1
			ATTACHING PARTS		
		MS20426B3	. . . . RIVET		5
			-------*-------		
	34	65-28784-26	. . . . RETAINER, COVE LIP DOOR FLAP SEAL		1
	35	65-28784-39	. . . . SUPPORT, COVE LIP DOOR FLAP SEAL (LH ONLY). . .		1
	35	65-28784-40	. . . . SUPPORT, COVE LIP DOOR FLAP SEAL (RH ONLY). . .		1
R	36	65-18437-33	. . . CARRIAGE ASSY, FLAP OUTBOARD END (USED ON . . . . 5-87852-3089) (SEE FIG. 6)	0150	1
R			(OPTIONAL TO 65-18437-39)		
R	36	65-18437-39	. . . CARRIAGE ASSY, FLAP OUTBOARD END (USED ON . . . . 5-87852-3089) (SEE FIG. 6)	0150	1
R			(OPTIONAL 65-18437-33)		
R	36	65-18437-39	. . . CARRIAGE ASSY, FLAP OUTBOARD END (USED ON . . . . 5-87852-3089) (SEE FIG. 6)	5199	1
R	36	65-18437-34	. . . CARRIAGE ASSY, FLAP OUTBOARD END (USED ON . . . . 5-87852-3090) (SEE FIG. 6)	0150	1
R			(OPTIONAL TO 65-18437-40)		
R	36	65-18437-40	. . . CARRIAGE ASSY, FLAP OUTBOARD END (USED ON . . . . 5-87852-3090) (SEE FIG. 6)	0150	1
R			(OPTIONAL 65-18437-34)		
R	36	65-18437-40	. . . CARRIAGE ASSY, FLAP OUTBOARD END (USED ON . . . . 5-87852-3090) (SEE FIG. 6)	5199	1
			ATTACHING PARTS		
	37	NAS1104-8W	. . . BOLT.		6
	38	NAS1104-6W	. . . BOLT.		15
	40	NAS1104-9W	. . . BOLT.		3
	41	NAS517-4-6	. . . SCREW		6
	43	NAS1104-6W	. . . BOLT.		17
	44	NAS1104-7W	. . . BOLT.		3
	46	AN960D416	. . . WASHER.		50
	47	BACN10BY54W	. . . NUT		50
			-------*-------		
	48	69-9337-1	. . CAM ASSY, STATION 680.07 OUTBOARD FLAP.		1
		5-87855-3013	. . RIB INSTL, OUTBOARD FLAP CENTER TRACK . . . . . (USED ON 5-87851-3113, -3125, -3127)		1
		5-87855-3014	. . RIB INSTL, OUTBOARD FLAP CENTER TRACK . . . . . (USED ON 5-87851-3114, -3126, -3128)		1
	49	NAS603-8	. . . SCREW		5
	50	AN960D10	. . . WASHER.		5
	51	65-28928-7	. . . BLOCK, OUTBOARD FLAP SEAL PHENOLIC (LH ONLY). . .		1
	51	65-28928-8	. . . BLOCK, OUTBOARD FLAP SEAL PHENOLIC (RH ONLY). . .		1
	52	65-28784-7	. . . SEAL ASSY, COVE LIP DOOR FLAP (LH ONLY)		1
	52	65-28784-8	. . . SEAL ASSY, COVE LIP DOOR FLAP (RH ONLY)		1
	53	65-28784-18	. . . . SEAL, COVE LIP DOOR FLAP (EXTRUSION NO. . . . . BAC1530-2 X 7.60 IN. LG (OPTIONAL EXTRUSION NO. BAC1530-7 X 7.60 IN. LG))		1
			ATTACHING PARTS		
		MS20426B3	. . . . RIVET		6
			-------*-------		
	54	65-28784-24	. . . . RETAINER, COVE LIP DOOR FLAP SEAL		1
	55	65-28784-33	. . . . SUPPORT, COVE LIP DOOR FLAP SEAL (LH ONLY). . .		1
	55	65-28784-34	. . . . SUPPORT, COVE LIP DOOR FLAP SEAL (RH ONLY). . .		1
R	56	65-18438-25	. . . CARRIAGE ASSY, FLAP CENTER (USED ON 5-87855-3013) (SEE FIG. 10)	0150	1
R	56	65-18438-29	. . . CARRIAGE ASSY, FLAP CENTER (USED ON 5-87855-3013) (SEE FIG. 10)	5199	1
R	56	65-18438-26	. . . CARRIAGE ASSY, FLAP CENTER (USED ON 5-87855-3014) (SEE FIG. 10)	0150	1
R	56	65-18438-30	. . . CARRIAGE ASSY, FLAP CENTER (USED ON 5-87855-3014) (SEE FIG. 10)	5199	1
			ATTACHING PARTS		
	57	NAS1104-6W	. . . BOLT.		20
	58	NAS1104-7W	. . . BOLT.		16
	59	NAS1105-8W	. . . BOLT.		4
	60	NAS1103-6W	. . . BOLT.		2
	61	NAS517-4-6	. . . SCREW		6
	62	AN960D416	. . . WASHER.		26
	63	AN960D416L	. . . WASHER.		20
	64	AN960D10	. . . WASHER.		2
	65	AN960D516	. . . WASHER.		4
	66	BACN10BY54W	. . . NUT		42

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3 67	BACN10BY53W	. . . NUT		2
68	BACN10BY55	. . . NUT		4
		--------*--------		
69	69-9609-3	. . CAM ASSY, STATION 549.99 OUTBOARD FLAP (LH ONLY). .		1
69	69-9609-4	. . CAM ASSY, STATION 549.99 OUTBOARD FLAP (RH ONLY). .		1
70	5-87841-3049	. . RIB INSTL, OUTBOARD FLAP INBOARD ACTUATOR AND TRACK (USED ON 5-87851-3113) (SEE FIG. 7)		1
70	5-87841-3050	. . RIB INSTL, OUTBOARD FLAP INBOARD ACTUATOR AND TRACK (USED ON 5-87851-3114) (SEE FIG. 7)		1
	90-4577-3023	. . TRAILING EDGE INSTL, OUTBOARD FLAP (LH ONLY). . . . (USED ON 5-87851-3113)		1
	90-4577-3024	. . TRAILING EDGE INSTL, OUTBOARD FLAP (RH ONLY). . . . (USED ON 5-87851-3114)		1
71	90-4577-3029	. . . TRAILING EDGE ASSY, OUTBOARD FLAP (LH ONLY) . . .		1
71	90-4577-3030	. . . TRAILING EDGE ASSY, OUTBOARD FLAP (RH ONLY) . . .		1
		ATTACHING PARTS		
	NAS517-3-4	. . . SCREW		AR
		--------*--------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

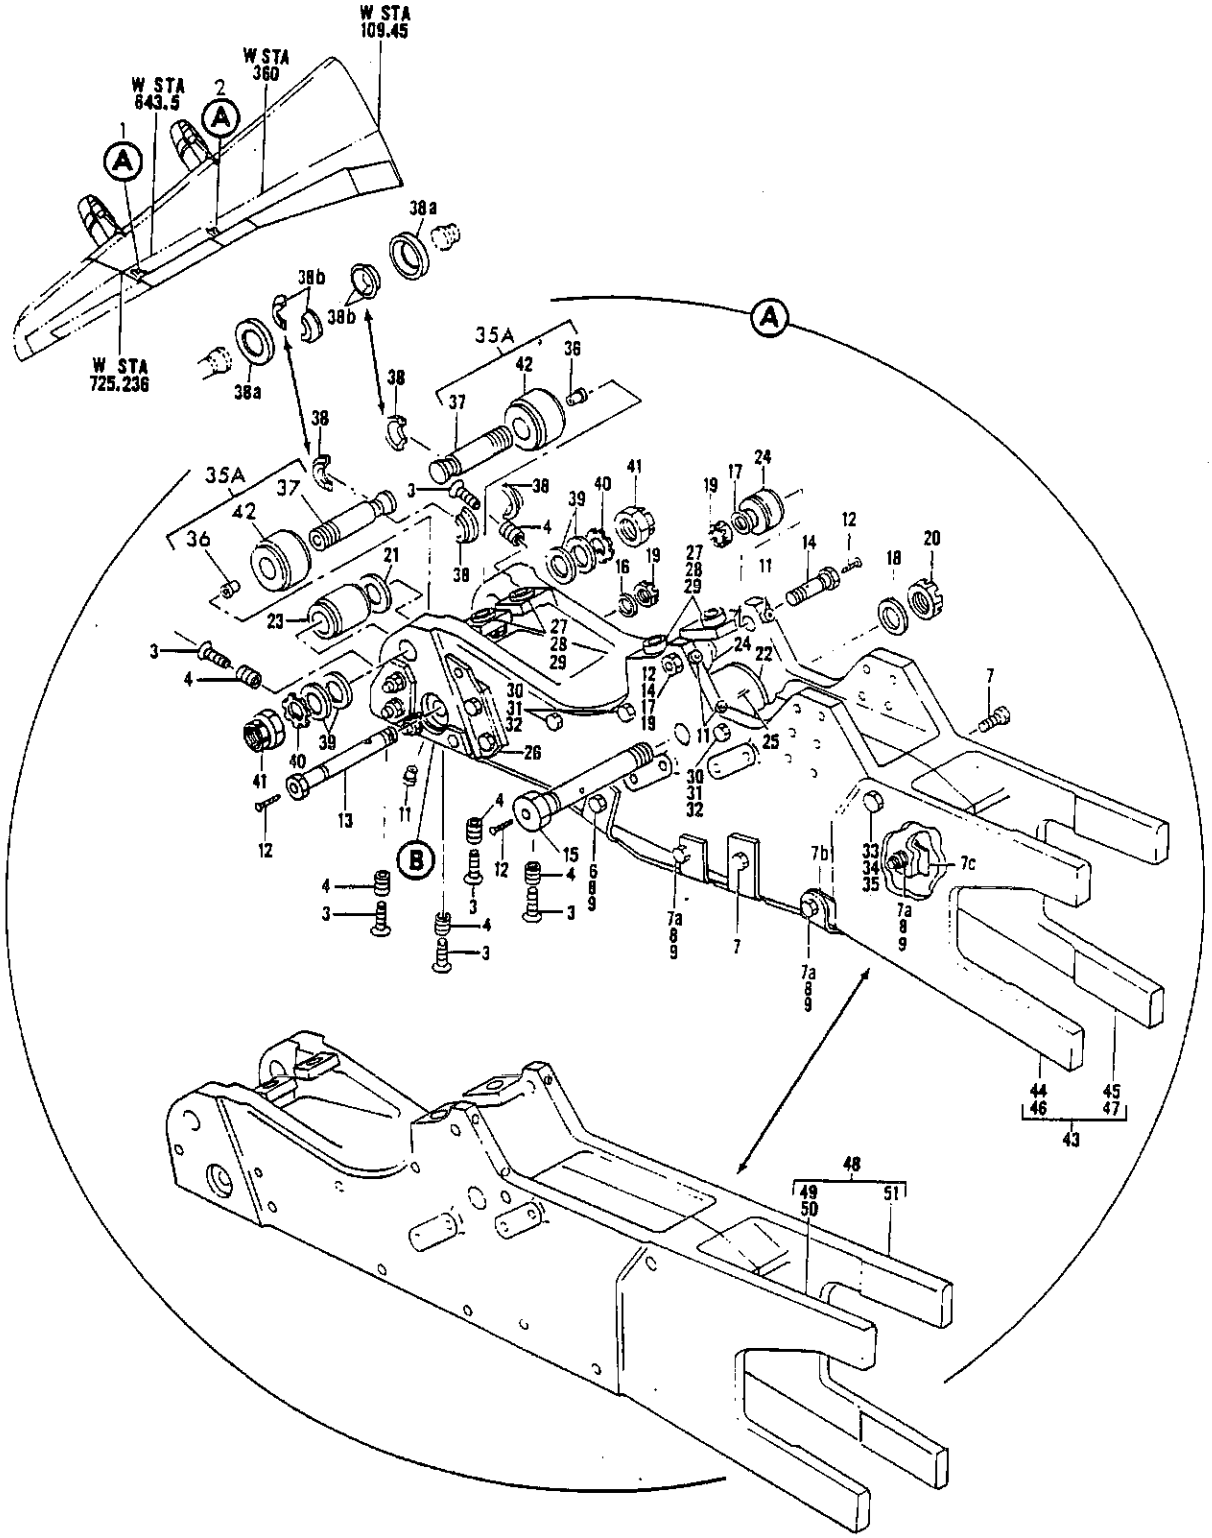


FIGURE 6. CARRIAGE ASSY, OUTBOARD FLAP END (SHEET 1)

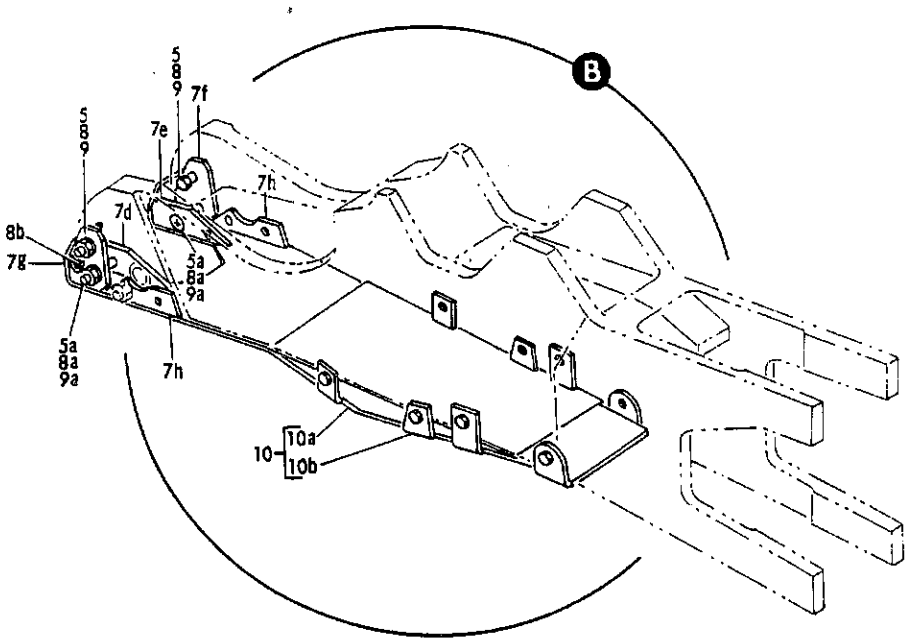


FIGURE 6. CARRIAGE ASSY, OUTBOARD FLAP END (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
RRR	6 1	65-18437-33	CARRIAGE ASSY, OUTBOARD FLAP OUTBOARD END (LH) (SEE FIG. 3, ITEM 36) (OPTIONAL TO 65-18437-39)	0150	RF
RRR	1	65-18437-39	CARRIAGE ASSY, OUTBOARD FLAP OUTBOARD END (LH) (SEE FIG. 3, ITEM 36) (OPTIONAL 65-18437-33)	0150	RF
RRR	1	65-18437-39	CARRIAGE ASSY, OUTBOARD FLAP OUTBOARD END (LH) (SEE FIG. 3, ITEM 36)	5199	RF
RRR	1	65-18437-34	CARRIAGE ASSY, OUTBOARD FLAP OUTBOARD END (RH) (SEE FIG. 3, ITEM 36) (OPTIONAL TO 65-18437-40)	0150	RF
RRR	1	65-18437-40	CARRIAGE ASSY, OUTBOARD FLAP OUTBOARD END (RH) (SEE FIG. 3, ITEM 36) (OPTIONAL 65-18437-34)	0150	RF
RRR	1	65-18437-40	CARRIAGE ASSY, OUTBOARD FLAP OUTBOARD END (RH) (SEE FIG. 3, ITEM 36)	5199	RF
RRR	2	65-18437-41	CARRIAGE ASSY, OUTBOARD FLAP INBOARD END (LH) (SEE. FIG. 7, ITEM 15) (OPTIONAL 65-18437-35)	0150	RF
RRR	2	65-18437-35	CARRIAGE ASSY, OUTBOARD FLAP INBOARD END (LH) (SEE. FIG. 7, ITEM 15) (OPTIONAL TO 65-18437-41)	0150	RF
RRR	2	65-18437-41	CARRIAGE ASSY, OUTBOARD FLAP INBOARD END (LH) (SEE. FIG. 7, ITEM 15)	5199	RF
RRR	2	65-18437-36	CARRIAGE ASSY, OUTBOARD FLAP INBOARD END (RH) (SEE. FIG. 7, ITEM 15) (OPTIONAL TO 65-18437-42)	0150	RF
RRR	2	65-18437-42	CARRIAGE ASSY, OUTBOARD FLAP INBOARD END (RH) (SEE. FIG. 7, ITEM 15) (OPTIONAL 65-18437-36)	0150	RF
RRR	2	65-18437-42	CARRIAGE ASSY, OUTBOARD FLAP INBOARD END (RH) (SEE. FIG. 7, ITEM 15)	5199	RF
	3	NAS514P1032-8	. SCREW		6
	4	BACS13W3CN4	. SLEEVE.		6
	5	AN4-6A	. BOLT.		2
	5A	NAS517-3-12	. SCREW		2
	6	AN4-37A	. BOLT.		1
	7	AN4-5A	. BOLT.		2
	7A	AN4-36A	. BOLT.		2
	7B	65-18437-8	. FILLER, OUTBOARD FLAP END CARRIAGE.		1
	7C	65-18437-9	. FILLER, OUTBOARD FLAP END CARRIAGE.		1
	7D	66-16710-501	. FILLER, OUTBOARD FLAP CARRIAGE RUB STRIP.		1
	7E	66-16710-502	. FILLER, OUTBOARD FLAP CARRIAGE RUB STRIP.		1
	7F	69-21638-1	. FITTING, OUTBOARD FLAP CARRIAGE RUB STRIP SUPPORT		1
	7G	69-21638-2	. FITTING, OUTBOARD FLAP CARRIAGE RUB STRIP SUPPORT		1
	7H	66-16710-4	. FILLER, OUTBOARD FLAP CARRIAGE RUB STRIP.		2
	8	AN960D416L	. WASHER.		5
	8A	AN960D10	. WASHER.		2
	8B	65-18438-14	. SHIM, CENTER FLAP CARRIAGE LAMINATED (ALTERED FROM BACS40A15-17)		1
	9	NAS679A4W	. NUT		5
	9A	NAS679A3W	. NUT		2
	10	65-18437-37	. STRIP ASSY, RUB (USED ON 65-18437-33, -34, -35, -36, -39, -40, -41 AND -42)		1
	10A	69-28789-2	. . CAM, FLAP CARRIAGE (USED ON 65-18437-31 AND -37).		1
	10B	69-29106-2	. . STRIP, (USED ON 65-18437-37).		1
	11	NAS516-1	. FITTING		4
	12	MS21318-15	. SCREW		4
	13	6-83543-5	. BOLT, FLAP CARRIAGE SPECIAL		1
	14	6-83543-3	. BOLT, FLAP CARRIAGE SPECIAL		2
	15	6-83542-1	. BOLT, FLAP CARRIAGE SPECIAL		1
	16	AN960D616L	. WASHER.		1
	17	AN960-616	. WASHER.		2
	18	AN960D1016L	. WASHER.		1
	19	AN320-6	. NUT		3
	20	AN320-10	. NUT		1
	21	63-1566-1	. WASHER, FLAP END CARRIAGE		AR
	22	63-1566	. WASHER, FLAP END CARRIAGE		AR
	23	BACB10B137	. BEARING		1
	24	BACB10B132	. BEARING		2
	25	BACB10B139	. BEARING		1
	26	69-15924-7	. FILLER ASSY, OUTBOARD FLAP CARRIAGE (LH ONLY)		1
	26	69-15924-8	. FILLER ASSY, OUTBOARD FLAP CARRIAGE (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
6		ATTACHING PARTS		
	NAS1105-56W	. BOLT.		1
	AN4-37A	. BOLT.		1
	AN960D516	. WASHER.		1
	AN960D416L	. WASHER.		1
	NAS679A5	. NUT		1
	NAS679A4W	. NUT		1
		-------*-------		
27	AN310-5	. NUT		4
28	AN960D516	. WASHER.		4
29	BACB10BH59CF6	. BEARING UNIT.		4
30	AN4-35A	. BOLT.		3
31	AN960D416L	. WASHER.		3
32	NAS679A4W	. NUT		3
33	NAS1106-54W	. BOLT.		1
34	AN960D616	. WASHER.		1
35	NAS679A6	. NUT		1
	66-12456-6	. BOLT ASSY, FLAP CARRIAGE BEARING.		2
36	NAS516-1	. . FITTING		1
37	66-12456-8	. . BOLT, FLAP CARRIAGE BEARING		1
	6-83545-1	. WASHER ASSY, FLAP ROLLER SPLIT (OPTIONALS 6-83545,. . 69-26972-1 WITH 69-26972-3)		2
38	6-83545-2	. . WASHER, FLAP ROLLER SPLIT HALF (MATCHED PAIR)		2
38	6-83545	. WASHER, FLAP ROLLER SPLIT (OPTIONALS 6-83545-1, 69-26972-1 WITH 69-26972-3)		4
38A	69-26972-3	. WASHER, FLAP ROLLER (USED WITH 69-26972-1).		2
	69-26972-1	. WASHER ASSY, FLAP ROLLER SPLIT (USED WITH 69-26972-3) (OPTIONALS 6-83545, 6-83545-1)		2
38B	69-26972-2	. . WASHER, FLAP ROLLER SPLIT HALF (MATCHED PAIR)		2
39	AN960PD1016	. WASHER.		4
40	NAS460-1016	. WASHER.		2
41	NAS1022A10	. NUT		2
42	BACB10B134	. BEARING		2
43	65-3279-3057	. CARRIAGE ASSY, (USED ON 65-18437-27 AND -33).		1
43	65-3279-3097	. CARRIAGE ASSY, (USED ON 65-18437-39).		1
43	65-3279-3058	. CARRIAGE ASSY, (USED ON 65-18437-28 AND -34).		1
43	65-3279-3098	. CARRIAGE ASSY, (USED ON 65-18437-40).		1
44	65-3279-3071	. . CARRIAGE ASSY, FLAP END HALF (USED ON 65-3279-3057)		1
44	65-3279-3072	. . CARRIAGE ASSY, FLAP END HALF (USED ON 65-3279-3058)		1
44	65-3279-3111	. . CARRIAGE ASSY, HALF (USED ON 65-3279-3097).		1
44	65-3279-3112	. . CARRIAGE ASSY, HALF (USED ON 65-3279-3098).		1
45	65-3279-3074	. . CARRIAGE ASSY, FLAP END HALF (USED ON 65-3279-3057)		1
45	65-3279-3073	. . CARRIAGE ASSY, FLAP END HALF (USED ON 65-3279-3058)		1
45	65-3279-3114	. . CARRIAGE ASSY, HALF (USED ON 65-3279-3097).		1
45	65-3279-3113	. . CARRIAGE ASSY, HALF (USED ON 65-3279-3098).		1
46	65-3279-3081	. . . CARRIAGE, FLAP END HALF (MATCHED PART, ORDER ONLY WITH 65-3279-3084) (USED ON 65-3279-3071)		1
46	65-3279-3082	. . . CARRIAGE, (MATCHED PART, ORDER ONLY WITH. 65-3279-3083) (USED ON 65-3279-3072)		1
46	65-3279-3121	. . . CARRIAGE, (MATCHED PART, ORDER ONLY WITH. 65-3279-3124) (USED ON 65-3279-3111)		1
46	65-3279-3122	. . . CARRIAGE, (MATCHED PART, ORDER ONLY WITH. 65-3279-3123) (USED ON 65-3279-3112)		1
47	65-3279-3084	. . . CARRIAGE, FLAP END HALF (MATCHED PART, ORDER ONLY WITH 65-3279-3081) (USED ON 65-3279-3074)		1
47	65-3279-3083	. . . CARRIAGE, FLAP END HALF (MATCHED PART, ORDER ONLY WITH 65-3279-3082) (USED ON 65-3279-3073)		1
47	65-3279-3124	. . . CARRIAGE, (MATCHED PART, ORDER ONLY WITH. 65-3279-3121) (USED ON 65-3279-3114)		1
47	65-3279-3123	. . . CARRIAGE, (MATCHED PART, ORDER ONLY WITH. 65-3279-3122) (USED ON 65-3279-3113)		1
48	65-3279-3059	. CARRIAGE ASSY, (USED ON 65-18437-29 AND -35).		1
48	65-3279-3060	. CARRIAGE ASSY, (USED ON 65-18437-30 AND -36).		1
48	65-3279-3099	. CARRIAGE ASSY, (USED ON 65-18437-41).		1
48	65-3279-3100	. CARRIAGE ASSY, (USED ON 65-18437-42).		1
49	65-3279-3077	. . CARRIAGE ASSY, FLAP END HALF (USED ON 65-3279-3059)		1
49	65-3279-3078	. . CARRIAGE ASSY, FLAP END HALF (USED ON 65-3279-3060)		1
49	65-3279-3117	. . CARRIAGE ASSY, HALF (USED ON 65-3279-3099).		1
49	65-3279-3118	. . CARRIAGE ASSY, HALF (USED ON 65-3279-3100).		1
50	65-3279-3085	. . . CARRIAGE, FLAP END HALF (MATCHED PART, ORDER ONLY WITH 65-3279-3076) (USED ON 65-3279-3077)		1
50	65-3279-3086	. . . CARRIAGE, FLAP END HALF (MATCHED PART, ORDER ONLY WITH 65-3279-3075) (USED ON 65-3279-3078)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
6 50	65-3279-3125	. . . CARRIAGE, (MATCHED PART, ORDER ONLY . . . . . WITH 65-3279-3116) (USED ON 65-3279-3117)		1
50	65-3279-3126	. . . CARRIAGE, (MATCHED PART, ORDER ONLY . . . . . WITH 65-3279-3115) (USED ON 65-3279-3118)		1
51	65-3279-3076	. . CARRIAGE, FLAP END HALF (MATCHED PART, ORDER ONLY . WITH 65-3279-3085) (USED ON 65-3279-3059)		1
51	65-3279-3075	. . CARRIAGE, FLAP END HALF (MATCHED PART, ORDER ONLY . WITH 65-3279-3086) (USED ON 65-3279-3060)		1
51	65-3279-3116	. . CARRIAGE, HALF (MATCHED PART, ORDER ONLY WITH . . . 65-3279-3125) (USED ON 65-3279-3099)		1
51	65-3279-3115	. . CARRIAGE, HALF (MATCHED PART, ORDER ONLY WITH . . . 65-3279-3126) (USED ON 65-3279-3100)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

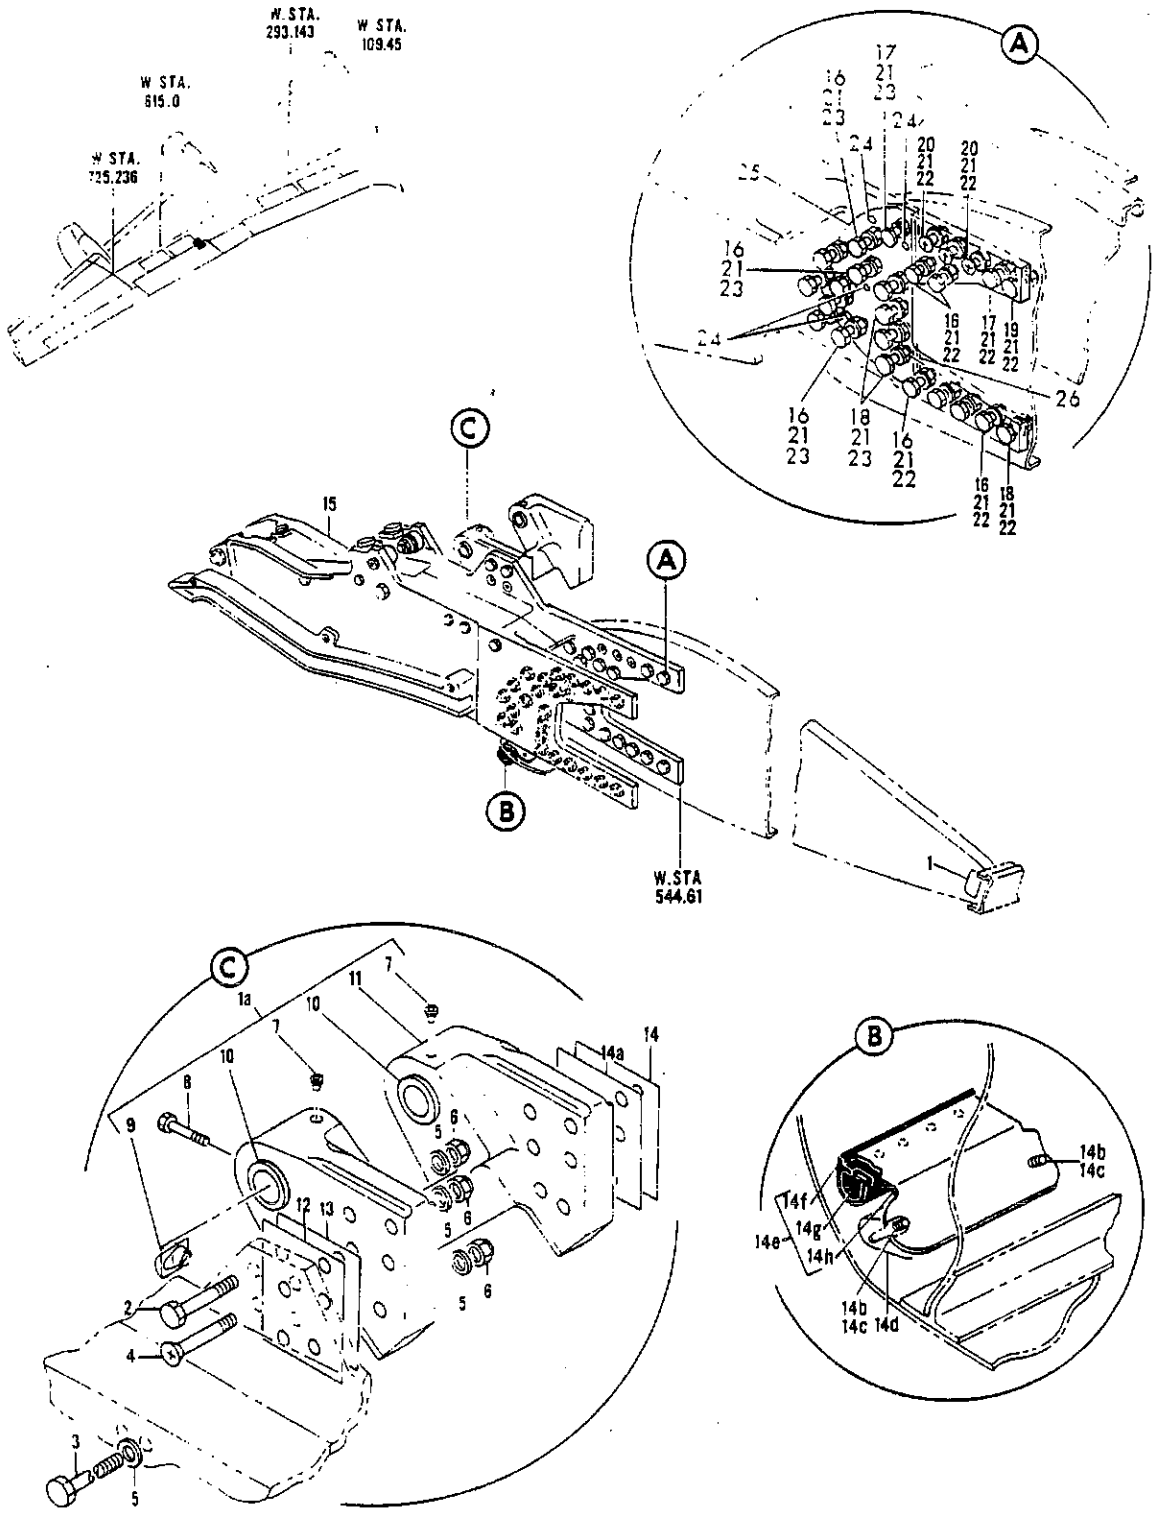


FIGURE 7. RIB INSTL, OUTBOARD FLAP INBOARD ACTUATOR AND TRACK

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
7	5-87841-3049	RIB INSTL, OUTBOARD FLAP INBOARD ACTUATOR AND TRACK . . (LH) (USED ON PREFERRED FLAP REPLACEMENT 5-87851-3113 (SEE FIG. 3)) (SEE FIG. 3, ITEM 70)		RF
	5-87841-3050	RIB INSTL, OUTBOARD FLAP INBOARD ACTUATOR AND TRACK . . (RH) (USED ON PREFERRED FLAP REPLACEMENT 5-87851-3114 (SEE FIG. 3)) (SEE FIG. 3, ITEM 70)		RF
1	AN7510-1	. PLATE		1
1A	9-61951-3005	. FITTING ASSY, FLAP SCREW SUPPORT. . . . . ATTACHING PARTS		1
2	NAS1104-18W	. BOLT.		2
3	NAS1104-65W	. BOLT.		2
4	NAS517-4-18	. SCREW		2
5	AN960D416	. WASHER.		8
6	NAS679A4W	. NUT . . . . . -------*-------		6
7	NAS516-1	. . FITTING		2
8	AN4-10A	. . BOLT.		2
9	63-1519-3000	. . NUTPLATE ASSY, WING FLAPS CONVEX.		2
10	3-98762	. . BEARING, FLAP SCREW SUPPORT		2
11	9-61951-2012	. . FITTING, FLAP SCREW SUPPORT		1
12	5-87841-2130	. FILLER, OUTBOARD FLAP INBOARD ACTUATOR AND TRACK RIB		AR
13	5-87841-131	. SHIM, OUTBOARD FLAP INBOARD ACTUATOR AND TRACK RIB. .		AR
14	5-87841-2128	. FILLER, OUTBOARD FLAP INBOARD ACTUATOR AND TRACK RIB		AR
14A	5-87841-129	. SHIM, OUTBOARD FLAP INBOARD ACTUATOR AND TRACK RIB. .		AR
14B	NAS603-8	. SCREW		2
14C	AN960D10L	. WASHER.		2
14D	65-28928-11	. BLOCK, OUTBOARD FLAP SEAL PHENOLIC (LH ONLY). . . .		1
14D	65-28928-12	. BLOCK, OUTBOARD FLAP SEAL PHENOLIC (RH ONLY). . . .		1
14E	65-28784-11	. SEAL ASSY, COVE LIP DOOR FLAP (LH ONLY)		1
14E	65-28784-12	. SEAL ASSY, COVE LIP DOOR FLAP (RH ONLY)		1
14F	65-28784-19	. . SEAL, COVE LIP DOOR FLAP (EXTRUSION NO. BAC1530-2 . (OPTIONAL EXTRUSION NO. BAC1530-7 X 3.30 IN. LG)		1
14G	65-28784-25	. . RETAINER, COVE LIP DOOR FLAP SEAL		1
14H	65-28784-37	. . SUPPORT, COVE LIP DOOR FLAP SEAL SUPPORT (LH ONLY)		1
14H	65-28784-38	. . SUPPORT, COVE LIP DOOR FLAP SEAL SUPPORT (RH ONLY)		1
R 15	65-18437-35	. CARRIAGE ASSY, END (USED ON 5-87841-3049) (SEE FIG. . 6) (OPTIONAL TO 65-18437-41)	0150	1
R 15	65-18437-41	. CARRIAGE ASSY, END (USED ON 5-87841-3049) (SEE FIG. . 6) (OPTIONAL 65-18437-35)	0150	1
R 15	65-18437-41	. CARRIAGE ASSY, END (USED ON 5-87841-3049) (SEE FIG. . 6)	5199	1
R 15	65-18437-36	. CARRIAGE ASSY, END (USED ON 5-87841-3050) (SEE FIG. . 6) (OPTIONAL TO 65-18437-42)	0150	1
R 15	65-18437-42	. CARRIAGE ASSY, END (USED ON 5-87841-3050) (SEE FIG. . 6) (OPTIONAL 65-18437-36)	0150	1
R 15	65-18437-42	. CARRIAGE ASSY, END (USED ON 5-87841-3050) (SEE FIG. . 6) ATTACHING PARTS	5199	1
16	NAS1104-6W	. BOLT.		14
17	NAS1104-7W	. BOLT.		2
18	NAS1104-8W	. BOLT.		5
19	NAS1104-9W	. BOLT.		1
20	NAS517-4-6	. SCREW		3
21	AN960D416	. WASHER.		25
22	NAS679A4W	. NUT . . . . . -------*-------		12

MISSING ITEM NUMBERS ARE NOT APPLICABLE

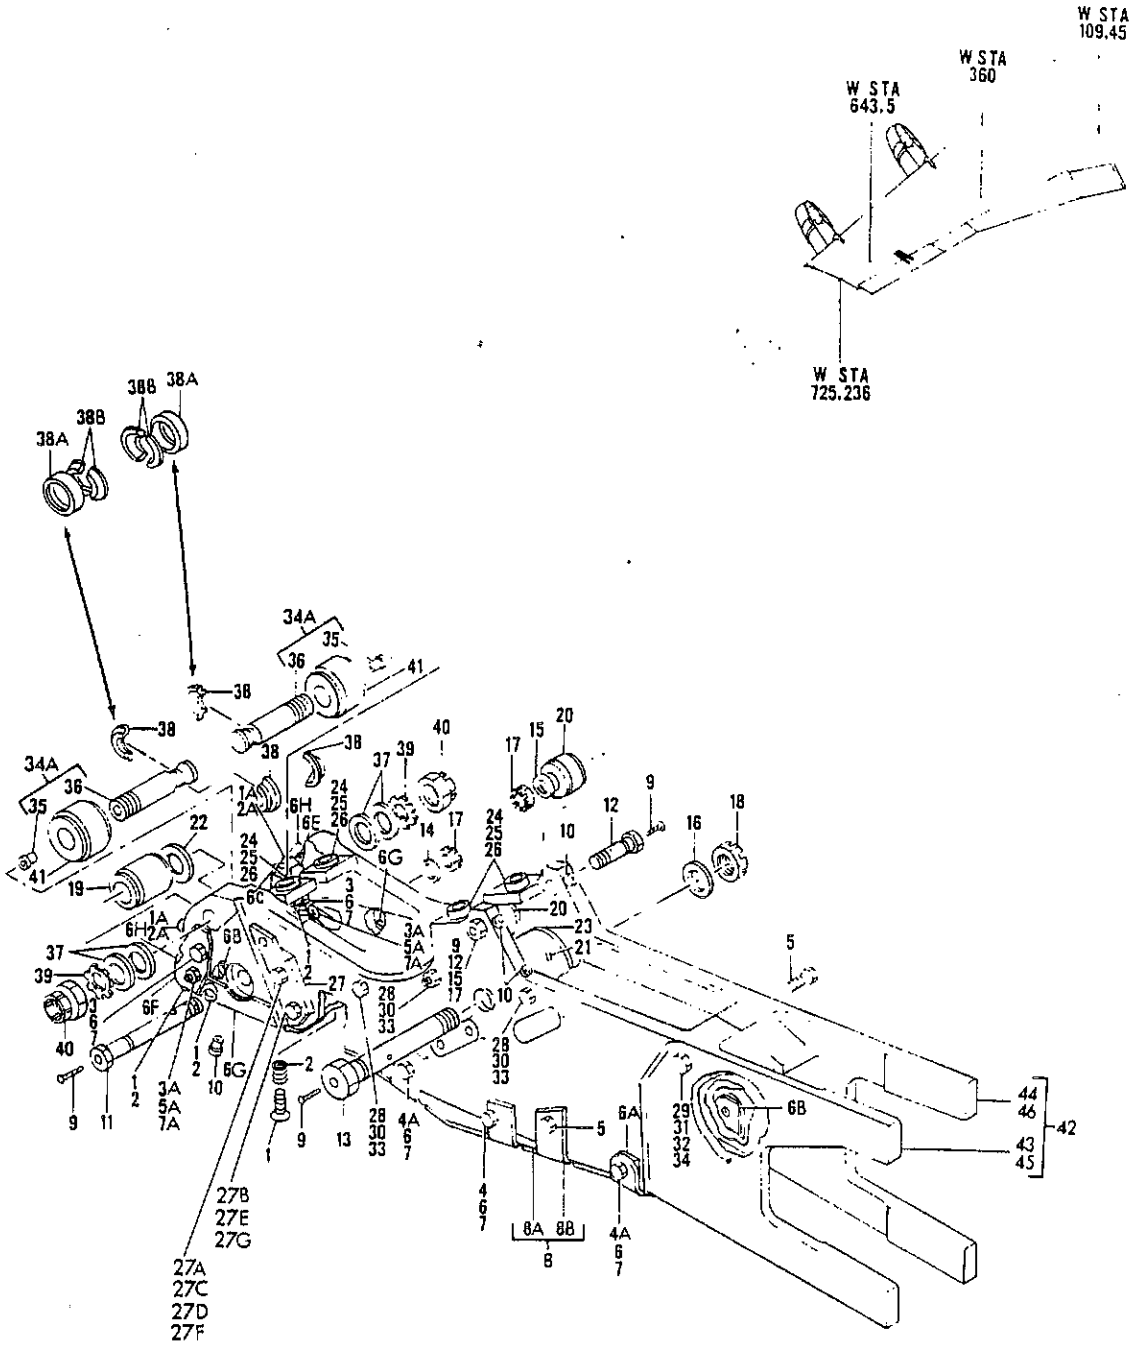


FIGURE 10. CARRIAGE ASSY. OUTBOARD FLAP CENTER

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R R R R R	10	65-18438-25	CARRIAGE ASSY, OUTBOARD FLAP CENTER (LH) (USED ON . . . PREFERRED FLAP REPLACEMENT 5-87851-3113 FIG. 3) (SEE FIG. 3, ITEM 56)	0150	RF
		65-18438-29	CARRIAGE ASSY, OUTBOARD FLAP CENTER (LH) (USED ON . . . PREFERRED FLAP REPLACEMENT 5-87851-3113 FIG. 3) (SEE FIG. 3, ITEM 56)	5199	RF
		65-18438-26	CARRIAGE ASSY, OUTBOARD FLAP CENTER (RH) (USED ON . . . PREFERRED FLAP REPLACEMENT 5-87851-3114 FIG. 3) (SEE FIG. 3, ITEM 56)	0150	RF
		65-18438-30	CARRIAGE ASSY, OUTBOARD FLAP CENTER (RH) (USED ON . . . PREFERRED FLAP REPLACEMENT 5-87851-3114 FIG. 3) (SEE FIG. 3, ITEM 56)	5199	RF
	1	NAS514P1032-8	. SCREW		4
	1A	NAS603-8	. SCREW		2
	2	BACS13W3CN4	. SLEEVE		4
	2A	BACS13W3CN4	. SLEEVE		2
	3	AN4-6A	. BOLT		2
	3A	NAS517-3-12	. SCREW		2
	4	AN4-40A	. BOLT		1
	4A	AN4-42A	. BOLT		2
	5	AN4-5A	. BOLT		2
	5A	AN960D10	. WASHER		2
	6	AN960D416L	. WASHER		5
	6A	65-18438-7	. FILLER, OUTBOARD FLAP CENTER CARRIAGE		1
	6B	65-18438-8	. FILLER, OUTBOARD FLAP CENTER CARRIAGE		1
	6C	66-16710-501	. FILLER, OUTBOARD FLAP CARRIAGE RUB STRIP		1
	6D	66-16710-502	. FILLER, OUTBOARD FLAP CARRIAGE RUB STRIP		1
	6E	69-21638-3	. FITTING, OUTBOARD FLAP CARRIAGE RUB STRIP SUPPORT		1
	6F	69-21638-4	. FITTING, OUTBOARD FLAP CARRIAGE RUB STRIP SUPPORT		1
	6G	66-16710-4	. FILLER, OUTBOARD FLAP CARRIAGE RUB STRIP		2
	6H	65-18438-501	. SHIM, LAMINATED		AR
	7	NAS679A4W	. NUT		5
	7A	NAS679A3W	. NUT		2
	8	65-18438-27	. STRIP ASSY, RUB (USED ON 65-18438-25, -26, -29. . . AND -30)		1
	8A	69-14548-1	. . CAM, FLAP CARRIAGE (NOT USED ON 65-18438-23 AND . . -27)		1
	8A	69-28789-1	. . CAM, FLAP CARRIAGE (USED ON 65-18438-23 AND -27).		1
	8B	69-29103-2	. . STRIP, OUTBOARD FLAP CENTER RUB (USED ON. . . . . 65-18438-27)		1
	9	MS21318-15	. SCREW		4
	10	NAS516-1	. FITTING		4
	11	6-83543-4	. BOLT, SPECIAL FLAP CARRIAGE		1
	12	6-83543-3	. BOLT, SPECIAL FLAP CARRIAGE		2
	13	6-83541-1	. BOLT, SPECIAL FLAP CARRIAGE		1
	14	AN960D616L	. WASHER		1
	15	AN960-616	. WASHER		2
	16	AN960D1416L	. WASHER		1
	17	AN320-6	. NUT		3
	18	AN320-14	. NUT		1
	19	BACB10B137	. BEARING		1
	20	BACB10B132	. BEARING		2
	21	BACB10B141	. BEARING		1
	22	63-1566-1	. WASHER, END FLAP CARRIAGE		AR
	23	63-1566-2	. WASHER, END FLAP CARRIAGE		AR
	24	BACB10BH59CF6	. BEARING		4
	25	AN960D516	. WASHER		4
	26	AN310-5	. NUT		4
	27	69-15924-7	. FILLER ASSY, OUTBOARD FLAP CARRIAGE (LH ONLY)		1
	27	69-15924-8	. FILLER ASSY, OUTBOARD FLAP CARRIAGE (RH ONLY)		1
			ATTACHING PARTS		
	27A	MS20005-62	. BOLT		1
	27B	AN4-42A	. BOLT		1
	27C	MS20002C5	. WASHER		1
	27D	MS20002-5	. WASHER		1
	27E	AN960D416L	. WASHER		1
	27F	BACN10B-L5L	. NUT		1
	27G	NAS679A4W	. NUT		1
			-------*-------		
	28	AN4-37A	. BOLT		3
	29	BACB30NE6-60	. BOLT		1
	30	AN960D416L	. WASHER		3
	31	MS20002C6	. WASHER		1
	32	MS20002-6	. WASHER		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
10 33	NAS679A4W	. NUT		3
34	BACN10B-L6L	. NUT		1
34A	66-12456-5	. BOLT ASSY, BEARING FLAP CARRIAGE		2
35	NAS516-1	. . FITTING		1
36	66-12456-7	. . BOLT, BEARING FLAP CARRIAGE		1
37	AN960PD1016	. WASHER		4
37	6-83545-1	. WASHER ASSY, FLAP ROLLER SPLIT (OPTIONALS 6-83545, 69-26972-1 WITH -3)		2
38	6-83545-2	. . WASHER, FLAP ROLLER SPLIT HALF (MATCHED PAIR)		2
38	6-83545	. WASHER, FLAP ROLLER SPLIT (OPTIONALS 6-83545-1, 69-26972-1 WITH -3)		4
38A	69-26972-3	. WASHER, FLAP ROLLER (USED WITH 69-26972-1)		2
38B	69-26972-1	. WASHER ASSY, FLAP ROLLER SPLIT (USED WITH 69-26972-3) (OPTIONALS 6-83545, -1)		2
38B	69-26972-2	. . WASHER, FLAP ROLLER SPLIT HALF (MATCHED PAIR)		2
39	NAS460-1016	. WASHER		2
40	NAS1022A10	. NUT		2
41	BAC8108134	. BEARING		2
42	65-3288-3019	. CARRIAGE ASSY, FLAP CENTER (USED ON 65-18438-21 AND -25)		1
42	65-3288-3020	. CARRIAGE ASSY, FLAP CENTER (USED ON 65-18438-22 AND -26)		1
43	65-3288-3025	. . CARRIAGE ASSY, FLAP CENTER HALF (USED ON 65-3288-3019)		1
43	65-3288-3026	. . CARRIAGE ASSY, FLAP CENTER HALF (USED ON 65-3288-3020)		1
44	65-3288-3028	. . CARRIAGE ASSY, FLAP CENTER HALF (USED ON 65-3288-3019)		1
44	65-3288-3027	. . CARRIAGE ASSY, FLAP CENTER HALF (USED ON 65-3288-3020)		1
45	65-3288-3033	. . . CARRIAGE, FLAP CENTER HALF (MATCHED PART, ORDER ONLY WITH 65-3288-3036) (USED ON 65-3288-3025)		1
45	65-3288-3034	. . . CARRIAGE, FLAP CENTER HALF (MATCHED PART, ORDER ONLY WITH 65-3288-3035) (USED ON 65-3288-3026)		1
46	65-3288-3036	. . . CARRIAGE, FLAP CENTER HALF (MATCHED PART, ORDER ONLY WITH 65-3288-3033) (USED ON 65-3288-3028)		1
46	65-3288-3035	. . . CARRIAGE, FLAP CENTER HALF (MATCHED PART, ORDER ONLY WITH 65-3288-3034) (USED ON 65-3288-3027)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

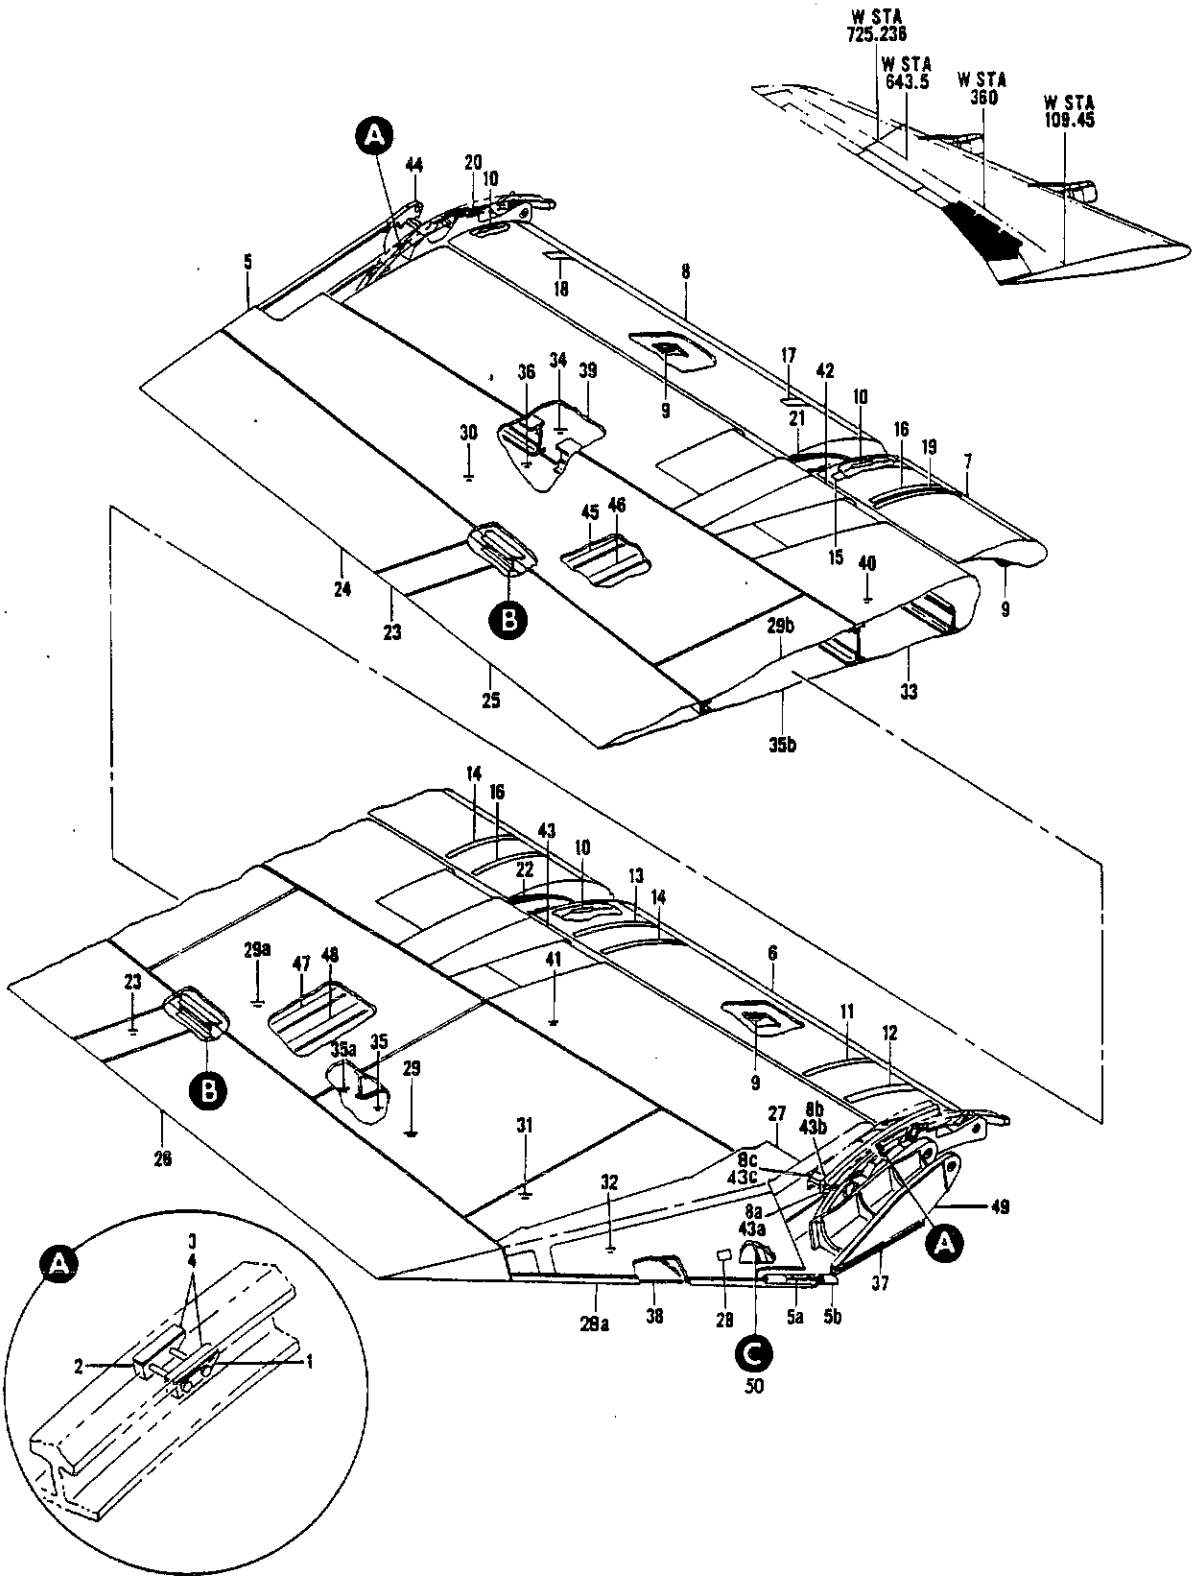


FIGURE 12. FLAP INSTL, INBOARD WING (SHEET 1)

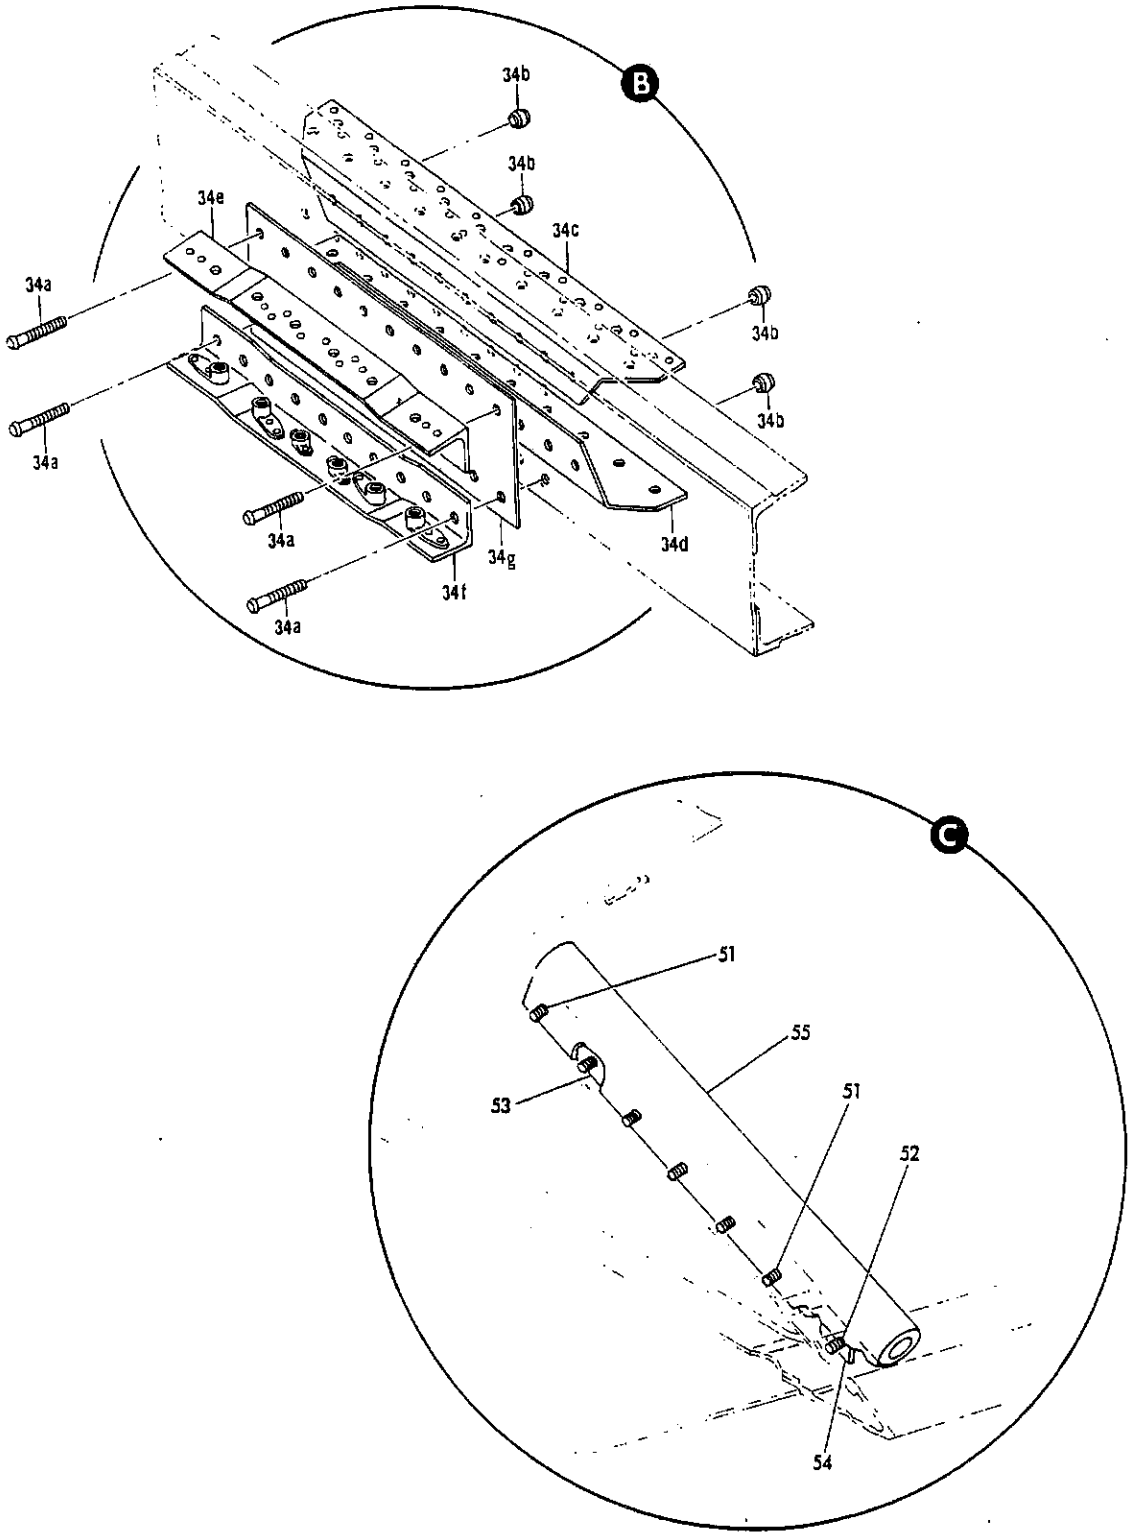


FIGURE 12. FLAP INSTL, INBOARD WING (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R	12	65-19635-1	FLAP INSTL, INBOARD WING (LH) (SEE 57-1, FIG. 1, ITEM 15)	0150	RF
R R		65-19635-1	FLAP INSTL, INBOARD WING (LH) (VARIABLE DWG NO.;65-19635-5001) (SEE 57-1, FIG. 1, ITEM 15)	5199	RF
R R		65-19635-2	FLAP INSTL, INBOARD WING (RH) (SEE 57-1, FIG. 1, ITEM 15)	0150	RF
R R		65-19635-2	FLAP INSTL, INBOARD WING (RH) (VARIABLE DWG NO.;65-19635-5002) (SEE 57-1, FIG. 1, ITEM 15)	5199	RF
		65-22552-1	. STOP INSTL, INBOARD FLAP DOWN POSITION.		2
	1	66-13578-1	. . STOP, INBOARD FLAP DOWN POSITION.		1
	2	66-13578-2	. . STOP, INBOARD FLAP DOWN POSITION.		1
			ATTACHING PARTS		
		NAS1103-33W	. . BOLT.		2
		NAS679A3W	. . NUT		2
			-------*-------		
	3	BACS40A9-39	. . SHIM.		AR
	4	BACS40B9-39	. . SHIM.		AR
R	5	65-18441-61	. FLAP ASSY, INBOARD (LH ONLY).	0150	1
R	5	65-18441-61A	. FLAP ASSY, INBOARD (LH ONLY).	5199	1
R	5	65-18441-62	. FLAP ASSY, INBOARD (RH ONLY).	0150	1
R	5	65-18441-62A	. FLAP ASSY, INBOARD (RH ONLY).	5199	1
	5A	65-18441-48	. . RETAINER, INBOARD FLAP.		1
			ATTACHING PARTS		
		NAS517-2-3	. . SCREW		4
		AN960PD8L	. . WASHER.		4
		NAS679A08W	. . NUT		4
			-------*-------		
	5B	65-18441-49	. . SEAL, INBOARD FLAP RUBBER (EXTRUSION NO. BAC1531-2 X 4.8 IN. LG) (LH ONLY)		1
	5B	65-18441-50	. . SEAL, INBOARD FLAP RUBBER (EXTRUSION NO. BAC1531-2 X 4.8 IN. LG) (RH ONLY)		1
	6	65-19159-39	. . FLAP ASSY, INBOARD FORE (INBOARD) (USED ON 65-18441-61, -59 AND M8589-41)		1
	6	65-19159-40	. . FLAP ASSY, INBOARD FORE (INBOARD) (USED ON 65-18441-62, -60 AND M8589-42)		1
	7	65-19159-41	. . FLAP ASSY, INBOARD FORE (CENTER) (LH ONLY).		1
	7	65-19159-42	. . FLAP ASSY, INBOARD FORE (CENTER) (RH ONLY).		1
	8	65-19159-43	. . FLAP ASSY, INBOARD FORE (OUTBOARD) (LH ONLY).		1
	8	65-19159-44	. . FLAP ASSY, INBOARD FORE (OUTBOARD) (RH ONLY).		1
			ATTACHING PARTS		
		NAS1104-16W	. . BOLT.		2
		NAS334CPA15	. . BOLT.		2
		NAS1104-13W	. . BOLT.		10
		NAS1104-19W	. . BOLT.		10
		AN960PD416	. . WASHER.		22
		BACS40B12-32	. . SHIM.		AR
		BACS40B12-36	. . SHIM.		AR
			-------*-------		
		65-23634-29	. . . FAIRING INSTL, INBOARD FLAP CARRIAGE (LH ONLY). (USED ON 65-19159-39)		1
		65-23634-30	. . . FAIRING INSTL, INBOARD FLAP CARRIAGE (RH ONLY). (USED ON 65-19159-40)		1
	8A	65-23634-39	. . . . RETAINER, INBOARD FLAP CARRIAGE FAIRING SEAL. (LH ONLY)		1
	8A	65-23634-40	. . . . RETAINER, INBOARD FLAP CARRIAGE FAIRING SEAL. (RH ONLY)		1
			ATTACHING PARTS		
		NAS517-2-3	. . . . SCREW		8
			-------*-------		
	8B	65-23634-41	. . . . SEAL, INBOARD FLAP CARRIAGE FAIRING RUBBER. (EXTRUSION NO. BAC1530-6 X 19.0 IN. LG) (LH ONLY)		1
	8B	65-23634-42	. . . . SEAL, INBOARD FLAP CARRIAGE FAIRING RUBBER. (EXTRUSION NO. BAC1530-6 X 19.0 IN. LG) (RH ONLY)		1
	8C	BACS40R04A10	. . . . SHIM.		1
		65-23320-1	. . . DAMPER INSTL, FORE FLAP INERTIA (LH ONLY)		1
		65-23320-2	. . . DAMPER INSTL, FORE FLAP INERTIA (RH ONLY)		1
	9	69-16934-7	. . . . DAMPER ASSY (OPTIONAL 69-16934-1)		1
	9	69-16934-1	. . . . DAMPER ASSY (OPTIONAL TO 69-16934-7)		1
			ATTACHING PARTS		
		BACR15CE6D	. . . . RIVET		16
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	12 10	BACN12M30-1CD	. . . NAMEPLATE		1
			ATTACHING PARTS		
		BACR15E163C5-6	. . . RIVET		2
			-------*-------		
	11	65-19159-45	. . . STRIP, INBOARD FORE FLAP RUB (USED ON 65-19159-39)		1
	11	65-19159-46	. . . STRIP, INBOARD FORE FLAP RUB (USED ON 65-19159-40)		1
	12	65-19159-47	. . . STRIP, INBOARD FORE FLAP RUB (USED ON 65-19159-39)		1
	12	65-19159-48	. . . STRIP, INBOARD FORE FLAP RUB (USED ON 65-19159-40)		1
	13	65-19159-53	. . . STRIP, INBOARD FORE FLAP RUB (USED ON 65-19159-39 AND -40)		1
	14	65-19159-51	. . . STRIP, INBOARD FORE FLAP RUB (USED ON 65-19159-39 AND -41)		1
	14	65-19159-52	. . . STRIP, INBOARD FORE FLAP RUB (USED ON 65-19159-40 AND -42)		1
	15	65-19159-49	. . . STRIP, INBOARD FORE FLAP RUB (USED ON 65-19159-41)		1
	15	65-19159-50	. . . STRIP, INBOARD FORE FLAP RUB (USED ON 65-19159-42)		1
	16	65-19159-53	. . . STRIP, INBOARD FORE FLAP RUB (USED ON 65-19159-41 AND -42)		2
	17	65-19159-29	. . . STRIP, INBOARD FORE FLAP RUB (USED ON 65-19159-5, -43, -6 AND -44)		1
	18	65-19159-30	. . . STRIP, INBOARD FORE FLAP RUB (USED ON 65-19159-5, -43, -6 AND -44)		1
R R R	19	60-3016-1	. . . STRIP, WING FLAP POSITION TRANSMITTER CHAMFERED RUB (USED ON 65-19159-41 AND -42)	0150	1
R R R	19	60-3016-2	. . . STRIP, WING FLAP POSITION TRANSMITTER CHAMFERED RUB (USED ON 65-19159-41 AND -42)	5199	1
			ATTACHING PARTS		
		BACR15CEB5	. . . RIVET		5
		BACR15CED5	. . . RIVET		61
			-------*-------		
	20	65-18774-1	. . FAIRING, STATION 272.837 INBOARD FLAP CARRIAGE (LH ONLY)		1
	20	65-18774-2	. . FAIRING, STATION 272.837 INBOARD FLAP CARRIAGE (RH ONLY)		1
			ATTACHING PARTS		
		NAS517-3-2	. . SCREW		1
		NAS517-4-14	. . SCREW		1
		NAS517-4-16	. . SCREW		2
		NAS517-4-21	. . SCREW		1
		NAS517-4-22	. . SCREW		1
			-------*-------		
	21	65-20684-5	. . FAIRING, STATION 194.996 INBOARD FLAP CARRIAGE (LH ONLY)		1
	21	65-20684-6	. . FAIRING, STATION 194.996 INBOARD FLAP CARRIAGE (RH ONLY)		1
	22	65-20684-3	. . FAIRING, STATION 128.218 INBOARD FLAP CARRIAGE (LH ONLY)		1
	22	65-20684-4	. . FAIRING, STATION 128.218 INBOARD FLAP CARRIAGE (RH ONLY)		1
			ATTACHING PARTS		
		NAS517-3-2	. . SCREW		2
		NAS517-4-14	. . SCREW		4
		NAS517-4-16	. . SCREW		4
		NAS517-4-22	. . SCREW		2
			-------*-------		
	23	65-18441-33	. . COVER ASSY, INBOARD FLAP GAP.		2
			ATTACHING PARTS		
		NAS517-3-4	. . SCREW		24
		NAS517-3-3	. . SCREW		72
			-------*-------		
R R R	24	65-18689-5	. . TRAILING EDGE ASSY, INBOARD FLAP (OUTBOARD) (LH ONLY) (OPTIONAL 65-18689-105)	0150	1
R R R R R	24	65-18689-105	. . TRAILING EDGE ASSY, INBOARD FLAP (OUTBOARD) (LH ONLY) (OPTIONAL TO 65-18689-5)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	12 24	65-18689-6	. . TRAILING EDGE ASSY, INBOARD FLAP (OUTBOARD) (RH . . ONLY) (OPTIONAL 65-18689-106)	0150	1
R	24	65-18689-106	. . TRAILING EDGE ASSY, INBOARD FLAP (OUTBOARD) (RH . . ONLY) (OPTIONAL TO 65-18689-6)	0150	1
R	24	65-18689-105	. . TRAILING EDGE ASSY, INBOARD FLAP (OUTBOARD) (LH . . ONLY)	5199	1
R	24	65-18689-106	. . TRAILING EDGE ASSY, INBOARD FLAP (OUTBOARD) (RH . . ONLY)	5199	1
R	25	65-18689-3	. . TRAILING EDGE ASSY, INBOARD FLAP (CENTER) (LH ONLY) (OPTIONAL 65-18689-103)	0150	1
R	25	65-18689-103	. . TRAILING EDGE ASSY, INBOARD FLAP (CENTER) (LH ONLY) (OPTIONAL TO 65-18689-3)	0150	1
R	25	65-18689-4	. . TRAILING EDGE ASSY, INBOARD FLAP (CENTER) (RH ONLY) (OPTIONAL 65-18689-104)	0150	1
R	25	65-18689-104	. . TRAILING EDGE ASSY, INBOARD FLAP (CENTER) (RH ONLY) (OPTIONAL TO 65-18689-4)	0150	1
R	25	65-18689-103	. . TRAILING EDGE ASSY, INBOARD FLAP (CENTER) (LH ONLY)	5199	1
R	25	65-18689-104	. . TRAILING EDGE ASSY, INBOARD FLAP (CENTER) (RH ONLY)	5199	1
R	26	65-18689-81	. . TRAILING EDGE ASSY, INBOARD FLAP (INBOARD) (USED ON 65-18441-59, -61 AND M8589-41) (OPTIONAL 65-18689-107)	0150	1
R	26	65-18689-107	. . TRAILING EDGE ASSY, INBOARD FLAP (INBOARD) (USED ON 65-18441-59, -61 AND M8589-41) (OPTIONAL TO 65-18689-81)	0150	1
R	26	65-18689-107	. . TRAILING EDGE ASSY, INBOARD FLAP (INBOARD) (USED ON 65-18441-59, -61 AND M8589-41)	5199	1
R	26	65-18689-82	. . TRAILING EDGE ASSY, (INBOARD) (USED ON 65-18689-60, -62 AND M8589-42) (OPTIONAL 65-18689-108)	0150	1
R	26	65-18689-108	. . TRAILING EDGE ASSY, (INBOARD) (USED ON 65-18689-60, -62 AND M8589-42) (OPTIONAL TO 65-18689-82)	0150	1
R	26	65-18689-108	. . TRAILING EDGE ASSY, INBOARD FLAP (INBOARD) (USED ON 65-18441-60, -62 AND M8589-42)	5199	1
			ATTACHING PARTS		
		MS20426D6	. . RIVET		AR
		NAS517-3-5	. . SCREW		AR
		NAS517-3-4	. . SCREW		20
		BACB30P6-4	. . BOLT		20
		BACC30R6	. . COLLAR		20
			-------*-------		
	27	65-22228-1	. . STRIP, INBOARD RUB (LH ONLY)		1
	27	65-22228-2	. . STRIP, INBOARD RUB (RH ONLY)		1
			ATTACHING PARTS		
		BACR15CE85	. . RIVET		29
			-------*-------		
R	28	AN7510-1	. . PLATE	0150	1
R	28	MS27253-1	. . PLATE	5199	1
			ATTACHING PARTS		
		BACR15BQ4-2	. . RIVET		4
			-------*-------		
	28A	65-22227-1	. . FILLET, EDGE (LH ONLY)		1
	28A	65-22227-2	. . FILLET, EDGE (RH ONLY)		1
	29	65-18441-37	. . PANEL, INBOARD FLAP STATION 79.217 TO 111.597 UPPER AFT (INBOARD) (LH ONLY)		1
	29	65-18441-38	. . PANEL, INBOARD FLAP STATION 79.217 TO 111.597 UPPER AFT (INBOARD) (RH ONLY)		1
	29A	65-18441-41	. . PANEL INBOARD FLAP STATION 111.597 TO 148.707 . . . UPPER AFT (INBOARD) (LH ONLY)		1
	29A	65-18441-42	. . PANEL, INBOARD FLAP STATION 111.597 TO 148.707. . . UPPER AFT (INBOARD) (RH ONLY)		1
	29B	65-18441-45	. . PANEL, INBOARD FLAP STATION 148.707 TO 169.847. . . UPPER AFT (INBOARD) (LH ONLY)		1
	29B	65-18441-46	. . PANEL, INBOARD FLAP STATION 148.707 TO 169.847. . . UPPER AFT (INBOARD) (RH ONLY)		1
	30	65-18441-9	. . PANEL, INBOARD FLAP UPPER AFT (OUTBOARD) (LH ONLY)		1
	30	65-18441-10	. . PANEL, INBOARD FLAP UPPER AFT (OUTBOARD) (RH ONLY)		1
	31	65-18441-15	. . PANEL, INBOARD FLAP UPPER AFT SKIN (LH ONLY). . . .		1
	31	65-18441-16	. . PANEL, INBOARD FLAP UPPER AFT SKIN (RH ONLY). . . .		1
	32	65-18441-17	. . PANEL, INBOARD FLAP UPPER AFT INBOARD SKIN (LH. . . ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	12 32	65-18441-18	. . PANEL, INBOARD FLAP UPPER AFT INBOARD SKIN (RH. . . ONLY)		1
	33	65-18441-11	. . PANEL, INBOARD FLAP LOWER FORWARD (INBOARD) (LH . . ONLY)		1
	33	65-18441-12	. . PANEL, INBOARD FLAP LOWER FORWARD (INBOARD) (RH . . ONLY)		1
	34	65-18441-13	. . PANEL, INBOARD FLAP LOWER FORWARD (OUTBOARD) (LH. . ONLY)		1
	34	65-18441-14	. . PANEL, INBOARD FLAP LOWER FORWARD (OUTBOARD) (RH. . ONLY)		1
			ATTACHING PARTS		
		NAS517-3-4	. . SCREW		AR
			-------*-------		
	34A	NAS1103-6W	. . BOLT, (USED ON 65-18441-59, -61, -58, -62,. . . . . M8589-41 AND -42)		40
	34C	69-16298-1	. . ANGLE ASSY, INBOARD FLAP TRAILING EDGE SPLICE . . .		2
			ATTACHING PARTS		
		NAS517-3-5	. . SCREW		20
			-------*-------		
	34D	69-16298-7	. . ANGLE, INBOARD FLAP TRAILING EDGE SPLICE.		2
			ATTACHING PARTS		
		NAS517-3-5	. . SCREW, (USED ON 65-18441-59, -61, -58, -62, ... M8589-41 AND -42)		20
		AN960PD10L	. . WASHER, (USED ON 65-18441-59, -61, -58, -62,. . . . M8589-41 AND -42)		20
		NAS679A3W	. . NUT, (USED ON 65-18441-59, -61, -58, -62, ... M8589-41 AND -42)		20
			-------*-------		
	34E	69-16298-2	. . ANGLE ASSY, INBOARD FLAP TRAILING EDGE SPLICE . . .		2
	34F	69-16298-3	. . ANGLE ASSY, INBOARD FLAP TRAILING EDGE SPLICE . . .		2
			ATTACHING PARTS		
		NAS517-3-4	. . SCREW		24
			-------*-------		
	34G	65-18441-53	. . DOUBLER, INBOARD FLAP (STATION 138)		1
	34G	65-18441-51	. . DOUBLER, INBOARD FLAP (STATION 204)		1
	35	65-18441-35	. . PANEL, INBOARD FLAP STATION 79.217 TO 111.597 LOWER AFT (INBOARD) (LH ONLY)		1
	35	65-18441-36	. . PANEL, INBOARD FLAP STATION 79.217 TO 111.597 LOWER AFT (INBOARD) (RH ONLY)		1
	35A	65-18441-39	. . PANEL, INBOARD FLAP STATION 111.597 TO 148.707. . . LOWER AFT (INBOARD) (LH ONLY)		1
	35A	65-18441-40	. . PANEL, INBOARD FLAP STATION 111.597 TO 148.707. . . LOWER AFT (INBOARD) (RH ONLY)		1
	35B	65-18441-43	. . PANEL, INBOARD FLAP STATION 148.707 TO 169.847. . . LOWER AFT (INBOARD) (LH ONLY)		1
	35B	65-18441-44	. . PANEL, INBOARD FLAP STATION 148.707 TO 169.847. . . LOWER AFT (INBOARD) (RH ONLY)		1
	36	65-18441-7	. . PANEL, INBOARD FLAP LOWER AFT (OUTBOARD) (LH ONLY)		1
	36	65-18441-8	. . PANEL, INBOARD FLAP LOWER AFT (OUTBOARD) (RH ONLY)		1
R	37	65-20791-1	. . PANEL, LOWER (LH ONLY).	0150	1
R	37	65-20791-9	. . PANEL, LOWER (LH ONLY).	5199	1
R	37	65-20791-2	. . PANEL, LOWER (RH ONLY).	0150	1
R	37	65-20791-10	. . PANEL, LOWER (RH ONLY).	5199	1
R	38	65-20792-1	. . PANEL, LOWER (LH ONLY).	0150	1
R	38	65-20792-11	. . PANEL, LOWER (LH ONLY).	5199	1
R	38	65-20792-2	. . PANEL, LOWER (RH ONLY).	0150	1
R	38	65-20792-12	. . PANEL, LOWER (RH ONLY).	5199	1
	39	65-18441-23	. . SKIN, INBOARD FLAP NOSE (OUTBOARD) (LH ONLY). . . .		1
	39	65-18441-24	. . SKIN, INBOARD FLAP NOSE (OUTBOARD) (RH ONLY). . . .		1
	40	65-18441-21	. . SKIN, INBOARD FLAP NOSE (CENTER) (LH ONLY).		1
	40	65-18441-22	. . SKIN, INBOARD FLAP NOSE (CENTER (RH ONLY)		1
	41	65-18441-19	. . SKIN, INBOARD FLAP NOSE (INBOARD) (LH ONLY)		1
	41	65-18441-20	. . SKIN, INBOARD FLAP NOSE (INBOARD) (RH ONLY)		1
	42	65-18441-25	. . SKIN, INBOARD FLAP NOSE (LH ONLY)		1
	42	65-18441-26	. . SKIN, INBOARD FLAP NOSE (RH ONLY)		1
	43	65-18441-31	. . SKIN, INBOARD FLAP NOSE (LH ONLY)		1
	43	65-18441-32	. . SKIN, INBOARD FLAP NOSE (RH ONLY)		1
	44	65-18660-175	. . RIB INSTL, INBOARD FLAP OUTBOARD ACTUATOR (USED ON 65-18441-61 AND -67) (SEE FIG. 16)		1
	44	65-18660-176	. . RIB INSTL, INBOARD FLAP OUTBOARD ACTUATOR (USED ON 65-18441-62 AND -68) (SEE FIG. 16)		1
	45	65-18656-3	. . RIB INSTL, FLAP STATION 194.997 INBOARD FLAP CENTER TRACK (LH ONLY) (SEE FIG. 15)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
12 45	65-18656-4	. . RIB INSTL, FLAP STATION 194.997 INBOARD FLAP CENTER TRACK (RH ONLY) (SEE FIG. 15)		1
46	65-18656-79	. . RIB INSTL, FLAP STATION 190.337 INBOARD FLAP CENTER TRACK (USED ON 65-18441-61 AND -67) (SEE FIG. 15)		1
46	65-18656-80	. . RIB INSTL, FLAP STATION 190.337 INBOARD FLAP CENTER TRACK (USED ON 65-18441-62 AND -68) (SEE FIG. 15)		1
47	65-18653-3	. . RIB INSTL, FLAP STATION 128.218 INBOARD FLAP CENTER TRACK (LH ONLY) (SEE FIG. 14)		1
47	65-18653-4	. . RIB INSTL, FLAP STATION 128.218 INBOARD FLAP CENTER TRACK (RH ONLY) (SEE FIG. 14)		1
48	65-18653-83	. . RIB INSTL, FLAP STATION 123.558 INBOARD FLAP CENTER TRACK (USED ON 65-18441-61 AND -67) (SEE FIG. 14)		1
48	65-18653-84	. . RIB INSTL, FLAP STATION 123.558 INBOARD FLAP CENTER TRACK (USED ON 65-18441-62 AND -68) (SEE FIG. 14)		1
49	65-18663-127	. . RIB INSTL, INBOARD FLAP INBOARD ACTUATOR AND TRACK (USED ON 65-18441-61) (SEE FIG. 13)		1
49	65-18663-128	. . RIB INSTL, INBOARD FLAP INBOARD ACTUATOR AND TRACK (USED ON 65-18441-62) (SEE FIG. 13)		1
50	65-19458-1	. . RIB INSTL, INBOARD FLAP (LH ONLY)		1
50	65-19458-2	. . RIB INSTL, INBOARD FLAP (RH ONLY)		1
51	NAS623-2-4W	. . . SCREW		6
52	NAS623-2-6W	. . . SCREW		1
53	65-19458-38	. . . RETAINER.		1
54	65-19458-39	. . . RETAINER.		1
55	65-19458-40	. . . SEAL, (EXTRUSION NO. BAC1530-6 X 9.6 IN. LG). . . (USED ON 65-19458-1)		1
55	65-19458-41	. . . SEAL, (EXTRUSION NO. BAC1530-6 X 9.6 IN. LG). . . (USED ON 65-19458-2)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

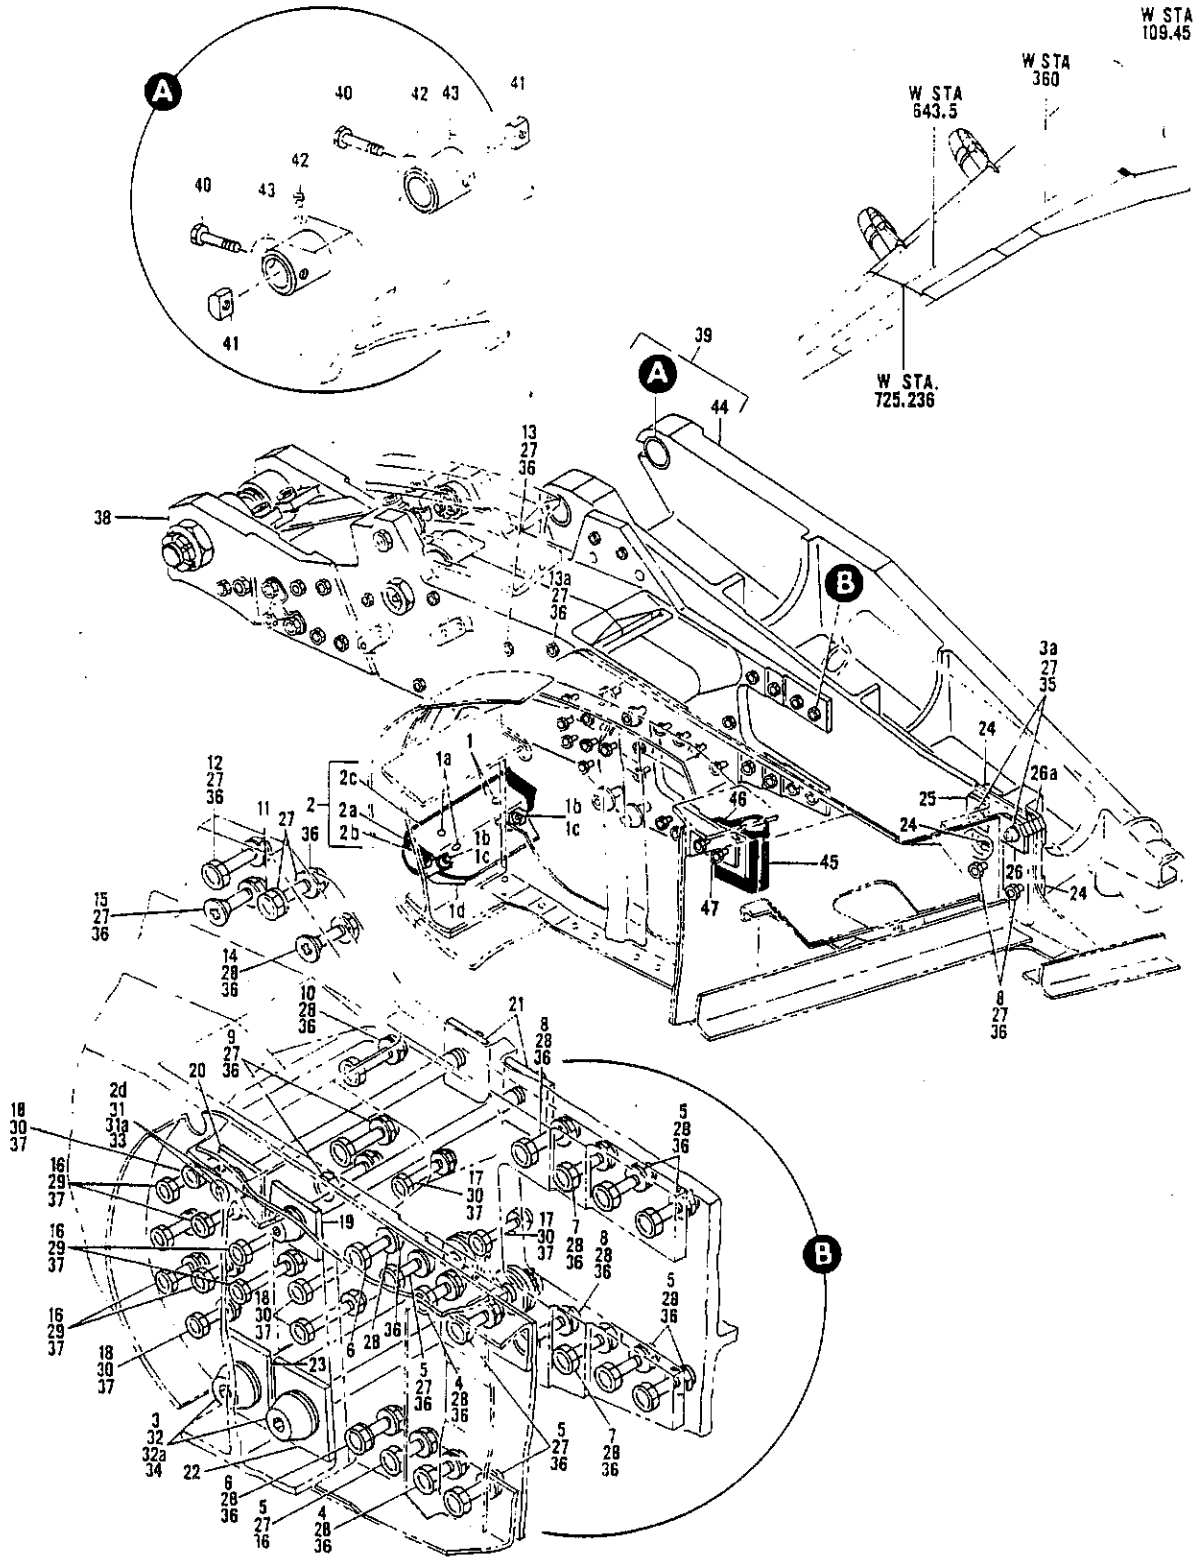


FIGURE 13. RIB INSTL. INBOARD FLAP INBOARD ACTUATOR AND TRACK

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
13	65-18663-127	RIB INSTL, INBOARD FLAP INBOARD ACTUATOR AND TRACK (LH) (SEE FIG. 12, ITEM 49)		RF
	65-18663-128	RIB INSTL, INBOARD FLAP INBOARD ACTUATOR AND TRACK (RH) (SEE FIG. 12, ITEM 49)		RF
1	BACR15CEB5N	. RIVET		2
1A	CR2262-6-3	. RIVET		2
1B	NAS603-10	. SCREW		2
1C	AN960D10	. WASHER		2
1D	65-28928-1	. BLOCK, INBOARD FLAP SEAL PHENOLIC (LH ONLY)		1
1D	65-28928-2	. BLOCK, INBOARD FLAP SEAL PHENOLIC (RH ONLY)		1
2	65-28784-1	. SEAL ASSY, COVE LIP DOOR FLAP (LH ONLY)		1
2	65-28784-2	. SEAL ASSY, COVE LIP DOOR FLAP (RH ONLY)		1
2A	65-28784-15	. . SEAL, COVE LIP DOOR (EXTRUSION NO. BAC1530-2 X 3.90 IN. LG (OPTIONAL EXTRUSION NO. BAC1530-7 X 3.90 IN. LG))		1
		ATTACHING PARTS		
	MS2042685X3	. . RIVET		4
		-------*-------		
2B	65-28784-21	. . RETAINER, COVE LIP DOOR FLAP SEAL (LH ONLY)		1
2B	65-28784-22	. . RETAINER, COVE LIP DOOR FLAP SEAL (RH ONLY)		1
2C	65-28784-27	. . SUPPORT, COVE LIP DOOR FLAP SEAL (LH ONLY).		1
2C	65-28784-28	. . SUPPORT, COVE LIP DOOR FLAP SEAL (RH ONLY).		1
2D	MS20006-96	. BOLT		2
3	MS20009-100	. BOLT		2
3A	MS20005-14	. BOLT		2
4	NAS1105-7W	. BOLT		2
5	NAS1105-9W	. BOLT		8
6	NAS1105-10W	. BOLT		2
7	NAS1105-11W	. BOLT		2
8	NAS1105-12W	. BOLT		4
9	NAS1105-13W	. BOLT		2
10	NAS1105-14W	. BOLT		1
11	NAS1105-16W	. BOLT		1
12	NAS1105-22W	. BOLT		1
13	NAS1105-88W	. BOLT		1
13A	NAS1105-82W	. BOLT		1
14	NAS335CA12	. BOLT		1
15	NAS335CA16	. BOLT		1
16	NAS1104-9W	. BOLT		7
17	NAS1104-17W	. BOLT		2
18	NAS1104-19W	. BOLT		4
19	65-18663-139	. FILLER, RADIUS (LH ONLY).		1
19	65-18663-139	. FILLER, RADIUS (RH ONLY).		1
20	65-18663-139	. FILLER, RADIUS (LH ONLY).		1
20	65-18663-139	. FILLER, RADIUS (RH ONLY).		1
21	65-18663-11	. FILLER, INBOARD FLAP INBOARD ACTUATOR AND TRACK RIB RADIUS		2
22	65-18663-137	. FILLER, RADIUS (LH ONLY).		1
22	65-18663-138	. FILLER, RADIUS (RH ONLY).		1
23	65-18663-137	. FILLER, RADIUS (LH ONLY).		1
23	65-18663-138	. FILLER, RADIUS (RH ONLY).		1
24	65-18663-10	. FILLER, INBOARD FLAP INBOARD ACTUATOR AND TRACK RIB RADIUS		3
25	65-18663-20	. FILLER, INBOARD FLAP INBOARD ACTUATOR AND TRACK RIB RADIUS		1
26	65-18663-121	. FILLER, INBOARD FLAP INBOARD ACTUATOR AND TRACK RIB RADIUS (LH ONLY)		1
26	65-18663-122	. FILLER, INBOARD FLAP INBOARD ACTUATOR AND TRACK RIB RADIUS (RH ONLY)		1
26A	65-18663-123	. FILLER, INBOARD FLAP INBOARD ACTUATOR AND TRACK RIB RADIUS (LH ONLY)		1
26A	65-18663-124	. FILLER, INBOARD FLAP INBOARD ACTUATOR AND TRACK RIB RADIUS (RH ONLY)		1
27	AN960PD516	. WASHER		16
28	AN960PD516L	. WASHER		14
29	AN960PD416	. WASHER		7
30	AN960PD416L	. WASHER		6
31	AN960PD616	. WASHER		2
31A	MS20002C6	. WASHER		2
32	AN960PD916	. WASHER		2
32A	MS20002C9	. WASHER		2
33	BACN10B-L6L	. NUT		2
34	BACN10B9L	. NUT		2
35	BACN10B-L5L	. NUT		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	13 36	NAS679A5	. NUT		27
	37	NAS679A4W	. NUT		13
	38	65-20787-13	. CARRIAGE ASSY, (USED ON 65-18663-127) (SEE FIG. 18) (OPTIONAL 65-20787-19)	0102	1
	38	65-20787-19	. CARRIAGE ASSY, (USED ON 65-18663-127) (SEE FIG. 18) (OPTIONAL TO 65-20787-13)	0102	1
R	38	65-20787-25	. CARRIAGE ASSY, (USED ON 65-18663-127) (SEE FIG. 18)	0350	1
RR	38	65-20787-39	. CARRIAGE ASSY, (USED ON 65-18663-127, -141) (SEE FIG. 18)	5199	1
	38	65-20787-14	. CARRIAGE ASSY, (USED ON 65-18663-128) (SEE FIG. 18) (OPTIONAL 65-20787-20)	0102	1
	38	65-20787-20	. CARRIAGE ASSY, (USED ON 65-18663-128) (SEE FIG. 18) (OPTIONAL TO 65-20787-14)	0102	1
R	38	65-20787-26	. CARRIAGE ASSY, (USED ON 65-18663-128) (SEE FIG. 18)	0350	1
RR	38	65-20787-40	. CARRIAGE ASSY, (USED ON 65-18663-128, -142) (SEE FIG. 18)	5199	1
R	39	65-18661-1	. FITTING ASSY, NUT SUPPORT (LH ONLY)	0150	1
R	39	65-18661-5	. FITTING ASSY, NUT SUPPORT (LH ONLY) (OPTIONAL AND FOR REPLACEMENT ORDER 65-18661-9)	5199	1
R	39	65-18661-9	. FITTING ASSY, NUT SUPPORT (LH ONLY) (OPTIONAL TO AND REPLACEMENT FOR 65-18661-5)	5199	1
R	39	65-18661-2	. FITTING ASSY, NUT SUPPORT (RH ONLY)	0150	1
R	39	65-18661-6	. FITTING ASSY, NUT SUPPORT (RH ONLY) (OPTIONAL AND FOR REPLACEMENT ORDER 65-18661-10)	5199	1
R	39	65-18661-10	. FITTING ASSY, NUT SUPPORT (RH ONLY) (OPTIONAL TO AND REPLACEMENT FOR 65-18661-6)	5199	1
R	40	AN4-10A	. . BOLT	0150	2
R	40	BACB30NE4-8	. . BOLT	5199	2
R	41	63-8619	. . NUT ASSY, INBOARD FLAP CYLINDRICAL	0150	2
R	41	63-8619-2	. . NUT ASSY, INBOARD FLAP CYLINDRICAL	5199	2
	42	NAS516-1	. . FITTING		2
	43	3-98762-2000	. . BEARING, FLAP SCREW SUPPORT		2
R	44	65-18661-3	. . FITTING, (LH ONLY)	0150	1
R	44	65-18661-11	. . FITTING, (LH ONLY)	5199	1
R	44	65-18661-4	. . FITTING, (RH ONLY)	0150	1
R	44	65-18661-12	. . FITTING, (RH ONLY)	5199	1
	45	65-18663-99	. SEAL, INBOARD FLAP INBOARD ACTUATOR AND TRACK RIB RUBBER (EXTRUSION NO. BAC1530-8 X 4.2 IN. LG)		1
			ATTACHING PARTS		
		BACB30P6-4	. BOLT		2
		BACB30P6-3	. BOLT		2
		BACC30K6	. COLLAR		4
			-------*-------		
	46	65-18663-100	. RETAINER, INBOARD FLAP INBOARD ACTUATOR AND TRACK RIB SEAL		1
	47	65-18663-109	. FILLER, INBOARD FLAP INBOARD ACTUATOR AND TRACK RIB		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

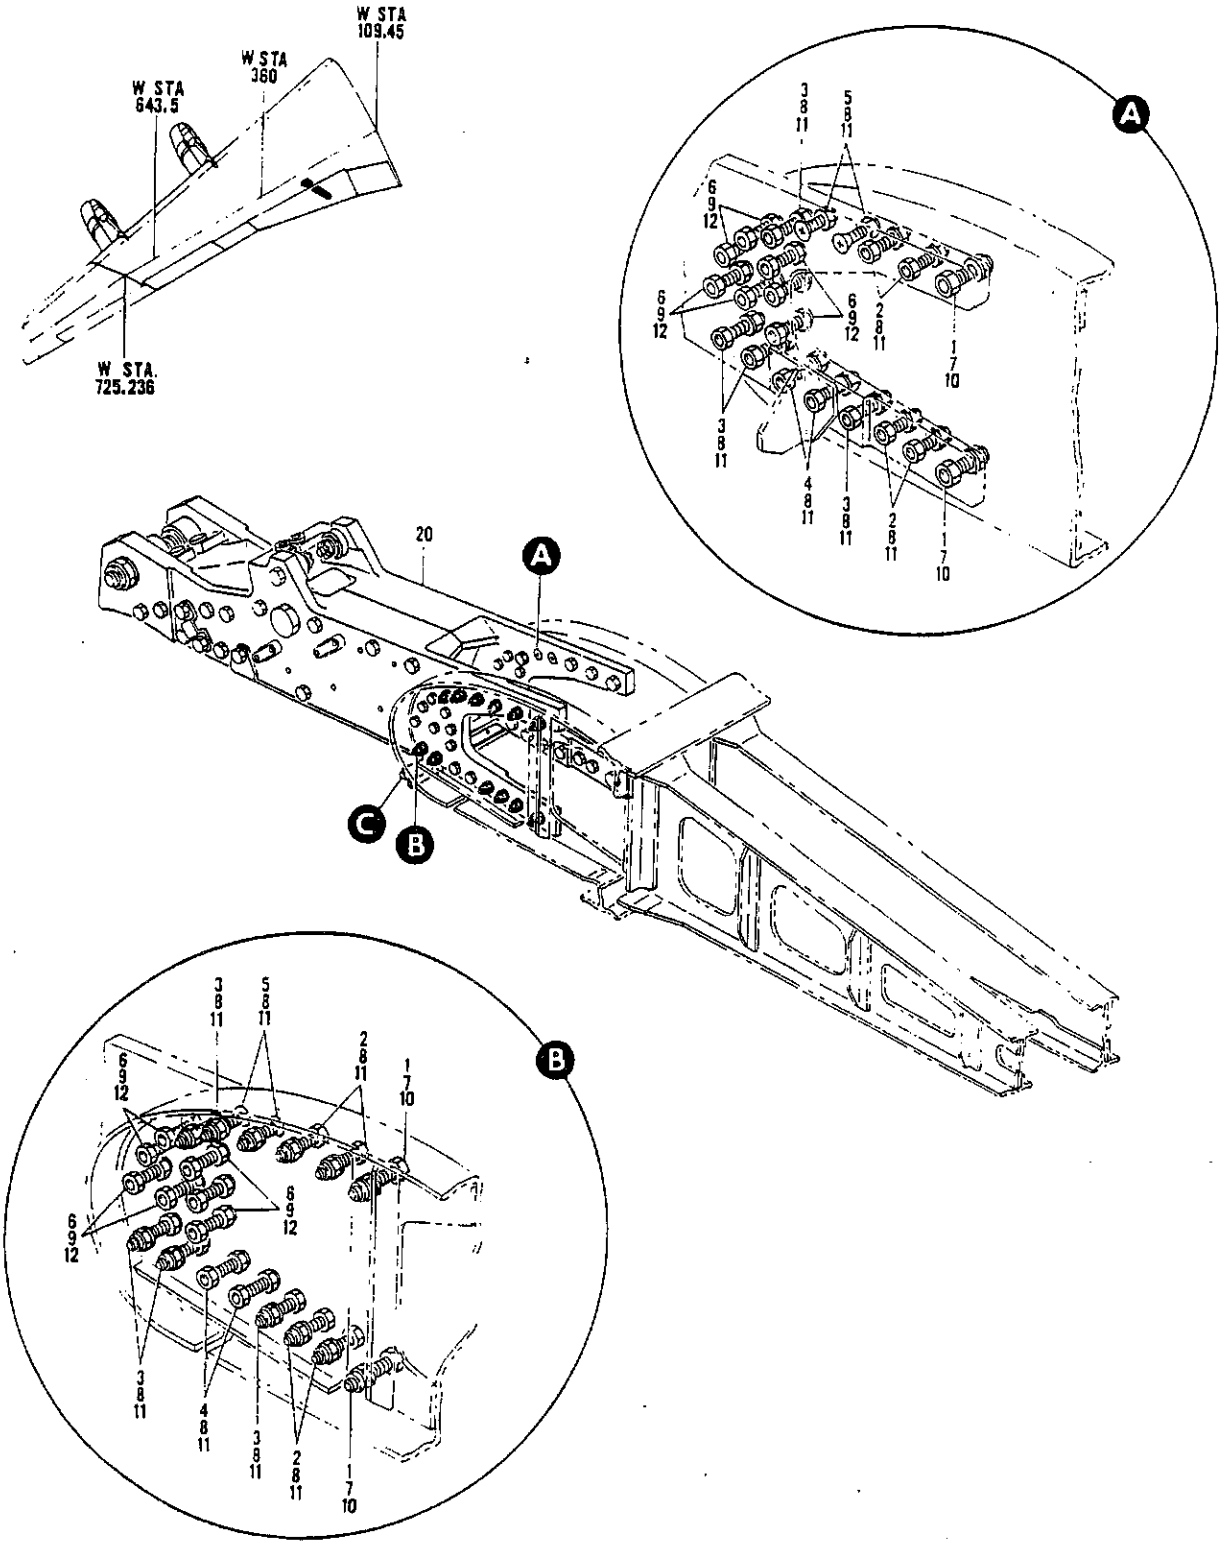


FIGURE 14. RIB INSTL, FLAP STATION 123.558 AND 128.218 INBOARD FLAP CENTER TRACK (SHEET 1)

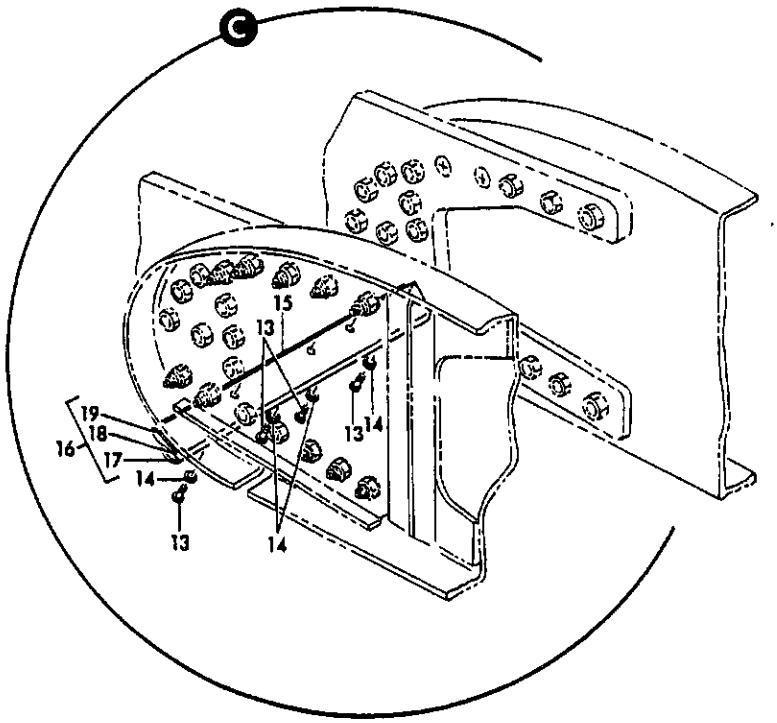


FIGURE 14. RIB INSTL, FLAP STATIONS 123.558 AND 128.218 INBOARD FLAP CENTER TRACK (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	14	65-18653-83	RIB INSTL, FLAP STATION 123.558 INBOARD FLAP CENTER TRACK (LH) (SEE FIG. 12, ITEM 48)		RF
		65-18653-84	RIB INSTL, FLAP STATION 123.558 INBOARD FLAP CENTER TRACK (RH) (SEE FIG. 12, ITEM 48)		RF
		65-18653-3	RIB INSTL, FLAP STATION 128.218 INBOARD FLAP CENTER TRACK (LH) (SEE FIG. 12, ITEM 47)		RF
		65-18653-4	RIB INSTL, FLAP STATION 128.218 INBOARD FLAP CENTER TRACK (RH) (SEE FIG. 12, ITEM 47)		RF
	1	NAS1106-9W	. BOLT.		2
	2	NAS1105-7W	. BOLT.		4
	3	NAS1105-11W	. BOLT.		4
	4	NAS1105-12W	. BOLT.		2
	5	NAS335CPA11	. BOLT.		2
	6	NAS1104-11W	. BOLT.		7
	7	AN960D616	. WASHER.		2
	8	AN960D516	. WASHER.		12
	9	AN960D416	. WASHER.		7
	10	NAS679A6	. NUT		2
	11	NAS679A5	. NUT		12
	12	NAS679A4W	. NUT		7
	13	NAS603-10	. SCREW, (NOT USED ON 65-18653-3 AND -4).		4
	14	AN960D10L	. WASHER, (NOT USED ON 65-18653-3 AND -4)		4
	15	65-28928-9	. BLOCK, INBOARD FLAP SEAL PHENOLIC (USED ON 65-18653-1 AND -83)		1
	15	65-28928-10	. BLOCK, INBOARD FLAP SEAL PHENOLIC (USED ON 65-18653-2 AND -84)		1
	16	65-28784-9	. SEAL ASSY, COVE LIP DOOR FLAP (LH) (USED ON 65-18653-1 AND -83)		1
	16	65-28784-10	. SEAL ASSY, COVE LIP DOOR FLAP (RH) (USED ON 65-18653-2 AND -84)		1
	17	65-28784-16	. . SEAL, COVE LIP DOOR FLAP (EXTRUSION NO. BAC1530-2 (OPTIONAL EXTRUSION NO. BAC1530-7 X 7.7 IN. LG)		1
			ATTACHING PARTS		
		MS20426B5X3	. . RIVET		6
			-------*-------		
	18	65-28784-41	. . RETAINER, COVE LIP DOOR FLAP SEAL		1
	19	65-28784-35	. . SUPPORT, COVE LIP DOOR FLAP SEAL (LH ONLY).		1
	19	65-28784-36	. . SUPPORT, COVE LIP DOOR FLAP SEAL (RH ONLY).		1
	20	65-20787-15	. CARRIAGE ASSY, (USED ON 65-18653-83) (SEE FIG. 21). (OPTIONAL TO 65-20787-21 (USED ON 65-18653-83) (SEE FIG. 21))	0102	1
	20	65-20787-21	. CARRIAGE ASSY, (USED ON 65-18653-83) (SEE FIG. 21). (OPTIONAL 65-20787-15 (USED ON 65-18653-83) (SEE FIG. 21))	0102	1
R R	20	65-20787-27	. CARRIAGE ASSY, (USED ON 65-18653-83) (SEE FIG. 21). (OPTIONAL TO 65-20787-35)	0350	1
R R	20	65-20787-35	. CARRIAGE ASSY, (USED ON 65-18653-83) (SEE FIG. 21). (OPTIONAL 65-20787-27)	0350	1
R	20	65-20787-35	. CARRIAGE ASSY, (USED ON 65-18653-83) (SEE FIG. 21).	5199	1
	20	65-20787-16	. CARRIAGE ASSY, (USED ON 65-18653-84) (SEE FIG. 21). (OPTIONAL TO 65-20787-22 (USED ON 65-18653-84) (SEE FIG. 21))	0102	1
	20	65-20787-22	. CARRIAGE ASSY, (USED ON 65-18653-84) (SEE FIG. 21). (OPTIONAL 65-20787-16 (USED ON 65-18653-84) (SEE FIG. 21))	0102	1
R R	20	65-20787-28	. CARRIAGE ASSY, (USED ON 65-18653-84) (SEE FIG. 21). (OPTIONAL TO 65-20787-36)	0350	1
R R	20	65-20787-36	. CARRIAGE ASSY, (USED ON 65-18653-84) (SEE FIG. 21). (OPTIONAL 65-20787-28)	0350	1
R	20	65-20787-36	. CARRIAGE ASSY, (USED ON 65-18653-84) (SEE FIG. 21).	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

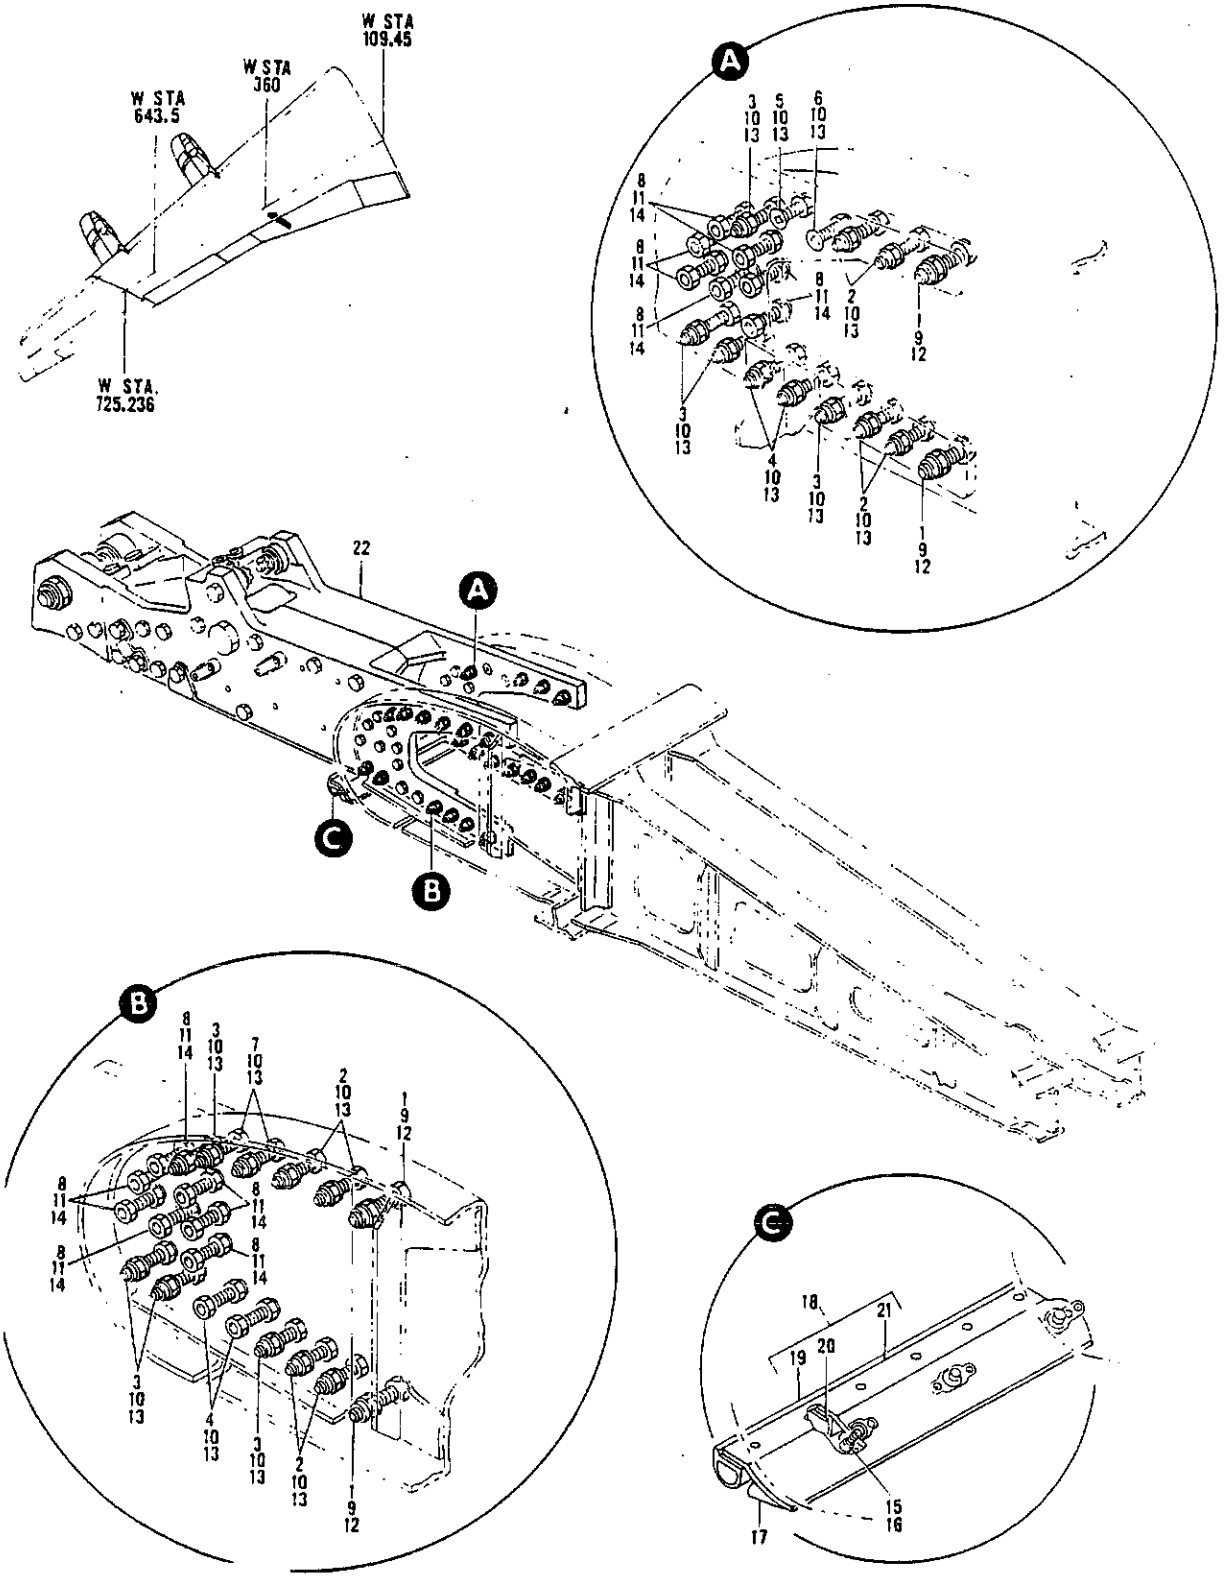


FIGURE 15. RIB INSTL, FLAP STATION 190. 337 AND 194. 997 INBOARD FLAP CENTER TRACK

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	15	65-18656-79	RIB INSTL, FLAP STATION 190.337 INBOARD FLAP CENTER TRACK (LH) (SEE FIG. 12, ITEM 46)		RF
		65-18656-80	RIB INSTL, FLAP STATION 190.337 INBOARD FLAP CENTER TRACK (RH) (SEE FIG. 12, ITEM 46)		RF
		65-18656-3	RIB INSTL, FLAP STATION 194.997 INBOARD FLAP CENTER TRACK (LH) (SEE FIG. 12, ITEM 45)		RF
		65-18656-4	RIB INSTL, FLAP STATION 194.997 INBOARD FLAP CENTER TRACK (RH) (SEE FIG. 12, ITEM 45)		RF
	1	NAS1106-9W	. BOLT.		2
	2	NAS1105-7W	. BOLT.		4
	3	NAS1105-11W	. BOLT.		4
	4	NAS1105-12W	. BOLT.		2
	5	NAS335CPA11	. BOLT, (USED ON 65-18656-1, -79, -2 AND -80)		1
	6	NAS335CPA12	. BOLT, (USED ON 65-18656-1, -79, -2 AND -80)		1
	7	NAS335CPA11	. BOLT, (USED ON 65-18656-3 AND -4)		2
	8	NAS1104-11W	. BOLT.		7
	9	AN960D616	. WASHER.		2
	10	AN960D516	. WASHER.		12
	11	AN960D416	. WASHER.		7
	12	NAS679A6	. NUT		2
	13	NAS679A5	. NUT		12
	14	NAS679A4W	. NUT		7
	15	NAS603-9	. SCREW, (USED ON 65-18656-1, -79, -2 AND -80).		3
	16	AN960D10L	. WASHER, (USED ON 65-18656-1, -79, -2 AND -80)		3
	17	65-28928-3	. BLOCK, INBOARD FLAP SEAL PHENOLIC (USED ON 65-18656-1 AND -79)		1
	17	65-28928-4	. BLOCK, INBOARD FLAP SEAL PHENOLIC (USED ON 65-18656-2 AND -80)		1
	18	65-28784-3	. SEAL ASSY, COVE LIP DOOR FLAP (LH) (USED ON 65-18656-1 AND -79)		1
	18	65-28784-4	. SEAL ASSY, COVE LIP DOOR FLAP (RH) (USED ON 65-18656-2 AND -80)		1
	19	65-28784-16	. . SEAL, COVE LIP DOOR FLAP (EXTRUSION NO. 8AC1530-2 (OPTIONAL BAC1530-7 X 7.7 IN. LG))		1
			ATTACHING PARTS		
		MS20426B5X3	. . RIVET -------*-------		6
	20	65-28784-41	. . RETAINER, COVE LIP DOOR FLAP SEAL		1
	21	65-28784-29	. . SUPPORT, COVE LIP DOOR FLAP SEAL (LH ONLY).		1
	21	65-28784-30	. . SUPPORT, COVE LIP DOOR FLAP SEAL (RH ONLY).		1
	22	65-20787-15	. CARRIAGE ASSY, (USED ON 65-18656-79) (SEE FIG. 21). (OPTIONAL 65-20787-21)	0102	1
	22	65-20787-21	. CARRIAGE ASSY, (USED ON 65-18656-79) (SEE FIG. 21). (OPTIONAL TO 65-20787-15)	0102	1
R R	22	65-20787-27	. CARRIAGE ASSY, (USED ON 65-18656-79) (SEE FIG. 21). (OPTIONAL TO 65-20787-35)	0350	1
R R R	22	65-20787-35	. CARRIAGE ASSY, (USED ON 65-18656-79) (SEE FIG. 21). (OPTIONAL 65-20787-27)	0350	1
R	22	65-20787-35	. CARRIAGE ASSY, (USED ON 65-18656-79) (SEE FIG. 21).	5199	1
	22	65-20787-16	. CARRIAGE ASSY, (USED ON 65-18656-80) (SEE FIG. 21). (OPTIONAL 65-20787-22)	0102	1
	22	65-20787-22	. CARRIAGE ASSY, (USED ON 65-18656-80) (SEE FIG. 21). (OPTIONAL TO 65-20787-16)	0102	1
R R	22	65-20787-28	. CARRIAGE ASSY, (USED ON 65-18656-80) (SEE FIG. 21). (OPTIONAL TO 65-20787-36)	0350	1
R R R	22	65-20787-36	. CARRIAGE ASSY, (USED ON 65-18656-80) (SEE FIG. 21). (OPTIONAL 65-20787-28)	0350	1
R	22	65-20787-36	. CARRIAGE ASSY, (USED ON 65-18656-80).	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

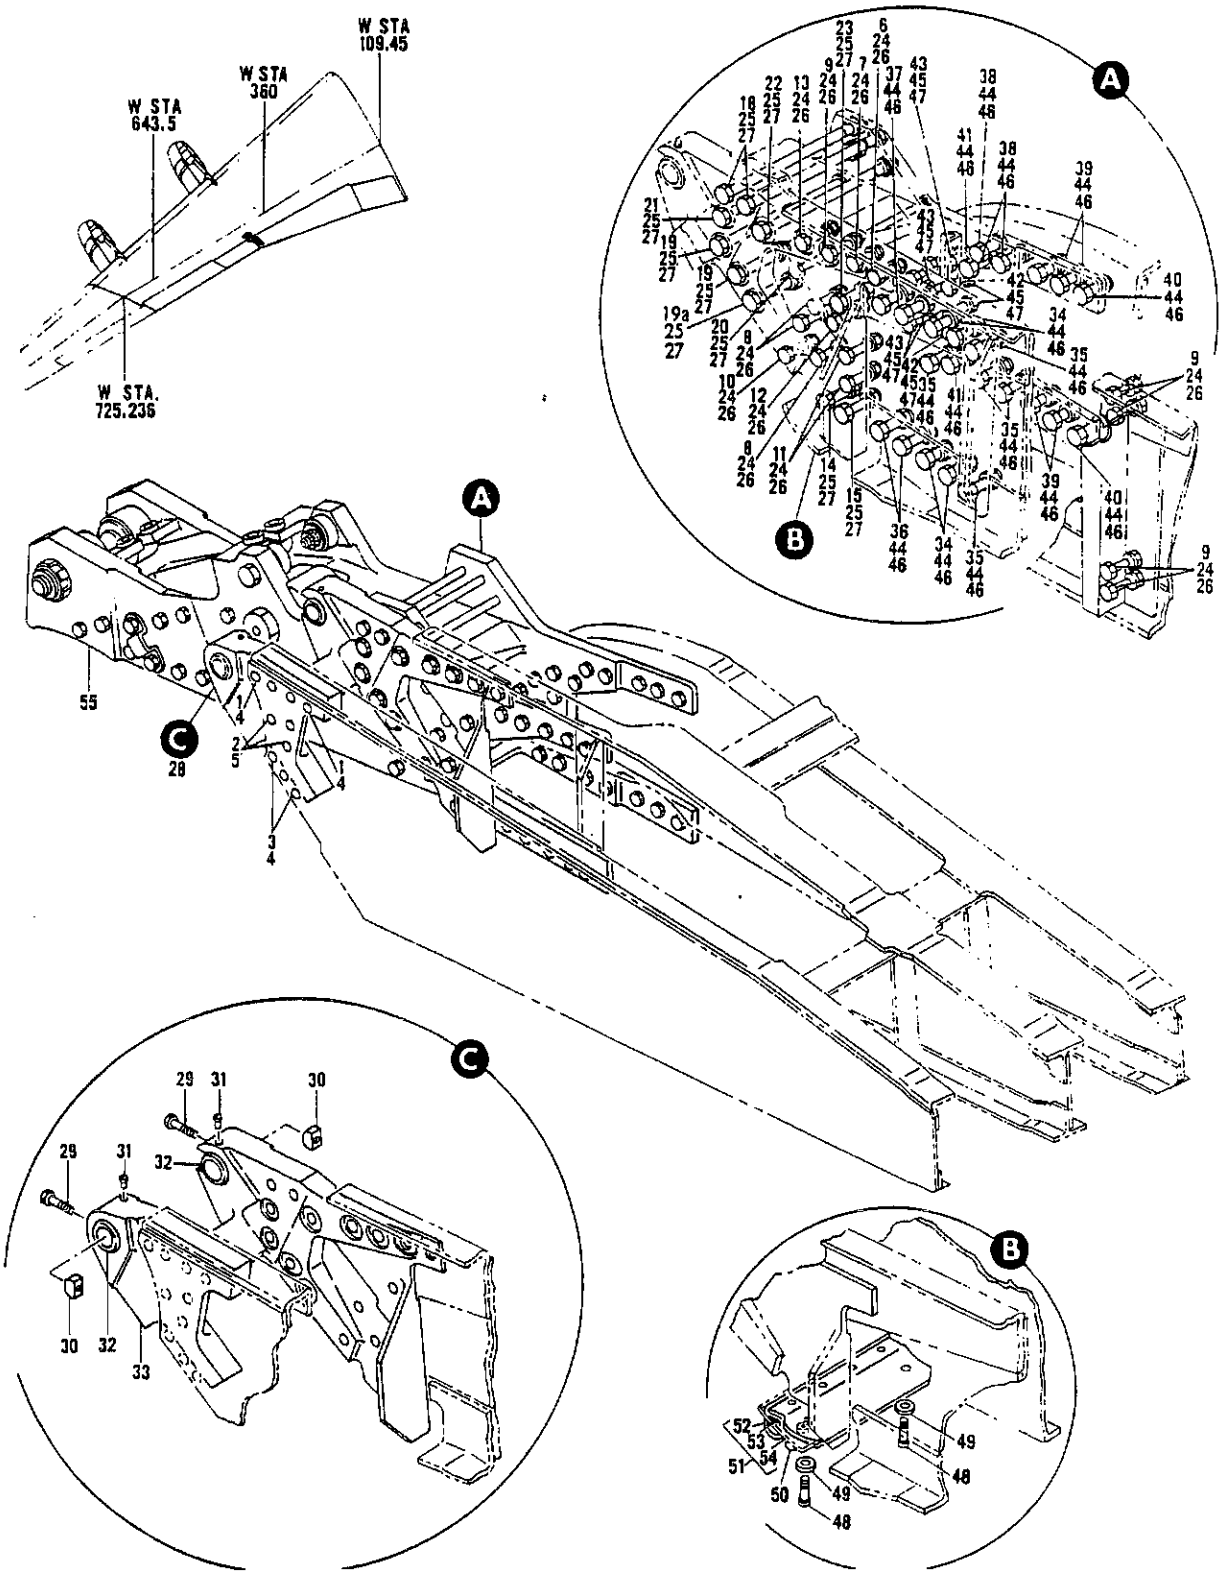


FIGURE 16. RIB INSTL, INBOARD FLAP OUTBOARD ACTUATOR

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	16	65-18660-175	RIB INSTL, INBOARD FLAP OUTBOARD ACTUATOR (LH) (SEE FIG. 12, ITEM 44)		RF
		65-18660-176	RIB INSTL, INBOARD FLAP OUTBOARD ACTUATOR (RH) (SEE FIG. 12, ITEM 44)		RF
	1	BACB30P8-30	. BOLT.		4
	2	BACB30P6-3	. BOLT.		3
	3	BACB30P8-22	. BOLT.		3
	4	NAS1080C8	. COLLAR.		7
	5	NAS1080C6	. COLLAR.		3
	6	NAS1104-8W	. BOLT.		1
	7	NAS1104-10W	. BOLT.		1
	8	NAS1104-11W	. BOLT.		3
	9	NAS1104-12W	. BOLT.		5
	10	NAS1104-14W	. BOLT.		1
	11	NAS1104-15W	. BOLT.		2
	12	NAS1104-16W	. BOLT.		1
	13	NAS334CPA13	. BOLT.		1
	14	NAS1105-15W	. BOLT.		1
	15	NAS1105-16W	. BOLT.		1
	18	NAS1105-24W	. BOLT.		2
	19	NAS1105-90W	. BOLT.		2
	19A	NAS1105-88W	. BOLT.		1
	20	NAS1105-78W	. BOLT.		1
	21	NAS335CPA20	. BOLT.		1
	22	NAS335CPA17	. BOLT.		1
	23	NAS335CPA14	. BOLT.		1
	24	AN960PD416	. WASHER.		15
	25	AN960PD516	. WASHER.		11
	26	NAS679A4W	. NUT		15
	27	NAS679A5W	. NUT		11
R R	28	65-19411-5	. FITTING ASSY, SCREW NUT SUPPORT (LH ONLY) (OPTIONAL 65-19411-11)	0150	1
R R	28	65-19411-11	. FITTING ASSY, SCREW NUT SUPPORT (LH ONLY) (OPTIONAL TO 65-19411-5)	0150	1
R R	28	65-19411-6	. FITTING ASSY, SCREW NUT SUPPORT (RH ONLY) (OPTIONAL 65-19411-12)	0150	1
R R	28	65-19411-12	. FITTING ASSY, SCREW NUT SUPPORT (RH ONLY) (OPTIONAL TO 65-19411-6)	0150	1
R	28	65-19411-11	. FITTING ASSY, SCREW NUT SUPPORT (LH ONLY)	5199	1
R	28	65-19411-12	. FITTING ASSY, SCREW NUT SUPPORT (RH ONLY)	5199	1
	29	BACB30NE4-8	. . BOLT.		2
	30	63-8619-2	. . NUT ASSY, CYLINDRICAL		2
	31	NAS516-1	. . FITTING		2
	32	3-98762-2000	. . BEARING		2
R	33	65-19411-7	. . FITTING, (USED ON 65-19411-5)	0150	1
R	33	65-19411-8	. . FITTING, (USED ON 65-19411-6)	0150	1
	33	65-19411-9	. . FITTING, (USED ON 65-19411-11).		1
	33	65-19411-10	. . FITTING, (USED ON 65-19411-12).		1
	34	NAS1105-8W	. BOLT.		4
	35	NAS1105-10W	. BOLT.		5
	36	NAS1105-11W	. BOLT.		2
	37	NAS335CPA11	. BOLT.		2
	38	NAS335CPA10	. BOLT.		3
	39	NAS1105-6W	. BOLT.		4
	40	NAS1105-9W	. BOLT.		2
	41	NAS1105-12W	. BOLT.		2
	42	NAS1104-7W	. BOLT.		3
	43	NAS1104-10W	. BOLT.		6
	44	AN960PD516	. WASHER.		24
	45	AN960PD416	. WASHER.		9
	46	NAS679A5W	. NUT		24
	47	NAS679A4W	. NUT		9
	48	NAS603-9	. SCREW		2
	49	AN960D10L	. WASHER.		2
	50	65-28928-5	. BLOCK, INBOARD FLAP SEAL PHENOLIC (LH ONLY)		1
	50	65-28928-6	. BLOCK, INBOARD FLAP SEAL PHENOLIC (RH ONLY)		1
	51	65-28784-5	. SEAL ASSY, COVE LIP DOOR FLAP (LH ONLY)		1
	51	65-28784-6	. SEAL ASSY, COVE LIP DOOR FLAP (RH ONLY)		1
	52	65-28784-17	. . SEAL, COVE LIP DOOR FLAP (EXTRUSION NO. BAC1530-2 X 3.90 IN. LG (OPTIONAL EXTRUSION NO. BAC1530-7 X 3.90 IN. LG))		1
			ATTACHING PARTS		
		MS2042685X3	. . RIVET		4

-------*-------

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	16 53	65-28784-23	. . RETAINER, COVE LIP DOOR FLAP SEAL		1
	54	65-28784-31	. . SUPPORT, COVE LIP DOOR FLAP SEAL (LH ONLY). . . .		1
	54	65-28784-32	. . SUPPORT, COVE LIP DOOR FLAP SEAL (RH ONLY). . . .		1
	55	65-20787-17	. CARRIAGE ASSY, (USED ON 65-18660-175) (SEE FIG. 18) . (OPTIONAL 65-20787-23)	0102	1
	55	65-20787-23	. CARRIAGE ASSY, (USED ON 65-18660-175) (SEE FIG. 18) . (OPTIONAL TO 65-20787-17)	0102	1
R R	55	65-20787-29	. CARRIAGE ASSY, (USED ON 65-18660-175) (SEE FIG. 18) . (OPTIONAL TO 65-20787-37)	0350	1
R R R	55	65-20787-37	. CARRIAGE ASSY, (USED ON 65-18660-175) (SEE FIG. 18) . (OPTIONAL 65-20787-29)	0350	1
R	55	65-20787-37	. CARRIAGE ASSY, (USED ON 65-18660-175) (SEE FIG. 18) .	5199	1
	55	65-20787-18	. CARRIAGE ASSY, (USED ON 65-18660-176) (SEE FIG. 18) . (OPTIONAL 65-20787-24)	0102	1
	55	65-20787-24	. CARRIAGE ASSY, (SEE FIG. 18). . . . . (OPTIONAL TO 65-20787-18)	0102	1
R R	55	65-20787-30	. CARRIAGE ASSY, (USED ON 65-18660-176) (SEE FIG. 18) . (OPTIONAL TO 65-20787-38)	0350	1
R R	55	65-20787-38	. CARRIAGE ASSY, (USED ON 65-18660-175) (SEE FIG. 18) . (OPTIONAL 65-20787-30)	0350	1
R	55	65-20787-38	. CARRIAGE ASSY, (USED ON 65-18660-176) (SEE FIG. 18) .	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

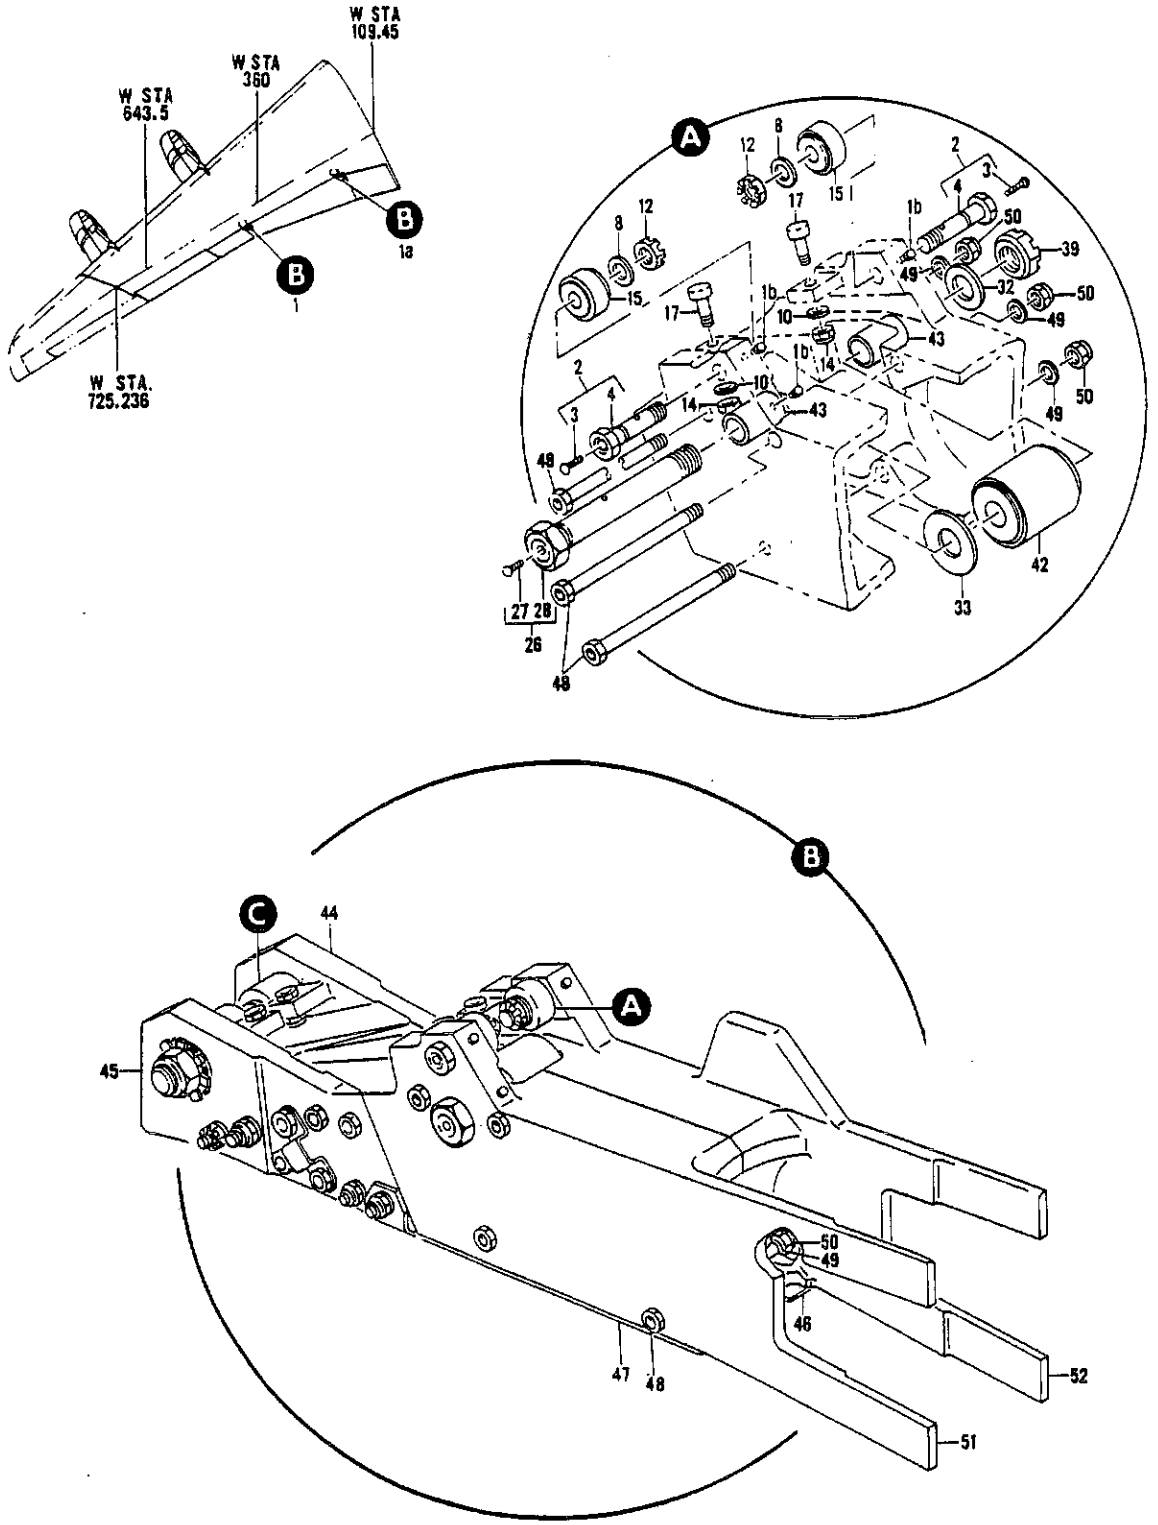


FIGURE 18. CARRIAGE ASSY. INBOARD FLAP (SHEET 1)

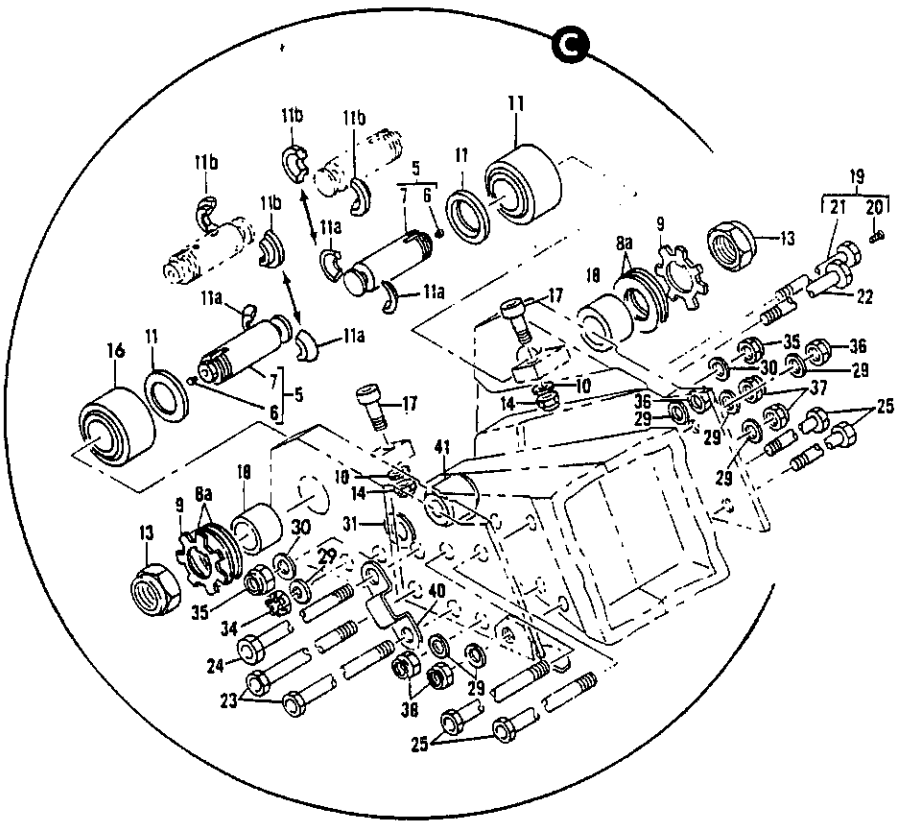


FIGURE 18. CARRIAGE ASSY, INBOARD FLAP (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	18 1	65-20787-17	CARRIAGE ASSY, INBOARD FLAP (LH) (65-20787-11 REWORKED) (SEE FIG. 16, ITEM 55) (OPTIONAL 65-20787-23)	0101	RF
	1	65-20787-23	CARRIAGE ASSY, INBOARD FLAP (LH) (SEE FIG. 16, ITEM 55) (OPTIONAL TO 65-20787-17)	0101	RF
R	1	65-20787-29	CARRIAGE ASSY, INBOARD FLAP (LH) (SEE FIG. 16, ITEM 55)	0350	RF
R			(OPTIONAL TO 65-20787-37)		
R	1	65-20787-37	CARRIAGE ASSY, INBOARD FLAP (LH) (SEE FIG. 16, ITEM 55)	0350	RF
R			(OPTIONAL 65-20787-29)		
R	1	65-20787-37	CARRIAGE ASSY, INBOARD FLAP (LH) (SEE FIG. 16, ITEM 55)	5199	RF
	1	65-20787-18	CARRIAGE ASSY, INBOARD FLAP (RH) (65-20787-12 REWORKED) (SEE FIG. 16, ITEM 55) (OPTIONAL 65-20787-24)	0101	RF
	1	65-20787-24	CARRIAGE ASSY, INBOARD FLAP (RH) (SEE FIG. 16, ITEM 55) (OPTIONAL TO 65-20787-18)	0101	RF
R	1	65-20787-30	CARRIAGE ASSY, INBOARD FLAP (RH) (SEE FIG. 16, ITEM 55)	0350	RF
R			(OPTIONAL TO 65-20787-38)		
R	1	65-20787-38	CARRIAGE ASSY, INBOARD FLAP (RH) (SEE FIG. 16, ITEM 55)	0350	RF
R			(OPTIONAL 65-20787-30)		
R	1	65-20787-38	CARRIAGE ASSY, INBOARD FLAP (RH) (SEE FIG. 16 ITEM 55)	5199	RF
	1A	65-20787-13	CARRIAGE ASSY, INBOARD FLAP (LH) (65-20787-7 REWORKED) (SEE FIG. 13, ITEM 38) (OPTIONAL 65-20787-19)	0102	RF
	1A	65-20787-19	CARRIAGE ASSY, INBOARD FLAP (LH) (SEE FIG. 13, ITEM 38) (OPTIONAL TO 65-20787-13)	0102	RF
R	1A	65-20787-25	CARRIAGE ASSY, INBOARD FLAP (LH) (SEE FIG. 13, ITEM 38)	0350	RF
R	1A	65-20787-39	CARRIAGE ASSY, INBOARD FLAP (LH) (SEE FIG. 13, ITEM 38)	5199	RF
	1A	65-20787-14	CARRIAGE ASSY, INBOARD FLAP (RH) (65-20787-8 REWORKED) (SEE FIG. 13, ITEM 38) (OPTIONAL 65-20787-20)	0102	RF
	1A	65-20787-20	CARRIAGE ASSY, INBOARD FLAP (RH) (SEE FIG. 13, ITEM 38) (OPTIONAL TO 65-20787-14)	0102	RF
R	1A	65-20787-26	CARRIAGE ASSY, INBOARD FLAP (RH) (SEE FIG. 13, ITEM 38)	0350	RF
R	1A	65-20787-40	CARRIAGE ASSY, INBOARD FLAP (RH) (SEE FIG. 13, ITEM 38)	5199	RF
	1B	NAS516-1	. FITTING		3
	2	66-12935-1	. BOLT ASSY, FLAP CARRIAGE BEARING.		2
	3	MS21318-15	. . SCREW		1
	4	66-12935-2	. . BOLT, FLAP CARRIAGE BEARING (OPTIONAL ALTERED FROM NAS1108-24W)		1
	5	69-15413-3	. BOLT ASSY, BEARING (USED ON 65-20787-7, -8, -11, -12, -19, -20, -23 AND -24)	0102	2
R	5	69-15413-5	. BOLT ASSY, BEARING (USED ON 65-20787-25, -26, -29 . .	0350	2
R			-30, -33 AND -34)		
	6	NAS516-1	. . FITTING		1
	7	69-15413-4	. . BOLT, FLAP CARRIAGE BEARING (USED ON 69-15413-3). .	0102	1
R	7	69-15413-6	. . BOLT, BEARING (USED ON 69-15413-5).	0350	1
	8	AN960D816	. WASHER.		2
	8A	AN960PD1416L	. WASHER, (NOT USED ON 65-20787-5, -6, -1 AND -2)		4
	9	NAS460-1416	. WASHER.		2
	10	AN960D516	. WASHER.		4
	11	69-26973-3	. WASHER, FLAP ROLLER (USED WITH 69-26973-1).		2
	11A	69-26973-1	. WASHER ASSY, FLAP ROLLER SPLIT (USED WITH 69-26973-3) (OPTIONAL 66-12934-2)		2
	11A	69-26973-2	. . WASHER, FLAP ROLLER SPLIT HALF (MATCHED PAIR)		2
	11B	66-12934-2	. WASHER, ROLLER SPLIT. (OPTIONAL TO 69-26973-1 WITH 69-26973-3) (FOR SPARES PROCURE 69-26973-1 AND 69-26973-3)		4
	11B	69-26973-1	. WASHER ASSY, ROLLER SPLIT (USED WITH 69-26973-3). (OPTIONAL 66-12934-2)		4
	12	AN320-8	. NUT		2
	13	66-16497-2	. NUT, INBOARD FLAP CARRIAGE (NOT USED ON 65-20787-5, -6, -1 AND -2) (OPTIONAL 66-16497-1)		2
	13	66-16497-1	. NUT, INBOARD FLAP CARRIAGE (NOT USED ON 65-20787-5, -6, -1 AND -2) (OPTIONAL TO 66-16497-2)		2
	14	AN310-5	. NUT		4
	15	BACB10B133	. BEARING		2
	16	BACB10B136	. BEARING		2
	17	BACB10AF5F8HS	. BEARING (OPTIONAL BACB10AF5F9HS WITH AN960D516)		4
	17	BACB10AF5F9HS	. BEARING, (USED WITH AN960D516). (OPTIONAL TO BACB10AF5F8HS)		4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	18 18	NAS75-14-028	. BUSHING, (USED ON 65-20787-1, -2, -5, -6, -7, -8, . . -11, -12, -19, -20, -23 AND -24)	0102	2
R R	18	BACB28Y14C87	. BUSHING, (USED ON 65-20787-25, -26, -29, -30, -33 AND -34)	0350	2
	19	66-12931-1	. BOLT ASSY, FLAP CARRIAGE BEARING.		1
	20	NAS516-1	. . FITTING		1
	21	66-12931-2	. . BOLT, FLAP CARRIAGE BEARING (OPTIONAL ALTERED FROM NAS1106-75W)		1
	22	NAS1307-81W	. BOLT.		1
	23	NAS1306-75W	. BOLT.		2
	24	NAS1307-75W	. BOLT.		1
	25	NAS1106-75W	. BOLT.		4
	26	66-12936-1	. BOLT ASSY, BEARING (USED ON 65-20787-1, -2, -5, -6, . -7, -8, -11, -12, -19, -20, -23 AND -24)	0102	1
R R	26	66-12936-3	. BOLT ASSY, BEARING (USED ON 65-20787-25, -26, -29,. . -30, -33 AND -34)	0350	1
	27	MS21318-27	. . SCREW . . . . . (OPTIONAL MS21318-15)		1
	27	MS21318-15	. . SCREW . . . . . (OPTIONAL TO MS21318-27)		1
	28	66-12936-2	. . BOLT, BEARING (USED ON 66-12936-1).	0102	1
R	28	66-12936-4	. . BOLT, BEARING (USED ON 66-12936-3).	0350	1
	29	AN960D616	. WASHER.		7
	30	AN960D716	. WASHER.		2
	31	63-1566-1	. WASHER, FLAP END CARRIAGE		AR
	32	AN960D1416	. WASHER.		1
	33	63-1566-2	. WASHER, CENTER FLAP END CARRIAGE.		AR
	34	AN320-6	. NUT		1
	35	BACN10B7L	. NUT		2
	36	NAS679A6	. NUT		2
	37	BACN10B-L6L	. NUT		2
	38	NAS1022C6	. NUT		2
	39	AN320-14	. NUT		1
	40	66-12650-1	. CLIP ASSY, INBOARD FLAP CARRIAGE FAIRING SUPPORT. . .		1
	41	BACB10B137	. BEARING		1
	42	BACB10B141	. BEARING		1
	43	NAS75-14-110	. BUSHING, (USED ON 65-20787-1, -2, -5, -6, -7, -8, . . -11, -12, -19, -20, -23 AND -24)	0102	2
R R	43	BACB28Y14C131	. BUSHING, (USED ON 65-20787-25, -26, -29, -30, -33 . . AND -34)	0350	2
	44	65-19822-3	. FITTING, INBOARD FLAP CARRIAGE ROLLER SUPPORT		1
	45	65-19822-4	. FITTING, INBOARD FLAP CARRIAGE ROLLER SUPPORT		1
	46	69-15707-2	. STRIP, RUB (USED ON 65-20787-5, -17, -23, -11, -2,. . -14, -20, -8, -26, -29 AND -34)		1
	47	69-15707-1	. STRIP, RUB (USED ON 65-20787-6, -18, -24, -12, -1,. . -13, -19, -7, -25, -30 AND -33)		1
			ATTACHING PARTS		
		MS20426D5	. RIVET . . . . . -------*-------		6
	48	NAS1105-75W	. BOLT.		4
	49	AN960D516	. WASHER.		4
	50	NAS679A5	. NUT		4
	51	65-18607-9	. CARRIAGE, (USED ON 65-20787-5, -17 AND -11)	0102	1
R	51	65-18607-18	. CARRIAGE, (USED ON 65-20787-23 AND -29)	0150	1
	51	65-18607-10	. CARRIAGE, (USED ON 65-20787-6, -18 AND -12)	0102	1
R	51	65-18607-20	. CARRIAGE, (USED ON 65-20787-24 AND -30)	0150	1
	51	65-18607-3	. CARRIAGE, (USED ON 65-20787-1, -13 AND -7).	0102	1
R	51	65-18607-13	. CARRIAGE, (USED ON 65-20787-19 AND -25)	0150	1
	51	65-18607-4	. CARRIAGE, (USED ON 65-20787-2, -14 AND -8).	0102	1
R	51	65-18607-14	. CARRIAGE, (USED ON 65-20787-20 AND -26)	0150	1
	51	65-18607-31	. CARRIAGE, (USED ON 65-20787-37)	0399	1
	51	65-18607-32	. CARRIAGE, (USED ON 65-20787-38)	0399	1
R	51	65-18607-35	. CARRIAGE, (USED ON 65-20787-39)	5199	1
R	51	65-18607-36	. CARRIAGE, (USED ON 65-20787-40)	5199	1
	52	65-18607-8	. CARRIAGE, (USED ON 65-20787-5, -17 AND -11)	0102	1
R	52	65-18607-19	. CARRIAGE, (USED ON 65-20787-23 AND -29)	0150	1
	52	65-18607-7	. CARRIAGE, (USED ON 65-20787-6, -18 AND -12)	0102	1
R	52	65-18607-17	. CARRIAGE, (USED ON 65-20787-24 AND -30)	0150	1
	52	65-18607-2	. CARRIAGE, (USED ON 65-20787-1, -13 AND -7).	0102	1
R	52	65-18607-12	. CARRIAGE, (USED ON 65-20787-19 AND -25)	0150	1
	52	65-18607-1	. CARRIAGE, (USED ON 65-20787-2, -14 AND -8).	0102	1
R	52	65-18607-11	. CARRIAGE, (USED ON 65-20787-20 AND -26)	0150	1
	52	65-18607-29	. CARRIAGE, (USED ON 65-20787-38)	0399	1
	52	65-18607-30	. CARRIAGE, (USED ON 65-20787-37)	0399	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	18 52	65-18607-33	. CARRIAGE, (USED ON 65-20787-40)	5199	1
R	52	65-18607-34	. CARRIAGE, (USED ON 65-20787-39)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

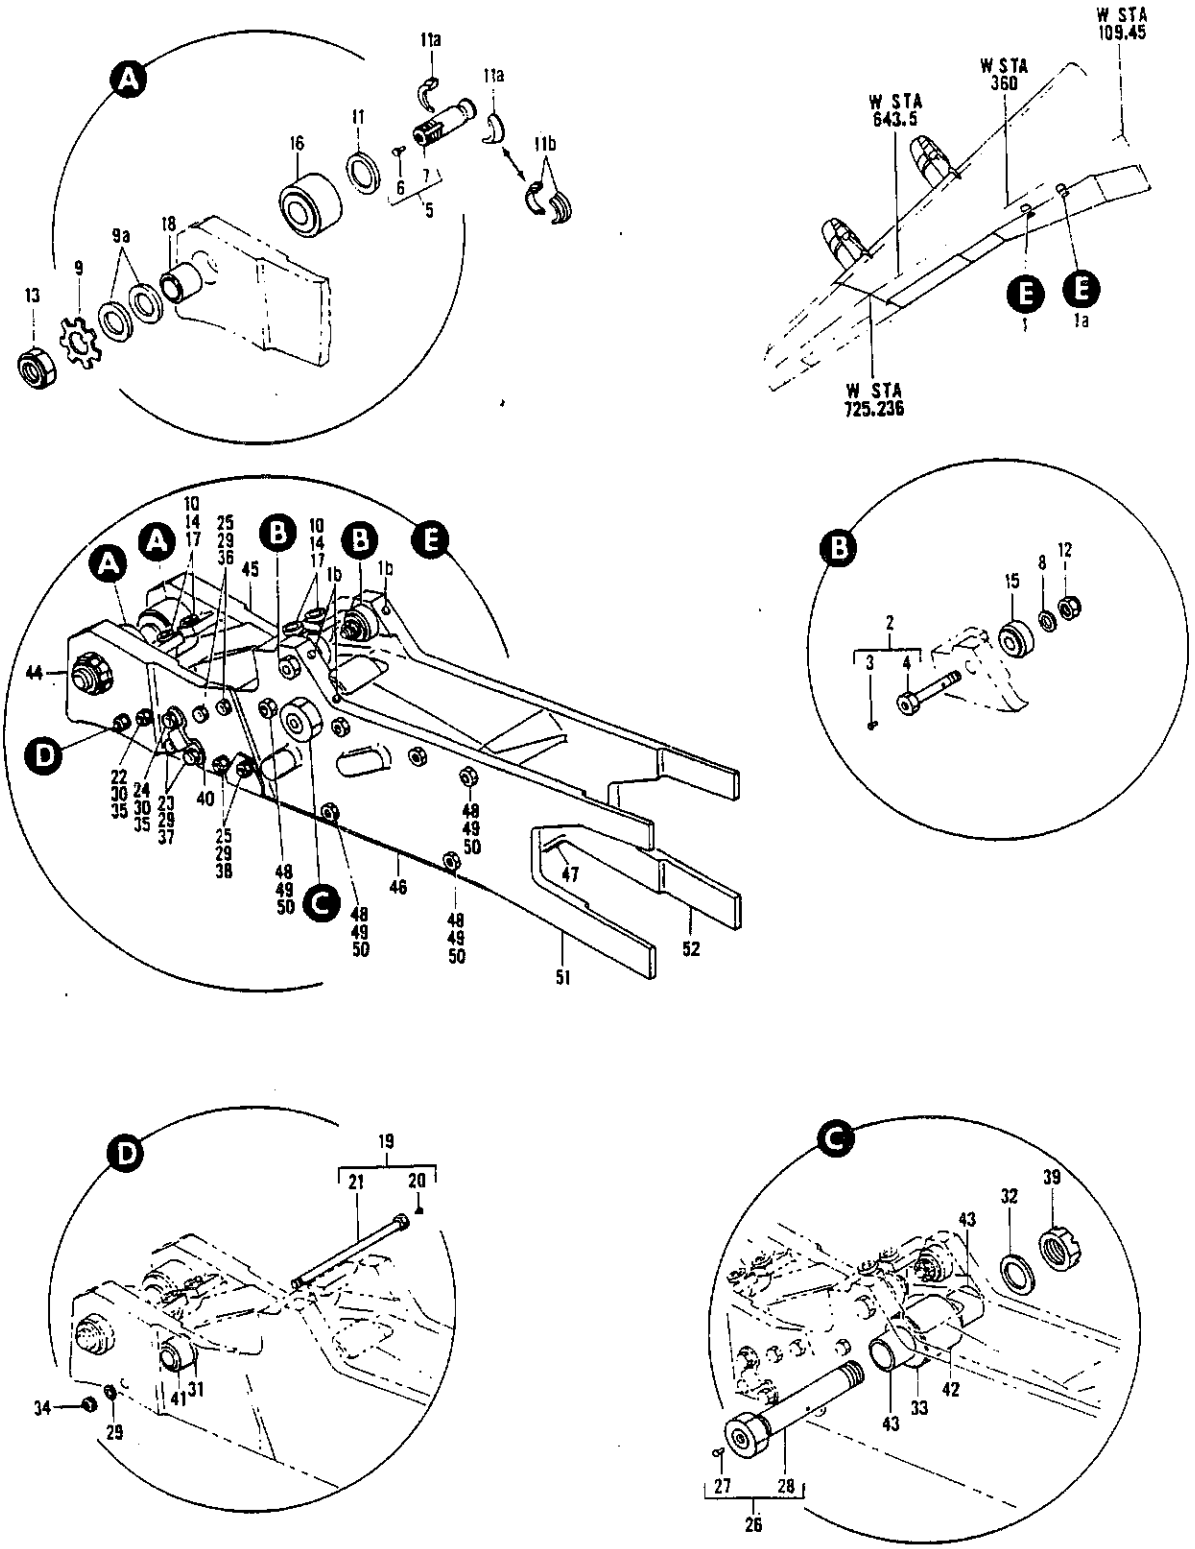


FIGURE 21 CARRIAGE ASSY, INBOARD FLAP CENTER TRACK

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	21 1	65-20787-15	CARRIAGE ASSY, INBOARD FLAP (LH) (65-20787-9 (AFFECTED BY AD 65-15-2) REWORKED) (SEE FIG. 15, ITEM 22) (OPTIONAL 65-20787-21)	0102	RF
	1	65-20787-21	CARRIAGE ASSY, INBOARD FLAP (LH) (SEE FIG. 15, ITEM 22) (OPTIONAL TO 65-20787-15)	0102	RF
R R	1	65-20787-27	CARRIAGE ASSY, INBOARD FLAP (LH) (SEE FIG. 15, ITEM 22) (OPTIONAL TO 65-20787-35)	0350	RF
R R R	1	65-20787-35	CARRIAGE ASSY, INBOARD FLAP (LH) (SEE FIG. 15, ITEM 22) (OPTIONAL 65-20787-27)	0350	RF
R	1	65-20787-35	CARRIAGE ASSY, INBOARD FLAP (LH) (SEE FIG. 15, ITEM 22)	5199	RF
	1	65-20787-16	CARRIAGE ASSY, INBOARD FLAP (RH) (65-20787-10 AFFECTED BY AD 65-15-2) REWORKED) (SEE FIG. 15, ITEM 22) (OPTIONAL 65-20787-22)	0102	RF
	1	65-20787-22	CARRIAGE ASSY, INBOARD FLAP (RH) (SEE FIG. 15, ITEM 22) (OPTIONAL TO 65-20787-16)	0102	RF
R R	1	65-20787-28	CARRIAGE ASSY, INBOARD FLAP (RH) (SEE FIG. 15, ITEM 22) (OPTIONAL TO 65-20787-36)	0350	RF
R R R	1	65-20787-36	CARRIAGE ASSY, INBOARD FLAP (RH) (SEE FIG. 15, ITEM 22) (OPTIONAL 65-20787-28)	0350	RF
R	1	65-20787-36	CARRIAGE ASSY, INBOARD FLAP (RH) (SEE FIG. 15, ITEM 22)	5199	RF
	1A	65-20787-15	CARRIAGE ASSY, INBOARD FLAP (LH) (65-20787-9 (AFFECTED BY AD 65-15-2) REWORKED) (SEE FIG. 14, ITEM 20) (OPTIONAL 65-20787-21)		RF
	1A	65-20787-21	CARRIAGE ASSY, INBOARD FLAP (LH) (SEE FIG. 14, ITEM 20) (OPTIONAL TO 65-20787-15)	0102	RF
	1A	65-20787-15	CARRIAGE ASSY, INBOARD FLAP (LH) (SEE FIG. 14, ITEM 20) (OPTIONAL 65-20787-21)	0102	RF
R R	1A	65-20787-27	CARRIAGE ASSY, INBOARD FLAP (LH) (SEE FIG. 14, ITEM 20) (OPTIONAL TO 65-20787-35)	0350	RF
R R R	1A	65-20787-35	CARRIAGE ASSY, INBOARD FLAP (LH) (SEE FIG. 14, ITEM 20) (OPTIONAL 65-20787-27)	0350	RF
R	1A	65-20787-35	CARRIAGE ASSY, INBOARD FLAP (LH) (SEE FIG. 14, ITEM 20)	5199	RF
	1A	65-20787-16	CARRIAGE ASSY, INBOARD FLAP (RH) (65-20787-10 (AFFECTED BY AD 65-15-2) REWORKED) (SEE FIG. 14, ITEM 20) (OPTIONAL 65-20787-22)		RF
	1A	65-20787-22	CARRIAGE ASSY, INBOARD FLAP (RH) (SEE FIG. 14, ITEM 20) (OPTIONAL TO 65-20787-16)	0102	RF
	1A	65-20787-16	CARRIAGE ASSY, INBOARD FLAP (RH) (SEE FIG. 14, ITEM 20) (OPTIONAL 65-20787-22)	0102	RF
R R	1A	65-20787-28	CARRIAGE ASSY, INBOARD FLAP (RH) (SEE FIG. 14, ITEM 20) (OPTIONAL TO 65-20787-36)	0350	RF
R R R	1A	65-20787-36	CARRIAGE ASSY, INBOARD FLAP (LH) (SEE FIG. 14, ITEM 20) (OPTIONAL 65-20787-28)	0350	RF
R	1A	65-20787-36	CARRIAGE ASSY, INBOARD FLAP (LH) (SEE FIG. 14, ITEM 20)	5199	RF
	1B	NAS516-1	. FITTING		3
	2	66-12935-1	. BOLT ASSY, FLAP CARRIAGE BEARING.		2
	3	MS21318-15	. . SCREW		1
	4	66-12935-2	. . BOLT, FLAP CARRIAGE BEARING (OPTIONAL ALTERED FROM NAS1108-24W)		1
	5	69-15413-3	. BOLT ASSY, BEARING (NOT USED ON 65-20787-3, -4, 65-18653-69 AND -70)	0102	2
	5	69-15413-5	. BOLT ASSY, BEARING.	0399	2
	6	NAS516-1	. . FITTING		1
	7	69-15413-4	. . BOLT, FLAP CARRIAGE BEARING (USED ON 69-15413-3).	0102	1
	7	69-15413-6	. . BOLT, FLAP CARRIAGE BEARING (USED ON 69-15413-5).	0399	1
	8	AN960D816	. WASHER.		2
	9	NAS460-1416	. WASHER.		2
	9A	AN960PD1416L	. WASHER, (NOT USED ON 65-20787-3, -4, 65-18653-69 AND -70)		AR
	10	AN960D516	. WASHER.		4
	11	69-26973-3	. WASHER, FLAP ROLLER (USED WITH 69-26973-1).		2
		69-26973-1	. WASHER ASSY, FLAP ROLLER SPLIT (USED WITH 69-26973-3) (OPTIONAL 66-12934-2)		2
	11A	69-26973-2	. . WASHER, FLAP ROLLER SPLIT HALF (MATCHED PAIR)		2
	11B	66-12934-2	. WASHER, FLAP ROLLER SPLIT (OPTIONAL TO 69-26973-1 WITH 69-26973-3)		4
	12	AN320-8	. NUT		2
	13	66-16497-2	. NUT, INBOARD FLAP CARRIAGE (NOT USED ON 65-20787-3, -4, 65-18653-69 AND -70) (OPTIONAL 66-16497-1)		2
	13	66-16497-1	. NUT, INBOARD FLAP CARRIAGE (NOT USED ON 65-20787-3, -4, 65-18653-69 AND -70) (OPTIONAL TO 66-16497-2)		2
	14	AN310-5	. NUT		4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
21 15	BACB10B133	. BEARING		2
16	BACB10B136	. BEARING		2
17	BACB10AF5F8HS	. BEARING (OPTIONAL BACB10AF5F9HS WITH AN960D516)		4
17	BACB10AF5F9HS	. BEARING, (USED WITH AN960D516). (OPTIONAL TO BACB10AF5F8HS)		4
18	NAS75-14-028	. BUSHING	0102	2
18	BACB28Y14C87	. BUSHING	0399	2
19	66-12931-1	. BOLT ASSY, FLAP CARRIAGE.		1
20	NAS516-1	. . FITTING		1
21	66-12931-2	. . BOLT, FLAP CARRIAGE BEARING (OPTIONAL ALTERED FROM NAS1106-75W)		1
22	NAS1307-81W	. BOLT.		1
23	NAS1306-75W	. BOLT.		2
24	NAS1307-75W	. BOLT.		1
25	NAS1106-75W	. BOLT.		4
26	66-12936-1	. BOLT ASSY, BEARING.	0102	1
26	66-12936-3	. BOLT ASSY, BEARING.	0399	1
27	MS21318-27	. . SCREW		1
28	66-12936-2	. . BOLT, FLAP CARRIAGE BEARING		1
29	AN960D616	. WASHER.		7
30	AN960D716	. WASHER.		2
31	63-1566-1	. WASHER, FLAP END CARRIAGE		AR
32	AN960D1416	. WASHER.		1
33	63-1566-2	. WASHER, CENTER FLAP END CARRIAGE.		AR
34	AN320-6	. NUT		1
35	BACN10B7L	. NUT		2
36	NAS679A6	. NUT		2
37	BACN10B-L6L	. NUT		2
38	NAS1022C6	. NUT		2
39	AN320-14	. NUT		1
40	66-12650-1	. CLIP ASSY, INBOARD FLAP CARRIAGE FAIRING SUPPORT.		1
41	BACB10B137	. BEARING		1
42	BACB10B141	. BEARING		1
43	NAS75-14-110	. BUSHING	0102	2
43	BACB28Y14C131	. BUSHING	0399	2
44	65-19822-3	. FITTING, INBOARD FLAP CARRIAGE ROLLER SUPPORT		1
45	65-19822-4	. FITTING, INBOARD FLAP CARRIAGE ROLLER SUPPORT		1
46	69-15707-1	. STRIP, INBOARD FLAP RUB		1
47	69-15707-2	. STRIP, INBOARD FLAP RUB		1
		ATTACHING PARTS		
	MS20426D5	. RIVET		12
		-------*-------		
48	NAS1105-75W	. BOLT.		6
49	AN960D516	. WASHER.		6
50	NAS679A5	. NUT		6
51	65-18607-5	. CARRIAGE, INBOARD FLAP (NOT USED ON 65-20787-21 AND -22)		1
51	65-18607-15	. CARRIAGE, INBOARD FLAP (USED ON 65-20787-21, -22, -27 AND -28)		1
52	65-18607-6	. CARRIAGE, INBOARD FLAP (NOT USED ON 65-20787-21 AND -22)		1
52	65-18607-16	. CARRIAGE, INBOARD FLAP (USED ON 65-20787-21, -22, -27 AND -28)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

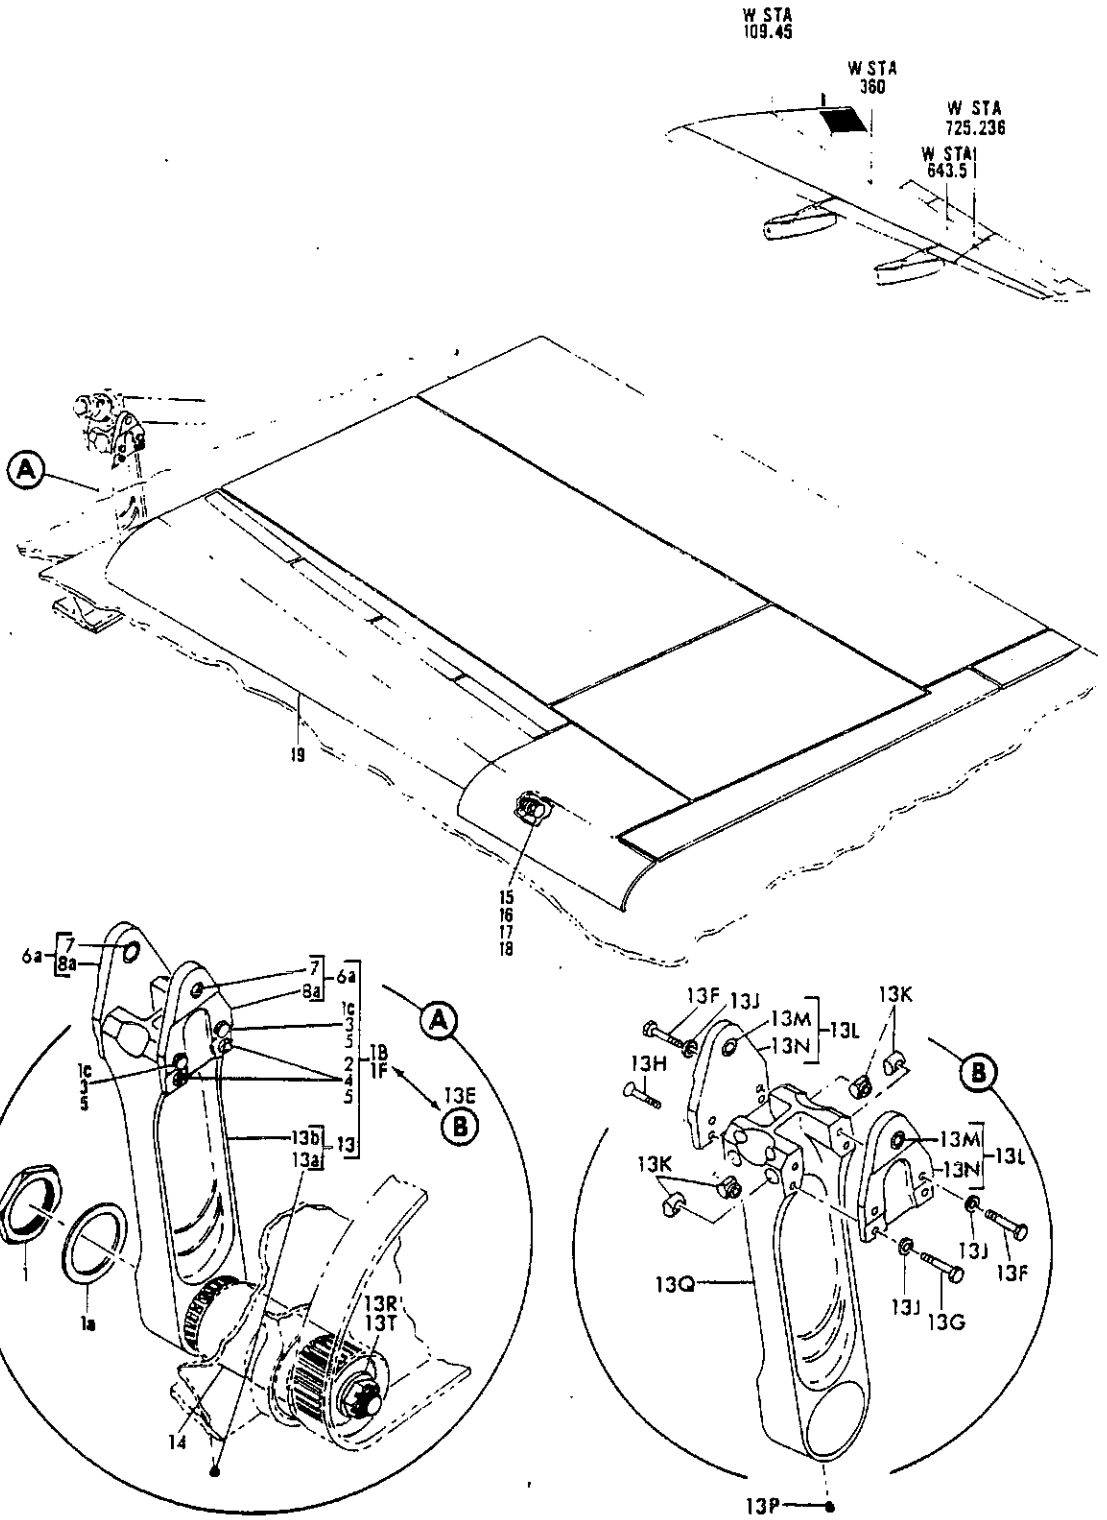


FIGURE 23. FILLET FLAP INSTALLATION

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	23	65-19169-1	FLAP INSTL, FILLET (LH) (SEE 57-1, FIG. 1, ITEM 14) . .	0150	RF
R		65-19169-1	FLAP INSTL, FILLET (LH) (VARIABLE DWG;65-19169-5001). .	5199	RF
R			(SEE 57-1, FIG. 1, ITEM 14)		
R		65-19169-2	FLAP INSTL, FILLET (RH) (SEE 57-1, FIG. 1, ITEM 14) . .	0150	RF
R		65-19169-2	FLAP INSTL, FILLET (RH) (VARIABLE DWG;65-19169-5002). .	5199	RF
R			(SEE 57-1, FIG. 1, ITEM 14)		
	1	BACN10DR48	. NUT		1
	1A	66-11899-1	. RING, FILLET FLAP DRIVE ACTUATOR ARM BACK UP.		1
	1B	65-19169-3	. ARM AND PLATE ASSY, ACTUATOR FILLET FLAP DRIVE. . . .		1
			(OPTIONAL 65-66232-1)		
	1C	NAS1106-78W	. . BOLT, (USED ON 65-19169-3 AND -4)		2
	2	BACB30EL6-74	. . BOLT, (USED ON 65-19169-3 AND -4)		2
	3	AN960PD616	. . WASHER, (USED ON 65-19169-3 AND -4)		2
	4	AN960PD616L	. . WASHER, (USED ON 65-19169-3).		2
	5	NAS679A6	. . NUT, (USED ON 65-19169-3 AND -4).		4
	6A	65-20954-3	. . PLATE ASSY, (USED ON 65-19169-3 AND -4)		2
	7	BACB10S1	. . . BUSHING		1
	8A	65-20954-4	. . . PLATE, (USED ON 65-20954-3)		1
	13	65-56834-1	. . ARM ASSY, DRIVE ACTUATOR.		1
	13A	NAS516-1	. . . FITTING, (USED ON 65-56834-1 AND 65-20953-2). . .		1
	13B	65-56834-2	. . . ARM, (USED ON 65-56834-1)		1
	13E	65-66232-1	. ARM AND PLATE ASSY, ACTUATOR DRIVE.		1
			(OPTIONAL TO 65-19169-3)		
	13F	BACB30NE6-22	. . BOLT, (USED ON 65-66232-1).		4
	13G	BACB30NE6-20	. . BOLT, (USED ON 65-66232-1).		2
	13H	BACB30FB6-20	. . BOLT, (USED ON 65-66232-1).		2
	13J	AN960PD616L	. . WASHER, (USED ON 65-66232-1).		6
	13K	NAS577-6A	. . NUT, (USED ON 65-66232-1)		8
	13L	65-20954-3	. . PLATE ASSY, (USED ON 65-66232-1).		2
	13M	BACB10S1	. . . BUSHING		1
	13N	65-20954-4	. . . PLATE		1
	13P	NAS516-1	. . FITTING, (USED ON 65-66232-1)		1
	13Q	65-66232-2	. . ARM, (USED ON 65-66232-1)		1
	13R	AN320C18	. NUT		1
	13T	AN960PD1816L	. WASHER.		AR
	14	65-20955-1	. SHAFT, FILLET FLAP DRIVE.		1
	15	BACB30NF14D54	. BOLT.		1
	16	AN960PD1416	. WASHER.		1
	17	AN960PD1416L	. WASHER.		1
	18	BACN10JD114	. NUT		1
R	19	65-19198-5	. FLAP ASSY, FILLET (LH ONLY) (SEE FIG. 24)	0150	1
R			(OPTIONAL 65-19198-7)		
R	19	65-19198-7	. FLAP ASSY, FILLET (LH ONLY) (SEE FIG. 24)	0150	1
R			(OPTIONAL TO 65-19198-5)		
R	19	65-19198-7H	. FLAP ASSY, FILLET (LH ONLY) (SEE FIG. 24)	5199	1
R	19	65-19198-6	. FLAP ASSY, FILLET (RH ONLY) (SEE FIG. 24)	0150	1
R			(OPTIONAL 65-19198-8)		
R	19	65-19198-8	. FLAP ASSY, FILLET (RH ONLY) (SEE FIG. 24)	0150	1
R			(OPTIONAL TO 65-19198-6)		
R	19	65-19198-8H	. FLAP ASSY, FILLET (RH ONLY) (SEE FIG. 24)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

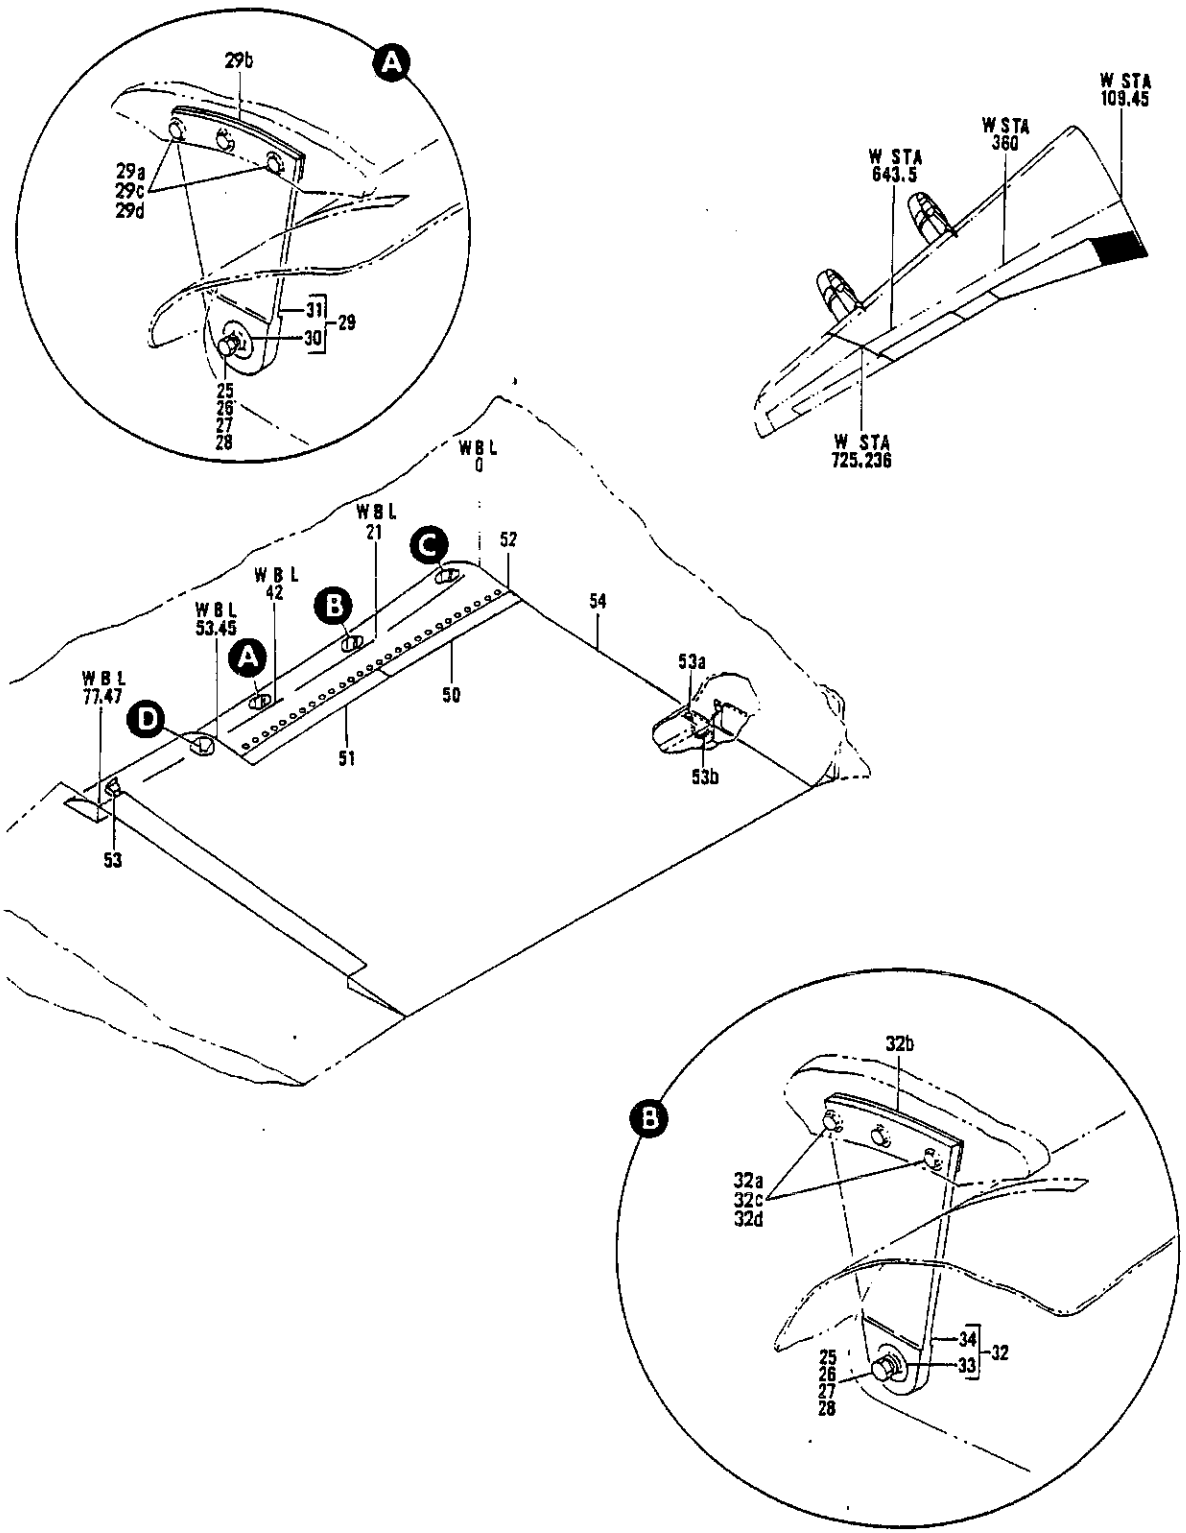


FIGURE 24. FLAP ASSY, FILLET (SHEET 1)

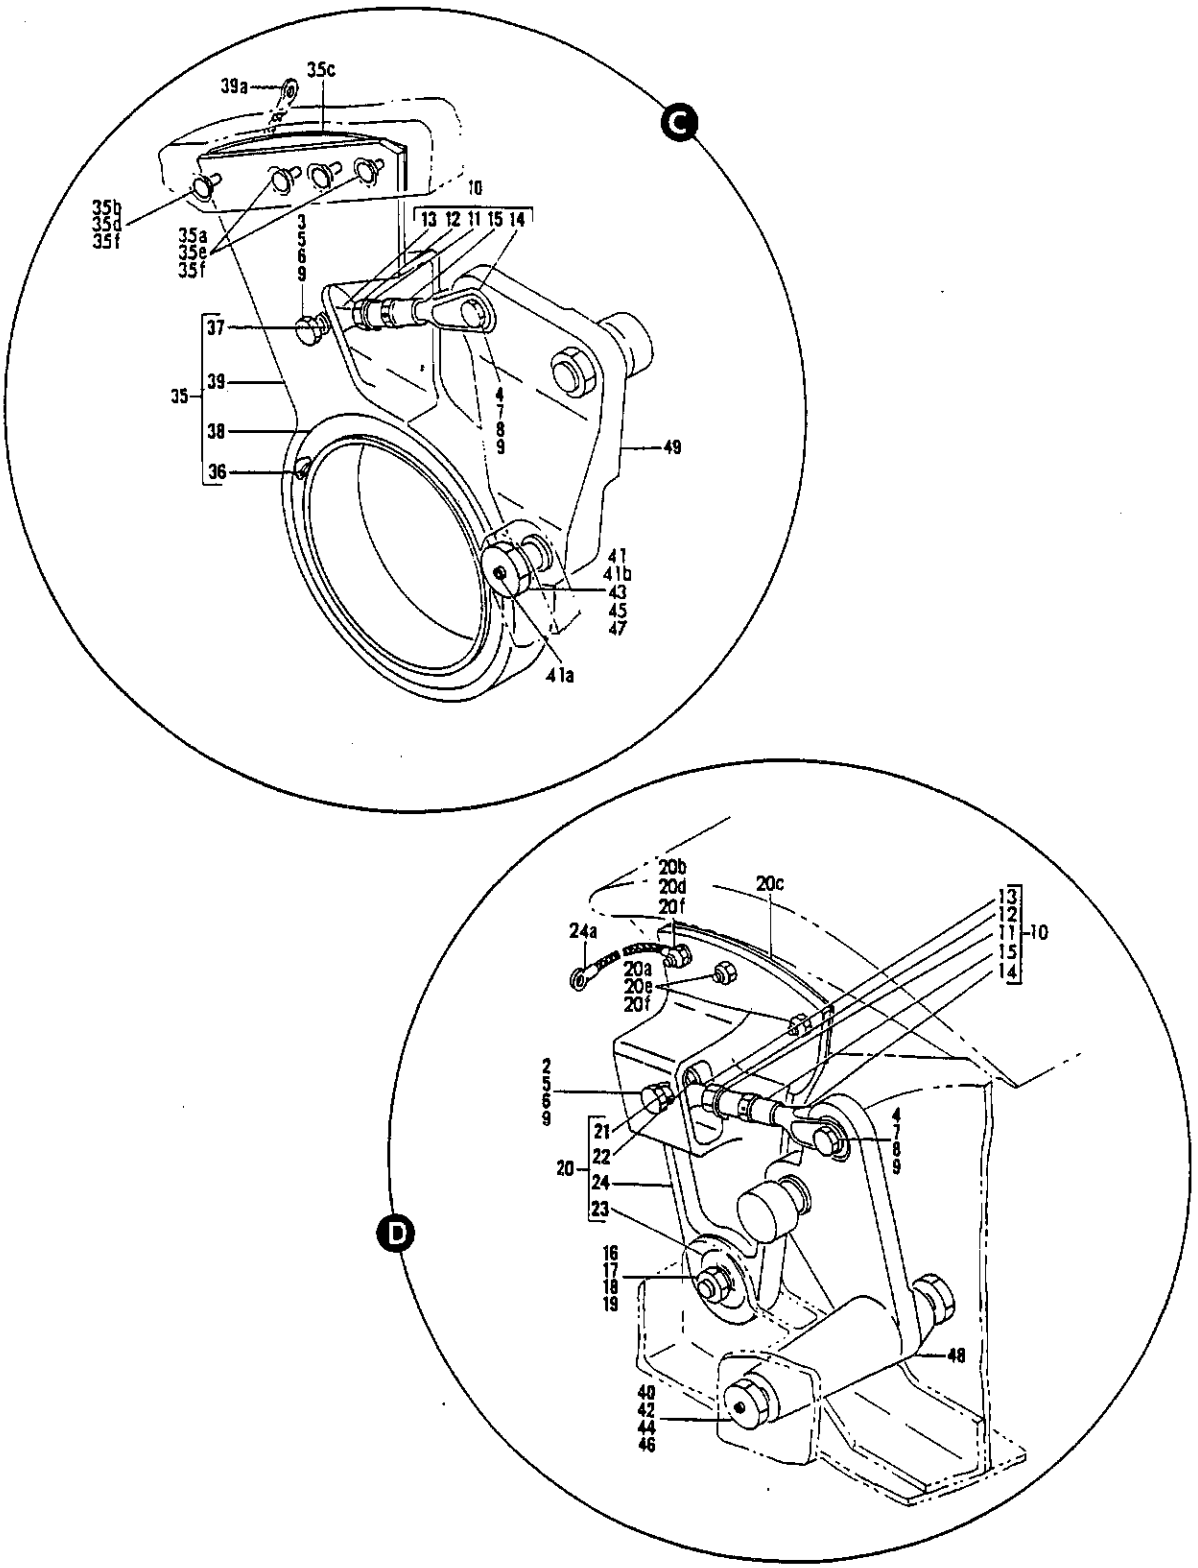


FIGURE 24. FLAP ASSY, FILLET (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	24	65-19198-5	FLAP ASSY, FILLET (LH) (SEE FIG. 23, ITEM 19)	0150	RF
R			(OPTIONAL 65-19198-7)		
R		65-19198-7	FLAP ASSY, FILLET (LH) (SEE FIG. 23, ITEM 19)	0150	RF
R			(OPTIONAL TO 65-19198-5)		
R		65-19198-6	FLAP ASSY, FILLET (RH) (SEE FIG. 23, ITEM 19)	0150	RF
R			(OPTIONAL 65-19198-8)		
R		65-19198-8	FLAP ASSY, FILLET (RH) (SEE FIG. 23, ITEM 19)	0150	RF
R			(OPTIONAL TO 65-19198-6)		
R		65-19198-7H	FLAP ASSY, FILLET (LH) (SEE FIG. 23, ITEM 19)	5199	1
R		65-19198-8H	FLAP ASSY, FILLET (RH) (SEE FIG. 23, ITEM 19)	5199	RF
	2	NAS1104-20DW	. BOLT.		1
	3	NAS1104-17DW	. BOLT.		1
	4	NAS1104-12DW	. BOLT.		2
	5	AN960PD416L	. WASHER.		2
	6	AN960PD416	. WASHER.		2
	7	AN960-416L	. WASHER.		2
	8	AN960-416	. WASHER.		2
	9	AN320C4	. NUT		4
	10	65-19198-3	. LINK ASSY, FILLET FLAP.		2
	11	NAS513-6	. . WASHER.		1
	12	NAS509-6	. . NUT		1
	13	BACB10A446	. . BEARING		1
	14	69-15775-1	. . FORK, FLAPERETTE ACTUATION TURNBUCKLE		1
	15	69-15774-1	. . BARREL, FLAPERETTE ACTUATION TURNBUCKLE		1
	16	NAS1106-19DW	. BOLT.		1
	17	AN960PD616	. WASHER.		1
	18	AN960PD616L	. WASHER.		1
	19	AN320C6	. NUT		1
R	20	65-20957-1	. SUPPORT ASSY, OUTBOARD END FLAPERETTE (LH ONLY)	0150	1
R	20	65-20957-5	. SUPPORT ASSY, OUTBOARD END FLAPERETTE (LH ONLY)	5199	1
R	20	65-20957-2	. SUPPORT ASSY, OUTBOARD END FLAPERETTE (RH ONLY)	0150	1
R	20	65-20957-6	. SUPPORT ASSY, OUTBOARD END FLAPERETTE (RH ONLY)	5199	1
			ATTACHING PARTS		
	20A	NAS1103-9W	. BOLT.		2
	20B	NAS1103-10W	. BOLT.		1
	20C	69-15977-4	. SHIM, FILLET FLAP LAMINATED		AR
	20D	AN960D10L	. WASHER.		1
	20E	NAS1197-10L	. WASHER.		2
	20F	NAS679A3W	. NUT		3
			-------*-------		
	21	NAS538B4P37	. . BUSHING		1
	22	NAS538B4P10	. . BUSHING		1
	23	AN200KS6	. . BUSHING		1
R	24	65-20957-3	. . SUPPORT, OUTBOARD END FLAPERETTE (LH ONLY) (USED ON 65-20957-1)	0150	1
R			(OPTIONAL 65-20957-7)		
R	24	65-20957-7	. . SUPPORT, (LH ONLY) (USED ON 65-20957-1)	0150	1
R			(OPTIONAL TO 65-20957-3)		
R	24	65-20957-4	. . SUPPORT, OUTBOARD END FLAPERETTE (RH ONLY) (USED ON 65-20957-2)	0150	1
R			(OPTIONAL 65-20957-8)		
R	24	65-20957-8	. . SUPPORT, (RH ONLY) (USED ON 65-20957-2)	0150	1
R			(OPTIONAL TO 65-20957-4)		
R	24	65-20957-7	. . SUPPORT, (LH ONLY) (USED ON 65-20957-5)	5199	1
R	24	65-20957-8	. . SUPPORT, (RH ONLY) (USED ON 65-20957-6)	5199	1
	24A	BACJ40K5A5A6	. JUMPER.		1
	25	NAS1105-16DW	. BOLT.		2
	26	AN960PD516	. WASHER.		AR
	27	AN960PD516L	. WASHER.		AR
	28	AN320C5	. NUT		2
	29	69-15968-1	. STRUT ASSY, FLAPERETTE SUPPORT.		1
			ATTACHING PARTS		
	29A	NAS1103-9W	. BOLT.		3
	29B	69-15977-2	. SHIM, FILLET FLAP LAMINATED		AR
	29C	NAS1197-10L	. WASHER.		3
	29D	NAS679A3W	. NUT		3
			-------*-------		
	30	AN200KS5	. . BEARING		1
	31	69-15968-3	. . STRUT, FLAPERETTE SUPPORT		1
	32	69-15969-1	. STRUT ASSY, FLAPERETTE SUPPORT.		1
			ATTACHING PARTS		
	32A	NAS1103-9W	. BOLT.		3
	32B	69-15977-1	. SHIM, FILLET FLAP LAMINATED		AR
	32C	NAS1197-10L	. WASHER.		3


MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	24 32D	NAS679A3W	. NUT		3
			-------*-------		
	33	AN200KS5	. . BEARING		1
	34	69-15969-3	. . STRUT, FLAPERETTE SUPPORT		1
R R	35	65-20956-1	. SUPPORT ASSY, INBOARD END FLAPERETTE (LH ONLY) (USED ON 65-19198-1, -5, -13)	0150	1
	35	65-20956-9	. SUPPORT ASSY, INBOARD END FLAPERETTE (LH ONLY) (USED ON 65-19198-7, -9, -11)		1
R R	35	65-20956-2	. SUPPORT ASSY, INBOARD END FLAPERETTE (RH ONLY) (USED ON 65-19198-2, -6, -14)	0150	1
	35	65-20956-10	. SUPPORT ASSY, INBOARD END FLAPERETTE (RH ONLY) (USED ON 65-19198-8, -10, -12)		1
			ATTACHING PARTS		
	35A	NAS1103-11W	. BOLT.		3
	35B	NAS1103-12W	. BOLT.		1
	35C	69-15977-3	. SHIM, FILLET FLAP LAMINATED		AR
	35D	AN960D10L	. WASHER.		1
	35E	NAS1197-10L	. WASHER.		3
	35F	NAS679A3W	. NUT		4
			-------*-------		
	36	NAS516-1	. . FITTING		1
	37	NAS538B4P15	. . BUSHING		2
	38	BACB10C207H	. . BEARING		1
R	39	65-20956-3	. . SUPPORT, INBOARD END FLAPERETTE (LH ONLY)	0150	1
	39	65-20956-11	. . SUPPORT, INBOARD END FLAPERETTE (LH ONLY)		1
R	39	65-20956-4	. . SUPPORT, INBOARD END FLAPERETTE (RH ONLY)	0150	1
	39	65-20956-12	. . SUPPORT, INBOARD END FLAPERETTE (RH ONLY)		1
	39A	BACJ40K5A5A9	. JUMPER.		1
	40	69-16277-1	. BOLT, FLAPERETTE ACTUATION.		1
	41	69-15781-1	. BOLT ASSY, FLAPERETTE ACTUATION		1
	41A	NAS516-1	. . FITTING		1
	41B	69-15781-2	. . BOLT.		1
	42	AN960PD816	. WASHER.		1
	43	AN960PD1016	. WASHER.		1
	44	AN960PD816L	. WASHER.		1
	45	AN960PD1016L	. WASHER.		1
	46	AN320C8	. NUT		1
	47	AN320C10	. NUT		1
R R	48	65-20959-1	. CRANK ASSY, FLAPERETTE ACTUATION (LH ONLY) (SEE FIG. 26)	0150	1
R R	48	65-20959-5	. CRANK ASSY, FLAPERETTE ACTUATION (LH ONLY) (SEE FIG. 26)	5299	1
R R	48	65-20959-2	. CRANK ASSY, FLAPERETTE ACTUATION (RH ONLY) (SEE FIG. 26)	0150	1
R R	48	65-20959-2	. CRANK ASSY, FLAPERETTE ACTUATION (RH ONLY) (SEE FIG. 26) (OPTIONAL 65-20959-6)	5151	1
R R	48	65-20959-6	. CRANK ASSY, FLAPERETTE ACTUATION (RH ONLY) (SEE FIG. 26) (OPTIONAL TO 65-20959-2)	5151	1
R R	48	65-20959-6	. CRANK ASSY, FLAPERETTE ACTUATION (RH ONLY) (SEE FIG. 26)	5299	1
R R	49	65-20958-1	. CRANK ASSY, FLAPERETTE ACTUATION (LH ONLY) (USED ON 65-19198-1, -5, -13) (SEE FIG. 25)	0150	1
	49	65-20958-5	. CRANK ASSY, FLAPERETTE ACTUATION (LH ONLY) (USED ON 65-19198-7, -9, -11) (SEE FIG. 25)		1
R R	49	65-20958-2	. CRANK ASSY, FLAPERETTE ACTUATION (RH ONLY) (USED ON 65-19198-2, -6, -14) (SEE FIG. 25)	0150	1
	49	65-20958-6	. CRANK ASSY, FLAPERETTE ACTUATION (RH ONLY) (USED ON 65-19198-8, -10, -12) (SEE FIG. 25)		1
		69-33547-5	. TRAILING EDGE INSTL, FLAPERETTE (LH ONLY)		1
		69-33547-6	. TRAILING EDGE INSTL, FLAPERETTE (RH ONLY)		1
	50	69-33546-3	. . TRAILING EDGE, FLAPERETTE (LH ONLY)		1
	50	69-33546-4	. . TRAILING EDGE, FLAPERETTE (RH ONLY)		1
	51	69-33546-5	. . TRAILING EDGE, FLAPERETTE (LH ONLY)		1
	51	69-33546-6	. . TRAILING EDGE, FLAPERETTE (RH ONLY)		1
			ATTACHING PARTS		
		MS20426B4-6	. . RIVET		27
			-------*-------		
R R	52	65-19179-5	. FLAPERETTE, FILLET FLAP INBOARD WING TRAILING EDGE. (LH ONLY)	0150	1
R R	52	65-19179-5H	. FLAPERETTE, FILLET FLAP INBOARD WING TRAILING EDGE. (LH ONLY)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	24 52	65-19179-6	. FLAPERETTE, FILLET FLAP INBOARD WING TRAILING EDGE. (RH ONLY)	0150	1
R	52	65-19179-6H	. FLAPERETTE, FILLET FLAP INBOARD WING TRAILING EDGE. (RH ONLY)	5199	1
R	53	AN7510-1	. PLATE		1
			ATTACHING PARTS		
		BACR15E157C	. RIVET		4
			-------*-------		
	53A	AN960D10L	. WASHER.		1
	53B	BACS40K5A5A5	. JUMPER.		1
	54	65-19176-27	. STRUCTURE ASSY, FILLET FLAP (LH ONLY) (SEE FIG. 28) .		1
	54	65-19176-28	. STRUCTURE ASSY, FILLET FLAP (RH ONLY) (SEE FIG. 28) .		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

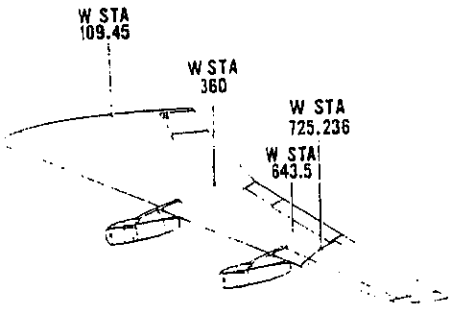

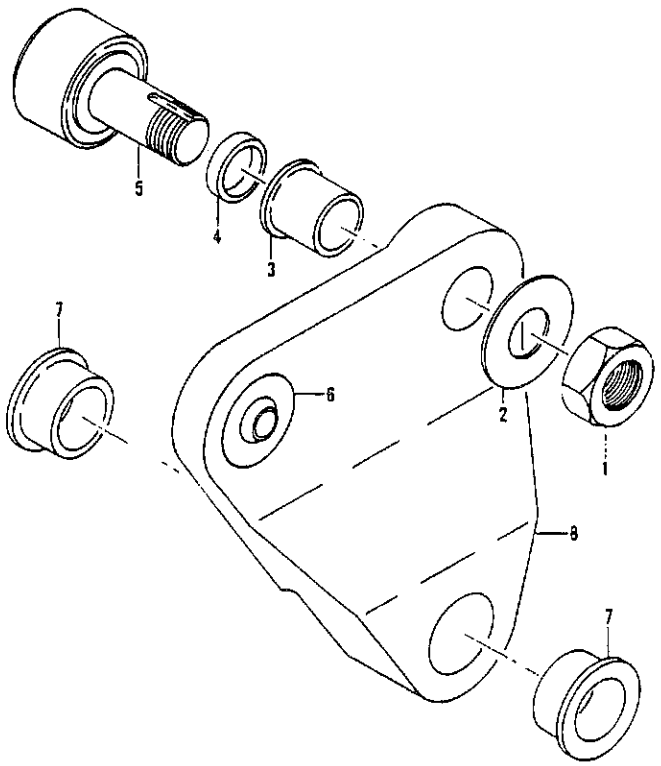
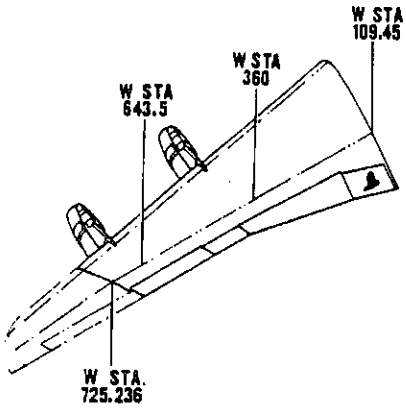


FIGURE 25. CRANK ASSY, FLAPERETTE ACTUATION

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R	25	65-20958-1	CRANK ASSY, FLAPERETTE ACTUATION (LH) (USED ON OPTIONAL FLAP ASSEMBLY 65-19198-5) (SEE FIG. 24, ITEM 49)	0150	RF
R R R		65-20958-2	CRANK ASSY, FLAPERETTE ACTUATION (RH) (USED ON OPTIONAL FLAP ASSEMBLY 65-19198-6) (SEE FIG. 24, ITEM 49)	0150	RF
R R R		65-20958-5	CRANK ASSY, FLAPERETTE ACTUATION (LH) (SEE FIG. 24, . . ITEM 49)	5199	RF
R R R		65-20958-5	CRANK ASSY, FLAPERETTE ACTUATION (LH) (USED ON OPTIONAL FLAP ASSEMBLY 65-19198-7) (SEE FIG. 24, ITEM 49)	0150	RF
R R R		65-20958-6	CRANK ASSY, FLAPERETTE ACTUATION (RH) (SEE FIG. 24, . . ITEM 49)	5199	RF
R R R		65-20958-6	CRANK ASSY, FLAPERETTE ACTUATION (RH) (USED ON OPTIONAL FLAP ASSEMBLY 65-19198-8) (SEE FIG. 24, ITEM 49)	0150	RF
	1	AN316-8R	. NUT		1
	2	NAS460-816	. WASHER.		1
	3	NAS77A8-54P	. BUSHING		1
	4	BACS18AE8-8	. SPACER.		1
	5	BACB10BH64CTK11	. BEARING		1
	6	AN200KS4	. BEARING		1
	7	NAS538B10P40	. BUSHING		2
R R R	8	65-20958-3	. CRANK, FLAPERETTE ACTUATION (LH ONLY) (USED ON. . . . 65-20958-1)	0150	1
R R R	8	65-20958-4	. CRANK, FLAPERETTE ACTUATION (RH ONLY) (USED ON. . . . 65-20958-2)	0150	1
		65-20958-7	. CRANK, FLAPERETTE ACTUATION (LH ONLY) (USED ON. . . . 65-20958-5)		1
		65-20958-8	. CRANK, FLAPERETTE ACTUATION (RH ONLY) (USED ON. . . . 65-20958-6)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



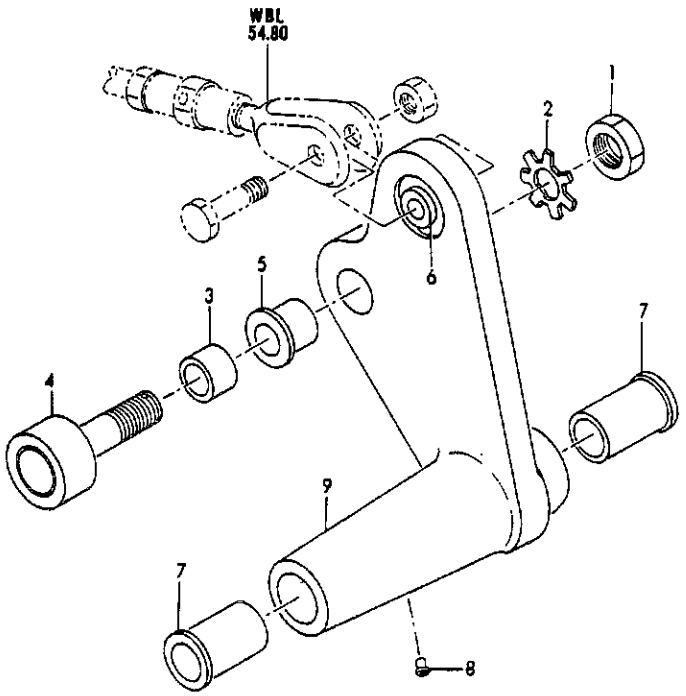


FIGURE 26. CRANK ASSY, FLAPERETTE ACTUATION

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	26	65-20959-1	CRANK ASSY, FLAPERETTE ACTUATION (LH) (SEE FIG. 24, ITEM 48)	0150	RF
R		65-20959-1	CRANK ASSY, FLAPERETTE ACTUATION (LH) (SEE FIG. 24, ITEM 48) (OPTIONAL 65-20959-5)	5151	RF
R		65-20959-5	CRANK ASSY, FLAPERETTE ACTUATION (LH) (SEE FIG. 24, ITEM 48) (OPTIONAL TO 65-20959-1)	5151	RF
R		65-20959-5	CRANK ASSY, FLAPERETTE ACTUATION (LH) (SEE FIG. 24, ITEM 48)	5299	RF
R		65-20959-2	CRANK ASSY, FLAPERETTE ACTUATION (RH) (SEE FIG. 24, ITEM 48)	0150	RF
R		65-20959-2	CRANK ASSY, FLAPERETTE ACTUATION (RH) (SEE FIG. 24, ITEM 48) (OPTIONAL 65-20959-6)	5151	RF
R		65-20959-6	CRANK ASSY, FLAPERETTE ACTUATION (RH) (SEE FIG. 24, ITEM 48) (OPTIONAL TO 65-20959-2)	5151	RF
R		65-20959-6	CRANK ASSY, FLAPERETTE ACTUATION (RH) (SEE FIG. 24, ITEM 48)	5299	RF
	1	AN316-7R	. NUT		1
	2	NAS460-716	. WASHER		1
	3	BACSI8AE8-26	. SPACER		1
	4	BACB10BH62CTK12	. BEARING (OPTIONAL TO BACB10AF7K15H)		1
	4	BACB10AF7K15H	. BEARING (OPTIONAL BACB10BH62CTK12)		1
	5	NAS77A7-49P	. BUSHING		1
	6	AN200KS4	. BEARING		1
	7	NAS538B8P100	. BUSHING		2
	8	NAS516-1	. FITTING		1
R	9	65-20959-3	. CRANK, FLAPERETTE ACTUATION (LH ONLY) (USED ON 65-20959-1)	0150	1
R	9	65-20959-4	. CRANK, FLAPERETTE ACTUATION (RH ONLY) (USED ON 65-20959-2)	0150	1
R	9	65-20959-7	. CRANK, (LH ONLY) (USED ON 65-20959-5)	5199	1
R	9	65-20959-8	. CRANK, (RH ONLY) (USED ON 65-20959-6)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

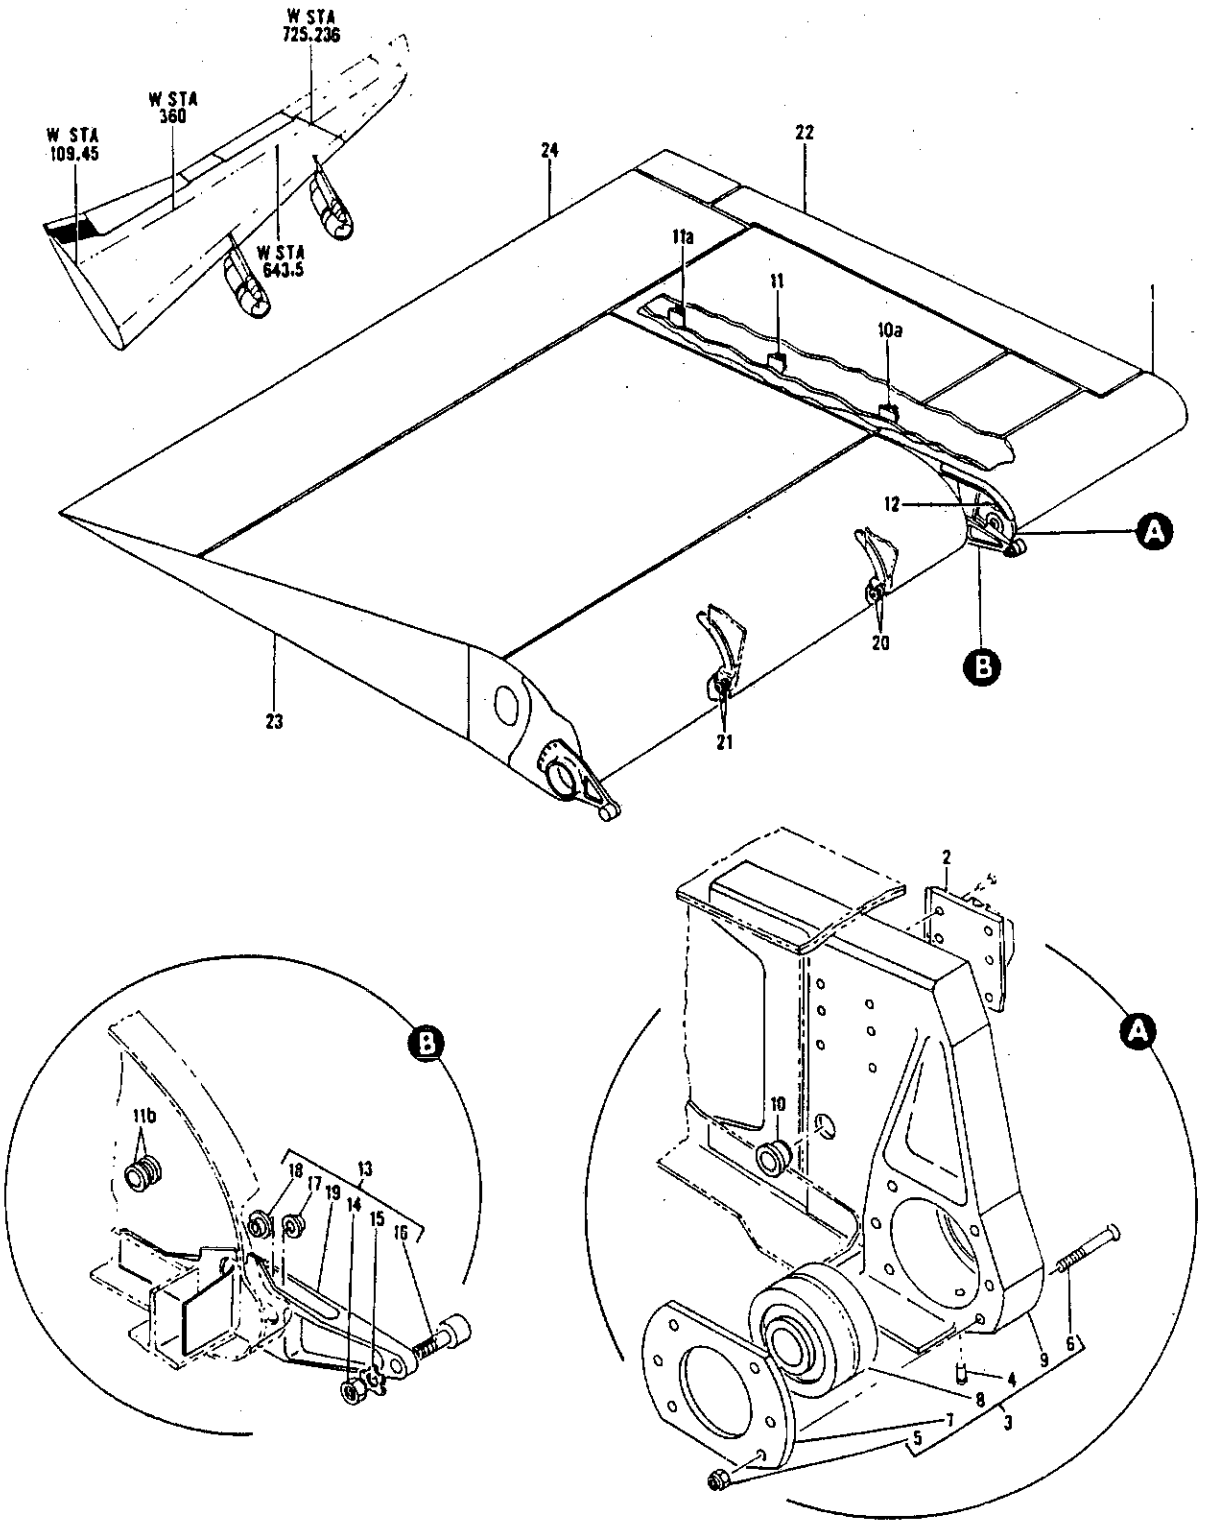


FIGURE 28. STRUCTURE ASSY, FILLET FLAP

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	28	65-19176-27	STRUCTURE ASSY, FILLET FLAP (LH) (SEE FIG. 24, ITEM . . 54)		RF
		65-19176-28	STRUCTURE ASSY, FILLET FLAP (RH) (SEE FIG. 24, ITEM . . 54)		RF
	1	65-19191-131	. NOSE INSTL, OUTBOARD FILLET FLAP (LH ONLY) (SEE FIG. 73)		1
	1	65-19191-132	. NOSE INSTL, OUTBOARD FILLET FLAP (RH ONLY) (SEE FIG. 73)		1
		65-19189-1	. RIB INSTL, WING BUTTOCK LINE 58 FILLET FLAP (LH ONLY)		1
		65-19189-2	. RIB INSTL, WING BUTTOCK LINE 58 FILLET FLAP (RH ONLY)		1
	2	69-15978-3	. . SUPPORT ASSY, FILLET FLAP ACTUATOR SEAL SPRING (LH ONLY)		1
	2	69-15978-4	. . SUPPORT ASSY, FILLET FLAP ACTUATOR SEAL SPRING (RH ONLY)		1
R R R	3	65-22490-1	. . FITTING ASSY, WING BUTTOCK LINE 58 RIB FILLET FLAP HINGE (LH ONLY) (OPTIONAL 65-22490-5)	0150	1
R R R	3	65-22490-2	. . FITTING ASSY, WING BUTTOCK LINE 58 RIB FILLET FLAP HINGE (RH ONLY) (OPTIONAL 65-22490-6)	0150	1
R R R	3	65-22490-5	. . FITTING ASSY, WING BUTTOCK LINE 58 RIB FILLET FLAP HINGE (LH ONLY) (OPTIONAL TO 65-22490-1)	0150	1
R R R	3	65-22490-6	. . FITTING ASSY, WING BUTTOCK LINE 58 RIB FILLET FLAP HINGE (RH ONLY) (OPTIONAL TO 65-22490-2)	0150	1
R R R	3	65-22490-5	. . FITTING ASSY, WING BUTTOCK LINE 58 RIB FILLET FLAP HINGE (LH ONLY)	5199	1
R R	3	65-22490-6	. . FITTING ASSY, WING BUTTOCK LINE 58 RIB FILLET FLAP HINGE (RH ONLY)	5199	1
	4	NAS516-1	. . . FITTING		1
	5	BACN10A02	. . . NUT		6
	6	BACB30LU3-23	. . . BOLT		6
	7	69-16341-1	. . . PLATE, WING BUTTOCK LINE 58 RIB FILLET FLAP BEARING RETAINER (LH ONLY)		1
	7	69-16341-2	. . . PLATE, WING BUTTOCK LINE 58 RIB FILLET FLAP BEARING RETAINER (RH ONLY)		1
	8	BACB10C99AYT	. . . BEARING (OPTIONAL BACB10C99AHT)		1
	8	BACB10C99AHT	. . . BEARING (OPTIONAL TO BACB10C99AYT)		1
R R R	9	65-22490-3	. . . FITTING, WING BUTTOCK LINE 58 RIB FILLET FLAP HINGE (LH ONLY) (USED ON 65-22490-1)	0150	1
R R R	9	65-22490-4	. . . FITTING, WING BUTTOCK LINE 58 RIB FILLET FLAP HINGE (RH ONLY) (USED ON 65-22490-2)	0150	1
	9	65-22490-7	. . . FITTING, WING BUTTOCK LINE 58 RIB FILLET FLAP HINGE (LH ONLY) (USED ON 65-22490-5)		1
	9	65-22490-8	. . . FITTING, WING BUTTOCK LINE 58 RIB FILLET FLAP HINGE (RH ONLY) (USED ON 65-22490-6)		1
	10	NAS538B8P25	. . BUSHING		1
	10A	65-21944-3	. . FITTING, FILLET FLAP SEAL ACTUATOR ATTACH (LH ONLY)		1
	10A	65-21944-4	. . FITTING, FILLET FLAP SEAL ACTUATOR ATTACH (RH ONLY)		1
	11	65-21944-7	. . FITTING, FILLET FLAP SEAL ACTUATOR ATTACH (LH ONLY)		1
	11	65-21944-8	. . FITTING, FILLET FLAP SEAL ACTUATOR ATTACH (RH ONLY)		1
			ATTACHING PARTS		
		BACB30N6-5	. . BOLT		AR
		NAS1080C6	. . COLLAR		AR
		MS20470D5	. . RIVET		AR
			-------*-------		
		65-19188-1	. RIB INSTL, WING BUTTOCK LINE 53.80 FILLET FLAP (LH. . ONLY)		1
		65-19188-2	. RIB INSTL, WING BUTTOCK LINE 53.80 FILLET FLAP (RH. . ONLY)		1
	11B	NAS538B8P12	. . BUSHING		2
	12	10-60120-44	. . SEAL, FABRIC COVERED AERODYNAMIC		1
	13	65-18459-1	. . ARM ASSY, OUTBOARD COVE LIP DOOR ACTUATOR (LH ONLY)		1
	13	65-18459-2	. . ARM ASSY, OUTBOARD COVE LIP DOOR ACTUATOR (RH ONLY)		1
	14	AN316-8R	. . . NUT		1
	15	NAS460-816	. . . WASHER		1
	16	BACB10BH69CTK9	. . . BEARING		1
	17	NAS538B6P23	. . . BUSHING		1
	18	NAS538B6P12	. . . BUSHING		1
	19	65-18459-3	. . . ARM, OUTBOARD COVE LIP DOOR ACTUATOR (LH ONLY). .		1
	19	65-18459-4	. . . ARM, OUTBOARD COVE LIP DOOR ACTUATOR (RH ONLY). .		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
28	65-19186-1	. RIB INSTL, WING BUTTOCK LINE 42 FILLET FLAP (LH ONLY)		1
	65-19186-2	. RIB INSTL, WING BUTTOCK LINE 42 FILLET FLAP (RH ONLY)		1
20	NAS77A5-10P	. . BUSHING		2
	65-19183-1	. RIB INSTL, WING BUTTOCK LINE 21.0 FILLET FLAP (LH . . ONLY)		1
	65-19183-2	. RIB INSTL, WING BUTTOCK LINE 21.0 FILLET FLAP (RH . . ONLY)		1
21	NAS77A5-10P	. . BUSHING		2
22	65-19197-1	. SEAL INSTL, FILLET FLAP OUTBOARD END LH (LH ONLY) . . (SEE FIG. 29)		1
22	65-19197-2	. SEAL INSTL, FILLET FLAP OUTBOARD END RH (RH ONLY) . . (SEE FIG. 29)		1
23	65-19180-1	. RIB INSTL, WING BUTTOCK LINE 1.0 FILLET FLAP (LH. . . ONLY) (SEE FIG. 71)		1
23	65-19180-2	. RIB INSTL, WING BUTTOCK LINE 1.0 FILLET FLAP (RH. . . ONLY) (SEE FIG. 71)		1
	65-19196-1	. TRAILING EDGE INSTL, FILLET FLAP (LH ONLY).		1
	65-19196-2	. TRAILING EDGE INSTL, FILLET FLAP (RH ONLY).		1
24	65-19196-67	. . TRAILING EDGE ASSY, FILLET FLAP (LH ONLY)		1
24	65-19196-68	. . TRAILING EDGE ASSY, FILLET FLAP (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

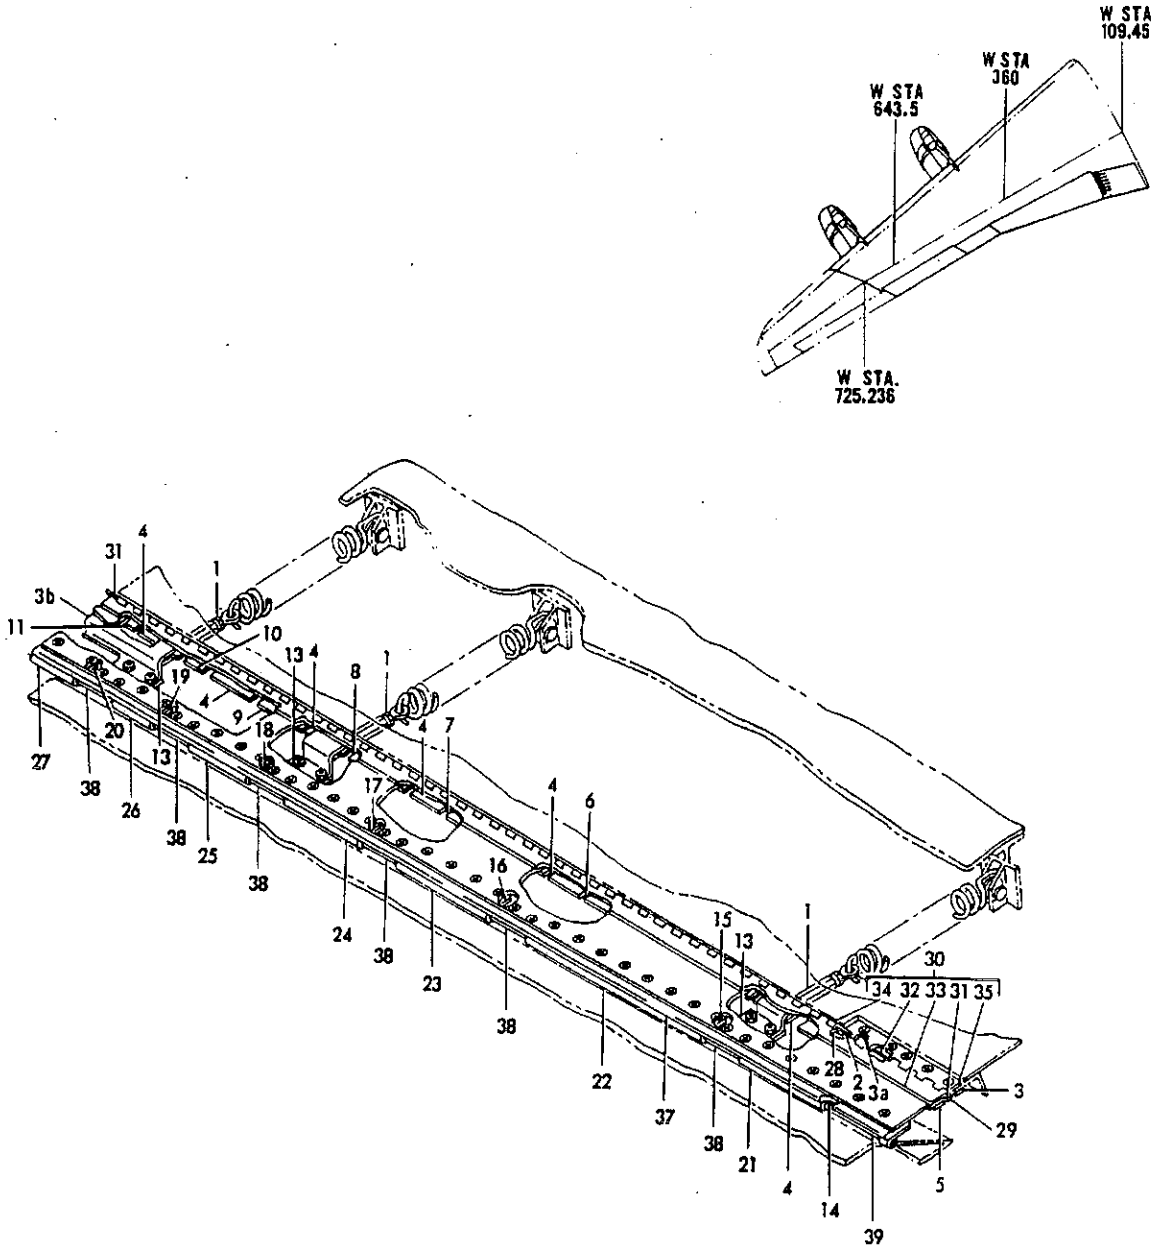


FIGURE 29. SEAL INSTL, FILLET FLAP OUTBOARD END

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
29	65-19197-1	SEAL INSTL, FILLET FLAP OUTBOARD END LH (SEE FIG. 27, ITEM 21 AND FIG. 28, ITEM 22)		RF
	65-19197-2	SEAL INSTL, FILLET FLAP OUTBOARD END RH (SEE FIG. 27, ITEM 21 AND FIG. 28, ITEM 22)		RF
1	65-19589-1	. ACTUATOR INSTL, FILLET FLAP SEAL LH (LH ONLY) (SEE 27-7, FIG. 46)		3
1	65-19589-2	. ACTUATOR INSTL, FILLET FLAP SEAL RH (RH ONLY) (SEE 27-7, FIG. 46)		3
2	65-19197-5	. RETAINER, FILLET FLAP OUTBOARD END SEAL		1
		ATTACHING PARTS		
	NAS1103-4	. BOLT		26
		-------*-------		
3	65-19197-6	. RETAINER, FILLET FLAP OUTBOARD END SEAL		1
		ATTACHING PARTS		
	NAS517-3-3	. SCREW		5
	NAS679A3W	. NUT		5
		-------*-------		
3A	65-19197-37	. FILLER, FILLET FLAP OUTBOARD END SEAL		1
3B	65-19197-3	. SEAL ASSY, FILLET FLAP OUTBOARD END (LH ONLY)		1
3B	65-19197-4	. SEAL ASSY, FILLET FLAP OUTBOARD END (RH ONLY)		1
4	65-19197-25	. . RETAINER, FILLET FLAP OUTBOARD END SEAL		6
5	65-19197-26	. . RETAINER, FILLET FLAP OUTBOARD END SEAL		1
6	65-19197-27	. . RETAINER, FILLET FLAP OUTBOARD END SEAL		1
7	65-19197-28	. . RETAINER, FILLET FLAP OUTBOARD END SEAL		1
8	65-19197-29	. . RETAINER, FILLET FLAP OUTBOARD END SEAL		1
9	65-19197-30	. . RETAINER, FILLET FLAP OUTBOARD END SEAL		1
10	65-19197-31	. . RETAINER, FILLET FLAP OUTBOARD END SEAL		1
11	65-19197-32	. . RETAINER, FILLET FLAP OUTBOARD END SEAL		1
		ATTACHING PARTS		
	MS20426D5	. . RIVET		51
		-------*-------		
13	69-15392-2	. . SUPPORT, FILLET FLAP OUTBOARD SEAL ACTUATOR		3
		ATTACHING PARTS		
	NAS1103-3W	. . BOLT		6
	NAS333CPA4	. . BOLT		6
	AN960PD10	. . WASHER		12
	NAS679A3W	. . NUT		12
		-------*-------		
14	65-19197-35	. . RETAINER, FILLET FLAP OUTBOARD END SEAL		1
15	65-19197-18	. . RETAINER, FILLET FLAP OUTBOARD END SEAL		1
16	65-19197-19	. . RETAINER, FILLET FLAP OUTBOARD END SEAL		1
17	65-19197-20	. . RETAINER, FILLET FLAP OUTBOARD END SEAL		1
18	65-19197-21	. . RETAINER, FILLET FLAP OUTBOARD END SEAL		1
19	65-19197-22	. . RETAINER, FILLET FLAP OUTBOARD END SEAL		1
		ATTACHING PARTS		
	NAS517-2-3	. . SCREW		27
	NAS679A08W	. . NUT		27
		-------*-------		
21	65-19197-41	. . SEAL, FILLET FLAP OUTBOARD END (EXTRUSION NO. BAC1530-20 X 5.30 IN. LG)		1
22	65-19197-42	. . SEAL, FILLET FLAP OUTBOARD END (EXTRUSION NO. BAC1530-20 X 11.00 IN. LG)		1
23	65-19197-43	. . SEAL, FILLET FLAP OUTBOARD END (EXTRUSION NO. BAC1530-20 X 5.90 IN. LG)		1
24	65-19197-44	. . SEAL, FILLET FLAP OUTBOARD END (EXTRUSION NO. BAC1530-20 X 4.70 IN. LG)		1
25	65-19197-45	. . SEAL, FILLET FLAP OUTBOARD END (EXTRUSION NO. BAC1530-20 X 3.80 IN. LG)		1
26	65-19197-46	. . SEAL, FILLET FLAP OUTBOARD END (EXTRUSION NO. BAC1530-20 X 2.30 IN. LG)		1
28	65-19197-24	. . SEAL, FILLET FLAP OUTBOARD END FORWARD		1
29	65-19197-36	. . SEAL, FILLET FLAP OUTBOARD END AFT		1
30	69-15390-1	. . HINGE ASSY, FILLET FLAP OUTBOARD SEAL (LH ONLY)		1
30	69-15390-2	. . HINGE ASSY, FILLET FLAP OUTBOARD SEAL (RH ONLY)		1
31	NAS561C2-3	. . . PIN		2
32	69-15390-17	. . . PIN, FILLET FLAP OUTBOARD SEAL HINGE (ALTERED FROM MS20253P2-5400)		1
33	69-15390-11	. . . HINGE, FILLET FLAP OUTBOARD SEAL HALF (ALTERED FROM MS20001P6-5400) (LH ONLY)		1
33	69-15390-12	. . . HINGE, FILLET FLAP OUTBOARD SEAL HALF (ALTERED FROM MS20001P6-5400) (RH ONLY)		1
34	69-15390-13	. . . HINGE, FILLET FLAP OUTBOARD SEAL HALF (ALTERED FROM MS20001P6-5400) (LH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
29 34	69-15390-14	. . . HINGE, FILLET FLAP OUTBOARD SEAL HALF (ALTERED. FROM MS20001P6-5400) (RH ONLY)		1
35	69-15390-19	. . . HINGE, FILLET FLAP OUTBOARD SEAL HALF (ALTERED. FROM MS20001P10-700) (LH ONLY)		1
35	69-15390-20	. . . HINGE, FILLET FLAP OUTBOARD SEAL HALF (ALTERED. FROM MS20001P10-700) (RH ONLY)		1
37	65-19197-9	. . EDGE, FILLET OUTBOARD END SEAL (EXTRUSION NO. BAC1522-122 X 53.0 IN. LG) (OPTIONALS 65-19197-38, -39, -40)		1
37	65-19197-38	. . EDGE, FILLET FLAP OUTBOARD END SEAL . . . . . (OPTIONAL TO 65-19197-9 (EXTRUSION NO. BAC1522-122 X 53.0 IN. LG))		1
37	65-19197-39	. . EDGE, FILLET FLAP OUTBOARD END SEAL . . . . . (OPTIONAL TO 65-19197-9 (EXTRUSION NO. BAC1522-122 X 53.0 IN. LG))		1
37	65-19197-40	. . EDGE, FILLET FLAP OUTBOARD END SEAL . . . . . (OPTIONAL TO 65-19197-9 (EXTRUSION NO. BAC1522-122 X 53.0 IN. LG))		1
		ATTACHING PARTS		
	MS20426B5	. . RIVET		23
		-------*-------		
38	66-13254-1	. . BLOCK, FILLET FLAP OUTBOARD SEAL RUB.		6
39	66-16778-1	. . BLOCK, FILLET FLAP OUTBOARD SEAL RUB (LH ONLY). . .		1
39	66-16778-2	. . BLOCK, FILLET FLAP OUTBOARD SEAL RUB (RH ONLY). . .		1
		ATTACHING PARTS		
	NAS517-3-3	. . SCREW		14
	AN960C10L	. . WASHER.		14
	NAS679A3W	. . NUT		14
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

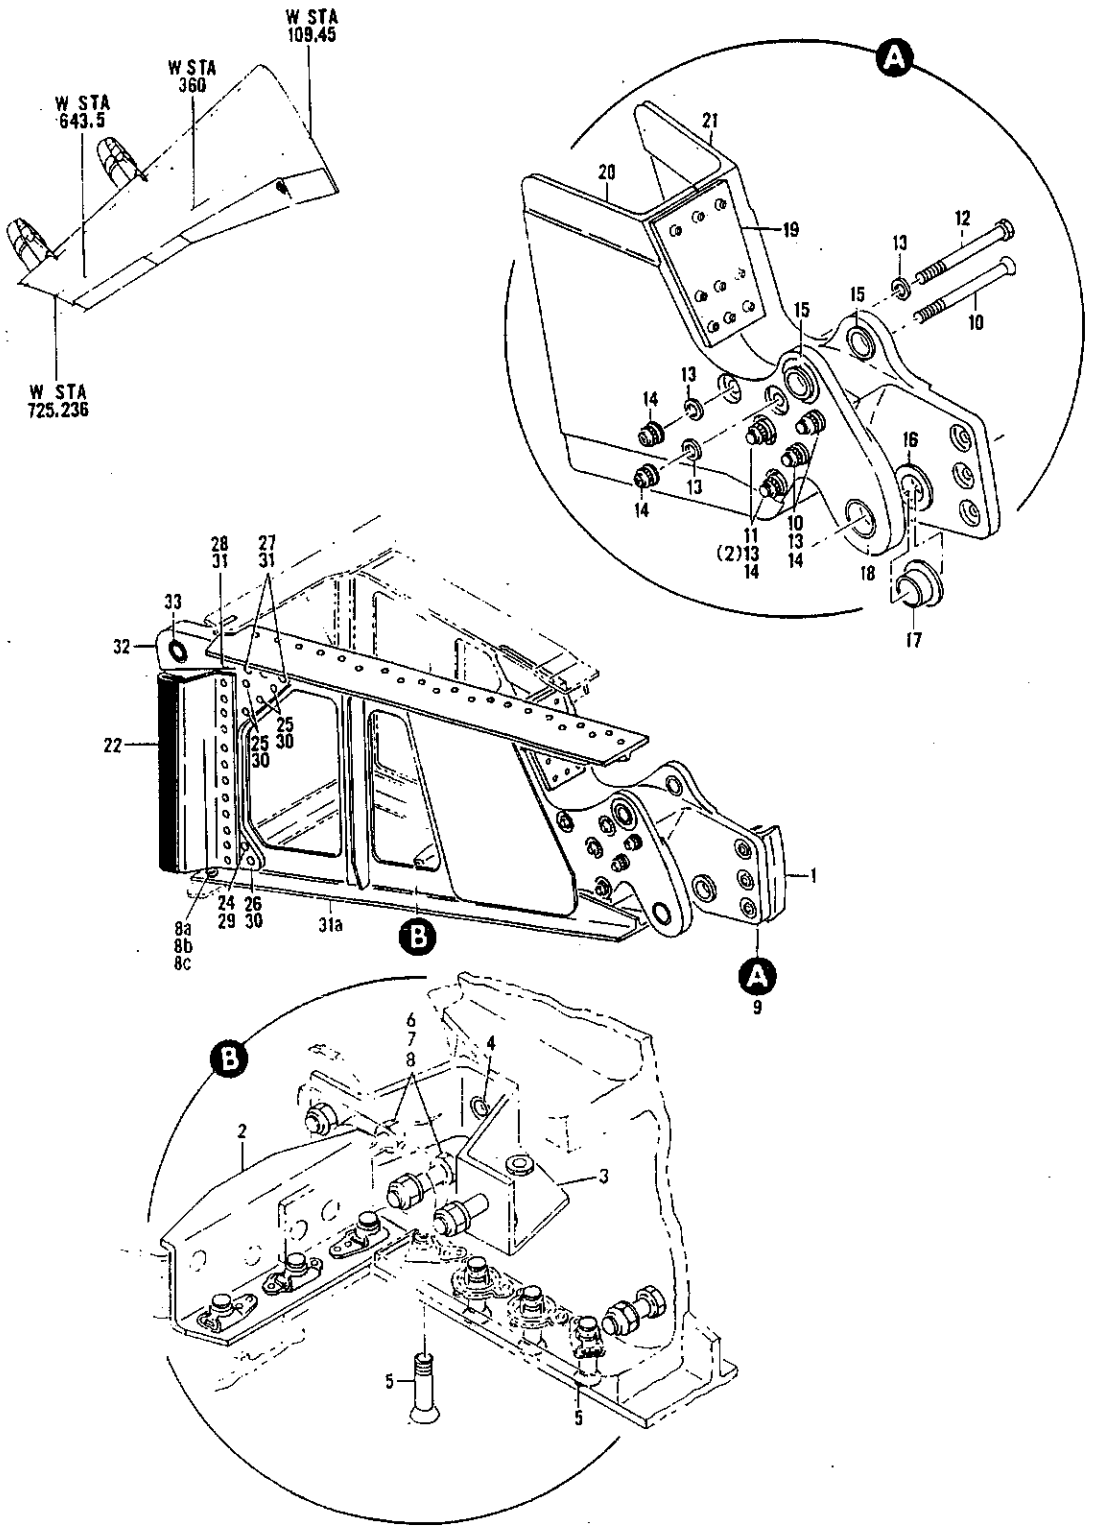


FIGURE 31. SUPPORT INSTL, FILLET FLAP OUTBOARD HINGE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	31	65-19173-1	SUPPORT INSTL, FILLET FLAP OUTBOARD HINGE (LH) (SEE . . 57-5, FIG. 12, ITEM 15)		RF
		65-19173-2	SUPPORT INSTL, FILLET FLAP OUTBOARD HINGE (RH) (SEE . . 57-5, FIG. 12, ITEM 15)		RF
	1	69-15778-1	. CAM, WING OUTBOARD END FLAPERETTE ACTUATION (LH ONLY)		1
	1	69-15778-2	. CAM, WING OUTBOARD END FLAPERETTE ACTUATION (RH ONLY)		1
			ATTACHING PARTS		
		NAS334CPA6	. BOLT.		3
		AN960D416L	. WASHER.		3
		NAS679A4W	. NUT		3
			-------*-------		
	2	66-13384-1	. ZEE ASSY, FILLET FLAP OUTBOARD HINGE SUPPORT (LH. . . ONLY)		1
	2	66-13384-2	. ZEE ASSY, FILLET FLAP OUTBOARD HINGE SUPPORT (RH. . . ONLY)		1
			ATTACHING PARTS		
		NAS334CPA6	. BOLT.		3
			-------*-------		
R R R	3	69-22967-1	. SUPPORT ASSY, FILLET FLAP COVE LIP DOOR OUTBOARD (LH ONLY) (OPTIONAL 69-22967-5)	0150	1
R R R	3	69-22967-5	. SUPPORT ASSY, FILLET FLAP COVE LIP DOOR OUTBOARD (LH ONLY) (OPTIONAL TO 69-22967-1)	0150	1
R	3	69-22967-5	. SUPPORT ASSY, COVE LIP DOOR (LH ONLY)	5199	1
R R R	3	69-22967-2	. SUPPORT ASSY, FILLET FLAP COVE LIP DOOR OUTBOARD (RH ONLY) (OPTIONAL 69-22967-6)	0150	1
R R R	3	69-22967-6	. SUPPORT ASSY, FILLET FLAP COVE LIP DOOR OUTBOARD (RH ONLY) (OPTIONAL TO 69-22967-2)	0150	1
R	3	69-22967-6	. SUPPORT ASSY, COVE LIP DOOR (RH ONLY)	5199	1
			ATTACHING PARTS		
		NAS1104-9W	. BOLT.		1
		NAS517-4-8	. SCREW		1
		NAS333CPA7-5	. BOLT.		2
		MS20426D6	. RIVET		2
		AN960D416	. WASHER.		2
		AN960D10	. WASHER.		2
		NAS679A4W	. NUT		2
		NAS679A3W	. NUT		2
			-------*-------		
	4	90-9473-36	. . BUSHING, PRESSED FIT STRUCTURAL		1
	5	NAS334CPA7	. BOLT.		4
	6	NAS1104-8W	. BOLT.		2
	7	AN960D416	. WASHER.		2
	8	NAS679A4W	. NUT		2
	8A	BACB30EL4-7	. BOLT.		1
	8B	AN960D416	. WASHER.		1
	8C	NAS679A4W	. NUT		1
R R R	9	65-19511-3	. FITTING ASSY, (LH ONLY) . . . . . (OPTIONAL 65-19511-5)	0150	1
R R R	9	65-19511-4	. FITTING ASSY, (RH ONLY) . . . . . (OPTIONAL 65-19511-6)	0150	1
R R R	9	65-19511-6	. FITTING ASSY, (RH ONLY) . . . . . (OPTIONAL TO 65-19511-4)	0150	1
R R R	9	65-19511-5	. FITTING ASSY, (LH ONLY) . . . . . (OPTIONAL TO 65-19511-3)	0150	1
R	9	65-19511-5	. FITTING ASSY, (LH ONLY)	5199	1
R	9	65-19511-6	. FITTING ASSY, (RH ONLY)	5199	1
	10	NAS335CA36	. . BOLT.		3
	11	NAS1305-48W	. . BOLT.		2
	12	NAS1305-54W	. . BOLT.		1
	13	AN960D516	. . WASHER.		9
	14	BACN10B-L5L	. . NUT		6
	15	BACB10A685	. . BEARING		2
	16	NAS538B14P67	. . BUSHING		1
	17	NAS538B14P56	. . BUSHING		1
	18	NAS537B16P43	. . BUSHING		1
	18A	BACB30N8-6	. . BOLT.		6
	18B	BACB30N8-7	. . BOLT, (USED WITH 65-56844-1, -2, -5 AND -6)		3
	18C	BACC30K8	. . COLLAR.		9
	19	66-12939-1	. . PLATE, FILLET FLAP HINGE FITTING SPLICE		1
	20	65-56844-5	. . FITTING, (LH ONLY) (USED ON 65-19511-5 AND -6). . .		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	31 20	65-56844-6	. . FITTING, (RH ONLY) (USED ON 65-19511-5 AND -6). . .		1
	21	65-56842-5	. . FITTING, (LH ONLY) (USED ON 65-19511-5 AND -6). . .		1
	21	65-56842-6	. . FITTING, (RH ONLY) (USED ON 65-19511-5 AND -6). . .		1
	22	69-15766-1	. SEAL ASSY, FILLET FLAP OUTBOARD HINGE SUPPORT AFT . . (LH ONLY)		1
	22	69-15766-2	. SEAL ASSY, FILLET FLAP OUTBOARD HINGE SUPPORT AFT . . (RH ONLY)		1
			ATTACHING PARTS		
		BACB30N8-7	. BOLT.		11
		BACB30N8-9	. BOLT.		1
		BACC30K8	. COLLAR.		12
			-------*-------		
	24	BACB30N6-6	. BOLT.		1
	25	BACB30N8-6	. BOLT.		4
	26	BACB30N8-8	. BOLT.		1
	27	BACB30N10-8	. BOLT.		3
	28	BACB30N10-10	. BOLT.		1
	29	BACC30K6	. COLLAR.		1
	30	BACC30K8	. COLLAR.		5
	31	BACC30K10	. COLLAR.		4
	31A	65-19173-5	. RIB ASSY, TRAILING EDGE STATION 36.845 FILLET FLAP. . OUTBOARD HINGE SUPPORT (LH ONLY)		1
	31A	65-19173-6	. RIB ASSY, TRAILING EDGE STATION 36.845 FILLET FLAP. . OUTBOARD HINGE SUPPORT (RH ONLY)		1
			ATTACHING PARTS		
		BACB30P6-4	. BOLT.		31
		BACB30P6-7	. BOLT.		4
		NAS333CPA5	. BOLT. . . . . (OPTIONAL CR2662-6-4 (V05693))		7
		CR2662-6-4	. BOLT (V05693) . . . . . (OPTIONAL TO NAS333CPA5)		7
		NAS334CPA7	. BOLT.		4
		BAC830A83-5A	. BOLT.		2
		BAC830A8P3-4A	. BOLT.		4
		AN960PD10L	. WASHER.		4
		65-19173-36	. FILLER, FILLET FLAP OUTBOARD HINGE SUPPORT.		1
		65-19173-38	. SHIM, FILLET FLAP OUTBOARD HINGE SUPPORT.		1
		65-19173-39	. SHIM, FILLET FLAP OUTBOARD HINGE SUPPORT.		1
		BACS40B18-78	. SHIM, LAMINATED		1
		BACC30K6	. COLLAR.		35
		NAS679A3W	. NUT		4
			-------*-------		
R R R	32	65-20972-1	. . FITTING ASSY, WING FILLET TRAILING EDGE OUTBOARD. . SUPPORT (LH ONLY) (OPTIONAL 65-20972-5)	0150	1
R R R	32	65-20972-5	. . FITTING ASSY, WING FILLET TRAILING EDGE OUTBOARD. . SUPPORT (LH ONLY) (OPTIONAL TO 65-20972-1)	0150	1
R R R	32	65-20972-2	. . FITTING ASSY, WING FILLET TRAILING EDGE OUTBOARD. . SUPPORT (RH ONLY) (OPTIONAL 65-20972-6)	0150	1
R R R	32	65-20972-6	. . FITTING ASSY, WING FILLET TRAILING EDGE OUTBOARD. . SUPPORT (RH ONLY) (OPTIONAL TO 65-20972-2)	0150	1
R R	32	65-20972-5	. . FITTING ASSY, WING FILLET TRAILING EDGE OUTBOARD. . SUPPORT (LH ONLY)	5199	1
R R	32	65-20972-6	. . FITTING ASSY, WING FILLET TRAILING EDGE OUTBOARD. . SUPPORT (RH ONLY)	5199	1
	33	BACB10A217GM2	. . . BEARING		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

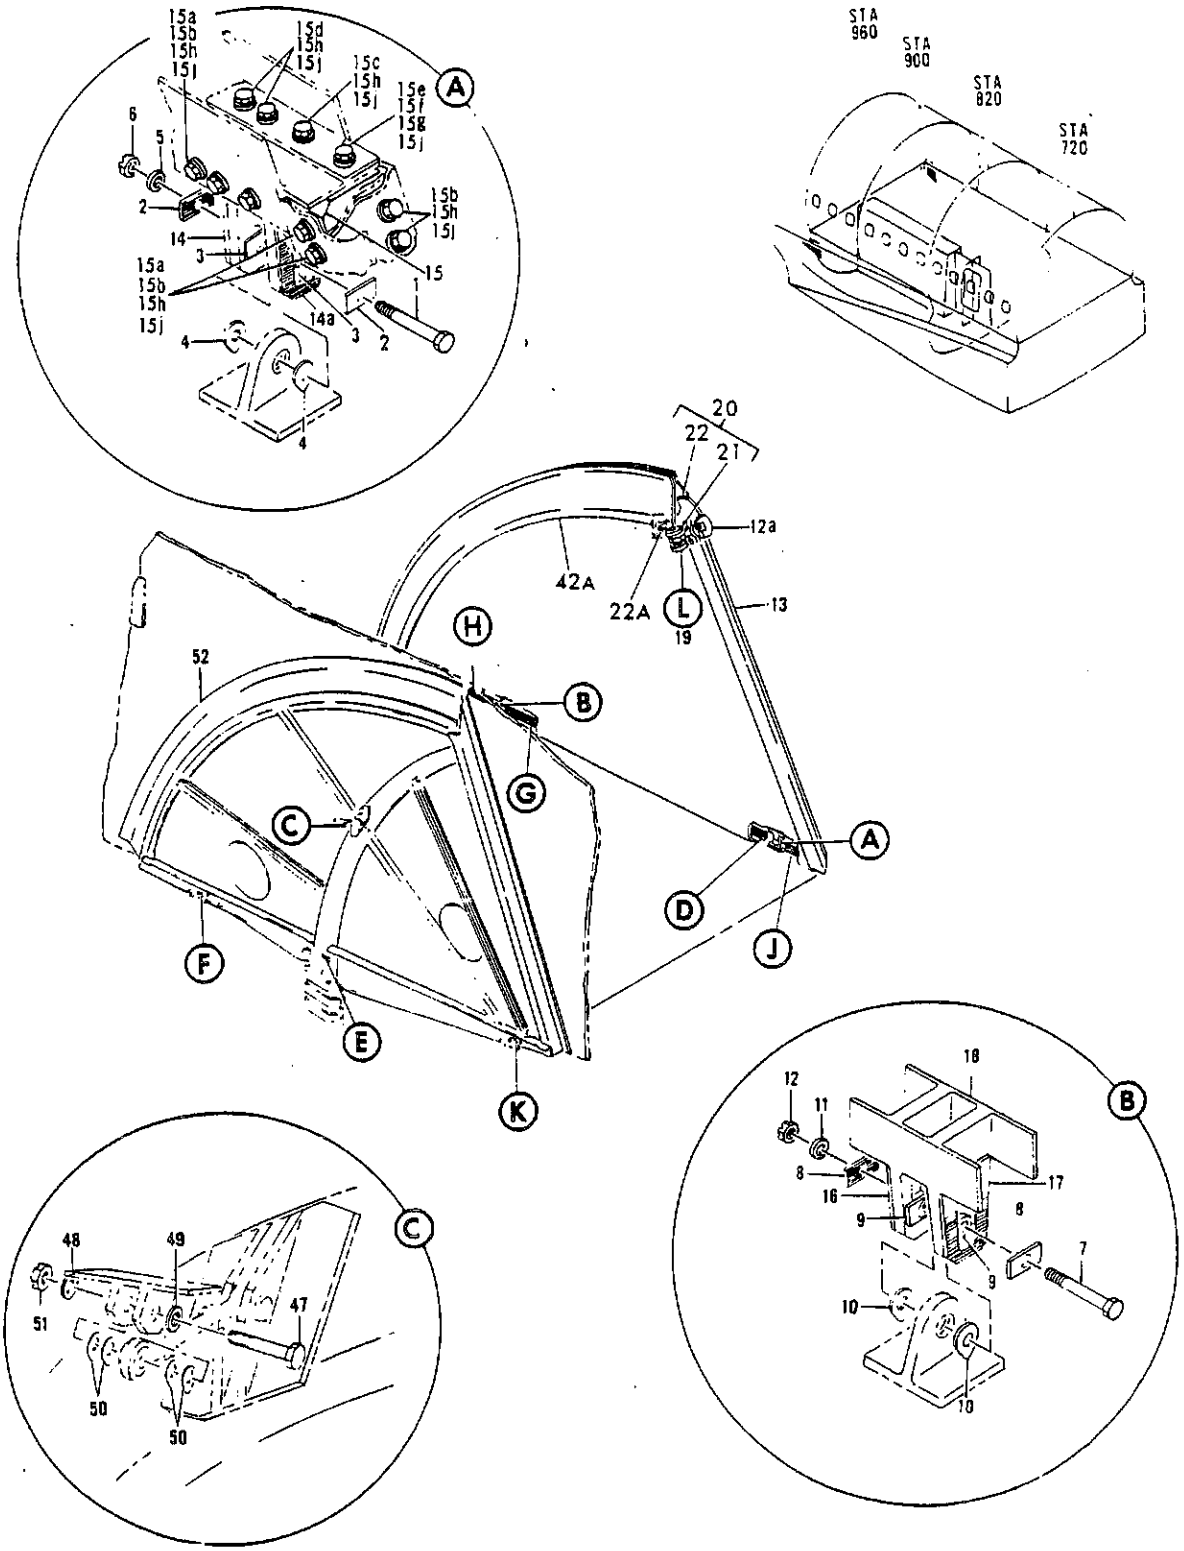


FIGURE 32. FENCE INSTL, FILLET FLAP (SHEET 1)

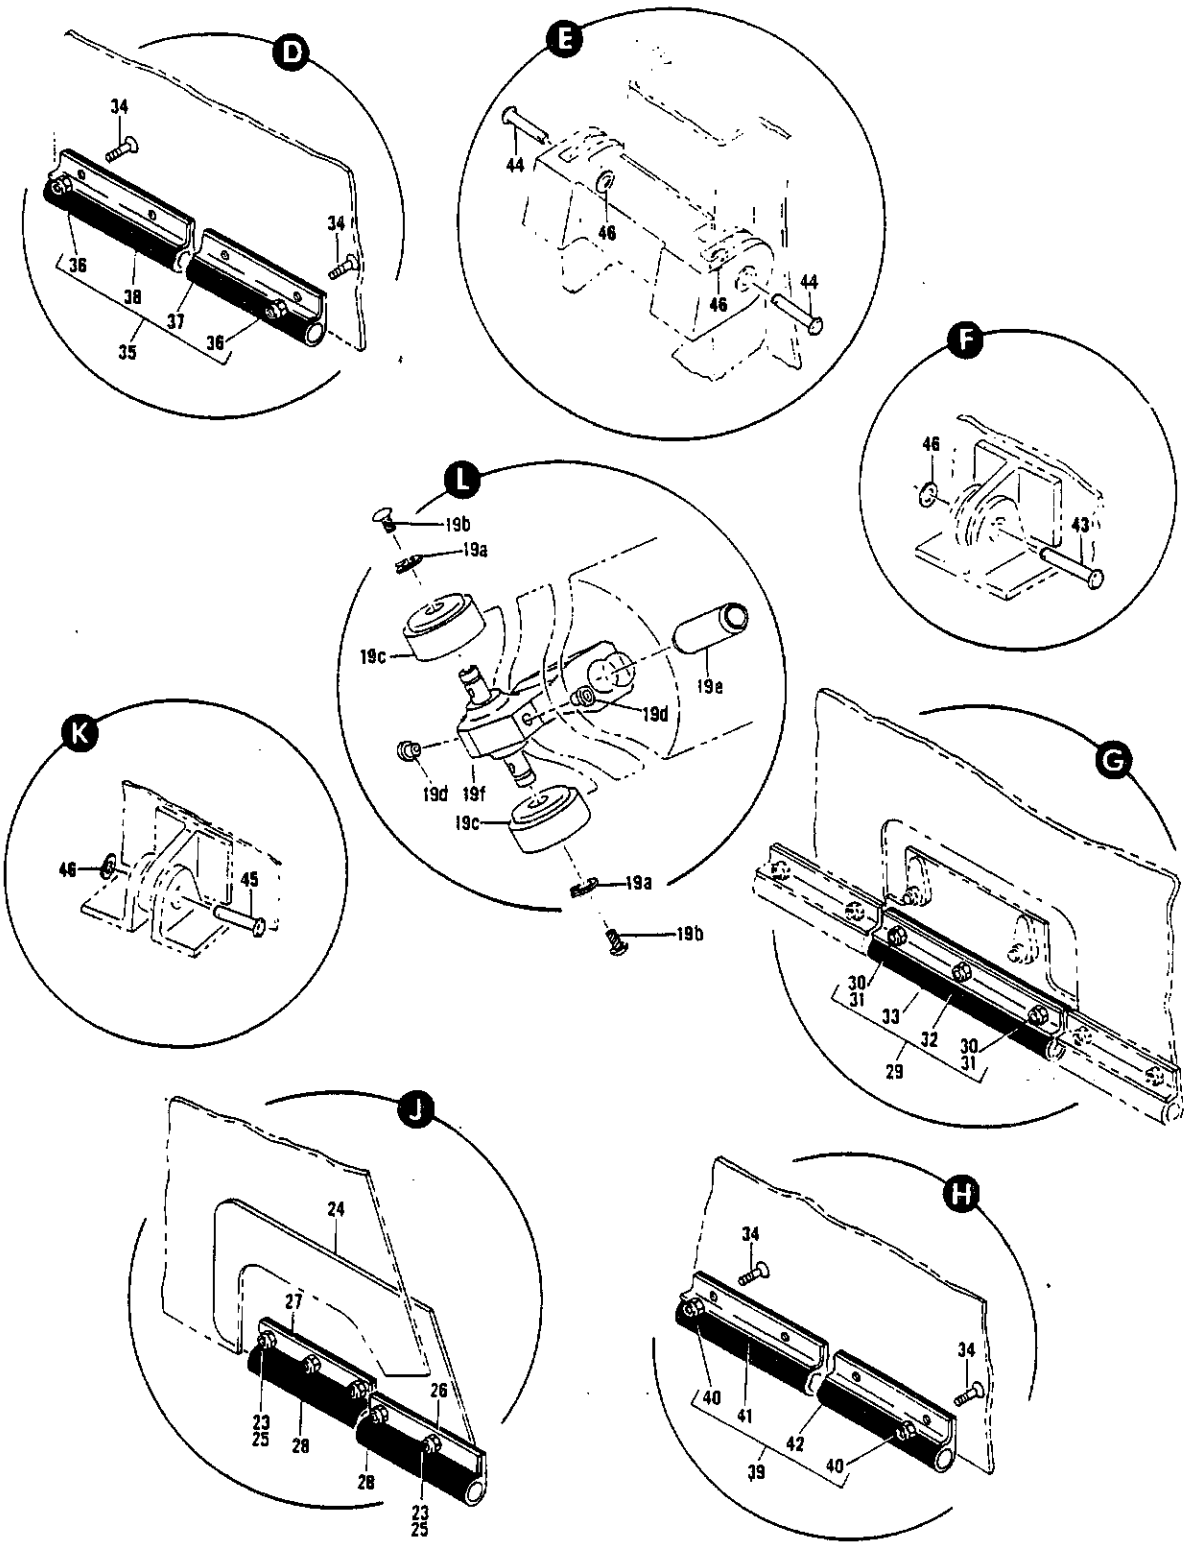


FIGURE 32. FENCE INSTL, FILLET FLAP (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
32	65-22852-1	FENCE INSTL, FILLET FLAP (LH) (SEE 57-1, FIG. 1, ITEM 14B)		RF
	65-22852-2	FENCE INSTL, FILLET FLAP (RH) (SEE 57-1, FIG. 1, ITEM 14B)		RF
1	NAS1104-27DW	. BOLT.		1
2	69-17576-4	. PLATE, WING FILLET FLAP SERRATED.		2
3	69-17591-2	. BUSHING, WING FILLET FLAP HINGE		2
4	66-14549-2	. SHIM, FILLET FLAP FENCE		AR
5	AN960PD416L	. WASHER.		1
6	AN320C4	. NUT		1
7	NAS1106-29DW	. BOLT.		1
8	69-17576-5	. PLATE, WING FILLET FLAP SERRATED.		2
9	69-17591-1	. BUSHING, WING FILLET FLAP HINGE		2
10	66-14549-1	. SHIM, FILLET FLAP FENCE		AR
11	AN960PD616L	. WASHER.		1
12	AN320C6	. NUT		1
12A	66-16797-1	. BLOCK, FILLET FLAP FENCE RUB.		1
		ATTACHING PARTS		
	NAS1103-9W	. BOLT.		1
	BACS40A14-32	. SHIM.		AR
	AN960PD10L	. WASHER.		1
	NAS679A3W	. NUT		1
		-------*-------		
13	65-22851-1	. FENCE ASSY, FILLET FLAP (LH ONLY)		1
13	65-22851-2	. FENCE ASSY, FILLET FLAP (RH ONLY)		1
14	69-17576-3	. . PLATE, WING FILLET FLAP SERRATED.		1
14A	69-17576-7	. . PLATE, WING FILLET FLAP SERRATED.		1
		ATTACHING PARTS		
	NAS1103-5W	. . BOLT.		2
	AN960PD416L	. . WASHER.		2
		-------*-------		
15	65-20947-1	. . FENCE ASSY, WING FILLET FLAP FORWARD (LH ONLY).		1
15	65-20947-2	. . FENCE ASSY, WING FILLET FLAP FORWARD (RH ONLY).		1
		ATTACHING PARTS		
15A	NAS333CPA5-5	. . BOLT.		5
15B	BACB30EL3-5	. . BOLT.		5
15C	NAS221-10	. . BOLT.		1
15D	NAS1103-4W	. . BOLT.		4
15E	NAS1103-6W	. . BOLT.		1
15F	65-22851-146	. . FILLER, FILLET FLAP FENCE RADIUS.		1
15G	65-22851-157	. . FILLER, RADIUS.		1
15H	AN960PD10L	. . WASHER.		10
15J	NAS679A3W	. . NUT		11
		-------*-------		
16	69-17576-2	. . PLATE, WING FILLET FLAP SERRATED.		1
17	69-17576-1	. . PLATE, WING FILLET FLAP SERRATED.		1
		ATTACHING PARTS		
	NAS1103-7W	. . BOLT.		4
	AN960PD10L	. . WASHER.		4
		-------*-------		
18	65-20948-1	. . FITTING ASSY, WING FILLET FLAP FENCE AFT (LH ONLY)		1
18	65-20948-2	. . FITTING ASSY, WING FILLET FLAP FENCE AFT (RH ONLY)		1
		ATTACHING PARTS		
	NAS333CPA5-5	. . BOLT.		6
		-------*-------		
19	69-17598-1	. . ROLLER ASSY, UPPER SAIL SUPPORT		1
		ATTACHING PARTS		
	NAS1104-24DW	. . BOLT.		1
	AN960PD416L	. . WASHER.		1
	AN320C4	. . NUT		1
		-------*-------		
19A	NAS670-25	. . . RING.		2
19B	MS21318-14	. . . SCREW		2
19C	BACB10B131	. . . BEARING		2
19D	NAS516-1	. . . FITTING		2
19E	NAS76A4-027P	. . . BUSHING		1
19F	69-17598-2	. . . BRACKET, UPPER SAIL SUPPORT ROLLER.		1
20	65-22853-1	. . FITTING ASSY, FILLET FLAP FENCE ROLLER SUPPORT (LH ONLY)		1
20	65-22853-2	. . FITTING ASSY, FILLET FLAP FENCE ROLLER SUPPORT (RH ONLY)		1
		ATTACHING PARTS		
	CR2263-5-6	. . RIVET, CHERRY LOCK, (V11815).		2
	CR2263-5-4	. . RIVET, CHERRY LOCK, (V11815).		11

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
32	BACB30EL3-5	. . BOLT.		4
	NAS1103-5W	. . BOLT.		4
	AN960PD10L	. . WASHER.		4
	NAS679A3W	. . NUT		4
		-------*-------		
21	NAS76A4-22P	. . . BEARING		2
22	65-22853-3	. . . FITTING, FILLET FLAP FENCE ROLLER SUPPORT (LH ONLY)		1
22	65-22853-4	. . . FITTING, FILLET FLAP FENCE ROLLER SUPPORT (RH ONLY)		1
22A	BACS40R7B15F	. . SHIM.		AR
23	NAS514P440-6	. . SCREW		5
24	65-22851-31	. . DOOR ASSY, FILLET FLAP FENCE FORWARD ACCESS (LH ONLY)		1
24	65-22851-32	. . DOOR ASSY, FILLET FLAP FENCE FORWARD ACCESS (RH ONLY)		1
25	NAS679A04W	. . . NUT		5
26	65-22851-92	. . . RETAINER, FILLET FLAP FENCE FORWARD ACCESS DOOR SEAL		1
27	65-22851-45	. . . RETAINER, FILLET FLAP FENCE FORWARD ACCESS DOOR SEAL		1
28	65-22851-46	. . . SEAL, FILLET FLAP FENCE FORWARD ACCESS DOOR (EXTRUSION NO. BAC1530-1 X 3.0 IN. LG)		2
29	65-22851-35	. . SEAL ASSY, FILLET FLAP FENCE AFT DOOR		1
30	NAS514P440-7	. . . SCREW		3
31	NAS679A04W	. . . NUT		3
32	65-22851-37	. . . RETAINER, FILLET FLAP FENCE AFT DOOR SEAL		1
33	65-22851-38	. . . SEAL, FILLET FLAP FENCE AFT DOOR (EXTRUSION NO. BAC1530-1 X 5.0 IN. LG)		1
34	NAS514P440-6	. . SCREW		23
35	65-22851-49	. . SEAL ASSY, FILLET FLAP FENCE FORWARD (LH ONLY).		1
35	65-22851-50	. . SEAL ASSY, FILLET FLAP FENCE FORWARD (RH ONLY).		1
36	NAS679A04W	. . . NUT		14
37	65-22851-51	. . . RETAINER, FILLET FLAP FENCE FORWARD SEAL.		1
38	65-22851-48	. . . SEAL, FILLET FLAP FENCE FORWARD (EXTRUSION NO. BAC1530-1 X 27.8 IN. LG)		1
39	65-22851-53	. . SEAL ASSY, FILLET FLAP FENCE AFT (LH ONLY).		1
39	65-22851-54	. . SEAL ASSY, FILLET FLAP FENCE AFT (RH ONLY).		1
40	NAS679A04W	. . . NUT		9
41	65-22851-57	. . . RETAINER, FILLET FLAP FENCE AFT SEAL.		1
42	65-22851-55	. . . SEAL, FILLET FLAP FENCE AFT (EXTRUSION NO. BAC1530-1 X 16.1 IN. LG)		1
42A	65-22851-147	. . EDGE MEMBER, (LH)		1
42A	65-22851-148	. . EDGE MEMBER, (RH)		1
43	BACP18T4-31	. PIN		1
44	BACP18T4-27	. PIN		2
45	BACP18T4-25	. PIN		1
46	AN960PD416L	. WASHER.		4
47	NAS1104-18DW	. BOLT.		1
48	AN960PD416	. WASHER.		1
49	AN960PD416L	. WASHER.		1
50	66-14549-2	. SHIM, FILLET FLAP FENCE		4
51	AN320C4	. NUT		1
52	65-23604-1	. PANEL ASSY, STATION 930 TO 960M PLUS 10 WING TO BODY FAIRING FENCE RECESS (LH ONLY) (SEE FIG. 33)		1
52	65-23604-2	. PANEL ASSY, STATION 930 TO 960M PLUS 10 WING TO BODY FAIRING FENCE RECESS (RH ONLY) (SEE FIG. 33)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

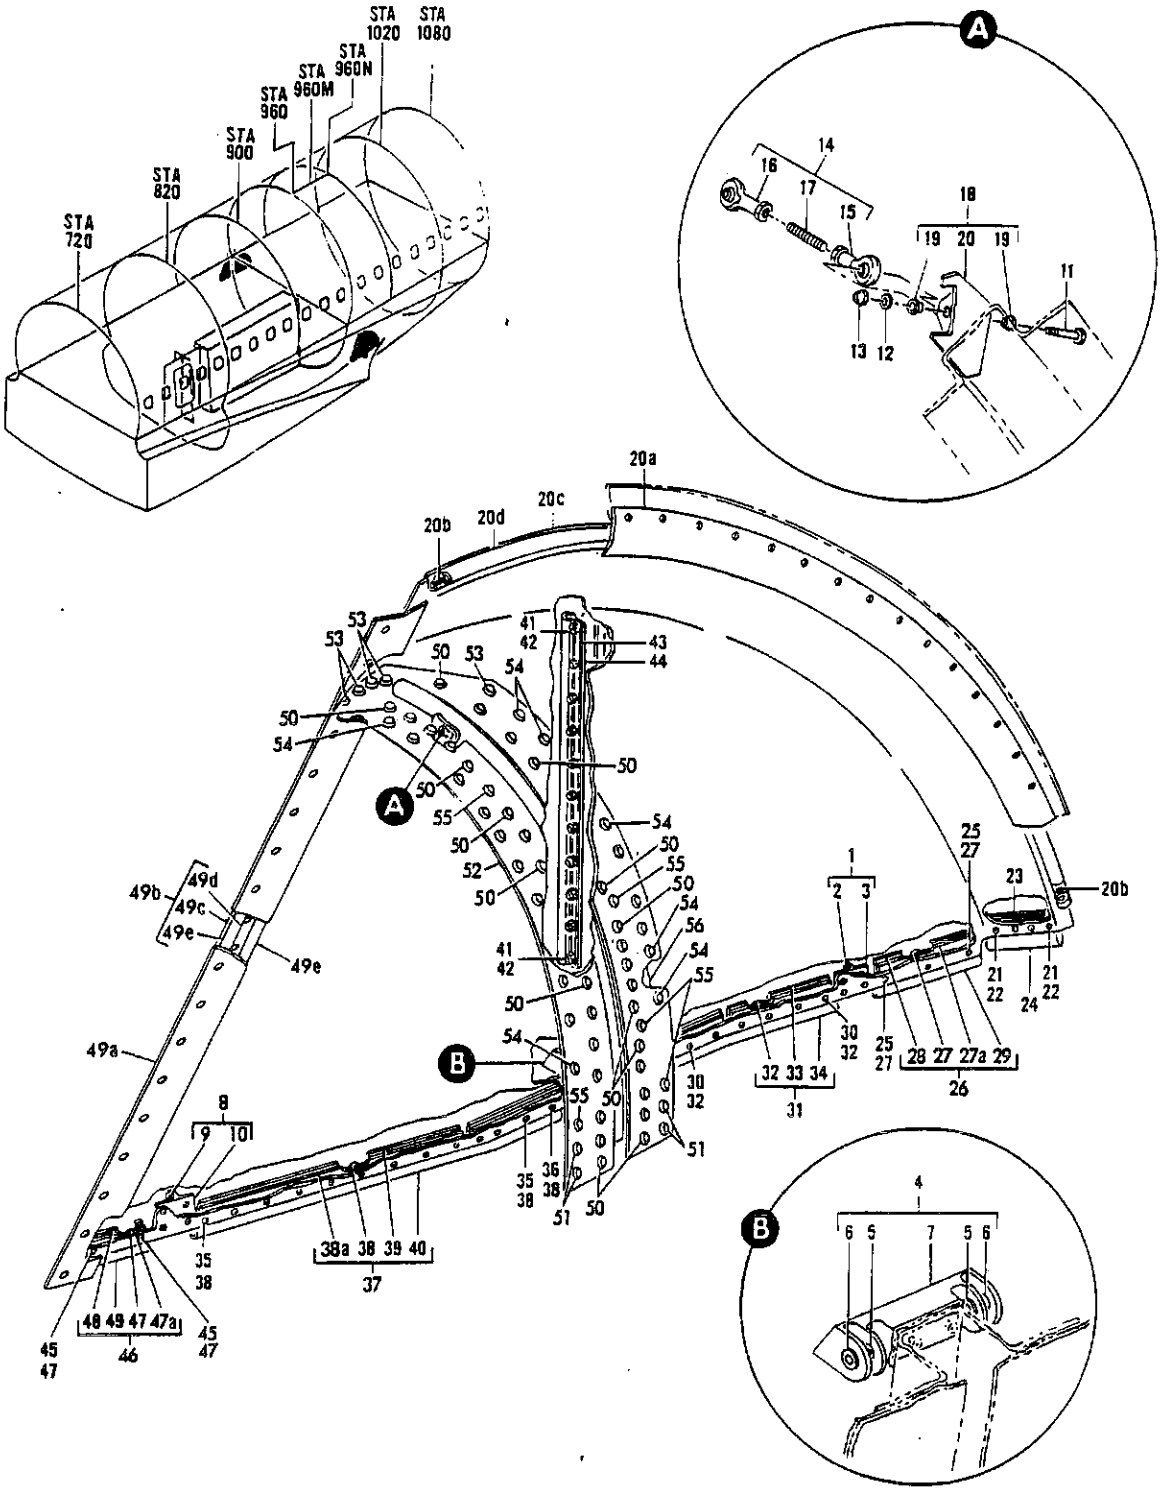


FIGURE 33. PANEL ASSY, WING TO BODY FAIRING FENCE RECESS

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
33	65-23604-1	PANEL ASSY, STATION 930 TO 960M PLUS 10 WING TO BODY. . FAIRING FENCE RECESS (LH) (SEE FIG. 32, ITEM 52)		RF
	65-23604-2	PANEL ASSY, STATION 930 TO 960M PLUS 10 WING TO BODY. . FAIRING FENCE RECESS (RH) (SEE FIG. 32, ITEM 52)		RF
1	69-17433-9	. FITTING ASSY, WING TO BODY FAIRING FENCE RECESS PANEL HINGE (LH ONLY)		1
1	69-17433-10	. FITTING ASSY, WING TO BODY FAIRING FENCE RECESS PANEL HINGE (RH ONLY)		1
		ATTACHING PARTS		
	NAS517-3-7	. SCREW		4
	AN960D10	. WASHER.		4
	65-23604-38	. SHIM, STATION 930 TO 960M PLUS 10 WING TO BODY. . . . FAIRING FENCE RECESS PANEL SOLID		AR
	BACS40L24-34	. SHIM.		1
	NAS679A3W	. NUT		4
		-------*-------		
2	NAS77A4-12P	. . BUSHING		2
3	69-17433-3	. . FITTING, WING TO BODY FAIRING FENCE RECESS PANEL. . HINGE (LH ONLY)		1
3	69-17433-4	. . FITTING, WING TO BODY FAIRING FENCE RECESS PANEL. . HINGE (RH ONLY)		1
4	69-17433-11	. FITTING ASSY, WING TO BODY FAIRING FENCE RECESS PANEL HINGE		1
		ATTACHING PARTS		
	NAS517-3-7	. SCREW		2
	AN960D10	. WASHER.		2
	BACS40J20-38	. SHIM.		1
	NAS679A3W	. NUT		2
		-------*-------		
5	NAS77A4-12P	. . BUSHING		2
6	NAS77A4-15P	. . BUSHING		2
7	69-17433-12	. . FITTING, WING TO BODY FAIRING FENCE RECESS PANEL. . HINGE		1
8	69-17433-7	. FITTING ASSY, WING TO BODY FAIRING FENCE RECESS PANEL HINGE (LH ONLY)		1
8	69-17433-8	. FITTING ASSY, WING TO BODY FAIRING FENCE RECESS PANEL HINGE (RH ONLY)		1
		ATTACHING PARTS		
	NAS517-3-7	. SCREW		4
	AN960D10	. WASHER.		4
	65-23604-63	. SHIM, STATION 930 TO 960M PLUS 10 WING TO BODY. . . . FAIRING FENCE RECESS PANEL SOLID		AR
	65-23604-37	. SHIM, STATION 930 TO 960M PLUS 10 WING TO BODY. . . . FAIRING FENCE RECESS PANEL LAMINATED		1
	NAS679A3W	. NUT		4
		-------*-------		
9	NAS77A4-12P	. . BUSHING		1
10	69-17433-1	. . FITTING, WING TO BODY FAIRING FENCE RECESS PANEL. . HINGE (LH ONLY)		1
10	69-17433-2	. . FITTING, WING TO BODY FAIRING FENCE RECESS PANEL. . HINGE (RH ONLY)		1
11	NAS1104-14DW	. BOLT.		1
12	AN960D416	. WASHER.		1
13	AN310-4	. NUT		1
14	66-14544-1	. LINK ASSY, WING TO BODY FAIRING FENCE RECESS PANEL. .		1
15	BACB10A192M2	. . BEARING		1
16	66-14544-2	. . BEARING, WING TO BODY FAIRING FENCE RECESS PANEL. . PLAIN SPHERICAL (ALTERED FOR BACB10A192M2)		1
17	66-14544-3	. . ROD, WING TO BODY FAIRING FENCE RECESS PANEL. . . . CONTROL (ALTERED FROM NAS354-4-160)		1
18	69-17976-1	. FITTING ASSY, WING TO BODY FAIRING FENCE RECESS PANEL HINGE (LH ONLY)		1
18	69-17976-2	. FITTING ASSY, WING TO BODY FAIRING FENCE RECESS PANEL HINGE (RH ONLY)		1
		ATTACHING PARTS		
	NAS517-3-5	. SCREW		4
	AN960D10	. WASHER.		4
	NAS679A3W	. NUT		4
		-------*-------		
19	NAS77A4-15	. . BUSHING		2
20	69-17976-5	. . FITTING, WING TO BODY FAIRING FENCE RECESS PANEL. . HINGE (LH ONLY)		1
20	69-17976-6	. . FITTING, WING TO BODY FAIRING FENCE RECESS PANEL. . HINGE (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
33 20B	NAS514P832-6	. SCREW		24
20C	65-23604-93	. RETAINER, STATION 930 TO 960M PLUS 10 WING TO BODY. FAIRING FENCE RECESS PANEL SEAL (LH ONLY)		1
20C	65-23604-94	. RETAINER, STATION 930 TO 960M PLUS 10 WING TO BODY. FAIRING FENCE RECESS PANEL SEAL (RH ONLY)		1
20D	65-23604-90	. SEAL, STATION 930 TO 960M PLUS 10 WING TO BODY. FAIRING FENCE RECESS PANEL (EXTRUSION NO. BAC1530-7 X 62.0 IN. LG)		1
21	NAS514P832-7	. SCREW		4
22	BACN10FX82	. NUT		4
23	65-23604-67	. RETAINER, STATION 930 TO 960M PLUS 10 WING TO BODY. FAIRING FENCE RECESS PANEL SEAL (LH ONLY)		1
23	65-23604-88	. RETAINER, STATION 930 TO 960M PLUS 10 WING TO BODY. FAIRING FENCE RECESS PANEL SEAL (RH ONLY)		1
24	65-23604-103	. SEAL, STATION 930 TO 960M PLUS 10 WING TO BODY. FAIRING FENCE RECESS PANEL (EXTRUSION NO. BAC1530-6 X 5.5 IN. LG)		1
25	NAS514P832-5	. SCREW		3
26	65-23604-57	. SEAL ASSY, STATION 930 TO 960M PLUS 10 WING TO BODY FAIRING FENCE RECESS PANEL (LH ONLY)		1
26	65-23604-58	. SEAL ASSY, STATION 930 TO 960M PLUS 10 WING TO BODY FAIRING FENCE RECESS PANEL (RH ONLY)		1
27	BACN10FX82	. . NUT		3
27A	65-23604-59	. . ANGLE, STATION 930 TO 960M PLUS 10 WING TO BODY FAIRING FENCE RECESS PANEL SEAL RETAINER (LH ONLY)		1
27A	65-23604-60	. . ANGLE, STATION 930 TO 960M PLUS 10 WING TO BODY FAIRING FENCE RECESS PANEL SEAL RETAINER (RH ONLY)		1
28	65-23604-62	. . STRIP, STATION 930 TO 960M PLUS 10 WING TO BODY FAIRING FENCE RECESS PANEL SEAL		1
29	65-23604-61	. . SEAL, STATION 930 TO 960M PLUS 10 WING TO BODY. FAIRING FENCE RECESS PANEL (EXTRUSION NO. BAC1530-7 X 6.6 IN. LG)		1
30	NAS514P832-5	. SCREW		6
31	65-23604-97	. SEAL ASSY, STATION 930 TO 960M PLUS 10 WING TO BODY FAIRING FENCE RECESS PANEL (LH ONLY)		1
31	65-23604-98	. SEAL ASSY, STATION 930 TO 960M PLUS 10 WING TO BODY FAIRING FENCE RECESS PANEL (RH ONLY)		1
32	BACN10FX82	. . NUT		6
33	65-23604-101	. . STRIP, STATION 930 TO 960M PLUS 10 WING TO BODY FAIRING FENCE RECESS PANEL SEAL (LH ONLY)		1
33	65-23604-102	. . STRIP, STATION 930 TO 960M PLUS 10 WING TO BODY FAIRING FENCE RECESS PANEL SEAL (RH ONLY)		1
34	65-23604-55	. . SEAL, STATION 930 TO 960M PLUS 10 WING TO BODY. FAIRING FENCE RECESS PANEL (EXTRUSION NO. BAC1530-7 X 10.6 IN. LG)		1
35	NAS514P832-5	. SCREW		12
36	NAS514P832-7	. SCREW		1
37	65-23604-45	. SEAL ASSY, STATION 930 TO 960M PLUS 10 WING TO BODY FAIRING FENCE RECESS PANEL (LH ONLY)		1
37	65-23604-46	. SEAL ASSY, STATION 930 TO 960M PLUS 10 WING TO BODY FAIRING FENCE RECESS PANEL (RH ONLY)		1
38	BACN10FX82	. . NUT		13
38A	65-23604-47	. . ANGLE, STATION 930 TO 960M PLUS 10 WING TO BODY FAIRING FENCE RECESS PANEL SEAL RETAINER (LH ONLY)		1
38A	65-23604-48	. . ANGLE, STATION 930 TO 960M PLUS 10 WING TO BODY FAIRING FENCE RECESS PANEL SEAL RETAINER (RH ONLY)		1
39	65-23604-50	. . STRIP, STATION 930 TO 960M PLUS 10 WING TO BODY FAIRING FENCE RECESS PANEL SEAL		1
40	65-23604-49	. . SEAL, STATION 930 TO 960M PLUS 10 WING TO BODY. FAIRING FENCE RECESS PANEL (EXTRUSION NO. BAC1530-7 X 24.0 IN. LG)		1
41	NAS602-5	. SCREW		11
42	NAS679A08W	. NUT		11
43	65-23604-82	. RETAINER, STATION 930 TO 960M PLUS 10 WING TO BODY. FAIRING FENCE RECESS PANEL SEAL (LH ONLY)		1
43	65-23604-89	. RETAINER, STATION 930 TO 960M PLUS 10 WING TO BODY. FAIRING FENCE RECESS PANEL SEAL (RH ONLY)		1
44	65-23604-81	. SEAL, STATION 930 TO 960M PLUS 10 WING TO BODY. FAIRING FENCE RECESS PANEL (EXTRUSION NO. BAC1530-6 X 19.7 IN. LG)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
33 45	NAS514P832-5	. SCREW		2
46	65-23604-39	. SEAL ASSY, STATION 930 TO 960M PLUS 10 WING TO BODY FAIRING FENCE RECESS PANEL (LH ONLY)		1
46	65-23604-40	. SEAL ASSY, STATION 930 TO 960M PLUS 10 WING TO BODY FAIRING FENCE RECESS PANEL (RH ONLY)		1
47	BACN10FX82	. . NUT		2
47A	65-23604-41	. . ANGLE, STATION 930 TO 960M PLUS 10 WING TO BODY FAIRING FENCE RECESS PANEL SEAL RETAINER (LH ONLY)		1
47A	65-23604-42	. . ANGLE, STATION 930 TO 960M PLUS 10 WING TO BODY FAIRING FENCE RECESS PANEL SEAL RETAINER (RH ONLY)		1
48	65-23604-44	. . STRIP, STATION 930 TO 960M PLUS 10 WING TO BODY FAIRING FENCE RECESS PANEL SEAL		1
49	65-23604-43	. . SEAL, STATION 930 TO 960M PLUS 10 WING TO BODY. FAIRING FENCE RECESS PANEL (EXTRUSION NO. BAC1530-7 X 4.3 IN. LG)		1
49A	65-23604-107	. PLATE, SEAL COVER (LH ONLY)		1
49A	65-23604-108	. PLATE, SEAL COVER (RH ONLY)		1
49B	65-23604-105	. SEAL ASSY (LH ONLY)		1
49B	65-23604-106	. SEAL ASSY (RH ONLY)		1
49C	65-23604-109	. . ANGLE (LH ONLY)		1
49C	65-23604-110	. . ANGLE (RH ONLY)		1
49D	65-23604-111	. . RETAINER, SEAL.		1
49E	65-23604-34	. . SEAL (EXTRUSION NO. BAC1530-5 X 33 IN. LG). . . .		2
50	BACB30AM6-5	. BOLT.		36
51	BACB30AM6-7	. BOLT.		4
52	65-23659-1	. PLATE, WING TO BODY FAIRING RECESS PANEL (LH ONLY). .		1
52	65-23659-2	. PLATE, WING TO BODY FAIRING RECESS PANEL (RH ONLY). .		1
		ATTACHING PARTS		
53	BACB30AM6-4	. BOLT.		5
54	BACB30AM6-3	. BOLT.		22
55	BACB30AM6-7	. BOLT.		6
		--------*--------		
56	65-23582-1	. TRACK, WING TO BODY FAIRING RECESS PANEL (LH ONLY). .		1
56	65-23582-2	. TRACK, WING TO BODY FAIRING RECESS PANEL (RH ONLY). .		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

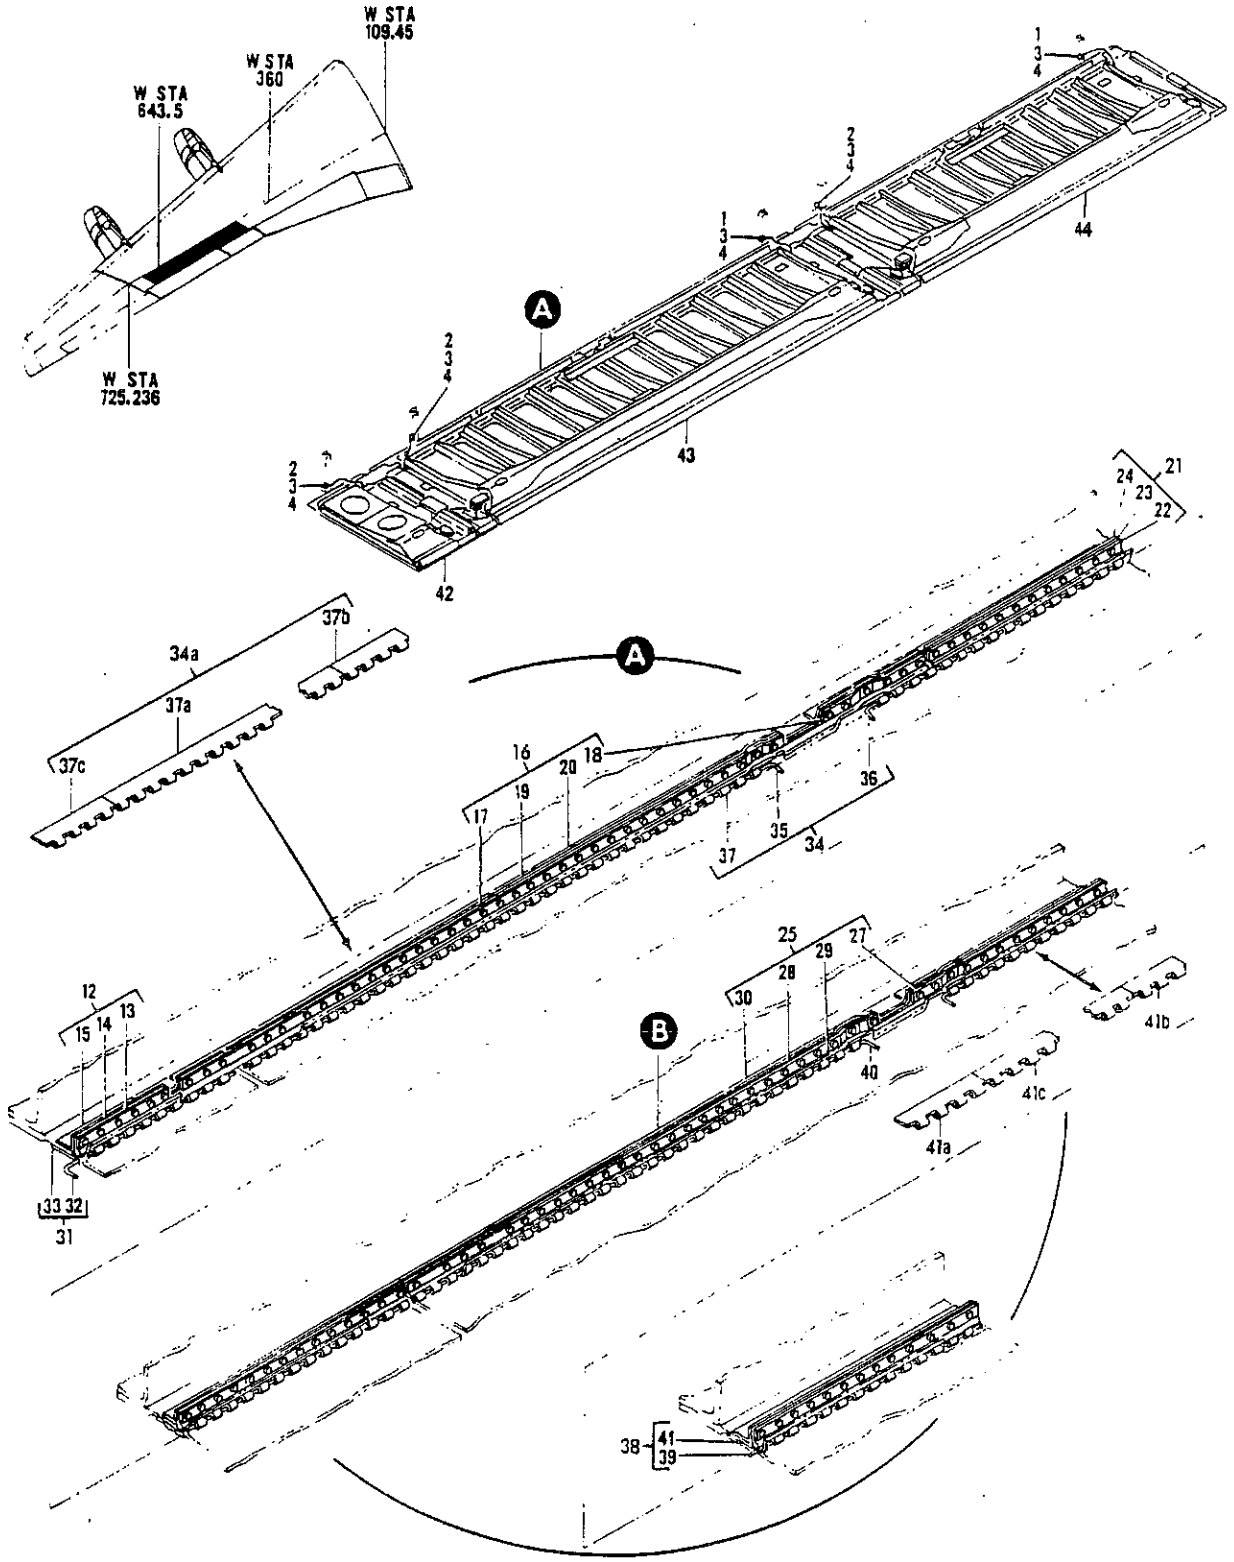


FIGURE 36. DOOR INSTL, OUTBOARD COVE LIP (SHEET 1)

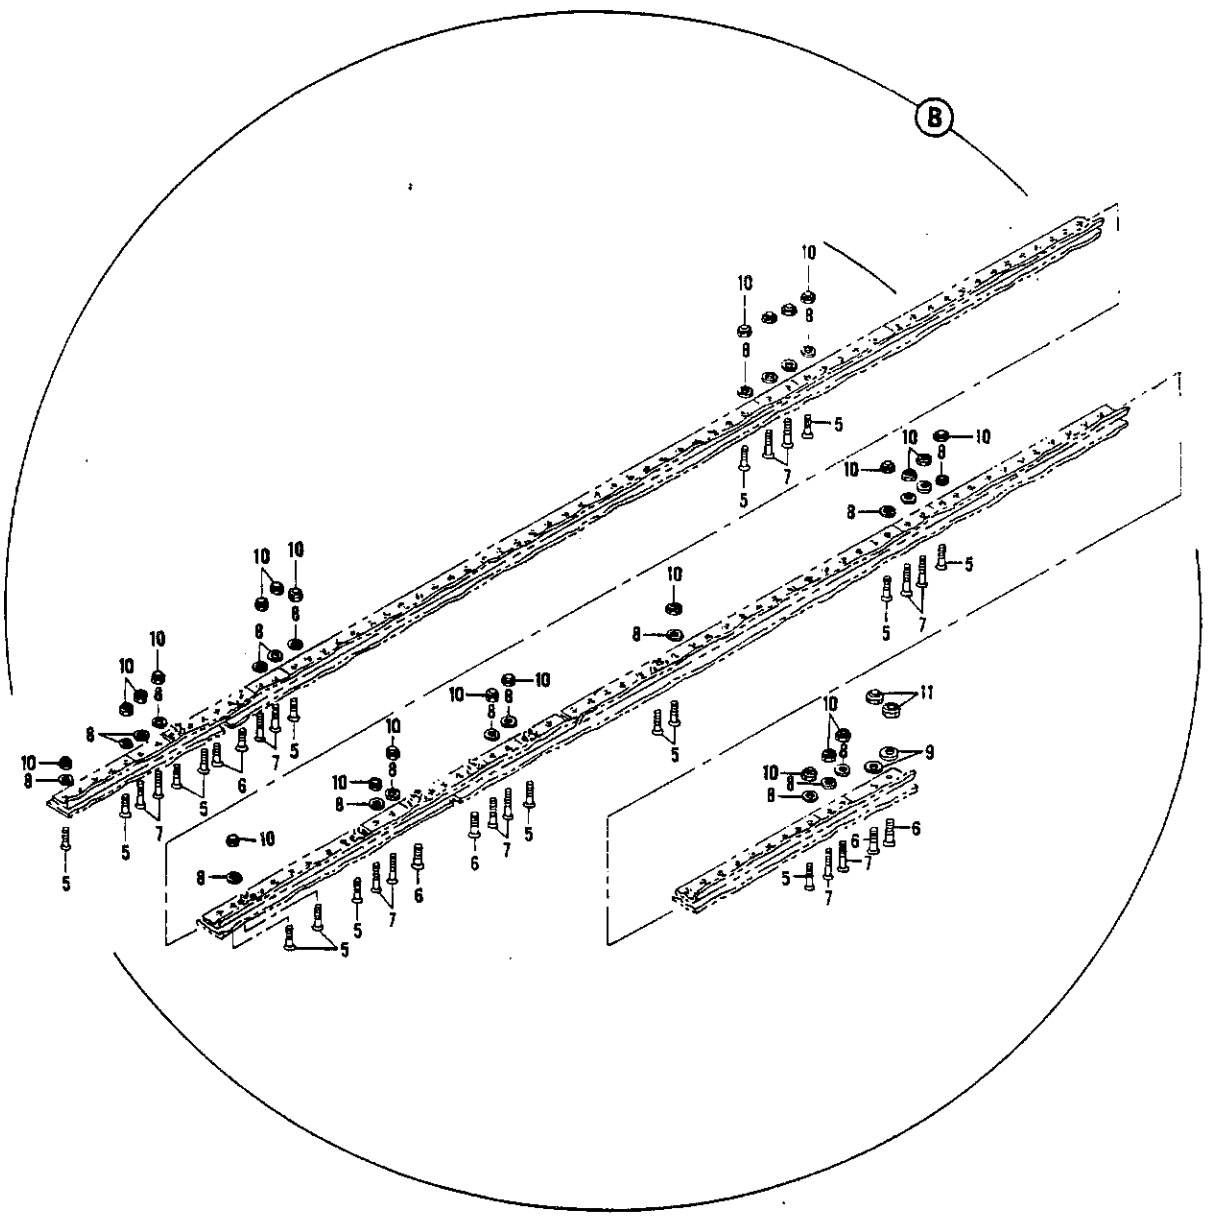


FIGURE 36. DOOR INSTL, OUTBOARD COVE LIP (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
36	65-18726-1	DOOR INSTL, OUTBOARD COVE LIP (LH) (SEE 57-1, FIG. 1, ITEM 20)		RF
	65-18726-2	DOOR INSTL, OUTBOARD COVE LIP (RH) (SEE 57-1, FIG. 1, ITEM 20)		RF
1	AN3-5A	. BOLT.		2
2	AN3-4A	. BOLT.		3
3	BACW10P42S	. WASHER.		5
4	NAS679A3W	. NUT		5
5	NAS517-3-4	. SCREW		AR
6	NAS517-4-4	. SCREW		10
7	NAS517-3-5	. SCREW		14
8	AN960D10	. WASHER.		AR
9	AN960D416	. WASHER.		2
12	65-22970-59	. SEAL ASSY, OUTBOARD COVE LIP DOOR (LH ONLY)		1
12	65-22970-60	. SEAL ASSY, OUTBOARD COVE LIP DOOR (RH ONLY)		1
13	65-22970-25	. . RETAINER, OUTBOARD COVE LIP DOOR SEAL		1
		ATTACHING PARTS		
	NAS600-5	. . SCREW		6
	NAS43DD0-3	. . SPACER.		6
	NAS679A04W	. . NUT		6
		-------*-------		
14	65-22970-44	. . SEAL, OUTBOARD COVE LIP DOOR RUBBER (EXTRUSION NO. BAC1530-11 X 7.60 IN. LG)		1
15	65-22970-51	. . ANGLE, OUTBOARD COVE LIP DOOR SEAL SUPPORT (LH. . . ONLY)		1
15	65-22970-52	. . ANGLE, OUTBOARD COVE LIP DOOR SEAL SUPPORT (RH. . . ONLY)		1
16	65-22970-57	. SEAL ASSY, OUTBOARD COVE LIP DOOR (LH ONLY)		1
16	65-22970-58	. SEAL ASSY, OUTBOARD COVE LIP DOOR (RH ONLY)		1
17	65-22970-24	. . RETAINER, OUTBOARD COVE LIP DOOR SEAL		1
18	65-22970-27	. . RETAINER, OUTBOARD COVE LIP DOOR SEAL		1
		ATTACHING PARTS		
	NAS600-5	. . SCREW		35
	NAS43DD0-3	. . SPACER.		35
	NAS679A04W	. . NUT		35
		-------*-------		
19	65-22970-43	. . SEAL, OUTBOARD COVE LIP DOOR RUBBER (EXTRUSION NO. BAC1530-11 X 47.70 IN. LG)		1
20	65-22970-49	. . ANGLE, OUTBOARD COVE LIP DOOR SEAL SUPPORT (LH. . . ONLY)		1
20	65-22970-50	. . ANGLE, OUTBOARD COVE LIP DOOR SEAL SUPPORT (RH. . . ONLY)		1
21	65-22970-55	. SEAL ASSY, OUTBOARD COVE LIP DOOR (LH ONLY)		1
21	65-22970-56	. SEAL ASSY, OUTBOARD COVE LIP DOOR (RH ONLY)		1
22	65-22970-23	. . RETAINER, OUTBOARD COVE LIP DOOR SEAL		1
		ATTACHING PARTS		
	NAS600-5	. . SCREW		24
	NAS43DD0-3	. . SPACER.		24
	NAS679A04W	. . NUT		24
		-------*-------		
23	65-22970-42	. . SEAL, OUTBOARD COVE LIP DOOR RUBBER (EXTRUSION NO. BAC1530-11 X 30.60 IN. LG)		1
24	65-22970-47	. . ANGLE, OUTBOARD COVE LIP DOOR SEAL SUPPORT (LH. . . ONLY)		1
24	65-22970-48	. . ANGLE, OUTBOARD COVE LIP DOOR SEAL SUPPORT (RH. . . ONLY)		1
25	65-22970-53	. SEAL ASSY, OUTBOARD COVE LIP DOOR (LH ONLY)		1
25	65-22970-54	. SEAL ASSY, OUTBOARD COVE LIP DOOR (RH ONLY)		1
27	65-22970-20	. . RETAINER, OUTBOARD COVE LIP DOOR SEAL		1
28	65-22970-37	. . RETAINER, OUTBOARD COVE LIP DOOR SEAL		1
		ATTACHING PARTS		
	NAS600-5	. . SCREW		45
	NAS43DD0-3	. . SPACER.		45
	NAS679A04W	. . NUT		45
		-------*-------		
29	65-22970-38	. . SEAL, OUTBOARD COVE LIP DOOR RUBBER (EXTRUSION NO. BAC1530-11 X 60 IN. LG)		1
30	65-22970-39	. . ANGLE, OUTBOARD COVE LIP DOOR SEAL SUPPORT (LH. . . ONLY)		1
30	65-22970-40	. . ANGLE, OUTBOARD COVE LIP DOOR SEAL SUPPORT (RH. . . ONLY)		1
31	65-19137-43	. HINGE HALF ASSY, OUTBOARD COVE LIP DOOR (LH ONLY)		1
31	65-19137-44	. HINGE HALF ASSY, OUTBOARD COVE LIP DOOR (RH ONLY)		1
32	65-19137-55	. . HINGE PIN, OUTBOARD COVE LIP DOOR		1


MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	36 33	65-19137-49	. . HINGE HALF, OUTBOARD COVE LIP DOOR (LH ONLY). . . .		1
	33	65-19137-50	. . HINGE HALF, OUTBOARD COVE LIP DOOR (RH ONLY). . . .		1
	34A	65-19137-85	. HINGE HALF ASSY, OUTBOARD COVE LIP DOOR (LH ONLY) . .		1
	34A	65-19137-86	. HINGE HALF ASSY, OUTBOARD COVE LIP DOOR (RH ONLY) . .		1
	35	65-19137-53	. . HINGE PIN, OUTBOARD COVE LIP DOOR (LH ONLY)		1
	35	65-19137-70	. . HINGE PIN, OUTBOARD COVE LIP DOOR (RH ONLY)		1
	36	65-19137-54	. . HINGE PIN, OUTBOARD COVE LIP DOOR (LH ONLY)		1
	36	65-19137-68	. . HINGE PIN, OUTBOARD COVE LIP DOOR (RH ONLY)		1
	37A	65-19137-93	. . HINGE HALF, OUTBOARD COVE LIP DOOR (LH ONLY). . . .		1
	37A	65-19137-94	. . HINGE HALF, OUTBOARD COVE LIP DOOR (RH ONLY). . . .		1
	37B	69-24713-11	. . HINGE HALF, OUTBOARD COVE LIP DOOR TAB.		1
	37C	69-24713-19	. . HINGE HALF, OUTBOARD COVE LIP DOOR TAB (LH ONLY). .		1
	37C	69-24713-20	. . HINGE HALF, OUTBOARD COVE LIP DOOR TAB (RH ONLY). .		1
	38	65-19137-83	. HINGE HALF ASSY, OUTBOARD COVE LIP DOOR (LH ONLY) . .		1
	38	65-19137-84	. HINGE HALF ASSY, OUTBOARD COVE LIP DOOR (RH ONLY) . .		1
	39	65-19137-51	. . HINGE PIN, OUTBOARD COVE LIP DOOR (LH ONLY)		1
	39	65-19137-62	. . HINGE PIN, OUTBOARD COVE LIP DOOR (RH ONLY)		1
	40	65-19137-52	. . HINGE PIN, OUTBOARD COVE LIP DOOR (LH ONLY)		1
	40	65-19137-64	. . HINGE PIN, OUTBOARD COVE LIP DOOR (RH ONLY)		1
	41A	69-24713-3	. . HINGE HALF, OUTBOARD COVE LIP DOOR.		1
	41B	69-24713-7	. . HINGE HALF, OUTBOARD COVE LIP DOOR.		1
	41C	65-19137-91	. . HINGE HALF, OUTBOARD COVE LIP DOOR (LH ONLY). . . .		1
	41C	65-19137-92	. . HINGE HALF, OUTBOARD COVE LIP DOOR (RH ONLY). . . .		1
	42	65-19137-5	. DOOR ASSY, OUTBOARD COVE LIP (LH ONLY) (SEE FIG. 38)	0103	1
R R	42	65-19137-5	. DOOR ASSY, (LH ONLY) (DELETED BY SB 3020) (SEE FIG. 38)	0450	1
	42	65-19137-6	. DOOR ASSY, OUTBOARD COVE LIP (RH ONLY) (SEE FIG. 38)	0103	1
R R	42	65-19137-6	. DOOR ASSY, (RH ONLY) (DELETED BY SB 3020) (SEE FIG. 38)	0450	1
R	42	65-19137-111A	. DOOR ASSY, (LH ONLY) (SEE FIG. 38).	5151	1
R	42	65-19137-111	. DOOR ASSY, (LH ONLY) (ADDED BY SB 3020) (SEE FIG. 38)	0450	1
R	42	65-19137-112A	. DOOR ASSY, OUTBOARD COVE LIP (RH ONLY) (SEE FIG. 38)	5151	1
R	42	65-19137-112	. DOOR ASSY, (RH ONLY) (ADDED BY SB 3020) (SEE FIG. 38)	0450	1
R R	42	65-19137-111H	. DOOR ASSY, (LH ONLY) (SEE FIG. 38). . . . . (OPTIONAL TO 65-19137-121H)	5299	1
R R	42	65-19137-121H	. DOOR ASSY, (LH ONLY) (SEE FIG. 38). . . . . (OPTIONAL 65-19137-111H)	5299	1
R R	42	65-19137-112H	. DOOR ASSY, OUTBOARD COVE LIP (RH ONLY) (SEE FIG. 38) (OPTIONAL TO 65-19137-122H)	5299	1
R R	42	65-19137-122H	. DOOR ASSY, (RH ONLY) (SEE FIG. 38). . . . . (OPTIONAL 65-19137-112H)	5299	1
	43	65-19137-81	. DOOR ASSY, (LH ONLY) (SEE FIG. 40).	0103	1
R R	43	65-19137-81	. DOOR ASSY, (LH ONLY) (DELETED BY SB 3020) (SEE FIG. 40)	0450	1
	43	65-19137-82	. DOOR ASSY, (RH ONLY) (SEE FIG. 40).	0103	1
R R	43	65-19137-82	. DOOR ASSY, (RH ONLY) (DELETED BY SB 3020) (SEE FIG. 40)	0450	1
R	43	65-19137-113	. DOOR ASSY, (LH ONLY) (ADDED BY SB 3020) (SEE FIG. 40)	0450	1
R	43	65-19137-113A	. DOOR ASSY, (LH ONLY) (SEE FIG. 40).	5151	1
R	43	65-19137-114	. DOOR ASSY, (RH ONLY) (ADDED BY SB 3020) (SEE FIG. 40)	0450	1
R	43	65-19137-114A	. DOOR ASSY, (RH ONLY) (SEE FIG. 40).	5151	1
R R	43	65-19137-113H	. DOOR ASSY, (LH ONLY) (SEE FIG. 40). . . . . (OPTIONAL TO 65-19137-123H)	5299	1
R R	43	65-19137-123H	. DOOR ASSY, (LH ONLY) (SEE FIG. 40). . . . . (OPTIONAL 65-19137-113H)	5299	1
R R	43	65-19137-114H	. DOOR ASSY, (RH ONLY) (SEE FIG. 40). . . . . (OPTIONAL TO 65-19137-124H)	5299	1
R R	43	65-19137-124H	. DOOR ASSY, (RH ONLY) (SEE FIG. 40). . . . . (OPTIONAL 65-19137-114H)	5299	1
	44	65-19137-79	. DOOR ASSY, (REWORKED BY SB 3169) (MAY USE . . . . . 65-19137-115 AFTER SB 3169 INCORPORATION) (LH ONLY) (SEE FIG. 42)	0103	1
R R R	44	65-19137-79	. DOOR ASSY, (REWORKED BY SB 3020) (MAY USE . . . . . 65-19137-115 AFTER SB 3020 INCORPORATION) (LH ONLY) (SEE FIG. 42)	0450	1
	44	65-19137-80	. DOOR ASSY, (REWORKED BY SB 3169) (MAY USE . . . . . 65-19137-116 AFTER SB 3169 INCORPORATION) (RH ONLY) (SEE FIG. 42)	0103	1
R R R	44	65-19137-80	. DOOR ASSY, (REWORKED BY SB 3020) (MAY USE . . . . . 65-19137-116 AFTER SB 3020 INCORPORATION) (RH ONLY) (SEE FIG. 42)	0450	1
R	44	65-19137-115A	. DOOR ASSY, (LH ONLY) (SEE FIG. 42).	5151	1
R	44	65-19137-116A	. DOOR ASSY, (RH ONLY) (SEE FIG. 42).	5151	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R	36 44	65-19137-115H	. DOOR ASSY, (LH ONLY) (SEE FIG. 42). . . . . (OPTIONAL TO 65-19137-125H)	5299	1
R R	44	65-19137-125H	. DOOR ASSY, (LH ONLY) (SEE FIG. 42). . . . . (OPTIONAL 65-19137-115H)	5299	1
R R	44	65-19137-116H	. DOOR ASSY, (RH ONLY) (SEE FIG. 42). . . . . (OPTIONAL TO 65-19137-126H)	5299	1
R R	44	65-19137-126A	. DOOR ASSY, (RH ONLY) (SEE FIG. 42). . . . . (OPTIONAL 65-19137-116H)	5299	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

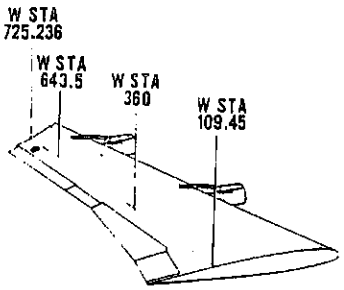

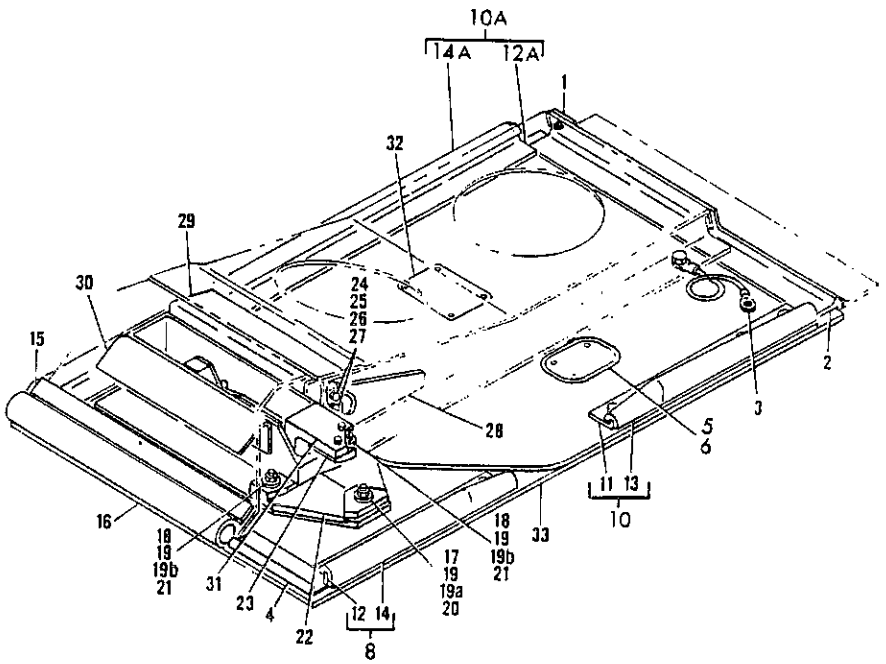


FIGURE 38. DOOR ASSY, OUTBOARD COVE LIP

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	38	65-19137-5	DOOR ASSY, OUTBOARD COVE LIP (LH) (SEE FIG. 36, ITEM. . 42)	0103	RF
R R		65-19137-5	DOOR ASSY, OUTBOARD COVE LIP (LH) (DELETED BY SB 3020) (SEE FIG. 36, ITEM 42)	0450	RF
R R		65-19137-111	DOOR ASSY, OUTBOARD COVE LIP (LH) (ADDED BY SB 3020). . (SEE FIG. 36, ITEM 42)	0450	RF
R R		65-19137-111A	DOOR ASSY, OUTBOARD COVE LIP (LH) (SEE FIG. 36, ITEM. . 42)	5151	RF
R R R		65-19137-111H	DOOR ASSY, OUTBOARD COVE LIP (LH) (SEE FIG. 36, ITEM. . 42) (OPTIONAL TO 65-19137-121H)	5299	RF
R R R		65-19137-121H	DOOR ASSY, OUTBOARD COVE LIP (LH) (SEE FIG. 36, ITEM. . 42) (OPTIONAL 65-19137-111H)	5299	RF
		65-19137-6	DOOR ASSY, OUTBOARD COVE LIP (RH) (SEE FIG. 36, ITEM. . 42)	0103	RF
R R		65-19137-6	DOOR ASSY, OUTBOARD COVE LIP (RH) (DELETED BY SB 3020) (SEE FIG. 36, ITEM 42)	0450	RF
R R		65-19137-112	DOOR ASSY, OUTBOARD COVE LIP (RH) (ADDED BY SB 3020). . (SEE FIG. 36, ITEM 42)	0450	RF
R R		65-19137-112A	DOOR ASSY, OUTBOARD COVE LIP (RH) (SEE FIG. 36, ITEM. . 42)	5151	RF
R R R		65-19137-112H	DOOR ASSY, OUTBOARD COVE LIP (RH) (SEE FIG. 36, ITEM. . 42) (OPTIONAL TO 65-19137-122H)	5299	RF
R R R		65-19137-122H	DOOR ASSY, OUTBOARD COVE LIP (RH) (SEE FIG. 36, ITEM. . 42) (OPTIONAL 65-19137-112H)	5299	RF
	1	63-2569	. LOCK, HINGE PIN (ALTERED FROM AN257H5-800).		1
			ATTACHING PARTS		
		NAS603-7	. SCREW		1
		AN960D10	. WASHER.		1
		NAS679A3	. NUT		1
			-------*-------		
	2	65-19137-37	. HINGE HALF, OUTBOARD COVE LIP DOOR (LH ONLY). . . . . (USED ON 65-19137-5, -111)		1
R R	2	65-19137-149	. HINGE HALF, OUTBOARD COVE LIP DOOR (LH ONLY) (USED ON 65-19137-121)	5299	1
	2	65-19137-38	. HINGE HALF, OUTBOARD COVE LIP DOOR (RH ONLY). . . . . (USED ON 65-19137-6, -112)		1
R R	2	65-19137-150	. HINGE HALF, OUTBOARD COVE LIP DOOR (RH ONLY) (USED ON 65-19137-122)	5299	1
			ATTACHING PARTS		
		MS20426D6	. RIVET		13
			-------*-------		
	3	BACJ40K5A5A10	. JUMPER.		1
			ATTACHING PARTS		
		NAS514P1032-7	. SCREW		2
		AN960-10	. WASHER.		2
		NAS679A3W	. NUT		2
			-------*-------		
	4	65-19137-77	. DEPRESSOR, OUTBOARD COVE LIP DOOR SEAL.		1
			ATTACHING PARTS		
		MS20426B5	. RIVET		3
			-------*-------		
	6	66-13769-1	. STRIP, OUTBOARD COVE LIP DOOR RUB		1
	8	69-14438-53	. SEAL ASSY, DOOR (LH ONLY) . . . . . (OPTIONAL 69-14438-35)		1
	8	69-14438-35	. SEAL ASSY, DOOR (LH ONLY) . . . . . (OPTIONAL TO 69-14438-53)		1
	9	69-14438-54	. SEAL ASSY, DOOR (RH ONLY) . . . . . (OPTIONAL 69-14438-36)		1
	9	69-14438-36	. SEAL ASSY, DOOR (RH ONLY) . . . . . (OPTIONAL TO 69-14438-54)		1
	10	69-14438-55	. SEAL ASSY, DOOR (LH ONLY) . . . . . (OPTIONAL 69-14438-39)		1
	10	69-14438-39	. SEAL ASSY, DOOR (LH ONLY) . . . . . (OPTIONAL TO 69-14438-55)		1
	10	69-14438-56	. SEAL ASSY, DOOR (RH ONLY) . . . . . (OPTIONAL 69-14438-40)		1
	10	69-14438-40	. SEAL ASSY, DOOR (RH ONLY) . . . . . (OPTIONAL TO 69-14438-56)		1
	10A	69-14438-43	. SEAL ASSY, DOOR (LH ONLY)		1
	10A	69-14438-44	. SEAL ASSY, DOOR (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	38		ATTACHING PARTS		
		NAS514P1032-7	. SCREW		18
		AN960D10	. WASHER.		18
		NAS679A3W	. NUT		18
			-------*-------		
	11	69-14438-41	. . ANGLE, OUTBOARD COVE LIP DOOR SEAL (USED ON . . . . 69-14438-39)		1
	11	69-14438-42	. . ANGLE, OUTBOARD COVE LIP DOOR SEAL (USED ON . . . . 69-14438-40)		1
	11	69-14438-63	. . ANGLE, (USED ON 69-14438-55).		1
	11	69-14438-64	. . ANGLE, (USED ON 69-14438-56).		1
	12	69-14438-37	. . ANGLE, OUTBOARD COVE LIP DOOR SEAL (USED ON . . . . 69-14438-35)		1
	12	69-14438-38	. . ANGLE, OUTBOARD COVE LIP DOOR SEAL (USED ON . . . . 69-14438-36)		1
	12	69-14438-59	. . ANGLE, (USED ON 69-14438-53).		1
	12	69-14438-60	. . ANGLE, (USED ON 69-14438-54).		1
	12A	69-14438-45	. . ANGLE, (USED ON 69-14438-43).		1
	12A	69-14438-46	. . ANGLE, (USED ON 69-14438-44).		1
	13	69-14438-27	. . SEAL, MOHAIR (EXTRUSION NO. BAC1523-17 (OPTIONAL. . EXTRUSION NO. BAC1523-7) X 9.9 IN. LG) (USED ON 69-14438-39)		1
	13	69-14438-28	. . SEAL, MOHAIR (EXTRUSION NO. BAC1523-17 (OPTIONAL. . EXTRUSION NO. BAC1523-7) X 9.9 IN. LG) (USED ON 69-14438-40)		1
	13	69-14438-65	. . SEAL, MOHAIR (EXTRUSION NO. BAC1523-17 (OPTIONAL. . EXTRUSION NO. BAC1523-7) X 9.9 IN. LG) (USED ON 69-14438-55)		1
	13	69-14438-66	. . SEAL, MOHAIR (EXTRUSION NO. BAC1523-17 (OPTIONAL. . EXTRUSION NO. BAC1523-7) X 9.9 IN. LG) (USED ON 69-14438-56)		1
	14	69-14438-13	. . SEAL, MOHAIR (EXTRUSION NO. BAC1523-17 (OPTIONAL. . EXTRUSION NO. BAC1523-7) X 7.8 IN. LG) (USED ON 69-14438-35)		1
	14	69-14438-14	. . SEAL, MOHAIR (EXTRUSION NO. BAC1523-17 (OPTIONAL. . EXTRUSION NO. BAC1523-7) X 7.8 IN. LG) (USED ON 69-14438-36)		1
	14	69-14438-61	. . SEAL, MOHAIR (EXTRUSION NO. BAC1523-17 (OPTIONAL. . EXTRUSION NO. BAC1523-7) X 7.7 IN. LG) (USED ON 69-14438-53)		1
	14	69-14438-62	. . SEAL, MOHAIR (EXTRUSION NO. BAC1523-17 (OPTIONAL. . EXTRUSION NO. BAC1523-7) X 7.7 IN. LG) (USED ON 69-14438-54		1
	14A	69-14438-21	. . SEAL, MOHAIR (EXTRUSION NO. BAC1523-17 (OPTIONAL. . EXTRUSION NO. BAC1523-7) X 21.2 IN LG) (USED ON 69-14438-43)		1
	14A	69-14438-22	. . SEAL, MOHAIR (EXTRUSION NO. BAC1523-17 (OPTIONAL. . EXTRUSION NO. BAC1523-7) X 21.2 IN LG) (USED ON 69-14438-44)		1
	15	65-21926-3	. RETAINER, COVE LIP DOOR SEAL.	0103	1
R	15	65-21926-3	. RETAINER, SEAL (DELETED BY SB 3020)	0450	1
R	15	65-21926-9	. RETAINER, SEAL (ADDED BY SB 3020)	0450	1
R	15	65-21926-9	. RETAINER, COVE LIP DOOR SEAL.	5199	1
			ATTACHING PARTS		
		NAS514P632-8	. SCREW		4
		NAS514P440-8	. SCREW		2
		NAS679A04W	. NUT		2
			-------*-------		
	16	65-19137-58	. SEAL, OUTBOARD COVE LIP DOOR (EXTRUSION NO. BAC1530-6 X 8.40 IN. LG)	0103	1
R R	16	65-19137-58	. SEAL, (EXTRUSION NO. BAC1530-6 X 8.40 IN. LG) . . . . (DELETED BY SB 3020)	0450	1
R R R R	16	65-19137-119	. SEAL, OUTBOARD COVE LIP DOOR (EXTRUSION NO. BAC1530-6 X 7.60 IN. LG) (USED ON 65-19137-5, -6, -111, -112, -121, -122)	5199	1
R R	16	65-19137-119	. SEAL, (EXTRUSION NO. BAC1530-6 X 7.60 IN. LG) (ADDED BY SB 3020)	0450	1
	17	NAS517-3-11	. SCREW		1
	18	NAS517-4-11	. SCREW		2
	19	MS35335-33	. WASHER, LOCK.		3
	19A	AN960PD10	. WASHER.		1
	19B	AN960PD416	. WASHER.		2
	20	NAS679A3W	. NUT		1
	21	NAS679A4W	. NUT		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	38 22	69-15370-7	. GUIDE, COVE LIP DOOR LATCH.	0103	1
R	22	69-15370-7	. GUIDE, LATCH (DELETED BY SB 3020)	0450	1
R R	22	69-15370-13	. GUIDE, COVE LIP DOOR LATCH (USED ON 65-19137-5, -6. -111, -112, -121, -122)	5199	1
R	22	69-15370-13	. GUIDE, LATCH (ADDED BY SB 3020)	0450	1
	23	69-15370-6	. STRIP, COVE LIP DOOR LATCH GUIDE RUB.		1
			ATTACHING PARTS		
		NAS517-3-13	. SCREW		2
		AN960D10	. WASHER.		2
		69-16790-3	. FILLER, COVE LIP DOOR		1
		BACS40B14-20	. SHIM.		AR
		NAS679A3W	. NUT		2
			-------*-------		
	24	NAS1103-3W	. BOLT.		2
	25	BACS40A13-23	. SHIM.		AR
	26	AN960D10	. WASHER.		2
	27	NAS679A3W	. NUT		2
	28	69-15318-1	. CLIP, COVE LIP DOOR (LH ONLY)		1
	28	69-15318-2	. CLIP, COVE LIP DOOR (RH ONLY)		1
			ATTACHING PARTS		
		MS20426D5	. RIVET		2
		MS20470D5	. RIVET		2
			-------*-------		
	29	69-15318-13	. CLIP, COVE LIP DOOR (LH ONLY)		1
	29	69-15318-14	. CLIP, COVE LIP DOOR (RH ONLY)		1
			ATTACHING PARTS		
		BACB30FM6-4	. BOLT, (OPTIONAL NAS1103-4W WITH AN960D10 AND. NAS679A3W)		6
		BACS40A12-13	. SHIM.		AR
		BACS40A13-65	. SHIM.		AR
		BACC30M6	. COLLAR.		6
			-------*-------		
	30	69-15318-15	. CLIP, COVE LIP DOOR (LH ONLY)		1
	30	69-15318-16	. CLIP, COVE LIP DOOR (RH ONLY)		1
			ATTACHING PARTS		
		BACB30FM6-4	. BOLT, (OPTIONAL NAS1103-4W WITH AN960D10 AND. NAS679A3W)		5
		BACS40R07B07	. SHIM.		AR
		BACS40B13-86	. SHIM.		AR
		BACC30M6	. COLLAR.		5
			-------*-------		
	31	H727-1	. LATCH ASSY, (V83014).		1
			ATTACHING PARTS		
		MS20426D6	. RIVET		11
		MS20426D5	. RIVET		7
		BACB30FM6-2	. RIVET		4
		NAS517-3-5	. SCREW		1
		NAS517-3-4	. SCREW		10
		AN960D10	. WASHER.		11
		NAS679A3W	. NUT		11
			-------*-------		
	32	AN7510-1	. PLATE		1
R	33	65-19137-19	. PANEL ASSY, OUTBOARD COVE LIP DOOR BONDED (LH ONLY)	0150	1
R R	33	65-19137-19A	. PANEL ASSY, OUTBOARD COVE LIP DOOR BONDED (LH ONLY) (USED ON 65-19137-111)	5151	1
R R	33	65-19137-129H	. PANEL ASSY, OUTBOARD COVE LIP DOOR BONDED (LH ONLY) (USED ON 65-19137-121)	5299	1
R R	33	65-19137-19H	. PANEL ASSY, OUTBOARD COVE LIP DOOR BONDED (LH ONLY) (USED ON 65-19137-111)	5299	1
R	33	65-19137-20	. PANEL ASSY, OUTBOARD COVE LIP DOOR BONDED (RH ONLY)	0150	1
R R	33	65-19137-20A	. PANEL ASSY, OUTBOARD COVE LIP DOOR BONDED (RH ONLY) (USED ON 65-19137-112)	5151	1
R R	33	65-19137-20H	. PANEL ASSY, OUTBOARD COVE LIP DOOR BONDED (RH ONLY) (USED ON 65-19137-112)	5299	1
R R	33	65-19137-130H	. PANEL ASSY, OUTBOARD COVE LIP DOOR BONDED (RH ONLY) (USED ON 65-19137-122)	5299	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

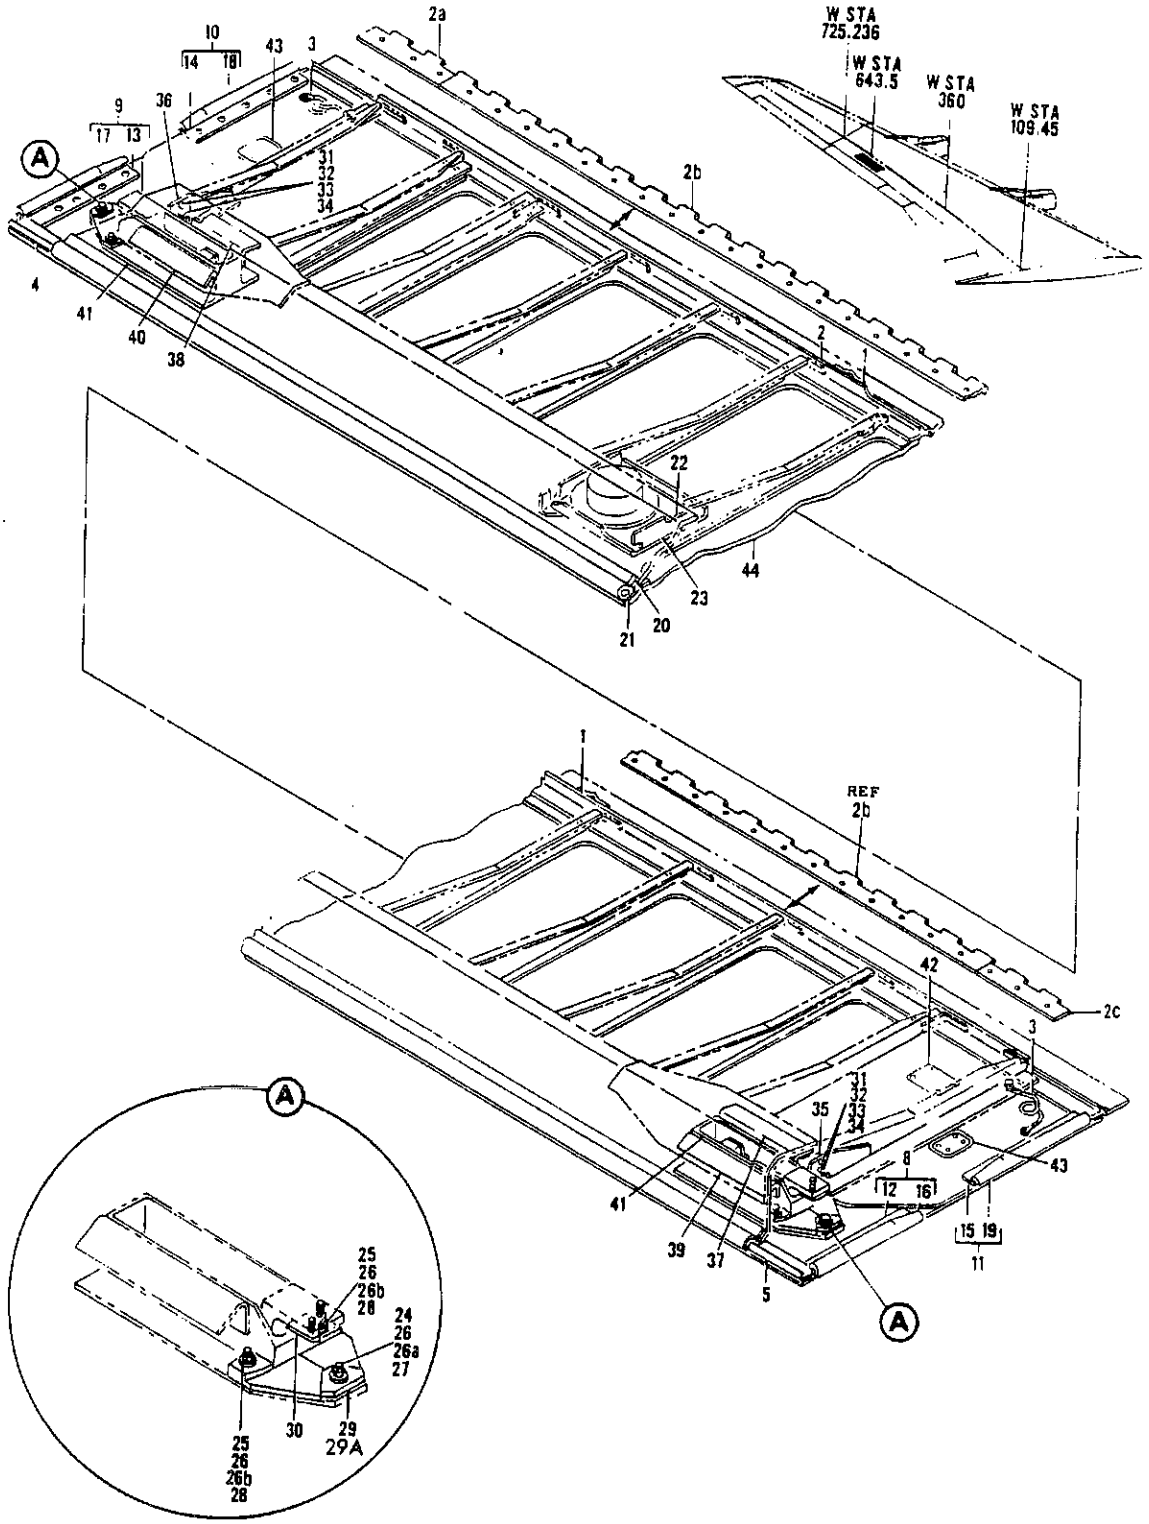


FIGURE 40. DOOR ASSY, OUTBOARD COVE LIP

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	40	65-19137-81	DOOR ASSY, OUTBOARD COVE LIP (LH) (SEE FIG. 36, ITEM. . 43)	0103	RF
R R		65-19137-81	DOOR ASSY, OUTBOARD COVE LIP (LH) (DELETED BY SB 3020) (SEE FIG. 36, ITEM 43)	0450	RF
R R		65-19137-113	DOOR ASSY, OUTBOARD COVE LIP (LH) (ADDED BY SB 3020). . (SEE FIG. 36, ITEM 43)	0450	RF
R R		65-19137-113A	DOOR ASSY, OUTBOARD COVE LIP (LH) (SEE FIG. 36, ITEM. . 43)	5151	RF
R R R R		65-19137-113H	DOOR ASSY, OUTBOARD COVE LIP (LH) (SEE FIG. 36, ITEM. . 43) (OPTIONAL TO 65-19137-123H)	5299	RF
R R R R		65-19137-123H	DOOR ASSY, OUTBOARD COVE LIP (LH) (SEE FIG. 36, ITEM. . 43) (OPTIONAL 65-19137-113H)	5299	RF
		65-19137-82	DOOR ASSY, OUTBOARD COVE LIP (RH) (SEE FIG. 36, ITEM. . 43)	0103	RF
R R		65-19137-82	DOOR ASSY, OUTBOARD COVE LIP (RH) (DELETED BY SB 3020) (SEE FIG. 36, ITEM 43)	0450	RF
R R		65-19137-114	DOOR ASSY, OUTBOARD COVE LIP (RH) (ADDED BY SB 3020). . (SEE FIG. 36, ITEM 43)	0450	RF
R R		65-19137-114A	DOOR ASSY, OUTBOARD COVE LIP (RH) (SEE FIG. 36, ITEM. . 43)	5151	RF
R R R R		65-19137-114H	DOOR ASSY, OUTBOARD COVE LIP (RH) (SEE FIG. 36, ITEM. . 43) (OPTIONAL TO 65-19137-124H)	5299	RF
R R R		65-19137-124H	DOOR ASSY, OUTBOARD COVE LIP (RH) (SEE FIG. 36, ITEM. . 43) (OPTIONAL 65-19137-114H)	5299	RF
	1	66-1729-2000	. RETAINER, OUTBOARD COVE LIP DOOR HINGE PIN.		2
			ATTACHING PARTS		
		BACB30FM6-4	. BOLT, (OPTIONAL NAS1103-4W WITH AN960D10 AND. . . . NAS679A3W)		4
		BACC30M6	. COLLAR.		4
			-------*-------		
	2A	69-24713-17	. HINGE HALF, (LH ONLY) (USED ON 65-19137-81 AND -113)		1
	2A	69-24713-18	. HINGE HALF, (RH ONLY) (USED ON 65-19137-82 AND -114)		1
	2B	65-19137-89	. HINGE HALF, (LH ONLY) (USED ON 65-19137-81 AND -113)		1
	2B	65-19137-90	. HINGE HALF, (RH ONLY) (USED ON 65-19137-82 AND -114)		1
R	2B	65-19137-147	. HINGE HALF, (LH ONLY) (USED ON 65-19137-123).	5299	1
R	2B	65-19137-148	. HINGE HALF, (RH ONLY) (USED ON 65-19137-124).	5299	1
	2C	69-24713-9	. HINGE HALF, (USED ON 65-19137-81, -113, -82, AND. . . -114)		1
			ATTACHING PARTS		
		MS20426D6	. RIVET		85
			-------*-------		
	3	BACJ40K5A5A10	. JUMPER.		2
			ATTACHING PARTS		
		NAS514P1032-7	. SCREW		2
		AN960-10	. WASHER.		2
		NAS679A3W	. NUT		2
			-------*-------		
	4	65-19137-77	. DEPRESSOR, OUTBOARD COVE LIP DOOR SEAL.		1
	5	65-19137-78	. DEPRESSOR, OUTBOARD COVE LIP DOOR SEAL.		1
			ATTACHING PARTS		
		MS20426B5	. RIVET		6
			-------*-------		
	8	69-14438-53	. SEAL ASSY, DOOR (LH). . . . . (OPTIONAL 69-14438-35)		1
	8	69-14438-35	. SEAL ASSY, DOOR LH. . . . . (OPTIONAL TO 69-14438-53)		1
	9	69-14438-54	. SEAL ASSY, DOOR (RH). . . . . (OPTIONAL 69-14438-36)		1
	9	69-14438-36	. SEAL ASSY, DOOR RH. . . . . (OPTIONAL TO 69-14438-54)		1
	10	69-14438-56	. SEAL ASSY, DOOR RH (LH ONLY). . . . . (OPTIONAL 69-14438-40)		1
	10	69-14438-40	. SEAL ASSY, DOOR RH (LH ONLY). . . . . (OPTIONAL TO 69-14438-56)		1
	10	69-14438-55	. SEAL ASSY, DOOR LH (RH ONLY). . . . . (OPTIONAL 69-14438-39)		1
	10	69-14438-39	. SEAL ASSY, DOOR LH (RH ONLY). . . . . (OPTIONAL TO 69-14438-55)		1
	11	69-14438-57	. SEAL ASSY, DOOR LH (LH ONLY). . . . . (OPTIONAL 69-14438-47)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
40	11	69-14438-47	. SEAL ASSY, DOOR LH (LH ONLY). . . . . (OPTIONAL TO 69-14438-57)		1
	11	69-14438-58	. SEAL ASSY, DOOR RH (RH ONLY). . . . . (OPTIONAL TO 69-14438-48)		1
	11	69-14438-48	. SEAL ASSY, DOOR RH (RH ONLY). . . . . (OPTIONAL TO 69-14438-58)		1
			ATTACHING PARTS		
		NAS514P1032-7	. SCREW		18
		AN960D10	. WASHER.		18
		NAS679A3W	. NUT		18
			-------*-------		
	12	69-14438-37	. . ANGLE, OUTBOARD COVE LIP DOOR SEAL (USED ON . . . . 69-14438-35)		1
	12	69-14438-59	. . ANGLE, (LH ONLY) (USED ON 69-14438-53).		1
	13	69-14438-38	. . ANGLE, OUTBOARD COVE LIP DOOR SEAL (USED ON . . . . 69-14438-36)		1
	13	69-14438-60	. . ANGLE, (RH ONLY) (USED ON 69-14438-54).		1
	14	69-14438-42	. . ANGLE, OUTBOARD COVE LIP DOOR SEAL (USED ON . . . . 69-14438-40)		1
	14	69-14438-41	. . ANGLE, OUTBOARD COVE LIP DOOR SEAL (USED ON . . . . 69-14438-39)		1
	14	69-14438-63	. . ANGLE, (LH ONLY) (USED ON 69-14438-55).		1
	14	69-14438-64	. . ANGLE, (RH ONLY) (USED ON 69-14438-56).		1
	15	69-14438-49	. . ANGLE, OUTBOARD COVE LIP DOOR SEAL (USED ON . . . . 69-14438-47)		1
	15	69-14438-50	. . ANGLE, OUTBOARD COVE LIP DOOR SEAL (USED ON . . . . 69-14438-48)		1
	15	69-14438-67	. . ANGLE, (LH ONLY) (USED ON 69-14438-57).		1
	15	69-14438-68	. . ANGLE, (RH ONLY) (USED ON 69-14438-58).		1
	16	69-14438-13	. . SEAL, MOHAIR (EXTRUSION NO. BAC1523-17 (OPTIONAL. . EXTRUSION NO. BAC1523-7) X 7.8 IN. LG) (USED ON 69-14438-35)		1
	16	69-14438-61	. . SEAL, MOHAIR (EXTRUSION NO. BAC1523-17 (OPTIONAL. . EXTRUSION NO. BAC1523-7) X 7.8 IN. LG) (USED ON 69-14438-53)		1
	17	69-14438-14	. . SEAL, MOHAIR (EXTRUSION NO. BAC1523-17 (OPTIONAL. . EXTRUSION NO. BAC1523-7) X 7.8 IN. LG) (USED ON 69-14438-36)		1
	17	69-14438-62	. . SEAL, MOHAIR (EXTRUSION NO. BAC1523-17 (OPTIONAL. . EXTRUSION NO. BAC1523-7) X 7.7 IN. LG) (USED ON 69-14438-54)		1
	18	69-14438-28	. . SEAL, MOHAIR (EXTRUSION NO. BAC1523-17 (OPTIONAL. . EXTRUSION NO. BAC1523-7) X 9.9 IN. LG) (USED ON 69-14438-40)		1
	18	69-14438-27	. . SEAL, MOHAIR (EXTRUSION NO. BAC1523-17 (OPTIONAL. . EXTRUSION NO. BAC1523-7) X 9.9 IN. LG) (USED ON 69-14438-39)		1
	18	69-14438-65	. . SEAL, MOHAIR (EXTRUSION NO. BAC1523-17 (OPTIONAL. . EXTRUSION NO. BAC1523-7) X 7.7 IN. LG) (USED ON 69-14438-55)		1
	18	69-14438-66	. . SEAL, MOHAIR (EXTRUSION NO. BAC1523-17 (OPTIONAL. . EXTRUSION NO. BAC1523-7) X 9.9 IN. LG) (USED ON 69-14438-56)		1
	19	69-14438-33	. . SEAL, MOHAIR (EXTRUSION NO. BAC1523-17 (OPTIONAL. . EXTRUSION NO. BAC1523-7) X 7.7 IN. LG) (USED ON 69-14438-47)		1
	19	69-14438-34	. . SEAL, MOHAIR (EXTRUSION NO. BAC1523-17 (OPTIONAL. . EXTRUSION NO. BAC1523-7) X 7.7 IN. LG) (USED ON 69-14438-48)		1
	19	69-14438-69	. . SEAL, MOHAIR (EXTRUSION NO. BAC1523-17 (OPTIONAL. . EXTRUSION NO. BAC1523-7) X 7.7 IN. LG) (USED ON 69-14438-57)		1
	19	69-14438-70	. . SEAL, MOHAIR (EXTRUSION NO. BAC1523-17 (OPTIONAL. . EXTRUSION NO. BAC1523-7) X 7.7 IN. LG) (USED ON 69-14438-58)		1
	20	65-21926-2	. RETAINER, COVE LIP DOOR SEAL.	0103	1
R	20	65-21926-2	. RETAINER, SEAL (DELETED BY SB 3020)	0450	1
R	20	65-21926-8	. RETAINER, SEAL (ADDED BY SB 3020)	0450	1
R	20	65-21926-8	. RETAINER, COVE LIP DOOR SEAL.	5199	1
			ATTACHING PARTS		
		NAS514P632-8	. SCREW		8
		NAS514P440-8	. SCREW		42
		NAS679A04W	. NUT		42
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	40 21	65-19137-57	. SEAL, OUTBOARD COVE LIP DOOR (EXTRUSION NO. BAC1530-6 X 78.10 IN. LG)	0103	1
R R	21	65-19137-57	. SEAL, (EXTRUSION NO. BAC1530-6 X 78.10 IN. LG). . . . (DELETED BY SB 3020)	0450	1
R R	21	65-19137-118	. SEAL, OUTBOARD COVE LIP DOOR (EXTRUSION NO. BAC1530-6 X 76.50 IN. LG)	5199	1
R R	21	65-19137-118	. SEAL, (EXTRUSION NO. BAC1530-6 X 76.50 IN. LG) (ADDED BY SB 3020)	0450	1
	22	69-12730-7	. SUPPORT, COVE LIP DOOR DAMPER INERTIA ANGLE (LH ONLY)		1
	22	69-12730-8	. SUPPORT, COVE LIP DOOR DAMPER INERTIA ANGLE (RH ONLY)		1
	23	69-12729-1	. DAMPER ASSY, COVE LIP DOOR INERTIA (LH ONLY). . . .		1
	23	69-12729-2	. DAMPER ASSY, COVE LIP DOOR INERTIA (RH ONLY). . . .		1
			ATTACHING PARTS		
		MS20470D5	. RIVET		1
		MS20470D6	. RIVET		5
		BACS47F17-78A	. SHIM.		1
		BACS47B8-78A	. SHIM.		1
			-------*-------		
	24	NAS517-3-11	. SCREW		2
	25	NAS517-4-11	. SCREW		4
	26	MS35335-33	. WASHER, LOCK (USED ON 65-19137-113 AND -114). . . .		6
	26A	AN960PD10	. WASHER, (USED ON 65-19137-113 AND -114)		2
	26B	AN960PD416	. WASHER, (USED ON 65-19137-113 AND -114)		4
	27	NAS679A3W	. NUT		2
	28	NAS679A4W	. NUT		4
	29	69-15370-7	. GUIDE, LATCH (USED ON 65-19137-3, -4, -81, -82-105, -106)	0103	2
R	29	69-15370-7	. GUIDE, LATCH (DELETED BY SB 3020)	0450	2
R R	29	69-15370-13	. GUIDE, LATCH (USED ON 65-19137-113, -114)	5199	2
R	29	69-15370-13	. GUIDE, LATCH (ADDED BY SB 3020)	0450	2
R	29A	69-15370-13	. GUIDE, LATCH (USED ON 65-19137-123, -124)	5299	1
	30	69-15370-6	. STRIP, COVE LIP DOOR LATCH GUIDE RUB.		2
			ATTACHING PARTS		
		NAS517-3-13	. SCREW		4
		AN960D10	. WASHER.		4
		69-16790-3	. FILLER, COVE LIP DOOR		2
		BACS40B14-20	. SHIM.		AR
		NAS679A3W	. NUT		4
			-------*-------		
	31	NAS1103-3W	. BOLT.		4
	32	BACS40A13-23	. SHIM.		AR
	33	AN960D10	. WASHER.		4
	34	NAS679A3W	. NUT		4
	35	69-15318-1	. CLIP, COVE LIP DOOR		1
	36	69-15318-2	. CLIP, COVE LIP DOOR		1
			ATTACHING PARTS		
		MS20426D5	. RIVET		4
		MS20470D5	. RIVET		4
			-------*-------		
	37	69-15318-13	. CLIP.		1
	38	69-15318-14	. CLIP.		1
			ATTACHING PARTS		
		BACB30FM6-4	. BOLT, (OPTIONAL NAS1103-4W WITH AN960D10 AND. . . . NAS679A3W)		12
		BACS40A12-13	. SHIM.		AR
		BACS40A13-65	. SHIM.		AR
		BACC30M6	. COLLAR.		12
			-------*-------		
	39	69-15318-15	. CLIP.		1
	40	69-15318-16	. CLIP.		1
			ATTACHING PARTS		
		BACB30FM6-4	. BOLT, (OPTIONAL NAS1103-4W WITH AN960D10 AND. . . . NAS679A3W)		10
		BACS40B13-86	. SHIM.		AR
		BACS40R07B07	. SHIM.		AR
		BACC30M6	. COLLAR.		10
			-------*-------		
	41	H727-1	. LATCH ASSY, (V83014).		2
			ATTACHING PARTS		
		MS20426D6	. RIVET		22
		MS20426D5	. RIVET		14
		BACB30FM6-2	. BOLT.		4
		NAS1303-2W	. SCREW		4
		NAS517-3-5	. SCREW		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	40	NAS517-3-4	. SCREW		20
		AN960D10	. WASHER.		26
		NAS679A3W	. NUT		26
			-------*-------		
	42	AN7510-1	. PLATE		1
	43	66-13769-1	. STRIP, OUTBOARD COVE LIP DOOR RUB		2
R	44	65-19137-13	. PANEL ASSY, OUTBOARD COVE LIP DOOR BONDED (LH ONLY) .	0150	1
R	44	65-19137-13A	. PANEL ASSY, OUTBOARD COVE LIP DOOR BONDED (LH ONLY) .	5151	1
R			(USED ON 65-19137-3, -81, -105, -113)		
R	44	65-19137-129A	. PANEL ASSY, OUTBOARD COVE LIP DOOR BONDED (LH ONLY) .	5299	1
R			(USED ON 65-19137-123)		
R	44	65-19137-14	. PANEL ASSY, OUTBOARD COVE LIP DOOR BONDED (RH ONLY) .	0150	1
R	44	65-19137-14A	. PANEL ASSY, OUTBOARD COVE LIP DOOR BONDED (RH ONLY) .	5151	1
R			(USED ON 65-19137-4, -82, -106, -114)		
R	44	65-19137-130A	. PANEL ASSY, OUTBOARD COVE LIP DOOR BONDED (RH ONLY) .	5299	1
R			(USED ON 65-19137-124)		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

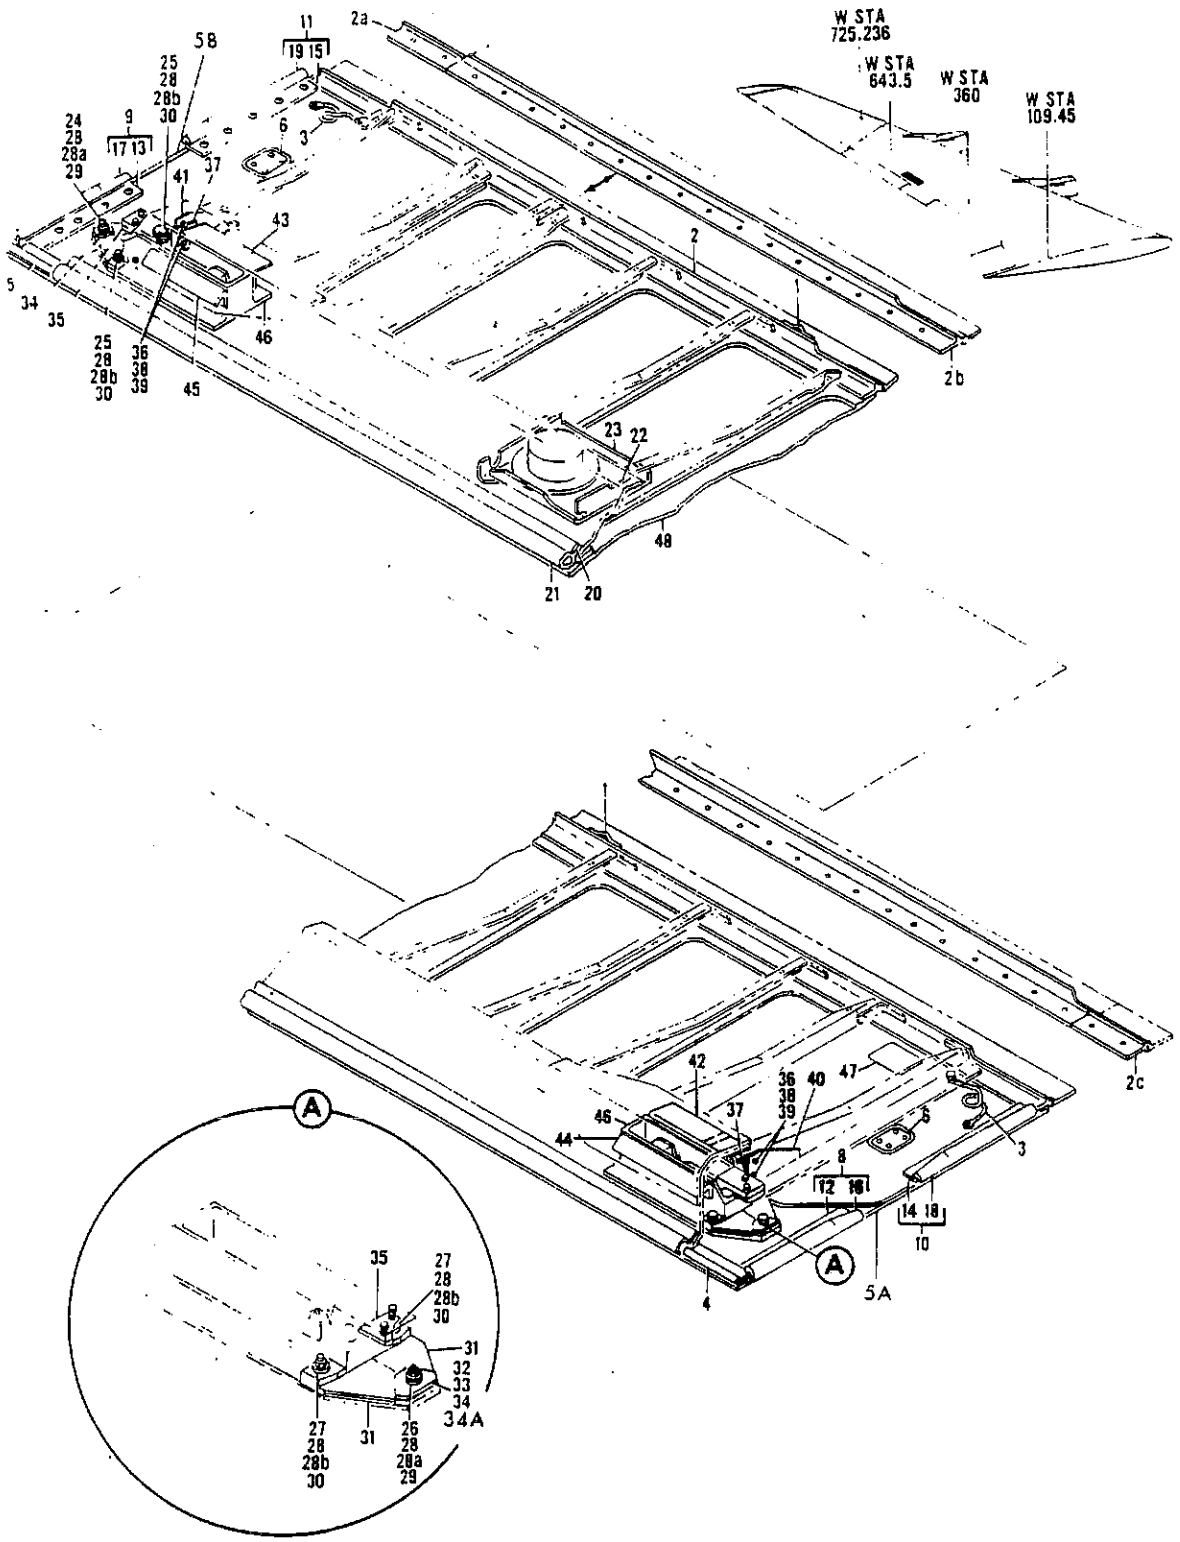


FIGURE 42. DOOR ASSY, OUTBOARD COVE LIP

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	42	65-19137-79	DOOR ASSY, OUTBOARD COVE LIP (LH) (REWORKED BY SB 3169) (MAY USE 65-19137-115 AFTER SB 3169 INCORPORATION) (SEE FIG. 36, ITEM 44)	0103	RF
R R R		65-19137-79	DOOR ASSY, OUTBOARD COVE LIP (LH) (REWORKED BY SB 3020) (MAY USE 65-19137-115 AFTER SB 3020 INCORPORATION) (SEE FIG. 36, ITEM 44)	0450	RF
R R		65-19137-115A	DOOR ASSY, OUTBOARD COVE LIP (LH) (SEE FIG. 36, ITEM. . 44)	5151	RF
R R R R		65-19137-115H	DOOR ASSY, OUTBOARD COVE LIP (LH) (SEE FIG. 36, ITEM. . 44) (OPTIONAL TO 65-19137-125H)	5299	RF
R R R		65-19137-125H	DOOR ASSY, OUTBOARD COVE LIP (LH) (SEE FIG. 36, ITEM. . 44) (OPTIONAL 65-19137-115H)	5299	RF
		65-19137-80	DOOR ASSY, OUTBOARD COVE LIP (RH) (REWORKED BY SB 3169) (MAY USE 65-19137-116 AFTER SB 3169 INCORPORATION) (SEE FIG. 36, ITEM 44)	0103	RF
R R R		65-19137-80	DOOR ASSY, OUTBOARD COVE LIP (RH) (REWORKED BY SB 3020) (MAY USE 65-19137-116 AFTER SB 3020 INCORPORATION) (SEE FIG. 36, ITEM 44)	0450	RF
R R		65-19137-116A	DOOR ASSY, OUTBOARD COVE LIP (RH) (SEE FIG. 36, ITEM. . 44)	5151	RF
R R R R		65-19137-116H	DOOR ASSY, OUTBOARD COVE LIP (RH) (SEE FIG. 36, ITEM. . 44) (OPTIONAL TO 65-19137-126A)	5299	RF
R R R		65-19137-126H	DOOR ASSY, OUTBOARD COVE LIP (RH) (SEE FIG. 36, ITEM. . 44) (OPTIONAL 65-19137-116A	5299	RF
	1	66-1729-2000	. RETAINER, OUTBOARD COVE LIP DOOR HINGE PIN.		2
			ATTACHING PARTS		
		BACB30FM6-4	. BOLT, (OPTIONAL NAS1103-4W WITH AN960D10 AND. . . . NAS679A3W)		4
		BACC30M6	. COLLAR.		4
			-------*-------		
	2A	69-24713-5	. HINGE HALF, AFT (USED ON 65-19137-79, -80, -109, -110 -115, -116, -125, -126)		1
	2B	65-19137-87	. HINGE HALF, AFT (LH ONLY) (USED ON 65-19137-79, -109 AND -115		1
	2B	65-19137-88	. HINGE HALF, AFT (RH ONLY) (USED ON 65-19137-80, -110 AND -116		1
R	2B	65-19137-145	. HINGE HALF, AFT (LH ONLY) (USED ON 65-19137-125). . .	5299	1
R	2B	65-19137-146	. HINGE HALF, AFT (RH ONLY) (USED ON 65-19137-126). . .	5299	1
	2C	69-24713-1	. HINGE HALF, AFT (USED ON 65-19137-79, -80, -109, -110 -115, -116, -125, -126)		1
			ATTACHING PARTS		
		MS20426D6	. RIVET		72
			-------*-------		
	3	BACJ40K5A5A10	. JUMPER.		2
			ATTACHING PARTS		
		NAS514P1032-7	. SCREW		2
		AN960-10	. WASHER.		2
		NAS679A3W	. NUT		2
			-------*-------		
	4	65-19137-77	. DEPRESSOR, OUTBOARD COVE LIP DOOR SEAL.		1
	5	65-19137-78	. DEPRESSOR, OUTBOARD COVE LIP DOOR SEAL.		1
			ATTACHING PARTS		
		MS20426B5	. RIVET		6
			-------*-------		
	5A	65-19137-107	. SEAL, RUBBER (LH)		1
	5B	65-19137-108	. SEAL, RUBBER (RH)		1
	6	66-13769-1	. STRIP, OUTBOARD COVE LIP DOOR RUB		2
	8	69-14438-53	. SEAL ASSY, DOOR (LH). . . . . (OPTIONAL 69-14438-35)		1
	8	69-14438-35	. SEAL ASSY, DOOR . . . . . (OPTIONAL TO 69-14438-53)		1
	9	69-14438-54	. SEAL ASSY, DOOR (RH). . . . . (OPTIONAL 69-14438-36)		1
	9	69-14438-36	. SEAL ASSY, DOOR . . . . . (OPTIONAL TO 69-14438-54)		1
	10	69-14438-55	. SEAL ASSY, DOOR (LH ONLY) . . . . . (OPTIONAL 69-14438-39)		1
	10	69-14438-39	. SEAL ASSY, DOOR (LH ONLY) . . . . . (OPTIONAL TO 69-14438-55)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
42 10	69-14438-56	. SEAL ASSY, DOOR (RH ONLY) . . . . . (OPTIONAL 69-14438-40)		1
10	69-14438-40	. SEAL ASSY, DOOR (RH ONLY) . . . . . (OPTIONAL TO 69-14438-56)		1
11	69-14438-58	. SEAL ASSY, DOOR (LH ONLY) . . . . . (OPTIONAL 69-14438-48)		1
11	69-14438-48	. SEAL ASSY, DOOR (LH ONLY) . . . . . (OPTIONAL TO 69-14438-58)		1
11	69-14438-57	. SEAL ASSY, DOOR (RH ONLY) . . . . . (OPTIONAL 69-14438-47)		1
11	69-14438-47	. SEAL ASSY, DOOR (RH ONLY) . . . . . (OPTIONAL TO 69-14438-57)		1
		ATTACHING PARTS		
	NAS514P1032-7	. SCREW		18
	AN960D10	. WASHER.		18
	NAS679A3W	. NUT		18
		-------*-------		
12	69-14438-37	. . ANGLE, (ALTERED FROM BAC1490-2250 X7.8 IN. LG). . . (USED ON 69-14438-35)		1
12	69-14438-59	. . ANGLE, (LH) (ALTERED FROM BAC1490-2576 X 7.8 IN.. . LG) (USED ON 69-14438-53)		1
13	69-14438-38	. . ANGLE, (ALTERED FROM BAC1490-2250 X7.8 IN. LG). . . (USED ON 69-14438-36)		1
13	69-14438-60	. . ANGLE, (RH) (ALTERED FROM BAC1490-2576 X 7.8 IN.. . LG) (USED ON 69-14438-54)		1
14	69-14438-41	. . ANGLE, (ALTERED FROM BAC1490-2250 X7.8 IN. LG). . . (USED ON 69-14438-39)		1
14	69-14438-42	. . ANGLE, (ALTERED FROM BAC1490-2250 X7.8 IN. LG). . . (USED ON 69-14438-40)		1
14	69-14438-63	. . ANGLE, (LH) (ALTERED FROM BAC1490-2576 X 8.9 IN.. . LG) (USED ON 69-14438-55)		1
14	69-14438-64	. . ANGLE, (RH) (ALTERED FROM BAC1490-2576 X 8.9 IN.. . LG) (USED ON 69-14438-56)		1
15	69-14438-50	. . ANGLE, (ALTERED FROM BAC1490-2250 X7.8 IN. LG). . . (USED ON 69-14438-48)		1
15	69-14438-49	. . ANGLE, (ALTERED FROM BAC1490-2250 X7.8 IN. LG). . . (USED ON 69-14438-47)		1
15	69-14438-67	. . ANGLE, (LH) (ALTERED FROM BAC1490-2576 X 7.7 IN.. . LG) (USED ON 69-14438-57)		1
15	69-14438-68	. . ANGLE, (RH) (ALTERED FROM BAC1490-2576 X 7.7 IN.. . LG) (USED ON 69-14438-58)		1
16	69-14438-13	. . SEAL, OUTBOARD COVE LIP DOOR MOHAIR (BAC1523-17 X . 7.8 IN. LG (OPTIONAL BAC1523-7 X 7.8 IN. LG)) (USED ON 69-14438-35)		1
16	69-14438-61	. . SEAL, MOHAIR (LH) (ALTERED FROM BAC1523-17 X. . . . 7.7 IN. LG (OPTIONAL ALTERED FROM BAC1523-7 X 7.7 IN. LG)) (USED ON 69-14438-53)		1
17	69-14438-14	. . SEAL, OUTBOARD COVE LIP DOOR MOHAIR (BAC1523-17 X . 7.8 IN. LG (OPTIONAL BAC1523-7 X 7.8 IN. LG)) (USED ON 69-14438-36)		1
17	69-14438-62	. . SEAL, MOHAIR (RH) (ALTERED FROM BAC1523-17 X. . . . 7.7 IN. LG (OPTIONAL ALTERED FROM BAC1523-7 X 7.7 IN. LG)) (USED ON 69-14438-54)		1
18	69-14438-27	. . SEAL, OUTBOARD COVE LIP DOOR MOHAIR (BAC1523-17 X . 9.9 IN. LG (OPTIONAL BAC1523-7 X 9.9 IN. LG)) (USED ON 69-14438-39)		1
18	69-14438-28	. . SEAL, OUTBOARD COVE LIP DOOR MOHAIR (BAC1523-17 X . 9.9 IN. LG (OPTIONAL BAC1523-7 X 9.9 IN. LG)) (USED ON 69-14438-40)		1
18	69-14438-65	. . SEAL, MOHAIR (LH) (ALTERED FROM BAC1523-17 X. . . . 9.9 IN. LG (OPTIONAL ALTERED FROM BAC1523-7 X 9.9 IN. LG)) (USED ON 69-14438-55)		1
18	69-14438-66	. . SEAL, MOHAIR (RH) (ALTERED FROM BAC1523-17 X. . . . 9.9 IN. LG (OPTIONAL ALTERED FROM BAC1523-7 X 9.9 IN. LG)) (USED ON 69-14438-56)		1
19	69-14438-34	. . SEAL, OUTBOARD COVE LIP DOOR MOHAIR (BAC1523-17 X . 7.7 IN. LG (OPTIONAL BAC1523-7 X 7.7 IN. LG)) (USED ON 69-14438-48)		1
	69-14438-33	. . SEAL, OUTBOARD COVE LIP DOOR MOHAIR (BAC1523-17 X . 7.7 IN. LG (OPTIONAL BAC1523-7 X 7.7 IN. LG)) (USED ON 69-14438-47)		1
19	69-14438-69	. . SEAL, MOHAIR (LH) (ALTERED FROM BAC1523-17 X. . . . 7.7 IN. LG (OPTIONAL ALTERED FROM BAC1523-7 X 7.7 IN. LG)) (USED ON 69-14438-57)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	42 19	69-14438-70	. . SEAL, MOHAIR (RH) (ALTERED FROM BAC1523-17 X. . . . 7.7 IN. LG (OPTIONAL ALTERED FROM BAC1523-7 X 7.7 IN. LG)) (USED ON 69-14438-58)		1
	20	65-21926-1	. RETAINER, COVE LIP DOOR	0103	1
R	20	65-21926-7	. RETAINER, (USED ON 65-19137-109, -110, -115, -116). .	5199	1
R	20	65-21926-1	. RETAINER, SEAL (DELETED BY SB 3020)	0450	1
R	20	65-21926-7	. RETAINER, SEAL (ADDED BY SB 3020)	0450	1
			ATTACHING PARTS		
		NAS514P632-8	. SCREW		8
		NAS514P440-8	. SCREW		34
		NAS679A04W	. NUT		34
			-------*-------		
	21	65-19137-56	. SEAL, OUTBOARD COVE LIP DOOR (EXTRUSION NO.;BAC1530-6 X 61.40 IN. LG)	0103	1
R	21	65-19137-56	. SEAL, (EXTRUSION NO. BAC1530-6 X 61.40 IN. LG). . . .	0450	1
R			(DELETED BY SB 3020)		
R	21	65-19137-117	. SEAL, (EXTRUSION NO.;BAC1530-6 X 59.8 IN. LG)	5199	1
R	21	65-19137-117	. SEAL, (EXTRUSION NO. BAC1530-6 X 59.8 IN. LG) (ADDED	0450	1
R			BY SB 3020)		
	22	69-12730-7	. SUPPORT, COVE LIP DOOR INERTIA DAMPER ANGLE (LH ONLY)		1
	22	69-12730-8	. SUPPORT, COVE LIP DOOR INERTIA DAMPER ANGLE (RH ONLY)		1
	23	69-12729-3	. DAMPER ASSY, COVE LIP DOOR INERTIA (LH ONLY).		1
	23	69-12729-4	. DAMPER ASSY, COVE LIP DOOR INERTIA (RH ONLY).		1
			ATTACHING PARTS		
		MS20470D5	. RIVET		2
		MS20426D5	. RIVET		4
		BACS47F17-78A	. SHIM.		1
		BACS4788-78A	. SHIM.		1
			-------*-------		
	24	NAS517-3-11	. SCREW		1
	25	NAS517-4-11	. SCREW		2
	26	NAS517-3-12	. SCREW		1
	27	NAS517-4-12	. SCREW		2
	28	MS35335-33	. WASHER, LOCK (USED ON 65-19137-79, -80, -109, -110, . -115 AND -116)		6
	28A	AN960PD10	. WASHER, (USED ON 65-19137-79, -80, -109, -110, -115 . AND -116)		2
	28B	AN960PD416	. WASHER, (USED ON 65-19137-79, -80, -109, -110, -115 . AND -116)		4
	29	NAS679A3W	. NUT		2
	30	NAS679A4W	. NUT		4
	31	69-16790-1	. SHIM, COVE LIP DOOR LAMINATED		AR
	32	BACS40A20-32	. SHIM.		AR
	33	BACS40B20-32	. SHIM.		AR
	34	69-15370-7	. GUIDE, LATCH (USED ON 65-19137-1, -2, -79-80-109, . . -110)	0103	2
R	34	69-15370-7	. GUIDE, LATCH (DELETED BY SB 3020)	0450	2
R	34	69-15370-13	. GUIDE, LATCH (USED ON 65-19137-115, -116)	5199	2
R	34	69-15370-13	. GUIDE, LATCH (ADDED BY SB 3020)	0450	2
R	34A	69-15370-13	. GUIDE, LATCH (USED ON 65-19137-125, -126)	5299	1
	35	69-15370-6	. STRIP, COVE LIP DOOR LATCH GUIDE RUB.		2
			ATTACHING PARTS		
		NAS517-3-13	. SCREW		2
		NAS517-3-12	. SCREW		2
		AN960D10	. WASHER.		4
		69-16790-2	. FILLER, COVE LIP DOOR		1
		69-16790-3	. FILLER, COVE LIP DOOR		1
		BACS40A14-20	. SHIM.		AR
		BACS40B14-20	. SHIM.		AR
		NAS679A3W	. NUT		4
			-------*-------		
	36	NAS1103-3W	. BOLT.		4
	37	BACS40A13-23	. SHIM.		AR
	38	AN960D10	. WASHER.		4
	39	NAS679A3W	. NUT		4
R	40	69-15318-1	. CLIP, COVE LIP DOOR	5199	1
R	41	69-15318-2	. CLIP, COVE LIP DOOR	5199	1
			ATTACHING PARTS		
R		MS20426D5	. RIVET	5199	4
R		MS20470D5	. RIVET	5199	4
			-------*-------		
	42	69-15318-13	. CLIP.		1
	43	69-15318-14	. CLIP.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	42		ATTACHING PARTS		
		BACB30FM6-4	. BOLT. . . . . (OPTIONAL NAS1103-4W WITH AN960D10 AND NAS679A3W)		12
		NAS1103-4W	. BOLT, (USED WITH AN960D10 AND NAS679A3W). . . . . (OPTIONAL TO BACB30FM6-4)		12
		AN960D10	. WASHER, (USED WITH NAS1103-4W).		12
		NAS679A3W	. NUT, (USED WITH BACB30FM6-4 AND NAS1103-4W)		12
		BACS40A12-13	. SHIM.		AR
		BACS40A13-65	. SHIM.		AR
		BACC30M6	. COLLAR.		12
			-------*-------		
	44	69-15318-15	. CLIP.		1
	45	69-15318-16	. CLIP.		1
			ATTACHING PARTS		
		BACB30FM6-4	. BOLT. . . . . (OPTIONAL NAS1103-4W WITH AN960D10 AND NAS679A3W)		10
		NAS1103-4W	. BOLT, (USED WITH AN960D10 AND NAS679A3W). . . . . (OPTIONAL TO BACB30FM6-4)		10
		AN960D10	. WASHER, (USED WITH NAS1103-4W).		10
		NAS679A3W	. NUT, (USED WITH BACB30FM6-4 AND NAS1103-4W)		10
		BACS40B13-86	. SHIM.		AR
		BACC30M6	. COLLAR.		10
			-------*-------		
	46	H727-1	. LATCH ASSY, (V83014) (USED ON 65-69137-79, -80, -109, -110, -115, -116, -125, -126)		2
			ATTACHING PARTS		
		MS20426D6	. RIVET		22
		MS20426D5	. RIVET		14
		BACB30FM6-2	. BOLT.		4
		NAS1303-2W	. BOLT.		4
		NAS517-3-5	. SCREW		2
		NAS517-3-4	. SCREW		20
		AN960D10	. WASHER.		26
		NAS679A3W	. NUT		26
			-------*-------		
	47	AN7510-1	. PLATE		1
R	48	65-19137-7	. PANEL ASSY, OUTBOARD COVE LIP DOOR BONDED (LH ONLY) .	0150	1
R	48	65-19137-7A	. PANEL ASSY, BONDED (LH ONLY) (USED ON 65-19137-115) .	5151	1
R	48	65-19137-125A	. PANEL ASSY, BONDED (LH ONLY) (USED ON 65-19137-125) .	5151	1
R	48	65-19137-8	. PANEL ASSY, OUTBOARD COVE LIP DOOR BONDED (RH ONLY) .	0150	1
R	48	65-19137-8A	. PANEL ASSY, BONDED (RH ONLY) (USED ON 65-19137-116) .	5151	1
R	48	65-19137-126A	. PANEL ASSY, BONDED (RH ONLY) (USED ON 65-19137-126) .	5151	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

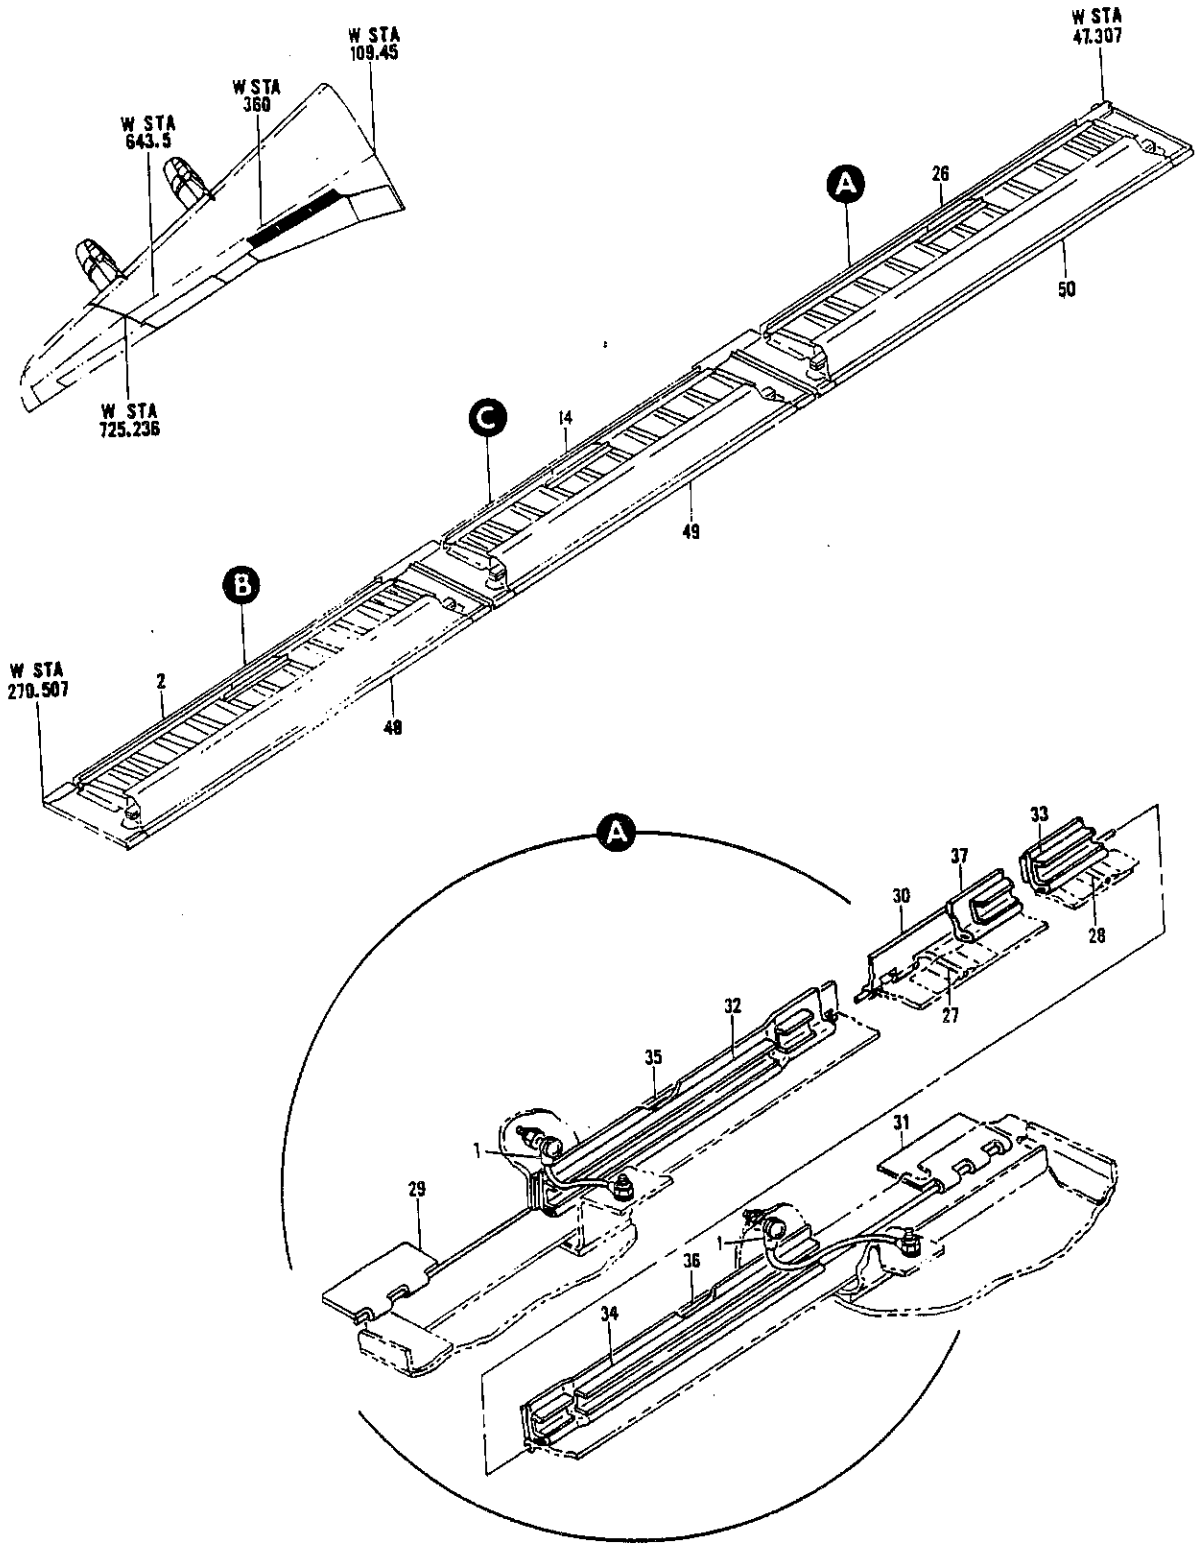


FIGURE 45. DOOR INSTL, INBOARD COVE LIP (SHEET 1)

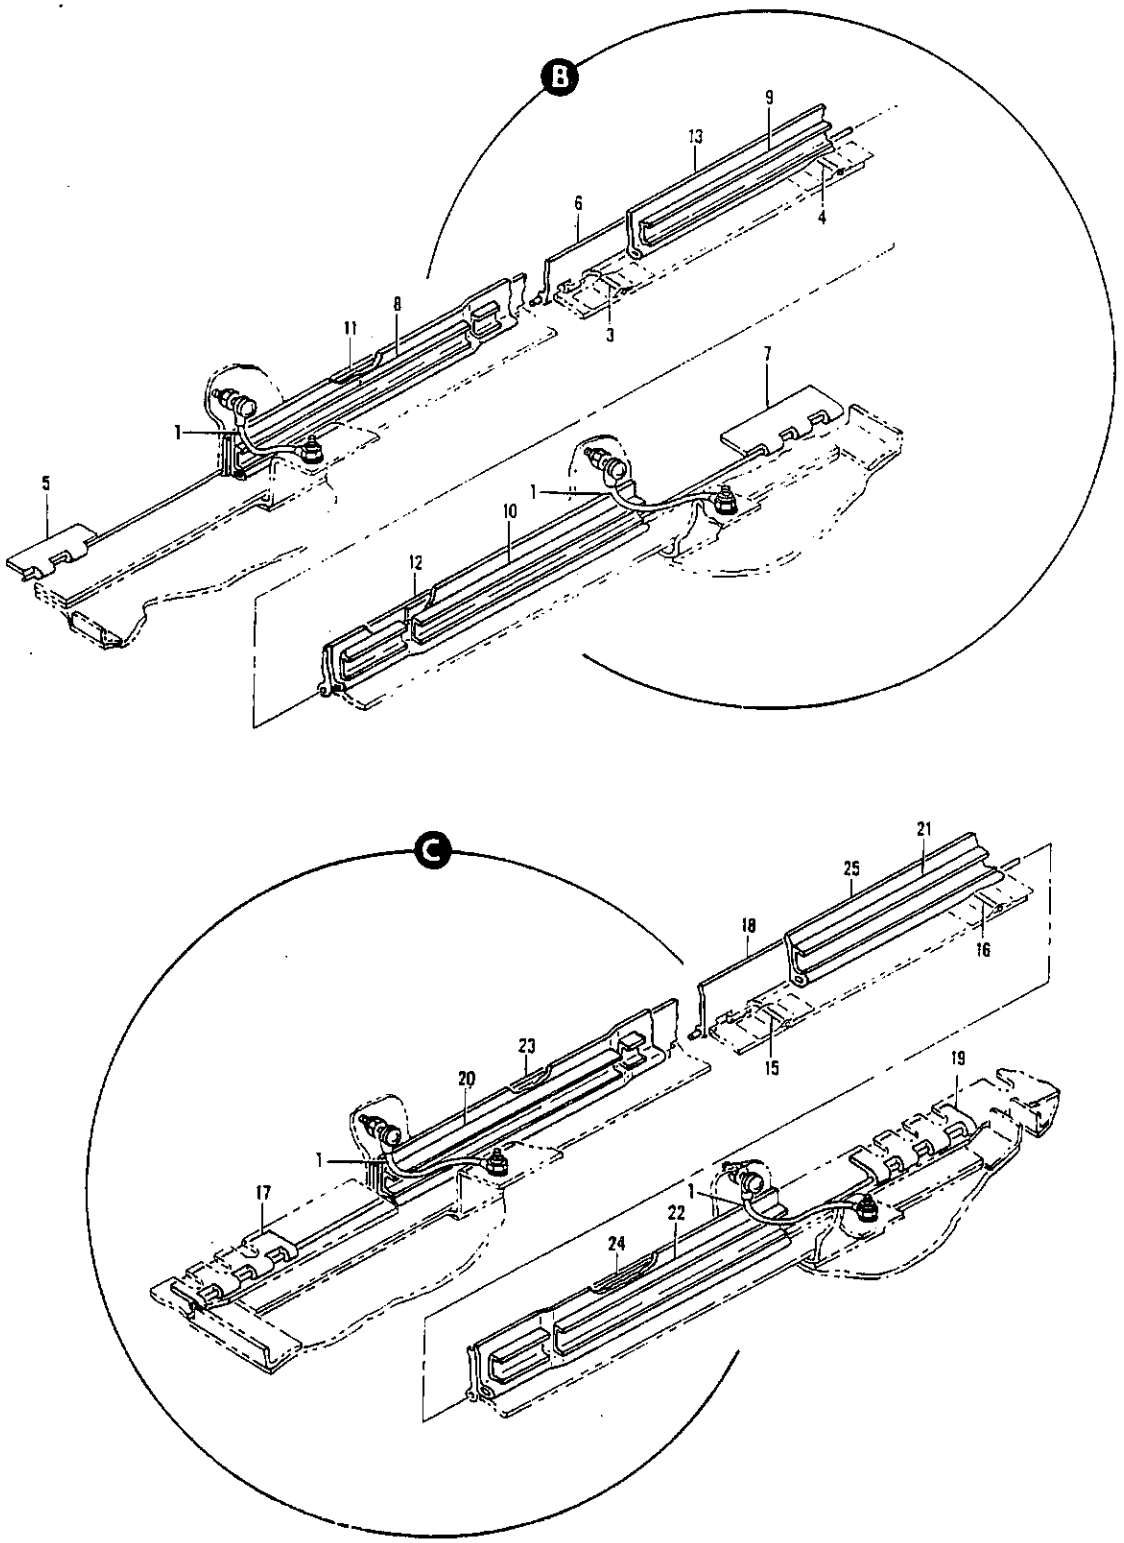


FIGURE 45. DOOR INSTL, INBOARD COVE LIP (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
45	65-19634-1	DOOR INSTL, INBOARD COVE LIP (LH) (SEE 57-1, FIG. 1, ITEM 17)		RF
	65-19634-2	DOOR INSTL, INBOARD COVE LIP (RH) (SEE 57-1, FIG. 1, ITEM 17)		RF
1	BACJ40K5A5A7	. JUMPER		6
		ATTACHING PARTS		
	NAS221-11	. SCREW		6
	NAS333CPA5	. BOLT		5
	NAS333CPA6	. BOLT		1
	AN960D10	. WASHER		18
	NAS679A3W	. NUT		12
		-------*-------		
2	65-19629-103	. HINGE ASSY, INBOARD COVE LIP DOOR (LH ONLY)		1
2	65-19629-104	. HINGE ASSY, INBOARD COVE LIP DOOR (RH ONLY)		1
		ATTACHING PARTS		
	BACB30ABP3-4A	. BOLT		5
	NAS1103-5	. BOLT		18
	NAS333CPA5	. BOLT		6
	NAS333CPA4	. BOLT		22
	AN960D10	. WASHER		70
	BACS40A14-36	. SHIM		AR
	BACS40A14-48	. SHIM		AR
	NAS679A3W	. NUT		46
		-------*-------		
3	65-19629-36	. . PIN, INBOARD COVE LIP DOOR HINGE (ALTERED FROM MS20253-2-3500)		1
4	65-19629-35	. . PIN, INBOARD COVE LIP DOOR HINGE (ALTERED FROM MS20253-2-3700)		1
5	69-24767-3	. . HINGE HALF, INBOARD COVE LIP DOOR (LH ONLY)		1
5	69-24767-4	. . HINGE HALF, INBOARD COVE LIP DOOR (RH ONLY)		1
6	65-19629-57	. . HINGE HALF, INBOARD COVE LIP DOOR (LH ONLY)		1
6	65-19629-58	. . HINGE HALF, INBOARD COVE LIP DOOR (RH ONLY)		1
7	69-24767-7	. . HINGE HALF, INBOARD COVE LIP DOOR (LH ONLY)		1
7	69-24767-8	. . HINGE HALF, INBOARD COVE LIP DOOR (RH ONLY)		1
8	65-19634-27	. RETAINER, INBOARD COVE LIP DOOR (LH ONLY)		1
8	65-19634-28	. RETAINER, INBOARD COVE LIP DOOR (RH ONLY)		1
9	65-19634-33	. RETAINER, INBOARD COVE LIP DOOR (LH ONLY)		1
9	65-19634-34	. RETAINER, INBOARD COVE LIP DOOR (RH ONLY)		1
10	65-19634-23	. RETAINER, INBOARD COVE LIP DOOR (LH ONLY)		1
10	65-19634-24	. RETAINER, INBOARD COVE LIP DOOR (RH ONLY)		1
11	65-19634-31	. DOUBLER, INBOARD COVE LIP DOOR (LH ONLY)		1
11	65-19634-32	. DOUBLER, INBOARD COVE LIP DOOR (RH ONLY)		1
12	65-19634-15	. DOUBLER, INBOARD COVE LIP DOOR (LH ONLY)		1
12	65-19634-16	. DOUBLER, INBOARD COVE LIP DOOR (RH ONLY)		1
13	65-19634-41	. SEAL, INBOARD COVE LIP DOOR (EXTRUSION NO. BAC1530-11 X 64.2 IN. LG) (LH ONLY)		1
13	65-19634-42	. SEAL, INBOARD COVE LIP DOOR (EXTRUSION NO. BAC1530-11 X 64.2 IN. LG) (RH ONLY)		1
14	65-19629-101	. HINGE ASSY, INBOARD COVE LIP DOOR (LH ONLY)		1
14	65-19629-102	. HINGE ASSY, INBOARD COVE LIP DOOR (RH ONLY)		1
		ATTACHING PARTS		
	BACB30ABP3-4A	. BOLT		6
	NAS1103-5	. BOLT		16
	NAS333CPA5	. BOLT		6
	NAS333CPA4	. BOLT		17
	AN960D10	. WASHER		61
	BACS40A14-48	. SHIM		AR
	BACS40A14-44	. SHIM		AR
	NAS679A3W	. NUT		39
		-------*-------		
15	65-19629-34	. . PIN, INBOARD COVE LIP DOOR HINGE (ALTERED FROM MS20253-2-2900)		1
16	65-19629-33	. . PIN, INBOARD COVE LIP DOOR HINGE (ALTERED FROM MS20253-2-3400)		1
17	69-24755-3	. . HINGE HALF, INBOARD COVE LIP DOOR (LH ONLY)		1
17	69-24755-4	. . HINGE HALF, INBOARD COVE LIP DOOR (RH ONLY)		1
18	65-19629-49	. . HINGE HALF, INBOARD COVE LIP DOOR (LH ONLY)		1
18	65-19629-50	. . HINGE HALF, INBOARD COVE LIP DOOR (RH ONLY)		1
19	69-24755-7	. . HINGE HALF, INBOARD COVE LIP DOOR (LH ONLY)		1
19	69-24755-8	. . HINGE HALF, INBOARD COVE LIP DOOR (RH ONLY)		1
20	65-19634-21	. RETAINER, INBOARD COVE LIP DOOR (LH ONLY)		1
20	65-19634-22	. RETAINER, INBOARD COVE LIP DOOR (RH ONLY)		1
21	65-19634-19	. RETAINER, INBOARD COVE LIP DOOR (LH ONLY)		1
21	65-19634-20	. RETAINER, INBOARD COVE LIP DOOR (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	45 22	65-19634-17	. RETAINER, INBOARD COVE LIP DOOR (LH ONLY)		1
	22	65-19634-18	. RETAINER, INBOARD COVE LIP DOOR (RH ONLY)		1
	23	65-19634-13	. DOUBLER, INBOARD COVE LIP DOOR (LH ONLY).		1
	23	65-19634-14	. DOUBLER, INBOARD COVE LIP DOOR (RH ONLY).		1
	24	65-19634-11	. DOUBLER, INBOARD COVE LIP DOOR (LH ONLY).		1
	24	65-19634-12	. DOUBLER, INBOARD COVE LIP DOOR (RH ONLY).		1
	25	65-19634-39	. SEAL, INBOARD COVE LIP DOOR (EXTRUSION NO. BAC1530-11 X 53.4 IN. LG) (LH ONLY)		1
	25	65-19634-40	. SEAL, INBOARD COVE LIP DOOR (EXTRUSION NO. BAC1530-11 X 53.4 IN. LG) (RH ONLY)		1
	26	65-19629-99	. HINGE ASSY, INBOARD COVE LIP DOOR (LH ONLY)		1
	26	65-19629-100	. HINGE ASSY, INBOARD COVE LIP DOOR (RH ONLY)		1
			ATTACHING PARTS		
		BACB30A8P3-4A	. BOLT.		2
		BACB30A8P3-6A	. BOLT.		3
		NAS1103-5	. BOLT.		16
		NAS1103-7	. BOLT.		3
		NAS333CPA5	. BOLT.		3
		NAS333CPA4	. BOLT.		24
		NAS333CPA7	. BOLT.		3
		AN960D10	. WASHER.		74
		BACS40A14-44	. SHIM, (OPTIONAL BACS40B14-44)		AR
		NAS679A3W	. NUT		49
			-------*-------		
	27	65-19629-32	. . PIN, INBOARD COVE LIP DOOR HINGE (ALTERED FROM. . . MS20253-2-3800)		1
	28	65-19629-31	. . PIN, INBOARD COVE LIP DOOR HINGE (ALTERED FROM. . . MS20253-2-3500)		1
	29	69-24755-11	. . HINGE HALF, INBOARD COVE LIP DOOR (LH ONLY)		1
	29	69-24755-12	. . HINGE HALF, INBOARD COVE LIP DOOR (RH ONLY)		1
	30	65-19629-41	. . HINGE HALF, INBOARD COVE LIP DOOR (LH ONLY)		1
	30	65-19629-42	. . HINGE HALF, INBOARD COVE LIP DOOR (RH ONLY)		1
	31	69-24755-15	. . HINGE HALF, INBOARD COVE LIP DOOR (LH ONLY)		1
	31	69-24755-16	. . HINGE HALF, INBOARD COVE LIP DOOR (RH ONLY)		1
	32	65-19634-29	. RETAINER, INBOARD COVE LIP DOOR (LH ONLY)		1
	32	65-19634-30	. RETAINER, INBOARD COVE LIP DOOR (RH ONLY)		1
	33	65-19634-5	. RETAINER, INBOARD COVE LIP DOOR (LH ONLY)		1
	33	65-19634-6	. RETAINER, INBOARD COVE LIP DOOR (RH ONLY)		1
	34	65-19634-3	. RETAINER, INBOARD COVE LIP DOOR (LH ONLY)		1
	34	65-19634-4	. RETAINER, INBOARD COVE LIP DOOR (RH ONLY)		1
	35	65-19634-9	. DOUBLER, INBOARD COVE LIP DOOR (LH ONLY).		1
	35	65-19634-10	. DOUBLER, INBOARD COVE LIP DOOR (RH ONLY).		1
	36	65-19634-7	. DOUBLER, INBOARD COVE LIP DOOR (LH ONLY).		1
	36	65-19634-8	. DOUBLER, INBOARD COVE LIP DOOR (RH ONLY).		1
	37	65-19634-37	. SEAL, INBOARD COVE LIP DOOR (EXTRUSION NO. BAC1530-11 X 65.1 IN. LG) (LH ONLY)		1
	37	65-19634-38	. SEAL, INBOARD COVE LIP DOOR (EXTRUSION NO. BAC1530-11 X 65.1 IN. LG) (RH ONLY)		1
R	48	65-19629-97	. DOOR ASSY, (LH ONLY) (SEE FIG. 47).	0150	1
R	48	65-19629-97A	. DOOR ASSY, (LH ONLY) (SEE FIG. 47).	5151	1
R	48	65-19629-97H	. DOOR ASSY, (LH ONLY) (SEE FIG. 47).	5299	1
R			(OPTIONAL TO 65-19629-125H)		
R	48	65-19629-125H	. DOOR ASSY, (LH ONLY) (SEE FIG. 47).	5299	1
R			(OPTIONAL 65-19629-97H)		
R	48	65-19629-98	. DOOR ASSY, (RH ONLY) (SEE FIG. 47).	0150	1
R	48	65-19629-98A	. DOOR ASSY, (RH ONLY) (SEE FIG. 47).	5151	1
R	48	65-19629-98H	. DOOR ASSY, (RH ONLY) (SEE FIG. 47).	5299	1
R			(OPTIONAL TO 65-19629-126H)		
R	48	65-19629-126H	. DOOR ASSY, (RH ONLY) (SEE FIG. 47).	5299	1
R			(OPTIONAL 65-19629-98H)		
R	49	65-19629-95	. DOOR ASSY, (LH ONLY) (SEE FIG. 49).	0150	1
R	49	65-19629-95A	. DOOR ASSY, (LH ONLY) (SEE FIG. 49).	5151	1
R	49	65-19629-95H	. DOOR ASSY, (LH ONLY) (SEE FIG. 49).	5299	1
R			(OPTIONAL TO 65-19629-123H)		
R	49	65-19629-123H	. DOOR ASSY, (LH ONLY) (SEE FIG. 49).	5299	1
R			(OPTIONAL 65-19629-95H)		
R	49	65-19629-96	. DOOR ASSY, (RH ONLY) (SEE FIG. 49).	0150	1
R	49	65-19629-96A	. DOOR ASSY, (RH ONLY) (SEE FIG. 49).	5151	1
R	49	65-19629-96H	. DOOR ASSY, (RH ONLY) (SEE FIG. 49).	5299	1
R			(OPTIONAL TO 65-19629-124H)		
R	49	65-19629-124H	. DOOR ASSY, (RH ONLY) (SEE FIG. 49).	5299	1
R			(OPTIONAL 65-19629-96H)		
R	50	65-19629-93	. DOOR ASSY, (LH ONLY) (SEE FIG. 51).	0150	1
R	50	65-19629-93A	. DOOR ASSY, (LH ONLY) (SEE FIG. 51).	5151	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM	EFF TO	UNITS PER ASSY
R	45 50	65-19629-93H	. DOOR ASSY, (LH ONLY) (SEE FIG. 51).	5299		1
R			(OPTIONAL TO 65-19629-121H)			
R	50	65-19629-121H	. DOOR ASSY, (LH ONLY) (SEE FIG. 51).	5299		1
R			(OPTIONAL 65-19629-93H)			
R	50	65-19629-94	. DOOR ASSY, (RH ONLY) (SEE FIG. 51).	0150		1
R	50	65-19629-94A	. DOOR ASSY, (RH ONLY) (SEE FIG. 51).	5151		1
R	50	65-19629-94H	. DOOR ASSY, (RH ONLY) (SEE FIG. 51).	5299		1
R			(OPTIONAL TO 65-19629-122H)			
R	50	65-19629-122H	. DOOR ASSY, (RH ONLY) (SEE FIG. 51).	5299		1
R			(OPTIONAL 65-19629-94H)			

MISSING ITEM NUMBERS ARE NOT APPLICABLE

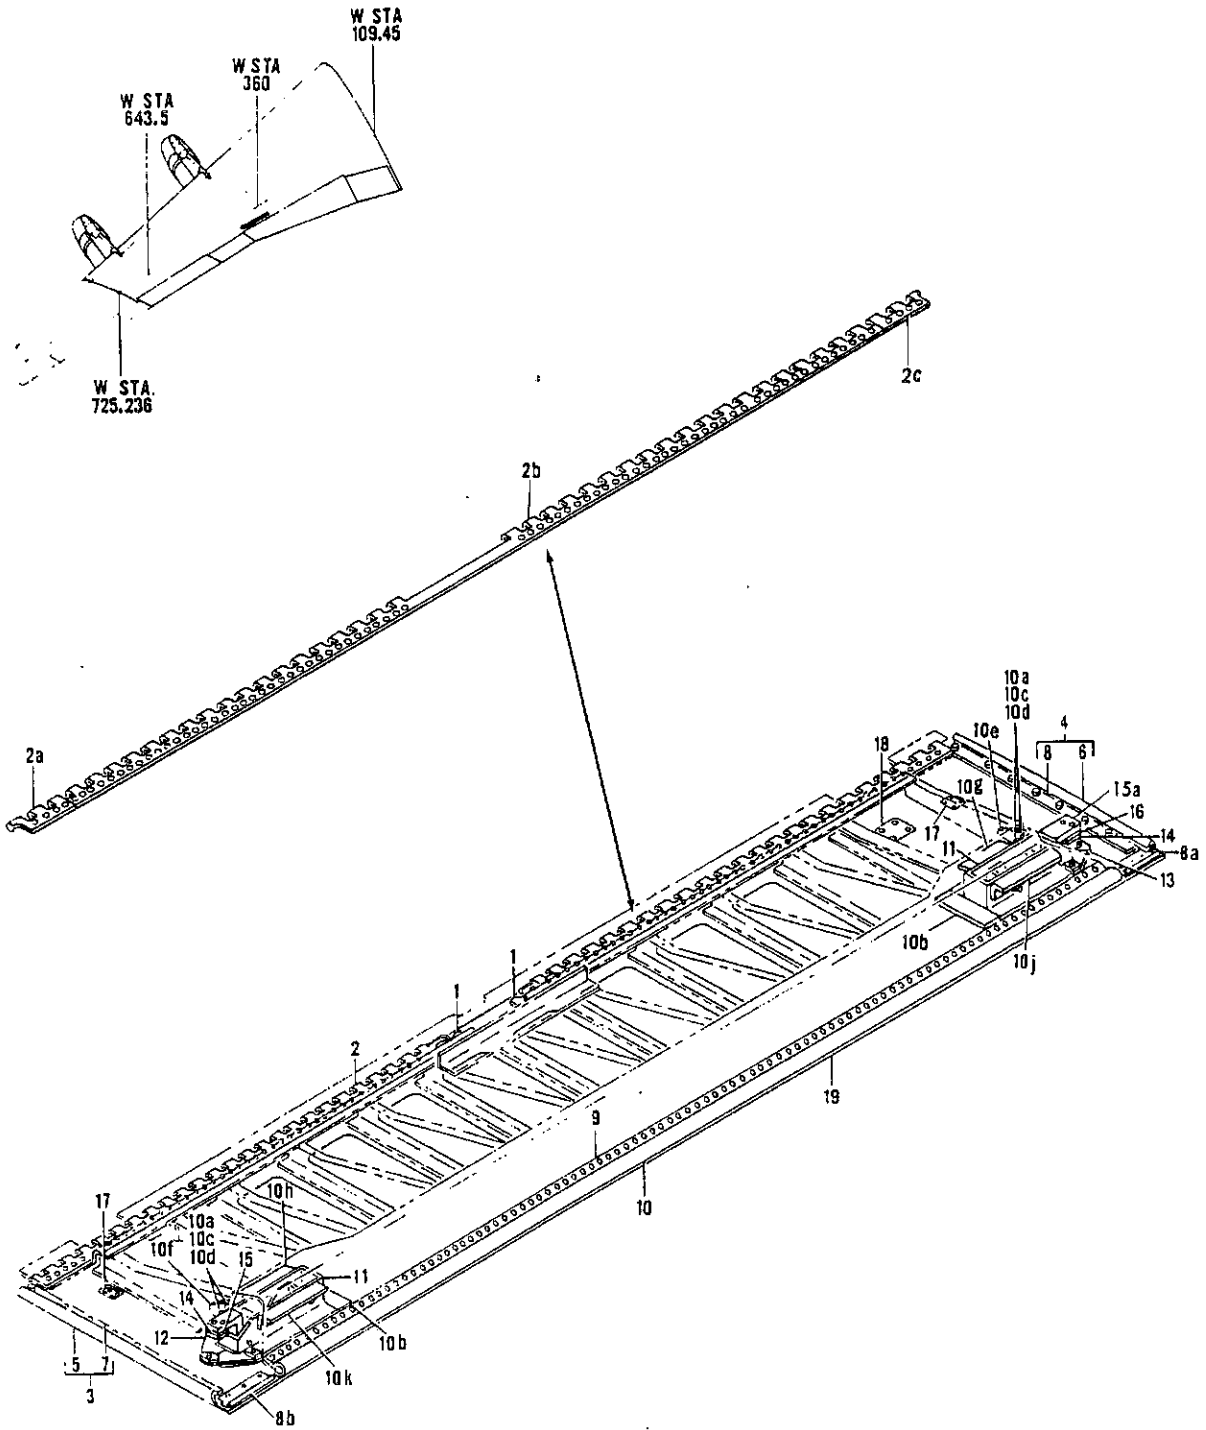


FIGURE 47 DOOR ASSY, INBOARD COVE LIP

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	47	65-19629-97	DOOR ASSY, INBOARD COVE LIP (LH) (SEE FIG. 45, ITEM . . 48)	0150	RF
R		65-19629-97A	DOOR ASSY, INBOARD COVE LIP (LH) (SEE FIG. 45, ITEM 48)	5151	RF
R		65-19629-97H	DOOR ASSY, INBOARD COVE LIP (LH) (SEE FIG. 45, ITEM 48) (OPTIONAL TO 65-19629-125H)	5299	RF
R		65-19629-125H	DOOR ASSY, INBOARD COVE LIP (LH) (SEE FIG. 45, ITEM 48) (OPTIONAL 65-19629-97H)	5299	RF
R		65-19629-125A	DOOR ASSY, INBOARD COVE LIP (LH) (SEE FIG. 45, ITEM 48) (OPTIONAL 65-19629-97A)	5299	RF
R		65-19629-98	DOOR ASSY, INBOARD COVE LIP (RH) (SEE FIG. 45, ITEM . . 48)	0150	RF
R		65-19629-98A	DOOR ASSY, INBOARD COVE LIP (RH) (SEE FIG. 45, ITEM 48)	5151	RF
R		65-19629-98H	DOOR ASSY, INBOARD COVE LIP (RH) (SEE FIG. 45, ITEM 48) (OPTIONAL TO 65-19629-126H)	5299	RF
R		65-19629-126H	DOOR ASSY, INBOARD COVE LIP (RH) (SEE FIG. 45, ITEM 48) (OPTIONAL 65-19629-98H)	5299	RF
	1	66-1729-2002	. RETAINER, OUTBOARD COVE LIP DOOR HINGE PIN.		2
			ATTACHING PARTS		
		NAS514P1032-4	. SCREW		4
		AN960D10	. WASHER.		4
		NAS679A3W	. NUT		4
			-------*-------		
	2A	69-24767-5	. HINGE HALF, (AFT) (LH ONLY) (USED ON 65-19629-97) . .		1
	2A	69-24767-6	. HINGE HALF, (AFT) (RH ONLY) (USED ON 65-19629-98) . .		1
	2B	65-19629-109	. HINGE HALF, (LH ONLY) (USED ON 65-19629-97)		1
	2B	65-19629-110	. HINGE HALF, (RH ONLY) (USED ON 65-19629-98)		1
	2C	69-24767-1	. HINGE HALF, (AFT) (LH ONLY) (USED ON 65-19629-97) . .		1
	2C	69-24767-2	. HINGE HALF, (AFT) (RH ONLY) (USED ON 65-19629-98) . .		1
			ATTACHING PARTS		
		MS20426D6	. RIVET		74
			-------*-------		
	3	69-15421-14	. SEAL ASSY, COVE LIP DOOR (LH ONLY).		1
	3	69-15421-13	. SEAL ASSY, COVE LIP DOOR (RH ONLY).		1
	4	69-15421-15	. SEAL ASSY, COVE LIP DOOR (LH ONLY).		1
	4	69-15421-16	. SEAL ASSY, COVE LIP DOOR (RH ONLY).		1
			ATTACHING PARTS		
		NAS514P1032-7	. SCREW		14
		AN960D10	. WASHER.		14
		NAS679A3W	. NUT		14
			-------*-------		
	5	69-15421-10	. . SEAL, COVE LIP DOOR MOHAIR (BAC1523-17 X 15.7 IN. . LG (OPTIONAL BAC1523-7 X 15.7 IN. LG)) (USED ON 69-15421-14)		1
	5	69-15421-9	. . SEAL, COVE LIP DOOR MOHAIR (BAC1523-17 X 15.7 IN. . LG (OPTIONAL BAC1523-7 X 15.7 IN. LG)) (USED ON 69-15421-13)		1
	6	69-15421-11	. . SEAL, COVE LIP DOOR MOHAIR (BAC1523-17 X 15.7 IN. . LG (OPTIONAL BAC1523-7 X 15.7 IN. LG)) (USED ON 69-15421-15)		1
	6	69-15421-12	. . SEAL, COVE LIP DOOR MOHAIR (BAC1523-17 X 15.7 IN. . LG (OPTIONAL BAC1523-7 X 15.7 IN. LG)) (USED ON 69-15421-16)		1
	7	69-15421-18	. . RETAINER, COVE LIP DOOR SEAL (USED ON 69-15421-14)		1
	7	69-15421-17	. . RETAINER, COVE LIP DOOR SEAL (USED ON 69-15421-13)		1
	8	69-15421-19	. . RETAINER, COVE LIP DOOR SEAL (USED ON 69-15421-15)		1
	8	69-15421-20	. . RETAINER, COVE LIP DOOR SEAL (USED ON 69-15421-16)		1
	8A	65-19629-87	. DEPRESSOR, INBOARD COVE LIP DOOR SEAL (LH ONLY) . . .		1
	8A	65-19629-88	. DEPRESSOR, INBOARD COVE LIP DOOR SEAL (RH ONLY) . . .		1
	8B	65-19629-92	. DEPRESSOR, INBOARD COVE LIP DOOR SEAL (LH ONLY) . . .		1
	8B	65-19629-91	. DEPRESSOR, INBOARD COVE LIP DOOR SEAL (RH ONLY) . . .		1
			ATTACHING PARTS		
		MS20426B5	. RIVET		6
			-------*-------		
	9	65-21926-6	. RETAINER, COVE LIP DOOR SEAL.		1
			ATTACHING PARTS		
		NAS514P440-8	. SCREW		42
		NAS514P632-8	. SCREW		8
		NAS679A04W	. NUT		42
			-------*-------		
	10	65-19629-64	. SEAL, INBOARD COVE LIP DOOR RUBBER (EXTRUSION NO. . . BAC1530-6 X 69.9 IN. LG)		1
	10A	NAS1103-2W	. BOLT.		4
	10B	BACS40B16-72	. SHIM.		AR
	10C	AN960D10	. WASHER.		4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	47 10D	NAS679A3W	. NUT		4
	10E	69-15318-1	. CLIP, COVE LIP DOOR		1
	10F	69-15318-2	. CLIP, COVE LIP DOOR		1
			ATTACHING PARTS		
		MS20426D5	. RIVET		4
		MS20470D5	. RIVET		4
			-------*-------		
	10G	69-15318-13	. CLIP.		1
	10H	69-15318-14	. CLIP.		1
			ATTACHING PARTS		
		BACB30FM6-4	. BOLT, (OPTIONAL NAS1103-4W WITH AN960D10 AND NAS679A3W)		12
		BACS40A12-13	. SHIM.		AR
		BACS40A13-65	. SHIM.		AR
		BACS40R07B20	. SHIM.		AR
		BACC30M6	. COLLAR.		12
			-------*-------		
	10J	69-15318-15	. CLIP.		1
	10K	69-15318-16	. CLIP.		1
			ATTACHING PARTS		
		BACB30FM6-4	. BOLT, (OPTIONAL NAS1103-4W WITH AN960D10 AND NAS679A3W)		10
		BACS40A19-96	. SHIM.		AR
		BACC30M6	. COLLAR.		10
			-------*-------		
	11	H727-1	. LATCH ASSY, (V83014).		2
			ATTACHING PARTS		
	11B	MS20426D6	. RIVET		10
	11C	NAS517-3-4	. SCREW		20
	11D	NAS517-3-5	. SCREW		2
	11F	AN960D10	. WASHER.		22
	11G	NAS679A3W	. NUT		22
			-------*-------		
	12	69-15370-11	. GUIDE, COVE LIP DOOR LATCH.		1
	13	69-15370-9	. GUIDE, COVE LIP DOOR LATCH.		1
			ATTACHING PARTS		
		NAS517-4-16	. SCREW, (USED WITH 69-15370-11).		2
		NAS517-3-13	. SCREW, (USED WITH 69-15370-11).		1
		NAS517-4-13	. SCREW, (USED WITH 69-15370-9)		2
		NAS517-3-10	. SCREW, (USED WITH 69-15370-9)		1
		BACS40B20-32	. SHIM.		AR
		69-16790-1	. SHIM, COVE LIP DOOR LAMINATED		AR
		MS35335-33	. WASHER, LOCK.		6
		AN960PD416	. WASHER.		4
		AN960PD10	. WASHER.		2
		NAS679A4W	. NUT		4
		NAS679A3W	. NUT		2
			-------*-------		
	14	69-15370-6	. STRIP, COVE LIP DOOR LATCH GUIDE RUB.		2
			ATTACHING PARTS		
		NAS517-3-9	. SCREW		2
		NAS517-3-14	. SCREW		2
		BACS40A15-18	. SHIM.		AR
		BACS40A14-20	. SHIM.		AR
		BACS40B14-20	. SHIM.		AR
		AN960D10	. WASHER.		4
		NAS679A3W	. NUT		4
			-------*-------		
	15	69-16790-5	. FILLER, COVE LIP DOOR		1
	15A	69-16790-6	. FILLER, DOOR.		1
	16	69-16790-9	. FILLER, (USED ON 65-19629-97 AND -98)		1
	17	66-13769-1	. STRIP, INBOARD COVE LIP DOOR RUB.		2
			ATTACHING PARTS		
		MS20426A3	. RIVET		8
			-------*-------		
	18	AN7510-1	. PLATE		1
			ATTACHING PARTS		
		MS20426A3	. RIVET		4
			-------*-------		
R	19	65-19629-11	. PANEL ASSY, INBOARD COVE LIP DOOR BONDED (LH ONLY).	0150	1
R	19	65-19629-11A	. PANEL ASSY, BONDED (LH ONLY).	5199	1
R	19	65-19629-12	. PANEL ASSY, INBOARD COVE LIP DOOR BONDED (RH ONLY).	0150	1
R	19	65-19629-12A	. PANEL ASSY, BONDED (RH ONLY).	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

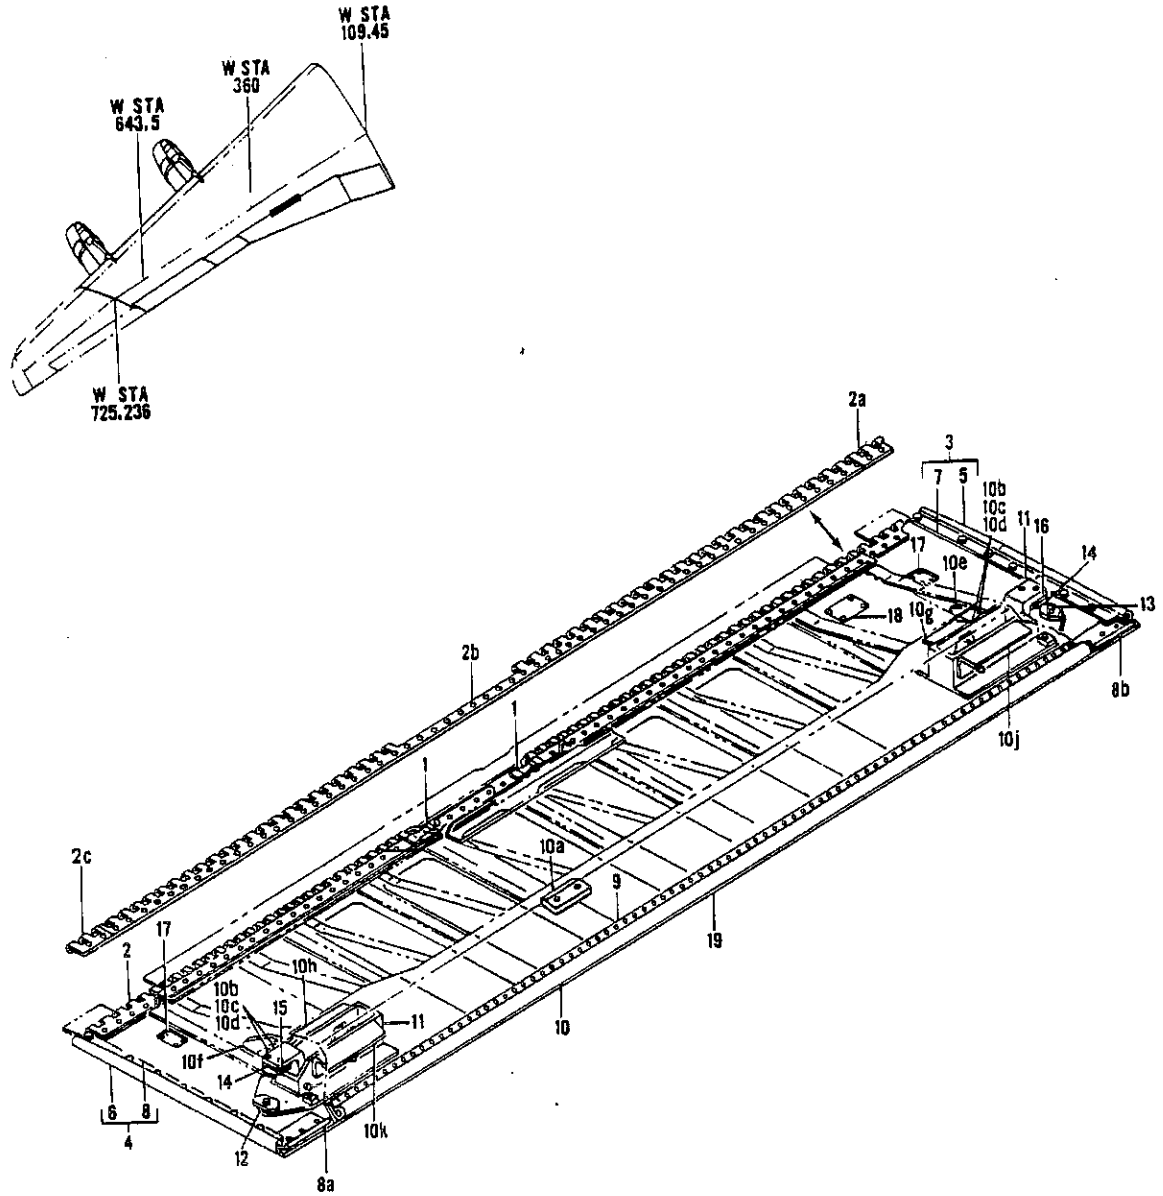



FIGURE 49. DOOR ASSY, INBOARD COVE LIP

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R	49	65-19629-95	DOOR ASSY, INBOARD COVE LIP (LH) (SEE FIG. 45, ITEM 49)	0150	RF
R		65-19629-95A	DOOR ASSY, INBOARD COVE LIP (LH) (SEE FIG. 45, ITEM 49)	5151	RF
R		65-19629-95H	DOOR ASSY, INBOARD COVE LIP (LH) (SEE FIG. 45, ITEM 49)	5299	RF
R			(OPTIONAL TO 65-19629-123H)		
R		65-19629-123H	DOOR ASSY, INBOARD COVE LIP (LH) (SEE FIG. 45, ITEM 49)	5299	RF
R			(OPTIONAL 65-19629-95H)		
R		65-19629-96	DOOR ASSY, INBOARD COVE LIP (RH) (SEE FIG. 45, ITEM 49)	0150	RF
R		65-19629-96A	DOOR ASSY, INBOARD COVE LIP (RH) (SEE FIG. 45, ITEM 49)	5151	RF
R		65-19629-96H	DOOR ASSY, INBOARD COVE LIP (RH) (SEE FIG. 45, ITEM 49)	5299	RF
R			(OPTIONAL TO 65-19629-124H)		
R		65-19629-124H	DOOR ASSY, INBOARD COVE LIP (RH) (SEE FIG. 45, ITEM 49)	5299	RF
R			(OPTIONAL 65-19629-96H)		
	1	66-1729-2002	. RETAINER, OUTBOARD COVE LIP DOOR HINGE PIN.		2
			ATTACHING PARTS		
		NAS514P1032-4	. SCREW		4
		AN960D10	. WASHER.		4
		NAS679A3W	. NUT		4
			-------*-------		
	2A	69-24755-1	. HINGE HALF, (AFT) (LH ONLY) (USED ON 65-19629-95) . .		1
	2A	69-24755-2	. HINGE HALF, (AFT) (RH ONLY) (USED ON 65-19629-96) . .		1
	2B	65-19629-107	. HINGE HALF, (LH ONLY) (USED ON 65-19629-95)		1
	2B	65-19629-108	. HINGE HALF, (RH ONLY) (USED ON 65-19629-96)		1
	2C	69-24755-5	. HINGE HALF, (AFT) (LH ONLY) (USED ON 65-19629-95) . .		1
	2C	69-24755-6	. HINGE HALF, (AFT) (RH ONLY) (USED ON 65-19629-96) . .		1
			ATTACHING PARTS		
		MS20426D6	. RIVET		63
			-------*-------		
	3	69-15421-15	. SEAL ASSY, COVE LIP DOOR.		1
	4	69-15421-16	. SEAL ASSY, COVE LIP DOOR.		1
			ATTACHING PARTS		
		NAS514P1032-7	. SCREW		16
		AN960D10	. WASHER.		16
		NAS679A3W	. NUT		16
			-------*-------		
	5	69-15421-11	. . SEAL, COVE LIP DOOR MOHAIR (BAC1523-17 X 15.7 IN. .		1
			LG (OPTIONAL BAC1523-7 X 15.7 IN. LG)) (USED ON 69-15421-15)		
	6	69-15421-12	. . SEAL, COVE LIP DOOR MOHAIR (BAC1523-17 X 15.7 IN. .		1
			LG (OPTIONAL BAC1523-7 X 15.7 IN. LG)) (USED ON 69-15421-16)		
	7	69-15421-19	. . RETAINER, COVE LIP DOOR (USED ON 69-15421-15) . . .		1
	8	69-15421-20	. . RETAINER, COVE LIP DOOR (USED ON 69-15421-16) . . .		1
	8A	65-19629-88	. DEPRESSOR, INBOARD COVE LIP DOOR SEAL (LH ONLY) . . .		1
	8A	65-19629-87	. DEPRESSOR, INBOARD COVE LIP DOOR SEAL (RH ONLY) . . .		1
	8B	65-19629-90	. DEPRESSOR, INBOARD COVE LIP DOOR SEAL (LH ONLY) . . .		1
	8B	65-19629-89	. DEPRESSOR, INBOARD COVE LIP DOOR SEAL (RH ONLY) . . .		1
			ATTACHING PARTS		
		MS20426B5	. RIVET		6
			-------*-------		
	9	65-21926-5	. RETAINER, COVE LIP DOOR SEAL.		1
			ATTACHING PARTS		
		NAS514P440-8	. SCREW		34
		NAS514P632-8	. SCREW		8
		NAS679A04W	. NUT		34
			-------*-------		
	10	65-19629-63	. SEAL, INBOARD COVE LIP DOOR RUBBER (EXTRUSION NO. . .		1
			BAC1530-6 X 58.8 IN. LG)		
	10A	30-1472	. STRIP, COVE LIP DOOR INDICATOR CABLE RUB.		1
			ATTACHING PARTS		
		MS20470D6	. RIVET		2
			-------*-------		
	10B	NAS1103-3	. BOLT.		4
	10C	AN960PD10L	. WASHER.		4
	10D	NAS679A3W	. NUT		4
	10E	69-15318-1	. CLIP, COVE LIP DOOR		1
	10F	69-15318-2	. CLIP, COVE LIP DOOR		1
			ATTACHING PARTS		
		MS20426D5	. RIVET		4
		MS20470D5	. RIVET		4
			-------*-------		
	10G	69-15318-13	. CLIP.		1
	10H	69-15318-14	. CLIP.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	49		ATTACHING PARTS		
		BACB30FM6-4	. BOLT, (OPTIONAL NAS1103-4W WITH AN960D10 AND. . . . NAS679A3W)		12
		BACS40A12-13	. SHIM.		AR
		BACS40A13-65	. SHIM.		AR
		BACS40R07820	. SHIM.		AR
		BACC30M6	. COLLAR.		12
			-------*-------		
	10J	69-15318-15	. CLIP.		1
	10K	69-15318-16	. CLIP.		1
			ATTACHING PARTS		
		BACB30FM6-4	. BOLT, (OPTIONAL NAS1103-4W WITH AN960D10 AND. . . . NAS679A3W)		10
		BACS40A19-96	. SHIM.		AR
		BACC30M6	. COLLAR.		10
			-------*-------		
	11	H727-1	. LATCH ASSY, (V83014).		2
			ATTACHING PARTS		
		MS20426D5	. RIVET		14
		MS20426D6	. RIVET		22
		NAS517-3-4	. SCREW		20
		NAS517-3-5	. SCREW		2
		NAS1303-2W	. BOLT.		8
		AN960D10	. WASHER.		30
		NAS679A3W	. NUT		30
			-------*-------		
	12	69-15370-9	. GUIDE, COVE LIP DOOR LATCH.		1
	13	69-15370-8	. GUIDE, COVE LIP DOOR LATCH.		1
			ATTACHING PARTS		
		NAS517-4-13	. SCREW, (USED WITH 69-15370-9)		2
		NAS517-3-10	. SCREW, (USED WITH 69-15370-9)		1
		NAS517-4-10	. SCREW, (USED WITH 69-15370-8)		2
		NAS517-3-8	. SCREW, (USED WITH 69-15370-8)		1
		BACS40B20-32	. SHIM, (USED WITH 69-15370-9).		AR
		69-16790-1	. SHIM, COVE LIP DOOR LAMINATED (USED WITH 69-15370-9)		AR
		MS35335-33	. WASHER, LOCK.		6
		AN960PD416	. WASHER.		4
		AN960PD10	. WASHER.		2
		NAS679A4W	. NUT		4
		NAS679A3W	. NUT		2
			-------*-------		
	14	69-15370-6	. STRIP, COVE LIP DOOR LATCH GUIDE RUB.		2
			ATTACHING PARTS		
		NAS517-3-12	. SCREW		2
		NAS517-3-14	. SCREW		2
		BACS40A14-20	. SHIM.		AR
		BACS40B14-20	. SHIM.		AR
		AN960D10	. WASHER.		4
		NAS679A3W	. NUT		4
			-------*-------		
	15	69-16790-9	. FILLER, COVE LIP DOOR		1
	16	69-16790-4	. FILLER, COVE LIP DOOR		1
	17	66-13769-1	. STRIP, INBOARD COVE LIP DOOR RUB.		2
			ATTACHING PARTS		
		MS20426A3	. RIVET		8
			-------*-------		
	18	AN7510-1	. PLATE		1
			ATTACHING PARTS		
		MS20426A3	. RIVET		4
			-------*-------		
R	19	65-19629-9	. PANEL ASSY, BONDED (LH ONLY).	0150	1
R	19	65-19629-9A	. PANEL ASSY, BONDED (LH ONLY).	5199	1
R		65-19629-10	. PANEL ASSY, BONDED (RH ONLY).	0150	1
R		65-19629-10A	. PANEL ASSY, BONDED (RH ONLY).	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

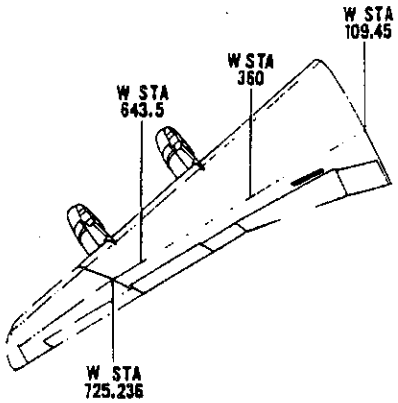

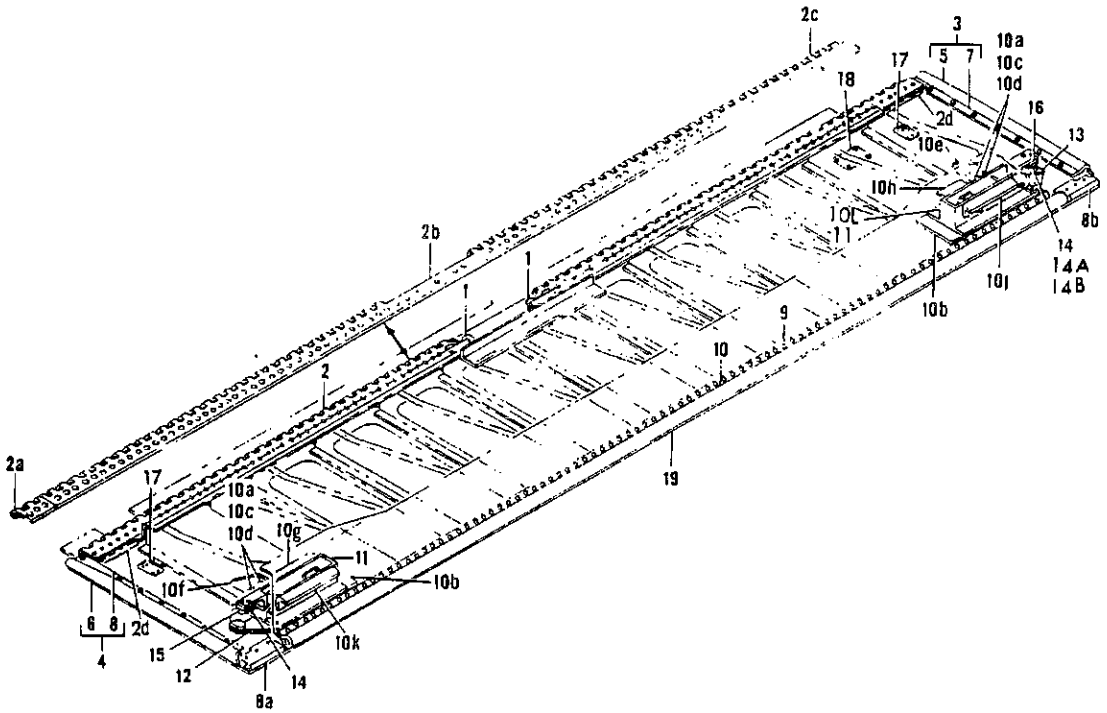


FIGURE 51. DOOR ASSY, INDOOR COVE LIP

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R	51	65-19629-93	DOOR ASSY, INBOARD COVE LIP (LH) (SEE FIG. 45, ITEM 50)	0150	RF
R		65-19629-93A	DOOR ASSY, INBOARD COVE LIP (LH) (SEE FIG. 45, ITEM 50)	5151	RF
R		65-19629-93H	DOOR ASSY, INBOARD COVE LIP (LH) (SEE FIG. 45, ITEM 50) (OPTIONAL TO 65-19629-121H)	5299	RF
R		65-19629-121H	DOOR ASSY, INBOARD COVE LIP (LH) (SEE FIG. 45, ITEM 50) (OPTIONAL 65-19629-93H)	5299	RF
R		65-19629-94	DOOR ASSY, INBOARD COVE LIP (RH) (SEE FIG. 45, ITEM 50)	0150	RF
R		65-19629-94A	DOOR ASSY, INBOARD COVE LIP (RH) (SEE FIG. 45, ITEM 50)	5151	RF
R		65-19629-94H	DOOR ASSY, INBOARD COVE LIP (RH) (SEE FIG. 45, ITEM 50) (OPTIONAL TO 65-19629-122H)	5299	RF
R		65-19629-122H	DOOR ASSY, INBOARD COVE LIP (RH) (SEE FIG. 45, ITEM 50) (OPTIONAL 65-19629-94H)	5299	RF
	1	66-1729-2002	. RETAINER, OUTBOARD COVE LIP DOOR HINGE PIN.		2
			ATTACHING PARTS		
		NAS514P1032-4	. SCREW		4
		AN960D10	. WASHER.		4
		NAS679A3W	. NUT		4
			-------*-------		
	2A	69-24755-13	. HINGE HALF, (AFT) (LH ONLY) (USED ON 65-19629-93) . .		1
	2A	69-24755-14	. HINGE HALF, (AFT) (RH ONLY) (USED ON 65-19629-94) . .		1
	2B	65-19629-105	. HINGE HALF, (LH ONLY) (USED ON 65-19629-93)		1
	2B	65-19629-106	. HINGE HALF, (RH ONLY) (USED ON 65-19629-94)		1
	2C	69-24755-9	. HINGE HALF, (AFT) (LH ONLY) (USED ON 65-19629-93) . .		1
	2C	69-24755-10	. HINGE HALF, (AFT) (RH ONLY) (USED ON 65-19629-94) . .		1
			ATTACHING PARTS		
		MS20426D6	. RIVET		73
			-------*-------		
	2D	69-16706-1	. FILLER, INBOARD COVE LIP DOOR		2
			ATTACHING PARTS		
		MS2042686	. RIVET		26
			-------*-------		
	3	69-15421-13	. SEAL ASSY, COVE LIP DOOR (LH ONLY).		1
	3	69-15421-14	. SEAL ASSY, COVE LIP DOOR (RH ONLY).		1
	4	69-15421-16	. SEAL ASSY, COVE LIP DOOR (LH ONLY).		1
	4	69-15421-15	. SEAL ASSY, COVE LIP DOOR (RH ONLY).		1
			ATTACHING PARTS		
		NAS514P1032-7	. SCREW		14
		AN960D10	. WASHER.		14
		NAS679A3W	. NUT		14
			-------*-------		
	5	69-15421-9	. . SEAL, COVE LIP DOOR MOHAIR (BAC1523-17 X 15.7 IN. . LG (OPTIONAL BAC1523-7 X 15.7 IN. LG)) (USED ON 69-15421-13)		1
	5	69-15421-10	. . SEAL, COVE LIP DOOR MOHAIR (BAC1523-17 X 15.7 IN. . LG (OPTIONAL BAC1523-7 X 15.7 IN. LG)) (USED ON 69-15421-14)		1
	6	69-15421-12	. . SEAL, COVE LIP DOOR MOHAIR (BAC1523-17 X 15.7 IN. . LG (OPTIONAL BAC1523-7 X 15.7 IN. LG)) (USED ON 69-15421-16)		1
	6	69-15421-11	. . SEAL, COVE LIP DOOR MOHAIR (BAC1523-17 X 15.7 IN. . LG (OPTIONAL BAC1523-7 X 15.7 IN. LG)) (USED ON 69-15421-15)		1
	7	69-15421-17	. . RETAINER, COVE LIP DOOR (USED ON 69-15421-13) . . .		1
	7	69-15421-18	. . RETAINER, COVE LIP DOOR (USED ON 69-15421-14) . . .		1
	8	69-15421-20	. . RETAINER, COVE LIP DOOR (USED ON 69-15421-16) . . .		1
	8	69-15421-19	. . RETAINER, COVE LIP DOOR (USED ON 69-15421-15) . . .		1
	8A	65-19629-89	. DEPRESSOR, INBOARD COVE LIP DOOR (LH ONLY).		1
	8A	65-19629-90	. DEPRESSOR, INBOARD COVE LIP DOOR (RH ONLY).		1
	8B	65-19629-91	. DEPRESSOR, INBOARD COVE LIP DOOR (LH ONLY).		1
	8B	65-19629-92	. DEPRESSOR, INBOARD COVE LIP DOOR (RH ONLY).		1
			ATTACHING PARTS		
		MS2042685	. RIVET		6
			-------*-------		
	9	65-21926-4	. RETAINER, COVE LIP DOOR SEAL.		1
			ATTACHING PARTS		
		NAS514P440-8	. SCREW		42
		NAS514P632-8	. SCREW		8
		NAS679A04W	. NUT		42
			-------*-------		
	10	65-19629-62	. SEAL, INBOARD COVE LIP DOOR RUBBER (EXTRUSION NO. . . BAC1530-6 X 70.7 IN. LG)		1
	10A	NAS1103-3W	. BOLT.		4
	10B	BACS40B16-72	. SHIM.		AR
	10C	AN960D10	. WASHER.		4


MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5L	10D	NAS679A3W	. NUT		4
	10E	69-15318-1	. CLIP, COVE LIP DOOR		1
	10F	69-15318-2	. CLIP, COVE LIP DOOR		1
			ATTACHING PARTS		
		MS20426D5	. RIVET		2
		MS20470D5	. RIVET		2
			-------*-------		
	10G	69-15318-14	. CLIP, (USED ON 65-19629-93 AND -94)		1
	10H	69-15318-13	. CLIP, (USED ON 65-19629-93 AND -94)		1
			ATTACHING PARTS		
		BACB30FM6-4	. BOLT, (OPTIONAL NAS1103-4W WITH AN960D10 AND NAS679A3W)		12
		BACS40A12-13	. SHIM.		AR
		BACS40A13-65	. SHIM.		AR
		BACS40R07B20	. SHIM.		AR
		BACC30M6	. COLLAR.		12
			-------*-------		
	10J	69-15318-15	. CLIP, (USED ON 65-19629-93 AND -94)		1
	10K	69-15318-16	. CLIP, (USED ON 65-19629-93 AND -94)		1
			ATTACHING PARTS		
		BACB30FM6-4	. BOLT, (OPTIONAL NAS1103-4W WITH AN960D10 AND NAS679A3W)		10
		BACS40A19-96	. SHIM.		AR
		BACC30M6	. COLLAR.		10
			-------*-------		
R	10L	65-19629-127	. LATCH ASSY, (ALTERED FROM;H727-1) (USED ON	5199	1
R			65-19629-93, -94, -121 AND -122)		
R	11	H727-1	. LATCH ASSY, (V83014) (USED ON 65-19629-93 AND -94)	0150	2
			ATTACHING PARTS		
		MS20426D5	. RIVET		14
		MS20426D6	. RIVET		22
		NAS517-3-4	. SCREW		20
		NAS517-3-5	. SCREW		7
		NAS1303-2W	. BOLT.		8
		AN960D10	. WASHER.		30
		NAS679A3W	. NUT		25
			-------*-------		
	12	69-15370-8	. GUIDE, COVE LIP DOOR LATCH.		1
	13	69-15370-10	. GUIDE, COVE LIP DOOR LATCH.		1
			ATTACHING PARTS		
		NAS517-4-10	. SCREW, (USED WITH 69-15370-8)		2
		NAS517-3-8	. SCREW, (USED WITH 69-15370-8)		1
		NAS517-4-13	. SCREW, (USED WITH 69-15370-10).		2
		NAS517-3-10	. SCREW, (USED WITH 69-15370-10).		1
		BACS40B20-32	. SHIM.		AR
		69-16790-1	. SHIM, COVE LIP DOOR LAMINATED		AR
		MS35335-33	. WASHER, LOCK (USED ON 65-19629-93 AND -94).		6
		AN960PD416	. WASHER, (USED ON 65-19629-93 AND -94)		4
		AN960PD10	. WASHER, (USED ON 65-19629-93 AND -94)		2
		NAS679A4W	. NUT		4
		NAS679A3W	. NUT		2
			-------*-------		
	14	69-15370-6	. STRIP, COVE LIP DOOR LATCH GUIDE RUB.		2
			ATTACHING PARTS		
		NAS517-3-14	. SCREW		2
		NAS517-3-11	. SCREW		2
		BACS40A14-20	. SHIM.		AR
		AN960D10	. WASHER.		4
		NAS679A3W	. NUT		4
			-------*-------		
R	14A	69-15370-6	. STRIP, COVE LIP DOOR LATCH GUIDE RUB.	5199	1
R	14B	69-15370-14	. STRIP, COVE LIP DOOR LATCH GUIDE RUB.	5199	1
			ATTACHING PARTS		
R		NAS517-3-11	. SCREW	5199	2
		BACS40A14-20	. SHIM.		AR
R		AN960D10	. WASHER.	5199	2
R		NAS679A3W	. NUT	5199	2
			-------*-------		
	15	69-16790-4	. FILLER, COVE LIP DOOR		1
	16	69-16790-10	. FILLER, COVE LIP DOOR		1
	17	66-13769-1	. STRIP, INBOARD COVE LIP DOOR RUB.		2
			ATTACHING PARTS		
		MS20426A3	. RIVET		8
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	51 18	AN7510-1	. PLATE		1
			ATTACHING PARTS		
		MS20426A3	. RIVET		4
			-------*-------		
R	19	65-19629-7	. PANEL ASSY, INBOARD COVE LIP DOOR BONDED (LH ONLY). .	0150	1
R	19	65-19629-7A	. PANEL ASSY, BONDED (LH ONLY).	5199	1
R	19	65-19629-8	. PANEL ASSY, INBOARD COVE LIP DOOR BONDED (RH ONLY). .	0150	1
R	19	65-19629-8A	. PANEL ASSY, BONDED (RH ONLY).	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

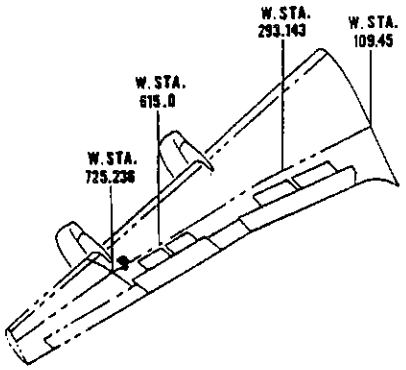

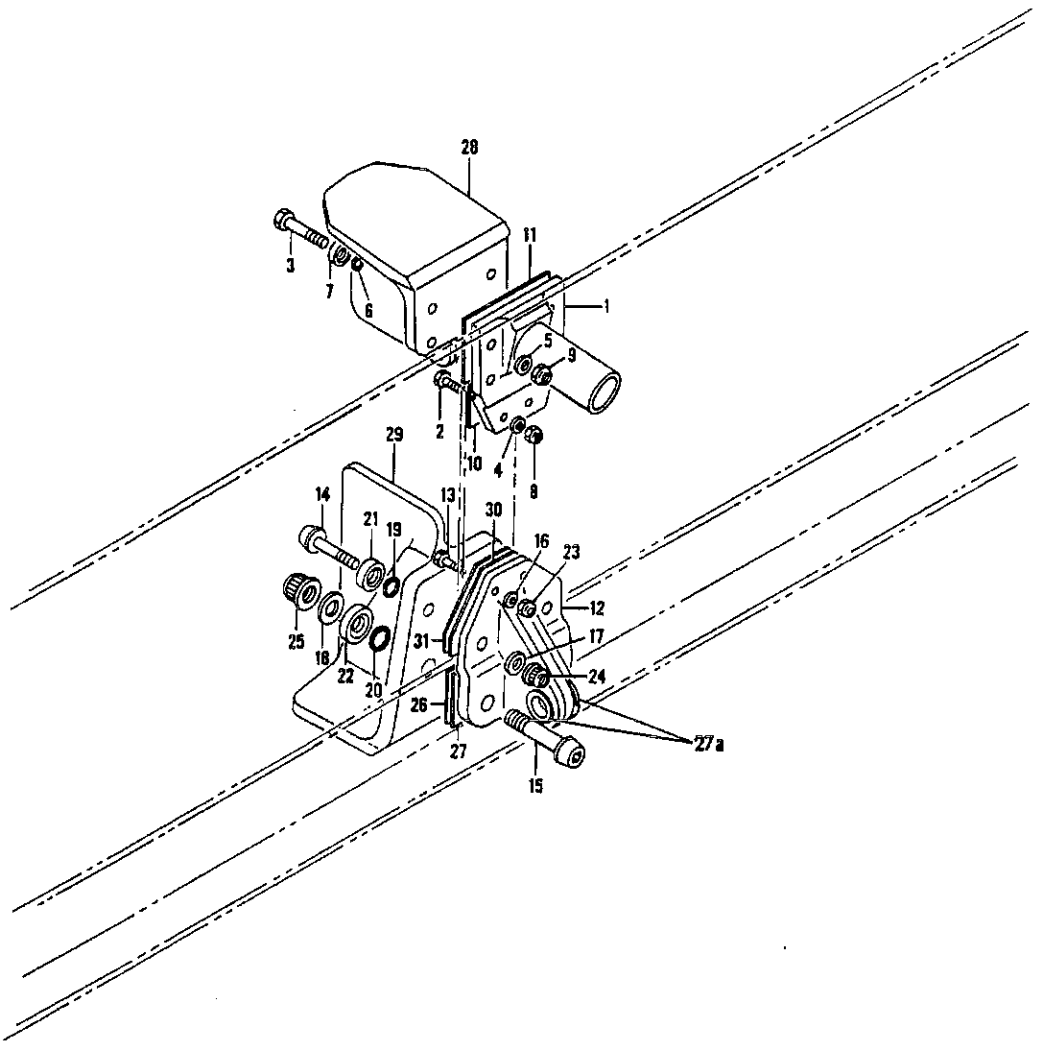


FIGURE 55. STRUCTURE INSTL, WING STATION 700.50 FLAP TRACK SUPPORT

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	55	5-85645-3001	STRUCTURE INSTL, WING STATION 700.50 FLAP TRACK SUPPORT (LH) (SEE 57-3, FIG. 15, ITEM 5)		RF
		5-85645-3002	STRUCTURE INSTL, WING STATION 700.50 FLAP TRACK SUPPORT (RH) (SEE 57-3, FIG. 15, ITEM 5)		RF
	1	5-85680-2007	. SUPPORT, REAR SPAR UPPER FLAP TRACK (LH ONLY)		1
R	1	5-85680-2011	. SUPPORT, REAR SPAR UPPER FLAP TRACK (LH ONLY)		1
	1	5-85680-2008	. SUPPORT, REAR SPAR UPPER FLAP TRACK (RH ONLY)		1
R	1	5-85680-2012	. SUPPORT, REAR SPAR UPPER FLAP TRACK (RH ONLY)		1
			ATTACHING PARTS		
	2	NAS1103-6	. BOLT.		2
	3	NAS1105-17	. BOLT.		4
	4	AN960-10L	. WASHER.		2
	5	AN960-516L	. WASHER.		4
	6	MS29513-011	. PACKING		4
	7	6-72019	. WASHER, TENSION BOLT O RING SEAL.		4
	8	NAS679A3W	. NUT		2
	9	NAS679A5	. NUT		4
			-------*-------		
	10	BACS40A19-34	. SHIM, (OPTIONAL BACS40A40-56)		AR
	11	BACS40A40-56	. SHIM, (OPTIONAL BACS40A19-34)		AR
	12	9-55649-2003	. SUPPORT, (LH ONLY).		1
	12	9-55649-2004	. SUPPORT, (RH ONLY).		1
			ATTACHING PARTS		
	13	NAS1103-7	. BOLT.		2
	14	MS20006-18	. BOLT.	5199	2
	14	MS20006-18	. BOLT, (DELETED BY SB 3400).	0150	2
	14	BACB30LE7-18	. BOLT, (ADDED BY SB 3400).	0150	2
	15	MS20009-24	. BOLT.	5199	2
	15	MS20006-24	. BOLT, (DELETED BY SB 3400).	0150	2
	15	BACB30LE10-24	. BOLT, (ADDED BY SB 3400).	0150	2
	16	AN960-10	. WASHER.		2
	17	MS20002-6	. WASHER.	5199	2
	17	MS20002-6	. WASHER, (DELETED BY SB 3400).	0150	2
	17	BACW10BP7DP	. WASHER, (ADDED BY SB 3400).	0150	2
	18	MS20002-9	. WASHER.	5199	2
	18	MS20002-9	. WASHER, (DELETED BY SB 3400).	0150	2
	18	BACW10BP10DP	. WASHER, (ADDED BY SB 3400).	0150	2
	19	MS29513-110	. PACKING	5199	2
	19	MS29513-110	. PACKING, (DELETED BY SB 3400)	0150	2
	19	MS29513-111	. PACKING, (ADDED BY SB 3400)	0150	2
	20	MS29513-113	. PACKING	5199	2
	20	MS29513-113	. PACKING, (DELETED BY SB 3400)	0150	2
	20	MS29513-114	. PACKING, (ADDED BY SB 3400)	0150	2
	21	6-55097-1	. WASHER, TENSION BOLT O RING SEAL.	5199	2
	21	6-55097-1	. WASHER, TENSION BOLT O RING SEAL (DELETED BY SB 3400)	0150	2
	21	6-55097-2	. WASHER, TENSION BOLT O RING SEAL (ADDED BY SB 3400) .	0150	2
	22	6-55097-4	. WASHER, TENSION BOLT O RING SEAL.	5199	2
	22	6-55097-4	. WASHER, TENSION BOLT O RING SEAL (DELETED BY SB 3400)	0150	2
	22	6-55097-5	. WASHER, TENSION BOLT O RING SEAL (ADDED BY SB 3400) .	0150	2
	23	NAS679A3W	. NUT		2
	24	BACN10B-L6L	. NUT	5199	2
	24	BACN10B-L6L	. NUT, (DELETED BY SB 3400)	0150	2
	24	BACN10HR7CS	. NUT, (ADDED BY SB 3400)	0150	2
	25	BACN10B9L	. NUT	5199	2
	25	BACN10B9L	. NUT, (DELETED BY SB 3400)	0150	2
	25	BACN10HR10CS	. NUT, (ADDED BY SB 3400)	0150	2
	26	BACS40A34-67	. SHIM.		AR
	27	BACS40B34-67	. SHIM.		AR
			-------*-------		
	28	9-61278-3001	. SUPPORT, BACKUP UPPER (LH ONLY)	0101	1
	28	9-61278-3003	. SUPPORT, BACKUP UPPER (LH ONLY)	0202	1
	28	9-61278-3005	. SUPPORT, BACKUP UPPER (LH ONLY)	0350	1
	28	9-61278-3007	. SUPPORT, BACKUP UPPER (LH ONLY)	5199	1
	28	9-61278-3002	. SUPPORT, BACKUP UPPER (RH ONLY)	0101	1
	28	9-61278-3004	. SUPPORT, BACKUP UPPER (RH ONLY)	0202	1
	28	9-61278-3006	. SUPPORT, BACKUP UPPER (RH ONLY)	0350	1
	28	9-61278-3008	. SUPPORT, BACKUP UPPER (RH ONLY)	5199	1
	29	5-87115-3001	. SUPPORT, BACKUP LOWER (LH ONLY)	0150	1
	29	5-87115-3009	. SUPPORT, BACKUP LOWER (LH ONLY)	5199	1
			(OPTIONAL TO 5-87115-3007)		
	29	5-87115-3007	. SUPPORT, BACKUP LOWER (LH ONLY)	5199	1
			(OPTIONAL 5-87115-3009)		
	29	5-87115-3002	. SUPPORT, BACKUP LOWER (RH ONLY)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6. 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
55 29	5-87115-3008	. SUPPORT, BACKUP LOWER (RH ONLY) . . . . . (OPTIONAL 5-87115-3010)	5199	1
29	5-87115-3010	. SUPPORT, BACKUP LOWER (RH ONLY) . . . . . (OPTIONAL TO 5-87115-3008)	5199	1
30	5-85645-7	. SHIM, WING STATION 700.50 FLAP TRACK SUPPORT. . . . . STRUCTURE		AR
31	5-85645-8	. SHIM, WING STATION 700.50 FLAP TRACK SUPPORT. . . . . STRUCTURE		AR

MISSING ITEM NUMBERS ARE NOT APPLICABLE

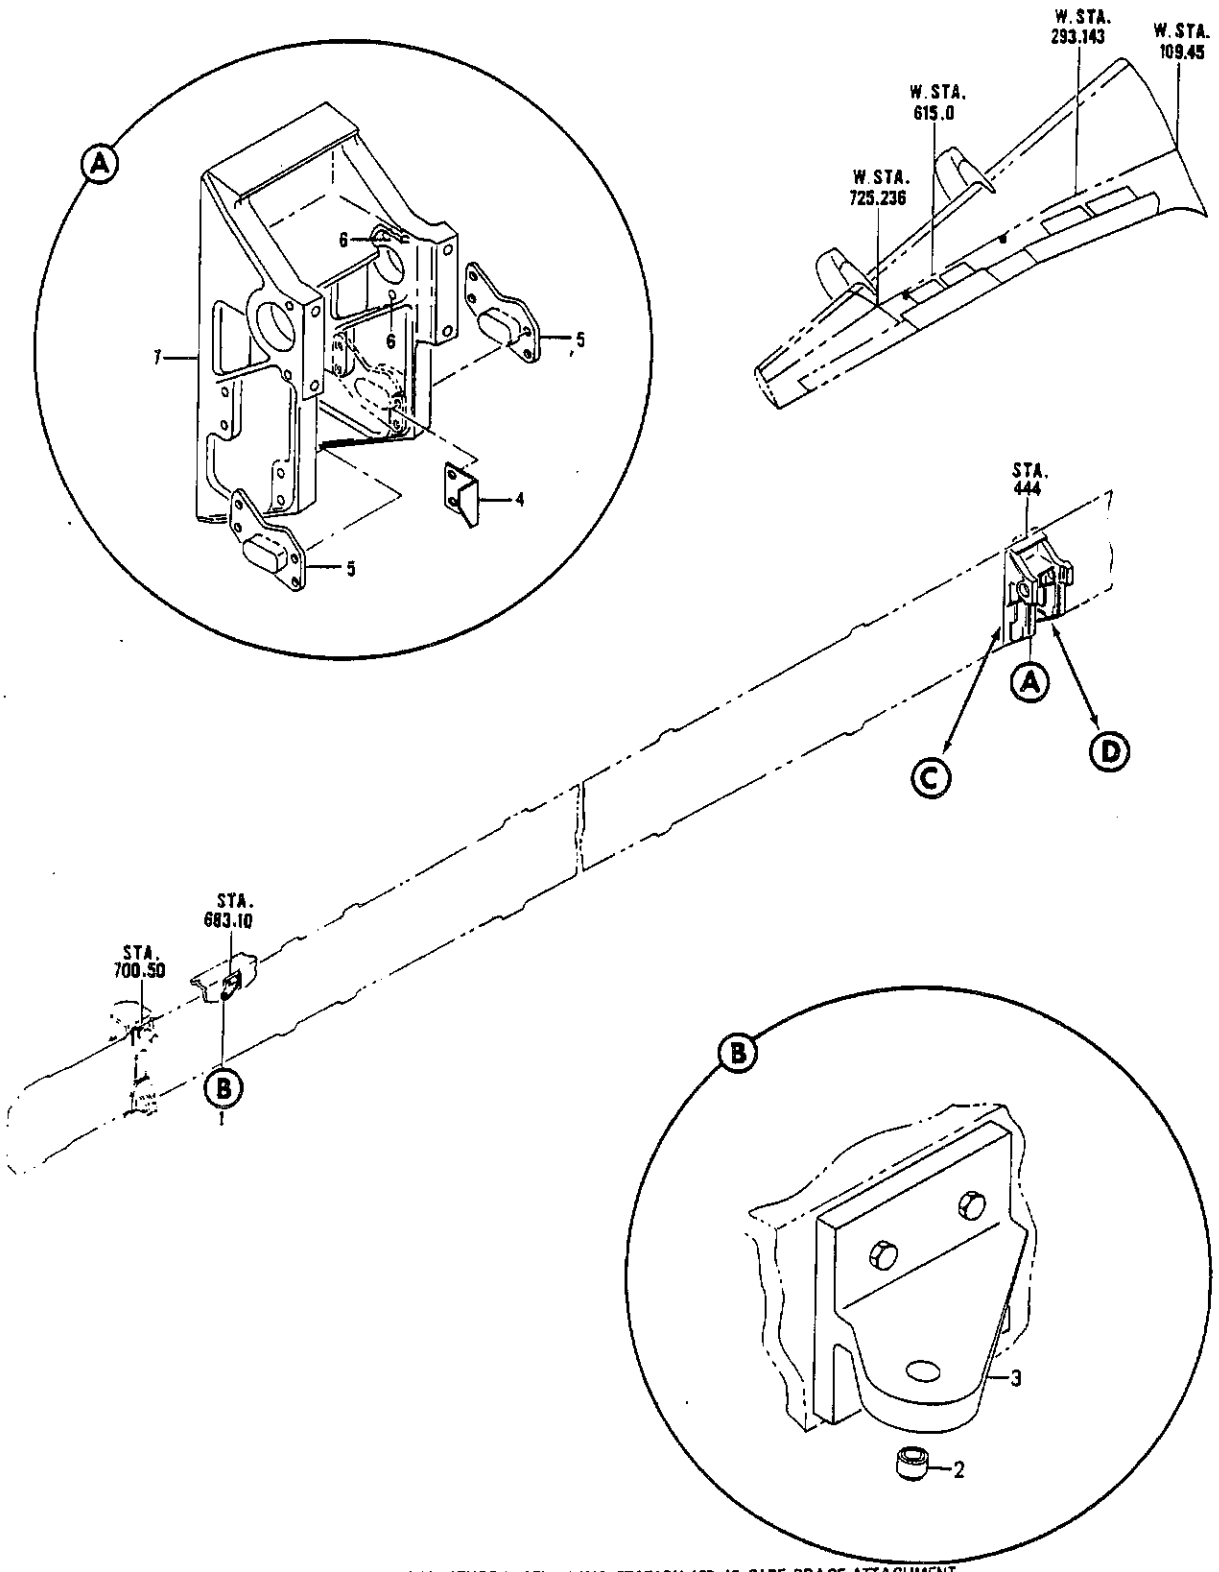


FIGURE 56. STRUCTURE INSTL, WING STATION 683.10 SIDE BRACE ATTACHMENT SUPPORT ASSY, WING STATION 444 INBOARD FLAP SCREW (SHEET 1)

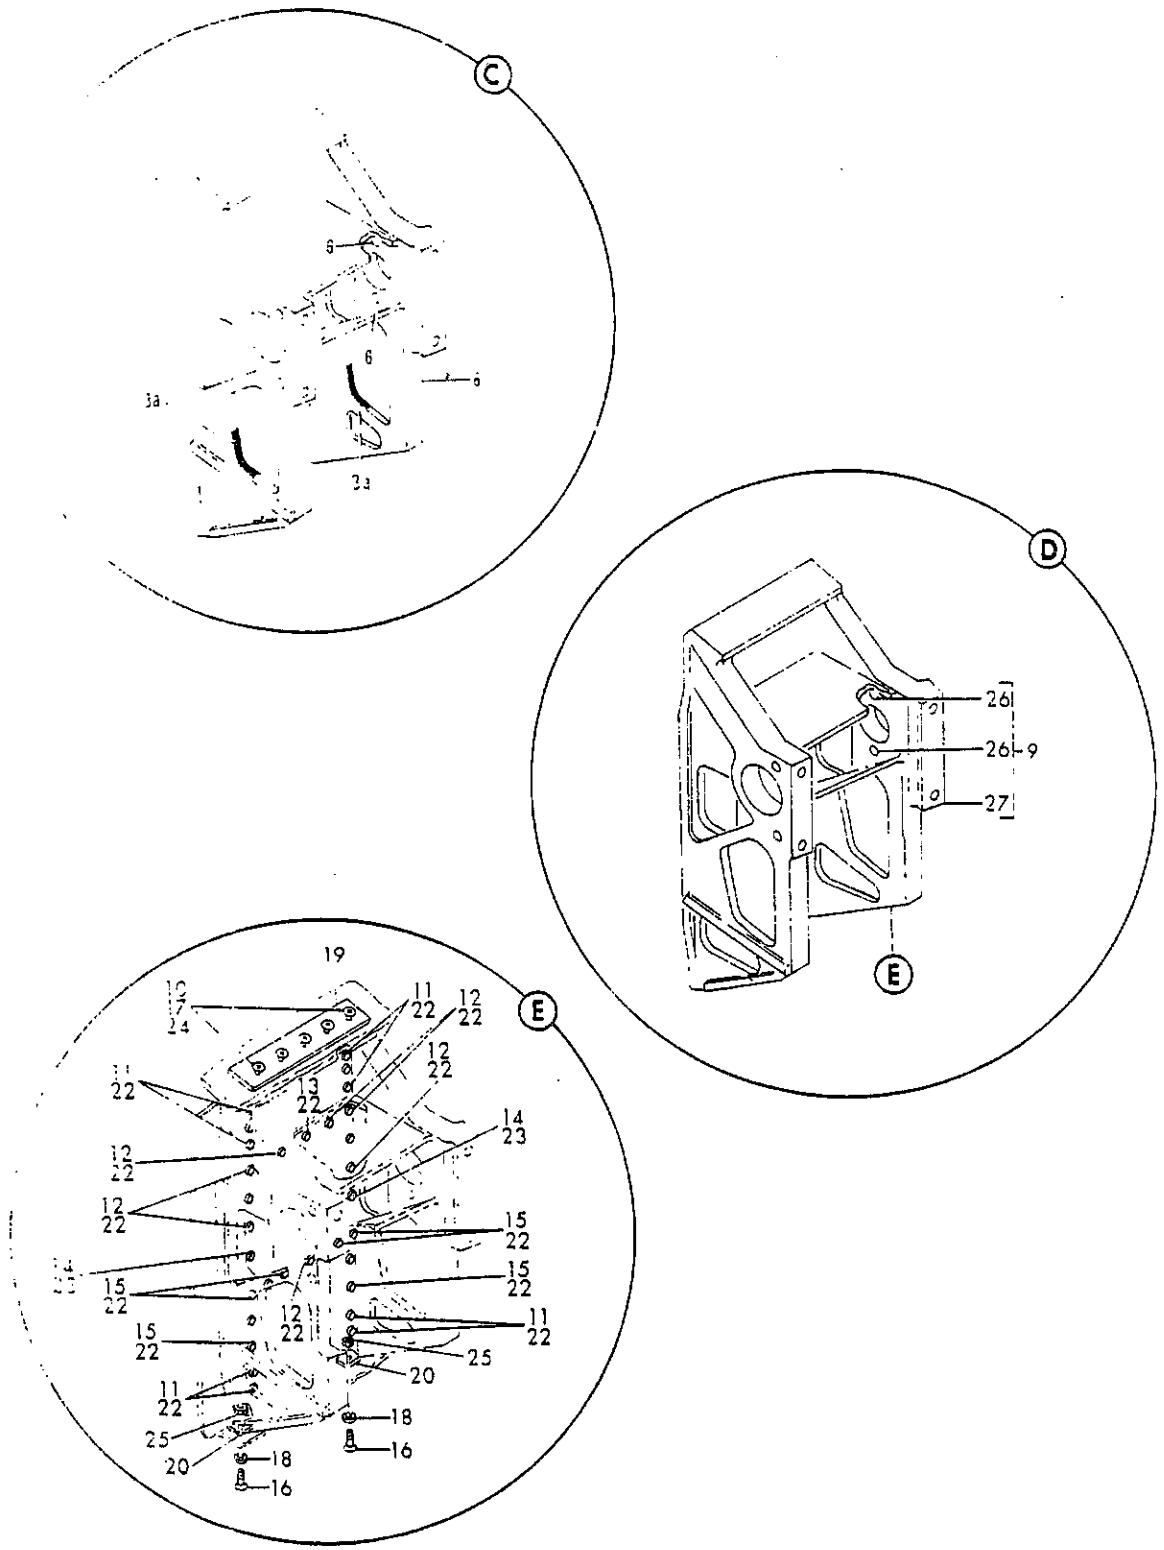


FIGURE 56. STRUCTURE INSTL, WING STATION 683.10 SIDE BRACE ATTACHMENT SUPPORT ASSY, WING STATION 444 INBOARD FLAP SCREW (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	56		STRUCTURE INSTL, WING STATION 683.10 SIDE BRACE . . . . ATTACHMENT		
			SUPPORT ASSY, WING STATION 444 INBOARD FLAP SCREW . . .		
		5-85646-3003	. STRUCTURE INSTL, WING STATION 683.10 SIDE BRACE . . . ATTACHMENT (LH) (SEE 57-3, FIG. 15, ITEM 6)		RF
		5-85646-3004	. STRUCTURE INSTL, WING STATION 683.10 SIDE BRACE . . . ATTACHMENT (RH) (SEE 57-3, FIG. 15, ITEM 6)		RF
	1	60-7213-5	. . TEE ASSY, FLAP TRACK SIDE BRACE ATTACHING (LH ONLY)		1
	1	60-7213-6	. . TEE ASSY, FLAP TRACK SIDE BRACE ATTACHING (RH ONLY)		1
			ATTACHING PARTS		
		NAS1104-12W	. . BOLT.		4
		AN960PD416L	. . WASHER.		4
		NAS679A4W	. . NUT		4
			-------*-------		
	2	90-9473-17	. . . BUSHING, STRUCTURAL PRESSED FIT		1
	3	60-7213-3	. . . TEE, FLAP TRACK SIDE BRACE ATTACHING (LH ONLY). .		1
	3	60-7213-4	. . . TEE, FLAP TRACK SIDE BRACE ATTACHING (RH ONLY). .		1
		65-19489-13	. SUPPORT ASSY, WING STATION 444 INBOARD FLAP SCREW . . (LH) (SEE 57-3, FIG. 15, ITEM 2) (OPTIONAL 65-19489-9)	0103	RF
		65-19489-9	. SUPPORT ASSY, WING STATION 444 INBOARD FLAP SCREW . . (LH) (SEE 57-3, FIG. 15, ITEM 2) (OPTIONAL TO 65-19489-13)	0103	RF
R		65-19489-19	. SUPPORT ASSY, WING STATION 444 INBOARD FLAP SCREW . .	5199	RF
R			(LH) (SEE 57-3, FIG. 15, ITEM 2)		
		65-19489-14	. SUPPORT ASSY, WING STATION 444 INBOARD FLAP SCREW . . (RH) (SEE 57-3, FIG. 15, ITEM 2) (OPTIONAL 65-19489-10)	0103	RF
		65-19489-10	. SUPPORT ASSY, WING STATION 444 INBOARD FLAP SCREW . . (RH) (SEE 57-3, FIG. 15, ITEM 2) (OPTIONAL TO 65-19489-14)	0103	RF
R		65-19489-20	. SUPPORT ASSY, WING STATION 444 INBOARD FLAP SCREW . .	5199	RF
R			(RH) (SEE 57-3, FIG. 15, ITEM 2)		
	3A	65-19489-17	. . STRIP, RUB.		2
	6	BACS13W4CN3	. . SLEEVE.		2
	8	65-19489-15	. . FITTING, WING STATION 444 INBOARD FLAP SCREW. . . . SUPPORT (USED ON 65-19489-13)	0103	1
	8	65-19489-11	. . FITTING, WING STATION 444 INBOARD FLAP SCREW. . . . SUPPORT (USED ON 65-19489-9)	0103	1
R	8	65-19489-21	. . FITTING, (USED ON 65-19489-19).	5199	1
	8	65-19489-16	. . FITTING, (USED ON 65-19489-14).	0103	1
	8	65-19489-12	. . FITTING, (USED ON 65-19489-10).	0103	1
R	8	65-19489-22	. . FITTING, (USED ON 65-19489-20).	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

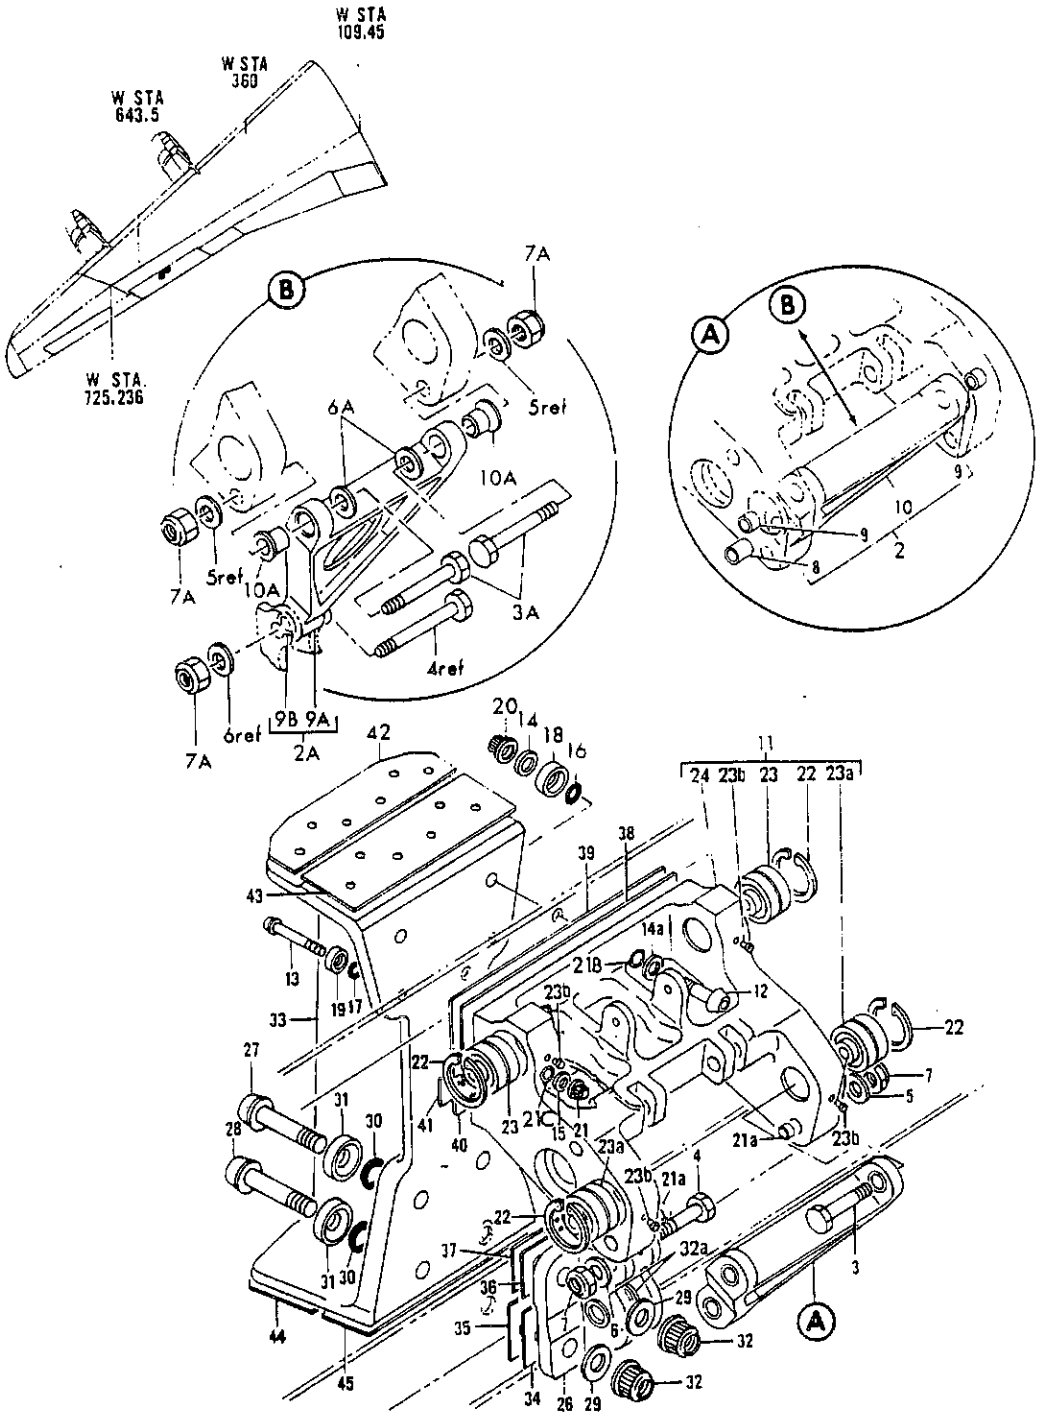


FIGURE 57. STRUCTURE INSTL, WING STATION 615 FLAP TRACK SUPPORT

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	57	5-85644-3001	STRUCTURE INSTL, WING STATION 615 FLAP TRACK SUPPORT. . (LH) (SEE 57-3, FIG. 15, ITEM 4)		RF
		5-85644-3002	STRUCTURE INSTL, WING STATION 615 FLAP TRACK SUPPORT. . (RH) (SEE 57-3, FIG. 15, ITEM 4)		RF
R	2	65-3769-1	. SUPPORT ASSY, WING STATION 615.00 FLAP TRACK VERTICAL	5151	1
R			(DELETED BY SVA E.O. 81361)		
R	2	65-3769-1	. SUPPORT ASSY, WING STATION 615.00 FLAP TRACK VERTICAL	0150	1
R			(DELETED BY SB 3222)		
R	2A	65C13981-1	. SUPPORT ASSY, WING STATION 615.00 FLAP TRACK VERTICAL	5299	1
R	2A	65C13981-4	. SUPPORT ASSY, WING STATION 615.00 FLAP TRACK VERTICAL	0150	1
R			(ADDED BY SB 3222)		
R	2A	65C13981-4	. SUPPORT ASSY, WING STATION 615.00 FLAP TRACK VERTICAL	5151	1
R			(ADDED BY SVA E.O. 81361)		
			ATTACHING PARTS		
R	3	NAS1108-28	. BOLT, (DELETED BY SB 3222).	0150	2
R	3	NAS1108-28	. BOLT, (DELETED BY SVA E.O. 81361)	5151	2
R	3A	BACB30NJ-8-30	. BOLT.	5299	2
R	3A	BACB30NJ8-30	. BOLT, (ADDED BY SB 3222).	0150	2
R	3A	BACB30NJ8-30	. BOLT; (ADDED BY SVA E.O. 81361)	5151	2
	4	NAS1108-18	. BOLT.		1
	5	AN960PD816	. WASHER.		2
	6	AN960-816	. WASHER.		1
R	6A	BACW10CT-16C	. WASHER.	5299	2
R	6A	BACW10CT16C	. WASHER, (ADDED BY SB 3222).	0150	2
R	6A	BACW10CT16C	. WASHER, (ADDED BY SVA E.O. 81361)	5151	2
R	7	BACN10BY58	. NUT, (DELETED BY SB 3222)	0150	3
R	7	BACN10BY58	. NUT, (DELETED BY SVA E.O. 81361).	5151	3
R	7A	BACN10JC8	. NUT	5299	3
R	7A	BACN10JC8	. NUT, (ADDED BY SB 3222)	0150	3
R	7A	BACN10JC8	. NUT, (ADDED BY SVA E.O. 81361).	5151	3
			-------*-------		
	8	90-9473-13	. . BUSHING, PRESSED FIT STRUCTURAL		1
R	9	90-9473-11	. . BUSHING, PRESSED FIT STRUCTURAL (DELETED BY	0150	2
R			SB 3222)		
R	9	90-9473-11	. . BUSHING, PRESSED FIT STRUCTURAL (DELETED BY SVA . .	5151	2
R			E.O. 81361)		
R	9A	69-68202-1	. . BUSHING, PRESSED FIT STRUCTURAL	5299	1
R	9A	69-68202-1	. . BUSHING, PRESSED FIT STRUCTURAL (ADDED BY SB 3222)	0150	1
R	9A	69-68202-1	. . BUSHING, PRESSED FIT STRUCTURAL (ADDED BY SVA E.O.	5151	1
R			81361)		
R	9B	65C13981-2	. . FITTING	5299	1
R	9B	65C13981-2	. . FITTING, (ADDED BY SB 3222)	0150	1
R	9B	65C13981-2	. . FITTING, (ADDED BY SVA E.O. 81361).	5151	1
R	10	65-3769-2	. . FITTING, WING STATION 615.00 FLAP TRACK VERTICAL. .	0150	1
R			SUPPORT (DELETED BY SB 3222)		
R	10	65-3769-2	. . FITTING, WING STATION 615.00 FLAP TRACK VERTICAL. .	5151	1
R			SUPPORT (DELETED BY SVA E.O. 81361)		
R	10A	69-68068-1	. BUSHING	5299	2
R	10A	69-68068-1	. BUSHING, (ADDED BY SB 3222)	0150	2
R	10A	69-68068-1	. BUSHING, (ADDED BY SVA E.O. 81361).	5151	2
R	11	65-55194-5	. SUPPORT ASSY, SPOILER (LH ONLY)	0151	1
R	11	65-55194-9	. SUPPORT ASSY, SPOILER (LH ONLY)	5299	1
R	11	65-55194-6	. SUPPORT ASSY, SPOILER (RH ONLY)	0151	1
R	11	65-55194-10	. SUPPORT ASSY, SPOILER (RH ONLY)	5299	1
			ATTACHING PARTS		
	12	MS20007-22	. BOLT.		2
	13	MS20005-21	. BOLT.		2
R	14	AN960PD716	. WASHER.	5299	2
R	14	AN960PD716	. WASHER, (DELETED BY SB 3222).	0150	2
R	14	AN960PD716	. WASHER, (DELETED BY SVA E.O. 81361)	5151	2
R	14	BACW10BNN7AP	. WASHER, (ADDED BY SB 3222).	0150	2
R	14	BACW10BNN7AP	. WASHER, (ADDED BY SVA E.O. 81361)	5151	2
	14A	MS20002C7	. WASHER.		1
R	15	AN960PD516	. WASHER.	5299	2
R	15	AN960PD516	. WASHER, (DELETED BY SB 3222).	0150	2
R	15	AN960PD516	. WASHER, (DELETED BY SVA E.O. 81361)	5151	2
R	15	BACW10BN5AP	. WASHER, (USED WITH 66-31054-12, 66-31054-13) (ADDED .	0150	2
R			BY SB 3222)		
R	15	BACW10BN5AP	. WASHER, (USED WITH 66-31054-12, 66-31054-13) (ADDED .	5151	2
R			BY SVA E.O. 81361)		
R	15	BACW10P94D	. WASHER, (USED WITH 66-31054-14, 66-31054-15,.	0150	2
R			65-31054-16) (ADDED BY SB 3222)		
R	15	BACW10P94D	. WASHER, (USED WITH 66-31054-14, 66-31054-15,.	5151	2
R			66-31054-16) (ADDED BY SVA E.O. 81361)		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	57 16	MS29513-111	. PACKING		2
	17	MS29513-011	. PACKING		2
	18	6-55097-2	. WASHER, TENSION BOLT O-RING SEAL.		2
	19	6-72019	. WASHER, TENSION BOLT O-RING SEAL.		2
	20	BACN10B070	. NUT		2
	21	BACN10B054	. NUT		2
			-------*-------		
	21A	90-9473-14	. . BUSHING, PRESSED FIT STRUCTURAL		2
R	21B	66-31054-17	. . BUSHING, OVERSIZE (ADDED BY SB 3222).	0150	2
R	21B	66-31054-17	. . BUSHING, OVERSIZE (ADDED BY SVA E.O. 81361)	5151	2
R	21B	66-31054-18	. . BUSHING, OVERSIZE (ADDED BY SB 3222).	0150	AR
R	21B	66-31054-18	. . BUSHING, OVERSIZE (ADDED BY SVA E.O. 81361)	5151	AR
R	21B	66-31054-19	. . BUSHING, OVERSIZE (ADDED BY SB 3222).	0150	AR
R	21B	66-31054-19	. . BUSHING, OVERSIZE (ADDED BY SVA E.O. 81361)	5151	AR
R	21C	66-31054-12	. . BUSHING, OVERSIZE (USED WITH BACW10BN5AP) (ADDED BY SB 3222)	0150	2
R	21C	66-31054-12	. . BUSHING, OVERSIZE (USED WITH BACW10BN5AP) (ADDED BY SVA E.O. 81361)	5151	2
R	21C	66-31054-13	. . BUSHING, OVERSIZE (USED WITH BACW10BN5AP) (ADDED BY SB 3222)	0150	AR
R	21C	66-31054-13	. . BUSHING, OVERSIZE (USED WITH BACW10BN5AP) (ADDED BY SVA E.O. 81361)	5151	AR
R	21C	66-31054-14	. . BUSHING, OVERSIZE (USED WITH BACW10P94D) (ADDED BY SB 3222)	0150	AR
R	21C	66-31054-14	. . BUSHING, OVERSIZE (USED WITH BACW10P94D) (ADDED BY SVA E.O. 81361)	5151	AR
R	21C	66-31054-15	. . BUSHING, OVERSIZE (USED WITH BACW10P94D) (ADDED BY SB 3222)	0150	AR
R	21C	66-31054-15	. . BUSHING, OVERSIZE (USED WITH BACW10P94D) (ADDED BY SVA E.O. 81361)	5151	AR
R	21C	66-31054-16	. . BUSHING, OVERSIZE (USED WITH BACW10P94D) (ADDED BY SB 3222)	0150	AR
R	21C	66-31054-16	. . BUSHING, OVERSIZE (USED WITH BACW10P94D) (ADDED BY SVA E.O. 81361)	5151	AR
	23	10-60545-36	. . BEARING		2
	23A	10-60545-36	. . BEARING		2
R	24	65-55194-7	. . FITTING, SUPPORT (LH ONLY).	0151	1
R	24	65-55194-11	. . FITTING, (USED ON 65-55194-9)	5299	1
R	24	65-55194-8	. . FITTING, SUPPORT (RH ONLY).	0151	1
R	24	65-55194-12	. . FITTING, (USED ON 65-55194-10).	5299	1
	26	9-55650-2000	. SUPPORT, REAR SPAR LOWER.		1
			ATTACHING PARTS		
	27	MS20010-26	. BOLT.		2
	28	MS20010-28	. BOLT.		2
	29	MS20002-10	. WASHER.		4
	30	MS29513-114	. PACKING		4
	31	6-55097-5	. WASHER, TENSION BOLT O-RING SEAL.		4
	32	BACN10B108	. NUT		4
			-------*-------		
	33	5-85610-3001	. FITTING, WING STATION 615 FLAP TRACK BACKUP SUPPORT (LH ONLY)	0101	1
	33	5-85610-3002	. FITTING, WING STATION 615 FLAP TRACK BACKUP SUPPORT (RH ONLY)	0101	1
	33	5-85610-3007	. FITTING, BACKUP (LH ONLY)	0202	1
	33	5-85610-3008	. FITTING, BACKUP (RH ONLY)	0202	1
R	33	5-85610-3015	. FITTING, BACKUP (LH ONLY)	0350	1
R	33	5-85610-3016	. FITTING, BACKUP (RH ONLY)	0350	1
R	33	5-85610-3019	. FITTING, BACKUP (LH ONLY)	5199	1
R	33	5-85610-3020	. FITTING, BACKUP (RH ONLY)	5199	1
	34	BACS40A34-70	. SHIM.		AR
	35	BACS40B34-70	. SHIM.		AR
	36	BACS40A27-70	. SHIM.		AR
	37	BACS40B27-70	. SHIM.		AR
	38	BACS40A36-147	. SHIM.		AR
	39	BACS40B36-147	. SHIM.		AR
	40	BACS40A16-147	. SHIM.		AR
	41	BACS40B16-147	. SHIM.		AR
	42	5-85644-3	. SHIM, WING STATION 615 FLAP TRACK SUPPORT STRUCTURE	0102	AR
	42	5-85644-7	. SHIM.	0399	1
	43	5-85644-4	. SHIM, WING STATION 615 FLAP TRACK SUPPORT STRUCTURE	0102	AR
	43	5-85644-8	. SHIM.	0399	1
R	44	5-85644-5	. SHIM, WING STATION 615 FLAP TRACK SUPPORT STRUCTURE	0150	AR
R	44	5-85644-9	. SHIM.	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	57 45	5-85644-6	. SHIM, WING STATION 615 FLAP TRACK SUPPORT STRUCTURE .	0150	AR
R			(OPTIONAL 5-85644-2006)		
R	45	5-85644-2006	. SHIM, WING STATION 615 FLAP TRACK SUPPORT STRUCTURE .	0150	AR
R			(OPTIONAL 5-85644-6)		
R	46	5-85644-10	. SHIM.	0151	2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

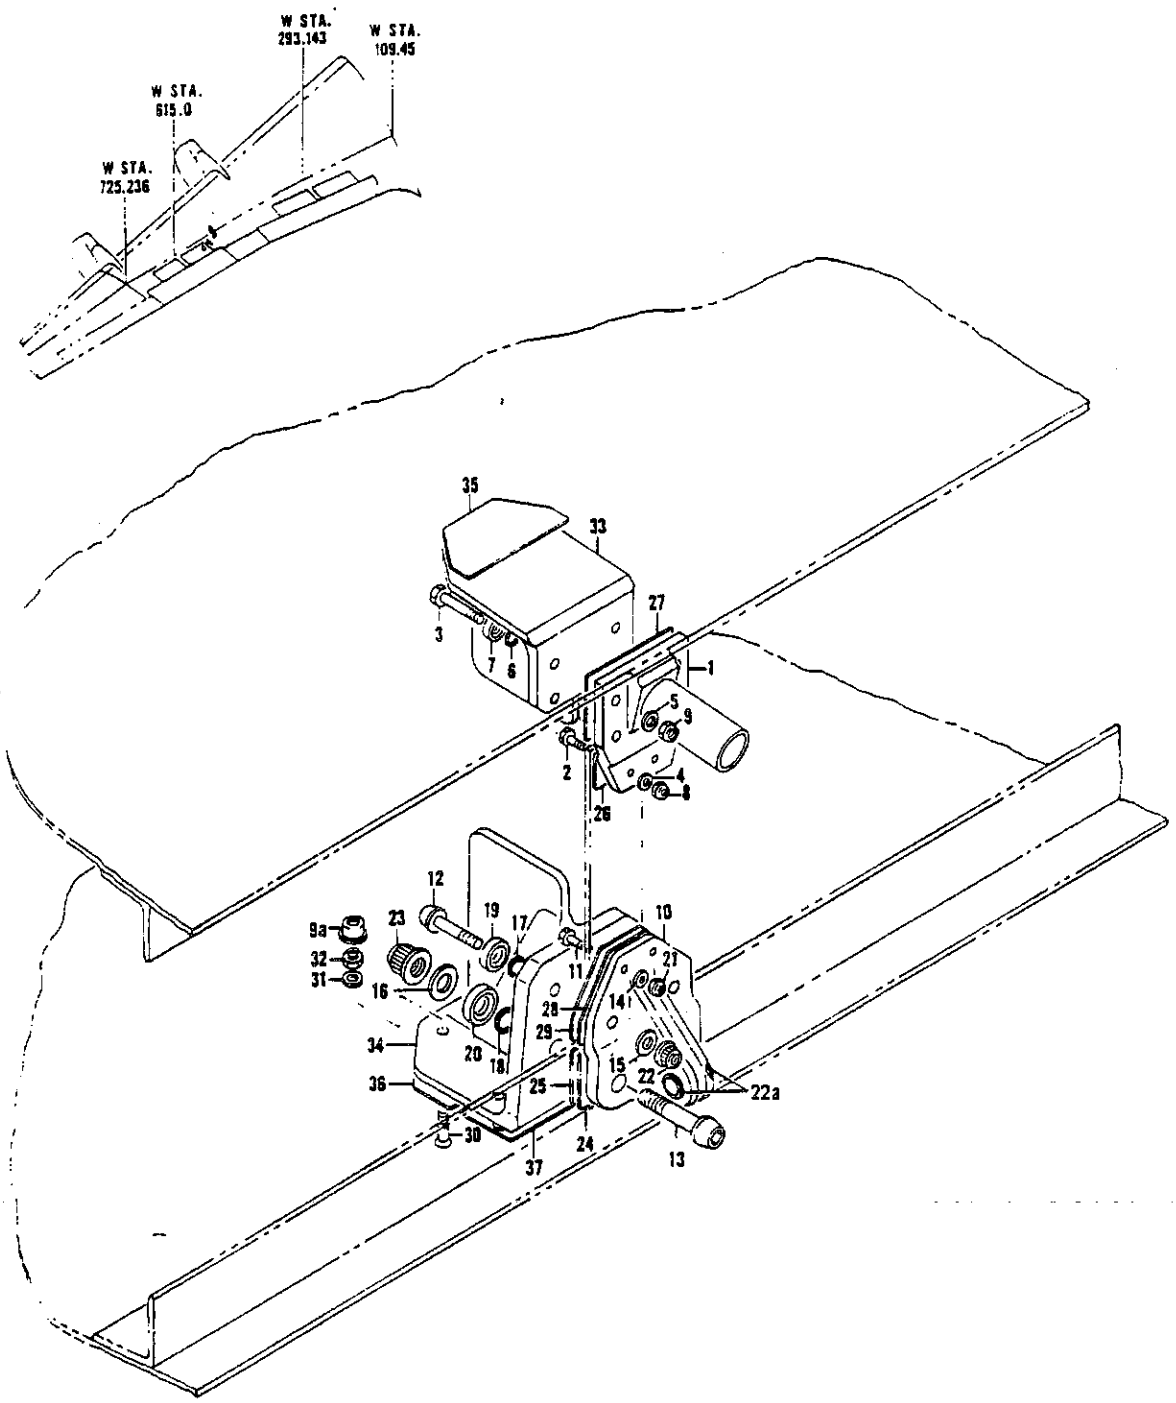


FIGURE 58. STRUCTURE INSTL, WING STATION 546.30 FLAP TRACK SUPPORT

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	58	5-85643-3001	STRUCTURE INSTL, WING STATION 546.30 FLAP TRACK SUPPORT (LH) (SEE 57-3, FIG. 15, ITEM 3)		RF
		5-85643-3002	STRUCTURE INSTL, WING STATION 546.30 FLAP TRACK SUPPORT (RH) (SEE 57-3, FIG. 15, ITEM 3)		RF
	1	5-85680-2005	. SUPPORT, REAR SPAR UPPER FLAP TRACK (LH ONLY)		1
	1	5-85680-2006	. SUPPORT, REAR SPAR UPPER FLAP TRACK (RH ONLY)		1
			ATTACHING PARTS		
	2	NAS1103-6	. BOLT.		2
	3	NAS1105-17	. BOLT.		4
	4	AN960-10L	. WASHER.		2
	5	AN960-516	. WASHER.		4
	6	MS29513-011	. PACKING		4
	7	6-72019	. WASHER, TENSION BOLT O-RING		4
	8	NAS679A3W	. NUT		2
	9	NAS679A5	. NUT		4
			-------*-------		
	9A	BACC50H45	. COVER		4
	10	9-55649-2001	. SUPPORT, REAR SPAR (LH ONLY).		1
	10	9-55649-2002	. SUPPORT, REAR SPAR (RH ONLY).		1
			ATTACHING PARTS		
	11	NAS1103-7	. BOLT.		2
R	12	MS20006-16	. BOLT.	5199	2
R	12	MS20006-16	. BOLT, (DELETED BY SB 3400).	0150	2
R	12	BACB30LE7-16	. BOLT, (ADDED BY SB 3400).	0150	2
R	13	MS20008-22	. BOLT.	5199	2
R	13	MS20008-22	. BOLT, (DELETED BY SB 3400).	0150	2
R	13	BACB30LE9-22	. BOLT, (ADDED BY SB 3400).	0150	2
	14	AN960-10	. WASHER.		2
R	15	MS20002-6	. WASHER.	5199	2
R	15	MS20002-6	. WASHER, (DELETED BY SB 3400).	0150	2
R	15	BACW10BP7DP	. WASHER, (ADDED BY SB 3400).	0150	2
R	16	MS20002-8	. WASHER.	5199	2
R	16	MS20002-8	. WASHER, (DELETED BY SB 3400).	0150	2
R	16	BACW10BP9DP	. WASHER, (ADDED BY SB 3400).	0150	2
R	17	MS29513-110	. PACKING	5199	2
R	17	MS29513-110	. PACKING, (DELETED BY SB 3400)	0150	2
R	17	MS29513-111	. PACKING, (ADDED BY SB 3400)	0150	2
R	18	MS29513-112	. PACKING	5199	2
R	18	MS29513-112	. PACKING, (DELETED BY SB 3400)	0150	2
R	18	MS29513-113	. PACKING, (ADDED BY SB 3400)	0150	2
R	19	6-55097-1	. WASHER, TENSION BOLT O-RING SEAL.	5199	2
R	19	6-55097-1	. WASHER, TENSION BOLT O RING SEAL (DELETED BY SB 3400)	0150	2
R	19	6-55097-2	. WASHER, TENSION BOLT O RING SEAL (ADDED BY SB 3400) .	0150	2
R	20	6-55097-3	. WASHER, TENSION BOLT O-RING SEAL.	5199	2
R	20	6-55097-3	. WASHER, TENSION BOLT O-RING SEAL (DELETED BY SB 3400)	0150	2
R	20	6-55097-4	. WASHER, TENSION BOLT O-RING SEAL (ADDED BY SB 3400) .	0150	2
	21	NAS679A3W	. NUT		2
R	22	BACN10B-L8L	. NUT	5199	2
R	22	BACN10B-L8L	. NUT, (DELETED BY SB 3400)	0150	2
R	22	BACN10HR7CS	. NUT, (ADDED BY SB 3400)	0150	2
			-------*-------		
R	23	BACN10B-L8L	. NUT	5199	2
			ATTACHING PARTS		
R	23	BACN10B-L8L	. NUT, (DELETED BY SB 3400)	0150	2
R	23	BACN10HR9CS	. NUT, (ADDED BY SB 3400)	0150	2
			-------*-------		
	24	BACS40A32-62	. SHIM.		AR
	25	BACS40B32-62	. SHIM.		AR
	26	BACS40A20-34	. SHIM, (OPTIONAL BACS40A41-55)		AR
	27	BACS40A41-55	. SHIM, (OPTIONAL BACS40A20-34)		AR
	28	5-85643-7	. SHIM, WING STATION 546.30 FLAP TRACK SUPPORT. . . . . STRUCTURE		AR
	29	5-85643-8	. SHIM, WING STATION 546.30 FLAP TRACK SUPPORT. . . . . STRUCTURE		AR
	30	BACB30A8P5-11A	. BOLT.		4
	31	AN960PD516	. WASHER.		4
	32	NAS679A5	. NUT		4
	33	9-61276-1	. SUPPORT, WING STATION 546.30 FLAP TRACK BACKUP UPPER (LH ONLY)	0101	1
	33	9-61276-2	. SUPPORT, WING STATION 546.30 FLAP TRACK BACKUP UPPER (RH ONLY)	0101	1
	33	9-61276-5	. SUPPORT, BACKUP UPPER (LH ONLY)	0202	1
	33	9-61276-6	. SUPPORT, BACKUP UPPER (RH ONLY)	0202	1
R	33	9-61276-7	. SUPPORT, BACKUP UPPER (LH ONLY)	0350	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	58 33	9-61276-8	. SUPPORT, BACKUP UPPER (RH ONLY)	0350	1
R	33	9-61276-9	. SUPPORT, BACKUP UPPER (LH ONLY)	5199	1
R	33	9-61276-10	. SUPPORT, BACKUP UPPER (RH ONLY)	5199	1
R	34	9-61277-3001	. SUPPORT, BACKUP LOWER (LH ONLY)	0150	1
R	34	9-61277-3002	. SUPPORT, BACKUP LOWER (RH ONLY)	0150	1
R	34	9-61277-3005	. SUPPORT, BACKUP LOWER (LH ONLY)	5199	1
R	34	9-61277-3006	. SUPPORT, BACKUP LOWER (RH ONLY)	5199	1
	35	5-85643-5	. SHIM, WING STATION 546.30 FLAP TRACK SUPPORT STRUCTURE	0101	AR
	35	5-85643-3011	. SHIM.	0202	AR
	35	5-85643-3012	. SHIM.	0399	1
R	36	5-85643-6	. SHIM.	0150	AR
R			(OPTIONAL 5-85643-3003)		
R	36	5-85643-3003	. SHIM.	0150	AR
R			(OPTIONAL TO 5-85643-6)		
R	36	5-85643-3013	. SHIM.	5199	AR
R	37	5-85643-3009	. SHIM.	0150	AR

MISSING ITEM NUMBERS ARE NOT APPLICABLE

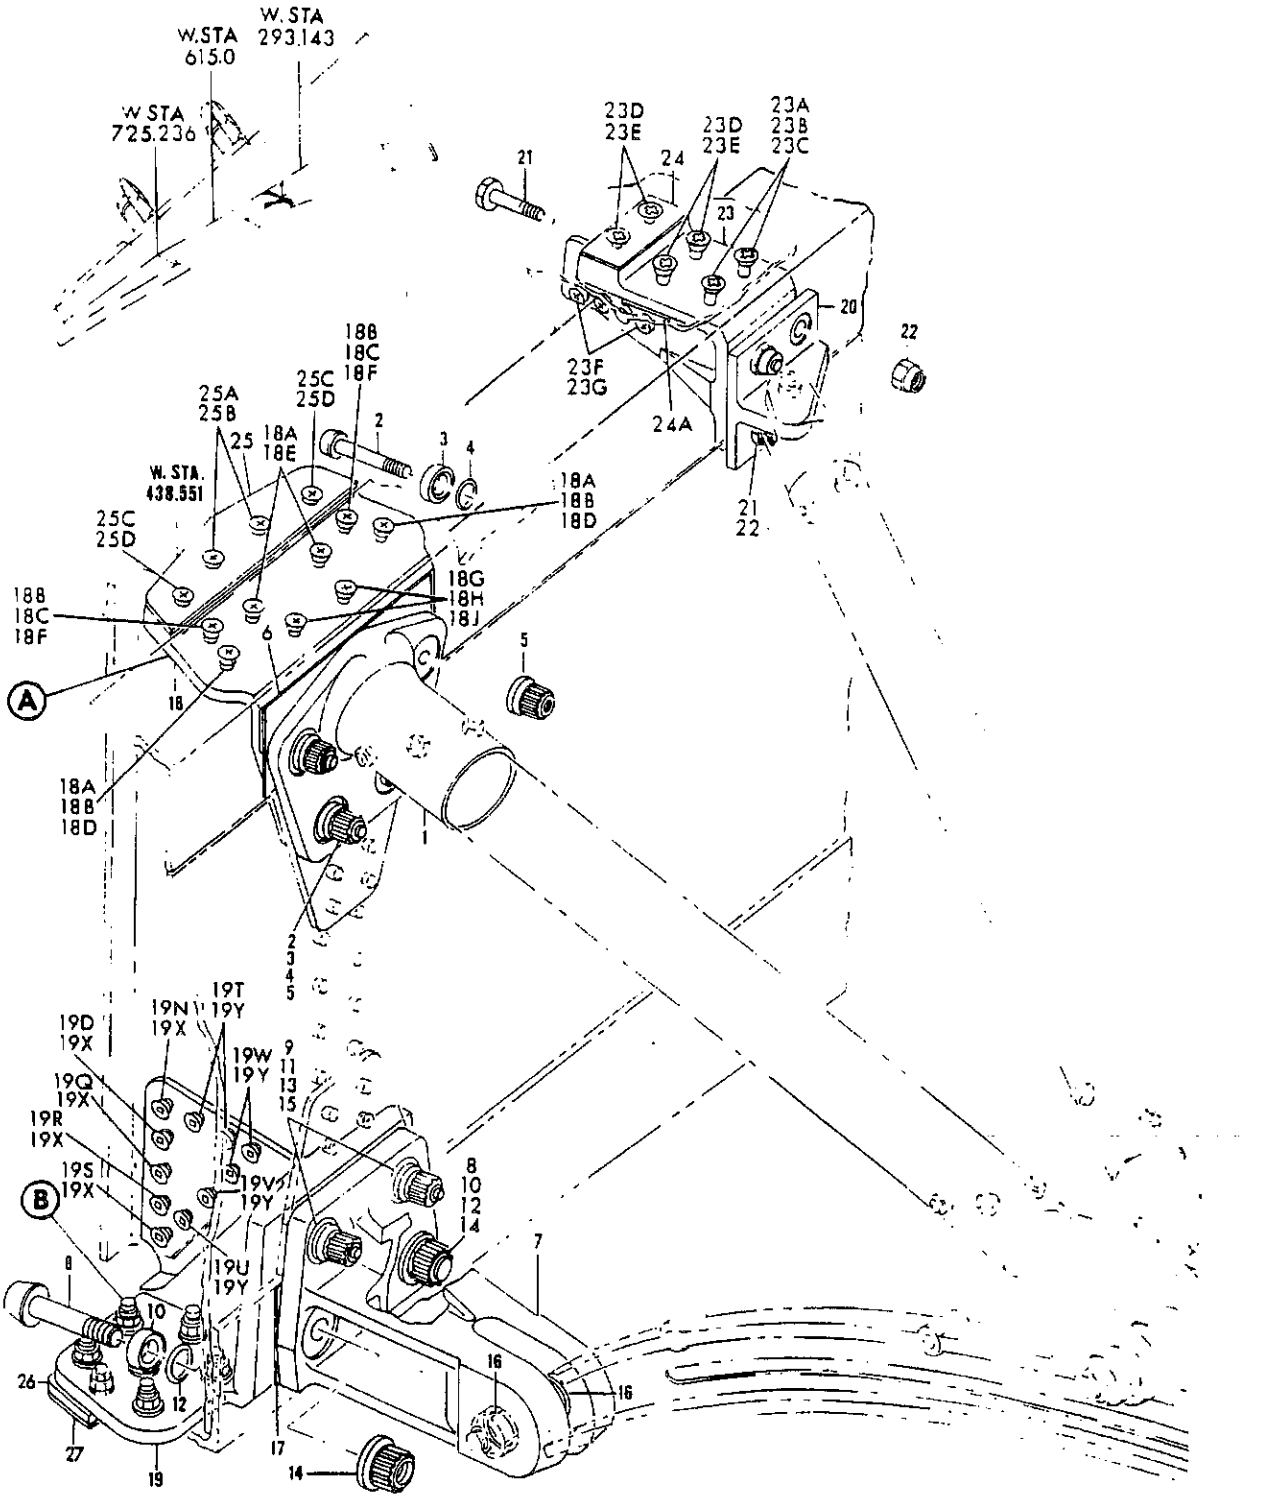


FIGURE 59. STRUCTURE INSTL, FLAP STATION 270.507 (WING STATION 438.551) FLAP TRACK SUPPORT (SHEET 1)

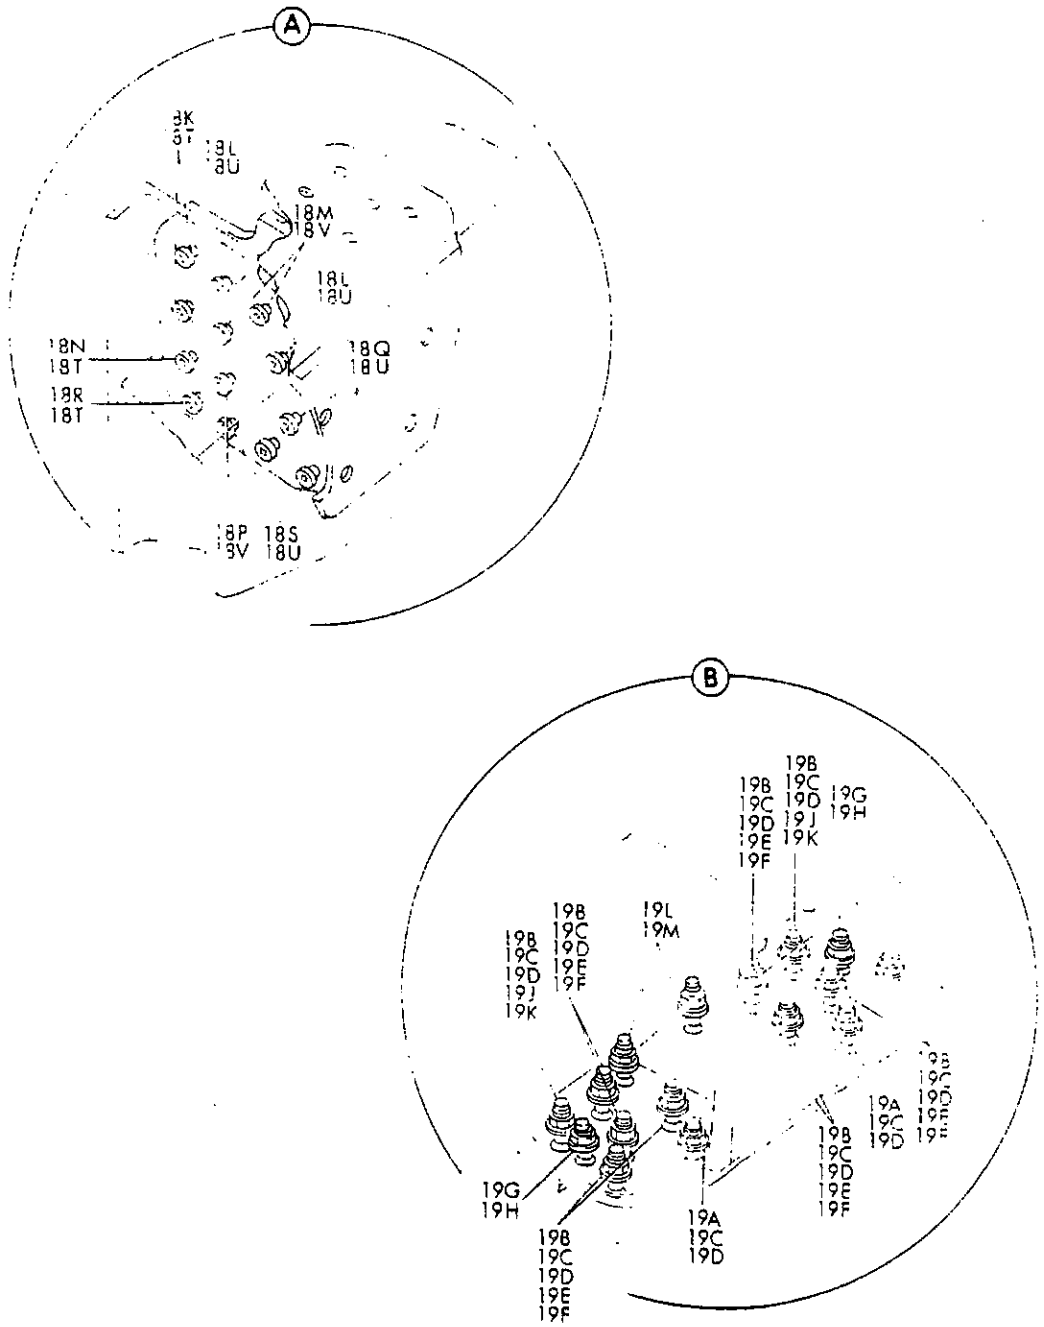


FIGURE 59. STRUCTURE INSTL, FLAP STATION 270, 507 (WING STATION 438, 551) FLAP TRACK SUPPORT (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	59	65-3742-17	STRUCTURE INSTL, FLAP STATION 270.507 (WING STATION . . 438.551) FLAP TRACK SUPPORT (LH) (SEE 57-3, FIG. 15, ITEM 1)		RF
		65-3742-18	STRUCTURE INSTL, FLAP STATION 270.507 (WING STATION . . 438.551) FLAP TRACK SUPPORT (RH) (SEE 57-3, FIG. 15, ITEM 1)		RF
R R R	1	65-2820-5	. SUPPORT, FLAP STATION 270.507 UPPER FLAP TRACK. . . . FITTING (LH ONLY) (OPTIONAL 65-2820-7)	0150	1
R R R	1	65-2820-7	. SUPPORT, FLAP STATION 270.507 UPPER FLAP TRACK. . . . FITTING (LH ONLY) (OPTIONAL TO 65-2820-5)	0150	1
R R	1	65-2820-7	. SUPPORT, FLAP STATION 270.507 UPPER FLAP TRACK. . . . FITTING (LH ONLY)	5199	1
R R R	1	65-2820-6	. SUPPORT, FLAP STATION 270.507 UPPER FLAP TRACK. . . . FITTING (RH ONLY) (OPTIONAL 65-2820-8)	0150	1
R R R	1	65-2820-8	. SUPPORT, FLAP STATION 270.507 UPPER FLAP TRACK. . . . FITTING (RH ONLY) (OPTIONAL TO 65-2820-6)	0150	1
R R	1	65-2820-8	. SUPPORT, FLAP STATION 270.507 UPPER FLAP TRACK. . . . FITTING (RH ONLY)	5199	1
			ATTACHING PARTS		
	2	MS20006-17	. BOLT.		4
	3	6-55097-1	. WASHER, TENSION BOLT O-RING SEAL.		4
	4	MS29513-110	. PACKING		4
	5	BACN10GW6	. NUT		4
			-------*-------		
	6	BACS40A34-80	. SHIM.		AR
R R	7	65-19141-3	. SUPPORT, FITTING (LH ONLY). . . . . (OPTIONAL 65-19141-5)	0150	1
R R	7	65-19141-5	. SUPPORT, FITTING (LH ONLY). . . . . (OPTIONAL TO 65-19141-3)	0150	1
R	7	65-19141-5	. SUPPORT, FITTING (LH ONLY).	5199	1
R R	7	65-19141-4	. SUPPORT, FITTING (RH ONLY). . . . . (OPTIONAL 65-19141-6)	0150	1
R	7	65-19141-6	. SUPPORT, FITTING (RH ONLY).	5199	1
R R	7	65-19141-6	. SUPPORT, FITTING (RH ONLY). . . . . (OPTIONAL TO 65-19141-4)	0150	1
			ATTACHING PARTS		
	8	NAS632-34	. BOLT.		2
	9	MS20006-25	. BOLT.		2
	10	6-55097-6	. WASHER, TENSION BOLT O-RING SEAL.		2
	11	6-55097-1	. WASHER, TENSION BOLT O-RING SEAL.		4
	12	MS29513-116	. PACKING		2
	13	MS29513-110	. PACKING		2
	14	BACN10GW12	. NUT		2
	15	BACN10GW6	. NUT		2
			-------*-------		
R R	16	BACB28W16C81	. BUSHING . . . . . (OPTIONAL BACB28W16C89)	0150	2
R R	16	BACB28W16C89	. BUSHING . . . . . (OPTIONAL TO BACB28W12C81)	0150	2
R	16	BACB28W16C89	. BUSHING	5199	2
	17	BACS40A48-70	. SHIM.		AR
	18	65-4186-7	. FITTING, WING STATION 438.551 UPPER FLAP TRACK. . . . BACK-UP (LH ONLY) (OPTIONAL 65-4186-23)	0101	1
R	18	65-4186-9	. FITTING, UPPER BACK-UP (LH ONLY).	0250	1
R	18	65-4186-19	. FITTING, UPPER BACK UP (LH ONLY).	5199	1
	18	65-4186-8	. FITTING, WING STATION 438.551 UPPER FLAP TRACK. . . . BACK-UP (RH ONLY) (OPTIONAL 65-4186-24)	0101	1
R	18	65-4186-10	. FITTING, UPPER BACK-UP (RH ONLY).	0250	1
R	18	65-4186-20	. FITTING, UPPER BACK UP (RH ONLY).	5199	1
	18	65-4186-23	. FITTING, WING STATION 438.551 UPPER FLAP TRACK. . . . BACK-UP (LH ONLY) (OPTIONAL TO 65-4186-7)	0101	1
	18	65-4186-24	. FITTING, WING STATION 438.551 UPPER FLAP TRACK. . . . BACK-UP (RH ONLY) (OPTIONAL TO 65-4186-8)	0101	1
			ATTACHING PARTS		
	18A	BACB30GY12-12	. BOLT.	0101	4
	18B	BACB30GY12-13	. BOLT.	0299	4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	59 18C	BACB30GY6-9	. BOLT.	0101	2
	18D	BACC30K12	. COLLAR.		2
	18E	BACC30K12	. COLLAR.	0101	2
	18F	BACC30K6	. COLLAR.	0101	2
	18F	BACC30K12	. COLLAR.	0299	2
	18G	BAC830FN14-12	. BOLT.	0299	2
	18H	AN960PD716	. WASHER.	0299	2
	18J	NAS679A7	. NUT	0299	2
	18K	BACB30GW8-9	. BOLT.		2
	18L	BACB30GW8-9	. BOLT.		2
	18M	BACB30GW8-9	. BOLT.		2
	18N	BACB30GW8-8	. BOLT.		1
	18P	BACB30GW8-8	. BOLT.		1
	18Q	BACB30GW8-8	. BOLT.		1
	18R	BACB30GW8-7	. BOLT.		1
	18S	BACB30GW8-7	. BOLT.		3
	18T	BACC30K8	. COLLAR.		4
	18U	BACC30K8	. COLLAR.		6
	18V	BACC30K8	. COLLAR.		3
			-------*-------		
R	19	65-4358-1	. FITTING, WING STATION 438.551 LOWER FLAP TRACK.	0150	1
R			BACK-UP (LH ONLY)		
R	19	65-4358-11	. FITTING, LOWER BACK UP (LH ONLY).	5199	1
R	19	65-4358-2	. FITTING, WING STATION 438.551 LOWER FLAP TRACK.	0150	1
R			BACK-UP (RH ONLY)		
R	19	65-4358-12	. FITTING, LOWER BACK-UP (RH ONLY).	5199	1
			ATTACHING PARTS		
R	19A	BACB30A8P6-13A	. BOLT.	5199	2
	19C	AN960PD616	. WASHER.		12
	19D	NAS679A6	. NUT		12
	19E	BACB30GY12-11	. BOLT.		8
	19F	BACC30K12	. COLLAR.		8
R	19G	BACB30GY6-8	. BOLT.	0150	2
R	19H	BACC30K6	. COLLAR.	0150	2
R	19J	BACB30GY12-11	. BOLT.	0150	2
R	19J	BACB30GY6-7	. BOLT.	5199	2
R	19K	BACC30K12	. COLLAR.	0150	2
R	19K	BACC30K6	. COLLAR.	5199	2
R	19L	BACB30GY6-7	. BOLT.	5199	2
R	19M	BACC30K6	. COLLAR.	5199	2
	19N	BACB30GW8-10	. BOLT.		1
	19P	BACB30GW8-10	. BOLT.		1
	19Q	BACB30GW8-11	. BOLT.		1
	19R	BACB30GW8-12	. BOLT.		1
	19S	BACB30GW8-13	. BOLT.		1
	19T	BACB30GW8-10	. BOLT.		2
	19U	BACB30GW8-12	. BOLT.		1
	19V	BACB30GW8-11	. BOLT.		1
	19W	BACB30GW8-10	. BOLT.		2
	19X	BACC30K8	. COLLAR.		5
	19Y	BACC30K8	. COLLAR.		6
			-------*-------		
	20	65-3742-23	. TEE, FLAP STATION 270.507 (WING STATION 438.551) FLAP		1
			TRACK SUPPORT STRUCTURE EXTRUDED (LH ONLY)		
	20	65-3742-24	. TEE, FLAP STATION 270.507 (WING STATION 438.551) FLAP		1
			TRACK SUPPORT STRUCTURE EXTRUDED (RH ONLY)		
			ATTACHING PARTS		
	21	MS20004-12	. BOLT.		4
	22	BACN10GW4	. NUT		4
			-------*-------		
	23	69-3803-2	. SUPPORT, WING STATION 426.316 BACK-UP FITTING	0101	1
R	23	69-3803-4	. SUPPORT, STATION 426.316 BACK-UP FITTING.	0250	1
R	23	69-3803-10	. SUPPORT, STATION 426.316 BACK-UP FITTING.	5199	1
			ATTACHING PARTS		
	23A	BACB30LU4-11	. BOLT.	0101	2
	23A	BACB30LU4-13	. BOLT.	0299	2
	23B	AN960PD416	. WASHER.		2
	23C	NAS679A4W	. NUT		2
	23D	BACB30GY8-11	. BOLT.	0101	4
	23D	BACB30GW8-13	. BOLT.	0299	4
	23E	BACC30K8	. COLLAR.		4
	23F	BACB30GW6-6	. BOLT.		4
	23G	BACC30K6	. COLLAR.		4
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	59	24	BACS40B16-32	. SHIM.	0101	AR
		24	BACS40R06C20	. SHIM.	0299	AR
		24A	BACS40R20C26	. SHIM.	0299	AR
		25	65-3742-12	. SHIM, FLAP STATION 270.507 (WING STATION 438.551) . . FLAP TRACK SUPPORT STRUCTURE	0101	AR
				ATTACHING PARTS		
		25A	BACB30GY12-12	. BOLT.	0101	4
		25B	BACC30K12	. COLLAR.	0101	4
				--------*--------		
R		26	65-3742-10	. FILLER, FLAP STATION 270.507 (WING STATION 438.551) . FLAP TRACK SUPPORT STRUCTURE	0150	1
R		26	65-3742-27	. FILLER.	5199	1
R		27	65-3742-11	. SHIM, FLAP STATION 270.507 (WING STATION 438.551) . . FLAP TRACK SUPPORT STRUCTURE		AR

MISSING ITEM NUMBERS ARE NOT APPLICABLE


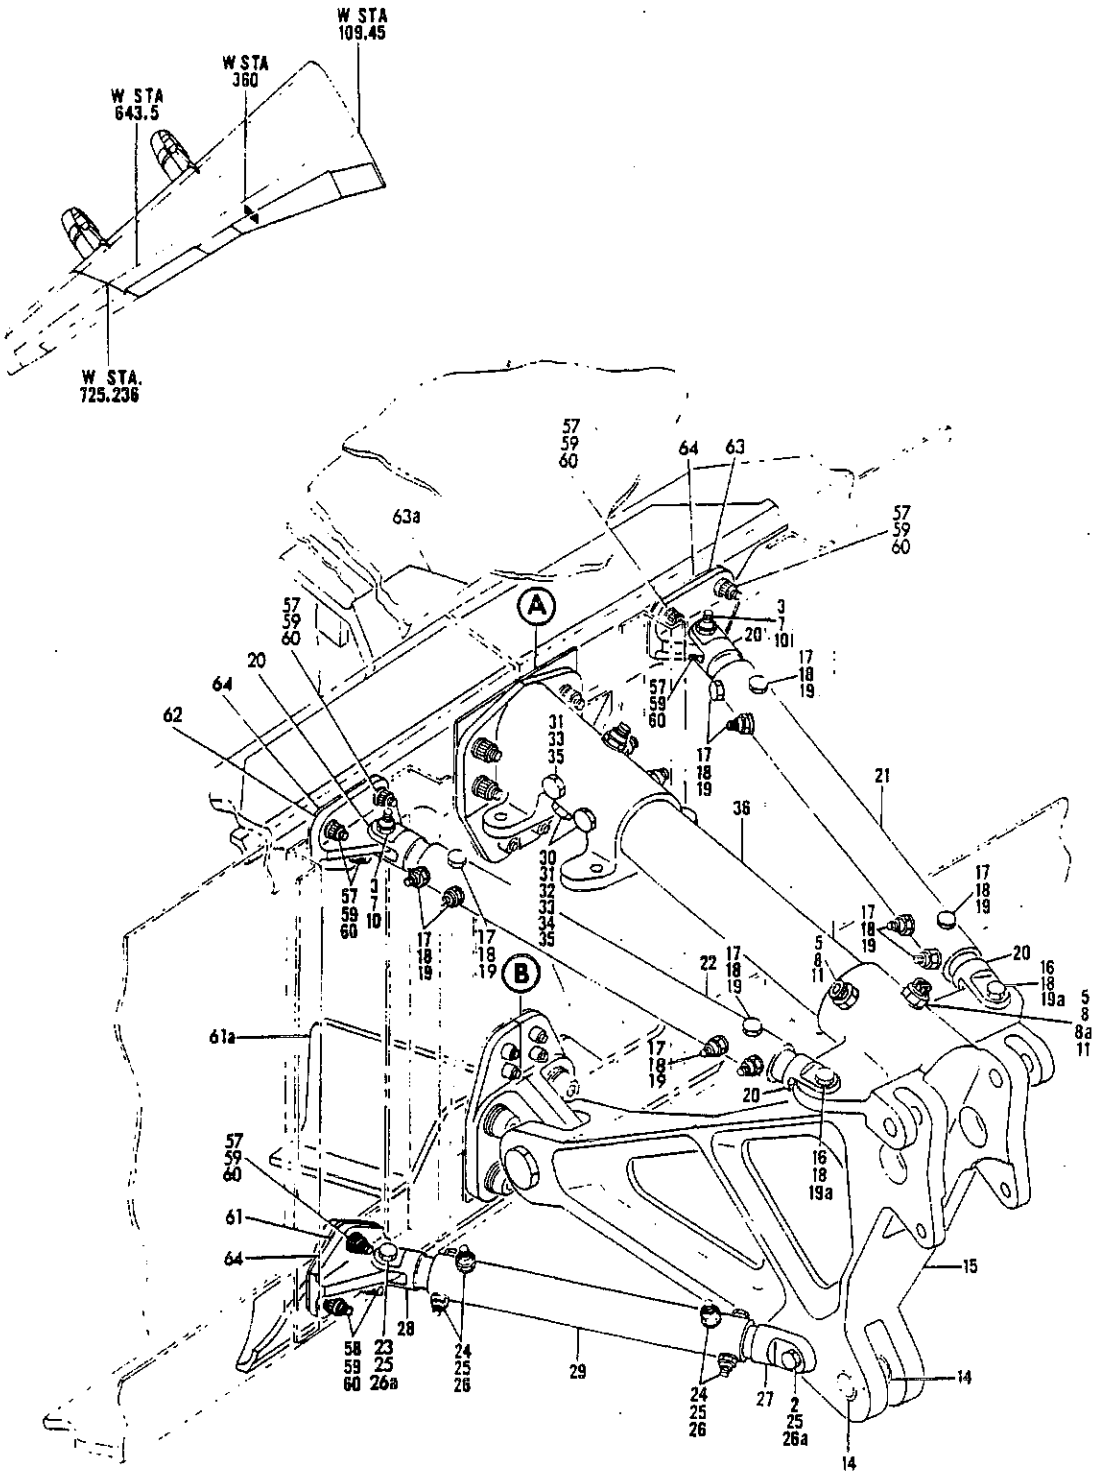


FIGURE 61. STRUCTURE INSTL, FLAP STATION 192.665 (WING STATION 360) FLAP TRACK SUPPORT (SHEET 1)

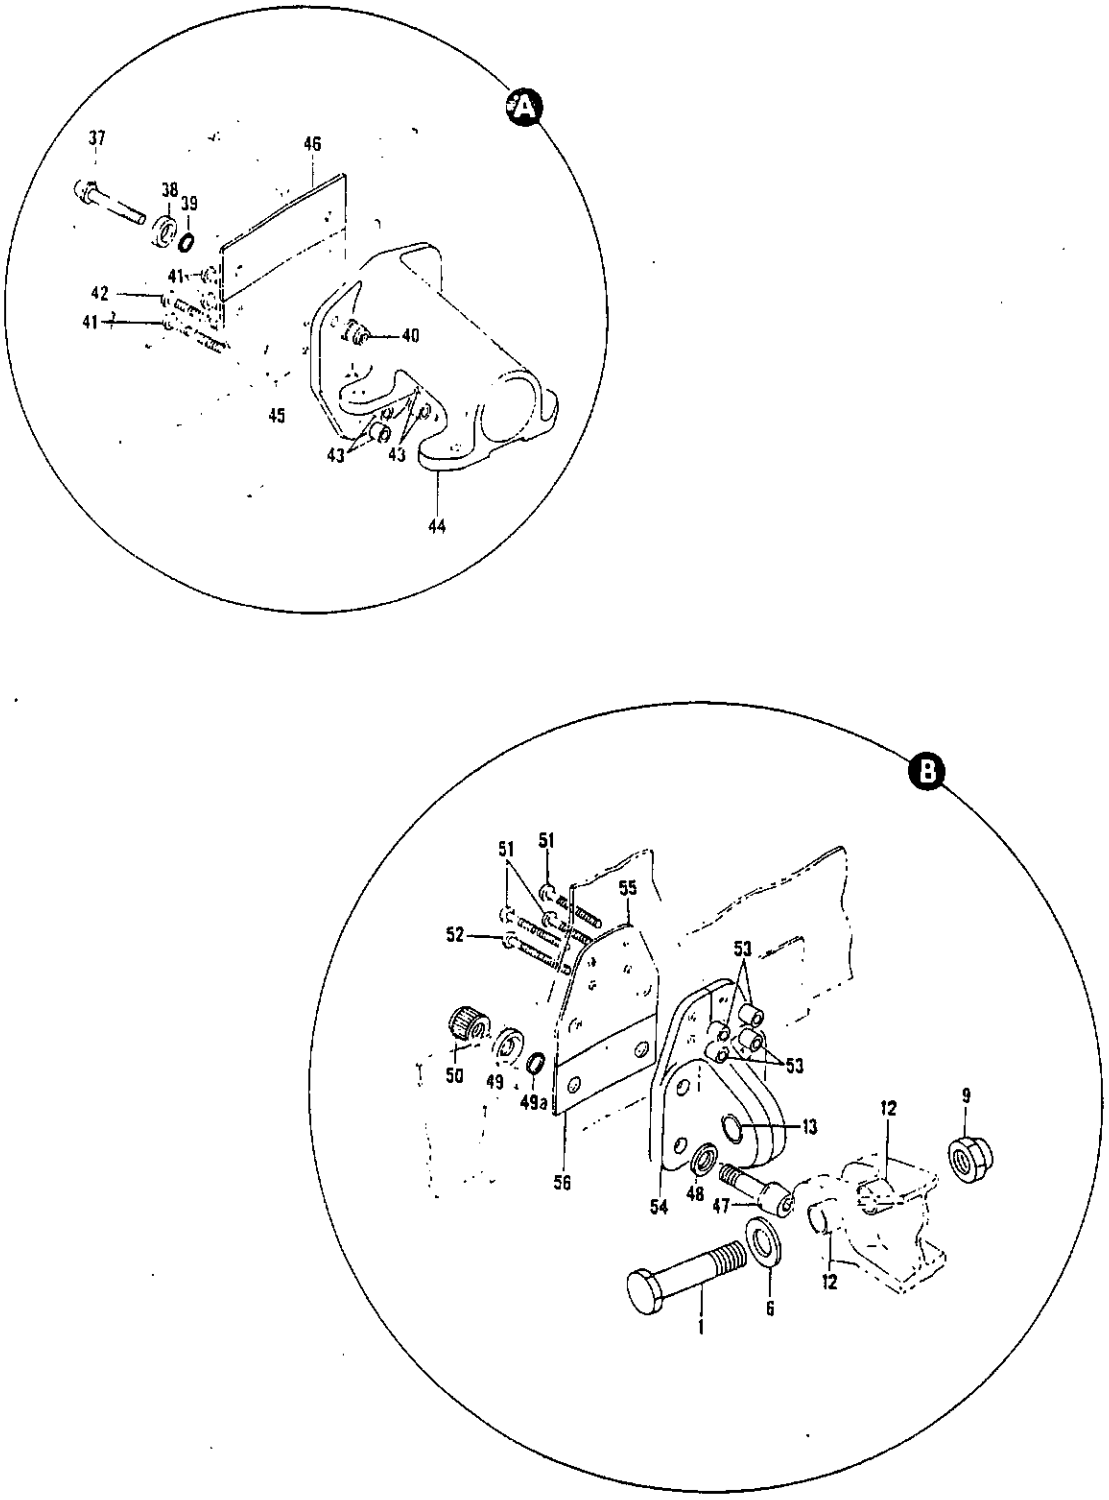

3100-30640A

FIGURE 61. STRUCTURE INSTL, FLAP STATION 192.665 (WING STATION 360) FLAP TRACK SUPPORT (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	61	65-3741-23	STRUCTURE INSTL, FLAP STATION 192.665 (WING STATION 360) FLAP TRACK SUPPORT (LH) (SEE 57-3, FIG. 14, ITEM 1B)		RF
		65-3741-24	STRUCTURE INSTL, FLAP STATION 192.665 (WING STATION 360) FLAP TRACK SUPPORT (RH) (SEE 57-3, FIG. 14, ITEM 1B)		RF
	1	BAC830NF12D38	. BOLT.		1
	2	NAS1104-36W	. BOLT.		1
	3	NAS1105-13W	. BOLT.		2
	5	NAS1108-34D	. BOLT.		2
	6	AN960PD1216	. WASHER.		1
	7	AN960PD516	. WASHER.		2
	8	AN960PD816	. WASHER.		2
	8A	AN960PD816L	. WASHER.		1
	9	AN320C12	. NUT		1
	10	NAS679A5W	. NUT		2
	11	AN320-8	. NUT		2
	12	90-9473-34	. BUSHING, PRESSED FIT STRUCTURAL		2
R	13	90-9473-35	. BUSHING, PRESSED FIT STRUCTURAL	5199	1
R	13	90-9473-35	. BUSHING, PRESSED FIT STRUCTURAL (DELETED BY SB 3413)	0150	1
R	13	90-9473-44	. BUSHING, PRESSED FIT STRUCTURAL (ADDED BY SB 3413).	0150	1
R	14	BACB28W16C58	. BUSHING, (USED WITH 65-2823-5, 65-4061-1, -2) (OPTIONAL BACB28W16C75)	0150	2
R	14	BACB28W16C75	. BUSHING, (USED WITH 65-2823-6, 65-4061-5, -6) (OPTIONAL TO BACB28W16C58)	0150	2
R	14	BACB28W16C75	. BUSHING (OPTIONAL TO BACB28W16C58)	5199	2
R	14	BACB28W16C58	. BUSHING (OPTIONAL BACB28W16C75)	5199	2
R	15	65-2823-5	. FITTING, DRIVE SHAFT (USED WITH BACB28W16C58, 65-4061-1, -2) (OPTIONAL 65-2823-6)	0150	1
R	15	65-2823-6	. FITTING, DRIVE SHAFT (USED WITH BACB28W16C75, 65-4061-5, -6) (OPTIONAL TO 65-2823-5)	0150	1
R	15	65-2823-6	. FITTING, SUPPORT. (OPTIONAL TO 65-2823-5)	5199	1
R	15	65-2823-5	. FITTING, SUPPORT. (OPTIONAL 65-2823-6)	5199	1
	16	NAS1105-13W	. BOLT.		2
	17	NAS1105-23D	. BOLT.		12
	18	AN960PD516	. WASHER.		14
	19	AN320-5	. NUT		12
	19A	NAS679A5W	. NUT		2
	20	66-11843-1	. FITTING, SIDE BRACE TUBE ATTACHMENT		4
	21	69-13396-3	. TUBE, FLAP TRACK SIDE BRACE		1
	22	69-13396-4	. TUBE, FLAP TRACK SIDE BRACE		1
	23	NAS1104-13W	. BOLT.		1
	24	NAS1104-18D	. BOLT.		4
	25	AN960PD416	. WASHER.		6
	26	AN320-4	. NUT		4
	26A	NAS679A4W	. NUT		2
	27	66-3248-1	. FITTING, FLAP STATION 192.665 SIDE BRACE TUBE ATTACH		1
	28	66-3530-1	. FITTING, SIDE BRACE TUBE ATTACHMENT		1
	29	69-3323-6	. TUBE, FLAP TRACK SIDE BRACE		1
	30	NAS1108-34D	. BOLT, (USED WITH 65-4060-9 AND 65-4060-10).		2
	32	AN960PD816	. WASHER, (USED WITH 65-4060-9 AND 65-4060-10).		2
	34	AN320-8	. NUT, (USED WITH 65-4060-9 AND 65-4060-10)		2
	36	69-13394-2	. TUBE, FLAP STATION 192.666 FLAP TRACK UPPER SUPPORT		1
	37	MS20005-18	. BOLT.		4
	38	6-72019	. WASHER, TENSION BOLT O-RING SEAL.		4
	39	MS29513-011	. PACKING		4
	40	BACN10B-L5L	. NUT		4
	41	BAC830N6-10	. BOLT.		3
	42	BAC830N6-13	. BOLT.		1
	43	BACC30AC6	. COLLAR.		4
R	44	65-4060-9	. FITTING, FLAP STATION 192.663 FLAP TRACK UPPER SUPPORT (LH ONLY) (OPTIONAL 65-4060-11)	0150	1
R	44	65-4060-10	. FITTING, FLAP STATION 192.663 FLAP TRACK UPPER SUPPORT (RH ONLY) (OPTIONAL 65-4060-12)	0150	1
R	44	65-4060-11	. FITTING, FLAP TRACK UPPER SUPPORT (LH ONLY) (OPTIONAL TO 65-4060-9)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R	61 44	65-4060-11	. FITTING, FLAP TRACK UPPER SUPPORT (LH ONLY)	5199	1
R	44	65-4060-12	. FITTING, FLAP TRACK UPPER SUPPORT (RH ONLY)	0150	1
R			(OPTIONAL TO 65-4060-10)		
R	44	65-4060-12	. FITTING, FLAP TRACK UPPER SUPPORT (RH ONLY)	5199	1
	45	69-5154-3	. FILLER, WING STATION 360 REAR SPAR SPLICE (LH ONLY) .		1
	45	69-5154-4	. FILLER, WING STATION 360 REAR SPAR SPLICE (RH ONLY) .		1
	46	BACS40A28-74	. SHIM.		1
	47	MS20008-20	. BOLT.		4
	48	MS20002C8	. WASHER.		4
	49	6-55097-3	. WASHER, TENSION BOLT O-RING SEAL.		4
	49A	MS29513-112	. PACKING		4
	50	BACN10B-L8L	. NUT		4
	51	BACB30N6-11	. BOLT.		3
	52	BACB30N6-13	. BOLT.		1
	53	BACC30AC6	. COLLAR.		4
R	54	65-4061-1	. FITTING, FLAP STATION 192.663 FLAP TRACK LOWER. . . .	0150	1
R			SUPPORT (LH ONLY) (ALTERED FROM ;65-4061-3,		
R			;65-4061-4)		
R			(OPTIONAL 65-4061-5)		
R	54	65-4061-5	. FITTING, FLAP STATION 192.663 FLAP TRACK LOWER. . . .	0150	1
R			SUPPORT (LH ONLY)		
R			(OPTIONAL TO 65-4061-1)		
R	54	65-4061-2	. FITTING, FLAP STATION 192.663 FLAP TRACK LOWER. . . .	0150	1
R			SUPPORT (RH ONLY) (ALTERED FROM ;65-4061-3,		
R			;65-4061-4)		
R			(OPTIONAL 65-4061-6)		
R	54	65-4061-6	. FITTING, FLAP STATION 192.663 FLAP TRACK LOWER. . . .	0150	1
R			SUPPORT (RH ONLY)		
R			(OPTIONAL TO 65-4061-2)		
R	54	65-4061-5	. FITTING, FLAP TRACK LOWER SUPPORT (LH ONLY)	5199	1
R			(OPTIONAL TO 65-4061-1)		
R	54	65-4061-1	. FITTING, FLAP TRACK LOWER SUPPORT (LH ONLY)	5199	1
R			(OPTIONAL 65-4061-5)		
R	54	65-4061-6	. FITTING, FLAP TRACK LOWER SUPPORT (RH ONLY)	5199	1
R			(OPTIONAL TO 65-4061-2)		
R	54	65-4061-2	. FITTING, FLAP TRACK LOWER SUPPORT (RH ONLY)	5199	1
R			(OPTIONAL 65-4061-6)		
	55	69-5154-1	. FILLER, WING STATION 360 REAR SPAR SPLICE (LH ONLY) .		1
	55	69-5154-2	. FILLER, WING STATION 360 REAR SPAR SPLICE (RH ONLY) .		1
	56	BACS40A30-65	. SHIM.		1
	57	MS20004-12	. BOLT.		7
	58	MS20004-14	. BOLT.		2
	59	AN960PD416	. WASHER.		9
	60	BACN10B-L4L	. NUT		9
	61	65-3741-15	. TEE, FLAP STATION 192.665 (WING STATION 360) FLAP . .		1
			TRACK SUPPORT STRUCTURE EXTRUDED (LH ONLY)		
	61	65-3741-16	. TEE, FLAP STATION 192.665 (WING STATION 360) FLAP . .		1
			TRACK SUPPORT STRUCTURE EXTRUDED (RH ONLY)		
R	61A	65-4125-1	. FITTING, LOWER BACK UP (LH ONLY).	0150	1
R	61A	65-4125-5	. FITTING, LOWER BACK UP (LH ONLY).	5199	1
R	61A	65-4125-2	. FITTING, LOWER BACK UP (RH ONLY).	0150	1
R	61A	65-4125-6	. FITTING, LOWER BACK UP (RH ONLY).	5199	1
	62	65-3741-25	. TEE, FLAP STATION 192.665 (WING STATION 360) FLAP . .		1
			TRACK SUPPORT STRUCTURE EXTRUDED (LH ONLY)		
	62	65-3741-26	. TEE, FLAP STATION 192.665 (WING STATION 360) FLAP . .		1
			TRACK SUPPORT STRUCTURE EXTRUDED (RH ONLY)		
	63	65-3741-27	. TEE, FLAP STATION 192.665 (WING STATION 360) FLAP . .		1
			TRACK SUPPORT STRUCTURE EXTRUDED (LH ONLY)		
	63	65-3741-28	. TEE, FLAP STATION 192.665 (WING STATION 360) FLAP . .		1
			TRACK SUPPORT STRUCTURE EXTRUDED (RH ONLY)		
	63A	65-4126-1	. FITTING, FLAP TRACK UPPER SUPPORT BACK UP (LH ONLY) .	0101	1
R	63A	65-4126-5	. FITTING, UPPER BACK UP (LH ONLY).	0250	1
R	63A	65-4126-7	. FITTING, UPPER BACK UP (LH ONLY).	5199	1
	63A	65-4126-2	. FITTING, FLAP TRACK UPPER SUPPORT BACK UP (RH ONLY) .	0101	1
R	63A	65-4126-6	. FITTING, UPPER BACK UP (RH ONLY).	0250	1
R	63A	65-4126-8	. FITTING, UPPER BACK UP (RH ONLY).	5199	1
	64	BACS40B40-48	. SHIM.		3

MISSING ITEM NUMBERS ARE NOT APPLICABLE

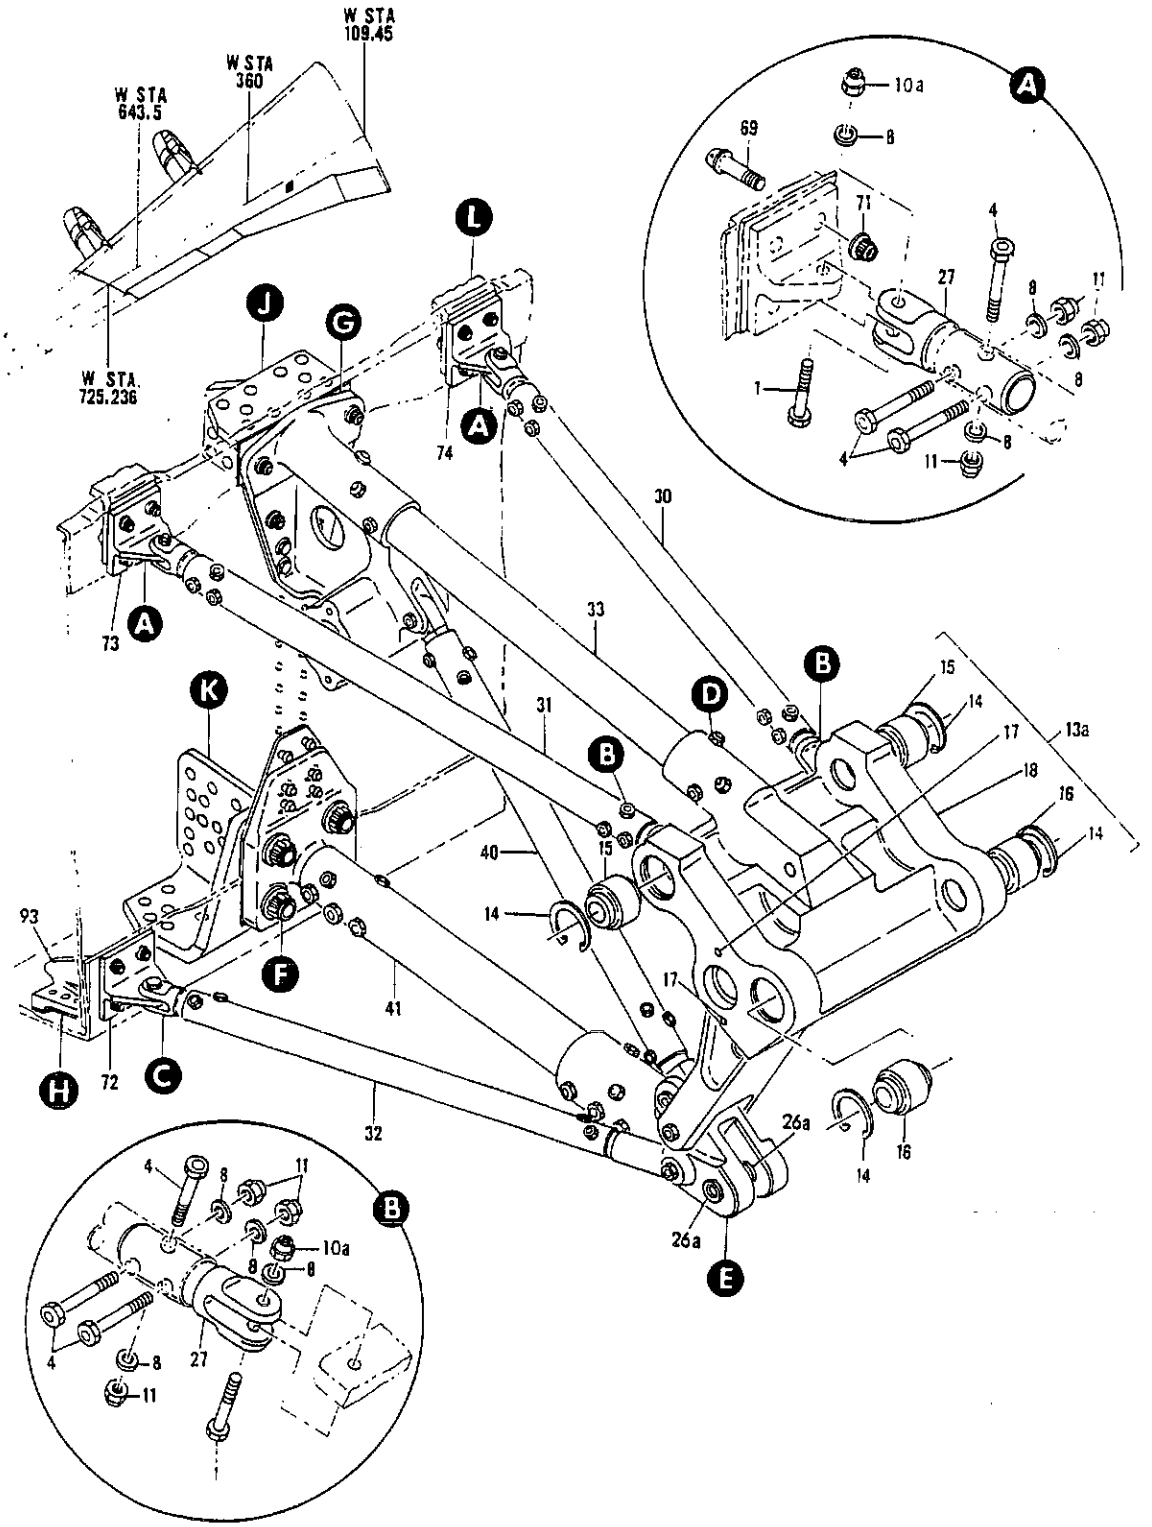


FIGURE 63. STRUCTURE INSTL, FLAP STATION 725.888 (WING STATION 293.143) FLAP TRACK SUPPORT (SHEET 1)

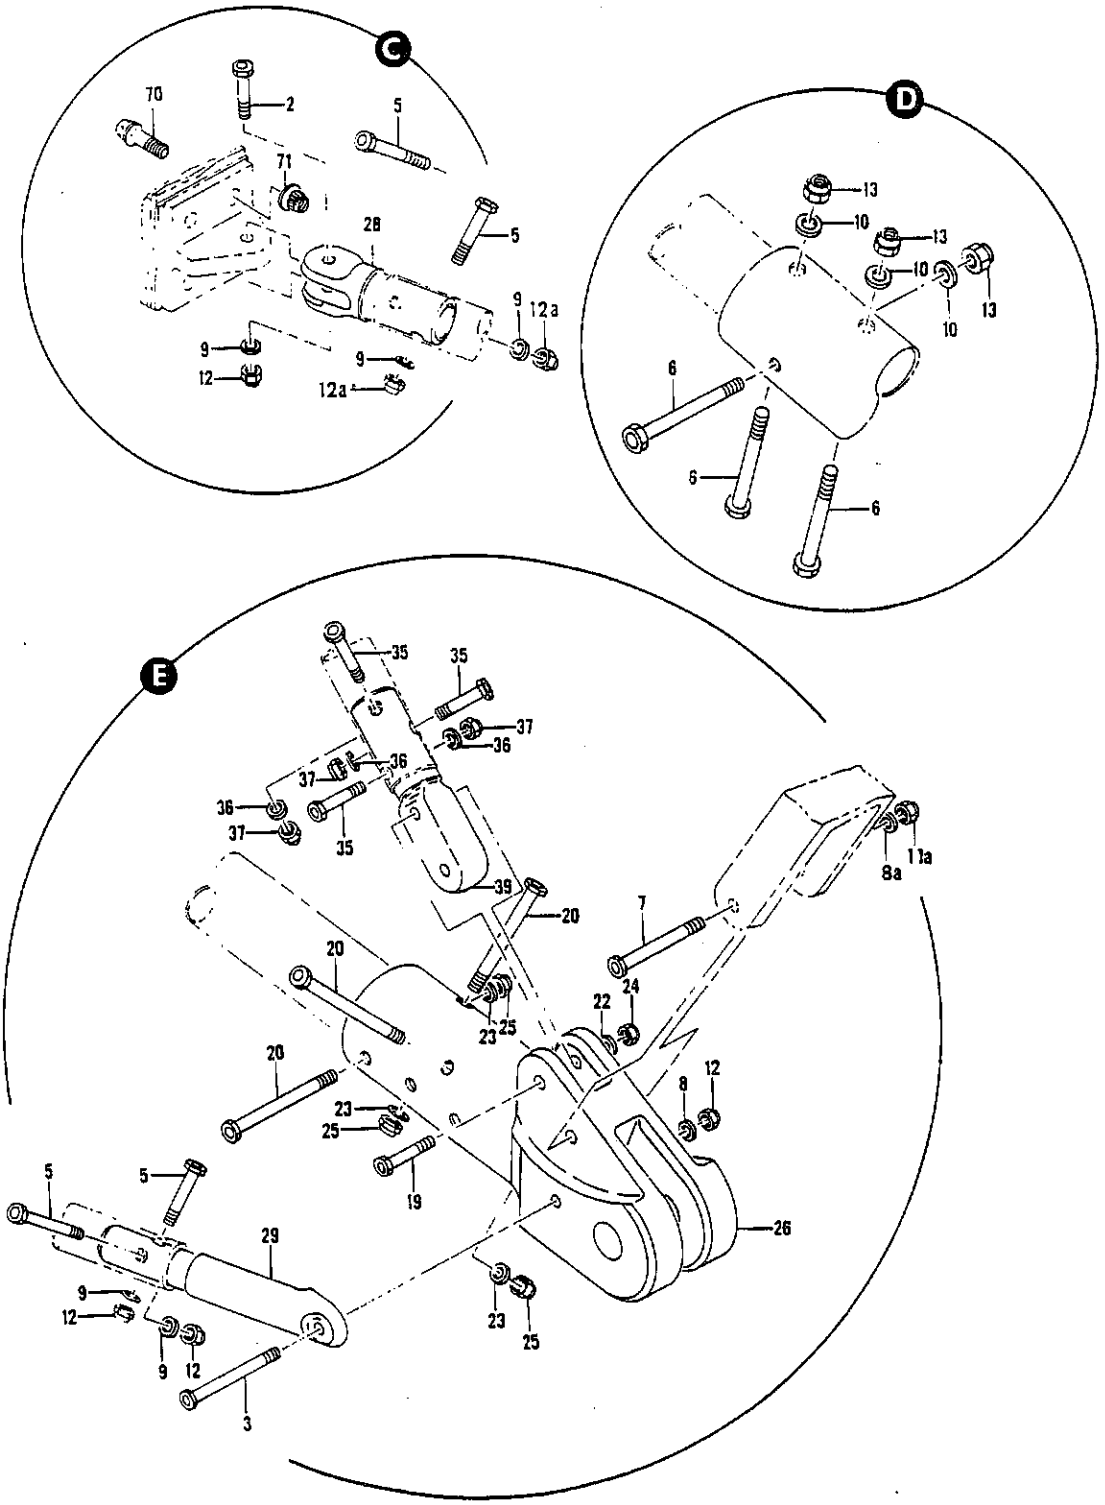


FIGURE 63. STRUCTURE INSTL, FLAP STATION 125.888 (WING STATION 293.143) FLAP TRACK SUPPORT (SHEET 2)

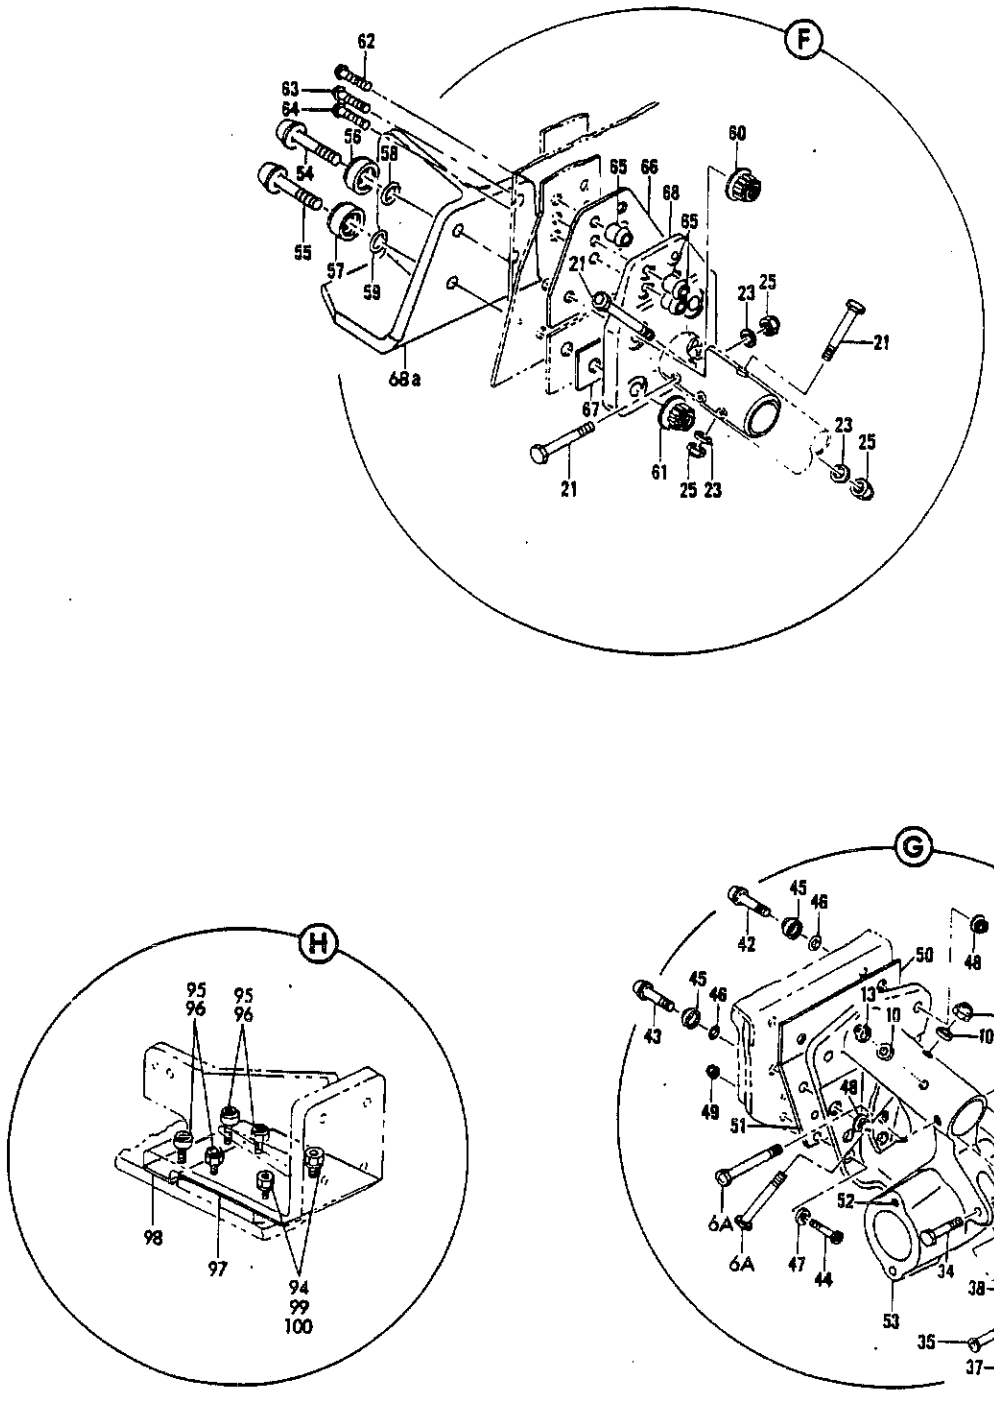


FIGURE 63. STRUCTURE INSTL, FLAP STATION 125.888 (WING STATION 293.143) FLAP TRACK SUPPORT (SHEET 3)

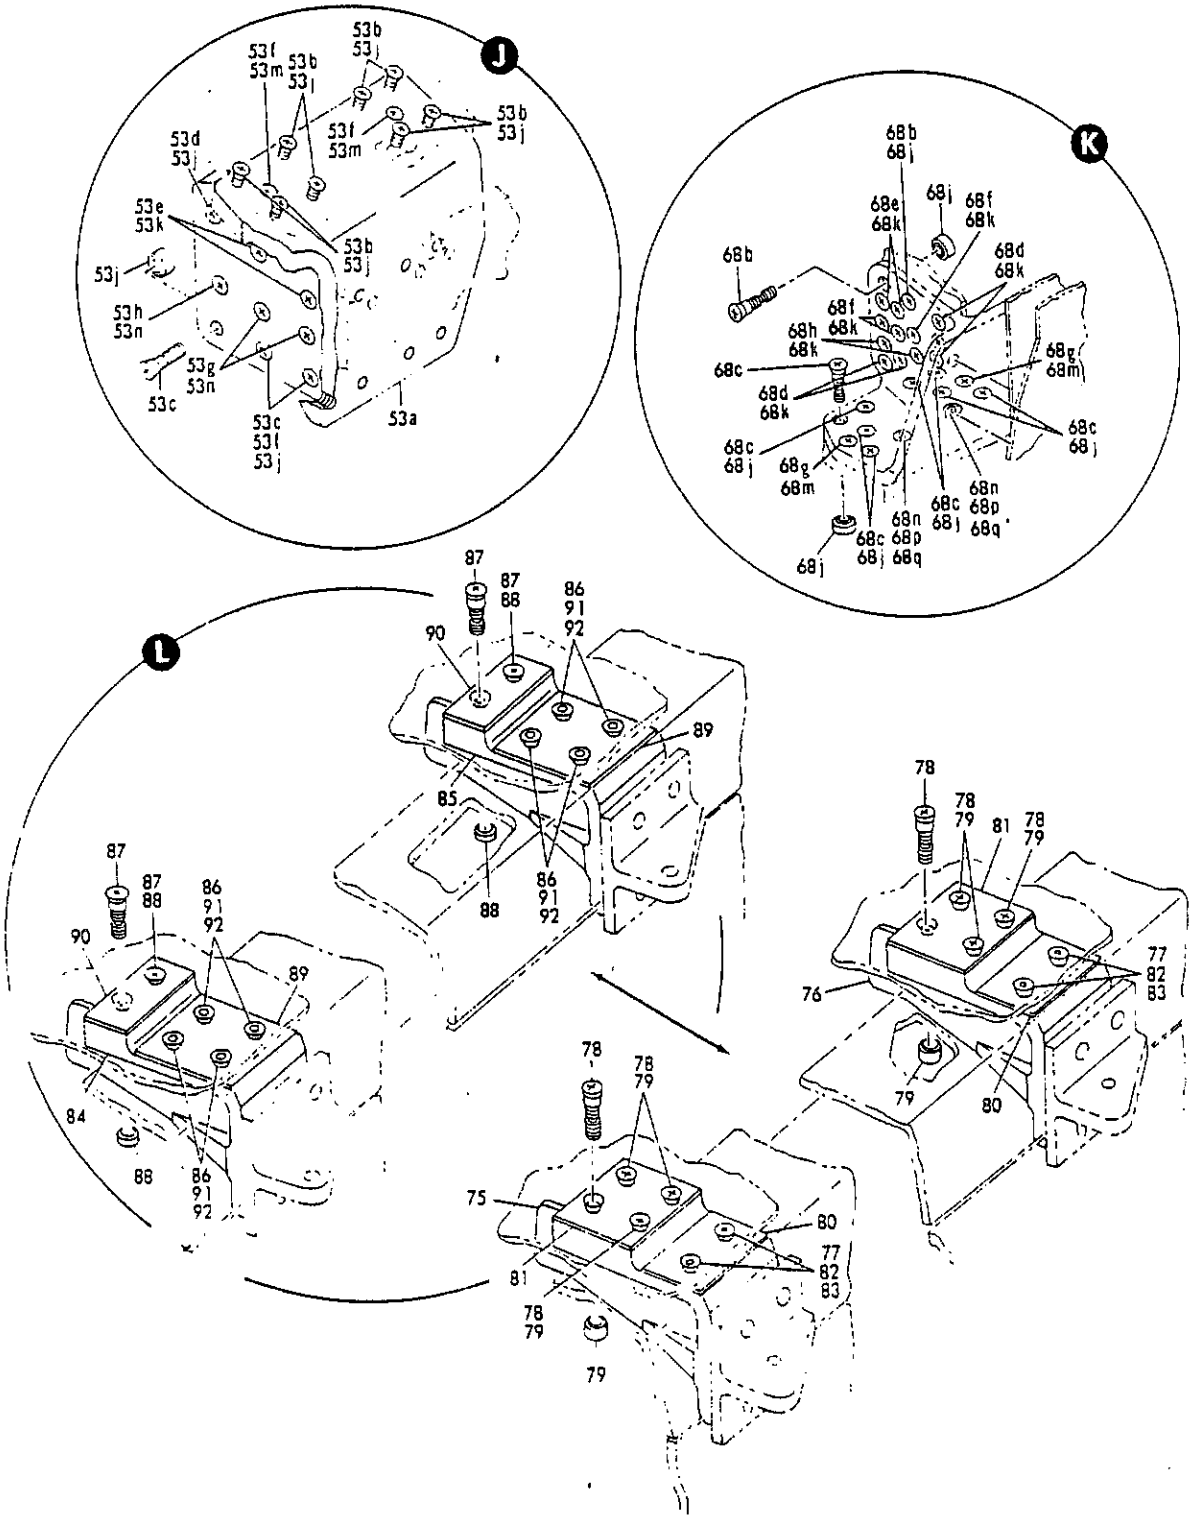


FIGURE 63. STRUCTURE INSTL, FLAP STATION 125.838 (WING STATION 293.143) FLAP TRACK SUPPORT (SHEET 4)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	63	65-3740-19	STRUCTURE INSTL, FLAP STATION 125.888 (WING STATION . . 293.143) FLAP TRACK SUPPORT (LH) (SEE 57-3, FIG. 14, ITEM 1A)		RF
		65-3740-20	STRUCTURE INSTL, FLAP STATION 125.888 (WING STATION . . 293.143) FLAP TRACK SUPPORT (RH) (SEE 57-3, FIG. 14, ITEM 1A)		RF
	1	NAS1105-14W	. BOLT.		4
	2	NAS1104-12W	. BOLT.		1
	3	NAS1104-39	. BOLT.		1
	4	NAS1105-23D	. BOLT.		12
	5	NAS1104-18D	. BOLT.		4
	6	NAS1106-34D	. BOLT.		3
	6A	NAS1106-34D	. BOLT.		3
	7	NAS1106-32	. BOLT, (USED WITH 65-55948-1 AND -2)		1
	7	NAS1107-36	. BOLT, (USED WITH 65-55952-1 AND -2, 65-55130-1 AND. -2)		1
	8	AN960PD516	. WASHER.		17
	8A	AN960PD616	. WASHER, (USED WITH 65-55948-1 AND -2)		1
	8A	AN960PD716	. WASHER, (USED WITH 65-55952-1 AND -2, 65-55130-1 AND -2)		1
	9	AN960PD416	. WASHER.		5
	10	AN960PD616	. WASHER.		6
	10A	NAS679A5	. NUT		4
	11	AN320-5	. NUT		12
	11A	NAS679A6	. NUT, (USED WITH 65-55948-1 AND -2).		1
	11A	NAS679A7	. NUT, (USED WITH 65-55952-1 AND -2, 65-55130-1 AND -2)		1
	12	AN320-4	. NUT		4
	12A	NAS679A4W	. NUT		2
	13	AN320-6	. NUT		6
	13A	65-55130-1	. SUPPORT ASSY, FLAP TRACK AND SPOILER (LH ONLY).		1
	13A	65-55130-2	. SUPPORT ASSY, FLAP TRACK AND SPOILER (RH ONLY).		1
	15	10-60545-36	. . BEARING		2
	16	10-60545-36	. . BEARING		2
	18	65-55130-3	. . FITTING, (LH ONLY).		1
	18	65-55130-4	. . FITTING, (RH ONLY).		1
	19	NAS1104-21	. BOLT.		1
	20	NAS1105-36D	. BOLT.		5
	21	NAS1105-28D	. BOLT.		5
	21	NAS1105-28D	. BOLT, (DELETED BY TWA M.O. 96927)		5
	22	AN960PD416	. WASHER.		1
	23	AN960PD516	. WASHER.		10
	24	NAS679A4W	. NUT		1
	25	AN320-5	. NUT		10
R	26	65-2824-7	. FITTING, LOWER ATTACHMENT (OPTIONAL TO 65-2824-4)	0150	1
R	26	65-2824-4	. FITTING, SUPPORT. (OPTIONAL 65-2824-7)	0150	1
R	26	65-2824-7	. FITTING, LOWER ATTACHMENT	5199	1
	27	66-11843-1	. FITTING, SIDE BRACE TUBE ATTACHMENT		4
	28	66-3530-1	. FITTING, SIDE BRACE TUBE ATTACHMENT		1
	29	66-3531-1	. FITTING, FLAP STATION 125.888 SIDE BRACE TUBE ATTACH		1
	30	69-13396-1	. TUBE, FLAP TRACK SIDE BRACE		1
	31	69-13396-2	. TUBE, FLAP TRACK SIDE BRACE		1
	32	69-3323-3	. TUBE, FLAP TRACK SIDE BRACE		1
	33	69-13394-1	. TUBE, FLAP STATION 125.888 FLAP TRACK UPPER SUPPORT		1
	34	NAS1104-15	. BOLT.		1
	35	NAS1104-20D	. BOLT.		6
	36	AN960PD416	. WASHER.		7
	37	AN320-4	. NUT		6
	37A	NAS679A4W	. NUT		1
	38	69-3268	. FITTING, FLAP STATION 125.888 DIAGONAL TUBE ATTACH.		1
	39	69-3268-5	. FITTING, FLAP STATION 125.888 DIAGONAL TUBE ATTACH.		1
	40	66-3210-1	. TUBE, FLAP STATION 125.888 FLAP TRACK SUPPORT		1
	41	69-3322-1	. TUBE, FLAP STATION 125.888 FLAP TRACK LOWER SUPPORT		1
	42	MS20005-18	. BOLT.		2
	43	MS20005-16	. BOLT.		2
	44	NAS1103-8	. BOLT.		4
	45	6-72019	. WASHER, TENSION BOLT O-RING SEAL.		4
	46	MS29513-011	. PACKING		4
	47	AN960C10L	. WASHER.		4
	48	BACN10GW5	. NUT		4
	49	NAS679A3W	. NUT		4
	50	BACS40A27-83	. SHIM.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	63 51	65-3740-6	. FILLER, FLAP STATION 125.888 (WING STATION 293.143) . FLAP TRACK SUPPORT STRUCTURE		1
R R R		65-2821-1	. SUPPORT ASSY, FLAP STATION 125.884 FLAP TRACK UPPER . (LH ONLY) (OPTIONAL 65-2821-9)	0150	1
R R R		65-2821-2	. SUPPORT ASSY, FLAP STATION 125.884 FLAP TRACK UPPER . (RH ONLY) (OPTIONAL 65-2821-10)	0150	1
R R R		65-2821-9	. SUPPORT ASSY, FLAP STATION 125.884 FLAP TRACK UPPER . (LH ONLY) (OPTIONAL TO 65-2821-1)	0150	1
R		65-2821-9	. SUPPORT ASSY, FLAP TRACK UPPER (LH ONLY).	5199	1
R R		65-2821-10	. SUPPORT ASSY, FLAP TRACK UPPER (RH ONLY). . . . . (OPTIONAL TO 65-2821-2)	0150	1
R		65-2821-10	. SUPPORT ASSY, FLAP TRACK UPPER (RH ONLY).	5199	1
	52	BACS13P4CN3	. . SLEEVE.		1
R R	53	65-2821-3	. . FITTING, FLAP STATION 125.884 FLAP TRACK UPPER. . . SUPPORT (LH ONLY)	0150	1
R R	53	65-2821-4	. . FITTING, FLAP STATION 125.884 FLAP TRACK UPPER. . . SUPPORT (RH ONLY)	0150	1
R	53	65-2821-7	. . FITTING, FLAP TRACK UPPER SUPPORT (LH ONLY) . . .	5199	1
R	53	65-2821-8	. . FITTING, FLAP TRACK UPPER SUPPORT (RH ONLY) . . .	5199	1
	53A	65-4171-1	. FITTING, UPPER BACK-UP (LH ONLY).	0101	1
	53A	65-4171-5	. FITTING, UPPER BACK-UP (LH ONLY).	0202	1
R	53A	65-4171-7	. FITTING, UPPER BACK (LH ONLY)	0350	1
R	53A	65-4171-13	. FITTING, UPPER BACK-UP (LH ONLY).	5199	1
	53A	65-4171-2	. FITTING, UPPER BACK-UP (RH ONLY).	0101	1
	53A	65-4171-6	. FITTING, UPPER BACK-UP (RH ONLY).	0202	1
R	53A	65-4171-8	. FITTING, UPPER BACK (RH ONLY)	0350	1
R	53A	65-4171-14	. FITTING, UPPER BACK-UP (RH ONLY).	5199	1
			ATTACHING PARTS		
	53B	BACB30GY8-13	. BOLT.	0101	8
	53B	BACB30GY8-14	. BOLT.	0299	8
	53C	BACB30GW8-8	. BOLT.		3
	53D	BACB30GW8-11	. BOLT.		1
	53E	BACB30GW6-10	. BOLT.		2
	53F	BACB30GY6-10	. BOLT.	0101	2
	53G	BACB30GW10-11	. BOLT.		2
	53H	BACB30GW10-12	. BOLT.	0101	1
	53H	BACB30GW10	. BOLT.	0299	1
	53J	BACC30K8	. COLLAR.		12
	53K	BACC30K6	. COLLAR.		2
	53M	BACC30K6	. COLLAR.	0101	2
	53N	BACC30K10	. COLLAR.		3
			-------*--------		
	54	MS20008-26	. BOLT.		2
	55	MS20009-26	. BOLT.		2
	56	6-55097-3	. WASHER, TENSION BOLT O-RING SEAL.		2
	57	6-55097-4	. WASHER, TENSION BOLT O-RING SEAL.		2
	58	MS29513-112	. PACKING		2
	59	MS29513-113	. PACKING		2
	60	BACN10GW8	. NUT		2
	61	BACN10GW9	. NUT		2
	62	BACB30GW6-9	. BOLT.		2
	63	BACB30GW6-13	. BOLT.		2
	64	BACB30GW6-14	. BOLT.		2
	65	BACC30K6	. COLLAR.		6
	66	65-3740-24	. FILLER, FLAP STATION 125.888 (WING STATION 293.143) . FLAP TRACK SUPPORT STRUCTURE		1
	67	BACS40A25-68	. SHIM.		1
R R R	68	65-2822-5	. FITTING, FLAP STATION 125.884 FLAP TRACK LOWER. . . . SUPPORT (LH ONLY) (OPTIONAL 65-2822-7)	0150	1
R R	68	65-2822-7	. FITTING, FLAP TRACK LOWER SUPPORT (LH ONLY) . . . . . (OPTIONAL TO 65-2822-5)	0150	1
R	68	65-2822-7	. FITTING, FLAP TRACK LOWER SUPPORT (LH ONLY)	5199	1
R R R	68	65-2822-6	. FITTING, FLAP STATION 125.884 FLAP TRACK LOWER. . . . SUPPORT (RH ONLY) (OPTIONAL 65-2822-8)	0150	1
R R	68	65-2822-8	. FITTING, FLAP TRACK LOWER SUPPORT (RH ONLY) . . . . . (OPTIONAL TO 65-2822-6)	0150	1
R R	68	65-2822-8	. FITTING, FLAP STATION 125.884 TRACK LOWER SUPPORT . . (RH ONLY)	5199	1
R	68A	65-4170-5	. FITTING, WING STATION 293.143 LOWER BACK UP (LH ONLY)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	63 68A	65-4170-13	. FITTING, WING STATION 293.143 LOWER BACK-UP (LH ONLY)	5199	1
R	68A	65-4170-6	. FITTING, WING STATION 293.143 LOWER BACK UP (RH ONLY)	0150	1
R	68A	65-4170-14	. FITTING, WING STATION 293.143 LOWER BACK-UP (RH ONLY)	5199	1
			ATTACHING PARTS		
	68B	BACB30GW10-8	. BOLT.		2
	68C	BACB30GY10-12	. BOLT.		8
	68D	BACB30GW8-7	. BOLT.		5
	68E	BACB30GW8-8	. BOLT.		2
	68F	BACB30GW8-11	. BOLT.		3
	68G	BACB30GY6-8	. BOLT.		2
	68H	BACB30GY8-7	. BOLT.		2
	68J	BACC30K10	. COLLAR.		10
	68K	BACC30K8	. COLLAR.		12
	68M	BACC30K6	. COLLAR.		2
	68N	BACB30LU5-12	. BOLT.		2
	68P	AN960PD516	. WASHER.		2
	68Q	NAS679A5	. NUT		2
			-------*--------		
	69	MS20004-12	. BOLT.		8
	70	MS20004-10	. BOLT.		4
	71	BACN10GW4	. NUT		12
	72	65-3740-9	. TEE, FLAP STATION 125.888 (WING STATION 293.143) FLAP TRACK SUPPORT STRUCTURE EXTRUDED (LH ONLY)		1
	72	65-3740-10	. TEE, FLAP STATION 125.888 (WING STATION 293.143) FLAP TRACK SUPPORT STRUCTURE EXTRUDED (RH ONLY)		1
	73	65-3740-25	. TEE, FLAP STATION 125.888 (WING STATION 293.143) FLAP TRACK SUPPORT STRUCTURE EXTRUDED (LH ONLY)		1
	73	65-3740-26	. TEE, FLAP STATION 125.888 (WING STATION 293.143) FLAP TRACK SUPPORT STRUCTURE EXTRUDED (RH ONLY)		1
	74	65-3740-27	. TEE, FLAP STATION 125.888 (WING STATION 293.143) FLAP TRACK SUPPORT STRUCTURE EXTRUDED (LH ONLY)		1
	74	65-3740-28	. TEE, FLAP STATION 125.888 (WING STATION 293.143) FLAP TRACK SUPPORT STRUCTURE EXTRUDED (RH ONLY)		1
	75	69-3803	. SUPPORT, SIDE BRACE BACK-UP	0101	1
	76	69-3803-3	. SUPPORT, SIDE BRACE BACK-UP	0101	1
			ATTACHING PARTS		
	77	BACB30ABP4-11A	. BOLT.	0101	4
	78	BACB30GY8-12	. BOLT.	0101	8
	79	BACC30K8	. COLLAR.	0101	8
	80	65-3740-18	. SHIM.	0101	AR
	81	BACS40A34-34	. SHIM.	0101	AR
	82	AN960PD416	. WASHER.	0101	4
	83	NAS679A4W	. NUT	0101	4
			-------*-------		
R	84	69-3803-6	. SUPPORT, SIDE BRACE BACK-UP	0250	1
R	84	69-3803-12	. SUPPORT, SIDE BRACE BACK-UP	5199	1
R	85	69-3803-5	. SUPPORT, SIDE BRACE BACK-UP	0250	1
R	85	69-3803-11	. SUPPORT, SIDE BRACE BACK-UP	5199	1
			ATTACHING PARTS		
	86	BACB30LQ4-11	. BOLT.	0299	8
	87	BACB30GY8-12	. BOLT.	0299	4
	88	BACC30K8	. COLLAR.	0299	4
	89	BACS40R20B26	. SHIM.	0299	AR
	90	BACS40R20B21	. SHIM.	0299	AR
	91	AN960PD416	. WASHER.	0299	8
	92	NAS679A4W	. NUT	0299	8
			-------*-------		
R	93	69-3803-1	. SUPPORT, SIDE BRACE BACK-UP	0150	1
R	93	69-3803-13	. SUPPORT, SIDE BRACE BACK-UP	5199	1
			ATTACHING PARTS		
	94	BACB30ABP4-11A	. BOLT.		2
	95	BACB30GY8-11	. BOLT.		4
	96	BACC30K8	. COLLAR.		4
	97	65-3740-17	. SHIM.		AR
	98	BACS40A13-34	. SHIM.		AR
	99	AN960PD416	. WASHER.		2
	100	NAS679A4W	. NUT		2
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

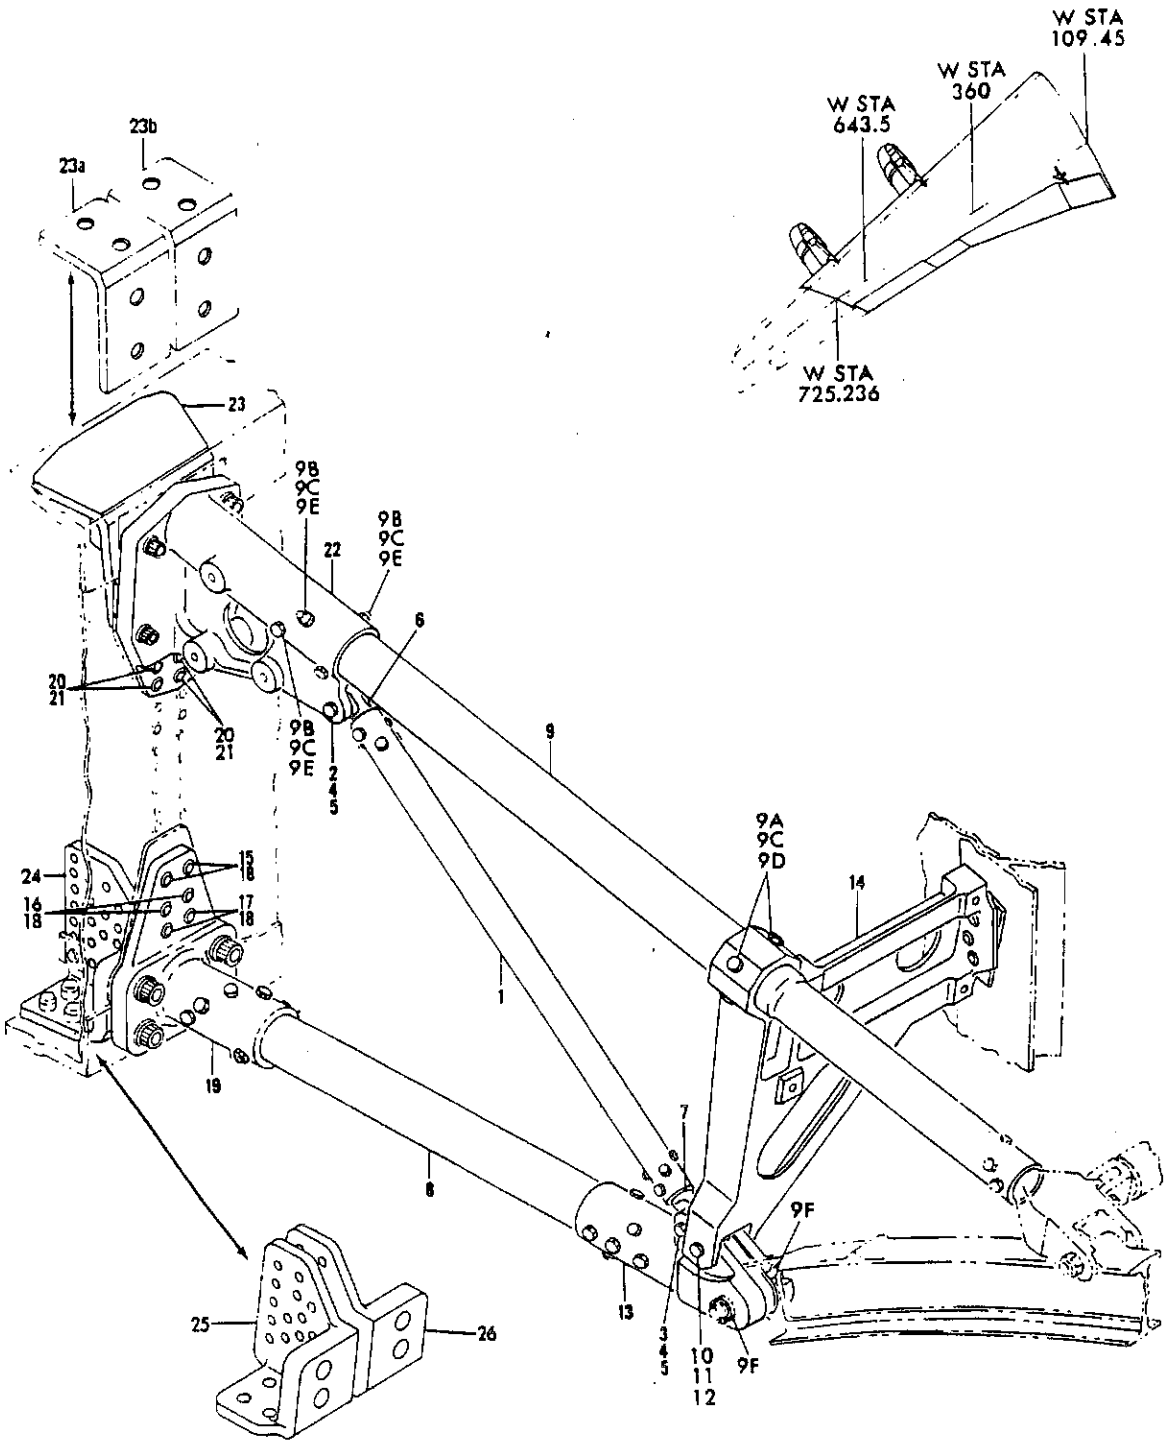


FIGURE 65. STRUCTURE INSTL, FLAP STATION 47.307 (WING STATION 214.468) FLAP TRACK SUPPORT

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	65	65-3739-5	STRUCTURE INSTL, FLAP STATION 47.307 (WING STATION. . . 214.468) FLAP TRACK SUPPORT (LH) (SEE 57-3, FIG. 14, ITEM 1)		RF
		65-3739-6	STRUCTURE INSTL, FLAP STATION 47.307 (WING STATION. . . 214.468) FLAP TRACK SUPPORT (RH) (SEE 57-3, FIG. 14, ITEM 1)		RF
	1	66-3210	. TUBE, FLAP STATION 47.307 FLAP TRACK SUPPORT.		1
			ATTACHING PARTS		
		NAS1104-20D	. BOLT.		6
		AN960PD416	. WASHER.		6
		AN320-4	. NUT		6
			-------*-------		
	2	NAS1104-23	. BOLT.		1
	3	NAS1104-25	. BOLT.		1
	4	AN960PD416	. WASHER.		2
	5	NAS679A4W	. NUT		2
	6	69-3268	. FITTING, FLAP STATION 47.307 DIAGONAL TUBE ATTACH . .		1
	7	69-3268-5	. FITTING, FLAP STATION 47.307 DIAGONAL TUBE ATTACH . .		1
	8	69-3322-2	. TUBE, FLAP STATION 47.307 FLAP TRACK SUPPORT LOWER. .		1
			ATTACHING PARTS		
		BACB30NF6D36	. BOLT.		10
		AN960PD616	. WASHER.		10
		AN320-6	. NUT		10
			-------*-------		
	9	69-14489-1	. TUBE, FLAP STATION 47.307 FLAP TRACK SUPPORT UPPER. .		1
			ATTACHING PARTS		
	9A	BACB30NF6D34	. BOLT.		2
		BACB30NF6D36	. BOLT.		3
	9C	AN960PD616	. WASHER.		5
	9D	AN320-6	. NUT		2
			-------*-------		
	10	NAS1105-34	. BOLT.		1
	11	AN960PD516	. WASHER.		1
	12	NAS679A5	. NUT		1
R	13	65-18604-2	. FITTING, ATTACHMENT LOWER	0150	1
R			(OPTIONAL 65-18604-5)		
R	13	65-18604-5	. FITTING, ATTACHMENT LOWER	0150	1
R			(OPTIONAL TO 65-18604-2)		
R	13	65-18604-5	. FITTING, ATTACHMENT LOWER	5199	1
R	14	65-20697-3	. FITTING, DRIVE SCREW (LH ONLY).	0150	1
R			(OPTIONAL 65-20697-5)		
R	14	65-20697-5	. FITTING, DRIVE SCREW (LH ONLY).	0150	1
R			(OPTIONAL TO 65-20697-3)		
R	14	65-20697-4	. FITTING, DRIVE SCREW (RH ONLY).	0150	1
R			(OPTIONAL 65-20697-6)		
R	14	65-20697-6	. FITTING, DRIVE SCREW (RH ONLY).	0150	1
R			(OPTIONAL TO 65-20697-4)		
R	14	65-20697-5	. FITTING, DRIVE SCREW (LH ONLY).	5199	1
R	14	65-20697-6	. FITTING, DRIVE SCREW (RH ONLY).	5199	1
			ATTACHING PARTS		
		BACB30N10-15	. BOLT.		3
		BACS40B32-58	. SHIM.		AR
		65-3739-8	. FILLER, FLAP STATION 47.307 FLAP TRACK SUPPORT. . .		AR
			STRUCTURE (OPTIONAL)		
		65-3739-9	. FILLER, FLAP STATION 47.307 FLAP TRACK SUPPORT. . .		AR
			STRUCTURE (OPTIONAL)		
		65-3739-10	. FILLER, FLAP STATION 47.307 FLAP TRACK SUPPORT. . .		AR
			STRUCTURE (OPTIONAL)		
		BACC30AC10	. COLLAR.		3
			-------*-------		
	15	BACB30N8-16	. BOLT.		2
	16	BACB30N8-18	. BOLT.		2
	17	BACB30N8-19	. BOLT.		2
	18	BACC30K8	. COLLAR.		6
R	19	65-18274-1	. FITTING, LOWER (LH ONLY).	0150	1
R	19	65-18274-5	. FITTING, LOWER (LH ONLY).	5199	1
R	19	65-18274-2	. FITTING, LOWER (RH ONLY).	0150	1
R	19	65-18274-6	. FITTING, LOWER (RH ONLY).	5199	1
			ATTACHING PARTS		
		BACB30NE9-38	. BOLT.		2
		BACB30NE10-38	. BOLT.		2
		6-55097-4	. WASHER, TENSION BOLT O-RING SEAL.		2
		6-55097-5	. WASHER, TENSION BOLT O-RING SEAL.		2
		MS29513-113	. PACKING		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	65	MS29513-114	. PACKING		2
		BACS40A31-87	. SHIM.		AR
		BACN10B9L	. NUT		2
		BACN10B10L	. NUT		2
			-------*-------		
	20	BACB30N8-11	. BOLT.		4
	21	BACC30K8	. COLLAR.		4
	22	65-2819-5	. FITTING, FLAP STATION 47.306 FLAP TRACK SUPPORT LOWER (LH ONLY)	0101	1
R	22	65-2819-7	. FITTING, FLAP STATION 47.306 LOWER (LH ONLY).	0250	1
R R	22	65-2819-7	. FITTING, FLAP STATION 47.306 LOWER (LH ONLY). (OPTIONAL 65-2819-9)	0250	1
R R	22	65-2819-9	. FITTING, FLAP STATION 47.306 LOWER (LH ONLY). (OPTIONAL TO 65-2819-7)	0250	1
R	22	65-2819-9	. FITTING, FLAP LOWER (LH ONLY)	5199	1
	22	65-2819-6	. FITTING, FLAP STATION 47.306 FLAP TRACK SUPPORT LOWER (RH ONLY)	0101	1
R	22	65-2819-8	. FITTING, FLAP STATION 47.306 LOWER (RH ONLY).	0250	1
R R	22	65-2819-8	. FITTING, FLAP STATION 47.306 LOWER (RH ONLY). (OPTIONAL 65-2819-10)	0250	1
R R	22	65-2819-10	. FITTING, FLAP LOWER (RH ONLY) (OPTIONAL TO 65-2819-8)	0250	1
R	22	65-2819-10	. FITTING, FLAP LOWER (RH ONLY)	5199	1
			ATTACHING PARTS		
		MS20005-20	. BOLT.		2
		MS20006-20	. BOLT.		2
		6-72019	. WASHER, TENSION BOLT O-RING SEAL.		2
		6-55097-1	. WASHER, TENSION BOLT O-RING SEAL.		2
		MS29513-011	. PACKING		2
		MS29513-110	. PACKING		2
		BACS40A42-80	. SHIM.		AR
		BACN10B-L5L	. NUT		2
		BACN10B-L6L	. NUT		2
			-------*-------		
	23	65-19155-3	. FITTING, WING STATION 214.474 UPPER FLAP TRACK BACK UP (LH ONLY)	0101	1
	23	65-19155-4	. FITTING, WING STATION 214.474 UPPER FLAP TRACK BACK UP (RH ONLY)	0101	1
R	23A	65-60349-1	. FITTING, UPPER BACK UP (LH ONLY).	0250	1
R	23A	65-60349-7	. FITTING, UPPER BACK UP (LH ONLY).	5199	1
R	23A	65-60349-2	. *FITTING, UPPER BACK UP (RH ONLY).*	*0250*	*1*
R	23A	65-60349-8	. FITTING, UPPER BACK UP (RH ONLY).	5199	1
R	23B	65-60349-4	. FITTING, UPPER BACK UP (LH ONLY).	0250	1
R	23B	65-60349-10	. FITTING, UPPER BACK UP (LH ONLY).	5199	1
R	23B	65-60349-3	. FITTING, UPPER BACK UP (RH ONLY).	0250	1
R	23B	65-60349-9	. FITTING, UPPER BACK UP (RH ONLY).	5199	1
R	24	65-19138-1	. FITTING, STATION 47.307 (LH ONLY)	0150	1
R	24	65-19138-2	. FITTING, STATION 47.307 (RH ONLY)	0150	1
R	25	65-64308-9	. FITTING, LOWER BACK UP (LH ONLY).	5199	1
R	25	65-64308-10	. FITTING, LOWER BACK UP (RH ONLY).	5199	1
R	26	65-64308-7	. *FITTING, LOWER BACK UP (LH ONLY).*	5199	*1*
R	26	65-64308-8	. FITTING, LOWER BACK UP (RH ONLY).	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

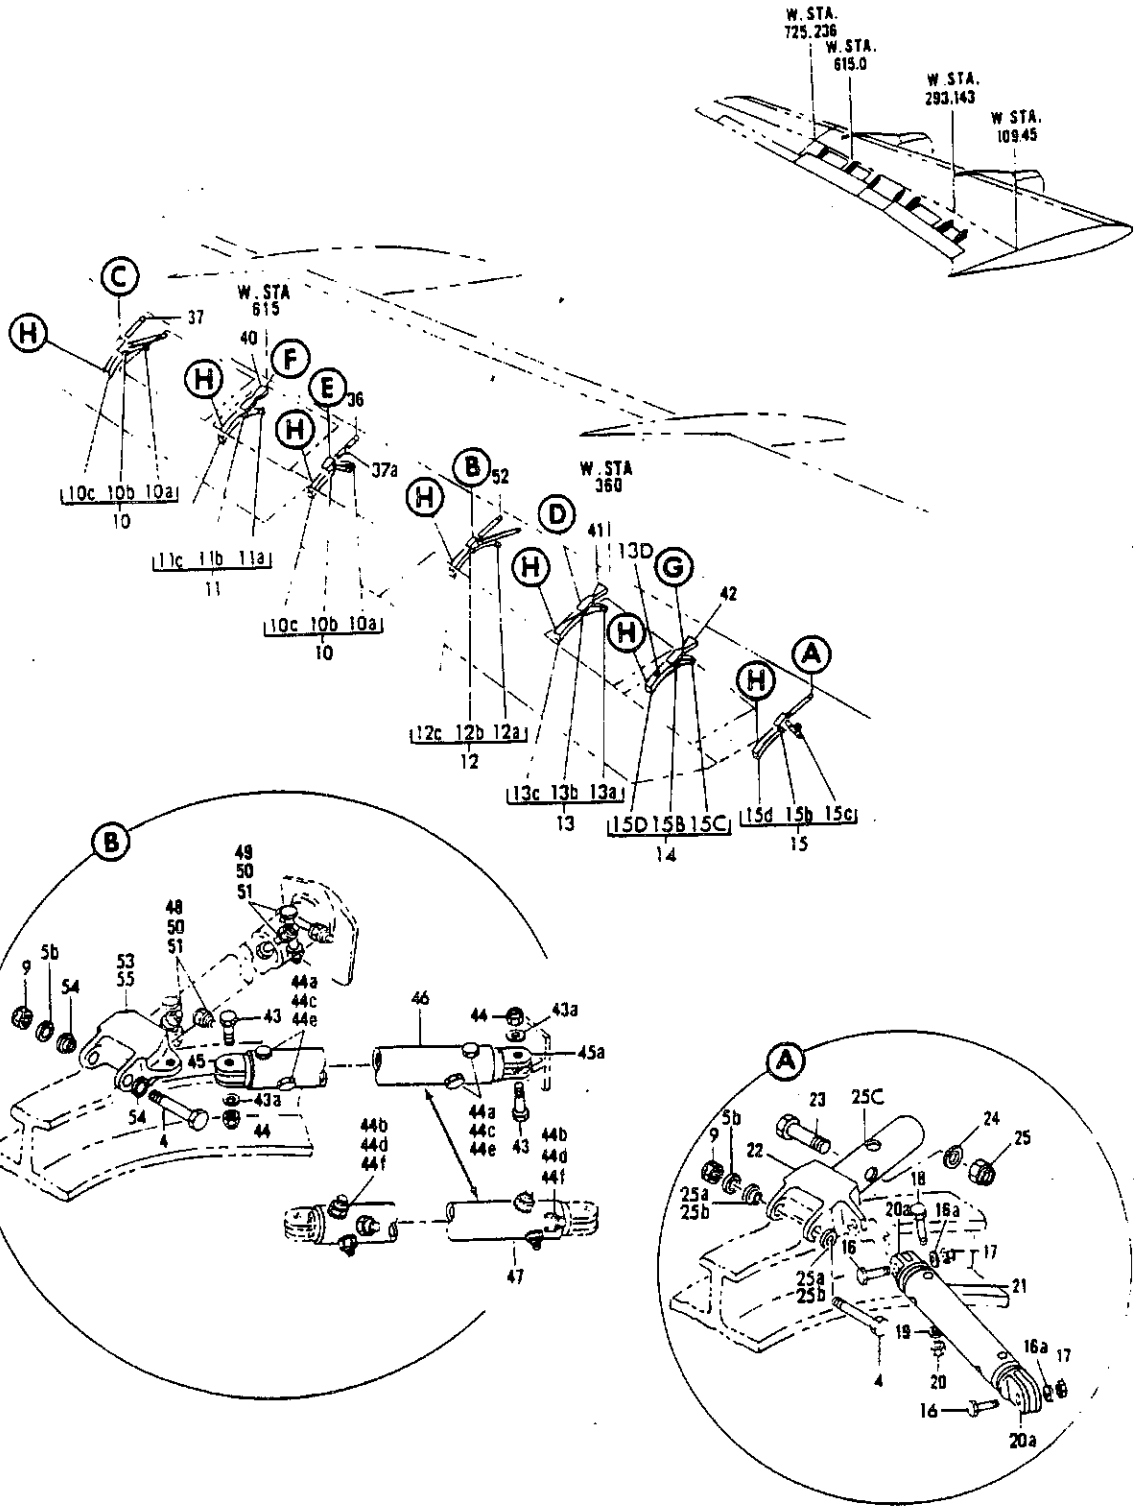


FIGURE 66. FLAP TRACK INSTALLATIONS (SHEET 1)

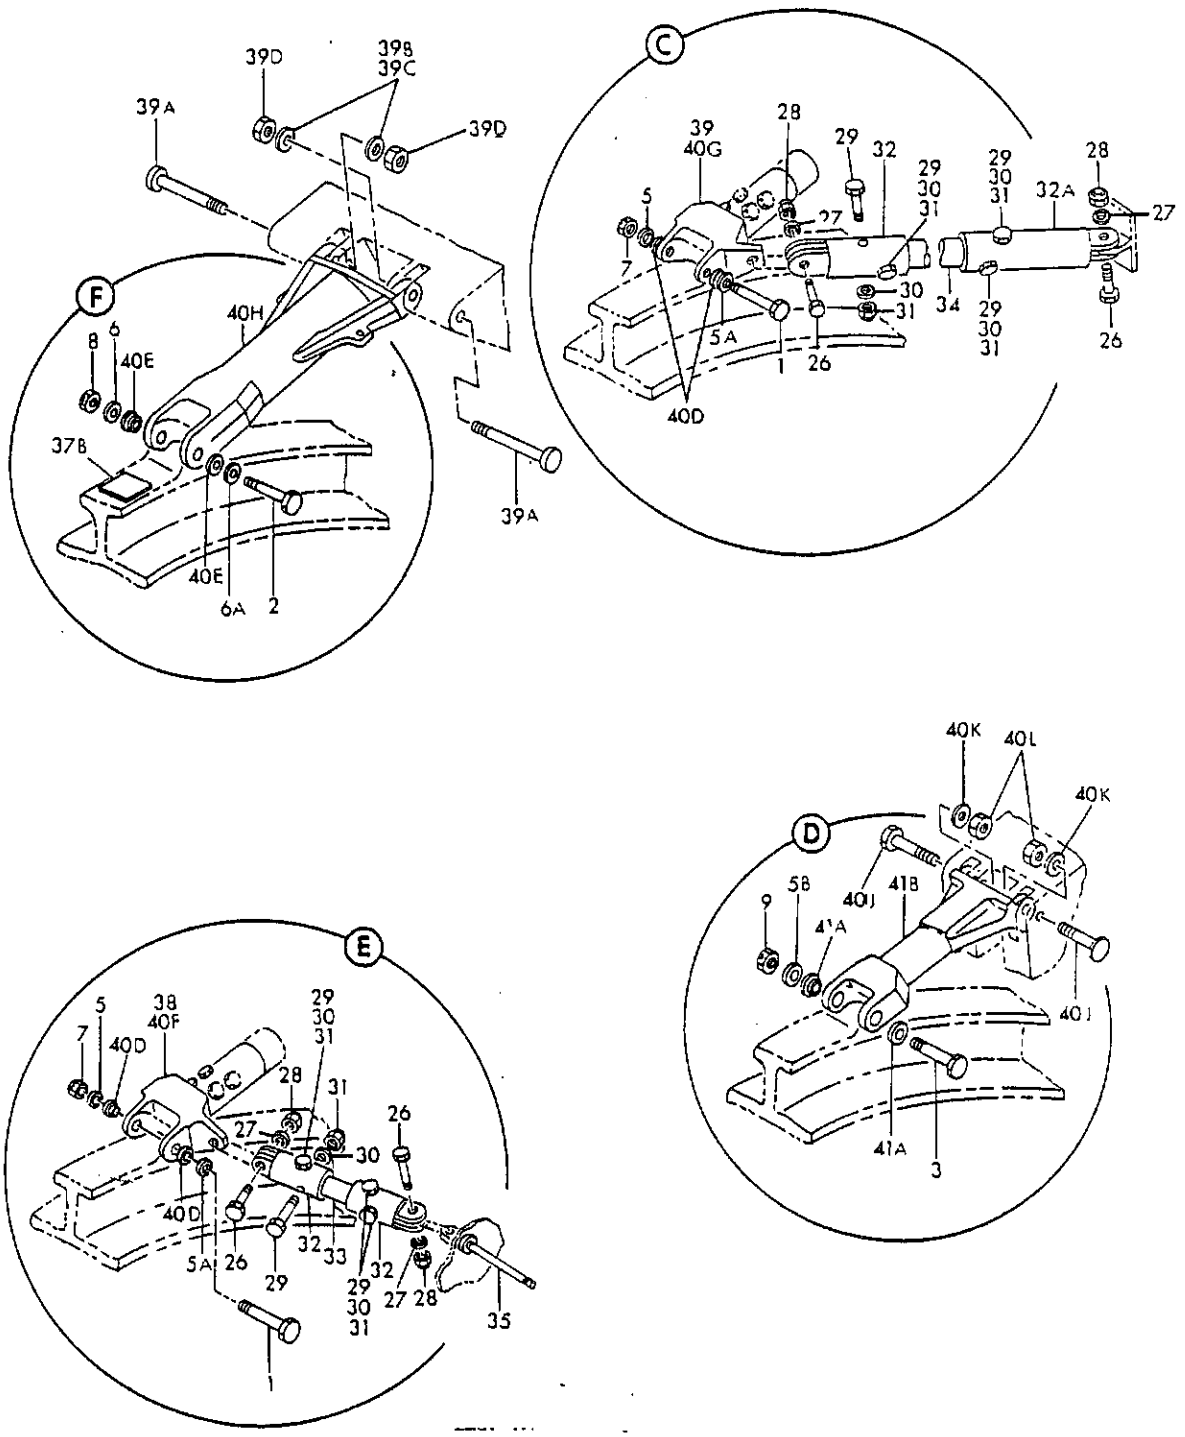
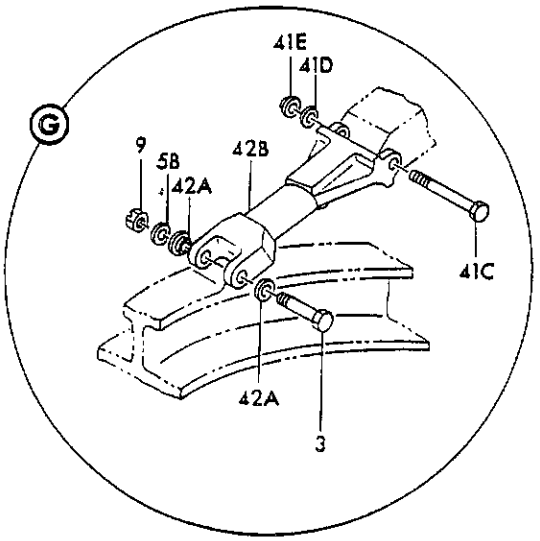


FIGURE 66. FLAP TRACK INSTALLATIONS (SHEET 2)



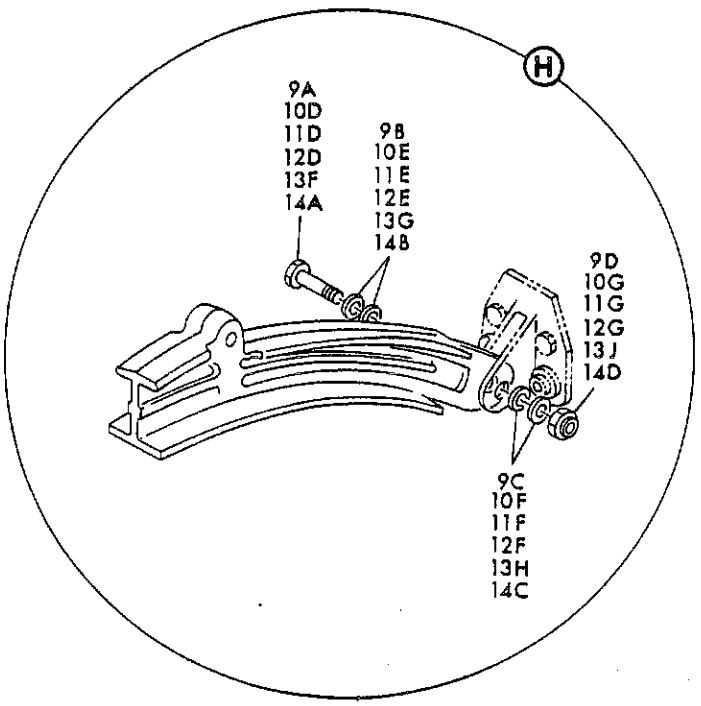


FIGURE 66. FLAP TRACK INSTALLATIONS (SHEET 3)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	66	65-1065-1	TRACK INSTL, FLAP (LH) (SEE 57-3, FIG. 12, ITEM 108). .	0150	RF
R		65-1065-1	TRACK INSTL, FLAP (VARIABLE DWG;65-1065-5001) (LH) (SEE	5199	RF
R			57-3, FIG. 12, ITEM 108)		
R		65-1065-2	TRACK INSTL, FLAP (RH) (SEE 57-3, FIG. 12, ITEM 108). .	0150	RF
R		65-1065-2	TRACK INSTL, FLAP (VARIABLE DWG;65-1065-5002) (RH) (SEE	5199	RF
R			57-3, FIG. 12, ITEM 108)		
	1	69-42613-1	. BOLT.		2
	2	69-42615-6	. BOLT.		1
	3	69-42615-7	. BOLT.		2
	4	69-42615-7	. BOLT.		2
	5	AN960-816	. WASHER.		2
	6	AN960-1216	. WASHER.		1
	7	AN320-8	. NUT		2
	8	AN320-12	. NUT		1
	9	AN320-12	. NUT		4
	9A	69-42614-1	. BOLT.		2
	9C	AN960-916	. WASHER.		2
	9D	AN320-9	. NUT		2
R	10	5-83040-3002	. TRACK ASSY, OUTBOARD AND INBOARD.	0150	2
R	10	5-83040-3002	. TRACK ASSY, OUTBOARD AND INBOARD.	5199	2
R			(FOR REPLACEMENT ORDER 5-83040-3008)		
R	10	5-83040-3008	. TRACK ASSY, OUTBOARD AND INBOARD.	5199	2
R			(REPLACEMENT FOR 5-83040-3002)		
	10A	BACB28U9C39	. . BUSHING, (USED ON 5-83040-3002)		1
	10B	BACB28U8C149	. . BUSHING, (USED ON 5-83040-3002)		1
	10C	5-83040-3005	. . TRACK, (USED ON 5-83040-3002)		1
	10D	69-42615-1	. BOLT.		1
	10F	AN960-1216	. WASHER.		1
	10G	AN320-12	. NUT		1
	11	5-83067-3001	. TRACK ASSY, OUTBOARD CENTER		1
	11A	BACB28U12C74	. . BUSHING, (USED ON 5-83067-3001)		1
	11B	BACB28U12C149	. . BUSHING, (USED ON 5-83067-3001)		1
	11C	5-83067-3004	. . TRACK, (USED ON 5-83067-3001)		1
R	11D	69-42616-3	. BOLT.	0150	1
R			(OPTIONAL 69-42616-5)		
R	11D	69-42616-5	. BOLT.	0150	1
R			(OPTIONAL TO 69-42616-3)		
R	11D	69-42616-5	. BOLT.	5199	1
	11E	MS20002C16	. WASHER, (USED WITH 65-17679-3).		1
	11F	AN960-1616	. WASHER.		1
	11G	BACN10NL16T	. NUT		1
R	12	65-17679-3	. TRACK ASSY, INBOARD	0150	1
R	12	65-17679-8	. TRACK ASSY, INBOARD	5151	1
R	12	65-17679-10	. TRACK ASSY, INBOARD	5299	1
R	12A	BACB28U16C62	. . BUSHING	0150	1
R	12B	BACB28U12C219	. . BUSHING	0150	1
R	12C	65-17679-5	. . TRACK, (USED ON 65-17679-3)	0150	1
R	12C	65-17679-9	. . TRACK, (USED ON 65-17679-8)	5151	1
R	12C	65-17679-11	. . TRACK, (USED ON 65-17679-10).	5299	1
	12D	69-42616-1	. BOLT.		1
			(OPTIONAL 69-42616-6)		
	12D	69-42616-6	. BOLT.		1
			(OPTIONAL TO 69-42616-1)		
	12E	MS20002C16	. WASHER.		1
	12F	AN960-1616	. WASHER.		1
	12G	BACN10NL16T	. NUT		1
R	13	65-17679-8	. TRACK ASSY, INBOARD	5151	1
R	13	65-17679-3	. TRACK ASSY, INBOARD	0150	1
R	13	65-17679-10	. TRACK ASSY, INBOARD	5299	1
R	13A	BACB28U16C62	. . BUSHING	0150	1
R	13B	BACB28U12C219	. . BUSHING	0150	1
R	13C	65-17679-5	. . TRACK, (USED ON 65-17679-3)	0150	1
R	13C	65-17679-9	. . TRACK, (USED ON 65-17679-8)	5151	1
R	13C	65-17679-11	. . TRACK, (USED ON 65-17679-10).	5299	1
		69-14978-1	. STOP INSTL, FLAP STATION 125.888 SPOILER DOWN		1
	13D	66-12665-1	. . STOP, FLAP STATION 125.888 SPOILER DOWN		1
			ATTACHING PARTS		
		NAS517-3-16	. . SCREW		2
		AN960C10L	. . WASHER.		2
		BACS40D13-18	. . SHIM.		1
		NAS679A3W	. . NUT		2
			-------*-------		
R	13F	69-42616-2	. BOLT, (USED WITH 65-17679-4).	0150	1
R	13F	69-42616-7	. BOLT, (USED WITH 65-17679-4).	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	66 13G	MS20002C16	. WASHER.		1
	13H	AN960-1616	. WASHER.		1
	13J	BACN10NL16T	. NUT		1
	14	65-17679-4	. TRACK ASSY, INBOARD		1
R	14A	69-42616-4	. BOLT, (USED WITH 65-17679-3).	0150	1
R	14A	69-42616-8	. BOLT, (USED WITH 65-17679-3).	5199	1
	14B	MS20002C16	. WASHER.		1
	14C	AN960-1616	. WASHER.		1
	14D	BACN10NL16T	. NUT		1
R	15	65-17679-8	. TRACK ASSY, INBOARD	5151	1
R	15	65-17679-3	. TRACK ASSY, INBOARD	0150	1
R	15	65-17679-10	. TRACK ASSY, INBOARD	5299	1
R	15B	BACB28U12C219	. . BUSHING	0150	1
R	15C	BACB28U16C62	. . BUSHING	0150	1
	15D	65-17679-6	. . TRACK		1
R	15D	65-17679-5	. . TRACK	0150	1
R	15D	65-17679-9	. . TRACK	5151	1
R	15D	65-17679-11	. . TRACK	5299	1
	16	NAS1104-12	. BOLT.		2
	16A	AN960PD416	. WASHER.		2
	17	NAS679A4W	. NUT		2
	18	NAS1104-18D	. BOLT.		4
	19	AN960PD416	. WASHER.		4
	20	AN320-4	. NUT		4
	20A	66-3530-1	. FITTING, SIDE BRACE TUBE ATTACHMENT		2
	21	69-3323-7	. TUBE, FLAP TRACK SIDE BRACE		1
	22	65-19157-5	. FITTING ASSY, FLAP STATION 47.307 REAR SUPPORT (LH. ONLY)		1
	22	65-19157-6	. FITTING ASSY, FLAP STATION 47.307 REAR SUPPORT (RH. ONLY)		1
			ATTACHING PARTS		
	23	NAS1106-24D	. BOLT.		3
	24	AN960PD616	. WASHER.		3
	25	AN320-6	. NUT		3
			-------*-------		
	25B	BAC828W12C44	. . BUSHING		2
	25C	65-19157-7	. . FITTING, (USED ON 65-19157-5)		1
	25C	65-19157-8	. . FITTING, (USED ON 65-19157-6)		1
	26	NAS1104-16	. BOLT.		4
	27	AN960D416	. WASHER.		4
	28	NAS679A4W	. NUT		4
	29	NAS1104-22D	. BOLT.		8
	30	AN960D416	. WASHER.		8
	31	AN320-4	. NUT		8
	32	6-68058-3000	. TERMINAL, FLAP TRACK SIDE BRACE		3
	32A	6-68058-2002	. TERMINAL, FLAP TRACK SIDE BRACE		1
	33	6-68062-2006	. TUBE, FLAP TRACK SIDE BRACE SUPPORT		1
	34	6-68062-2007	. TUBE, FLAP TRACK SIDE BRACE SUPPORT		1
	35	3-95644-5	. BOLT, EYE		1
			ATTACHING PARTS		
		BACN10B064	. NUT		1
		AN960-616	. WASHER.		1
			-------*-------		
	36	6-68061-2003	. TUBE, FLAP TRACK UPPER SUPPORT.		1
	37	6-68061-2004	. TUBE, FLAP TRACK UPPER SUPPORT.		1
			ATTACHING PARTS		
		NAS1105-26D	. BOLT.		16
		AN960-516	. WASHER.		16
		AN320-5	. NUT		16
			-------*-------		
	37A	63-1520-2000	. GUARD, DRIVE TEE BOX.		1
			ATTACHING PARTS		
		BACR15E163C4-6	. RIVET		4
			-------*-------		
	37B	63-10301-1	. STRIP, SPOILER AND TRACK RUB.		2
	38	5-85660-3005	. SUPPORT ASSY, REAR (LH ONLY).		1
	38	5-85660-3006	. SUPPORT ASSY, REAR (RH ONLY).		1
	39	5-85660-3007	. SUPPORT ASSY, REAR (LH ONLY).		1
	39	5-85660-3008	. SUPPORT ASSY, REAR (RH ONLY).		1
	39A	NAS1109-54D	. BOLT.		2
	39B	MS20002C9	. WASHER, (USED WITH NAS1109-54D)		2
	39C	AN960D916	. WASHER.		2
	39D	AN320-9	. NUT		2
	40	5-84083-3006	. SUPPORT ASSY, WING LINK		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	66 40D	BACB28W8C20	. . BUSHING, (NOT USED ON 5-84083-3006)		2
	40E	BACB28W12C30	. . BUSHING, (USED ON 5-84083-3006)		2
	40F	5-85660-3013	. . SUPPORT, (USED ON 5-85660-3005)		1
	40F	5-85660-3014	. . SUPPORT, (USED ON 5-85660-3006)		1
	40G	5-85660-3015	. . SUPPORT, (USED ON 5-85660-3007)		1
	40G	5-85660-3016	. . SUPPORT, (USED ON 5-85660-3008)		1
	40H	5-84083-3007	. . SUPPORT, (USED ON 5-84083-3006)		1
	40J	NAS1109-24D	. BOLT.		2
	40K	MS20002C9	. WASHER.		2
	40L	AN320-9	. NUT		2
	41	65-44433-2	. LINK ASSY, WING SUPPORT		1
	41A	BACB28W12C44	. . BUSHING	0150	2
	41B	65-44433-3	. . SUPPORT		1
R	41C	NAS1109-72D	. BOLT.	5199	1
R	41C	NAS1109-72D	. BOLT, (DELETED BY EIS63324 AND RAF 7211.019-225).	0150	1
R	41C	BACB30NF9-72X	. BOLT, (ADDED BY EIS63324 AND RAF 7211.019-225).	0150	1
	41D	MS20002C9	. WASHER.		1
	41E	AN320-9	. NUT		1
	42	65-44433-2	. LINK ASSY, WING SUPPORT		1
	42A	BACB28W12C44	. . BUSHING	0150	2
	42B	65-44433-3	. . SUPPORT		1
	43	NAS1106-13	. BOLT.		2
	43A	AN960PD616	. WASHER.		2
	44	NAS679A6	. NUT		2
	44B	NAS1104-22D	. BOLT.		6
	44D	AN960PD416	. WASHER.		6
	44F	AN320-4	. NUT		6
	45	66-11843-2	. FITTING, SIDE BRACE TUBE ATTACHMENT		1
	45A	66-11843-2	. FITTING, SIDE BRACE TUBE ATTACHMENT		1
	47	69-13396-5	. TUBE, FLAP TRACK SIDE BRACE		1
	48	NAS1107-27D	. BOLT.		3
	49	NAS1107-35D	. BOLT.		3
	50	AN960PD716	. WASHER.		6
	51	AN320-7	. NUT		6
	53	69-13389-5	. FITTING ASSY, FLAP STATION 270.507 REAR SUPPORT (LH ONLY)		1
	53	69-13389-6	. FITTING ASSY, FLAP STATION 270.507 REAR SUPPORT (RH ONLY)		1
	54	BACB28W12C44	. . BUSHING		2
	55	69-13389-7	. . FITTING, (USED ON 69-13389-5)		1
	55	69-13389-8	. . FITTING, (USED ON 69-13389-6)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

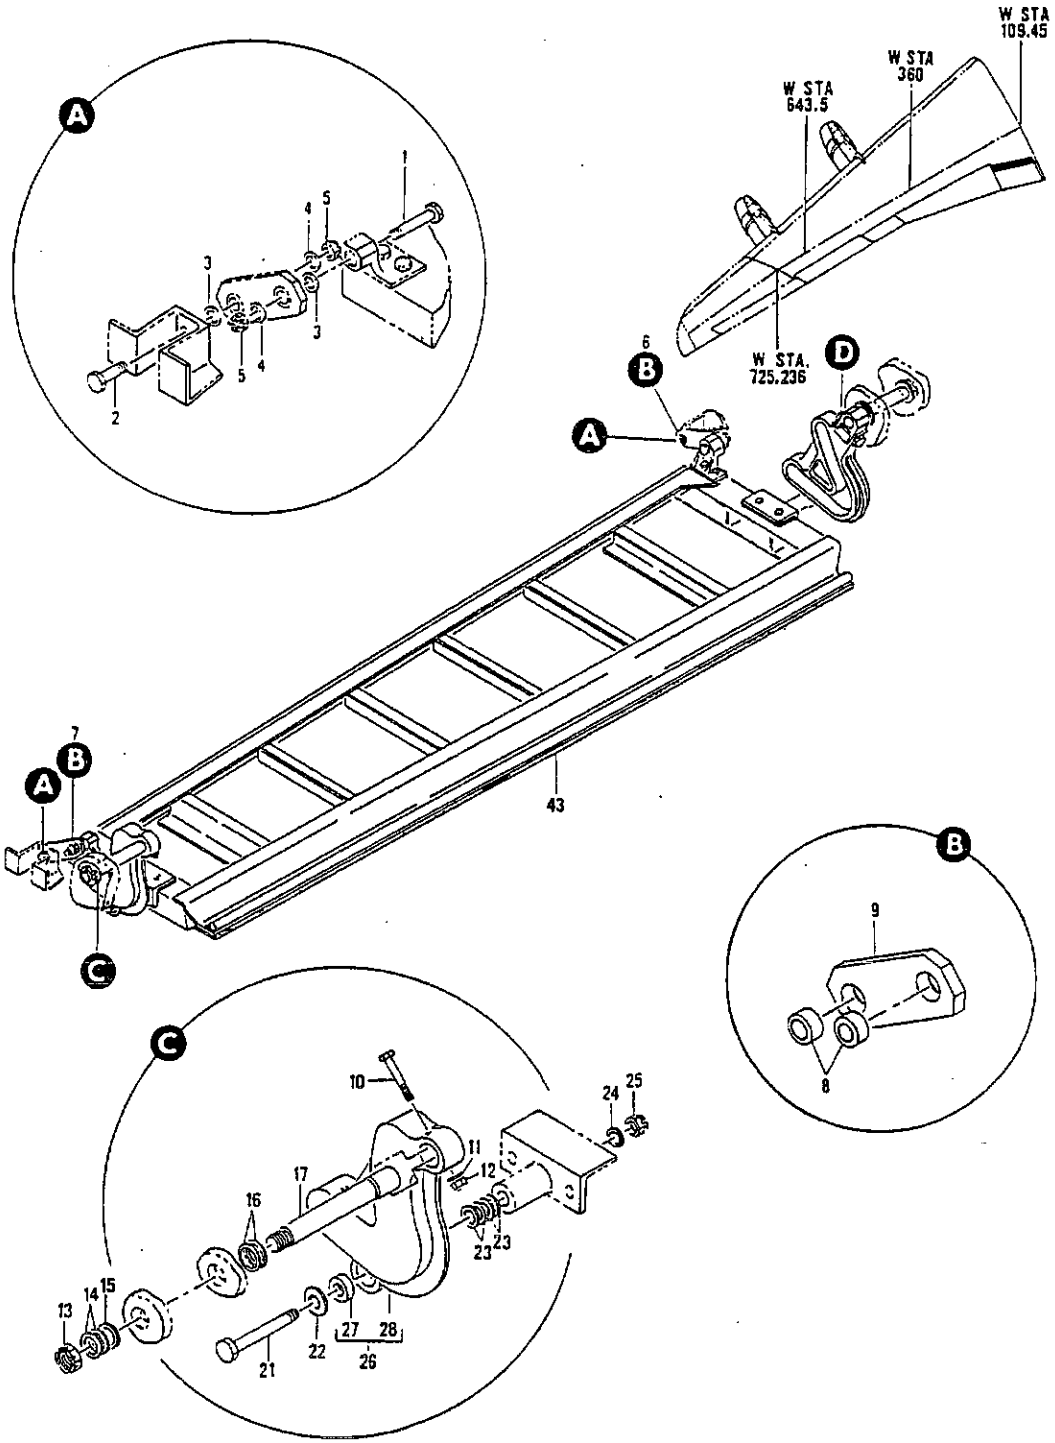


FIGURE 69. DOOR INSTL, INBOARD WING FILLET COVE LIP (SHEET 1)

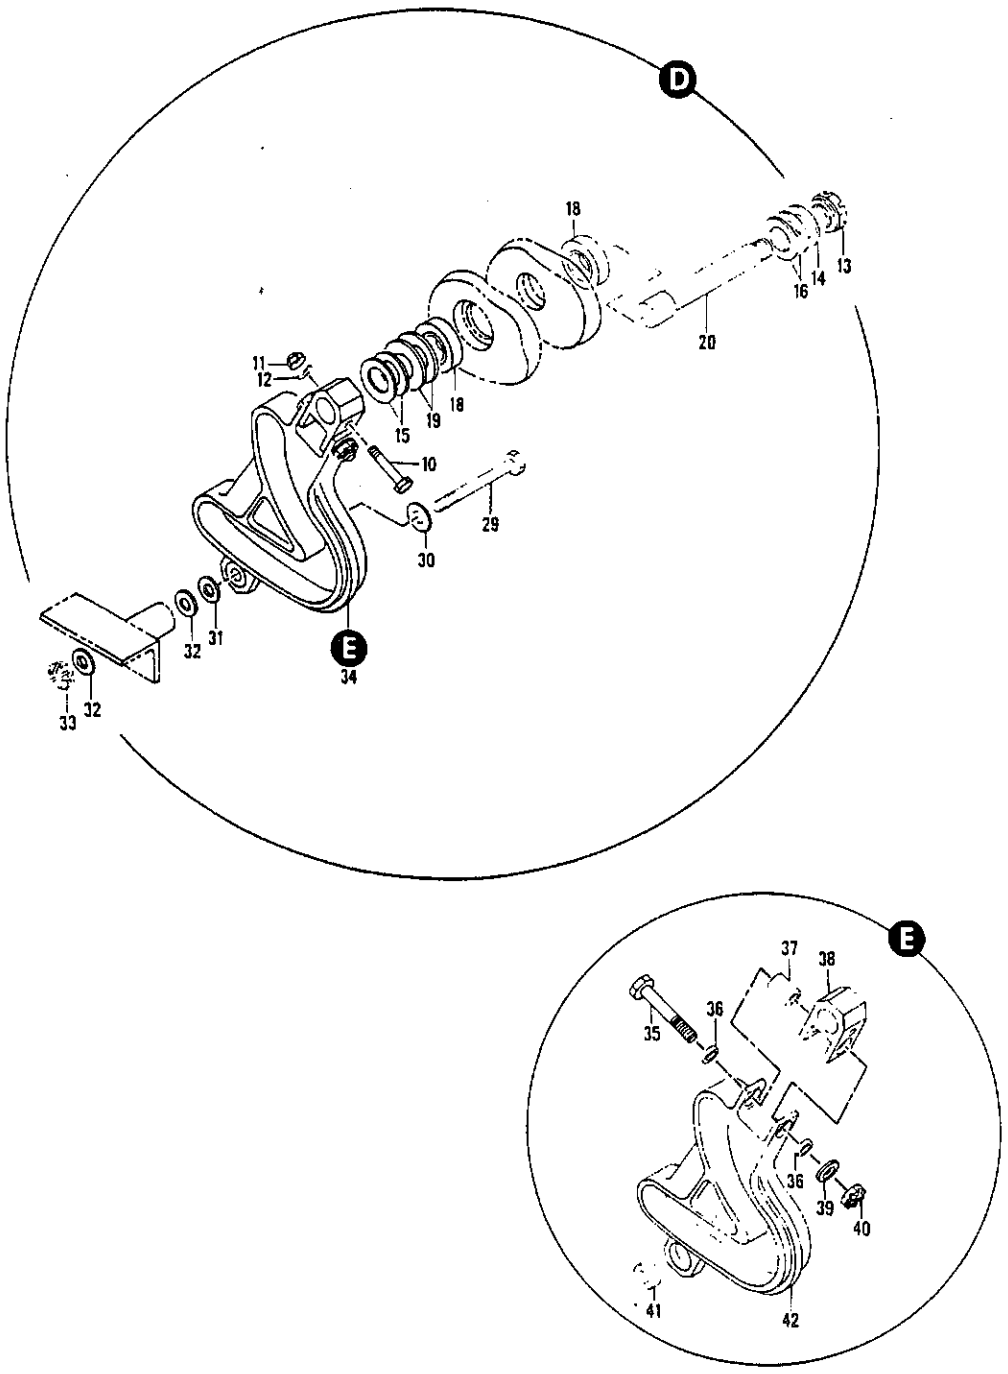


FIGURE 69. DOOR INSTL, INBOARD WING FILLET FLAP COVE LIP (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
69	65-19171-1	DOOR INSTL, INBOARD WING FILLET FLAP COVE LIP (LH) (SEE 57-1, FIG. 1, ITEM 14A)		RF
	65-19171-2	DOOR INSTL, INBOARD WING FILLET FLAP COVE LIP (RH) (SEE 57-1, FIG. 1, ITEM 14A)		RF
1	NAS1105-18DW	. BOLT.		2
2	NAS1105-10DW	. BOLT.		2
3	AN960D516	. WASHER.		4
4	BACW10Q5	. WASHER.		4
5	AN310-5	. NUT		4
6	69-17550-5	. LINK ASSY, FILLET FLAP AREA COVE LIP DOOR FORWARD INBOARD		1
7	69-17550-6	. LINK ASSY, FILLET FLAP AREA COVE LIP DOOR FORWARD OUTBOARD		1
8	BACB10M11	. . BEARING		2
9	69-17550-7	. . LINK, FILLET FLAP AREA COVE LIP DOOR FORWARD. INBOARD (USED ON 69-17550-5)		1
9	69-17550-8	. . LINK, FILLET FLAP AREA COVE LIP DOOR FORWARD. OUTBOARD (USED ON 69-17550-6)		1
10	NAS1103-20W	. BOLT.		2
11	AN960D10L	. WASHER.		2
12	NAS679A3W	. NUT		2
13	AN320-10	. NUT		2
14	AN960D1016	. WASHER.		3
15	AN960D1216	. WASHER.		3
16	AN960D1216L	. WASHER.		4
17	69-18138-2	. SHAFT, FILLET FLAP COVE LIP DOOR CAM LINK PIVOT OUTBOARD		1
18	AN201KP12A	. BEARING		2
19	BACW10P119D	. WASHER.		2
20	69-18138-1	. SHAFT, FILLET FLAP COVE LIP DOOR CAM LINK PIVOT INBOARD		1
21	NAS1106-36DW	. BOLT.		1
22	BACW10Q6	. WASHER.		1
23	AN960D616L	. WASHER.		4
24	AN960D616	. WASHER.		1
25	AN310-6	. NUT		1
26	65-18455-9	. CAM ASSY, FILLET FLAP COVE LIP DOOR OUTBOARD. (LH ONLY)		1
26	65-18455-10	. CAM ASSY, FILLET FLAP COVE LIP DOOR OUTBOARD. (RH ONLY)		1
27	BACB10M8	. . BEARING		1
28	65-18455-11	. . CAM, FILLET FLAP COVE LIP DOOR OUTBOARD (USED ON. 65-18455-9)		1
28	65-18455-12	. . CAM, FILLET FLAP COVE LIP DOOR OUTBOARD (USED ON. 65-18455-9)		1
29	NAS1106-42DW	. BOLT.		1
30	BACW10Q6	. WASHER.		1
31	AN960D616L	. WASHER.		1
32	AN960D616	. WASHER.		2
33	AN310-6	. NUT		1
34	65-18456-7	. CAM ASSY, FILLET FLAP COVE LIP DOOR INBOARD (LH ONLY)		1
34	65-18456-8	. CAM ASSY, FILLET FLAP COVE LIP DOOR INBOARD (RH ONLY)		1
35	NAS1106-28DW	. . BOLT.		1
36	NAS75-6-006	. . BUSHING		2
37	NAS75-6-108	. . BUSHING		1
38	65-18456-5	. . LINK, FILLET FLAP COVE LIP DOOR INBOARD CAM KING. PIN		1
39	AN960PD616	. . WASHER.		1
40	AN320C6	. . NUT		1
41	BACB10M8	. . BEARING		1
42	65-18456-9	. . CAM, FILLET FLAP COVE LIP DOOR INBOARD (LH ONLY).		1
42	65-18456-10	. . CAM, FILLET FLAP COVE LIP DOOR INBOARD (RH ONLY).		1
R 43	65-18454-1	. DOOR ASSY, FILLET FLAP COVE LIP (LH ONLY) (SEE FIG. 70) (OPTIONAL 65-18454-69)	0150	1
R 43	65-18454-69	. DOOR ASSY, FILLET FLAP COVE LIP (LH ONLY) (SEE FIG. 70) (OPTIONAL TO 65-18454-1)	0150	1
R 43	65-18454-69H	. DOOR ASSY, FILLET FLAP COVE LIP (LH ONLY) (SEE FIG. 70) (OPTIONAL TO AND FOR REPLACEMENT ORDER 65-18454-75H)	5299	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	69 43	65-18454-75H	. DOOR ASSY, FILLET FLAP COVE LIP (LH ONLY) (SEE FIG. . 70)	5299	1
R			(OPTIONAL AND REPLACEMENT FOR 65-18454-69H)		
R	43	65-18454-69A	. DOOR ASSY, FILLET FLAP COVE LIP (LH ONLY) (SEE FIG. . 70)	5151	1
R	43	65-18454-2	. DOOR ASSY, FILLET FLAP COVE LIP (RH ONLY) (SEE FIG. . 70)	0150	1
R			(OPTIONAL 65-18454-70)		
R	43	65-18454-70	. DOOR ASSY, FILLET FLAP COVE LIP (RH ONLY) (SEE FIG. . 70)	0150	1
R			(OPTIONAL TO 65-18454-2)		
R	43	65-18454-70H	. DOOR ASSY, FILLET FLAP COVE LIP (RH ONLY) (SEE FIG. . 70)	5299	1
R			(OPTIONAL TO AND FOR REPLACEMENT ORDER 65-18454-76H)		
R	43	65-18454-76H	. DOOR ASSY, FILLET FLAP COVE LIP (RH ONLY) (SEE FIG. . 70)	5299	1
R			(OPTIONAL AND REPLACEMENT FOR 65-18454-70H)		
R	43	65-18454-70A	. DOOR ASSY, FILLET FLAP COVE LIP (RH ONLY) (SEE FIG. . 70)	5151	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

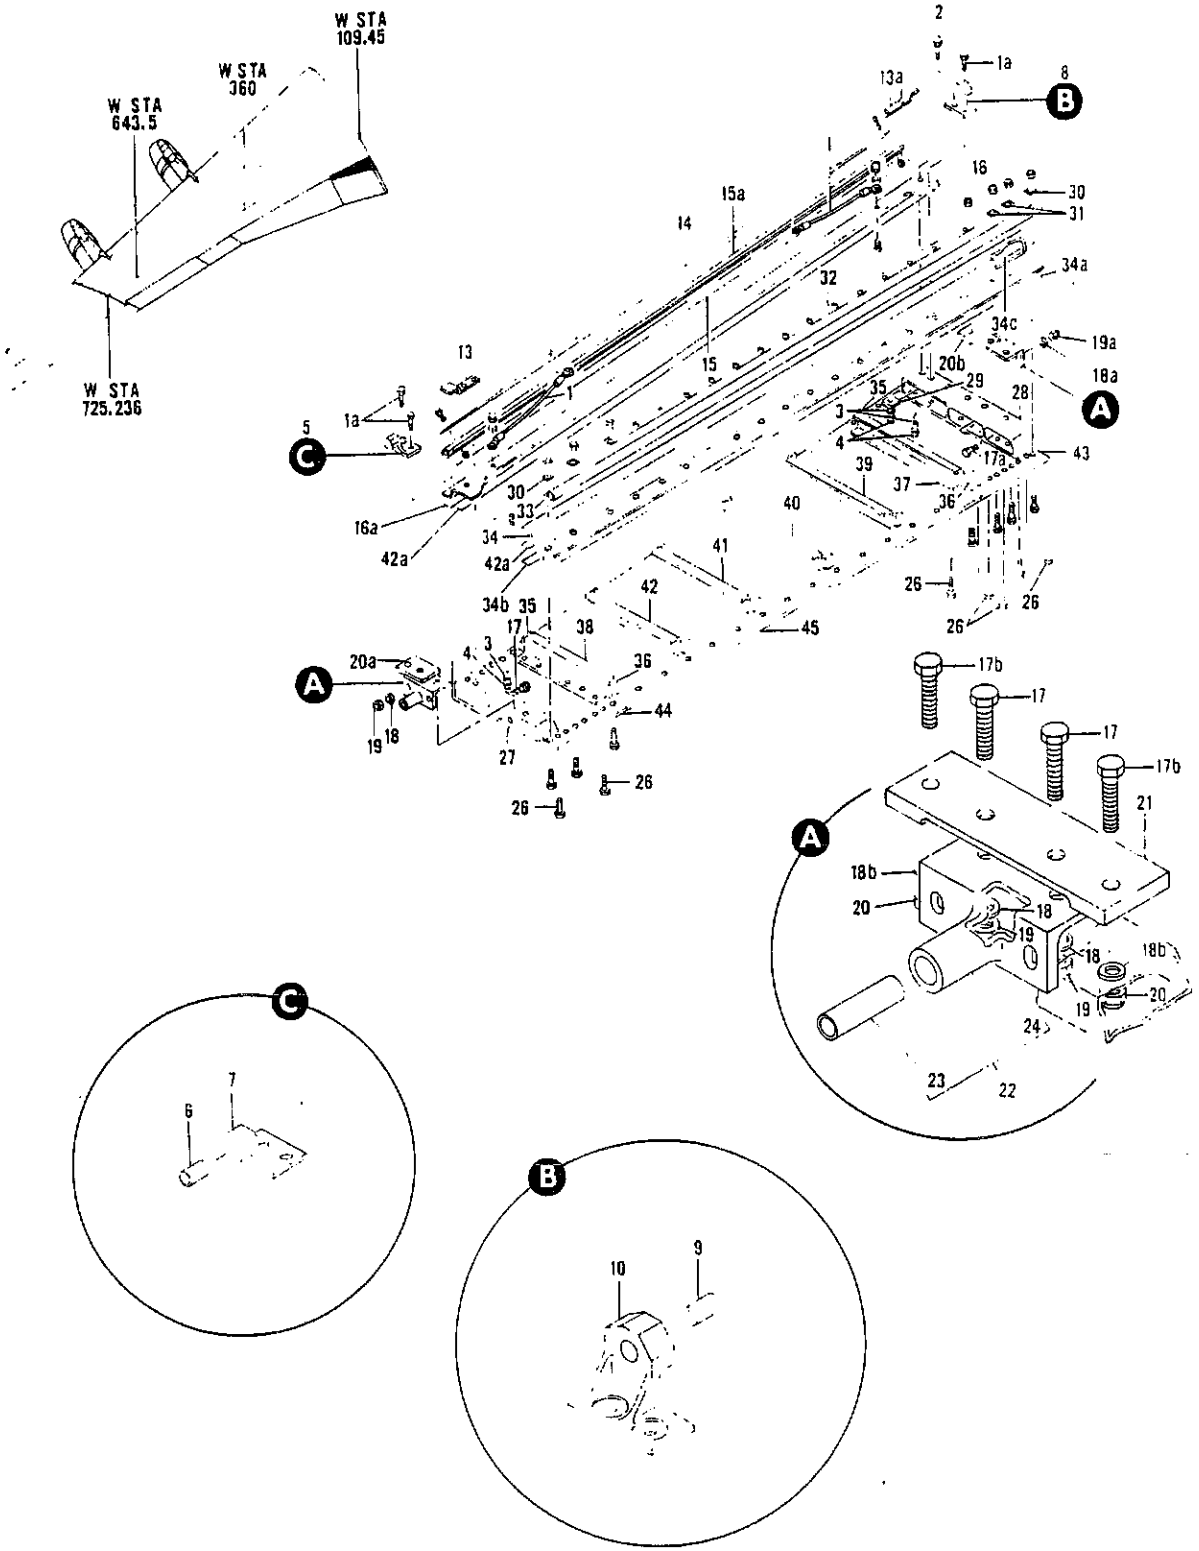


FIGURE 70. DOOR ASSY, FILLET FLAP COVE LIP

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R	70	65-18454-1	DOOR ASSY, FILLET FLAP COVE LIP (LH) (SEE FIG. 69, ITEM 43) (OPTIONAL 65-18454-69)	0150	RF
R		65-18454-69	DOOR ASSY, FILLET FLAP COVE LIP (LH) (SEE FIG. 69, ITEM 43) (OPTIONAL TO 65-18454-1)	0150	RF
R		65-18454-69A	DOOR ASSY, FILLET FLAP COVE LIP (LH) (SEE FIG. 69, ITEM 43)	5151	RF
R		65-18454-69H	DOOR ASSY, FILLET FLAP COVE LIP (LH) (SEE FIG. 69, ITEM 43) (OPTIONAL AND FOR REPLACEMENT ORDER 65-18454-75H)	5299	RF
R		65-18454-75H	DOOR ASSY, FILLET FLAP COVE LIP (LH) (SEE FIG. 69, ITEM 43) (OPTIONAL TO AND REPLACEMENT FOR 65-18454-69H)	5299	RF
R		65-18454-2	DOOR ASSY, FILLET FLAP COVE LIP (RH) (SEE FIG. 69, ITEM 43) (OPTIONAL 65-18454-70)	0150	RF
R		65-18454-70	DOOR ASSY, FILLET FLAP COVE LIP (RH) (SEE FIG. 69, ITEM 43) (OPTIONAL 65-18454-2)	0150	RF
R		65-18454-70H	DOOR ASSY, FILLET FLAP COVE LIP (RH) (SEE FIG. 69, ITEM 43) (OPTIONAL AND FOR REPLACEMENT ORDER 65-18454-76H)	5299	RF
R		65-18454-76H	DOOR ASSY, FILLET FLAP COVE LIP (RH) (SEE FIG. 69, ITEM 43) (OPTIONAL TO AND REPLACEMENT FOR 65-18454-70H)	5299	RF
R		65-18454-70A	DOOR ASSY, FILLET FLAP COVE LIP (RH) (SEE FIG. 69, ITEM 43)	5151	RF
	1	BACJ40K5A5A7	. JUMPER.		2
			ATTACHING PARTS		
		NAS517-3-4	. SCREW		2
		AN960-10	. WASHER.		2
		NAS679A3W	. NUT		2
			-------*-------		
	1A	NAS1104-6W	. BOLT.		3
	2	NAS1104-11W	. BOLT.		1
	3	AN960PD416	. WASHER.		4
	4	NAS679A4W	. NUT		4
R	5	69-18266-1	. FITTING ASSY, FILLET FLAP COVE LIP DOOR LINK ATTACH (LH ONLY) (USED ON 65-18454-1 AND -67)	0150	1
R	5	69-18266-2	. FITTING ASSY, FILLET FLAP COVE LIP DOOR LINK ATTACH (RH ONLY) (USED ON 65-18454-2 AND -68)	0150	1
	5	69-18266-5	. FITTING ASSY, FILLET FLAP COVE LIP DOOR LINK ATTACH (LH ONLY) (USED ON 65-18454-69 AND -75)		1
	5	69-18266-6	. FITTING ASSY, FILLET FLAP COVE LIP DOOR LINK ATTACH (RH ONLY) (USED ON 65-18454-70 AND -76)		1
	6	90-9473-38	. . BUSHING, PRESSED FIT STRUCTURAL		1
R	7	69-18266-3	. . FITTING, FILLET FLAP COVE LIP DOOR LINK ATTACH (LH ONLY)	0150	1
R	7	69-18266-4	. . FITTING, FILLET FLAP COVE LIP DOOR LINK ATTACH (RH ONLY)	0150	1
	7	69-18266-7	. . FITTING, FILLET FLAP COVE LIP DOOR LINK ATTACH. (LH ONLY) (USED ON 65-18454-69 AND -75)		1
	7	69-18266-8	. . FITTING, FILLET FLAP COVE LIP DOOR LINK ATTACH. (RH ONLY) (USED ON 65-18454-70 AND -76)		1
R	8	69-18324-1	. FITTING ASSY, INBOARD COVE LIP DOOR LINK ATTACH (LH ONLY) (USED ON 65-18454-1 AND -67) (OPTIONAL 69-18324-5)	0150	1
R	8	69-18324-5	. FITTING ASSY, INBOARD COVE LIP DOOR LINK ATTACH (LH ONLY) (USED ON 65-18454-1, -67) (OPTIONAL TO 69-18324-1)	0150	1
R	8	69-18324-2	. FITTING ASSY, INBOARD COVE LIP DOOR LINK ATTACH (RH ONLY) (USED ON 65-18454-2 AND -68) (OPTIONAL 69-18324-6)	0150	1
R	8	69-18324-6	. FITTING ASSY, INBOARD COVE LIP DOOR LINK ATTACH (RH ONLY) (USED ON 65-18454-2, -68) (OPTIONAL TO 69-18324-2)	0150	1
	9	90-9473-37	. . BUSHING, PRESSED FIT STRUCTURAL		1
R	10	69-18324-3	. . FITTING, INBOARD COVE LIP DOOR LINK ATTACH (LH. ONLY)	0150	1
R	10	69-18324-4	. . FITTING, INBOARD COVE LIP DOOR LINK ATTACH (RH. ONLY)	0150	1
	13	69-18139-3	. COMPRESSOR, COVE LIP DOOR SEAL (LH ONLY).		1
	13	69-18139-4	. COMPRESSOR, COVE LIP DOOR SEAL (RH ONLY).		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
70	13A	69-18139-1	. COMPRESSOR, COVE LIP DOOR SEAL (LH ONLY).		1
	13A	69-18139-2	. COMPRESSOR, COVE LIP DOOR SEAL (RH ONLY).		1
	14	65-18454-59	. RETAINER, SEAL (LH ONLY). . . . . (OPTIONAL TO 65-18454-66)		1
	14	65-18454-60	. RETAINER, SEAL (RH ONLY). . . . . (OPTIONAL TO 65-18454-66)		1
	14	65-18454-66	. RETAINER, SEAL. . . . . (OPTIONALS 65-18454-59 AND -60)		1
			ATTACHING PARTS		
		NAS602-7	. SCREW		40
		NAS679A08W	. NUT		40
			-------*-------		
	15	65-18454-57	. SEAL, FILLET FLAP COVE LIP DOOR (EXTRUSION NO.. . . . BAC1530-3 X 53.0 IN. LG) (LH ONLY)		1
	15	65-18454-58	. SEAL, FILLET FLAP COVE LIP DOOR (EXTRUSION NO.. . . . BAC1530-3 X 53.0 IN. LG) (RH ONLY)		1
	15A	65-18454-55	. RETAINER, SEAL (LH ONLY). . . . . (OPTIONAL TO 65-18454-65)		1
	15A	65-18454-56	. RETAINER, SEAL (RH ONLY). . . . . (OPTIONAL TO 65-18454-65)		1
	15A	65-18454-65	. RETAINER, SEAL. . . . . (OPTIONALS 65-18454-55 AND -56)		1
	16	65-18454-31	. BEAM, FILLET FLAP COVE LIP DOOR FORWARD (LH ONLY) . .		1
	16	65-18454-32	. BEAM, FILLET FLAP COVE LIP DOOR FORWARD (RH ONLY) . .		1
	16A	BACS40B14-270	. SHIM.		AR
	17	NAS1104-8W	. BOLT.		6
	17A	NAS1105-8W	. BOLT.		2
	17B	NAS1105-7W	. BOLT, (INBOARD)		2
	17B	NAS1104-9W	. BOLT, (OUTBOARD).		2
	18	AN960PD416	. WASHER.		6
	18A	AN960PD516	. WASHER.		2
	18B	AN960PD516	. WASHER, (INBOARD)		2
	18B	AN960PD416	. WASHER, (OUTBOARD).		2
	19	NAS679A4W	. NUT		6
	19A	NAS679A5W	. NUT		2
	20	NAS679A5W	. NUT, (INBOARD).		2
	20	NAS679A4W	. NUT, (OUTBOARD)		2
R R	20A	65-18454-49	. FITTING ASSY, FILLET FLAP COVE LIP DOOR OUTBOARD CAM (LH ONLY) (USED ON 65-18454-1 AND -67)	0150	1
	20A	65-18454-71	. FITTING ASSY, FILLET FLAP COVE LIP DOOR OUTBOARD CAM (LH) (USED ON 65-18454-69 AND -75)		1
R R	20A	65-18454-50	. FITTING ASSY, FILLET FLAP COVE LIP DOOR OUTBOARD CAM (RH ONLY) (USED ON 65-18454-2 AND -68)	0150	1
	20A	65-18454-72	. FITTING ASSY, FILLET FLAP COVE LIP DOOR OUTBOARD CAM (RH) (USED ON 65-18454-70 AND -76)		1
R R	20B	65-18454-51	. FITTING ASSY, FILLET FLAP COVE LIP DOOR INBOARD CAM . (LH ONLY) (USED ON 65-18454-1 AND -67)	0150	1
R R	20B	65-18454-52	. FITTING ASSY, FILLET FLAP COVE LIP DOOR INBOARD CAM . (RH ONLY) (USED ON 65-18454-2 AND -68)	0150	1
	20B	65-18454-73	. FITTING ASSY, FILLET FLAP COVE LIP DOOR INBOARD CAM . (LH) (USED ON 65-18454-69 AND -75)		1
	20B	65-18454-74	. FITTING ASSY, FILLET FLAP COVE LIP DOOR INBOARD CAM . (RH) (USED ON 65-18454-70 AND -76)		1
	21	69-22658-1	. . PLATE, FILLET FLAP COVE LIP DOOR OUTBOARD BRACE . . (USED ON 65-18454-49, -50, -71 AND -72)		1
	21	69-22658-2	. . PLATE, FILLET FLAP COVE LIP DOOR INBOARD BRACE. . . (USED ON 65-18454-51, -52, -73 AND -74)		1
R R R	22	69-18267-1	. . FITTING ASSY, FILLET FLAP COVE LIP DOOR INBOARD CAM LATCH (USED ON 65-18454-51 AND -52) (OPTIONAL 69-18267-7)	0150	1
R R	22	69-18267-7	. . FITTING ASSY, LATCH (USED ON 65-18454-51 AND -52) . (OPTIONAL TO 69-18267-1)	0150	1
R R R	22	69-18267-2	. . FITTING ASSY, FILLET FLAP COVE LIP DOOR OUTBOARD. . CAM LATCH (USED ON 65-18454-49 AND -50) (OPTIONAL 69-18267-8)	0150	1
R R	22	69-18267-8	. . FITTING ASSY, LATCH (USED ON 65-18454-49 AND -50) . (OPTIONAL TO 69-18267-2)	0150	1
	22	69-18267-7	. . FITTING ASSY, FILLET FLAP COVE LIP DOOR INBOARD . . CAM LATCH (USED ON 65-18454-73 AND -74)		1
	22	69-18267-8	. . FITTING ASSY, FILLET FLAP COVE LIP DOOR OUTBOARD. . CAM LATCH (USED ON 65-18454-71 AND -72)		1
	23	90-9473-39	. . . BUSHING, PRESSED FIT STRUCTURAL (USED ON. . . . . 69-18267-1 AND -7)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	70 23	90-9473-40	. . . BUSHING, PRESSED FIT STRUCTURAL (USED ON. . . . . 69-18267-2 AND -8)		1
R	24	69-18267-5	. . . FITTING, FILLET FLAP COVE LIP DOOR INBOARD CAM. .	0150	1
R			LATCH (USED ON 69-18267-1)		
	24	69-18267-9	. . . FITTING, FILLET FLAP COVE LIP DOOR INBOARD CAM. . LATCH (USED ON 65-18267-7)		1
R	24	69-18267-6	. . . FITTING, FILLET FLAP COVE LIP DOOR OUTBOARD CAM .	0150	1
R			LATCH (USED ON 69-18267-2)		
	24	69-18267-10	. . . FITTING, FILLET FLAP COVE LIP DOOR OUTBOARD CAM . LATCH (USED ON 65-18267-8)		1
	26	NAS517-4-4	. SCREW		49
R	27	65-18458-1	. FITTING, FILLET FLAP COVE LIP DOOR OUTBOARD END (LH .	0150	1
R			ONLY) (USED ON 65-18454-1)		
	27	65-18458-3	. FITTING, DOOR OUTBOARD END (LH ONLY). . . . . (USED ON 65-18454-67, -69 AND -75)		1
R	27	65-18458-2	. FITTING, FILLET FLAP COVE LIP DOOR OUTBOARD END (RH .	0150	1
R			ONLY) (USED ON 65-18454-2)		
	27	65-18458-4	. FITTING, DOOR OUTBOARD END (RH ONLY). . . . . (USED ON 65-18454-68, -70 AND -76)		1
R	28	65-18457-1	. FITTING, FILLET FLAP COVE LIP DOOR INBOARD END (LH. .	0150	1
R			ONLY) USED ON 65-18454-1)		
	28	65-18457-3	. FITTING, DOOR INBOARD END (LH ONLY) . . . . . (USED ON 65-18454-67, -69 AND -75)		1
R	28	65-18457-2	. FITTING, FILLET FLAP COVE LIP DOOR INBOARD END (RH. .	0150	1
R			ONLY) (USED ON 65-18454-2)		
	28	65-18457-4	. FITTING, DOOR INBOARD END (RH ONLY) . . . . . (USED ON 65-18454-68, -70 AND -76)		1
	29	65-18454-47	. FILLER, FILLET FLAP COVE LIP DOOR RADIUS.		1
	30	65-18454-40	. RETAINER, FILLET FLAP COVE LIP DOOR SEAL.		2
	31	65-18454-39	. RETAINER, FILLET FLAP COVE LIP DOOR SEAL.		3
	32	65-18454-16	. RETAINER, FILLET FLAP COVE LIP DOOR SEAL. . . . . ATTACHING PARTS		1
		NAS517-2-4	. SCREW		20
		NAS679A08W	. NUT		20
			-------*-------		
	33	65-18454-37	. SEAL, FILLET FLAP COVE LIP DOOR (EXTRUSION NO.. . . . BAC1530-5 X 52.0 IN. LG) (LH ONLY)		1
	33	65-18454-38	. SEAL, FILLET FLAP COVE LIP DOOR (EXTRUSION NO.. . . . BAC1530-5 X 52.0 IN. LG) (RH ONLY)		1
	34	65-18454-33	. BEAM, FILLET FLAP COVE LIP DOOR AFT (LH ONLY)		1
	34	65-18454-34	. BEAM, FILLET FLAP COVE LIP DOOR AFT (RH ONLY)		1
	34A	BACS40B21-272	. SHIM.		AR
	34B	BACS40B12-26	. SHIM.		AR
	34C	BACS40B12-34	. SHIM.		AR
	35	65-18454-15	. CLIP, FILLET FLAP COVE LIP DOOR FORWARD		6
	36	65-18454-17	. CLIP, FILLET FLAP COVE LIP DOOR AFT (LH ONLY)		6
	36	65-18454-18	. CLIP, FILLET FLAP COVE LIP DOOR AFT (RH ONLY)		6
	37	65-18454-19	. RIB, FILLET FLAP COVE LIP DOOR INBOARD J (LH ONLY). .		1
	37	65-18454-20	. RIB, FILLET FLAP COVE LIP DOOR INBOARD J (RH ONLY). .		1
	38	65-18454-21	. RIB, FILLET FLAP COVE LIP DOOR OUTBOARD J (LH ONLY) .		1
	38	65-18454-22	. RIB, FILLET FLAP COVE LIP DOOR OUTBOARD J (RH ONLY) .		1
	39	65-18454-23	. RIB, FILLET FLAP COVE LIP DOOR Z (LH ONLY).		1
	39	65-18454-24	. RIB, FILLET FLAP COVE LIP DOOR Z (RH ONLY).		1
	40	65-18454-25	. RIB, FILLET FLAP COVE LIP DOOR Z (LH ONLY).		1
	40	65-18454-26	. RIB, FILLET FLAP COVE LIP DOOR Z (RH ONLY).		1
	41	65-18454-27	. RIB, FILLET FLAP COVE LIP DOOR Z (LH ONLY).		1
	41	65-18454-28	. RIB, FILLET FLAP COVE LIP DOOR Z (RH ONLY).		1
	42	65-18454-29	. RIB, FILLET FLAP COVE LIP DOOR Z (LH ONLY).		1
	42	65-18454-30	. RIB, FILLET FLAP COVE LIP DOOR Z (RH ONLY).		1
	42A	BACS40B12-12	. SHIM.		AR
	43	65-18454-61	. DOOR ASSY, FILLET FLAP COVE LIP DOOR ACCESS (LH ONLY) (USED ON 65-18454-67, -69 AND -75)		1
	43	65-18454-62	. DOOR ASSY, FILLET FLAP COVE LIP DOOR ACCESS (RH ONLY) (USED ON 65-18454-68, -70 AND -76)		1
	44	65-18454-63	. DOOR ASSY, FILLET FLAP COVE LIP DOOR ACCESS (LH ONLY) (USED ON 65-18454-67, -69 AND -75)		1
	44	65-18454-64	. DOOR ASSY, FILLET FLAP COVE LIP DOOR ACCESS (RH ONLY) (USED ON 65-18454-68, -70 AND -76)		1
R	45	65-18454-5	. SKIN ASSY, FILLET FLAP COVE LIP DOOR ACCESS (LH ONLY)	0150	1
R	45	65-18454-5A	. SKIN ASSY, FILLET FLAP COVE LIP DOOR ACCESS (LH ONLY)	5151	1
R	45	65-18454-6	. SKIN ASSY, FILLET FLAP COVE LIP DOOR ACCESS (RH ONLY)	0150	1
R	45	65-18454-6A	. SKIN ASSY, FILLET FLAP COVE LIP DOOR ACCESS (RH ONLY)	5151	1
	45	65-18454-77	. SKIN ASSY, FILLET FLAP COVE LIP DOOR ACCESS (LH ONLY)		1
	45	65-18454-78	. SKIN ASSY, FILLET FLAP COVE LIP DOOR ACCESS (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

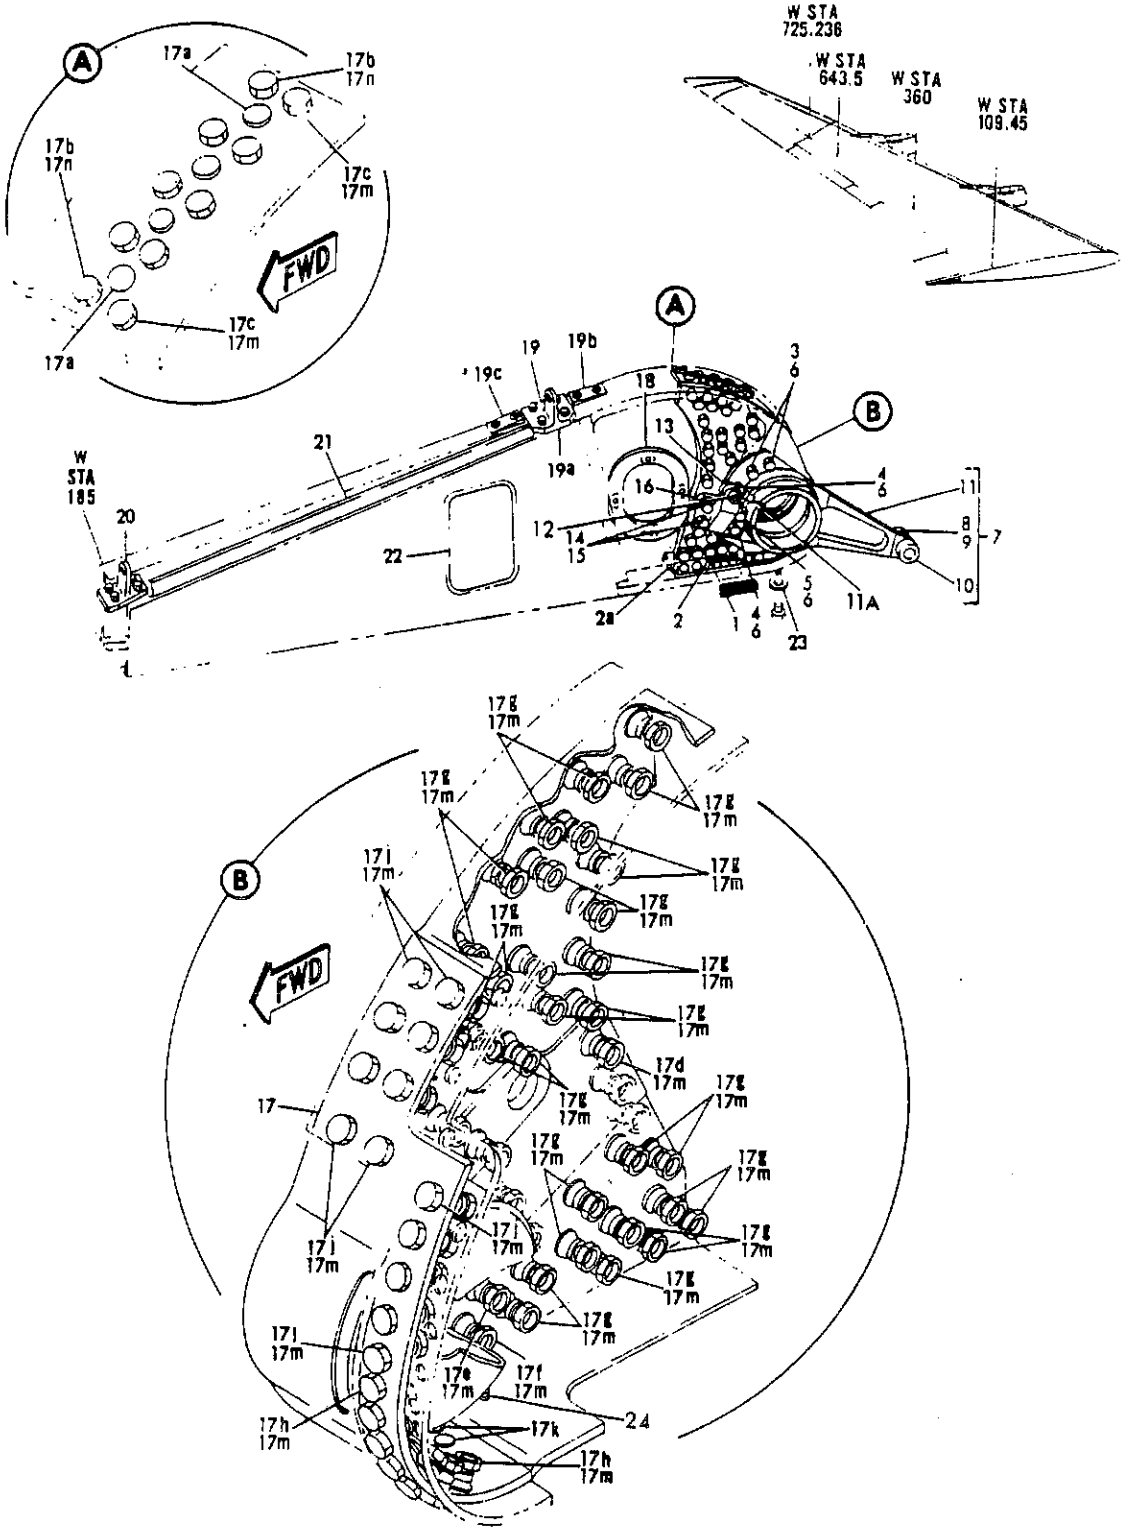


FIGURE 71. RIB INSTL, WING BUTTOCK LINE I.O FILLET FLAP

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	71	65-19180-1	RIB INSTL, WING BUTTOCK LINE 1.0 FILLET FLAP (LH) (SEE FIG. 27, ITEM 22 AND FIG. 28, ITEM 23)		RF
		65-19180-2	RIB INSTL, WING BUTTOCK LINE 1.0 FILLET FLAP (RH) (SEE FIG. 27, ITEM 22 AND FIG. 28, ITEM 23)		RF
	1	65-19180-65	. SEAL, WING BUTTOCK LINE 1.0 FILLET FLAP RIB (ALTERED FROM BAC SPEC NO. 10-60120-56 X 4 IN. LG) (LH ONLY)		1
	1	65-19180-66	. SEAL, WING BUTTOCK LINE 1.0 FILLET FLAP RIB (ALTERED FROM BAC SPEC NO. 10-60120-56 X 4 IN. LG) (RH ONLY)		1
	2	65-19180-63	. RETAINER, WING BUTTOCK LINE 1.0 FILLET FLAP RIB SEAL (LH ONLY)		1
	2	65-19180-64	. RETAINER, WING BUTTOCK LINE 1.0 FILLET FLAP RIB SEAL (RH ONLY)		1
			ATTACHING PARTS		
		MS20426D4	. RIVET		3
			-------*-------		
	2A	BACS40A28-99	. SHIM.		AR
	3	BACB30N8-7	. BOLT.		2
	4	BACB30N8-9	. BOLT.		2
	5	BACB30N8-11	. BOLT.		1
	6	NAS1080C8	. COLLAR.		5
	7	65-41464-1	. ARM ASSY, INBOARD COVE LIP DOOR ACTUATOR (LH ONLY). . (OPTIONAL 65-18452-1)		1
	7	65-18452-1	. ARM ASSY, INBOARD COVE LIP DOOR ACTUATOR (LH ONLY). . (OPTIONAL TO 65-41464-1)		1
	7	65-41464-2	. ARM ASSY, INBOARD COVE LIP DOOR ACTUATOR (RH ONLY). . (OPTIONAL 65-18452-2)		1
	7	65-18452-2	. ARM ASSY, INBOARD COVE LIP DOOR ACTUATOR (RH ONLY). . (OPTIONAL TO 65-41464-2)		1
	8	AN316-8R	. . NUT		1
	9	NAS460-816	. . WASHER.		1
	10	BACB10BH69CTK9	. . BEARING		1
	11	65-41464-3	. . ARM, INBOARD COVE LIP DOOR ACTUATOR (LH ONLY) . .		1
	11	65-41464-4	. . ARM, INBOARD COVE LIP DOOR ACTUATOR (RH ONLY) . .		1
	12	NAS538B10P14	. BUSHING		1
	13	NAS538B10P65	. BUSHING		1
	14	BACB30N8-9	. BOLT.		2
	15	NAS1080C8	. COLLAR.		2
R	16	69-15776-1	. FITTING, FLAPPERETTE ACTUATION CRANK SUPPORT. . . . (OPTIONAL 69-15776-2)	0151	1
R	16	69-15776-2	. FITTING, FLAPPERETTE ACTUATION CRANK SUPPORT. . . . (OPTIONAL TO 69-15776-1)	0151	1
R	16	69-15776-2	. FITTING, FLAPPERETTE ACTUATION CRANK SUPPORT. . . .	5299	1
R	17	65-20993-1	. FITTING, FILLET FLAP INBOARD END HINGE (LH ONLY). . .	0150	1
R	17	65-20993-3	. FITTING, INBOARD END HINGE (LH ONLY).	5199	1
R	17	65-20993-2	. FITTING, FILLET FLAP INBOARD END HINGE (RH ONLY). . .	0150	1
R	17	65-20993-4	. FITTING, INBOARD END HINGE (RH ONLY).	5199	1
			ATTACHING PARTS		
	17A	BACR15CED4	. RIVET		4
	17B	BACB30FM6-6	. BOLT.		5
	17C	BACB30P6-6	. BOLT.		5
	17D	BACB30N6-7	. BOLT.		1
	17E	BACB30N6-10	. BOLT.		1
	17F	BACB30N6-17	. BOLT.		1
	17G	BACB30N6-6	. BOLT.		29
	17H	BACB30N6-4	. BOLT.		7
	17J	BACB30P6-4	. BOLT.		13
	17K	NAS1399D5-8	. RIVET		2
	17M	BACC30K6	. COLLAR.		57
	17N	BACC30M6	. COLLAR.		5
			-------*-------		
	18	65-19180-38	. LID, WING BUTTOCK LINE 1.0 FILLET FLAP RIB.		1
			ATTACHING PARTS		
		AN3-6A	. BOLT.		4
			-------*-------		
	19	69-17503-1	. FITTING ASSY, FILLET FLAP FENCE FORWARD HINGE (LH . . ONLY)		1
	19	69-17503-2	. FITTING ASSY, FILLET FLAP FENCE FORWARD HINGE (RH . . ONLY)		1
			ATTACHING PARTS		
		NAS334CP10-5	. BOLT.		2
		NAS1104-13W	. BOLT.		2
		AN960-416	. WASHER.		4
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
71 19A	65-19180-72	. SHIM, WING BUTTOCK LINE 1.0 FILLET FLAP RIB		AR
19B	65-19180-73	. FILLER, WING BUTTOCK LINE 1.0 FILLET FLAP RIB (LH . . ONLY)		1
19B	65-19180-74	. FILLER, WING BUTTOCK LINE 1.0 FILLET FLAP RIB (RH . . ONLY)		1
		ATTACHING PARTS		
	NAS517-3-4	. BOLT.		4
	BACB30LL3-4	. BOLT.		4
		-------*-------		
19C	65-19180-75	. FILLER, WING BUTTOCK LINE 1.0 FILLET FLAP RIB (LH . . ONLY)		1
19C	65-19180-76	. FILLER, WING BUTTOCK LINE 1.0 FILLET FLAP RIB (RH . . ONLY)		1
		ATTACHING PARTS		
	NAS517-3-5	. SCREW		4
		-------*-------		
20	69-17504-5	. FITTING ASSY, FILLET FLAP FENCE AFT HINGE (LH ONLY) .		1
20	69-17504-6	. FITTING ASSY, FILLET FLAP FENCE AFT HINGE (RH ONLY) .		1
		ATTACHING PARTS		
	BACR10V4	. RETAINER.		2
	BACN10CP4H	. NUT		2
20A	NAS1304-11W	. BOLT.		2
20B	NAS1104-13W	. BOLT.		2
20C	AN960-416	. WASHER.		4
20D	BACR10V4	. RETAINER.		2
20E	BACN10CP4H	. NUT		2
		-------*-------		
20F	BACB10M8	. . BEARING		1
20G	69-17504-7	. . FITTING, (USED ON 69-17504-5)		1
20G	69-17504-8	. . FITTING, (USED ON 69-17504-6)		1
20H	65-19180-62	. SHIM.		1
21	65-19180-22	. WIPER, WING BUTTOCK LINE 1.0 FILLET FLAP RIB.		1
		ATTACHING PARTS		
	NAS1103-4	. BOLT.		15
	NAS1103-5	. BOLT.		2
		-------*-------		
	65-19180-27	. PANEL ASSY, WING BUTTOCK LINE 1.0 FILLET FLAP RIB . . INNER (LH ONLY)		1
	65-19180-28	. PANEL ASSY, WING BUTTOCK LINE 1.0 FILLET FLAP RIB . . INNER (RH ONLY)		1
22	65-19180-48	. . DOOR, WING BUTTOCK LINE 1.0 FILLET FLAP RIB PANEL . ACCESS		1
		ATTACHING PARTS		
	BACB30EL3-3	. . SCREW		15
		-------*-------		
23	BACJ40K5A5A5	. JUMPER.		1
		ATTACHING PARTS		
	NAS517-3-3	. SCREW		1
	AN960D10	. WASHER.		1
	NAS679A3W	. NUT		1
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

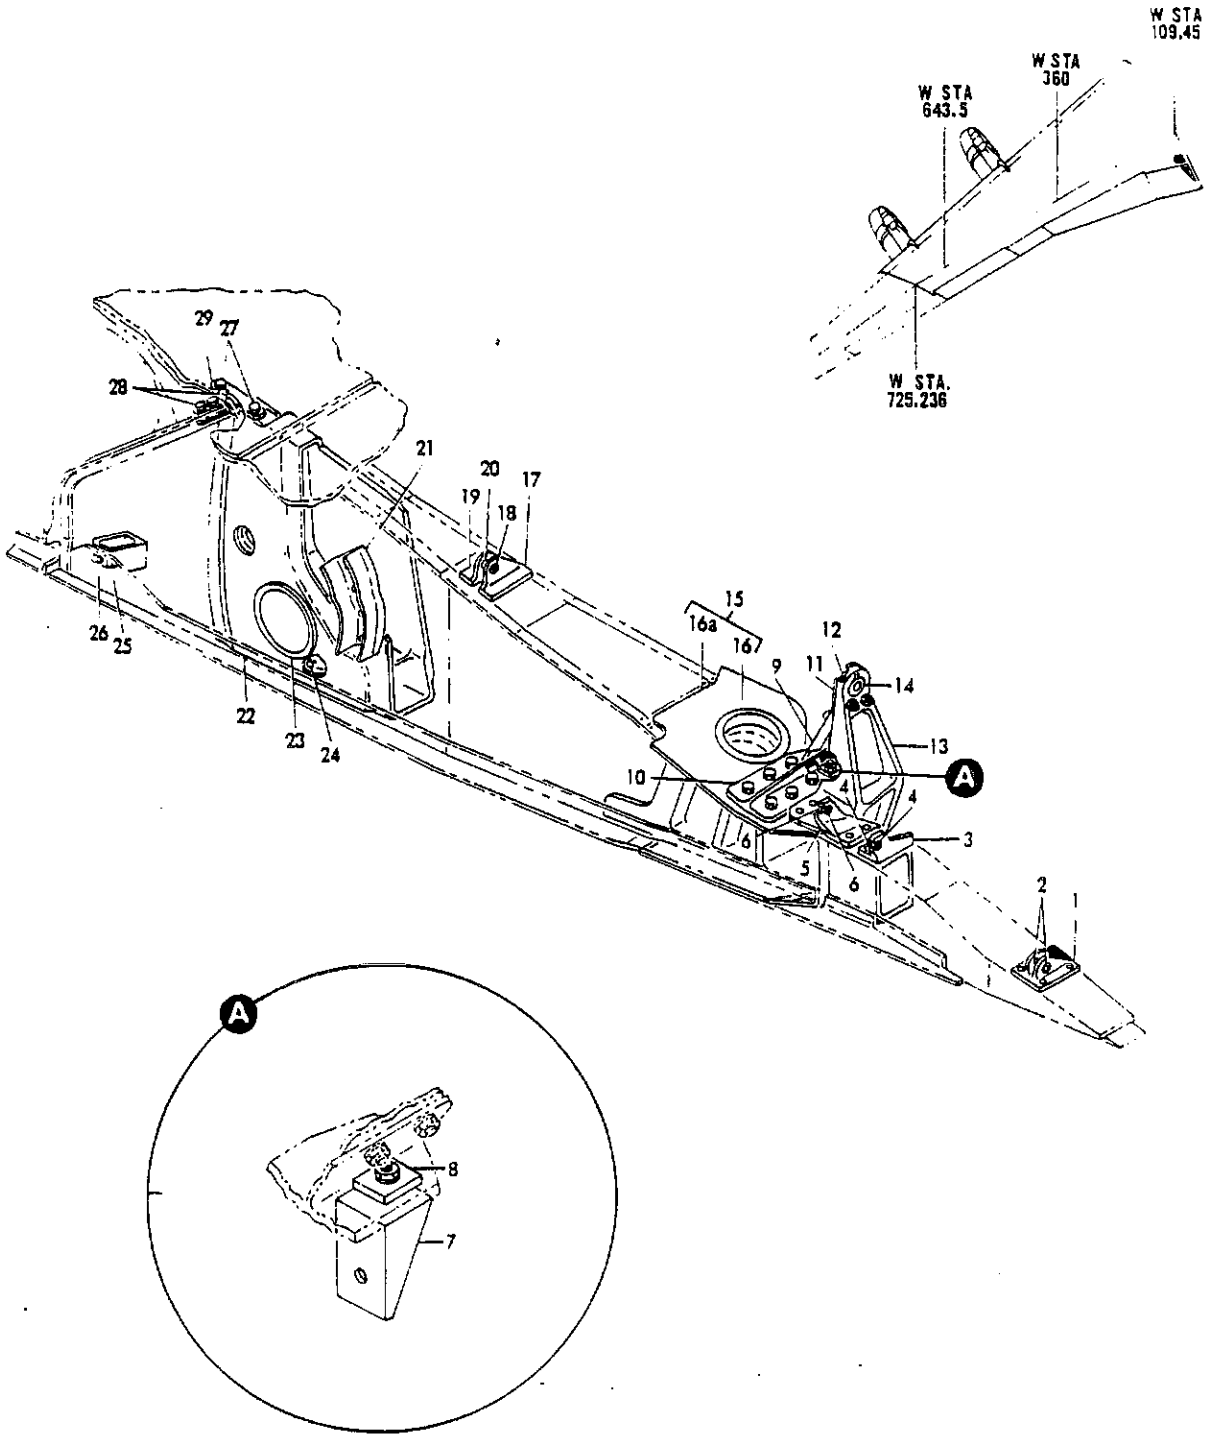


FIGURE 72. BEAM INSTL, WING BUTTOCK LINE I. 90 WING TRAILING EDGE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	72	65-19174-155	BEAM INSTL, WING BUTTOCK LINE 1.90 WING TRAILING EDGE . (LH) (SEE 57-5, FIG. 12, ITEM 24)		RF
		65-19174-156	BEAM INSTL, WING BUTTOCK LINE 1.90 WING TRAILING EDGE . (RH) (SEE 57-5, FIG. 12, ITEM 24)		RF
	1	65-19174-97	. FITTING ASSY, WING BUTTOCK LINE 1.90 WING TRAILING. . EDGE BEAM (LH ONLY)		1
	1	65-19174-98	. FITTING ASSY, WING BUTTOCK LINE 1.90 WING TRAILING. . EDGE BEAM (RH ONLY)		1
			ATTACHING PARTS		
		BACB30N8-5	. BOLT, (RH ONLY)		4
		NAS1104-4	. BOLT, (LH ONLY)		4
		BACS40A39-52	. SHIM, (RH ONLY)		AR
		AN960PD416	. WASHER, (LH ONLY)		4
		NAS1080C8	. COLLAR, (RH ONLY)		4
		NAS679A4W	. NUT, (LH ONLY).		4
			-------*-------		
	2	NAS77A4-9P	. . BUSHING		2
	3	69-17772-1	. FITTING ASSY, FAIRING SUPPORT (LH ONLY)		1
	3	69-17772-2	. FITTING ASSY, FAIRING SUPPORT (RH ONLY)		1
			ATTACHING PARTS		
		BACB30N8-10	. BOLT.		2
		BACS40A20-43	. SHIM.		AR
		NAS1080C8	. COLLAR.		2
			-------*-------		
	4	NAS77A4-9P	. . BUSHING		2
	5	69-17579-1	. FITTING ASSY, LOWER TRACK SUPPORT (LH ONLY)		1
	5	69-17579-2	. FITTING ASSY, LOWER TRACK SUPPORT (RH ONLY)		1
			ATTACHING PARTS		
		BACB30N8-10	. BOLT.		2
		BACS40A77-43	. SHIM.		AR
		NAS1080C8	. COLLAR.		2
			-------*-------		
	6	NAS77A4-11P	. . BUSHING		2
	9	69-22157-1	. BRACE, BODY STATION 959.79 WING TRAILING EDGE SUPPORT . FITTING CHANNEL (LH ONLY)		1
	9	69-22157-2	. BRACE, BODY STATION 959.79 WING TRAILING EDGE SUPPORT . FITTING CHANNEL (RH ONLY)		1
			ATTACHING PARTS		
		BACB30N6-3	. BOLT.		2
		BACB30N6-4	. BOLT.		2
		NAS1080C6	. COLLAR.		4
			-------*-------		
	10	69-22197-3	. TEE, BODY STATION 959.79 WING TRAILING EDGE SUPPORT . (LH ONLY)		1
	10	69-22197-4	. TEE, BODY STATION 959.79 WING TRAILING EDGE SUPPORT . (RH ONLY)		1
			ATTACHING PARTS		
		NAS1468-8-7	. BOLT.		6
		NAS1080-8	. COLLAR.		6
			-------*-------		
	11	69-22181-1	. RETAINER, BODY STATION 959.79 WING TRAILING EDGE. . . SUPPORT (LH ONLY)		1
	11	69-22181-2	. RETAINER, BODY STATION 959.79 WING TRAILING EDGE. . . SUPPORT (RH ONLY)		1
			ATTACHING PARTS		
		NAS508-8	. RIVET		1
		NAS464P3A11	. BOLT.		2
		AN960PD10L	. WASHER.		2
		NAS679A3W	. NUT		2
			-------*-------		
R	13	65-19891-5	. FITTING ASSY, BODY STATION 959.79 SUPPORT (LH ONLY) .	0150	1
R			(OPTIONAL 65-19891-9)		
	13	65-19891-9	. FITTING ASSY, BODY STATION 959.79 SUPPORT (LH ONLY) . (OPTIONAL TO 65-19891-5)		1
R	13	65-19891-9	. FITTING ASSY, BODY STATION 959.79 SUPPORT (LH ONLY) .	5199	1
R	13	65-19891-6	. FITTING ASSY, BODY STATION 959.79 SUPPORT (RH ONLY) .	0150	1
R			(OPTIONAL 65-19891-10)		
R	13	65-19891-10	. FITTING ASSY, BODY STATION 959.79 SUPPORT (RH ONLY) .	0150	1
R			(OPTIONAL TO 65-19891-6)		
R	13	65-19891-10	. FITTING ASSY, BODY STATION 959.79 SUPPORT (RH ONLY) .	5199	1
			ATTACHING PARTS		
		BACB30N8-8	. BOLT.		10
		NAS1080C8	. COLLAR.		10
			-------*-------		


MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	72 14	BACB10A208GM2	. . BEARING		1
R	15	65-22244-13	. SUPPORT ASSY, FILLET FLAP DRIVE SCREW (LH ONLY) . . .	0150	1
R			(REPLACES 65-22244-9 BY SB 3251)		
R	15	65-22244-13	. SUPPORT ASSY, FILLET FLAP DRIVE SCREW (LH ONLY) . . .	0150	1
R			(DELETED BY SB 3251)		
R			(OPTIONAL AND FOR REPLACEMENT ORDER 65-22244-9)		
R	15	65-22244-9	. SUPPORT ASSY, FILLET FLAP DRIVE SCREW (LH ONLY) . . .	0150	1
R			(DELETED BY SB 3251)		
R			(OPTIONAL AND FOR REPLACEMENT ORDER 65-22244-13)		
R	15	65-22244-13	. SUPPORT ASSY, FILLET FLAP DRIVE SCREW	5199	1
R	15	65-22244-10	. SUPPORT ASSY, FILLET FLAP DRIVE SCREW (RH ONLY) . . .	0150	1
R			(DELETED BY SB 3251)		
R			(OPTIONAL AND FOR REPLACEMENT ORDER 65-22244-14)		
R	15	65-22244-14	. SUPPORT ASSY, FILLET FLAP DRIVE SCREW (RH ONLY) . . .	0150	1
R			(DELETED BY SB 3251)		
R			(OPTIONAL TO AND REPLACEMENT FOR 65-22244-10)		
R	15	65-22244-14	. SUPPORT ASSY, FILLET FLAP DRIVE SCREW (RH ONLY) . . .	0150	1
R			(REPLACES 65-22244-10 BY SB 3281)		
R	15	65-22244-14	. SUPPORT ASSY, FILLET FLAP DRIVE SCREW	5199	1
	16	BACB10C196	. . BEARING		1
R	16A	65-22244-11	. . SUPPORT, FILLET FLAP DRIVE SCREW (USED ON	5199	1
R			65-22244-9)		
R	16A	65-22244-11	. . SUPPORT, FILLET FLAP DRIVE SCREW (USED ON	0150	1
R			65-22244-9) (DELETED BY SB 3251)		
R	16A	65-22244-12	. . SUPPORT, FILLET FLAP DRIVE SCREW (USED ON	5199	1
R			65-22244-10)		
R	16A	65-22244-12	. . SUPPORT, FILLET FLAP DRIVE SCREW (USED ON	0150	1
R			65-22244-10) (DELETED BY SB 3251)		
R	16A	65-22244-15	. . SUPPORT, FILLET FLAP DRIVE SCREW (USED ON	5199	1
R			65-22244-13)		
R	16A	65-22244-15	. . SUPPORT, FILLET FLAP DRIVE SCREW (USED ON	0150	1
R			65-22244-13) (ADDED BY SB 3251)		
R	16A	65-22244-16	. . SUPPORT, FILLET FLAP DRIVE SCREW (USED ON	5199	1
R			65-22244-14)		
R	16A	65-22244-16	. . SUPPORT, FILLET FLAP DRIVE SCREW (USED ON	0150	1
R			65-22244-14) (ADDED BY SB 3251)		
	17	69-17773-5	. FITTING ASSY, FAIRING SUPPORT (LH ONLY)		1
	17	69-17773-6	. FITTING ASSY, FAIRING SUPPORT (RH ONLY)		1
			ATTACHING PARTS		
		BACB30N8	. BOLT.		2
		BACS40A18-50	. SHIM.		AR
		NAS1080C8	. COLLAR.		2
			-------*-------		
	18	NAS77A4-19P	. . BUSHING		1
	19	69-17773-5	. FITTING ASSY, FAIRING SUPPORT (LH ONLY)		1
	19	69-17773-6	. FITTING ASSY, FAIRING SUPPORT (RH ONLY)		1
			ATTACHING PARTS		
		BACB30N8	. BOLT.		2
		BACS40A20-38	. SHIM.		AR
		NAS1080C8	. COLLAR.		2
			-------*-------		
	20	NAS77A4-19P	. . BUSHING		1
	21	69-15777-1	. CAM, WING INBOARD END FLAPERETTE ACTUATION (LH ONLY)		1
	21	69-15777-2	. CAM, WING INBOARD END FLAPERETTE ACTUATION (RH ONLY)		1
			ATTACHING PARTS		
		NAS334CPA7	. BOLT.		3
		NAS334CPA11	. BOLT.		1
			-------*-------		
R	22	65-21987-5	. FITTING ASSY, FILLET FLAP INBOARD HINGE SUPPORT (LH .	0150	1
R			ONLY)		
R			(OPTIONAL 65-21987-9)		
R	22	65-21987-9	. FITTING ASSY, FILLET FLAP INBOARD HINGE SUPPORT (LH .	0150	1
R			ONLY)		
R			(OPTIONAL TO 65-21987-5)		
R	22	65-21987-9	. FITTING ASSY, FILLET FLAP INBOARD HINGE SUPPORT (LH .	5199	1
R			ONLY)		
R	22	65-21987-6	. FITTING ASSY, FILLET FLAP INBOARD HINGE SUPPORT (RH .	0150	1
R			ONLY)		
R			(OPTIONAL 65-21987-10)		
R	22	65-21987-10	. FITTING ASSY, FILLET FLAP INBOARD HINGE SUPPORT (RH .	0150	1
R			ONLY)		
R			(OPTIONAL TO 65-21987-6)		
R	22	65-21987-10	. FITTING ASSY, FILLET FLAP INBOARD HINGE SUPPORT (RH .	5199	1
R			ONLY)		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	72 23	69-16279-1	. . BUSHING, FILLET FLAP INBOARD HINGE SUPPORT.		1
	24	NAS516-1	. . FITTING		1
R	25	69-22961-5	. SUPPORT ASSY, INBOARD FILLET AREA COVE LIP DOOR LINK (LH ONLY) (OPTIONAL TO 69-22961-1)	0150	1
R	25	69-22961-1	. SUPPORT ASSY, INBOARD FILLET AREA COVE LIP DOOR LINK (LH ONLY) (OPTIONAL 69-22961-5)	0150	1
R	25	69-22961-5	. SUPPORT ASSY, INBOARD FILLET AREA COVE LIP DOOR LINK (LH ONLY)	5199	1
R	25	69-22961-6	. SUPPORT ASSY, INBOARD FILLET AREA COVE LIP DOOR LINK (RH ONLY) (OPTIONAL TO 69-22961-2)	0150	1
R	25	69-22961-2	. SUPPORT ASSY, INBOARD FILLET AREA COVE LIP DOOR LINK (RH ONLY) (OPTIONAL 69-22961-6)	0150	1
R	25	69-22961-6	. SUPPORT ASSY, INBOARD FILLET AREA COVE LIP DOOR LINK (RH ONLY)	5199	1
			ATTACHING PARTS		
		NAS1104-5W	. BOLT.		2
		AN960PD416L	. WASHER.		2
		BACS40B16-16	. SHIM.		AR
		NAS679A4W	. NUT		2
			-------*-------		
	26	90-9473-36	. . BUSHING		1
	27	BACB30AU8-7	. BOLT.		2
	28	BACB30N8-13	. BOLT.		3
	29	65-22291-1	. FITTING, TORQUE BOX CHORD TO TOP SKIN ATTACH. . . . (LH ONLY)		1
	29	65-22291-2	. FITTING, TORQUE BOX CHORD TO TOP SKIN ATTACH. . . . . (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

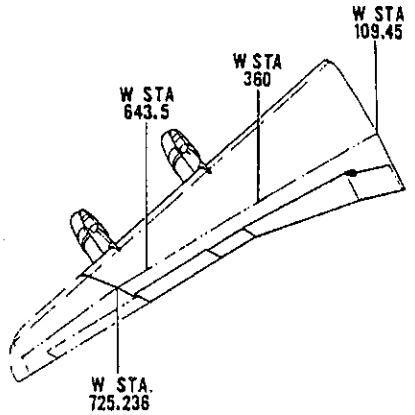

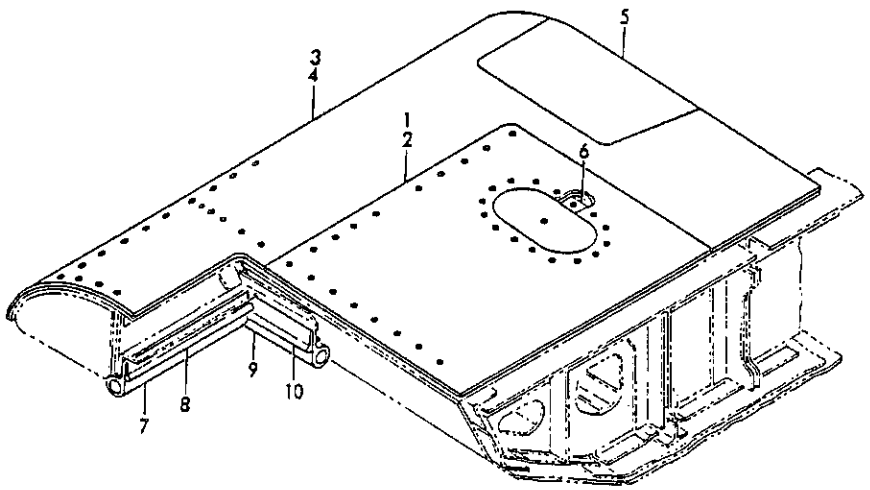


FIGURE 73. NOSE INSTL, OUTBOARD FILLET FLAP

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
73	65-19191-131	NOSE INSTL, OUTBOARD FILLET FLAP (LH) (SEE FIG. 28, ITEM 1)		RF
	65-19191-132	NOSE INSTL, OUTBOARD FILLET FLAP (RH) (SEE FIG. 28, ITEM 1)		RF
2	65-19191-173	. SKIN, OUTBOARD FILLET FLAP NOSE OUTER (LH ONLY)		1
2	65-19191-174	. SKIN, OUTBOARD FILLET FLAP NOSE OUTER (RH ONLY)		1
4	65-19191-175	. . SKIN, OUTBOARD FILLET FLAP NOSE OUTER (LH ONLY)		1
4	65-19191-176	. . SKIN, OUTBOARD FILLET FLAP NOSE OUTER (RH ONLY)		1
5	65-19191-109	. COVER, OUTBOARD FILLET FLAP NOSE DOOR (LH ONLY)		1
5	65-19191-110	. COVER, OUTBOARD FILLET FLAP NOSE DOOR (RH ONLY)		1
		ATTACHING PARTS		
	NAS517-3-4	. SCREW		17
		-------*-------		
6	65-19191-92	. DOOR ASSY, OUTBOARD FILLET FLAP NOSE.		1
		ATTACHING PARTS		
	NAS517-3-3	. SCREW		17
		-------*-------		
7	65-19191-33	. SEAL, OUTBOARD FILLET FLAP NOSE (LH ONLY) (EXTRUSION NO. BAC1530-6 X 4.4 IN. LG)		1
7	65-19191-34	. SEAL, OUTBOARD FILLET FLAP NOSE (RH ONLY) (EXTRUSION NO. BAC1530-6 X 4.4 IN. LG)		1
		ATTACHING PARTS		
	NAS1103-4	. BOLT.		2
	AN960PD10	. WASHER.		2
	NAS679A3W	. NUT		2
		-------*-------		
8	65-19191-25	. RETAINER, OUTBOARD FILLET FLAP NOSE SEAL.		1
9	65-19191-32	. SEAL, OUTBOARD FILLET FLAP NOSE (EXTRUSION NO. BAC1530-6 X 6.7 IN. LG)		1
		ATTACHING PARTS		
	NAS1103-7	. BOLT.		3
	AN960PD10	. WASHER.		3
	NAS679A3W	. NUT		3
		-------*-------		
10	65-19191-26	. RETAINER, OUTBOARD FILLET FLAP NOSE SEAL.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

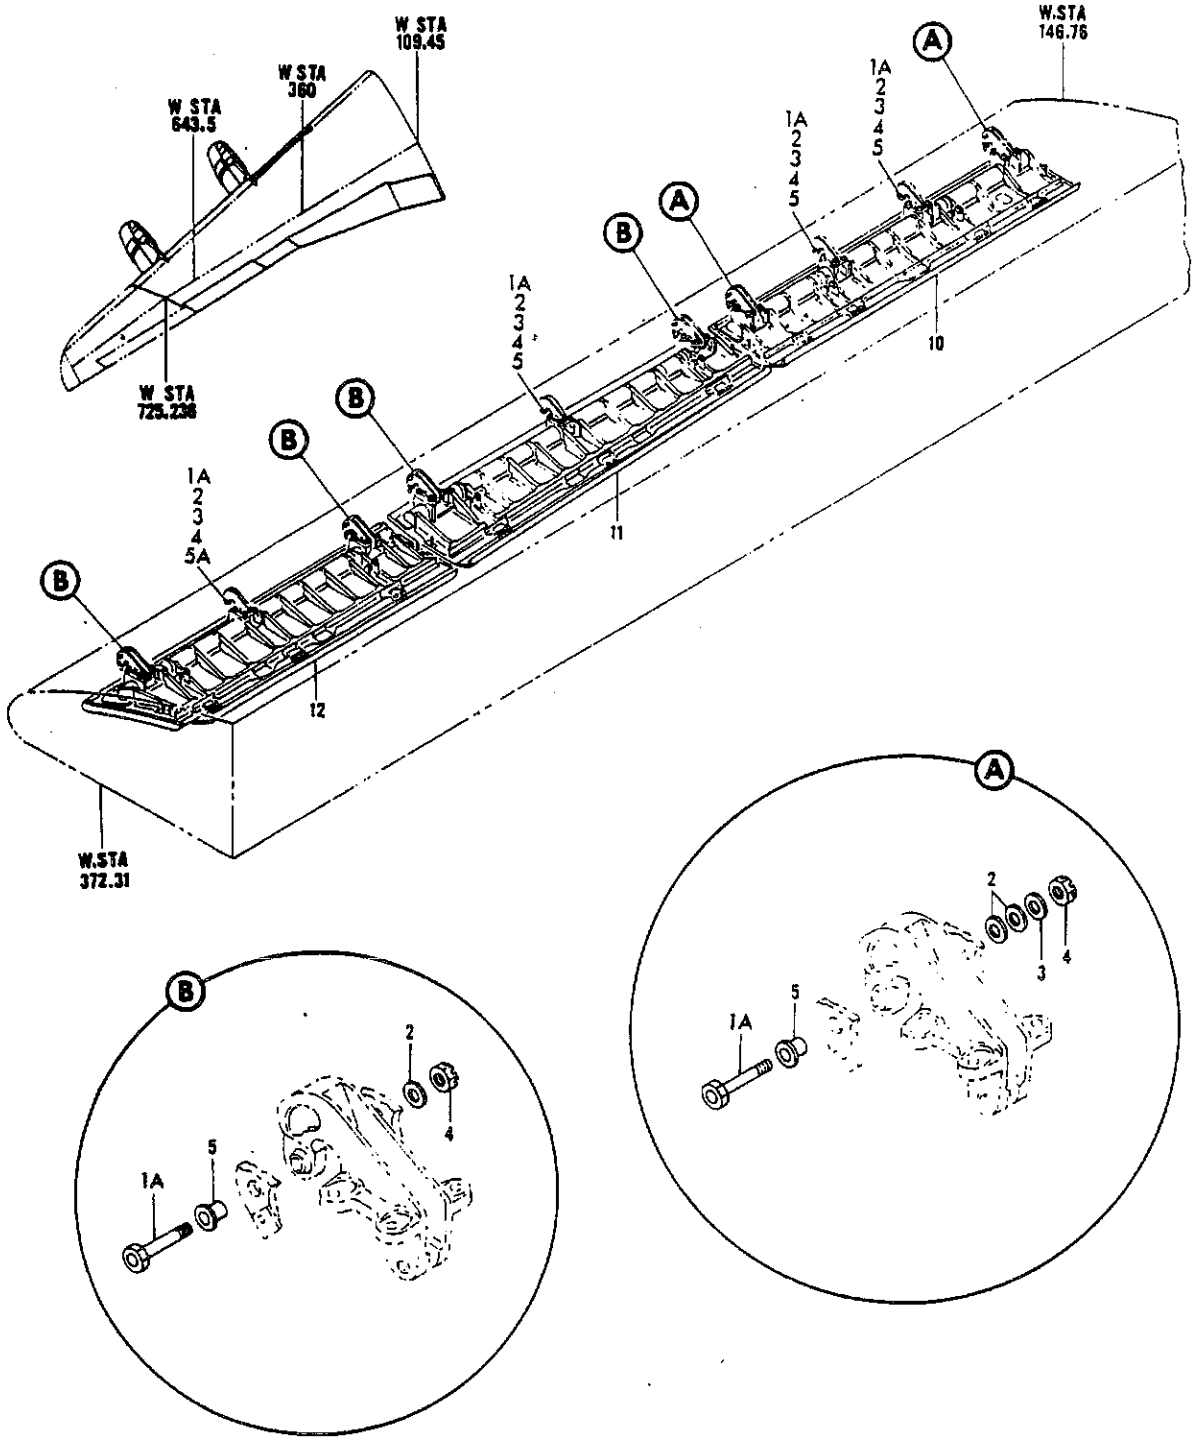


FIGURE 78. FLAP INSTL, FRONT SPAR STATION 146.76 TO 382.66 WING LEADING EDGE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R	78	65-32507-1	FLAP INSTL, FRONT SPAR STATION 146.76 TO 382.66 WING. . LEADING EDGE (LH) (SEE 57-4, FIG. 8, ITEM 23)	0150	RF
R R R R R		65-32507-1	FLAP INSTL, FRONT SPAR STATION 146.76 TO 382.66 WING. . LEADING EDGE (LH) (VARIABLE DWG;65-32507-5001) (SEE 57-4, FIG. 8, ITEM 23)	5199	RF
R R R R R		65-32507-2	FLAP INSTL, FRONT SPAR STATION 146.76 TO 382.66 WING. . LEADING EDGE (RH) (VARIABLE DWG;65-32507-5002) (SEE 57-4, FIG. 8, ITEM 23)	5199	RF
R R R		65-32507-2	FLAP INSTL, FRONT SPAR STATION 146.76 TO 382.66 WING. . LEADING EDGE (RH) (SEE 57-4, FIG. 8, ITEM 23)	0150	RF
	1A	NAS1108-32DW	. BOLT.		10
	2	AN960-816	. WASHER.		14
	3	AN960-816L	. WASHER.		6
	4	AN320-8	. NUT		10
	5	69-14435-7	. BUSHING, PRESS FIT FLANGED.		9
	5A	NAS77-8-76	. BUSHING		1
R R R	10	65-31924-1	. FLAP ASSY, STATION 146.76 TO 222.59 (LH ONLY) (SEE. . FIG. 79)	0150	1
R R R	10	65-31924-2	. FLAP ASSY, STATION 146.76 TO 222.59 (RH ONLY) (SEE. . FIG. 79)	0150	1
R R R	10	65-31924-45A	. FLAP ASSY, STATION 146.76 TO 222.59 (LH ONLY) (SEE. . FIG. 79)	5199	1
R R R	10	65-31924-46A	. FLAP ASSY, STATION 146.76 TO 222.59 (RH ONLY) (SEE. . FIG. 79)	5199	1
R R R	11	65-31923-1	. FLAP ASSY, STATION 222.59 TO 305.80 (LH ONLY) (SEE. . FIG. 80)	0150	1
R R R	11	65-31923-2	. FLAP ASSY, STATION 222.59 TO 305.80 (RH ONLY) (SEE. . FIG. 80)	0150	1
R R R	11	65-31923-43A	. FLAP ASSY, FRONT SPAR STATION 222.59 TO 305.80 (LH. . ONLY) (SEE FIG. 80)	5199	1
R R R	11	65-31923-44A	. FLAP ASSY, FRONT SPAR STATION 222.59 TO 305.80 (RH. . ONLY) (SEE FIG. 80)	5199	1
R R R R	12	65-31922-1	. FLAP ASSY, STATION 305.80 TO 382.66 (LH ONLY) (SEE. . FIG. 81) (OPTIONAL 65-31922-29)	0150	1
R R R R	12	65-31922-29	. FLAP ASSY, STATION 305.80 TO 382.66 (LH ONLY) (SEE. . FIG. 81) (OPTIONAL TO 65-31922-1)	0150	1
R R R	12	65-31922-33A	. FLAP ASSY, STATION 305.80 TO 382.66 (LH ONLY) (SEE. . FIG. 81)	5199	1
R R R R	12	65-31922-2	. FLAP ASSY, STATION 305.80 TO 382.66 (RH ONLY) (SEE. . FIG. 81) (OPTIONAL 65-31922-30)	0150	1
R R R R	12	65-31922-30	. FLAP ASSY, STATION 305.80 TO 382.66 (RH ONLY) (SEE. . FIG. 81) (OPTIONAL TO 65-31922-2)	0150	1
R R R	12	65-31922-34A	. FLAP ASSY, STATION 305.80 TO 382.66 (RH ONLY) (SEE. . FIG. 81)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

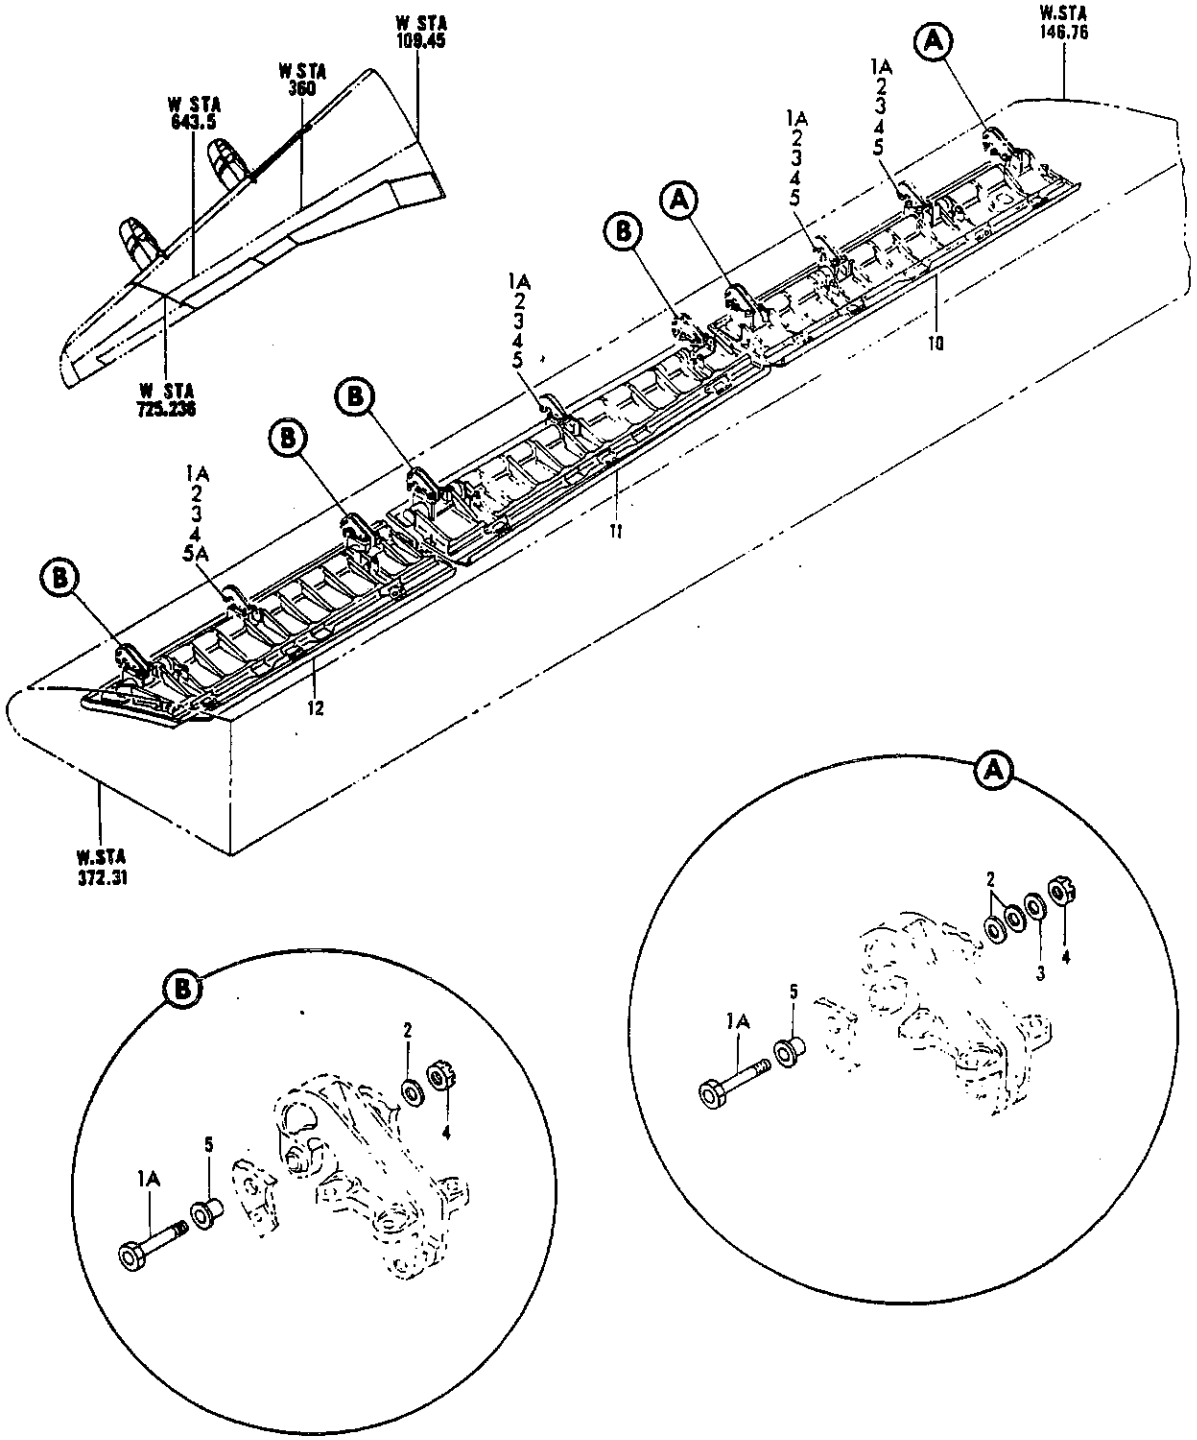


FIGURE 78. FLAP INSTL, FRONT SPAR STATION 146.76 TO 382.66 WING LEADING EDGE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	79	65-31924-1	FLAP ASSY, FRONT SPAR STATION 146.76 TO 222.59 WING . .	0150	RF
R			LEADING EDGE (LH) (SEE FIG. 78, ITEM 10)		
R		65-31924-45A	FLAP ASSY, FRONT SPAR STATION 146.76 TO 222.59 WING . .	5199	RF
R			LEADING EDGE (LH) (SEE FIG. 78, ITEM 10)		
R		65-31924-2	FLAP ASSY, FRONT SPAR STATION 146.76 TO 222.59 WING . .	0150	RF
R			LEADING EDGE (RH) (SEE FIG. 78, ITEM 10)		
R		65-31924-46A	FLAP ASSY, FRONT SPAR STATION 146.76 TO 222.59 WING . .	5199	RF
R			LEADING EDGE (RH) (SEE FIG. 78, ITEM 10)		
	1	AN7510-2	. PLATE		1
	2	BACJ40K5A5A4	. JUMPER.		2
			ATTACHING PARTS		
		BACB30ABP3-2	. BOLT.		2
		BACB30ABP3-4	. BOLT.		2
		AN960D10L	. WASHER.		8
		NAS679A3W	. NUT		4
			-------*-------		
	2A	BACJ40K7A6A5	. JUMPER.	0103	2
R	2A	BACJ40K7A6A5	. JUMPER, (DELETED BY SB 2746).	0450	2
R	2A	BACJ40K7A6A7	. JUMPER.	5199	2
R	2A	BACJ40K7A6A7	. JUMPER, (ADDED BY SB 2746).	0450	2
			ATTACHING PARTS		
		MS20005-13	. BOLT.		2
		MS20002C5	. WASHER.		2
		NAS578-5B	. RETAINER.		2
		NAS577-5A	. NUT		2
			-------*-------		
R	3	65-32268-1	. FITTING ASSY, HINGE (DELETED BY SB 2956).	0150	2
R	3	65-32268-4	. FITTING ASSY, HINGE (ADDED BY SB 2956).	0150	2
R	3	65-32268-5	. FITTING ASSY, HINGE	5199	2
			ATTACHING PARTS		
	3A	MS20005-13	. BOLT.		4
	3B	MS20005-19	. BOLT.		4
	3C	MS20002C5	. WASHER.		8
	3D	66-20192-1	. WASHER, LEADING EDGE FLAP RADIUS.		4
	3E	BACS40H19-64	. SHIM.		4
	3F	NAS578-5B	. RETAINER.		4
	3G	NAS577-5A	. NUT		4
	3H	BACN10B-L5L	. NUT		4
			-------*-------		
R	4	BACB28U6B46	. . BUSHING	5199	2
R	4	69-14580-11	. . BUSHING, SUPPORT (DELETED BY SB 2956)	0150	2
R	4	BACB28U6B46	. . BUSHING, (ADDED BY SB 2956)	0150	2
	5	BACB10M35	. . BEARING		1
			(OPTIONAL BAC SPEC NO. 10-60545-200S)		
			ATTACHING PARTS		
	5	10-60545-200S	. . BEARING		1
			(OPTIONAL TO BACB10M35)		
			-------*-------		
R	6	65-32268-2	. . FITTING, WING LEADING EDGE FLAP HINGE	0150	1
R	6	65-32268-7	. . FITTING, WING LEADING EDGE FLAP HINGE	5199	1
R	6A	65-32271-1	. FITTING ASSY, LEADING EDGE FLAP HINGE	0150	1
R			(OPTIONAL 65-32271-9)		
R	6A	65-32271-9	. FITTING ASSY, HINGE	0150	1
R			(OPTIONAL TO 65-32271-1)		
R	6A	65-32271-9	. FITTING ASSY, HINGE	5199	1
R	7	65-32271-7	. FITTING ASSY, LEADING EDGE FLAP HINGE (LH ONLY) . . .	0150	1
R			(OPTIONAL 65-32271-13)		
R	7	65-32271-13	. FITTING ASSY, HINGE (LH ONLY)	0150	1
R			(OPTIONAL TO 65-32271-7)		
R	7	65-32271-13	. FITTING ASSY, HINGE (LH ONLY)	5199	1
R	7	65-32271-8	. FITTING ASSY, LEADING EDGE FLAP HINGE (RH ONLY) . . .	0150	1
R			(OPTIONAL 65-32271-14)		
R	7	65-32271-14	. FITTING ASSY, HINGE (RH ONLY)	0150	1
R			(OPTIONAL TO 65-32271-8)		
R	7	65-32271-14	. FITTING ASSY, HINGE (RH ONLY)	5199	1
			ATTACHING PARTS		
		MS20004-13	. BOLT.		8
		MS20002C4	. WASHER.		8
		BACS40E52-66	. SHIM.		2
		NAS578-4B	. RETAINER.		8
		NAS577-4A	. NUT		8
			-------*-------		
	8	BACB10M35	. . BEARING		1
			(OPTIONAL BAC SPEC NO. 10-60545-200S)		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	79 8	10-60545-200S	. . BEARING (OPTIONAL TO BAC810M35)		1
	9	66-18901-1	. . STRIKER, LEADING EDGE FLAP POSITION INDICATOR SWITCH (OUTBOARD)		1
			ATTACHING PARTS		
		MS20426D4	. . RIVET		2
			-------*-------		
R	9A	65-32271-2	. . FITTING, LEADING EDGE FLAP HINGE (USED ON 65-32271-1)	0150	1
R	9A	65-32271-10	. . FITTING, LEADING EDGE FLAP HINGE (USED ON 65-32271-9)		1
R	10	65-32271-5	. . FITTING, LEADING EDGE FLAP HINGE (USED ON 65-32271-7)	0150	1
R	10	65-32271-6	. . FITTING, LEADING EDGE FLAP HINGE (USED ON 65-32271-8)	0150	1
	10	65-32271-11	. . FITTING, LEADING EDGE FLAP HINGE (USED ON 65-32271-13)		1
	10	65-32271-12	. . FITTING, LEADING EDGE FLAP HINGE (USED ON 65-32271-14)		1
	10A	66-18901-1	. . STRIKER, LEADING EDGE FLAP POSITION INDICATOR SWITCH (INBOARD)		1
	12	69-25623-1	. BRACKET ASSY, INBOARD WING LEADING EDGE FLAP. (OPTIONAL AND FOR REPLACEMENT ORDER 69-46725-1)		4
	12	69-46725-1	. BRACKET ASSY, INBOARD WING LEADING EDGE FLAP. (OPTIONAL TO AND REPLACEMENT FOR 69-25623-1)		4
			ATTACHING PARTS		
		NAS334CPA5	. BOLT.		4
		AN960PD416	. WASHER.		4
		NAS679A4W	. NUT		4
			-------*-------		
	13	NAS77A5-60P	. . BUSHING		1
	14	69-25623-2	. . BRACKET, INBOARD WING LEADING EDGE FLAP (USED ON. 69-25623-1)		1
	14	69-46725-2	. . BRACKET, INBOARD WING LEADING EDGE FLAP (USED ON. 69-46725-1)		1
	15	65-31924-21	. SHIM, FRONT SPAR STATION 146.76 TO 222.59 WING. LEADING EDGE FLAP		2
	16	65-31924-22	. SHIM, FRONT SPAR STATION 146.76 TO 222.59 WING. LEADING EDGE FLAP		2
	17	66-17343-3	. PAD, INBOARD WING LINKAGE STOP.		2
			ATTACHING PARTS		
		NAS623-3-4W	. SCREW		4
		AN960PD10	. WASHER.		8
		NAS43DD3-7	. SPACER.		4
		NAS679A3W	. NUT		4
			-------*-------		
	18	65-31924-41	. RETAINER, (USED WITH 65-31924-42) (OPTIONAL AND FOR REPLACEMENT ORDER 65-31924-25 WITH -20)		1
	18	65-31924-25	. RETAINER, (USED WITH 65-31924-20) (OPTIONAL TO AND REPLACEMENT FOR 65-31924-41 WITH -42)		1
			ATTACHING PARTS		
		NAS514P632-6	. SCREW		25
		AN960PD6L	. WASHER.		25
		NAS679A06W	. NUT		25
			-------*-------		
	19	65-31924-42	. SEAL, (EXTRUSION NO. BAC1530-44 X 73.8 IN. LG) (USED WITH 65-31924-41) (OPTIONAL AND FOR REPLACEMENT ORDER 65-31924-20 WITH -25)		1
	19	65-31924-20	. SEAL, (EXTRUSION NO. BAC1530-32 X 73.8 IN. LG). (USED WITH 65-31924-25) (OPTIONAL TO AND REPLACEMENT FOR 65-31924-42 WITH -41)		1
R	20	65-32509-5	. FAIRING ASSY, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP (LH ONLY) (SEE FIG. 86)	0150	1
R	20	65-32509-27	. FAIRING ASSY, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP (LH ONLY) (SEE FIG. 86)	5199	1
R	20	65-32509-6	. FAIRING ASSY, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP (RH ONLY) (SEE FIG. 86)	0150	1
R	20	65-32509-28	. FAIRING ASSY, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP (RH ONLY) (SEE FIG. 86)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	79		ATTACHING PARTS		
		BACB30EL4CN9	. BOLT.		4
		BACB30EL4CN10	. BOLT.		4
		BACS40D15-31	. SHIM.		4
		AN960PD416	. WASHER.		8
		NAS679A4W	. NUT		8
			-------*-------		
	21	65-31924-31	. ANGLE, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP STOP SUPPORT		1
	22	65-31924-32	. ANGLE, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP STOP SUPPORT		1
			ATTACHING PARTS		
		BACB30FM8-3	. BOLT.		4
		BACB30DX6-6	. BOLT.		8
		BACB30DX6-8	. BOLT, (USED WITH 65-31924-32)		2
		BACB30DY6-8	. BOLT, (USED WITH 65-31924-31)		1
		BACS40A12-12	. SHIM, (USED WITH 65-31924-31)		1
		BACS40A16-16	. SHIM.		4
		NAS1080-6	. COLLAR, (USED WITH BACB30DX6 AND BACB30DY6 BOLTS)		11
		BACC30M8	. COLLAR, (USED WITH BACB30FM8-3)		4
			-------*-------		
	23	65-31924-33	. ANGLE, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP CLIP (LH ONLY)		1
	23	65-31924-34	. ANGLE, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP CLIP (RH ONLY)		1
			ATTACHING PARTS		
		MS20470D6	. RIVET		2
		BACB30GW6-5	. BOLT.		1
		BACC30K6	. COLLAR.		1
			-------*-------		
	24	65-31924-35	. ANGLE, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP CLIP (LH ONLY)		2
	24	65-31924-36	. ANGLE, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP CLIP (RH ONLY)		2
			ATTACHING PARTS		
		MS20470D6	. RIVET		4
		BACB30GW6-4	. BOLT.		2
		BACS47D12-42A	. SHIM.		2
		BACC30K6	. COLLAR.		2
			-------*-------		
	25	65-31924-27	. ANGLE, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP HINGE SUPPORT (LH ONLY)		1
	25	65-31924-28	. ANGLE, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP HINGE SUPPORT (RH ONLY)		1
			ATTACHING PARTS		
		BACB30GY6-5	. BOLT.		5
		65-31924-39	. FILLER, FRONT SPAR STATION 146.76 TO 222.59 WING. LEADING EDGE FLAP HINGE SUPPORT ANGLE		1
		BACC30K6	. COLLAR.		5
			-------*-------		
	26	65-31924-29	. ANGLE, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP HINGE SUPPORT (LH ONLY)		1
	26	65-31924-30	. ANGLE, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP HINGE SUPPORT (RH ONLY)		1
			ATTACHING PARTS		
		BACB30GY6-5	. BOLT.		10
		65-31924-40	. FILLER, FRONT SPAR STATION 146.76 TO 222.59 WING. LEADING EDGE FLAP HINGE SUPPORT ANGLE		1
		BACC30K6	. COLLAR.		10
			-------*-------		
	27	65-31924-37	. ANGLE, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP CLIP (LH ONLY)		1
	27	65-31924-38	. ANGLE, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP CLIP (RH ONLY)		1
			ATTACHING PARTS		
		MS20470D6	. RIVET		2
		BACB30GW6-5	. BOLT.		1
		BACS47D12-38A	. SHIM.		1
		BACC30K6	. COLLAR.		1
			-------*-------		
R R R	28	65-32240-1	. TORQUE TUBE, FRONT SPAR STATION 146 TO 222 WING LEADING EDGE FLAP (LH ONLY) (OPTIONAL 65-32240-3)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R	79 28	65-32240-3	. TORQUE TUBE, FRONT SPAR STATION 146 TO 222 WING . . . LEADING EDGE FLAP (LH ONLY) (OPTIONAL TO 65-32240-1)	0150	1
R R	28	65-32240-3	. TORQUE TUBE, FRONT SPAR STATION 146 TO 222 WING . . . LEADING EDGE FLAP (LH ONLY)	5199	1
R R R R	28	65-32240-2	. TORQUE TUBE, FRONT SPAR STATION 146 TO 222 WING . . . LEADING EDGE FLAP (RH ONLY) (OPTIONAL 65-32240-4)	0150	1
R R R R	28	65-32240-4	. TORQUE TUBE, FRONT SPAR STATION 146 TO 222 WING . . . LEADING EDGE FLAP (RH ONLY) (OPTIONAL TO 65-32240-2)	0150	1
R R	28	65-32240-4	. TORQUE TUBE, FRONT SPAR STATION 146 TO 222 WING . . . LEADING EDGE FLAP (RH ONLY)	5199	1
			ATTACHING PARTS		
		BACB30FM6-3	. BOLT.		4
		BACB30FM6-5	. BOLT.		3
		BACB30FM6-7	. BOLT.		5
		BACB30FM8-3	. BOLT.		4
		BACB30FM8-5	. BOLT.		10
		BACB30FM8-7	. BOLT.		3
		BACB30FN8-8	. BOLT.		63
		BACB30FN8-7	. BOLT.		16
		BACB30FN6-7	. BOLT.		24
		BACB30FN6-8	. BOLT.		6
		BACB30EL4CN7	. BOLT.		13
		BACB30EL4CN8	. BOLT.		15
		NAS1103-7W	. BOLT.		1
		BACW10T416L	. WASHER, (USED WITH BACB30FM8 AND BACB30FN8 BOLTS) . .		96
		BACW10T10L	. WASHER, (USED WITH BACB30FN6 AND NAS1103-7W BOLTS). .		31
		BACW10T416	. WASHER, (USED WITH BACB30EL4CN BOLTS)		28
		NAS1080D6	. COLLAR, (USED WITH BACB30FM6 BOLTS)		12
		BACC30M8	. COLLAR, (USED WITH BACB30FN8 BOLTS)		79
		BACC30M6	. COLLAR, (USED WITH BACB30FN6 BOLTS)		30
		NAS679A4W	. NUT, (USED WITH BACB30EL4CN BOLTS).		28
		NAS679A3W	. NUT, (USED WITH NAS1103-7W)		1
			--------*--------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

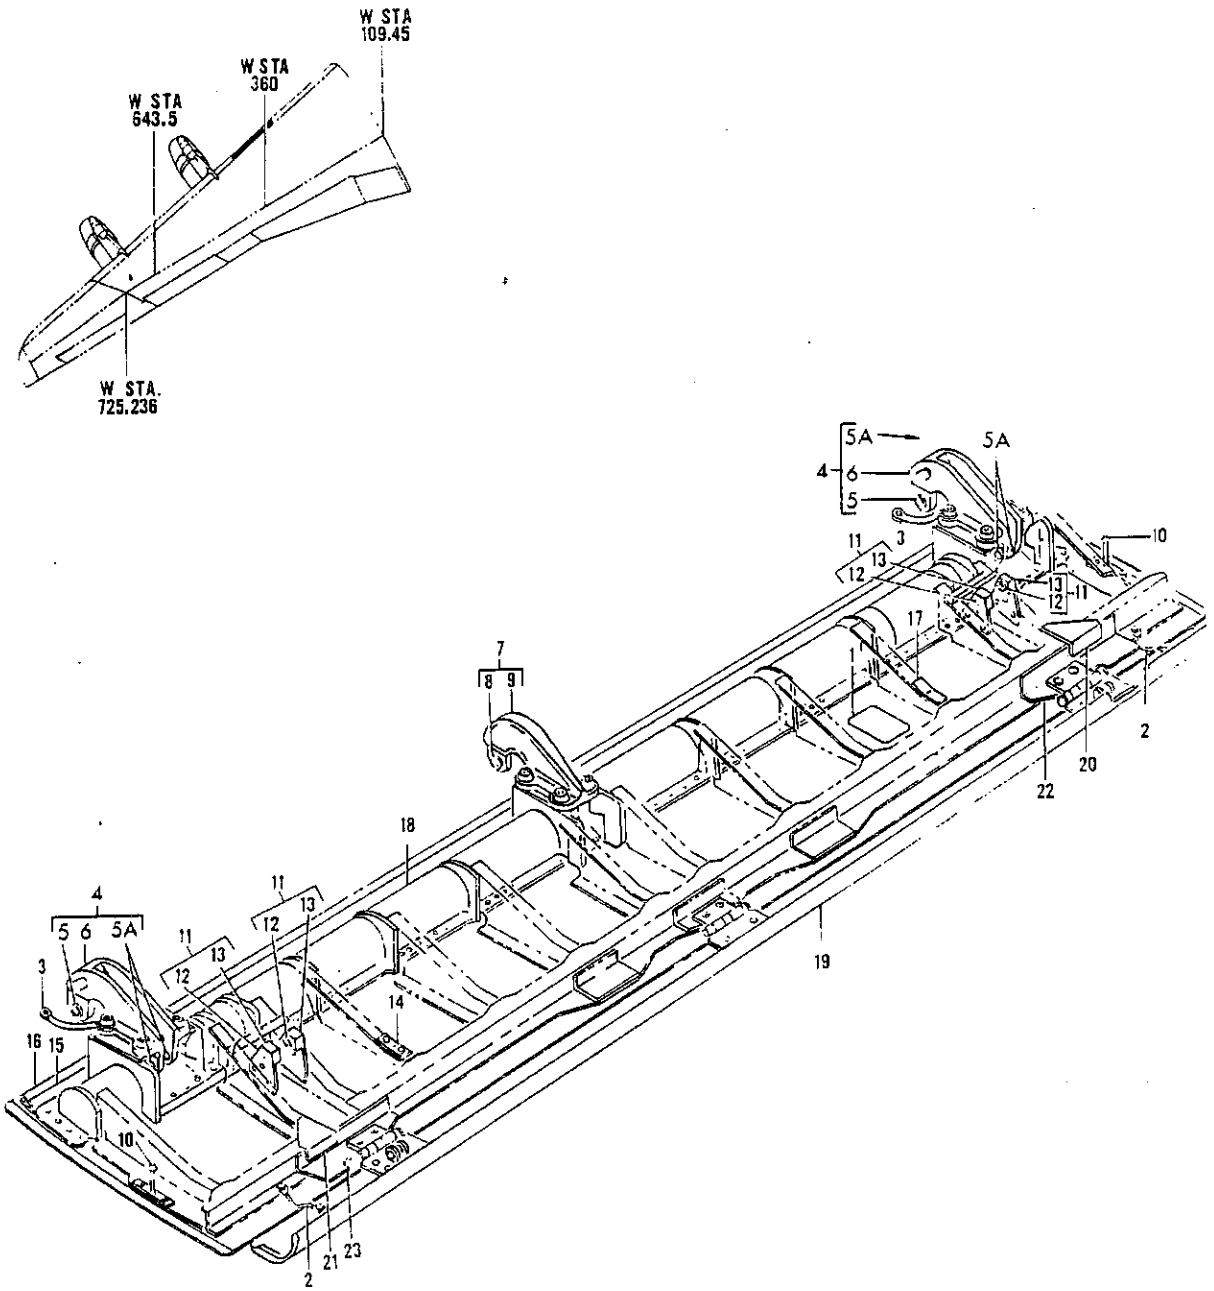


FIGURE 80. FLAP ASSY, FRONT SPAR STATION 222.59 TO 305.80 WING LEADING EDGE NO. 2

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	80	65-31923-1	FLAP ASSY, FRONT SPAR STATION 222.59 TO 305.80 WING LEADING EDGE (LH) (SEE FIG. 78, ITEM 11)	0150	RF
		65-31923-43A	FLAP ASSY, FRONT SPAR STATION 222.59 TO 305.80 WING LEADING EDGE (LH) (SEE FIG. 78, ITEM 11)	5199	RF
		65-31923-2	FLAP ASSY, FRONT SPAR STATION 222.59 TO 305.80 WING LEADING EDGE (RH) (SEE FIG. 78, ITEM 11)	0150	RF
		65-31923-44A	FLAP ASSY, FRONT SPAR STATION 222.59 TO 305.80 WING LEADING EDGE (RH) (SEE FIG. 78, ITEM 11)	5199	RF
	1	AN7510-2	. NAMEPLATE		1
	2	BACJ40K5A5A4	. JUMPER		2
			ATTACHING PARTS		
		BACB30ABP3-2	. BOLT		2
		BACB30ABP3-4	. BOLT		2
		AN960D10L	. WASHER		8
		NAS679A3W	. NUT		4
			-------*-------		
	3	BACJ40K7A6A5	. JUMPER	0103	2
	3	BACJ40K7A6A5	. JUMPER, (DELETED BY SB 2746)	0450	2
	3	BACJ40K7A6A7	. JUMPER	5199	2
	3	BACJ40K7A6A7	. JUMPER, (ADDED BY SB 2746)	0450	2
			ATTACHING PARTS		
		BACB30CW5-10	. BOLT		2
		BACW10AKC5	. WASHER		2
		NAS578-5B	. RETAINER		2
		NAS577-5A	. NUT		2
			-------*-------		
	4	65-32220-1	. FITTING ASSY, HINGE (DELETED BY SB 2956)	0150	2
	4	65-32220-4	. FITTING ASSY, HINGE (ADDED BY SB 2956)	0150	2
	4	65-32220-4	. FITTING ASSY, HINGE (USED ON 65-31923-39 AND -40)	5199	2
			ATTACHING PARTS		
		BACB30CW5-10	. BOLT		2
R		BACB30CW5-19	. BOLT		4
		BACW10AKC5	. WASHER		6
		66-20192-1	. WASHER, LEADING EDGE FLAP RADIUS		4
		BACS40B19-68	. SHIM		8
		NAS578-5B	. RETAINER		2
		NAS577-5A	. NUT		2
		BACN10B-L5L	. NUT		4
			-------*-------		
	5	BACB10M35	. . BEARING		1
	5A	BACB28U7B52	. . BUSHING, (ADDED BY SB 2956)	0150	1
	6	65-32220-2	. . FITTING, (DELETED BY SB 2956)	0150	1
	6	65-32220-5	. . FITTING, (ADDED BY SB 2956)	0150	1
	7	65-32270-1	. FITTING ASSY, LEADING EDGE FLAP HINGE		1
			ATTACHING PARTS		
		NAS1305-9W	. BOLT		4
		AN960-516	. WASHER		4
		BACS40B19-68	. SHIM		4
		NAS578-5B	. RETAINER		4
		NAS577-5A	. NUT		4
			-------*-------		
	8	BACB10M35	. . BEARING		1
	9	65-32270-2	. . FITTING, LEADING EDGE FLAP HINGE		1
	11	69-46725-1	. BRACKET ASSY, INBOARD WING LEADING EDGE FLAP (OPTIONAL 69-25623-1)		4
	11	69-25623-1	. BRACKET ASSY, INBOARD WING LEADING EDGE FLAP (OPTIONAL TO 69-46725-1)		4
			ATTACHING PARTS		
		NAS1104-3W	. BOLT		8
		AN960PD416	. WASHER		8
		BACS40B16-40	. SHIM		4
		BACS47D16-40A	. SHIM		2
		NAS679A4W	. NUT		8
			-------*-------		
	12	NAS77A5-60P	. . BUSHING		1
	13	69-46725-2	. . BRACKET, (USED ON 69-46725-1)		4
	13	69-25623-2	. . BRACKET, (USED ON 69-25623-1)		4
	14	66-17343-3	. PAD, INBOARD WING LINKAGE STOP		1
			ATTACHING PARTS		
		NAS623-3-4W	. SCREW		2
		AN960D10	. WASHER		4
		NAS43DD3-7	. SPACER		2
		NAS679A3W	. NUT		2
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	80 15	65-31923-36	. RETAINER, SEAL (USED WITH 65-31923-35). . . . . (OPTIONAL 65-31923-26 WITH 65-31923-15)		1
	15	65-31923-26	. RETAINER, SEAL (USED WITH 65-31923-15). . . . . (OPTIONAL TO 65-31923-36 WITH 65-31923-35)		1
			ATTACHING PARTS		
		NAS514P632-6	. SCREW		28
		AN960PD6L	. WASHER.		28
		NAS679A06W	. NUT		28
			-------*-------		
	16	65-31923-35	. SEAL, (EXTRUSION NO. BAC1530-44 X 81.2 IN. LG) (USED WITH 65-31923-36) (OPTIONAL 65-31923-15 WITH 65-31923-26)		1
	16	65-31923-15	. SEAL, (EXTRUSION NO. BAC1530-32 X 81.2 IN. LG) (USED WITH 65-31923-26) (OPTIONAL TO 65-31923-35 WITH 65-31923-36)		1
	17	65-31923-23	. PAD, FRONT SPAR STATION 222.59 TO 305.80 LEADING EDGE FLAP		1
R	18	65-32242-1	. TORQUE TUBE, (USED ON 65-31923-1, -37, -41)	0150	1
R	18	65-32242-2	. TORQUE TUBE, (USED ON 65-31923-2, -38, -42)	0150	1
R	18	65-32242-3	. TORQUE TUBE, (USED ON 65-31923-37, -39, -41, -43. . .	5199	1
R	18	65-32242-4	. TORQUE TUBE, (USED ON 65-31923-38, -40, -42, -44, . . -46)	5199	1
R			ATTACHING PARTS		
		BACB30FM6	. BOLT.		6
		BACB30FM6-3	. BOLT.		12
		BACB30FM6-5	. BOLT.		2
		BACB30FM6-7	. BOLT.		3
		BACB30FM8-3	. BOLT.		2
		BACB30FM8-5	. BOLT.		4
		BACB30FM8-7	. BOLT.		9
		NAS1103-3W	. BOLT.		1
		BACB30FN8-7	. BOLT.		18
		BACB30FN8-8	. BOLT.		19
		BACB30FN8-9	. BOLT.		72
		BACB30GY10-9	. BOLT.		1
		BACB30FN10-10	. BOLT.		10
		BACB30FN12-10	. BOLT.		4
		BACB30EL4CN7	. BOLT.		6
		BACB30EL4CN8	. BOLT.		18
		BACB30EL5CN9	. BOLT.		4
		BACW10T10L	. WASHER, (USED WITH BACB30FM6 AND NAS1103-3W BOLTS). .		24
		BACW10T416L	. WASHER, (USED WITH BACB30FM8 AND BACB30FN8 BOLTS) . .		AR
		BACW10T516L	. WASHER, (USED WITH BACB30GY10-9 AND BACB30FN10-10). .		11
		BACW10T616L	. WASHER, (USED WITH BACB30FN12-10)		4
		BACW10T516	. WASHER, (USED WITH BACB30EL5CN9).		4
		BACW10T416A	. WASHER, (USED WITH BACB30EL4CN8).		18
		BACC30M6	. COLLAR, (USED WITH BACB30FM6 BOLTS)		23
		BACC30M8	. COLLAR, (USED WITH BACB30FM8 AND BACB30FN8 BOLTS) . .		AR
		BACC30M10	. COLLAR, (USED WITH BACB30FN10-10)		10
		BACC30K10	. COLLAR, (USED WITH BACB30GY10-9).		1
		BACC30M12	. COLLAR, (USED WITH BACB30FN12-10)		4
		NAS679A3W	. NUT, (USED WITH NAS1103-3W)		1
		NAS679A4W	. NUT, (USED WITH BACB30EL4CN8)		18
		NAS679A5W	. NUT, (USED WITH BACB30EL5CN9)		4
			-------*-------		
R	19	65-32509-3	. FAIRING ASSY, FRONT SPAR STATION 222.50 TO 305.80 . .	0150	1
R			WING LEADING EDGE FLAP (LH ONLY) (SEE FIG. 87)		
R	19	65-32509-25	. FAIRING ASSY, FRONT SPAR STATION 222.50 TO 305.80 . .	5199	1
R			WING LEADING EDGE FLAP (LH ONLY) (SEE FIG. 87)		
R	19	65-32509-4	. FAIRING ASSY, FRONT SPAR STATION 222.50 TO 305.80 . .	0150	1
R			WING LEADING EDGE FLAP (RH ONLY) (SEE FIG. 87)		
R	19	65-32509-26	. FAIRING ASSY, FRONT SPAR STATION 222.50 TO 305.80 . .	5199	1
R			WING LEADING EDGE FLAP (RH ONLY) (SEE FIG. 87)		
			ATTACHING PARTS		
		BACB30EL4CN8	. BOLT.		6
		BACS40B16-31	. SHIM.		3
		AN960PD416	. WASHER.		6
		NAS679A4W	. NUT		6
			-------*-------		
	20	69-27891-5	. ANGLE, INBOARD WING LEADING EDGE FLAP UPSTOP. . . .		1
	21	69-27891-6	. ANGLE, INBOARD WING LEADING EDGE FLAP UPSTOP. . . .		1
			ATTACHING PARTS		
		BACB30FM6-6	. BOLT.		2
		BACB30DY6-5	. BOLT.		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
80	BACS40B12-24	. SHIM.		2
	BACC30M6	. COLLAR, (USED WITH BACB30FM6-6)		2
	NAS1080-6	. COLLAR, (USED WITH BACB30DY6-5)		2
		-------*-------		
22	69-27891-1	. ANGLE, INBOARD WING LEADING EDGE FLAP UPSTOP (LH. ONLY)		1
22	69-27891-2	. ANGLE, INBOARD WING LEADING EDGE FLAP UPSTOP (RH. ONLY)		1
		ATTACHING PARTS		
	BACR15CE6D	. RIVET		4
	BACB30GY6-6	. BOLT.		5
	65-31923-31	. FILLER, INBOARD WING LEADING EDGE FLAP UPSTOP ANGLE		1
	BACC30K6	. COLLAR.		5
		-------*-------		
23	69-27891-3	. ANGLE, INBOARD WING LEADING EDGE FLAP UPSTOP (LH. ONLY)		1
23	69-27891-4	. ANGLE, INBOARD WING LEADING EDGE FLAP UPSTOP (RH. ONLY)		1
		ATTACHING PARTS		
	BACR15CE6D	. RIVET		4
	BACB30GY6-6	. BOLT.		2
	NAS517-3-6	. SCREW		2
	65-31923-32	. FILLER, INBOARD WING LEADING EDGE FLAP UPSTOP ANGLE		1
	BACS4720-28A	. SHIM.		1
	BACS40L20-28	. SHIM.		1
	AN960PD10	. WASHER.		2
	BACC30K6	. COLLAR, (USED WITH BACB30GY6-6)		2
	NAS679A3W	. NUT		2
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

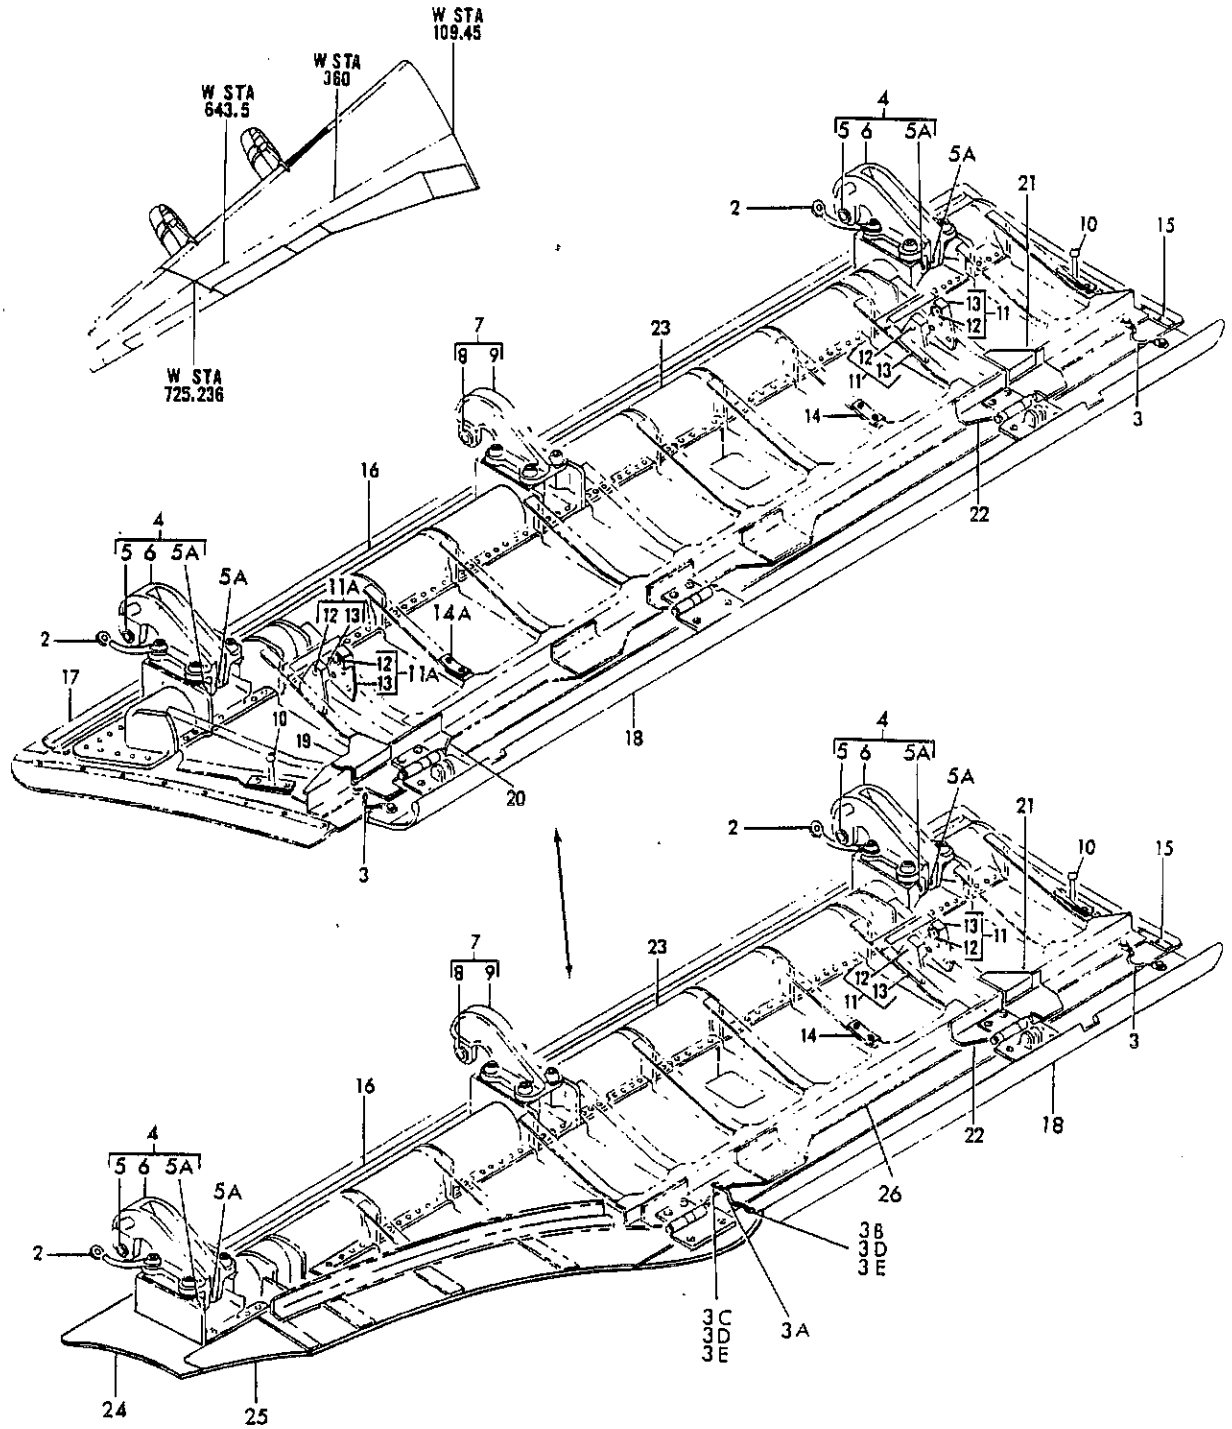


FIGURE 81. FLAP ASSY, FRONT SPAR STATION 305.80 TO 382.66 WING LEADING EDGE NO. 1

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	81	65-31922-1	FLAP ASSY, FRONT SPAR STATION 305.80 TO 382.66 WING . .	0150	RF
R			LEADING EDGE (LH) (SEE FIG. 78, ITEM 12)		
R			(OPTIONAL 65-31922-29)		
R		65-31922-29	FLAP ASSY, FRONT SPAR STATION 305.80 TO 382.66 WING . .	0150	RF
R			LEADING EDGE (LH) (SEE FIG. 78, ITEM 12)		
R			(OPTIONAL TO 65-31922-1)		
R		65-31922-33A	FLAP ASSY, FRONT SPAR STATION 305.80 TO 382.66 WING . .	5199	RF
R			LEADING EDGE (LH) (SEE FIG. 78, ITEM 12)		
R		65-31922-2	FLAP ASSY, FRONT SPAR STATION 305.80 TO 382.66 WING . .	0150	RF
R			LEADING EDGE (RH) (SEE FIG. 78, ITEM 12)		
R			(OPTIONAL 65-31922-30)		
R		65-31922-30	FLAP ASSY, FRONT SPAR STATION 305.80 TO 382.66 WING . .	0150	RF
R			LEADING EDGE (RH) (SEE FIG. 78, ITEM 12)		
R			(OPTIONAL TO 65-31922-2)		
R		65-31922-34A	FLAP ASSY, FRONT SPAR STATION 305.80 TO 382.66 WING . .	5199	RF
R			LEADING EDGE (RH) (SEE FIG. 78, ITEM 12)		
	1	AN7510-2	. PLATE		1
	2	BACJ40K7A6A5	. JUMPER.	0103	2
R	2	BACJ40K7A6A5	. JUMPER, (DELETED BY SB 2746).	0450	2
R	2	BACJ40K7A6A7	. JUMPER.	5199	2
R	2	BACJ40K7A6A7	. JUMPER, (ADDED BY SB 2746).	0450	2
			ATTACHING PARTS		
		BACB30CW5-10	. BOLT.		2
		BACW10AKC5	. WASHER.		2
		NAS578-5B	. RETAINER.		2
		NAS577-5A	. NUT		2
			-------*-------		
	3	BACJ40K5A5A4	. JUMPER.		2
			ATTACHING PARTS		
		BACB30ABP3-2	. BOLT.		2
		BACB30ABP3-4	. BOLT.		2
		AN960D10	. WASHER.		8
		NAS679A3W	. NUT		4
			-------*-------		
R	4	65-32220-1	. FITTING ASSY, HINGE (DELETED BY SB 2956).	0150	2
R	4	65-32220-4	. FITTING ASSY, HINGE	5199	2
R	4	65-32220-4	. FITTING ASSY, HINGE (ADDED BY SB 2956).	0150	2
			ATTACHING PARTS		
		BACB30CW5-10	. BOLT.		2
		BACB30CW5-19	. BOLT.		4
		BACW10AKC5	. WASHER.		6
		66-20192-1	. WASHER, LEADING EDGE FLAP RADIUS.		4
		BACS40B20-68	. SHIM.		AR
		NAS578-5B	. RETAINER.		2
		NAS577-5A	. NUT		2
		BACN10B-L5L	. NUT		4
			-------*-------		
	5	BACB10M35	. . BEARING		1
R	5A	BACB28U7B52	. . BUSHING	5199	2
R	5A	BACB28U7B52	. . BUSHING, (ADDED BY SB 2956)	0150	2
R	6	65-32220-2	. . FITTING, (DELETED BY SB 2956)	0150	1
R	6	65-32220-5	. . FITTING	5199	1
R	6	65-32220-5	. . FITTING, (ADDED BY SB 2956)	0150	1
	7	65-32270-1	. FITTING ASSY, LEADING EDGE FLAP HINGE		1
			ATTACHING PARTS		
		NAS1305-9W	. BOLT.		4
		AN960-516	. WASHER.		4
		BACS40B20-68	. SHIM.		AR
		NAS578-5B	. RETAINER.		4
		NAS577-5A	. NUT		4
			-------*-------		
	8	BACB10M35	. . BEARING		1
	9	65-32270-2	. . FITTING, LEADING EDGE FLAP HINGE.		1
	11	69-25623-1	. BRACKET ASSY.		2
			(OPTIONAL AND FOR REPLACEMENT ORDER 69-46725-1)		
	11	69-46725-1	. BRACKET ASSY.		2
			(OPTIONAL TO AND REPLACEMENT FOR 69-25623-1)		
			ATTACHING PARTS		
		NAS1104-3W	. BOLT.		4
		AN960PD416	. WASHER.		4
		BACS40B16-40	. SHIM.		2
		NAS679A4W	. NUT		4
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
81 11A	69-25623-1	. BRACKET ASSY. . . . . (OPTIONAL AND FOR REPLACEMENT ORDER 69-46725-1)		2
11A	69-46725-1	. BRACKET ASSY. . . . . (OPTIONAL TO AND REPLACEMENT FOR 69-25623-1)		2
		ATTACHING PARTS		
	NAS1104-3W	. BOLT.		4
	AN960PD416	. WASHER.		4
	BACS40B16-40	. SHIM.		2
	NAS679A4W	. NUT		4
		-------*-------		
12	NAS77A5-60P	. . BUSHING		1
13	69-25623-2	. . BRACKET, (USED ON 69-25623-1)		1
13	69-46725-2	. . BRACKET, (USED ON 69-46725-1)		1
14	66-17343-3	. PAD, INBOARD WING LINKAGE STOP.		1
		ATTACHING PARTS		
	NAS623-3-4W	. SCREW		2
	AN960PD10	. WASHER.		4
	NAS43DD3-7	. SPACER.		2
	NAS679A3W	. NUT		2
		-------*-------		
14A	66-17343-3	. PAD, INBOARD WING LINKAGE STOP.		1
		ATTACHING PARTS		
	NAS623-3-4W	. SCREW		2
	AN960PD10	. WASHER.		4
	NAS43DD3-7	. SPACER.		2
	NAS679A3W	. NUT		2
		-------*-------		
15	65-31922-15	. STRIP, FRONT SPAR STATION 305.80 TO 382.66 WING . . . LEADING EDGE FLAP RUB		1
16	65-31922-19	. RETAINER, FRONT SPAR STATION 305.80 TO 382.66 WING. . LEADING EDGE FLAP SEAL (OPTIONAL AND FOR REPLACEMENT ORDER 65-31922-26)		1
16	65-31922-26	. RETAINER, SEAL. . . . . (OPTIONAL TO AND REPLACEMENT FOR 65-31922-19)		1
		ATTACHING PARTS		
	NAS514P632-8	. SCREW		25
	AN960PD10L	. WASHER.		25
	NAS679A06W	. NUT		25
		-------*-------		
17	65-31922-13	. SEAL, (EXTRUSION NO.;BAC1530-44 X 75.4 IN. LG) (LH. . ONLY) (OPTIONAL AND FOR REPLACEMENT ORDER 65-31922-27) (EXTRUSION NO.;BAC1530-44 X 75.4 IN. LG)		1
17	65-31922-27	. SEAL, (EXTRUSION NO.;BAC1530-44 X 75.4 IN. LG) (LH. . ONLY) (OPTIONAL TO AND REPLACEMENT FOR 65-31922-13) (EXTRUSION NO.;BAC1530-44 X 75.4 IN. LG)		1
17	65-31922-14	. SEAL, (EXTRUSION NO. BAC1530-44 X 75.4 IN. LG) (RH. . ONLY) (OPTIONAL AND FOR REPLACEMENT ORDER 65-31922-28) (EXTRUSION NO.;BAC1530-44 X 75.4 IN. LG)		1
17	65-31922-28	. SEAL, (EXTRUSION NO.;BAC1530-44 X 75.4 IN. LG) (RH. . ONLY) (OPTIONAL TO AND REPLACEMENT FOR 65-31922-14) (EXTRUSION NO.;BAC1530-44 X 75.4 IN. LG)		1
R 18	65-32509-1	. FAIRING ASSY, FRONT SPAR STATION 305.80 TO 373 WING . R LEADING EDGE FLAP (LH ONLY) (SEE FIG. 88)	0150	1
R 18	65-32509-23	. FAIRING ASSY, FRONT SPAR STATION 305.80 TO 373 WING . R LEADING EDGE FLAP (LH ONLY) (SEE FIG. 88)	5199	1
R 18	65-32509-2	. FAIRING ASSY, FRONT SPAR STATION 305.80 TO 373 WING . R LEADING EDGE FLAP (RH ONLY) (SEE FIG. 88)	0150	1
R 18	65-32509-24	. FAIRING ASSY, FRONT SPAR STATION 305.80 TO 373 WING . R LEADING EDGE FLAP (RH ONLY) (SEE FIG. 88)	5199	1
		ATTACHING PARTS		
	BAC830EL4CN8	. BOLT.		6
	BACS40B15-31	. SHIM.		5
	AN960PD416	. WASHER.		6
	NAS679A4W	. NUT		6
		-------*-------		
19	69-27892-5	. ANGLE, INBOARD WING LEADING EDGE FLAP UPSTOP (LH. . . ONLY)		1
19	69-27892-6	. ANGLE, INBOARD WING LEADING EDGE FLAP UPSTOP (RH. . . ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	81		ATTACHING PARTS		
		BAC830FM6-4	. BOLT.		1
		BAC830FM6-7	. BOLT.		3
		BAC830FN6-6	. BOLT.		2
		BACS40A12-12	. SHIM.		1
		BACS40B11-14	. SHIM.		1
		BACS40B12-12	. SHIM.		2
		65-31922-22	. FILLER, FRONT SPAR STATION 305.80 TO 382.66 WING. LEADING EDGE FLAP UPSTOP ANGLE		1
		BACC30M6	. COLLAR.		6
			-------*-------		
	20	69-27892-1	. ANGLE, INBOARD WING LEADING EDGE FLAP UPSTOP (LH. ONLY)		1
	20	69-27892-2	. ANGLE, INBOARD WING LEADING EDGE FLAP UPSTOP (RH. ONLY)		1
			ATTACHING PARTS		
		BAC830FN6-6	. BOLT.		4
		NAS517-3-8	. BOLT.		2
		65-31922-20	. FILLER, FRONT SPAR STATION 305.80 TO 382.66 WING. LEADING EDGE FLAP UPSTOP ANGLE		1
		65-31922-21	. FILLER, FRONT SPAR STATION 305.80 TO 382.66 WING. LEADING EDGE FLAP UPSTOP ANGLE		1
		BACS40B16-28	. SHIM.		1
		AN960PD10	. WASHER.		2
		BACC30M6	. COLLAR.		4
		NAS679A3W	. NUT		2
			-------*-------		
	21	69-27891-5	. ANGLE, INBOARD WING LEADING EDGE FLAP UPSTOP (LH. ONLY)		1
	21	69-27891-6	. ANGLE, INBOARD WING LEADING EDGE FLAP UPSTOP (RH. ONLY)		1
			ATTACHING PARTS		
		BAC830FN6-6	. BOLT.		2
		BAC830FM6-7	. BOLT.		2
		65-31922-23	. FILLER, FRONT SPAR STATION 305.80 TO 382.66 WING. LEADING EDGE FLAP UPSTOP ANGLE		1
		BACS40B10-12	. SHIM.		1
		BACS40B12-12	. SHIM.		1
		BACC30M6	. COLLAR.		4
			-------*-------		
	22	69-27892-3	. ANGLE, INBOARD WING LEADING EDGE FLAP UPSTOP (LH. ONLY)		1
	22	69-27892-4	. ANGLE, INBOARD WING LEADING EDGE FLAP UPSTOP (RH. ONLY)		1
			ATTACHING PARTS		
		BACR15CE6D	. RIVET		1
		BAC830FN6-6	. BOLT.		4
		BAC830FM6-6	. BOLT.		1
		BAC830FM6-7	. BOLT.		2
		NAS517-3-6	. SCREW		2
		65-31922-25	. FILLER, FRONT SPAR STATION 305.80 TO 382.66 WING. LEADING EDGE FLAP UPSTOP ANGLE		1
		BACS40B17-25	. SHIM.		1
		65-31922-24	. FILLER, FRONT SPAR STATION 305.80 TO 382.66 WING. LEADING EDGE FLAP UPSTOP ANGLE		1
		AN960PD10	. WASHER.		2
		BACC30M6	. COLLAR.		7
		NAS679A3W	. NUT		2
			-------*-------		
R R R	23	65-32244-1	. TORQUE TUBE, FRONT SPAR STATION 305 TO 382 WING LEADING EDGE FLAP (LH ONLY) (OPTIONAL 65-32244-5)	0150	1
R R R	23	65-32244-5	. TORQUE TUBE, FRONT SPAR STATION 305 TO 382 WING LEADING EDGE FLAP (LH ONLY) (OPTIONAL TO 65-32244-1)	0150	1
R R R	23	65-32244-2	. TORQUE TUBE, FRONT SPAR STATION 305 TO 382 WING LEADING EDGE FLAP (RH ONLY) (OPTIONAL 65-32244-6)	0150	1
R R	23	65-32244-5	. TORQUE TUBE, FRONT SPAR STATION 305 TO 382 WING LEADING EDGE FLAP (LH ONLY)	5199	1
R R	23	65-32244-6	. TORQUE TUBE, FRONT SPAR STATION 305 TO 382 WING LEADING EDGE FLAP (RH ONLY)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R	81 23	65-32244-6	. TORQUE TUBE, FRONT SPAR STATION 305 TO 382 WING . . . LEADING EDGE FLAP (RH ONLY) (OPTIONAL TO 65-32244-2)	0150	1
R R R	23	65-32244-5	. TORQUE TUBE, FRONT SPAR STATION 305 TO 382 WING . . . LEADING EDGE FLAP (LH ONLY) (OPTIONAL 65-32244-7)	5199	1
R R R	23	65-32244-7	. TORQUE TUBE, FRONT SPAR STATION 305 TO 382 WING . . . LEADING EDGE FLAP (LH ONLY) (OPTIONAL TO 65-32244-5)	5199	1
R R R	23	65-32244-6	. TORQUE TUBE, FRONT SPAR STATION 305 TO 382 WING . . . LEADING EDGE FLAP (RH ONLY) (OPTIONAL 65-32244-8)	5199	1
R R R	23	65-32244-8	. TORQUE TUBE, FRONT SPAR STATION 305 TO 382 WING . . . LEADING EDGE FLAP (RH ONLY) (OPTIONAL TO 65-32244-6)	5199	1
			ATTACHING PARTS		
		BACB30FM6-3	. BOLT.		9
		BACB30FM6-6	. BOLT.		2
		BACB30FM6-7	. BOLT.		2
		BACB30FM6-8	. BOLT.		1
		BACB30FM8-6	. BOLT.		6
		BACB30FN8-6	. BOLT.		23
		BACB30FM8-7	. BOLT.		12
		BACB30FM8-8	. BOLT.		2
		BACB30FN8-9	. BOLT.		77
		BACB30GY10-9	. BOLT.		2
		BACB30FN10-10	. BOLT.		10
		BACB30FN12-10	. BOLT.		2
		BACB30EL4CN8	. BOLT.		17
		BACB30EL5CN8	. BOLT.		2
		BACB30EL5CN10	. BOLT.		4
		NAS1103-7W	. BOLT.		1
		BACW10T10L	. WASHER, (USED WITH BACB30FM6 AND NAS1103-7W BOLTS). .		15
		BACW10T416L	. WASHER, (USED WITH BACB30FM8 AND BACB30FN8 BOLTS) . .		AR
		BACW10T516L	. WASHER, (USED WITH BACB30GY10-9 AND BACB30FN10-10). .		12
		BACW10T616L	. WASHER, (USED WITH BACB30FN12-10)		2
		BACW10T416A	. WASHER, (USED WITH BACB30EL4CN8).		17
		BACW10T516	. WASHER, (USED WITH BACB30EL4CN8).		6
		BACC30M6	. COLLAR, (USED WITH BACB30FM6 BOLTS)		14
		BACC30M8	. COLLAR, (USED WITH BACB30FM8 AND BACB30FN8 BOLTS) . .		AR
		BACC30M10	. COLLAR, (USED WITH BACB30GY10-9 AND BACB30FN10-10). .		12
		BACC30M12	. COLLAR, (USED WITH BACB30FN12-10)		2
		NAS679A4W	. NUT, (USED WITH BACB30EL4CN8)		17
		NAS679A5W	. NUT, (USED WITH BACB30EL5CN BOLTS).		6
		NAS679A3W	. NUT, (USED WITH NAS1103-7W)		1
			--------*--------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

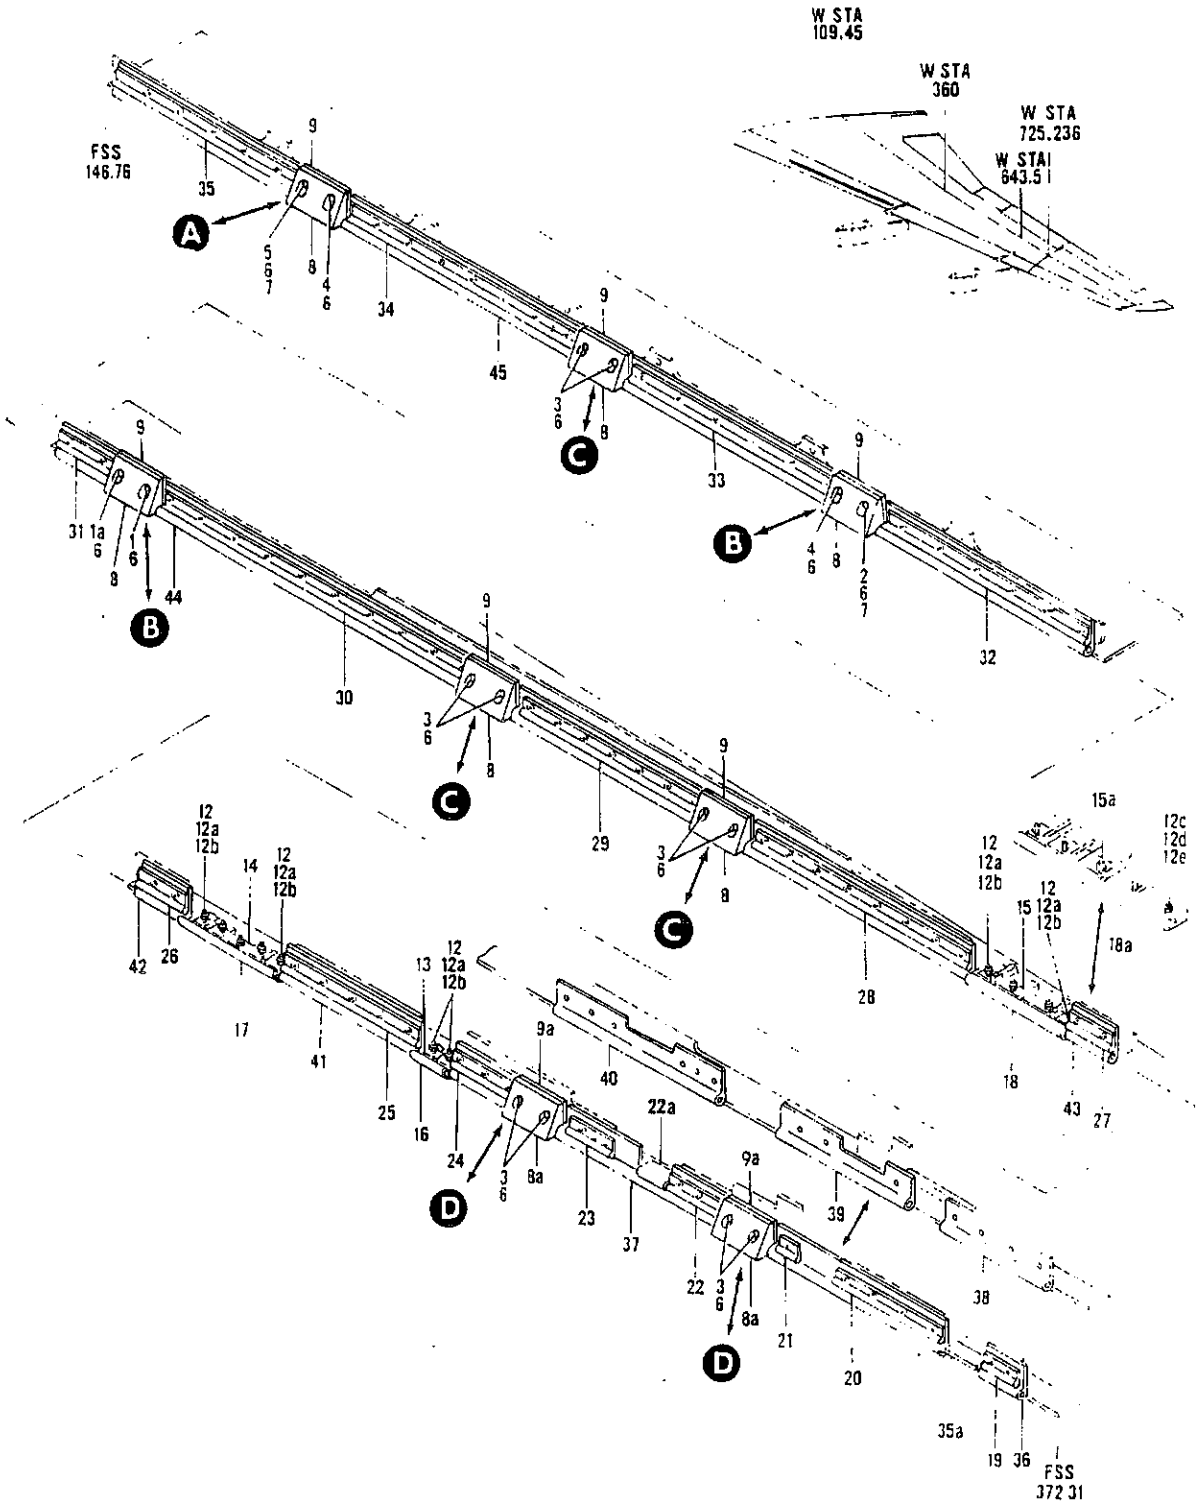


FIGURE 83. PANEL INSTL, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT (SHEET 1)

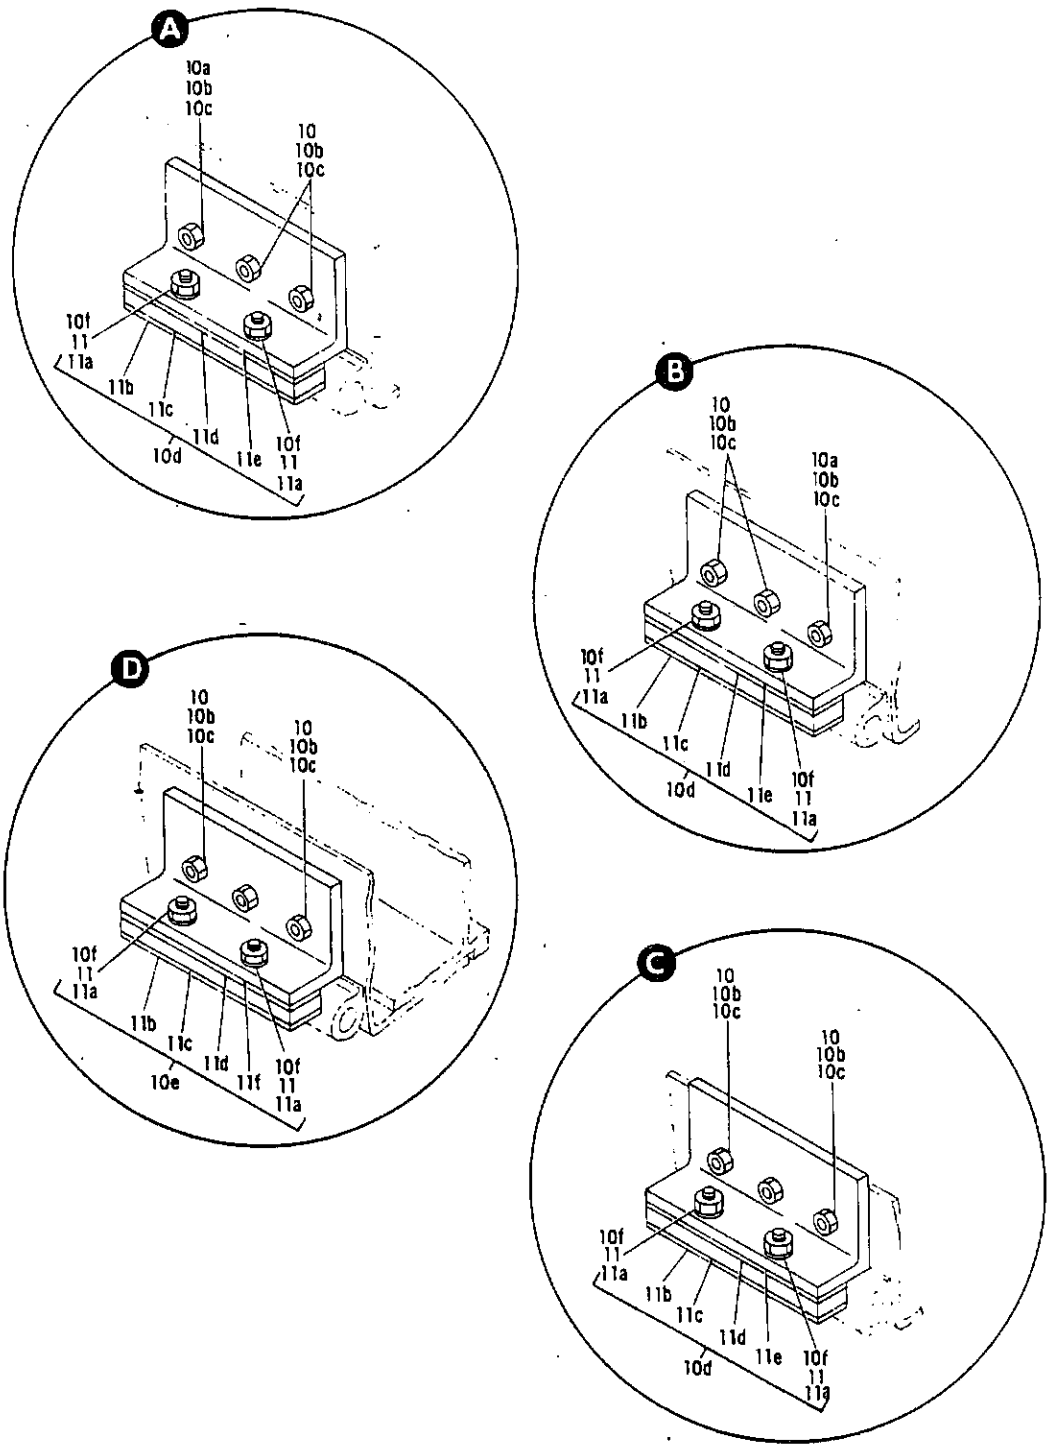


FIGURE 83. PANEL INSTL, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
83	65-31910-1	PANEL INSTL, INBOARD WING LEADING EDGE FLAP SEAL. . . . SUPPORT (LH) (SEE 57-4, FIG. 8, ITEM 24)		RF
	65-31910-2	PANEL INSTL, INBOARD WING LEADING EDGE FLAP SEAL. . . . SUPPORT (RH) (SEE 57-4, FIG. 8, ITEM 24)		RF
1	NAS623-3-9W	. SCREW		1
1A	NAS623-3-7W	. SCREW		1
2	NAS623-3-8W	. SCREW		1
3	NAS623-3-7W	. SCREW		10
4	NAS623-3-7W	. SCREW		2
5	NAS623-3-8W	. SCREW		1
6	AN960PD416	. WASHER.		16
7	NAS679A3W	. NUT		2
8	69-25808-1	. STRIKER, STOP (USED WITH 69-25808-2). . . . . (OPTIONAL TO 69-34195-1)		6
8A	69-25808-1	. STRIKER, STOP (USED WITH 69-25808-2). . . . . (OPTIONAL TO 69-34195-3)		2
9	69-25808-2	. PLATE, STOP STRIKER (USED WITH 69-25808-1). . . . . (OPTIONAL TO 69-34195-1)		6
		ATTACHING PARTS		
	NAS517-3-4	. SCREW		7
	NAS517-3-6	. SCREW		1
	AN960PD10L	. WASHER.		8
	NAS679A3W	. NUT		8
		-------*-------		
9A	69-25808-2	. PLATE, STOP STRIKER (USED WITH 69-25808-1). . . . . (OPTIONAL TO 69-34195-3)		2
10	NAS1103-5	. SCREW		21
10A	NAS1103-6	. SCREW		3
10B	AN960PD10	. WASHER.		24
10C	NAS679A3W	. NUT		24
10D	69-34195-1	. STRIKER ASSY, STOP. . . . . (OPTIONAL 69-25808-1 WITH 69-25808-2)		6
10E	69-34195-3	. STRIKER ASSY, STOP. . . . . (OPTIONAL 69-25808-1 WITH 69-25808-2)		2
10F	NAS514P832-14	. . SCREW		2
11	AN960PD8	. . WASHER.		2
11A	NAS679A08W	. . NUT		2
11B	BACS47F8-52A	. . SHIM.		1
11C	BACS40G8-52	. . SHIM.		1
11D	BACS40B8-52	. . SHIM.		1
11E	69-34195-2	. . STRIKER, WING LEADING EDGE FLAP UP-STOP		1
11F	69-34195-4	. . STRIKER		1
12C	NAS517P440-8	. SCREW		1
12D	AN960PD4L	. WASHER.		1
12E	NAS679A04W	. NUT		1
13	65-31910-18	. FILLER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT . PANEL RADIUS		1
14	65-31910-19	. FILLER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT . PANEL RADIUS		1
15A	65-31910-123	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (LH ONLY)		1
15A	65-31910-124	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (RH ONLY)		1
16	65-31910-42	. SEAL, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT . . PANEL (EXTRUSION NO. BAC1530-3 X 2.5 IN. LG)		1
17	65-31910-40	. SEAL, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT . . PANEL (EXTRUSION NO. BAC1530-3 X 7.8 IN. LG)		1
18A	65-31910-125	. SEAL, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT . . PANEL (LH ONLY)		1
18A	65-31910-126	. SEAL, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT . . PANEL (RH ONLY)		1
19	65-31910-69	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (LH ONLY)		1
19	65-31910-70	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (RH ONLY)		1
20	65-31910-89	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (LH ONLY)		1
20	65-31910-90	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (RH ONLY)		1
21	65-31910-31	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (LH ONLY)		1
21	65-31910-130	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (RH ONLY)		1


MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
83 22	65-31910-30	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (LH ONLY)		1
22	65-31910-67	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (RH ONLY)		1
22A	65-31910-77	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL		1
23	65-31910-28	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (LH ONLY)		1
23	65-31910-66	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (RH ONLY)		1
24	65-31910-73	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (LH ONLY)		1
24	65-31910-74	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (RH ONLY)		1
25	65-31910-29	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL		1
26	65-31910-71	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (LH ONLY)		1
26	65-31910-72	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (RH ONLY)		1
28	65-31910-26	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (LH ONLY)		1
28	65-31910-64	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (RH ONLY)		1
29	65-31910-25	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (LH ONLY)		1
29	65-31910-63	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (RH ONLY)		1
30	65-31910-87	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (LH ONLY)		1
30	65-31910-88	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (RH ONLY)		1
31	65-31910-85	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (LH ONLY)		1
31	65-31910-86	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (RH ONLY)		1
32	65-31910-105	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (LH ONLY)		1
32	65-31910-106	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (RH ONLY)		1
33	65-31910-103	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (LH ONLY)		1
33	65-31910-104	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (RH ONLY)		1
34	65-31910-101	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (LH ONLY)		1
34	65-31910-102	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (RH ONLY)		1
35	65-31910-99	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (LH ONLY)		1
35	65-31910-100	. RETAINER, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT PANEL (RH ONLY)		1
		ATTACHING PARTS		
	NAS600-8	. SCREW		79
	AN960PD4L	. WASHER.		79
	NAS679A04W	. NUT		79
		--------*--------		
35A	65-31910-108	. STRIP, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT. . PANEL RUB		1
36	65-31910-91	. SEAL, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT . . PANEL (LH ONLY) (EXTRUSION NO. BAC1530-3 X 3.2 IN. LG)		1
36	65-31910-92	. SEAL, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT . . PANEL (RH ONLY) (EXTRUSION NO. BAC1530-3 X 3.2 IN. LG)		1
37	65-31910-75	. SEAL, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT . . PANEL (LH ONLY) (EXTRUSION NO. BAC1530-3 X 40 IN. LG)		1
37	65-31910-76	. SEAL, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT . . PANEL (RH ONLY) (EXTRUSION NO. BAC1530-3 X 40 IN. LG)		1
41	65-31910-41	. SEAL, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT . . PANEL (EXTRUSION NO. BAC1530-3 X 10.4 IN. LG)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
83 42	65-31910-39	. SEAL, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT . . PANEL (EXTRUSION NO. BAC1530-3 X 3.7 IN. LG)		1
44	65-31910-35	. SEAL, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT . . PANEL (LH ONLY) (EXTRUSION NO. BAC1530-3 X 71.0 IN. LG)		1
44	65-31910-36	. SEAL, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT . . PANEL (RH ONLY) (EXTRUSION NO. BAC1530-3 X 71.0 IN. LG)		1
45	65-31910-97	. SEAL, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT . . PANEL (LH ONLY) (EXTRUSION NO. BAC1530-3 X 75 IN. LG)		1
45	65-31910-98	. SEAL, INBOARD WING LEADING EDGE FLAP SEAL SUPPORT . . PANEL (RH ONLY) (EXTRUSION NO. BAC1530-3 X 75 IN. LG)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

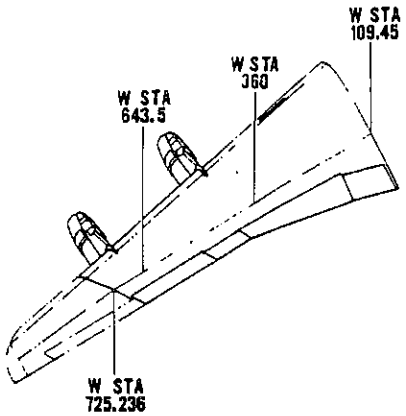

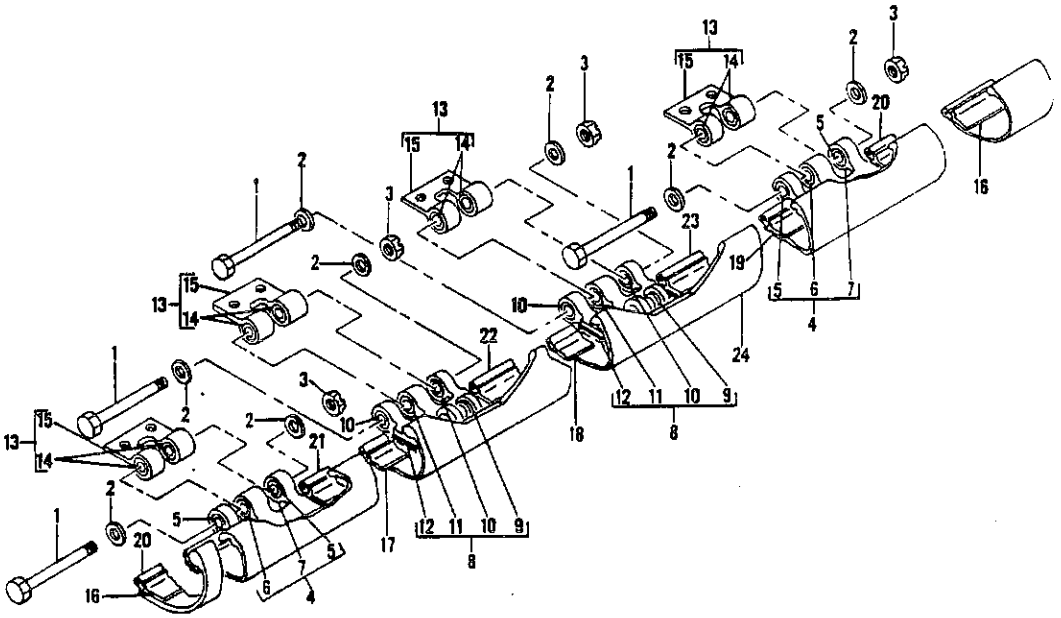
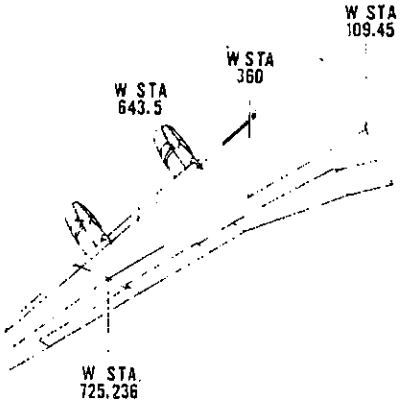


FIGURE 86. FAIRING ASSY, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R	86	65-32509-5	FAIRING ASSY, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP (LH) (SEE FIG. 79, ITEM 20)	0150	RF
		65-32509-27	FAIRING ASSY, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP (LH) (SEE FIG. 79, ITEM 20)	5199	RF
		65-32509-6	FAIRING ASSY, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP (RH) (SEE FIG. 79, ITEM 20)	0150	RF
		65-32509-28	FAIRING ASSY, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP (RH) (SEE FIG. 79, ITEM 20)	5199	RF
	1	NAS1104-42DW	. BOLT		4
	2	AN960PD416	. WASHER		8
	3	AN320-4	. NUT		4
	4	69-25614-1	. HINGE ASSY, LEADING EDGE FLAP		2
			ATTACHING PARTS		
		BACB30ABP4-9A	. BOLT		4
		65-32509-22	. SPACER, FRONT SPAR STATION 146.76 TO 222.59 WING. LEADING EDGE FLAP FAIRING		2
		BACS40A12-47	. SHIM		2
		BACS40D16-47	. SHIM		2
		AN960PD416	. WASHER		4
		NAS679A4W	. NUT		4
			-------*-------		
	5	10-60516-100	. . BUSHING, SELF LUBRICATED JOURNAL		2
	6	10-60516-101	. . BUSHING, SELF LUBRICATED JOURNAL		1
	7	69-25614-3	. . HINGE HALF, LEADING EDGE FLAP		1
	8	69-25613-2	. HINGE ASSY, LEADING EDGE FLAP FAIRING		2
			ATTACHING PARTS		
		BACB30ABP4-9A	. BOLT		4
		65-32509-22	. SPACER, FRONT SPAR STATION 146.76 TO 222.59 WING. LEADING EDGE FLAP FAIRING		2
		BACS40B16-47	. SHIM		2
		AN960PD416	. WASHER		4
		NAS679A4W	. NUT		4
			-------*-------		
	9	NAS77A5-19P	. . BUSHING		1
	10	10-60516-100	. . BUSHING, SELF LUBRICATED JOURNAL		2
	11	10-60516-101	. . BUSHING, SELF LUBRICATED JOURNAL		1
	12	69-25613-4	. . HINGE HALF, LEADING EDGE FLAP FAIRING		1
	13	69-25614-2	. HINGE ASSY		4
	14	10-60516-101	. . BUSHING, SELF LUBRICATED JOURNAL		2
	15	69-25614-4	. . HINGE HALF, LEADING EDGE FLAP		1
	16	69-25819-9	. RETAINER, LEADING EDGE FLAP SEAL		2
	17	69-25819-8	. RETAINER, LEADING EDGE FLAP SEAL		1
	18	69-25819-10	. RETAINER, LEADING EDGE FLAP SEAL		1
	19	69-25819-11	. RETAINER, LEADING EDGE FLAP SEAL		1
			ATTACHING PARTS		
		MS20426D6	. RIVET		45
			-------*-------		
	20	65-32509-15	. SEAL, (EXTRUSION NO. BAC1530-33 X LENGTH AS REQUIRED)		2
	21	65-32509-14	. SEAL, (EXTRUSION NO. BAC1530-33 X LENGTH AS REQUIRED)		1
	22	65-32509-16	. SEAL, (EXTRUSION NO. BAC1530-33 X LENGTH AS REQUIRED)		1
	23	65-32509-17	. SEAL, (EXTRUSION NO. BAC1530-33 X LENGTH AS REQUIRED)		1
R R	24	65-31989-1	. FAIRING, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP (LH ONLY)	0150	1
R R R	24	65-31989-3	. FAIRING, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP (LH ONLY)	5199	1
R R R	24	65-31989-2	. FAIRING, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP (RH ONLY)	0150	1
R R R	24	65-31989-4	. FAIRING, FRONT SPAR STATION 146.76 TO 222.59 WING LEADING EDGE FLAP (RH ONLY)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



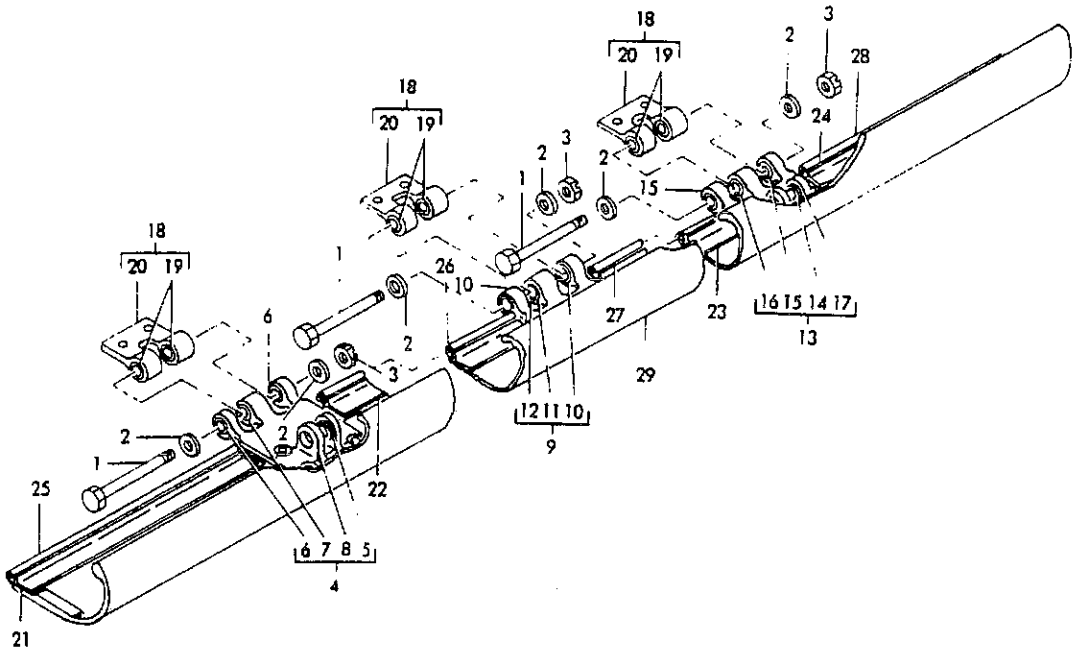


FIGURE 87. FAIRING ASSY, FRONT SPAR STATION 222.59 TO 305.80 WING LEADING EDGE FLAP

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R	87	65-32509-3	FAIRING ASSY, FRONT SPAR STATION 222.59 TO 305.80 WING LEADING EDGE FLAP (LH) (SEE FIG. 80, ITEM 19)	0150	RF
R R		65-32509-25	FAIRING ASSY, FRONT SPAR STATION 222.59 TO 305.80 WING LEADING EDGE FLAP (LH) (SEE FIG. 80, ITEM 19)	5199	RF
R R		65-32509-4	FAIRING ASSY, FRONT SPAR STATION 222.59 TO 305.80 WING LEADING EDGE FLAP (RH) (SEE FIG. 80, ITEM 19)	0150	RF
R R		65-32509-26	FAIRING ASSY, FRONT SPAR STATION 222.59 TO 305.80 WING LEADING EDGE FLAP (RH) (SEE FIG. 80, ITEM 19)	5199	RF
	1	NAS1104-42DW	. BOLT.		3
	2	AN960PD416	. WASHER.		6
	3	AN320-4	. NUT		3
	4	69-25613-1	. HINGE ASSY, LEADING EDGE FLAP FAIRING		1
			ATTACHING PARTS		
		BACB30LU4-9	. BOLT.		4
		65-32509-20	. SPACER, FRONT SPAR STATION 222.59 TO 305.80 WING. LEADING EDGE FLAP FAIRING		1
		65-32509-21	. SPACER, FRONT SPAR STATION 222.59 TO 305.80 WING. LEADING EDGE FLAP FAIRING		1
		BACS40B12-47	. SHIM.		1
		BACS40B26-47	. SHIM.		1
		AN960PD416	. WASHER.		4
		NAS679A4W	. NUT		4
			-------*-------		
	5	NAS77A5-19P	. . BUSHING		1
	6	10-60516-100	. . BUSHING, SELF LUBRICATED JOURNAL.		2
	7	10-60516-101	. . BUSHING, SELF LUBRICATED JOURNAL.		1
	8	69-25613-3	. . HINGE HALF, LEADING EDGE FLAP FAIRING		1
	9	69-25614-1	. HINGE ASSY, LEADING EDGE FLAP		1
			ATTACHING PARTS		
		BACB30LU4-8	. BOLT.		2
		65-32509-22	. SPACER, FRONT SPAR STATION 222.59 TO 305.80 WING. LEADING EDGE FLAP FAIRING		1
		BACS40A12-47	. SHIM.		1
		AN960PD416	. WASHER.		2
		NAS679A4W	. NUT		2
			-------*-------		
	10	10-60516-100	. . BUSHING, SELF LUBRICATED JOURNAL.		2
	11	10-60516-101	. . BUSHING, SELF LUBRICATED JOURNAL.		1
	12	69-25614-3	. . HINGE HALF, LEADING EDGE FLAP		1
	13	69-25613-2	. HINGE ASSY, LEADING EDGE FLAP FAIRING		1
			ATTACHING PARTS		
		65-32509-22	. SPACER, FRONT SPAR STATION 222.59 TO 305.80 WING. LEADING EDGE FLAP FAIRING		1
		AN960PD416	. WASHER.		2
		NAS679A4W	. NUT		2
		BACB30LU4-9	. BOLT.		2
			-------*-------		
	14	NAS77A5-19P	. . BUSHING		1
	15	10-60516-100	. . BUSHING, SELF LUBRICATED JOURNAL.		2
	16	10-60516-101	. . BUSHING, SELF LUBRICATED JOURNAL.		1
	17	69-25613-4	. . HINGE HALF, LEADING EDGE FLAP FAIRING		1
	18	69-25614-2	. HINGE ASSY, LEADING EDGE FLAP		3
	19	10-60516-101	. . BUSHING, SELF LUBRICATED JOURNAL.		2
	20	69-25614-4	. . HINGE HALF, LEADING EDGE FLAP		1
	21	69-25819-5	. RETAINER, LEADING EDGE FLAP SEAL.		1
	22	69-25819-6	. RETAINER, LEADING EDGE FLAP SEAL.		1
	23	69-25819-7	. RETAINER, LEADING EDGE FLAP SEAL.		1
	24	69-25819-8	. RETAINER, LEADING EDGE FLAP SEAL.		1
			ATTACHING PARTS		
		MS20426D5	. RIVET		54
			-------*-------		
	25	65-32509-11	. SEAL, (EXTRUSION NO. BAC1530-33 X LENGTH AS REQUIRED)		1
	26	65-32509-12	. SEAL, (EXTRUSION NO. BAC1530-33 X LENGTH AS REQUIRED)		1
	27	65-32509-13	. SEAL, (EXTRUSION NO. BAC1530-33 X LENGTH AS REQUIRED)		1
	28	65-32509-14	. SEAL, (EXTRUSION NO. BAC1530-33 X LENGTH AS REQUIRED)		1
R R	29	65-31988-1	. FAIRING, FRONT SPAR STATION 222.59 TO 305.80 WING LEADING EDGE FLAP (LH ONLY)	0150	1
R R	29	65-31988-3	. FAIRING, FRONT SPAR STATION 222.59 TO 305.80 WING LEADING EDGE FLAP (LH ONLY)	5199	1
R R	29	65-31988-2	. FAIRING, FRONT SPAR STATION 222.59 TO 305.80 WING LEADING EDGE FLAP (RH ONLY)	0150	1
R R	29	65-31988-4	. FAIRING, FRONT SPAR STATION 222.59 TO 305.80 WING LEADING EDGE FLAP (RH ONLY)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

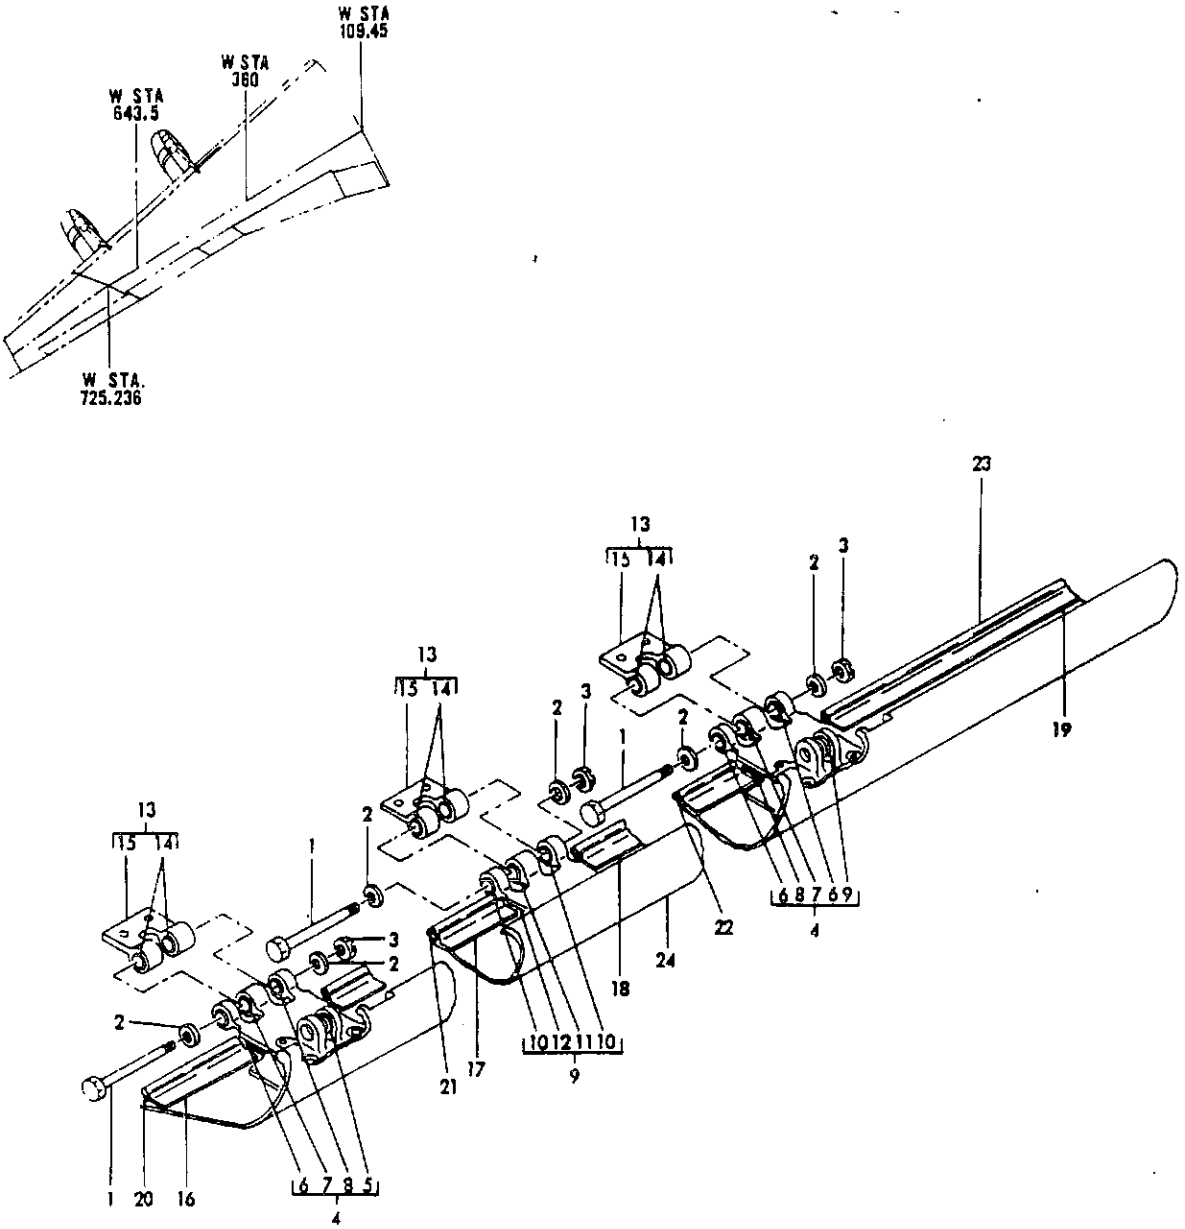


FIGURE 88. FAIRING ASSY, FRONT SPAR STATION 305.80 TO 373 WING LEADING EDGE FLAP

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	88	65-32509-1	FAIRING ASSY, FRONT SPAR STATION 305.80 TO 373 WING . . LEADING EDGE FLAP (LH) (SEE FIG. 81, ITEM 18)	0150	RF
		65-32509-23	FAIRING ASSY, FRONT SPAR STATION 305.80 TO 373 WING . . LEADING EDGE FLAP (LH) (SEE FIG. 81, ITEM 18)	5199	RF
		65-32509-2	FAIRING ASSY, FRONT SPAR STATION 305.80 TO 373 WING . . LEADING EDGE FLAP (RH) (SEE FIG. 81, ITEM 18)	0150	RF
		65-32509-24	FAIRING ASSY, FRONT SPAR STATION 305.80 TO 373 WING . . LEADING EDGE FLAP (RH) (SEE FIG. 81, ITEM 18)	5199	RF
	1	NAS1104-42DW	. BOLT.		3
	2	AN960PD416	. WASHER.		6
	3	AN320-4	. NUT		3
	4	69-25613-1	. HINGE ASSY, LEADING EDGE FLAP FAIRING . . . . . ATTACHING PARTS		2
R		BACB30LU4-9	. BOLT.		8
		65-32509-20	. SPACER, FRONT SPAR STATION 305.80 TO 373 WING LEADING EDGE FLAP FAIRING		2
		65-32509-21	. SPACER, FRONT SPAR STATION 305.80 TO 373 WING LEADING EDGE FLAP FAIRING		2
		BACS40B12-47	. SHIM.		2
		BACS40B26-47	. SHIM.		2
		AN960PD416	. WASHER.		8
		NAS679A4W	. NUT		8
			-------*-------		
	5	NAS77A5-19P	. . BUSHING		1
	6	10-60516-100	. . BUSHING, SELF LUBRICATED JOURNAL.		2
	7	10-60516-101	. . BUSHING, SELF LUBRICATED JOURNAL.		1
	8	69-25613-3	. . HINGE HALF, LEADING EDGE FLAP FAIRING		1
	9	69-25614-1	. HINGE ASSY, LEADING EDGE FLAP . . . . . ATTACHING PARTS		1
		BACB30LU4-9	. BOLT.		2
		65-32509-22	. SPACER, FRONT SPAR STATION 305.80 TO 373 WING LEADING EDGE FLAP FAIRING		1
		BACS40A16-47	. SHIM.		1
		AN960PD416	. WASHER.		2
		NAS679A4W	. NUT		2
			-------*-------		
	10	10-60516-100	. . BUSHING, SELF LUBRICATED JOURNAL.		2
	11	10-60516-101	. . BUSHING, SELF LUBRICATED JOURNAL.		1
	12	69-25614-3	. . HINGE HALF, LEADING EDGE FLAP		1
	13	69-25614-2	. HINGE ASSY, LEADING EDGE FLAP		3
	14	10-60516-101	. . BUSHING, SELF LUBRICATED JOURNAL.		2
	15	69-25614-4	. . HINGE HALF, LEADING EDGE FLAP		1
	16	69-25819-1	. RETAINER, LEADING EDGE FLAP SEAL.		1
	17	69-25819-2	. RETAINER, LEADING EDGE FLAP SEAL.		1
	18	69-25819-3	. RETAINER, LEADING EDGE FLAP SEAL.		1
	19	69-25819-4	. RETAINER, LEADING EDGE FLAP SEAL. . . . . ATTACHING PARTS		1
		MS20426D5	. RIVET		43
			-------*-------		
	20	65-32509-7	. SEAL, (EXTRUSION NO. BAC1530-33 X LENGTH AS REQUIRED)		1
	21	65-32509-8	. SEAL, (EXTRUSION NO. BAC1530-33 X LENGTH AS REQUIRED)		1
	22	65-32509-9	. SEAL, (EXTRUSION NO. BAC1530-33 X LENGTH AS REQUIRED)		1
	23	65-32509-10	. SEAL, (EXTRUSION NO. BAC1530-33 X LENGTH AS REQUIRED)		1
	24	65-31987-1	. FAIRING, FRONT SPAR STATION 305.80 TO 373 WING. . . . LEADING EDGE FLAP (LH ONLY)	0150	1
	24	65-31987-3	. FAIRING, FRONT SPAR STATION 305.80 TO 373 WING. . . . LEADING EDGE FLAP (LH ONLY)	5199	1
	24	65-31987-2	. FAIRING, FRONT SPAR STATION 305.80 TO 373 WING. . . . LEADING EDGE FLAP (RH ONLY)	0150	1
	24	65-31987-4	. FAIRING, FRONT SPAR STATION 305.80 TO 373 WING. . . . LEADING EDGE FLAP (RH ONLY)	5199	1


MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING Intercontinental 707

PARTS CATALOG

SECTION 07

FLAP CONTROL AND DRIVE

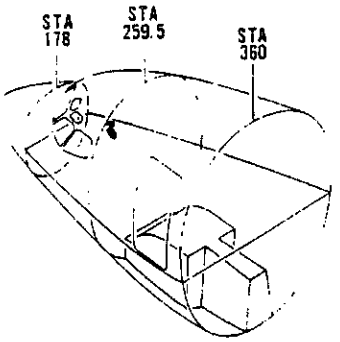

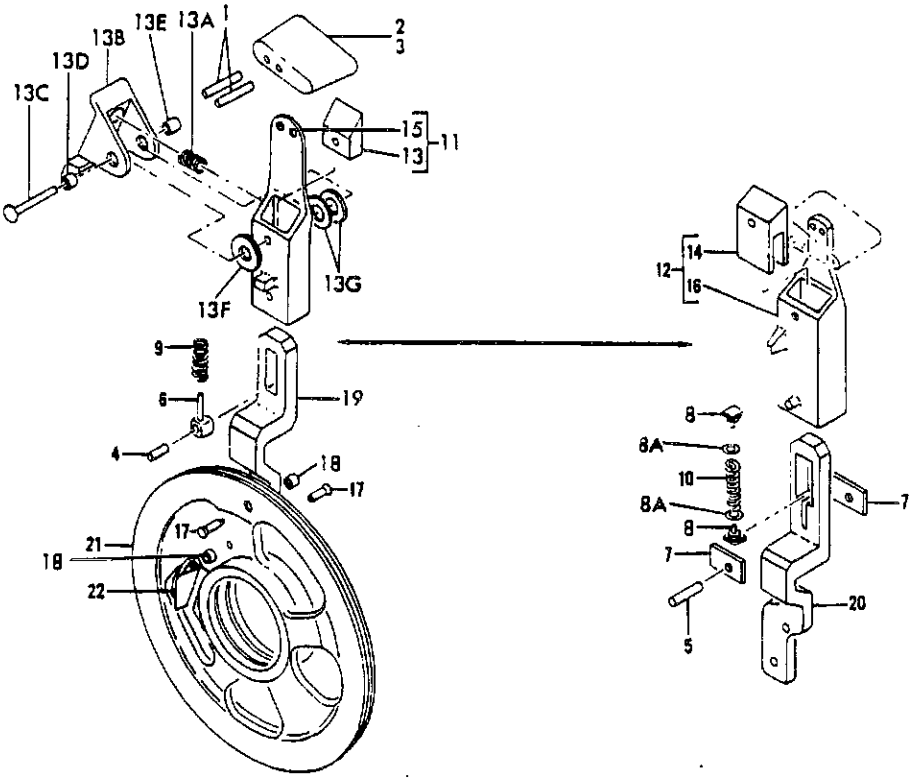


FIGURE 1. HANDLE ASSY, CONTROL STAND FLAP CONTROL

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
1	69-1814-2	HANDLE ASSY, CONTROL STAND FLAP CONTROL (SEE 27-1, FIG. 8, ITEM 64)		RF
1	NAS561P3-16	. PIN		2
2	66-1501	. KNOB, CONTROL STAND FLAP CONTROL HANDLE (OPTIONAL TO 65C14183-33)		1
2	65C14183-33	. KNOB, CONTROL STAND FLAP CONTROL HANDLE (OPTIONAL 66-1501)		1
4	NAS561P3-8	. PIN		1
6	63-1327	. STOP, CONTROL LEVER		1
9	63-1406	. SPRING, CONTROL HANDLE COMPRESSION.		1
11	65-1952	. HANDLE ASSY, CONTROL STAND FLAP CONTROL		1
13	63-1326	. . PLUG, CONTROL HANDLE.		1
15	65-1952-1	. . HANDLE, CONTROL STAND FLAP CONTROL. (ALTERED FROM;65-1952-2)		1
17	BACR15AZ6-8	. RIVET		2
18	BACC30C6	. COLLAR.		2
19	65-1953	. LEVER, CONTROL STAND FLAP CONTROL		1
21	65-1926-5	. DRUM; CONTROL STAND FLAP CONTROL. (OPTIONAL 65-1926-2)		1
21	65-1926-2	. DRUM, FLAP CONTROL. (OPTIONAL TO 65-1926-5)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

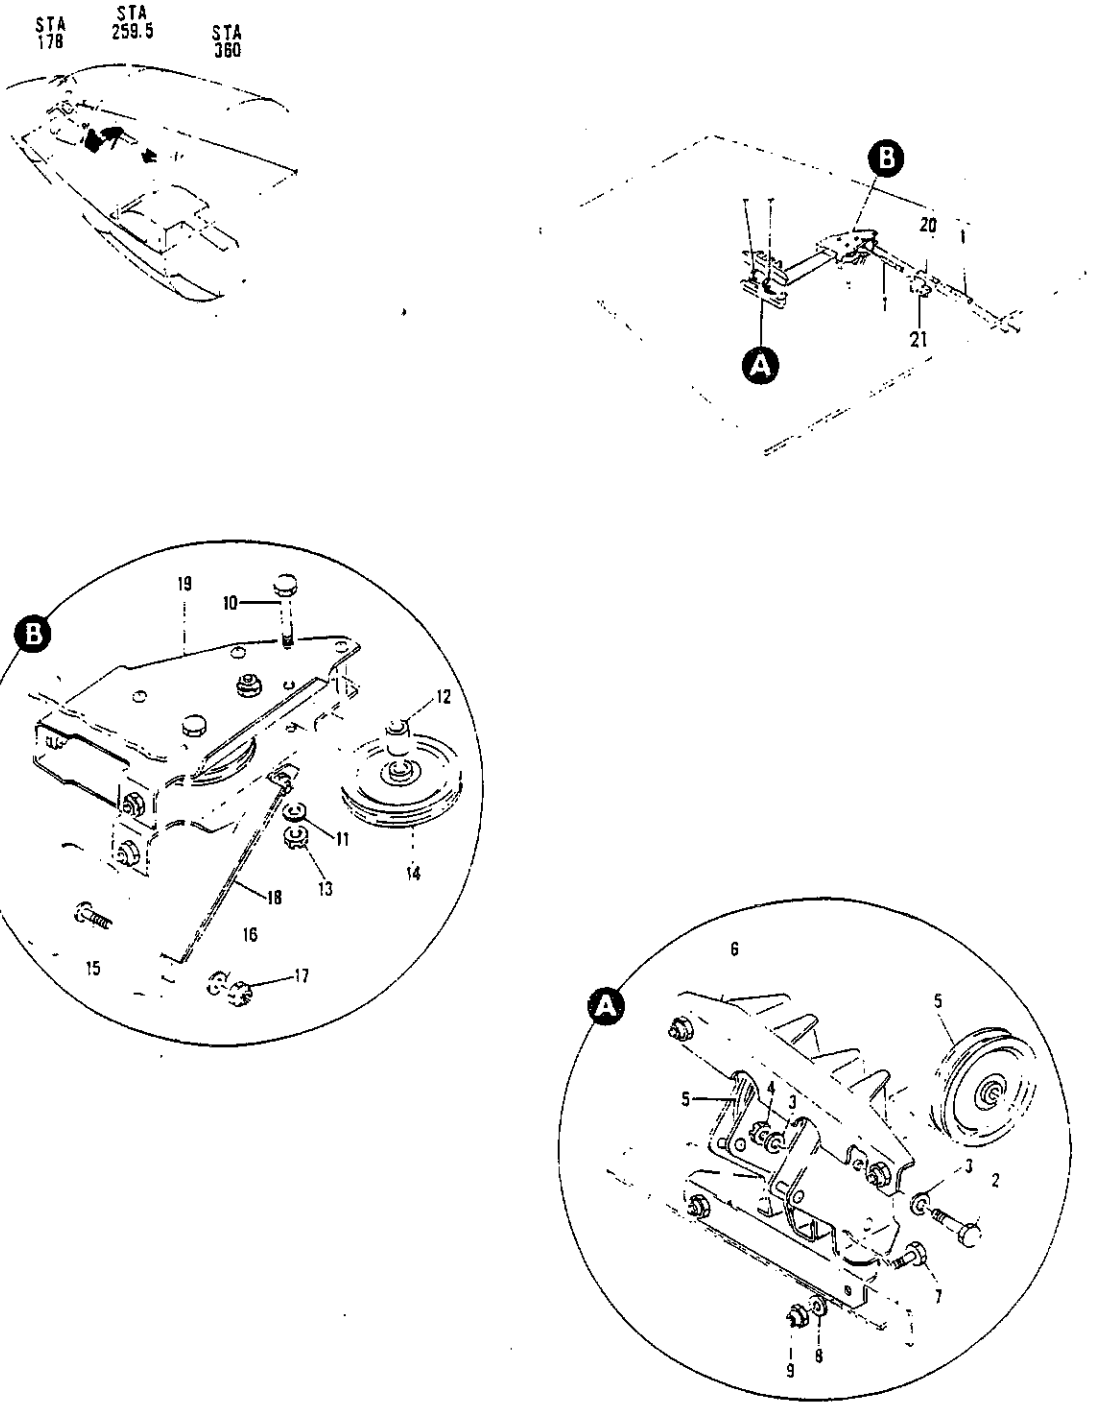


FIGURE 2. CONTROL INSTL, SECTION 51 WING FLAP

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	2	50-8707-51	CONTROL INSTL, SECTION 51 WING FLAP (SEE 53-1, FIG. 1, ITEM 4 AND 53-1, FIG. 6, ITEM 6)		RF
	1	AN155-16L	. BARREL.		2
		65-3115	. BRACKET INSTL, BODY STATION 220 WING FLAP PULLEY. . .		1
	2	NAS464P4-9	. . BOLT.		2
	3	AN960D416	. . WASHER.		4
	4	AN320-4	. . NUT		2
	5	AN219-4	. . PULLEY.		2
	6	65-3115-1	. . BRACKET ASSY, STATION 220 WING FLAP PULLEY. . . . ATTACHING PARTS		1
	7	AN3-5A	. . BOLT.		4
	8	AN960D10	. . WASHER.		4
	9	BACN10BY53W	. . NUT . . . . . -------*-------		4
		50-9384	. BRACKET INSTL, RH SIDE WING FLAP.		1
	10	NAS1104-17DW	. . BOLT.		2
	11	AN960D416	. . WASHER.		2
	12	NAS43DD4-32	. . SPACER.		2
	13	AN320-4	. . NUT		2
	14	AN219-4	. . PULLEY.		2
	15	NAS221-9	. . SCREW		5
	16	AN960D10	. . WASHER.		5
	17	NAS679A3W	. . NUT		5
	18	90-8679-2	. . ANGLE, STATION 219.8 WING FLAP PULLEY BRACKET . . .		1
	19	90-8679	. . BRACKET ASSY, STATION 219.8 WING FLAP PULLEY. . . .		1
	20	65-45096	. SWITCH INSTL, GEAR UP WARNING FLAP POSITION (SEE. . . 32-10, FIG. 15)		1
R R	21	65-49151-3	. SWITCH INSTL, ALTITUDE ALERTING FLAP POSITION (SEE. . FIG. 3A)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

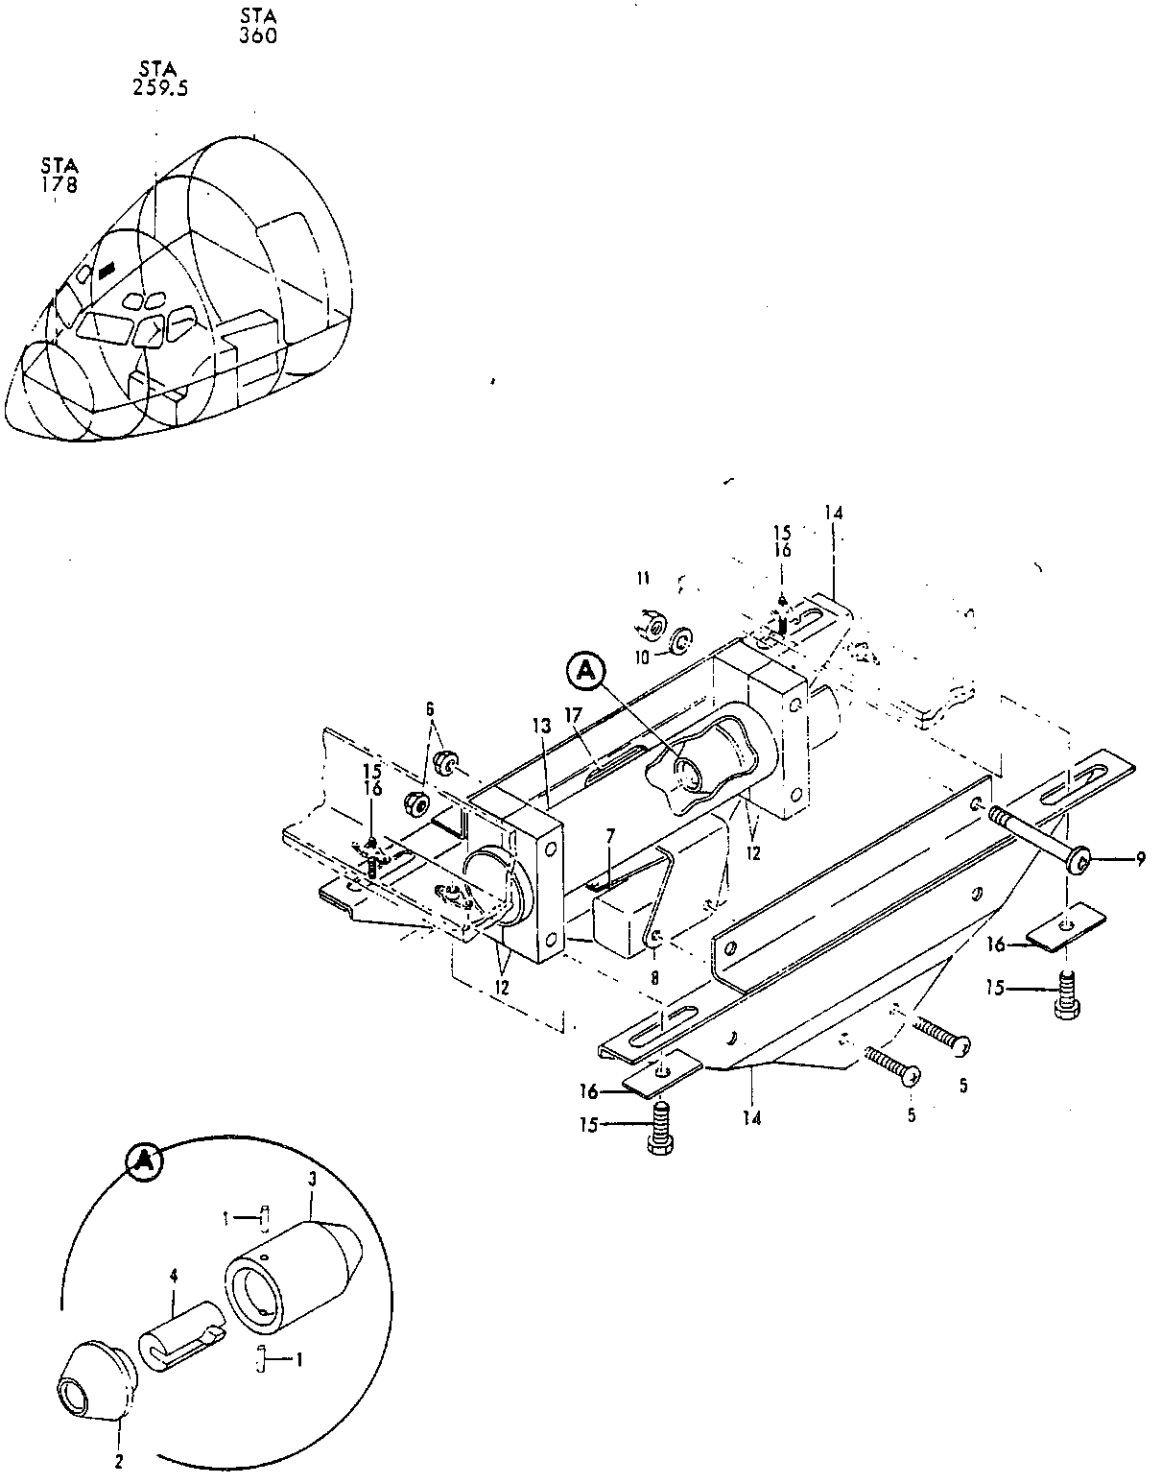


FIGURE 3A. SWITCH INSTL, NAVIGATION WARNING FLAP POSITION

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3A	65-49151-3	SWITCH INSTL, ALTITUDE ALERTING FLAP POSITION (SEE FIG. 2, ITEM 21)	5199	RF
1	MS16562-3	. PIN	5199	2
	66-1823-6	. CAM ASSY, ENGINE START SWITCH ACTUATING	5199	1
2	66-1823-7	. . CAM, ENGINE START SWITCH ACTUATING UPPER.	5199	1
3	66-1823-8	. . CAM, ENGINE START SWITCH ACTUATING LOWER.	5199	1
4	3-87757-3000	. CYLINDER, THROTTLE SWITCH ACTUATING CAM CABLE	5199	1
5	NAS601-14P	. SCREW	5199	2
6	BACN10JC06	. NUT	5199	2
7	MS25011-2	. SWITCH.	5199	1
8	BACA12D2	. ACTUATOR.	5199	1
9	NAS623-3-22	. SCREW	5199	4
10	AN960D10L	. WASHER.	5199	4
11	BACN10JC3	. NUT	5199	4
12	3-88411	. CLAMP ASSY, THROTTLE SWITCH CAM GUIDE TUBE.	5199	2
12	3-88411-1	. . CLAMP, (MATCHED PART, ORDER ASSEMBLY ONLY).	5199	2
13	66-21065	. TUBE, BACK UP SWITCH CAM WARNING GUIDE.	5199	1
14	69-36494-1	. BRACKET ASSY, NAVIGATION WARNING SWITCH FLAP POSITION SUPPORT	5199	2
		ATTACHING PARTS		
15	NAS603-9P	. BOLT.	5199	4
16	65-45096-1	. WASHER, GEAR UP WARNING FLAP POSITION SWITCH.	5199	4
		-------*-------		
17	BAC27CCT16	. MARKER-ALUMINUM FOIL, ALTITUDE ALERTING	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

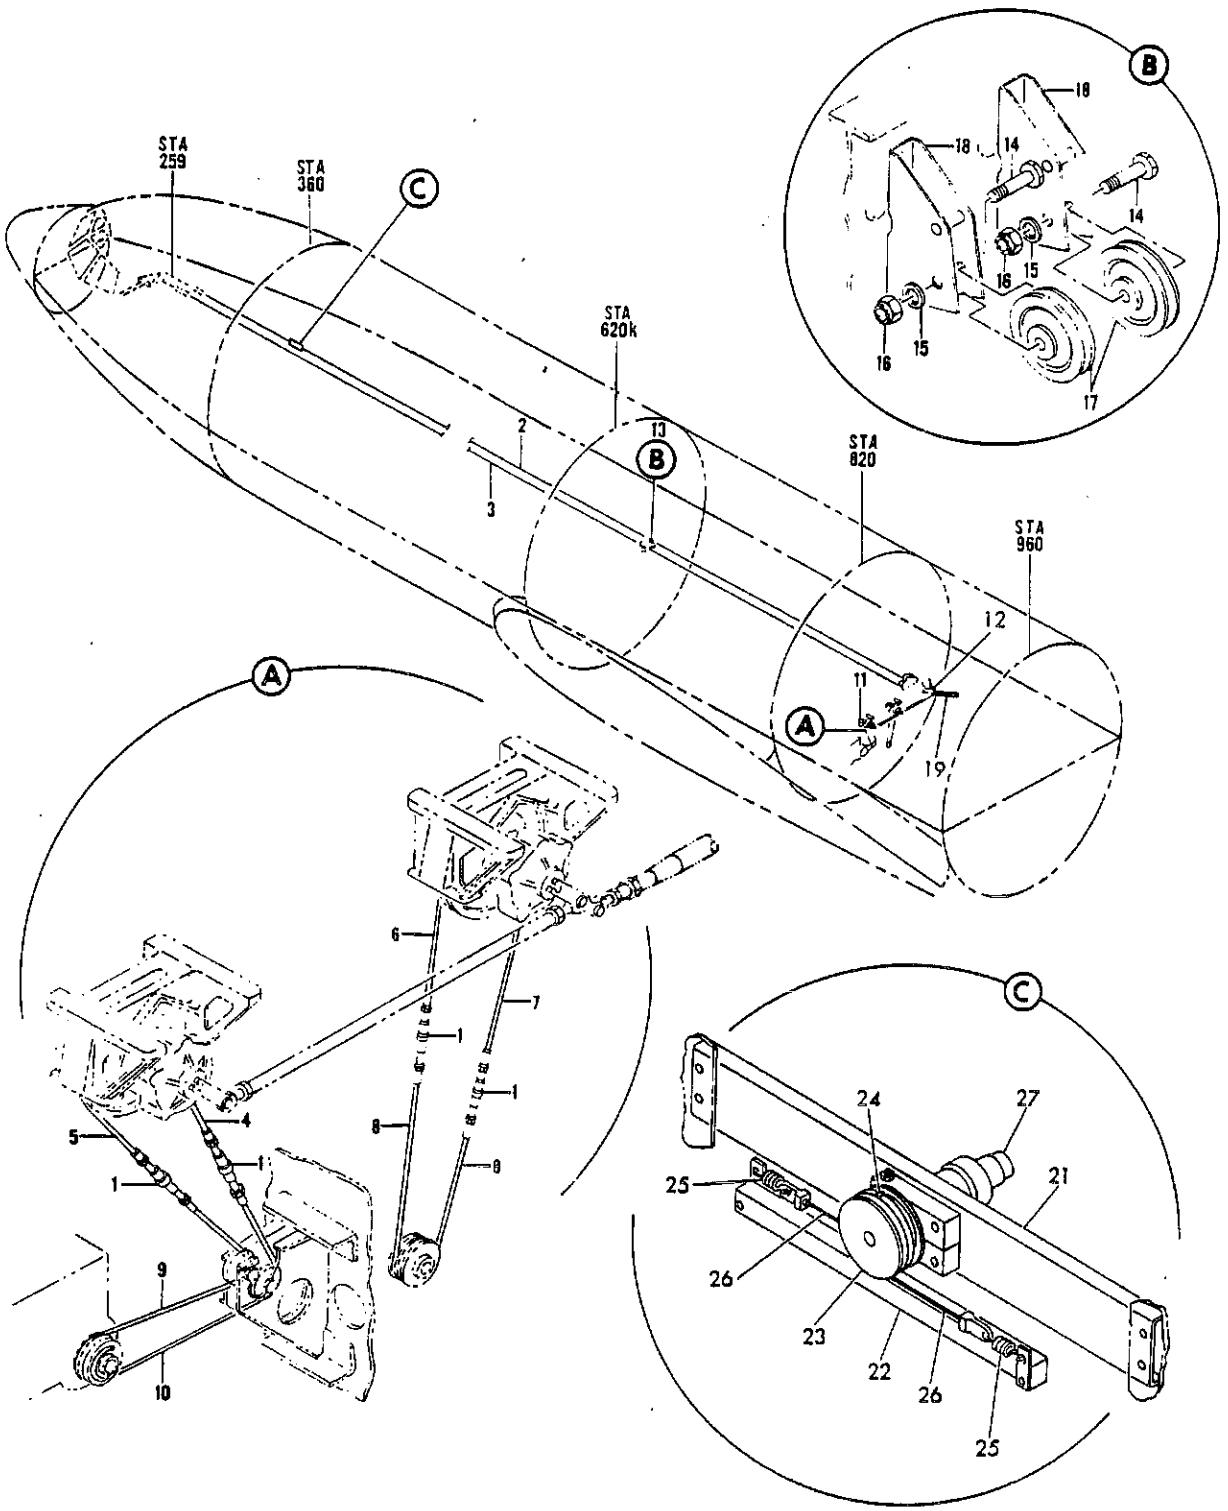


FIGURE 5. CONTROL INSTL, SECTION 43 WING FLAP

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	5	50-8707-553	CONTROL INSTL, SECTION 53 WING FLAP (SEE 53-1, FIG. 2, ITEM 7 AND 53-1, FIG. 5, ITEM 9)		RF
	1	MS21251-3S	. BARREL.		4
	2	BACC13G320-7535	. CABLE ASSY.		1
R	3	BACC13G320-7625	. CABLE ASSY.	0150	1
R	3	BACC13AD132-7625	. CABLE ASSY.	5199	1
		MS21260L3RH	. . TERMINAL.		1
	4	BACC13G318-130	. CABLE ASSY.		1
	5	BACC13G318-144	. CABLE ASSY.		1
	6	BACC13G318-162	. CABLE ASSY.		1
	7	BACC13G318-177	. CABLE ASSY.		1
		MS21260S3RH	. . TERMINAL.		1
	8	BACC13G329-145	. CABLE ASSY.		2
	9	BACC13G329-242	. CABLE ASSY.		1
	10	BACC13G329-261	. CABLE ASSY.		1
		MS21260S3LH	. . TERMINAL.		1
	11	5-97267-3013	. BRACKET INSTL, BODY STATION 830 FLAP DRIVE VALVE CONTROL		1
			. . AUTOPILOT, (SEE 22-1, FIG. 24).		
			. . FLIGHT CONTROL, (SEE FIG. 8).		
			. . NAVIGATION, (SEE 34-10, FIG. 45).		
	12	65-6889	. BRACKET INSTL, BODY STATION 820 WING FLAP CONTROL (SEE FIG. 6) . .		1
	13	50-8723-8	. PULLEY INSTL, STATION 620 WING FLAP CABLE IDLER . . .		1
	14	BACB30NE4-9	. . BOLT.		2
	15	AN960D416	. . WASHER.		2
	16	BACN10JC4	. . NUT		2
	17	AN219A1	. . PULLEY.		2
	18	60-4433	. . BRACKET ASSY, IDLER PULLEY CONTROL.		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

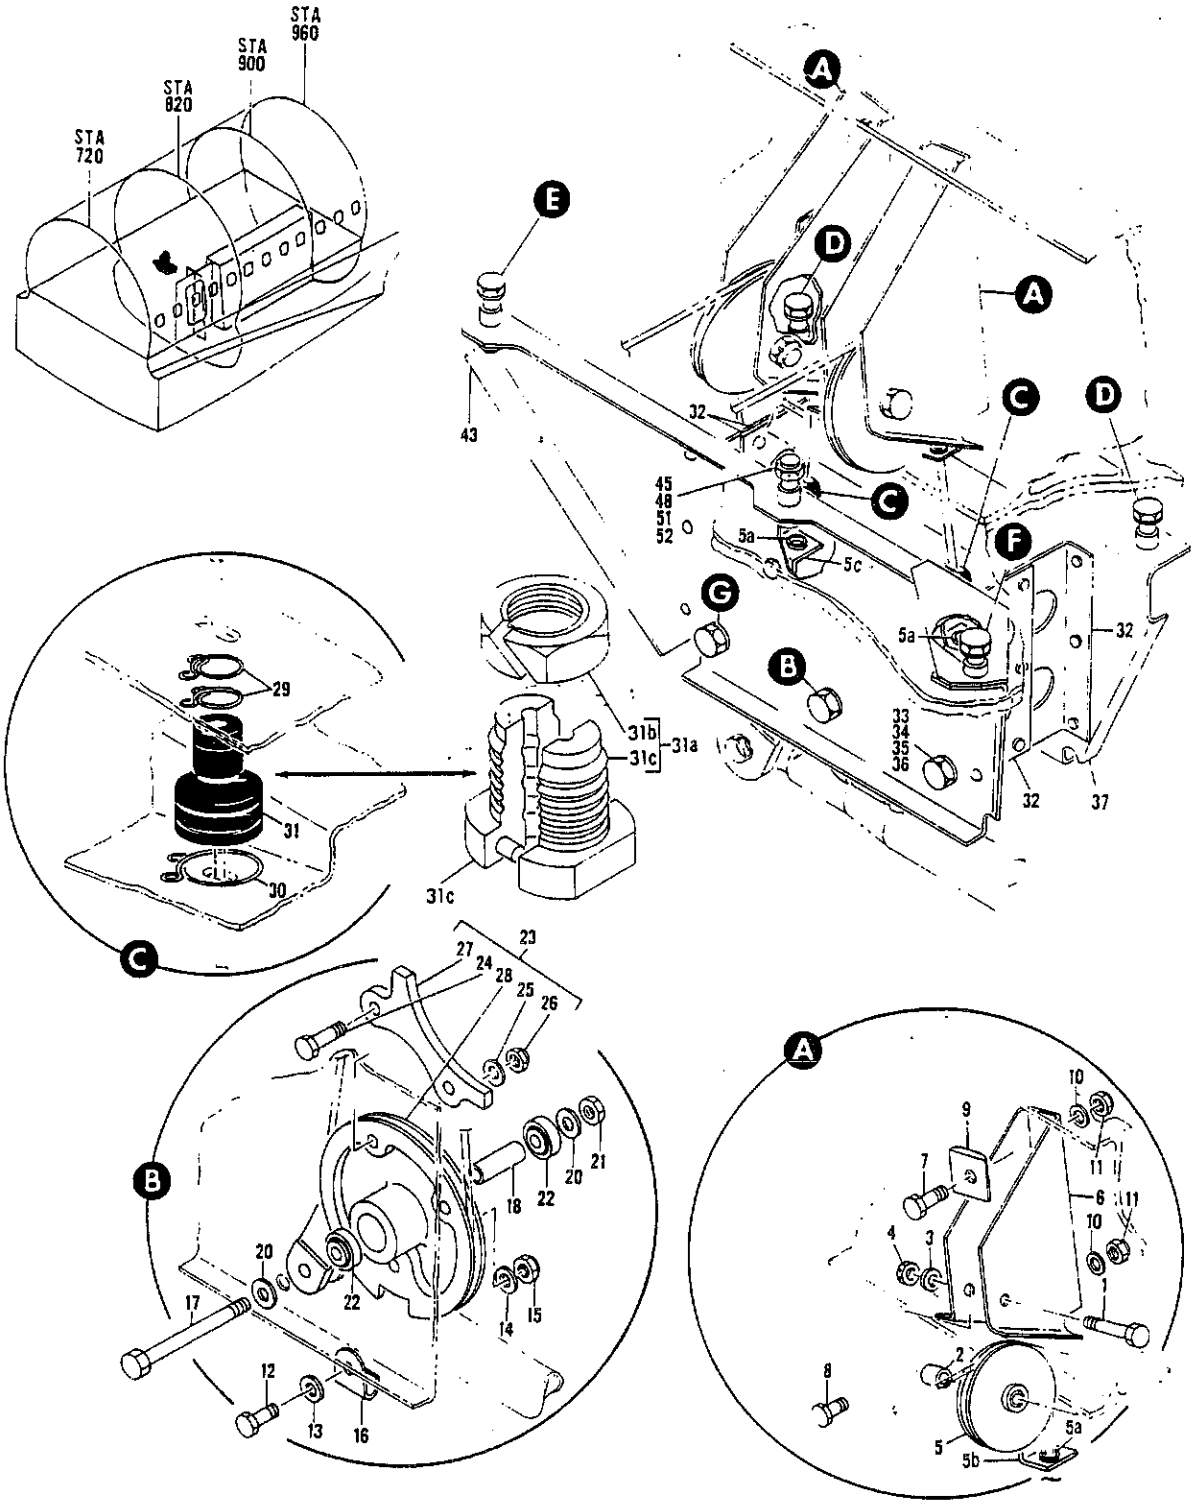


FIGURE 6. BRACKET INSTL, STATION 820 WING FLAP CONTROL (SHEET 1)

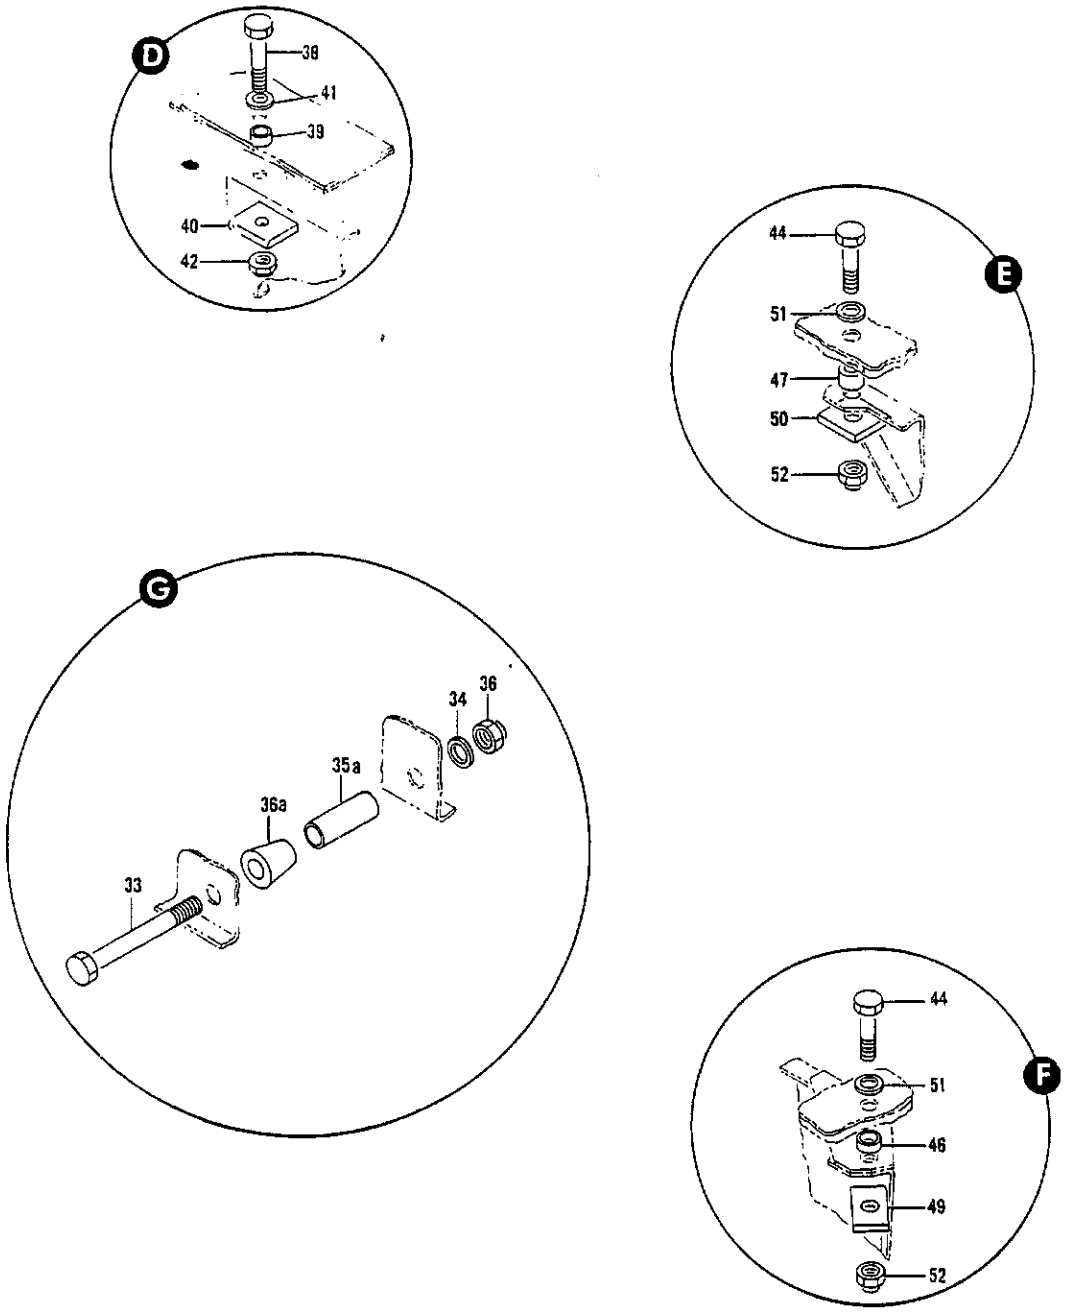


FIGURE 6. BRACKET INSTL, STATION 820 WING FLAP CONTROL (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	6	65-6889	BRACKET INSTL, STATION 820 WING FLAP CONTROL (SEE FIG. 4, ITEM 11A AND FIG. 5, ITEM 12)		RF
	1	NAS1104-14DW	. BOLT.		2
	2	NAS43DD4-20	. SPACER.		2
	3	AN960D416	. WASHER.		2
	4	AN320-4	. NUT		2
	5	AN219-4	. PULLEY.		2
	5A	NAS557-6A	. GROMMET		4
	5B	69-13208-14	. RETENTION ASSY, CONTROL CABLE SEAL.		2
	5C	69-13208-10	. RETENTION ASSY, CONTROL CABLE SEAL.		1
			ATTACHING PARTS		
		NAS1303-1W	. BOLT.		6
		AN960D10L	. WASHER.		6
			-------*-------		
	6	66-3778-2	. BRACKET ASSY, WING FLAP CONTROL		2
			ATTACHING PARTS		
	7	AN4-6A	. BOLT.		2
	8	AN4-5A	. BOLT.		2
	9	50-3361-3044	. FILLER, CONTROLS RADIUS		2
	10	AN960D416	. WASHER.		4
	11	NAS679A4W	. NUT		4
			-------*-------		
	12	AN3-7A	. BOLT.		1
	13	AN960D10	. WASHER.		1
	14	BACW10T10L	. WASHER.		1
	15	NAS679A3W	. NUT		1
	16	30-1590-2000	. RETAINER, FLAP CONTROL MECHANISM CABLE.		1
	17	NAS1104-36DW	. BOLT.		1
	18	NAS43DD4-100	. SPACER.		1
	20	AN960D416L	. WASHER.		2
	21	AN320-4	. NUT		1
	22	AN201KP4A	. BEARING		2
	23	5-95874-3002	. CRANK ASSY, BODY STATION 830 FLAP VALVE CONTROL		1
	24	NAS1103-8W	. . BOLT.		2
	25	BACW10T10	. . WASHER.		2
	26	NAS679A3W	. . NUT		2
	27	66-3776	. . STOP, WING FLAP CONTROL VALVE CRANK		1
	28	5-95874-3003	. . CRANK, BODY STATION 830 FLAP VALVE CONTROL.		1
	29	BACS11L131C	. SEAL.		4
	30	BACS11L132C	. SEAL.		2
	31	S11K3RA	. SEAL, CABLE (V74687) (AFFECTED BY AD 62-9-1).		2
	32	69-3946-2	. ANGLE, WING FLAP CONTROL VALVE CRANK.		4
	33	AN5-26A	. BOLT.		2
	34	AN960D516	. WASHER.		2
	35	NAS43DD5-134	. SPACER.		1
R	35A	NAS43DD5-88	. SPACER.	0150	1
R	35A	NAS43DD5-72	. SPACER.	5199	1
	36	NAS679A5	. NUT		2
R R	36A	65-6889-1	. STOP, STATION 820 WING FLAP CONTROL BRACKET TAPERED (OPTIONAL 65-6889-2 WITH AN960D516 (4 REQ))	0150	1
R R R R	36A	65-6889-2	. STOP, STATION 820 WING FLAP CONTROL BRACKET TAPERED (USED WITH AN960D516 (4 REQ)) (OPTIONAL TO 65-6889-1)	0150	1
R	36A	65-6889-1	. STOP, TAPERED	5199	1
	37	69-3946	. BRACKET, WING FLAP CONTROL VALVE CRANK.		1
			ATTACHING PARTS		
	38	AN4-12A	. BOLT.		2
	39	NAS43DD4-17	. SPACER.		2
	40	50-3361-3042	. FILLER, CONTROLS RADIUS		2
	41	AN960D416	. WASHER.		2
	42	NAS679A4W	. NUT		2
			-------*-------		
	43	69-35040	. BRACKET ASSY, WING FLAP CONTROL VALVE CRANK		1
			ATTACHING PARTS		
	44	AN4-11A	. BOLT.		2
	45	AN4-10A	. BOLT.		1
	46	NAS43DD4-7	. SPACER.		1
	47	NAS43DD4-11	. SPACER.		1
	48	NAS43DD4-14	. SPACER.		1
	49	50-3361-3042	. FILLER, CONTROLS RADIUS		1
	50	50-3361-3051	. FILLER, CONTROLS RADIUS,		1
	51	AN960D416L	. WASHER.		3
	52	NAS679A4W	. NUT		3
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

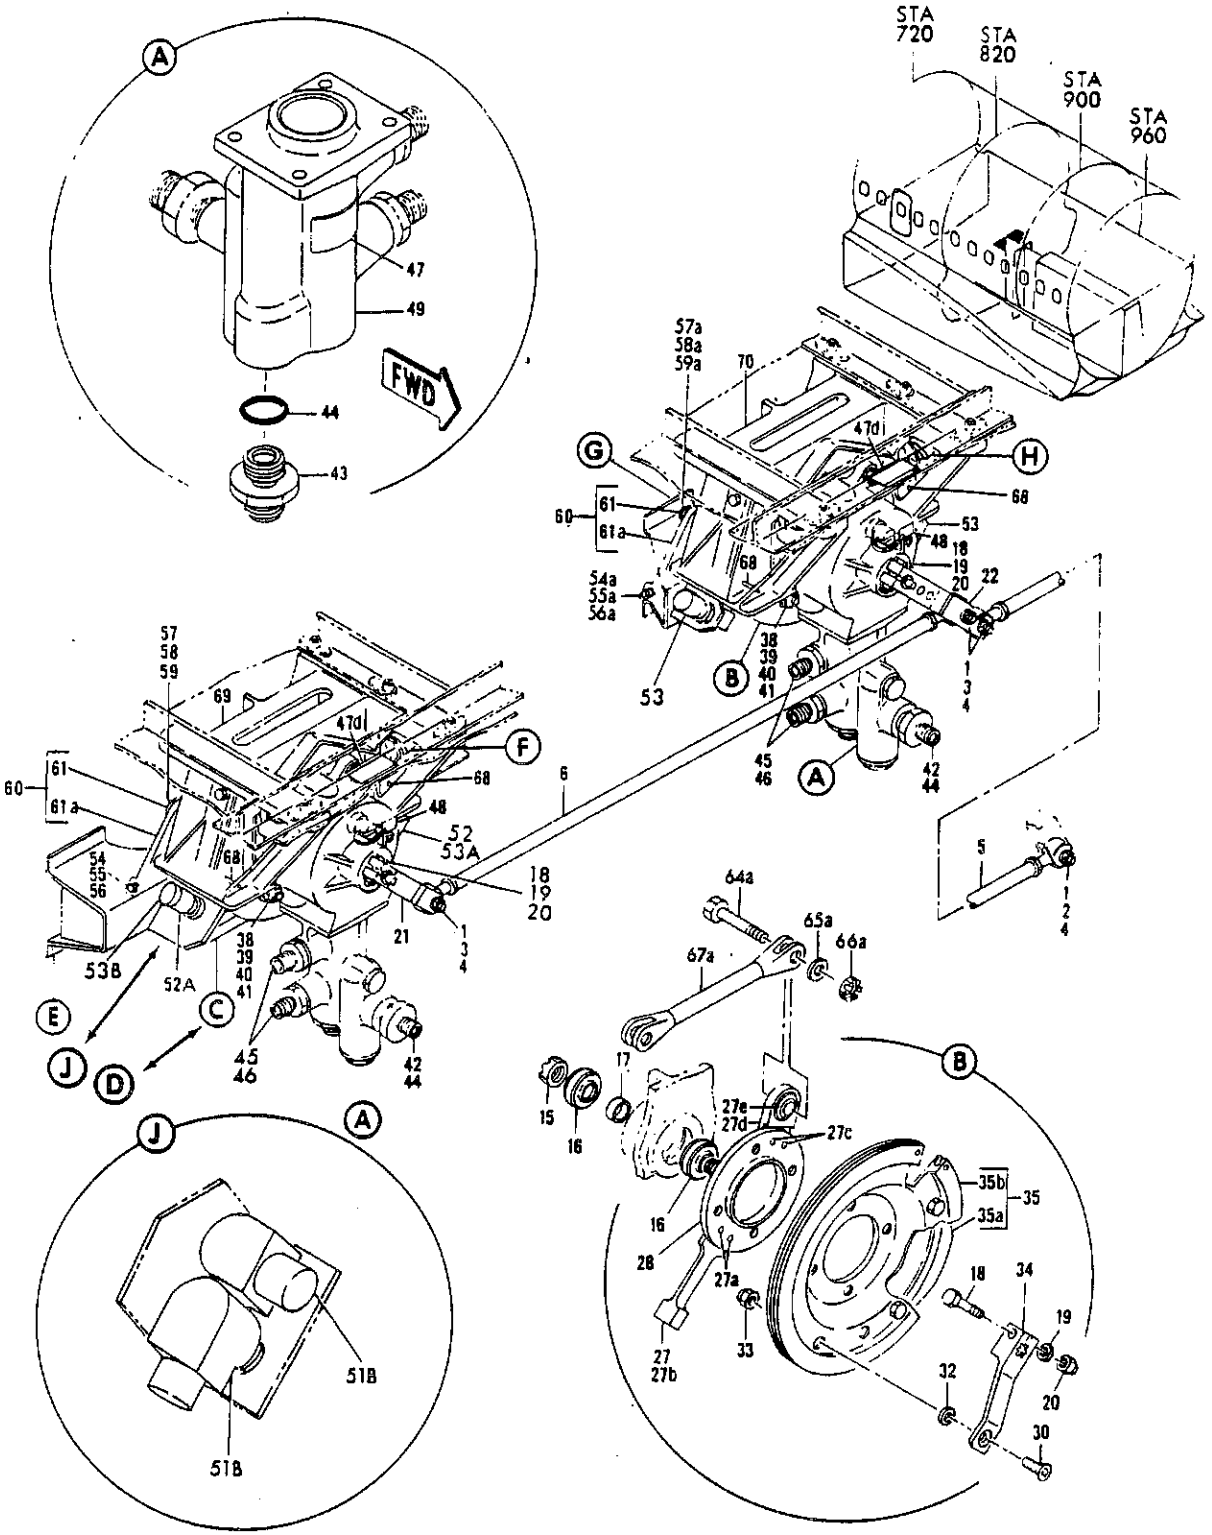


FIGURE 8. BRACKET INSTL, BODY STATION 830 FLAP DRIVE CONTROL (FLIGHT CONTROL ONLY) (SHEET 1)

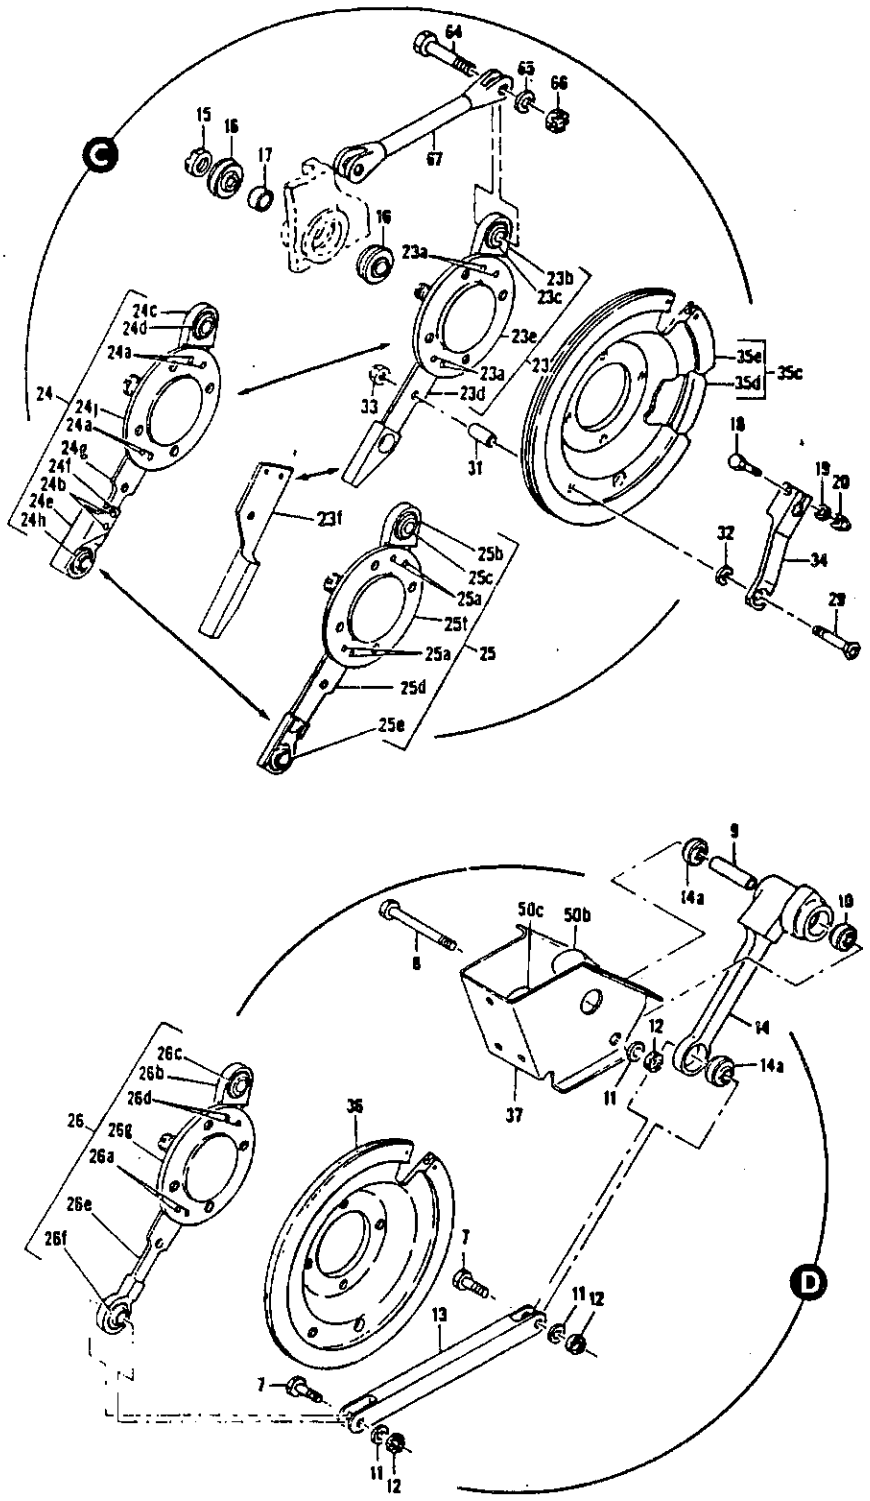


FIGURE 8. BRACKET INSTL, BODY STATION 830 FLAP DRIVE VALVE CONTROL (FLIGHT CONTROL ONLY) (SHEET 2)

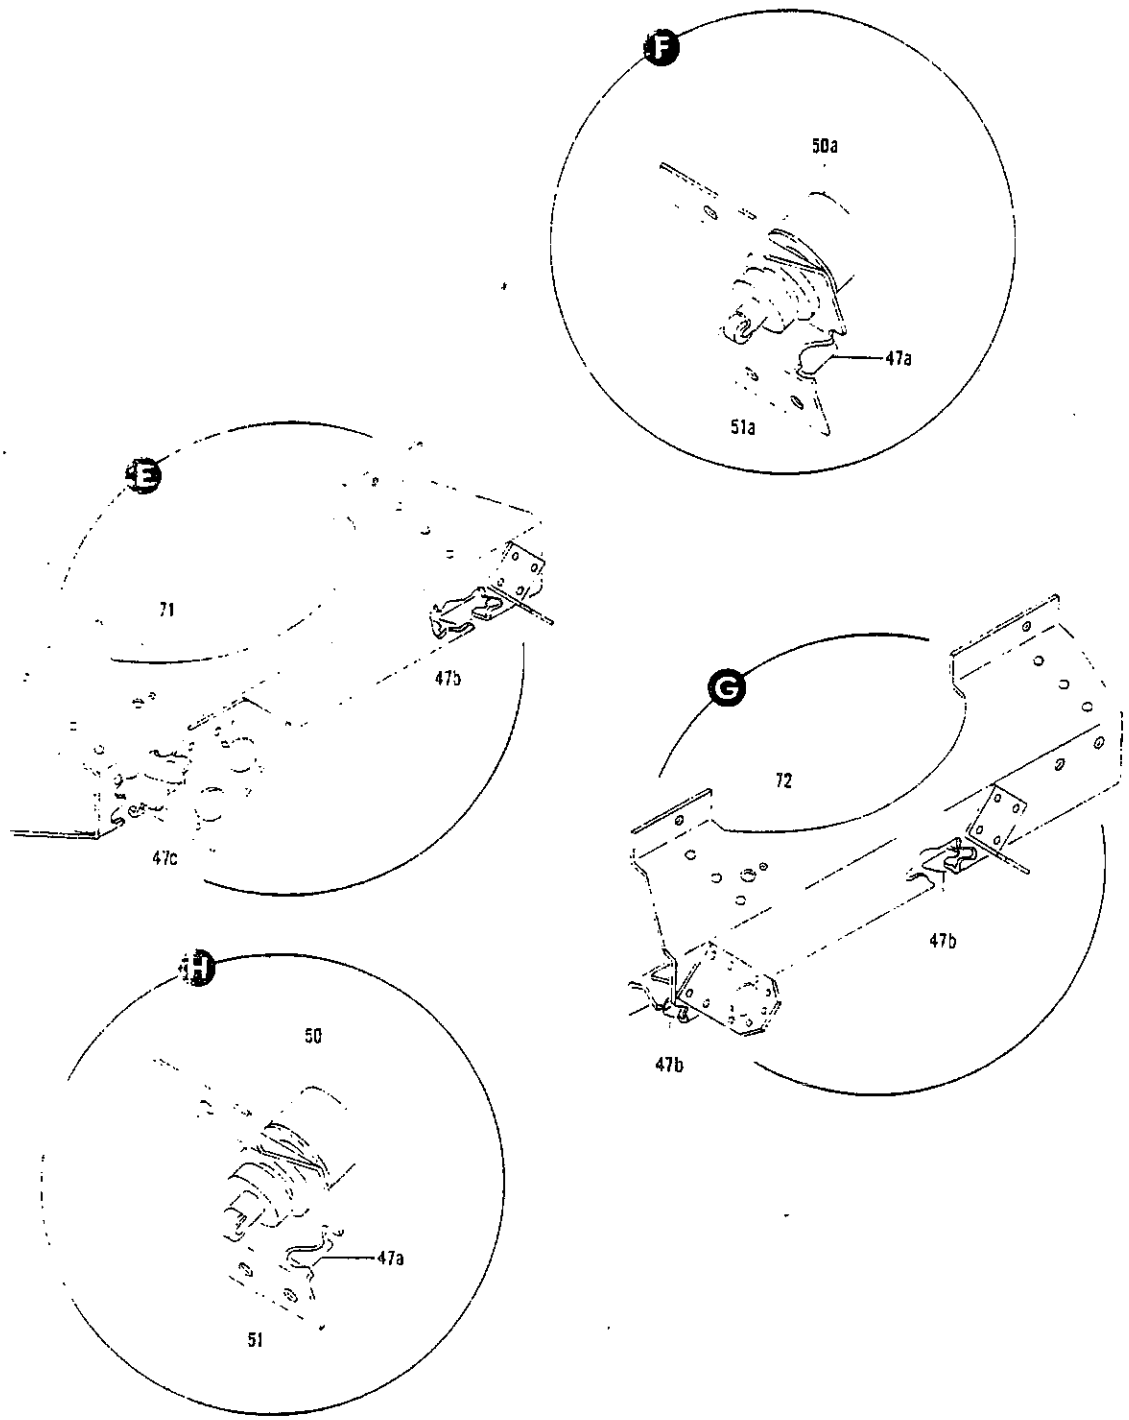


FIGURE 8. BRACKET INSTL, BODY STATION 830 FLAP DRIVE VALVE CONTROL (FLIGHT CONTROL ONLY) (SHEET 3)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8	5-97267-3013	BRACKET INSTL, BODY STATION 830 FLAP DRIVE VALVE. . . . CONTROL (FLIGHT CONTROL ONLY) (SEE FIG. 4, ITEM 11, AND FIG. 5, ITEM 11)		RF
1	NAS1104-13DW	. BOLT.		4
2	BACW10T416L	. WASHER.		2
3	AN960D416	. WASHER.		3
4	AN320-4	. NUT		4
5	BACR24E6A170	. ROD ASSY, (OPTIONAL BACR24N6-170)		1
5	BACR24N6-170	. ROD ASSY, (OPTIONAL TO BACR24E6A170)		1
6	BACR24D6A240	. ROD ASSY.		1
15	AN320-7	. NUT		2
16	AN201KPBA	. BEARING		4
17	NAS43DD8-15	. SPACER.		2
18	AN3-11A	. BOLT.		4
19	AN960D10	. WASHER.		4
20	NAS679A3W	. NUT		4
21	60-2711	. CRANK, BODY STATION 830 FLAP VALVE CONTROL.		1
22	60-2708	. CRANK, BODY STATION 830 FLAP VALVE CONTROL.		1
23	69-11956-6	. SHAFT ASSY, CONTROL		1
23A	MS20426D5	. . RIVET		4
23B	66-11140-2	. . ARM ASSY, FLAP POTENTIOMETER.		1
23C	AN201KP4A	. . . BEARING		1
23E	6-83128	. . SHAFT, FLAP VALVE CONTROL		1
23F	69-46755-1	. . ARM, SWITCH ACTUATOR.		1
27A	MS20426D5	. . RIVET, (USED ON 69-11956)		2
27B	66-1618	. . ARM, FLAP VALVE CONTROL SHAFT		1
27C	MS20426D5	. . RIVET, (USED ON 69-11956)		2
27D	66-11140-2	. . ARM ASSY, FLAP POTENTIOMETER (USED ON 69-11956)		1
27E	AN201KP4A	. . . BEARING		1
28	6-83128	. . SHAFT, FLAP VALVE CONTROL		1
29	NAS517-4-19	. SCREW		1
30	NAS517-4-6	. SCREW		1
31	NAS43DD4-48	. SPACER.		1
32	AN960D416	. WASHER.		AR
33	NAS679A4W	. NUT		2
34	6-83888	. CRANK, BODY STATION 830 FLAP VALVE CONTROL FOLLOW-UP		2
35	69-11968-7	. DRUM ASSY, BODY STATION 830 FLAP VALVE CONTROL. . . . ATTACHING PARTS		1
	NAS1104-6W	. BOLT.		1
	AN960D416	. WASHER.		1
	NAS679A4W	. NUT		1
		-------*-------		
35A	65-13375-7	. . CAM, FLAP WARNING SWITCH (USED ON 69-11968-7) . . . ATTACHING PARTS		1
	AN3-4A	. . BOLT.		2
	NAS679A3W	. . NUT		2
		-------*-------		
35B	9-66067-2000	. . DRUM, BODY STATION 830 FLAP VALVE CONTROL . . . . . ATTACHING PARTS		1
	NAS1104-6W	. . BOLT.		4
	AN960D416	. . WASHER.		4
	NAS679A4W	. . NUT		4
		-------*-------		
35C	69-11968-7	. DRUM ASSY, BODY STATION 830 FLAP VALVE CONTROL. . . . ATTACHING PARTS		1
	NAS1104-6W	. BOLT.		4
	AN960D416	. WASHER.		4
	NAS679A4W	. NUT		4
		-------*-------		
35D	65-13375-7	. . CAM, FLAP WARNING SWITCH (USED ON 69-11968-7) . . . ATTACHING PARTS		1
	AN3-4A	. . BOLT.		2
	NAS679A3W	. . NUT		2
		-------*-------		
35E	9-66067-2000	. . DRUM, BODY STATION 830 FLAP VALVE CONTROL		1
38	AN4-10A	. BOLT.		8
39	BACW10T416L	. WASHER.		8
40	AN960D416	. WASHER.		8
41	NAS679A4W	. NUT		8
42	MS21902D8	. UNION		2
43	MS21916D8-6	. REDUCER		2
44	NAS1612-8	. PACKING		4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8	45	MS21902-6	. UNION . . . . . (OPTIONAL MS21902D6)		4
	45	MS21902D6	. UNION . . . . . (OPTIONAL TO MS21902-6)		4
	46	NAS1612-6	. PACKING		4
	47	BACM10V20-2AEF	. MARKER-ALUMINUM FOIL, FLAP CONTROL VALVE.		2
	47A	BACM10S3ZY	. MARKER-ALUMINUM FOIL, SWITCH.		2
	47B	BACM10S3ZT	. MARKER-ALUMINUM FOIL, SWITCH.		3
	47C	BACM10S3ZX	. MARKER-ALUMINUM FOIL, SWITCH.		1
	47D	BACM10V2ARR	. MARKER-ALUMINUM FOIL, VALVE		2
	48	BACN12M10-1FS	. NAMEPLATE, SERVICING INSTRUCTIONS		2
	49	65-21890-1	. VALVE ASSY, FLAP CONTROL (SEE FIG. 8A).		2
	50	21EN87-6	. SWITCH, (V91929).		1
	50A	21EN87-6	. SWITCH, (V91929).		1
	51	66-11240	. BRACKET, FLAP WARNING SWITCH.	0102	1
	51	66-11240-2	. BRACKET, WARNING SWITCH	0399	1
	51A	66-11240	. BRACKET, FLAP WARNING SWITCH.	0102	1
	51A	66-11240-2	. BRACKET, WARNING SWITCH	0399	1
			ATTACHING PARTS		
		AN3-4A	. BOLT.		6
		BACW10T10L	. WASHER.		6
			-------*-------		
	52A	H11-1050	. SWITCH, RUDDER PRESSURE LIMIT (V81640). . . . . (OPTIONAL 5EN43R (V91929))		1
	52A	5EN43R	. SWITCH, RUDDER PRESSURE LIMIT (V91929). . . . . (OPTIONAL TO H11-1050 (V81640))		1
	54	AN4-11A	. BOLT.		1
	54A	AN4-11A	. BOLT.		1
	55	AN960PD416	. WASHER.		1
	55A	AN960PD416	. WASHER.		1
	56	NAS679A4W	. NUT		1
	56A	NAS679A4W	. NUT		1
	57	NAS1103-9DW	. BOLT.		1
	57A	NAS1103-9DW	. BOLT.		1
	58	AN960PD10	. WASHER.		1
	58A	AN960PD10	. WASHER.		1
	59	AN320-3	. NUT		1
	59A	AN320-3	. NUT		1
	60	65-14623	. CRANK ASSY. . . . . (OPTIONAL 69-11614)		1
	60	69-11614	. CRANK ASSY. . . . . (OPTIONAL TO 65-14623)		1
	60A	65-14623	. CRANK ASSY. . . . . (OPTIONAL 69-11614)		1
	60A	69-11614	. CRANK ASSY. . . . . (OPTIONAL TO 65-14623)		1
	61	AN201KP3A	. . BEARING		1
	61A	65-14623-1	. . CRANK, FLAP POTENTIOMETER (USED ON 65-14623). . .		1
	61A	69-11614-1	. . CRANK, FLAP POTENTIOMETER (USED ON 69-11614). . .		1
	64	BAC830ABP4-9	. BOLT.		1
	64A	BAC830ABP4-9	. BOLT.		1
	65	AN960PD416	. WASHER.		1
	65A	AN960PD416	. WASHER.		1
	66	AN320-4	. NUT		1
	66A	AN320-4	. NUT		1
	67	66-11149	. ROD, FLAP POTENTIOMETER		1
	67A	66-11149	. ROD		1
	68	BACP18CDD3-262	. PIN		4
R	69	5-89899-3008	. BRACKET ASSY, BODY STATION 830 FLAP DRIVE CONTROL . . (OPTIONAL 5-89899-3012)	0150	1
R	69	5-89899-3012	. BRACKET ASSY, BODY STATION 830 FLAP DRIVE CONTROL . . (OPTIONAL TO 5-89899-3008)	0150	1
R	69	5-89899-3012	. BRACKET ASSY, BODY STATION 830 FLAP DRIVE CONTROL . .	5199	1
R	70	5-89899-3008	. BRACKET ASSY, BODY STATION 830 FLAP DRIVE CONTROL . .	0150	1
R	70	5-89899-3008	. BRACKET ASSY, BODY STATION 830 FLAP DRIVE CONTROL . . (OPTIONAL 5-89899-3012)	0150	1
R	70	5-89899-3012	. BRACKET ASSY, BODY STATION 830 FLAP DRIVE CONTROL . . (OPTIONAL TO 5-89899-3008)	0150	1
R	70	5-89899-3012	. BRACKET ASSY, BODY STATION 830 FLAP DRIVE CONTROL . .	5199	1
			ATTACHING PARTS		
		AN4-7A	. BOLT.		8
		AN4-10A	. BOLT.		4
		BACW10T416L	. WASHER.		12
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8 71	69-47249-1	. BRACKET ASSY, CONTROL SWITCH.		1
72	69-1074-16	. BRACKET ASSY, FLAP DRIVE VALVE CONTROL SWITCH	0102	1
72	69-1074-24	. BRACKET ASSY, CONTROL SWITCH.	0399	1
		. FOR REFERENCE TO OTHER BRACKET DETAILS, SEE NHA . . .		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

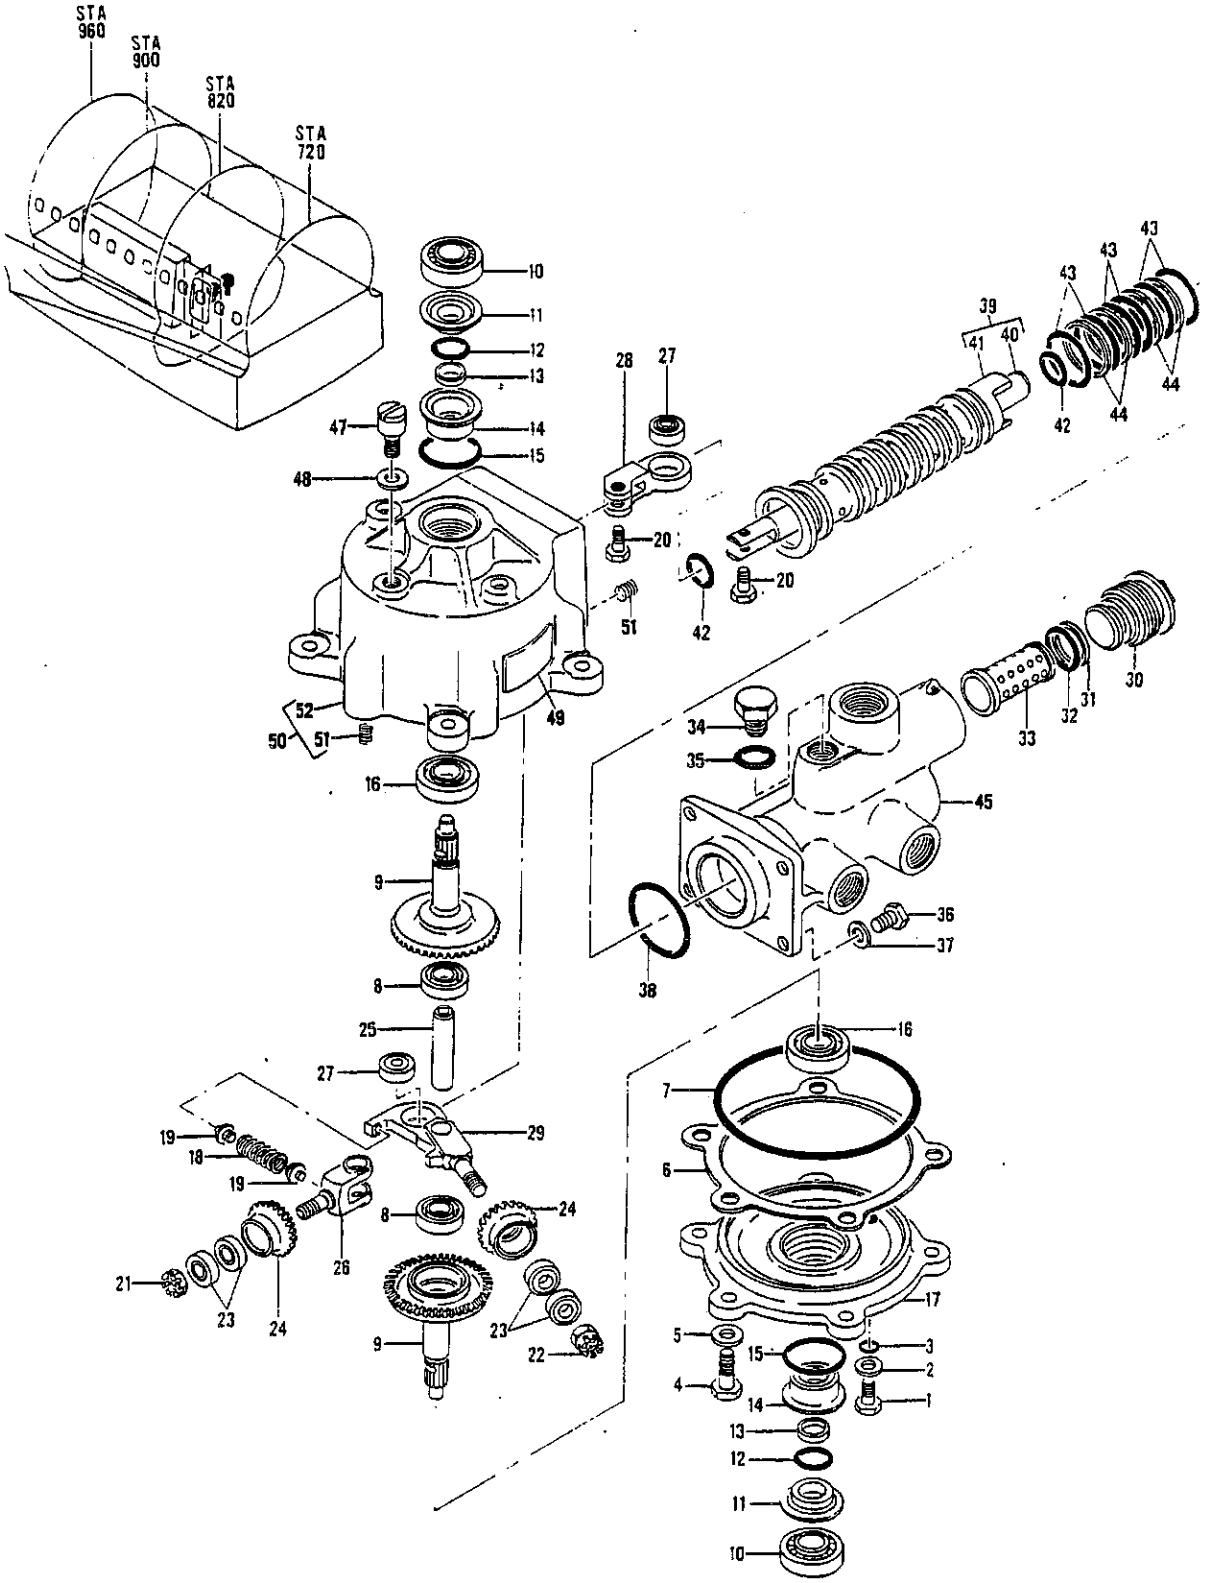


FIGURE 8A. VALVE ASSY, FLAP CONTROL

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8A	65-21890-1	VALVE ASSY, FLAP CONTROL (SEE FIG. 8, ITEM 49).		RF
1	AN4H3A	. BOLT.		1
2	AN960PD416L	. WASHER.		1
3	BACP11F5	. PACKING		1
4	AN4H5A	. BOLT.		5
5	AN960PD416L	. WASHER.		5
6	6-84183	. SHIM, FLAP CONTROL VALVE.		1
7	BACP11G16	. PACKING		1
8	BACB10AT6	. BEARING		2
9	9-48743	. GEAR, FLAP CONTROL VALVE BEVEL.		2
10	BACB10BX8	. BEARING		2
11	6-84185	. SEAT, FLAP CONTROL VALVE.		2
12	BACP11F10	. PACKING		2
13	6-61913	. RING, SEAL ROTARY LOW PRESSURE.		2
14	6-84184	. GLAND, FLAP CONTROL VALVE		2
15	BACP11F18	. PACKING		2
16	BACB10AT8	. BEARING		2
17	5-63428-2002	. CAP, FLAP CONTROL VALVE		1
18	3-84485	. SPRING, CONTROL VALVE COMPRESSION		1
19	3-84486	. GUIDE, FLAP CONTROL VALVE SPRING.		2
20	3-84484	. BOLT, FLAP CONTROL VALVE SPECIAL.		2
21	AN320-4	. NUT		1
22	3-94311	. NUT, FLAP CONTROL VALVE SPECIAL		1
23	BACB10AT4	. BEARING		4
24	9-66385	. PINION, FLAP CONTROL VALVE.		2
25	3-84487	. SHAFT, FLAP CONTROL VALVE		1
26	6-84186-1	. FORK, FLAP CONTROL VALVE.		1
27	AN200KS3L	. BEARING		2
28	6-61566	. LINK, FLAP CONTROL VALVE.		1
29	9-66387-1	. CRANK, FLAP CONTROL VALVE . . . . . (OPTIONAL 9-66387-1)		1
29	9-66387-2	. CRANK, FLAP CONTROL VALVE . . . . . (OPTIONAL TO 9-66387-1)		1
30	60-4339	. PLUG, FLAP CONTROL VALVE.		1
31	MS28782-13	. RING.		1
32	BACP11F13	. PACKING		1
34	AN814-4DL	. PLUG AND BLEEDER.		1
35	BACP11H4	. PACKING		1
36	AN4H5A	. BOLT.		4
37	AN960PD416L	. WASHER.		4
38	BACP11F24	. PACKING		1
39	69-15911-1	. SLIDE ASSY, FLAP CONTROL VALVE. . . . . (OPTIONAL AND FOR REPLACEMENT ORDER 65-89620-5, 65-89620-6)		1
39	65-89620-2	. SLIDE ASSY. . . . . (OPTIONAL AND FOR REPLACEMENT ORDER 65-89620-5, 65-89620-6)		1
39	69-15911-4	. SLIDE ASSY, FLAP CONTROL VALVE. . . . . (OPTIONAL AND FOR REPLACEMENT ORDER 65-89620-5,		1
39	65-89620-1	. SLIDE ASSY. . . . . (OPTIONAL AND FOR REPLACEMENT ORDER 65-89620-5, 65-89620-6)		1
39	65-89620-5	. SLIDE ASSY. . . . . (OPTIONAL TO AND FOR REPLACEMENT ORDER 69-15911-1, 69-15911-4, 65-89620-1, 65-89620-2)		1
39	65-89620-6	. SLIDE ASSY. . . . . (OPTIONAL TO AND FOR REPLACEMENT ORDER 69-15911-1, 69-15911-4, 65-89620-1, 65-89620-2)		1
40	69-15878-1	. . SLIDE, FLAP CONTROL VALVE (USED ON 69-15911-1). . .		1
40	65-89622-1	. . SLIDE, FLAP CONTROL VALVE (USED ON 65-89620-1). . . (OPTIONAL TO 65-89622-2)		1
40	65-89622-2	. . SLIDE, FLAP CONTROL VALVE (USED ON 65-89620-1). . . (OPTIONAL 65-89622-1)		1
40	65-89622-3	. . SLIDE, FLAP CONTROL VALVE (USED ON 65-89620-2, -3 . AND -4) (OPTIONAL 65-89622-4)		1
40	65-89622-4	. . SLIDE, FLAP CONTROL VALVE (USED ON 65-89620-2, -3 . AND -4) (OPTIONAL TO 65-89622-3)		1
41	65-21879-1	. . SLEEVE, FLAP CONTROL VALVE (USED ON 69-15911-1) . .		1
41	65-89621-1	. . SLEEVE, FLAP CONTROL VALVE (USED ON 65-89620-1) . .		1
41	65-89621-2	. . SLEEVE, FLAP CONTROL VALVE (USED ON 65-89620-2, -3 AND -4) (OPTIONAL 6589621-3)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8A 41	65-89621-3	. . SLEEVE, FLAP CONTROL VALVE (USED ON 65-89620-2, -3 AND -4) (OPTIONAL TO 65-89621-2)		1
41A	NAS1611-112	. . PACKING		2
42	BACP11F10	. PACKING		2
43	BACP11F17	. PACKING		6
44	MS28782-17	. RING. (OPTIONAL MS28774-212)		4
44	MS28774-212	. RING. (OPTIONAL TO MS28782-17)		4
45	50-6880-2	. BODY, FLAP CONTROL VALVE.		1
47	3-87089	. PLUG ASSY, FLAP CONTROL VALVE FILLER.		1
48	AN960PD516	. WASHER.		1
49	BACN12F1H	. NAMEPLATE, CONTROL VALVE FLAP		1
		ATTACHING PARTS		
	MS21318-7	. SCREW		2
		-------*-------		
50	50-9320	. HOUSING ASSY, FLAP CONTROL VALVE.		1
51	BACS13P4-3	. . INSERT.		9
52	50-9320-1	. . HOUSING, FLAP CONTROL VALVE		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

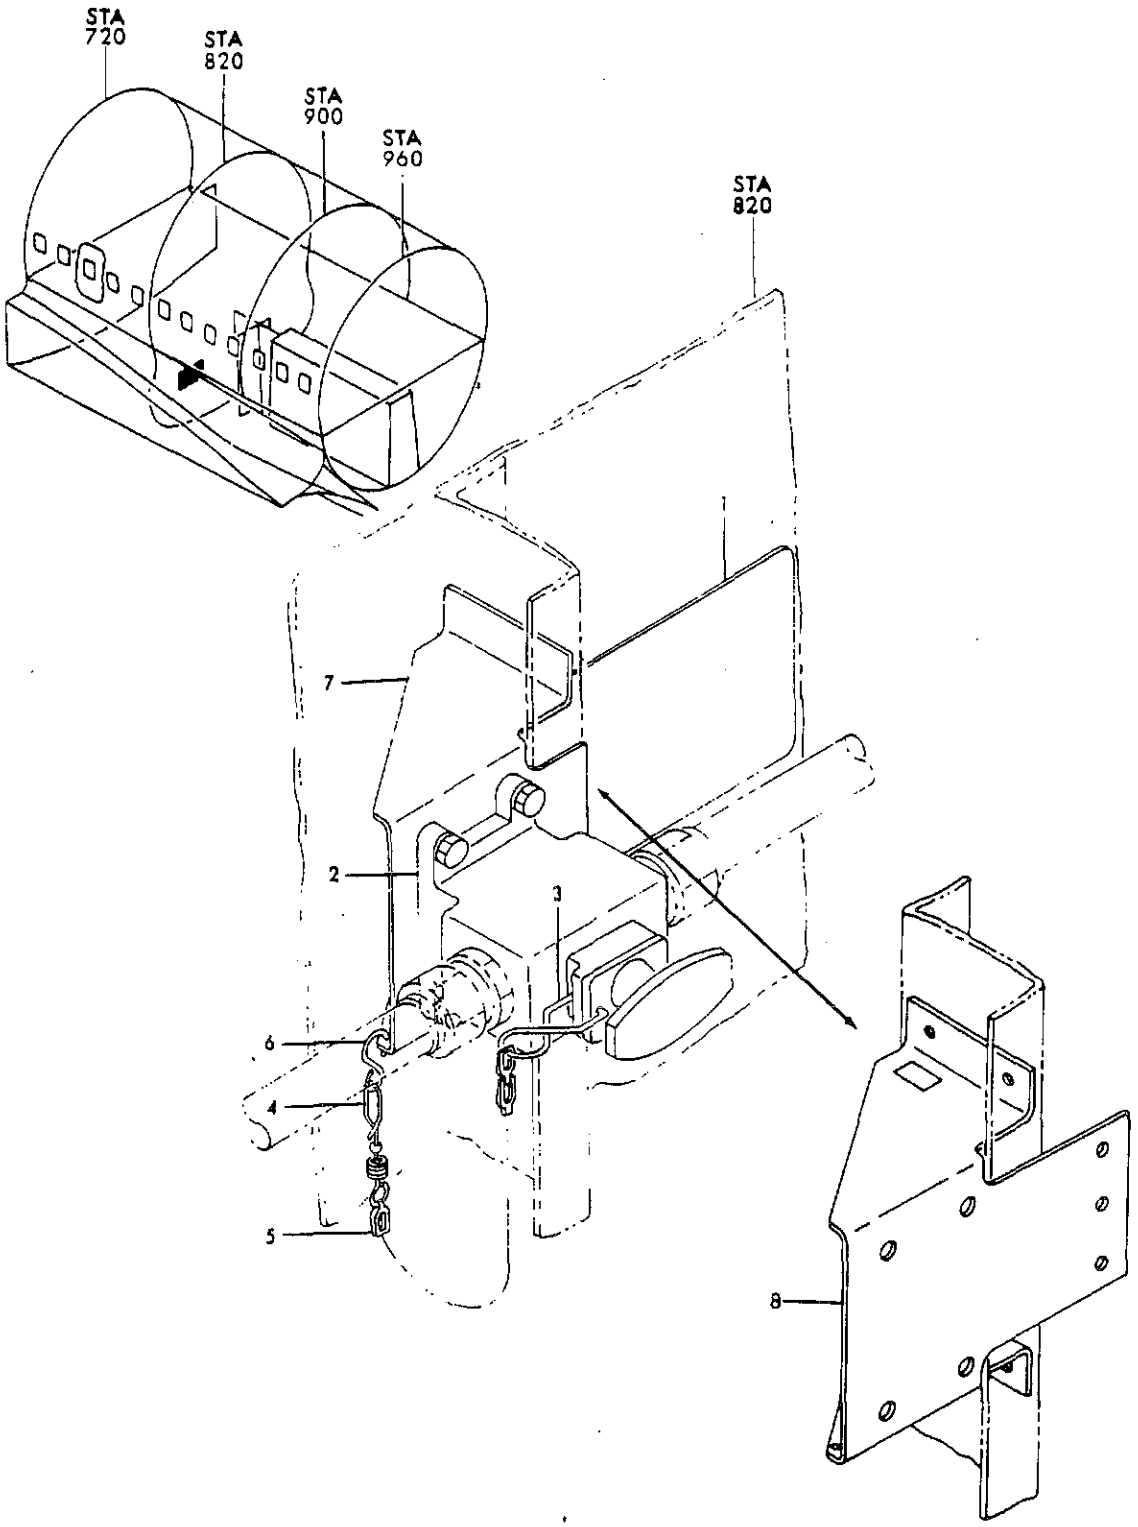


FIGURE 9D. VALVE INSTL, LEADING EDGE FLAP HYDRAULIC SYSTEM MANUAL SHUTOFF

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	9D	69-51956-1	VALVE INSTL, LEADING EDGE FLAP HYDRAULIC SYSTEM MANUAL SHUTOFF (SEE 29-4, FIG. 7, ITEM 131A)	0150	RF
R	1	BAC27CHY10	. MARKER-ALUMINUM FOIL, LEADING EDGE SHUTOFF VALVE. . . INSTRUCTIONS	0150	1
R	2	147825	. VALVE ASSY, SHUTOFF (V79318). . . . . ATTACHING PARTS	0150	1
R		AN3-6A	. BOLT.	0150	4
R		AN960D10	. WASHER. . . . . -------*-------	0150	4
R	3	69-51943-1	. RETAINER, SAFETY PIN.	0150	1
R	4	BACC19B9	. SWIVEL.	0150	1
R	5	NAS1455C03	. CHAIN	0150	1
R	6	NAS1090-1	. HOOK.	0150	1
R	7	69-51934-1	. BRACKET ASSY.	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

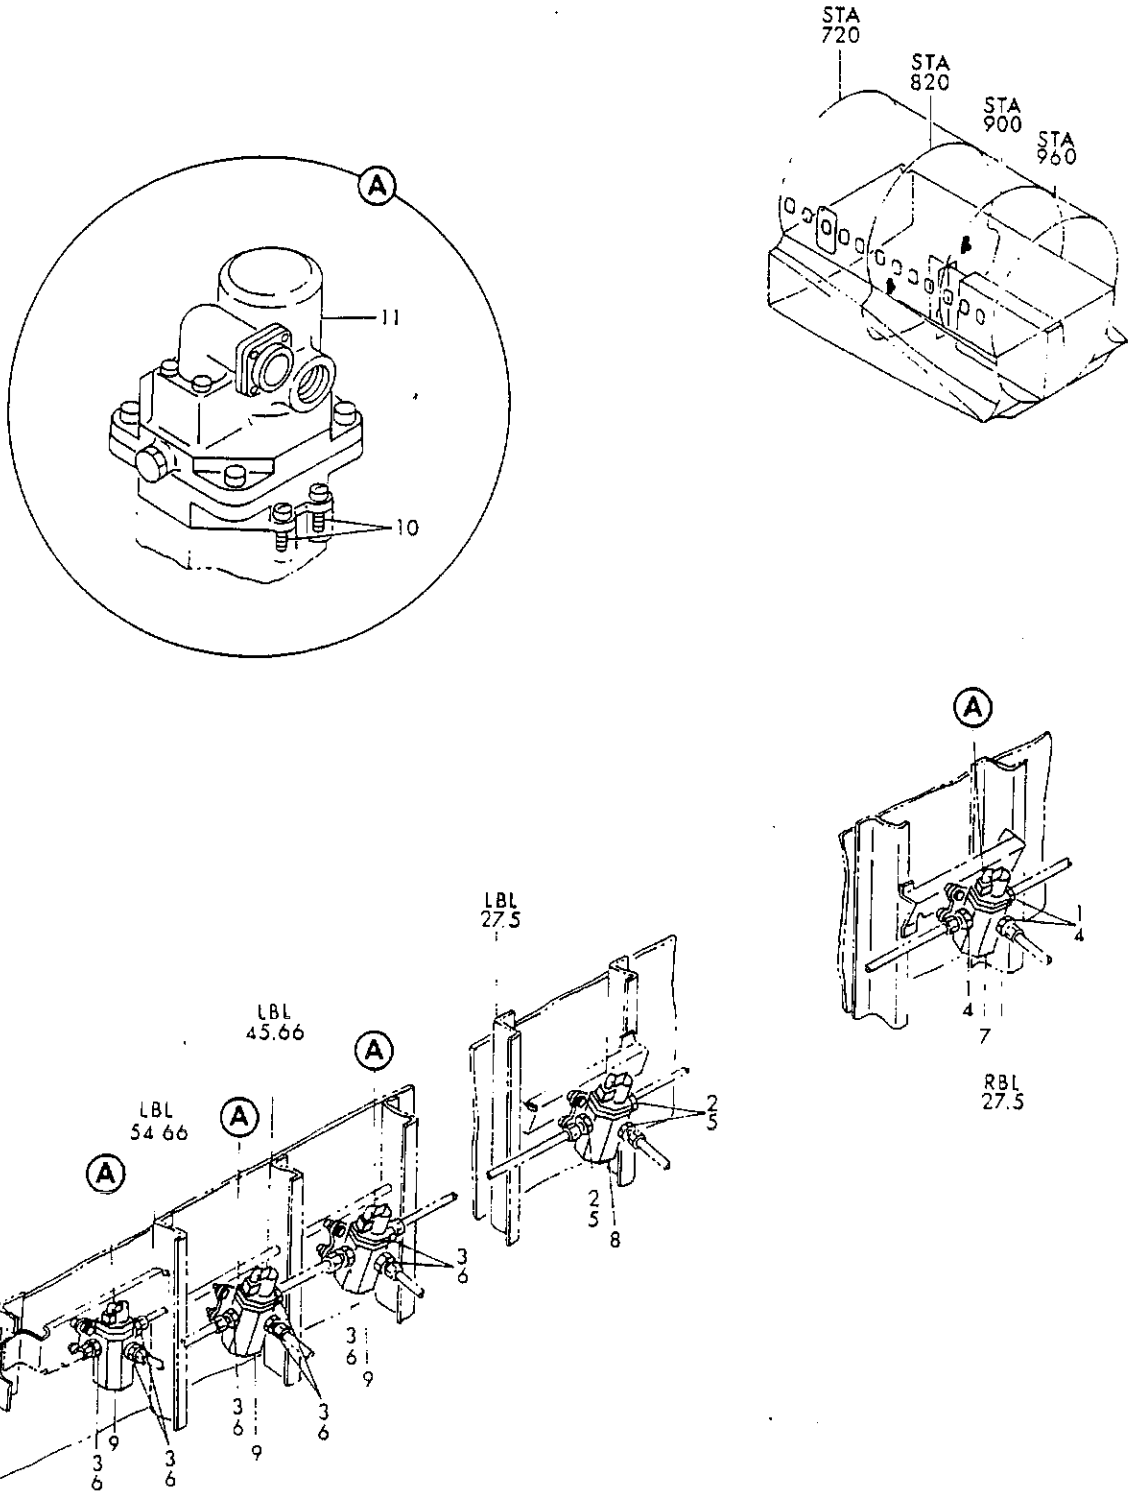


FIGURE 10. VALVE INSTL, MOTOR OPERATED HYDRAULIC (FLAP CONTROL AND DRIVE ONLY)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	10	65-23419-1	VALVE INSTL, MOTOR OPERATED HYDRAULIC (FLIGHT CONTROL . (FLAP CONTROL AND DRIVE) ONLY) (SEE 53-1, FIG. 2, ITEM 12A)		RF
	1	MS21916-8-6	. REDUCER		3
	3	MS21902D8	. UNION		9
	4	NAS1612-8	. PACKING		3
	6	NAS1612-8	. PACKING		9
R	7	10-60710-7	. VALVE ASSY, DC ACTUATED	5299	1
R	7	10-60710-3	. VALVE ASSY, DC ACTUATED . . . . . (OPTIONAL BAC SPEC NO. 10-60710-4)	0151	1
R	7	10-60710-4	. VALVE ASSY, DC ACTUATED . . . . . (OPTIONAL TO BAC SPEC NO. 10-60710-3 AND OPTIONAL BAC SPEC NO. 10-60710-7)	0151	1
R	7	10-60710-7	. VALVE ASSY, DC ACTUATED . . . . . (OPTIONAL TO BAC SPEC NO. 10-60710-4)	0151	1
R	9	10-60710-3	. VALVE ASSY, DC ACTUATED . . . . . (OPTIONAL BAC SPEC NO. 10-60710-4)	0151	3
R	9	10-60710-4	. VALVE ASSY, DC ACTUATED . . . . . (OPTIONAL TO BAC SPEC NO. 10-60710-3 AND OPTIONAL BAC SPEC NO. 10-60710-7)	0151	3
R	9	10-60710-7	. VALVE ASSY, DC ACTUATED . . . . . (OPTIONAL TO BAC SPEC NO. 10-60710-4)	0151	3
R	9	10-60710-7	. VALVE ASSY, DC ACTUATED . . . . . ATTACHING PARTS	5299	3
		AN4-6A	. BOLT.		8
		AN960D416	. WASHER.		8
			-------*-------		
			. FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE


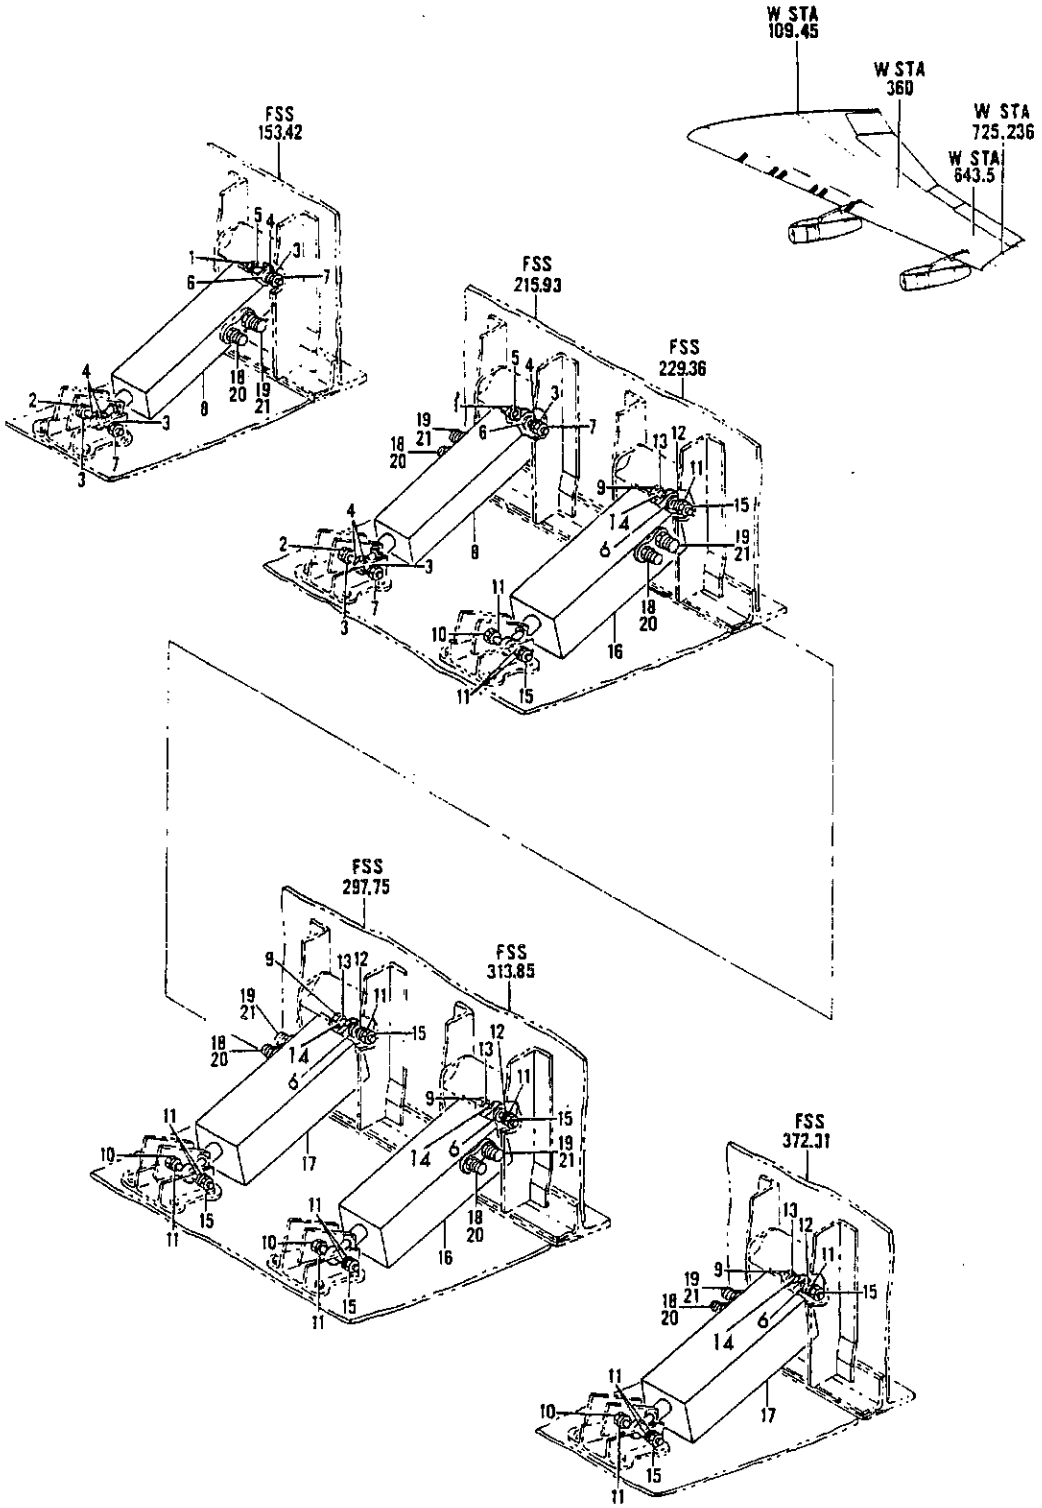



FIGURE 16. ACTUATOR INSTL, INBOARD LEADING EDGE FLAP

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	16	65-33142-1	ACTUATOR INSTL, INBOARD LEADING EDGE FLAP (DELETED BY SB 2956) (LH) (SEE 29-2, FIG. 10, ITEM 79)	0150	RF
		65-33142-3	ACTUATOR INSTL, INBOARD LEADING EDGE FLAP (ADDED BY SB 2956) (LH) (SEE 29-2, FIG. 10, ITEM 79)	0150	RF
		65-33142-2	ACTUATOR INSTL, INBOARD LEADING EDGE FLAP (DELETED BY SB 2956) (RH) (SEE 29-2, FIG. 10, ITEM 79)	0150	RF
		65-33142-4	ACTUATOR INSTL, INBOARD LEADING EDGE FLAP (ADDED BY SB 2956) (RH) (SEE 29-2, FIG. 10, ITEM 79)	0150	RF
		65-33142-3	ACTUATOR INSTL, INBOARD LEADING EDGE FLAP (LH) (SEE 29-2, FIG. 10, ITEM 79)	5199	RF
		65-33142-4	ACTUATOR INSTL, INBOARD LEADING EDGE FLAP (RH) (SEE 29-2, FIG. 10, ITEM 79)	5199	RF
	1	NAS1106-19DW	. BOLT, (DELETED BY SB 2956).	0150	2
	1	BACB30LJ6DU19	. BOLT.	5199	2
	1	BACB30LJ6DU19	. BOLT, (ADDED BY SB 2956).	0150	2
	2	NAS1106-25DW	. BOLT, (DELETED BY SB 2956).	0150	2
	2	BACB30LJ6DU25	. BOLT.	5199	2
	2	BACB30LJ6DU25	. BOLT, (ADDED BY SB 2956).	0150	2
	3	AN960PD616	. WASHER.		6
	4	AN960PD616L	. WASHER.		AR
	5	NAS75-6-017	. BUSHING, (DELETED BY SB 2956)	0150	2
	5	BACB28Y6B53	. BUSHING	5199	2
	5	BACB28Y6B53	. BUSHING, (ADDED BY SB 2956)	0150	2
	6	66-18234-4	. WASHER, LEADING EDGE FLAP ACTUATOR NYLON. (OPT 66-18234-1 TOGETHER WITH 66-18234-2)		6
	6	66-18234-2	. WASHER, LEADING EDGE FLAP ACTUATOR NYLON. (TOGTHER WITH 66-18234-1 (OPT TO 66-18234-4))		6
	7	BACN10JD106	. NUT		4
	8	10-60514-7	. ACTUATOR ASSY		2
	9	NAS1107-21DW	. BOLT, (DELETED BY SB 2956).	0150	4
	9	BACB30LJ7DU21	. BOLT.	5199	4
	9	BACB30LJ7DU21	. BOLT, (ADDED BY SB 2956).	0150	4
	10	NAS1107-25DW	. BOLT, (DELETED BY SB 2956).	0150	4
R	10	BACB30LJ7DU25	. BOLT.	5199	4
R	10	BACB30LJ7DU25	. BOLT, (ADDED BY SB 2956).	0150	4
	11	AN960PD716	. WASHER.		16
	12	AN960PD716L	. WASHER.		AR
	13	NAS75-7-018	. BUSHING, (DELETED BY SB 2956)	0150	4
	13	BACB28Y7B56	. BUSHING	5199	4
	13	BACB28Y7B56	. BUSHING, (ADDED BY SB 2956)	0150	4
	14	66-18234-3	. WASHER, LEADING EDGE FLAP ACTUATOR NYLON.		4
	14	226-18234-1	. WASHER, LEADING EDGE FLAP ACTUATOR NYLON. (TOGETHER WITH 226-18234-2 (OPT TO 66-18234-4))		4
	15	BACN10JD107	. NUT		8
	16	10-60514-11	. ACTUATOR ASSY, (LH ONLY).		2
	16	10-60514-12	. ACTUATOR ASSY, (RH ONLY).		2
	17	10-60514-12	. ACTUATOR ASSY, (LH ONLY).		2
	17	10-60514-11	. ACTUATOR ASSY, (RH ONLY).		2
	18	MS21902-4	. UNION		6
	19	MS21902-6	. UNION		6
	20	NAS1612-4	. PACKING		6
	21	NAS1612-6	. PACKING		6

MISSING ITEM NUMBERS ARE NOT APPLICABLE

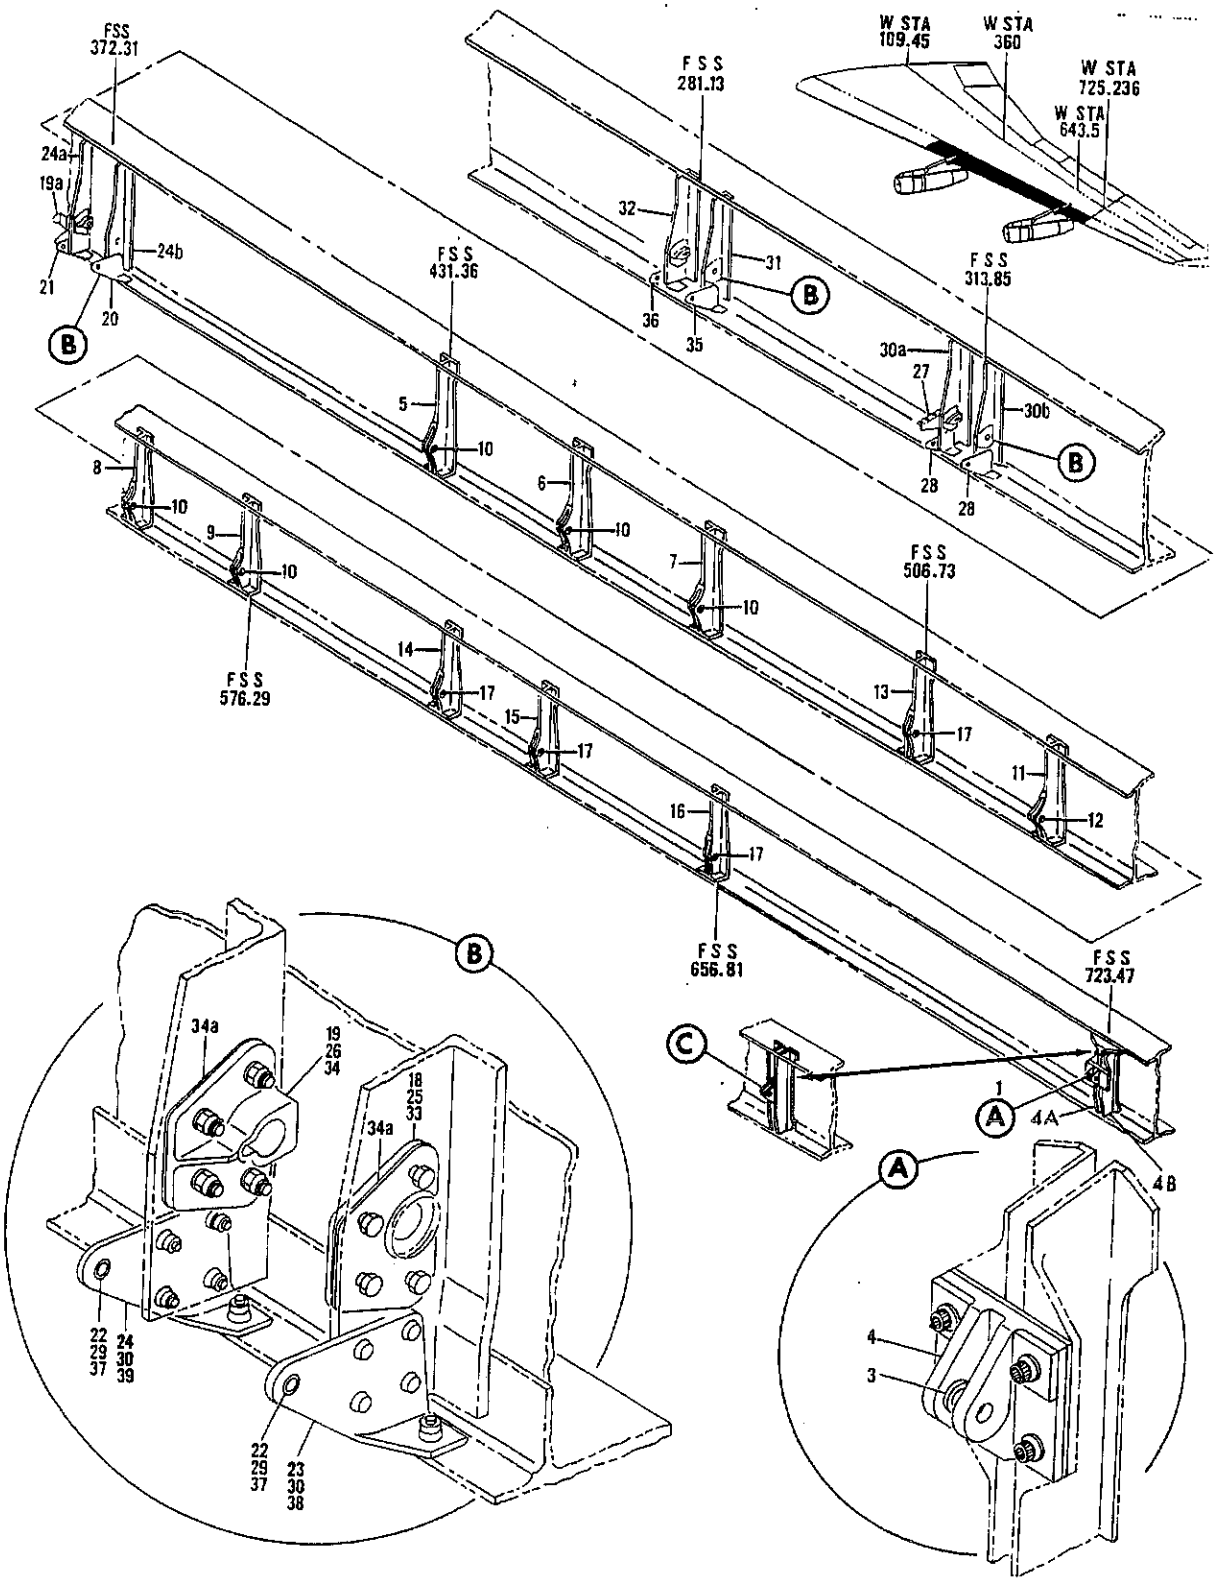

SUPPORT INSTL, INBOARD WING ACTUATOR
FIGURE 18. SUPPORT ASSY, INBOARD WING ACTUATOR (SHEET 1)

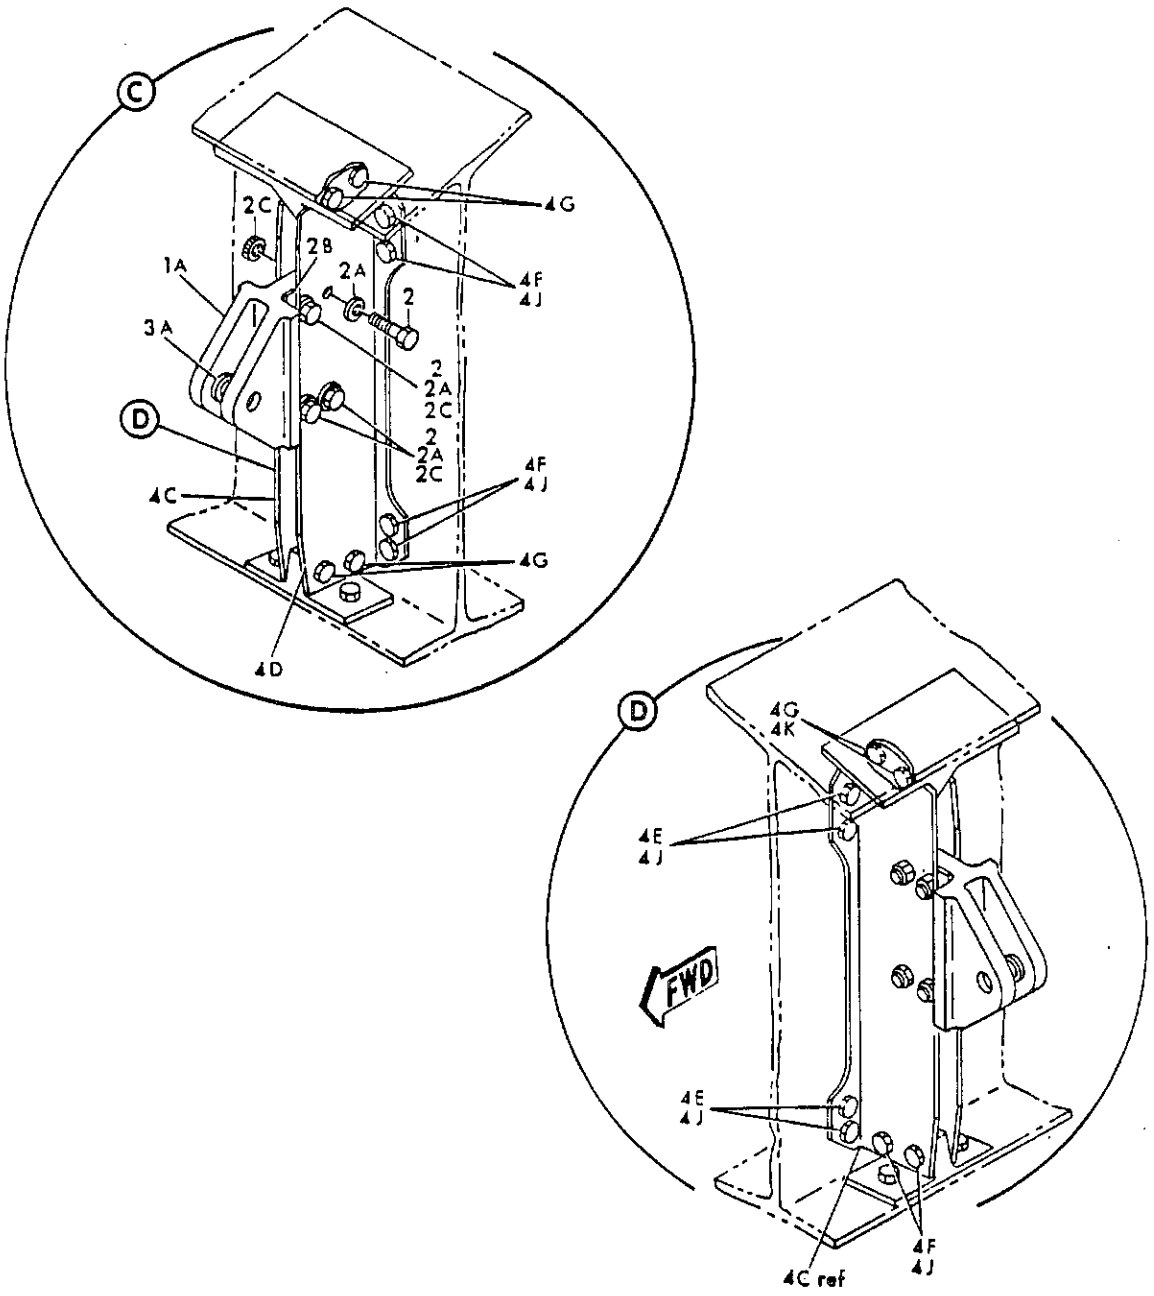

SUPPORT INSTL, INBOARD WING ACTUATOR
FIGURE 18. SUPPORT ASSY, INBOARD WING ACTUATOR (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	18		SUPPORT INSTL, INBOARD WING ACTUATOR.		
			SUPPORT ASSY, INBOARD WING ACTUATOR		
R		69-14837-1	. SUPPORT INSTL, FRONT SPAR STATION 723.47 INBOARD. . .	0150	RF
R			ACTUATOR (LH) (DELETED BY SB 2956) (SEE 57-3,		
R			FIG. 6, ITEM 2)		
R		69-14837-2	. SUPPORT INSTL, FRONT SPAR STATION 723.47 INBOARD. . .	0150	RF
R			ACTUATOR (RH) (DELETED BY SB 2956) (SEE 57-3,		
R			FIG. 6, ITEM 2)		
R		69-14837-11	. SUPPORT INSTL, FRONT SPAR STATION 723.47 INBOARD. . .	5199	RF
R			ACTUATOR (LH) (SEE 57-3, FIG. 6, ITEM 2)		
R		69-14837-11	. SUPPORT INSTL, FRONT SPAR STATION 723.47 INBOARD. . .	0150	RF
R			ACTUATOR (LH) (ADDED BY SB 2956) (SEE 57-3,		
R			FIG. 6, ITEM 2)		
R		69-14837-12	. SUPPORT INSTL, FRONT SPAR STATION 723.47 INBOARD. . .	5199	RF
R			ACTUATOR (RH) (SEE 57-3, FIG. 6, ITEM 2)		
R		69-14837-12	. SUPPORT INSTL, FRONT SPAR STATION 723.47 INBOARD. . .	0150	RF
R			ACTUATOR (RH) (ADDED BY SB 2956) (SEE 57-3,		
R			FIG. 6, ITEM 2)		
R	1	69-14837-14	. . BRACKET ASSY, (RH ONLY) (ADDED BY SB 2956 AND . . .	0150	1
R			DELETED BY SB 3298)		
R	1	69-14837-3	. . BRACKET ASSY, (LH ONLY) (DELETED BY SB 2956). . . .	0150	1
R	1	69-14837-10	. . BRACKET ASSY, (RH ONLY) (DELETED BY SB 2956). . . .	0150	1
R	1	69-14837-13	. . BRACKET ASSY, (LH ONLY) (ADDED BY SB 2956 AND . . .	0150	1
R			DELETED BY SB 3298)		
R	1	69-14837-13	. . BRACKET ASSY, (DELETED BY SVA E.O. 81438) (LH ONLY)	5199	1
R	1	69-14837-14	. . BRACKET ASSY, (DELETED BY SVA E.O. 81438) (RH ONLY)	5199	1
			ATTACHING PARTS		
R		MS20004-11	. . BOLT, (DELETED BY SB 3298).	0150	2
R		MS20004-9	. . BOLT, (DELETED BY SB 3298).	0150	2
R		MS20004-11	. . BOLT, (DELETED BY SVA E.O. 81438)	5199	2
R		MS20004-9	. . BOLT, (DELETED BY SVA E.O. 81438)	5199	2
R		69-14837-9	. . FILLER, (DELETED BY SVA E.O. 81438)	5199	2
R		69-14837-9	. . FILLER, (DELETED BY SB 3298).	0150	2
R		AN960C416	. . WASHER, (DELETED BY SVA E.O. 81438)	5199	4
R		AN960C416	. . WASHER, (DELETED BY SB 3298).	0150	4
R		BACS40A47-48	. . SHIM, (DELETED BY SVA E.O. 81438)	5199	AR
R		BACS40A47-48	. . SHIM, (DELETED BY SB 3298).	0150	AR
R		BACS40B47-48	. . SHIM, (DELETED BY SVA E.O. 81438)	5199	AR
R		BACS40B47-48	. . SHIM, (DELETED BY SB 3298).	0150	AR
R		BACS40D47-48	. . SHIM, (DELETED BY SVA E.O. 81438)	5199	AR
R		BACS40D47-48	. . SHIM, (DELETED BY SB 3298).	0150	AR
R		BACS40H47-48	. . SHIM, (DELETED BY SVA E.O. 81438)	5199	AR
R		BACS40H47-48	. . SHIM, (DELETED BY SB 3298).	0150	AR
R		BACN10B-L4L	. . NUT, (DELETED BY SVA E.O. 81438	5199	4
R		BACN10B-L4L	. . NUT, (DELETED BY SB 3298)	0150	4
			-------*-------		
R	1A	69-69909-1	. . BRACKET ASSY, (LH ONLY) (ADDED BY SB 3298).	0150	1
R	1A	69-69909-1	. . BRACKET ASSY, (ADDED BY SVA E.O. 81438) (LH ONLY) .	5199	1
R		69-69909-2	. . BRACKET ASSY, (RH ONLY) (ADDED BY SB 3298).	0150	1
R	1A	69-69909-2	. . BRACKET ASSY, (ADDED BY SVA E.O. 81438) (RH ONLY) .	5199	1
			ATTACHING PARTS		
R	2	BACB30NF4-13	. . BOLT, (ADDED BY SB 3298).	0150	4
R	2	BACB30NF4-13	. . BOLT, (ADDED BY SVA E.O. 81438)	5199	4
R	2A	AN960-416	. . WASHER, (ADDED BY SB 3298).	0150	4
R	2A	AN960-416	. . WASHER, (ADDED BY SVA E.O. 81438)	5199	4
R	2B	BACS40R16B29F	. . SHIM, (ADDED BY SB 3298).	0150	1
R	2B	BACS40R16B29F	. . SHIM, (ADDED BY SVA E.O. 81438)	5199	1
R	2C	BACN10JC4	. . NUT, (ADDED BY SB 3298)	0150	4
R	2C	BACN10JC4	. . NUT, (ADDED BY SVA E.O. 81438).	5199	4
			-------*-------		
R	3	69-14435-4	. . . BUSHING, PRESS FIT FLANGED (DELETED BY SB 2956) .	0150	1
R	3	69-14435-8	. . . BUSHING, PRESS FIT FLANGED (DELETED BY SVA. . . .	5199	1
R			E.O. 81348)		
R	3	69-14435-8	. . . BUSHING, PRESS FIT FLANGED (ADDED BY SB 2956 AND	0150	1
R			DELETED BY SB 3298)		
R	3A	66-9266-15	. . . BUSHING, (ADDED BY SB 3298)	0150	1
R	3A	66-9266-15	. . . BUSHING, (ADDED BY SVA E.O. 81438).	5199	1
R	4	69-14837-4	. . . BRACKET (DELETED BY SVA E.O. 81438)	5199	1
R	4	69-14837-4	. . . BRACKET (DELETED BY SB 3298).	0150	1
R	4	69-69909-3	. . . BRACKET (ADDED BY SB 3298).	0150	1
R	4	69-69909-3	. . . BRACKET (ADDED BY SVA E.O. 81438)	5199	1
R	4A	69-14837-7	. . SUPPORT (DELETED BY SB 3298).	0150	1
R	4A	69-14837-7	. . SUPPORT (DELETED BY SVA E.O. 81438)	5199	1
R	4A	69-14837-15	. . SUPPORT (ADDED BY SB 3298).	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R	18 4A	69-14837-15	. . SUPPORT (ADDED BY SVA E.O. 81438)	5199	1
R	4B	69-14837-8	. . SUPPORT (DELETED BY SB 3298).	0150	1
R	4B	69-14837-8	. . SUPPORT, (DELETED BY SVA E.O. 81438).	5199	1
R	4B	69-14837-16	. . SUPPORT (ADDED BY SB 3298).	0150	1
R	4B	69-14837-16	. . SUPPORT (ADDED BY SVA E.O. 81438)	5199	1
R	4C	69-14837-15	. . SUPPORT, LH (ADDED BY SB 3298).	0150	1
R	4C	65-95473-5	. . SUPPORT, LH (ADDED BY SVA E.O. 81438)	5199	1
R	4D	69-14837-16	. . SUPPORT, RH (ADDED BY SB 3298).	0150	1
R	4D	65-95473-6	. . SUPPORT, RH (ADDED BY SVA E.O. 81438)	5199	1
			ATTACHING PARTS		
	4E	BAC830GW6-8	. . BOLT, (USED WITH 69-14837-15)		4
R	4E	BAC830FM6-8	. . BOLT, (USED WITH 65-95473-5).	5199	4
	4F	BAC830GW6-14	. . BOLT, (USED WITH 69-14835-15)		2
	4F	BAC830GW6-8	. . BOLT, (USED WITH 69-14837-16)		4
R	4F	BAC830FM6-14	. . BOLT, (USED WITH 65-95473-6).	5199	2
	4G	BAC830GW6-14	. . BOLT, (USED WITH 69-14835-16)		2
R	4G	BAC830FM6-14	. . BOLT, (USED WITH 65-95473-5).	5199	2
	4H	BAC8306W8-14	. . BOLT, (USED WITH 69-14835-16)		2
R	4H	BAC830FM8-14	. . BOLT, (USED WITH 65-95473-6).	5199	2
	4J	BACC30M6	. . COLLAR.		10
	4K	BACC30M8	. . COLLAR.		2
			-------*-------		
R	5	65-18752-1	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (DELETED BY SB 2956) (SEE 57-3, FIG. 6, ITEM 15)	0150	RF
R	5	65-18752-23	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (SEE 57-3, FIG. 6, ITEM 15)	5199	RF
R	5	65-18752-23	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (ADDED BY SB 2956) (SEE 57-3, FIG. 6, ITEM 15)	0150	RF
R	6	65-18752-2	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (DELETED BY SB 2956) (SEE 57-3, FIG. 6, ITEM 14)	0150	RF
R	6	65-18752-24	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (SEE 57-3, FIG. 6, ITEM 14)	5199	RF
R	6	65-18752-24	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (ADDED BY SB 2956) (SEE 57-3, FIG. 6, ITEM 14)	0150	RF
R	7	65-18752-3	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (DELETED BY SB 2956) (SEE 57-3, FIG. 6, ITEM 13)	0150	RF
R	7	65-18752-25	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (SEE 57-3, FIG. 6, ITEM 13)	5199	RF
R	7	65-18752-25	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (ADDED BY SB 2956) (SEE 57-3, FIG. 6, ITEM 13)	0150	RF
R	8	65-18752-21	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (DELETED BY SB 2956) (SEE 57-3, FIG. 6, ITEM 10)	0150	RF
R	8	65-18752-28	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (SEE 57-3, FIG. 6, ITEM 10)	5199	RF
R	8	65-18752-28	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (ADDED BY SB 2956) (SEE 57-3, FIG. 6, ITEM 10)	0150	RF
R	9	65-18752-7	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (DELETED BY SB 2956) (SEE 57-3, FIG. 6, ITEM 9)	0150	RF
R	9	65-18752-29	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (SEE 57-3, FIG. 6, ITEM 9)	5199	RF
R	9	65-18752-29	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (ADDED BY SB 2956) (SEE 57-3, FIG. 6, ITEM 9)	0150	RF
R	10	BAC828X6B21	. . BUSHING	5199	1
R	10	NAS77A6-21P	. . BUSHING, (DELETED BY SB 2956)	0150	1
R	10	BAC828X6B21	. . BUSHING, (ADDED BY SB 2956)	0150	1
R	11	65-18752-5	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (DELETED BY SB 2956) (SEE 57-3, FIG. 6, ITEM 11)	0150	RF
R	11	65-18752-27	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (SEE 57-3, FIG. 6, ITEM 11)	5199	RF
R	11	65-18752-27	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (ADDED BY SB 2956) (SEE 57-3, FIG. 6, ITEM 11)	0150	RF
R	12	BAC828X6B19	. . BUSHING	5199	1
R	12	NAS77A6-19P	. . BUSHING, (DELETED BY SB 2956)	0150	1
R	12	BAC828X6B19	. . BUSHING, (ADDED BY SB 2956)	0150	1
R	13	65-18752-4	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (DELETED BY SB 2956) (SEE 57-3, FIG. 6, ITEM 12)	0150	RF
R	13	65-18752-26	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (SEE 57-3, FIG. 6, ITEM 12)	5199	RF
R	13	65-18752-26	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (ADDED BY SB 2956) (SEE 57-3, FIG. 6, ITEM 12)	0150	RF
R	14	65-18752-8	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (DELETED BY SB 2956) (SEE 57-3, FIG. 6, ITEM 8)	0150	RF
R	14	65-18752-30	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (SEE 57-3, FIG. 6, ITEM 8)	5199	RF

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	18 14	65-18752-30	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (ADDED BY SB 2956) (SEE 57-3, FIG. 6, ITEM 8)	0150	RF
R	15	65-18752-9	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (DELETED BY SB 2956) (SEE 57-3, FIG. 6, ITEM 7)	0150	RF
R	15	65-18752-31	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (SEE 57-3, FIG. 6, ITEM 7)	5199	RF
R	15	65-18752-31	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (ADDED BY SB 2956) (SEE 57-3, FIG. 6, ITEM 7)	0150	RF
R	16	65-18752-10	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (DELETED BY SB 2956) (SEE 57-3, FIG. 6, ITEM 6)	0150	RF
R	16	65-18752-32	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (SEE 57-3, FIG. 6, ITEM 6)	5199	RF
R	16	65-18752-32	. SUPPORT ASSY, WING LEADING EDGE INBOARD SLAT ACTUATOR (ADDED BY SB 2956) (SEE 57-3, FIG. 6, ITEM 6)	0150	RF
R	17	NAS77A6-23P	. . BUSHING, (DELETED BY SB 2956)	0150	1
R	17	BACB28X6B23	. . BUSHING, (ADDED BY SB 2956)	0150	1
R	17	BACB28X6B23	. . BUSHING	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

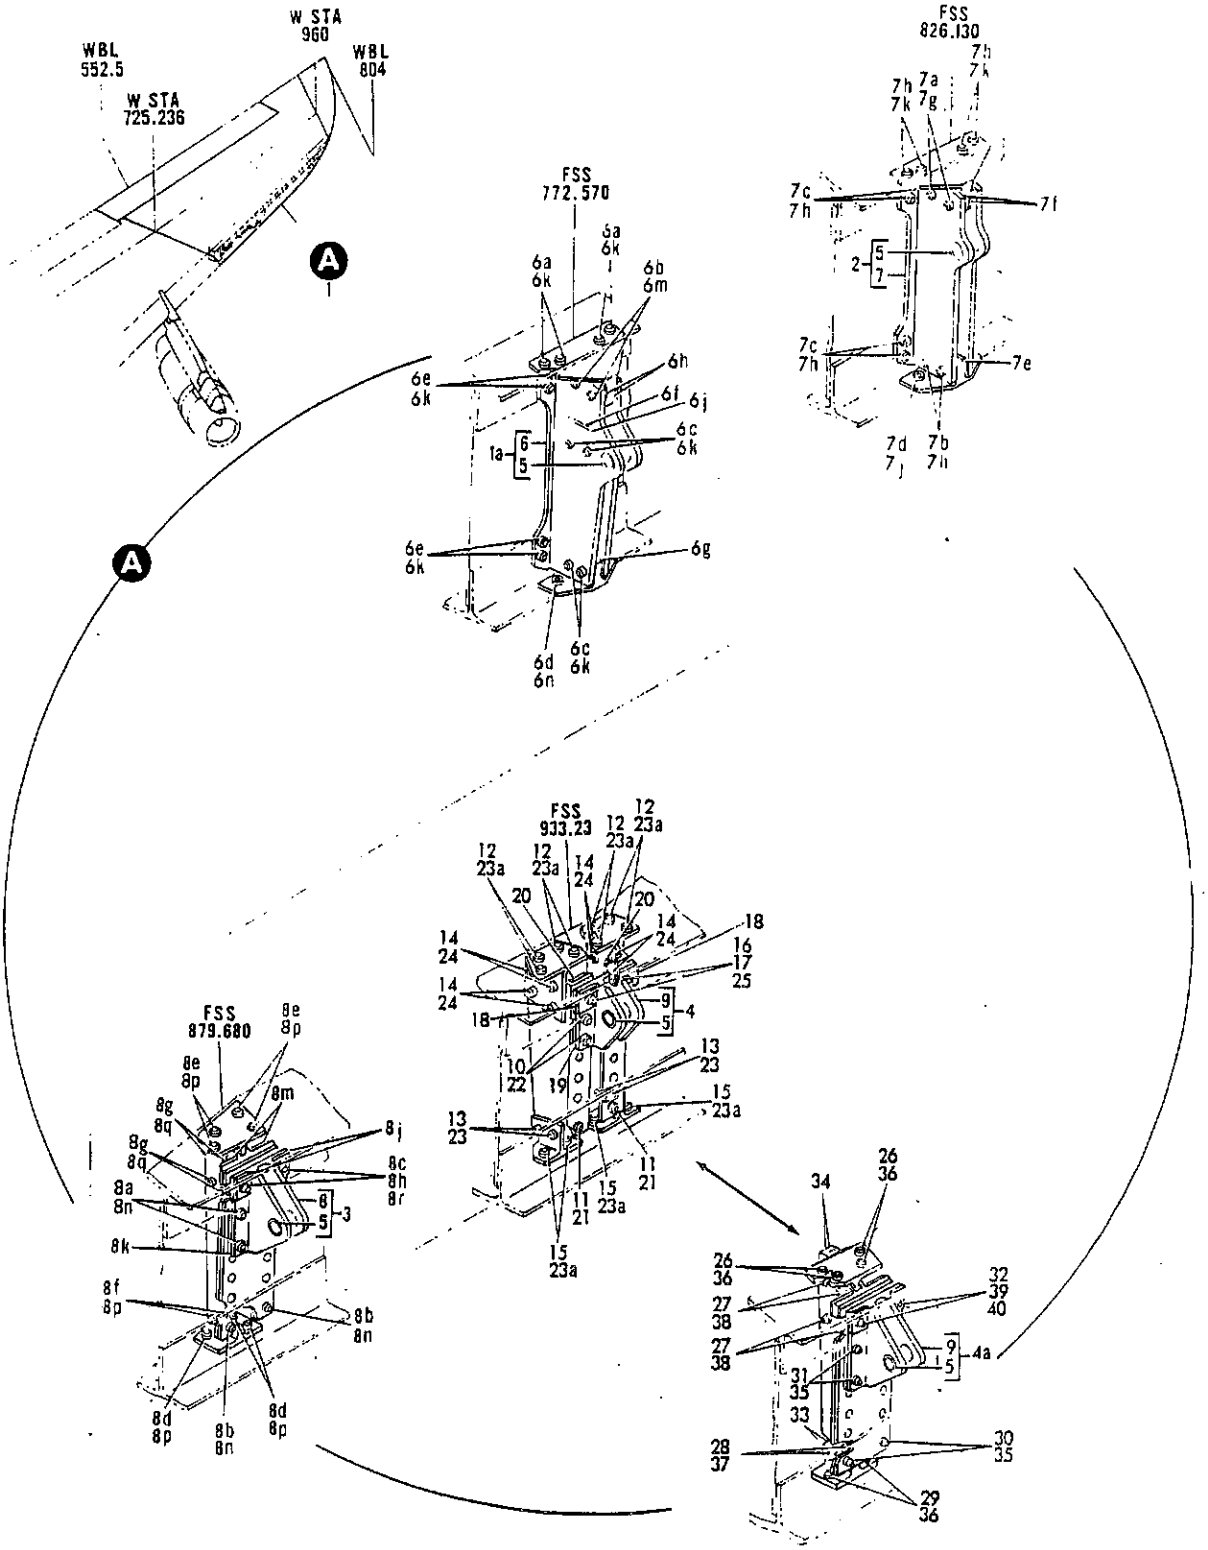


FIGURE 20. SPAR INSTL OUTBOARD WING FRONT

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	20	65-18474-1	SPAR INSTL, OUTBOARD WING FRONT (LH) (SEE 57-2, FIG. 8,	0150	RF
R			ITEM 6)		
R		65-18474-1	SPAR INSTL, OUTBOARD WING FRONT (VARIABLE	5199	RF
R			DWG;65-18474-5001) (LH) (SEE 57-2, FIG. 8, ITEM 6)		
R		65-18474-2	SPAR INSTL, OUTBOARD WING FRONT (RH) (SEE 57-2, FIG. 8,	0150	RF
R			ITEM 6)		
R		65-18474-2	SPAR INSTL, OUTBOARD WING FRONT (VARIABLE	5199	RF
R			DWG;65-18474-5002) (RH) (SEE 57-2, FIG. 8, ITEM 6)		
	1	65-18474-3	. SPAR ASSY, OUTBOARD WING FRONT (LH ONLY).		1
	1	65-18474-4	. SPAR ASSY, OUTBOARD WING FRONT (RH ONLY).		1
R	1A	69-14981-1	. . SUPPORT INSTL, STATION 772.57 ACTUATOR (DELETED BY	0150	1
R			SB 2956) (LH ONLY)		
R	1A	69-14981-7	. . SUPPORT INSTL, STATION 772.57 ACTUATOR (ADDED BY SB	0150	1
R			2956) (LH ONLY)		
R	1A	69-14981-7	. . SUPPORT INSTL, STATION 772.57 ACTUATOR (LH ONLY). .	5199	1
R	1A	69-14981-2	. . SUPPORT INSTL, STATION 772.57 ACTUATOR (DELETED BY	0150	1
R			SB 2956) (RH ONLY)		
R	1A	69-14981-8	. . SUPPORT INSTL, STATION 772.57 ACTUATOR (ADDED BY SB	0150	1
R			2956) (RH ONLY)		
R	1A	69-14981-8	. . SUPPORT INSTL, STATION 772.57 ACTUATOR (RH ONLY). .	5199	1
R	2	69-14982-1	. . SUPPORT INSTL, STATION 826.13 ACTUATOR (DELETED BY	0150	1
R			SB 2956) (LH ONLY)		
R	2	69-14982-7	. . SUPPORT INSTL, STATION 826.13 ACTUATOR (ADDED BY SB	0150	1
R			2956) (LH ONLY)		
R	2	69-14982-7	. . SUPPORT INSTL, STATION 826.13 ACTUATOR (LH ONLY). .	5199	1
R	2	69-14982-2	. . SUPPORT INSTL, STATION 826.13 ACTUATOR (DELETED BY	0150	1
R			SB 2956) (RH ONLY)		
R	2	69-14982-8	. . SUPPORT INSTL, STATION 826.13 ACTUATOR (ADDED BY SB	0150	1
R			2956) (RH ONLY)		
R	2	69-14982-8	. . SUPPORT INSTL, STATION 826.13 ACTUATOR (RH ONLY). .	5199	1
R	3	69-14983-1	. . SUPPORT INSTL, STATION 879.680 ACTUATOR (DELETED BY	0150	1
R			SB 2956) (LH ONLY)		
R	3	69-14983-25	. . SUPPORT INSTL, STATION 879.680 ACTUATOR (ADDED BY .	0150	1
R			SB 2956) (LH ONLY)		
R	3	69-14983-25	. . SUPPORT INSTL, STATION 879.680 ACTUATOR (LH ONLY) .	5199	1
R	3	69-14983-2	. . SUPPORT INSTL, STATION 879.680 ACTUATOR (DELETED BY	0150	1
R			SB 2956) (RH ONLY)		
R	3	69-14983-26	. . SUPPORT INSTL, STATION 879.680 ACTUATOR (ADDED BY .	0150	1
R			SB 2956) (RH ONLY)		
R	3	69-14983-26	. . SUPPORT INSTL, STATION 879.680 ACTUATOR (RH ONLY) .	5199	1
R	4	69-14984-13	. . SUPPORT INSTL, STATION 933.23 ACTUATOR (DELETED BY	0150	1
R			SB 2956) (LH ONLY)		
R	4	69-14984-27	. . SUPPORT INSTL, STATION 933.23 ACTUATOR (ADDED BY SB	0150	1
R			2956) (LH ONLY)		
R	4	69-14984-27	. . SUPPORT INSTL, STATION 933.23 ACTUATOR (LH ONLY). .	5199	1
R	4	69-14984-14	. . SUPPORT INSTL, STATION 933.23 ACTUATOR (DELETED BY	0150	1
R			SB 2956) (RH ONLY)		
R	4	69-14984-28	. . SUPPORT INSTL, STATION 933.23 ACTUATOR (ADDED BY SB	0150	1
R			2956) (RH ONLY)		
R	4	69-14984-28	. . SUPPORT INSTL, STATION 933.23 ACTUATOR (RH ONLY). .	5199	1
R	5	69-14435-4	. . . BUSHING, PRESS FIT FLANGED (DELETED BY SB 2956) .	0150	1
R	5	69-14435-8	. . . BUSHING, PRESSED FLANGED.	5199	1
R	5	69-14435-8	. . . BUSHING, PRESS FIT FLANGED (ADDED BY SB 2956) . .	0150	1
	6	69-14981-4	. . . SUPPORT, STATION 772.57 ACTUATOR (USED ON		1
			69-14981-1, -7, -2 AND -8)		
			ATTACHING PARTS		
	6A	BAC830P6-6	. . . BOLT.		4
	6B	BAC830N8-17	. . . BOLT.		2
	6C	BAC830N6-17	. . . BOLT.		4
	6D	BAC830FM8-4	. . . BOLT.		2
	6F	BACS40B12-28	. . . SHIM.		AR
	6G	BACS40A12-25	. . . SHIM.		AR
	6H	BACS40A15-28	. . . SHIM.		AR
	6J	69-14981-3	. . . FILLER.		1
	6K	NAS1080C6	. . . COLLAR.		16
	6M	NAS1080C8	. . . COLLAR.		2
	6N	BACC30M8	. . . COLLAR.		2
			-------*-------		
	7	69-14982-3	. . . SUPPORT, STATION 826.13 ACTUATOR (USED ON		1
			69-14982-1, -7, -2 AND -8)		
			ATTACHING PARTS		
	7A	BAC830N8-17	. . . BOLT.		2
	7B	BAC830N6-17	. . . BOLT.		2
	7C	BAC830N6-6	. . . BOLT.		8

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	20 7D	BACB30FM8-4	. . . BOLT.		2
	7E	BACS40A11-25	. . . SHIM.		AR
	7F	BACS40A15-28	. . . SHIM.		AR
	7G	NAS1080C8	. . . COLLAR.		2
	7H	NAS1080C6	. . . COLLAR.		14
	7J	BACM30M8	. . . COLLAR.		2
	7K	BACB30P6-6	. . . BOLT.		4
			-------*-------		
	8	69-14983-4	. . . BRACKET, STATION 879.680 ACTUATOR (USED ON. . . . 69-14983-1, -25, -2 AND -26)		1
			ATTACHING PARTS		
	8A	NAS1466-10	. . . BOLT.		4
	8B	NAS1466-7	. . . BOLT.		2
	8C	MS20004-15	. . . BOLT.		2
	8D	BACB30P6-6	. . . BOLT.		3
	8E	BACB30P6-8	. . . BOLT.		4
	8F	BACB30N6-9	. . . BOLT.		2
	8G	BACB30N8-9	. . . BOLT.		4
	8H	AN960C416	. . . WASHER.		2
	8J	69-14983-12	. . . FILLER, FRONT SPAR STATION 879.680 OUTBOARD . . . ACTUATOR SUPPORT		2
	8K	69-14983-11	. . . FILLER, FRONT SPAR STATION 879.680 OUTBOARD . . . ACTUATOR SUPPORT		1
R	8M	69-14983-13	. . . FILLER, STATION 879.680	0150	2
R	8M	69-14983-24	. . . FILLER, STATION 879.680	5199	2
	8N	NAS1080-6	. . . COLLAR.		6
	8P	NAS1080C6	. . . COLLAR.		9
	8Q	NAS1080C8	. . . COLLAR.		4
	8R	BACN10B-L4L	. . . NUT		2
			-------*-------		
	9	69-14984-3	. . . BRACKET, (USED ON 69-14984-1, -2, -13, -14, -27, -28, 69-38523-1 AND -2)		1
			ATTACHING PARTS		
	10	NAS1466-9	. . . BOLT.		4
	11	NAS1466-6	. . . BOLT.		2
	12	BACB30P6-7	. . . BOLT.		8
	13	BACB30GW6-9	. . . BOLT.		4
	14	BACB30GW8-9	. . . BOLT.		8
	15	BACB30P6-6	. . . BOLT.		4
	16	MS20004-14	. . . BOLT.		2
	17	AN960C416	. . . WASHER.		2
	18	69-14984-4	. . . FILLER, (USED ON 69-14984-1, -2, -13, -14, -27. . AND -28)		2
	19	69-14984-9	. . . FILLER, (USED ON 69-14984-1, -2, -13, -14, -27. . AND -28)		2
	20	69-14984-10	. . . FILLER, FRONT SPAR STATION 933.23 OUTBOARD. . . . ACTUATOR SUPPORT (USED ON 69-14984-1 AND -2)		2
	21	NAS1080-6	. . . COLLAR.		2
	22	NAS1080-9	. . . COLLAR.		4
	23	BACC30K6	. . . COLLAR.		4
	23A	NAS1080C6	. . . COLLAR.		12
	24	BACC30K8	. . . COLLAR.		8
	25	BACN10B-L4L	. . . NUT		2
			-------*-------		
	41	MS27253F2	. PLATE, IDENTIFICATION		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

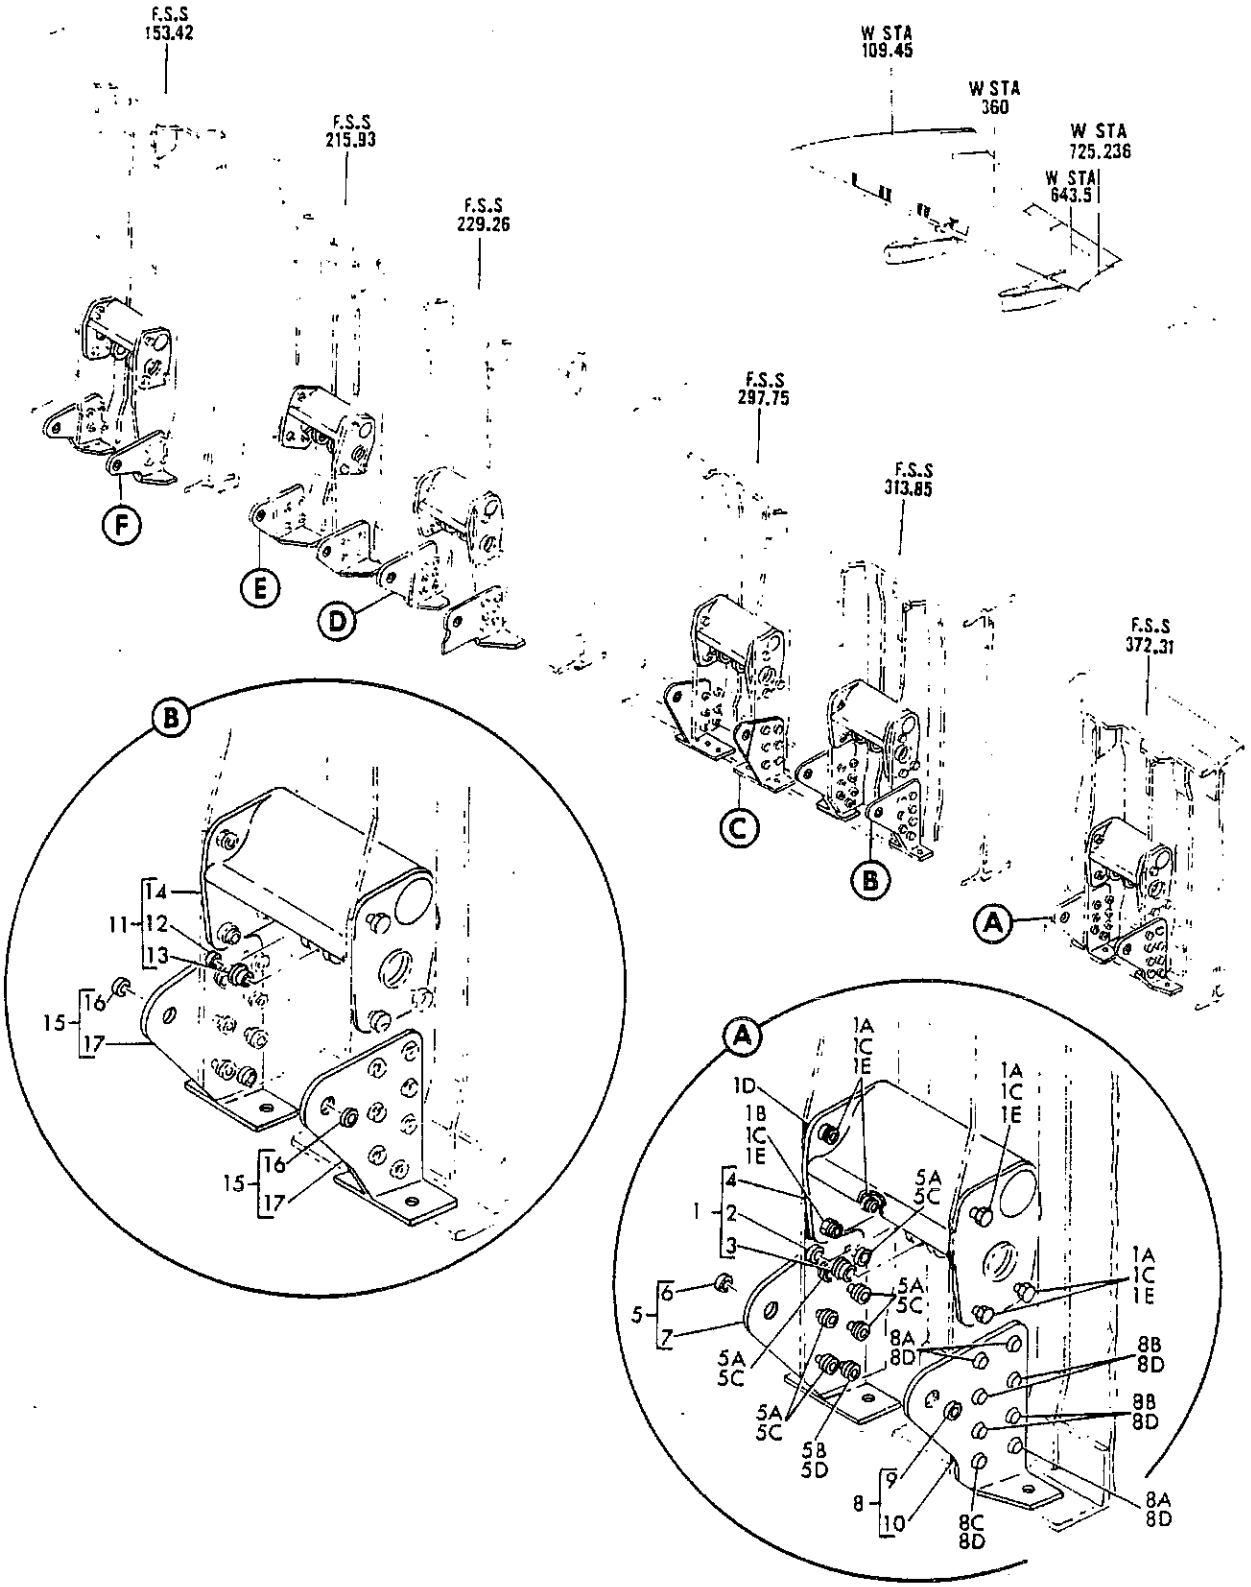


FIGURE 21. SUPPORT INSTL, INBOARD WING ACTUATOR (SHEET 1)

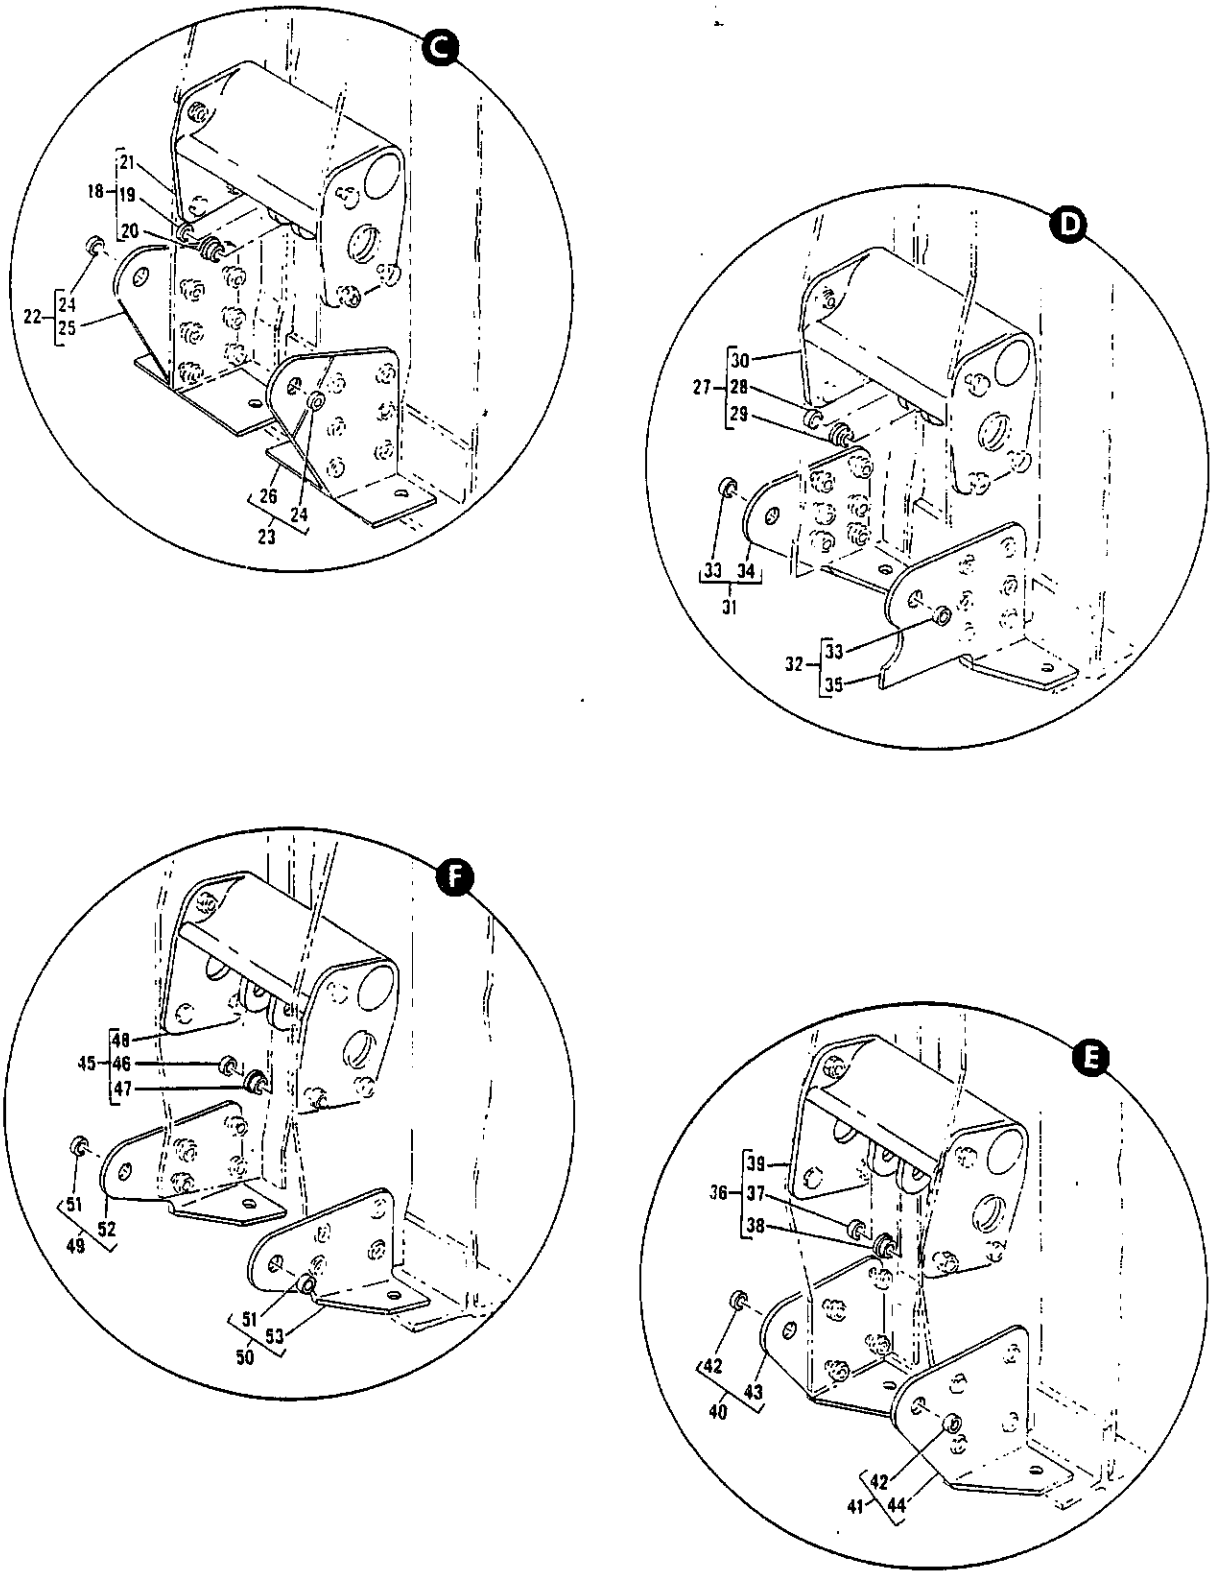


FIGURE 21. SUPPORT INSTL, INBOARD WING ACTUATOR (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	21		SUPPORT INSTL, INBOARD WING ACTUATOR.		
		65-33119-1	. SUPPORT INSTL, FRONT SPAR STATION 372.31 INBOARD WING ACTUATOR (LH) (SEE 57-3, FIG. 6, ITEM 19)		RF
		65-33119-2	. SUPPORT INSTL, FRONT SPAR STATION 372.31 INBOARD WING ACTUATOR (RH) (SEE 57-3, FIG. 6, ITEM 19)		RF
R R	1	65-31902-13	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY) (ADDED BY SB 3411)	0150	1
R	1	65-31902-13	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY)	5199	1
R R	1	65-31902-1	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY) (DELETED BY SB 2956)	0150	1
R R	1	65-31902-9	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY) (ADDED BY SB 2956 AND DELETED BY SB 3411)	0150	1
R R	1	65-31902-10	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY) (ADDED BY SB 2956 AND DELETED BY SB 3411)	0150	1
R R	1	65-31902-14	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY) (ADDED BY SB 3411)	0150	1
R	1	65-31902-14	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY)	5199	1
R R	1	65-31902-2	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY) (DELETED BY SB 2956)	0150	1
			ATTACHING PARTS		
	1A	NAS1104-8W	. . BOLT.		5
	1B	NAS334CPA7-5	. . BOLT.		1
	1C	AN960PD416L	. . WASHER.		6
	1D	66-18664-1	. . SHIM, LEADING EDGE FLAPS ACTUATOR SUPPORT LAMINATED		AR
	1E	NAS679A4W	. . NUT		6
			-------*-------		
R	2	BACB28U8B29	. . . BUSHING	5199	1
R R	2	69-14580-5	. . . BUSHING, HINGE SUPPORT FITTING (DELETED BY SB 3411 AND 2956) . . .	0150	1
R	2	BACB28U8B29	. . . BUSHING, (ADDED BY SB 3411 AND 2956).	0150	1
R	3	BACB28X7B28	. . . BUSHING	5199	1
R R	3	69-14580-7	. . . BUSHING, HINGE SUPPORT FITTING (DELETED BY SB 3411 AND 2956) . . .	0150	1
R	3	BACB28X7B28	. . . BUSHING, (ADDED BY SB 3411 AND 2956).	0150	1
R	4	65-31902-5	. . . SUPPORT, (LH ONLY) (DELETED BY SB 3411)	0150	1
R	4	65-31902-17	. . . SUPPORT, (LH ONLY) (ADDED BY SB 3411)	0150	1
R	4	65-31902-17	. . . SUPPORT, (LH ONLY) (USED ON 65-31902-13).	5199	1
R	4	65-31902-6	. . . SUPPORT, (RH ONLY) (DELETED BY SB 3411)	0150	1
R	4	65-31902-18	. . . SUPPORT, (RH ONLY) (USED ON 65-31902-14).	5199	1
R	4	65-31902-18	. . . SUPPORT, (RH ONLY) (ADDED BY SB 3411)	0150	1
	5	69-25227-1	. . TEE ASSY, FRONT SPAR STATION 372.31 INBOARD WING. . ACTUATOR SUPPORT ATTACHMENT (LH ONLY)		1
	5	69-25227-2	. . TEE ASSY, FRONT SPAR STATION 372.31 INBOARD WING. . ACTUATOR SUPPORT ATTACHMENT (RH ONLY)		1
			ATTACHING PARTS		
	5A	BACB30GW6-8	. . BOLT.		6
	5B	BACB30GW8-8	. . BOLT.		1
	5C	BACC30K6	. . COLLAR.		6
	5D	BACC30K8	. . COLLAR.		1
			-------*-------		
	6	66-31054-9	. . . BUSHING, STRUCTURAL PRESSED FIT		1
	7	69-25227-5	. . . TEE, FRONT SPAR STATION 372.31 INBOARD WING . . . ACTUATOR SUPPORT ATTACHMENT (LH ONLY)		1
	7	69-25227-6	. . . TEE, FRONT SPAR STATION 372.31 INBOARD WING . . . ACTUATOR SUPPORT ATTACHMENT (RH ONLY)		1
	8	69-25227-3	. . TEE ASSY, FRONT SPAR STATION 372.31 INBOARD WING. . ACTUATOR SUPPORT ATTACHMENT		1
			ATTACHING PARTS		
	8A	BACB30GW6-8	. . BOLT.		3
	8B	BACB30GW6-9	. . BOLT.		4
	8C	BACB30GW6-10	. . BOLT.		1
	8D	BACC30K6	. . COLLAR.		8
			-------*-------		
	9	66-31054-9	. . . BUSHING, STRUCTURAL PRESSED FIT		1
	10	69-25227-7	. . . TEE, FRONT SPAR STATION 372.31 INBOARD WING . . . ACTUATOR SUPPORT ATTACHMENT		1
		65-33120-1	. SUPPORT INSTL, FRONT SPAR STATION 313.85 INBOARD WING ACTUATOR (LH) (SEE 57-3, FIG. 3, ITEM 12)		RF
		65-33120-2	. SUPPORT INSTL, FRONT SPAR STATION 313.85 INBOARD WING ACTUATOR (RH) (SEE 57-3, FIG. 3, ITEM 12)		RF
R R	11	65-31902-13	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY) (ADDED BY SB 3411)	0150	1
R	11	65-31902-13	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	21 11	65-31902-1	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY) (DELETED BY SB 2956)	0150	1
R	11	65-31902-9	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY) (ADDED BY SB 2956 AND DELETED BY SB 3411)	0150	1
R	11	65-31902-14	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY) (ADDED BY SB 3411)	0150	1
R	11	65-31902-2	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY) (DELETED BY SB 2956)	0150	1
R	11	65-31902-14	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY)	5199	1
R	11	65-31902-10	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY) (ADDED BY SB 2956 AND DELETED BY SB 3411)	0150	1
			ATTACHING PARTS		
		NAS1104-8W	. . BOLT.		6
		AN960PD416L	. . WASHER.		6
		66-18664-1	. . SHIM, LEADING EDGE FLAPS ACTUATOR SUPPORT LAMINATED		AR
		NAS679A4W	. . NUT		6
			-------*-------		
R	12	BACB28U8B29	. . . BUSHING	5199	1
R	12	69-14580-5	. . . BUSHING, HINGE SUPPORT FITTING (DELETED BY. . . . SB 3411 AND 2956)	0150	1
R	12	BACB28U8B29	. . . BUSHING, (ADDED BY SB 3411 AND 2956).	0150	1
R	13	BACB28X7B28	. . . BUSHING	5199	1
R	13	69-14580-7	. . . BUSHING, HINGE SUPPORT FITTING (DELETED BY. . . . SB 3411 AND 2956)	0150	1
R	13	BACB28X7B28	. . . BUSHING, (ADDED BY SB 3411 AND 2956).	0150	1
R	14	65-31902-5	. . . SUPPORT, WING LEADING EDGE FLAP ACTUATOR (LH. . . ONLY) (DELETED BY SB 3411)	0150	1
R	14	65-31902-17	. . . SUPPORT, (LH ONLY) (ADDED BY SB 3411)	0150	1
R	14	65-31902-17	. . . SUPPORT, (LH ONLY) (USED ON 65-31902-13).	5199	1
R	14	65-31902-6	. . . SUPPORT, WING LEADING EDGE FLAP ACTUATOR (RH. . . ONLY) (DELETED BY SB 3411)	0150	1
R	14	65-31902-18	. . . SUPPORT, (RH ONLY) (USED ON 65-31902-14).	5199	1
R	14	65-31902-18	. . . SUPPORT, (RH ONLY) (ADDED BY SB 3411)	0150	1
	15	69-25228-1	. . TEE ASSY, FRONT SPAR STATION 313.85 INBOARD WING. . ACTUATOR SUPPORT ATTACHMENT		2
			ATTACHING PARTS		
		BACB30GW6-8	. . BOLT.		14
		BACC30K6	. . COLLAR.		14
			-------*-------		
	16	66-31054-9	. . . BUSHING, STRUCTURAL PRESSED FIT		1
	17	69-25228-2	. . . TEE, FRONT SPAR STATION 313.85 INBOARD WING . . . ACTUATOR SUPPORT ATTACHMENT		1
		65-33121-1	. SUPPORT INSTL, FRONT SPAR STATION 297.75 INBOARD WING ACTUATOR (LH) (SEE 57-3, FIG. 3, ITEM 13)		RF
		65-33121-2	. SUPPORT INSTL, FRONT SPAR STATION 297.75 INBOARD WING ACTUATOR (RH) (SEE 57-3, FIG. 3, ITEM 13)		RF
R	18	65-31902-13	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY) (ADDED BY SB 3411)	0150	1
R	18	65-31902-13	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY)	5199	1
R	18	65-31902-1	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY) (DELETED BY SB 2956)	0150	1
R	18	65-31902-9	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY) (ADDED BY SB 2956 AND DELETED BY SB 3411)	0150	1
R	18	65-31902-14	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY) (ADDED BY SB 3411)	0150	1
R	18	65-31902-14	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY)	5199	1
R	18	65-31902-2	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY) (DELETED BY SB 2956)	0150	1
R	18	65-31902-10	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY) (ADDED BY SB 2956 AND DELETED BY SB 3411)	0150	1
			ATTACHING PARTS		
		NAS1104-8W	. . BOLT.		5
		NAS334CPA7-5	. . BOLT.		1
		AN960PD416L	. . WASHER.		6
		66-18664-1	. . SHIM, LEADING EDGE FLAPS ACTUATOR SUPPORT LAMINATED		AR
		NAS679A4W	. . NUT		6
			-------*-------		
R	19	BACB28U8B29	. . . BUSHING	5199	1
R	19	69-14580-5	. . . BUSHING, HINGE SUPPORT FITTING (DELETED BY. . . . SB 3411 AND 2956)	0150	1
R	19	BACB28U8B29	. . . BUSHING, (ADDED BY SB 3411 AND 2956).	0150	1
R	20	BACB28U7B28	. . . BUSHING	5199	1
R	20	69-14580-7	. . . BUSHING, HINGE SUPPORT FITTING (DELETED BY. . . . SB 3411 AND 2956)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	21 20	BACB28X7B28	. . . BUSHING, (ADDED BY SB 3411 AND 2956).	0150	1
R	21	65-31902-5	. . . SUPPORT, WING LEADING EDGE FLAP ACTUATOR (LH. . . ONLY) (DELETED BY SB 3411)	0150	1
R	21	65-31902-17	. . . SUPPORT, (LH ONLY) (ADDED BY SB 3411)	0150	1
R	21	65-31902-17	. . . SUPPORT, (LH ONLY) (USED ON 65-31902-13).	5199	1
R	21	65-31902-6	. . . SUPPORT, WING LEADING EDGE FLAP ACTUATOR (RH. . . ONLY) (DELETED BY SB 3411)	0150	1
R	21	65-31902-18	. . . SUPPORT, (RH ONLY) (USED ON 65-31902-14).	5199	1
R	21	65-31902-18	. . . SUPPORT, (RH ONLY) (ADDED BY SB 3411)	0150	1
	22	69-21623-1	. . TEE ASSY, FRONT SPAR STATION 297.75 INBOARD WING. . ATTACHMENT (LH ONLY)		1
	22	69-21623-2	. . TEE ASSY, FRONT SPAR STATION 297.75 INBOARD WING. . ATTACHMENT (RH ONLY)		1
	23	69-21623-3	. . TEE ASSY, FRONT SPAR STATION 297.75 INBOARD WING. . ATTACHMENT (LH ONLY)		1
	23	69-21623-4	. . TEE ASSY, FRONT SPAR STATION 297.75 INBOARD WING. . ATTACHMENT (RH ONLY)		1
			ATTACHING PARTS		
		BACB30GW6-8	. . BOLT.		12
		BACC30K6	. . COLLAR.		12
			-------*-------		
	24	66-31054-9	. . . BUSHING, STRUCTURAL PRESSED FIT		1
	25	69-21623-5	. . . TEE, FRONT SPAR STATION 297.75 INBOARD WING . . . ATTACHMENT (LH ONLY)		1
	25	69-21623-6	. . . TEE, FRONT SPAR STATION 297.75 INBOARD WING . . . ATTACHMENT (RH ONLY)		1
	26	69-21623-7	. . . TEE, FRONT SPAR STATION 297.75 INBOARD WING . . . ATTACHMENT (LH ONLY)		1
	26	69-21623-8	. . . TEE, FRONT SPAR STATION 297.75 INBOARD WING . . . ATTACHMENT (RH ONLY)		1
		65-33122-1	. SUPPORT INSTL, FRONT SPAR STATION 229.26 INBOARD WING ACTUATOR (LH) (SEE 57-3, FIG. 3, ITEM 15)		RF
		65-33122-2	. SUPPORT INSTL, FRONT SPAR STATION 229.26 INBOARD WING ACTUATOR (RH) (SEE 57-3, FIG. 3, ITEM 15)		RF
R	27	65-31902-13	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY) (ADDED BY SB 3411)	0150	1
R	27	65-31902-13	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY)	5199	1
R	27	65-31902-9	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY) (ADDED BY SB 2956 AND DELETED BY SB 3411)	0150	1
R	27	65-31902-14	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY) (ADDED BY SB 3411)	0150	1
R	27	65-31902-2	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY) (DELETED BY SB 2956)	0150	1
R	27	65-31902-1	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY) (DELETED BY SB 2956)	0150	1
R	27	65-31902-14	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY)	5199	1
R	27	65-31902-10	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY) (ADDED BY SB 2956 AND DELETED BY SB 3411)	0150	1
			ATTACHING PARTS		
		NAS1104-8W	. . BOLT.		6
		AN960PD416L	. . WASHER.		6
		66-18664-1	. . SHIM, LEADING EDGE FLAPS ACTUATOR SUPPORT LAMINATED		AR
		NAS679A4W	. . NUT		6
			-------*-------		
R	28	BACB28U8B29	. . . BUSHING	5199	1
R	28	69-14580-5	. . . BUSHING, HINGE SUPPORT FITTING (DELETED BY. . . . SB 3411 AND 2956)	0150	1
R	28	BACB28U8B29	. . . BUSHING, (ADDED BY SB 3411 AND 2956).	0150	1
R	29	BACB28X7B28	. . . BUSHING	5199	1
R	29	69-14580-7	. . . BUSHING, HINGE SUPPORT FITTING (DELETED BY. . . . SB 3411 AND 2956)	0150	1
R	29	BACB28X7B28	. . . BUSHING, (ADDED BY SB 3411 AND 2956).	0150	1
R	30	65-31902-5	. . . SUPPORT, WING LEADING EDGE FLAP ACTUATOR (LH. . . ONLY) (DELETED BY SB 3411)	0150	1
R	30	65-31902-17	. . . SUPPORT, (LH ONLY) (ADDED BY SB 3411)	0150	1
R	30	65-31902-17	. . . SUPPORT, (LH ONLY) (USED ON 65-31902-13).	5199	1
R	30	65-31902-6	. . . SUPPORT, WING LEADING EDGE FLAP ACTUATOR (RH. . . ONLY) (DELETED BY SB 3411)	0150	1
R	30	65-31902-18	. . . SUPPORT, (RH ONLY) (USED ON 65-31902-14).	5199	1
R	30	65-31902-18	. . . SUPPORT, (RH ONLY) (ADDED BY SB 3411)	0150	1
	31	69-22403-9	. . TEE ASSY, FRONT SPAR STATION 229.26 INBOARD WING. . ATTACHMENT (LH ONLY)		1
	31	69-22403-10	. . TEE ASSY, FRONT SPAR STATION 229.26 INBOARD WING. . ATTACHMENT (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	21 32	69-22403-11	. . TEE ASSY, FRONT SPAR STATION 229.26 INBOARD WING. . ATTACHMENT (LH ONLY)		1
	32	69-22403-12	. . TEE ASSY, FRONT SPAR STATION 229.26 INBOARD WING. . ATTACHMENT (RH ONLY)		1
			ATTACHING PARTS		
		BACB30GW6-8	. . BOLT.		12
		BACC30K6	. . COLLAR.		12
			-------*-------		
	33	66-31054-9	. . . BUSHING, STRUCTURAL PRESSED FIT		1
	34	69-22403-13	. . . TEE, FRONT SPAR STATION 229.26 INBOARD WING . . . ATTACHMENT (LH ONLY)		1
	34	69-22403-14	. . . TEE, FRONT SPAR STATION 229.26 INBOARD WING . . . ATTACHMENT (RH ONLY)		1
	35	69-22403-15	. . . TEE, FRONT SPAR STATION 229.26 INBOARD WING . . . ATTACHMENT (LH ONLY)		1
	35	69-22403-16	. . . TEE, FRONT SPAR STATION 229.26 INBOARD WING . . . ATTACHMENT (RH ONLY)		1
		65-33123-1	. SUPPORT INSTL, FRONT SPAR STATION 215.93 INBOARD WING ACTUATOR (LH) (SEE 57-3, FIG. 3, ITEM 16)		RF
		65-33123-2	. SUPPORT INSTL, FRONT SPAR STATION 215.93 INBOARD WING ACTUATOR (RH) (SEE 57-3, FIG. 3, ITEM 16)		RF
R R	36	65-31902-15	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY) (ADDED BY SB 3411)	0150	1
R	36	65-31902-15	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY)	5199	1
R R	36	65-31902-3	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY) (DELETED BY SB 2956)	0150	1
R R	36	65-31902-11	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY) (ADDED BY SB 2956 AND DELETED BY SB 3411)	0150	1
R R	36	65-31902-16	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY) (ADDED BY SB 3411)	0150	1
R	36	65-31902-16	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY)	5199	1
R R	36	65-31902-4	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY) (DELETED BY SB 2956)	0150	1
R R	36	65-31902-12	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY) (ADDED BY SB 2956 AND DELETED BY SB 3411)	0150	1
			ATTACHING PARTS		
		NAS1104-8W	. . BOLT.		5
		NAS334CPA10	. . BOLT.		1
		AN960PD416	. . WASHER.		6
		66-18864-1	. . SHIM, LEADING EDGE FLAPS ACTUATOR SUPPORT LAMINATED		AR
		NAS679A4W	. . NUT		6
			-------*-------		
R	37	BACB28U7B24	. . . BUSHING	5199	1
R R	37	69-14580-6	. . . BUSHING, HINGE SUPPORT FITTING (DELETED BY SB 3411 AND 2956)	0150	1
R	37	BACB28U7B24	. . . BUSHING, (ADDED BY SB 3411 AND 2956).	0150	1
R	38	BACB28X6B23	. . . BUSHING	5199	1
R R	38	69-14580-8	. . . BUSHING, HINGE SUPPORT FITTING (DELETED BY SB 3411 AND 2956)	0150	1
R	38	BACB28X6B23	. . . BUSHING, (ADDED BY SB 3411 AND 2956).	0150	1
R R	39	65-31902-7	. . . SUPPORT, WING LEADING EDGE FLAP ACTUATOR (LH. . . ONLY) (DELETED BY SB 3411)	0150	1
R	39	65-31902-19	. . . SUPPORT, (LH ONLY) (ADDED BY SB 3411)	0150	1
R	39	65-31902-19	. . . SUPPORT, (LH ONLY) (USED ON 65-31902-15).	5199	1
R R	39	65-31902-8	. . . SUPPORT, WING LEADING EDGE FLAP ACTUATOR (RH. . . ONLY) (DELETED BY SB 3411)	0150	1
R	39	65-31902-20	. . . SUPPORT, (RH ONLY) (USED ON 65-31902-16).	5199	1
R	39	65-31902-20	. . . SUPPORT, (RH ONLY) (ADDED BY SB 3411)	0150	1
	40	69-25333-1	. . TEE ASSY, FRONT SPAR STATION 215.93 LEADING EDGE. . FLAP TENSION TIE ATTACHMENT (LH ONLY)		1
	40	69-25333-2	. . TEE ASSY, FRONT SPAR STATION 215.93 LEADING EDGE. . FLAP TENSION TIE ATTACHMENT (RH ONLY)		1
	41	69-25333-3	. . TEE ASSY, FRONT SPAR STATION 215.93 LEADING EDGE. . FLAP TENSION TIE ATTACHMENT (LH ONLY)		1
	41	69-25333-4	. . TEE ASSY, FRONT SPAR STATION 215.93 LEADING EDGE. . FLAP TENSION TIE ATTACHMENT (RH ONLY)		1
			ATTACHING PARTS		
		BACB30GW6-8	. . BOLT.		8
		BACC30K6	. . COLLAR.		8
			-------*-------		
	42	66-31054-9	. . . BUSHING, STRUCTURAL PRESSED FIT		1
	43	69-25333-5	. . . TEE, FRONT SPAR STATION 215.93 LEADING EDGE FLAP TENSION TIE ATTACHMENT (LH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	21 43	69-25333-6	. . . TEE, FRONT SPAR STATION 215.93 LEADING EDGE FLAP TENSION TIE ATTACHMENT (RH ONLY)		1
	44	69-25333-7	. . . TEE, FRONT SPAR STATION 215.93 LEADING EDGE FLAP TENSION TIE ATTACHMENT (LH ONLY)		1
	44	69-25333-8	. . . TEE, FRONT SPAR STATION 215.93 LEADING EDGE FLAP TENSION TIE ATTACHMENT (RH ONLY)		1
		65-33124-1	. SUPPORT INSTL, FRONT SPAR STATION 153.42 INBOARD WING ACTUATOR (LH) (SEE 57-3, FIG. 3, ITEM 17)		RF
		65-33124-2	. SUPPORT INSTL, FRONT SPAR STATION 153.42 INBOARD WING ACTUATOR (RH) (SEE 57-3, FIG. 3, ITEM 17)		RF
R	45	65-31902-15	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY) (ADDED BY SB 3411)	0150	1
R	45	65-31902-15	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY)	5199	1
R	45	65-31902-3	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY) (DELETED BY SB 2956)	0150	1
R	45	65-31902-11	. . SUPPORT ASSY, LEADING EDGE FLAP (LH ONLY) (ADDED BY SB 2956 AND DELETED BY SB 3411)	0150	1
R	45	65-31902-16	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY) (ADDED BY SB 3411)	0150	1
R	45	65-31902-16	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY)	5199	1
R	45	65-31902-4	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY) (DELETED BY SB 2956)	0150	1
R	45	65-31902-12	. . SUPPORT ASSY, LEADING EDGE FLAP (RH ONLY) (ADDED BY SB 2956 AND DELETED BY SB 3411)	0150	1
			ATTACHING PARTS		
		NAS1104-8W	. . BOLT.		6
		AN960PD416	. . WASHER.		6
		66-18864-1	. . SHIM, LEADING EDGE FLAPS ACTUATOR SUPPORT LAMINATED		AR
		NAS679A4W	. . NUT		6
			-------*-------		
R	46	BACB28U7B24	. . . BUSHING	5199	1
R	46	69-14580-6	. . . BUSHING, HINGE SUPPORT FITTING (DELETED BY. . . . SB 3411 AND 2956)	0150	1
R	46	BACB28U7B24	. . . BUSHING, (ADDED BY SB 3411 AND 2956).	0150	1
R	47	BACB28X6B23	. . . BUSHING	5199	1
R	47	69-14580-8	. . . BUSHING, HINGE SUPPORT FITTING (DELETED BY. . . . SB 3411 AND 2956)	0150	1
R	47	BACB28X6B23	. . . BUSHING, (ADDED BY SB 3411 AND 2956).	0150	1
R	48	65-31902-7	. . . SUPPORT, WING LEADING EDGE FLAP ACTUATOR (LH. . . ONLY) (DELETED BY SB 3411)	0150	1
R	48	65-31902-19	. . . SUPPORT, (LH ONLY) (ADDED BY SB 3411)	0150	1
R	48	65-31902-19	. . . SUPPORT, (LH ONLY) (USED ON 65-31902-15).	5199	1
R	48	65-31902-8	. . . SUPPORT, WING LEADING EDGE FLAP ACTUATOR (RH. . . ONLY) (DELETED BY SB 3411)	0150	1
R	48	65-31902-20	. . . SUPPORT, (RH ONLY) (USED ON 65-31902-16).	5199	1
R	48	65-31902-20	. . . SUPPORT, (RH ONLY) (ADDED BY SB 3411)	0150	1
	49	69-25196-1	. . TEE ASSY, FRONT SPAR STATION 153.42 LEADING EDGE. . FLAPS TENSION TIE ATTACH (LH ONLY)		1
	49	69-25196-2	. . TEE ASSY, FRONT SPAR STATION 153.42 LEADING EDGE. . FLAPS TENSION TIE ATTACH (RH ONLY)		1
	50	69-25196-3	. . TEE ASSY, FRONT SPAR STATION 153.42 LEADING EDGE. . FLAPS TENSION TIE ATTACH (LH ONLY)		1
	50	69-25196-4	. . TEE ASSY, FRONT SPAR STATION 153.42 LEADING EDGE. . FLAPS TENSION TIE ATTACH (RH ONLY)		1
			ATTACHING PARTS		
		BAC830GW6-8	. . BOLT.		8
		BACC30K6	. . COLLAR.		8
			-------*-------		
	51	66-31054-9	. . . BUSHING, STRUCTURAL PRESSED FIT		1
	52	69-25196-5	. . . TEE, FRONT SPAR STATION 153.42 LEADING EDGE FLAPS TENSION TIE ATTACH (LH ONLY)		1
	52	69-25196-6	. . . TEE, FRONT SPAR STATION 153.42 LEADING EDGE FLAPS TENSION TIE ATTACH (RH ONLY)		1
	53	69-25196-7	. . . TEE, FRONT SPAR STATION 153.42 LEADING EDGE FLAPS TENSION TIE ATTACH (LH ONLY)		1
	53	69-25196-8	. . . TEE, FRONT SPAR STATION 153.42 LEADING EDGE FLAPS TENSION TIE ATTACH (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

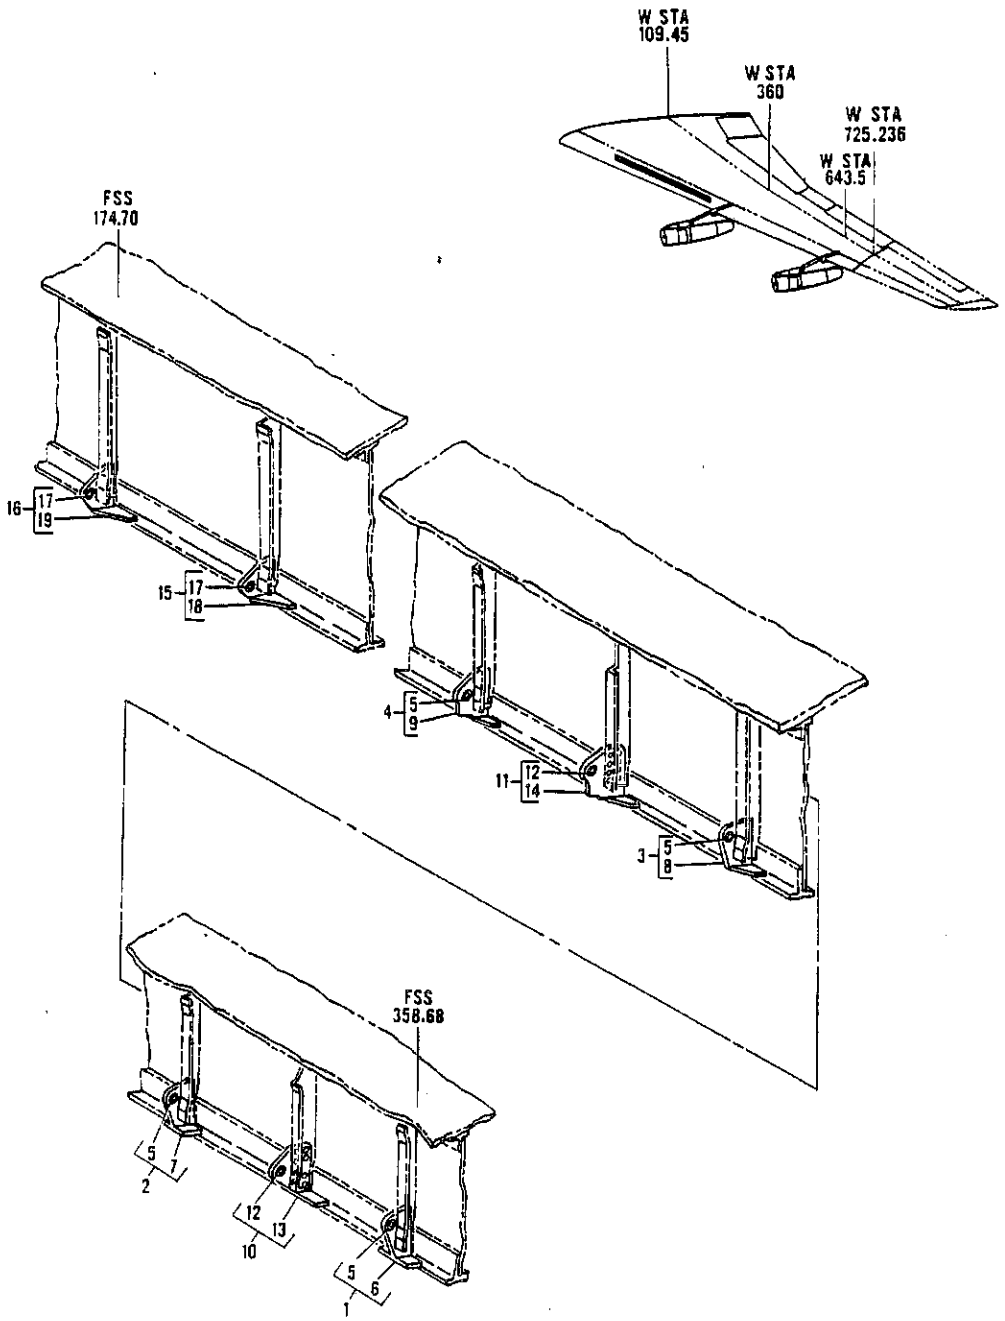


FIGURE 22. TEE ASSY, INBOARD WING ATTACHMENT

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
22		TEE ASSY, INBOARD WING ATTACHMENT		
1	69-25194-5	. TEE ASSY, FRONT SPAR STATION 358.68 INBOARD WING. . . ATTACHMENT (LH) (SEE 57-3, FIG. 3, ITEM 18)		RF
1	69-25194-6	. TEE ASSY, FRONT SPAR STATION 358.68 INBOARD WING. . . ATTACHMENT (RH) (SEE 57-3, FIG. 3, ITEM 18)		RF
2	69-25195-1	. TEE ASSY, FRONT SPAR STATION 329.82 INBOARD WING. . . ATTACHMENT (LH) (SEE 57-3, FIG. 3, ITEM 20)		RF
2	69-25195-2	. TEE ASSY, FRONT SPAR STATION 329.82 INBOARD WING. . . ATTACHMENT (RH) (SEE 57-3, FIG. 3, ITEM 20)		RF
3	69-21824-1	. TEE ASSY, FRONT SPAR STATION 281.13 INBOARD WING. . . ATTACHMENT (LH) (SEE 57-3, FIG. 3, ITEM 21)		RF
3	69-21824-2	. TEE ASSY, FRONT SPAR STATION 281.13 INBOARD WING. . . ATTACHMENT (RH) (SEE 57-3, FIG. 3, ITEM 21)		RF
4	69-25334-5	. TEE ASSY, FRONT SPAR STATION 247.39 INBOARD WING. . . ATTACHMENT (LH) (SEE 57-3, FIG. 3, ITEM 23)		RF
4	69-25334-6	. TEE ASSY, FRONT SPAR STATION 247.39 INBOARD WING. . . ATTACHMENT (RH) (SEE 57-3, FIG. 3, ITEM 23)		RF
5	66-31054-9	. . BUSHING, PRESSED FIT STRUCTURAL		1
6	69-25194-7	. . TEE, FRONT SPAR STATION 358.68 INBOARD WING ATTACH (USED ON 69-25194-5)		1
6	69-25194-8	. . TEE, FRONT SPAR STATION 358.68 INBOARD WING ATTACH (USED ON 69-25194-6)		1
7	69-25195-3	. . TEE, FRONT SPAR STATION 329.82 INBOARD WING ATTACH (USED ON 69-25195-1)		1
7	69-25195-4	. . TEE, FRONT SPAR STATION 329.82 INBOARD WING ATTACH (USED ON 69-25195-2)		1
8	69-21824-3	. . TEE, FRONT SPAR STATION 281.13 INBOARD WING ATTACH (USED ON 69-21824-1)		1
8	69-21824-4	. . TEE, FRONT SPAR STATION 281.13 INBOARD WING ATTACH (USED ON 69-21824-2)		1
9	69-25334-7	. . TEE, FRONT SPAR STATION 247.39 INBOARD WING ATTACH (USED ON 69-25334-5)		1
9	69-25334-8	. . TEE, FRONT SPAR STATION 247.39 INBOARD WING ATTACH (USED ON 69-25334-6)		1
10	69-25193-5	. TEE ASSY, FRONT SPAR STATION 345.46 INBOARD WING. . . ATTACHMENT (LH) (SEE 57-3, FIG. 3, ITEM 19)		RF
10	69-25193-6	. TEE ASSY, FRONT SPAR STATION 345.46 INBOARD WING. . . ATTACHMENT (RH) (SEE 57-3, FIG. 3, ITEM 19)		RF
11	69-25336-1	. TEE ASSY, FRONT SPAR STATION 264.46 INBOARD WING. . . ATTACHMENT (LH) (SEE 57-3, FIG. 3, ITEM 22)		RF
11	69-25336-2	. TEE ASSY, FRONT SPAR STATION 264.46 INBOARD WING. . . ATTACHMENT (RH) (SEE 57-3, FIG. 3, ITEM 22)		RF
12	66-31054-10	. . BUSHING, PRESSED FIT STRUCTURAL		1
13	69-25193-7	. . TEE, FRONT SPAR STATION 345.46 INBOARD WING ATTACH (USED ON 69-25193-5)		1
13	69-25193-8	. . TEE, FRONT SPAR STATION 345.46 INBOARD WING ATTACH (USED ON 69-25193-6)		1
14	69-25336-3	. . TEE, FRONT SPAR STATION 264.46 INBOARD WING ATTACH (USED ON 69-25336-1)		1
14	69-25336-4	. . TEE, FRONT SPAR STATION 264.46 INBOARD WING ATTACH (USED ON 69-25336-2)		1
15	69-22975-1	. TEE ASSY, FRONT SPAR STATION 195.66 INBOARD WING. . . ATTACHMENT (LH) (SEE 57-3, FIG. 3, ITEM 24)		RF
15	69-22975-2	. TEE ASSY, FRONT SPAR STATION 195.66 INBOARD WING. . . ATTACHMENT (RH) (SEE 57-3, FIG. 3, ITEM 24)		RF
16	69-22945-1	. TEE ASSY, FRONT SPAR STATION 174.70 INBOARD WING. . . ATTACHMENT (LH) (SEE 57-3, FIG. 3, ITEM 25)		RF
16	69-22945-2	. TEE ASSY, FRONT SPAR STATION 174.70 INBOARD WING. . . ATTACHMENT (RH) (SEE 57-3, FIG. 3, ITEM 25)		RF
17	66-31054-11	. . BUSHING, PRESSED FIT STRUCTURAL		1
18	69-22975-3	. . TEE, FRONT SPAR STATION 195.66 INBOARD WING ATTACH (USED ON 69-22975-1)		1
18	69-22975-4	. . TEE, FRONT SPAR STATION 195.66 INBOARD WING ATTACH (USED ON 69-22975-2)		1
19	69-22945-3	. . TEE, FRONT SPAR STATION 174.70 INBOARD WING ATTACH (USED ON 69-22945-1)		1
19	69-22945-4	. . TEE, FRONT SPAR STATION 174.70 INBOARD WING ATTACH (USED ON 69-22945-2)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

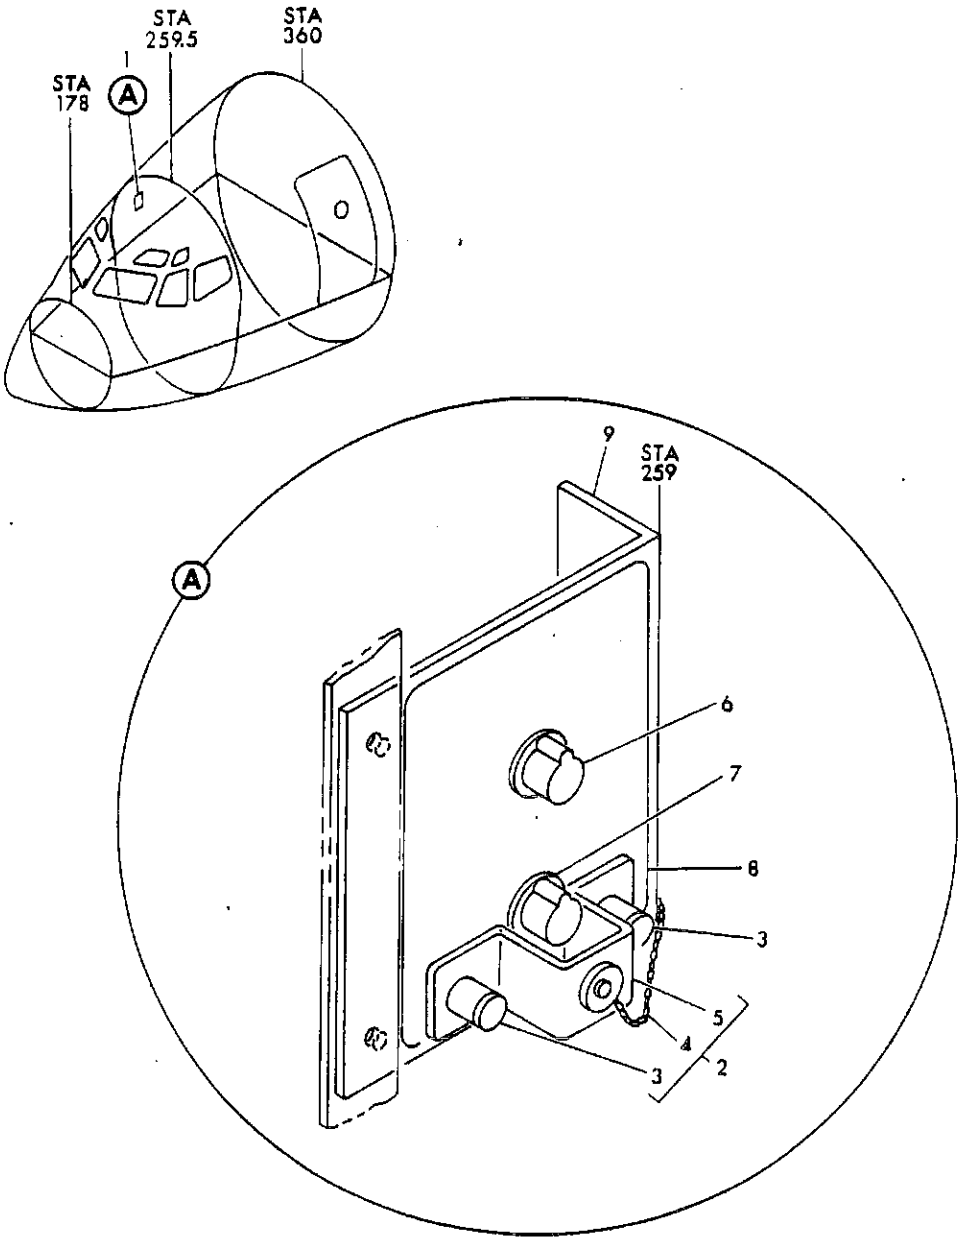
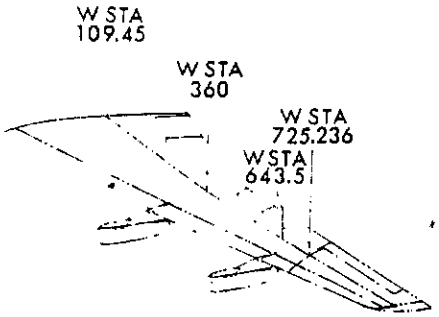


FIGURE 22A. SWITCH INSTL, LEADING EDGE WARNING SYSTEM (KIT)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	22A	65C22597-1	SWITCH INSTL, LEADING EDGE WARNING SYSTEM (KIT) (ADDED BY SB 3404)		1
R	1	65C22597-2	. SWITCH ASSY		1
			ATTACHING PARTS		
R		NAS601-5P	. SCREW		2
R		BACN10JC06	. NUT		2
			--------*--------		
R	2	65C22597-4	. . GUARD ASSY.		1
R	3	PFC2-632-40	. . . SCREW, (V46384)		2
R	4	NAS1201C6B10B	. . . CHAIN		1
R	5	65C22597-5	. . . BRACKET		1
R	6	64AT22-7E	. . SWITCH, (S1322) (V91929).		1
R	7	62AT22-8F	. . SWITCH, (S1321) (V91929).		1
R	8	BAC27DCC1010	. . MARKER.		1
R	9	65C22597-6	. . ANGLE		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



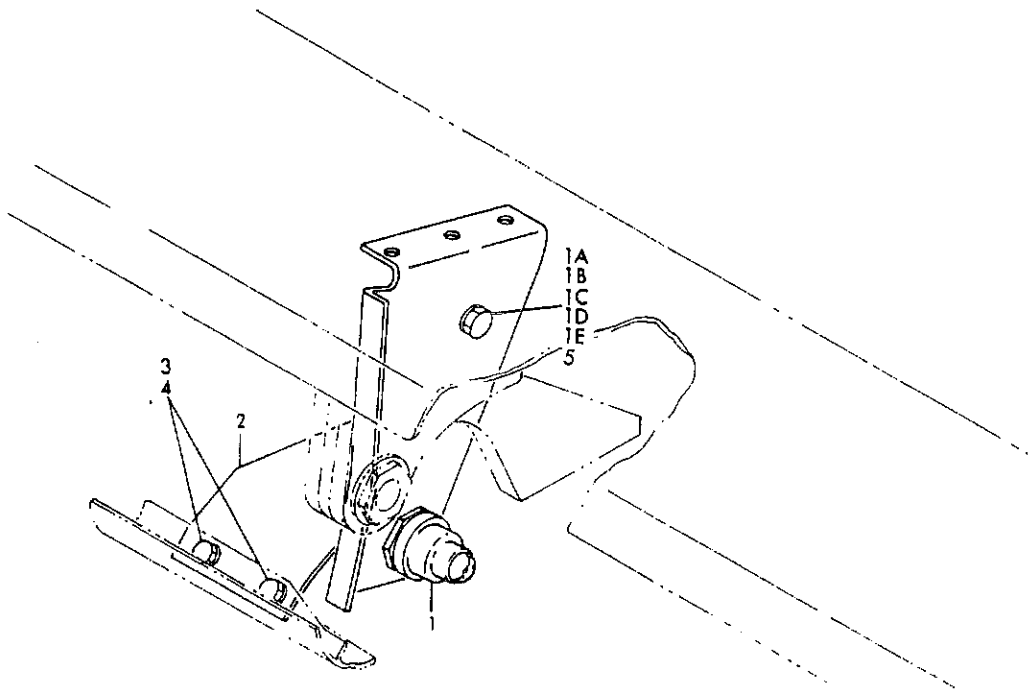


FIGURE 26. SWITCH INSTL, INBOARD WING LEADING EDGE FLAP POSITION INDICATION

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
26	65-33463-1	SWITCH INSTL, INBOARD WING LEADING EDGE FLAP POSITION INDICATION (LH) (SEE 24-2, FIG. 12, ITEM 6)		RF
	65-33463-2	SWITCH INSTL, INBOARD WING LEADING EDGE FLAP POSITION INDICATION (RH) (SEE 24-2, FIG. 12, ITEM 6)		RF
1	H11-181	. SWITCH, (V81640). (OPTIONAL 121EN93-2 (V91929))		1
1	121EN93-2	. SWITCH, (V91929). (OPTIONAL TO H11-181 (V81640))		1
1A	BACS12CB3-14	. SCREW		1
1B	MS35338	. WASHER.		1
1C	AN960D10L	. WASHER.		3
1D	MS35650-305T	. NUT		1
1E	BACN10JC3	. NUT		1
2	69-26535-1	. BRACKET ASSY, SWITCH SUPPORT (LH ONLY). (OPTIONAL TO 69-26535-9)		1
2	69-26535-9	. BRACKET ASSY, SWITCH SUPPORT (LH ONLY). (OPTIONAL 69-26535-1)		1
2	69-26535-2	. BRACKET ASSY, SWITCH SUPPORT (RH ONLY). (OPTIONAL TO 69-26535-10)		1
2	69-26535-10	. BRACKET ASSY, SWITCH SUPPORT (RH ONLY). (OPTIONAL 69-26535-2)		1
		ATTACHING PARTS		
3	AN3-3A	. BOLT.		2
4	BACB30NE3-3	. BOLT.		2
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

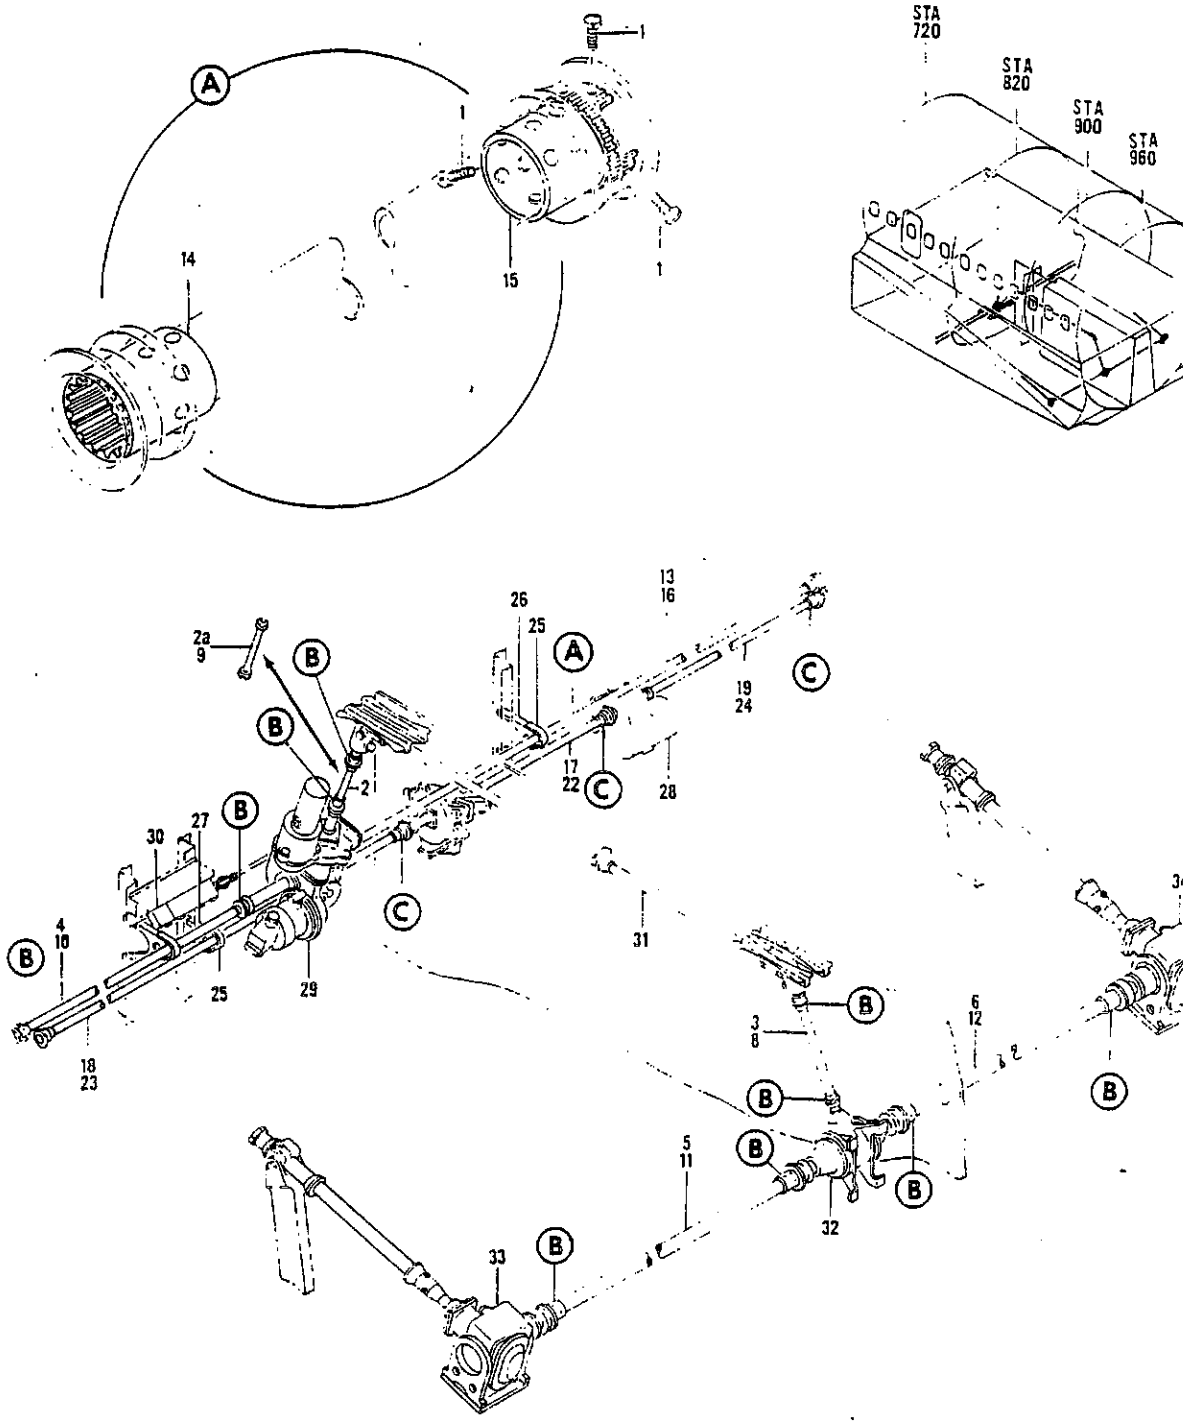
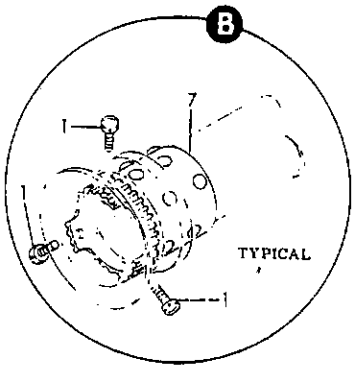


FIGURE 29. DRIVE INSTL, SECTION 53 FLAP (SHEET 1)



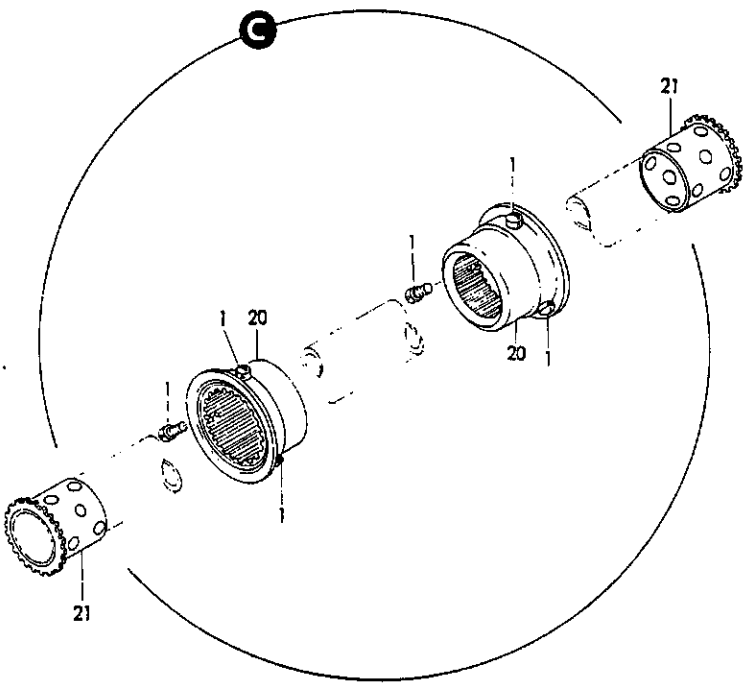


FIGURE 29. DRIVE INSTL SECTION 53 FLAP (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	29	50-8708-553	DRIVE INSTL, SECTION 53 FLAP (SEE 53-1, FIG. 2, ITEM. 24 FIG. 5, ITEM 16)		RF
	1	AN502-10-8	. SCREW		51
	2	69-26581-1	. SHAFT, FLAP DRIVE (OPTIONAL 69-15846-2)		1
	2A	69-15846-2	. SHAFT ASSY, FLAP DRIVE (OPTIONAL TO 69-26581-1)		1
	3	69-15846-1	. SHAFT ASSY, FLAP DRIVE.		1
	4	69-15846-3	. SHAFT ASSY, FLAP DRIVE.		1
	5	69-15861-1	. SHAFT ASSY, FILLET FLAP DRIVE		1
	6	69-15861-2	. SHAFT ASSY, FILLET FLAP DRIVE		1
	7	69-15857-1	. . COUPLING, FLAP DRIVE SPLINED HALF (USED ON. 69-15846-1, -2 AND -3)		2
	7	69-15945-1	. . COUPLING, FLAP DRIVE SPLINED HALF (USED ON. 69-15861-1 AND -2)		2
			ATTACHING PARTS		
		MS20470D6	. . RIVET		24
			-------*-------		
	8	69-15846-8	. . TUBE, FLAP DRIVE SHAFT (USED ON 69-15846-1)		1
	9	69-15846-9	. . TUBE, FLAP DRIVE SHAFT (USED ON 69-15846-2)		1
	10	69-15846-10	. . TUBE, FLAP DRIVE SHAFT (USED ON 69-15846-3)		1
	11	69-15861-3	. . TUBE, FILLET FLAP DRIVE SHAFT (USED ON 69-15861-1)		1
	12	69-15861-4	. . TUBE, FILLET FLAP DRIVE SHAFT (USED ON 69-15861-2)		1
	13	69-15967-1	. SHAFT ASSY, FLAP DRIVE TORQUE RH.		1
	14	69-15956-1	. . COUPLING, FLAP DRIVE SPLINE		1
			ATTACHING PARTS		
		MS20470D6	. . RIVET		10
			-------*-------		
	15	69-15857-1	. . COUPLING, FLAP DRIVE SPLINED HALF		1
			ATTACHING PARTS		
		MS20470D7	. . RIVET		12
			-------*-------		
	16	69-15967-2	. . TUBE, FLAP DRIVE TORQUE RH SHAFT.		1
	17	65-59877-28	. SHAFT ASSY.		1
	18	65-59877-35	. SHAFT ASSY.		1
R	19	65-59877-36	. SHAFT ASSY.	0150	1
R	19	65-59877-41	. SHAFT ASSY.	5199	1
	20	69-33513-1	. . SLEEVE, COUPLING.		2
	21	6-61583	. . COUPLING, FLAP DRIVE SPLINE		2
	22	9-67039-3035	. . TUBE, (USED ON 65-59877-28 AND 9-67039-3030).		1
	23	9-67039-3057	. . TUBE, (USED ON 65-59877-35 AND 9-67039-3055).		1
	24	9-67039-3058	. . TUBE, (USED ON 65-59877-36 AND 9-67039-3056).		1
R	24	9-67039-3060	. . TUBE, (USED ON 65-59877-41)	5199	1
		69-44015-2	. GUARD INSTL, BODY STATION 820 FLAP DRIVE TORQUE TUBE		1
		69-44015-3	. GUARD INSTL, BODY STATION 820 FLAP DRIVE TORQUE TUBE		1
	25	69-2871-2	. . GUARD, WING FLAP DRIVE TORQUE TUBE.		1
			ATTACHING PARTS		
		NAS221-13	. . SCREW		3
		AN960D10	. . WASHER.		3
		BACN10BY53W	. . NUT		3
			-------*-------		
	26	66-33007-1	. . BRACKET, BODY STATION 820 SUPPORT GUARD (USED ON. 69-44015-2)		1
	27	66-33007-3	. . BRACKET, BODY STATION 820 SUPPORT GUARD (USED ON. 69-44015-3)		1
			ATTACHING PARTS		
		AN3-4A	. . BOLT.		4
		AN960D10	. . WASHER.		4
		BACN10BY53W	. . NUT		4
			-------*-------		
		65-5260-1	. DRIVE UNIT INSTL, EMERGENCY FLAP.		1
	28	10-3293-2	. . DRIVE UNIT, EMERGENCY FLAP.		1
			ATTACHING PARTS		
		AN4-7A	. . BOLT.		3
		BACW10T416	. . WASHER.		3
		AN960D416	. . WASHER.		3
		NAS679A4W	. . NUT		3
			-------*-------		
	29	65-20847-1	. POWER UNIT INSTL, INBOARD AND FILLET.		1
			. . FLIGHT CONTROL, (SEE FIG. 35)		
			. . REQUIRED PLACARDS, (SEE 11-2, FIG. 201)		
	30	65-22421-3	. VALVE INSTL, BODY STATION 820 LEADING EDGE FLAP CONTROL (SEE FIG. 30)		1
	31	65-20844-1	. GEAR BOX INSTL, FILLET FLAP ANGLE (SEE FIG. 31)		1
		65-18764-1	. GEAR BOX INSTL, FILLET.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	29 32	65-20845-7	. . GEAR BOX ASSY, DRIVE TEE.	0150	1
R			(OPTIONAL 65-20845-5)		
R	32	65-20845-5	. . GEAR BOX ASSY, DRIVE TEE.	0150	1
R			(OPTIONAL TO 65-20845-7)		
R	32	65-20845-7	. . GEAR BOX ASSY, DRIVE TEE.	5199	1
			ATTACHING PARTS		
		NAS1305-13	. . BOLT.		2
		NAS1305-14	. . BOLT.		2
		AN960PD516	. . WASHER.		4
			-------*-------		
			. . . FLIGHT CONTROL, (SEE FIG. 29A).		
			. . . REQUIRED PLACARDS, (SEE 11-3, FIG. 6)		
	33	65-20854-1	. ACTUATOR INSTL, FILLET FLAP (LH) (SEE FIG. 32). . .		1
	34	65-20854-2	. ACTUATOR INSTL, FILLET FLAP (RH) (SEE FIG. 32). . .		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

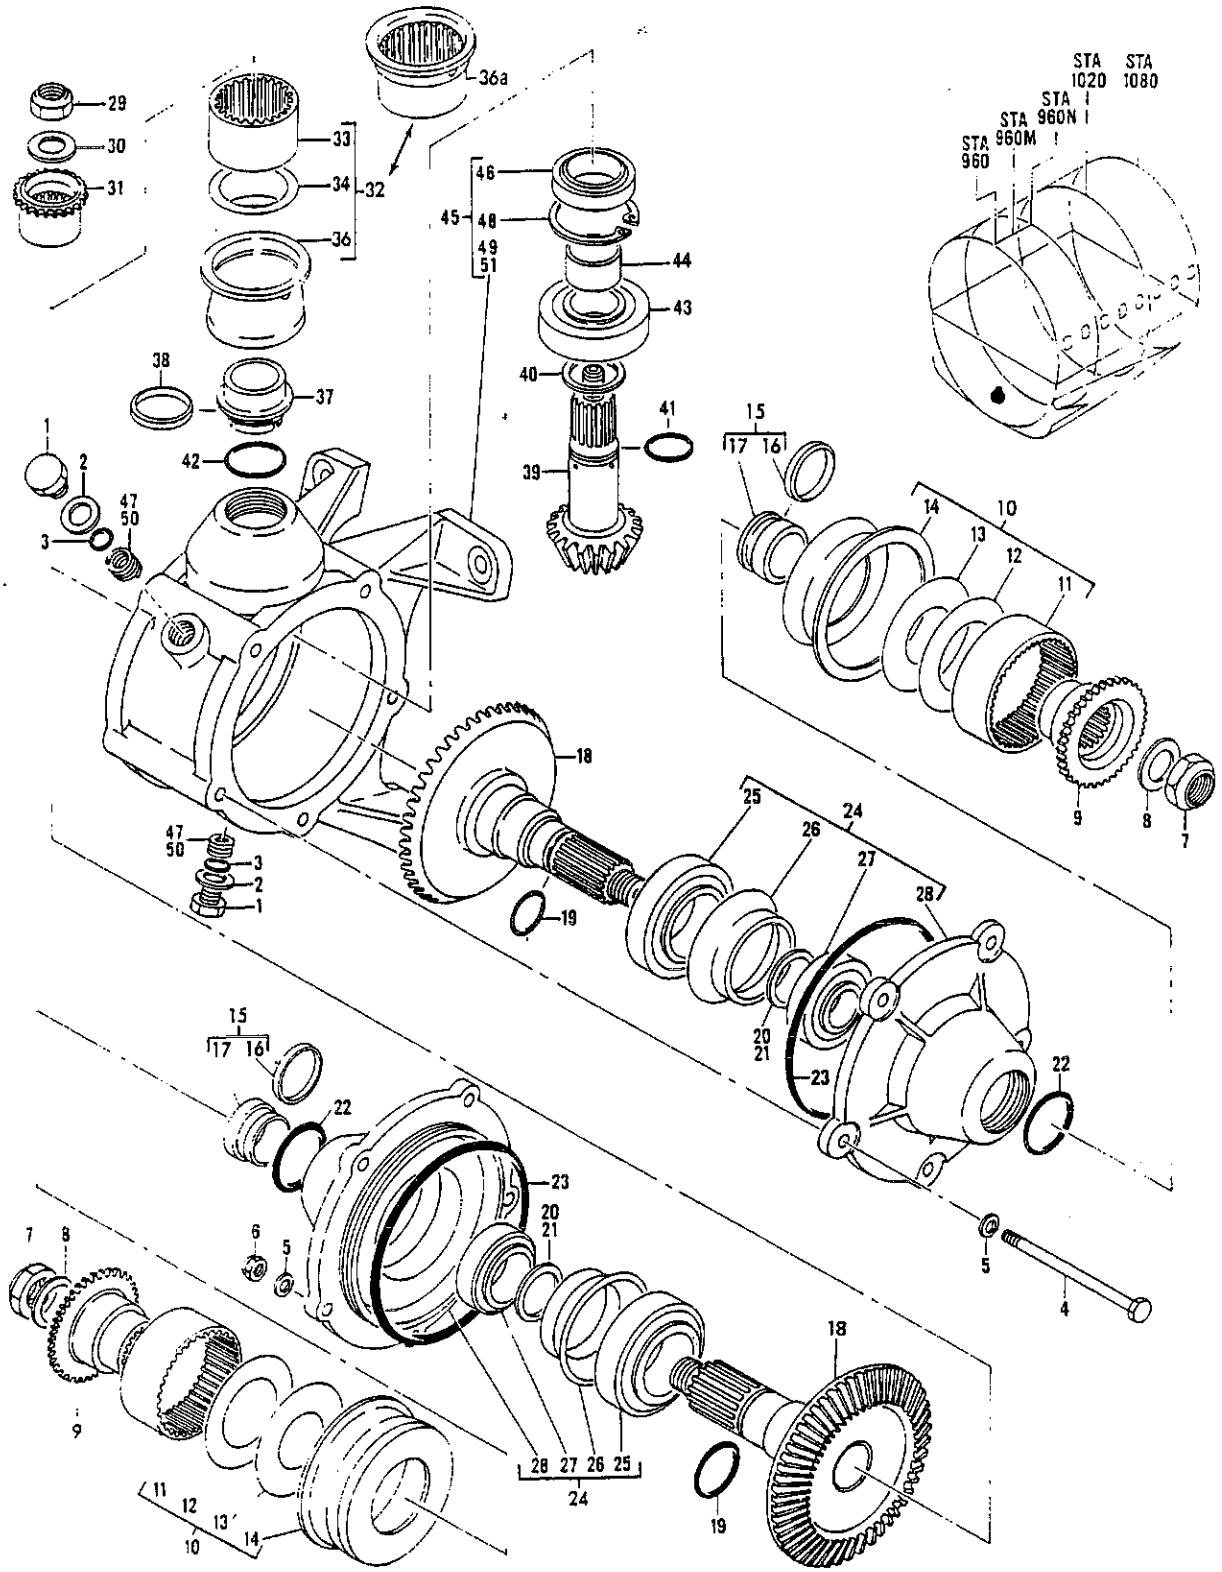


FIGURE 29A. GEAR BOX ASSY, FILLET FLAP DRIVE TEE (FLIGHT CONTROL ONLY)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R	29A	65-20845-7	GEAR BOX ASSY, FILLET FLAP DRIVE TEE (FLIGHT CONTROL. ONLY) (SEE FIG. 29, ITEM 32) (OPTIONAL 65-20845-5)	0150	RF
R R R		65-20845-5	GEAR BOX ASSY, FILLET FLAP DRIVE TEE (FLIGHT CONTROL. ONLY) (SEE FIG. 29, ITEM 32) (OPTIONAL TO 65-20845-7)	0150	RF
R R R		65-20845-7	GEAR BOX ASSY, FILLET FLAP DRIVE TEE (FLIGHT CONTROL. ONLY) (SEE FIG. 29, ITEM 32)	5199	RF
	1	AN814-4DL	. PLUG AND BLEEDER.		2
	2	BACW10T716L	. WASHER.		2
	2	NAS1197-716L	. WASHER.		2
	3	AN6227B8	. PACKING		2
	4	NAS1104-62W	. BOLT.		5
	5	AN960PD416	. WASHER.		10
	6	NAS679A4W	. NUT		5
	7	BACN10BY512	. NUT		2
	8	AN960-1216	. WASHER.		2
	9	69-15450-1	. COUPLING HALF, FLAP DRIVE SPLINED		2
	10	69-15449-1	. SLEEVE ASSY, FLAP DRIVE COUPLING.		2
	11	69-15448-1	. . SLEEVE, FLAP DRIVE COUPLING SPLINED		1
	12	66-12990-1	. . WASHER, GREASE SEAL		1
	13	66-12991-1	. . SEAL, GREASE.		1
	14	69-15447-1	. . SLEEVE, FLAP DRIVE COUPLING ADAPTER		1
	15	69-15483-1	. SPACER ASSY, FILLET FLAP DRIVE TEE GEAR BOX		2
	16	69-36083-8	. . RING, ROTARY LOW PRESSURE SEAL.		1
	17	69-15483-2	. . SPACER, FILLET FLAP DRIVE TEE GEAR BOX.		1
	18	65-19824-1	. GEAR, FILLET FLAP DRIVE TEE GEAR BOX BEVEL.		2
	19	AN6227B18	. PACKING		2
	21	9-61297-3010	. SHIM, LAMINATED		AR
	22	AN6227B26	. PACKING		2
	23	BACG10T163	. GASKET.		2
	24	65-19827-7	. COVER ASSY, GEAR BOX (USED ON 65-20845-6 AND -7).		2
	25	BACB10A21	. . BEARING		1
	26	66-13393-1	. . SPACER, FILLET FLAP DRIVE TEE GEAR BOX.		1
	27	BACB10A17	. . BEARING		1
	28	65-19827-8	. . COVER, (USED ON 65-19827-6 AND -7).		1
	29	BACN10BY59	. NUT		1
	30	AN960-916	. WASHER.		1
	31	69-14961-1	. COUPLING HALF, FLAP DRIVE SPLINED		1
	36A	69-33513-1	. SLEEVE, COUPLING.		1
	37	69-15786-1	. SPACER, FILLET FLAP DRIVE TEE GEAR BOX.		1
	38	69-27219-20	. RING, ROTARY LOW PRESSURE SEAL.		1
	39	65-19825-1	. GEAR, FILLET FLAP DRIVE TEE GEAR BOX BEVEL.		1
	40	9-61297-3010	. SHIM, LAMINATED		AR
	41	AN6227B18	. PACKING		1
	42	AN6227B25	. PACKING		1
	43	BACB10A13	. BEARING		1
	44	66-12988-1	. SPACER, FILLET FLAP DRIVE TEE GEAR BOX.		1
	45	65-19826-14	. HOUSING ASSY, GEAR BOX (USED ON 65-20845-7)		1
	46	BACB10A346	. . BEARING		1
	47	BACS13P7CN2	. . SLEEVE, (USED ON 65-19826-4, -1, -10, -12 AND -14)		2
	48	NAS50-185	. . RING, (USED ON 65-19826-7, -12 AND -14)		1
	49	65-19826-15	. . HOUSING, (USED ON 65-19826-14).		1
			. FOR REFERENCE TO OTHER GEAR BOX DETAILS, SEE NHA.		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

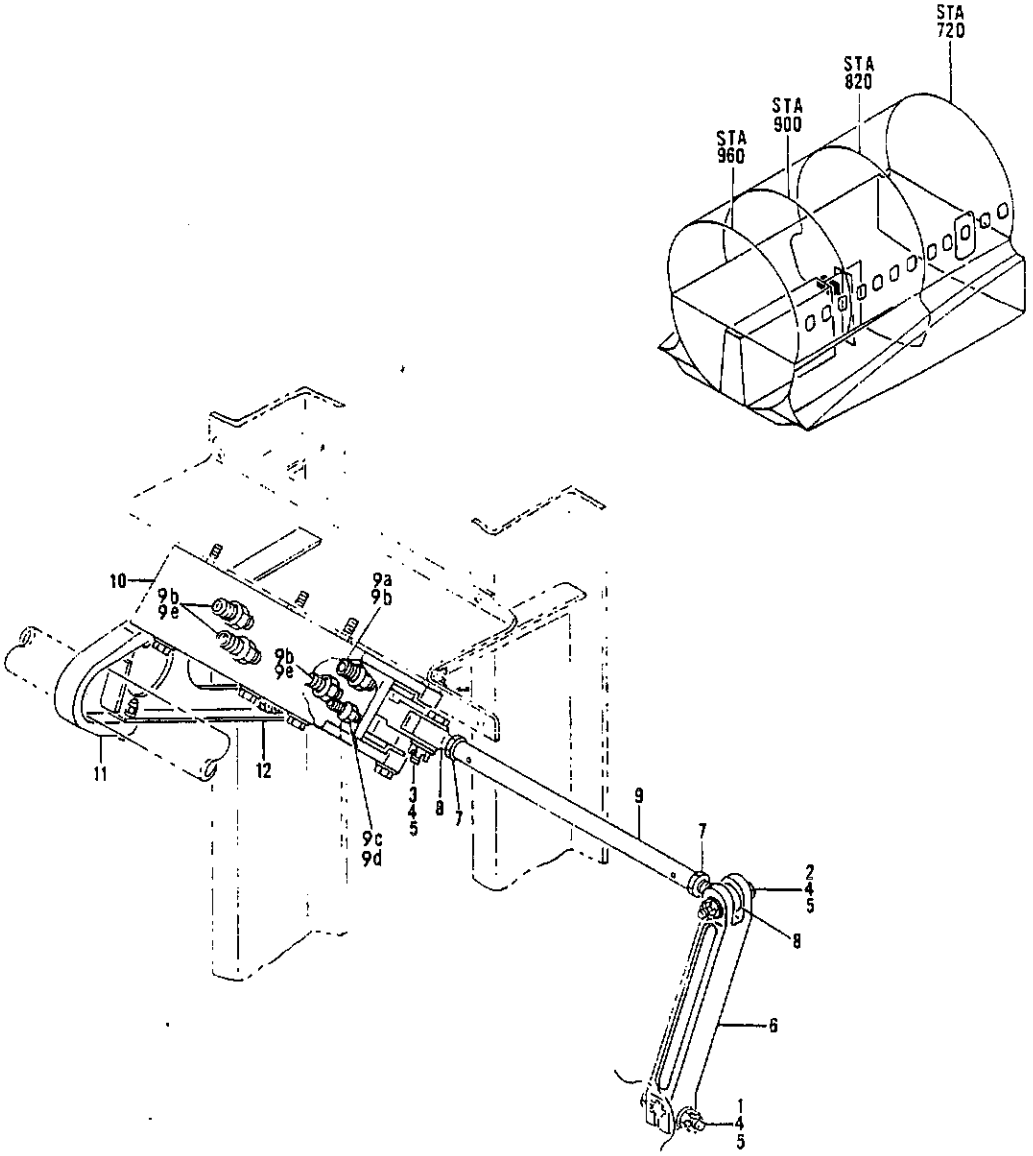


FIGURE 30. VALVE INSTL, BODY STATION 820 LEADING EDGE FLAP CONTROL

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
30	65-22421-3	VALVE INSTL, BODY STATION 820 LEADING EDGE FLAP CONTROL (SEE FIG. 29, ITEM 30)		RF
	65-22421-4	VALVE INSTL, BODY STATION 820 LEADING EDGE FLAP CONTROL (SEE FIG. 29, ITEM 30)		RF
1	NAS1104-12DW	. BOLT.		1
2	NAS1104-13DW	. BOLT.		1
3	NAS1104-11DW	. BOLT.		1
4	AN960D416L	. WASHER.		3
5	AN320C4	. NUT		3
6	65-20988-3	. ARM, LEADING EDGE FLAP CONTROL VALVE.		1
	66-13653-2	. ROD ASSY, CONTROL VALVE		1
7	AN316C6R	. . NUT		2
8	BACB10C220	. . BEARING		2
9	69-16213-2	. . TUBE, PUSH PULL CONTROL ADJUSTABLE.		1
9A	MS21902D8	. UNION		1
9B	NAS1612-8	. PACKING		4
9C	MS21902D6	. UNION		1
9D	NAS1612-6	. PACKING		1
9E	MS21902D8	. UNION		3
10	10-3214-5	. VALVE ASSY, CONTROL		1
		ATTACHING PARTS		
	AN4C27	. BOLT.		4
	AN960D416L	. WASHER.		4
		-------*-------		
11	69-2871-2	. GUARD, WING FLAP DRIVE TORQUE TUBE.		1
		ATTACHING PARTS		
	NAS221-13	. SCREW		3
	AN960D10	. WASHER.		3
	NAS679A3W	. NUT		3
		-------*-------		
12	69-17248-1	. BRACKET, BODY STATION 820 GUARD SUPPORT		1
		ATTACHING PARTS		
	AN3C4A	. BOLT.		4
	AN960PD10L	. WASHER.		4
	NAS679A3W	. NUT		4
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

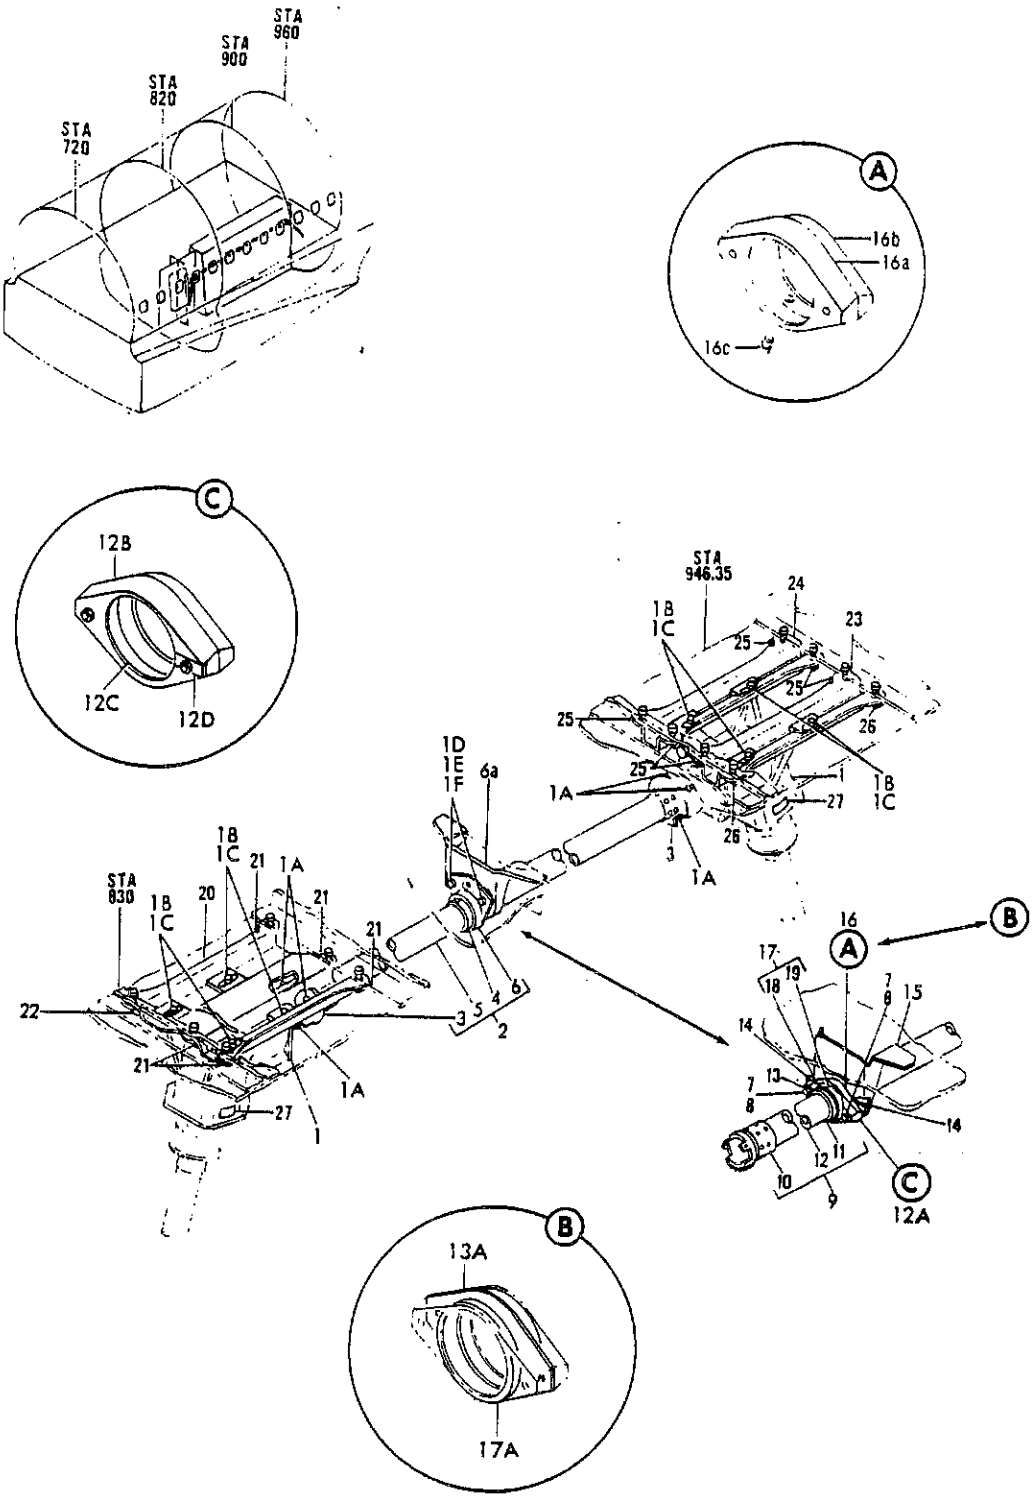


FIGURE 31. GEAR BOX INSTL, FILLET FLAP ANGLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	31	65-20844-1	GEAR BOX INSTL, FILLET FLAP ANGLE (SEE FIG. 29, ITEM. 31)		RF
	1	65-20843-5	. GEAR BOX ASSY, (SEE FIG. 31A) (OPTIONAL 65-20843-3)		2
	1	65-20843-3	. GEAR BOX ASSY, (SEE FIG. 31A) (OPTIONAL TO 65-20843-5)		2
			ATTACHING PARTS		
R	1A	AN502-10-8	. SCREW	0150	6
R	1A	66-25875-1	. SCREW	5199	6
	1B	NAS1304-13	. BOLT.		8
	1C	NAS1197-416L	. WASHER.		8
			-------*-------		
	7	NAS1103-13W	. BOLT.		2
	8	NAS679A3W	. NUT		2
	9	69-15860-7	. SHAFT ASSY, FLAP DRIVE.		1
	10	69-15857-1	. . COUPLING HALF, FLAP DRIVE SPLINED		1
			ATTACHING PARTS		
		MS20470D6	. . RIVET		24
			-------*-------		
	11	66-18540-1	. . SLEEVE, TORQUE TUBE SUPPORT FLAP DRIVE BEARING.		1
			ATTACHING PARTS		
		NAS1399D4-4	. . RIVET		3
			-------*-------		
	12	69-15860-2	. . TUBE, FLAP DRIVE SHAFT.		1
	12A	66-24326-1	. . BEARING ASSY, FLAP DRIVE TORQUE TUBE.		1
	12B	69-24995-1	. . . RETAINER ASSY		1
	12C	66-18547-4	. . . BEARING ASSY.		1
	12D	69-24995-4	. . . KEY		1
	13	69-24995-4	. KEY, FLAP DRIVE TORQUE TUBE BEARING (USED WITH. 66-18547-4, 69-24995-1 AND 69-58638-1)		1
	13A	69-58638-1	. SHIM, FLAP DRIVE TORQUE TUBE BEARING ASSY (USED WITH 69-24995-1, 69-24995-4 AND 66-18547-4)		1
	14	50-3361-2014	. FILLER, RADIUS.		2
	15	69-25122-2	. BRACKET, FILLET FLAP DRIVE TORQUE TUBE SUPPORT.		1
	16	69-24995-1	. RETAINER ASSY, FLAP DRIVE TORQUE TUBE BEARING (USED WITH 66-18547-4, 69-24995-4 AND 69-58638-1)		1
	16A	69-24995-2	. . RETAINER, (MATCHED PART, ORDER ONLY WITH. 69-24995-3)		1
	16B	69-24995-3	. . RETAINER, (MATCHED PART, ORDER ONLY WITH. 69-24995-2)		1
	16C	NAS516-1	. . FITTING		1
	18	66-18547-5	. . BEARING, FLAP DRIVE TORQUE TUBE SUPPORT (MATCHED. PART, ORDER ASSEMBLY ONLY)		1
	19	66-18547-6	. . BEARING, FLAP DRIVE TORQUE TUBE SUPPORT (MATCHED. PART, ORDER ASSEMBLY ONLY)		1
R	20	69-15900-1	. SUPPORT ASSY, ANGLE GEAR BOX FORWARD.	0150	1
R	20	69-15900-4	. SUPPORT ASSY, ANGLE GEAR BOX FORWARD.	5199	1
			ATTACHING PARTS		
		BACB30AL6-6	. BOLT.		3
		BACB30AL8-6	. BOLT.		2
		BACB30AL8-7	. BOLT.		1
		NAS1080-6	. COLLAR.		3
		NAS1080-8	. COLLAR.		3
			-------*-------		
	21	65-20844-2	. FILLER, FILLET FLAP ANGLE GEAR BOX.		5
	22	65-20844-3	. FILLER, FILLET FLAP ANGLE GEAR BOX.		1
	23	69-15901-1	. SUPPORT ASSY, ANGLE GEAR BOX AFT.		1
	24	69-15901-2	. SUPPORT ASSY, ANGLE GEAR BOX AFT.		1
			ATTACHING PARTS		
		BACB30AL6-6	. BOLT.		4
		BACB30AL8-7	. BOLT.		4
		NAS1080-6	. COLLAR.		4
		NAS1080-8	. COLLAR.		4
			-------*-------		
	25	65-20844-4	. FILLER, FILLET FLAP ANGLE GEAR BOX.		6
	26	65-20844-5	. FILLER, FILLET FLAP ANGLE GEAR BOX.		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

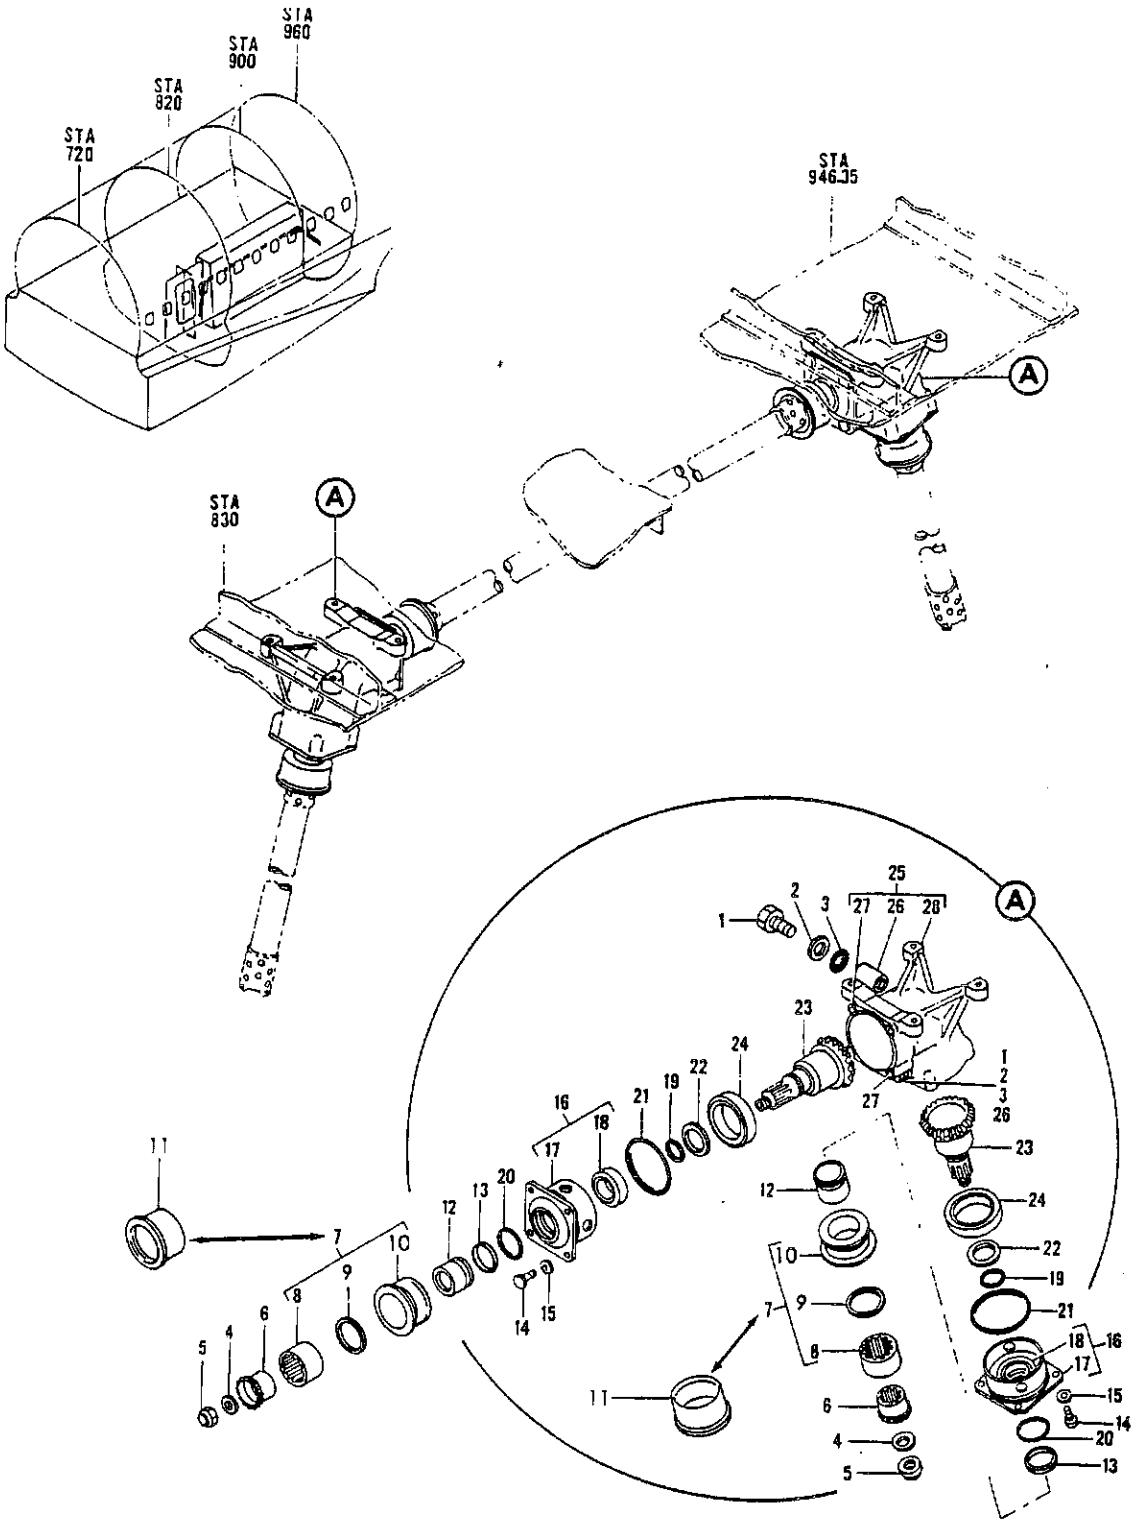


FIGURE 31A. GEAR BOX ASSY, FILLET FLAP DRIVE ANGLE (FLIGHT CONTROL ONLY)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	31A	65-20843-5	GEAR BOX ASSY, FILLET FLAP DRIVE ANGLE (FLIGHT CONTROL ONLY) (SEE FIG. 31, ITEM 1) (OPTIONAL 65-20843-3)		RF
		65-20843-3	GEAR BOX ASSY, FILLET FLAP DRIVE ANGLE (FLIGHT CONTROL ONLY) (SEE FIG. 31, ITEM 1) (OPTIONAL TO 65-20843-5)		RF
	1	AN814-4DL	. PLUG AND BLEEDER.		2
	2	NAS1197-716L	. WASHER.		2
	3	AN622788	. PACKING		2
	4	AN960-916	. WASHER.		2
	5	NAS1022A9	. NUT		2
	6	69-14961-1	. COUPLING HALF, FLAP DRIVE SPLINED		2
	8	6-61581-3001	. . SLEEVE, FLAP DRIVE COUPLING SPLINED		1
	9	3-74636	. . WASHER, GREASE SEAL		1
	10	6-62623-3001	. . SLEEVE, COUPLING ADAPTER.		1
	11	69-33513-1	. SLEEVE, COUPLING.		2
	12	69-15377-1	. SPACER, FLAP DRIVE GEAR BOX ELL		2
	13	69-27219-20	. RING, ROTARY LOW PRESSURE SEAL.		2
	14	NAS1303-4H	. BOLT.		8
	15	AN960D10	. WASHER.		8
	16	69-14969-1	. RETAINER ASSY, FLAP DRIVE GEAR BOX ELL.		2
	17	69-14969-3	. . RETAINER, FLAP DRIVE GEAR BOX ELL		1
	18	BAC810A574	. . BEARING		1
	19	AN6227B18	. PACKING		2
	20	AN6227B25	. PACKING		2
	21	AN623088	. GASKET.		2
	22	9-61297-11	. SHIM, LAMINATED		AR
	23	65-19479-1	. GEAR, BEVEL		2
	24	BAC810A575	. BEARING		2
	25	65-19445-1	. HOUSING ASSY, FILLET FLAP DRIVE ANGLE GEAR BOX (USED ON 65-20843-1 AND -5)		1
R R	25	65-19445-4	. HOUSING ASSY, FILLET FLAP DRIVE ANGLE GEAR BOX (USED ON 65-20843-2 AND -3)	0151	1
	26	BACS13P7CN2	. . SLEEVE.		2
	27	BACS13P3CN4	. . SLEEVE.		8
	28	65-19445-2	. . HOUSING, FILLET FLAP DRIVE ANGLE GEAR BOX		1
R	28	65-19445-5	. . HOUSING	0151	1
			. FOR REFERENCE TO OTHER GEAR BOX DETAILS, SEE NHA.		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

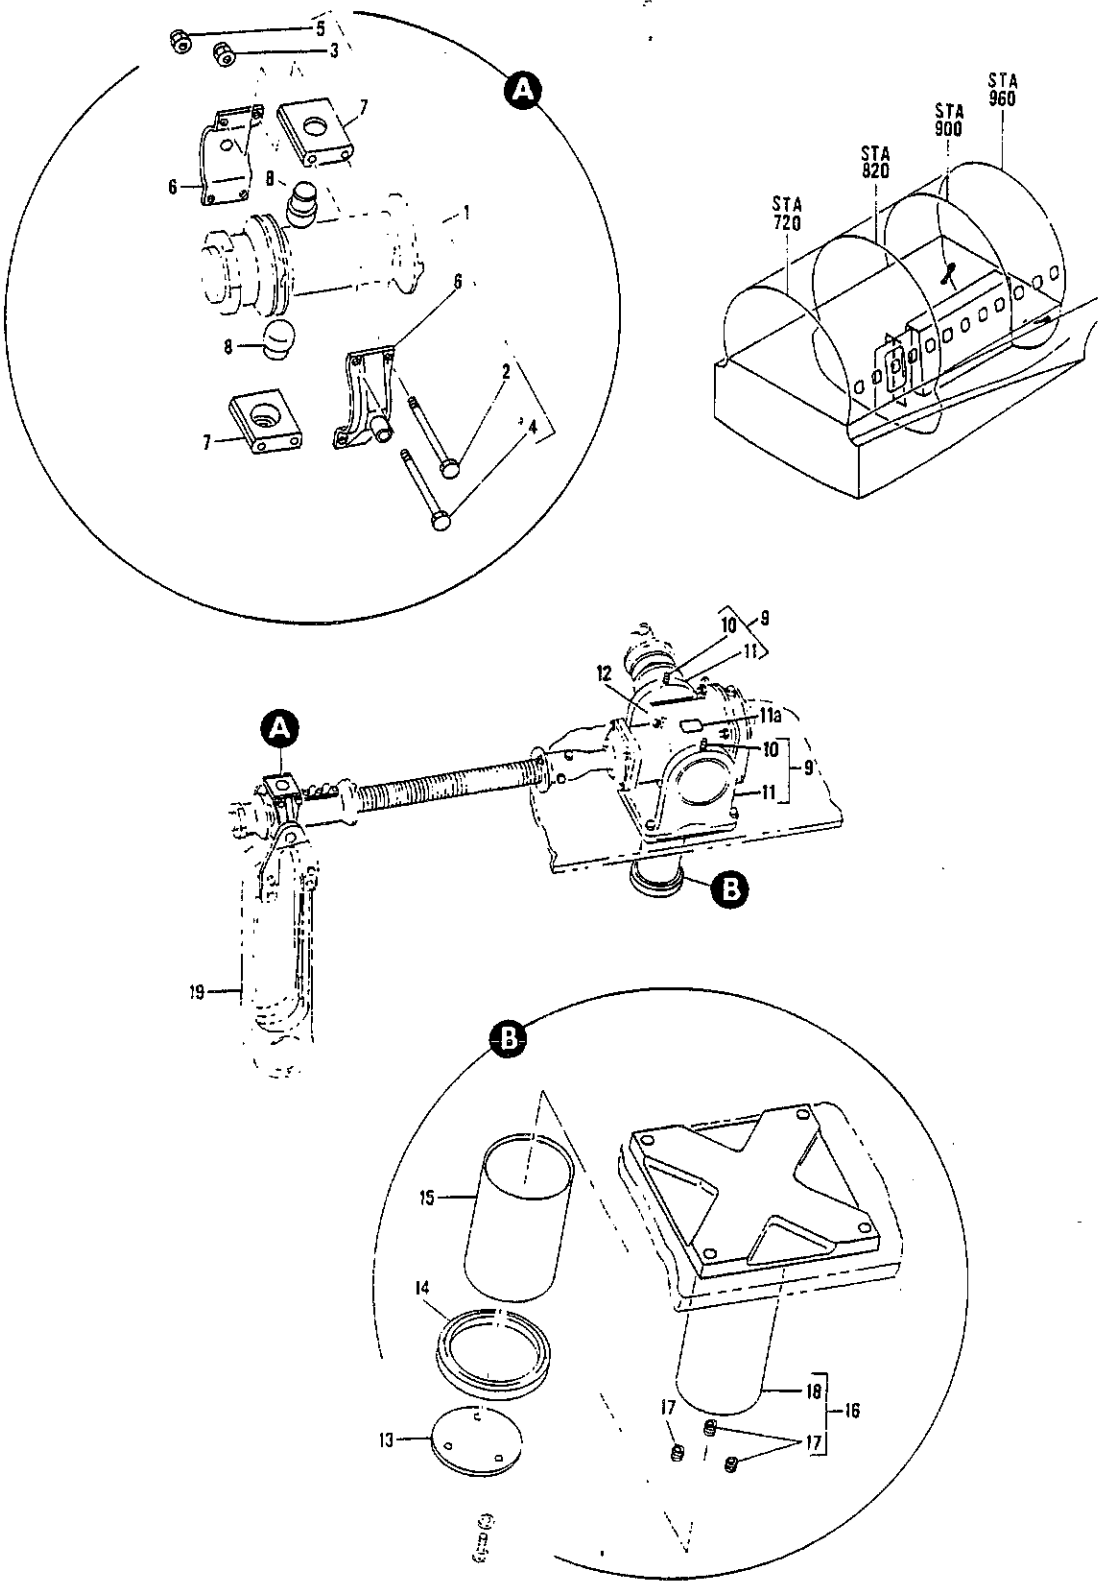


FIGURE 32. ACTUATOR INSTL, FILLET FLAP

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	32	65-20854-1	ACTUATOR INSTL, FILLET FLAP (LH) (SEE FIG. 29, ITEM . . 33)		RF
		65-20854-2	ACTUATOR INSTL, FILLET FLAP (RH) (SEE FIG. 29, ITEM . . 34)		RF
	1	65-21996-1	. GIMBAL ASSY, FILLET FLAP.		1
	2	NAS1105-38W	. . BOLT.		3
	3	NAS679A5	. . NUT		3
	4	NAS1106-38W	. . BOLT.		1
	5	NAS679A6	. . NUT		1
	6	69-15944-1	. . PLATE, FILLET FLAP GIMBAL SIDE.		2
	7	66-13347-1	. . PLATE, FILLET FLAP GIMBAL END		2
	8	BACB10S1	. BEARING		2
	9	69-16661-1	. SUPPORT ASSY, FILLET FLAP GEAR BOX TRUNNION . . . . ATTACHING PARTS		2
		NAS1307-15W	. BOLT.		4
		AN960D716L	. WASHER.		4
		NAS679A7	. NUT		4
			-------*-------		
	10	MS15001-1	. . FITTING		1
	11	69-16661-2	. . SUPPORT, FILLET FLAP GEAR BOX TRUNNION.		1
R	12	65-14803-15	. TRANSMISSION ASSY, (LH ONLY) (SEE FIG. 33).	0150	1
R			(OPTIONAL TO 65-14803-23)		
R	12	65-14803-23	. TRANSMISSION ASSY, (LH ONLY) (SEE FIG. 33).	0150	1
R			(OPTIONAL 65-14803-15, -19)		
R	12	65-14803-23	. TRANSMISSION ASSY, (LH ONLY) (SEE FIG. 33).	5199	1
R	12	65-14803-15	. TRANSMISSION ASSY, (LH ONLY) (SEE FIG. 33).	0150	1
R			(OPTIONAL TO 65-14803-23)		
R	12	65-14803-16	. TRANSMISSION ASSY, (RH ONLY) (SEE FIG. 33).	0150	1
R			(OPTIONAL TO 65-14803-24)		
R	12	65-14803-24	. TRANSMISSION ASSY, (RH ONLY) (SEE FIG. 33).	0150	1
R			(OPTIONAL 65-14803-16, -20)		
R	12	65-14803-24	. TRANSMISSION ASSY, (RH ONLY) (SEE FIG. 33).	5199	1
	13	66-14157-1	. RETAINER, FILLET FLAP DRIVE TRANSMISSION BOX MOUNTING BEARING ATTACHING PARTS		1
		NAS1304-1HW	. BOLT.		3
		AN960D416	. WASHER.		3
			-------*-------		
	14	AN202KP478	. BEARING		1
	15	69-17244-1	. SPACER, FILLET FLAP DRIVE TRANSMISSION BOX MOUNTING .		1
R	16	65-23502-3	. MOUNTING ASSY, DRIVE TRANSMISSION BOX	5199	1
R	16	65-23502-1	. MOUNTING ASSY, DRIVE TRANSMISSION BOX (DELETED BY SB 3053)	0150	1
R			(FOR REPLACEMENT ORDER 65-23502-3)		
R	16	65-23502-6	. MOUNTING ASSY, DRIVE TRANSMISSION BOX (ALTERED FROM . 65-23502-1) (ADDED BY SB 3053)	0150	1
R	16	65-23502-3	. MOUNTING ASSY, DRIVE TRANSMISSION BOX	0150	1
R			(REPLACEMENT FOR 65-23502-1 (DELETED BY SB 3053))		
	17	BACS13P4CN3	. . SLEEVE.		3
R	18	65-23502-2	. . MOUNTING, (USED ON 65-23502-1 AND -6)	0150	1
	18	65-23502-4	. . MOUNTING, (USED ON 65-23502-3).		1
	19		FLAP INSTL, FILLET (FOR REF SEE 27-6, FIG. 23).		RF

MISSING ITEM NUMBERS ARE NOT APPLICABLE

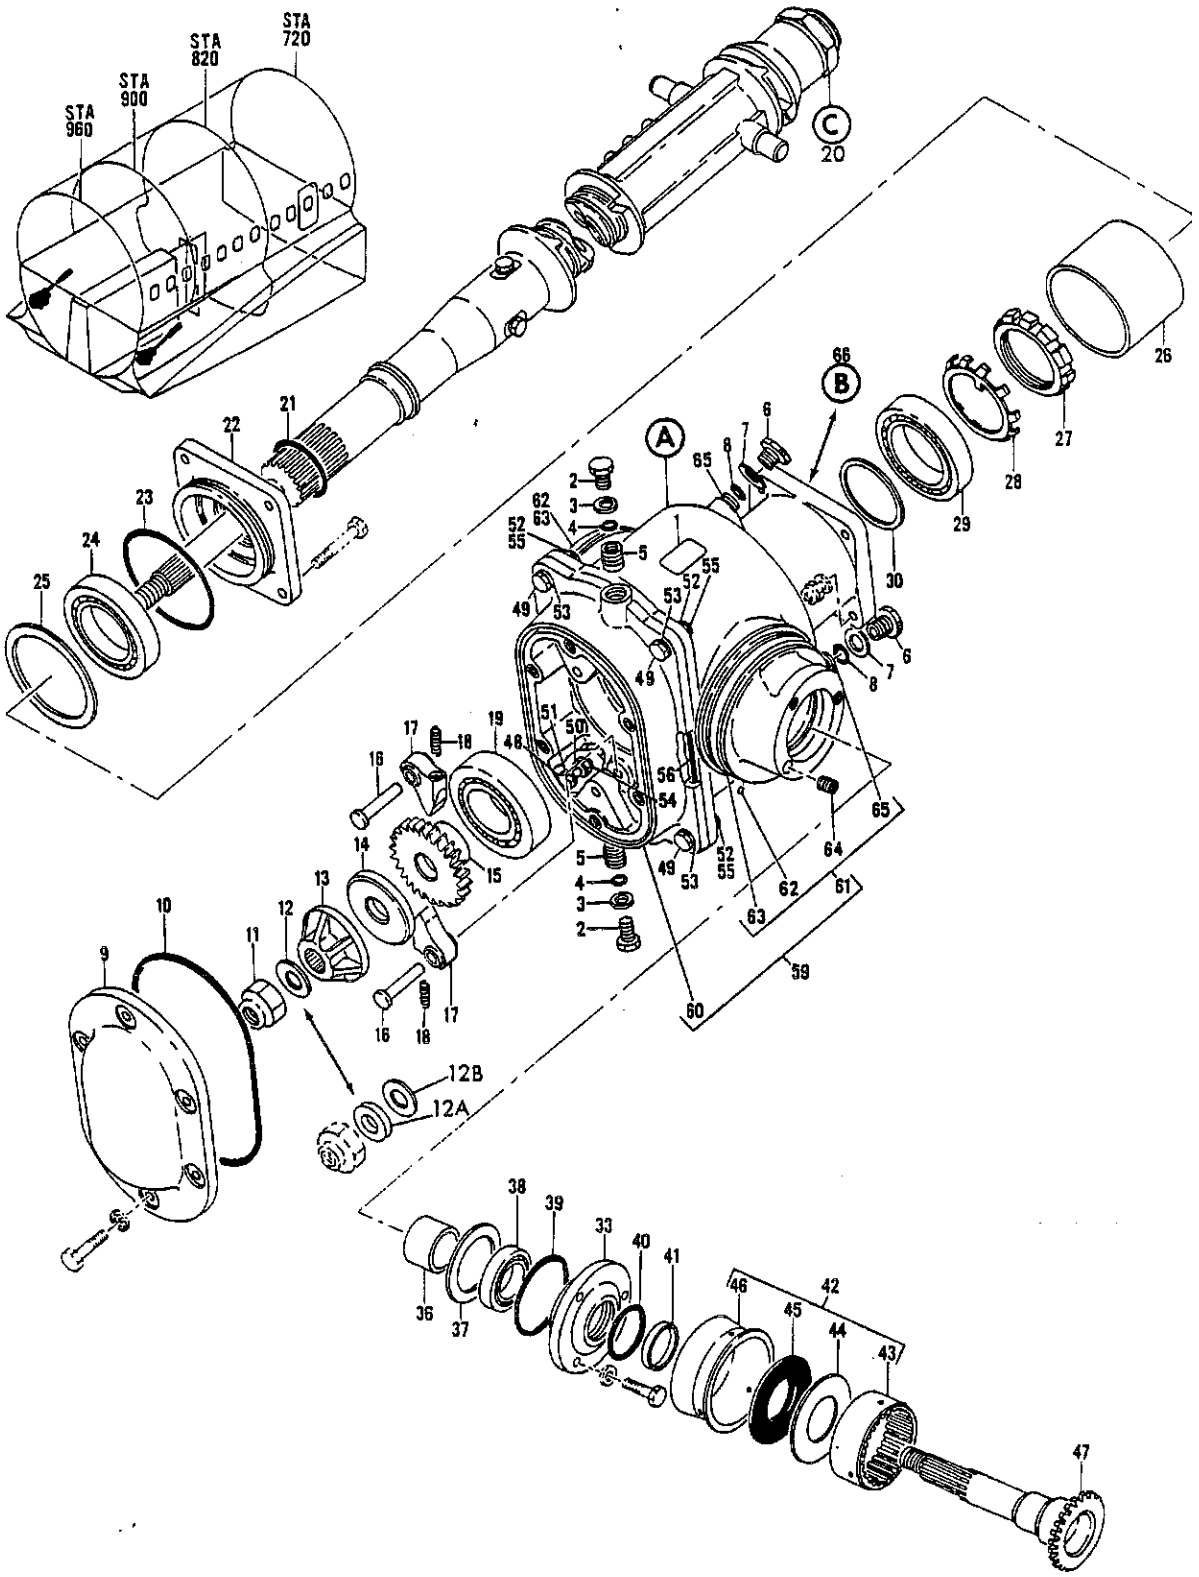


FIGURE 33. TRANSMISSION ASSY, FILLET FLAP DRIVE BALLSCREW (SHEET 1)

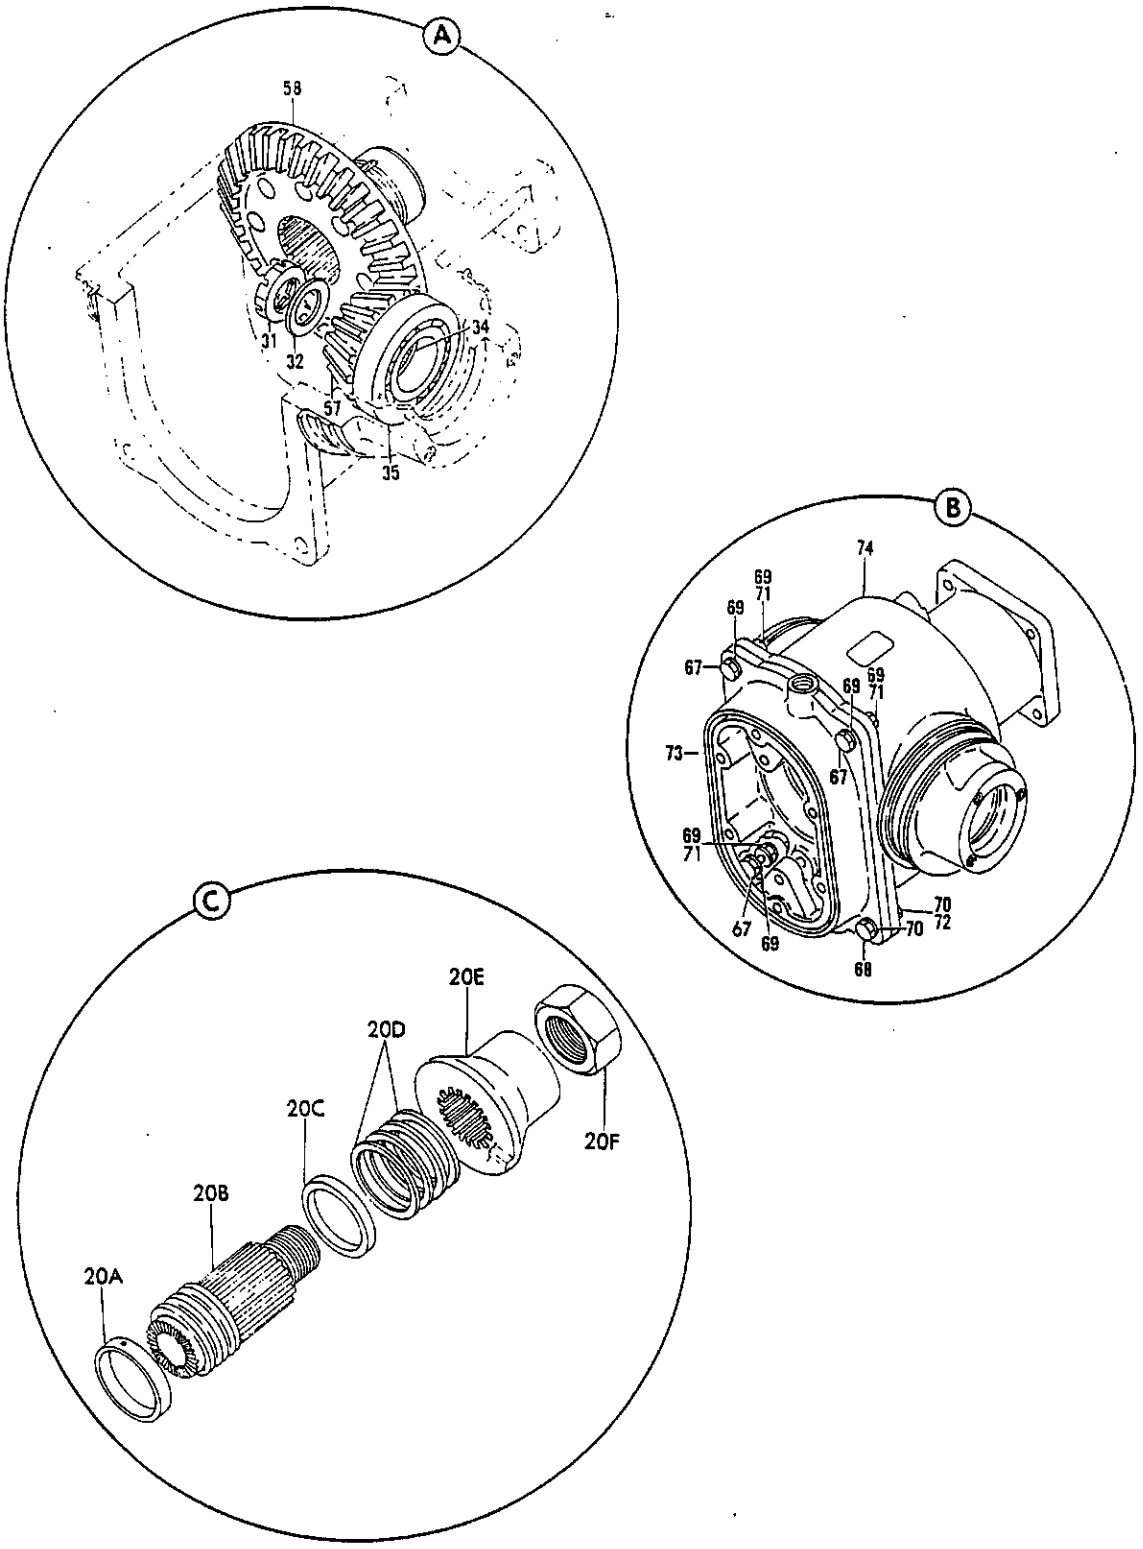


FIGURE 33. TRANSMISSION ASSY, FILLET FLAP DRIVE BALLSCREW (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	33	65-14803-15	TRANSMISSION ASSY, FILLET FLAP DRIVE BALLSCREW (LH) . .	0150	RF
R			(SEE FIG. 32, ITEM 12)		
R			(OPTIONAL TO 65-14803-23)		
R		65-14803-23	TRANSMISSION ASSY, FILLET FLAP DRIVE BALLSCREW (LH) . .	0150	RF
R			(SEE FIG. 32, ITEM 12)		
R			(OPTIONAL 65-14803-15, -19)		
R		65-14803-23	TRANSMISSION ASSY, FILLET FLAP DRIVE BALLSCREW (LH) . .	5199	RF
R			(SEE FIG. 32, ITEM 12)		
R		65-14803-16	TRANSMISSION ASSY, FILLET FLAP DRIVE BALLSCREW (RH) . .	0150	RF
R			(SEE FIG. 32, ITEM 12)		
R			(OPTIONAL TO 65-14803-24)		
R		65-14803-24	TRANSMISSION ASSY, FILLET FLAP DRIVE BALLSCREW (RH) . .	0150	RF
R			(SEE FIG. 32, ITEM 12)		
R			(OPTIONAL 65-14803-16, -20)		
R		65-14803-24	TRANSMISSION ASSY, FILLET FLAP DRIVE BALLSCREW (RH) . .	5199	RF
R			(SEE FIG. 32, ITEM 12)		
	1	BACM10L6R	. MARKER-ALUMINUM FOIL, SERVICE INSTRUCTIONS (USED ON .		1
			65-14803-11, -12, -15, -16, -19, -20, -23, -24, -27, -28, 65-20854-3 AND -4)		
	2	AN814-2DL	. PLUG AND BLEEDER.		2
	3	BACW10T516L	. WASHER.		2
	4	AN6227B4	. PACKING		2
	5	BACS13P5CN2	. SLEEVE.		2
	6	AN814-4DL	. PLUG AND BLEEDER.		2
	7	NAS1197-716L	. WASHER, (USED ON 65-14803-3, -4, -11, -12, -15. . . .		2
			-16, -19, -20, -23, -24, -27, -28, 65-20854-3, -4)		
	8	AN6227B8	. PACKING		2
R	9	65-19553-2	. COVER, FILLET FLAP DRIVE GEAR BOX (USED ON.	0150	1
R			65-14803-3, -4, -11, -12, -15, -16, -19, -20,		
R			65-20854-3 AND -4)		
	9	65-19553-5	. COVER, FILLET FLAP DRIVE GEAR BOX (USED ON.		1
			65-14803-23, -24, -27 AND -28)		
			ATTACHING PARTS		
		NAS1304-2H	. BOLT.		6
		BACS11W4	. SEAL.		6
		BACS13P4CN3	. SLEEVE.		6
			-------*-------		
	10	BACG10T169	. GASKET.		1
R	11	NAS1021A10	. NUT	0150	1
R	11	BACN10GW10	. NUT	5199	1
R	12	AN960D1016	. WASHER.	0150	1
R	12A	66-25488-1	. WASHER.	5199	1
R	12B	66-25489-1	. WASHER, LAMINATED	5199	AR
R	13	69-15987-1	. SHOE, FILLET FLAP DRIVE GEAR BOX BRAKE.	0150	1
R	13	69-63632-1	. SHOE, GEAR BOX BRAKE.	5199	1
	14	66-13380-1	. PLATE, FILLET FLAP DRIVE GEAR BOX BRAKE		1
	15	69-15383-1	. RATCHET, FILLET FLAP DRIVE GEAR BOX		1
	16	MS20392-4-43	. PIN		2
	17	6-72700	. PAWL, FLAP DRIVE TEE BOX RATCHET.		2
	18	3-74693	. SPRING, FLAP DRIVE COMPRESSION.		2
	19	BACB10A335	. BEARING		1
R	20	10-60548-8	. BALLSCREW AND NUT ASSY, WING.	5199	1
R	20	10-60548-5	. BALLSCREW AND NUT ASSY, WING.	0150	1
R			(OPTIONAL TO 10-60548-8)		
R	20	10-60548-8	. BALLSCREW AND NUT ASSY, WING.	0150	1
R			(OPTIONAL 10-60548-5)		
	21	AN6230B3	. GASKET.		1
	22	69-15730-1	. CAP, FILLET FLAP DRIVE GEAR BOX BEARING		1
			ATTACHING PARTS		
		NAS1104-13	. BOLT.		4
		NAS1197-416	. WASHER, (USED ON 65-14803-3, -4, -11, -12, -15, -16,		4
			-19, -20, -27, -28, 65-20854-3 AND -4)		
		NAS679A4W	. NUT		4
			-------*-------		
	23	AN6230B15	. GASKET.		1
	24	BACB10A483	. BEARING		1
	25	9-61297-3006	. SHIM, LAMINATED		1
	26	66-13232-1	. SPACER, FILLET FLAP DRIVE GEAR BOX.		1
	27	BACN10AP10	. NUT		1
	28	BACW10A10	. WASHER.		1
	29	BACB10A484	. BEARING		1
	30	9-61297-3009	. SHIM, LAMINATED		AR
	31	AN320-14	. NUT		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	33 32	AN960-1416	. WASHER. (OPTIONAL AN960-1416L)		1
	32	AN960-1416L	. WASHER. (OPTIONAL TO AN960-1416)		1
	33	69-15737-1	. CAP, FILLET FLAP DRIVE GEAR BOX BEARING ATTACHING PARTS		1
		NAS1304-4H	. BOLT.		3
		NAS1197-416	. WASHER, (USED ON 65-14803-3, -4, -11, -12, -15, -16 -19, -20, -23, -24, -27, -28, 65-20854-3 AND -4) -------*-------		3
	34	9-61297-3007	. SHIM, LAMINATED		AR
	35	BACB10A142	. BEARING		1
	36	66-13387-1	. SPACER, FILLET FLAP DRIVE GEAR BOX.		1
	37	9-61297-3008	. SHIM, LAMINATED		1
	38	BACB10A579	. BEARING		1
	39	AN623087	. GASKET.		1
	40	AN6227826	. GASKET.		1
	41	69-27219-21	. RING, LOW PRESSURE ROTARY SEAL (USED ON 65-14803-11, -12, -15, -16, -19, -20, -23, -24, 65-20854-3, -4)		1
	42	69-15449-1	. SLEEVE ASSY, FLAP DRIVE COUPLING.		1
	43	69-15448-1	. . SLEEVE, FLAP DRIVE COUPLING SPLINED		1
	44	66-12990-1	. . WASHER, FLAP DRIVE COUPLING GREASE SEAL		1
	45	66-12991-1	. . SEAL, FLAP DRIVE COUPLING GREASE.		1
	46	69-15447-1	. . SLEEVE, FLAP DRIVE COUPLING ADAPTER		1
	47	65-19554-1	. SHAFT, FILLET FLAP DRIVE GEAR BOX INPUT		1
	48	NAS1104-11	. BOLT, (USED ON 65-14803-3, -4, -11, -12, -15, -16, -19, -20, -23, -24, -27, -28, 65-20854-3 AND -4)		1
	49	NAS1105-11	. BOLT, (USED ON 65-14803-3, -4, -11, -12, -15, -16, -19, -20, -23, -24, -27, -28, 65-20854-3 AND -4)		3
	50	NAS1197-416	. WASHER, (USED ON 65-14803-3, -4, -11, -12, -15, -16, -19, -20, -23, -24, -27, -28, 65-20854-3 AND -4)		1
	51	NAS1197-416	. WASHER, (USED ON 65-14803-3, -4, -11, -12, -15, -16, -19, -20, -23, -24, -27, -28, 6520854-3 AND -4)		1
	52	NAS1197-516	. WASHER, (USED ON 65-14803-3, -4, -11, -12, -15, -16, -19, -20, -23, -24, -27, -28, 65-20854-3 AND -4)		3
	53	NAS1197-516	. WASHER, (USED ON 65-14803-3, -4, -11, -12, -15, -16, -19, -20, -23, -24, -27, -28, 65-20854-3 AND -4)		3
	54	NAS679A4W	. NUT		1
	55	NAS679A5	. NUT		3
	56	BACG10T173	. GASKET.		1
	57	69-15329-1	. PINION, FILLET FLAP DRIVE		1
	58	65-19460-1	. GEAR, FILLET FLAP DRIVE BEVEL		1
R	59	65-14803-7	. GEAR BOX ASSY, (LH ONLY) (USED ON 65-14803-11, -15, -19 AND 65-20854-3)	0150	1
R	59	65-14803-25	. GEAR BOX ASSY, (LH ONLY) (USED ON 65-14803-23 AND -27	5199	1
R	59	65-14803-8	. GEAR BOX ASSY, (RH ONLY) (USED ON 65-14803-12, -16, -20 AND 65-20854-4)	0150	1
R	59	65-14803-26	. GEAR BOX ASSY, (RH ONLY) (USED ON 65-14803-24 AND -28	5199	1
R	60	65-19552-4	. . HOUSING, FILLET FLAP DRIVE GEAR BOX BEARING (USED ON 65-14803-7 AND -8)	0150	1
R	60	65-19552-7	. . HOUSING ASSY, BEARING (USED ON 65-14803-25 AND -26)	5199	1
R	61	65-19459-7	. . HOUSING ASSY, FILLET FLAP DRIVE GEAR BOX (LH ONLY) (USED ON 65-14803-7)	0150	1
R	61	65-19459-13	. . HOUSING ASSY, GEAR BOX (LH ONLY) (USED ON 65-14803-25)	5199	1
R	61	65-19459-8	. . HOUSING ASSY, FILLET FLAP DRIVE GEAR BOX (RH ONLY) (USED ON 65-14803-8)	0150	1
R	61	65-19459-14	. . HOUSING ASSY, GEAR BOX (RH ONLY) (USED ON 65-14803-26)	5199	1
	62	5-87414-3	. . . KEY, FLAP DRIVE		2
	63	6-60498-6	. . . BUSHING, FLAP DRIVE BALL BEARING SCREW.		2
	64	BACS13P4CN3	. . . SLEEVE.		3
	65	MS21208F7-10	. . . SLEEVE.		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

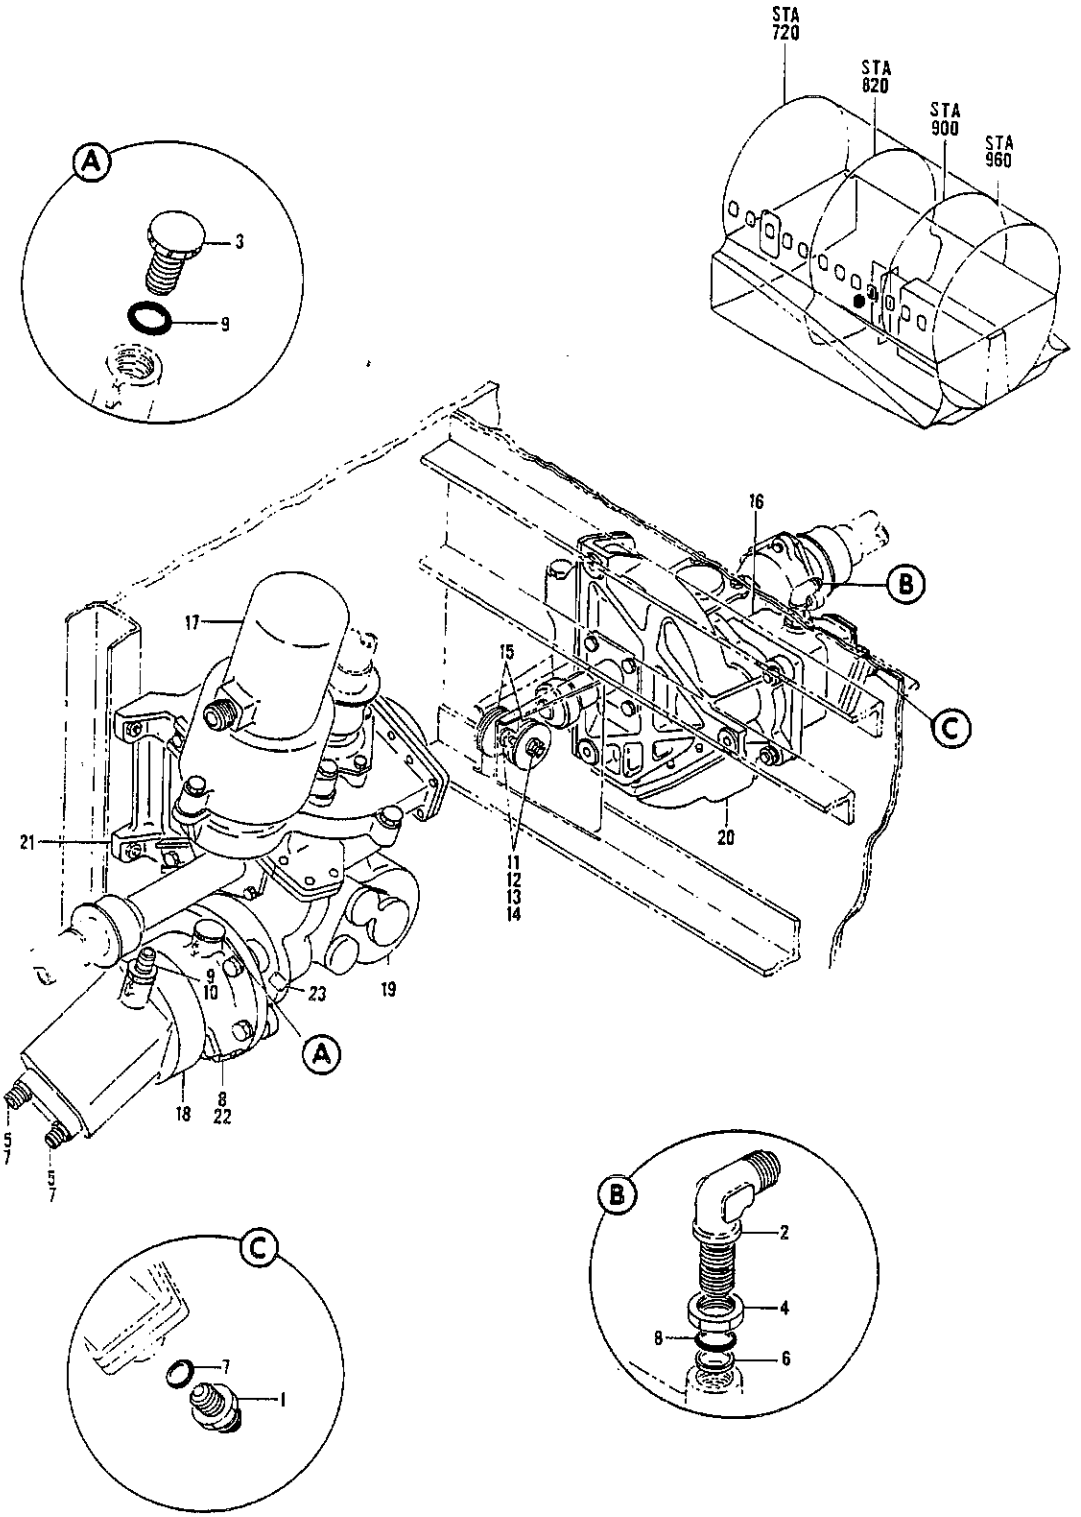


FIGURE 35. POWER UNIT INSTL, INBOARD AND FILLET FLAP DRIVE (FLIGHT CONTROL ONLY)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	35	65-20847-1	POWER UNIT INSTL, INBOARD AND FILLET FLAP DRIVE (FLIGHT CONTROL ONLY) (SEE FIG. 29, ITEM 29)		RF
	1	MS21916-8-6	. REDUCER		2
	2	MS21916D6-4	. REDUCER		1
	2	BACE21AU0606D	. ELBOW		1
	3	AN814-6DL	. PLUG AND BLEEDER		1
	5	MS21902D8	. UNION		2
	7	NAS1612-8	. PACKING		4
	8	NAS1612-4	. PACKING		2
	9	NAS1612-6	. PACKING		2
	10	MS21902D6	. UNION		1
	11	NAS1104-11D	. BOLT		2
	12	NAS430D4-10	. SPACER		2
	13	AN960D416	. WASHER		2
	14	AN320-4	. NUT		2
	15	MS20219-2	. PULLEY		2
	16	MS9-3911-30ZE	. MOTOR, HYDRAULIC (V62983) (OPTIONAL TO MS9-3911-30ZE4C (V62983))		1
	16	MS9-3911-30ZE4C	. MOTOR, HYDRAULIC (V62983) (OPTIONAL MS9-3911-30ZE (V62983))		1
			ATTACHING PARTS		
		AN5H6A	. BOLT		2
		AN5H11A	. BOLT		2
		BACW10T516	. WASHER		4
		NAS679A5	. NUT		2
			-------*-------		
	17	10-60505-1	. DRIVE UNIT, WING FLAPS EMERGENCY (SAME AS 540666-1.		1
			ATTACHING PARTS		
		NAS1304-21	. BOLT		3
		NAS1197-416	. WASHER		3
		NAS679A4W	. NUT		3
			-------*-------		
	18	MF1108008A	. MOTOR, HYDRAULIC (V62983)		1
			ATTACHING PARTS		
		NAS1306-5H	. BOLT		6
		AN960-616L	. WASHER		6
			-------*-------		
R	19	65-20846-4	. POWER UNIT ASSY (OPTIONAL TO 65-20846-8)	0150	1
R	19	65-20846-8	. POWER UNIT ASSY (OPTIONAL 65-20846-4)	0150	1
R	19	65-20846-8	. POWER UNIT ASSY (OPTIONAL TO 65-20846-10)	5199	1
R	19	65-20846-10	. POWER UNIT ASSY (OPTIONAL 65-20846-8)	5199	1
			ATTACHING PARTS		
		NAS1304-9	. BOLT		4
		NAS1197-416L	. WASHER		8
		NAS679A4W	. NUT		4
			-------*-------		
			. . FLIGHT CONTROL, (SEE FIG. 35B)		
			. . REQUIRED PLACARDS, (SEE 11-2, FIG. 202)		
	20	5-87448-3007	. POWER UNIT ASSY, SECTION 53 (FLIGHT CONTROL ONLY) (SEE FIG. 35A)		1
			ATTACHING PARTS		
		NAS1304-9	. BOLT		3
		NAS1197-416	. WASHER		3
			-------*-------		
R	21	65-20965-3	. BRACKET, FLAP DRIVE POWER UNIT MOUNTING (OPTIONAL 65-20965-5)	0150	1
R	21	65-20965-5	. BRACKET, FLAP DRIVE POWER UNIT MOUNTING (OPTIONAL TO 65-20965-3)	0150	1
R	21	65-20965-5	. BRACKET, FLAP DRIVE POWER UNIT MOUNTING	5199	1
			ATTACHING PARTS		
		NAS1304-9	. BOLT		4
		NAS1197-416	. WASHER		4
		NAS679A4W	. NUT		4
			-------*-------		
	22	63-2117-1	. FITTING, PNEUMATIC EXHAUST BULKHEAD (ALTERED FROM MS21902D4)		1
			. FOR REFERENCE TO OTHER POWER UNIT DETAILS, SEE NHA.		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

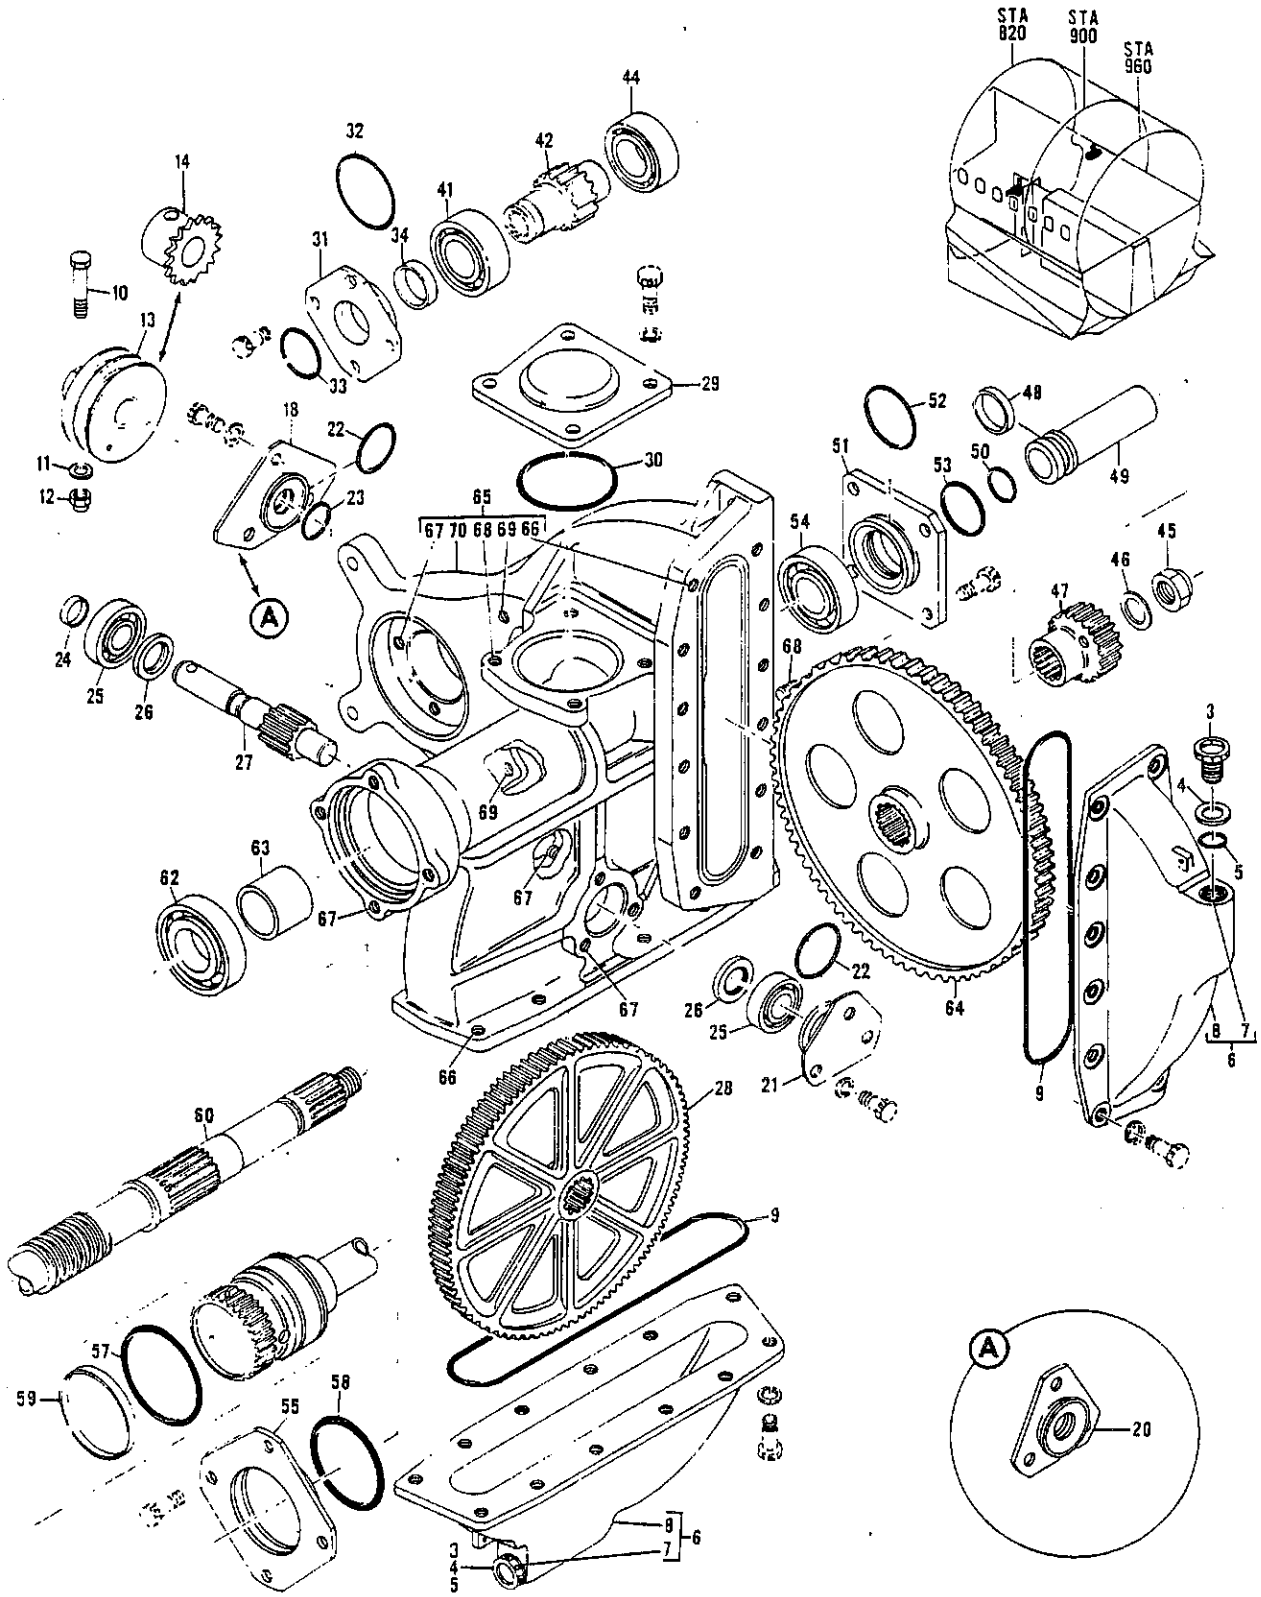


FIGURE 35A. POWER UNIT ASSY, SECTION 53 FLAP DRIVE (FLIGHT CONTROL ONLY)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
35A	5-87448-3007	POWER UNIT ASSY, SECTION 53 FLAP DRIVE (FLIGHT CONTROL ONLY) (SEE FIG. 34, ITEM 13 AND FIG. 35, ITEM 20)		RF
3	AN814-4DL	. PLUG.		2
4	NAS1197-716L	. WASHER, (USED ON 5-87448-3001, -3007, -3006 AND-3008)		2
5	AN6227B8	. PACKING		2
6	5-96161-3001	. COVER ASSY, FLAP DRIVE POWER UNIT		2
		ATTACHING PARTS		
	NAS1303-1H	. BOLT.		12
	NAS1197-10L	. WASHER.		12
		-------*-------		
7	BAC13P7CN2	. . INSERT, SLEEVE HELI-COIL (V01556)		1
8	5-96161-2001	. . COVER, FLAP DRIVE POWER UNIT.		1
9	MS29513-250	. PACKING		2
10	NAS1103-14W	. BOLT, (USED ON M6282-100, 5-87448-3001, -3007 AND -3008)		1
11	AN960D10	. WASHER.		1
12	NAS679A3W	. NUT		1
13	9-62458-2000	. SHEAVE, FLAP DRIVE POWER UNIT (USED ON M6282-100, 5-87448-3001, -3007 AND -3008)		1
18	69-4046	. RETAINER ASSY, POWER UNIT (USED ON M6282-100, 5-87448-3001, -3007 AND -3008)		1
21	6-73137-2000	. CAP, FLAP DRIVE POWER UNIT.		1
		ATTACHING PARTS		
	NAS1303-1H	. BOLT.		6
	AN960-10L	. WASHER.		6
		-------*-------		
22	AN6227B21	. PACKING		2
23	AN6227B12	. PACKING		1
24	69-27219-18	. RING, LOW PRESSURE ROTARY SEAL. (OPTIONAL TO AND REPLACEMENT FOR 6-72465-18)		1
24	6-72465-18	. RING, LOW PRESSURE ROTARY SEAL. (OPTIONAL AND FOR REPLACEMENT ORDER 69-27219-18)		1
25	BACB10A367	. BEARING		2
26	3-87035	. SPACER, FLAP DRIVE POWER UNIT WORM GEAR		2
27	6-73132	. SHAFT, FLAP DRIVE POWER UNIT.		1
28	5-66665	. GEAR, FLAP DRIVE POWER UNIT WORM.		1
29	9-61969-2000	. CAP, FLAP DRIVE POWER UNIT.		1
		ATTACHING PARTS		
	NAS1304-3H	. BOLT.		4
	NAS1197-416	. WASHER.		4
		-------*-------		
30	AN6230-4	. GASKET.		1
31	6-73134-2000	. RETAINER, FLAP DRIVE POWER UNIT		1
		ATTACHING PARTS		
	NAS1303-1H	. BOLT.		4
		-------*-------		
32	AN6230B1	. GASKET.		1
33	AN6227B19	. PACKING		1
34	69-27219-19	. RING, LOW PRESSURE ROTARY SEAL. (OPTIONAL 6-72465-19)		1
34	6-72465-19	. RING, LOW PRESSURE ROTARY SEAL. (OPTIONAL TO 69-27219-19)		1
41	BACB10A90	. BEARING		1
42	9-62459-2000	. GEAR, FLAP DRIVE POWER UNIT PINION.		1
44	BACB10A334	. BEARING, (OPTIONAL BACB10A382).		1
44	BACB10A382	. BEARING,. (OPTIONAL TO BACB10A334)		1
45	NAS1022A9	. NUT		1
46	AN960-916	. WASHER.		1
R 47	6-72451	. COUPLING HALF, SPLINED. (OPTIONAL TO 69-4083)	0150	1
R 47	6-72451	. COUPLING HALF, FLAP DRIVE SPLINED (OPTIONAL TO. . . 69-4083) (DELETED BY SL-27-12)	5199	1
R 47	69-4083	. COUPLING HALF, FLAP DRIVE SPLINED (OPTIONAL 6-72451) (OPTIONAL TO 69-46619-1)	0150	1
R 47	69-4083	. COUPLING HALF, FLAP DRIVE SPLINED (OPTIONAL 6-72451) (OPTIONAL TO 69-46619-1) (DELETED BY SL-27-12)	5199	1
R 47	69-46619-1	. COUPLING HALF, FLAP DRIVE SPLINED (OPTIONAL 69-4083)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R	35A 47	69-46619-1	. COUPLING HALF, FLAP DRIVE SPLINED (ADDED BY SL-27-12) (OPTIONAL 69-4083) (DELETED BY SL-27-12)	5199	1
	48	69-27219-14	. RING, LOW PRESSURE ROTARY SEAL. . . . . (OPTIONAL TO AND REPLACEMENT FOR 6-72465-14)		1
	48	6-72465-14	. RING, LOW PRESSURE ROTARY SEAL. . . . . (OPTIONAL AND FOR REPLACEMENT ORDER 69-27219-14)		1
	49	6-73133	. SLEEVE, FLAP DRIVE POWER UNIT		1
	50	AN6227B14	. PACKING		1
	51	6-73135-2000	. RETAINER, FLAP DRIVE POWER UNIT . . . . . ATTACHING PARTS		1
		NAS1304-1H	. BOLT. . . . . --------*--------		4
	52	AN6230B1	. GASKET.		1
	53	AN6227B22	. PACKING		1
	54	BACB10A90	. BEARING		1
	55	66-3684-2000	. RETAINER, FLAP DRIVE POWER UNIT . . . . . ATTACHING PARTS		1
		NAS1303-1H	. BOLT. . . . . --------*--------		4
	57	AN6230B6	. GASKET.		1
	58	AN6230B2	. GASKET.		1
	59	69-27219-27	. RING, LOW PRESSURE ROTARY SEAL. . . . . (OPTIONAL 6-72465-27)		1
	59	6-72465-27	. RING, LOW PRESSURE ROTARY SEAL. . . . . (OPTIONAL TO 69-27219-27)		1
	60	65-5805	. SHAFT, FLAP DRIVE POWER UNIT.		1
	62	BACB10A17	. BEARING		1
	63	3-98755	. SPACER, FLAP DRIVE POWER UNIT		1
	64	9-50555	. GEAR, FLAP DRIVE POWER UNIT SPUR.		1
	65	50-9577-3001	. HOUSING ASSY, FLAP DRIVE POWER UNIT		1
	66	BACS13P3CN2	. . SLEEVE, ... (OPTIONAL MS21209F1-10)		24
	66	MS21209F1-10	. . INSERT, ... (OPTIONAL TO BACS13P3CN2)		24
	67	BACS13P3CN3	. . SLEEVE, ... (OPTIONAL MS21209F1-15)		14
	67	MS21209F1-15	. . INSERT, ... (OPTIONAL TO BACS13P3CN3)		14
	68	BACS13P4CN3	. . SLEEVE, ... (OPTIONAL MS21209F4-15)		8
	68	MS21209F4-15	. . INSERT, ... (OPTIONAL TO BACS13P4CN3)		8
	69	BACS13P5CN3	. . SLEEVE, ... (OPTIONAL MS21209F5-15)		2
	69	MS21209F5-15	. . INSERT, ... (OPTIONAL TO BACS13P5CN3)		2
	70	50-9577-2001	. . HOUSING, FLAP DRIVE POWER UNIT. . . . . . FOR REFERENCE TO OTHER POWER UNIT DETAILS, SEE NHA. .		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

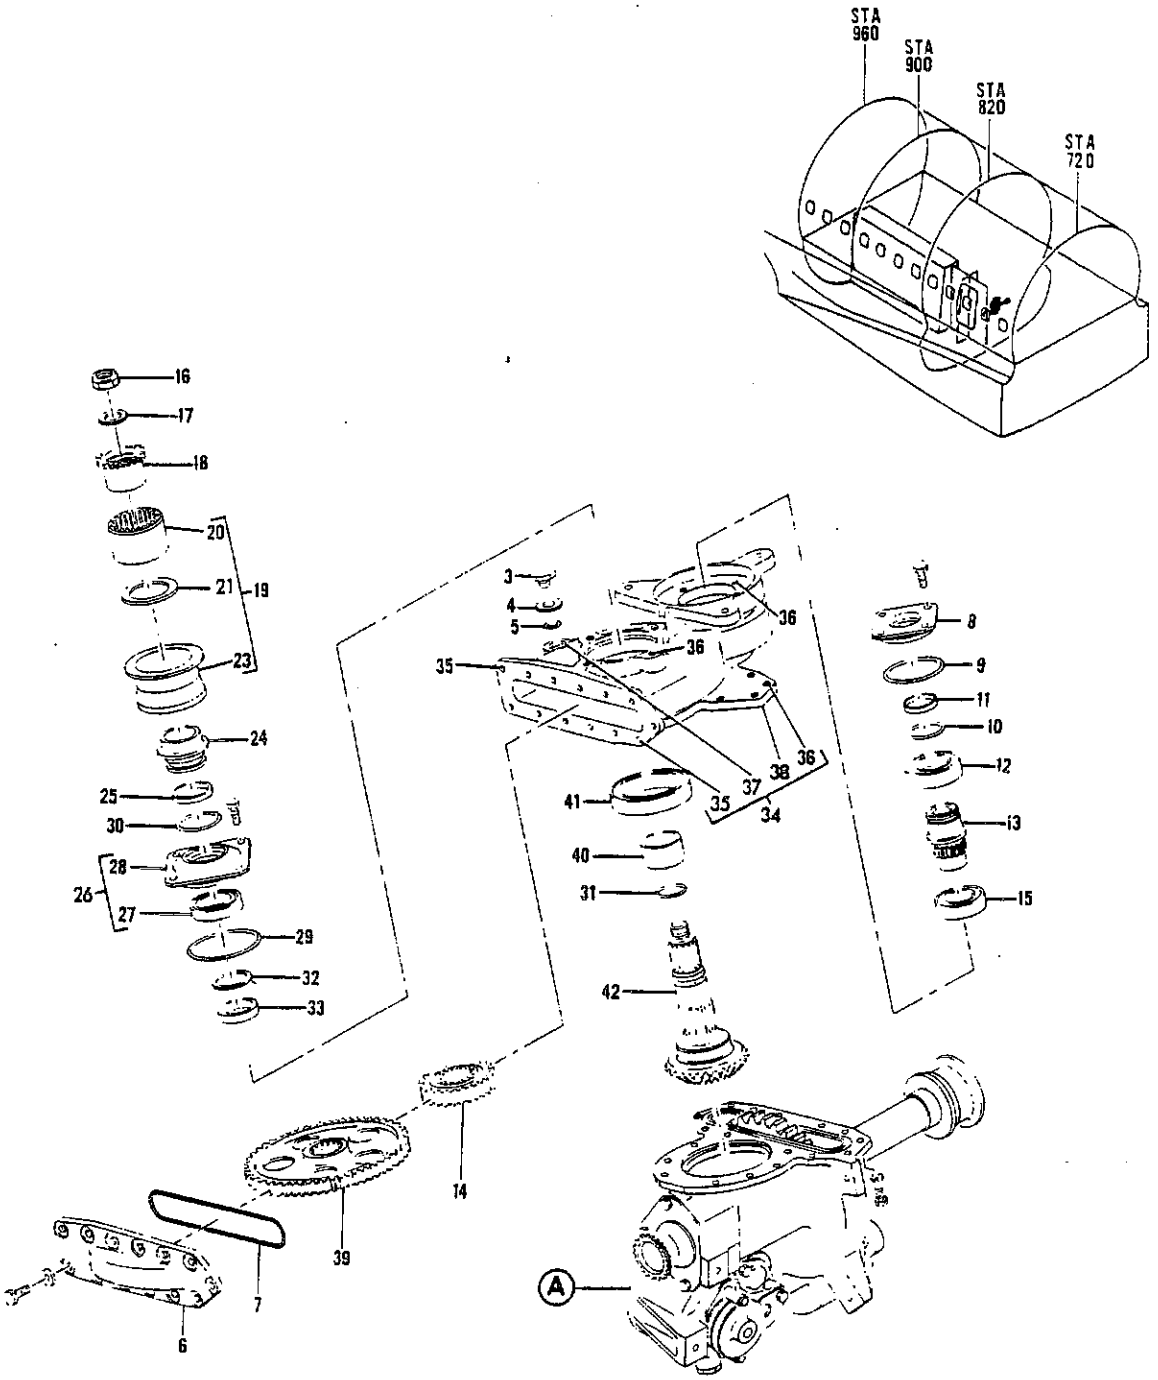


FIGURE 35B. POWER UNIT ASSY, INBOARD AND FILLET FLAP DRIVE (FLIGHT CONTROL ONLY) (SHEET 1)

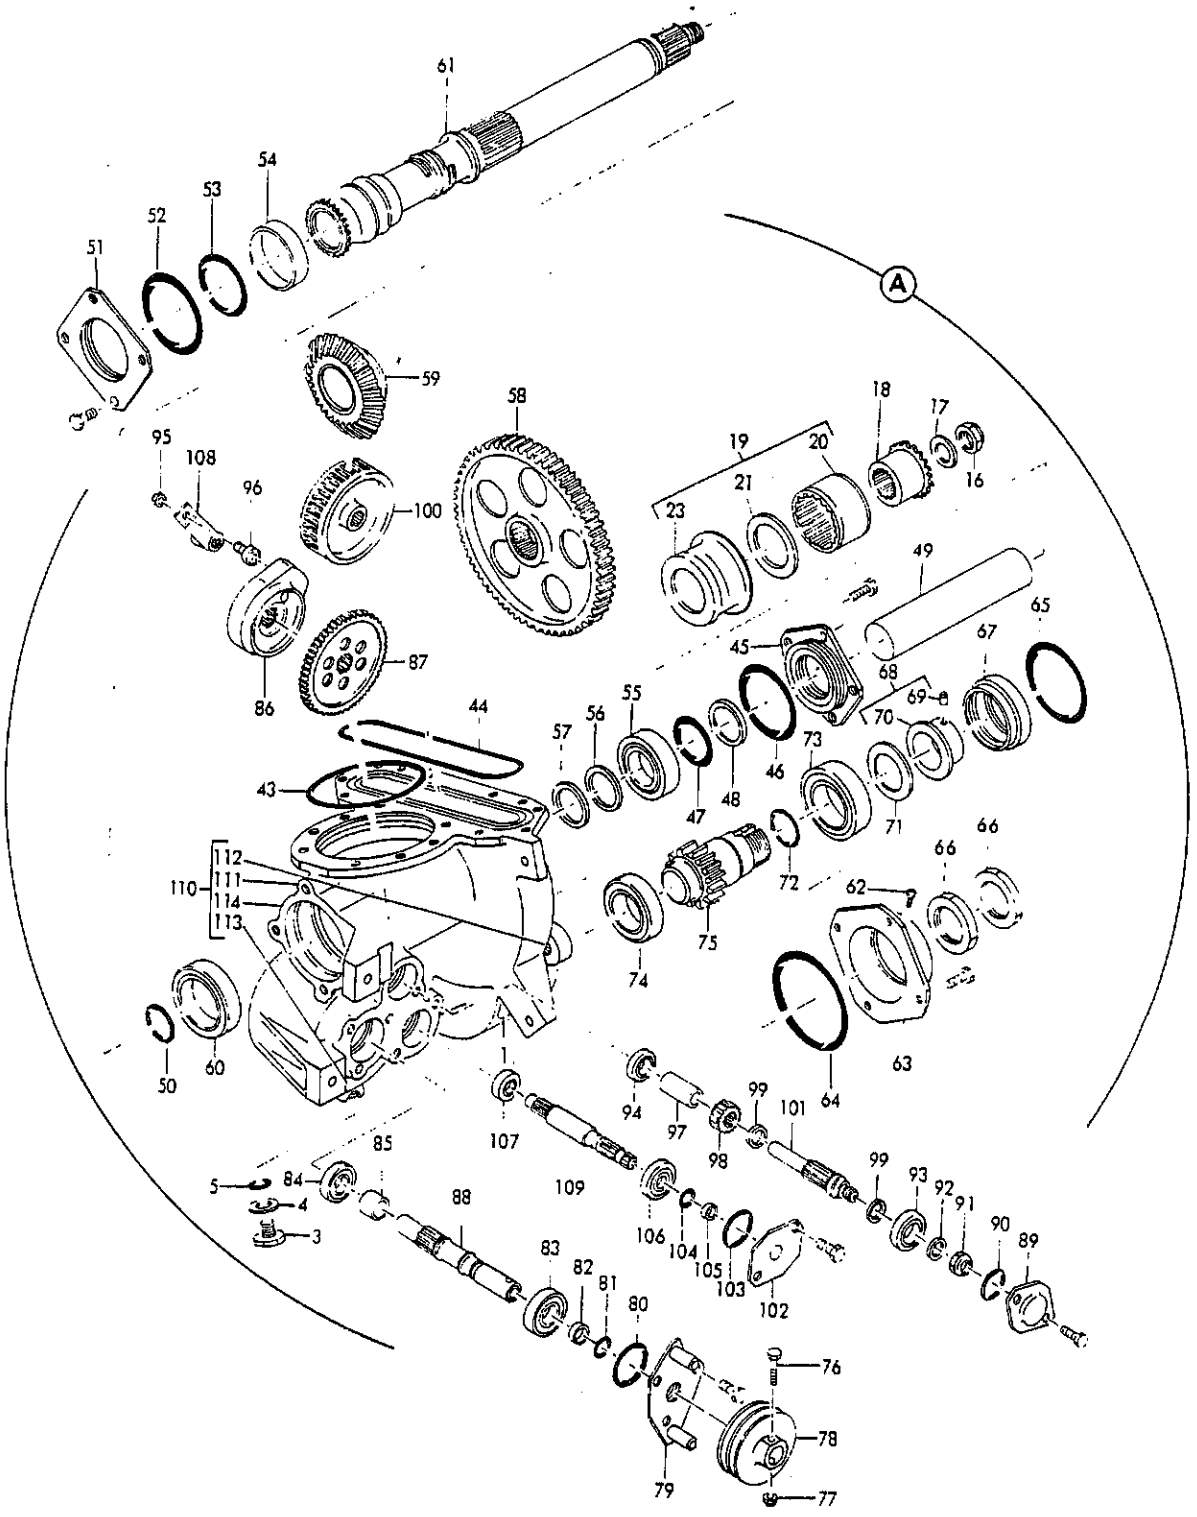


FIGURE 358. POWER UNIT ASSY, INBOARD AND FILLET FLAP DRIVE (FLIGHT CONTROL ONLY) (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R R R R	358	65-20846-4	POWER UNIT ASSY, INBOARD AND FILLET FLAP DRIVE (FLIGHT CONTROL ONLY) (SEE FIG. 35, ITEM 19) (OPTIONAL 65-20846-8)	0150	RF
		65-20846-8	POWER UNIT ASSY, INBOARD AND FILLET FLAP DRIVE (FLIGHT CONTROL ONLY) (SEE FIG. 35, ITEM 19) (OPTIONAL TO 65-20846-4)	0150	RF
		65-20846-10	POWER UNIT ASSY, INBOARD AND FILLET FLAP DRIVE. . . . . (OPTIONAL 65-20846-8)	5199	1
		65-20846-8	POWER UNIT ASSY, INBOARD AND FILLET FLAP DRIVE (FLIGHT CONTROL ONLY) (SEE FIG. 35, ITEM 19) (OPTIONAL TO 65-20846-10)	5199	RF
	3	AN814-4DL	. PLUG.		2
	4	NAS1197-716L	. WASHER.		2
	5	AN622788	. PACKING		2
R R	6	65-19828-3	. COVER, FLAP DRIVE POWER UNIT GEAR (USED ON. . . . . 65-20846-2 AND -4)	0150	1
	6	65-19828-5	. COVER FLAP DRIVE POWER UNIT GEAR (USED ON . . . . . 65-20846-8, -9, -10)		1
			ATTACHING PARTS		
		NAS1303-2H	. BOLT.		13
		NAS1197-10L	. WASHER.		13
			-------*-------		
	7	MS29513-248	. GASKET.		1
	8	69-15904-1	. RETAINER, FLAP DRIVE POWER UNIT EMERGENCY SHAFT . . .		1
			ATTACHING PARTS		
		NAS1303-1H	. BOLT.		4
			-------*-------		
	9	AN6230B4	. GASKET.		1
	10	AN6227B22	. PACKING		1
	11	6-72465-14	. RING, LOW PRESSURE ROTARY SEAL (USED ON 65-20846-2) . (OPTIONAL TO 69-27219-14)		1
	11	69-27219-14	. RING, LOW PRESSURE ROTARY SEAL.		1
	12	BACB10A17	. BEARING		1
	13	69-15765-1	. SHAFT, FLAP DRIVE POWER UNIT EMERGENCY GEAR PINION. .		1
	14	69-15381-1	. GEAR, FLAP DRIVE POWER UNIT PINION.		1
	15	BACB10A90	. BEARING		1
	16	NAS1022A9	. NUT		2
	17	AN960-916	. WASHER.		2
	18	69-14961-1	. COUPLING HALF, FLAP DRIVE SPLINED		2
	19	6-61540-3002	. SLEEVE ASSY, FLAP DRIVE COUPLING. . . . . (OPTIONAL TO 69-33513-1)		2
	20	6-61581-3001	. . SLEEVE, FLAP DRIVE COUPLING SPLINED		1
	21	3-74636	. . WASHER, FLAP DRIVE COUPLING SLEEVE GREASE SEAL. . .		1
	23	6-62623-3001	. . SLEEVE, FLAP DRIVE COUPLING ADAPTER		1
	23	69-33513-1	. SLEEVE, FLAP DRIVE COUPLING		2
	24	69-15950-1	. SPACER, FLAP DRIVE POWER UNIT VERTICAL.		1
	25	69-27219-20	. RING, LOW PRESSURE ROTARY SEAL.		1
	26	69-14969-2	. RETAINER ASSY, FLAP DRIVE ELL GEAR BOX.		1
			ATTACHING PARTS		
		NAS1303-2H	. BOLT.		4
			-------*-------		
	27	BACB10A574	. . BEARING		1
	28	69-14969-4	. . RETAINER, FLAP DRIVE ELL GEAR BOX		1
	29	AN623088	. GASKET.		1
	30	AN6227B25	. PACKING		1
	31	AN6227B18	. PACKING		1
	32	9-61297-4	. SHIM, LAMINATED		AR
	33	69-15947-2	. SPACER, FLAP DRIVE POWER UNIT		1
R R	34	65-19596-4	. HOUSING ASSY, FLAP DRIVE POWER UNIT UPPER (USED ON. . 65-20846-2 AND -4)	0150	1
	34	65-19596-7	. HOUSING ASSY, FLAP DRIVE POWER UNIT UPPER (USED ON. . 65-20846-8, -9)		1
R R	34	65-19596-9	. HOUSING ASSY, FLAP DRIVE POWER UNIT UPPER (USED ON. . 65-20846-10)	5199	1
			ATTACHING PARTS		
		NAS1303-3H	. BOLT.		18
		NAS1197-10L	. WASHER.		18
			-------*-------		
	35	BACS13P3CN2	. . SLEEVE.		13
	36	BACS13P3CN3	. . SLEEVE.		26
	37	BACS13P7CN2	. . SLEEVE.		1
R R	38	65-19596-5	. . HOUSING, FLAP DRIVE POWER UNIT UPPER (USED ON . . . 65-19596-4)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	35B 38	65-19596-8	. . HOUSING, FLAP DRIVE POWER UNIT UPPER (USED ON 65-19596-7)		1
R R	38	65-19596-10	. . HOUSING, FLAP DRIVE POWER UNIT UPPER (USED ON 65-19596-9)	5199	1
	39	69-15366-1	. GEAR, FLAP DRIVE POWER UNIT SPUR.		1
	40	69-15947-1	. SPACER, FLAP DRIVE POWER UNIT		1
	41	BACB10A350	. BEARING		1
	42	65-19640-1	. SHAFT, FLAP DRIVE POWER UNIT BEVEL GEAR		1
	43	AN6230-14	. GASKET.		1
	44	MS29513-248	. GASKET.		1
	45	69-15886-1	. RETAINER, FLAP DRIVE POWER UNIT		1
			ATTACHING PARTS		
		NAS1303-2H	. BOLT.		5
			-------*-------		
	46	AN623084	. GASKET.		1
	47	AN6227825	. PACKING		1
	48	69-27219-20	. RING, LOW PRESSURE ROTARY SEAL.		1
	49	69-15929-1	. SPACER, FLAP DRIVE POWER UNIT MAIN SHAFT.		1
	50	AN6227B18	. PACKING		1
	51	69-15903-1	. RETAINER, FLAP DRIVE POWER UNIT MAIN SHAFT.		1
			ATTACHING PARTS		
		NAS1303-1H	. BOLT.		4
			-------*-------		
	52	AN623086	. GASKET.		1
	53	AN623082	. GASKET.		1
	54	69-27219-27	. RING, LOW PRESSURE ROTARY SEAL.		1
	55	BACB10A17	. BEARING		1
	56	9-61297-4	. SHIM, LAMINATED		1
	57	69-15947-4	. SPACER, FLAP DRIVE POWER UNIT		1
	58	69-15366-2	. GEAR, FLAP DRIVE POWER UNIT SPUR.		1
	59	69-15411-1	. GEAR, FLAP DRIVE POWER UNIT BEVEL		1
	60	BACB10A348	. BEARING		1
	61	65-19865-1	. SHAFT, FLAP DRIVE POWER UNIT.		1
	62	AN500A8-5	. SCREW		1
	63	69-16306-1	. RETAINER, FLAP DRIVE POWER UNIT SEAL.		1
			ATTACHING PARTS		
		NAS1303-1H	. BOLT.		4
			-------*-------		
	64	AN6230B10	. GASKET.		1
	65	MS28775-139	. PACKING		1
	66	66-13350-1	. NUT, FLAP DRIVE POWER UNIT PINION SHAFT CHECK		2
	67	ABA4710	. SEAL ASSY, ROTARY (V71687).		1
	68	69-16322-4	. SPACER ASSY, FLAP DRIVE POWER UNIT (USED ON 65-20846-2, -3, -8, -9, -10)		1
R	69	69-16322-3	. . PIN, FLAP DRIVE POWER UNIT SPACER	0150	1
R R	70	69-16322-5	. . SPACER, FLAP DRIVE POWER UNIT (USED ON 69-16322-4)	0150	1
R	71	69-23164-1	. SHIM, LAMINATED (USED ON 65-20846-2, -3, -8, -9, -10)	0150	1
	72	AN6227B20	. PACKING		1
	73	BACB10A19	. BEARING		1
	74	BACB10A17	. BEARING		1
	75	69-15382-1	. SHAFT, FLAP DRIVE POWER UNIT PINION		1
	76	NAS1103-13W	. BOLT.		1
	77	NAS679A3W	. NUT		1
	78	9-62458-2000	. SHEAVE, FLAP DRIVE POWER UNIT		1
	79	69-15897-1	. RETAINER ASSY, FLAP DRIVE POWER UNIT PULLEY SHAFT		1
			ATTACHING PARTS		
		NAS1303-1H	. BOLT.		3
			-------*-------		
	80	AN6227B21	. PACKING		1
	81	AN6227B12	. PACKING		1
	82	69-27219-18	. RING, LOW PRESSURE ROTARY SEAL.		1
	83	BACB10A367	. BEARING		1
	84	BACB10A2	. BEARING		1
	85	69-15947-3	. SPACER, FLAP DRIVE POWER UNIT		1
	86	65-21911-1	. CAM, FLAP DRIVE POWER UNIT VALVE OPERATING.		1
	87	69-15718-1	. GEAR, FLAP DRIVE POWER UNIT SPUR.		1
	88	69-15706-1	. SHAFT, PULLEY		1
	89	69-15909-1	. RETAINER, FLAP DRIVE POWER UNIT		1
			ATTACHING PARTS		
		NAS1303-1H	. BOLT.		2
			-------*-------		
	90	AN6227B17	. PACKING		1
	91	NAS679A6	. NUT		1
	92	AN960-616L	. WASHER.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	358 93	BACB10A2	. BEARING		1
	94	BACB10A376	. BEARING		1
	95	AN320-3	. NUT		1
	96	RS1U2	. BEARING, CAM FOLLOWER (V60380)		1
	97	69-15947-5	. SPACER, FLAP DRIVE POWER UNIT		1
	98	69-15729-1	. GEAR, FLAP DRIVE POWER UNIT PINION		1
R	99	69-23164-2	. SHIM, LAMINATED (USED ON 65-20846-2, -3 AND -4)	0150	AR
	100	69-15705-1	. GEAR, FLAP DRIVE POWER UNIT WORM		1
	101	69-15785-2	. SHAFT, FLAP DRIVE POWER UNIT WORM GEAR (USED ON 65-20846-2, -3, -4, -8, -10)		1
	102	69-15912-1	. RETAINER, FLAP DRIVE POWER UNIT VALVE SHAFT		1
			ATTACHING PARTS		
		NAS1303-1H	. BOLT		2
			-------*-------		
	103	AN6227B17	. PACKING		1
	104	AN6227B10	. PACKING		1
	106	BACB10A2	. BEARING		1
	107	BACB10A376	. BEARING		1
	108	69-16300-2	. FOLLOWER, FLAP DRIVE POWER UNIT CAM (OPTIONAL 69-16300-1)		1
	108	69-16300-1	. FOLLOWER, FLAP DRIVE POWER UNIT CAM (OPTIONAL TO 69-16300-2)		1
	109	69-15820-2	. SHAFT, FLAP DRIVE POWER UNIT VALVE CONTROL (USED ON 65-20846-2, -3, -4, -8, -9, -10)		1
R R	110	65-20990-4	. HOUSING ASSY, FLAP DRIVE POWER UNIT LOWER (USED ON 65-20846-2 AND -4)	0150	1
	110	65-20990-7	. HOUSING ASSY, FLAP DRIVE POWER UNIT LOWER (USED ON 65-20846-8) (OPTIONAL 65-20990-9)		1
	110	65-20990-9	. HOUSING ASSY, FLAP DRIVE POWER UNIT LOWER (USED ON 65-20846-8) (OPTIONAL TO 65-20990-7)		1
	111	BACS13P3CN3	. . SLEEVE		20
	112	BACS13P6CN2	. . SLEEVE		6
	113	BACS13P7CN2	. . SLEEVE		1
R R	114	65-20990-5	. . HOUSING, FLAP DRIVE POWER UNIT LOWER (USED ON 65-20990-4)	0150	1
	114	65-20990-8	. . HOUSING, FLAP DRIVE POWER UNIT LOWER (USED ON 65-20990-7)		1
			. FOR REFERENCE TO OTHER POWER UNIT DETAILS, SEE NHA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

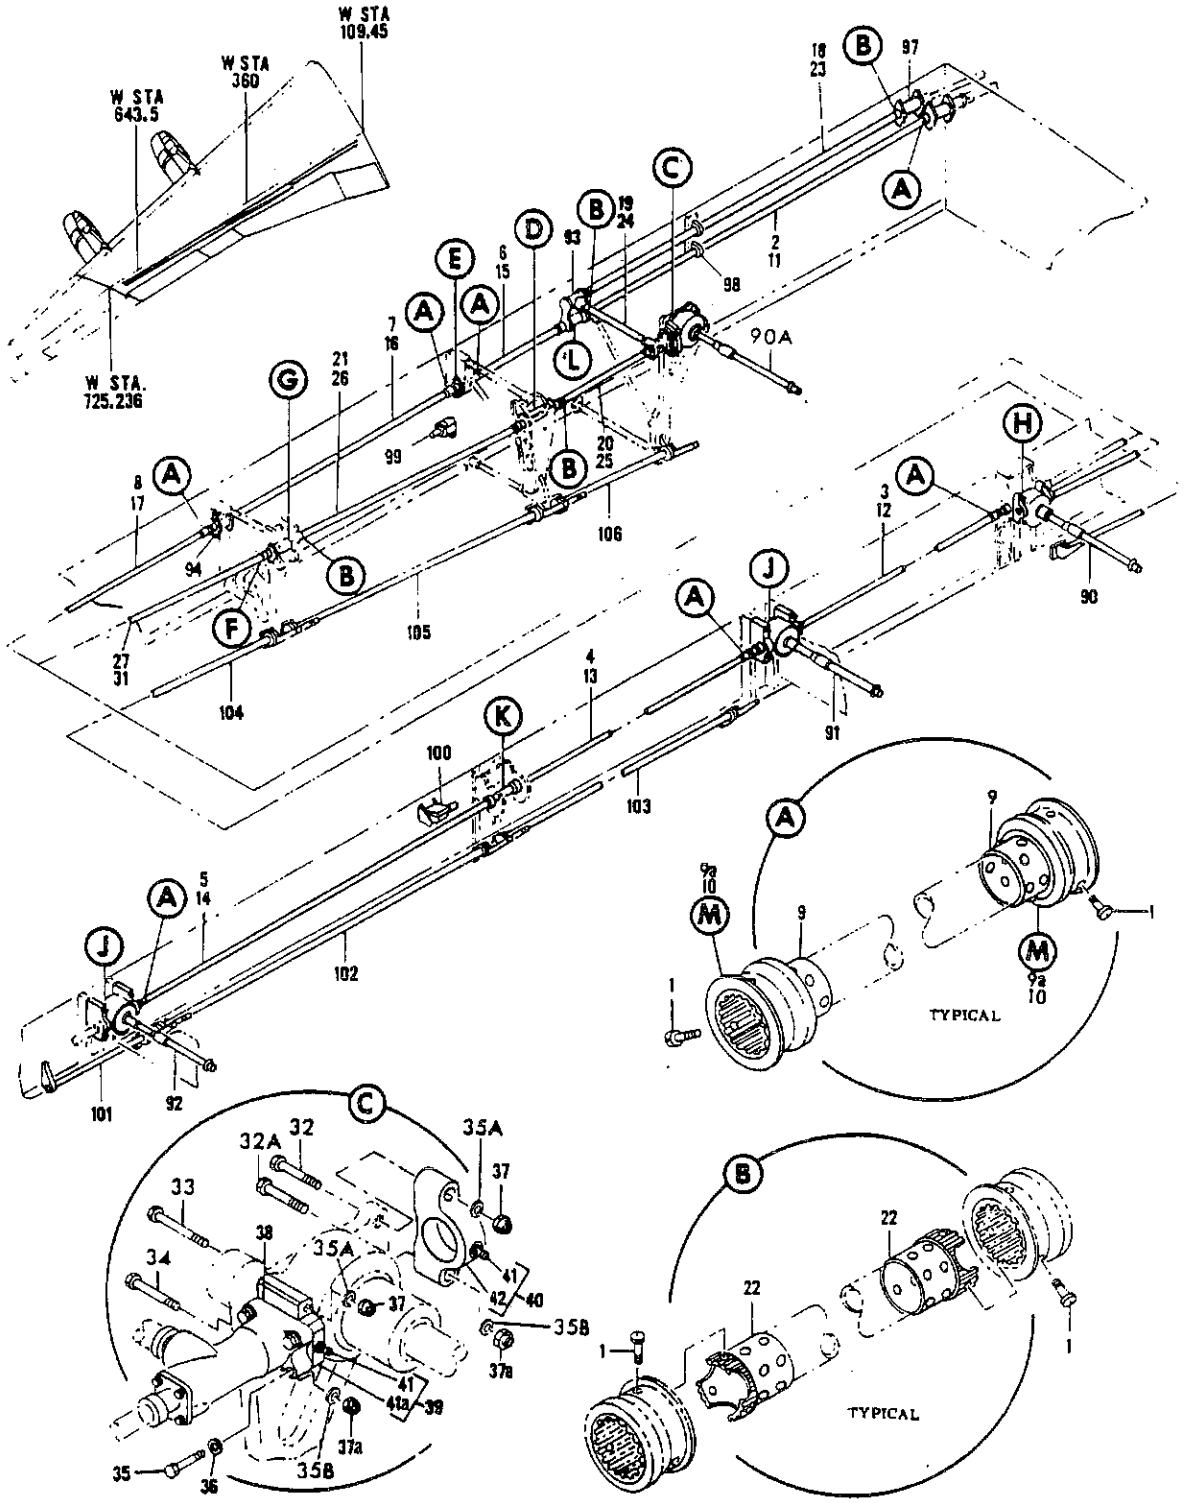


FIGURE 37. DRIVE INSTL, SECTION 26 FLAP (FLIGHT CONTROL ONLY) (SHEET 1)

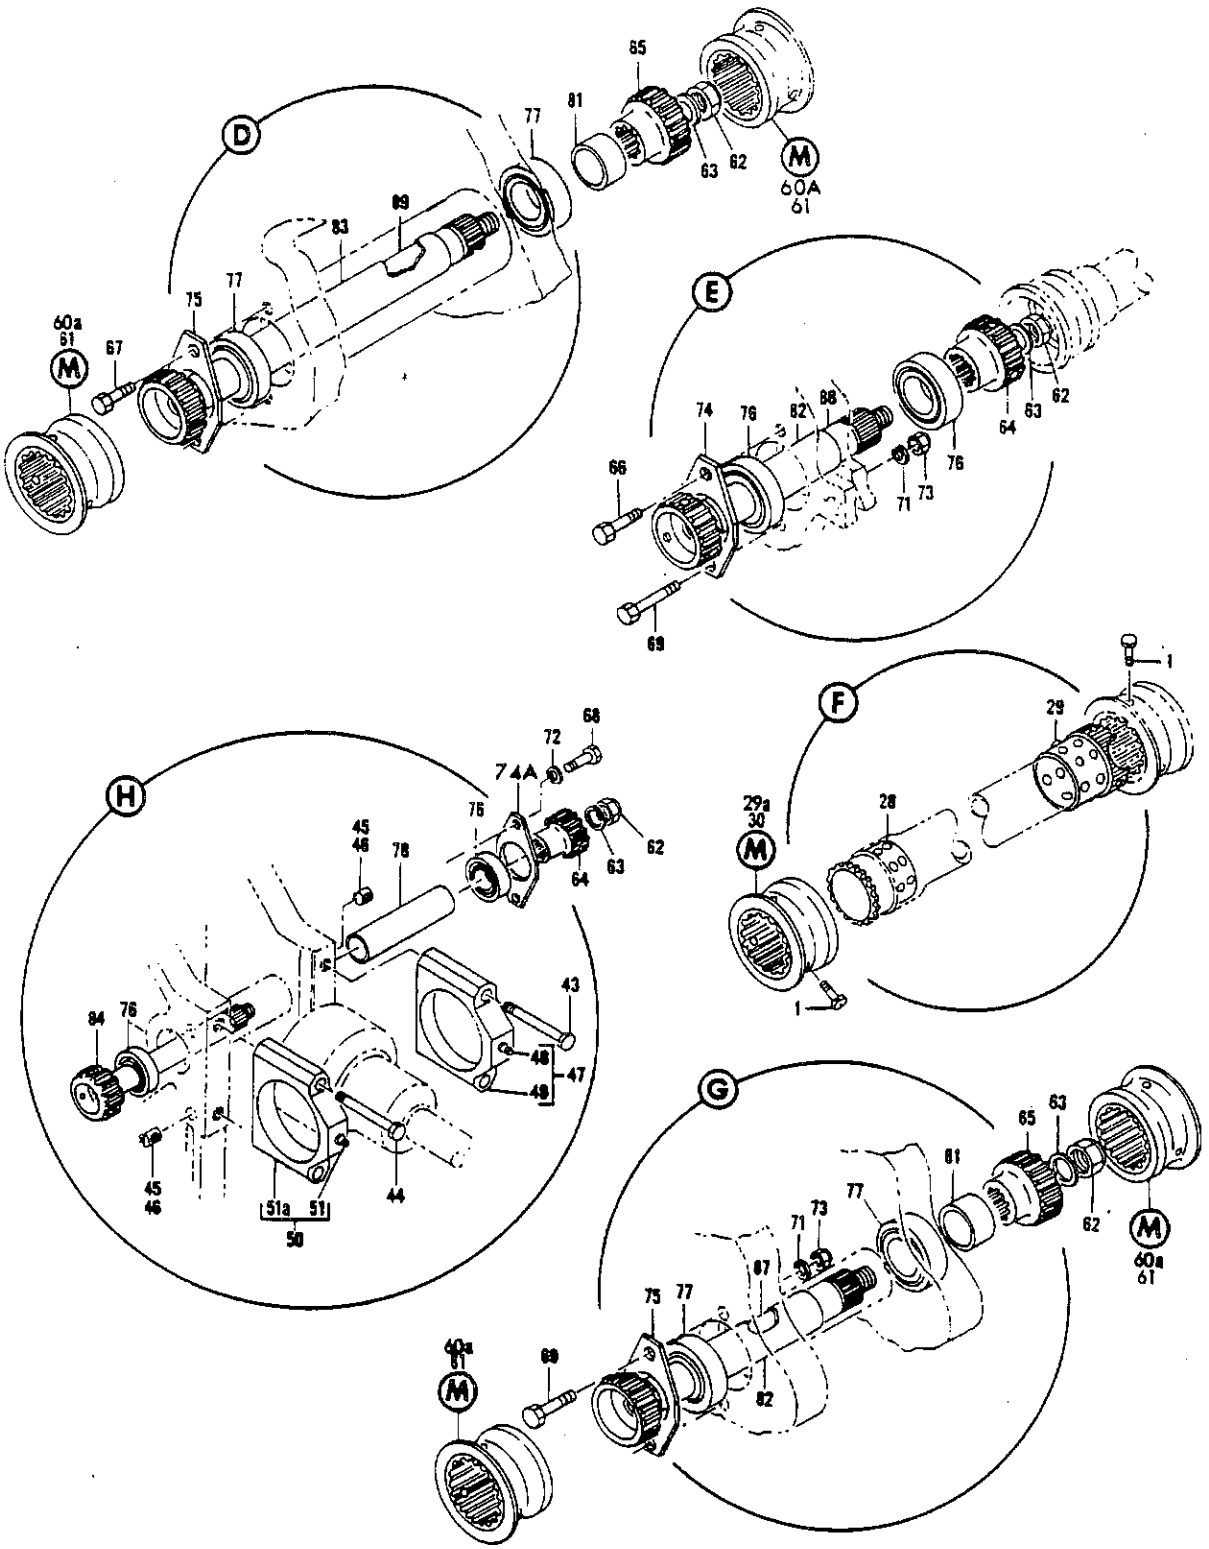


FIGURE 37. DRIVE INSTL, SECTION 26 FLAP (FLIGHT CONTROL ONLY) (SHEET 2)

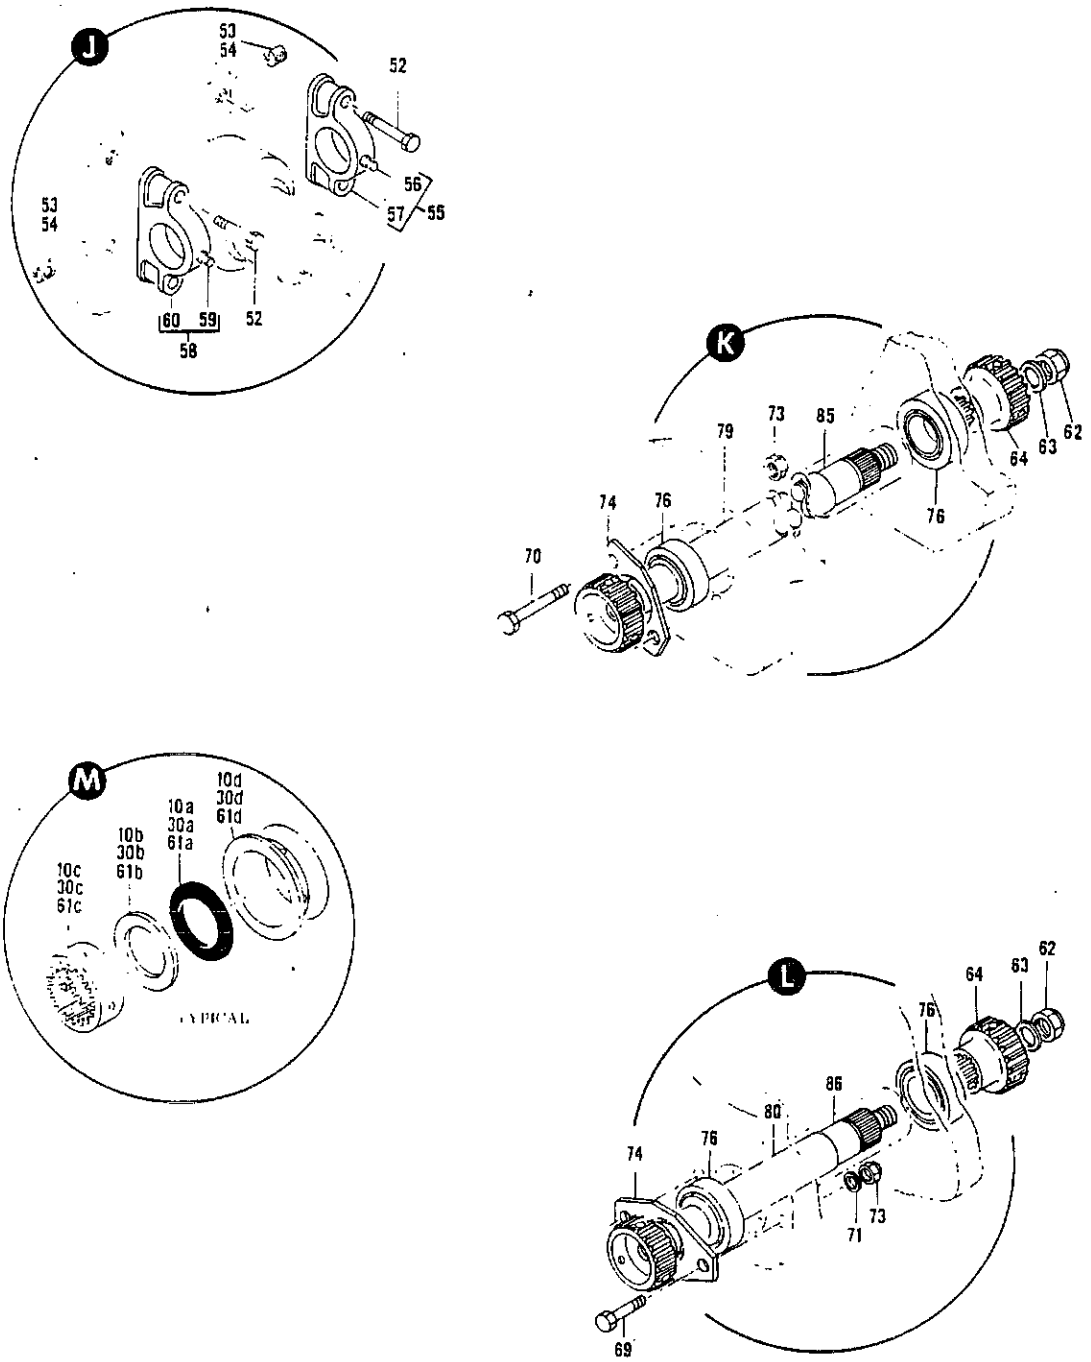


FIGURE 37 DRIVE INSTL, SECTION 26 FLAP (FLIGHT CONTROL ONLY) (SHEET 3)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	37	50-8708-326	DRIVE INSTL, SECTION 26 FLAP LH (FLIGHT CONTROL ONLY) . (SEE 57-3, FIG. 1, ITEM 15)		RF
		50-8708-426	DRIVE INSTL, SECTION 26 FLAP RH (FLIGHT CONTROL ONLY) . (SEE 57-3, FIG. 1, ITEM 15)		RF
R	1	AN502-10-8	. SCREW	0150	78
R	1	66-25875-1	. SCREW	5199	78
	2	69-5313-14	. SHAFT ASSY, DRIVE		1
	3	69-5313-15	. SHAFT ASSY, DRIVE		1
	4	65-59877-5	. SHAFT ASSY, DRIVE		1
	5	65-59877-6	. SHAFT ASSY, DRIVE		1
	6	65-59877-24	. SHAFT ASSY, DRIVE		1
	7	65-59877-25	. SHAFT ASSY, DRIVE		1
	8	65-59877-32	. SHAFT ASSY, DRIVE		1
	9	6-61583	. . COUPLING, FLAP DRIVE SPLINE . . . . . ATTACHING PARTS		2
		BACR15CE6D	. . RIVET . . . . . -------*-------		24
	9A	69-33513-1	. . SLEEVE, DRIVE COUPLING.		2
	11	69-5313-6	. . TUBE, FLAP DRIVE SHAFT (USED ON 69-5313-2 AND . . . 69-5313-14)		1
	12	69-5313-7	. . TUBE, FLAP DRIVE SHAFT (USED ON 69-5313-3 AND . . . 69-5313-15)		1
	13	90-2425-3016	. . TUBE, FLAP DRIVE SHAFT (USED ON 90-2425-3013 AND. . 65-59877-5)		1
	14	90-2425-2007	. . TUBE, FLAP DRIVE SHAFT (USED ON 90-2425-3004 AND. . 65-59877-6)		1
	15	9-67039-3047	. . TUBE, FLAP DRIVE SHAFT (USED ON 9-67039-3049 AND. . 65-59877-24)		1
	16	9-67039-3048	. . TUBE, FLAP DRIVE SHAFT (USED ON 9-67039-3050 AND. . 65-59877-25)		1
	17	9-67039-3040	. . TUBE, FLAP DRIVE SHAFT (USED ON 9-67039-3039 AND. . 65-59877-32)		1
	18	69-15846-4	. SHAFT ASSY, FLAP DRIVE.		1
	19	69-15846-5	. SHAFT ASSY, FLAP DRIVE.		1
	20	69-15846-6	. SHAFT ASSY, FLAP DRIVE.		1
	21	69-15846-7	. SHAFT ASSY, FLAP DRIVE.		1
	22	69-15857-1	. . COUPLING, FLAP DRIVE SPLINED HALF . . . . . ATTACHING PARTS		2
		MS20470D6	. . RIVET . . . . . -------*-------		24
	23	69-15846-11	. . TUBE, FLAP DRIVE SHAFT (USED ON 69-15846-4)		1
	24	69-15846-12	. . TUBE, FLAP DRIVE SHAFT (USED ON 69-15846-5)		1
	25	69-15846-13	. . TUBE, FLAP DRIVE SHAFT (USED ON 69-15846-6)		1
	26	69-15846-14	. . TUBE, FLAP DRIVE SHAFT (USED ON 69-15846-7)		1
	27	69-15949-3	. SHAFT ASSY, FLAP DRIVE.		1
	28	69-15948-1	. . COUPLING, FLAP DRIVE SPLINE		1
	29	69-15857-1	. . COUPLING, FLAP DRIVE SPLINE HALF. . . . . ATTACHING PARTS		1
		MS20470D6	. . RIVET . . . . . -------*-------		24
	29A	69-33513-1	. . SLEEVE, COUPLING. . . . . (OPTIONAL TO 6-61540-3002)		1
	30	6-61540-3002	. . SLEEVE ASSY, COUPLING . . . . . (OPTIONAL 69-33513-1)		1
	30B	3-74636	. . . WASHER, FLAP DRIVE COUPLING GREASE SEAL		1
	30C	6-61581-3001	. . . SLEEVE, FLAP DRIVE COUPLING SPLINED		1
	30D	6-62623-3001	. . . SLEEVE, FLAP DRIVE COUPLING ADAPTER		1
	31	69-15949-4	. . TUBE, FLAP DRIVE SHAFT.		1
R	32	BACB30NE6-37	. BOLT.	5199	1
R	32	NAS1306-35	. BOLT.	0150	1
R	32A	BACB30NE7-35	. BOLT.	5199	1
R	32A	NAS1307-33	. BOLT.	0150	1
R	33	BACB30NE6-77	. BOLT.	5199	1
R	33	NAS1306-75	. BOLT.	0150	1
R	34	BACB30NE7-69	. BOLT.	5199	1
R	34	NAS1307-67	. BOLT.	0150	1
	35	NAS1304-7H	. BOLT.		4
R	35A	AN960-616L	. WASHER.	5199	2
R	35B	AN960-716L	. WASHER.	5199	2
	36	NAS1197-416L	. WASHER.		4
	37	NAS679A6	. NUT		2
	37A	NAS679A7	. NUT		2
R	38	65-20852-2	. GEAR BOX ASSY, INBOARD FLAP DRIVE TEE	0150	1
R	38	65-20852-3	. GEAR BOX ASSY, INBOARD TEE.	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	37		. . FLIGHT CONTROL, (SEE FIG. 37D).		
			. . *REQUIRED PLACARDS, (SEE 11-3, FIG. 8)*		
	39	69-15400-1	. SUPPORT ASSY, TRANSMISSION TEE BOX INBOARD FLAP DRIVE TRUNNION		1
	40	69-21228-1	. SUPPORT ASSY, TRANSMISSION TEE BOX INBOARD FLAP DRIVE TRUNNION		1
	41	MS15001-1	. . FITTING		1
	41A	69-15400-2	. . SUPPORT, TRANSMISSION TEE BOX INBOARD FLAP DRIVE. . TRUNNION (USED ON 69-15400-1)		1
	42	69-21228-2	. . SUPPORT, TRANSMISSION TEE BOX INBOARD FLAP DRIVE. . TRUNNION (USED ON 69-21228-1)		1
	43	BACB30NE5-56	. BOLT.		2
	44	BACB30NE5-53	. BOLT.		2
	45	BACN10CP5L	. NUT		4
	46	BACR10V5	. RETAINER.		4
	47	69-15401-3	. SUPPORT ASSY, INBOARD FLAP DRIVE INBOARD TRANSMISSION TRUNNION		1
	48	MS15001-3	. . FITTING		1
	49	69-15401-2	. . SUPPORT, INBOARD FLAP DRIVE INBOARD TRANSMISSION. . TRUNNION		1
	50	69-15402-1	. SUPPORT ASSY, INBOARD FLAP DRIVE OUTBOARD . . . . . TRANSMISSION TRUNNION		1
	51	MS15001-1	. . FITTING		1
	51A	69-15402-2	. . SUPPORT, INBOARD FLAP DRIVE OUTBOARD TRANSMISSION . *TRUNNION*		1
	52	BACB30NE4-5	. BOLT.		8
	53	BACN10CP4L	. NUT		8
	54	BACR10V4	. RETAINER.		8
	55	9-60309-2	. SUPPORT ASSY, FLAP SCREW TRUNNION		2
	56	MS15001-3	. . FITTING		1
	57	9-60309-4	. . SUPPORT, FLAP SCREW TRUNNION.		1
	58	9-60309-1	. SUPPORT ASSY, FLAP SCREW TRUNNION		2
	59	MS15001-1	. . FITTING		1
	60	9-60309-3	. . SUPPORT, FLAP SCREW TRUNNION.		1
	60A	69-33513-1	. SLEEVE, DRIVE COUPLING. . . . . (OPTIONAL 6-61540-3002)		4
	61	6-61540-3002	. SLEEVE ASSY, DRIVE COUPLING . . . . . (OPTIONAL TO 69-33513-1)		4
	61B	3-74636	. . WASHER, FLAP DRIVE COUPLING GREASE SEAL		1
	61C	6-61581-3001	. . SLEEVE, FLAP DRIVE COUPLING SPLINED		1
	61D	6-62623-3001	. . SLEEVE, FLAP DRIVE COUPLING ADAPTER		1
	62	NAS1022A9	. NUT		6
	63	AN960-916	. WASHER.		6
R	64	69-4083	. COUPLING, FLAP DRIVE SPLINED HALF	0150	4
R			(OPTIONAL TO 69-46619-1)		
R	64	69-46619-1	. COUPLING, FLAP DRIVE SPLINED HALF	0150	4
R			(OPTIONAL 69-4083)		
R	64	69-4083	. COUPLING, FLAP DRIVE SPLINED HALF (OPTIONAL TO. . .	5199	4
R			69-46619-1) (DELETED BY SL-27-12)		
R	64	69-46619-1	. COUPLING, FLAP DRIVE SPLINED HALF (OPTIONAL 69-4083)	5199	4
R			(DELETED BY SL-27-12)		
R	64	69-46619-1	. COUPLING, FLAP DRIVE SPLINED HALF (ADDED BY SL-27-12)	5199	4
	65	69-14961-1	. COUPLING, FLAP DRIVE SPLINED HALF		2
R	66	AN4-3A	. BOLT.	0150	1
R	66	BACB30NE4H2	. BOLT.	5199	1
	67	AN4H3A	. BOLT.		2
	68	NAS1304-1	. BOLT.		2
	69	AN4-11A	. BOLT.		5
	70	AN4-15A	. BOLT.		2
	71	AN960D416	. WASHER.		5
	72	AN960D416L	. WASHER.		2
	73	NAS679A4W	. NUT		7
	74	3-74623-2000	. *RETAINER, FLAP DRIVE BEARING.*		3
R	74A	3-74623-2000	. RETAINER, FLAP DRIVE BEARING.	0150	1
R	74A	66-12927-1	. RETAINER, FLAP DRIVE BEARING.	5199	1
	75	66-12927-1	. RETAINER, FLAP DRIVE BEARING.		2
	76	BAC810A117H	. BEARING		8
	77	BAC810A521CH	. BEARING		4
	78	NAS43DD16-439	. SPACER.		1
	79	NAS43DD16-506	. SPACER.		1
	80	NAS43DD16-206	. SPACER.		1
	81	NAS43DD16-34	. SPACER.		2
	82	NAS43DD16-154	. SPACER.		2
	83	NAS43DD16-524	. SPACER.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	37 84	90-1520-3003	. SHAFT, FLAP DRIVE TORQUE.		1
	85	90-1520	. SHAFT, FLAP DRIVE TORQUE.		1
	86	90-1520-3002	. SHAFT, FLAP DRIVE TORQUE.		1
	87	69-15843-2	. SHAFT, FLAP DRIVE TORQUE.		1
	88	90-1520-3000	. SHAFT, FLAP DRIVE TORQUE.		1
	89	69-15843-1	. SHAFT, FLAP DRIVE TORQUE.		1
	90	65-20679-6	. TRANSMISSION ASSY, FLAP DRIVE BALL SCREW. (FOR REPLACEMENT ORDER 65-20679-10)	0102	1
	90	65-20679-7	. TRANSMISSION ASSY, BALL SCREW (OPTIONAL 65-20679-6 AND FOR REPLACEMENT ORDER 65-20679-10).	0303	1
	90	65-20679-6	. TRANSMISSION ASSY, BALL SCREW (OPTIONAL TO 65-20679-7 AND FOR REPLACEMENT ORDER 65-20679-10)	0303	1
R R	90	65-20679-7	. TRANSMISSION ASSY, FLAP DRIVE BALL SCREW. (FOR REPLACEMENT ORDER 65-20679-10)	0450	1
R R R	90	65-20679-8	. TRANSMISSION ASSY, FLAP DRIVE BALL SCREW. (OPTIONAL TO 65-20679-10)	5199	1
R R R	90	65-20679-10	. TRANSMISSION ASSY, BALL SCREW (OPTIONAL 65-20679-8)	5199	1
			. . FLIGHT CONTROL, (SEE FIG. 37B).		
			. . REQUIRED PLACARDS, (SEE 11-3, FIG. 8)		
	90A	65-20679-6	. TRANSMISSION ASSY, BALL SCREW (FOR REPLACEMENT ORDER 65-20679-10)	0102	1
	90A	65-20679-7	. TRANSMISSION ASSY, BALL SCREW (OPTIONAL 65-20679-6 AND FOR REPLACEMENT ORDER 65-20679-10)	0303	1
	90A	65-20679-6	. TRANSMISSION ASSY, BALL SCREW (OPTIONAL TO 65-20679-7) (FOR REPLACEMENT ORDER 65-20679-10)	0303	1
R R	90A	65-20679-7	. TRANSMISSION ASSY, BALL SCREW (FOR REPLACEMENT ORDER 65-20679-10)	0450	1
R R R R	90A	65-20679-8	. TRANSMISSION ASSY, BALL SCREW (OPTIONAL TO 65-20679-10 AND FOR REPLACEMENT ORDER 65-20679-14)	5299	1
R R R R	90A	65-20679-10	. TRANSMISSION ASSY, BALL SCREW (OPTIONAL 65-20679-8 AND FOR REPLACEMENT ORDER 65-20679-14)	5299	1
R R	90A	65-20679-14	. TRANSMISSION ASSY, BALL SCREW (OPTIONAL TO AND REPLACEMENT FOR 65-206[illegible]-8, -10)	5299	1
			. . FLIGHT CONTROL, (SEE FIG. 37B).		
			. . REQUIRED PLACARDS, (SEE 11-3, FIG. 8)		
	91	5-84049-3028	. TRANSMISSION ASSY, FLAP DRIVE BALL SCREW.	0102	1
	91	5-84049-3032	. TRANSMISSION ASSY, FLAP DRIVE BALL SCREW. (OPTIONAL 5-84049-3028)	0303	1
	91	5-84049-3028	. TRANSMISSION ASSY, FLAP DRIVE BALL SCREW. (OPTIONAL TO 5-84049-3032)	0303	1
R	91	5-84049-3032	. TRANSMISSION ASSY, FLAP DRIVE BALL SCREW.	0450	1
R R R	91	5-84049-3038	. TRANSMISSION ASSY, BALL SCREW (OPTIONAL TO 5-84049-3045)	5151	1
R R R	91	5-84049-3045	. TRANSMISSION ASSY, BALL SCREW (OPTIONAL 5-84049-3038)	5151	1
R	91	5-84049-3045	. TRANSMISSION ASSY, BALL SCREW	5299	1
	92	5-84049-3030	. TRANSMISSION ASSY, FLAP DRIVE BALL SCREW.	0102	1
	92	5-84049-3034	. TRANSMISSION ASSY, FLAP DRIVE BALL SCREW. (OPTIONAL 5-84049-3030)	0303	1
	92	5-84049-3030	. TRANSMISSION ASSY, FLAP DRIVE BALL SCREW. (OPTIONAL TO 5-84049-3034)	0303	1
R	92	5-84049-3034	. TRANSMISSION ASSY, FLAP DRIVE BALL SCREW.	0450	1
R R R	92	5-84049-3040	. TRANSMISSION ASSY, BALL SCREW (OPTIONAL TO 5-84049-3046)	5151	1
R R R	92	5-84049-3046	. TRANSMISSION ASSY, BALL SCREW (OPTIONAL 5-84049-3040)	5151	1
R	92	5-84049-3046	. TRANSMISSION ASSY, BALL SCREW	5299	1
			. . FLIGHT CONTROL, (SEE FIG. 56)		
			. . REQUIRED PLACARDS, (SEE 11-3, FIG. 8)		
R	93	65-20848-5	. GEAR BOX ASSY, INBOARD DRIVE ELL (LH ONLY).	0150	1
R R	93	65-20848-7	. GEAR BOX ASSY, INBOARD ELL (LH ONLY).	5199	1
R R	93	65-20848-6	. GEAR BOX ASSY, INBOARD FLAP DRIVE ELL (RH ONLY)	0150	1
R	93	65-20848-8	. GEAR BOX ASSY, INBOARD ELL (RH ONLY).	5199	1
			ATTACHING PARTS		
		AN4-27A	. BOLT.		3
		AN960D416	. WASHER.		3
		NAS679A4W	. NUT		3
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	37		. . FLIGHT CONTROL, (SEE FIG. 37E).		
			. . REQUIRED PLACARDS, (SEE 11-3, FIG. 8)		
R	94	65-7485-1	. GEAR BOX ASSY, OUTBOARD FLAP DRIVE ANGLE.	0150	1
R	94	65-7485-1	. GEAR BOX ASSY, OUTBOARD FLAP DRIVE ANGLE.	5199	1
R			(OPTIONAL TO 65-7485-3)		
R	94	65-7485-3	. GEAR BOX ASSY, OUTBOARD FLAP DRIVE ANGLE.	5199	1
R			(OPTIONAL 65-7485-1)		
			ATTACHING PARTS		
		AN4-12A	. BOLT.		4
		BACW10T416	. WASHER.		4
		NAS679A4W	. NUT		4
			-------*-------		
			. . FLIGHT CONTROL, (SEE FIG. 37A).		
			. . REQUIRED PLACARDS, (SEE 11-3, FIG. 8)		
	97	65-20842-1	. GEAR BOX INSTL, WING STATION 122 FLAP DRIVE ANGLE (LH ONLY) (SEE FIG. 39)		1
	97	65-20842-2	. GEAR BOX INSTL, WING STATION 122 FLAP DRIVE ANGLE (RH ONLY) (SEE FIG. 39)		1
	98	65-8774-1	. GUARD INSTL, FLAP DRIVE TORQUE TUBE (LH ONLY) (SEE. . FIG. 40)		1
	98	65-8774-2	. GUARD INSTL, FLAP DRIVE TORQUE TUBE (RH ONLY) (SEE. . FIG. 40)		1
	99	65-22802-1	. TRANSMITTER INSTL, TRAILING EDGE STATION 166.14 FLAP POSITION (LH ONLY) (SEE FIG. 41)		1
	99	65-22802-2	. TRANSMITTER INSTL, TRAILING EDGE STATION 166.14 FLAP POSITION (RH ONLY) (SEE FIG. 41)		1
	100	5-87819-3013	. TRANSMITTER INSTL, OUTBOARD FLAP POSITION LH (LH. . . ONLY) (SEE FIG. 43)		1
	100	5-87819-3014	. TRANSMITTER INSTL, OUTBOARD FLAP POSITION RH (RH. . . ONLY) (SEE FIG. 43)		1
	101	65-18940-5	. ACTUATION INSTL, OUTBOARD COVE LIP DOOR (LH ONLY) . .		1
	101	65-18940-6	. ACTUATION INSTL, OUTBOARD COVE LIP DOOR (RH ONLY) . .		1
			. . FLIGHT CONTROL, (SEE FIG. 51)		
			. . REQUIRED PLACARDS, (SEE 11-3, FIG. 75).		
	102	65-18940-3	. ACTUATION INSTL, OUTBOARD COVE LIP DOOR (LH ONLY) . .		1
	102	65-18940-4	. ACTUATION INSTL, OUTBOARD COVE LIP DOOR (RH ONLY) . .		1
			. . FLIGHT CONTROL, (SEE FIG. 52)		
			. . REQUIRED PLACARDS, (SEE 11-3, FIG. 75).		
	103	65-18940-1	. ACTUATION INSTL, OUTBOARD COVE LIP DOOR (LH ONLY) . .		1
	103	65-18940-2	. ACTUATION INSTL, OUTBOARD COVE LIP DOOR (RH ONLY) . .		1
			. . FLIGHT CONTROL, (SEE FIG. 52)		
			. . REQUIRED PLACARDS, (SEE 11-3, FIG. 75).		
	104	65-18941-5	. ACTUATION INSTL, INBOARD COVE LIP DOOR (LH ONLY) (SEE FIG. 53)		1
	104	65-18941-6	. ACTUATION INSTL, INBOARD COVE LIP DOOR (RH ONLY) (SEE FIG. 53)		1
	105	65-18941-3	. ACTUATION INSTL, INBOARD COVE LIP DOOR (LH ONLY) (SEE FIG. 54)		1
	105	65-18941-4	. ACTUATION INSTL, INBOARD COVE LIP DOOR (RH ONLY) (SEE FIG. 54)		1
	106	65-18941-1	. ACTUATION INSTL, INBOARD COVE LIP DOOR (LH ONLY) (SEE FIG. 54)		1
	106	65-18941-2	. ACTUATION INSTL, INBOARD COVE LIP DOOR (RH ONLY) (SEE FIG. 54)		1
			. FOR REFERENCE TO OTHER DRIVE DETAILS, SEE NHA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

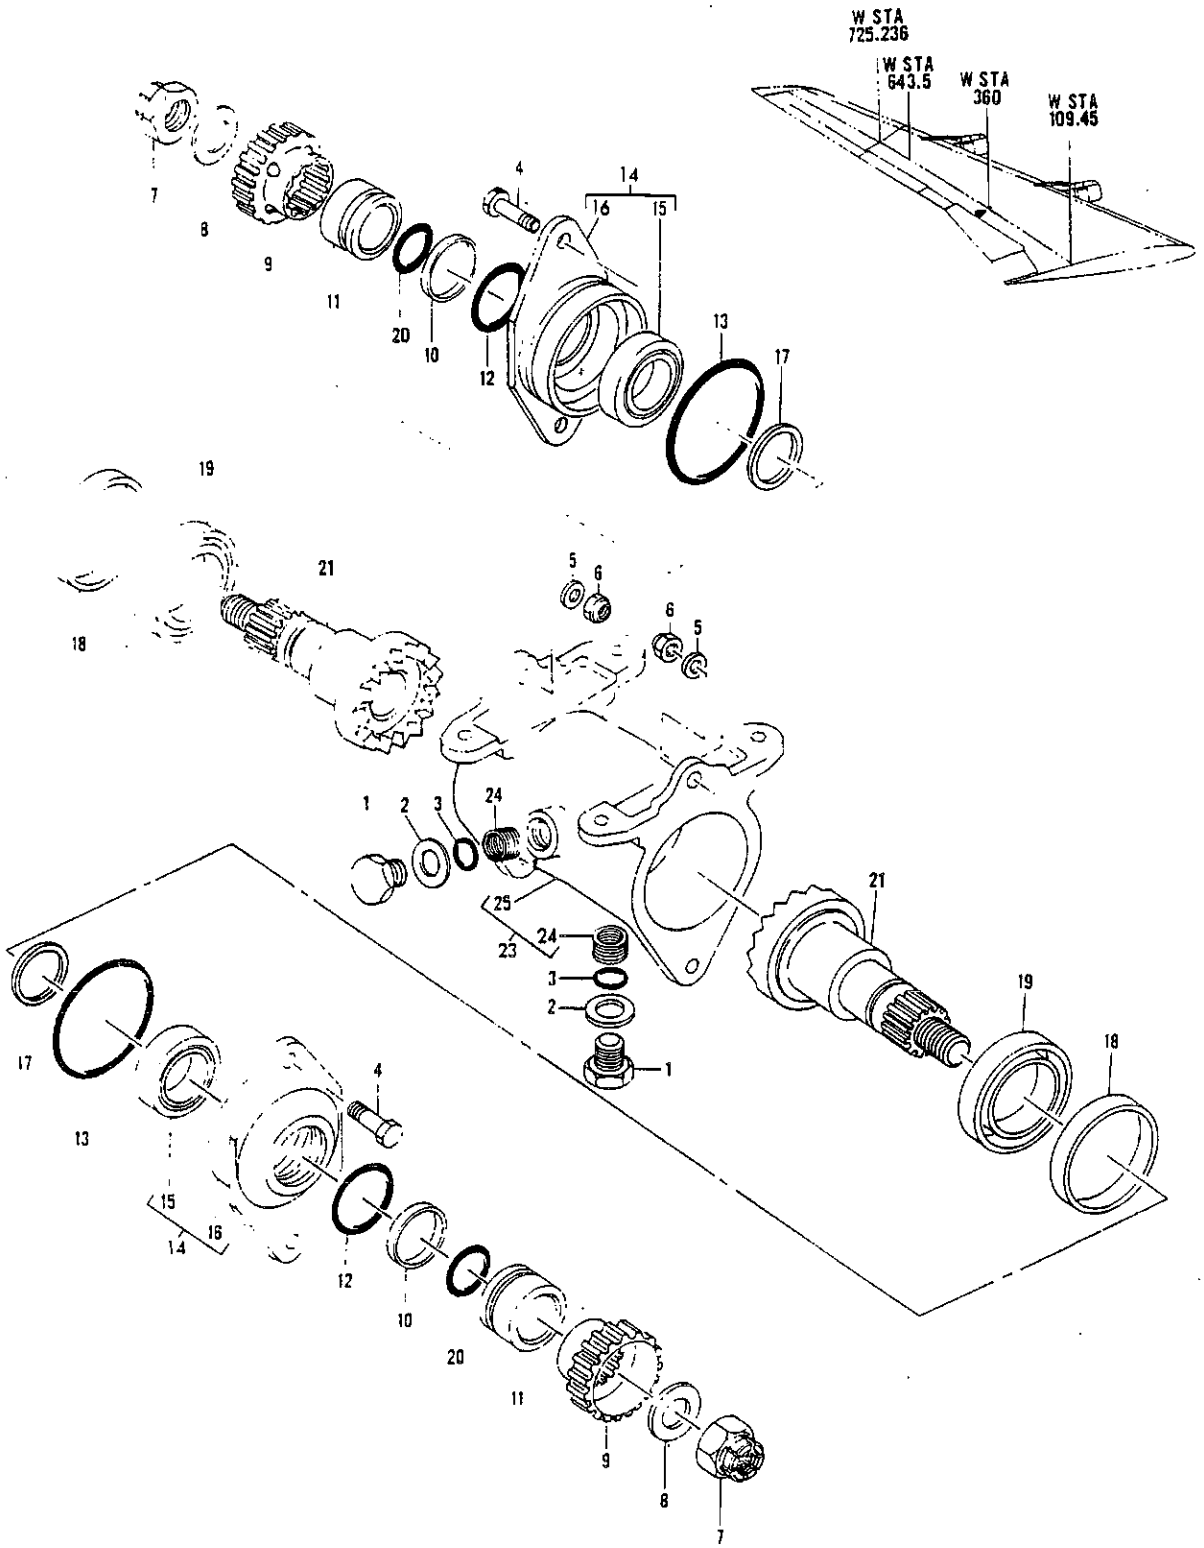


FIGURE 37A. GEAR BOX ASSY, OUTBOARD FLAP DRIVE ANGLE (FLIGHT CONTROL ONLY)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	37A	65-7485-1	GEAR BOX ASSY, OUTBOARD FLAP DRIVE ANGLE (FLIGHT. . . .	0150	RF
R			CONTROL ONLY) (SEE FIG. 36, ITEM 81 AND		
R			FIG. 37, ITEM 94)		
R		65-7485-1	GEAR BOX ASSY, OUTBOARD FLAP DRIVE ANGLE (FLIGHT. . . .	5199	RF
R			CONTROL ONLY) (SEE FIG. 37, ITEM 94)		
R			(OPTIONAL TO 65-7485-3)		
R		65-7485-3	GEAR BOX ASSY, OUTBOARD FLAP DRIVE ANGLE (FLIGHT. . . .	5199	RF
R			CONTROL ONLY) (SEE FIG. 37, ITEM 94)		
R			(OPTIONAL 65-7485-1)		
	1	AN814-4DL	. PLUG AND BLEEDER.		2
	2	NAS1197-716L	. WASHER.		2
	3	AN6227B8	. PACKING		2
	4	NAS1304-7A	. BOLT.		4
	5	NAS1197-416	. WASHER.		4
	6	NAS679A4W	. NUT		4
	7	NAS1022A9	. NUT		2
	8	AN960C916	. WASHER.		2
	10	69-27219-14	. RING, LOW PRESSURE ROTARY SEAL.		2
	11	6-98755	. SPACER, OUTBOARD AILERON LOCKOUT MECHANISM.		2
	12	AN6227B22	. PACKING		2
	13	AN6230B5	. GASKET.		2
	14	69-4752	. RETAINER ASSY, FLAP DRIVE ANGLE GEAR BOX.		2
	15	BACB10A90	. . BEARING		1
	16	69-4752-1	. . RETAINER, FLAP DRIVE ANGLE GEAR BOX		1
	17	9-61297-14	. SHIM, LAMINATED		AR
	18	66-8665	. SPACER, FLAP DRIVE ANGLE GEAR BOX		2
	19	BACB10A19	. BEARING		2
	20	AN6227B15	. PACKING		2
	21	69-5795	. GEAR, FLAP DRIVE ANGLE GEAR BOX BEVEL		2
R	23	65-6131	. HOUSING ASSY, FLAP DRIVE ANGLE GEAR BOX (USED ON. . .	0150	1
R			65-7485 AND -1)	5299	
R	23	65-6131-5	. HOUSING ASSY, FLAP DRIVE ANGLE GEAR BOX (USED ON. . .	5199	1
R			65-7485-3)		
	24	BACS13P7CN2	. . SLEEVE.		2
R	25	65-6131-1	. . HOUSING, FLAP ANGLE GEAR BOX (USED ON 65-6131). . .	0150	1
R				5299	
R	25	65-6131-6	. . HOUSING, FLAP ANGLE GEAR BOX (USED ON 65-6131-5). .	5199	1
			. FOR REFERENCE TO OTHER GEAR BOX DETAILS, SEE NHA. . .		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

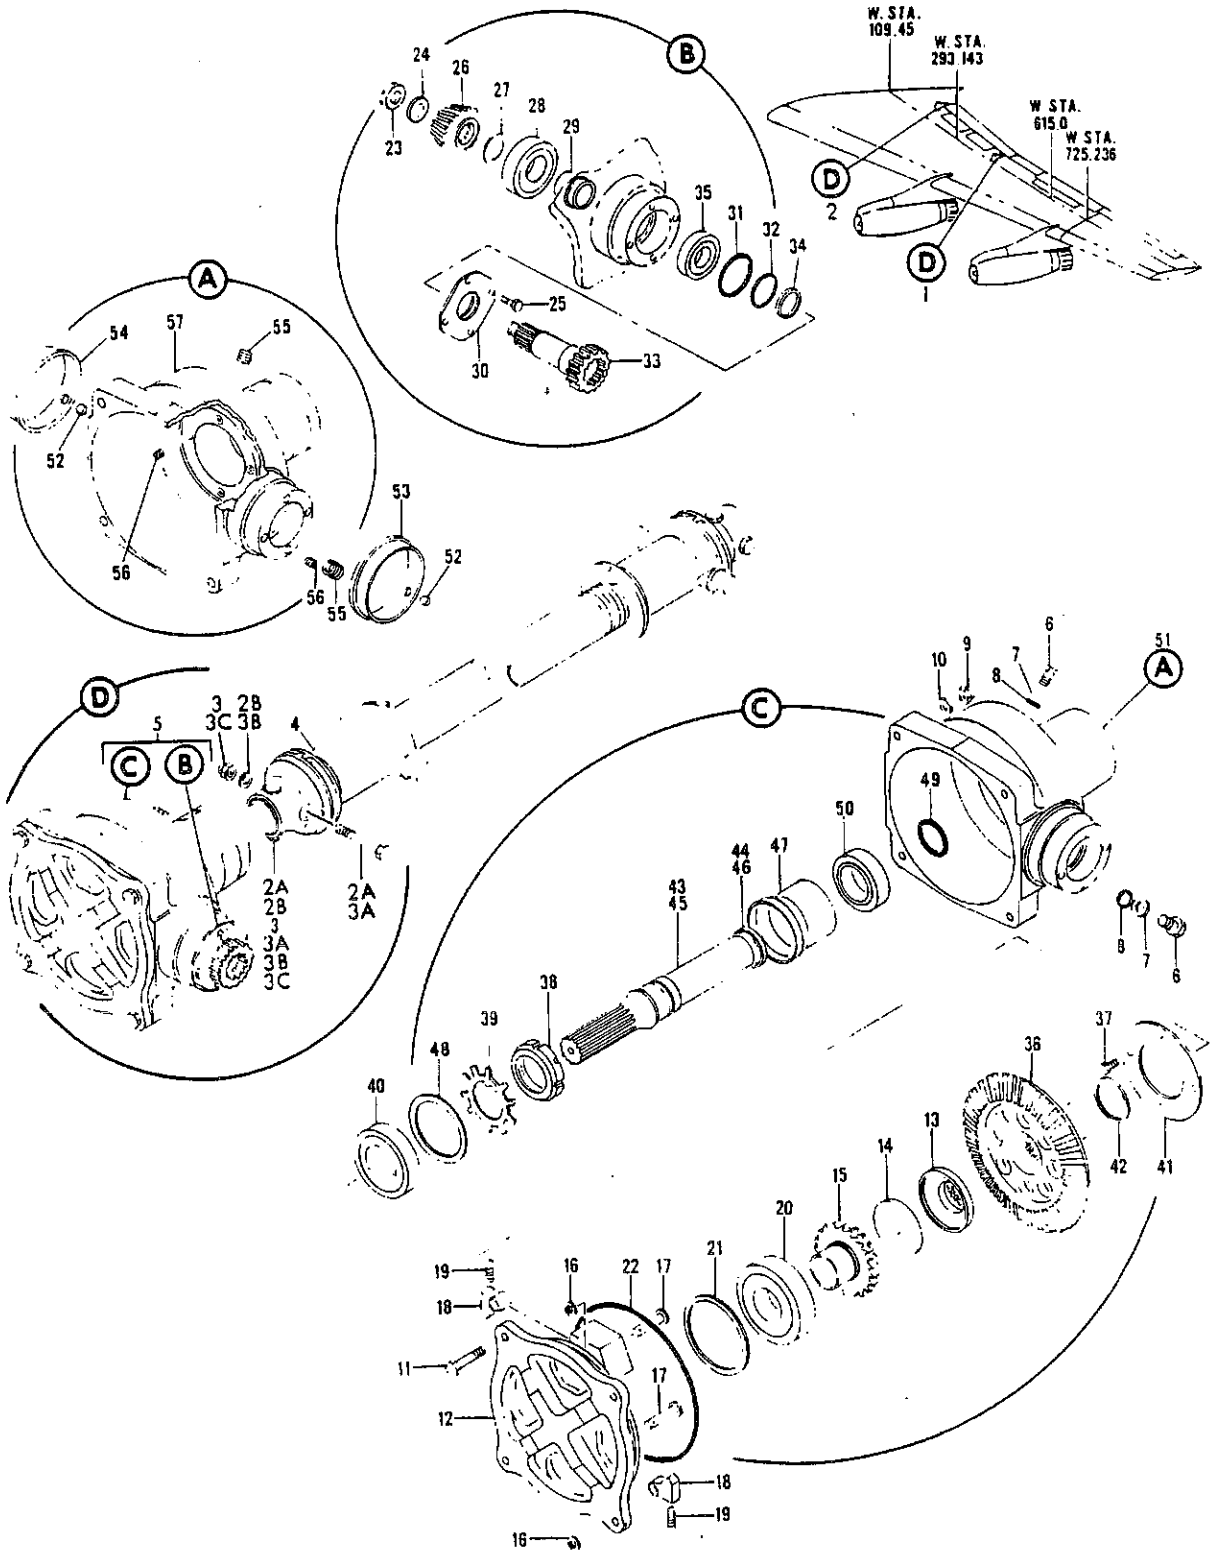


FIGURE 378. TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT CONTROL ONLY)

	FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM	EFF TO	UNITS PER ASSY
	37B	1	65-20679-6	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT CONTROL ONLY) (SEE FIG. 37, ITEM 90) (FOR REPLACEMENT ORDER 65-20679-10)		0102	RF
R R R		1	65-20679-7	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT CONTROL ONLY) (SEE FIG. 37, ITEM 90) (FOR REPLACEMENT ORDER 65-20679-10)		0450	RF
		1	65-20679-7	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT CONTROL ONLY) (SEE FIG. 37, ITEM 90) (OPTIONAL 65-20679-6 AND FOR REPLACEMENT ORDER 65-20679-10)		0303	RF
		1	65-20679-6	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT CONTROL ONLY) (SEE FIG. 37, ITEM 90) (OPTIONAL TO 65-20679-7 AND FOR REPLACEMENT ORDER 65-20679-10)		0303	RF
R R R		1	65-20679-8	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT CONTROL ONLY) (SEE FIG. 37, ITEM 90) (OPTIONAL TO 65-20679-10)		5199	RF
R R R		1	65-20679-10	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT CONTROL ONLY) (SEE FIG. 37, ITEM 90) (OPTIONAL TO 65-20679-8)		5199	RF
		2	65-20679-6	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT CONTROL ONLY) (SEE FIG. 37, ITEM 90A) (FOR REPLACEMENT ORDER 65-20679-10)		0102	RF
R R R		2	65-20679-7	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT CONTROL ONLY) (SEE FIG. 37, ITEM 90A) (FOR REPLACEMENT ORDER 65-20679-10)		0450	RF
		2	65-20679-7	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT CONTROL ONLY) (SEE FIG. 37, ITEM 90A) (OPTIONAL 65-20679-6 AND FOR REPLACEMENT ORDER 65-20679-10)		0303	RF
		2	65-20679-6	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT CONTROL ONLY) (SEE FIG. 37, ITEM 90A) (OPTIONAL TO 65-20679-7 AND FOR REPLACEMENT ORDER 65-20679-10)		0303	RF
R R R R		2	65-20679-8	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT CONTROL ONLY) (SEE FIG. 37, ITEM 90A) (OPTIONAL TO 65-20679-10 AND FOR REPLACEMENT ORDER 65-20679-14)		5299	RF
R R R R		2	65-20679-10	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT CONTROL ONLY) (SEE FIG. 37, ITEM 90A) (OPTIONAL 65-20679-8 AND FOR REPLACEMENT ORDER 65-20679-14)		5299	RF
R R R R		2	65-20679-14	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT CONTROL ONLY) (SEE FIG. 37, ITEM 90A) (OPTIONAL TO AND REPLACEMENT FOR 65-20679-8, -10)		5299	RF
		2A	NAS1106-29W	. BOLT, (USED ON 65-20679-1, -4, -6, -7, -8)			2
		2B	AN960-616	. WASHER, (USED ON 65-20679-1, -4, -6, -7, -8)			2
		3	NAS679A6	. NUT, (USED ON 65-20679-1, -4, -6, -7, -8)			2
R		3A	BACB30NF6-29	. BOLT, (USED ON 65-20679-10, -12, -14)		5299	2
R		3B	AN960-616	. WASHER, (USED ON 65-20679-10, -12, -14)		5299	2
R		3C	BACN10JC6	. NUT, (USED ON 65-20679-10, -12, -14)		5299	2
		4	10-60549-1	. BALL SCREW AND NUT ASSY, WING (USED ON 65-20679-1, -4, -6)		0103	1
		4	10-60549-2	. BALL SCREW AND NUT ASSY, WING (USED ON 65-20679-7, -8, -10, -12, -14)		0399	1
R R		5	65-20679-3	. GEAR BOX ASSY, TRANSMISSION (FLIGHT CONTROL ONLY) (USED ON 65-20679-4, -6 AND -7)		0150	1
R		5	65-20679-9	. GEAR BOX ASSY, (USED ON 65-20679-8)		5199	1
R		5	65-20679-11	. GEAR BOX ASSY, (USED ON 65-20679-10)		5199	1
		6	AN814-4DL	. . PLUG AND BLEEDER			2
		7	NAS1197-716L	. . WASHER			2
		8	AN6227-8	. . PACKING			2
		9	NAS679A5	. . NUT, (USED ON 65-20679-2, -3, -9)			4
R		9	BACN10GW5	. . NUT, (USED ON 65-20679-11, -13, -15)		5299	4
		10	NAS1197-516	. . WASHER, (USED ON 65-20679-3 AND -9)			4
R		10	AN960PD516	. . WASHER, (USED ON 65-20679-11, -13, -15)		5299	4
		11	NAS1305-16	. . BOLT, (USED ON 65-20679-2, -3, -9)			4
R		11	BACB30NE5-16	. . BOLT, (USED ON 65-20679-11, -13, -15)		5299	4
		12	65-19549-2	. . COVER, INBOARD FLAP DRIVE TEE GEAR BOX			1
		13	69-15407-1	. . SHOE, INBOARD FLAP DRIVE TEE BOX BRAKE			1
		14	66-8906	. . PLATE, INBOARD FLAP DRIVE TEE BOX BRAKE			1
		15	69-9040	. . RATCHET, INBOARD FLAP DRIVE TEE BOX			1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	37B 16	AN960D516	. . WASHER. (OPTIONAL AN960D516L)		AR
	16	AN960D516L	. . WASHER. (OPTIONAL TO AN960D516)		AR
	17	MS20392-4-39	. . PIN		2
	18	6-72700	. . PAWL, FLAP DRIVE TEE BOX RATCHET.		2
	19	3-74693	. . SPRING, FLAP DRIVE COMPRESSION.		2
	20	BACB10A92	. . BEARING		1
	21	9-61297-3000	. . SHIM.		1
	22	BACG10D174	. . PACKING (OPTIONAL TO MS29561-259 OR BACG10T174)		1
	22	MS29561-259	. . PACKING (OPTIONAL BACG10D174)		1
	22	BACG10T174	. . PACKING (OPTIONAL BACG10D174)		1
	23	AN320-9	. . NUT		1
	24	AN960-916	. . WASHER. (OPTIONAL AN960-916L)		1
	24	AN960-916L	. . WASHER. (OPTIONAL TO AN960-916)		1
	25	NAS1303-1H	. . BOLT.		4
	26	69-15375-1	. . BEVEL GEAR, INBOARD FLAP DRIVE TEE BOX.		1
	27	9-61297-3002	. . SHIM, LAMINATED		1
	28	BACB10A116	. . BEARING		1
	29	66-8926-1	. . BUSHING, INBOARD FLAP DRIVE TEE BOX		1
	30	66-5031	. . RETAINER, FLAP DRIVE TEE BOX BEARING.		1
	31	AN6230B1	. . GASKET.		1
	32	AN6227B22	. . PACKING		1
	33	69-15408-1	. . SHAFT, INBOARD FLAP DRIVE TEE GEAR BOX SPLINED.		1
	34	69-27219-14	. . RING, ROTARY LOW PRESSURE SEAL.		1
	35	BACB10A576	. . BEARING		1
	36	65-19597-1	. . BEVEL GEAR, INBOARD FLAP DRIVE TEE BOX.		1
	37	NAS1303-1H	. . BOLT.		4
	38	MS19068-082	. . NUT		1
	39	MS19070-082	. . WASHER.		1
	40	BACB10A21	. . BEARING		1
	41	66-8921-1	. . PLATE, INBOARD FLAP DRIVE TEE BOX BEARING RETAINER		1
	42	9-61297-3004	. . SHIM, LAMINATED		1
R	43	69-15406-1	. . SHAFT ASSY, INBOARD FLAP DRIVE TEE BOX.	0150	1
R	43	65-74757-1	. . SHAFT ASSY, INBOARD FLAP DRIVE TEE GEARBOX.	5299	1
	44	69-36083-7	. . . RING, INBOARD FLAP DRIVE TEE BOX SEAL		1
R	45	69-15406-2	. . . SHAFT, INBOARD FLAP DRIVE TEE BOX	0150	1
R	45	65-74757-2	. . . SHAFT	5199	1
	47	69-15851-1	. . SPACER, INBOARD FLAP DRIVE TEE BOX.		1
	48	9-61297-3005	. . SHIM, LAMINATED		1
	49	MS28775-220	. . PACKING		1
	50	BACB10A577	. . BEARING		1
	51	65-19409-4	. . HOUSING ASSY, INBOARD FLAP DRIVE TEE BOX (USED ON 65-20679-3, -9 AND -11)		1
	52	5-87414-3	. . . KEY, FLAP DRIVE TEE BOX HOUSING		2
	53	6-60498-5	. . . BUSHING, FLAP DRIVE BALL BEARING SCREW.		1
	54	6-60498-4	. . . BUSHING, FLAP DRIVE BALL BEARING SCREW.		1
	55	MS21208F7-10	. . . INSERT.		2
	56	MS21208F1-20	. . . INSERT.		8
	57	65-19409-5	. . . HOUSING, FLAP DRIVE TEE BOX (USED ON 65-19409-4)		1
			. FOR REFERENCE TO OTHER TRANSMISSION DETAILS, SEE NHA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

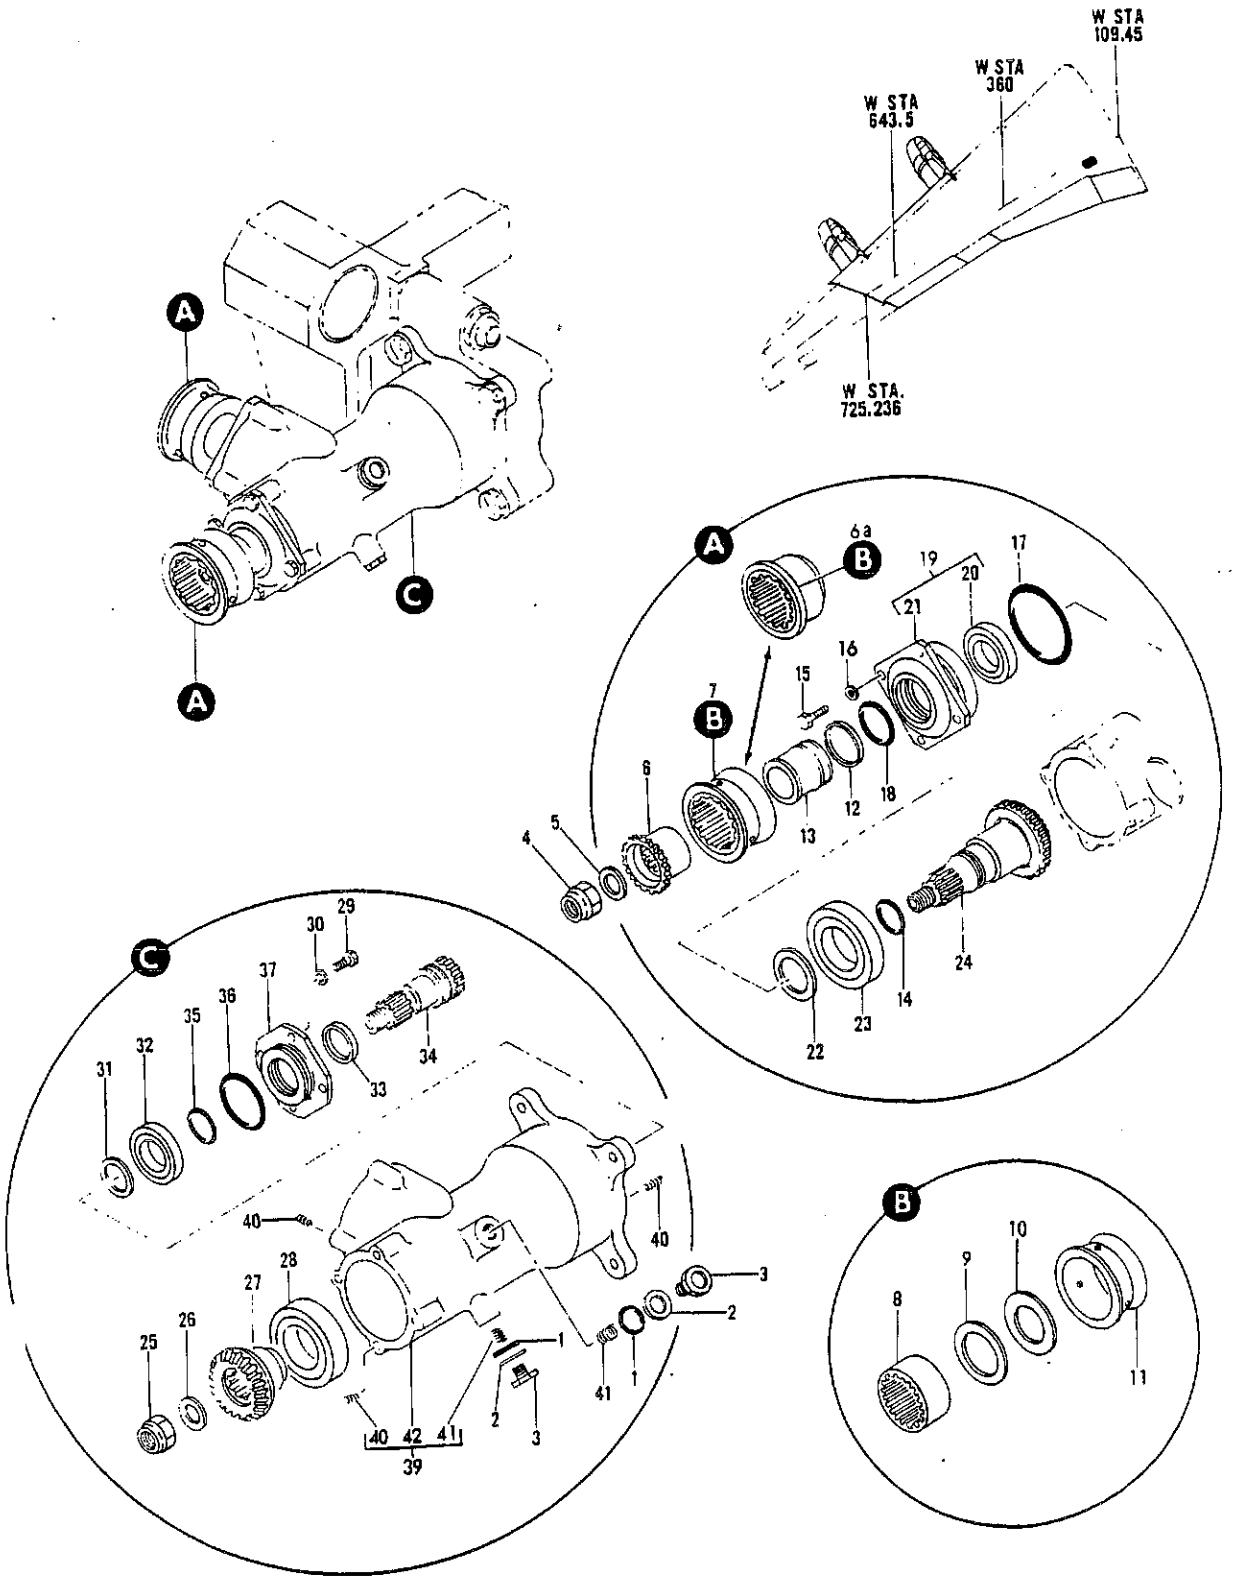


FIGURE 37D. GEAR BOX ASSY, INBOARD FLAP DRIVE TEE (FLIGHT CONTROL ONLY)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	37D	65-20852-2	GEAR BOX ASSY, INBOARD FLAP DRIVE TEE (FLIGHT CONTROL ONLY) (SEE FIG. 37, ITEM 38)	0150	RF
R		65-20852-3	GEAR BOX ASSY, INBOARD FLAP DRIVE TEE (FLIGHT CONTROL ONLY) (SEE FIG. 37, ITEM 38)	5199	RF
	1	AN622788	. PACKING		2
	2	NAS1197-716L	. WASHER.		2
	3	AN814-4DL	. PLUG AND BLEEDER.		2
	4	NAS1022A9	. NUT		2
	5	AN960-916	. WASHER.		2
	6	69-14961-1	. COUPLING HALF, FLAP DRIVE SPLINED		2
	6A	69-33513-1	. SLEEVE, COUPLING.		2
R	12	69-27219-20	. RING, LOW PRESSURE ROTARY SEAL.	0150	2
	13	69-15377-1	. SPACER, FLAP DRIVE ELL GEAR BOX		2
	14	AN6227B18	. PACKING		2
	15	NAS1303-4H	. BOLT.		8
	16	AN960D10	. WASHER.		8
	17	AN623085	. GASKET.		2
	18	AN6227B25	. PACKING		2
	19	69-14964-1	. RETAINER ASSY, FLAP DRIVE TEE GEAR BOX.		2
	20	BACB10A346	. . BEARING		1
	21	69-14964-2	. . RETAINER, FLAP DRIVE TEE GEAR BOX		1
	22	9-61297-11	. SHIM, LAMINATED		2
	23	BACB10A19	. BEARING		2
	24	65-19533-1	. GEAR, FLAP DRIVE INBOARD TEE BOX BEVEL.		2
	25	NAS1022A9	. NUT		1
	26	AN960-916	. WASHER.		1
	27	69-14960-1	. GEAR, FLAP DRIVE TEE GEAR BOX BEVEL		1
	28	BACB10A19	. BEARING		1
	29	NAS1303-2H	. BOLT.		4
	30	AN960D10	. WASHER.		4
	31	9-61297-14	. SHIM, LAMINATED		1
	32	BACB10A90	. BEARING		1
R	33	69-27219-14	. RING, LOW PRESSURE ROTARY SEAL.	0150	1
	34	69-14963-1	. SHAFT, FLAP DRIVE TEE GEAR BOX SPLINED.		1
	35	AN6227B22	. PACKING		1
	36	AN6230B1	. PACKING		1
	37	66-12659-1	. RETAINER, FLAP DRIVE TEE GEAR BOX BEARING		1
R	39	65-18959-1	. HOUSING ASSY, FLAP DRIVE TEE GEAR BOX (USED ON 65-20852-1 AND -2)	0150	1
R	39	65-18959-3	. HOUSING ASSY, FLAP DRIVE TEE GEAR BOX (USED ON 65-20852-3)	5199	1
	40	BACS13P3CN4	. . SLEEVE.		12
	41	BACS13P7CN2	. . SLEEVE.		2
R	42	65-18959-2	. . HOUSING, (USED ON 65-18959-1 AND -2).	0150	1
R	42	65-18959-4	. . HOUSING, (USED ON 65-18959-3)	5199	1
			. FOR REFERENCE TO OTHER GEAR BOX DETAILS, SEE NHA.		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

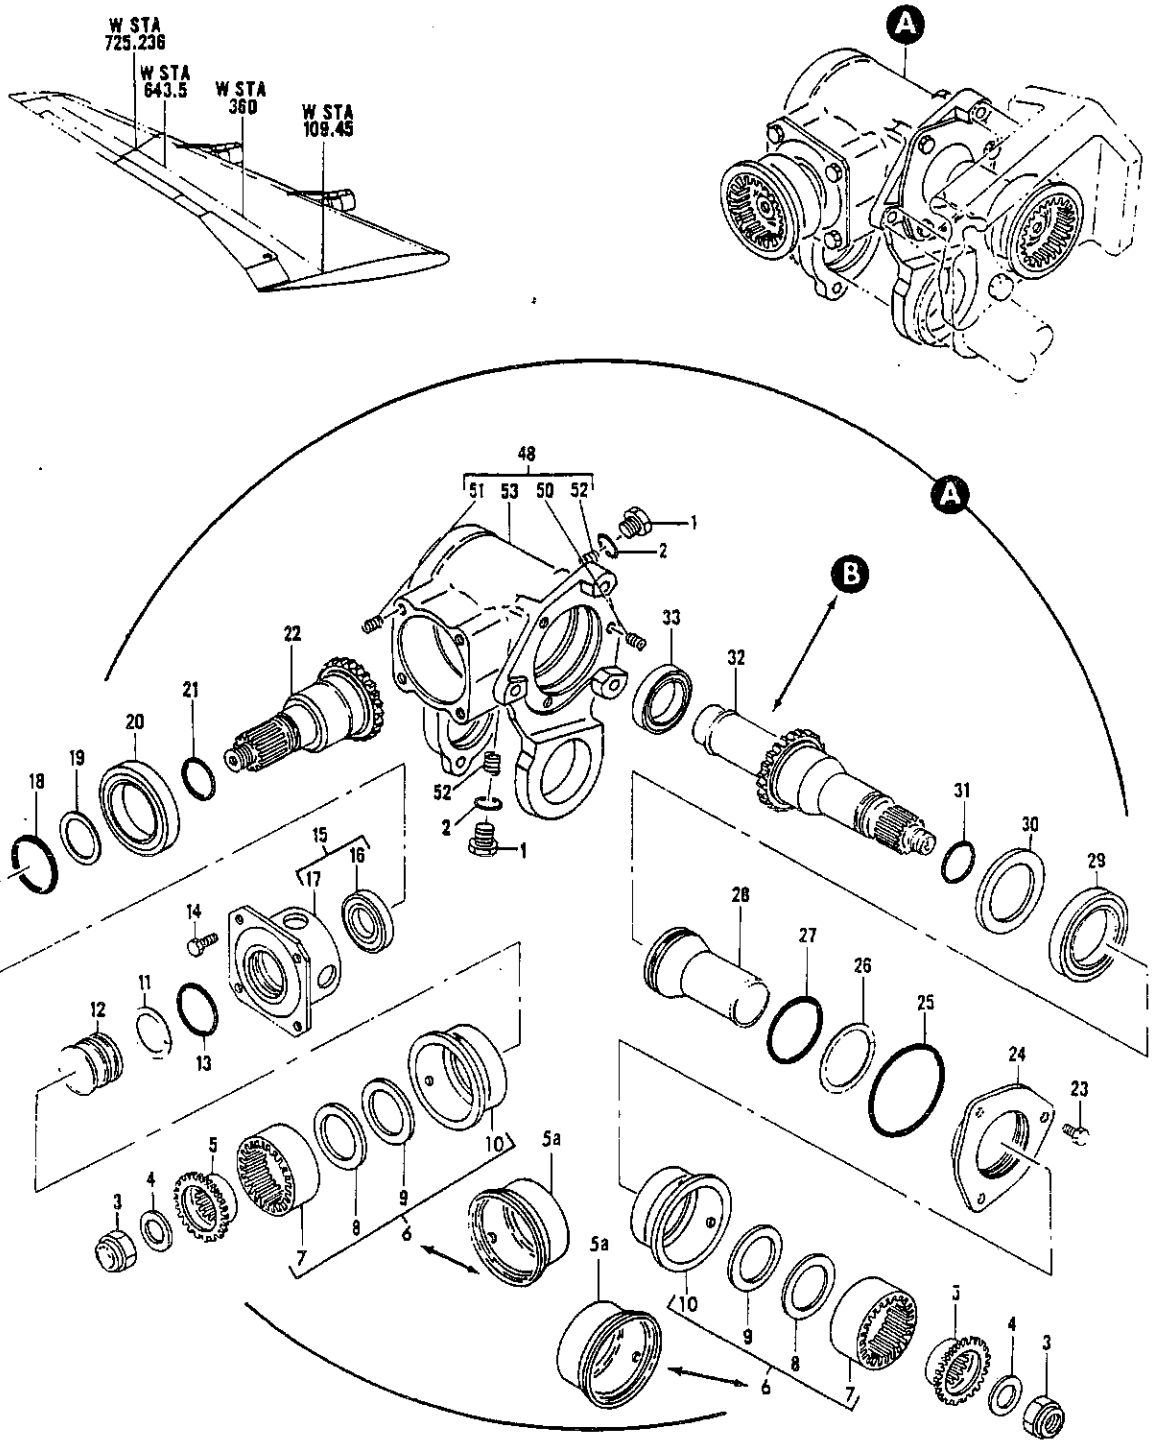


FIGURE 37E. GEAR BOX ASSY, INBOARD FLAP DRIVE WELL (FLIGHT CONTROL ONLY) (SHEET 1)

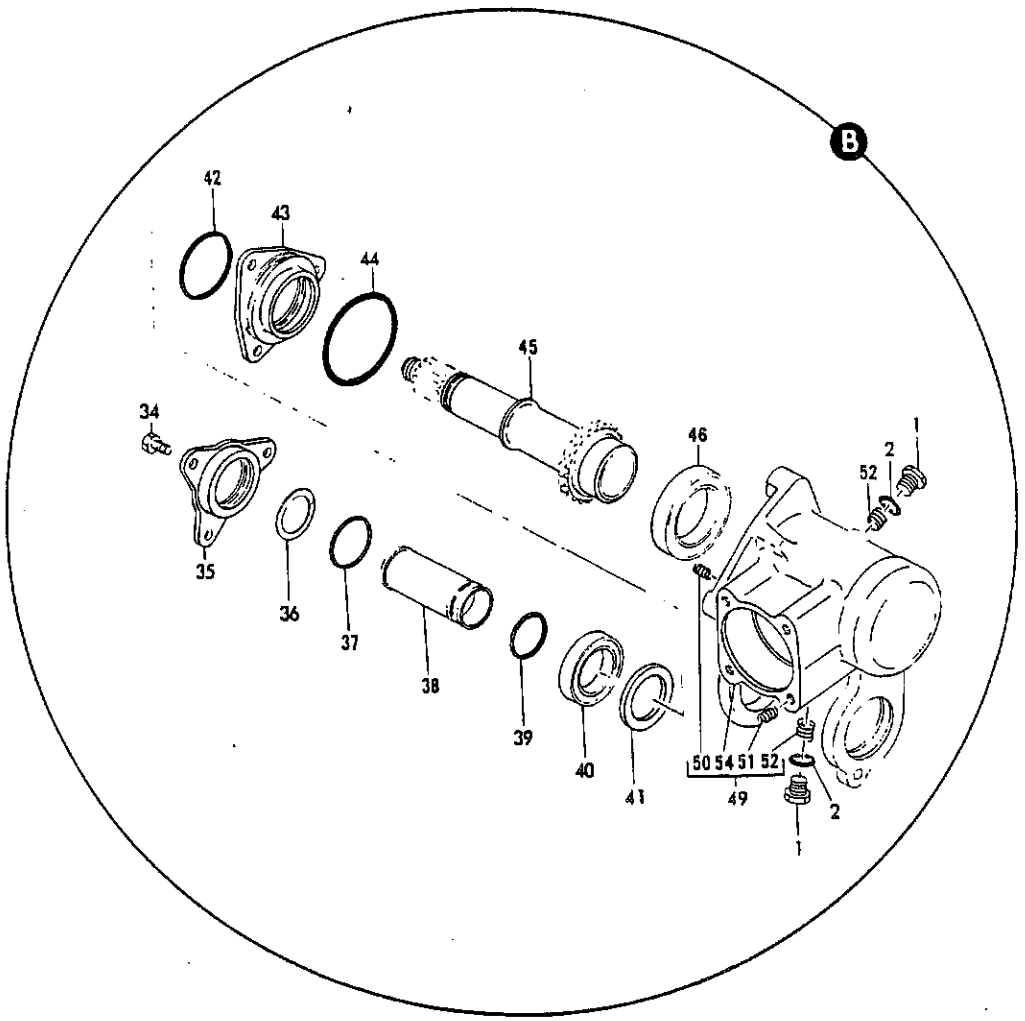
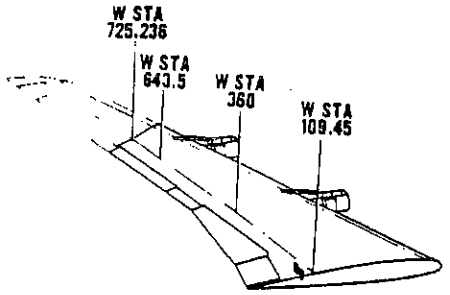


FIGURE 37E. GEAR BOX ASSY, INBOARD FLAP DRIVE WELL (FLIGHT CONTROL ONLY) (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	37E	65-20848-5	GEAR BOX ASSY, INBOARD FLAP DRIVE ELL (LH) (FLIGHT. . .	0150	RF
R			CONTROL ONLY) (SEE FIG. 37, ITEM 93)		
R		65-20848-7	GEAR BOX ASSY, INBOARD FLAP DRIVE ELL (LH) (FLIGHT. . .	5199	RF
R			CONTROL ONLY) (SEE FIG. 37, ITEM 93)		
R		65-20848-6	GEAR BOX ASSY, INBOARD FLAP DRIVE ELL (RH) (FLIGHT. . .	0150	RF
R			CONTROL ONLY) (SEE FIG. 37, ITEM 93)		
R		65-20848-8	GEAR BOX ASSY, INBOARD FLAP DRIVE ELL (RH) (FLIGHT. . .	5199	RF
R			CONTROL ONLY) (SEE FIG. 37, ITEM 93)		
	1	AN814-4DL	. PLUG AND BLEEDER.		2
	2	AN6227B8	. PACKING		2
	3	NAS1022A9	. NUT		2
	4	AN960-916	. WASHER.		2
	5	69-14961-1	. COUPLING HALF, FLAP DRIVE SPLINED		2
	5A	69-33513-1	. SLEEVE, COUPLING.		2
	11	69-27219-20	. RING, LOW PRESSURE ROTARY SEAL.		1
	12	69-15377-2	. SPACER, FLAP DRIVE ELL GEAR BOX (LH ONLY)		1
	12	69-15377-1	. SPACER, FLAP DRIVE ELL GEAR BOX (RH ONLY)		1
	13	AN6227B25	. PACKING		1
	14	BACB30NE3H2	. BOLT.		4
	15	69-14969-1	. RETAINER ASSY, FLAP DRIVE ELL GEAR BOX.		1
	16	BACB10A574	. . BEARING		1
	17	69-14969-3	. . RETAINER, FLAP DRIVE ELL GEAR BOX		1
	18	AN623088	. GASKET.		1
	19	9-61297-4	. SHIM, LAMINATED		1
	20	BACB10A575	. BEARING, (OPTIONAL BACB10A349).		1
	21	AN6227B18	. PACKING		1
	22	65-18968-1	. GEAR, FLAP DRIVE ELL GEAR BOX BEVEL (LH ONLY) . . .		1
	22	65-18969-1	. GEAR, FLAP DRIVE ELL GEAR BOX BEVEL (RH ONLY) . . .		1
	23	BACB30NE3H1	. BOLT, (LH ONLY)		3
	24	65-18966-1	. RETAINER, FLAP DRIVE ELL GEAR BOX BEARING (LH ONLY) .		1
	25	AN623088	. GASKET, (LH ONLY)		1
	26	69-27219-3007	. RING, LOW PRESSURE ROTARY SEAL.		1
	27	AN623084	. GASKET, (LH ONLY)		1
	28	69-14967-1	. SPACER, FLAP DRIVE ELL GEAR BOX (LH ONLY)		1
	29	BACB10A575	. BEARING, (OPTIONAL BACB10A349) (LH ONLY).		1
	30	9-61297-3012	. SHIM, LAMINATED (LH ONLY)		1
	31	AN6227B18	. PACKING, (LH ONLY).		1
	32	65-18971-1	. GEAR, FLAP DRIVE ELL GEAR BOX BEVEL (LH ONLY) . . .		1
	33	BACB10A574	. BEARING, (LH ONLY).		1
	34	BACB30NE3H2	. BOLT, (RH ONLY)		3
	35	65-18967-1	. CAP, FLAP DRIVE ELL GEAR BOX RETAINER (RH ONLY) . .		1
	36	69-27219-20	. RING, LOW PRESSURE ROTARY SEAL (RH ONLY).		1
	37	AN6227B25	. PACKING, (RH ONLY).		1
	38	69-14968-1	. SPACER, FLAP DRIVE ELL GEAR BOX (RH ONLY)		1
	39	AN6227B18	. PACKING, (RH ONLY).		1
	40	BACB10A574	. BEARING, (RH ONLY).		1
	41	9-61297-3010	. SHIM, LAMINATED (RH ONLY)		1
	42	AN623083	. GASKET, (RH ONLY)		1
	43	65-18966-2	. RETAINER, FLAP DRIVE ELL GEAR BOX BEARING (RH ONLY) .		1
	44	AN623088	. GASKET, (RH ONLY)		1
	45	65-18970-1	. GEAR, FLAP DRIVE ELL GEAR BOX BEVEL (RH ONLY) . . .		1
	46	BACB10A575	. BEARING, (OPTIONAL BACB10A349) (RH ONLY).		1
R	48	65-18944-7	. HOUSING ASSY, FLAP DRIVE ELL GEAR BOX (LH) (USED ON .	0150	1
R			65-20848-3 AND -5)		
R	48	65-18944-13	. HOUSING ASSY, (LH) (USED ON 65-20848-7, -9)	5199	1
R	49	65-18944-8	. HOUSING ASSY, FLAP DRIVE ELL GEAR BOX (RH) (USED ON .	0150	1
R			65-20848-4 AND -6)		
R	49	65-18944-14	. HOUSING ASSY, (RH) (USED ON 65-20848-8, -10).	5199	1
	50	BACS13W3CN4	. . SLEEVE.		3
	51	BACS13P3C4	. . SLEEVE.		4
	52	BACS13P7CN2	. . SLEEVE.		2
R	53	65-18944-9	. . HOUSING, FLAP DRIVE ELL GEAR BOX (LH) (USED ON. . .	0150	1
R			65-18944-7)		
R	53	65-18944-15	. . HOUSING, FLAP DRIVE ELL GEAR BOX (LH) (USED ON. . .	5199	1
R			65-18944-13)		
R	54	65-18944-10	. . HOUSING, FLAP DRIVE ELL GEAR BOX (RH) (USED ON. . .	0150	1
R			65-18944-8)		
R	54	65-18944-16	. . HOUSING, FLAP DRIVE ELL GEAR BOX (RH) (USED ON. . .	5199	1
R			65-18944-14)		
			. FOR REFERENCE TO OTHER GEAR BOX DETAILS, SEE NHA. . .		

MISSING ITEM NUMBERS ARE NOT APPLICABLE



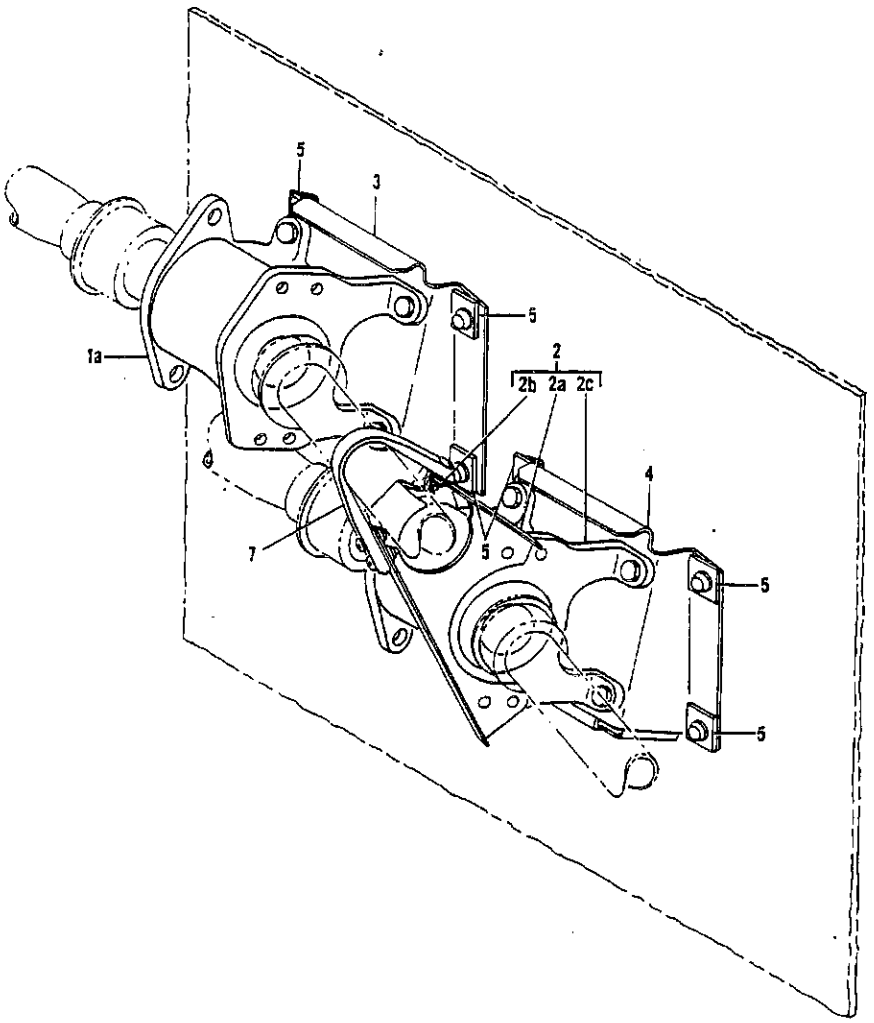


FIGURE 39. GEAR BOX INSTL, WING STATION 122 FLAP DRIVE ANGLE (FLIGHT CONTROL ONLY)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	39	65-20842-1	GEAR BOX INSTL, WING STATION 122 FLAP DRIVE ANGLE (LH) (SEE FIG. 37, ITEM 97)		RF
		65-20842-2	GEAR BOX INSTL, WING STATION 122 FLAP DRIVE ANGLE (RH) (SEE FIG. 37, ITEM 97)		RF
R	1A	65-20841-3	. GEAR BOX ASSY, INBOARD FLAP DRIVE ANGLE	0151	1
R			(OPTIONAL AND FOR REPLACEMENT ORDER 65-20841-5)		
R	1A	65-20841-5	. GEAR BOX ASSY, INBOARD.	0151	1
R			(OPTIONAL TO AND REPLACEMENT FOR 65-20841-3)		
R	1A	65-20841-5	. GEAR BOX ASSY, INBOARD.	5299	1
			ATTACHING PARTS		
		NAS1305-7	. BOLT.		4
		NAS1197-516	. WASHER.		4
			-------*-------		
			. . FLIGHT CONTROL, (SEE FIG. 39B).		
			. . REQUIRED PLACARDS, (SEE 11-3, FIG. 9)		
R	2	65-6373-13	. GEAR BOX ASSY, OUTBOARD (LH ONLY)	0150	1
R			(OPTIONAL 65-6373-7)		
R	2	65-6373-7	. GEAR BOX ASSY, OUTBOARD (LH ONLY)	0150	1
R			(OPTIONAL TO 65-6373-13)		
R	2	65-6373-13	. GEAR BOX ASSY, OUTBOARD (LH ONLY)	5199	1
R	2	65-6373-14	. GEAR BOX ASSY, OUTBOARD (RH ONLY)	0150	1
R			(OPTIONAL 65-6373-8)		
R	2	65-6373-8	. GEAR BOX ASSY, OUTBOARD (RH ONLY)	0150	1
R			(OPTIONAL TO 65-6373-14)		
R	2	65-6373-14	. GEAR BOX ASSY, OUTBOARD (RH ONLY)	5199	1
			. . FLIGHT CONTROL, (SEE FIG. 39A).		
			. . REQUIRED PLACARDS, (SEE 11-3, FIG. 9)		
	2A	69-16559-3	. . BRACKET, INBOARD WING FLAP SUPPORT TORQUE TUBE. . . GUARD (USED ON 65-6373-5, -7, -11, -13)		1
	2A	69-16559-4	. . BRACKET, INBOARD WING FLAP SUPPORT TORQUE TUBE. . . GUARD (USED ON 65-6373-6, -8, -12, -14)		1
	2B	NAS1197-416	. . WASHER.		1
			. . . FLIGHT CONTROL, (SEE FIG. 39A).		
			. . . REQUIRED PLACARDS, (SEE 11-3, FIG. 9)		
	3	69-15309-1	. BRACKET ASSY, FLAP DRIVE ANGLE GEAR BOX SUPPORT (LH . ONLY)		1
	3	69-15309-2	. BRACKET ASSY, FLAP DRIVE ANGLE GEAR BOX SUPPORT (RH . ONLY)		1
	4	69-4875-1	. BRACKET ASSY, FLAP DRIVE ANGLE GEAR BOX SUPPORT (LH . ONLY)		1
	4	69-4875-2	. BRACKET ASSY, FLAP DRIVE ANGLE GEAR BOX SUPPORT (RH . ONLY)		1
			ATTACHING PARTS		
		BACB30AL8-9	. BOLT.		4
		BACB30AL8-8	. BOLT.		2
		BACB30AL8-16	. BOLT.		2
		NAS1080C8	. COLLAR.		8
			-------*-------		
	5	50-3361-3084	. FILLER, CONTROLS RADIUS		8
	7	69-2871-2	. GUARD, WING FLAP DRIVE TORQUE TUBE.		1
			ATTACHING PARTS		
		NAS221-13	. SCREW		3
		AN960D10	. WASHER.		3
		NAS679A3W	. NUT		3
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

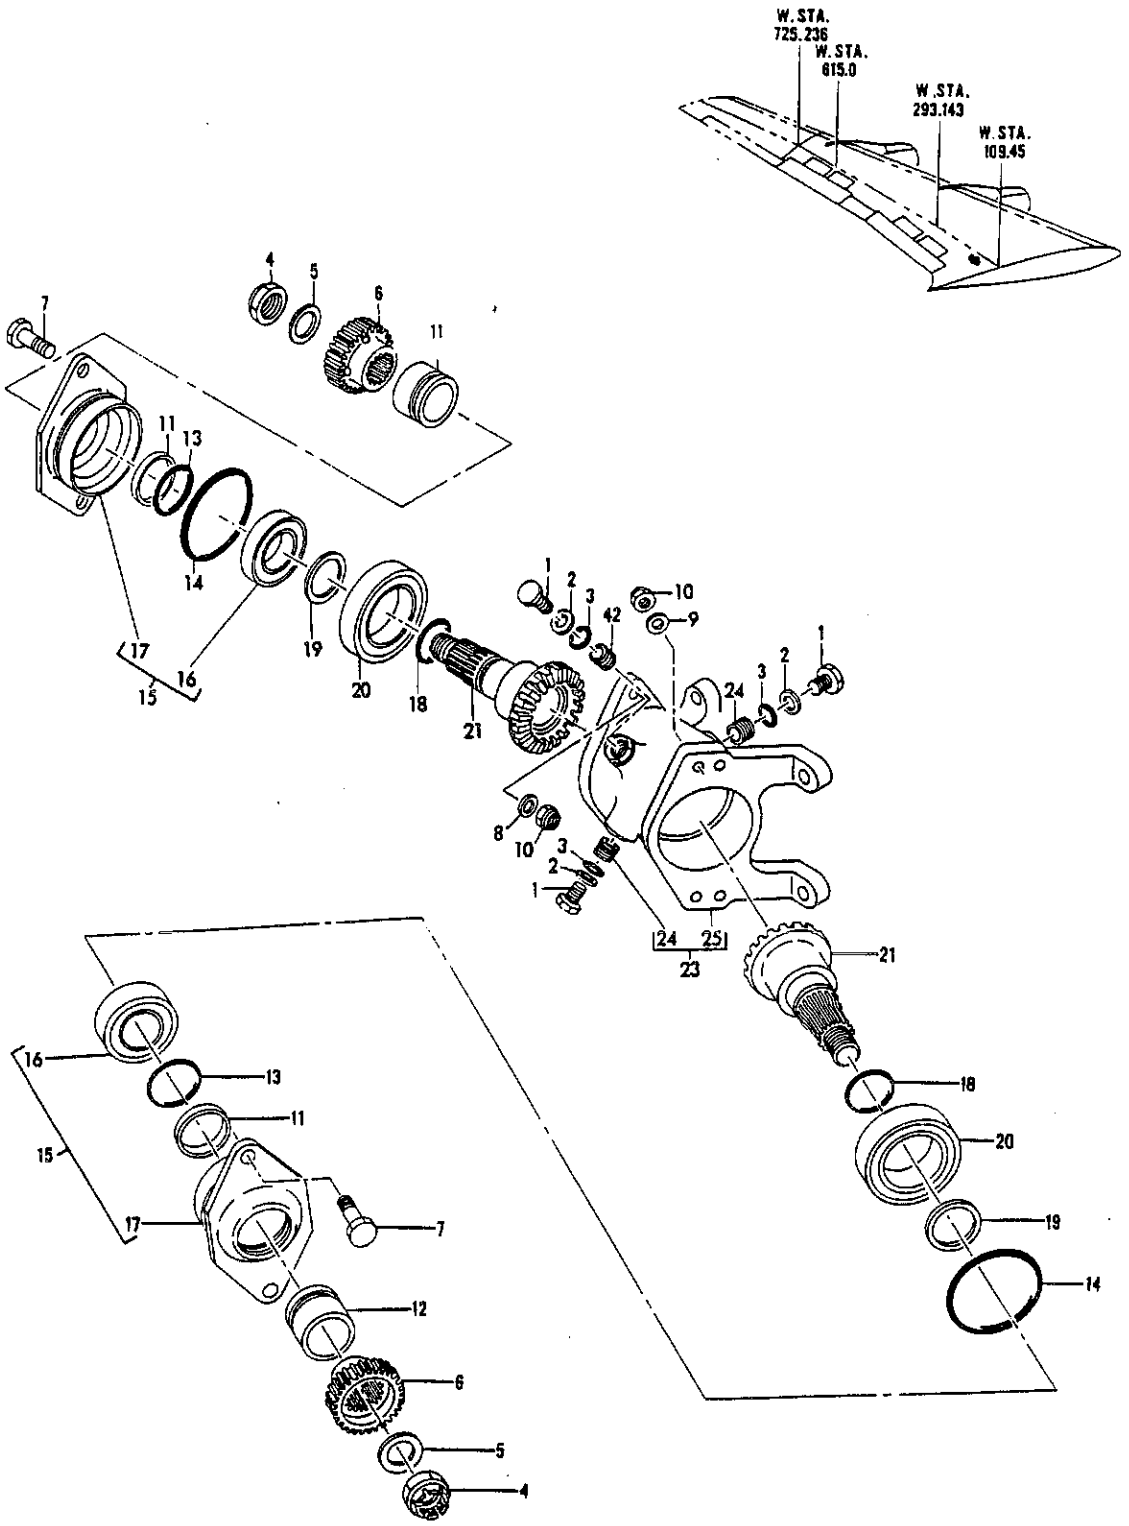


FIGURE 39A. GEAR BOX ASSY, FLAP DRIVE ANGLE (FLIGHT CONTROL ONLY)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R	39A	65-6373-13	GEAR BOX ASSY, OUTBOARD FLAP DRIVE ANGLE (LH) (FLIGHT CONTROL ONLY) (SEE FIG. 39, ITEM 2) (OPTIONAL 65-6373-7)	0150	RF
R R R		65-6373-7	GEAR BOX ASSY, OUTBOARD FLAP DRIVE ANGLE (LH) (FLIGHT CONTROL ONLY) (SEE FIG. 39, ITEM 2) (OPTIONAL TO 65-6373-13)	0150	RF
R R		65-6373-13	GEAR BOX ASSY, OUTBOARD FLAP DRIVE ANGLE (LH) (FLIGHT CONTROL ONLY) (SEE FIG. 39, ITEM 2)	5199	RF
R R R		65-6373-14	GEAR BOX ASSY, OUTBOARD FLAP DRIVE ANGLE (RH) (FLIGHT CONTROL ONLY) (SEE FIG. 39, ITEM 2) (OPTIONAL 65-6373-8)	0150	RF
R R R		65-6373-8	GEAR BOX ASSY, OUTBOARD FLAP DRIVE ANGLE (RH) (FLIGHT CONTROL ONLY) (SEE FIG. 39, ITEM 2) (OPTIONAL TO 65-6373-14)	0150	RF
R R		65-6373-14	GEAR BOX ASSY, OUTBOARD FLAP DRIVE ANGLE (RH) (FLIGHT CONTROL ONLY) (SEE FIG. 39, ITEM 2)	5199	RF
	1	AN814-4DL	. PLUG AND BLEEDER.		3
	2	NAS1197-716L	. WASHER.		3
	3	AN6227B8	. PACKING		3
	4	NAS1022A9	. NUT		2
	5	AN960-916	. WASHER.		2
R	6	69-4083	. COUPLING HALF, SPLINED (USED ON 65-6373-13, -14).	0150	2
R R	6	69-46619-1	. COUPLING HALF, SPLINED (USED ON 65-6373-7, -8). (OPTIONAL 69-4083)	0150	2
R R	6	69-4083	. COUPLING HALF, SPLINED (USED ON 65-6373-7, -8). (OPTIONAL TO 69-46619-1)	0150	2
	7	NAS1304-9	. BOLT.		4
	8	NAS1197-416	. WASHER.		2
	9	NAS1197-416L	. WASHER.		2
	10	NAS679A4W	. NUT		4
	11	69-27219-14	. RING, LOW PRESSURE ROTARY SEAL.		2
	12	6-98755	. SPACER, OUTBOARD AILERON LOCKOUT MECHANISM.		2
	13	AN6227B22	. PACKING		2
	14	AN623085	. GASKET.		2
	15	69-4752	. RETAINER ASSY, FLAP DRIVE ANGLE GEAR BOX.		2
	16	BACB10A90	. . BEARING		1
	17	69-4752-1	. . RETAINER, FLAP DRIVE ANGLE GEAR BOX		1
	18	AN6227B15	. PACKING		2
	19	9-61297-14	. SHIM, LAMINATED		AR
	20	BACB10A19	. BEARING		2
	21	69-4194	. BEVEL GEAR.		2
	23	65-6115-5	. HOUSING ASSY, (USED ON 65-6373-13, -14)		1
	24	BACS13P7CN2	. . SLEEVE.		3
	25	65-6115-6	. . HOUSING, (USED ON 65-6115-5).		1
			. FOR REFERENCE TO OTHER GEAR BOX DETAILS, SEE NHA.		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

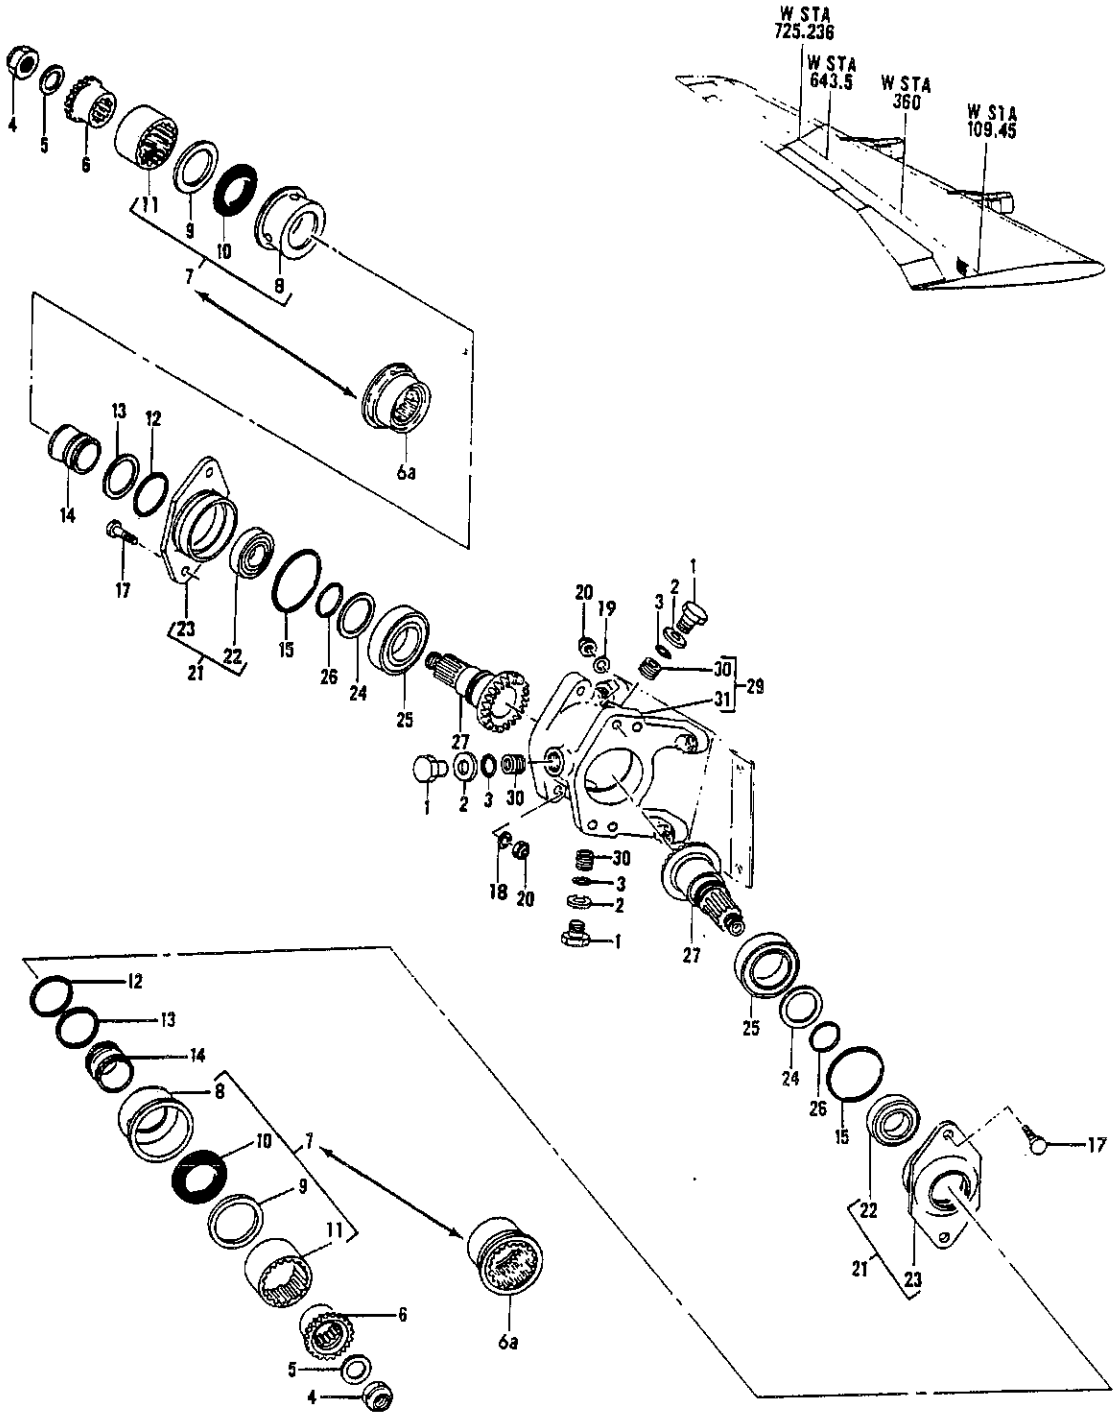


FIGURE 398. GEAR BOX ASSY, FLAP DRIVE ANGLE (FLIGHT CONTROL ONLY)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R	398	65-20841-3	GEAR BOX ASSY, INBOARD FLAP DRIVE ANGLE (FLIGHT CONTROL ONLY) (SEE FIG. 39, ITEM 1A) (OPTIONAL AND FOR REPLACEMENT ORDER 65-20841-5)	0151	RF
R R R		65-20841-5	GEAR BOX ASSY, INBOARD FLAP DRIVE ANGLE (FLIGHT CONTROL ONLY) (SEE FIG. 39, ITEM 1A) (OPTIONAL TO AND REPLACEMENT FOR 65-20841-3)	0151	RF
R R		65-20841-5	GEAR BOX ASSY, INBOARD FLAP DRIVE ANGLE (FLIGHT CONTROL ONLY) (SEE FIG. 39, ITEM 1A)	5299	RF
	1	AN814-4DL	. PLUG AND BLEEDER.		3
	2	BACW10T716L	. WASHER.		3
	3	AN6227-8	. PACKING		3
	4	NAS1022A9	. NUT		2
	5	AN960-916	. WASHER.		2
	6	69-14961-1	. COUPLING HALF, FLAP DRIVE SPLINED		2
	6A	69-33513-1	. SLEEVE, COUPLING.		2
	12	AN6227-25	. PACKING		2
	13	69-27219-20	. RING, LOW PRESSURE ROTARY SEAL.		2
	14	69-15377-1	. SPACER, FLAP DRIVE ELL GEAR BOX		2
	15	AN6230-5	. GASKET.		2
	17	NAS1304-9	. BOLT.		4
	18	NAS1197-416	. WASHER.		2
	19	NAS1197-416L	. WASHER.		2
	20	NAS679A4W	. NUT		4
	21	69-14945-1	. RETAINER ASSY, FLAP DRIVE ANGLE GEAR BOX.		2
	22	BACB10A346	. . BEARING		1
	23	69-14945-2	. . RETAINER, FLAP DRIVE ANGLE GEAR BOX		1
	24	9-61297-11	. SHIM, LAMINATED		2
	25	BACB10A19	. BEARING		2
	26	AN6227-18	. PACKING		2
	27	69-14944-1	. GEAR, FLAP DRIVE ANGLE GEAR BOX BEVEL		2
	29	65-18914-1	. HOUSING ASSY, FLAP DRIVE ANGLE GEAR BOX (USED ON. . . 65-20841-1 AND -5)		1
	29	65-18914-4	. HOUSING ASSY, FLAP DRIVE ANGLE GEAR BOX (USED ON. . . 65-20841-2 AND -3)		1
	30	BACS13P7CN2	. . INSERT.		3
	31	65-18914-2	. . HOUSING, FLAP DRIVE ANGLE GEAR BOX (USED ON . . . . 65-18914-1)		1
	31	65-18914-5	. . HOUSING, FLAP DRIVE ANGLE GEAR BOX (USED ON . . . . 65-18914-4)		1
			. FOR REFERENCE TO OTHER GEAR BOX DETAILS, SEE NHA. . .		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

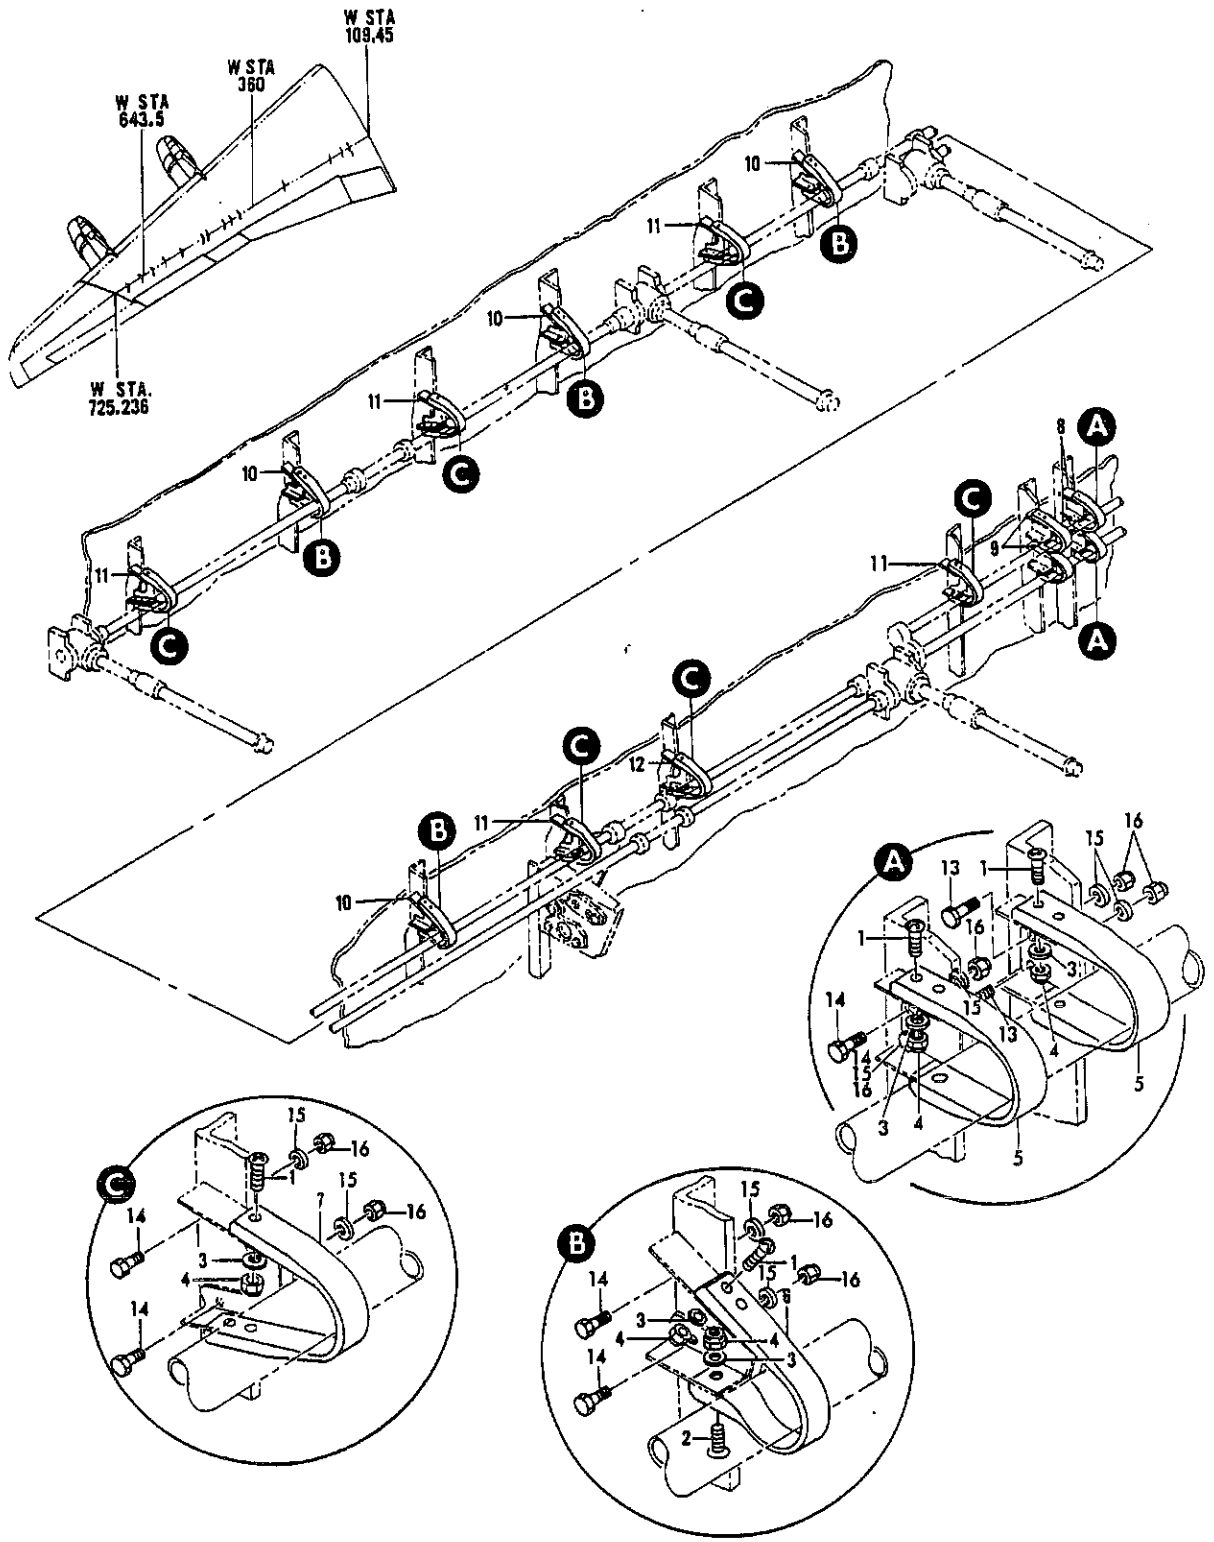
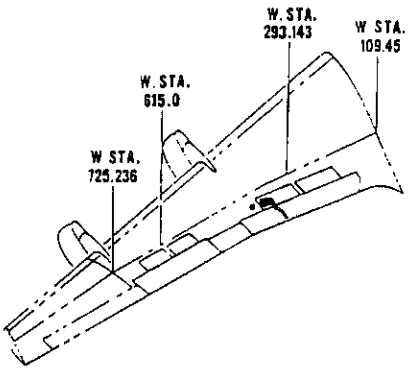


FIGURE 40. GUARD INSTL, FLAP DRIVE TORQUE TUBE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
40	65-8774-1	GUARD INSTL, FLAP DRIVE TORQUE TUBE (LH) (SEE FIG. 36, ITEM 94 AND FIG. 37, ITEM 98)		RF
	65-8774-2	GUARD INSTL, FLAP DRIVE TORQUE TUBE (RH) (SEE FIG. 36, ITEM 94 AND FIG. 37, ITEM 98)		RF
1	NAS221-13	. SCREW		38
2	NAS517-3-6	. SCREW		4
3	AN960D10	. WASHER		42
4	NAS679A3W	. NUT		42
5	69-2871	. GUARD, WING FLAP DRIVE TORQUE TUBE		4
6	69-2871-1	. GUARD, WING FLAP DRIVE TORQUE TUBE		4
7	69-2871-2	. GUARD, WING FLAP DRIVE TORQUE TUBE		6
8	66-8731-1	. BRACKET, FLAP DRIVE TORQUE TUBE GUARD SUPPORT (LH ONLY)		2
8	66-8731-2	. BRACKET, FLAP DRIVE TORQUE TUBE GUARD SUPPORT (RH ONLY)		2
9	66-8731-3	. BRACKET, FLAP DRIVE TORQUE TUBE GUARD SUPPORT (LH ONLY)		2
9	66-8731-4	. BRACKET, FLAP DRIVE TORQUE TUBE GUARD SUPPORT (RH ONLY)		2
10	69-2832-1	. BRACKET, GUARD SUPPORT (LH ONLY)		4
10	69-2832-2	. BRACKET, GUARD SUPPORT (RH ONLY)		4
11	69-2832-3	. BRACKET, GUARD SUPPORT (LH ONLY)		5
11	69-2832-4	. BRACKET, GUARD SUPPORT (RH ONLY)		5
12	69-2832-4	. BRACKET, GUARD SUPPORT (LH ONLY)		1
12	69-2832-3	. BRACKET, GUARD SUPPORT (RH ONLY)		1
		ATTACHING PARTS		
13	NAS1303-8	. BOLT		4
14	NAS1303-2	. BOLT		24
15	AN960D10	. WASHER		28
16	NAS679A3W	. NUT		28
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE



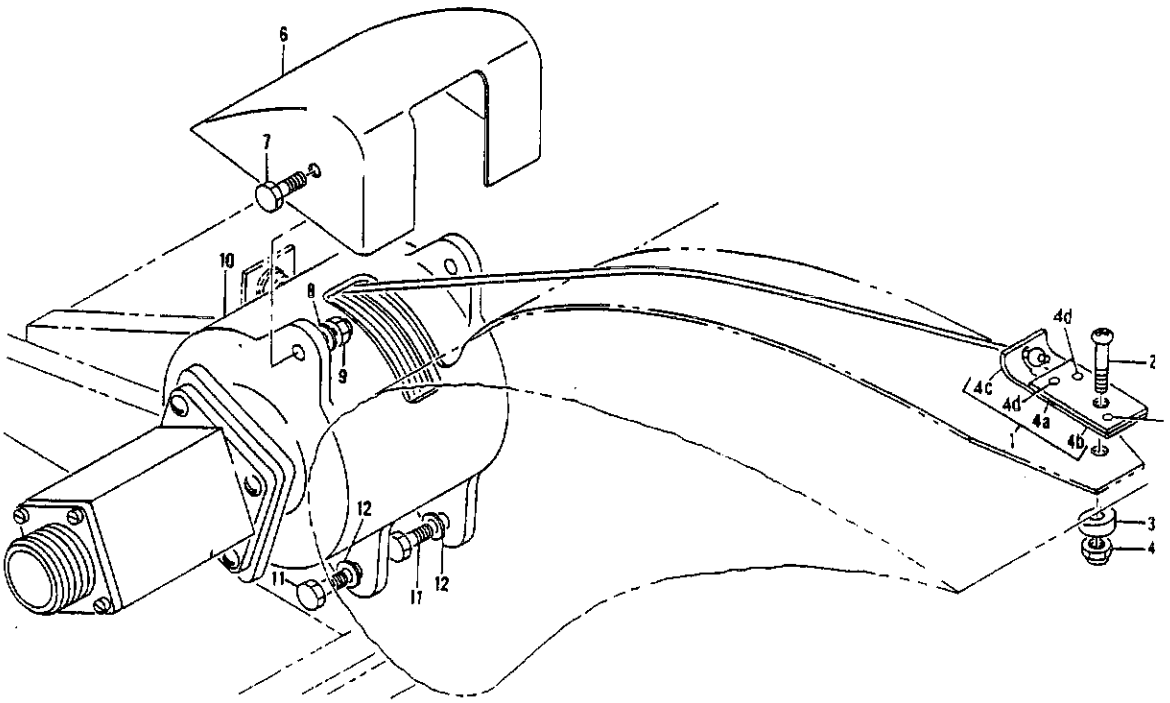


FIGURE 41. TRANSMITTER INSTL, TRAILING EDGE STATION 155.071 AND 166.14 FLAP POSITION

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
41	65-22802-1	TRANSMITTER INSTL, TRAILING EDGE STATION 166.14 FLAP. POSITION (LH) (SEE FIG. 37, ITEM 99)		RF
	65-22802-2	TRANSMITTER INSTL, TRAILING EDGE STATION 166.14 FLAP. POSITION (RH) (SEE FIG. 37 ITEM 37)		RF
1	3-89026-3001	. CLIP ASSY, FLAP POSITION TRANSMITTER.		1
		ATTACHING PARTS		
2	NAS221-15	. SCREW		1
3	6-67408-2	. SPACER, FLAP POSITION TRANSMITTER		1
4	NAS679A3W	. NUT		1
		-------*-------		
4A	3-89026-2002	. . DOUBLER, FLAP POSITION TRANSMITTER CLIP		1
4B	3-89026-2003	. . FILLER, FLAP POSITION TRANSMITTER CLIP.		1
4C	3-89026-2001	. . CLIP, FLAP POSITION TRANSMITTER		1
6	69-9036	. COVER, INBOARD FLAP POSITION TRANSMITTER.		1
		ATTACHING PARTS		
7	AN3-4A	. BOLT.		2
8	AN960PD10L	. WASHER.		2
9	NAS679A3W	. NUT		2
		-------*-------		
10	5-97286-3008	. TRANSMITTER ASSY, FLAP POSITION (LH ONLY) (SEE. . . FIG. 44)		1
10	5-97286-3007	. TRANSMITTER ASSY, FLAP POSITION (RH ONLY) (SEE. . . FIG. 44)		1
		ATTACHING PARTS		
11	AN3-4A	. BOLT.		4
12	AN960PD10L	. WASHER.		4
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

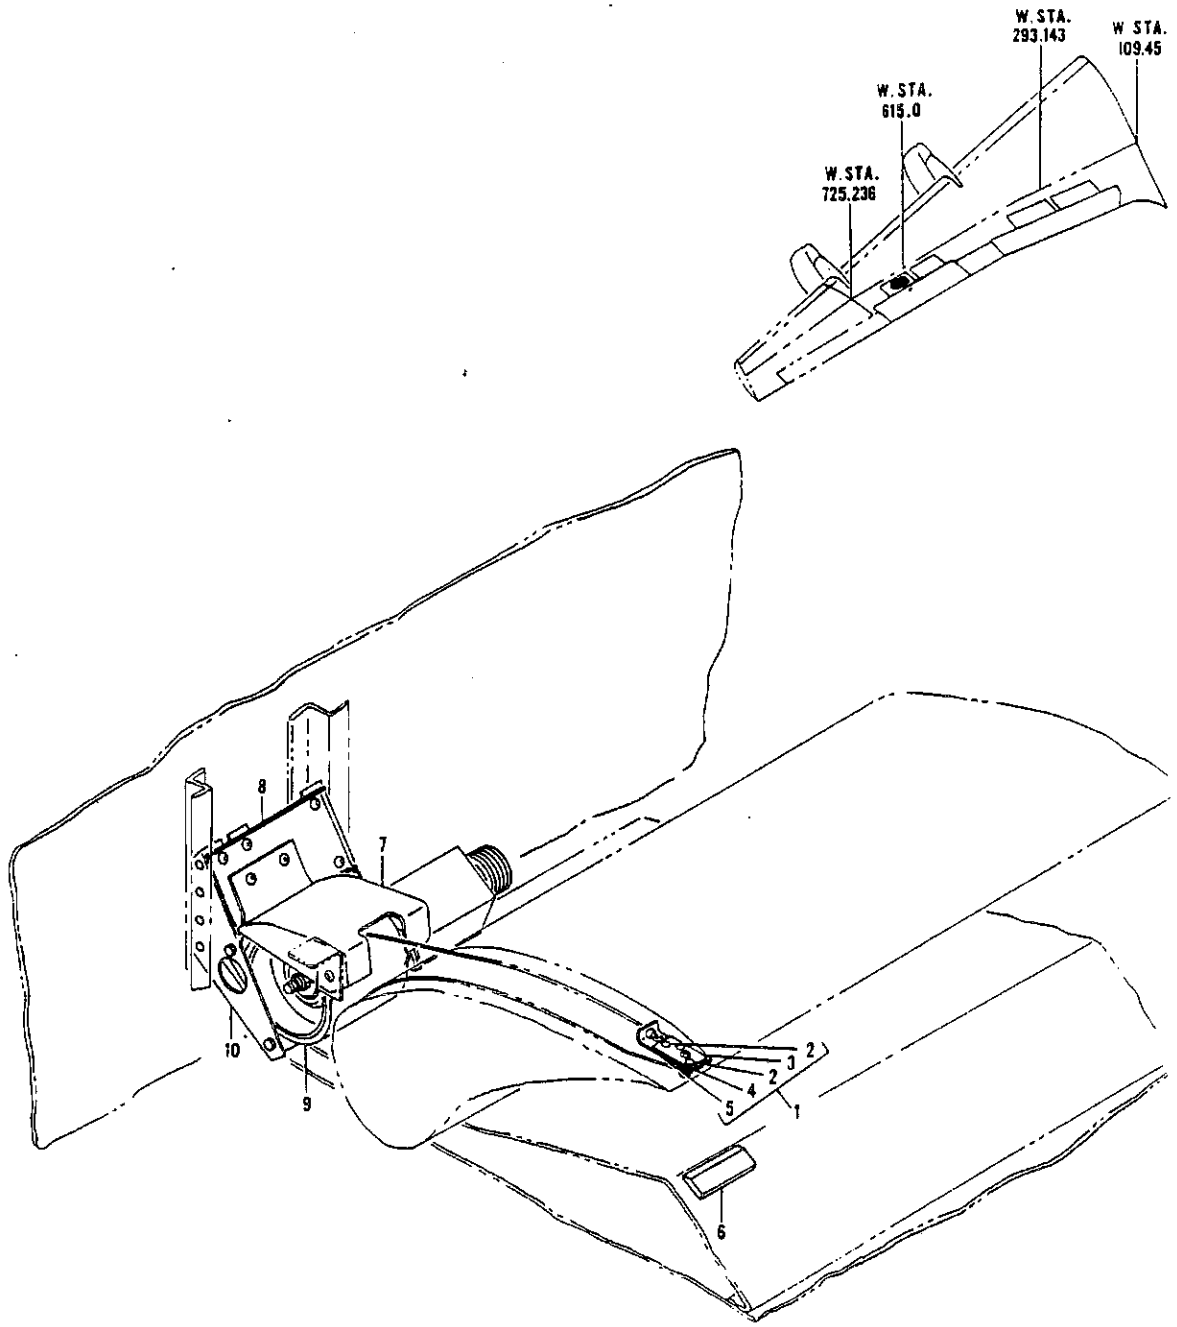


FIGURE 43. TRANSMITTER INSTL, OUTBOARD FLAP POSITION

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
43	5-87819-3013	TRANSMITTER INSTL, OUTBOARD FLAP POSITION LH (SEE FIG. 37, ITEM 100)		RF
	5-87819-3014	TRANSMITTER INSTL, OUTBOARD FLAP POSITION RH (SEE FIG. 37, ITEM 100)		RF
1	3-89026-3001	. CLIP ASSY, FLAP POSITION TRANSMITTER.		1
		ATTACHING PARTS		
	NAS221-15	. SCREW		1
	6-67408-2	. SPACER, FLAP POSITION TRANSMITTER		1
	NAS679A3W	. NUT		1
		-------*-------		
2	AN426D3	. . RIVET		3
3	3-89026-2002	. . DOUBLER, FLAP POSITION TRANSMITTER CLIP		1
4	3-89026-2003	. . FILLER, FLAP POSITION TRANSMITTER CLIP.		1
5	3-89026-2001	. . CLIP, FLAP POSITION TRANSMITTER		1
6	30-1472-1	. STRIP, COVE LIP DOOR INDICATOR CABLE RUB.		1
		ATTACHING PARTS		
	MS20426D5	. RIVET		2
		-------*-------		
7	69-16729-1	. COVER, OUTBOARD FLAP POSITION TRANSMITTER		1
		ATTACHING PARTS		
	NAS603-9	. SCREW		4
	AN960D10	. WASHER.		4
	NAS679A3W	. NUT		2
		-------*-------		
8	66-13789-1	. SUPPORT ASSY, OUTBOARD FLAP POSITION TRANSMITTER. . . UPPER		1
		ATTACHING PARTS		
	NAS603-7	. SCREW		4
	NAS517-3-0	. SCREW		2
	AN960D10L	. WASHER.		4
		-------*-------		
9	5-97286-3003	. TRANSMITTER ASSY, FLAP POSITION (LH ONLY) (SEE FIG. 44)		1
9	5-97286-3004	. TRANSMITTER ASSY, FLAP POSITION (RH ONLY) (SEE FIG. 44)		1
		ATTACHING PARTS		
	AN3-4A	. BOLT.		4
	NAS679A3W	. NUT		2
		-------*-------		
10	5-87819-3015	. SUPPORT ASSY, OUTBOARD FLAP POSITION TRANSMITTER (LH ONLY)		1
10	5-87819-3016	. SUPPORT ASSY, OUTBOARD FLAP POSITION TRANSMITTER (RH ONLY)		1
		ATTACHING PARTS		
	MS20470D5	. RIVET . . . . . (OPTIONAL TO BACB30GZ5-2 (USED WITH BACC30P5))		8
	BACB30GZ5-2	. BOLT, (USED WITH BACC30P5). . . . . (OPTIONAL MS20470D5)		8
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

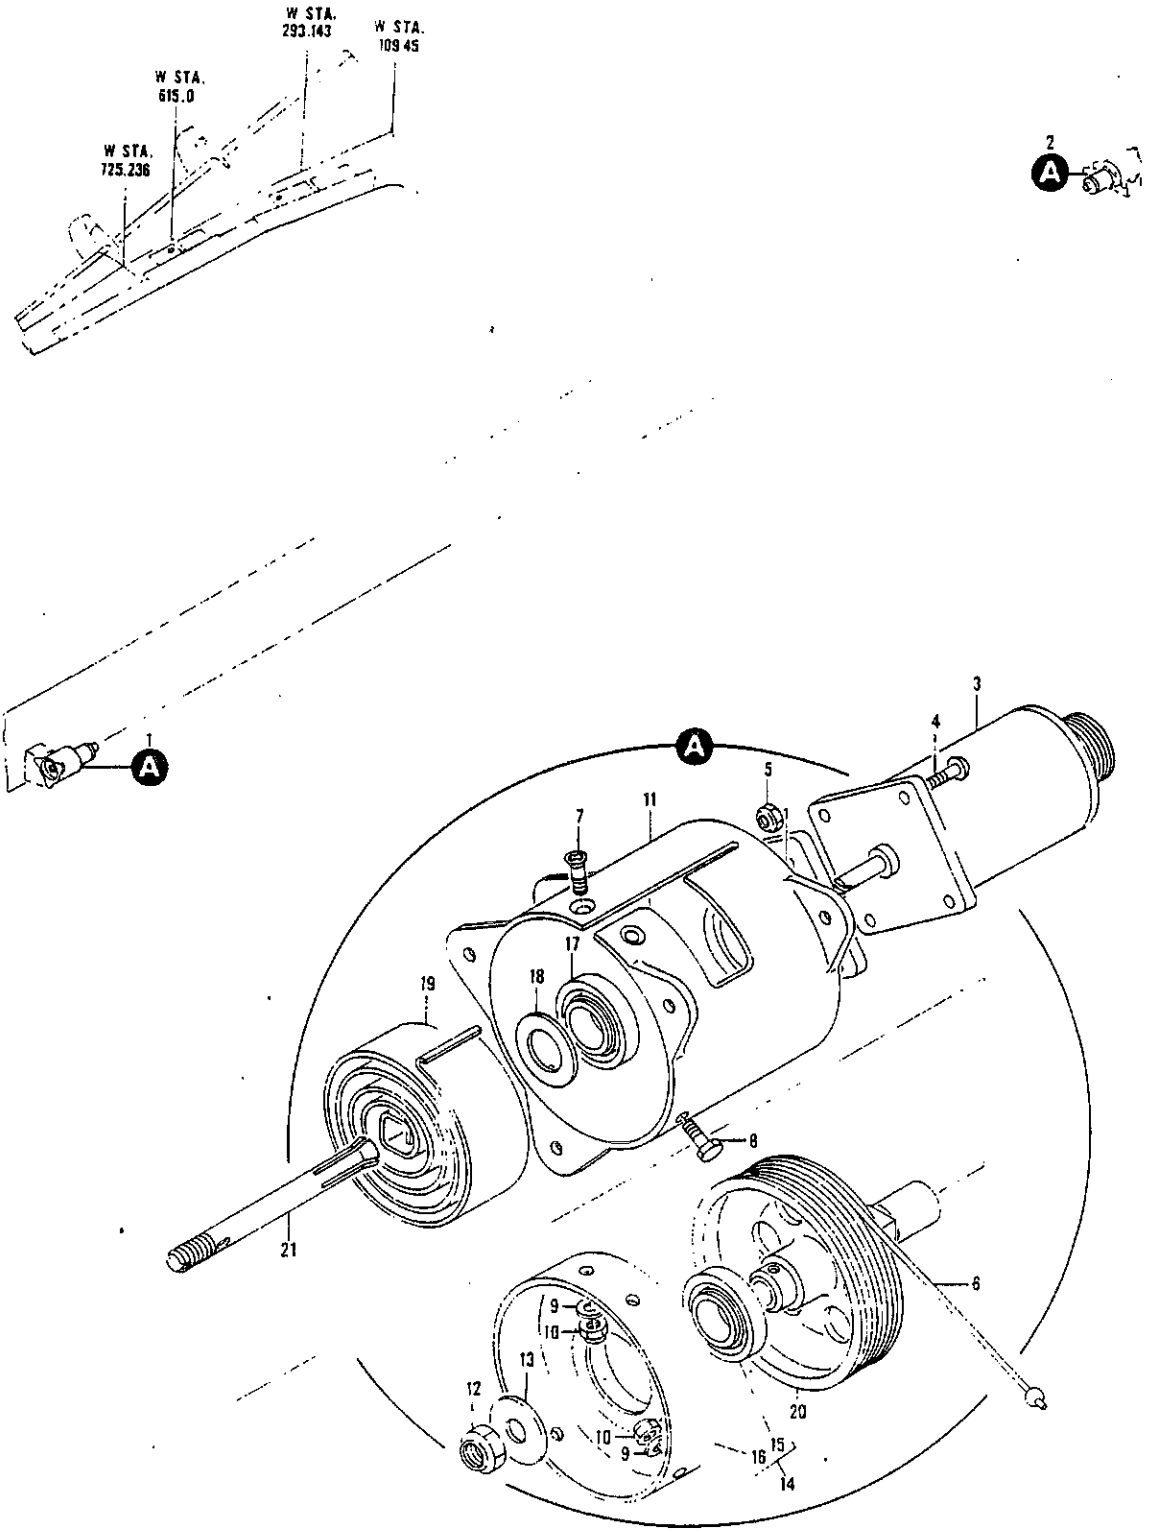


FIGURE 44. TRANSMITTER ASSY, FLAP POSITION

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	44 1	5-97286-3003	TRANSMITTER ASSY, FLAP POSITION (LH) (SEE FIG. 42,. . . ITEM 11 AND FIG. 43, ITEM 9)		RF
	1	5-97286-3004	TRANSMITTER ASSY, FLAP POSITION (RH) (SEE FIG. 42,. . . ITEM 11 AND FIG. 43, ITEM 9)		RF
	2	5-97286-3008	TRANSMITTER ASSY, FLAP POSITION (LH) (SEE FIG. 41,. . . ITEM 10)		RF
	2	5-97286-3007	TRANSMITTER ASSY, FLAP POSITION (RH) (SEE FIG. 41,. . . ITEM 10)		RF
	3	P35-1	. TRANSMITTER, FLAP POSITION (V97896) (BAC SPEC NO. . . 10-3089-1) (USED ON 5-97286-3003, -3004, -3008 AND -3007)		1
	3	10-3089-1	. TRANSMITTER, FLAP POSITION (PART NO. P35-1 (V97896)) (USED ON 5-97286-3003, -3004, -3008 AND -3007)		1
			ATTACHING PARTS		
	4	AN515-8R10	. SCREW		4
	5	BACN10EW2	. NUT . . . . . (OPTIONAL AN364-832)		4
	5	AN364-832	. NUT . . . . . (OPTIONAL TO BACN10EW2)		4
			-------*-------		
R R R R R	6	BACC2A3A00482HH	. CABLE ASSY, (ZINC-ONLY AND TIN-OVER-ZINC COATED . . . CABLES ARE INTERCHANGEABLE AND MAY BE INTERMIXED WITHIN A SYSTEM PROVIDING OPPOSITE CABLES WITHIN A GIVEN CABLE LOOP ARE REPLACE WITH CABLES OF THE SAME TYPE) (PER SL20-15)		1
R R R R R	6	BACC2A3E00482HH	. CABLE ASSY, (ZINC-ONLY AND TIN-OVER-ZINC COATED . . . CABLES ARE INTERCHANGEABLE AND MAY BE INTERMIXED WITHIN A SYSTEM PROVIDING OPPOSITE CABLES WITHIN A GIVEN CABLE LOOP ARE REPLACE WITH CABLES OF THE SAME TYPE) (PER SL20-15)		1
	6	BACC13G333-482	. CABLE ASSY. . . . . (OPTIONAL TO BACC2A3A00482HH)		1
R R R R R	6	BACC2A3E00482HH	. CABLE ASSY, (ZINC-ONLY AND TIN-OVER-ZINC COATED . . . CABLES ARE INTERCHANGEABLE AND MAY BE INTERMIXED WITHIN A SYSTEM PROVIDING OPPOSITE CABLES WITHIN A GIVEN CABLE LOOP ARE REPLACE WITH CABLES OF THE SAME TYPE) (PER SL20-15)		1
	7	NAS517-3-4	. SCREW		2
	8	AN3-5A	. BOLT.		2
	9	AN960D10	. WASHER.		4
	10	BACN10EW3	. NUT, (OPTIONAL AN364-1032).		4
		5-97211-3003	. HOUSING ASSY, (USED ON 5-97286-3003 AND -3009). . . .		1
		5-97211-3004	. HOUSING ASSY, (USED ON 5-97286-3004 AND -3010). . . .		1
	11	5-97211-2011	. . HOUSING, (USED ON 5-97211-3003)		1
	11	5-97211-2012	. . HOUSING, (USED ON 5-97211-3004)		1
	11	5-97211-3006	. HOUSING, FLAP POSITION TRANSMITTER (USED ON . . . . . 5-97286-3008 AND -3012)		1
	11	5-97211-3005	. HOUSING, FLAP POSITION TRANSMITTER (USED ON . . . . . 5-97286-3007 AND -3011)		1
	12	NAS509-6	. NUT		1
	13	BACW10P123S	. WASHER.		1
	14	9-54507-3001	. CAP ASSY, POSITION TRANSMITTER FLAP END		1
	15	AN201KP10A	. . BEARING		1
	16	9-54507-2001	. . CAP, POSITION TRANSMITTER FLAP END.		1
	17	AN201KP10A	. BEARING		1
	18	AN960-1016	. WASHER.		1
	19	6-66790-2	. SPRING, POSITION TRANSMITTER FLAP (OPTIONAL AND FOR . REPLACEMENT ORDER 6-66790-3)		1
	19	6-66790-3	. SPRING, POSITION TRANSMITTER FLAP . . . . . (OPTIONAL TO AND REPLACEMENT FOR 6-66790-2)		1
	20	5-97253-2001	. DRUM, POSITION TRANSMITTER FLAP (LH ONLY)		1
	20	5-97253-2002	. DRUM, POSITION TRANSMITTER FLAP (RH ONLY)		1
	21	6-66785	. COLLET, POSITION TRANSMITTER FLAP		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

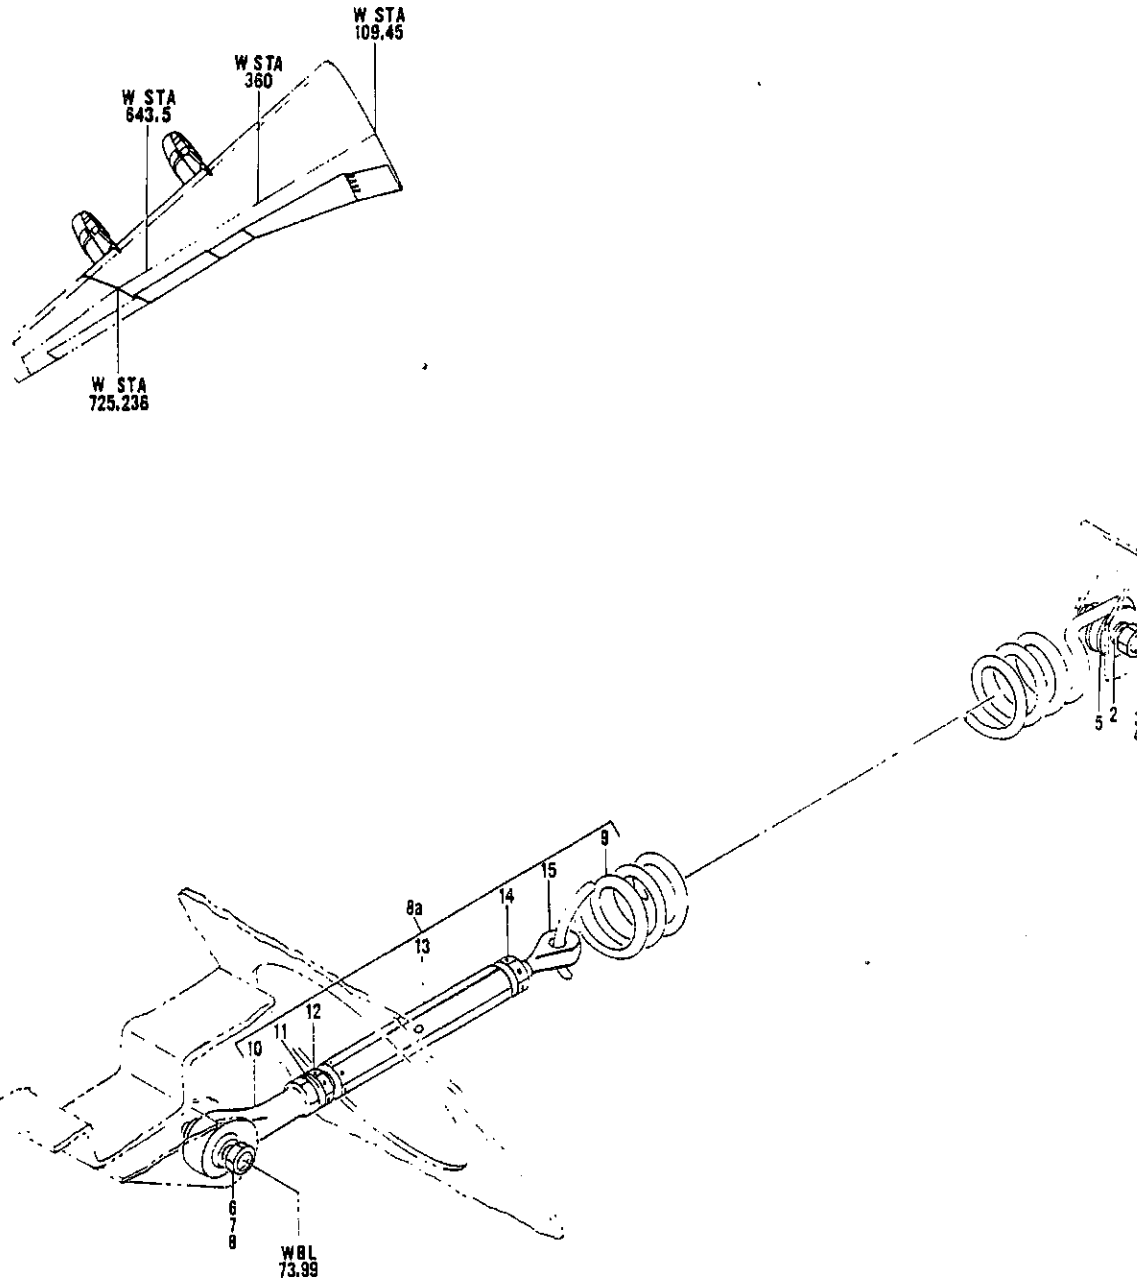


FIGURE 46 ACTUATOR INSTL, FILLET FLAP SEAL

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
46	65-19589-1	ACTUATOR INSTL, FILLET FLAP SEAL LH (SEE 27-6, FIG. 29, ITEM 1)		RF
	65-19589-2	ACTUATOR INSTL, FILLET FLAP SEAL RH (SEE 27-6, FIG. 29, ITEM 1)		RF
1	NAS1104-11	. BOLT.		1
2	NAS1057T4-27	. SPACER.		1
3	AN960PD416	. WASHER.		1
4	BACN10JC4	. NUT		1
5	66-13304-1	. BEARING, FILLET FLAP SEAL SPRING END.		1
6	NAS1104-10DW	. BOLT.		1
7	AN960PD416	. WASHER.		1
8	AN310C4	. NUT		1
8A	65-19589-3	. TURNBUCKLE ASSY, FILLET FLAP SEAL ACTUATOR.		1
9	69-15393-1	. . SPRING, FILLET FLAP SEAL ACTUATOR EXTENSION		1
10	BACB10A192D	. . BEARING		1
11	AN960C416L	. . WASHER.		AR
11	AN960F416L	. . WASHER.		AR
11	AN960-416	. . WASHER.		AR
12	66-12948-1	. . ROD, FILLET FLAP SEAL ACTUATOR TURNBUCKLE		1
13	66-12946-1	. . BARREL, FILLET FLAP SEAL ACTUATOR TURNBUCKLE.		1
14	NAS509L4	. . NUT		1
15	66-12942-1	. . EYE, FILLET FLAP SEAL ACTUATOR TURNBUCKLE		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

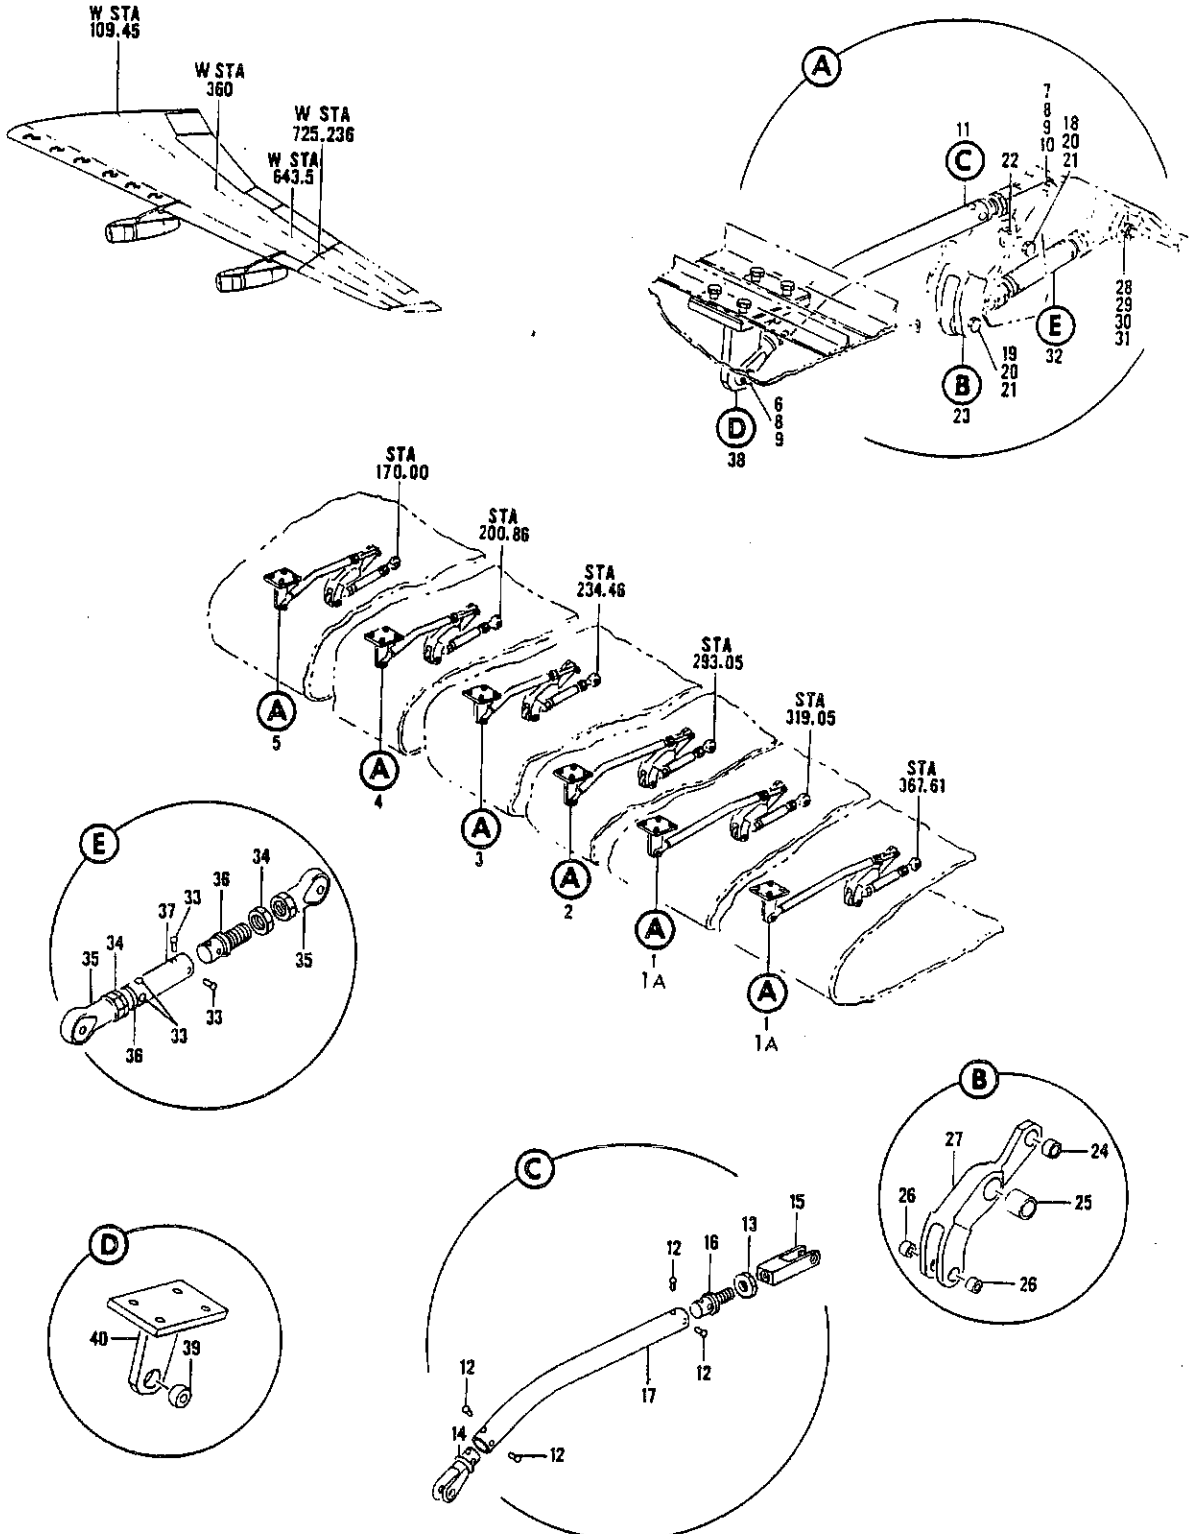


FIGURE 49. LINK INSTL, INBOARD WING LEADING EDGE FLAP FAIR MECHANISM

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	49 1	65-32296-1	LINK INSTL, FRONT SPAR STATION 367.61 AND 319.05. . . . INBOARD WING LEADING EDGE FLAP FAIRING MECHANISM (SEE 57-4, FIG. 8, ITEM 1) (OPTIONAL 65-32296-6)	0150	RF
R	1	65-32296-6	LINK INSTL, FRONT SPAR STATION 367.61 AND 319.05. . . . INBOARD WING LEADING EDGE FLAP FAIRING MECHANISM (SEE 57-4, FIG. 8, ITEM 1) (OPTIONAL TO 65-32296-1)	0150	RF
R	1	65-32296-6	LINK INSTL, FRONT SPAR STATION 367.61 AND 319.05. . . . INBOARD WING LEADING EDGE FLAP FAIRING MECHANISM (SEE 57-4, FIG. 8, ITEM 1)	5199	RF
R	1A	65-32296-1	LINK INSTL, FRONT SPAR STATION 367.61 AND 319.05. . . . INBOARD WING LEADING EDGE FLAP FAIRING MECHANISM (SEE 57-4, FIG. 8, ITEM 1) (OPTIONAL 65-32296-6)	0150	RF
R	1A	65-32296-6	LINK INSTL, FRONT SPAR STATION 367.61 AND 319.05. . . . INBOARD WING LEADING EDGE FLAP FAIRING MECHANISM (SEE 57-4, FIG. 8, ITEM 1) (OPTIONAL TO 65-32296-1)	0150	RF
R	1A	65-32296-6	LINK INSTL, FRONT SPAR STATION 367.61 AND 319.05. . . . INBOARD WING LEADING EDGE FLAP FAIRING MECHANISM (SEE 57-4, FIG. 8, ITEM 1)	5199	RF
R	2	65-32296-2	LINK INSTL, FRONT SPAR STATION 293.05 INBOARD WING. . . LEADING EDGE FLAP FAIRING MECHANISM (SEE 57-4, FIG. 8, ITEM 2) (OPTIONAL 65-32296-7)	0150	RF
R	2	65-32296-7	LINK INSTL, FRONT SPAR STATION 293.05 INBOARD WING. . . LEADING EDGE FLAP FAIRING MECHANISM (SEE 57-4, FIG. 8, ITEM 2) (OPTIONAL TO 65-32296-2)	0150	RF
R	2	65-32296-7	LINK INSTL, FRONT SPAR STATION 293.05 INBOARD WING. . . LEADING EDGE FLAP FAIRING MECHANISM (SEE 57-4, FIG. 8, ITEM 2)	5199	RF
R	3	65-32296-3	LINK INSTL, FRONT SPAR STATION 234.46 INBOARD WING. . . LEADING EDGE FLAP FAIRING MECHANISM (SEE 57-4, FIG. 8, ITEM 3) (OPTIONAL 65-32296-8)	0150	RF
R	3	65-32296-8	LINK INSTL, FRONT SPAR STATION 234.46 INBOARD WING. . . LEADING EDGE FLAP FAIRING MECHANISM (SEE 57-4, FIG. 8, ITEM 3) (OPTIONAL TO 65-32296-3)	0150	RF
R	3	65-32296-8	LINK INSTL, FRONT SPAR STATION 200.86 INBOARD WING. . . LEADING EDGE FLAP FAIRING MECHANISM (SEE 57-4, FIG. 8, ITEM 3)	5199	RF
R	4	65-32296-4	LINK INSTL, FRONT SPAR STATION 200.86 INBOARD WING. . . LEADING EDGE FLAP FAIRING MECHANISM (SEE 57-4, FIG. 8, ITEM 4) (OPTIONAL 65-32296-9)	0150	RF
R	4	65-32296-9	LINK INSTL, FRONT SPAR STATION 200.86 INBOARD WING. . . LEADING EDGE FLAP FAIRING MECHANISM (SEE 57-4, FIG. 8, ITEM 4) (OPTIONAL TO 65-32296-4)	0150	RF
R	4	65-32296-9	LINK INSTL, FRONT SPAR STATION 200.86 INBOARD WING. . . LEADING EDGE FLAP FAIRING MECHANISM (SEE 57-4, FIG. 8, ITEM 4)	5199	RF
R	5	65-32296-5	LINK INSTL, FRONT SPAR STATION 170.00 INBOARD WING. . . LEADING EDGE FLAP FAIRING MECHANISM (SEE 57-4, FIG. 8, ITEM 5) (OPTIONAL 65-32296-10)	0150	RF
R	5	65-32296-10	LINK INSTL, FRONT SPAR STATION 170.00 INBOARD WING. . . LEADING EDGE FLAP FAIRING MECHANISM (SEE 57-4, FIG. 8, ITEM 5) (OPTIONAL TO 65-32296-5)	0150	RF
R	5	65-32296-10	LINK INSTL, FRONT SPAR STATION 170.00 INBOARD WING. . . LEADING EDGE FLAP FAIRING MECHANISM (SEE 57-4, FIG. 8, ITEM 5)	5199	RF
	6	NAS1104-9DW	. BOLT.		1
	7	NAS1104-10DW	. BOLT.		1
	8	AN960-416L	. WASHER.		2
	9	AN320-4	. NUT		2
	10	NAS72-4E006	. BUSHING		1
	11	65-32272-1	. LINK ASSY, FRONT SPAR STATIONS 367.61 AND 319.05. . . LEADING EDGE FLAP FAIRING MECHANISM (USED ON 65-32296-1, -6)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	49 11	65-32272-2	. LINK ASSY, FRONT SPAR STATION 293.05 LEADING EDGE . . FLAP FAIRING MECHANISM (USED ON 65-32296-2, -7)		1
	11	65-32272-5	. LINK ASSY, FRONT SPAR STATION 234.46 LEADING EDGE . . FLAP FAIRING MECHANISM (USED ON 65-32296-3, -8)		1
	11	65-32272-4	. LINK ASSY, FRONT SPAR STATION 200.86 LEADING EDGE . . FLAP FAIRING MECHANISM (USED ON 65-32296-4,-9)		1
	11	65-32272-3	. LINK ASSY, FRONT SPAR STATION 170.00 LEADING EDGE . . FLAP FAIRING MECHANISM (USED ON 65-32296-5, -10)		1
	12	MS20613-4C	. . RIVET		4
	13	AN316-5R	. . NUT		1
	14	66-13356-1	. . FORK, INBOARD WING LEADING EDGE FLAP MECHANISM ROD END		1
	15	66-18817-1	. . FORK, LEADING EDGE FLAP FAIRING MECHANISM ROD END . (NOT USED ON 65-32272-2)		1
R R	15	69-26559-1	. . FORK, LEADING EDGE FLAP FAIRING MECHANISM ROD END . (USED ON 65-32272-2)	0150	1
	16	AN490HT15P	. . ROD END		1
	17	65-32272-6	. . TUBE, FRONT SPAR STATIONS 367.61 AND 319.05 . . . . LEADING EDGE FLAP FAIRING MECHANISM LINK (USED ON 65-32272-1)		1
	17	65-32272-7	. . TUBE, FRONT SPAR STATION 293.05 LEADING EDGE FLAP . FAIRING MECHANIM LINK (USED ON 65-32272-2, -7)		1
	17	65-32272-10	. . TUBE, FRONT SPAR STATION 234.46 LEADING EDGE FLAP . FAIRING MECHANISM LINK (USED ON 65-32272-5, -10)		1
	17	65-32272-9	. . TUBE, FRONT SPAR STATION 200.86 LEADING EDGE FLAP . FAIRING MECHANISM LINK (USED ON 65-32272-48-9		1
	17	65-32272-8	. . TUBE, FRONT SPAR STATION 170.00 LEADING EDGE FLAP . FAIRING MECHANISM LINK (USED ON 65-32272-3,-8)		1
	18	NAS1105-32DW	. BOLT.		1
	19	NAS1105-13DW	. BOLT.		1
	20	AN960PD516	. WASHER.		2
	21	AN320-5	. NUT		2
	22	NAS72-58011	. BUSHING		1
R R	23	69-25624-1	. ARM ASSY, INBOARD WING LEADING EDGE FLAP MECHANISM. . LINK	0150	1
	23	69-25624-3	. ARM ASSY.		1
	24	10-60516-102	. . BUSHING, SELF LUBRICATED JOURNAL.		1
	25	10-60516-103	. . BUSHING, SELF LUBRICATED JOURNAL.		1
	26	NAS76A5-006P	. . BUSHING		2
	27	69-25624-2	. . ARM, INBOARD WING LEADING EDGE FLAP MECHANISM LINK		1
	28	NAS1105-16DW	. BOLT.		1
	29	AN960PD516	. WASHER.		1
	30	AN320-5	. NUT		1
	31	NAS74A5-005P	. BUSHING		1
	32	66-18815-1	. LINK ASSY, LEADING EDGE FLAP FAIRING MECHANISM. . .		1
	33	MS20615-4M	. . RIVET		4
	34	AN316-6R	. . NUT		2
	35	10-60779-210	. . BEARING, SELF LUBRICATED ROD END.		2
	36	AN490HT16P	. . ROD END		2
	37	66-18815-2	. . TUBE, LEADING EDGE FLAP FAIRING MECHANISM LINK. .		1
	38	66-18816-1	. BRACKET ASSY, INBOARD WING LEADING EDGE . . . . . ATTACHING PARTS		1
		NAS1104-5W	. BOLT.		4
		AN960PD416	. WASHER.		4
		BACS40B32-43	. SHIM.		1
		NAS679A4W	. NUT		4
			-------*-------		
	39	10-60545-111S	. . BEARING, TEFLON LUBRICATED SPHERICAL.		1
	40	66-18816-2	. . BRACKET, INBOARD WING LEADING EDGE.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

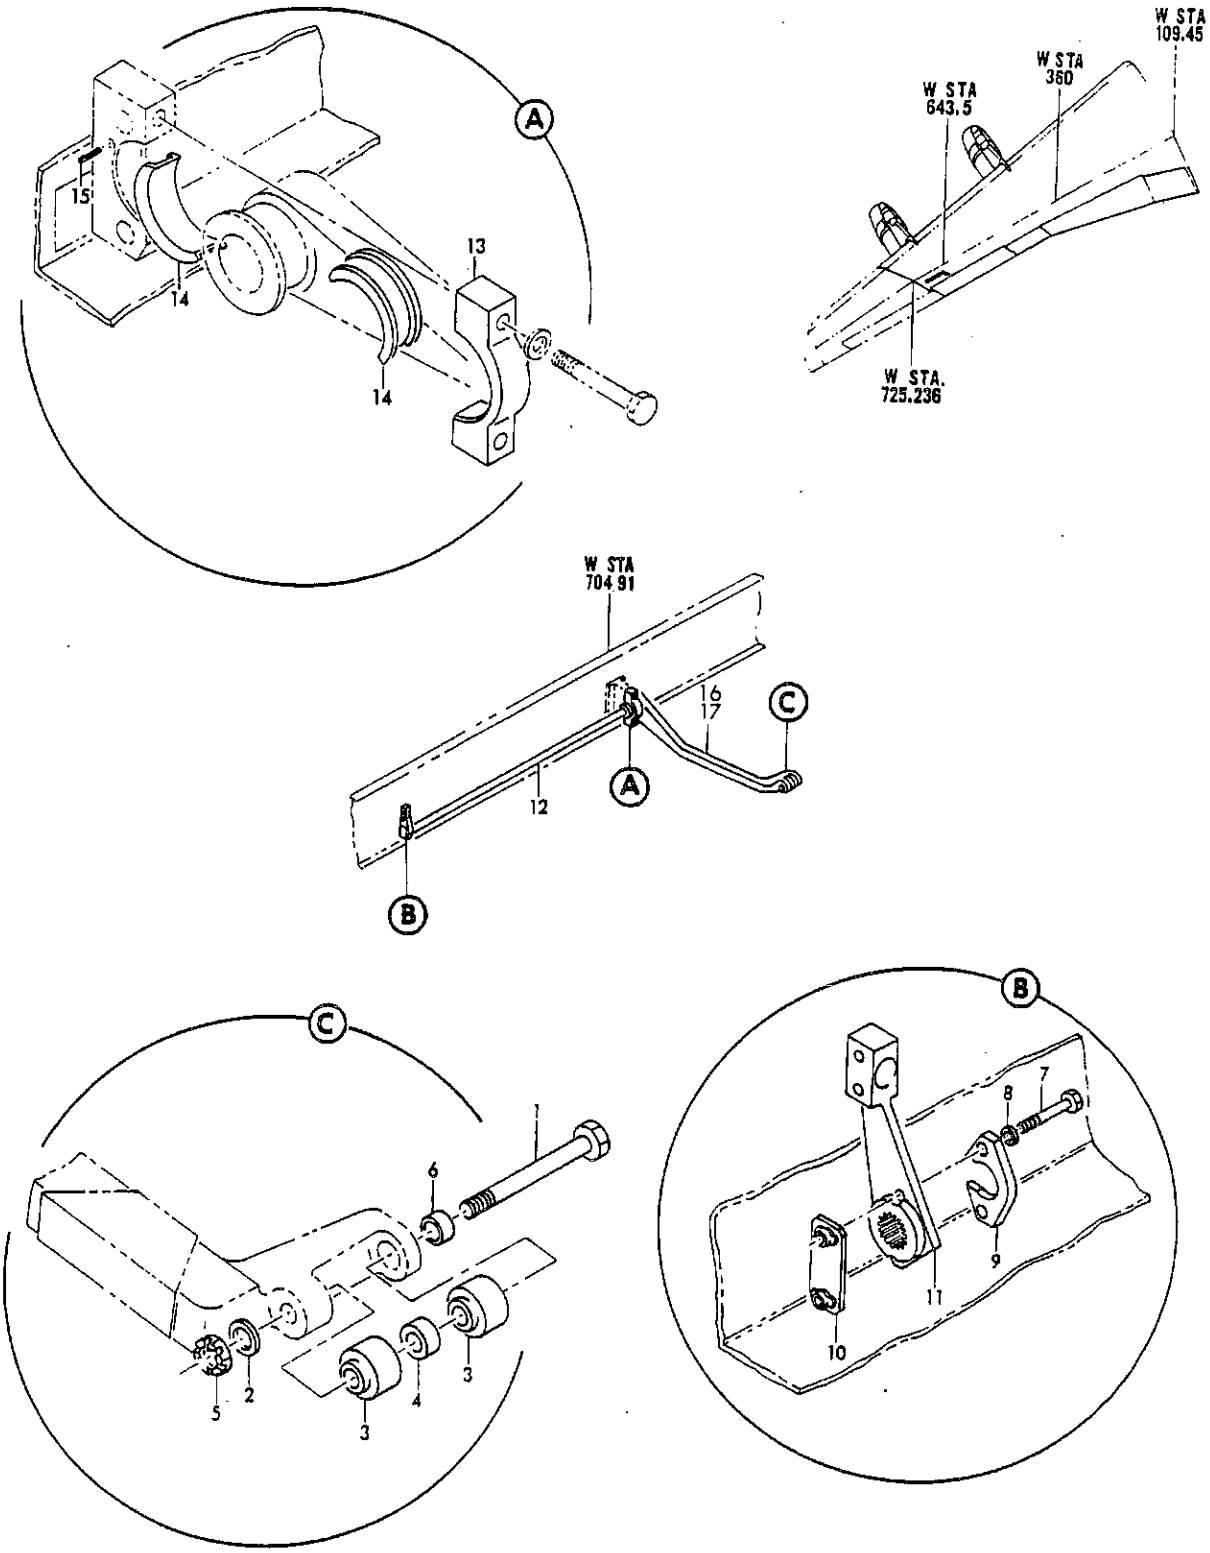


FIGURE 51. ACTUATION INSTL, OUTBOARD COVE LIP DOOR (FLIGHT CONTROL ONLY)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	51	65-18940-5	ACTUATION INSTL, OUTBOARD COVE LIP DOOR (FLIGHT CONTROL ONLY) (LH) (SEE FIG. 37, ITEM 101)		RF
		65-18940-6	ACTUATION INSTL, OUTBOARD COVE LIP DOOR (FLIGHT CONTROL ONLY) (RH) (SEE FIG. 37, ITEM 101)		RF
R	1	NAS1105-340	. BOLT.	0150	1
R	1	BACB30NF5D44	. BOLT.	5199	1
R	2	AN960PD516L	. WASHER.	0150	1
R	2	AN960PD516	. WASHER.	5199	1
	3	BACB10C52	. BEARING		2
	4	NAS43DD5-14	. SPACER.		1
R	5	AN320-5	. NUT	0150	1
R	5	BACN10JD105	. NUT	5199	1
	6	66-13258-1	. BUSHING, COVE LIP DOOR ACTUATION ARM CLAMP UP		1
	7	AN4-16A	. BOLT.		2
	8	AN960PD416L	. WASHER.		2
	9	69-15757-1	. SLEEVE, COVE LIP DOOR TORSION BAR RETAINER.		1
	10	66-13231-1	. PLATE ASSY, COVE LIP DOOR TORSION BAR RETAINER.		1
R	11	65-19890-1	. BRACKET, OUTBOARD COVE LIP DOOR TORSION BAR (OPTIONAL TO 65-19890-2)	0150	1
R	11	65-19890-2	. BRACKET, OUTBOARD COVE LIP DOOR TORSION BAR (OPTIONAL 65-19890-1)	0150	1
R	11	65-19890-2	. BRACKET, OUTBOARD COVE LIP DOOR TORSION BAR	5199	1
			ATTACHING PARTS		
		NAS1104-18	. BOLT.		2
		AN960PD416	. WASHER.		2
		NAS679A4W	. NUT		2
			-------*-------		
	12	65-18906-6	. BAR, COVE LIP DOOR ACTUATION TORSION.		1
	13	65-19422-4	. CAP, OUTBOARD COVE LIP DOOR TORSION BAR BEARING HOUSING BEARING		1
			ATTACHING PARTS		
		NAS1304-27	. BOLT.		2
		AN960PD416L	. WASHER.		2
		NAS577-4A	. NUT		2
			-------*-------		
	14	66-12871-1	. BUSHING, COVE LIP DOOR TORSION BAR BEARING.		2
	15	NAS561P4-12	. PIN		1
R	16	65-19484-2	. ARM, (LH ONLY) (DELETED BY SB 3020)	0150	1
R	16	65-19484-1	. ARM, (RH ONLY) (DELETED BY SB 3020)	0150	1
R	16	65-82554-2	. ARM, (LH ONLY).	5199	1
R	16	65-82554-1	. ARM, (RH ONLY).	5199	1
R	17	65-19484-5	. ARM, (RH ONLY) (ADDED BY SB 3020)	0150	1
R	17	65-19484-6	. ARM, (LH ONLY) (ADDED BY SB 3020)	0150	1
			. FOR REFERENCE TO OTHER ACTUATION DETAILS, SEE NHA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

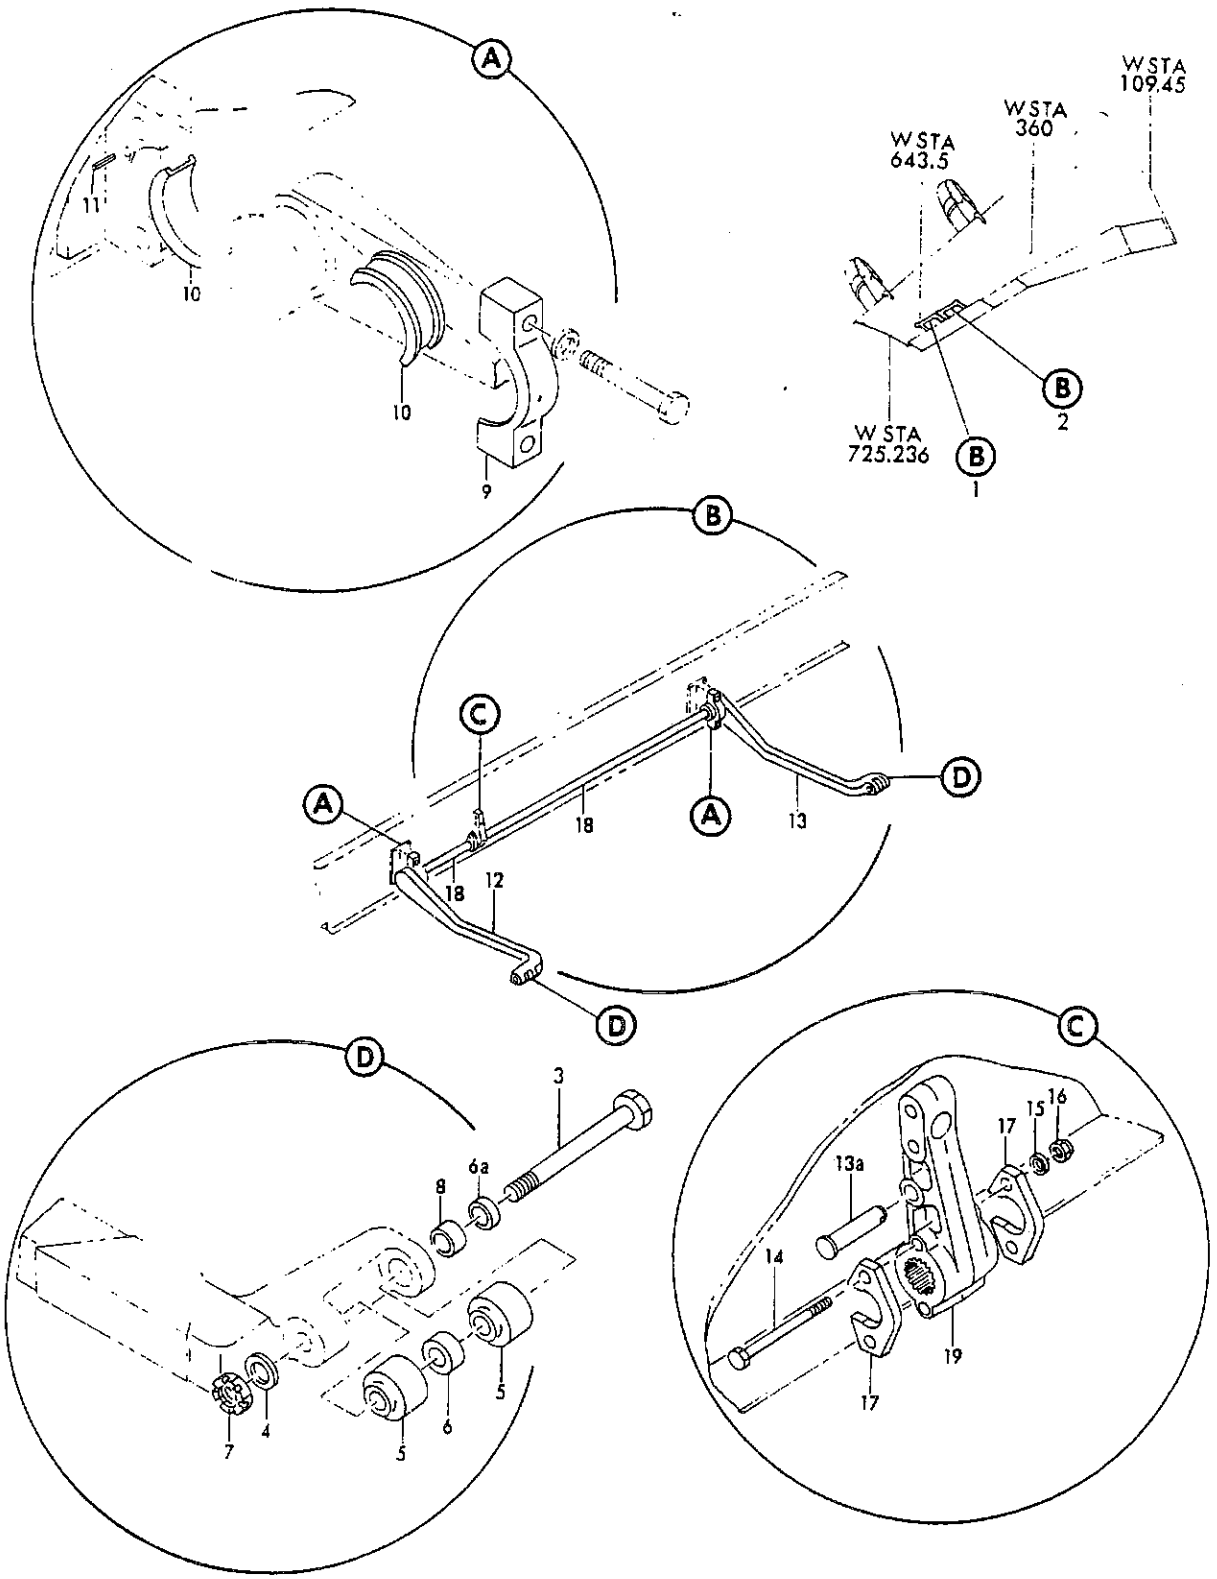


FIGURE 52. ACTUATION INSTL, OUTBOARD COVE LIP DOOR (FLIGHT CONTROL ONLY)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	52 1	65-18940-3	ACTUATION INSTL, OUTBOARD COVE LIP DOOR (FLIGHT CONTROL ONLY) (LH) (SEE FIG. 37, ITEM 102)		RF
	1	65-18940-4	ACTUATION INSTL, OUTBOARD COVE LIP DOOR (FLIGHT CONTROL ONLY) (RH) (SEE FIG. 37, ITEM 102)		RF
	2	65-18940-1	ACTUATION INSTL, OUTBOARD COVE LIP DOOR (FLIGHT CONTROL ONLY) (LH) (SEE FIG. 37, ITEM 103)		RF
	2	65-18940-2	ACTUATION INSTL, OUTBOARD COVE LIP DOOR (FLIGHT CONTROL ONLY) (RH) (SEE FIG. 37, ITEM 103)		RF
R	3	NAS1105-34DW	. BOLT.	0150	2
R			(OPTIONAL TO NAS1105-38DW WITH 66-18393-1)		
R	3	NAS1105-38DW	. BOLT, (USED WITH 66-18393-1).	0150	2
R			(OPTIONAL TO NAS1105-34DW)		
R	3	BACB30NF5D44	. BOLT.	5199	2
R			(OPTIONAL TO BACB30NF5D48 WITH 66-18393-1)		
R	3	BACB30NFD548	. BOLT, (USED WITH 66-18393-1).	5199	2
R			(OPTIONAL TO BACB30NF5D44)		
R	4	AN960PD516L	. WASHER.	0150	2
R	4	AN960PD516	. WASHER.	5199	4
	5	BACB10C52	. BEARING		4
	6	NAS43DD5-14	. SPACER.		2
	6A	66-18393-1	. SPACER, OUTBOARD COVE LIP DOOR ACTUATION ARM (USED. . WITH NAS1105-38DW AND BACB30NF5D48)		2
R	7	AN320-5	. NUT	0150	2
R	7	BACN10JD105	. NUT	5199	2
	8	66-13258-1	. BUSHING, COVE LIP DOOR ACTUATION ARM CLAMP UP		2
	9	65-19422-4	. CAP, OUTBOARD COVE LIP DOOR TORSION BAR BEARING . . . HOUSING BEARING		2
			ATTACHING PARTS		
		NAS1304-27W	. BOLT.		4
		AN960PD416L	. WASHER.		4
		NAS577-4A	. NUT		4
			-------*-------		
	10	66-12871-1	. BUSHING, COVE LIP DOOR TORSION BAR BEARING.		4
	11	NAS561P4-12	. PIN		2
R	12	65-19484-1	. ARM, (DELETED BY SB 3020)	0150	1
R	12	65-19484-5	. ARM, (ADDED BY SB 3020)	0150	1
R	12	65-82554-1	. ARM	5199	1
R	13	65-19484-2	. ARM, (DELETED BY SB 3020)	0150	1
R	13	65-19484-6	. ARM, (ADDED BY SB 3020)	0150	1
R	13	65-82554-2	. ARM	5199	1
	13A	MS20392-5-51	. PIN		1
	14	AN4-26A	. BOLT.		2
	15	AN960PD416L	. WASHER.		2
	16	NAS679A4W	. NUT		2
	17	69-15757-1	. SLEEVE, COVE LIP DOOR TORSION BAR RETAINER.		2
	18	65-18906-4	. BAR, COVE LIP DOOR ACTUATION TORSION (USED ON . . . . 65-18940-3 AND -4)		2
	18	65-18906-5	. BAR, COVE LIP DOOR ACTUATION TORSION (USED ON . . . . 65-18940-1 AND -2)		2
	19	65-28555-1	. BRACKET, OUTBOARD COVE LIP DOOR TORSION BAR (OPTIONAL 69-23361-1) (USED ON 65-18940-3 AND -4)		1
	19	69-23361-1	. BRACKET, OUTBOARD COVE LIP DOOR TORSION BAR (USED ON 65-18940-3 AND -4) (OPTIONAL TO 65-28555-1)		1
	19	65-28555-2	. BRACKET, OUTBOARD COVE LIP DOOR TORSION BAR (OPTIONAL 69-23361-2) (USED ON 65-18940-1 AND -2)		1
	19	69-23361-2	. BRACKET, OUTBOARD COVE LIP DOOR TORSION BAR (USED ON 65-18940-1 AND -2) (OPTIONAL TO 65-28555-2)		1
			ATTACHING PARTS		
		NAS1105-25W	. BOLT.		2
		AN960PD516	. WASHER.		2
		NAS679A5	. NUT		2
			-------*-------		
			. FOR REFERENCE TO OTHER ACTUATION DETAILS, SEE NHA . .		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

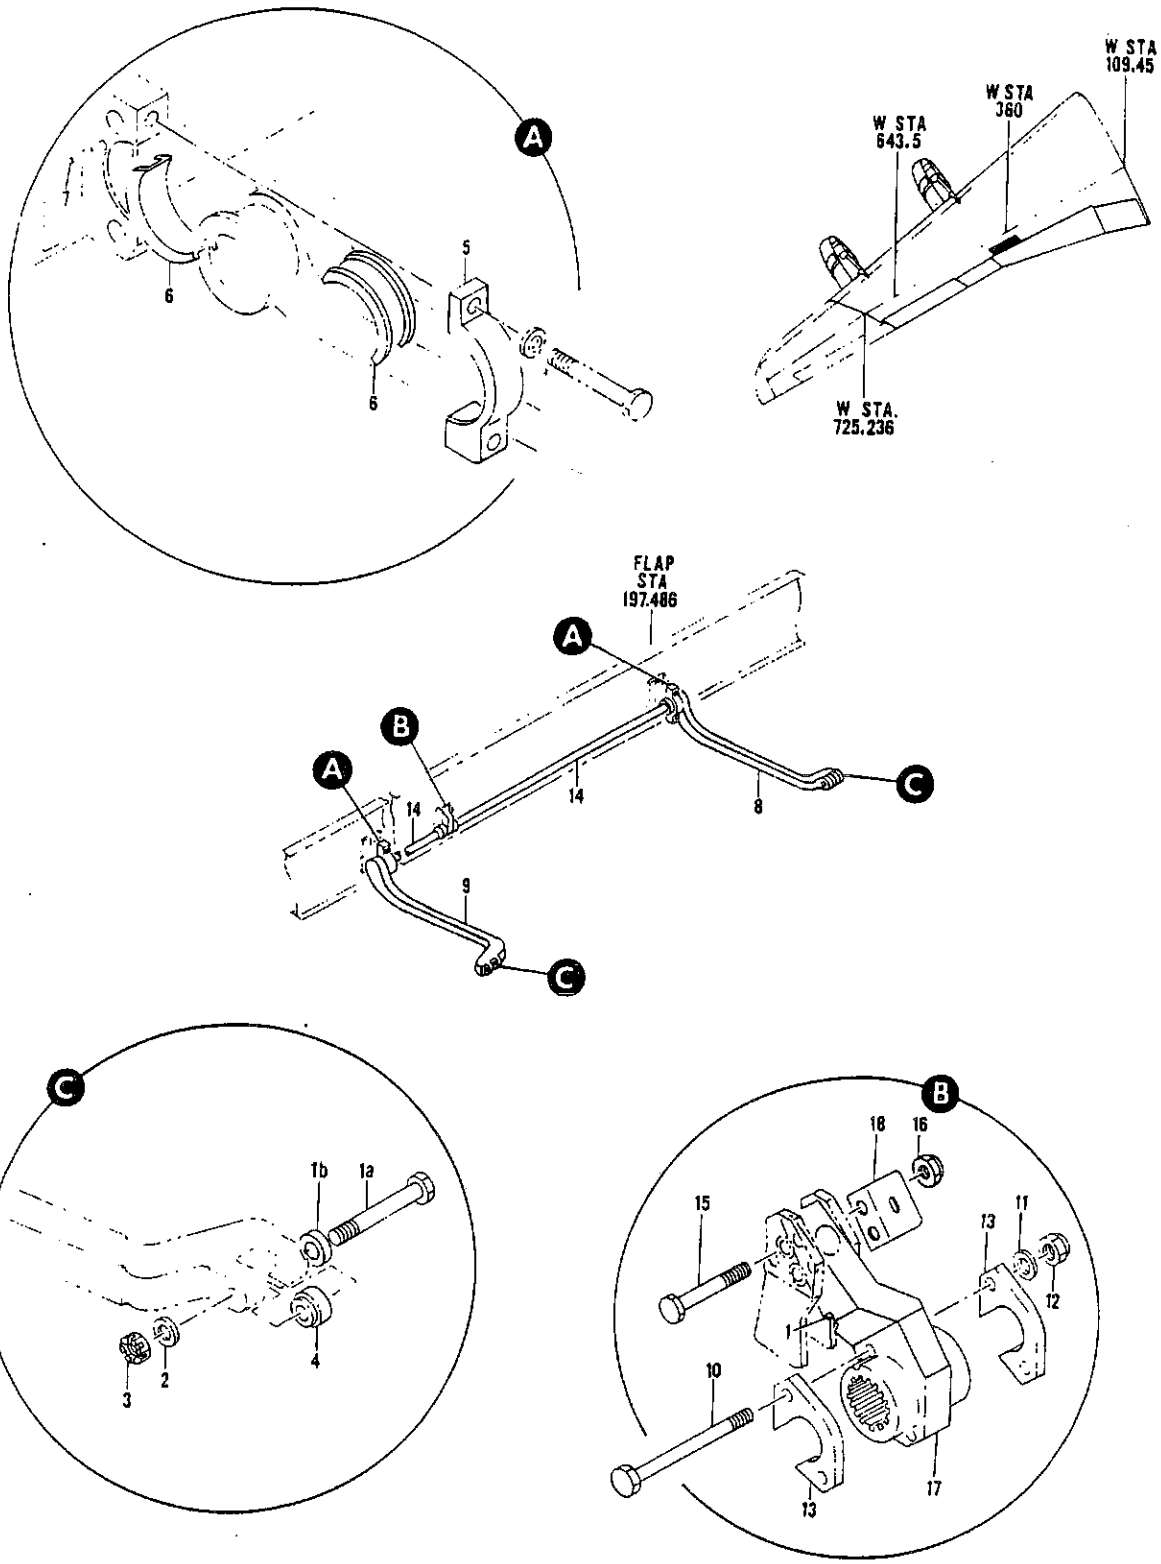


FIGURE 53. ACTUATION INSTL, INBOARD COVE LIP DOOR

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	53	65-18941-5	ACTUATION INSTL, INBOARD COVE LIP DOOR (LH) (SEE FIG. 37, ITEM 104)		RF
		65-18941-6	ACTUATION INSTL, INBOARD COVE LIP DOOR (RH) (SEE FIG. 37, ITEM 104)		RF
	1	BACM10L1CWK	. MARKER-ALUMINUM FOIL.		1
	1A	NAS1105-34DW	. BOLT.		2
	1B	66-16663-1	. SPACER, INBOARD COVE LIP DOOR ACTUATION ARM		2
	2	AN960PD516	. WASHER.		2
	3	AN320-5	. NUT		2
	4	BACB10C52	. BEARING		2
R	5	69-15858-2	. CAP, INBOARD COVE LIP DOOR TORSION BAR BEARING.	5299	2
R			HOUSING BEARING		
R	5	69-15858-4	. CAP, INBOARD COVE LIP DOOR TORSION BAR BEARING.	0151	2
R			HOUSING BEARING		
R			(OPTIONAL 69-15858-2)		
R	5	69-15858-2	. CAP, INBOARD COVE LIP DOOR TORSION BAR BEARING.	0151	2
R			HOUSING BEARING		
R			(OPTIONAL TO 69-15858-4)		
			ATTACHING PARTS		
		NAS1104-28W	. BOLT.		2
		NAS1104-34W	. BOLT.		2
		AN960PD416	. WASHER.		4
		NAS679A4W	. NUT		4
			-------*-------		
	6	66-12871-2	. BUSHING, COVE LIP DOOR TORSION BAR BEARING.		4
	7	NAS561P4-12	. PIN		2
R	8	65-19472-1	. ARM, INBOARD COVE LIP DOOR ACTUATION.	0150	1
R			(OPTIONAL TO 65-19472-11)		
R	8	65-19472-11	. ARM, INBOARD COVE LIP DOOR ACTUATION.	0150	1
R			(OPTIONAL 65-19472-1)		
R	8	65-19472-11	. ARM, INBOARD COVE LIP DOOR ACTUATION.	5199	1
R	9	65-19472-2	. ARM, INBOARD COVE LIP DOOR ACTUATION.	0150	1
R			(OPTIONAL TO 65-19472-12)		
R	9	65-19472-12	. ARM, INBOARD COVER LIP DOOR ACTUATION	0150	1
R			(OPTIONAL 65-19472-2)		
R	9	65-19472-12	. ARM, INBOARD COVE LIP DOOR ACTUATION.	5199	1
	10	AN4-26A	. BOLT.		2
	11	AN960PD416L	. WASHER.		2
	12	NAS679A4W	. NUT		2
	13	69-15757-1	. SLEEVE, COVE LIP DOOR TORSION BAR RETAINER.		2
	14	65-18906-7	. BAR, COVE LIP DOOR ACTUATION TORSION.		2
	15	NAS1105-19W	. BOLT.		2
	16	NAS679A5	. NUT		2
R	17	65-21991-3	. BRACKET, INBOARD COVE LIP DOOR TORSION BAR (LH ONLY)	0150	1
R			(OPTIONAL TO 65-21991-5)		
R	17	65-21991-5	. BRACKET, INBOARD COVE LIP DOOR TORSION BAR (LH ONLY)	0150	1
R			(OPTIONAL 65-21991-3)		
R	17	65-21991-5	. BRACKET, INBOARD COVE LIP DOOR TORSION BAR (LH ONLY)	5199	1
R	17	65-21991-4	. BRACKET, INBOARD COVE LIP DOOR TORSION BAR (RH ONLY)	0150	1
R			(OPTIONAL TO 65-21991-6)		
R	17	65-21991-6	. BRACKET, INBOARD COVE LIP DOOR TORSION BAR (RH ONLY)	0150	1
R			(OPTIONAL 65-21991-4)		
R	17	65-21991-6	. BRACKET, INBOARD COVE LIP DOOR TORSION BAR (RH ONLY)	5199	1
	18	66-15878-4	. CLIP, WIRE BUNDLE SUPPORT		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

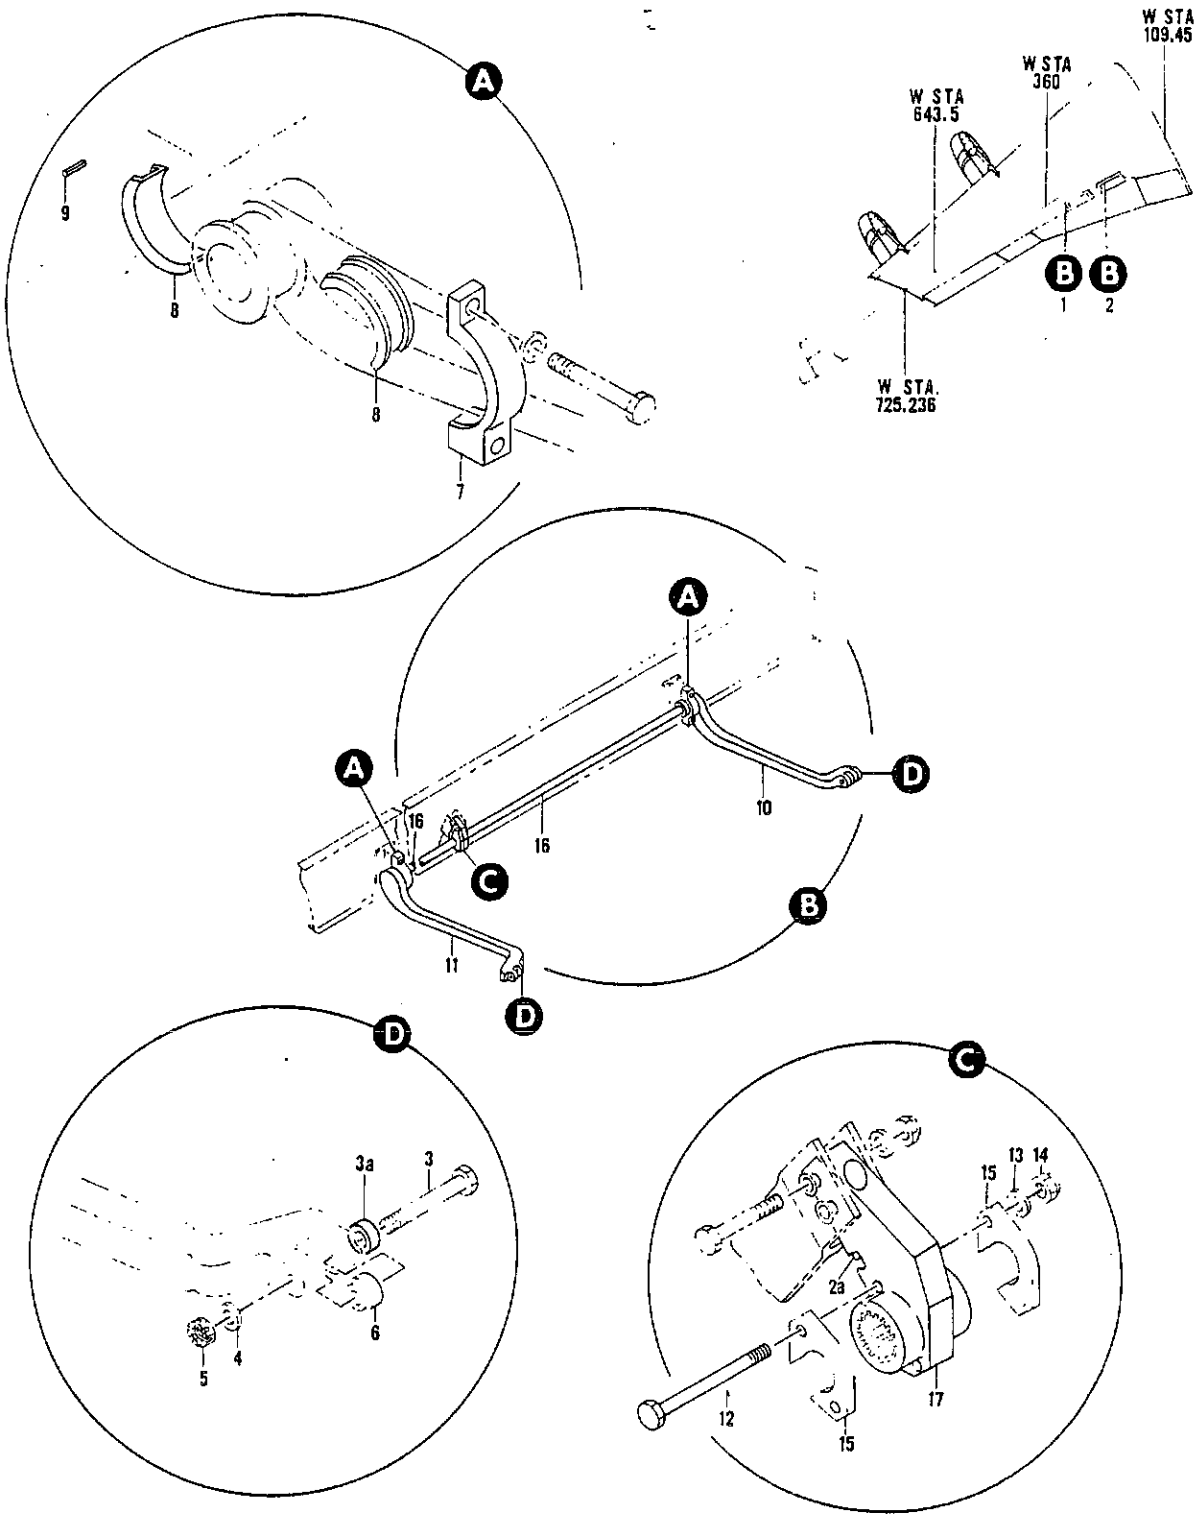


FIGURE 54. ACTUATION INSTL, INBOARD COVE LIP DOOR

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	54 1	65-18941-3	ACTUATION INSTL, INBOARD COVE LIP DOOR (LH) (SEE FIG. 37, ITEM 105)		RF
	1	65-18941-4	ACTUATION INSTL, INBOARD COVE LIP DOOR (RH) (SEE FIG. 37, ITEM 105)		RF
	2	65-18941-1	ACTUATION INSTL, INBOARD COVE LIP DOOR (LH) (SEE FIG. 37, ITEM 106)		RF
	2	65-18941-2	ACTUATION INSTL, INBOARD COVE LIP DOOR (RH) (SEE FIG. 37, ITEM 106)		RF
	2A	BACM10L1CWK	. MARKER-ALUMINUM FOIL.		1
	3	NAS1105-34DW	. BOLT.		2
	3A	66-16663-1	. SPACER, INBOARD COVE LIP DOOR ACTUATION ARM		2
	4	AN960PD516	. WASHER.		2
	5	AN320-5	. NUT		2
	6	BACB10C52	. BEARING		2
R	7	69-15858-2	. CAP, INBOARD COVE LIP DOOR TORSION BAR BEARING HOUSING BEARING	5299	2
R	7	69-15858-4	. CAP, INBOARD COVE LIP DOOR TORSION BAR BEARING HOUSING BEARING (OPTIONAL 69-15858-2)	0151	2
R	7	69-15858-2	. CAP, INBOARD COVE LIP DOOR TORSION BAR BEARING HOUSING BEARING (OPTIONAL TO 69-15858-4)	0151	2
			ATTACHING PARTS		
		NAS1104-27W	. BOLT.		1
		NAS1104-28W	. BOLT.		1
		NAS1104-32W	. BOLT.		2
		AN960PD416L	. WASHER.		4
		NAS679A4W	. NUT		4
			-------*-------		
	8	66-12871-2	. BUSHING, COVE LIP DOOR TORSION BAR BEARING.		4
	9	NAS561P4-12	. PIN		2
R	10	65-19472-1	. ARM, INBOARD COVE LIP DOOR ACTUATION. (OPTIONAL TO 65-19472-11)	0150	1
R	10	65-19472-11	. ARM, INBOARD COVE LIP DOOR ACTUATION. (OPTIONAL 65-19472-1)	0150	1
R	10	65-19472-11	. ARM, INBOARD COVE LIP DOOR ACTUATION.	5199	1
R	11	65-19472-2	. ARM, INBOARD COVE LIP DOOR ACTUATION. (OPTIONAL TO 65-19472-12)	0150	1
R	11	65-19472-12	. ARM, INBOARD COVE LIP DOOR ACTUATION. (OPTIONAL 65-19472-2)	0150	1
R	11	65-19472-12	. ARM, INBOARD COVE LIP DOOR ACTUATION.	5199	1
	12	AN4-26A	. BOLT.		2
	13	AN960PD416L	. WASHER.		2
	14	NAS679A4W	. NUT		2
	15	69-15757-1	. SLEEVE, COVE LIP DOOR TORSION BAR RETAINER.		2
	16	65-18906-8	. BAR, COVE LIP DOOR ACTUATION TORSION (USED ON 65-18941-3 AND -4)		2
	16	65-18906-9	. BAR, COVE LIP DOOR ACTUATION TORSION (USED ON 65-18941-1 AND -2)		2
R	17	65-20997-3	. BRACKET, INBOARD COVE LIP DOOR TORSION BAR (USED ON 65-18941-3 AND -4) (OPTIONAL TO 65-20997-5)	0150	1
R	17	65-20997-5	. BRACKET, INBOARD COVE LIP DOOR TORSION BAR (USED ON 65-18941-3, -4) (OPTIONAL 65-20997-3)	0150	1
R	17	65-20997-5	. BRACKET, INBOARD COVE LIP DOOR TORSION BAR (USED ON 65-18941-3, -4)	5199	1
R	17	65-20997-4	. BRACKET, INBOARD COVE LIP DOOR TORSION BAR (USED ON 65-18941-1 AND -2) (OPTIONAL TO 65-20997-6)	0150	1
			ATTACHING PARTS		
		NAS1105-19W	. BOLT.		2
		AN960PD516L	. WASHER.		2
		NAS679A5	. NUT		2
			-------*-------		
R	17	65-20997-6	. BRACKET, INBOARD COVE LIP DOOR TORSION BAR (USED ON 65-18941-1, -2) (OPTIONAL 65-20997-4)	0150	1
R	17	65-20997-6	. BRACKET, INBOARD COVE LIP DOOR TORSION BAR (USED ON 65-18941-1, -2)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

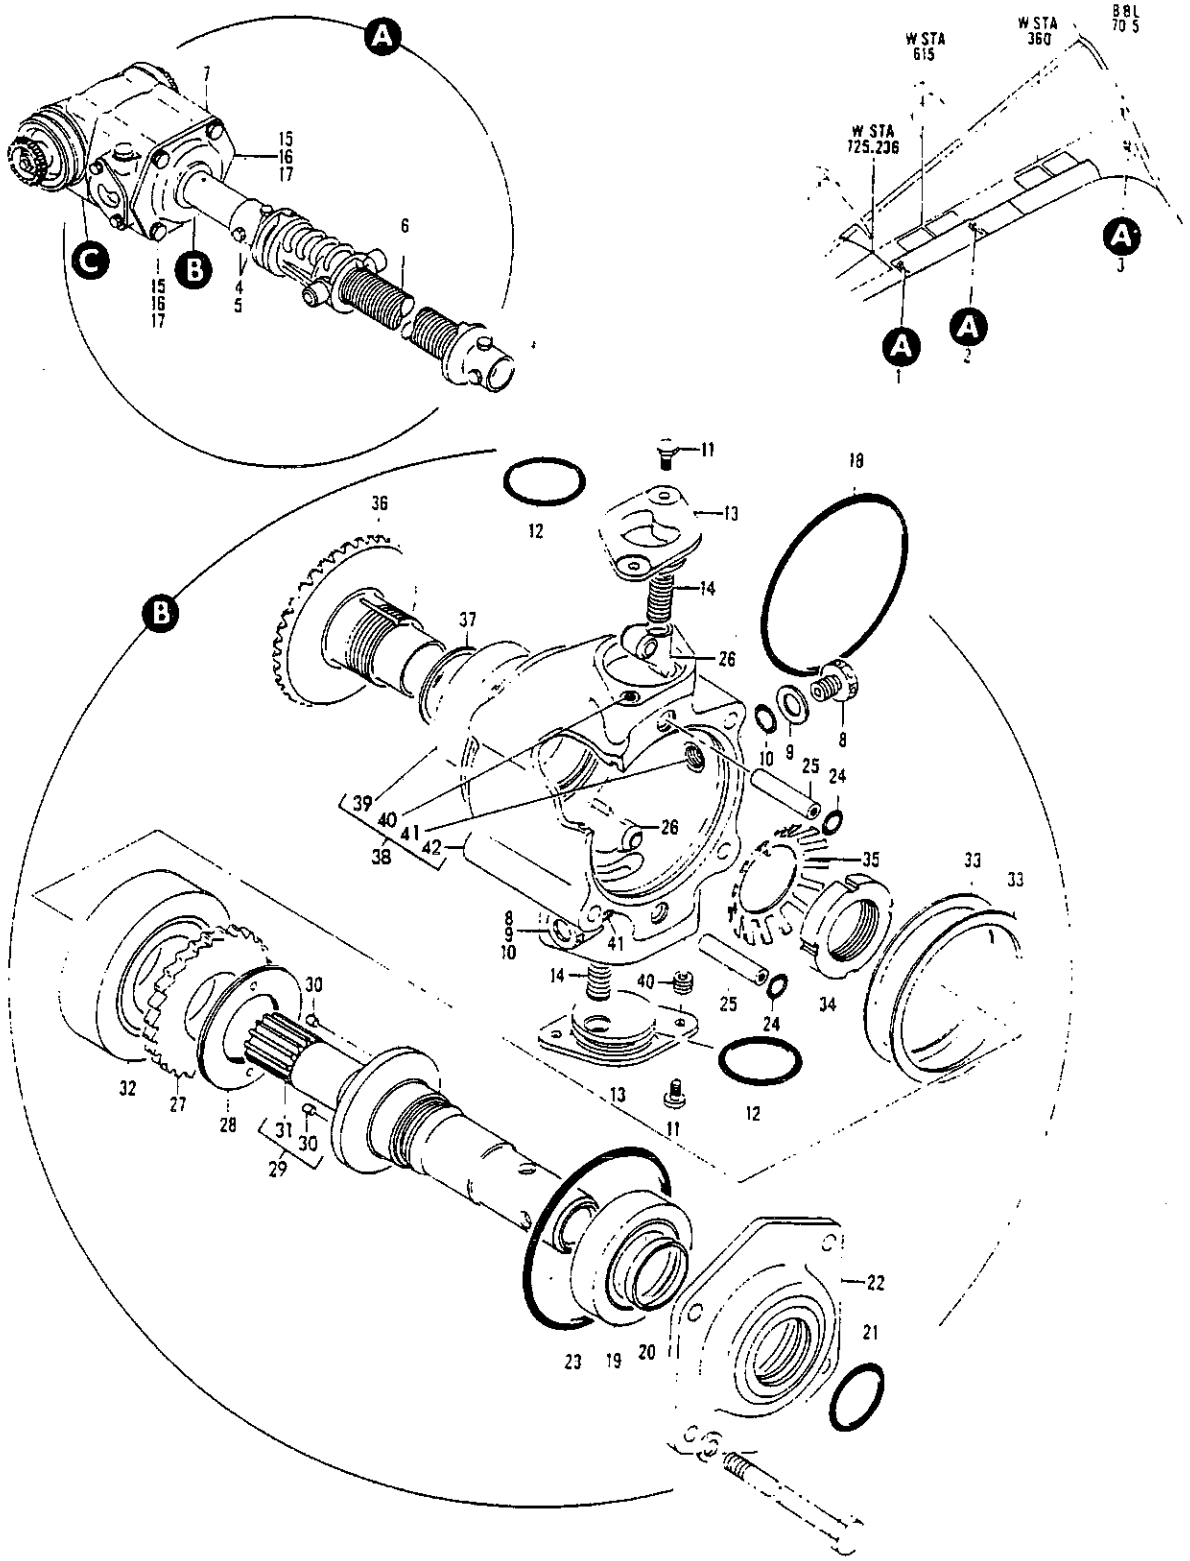


FIGURE 56. TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT CONTROL ONLY) (SHEET 1)

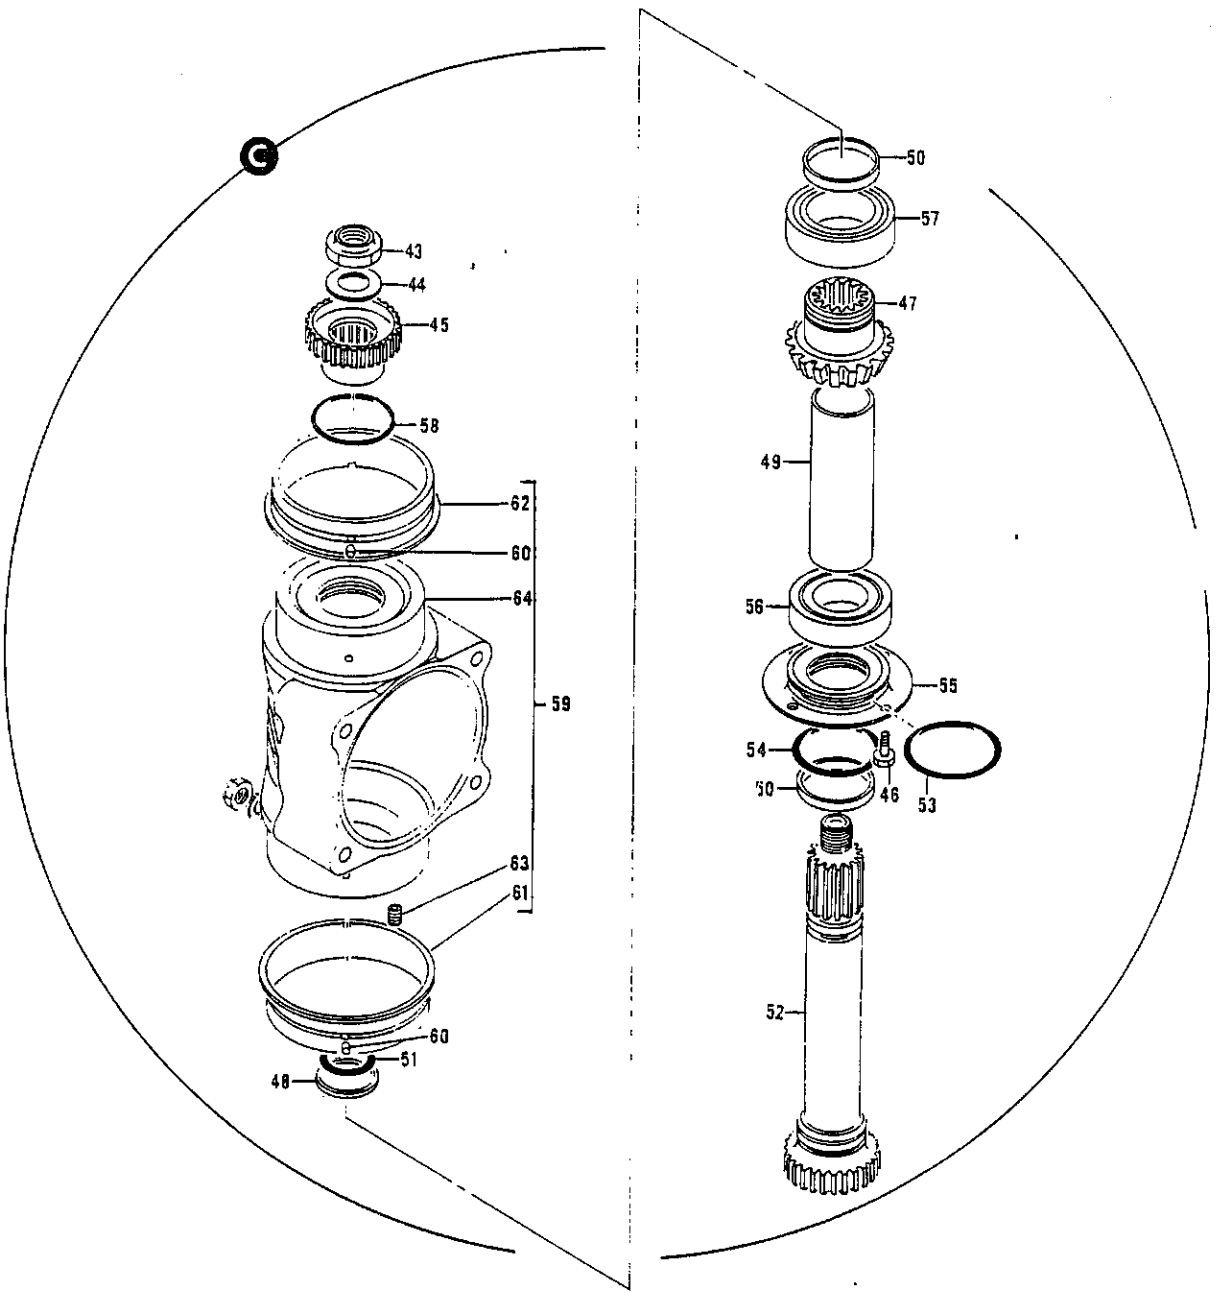


FIGURE 56. TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT CONTROL ONLY) (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	56 1	5-84049-3030	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT. . . . CONTROL ONLY) (SEE FIG. 37, ITEM 92)	0102	RF
	1	5-84049-3034	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT. . . . CONTROL ONLY) (SEE FIG. 37, ITEM 92) (OPTIONAL 5-84049-3030)	0303	RF
	1	5-84049-3030	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT. . . . CONTROL ONLY) (SEE FIG. 37, ITEM 92) (OPTIONAL TO 5-84049-3034)	0303	RF
R R R	1	5-84049-3034	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT. . . . CONTROL ONLY) (SEE FIG. 36, ITEM 87 AND FIG. 37, ITEM 92)	0450	RF
R R R	1	5-84049-3040	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT. . . . CONTROL ONLY) (SEE FIG. 37, ITEM 92) (OPTIONAL TO 5-84049-3046)	5151	RF
R R R	1	5-84049-3046	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT. . . . CONTROL ONLY) (SEE FIG. 37, ITEM 92) (OPTIONAL 5-84049-3040)	5151	RF
R R	1	5-84049-3046	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT. . . . CONTROL ONLY) (SEE FIG. 37, ITEM 92)	5299	RF
	2	5-84049-3028	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT. . . . CONTROL ONLY) (SEE FIG. 37, ITEM 91)	0102	RF
	2	5-84049-3032	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT. . . . CONTROL ONLY) (SEE FIG. 37, ITEM 91) (OPTIONAL 5-84049-3028)	0303	RF
	2	5-84049-3028	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT. . . . CONTROL ONLY) (SEE FIG. 37, ITEM 91) (OPTIONAL TO 5-84049-3032)	0303	RF
R R R	2	5-84049-3032	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT. . . . CONTROL ONLY) (SEE FIG. 36, ITEM 88 AND FIG. 37, ITEM 91)	0450	RF
R R R	2	5-84049-3038	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT. . . . CONTROL ONLY) (SEE FIG. 37, ITEM 91) (OPTIONAL TO 5-84049-3045)	5151	RF
R R R	2	5-84049-3045	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT. . . . CONTROL ONLY) (SEE FIG. 37, ITEM 91) (OPTIONAL 5-84049-3038)	5151	RF
R R	2	5-84049-3045	TRANSMISSION ASSY, FLAP DRIVE BALL SCREW (FLIGHT. . . . CONTROL ONLY) (SEE FIG. 37, ITEM 91)	5299	RF
	4	NAS679A5	. NUT		2
	5	NAS1305-25W	. BOLT.		2
	6	10-3090-3	. BALL SCREW AND NUT ASSY, WING FLAP DRIVE (USED ON . . 5-84049-3012, -3014, -3016, -3018, -3028 AND -3030)		1
	6	10-3090-6	. BALL SCREW AND NUT ASSY, WING (USED ON 5-84049-3032, -3034, -3038, -3040, -3043, -3044, -3045, -3046) (OPTIONAL TO BAC SPEC NO. 10-3090-9)	0499	1
	6	10-3090-9	. BALL SCREW AND NUT ASSY, WING (USED ON 5-84049-3032, -3034, -3038, -3040, -3043, -3044, -3045, -3046) (OPTIONAL BAC SPEC NO. 10-3090-6)	0499	1
R R	7	5-84049-3020	. GEAR BOX ASSY, FLAP DRIVE BALL SCREW TRANSMISSION . . (USED ON 5-84049-3016, -3028 AND -3032)	0150	1
R R	7	5-84049-3022	. GEAR BOX ASSY, FLAP DRIVE BALL SCREW TRANSMISSION . . (USED ON 5-84049-3018, -3030 AND -3034)	0150	1
R	7	5-84049-3037	. GEAR BOX ASSY, (USED ON 5-84049-3038)	5151	1
R	7	5-84049-3039	. GEAR BOX ASSY, (USED ON 5-84049-3040)	5151	1
R	7	5-84049-3047	. GEAR BOX ASSY, (USED ON 5-84049-3045)	5199	1
R	7	5-84049-3048	. GEAR BOX ASSY, (USED ON 5-84049-3046)	5199	1
	8	AN814-4DL	. . PLUG.		2
	9	NAS1197-716L	. . WASHER.		2
	10	AN6227-8	. . PACKING		2
	11	NAS1303-1H	. . BOLT. . . . . (OPTIONAL AN73-3)		4
	11	AN73-3	. . BOLT. . . . . (OPTIONAL TO NAS1303-1H)		4
	12	AN6227B23	. . PACKING		2
R R	13	66-2433-2000	. . COVER, FLAP DRIVE TEE BOX HOUSING (USED ON. . . . . 5-84049-3010, -3022 AND -3039)	0151	2
R R R	13	9-61917-2000	. . COVER, FLAP DRIVE TEE BOX PAWL (USED ON . . . . . 5-84049-3008, -3009, -3020, -3021 AND -3037)	0151	2
R R	13	66-2433-2001	. . COVER, FLAP DRIVE TEE BOX HOUSING (USED ON. . . . . 5-84049-3044, -3048)	5199	2
R R R	13	9-61917-2001	. . COVER, FLAP DRIVE TEE BOX PAWL (USED ON . . . . . 5-84049-3043, -3047)	5199	2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	56 14	3-74693	. . SPRING, FLAP DRIVE COMPRESSION (USED ON . . . . . 5-84049-3008, -3009, -3020, -3021, -3037, -3043, -3047)		2
	15	NAS679A5	. . NUT		4
	16	NAS1197-516L	. . WASHER.		8
	17	NAS1305-75	. . BOLT.		4
	18	AN6230B15	. . PACKING		1
	19	BACB10A19	. . BEARING		1
	20	69-27219-20	. . RING, LOW PRESSURE ROTARY SEAL.		1
	21	AN6227B25	. . PACKING		1
	22	5-87170-2000	. . HOUSING, FLAP DRIVE TEE BOX END (NOT USED ON. . . . 5-84049-3047, -3048)	0151	1
	22	5-87170-2001	. . HOUSING, FLAP DRIVE TEE BOX END (USED ON. . . . . 5-84049-3043, -3044, -3047, -3048)	5199	1
	23	AN6230B17	. . PACKING		1
	24	AN6227B6	. . PACKING		2
	25	6-72494	. . PIN, FLAP DRIVE TEE BOX PAWL.		2
	26	6-72700	. . PAWL, FLAP DRIVE TEE BOX RATCHET (USED ON . . . . . 5-84049-3008, -3009, -3020, -3021, -3037, -3043, -3047)		2
	27	6-73375	. . RATCHET, FLAP DRIVE TEE BOX		1
	28	6-73376-1	. . PLATE, FLAP DRIVE TEE BOX BRAKE		1
	29	9-61709-4	. . SHAFT ASSY, FLAP DRIVE TEE BOX (USED ON . . . . . 5-84049-3020, -3022, -3037, -3039, -3043, -3044, -3047, -3048)		1
	29	9-61709-3003	. . SHAFT ASSY, FLAP DRIVE TEE BOX (USED ON . . . . . 5-84049-3009, -3020 AND -3022) (OPTIONAL 9-61703-3001)	0150	1
	29	9-61709-3001	. . SHAFT ASSY, FLAP DRIVE TEE BOX (USED ON . . . . . 5-84049-3009, -3020 AND -3022) (OPTIONAL TO 9-61709-3003)	0150	1
	30	3-93348-1	. . . PIN, TEE BOX SHAFT ASSY (USED ON 9-61709-4 AND. . -3003)		2
	31	9-61709-3	. . . SHAFT, FLAP DRIVE TEE BOX (USED ON 9-61709-2 AND -4)		1
	32	BACB10A335	. . BEARING		1
	33	9-61297-3	. . SHIM, LAMINATED		2
	34	BACN10AP07	. . NUT		1
	35	BACW10A07	. . WASHER.		1
	36	9-61783	. . GEAR, FLAP DRIVE TEE BOX BEVEL.		1
	37	9-61297-2	. . SHIM, LAMINATED		1
	38	5-87169-3001	. . HOUSING ASSY, TEE BOX (USED ON 5-84049-3020 AND . . -3022) (OPTIONAL 5-87169-3002)	0150	1
	38	5-87169-3002	. . HOUSING ASSY, TEE BOX (USED ON 5-84049-3020 AND . . -3022) (OPTIONAL TO 5-8719-3001)	0150	1
	38	5-87169-3002	. . HOUSING ASSY, TEE BOX (USED ON 5-84049-3037 AND . . -3039)	5151	1
	38	5-87169-3004	. . HOUSING ASSY, TEE BOX (USED ON 5-84049-3043, -3044, -3047, -3048)	5199	1
	39	9107K	. . . BEARING, (V21335)		1
	40	BACS13P3CN4	. . . SLEEVE.		4
	41	BACS13P7CN2	. . . SLEEVE.		2
	42	5-87169-3003	. . . HOUSING, (USED ON 5-84049-3002)	0151	1
	42	5-87169-3005	. . . HOUSING, (USED ON 5-84049-3004)	5199	1
	43	NAS1022A9	. . NUT		1
	44	AN960-916	. . WASHER.		1
	45	69-4083	. . COUPLING, FLAP DRIVE SPLINED HALF . . . . . (OPTIONAL 6-72451)	0102 0450	1
	45	6-72451	. . COUPLING, FLAP DRIVE SPLINED HALF . . . . . (OPTIONAL TO 69-4083)	0102 0450	1
R R	45	69-4083	. . COUPLING, SPLINED HALF (DELETED BY SL 27-12). . . . (OPTIONAL AN73-3)	5199	1
R	45	69-46619-1	. . COUPLING, SPLINED HALF (ADDED BY SL 27-12).	5199	1
	46	NAS1303-1H	. . BOLT. . . . . (OPTIONAL AN73-3)		4
	46	AN73-3	. . BOLT. . . . . (OPTIONAL TO NAS1303-1H)		4
	47	9-61298	. . GEAR, FLAP DRIVE TEE BOX PINION		1
	48	9-61297-13	. . SHIM, LAMINATED		1
	49	3-95932	. . SPACER, FLAP DRIVE TEE BOX.		1
	50	69-27219-14	. . RING, LOW PRESSURE ROTARY SEAL.		2
	51	AN6227B15	. . PACKING		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	56 52	9-61299	. . SHAFT, FLAP DRIVE TEE BOX TORQUE.		1
	53	AN623081	. . PACKING		1
	54	AN6227B22	. . PACKING		1
	55	6-72456	. . RETAINER, FLAP DRIVE TEE BOX BEARING.		1
	56	BACB10A90	. . BEARING		1
	57	BACB10A17	. . BEARING		1
	58	AN6227B22	. . PACKING		1
R	59	5-87414-3001	. . HOUSING ASSY, FLAP DRIVE TEE BOX (NOT USED ON . . .	0151	1
R			5-84049-3047, -3048)		
R	59	5-87414-6	. . HOUSING, FLAP DRIVE TEE BOX (USED ON 5-84049-3047,	5199	1
R			-3048)		
	60	5-87414-3	. . . KEY, FLAP DRIVE TEE BOX HOUSING		2
	61	6-60498-2	. . . BUSHING, FLAP DRIVE BALL BEARING SCREW.		1
	62	6-60498-3	. . . BUSHING, FLAP DRIVE BALL BEARING SCREW.		1
	63	BACS13P3CN4	. . . SLEEVE.		4
R	64	5-87414-2001	. . . *HOUSING*	0151	1
R	64	5-87414-7	. . . HOUSING	5199	1
			. FOR REFERENCE TO OTHER TRANSMISSION DETAILS, SEE NHA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

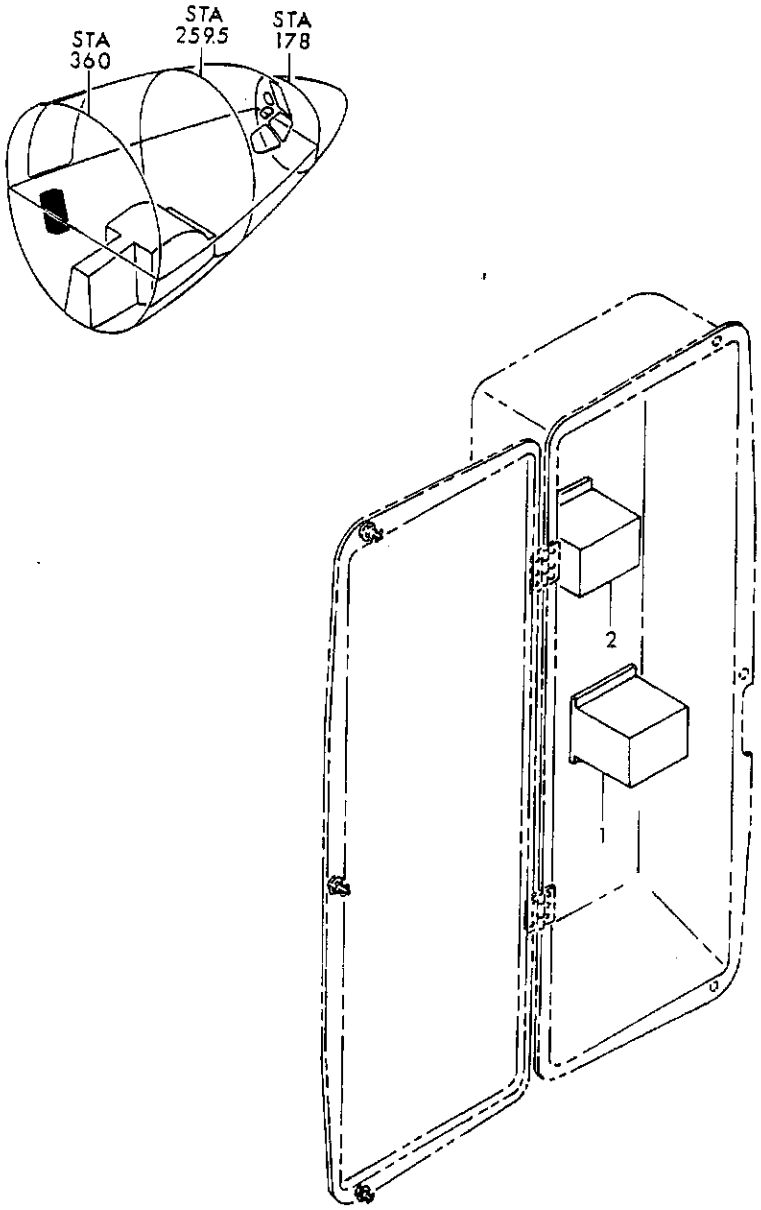


FIGURE 57. SHIELD ASSY, STATION 336 J4 RELAY (FLIGHT CONTROL ONLY)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	57	50-8248-4	SHIELD ASSY, STATION 336 J4 RELAY (FLIGHT CONTROL ONLY)	0150	RF
R			(SEE 24-6, FIG. 11B, ITEM 2)		
R	2	10-3364	. FLASHER, WARNING LIGHT.	0150	1
			ATTACHING PARTS		
R		NAS603-8P	. SCREW	0150	4
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING Intercontinental 707

PARTS CATALOG

SECTION 08

RUDDER

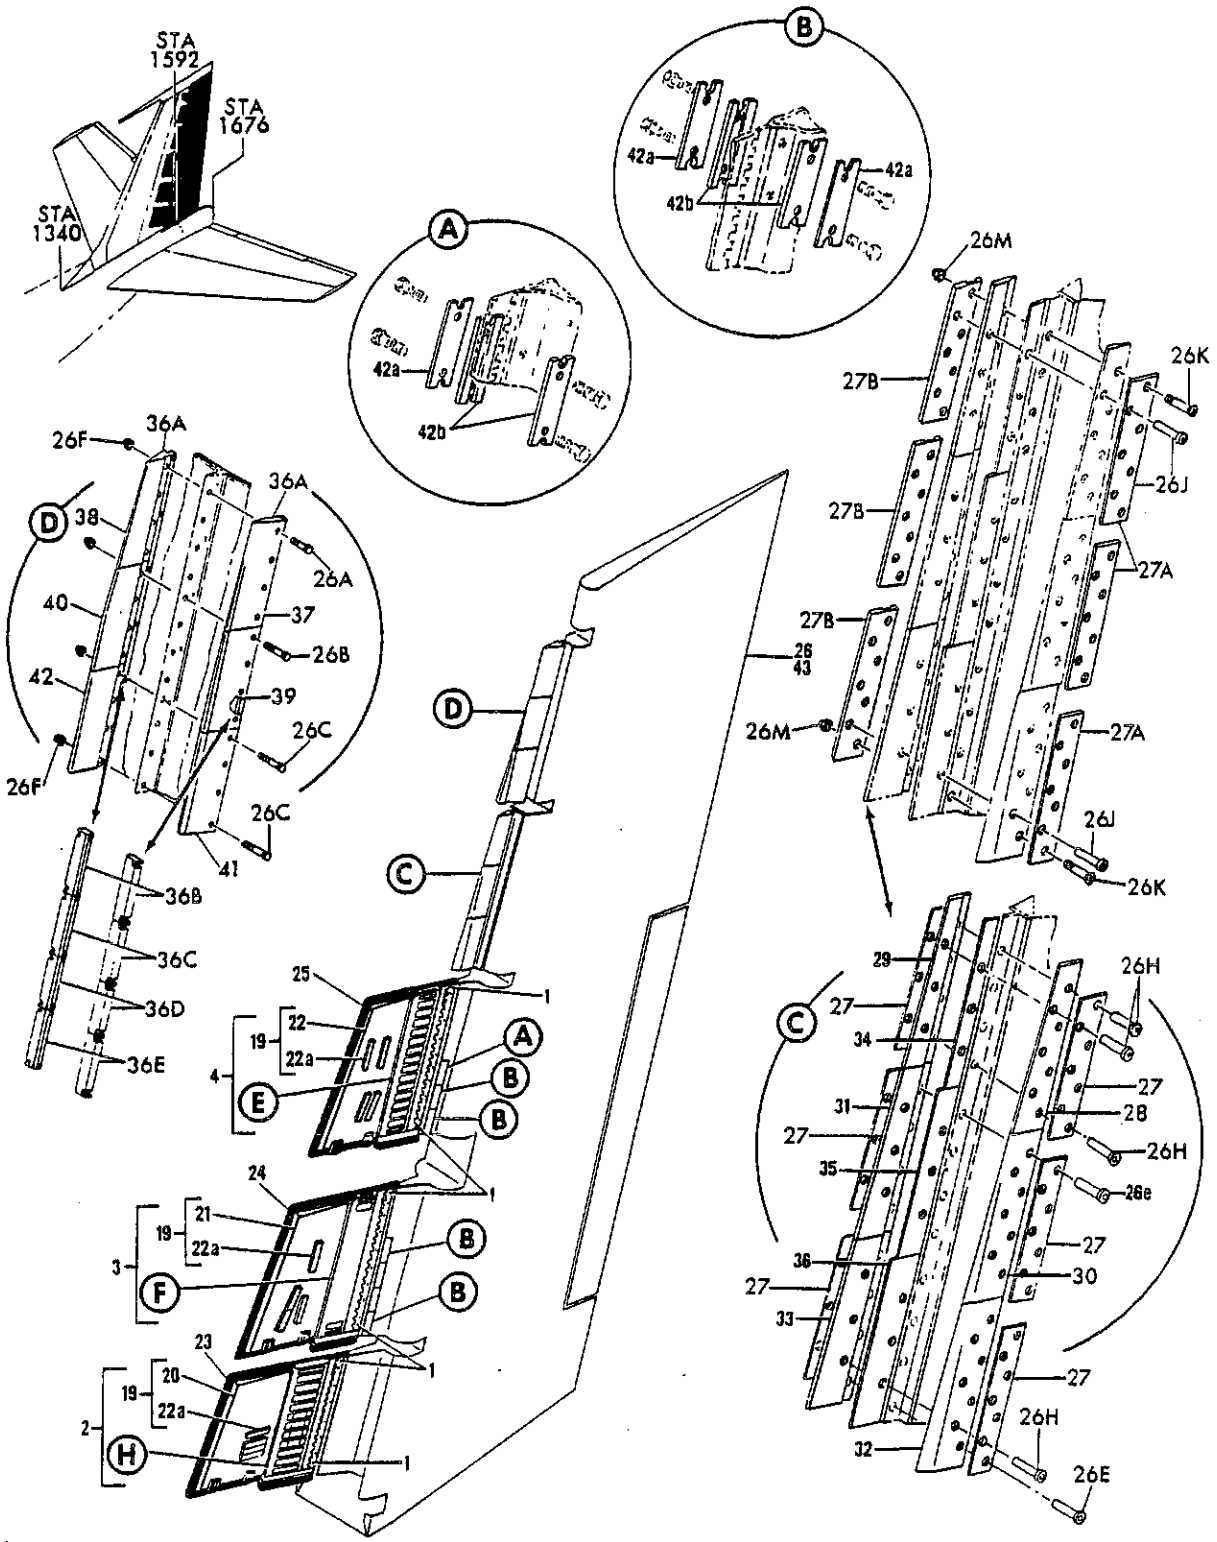


FIGURE 1. RUDDER AND BALANCE ASSY, VERTICAL TAIL (SHEET 1)

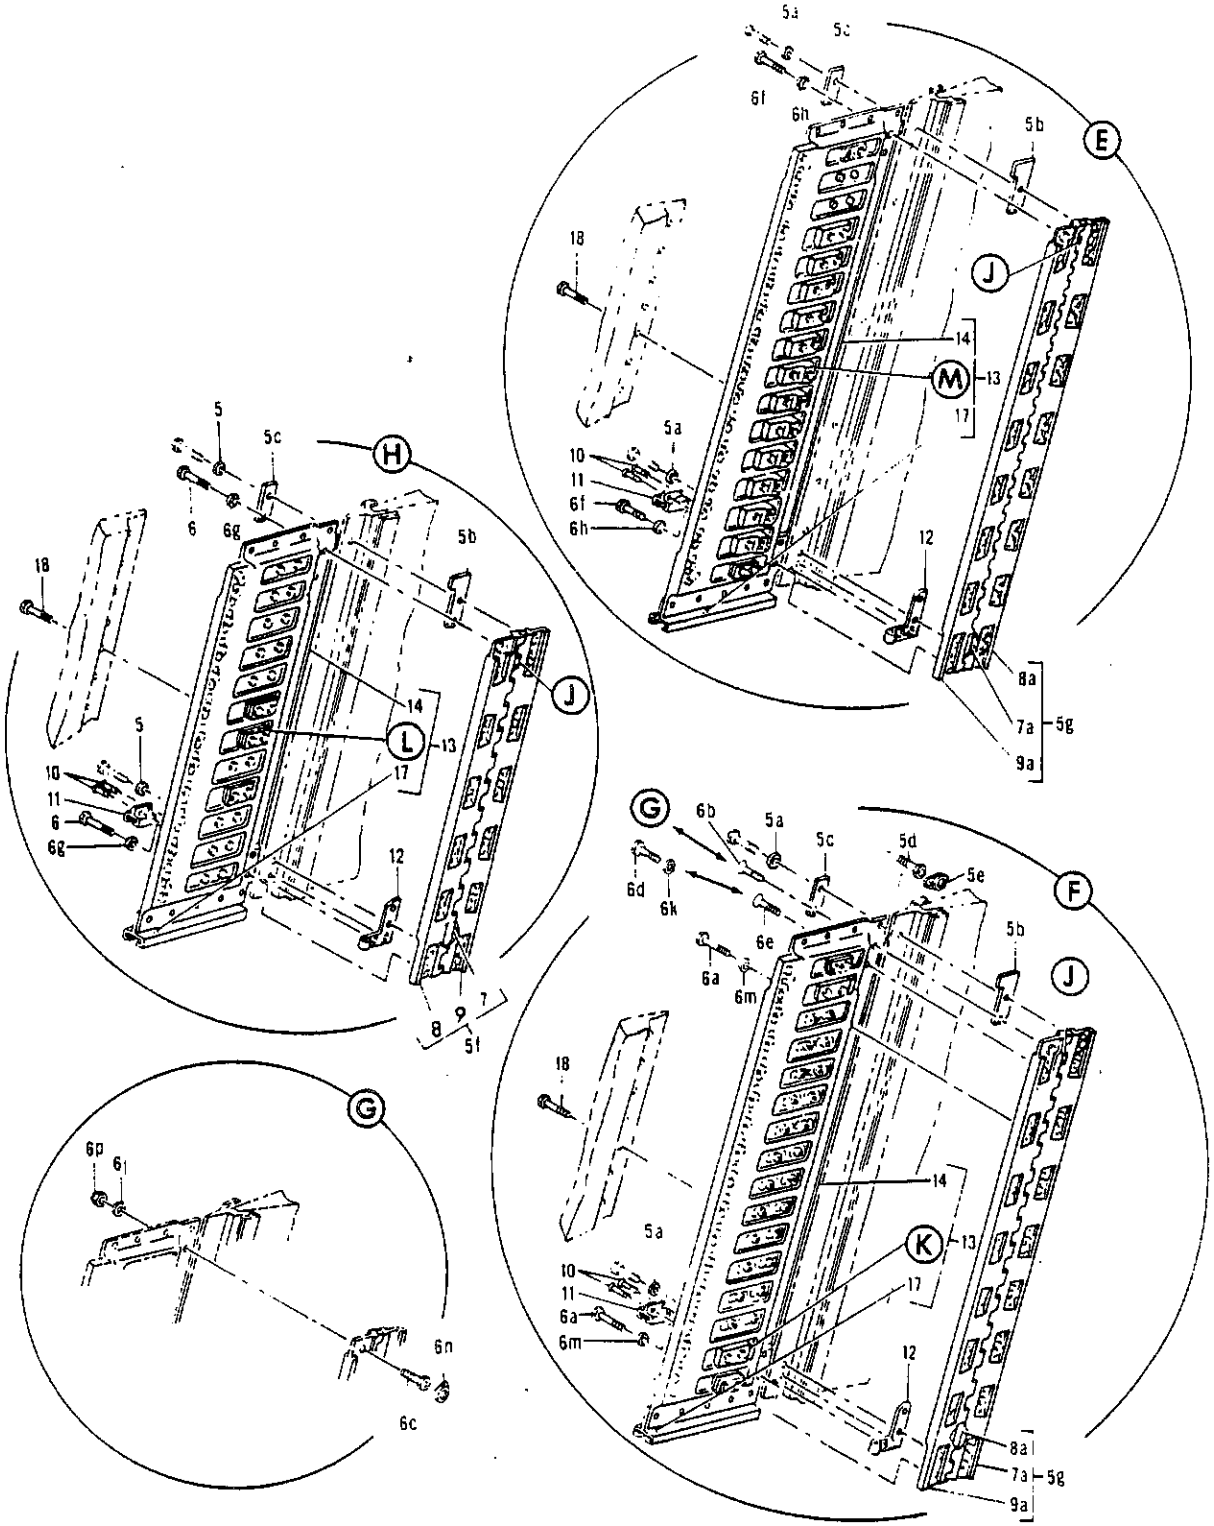


FIGURE 1. RUDDER AND BALANCE ASSY, VERTICAL TAIL (SHEET 2)

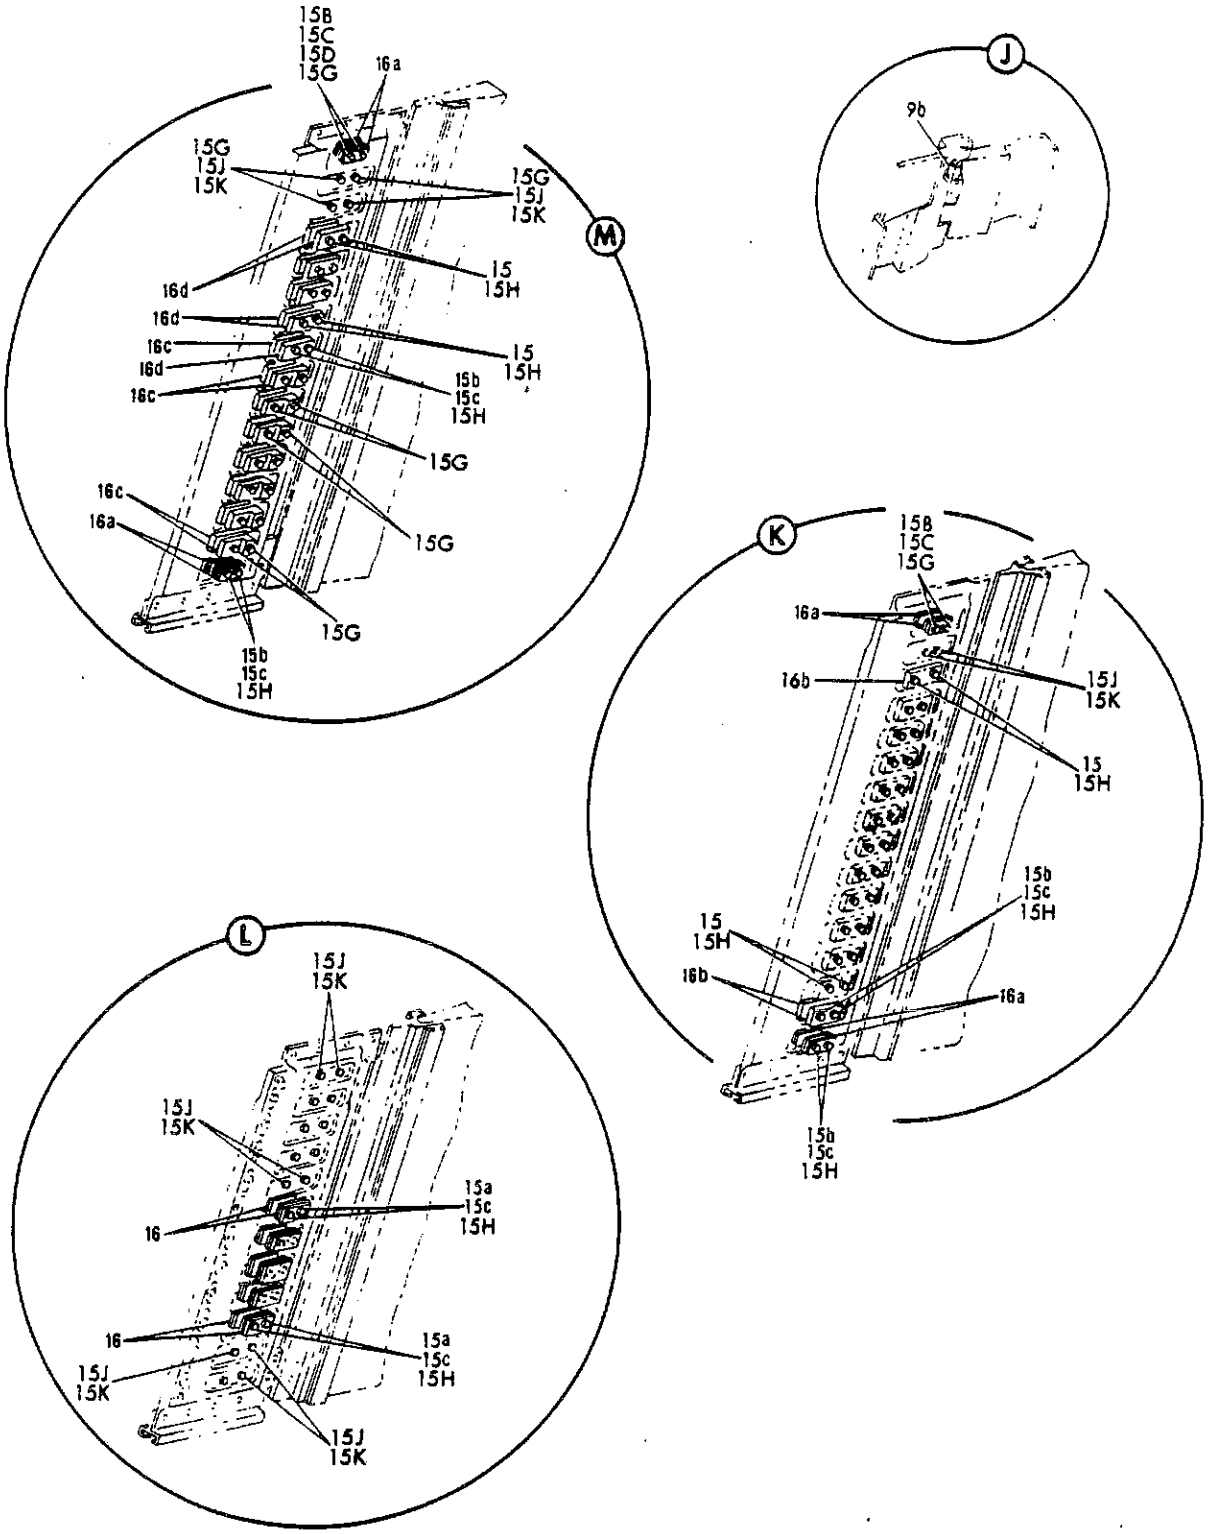


FIGURE 1. RUDDER AND BALANCE ASSY, VERTICAL TAIL (SHEET 3)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1	50-9788-32	RUDDER AND BALANCE ASSY, VERTICAL TAIL (FOR OPTIONAL. PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (SEE 55-1, FIG. 2, ITEM 60) (SEE FIG. 2 FOR SPARES ASSEMBLY)		RF
1	NAS1104-7W	. BOLT.		AR
2	50-9788-1	. BALANCE ASSY, VERTICAL TAIL RUDDER BAY NO. 1.		1
3	50-9788-2	. BALANCE ASSY, VERTICAL TAIL RUDDER BAY NO. 2.		1
4	50-9788-3	. BALANCE ASSY, VERTICAL TAIL RUDDER BAY NO. 3.		1
5	AN960D416L	. . WASHER, (USED ON 50-9788-1 AND -40)		8
5A	AN960D416L	. . WASHER, (USED ON 50-9788-2, 3, -39, -41 AND 42)		10
5B	66-3247	. . PLATE, RUDDER SEAL RETAINER SUPPORT		1
5C	66-3247-1	. . PLATE, RUDDER SEAL RETAINER SUPPORT		1
5D	NAS1103-2W	. . BOLT, (USED ON 50-9788-2, -39 AND -41).		1
5E	BACR10G31	. . RETAINER, (USED ON 50-9788-2, -39 AND -41).		1
5F	69-2304-12	. . HINGE ASSY, RUDDER BALANCE PANEL (USED ON 50-9788-1 AND -40)		1
5G	69-2304-13	. . HINGE ASSY, RUDDER BALANCE PANEL (USED ON 50-9788-2 -3, -39, -41 AND -42)		1
		ATTACHING PARTS		
6	NAS1104-7W	. . BOLT, (USED ON 50-9788-1 AND -40)		8
6A	NAS1104-7W	. . BOLT, (USED ON 50-9788-2, -39 AND -41).		8
6C	NAS1104-3W	. . BOLT, (USED ON 50-9788-2, -39 AND -41).		1
6E	BACB30EL4-7	. . BOLT, (USED ON 50-9788-2, -39 AND -41).		1
6F	NAS1104-7W	. . BOLT, (USED ON 50-9788-3 AND -42)		10
6G	AN960D416	. . WASHER, (USED ON 50-9788-1 AND -40)		8
6H	AN960D416	. . WASHER, (USED ON 50-9788-3 AND -42)		10
6J	AN960D416L	. . WASHER, (USED ON 50-9788-2, -39 AND -41).		1
6M	AN960D416	. . WASHER, (USED ON 50-9788-2, -39 AND -41).		8
6N	BACR10R4	. . RETAINER, (USED ON 50-9788-2, -39 AND -41).		1
6P	NAS679A4W	. . NUT, (USED ON 50-9788-2, -39 AND -41)		1
		-------*-------		
7	69-2304-15	. . . PIN, RUDDER BALANCE PANEL HINGE (USED ON. 69-2304-12)		1
7A	69-2304-14	. . . PIN, RUDDER BALANCE PANEL HINGE (USED ON. 69-2304-13)		1
8	69-2304-8	. . . HINGE, RUDDER BALANCE PANEL HALF (USED ON 50-9788-1 AND -40)		1
8A	69-2304-9	. . . HINGE, RUDDER BALANCE PANEL HALF (USED ON 69-2304-13)		1
9	69-2304-3	. . . HINGE, RUDDER BALANCE PANEL HALF (USED ON 69-2304-12)		1
9A	69-2304-6	. . . HINGE, RUDDER BALANCE PANEL HALF (USED ON 69-2304-13)		1
9B	AN393-9	. . PIN		1
10	NAS221-8	. . SCREW		2
11	66-14055-2	. . RETAINER, RUDDER BALANCE PANEL SEAL		1
12	63-9017-1	. . RETAINER, RUDDER PIN.		1
13	50-9788-7	. . EXTENSION ASSY, RUDDER BALANCE PANEL (USED ON 50-9788-1)		1
13A	50-9788-8	. . EXTENSION ASSY, RUDDER BALANCE PANEL (USED ON 50-9788-2)		1
13B	50-9788-9	. . EXTENSION ASSY, RUDDER BALANCE PANEL (USED ON 50-9788-3 AND -42)		1
14	65-3125	. . . EXTENSION, BALANCE PANEL (USED ON 50-9788-7).		1
14A	65-7083	. . . EXTENSION, BALANCE PANEL (USED ON 50-9788-8 AND -38)		1
14B	65-7083-1	. . . EXTENSION, BALANCE PANEL (USED ON 50-9788-9).		1
15	AN4-10A	. . . BOLT, (USED ON 50-9788-8, -9 AND -38) (OPTIONALS NAS517-4-10 AND -17)		AR
15A	BACR15AY6-12	. . . RIVET, (USED WITH NAS528A) (USED ON 50-9788-7). (OPTIONALS BACR15AY6-15, -18, -20, -23 AND -26)		AR
15B	BACR15AY6-9	. . . RIVET, (USED WITH NAS528A) (USED ON 50-9788-8, -9 AND -38) (OPTIONALS BACR15AY6-12, -15, -17, -20 AND -23)		AR
15C	NAS528A	. . . COLLAR, (USED WITH BACR15AY6-9 AND -12)		AR
15G	AN960D10L	. . . WASHER.		AR
15H	AN960D416L	. . . WASHER.		AR
15J	AN4-5A	. . . BOLT.		AR
15K	NAS679A4W	. . . NUT		AR
16	65-6346-31	. . . WEIGHT, VERTICAL TAIL BALANCE (USED ON 50-9788-7)		AR
16A	65-6346-31	. . . WEIGHT, VERTICAL TAIL BALANCE (USED ON 50-9788-8, -9 AND -38)		AR

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	1 16B	65-6346-5	. . . WEIGHT, VERTICAL TAIL BALANCE (USED ON 50-9788-8 AND -38)		AR
	16C	65-6346-8	. . . WEIGHT, VERTICAL TAIL BALANCE (USED ON 50-9788-9)		AR
	16D	65-6346-21	. . . WEIGHT, VERTICAL TAIL BALANCE (USED ON 50-9788-9)		AR
	17	65-4115-48	. . . RETAINER, RUDDER BALANCE PANEL SEAL (USED ON. . . 50-9788-7)		1
	17	65-4115-49	. . . RETAINER, RUDDER BALANCE PANEL SEAL (USED ON. . . 50-9788-8 AND -38)		1
	17	65-4115-50	. . . RETAINER, RUDDER BALANCE PANEL SEAL (USED ON. . . 50-9788-9)		1
			ATTACHING PARTS		
		NAS221-8	. . . SCREW, (USED ON 50-9788-7).		5
		NAS221-8	. . . SCREW, (USED ON 50-9788-8, -9 AND -38).		4
			-------*-------		
	18	NAS1104-11W	. . BOLT, (USED ON 50-9788-1 AND -40)		13
	18	NAS1104-10W	. . BOLT, (USED ON 50-9788-2, -3, -39, -41 AND -42) . .		17
	19	50-9788-4	. . PANEL ASSY, RUDDER BALANCE (USED ON 50-9788-1 AND . -40)		1
	19	50-9788-5	. . PANEL ASSY, RUDDER BALANCE (USED ON 50-9788-2, -39 AND -41)		1
	19	50-9788-6	. . PANEL ASSY, RUDDER BALANCE (USED ON 50-9788-3 AND . -42)		1
	20	5-95504-3000	. . . PANEL ASSY, RUDDER BALANCE (USED ON 50-9788-4). . (SEE FIG. 10)		1
	21	5-95505-3000	. . . PANEL ASSY, RUDDER BALANCE (USED ON 50-9788-5). . (SEE FIG. 9)		1
	22	5-95506-3000	. . . PANEL ASSY, RUDDER BALANCE (USED ON 50-9788-6). . (SEE FIG. 8)		1
	22A	69-10063-2	. . . WEIGHT, RUDDER ADJUSTMENT		AR
	23	65-7144-1	. SEAL INSTL, RUDDER BALANCE CAVITY (BAY NO. 1) (SEE. . FIG. 7)		1
	24	65-7144-2	. SEAL INSTL, RUDDER BALANCE CAVITY (BAY NO. 2) (SEE. . FIG. 7)		1
	25	65-7144-3	. SEAL INSTL, RUDDER BALANCE CAVITY (BAY NO. 3) (SEE. . FIG. 7)		1
R R R	26	50-9788-31	. RUDDER AND BALANCE ASSY, VERTICAL TAIL (FOR OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER)	5199	1
R R R R	26	50-9788-31	. RUDDER AND BALANCE ASSY, VERTICAL TAIL (FOR OPTIONAL PAINTED SPARE SEE DWG. NO. 63-12050 FOR SUFFIX LETTER) (REWORKED BY SB 3007)	0150	1
	26A	AN4-11A	. . BOLT.		4
	26B	AN4-13A	. . BOLT.		4
	26C	AN4-15A	. . BOLT.		4
	26F	NAS679A4W	. . NUT		12
R	26H	MS20426D8	. . RIVET	0150	13
R	26J	MS20426D8	. . RIVET	5199	9
R R	26K	BACB30EL4-16	. . BOLT. . . . . (OPTIONAL BACB30KP4-16)	5199	12
R R	26K	BACB30KP4-16	. . BOLT. . . . . (OPTIONAL TO BACB30EL4-16)	5199	12
R	26M	BACN10JC4	. . NUT	5199	12
R	27	65-6346-32	. . WEIGHT, VERTICAL TAIL BALANCE	0150	6
R	27A	65-6346-32	. . WEIGHT.	5199	3
R	27B	65-6346-46	. . WEIGHT.	5199	3
	28	65-6346-13	. . WEIGHT, VERTICAL TAIL BALANCE		1
	29	65-6346-14	. . WEIGHT, VERTICAL TAIL BALANCE		1
	30	65-6346-11	. . WEIGHT, VERTICAL TAIL BALANCE		1
	31	65-6346-12	. . WEIGHT, VERTICAL TAIL BALANCE		1
	32	65-6346-37	. . WEIGHT, VERTICAL TAIL BALANCE		1
	33	65-6346-38	. . WEIGHT, VERTICAL TAIL BALANCE		1
	34	BACS40A24-218	. . SHIM.		AR
	35	BACS40A34-218	. . SHIM.		AR
	36	BACS40A44-218	. . SHIM.		AR
	36B	69-11659	. . WEIGHT, VERTICAL TAIL BALANCE		2
	36C	69-11659-1	. . WEIGHT, VERTICAL TAIL BALANCE		2
	36D	69-11659-2	. . WEIGHT, VERTICAL TAIL BALANCE		2
	36E	69-11659-3	. . WEIGHT, VERTICAL TAIL BALANCE		2
			ATTACHING PARTS		
		AN3-16A	. . BOLT.		8
		NAS679A3W	. . NUT		8
			-------*-------		
	37	65-6346-43	. . WEIGHT, VERTICAL TAIL BALANCE		1
	38	65-6346-44	. . WEIGHT, VERTICAL TAIL BALANCE		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1 39	65-6346-41	. . WEIGHT, VERTICAL TAIL BALANCE		1
40	65-6346-42	. . WEIGHT, VERTICAL TAIL BALANCE		1
41	65-6346-39	. . WEIGHT, VERTICAL TAIL BALANCE		1
42	65-6346-40	. . WEIGHT, VERTICAL TAIL BALANCE		1
	65-28029-3	. . WEIGHT INSTL, RUDDER ADJUSTABLE		1
42A	69-10063-5	. . . WEIGHT, ELEVATOR RUDDER ADJUSTMENT.		AR
42B	69-10063-4	. . . WEIGHT, ELEVATOR RUDDER ADJUSTMENT (OPTIONAL. . . 69-10063-6)		AR
42B	69-10063-6	. . . WEIGHT, ELEVATOR RUDDER ADJUSTMENT. ATTACHING PARTS		AR
	BACB30LB6-2	. . . BOLT.		AR
	BACB30LB6-6	. . . BOLT.		AR
	BACB30LB6-9	. . . BOLT.		AR
	BACB30LB6-11	. . . BOLT.		AR
	BACB30LB6-14	. . . BOLT.		AR
43	65-3495-25	. . RUDDER ASSY, VERTICAL TAIL (FOR OPTIONAL PAINTED. , SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (SEE FIG. 3)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



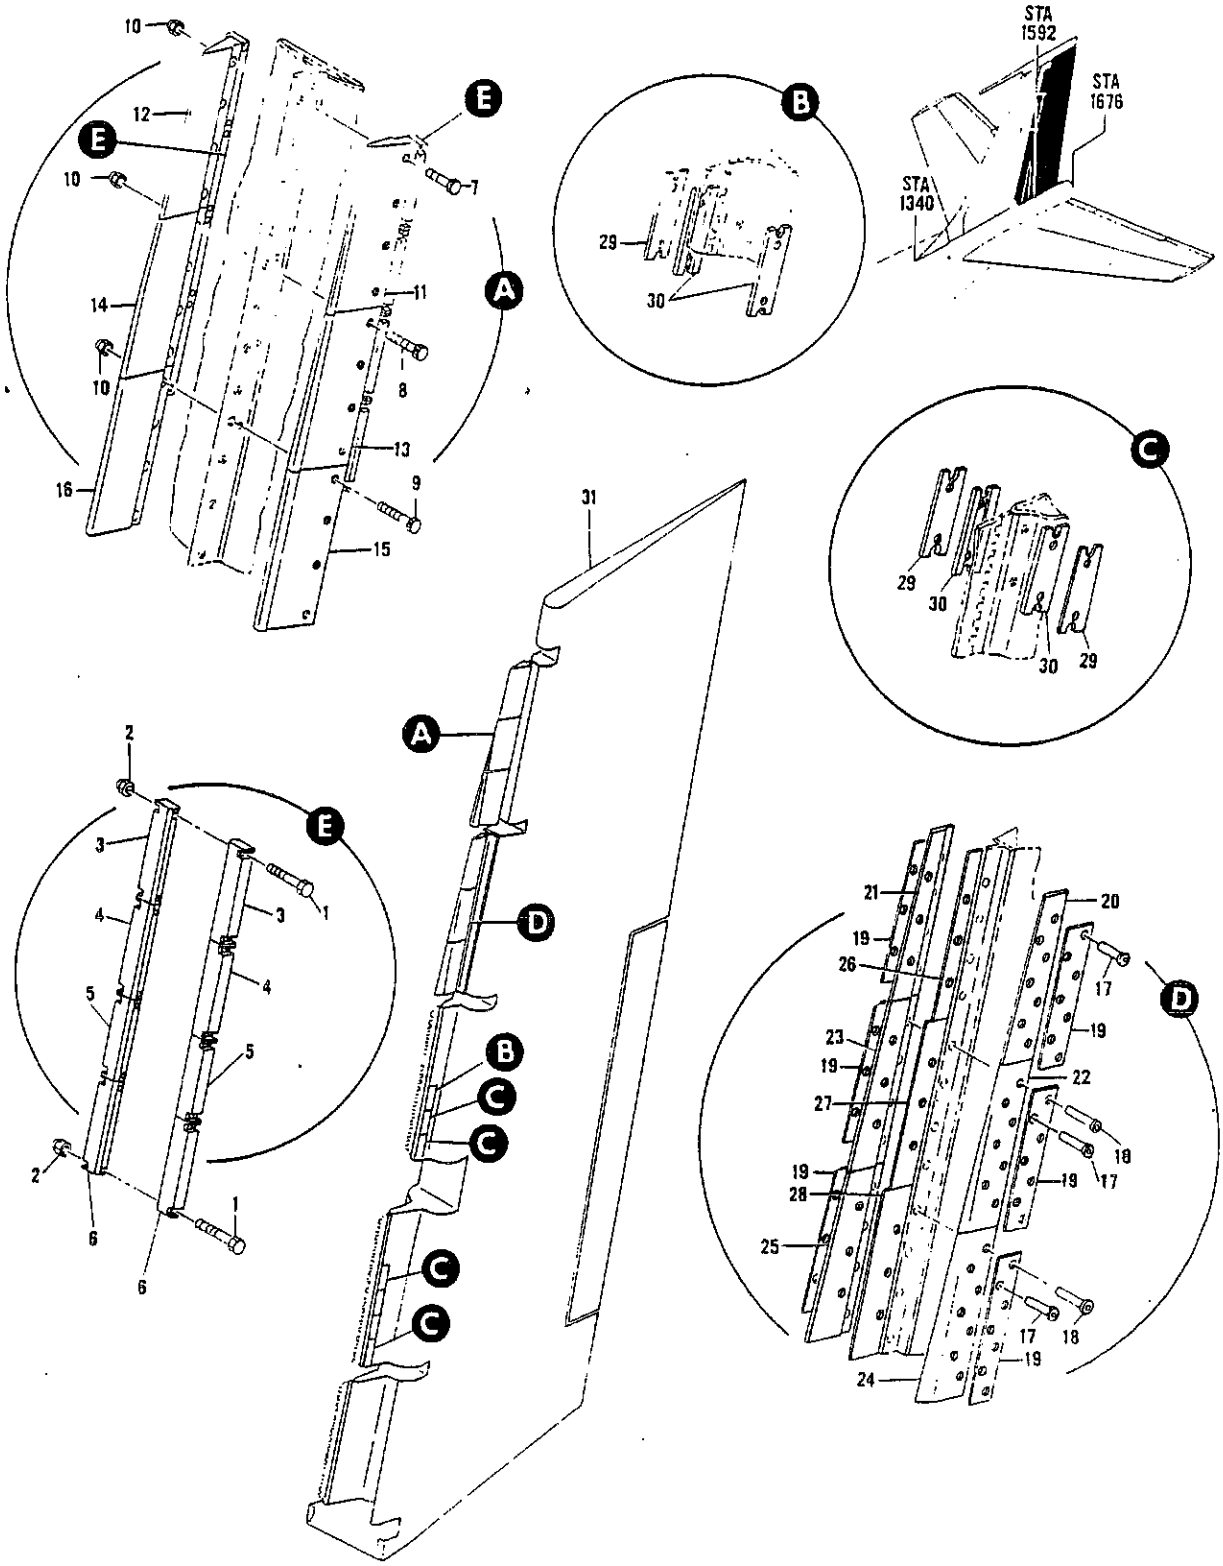



FIGURE 2. SPARES ASSY, VERTICAL TAIL RUDDER AND BALANCE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2	50-9788-23	SPARES ASSY, VERTICAL TAIL RUDDER AND BALANCE		RF
1	AN3-16A	. BOLT.		8
2	NAS679A3W	. NUT		8
3	69-11659	. WEIGHT, VERTICAL TAIL BALANCE		2
4	69-11659-1	. WEIGHT, VERTICAL TAIL BALANCE		2
5	69-11659-2	. WEIGHT, VERTICAL TAIL BALANCE		2
6	69-11659-3	. WEIGHT, VERTICAL TAIL BALANCE		2
7	AN4-11A	. BOLT.		4
8	AN4-13A	. BOLT.		4
9	AN4-15A	. BOLT.		4
10	NAS679A4W	. NUT		12
11	65-6346-43	. WEIGHT, VERTICAL TAIL RUDDER BALANCE.		1
12	65-6346-44	. WEIGHT, VERTICAL TAIL RUDDER BALANCE.		1
13	65-6346-41	. WEIGHT, VERTICAL TAIL RUDDER BALANCE.		1
14	65-6346-42	. WEIGHT, VERTICAL TAIL RUDDER BALANCE.		1
15	65-6346-39	. WEIGHT, VERTICAL TAIL RUDDER BALANCE.		1
16	65-6346-40	. WEIGHT, VERTICAL TAIL RUDDER BALANCE.		1
17	MS20426D8	. RIVET		13
19	65-6346-32	. WEIGHT, VERTICAL TAIL BALANCE		6
20	65-6346-13	. WEIGHT, VERTICAL TAIL RUDDER BALANCE.		1
21	65-6346-14	. WEIGHT, VERTICAL TAIL RUDDER BALANCE.		1
22	65-6346-11	. WEIGHT, VERTICAL TAIL RUDDER BALANCE.		1
23	65-6346-12	. WEIGHT, VERTICAL TAIL RUDDER BALANCE.		1
24	65-6346-37	. WEIGHT, VERTICAL TAIL RUDDER BALANCE.		1
25	65-6346-38	. WEIGHT, VERTICAL TAIL RUDDER BALANCE.		1
26	BACS40A24-218	. SHIM.		AR
27	BACS40A34-218	. SHIM.		AR
28	BACS40A44-218	. SHIM.		AR
	65-28029-3	. WEIGHT INSTL, RUDDER ADJUSTABLE		1
29	69-10063-5	. . WEIGHT, ELEVATOR RUDDER ADJUSTMENT.		AR
30	69-10063-4	. . WEIGHT, ELEVATOR RUDDER ADJUSTMENT.		AR
30	69-10063-6	. . WEIGHT, ELEVATOR RUDDER ADJUSTMENT.		AR
		ATTACHING PARTS		
	BACB30LB6-2	. . BOLT.		AR
	BACB30LB6-6	. . BOLT.		AR
	BACB30LB6-9	. . BOLT.		AR
	BACB30LB6-11	. . BOLT.		AR
	BACB30LB6-14	. . BOLT.		AR
		-------*-------		
31	65-3495-22	. SPARES ASSY, VERTICAL TAIL RUDDER (SEE FIG. 3).		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

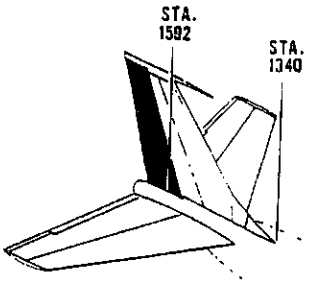

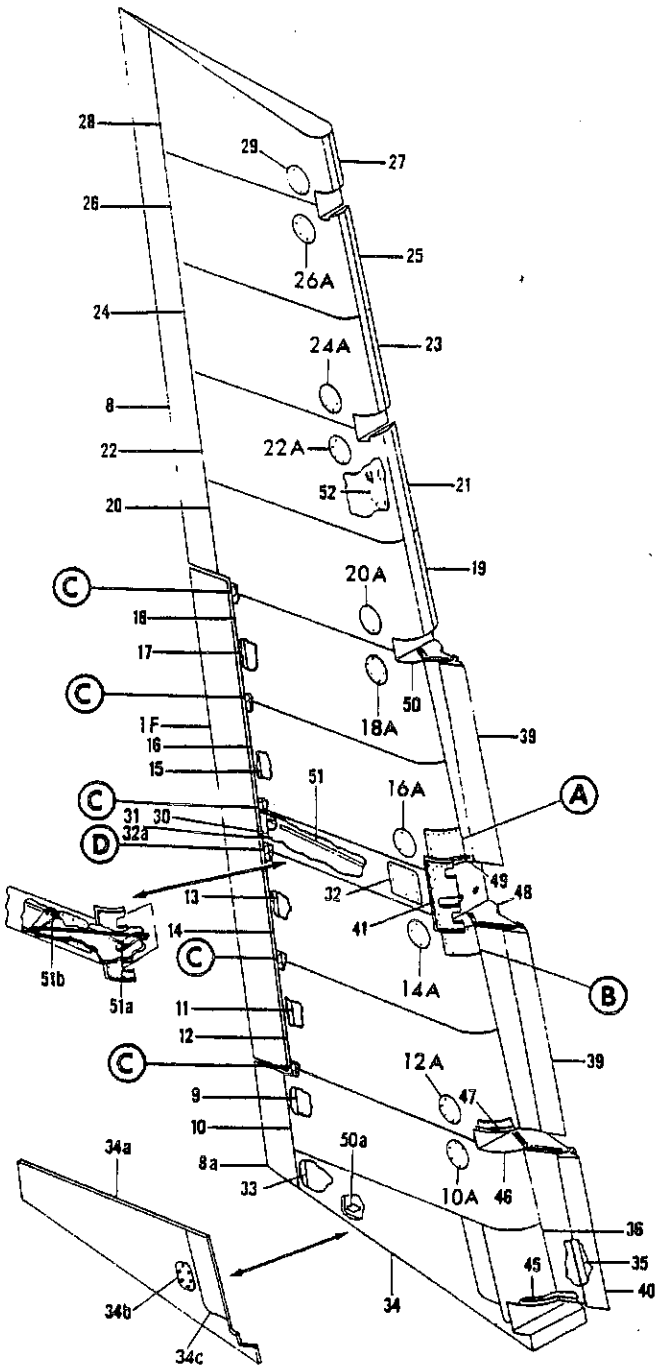

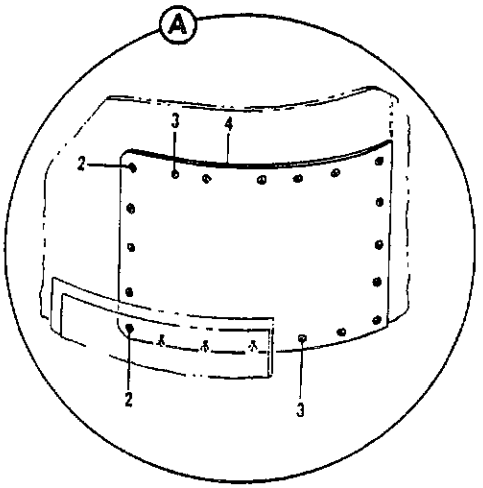

RUDDER ASSY, VERTICAL TAIL
FIGURE 3. SPARES ASSY, VERTICAL TAIL RUDDER (SHEET 1)

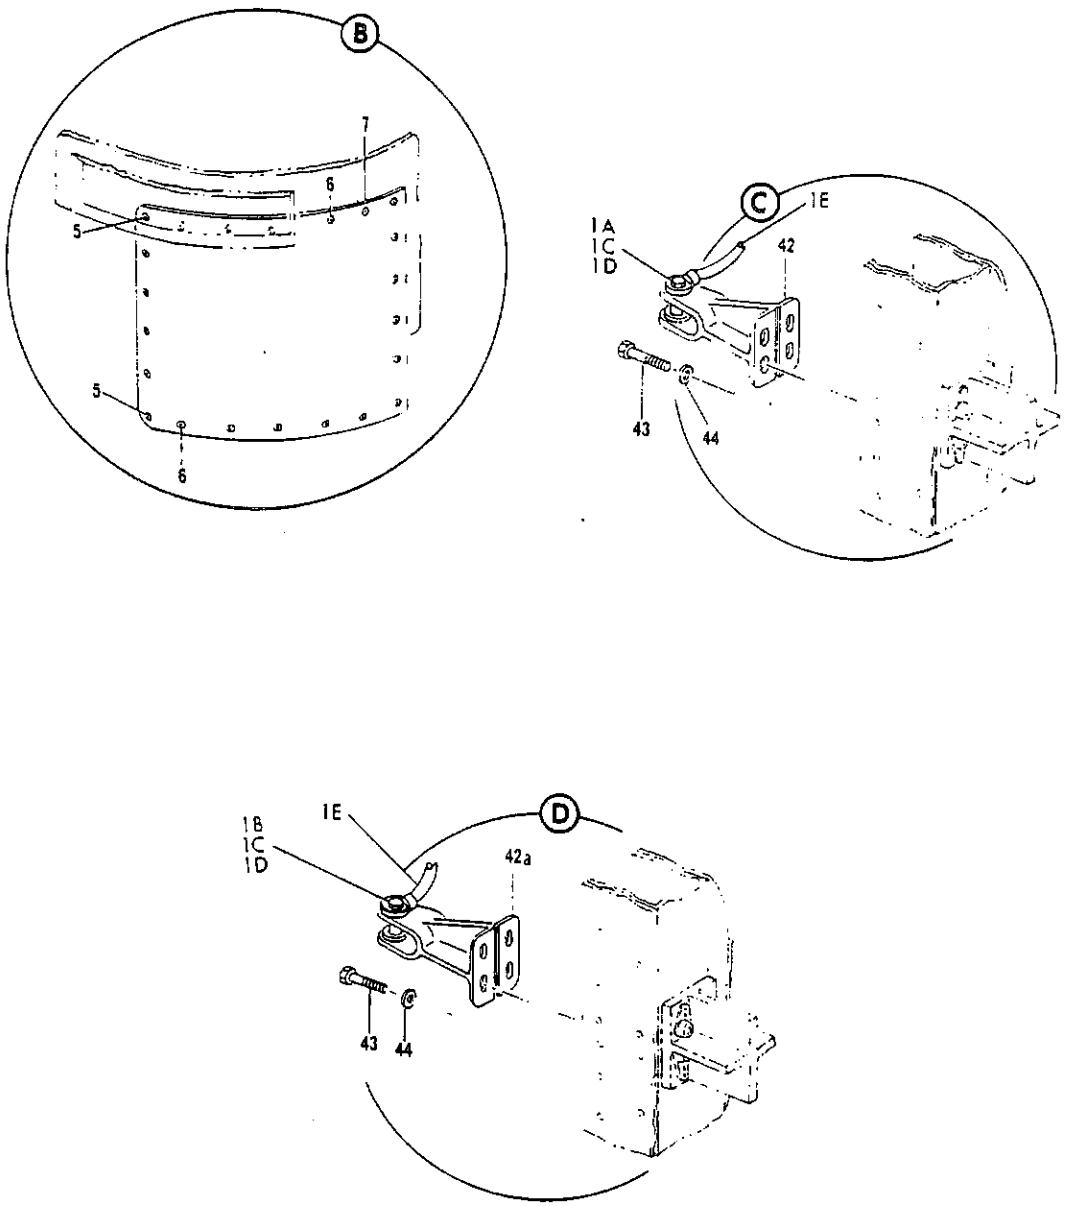


FIGURE 3. RUDDER ASSY, VERTICAL TAIL
SPARES ASSY, VERTICAL TAIL RUDDER (SHEET 2)

	FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	3		65-3495-25	RUDDER ASSY, VERTICAL TAIL (FOR OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (SEE FIG. 1 ITEM 43)		RF
			65-3495-22	SPARES ASSY, VERTICAL TAIL RUDDER (CONSISTS OF PARTS DENOTED BY (S)) (SEE FIG. 2, ITEM 31)		RF
R			65-5345-9	. TAB INSTL, CONTROL	0150	1
RR			65-5345-9	. TAB INSTL, CONTROL (VARIABLE DWG;65-5345-5004)	5299	1
R			65-5345-9	. TAB INSTL, CONTROL (VARIABLE DWG;65-5345-5001)	5151	1
		1A	NAS464P4-15	. . BOLT		5
		1B	NAS464P4-16	. . BOLT		1
		1C	AN960D416L	. . WASHER		12
		1D	AN320-4	. . NUT		6
		1E	BACJ40K5A7A5	. . JUMPER ASSY		6
				ATTACHING PARTS		
			NAS221-6	. . SCREW		6
			AN960D10L	. . WASHER		12
			BACN10BY53W	. . NUT		6
				-------*-------		
R RR		1F	65-5345-12	. . TAB ASSY, CONTROL (FOR OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER)	0151	1
RR R		1F	65-5345-19	. . TAB ASSY, CONTROL (FOR OPTIONAL PAINTED SPARE SEE DWG NO. 63-12050 FOR SUFFIX LETTER)	5299	1
				. . . FLIGHT CONTROL, (SEE FIG. 6)		
				. . . REQUIRED PLACARDS, (SEE 11-2, FIG. 205)		
		S	69-6125	. DOOR INSTL, RUDDER HINGE ACCESS		1
		2	NAS517-3-4	. . SCREW		5
		3	NAS623-3-2	. . SCREW		12
		4	69-6125-1	. . DOOR ASSY, RUDDER HINGE ACCESS		1
		S	69-6124	. DOOR INSTL, RUDDER HINGE ACCESS		1
		5	NAS517-3-4	. . SCREW		6
		6	NAS623-3-2	. . SCREW		13
		7	69-6124-1	. . DOOR ASSY, RUDDER HINGE ACCESS		1
		S	65-6874	. TRAILING EDGE INSTL, RUDDER UPPER (FOR SPARES ONLY)		1
R			65-6874	. TRAILING EDGE INSTL, RUDDER UPPER	0150	1
R			65-6874-18	. TRAILING EDGE INSTL, RUDDER UPPER	5199	1
			65-6874-1	. . TRAILING EDGE ASSY, RUDDER UPPER		1
		8	65-6874-2	. . . PANEL ASSY, RUDDER TRAILING EDGE UPPER		1
		S	65-4044	. TRAILING EDGE INSTL, RUDDER LOWER FIXED (FOR SPARES ONLY)		1
R			65-4044	. TRAILING EDGE INSTL, RUDDER LOWER FIXED	0150	1
R			65-4044-10	. TRAILING EDGE INSTL, RUDDER LOWER FIXED	5199	1
		8A	65-4044-1	. . TRAILING EDGE ASSY, RUDDER LOWER FIXED		1
		9	S 65-4033-1	. PANEL ASSY, RUDDER STATION 30.31 TO 48.67 SKIN LH		1
		10	S 65-4033	. PANEL ASSY, RUDDER STATION 30.31 TO 48.67 SKIN RH		1
		10A	66-4464	. . DOOR, HINGE ACCESS (RH ONLY)		1
				ATTACHING PARTS		
			NAS514P1032-8	. . SCREW		6
				-------*-------		
		11	S 65-4034-1	. PANEL ASSY, RUDDER STATION 48.67 TO 70.97 SKIN LH		1
		12	S 65-4034	. PANEL ASSY, RUDDER STATION 48.67 TO 70.97 SKIN RH		1
		12A	66-4464	. . DOOR, HINGE ACCESS (RH ONLY)		1
				ATTACHING PARTS		
			NAS514P1032-8	. . SCREW		6
				-------*-------		
		13	S 65-4035-1	. PANEL ASSY, RUDDER STATION 70.97 TO 93.26 SKIN LH		1
		14	S 65-4035	. PANEL ASSY, RUDDER STATION 70.97 TO 93.26 SKIN RH		1
		14A	66-4464	. . DOOR, HINGE ACCESS (RH ONLY)		1
				ATTACHING PARTS		
			NAS514P1032-8	. . SCREW		6
				-------*-------		
		15	S 65-4037-1	. PANEL ASSY, RUDDER STATION 102.18 TO 124.48 SKIN LH		1
		16	S 65-4037	. PANEL ASSY, RUDDER STATION 102.18 TO 124.48 SKIN RH		1
		16A	66-4464	. . DOOR, HINGE ACCESS (RH ONLY)		1
				ATTACHING PARTS		
			NAS514P1032-8	. . SCREW		6
				-------*-------		
		17	S 65-4038-1	. PANEL ASSY, RUDDER STATION 124.48 TO 146.78 SKIN LH		1
		18	S 65-4038	. PANEL ASSY, RUDDER STATION 124.48 TO 146.78 SKIN RH		1
		18A	66-4464	. . DOOR, HINGE ACCESS (RH ONLY)		1
				ATTACHING PARTS		
			NAS514P1032-8	. . SCREW		6
				-------*-------		
		19	S 65-4039-1	. PANEL ASSY, RUDDER STATION 146.78 TO 169.08 SKIN LH (OPTIONAL TO 65-4039-23)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	3 19	S	65-4039-23	. PANEL ASSY, RUDDER STATION 146.78 TO 169.08 SKIN LH . (OPTIONAL 65-4039-1)		1
	20	S	65-4039	. PANEL ASSY, RUDDER STATION 146.78 TO 169.08 SKIN RH . (OPTIONAL TO 65-4039-22)		1
	20	S	65-4039-22	. PANEL ASSY, RUDDER STATION 146.78 TO 169.08 SKIN RH . (OPTIONAL 65-4039)		1
	20A		66-4464	. . DOOR, HINGE ACCESS (RH ONLY).		1
				ATTACHING PARTS		
			NAS514P1032-8	. . SCREW		6
				-------*-------		
	21	S	65-4040-1	. PANEL ASSY, RUDDER STATION 169.08 TO 191.38 SKIN LH .		1
	22	S	65-4040	. PANEL ASSY, RUDDER STATION 169.08 TO 191.38 SKIN RH .		1
	22A		66-4464	. . DOOR, HINGE ACCESS (RH ONLY).		1
				ATTACHING PARTS		
			NAS514P1032-8	. . SCREW		6
				-------*-------		
	23	S	65-4041-1	. PANEL ASSY, RUDDER STATION 191.38 TO 213.68 SKIN LH .		1
	24	S	65-4041	. PANEL ASSY, RUDDER STATION 191.38 TO 213.68 SKIN RH .		1
	24A		66-4464	. . DOOR, HINGE ACCESS (RH ONLY).		1
				ATTACHING PARTS		
			NAS514P1032-8	. . SCREW		6
				-------*-------		
	25	S	65-4042-1	. PANEL ASSY, RUDDER STATION 213.68 TO 235.98 SKIN LH .		1
	26	S	65-4042	. PANEL ASSY, RUDDER STATION 213.68 TO 235.98 SKIN RH .		1
	26A		66-4464	. . DOOR, HINGE ACCESS (RH ONLY).		1
				ATTACHING PARTS		
			NAS514P1032-8	. . SCREW		6
				-------*-------		
	27		65-6348-15	. PANEL ASSY, RUDDER STATION 235.98 TO WATERLINE 532 LH		1
	27	S	65-6348-15	. PANEL ASSY, RUDDER STATION 235.98 TO WATERLINE 532 LH (FOR SPARES ONLY)		1
	28		65-6348-16	. PANEL ASSY, RUDDER STATION 235.98 TO WATERLINE 532 RH		1
	28	S	65-6348-16	. PANEL ASSY, RUDDER STATION 235.98 TO WATERLINE 532 RH (FOR SPARES ONLY)		1
	29		66-4464	. . DOOR, RUDDER HINGE ACCESS (RH ONLY)		1
				ATTACHING PARTS		
			NAS514P1032-8	. . SCREW		6
				-------*-------		
R	30		69-11622-5	. PANEL ASSY, RUDDER STATION 93.26 TO 102.18 SKIN LH. .	0150	1
R	30		69-11622-10	. PANEL ASSY, RUDDER STATION 93.26 TO 102.18 SKIN LH. .	5199	1
	30	S	69-11622	. PANEL ASSY, RUDDER STATION 93.26 TO 102.18 SKIN LH. . (FOR SPARES ONLY)		1
R			69-13762-1	. PANEL INSTL, RUDDER STATION 93.26 TO 102.18 SKIN RH .	0150	1
		S	69-13762-1	. PANEL INSTL, RUDDER STATION 93.26 TO 102.18 SKIN RH . (FOR SPARES ONLY)		1
R			69-13762-15	. PANEL INSTL, RUDDER STATION 93.26 TO 102.18 SKIN RH .	5199	1
	32A		69-13762-2	. . PANEL ASSY, RUDDER STATION 93.26 TO 102.18 SKIN . .		1
	32A	S	69-13762-2	. . PANEL ASSY, RUDDER STATION 93.26 TO 102.18 SKIN . . (FOR SPARES ONLY)		1
				ATTACHING PARTS		
			NAS517-3-3	. . SCREW		75
			NAS517-4-5	. . SCREW		6
				-------*-------		
	33	S	65-4032-1	. PANEL ASSY, RUDDER STATION 30.31 LOWER CLOSURE RIB. . SKIN LH		1
	34A		65-4032-31	. PANEL ASSY, RUDDER STATION 30.31 LOWER CLOSURE RIB. . SKIN RH		1
	34A	S	65-4032-31	. PANEL ASSY, RUDDER STATION 30.31 LOWER CLOSURE RIB. . SKIN RH (FOR SPARES ONLY)		1
	34B		66-5105	. . DOOR, RUDDER AND ELEVATOR SKIN PANEL INSPECTION . .		1
				ATTACHING PARTS		
			NAS514P1032-8	. . SCREW		6
				-------*-------		
			50-2696-3001	. SUPPORT INSTL, STATION 11.68 TO 30.31 RUDDER INTER. . RIB (LH)		1
			50-2696-3002	. SUPPORT INSTL, STATION 11.68 TO 30.31 RUDDER INTER. . RIB (RH)		1
	34C		50-2696-2003	. . SKIN, STATION 11.68 TO 30.31 RUDDER INTER RIB (LH)		1
	34C		50-2696-2004	. . SKIN, STATION 11.68 TO 30.31 RUDDER INTER RIB (RH)		1
	35	S	65-4032-3	. PANEL ASSY, RUDDER STATION 30.31 LOWER CLOSURE RIB. . SKIN LH		1
	36	S	65-4032-4	. PANEL ASSY, RUDDER STATION 30.31 LOWER CLOSURE RIB. . SKIN RH		1
		S	65-4043	. SKIN INSTL, NOSE (FLIGHT CONTROL ONLY).		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
3 39	S 90-2859-2003	. . FITTING, RUDDER AND ELEVATOR BALANCE PANEL HINGE. .		2
40	S 90-2859-2004	. . FITTING, RUDDER AND ELEVATOR BALANCE PANEL HINGE. .		1
		. . REQUIRED PLACARDS, (SEE 11-2, FIG. 206)		
	S 65-30010	. FAIRING INSTL, STATION 91.46 TO 103.98 RUDDER NOSE. . (FOR SPARES ONLY)		1
	65-30010-1	. FAIRING INSTL, STATION 91.46 TO 103.98 RUDDER NOSE. .		1
41	S 69-19042-1	. . FAIRING, STATION 91.46 TO 103.98 RUDDER NOSE (FOR . SPARES ONLY)		1
41	69-30600-2	. . FAIRING, STATION 91.46 TO 103.98 RUDDER NOSE. . . . ATTACHING PARTS		1
	NAS517-4-4	. . SCREW		8
	NAS517-3-4	. . SCREW		6
		-------*-------		
	65-4031-9	. SPAR INSTL, RUDDER TRAILING EDGE.		1
	S 65-4031-9	. SPAR INSTL, RUDDER TRAILING EDGE (FOR SPARES ONLY). .		1
42	69-3243	. . FITTING, RUDDER TAB HINGE		5
42A	S 69-10993	. . FITTING, RUDDER TAB HINGE (USED ON 65-4031 AND -9) ATTACHING PARTS		1
43	AN4-10A	. . BOLT.		24
44	AN960-416	. . WASHER.		24
		-------*-------		
45	S 65-2882	. RIB INSTL, RUDDER STATION 13.75 RUDDER NOSE (SEE FIG. 5)		1
46	S 65-2888	. RIB INSTL, RUDDER STATION 46.87 RUDDER NOSE (SEE FIG. 5)		1
47	S 65-2889	. RIB INSTL, RUDDER STATION 50.47 RUDDER NOSE (SEE FIG. 5)		1
48	S 65-2895	. RIB INSTL, RUDDER STATION 91.46 RUDDER NOSE (SEE FIG. 5)		1
49	65-2896-9	. RIB INSTL, RUDDER STATION 103.98 RUDDER NOSE (SEE . . FIG. 5)		1
50	S 65-2902	. RIB INSTL, RUDDER STATION 144.98 RUDDER NOSE (SEE . . FIG. 5)		1
50A	AN7510F2	. PLATE, IDENTIFICATION		1
51A	S 50-8703-788	. CONTROL INSTL, (FOR SPARES ONLY).		1
51A	50-8703-188	. CONTROL INSTL, RUDDER (SEE 27-9, FIG. 14A).		1
51B	S 50-8706-788	. CONTROL INSTL, SECTION 88 TRIM (FOR SPARES ONLY). . .		1
51B	50-8706-188	. CONTROL INSTL, SECTION 88 RUDDER TRIM (SEE 27-9,. . . FIG. 30A)		1
52	S 5-95544-3033	. SPAR INSTL, RUDDER (SEE FIG. 4)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

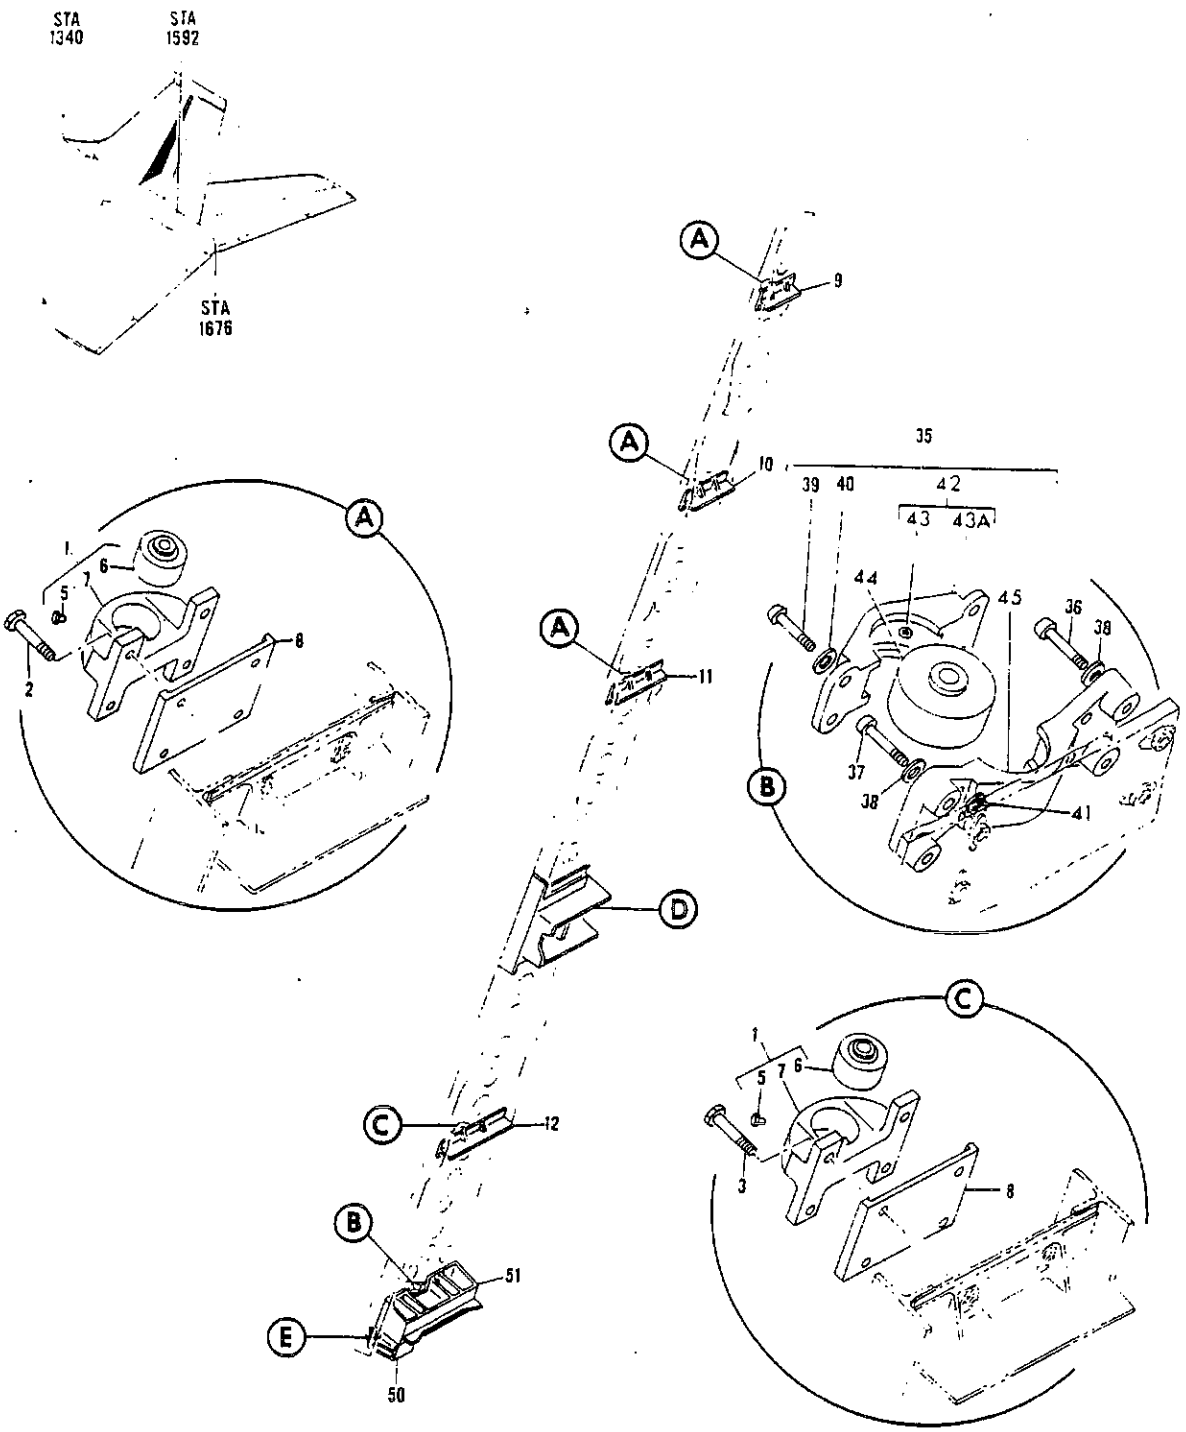


FIGURE 4. SPAR INSTL, RUDDER (SHEET 1)

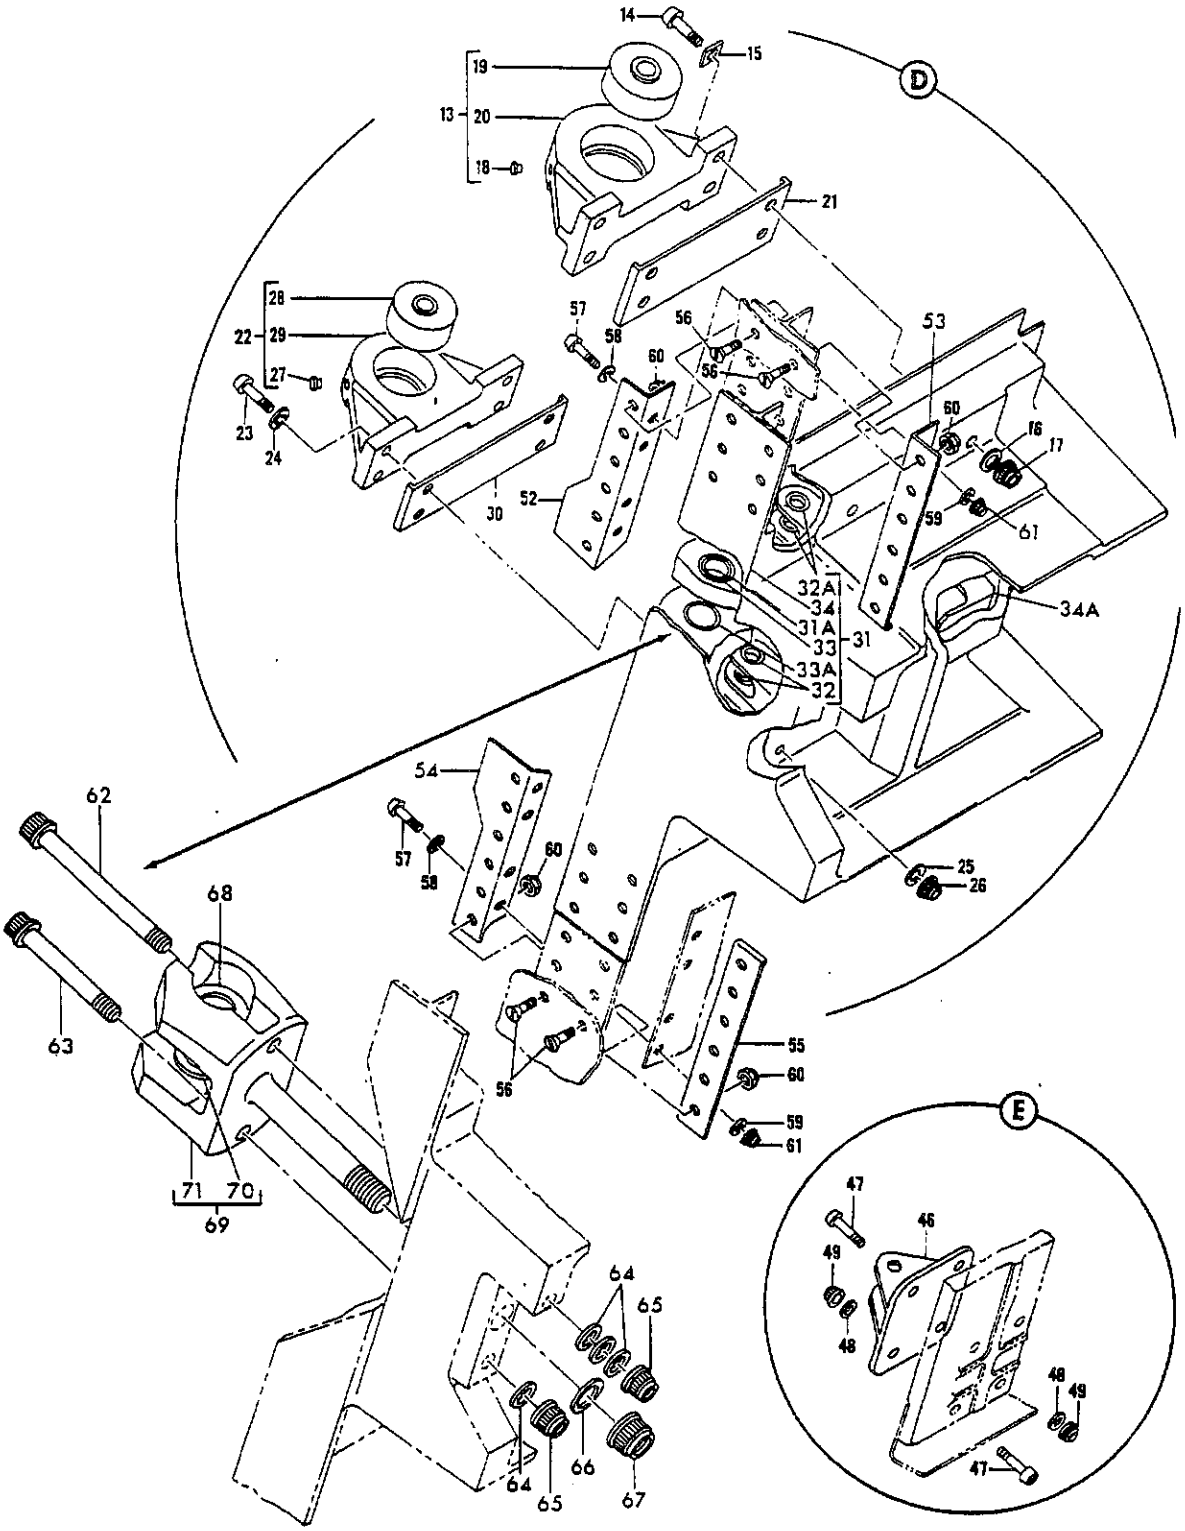


FIGURE 4. SPAR INSTL. RUDDER (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
4	5-95544-3033	SPAR INSTL, RUDDER (SEE FIG. 3, ITEM 52 AND FIG. 3A, ITEM 68)		RF
1	6-83193-3002	. FITTING ASSY, ELEVATOR AND RUDDER HINGE		4
		ATTACHING PARTS		
2	AN4-12A	. BOLT.		12
3	AN4-12A	. BOLT.		4
		-------*-------		
5	NAS516-1	. . FITTING		1
6	BACB10C135H	. . BEARING		1
7	6-83193-3003	. . FITTING, ELEVATOR AND RUDDER HINGE.		1
8	6-83202	. PLATE, ELEVATOR AND RUDDER HINGE SHEAR.		4
9	9-67010-2003	. FITTING, ELEVATOR AND RUDDER HINGE SUPPORT.		1
10	9-67010-2002	. FITTING, ELEVATOR AND RUDDER HINGE SUPPORT.		1
11	9-67010-2001	. FITTING, ELEVATOR AND RUDDER HINGE SUPPORT.		1
12	9-67010-2000	. FITTING, ELEVATOR AND RUDDER HINGE SUPPORT.		1
13	69-5405	. FITTING ASSY, RUDDER STATION 102.18 HINGE		1
		ATTACHING PARTS		
14	MS20007-18	. BOLT.		4
15	5-95544-3031	. WASHER, RUDDER SPAR		4
16	MS20002-7	. WASHER.		4
17	BACN10B-L7L	. NUT		4
		-------*-------		
18	NAS516-1	. . FITTING		1
19	BACB10C94H	. . BEARING		1
20	69-5405-1	. . FITTING, RUDDER STATION 102.18 HINGE.		1
21	66-4904-1	. PLATE, RUDDER STATION 102.18 HINGE SHEAR.		1
22	69-5406	. FITTING ASSY, RUDDER STATION 93.26 HINGE.		1
		ATTACHING PARTS		
23	MS20005-16	. BOLT.		4
24	MS20002C5	. WASHER.		4
25	MS20002-5	. WASHER.		4
26	BACN10BL5L	. NUT		4
		-------*-------		
27	NAS516-1	. . FITTING		1
28	BACB10C93H	. . BEARING		1
29	69-5406-1	. . FITTING, RUDDER STATION 93.26 HINGE		1
30	66-4905-1	. PLATE, RUDDER STATION 93.26 HINGE SHEAR		1
31	65-5937-11	. FITTING ASSY, HYDRAULIC ACTUATOR SUPPORT.	5199	1
31	65-5937-7	. FITTING ASSY, HYDRAULIC ACTUATOR SUPPORT (AFFECTED BY AD 69-13-2 AND AD 71-9-2) (DELETED BY SB 2903)	0150	1
31	65-5937-11	. FITTING ASSY, HYDRAULIC ACTUATOR SUPPORT.	0150	1
32	NAS75-4-006	. . BUSHING		2
32A	NAS75-4-007	. . BUSHING		2
33	NAS75-12-018	. . BUSHING, (USED ON 65-5937-3, -5, -7 AND -15).	5199	1
33	69-34905-13	. . BUSHING, (USED ON 65-5937-9 AND 11)	5199	1
33	69-34905-13	. . BUSHING, (DELETED BY SB 2903) (USED ON 65-5937-9. AND -11)	0150	1
33	69-34905-16	. . BUSHING, (FIRST OVERSIZE) (ADDED BY SB 2903).	0150	1
33	69-34905-18	. . BUSHING, (SECOND OVERSIZE) (ADDED BY SB 2903)	0150	1
33	NAS75-12-018	. . BUSHING, (DELETED BY SB 2903) (USED ON 65-5937-7)	0150	1
33A	NAS75-12-018	. . BUSHING, (USED ON 65-5937-3, -5, -7 AND -15).	5199	1
33A	69-34905-13	. . BUSHING, (USED ON 65-5937-9 AND -11).	5199	1
33A	69-34905-13	. . BUSHING, (DELETED BY SB 2903) (USED ON 65-5937-9. AND -11)	0150	1
R 33A	69-34905-15	. . BUSHING, (FIRST OVERSIZE)	0150	1
R		(ADDED BY SB 2903)		
33A	69-34905-19	. . BUSHING, (SECOND OVERSIZE) (ADDED BY SB 2903)	0150	1
33A	NAS75-12-018	. . BUSHING, (DELETED BY SB 2903) (USED ON 65-5937-7)	0150	1
34	65-5937-14	. . FITTING, (ADDED BY SB 2903) (USED ON 65-5937-11).		1
34	65-5937-8	. . FITTING, (DELETED BY SB 2903) (USED ON 65-5937-7)	0150	1
35	9-65409-3000	. FITTING ASSY, RUDDER HINGE THRUST		1
		ATTACHING PARTS		
36	MS20006-26	. BOLT.		2
37	MS20006-25	. BOLT.		2
38	MS20002C6	. WASHER.		4
		-------*-------		
39	MS20005-12	. . BOLT.		4
40	MS20002C5	. . WASHER.		4
41	BACN10B054	. . NUT		4
42	9-65367-3000	. . CAP ASSY, RUDDER HINGE THRUST (MATCHED PART, ORDER ONLY WITH 9-65364-2000)		1
43	NAS516-1	. . . FITTING		1
43A	9-65367-2001	. . . CAP, THRUST HINGE		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
4 44	BACB10C96YR	. . BEARING . . . . . (OPTIONAL BACB10CH9)		1
44	BACB10CH9	. . BEARING . . . . . (OPTIONAL TO BACB10C96YR)		1
45	9-65364-2000	. . FITTING, RUDDER HINGE THRUST (MATCHED PART, ... ORDER ONLY WITH 9-65367-3000)		1
46	69-2978	. FITTING, RUDDER STATION 7.15 SNUBBER ATTACH		1
		ATTACHING PARTS		
47	MS20005-14	. BOLT.		4
48	MS20002C5	. WASHER.		4
49	BACN10B-L5L	. NUT		4
		-------*-------		
50	5-97638-2000	. FITTING, RUDDER STATION 7.15 SNUBBER SUPPORT.		1
51	5-96275-2000	. FITTING, RUDDER STATION 11.685 HINGE SUPPORT.		1
52	69-5750-2	. ANGLE, RUDDER SPAR CHORD SPLICE		1
53	69-5750-3	. ANGLE, RUDDER SPAR CHORD SPLICE		1
54	69-5750-4	. ANGLE, RUDDER SPAR CHORD SPLICE		1
55	69-5750-5	. ANGLE, RUDDER SPAR CHORD SPLICE		1
		ATTACHING PARTS		
56	NAS584-3	. BOLT.		24
57	MS20004-6	. BOLT.		8
58	MS20002C4	. WASHER.		8
59	MS20002-4	. WASHER.		8
60	NAS679A4W	. NUT		24
61	BACN10B-L4L	. NUT		8
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

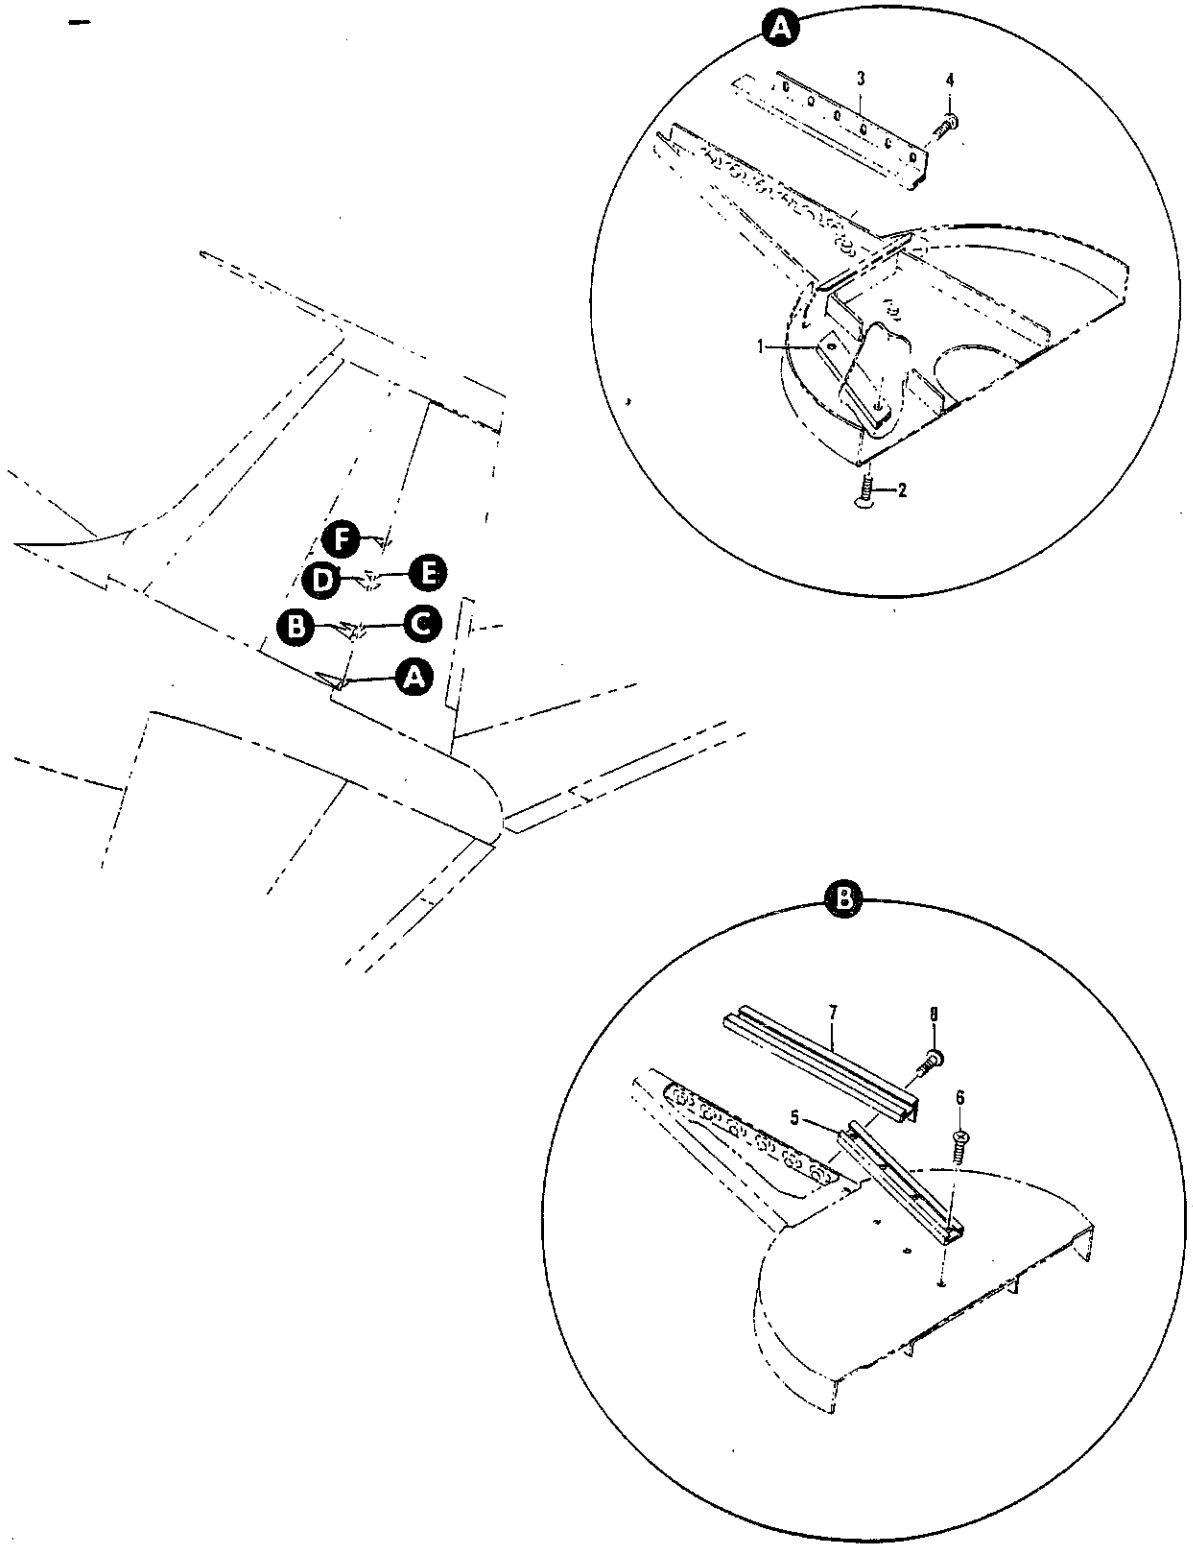


FIGURE 5. RIB INSTL, RUDDER NOSE (SHEET 1)

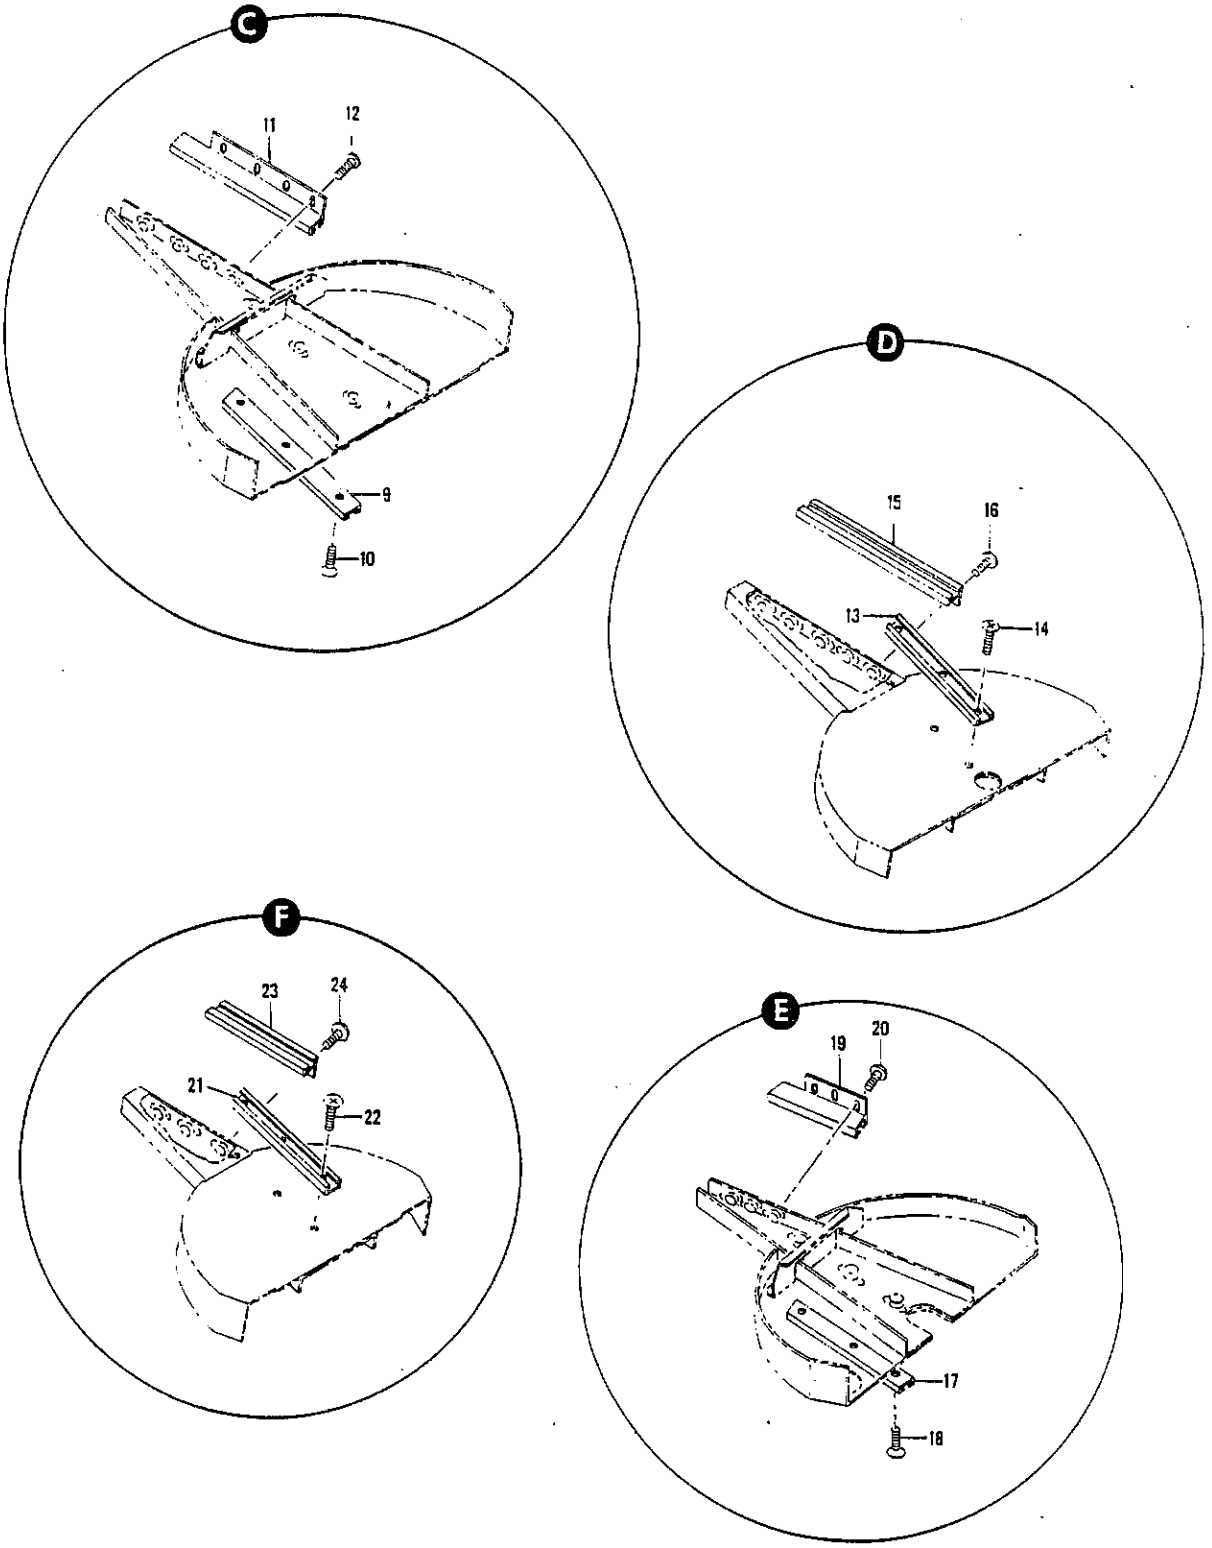


FIGURE 5. RIB INSTL, RUDDER NOSE (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5		RIB INSTL, RUDDER NOSE.		
	65-2882	. RIB INSTL, RUDDER STATION 13.75 RUDDER NOSE (SEE FIG. 3, ITEM 45 AND FIG. 3A, ITEM 59)		RF
1	65-4115-30	. . RETAINER, RUDDER BALANCE PANEL SEAL . . . . . ATTACHING PARTS		1
2	NAS514P1032-8	. . SCREW . . . . . -------*-------		2
3	65-4115-43	. . RETAINER, RUDDER BALANCE PANEL SEAL . . . . . ATTACHING PARTS		1
4	AN520-10R6	. . SCREW . . . . . -------*-------		6
	65-2888	. RIB INSTL, RUDDER STATION 46.87 RUDDER NOSE (SEE FIG. 3, ITEM 46 AND FIG. 3A, ITEM 60)		RF
5	65-4115-31	. . RETAINER, RUDDER BALANCE PANEL SEAL . . . . . ATTACHING PARTS		1
6	NAS514P1032-8	. . SCREW . . . . . -------*-------		4
7	65-4115-45	. . RETAINER, RUDDER BALANCE PANEL SEAL . . . . . ATTACHING PARTS		1
	AN520-10R6	. . SCREW . . . . . -------*-------		6
	65-2889	. RIB INSTL, RUDDER STATION 50.47 RUDDER NOSE (SEE FIG. 3, ITEM 47 AND FIG. 3A, ITEM 61)		RF
9	65-4115-32	. . RETAINER, RUDDER BALANCE PANEL SEAL . . . . . ATTACHING PARTS		1
10	NAS514P1032-8	. . SCREW . . . . . -------*-------		3
11	65-4115-44	. . RETAINER, RUDDER BALANCE PANEL SEAL . . . . . ATTACHING PARTS		1
12	AN520-10R6	. . SCREW . . . . . -------*-------		4
	65-2895	. RIB INSTL, RUDDER STATION 91.46 RUDDER NOSE (SEE FIG. 3, ITEM 48 AND FIG. 3A, ITEM 62)		RF
13	65-4115-41	. . RETAINER, RUDDER BALANCE PANEL SEAL . . . . . ATTACHING PARTS		1
14	NAS514P1032-8	. . SCREW . . . . . -------*-------		3
15	65-4115-46	. . RETAINER, RUDDER BALANCE PANEL SEAL . . . . . ATTACHING PARTS		1
16	AN520-10R6	. . SCREW . . . . . -------*-------		5
	65-2896-9	. RIB INSTL, RUDDER STATION 103.98 RUDDER NOSE (SEE . . FIG. 3, ITEM 49 AND FIG. 3A, ITEM 63)		RF
17	65-4115-51	. . RETAINER, RUDDER BALANCE PANEL SEAL . . . . . ATTACHING PARTS		1
18	NAS514P1032-8	. . SCREW . . . . . -------*-------		3
19	65-4115-36	. . RETAINER, RUDDER BALANCE PANEL SEAL . . . . . ATTACHING PARTS		1
20	AN520-10R6	. . SCREW . . . . . -------*-------		3
	65-2902	. RIB INSTL, RUDDER STATION 144.98 RUDDER NOSE (SEE . . FIG. 3, ITEM 50 AND FIG. 3A, ITEM 64)		RF
21	65-4115-19	. . RETAINER, RUDDER BALANCE PANEL SEAL . . . . . ATTACHING PARTS		1
22	NAS514P1032-8	. . SCREW . . . . . -------*-------		3
23	65-4115-47	. . RETAINER, RUDDER BALANCE PANEL SEAL . . . . . ATTACHING PARTS		1
24	AN520-10R6	. . SCREW . . . . . -------*-------		3

MISSING ITEM NUMBERS ARE NOT APPLICABLE

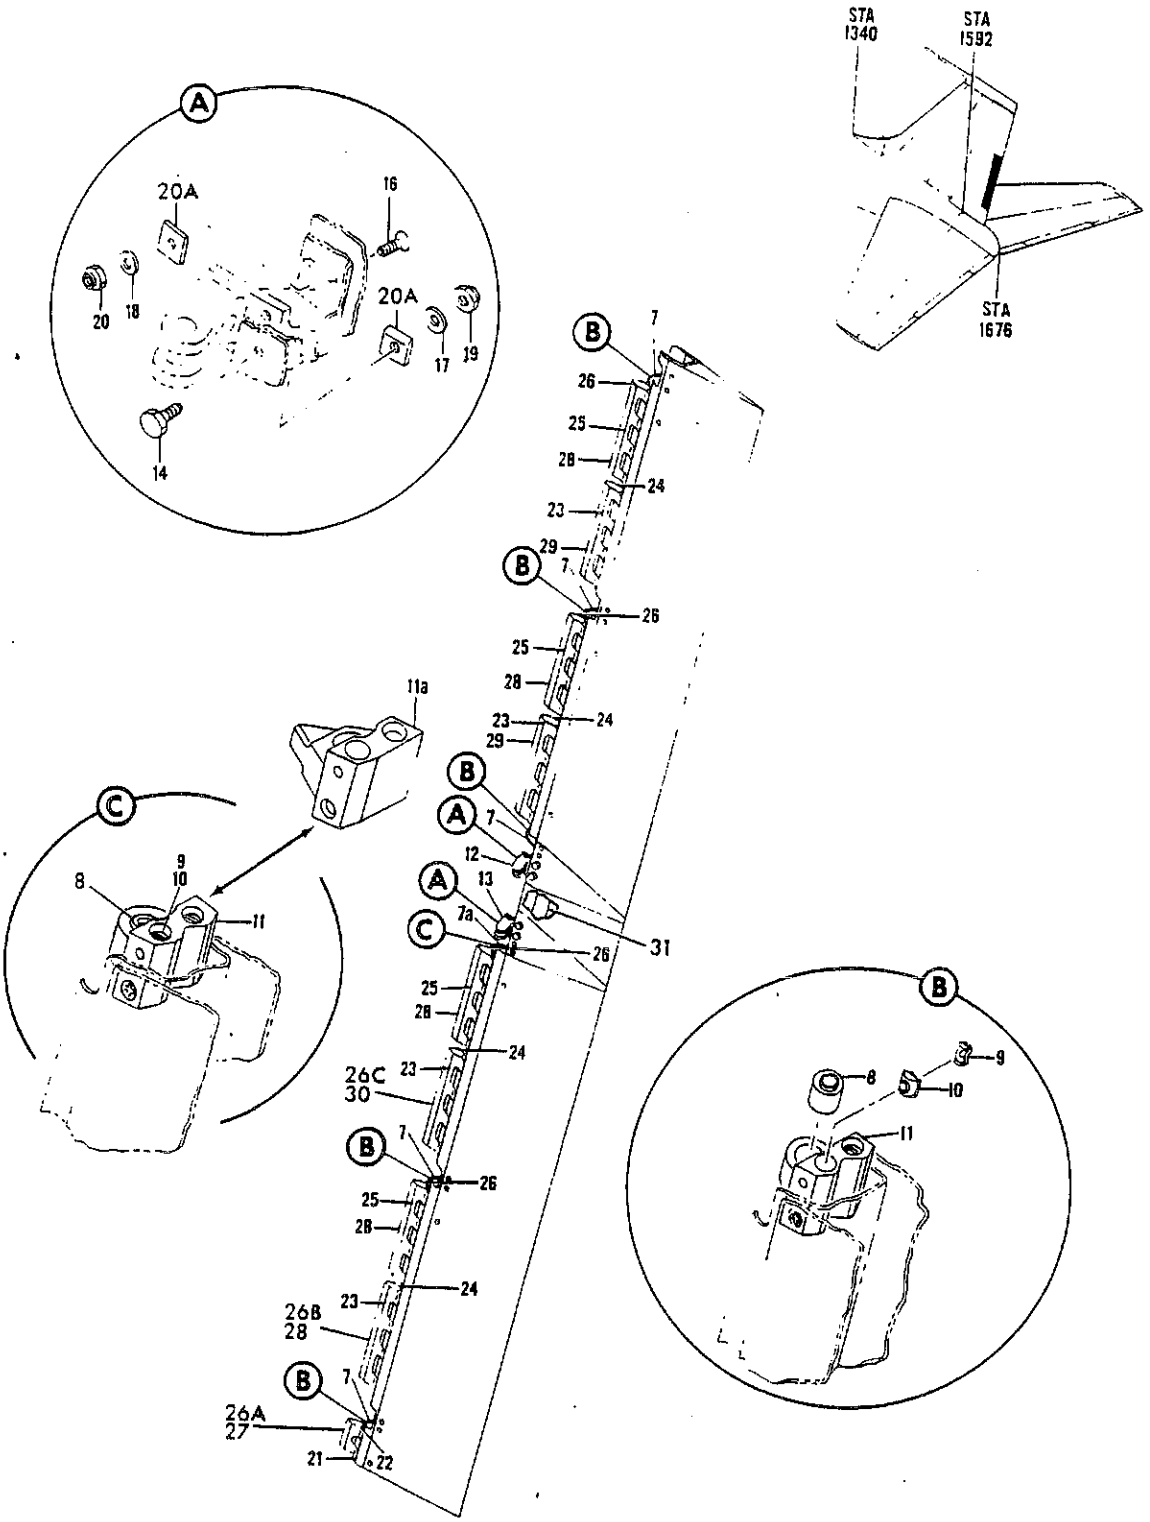


FIGURE 6. TAB INSTL, RUDDER CONTROL (FLIGHT CONTROL ONLY)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
6	65-5345-12	TAB ASSY, RUDDER CONTROL (FOR OPTIONAL PAINTED SPARE. SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (SEE FIG. 3, ITEM 1F AND FIG. 3A, ITEM 5)	0151	RF
	65-5345-19	TAB ASSY, RUDDER CONTROL (FOR OPTIONAL PAINTED SPARE. SEE DWG NO. 63-12050 FOR SUFFIX LETTER) (SEE FIG. 3, ITEM 1F)	5299	RF
7	69-3888-5	. HINGE ASSY, (REPLACES 69-3888-1 BY SB 3409)		5
R 7	69-3888-1	. HINGE ASSY, RUDDER TAB (DELETED BY SB 3409)		1
7A	69-10992	. HINGE ASSY, RUDDER TAB (DELETED BY SB 3409)		1
7A	69-10992-2	. HINGE ASSY, RUDDER TAB (REPLACES 69-10992 BY SB 3409)		1
		ATTACHING PARTS		
	NAS517-3-4	. SCREW		24
		-------*-------		
8	DW4K2	. . BEARING, (V21335) (OPTIONAL TO AND REPLACEMENT FOR MDW4K2 (V21335)) (OPTIONAL DW4K2E6531 (V21335))		1
8	MDW4K2	. . BEARING, (V21335) (OPTIONAL AND FOR REPLACEMENT ORDER DW4K2 (V21335))		1
8	DW4K2E6531	. . BEARING, (V21335) (OPTIONAL TO DW4K2 (V21335))		1
9	BACR10V3	. . RETAINER.		4
10	BACN10CP3L	. . NUT		4
11	69-3888-7	. . FITTING, RUDDER TAB HINGE (USED ON 69-3888-5)		1
11A	69-10992-1	. . FITTING, RUDDER TAB HINGE (USED ON 69-10992).		1
11A	69-10992-3	. . FITTING, RUDDER TAB HINGE (USED ON 69-10992-2).		1
12	69-3886-2	. FITTING, STATION 100.68 RUDDER CONTROL TAB ACTUATOR		1
13	69-3886-1	. FITTING, STATION 95.12 RUDDER CONTROL TAB ACTUATOR.		1
		ATTACHING PARTS		
14	NAS1104-7W	. BOLT.		4
16	NAS517-3-6	. SCREW		4
17	AN960D416	. WASHER.		4
18	AN960D10	. WASHER.		4
19	NAS679A4W	. NUT		4
20	NAS679A3W	. NUT		4
		-------*-------		
20A	65-5345-7	. FILLER, RUDDER CONTROL TAB RADIUS		8
21	69-8394-3	. RETAINER, RUDDER CONTROL TAB WEIGHT		1
22	69-8394-6	. RETAINER, RUDDER CONTROL TAB WEIGHT		1
23	69-8394-1	. RETAINER, RUDDER CONTROL TAB WEIGHT		4
24	69-8394-4	. RETAINER, RUDDER CONTROL TAB WEIGHT		4
25	69-8394-2	. RETAINER, RUDDER CONTROL TAB WEIGHT		4
26	69-8394-5	. RETAINER, RUDDER CONTROL TAB WEIGHT		4
26B	66-8335-15	. WEIGHT, BALANCE (USED WITH 66-8335-9)	5299	AR
26C	66-8335-16	. WEIGHT, BALANCE (USED WITH 66-8335-10).	5299	AR
27	66-8335-3	. WEIGHT, RUDDER CONTROL TAB BALANCE.	0151	1
28	66-8335-4	. WEIGHT, RUDDER CONTROL TAB BALANCE. (OPTIONAL 66-8335-1)	0151	5
28	66-8335-1	. WEIGHT, RUDDER CONTROL TAB BALANCE. (OPTIONAL TO 66-8335-4)	0151	5
29	66-8335-2	. WEIGHT, RUDDER CONTROL TAB BALANCE.	0151	2
30	66-8335-2 WEIGHT	. WEIGHT, RUDDER PANEL BALANCE (REFER TO DWG NO. 65-6346 FOR PART NO. USED) (PROPER WEIGHT FURNISHED WITH TAB ASSEMBLIES) (INSTALL PER 65-5345)		AR
31	65-5345-17	. SPAR, (ALTERED FROM;65-5349-1). ADDED BY PER REV Z16		1
		. FOR REFERENCE TO OTHER TAB DETAILS, SEE NHA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

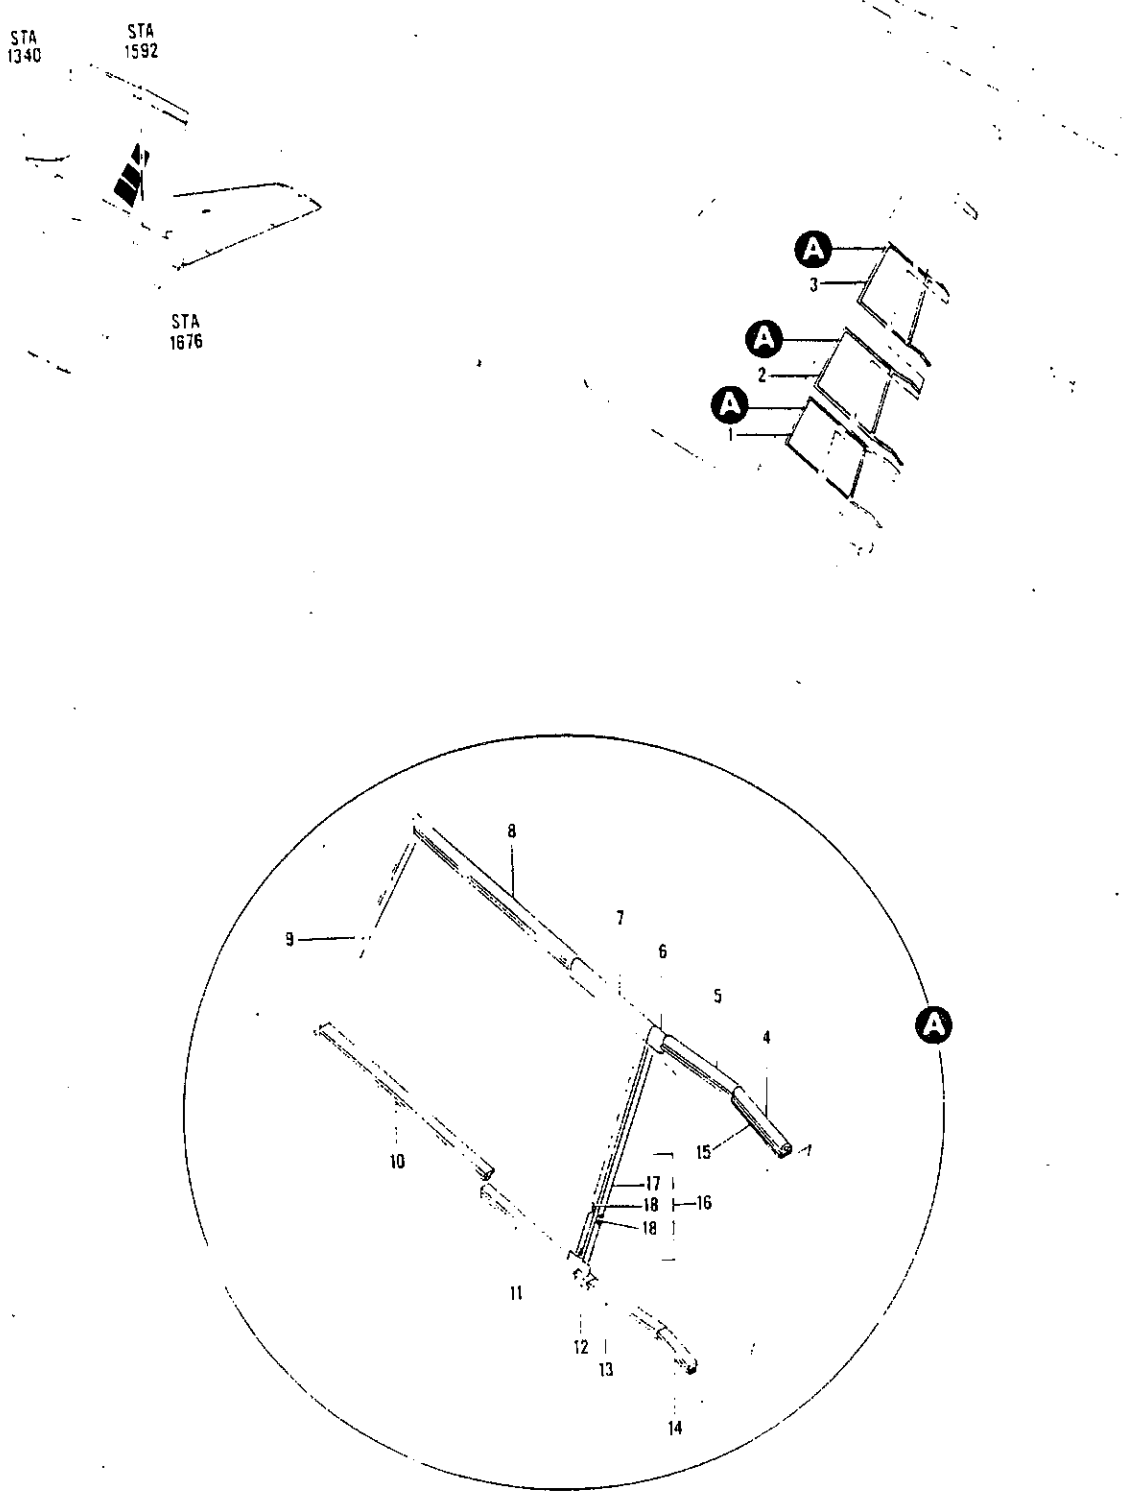


FIGURE 7. SEAL INSTL RUDDER BALANCE CAVITY

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
7 1	65-7144-1	SEAL INSTL, RUDDER BALANCE CAVITY (BAY NO. 1) (SEE FIG. 1, ITEM 23)		RF
2	65-7144-2	SEAL INSTL, RUDDER BALANCE CAVITY (BAY NO. 2) (SEE FIG. 1, ITEM 24)		RF
3	65-7144-3	SEAL INSTL, RUDDER BALANCE CAVITY (BAY NO. 3) (SEE FIG. 1, ITEM 25)		RF
4	10-60120-34	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-34 (V71643)) (USED ON 65-7144-1)		1
4	10-60120-35	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-35 (V71643)) (USED ON 65-7144-2)		1
4	10-60120-36	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-36 (V71643)) (USED ON 65-7144-3)		1
5	10-60120-4	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-4 (V71643)) (USED ON 65-7144-1)		1
5	10-60120-5	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-5 (V71643)) (USED ON 65-7144-2)		1
5	10-60120-6	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-6 (V71643)) (USED ON 65-7144-3)		1
6	10-60120-13	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-13 (V71643))		1
7	10-60120-10	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-10 (V71643)) (USED ON 65-7144-1)		1
7	10-60120-11	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-11 (V71643)) (USED ON 65-7144-2)		1
7	10-60120-12	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-12 (V71643)) (USED ON 65-7144-3)		1
8	10-60120-22	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-22 (V71643)) (USED ON 65-7144-1)		1
8	10-60120-23	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-23 (V71643)) (USED ON 65-7144-2)		1
8	10-60120-24	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-24 (V71643)) (USED ON 65-7144-3)		1
9	10-60120-25	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-25 (V71643)) (USED ON 65-7144-1)		1
9	10-60120-26	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-26 (V71643)) (USED ON 65-7144-2 AND 65-7144-3)		1
10	10-60120-19	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-19 (V71643)) (USED ON 65-7144-1)		1
10	10-60120-20	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-20 (V71643)) (USED ON 65-7144-2)		1
10	10-60120-21	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-21 (V71643)) (USED ON 65-7144-3)		1
11	10-60120-7	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-7 (V71643)) (USED ON 65-7144-1)		1
11	10-60120-8	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-8 (V71643)) (USED ON 65-7144-2)		1
11	10-60120-9	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-9 (V71643)) (USED ON 65-7144-3)		1
12	10-60120-37	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-37 (V71643))		1
13	10-60120-27	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-27 (V71643)) (USED ON 65-7144-1)		1
13	10-60120-28	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-28 (V71643)) (USED ON 65-7144-2)		1
13	10-60120-29	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-29 (V71643)) (USED ON 65-7144-3)		1
14	10-60120-31	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-31 (V71643)) (USED ON 65-7144-1)		1
14	10-60120-32	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-32 (V71643)) (USED ON 65-7144-2)		1
14	10-60120-33	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (PART NO.. . . 4791-33 (V71643)) (USED ON 65-7144-3)		1
15	BACS40A8	. SHIM.		AR
16	69-9065	. SEAL ASSY, RUDDER BALANCE PANEL HINGE (USED ON. . . . 65-7144-1)		1
16	69-9065-1	. SEAL ASSY, RUDDER BALANCE PANEL HINGE (USED ON. . . . 65-7144-2 AND 65-7144-3)		1
17	69-9065-2	. . SEAL, RUDDER BALANCE PANEL HINGE FABRIC (USED ON. . 69-9065)		1
17	69-9065-3	. . SEAL, RUDDER BALANCE PANEL HINGE FABRIC (USED ON. . 69-9065-1)		1
18	BACP18G2-3083	. . PIN, (USED ON 69-9065).		2
18	BACP18G2-3871	. . PIN, (USED ON 69-9065-1).		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

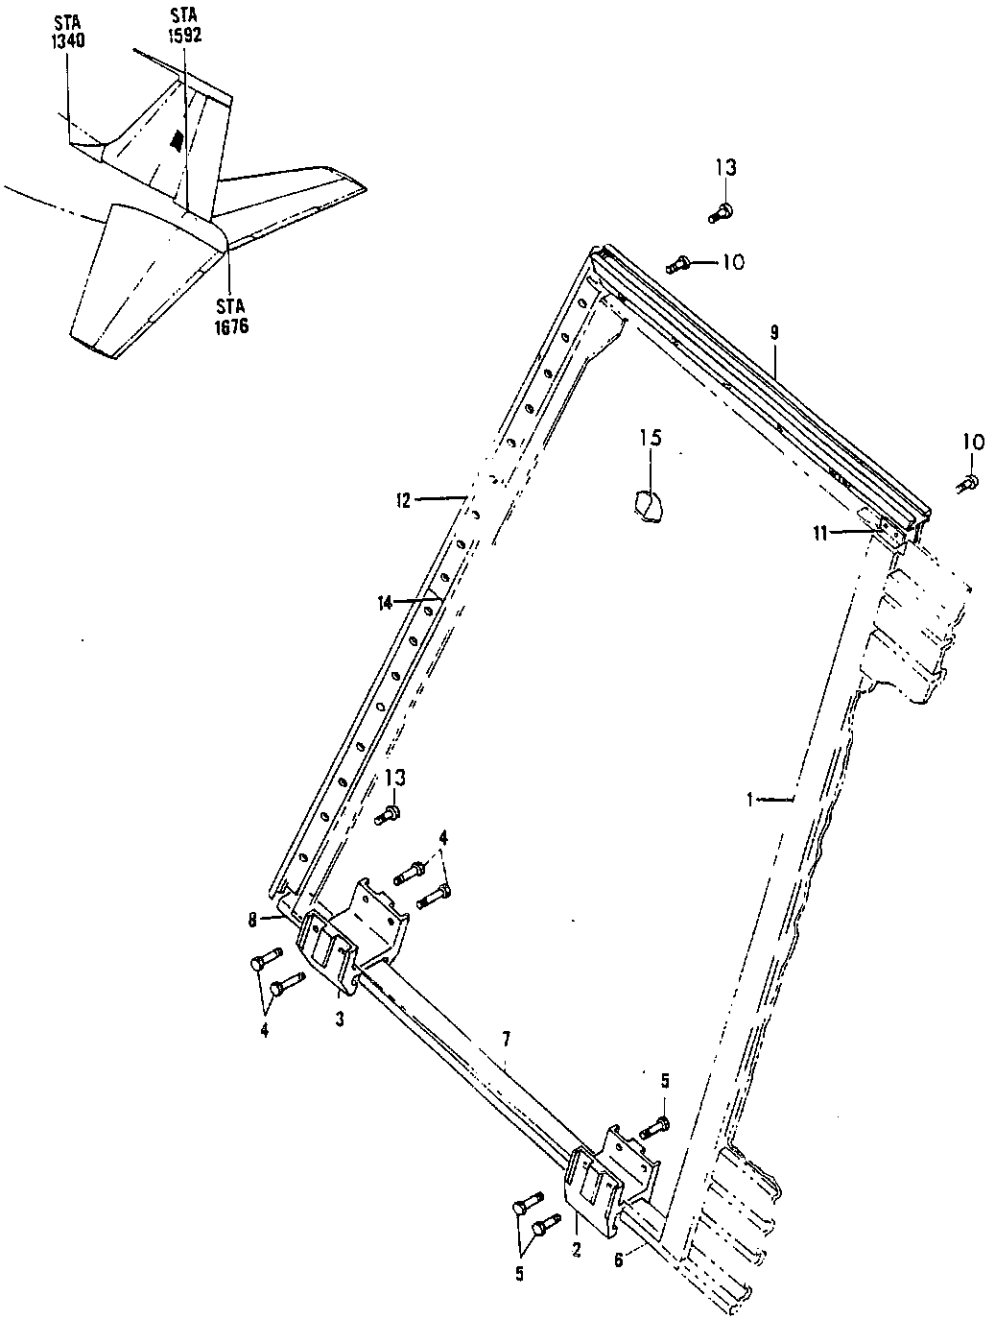


FIGURE 8. PANEL ASSY, RUDDER BALANCE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
8	5-95506-3000	PANEL ASSY, RUDDER BALANCE (SEE FIG. 1, ITEM 22). . . .		RF
1	69-9228-1	. FITTING, RUDDER BALANCE PANEL		1
2	90-2470-2001	. GRIP, RUDDER BALANCE PANEL AFT TRACK.		1
3	90-2473-2001	. GRIP, RUDDER BALANCE PANEL FORWARD TRACK.		1
		ATTACHING PARTS		
4	AN4-7A	. BOLT.		4
5	AN4-6A	. BOLT.		4
		-------*-------		
6	5-95506-2021	. RETAINER, RUDDER BALANCE PANEL SEAL		1
7	5-95506-2020	. RETAINER, RUDDER BALANCE PANEL SEAL		1
8	5-95506-2019	. RETAINER, RUDDER BALANCE PANEL SEAL		1
9	65-4115-6	. RETAINER, RUDDER BALANCE PANEL SEAL		1
		ATTACHING PARTS		
10	NAS603-8	. SCREW		7
		-------*-------		
11	9-67000-2001	. ADAPTER, ELEVATOR AND RUDDER BALANCE PANEL.		1
12	65-4115-1026	. RETAINER, RUDDER BALANCE PANEL SEAL		1
		ATTACHING PARTS		
13	NAS603-8	. SCREW		17
		-------*-------		
14	5-95506-3002	. PLATE, RUDDER BALANCE PANEL RETAINER.		1
15	MS27253-1	. PLATE		1
		ATTACHING PARTS		
	BACR15AP4-74	. RIVET		4
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

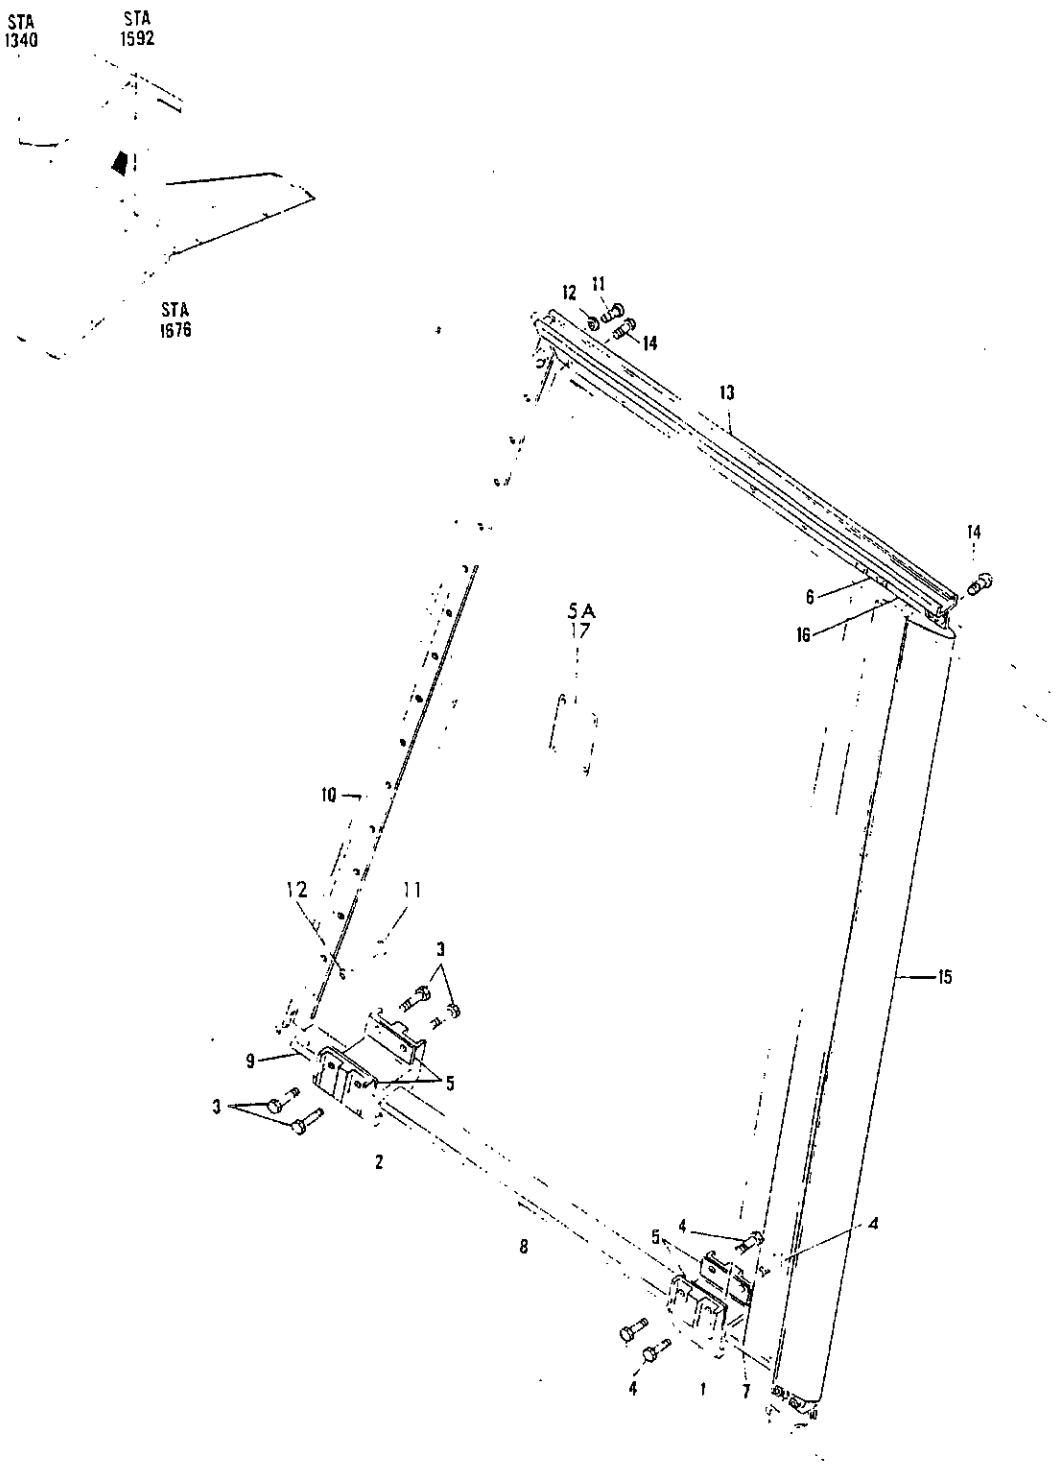


FIGURE 9. PANEL ASSY, RUDDER BALANCE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
9	5-95505-3000	PANEL ASSY, RUDDER BALANCE (SEE FIG. 1, ITEM 21). . . .		RF
1	90-2470-2001	. GRIP, RUDDER AND ELEVATOR BALANCE PANEL AFT TRACK . .		1
2	90-2471-2001	. GRIP, RUDDER AND ELEVATOR BALANCE PANEL TRACK		1
		ATTACHING PARTS		
3	AN4-7A	. BOLT.		4
4	AN4-6A	. BOLT.		4
5	BACS40A16-35	. SHIM.		AR
		-------*-------		
5A	AN7510-1	. PLATE, IDENTIFICATION		1
		ATTACHING PARTS		
	P4C	. RIVET, (V29666)		4
		-------*-------		
6	BACS40B9-24	. SHIM.		AR
7	5-95505-2023	. RETAINER, RUDDER BALANCE PANEL LOWER AFT SEAL		1
8	5-95505-2022	. RETAINER, RUDDER BALANCE PANEL LOWER CENTER SEAL. . .		1
9	5-95505-2021	. RETAINER, RUDDER BALANCE PANEL LOWER FORWARD SEAL . .		1
10	65-4115-1025	. RETAINER, ELEVATOR AND RUDDER BALANCE PANEL SEAL. . .		1
11	NAS603-8	. SCREW		16
12	AN960D416L	. WASHER.		16
13	65-4115-5	. RETAINER, RUDDER BALANCE PANEL SEAL		1
		ATTACHING PARTS		
14	NAS603-8	. SCREW		9
		-------*-------		
15	69-9228-1	. FITTING, RUDDER BALANCE PANEL		1
16	9-67000-2001	. ADAPTER, RUDDER AND ELEVATOR BALANCE PANEL.		1
17	MS27253-1	. PLATE, IDENTIFICATION		1
		ATTACHING PARTS		
	BACR15AP4-74	. RIVET		4
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

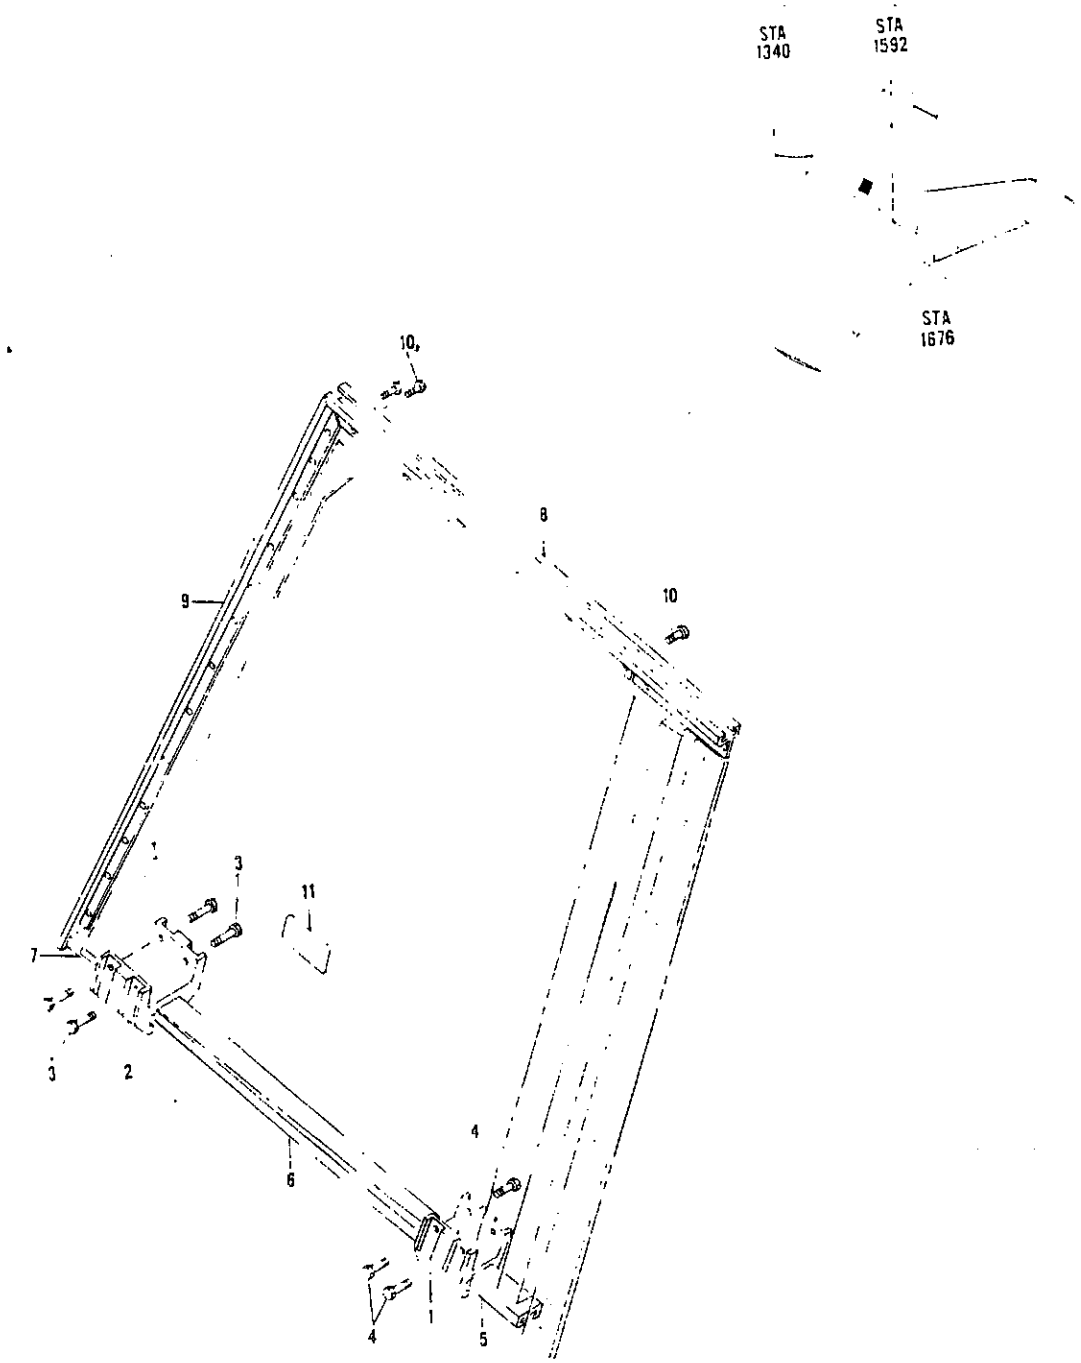


FIGURE 10. PANEL ASSY, RUDDER BALANCE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
10	5-95504-3000	PANEL ASSY, RUDDER BALANCE (SEE FIG. 1, ITEM 20). . . .		RF
1	90-2470-2001	. GRIP, RUDDER BALANCE PANEL AFT TRACK.		1
2	90-2471-2001	. GRIP, RUDDER AND ELEVATOR BALANCE PANEL TRACK		1
		ATTACHING PARTS		
3	AN4-7A	. BOLT.		4
4	AN4-6A	. BOLT.		4
		-------*-------		
5	5-95504-2020	. RETAINER, RUDDER BALANCE PANEL LOWER AFT SEAL		1
6	5-95504-2019	. RETAINER, RUDDER BALANCE PANEL LOWER CENTER SEAL. . .		1
7	5-95504-2018	. RETAINER, RUDDER BALANCE PANEL LOWER FORWARD SEAL . .		1
8	65-4115-4	. RETAINER, RUDDER BALANCE PANEL SEAL		1
9	65-4115-42	. RETAINER, RUDDER BALANCE PANEL SEAL		1
		ATTACHING PARTS		
10	NAS603-8	. SCREW		21
		-------*-------		
11	AN7510-1	. PLATE		1
		ATTACHING PARTS		
	BACR15AP4-74	. RIVET		4
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

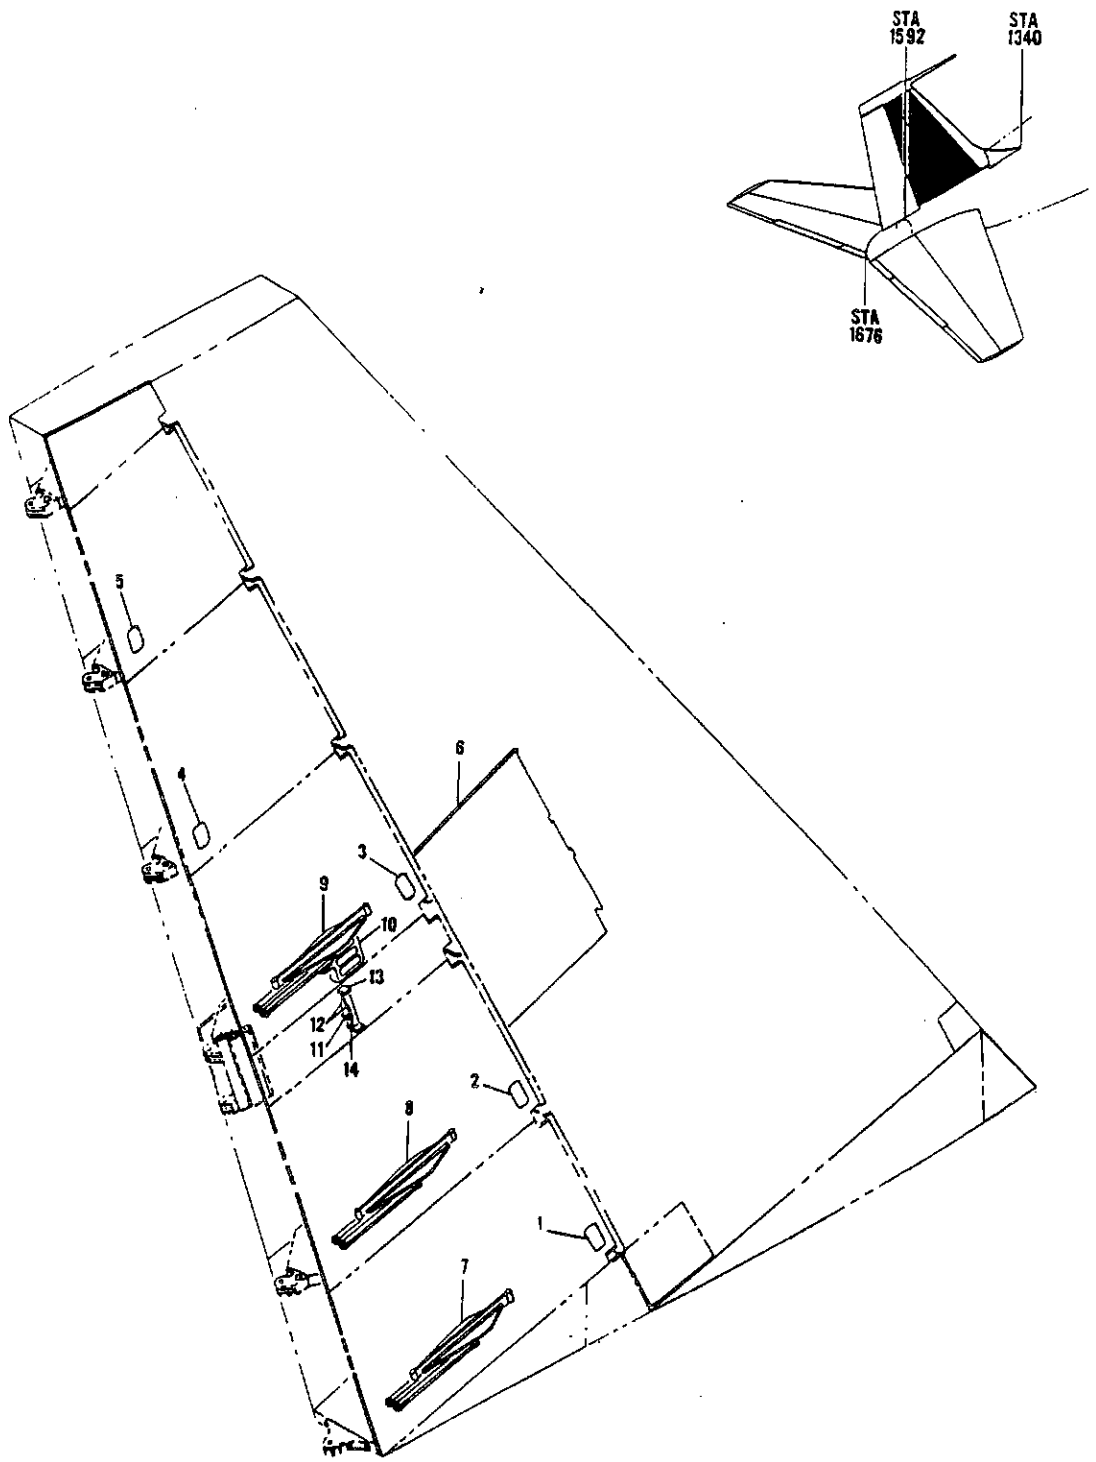


FIGURE 11. INTERSPAR AND TRAILING ASSY, VERTICAL TAIL (FLIGHT CONTROL ONLY)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
11	65-8367-29	INTERSPAR AND TRAILING EDGE ASSY, VERTICAL TAIL (FLIGHT CONTROL ONLY) (SEE 55-1, FIG. 2, ITEM 52)		RF
	64-1101-4	. PANEL INSTL, RUDDER STATION 11.95 TO 48.67 BALANCE. . COVER (RH) (FLIGHT CONTROL ONLY)		1
	64-1101-3	. PANEL INSTL, RUDDER STATION 11.95 TO 48.67 BALANCE. . COVER (LH) (FLIGHT CONTROL ONLY)		1
1	66-3979	. . DOOR, FIN AND BALANCE PANEL COVER ACCESS. . . . . ATTACHING PARTS		1
	NAS517-3-0	. . SCREW		6
		--------*--------		
		. . STABILIZERS, (SEE 55-1, FIG. 6)		
	64-1102-4	. PANEL INSTL, RUDDER STATION 48.67 TO 93.26 BALANCE. . COVER (RH) (FLIGHT CONTROL ONLY)		1
	64-1102-3	. PANEL INSTL, RUDDER STATION 48.67 TO 93.26 BALANCE. . COVER (LH) (FLIGHT CONTROL ONLY)		1
2	66-3979	. . DOOR, FIN BALANCE PANEL COVER ACCESS. . . . . ATTACHING PARTS		1
	NAS517-3-0	. . SCREW		6
		--------*--------		
		. . STABILIZERS, (SEE 55-1, FIG. 6)		
	64-1103-4	. PANEL INSTL, RUDDER STATION 102.18 TO 146.78 BALANCE COVER (RH) (FLIGHT CONTROL ONLY)		1
	64-1103-3	. PANEL INSTL, RUDDER STATION 102.18 TO 146.78 BALANCE COVER (LH) (FLIGHT CONTROL ONLY)		1
3	66-3979	. . DOOR, FIN BALANCE PANEL COVER ACCESS. . . . . ATTACHING PARTS		1
	NAS517-3-0	. . SCREW		6
		--------*--------		
		. . STABILIZERS, (SEE 55-1, FIG. 6)		
	64-1104-3004	. PANEL INSTL, RUDDER STATION 146.78 TO 191.38 BALANCE COVER (RH) (FLIGHT CONTROL ONLY)		1
	64-1104-3003	. PANEL INSTL, RUDDER STATION 146.78 TO 191.38 BALANCE COVER (LH) (FLIGHT CONTROL ONLY)		1
4	66-4545	. . DOOR, FIN AND STABILIZER BALANCE PANEL COVER. . . . INSPECTION ATTACHING PARTS		1
	NAS517-3-0	. . SCREW		6
		--------*--------		
		. . STABILIZERS, (SEE 55-1, FIG. 6)		
	64-1105-3004	. PANEL INSTL, RUDDER STATION 191.38 TO 235.98 BALANCE COVER (RH) (FLIGHT CONTROL ONLY)		1
	64-1105-3003	. PANEL INSTL, RUDDER STATION 191.38 TO 235.98 BALANCE COVER (LH) (FLIGHT CONTROL ONLY)		1
5	66-4545	. . DOOR, FIN AND STABILIZER BALANCE PANEL COVER. . . . INSPECTION ATTACHING PARTS		1
	NAS517-3-0	. . SCREW		6
		--------*--------		
		. . STABILIZERS, (SEE 55-1, FIG. 6)		
6	65-7277	. DOOR INSTL, VERTICAL TAIL RUDDER CONTROLS (SEE 27-9, FIG. 24)		1
7	65-3837-1	. LINK INSTL, RUDDER STATION 11.95 FIN TRAILING EDGE. . RUDDER BALANCE (SEE 27-9, FIG. 33)		1
8	65-3837-2	. LINK INSTL, RUDDER STATION 48.67 FIN TRAILING EDGE. . RUDDER BALANCE (SEE 27-9, FIG. 33)		1
9	65-3837-3	. LINK INSTL, RUDDER STATION 102.18 FIN TRAILING EDGE . RUDDER BALANCE (SEE 27-9, FIG. 33)		1
10	65-6404-5	. SUPPORT INSTL, RUDDER BOOST (SEE 27-9, FIG. 19A). . .		1
	65-38276-1	. SUPPORT INSTL, VERTICAL TAIL TAB DAMPER		1
11	66-8663-1	. . FITTING, RUDDER BOOST SNUBBER SUPPORT		1
12	66-24013	. . CHANNEL, RUDDER TAB DAMPENER SUPPORT.		2
13	66-24015	. . TEE, RUDDER TAB DAMPENER SUPPORT ATTACHMENT		1
14	66-24016	. . TEE, RUDDER TAB DAMPENER SUPPORT ATTACHMENT		1
		. FOR REFERENCE TO OTHER INTERSPAR AND TRAILING EDGE. . DETAILS, SEE NHA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING Intercontinental 707

PARTS CATALOG

SECTION 09

RUDDER CONTROL

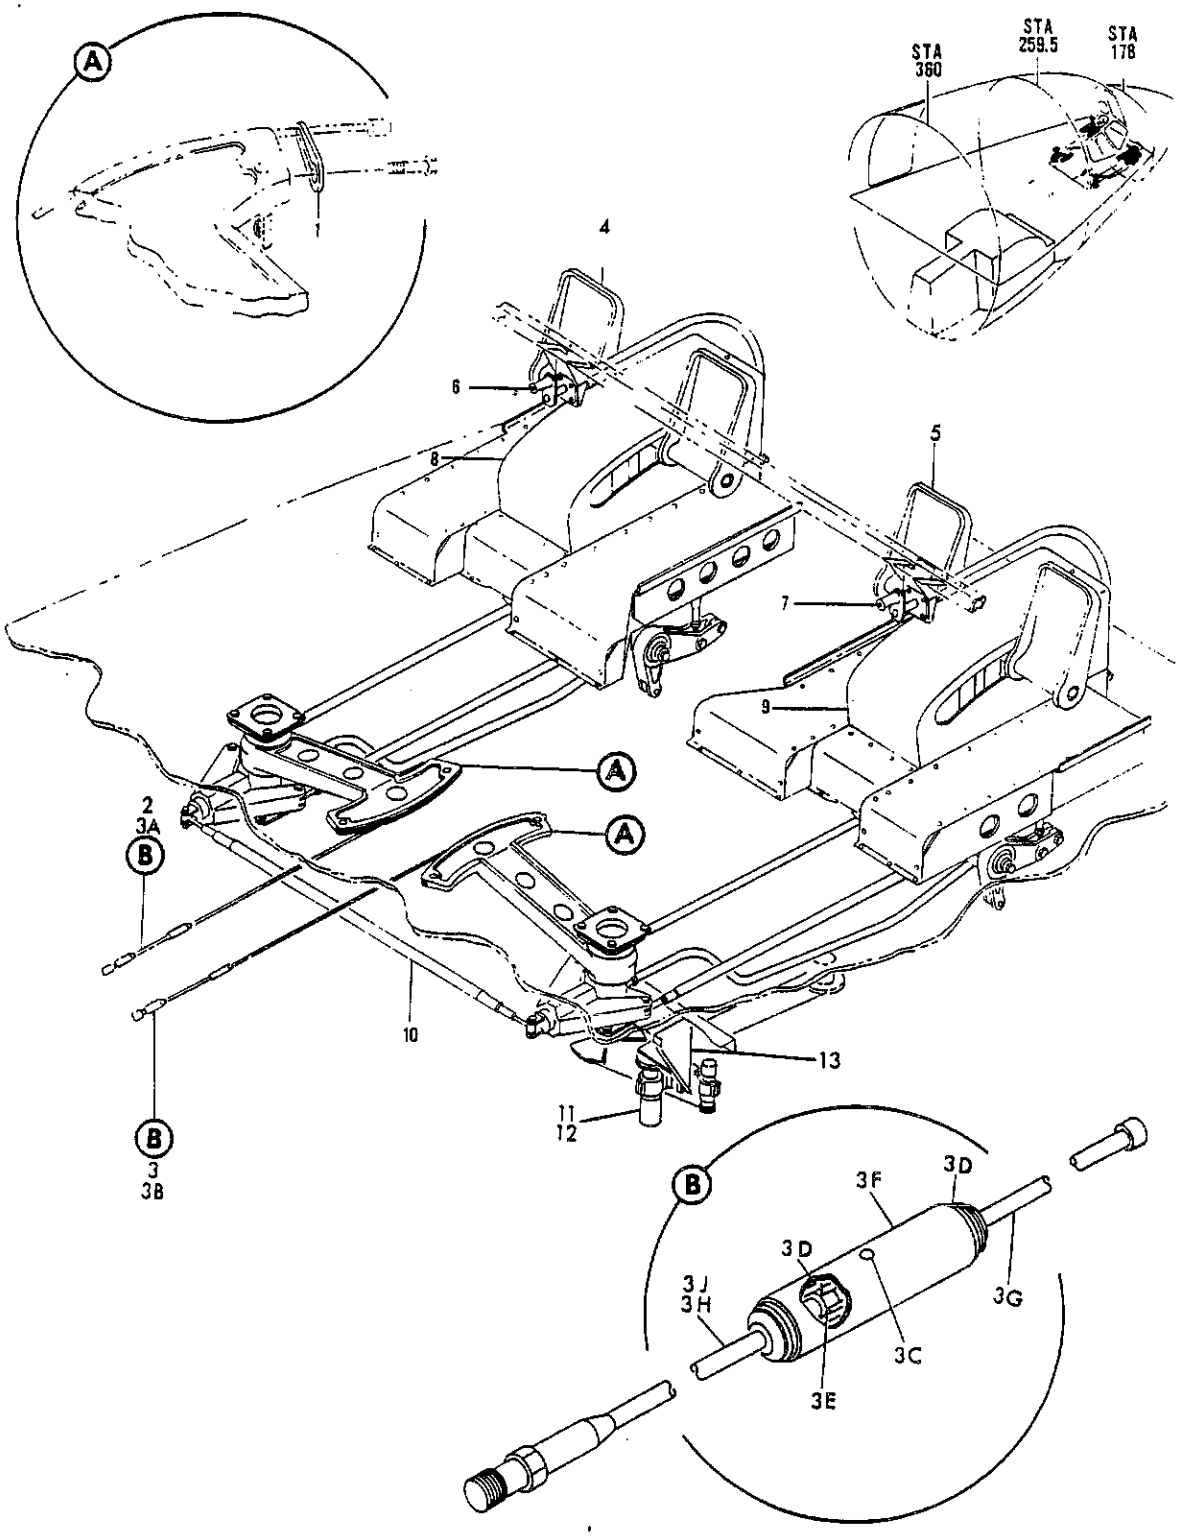


FIGURE 1. CONTROL INSTL, RUDDER

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	1	50-8703-351	CONTROL INSTL, RUDDER (SEE 53-1, FIG. 1, ITEM 5 AND 53-1, FIG. 6, ITEM 14)		RF
	1	3-85237	. PLATE, 1/8 CONTROL CABLE RETAINING. ATTACHING PARTS		2
		AN4-5A	. BOLT.		2
		BACN10CP4L	. NUT		2
			-------*-------		
	2	BACC13G469-14486	. CABLE ASSY.		1
	3	BACC13G469-14728	. CABLE ASSY.		1
		BACT14A4	. . TERMINAL.		1
		AN669L4LH	. . TERMINAL.		1
	4	5-95631-3007	. PEDAL INSTL, PILOTS RUDDER (SEE FIG. 5)		1
	5	5-95631-3008	. PEDAL INSTL, COPILOTS RUDDER (SEE FIG. 5)		1
R	6	5-95834-1	. CRANK INSTL, RUDDER PEDAL ADJUSTMENT (PILOT) (SEE FIG. 4)	0150	1
RRR	6	5-95834-7	. CRANK INSTL, RUDDER PEDAL ADJUSTMENT (PILOT) (SEE FIG. 4)	5199	1
RRR	7	5-95834-2	. CRANK INSTL, RUDDER PEDAL ADJUSTMENT (COPILOT) (SEE FIG. 4)	0150	1
RRR	7	5-95834-8	. CRANK INSTL, RUDDER PEDAL ADJUSTMENT (COPILOT) (SEE FIG. 4)	5199	1
	8	5-97874-3004	. REST INSTL, PILOTS RUDDER PEDAL HEEL (SEE FIG. 7)		1
	9	5-97874-3005	. REST INSTL, COPILOTS RUDDER PEDAL HEEL (SEE FIG. 7)		1
	10	5-97614-3002	. JACKSHAFT INSTL, RUDDER CONTROL (SEE FIG. 2)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

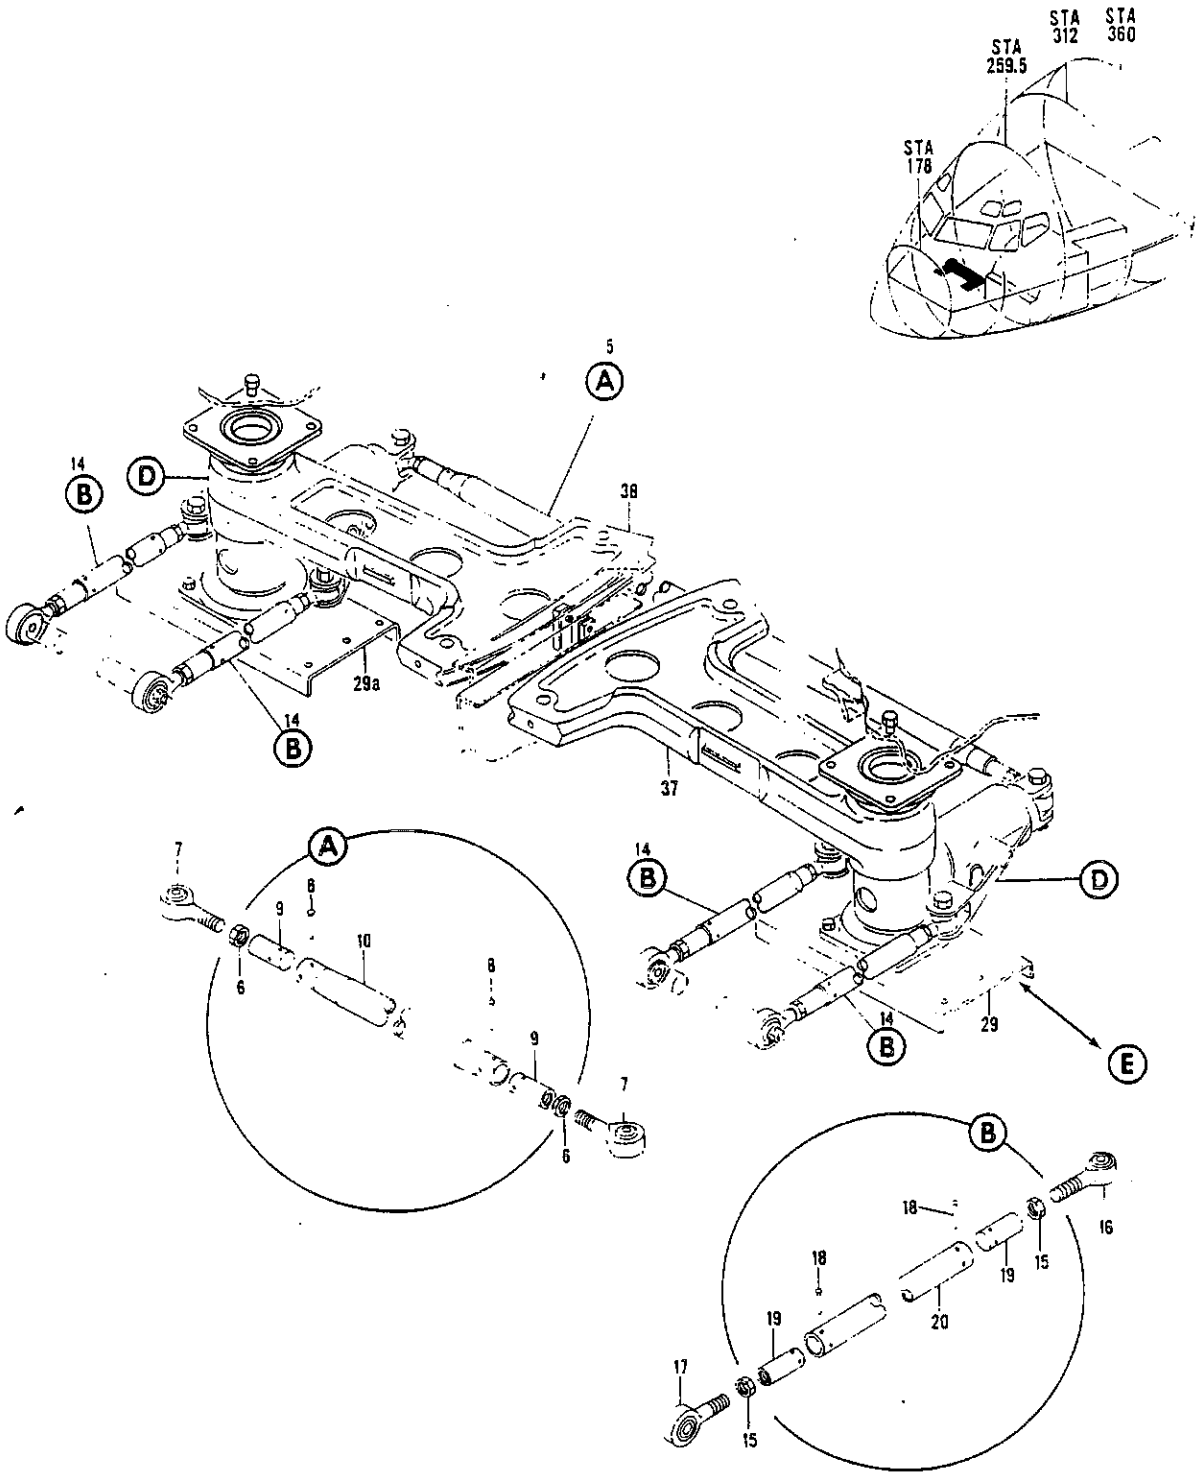


FIGURE 2. JACKSHAFT INSTL, RUDDER CONTROL (SHEET 1)

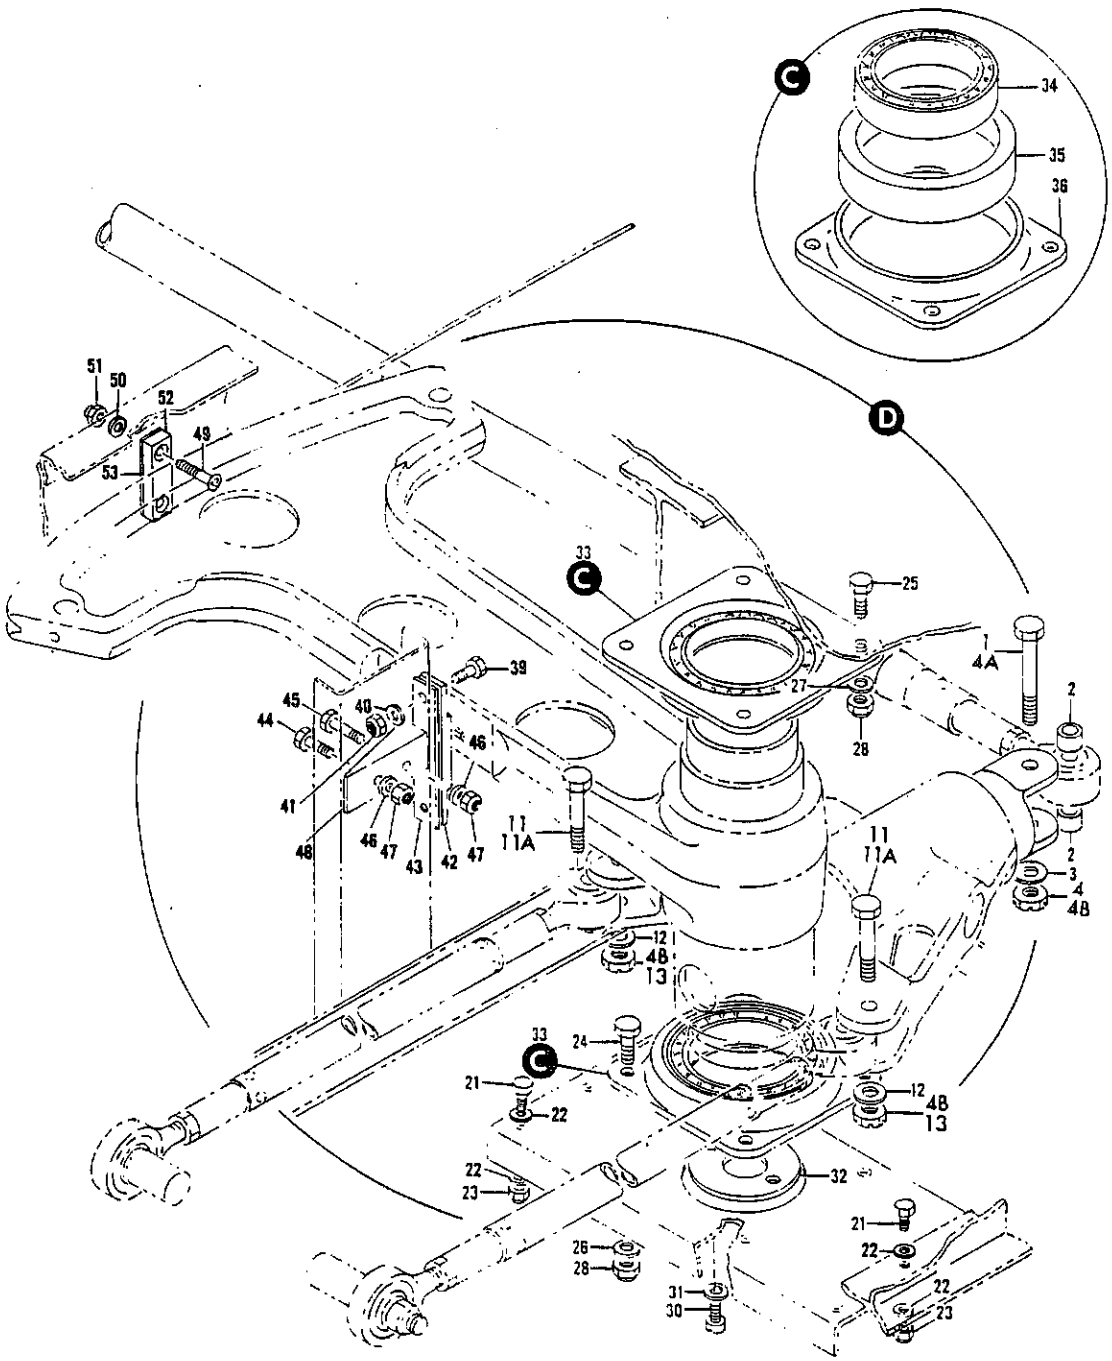


FIGURE 2. JACKSHAFT INSTL, RUDDER CONTROL (SHEET 2)

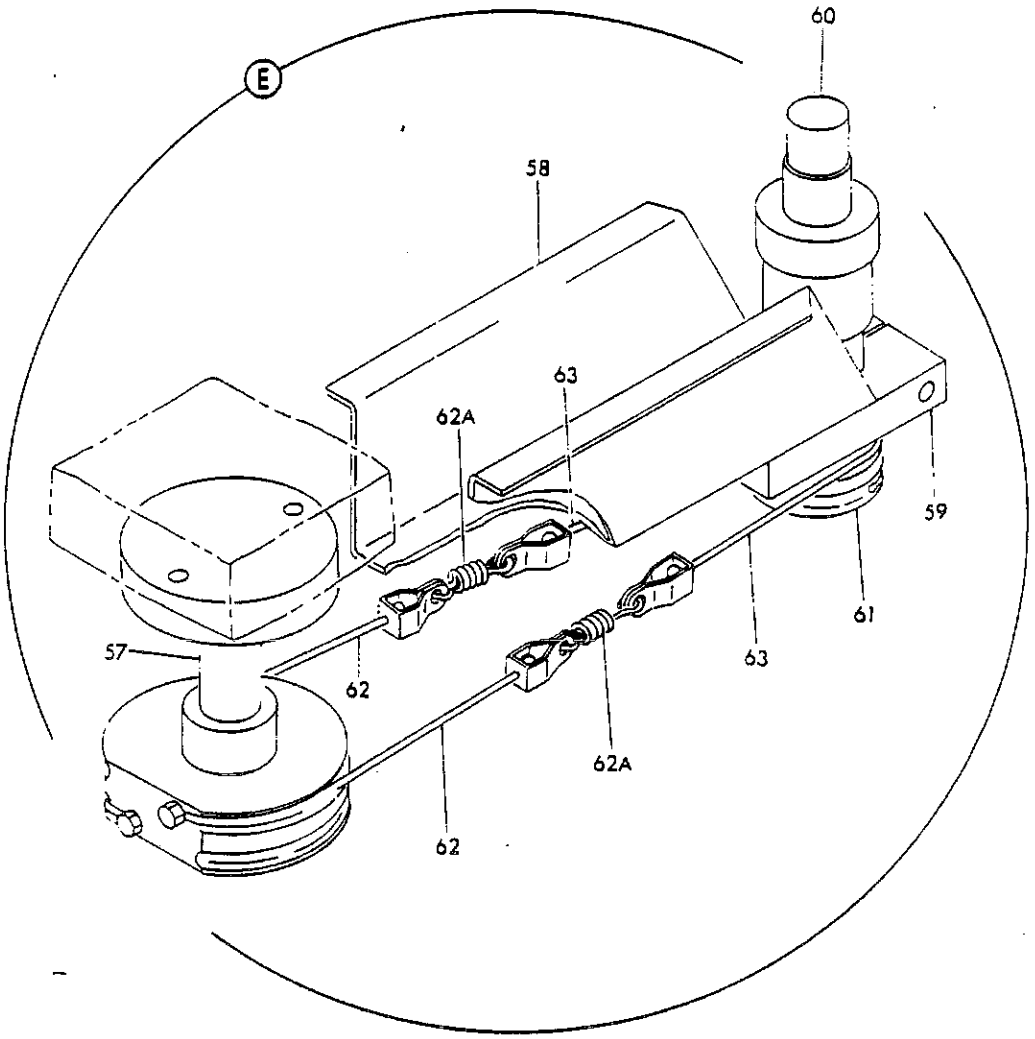


FIGURE 2 JACKSHAFT INSTL RUDDER CONTROL (SHEET 3)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
2	5-97614-3002	JACKSHAFT INSTL, RUDDER CONTROL (SEE FIG. 1, ITEM 10)		RF
1	NAS1105-27D	. BOLT		2
2	NAS42DD10-20	. SPACER		4
3	AN960D516L	. WASHER		2
4	AN320-5	. NUT		2
5	9-47362-3000	. ROD ASSY, RUDDER CONTROL BUS		1
6	AN361-7R	. . NUT		2
7	BACB10A74	. . BEARING		2
8	AN470D5	. . RIVET		4
9	3-48675-1	. . FITTING, RUDDER CONTROL ROD END		2
10	9-47365-2000	. . ROD, RUDDER CONTROL BUS		1
11	NAS1105-23D	. BOLT		4
12	AN960D516L	. WASHER		4
13	AN320-5	. NUT		4
14	6-58993-3000	. ROD ASSY, RUDDER CONTROL TENSION		4
15	AN316-7R	. . NUT		2
16	BACB10A74	. . BEARING		1
17	BACB10C116	. . BEARING		1
18	AN470D6	. . RIVET		4
19	3-48675-1	. . FITTING, RUDDER CONTROL ROD END		2
20	3-48676-2001	. . TUBE, RUDDER CONTROL TENSION ROD		1
21	AN3-5A	. BOLT		12
22	AN960D10	. WASHER		24
23	NAS679A3W	. NUT		12
24	AN4-5A	. BOLT		8
25	AN4-6A	. BOLT		8
26	AN960D416L	. WASHER		8
27	AN960D416	. WASHER		8
28	NAS679A4W	. NUT		16
29	6-58996-1	. CHANNEL, RUDDER CONTROL SUPPORT		1
29A	6-58996-2	. CHANNEL, RUDDER CONTROL SUPPORT		1
30	AN501A10-6	. SCREW		2
31	AN960D10L	. WASHER		2
32	3-74664	. PLATE, BEARING RETAINER		2
33	9-30874	. HOUSING ASSY, KP37BS BEARING (OPTIONAL 6-32505-1)		4
33	6-32505-1	. BEARING ASSY, SELF ALIGNING (OPTIONAL TO 9-30874)		4
34	BACB10A240	. . BEARING, (USED ON 9-30874)		1
34	AN202KP37B	. . BEARING, (USED ON 6-32505-1)		1
35	3-47576	. . RETAINER, SELF ALIGN BEARING (USED ON 6-32505-1) (OPTIONAL 3-47576-502)		1
35	3-47576-502	. . RETAINER, SELF ALIGN BEARING (OPTIONAL TO 3-47576)		1
36	9-30874-1	. . HOUSING, KP37BS BEARING (USED ON 9-30874)		1
36	6-31883	. . HOUSING, SELF ALIGN BEARING (USED ON 6-32505-1)		1
37	5-97613-3007	. JACKSHAFT ASSY, RUDDER CONTROL (PILOT) (SEE BOEING 707 OVERHAUL MANUAL, DOCUMENT D6-1643) (SEE FIG. 3)		1
38	5-97613-3008	. JACKSHAFT ASSY, RUDDER CONTROL (COPILOT) (SEE BOEING 707 OVERHAUL MANUAL, DOCUMENT D6-1643) (SEE FIG. 3)		1
39	AN3-6A	. BOLT		2
40	AN960D10L	. WASHER		2
41	NAS679A3W	. NUT		2
42	66-2890	. STOP, BODY STATION 234 RUDDER QUADRANT		2
43	BACS40B12-51	. SHIM		AR
44	NAS1103-7	. BOLT		2
45	NAS1103-11	. BOLT		2
46	AN960-10	. WASHER		4
47	NAS679A3	. NUT		4
48	66-2891-2	. FILLER, BODY STATION 234 RUDDER QUADRANT STOP		2
49	NAS517-3-7	. SCREW		4
50	AN960D10L	. WASHER		4
51	NAS679A3	. NUT		4
52	66-2892	. GUARD, BODY STATION 234 RUDDER QUADRANT CABLE		2
53	BACS40FC10-21	. SHIM		AR

MISSING ITEM NUMBERS ARE NOT APPLICABLE

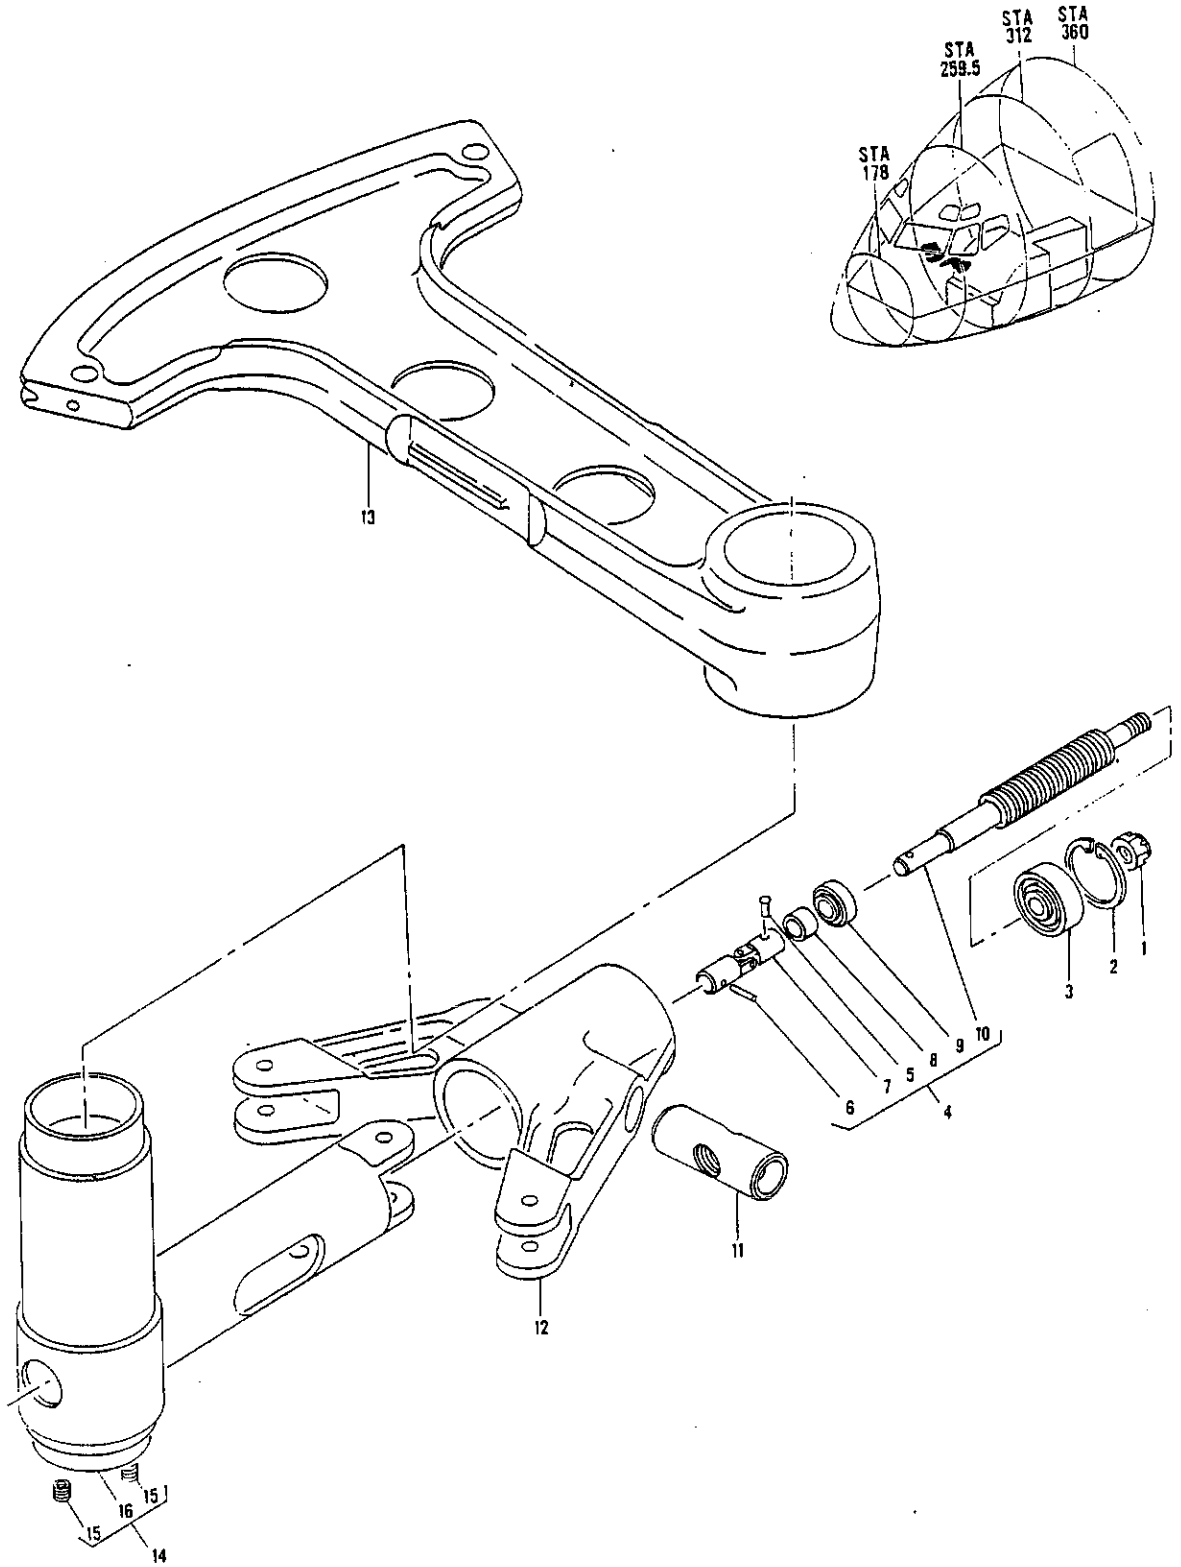


FIGURE 3. JACKSHAFT INSTL, RUDDER CONTROL

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3	5-97613-3007	JACKSHAFT ASSY, RUDDER CONTROL (PILOT) (SEE FIG. 2, ITEM 37)		RF
	5-97613-3008	JACKSHAFT ASSY, RUDDER CONTROL (COPILOT) (SEE FIG. 2, ITEM 38)		RF
1	AN310-6	. NUT		1
2	NAS50-143	. RING		1
3	AN200KP6	. BEARING		1
4	5-97613-3	. SCREW ASSY, RUDDER CONTROL JACKSHAFT		1
5	MS206154M11	. . RIVET		1
6	BACP18L6P0562	. . PIN		1
7	MS20270B8	. . UNIVERSAL JOINT, (OPTIONAL AN27088)		1
8	NAS42-12-21	. . SPACER		1
9	AN201KP6A	. . BEARING		1
10	6-58994	. . SCREW, RUDDER PEDAL ADJUSTMENT		1
11	6-58995	. NUT, RUDDER PEDAL ADJUSTMENT		1
12	65-7208	. YOKE, RUDDER PEDAL ADJUSTMENT		1
13	5-63069-3000	. QUADRANT, RUDDER CONTROL (PILOT). (OPTIONAL 5-63069-3003)		1
13	5-63069-3001	. QUADRANT, RUDDER CONTROL (COPILOT). (OPTIONAL 5-63069-3004)		1
13	5-63069-3003	. QUADRANT, RUDDER CONTROL (PILOT). (OPTIONAL TO 5-63069-3000)		1
13	5-63069-3004	. QUADRANT, RUDDER CONTROL (COPILOT). (OPTIONAL TO 5-63069-3001)		1
14	5-63067	. SHAFT ASSY, RUDDER CONTROL. (OPTIONAL 5-63067-1)		1
14	5-63067-1	. SHAFT ASSY. (OPTIONAL TO 5-63067)		1
15	BACS13P3CN4	. . SLEEVE		2
16	50-6393	. . SHAFT, RUDDER CONTROL		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

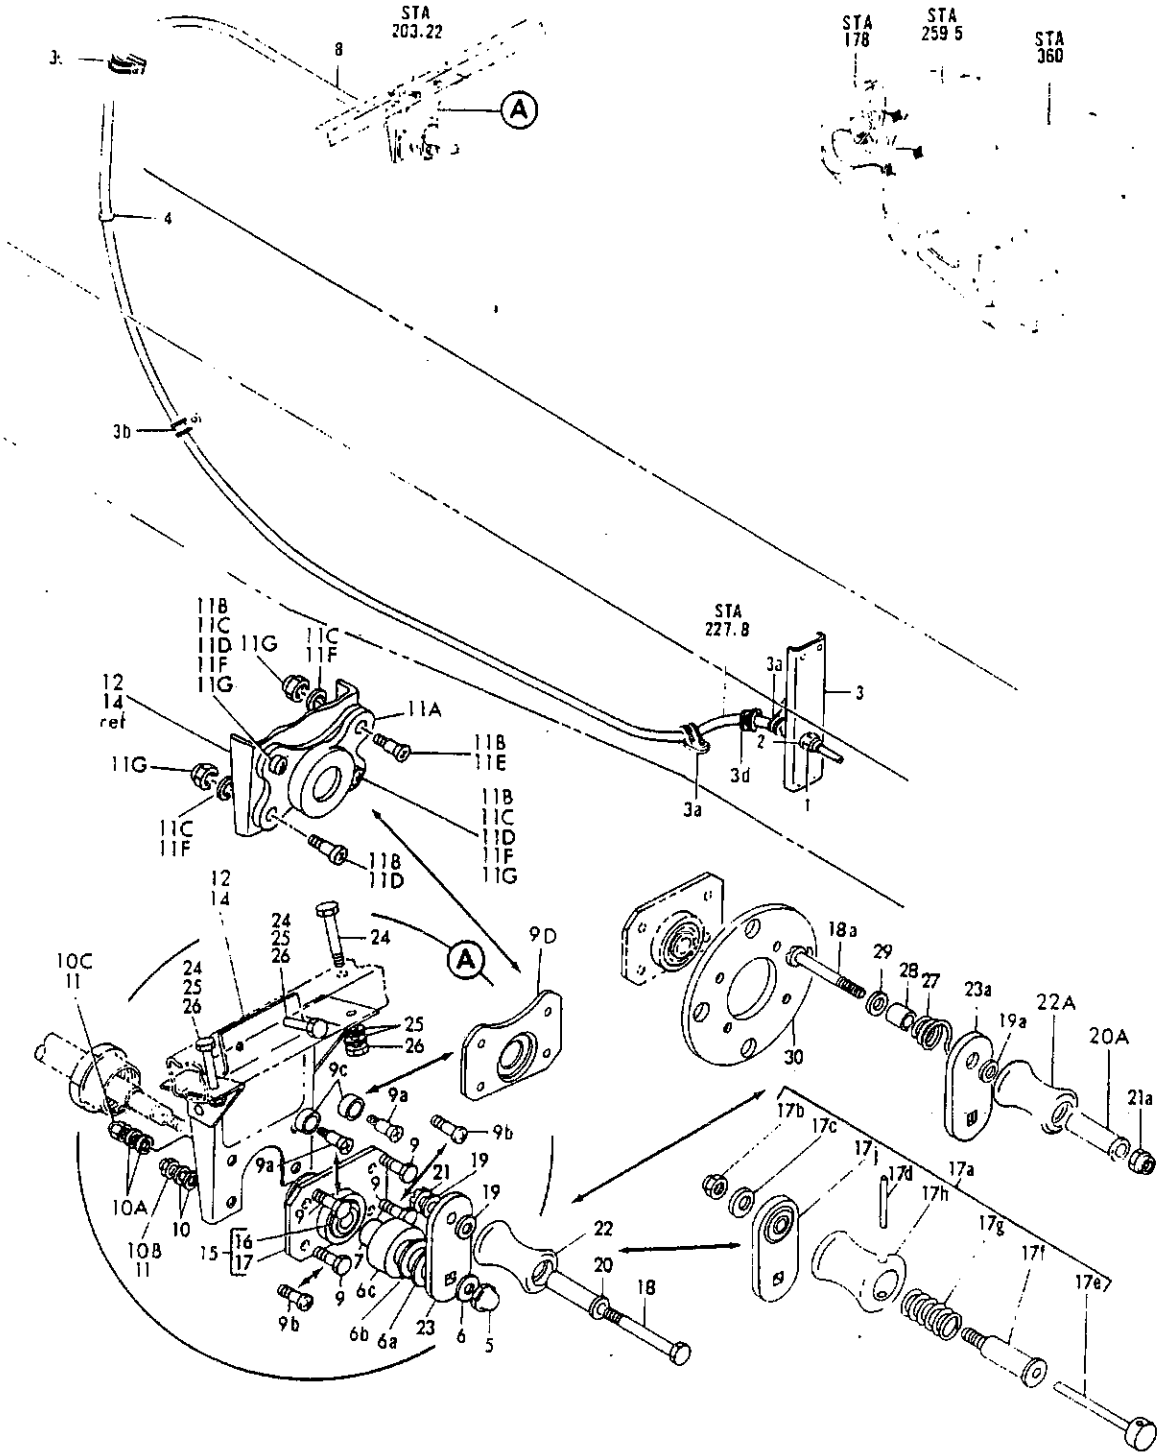


FIGURE 4. CRANK INSTL, RUDDER PEDAL ADJUSTMENT

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R	4	5-95834-1	CRANK INSTL, RUDDER PEDAL ADJUSTMENT (PILOT) (SEE FIG. 1, ITEM 6)	0150	RF
R		5-95834-7	CRANK INSTL, RUDDER PEDAL ADJUSTMENT (PILOT) (SEE FIG. 1, ITEM 6)	5199	RF
R		5-95834-2	CRANK INSTL, RUDDER PEDAL ADJUSTMENT (COPILOT) (SEE FIG. 1, ITEM 7)	0150	RF
R		5-95834-8	CRANK INSTL, RUDDER PEDAL ADJUSTMENT (COPILOT) (SEE FIG. 1, ITEM 7)	5199	RF
	1	BACN10BY512	. NUT		1
	2	AN960D1216L	. WASHER		1
	3	6-65248	. CHANNEL, RUDDER PEDAL ADJUSTMENT SHAFT SUPPORT		1
			ATTACHING PARTS		
		AN3-4A	. BOLT		4
		AN960D10L	. WASHER		4
		NAS679A3W	. NUT		4
			-------*-------		
	3A	MS21919G10	. CLAMP, (OPTIONAL BACC10DK10)		2
			ATTACHING PARTS		
		NAS603-6P	. SCREW		2
		NAS679A3W	. NUT		2
			-------*-------		
	3B	MS21919G10	. CLAMP, (OPTIONAL BACC10DK10)		1
			ATTACHING PARTS		
		NAS603-16P	. SCREW		1
		NAS43DD3-32	. SPACER		1
		NAS679A3W	. NUT		1
			-------*-------		
	3C	MS21919G10	. CLAMP, (OPTIONAL BACC10DK10)		1
			ATTACHING PARTS		
		NAS603-7P	. SCREW		1
		NAS679A3W	. NUT		1
			-------*-------		
	3D	AN742-10	. CLAMP		1
			ATTACHING PARTS		
		NAS603-6P	. SCREW		1
		NAS679A3W	. NUT		1
			-------*-------		
	4	MS35489-20S	. GROMMET		1
	5	BACN10R428	. NUT		1
	6	AN960D416L	. WASHER		1
	7	NAS43DD6-26	. SPACER		1
	8	30-1565	. SHAFT, RUDDER PEDAL ADJUSTMENT (ALTERED FROM 8203YOA (V79555))		1
R	9A	BAC830LU3-6	. BOLT	0103	2
R				5199	
R	9A	BAC830LU3-6	. BOLT, (DELETED BY SB 3213)	0450	2
R	9B	NAS623-3-4	. BOLT	0103	2
R				5199	
R	9B	NAS623-3-4	. BOLT, (DELETED BY SB 3213)	0450	2
R	9C	69-40918-1	. STOP	0103	2
R				5299	
R	9C	69-40918-1	. STOP, (DELETED BY SB 3213)	0450	2
R	9D	69-68216-1	. RETAINER	5199	1
R			(OPTIONAL 65884252-1)		
R	9D	69-68216-1	. RETAINER, (ADDED BY SB 3213)	0450	1
R	10	AN960D10	. WASHER, (USED WITH 69-40918-1)	0103	4
R				5199	
R	10	AN960D10	. WASHER, (USED WITH 69-40918-1) (DELETED BY SB 3213)	0450	4
R	10A	AN960D10	. WASHER, (USED WITH 69-40918-1)	0103	4
R				5199	
R	10A	AN960D10	. WASHER, (USED WITH 69-40918-1) (DELETED BY SB 3213)	0450	4
R	10B	NAS679A3W	. NUT, (USED WITH 69-40918-1)	0103	2
R				5199	
R	10B	NAS679A3W	. NUT, (USED WITH 69-40918-1) (DELETED BY SB 3213)	0450	2
R	10C	NAS679A3W	. NUT, (USED WITH 69-40918-1)	0103	2
R				5199	
R	10C	NAS679A3W	. NUT, (USED WITH 69-40918-1) (DELETED BY SB 3213)	0450	2
R	11A	65884252-1	. RETAINER	5199	1
R			(OPTIONAL TO 69-68216-1)		
R	11B	BAC830LU3-6	. BOLT, (USED WITH 69-68216-1)	5299	4
R	11B	BAC830LU3-6	. BOLT, (USED WITH 69-68216-1) (ADDED BY SB 3213)	0450	4
R	11C	AN960D10	. WASHER (USED WITH 69-68216-1) (ADDED BY SB 3213)	0450	4
R	11D	NAS623-3-5	. SCREW, (USED WITH 65884252-1)	5199	3
R	11E	BAC830LU3-6	. BOLT, (USED WITH 65884252-1)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	4 11F	AN960D10	. WASHER, (USED WITH 65B84252-1).	5199	4
R	11G	BACN10JC3	. NUT, (USED WITH 65B84252-1 AND 69-68216-1).	5299	4
R	11G	BACN10JC3	. NUT, (USED WITH 69-68216-1) (ADDED BY SB 3213).	0450	4
R	12	60-1563	. BRACKET ASSY, (FLIGHT CONTROL ONLY)	0150	1
R	12	69-52004-1	. BRACKET ASSY, (FLIGHT CONTROL ONLY)	5199	1
R	14	60-1563-3	. . BRACKET, RUDDER PEDAL ADJUSTMENT.	0150	1
R	14	69-52004-2	. . BRACKET	5199	1
			. . REQUIRED PLACARDS, (SEE 11-2, FIG. 51).		
	15	6-65235	. HOUSING ASSY, RUDDER PEDAL ADJUSTMENT CRANK		1
	16	AN201KP6A	. . BEARING		1
	17	6-65235-1	. . HOUSING, RUDDER PEDAL ADJUSTMENT CRANK.		1
	17A	69-40917-1	. CRANK ASSY.		1
	17B	NAS679A5	. . NUT		1
	17C	AN960PD516L	. . WASHER.		1
	17D	MS39086-26	. . PIN		1
	17E	69-40915-1	. . PIN, LOCKING.		1
	17F	69-40914-1	. . BOLT, SHOULDER.		1
	17G	69-40913-1	. . SPRING.		1
	17H	69-40916-1	. . KNOB.		1
	17J	69-40912-1	. . LEVER ASSY.		1
	24	AN3-14A	. BOLT.		4
	25	AN960D10	. WASHER.		8
	26	NAS679A3W	. NUT		4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

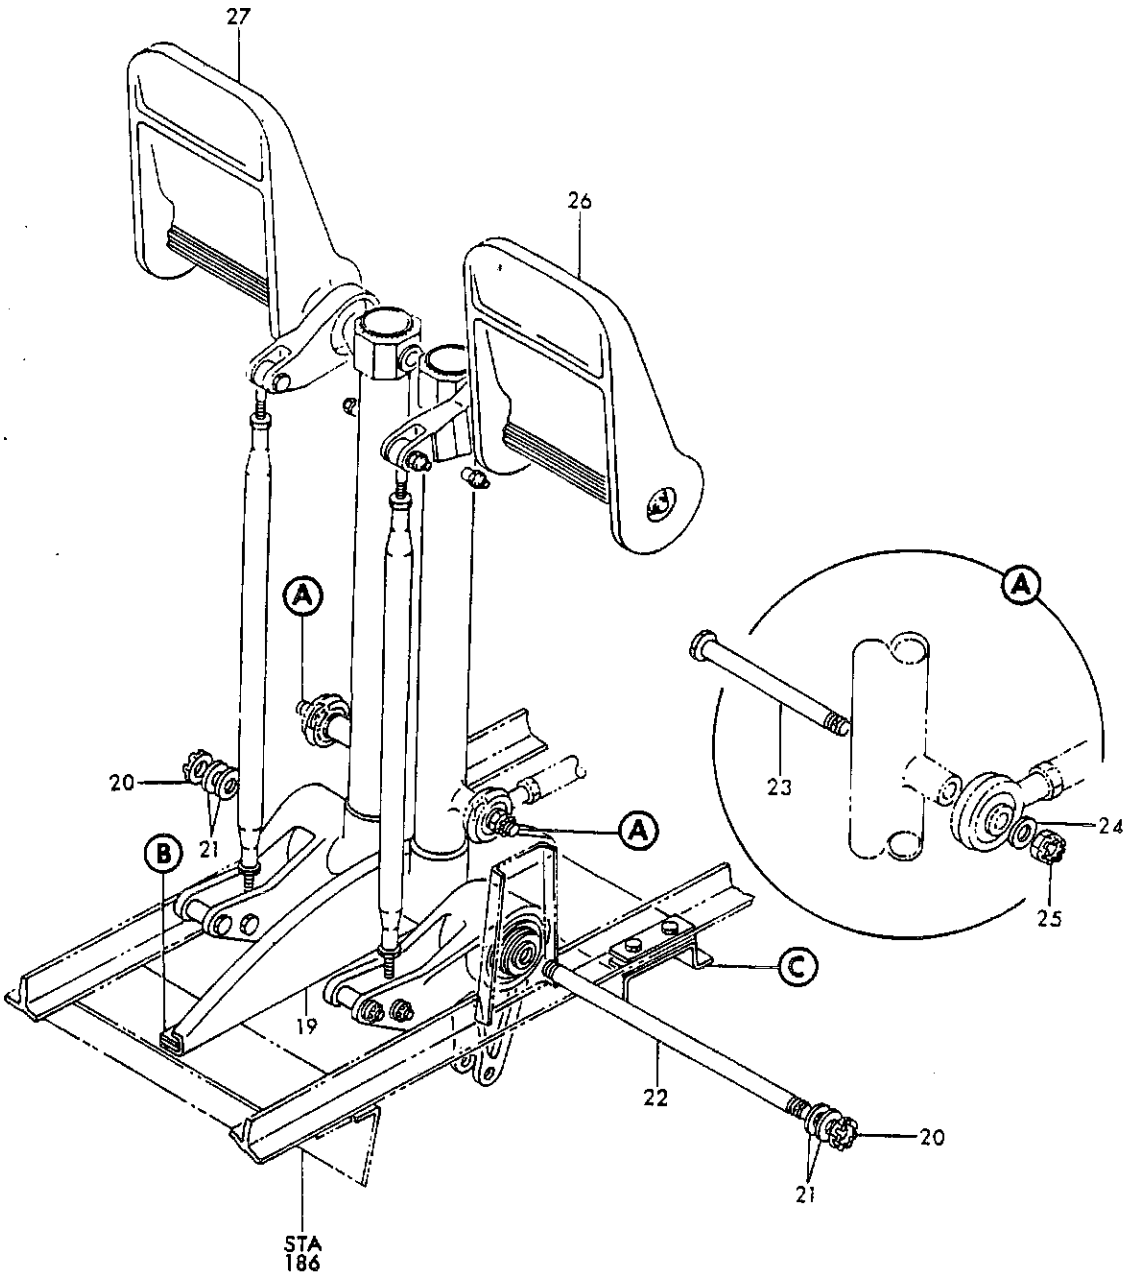


FIGURE 5. PEDAL INSTL, PILOT AND COPILOT RUDDER (SHEET 1)

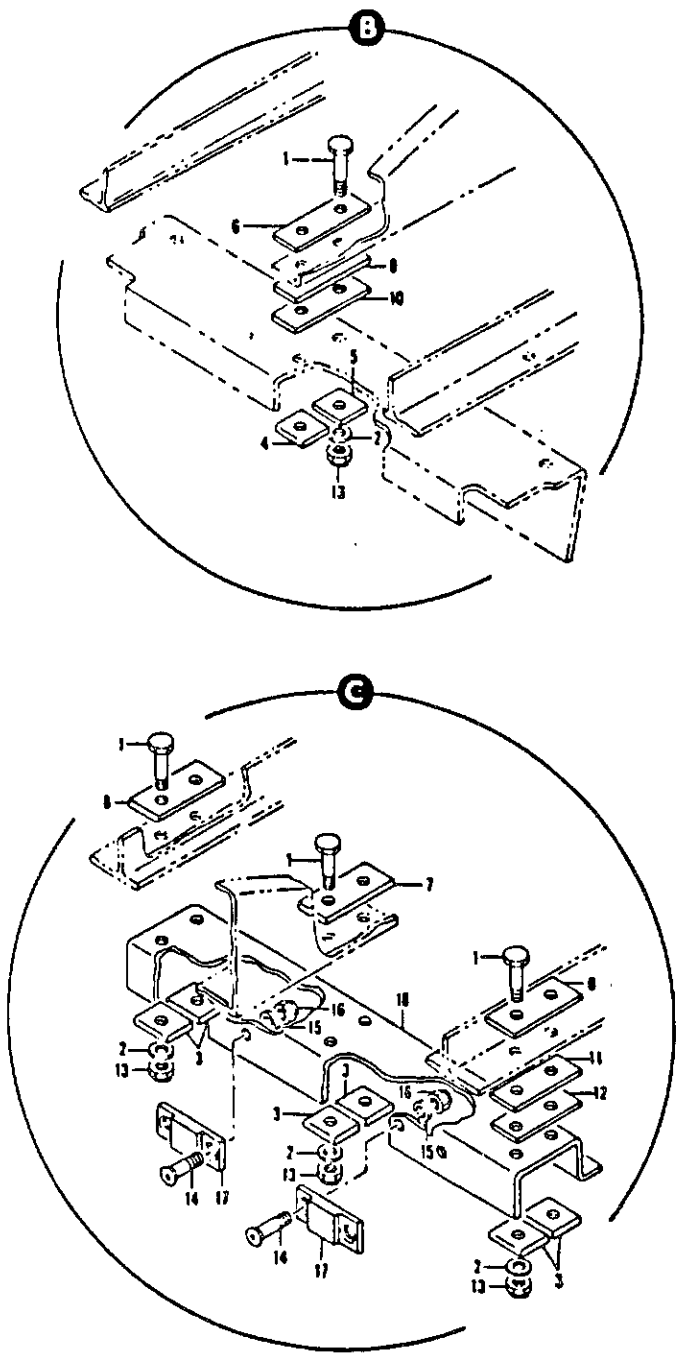


FIGURE 5. PEDAL INSTL, PILOT AND COPILOT RUDDER (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	5	5-95631-3007	PEDAL INSTL, PILOT RUDDER (SEE FIG. 1, ITEM 4).		RF
		5-95631-3008	PEDAL INSTL, COPILOT RUDDER (SEE FIG. 1, ITEM 5). . . .		RF
	1	AN4-7A	. BOLT.		8
	2	AN960D416	. WASHER.		8
	3	50-3361-16	. FILLER, CONTROL RADIUS.		6
	4	50-3361-3002	. FILLER, CONTROL RADIUS.		1
	5	50-3361-3003	. FILLER, CONTROL RADIUS.		1
	6	50-3361-19	. FILLER, CONTROL RADIUS.		1
	7	50-3361-20	. FILLER, CONTROL RADIUS.		1
	8	50-3361-79	. FILLER, CONTROL RADIUS.		2
	9	5-95631-9	. SHIM, RUDDER PEDAL SOLID.		AR
	10	5-95631-10	. SHIM, RUDDER PEDAL LAMINATED.		AR
	11	5-95631-7	. SHIM, RUDDER PEDAL SOLID.		AR
	12	5-95631-8	. SHIM, RUDDER PEDAL LAMINATED.		AR
	13	NAS679A4W	. NUT		8
	14	NAS517-3-2	. SCREW		4
	15	AN960D10	. WASHER.		4
	16	NAS679A3W	. NUT		4
	17	66-1509-1	. STOP, BRAKE CONTROL BELLCRANK		2
	18	69-1549-1	. CHANNEL, RUDDER PEDAL SUPPORT		1
	19	9-47363-3	. BRACKET, RUDDER PEDAL SUPPORT DETAIL.		1
	20	AN320-10	. NUT		2
	21	AN960D1016	. WASHER.		4
	22	6-60401	. SHAFT, RUDDER PEDAL SUPPORT		1
	23	AN6-33	. BOLT.		2
	24	AN970-6	. WASHER.		2
	25	AN310-6	. NUT		2
	26	5-95631-3009	. PEDAL ASSY, PILOT RUDDER LH (SEE FIG. 6).	0103	1
R	26	5-95631-3025	. PEDAL ASSY, PILOT RUDDER LH (SEE FIG. 6).	5199	1
R R	26	5-95631-3009	. PEDAL ASSY, PILOT RUDDER LH (DELETED BY SB 3049) (SEE FIG. 6)	0450	1
R R	26	5-95631-3025	. PEDAL ASSY, PILOT RUDDER LH (ADDED BY SB 3049) (SEE FIG. 6)	0450	1
	26	5-95631-3011	. PEDAL ASSY, COPILOT RUDDER LH (SEE FIG. 6).	0103	1
R	26	5-95631-3027	. PEDAL ASSY, COPILOT RUDDER LH (SEE FIG. 6).	5199	1
R R	26	5-95631-3011	. PEDAL ASSY, COPILOT RUDDER LH (DELETED BY SB 3049). (SEE FIG. 6)	0450	1
R R	26	5-95631-3027	. PEDAL ASSY, COPILOT RUDDER LH (ADDED BY SB 3049) (SEE FIG. 6)	0450	1
	27	5-95631-3010	. PEDAL ASSY, PILOT RUDDER RH (SEE FIG. 6).	0103	1
R	27	5-95631-3026	. PEDAL ASSY, PILOT RUDDER RH (SEE FIG. 6).	5199	1
R R	27	5-95631-3010	. PEDAL ASSY, PILOT RUDDER RH (DELETED BY SB 3049) (SEE FIG. 6)	0450	1
R R	27	5-95631-3026	. PEDAL ASSY, PILOT RUDDER RH (ADDED BY SB 3049) (SEE FIG. 6)	0450	1
	27	5-95631-3012	. PEDAL ASSY, COPILOT RUDDER RH (SEE FIG. 6).	0103	1
R	27	5-95631-3028	. PEDAL ASSY, COPILOT RUDDER RH (SEE FIG. 6).	5199	1
R R	27	5-95631-3012	. PEDAL ASSY, COPILOT RUDDER RH (DELETED BY SB 3049). (SEE FIG. 6)	0450	1
R R	27	5-95631-3028	. PEDAL ASSY, COPILOT RUDDER RH (ADDED BY SB 3049) (SEE FIG. 6)	0450	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

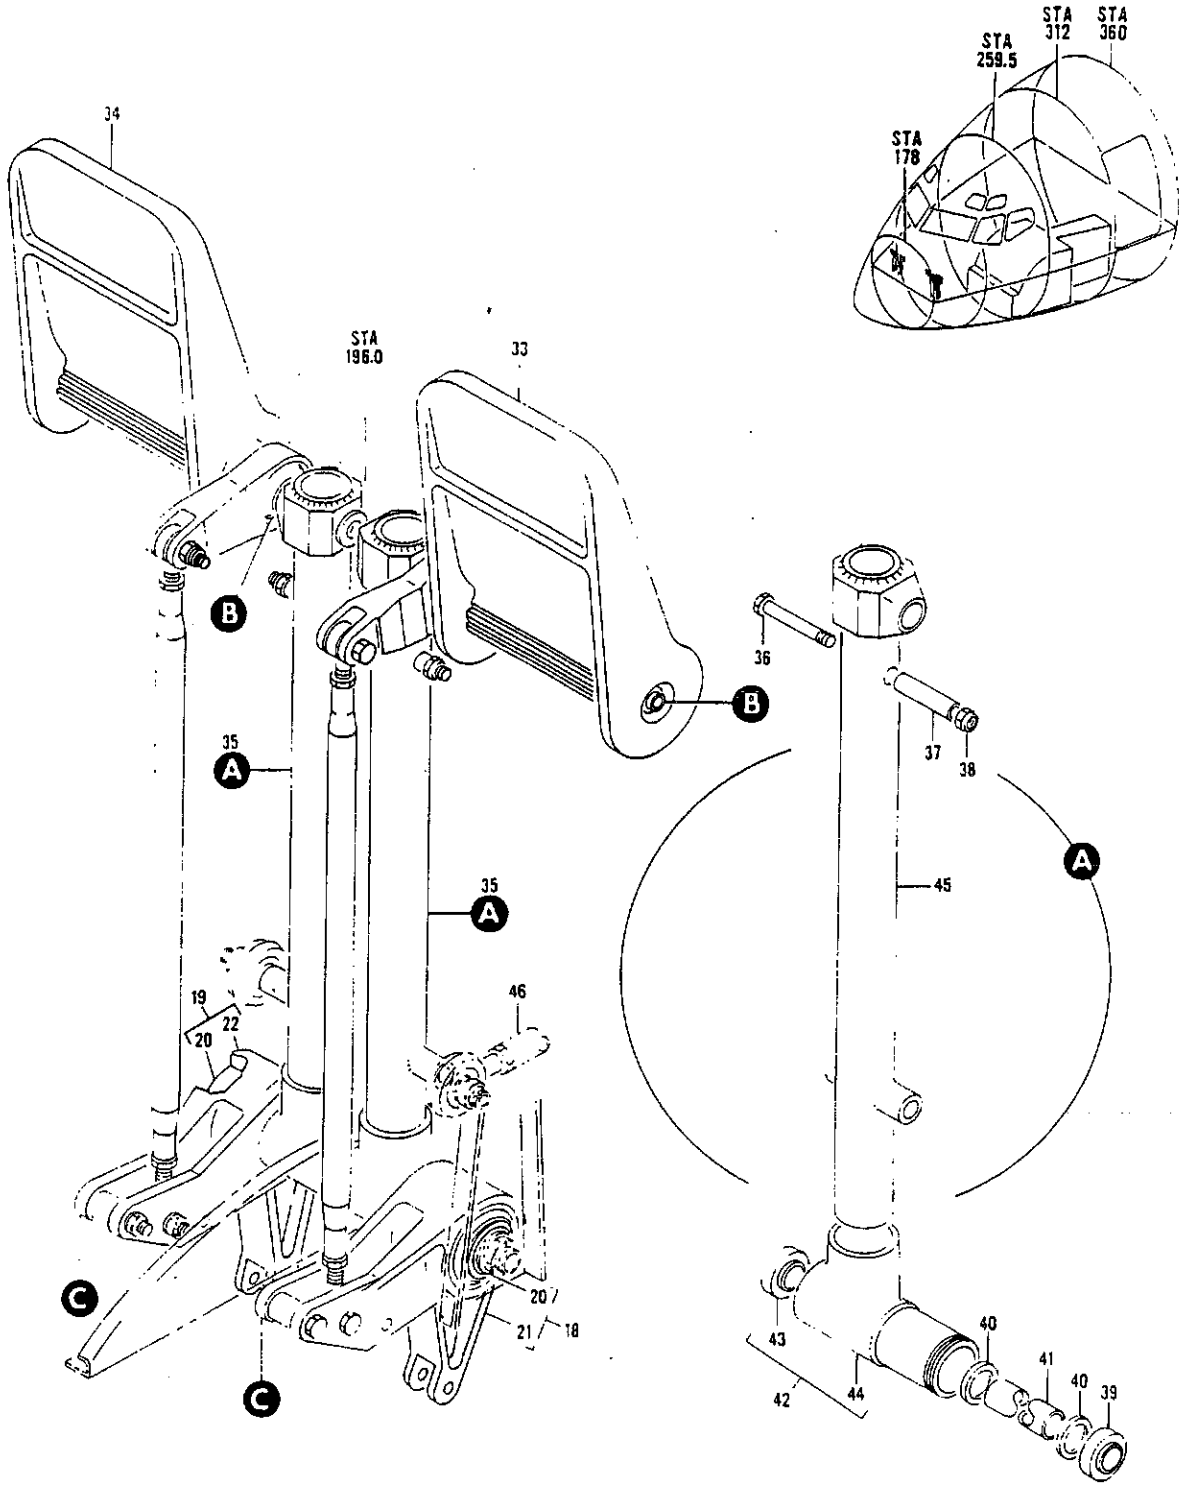


FIGURE 6. PEDAL ASSY, PILOT AND CO PILOT RUDDER (SHEET 1)

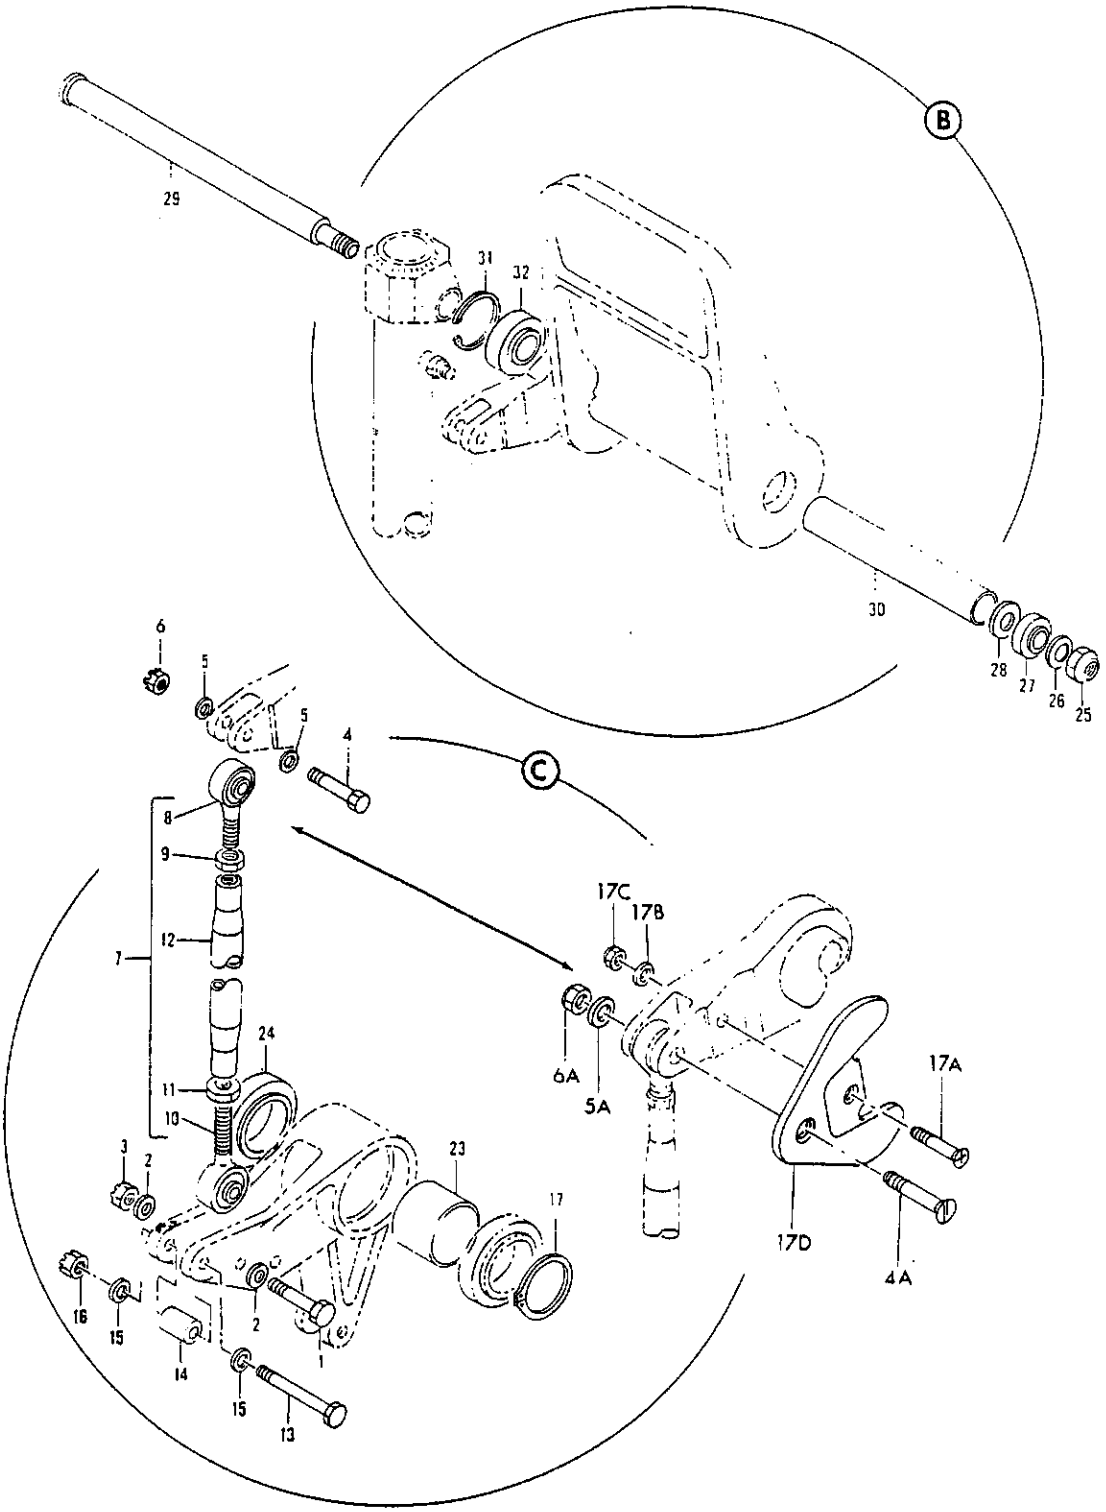



FIGURE 6. PEDAL ASSY, PILOT AND COPILOT RUDDER (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	6	5-95631-3009	PEDAL ASSY, PILOT RUDDER LH (SEE FIG. 5, ITEM 26) . . .	0103	RF
R		5-95631-3025	PEDAL ASSY, PILOT RUDDER LH (SEE FIG. 5, ITEM 26) . . .	5199	RF
R		5-95631-3009	PEDAL ASSY, PILOT RUDDER LH (DELETED BY SB 3049) (SEE .	0450	RF
R			FIG. 5, ITEM 26)		
R		5-95631-3025	PEDAL ASSY, PILOT RUDDER LH (ADDED BY SB 3049) (SEE . .	0450	RF
R			FIG. 5, ITEM 26)		
		5-95631-3010	PEDAL ASSY, PILOT RUDDER RH (SEE FIG. 5, ITEM 27) . . .	0103	RF
R		5-95631-3026	PEDAL ASSY, PILOT RUDDER RH (SEE FIG. 5, ITEM 27) . . .	5199	RF
R		5-95631-3010	PEDAL ASSY, PILOT RUDDER RH (DELETED BY SB 3049) (SEE .	0450	RF
R			FIG. 5, ITEM 27)		
R		5-95631-3026	PEDAL ASSY, PILOT RUDDER RH (ADDED BY SB 3049) (SEE . .	0450	RF
R			FIG. 5, ITEM 27)		
		5-95631-3011	PEDAL ASSY, COPILOT RUDDER LH (SEE FIG. 5, ITEM 26) . .	0103	RF
R		5-95631-3027	PEDAL ASSY, COPILOT RUDDER LH (SEE FIG. 5, ITEM 26) . .	5199	RF
R		5-95631-3011	PEDAL ASSY, COPILOT RUDDER LH (DELETED BY SB 3049) (SEE	0450	RF
R			FIG. 5, ITEM 26)		
R		5-95631-3027	PEDAL ASSY, COPILOT RUDDER LH (ADDED BY SB 3049) (SEE .	0450	RF
R			FIG. 5, ITEM 26)		
		5-95631-3012	PEDAL ASSY, COPILOT RUDDER RH (SEE FIG. 5, ITEM 27) . .	0103	RF
R		5-95631-3028	PEDAL ASSY, COPILOT RUDDER RH (SEE FIG. 5, ITEM 27) . .	5199	RF
R		5-95631-3012	PEDAL ASSY, COPILOT RUDDER RH (DELETED BY SB 3049) (SEE	0450	RF
R			FIG. 5, ITEM 27)		
R		5-95631-3028	PEDAL ASSY, COPILOT RUDDER RH (ADDED BY SB 3049) (SEE .	0450	RF
R			FIG. 5, ITEM 27)		
	1	AN5-20	. BOLT.		1
	2	BACW10T516	. WASHER.		2
	3	AN310-5	. NUT		1
	4	AN4-13	. BOLT.	0103	1
R	4	AN4-13	. BOLT, (DELETED BY SB 3049).	0450	1
R	4A	BACB30LU4-18	. BOLT.	5199	1
R	4A	BACB30LU4-18	. BOLT, (ADDED BY SB 3049).	0450	1
	5	AN960D416	. WASHER.	0103	2
R	5	AN960D416	. WASHER, (DELETED BY SB 3049).	0450	2
R	5A	AN960PD416	. WASHER.	5199	1
R	5A	AN960PD416	. WASHER, (ADDED BY SB 3049).	0450	1
	6	AN310-4	. NUT	0103	1
R	6	AN310-4	. NUT, (DELETED BY SB 3049)	0450	1
R	6A	BACN10JC4	. NUT	5199	1
R	6A	BACN10JC4	. NUT, (ADDED BY SB 3049)	0450	1
	7	6-60402-3001	. ROD ASSY, BRAKE CONTROL PUSH.		1
	8	BACB10A436	. . BEARING		1
			(OPTIONAL BACB10A75)		
	8	BACB10A75	. . BEARING		1
			(OPTIONAL TO BACB10A436)		
	9	AN316-6R	. . NUT		1
	10	BACB10A74	. . BEARING		1
	11	AN316-7R	. . NUT		1
	12	6-60403-2000	. . TUBE, BRAKE CONTROL PUSH ROD.		1
	13	NAS1104-24DW	. BOLT, (PILOT)		1
	14	NAS42DD8-56	. SPACER, (PILOT)		1
	15	BACW10T416L	. WASHER, (PILOT)		2
	16	AN320-4	. NUT, (PILOT).		1
	17	NAS51-156	. RING.		1
R	17A	BACB30LU3-10	. BOLT, (ADDED BY SB 3049).	0450	1
R	17A	BACB30LU3-13	. BOLT.	5199	1
R	17B	AN960PD10	. WASHER.	5199	1
R	17B	AN960PD10	. WASHER, (ADDED BY SB 3049).	0450	1
R	17C	BACN10JC3	. NUT	5199	1
R	17C	BACN10JC3	. NUT, (ADDED BY SB 3049)	0450	1
R	17D	69-63495-1	. GUIDE, RUDDER PEDAL	5199	1
R	17D	69-63495-1	. GUIDE, PEDAL (ADDED BY SB 3049)	0450	1
	18	65-1935-7	. BELLCRANK ASSY, RUDDER PEDAL SHAFT BRAKE CONTROL (LH		1
			ONLY)		
	19	65-1935-8	. BELLCRANK ASSY, RUDDER PEDAL SHAFT BRAKE CONTROL (RH		1
			ONLY)		
	20	AN202KP25B	. . BEARING		1
	21	65-1935-9	. . BELLCRANK, RUDDER PEDAL SHAFT BRAKE CONTROL (LH . .		1
			ONLY)		
	22	65-1935-10	. . BELLCRANK, RUDDER PEDAL SHAFT BRAKE CONTROL (RH . .		1
			ONLY)		
	23	3-74659	. SPACER, RUDDER PEDAL BRAKE CRANK.		1
	24	AN202KP25B	. BEARING		1
	25	NAS1022A8	. NUT		1
	26	AN960-816L	. WASHER.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	6 27	AN201KP8A	. BEARING		1
	28	3-26771	. WASHER, 1/2 IN. PLAIN		1
	29	6-60400	. SHAFT, RUDDER PEDAL		1
	30	NAS43DD12-376	. SPACER.		1
	31	NAS50-162	. RING.		1
	32	AN201KP12A	. BEARING		1
	33	5-63076-5	. PEDAL, RUDDER (LH ONLY)	0103	1
R	33	5-63076-5	. PEDAL, (DELETED BY SB 3049) (LH ONLY)	0450	1
R	33	5-63076-7	. PEDAL, RUDDER (LH ONLY)	5199	1
R	33	5-63076-7	. PEDAL, (ADDED BY SB 3049) (LH ONLY)	0450	1
	34	5-63076-6	. PEDAL, RUDDER (RH ONLY)	0103	1
R	34	5-63076-6	. PEDAL, (DELETED BY SB 3049) (RH ONLY)	0450	1
R	34	5-63076-8	. PEDAL, RUDDER (RH ONLY)	5199	1
R	34	5-63076-8	. PEDAL, (ADDED BY SB 3049) (RH ONLY)	0450	1
	35	65-7238	. ARM ASSY, RUDDER PEDAL.		1
	36	AN4-22A	. . BOLT.		1
	37	NAS42HT8-112	. . SPACER.		1
	38	BACN10BY54W	. . NUT		1
	39	AN201KP10A	. . BEARING		1
	40	3-84406	. . RING, BEARING SPACER CENTERING.		2
	41	NAS43DD10-244	. . SPACER.		1
	42	65-7239	. . TERMINAL ASSY, RUDDER PEDAL ARM		1
	43	AN201KP10A	. . . BEARING		1
	44	65-7239-1	. . . TERMINAL, RUDDER PEDAL ARM.		1
	45	65-7238-1	. . WELD ASSY, RUDDER PEDAL ARM		1
	46		JACKSHAFT INSTL, RUDDER CONTROL (FOR REF SEE FIG. 2).		RF

MISSING ITEM NUMBERS ARE NOT APPLICABLE

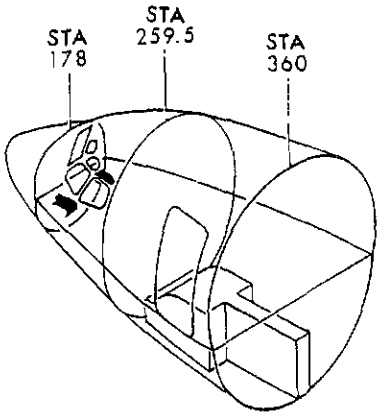

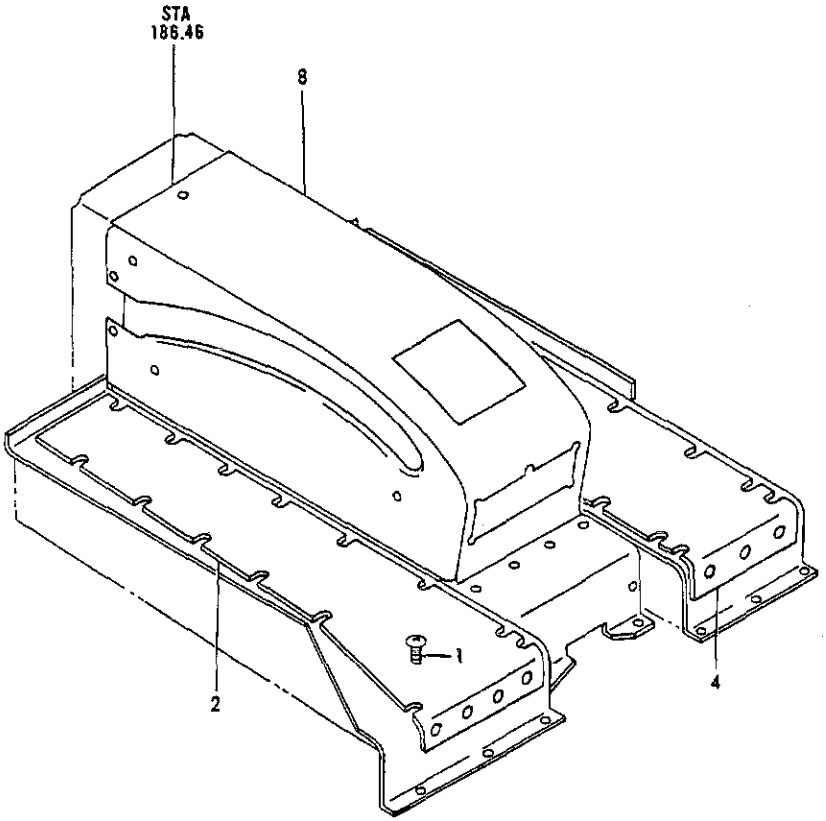


FIGURE 7. REST INSTL, PILOTS AND COPILOTS RUDDER PEDAL HEEL

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	7	5-97874-3004	REST INSTL, PILOTS RUDDER PEDAL HEEL (SEE FIG. 1, ITEM 8)		RF
		5-97874-3005	REST INSTL, COPILOTS RUDDER PEDAL HEEL (SEE FIG. 1, . . ITEM 9)		RF
	1	NAS603-8	. SCREW		49
	1A	90-2289-3001	. BOX ASSY, HEEL REST SUPPORT	0103	1
R	1A	90-2289-3001	. BOX ASSY, REST SUPPORT (DELETED BY SB 3049)	0450	1
R	1A	90-2289-3003	. BOX ASSY, HEEL REST SUPPORT	5199	1
	1B	AN530-6-4	. SCREW		7
	2	65-55066-3	. PLATE, RUDDER PEDAL HEEL REST WEAR (PILOT).		1
	2	65-55066-4	. PLATE, RUDDER PEDAL HEEL REST WEAR (COPILOT).		1
	3	65-3052-1	. PANEL ASSY, PILOTS HEEL REST (PILOT).		1
	3	65-3052-2	. PANEL ASSY, COPILOTS HEEL REST (COPILOT).		1
	4	65-55066-1	. PLATE, WEAR (PILOT)		1
	4	65-55066-2	. PLATE, WEAR (COPILOT)		1
R	5	65-3052-3	. PANEL ASSY, (PILOT)	0150	1
R	5	65-3052-4	. PANEL ASSY, (COPILOT)	0150	1
R	5	65-3052-33	. PANEL ASSY, (PILOT)	5199	1
R	5	65-3052-34	. PANEL ASSY, (COPILOT)	5199	1
	6	66-2439	. WEB, RUDDER PEDALS HEEL REST CENTER		1
	7	NAS603-5	. SCREW	0103	4
R	7	NAS514P1032-6	. SCREW	5199	4
R	7	NAS603-5	. SCREW, (DELETED BY SB 3049)	0450	4
R	7A	NAS1169D010	. WASHER.	5199	4
R	7B	AN960PD10	. WASHER.	5199	4
R	7C	BACN10JC3	. NUT	5199	4
	8	50-3149-3016	. COVER ASSY, RUDDER PEDAL.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

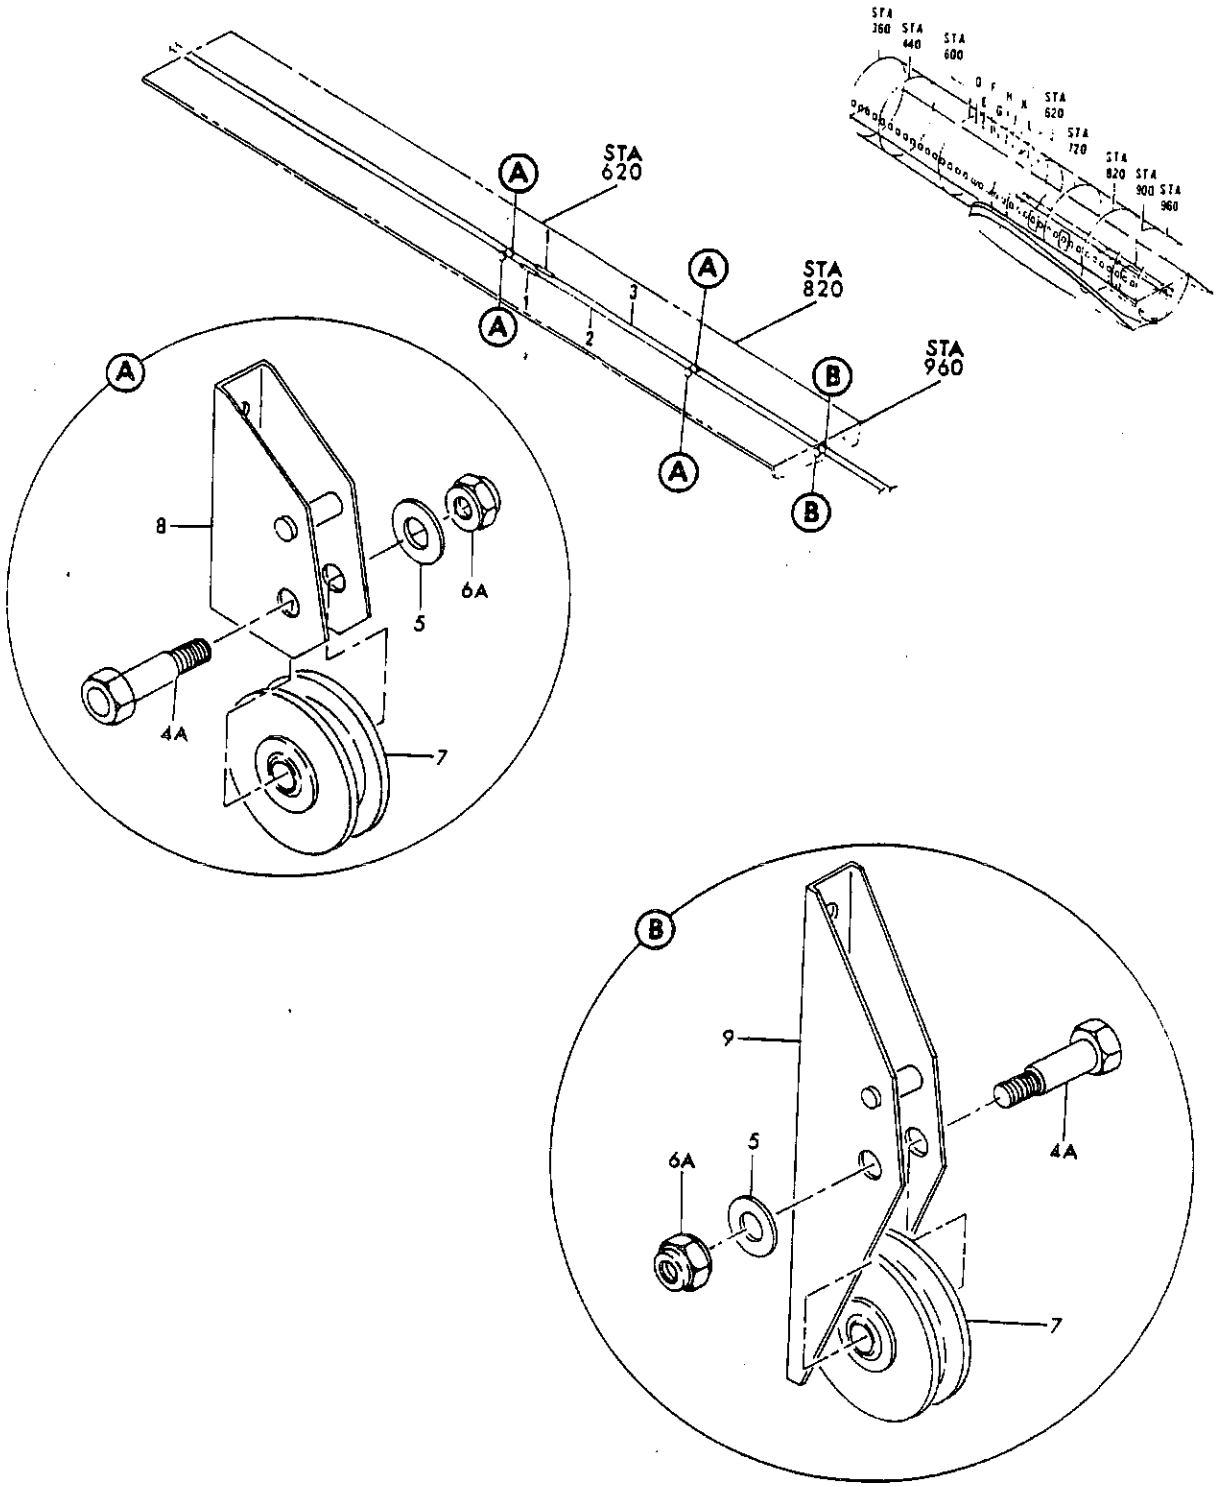


FIGURE 8. CONTROL INSTL, RUDDER

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8	50-8703-353	CONTROL INSTL, RUDDER (SEE 53-1, FIG. 2, ITEM 1). . . .		RF
	50-8723-2	. PULLEY INSTL, STATION 620 RUDDER CABLE IDLER.		1
	50-8247-2	. PULLEY INSTL, STATION 820 RUDDER CABLE IDLER.		1
	50-8736-2	. PULLEY INSTL, STATION 960 RUDDER CABLE IDLER.		1
4A	BAC830NF5-11	. . BOLT.		2
5	AN960D516	. . WASHER.		2
6A	BACN10JC5	. . NUT		2
7	AN220-1	. . PULLEY.		2
8	60-3106	. . BRACKET ASSY, IDLER PULLEY CONTROL (USED ON . . . . 50-8723-2 AND 50-8247-2)		2
9	90-7852	. . BRACKET ASSY, IDLER PULLEY CONTROL (USED ON . . . . 50-8736-2)		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

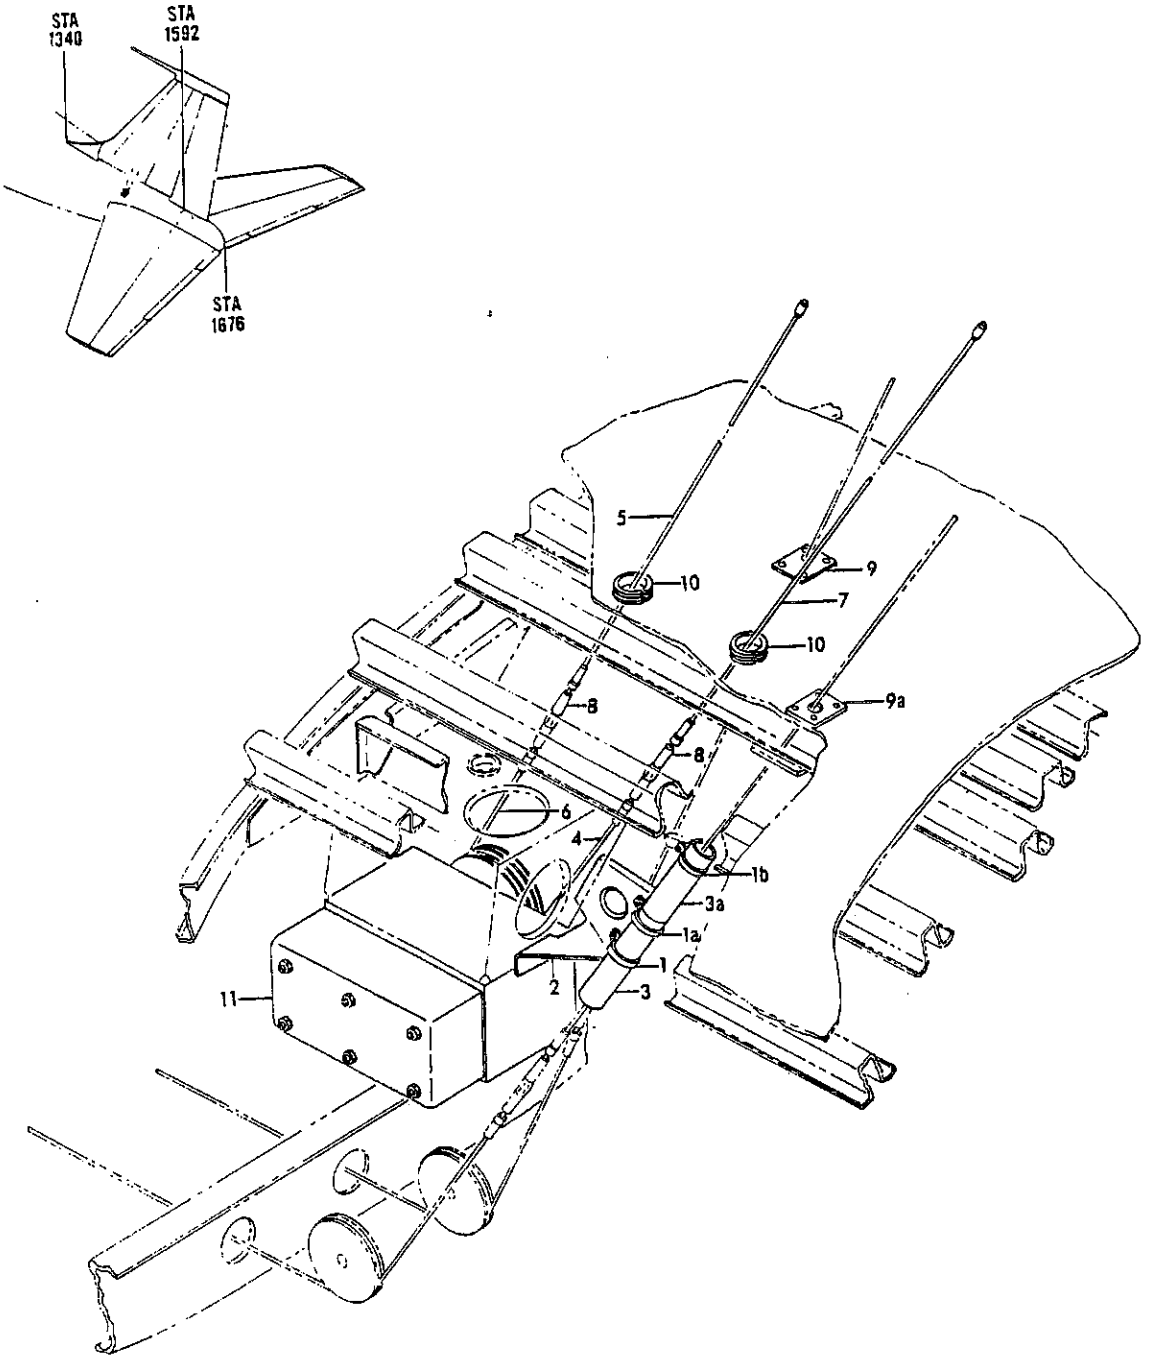


FIGURE 9. CONTROL INSTL, RUDDER

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
9	50-8703-158	CONTROL INSTL, RUDDER (SEE 53-1, FIG. 4, ITEM 3). . . .		RF
	65-8713	. GUARD INSTL, STATION 1490 RUDDER CABLE.		1
1	69-8701	. . CLAMP, RUDDER CABLE GUARD SUPPORT		1
1B	69-8701	. . CLAMP, RUDDER CABLE GUARD SUPPORT		1
		ATTACHING PARTS		
	NAS603-6	. . SCREW		2
	NAS43DD3-3	. . SPACER.		2
	NAS679A3W	. . NUT		2
		-------*-------		
2	69-8701-3	. . BRACKET, RUDDER CABLE GUARD SUPPORT		1
3A	66-8640-2	. . GUARD, STATION 1490 RUDDER CABLE.		1
	50-3769-3002	. GROMMET INSTL, STATION 1484 TO 1505 RUDDER CONTROL.		1
		CABLE		
9	90-4001-1	. . GROMMET, STATION 1484 TO 1505 RUDDER CONTROL CABLE		1
9A	69-47706-1	. . GROMMET		1
		ATTACHING PARTS		
	MS20470A5	. . RIVET		8
		-------*-------		
10	BACG20H4N	. . GROMMET		2
11	65-3783-36	. SERVO INSTL, STATION 1484 TO 1505.87 RUDDER CONTROL		1
		(SEE 22-1, FIG. 17)		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

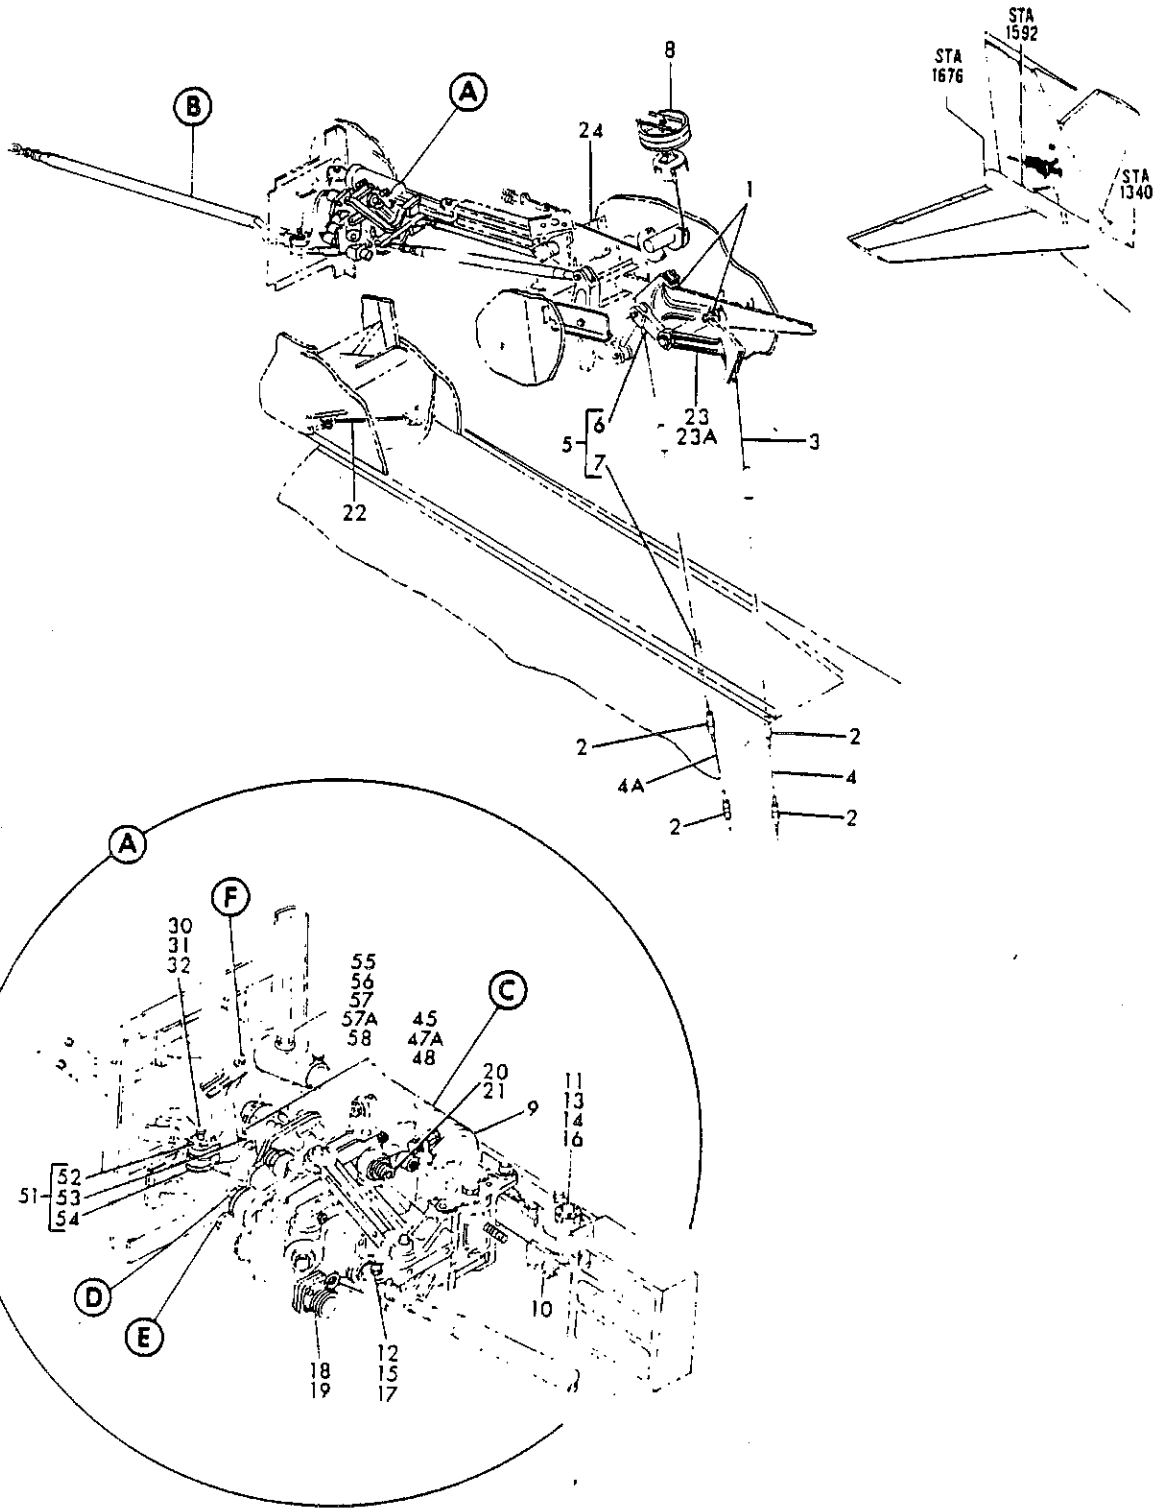


FIGURE 14A. CONTROL INSTL, RUDDER (SHEET 1)

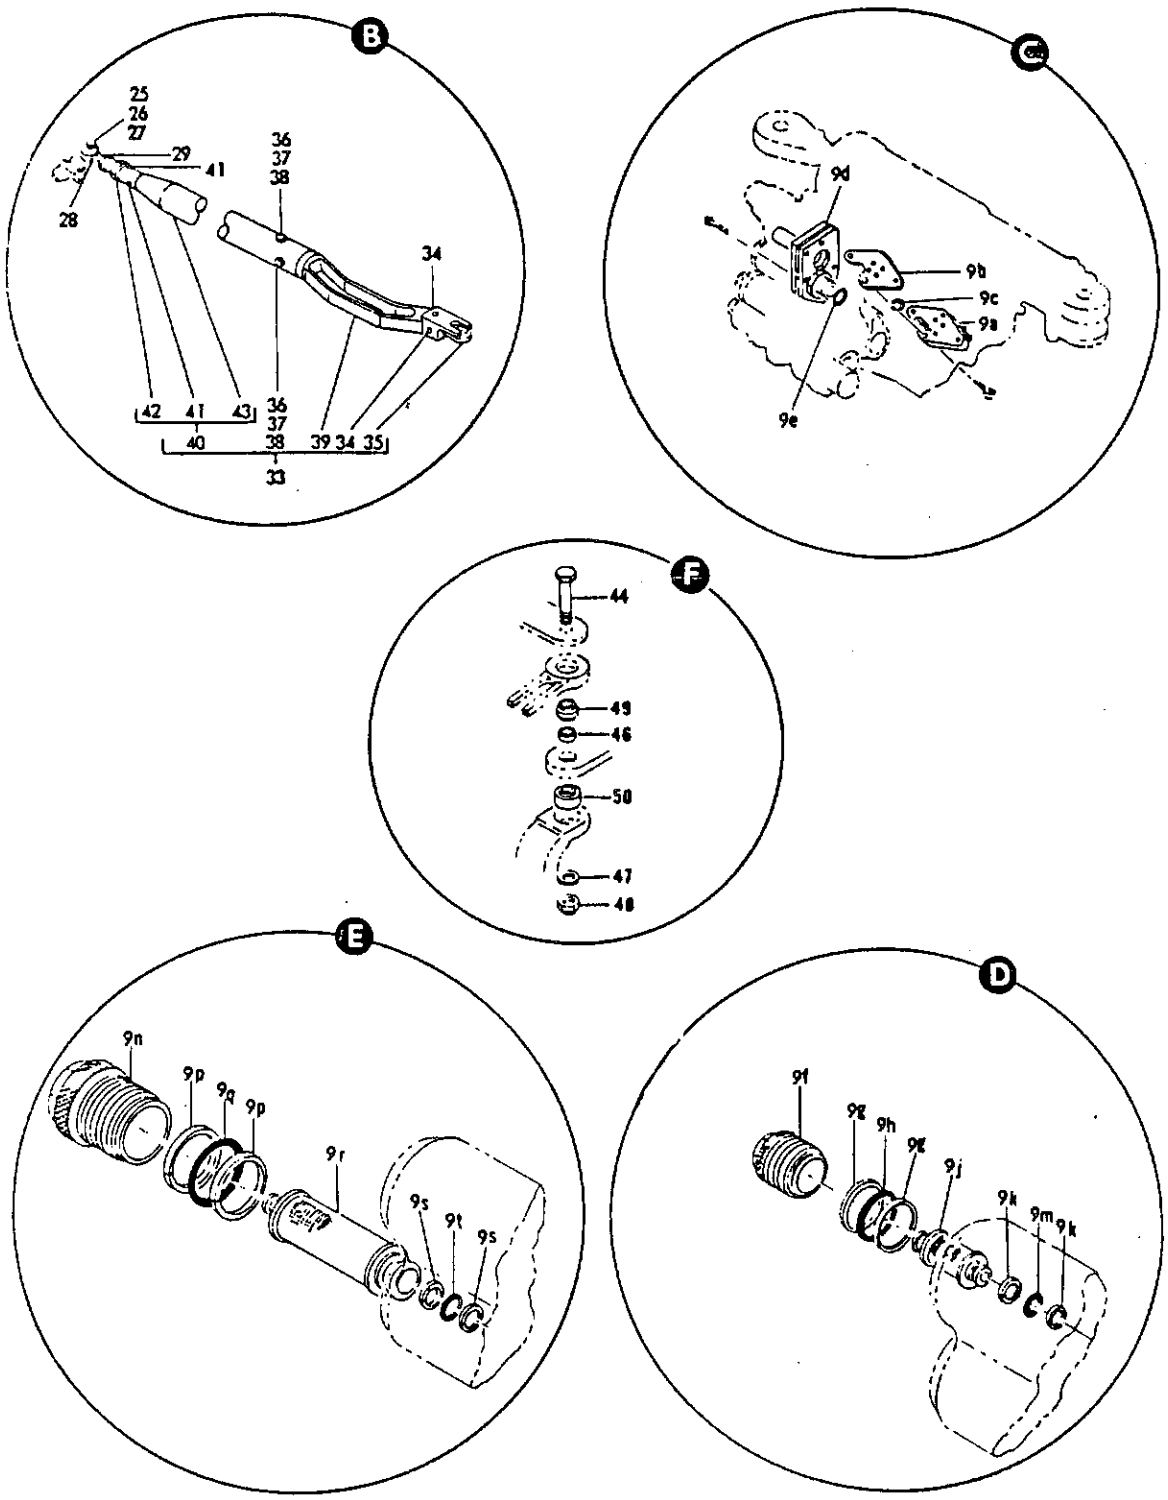


FIGURE 14A. CONTROL INSTL, RUDDER (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	14A		CONTROL INSTL, RUDDER		
		50-8703-186	. CONTROL INSTL, RUDDER (SEE 55-1, FIG. 2, ITEM 48) . .	0103	RF
		50-8703-791	. CONTROL INSTL, RUDDER (SEE 55-1, FIG. 2, ITEM 48) . .	0499	RF
R	1	6-57698	. . RETAINER, LANDING GEAR STEERING CABLE	0150	2
R	1	3-89042-3001	. . RETAINER, LANDING GEAR STEERING CABLE	5199	2
			ATTACHING PARTS		
		AN3-5A	. . BOLT.		4
		BACW10T10	. . WASHER.		4
		NAS679A3W	. . NUT		4
			-------*-------		
	2	AN155-32L	. . BARREL.		4
	3	BACC13G468-1432	. . CABLE ASSY.		1
	4	NAS304-45-183	. . CABLE ASSY.		1
	4A	NAS304-45-183	. . CABLE ASSY.		1
	5	66-29068-1	. . CABLE ASSY, RUDDER CONTROL.		1
	6	BACT14A4	. . . TERMINAL.		1
	7	MS21260L4RH	. . . TERMINAL.		1
	8	65-8754-61	. . SPRING INSTL, DIRECTIONAL CONTROL Q (SEE FIG. 16A)		1
R		65-38982-1	. . POWER UNIT INSTL, RUDDER AND TAB CONTROL LINKAGE. .	0150	1
R		65-38982-6	. . POWER UNIT INSTL, RUDDER AND TAB CONTROL LINKAGE. .	5199	1
	9	10-60815-2	. . . CONTROL PACKAGE, (SAME AS 60000-5005 (V82106)). .	0101	1
R	9	10-60815-6	. . . CONTROL PACKAGE	5199	1
R	9	10-60815-4	. . . CONTROL PACKAGE, (ADDED BY SB 3072)	0150	1
R	9	10-60815-2	. . . CONTROL PACKAGE, RUDDER POWER (SAME AS 60000-5005	0250	1
R			(V82106)) (DELETED BY SB 3072)		
R			(OPTIONAL BAC SPEC NO. 10-60815-3 (DELETED		
R			BY SB 3072))		
R	9	10-60815-3	. . . CONTROL PACKAGE, RUDDER POWER (SAME AS 60000-5005	0250	1
R			(V82106)) (DELETED BY SB 3072)		
R			(OPTIONAL TO BAC SPEC NO. 10-60815-2 (DELETED		
R			BY SB 3072))		
	9	60000-5005	. . . PACKAGE ASSY, (V82106) (SAME AS BAC SPEC NO.. . .	0101	RF
			10-60815-2)		
R	9	60000-5005	. . . PACKAGE ASSY, (V82106) (SAME AS BAC SPEC NO.. . .	0250	RF
R			10-60815-2) (DELETED BY SB 3072)		
R			(OPTIONAL BAC SPEC NO. 10-60815-3 (DELETED		
R			BY SB 3072))		
R	M 9F	59119	. . . . CAP, FILTER (V82106).	0150	1
R	M 9G	S12766-217	. . . . RING, (V97820).	0150	2
R	M 9H	NAS1611-217	. . . . PACKING	0150	1
R	M 9J	10-60808-3	. . . . FILTER.	0250	1
	M 9J	10-60808-3	. . . . FILTER, (USED ON 60000-5005 (V82106))	0101	1
R	M 9K	S12766-012	. . . . RING, (V97820).	0150	2
R	M 9M	NAS1611-012	. . . . PACKING	0150	1
R	M 9N	59120	. . . . CAP, FILTER (V82106).	0150	1
R	M 9P	S12766-222	. . . . RING, (V97820).	0150	2
R	M 9Q	NAS1611-222	. . . . PACKING	0150	1
R	M 9R	10-60808-4	. . . . FILTER.	0250	1
	M 9R	10-60808-4	. . . . FILTER, (USED ON 60000-5005 (V82106))	0101	1
R	M 9S	S12766-116	. . . . RING, (V97820).	0150	2
R	M 9T	NAS1611-116	. . . . PACKING	0150	1
	10	MS20392-2C73	. . . PIN		1
	11	66-21454-1	. . . BOLT, SHEAR		1
	12	NAS1104-15DW	. . . BOLT.		1
	13	MS20002C12	. . . WASHER.		1
	14	AN960D1216	. . . WASHER.		1
	15	AN960D416	. . . WASHER.		1
	16	AN320-12	. . . NUT		1
	17	AN320-4	. . . NUT		1
	18	NAS1612-6	. . . PACKING		1
	19	MS21902-6	. . . UNION		1
	20	NAS1612-8	. . . PACKING		1
	21	MS21916D8-6	. . . REDUCER		1
R	22	65-23411-1	. . TRANSMITTER INSTL, RUDDER POSITION (SEE FIG. 49). .	5199	1
	23	65-38971-1	. . QUADRANT INSTL, RUDDER CONTROL (SEE FIG. 22A) . . .	0103	1
R	23	65-38971-5	. . QUADRANT INSTL, RUDDER CONTROL (SEE FIG. 22A) . . .	0450	1
R	23	65-38971-7	. . QUADRANT INSTL, RUDDER CONTROL (SEE FIG. 22A) . . .	5199	1
	24	65-41101-3	. . FEEL MECHANISM INSTL.		1
			. . . FLIGHT CONTROL, (SEE FIG. 14B).		
			. . . REQUIRED PLACARDS, (SEE 11-2, FIG. 204)		
		50-8703-188	. CONTROL INSTL, RUDDER (SEE 27-8, FIG. 3, ITEM 51A AND		RF
			27-8, FIG. 3A, ITEM 66)		
R		65-38982-2	. . POWER UNIT INSTL, RUDDER AND TAB CONTROL LINKAGE. .	0150	1
R		65-38982-5	. . POWER UNIT INSTL, RUDDER AND TAB CONTROL LINKAGE. .	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	14A 25	BACB30NF4-18D	. . . BOLT.		1
	26	AN960D416	. . . WASHER.		1
	27	BACN10JD14	. . . NUT		1
	28	BACB10AD5	. . . BEARING		1
	29	AN316-6R	. . . NUT		1
	30	BACB30NF4-38D	. . . BOLT.		1
	31	NAS1197-416	. . . WASHER.		1
	32	BACN10JD14	. . . NUT		1
	33	69-14346-2	. . . ROD ASSY, RUDDER TAB.		1
	34	MS20470D6	. . . . RIVET		2
	35	BACB10AD11	. . . . BEARING		1
	36	NAS1104-24W	. . . . BOLT.		2
	37	AN960PD416L	. . . . WASHER.		2
	38	BACN10JC4	. . . . NUT		2
	39	65-20470-1	. . . . ROD, RUDDER TAB CONTROL		1
	40	69-14345-3	. . . . ROD ASSY, RUDDER TAB CONTROL.		1
	41	MS20470D6	. . . . . RIVET		2
	42	60-2271-4	. . . . . PLUG, THREADED ROD END.		1
	43	69-14345-2	. . . . . ROD, RUDDER TAB CONTROL		1
	44	BACB30NF4-27D	. . . BOLT.		1
	45	BACB30NF4-17D	. . . BOLT.		1
	46	NAS43DD4-9	. . . SPACER.		1
	47	NAS1197-416	. . . WASHER.		1
	47A	AN960D416	. . . WASHER.		1
	48	BACN10JD14	. . . NUT		2
	49	BACB10BX4	. . . BEARING		1
	50	BACB10C134H	. . . BEARING		1
	51	65-38934-1	. . . CRANK ASSY, RUDDER TRIM CONTROL		1
	52	NAS76A4-18P	. . . . BUSHING		1
	53	BACB10C134H	. . . . BEARING		1
	54	65-38934-2	. . . . CRANK (OPTIONAL 65-38934-4		1
	54	65-38934-4	. . . . CRANK (OPTIONAL TO 65-38934-2)		1
R	55	69-12132-3	. . . BOLT.	5199	1
R	55	69-12132-3	. . . BOLT, (DELETED BY SB 3042). (OPTIONAL NAS1112-44D (ADDED BY SB 2903 AND DELETED BY SB 3042))	0150	1
R	55	NAS1112-44D	. . . BOLT, (ADDED BY SB 2903 AND DELETED BY SB 3042) (OPTIONAL TO 69-12132-3 (ADDED BY SB 2903 AND DELETED BY SB 3042))	0150	1
R	55	69-63497-1	. . . BOLT, (ADDED BY SB 3042).	0150	1
R	56	AN960D1216	. . . WASHER.	5199	1
R	56	AN960D1216	. . . WASHER, (DELETED BY SB 3042).	0150	1
R	56	BACW10BP12C	. . . WASHER, (ADDED BY SB 3042).	0150	1
R	57	MS20002C12	. . . WASHER.	5199	1
R	57	MS20002C12	. . . WASHER, (DELETED BY SB 3042).	0150	1
R	57A	BACW10BP12P	. . . WASHER, (USE UNDER NUT) (ADDED BY SB 3042).	0150	2
R	58	BACN10JD112	. . . NUT	5199	1
R	58	BACN10JD112	. . . NUT, (DELETED BY SB 3042)	0150	1
R	58	BACN10HR12	. . . NUT, (ADDED BY SB 3042)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

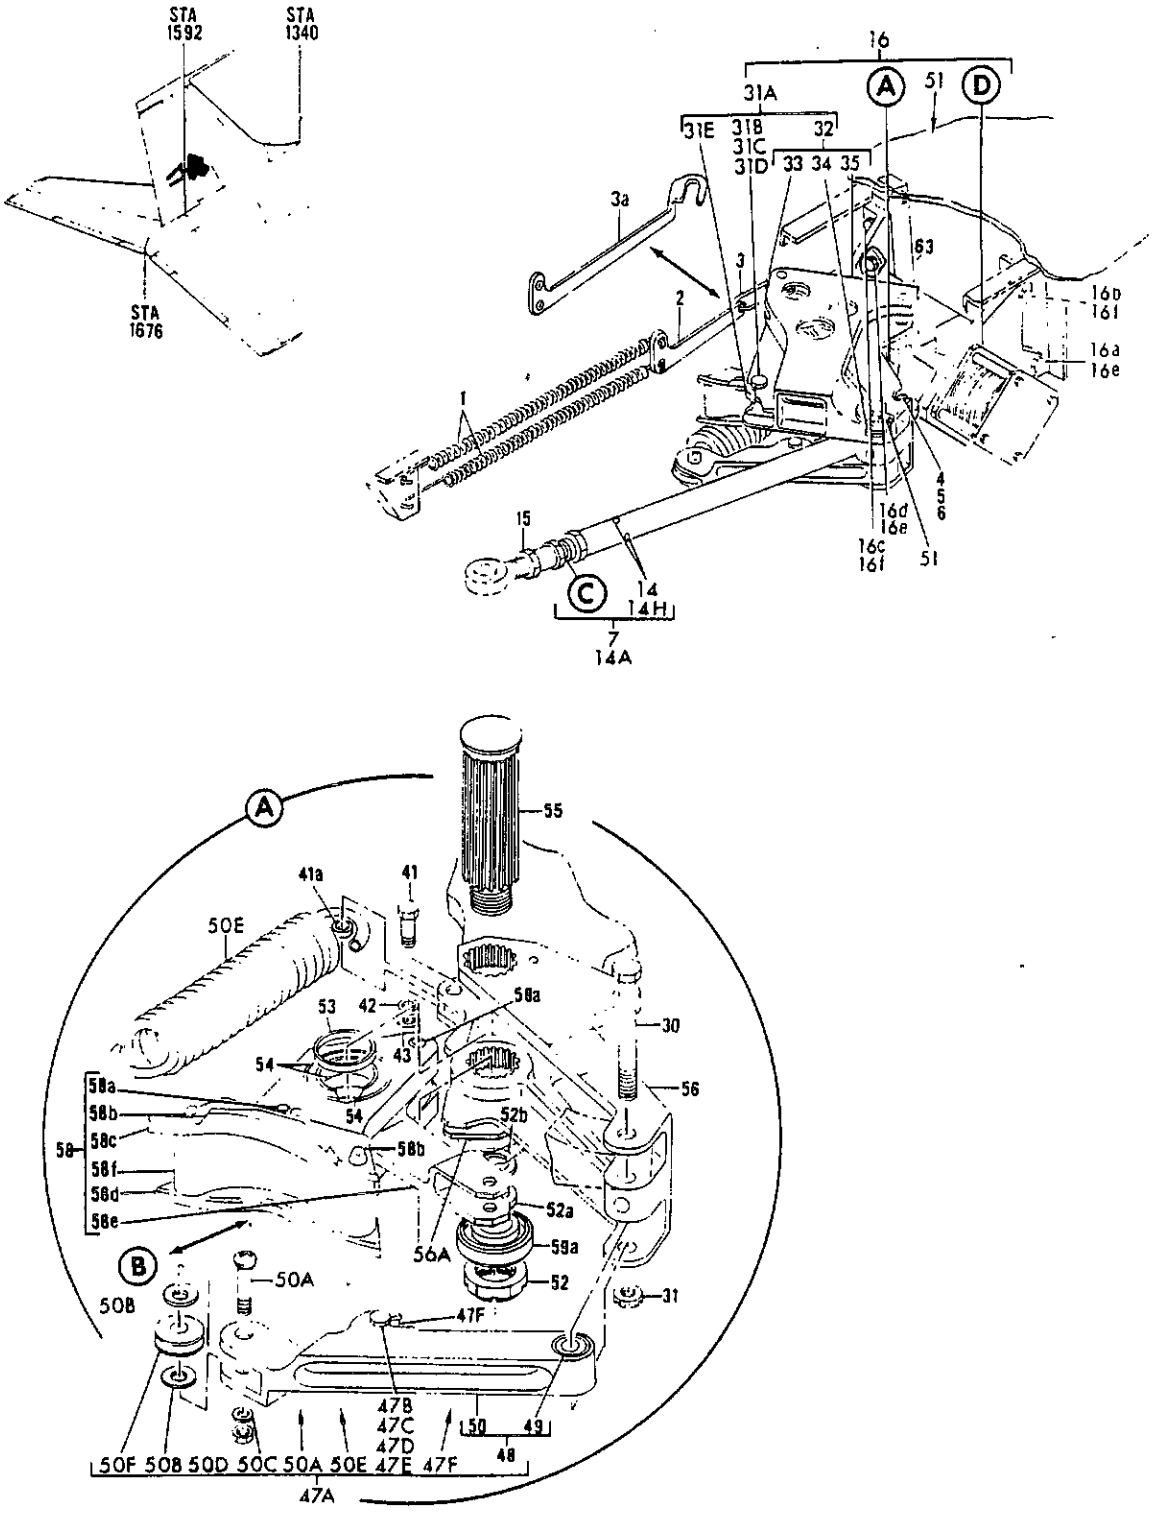


FIGURE 14B. FEEL MECHANISM INSTL, RUDDER (FLIGHT CONTROL ONLY) (SHEET 1)

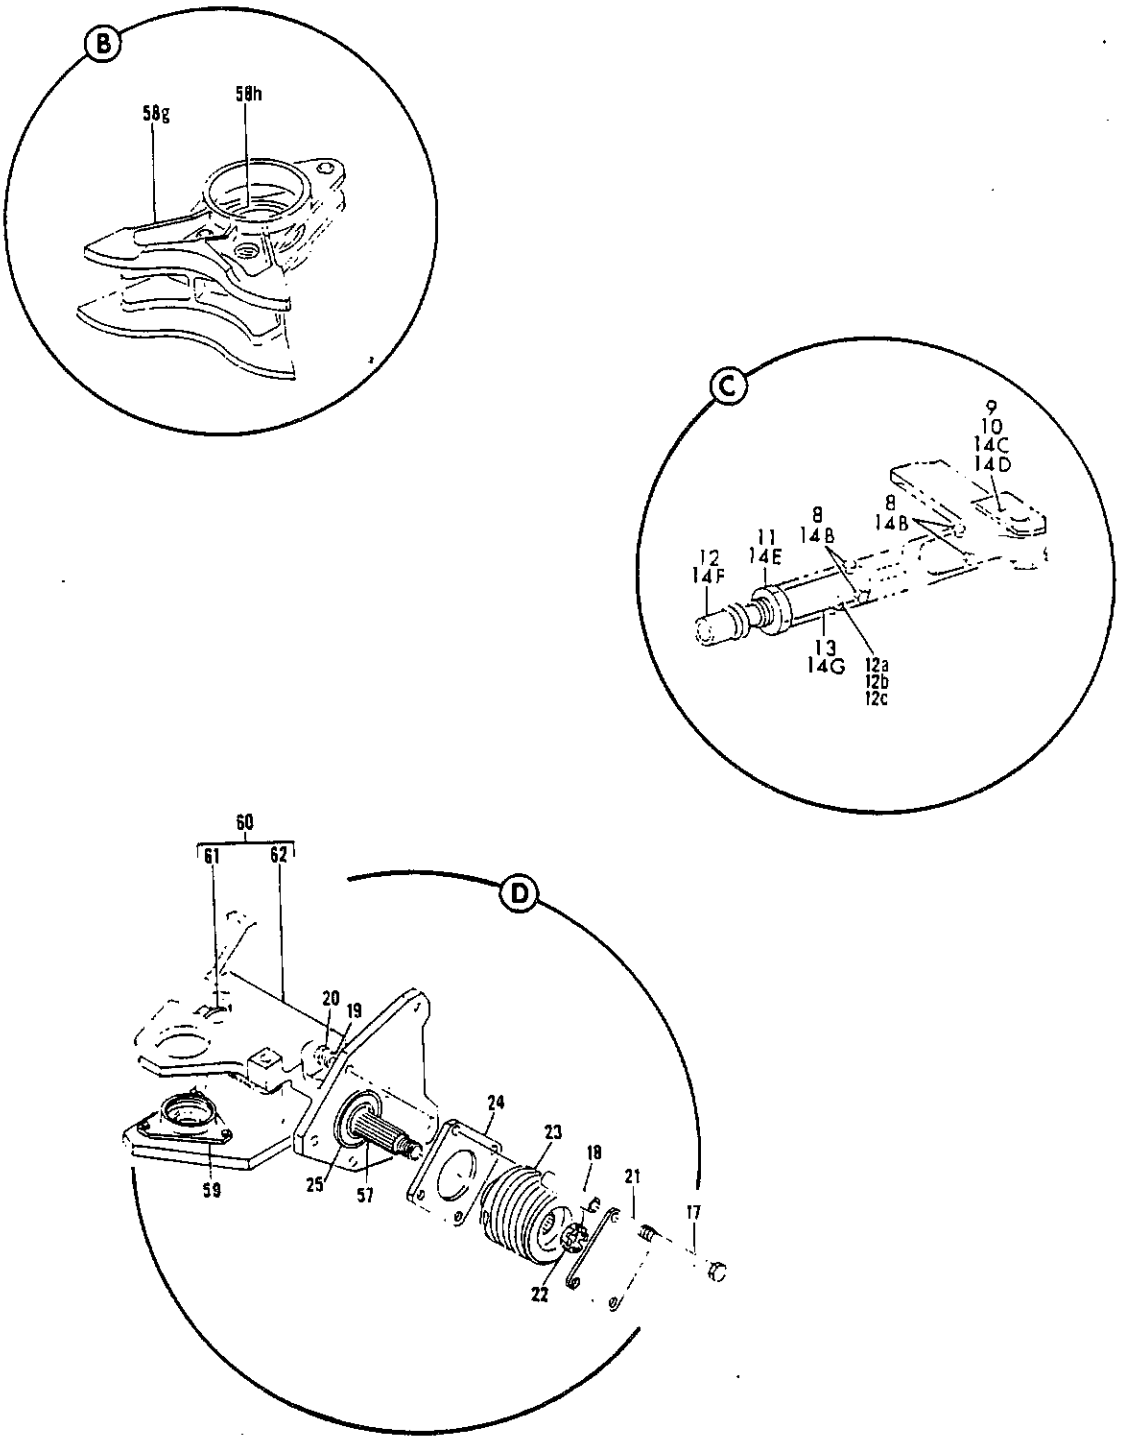


FIGURE 148. FEEL MECHANISM INSTL, RUDDER (FLIGHT CONTROL ONLY) (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	14B	65-41101-3	FEEL MECHANISM INSTL, RUDDER (FLIGHT CONTROL ONLY) (SEE FIG. 14A, ITEM 24)		RF
	1	66-21735-1	. SPRING, TENSION		2
	3A	66-23386-1	. SPACER, SPRING.		1
	4	BACB30NF4D13	. BOLT.		1
	5	AN960D416L	. WASHER.		1
	6	BACN10JD4	. NUT		1
	7	69-47929-1	. ROD ASSY, (FLIGHT CONTROL ONLY)		1
	8	MS20470D	. . RIVET		4
	9	66-21586-2	. . BEARING ASSY, ROD END		1
	10	BACB10C127H	. . . BEARING		1
	11	AN316-8R	. . NUT		1
	12	66-22340-1	. . PLUG, RUDDER CONTROL FEEL MECHANISM		1
	12A	NAS679A3W	. . NUT		1
	12B	AN960D10L	. . WASHER.		1
	12C	NAS623-3-12	. . SCREW		1
	13	66-22339-1	. . PLUG, CONTROL ROD THREADED.		1
	14	69-34769-2	. . ROD, RUDDER FEEL MECHANISM (USED ON 69-34769-1)		1
	14	69-47929-2	. . ROD, (USED ON 69-47929-1)		1
	15	AN316-6	. NUT		1
R R	16	65-39753-1	. FEEL MECHANISM ASSY, RUDDER CONTROL (OPTIONAL TO 65-39753-9)	0150	1
R R	16	65-39753-9	. FEEL MECHANISM ASSY, RUDDER CONTROL (OPTIONAL 65-39753-1)	0150	1
R	16	65-39753-9	. FEEL MECHANISM ASSY, RUDDER CONTROL	5199	1
			ATTACHING PARTS		
	16A	BACB30NF4-10	. BOLT, (USED WITH 65-41499-1).		1
	16A	BACB30NF4-8	. BOLT, (USED WITH 65-40595-1).		1
	16B	BACB30NF5-11	. BOLT, (USED WITH 65-41499-1).		1
	16B	BACB30NF5-9	. BOLT, (USED WITH 65-40595-1).		1
	16C	BACB30NF5-14	. BOLT, (USED WITH 65-41499-1).		1
	16C	BACB30NF5-11	. BOLT, (USED WITH 65-40595-1).		1
	16D	BACB30NF4-14	. BOLT, (USED WITH 65-41499-1).		1
	16D	BACB30NF4-11	. BOLT, (USED WITH 65-40595-1).		1
	16E	AN960D416L	. WASHER.		2
	16F	AN960D516L	. WASHER.		2
			-------*-------		
	17	BACB30NF4-48	. . BOLT, (USED WITH 65-41499-1).		4
	17	BACB30NF4-46	. . BOLT, (USED WITH 65-40595-1).		4
	18	NAS43DD4-128	. . SPACER.		4
	19	AN960PD416	. . WASHER.		4
	20	BACN10JC4	. . NUT		4
	21	66-21722-1	. . PLATE, RUDDER CONTROL FEEL MECHANISM RETAINER		1
	22	BACN10JD8	. . NUT		1
	23	69-31659-1	. . DRUM, RUDDER CONTROL FEEL MECHANISM CABLE (OPTIONAL 65-41460-1)		1
	23	65-41460-1	. . DRUM, RUDDER CONTROL FEEL MECHANISM CABLE (OPTIONAL TO 69-31659-1)		1
	24	66-21721-1	. . RETAINER, RUDDER CONTROL FEEL MECHANISM BEARING		1
	25	BACB10BW16	. . BEARING		1
	30	BACB3NF4D46	. . BOLT.		1
	31	BACN10JD4	. . NUT		1
R R	31A	65-39753-7	. . LEVER ASSY, (USED ON 65-39753-1). (OPTIONAL 65-39753-8)	0150	1
R R	31A	65-39753-8	. . LEVER ASSY, (USED ON 65-39753-1). (OPTIONAL TO 65-39753-7)	0150	1
	31A	65-39753-11	. . LEVER ASSY, RUDDER CONTROL FEEL MECHANISM (USED ON 65-39753-9)		1
	31B	BACB30NF6D13	. . . BOLT, (USED ON 65-39753-7 AND -11).		1
R	31B	BACB30NF6D12	. . . BOLT, (USED ON 65-39753-8).	0150	1
	31C	AN960PD616	. . . WASHER.		1
	31D	BACN10JD6	. . . NUT		1
	31E	BACB10BN06P	. . . BEARING		1
R R	32	65-39738-1	. . . LEVER ASSY, RUDDER FEEL MECHANISM (USED ON. 65-39753-7)	0150	1
R R	32	65-40333-1	. . . LEVER ASSY, RUDDER FEEL MECHANISM (USED ON. 65-39753-8)	0150	1
	32	65-39738-4	. . . LEVER ASSY, (USED ON 65-39753-11)		1
	33	66-21707-1	. . . . SPACER, RUDDER CONTROL FEEL MECHANISM SPRING.		1
	34	BACB10A689	. . . . BEARING		1
R R	35	65-40333-2	. . . . LEVER, RUDDER FEEL MECHANISM (USED ON 65-40333-1)	0150	1
R R	35	65-39738-2	. . . . LEVER, RUDDER FEEL MECHANISM (USED ON 65-39738-1)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	148 35	65-39738-5	. . . . LEVER, (USED ON 65-39738-4)		1
	41	BAC830NF4-6	. . BOLT.		1
	41A	NAS43HT4-15	. . SPACER.		1
	42	AN960PD416L	. . WASHER.		1
	43	BACN10JC4	. . NUT		1
R	47A	65-39753-5	. . ARM ASSY, FOLLOWER (USED ON 65-39753-1) (OPTIONAL 65-39753-6)	0150	1
R	47A	65-39753-6	. . ARM ASSY, FOLLOWER (USED ON 65-39753-1) (OPTIONAL TO 65-39753-5)	0150	1
	47A	65-39753-10	. . ARM ASSY, (USED ON 65-39753-9).		1
	47B	BAC830NF6D15	. . . BOLT, (USED ON 65-39753-5 AND -10).		1
R	47B	BAC830NF6D13	. . . BOLT, (USED ON 65-39753-6).	0150	1
	47C	NAS1197-616L	. . . WASHER, (USED ON 65-39753-5 AND -10).		2
R	47D	AN960PD616	. . . WASHER, (USED ON 65-39753-6).	0150	1
	47E	BACN10JD6	. . . NUT		1
	47F	BAC810BN06P	. . . BEARING		1
R	48	65-41473-1	. . . ARM ASSY, POWER TRIM (USED ON 65-39753-5)	0150	1
R	48	65-40332-1	. . . ARM ASSY, POWER TRIM (USED ON 65-39753-6)	0150	1
	48	65-41473-4	. . . ARM ASSY, POWER TRIM (USED ON 65-39753-10).		1
	49	BAC810A671	. . . . BEARING		1
R	50	65-40332-2	. . . . ARM, (USED ON 65-40332-1)	0150	1
R	50	65-41473-2	. . . . ARM, (USED ON 65-41473-1)	0150	1
	50	65-41473-5	. . . . ARM, (USED ON 65-41473-4)		1
	50A	NAS623-3-12	. . . SCREW, (USED ON 65-39753-5 AND -10)		1
R	50A	NAS623-3-10	. . . SCREW, (USED ON 65-39753-6)	0150	1
	50B	NAS1197-10	. . . WASHER, (USED ON 65-39753-5 AND -10).		2
R	50C	AN960PD10L	. . . WASHER, (USED ON 65-39753-6).	0150	1
	50D	BACN10JC3	. . . NUT		1
	50E	66-21700-2	. . SPRING, TENSION		1
	50F	66-21728-1	. . SPACER, SPRING.		1
	51	BAC810BY4	. . BEARING		1
	52	AN320-12	. . NUT		1
	52A	AN960-1216	. . WASHER.		AR
	52B	66-21754-1	. . SHIM, RUDDER FEEL MECHANISM LAMINATED		AR
	53	NAS43DD16-9	. . SPACER.		1
	54	BAC810BW16	. . BEARING		3
	55	69-31909-1	. . SHAFT, RUDDER CONTROL FEEL MECHANISM.		1
	56	65-46614-1	. . CARRIAGE ASSY (OPTIONAL 65-39753-3)		1
	56	65-39753-3	. . CARRIAGE ASSY, RUDDER CONTROL FEEL MECHANISM. (OPTIONAL TO 65-46614-1)		1
	56A	69-31660-1	. . . GEAR.		1
	57	65-39585-1	. . SHAFT, RUDDER CONTROL FEEL MECHANISM.		1
	58	65-39753-2	. . CAM ASSY, RUDDER CONTROL FEEL MECHANISM (OPTIONAL 65-39753-4)		1
	58	65-39753-4	. . CAM ASSY, RUDDER CONTROL FEEL MECHANISM (OPTIONAL TO 65-39753-2)		1
	58A	MS20426-6	. . . RIVET		2
	58B	BACB30GW6-26	. . . BOLT, (USED ON 65-39753-2).		3
	58C	69-31221-1	. . . CAM, RUDDER FEEL MECHANISM (USED ON 65-39753-2)		1
	58D	69-31220-1	. . . CAM, RUDDER FEEL MECHANISM (USED ON 65-39753-2)		1
	58E	69-31940-1	. . . ARM, RUDDER FEEL MECHANISM.		1
	58F	65-40331-1	. . . CARRIER ASSY, RUDDER CONTROL FEEL MECHANISM CAM (USED ON 65-39753-2)		1
	58G	65-41459-1	. . . CAM ASSY, RUDDER CONTROL FEEL MECHANISM (USED ON 65-39753-4)		1
	58H	BAC810BW16	. . . . BEARING		1
	59	66-21733-1	. . CAP, RUDDER CONTROL FEEL MECHANISM BEARING.		1
			ATTACHING PARTS		
		NAS1103-6	. . BOLT.		3
		AN960PD10L	. . WASHER.		3
		NAS679A3W	. . NUT		3
			--------*--------		
	59A	BAC810A685	. . BEARING		1
	60	65-40595-1	. . HOUSING ASSY, RUDDER CONTROL FEEL MECHANISM (OPTIONAL 65-41499-1)		1
	60	65-41499-1	. . HOUSING ASSY, RUDDER FEEL MECHANISM (OPTIONAL TO 65-40595-1)		1
	61	BAC810A29DDH	. . . BEARING, (USED ON 65-40595-1)		1
	61	BAC810CF17PP	. . . BEARING, (USED ON 65-41499-1)		1
	62	65-40595-2	. . . HOUSING, RUDDER CONTROL FEEL MECHANISM (USED ON 65-40595-1)		1
	62	65-41499-2	. . . HOUSING, RUDDER FEEL MECHANISM (USED ON 65-41499-1)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
14B 63	69-31982-1	. SUPPORT, RUDDER FEEL MECHANISM.		1
		ATTACHING PARTS		
	BACB30LU5-21	. BOLT.		2
	BACN10JC3	. NUT		2
		-------*-------		
		. FOR REFERENCE TO OTHER FEEL MECHANISM DETAILS, SEE. . NHA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

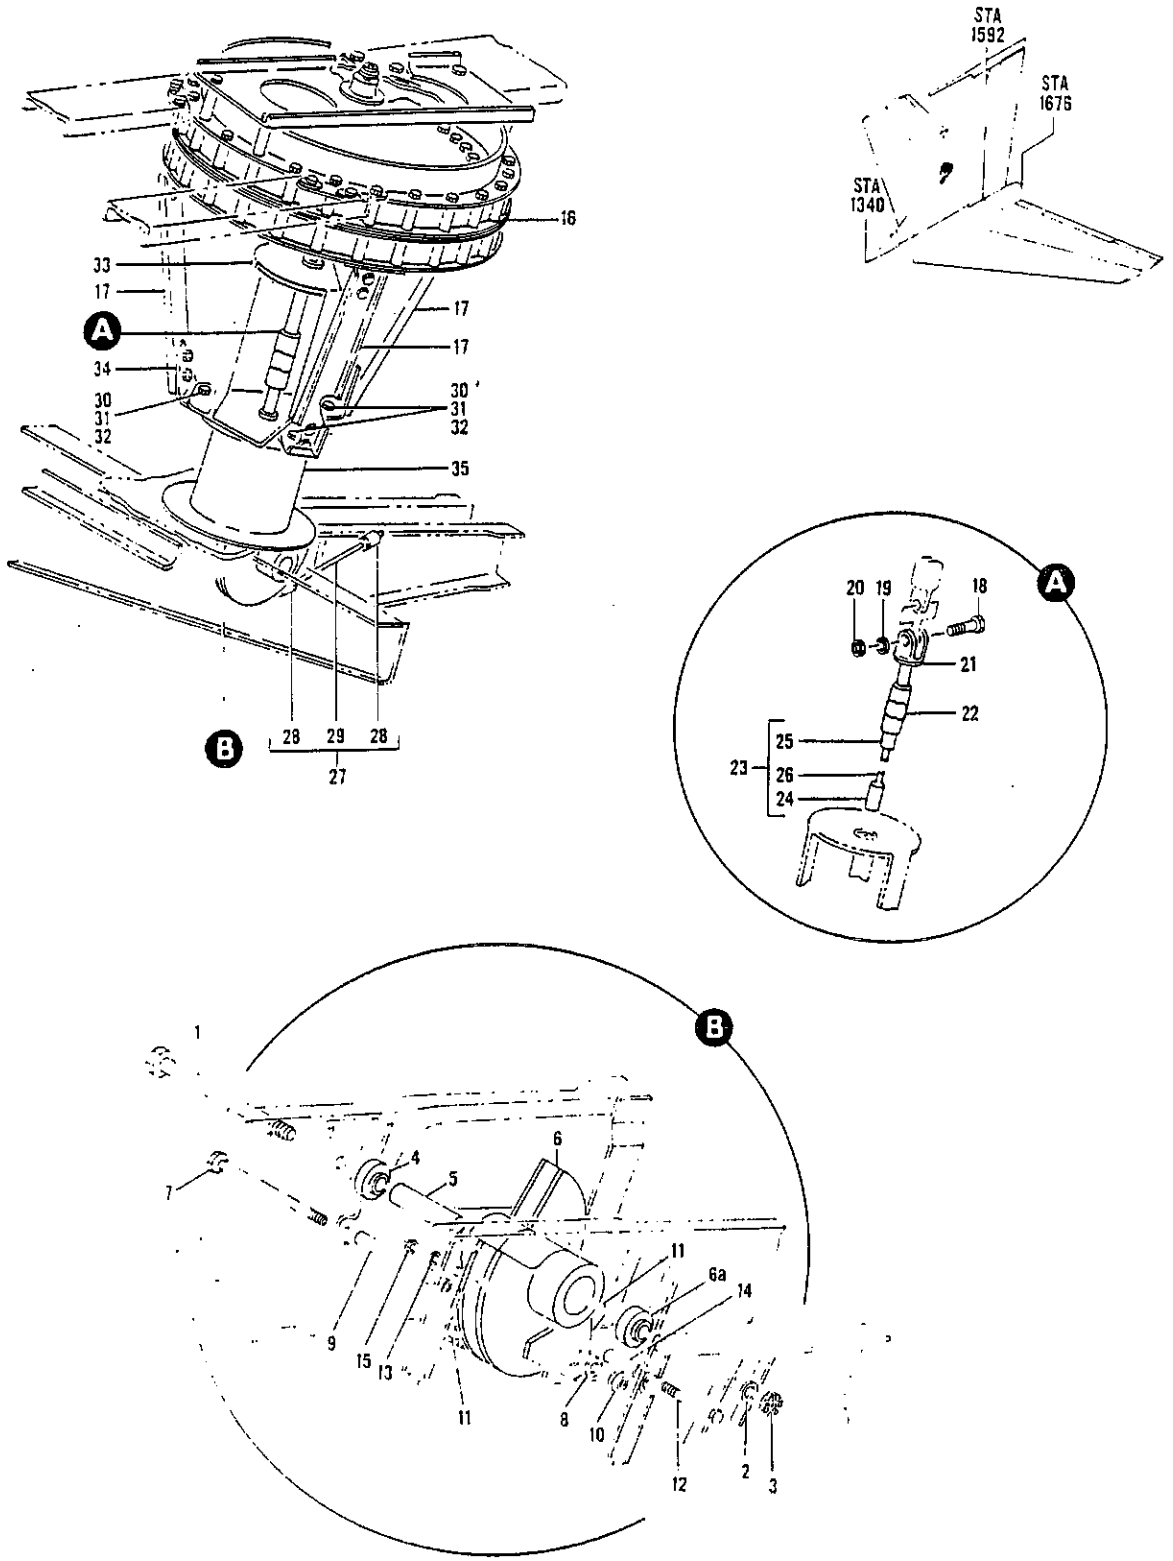
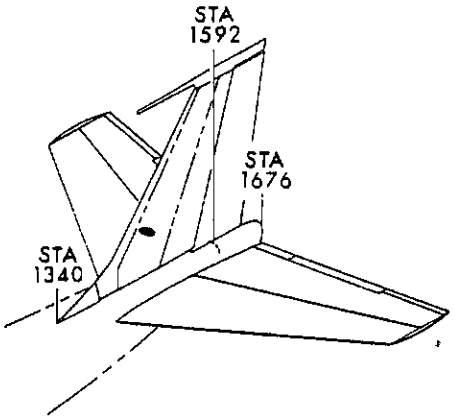


FIGURE 16A. SPRING INSTL, DIRECTIONAL CONTROL O

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	16A	65-8754-61	SPRING INSTL, DIRECTIONAL CONTROL Q (SEE FIG. 14A, ITEM 8)		RF
	1	NAS1105-52DW	. BOLT.		1
	2	AN960D516	. WASHER.		1
	3	AN320-5	. NUT		1
	4	BACB10BX5	. BEARING		1
	5	NAS43DD5-147	. SPACER.		1
	6	65-41637-1	. DRUM ASSY, RUDDER Q SPRING CABLE (OPTIONAL. 69-33119-1 WITH BACB10A683)		1
	6	69-33119-1	. DRUM ASSY, RUDDER Q SPRING CABLE (USED WITH BACB10A683) (OPTIONAL TO 65-41637-1)		1
	6A	BACB10BX5	. BEARING		1
	7	AN3-33A	. BOLT.		1
	8	AN960D10	. WASHER.		1
	9	NAS43DD3-182	. SPACER.		1
	10	NAS679A3W	. NUT		1
R R	11	3-85237	. RETAINER, RUDDER Q SPRING CABLE (OPTIONAL 66-21579-1)	0151	2
R R R	11	66-21579-1	. RETAINER, RUDDER Q SPRING CABLE (OPTIONAL TO 3-85237)	0151	2
R	11	3-85237	. RETAINER, RUDDER Q SPRING CABLE	5299	2
			ATTACHING PARTS		
		AN3-5A	. BOLT.		2
		AN960D10	. WASHER.		2
		BACR10V3	. RETAINER.		2
		BACN10CP3L	. NUT		2
			-------*-------		
	12	AN3-34A	. BOLT.		1
	13	AN960D1016	. WASHER.		1
	14	NAS43DD3-186	. SPACER.		1
	15	NAS679A3W	. NUT		1
R R	16	65-57078-4	. SPRING ASSY, DIRECTIONAL CONTROL Q (SEE FIG. 18). (OPTIONAL TO 65-57078-5)	0150	1
R R R	16	65-57078-5	. SPRING ASSY, DIRECTIONAL CONTROL Q (SEE FIG. 18). (OPTIONAL 65-57078-4)	0150	1
R R	16	65-57078-5	. SPRING ASSY, DIRECTIONAL CONTROL Q. (OPTIONAL TO 65-57078-6) (SEE FIG. 18)	5199	1
R R R	16	65-57078-6	. SPRING ASSY, DIRECTIONAL CONTROL Q. (OPTIONAL 65-57078-5) (SEE FIG. 18)	5199	1
			ATTACHING PARTS		
		AN3-4A	. BOLT.		7
		NAS679A3W	. NUT		3
			-------*-------		
	17	69-11272	. CHANNEL, DIRECTIONAL CONTROL SPRING ACTUATOR.		3
			ATTACHING PARTS		
		AN4-5A	. BOLT.		12
		AN960D416	. WASHER.		12
		NAS679A4W	. NUT		12
			-------*-------		
	18	NAS1104-8DW	. BOLT.		1
	19	AN960D416	. WASHER.		1
	20	AN320-4	. NUT		1
	21	66-21739-1	. TERMINAL, RUDDER Q SPRING		1
	22	MS21251B5S	. TURNBUCKLE.		1
	23	66-21740-1	. CABLE ASSY, RUDDER Q SPRING		1
	24	MS21260S4LH	. . TERMINAL.		1
	25	BACT14A4	. . TERMINAL.		1
	26	66-21740-3	. . CABLE, RUDDER Q SPRING.		1
	27	66-21740-2	. CABLE ASSY, RUDDER Q SPRING		1
	28	BACT14A4	. . TERMINAL.		2
	29	66-21740-4	. . CABLE, RUDDER Q SPRING.		1
	30	NAS1304-7W	. BOLT.		3
	31	AN960D416	. WASHER.		3
	32	NAS679A4W	. NUT		3
	33	69-31992-1	. STOP, RUDDER Q SPRING		1
	34	69-11272-2	. SUPPORT, DIRECTIONAL CONTROL SPRING ACTUATOR MOUNTING		1
	35	69-11271	. BASE, DIRECTIONAL CONTROL Q SPRING ACTUATOR MOUNTING		1
			ATTACHING PARTS		
		AN4-5A	. BOLT.		2
		AN4-6A	. BOLT.		2
		AN960D416	. WASHER.		2
		NAS679A4W	. NUT		2
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE



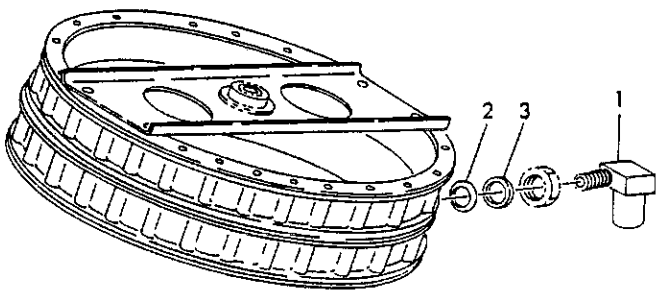


FIGURE 18 SPRING ASSY, DIRECTIONAL CONTROL Q

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R	18	65-57078-4	SPRING ASSY, DIRECTIONAL CONTROL Q (SEE FIG. 16, ITEM 59 AND FIG. 16A, ITEM 16) (OPTIONAL TO 65-57078-5)	0150	RF
R R R		65-57078-5	SPRING ASSY, DIRECTIONAL CONTROL Q (SEE FIG. 16,. . . . ITEM 59 AND FIG. 16A, ITEM 16) (OPTIONAL 65-57078-4)	0150	RF
R R R		65-57078-5	SPRING ASSY, DIRECTIONAL CONTROL Q (SEE FIG. 16, ITEM 59 AND FIG. 16A, ITEM 16) (OPTIONAL TO 65-57078-6)	5199	RF
R R R		65-57078-6	SPRING ASSY, DIRECTIONAL CONTROL Q (SEE FIG. 16, ITEM 59 AND FIG. 16A, ITEM 16) (OPTIONAL 65-57078-5)	5199	RF
	1	66-11118-1	. ELBOW, Q SPRING (USED ON 65-57078-4 AND -5)		1
	2	MS28778-10	. PACKING		1
	3	MS28777-10	. RING.		1
	4	AN6289D10	. NUT		1
	5	BACN10JD5	. NUT		1
	6	AN960-516	. WASHER.		1
	7	66-31018	. SPACER, DIRECTIONAL CONTROL Q SPRING.		1
	8	BACB30NF3-66	. BOLT.		3
	9	BACB30NF3-70	. BOLT.		1
	10	NAS430D3-82	. SPACER.		4
	11	NAS1197-10	. WASHER.		5
	11A	AN960-516	. WASHER.		4
	12	BACN10JC3	. NUT		4
	13	69-11282	. BEAM ASSY, Q SPRING SHAFT SUPPORT		1
	13A	66-10896	. . BEARING ASSY, Q SPRING DIRECTIONAL CONTROL.		1
	13B	BACB10D52	. . . BEARING		1
	13C	66-10896-1	. . . HOUSING, Q SPRING DIRECTIONAL CONTROL BEARING		1
	14	66-31017	. SHAFT, DIRECTIONAL CONTROL Q SPRING		1
	15	6-41019-1	. NUT, SPECIAL.		2
	16	AN6227B10	. PACKING		2
	17	BACB30NF3-46	. BOLT.		6
	17A	BACB30NF3-46	. BOLT.		9
	18	BACB30NF3-50	. BOLT.		3
	19	BACB30NF3-50	. BOLT.		2
	20	NAS1197-10	. WASHER.		25
	21	NAS1197-10L	. WASHER.		20
	22	BACN10JC3	. NUT		20
	23	69-11272-1	. CLIP.		3
	24	6-27058-2	. COVER ASSY, Q SPRING.		1
	25	3-40531-1	. . WASHER, Q SPRING.		1
	26	6-27058-3	. . COVER, Q SPRING		1
	27	66-9383-1	. PLATE, Q SPRING ATTACHMENT.		2
	28	66-9383-2	. PLATE, Q SPRING ATTACHMENT.		1
	29	65-57078-2	. BUFFER, DIRECTIONAL CONTROL Q SPRING (EXTRUSION NO. BAC1521-571 X 2.5 IN. LG)		2
	30	65-17002-3	. RETAINER, DIRECTIONAL CONTROL Q SPRING BUFFER		2
	30A	NAS430D3-3	. SPACER.		4
	31	69-9674	. RING, Q SPRING COVER.		1
R	32	6-27061-6	. BODY, Q SPRING UPPER (USED ON 65-57078-3 AND -4).	0150	1
	32	6-27061-9	. BODY, Q SPRING UPPER (USED ON 65-57078-5)		1
R	33	6-27061-7	. BODY, Q SPRING LOWER (USED ON 65-57078-3 AND -4).	0150	1
	33	6-27061-8	. BODY, Q SPRING LOWER (USED ON 65-57078-5)		1
	34	3-40529-1	. BELLOWS ASSY, Q SPRING (USED ON 65-57078-3, -4, -5)		1
	34A	A546-2	. . BEARING, OILITE BRONZE (V70417) (USED ON. 3-40529-1)		2
	35	NAS221-10	. SCREW		36
	36	AN960D10L	. WASHER.		36
	37	3-59574	. WASHER, Q SPRING SEALING.		36
	38	BACN10JC3	. NUT		36
	39	6-27060-1	. RING, Q SPRING RETAINER		1
	40	6-38462-501	. DIAPHRAGM, Q SPRING (SAME AS 730089 (V70628))		1
	40	730089	. DIAPHRAGM, Q SPRING (V70628) (SAME AS BAC SPEC NO. 6-38462-501)		RF
	41	6-27059-2	. RETAINER ASSY, Q SPRING		1
	42	3-40531-1	. . WASHER, Q SPRING.		1
	43	6-27059-3	. . RETAINER, Q SPRING.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

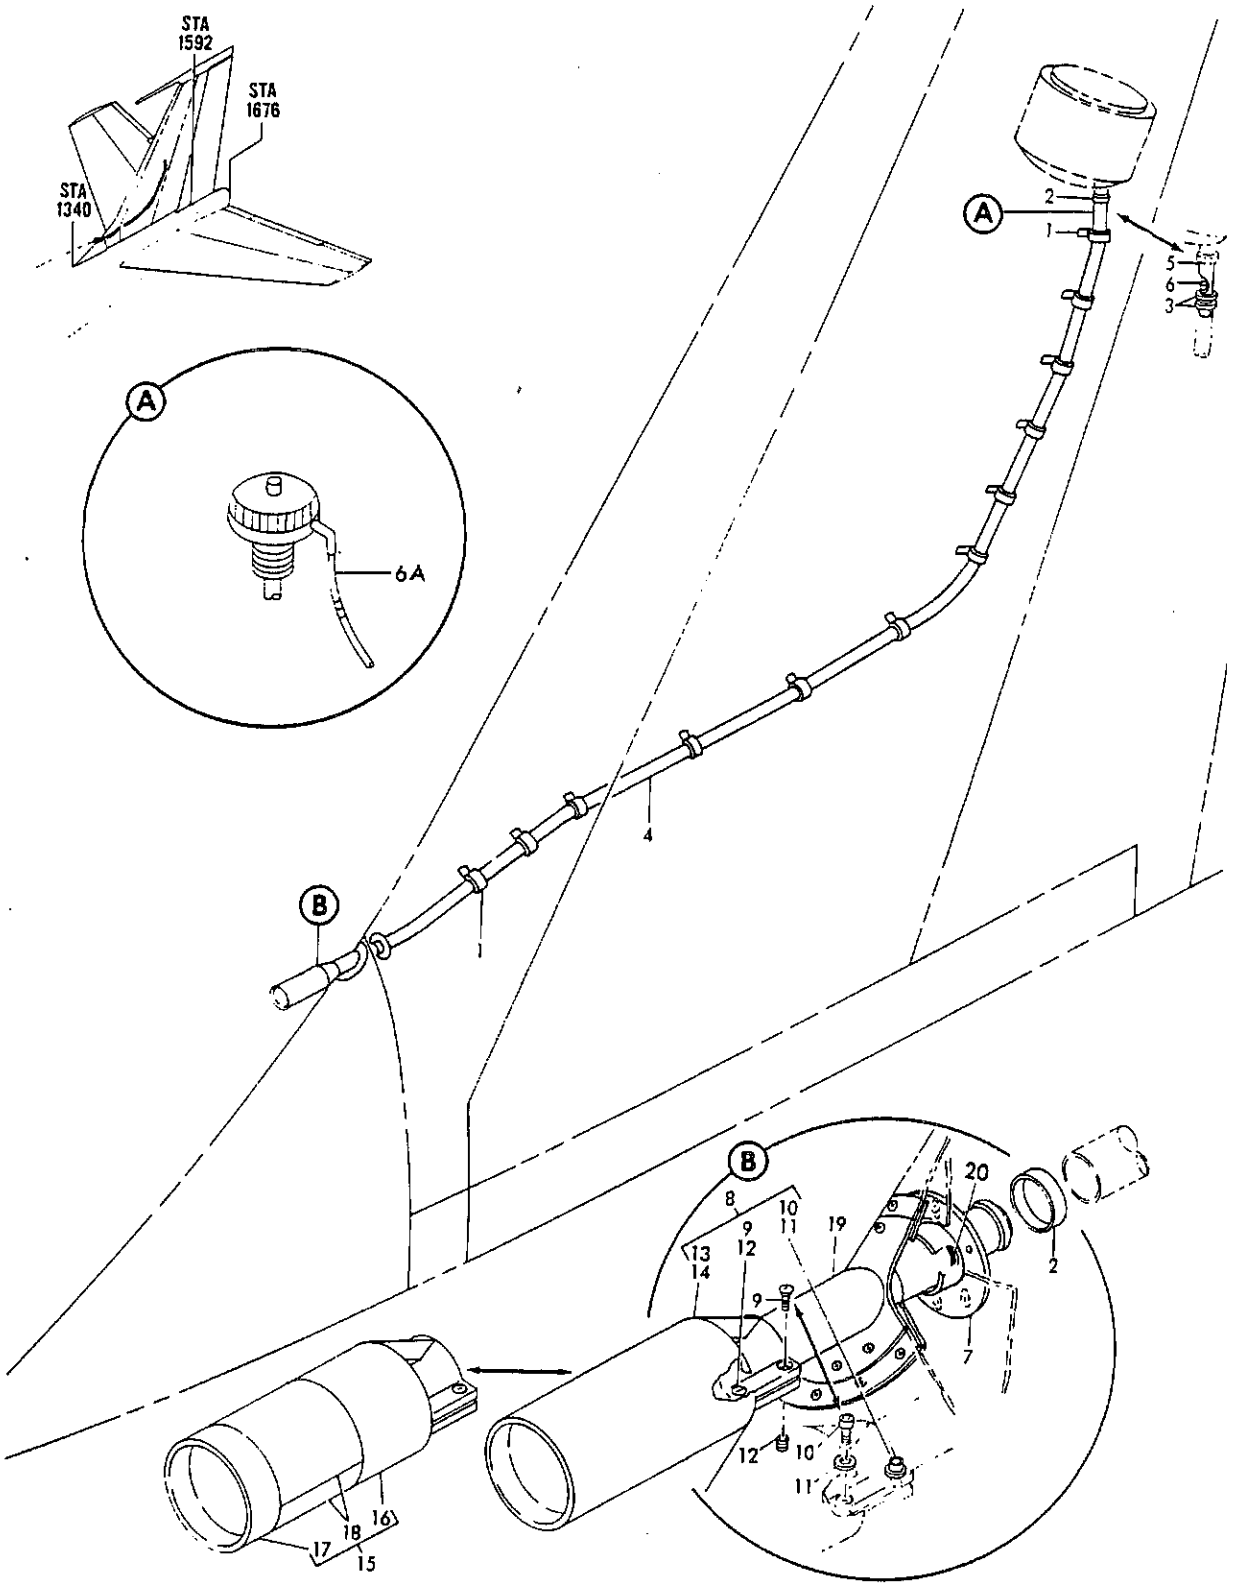


FIGURE 18D. TUBE INSTL, VERTICAL TAIL Q CAN

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
18D	65-8346	TUBE INSTL, VERTICAL TAIL Q CAN (SEE 55-1, FIG. 6, ITEM 36)		RF
1	MS21919DG24	. CLAMP		12
		ATTACHING PARTS		
	AN520R10-7	. SCREW		12
	AN960D10L	. WASHER.		12
	BACN10BY53W	. NUT		12
		-------*-------		
2	AN737TW56	. CLAMP		2
4	65-8346-2	. TUBE.		1
7	69-8869	. FITTING, RUDDER BOOST AIR INTAKE.		1
		ATTACHING PARTS		
	AN520R10-8	. SCREW		6
		-------*-------		
8	69-23014-6	. SHROUD ASSY, RUDDER CONTROL INTAKE. (OPTIONAL 69-23014-4)		1
8	69-23014-4	. SHROUD ASSY, RUDDER CONTROL INTAKE. (OPTIONAL TO 69-23014-6)		1
9	BACB30DP3-2	. . BOLT, (USED ON 65-23014-4).		2
9	MS16998-27	. . SCREW, (USED ON 65-23014-6)		2
12	69-23014-2	. . SLEEVE, STEEL WIRE (ALTERED FROM BACS13W3CN3)		2
13	69-23014-5	. . SHROUD, (USED ON 69-23014-4).		1
14	69-23014-7	. . SHROUD, (USED ON 69-23014-6).		1
19	10-60139	. INTAKE, RUDDER BOOST SPRING AIR		1
		ATTACHING PARTS		
	NAS517-3-2	. SCREW		10
	NAS679A3W	. NUT		10
		-------*-------		
M 19B	22NM107-62	. . NUT, (V72962)		2
M 19C	AN960-6	. . WASHER.		2
M 19D	AN507C1032R7	. . SCREW		7
M 19E	R626-51	. . GASKET, (V97896).		1
M 19F	MS9068-222	. . PACKING		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

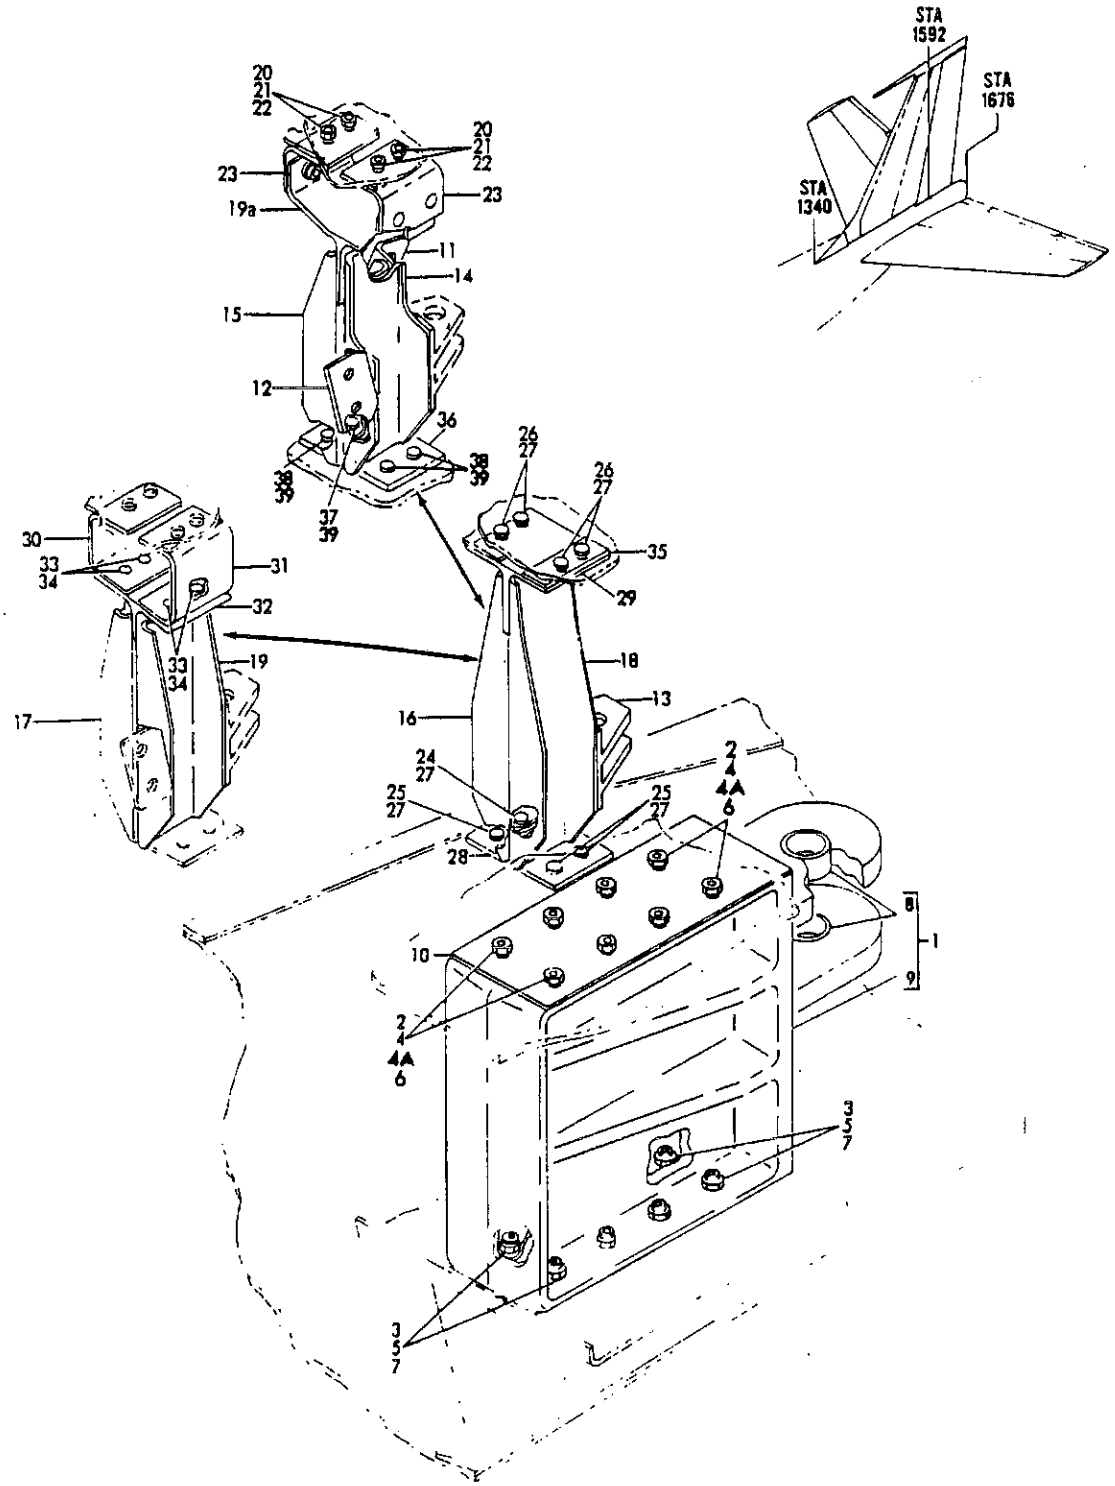


FIGURE 19A. SUPPORT INSTL, RUDDER BOOST

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	19A	65-6404-5	SUPPORT INSTL, RUDDER BOOST (SEE 27-8, FIG. 11, ITEM. 10)		RF
R R	1	65-5939-2	. FITTING ASSY, HYDRAULIC BOOST VERTICAL TAIL SUPPORT (OPTIONAL 65-5939-4)	5199	1
R R	1	65-5939-4	. FITTING ASSY, HYDRAULIC BOOST VERTICAL TAIL SUPPORT (OPTIONAL TO 65-5939-2)	5199	1
R R	1	65-5939-4	. FITTING ASSY, HYDRAULIC BOOST VERTICAL TAIL SUPPORT (ADDED BY SB 3066)	0150	1
R R	1	65-5939	. FITTING ASSY, HYDRAULIC BOOST VERTICAL TAIL SUPPORT (DELETED BY SB 3066)	0150	1
			ATTACHING PARTS		
	2	NAS1105-8DW	. BOLT.		8
	3	NAS1104-6DW	. BOLT.		8
	4	AN960D516L	. WASHER.	0499	8
	4	AN960D516L	. WASHER, (DELETED BY SB 3066).	0103	8
R	4	MS20002C12	. WASHER, (ADDED BY SB 3066).	0150	8
R	4A	AN960D1216	. WASHER, (ADDED BY SB 3066).	0150	8
	5	AN960D416	. WASHER.		8
	6	NAS679A5	. NUT		8
	7	NAS679A4W	. NUT		8
			-------*-------		
R	8	NAS75-12-016	. . BUSHING	0150	2
R	8	69-34905-14	. . BUSHING	5199	2
R	9	65-5939-3	. . FITTING, (USED ON 65-5939-2).	5199	1
R	9	65-5939-5	. . FITTING, (USED ON 65-5939-4).	5199	1
R	9	65-5939-5	. . FITTING, (ADDED BY SB 3066)	0150	1
R	9	65-5939-1	. . FITTING, (DELETED BY SB 3066)	0150	1
	10	BACS40A42-100	. SHIM.		AR

MISSING ITEM NUMBERS ARE NOT APPLICABLE

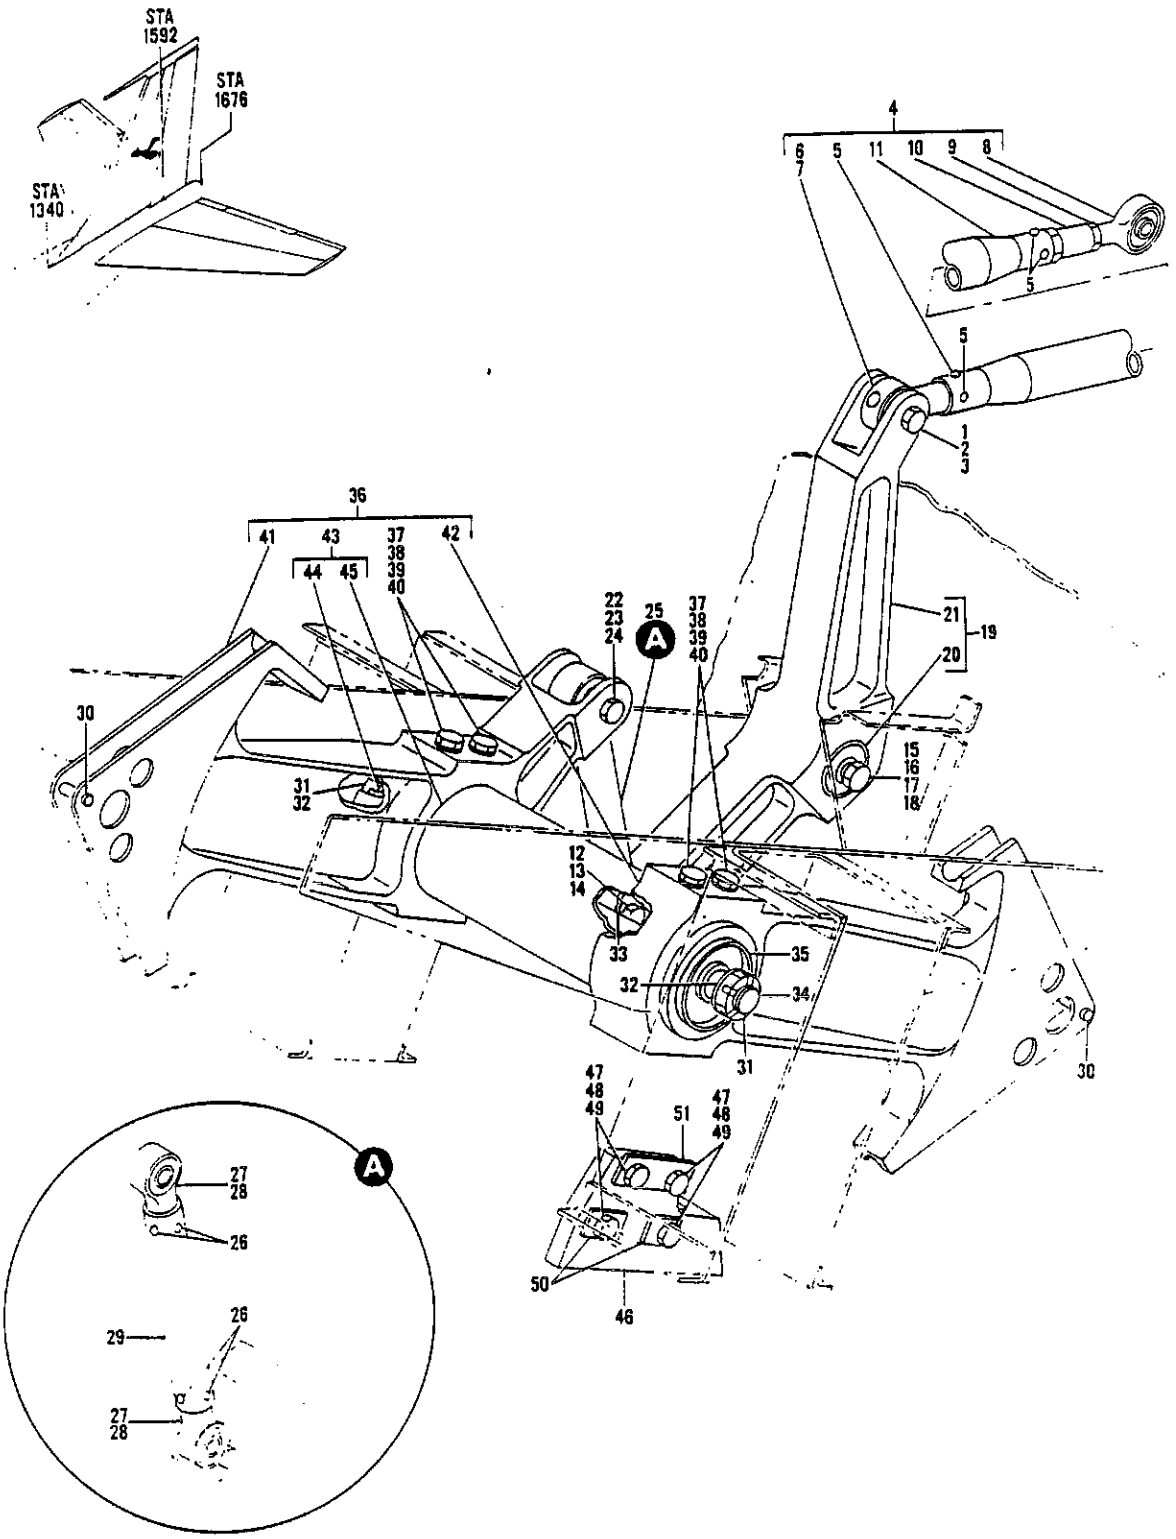


FIGURE 22A. QUADRANT INSTL, RUDDER CONTROL

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	22A	65-38971-1	QUADRANT INSTL, RUDDER CONTROL (SEE FIG. 14A, ITEM 23)	0103	RF
R		65-38971-5	QUADRANT INSTL, RUDDER CONTROL (SEE FIG. 14A, ITEM 23)	0450	RF
R		65-38971-7	QUADRANT INSTL, RUDDER CONTROL (SEE FIG. 14A, ITEM 23)	5199	RF
	1	NAS1104-18D	. BOLT.		1
	2	AN960D416	. WASHER.		1
	3	AN320-5	. NUT		1
	4	69-11275-8	. ROD ASSY, RUDDER CONTROL.		1
	5	MS20470D6	. . RIVET		AR
	6	66-21586-1	. . BEARING ASSY, ROD END		1
	7	BACB10C70	. . . BEARING		1
	8	BACB10C55H	. . BEARING (OPTIONAL GRR4M6-2 (V21335))		1
	8	GRR4M6-2	. . BEARING, (V21335) (OPTIONAL TO BACB10C55H)		1
	9	AN316-6R	. . NUT		1
	10	60-2271-4	. . PLUG, THREADED ROD END.		1
	11	69-11275-9	. . ROD, RUDDER CONTROL		1
	12	NAS1104-18D	. BOLT.		1
	13	AN960D416	. WASHER.		1
	14	AN320-4	. NUT		1
	15	NAS1105-38D	. BOLT.		1
	16	NAS43DD5-60	. SPACER.		1
	17	AN960D516	. WASHER.		1
	18	AN320-5	. NUT		1
R	19	65-41407-1	. BELLCRANK ASSY, AFT	0150	1
R			(OPTIONAL TO 65-41407-4)		
R	19	65-41407-4	. BELLCRANK ASSY, AFT	0150	1
R			(OPTIONAL 65-41407-1)		
R	19	65-41407-4	. BELLCRANK ASSY, AFT	5199	1
	20	BACB10BY5	. . BEARING		1
	21	65-41407-2	. . BELLCRANK, AFT QUADRANT RUDDER (USED ON 65-41407-1)	0103	1
	21	65-41407-5	. . BELLCRANK, (USED ON 65-41407-4)		1
	22	NAS1104-22D	. BOLT.		1
	23	AN960D416	. WASHER.		1
	24	AN320-4	. NUT		1
	25	69-11276-10	. ROD ASSY, RUDDER CONTROL.		1
	26	MS20470D6	. . RIVET		AR
	27	66-21586-1	. . BEARING ASSY, ROD END		2
	28	BACB10C70	. . . BEARING		1
	29	69-11276-11	. . ROD, RUDDER CONTROL		1
	30	BACP18C3-94	. PIN		2
	31	AN320-8	. NUT		2
	32	AN960D816	. WASHER.		2
	33	NAS43DD8-428	. SPACER.		1
	34	6-58986-2001	. SHAFT, ELEVATOR CONTROL		1
	35	BACB10A692	. BEARING		1
	36	65-38971-2	. QUADRANT ASSY, RUDDER CONTROL	0103	1
	36	65-38971-4	. QUADRANT ASSY, RUDDER CONTROL	0499	1
	37	NAS1104-50	. . BOLT.		4
	38	NAS1197-416L	. . WASHER.		4
	39	NAS1197-416	. . WASHER.		4
	40	NAS679A4W	. . NUT		4
	41	65-40161-1	. . QUADRANT, RUDDER CONTROL. (OPTIONAL 65-40161-3)	0103	1
	41	65-40161-3	. . QUADRANT, RUDDER CONTROL. (OPTIONAL TO 65-40161-1)	0103	1
	41	65-40161-5	. . QUADRANT.	0499	1
	42	9-47391-3002	. . QUADRANT, RUDDER CONTROL.	0103	1
	42	9-47391-3005	. . QUADRANT.	0499	1
	43	66-4678-4	. . SHAFT ASSY, RUDDER CONTROL QUADRANT		1
	44	BACB10A692	. . . BEARING		1
	45	66-4678-1	. . . SHAFT, RUDDER CONTROL QUADRANT.		1
	46	69-31187-1	. STOP, AFT RUDDER QUADRANT		1
			ATTACHING PARTS		
	47	AN4-10A	. BOLT.		4
	48	AN960D416	. WASHER.		4
	49	NAS679A4W	. NUT		4
			-------*-------		
	50	50-3361-98	. FILLER, RADIUS.		2
	51	50-3361-3063	. FILLER, RADIUS.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

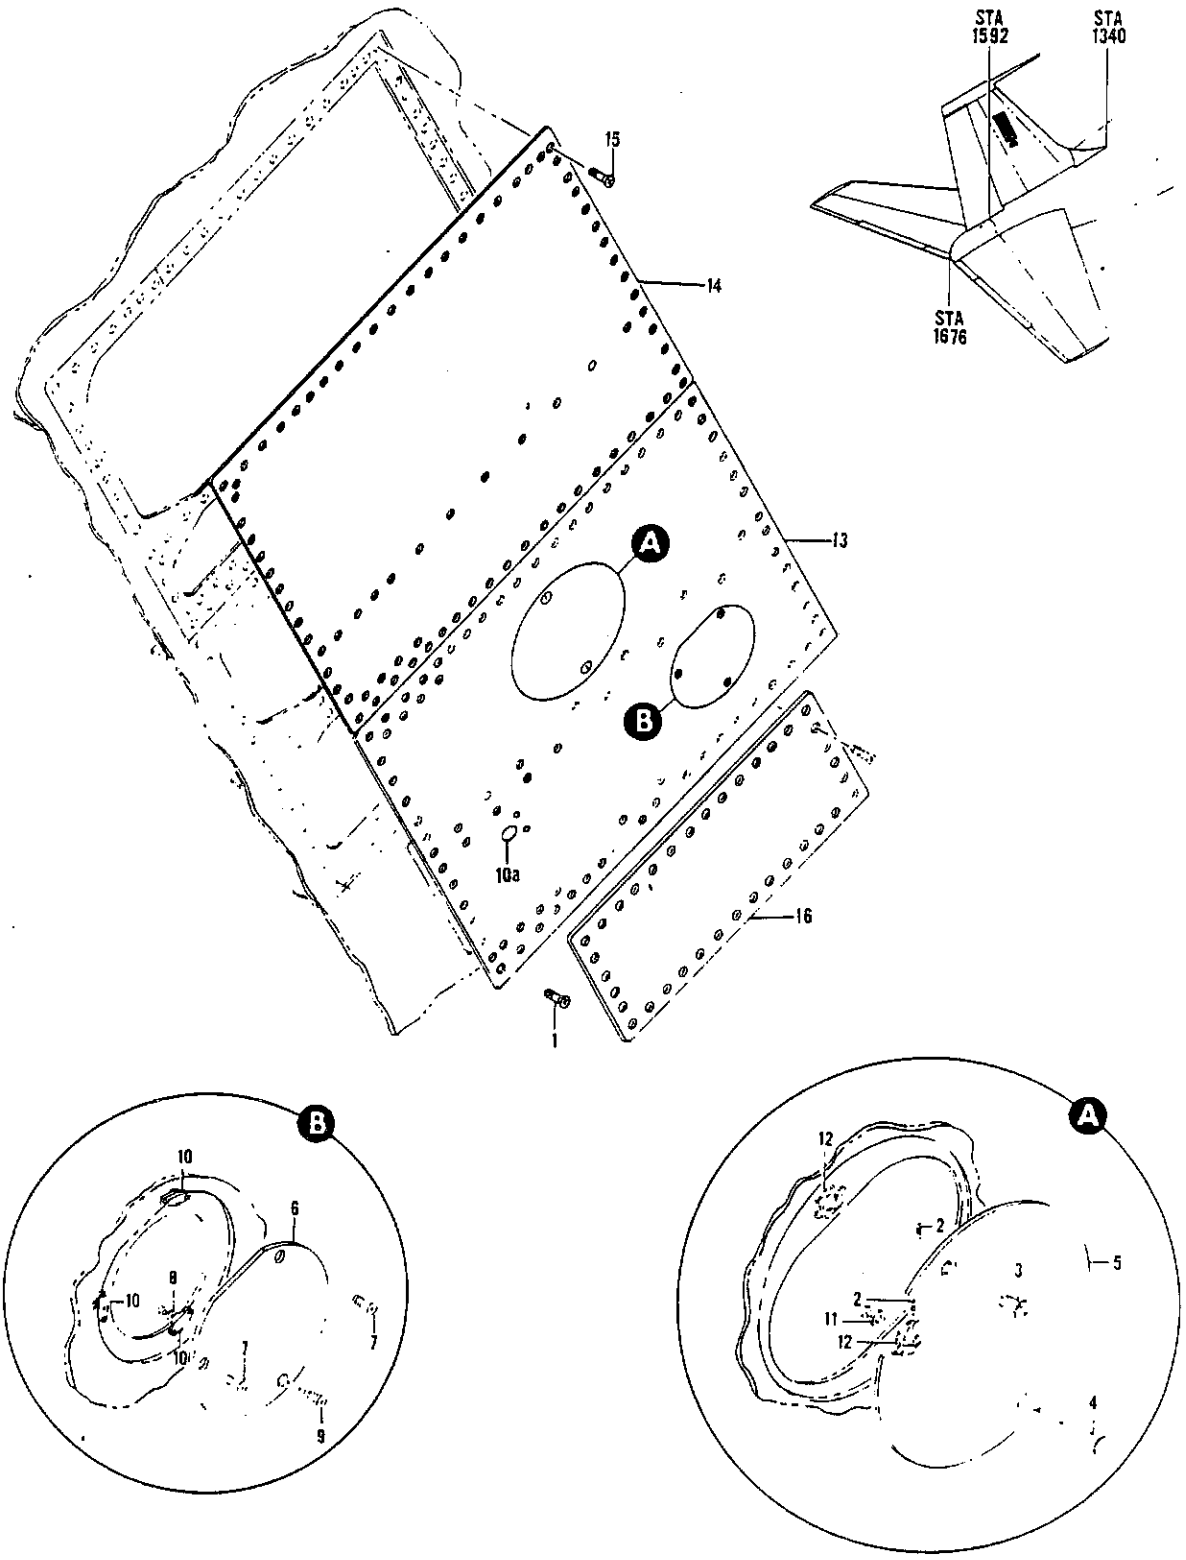


FIGURE 24. DOOR INSTL, VERTICAL TAIL RUDDER

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
24	65-7277	DOOR INSTL, VERTICAL TAIL RUDDER CONTROLS (SEE 27-8,. . FIG. 11, ITEM 6)		RF
	65-5021-3000	. DOOR ASSY, VERTICAL TAIL RUDDER CONTROL ACCESS. . . .		1
		ATTACHING PARTS		
1	NAS517-4-8	. SCREW		87
		-------*-------		
	65-5021-3002	. . DOOR ASSY, VERTICAL TAIL RUDDER CONTROL ACCESS. . .		1
2	BACP18A5	. . . PIN		2
3	BACS21B5PH16	. . . STUD.		1
4	BACS21C160-8	. . . STUD.		1
5	65-5021-2007	. . . DOOR, VERTICAL TAIL RUDDER CONTROL ACCESS		1
6	65-5021-2005	. . DOOR, VERTICAL TAIL RUDDER CONTROL ACCESS		1
		ATTACHING PARTS		
7	NAS517-3-1	. . SCREW		2
8	BACW10B3	. . WASHER.		1
9	BACS12AZ1	. . SCREW		1
10	NAS686A3	. . NUTPLATE.		3
		-------*-------		
10A	KM713-12-115A	. . DOOR, ACCESS (V71286)		1
		ATTACHING PARTS		
	MS20426D3	. . RIVET		2
		-------*-------		
11	BACW10B1	. . WASHER.		1
12	BACS20A5P	. . SPRING.		2
13	65-5021-3001	. . SKIN ASSY, VERTICAL TAIL RUDDER CONTROL ACCESS DOOR		1
14	65-8342	. DOOR ASSY, VERTICAL TAIL Q-SPRING ACCESS.		1
		ATTACHING PARTS		
15	NAS517-4-8	. SCREW		83
		-------*-------		
16	65-7277-4	. DOOR, VERTICAL TAIL RUDDER CONTROLS ACCESS.		1
		ATTACHING PARTS		
	NAS517-4-8	. SCREW		36
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

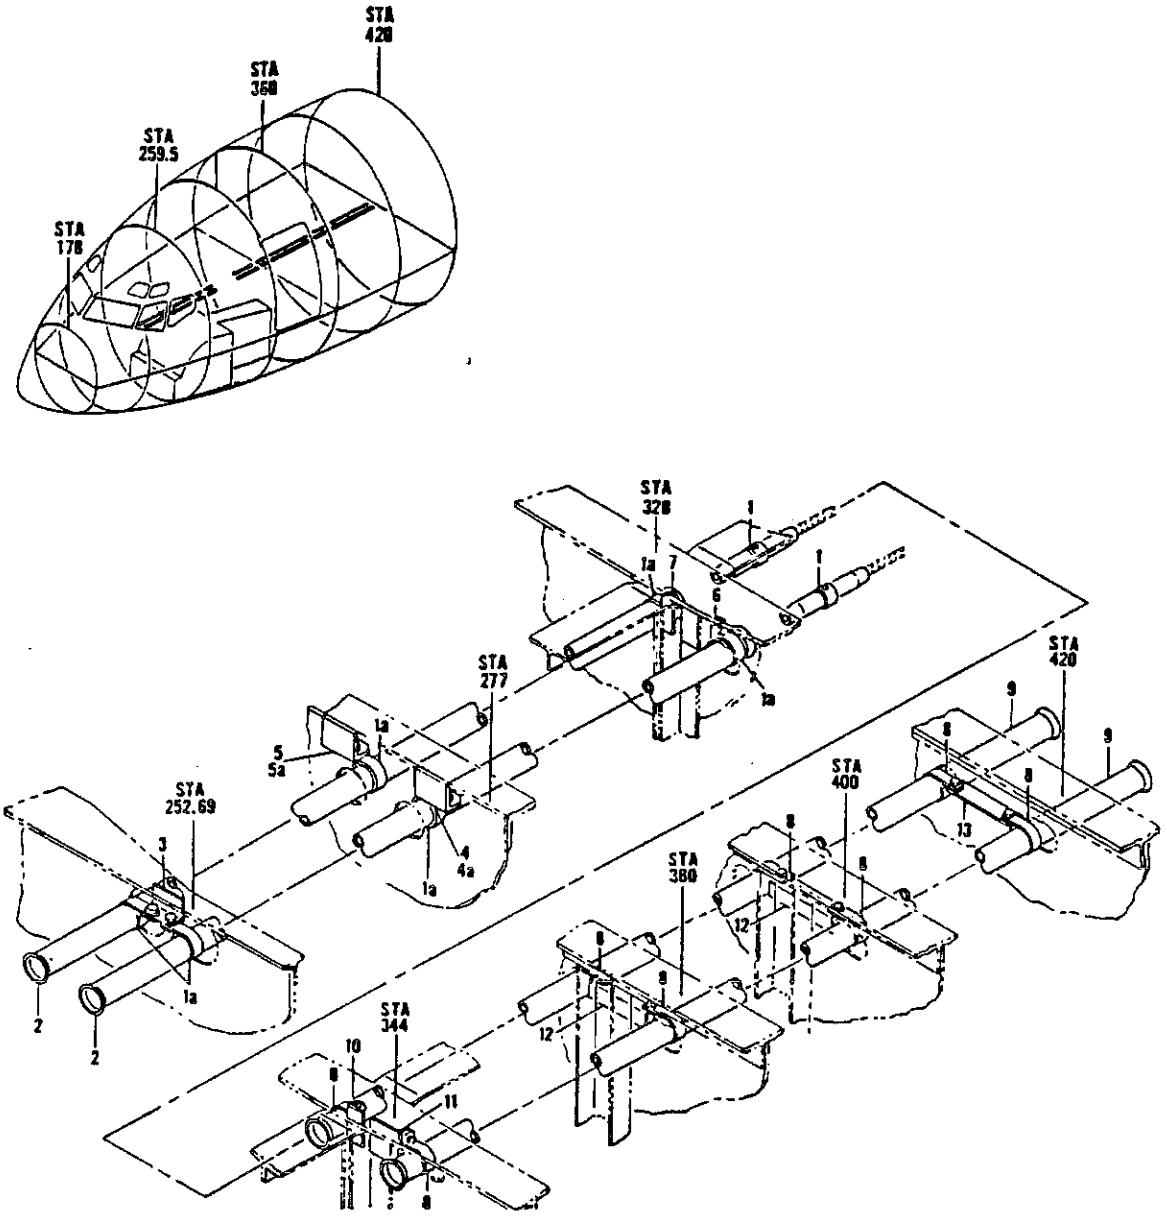


FIGURE 26. CONTROL INSTL, SECTION 51 RUDDER TRIM

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
26	50-8706-51	CONTROL INSTL, SECTION 51 RUDDER TRIM (SEE 53-1, FIG. 1, ITEM 6, 53-1, FIG. 6, ITEM 7)	5199	RF
1	AN155-16L	. BARREL.	5199	2
	65-12280	. GUARD INSTL, RUDDER TRIM CHAIN.	5199	1
1A	AN742D16	. . CLAMP	5199	6
		ATTACHING PARTS		
	AN3-3A	. . BOLT.	5199	6
		-------*-------		
2	69-11148	. . GUARD, RUDDER TRIM CHAIN.	5199	2
3	65-12239	. . BRACKET ASSY, RUDDER TRIM CHAIN GUARD	5199	1
4	65-12280-5	. . BRACKET ASSY, RUDDER TRIM CHAIN GUARD SUPPORT	5199	1
4A	65-12280-7	. . . BRACKET, RUDDER TRIM CHAIN GUARD SUPPORT.	5199	1
5	65-12280-6	. . BRACKET ASSY, RUDDER TRIM CHAIN GUARD SUPPORT	5199	1
5A	65-12280-8	. . . BRACKET, RUDDER TRIM CHAIN GUARD SUPPORT.	5199	1
6	65-12239-8	. . BRACKET ASSY, RUDDER TRIM CHAIN GUARD	5199	1
7	65-12239-10	. . BRACKET ASSY, RUDDER TRIM CHAIN GUARD	5199	1
	65-12280-1	. GUARD INSTL, RUDDER TRIM CHAIN.	5199	1
8	AN742D16	. . CLAMP	5199	8
		ATTACHING PARTS		
	AN3-3A	. . BOLT.	5199	8
		-------*-------		
9	69-11148	. . GUARD, RUDDER TRIM CHAIN.	5199	2
10	65-12239-6	. . BRACKET ASSY, RUDDER TRIM CHAIN GUARD	5199	1
11	65-12239-12	. . BRACKET ASSY, RUDDER TRIM CHAIN GUARD	5199	1
12	65-12239-14	. . BRACKET ASSY, RUDDER TRIM CHAIN GUARD	5199	2
13	65-12239-16	. . BRACKET ASSY, RUDDER TRIM CHAIN GUARD	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

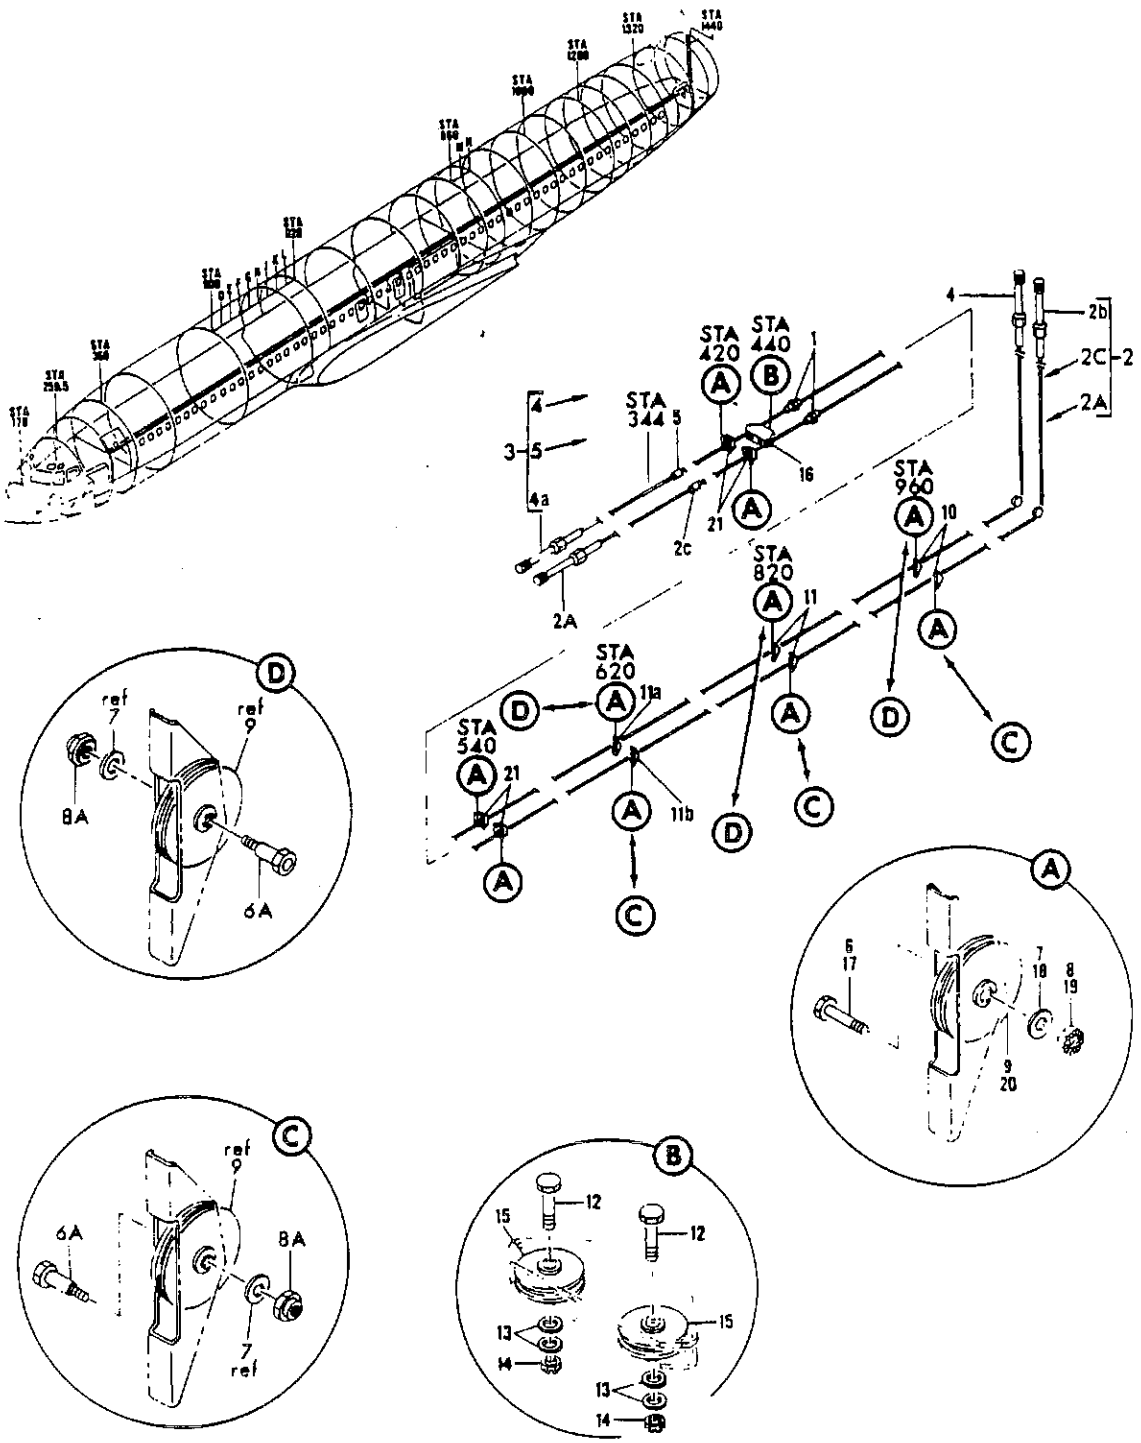


FIGURE 27. CONTROL INSTL, SECTION 53 RUDDER TRIM

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
27	50-8706-353	CONTROL INSTL, SECTION 53 RUDDER TRIM (SEE 53-1, FIG. 2, ITEM 2)		RF
2	65-12235-7	. CABLE ASSY, RUDDER TRIM		1
2A	AN669L3LH	. . TERMINAL.		1
2B	AN669L3RH	. . TERMINAL.		1
2C	65-12234-3	. . CABLE ASSY, RUDDER TRIM LOCKCLAD.		1
3	65-12235-6	. CABLE ASSY, RUDDER TRIM		1
4	AN669L3LH	. . TERMINAL.		1
4A	AN669L3RH	. . TERMINAL.		1
5	65-12234-3	. . CABLE ASSY, RUDDER TRIM LOCKCLAD.		1
	50-8723-14	. PULLEY INSTL, STATION 620 CABLE IDLER RUDDER TRIM		1
	50-8247-5	. PULLEY INSTL, STATION 820 CABLE IDLER RUDDER TRIM		1
	50-8736-5	. PULLEY INSTL, STATION 960 CABLE IDLER RUDDER TRIM		1
6	NAS1105-11DW	. . BOLT, (USED ON 65-12332, -1, -2).		2
6A	BACB30NF5-11	. . BOLT, (USED ON 50-8247-5, 50-8736-5 AND 50-8723-14)		2
7	AN960D516	. . WASHER, (USED ON 65-12332, -1, -2, 50-8723-14,. 50-8247-5 AND 50-8736-5)		2
8	AN320-5	. . NUT, (USED ON 65-12332, -1, -2)		2
8A	BACN10JC5	. . NUT, (USED ON 50-8247-5, 50-8736-5 AND. 50-8723-14)		2
9	AN220-1	. . PULLEY, (USED ON 65-12332, -1, -2, 50-8723-14,. 50-8247-5 AND 50-8736-5)		2
10	90-7852	. . BRACKET ASSY, IDLER PULLEY CONTROL (USED ON 50-8736-5 AND 65-12332-2)		2
11	60-3106	. . BRACKET ASSY, IDLER PULLEY CONTROL (USED ON 50-8247-5 AND 65-12332-1)		2
11A	60-3106-2000	. . BRACKET ASSY, IDLER PULLEY CONTROL (USED ON 50-8723-14)		1
11B	66-3950-2	. . BRACKET ASSY, IDLER PULLEY CONTROL (USED ON 50-8723-14)		1
	65-11964	. BRACKET INSTL, STATION 440 RUDDER TRIM PULLEY		1
12	NAS1105-11DW	. . BOLT.		2
13	AN960D516	. . WASHER.		4
14	AN320-5	. . NUT		2
15	MS20220-1	. . PULLEY.		2
16	66-23410-1	. . BRACKET ASSY, RUDDER TRIM		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

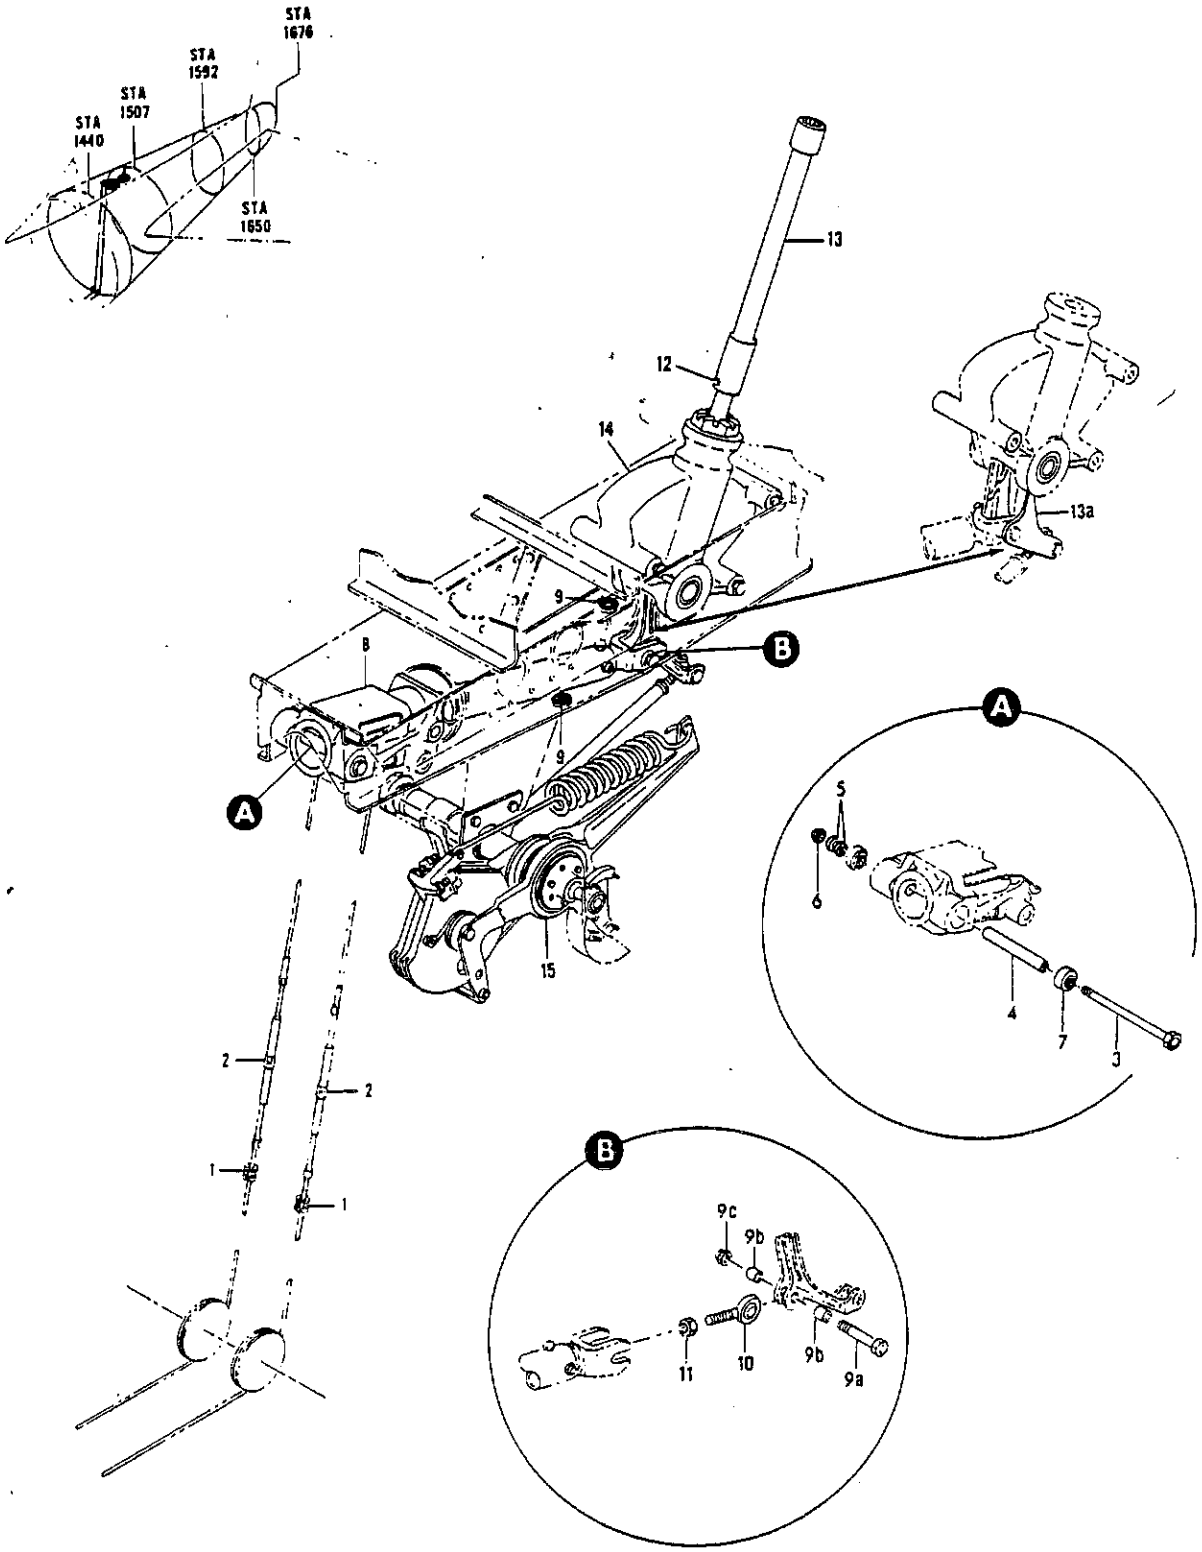


FIGURE 28A. CONTROL INSTL, SECTION 58 RUDDER TRIM

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	28A	50-8706-158	CONTROL INSTL, SECTION 58 RUDDER TRIM (SEE 53-1, FIG. 4, ITEM 4)		RF
	1	3-27673	. STOP, 3/32 DIA CABLE.		2
	2	AN155-16L	. BARREL.		2
		65-46071	. GEAR BOX INSTL, STATION 1505.87 RUDDER TRIM		1
	3	NAS1104-72DW	. . BOLT.		1
	4	NAS42DD8-208	. . SPACER.		1
	5	AN960D416	. . WASHER.		2
	6	AN320-4	. . NUT		1
	7	AN200KP4	. . BEARING		1
R	8	65-74045-6	. . ACTUATOR ASSY, RUDDER TRIM CONTROL (SEE FIG. 50).	0150	1
R	8	65-74045-9	. . ACTUATOR ASSY, RUDDER TRIM CONTROL (SEE FIG. 50).	5199	1
	9	BACG20H3N	. . GROMMET		2
	9A	BACB30NF4D-24	. . BOLT.		1
	9B	NAS43DD4-25	. . SPACER.		2
	9C	BACN10JD104	. . NUT		1
	10	BACB10C182	. . BEARING		1
	11	AN316-6R	. . NUT		1
	12	MS20392-2C33	. . PIN		1
	13	65-65096	. . TUBE, RUDDER TRIM CONNECTING SPLINE (OPTIONAL 69-30094)		1
	13	69-30094	. . TUBE, RUDDER TRIM CONNECTING SPLINE (OPTIONAL TO 65-65096)		1
R	13A	69-12310	. . CRANK, CENTERING SPRING MECHANISM (USED WITH 65-46075-2)	0150	1
R			ATTACHING PARTS		
R		AN4-12A	. . BOLT.	0150	1
R		AN960D416	. . WASHER.	0150	1
R		NAS679A4W	. . NUT	0150	1
			-------*-------		
R	14	65-46075-3	. . GEAR BOX ASSY, (SEE FIG. 51). (OPTIONAL 65-46075-2 WITH 69-12310)	0150	1
R	14	65-46075-4	. . GEAR BOX ASSY, (SEE FIG. 51).	5199	1
R	14	65-46075-2	. . GEAR BOX ASSY, (USED WITH 69-12310) (SEE FIG. 51) (OPTIONAL TO 65-46075-3)	0150	1
R			ATTACHING PARTS		
		AN4-47A	. . BOLT.		3
		AN960D416	. . WASHER.		6
		NAS679A4W	. . NUT		3
			-------*-------		
	15	65-40218-3	. GEAR BOX INSTL, POWER (SEE FIG. 32A).		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

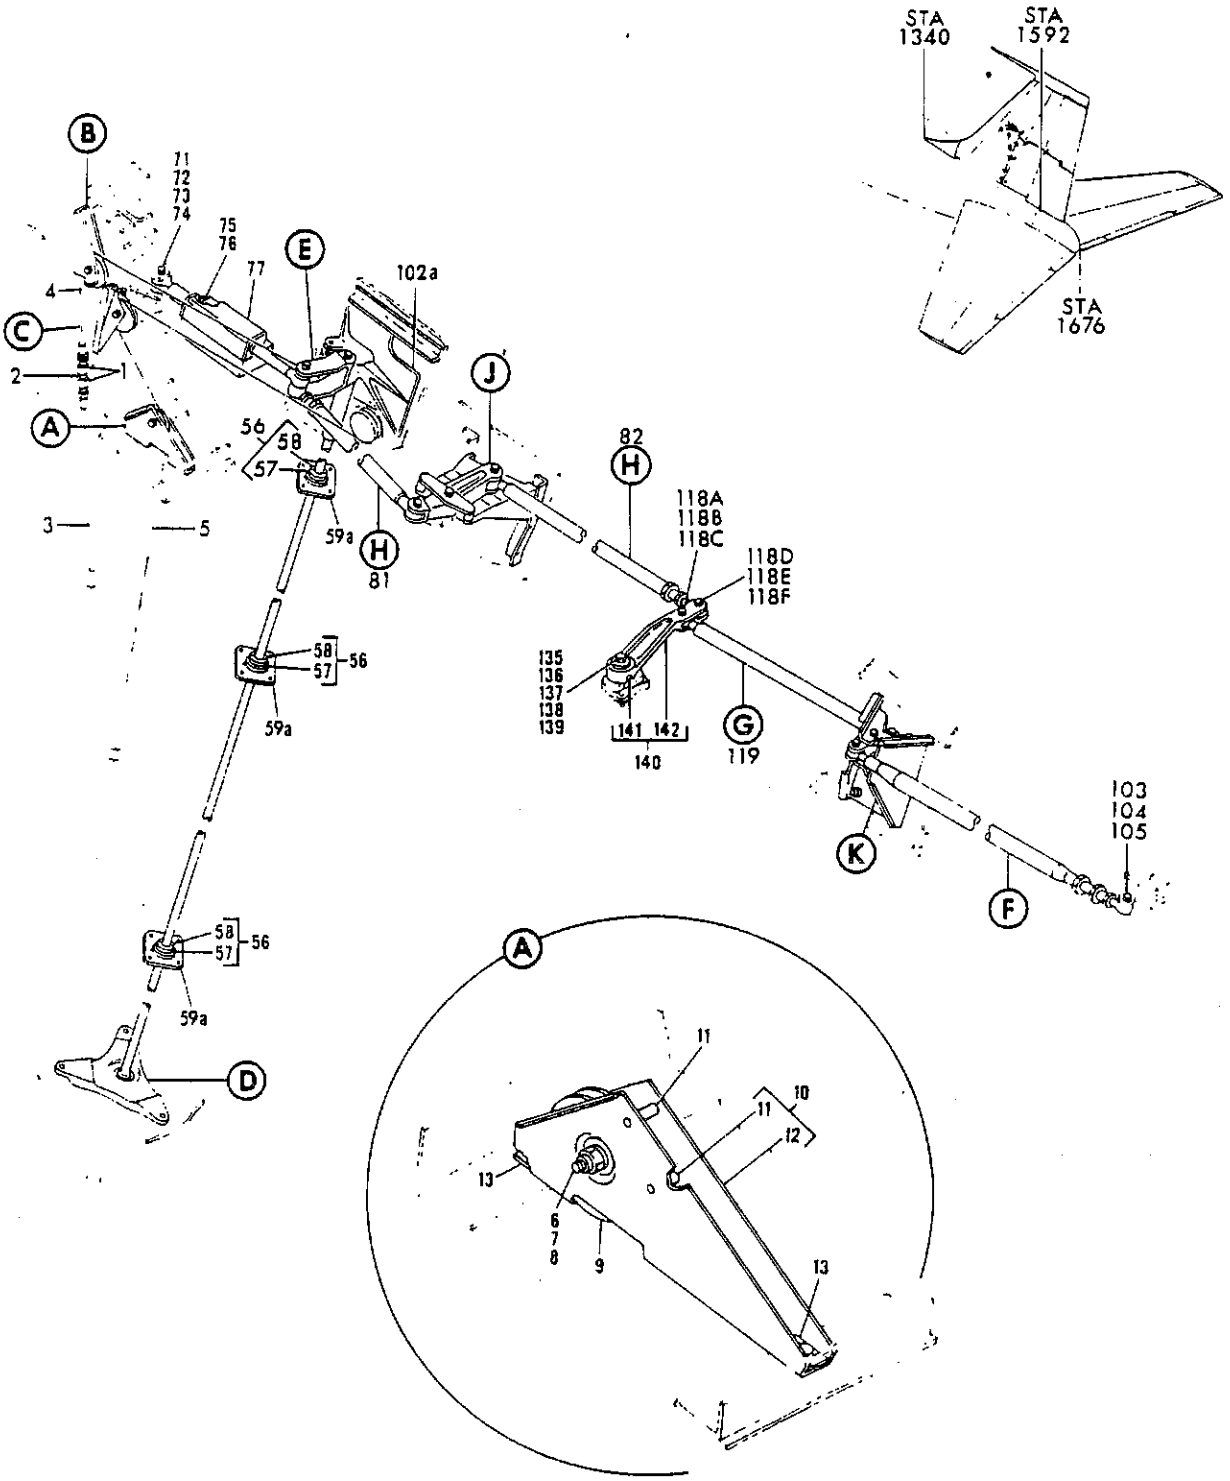


FIGURE 30A. CONTROL INSTL, SECTIONS 86 AND 88 RUDDER TRIM (SHEET 1)

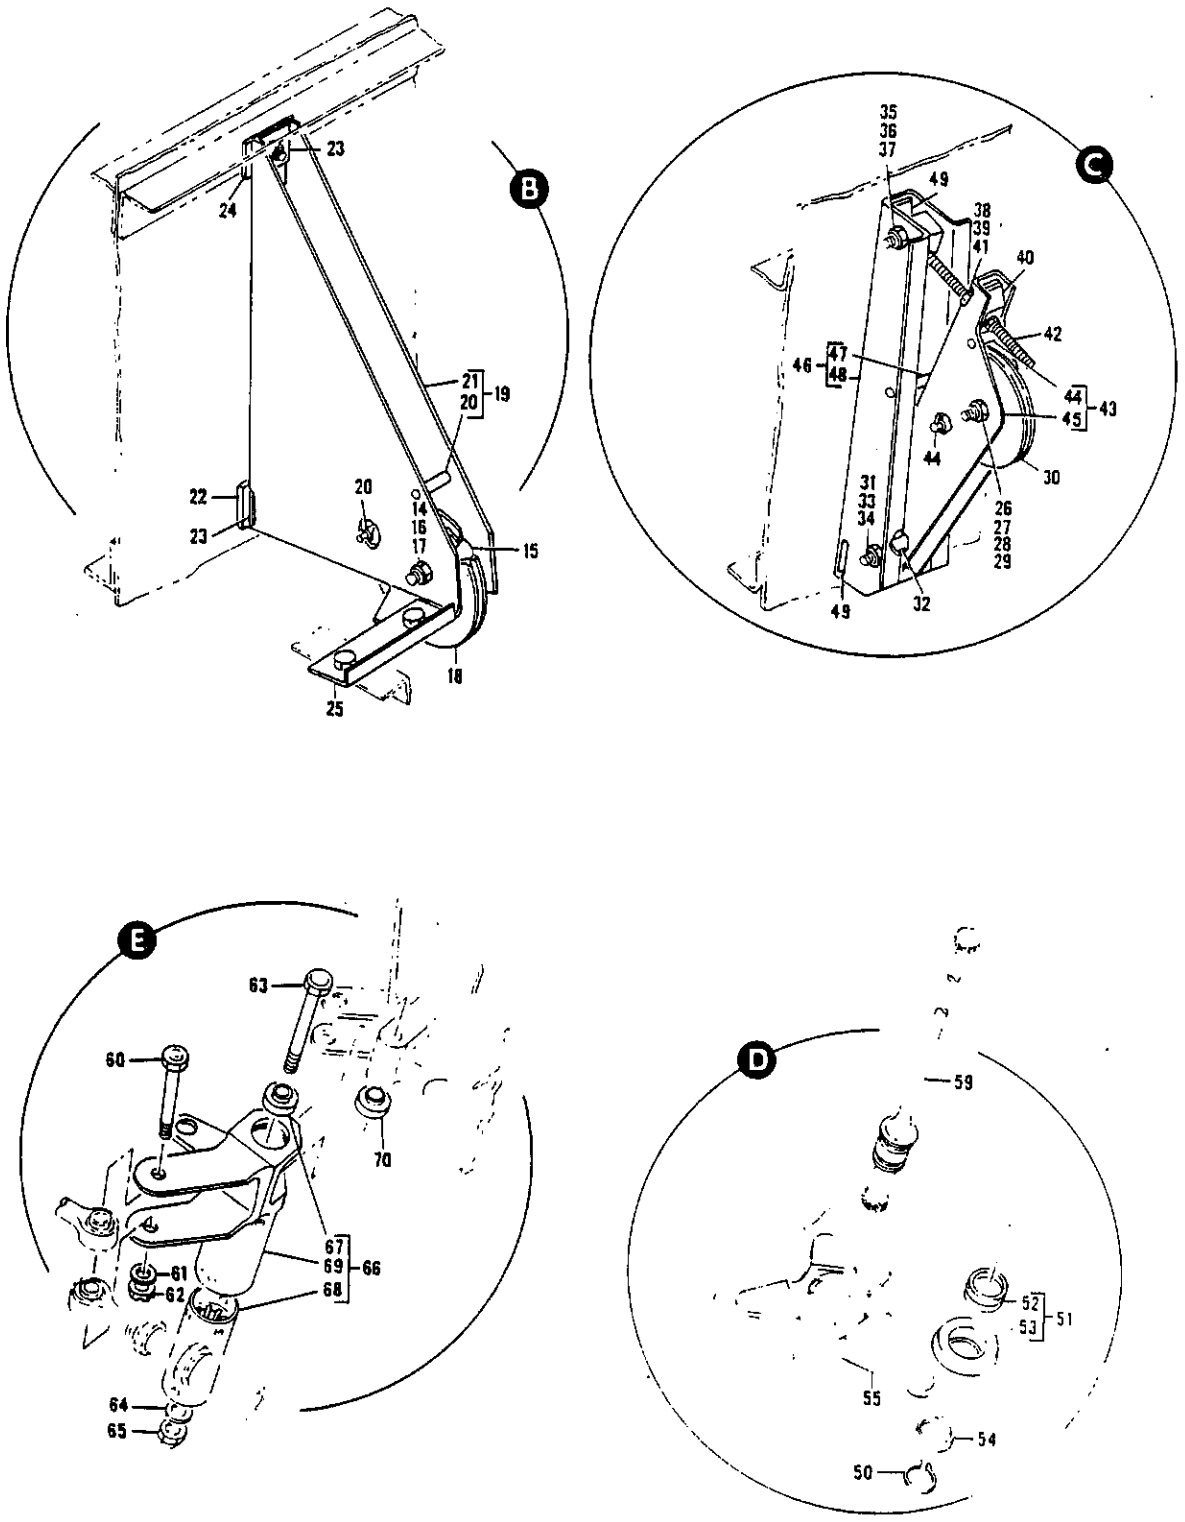


FIGURE 30A. CONTROL INSTL. SECTIONS 86 AND 88 RUDDER TRIM (SHEET 2)

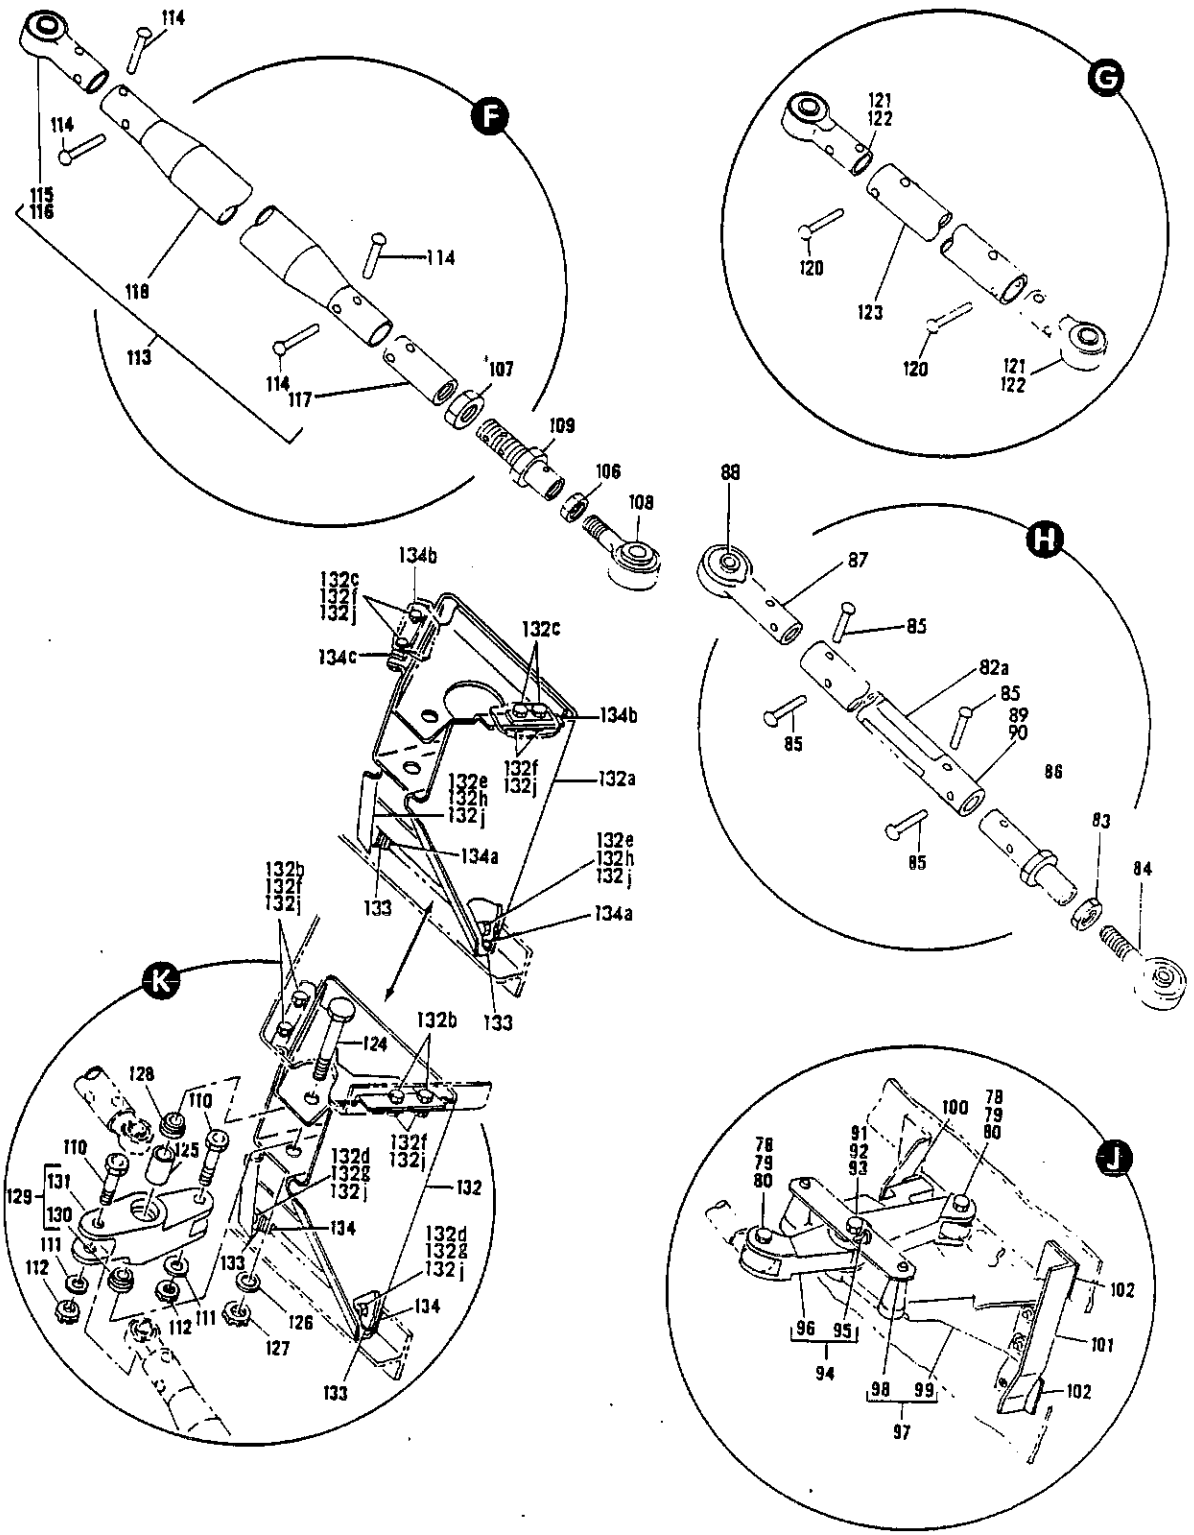


FIGURE 30A. CONTROL INSTL, SECTION 86 AND 88 RUDDER TRIM (SHEET 3)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
30A		CONTROL INSTL, SECTIONS 86 AND 88 RUDDER TRIM		
	50-8706-186	. CONTROL INSTL, SECTION 86 RUDDER TRIM (SEE 55-1, FIG. 2, ITEM 47)		RF
1	BACC15AJ16L	. . CLIP.		2
2	MS21251B3L	. . TURNBUCKLE.		1
3	BACC13AM3D1273	. . CABLE ASSY.		1
	NAS650L3LH	. . . TERMINAL.		1
	BACT14A3	. . . TERMINAL.		1
4	BACC13AM3E0610	. . CABLE ASSY.		1
	NAS650L3RH	. . . TERMINAL.		1
	BACT14A3	. . . TERMINAL.		1
5	BACC13G321-1917	. . CABLE ASSY.		1
	BACT14A3	. . . TERMINAL.		2
	65-40338-1	. . BRACKET INSTL, RUDDER TRIM PULLEY		1
6	NAS1104-10DW	. . . BOLT.		1
7	AN960D416	. . . WASHER.		1
8	AN320-4	. . . NUT		1
9	MS20219-4	. . . PULLEY.		1
10	69-31924-2	. . . BRACKET ASSY, RUDDER TRIM PULLEY. ATTACHING PARTS		1
	NAS1304-3W	. . . BOLT.		2
	AN960D416	. . . WASHER.		2
	NAS679A4W	. . . NUT		2
		-------*-------		
11	NAS42DD4-38	. . . . SPACER.		2
12	69-31924-1	. . . . BRACKET, RUDDER TRIM PULLEY		1
13	50-3361-3103	. . . FILLER, CONTROLS RADIUS		2
	65-40338-3	. . BRACKET INSTL, RUDDER TRIM PULLEY		1
14	NAS1104-17DW	. . . BOLT.		1
15	NAS43DD4-32	. . . SPACER.		1
16	AN960D416	. . . WASHER.		1
17	AN320-4	. . . NUT		1
18	MS20219-4	. . . PULLEY.		1
19	69-31934-1	. . . BRACKET ASSY, RUDDER TRIM PULLEY. ATTACHING PARTS		1
	NAS1304-7W	. . . BOLT.		2
	AN960D416	. . . WASHER.		2
	NAS679A4W	. . . NUT		2
		-------*-------		
20	NAS42DD4-62	. . . . SPACER.		2
21	69-31934-2	. . . . BRACKET, RUDDER TRIM PULLEY		1
22	50-3361-116	. . . FILLER, CONTROLS RADIUS		1
23	50-3361-3089	. . . FILLER, CONTROLS RADIUS		2
24	50-3361-3054	. . . FILLER, CONTROLS RADIUS		1
25	65-40338-4	. . . CLIP, RUDDER TRIM PULLEY ANGLE. ATTACHING PARTS		1
	NAS1304-3W	. . . BOLT.		2
	AN960D416	. . . WASHER.		2
	NAS679A4W	. . . NUT		2
		-------*-------		
	65-40338-2	. . BRACKET INSTL, RUDDER TRIM PULLEY		1
26	NAS1104-14DW	. . . BOLT.		1
27	NAS43DD4-21	. . . SPACER.		1
28	AN960D416	. . . WASHER.		1
29	AN320-4	. . . NUT		1
30	MS20219-4	. . . PULLEY.		1
31	NAS1104-16DW	. . . BOLT.		1
32	NAS43DD4-49	. . . SPACER.		1
33	AN960D416	. . . WASHER.		1
34	AN320-4	. . . NUT		1
35	NAS1104-13W	. . . BOLT.		1
36	AN960D416	. . . WASHER.		1
37	NAS679A4W	. . . NUT		1
38	NAS679A5W	. . . NUT		1
39	AN960D516	. . . WASHER.		2
40	66-21704-1	. . . SPACER, RUDDER TRIM ADJUSTABLE BRACKET.		1
41	AN316-5	. . . NUT		2
42	66-21703-1	. . . BOLT, RUDDER TRIM ADJUSTABLE BRACKET.		1
43	69-31935-4	. . . BRACKET ASSY, RUDDER TRIM PULLEY.		1
44	NAS42DD4-50	. . . . SPACER.		2
45	69-31935-2	. . . . BRACKET, RUDDER TRIM PULLEY		1
46	69-31935-3	. . . BRACKET ASSY, RUDDER TRIM PULLEY. ATTACHING PARTS		1
	NAS1304-5W	. . . BOLT.		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	30A	AN960D416	. . . WASHER.		2
		NAS679A4W	. . . NUT		2
			-------*-------		
	47	NAS42DD4-56	. . . . SPACER.		1
	48	69-31935-1	. . . . BRACKET, RUDDER TRIM PULLEY		1
	49	50-3361-2029	. . . FILLER, CONTROLS RADIUS		2
		65-46070	. . SPRING INSTL, RUDDER TRIM		1
	50	NAS670-87	. . . RING.		1
	51	66-24035	. . . BUSHING ASSY, RUDDER TRIM SELF ALIGNING		1
	52	BACB10A28DD	. . . . BEARING		1
	53	66-24035-1	. . . . BUSHING, RUDDER TRIM SELF ALIGNING.		1
	54	NAS43-14-11	. . . SPACER.		1
	55	65-46073	. . . BRACKET, LOWER. (OPTIONAL TO 65-57028)		1
	55	65-57028	. . . BRACKET, LOWER. (OPTIONAL 65-46073)		1
	56	66-24031	. . . BUSHING ASSY, RUDDER TRIM		3
	57	66-24031-2	. . . . BUSHING, RUDDER TRIM (MATCHED PART ORDER. ASSEMBLY ONLY)		1
	58	66-24031-1	. . . . BUSHING, RUDDER TRIM (MATCHED PART ORDER. ASSEMBLY ONLY)		1
	59	69-34010	. . . BAR, RUDDER TRIM TORSION.		1
		65-40147-1	. . CRANK AND DAMPER INSTL, RUDDER TRIM CONTROL		1
	60	NAS1104-26D	. . . BOLT.		1
	61	AN960PD416	. . . WASHER.		1
	62	BACN10JD104	. . . NUT		1
	63	NAS1104-29	. . . BOLT.		1
	64	AN960PD416	. . . WASHER.		1
	65	BACN10JC4	. . . NUT		1
R	66	65-40137-1	. . . CRANK ASSY, RUDDER TRIM (USED ON 65-40147-2).	0150	1
R	66	65-40137-3	. . . CRANK ASSY, RUDDER TRIM (USED ON 65-40147-3).	5199	1
	67	BACB10A661	. . . . BEARING		1
	68	66-21094	. . . . SPLINE, RUDDER TRIM CRANK		1
R	69	65-40137-2	. . . . CRANK, RUDDER TRIM (USED ON 65-40137-1)	0150	1
R	69	65-40137-4	. . . . CRANK, (USED ON 65-40137-3)	5199	1
	70	BACB10BX4	. . . BEARING		1
	71	NAS1104-13D	. . . BOLT.		1
	72	63-9683	. . . SPACER, RUDDER TRIM		2
	73	AN960PD416	. . . WASHER.		1
	74	BACN10JD104	. . . NUT		1
	75	MS21902D4	. . . UNION		1
	76	NAS1612-4	. . . PACKING		1
	77	65-8353-7	. . . DAMPER ASSY, TAB.		1
			. . . . FLIGHT CONTROL, (SEE FIG. 52)		
			. . . . REQUIRED PLACARDS, (SEE 11-2, FIG. 211)		
		65-38982-3	. . LINKAGE INSTL, RUDDER CONTROL TRIM.		1
	78	NAS1104-16DW	. . . BOLT.		2
	79	AN960D416	. . . WASHER.		2
	80	AN320-4	. . . NUT		2
	81	69-11425-10	. . . ROD ASSY, RUDDER CONTROL TRIM		1
	82	69-11425-12	. . . ROD ASSY.	0399	1
	82	69-11425-6	. . . ROD ASSY, (DELETED BY SB 3089).	0102	1
	82	69-11425-6	. . . ROD ASSY, (REWORKED BY SB 3089) (MAY USE. 69-11425-12 AFTER SB 3089 INCORPORATION)	0102	1
	82A	BAC27CCT10	. . . . MARKER-ALUMINUM FOIL, CAUTION INSTRUCTIONS.	0399	1
	82A	BAC27CCT10	. . . . MARKER-ALUMINUM FOIL, CAUTION INSTRUCTIONS. (ADDED BY SB 3089)	0102	1
	83	AN316-6R	. . . . NUT		1
	84	BACB10C182H	. . . . BEARING, (USED ON 69-11425-10).		1
	84	ST4C	. . . . BEARING, (ADDED BY SB 3089) (USED ON. 69-11425-12)	0102	1
	84	BACB10C182H	. . . . BEARING, (DELETED BY SB 3089) (USED ON. 69-11425-6)	0102	1
	84	SM4-6P-4	. . . . BEARING, (V77896) (USED ON 69-11425-12)	0399	1
	85	AN470D6	. . . . RIVET		4
	86	60-2271-1	. . . . PLUG, ROD END THREADED (USED ON 69-11425-10).		1
	86	60-2271	. . . . PLUG, END THREADED (USED ON 69-11425-6 AND -12)		1
	87	66-21586-1	. . . . BEARING ASSY, ROD END		1
	88	BACB10C70	. . . . BEARING		1
	89	69-11425-9	. . . . ROD, RUDDER CONTROL TRIM (USED ON 69-11425-10)		1
	90	69-11425-8	. . . . ROD, (DELETED BY SB 3089) (USED ON. 69-11425-6)	0102	1
	90	69-11425-11	. . . . ROD, (USED ON 69-11425-12).	0399	1
	90	69-11425-11	. . . . ROD, (ADDED BY SB 3089) (USED ON 69-11425-12)	0102	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	30A 91	NAS1104-27DW	. . . BOLT.		1
	92	AN960D416	. . . WASHER.		1
	93	AN320-4	. . . NUT		1
R	94	65-38596-4	. . . BELLCRANK ASSY, RUDDER TRIM	5199	1
R	94	65-38596-4	. . . BELLCRANK ASSY, RUDDER TRIM.	0150	1
R			(OPTIONAL 65-38596-1)		
R	94	65-38596-1	. . . BELLCRANK ASSY, RUDDER TRIM	0150	1
R			(OPTIONAL TO 65-38596-4)		
	95	BACB10CG4A	. . . . BEARING		1
R	96	65-38596-2	. . . . CRANK, RUDDER TRIM (USED ON 65-38596-1)	0150	1
	96	65-38596-5	. . . . CRANK, RUDDER TRIM (USED ON 65-38596-4)		1
	97	65-38946-1	. . . BRACKET ASSY, MANUAL RUDDER SYSTEM SUPPORT.		1
			ATTACHING PARTS		
		AN4-12A	. . . BOLT.		2
		AN4-7A	. . . BOLT.		2
		AN960D416	. . . WASHER.		2
		NAS687A4	. . . NUT		2
		NAS679A4W	. . . NUT		2
			-------*-------		
	98	66-21420-1	. . . . PLATE, RUDDER TRIM RETAINING.		1
			ATTACHING PARTS		
		BACB30GP6-27	. . . . BOLT.		2
			-------*-------		
	99	65-38946-2	. . . . BRACKET, MANUAL RUDDER SYSTEM SUPPORT		1
	100	66-21420-2	. . . PLATE, RUDDER TRIM RETAINING.		1
	101	69-31182-2	. . . ANGLE, MANUAL RUDDER SYSTEM SUPPORT		1
			ATTACHING PARTS		
		NAS517-3-5	. . . BOLT.		4
			-------*-------		
	102	69-31182-4	. . . FILLER, MANUAL RUDDER SYSTEM SUPPORT ANGLE RADIUS		2
		50-8706-188	. CONTROL INSTL, SECTION 88 RUDDER TRIM (SEE 27-8,		RF
			FIG. 3, ITEM 51B AND FIG. 3A, ITEM 67)		
		65-38982-4	. . LINKAGE INSTL, RUDDER CONTROL TRIM.		1
	103	BACB30NF4-18D	. . . BOLT.		1
	104	AN960D416	. . . WASHER.		1
	105	BACN10JD14	. . . NUT		1
	106	AN316-6R	. . . NUT		1
	107	AN316-8R	. . . NUT		1
	108	BACB10C55H	. . . BEARING		1
	109	69-11754	. . . PLUG, SPOILER CONTROL ROD		1
	110	BACB30NF4-15D	. . . BOLT.		2
	111	NAS1197-416	. . . WASHER.		2
	112	BACN10JD14	. . . NUT		2
	113	69-11772-12	. . . ROD ASSY, ADJUSTABLE CONTROL.		1
	114	MS20470D6	. . . . RIVET		4
	115	66-21586-1	. . . . BEARING ASSY, ROD END		1
	116	BACB10C70	. . . . . BEARING		1
	117	69-11753	. . . . PLUG, SPOILER CONTROL ROD THREADED.		1
	118	69-11772-13	. . . . ROD, ADJUSTABLE CONTROL		1
	118A	BACB30NF4-14D	. . . BOLT.		1
	118B	NAS1197-416	. . . WASHER.		1
	118C	BACN10JD14	. . . NUT		1
	118D	BACB30NF4-14D	. . . BOLT.		1
	118E	NAS1197-416	. . . WASHER.		1
	118F	BACN10JD14	. . . NUT		1
	119	69-11276-8	. . . ROD ASSY, RUDDER CONTROL.		1
	120	MS20470D	. . . . RIVET		4
	121	66-21586-1	. . . . BEARING ASSY, ROD END		2
	122	BACB10C70	. . . . . BEARING		2
	123	69-11276-9	. . . . ROD, RUDDER CONTROL		1
	124	BACB30NF5-25D	. . . BOLT.		1
	125	NAS430D5-56	. . . SPACER.		1
	126	AN960D516	. . . WASHER.		1
	127	BACN10JD15	. . . NUT		1
	128	BACB10BX5	. . . BEARING		1
	129	65-38989-1	. . . CRANK ASSY, IDLER		1
			(OPTIONAL 65-38989-4)		
	129	65-38989-4	. . . CRANK ASSY, IDLER		1
			(OPTIONAL TO 65-38989-1)		
			(OPTIONAL 65-38989-503)		
	129	65-38989-503	. . . CRANK ASSY, IDLER		1
			(OPTIONAL TO 65-38989-4)		
	130	BACB10A683	. . . . BEARING		1
	131	65-38989-2	. . . . CRANK, RUDDER TRIM IDLER (USED ON 65-38989-1)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
30A 131	65-38989-5	. . . . CRANK, RUDDER TRIM IDLER (USED ON 65-38989-4) .		1
132	69-31145-1	. . . BRACKET ASSY, RUDDER TRIM		1
		ATTACHING PARTS		
132B	BACB30NE3-3	. . . BOLT.		4
132D	NAS517-3-8	. . . SCREW		2
132F	AN960PD10	. . . WASHER.		4
132G	AN960D10	. . . WASHER.		2
132J	BACN10JC3	. . . NUT		6
		--------*--------		
133	69-11293-6	. . . FILLER, RUDDER TRIM IDLER CRANK BRACKET		2
134	66-21290-4	. . . FILLER, RUDDER TRIM RADIUS.		2
135	BACB30NF4-27D	. . . BOLT.		1
136	NAS43DD4-9	. . . SPACER.		1
137	NAS1197-416	. . . WASHER.		1
138	BACN10JD14	. . . NUT		1
139	BACB10BX4	. . . BEARING		1
140	65-38903-1	. . . LEVER ASSY, RUDDER TRIM CONTROL		1
141	BACB10BX4	. . . . BEARING		1
142	65-38903-2	. . . . LEVER, RUDDER TRIM CONTROL.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

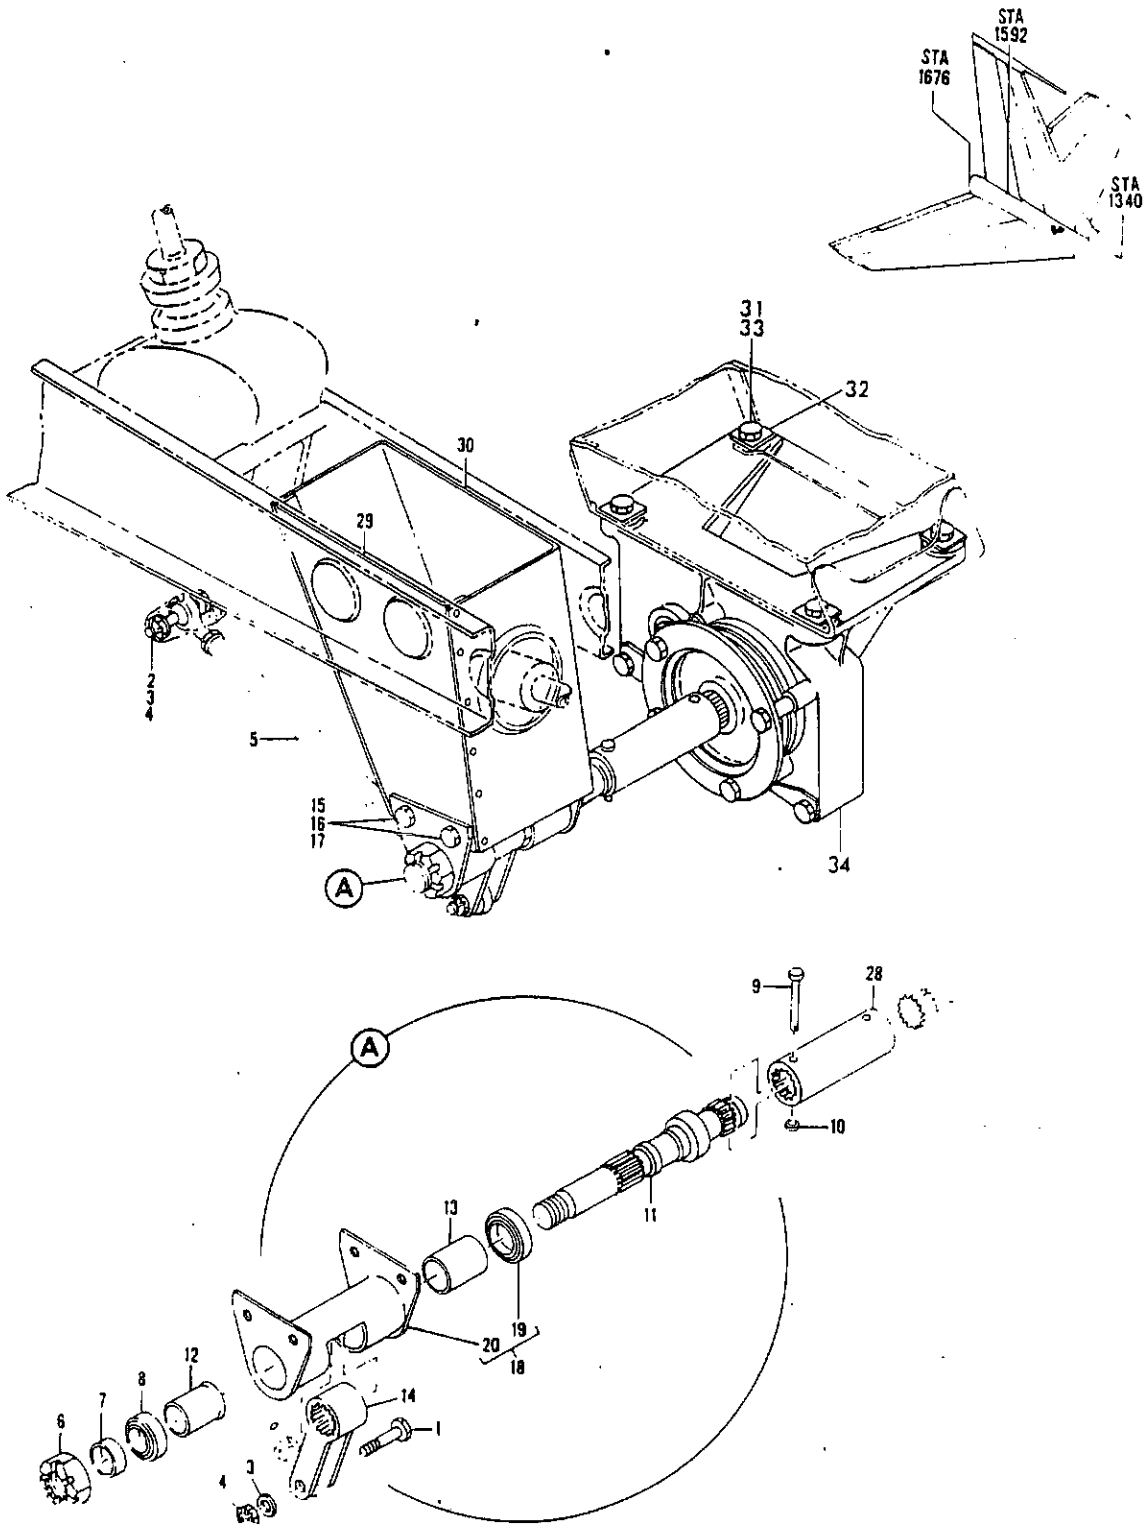


FIGURE 32A GEAR BOX INSTL, RUDDER CONTROL POWER TRIM

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	32A	65-40218-3	GEARBOX INSTL, RUDDER CONTROL POWER TRIM (SEE FIG. 28A, ITEM 15)		RF
	1	NAS1104-16D	. BOLT.		1
	2	NAS1104-30D	. BOLT.		1
	3	AN960D416	. WASHER.		2
	4	AN320-4	. NUT		2
	5	BACR24D6A120	. ROD ASSY.		1
	6	AN320-14	. NUT		1
	7	NAS43DD14-19	. SPACER.		1
	8	BAC810A28DD	. BEARING		1
	9	MS20392-2C43	. PIN		1
	10	AN960D10L	. WASHER.		1
	11	69-31645-1	. SHAFT, RUDDER CONTROL POWER TRIM (OPTIONAL 66-21545-1 (ALTERED FROM 69-12301-2 OR -3))		1
	11	66-21545-1	. SHAFT, RUDDER CONTROL POWER TRIM (ALTERED FROM. . . 69-12301-2 OR -3) (OPTIONAL TO 69-31645-1)		1
	12	69-12198	. SPACER, RUDDER CONTROL SYSTEM CENTERING SPRING. . . MECHANISM		1
	13	69-12198-1	. SPACER, RUDDER CONTROL SYSTEM CENTERING SPRING. . . MECHANISM		1
	14	69-12309	. CRANK, RUDDER CONTROL SYSTEM CENTERING SPRING . . . . MECHANISM		1
	15	NAS1104-4	. BOLT.		4
	16	AN960D416	. WASHER.		4
	17	NAS679A4W	. NUT		4
	18	69-12196-4	. SUPPORT ASSY, RUDDER CONTROL SYSTEM CENTERING SPRING MECHANISM		1
	19	BAC810A29DD	. . BEARING		1
	20	69-12196-5	. . SUPPORT, RUDDER CONTROL SYSTEM CENTERING SPRING . . MECHANISM		1
	28	69-31639-1	. TUBE, RUDDER CONTROL POWER TRIM SPLINED		1
	29	69-12311	. CHANNEL, RUDDER CONTROL SYSTEM CENTERING SPRING . . . MECHANISM SUPPORT		1
	30	69-12311-1	. CHANNEL, RUDDER CONTROL SYSTEM CENTERING SPRING . . . MECHANISM SUPPORT		1
			ATTACHING PARTS		
		MS20470D5	. RIVET		20
			-------*-------		
	31	AN4-7A	. BOLT.		4
	32	65-3783-13	. FILLER, STATION 1484 TO 1505.87 RUDDER CONTROL RADIUS		4
	33	NAS679A4W	. NUT		4
R	34	65-40181-7	. GEARBOX ASSY, (SEE FIG. 32B).	0150	1
R			(OPTIONAL TO 65-40181-8)		
R	34	65-40181-8	. GEARBOX ASSY, (SEE FIG. 32B).	0150	1
R			(OPTIONAL 65-40181-7)		
R	34	65-40181-8	. GEARBOX ASSY, (SEE FIG. 32B).	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

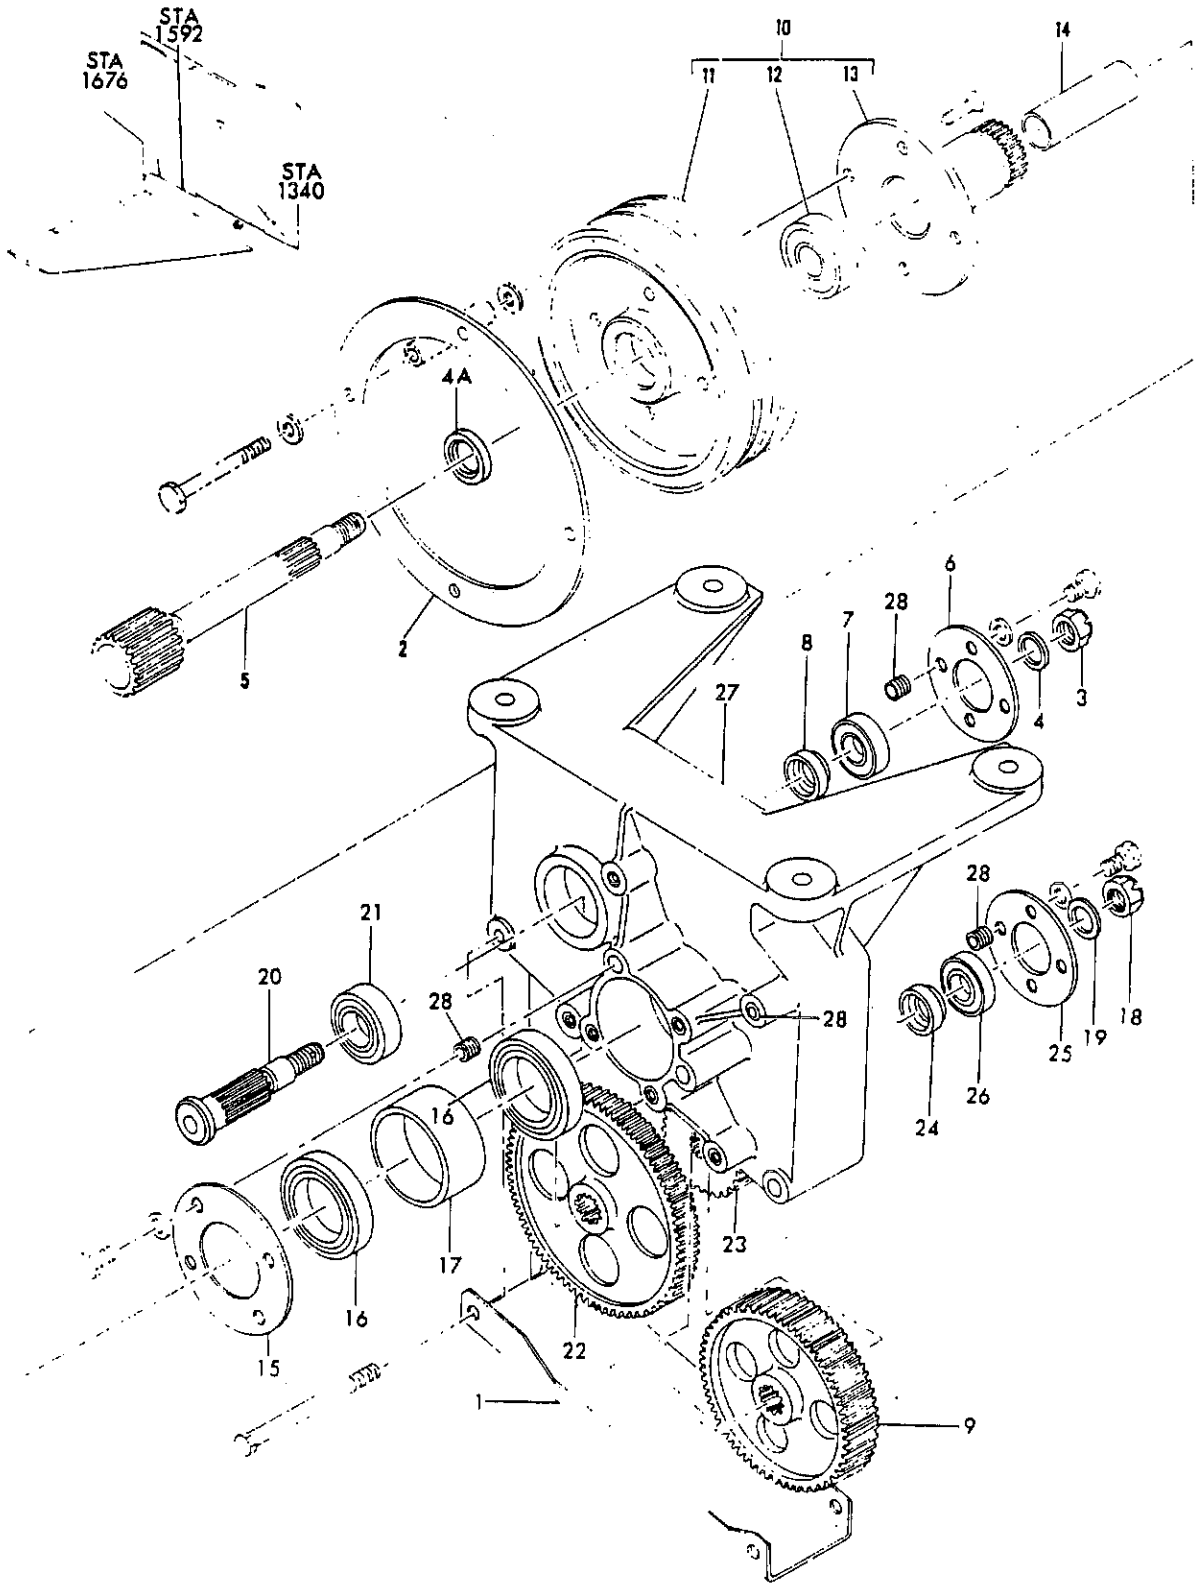


FIGURE 32B. GEARBOX ASSY, RUDDER POWER TRIM

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	32B	65-40181-7	GEARBOX ASSY, RUDDER POWER TRIM (SEE FIG. 32A, ITEM 34) (OPTIONAL TO 65-40181-8)	0150	RF
R		65-40181-8	GEARBOX ASSY, RUDDER POWER TRIM (SEE FIG. 32A, ITEM 34) (OPTIONAL 65-40181-7)	0150	RF
R		65-40181-8	GEARBOX ASSY, RUDDER POWER TRIM (SEE FIG. 32A, ITEM 34)	5199	RF
	1	66-21543-2	. COVER, RUDDER POWER TRIM GEARBOX.		1
			ATTACHING PARTS		
		NAS1103-25W	. BOLT.		2
		AN960D10L	. WASHER.		2
		NAS679A3W	. NUT		2
			-------*-------		
	2	69-31635-1	. RETAINER.		1
			ATTACHING PARTS		
		NAS1303-26HW	. BOLT.		4
		NAS43DD3-96	. SPACER.		4
		AN960PD10L	. WASHER. (OPTIONAL AN960PD10)		AR
			-------*-------		
	3	AN310-5	. NUT		1
	4	AN960PD516L	. WASHER.		1
	4A	69-50231-1	. SPACER.		1
	5	69-50237-1	. SHAFT		1
	6	69-31635-3	. RETAINER.		1
			ATTACHING PARTS		
		NAS1303-1HW	. BOLT.		4
		AN960D10L	. WASHER.		4
			-------*-------		
	7	BACB10A543	. BEARING		1
	8	69-31632-1	. SPACER, RUDDER POWER TRIM GEARBOX BEARING		1
	9	69-31662-1	. GEAR, RUDDER POWER TRIM SPUR.		1
	10	65-40181-6	. DRUM ASSY, RUDDER POWER TRIM GEARBOX.		1
	11	69-31626-2	. . DRUM, RUDDER POWER TRIM CABLE (OPTIONAL 65-41635-1)		1
	11	65-41635-1	. . DRUM, RUDDER POWER TRIM CABLE (OPTIONAL TO 69-31626-2)		1
			ATTACHING PARTS		
		MS20426D5	. . RIVET		4
			-------*-------		
	12	BACB10A544	. . BEARING		1
	13	69-31624-1	. . GEAR, RUDDER POWER TRIM PINION.		1
	14	NAS43DD8-131	. SPACER.		1
	15	69-31635-2	. RETAINER.		1
			ATTACHING PARTS		
		NAS1303-1HW	. BOLT.		4
		AN960D10L	. WASHER.		4
			-------*-------		
	16	BACB10A29DDH	. BEARING		2
	17	69-31632-2	. SPACER, RUDDER POWER TRIM GEARBOX BEARING		1
	18	AN310-5	. NUT		1
	19	AN960PD516L	. WASHER.		1
	20	69-31631-1	. SHAFT, RUDDER POWER TRIM GEARBOX.		1
	21	BACB10A544	. BEARING		1
	22	69-31610-1	. GEAR, RUDDER POWER TRIM SPUR.		1
	23	69-31640-1	. GEAR, RUDDER POWER TRIM PINION.		1
	24	69-31632-1	. SPACER, RUDDER POWER TRIM GEARBOX BEARING		1
	25	69-31635-3	. RETAINER.		1
			ATTACHING PARTS		
		NAS1303-1HW	. BOLT.		4
		AN960D10L	. WASHER.		4
			-------*-------		
	26	BACB10A543	. BEARING		1
	27	65-40179-7	. GEARBOX ASSY, RUDDER CONTROL POWER TRIM (USED ON 65-40181-5 AND 65-40181-7)		1
	27	65-40179-13	. GEARBOX ASSY, (USED ON 65-40181-8).		1
	28	BACS13W3CN3	. . INSERT.		16

MISSING ITEM NUMBERS ARE NOT APPLICABLE

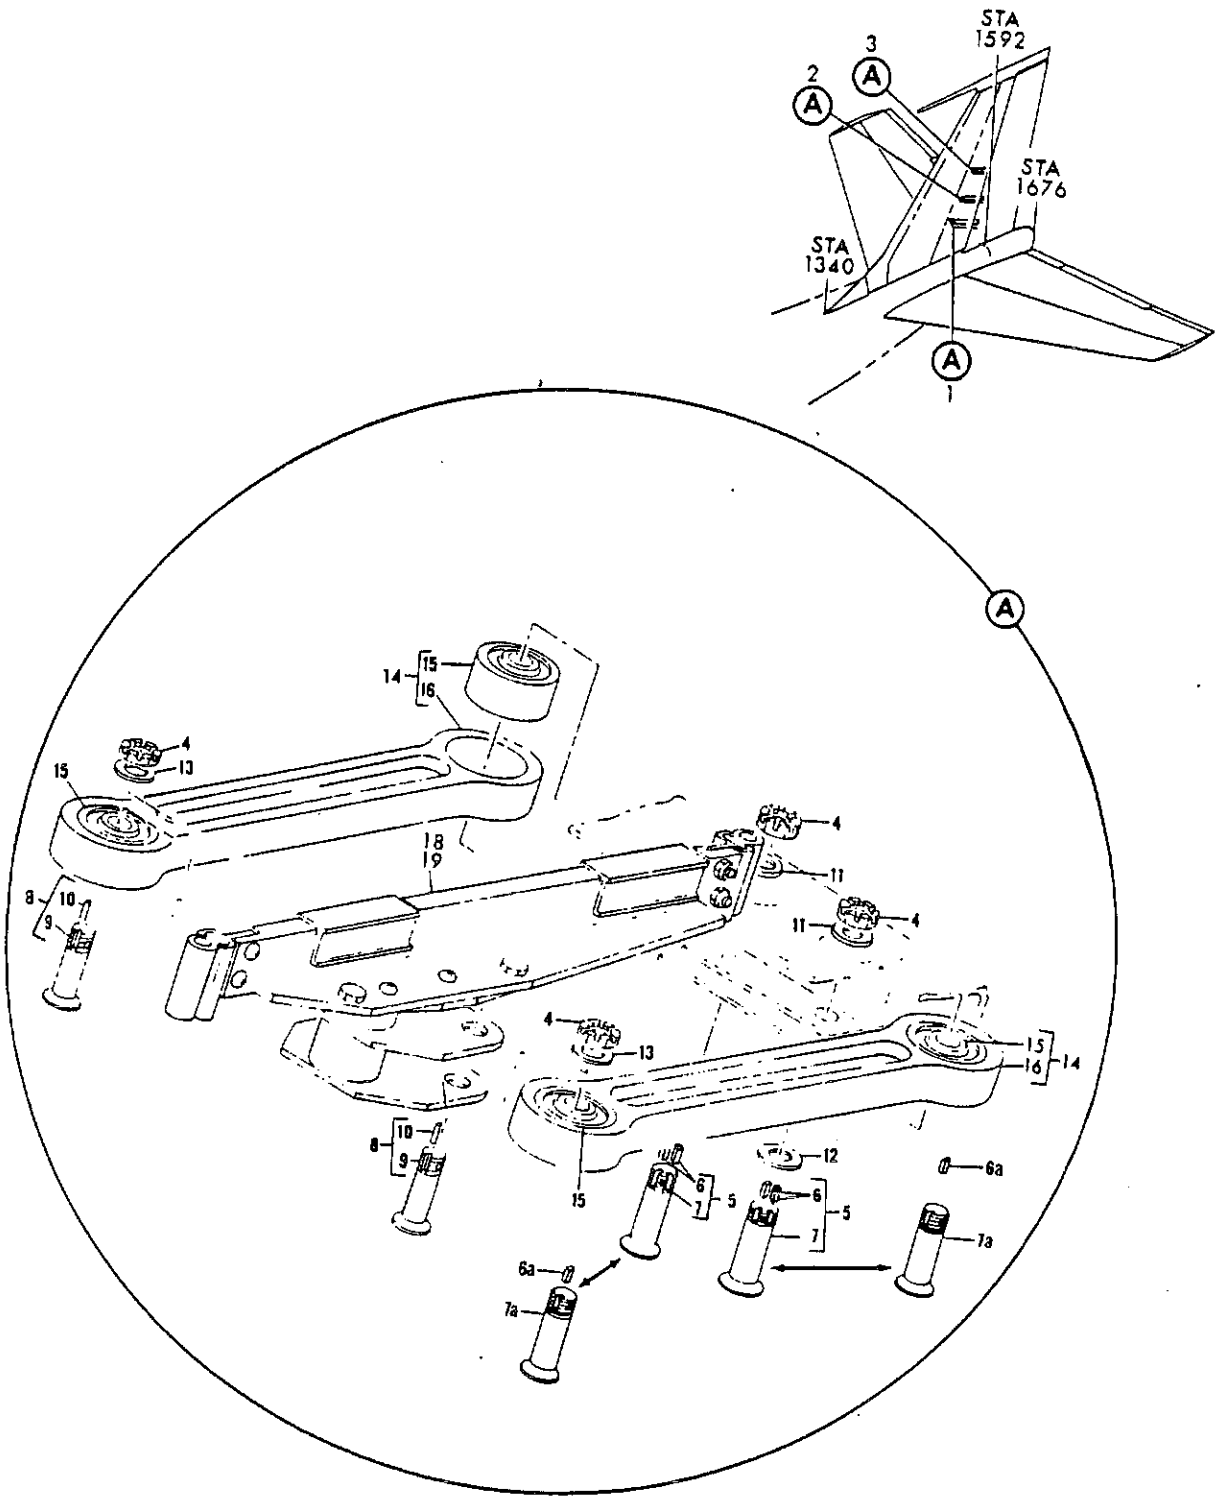


FIGURE 33. LINK INSTL, FIN TRAILING EDGE RUDDER BALANCE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
33 1	65-3837-1	LINK INSTL, STATION 11.95 FIN TRAILING EDGE RUDDER. . . BALANCE (SEE 27-8, FIG. 11, ITEM 7)		RF
2	65-3837-2	LINK INSTL, STATION 48.67 FIN TRAILING EDGE RUDDER. . . BALANCE (SEE 27-8, FIG. 11, ITEM 8)		RF
3	65-3837-3	LINK INSTL, STATION 102.18 FIN TRAILING EDGE RUDDER . . BALANCE (SEE 27-8, FIG. 11, ITEM 9)		RF
4	AN320-8	. NUT		4
5	90-8452	. BOLT ASSY, RUDDER AND ELEVATOR BALANCE.		2
6	90-8452-801	. . INSERT, (USED WITH 90-8452-800)		2
6A	90-8452-2	. . INSERT, (USED WITH 90-8452-1)		1
7	90-8452-800	. . BOLT, (USED WITH 90-8452-801) . . . . . (OPTIONAL 90-8452-1 WITH 90-8452-2)		1
7A	90-8452-1	. . BOLT, (USED WITH 90-8452-2) . . . . . (OPTIONAL TO 90-8452-800 WITH 90-8452-801)		1
8	69-30078	. BOLT ASSY, RUDDER BALANCE		2
9	69-30078-1	. . BOLT, RUDDER BALANCE.		1
10	69-30078-2	. . INSERT, RUDDER BALANCE.		1
11	63-2044	. WASHER, RUDDER BALANCE TRACK PANEL.		2
12	AN960D816L	. WASHER.		AR
13	AN960-816L	. WASHER.		2
14	69-3305	. LINK ASSY, RUDDER BALANCE PANEL (USED ON 65-3837-1. . AND -2)		2
14	69-3216	. LINK ASSY, RUDDER BALANCE PANEL (USED ON 65-3837-3) .		2
15	BACB10C163	. . BEARING		2
16	69-3305-1	. . LINK, RUDDER BALANCE PANEL (USED ON 69-3305). . . .		1
16	69-3216-1	. . LINK, RUDDER BALANCE PANEL (USED ON 69-3216). . . .		1
17	65-3837-7	. TRACK ASSY, STATION 11.95 FIN TRAILING EDGE RUDDER. . BALANCE LINK (USED ON 65-3837-1) (SEE FIG. 34)		1
18	65-3837-8	. TRACK ASSY, STATION 48.67 FIN TRAILING EDGE RUDDER. . BALANCE LINK (USED ON 65-3837-2) (SEE FIG. 34)		1
19	65-3837-9	. TRACK ASSY, STATION 102.18 FIN TRAILING EDGE RUDDER . BALANCE (USED ON 65-3837-3) (SEE FIG. 34)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

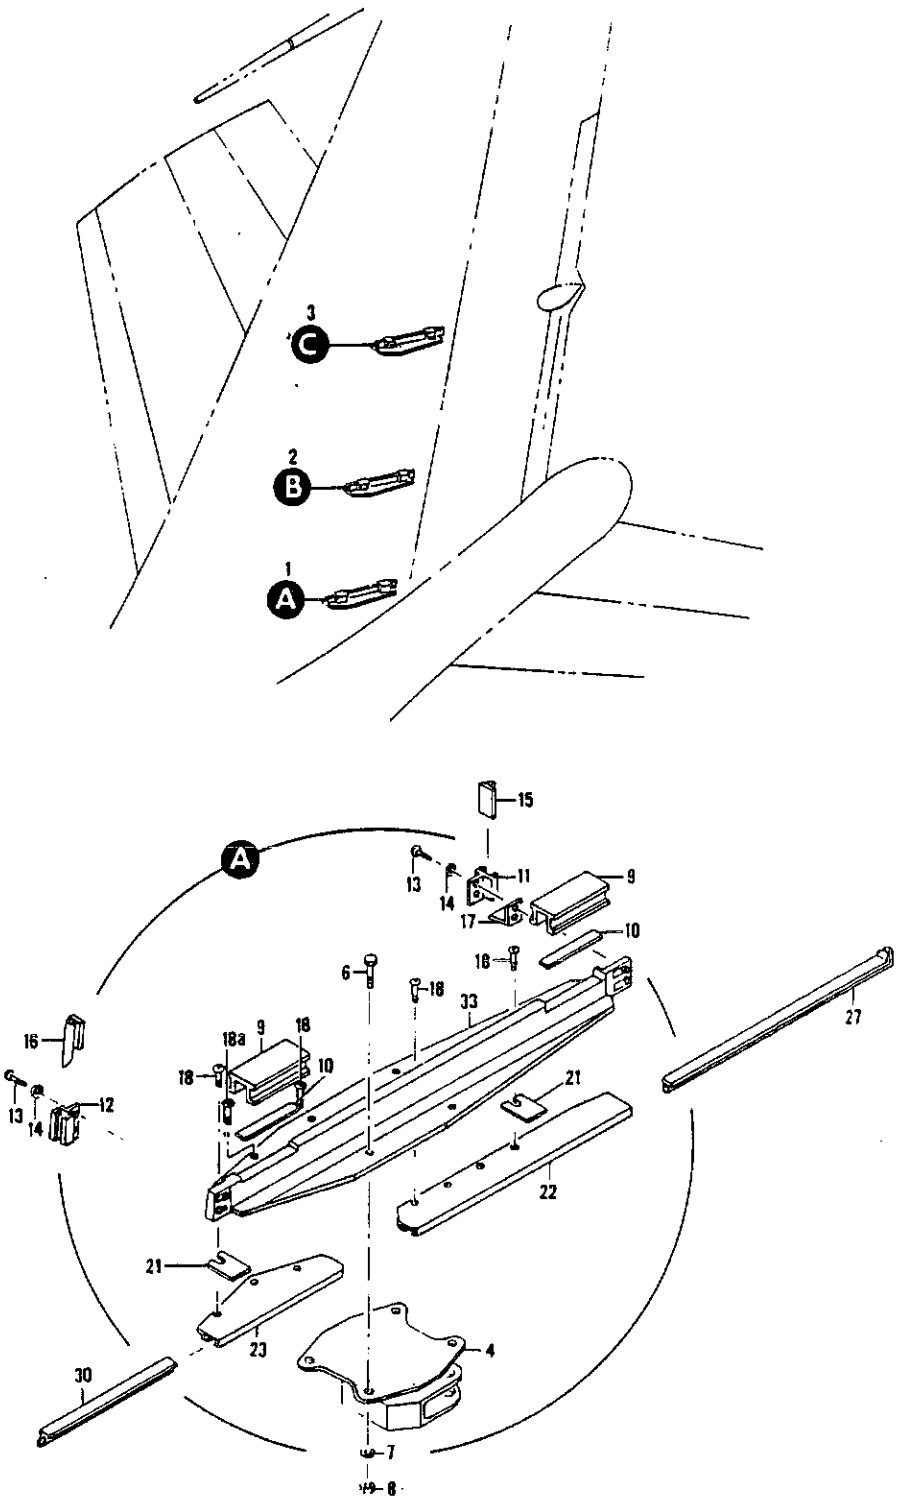


FIGURE 34. TRACK ASSY, FIN TRAILING EDGE RUDDER BALANCE LINK (SHEET 1)

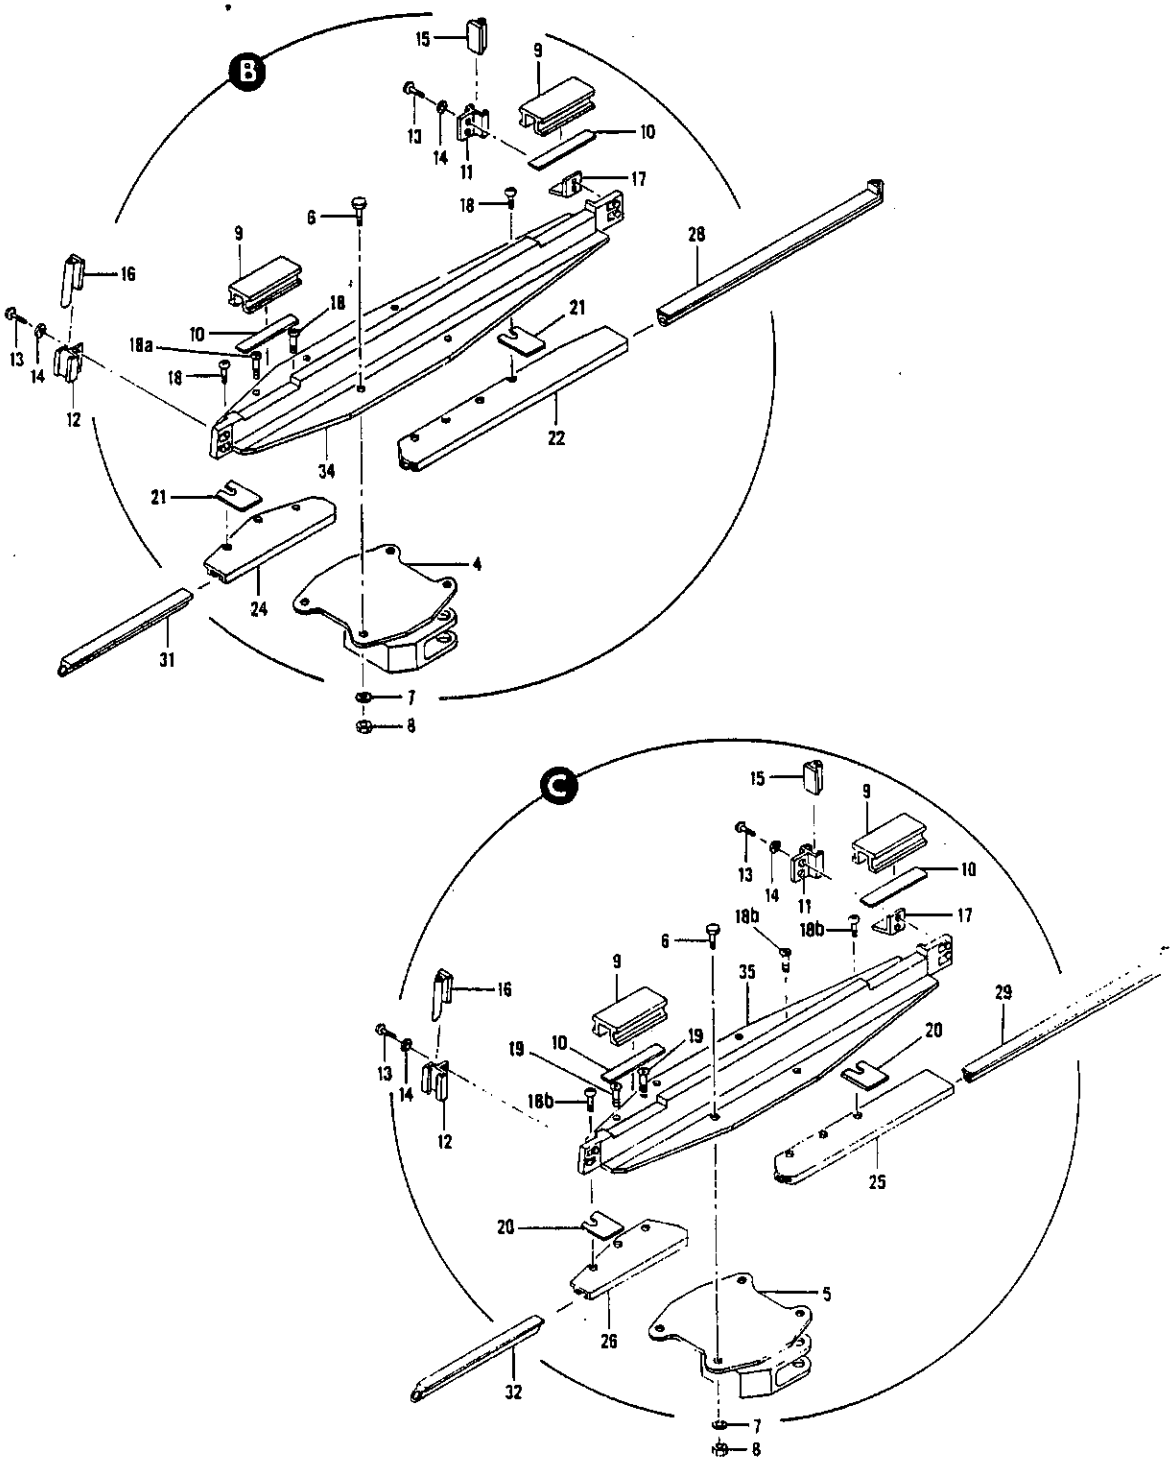


FIGURE 34. TRACK ASSY, FIN TRAILING EDGE RUDDER BALANCE LINK (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
34 1	65-3837-7	TRACK ASSY, STATION 11.95 FIN TRAILING EDGE RUDDER. . . BALANCE LINK (SEE FIG. 33, ITEM 17)		RF
2	65-3837-8	TRACK ASSY, STATION 48.67 FIN TRAILING EDGE RUDDER. . . BALANCE LINK (SEE FIG. 33, ITEM 17)		RF
3	65-3837-9	TRACK ASSY, STATION 102.18 FIN TRAILING EDGE RUDDER . . BALANCE LINK (SEE FIG. 33, ITEM 17)		RF
4	65-25234-6	. FITTING, RUDDER BALANCE PANEL ADAPTER (USED ON. . . . 65-3837-7 AND -8)		1
5	65-25234-7	. FITTING, RUDDER BALANCE PANEL ADAPTER (USED ON. . . . 65-3837-9)		1
		ATTACHING PARTS		
6	NAS1104-8W	. BOLT.		4
7	AN960PD416	. WASHER.		4
8	NAS679A4W	. NUT		4
		-------*-------		
9	60-2083-2001	. PLATE, RUDDER AND ELEVATOR BALANCE PANEL TRACK. . . . BEARING		2
10	BACS40A12-45	. SHIM.		AR
11	65-4115-12	. RETAINER, RUDDER BALANCE PANEL SEAL		1
12	65-4115-10	. RETAINER, RUDDER BALANCE PANEL SEAL		1
		ATTACHING PARTS		
13	AN520C10R10	. SCREW		4
14	AN960D10	. WASHER.		4
		-------*-------		
15	60-6170-2	. SEAL, RUDDER AND ELEVATOR BALANCE TRACK AERODYNAMIC . (ALTERED FROM BAC SPEC NO. 10-2737-13)		1
16	60-6170-3	. SEAL, RUDDER AND ELEVATOR BALANCE TRACK AERODYNAMIC . (ALTERED FROM BAC SPEC NO. 10-2737-16)		1
17	63-2114	. CLIP, RUDDER BALANCE PANEL TRACK RETAINER SUPPORT . .		1
18	AN520C10R10	. SCREW, (USED ON 65-3837-4, -5, -7 AND -8)		6
18A	AN520C10R12	. SCREW, (USED ON 65-3837-4, -5, -7 AND -8)		1
18B	AN520C10R10	. SCREW, (USED ON 65-3837-6 AND -9)		4
19	AN520C10R12	. SCREW, (USED ON 65-3837-6 AND -9)		2
20	BACS40FD1	. SHIM, (USED ON 65-3837-6 AND -9).		6
21	BACS40FD1	. SHIM, (USED ON 65-3837-4, -5, -7 AND -8).		7
22	65-4115-20	. RETAINER ASSY, RUDDER BALANCE PANEL SEAL (USED ON . . 65-3837-4, -5, -7 AND -8)		1
23	65-4115-24	. RETAINER ASSY, RUDDER BALANCE PANEL SEAL (USED ON . . 65-3837-4 AND -7)		1
24	65-4115-26	. RETAINER ASSY, RUDDER BALANCE PANEL SEAL (USED ON . . 65-3837-5 AND -8)		1
25	65-4115-22	. RETAINER ASSY, RUDDER BALANCE PANEL SEAL (USED ON . . 65-3837-6 AND -9)		1
26	65-4115-28	. RETAINER ASSY, RUDDER BALANCE PANEL SEAL (USED ON . . 65-3837-6 AND -9)		1
27	10-60120-14	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-3837-4 AND -7)		1
28	10-60120-30	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-3837-5 AND -8)		1
29	10-60120-15	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-3837-6 AND -9)		1
30	10-60120-16	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-3837-4 AND -7)		1
31	10-60120-17	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-3837-5 AND -8)		1
32	10-60120-18	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-3837-6 AND -9)		1
33	65-3836-1	. TRACK, RUDDER BALANCE PANEL (USED ON 65-3837-4 AND. . -7)		1
34	65-3836-2	. TRACK, RUDDER BALANCE PANEL (USED ON 65-3837-5 AND. . -8)		1
35	65-3836-3	. TRACK, RUDDER BALANCE PANEL (USED ON 65-3837-6 AND. . -9)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

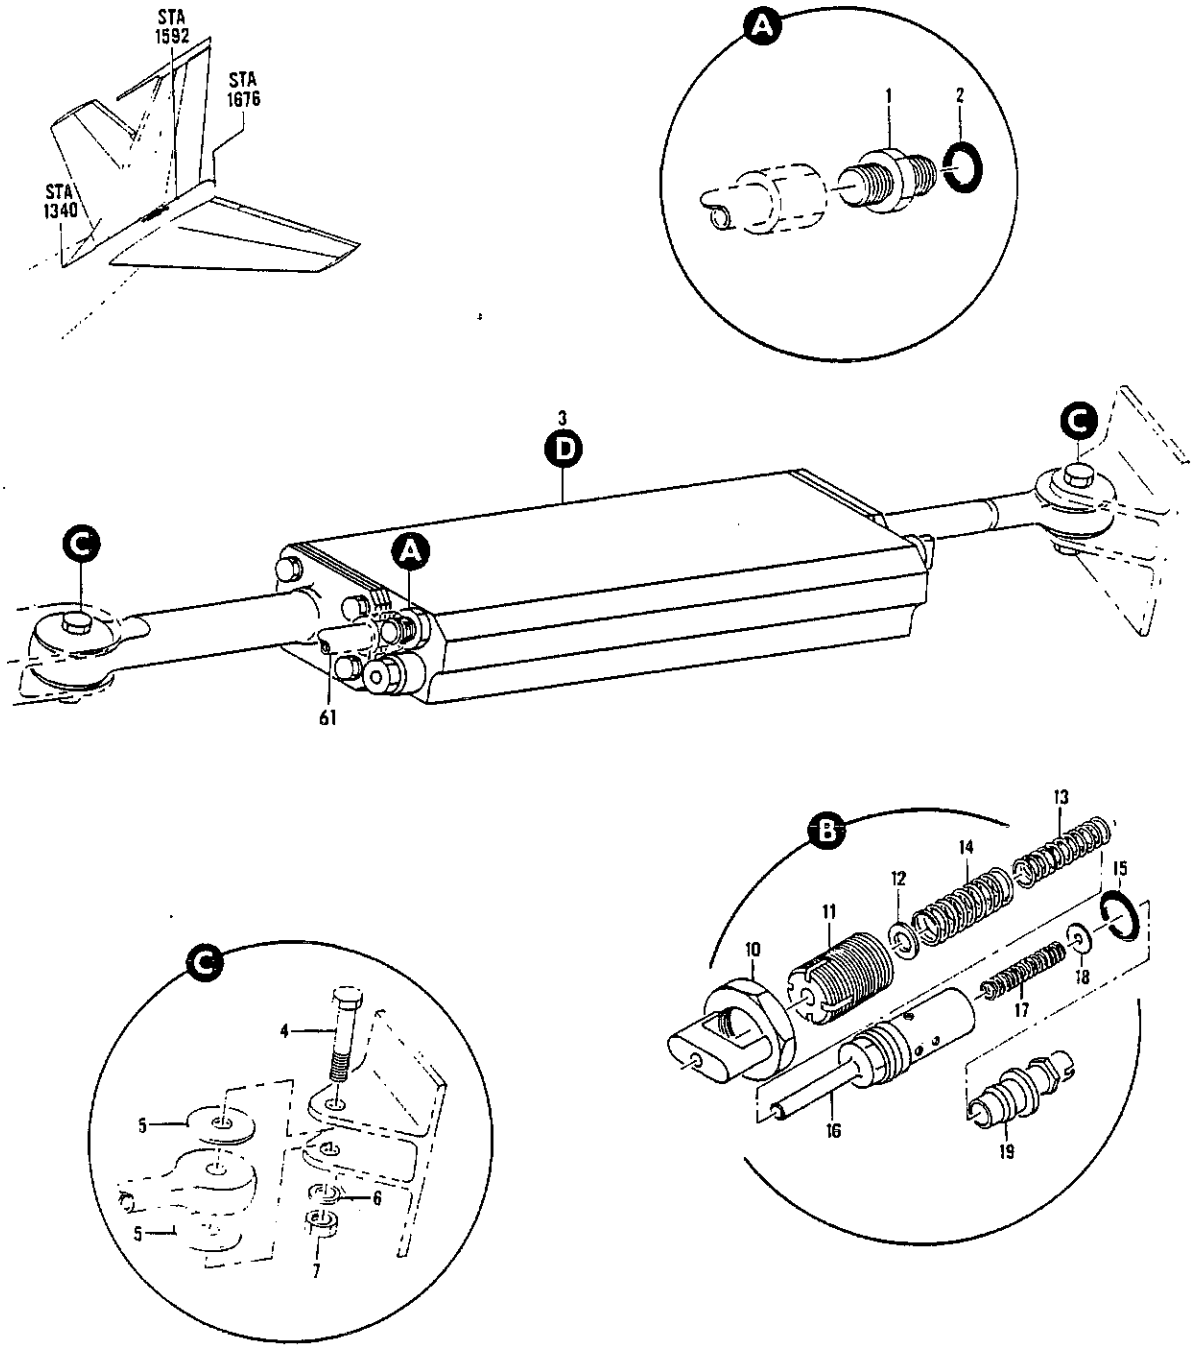


FIGURE 35. SNUBBER INSTL, RUDDER STATION 7.15 (SHEET 1)

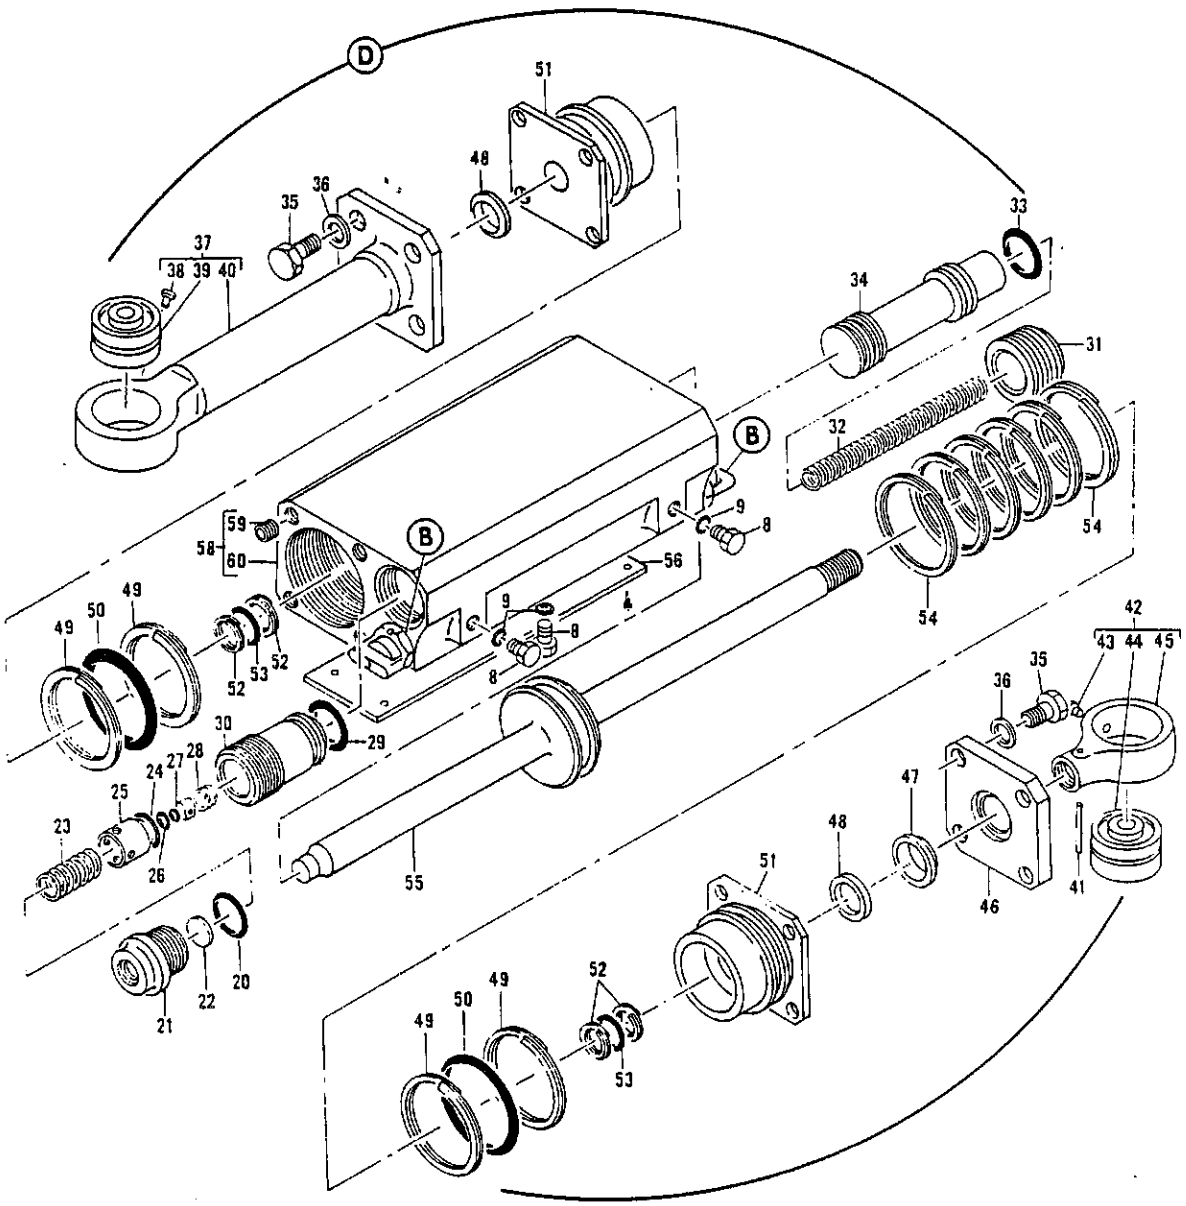


FIGURE 35. SNUBBER INSTL, RUDDER STATION 7. 15 (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
35	65-3775	SNUBBER INSTL, RUDDER STATION 7.15 (SEE 55-1, FIG. 1, ITEM 17B, 55-1, FIG. 2, ITEM 25 AND 55-1, FIG. 3, ITEM 25)		RF
1	MS21902D4	. UNION		1
2	BACP11H4	. PACKING		1
3	65-5947-2	. DAMPER ASSY, FLUTTER (FLIGHT CONTROL ONLY)		1
		ATTACHING PARTS		
4	NAS464P5-18	. BOLT		2
5	63-2599	. SPACER, RUDDER SNUBBER ATTACHMENT		4
6	AN960D516	. WASHER		2
7	AN320-5	. NUT		2
		-------*-------		
8	AN814-2DL	. . PLUG AND BLEEDER		3
9	BACP11H2	. . PACKING		3
10	6-84679-2	. . STOP, CONTROL SURFACE RELIEF VALVE (OPTIONAL 6-84679-3)		2
10	6-84679-3	. . STOP, CONTROL SURFACE RELIEF VALVE (OPTIONAL TO 6-84679-2)		2
11	6-84673	. . RETAINER, CONTROL SURFACE SNUBBER RELIEF VALVE SPRING		2
12	AN960-10	. . WASHER		AR
13	3-99002	. . SPRING, CONTROL SNUBBER COMPRESSION		2
14	3-99003-1	. . SPRING, CONTROL SNUBBER COMPRESSION		2
15	BACP11F7	. . PACKING		2
16	9-67534	. . RETAINER, CONTROL SURFACE SNUBBER VALVE ORIFICE		2
17	3-99005	. . SPRING, CONTROL SNUBBER COMPRESSION		2
18	3-99000-2	. . DISK, CONTROL SURFACE SNUBBER ORIFICE		2
19	6-84668	. . VALVE, CONTROL SURFACE SNUBBER		2
20	BACP11H10	. . PACKING		1
21	66-8654	. . CAP, CONTROL SURFACE DAMPER COMPENSATING VALVE		1
22	62261	. . FILTER, DISK (V05228) (OPTIONAL AA70-1908E1 (V18350))		1
22	AA70-1908E1	. . FILTER, DISK (V18350) (OPTIONAL TO 62261 (V05228))		1
23	63-8353	. . SPRING, CONTROL SURFACE DAMPER COMPRESSION		1
24	BACP11F9	. . PACKING		1
25	66-8652	. . SLIDE, CONTROL SURFACE DAMPER COMPENSATING VALVE		1
26	BACP11F3	. . PACKING		1
27	66-8653	. . POPPET, CONTROL SURFACE DAMPER COMPENSATING VALVE		1
28	63-8352	. . SPRING, CONTROL SURFACE DAMPER COMPRESSION		1
29	BACP11F15	. . PACKING		1
30	66-8655	. . BODY, CONTROL SURFACE DAMPER COMPENSATING VALVE		1
31	66-3998	. . PLUG, RUDDER FLUTTER DAMPER RESERVOIR		1
32	63-8654	. . SPRING, RESERVOIR SNUBBER COMPRESSION		1
33	BACP11F15	. . PACKING		1
34	69-4353	. . PISTON, RUDDER FLUTTER DAMPER RESERVOIR		1
35	AN74-7	. . BOLT		8
36	AN960-416	. . WASHER		8
37	65-5945-2	. . TERMINAL ASSY, RUDDER FLUTTER DAMPER HEAD END		1
38	NAS516-1	. . . FITTING		1
39	BACB10C135H	. . . BEARING		1
40	65-5945-1	. . . TERMINAL, RUDDER FLUTTER DAMPER HEAD END		1
41	BACP18L5P0812	. . PIN		1
42	BACB10C174A	. . BEARING, (OPTIONAL 9-63027-3000)		1
42	9-63027-3000	. . ROD END ASSY, CONTROL SURFACE SNUBBER (OPTIONAL TO BACB10C174A)		1
43	NAS516-1	. . . FITTING		1
44	BACB10C135H	. . . BEARING, (OPTIONAL BACB10C135)		1
44	BACB10C135	. . . BEARING, (OPTIONAL TO BACB10C135H)		1
45	9-63027-1	. . . ROD END, CONTROL SURFACE SNUBBER		1
46	66-3993	. . CAP, SNUBBER ELEVATOR GUST HOUSING		1
47	S11065-3T	. . RING, SCRAPER (V97820)		1
48	AN6232-1	. . FELT STRIP		2
49	MS28783-2	. . RING		4
50	BACP11G2	. . PACKING		2
51	69-4352	. . BEARING, RUDDER FLUTTER DAMPER		2
52	MS28782-12	. . RING		4
53	BACP11F12	. . PACKING		2
54	MS28782-29	. . RING		AR
55	65-5944	. . PISTON, RUDDER FLUTTER DAMPER		1
56	BACN12D72-4M	. . NAMEPLATE		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
35		ATTACHING PARTS		
	AN535-0-3	. . SCREW		4
		-------*--------		
58	65-5946	. . HOUSING ASSY, RUDDER FLUTTER DAMPER		1
59	BACS13P4C4	. . . SLEEVE.		8
60	65-5946-1	. . . HOUSING, RUDDER FLUTTER DAMPER.		1
		. . REQUIRED PLACARDS, (SEE 11-2, FIG. 212)		
61		TUBING INSTL, SECTION 92 EMPENNAGE HYDRAULIC (FOR REF SEE 29-4, FIG. 23 AND 23A)		RF

MISSING ITEM NUMBERS ARE NOT APPLICABLE

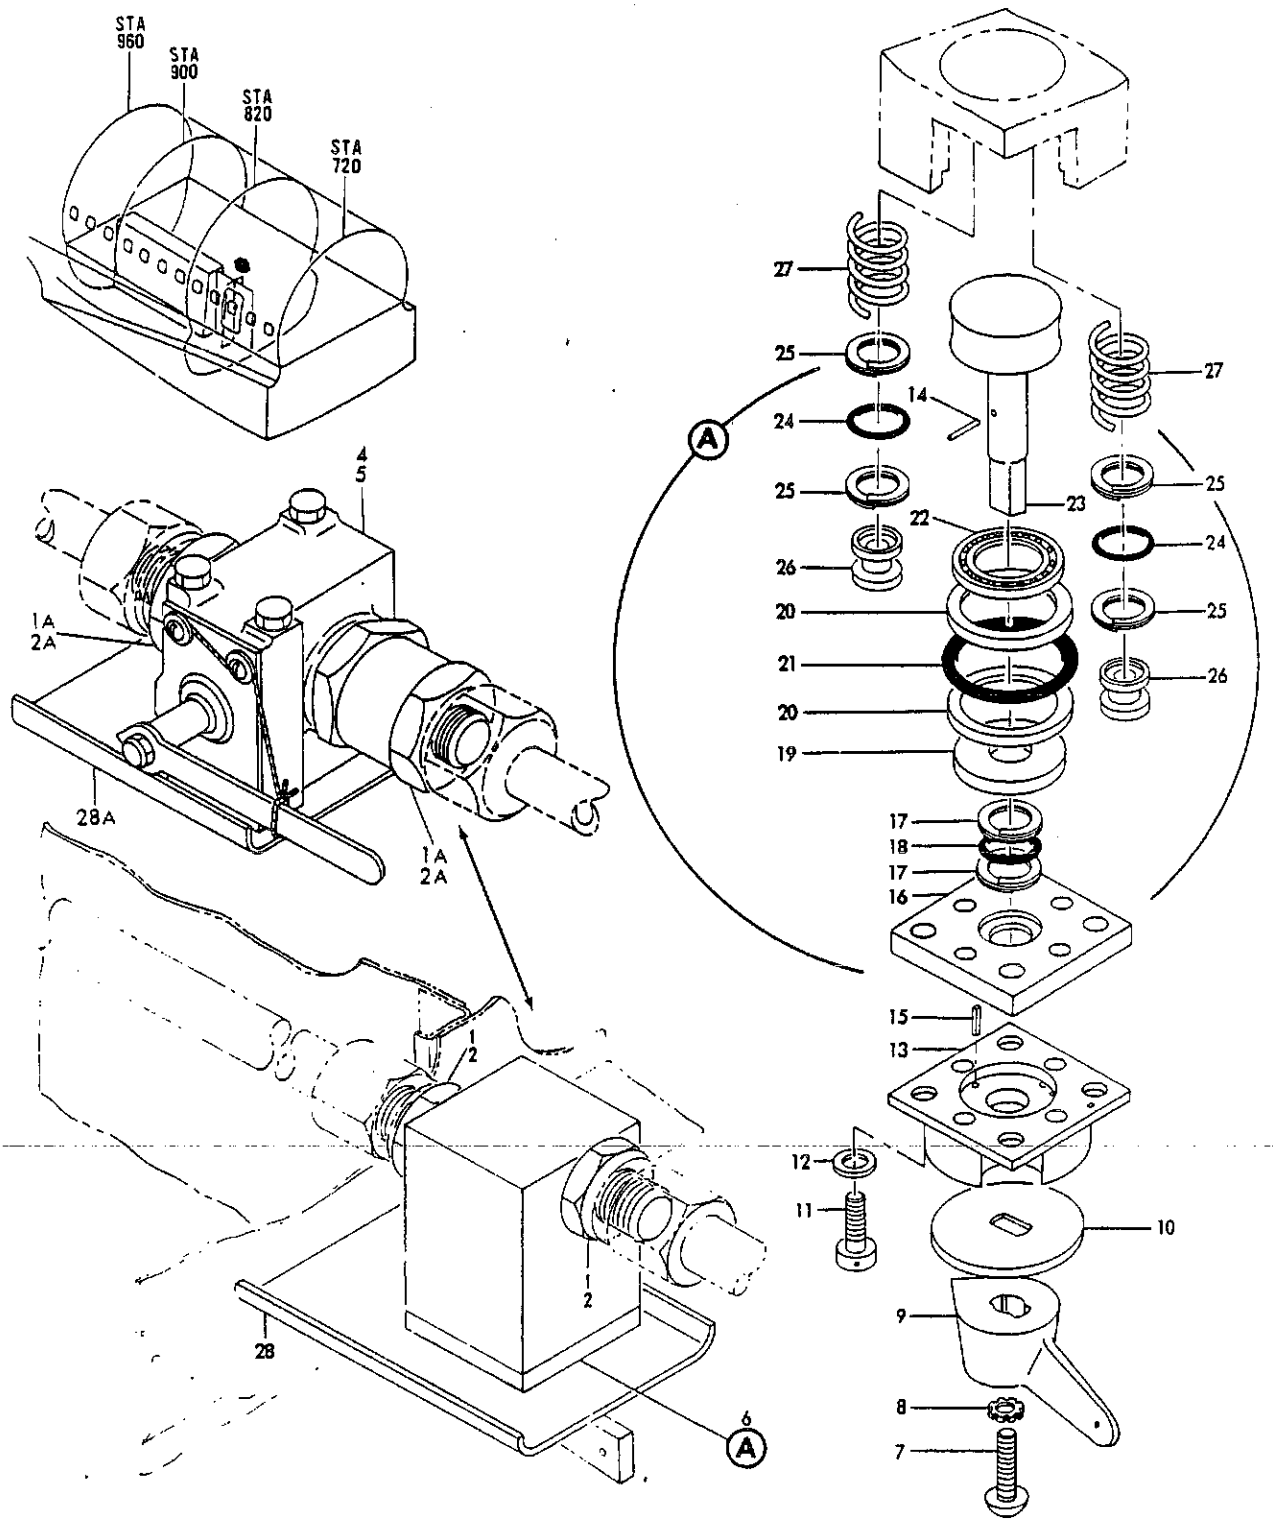
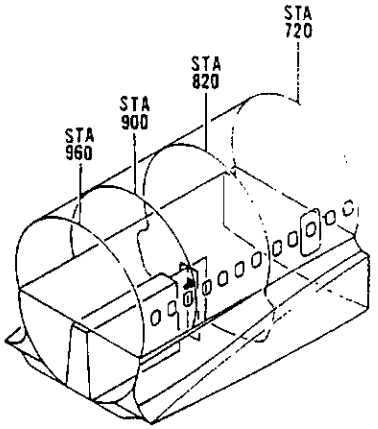


FIGURE 36. VALVE INSTL, RUDDER SHUTOFF MANUALLY OPEATED (FLIGHT CONTROL ONLY)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
36	69-12378	VALVE INSTL, RUDDER SHUTOFF MANUALLY OPERATED (FLIGHT CONTROL ONLY) (SEE 29-4, FIG. 13, ITEM 169, 29-4, FIG. 16, ITEM 118, 29-4, FIG. 14, ITEM 126, 29-4, FIG. 15, ITEM 133 AND 29-4, FIG. 17, ITEM 117)		RF
1	MS21902-6	. UNION		2
2	NAS1612-6	. PACKING		2
6	10-3340-1	. VALVE, 3000 PSI HYDRAULIC MANUAL SHUTOFF (SAME AS 140925 OR 140925-1 (V79318))		1
6	140925	. VALVE ASSY, MANUALLY OPERATED ROTARY SHUTOFF (V79318) (SAME AS BAC SPEC NO. 10-3340-1) (FOR REPLACEMENT ORDER 140925-1 (V79318))		RF
6	140925-1	. VALVE ASSY, MANUALLY OPERATED ROTARY SHUTOFF (V79318) (SAME AS BAC SPEC NO. 10-3340-1) (REPLACEMENT FOR 140925 (V79318))		RF
		ATTACHING PARTS		
	MS24673-1	. SCREW		4
	AN960D10	. WASHER		4
		-------*-------		
M 7	AN526C1032-8	. . SCREW		1
M 8	AN936B10	. . WASHER		1
M 9	141221	. . HANDLE, (V79318)		1
M 10	141211	. . PLATE, DIRECTION (V79318)		1
M 11	MS24677-35	. . SCREW		4
M 12	100168-169	. . WASHER, (V79318)		4
M 13	141212	. . CAP, (V79318)		1
M 14	23400-4-24	. . PIN, DOWEL (V79318)		1
M	141217	. . COVER ASSY, (V79318) (USED ON 140925)		RF
M	143697	. . COVER ASSY, (V79318) (USED ON 140925-1)		RF
M 15	MS171434	. . . PIN, (USED ON 14095)		3
M 15	100107-18	. . . PIN, (V73957) (USED ON 140925-1)		3
M 16	143697-1	. . . COVER, (V79318) (USED ON 140925-1)		1
M 16	COVER	. . . COVER, (USED ON 140925)		1
M 17	MS28782-8	. . RING, (USED ON 140925)		2
M 17	143699	. . WASHER, (V79318) (USED ON 140925-1)		2
M 18	100111BG8	. . SEAL, (V79318) (USED ON 140925)		1
M 18	100111BK8	. . SEAL, (V79318) (USED ON 140925-1)		1
M 19	3068	. . WASHER, (V79318)		1
M 20	143698	. . WASHER, (V79318) (USED ON 140925-1)		2
M 21	100111BG18	. . SEAL, (V79318) (USED ON 140925)		1
M 21	100111BK99	. . SEAL, (V79318) (USED ON 140925-1)		1
M 22	R5498-1	. . BEARING, (V43766)		1
M 23	141220	. . ROTOR, (V79318)		1
M 24	100111BG5	. . SEAL, (V79318) (USED ON 140925)		2
M 24	100111BK5	. . SEAL, (V79318) (USED ON 140925-1)		2
M 25	26000-5	. . RING, (V79318)		4
M 26	141218	. . SEAL, (V79318)		2
M 27	2414	. . SPRING, (V79318)		2
28	66-11625-1	. SUPPORT, RUDDER SHUTOFF VALVE		1
		ATTACHING PARTS		
	MS20470D6-9	. RIVET		3
		-------*-------		
		. FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE



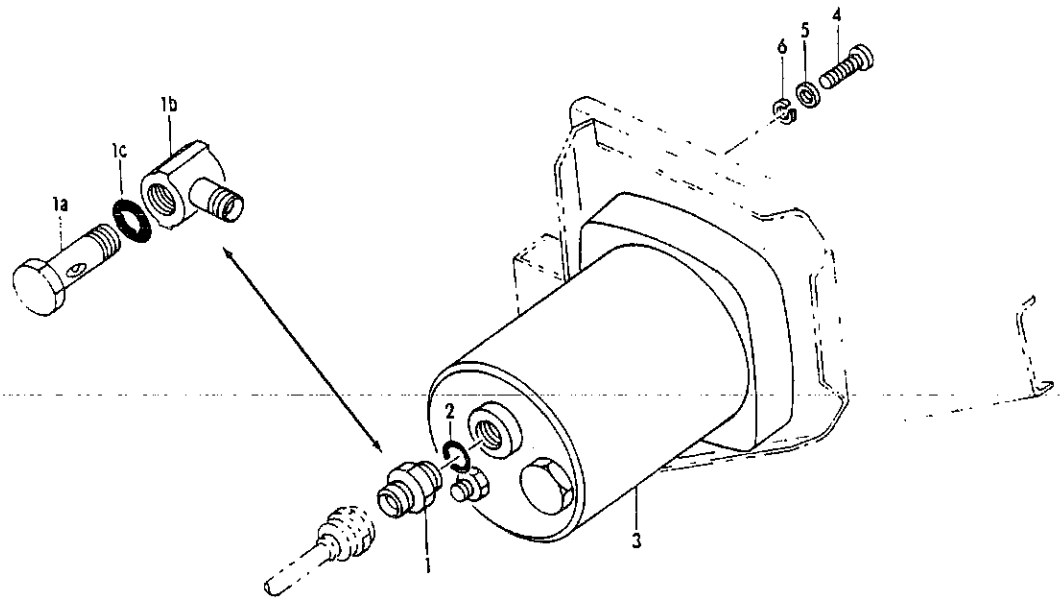
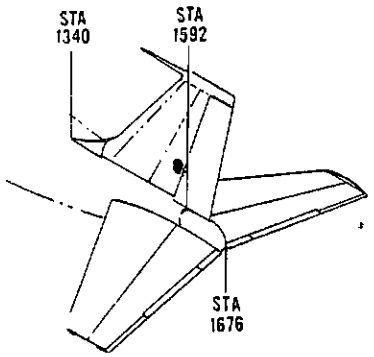


FIGURE 40. TRANSMITTER INSTL, RUDDER POWER CONTROL PRESSURE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
40	69-5416-2	TRANSMITTER INSTL, RUDDER POWER CONTROL PRESSURE (SEE 29-4, FIG. 13, ITEM 163, 29-4, FIG. 16, ITEM 119 AND 29-4, FIG. 15, ITEM 130)		RF
1	MS21902-4	. UNION		1
2	NAS1612-4	. PACKING		1
3	10-61255-1	. TRANSMITTER, RUDDER POWER CONTROL HYDRAULIC PRESSURE (OPTIONAL TO 10-61255-32)		1
3	10-61255-32	. TRANSMITTER, RUDDER POWER CONTROL HYDRAULIC PRESSURE (OPTIONAL 10-61255-1)		1
		ATTACHING PARTS		
4	NAS601-7P	. SCREW		4
5	AN960D6	. WASHER.		4
6	MS35338-41	. WASHER.		4
		--------*--------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE



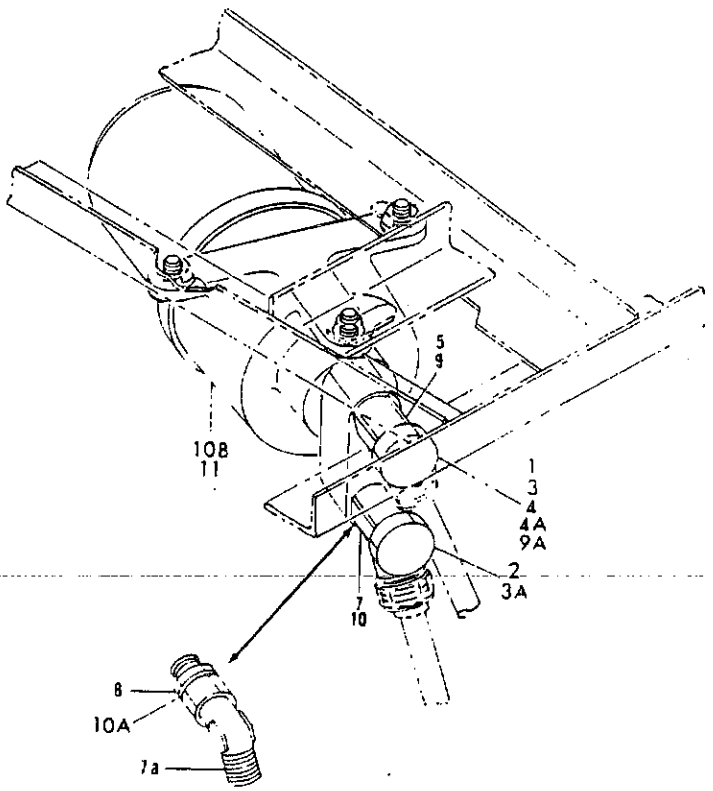


FIGURE 43. COMPENSATION PISTON, RUDDER POWER CONTROL SYSTEM

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	43	65-12747	COMPENSATOR INSTL, RUDDER POWER CONTROL SYSTEM (SEE 29-4, FIG. 23, ITEM 49 AND 29-4, FIG. 23A, ITEM 30)		RF
	1	NAS551-6DH	. BOLT.		1
	3	NAS1611-110	. PACKING		1
	3A	NAS1611-110	. PACKING		1
	5	NAS1238A6	. ELBOW		1
	8	MS21902D6	. UNION		1
	9	109661-1-6	. SEAL, LOCK (V83259)		1
	10A	NAS1612-6	. PACKING		1
R R	11	65-6696	. COMPENSATOR ASSY, (SEE FIG. 43A). (OPTIONAL AND FOR REPLACEMENT ORDER 65-6696-2)	0150	1
R R	11	65-6696-2	. COMPENSATOR ASSY, (SEE FIG. 43A). (OPTIONAL TO AND REPLACEMENT FOR 65-6696)	0150	1
R	11	65-6696-2	. COMPENSATOR ASSY, (SEE FIG. 43A).	5199	1
			ATTACHING PARTS		
		AN4-5A	. BOLT.		3
		AN960D416	. WASHER.		2
		AN960D416L	. WASHER.		2
		NAS679A4W	. NUT		1
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

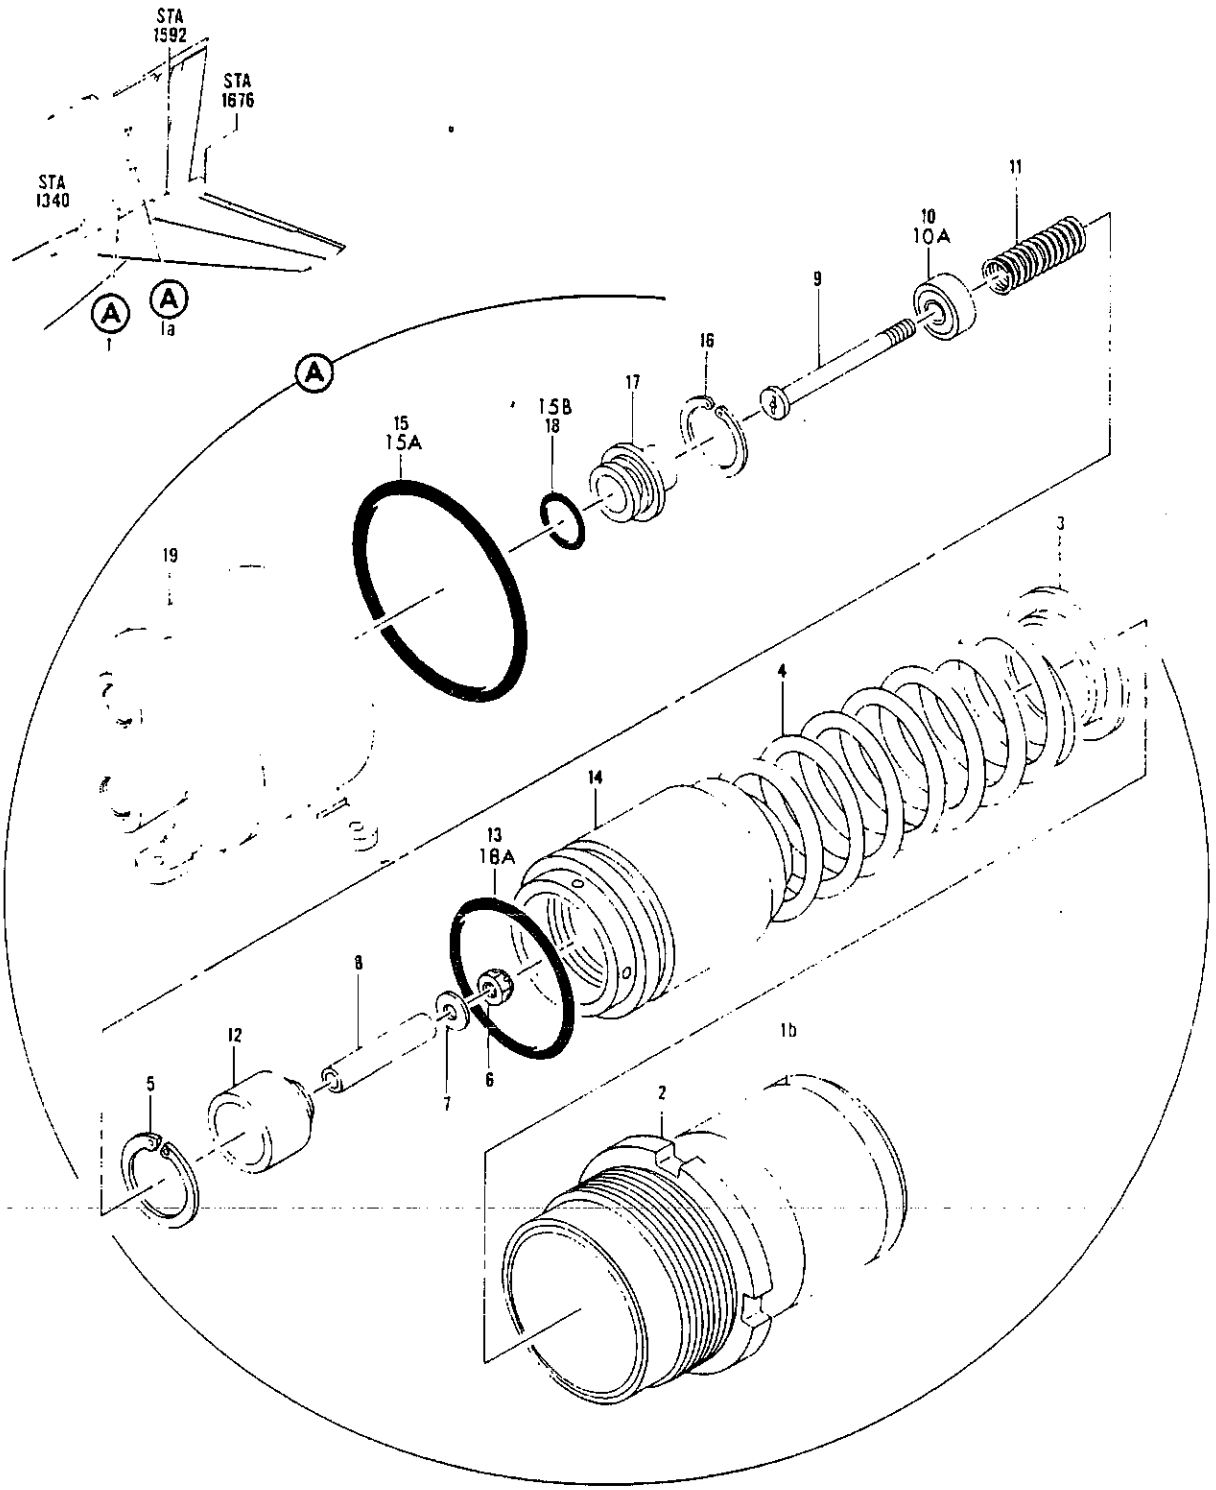


FIGURE 43A. COMPENSATOR ASSY, RUDDER POWER CONTROL

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R R R	43A 1A	65-6696	COMPENSATOR ASSY, RUDDER POWER CONTROL (SEE FIG. 43,. . ITEM 11) (OPTIONAL AND FOR REPLACEMENT ORDER 65-6696-2)	0150	RF
R R R	1A	65-6696-2	COMPENSATOR ASSY, RUDDER POWER CONTROL (SEE FIG. 43,. . ITEM 11) (OPTIONAL TO AND REPLACEMENT FOR 65-6696)	0150	RF
R R	1A	65-6696-2	COMPENSATOR ASSY, RUDDER POWER CONTROL (SEE FIG. 43,. . ITEM 11)	5199	RF
	18	BACN12C61-118	. NAMEPLATE		1
			ATTACHING PARTS		
		AN535-0-3	. SCREW		2
			-------*-------		
R	2	65-7114	. BARREL, (USED ON 65-6696)	0150	1
	2	65-78476-1	. BARREL, (USED ON 65-6696-2)		1
	3	66-4913	. GUIDE, RUDDER POWER CONTROL COMPENSATOR SPRING. . . .		1
	4	63-2609	. SPRING, COMPENSATOR PISTON COMPRESSION.		1
	5	MS16625-3150	. RING.		1
	6	BACN10JD104	. NUT		1
	7	AN960-416	. WASHER.		1
	8	63-2819	. SPACER, COMPENSATOR VALVE STEM.		1
	9	63-2607	. BOLT, RUDDER POWER CONTROL COMPENSATOR.		1
	10	63-2862	. RING ASSY, COMPENSATOR VALVE DISK AND SEAT (OPTIONAL 1031 (V94641))		1
	10	1031	. SEAT ASSY, VALVE (V94641) (OPTIONAL TO 63-2862) . . .		1
	11	63-2608	. SPRING, COMPENSATOR VALVE COMPRESSION		1
	12	66-4912	. GUIDE, RUDDER POWER CONTROL COMPENSATOR VALVE		1
	13	NAS1611-332	. PACKING		1
R	14	69-5414	. PISTON, (USED ON 65-6696)	0150	1
	14	69-5414-1	. PISTON, (USED ON 65-6696-2)		1
	15	NAS1611-234	. PACKING		1
	16	MS16625-3118	. RING.		1
	17	66-4908	. SEAT, RUDDER POWER CONTROL COMPENSATOR VALVE.		1
	18	NAS1611-116	. PACKING		1
	19	65-6697-2	. BODY, RUDDER POWER CONTROL SYSTEM COMPENSATOR		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

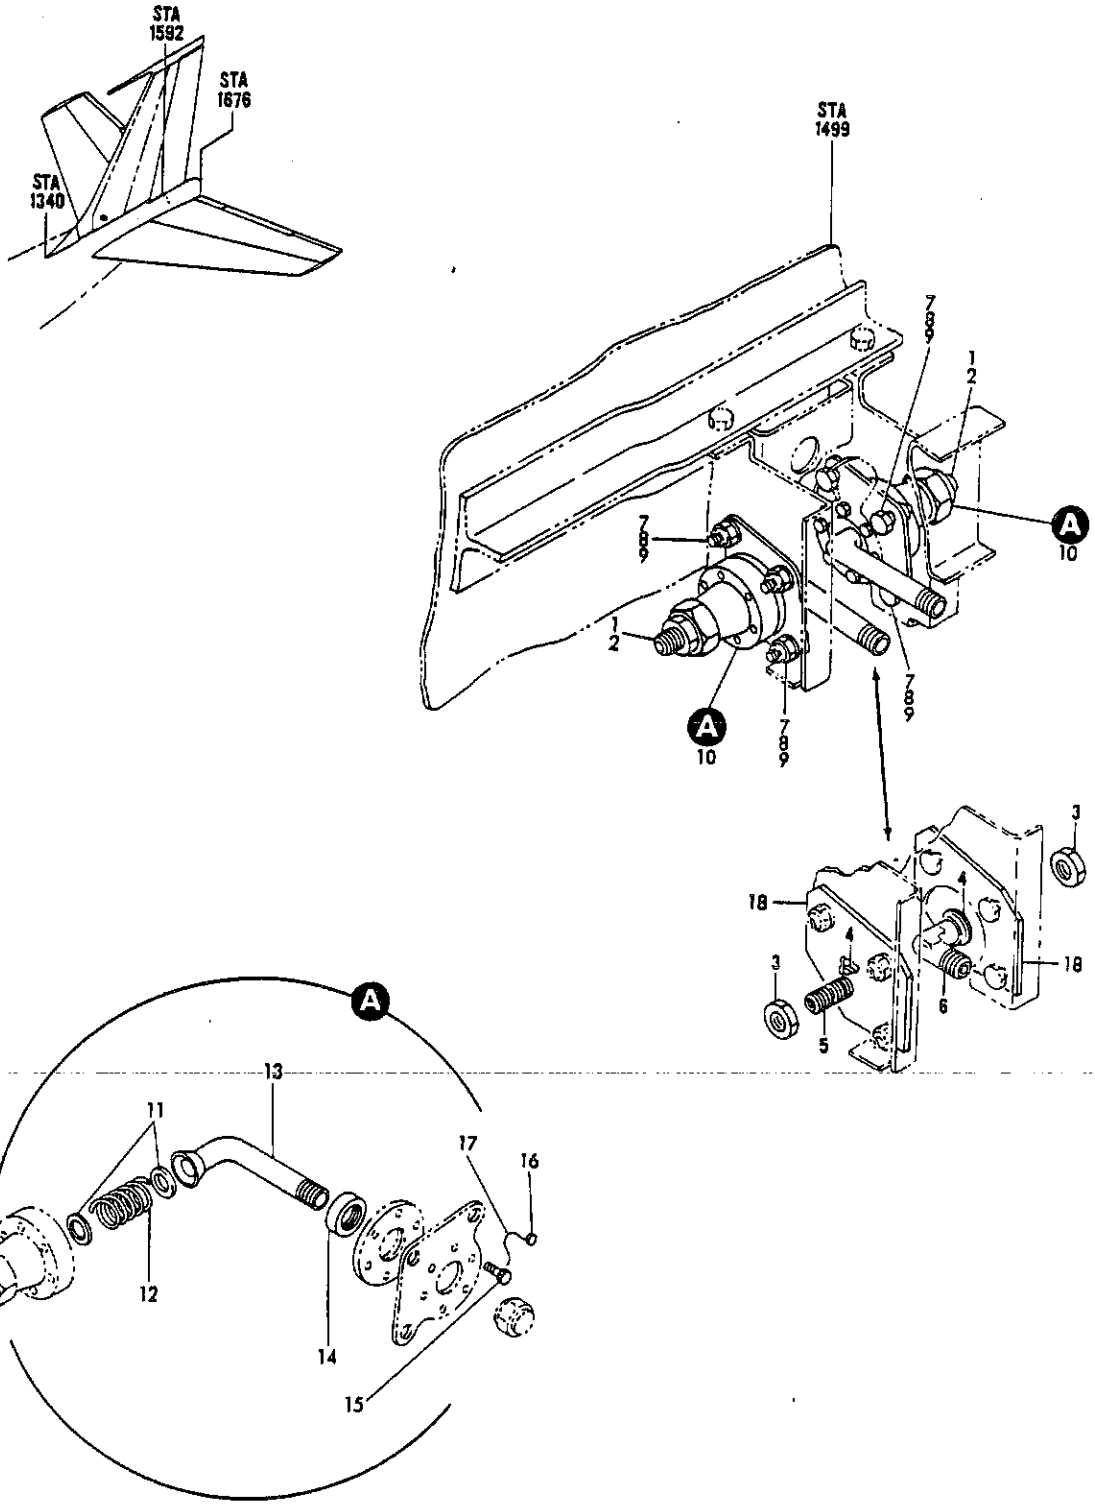


FIGURE 44. SWIVEL INSTL, RUDDER POWER CONTROL

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
44	69-6330-3	SWIVEL INSTL, RUDDER POWER CONTROL (SEE 29-4, FIG. 22, ITEM 43, 29-4, FIG. 23, ITEM 48 AND 29-4, FIG. 23A, ITEM 29)		RF
3	AN924-6D	. NUT, (USED ON 69-6330-3, -6).		2
4	AN960D916	. WASHER, (USED ON 69-6330-3, -6)		2
5	MS21908-6	. ELBOW, (USED ON 69-6330-3, -6).		1
6	MS21908D6	. ELBOW, (USED ON 69-6330-3, -6).		1
7	BACB30NE4-3	. BOLT.		6
8	AN960D416	. WASHER.		6
9	BACN10JC4	. NUT		6
18	69-6330-4	. PLATE, RUDDER POWER CONTROL SWIVEL (USED ON 69-6330-3)		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

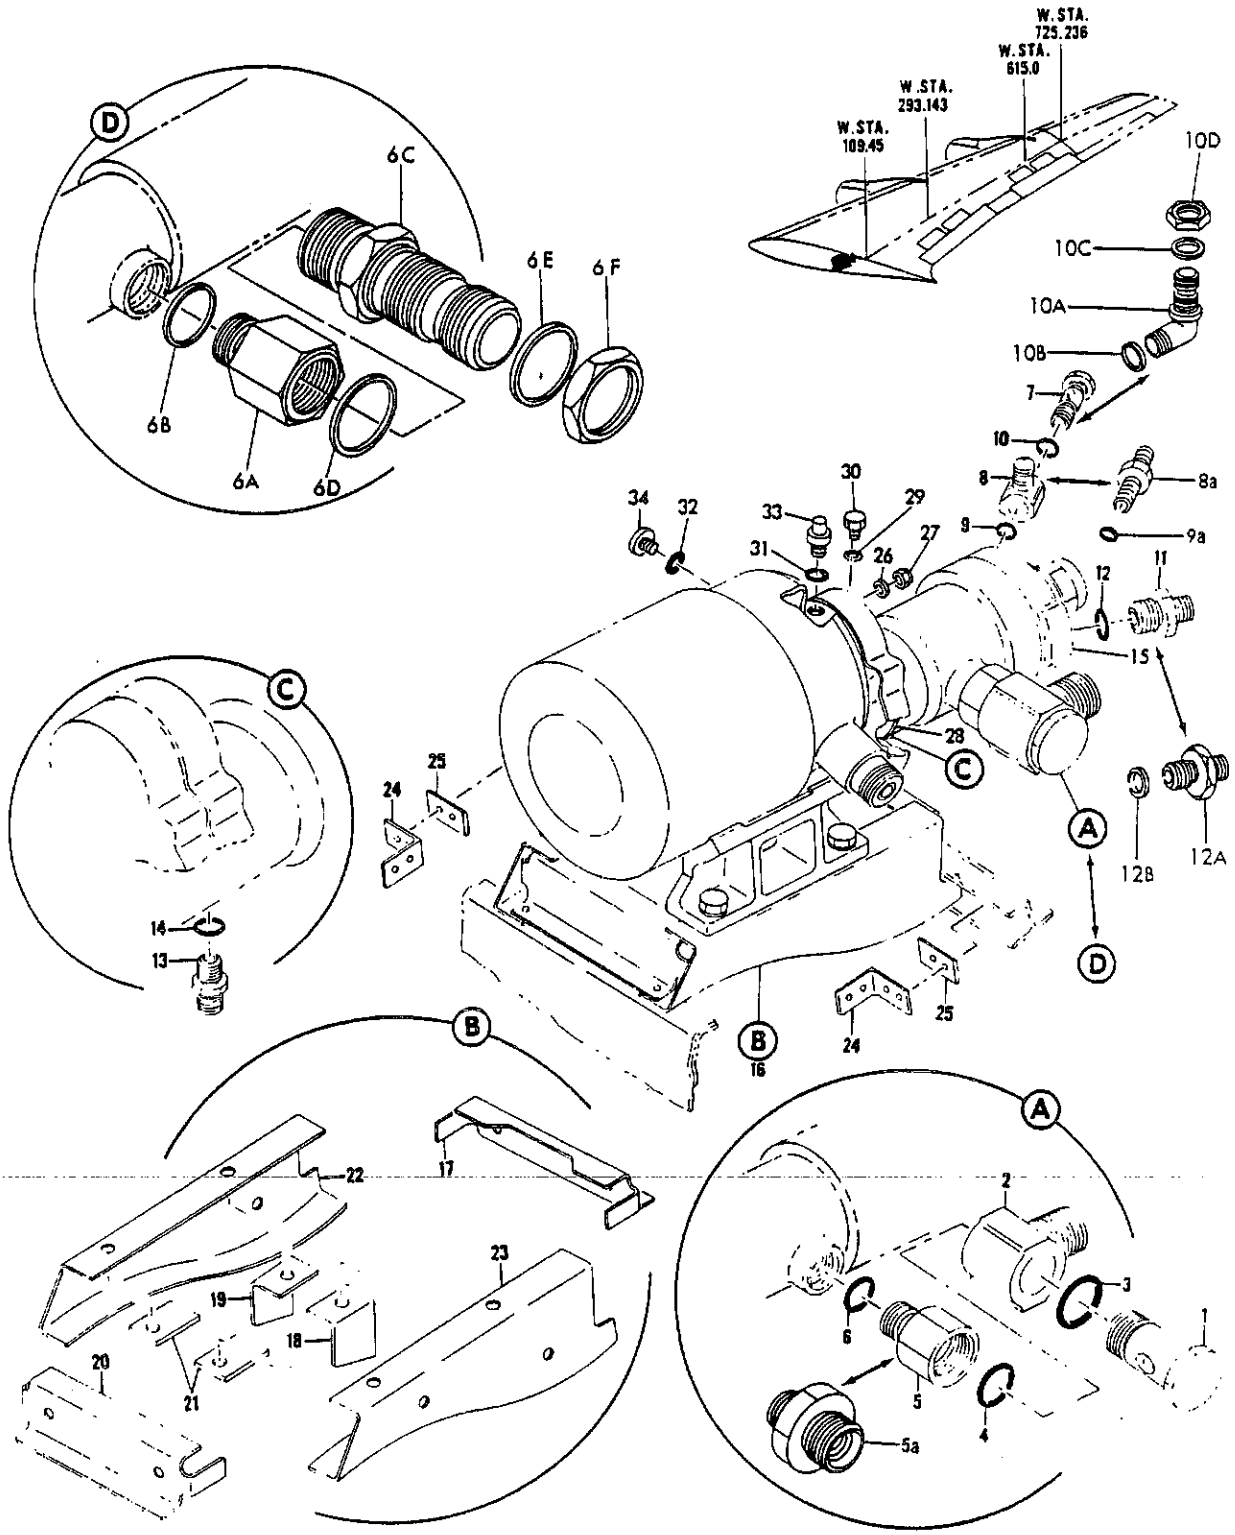
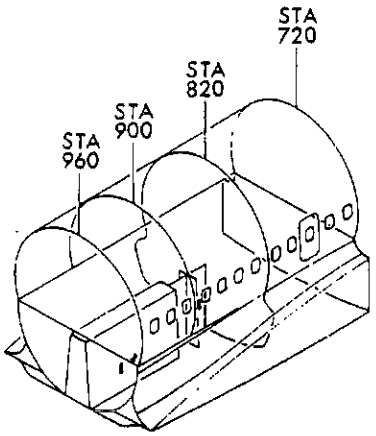


FIGURE 45. PUMP INSTL. RUDDER POWER CONTROL SYSTEM

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
45	65-13136	PUMP INSTL, RUDDER POWER CONTROL SYSTEM (SEE 29-2, FIG. 22, ITEM 145, 29-2, FIG. 22A, ITEM 182, 29-2, FIG. 22B, ITEM 174, 29-2, FIG. 22C, ITEM 178, 29-2, FIG. 22D, ITEM 169, 29-2, FIG. 23, ITEM 119, 29-2, FIG. 24, ITEM 130, 29-2, FIG. 25, ITEM 138, 29-2, FIG. 26, ITEM 140 AND 29-2, FIG. 27, ITEM 149)		RF
5A	MS21916D12-10	. REDUCER		1
6	NAS1612-10	. PACKING		1
8A	MS21902D4	. UNION		1
9A	NAS1612-4	. PACKING		1
11	MS21916-8-6	. REDUCER		1
12	NAS1612-8	. PACKING		1
13	MS21902D2	. UNION		1
14	NAS1612-2	. PACKING		1
15	10-61292-2	. PUMP, MOTOR DRIVEN AUXILIARY HYDRAULIC (SAME AS 10470-2 (V09284))		1
15	10470-2	. PUMP ASSY, HYDRAULIC (V09284) (SAME AS BAC SPEC NO. 10-61292-2) (SEE 29-2, FIG. 37F)		RF
		ATTACHING PARTS		
	AN4-6A	. BOLT		2
	AN4-7A	. BOLT		2
	AN960D416	. WASHER		4
		-------*-------		
16	65-13136-1	. BRACKET ASSY, RUDDER POWER CONTROL SYSTEM PUMP		1
17	66-9499-5	. . BRACKET, DC PUMP END		1
18	66-15031-1	. . BRACKET, DC PUMP END		1
19	66-15031-2	. . BRACKET, DC PUMP END		1
20	66-15031	. . BRACKET, DC PUMP END		1
21	66-9499-4	. . FILLER, DC PUMP END BRACKET RADIUS		2
22	66-5148-1	. . BRACKET, AUXILIARY HYDRAULIC PUMP SUPPORT		1
23	66-5148-2	. . BRACKET, AUXILIARY HYDRAULIC PUMP SUPPORT		1
24	66-1659-11	. CLIP, AC AUXILIARY PUMP SUPPORT BRACKETS		2
		ATTACHING PARTS		
	MS20470D5	. RIVET		4
		-------*-------		
25	66-1659-8	. FILLER, AC AUXILIARY PUMP SUPPORT BRACKETS		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE



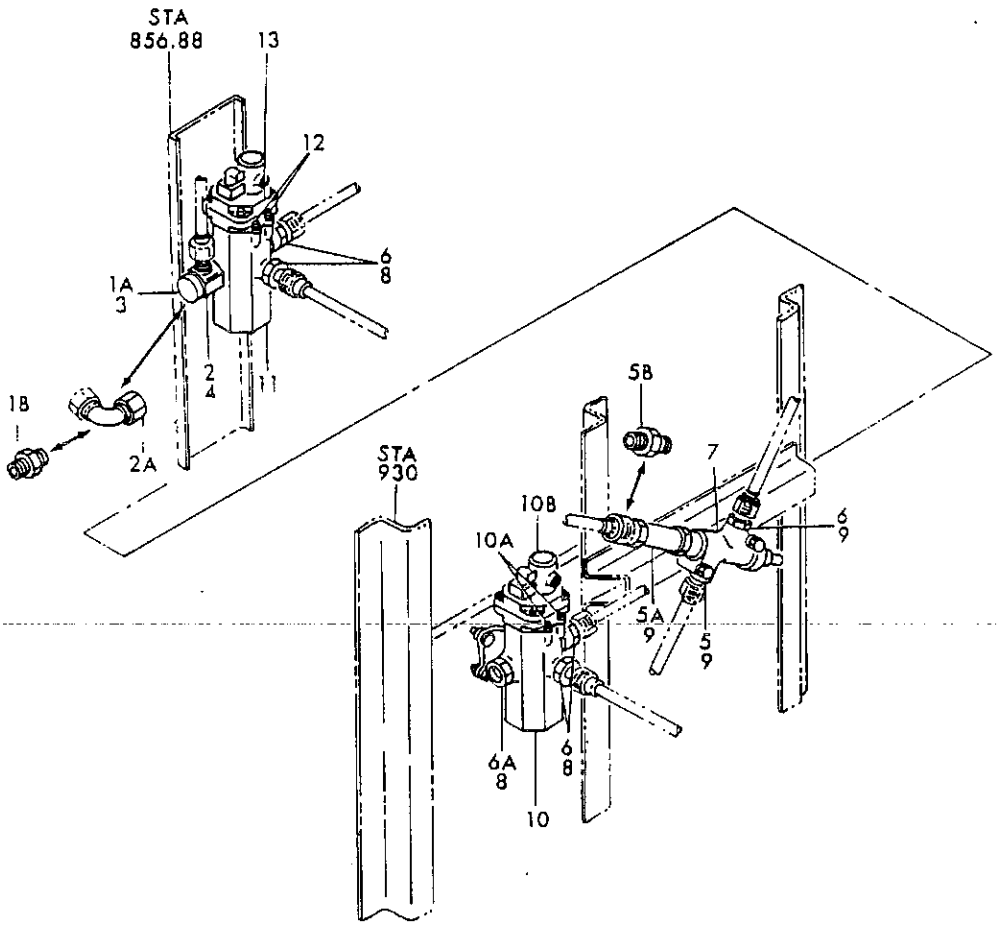


FIGURE 47. VALVE INSTL, MOTOR OPERATED HYDRAULIC (FLIGHT CONTROL (RUDDER CONTROL) ONLY)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	47	65-23419-1	VALVE INSTL, MOTOR OPERATED HYDRAULIC (FLIGHT CONTROL (RUDDER CONTROL) ONLY) (SEE 53-1, FIG. 2, ITEM 12A)		RF
	2A	BACE21AW0808D	. ELBOW		1
	4	109661-1-8	. SEAL, LOCK (V83259)		1
	5	MS21902-6	. UNION		1
	5A	BACV10A506	. VALVE		1
	6	MS21916-8-6	. REDUCER		5
	6A	AN814-8DL	. PLUG AND BLEEDER.		1
	7	3057000-5	. REDUCER, PRESSURE (V77068).		1
			ATTACHING PARTS		
		AN3-11A	. BOLT.		2
		AN960D10	. WASHER.		2
			-------*-------		
	8	NAS1612-8	. PACKING		5
	9	NAS1612-6	. PACKING		3
R	10	10-60710-7	. VALVE ASSY, DC ACTUATED	5299	1
R	10	10-60710-3	. VALVE ASSY, DC ACTUATED	0151	1
R			(OPTIONAL BAC SPEC NO. 10-60710-4)		
R	10	10-60710-4	. VALVE ASSY, DC ACTUATED	0151	1
R			(OPTIONAL TO BAC SPEC NO. 10-60710-3 AND		
R			OPTIONAL BAC SPEC NO. 10-60710-7)		
R	10	10-60710-7	. VALVE ASSY, DC ACTUATED	0151	1
R			(OPTIONAL TO BAC SPEC NO. 10-60710-4)		
R	11	10-60710-7	. VALVE ASSY, DC ACTUATED	5299	1
R	11	10-60710-3	. VALVE ASSY, DC ACTUATED	0151	1
R			(OPTIONAL BAC SPEC NO. 10-60710-4)		
R	11	10-60710-4	. VALVE ASSY, DC ACTUATED	0151	1
R			(OPTIONAL TO BAC SPEC NO. 10-60710-3 AND		
R			OPTIONAL BAC SPEC NO. 10-60710-7)		
R	11	10-60710-7	. VALVE ASSY, DC ACTUATED	0151	1
R			(OPTIONAL TO BAC SPEC NO. 10-60710-4)		
			ATTACHING PARTS		
		AN4-6A	. BOLT.		4
		AN960D416	. WASHER.		4
			-------*-------		
			. FOR REFERENCE TO OTHER VALVE DETAILS, SEE NHA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

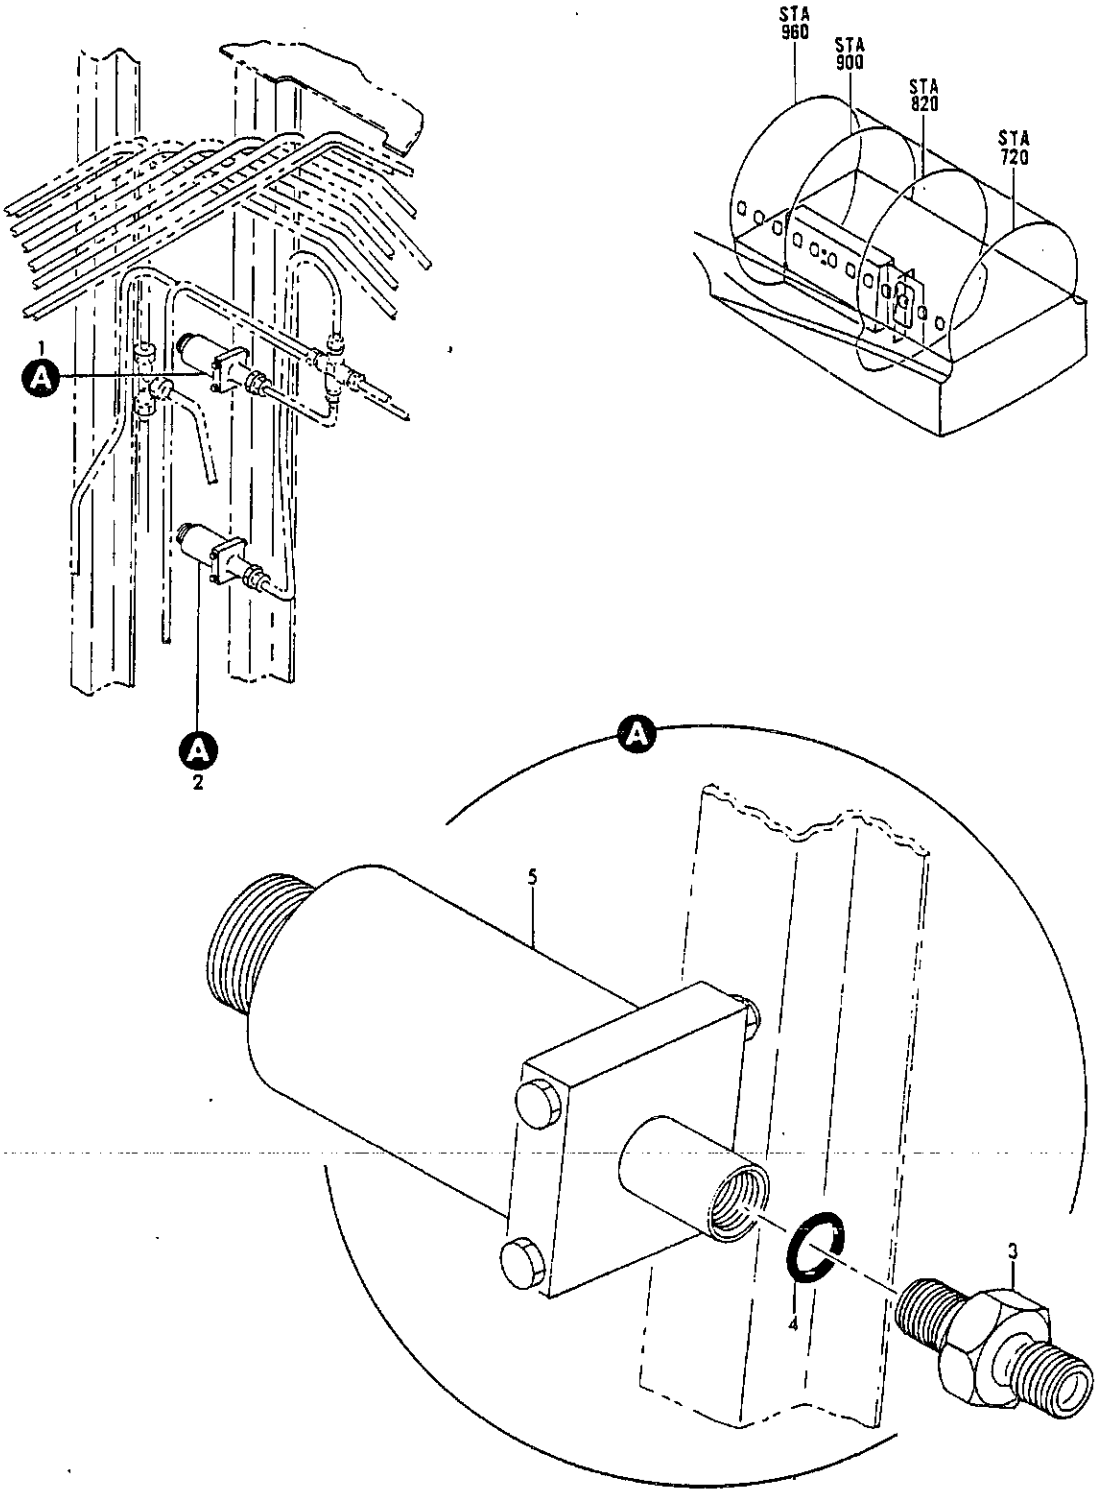
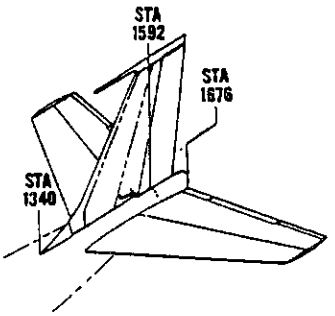


FIGURE 48. SWITCH INSTL, RUDDER HYDRAULIC PRESSURE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
48 1	66-11143	SWITCH INSTL, RUDDER HYDRAULIC PRESSURE (SEE 29-4, FIG. 13, ITEM 161, 29-4, FIG. 14, ITEM 119, 29-4, FIG. 15, ITEM 129, 29-4, FIG. 16, ITEM 115 AND 29-4, FIG. 16A, ITEM 243)		RF
2	66-11143-1	SWITCH INSTL, RUDDER HYDRAULIC PRESSURE (SEE 29-4, FIG. 16, ITEM 115A)		RF
3	60-6913-1	. RESTRICTOR, PRESSURE SWITCH FITTING		1
4	NAS1612-4	. PACKING		1
5	10-3201-1	. SWITCH ASSY, HYDRAULIC PRESSURE (USED ON 66-11143). .		1
5	10-3201-3	. SWITCH ASSY, HYDRAULIC PRESSURE (USED ON 66-11143-1)		1
		ATTACHING PARTS		
	AN3-24A	. BOLT.		2
	AN960D10	. WASHER.		2
	NAS679A3W	. NUT		2
		--------*--------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE



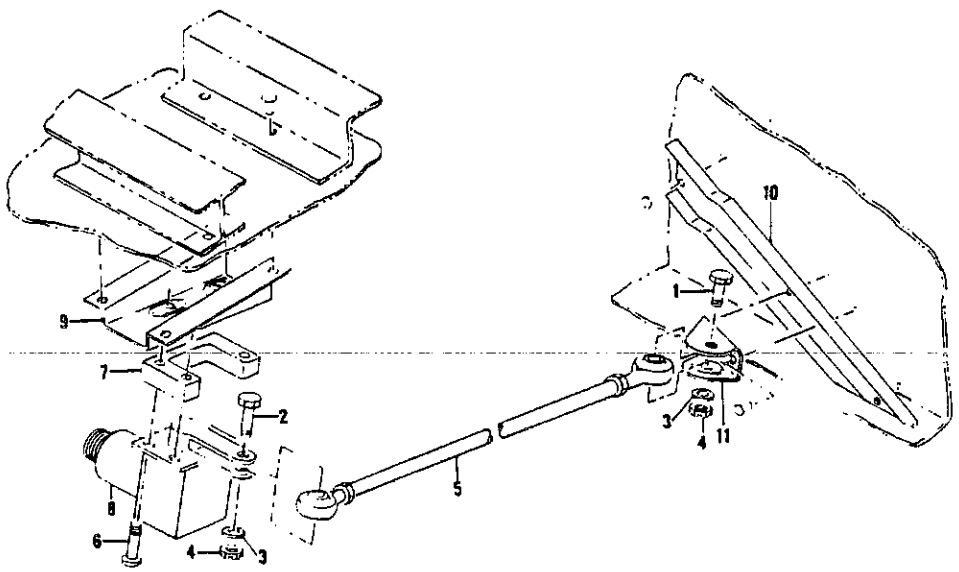


FIGURE 49. TRANSMITTER INSTL, RUDDER POSITION

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
49	65-23411-1	TRANSMITTER INSTL, RUDDER POSITION (SEE FIG. 14, ITEM 14A AND FIG. 14A, ITEM 22)	5199	RF
1	NAS1103-9DW	. BOLT.	5199	1
2	NAS1103-12DW	. BOLT.	5199	1
3	AN960D10	. WASHER.	5199	2
4	AN320-3	. NUT	5199	2
5	BACR24D1-224	. ROD ASSY.	5199	1
6	NAS623-3-14W	. SCREW	5199	4
7	66-13957-1	. BLOCK, RUDDER POSITION TRANSMITTER SPACER	5199	1
8	18-1213	. TRANSMITTER, (V96774)	5199	1
9	69-16960-1	. BRACKET ASSY, RUDDER POSITION TRANSMITTER	5199	1
		ATTACHING PARTS		
	MS20426D5	. RIVET	5199	4
	MS20470D5	. RIVET	5199	4
		-------*-------		
10	69-16966-1	. BRACKET, RUDDER POSITION TRANSMITTER MOUNTING	5199	1
		ATTACHING PARTS		
	MS20470D5	. RIVET	5199	2
		-------*-------		
11	66-13984-1	. BRACE, RUDDER POSITION TRANSMITTER MOUNTING BRACKET	5199	1
		ATTACHING PARTS		
	MS20470D5	. RIVET	5199	5
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

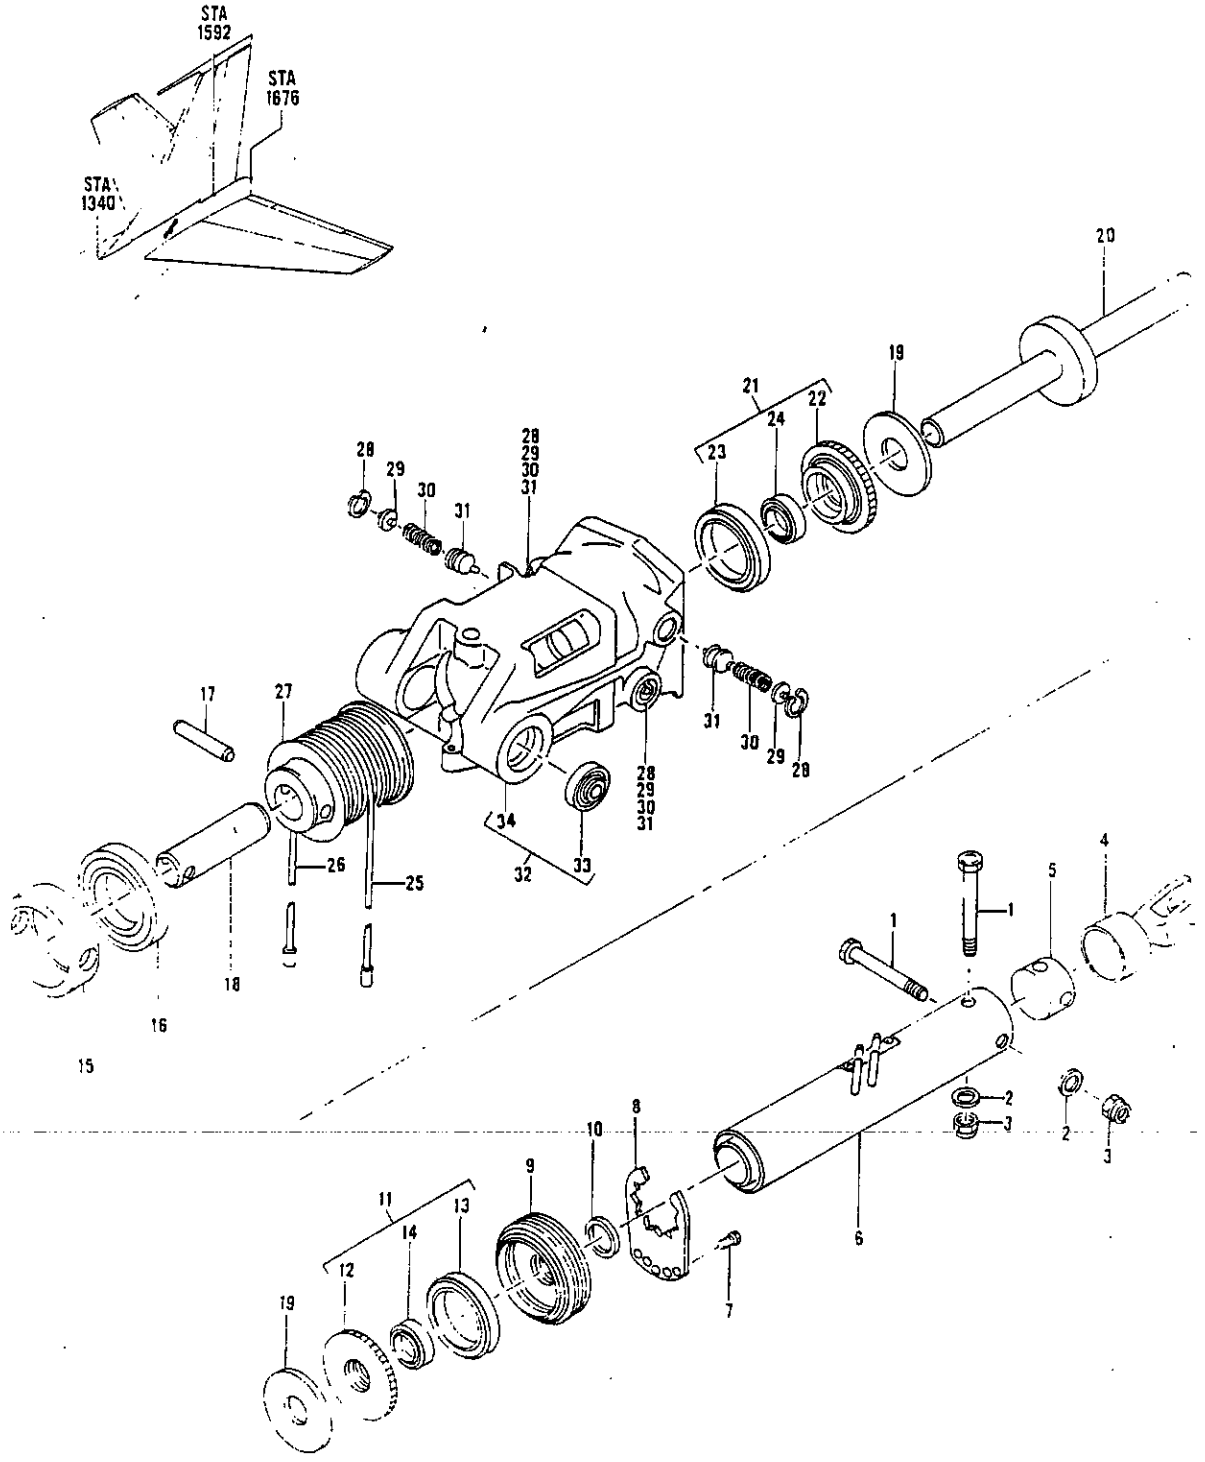


FIGURE 50. ACTUATOR ASSY, RUDDER TRIM CONTROL

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R	50	65-74045-6	ACTUATOR ASSY, RUDDER TRIM CONTROL (SEE FIG. 28, ITEM 8 AND FIG. 28A, ITEM 8)	0150	RF
R R R R		65-74045-9	ACTUATOR ASSY, RUDDER TRIM CONTROL (SEE FIG. 28, ITEM 8 AND FIG. 28A, ITEM 8)	5199	RF
	1	NAS1103-22W	. BOLT.		2
	2	AN960D10	. WASHER.		2
	3	NAS679A3W	. NUT		2
	4	69-10181	. FORK, RUDDER TRIM ACTUATOR.		1
	5	63-12031-1	. PLUG, RUDDER TRIM CONTROL ACTUATOR SEAL		1
R R	6	10-60173-1	. ACTUATOR ASSY, BALL BEARING SCREW (USED ON 65-74045-1, -4 AND -6)	0150	1
R R	6	10-60173-2	. ACTUATOR ASSY, BALL BEARING SCREW (USED ON 65-74045-9)	5199	1
	7	AN500A8-6	. SCREW		1
	8	3-60588-1	. RETAINER, TAB NUT		1
	9	3-48179-1	. NUT, BRAKE SCREW RETAINER		1
	10	3-53457-1	. SEAL, AILERON TAB BRAKE HOUSING		1
	11	90-4011-1	. PLATE ASSY, BRAKE SCREW		1
	12	90-4011-3	. . PLATE		1
	13	BACB10A30DD	. . BEARING		1
	14	BACB10A27DD	. . BEARING		1
	15	30-2221	. RETAINER, INBOARD AILERON TAB MECHANISM SPACER.		1
	16	AN202KP23B	. BEARING		1
	17	3-89073-1	. PIN, CLOSE TOLERANCE 1/4 DIA.		1
R R	19	66-10971-1	. WASHER, RUDDER TRIM ACTUATOR THRUST (USED ON 65-74045-4, -5 AND -6)	0150	2
R	19	69-58496-1	. WASHER, ACTUATOR THRUST (USED ON 65-74045-9).	5199	2
	20	66-35011-1	. SHAFT		1
	21	90-4011-1	. PLATE ASSY, BRAKE SCREW (OPTIONAL 90-4011-2)		1
	21	90-4011-2	. PLATE ASSY, BRAKE SCREW		1
	22	90-4011-3	. . PLATE, BRAKE SCREW (USED ON 90-4011-1).		1
	22	90-4011-4	. . PLATE, (USED ON 90-4011-2).		1
	23	BACB10A30DD	. . BEARING		1
	24	BACB10A27DD	. . BEARING, (USED ON 90-4011-1).		1
	25	BACC13AM3D774	. CABLE ASSY.		1
	26	BACC13AM3E806	. CABLE ASSY.		1
		AN669L3LH	. . TERMINAL, (USED ON BACC13G319-780 AND BACC13G319-774)		1
		AN669L3RH	. . TERMINAL, (USED ON BACC13G320-812 AND BACC13G320-806)		1
		BACT14A3	. . TERMINAL.		1
	27	65-13196	. DRUM, TAB CONTROL		1
	28	NAS669-43	. RING.		4
	29	3-53245-1	. RETAINER, AILERON TAB BRAKE SPRING.		4
	30	3-53244-1	. SPRING, AILERON TAB BRAKE RATCHET		4
	31	6-36734-1	. PLUNGER, AILERON TAB BRAKE RATCHET.		4
	32	50-3145-3007	. HOUSING ASSY, INBOARD AILERON TAB MECHANISM		1
	33	AN200KP4	. . BEARING		1
	34	50-3145-3008	. . HOUSING, INBOARD AILERON TAB MECHANISM.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

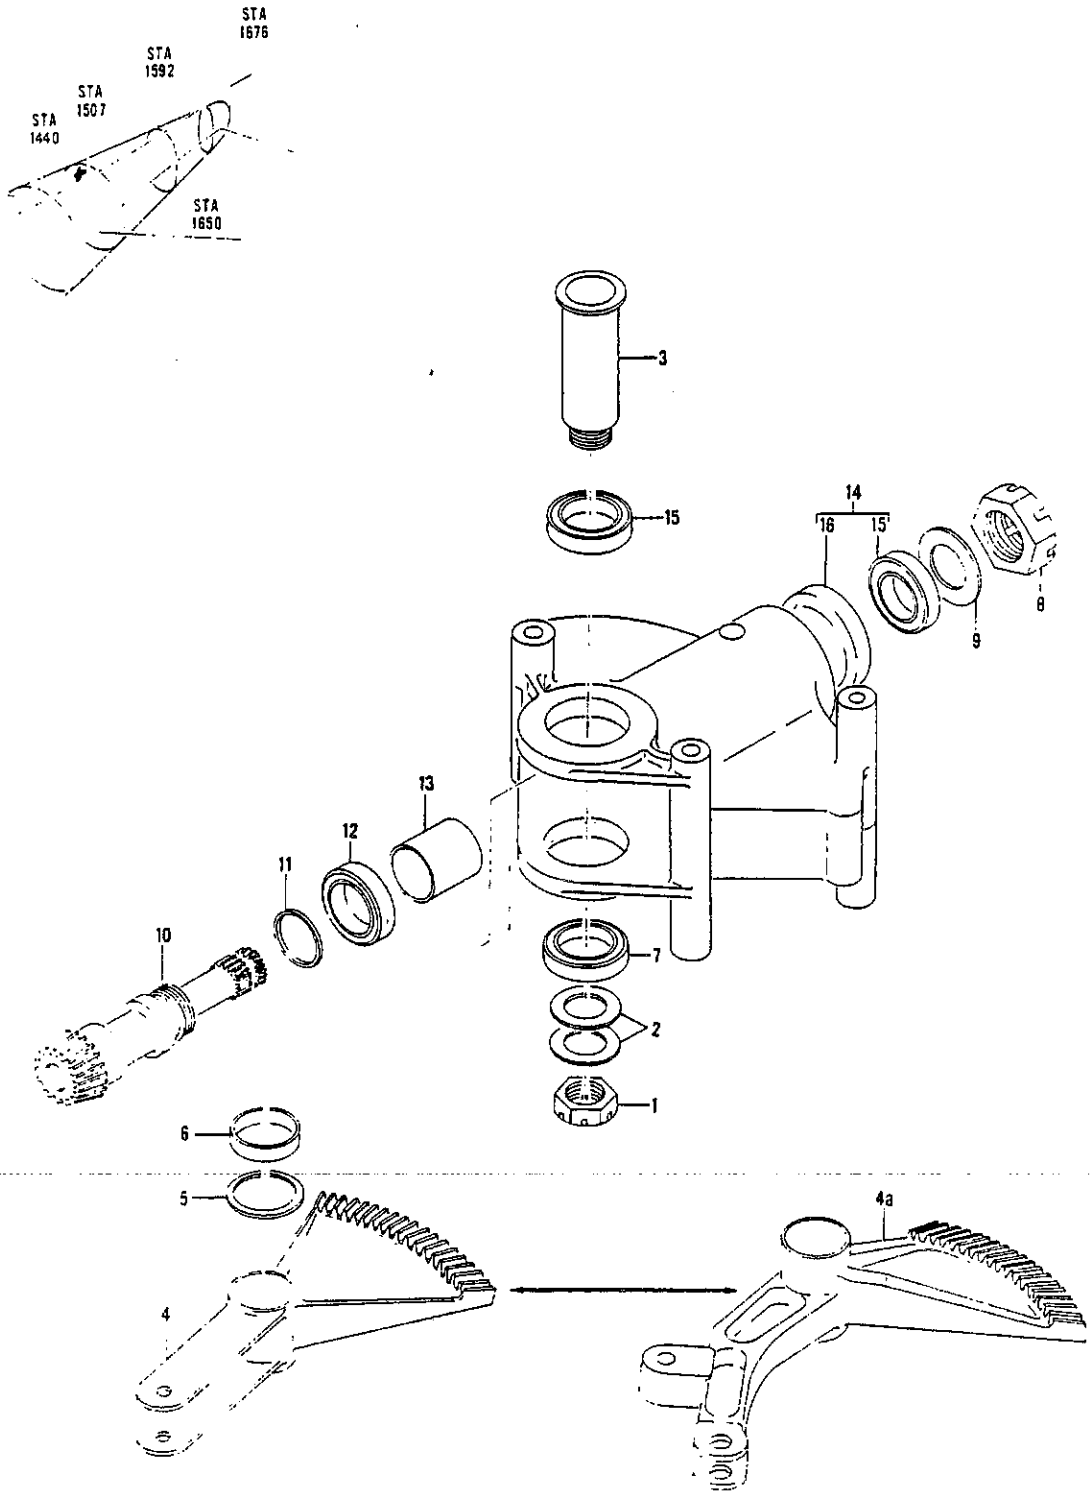


FIGURE 51. GEAR BOX ASSY., RUDDER TRIM

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	51	65-46075-3	GEAR BOX ASSY, (SEE FIG. 28, ITEM 16A AND FIG. 28A, ITEM 14) (OPTIONAL 65-46075-2 WITH 69-12310)	0150	RF
R		65-46075-2	GEAR BOX ASSY, (SEE FIG. 28, ITEM 16A). (OPTIONAL TO 65-46075-3)	0150	RF
R		65-46075-4	GEAR BOX ASSY, RUDDER TRIM (SEE FIG. 28A, ITEM 14).	5199	RF
	1	AN320D12	. NUT		1
	2	AN960-1216L	. WASHER.		2
	3	66-24034	. SHAFT, RUDDER TRIM GEAR BOX		1
	4	65-10380	. GEAR, RUDDER TRIM (USED ON 65-46075-2).		1
	4A	65-31666-1	. GEAR, RUDDER TRIM SECTOR (USED ON 65-46075-3, -4. AND -5)		1
	5	63-9639-1	. SHIM, RUDDER TRIM GEAR BOX LAMINATED (OPTIONAL. 63-9639)		1
	6	63-9638-5	. SPACER, RUDDER TRIM GEAR BOX (USED ON 65-46075-2. -3 AND -4)		1
	7	BACB10A29DD	. BEARING		1
	8	AN320D16	. NUT		1
	9	AN960-1616L	. WASHER.		1
	10	69-30093	. GEAR, RUDDER TRIM GEAR BOX PINION		1
	11	63-9639-1	. SHIM, RUDDER TRIM GEAR BOX LAMINATED (OPTIONAL. 63-9639)		1
	12	BACB10A29DD	. BEARING		1
	13	63-9638-4	. SPACER, RUDDER TRIM GEAR BOX.		1
R	14	65-74046	. HOUSING ASSY, RUDDER TRIM GEAR BOX. (OPTIONAL 65-74046-3)	0150	1
R	14	65-74046-3	. HOUSING ASSY, RUDDER TRIM GEAR BOX. (OPTIONAL TO 65-74046)	0150	1
R	14	65-74046-3	. HOUSING ASSY. (OPTIONAL 65-74046-6)	5199	1
R	14	65-74046-6	. HOUSING ASSY. (OPTIONAL TO 65-74046-3)	5199	1
	15	BACB10A29DD	. . BEARING		2
R	16	65-74046-1	. . HOUSING, RUDDER TRIM GEAR BOX (USED ON 65-74046).	0150	1
	16	65-74046-4	. . HOUSING, RUDDER TRIM GEAR BOX (USED ON 65-74046-3)		1
R	16	65-79046-7	. . HOUSING, (USED ON 65-74046-6)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

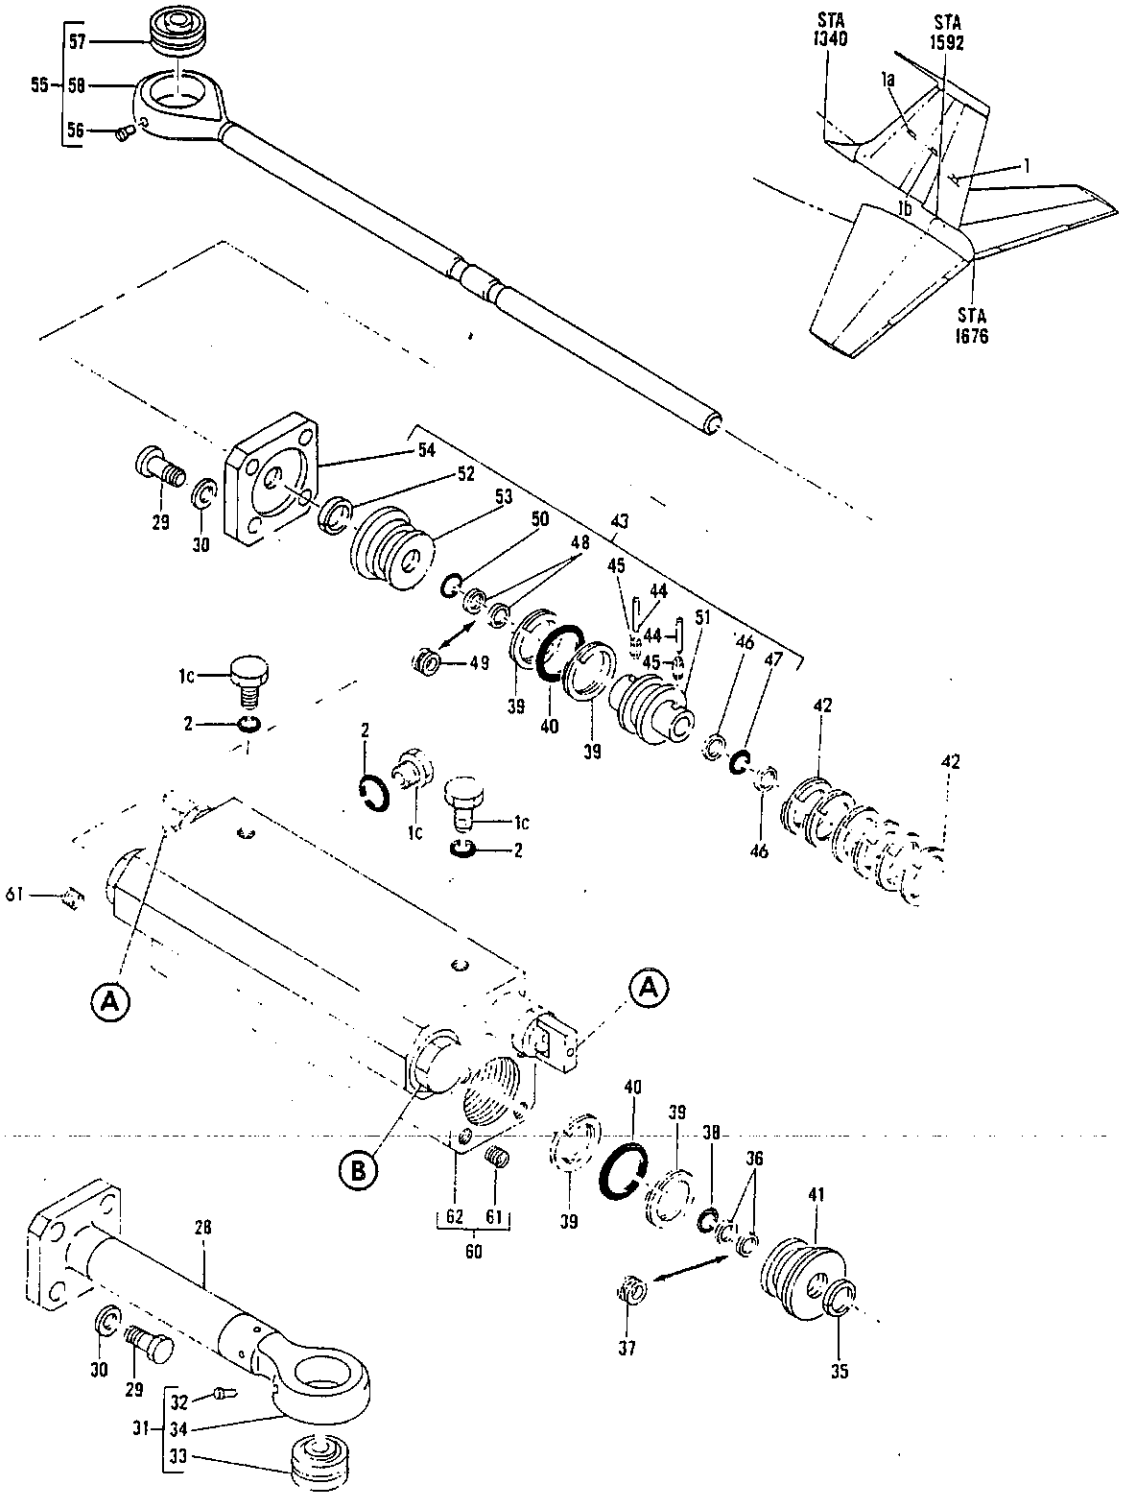


FIGURE 52. DAMPER ASSY, RUDDER CONTROL TAB (FLIGHT CONTROL ONLY) (SHEET 1)

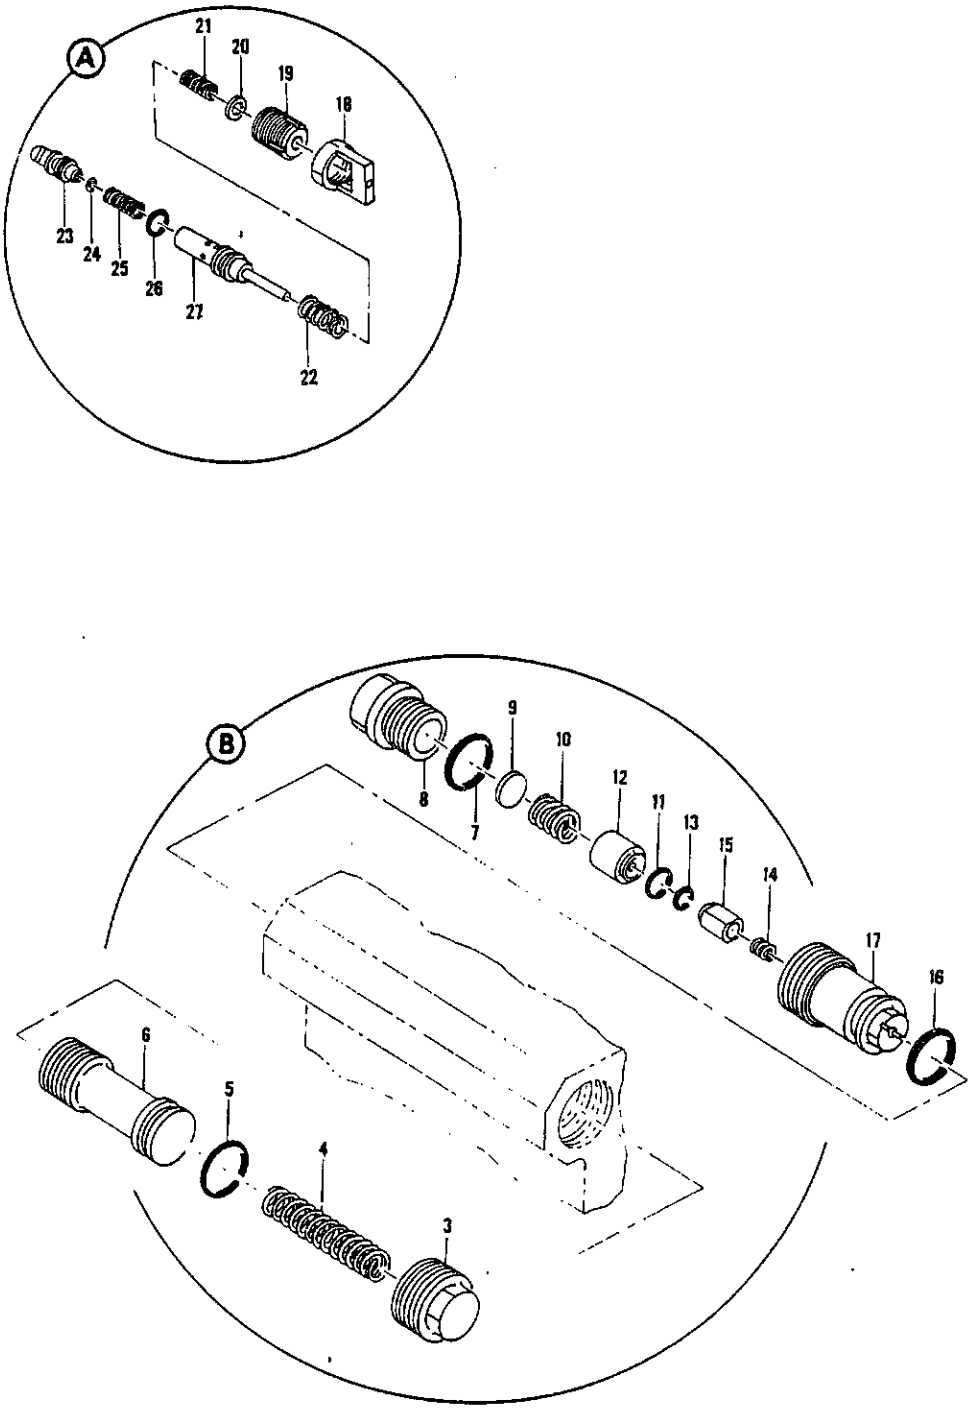


FIGURE 52. DAMPER ASSY, RUDDER CONTROL TAB (FLIGHT CONTROL ONLY) (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
52 1A	65-8353-7	DAMPER ASSY, RUDDER CONTROL TAB (FLIGHT CONTROL ONLY) . (SEE FIG. 30A, ITEM 77)		RF
1C	AN814-2L	. PLUG AND BLEEDER.		3
2	NAS1612-2	. PACKING		3
3	66-8651	. PLUG, RESERVOIR DAMPER.		1
4	63-8351	. SPRING, RESERVOIR DAMPER COMPRESSION.		1
5	NAS1611-210	. PACKING		1
6	69-3011	. PISTON, DAMPER RESERVOIR.		1
7	NAS1612-10	. PACKING		1
8	66-8654	. CAP, DAMPER COMPENSATING VALVE.		1
9	62261	. FILTER, DISK (V05228) (OPTIONAL AA70-1908E1 (V18350))		1
9	AA70-1908E1	. FILTER, DISK (V18350) (OPTIONAL TO 62261 (V05228))		1
10	63-8353	. SPRING, DAMPER COMPRESSION.		1
11	NAS1611-111	. PACKING		1
12	66-8652	. SLIDE, DAMPER COMPENSATING VALVE.		1
13	NAS1611-008	. PACKING		1
14	63-8352	. SPRING, DAMPER COMPRESSION.		1
15	66-8653	. POPPET, DAMPER COMPENSATING VALVE		1
16	NAS1611-210	. PACKING		1
17	66-8655	. BODY, DAMPER COMPENSATING VALVE		1
18	6-84679-3	. STOP, RELIEF VALVE (OPTIONAL 6-84679-2)		2
19	6-84673	. RETAINER, RELIEF VALVE SPRING		2
20	AN960-10	. WASHER.		2
21	3-99002	. SPRING, COMPRESSION		2
22	3-99003-1	. SPRING, COMPRESSION		2
23	6-84668-1	. VALVE, CONTROL SERVICE SNUBBER.		2
24	66-3689	. PLATE, ORIFICE.		2
25	3-99005	. SPRING, COMPRESSION		2
26	NAS1611-012	. PACKING		2
27	9-67534	. RETAINER, VALVE ORIFICE		2
28	BACN12D33-4F	. NAMEPLATE		1
29	AN74-6	. BOLT.		8
30	AN960D416L	. WASHER.		8
31	69-8610	. TERMINAL ASSY, HEAD END DAMPER RUDDER CONTROL TAB		1
32	NAS516-1	. . FITTING		1
33	BACB10C134H	. . BEARING		1
34	69-8610-1	. . TERMINAL, HEAD END DAMPER RUDDER CONTROL TAB.		1
35	AN6232-1	. FELT STRIP.		1
37	S11370-012	. SEAL, CHANNEL (V97820) (USED ON 65-8353-5 AND -7)		1
38	NAS1611-012	. PACKING		1
39	MS28782-15	. RING.		4
40	NAS1611-210	. PACKING		2
41	69-3010-1	. BEARING, RUDDER CONTROL TAB SNUBBER DAMPER.		1
42	MS28782-15	. RING.		6
43	69-8710-2	. PISTON ASSY, RUDDER CONTROL TAB DAMPER (USED ON 65-8353-5 AND -7)		1
44	NAS561-3-10	. . PIN		2
45	NAS561-5-10	. . PIN		2
46	MS28782-7	. . RING.		2
47	BACP11F7	. . PACKING		1
49	S11370-012	. . SEAL, CHANNEL (V97820) (USED ON 69-8710-2 AND -3)		1
50	BACF11F7	. . PACKING		1
51	66-2928-1	. . PISTON, RUDDER CONTROL TAB DAMPER		1
52	AN6232-1	. . FELT STRIP.		1
53	69-3010-1	. . BEARING, RUDDER CONTROL TAB SNUBBER DAMPER.		1
54	66-2927	. . PLATE, RUDDER CONTROL TAB DAMPER END.		1
55	69-3012-3000	. . ROD ASSY, RUDDER CONTROL TAB DAMPER		1
56	NAS516-1	. . . FITTING		1
57	BACB10C134H	. . . BEARING		1
58	69-3012-3	. . . ROD, RUDDER CONTROL TAB DAMPER.		1
60	65-5870	. HOUSING ASSY, RUDDER CONTROL TAB DAMPER (OPTIONAL 65-3542-2)		1
60	65-3542-2	. HOUSING ASSY, RUDDER CONTROL TAB DAMPER (OPTIONAL TO 65-5870)		1
61	BACS13P4C4	. . SLEEVE.		8
62	65-5870-1	. . HOUSING, RUDDER CONTROL TAB DAMPER (USED ON 65-8070)		1
62	65-3542-3	. . HOUSING, RUDDER CONTROL TAB DAMPER (USED ON 65-3542-2)		1
		. FOR REFERENCE TO OTHER DAMPER DETAILS, SEE NHA.		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING Intercontinental 707

PARTS CATALOG

SECTION 10

ELEVATORS

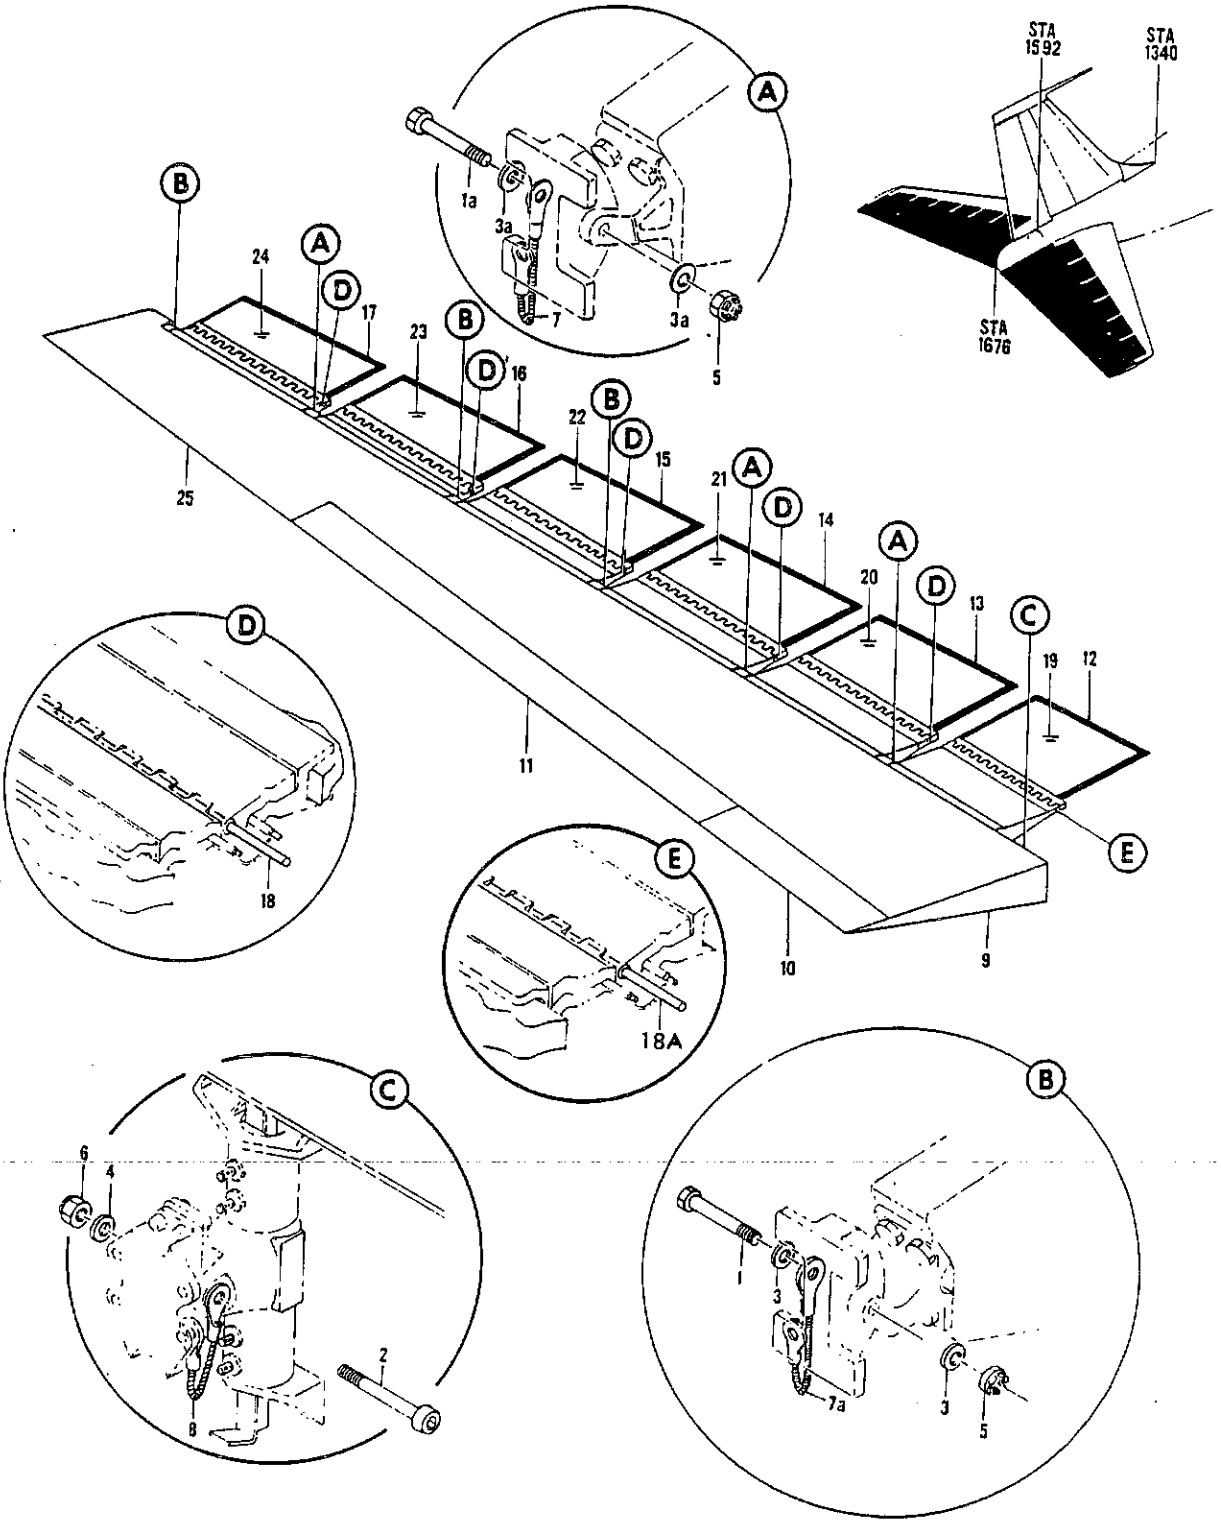


FIGURE 1. ELEVATOR INSTL, HORIZONTAL TAIL

	FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	1		65-6088-11	ELEVATOR INSTL, HORIZONTAL TAIL (LH) (SEE 55-2, FIG. 2, ITEM 1)		RF
			65-6088-12	ELEVATOR INSTL, HORIZONTAL TAIL (RH) (SEE 55-2, FIG. 2, ITEM 1)		RF
		1	NAS1105-29DW	. BOLT.		3
		1A	NAS1105-33DW	. BOLT.		3
		2	6-84143-3001	. BOLT, THRUST HINGE.		1
		3	AN960D516	. WASHER.		6
		3A	AN960-516	. WASHER.		6
		4	MS20002C6	. WASHER.		1
		5	AN320-5	. NUT		6
		6	AN310-6	. NUT		1
		7	BACJ40K7A6A5	. JUMPER ASSY		3
		7A	BACJ40K7A28A5	. JUMPER ASSY		3
		8	BACJ40K6A28A5	. JUMPER ASSY		1
		9	65-82084-1	. ELEVATOR AND TAB ASSY, SECTION 84 (LH ONLY)		1
		9	65-82084-3	. SPARES ASSY, SECTION 84 ELEVATOR AND BALANCE PANEL. (CONSISTS OF PARTS DENOTED BY (S)) (LH ONLY)		RF
		9	65-82084-2	. ELEVATOR AND BALANCE ASSY, SECTION 84 (RH ONLY)		1
		9	65-82084-4	. SPARES ASSY, SECTION 84 ELEVATOR AND BALANCE PANEL. (CONSISTS OF PARTS DENOTED BY (S)) (RH ONLY)		RF
R R		10	S 65-5346-1	. . TAB INSTL, STABILIZER ACTUATED ELEVATOR (LH ONLY) (SEE FIG. 10)	0150	1
R R		10	65-5346-1	. . TAB INSTL, STABILIZER ACTUATED ELEVATOR (LH ONLY) (VARIABLE DWG;65-5346-5001) (SEE FIG. 10)	5199	1
R R		10	S 65-5346-2	. . TAB INSTL, STABILIZER ACTUATED ELEVATOR (RH ONLY) (SEE FIG. 10)	0150	1
R R		10	65-5346-2	. . TAB INSTL, STABILIZER ACTUATED ELEVATOR (RH ONLY) (VARIABLE DWG;65-5346-5002) (SEE FIG. 10)	5199	1
R R		11	S 65-5347-1	. . TAB INSTL, ELEVATOR CONTROL (LH ONLY) (SEE FIG. 9)	0150	1
R R		11	65-5347-1	. . TAB INSTL, STABILIZER ACTUATED ELEVATOR (LH ONLY) (VARIABLE DWG;65-5347-5001) (SEE FIG. 9)	5199	1
R R		11	S 65-5347-2	. . TAB INSTL, ELEVATOR CONTROL (RH ONLY) (SEE FIG. 9)	0150	1
R R		11	65-5347-2	. . TAB INSTL, STABILIZER ACTUATED ELEVATOR (RH ONLY) (VARIABLE DWG;65-5347-5002) (SEE FIG. 9)	5199	1
		12	S 65-8318-1	. . SEAL INSTL, BAY NO. 0 ELEVATOR BALANCE CAVITY (LH ONLY) (SEE FIG. 2)		1
		12	S 65-8318-2	. . SEAL INSTL, BAY NO. 0 ELEVATOR BALANCE CAVITY (RH ONLY) (SEE FIG. 2)		1
		13	65-5647-1	. . SEAL INSTL, BAY NO. 1 ELEVATOR BALANCE CAVITY (LH ONLY) (SEE FIG. 2)		1
		13	65-5647-2	. . SEAL INSTL, BAY NO. 1 ELEVATOR BALANCE CAVITY (RH ONLY) (SEE FIG. 2)		1
		14	S 65-5647-3	. . SEAL INSTL, BAY NO. 2 ELEVATOR BALANCE CAVITY (LH ONLY) (SEE FIG. 2)		1
		14	65-5647-4	. . SEAL INSTL, BAY NO. 2 ELEVATOR BALANCE CAVITY (RH ONLY) (SEE FIG. 2)		1
		15	65-5647-5	. . SEAL INSTL, BAY NO. 3 ELEVATOR BALANCE CAVITY (LH ONLY) (SEE FIG. 2)		1
		15	65-5647-6	. . SEAL INSTL, BAY NO. 3 ELEVATOR BALANCE CAVITY (RH ONLY) (SEE FIG. 2)		1
		16	65-5647-7	. . SEAL INSTL, BAY NO. 4 ELEVATOR BALANCE CAVITY (LH ONLY) (SEE FIG. 2)		1
		16	65-5647-8	. . SEAL INSTL, BAY NO. 4 ELEVATOR BALANCE CAVITY (RH ONLY) (SEE FIG. 2)		1
		17	65-5647-9	. . SEAL INSTL, BAY NO. 5 ELEVATOR BALANCE CAVITY (LH ONLY) (SEE FIG. 2)		1
		17	S 65-5647-10	. . SEAL INSTL, BAY NO. 5 ELEVATOR BALANCE CAVITY (RH ONLY) (SEE FIG. 2)		1
		18	S MS20253P4-3960	. . PIN, (BAY NO. 1, 2, 3, 4 AND 5)		5
		18A	S MS20253P4-3066	. . PIN, (BAY NO. 0).		1
		19	S 65-30007-3017	. . PANEL ASSY, BAY NO. 0 LH SIDE ELEVATOR BALANCE (LH ONLY) (SEE FIG. 3)		1
		19	65-30007-3018	. . PANEL ASSY, BAY NO. 0 RH SIDE ELEVATOR BALANCE (RH ONLY) (SEE FIG. 3)		1
		20	65-30007-3003	. . PANEL ASSY, BAY NO. 1 LH SIDE ELEVATOR BALANCE (LH ONLY) (SEE FIG. 3)		1
		20	65-30007-3004	. . PANEL ASSY, BAY NO. 1 RH SIDE ELEVATOR BALANCE (RH ONLY) (SEE FIG. 3)		1
		21	65-30007-3005	. . PANEL ASSY, BAY NO. 2 LH SIDE ELEVATOR BALANCE (LH ONLY) (SEE FIG. 3)		1
		21	65-30007-3006	. . PANEL ASSY, BAY NO. 2 RH SIDE ELEVATOR BALANCE (RH ONLY) (SEE FIG. 3)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1 22	65-30007-3007	. . PANEL ASSY, BAY NO. 3 LH SIDE ELEVATOR BALANCE (LH ONLY) (SEE FIG. 3)		1
22	65-30007-3008	. . PANEL ASSY, BAY NO. 3 RH SIDE ELEVATOR BALANCE (RH ONLY) (SEE FIG. 3)		1
23	65-30007-3011	. . PANEL ASSY, BAY NO. 4 LH SIDE ELEVATOR BALANCE (LH ONLY) (SEE FIG. 3)		1
23	65-30007-3012	. . PANEL ASSY, BAY NO. 4 RH SIDE ELEVATOR BALANCE (RH ONLY) (SEE FIG. 3)		1
24	65-30007-3015	. . PANEL ASSY, BAY NO. 5 LH SIDE ELEVATOR BALANCE (LH ONLY) (SEE FIG. 3)		1
24	S 65-30007-3016	. . PANEL ASSY, BAY NO. 5 RH SIDE ELEVATOR BALANCE (RH ONLY) (SEE FIG. 3)		1
25	S 65-48584-1	. . ELEVATOR ASSY, (LH ONLY) (SEE FIG. 4A).		1
25	S 65-48584-2	. . ELEVATOR ASSY, (RH ONLY) (SEE FIG. 4A).		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

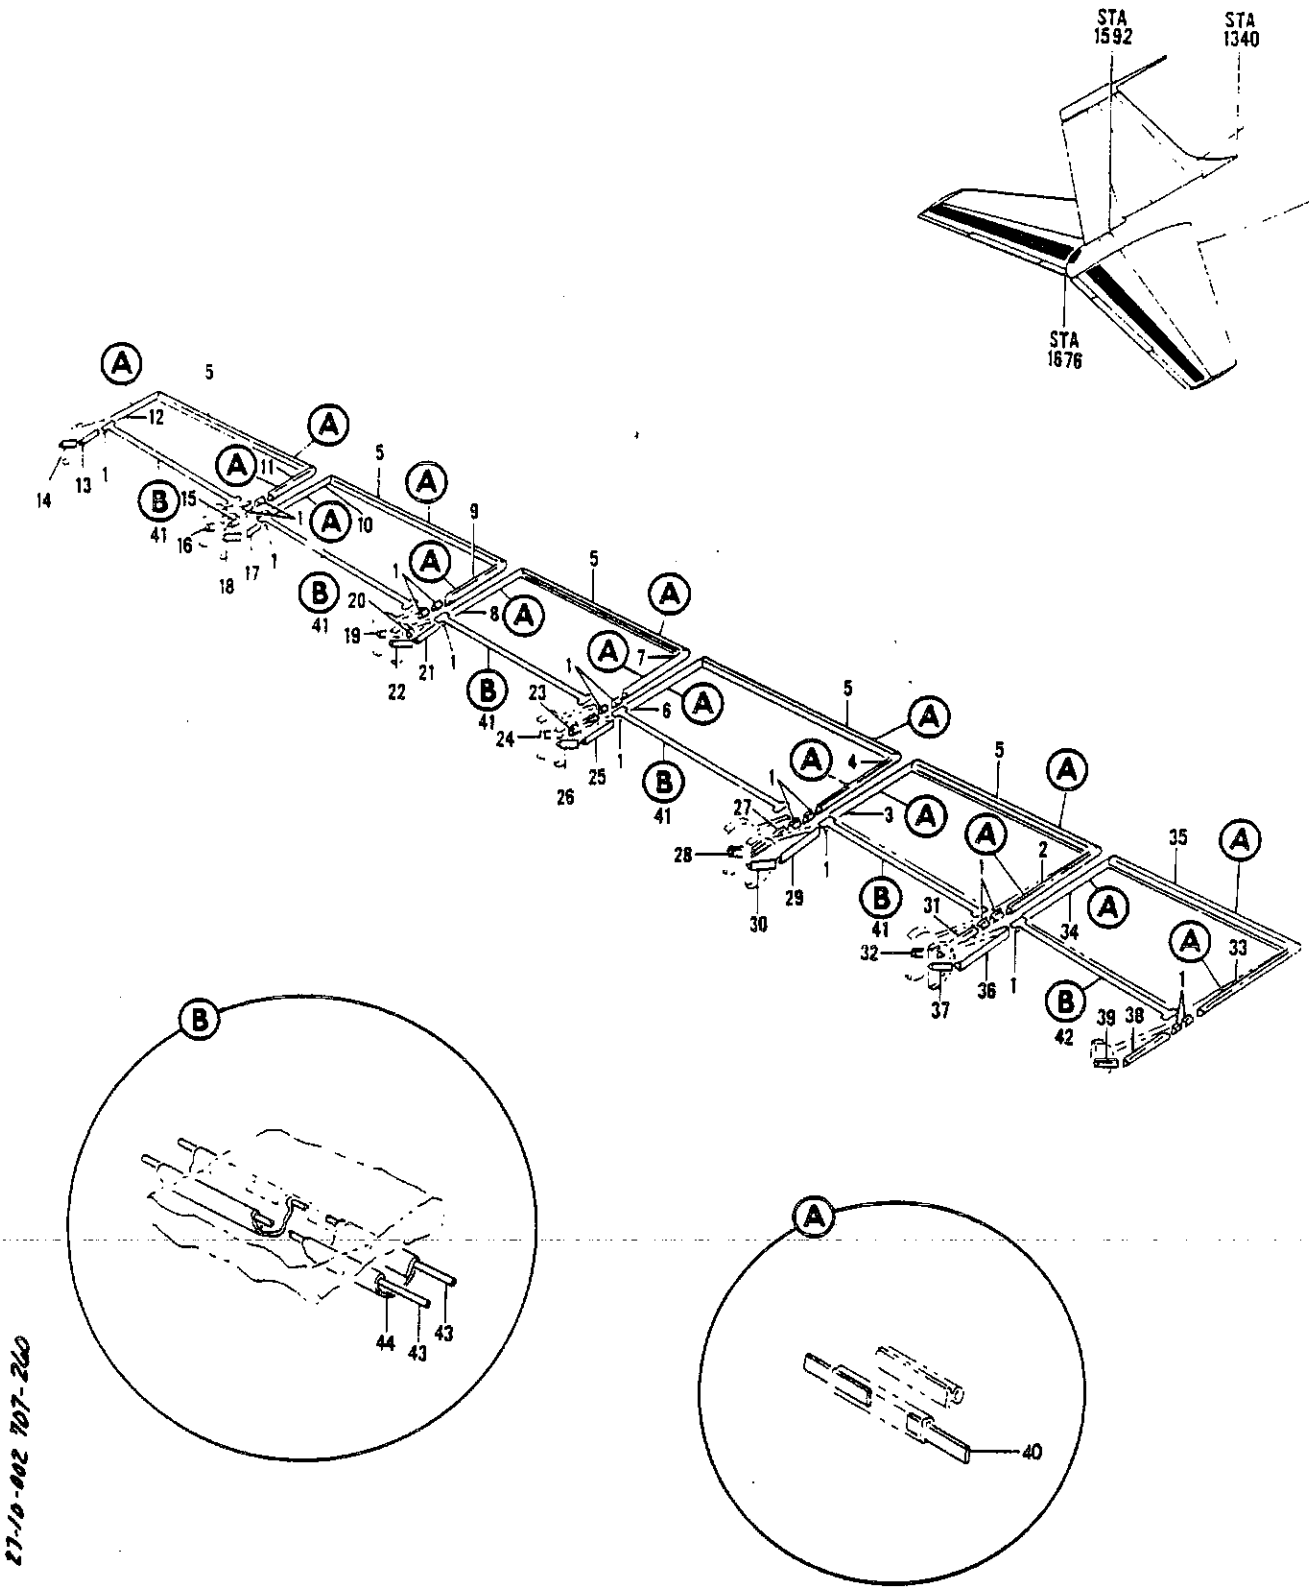


FIGURE 2. SEAL INSTL, ELEVATOR BALANCE CAVITY BAY

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2	65-8318-1	SEAL INSTL, BAY NO. 0 ELEVATOR BALANCE CAVITY (LH) (SEE FIG. 1, ITEM 12)		RF
	65-8318-2	SEAL INSTL, BAY NO. 0 ELEVATOR BALANCE CAVITY (RH) (SEE FIG. 1, ITEM 12)		RF
	65-5647-1	SEAL INSTL, ELEVATOR BALANCE CAVITY BAY NO. 1 (LH) (SEE FIG. 1, ITEM 13)		RF
	65-5647-2	SEAL INSTL, ELEVATOR BALANCE CAVITY BAY NO. 1 (RH) (SEE FIG. 1, ITEM 13)		RF
	65-5647-3	SEAL INSTL, ELEVATOR BALANCE CAVITY BAY NO. 2 (LH) (SEE FIG. 1, ITEM 14)		RF
	65-5647-4	SEAL INSTL, ELEVATOR BALANCE CAVITY BAY NO. 2 (RH) (SEE FIG. 1, ITEM 14)		RF
	65-5647-5	SEAL INSTL, ELEVATOR BALANCE CAVITY BAY NO. 3 (LH) (SEE FIG. 1, ITEM 15)		RF
	65-5647-6	SEAL INSTL, ELEVATOR BALANCE CAVITY BAY NO. 3 (RH) (SEE FIG. 1, ITEM 15)		RF
	65-5647-7	SEAL INSTL, ELEVATOR BALANCE CAVITY BAY NO. 4 (LH) (SEE FIG. 1, ITEM 16)		RF
	65-5647-8	SEAL INSTL, ELEVATOR BALANCE CAVITY BAY NO. 4 (RH) (SEE FIG. 1, ITEM 16)		RF
	65-5647-9	SEAL INSTL, ELEVATOR BALANCE CAVITY BAY NO. 5 (LH) (SEE FIG. 1, ITEM 17)		RF
	65-5647-10	SEAL INSTL, ELEVATOR BALANCE CAVITY BAY NO. 5 (RH) (SEE FIG. 1, ITEM 17)		RF
1	10-2737-12	. SEAL, FABRIC COVERED AERODYNAMIC STRIP.		3
2	10-2737-17	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-1 AND -2)		1
3	10-2737-19	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-1 AND -2)		1
4	10-2737-23	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-3 AND -4)		1
5	10-2737-18	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-1, -2, -3, -4, -5, -6, -7, -8, -9 AND -10)		1
6	10-2737-24	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-3 AND -4)		1
7	10-2737-28	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-5 AND -6)		1
8	10-2737-29	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-5 AND -6)		1
9	10-2737-33	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-7 AND -8)		1
10	10-2737-34	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-7 AND -8)		1
11	10-2737-38	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-9 AND -10)		1
12	10-2737-39	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-9 AND -10)		1
13	10-2737-118	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-9)		1
13	10-2737-151	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-10)		1
14	10-2737-119	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-9)		1
14	10-2737-152	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-10)		1
15	10-2737-120	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-9)		1
15	10-2737-153	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-10)		1
16	10-2737-121	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-9)		1
16	10-2737-154	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-10)		1
17	10-2737-102	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-7)		1
17	10-2737-135	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-8)		1
18	10-2737-103	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-7)		1
18	10-2737-136	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-8)		1
19	10-2737-107	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-7)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2 19	10-2737-140	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-8)		1
20	10-2737-106	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-7)		1
20	10-2737-139	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-8)		1
21	10-2737-108	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-5)		1
21	10-2737-141	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-6)		1
22	10-2737-109	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-5)		1
22	10-2737-142	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-6)		1
23	10-2737-104	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-5)		1
23	10-2737-137	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-6)		1
24	10-2737-105	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-5)		1
24	10-2737-138	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-6)		1
25	10-2737-114	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-3)		1
25	10-2737-147	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-4)		1
26	10-2737-115	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-3)		1
26	10-2737-148	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-4)		1
27	10-2737-116	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-3)		1
27	10-2737-149	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-4)		1
28	10-2737-117	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-3)		1
28	10-2737-150	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-4)		1
29	10-2737-110	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-1)		1
29	10-2737-143	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-2)		1
30	10-2737-111	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-1)		1
30	10-2737-144	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-2)		1
31	10-2737-112	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-1)		1
31	10-2737-145	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-2)		1
32	10-2737-113	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-1)		1
32	10-2737-146	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-5647-2)		1
33	10-60120-55	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-8318-1 AND -2)		1
34	10-60120-53	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-8318-1 AND -2)		1
35	10-60120-54	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-8318-1 AND -2)		1
36	10-60120-45	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-8318-1)		1
36	10-60120-46	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-8318-2)		1
37	10-60120-48	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-8318-1)		1
37	10-60120-47	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-8318-2)		1
38	10-60120-49	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-8318-1)		1
38	10-60120-50	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-8318-2)		1
39	10-60120-51	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-8318-1)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
2 39	10-60120-52	. SEAL, FABRIC COVERED AERODYNAMIC STRIP (USED ON . . . 65-8318-2)		1
40	BACS40A8	. SHIM.		AR
41	90-3151-9	. SEAL ASSY, RUDDER AND ELEVATOR BALANCE PANEL HINGE. . (USED ON 65-5647-1, -2, -3, -4, -5, -6, -7, -8, -9 AND -10)		1
42	90-3151-3000	. SEAL ASSY, RUDDER AND ELEVATOR BALANCE PANEL HINGE. . (USED ON 65-8318-1 AND -2)		1
43	BACP18G2-3891	. . PIN (USED ON 90-3151-9)		2
43	BACP18G2-2990	. . PIN (USED ON 90-3151-3000).		2
44	90-3151-10	. . SEAL, RUDDER AND ELEVATOR BALANCE PANEL HINGE . . . FABRIC (USED ON 90-3151-9)		1
44	90-3151-3001	. . SEAL, RUDDER AND ELEVATOR BALANCE PANEL HINGE . . . FABRIC (USED ON 90-3151-3000)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

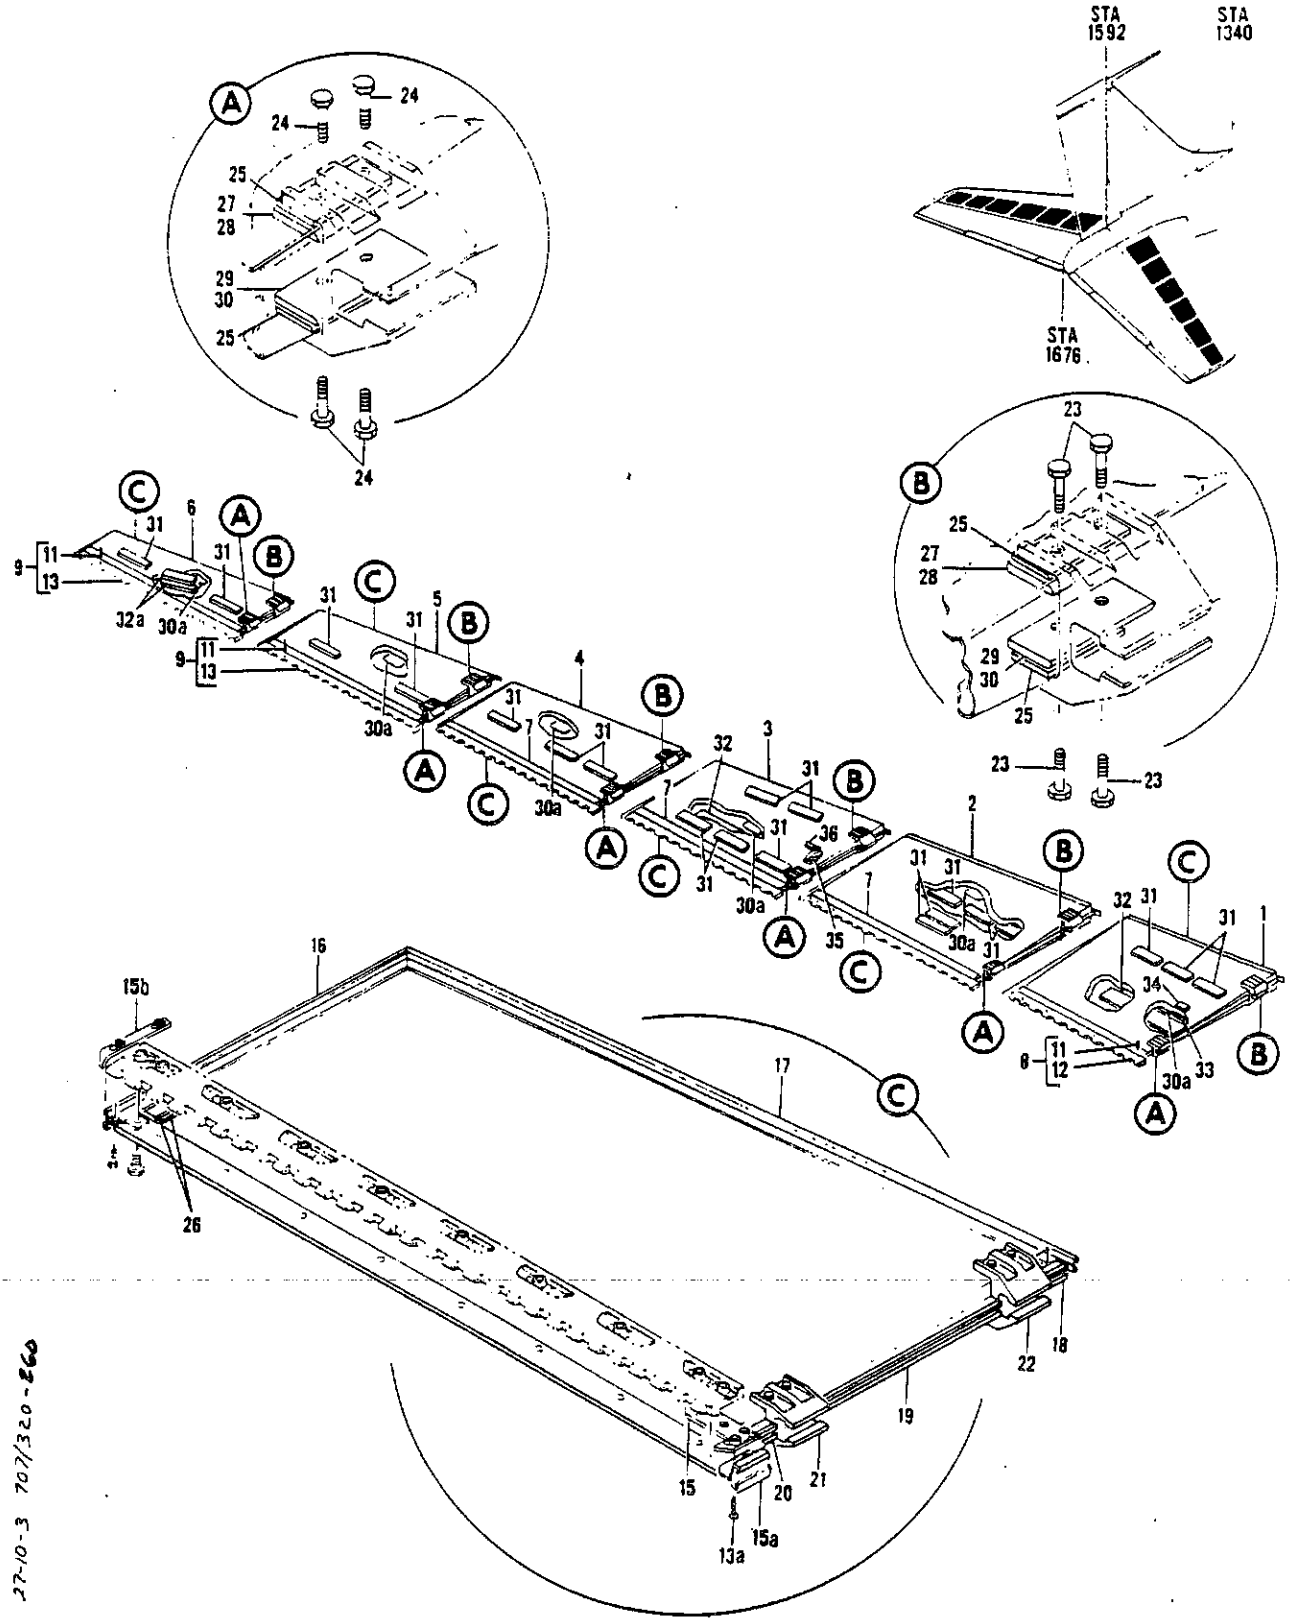


FIGURE 3. PANEL ASSY, ELEVATOR BALANCE

27-10-3 707/320-E60

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3	65-30007-3017	PANEL ASSY, BAY NO. 0 LH SIDE ELEVATOR BALANCE (SEE . . FIG. 1, ITEM 19)		RF
	65-30007-3018	PANEL ASSY, BAY NO. 0 RH SIDE ELEVATOR BALANCE (SEE . . FIG. 1, ITEM 19)		RF
	65-30007-3003	PANEL ASSY, BAY NO. 1 LH SIDE ELEVATOR BALANCE (SEE . . FIG. 1, ITEM 20)		RF
	65-30007-3004	PANEL ASSY, BAY NO. 1 RH SIDE ELEVATOR BALANCE (SEE . . FIG. 1, ITEM 20)		RF
	65-30007-3005	PANEL ASSY, BAY NO. 2 LH SIDE ELEVATOR BALANCE (SEE . . FIG. 1, ITEM 21)		RF
	65-30007-3006	PANEL ASSY, BAY NO. 2 RH SIDE ELEVATOR BALANCE (SEE . . FIG. 1, ITEM 21)		RF
	65-30007-3007	PANEL ASSY, BAY NO. 3 LH SIDE ELEVATOR BALANCE (SEE . . FIG. 1, ITEM 22)		RF
	65-30007-3008	PANEL ASSY, BAY NO. 3 RH SIDE ELEVATOR BALANCE (SEE . . FIG. 1, ITEM 22)		RF
	65-30007-3011	PANEL ASSY, BAY NO. 4 LH SIDE ELEVATOR BALANCE (SEE . . FIG. 1, ITEM 23)		RF
	65-30007-3012	PANEL ASSY, BAY NO. 4 RH SIDE ELEVATOR BALANCE (SEE . . FIG. 1, ITEM 23)		RF
	65-30007-3015	PANEL ASSY, BAY NO. 5 LH SIDE ELEVATOR BALANCE (SEE . . FIG. 1, ITEM 24)		RF
	65-30007-3016	PANEL ASSY, BAY NO. 5 RH SIDE ELEVATOR BALANCE (SEE . . FIG. 1, ITEM 24)		RF
1	65-6817-1	. PANEL ASSY, STATION 0-10.26 TO 25.58 ELEVATOR BALANCE (USED ON 65-30007-3017, 3019)		1
1	65-6817-2	. PANEL ASSY, STATION 0-10.26 TO 25.58 ELEVATOR BALANCE (USED ON 65-30007-3018, 3020)		1
2	5-97214-25	. PANEL ASSY, STATION 25.58 TO 70.38 ELEVATOR BALANCE . (USED ON 65-30007-3003, 3021)		1
2	5-97214-26	. PANEL ASSY, STATION 25.58 TO 70.38 ELEVATOR BALANCE . (USED ON 65-30007-3004, 3022)		1
3	5-97215-25	. PANEL ASSY, STATION 70.38 TO 115.18 ELEVATOR BALANCE (USED ON 65-30007-3005, 3023)		1
3	5-97215-26	. PANEL ASSY, STATION 70.38 TO 115.18 ELEVATOR BALANCE (USED ON 65-30007-3006, 3024)		1
4	5-97216-21	. PANEL ASSY, STATION 115.18 TO 159.98 ELEVATOR BALANCE (USED ON 65-30007-3007, 3025)		1
4	5-97216-22	. PANEL ASSY, STATION 115.18 TO 159.98 ELEVATOR BALANCE (USED ON 65-30007-3008, 3026)		1
5	5-97217-21	. PANEL ASSY, STATION 159.98 TO 204.78 ELEVATOR BALANCE (USED ON 65-30007-3011, 3027)		1
5	5-97217-22	. PANEL ASSY, STATION 159.98 TO 204.78 ELEVATOR BALANCE (USED ON 65-30007-3012, 3028)		1
6	5-97218-19	. PANEL ASSY, STATION 204.78 TO 249.60 ELEVATOR BALANCE (USED ON 65-30007-3015, 3029)		1
6	5-97218-20	. PANEL ASSY, STATION 204.78 TO 249.60 ELEVATOR BALANCE (USED ON 65-30007-3016, 3030)		1
7	90-2457-5	. . HINGE HALF, RUDDER AND ELEVATOR BALANCE PANEL (USED ON 5-97214-25, 5-97215-25 AND 5-97216-21)		1
7	90-2457-6	. . HINGE HALF, RUDDER AND ELEVATOR BALANCE PANEL (USED ON 5-97214-26, 5-97215-26 AND 5-97216-22)		1
8	90-2457-3001	. . HINGE HALF ASSY, RUDDER AND ELEVATOR BALANCE PANEL (USED ON 65-6817-1)		1
8	90-2457-3002	. . HINGE HALF ASSY, RUDDER AND ELEVATOR BALANCE PANEL (USED ON 65-6817-2)		1
9	90-2457-13	. . HINGE HALF ASSY, RUDDER AND ELEVATOR BALANCE PANEL (USED ON 5-97217-21 AND 5-97218-19)		1
9	90-2457-14	. . HINGE HALF ASSY, RUDDER AND ELEVATOR BALANCE PANEL (USED ON 5-97217-22 AND 5-97218-20)		1
		ATTACHING PARTS		
	NAS1104-7W	. . BOLT.		10
	BACR10G41	. . RETAINER.		8
	AN960PD416L	. . WASHER.		8
	NAS679A4W	. . NUT		8
		-------*-------		
11	NAS561P4-6	. . . PIN . . . . . (OPTIONAL NAS561P4-8)		1
11	NAS561P4-8	. . . PIN . . . . . (OPTIONAL TO NAS561P4-6)		1
12	90-2457-3005	. . . HINGE HALF, RUDDER AND ELEVATOR BALANCE PANEL . . (USED ON 90-2457-3001)		1
12	90-2457-3006	. . . HINGE HALF, RUDDER AND ELEVATOR BALANCE PANEL . . (USED ON 90-2457-3002)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	3 13	90-2457-17	. . . HINGE HALF, RUDDER AND ELEVATOR BALANCE PANEL . . (USED ON 90-2457-13)		1
	13	90-2457-18	. . . HINGE HALF, RUDDER AND ELEVATOR BALANCE PANEL . . (USED ON 90-2457-14)		1
	13A	NAS603-8	. . SCREW		2
	15	63-9017-1	. . RETAINER, ELEVATOR AND RUDDER PIN . . . . . (OPTIONAL 63-9017-800)		1
	15	63-9017-800	. . RETAINER, ELEVATOR AND RUDDER PIN . . . . . (OPTIONAL TO 63-9017-1)		1
	15A	66-14055-2	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL SEAL. . (LH ONLY)		1
	15A	66-14055-1	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL SEAL. . (RH ONLY)		1
R R	15B	63-9021-1	. . RETAINER, ELEVATOR AND RUDDER PIN (LH ONLY) . . . . (OPTIONAL 63-9021-801) (LH ONLY)	0150	1
R R	15B	63-9021-801	. . RETAINER, ELEVATOR AND RUDDER PIN (LH ONLY) . . . . (OPTIONAL TO 63-9021-1)	0150	1
R R	15B	63-9021-2	. . RETAINER, ELEVATOR AND RUDDER PIN . . . . . (OPTIONAL 63-9021-802) (RH ONLY)	0150	1
R R	15B	63-9021-802	. . RETAINER, ELEVATOR AND RUDDER PIN (RH ONLY) . . . . (OPTIONAL TO 63-9021-2)	0150	1
R R	15B	63-9021-5	. . RETAINER, ELEVATOR AND RUDDER PIN (LH ONLY) . . . . (OPTIONAL TO 63-9021-9)	5199	1
R R	15B	63-9021-6	. . RETAINER, ELEVATOR AND RUDDER PIN (RH ONLY) . . . . (OPTIONAL TO 63-9021-10)	5199	1
R R	15B	63-9021-9	. . RETAINER, ELEVATOR AND RUDDER PIN (LH ONLY) . . . . (OPTIONAL 63-9021-5) (LH ONLY)	5199	1
R R	15B	63-9021-10	. . RETAINER, ELEVATOR AND RUDDER PIN . . . . . (OPTIONAL 63-9021-6) (RH ONLY)	5199	1
			ATTACHING PARTS		
		NAS603-10	. . SCREW		2
			-------*-------		
R R	16	90-3328-3800	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 65-6817-1)	0150	1
R R	16	90-3328-3015	. . RETAINER, RUDDER AND ELEVATOR BALANCE PANEL SEAL. . (USED ON 65-6817-1)	5199	1
R R	16	90-3328-3801	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 65-6817-2)	0150	1
R R	16	90-3328-3016	. . RETAINER, RUDDER AND ELEVATOR BALANCE PANEL SEAL. . (USED ON 65-6817-2)	5199	1
			ATTACHING PARTS		
		NAS603-8	. . SCREW		8
			-------*-------		
R R	16	90-3328-41	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 5-97214-25)	0150	1
R R	16	90-3328-3005	. . RETAINER, RUDDER AND ELEVATOR BALANCE PANEL SEAL. . (USED ON 5-97214-25)	5199	1
R R	16	90-3328-42	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 5-97214-26)	0150	1
R R	16	90-3328-3006	. . RETAINER, RUDDER AND ELEVATOR BALANCE PANEL SEAL. . (USED ON 5-97214-26)	5199	1
			ATTACHING PARTS		
		NAS603-8	. . SCREW		7
			-------*-------		
R R	16	90-3328-43	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 5-97215-25)	0150	1
R R	16	90-3328-3007	. . RETAINER, RUDDER AND ELEVATOR BALANCE PANEL SEAL. . (USED ON 5-97215-25)	5199	1
R R	16	90-3328-44	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 5-97215-26)	0150	1
R R	16	90-3328-3008	. . RETAINER, RUDDER AND ELEVATOR BALANCE PANEL SEAL. . (USED ON 5-97215-26)	5199	1
			ATTACHING PARTS		
		NAS603-8	. . SCREW		6
			-------*-------		
R R	16	90-3328-45	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 5-97216-21)	0150	1
R R	16	90-3328-3009	. . RETAINER, RUDDER AND ELEVATOR BALANCE PANEL SEAL. . (USED ON 5-97216-21)	5199	1
R R	16	90-3328-46	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 5-97216-22)	0150	1
R R	16	90-3328-3010	. . RETAINER, RUDDER AND ELEVATOR BALANCE PANEL SEAL. . (USED ON 5-97216-22)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	3		ATTACHING PARTS		
		NAS603-8	. . SCREW		5
			-------*-------		
R R	16	90-3328-47	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 5-97217-21)	0150	1
R R	16	90-3328-3011	. . RETAINER, RUDDER AND ELEVATOR BALANCE PANEL SEAL. . (USED ON 5-97217-21)	5199	1
R R	16	90-3328-48	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 5-97217-22)	0150	1
R R	16	90-3328-3012	. . RETAINER, RUDDER AND ELEVATOR BALANCE PANEL SEAL. . (USED ON 5-97217-22)	5199	1
R R	16	90-3328-49	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 5-97218-19)	0150	1
R R	16	90-3328-3013	. . RETAINER, RUDDER AND ELEVATOR BALANCE PANEL SEAL. . (USED ON 5-97218-19)	5199	1
R R	16	90-3328-50	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 5-97218-20)	0150	1
R R	16	90-3328-3014	. . RETAINER, RUDDER AND ELEVATOR BALANCE PANEL SEAL. . ,(USED ON 5-97218-20)	5199	1
			ATTACHING PARTS		
		NAS603-8	. . SCREW		4
			-------*-------		
R R	17	90-5019-3001	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 65-6817-1)	0150	1
R R	17	90-5019-3013	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL SEAL. . (USED ON 65-6817-1)	5199	1
R R	17	90-5019-3002	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 65-6817-2)	0150	1
R R	17	90-5019-3014	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL SEAL. . (USED ON 65-6817-2)	5199	1
			ATTACHING PARTS		
		NAS603-8	. . SCREW		12
			-------*-------		
R R	17	90-5019-17	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 5-97214-25)	0150	1
R R	17	90-5019-3003	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL SEAL. . (USED ON 5-97214-25)	5199	1
R R	17	90-5019-18	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 5-97214-26)	0150	1
R R	17	90-5019-3004	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL SEAL. . (USED ON 5-97214-26)	5199	1
R R	17	90-5019-19	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 5-97215-25)	0150	1
R R	17	90-5019-3005	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL SEAL. . (USED ON 5-97215-25) (OPTIONAL TO 5-97215-33 WITH -34 AND -35)	5199	1
R R	17	5-97215-33	. . RETAINER, RUDDER AND SEAL (USED WITH 5-97215-34 AND -35) (USED ON 5-97215-25) (OPTIONAL 90-5019-3005)	5199	1
R	17	5-97215-34	. . RETAINER, RUDDER AND SEAL (USED WITH 5-97215-33). .	5199	1
R	17	5-97215-35	. . RETAINER, RUDDER AND SEAL (USED WITH 5-97215-33). .	5199	1
R R	17	90-5019-20	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 5-97215-26)	0150	1
R R	17	90-5019-3006	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL SEAL. . (USED ON 5-97215-26) (OPTIONAL TO 5-97215-36 WITH -37 AND -38)	5199	1
R R	17	5-97215-36	. . RETAINER, RUDDER AND SEAL (USED WITH 5-97215-37 AND -38) (USED ON 5-97215-26) (OPTIONAL 90-5019-3006)	5199	1
R	17	5-97215-37	. . RETAINER, RUDDER AND SEAL (USED WITH 5-97215-36). .	5199	1
R	17	5-97215-38	. . RETAINER, RUDDER AND SEAL (USED WITH 5-97215-36). .	5199	1
R R	17	90-5019-21	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 5-97216-21)	0150	1
R R	17	90-5019-3007	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL SEAL. . (USED ON 5-97216-21)	5199	1
R R	17	90-5019-22	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 5-97216-22)	0150	1
R R	17	90-5019-3008	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL SEAL. . (USED ON 5-97216-22)	5199	1
R R	17	90-5019-23	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 5-97217-21)	0150	1
R R R	17	90-5019-3009	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL SEAL. . (USED ON 5-97217-21) (OPTIONAL TO 5-97217-29 WITH -30 AND -31)	5199	1


MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	3 17	5-97217-29	. . RETAINER, RUDDER AND SEAL (USED WITH 5-97217-30 AND -31) (USED ON 5-97217-21) (OPTIONAL 90-5019-3009)	5199	1
R	17	5-97217-30	. . RETAINER, RUDDER AND SEAL (USED WITH 5-97217-29). .	5199	1
R	17	5-97217-31	. . RETAINER, RUDDER AND SEAL (USED WITH 5-97217-29). .	5199	1
R	17	90-5019-24	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 5-97217-22)	0150	1
R	17	90-5019-3010	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL SEAL. . (USED ON 5-97217-22) (OPTIONAL TO 5-97217-32 WITH -33 AND -34)	5199	1
R	17	5-97217-32	. . RETAINER, RUDDER AND SEAL (USED WITH 5-97217-33 AND -34) (USED ON 5-97217-22) (OPTIONAL 90-5019-3010)	5199	1
R	17	5-97217-33	. . RETAINER, RUDDER AND SEAL (USED WITH 5-97217-32). .	5199	1
R	17	5-97217-34	. . RETAINER, RUDDER AND SEAL (USED WITH 5-97217-32). .	5199	1
R	17	90-5019-25	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 5-97218-19)	0150	1
R	17	90-5019-3011	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL SEAL. . (USED ON 5-97218-19) (OPTIONAL TO 5-97218-24 WITH -25 AND -26)	5199	1
R	17	5-97218-24	. . RETAINER, RUDDER AND SEAL (USED WITH 5-97218-25 AND -26) (USED ON 5-97218-19) (OPTIONAL 90-5019-3011)	5199	1
R	17	5-97218-25	. . RETAINER, RUDDER AND SEAL (USED WITH 5-97218-24). .	5199	1
R	17	5-97218-26	. . RETAINER, RUDDER AND SEAL (USED WITH 5-97218-24). .	5199	1
R	17	90-5019-26	. . RETAINER, RUDDER AND SEAL (REWORKED BY SB 3164) . . (USED ON 5-97218-20)	0150	1
R	17	90-5019-3012	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL SEAL. . (USED ON 5-97218-20) (OPTIONAL TO 5-97218-27 WITH -28 AND -29)	5199	1
R	17	5-97218-27	. . RETAINER, RUDDER AND SEAL (USED WITH 5-97218-28 AND -29) (USED ON 5-97218-20) (OPTIONAL 90-5019-3012)	5199	1
R	17	5-97218-28	. . RETAINER, RUDDER AND SEAL (USED WITH 5-97218-27). .	5199	1
R	17	5-97218-29	. . RETAINER, RUDDER AND SEAL (USED WITH 5-97218-27). .	5199	1
			ATTACHING PARTS		
		NAS603-8	. . SCREW		16
			-------*-------		
	18	65-6817-5	. . RETAINER, ELEVATOR STATION 0-10.26 TO 25.58 BALANCE PANEL SEAL (USED ON 65-6817-1 AND 65-6817-2)		1
	18	5-97214-27	. . RETAINER, ELEVATOR STATION 25.58 TO 70.38 BALANCE . PANEL SEAL (USED ON 5-97214-25 AND 5-97214-26)		1
	18	5-97215-29	. . RETAINER, ELEVATOR STATION 70.38 TO 115.18 BALANCE PANEL SEAL (USED ON 5-97215-25 AND 5-97215-26)		1
	18	5-97216-25	. . RETAINER, ELEVATOR STATION 115.18 TO 159.98 BALANCE PANEL SEAL (USED ON 5-97216-21 AND 5-97216-22)		1
	18	5-97217-25	. . RETAINER, ELEVATOR STATION 159.98 TO 204.78 BALANCE PANEL SEAL (USED ON 5-97217-21 AND 5-97217-22)		1
	18	5-97218-18	. . RETAINER, ELEVATOR STATION 204.78 TO 249.60 BALANCE PANEL SEAL (USED ON 5-97218-19 AND 5-97218-20)		1
	19	65-6817-6	. . RETAINER, ELEVATOR STATION 0-10.26 TO 25.58 BALANCE PANEL SEAL (USED ON 65-6817-1 AND 65-6817-2)		1
	19	5-97214-29	. . RETAINER, ELEVATOR STATION 25.58 TO 70.38 BALANCE . PANEL SEAL (USED ON 5-97214-25 AND 5-97214-26)		1
	19	5-97215-28	. . RETAINER, ELEVATOR STATION 70.38 TO 115.18 BALANCE PANEL SEAL (USED ON 5-97215-25 AND 5-97215-26)		1
	19	5-97216-24	. . RETAINER, ELEVATOR STATION 115.18 TO 159.98 BALANCE PANEL SEAL (USED ON 5-97216-21 AND 5-97216-22)		1
	19	5-97217-24	. . RETAINER, ELEVATOR STATION 159.98 TO 204.78 BALANCE PANEL SEAL (USED ON 5-97217-21 AND 5-97217-22)		1
	19	5-97218-17	. . RETAINER, ELEVATOR STATION 204.78 TO 249.60 BALANCE PANEL SEAL (USED ON 5-97218-19 AND 5-97218-20)		1
	20	65-6817-7	. . RETAINER, ELEVATOR STATION 0-10.26 TO 25.58 BALANCE PANEL SEAL (USED ON 65-6817-1 AND 65-6817-2)		1
	20	5-97214-28	. . RETAINER, ELEVATOR STATION 25.58 TO 70.38 BALANCE . PANEL SEAL (USED ON 5-97214-25 AND 5-97214-26)		1
	20	5-97215-27	. . RETAINER, ELEVATOR STATION 70.38 TO 115.18 BALANCE PANEL SEAL (USED ON 5-97215-25 AND 5-97215-26)		1
	20	5-97216-23	. . RETAINER, ELEVATOR STATION 115.18 TO 159.98 BALANCE PANEL SEAL (USED ON 5-97216-21 AND 5-97216-22)		1
	20	5-97217-23	. . RETAINER, ELEVATOR STATION 159.98 TO 204.78 BALANCE PANEL SEAL (USED ON 5-97217-21 AND 5-97217-22)		1
	20	5-97218-16	. . RETAINER, ELEVATOR STATION 204.78 TO 249.60 BALANCE PANEL SEAL (USED ON 5-97218-19 AND 5-97218-20)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
3 21	90-2470-1	. . GRIP, RUDDER AND ELEVATOR BALANCE PANEL AFT TRACK .		1
22	90-2471-1	. . GRIP, RUDDER AND ELEVATOR BALANCE PANEL TRACK (USED ON 65-6817-1, 65-6817-2, 5-97214-25 AND 5-97214-26)		1
22	90-2472-1	. . GRIP, ELEVATOR AND RUDDER BALANCE PANEL TRACK (USED ON 5-97215-25 AND 5-97215-26)		1
22	90-2473-1	. . GRIP, ELEVATOR AND RUDDER BALANCE PANEL TRACK (USED ON 5-97216-21 AND 5-97216-22)		1
22	90-2474-1	. . GRIP, ELEVATOR AND RUDDER BALANCE PANEL TRACK (USED ON 5-97217-21 AND 5-97217-22)		1
22	90-2475-1	. . GRIP, ELEVATOR AND RUDDER BALANCE PANEL TRACK (USED ON 5-97218-19 AND 5-97218-20)		1
		ATTACHING PARTS		
23	AN4-7A	. . BOLT.		4
24	NAS1104-7W	. . BOLT.		4
25	BACS40A16-35	. . SHIM.		4
26	BACS40B9-24	. . SHIM.		2
27	6-84142-2001	. . FILLER, RUDDER AND ELEVATOR BALANCE PANEL GRIP. . . (USED ON 65-6817-1 AND -2)		2
28	6-84142-1	. . FILLER, RUDDER AND ELEVATOR BALANCE PANEL GRIP (NOT USED ON 65-6817-1 AND -2)		2
29	6-84142-2002	. . FILLER, RUDDER AND ELEVATOR BALANCE PANEL GRIP. . . (USED ON 65-6817-1 AND 65-6817-2)		2
30	6-84142-2	. . FILLER, RUDDER AND ELEVATOR BALANCE PANEL GRIP (NOT USED ON 65-6817-1 AND -2)		2
		--------*--------		
30A	AN7510F1	. . PLATE . . . . . (OPTIONAL AN7510-1)		1
30A	AN7510-1	. . PLATE . . . . . (OPTIONAL TO AN7510F1)		1
	65-6535-3	. WEIGHT INSTL, ELEVATOR AND BALANCE PANEL BALANCE BAY NO. 0 (LH ONLY)		1
	65-6535-4	. WEIGHT INSTL, ELEVATOR AND BALANCE PANEL BALANCE BAY NO. 0 (RH ONLY)		1
	65-6535-5	. WEIGHT INSTL, ELEVATOR AND BALANCE PANEL BALANCE BAY NO. 1 (LH ONLY)		1
	65-6535-6	. WEIGHT INSTL, ELEVATOR AND BALANCE PANEL BALANCE BAY NO. 1 (RH ONLY)		1
	65-6535-7	. WEIGHT INSTL, ELEVATOR AND BALANCE PANEL BALANCE BAY NO. 2 (LH ONLY)		1
	65-6535-8	. WEIGHT INSTL, ELEVATOR AND BALANCE PANEL BALANCE BAY NO. 2 (RH ONLY)		1
	65-6535-9	. WEIGHT INSTL, ELEVATOR AND BALANCE PANEL BALANCE BAY NO. 3 (LH ONLY)		1
	65-6535-10	. WEIGHT INSTL, ELEVATOR AND BALANCE PANEL BALANCE BAY NO. 3 (RH ONLY)		1
	65-6535-11	. WEIGHT INSTL, ELEVATOR AND BALANCE PANEL BALANCE BAY NO. 4 (LH ONLY)		1
	65-6535-12	. WEIGHT INSTL, ELEVATOR AND BALANCE PANEL BALANCE BAY NO. 4 (RH ONLY)		1
	65-6535-13	. WEIGHT INSTL, ELEVATOR AND BALANCE PANEL BALANCE BAY NO. 5 (LH ONLY)		1
	65-6535-14	. WEIGHT INSTL, ELEVATOR AND BALANCE PANEL BALANCE BAY NO. 5 (RH ONLY)		1
31	69-10063-2	. . WEIGHT, ELEVATOR AND RUDDER ADJUSTMENT.		AR
32	WEIGHT	. . WEIGHT, ELEVATOR PANEL BALANCE (REFER TO DWG NO.. . 65-5346 AND 65-5347 FOR PART NO. USED) (PROPER WEIGHT FURNISHED WITH TAB ASSEMBLIES) (BAYS NO. 0 AND 2)		AR
32A	50-6237-3006	. . WEIGHT, ELEVATOR PANEL BALANCE (BAY NO. 5).		2
		ATTACHING PARTS		
	NAS139888-10	. . RIVET		18
		--------*--------		
33	BACM10E21-1E	. . MARKER-ALUMINUM FOIL, BAY NO. 0		1
35	BACM10C20-2WL	. . MARKER-ALUMINUM FOIL, BAY NO. 2		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

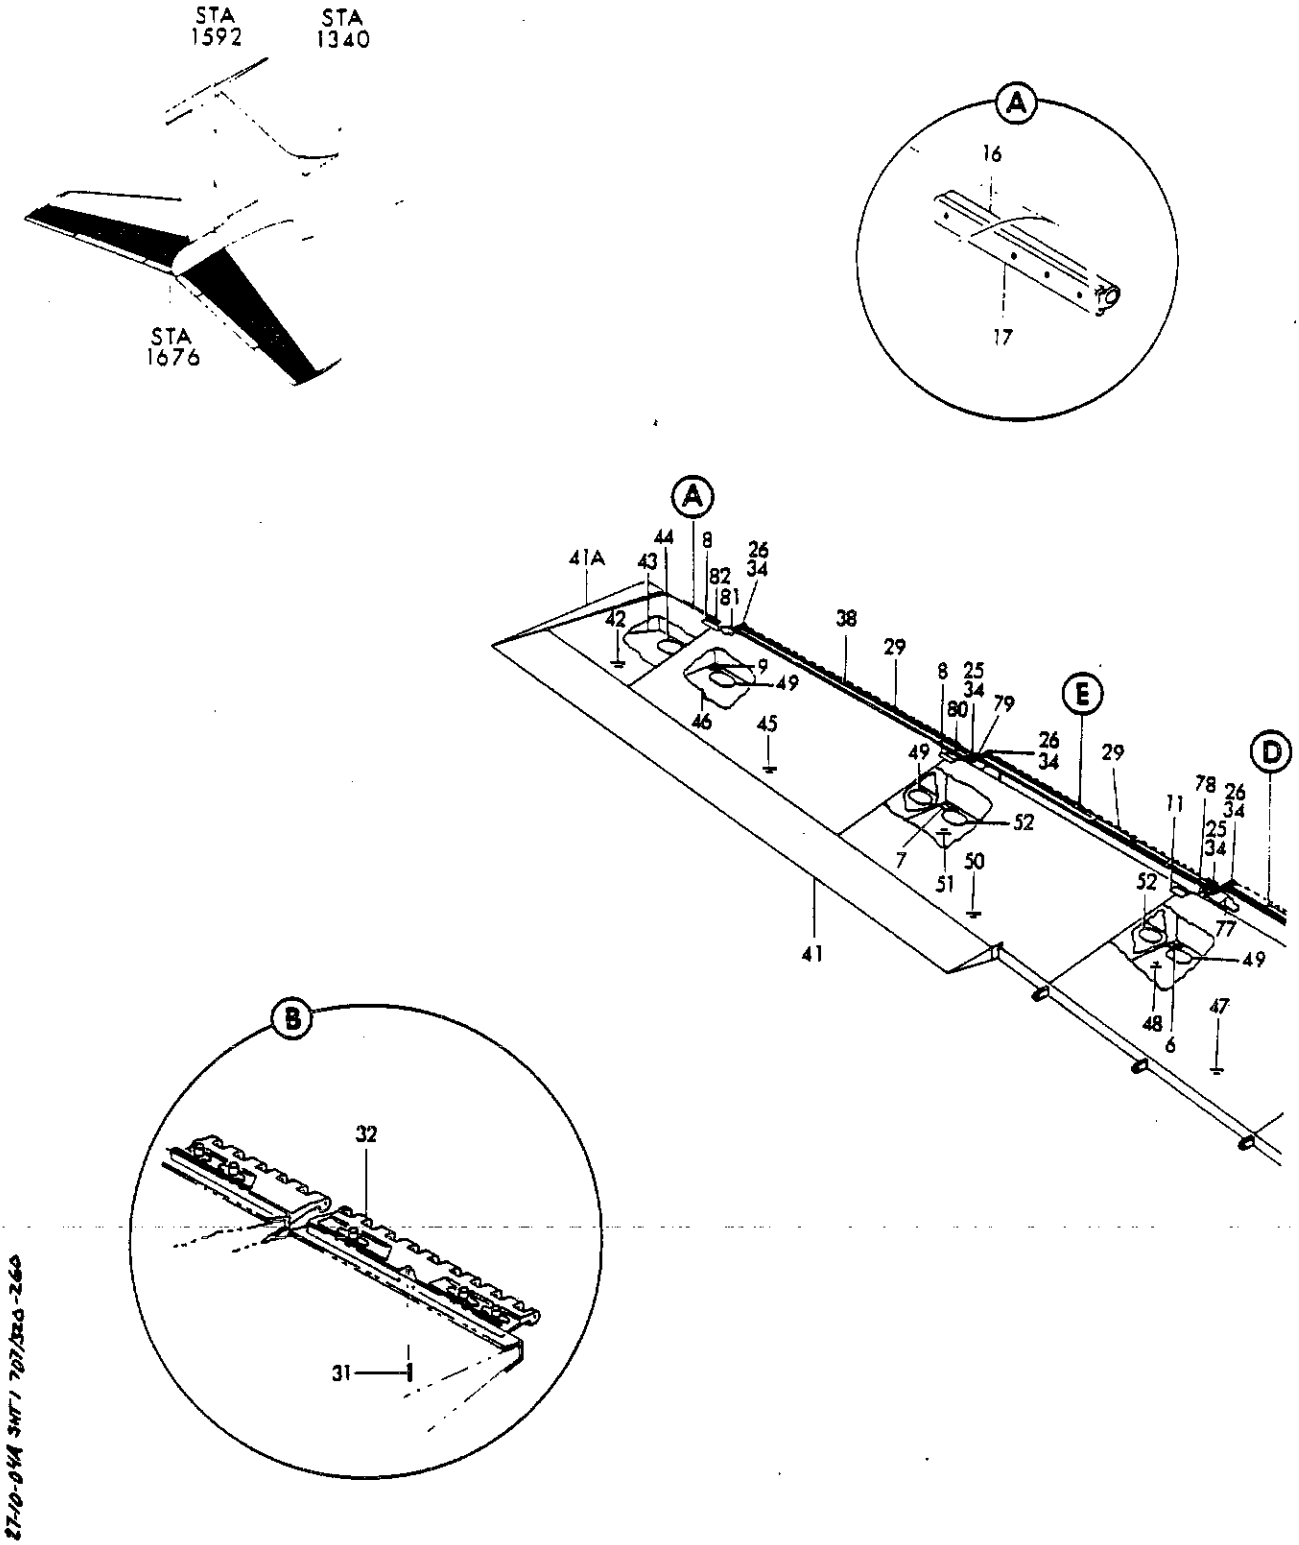

27-10-04A SHT 1 707/320-260

FIGURE 4A. ELEVATOR ASSY, SECTION 84 (SHEET 1)

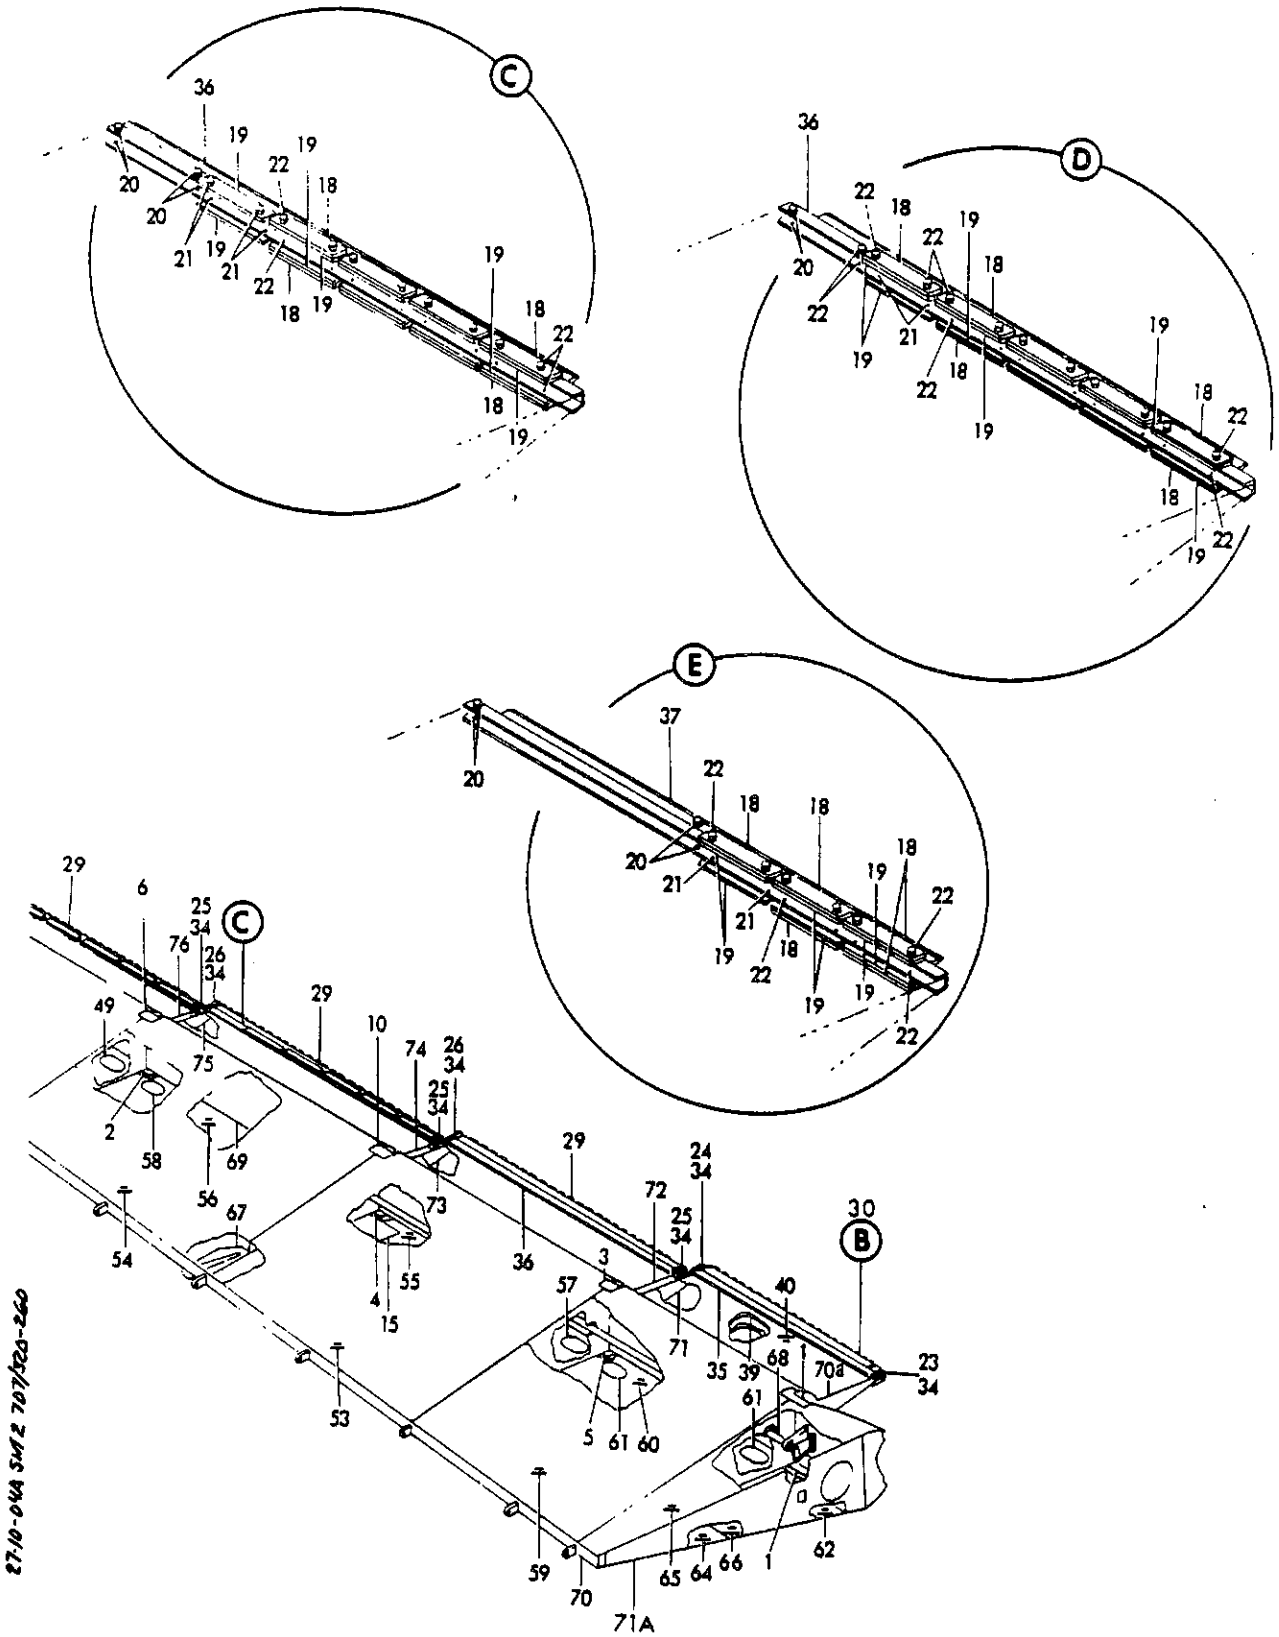


FIGURE 4A. ELEVATOR ASSY, SECTION 84 (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	4A	65-48584-1	ELEVATOR ASSY, SECTION 84 (LH) (SEE FIG. 1, ITEM 25). .		RF
		65-48584-2	ELEVATOR ASSY, SECTION 84 (RH) (SEE FIG. 1, ITEM 25). .		RF
		69-6357-1	. DOOR INSTL, HINGE ACCESS (LH ONLY).		1
		69-6357-2	. DOOR INSTL, HINGE ACCESS (RH ONLY).		1
	1	90-3359-3005	. . DOOR, (LH ONLY)		2
	1	90-3359-3006	. . DOOR, (RH ONLY)		2
	2	90-3359-1	. . DOOR.		1
	3	90-3359-3008	. . DOOR.		1
	4	90-3359	. . DOOR.		1
	5	90-3359-3007	. . DOOR.		1
	6	90-3359-2	. . DOOR.		2
	7	90-3359-3	. . DOOR.		1
	8	90-3359-5	. . DOOR.		2
	9	90-3359-4	. . DOOR.		1
			ATTACHING PARTS		
		NAS514P1032-8	. . SCREW		42
			-------*-------		
	10	90-3359-1	. . DOOR.		1
	11	90-3359-3	. . DOOR.		1
			ATTACHING PARTS		
		NAS514P1032-8	. . SCREW		4
		NAS514P428-10	. . SCREW		4
			-------*-------		
		65-5942-1	. DOOR INSTL, STATION 65.38 TO 75.38 ACCESS (LH ONLY) .		1
		65-5942-2	. DOOR INSTL, STATION 65.38 TO 75.38 ACCESS (RH ONLY) .		1
	15	65-5942-3	. . PANEL, DOOR (LH ONLY)		1
	15	65-5942-4	. . PANEL, DOOR (RH ONLY)		1
			ATTACHING PARTS		
		NAS517-3-4	. . SCREW		35
			-------*-------		
		50-3988-3	. SEAL INSTL, STATION 250.60 (LH ONLY).		1
		50-3988-4	. SEAL INSTL, STATION 250.60 (RH ONLY).		1
	16	50-3988-8	. . SEAL, (ALTERED FROM BAC SPEC NO. 10-2737-1027). . .		1
			(USED WITH 50-3988-9)		
			(OPTIONAL BAC SPEC NO. 10-2737-1027 WITH 50-3988-7)		
	16	10-2737-1027	. . SEAL, FABRIC COVERED AERODYNAMIC (USED WITH		1
			50-3988-7)		
			(OPTIONAL TO 50-3988-8 WITH 50-3988-9)		
	17	50-3988-9	. . RETAINER, SEAL (USED WITH 50-3988-8).		1
			(OPTIONAL 50-3988-7 WITH BAC SPEC NO. 10-2737-1027)		
	17	50-3988-7	. . RETAINER, SEAL (USED WITH BAC SPEC NO..		1
			10-2737-1027)		
			(OPTIONAL TO 50-3988-9 WITH 50-3988-8)		
		65-29030-1	. WEIGHT INSTL, ADJUSTABLE LH (LH ONLY)		1
		65-29030-2	. WEIGHT INSTL, ADJUSTABLE RH (RH ONLY)		1
	18	69-10063-1	. . WEIGHT, ADJUSTMENT.		AR
R	19	69-10063	. . WEIGHT, ADJUSTMENT.	0150	AR
RRR	19	69-10063	. . WEIGHT, ADJUSTMENT.	5199	AR
R			(OPTIONAL 69-10063-8)		
RR	19	69-10063-8	. . WEIGHT, ADJUSTMENT.	5199	AR
R			(OPTIONAL TO 69-10063)		
			ATTACHING PARTS		
	20	BACB30LB6-2	. . BOLT.		AR
			(OPTIONAL BACR15DJP6-3)		
	20	BACR15DJP6-3	. . RIVET		AR
			(OPTIONAL TO BACB30LB6-2)		
	21	BACB30LB6-6	. . BOLT.		AR
			(OPTIONAL BACR15DJP6-6)		
	21	BACR15DJP6-6	. . RIVET		AR
			(OPTIONAL TO BACB30LB6-6)		
	22	BACB30LB6-9	. . BOLT.		AR
			(OPTIONAL BACR15DJP6-7)		
	22	BACR15DJP6-7	. . RIVET		AR
			(OPTIONAL TO BACB30LB6-9)		
			-------*-------		
		65-8313-1	. SKIN INSTL, STATION 25.58 TO 0-10.26 NOSE (LH ONLY) .		1
		65-8313-2	. SKIN INSTL, STATION 25.58 TO 0-10.26 NOSE (RH ONLY) .		1
		5-96283-27	. SKIN INSTL, NOSE (LH ONLY).		1
		5-96283-28	. SKIN INSTL, NOSE (RH ONLY).		1
	23	66-14055-1	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL SEAL. .		1
			(USED ON 65-8313-1 AND -2)		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
4A 24	66-14055-2	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL SEAL. . (USED ON 65-8313-1 AND -2)		1
25	66-14055-1	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL SEAL. . (USED ON 5-96283-1 AND -2)		5
26	66-14055-2	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL SEAL. . (USED ON 5-96283-1 AND -2)		5
		ATTACHING PARTS		
	NAS603-8	. . SCREW		AR
		-------*-------		
29	90-2457-7	. . HINGE-HALF, RUDDER AND ELEVATOR BALANCE PANEL . . . (ALTERED FROM 6-83144-8) (USED ON 5-96283-27)		5
29	90-2457-8	. . HINGE-HALF, RUDDER AND ELEVATOR BALANCE PANEL . . . (ALTERED FROM 6-83144-8) (USED ON 5-96283-28)		5
30	90-2457-3003	. . HINGE ASSY, RUDDER AND ELEVATOR BALANCE PANEL . . . (USED ON 65-8313-1)		1
30	90-2457-3004	. . HINGE ASSY, RUDDER AND ELEVATOR BALANCE PANEL . . . (USED ON 65-8313-2)		1
		ATTACHING PARTS		
	NAS1104-7A	. . BOLT, (USED ON 65-8313-1 AND -2).		8
	NAS1104-7A	. . BOLT, (USED ON 5-96283-27 AND -28).		50
		-------*-------		
31	NAS561P4-6	. . . PIN . . . . . (OPTIONAL NAS561P4-8)		1
31	NAS561P4-8	. . . PIN . . . . . (OPTIONAL TO NAS561P4-6)		1
32	90-2457-3007	. . . HINGE-HALF, (ALTERED FROM 6-83144-3000) (USED ON 90-2457-3003)		1
32	90-2457-3008	. . . HINGE-HALF, (ALTERED FROM 6-83144-3000) (USED ON 90-2457-3004)		1
34	60-2798-4	. . PLATE, RUDDER AND ELEVATOR SEAL RETAINER SUPPORT. . (USED ON 65-8313-1 AND -2)		2
34	60-2798-4	. . PLATE, RUDDER AND ELEVATOR SEAL RETAINER SUPPORT. . (USED ON 5-96283-27 AND -28)		10
35	90-2859-3003	. . FITTING, RUDDER AND ELEVATOR BALANCE PANEL HINGE. . (USED ON 65-8313-1)		1
35	90-2859-3004	. . FITTING, RUDDER AND ELEVATOR BALANCE PANEL HINGE. . (USED ON 65-8313-2)		1
36	90-2859-1	. . FITTING, RUDDER AND ELEVATOR BALANCE PANEL HINGE. . (USED ON 5-96283-27)		3
36	90-2859-2	. . FITTING, RUDDER AND ELEVATOR BALANCE PANEL HINGE. . (USED ON 5-96283-28)		3
37	90-2859-7	. . FITTING, RUDDER AND ELEVATOR BALANCE PANEL HINGE. . (USED ON 5-96383-1)		1
37	90-2859-8	. . FITTING, RUDDER AND ELEVATOR BALANCE PANEL HINGE. . (USED ON 5-96383-2)		1
38	90-2859-9	. . FITTING, RUDDER AND ELEVATOR BALANCE PANEL HINGE. . (USED ON 5-96383-1)		1
38	90-2859-10	. . FITTING, RUDDER AND ELEVATOR BALANCE PANEL HINGE. . (USED ON 5-96383-2)		1
39	65-8313-3	. . SKIN, (USED ON 65-8313-1)		1
39	65-8313-4	. . SKIN, (USED ON 65-8313-2)		1
40	65-8313-5	. . SKIN, (USED ON 65-8313-1)		1
40	65-8313-6	. . SKIN, (USED ON 65-8313-2)		1
	65-7451-1	. TRAILING EDGE INSTL, STATION 172.48 TO TIP FIXED. . . (LH ONLY)		1
	65-7451-2	. TRAILING EDGE INSTL, STATION 172.48 TO TIP FIXED. . . (LH ONLY)		1
41	65-7451-802	. . TRAILING EDGE ASSY.		1
	5-96296-5	. TIP INSTL, RIB.		1
41A	65-3564	. . TIP ASSY.		1
42	5-96303-3001	. PANEL ASSY, STATION 249.60 TO TIP UPPER (LH ONLY) . .		1
42	5-96303-3002	. PANEL ASSY, STATION 249.60 TO TIP UPPER (RH ONLY) . .		1
43	5-96303-3003	. PANEL ASSY, STATION 249.60 TO TIP LOWER (LH ONLY) . .		1
43	5-96303-3004	. PANEL ASSY, STATION 249.60 TO TIP LOWER (RH ONLY) . .		1
44	5-96303-3009	. . DOOR, INSPECTION (LOWER).		1
		ATTACHING PARTS		
	NAS514P1032-8	. . SCREW		4
		-------*-------		
45	5-96302-3001	. PANEL ASSY, STATION 204.78 TO 249.60 UPPER (LH ONLY)		1
45	5-96302-3002	. PANEL ASSY, STATION 204.78 TO 249.60 UPPER (RH ONLY)		1
46	5-96302-3003	. PANEL ASSY, STATION 204.78 TO 249.60 LOWER (LH ONLY)		1
46	5-96302-3004	. PANEL ASSY, STATION 204.78 TO 249.60 LOWER (RH ONLY)		1
47	5-96300-3001	. PANEL ASSY, STATION 115.18 TO 159.98 UPPER (LH ONLY)		1
47	5-96300-3002	. PANEL ASSY, STATION 115.18 TO 159.98 UPPER (RH ONLY)		1


MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
4A 48	5-96300-3003	. PANEL ASSY, STATION 115.18 TO 159.98 LOWER (LH ONLY)		1
48	5-96300-3004	. PANEL ASSY, STATION 115.18 TO 159.98 LOWER (RH ONLY)		1
49	66-4545	. . DOOR, FIN AND STABILIZER BALANCE PANEL COVER. . . . INSPECTION (LOWER)		2
		ATTACHING PARTS		
	NAS514P1032-8	. . SCREW		8
		-------*-------		
50	5-96301-3001	. PANEL ASSY, STATION 159.98 TO 204.78 UPPER (LH ONLY)		1
50	5-96301-3002	. PANEL ASSY, STATION 159.98 TO 204.78 UPPER (RH ONLY)		1
51	5-96301-3003	. PANEL ASSY, STATION 159.98 TO 204.78 LOWER (LH ONLY)		1
51	5-96301-3004	. PANEL ASSY, STATION 159.98 TO 204.78 LOWER (RH ONLY)		1
52	5-96301-3018	. . DOOR, INSPECTION (LOWER).		2
		ATTACHING PARTS		
	NAS514P1032-8	. . SCREW		8
		-------*-------		
53	5-96298-3001	. PANEL ASSY, STATION 25.58 TO 70.38 UPPER (LH ONLY). .		1
53	5-96298-3002	. PANEL ASSY, STATION 25.58 TO 70.38 UPPER (RH ONLY). .		1
54	5-96298-3003	. PANEL ASSY, STATION 70.38 TO 115.18 UPPER (LH ONLY) .		1
54	5-96298-3004	. PANEL ASSY, STATION 70.38 TO 115.18 UPPER (RH ONLY) .		1
55	5-96299-3001	. PANEL ASSY, STATION 25.58 TO 70.38 LOWER (LH ONLY). .		1
55	5-96299-3002	. PANEL ASSY, STATION 25.58 TO 70.38 LOWER (RH ONLY). .		1
56	5-96299-3003	. PANEL ASSY, STATION 70.38 TO 115.18 LOWER (LH ONLY) .		1
56	5-96299-3004	. PANEL ASSY, STATION 70.38 TO 115.18 LOWER (RH ONLY) .		1
57	66-4545	. . DOOR, FIN AND STABILIZER BALANCE PANEL COVER (USED ON 5-96299-3001 AND -3002)		1
58	5-96299-3031	. . DOOR, INSPECTION (USED ON 5-96299-3003 AND -3004) .		1
		ATTACHING PARTS		
	NAS514P1032-8	. . SCREW		4
		-------*-------		
59	64-1198-1	. PANEL ASSY, STATION -10.26 TO 25.58 UPPER (LH ONLY) .		1
59	64-1198-2	. PANEL ASSY, STATION -10.26 TO 25.58 UPPER (RH ONLY) .		1
60	64-1198-3	. PANEL ASSY, STATION -10.26 TO 25.58 LOWER (LH ONLY) .		1
60	64-1198-4	. PANEL ASSY, STATION -10.26 TO 25.58 LOWER (RH ONLY) .		1
61	66-3979	. . DOOR, FIN BALANCE PANEL COVER ACCESS (LOWER). . . .		2
		ATTACHING PARTS		
	NAS514P1032-8	. . SCREW		8
		-------*-------		
	65-7279-1	. PANEL INSTL, STATION 0-8.76 TO CLOSURE RIB UPPER LH . (LH ONLY)		1
	65-7279-2	. PANEL INSTL, STATION 0-8.76 TO CLOSURE RIB UPPER RH . (RH ONLY)		1
	65-7279-3	. PANEL INSTL, STATION 0-8.76 TO CLOSURE RIB LOWER LH . (LH ONLY)		1
	65-7279-4	. PANEL INSTL, STATION 0-8.76 TO CLOSURE RIB LOWER RH . (RH ONLY)		1
62	65-7279-10	. . DOOR, (USED ON 65-7279-3)		1
		ATTACHING PARTS		
	NAS517-4-5	. . SCREW		1
	NAS517-3-6	. . SCREW		37
		-------*-------		
63	65-7279-12	. . DOOR ASSY, (USED ON 65-7279-4).		1
		ATTACHING PARTS		
	NAS517-4-6	. . SCREW		7
	NAS517-3-5	. . SCREW		39
		-------*-------		
64	65-7136-3	. . FAIRING, CONTROL ROD (USED ON 65-7279-3).		1
64	65-7136-4	. . FAIRING, CONTROL ROD (USED ON 65-7279-4).		1
		ATTACHING PARTS		
	NAS517-3-5	. . SCREW		32
		-------*-------		
65	65-7279-5	. . PANEL, UPPER LH (USED ON 65-7279-1)		1
65	65-7279-6	. . PANEL, UPPER RH (USED ON 65-7279-2)		1
66	65-7279-7	. . PANEL, LOWER LH (USED ON 65-7279-3)		1
66	65-7279-8	. . PANEL, LOWER RH (USED ON 65-7279-4)		1
	65-8359-1	. FAIRING INSTL, TAB CONTROL (LH ONLY).		1
	65-8359-2	. FAIRING INSTL, TAB CONTROL (RH ONLY).		1
67	65-8359-800	. . FAIRING, (LH ONLY).		1
67	65-8359-801	. . FAIRING, (RH ONLY).		1
68	50-8702-384	. CONTROL INSTL, SECTION 84 ELEVATOR LH (LH ONLY) . . . (SEE 27-11, FIG. 17)		1
68	50-8702-484	. CONTROL INSTL, SECTION 84 ELEVATOR RH (RH ONLY) . . . (SEE 27-11, FIG. 17)		1
69	5-96280-3065	. SPAR INSTL, ELEVATOR FRONT (USED ON 65-48584-1, -9) . (SEE FIG. 6)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	4A 69	5-96280-3066	. SPAR INSTL, FRONT (USED ON 65-48584-2, -10) (SEE. . . FIG. 6)		1
	70	65-5799-23	. SPAR INSTL, ELEVATOR TRAILING EDGE (LH ONLY) (SEE . . FIG. 7)		1
	70	65-5799-24	. SPAR INSTL, ELEVATOR TRAILING EDGE (RH ONLY) (SEE . . FIG. 7)		1
	70	69-5771-1	. RIB INSTL, ELEVATOR STATION 0 TO 8.46 ELEVATOR NOSE . (LH ONLY) (SEE FIG. 5)		1
	70	69-5771-2	. RIB INSTL, ELEVATOR STATION 0 TO 8.46 ELEVATOR NOSE . (RH ONLY) (SEE FIG. 5)		1
	71	69-5766-1	. RIB INSTL, ELEVATOR STATION 23.78 ELEVATOR NOSE (LH . ONLY) (SEE FIG. 5)		1
	71	69-5766-2	. RIB INSTL, ELEVATOR STATION 23.78 ELEVATOR NOSE (RH . ONLY) (SEE FIG. 5)		1
R R R	71A	65-7061-1	. RIB INSTL, ELEVATOR STATION 0-10.60 TO 0-24.82. . . . CLOSURE (DELETED BY SB 2664) (LH ONLY) (SEE FIG. 5)	0150	1
R R	71A	65-7061-19	. RIB INSTL, ELEVATOR STATION 0-10.60 TO 0-24.82. . . . CLOSURE (ADDED BY SB 2664) (LH ONLY) (SEE FIG. 5)	0150	1
R R	71A	65-7061-19	. RIB INSTL, ELEVATOR STATION 0-10.60 TO 0-24.82. . . . CLOSURE (LH ONLY) (SEE FIG. 5)	5199	1
R R R	71A	65-7061-2	. RIB INSTL, ELEVATOR STATION 0-10.60 TO 0-24.82. . . . CLOSURE (DELETED BY SB 2664) (RH ONLY) (SEE FIG. 5)	0150	1
R R	71A	65-7061-20	. RIB INSTL, ELEVATOR STATION 0-10.60 TO 0-24.82. . . . CLOSURE (ADDED BY SB 2664) (RH ONLY) (SEE FIG. 5)	0150	1
R R R	71A	65-7061-20	. RIB INSTL, ELEVATOR STATION 0-10.60 TO 0-24.82. . . . CLOSURE (RH ONLY) (SEE FIG. 5)	5199	1
	72	9-65823-3001	. RIB INSTL, ELEVATOR STATION 27.38 ELEVATOR NOSE (LH . ONLY) (SEE FIG. 5)		1
	72	9-65823-3002	. RIB INSTL, ELEVATOR STATION 27.38 ELEVATOR NOSE (RH . ONLY) (SEE FIG. 5)		1
	73	9-65829-15	. RIB INSTL, ELEVATOR STATION 68.58 ELEVATOR NOSE (LH . ONLY) (SEE FIG. 5)		1
	73	9-65829-16	. RIB INSTL, ELEVATOR STATION 68.58 ELEVATOR NOSE (RH . ONLY) (SEE FIG. 5)		1
	74	9-65830-13	. RIB INSTL, ELEVATOR STATION 72.18 ELEVATOR NOSE (LH . ONLY) (SEE FIG. 5)		1
	74	9-65830-14	. RIB INSTL, ELEVATOR STATION 72.18 ELEVATOR NOSE (RH . ONLY) (SEE FIG. 5)		1
	75	9-65836-13	. RIB INSTL, ELEVATOR STATION 113.38 ELEVATOR NOSE (LH ONLY) (SEE FIG. 5)		1
	75	9-65836-14	. RIB INSTL, ELEVATOR STATION 113.38 ELEVATOR NOSE (RH ONLY) (SEE FIG. 5)		1
	76	9-65837-13	. RIB INSTL, ELEVATOR STATION 116.98 ELEVATOR NOSE (LH ONLY) (SEE FIG. 5)		1
	76	9-65837-14	. RIB INSTL, ELEVATOR STATION 116.98 ELEVATOR NOSE (RH ONLY) (SEE FIG. 5)		1
	77	9-65843-13	. RIB INSTL, ELEVATOR STATION 158.18 ELEVATOR NOSE (LH ONLY) (SEE FIG. 5)		1
	77	9-65843-14	. RIB INSTL, ELEVATOR STATION 158.18 ELEVATOR NOSE (RH ONLY) (SEE FIG. 5)		1
	78	65-82081-1	. RIB INSTL, ELEVATOR STATION 161.78 ELEVATOR NOSE (LH ONLY) (SEE FIG. 5)		1
	78	65-82081-2	. RIB INSTL, ELEVATOR STATION 161.78 ELEVATOR NOSE (RH ONLY) (SEE FIG. 5)		1
	79	9-65850-13	. RIB INSTL, ELEVATOR STATION 202.98 ELEVATOR NOSE (LH ONLY) (SEE FIG. 5)		1
	79	9-65850-14	. RIB INSTL, ELEVATOR STATION 202.98 ELEVATOR NOSE (RH ONLY) (SEE FIG. 5)		1
	80	65-82082-1	. RIB INSTL, ELEVATOR STATION 206.58 ELEVATOR NOSE (LH ONLY) (SEE FIG. 5)		1
	80	65-82082-2	. RIB INSTL, ELEVATOR STATION 206.58 ELEVATOR NOSE (RH ONLY) (SEE FIG. 5)		1
	81	65-82085-1	. RIB INSTL, ELEVATOR STATION 247.80 ELEVATOR NOSE (LH ONLY) (SEE FIG. 5)		1
	81	65-82085-2	. RIB INSTL, ELEVATOR STATION 247.80 ELEVATOR NOSE (RH ONLY) (SEE FIG. 5)		1
	82	9-65858-1	. RIB INSTL, ELEVATOR STATION 251.40 ELEVATOR NOSE (LH ONLY) (SEE FIG. 5)		1
	82	9-65858-2	. RIB INSTL, ELEVATOR STATION 251.40 ELEVATOR NOSE (RH ONLY) (SEE FIG. 5)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

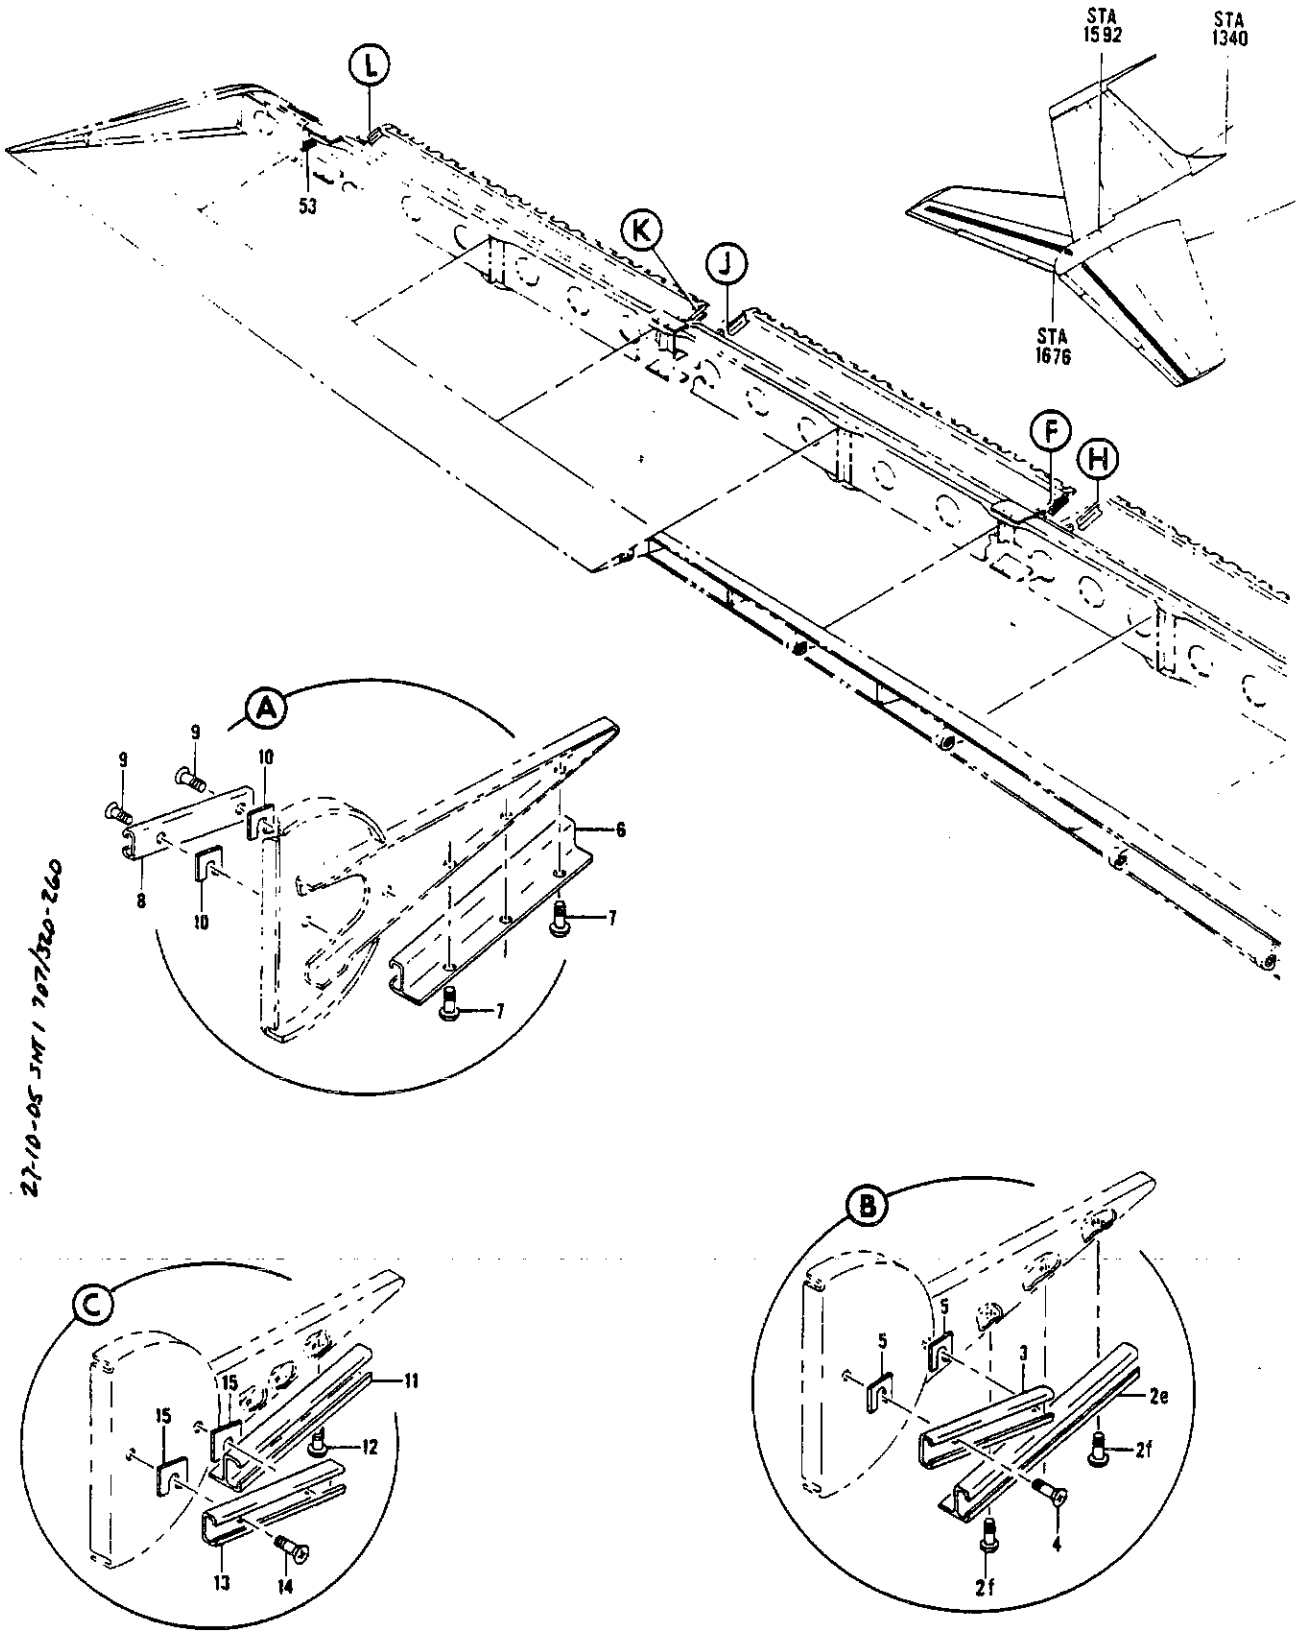

27-10-05 INT 707/320-260

FIGURE 5. RIB INSTL, ELEVATOR NOSE (SHEET 1)


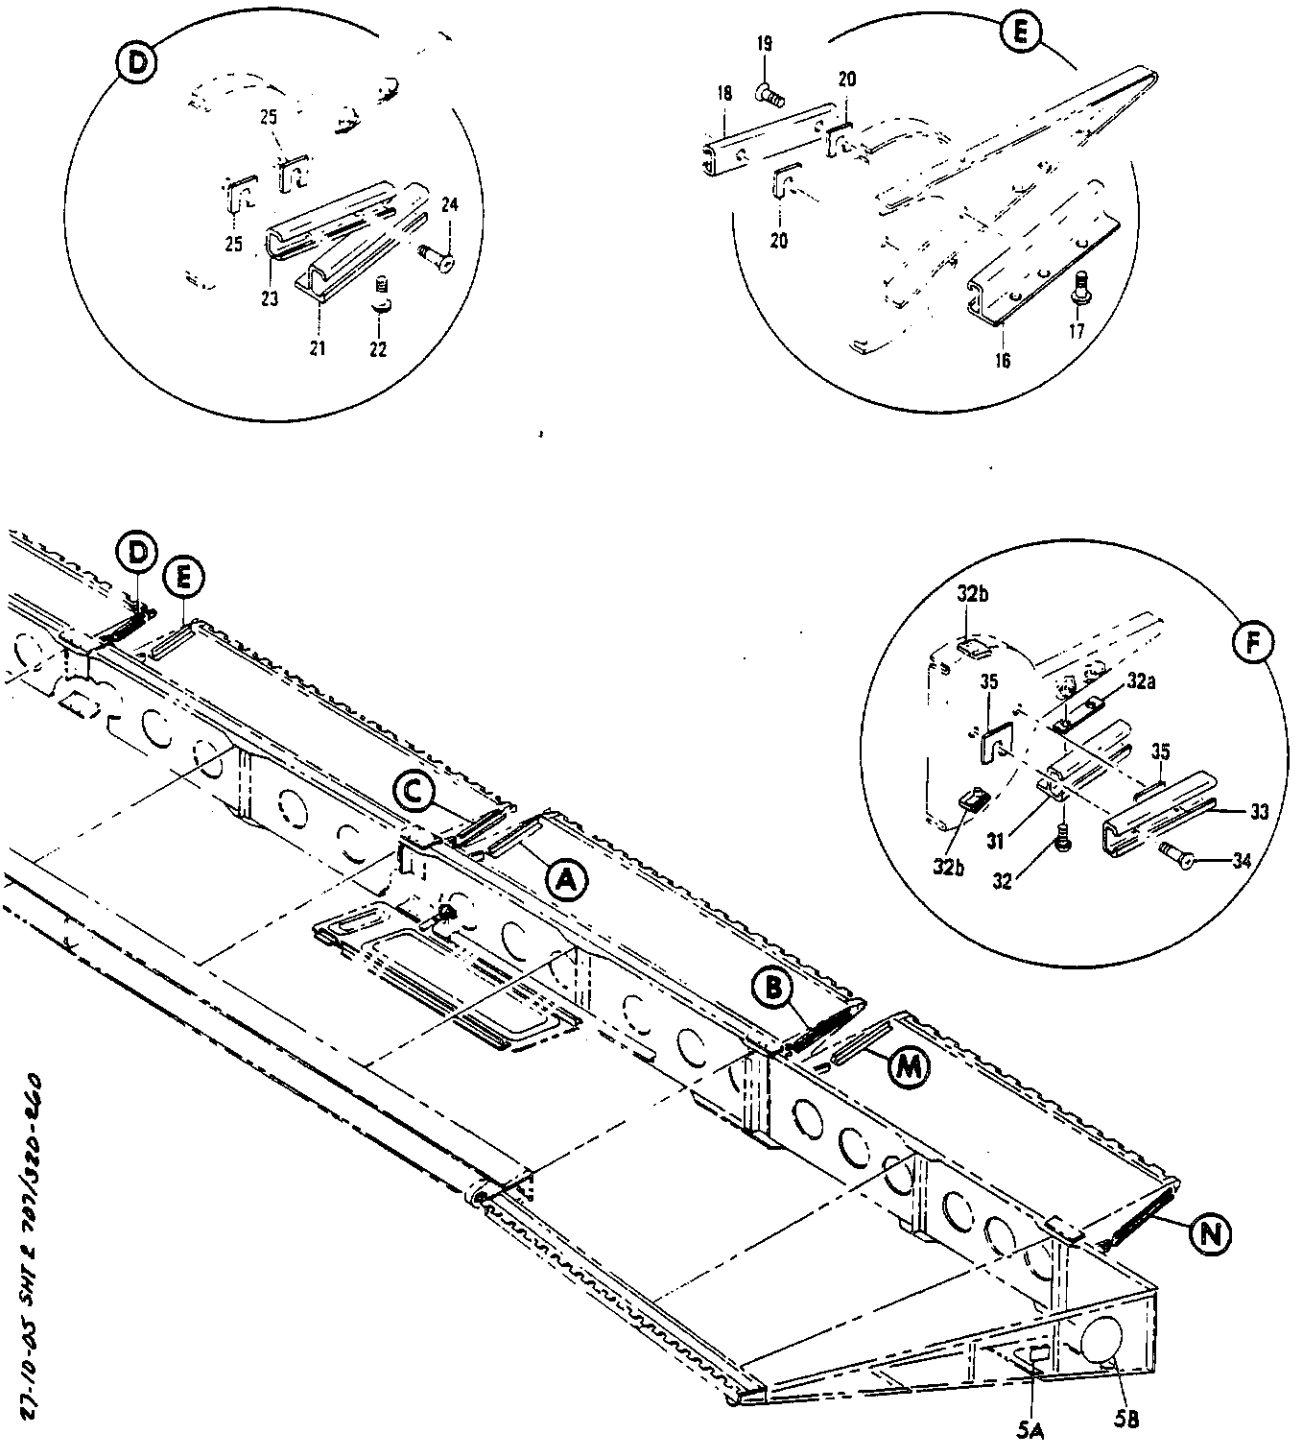


FIGURE 5. RIB INSTL, ELEVATOR NOSE (SHEET 2)

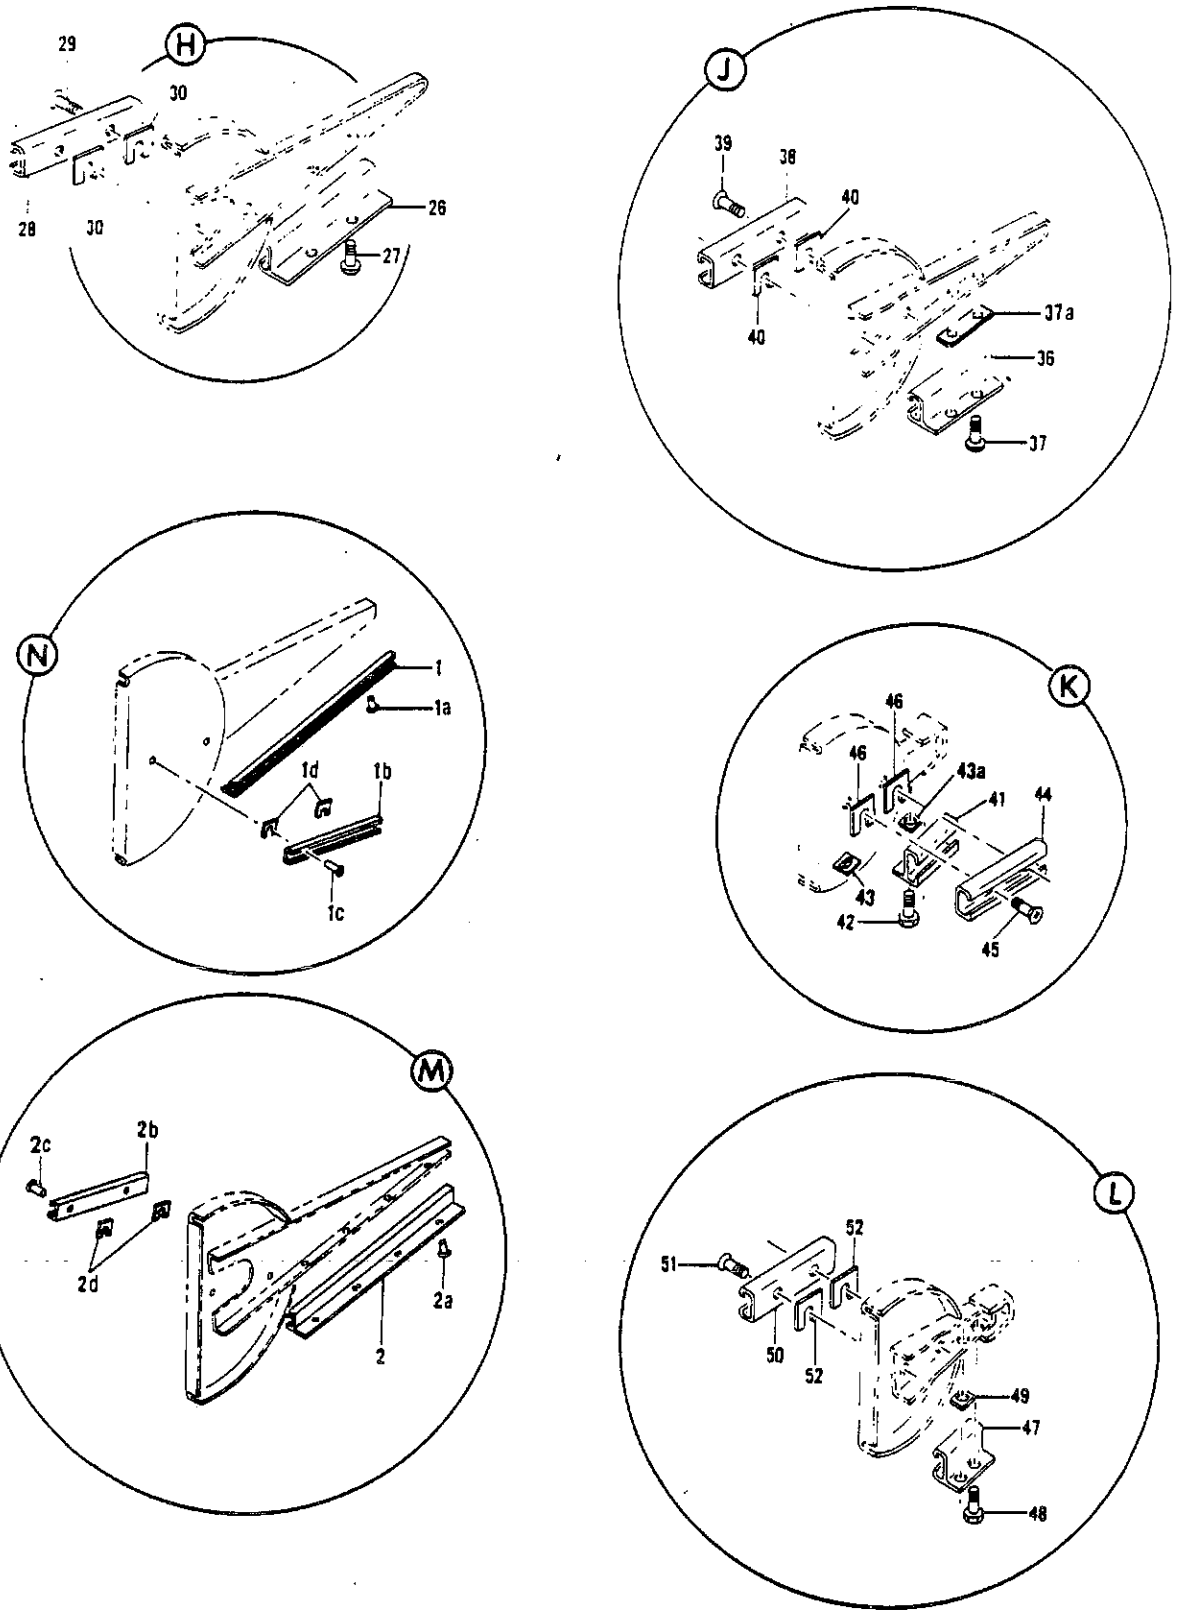

27-10-05 SM3 707340-260

FIGURE 5. RIB INSTL, ELEVATOR NOSE (SHEET 3)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	5		RIB INSTL, ELEVATOR NOSE.		
		69-5771-1	. RIB INSTL, ELEVATOR STATION 0 TO 8.46 ELEVATOR NOSE (LH) (SEE FIG. 4, ITEM 10 AND FIG. 4A, ITEM 70)		RF
		69-5771-2	. RIB INSTL, ELEVATOR STATION 0 TO 8.46 ELEVATOR NOSE (RH) (SEE FIG. 4, ITEM 10 AND FIG. 4A, ITEM 70)		RF
	1	69-3957-33	. . RETAINER, BALANCE PANEL SEAL (LH ONLY).		1
	1	69-3957-34	. . RETAINER, BALANCE PANEL SEAL (RH ONLY).		1
			ATTACHING PARTS		
	1A	AN520-10R6	. . SCREW		4
			-------*-------		
	1B	69-5771-19	. . RETAINER, SEAL (LH ONLY).		1
	1B	69-5771-20	. . RETAINER, SEAL (RH ONLY).		1
			ATTACHING PARTS		
	1C	NAS514P1032-10	. . SCREW		2
			-------*-------		
	1D	BACS40FD1	. . SHIM.		AR
		69-5766-1	. RIB INSTL, ELEVATOR STATION 23.78 ELEVATOR NOSE (LH) (SEE FIG. 4, ITEM 11 AND FIG. 4A, ITEM 71)		RF
		69-5766-2	. RIB INSTL, ELEVATOR STATION 23.78 ELEVATOR NOSE (RH) (SEE FIG. 4, ITEM 11 AND FIG. 4A, ITEM 71)		RF
	2	69-3957-801	. . RETAINER, BALANCE PANEL SEAL (LH ONLY).		1
	2	69-3957-802	. . RETAINER, BALANCE PANEL SEAL (RH ONLY).		1
			ATTACHING PARTS		
	2A	AN520-10R6	. . SCREW		4
R	2A	AN520-10R6	. . SCREW	5199	4
			-------*-------		
	2B	69-5766-11	. . RETAINER, SEAL (LH ONLY).		1
	2B	69-5766-12	. . RETAINER, SEAL (RH ONLY).		1
			ATTACHING PARTS		
	2C	NAS514P1032-10	. . SCREW		2
R	2C	NAS514P1032-10	. . SCREW	5199	2
			-------*-------		
	2D	BACS40FD1	. . SHIM.		AR
		9-65823-3001	. RIB INSTL, ELEVATOR STATION 27.38 ELEVATOR NOSE (LH) (SEE FIG. 4, ITEM 12 AND FIG. 4A, ITEM 72)		RF
		9-65823-3002	. RIB INSTL, ELEVATOR STATION 27.38 ELEVATOR NOSE (RH) (SEE FIG. 4, ITEM 12 AND FIG. 4A, ITEM 72)		RF
	2E	69-3957-13	. . RETAINER, BALANCE PANEL SEAL (LH ONLY).		1
	2E	69-3957-14	. . RETAINER, BALANCE PANEL SEAL (RH ONLY).		1
			ATTACHING PARTS		
	2F	AN520-10R7	. . SCREW		3
			-------*-------		
	3	9-65823-3011	. . RETAINER, SEAL (LH ONLY).		1
	3	9-65823-3012	. . RETAINER, SEAL (RH ONLY).		1
			ATTACHING PARTS		
	4	NAS514P1032-10	. . SCREW		2
			-------*-------		
	5	BACS40FD1	. . SHIM.		AR
R		65-7061-1	. RIB INSTL, ELEVATOR STATION 0-10.60 TO 0-24.82. . . .	0150	RF
R			CLOSURE (LH) (DELETED BY SB 2664) (SEE FIG. 4A,		
R			ITEM 71A)		
R		65-7061-19	. RIB INSTL, ELEVATOR STATION 0-10.60 TO 0-24.82. . . .	0150	RF
R			CLOSURE (ADDED BY SB 2664) (LH ONLY) (SEE FIG.		
R			4A, ITEM 71A)		
R		65-7061-19	. RIB INSTL, ELEVATOR STATION 0-10.60 TO 0-24.82. . . .	5199	RF
R			CLOSURE (LH) (SEE FIG. 4A, ITEM 71A)		
R		65-7061-2	. RIB INSTL, ELEVATOR STATION 0-10.60 TO 0-24.82. . . .	0150	RF
R			CLOSURE (RH) (DELETED BY SB 2664) (SEE FIG. 4A,		
R			ITEM 71A)		
R		65-7061-20	. RIB INSTL, ELEVATOR STATION 0-10.60 TO 0-24.82. . . .	0150	RF
R			CLOSURE (ADDED BY SB 2664) (RH ONLY) (SEE FIG.		
R			4A, ITEM 71A)		
R		65-7061-20	. RIB INSTL, ELEVATOR STATION 0-10.60 TO 0-24.82. . . .	5199	RF
R			CLOSURE (RH) (SEE FIG. 4A, ITEM 71A)		
	5A	AN7510-1	. . PLATE		1
	5B	65-7061-11	. . DOOR ACCESS		1
			ATTACHING PARTS		
		NAS221-8	. . SCREW		8
			-------*-------		
		9-65829-15	. RIB INSTL, ELEVATOR STATION 68.58 ELEVATOR NOSE (LH) (SEE FIG. 4, ITEM 13 AND FIG. 4A, ITEM 73)		RF
		9-65829-16	. RIB INSTL, ELEVATOR STATION 68.58 ELEVATOR NOSE (RH) (SEE FIG. 4, ITEM 13 AND FIG. 4A, ITEM 73)		RF
	6	69-3957-19	. . RETAINER, BALANCE PANEL SEAL (LH ONLY).		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
5 6	69-3957-20	. . RETAINER, BALANCE PANEL SEAL (RH ONLY).		1
		ATTACHING PARTS		
7	NAS603-7	. . SCREW		3
		-------*-------		
8	9-65829-17	. . RETAINER, SEAL (LH ONLY).		1
8	9-65829-18	. . RETAINER, SEAL (RH ONLY).		1
		ATTACHING PARTS		
9	NAS514P1032-10	. . SCREW		2
		-------*-------		
10	BACS40FD1	. . SHIM.		AR
	9-65830-13	. RIB INSTL, ELEVATOR STATION 72.18 ELEVATOR NOSE (LH)		RF
		(SEE FIG. 4, ITEM 14 AND FIG. 4A, ITEM 74)		
	9-65830-14	. RIB INSTL, ELEVATOR STATION 72.18 ELEVATOR NOSE (RH)		RF
		(SEE FIG. 4, ITEM 14 AND FIG. 4A, ITEM 74)		
11	69-3957-15	. . RETAINER, BALANCE PANEL SEAL (LH ONLY).		1
11	69-3957-16	. . RETAINER, BALANCE PANEL SEAL (RH ONLY).		1
		ATTACHING PARTS		
12	NAS603-7	. . SCREW		3
		-------*-------		
13	9-65830-15	. . RETAINER, SEAL (LH ONLY).		1
13	9-65830-16	. . RETAINER, SEAL (RH ONLY).		1
		ATTACHING PARTS		
14	NAS514P1032-10	. . SCREW		2
		-------*-------		
15	BACS40FD1	. . SHIM.		AR
	9-65836-13	. RIB INSTL, ELEVATOR STATION 113.38 ELEVATOR NOSE (LH)		RF
		(SEE FIG. 4, ITEM 15 AND FIG. 4A, ITEM 75)		
	9-65836-14	. RIB INSTL, ELEVATOR STATION 113.38 ELEVATOR NOSE (RH)		RF
		(SEE FIG. 4, ITEM 15 AND FIG. 4A, ITEM 75)		
16	69-3957-21	. . RETAINER, BALANCE PANEL SEAL (LH ONLY).		1
16	69-3957-22	. . RETAINER, BALANCE PANEL SEAL (RH ONLY).		1
		ATTACHING PARTS		
17	NAS603-7	. . SCREW		3
		-------*-------		
18	9-65836-15	. . RETAINER, SEAL (LH ONLY).		1
18	9-65836-16	. . RETAINER, SEAL (RH ONLY).		1
		ATTACHING PARTS		
19	NAS514P1032-10	. . SCREW		2
		-------*-------		
20	BACS40FD1	. . SHIM.		AR
	9-65837-13	. RIB INSTL, ELEVATOR STATION 116.98 ELEVATOR NOSE (LH)		RF
		(SEE FIG. 4, ITEM 16 AND FIG. 4A, ITEM 76)		
	9-65837-14	. RIB INSTL, ELEVATOR STATION 116.98 ELEVATOR NOSE (RH)		RF
		(SEE FIG. 4, ITEM 16 AND FIG. 4A, ITEM 76)		
21	69-3957-11	. . RETAINER, BALANCE PANEL SEAL (LH ONLY).		1
21	69-3957-12	. . RETAINER, BALANCE PANEL SEAL (RH ONLY).		1
		ATTACHING PARTS		
22	NAS603-7	. . SCREW		2
		-------*-------		
23	9-65837-15	. . RETAINER, SEAL (LH ONLY).		1
23	9-65837-16	. . RETAINER, SEAL (RH ONLY).		1
		ATTACHING PARTS		
24	NAS514P1032-10	. . SCREW		2
		-------*-------		
25	BACS40FD1	. . SHIM.		AR
	9-65843-13	. RIB INSTL, ELEVATOR STATION 158.18 ELEVATOR NOSE (LH)		RF
		(SEE FIG. 4, ITEM 17 AND FIG. 4A, ITEM 77)		
	9-65843-14	. RIB INSTL, ELEVATOR STATION 158.18 ELEVATOR NOSE (RH)		RF
		(SEE FIG. 4, ITEM 17 AND FIG. 4A, ITEM 77)		
26	69-3957-25	. . RETAINER, BALANCE PANEL SEAL (LH ONLY).		1
26	69-3957-26	. . RETAINER, BALANCE PANEL SEAL (RH ONLY).		1
		ATTACHING PARTS		
27	NAS603-7	. . SCREW		2
		-------*-------		
28	9-65843-15	. . RETAINER, SEAL (LH ONLY).		1
28	9-65843-16	. . RETAINER, SEAL (RH ONLY).		1
		ATTACHING PARTS		
29	NAS514P1032-10	. . SCREW		2
		-------*-------		
30	BACS40FD1	. . SHIM.		AR
	65-82081-1	. RIB INSTL, ELEVATOR STATION 161.78 ELEVATOR NOSE (LH)		RF
		(SEE FIG. 4A, ITEM 78)		
	65-82081-2	. RIB INSTL, ELEVATOR STATION 161.78 ELEVATOR NOSE (RH)		RF
		(SEE FIG. 4A, ITEM 78)		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5 31	69-3957-17	. . RETAINER, BALANCE PANEL SEAL (LH ONLY).		1
31	69-3957-18	. . RETAINER, BALANCE PANEL SEAL (RH ONLY).		1
		ATTACHING PARTS		
32	NAS603-7P	. . SCREW		2
		-------*-------		
32A	65-82081-13	. . FILLER.		1
32B	65-82081-14	. . FILLER.		2
33	65-82081-11	. . RETAINER, SEAL (LH ONLY).		1
33	65-82081-12	. . RETAINER, SEAL (RH ONLY).		1
		ATTACHING PARTS		
34	NAS514P1032-10	. . SCREW		2
		-------*-------		
35	BACS40FD1	. . SHIM.		AR
	9-65850-13	. RIB INSTL, ELEVATOR STATION 202.98 ELEVATOR NOSE (LH) (SEE FIG. 4, ITEM 19 AND FIG. 4A, ITEM 79)		RF
	9-65850-14	. RIB INSTL, ELEVATOR STATION 202.98 ELEVATOR NOSE (RH) (SEE FIG. 4, ITEM 19 AND FIG. 4A, ITEM 79)		RF
36	69-3957-23	. . RETAINER, BALANCE PANEL SEAL (LH ONLY).		1
36	69-3957-24	. . RETAINER, BALANCE PANEL SEAL (RH ONLY).		1
		ATTACHING PARTS		
37	NAS603-7	. . SCREW		2
		-------*-------		
37A	9-65850-17	. . FILLER.		1
38	9-65850-15	. . RETAINER, SEAL (LH ONLY).		1
38	9-65850-16	. . RETAINER, SEAL (RH ONLY).		1
		ATTACHING PARTS		
39	NAS514P1032-10	. . SCREW		2
		-------*-------		
40	BACS40FD1	. . SHIM.		AR
	65-82082-1	. RIB INSTL, ELEVATOR STATION 206.58 ELEVATOR NOSE (LH) (SEE FIG. 4A, ITEM 80)		RF
	65-82082-2	. RIB INSTL, ELEVATOR STATION 206.58 ELEVATOR NOSE (RH) (SEE FIG. 4A, ITEM 80)		RF
41	69-3957-29	. . RETAINER, BALANCE PANEL SEAL (LH ONLY).		1
41	69-3957-30	. . RETAINER, BALANCE PANEL SEAL (RH ONLY).		1
		ATTACHING PARTS		
42	NAS1103-3	. . BOLT.		2
		-------*-------		
43	65-82082-11	. . FILLER, RADIUS.		1
43A	65-82082-12	. . FILLER.		1
44	65-82082-13	. . RETAINER, SEAL (LH ONLY).		1
44	65-82082-14	. . RETAINER, SEAL (RH ONLY).		1
		ATTACHING PARTS		
45	NAS514P1032-10	. . SCREW		2
		-------*-------		
46	BACS40FD1	. . SHIM.		AR
	65-82085-1	. RIB INSTL, ELEVATOR STATION 247.80 ELEVATOR NOSE (LH) (SEE FIG. 4A, ITEM 81)		RF
	65-82085-2	. RIB INSTL, ELEVATOR STATION 247.80 ELEVATOR NOSE (RH) (SEE FIG. 4A, ITEM 81)		RF
47	69-3957-27	. . RETAINER, BALANCE PANEL SEAL (LH ONLY).		1
47	69-3957-28	. . RETAINER, BALANCE PANEL SEAL (RH ONLY).		1
		ATTACHING PARTS		
48	NAS1103-3	. . BOLT.		2
		-------*-------		
49	65-82085-13	. . FILLER.		1
50	65-82085-11	. . RETAINER, SEAL (LH ONLY).		1
50	65-82085-12	. . RETAINER, SEAL (RH ONLY).		1
		ATTACHING PARTS		
51	NAS514P1032-10	. . SCREW		2
		-------*-------		
52	BACS40FD1	. . SHIM.		AR
	9-65858-1	. RIB INSTL, ELEVATOR STATION 251.40 ELEVATOR NOSE (LH) (SEE FIG. 4, ITEM 22 AND FIG. 4A, ITEM 82)		RF
	9-65858-2	. RIB INSTL, ELEVATOR STATION 251.40 ELEVATOR NOSE (RH) (SEE FIG. 4, ITEM 22 AND FIG. 4A, ITEM 82)		RF
53	10-2737-67	. . SEAL, FABRIC COVERED AERODYNAMIC STRIP.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

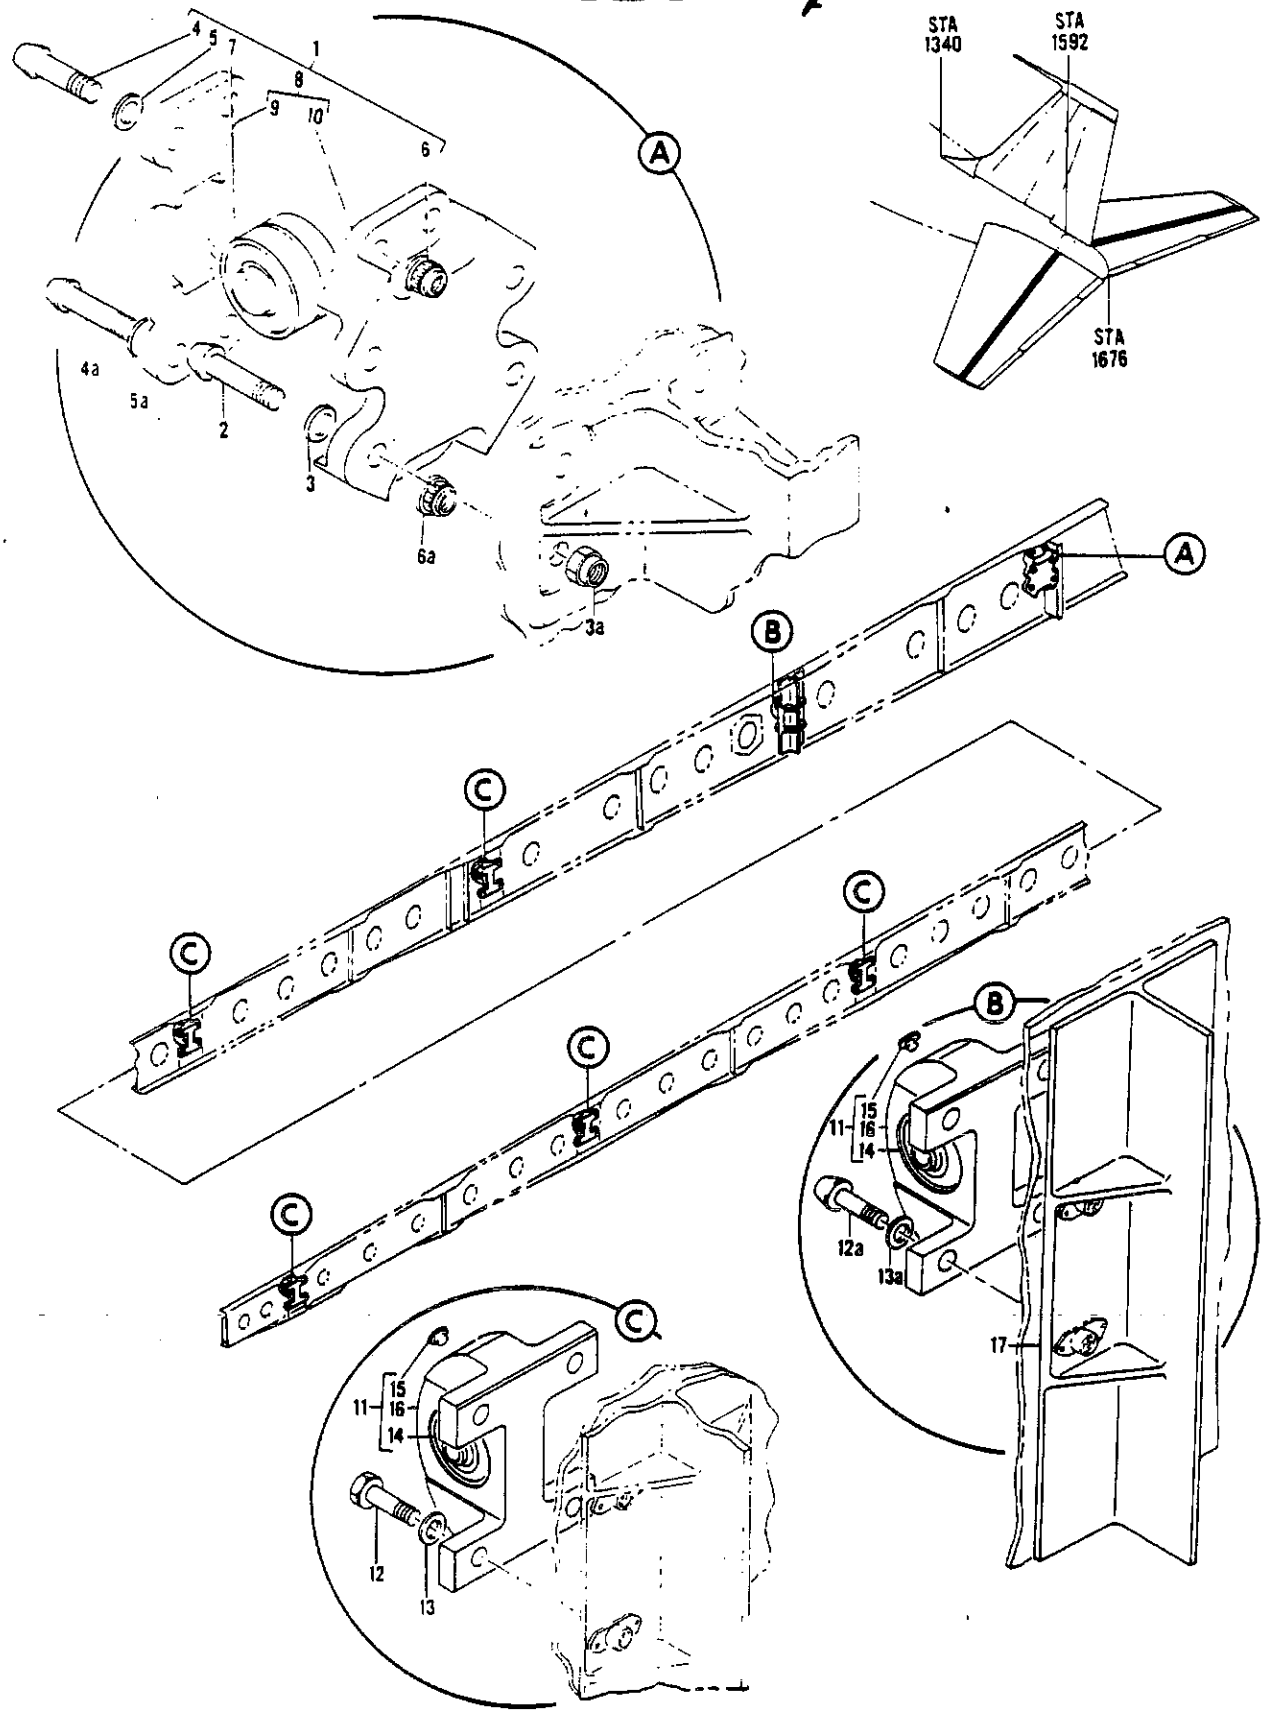


FIGURE 6. SPAR INSTL, ELEVATOR FRONT

27-10-06 707-320-260

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
6	5-96280-3065	SPAR INSTL, ELEVATOR FRONT (LH) (SEE FIG. 4, ITEM 46. . AND FIG. 4A, ITEM 69)		RF
	5-96280-3066	SPAR INSTL, ELEVATOR FRONT (RH) (SEE FIG. 4, ITEM 46. . AND FIG. 4A, ITEM 69)		RF
1	9-65805	. FITTING ASSY, ELEVATOR THRUST HINGE . . . . . ATTACHING PARTS		1
2	MS20005-13	. BOLT.		4
3	MS20002C5	. WASHER.		4
3A	NAS679A5	. NUT		4
		-------*-------		
4	MS20005-10	. . BOLT.		3
4A	MS20006-10	. . BOLT.		1
5	MS20002C5	. . WASHER.		3
5A	MS20002C6	. . WASHER.		1
6	BACN10B-L5L	. . NUT		3
6A	BACN10B-L6L	. . NUT		1
7	BACB10C85R	. . BEARING		1
8	9-65805-1	. . FITTING ASSY, ELEVATOR THRUST HINGE		1
9	9-65805-2	. . . CAP ASSY, ELEVATOR THRUST HINGE FITTING (MATCHED PART, ORDER ASSEMBLY ONLY)		1
10	9-65805-3	. . . FITTING, ELEVATOR THRUST HINGE (MATCHED PART, . . ORDER ASSEMBLY ONLY)		1
11	6-83193-3002	. FITTING ASSY, ELEVATOR AND RUDDER HINGE . . . . . ATTACHING PARTS		6
12	AN4-12A	. BOLT.		20
12A	MS20004-12	. BOLT.		4
13	AN960D416	. WASHER.		20
13A	MS20002C4	. WASHER.		4
		-------*-------		
14	BACB10C135H	. . BEARING		1
15	NAS516-1	. . FITTING, LUBRICATOR		1
16	6-83193-3003	. . FITTING, ELEVATOR AND RUDDER HINGE.		1
17	9-67010-3000	. FITTING, ELEVATOR AND RUDDER HINGE SUPPORT.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

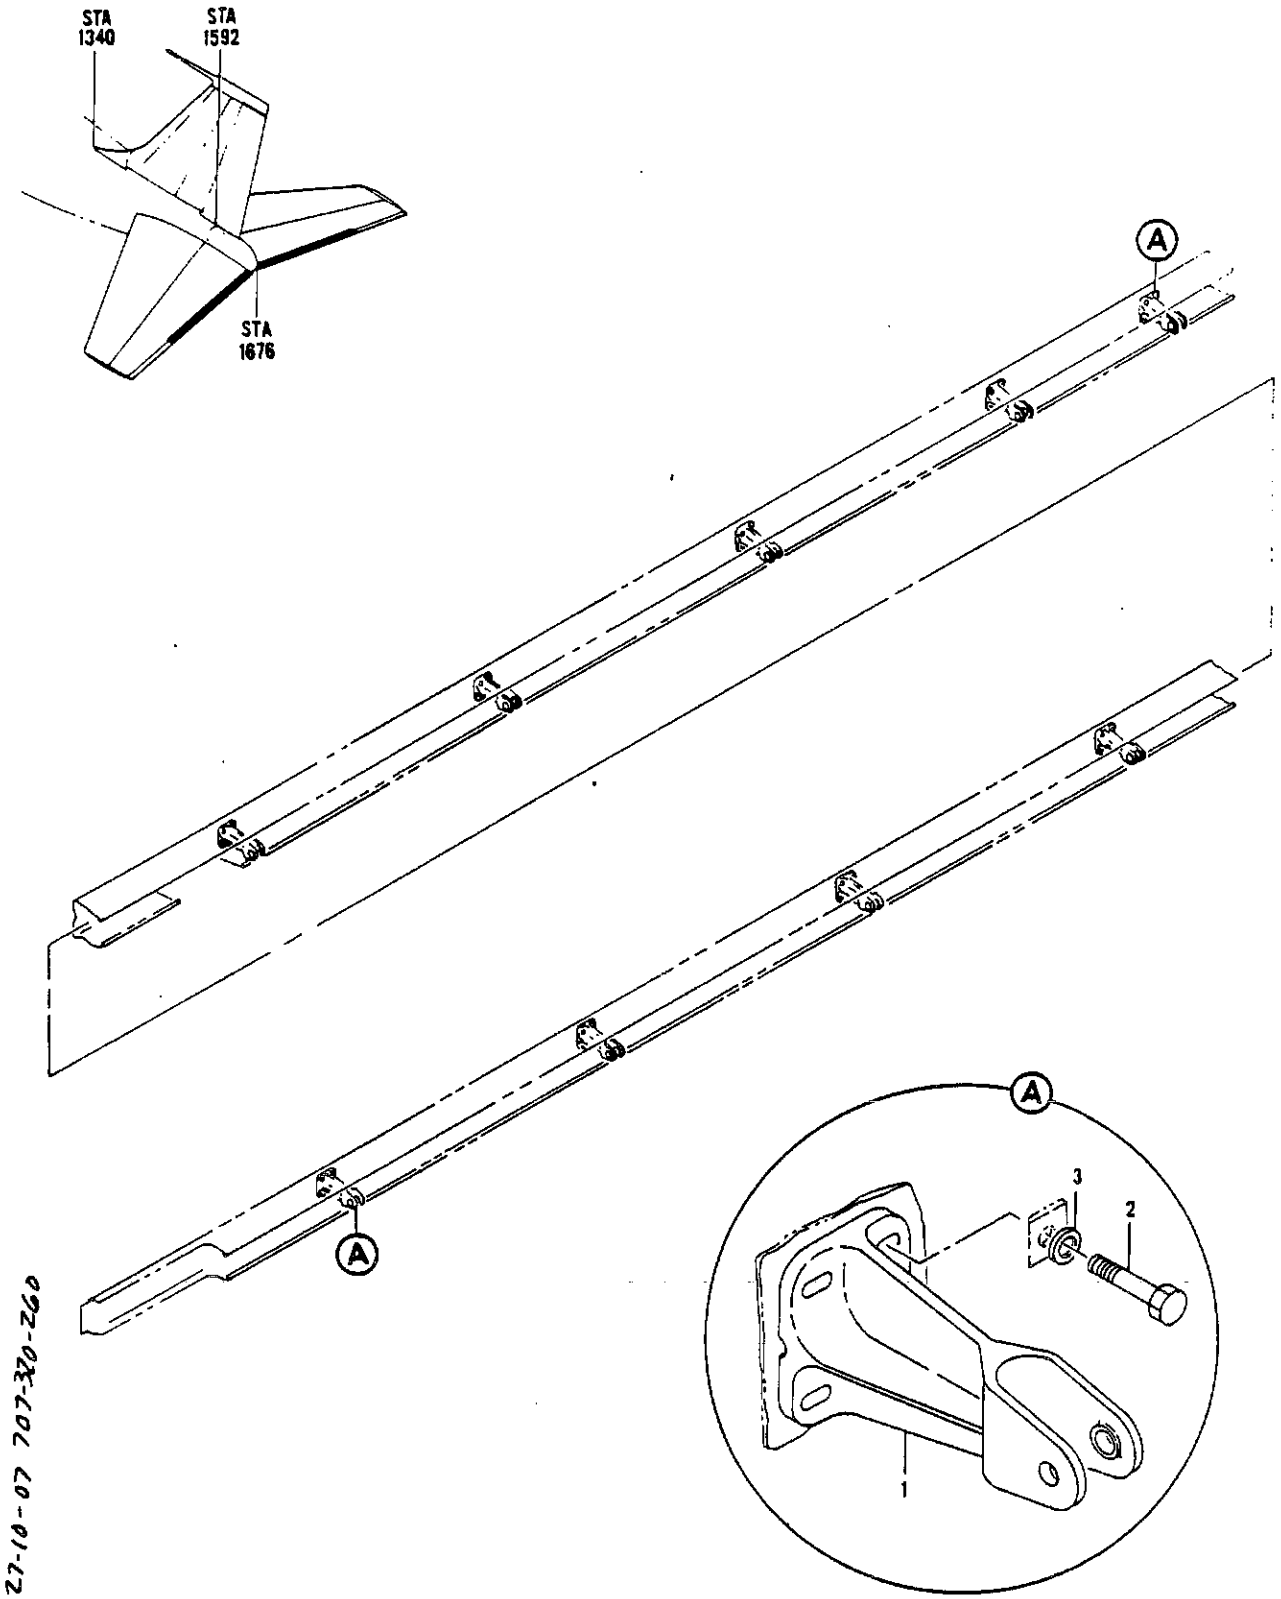


FIGURE 7. SPAR INSTL, ELEVATOR TRAILING EDGE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
7	65-5799-23	SPAR INSTL, ELEVATOR TRAILING EDGE (LH) (SEE FIG. 4,. . ITEM 47 AND FIG. 4A, ITEMS 47 AND 70)		RF
	65-5799-24	SPAR INSTL, ELEVATOR TRAILING EDGE (RH) (SEE FIG. 4,. . ITEM 47 AND FIG. 4A, ITEMS 47 AND 70)		RF
1	65-5675	. HINGE, ELEVATOR TABS FITTING. . . . . ATTACHING PARTS		9
2	AN3-10A	. BOLT.		36
3	AN960PD10	. WASHER.		36
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE


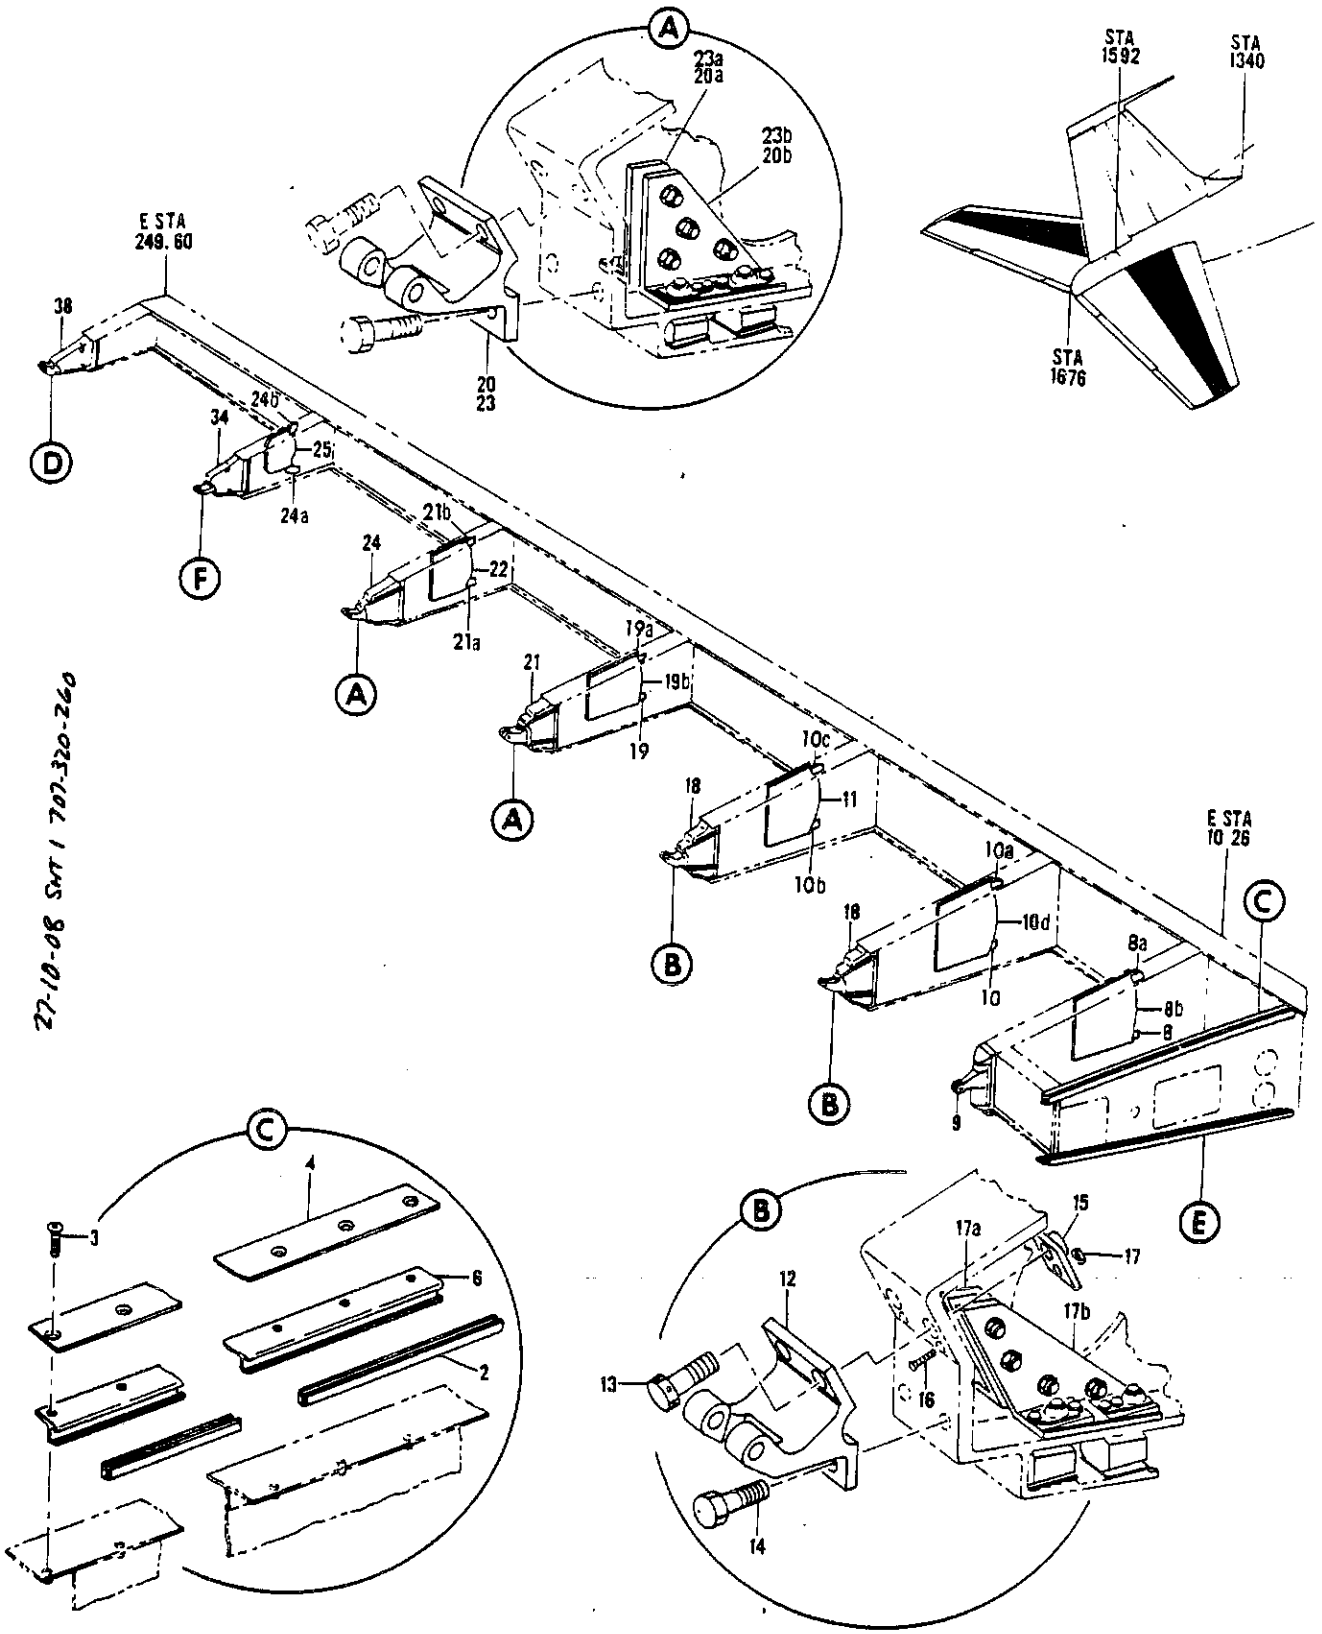


FIGURE 8. RIB INSTL, STABILIZER TRAILING EDGE (SHEET 1)

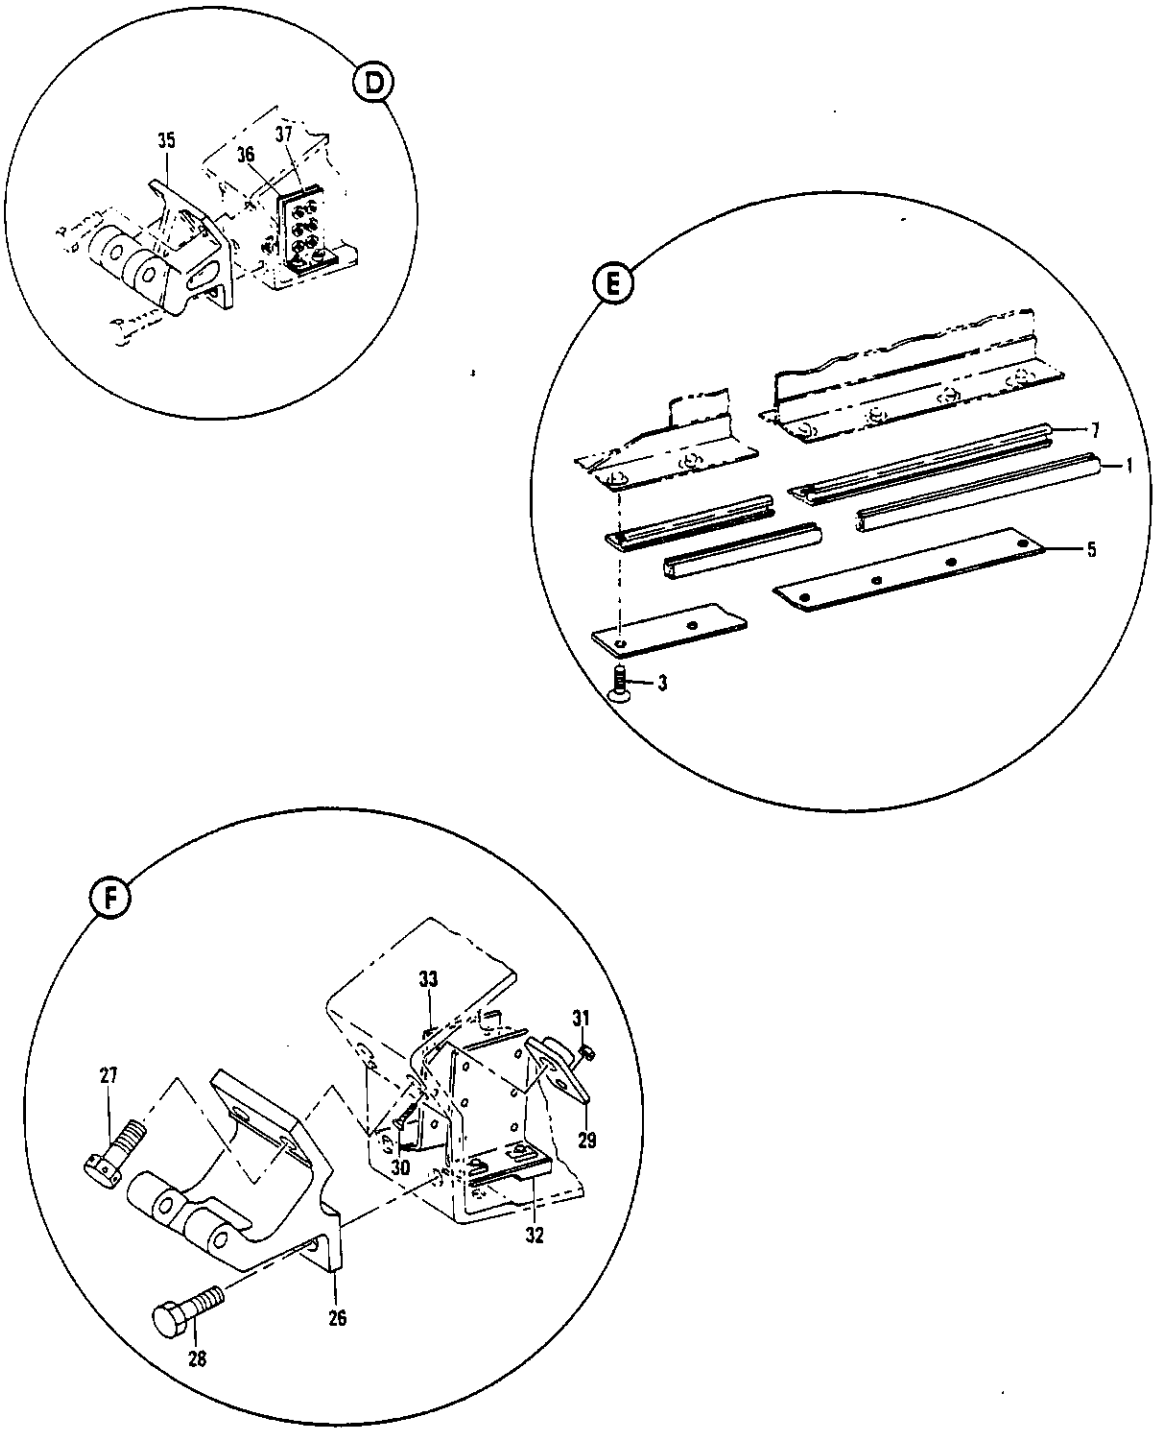

27-10-08 SHT 2 707-320-260

FIGURE 8. RIB INSTL, STABILIZER TRAILING EDGE (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	8		RIB INSTL, STABILIZER TRAILING EDGE		
R		65-6580-1	. RIB INSTL, STABILIZER TRAILING EDGE CLOSURE (LH) (SEE 55-2, FIG. 3, ITEM 50 AND 55-2, FIG. 4, ITEM 47)	0150	RF
R		65-6580-1	. RIB INSTL, STABILIZER TRAILING EDGE CLOSURE (LH). . . (VARIABLE DWG;65-6580-5001) (SEE 55-2, FIG. 4, ITEM 47)	5199	RF
R		65-6580-2	. RIB INSTL, STABILIZER TRAILING EDGE CLOSURE (RH) (SEE 55-2, FIG. 3, ITEM 50 AND 55-2, FIG. 4, ITEM 47)	0150	RF
R		65-6580-2	. RIB INSTL, STABILIZER TRAILING EDGE CLOSURE (RH). . . (VARIABLE DWG;65-6580-5002) (SEE 55-2, FIG. 4, ITEM 47)	5199	RF
	1	10-60120-40	. . SEAL, AERODYNAMIC FABRIC COVERED.		1
	2	10-60120-41	. . SEAL, AERODYNAMIC FABRIC COVERED.		1
	3	NAS517-3-3	. . SCREW		28
	4	65-6580-25	. . PLATE, STABILIZER TRAILING EDGE CLOSURE RIB COVER . (LH ONLY)		1
	4	65-6580-26	. . PLATE, STABILIZER TRAILING EDGE CLOSURE RIB COVER . (RH ONLY)		1
	5	65-6580-27	. . PLATE, STABILIZER TRAILING EDGE CLOSURE RIB COVER . (LH ONLY)		1
	5	65-6580-28	. . PLATE, STABILIZER TRAILING EDGE CLOSURE RIB COVER . (RH ONLY)		1
	6	65-6580-21	. . RETAINER, STABILIZER TRAILING EDGE CLOSURE RIB SEAL (LH ONLY)		1
	6	65-6580-22	. . RETAINER, STABILIZER TRAILING EDGE CLOSURE RIB SEAL (RH ONLY)		1
	7	65-6580-23	. . RETAINER, STABILIZER TRAILING EDGE CLOSURE RIB SEAL (LH ONLY)		1
	7	65-6580-24	. . RETAINER, STABILIZER TRAILING EDGE CLOSURE RIB SEAL (RH ONLY)		1
		65-4848-33	. RIB INSTL, ELEVATOR STATION 0 TO 10.26 STABILIZER . . TRAILING EDGE (LH) (SEE 55-2, FIG. 3, ITEM 51 AND 55-2, FIG. 4, ITEM 48)		RF
		65-4848-34	. RIB INSTL, ELEVATOR STATION 0 TO 10.26 STABILIZER . . TRAILING EDGE (RH) (SEE 55-2, FIG. 3, ITEM 51) AND 55-2, FIG. 4, ITEM 48)		RF
	8	69-20837-1	. . PLATE ASSY, STABILIZER TRAILING EDGE RIB SPLICE (LH ONLY)		1
	8	69-20837-2	. . PLATE ASSY, STABILIZER TRAILING EDGE RIB SPLICE (RH ONLY)		1
	8A	69-20837-2	. . PLATE ASSY, STABILIZER TRAILING EDGE RIB SPLICE (LH ONLY)		1
	8A	69-20837-1	. . PLATE ASSY, STABILIZER TRAILING EDGE RIB SPLICE (RH ONLY)		1
			ATTACHING PARTS		
		MS20426D5	. . RIVET		4
		NAS517-3-0	. . SCREW		10
			-------*-------		
	8B	65-4848-36	. . PANEL, ELEVATOR STATION 0 TO 10.26 STABILIZER . . . TRAILING EDGE RIB OUTBOARD ACCESS		1
			ATTACHING PARTS		
		NAS517-3-0	. . SCREW		13
		NAS517-4-2	. . SCREW		6
			-------*-------		
R	9	5-96398-2000	. . FITTING, THRUST HINGE	0150	1
R	9	5-96398-2002	. . FITTING, THRUST HINGE	5199	1
			ATTACHING PARTS		
		MS20006-12	. . BOLT.		2
		MS20006-14	. . BOLT.		2
		MS20002C16	. . WASHER.		4
			-------*-------		
		65-4849-31	. RIB INSTL, ELEVATOR STATION 25.58 STABILIZER TRAILING EDGE (LH) (SEE 55-2, FIG. 3, ITEM 52 AND 55-2, FIG. 4, ITEM 49)		RF
		65-4849-32	. RIB INSTL, ELEVATOR STATION 25.58 STABILIZER TRAILING EDGE (RH) (SEE 55-2, FIG. 3, ITEM 52 AND 55-2, FIG. 4, ITEM 49)		RF
		5-87455-3015	. RIB INSTL, ELEVATOR STATION 70.38 STABILIZER TRAILING EDGE (LH) (SEE 55-2, FIG. 3, ITEM 53 AND 55-2, FIG. 4, ITEM 50)		RF

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	8	5-87455-3016	. RIB INSTL, ELEVATOR STATION 70.38 STABILIZER TRAILING EDGE (RH) (SEE 55-2, FIG. 3, ITEM 53 AND 55-2, FIG. 4, ITEM 50)		RF
	10	69-20837-5	. . PLATE ASSY, STABILIZER TRAILING EDGE RIB SPLICE . . (USED ON 65-4849-31 AND -1)		1
	10	69-20837-6	. . PLATE ASSY, STABILIZER TRAILING EDGE RIB SPLICE . . (USED ON 65-4849-32 AND -2)		1
	10A	69-20837-6	. . PLATE ASSY, STABILIZER TRAILING EDGE RIB SPLICE . . (USED ON 65-4849-31 AND -1)		1
	10A	69-20837-5	. . PLATE ASSY, STABILIZER TRAILING EDGE RIB SPLICE . . (USED ON 65-4849-32 AND -2)		1
	10B	69-20837-3	. . PLATE ASSY, STABILIZER TRAILING EDGE RIB SPLICE . . (USED ON 5-87455-3015 AND -3001)		1
	10B	69-20837-4	. . PLATE ASSY, STABILIZER TRAILING EDGE RIB SPLICE . . (USED ON 5-87455-3016 AND -3002)		1
	10C	69-20837-4	. . PLATE ASSY, STABILIZER TRAILING EDGE RIB SPLICE . . (USED ON 5-87455-3015 AND -3001)		1
	10C	69-20837-3	. . PLATE ASSY, STABILIZER TRAILING EDGE RIB SPLICE . . (USED ON 5-87455-3016 AND -3002)		1
			ATTACHING PARTS		
		MS20426D5	. . RIVET		4
		NAS517-3-0	. . SCREW		8
			-------*-------		
	10D	65-4849-33	. . PANEL, ELEVATOR STATION 25.58 STABILIZER TRAILING EDGE RIB OUTBOARD ACCESS (USED ON 65-4849-31 AND -32)		1
	11	5-87455-3014	. . PANEL, ELEVATOR STATION 70.38 STABILIZER TRAILING EDGE RIB OUTBOARD ACCESS (USED ON 5-87455-3015 AND -3016)		1
			ATTACHING PARTS		
		NAS517-3-0	. . SCREW		13
		NAS517-4-2	. . SCREW		4
			-------*-------		
	12	69-4126	. . FITTING, HORIZONTAL STABILIZER HINGE.		1
			ATTACHING PARTS		
	13	NAS1306-7HW	. . BOLT.		2
	14	AN5-10A	. . BOLT.		2
			-------*-------		
	15	63-8310	. . NUTPLATE, STABILIZER HINGE RUB.		2
			ATTACHING PARTS		
	16	NAS514P1032-12	. . SCREW		2
	17	NAS679A3W	. . NUT		2
			-------*-------		
R R R R	18	65-19429-7	. . FITTING, ELEVATOR STATION 25.58 RIB HINGE TERMINAL (OPTIONAL TO 65-19429-6)	5199	1
R R R R	18	65-19429-6	. . FITTING, ELEVATOR STATION 25.58 RIB HINGE TERMINAL (OPTIONAL 65-19429-7)	5199	1
R	18	65-19429-2	. . FITTING, ELEVATOR STATION 70.38 RIB HINGE TERMINAL	0150	1
			ATTACHING PARTS		
		BACR15AY8-6	. . RIVET, (USED ON 65-4849-1, -2, -31 AND -32)		4
		MS20005-14	. . BOLT.		4
		NAS334CPA9	. . BOLT, (USED ON 65-4849-1, -2, -31 AND -32).		2
		NAS334CPA11	. . BOLT, (USED ON 65-4849-1, -2, -31 AND -32).		2
		NAS334CPA6	. . BOLT, (USED ON 5-87455-3001, -3002, -3015 AND -3016) . . .		4
		NAS517-3-3	. . SCREW, (USED ON 5-87455-3001, -3002, -3015 AND. . . -3016)		4
		63-8355	. . FILLER, STABILIZER TRAILING EDGE RIB (USED ON . . . 65-4849-1, -2, -31 AND -32)		2
		65-4849-23	. . FILLER, ELEVATOR STATION 25.58 STABILIZER TRAILING EDGE RIB (USED ON 65-4849-1, -2, -31 AND -32)		4
		5-87455-2031	. . FILLER, ELEVATOR STATION 70.30 STABILIZER TRAILING EDGE RIB RADIUS FILLER (USED ON 5-87455-3001, -3002, -3015 AND -3016)		2
		63-2676	. . FILLER, STABILIZER RIB HINGE TAPERED (USED ON . . . 5-87455-3001, -3002, -3015 AND -3016)		AR
		BACS40B28-32	. . SHIM.		AR
		AN960-416	. . WASHER, (USED ON 65-4849-1, -2, -31 AND -32). . . .		4
		AN960D516	. . WASHER.		4
		MS20002C5	. . WASHER, (USED ON 5-87455-3001, -3002, -3015 AND . . -3016)		4
		NAS528A8	. . COLLAR, (USED ON 65-4849-1, -2, -31 AND -32). . . .		4
		BACN10B-L5L	. . NUT		4
		NAS679A4W	. . NUT		4
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	8	5-87456-3017	. RIB INSTL, ELEVATOR STATION 115.18 STABILIZER . . . . TRAILING EDGE (LH) (SEE 55-2, FIG. 3, ITEM 54 AND 55-2, FIG. 4, ITEM 51)		RF
		5-87456-3018	. RIB INSTL, ELEVATOR STATION 115.18 STABILIZER . . . . TRAILING EDGE (RH) (SEE 55-2, FIG. 3, ITEM 54 AND 55-2, FIG. 4, ITEM 51)		RF
	19	69-20838-1	. . PLATE ASSY, ELEVATOR STATION 115.18 STABILIZER. . . TRAILING EDGE RIB SPLICE (LH ONLY)		1
	19	69-20838-2	. . PLATE ASSY, ELEVATOR STATION 115.18 STABILIZER. . . TRAILING EDGE RIB SPLICE (RH ONLY)		1
	19A	69-20838-2	. . PLATE ASSY, ELEVATOR STATION 115.18 STABILIZER. . . TRAILING EDGE RIB SPLICE (LH ONLY)		1
	19A	69-20838-1	. . PLATE ASSY, ELEVATOR STATION 115.18 STABILIZER. . . TRAILING EDGE RIB SPLICE (RH ONLY)		1
			ATTACHING PARTS		
		MS20426D5	. . RIVET		2
		MS20426D5	. . RIVET		2
		NAS517-3-0	. . SCREW		6
			-------*-------		
	19B	5-87456-3013	. . PANEL, ELEVATOR STATION 115.18 STABILIZER TRAILING EDGE RIB OUTBOARD ACCESS		1
			ATTACHING PARTS		
		NAS517-3-0	. . SCREW		11
		NAS517-4-1	. . SCREW		4
			-------*-------		
	20	9-65146-1	. . FITTING, HORIZONTAL STABILIZER AND FIN HINGE. . . .		1
			ATTACHING PARTS		
		AN5-10A	. . BOLT.		4
			-------*-------		
R	21	65-19430-1	. . FITTING, ELEVATOR STATION 115.18 RIB HINGE TERMINAL	0150	1
R	21	65-19430-5	. . FITTING, TERMINAL	5199	1
R			(OPTIONAL 65-19430-4)		
R	21	65-19430-4	. . FITTING, TERMINAL	5199	1
R			(OPTIONAL TO 65-19430-5)		
			ATTACHING PARTS		
		MS20004-10	. . BOLT.		4
		NAS333CPA6	. . BOLT.		4
		NAS517-3-5	. . SCREW		4
		63-2676	. . FILLER, STABILIZER RIB HINGE TAPERED.		AR
		BACS40B28-32	. . SHIM.		AR
		5-87456-809	. . WASHER, ELEVATOR STATION 115.18 STABILIZER TRAILING EDGE CSINK (ALTERED FROM MS20002C4)		4
		AN960D416	. . WASHER.		4
		AN960-10	. . WASHER.		4
		BACN10BL-4L	. . NUT		4
		NAS679A3W	. . NUT		4
			-------*-------		
		5-87457-3015	. RIB INSTL, ELEVATOR STATION 159.98 STABILIZER . . . . TRAILING EDGE (LH) (SEE 55-2, FIG. 3, ITEM 55 AND 55-2, FIG. 4, ITEM 52)		RF
		5-87457-3016	. RIB INSTL, ELEVATOR STATION 159.98 STABILIZER . . . . TRAILING EDGE (RH) (SEE 55-2, FIG. 3, ITEM 55 AND 55-2, FIG. 4, ITEM 52)		RF
	21A	69-20839-1	. . PLATE ASSY, STABILIZER TRAILING EDGE RIB SPLICE (LH ONLY)		1
	21A	69-20839-2	. . PLATE ASSY, STABILIZER TRAILING EDGE RIB SPLICE (RH ONLY)		1
	21B	69-20839-2	. . PLATE ASSY, STABILIZER TRAILING EDGE RIB SPLICE (LH ONLY)		1
	21B	69-20839-1	. . PLATE ASSY, STABILIZER TRAILING EDGE RIB SPLICE (RH ONLY)		1
			ATTACHING PARTS		
		MS20426D5	. . RIVET		2
		MS20426D5	. . RIVET		4
		NAS517-3-0	. . SCREW		4
			-------*-------		
	22	5-87457-3013	. . PANEL, ELEVATOR STATION 159.98 STABILIZER TRAILING EDGE RIB OUTBOARD ACCESS		1
			ATTACHING PARTS		
		NAS517-3-0	. . SCREW		9
		NAS517-4-2	. . SCREW		2
			-------*-------		
	23	9-65146-1	. . FITTING, HORIZONTAL STABILIZER AND FIN HINGE. . . .		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	8		ATTACHING PARTS		
		AN5-10A	. . BOLT.		4
			-------*-------		
R	24	65-19431-4	. . FITTING, ELEVATOR STATION 159.98 RIB HINGE TERMINAL	5199	1
R	24	65-19431-1	. . FITTING, ELEVATOR STATION 159.98 RIB HINGE TERMINAL	0150	1
			ATTACHING PARTS		
		MS20004-10	. . BOLT.		4
		NAS334CPA6	. . BOLT.		4
		NAS517-3-5	. . SCREW		4
		63-2676	. . FILLER, STABILIZER RIB HINGE TAPERED.		1
		BACS40B28-3Z	. . SHIM.		AR
		5-87457-25	. . FILLER, ELEVATOR STATION 159.98 STABILIZER TRAILING EDGE RADIUS		2
		5-87457-806	. . WASHER, ELEVATOR STATION 159.98 STABILIZER TRAILING EDGE CSINK (ALTERED FROM MS20002C4)		4
		AN960D416	. . WASHER.		4
		AN960-416	. . WASHER.		2
		NAS679A4W	. . NUT		8
			-------*-------		
		5-87458-3011	. RIB INSTL, ELEVATOR STATION 204.78 STABILIZER . . . . TRAILING EDGE (LH) (SEE 55-2, FIG. 3, ITEM 56 AND 55-2, FIG. 4, ITEM 53)		RF
		5-87458-3012	. RIB INSTL, ELEVATOR STATION 204.78 STABILIZER . . . . TRAILING EDGE (RH) (SEE 55-2, FIG. 3, ITEM 56 AND 55-2, FIG. 4, ITEM 53)		RF
	24A	69-20840-1	. . PLATE ASSY, STABILIZER TRAILING EDGE RIB SPLICE (LH ONLY)		1
	24A	69-20840-2	. . PLATE ASSY, STABILIZER TRAILING EDGE RIB SPLICE (RH ONLY)		1
	24B	69-20840-2	. . PLATE ASSY, STABILIZER TRAILING EDGE RIB SPLICE (LH ONLY)		1
	24B	69-20840-1	. . PLATE ASSY, STABILIZER TRAILING EDGE RIB SPLICE (RH ONLY)		1
			ATTACHING PARTS		
		MS20426D5	. . RIVET		2
		MS20426D5	. . RIVET		2
		NAS517-3-0	. . SCREW		6
			-------*-------		
	25	5-87458-3013	. . PANEL, ELEVATOR STATION 204.78 STABILIZER TRAILING EDGE RIB OUTBOARD ACCESS		1
			ATTACHING PARTS		
		NAS517-3-0	. . SCREW		6
		NAS517-4-3	. . SCREW		2
			-------*-------		
	26	69-4126	. . FITTING, HORIZONTAL STABILIZER HINGE.		1
			ATTACHING PARTS		
	27	NAS1306-7HW	. . BOLT.		2
	28	AN5-10A	. . BOLT.		2
			-------*-------		
	29	63-8310	. . NUTPLATE, STABILIZER RIB HINGE.		2
			ATTACHING PARTS		
	30	NAS514P1032-12	. . SCREW		2
	31	NAS679A3W	. . NUT		2
			-------*-------		
R	34	65-19432-2	. . FITTING, ELEVATOR STATION 204.78 RIB HINGE TERMINAL	0150	1
R	34	65-19432-6	. . FITTING, ELEVATOR STATION 204.78 RIB HINGE TERMINAL	5199	1
			ATTACHING PARTS		
		MS20005-12	. . BOLT.		4
		NAS334CPA6	. . BOLT.		4
		NAS517-3-5	. . SCREW		4
		63-2676	. . FILLER, STABILIZER RIB HINGE TAPERED.		AR
		BACS40B28-32	. . SHIM.		AR
		MS20002C5	. . WASHER.		4
		AN960D516	. . WASHER.		4
		AN960-416	. . WASHER.		4
		BACN10BL5L	. . NUT		4
		NAS679A4W	. . NUT		4
			-------*-------		
		5-87459-3003	. RIB INSTL, ELEVATOR STATION 249.60 STABILIZER . . . . TRAILING EDGE (LH) (SEE 55-2, FIG. 3, ITEM 57 AND 55-2, FIG. 4, ITEM 54)		RF
		5-87459-3004	. RIB INSTL, ELEVATOR STATION 249.60 STABILIZER . . . . TRAILING EDGE (RH) (SEE 55-2, FIG. 3, ITEM 57 AND 55-2, FIG. 4, ITEM 54)		RF

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	8 35	9-65146-1	. . FITTING, STABILIZER AND FIN HINGE		1
			ATTACHING PARTS		
		AN5-10A	. . BOLT.		4
			-------*-------		
R	38	65-19433-1	. . FITTING, ELEVATOR STATION 249.60 RIB HINGE TERMINAL	0150	1
R	38	65-19433-4	. . FITTING, ELEVATOR STATION 249.60 RIB HINGE TERMINAL	5199	1
			ATTACHING PARTS		
		MS20004-10	. . BOLT.		4
		NAS517-3-5	. . SCREW		2
		63-2676	. . FILLER, STABILIZER RIB HINGE TAPERED.		AR
		BACS40B28-32	. . SHIM.		AR
		MS20002C4	. . WASHER.		4
		AN960D416	. . WASHER.		4
		BACN10B048	. . NUT		4
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

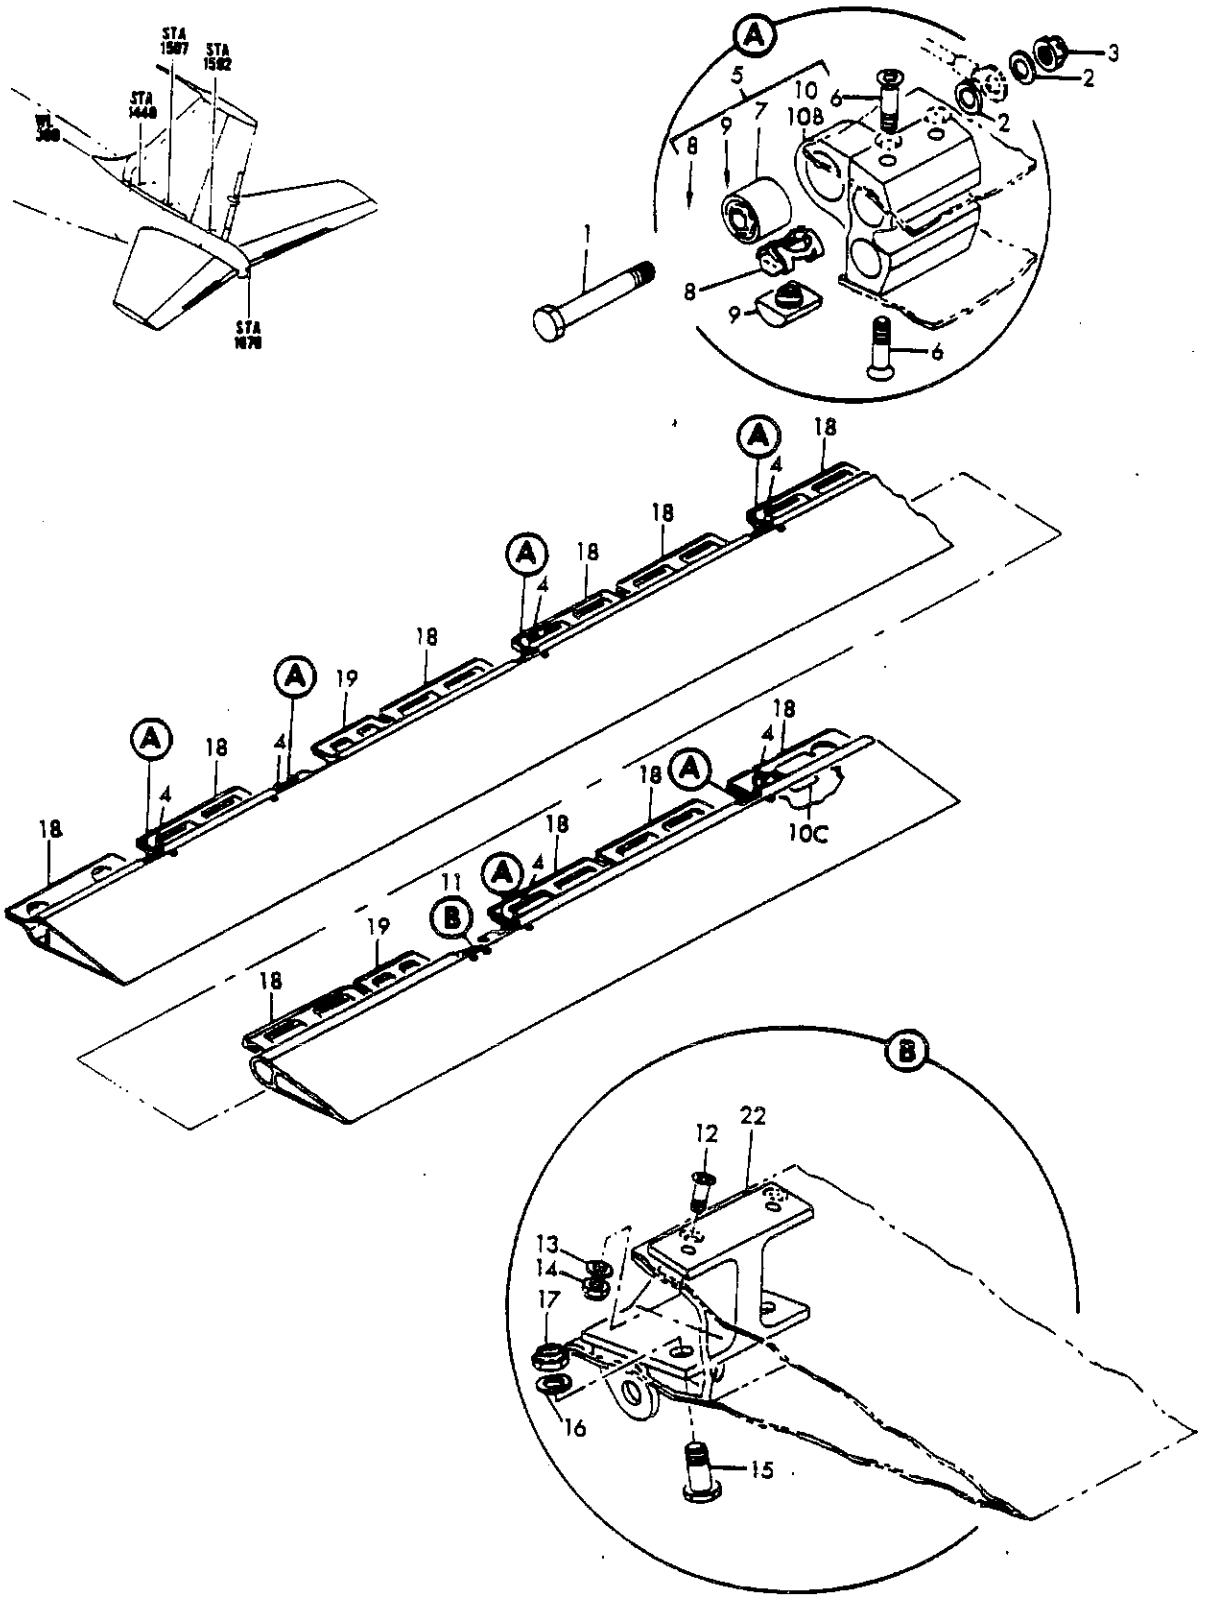


FIGURE 9. TAB INSTL, ELEVATOR CONTROL

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
9	65-5347-1	TAB INSTL, ELEVATOR CONTROL (LH) (SEE FIG. 1, ITEM 11)	0150	RF
	65-5347-1	TAB INSTL, ELEVATOR CONTROL (LH) (VARIABLE. . . . . DWG;65-5347-5001) (SEE FIG. 1, ITEM 11)	5199	RF
	65-5347-2	TAB INSTL, ELEVATOR CONTROL (RH) (SEE FIG. 1, ITEM 11)	0150	RF
	65-5347-2	TAB INSTL, ELEVATOR CONTROL (RH) (VARIABLE. . . . . DWG;65-5347-5002) (SEE FIG. 1, ITEM 11)	5199	RF
1	NAS1104-15DW	. BOLT.		6
2	AN960D416L	. WASHER.		12
3	AN320-4	. NUT		6
4	BACJ40K5A7A5	. JUMPER.		6
		ATTACHING PARTS		
	NAS221-6	. SCREW		6
	AN960D10L	. WASHER.		12
	NAS679A3W	. NUT		6
		-------*-------		
	65-5347-13A	. TAB ASSY, (LH ONLY)	5199	1
	65-5347-13	. TAB ASSY, ELEVATOR CONTROL (LH ONLY).	0150	1
	65-5347-14A	. TAB ASSY, (RH ONLY)	5199	1
	65-5347-14	. TAB ASSY, ELEVATOR CONTROL (RH ONLY).	0150	1
R 5 R	69-3888	. . HINGE ASSY, RUDDER AND ELEVATOR TABS (DELETED BY. . SB 3409)		6
5	69-3888-4	. . HINGE ASSY, RUDDER AND ELEVATOR TABS (REPLACES. . . 69-3888 BY SB 3409)		6
		ATTACHING PARTS		
6	NAS583-6	. . BOLT.		24
		-------*-------		
7	DW4K2	. . . BEARING, (V21335) . . . . . (OPTIONAL TO AND REPLACEMENT FOR MDW4K2 (V21335)) (OPTIONAL DW4K2E6531 (V21335))		1
7	MDW4K2	. . . BEARING, (V21335) . . . . . (OPTIONAL AND FOR REPLACEMENT ORDER DW4K2 (V21335))		1
7	DW4K2E6531	. . . BEARING, (V21335) . . . . . (OPTIONAL TO DW4K2 (V21335))		1
8	BACR10V3	. . . RETAINER.		4
9	BACN10CP3L	. . . NUT		4
10	69-3888-2	. . . FITTING, RUDDER AND ELEVATOR TABS HINGE . . . . . (USED ON 69-3888)		1
10B	69-3888-6	. . . FITTING, RUDDER AND ELEVATOR TABS HINGE . . . . . (USED ON 69-3888-4)		1
10C	AN7510F1	. . PLATE		1
11	65-5347-15	. . TAB ASSY, (FLIGHT CONTROL ONLY)		1
12	NAS517-3-5	. . . SCREW		2
13	AN960D10	. . . WASHER.		2
14	NAS679A3W	. . . NUT		2
15	NAS464P4A5	. . . BOLT.		2
16	AN960D416	. . . WASHER.		2
17	NAS679A4W	. . . NUT		2
18	69-4627-3	. . . WEIGHT, ELEVATOR CONTROL TAB BALANCE. . . . . (OPTIONAL 69-4627-801)		10
18	69-4627-801	. . . WEIGHT, ELEVATOR CONTROL TAB BALANCE. . . . . (OPTIONAL TO 69-4627-3)		10
19	69-4627-802	. . . WEIGHT, ELEVATOR CONTROL TAB BALANCE.		2
		. . . REQUIRED PLACARDS, (SEE 11-2, FIG. 208)		
	65-6534-13	. . WEIGHT, ELEVATOR PANEL BALANCE (OPTIONALS . . . . . 65-6534-14, -15, -16, -17, -18, -83, -84, -85, -86, -87) (PROPER WEIGHT FURNISHED WITH TAB ASSEMBLIES)		AR
	65-6534-14	. . WEIGHT, ELEVATOR PANEL BALANCE (PROPER WEIGHT . . . FURNISHED WITH TAB ASSEMBLIES) (OPTIONAL TO 65-6534-13)		AR
	65-6534-15	. . WEIGHT, ELEVATOR PANEL BALANCE (PROPER WEIGHT . . . FURNISHED WITH TAB ASSEMBLIES) (OPTIONAL TO 65-6534-13)		AR
	65-6534-16	. . WEIGHT, ELEVATOR PANEL BALANCE (PROPER WEIGHT . . . FURNISHED WITH TAB ASSEMBLIES) (OPTIONAL TO 65-6534-13)		AR
	65-6534-17	. . WEIGHT, ELEVATOR PANEL BALANCE (PROPER WEIGHT . . . FURNISHED WITH TAB ASSEMBLIES) (OPTIONAL TO 65-6534-13)		AR
	65-6534-18	. . WEIGHT, ELEVATOR PANEL BALANCE (PROPER WEIGHT . . . FURNISHED WITH TAB ASSEMBLIES) (OPTIONAL TO 65-6534-13)		AR

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
9	65-6534-83	. . WEIGHT, ELEVATOR PANEL BALANCE (PROPER WEIGHT . . . FURNISHED WITH TAB ASSEMBLIES) (OPTIONAL TO 65-6534-13)		AR
	65-6534-84	. . WEIGHT, ELEVATOR PANEL BALANCE (PROPER WEIGHT . . . FURNISHED WITH TAB ASSEMBLIES) (OPTIONAL TO 65-6534-13)		AR
	65-6534-85	. . WEIGHT, ELEVATOR PANEL BALANCE (PROPER WEIGHT . . . FURNISHED WITH TAB ASSEMBLIES) (OPTIONAL TO 65-6534-13)		AR
	65-6534-86	. . WEIGHT, ELEVATOR PANEL BALANCE (PROPER WEIGHT . . . FURNISHED WITH TAB ASSEMBLIES) (OPTIONAL TO 65-6534-13)		AR
	65-6534-87	. . WEIGHT, ELEVATOR PANEL BALANCE (PROPER WEIGHT . . . FURNISHED WITH TAB ASSEMBLIES) (OPTIONAL TO 65-6534-13)		AR
22	69-3887	. . FITTING, ELEVATOR CONTROL TAB ACTUATOR.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

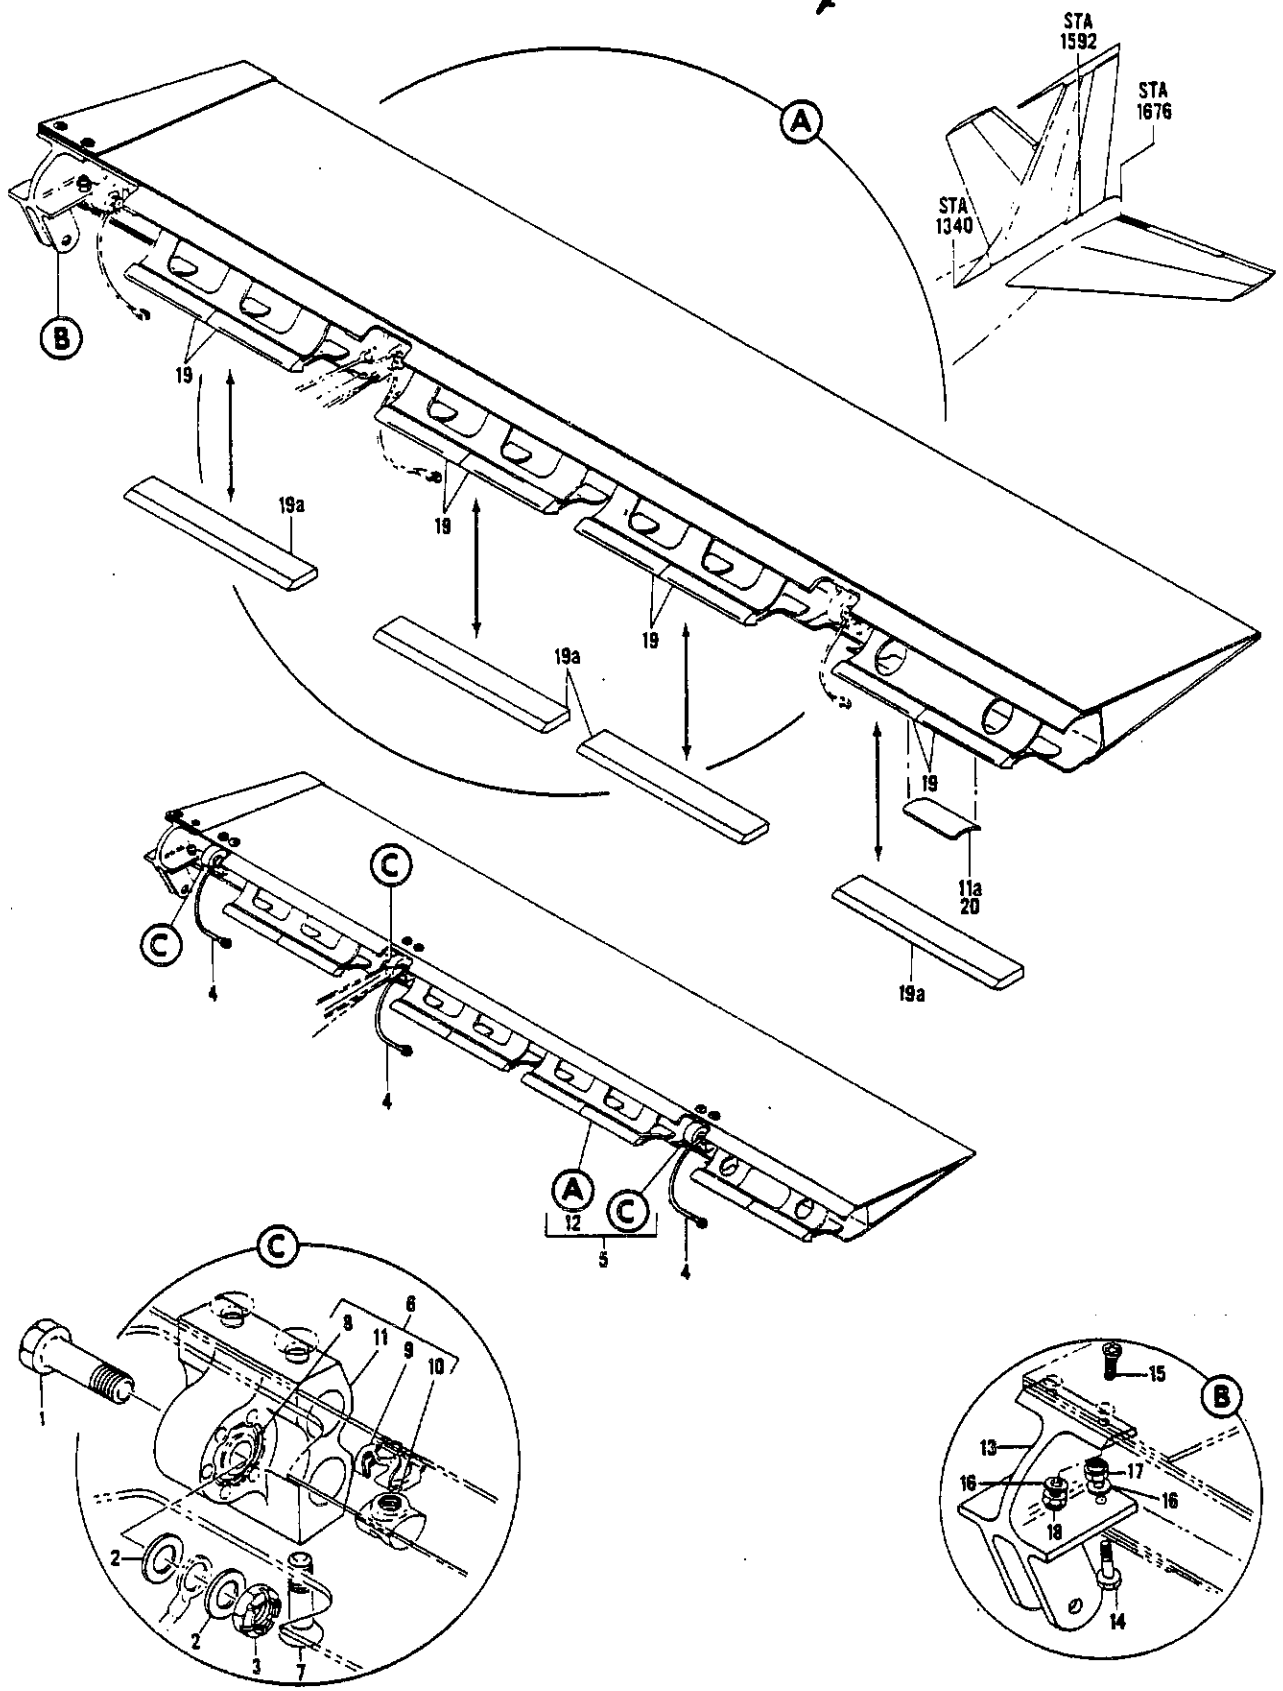


FIGURE 10. TAB INSTL, STABILIZER ACTUATED ELEVATOR

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
	10	65-5346-1	TAB INSTL, STABILIZER ACTUATED ELEVATOR (LH) (SEE FIG. 1, ITEM 10)	0150	RF
		65-5346-1	TAB INSTL, STABILIZER ACTUATED ELEVATOR (LH) (VARIABLE DWG;65-5346-5001) (SEE FIG. 1, ITEM 10)	5199	RF
		65-5346-2	TAB INSTL, STABILIZER ACTUATED ELEVATOR (RH) (SEE FIG. 1, ITEM 10)	0150	RF
		65-5346-2	TAB INSTL, STABILIZER ACTUATED ELEVATOR (RH) (VARIABLE DWG;65-5346-5002) (SEE FIG. 1, ITEM 10)	5199	RF
	1	NAS1104-15DW	. BOLT.		3
	2	AN960D416L	. WASHER.		6
	3	AN320-4	. NUT		3
	4	BACJ40K5A7A5	. JUMPER.		3
			ATTACHING PARTS		
		NAS221-6	. SCREW		3
		AN960D10L	. WASHER.		6
		NAS679A3W	. NUT		3
			-------*-------		
	5	65-5346-17	. TAB ASSY, STABILIZER ACTUATED ELEVATOR (LH ONLY). . .	0150	1
	5	65-5346-17A	. TAB ASSY, STABILIZER ACTUATED ELEVATOR (LH ONLY). . .	5199	1
	5	65-5346-18	. TAB ASSY, STABILIZER ACTUATED ELEVATOR (RH ONLY). . .	0150	1
	5	65-5346-18A	. TAB ASSY, STABILIZER ACTUATED ELEVATOR (RH ONLY). . .	5199	1
R R	6	69-3888	. . HINGE ASSY, RUDDER AND ELEVATOR TABS (DELETED BY. . SB 3409)		3
	6	69-3888-4	. . HINGE ASSY, RUDDER AND ELEVATOR TABS (REPLACES. . . 69-3888 BY SB 3409)		3
			ATTACHING PARTS		
	7	NAS583-6	. . BOLT.		12
			-------*-------		
	8	DW4K2	. . . BEARING, (V21335) (OPTIONAL TO AND REPLACEMENT FOR MDW4K2 (V21335)) (OPTIONAL DW4K2E6531 (V21335))		1
	8	MDW4K2	. . . BEARING, (V21335) (OPTIONAL AND FOR REPLACEMENT ORDER DW4K2 (V21335))		1
	8	DW4K2E6531	. . . BEARING, (V21335) (OPTIONAL TO DW4K2 (V21335))		1
	9	BACR10V3	. . . RETAINER.		4
	10	BACN10CP3L	. . . NUT		4
	11	69-3888-2	. . FITTING, RUDDER AND ELEVATOR TABS HINGE		1
	11A	AN7510F1	. . PLATE		1
	12	65-5346-19	. . TAB ASSY, (LH ONLY) (FLIGHT CONTROL ONLY)		1
	12	65-5346-20	. . TAB ASSY, (RH ONLY) (FLIGHT CONTROL ONLY)		1
	13	69-3889-3	. . . FITTING, STABILIZER ACTUATED TAB ELEVATOR ACTUATOR (LH ONLY)		1
	13	69-3889-4	. . . FITTING, STABILIZER ACTUATED TAB ELEVATOR ACTUATOR (RH ONLY)		1
			ATTACHING PARTS		
	14	NAS1103-4W	. . . BOLT.		2
	15	NAS5173-5	. . . SCREW		2
	16	AN960D10	. . . WASHER.		4
	17	NAS679A3W	. . . NUT		2
	18	AN364-1032	. . . NUT		2
			-------*-------		
	19A	66-35044-1	. . . WEIGHT, STABILIZER ACTUATED TAB ELEVATOR BALANCE 8 IN. (OPTIONAL 66-35044-2)		4
	19A	66-35044-2	. . . WEIGHT, STABILIZER ACTUATED TAB ELEVATOR BALANCE 8 IN. (OPTIONAL TO 66-35044-1)		4
			. . . REQUIRED PLACARDS, (SEE 11-2, FIG. 218)		
			. . WEIGHT, ELEVATOR PANEL BALANCE (REFER TO DWG NO.. . 65-6534 FOR PART NO. USED) (PROPER WEIGHT FURNISHED WITH TAB ASSEMBLIES) (INSTALL PER 65-5346)		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING Intercontinental 707

PARTS CATALOG

SECTION 11

ELEVATOR CONTROL

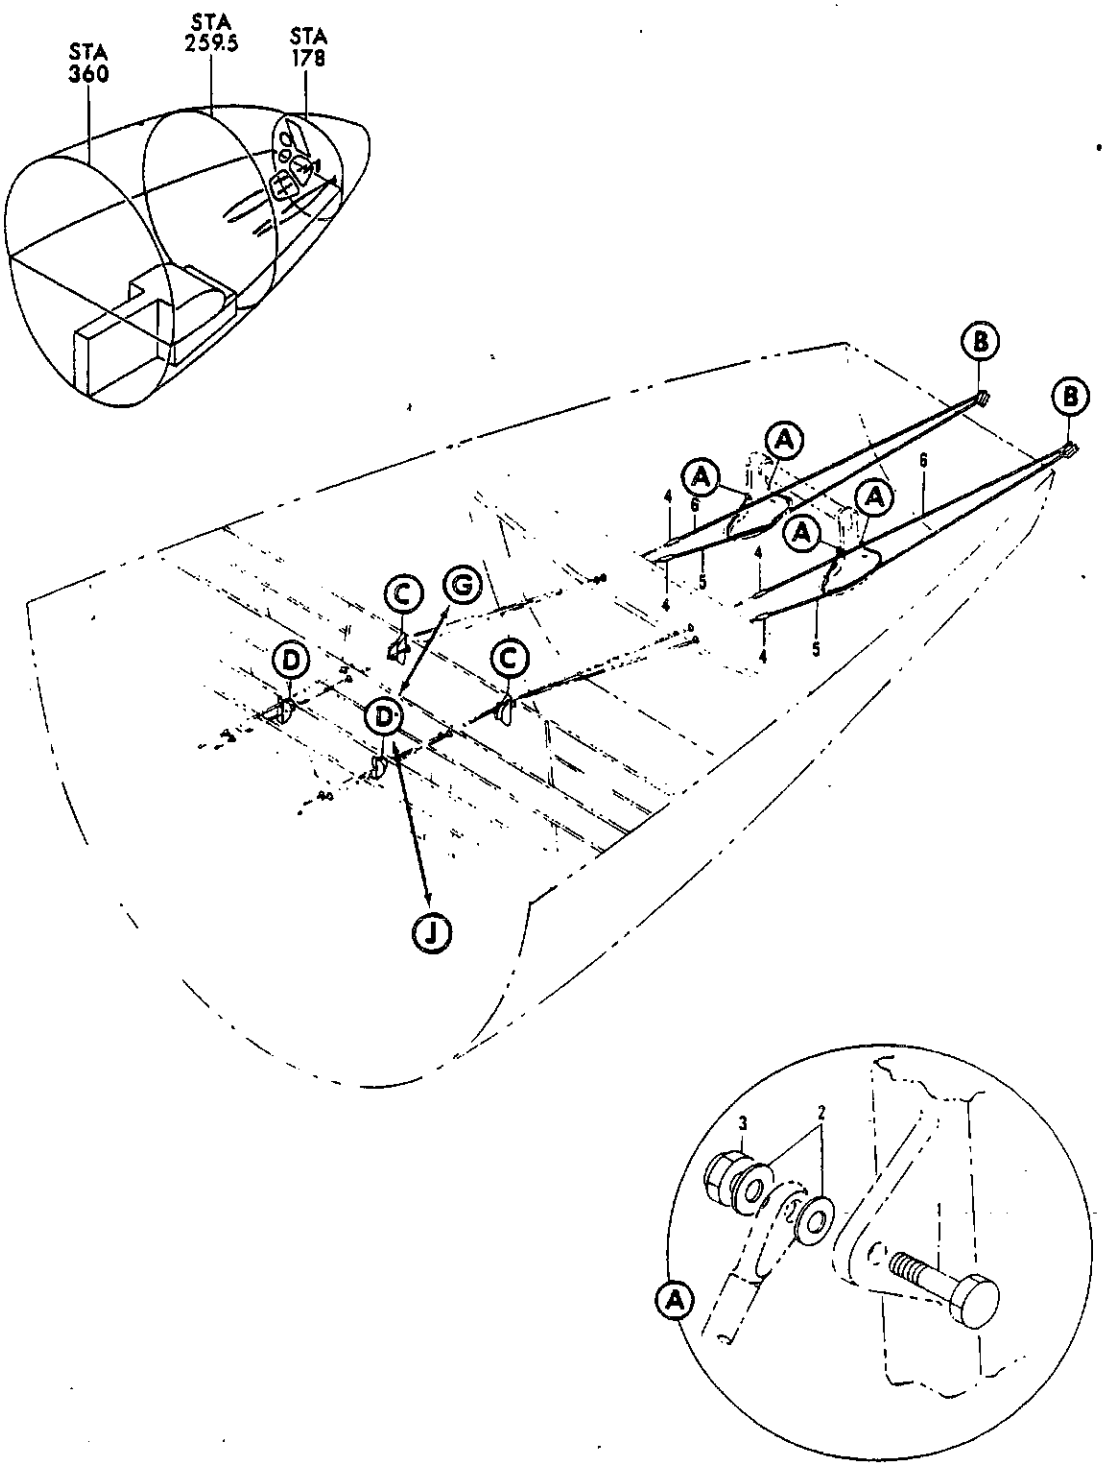


FIGURE 1. CONTROL INSTL, SECTION 51 ELEVATOR (SHEET 1)

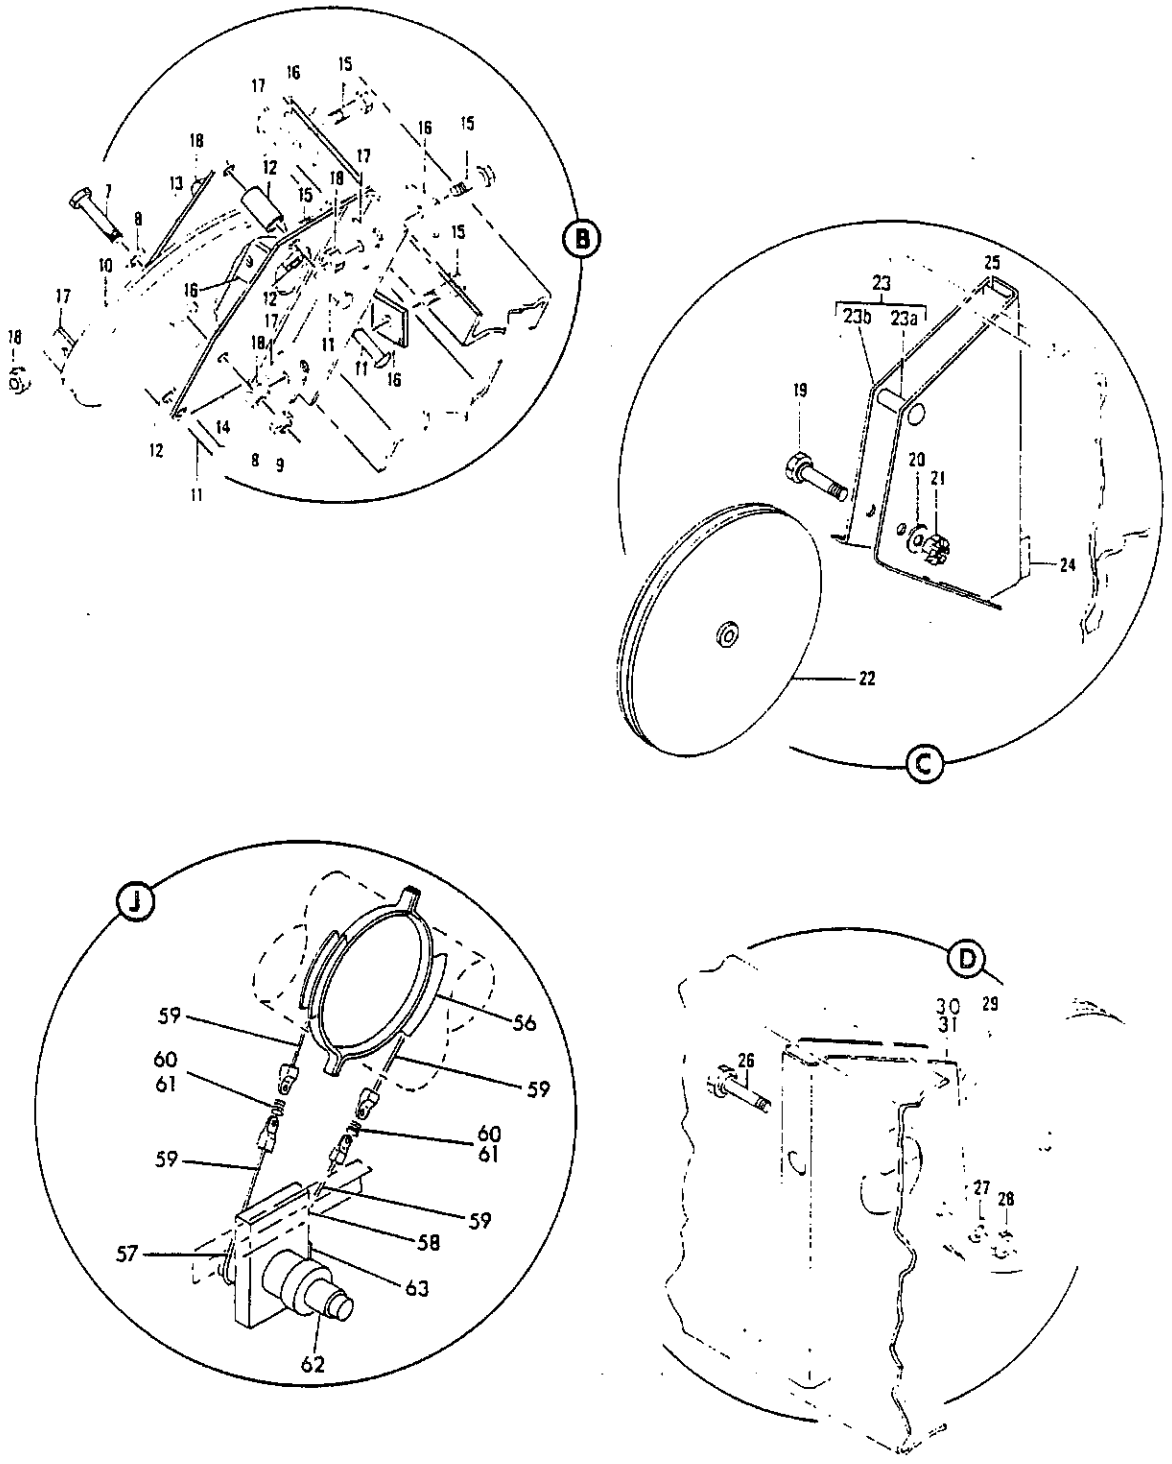


FIGURE 1. CONTROL INSTL, SECTION 51 ELEVATOR (SHEET 2)

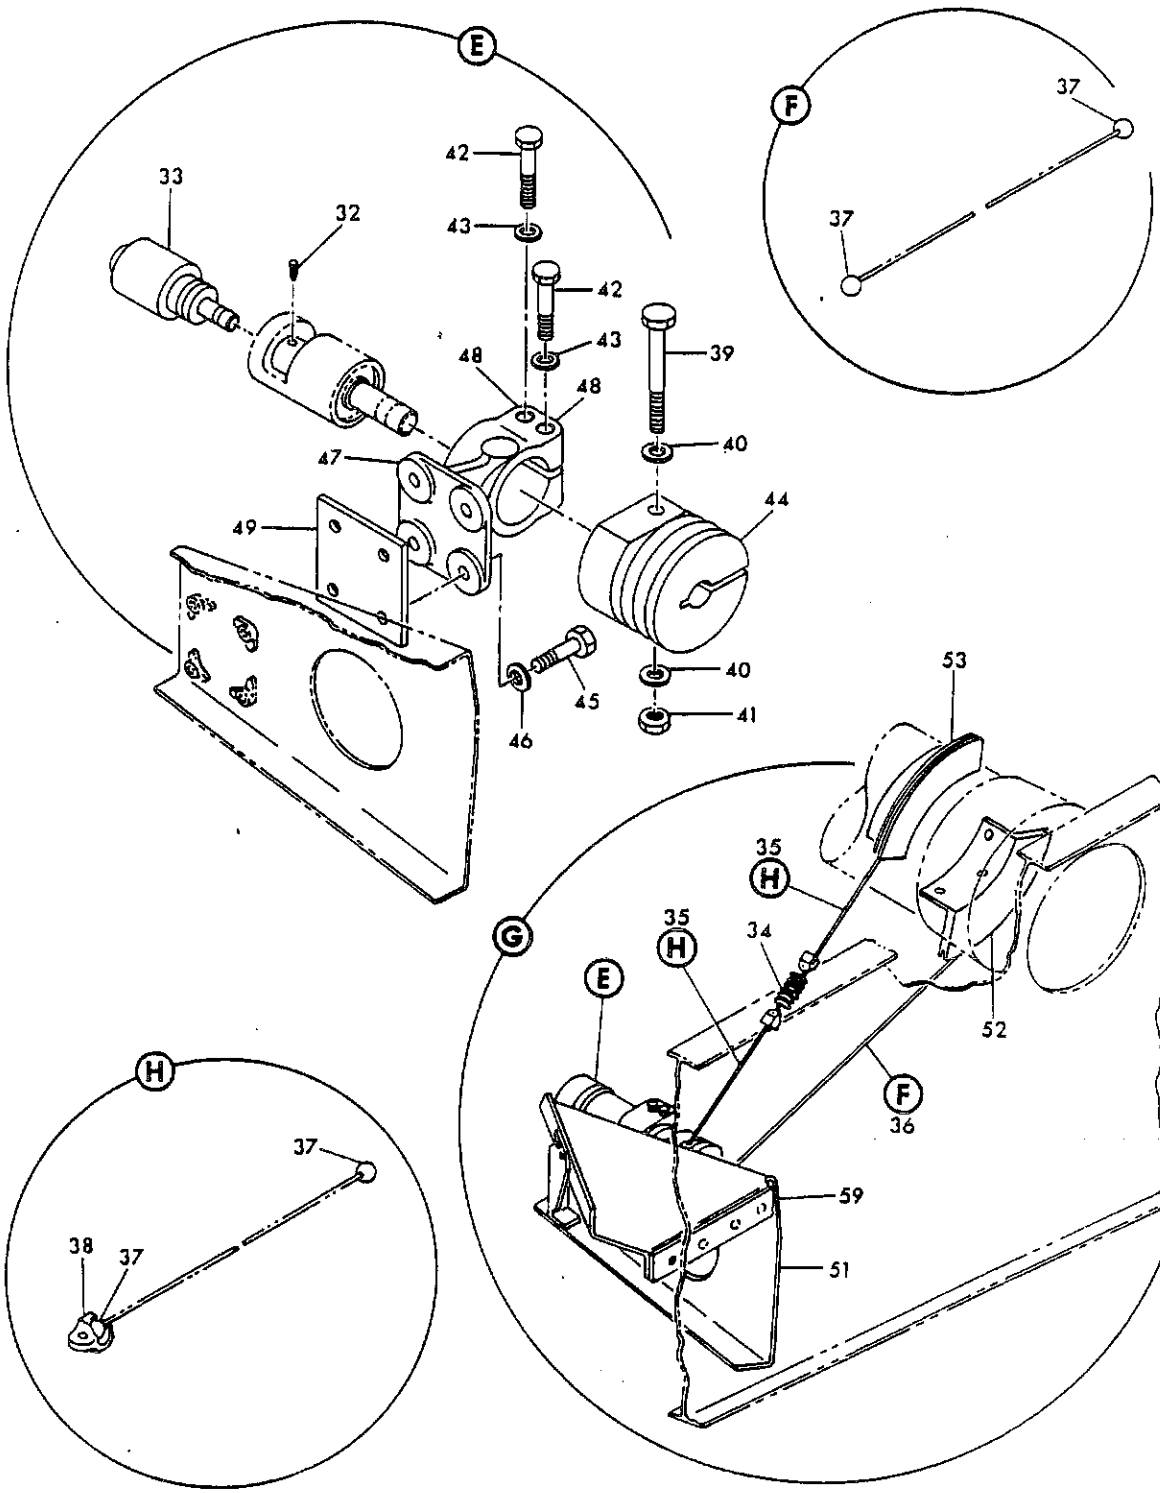


FIGURE 1. CONTROL INSTL, SECTION 51 ELEVATOR (SHEET 3)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1	50-8702-51	CONTROL INSTL, SECTION 51 ELEVATOR (SEE 53-1, FIG. 1, ITEM 8 AND 53-1, FIG. 6, ITEM 3)		RF
1	AN3-7A	. BOLT.		4
2	AN960D10	. WASHER.		8
3	NAS679A3W	. NUT		4
4	AN155-32L	. BARREL.		4
5	NAS304-35-414	. CABLE ASSY.		2
6	NAS304-35-1070	. CABLE ASSY.		2
	50-8296-1	. BRACKET INSTL, STATION 178 ELEVATOR (LH).		1
	50-8296-2	. BRACKET INSTL, STATION 178 ELEVATOR (RH).		1
7	NAS1105-12DW	. . BOLT.		1
8	AN960D516	. . WASHER.		2
9	AN320-5	. . NUT		1
10	AN220-4	. . PULLEY.		1
11	AN470D6	. . RIVET		3
12	NAS42DD6-40	. . SPACER.		3
13	69-1582-13	. . BRACKET ASSY, STATION 178 ELEVATOR PULLEY HALF (LH ONLY)		1
13	69-1582-14	. . BRACKET ASSY, STATION 178 ELEVATOR PULLEY HALF (RH ONLY)		1
14	69-1582-15	. . BRACKET ASSY, STATION 178 ELEVATOR PULLEY HALF (LH ONLY)		1
14	69-1582-16	. . BRACKET ASSY, STATION 178 ELEVATOR PULLEY HALF (RH ONLY)		1
		ATTACHING PARTS		
15	AN4-6A	. . BOLT.		4
16	50-3361-3	. . FILLER, CONTROLS RADIUS		4
17	50-3361-97	. . FILLER, CONTROLS RADIUS		4
18	BACN10ET4	. . NUT		4
		-------*-------		
	9-65100-3001	. BRACKET INSTL, STATION 312 ELEVATOR B CABLE (LH). . .		1
	9-65100-3002	. BRACKET INSTL, STATION 312 ELEVATOR B CABLE (RH). . .		1
19	BACB30NF5-12	. . BOLT.		1
20	AN960D516L	. . WASHER.		1
21	BACN10JC5	. . NUT		1
22	AN220-4	. . PULLEY.		1
23	9-65100-3003	. . BRACKET ASSY, STATION 312 ELEVATOR B CABLE.		1
23A	NAS42DD4-48	. . . SPACER.		1
23B	9-65100-3004	. . . BRACKET, STATION 312 ELEVATOR B CABLE		1
24	9-65100-3005	. . FILLER, STATION 312 ELEVATOR B CABLE.		1
25	3-93586	. . FILLER, PULLEY BRACKET RADIUS		1
	50-8298-1	. BRACKET INSTL, STATION 344 ELEVATOR PULLEY (LH)		1
	50-8298-2	. BRACKET INSTL, STATION 344 ELEVATOR PULLEY (RH)		1
26	BACB30NF5-12	. . BOLT.		1
27	AN960D516	. . WASHER.		1
28	BACN10JC5	. . NUT		1
29	AN220-4	. . PULLEY.		1
30	90-7829	. . BRACKET ASSY, STATION 344 ELEVATOR PULLEY		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

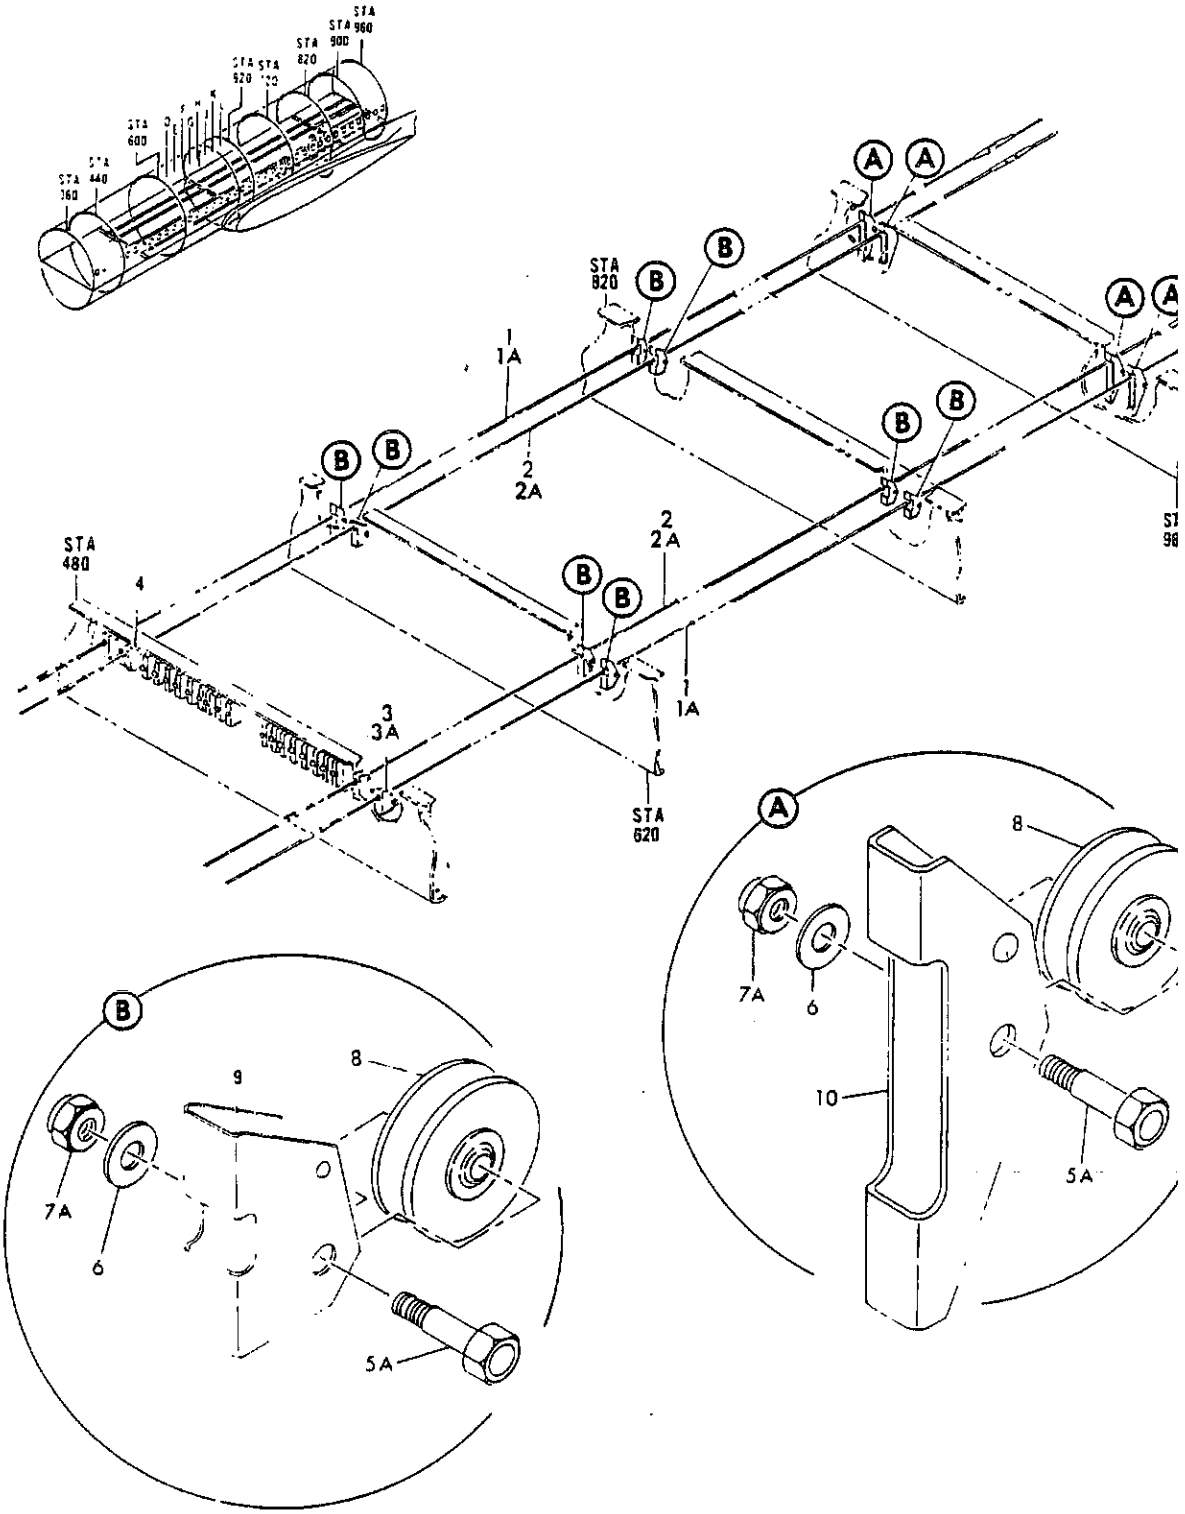


FIGURE 2. CONTROL INSTL, SECTION 53 ELEVATOR

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2	50-8702-353	CONTROL INSTL, SECTION 53 ELEVATOR (SEE 53-1, FIG. 2, ITEM 3 AND 53-1, FIG. 5, ITEM 11)		RF
1	NAS304-45-14475	. CABLE ASSY.		2
2	NAS304-45-14344	. CABLE ASSY.		2
3	65-2950-29	. IDLER INSTL, STATION 480 CONTROL CABLES LH (SEE FIG. 3)		1
4	65-2950-30	. IDLER INSTL, STATION 480 CONTROL CABLES RH (SEE FIG. 3)		1
	50-8723-1	. PULLEY INSTL, STATION 620 CABLE IDLER		1
	50-8247-1	. PULLEY INSTL, STATION 820 CABLE IDLER		1
	50-8736-1	. PULLEY INSTL, STATION 960 CABLE IDLER		1
5A	BACB30NE5-11	. . BOLT.		4
6	AN960D516	. . WASHER.		4
7A	BACN10JC5	. . NUT		4
8	AN220-1	. . PULLEY.		4
9	60-3106-2000	. . BRACKET ASSY, IDLER PULLEY CONTROL (USED ON 50-8723-1)		4
9	60-3106	. . BRACKET ASSY, IDLER PULLEY CONTROL (USED ON 50-8247-1)		4
10	90-7852	. . BRACKET ASSY, IDLER PULLEY CONTROL (USED ON 50-8736-1)		4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

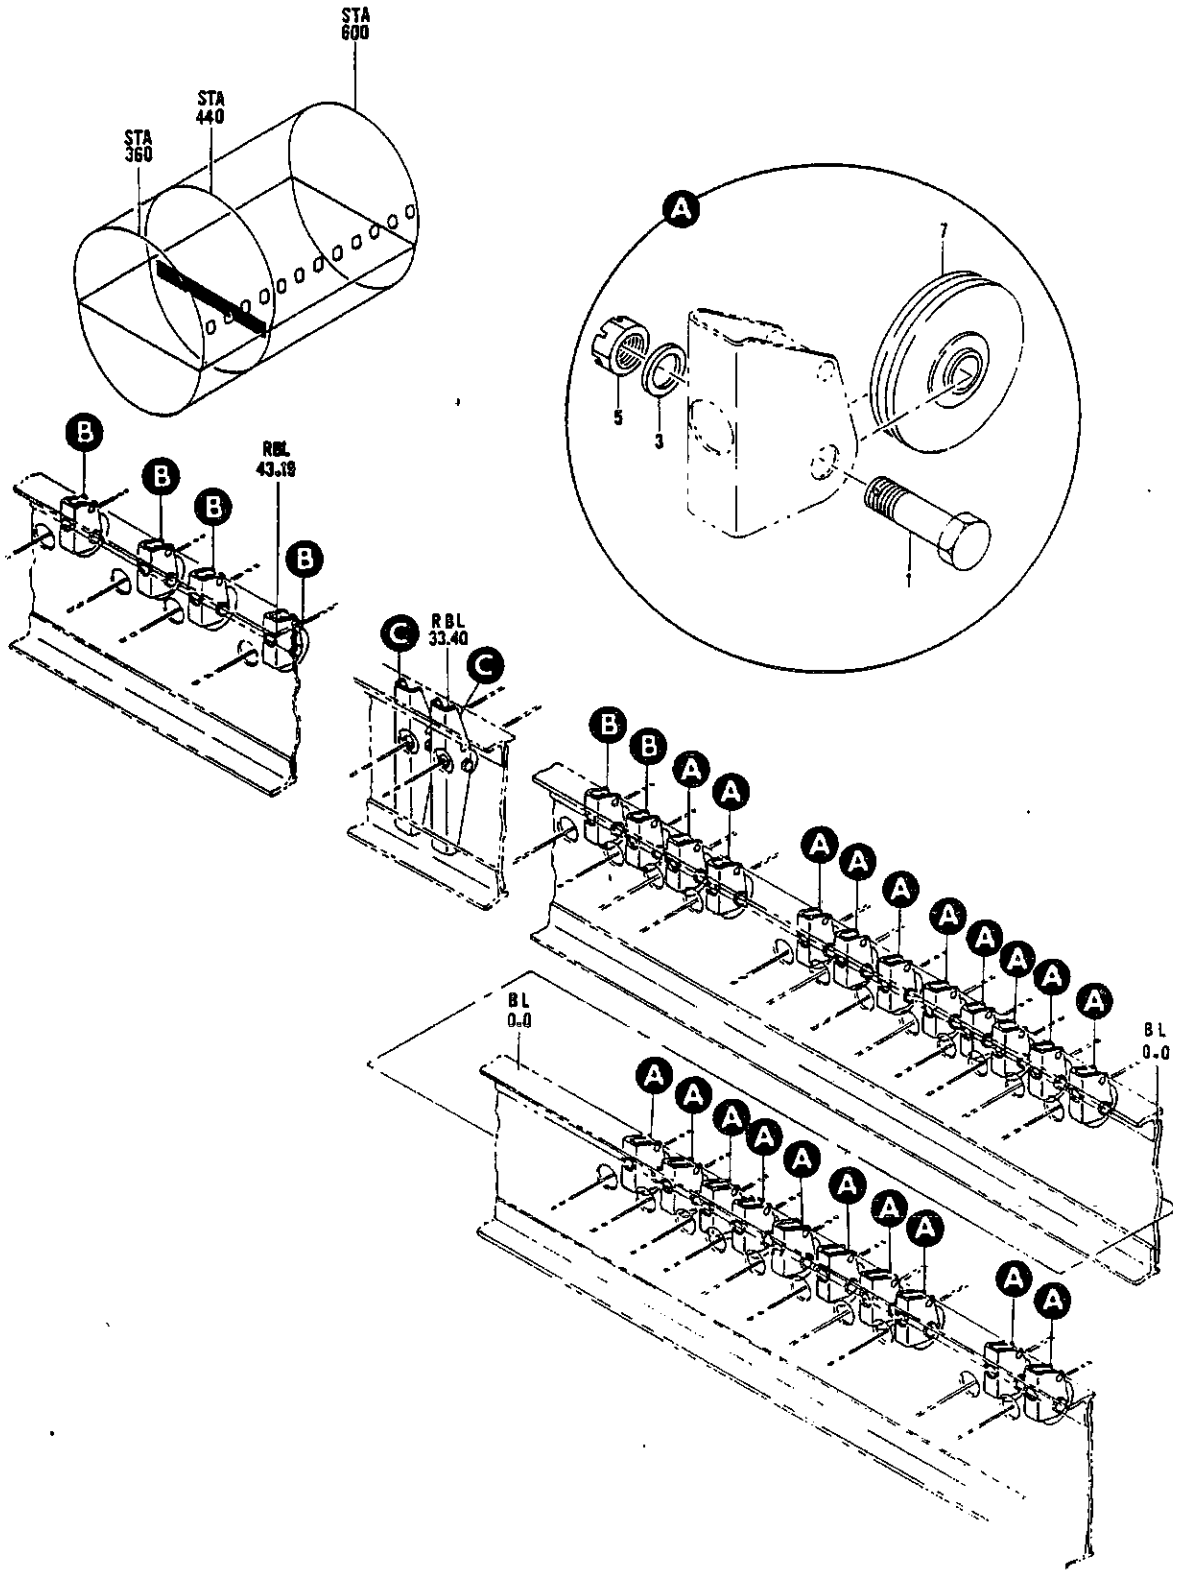
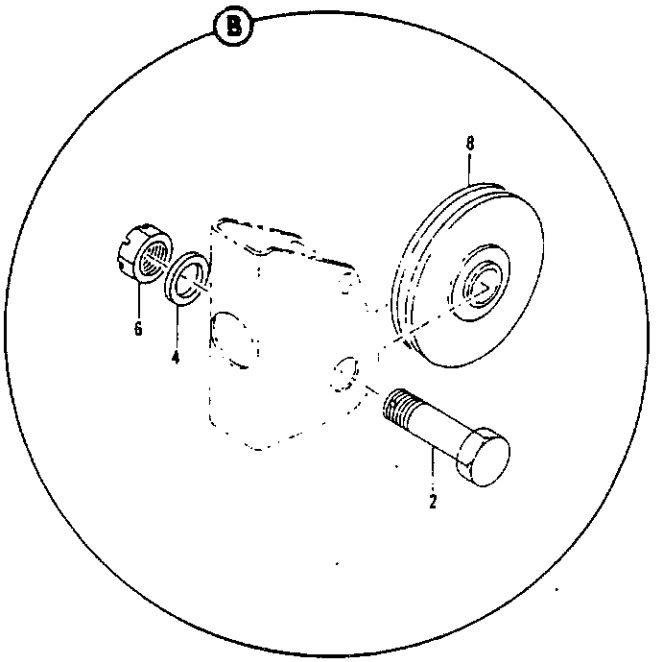


FIGURE 3. IDLER INSTL, STATION 480 CONTROL CABLES (SHEET 1)



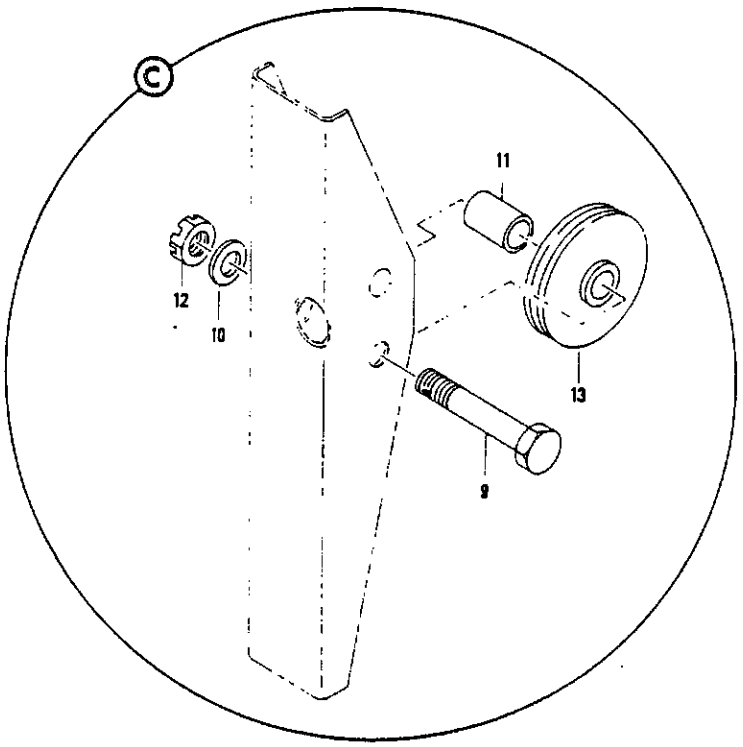


FIGURE 3. IDLER INSTL, STATION 480 CONTROL CABLES (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3	65-2950-29	IDLER INSTL, STATION 480 CONTROL CABLES LH (SEE FIG. 2, ITEM 3)		RF
	65-2950-30	IDLER INSTL, STATION 480 CONTROL CABLES RH (SEE FIG. 2, ITEM 4)		RF
1	NAS1105-11DW	. BOLT.		10
2	NAS1105-11DW	. BOLT, (RH ONLY)		6
3	AN960D516	. WASHER.		10
4	AN960D516	. WASHER, (RH ONLY)		6
5	AN320-5	. NUT		10
6	AN320-5	. NUT, (RH ONLY).		6
7	MS20220-1	. PULLEY.		10
8	MS20220-1	. PULLEY, (RH ONLY)		6
9	NAS1104-17DW	. BOLT, (RH ONLY)		2
10	AN960D416	. WASHER, (RH ONLY)		2
11	NAS43DD4-34	. SPACER, (RH ONLY)		2
12	AN320-4	. NUT, (RH ONLY).		2
13	NAS530	. PULLEY, (RH ONLY)		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

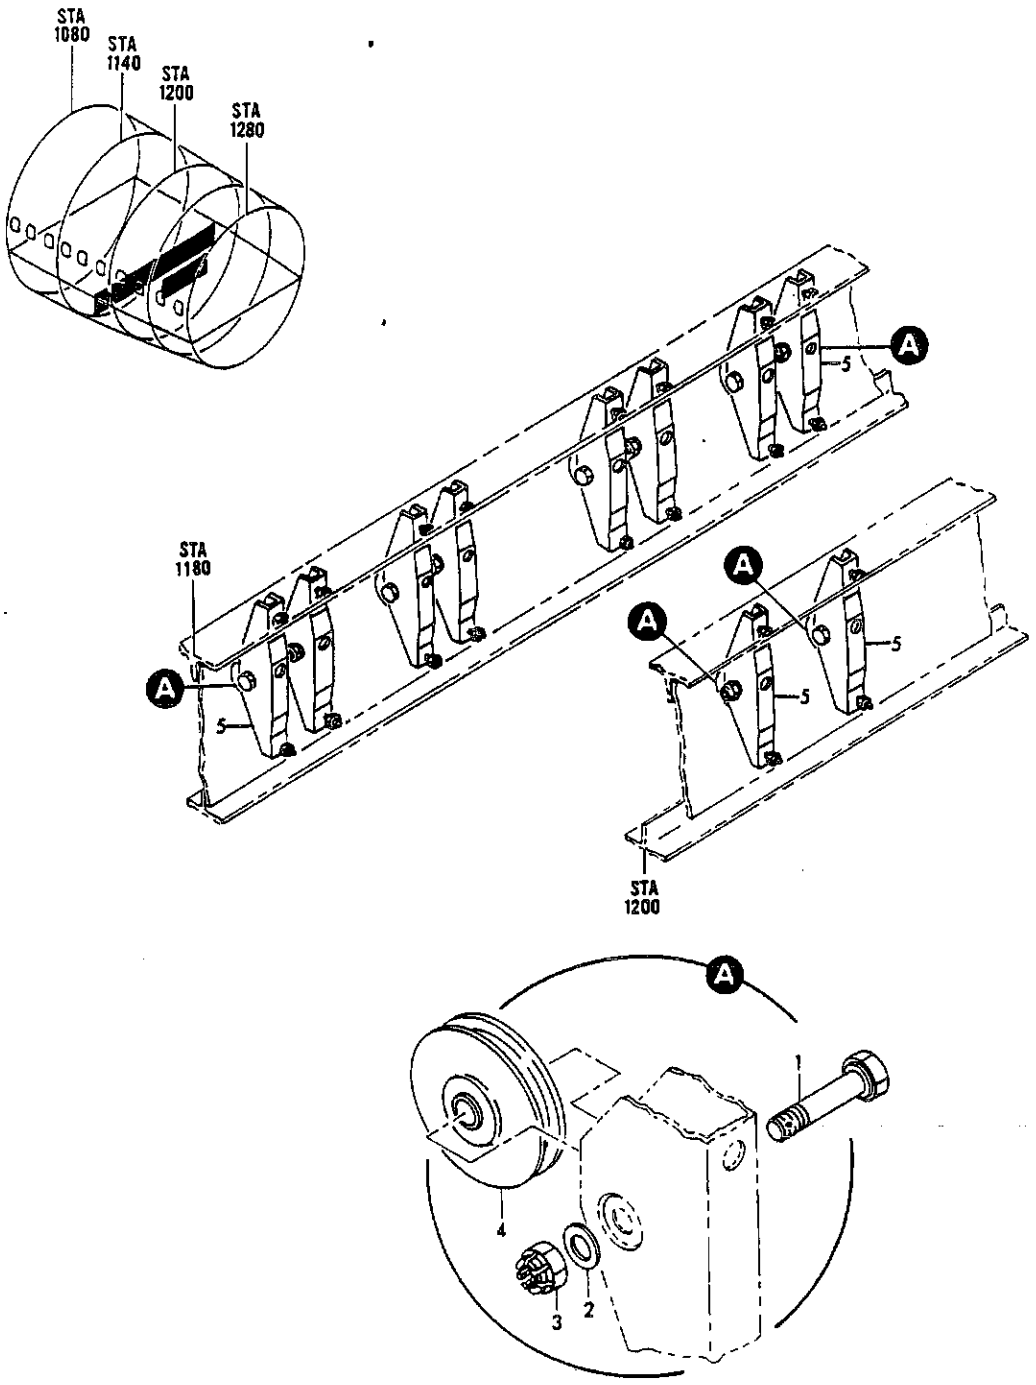


FIGURE 5. CONTROL INSTL, SECTION 56 ELEVATOR

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5	50-8702-56	CONTROL INSTL, SECTION 56 ELEVATOR (SEE 53-1, FIG. 3, ITEM 1)		RF
	65-28792-1	. PULLEY AND BRACKET INSTL, IDLER		1
1	BACB30NF5-11	. . BOLT		10
2	AN960D516	. . WASHER		10
3	BACN10JC5	. . NUT		10
4	MS20220-1	. . PULLEY		10
5	69-22982-1	. . BRACKET ASSY, CONTROL IDLER PULLEY		10
		ATTACHING PARTS		
	NAS1103-3W	. . BOLT		20
	AN960D10L	. . WASHER		20
	NAS679A3W	. . NUT		20
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

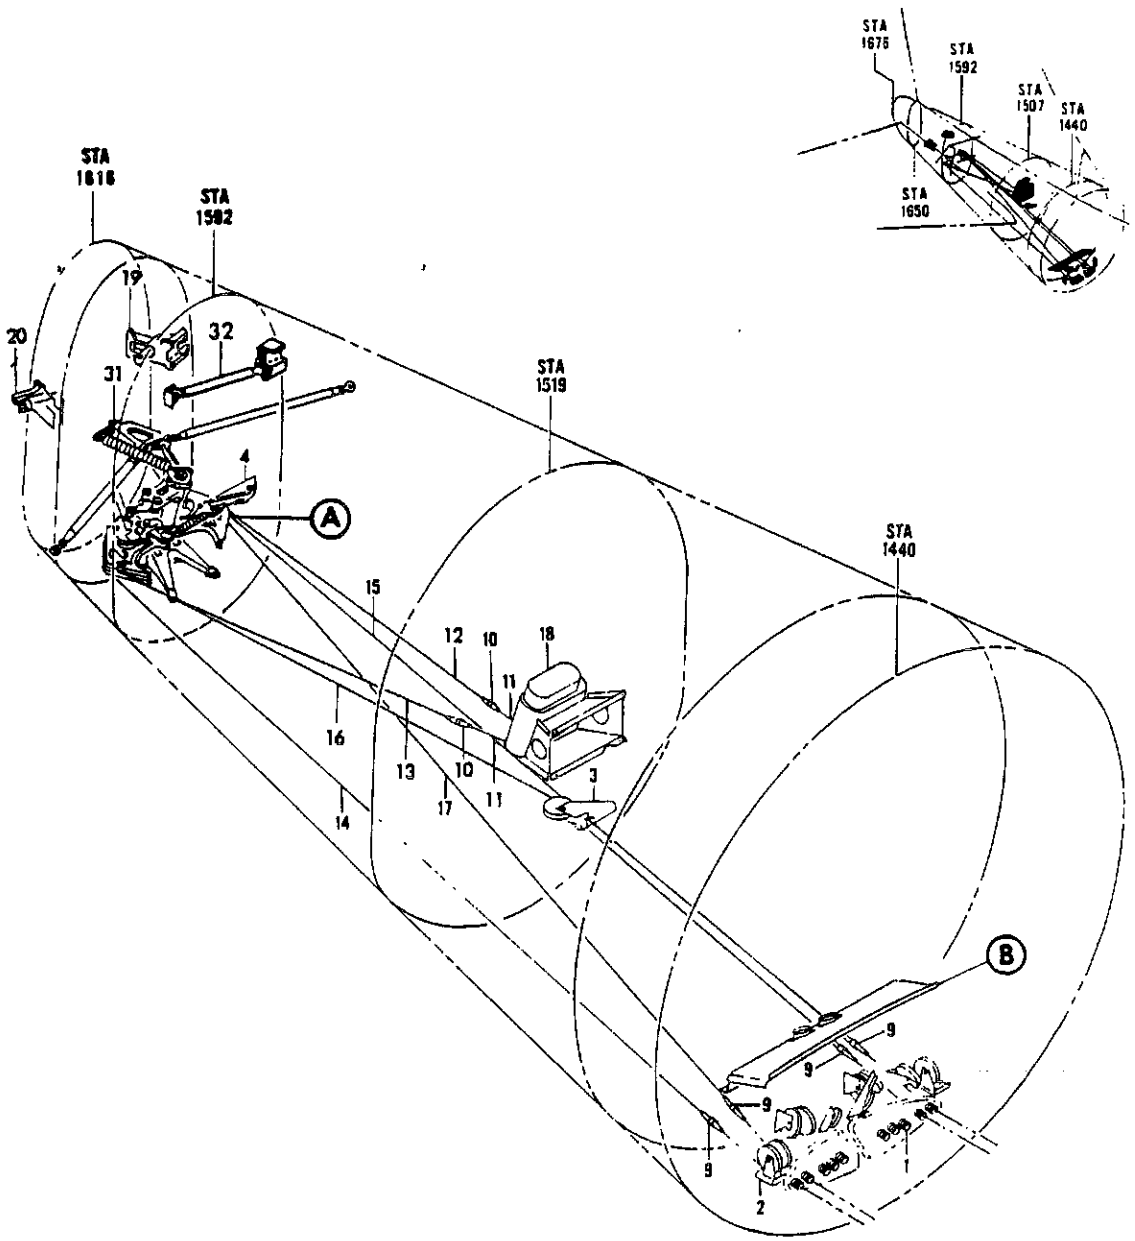


FIGURE 6. CONTROL INSTL, SECTION 58 ELEVATOR (SHEET 1)

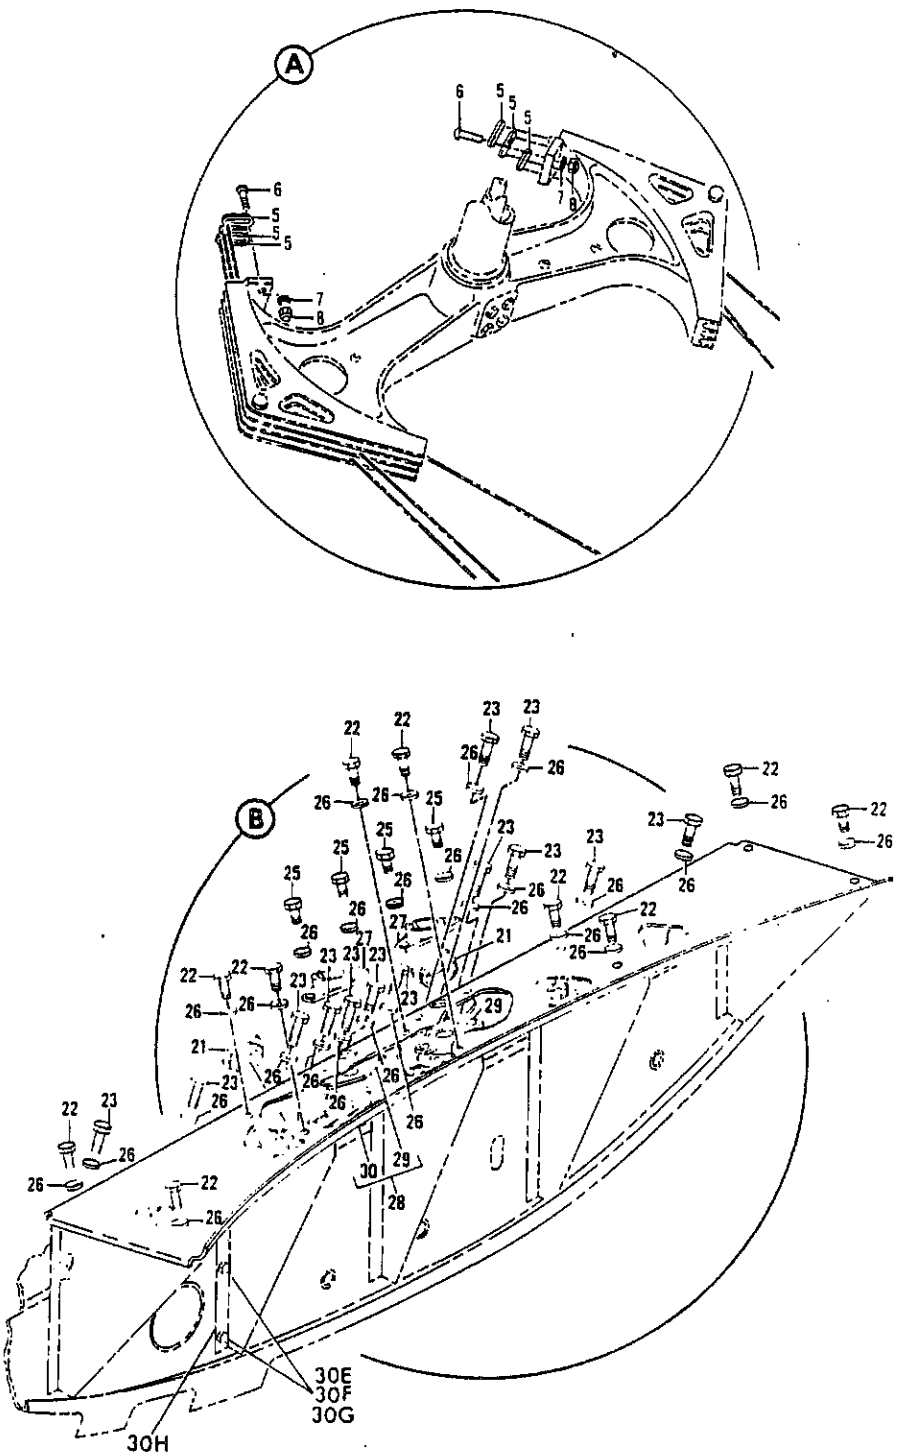


FIGURE 6. CONTROL INSTL, SECTION 58 ELEVATOR (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	6	50-8702-358	CONTROL INSTL, SECTION 58 ELEVATOR (SEE 53-1, FIG. 4, ITEM 2)		RF
	1	65-2970	. SEAL INSTL, STATION 1440 CONTROL CABLE (SEE FIG. 7)		1
	2	5-95607-3006	. BRACKET INSTL, BODY STATION 1462 FLIGHT CONTROLS (SEE FIG. 8)		1
	3	50-3757	. BRACKET INSTL, STATION 1519 ELEVATOR CONTROL PULLEY (SEE FIG. 9)		1
	4	5-89537-3002	. QUADRANT INSTL, ELEVATOR CONTROL (SEE FIG. 10). . . .		1
R	5	6-57698	. RETAINER, LANDING GEAR STEERING CABLE	0150	6
R			(OPTIONAL TO 3-89042-3001)		
R	5	3-89042-3001	. PLATE, CONTROL CABLE RETAINING.	0150	6
R			(OPTIONAL 6-57698)		
R	5	3-89042-3001	. PLATE, CONTROL CABLE RETAINING.	5199	6
			ATTACHING PARTS		
	6	AN3-6A	. BOLT.		6
	7	BACW10T10	. WASHER.		6
	8	NAS679A3W	. NUT		6
			-------*-------		
	9	AN155-32L	. BARREL.		4
	9	MS21251-B5L	. BARREL, (ADDED BY PAA MAR M126A).		4
	10	AN155-32S	. BARREL.		2
	11	BACC13G466-212	. CABLE ASSY, STEEL 1/8 7X19 21.2 IN. LG.		2
		MS21260S4LH	. . TERMINAL.		1
		BACT14A4	. . TERMINAL.		1
	12	BACC13G465-705	. CABLE ASSY, STEEL 1/8 7X19 70.5 IN. LG.		1
	13	BACC13G465-702	. CABLE ASSY, STEEL 1/8 7X19 70.2 IN. LG.		1
		MS21260S4RH	. . TERMINAL.		1
		BACT14A4	. . TERMINAL.		1
	14	BACC13G468-1125	. CABLE ASSY, STEEL 1/8 7X19 112.5 IN. LG		1
	15	BACC13G468-1353	. CABLE ASSY, STEEL 1/8 7X19 135.3 IN. LG		1
	16	BACC13G468-1160	. CABLE ASSY, STEEL 1/8 7X19 116.0 IN. LG		1
	17	BACC13G468-1366	. CABLE ASSY, STEEL 1/8 7X19 136.6 IN. LG		1
		MS21260L4RH	. . TERMINAL.		1
		BACT14A4	. . TERMINAL, CYLINDRICAL CABLE CRES.		1
	18	65-3324	. SERVO INSTL, STATION 1519 ELEVATOR CONTROL (SEE 22-1, FIG. 19)		1
	19	65-40091-1	. SUPPORT INSTL, ELEVATOR ANTI-BALANCE TAB (LH) (SEE. FIG. 28)		1
	20	65-40091-2	. SUPPORT INSTL, ELEVATOR ANTI-BALANCE TAB (RH) (SEE. FIG. 28)		1
		65-3491-1	. COVER INSTL, STATION 1462 PULLEY BRACKETS		1
	21	BACG20H6	. . GROMMET, CABLE TYPE I 1-1/2 IN. ID.		2
	22	AN3-4A	. . BOLT.		10
	23	AN3-7A	. . BOLT.		13
	25	AN3-5A	. . BOLT.		4
	26	AN960D10L	. . WASHER.		27
	27	69-8707-2	. . FAIRLEAD, RUDDER TRIM CABLE		2
	28	65-3492-3003	. . COVER ASSY, STATION 1462 PULLEY BRACKETS.		1
	29	69-8707-1	. . . FAIRLEAD ASSY, RUDDER TRIM CABLE.		2
	30	65-3492-3004	. . . COVER, STATION 1462 PULLEY BRACKET (OPTIONAL. . . 65-3492-3006)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

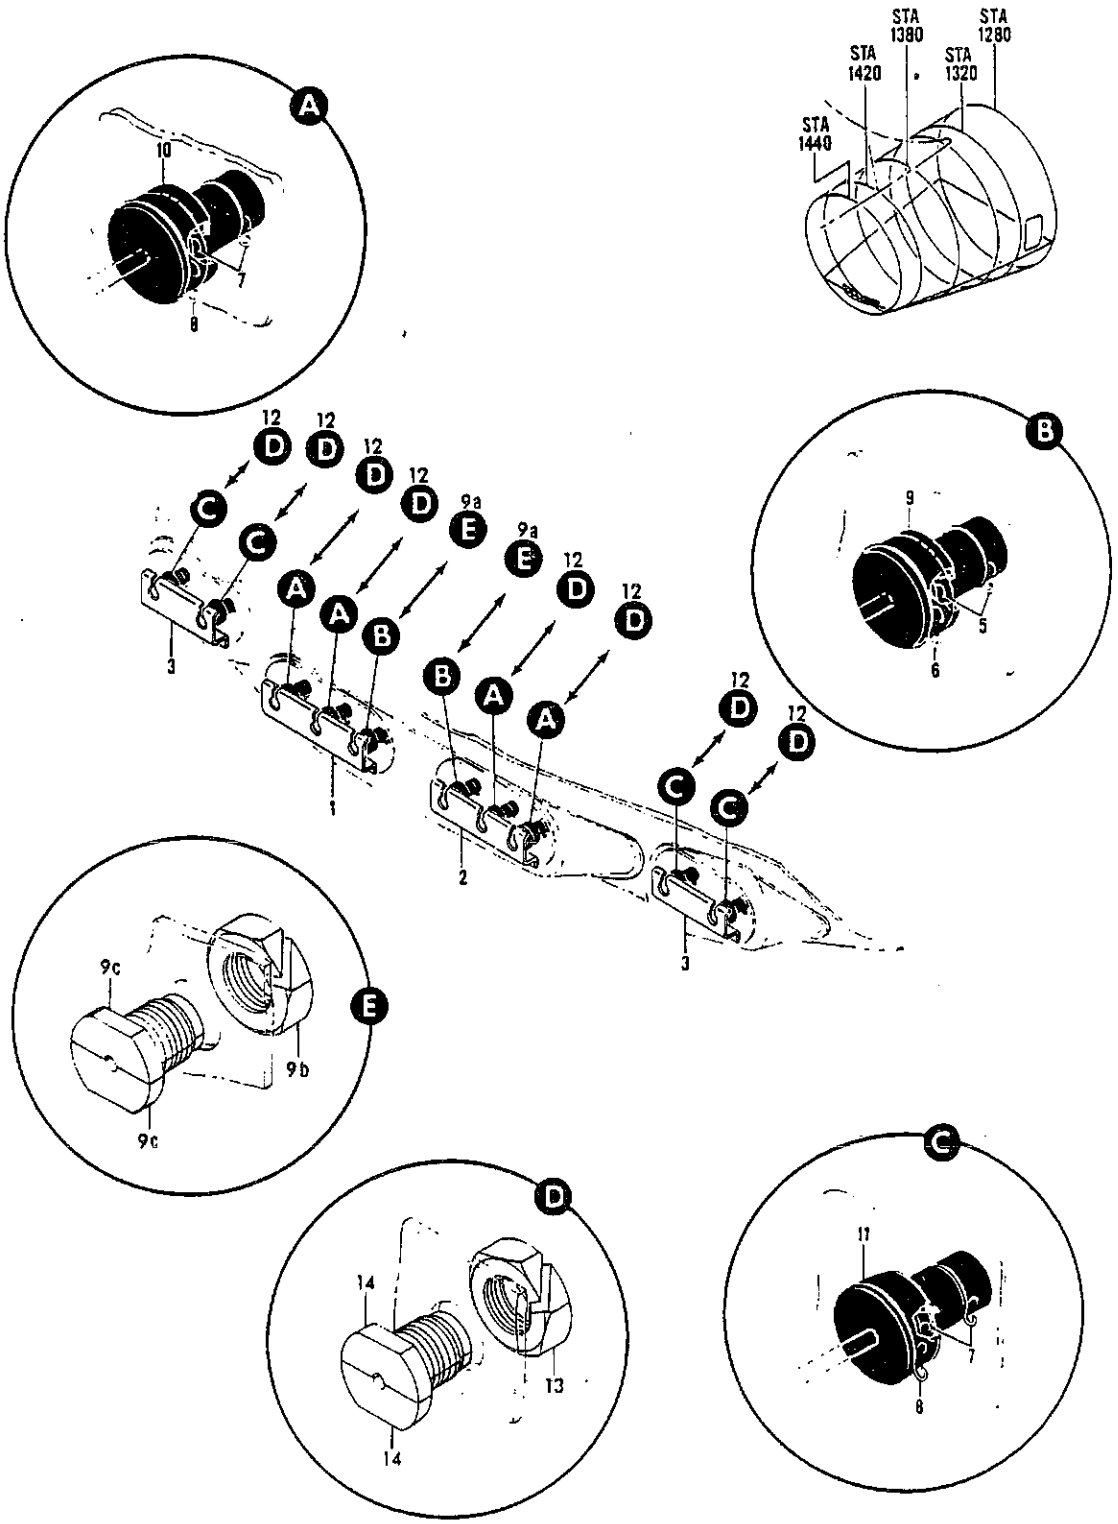


FIGURE 7. SEAL INSTL, STATION 1440 CONTROL CABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
7	65-2970	SEAL INSTL, STATION 1440 CONTROL CABLE (SEE FIG. 6, ITEM 1)		RF
1	69-12734-5	. RETAINER, STATION 1440 PRESSURE SEAL.		1
2	69-12734-6	. RETAINER, STATION 1440 PRESSURE SEAL.		1
3	69-12734-7	. RETAINER, STATION 1440 PRESSURE SEAL.		2
5	BACS11L131C	. SEAL.		4
6	BACS11L132C	. SEAL.		2
7	BACS11L161C	. SEAL.		16
8	BACS11L162C	. SEAL.		8
9	S11K3RA	. SEAL, CABLE (V74687).		2
10	S11K4RA	. SEAL, CABLE (V74687).		4
11	S11K6RA	. SEAL, CABLE (V74687).		4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

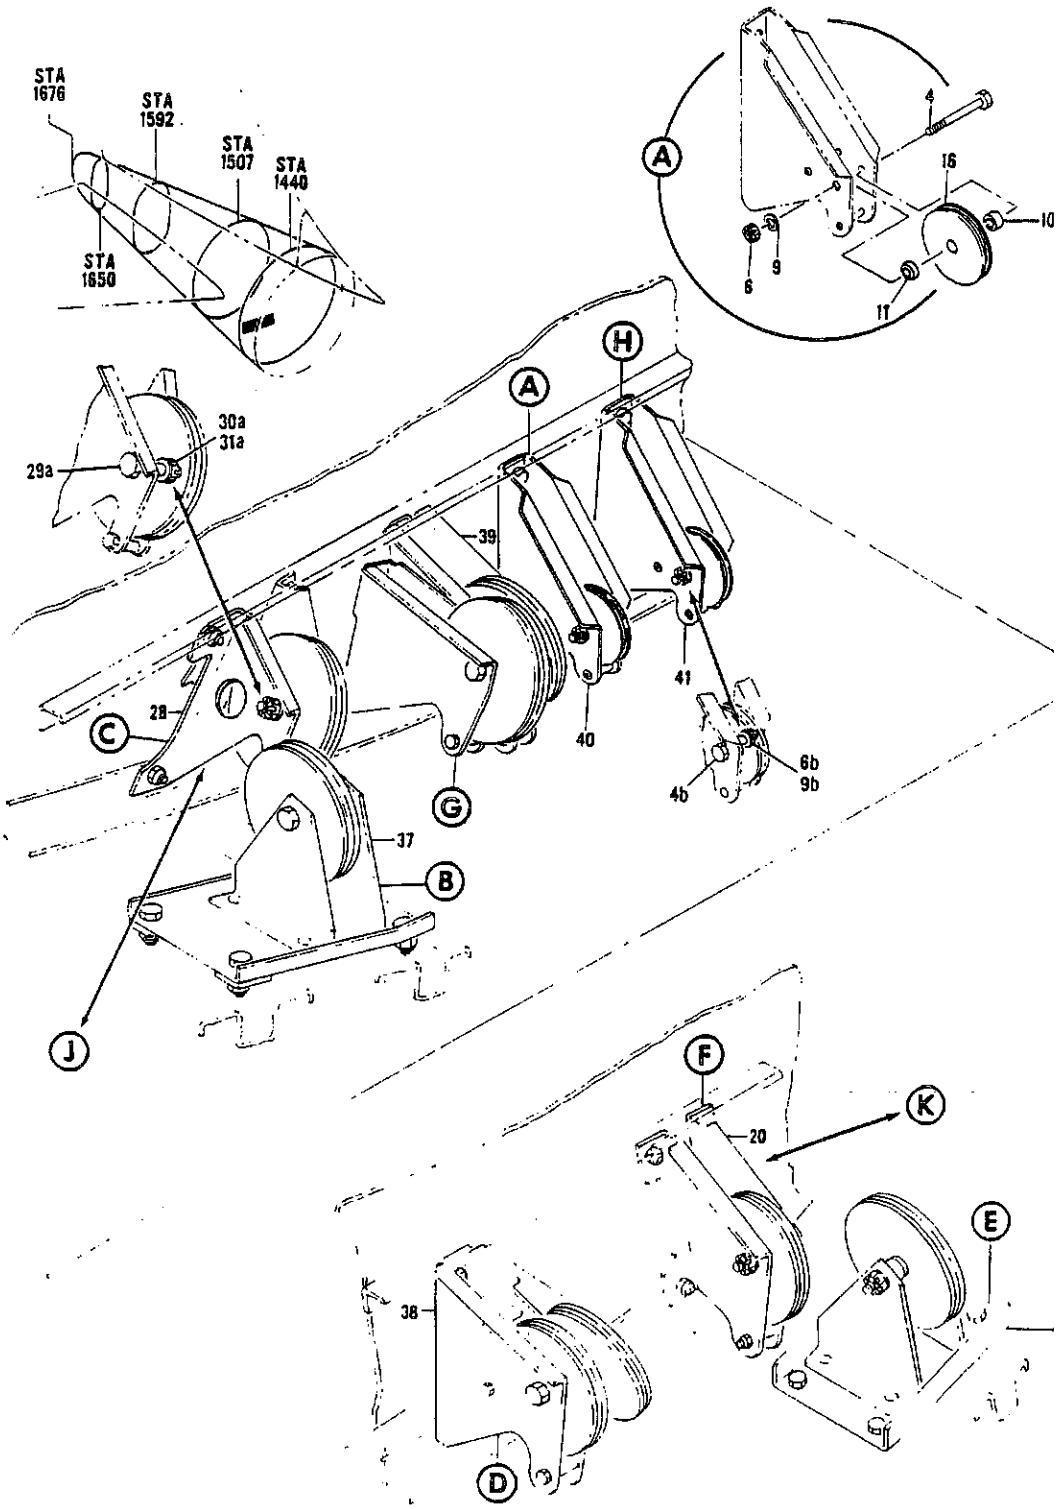


FIGURE 8. BRACKET INSTL, BODY STATION 1462 FLIGHT CONTROLS (SHEET 1)

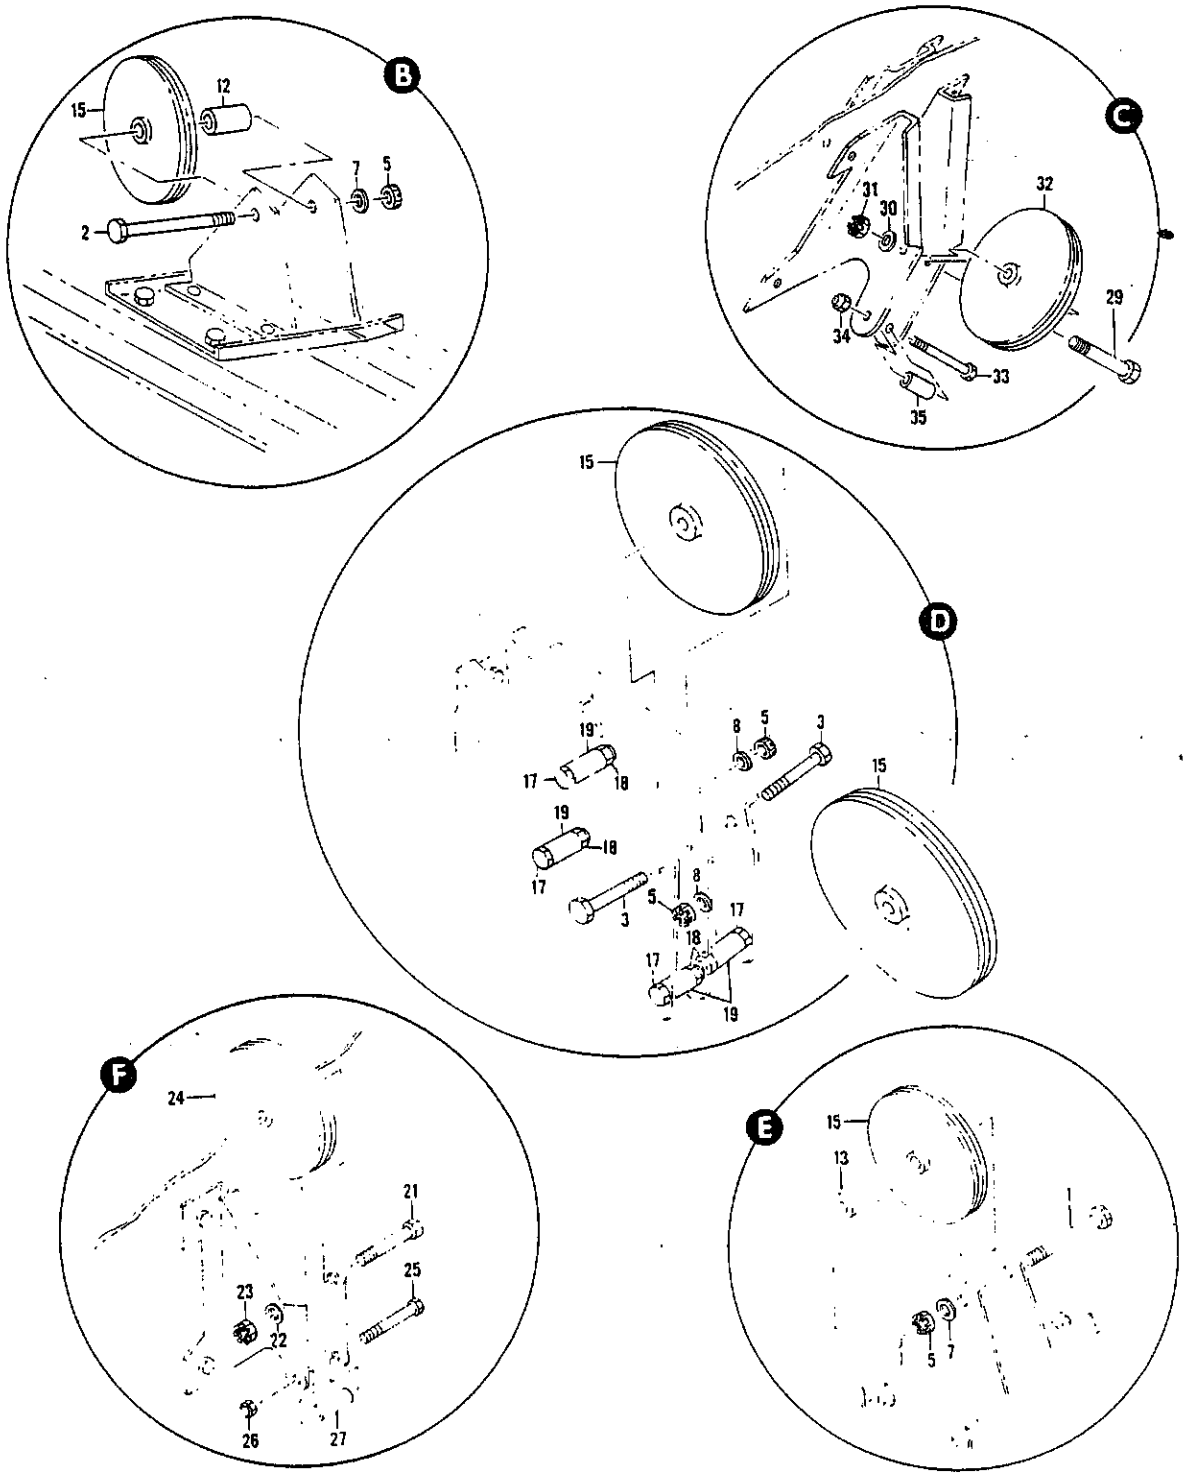


FIGURE 8. BRACKET INSTL, BODY STATION 1462 FLIGHT CONTROLS (SHEET 2)

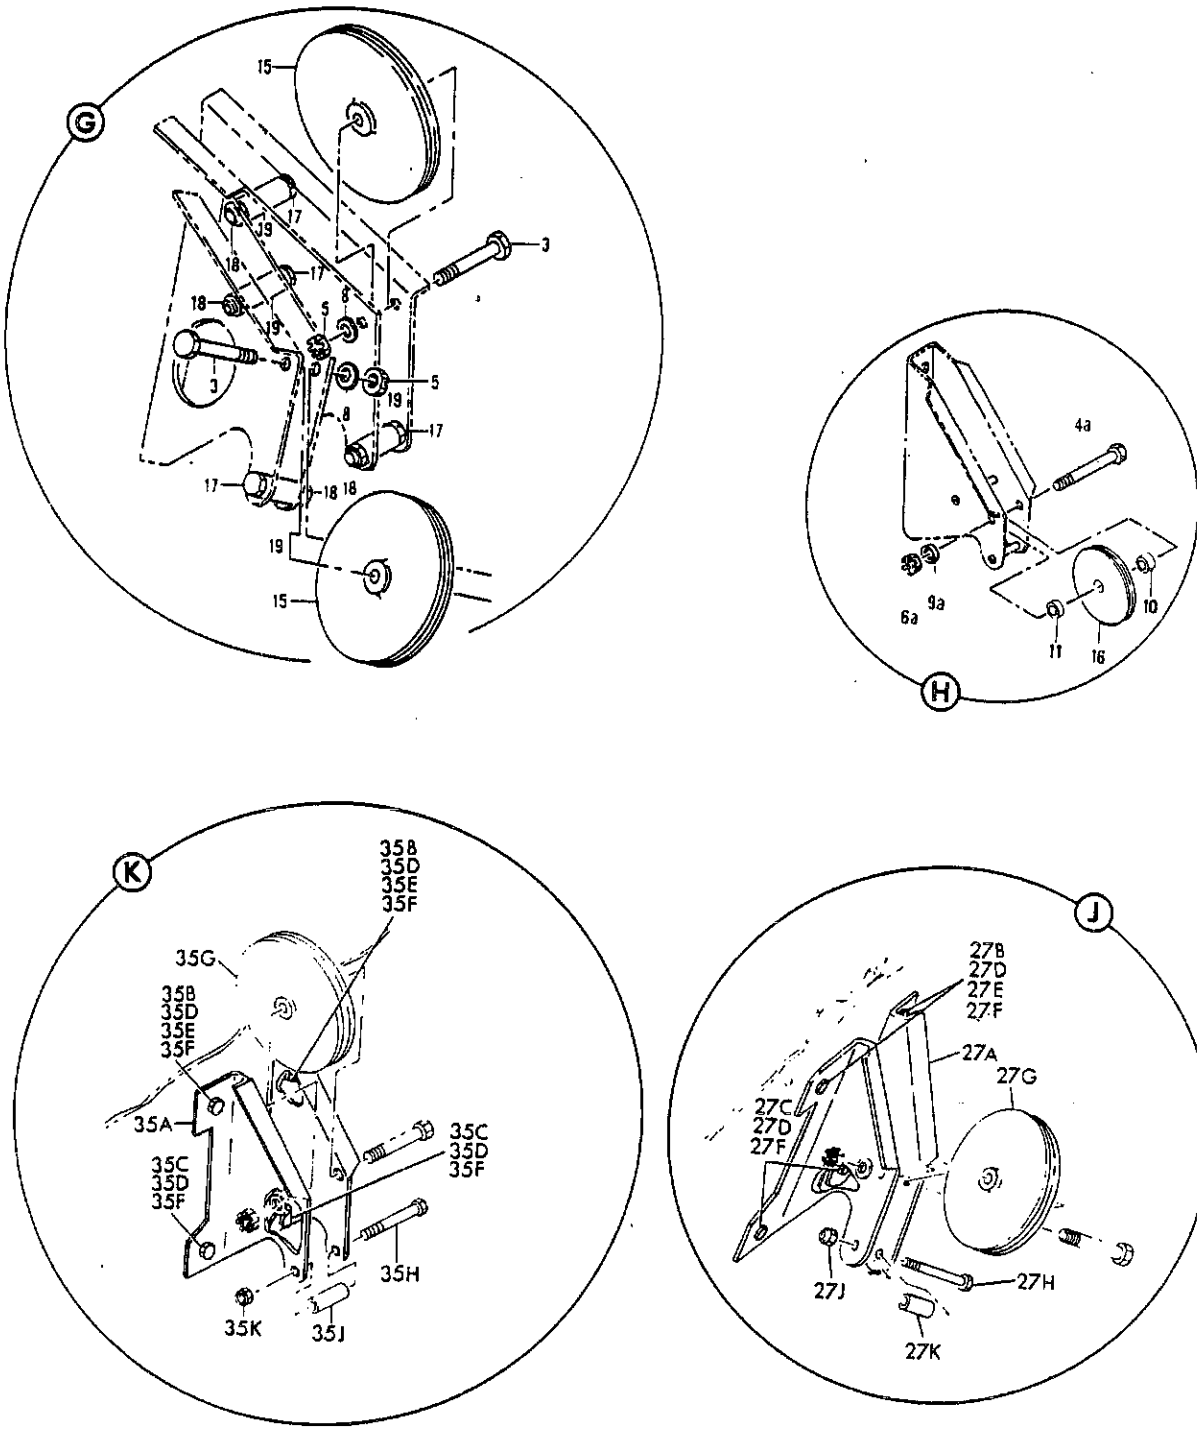



FIGURE 8. BRACKET INSTL, BODY STATION 1462 FLIGHT CONTROLS (SHEET 3)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8	5-95607-3006	BRACKET INSTL, BODY STATION 1462 FLIGHT CONTROLS. . . . (SEE FIG. 6, ITEM 2)		RF
1	BACB30NF5-20	. BOLT.		1
2	BACB30NF5-23	. BOLT.		1
3	BACB30NF5-12	. BOLT.		4
4	BACB30NF416	. BOLT.		1
4B	BACB30NF4-16	. BOLT.		1
5	BACN10JC5	. NUT		6
6	BACN10JC4	. NUT		1
6B	BACN10JC4	. NUT		1
7	AN960D516	. WASHER.		2
8	AN960D516L	. WASHER.		4
9	AN960D416	. WASHER.		1
9B	AN960D416	. WASHER.		1
10	NAS42DD8-19	. SPACER.		2
11	NAS42DD8-11	. SPACER.		2
12	NAS43DD5-43	. SPACER.		1
13	NAS43DD5-29	. SPACER.		1
15	BACP30J9	. PULLEY.		6
16	BACP30J4	. PULLEY.		2
17	AN3-12A	. BOLT.		8
18	NAS679A3W	. NUT		8
19	NAS42DD6-48	. SPACER.		8
20	5-95607-3009	. BRACKET ASSY, BODY STATION 1462 FLIGHT CONTROLS . . . ATTACHING PARTS		1
	NAS464P4A6	. BOLT.		2
	AN4-6A	. BOLT.		2
	AN960D416	. WASHER.		4
	60-4353-2	. FILLER, STATION 1462 BRACKET.		2
	NAS679A4W	. NUT -------*-------		4
21	BACB30NF5-12	. . BOLT.		1
22	AN960D516	. . WASHER.		1
23	BACN10JC5	. . NUT		1
24	BACP30J9	. . PULLEY.		1
25	AN3-11A	. . BOLT.		1
26	NAS679A3W	. . NUT		1
27	NAS42DD6-40	. . SPACER.		1
27A	60-3228-2001	. . BRACKET ASSY, PULLEY (USED ON 5-95607-3009) . . .		1
27A	60-3228-2002	. . BRACKET ASSY, PULLEY (USED ON 5-95607-3010) . . . ATTACHING PARTS		1
27B	AN4-6A	. . BOLT.		1
27C	AN4-5A	. . BOLT.		1
27D	AN960D416	. . WASHER.		2
27E	60-4353-2	. . FILLER, STATION 1462 BRACKET.		2
27F	NAS679A4W	. . NUT -------*-------		2
27G	BACP30J9	. . PULLEY.		1
27H	AN3-11A	. . BOLT.		1
27J	NAS42DD6-40	. . SPACER.		1
27K	ANS679A3W	. . NUT		1
28	5-95607-3010	. BRACKET ASSY, BODY STATION 1462 FLIGHT CONTROLS . . . ATTACHING PARTS		1
	AN4-6A	. BOLT.		2
	AN4-5A	. BOLT.		2
	AN960D416	. WASHER.		4
	60-4353-2	. FILLER, STATION 1462 BRACKET.		2
	NAS679A4W	. NUT -------*-------		4
29A	BACB30NF5-12	. . BOLT.		1
30A	AN960D516	. . WASHER.		1
31A	BACN10JC5	. . NUT		1
32	BACP30J9	. . PULLEY.		1
33	AN3-11A	. . BOLT.		1
34	NAS679A3W	. . NUT		1
35	NAS42DD6-40	. . SPACER.		1
35A	9-60329-2001	. . BRACKET ASSY, PULLEY (USED ON 5-95607-3009) . . .		1
35A	9-60329-2002	. . BRACKET ASSY, PULLEY (USED ON 5-95607-3010) . . . ATTACHING PARTS		1
35B	AN6-6A	. . BOLT.		1
35C	NAS464P4A6	. . BOLT.		1
35D	AN960D416	. . WASHER.		2
35E	60-4352-2	. . FILLER, STATION 1462 BRACKET.		1
35F	NAS679A4W	. . NUT		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8 35G	BACP30J9	. . PULLEY.		1
35H	AN3-11A	. . BOLT.		1
35J	NAS42DD6-40	. . SPACER.		1
		-------*-------		
35K	NAS679A3W	. . NUT		1
36	5-95607-3002	. BRACKET ASSY, BODY STATION 1462 FLIGHT CONTROLS		1
		ATTACHING PARTS		
	AN4-5A	. BOLT.		2
	NAS679A4W	. NUT		4
	AN4-10A	. BOLT.		2
	AN960D416	. WASHER.		4
		-------*-------		
	BACS40D13-13	. SHIM.		AR
	BACS40G13-13	. SHIM.		AR
		ATTACHING PARTS		
	50-3361-2054	. FILLER, STATION 1462 BRACKET.		4
		-------*-------		
37	5-95607-3003	. BRACKET ASSY, BODY STATION 1462 FLIGHT CONTROLS		1
		ATTACHING PARTS		
	AN4-10A	. BOLT.		2
	AN4-5A	. BOLT.		2
	AN960D416	. WASHER.		4
	NAS679A4W	. NUT		4
	50-3361-2054	. FILLER, STATION 1462 BRACKET.		4
		-------*-------		
	BACS40D13-13	. SHIM.		AR
	BACS40G13-13	. SHIM.		AR
38	9-60327-3005	. BRACKET ASSY, BODY STATION 1462 RUDDER AND STABILIZER CONTROL (LH)		1
		ATTACHING PARTS		
	AN4-6A	. BOLT.		4
	AN960D416	. WASHER.		4
	NAS679A4W	. NUT		4
	50-3361-65	. FILLER, STATION 1462 BRACKET.		2
	60-4353-3	. FILLER, STATION 1462 BRACKET.		1
	60-4353-2	. FILLER, STATION 1462 BRACKET.		1
		-------*-------		
39	9-60327-3006	. BRACKET ASSY, BODY STATION 1462 RUDDER AND STABILIZER CONTROL (RH)		1
		ATTACHING PARTS		
	AN4-6A	. BOLT.		4
	AN960D416	. WASHER.		4
	NAS679A4W	. NUT		4
	50-3361-65	. FILLER, STATION 1462 BRACKET.		2
	60-4353-3	. FILLER, STATION 1462 BRACKET.		1
	60-4353-2	. FILLER, STATION 1462 BRACKET.		1
		-------*-------		
40	69-31048	. BRACKET ASSY, RUDDER TRIM		1
		ATTACHING PARTS		
	AN4-5A	. BOLT.		1
	AN4-6A	. BOLT.		1
	AN960D416	. WASHER.		2
	NAS679A4W	. NUT		2
	50-3361-3025	. FILLER, STATION 1462 BRACKET.		1
	50-3361-3075	. FILLER, STATION 1462 BRACKET.		1
		-------*-------		
41	69-31048	. BRACKET ASSY, RUDDER TRIM		1
		ATTACHING PARTS		
	AN4-5A	. BOLT.		1
	AN4-6A	. BOLT.		1
	AN960D416	. WASHER.		2
	NAS679A4W	. NUT		2
	50-3361-3025	. FILLER, STATION 1462 BRACKET.		1
	50-3361-3075	. FILLER, STATION 1462 BRACKET.		1
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

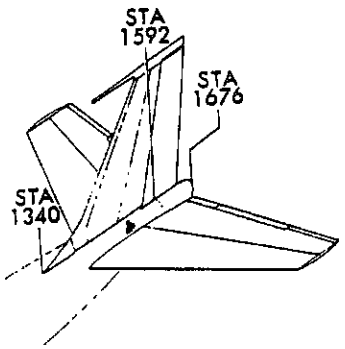

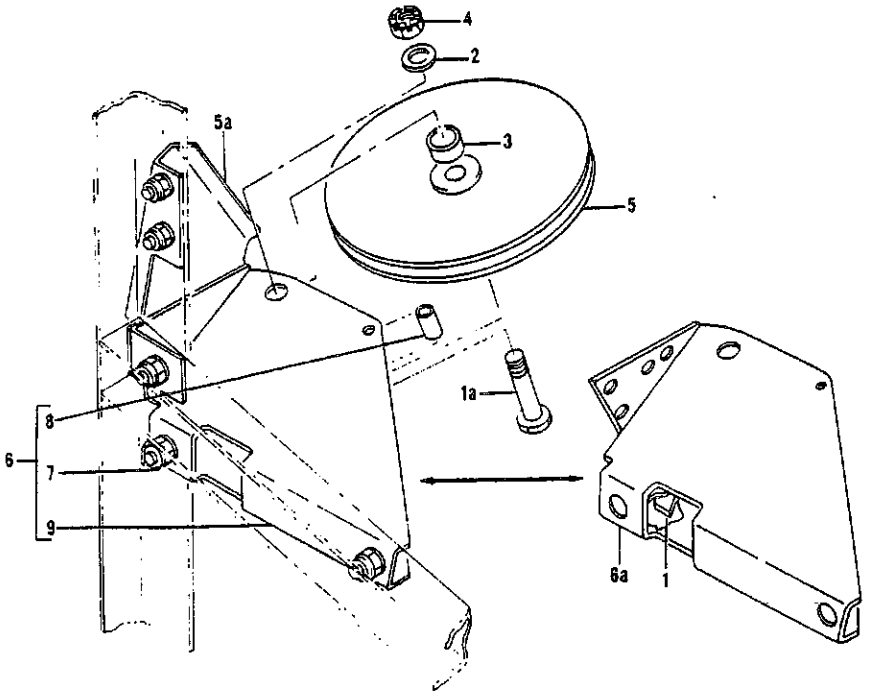


FIGURE 9. BRACKET INSTL, STATION 1519 ELEVATOR CONTROL PULLEY

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
9	50-3757	BRACKET INSTL, STATION 1519 ELEVATOR CONTROL PULLEY . . (SEE FIG. 6, ITEM 3)		RF
1A	NAS1305-16DHW	. BOLT.		1
2	AN960D516	. WASHER.		1
3	NAS43DD5-16	. SPACER.		1
4	AN320-5	. NUT		1
5	AN220-4	. PULLEY.		1
5A	90-3520-5	. SUPPORT, ELEVATOR CONTROL PULLEY BRACKET (USED WITH . 90-3520-3002)		1
		ATTACHING PARTS		
	AN3-5A	. BOLT.		2
	AN960D10L	. WASHER.		2
	NAS679A3W	. NUT		2
	MS20470B5	. RIVET		4
		-------*-------		
6	90-3520-3001	. BRACKET ASSY, ELEVATOR CONTROL PULLEY (OPTIONAL . . . 90-3520-3002)		1
6A	90-3520-3002	. BRACKET ASSY, ELEVATOR CONTROL PULLEY (OPTIONAL TO. . 90-3520-3001) (USED WITH 90-3520-5)		1
		ATTACHING PARTS		
	AN3-5A	. BOLT, (USED WITH 90-3520-3001).		1
	AN960D10L	. WASHER, (USED WITH 90-3520-3001).		1
	50-3361-99	. FILLER, CONTROLS RADIUS (USED WITH 90-3520-3001). . .		1
	NAS679A3W	. NUT, (USED WITH 90-3520-3001)		1
	AN4-5A	. BOLT.		2
	AN960D416	. WASHER.		2
	NAS679A4W	. NUT		2
		-------*-------		
7	63-1568-3000	. . STRIP, ELEVATOR CONTROL PULLEY BRACKET.		1
8	NAS42DD4-56	. . SPACER.		1
9	90-3520-1	. . BRACKET, ELEVATOR CONTROL PULLEY (USED ON . . . . . 90-3520-3001)		1
9	90-3520-6	. . BRACKET, ELEVATOR CONTROL PULLEY (USED ON . . . . . 90-3520-3002)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

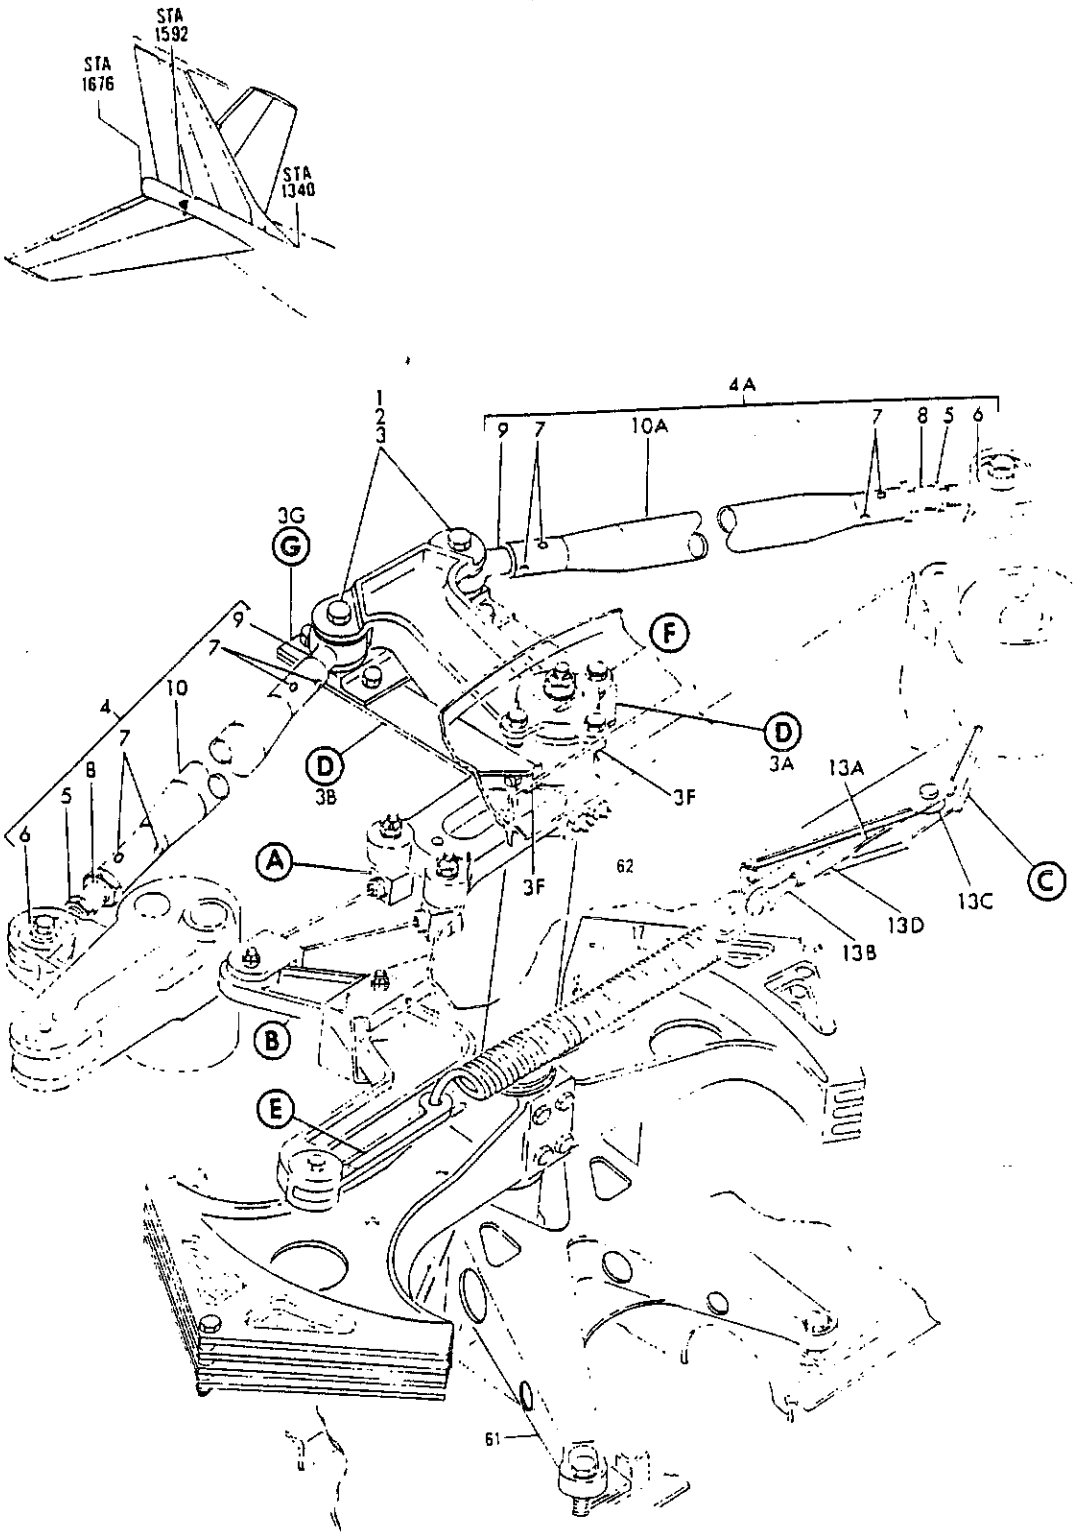


FIGURE 10. QUADRANT INSTL, ELEVATOR CONTROL (SHEET 1)

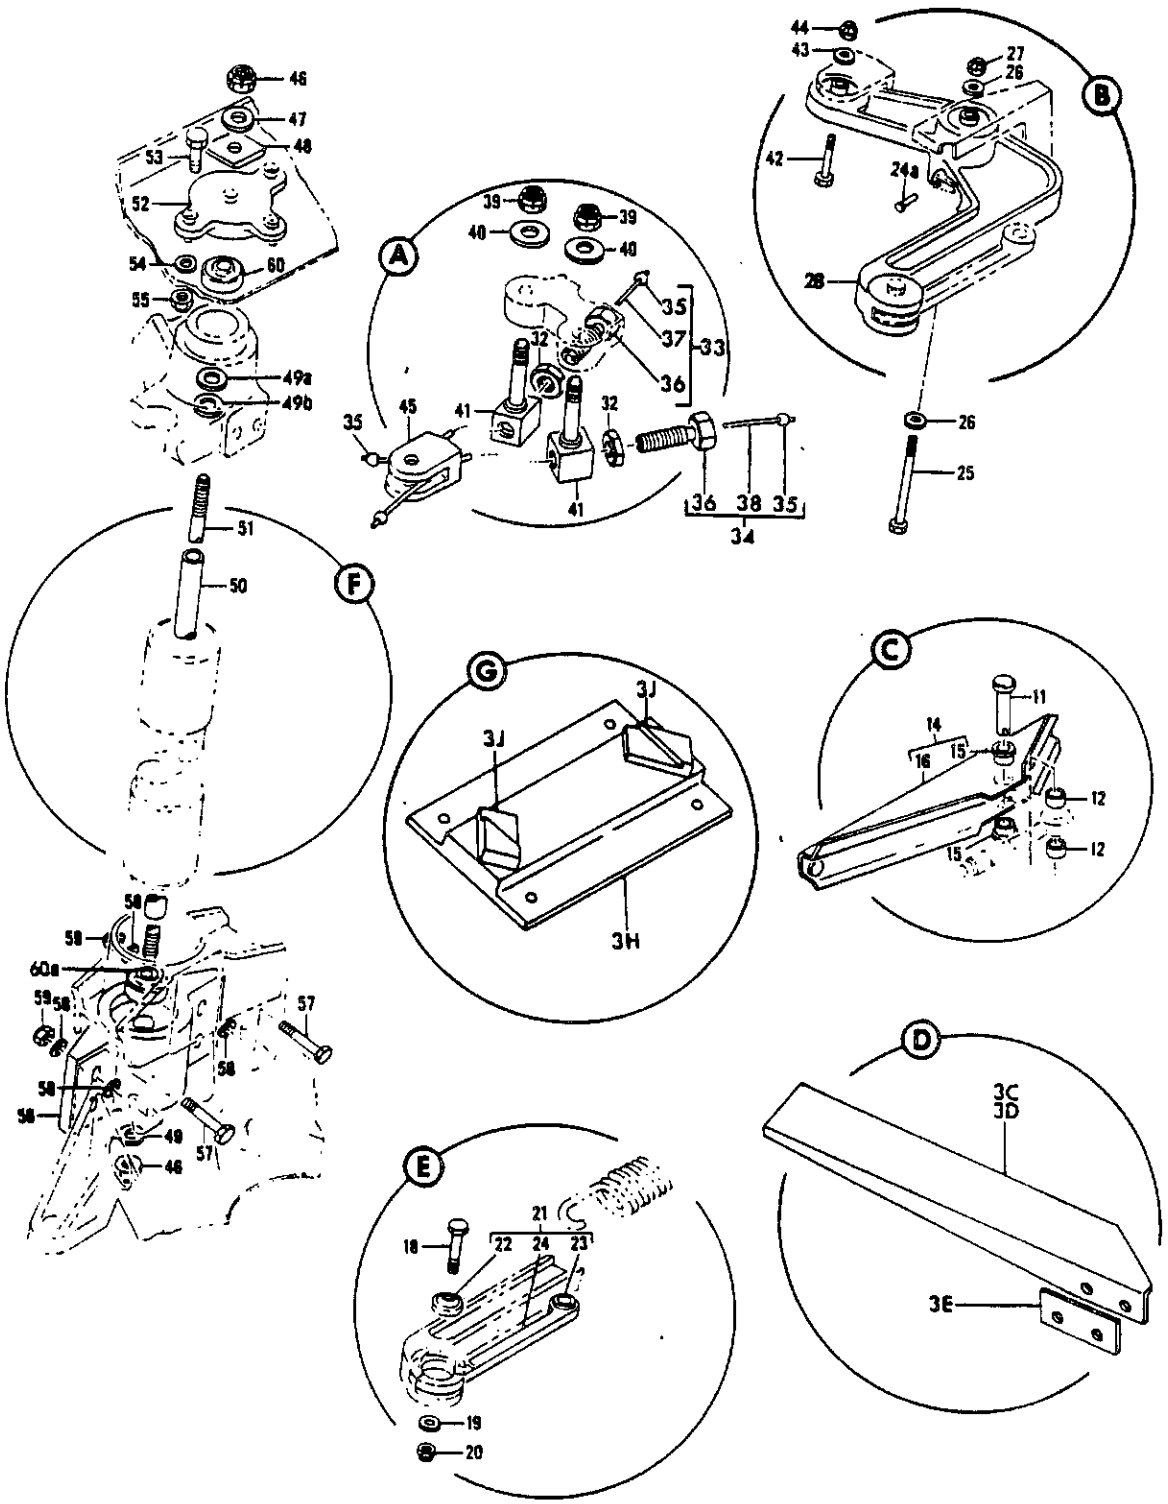


FIGURE 10. QUADRANT INSTL ELEVATOR CONTROL (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	10	5-69537-3002	QUADRANT INSTL, ELEVATOR CONTROL (SEE FIG. 6, ITEM 4)		RF
R	1	BAC830NE5D34	. BOLT	5199	2
R	1	NAS464P5-20	. BOLT, (DELETED BY SB 3050)	0150	2
R	1	BAC830NE5D34	. BOLT, (ADDED BY SB 3050)	0150	2
R	2	AN960D516	. WASHER	0150	2
R	2	AN960D516	. WASHER	5199	AR
R	3	BACN10JD5	. NUT	5199	2
R	3	AN320-5	. NUT, (DELETED BY SB 3050)	0150	2
R	3	BACN10JD5	. NUT, (ADDED BY SB 3050)	0150	2
R	3A	69-63491-1	. ANGLE ASSY, BELLCRANK SUPPORT	5199	1
R	3A	69-63491-1	. ANGLE ASSY, BELLCRANK SUPPORT (ADDED BY SB 3050)	0150	1
R	3B	69-63491-2	. ANGLE ASSY, BELLCRANK SUPPORT	5199	1
R	3B	69-63491-2	. ANGLE ASSY, BELLCRANK SUPPORT (ADDED BY SB 3050)	0150	1
	3C	69-63491-3	. . ANGLE, (USED ON 69-63491-1)		1
	3D	69-63491-4	. . ANGLE, (USED ON 69-63491-2)		1
	3E	BACS40R08C20F	. . SHIM		1
R	3F	69-63491-5	. FILLER, RADIUS	5199	2
R	3F	69-63491-5	. FILLER, RADIUS (ADDED BY SB 3050)	0150	2
R	3G	69-63490-1	. FITTING ASSY, BELLCRANK SUPPORT	5199	1
R	3G	69-63490-1	. FITTING ASSY, BELLCRANK SUPPORT (ADDED BY SB 3050)	0150	1
			ATTACHING PARTS		
R		BACB30GP8-5	. LOCKBOLT, (ADDED BY SB 3050)	0150	4
R		NAS1080D8	. COLLAR, (ADDED BY SB 3050)	0150	4
			-------*-------		
R	3H	69-63490-3	. . FITTING	5199	1
R	3J	BACS40R08E12F	. . SHIM	5199	2
	4	69-6365-4	. ROD ASSY, ELEVATOR CONTROL		1
	4A	69-6365-5	. ROD ASSY, ELEVATOR CONTROL		1
	5	AN316-7R	. . NUT		1
	6	BACB10A438	. . BEARING		1
	7	AN470D8	. . RIVET		4
	8	6-65873-1	. . TERMINAL, ELEVATOR CONTROL ROD END		1
	9	BACB10AE-11	. . BEARING, (OPTIONALS BACB10C170, BACB10C170M, BACB10A470)		1
	9	BACB10C170	. . BEARING, (OPTIONAL TO BACB10AE-11)		1
	9	BACB10C170M	. . BEARING, (OPTIONAL TO BACB10AE-11)		1
	9	BACB10A470	. . BEARING, (OPTIONAL TO BACB10AE-11)		1
	10	69-6365-6	. . TUBE, ELEVATOR CONTROL ROD (USED ON 69-6365-4)		1
	10A	69-6365-7	. . TUBE, ELEVATOR CONTROL ROD (USED ON 69-6365-5)		1
R	11	AN394-33	. PIN	0150	1
R	11	MS20392-3C33	. PIN	5199	1
	12	NAS43DD4-12	. SPACER		2
	13A	MS21256-2	. CLIP, TURNBUCKLE LOCKING		1
	13B	69-67474-1	. EYE END, TURNBUCKLE		1
	13C	MS21255-5LL	. EYE END, TURNBUCKLE		1
	13D	MS21251-B5L	. BODY, TURNBUCKLE		1
	14	90-3385-3	. BRACKET ASSY, ELEVATOR CONTROL		1
	15	BACB28B4-175	. . BUSHING		2
	16	90-3385-1	. . BRACKET, ELEVATOR CONTROL		1
	17	66-4073	. SPRING, ELEVATOR CONTROL CENTERING		1
R	18	AN3-7	. BOLT	0150	1
R	18	BACB30NE3D8	. BOLT	5199	1
	19	AN960D10	. WASHER		1
R	20	AN310-3	. NUT	0150	1
R	20	BACN10JD3	. NUT	5199	1
	21	66-4965-2	. TERMINAL ASSY, ELEVATOR CONTROL CENTERING SPRING		1
	22	AN200KS3L	. . BEARING		1
	23	BAC82B86-385	. . BUSHING		1
	24	66-4965-3	. . TERMINAL, ELEVATOR CONTROL CENTERING SPRING (OPTIONAL 66-4965-4)		1
	24	66-4965-4	. . TERMINAL, ELEVATOR CONTROL CENTERING SPRING (OPTIONAL TO 66-4965-3)		1
	24A	MS20392-2C33	. PIN		1
R	25	AN4-21	. BOLT	0150	1
R	25	BACB30NE4D27	. BOLT	5199	1
	26	AN960D416	. WASHER		2
R	27	AN310-4	. NUT	0150	1
R	27	BACN10JD4	. NUT	5199	1
	28	65-64129-1	. CRANK ASSY, ELEVATOR CONTROL CENTERING SPRING (SEE FIG. 12)		1
	32	AN316-8R	. NUT		2
	33	66-4074	. CABLE ASSY, ELEVATOR CONTROL CENTERING		1
	34	66-4074-1	. CABLE ASSY, ELEVATOR CONTROL CENTERING		1
	35	BACT14B3	. . TERMINAL		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	10 36	6-60405	. . RETAINER, ELEVATOR CONTROL CENTERING.		1
	37	66-4074-2	. . CABLE, ELEVATOR CONTROL CENTERING (USED ON 66-4074)		1
	38	66-4074-3	. . CABLE, ELEVATOR CONTROL CENTERING (USED ON. . . . 66-4074-1)		1
R	39	AN310-4	. NUT	0150	2
R	39	BACN10JD4	. NUT	5199	2
	40	AN960D416	. WASHER.		2
	41	6-60406	. NUT, ELEVATOR CONTROL CENTERING SPRING.		2
R	42	AN4-12	. BOLT.	0150	1
R	42	BACB30NE4D13	. BOLT.	5199	1
	43	AN960D416	. WASHER.		1
R	44	AN310-4	. NUT	0150	1
R	44	BACN10JD4	. NUT	5199	1
	45	66-4077-1	. FITTING, ELEVATOR CONTROL CENTERING		1
R	46	AN310-8	. NUT	0150	2
R	46	BACN10JD8	. NUT	5199	2
	47	AN960D816	. WASHER.		1
	48	50-3361-50	. FILLER, CONTROLS RADIUS		1
R	49	BACW10T816	. WASHER.	0150	1
R	49	NAS1197-816	. WASHER.	5199	1
	49A	AN960-816	. WASHER.		AR
	49B	AN960-816L	. WASHER.		AR
	50	NAS43DD8-902	. SPACER.		1
	51	69-36386-1	. SHAFT, ELEVATOR CONTROL REAR QUADRANT		1
	52	50-3122	. COVER, ELEVATOR CONTROL QUADRANT. . . . . ATTACHING PARTS		1
R	53	AN4-7A	. BOLT.	0150	3
R	53	BACB30NE4-7	. BOLT.	5199	3
R	54	BACW10T416	. WASHER.	0150	3
R	54	NAS1197-416	. WASHER.	5199	3
R	55	BACN10ET4	. NUT	0150	3
R	55	BACN10JC4C	. NUT	5199	3
			-------*-------		
R	56	50-3151-2	. BRACKET, ELEVATOR CONTROL QUADRANT SUPPORT. . . . . ATTACHING PARTS	0150	1
R	57	AN4-12A	. BOLT.	0150	4
R	58	BACW10T416L	. WASHER.	0150	8
R	59	BACN10ET4	. NUT	0150	4
			-------*-------		
R	60	AN200KP8	. BEARING	0150	1
R	60	BACB10BY8	. BEARING	5199	1
	61	5-98343	. SUPPORT, ELEVATOR CONTROL QUADRANT. . . . . ATTACHING PARTS		1
R		AN4-11A	. BOLT.	0150	4
R		BACB30NE4-11	. BOLT.	5199	4
R		BACW10T416	. WASHER.	0150	4
R		NAS1197-416	. WASHER.	5199	4
			-------*-------		
	62	5-89537-3003	. QUADRANT ASSY, (DELETED BY SB 3050) (SEE FIG. 11) . .	0103	1
R	62	5-89537-3003	. QUADRANT ASSY, ELEVATOR CONTROL (REWORKED BY SB 3003) (MAY USE 5-89537-3005 AFTER SB 3003 INCORPORATION) (SEE FIG. 11)	0150	1
R	62	5-89537-3004	. QUADRANT ASSY, (AFFECTED BY AD 71-3-2) (DELETED BY SB 3050) (SEE FIG. 11)	0450	1
R	62	5-89537-3007	. QUADRANT ASSY	5199	1
R	62	5-89537-3007	. QUADRANT ASSY, (ADDED BY SB 3050)	0150	1
R			. . FLIGHT CONTROL, (SEE FIG. 11)	5199	
R			. . REQUIRED PLACARDS, (SEE 11-3, FIG. 80).	5199	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

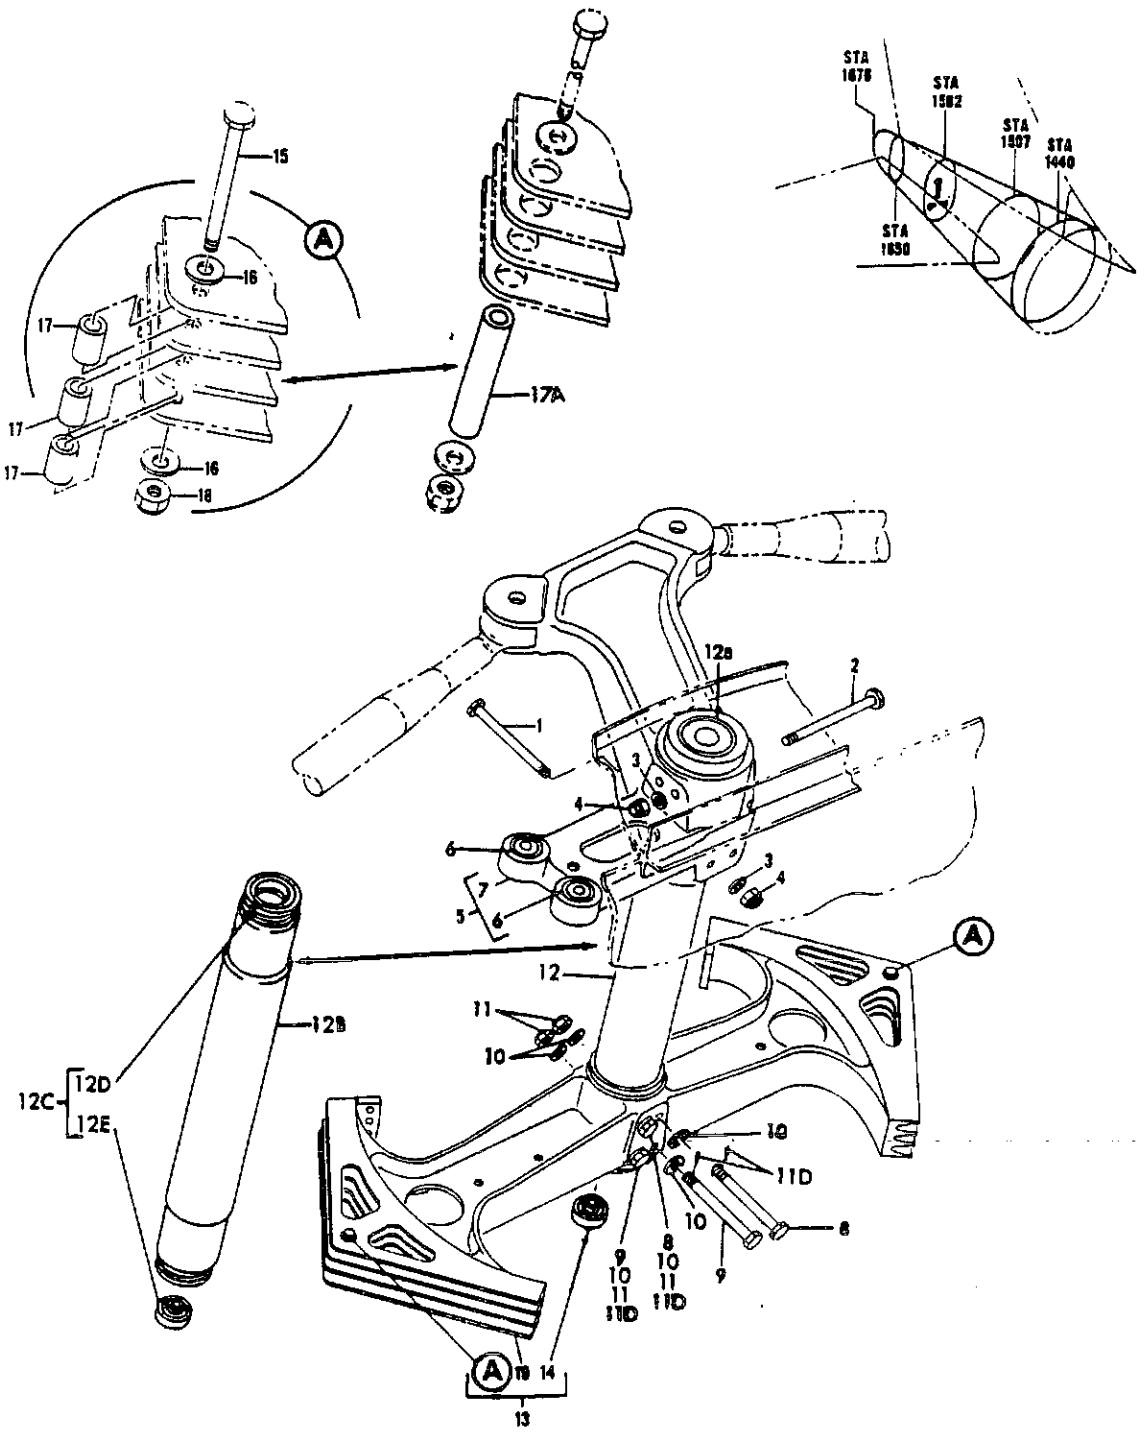
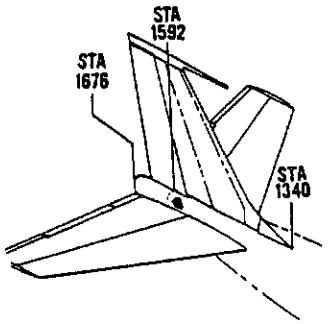


FIGURE 11. QUADRANT ASSY, ELEVATOR CONTROL

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	11	5-89537-3003	QUADRANT ASSY, ELEVATOR CONTROL (DELETED BY SB 3050). (SEE FIG. 10, ITEM 62)	0103	RF
R		5-89537-3003	QUADRANT ASSY, ELEVATOR CONTROL (REWORKED BY SB 3003) (MAY USE 5-89537-3005 AFTER SB 3003 INCORPORATION) (SEE FIG. 10, ITEM 62)	0150	RF
R		5-89537-3007	QUADRANT ASSY, ELEVATOR CONTROL (FLIGHT CONTROL ONLY) (SEE FIG. 10, ITEM 62)	5199	RF
R		5-89537-3007	QUADRANT ASSY, ELEVATOR CONTROL (FLIGHT CONTROL ONLY) (ADDED BY SB 3050) (SEE FIG. 10, ITEM 62)	0150	RF
R	1	BACB30NF5-52	. BOLT.	5199	2
R	1	NAS464P5A52	. BOLT, (DELETED BY SB 3050).	0150	2
R	1	BACB30NF5-52	. BOLT, (ADDED BY SB 3050).	0150	2
R	2	BACB30NF5-68	. BOLT.	5199	2
R	2	NAS464PA54	. BOLT, (DELETED BY SB 3050).	0150	2
R	2	BACB30NF5-68	. BOLT, (ADDED BY SB 3050).	0150	2
	3	AN960D516	. WASHER.		4
R	4	NAS679A5	. NUT, (DELETED BY SB 3050)	0150	4
R	4	BACN10JC5	. NUT	5199	4
R	4	BACN10JC5	. NUT, (ADDED BY SB 3050)	0150	4
R	5	50-3144-3	. BELLCRANK ASSY.	5199	1
R	5	50-3144	. BELLCRANK ASSY, (DELETED BY SB 3050).	0150	1
R	5	50-3144-3	. BELLCRANK ASSY, (ADDED BY SB 3050).	0150	1
	6	BAC810A120	. . BEARING		2
R	7	50-3144-4	. . BELLCRANK	5199	1
R	7	50-3144-1	. . BELLCRANK, (DELETED BY SB 3050)	0150	1
R	7	50-3144-4	. . BELLCRANK, (ADDED BY SB 3050)	0150	1
R	8	BACB30NF5D50	. BOLT, (USED ON 5-89537-3005, -3006 AND -3007)	5199	2
R	8	NAS464P5A50	. BOLT, (DELETED BY SB 3050).	0150	2
R	8	BACB30NF5D50	. BOLT, (ADDED BY SB 3050).	0150	2
R	9	BACB30NF5D50	. BOLT, (USED ON 5-89537-3005, -3006 AND -3007)	5199	2
R	9	NAS464P5A52	. BOLT, (DELETED BY SB 3050).	0150	2
R	9	BACB30NF5D50	. BOLT, (ADDED BY SB 3050).	0150	2
R	10	BACW10T516L	. WASHER, (DELETED BY SB 3050).	0150	8
R	10	AN960PD516	. WASHER, (ADDED BY SB 3050).	0150	8
R	10	AN960PD516	. WASHER.	5199	8
R	11	BACN10JC10S	. NUT, (USED ON 5-89537-3005, -3006 AND -3007).	5199	4
R	11	NAS679A5	. NUT, (DELETED BY SB 3050)	0150	4
R	11	BACN10JD10S	. NUT, (ADDED BY SB 3050)	0150	4
R	12	60-3235-3001	. TUBE ASSY, TORQUE (DELETED BY SB 3050).	0150	1
R	12A	66-11740-1	. . PLUG.	0150	1
R	12B	69-63489-1	. TUBE, TORQUE (OUTER).	5199	1
R	12B	69-63489-1	. TUBE, TORQUE (OUTER) (MATCHED PART, ORDER ONLY WITH 69-63488-1 AND 65-82137-1) (ADDED BY SB 3050)	0150	1
R	12C	69-63488-1	. TUBE ASSY, TORQUE (INNER)	5199	1
R	12C	69-63488-1	. TUBE ASSY, TORQUE (INNER) (MATCHED PART, ORDER ONLY WITH 69-63489-1 AND 65-82137-1) (ADDED BY SB 3050)	0150	1
	12D	69-63488-2	. . TUBE.		1
	12E	BACB10BY8	. . BEARING		1
	13	50-3119	. QUADRANT ASSY, ELEVATOR CONTROL (AFFECTED BY AD 65-6-3) (DELETED BY SB 3050)	0103	1
R	13	50-3119	. QUADRANT ASSY, ELEVATOR CONTROL (AFFECTED BY AD 65-6-3) (REWORKED BY SB 3003)	0150	1
R	13	65-82137-1	. QUADRANT ASSY	5199	1
R	13	65-82137-1	. QUADRANT ASSY, (MATCHED PART, ORDER ONLY WITH 69-63489-1 AND 69-63488-1) (ADDED BY SB 3050)	0150	1
	14	AN200KP8	. . BEARING		1
R	15	BACB30NE3-32	. . BOLT.	5199	2
R	15	AN3-17A	. . BOLT, (DELETED BY SB 3050).	0150	2
R	15	BACB30NE3-32	. . BOLT, (ADDED BY SB 3050).	0150	2
R	16	AN960PD10L	. . WASHER.	5199	4
R	16	BACW10T10L	. . WASHER, (DELETED BY SB 3050).	0150	4
R	16	AN960PD10L	. . WASHER, (ADDED BY SB 3050).	0150	4
R	17	NAS43DD3-26	. . SPACER, (DELETED BY SB 3050).	0150	6
R	17A	NAS43DD3-108	. . SPACER.	5199	2
R	17A	NAS43DD3-108	. . SPACER, (ADDED BY SB 3050).	0150	2
R	18	BACN10JC3	. . NUT	5199	2
R	18	BACN10JC3	. . NUT, (ADDED BY SB 3050)	0150	2
R	18	NAS679A3W	. . NUT, (DELETED BY SB 3050)	0150	2
	19	50-3119-1	. . QUADRANT, (DELETED BY SB 3050).	0103	1
R	19	50-3119-1	. . QUADRANT, (REWORKED BY SB 3003)	0150	1
R	19	65-82137-4	. . QUADRANT.	5199	1
R	19	65-82137-4	. . QUADRANT, (ADDED BY SB 3050).	0150	1
R			. FOR REFERENCE TO OTHER QUADRANT DETAILS, SEE NHA.	5199	

MISSING ITEM NUMBERS ARE NOT APPLICABLE



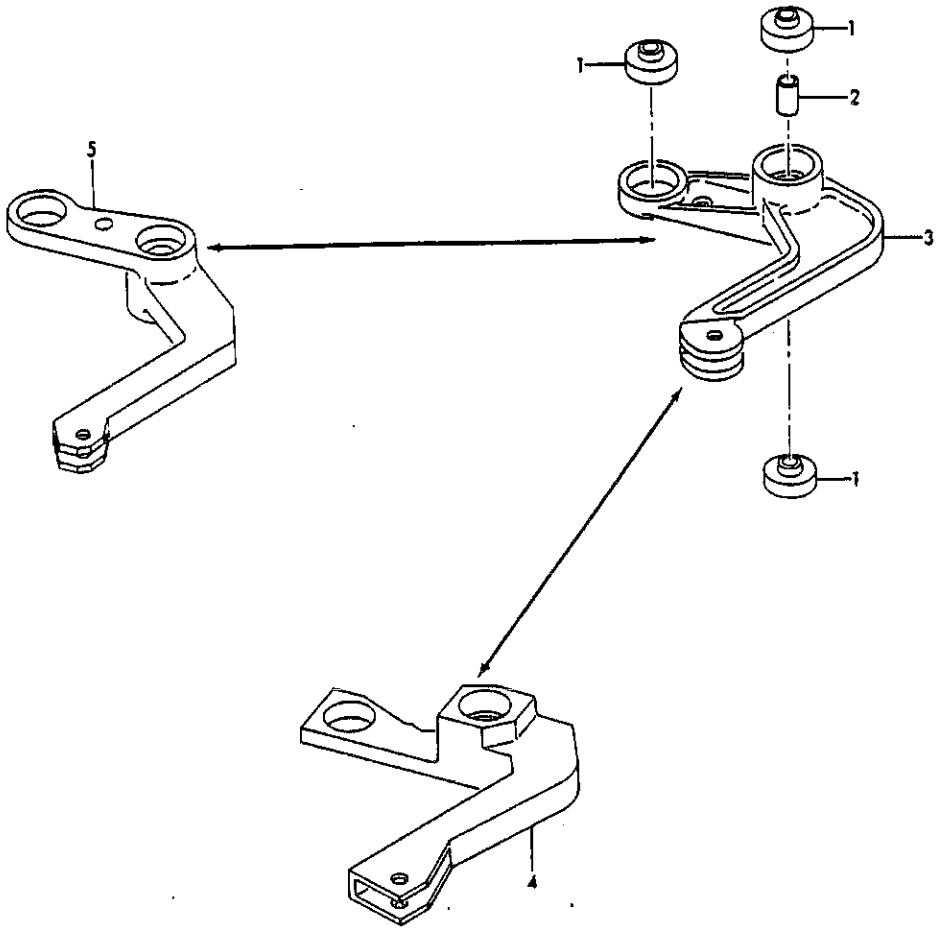


FIGURE 12. CRANK ASSY, ELEVATOR CONTROL CENTERING SPRING

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
12	65-64129-1	CRANK ASSY, ELEVATOR CONTROL CENTERING SPRING (SEE FIG. 10, ITEM 28)		RF
1	BACB10A689	. BEARING		3
2	NAS43DD4-37	. SPACER.		1
5	65-64129-2	. CRANK		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

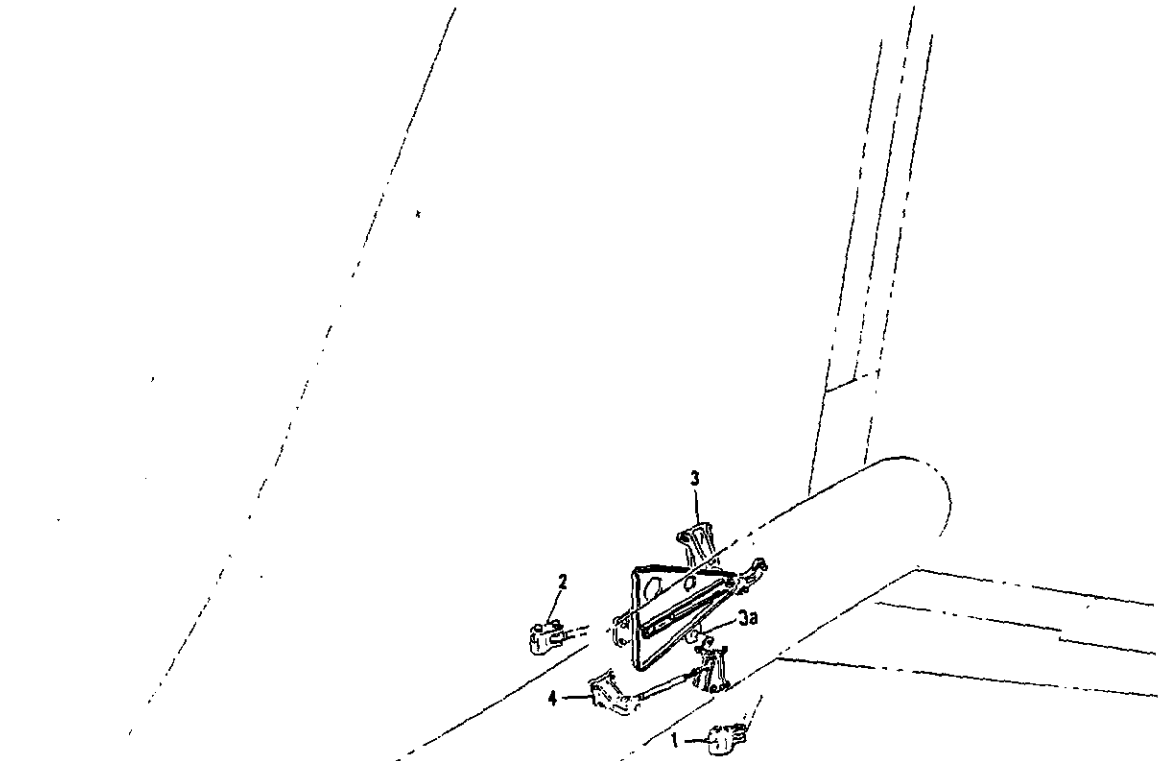
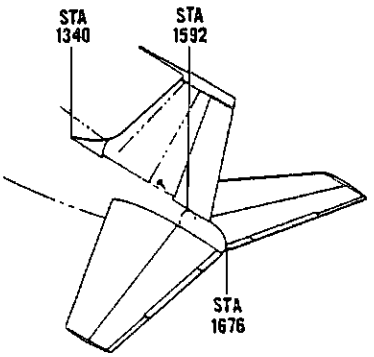
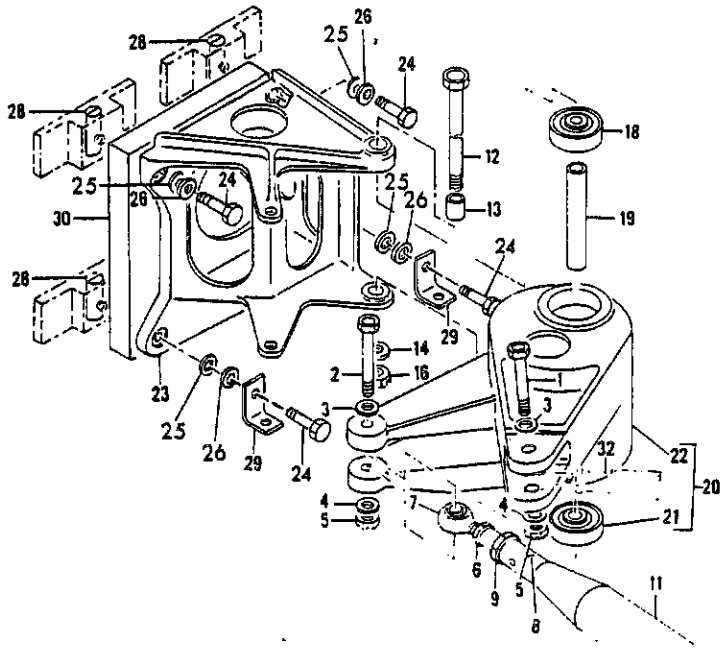


FIGURE 14. CONTROL INSTL, SECTION 82 ELEVATOR

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	14	50-8702-382	CONTROL INSTL, SECTION 82 ELEVATOR LH (SEE 55-2, FIG. 3, ITEM 70 AND 55-2, FIG. 4, ITEM 67)		RF
		50-8702-482	CONTROL INSTL, SECTION 82 ELEVATOR RH (SEE 55-2, FIG. 3, ITEM 70 AND 55-2, FIG. 4, ITEM 67)		RF
	1	65-7476-1	. CRANK INSTL, STABILIZER ELEVATOR CONTROL LH (LH ONLY) (SEE FIG. 15)		1
	2	65-7476-2	. CRANK INSTL, STABILIZER RH (RH ONLY).		1
			. . FLIGHT CONTROL, (SEE 27-11, FIG. 16).		
			. . REQUIRED PLACARDS, (SEE 11-2, FIG. 217)		
	3	65-42014-1	. MECHANISM INSTL, ELEVATOR ACTUATOR ANTI-BALANCE TAB (LH ONLY) (SEE FIG. 25)		1
	3	65-42014-2	. MECHANISM INSTL, ELEVATOR ACTUATOR ANTI-BALANCE TAB (RH ONLY) (SEE FIG. 25)		1
R	3A	65-58356-1	. TRANSMITTER INSTL, ELEVATOR POSITION (SEE FIG. 30). .	0150	1
	4		CONTROL INSTL, SECTION 58 ELEVATOR (FOR REF SEE FIG. 6)		RF

MISSING ITEM NUMBERS ARE NOT APPLICABLE





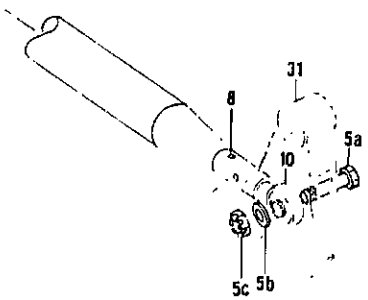


FIGURE 15. CRANK INSTL, STABILIZER ELEVATOR CONTROL LH

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	15	65-7476-1	CRANK INSTL, STABILIZER ELEVATOR CONTROL LH (SEE FIG. 14, ITEM 1)		RF
	1	NAS1105-26DW	. BOLT.		1
	2	NAS1105-33DW	. BOLT.		1
	3	BACW10T516L	. WASHER.		2
	4	BACW10T516	. WASHER.		2
	5	AN320-5	. NUT		2
	5A	NAS1105-27DW	. BOLT.		1
	5B	AN960D516L	. WASHER.		1
	5C	AN320-5	. NUT		1
	6	AN316-7R	. NUT		1
	7	BACB10A438	. BEARING		1
		69-9286-10	. ROD ASSY, ELEVATOR CONTROL.		1
	8	MS20470D8	. . RIVET		4
	9	6-65873-1	. . TERMINAL, ELEVATOR CONTROL ROD END.		1
	10	BACB10C170	. . BEARING		1
	11	69-9286-11	. . ROD, ELEVATOR CONTROL		1
	12	NAS1106-96DW	. BOLT.		1
	13	66-9327	. BUSHING, ELEVATOR CONTROL CRANK INSTL		1
	14	BACW10T616	. WASHER.		1
	16	AN320-6	. NUT		1
	18	AN200KP6	. BEARING		1
	19	NAS43DD6-209	. SPACER.		1
R	20	65-11032	. CRANK ASSY.	0150	1
R	20	65-11032-3	. CRANK ASSY.	5199	1
	21	AN200KP6	. . BEARING		1
R	22	65-11032-2	. . CRANK	0150	1
R	22	65-11032-4	. . CRANK	5199	1
R	23	65-10009	. BRACKET	0150	1
R	23	65-10009-2	. BRACKET	5199	1
			ATTACHING PARTS		
	24	NAS1304-28	. BOLT.		4
	25	BACW10T416	. WASHER.		4
	26	NAS1197-416	. WASHER.		AR
	28	BACN10CP4L	. NUT		4
			-------*-------		
	30	66-31045	. PLATE, STABILIZER ELEVATOR CONTROL BASE LH.		1
	31		CONTROL INSTL, SECTION 84 ELEVATOR (FOR REF SEE FIG. 17)		RF
	32		QUADRANT INSTL, ELEVATOR CONTROL (FOR REF SEE FIG. 10)		RF

MISSING ITEM NUMBERS ARE NOT APPLICABLE

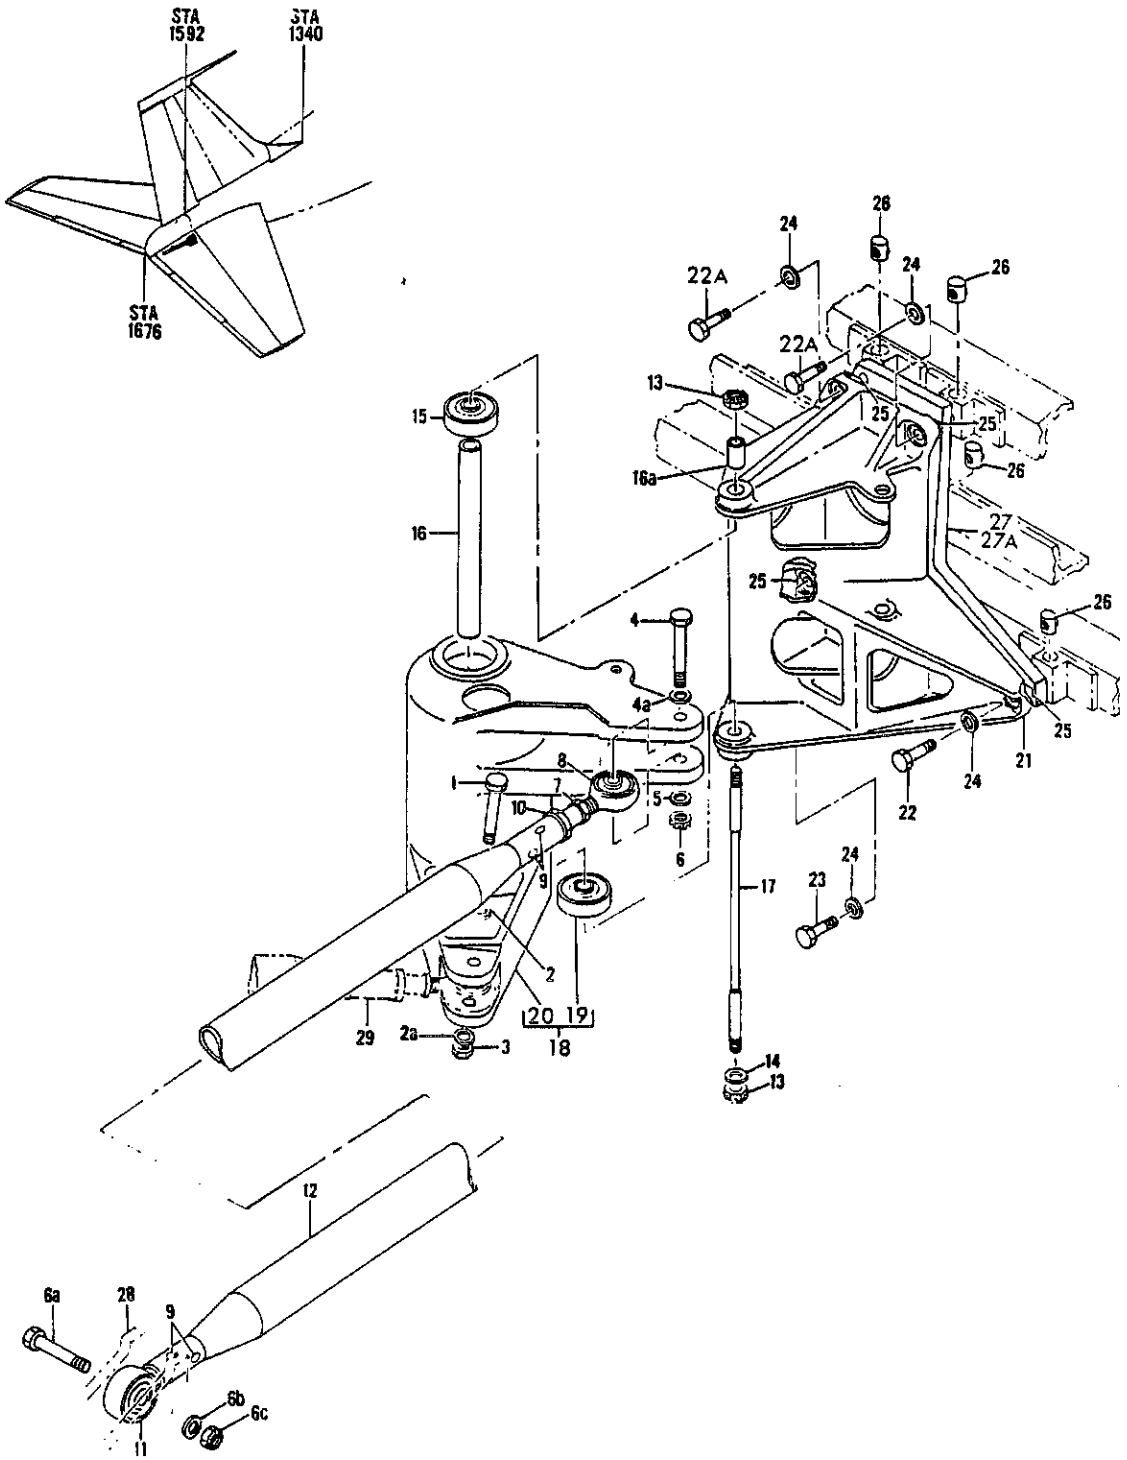


FIGURE 16. CRANK INSTL, STABILIZER ELEVATOR CONTROL RH (FLIGHT CONTROL ONLY)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	16	65-7476-2	CRANK INSTL, STABILIZER ELEVATOR CONTROL RH (FLIGHT CONTROL ONLY) (SEE FIG. 14, ITEM 2)		RF
	1	NAS1105-25D	. BOLT		1
	2	NAS1197-516L	. WASHER		1
	2A	NAS1197516	. WASHER		1
	3	AN320-5	. NUT		1
	4	NAS1105-33D	. BOLT		1
	4A	NAS1197-516L	. WASHER		1
	5	NAS1197-516	. WASHER		1
	6	AN320-5	. NUT		1
	6A	NAS1105-27D	. BOLT		1
	6B	AN960D516L	. WASHER		1
	6C	AN320-5	. NUT		1
	7	AN316-7R	. NUT		1
R	8	BACB10AD7	. BEARING	0150	1
		69-9286-12	. ROD ASSY, ELEVATOR CONTROL		1
	9	MS20470D8	. . RIVET		4
	10	6-65873-1	. . TERMINAL, ELEVATOR CONTROL ROD END		1
R	11	BACB10C170	. . BEARING	0150	1
	12	69-9286-13	. . ROD, ELEVATOR CONTROL		1
	13	AN310-6	. NUT		2
	14	NAS1197-616L	. WASHER		1
R	15	AN200KP6	. BEARING	0150	1
	16	NAS43DD6-430	. SPACER		1
	16A	66-9327-1	. BUSHING, ELEVATOR CONTROL CRANK		1
	17	60-3272	. SHAFT, ELEVATOR CONTROL RH CRANK		1
R	18	65-11034-3	. CRANK ASSY, (FLIGHT CONTROL ONLY)	0150	1
R	18	65-11034-4	. CRANK ASSY, (FLIGHT CONTROL ONLY)	5199	1
R	19	AN200KP6	. . BEARING	0150	1
R	20	65-11034-1	. . CRANK	0150	1
R	20	65-11034-5	. . CRANK	5199	1
R	21	65-11033	. BRACKET	0150	1
R	21	65-11033-2	. BRACKET	5199	1
			ATTACHING PARTS		
	22	BACB30NE4-34	. BOLT		1
	22A	BACB30NE4-34	. BOLT		2
	23	BACB30NE4-36	. BOLT		1
	24	NAS1197-416	. WASHER		4
	26	BACN10CP4L	. NUT		4
			-------*-------		
	27	66-31046	. PLATE, STABILIZER ELEVATOR CONTROL BASE RH		1
	28		CONTROL INSTL, SECTION 84 ELEVATOR (FOR REF SEE FIG. 17)		RF
	29		QUADRANT INSTL, ELEVATOR CONTROL (FOR REF SEE FIG. 10)		RF
			. FOR REFERENCE TO OTHER CRANK DETAILS, SEE NHA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

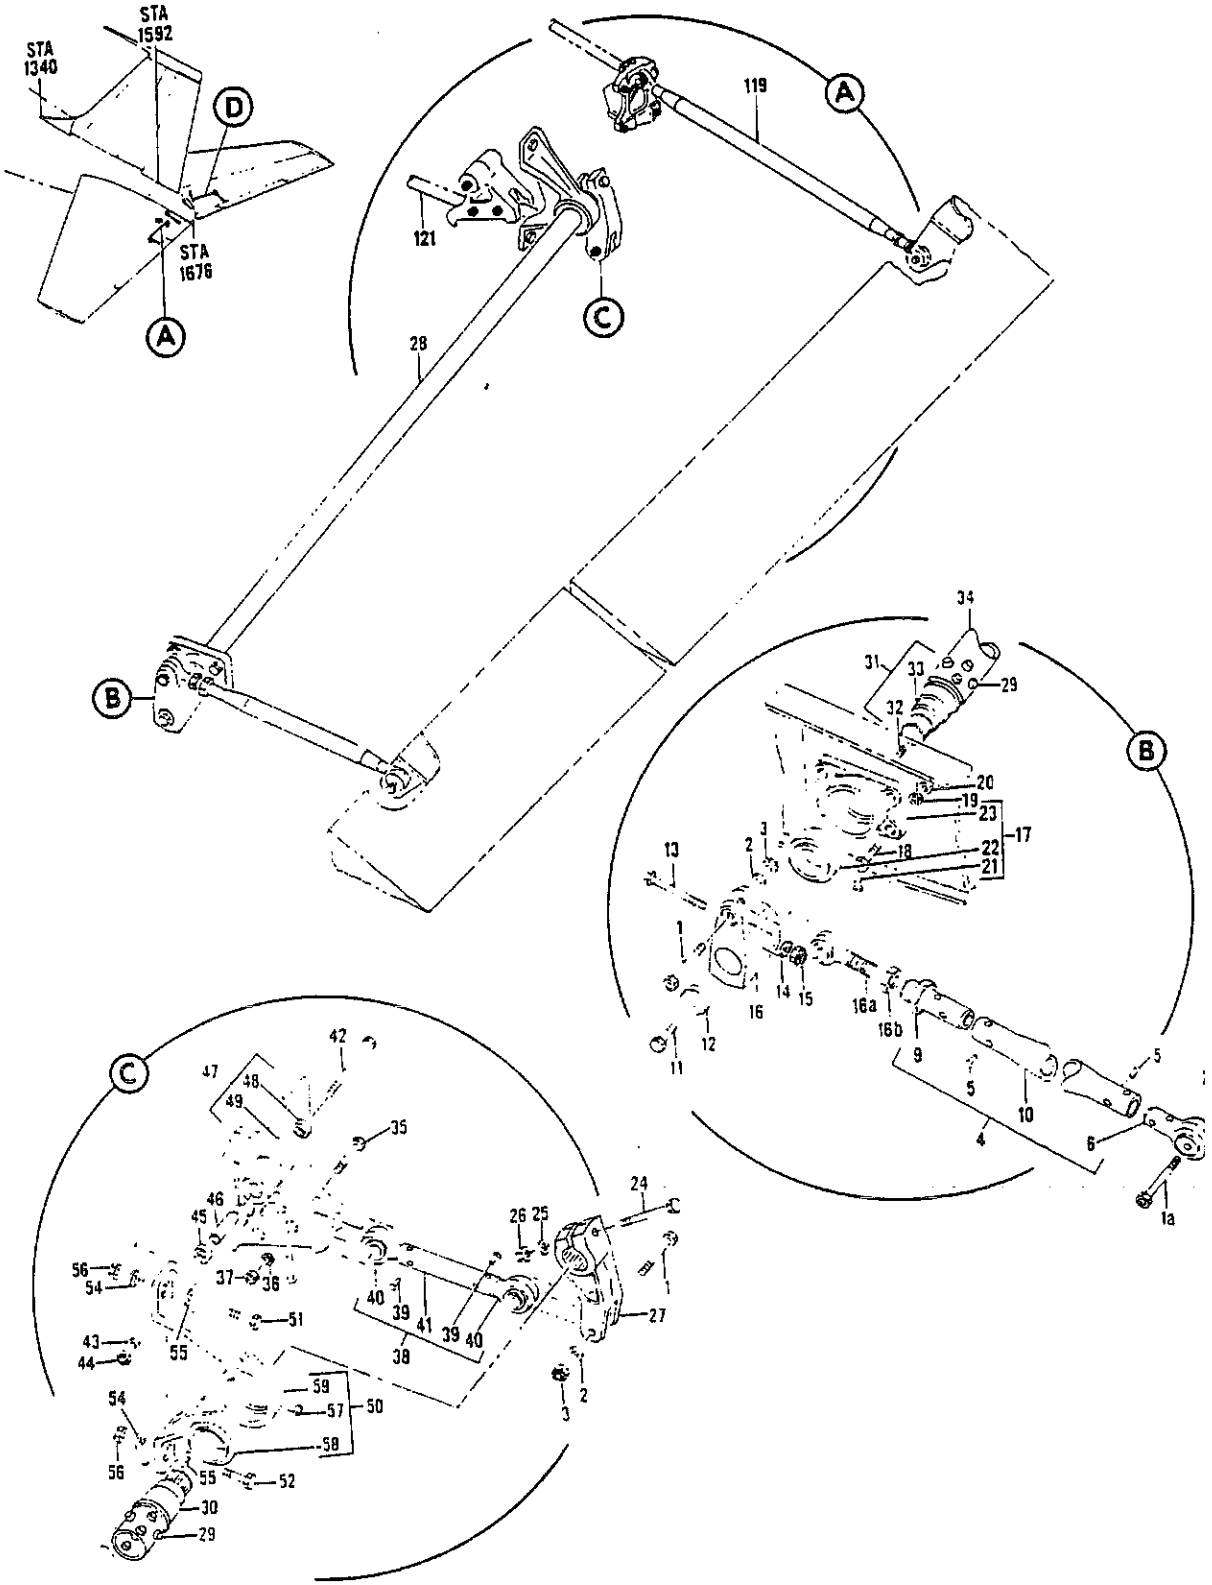


FIGURE 17. CONTROL INSTL, SECTION 84 ELEVATOR (SHEET 1)

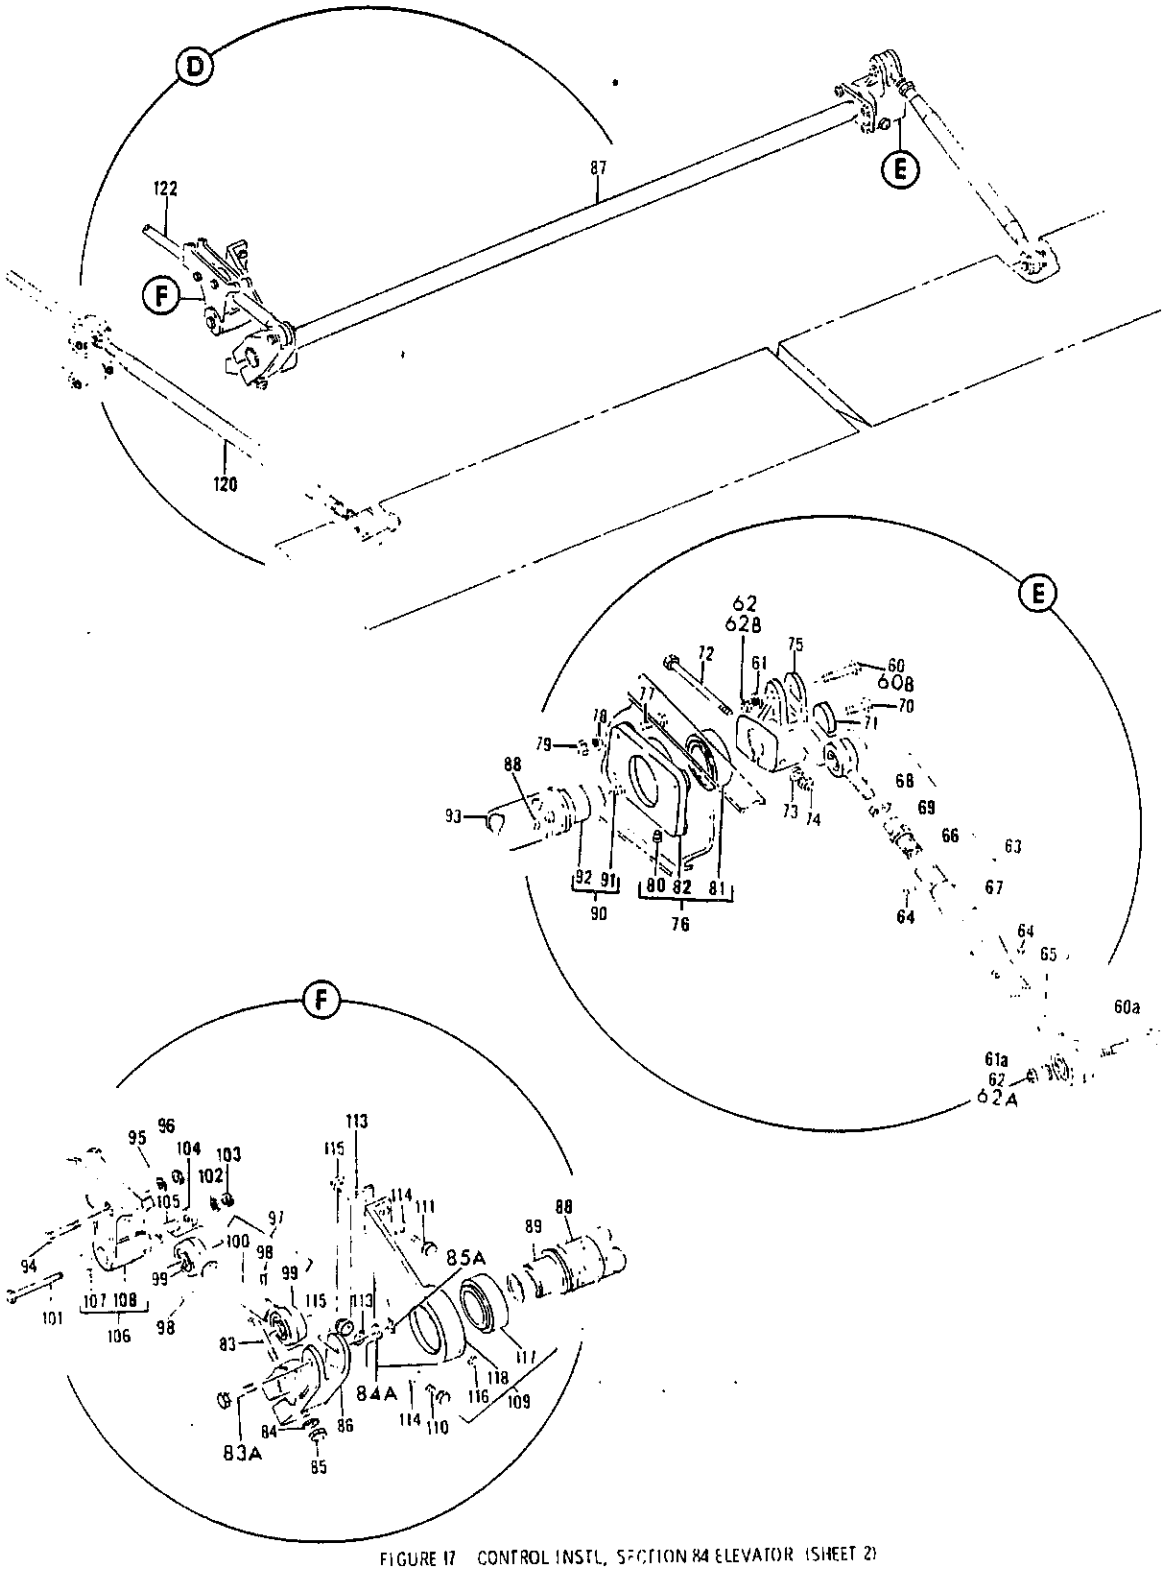


FIGURE 17 CONTROL INSTL, SECTION 84 ELEVATOR (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
17	50-8702-384	CONTROL INSTL, SECTION 84 ELEVATOR LH (SEE 27-10, FIG. 4, ITEM 44 AND 27-10, FIG. 4A, ITEM 68)		RF
	50-8702-484	CONTROL INSTL, SECTION 84 ELEVATOR RH (SEE 27-10, FIG. 4, ITEM 44 AND 27-10, FIG. 4A, ITEM 68)		RF
	65-8351	. TUBE INSTL, TAB TORQUE (FLIGHT CONTROL ONLY). . . .		1
1	NAS1105-19DW	. . BOLT.		2
1A	NAS1105-21DW	. . BOLT.		1
2	AN960D516L	. . WASHER.		2
2A	AN960D516	. . WASHER.		1
3	AN320-5	. . NUT		3
4	69-9286-4	. . ROD ASSY, ELEVATOR CONTROL.		1
5	MS20470D8	. . . RIVET		4
6	BACB10C170	. . . BEARING		1
9	6-65873-1	. . . TERMINAL, ELEVATOR CONTROL ROD END.		1
10	69-9286-5	. . . ROD, ELEVATOR CONTROL		1
11	AN6-7A	. . BOLT.		1
12	30-2242	. . WASHER, ELEVATOR CONTROL TORQUE TUBE PLAIN.		1
13	AN4-22A	. . BOLT.		1
14	AN960D416L	. . WASHER.		1
15	NAS679A4W	. . NUT		1
16	90-1468-4	. . CRANK, ELEVATOR CONTROL TORQUE TUBE		1
16A	BACB10A438	. . BEARING		1
16B	AN316-7R	. . NUT		1
17	5-97823-3	. . SUPPORT ASSY, ELEVATOR CONTROL TORQUE TUBE. ATTACHING PARTS		1
18	AN4-6A	. . BOLT.		4
19	AN960D416L	. . WASHER.		4
20	NAS679A4W	. . NUT -------*-------		4
21	NAS516-1	. . . FITTING		1
22	BACB10C153	. . . BEARING		1
23	5-97823-1	. . . HOUSING, ELEVATOR CONTROL TORQUE TUBE SUPPORT		1
24	AN4-22A	. . BOLT.		1
25	AN960D416L	. . WASHER.		1
26	NAS679A4W	. . NUT		1
27	90-2276-4	. . CRANK, ELEVATOR CONTROL TORQUE TUBE		1
28	69-9170-1	. . TUBE ASSY, ELEVATOR TAB CONTROL TORQUE LH		1
29	BACB30AU8-3	. . . BOLT.		16
30	69-9084	. . . FITTING, ELEVATOR CONTROL TORQUE TUBE		1
31	69-9129	. . . FITTING ASSY, ELEVATOR CONTROL TORQUE TUBE.		1
32	BACS13W6CN3	. . . . SLEEVE.		1
33	69-9129-1	. . . . FITTING, ELEVATOR CONTROL TORQUE TUBE		1
34	69-9172	. . . TUBE, ELEVATOR TAB CONTROL TORQUE		1
35	NAS1105-26DW	. . BOLT.		1
36	AN960D516L	. . WASHER.		1
37	AN320-5	. . NUT		1
38	90-1560	. . ROD ASSY, ELEVATOR CONTROL.		1
39	AN470D8	. . . RIVET		4
40	BACB10C170	. . . BEARING (OPTIONAL BACB10A470)		2
40	BACB10A470	. . . BEARING (OPTIONAL TO BACB10C170)		2
41	90-1560-1	. . . TUBE, ELEVATOR CONTROL ROD.		1
42	NAS1104-56DW	. . BOLT.		1
43	AN960D416	. . WASHER.		1
44	AN320-4	. . NUT		1
45	ANZ01KP4A	. . BEARING		1
46	NAS43DD4-162	. . SPACER.		1
47	5-98328-3000	. . CRANK ASSY, ELEVATOR CONTROL FOLLOW-UP RATIO.		1
48	ANZ01KP4A	. . . BEARING		1
49	5-98328-3004	. . . CRANK, ELEVATOR CONTROL FOLLOW-UP RATIO		1
50	65-14044	. . SUPPORT ASSY, ELEVATOR CONTROL TORQUE TUBE INBOARD ATTACHING PARTS		1
51	NAS1304-12	. . BOLT.		1
52	NAS1304-17	. . BOLT.		1
54	AN960D416L	. . WASHER.		2
55	BACW10T416	. . WASHER.		2
56	NAS679A4W	. . NUT -------*-------		2
57	NAS516-1	. . . FITTING		1
58	BACB10C153	. . . BEARING		1
59	65-14044-1	. . . HOUSING, ELEVATOR CONTROL TORQUE TUBE INBOARD SUPPORT		1
		. . REQUIRED PLACARDS, (SEE 11-2, FIG. 220)		

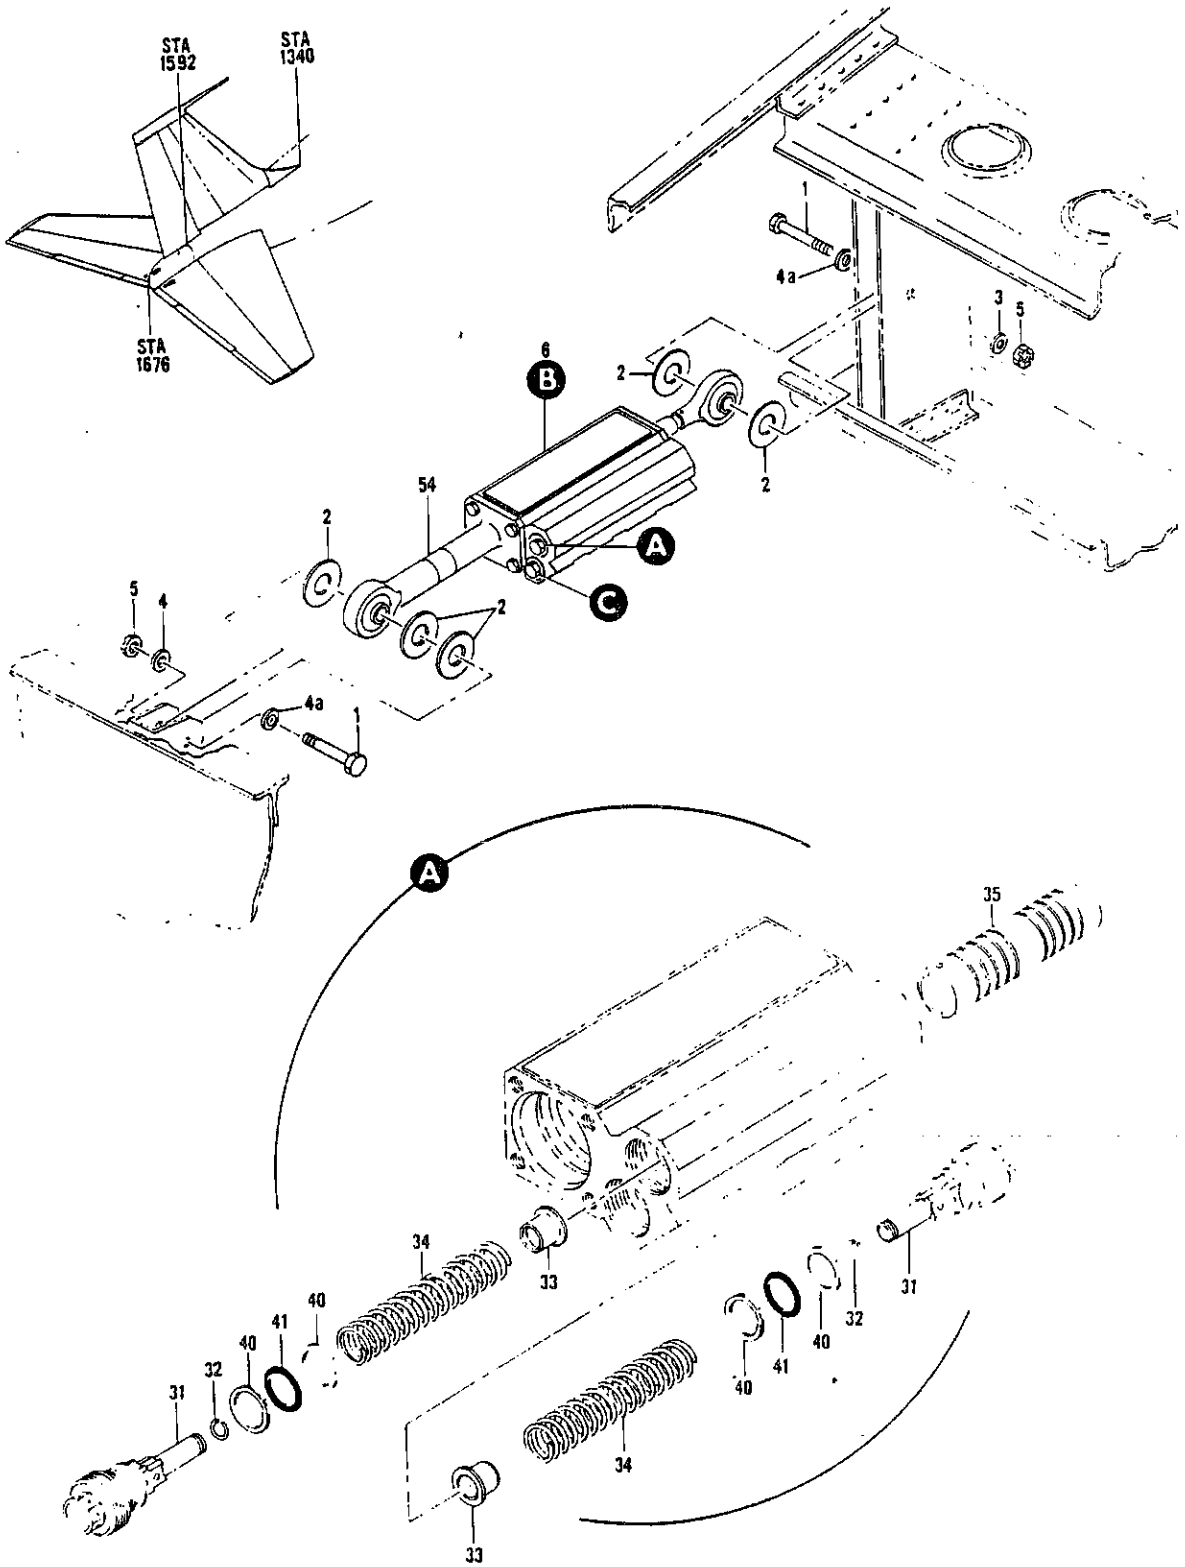
MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
17	65-11035	. TUBE INSTL, TAB TORQUE (FLIGHT CONTROL ONLY).		1
60	NAS1105-19DW	. . BOLT.		2
60A	NAS1105-21DW	. . BOLT.		1
61	AN960D516L	. . WASHER.		2
61A	AN960D516	. . WASHER.		1
62	AN320-5	. . NUT		2
63	69-9286-6	. . ROD ASSY, ELEVATOR CONTROL.		1
64	MS20470D8	. . . RIVET		4
65	BACB10C170	. . . BEARING		1
66	6-65873-1	. . . TERMINAL, ELEVATOR CONTROL ROD END.		1
67	69-9286-7	. . . ROD, ELEVATOR CONTROL		1
68	BACB10A436	. . BEARING		1
69	AN316-7R	. . NUT		1
70	AN6-7A	. . BOLT.		1
71	30-2242	. . WASHER, ELEVATOR CONTROL TORQUE TUBE PLAIN. . . .		1
72	AN4-22A	. . BOLT.		1
73	AN960D416L	. . WASHER.		1
74	NAS679A4W	. . NUT		1
75	90-1468-4	. . CRANK, ELEVATOR CONTROL TORQUE TUBE		1
76	5-97823-3	. . SUPPORT ASSY, ELEVATOR CONTROL TORQUE TUBE. . . . ATTACHING PARTS		1
77	AN4-6A	. . BOLT.		4
78	AN960D416L	. . WASHER.		4
79	NAS679A4W	. . NUT . . . . . -------*-------		4
80	NAS516-1	. . . FITTING		1
81	BACB10C153	. . . BEARING		1
82	5-97823-1	. . . HOUSING, ELEVATOR CONTROL TORQUE TUBE SUPPORT . .		1
83	AN4-22A	. . BOLT.		1
83A	NAS1105-5-19DW	. . BOLT.		1
84	AN960D416L	. . WASHER.		1
84A	AN960-D516L	. . WASHER.		1
85	NAS679A4W	. . NUT		1
85A	AN320-5	. . NUT		1
86	90-2276-4	. . CRANK, ELEVATOR CONTROL TORQUE TUBE		1
87	69-9170-2	. . TUBE ASSY, ELEVATOR TAB CONTROL TORQUE RH		1
88	BACB30AU8-3	. . . BOLT.		16
89	69-9084	. . . FITTING, ELEVATOR CONTROL TORQUE TUBE		1
90	69-9129	. . . FITTING ASSY, ELEVATOR CONTROL TORQUE TUBE. . . .		1
91	BACS13W6CN3	. . . . SLEEVE.		1
92	69-9129-1	. . . . FITTING, ELEVATOR CONTROL TORQUE TUBE		1
93	69-9172	. . . TUBE, ELEVATOR TAB CONTROL TORQUE		1
94	NAS1105-26DW	. . BOLT.		1
95	AN960D516L	. . WASHER.		1
96	AN320-5	. . NUT		1
97	90-1560	. . ROD ASSY, ELEVATOR CONTROL.		1
98	AN470D8	. . . RIVET		4
99	BACB10C170	. . . BEARING . . . . . (OPTIONAL BACB10A470)		2
99	BACB10A470	. . . BEARING . . . . . (OPTIONAL TO BACB10C170)		2
100	90-1560-1	. . . TUBE, ELEVATOR CONTROL ROD.		1
101	NAS1104-56DW	. . BOLT.		1
102	AN960D416	. . WASHER.		1
103	AN320-4	. . NUT		1
104	AN201KP4A	. . BEARING		1
105	NAS43DD4-162	. . SPACER.		1
106	5-98328-3001	. . CRANK ASSY, ELEVATOR CONTROL FOLLOW-UP RATIO. . .		1
107	AN201KP4A	. . . BEARING		1
108	5-98328-3005	. . . CRANK, ELEVATOR CONTROL FOLLOW-UP RATIO		1
109	65-14044	. . SUPPORT ASSY, ELEVATOR CONTROL TORQUE TUBE INBOARD ATTACHING PARTS		1
110	NAS1304-12	. . BOLT.		1
111	NAS1304-17	. . BOLT.		1
113	AN960D416L	. . WASHER.		2
114	BACW10T416	. . WASHER.		2
115	NAS679A4W	. . NUT . . . . . -------*-------		2
116	NAS516-1	. . . FITTING		1
117	BACB10C153	. . . BEARING		1
118	65-14044-1	. . . HOUSING, ELEVATOR CONTROL TORQUE TUBE INBOARD SUPPORT		1
		. . REQUIRED PLACARDS, (SEE 11-2, FIG. 220)		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
17 119	65-42042-1	. BELLCRANK INSTL, ELEVATOR ANTI-BALANCE TAB (LH ONLY) (SEE FIG. 26)		1
120	65-42042-2	. BELLCRANK INSTL, ELEVATOR ANTI-BALANCE TAB (RH ONLY) (SEE FIG. 26)		1
121		CRANK INSTL, STABILIZER ELEVATOR CONTROL LH (FOR REF. . SEE FIG. 15)		RF
122		CRANK INSTL, STABILIZER ELEVATOR CONTROL RH (FOR REF. . SEE FIG. 16)		RF

MISSING ITEM NUMBERS ARE NOT APPLICABLE


STA 1592
STA 1340
STA 1676
1
4a
3
5
6
B
2
54
A
C
4
FIGURE 18. SNUBBER INSTL, ELEVATOR (SHEET 1)

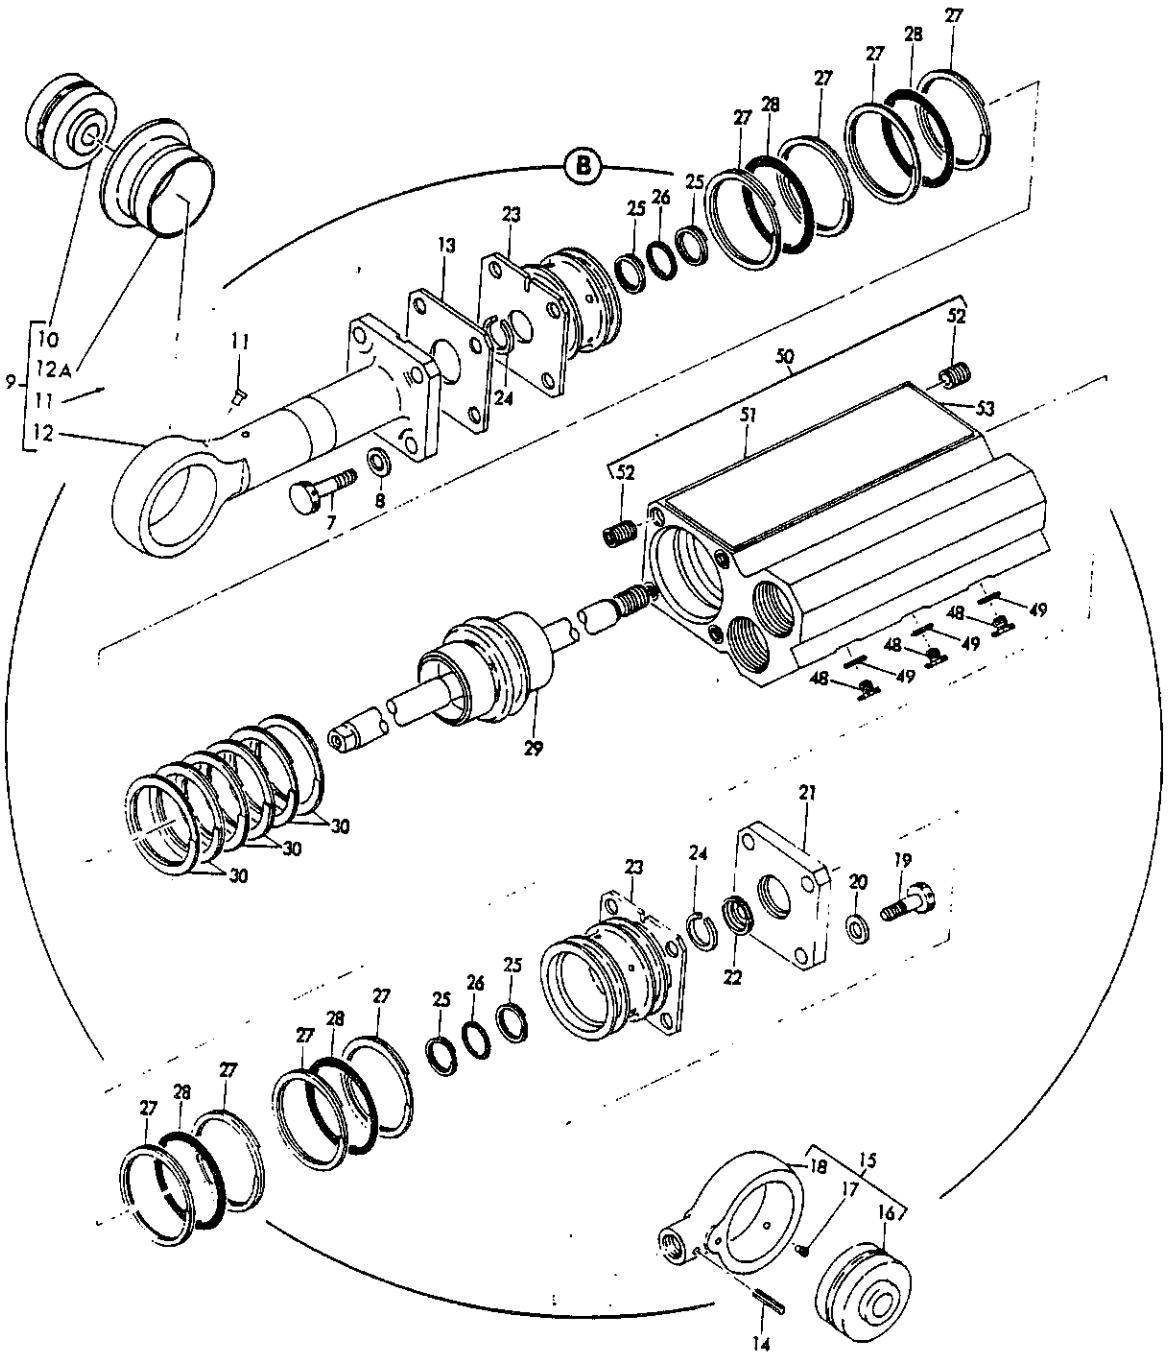


FIGURE 18. SNUBBER INSTL, ELEVATOR (SHEET 2)

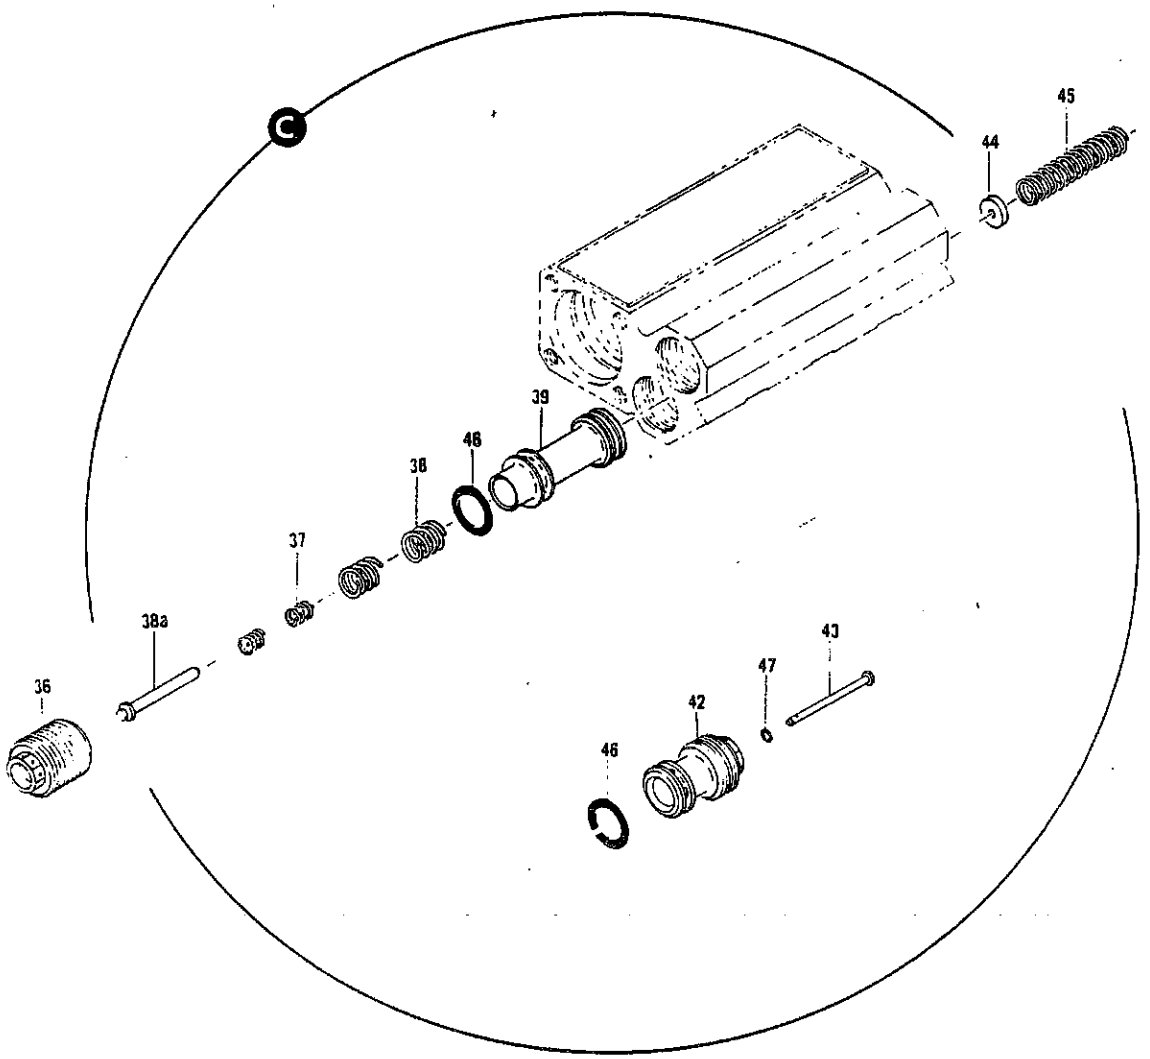


FIGURE 18. SNUBBER INSTL, ELEVATOR (SHEET 3)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
18	65-5988-1	SNUBBER INSTL, ELEVATOR (LH) (SEE 55-2, FIG. 3, ITEM. 41A AND 55-2, FIG. 4, ITEM 38)		RF
	65-5988-2	SNUBBER INSTL, ELEVATOR (RH) (SEE 55-2, FIG. 3, ITEM. 41A AND 55-2, FIG. 4, ITEM 38)		RF
1	NAS1108-23DW	. BOLT.		2
2	30-1491	. SPACER, ELEVATOR SNUBBER ATTACHMENT		5
3	AN960PD816	. WASHER.		1
4	AN960PD816L	. WASHER.		1
4A	MS20002C8	. WASHER.		2
5	AN320-8	. NUT		2
6	65-5706-2	. SNUBBER ASSY, ELEVATOR GUST		1
7	NAS1305-9HW	. . BOLT.		4
8	AN960-516	. . WASHER.		4
9	65-5951	. . END ASSY, ELEVATOR GUST SNUBBER TERMINAL HEAD		1
10	BACB10C93	. . . BEARING		1
11	NAS516-1	. . . FITTING		1
12	65-5951-1	. . . TERMINAL, ELEVATOR GUST SNUBBER HEAD END.		1
13	6-84953	. . SHIM, SNUBBER AILERON CONTROL SURFACE		1
14	MS16562-18	. . PIN		1
15	9-67596	. . ROD END ASSY, CONTROL SURFACE SNUBBER TERMINAL. (OPTIONAL BACB10C175)		1
16	BACB10C93	. . . BEARING, (OPTIONAL BACB10C93H).		1
17	NAS516-1	. . . FITTING		1
18	9-67596-1	. . . TERMINAL, CONTROL SURFACE SNUBBER ROD END		1
19	NAS1305-7HW	. . BOLT.		4
20	AN960-516	. . WASHER.		4
21	66-3993	. . CAP, ELEVATOR GUST SNUBBER HOUSING.		1
22	BACS34A3	. . SCRAPER		1
23	65-5699-1	. . BEARING, ELEVATOR GUST SNUBBER.		2
24	MS28932C02-00	. . FELT STRIP.		4
25	MS28782-12	. . RING.		4
26	AN6227-12	. . PACKING		2
27	MS28783-2	. . RING.		8
28	AN6230-2	. . GASKET.		4
29	65-5646	. . PISTON, ELEVATOR GUST SNUBBER		1
30	MS28782-29	. . RING.		6
31	69-4192	. . RETAINER, ELEVATOR GUST SNUBBER SPRING.		2
32	63-1513	. . RING, AILERON CONTROL SURFACE SNUBBER RETAINING		2
33	66-2418	. . RETAINER, AILERON CONTROL SURFACE SNUBBER SPRING.		2
34	63-2100	. . SPRING, ELEVATOR SNUBBER COMPRESSION.		2
36	66-3836-1	. . PLUG, ELEVATOR GUST SNUBBER RESERVOIR		1
37	3-94768	. . SPRING, AILERON SNUBBER COMPRESSION		1
38	3-94766	. . SPRING, AILERON SNUBBER COMPRESSION		1
38A	66-12853-1	. . GUIDE, SNUBBER RESERVOIR SPRING		1
39	9-65151	. . PISTON, AILERON GUST DAMPER RESERVOIR		1
40	MS28782-15	. . RING.		4
41	AN6227-15	. . PACKING		2
42	69-4116	. . PLUG, ELEVATOR GUST SNUBBER		1
43	66-3966	. . INDICATOR, ELEVATOR GUST SNUBBER FLUID VOLUMNE.		1
44	6-84554	. . RETAINER, CONTROL SURFACE SNUBBER INDICATOR SPRING		1
45	63-2099	. . SPRING, ELEVATOR SNUBBER COMPRESSION.		1
46	AN6227-15	. . PACKING		2
47	AN6227-1	. . PACKING		1
48	AN814L2	. . PLUG.		3
49	MS28778-2	. . PACKING		3
50	65-5473-2	. . HOUSING ASSY, SNUBBER ELEVATOR CONTROL SURFACE. (USED ON 65-5706-1 AND -2)		1
51	65-5473-3	. . . HOUSING, SNUBBER ELEVATOR CONTROL SURFACE (USED ON 65-5473-2)		1
52	BACS13P5C4	. . . SLEEVE.		8
53	BACN12A61-3HD	. . NAMEPLATE		1
		ATTACHING PARTS		
	MS21318-7	. . SCREW		4
		-------*-------		
54	BACN12M41-1DK	. NAMEPLATE		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

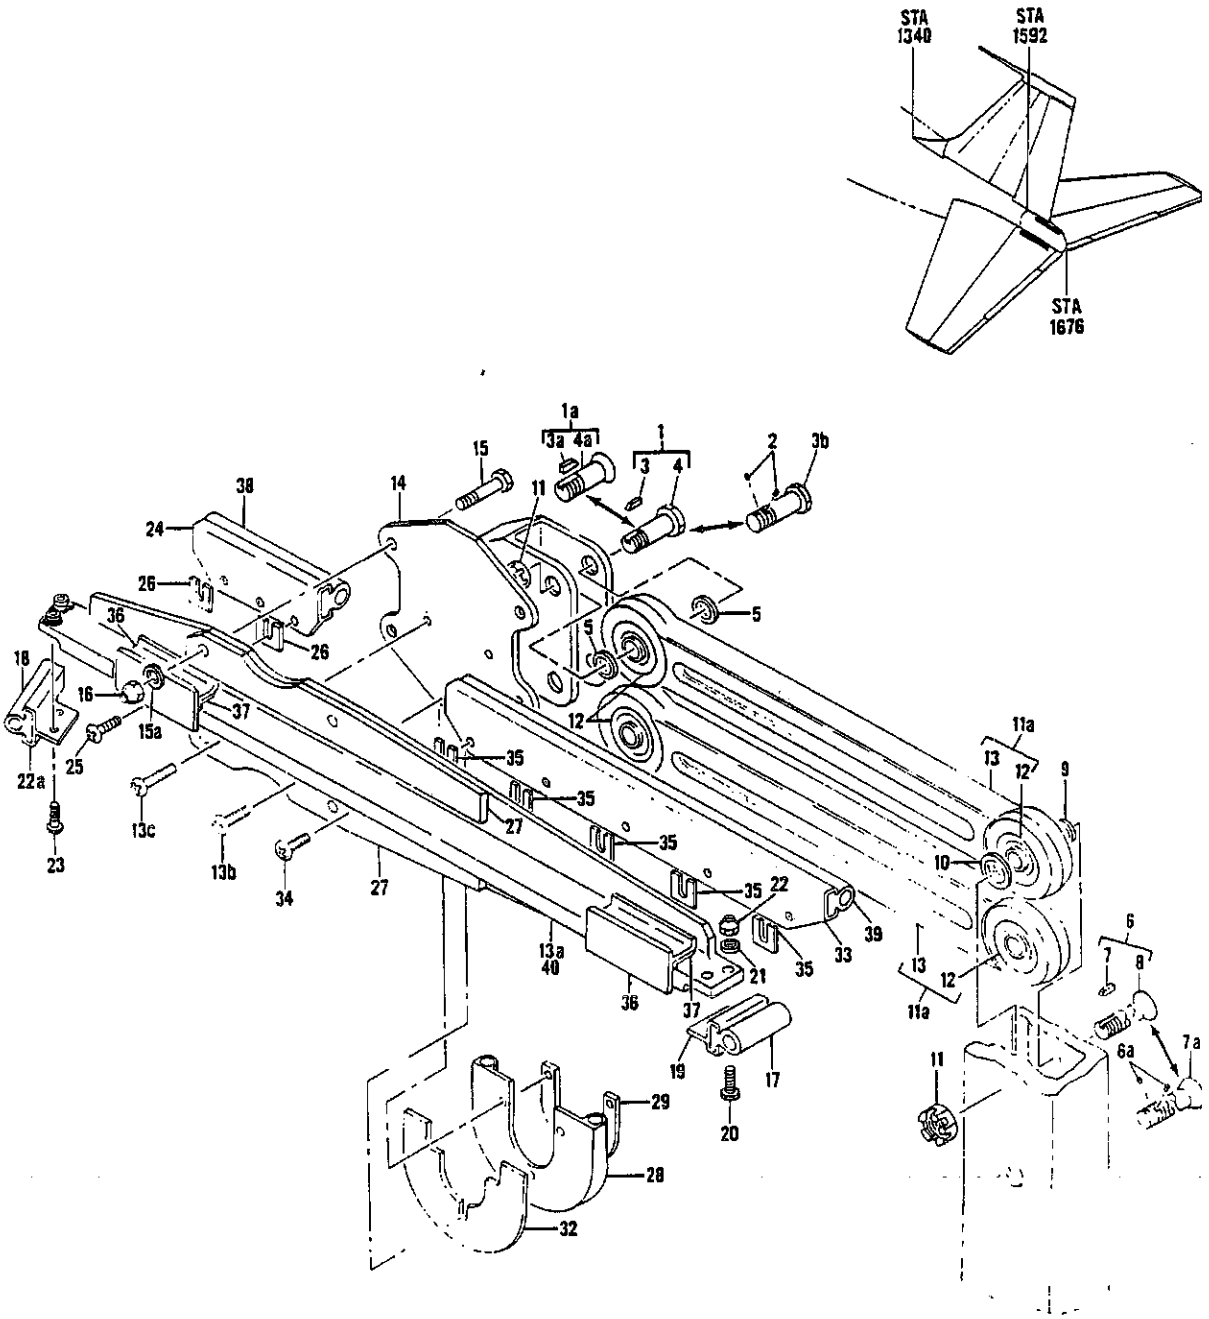



FIGURE 19. MECHANISM INSTL, ELEVATOR STATION 0 TO 10.26 BALANCE PANEL SUPPORT

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
19	65-5650-3001	MECHANISM INSTL, ELEVATOR STATION 0 TO 10.26 BALANCE. PANEL SUPPORT (LH) (SEE 55-2, FIG. 3, ITEM 44 AND 55-2, FIG. 4, ITEM 41)		RF
	65-5650-3002	MECHANISM INSTL, ELEVATOR STATION 0 TO 10.26 BALANCE. PANEL SUPPORT (RH) (SEE 55-2, FIG. 3, ITEM 44 AND 55-2, FIG. 4, ITEM 41)		RF
1	90-8457-3	. BOLT ASSY, RUDDER		2
2	90-8457-801	. . INSERT. (OPTIONAL 90-8457-2)		2
2	90-8457-2	. . INSERT. (OPTIONAL TO 90-8457-801)		2
3	90-8457-2	. . INSERT. (OPTIONAL 90-8457-801)		1
3	90-8457-801	. . INSERT. (OPTIONAL TO 90-8457-2)		1
3B	90-8457-800	. . BOLT. (OPTIONAL 90-8457-4)		1
3B	90-8457-4	. . BOLT. (OPTIONAL TO 90-8457-800)		1
4	90-8457-4	. . BOLT. (OPTIONAL 90-8457-800)		1
4	90-8457-800	. . BOLT. (OPTIONAL TO 90-8457-4)		1
5	BACW10P195S	. WASHER.		AR
6	90-8452	. BOLT ASSY, RUDDER AND ELEVATOR BALANCE.		2
6A	90-8452-801	. . INSERT, RUDDER AND ELEVATOR BALANCE BOLT (OPTIONAL 90-8452-2)		2
7	90-8452-2	. . INSERT, RUDDER AND ELEVATOR BALANCE BOLT (OPTIONAL TO 90-8452-801)		1
7A	90-8452-800	. . BOLT, RUDDER AND ELEVATOR BALANCE (OPTIONAL 90-8452-1)		1
8	90-8452-1	. . BOLT, RUDDER AND ELEVATOR BALANCE (OPTIONAL TO. 90-8452-800)		1
9	AN960D816L	. WASHER.		AR
10	30-3643	. WASHER, ELEVATOR AND RUDDER MECHANISM		2
11	AN320-8	. NUT		4
11A	5-97659-2	. LINK ASSY, ELEVATOR AND RUDDER BALANCE PANEL SUPPORT		2
12	BACB10C163	. . BEARING		2
13	5-97659-5	. . LINK, ELEVATOR AND RUDDER BALANCE PANEL SUPPORT		1
13A	65-5650-3005	. TRACK ASSY, ELEVATOR STATION 0 TO 10.26 ELEVATOR. BALANCE PANEL SUPPORT (LH ONLY)		1
13A	65-5650-3006	. TRACK ASSY, ELEVATOR STATION 0 TO 10.26 ELEVATOR. BALANCE PANEL SUPPORT (RH ONLY)		1
13B	NAS603-11	. . SCREW		1
13C	NAS603-15	. . SCREW		2
14	65-25234-1	. . FITTING, ELEVATOR AND RUDDER BALANCE PANEL LINK ADAPTER		1
		ATTACHING PARTS		
15	AN4-9A	. . BOLT.		4
15A	AN960D416	. . WASHER.		4
16	NAS679A4W	. . NUT		4
		-------*-------		
17	60-6170-2	. . SEAL, RUDDER AND ELEVATOR BALANCE TRACK AERODYNAMIC STRIP (ALTERED FROM BAC SPEC NO. 10-2737-13)		1
18	60-6170-3	. . SEAL, RUDDER AND ELEVATOR BALANCE TRACK AERODYNAMIC STRIP (ALTERED FROM BAC SPEC NO. 10-2737-16)		1
19	90-3355-33	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK SEAL (LH ONLY)		1
19	90-3355-34	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK SEAL (RH ONLY)		1
		ATTACHING PARTS		
20	AN3-6A	. . BOLT.		2
21	AN960D10	. . WASHER.		2
22	NAS679A3W	. . NUT		2
		-------*-------		
22A	90-3355-35	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK SEAL (LH ONLY)		1
22A	90-3355-36	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK SEAL (RH ONLY)		1
		ATTACHING PARTS		
23	NAS603-10	. . SCREW		2
		-------*-------		
24	69-6329-3	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. (LH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
19 24	69-6329-4	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. . (RH ONLY)		1
		ATTACHING PARTS		
25	NAS603-10	. . SCREW		3
		-------*-------		
26	BACS40FD1	. . SHIM.		2
27	90-2923-2	. . PLATE, ELEVATOR REINFORCING BALANCE PANEL TRACK . .		2
28	10-2737-134	. . RING, FABRIC COVERED AERODYNAMIC SEAL		1
29	90-3355-1	. . RETAINER ASSY, ELEVATOR AND RUDDER BALANCE PANEL. . TRACK SEAL		1
32	66-14405-1	. . SHIM, ELEVATOR AND RUDDER BALANCE PANEL TRACK SEAL		1
33	69-6329-1	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. . (LH ONLY)		1
33	69-6329-2	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. . (RH ONLY)		1
		ATTACHING PARTS		
34	NAS603-10	. . SCREW		5
		-------*-------		
35	BACS40FD1	. . SHIM.		5
36	60-2083-1	. . PLATE, RUDDER AND ELEVATOR BALANCE PANEL TRACK. . . BEARING		2
37	BACS40A12-45	. . SHIM.		AR
38	10-2737-1040	. . SEAL, FABRIC COVERED AERODYNAMIC STRIP.		1
39	10-2737-1041	. . SEAL, FABRIC COVERED AERODYNAMIC STRIP.		1
40	50-1597-3001	. . TRACK, BALANCE PANEL AND RUDDER (LH ONLY)		1
40	50-1597-3002	. . TRACK, BALANCE PANEL AND RUDDER (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

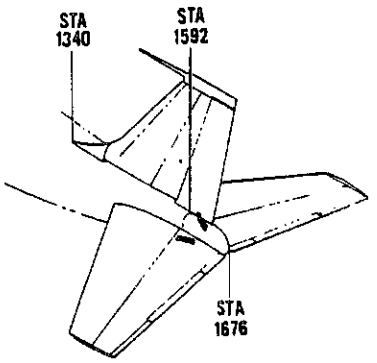

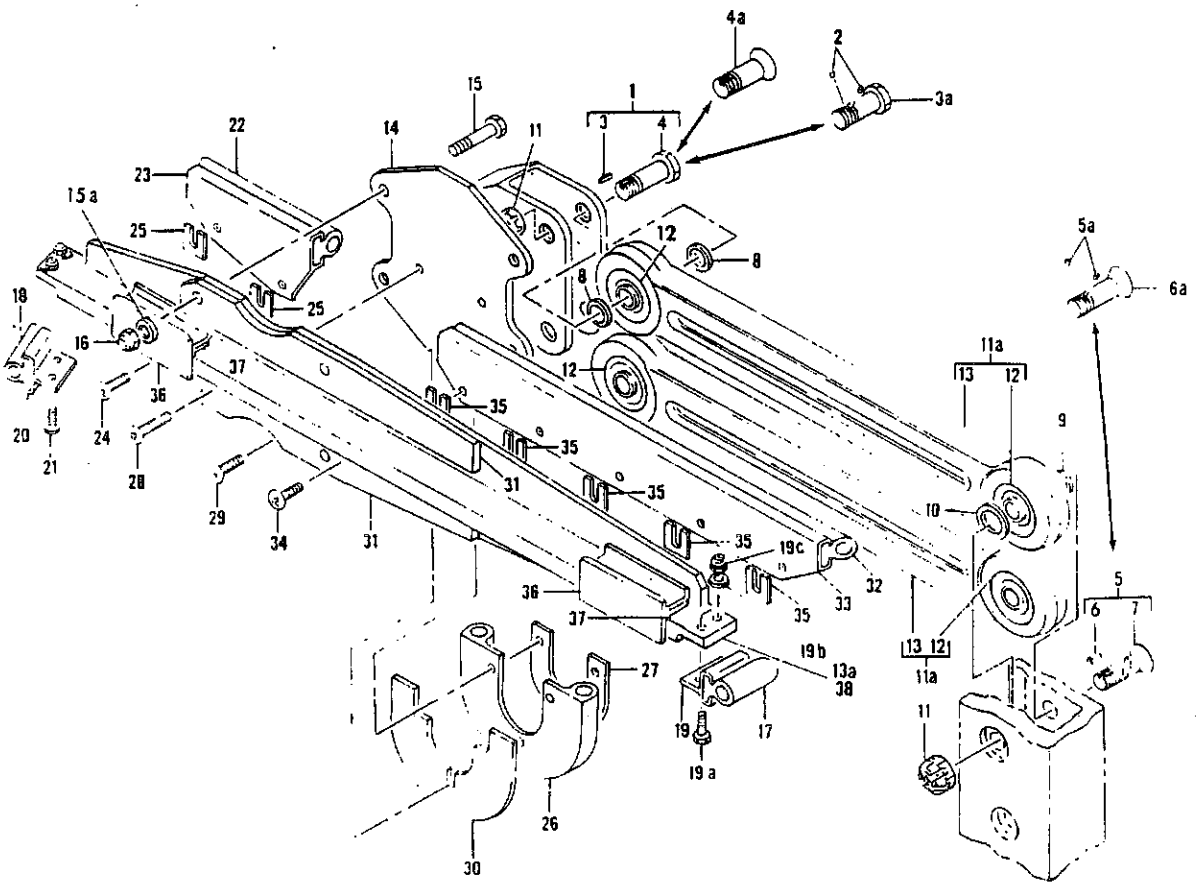


FIGURE 20. MECHANISM INSTL, ELEVATOR STATION 25 58 ELEVATOR BALANCE PANEL SUPPORT

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
20	65-5650-1	MECHANISM INSTL, ELEVATOR STATION 25.58 BALANCE PANEL . SUPPORT (LH) (SEE 55-2, FIG. 3, ITEM 45 AND 55-2, FIG. 4, ITEM 42)		RF
	65-5650-2	MECHANISM INSTL, ELEVATOR STATION 25.58 BALANCE PANEL . SUPPORT (RH) (SEE 55-2, FIG. 3, ITEM 45 AND 55-2, FIG. 4, ITEM 42)		RF
1	90-8457-3	. BOLT ASSY, RUDDER AND ELEVATOR BALANCE.		2
2	90-8457-801	. . INSERT, RUDDER AND ELEVATOR BALANCE BOLT (OPTIONAL 90-8457-2)		2
3	90-8457-2	. . INSERT, RUDDER AND ELEVATOR BALANCE BOLT (OPTIONAL TO 90-8457-801)		1
3A	90-8457-800	. . BOLT, RUDDER AND ELEVATOR BALANCE (OPTIONAL . . . . 90-8457-4)		1
4	90-8457-4	. . BOLT, RUDDER AND ELEVATOR BALANCE (OPTIONAL TO. . . 90-8457-800)		1
5	90-8452	. BOLT ASSY, RUDDER AND ELEVATOR BALANCE.		2
5A	90-8452-801	. . INSERT, RUDDER AND ELEVATOR BALANCE BOLT (OPTIONAL 90-8452-2)		2
6	90-8452-2	. . INSERT, RUDDER AND ELEVATOR BALANCE BOLT (OPTIONAL TO 90-8452-801)		1
6A	90-8452-800	. . BOLT, RUDDER AND ELEVATOR BALANCE (OPTIONAL . . . . 90-8452-1)		1
7	90-8452-1	. . BOLT, RUDDER AND ELEVATOR BALANCE (OPTIONAL TO. . . 90-8452-800)		1
8	BACW10P195S	. WASHER.		AR
9	AN960D816L	. WASHER.		AR
10	30-3643	. WASHER, ELEVATOR AND RUDDER MECHANISM		2
11	AN320-8	. NUT		4
11A	5-97659-2	. LINK ASSY, ELEVATOR AND RUDDER BALANCE PANEL SUPPORT		2
12	BACB10C163	. . BEARING		2
13	5-97659-5	. . LINK, ELEVATOR AND RUDDER BALANCE PANEL SUPPORT . .		1
13A	65-5650-21	. TRACK ASSY, ELEVATOR STATION 25.58 BALANCE PANEL. . . SUPPORT (LH ONLY)		1
13A	65-5650-22	. TRACK ASSY, ELEVATOR STATION 25.58 BALANCE PANEL. . . SUPPORT (RH ONLY)		1
14	65-25234-1	. . FITTING, ELEVATOR AND RUDDER BALANCE PANEL LINK . . ADAPTER (USED ON 65-5650-21 AND -22)		1
		ATTACHING PARTS		
15	AN4-9A	. . BOLT.		4
15A	AN960D416	. . WASHER.		4
16	NAS679A4W	. . NUT		4
		-------*-------		
17	60-6170-2	. . SEAL, RUDDER AND ELEVATOR BALANCE TRACK AERODYNAMIC (ALTERED FROM BAC SPEC NO. 10-2737-13)		1
18	60-6170-3	. . SEAL, RUDDER AND ELEVATOR BALANCE TRACK AERODYNAMIC (ALTERED FROM BAC SPEC NO. 10-2737-16)		1
19	90-3355-33	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK . SEAL (LH ONLY)		1
19	90-3355-34	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK . SEAL (RH ONLY)		1
		ATTACHING PARTS		
19A	AN3-6A	. . BOLT.		2
19B	AN960D10	. . WASHER.		2
19C	NAS679A3W	. . NUT		2
		-------*-------		
20	90-3355-35	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK . SEAL (LH ONLY)		1
20	90-3355-36	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK . SEAL (RH ONLY)		1
		ATTACHING PARTS		
21	NAS603-10	. . SCREW		2
		-------*-------		
22	10-2737-126	. . SEAL, FABRIC COVERED AERODYNAMIC STRIP.		1
23	69-4299-9	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. . (LH ONLY)		1
23	69-4299-10	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. . (RH ONLY)		1
		ATTACHING PARTS		
24	NAS603-10	. . SCREW		2
25	BACS40FD1	. . SHIM.		2
		-------*-------		
26	10-2737-134	. . SEAL, FABRIC COVERED AERODYNAMIC RING		1
27	90-3355-1	. . RETAINER ASSY, ELEVATOR AND RUDDER BALANCE PANEL. . TRACK SEAL		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
20		ATTACHING PARTS		
28	NAS603-14	. . SCREW		2
29	NAS603-10	. . SCREW		1
		-------*-------		
30	66-14405-1	. . SHIM, ELEVATOR AND RUDDER BALANCE PANEL TRACK RING SEAL		1
31	90-2923-2	. . PLATE, ELEVATOR BALANCE PANEL TRACK REINFORCING . .		2
32	10-2737-127	. . SEAL, FABRIC COVERED AERODYNAMIC STRIP.		1
33	90-8413-1	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. . (LH ONLY)		1
33	90-8413-2	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. . (RH ONLY)		1
		ATTACHING PARTS		
34	NAS603-10	. . SCREW		5
35	BACS40FD1	. . SHIM.		5
		-------*-------		
36	60-2083-1	. . PLATE, RUDDER AND ELEVATOR BALANCE PANEL TRACK. . . BEARING		2
37	BACS40A12-45	. . SHIM.		AR
38	50-1597-1	. . TRACK, ELEVATOR STATION 25.58 BALANCE PANEL (LH . . ONLY)		1
38	50-1597-2	. . TRACK, ELEVATOR STATION 25.58 BALANCE PANEL (RH . . ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

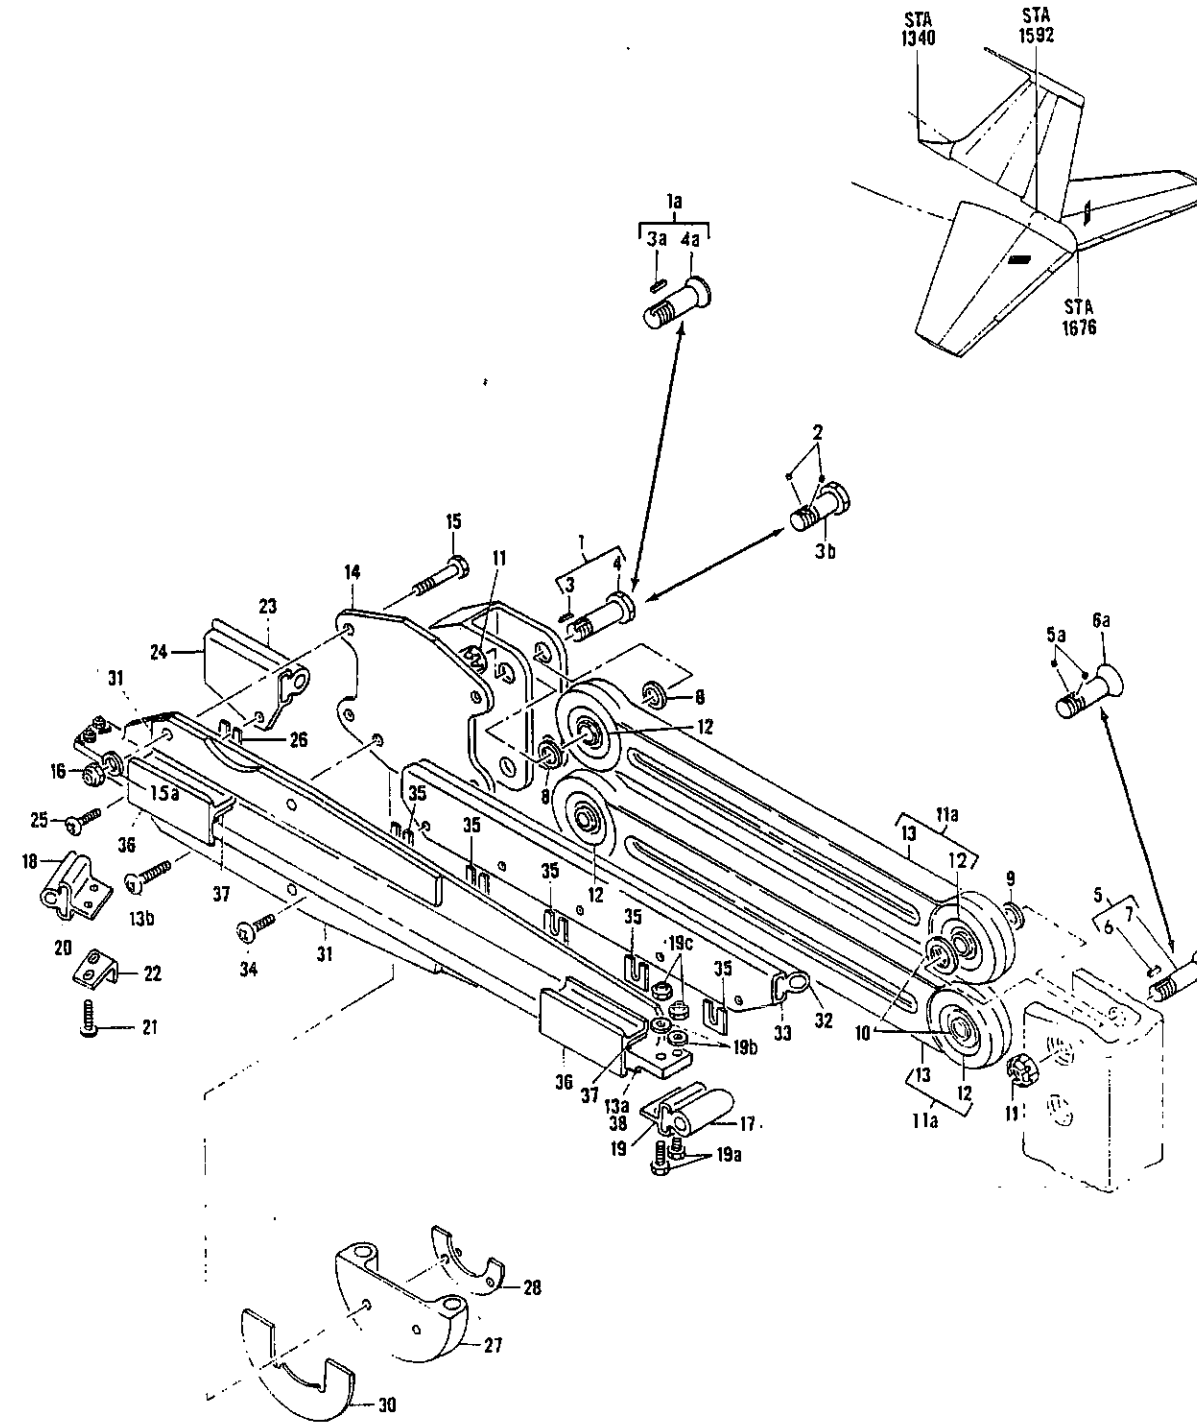



FIGURE 21. MECHANISM INSTL, ELEVATOR STATION 70.38 BALANCE PANEL SUPPORT

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
21	65-5650-3	MECHANISM INSTL, ELEVATOR STATION 70.38 BALANCE PANEL SUPPORT (LH) (SEE 55-2, FIG. 3, ITEM 46 AND 55-2, FIG. 4, ITEM 43)		RF
	65-5650-4	MECHANISM INSTL, ELEVATOR STATION 70.38 BALANCE PANEL SUPPORT (RH) (SEE 55-2, FIG. 3, ITEM 46 AND 55-2, FIG. 4, ITEM 43)		RF
1	90-8457-3	. BOLT ASSY, RUDDER AND ELEVATOR BALANCE.		2
2	90-8457-801	. . INSERT, RUDDER AND ELEVATOR BALANCE BOLT (OPTIONAL 90-8457-2)		2
3	90-8457-2	. . INSERT, RUDDER AND ELEVATOR BALANCE BOLT (OPTIONAL TO 90-8457-801)		1
3B	90-8457-800	. . BOLT, (OPTIONAL 90-8457-4)		1
4	90-8457-4	. . BOLT, (OPTIONAL TO 90-8457-800)		1
5	90-8452	. BOLT ASSY, RUDDER AND ELEVATOR BALANCE.		2
5A	90-8452-801	. . INSERT, RUDDER AND ELEVATOR BALANCE BOLT (OPTIONAL 90-8452-2)		2
6	90-8452-2	. . INSERT, RUDDER AND ELEVATOR BALANCE BOLT (OPTIONAL TO 90-8452-801)		1
6A	90-8452-800	. . BOLT, RUDDER AND ELEVATOR BALANCE (OPTIONAL 90-8452-1)		1
7	90-8452-1	. . BOLT, RUDDER AND ELEVATOR BALANCE (OPTIONAL TO. 90-8452-800)		1
8	BACW10P195S	. WASHER.		AR
9	AN960D816L	. WASHER.		AR
10	30-3643	. WASHER, ELEVATOR AND RUDDER MECHANISM		2
11	AN320-8	. NUT		4
11A	5-97659-1	. LINK ASSY, ELEVATOR AND RUDDER BALANCE PANEL SUPPORT		2
12	BACB10C163	. . BEARING		2
13	5-97659-4	. . LINK, ELEVATOR AND RUDDER BALANCE PANEL SUPPORT		1
13A	65-5650-23	. TRACK ASSY, ELEVATOR STATION 70.38 BALANCE PANEL. SUPPORT (LH ONLY)		1
13A	65-5650-24	. TRACK ASSY, ELEVATOR STATION 70.38 BALANCE PANEL. SUPPORT (RH ONLY)		1
13B	NAS603-10	. . SCREW		2
14	65-25234-2	. . FITTING, ELEVATOR AND RUDDER BALANCE PANEL LINK ADAPTER (USED ON 65-5650-23 AND 24)		1
		ATTACHING PARTS		
15	AN4-9A	. . BOLT.		4
15A	AN960D416	. . WASHER.		4
16	NAS679A4W	. . NUT		4
		-------*-------		
17	60-6170-2	. . SEAL, RUDDER AND ELEVATOR BALANCE TRACK AERODYNAMIC (ALTERED FROM BAC SPEC NO. 10-2737-13)		1
18	60-6170-3	. . SEAL, RUDDER AND ELEVATOR BALANCE TRACK AERODYNAMIC (ALTERED FROM BAC SPEC NO. 10-2737-16)		1
19	90-3355-33	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK SEAL (LH ONLY)		1
19	90-3355-34	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK SEAL (RH ONLY)		1
		ATTACHING PARTS		
19A	AN3-6A	. . BOLT.		2
19B	AN960D10	. . WASHER.		2
19C	NAS679A3W	. . NUT		2
		-------*-------		
20	90-3355-35	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK SEAL (LH ONLY)		1
20	90-3355-36	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK SEAL (RH ONLY)		1
		ATTACHING PARTS		
21	NAS603-10	. . SCREW		2
		-------*-------		
22	66-3957-1	. . CLIP, ELEVATOR BALANCE TRACK SEAL RETAINER (LH. ONLY)		1
22	66-3957-2	. . CLIP, ELEVATOR BALANCE TRACK SEAL RETAINER (RH. ONLY)		1
23	10-2737-125	. . SEAL, FABRIC COVERED AERODYNAMIC STRIP.		1
24	69-4299-7	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. (LH ONLY)		1
24	69-4299-8	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. (RH ONLY)		1
		ATTACHING PARTS		
25	NAS603-10	. . SCREW		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
21 26	BACS40FD1	. . SHIM.		1
27	10-2737-133	. . SEAL, FABRIC COVERED AERODYNAMIC RING		1
28	90-3355-2	. . RETAINER ASSY, ELEVATOR AND RUDDER BALANCE PANEL. . TRACK SEAL		1
30	66-14405-2	. . SHIM, ELEVATOR AND RUDDER BALANCE PANEL TRACK RING SEAL		1
31	90-2923-2	. . PLATE, ELEVATOR BALANCE PANEL TRACK REINFORCING . .		2
32	10-2737-128	. . SEAL, FABRIC COVERED AERODYNAMIC STRIP.		1
33	90-8413-1	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. . (LH ONLY)		1
33	90-8413-2	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. . (RH ONLY)		1
		ATTACHING PARTS		
34	NAS603-10	. . SCREW		5
35	BACS40FD1	. . SHIM.		5
36	60-2083-1	. . PLATE, RUDDER AND ELEVATOR BALANCE PANEL TRACK. . . BEARING		2
37	BACS40A12-45	. . SHIM.		AR
38	50-1597-3	. . TRACK, ELEVATOR STATION 70.38 BALANCE PANEL (LH . . ONLY)		1
38	50-1597-4	. . TRACK, ELEVATOR STATION 70.38 BALANCE PANEL (RH . . ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

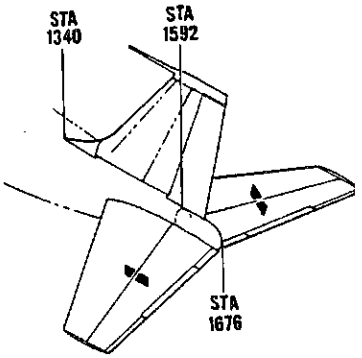

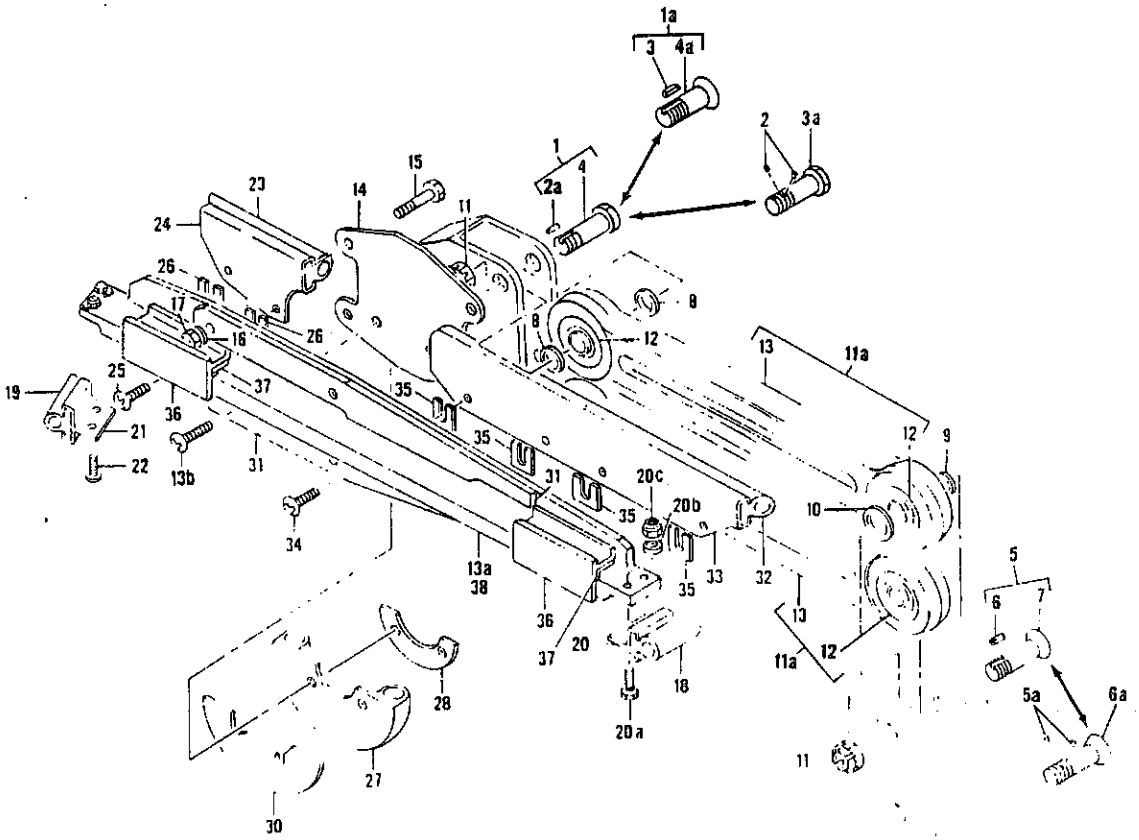



FIGURE 22. MECHANISM INSTL, ELEVATOR STATION 115.18 ELEVATOR BALANCE PANEL SUPPORT

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
22	65-5650-5	MECHANISM INSTL, ELEVATOR STATION 115.18 BALANCE PANEL SUPPORT (LH) (SEE 55-2, FIG. 3, ITEM 47 AND 55-2, FIG. 4, ITEM 44)		RF
	65-5650-6	MECHANISM INSTL, ELEVATOR STATION 115.18 BALANCE PANEL SUPPORT (RH) (SEE 55-2, FIG. 3, ITEM 47, AND 55-2, FIG. 4, ITEM 44)		RF
1	90-8457-3	. BOLT ASSY, RUDDER AND ELEVATOR BALANCE.		2
2	90-8457-801	. . INSERT, RUDDER AND ELEVATOR BALANCE BOLT (OPTIONAL 90-8457-2)		2
2A	90-8457-2	. . INSERT, RUDDER AND ELEVATOR BALANCE BOLT (OPTIONAL TO 90-8457-801)		1
3A	90-8457-800	. . BOLT, RUDDER AND ELEVATOR BALANCE (OPTIONAL . . . . 90-8457-4)		1
4	90-8457-4	. . BOLT, RUDDER AND ELEVATOR BALANCE (OPTIONAL TO. . . 90-8457-800)		1
5	90-8452	. BOLT ASSY, RUDDER AND ELEVATOR BALANCE.		2
5A	90-8452-801	. . INSERT, RUDDER AND ELEVATOR BALANCE BOLT (OPTIONAL 90-8452-2)		2
6	90-8452-2	. . INSERT, RUDDER AND ELEVATOR BALANCE BOLT (OPTIONAL TO 90-8452-801)		1
6A	90-8452-800	. . BOLT, RUDDER AND ELEVATOR BALANCE (OPTIONAL . . . . 90-8452-1)		1
7	90-8452-1	. . BOLT, RUDDER AND ELEVATOR BALANCE (OPTIONAL TO. . . 90-8452-800)		1
8	BACW10P1955	. WASHER.		AR
9	AN960D816L	. WASHER.		AR
10	30-3643	. WASHER, ELEVATOR AND RUDDER MECHANISM		2
11	AN320-8	. NUT		4
11A	5-97658-1	. LINK ASSY, ELEVATOR AND RUDDER BALANCE PANEL SUPPORT		2
12	BAC810C163	. . BEARING		2
13	5-97658-7	. . LINK, ELEVATOR AND RUDDER BALANCE PANEL SUPPORT . .		1
13A	65-5650-25	. TRACK ASSY, ELEVATOR STATION 115.18 BALANCE PANEL . . SUPPORT (LH ONLY)		1
13A	65-5650-26	. TRACK ASSY, ELEVATOR STATION 115.18 BALANCE PANEL . . SUPPORT (RH ONLY)		1
13B	NAS603-16	. . SCREW		2
14	65-25234-3	. . FITTING, ELEVATOR AND RUDDER BALANCE PANEL LINK . . ADAPTER (USED ON 65-5650-25 AND 26)		1
		ATTACHING PARTS		
15	AN4-7A	. . BOLT.		4
16	AN960D416	. . WASHER.		4
17	NAS679A4W	. . NUT		4
		-------*-------		
18	60-6170-2	. . SEAL, RUDDER AND ELEVATOR BALANCE TRACK AERODYNAMIC (ALTERED FROM BAC SPEC NO. 10-2737-13)		1
19	60-6170-3	. . SEAL, RUDDER AND ELEVATOR BALANCE TRACK AERODYNAMIC (ALTERED FROM BAC SPEC NO. 10-2737-16)		1
20	90-3355-33	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK . SEAL (LH ONLY)		1
20	90-3355-34	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK . SEAL (RH ONLY)		1
		ATTACHING PARTS		
20A	AN3-6A	. . BOLT.		2
20B	AN960D10	. . WASHER.		2
20C	NAS679A3W	. . NUT		2
		-------*-------		
21	90-3355-35	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK . SEAL (LH ONLY)		1
21	90-3355-36	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK . SEAL (RH ONLY)		1
		ATTACHING PARTS		
22	NAS603-10	. . SCREW		2
		-------*-------		
23	10-2737-124	. . SEAL, FABRIC COVERED AERODYNAMIC STRIP.		1
24	69-4299-5	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. . (LH ONLY)		1
24	69-4299-6	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. . (RH ONLY)		1
		ATTACHING PARTS		
25	NAS603-10	. . SCREW		2
26	BACS40FD1	. . SHIM.		2
		-------*-------		
27	10-2737-132	. . SEAL, FABRIC COVERED AERODYNAMIC RING		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
22 28	90-3355-3	. . RETAINER ASSY, ELEVATOR AND RUDDER BALANCE PANEL. . TRACK SEAL		1
30	66-14405-3	. . SHIM, ELEVATOR AND RUDDER BALANCE PANEL TRACK RING SEAL		1
31	90-2923-1	. . PLATE, ELEVATOR BALANCE PANEL TRACK REINFORCING . .		2
32	10-2737-129	. . SEAL, FABRIC COVERED AERODYNAMIC STRIP.		1
33	90-8413-23	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. . (LH ONLY)		1
33	90-8413-24	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. . (RH ONLY)		1
		ATTACHING PARTS		
34	NAS603-10	. . SCREW		4
35	BACS40FD1	. . SHIM.		4
		-------*-------		
36	60-2083-1	. . PLATE, RUDDER AND ELEVATOR BALANCE PANEL TRACK. . . BEARING		2
37	BACS40A12-45	. . SHIM.		AR
38	50-1597-5	. . TRACK, ELEVATOR STATION 115.18 BALANCE PANEL (LH. . ONLY)		1
38	50-1597-6	. . TRACK, ELEVATOR STATION 115.18 BALANCE PANEL (RH. . ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

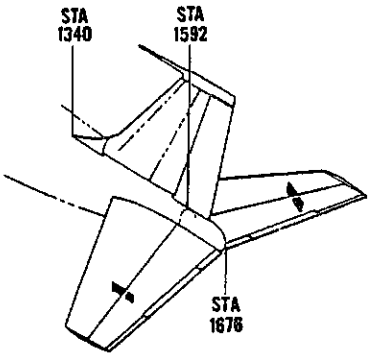

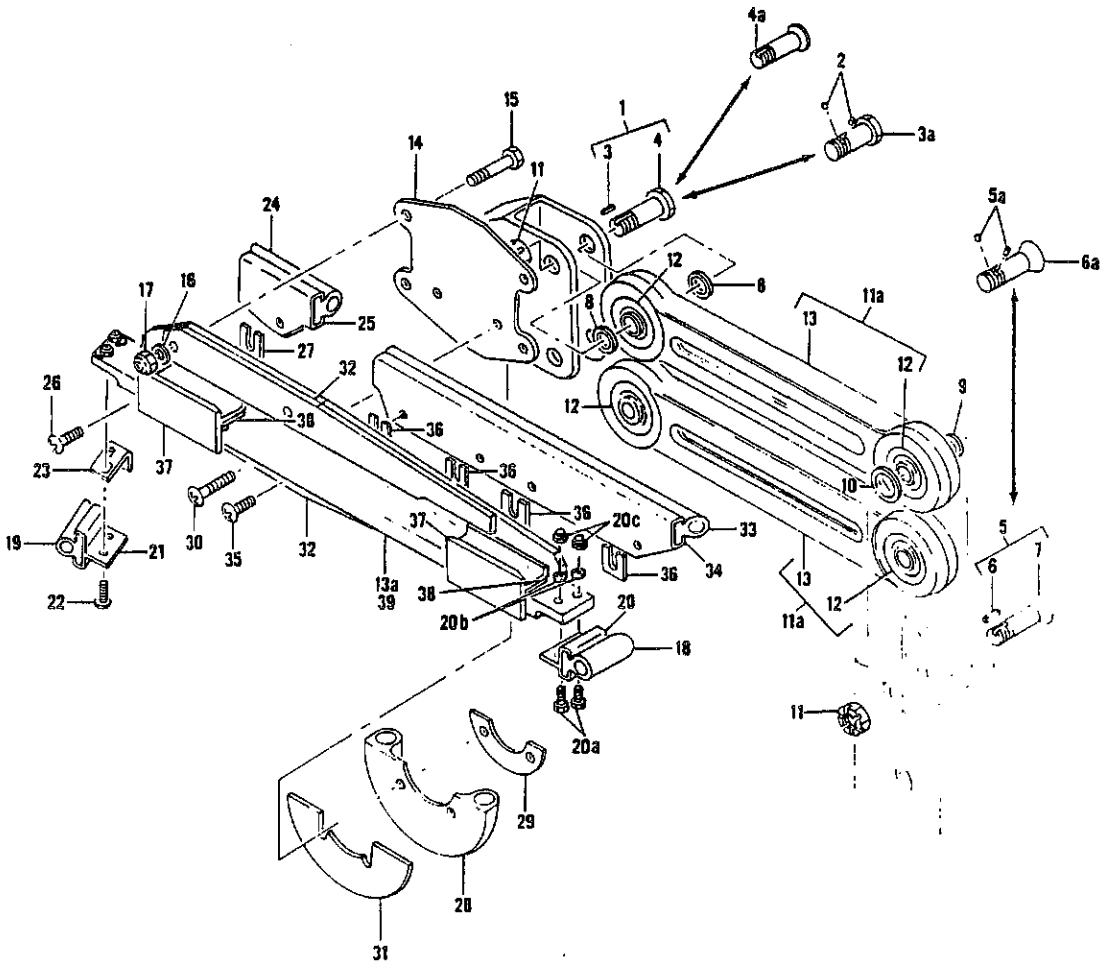



FIGURE 23. MECHANISM INSTL, ELEVATOR STATION 159.98 ELEVATOR BALANCE PANEL SUPPORT

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
23	65-5650-7	MECHANISM INSTL, ELEVATOR STATION 159.98 BALANCE PANEL SUPPORT (LH) (SEE 55-2, FIG. 3, ITEM 48 AND 55-2, FIG. 4, ITEM 45)		RF
	65-5650-8	MECHANISM INSTL, ELEVATOR STATION 159.98 BALANCE PANEL SUPPORT (RH) (SEE 55-2, FIG. 3, ITEM 48 AND 55-2, FIG. 4, ITEM 45)		RF
1	90-8457-3	. BOLT ASSY, RUDDER AND ELEVATOR BALANCE.		2
2	90-8457-801	. . INSERT, RUDDER AND ELEVATOR BALANCE BOLT (OPTIONAL 90-8457-2)		2
3	90-8457-2	. . INSERT, RUDDER AND ELEVATOR BALANCE BOLT (OPTIONAL TO 90-8457-801)		1
3A	90-8457-800	. . BOLT, RUDDER AND ELEVATOR BALANCE (OPTIONAL . . . . 90-8457-4)		1
4	90-8457-4	. . BOLT, RUDDER AND ELEVATOR BALANCE (OPTIONAL TO. . . 90-8457-800)		1
5	90-8452	. BOLT ASSY, RUDDER AND ELEVATOR BALANCE.		2
5A	90-8452-801	. . INSERT, RUDDER AND ELEVATOR BALANCE BOLT (OPTIONAL 90-8452-2)		2
6	90-8452-2	. . INSERT, RUDDER AND ELEVATOR BALANCE BOLT (OPTIONAL TO 90-8452-801)		1
6A	90-8452-800	. . BOLT, RUDDER AND ELEVATOR BALANCE (OPTIONAL . . . . 90-8452-1)		1
7	90-8452-1	. . BOLT, RUDDER AND ELEVATOR BALANCE (OPTIONAL TO. . . 90-8452-800)		1
8	BACW10P195S	. WASHER.		AR
9	AN960D816L	. WASHER.		AR
10	30-3643	. WASHER, ELEVATOR AND RUDDER MECHANISM		2
11	AN320-8	. NUT		4
11A	5-97658-2	. LINK ASSY, ELEVATOR AND RUDDER BALANCE PANEL SUPPORT		2
12	BACB10C163	. . BEARING		2
13	5-97658-8	. . LINK, ELEVATOR AND RUDDER BALANCE PANEL SUPPORT . .		1
13A	65-5650-27	. TRACK ASSY, ELEVATOR STATION 159.98 BALANCE PANEL . . SUPPORT (LH ONLY)		1
13A	65-5650-28	. TRACK ASSY, ELEVATOR STATION 159.98 BALANCE PANEL . . SUPPORT (RH ONLY)		1
14	65-25234-3	. . FITTING, ELEVATOR AND RUDDER BALANCE PANEL LINK . . ADAPTER (USED ON 65-5650-27 AND -28)		1
		ATTACHING PARTS		
15	AN4-7A	. . BOLT.		4
16	AN960D416	. . WASHER.		4
17	NAS679A4W	. . NUT		4
		-------*-------		
18	60-6170-2	. . SEAL, RUDDER AND ELEVATOR BALANCE TRACK AERODYNAMIC (ALTERED FROM BAC SPEC NO. 10-2737-13)		1
19	60-6170-3	. . SEAL, RUDDER AND ELEVATOR BALANCE TRACK AERODYNAMIC (ALTERED FROM BAC SPEC NO. 10-2737-16)		1
20	90-3355-33	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK . SEAL (LH ONLY)		1
20	90-3355-34	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK . SEAL (RH ONLY)		1
		ATTACHING PARTS		
20A	AN3-6A	. . BOLT.		2
20B	AN960D10	. . WASHER.		2
20C	NAS679A3W	. . NUT		2
		-------*-------		
21	90-3355-35	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK . SEAL (LH ONLY)		1
21	90-3355-36	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK . SEAL (RH ONLY)		1
		ATTACHING PARTS		
22	NAS603-10	. . SCREW		2
		-------*-------		
23	66-3957-1	. . CLIP, ELEVATOR BALANCE TRACK SEAL RETAINER. . . . . ATTACHMENT (LH ONLY)		1
23	66-3957-2	. . CLIP, ELEVATOR BALANCE TRACK SEAL RETAINER. . . . . ATTACHMENT (RH ONLY)		1
24	10-2737-123	. . SEAL, FABRIC COVERED AERODYNAMIC STRIP.		1
25	69-4299-3	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. . (LH ONLY)		1
25	69-4299-4	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. . (RH ONLY)		1
		ATTACHING PARTS		
26	NAS603-10	. . SCREW		1
27	BACS40FD1	. . SHIM.		1
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
23 28	10-2737-132	. . SEAL, FABRIC COVERED AERODYNAMIC RING		1
29	90-3355-3	. . RETAINER ASSY, ELEVATOR AND RUDDER BALANCE PANEL. . TRACK SEAL		1
		ATTACHING PARTS		
30	NAS603-16	. . SCREW		2
		-------*-------		
31	66-14405-3	. . SHIM, ELEVATOR AND RUDDER BALANCE PANEL TRACK RING SEAL		1
32	90-2923-1	. . PLATE, ELEVATOR BALANCE PANEL TRACK REINFORCING . .		2
33	10-2737-130	. . SEAL, FABRIC COVERED AERODYNAMIC STRIP.		1
34	90-8413-25	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. . (LH ONLY)		1
34	90-8413-26	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. . (RH ONLY)		1
		ATTACHING PARTS		
35	NAS603-10	. . SCREW		4
36	BACS40FD1	. . SHIM.		4
		-------*-------		
37	60-2083-1	. . PLATE, RUDDER AND ELEVATOR BALANCE PANEL TRACK. . . BEARING		2
38	BACS40A12-45	. . SHIM.		AR
39	50-1597-7	. . TRACK, ELEVATOR STATION 159.98 BALANCE PANEL. . . . (LH ONLY)		1
39	50-1597-8	. . TRACK, ELEVATOR STATION 159.98 BALANCE PANEL. . . . (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

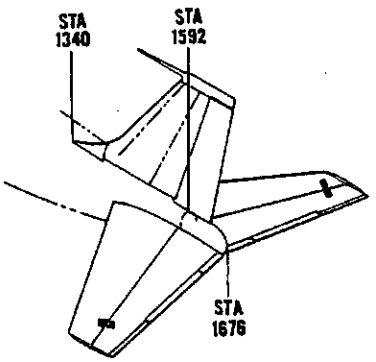

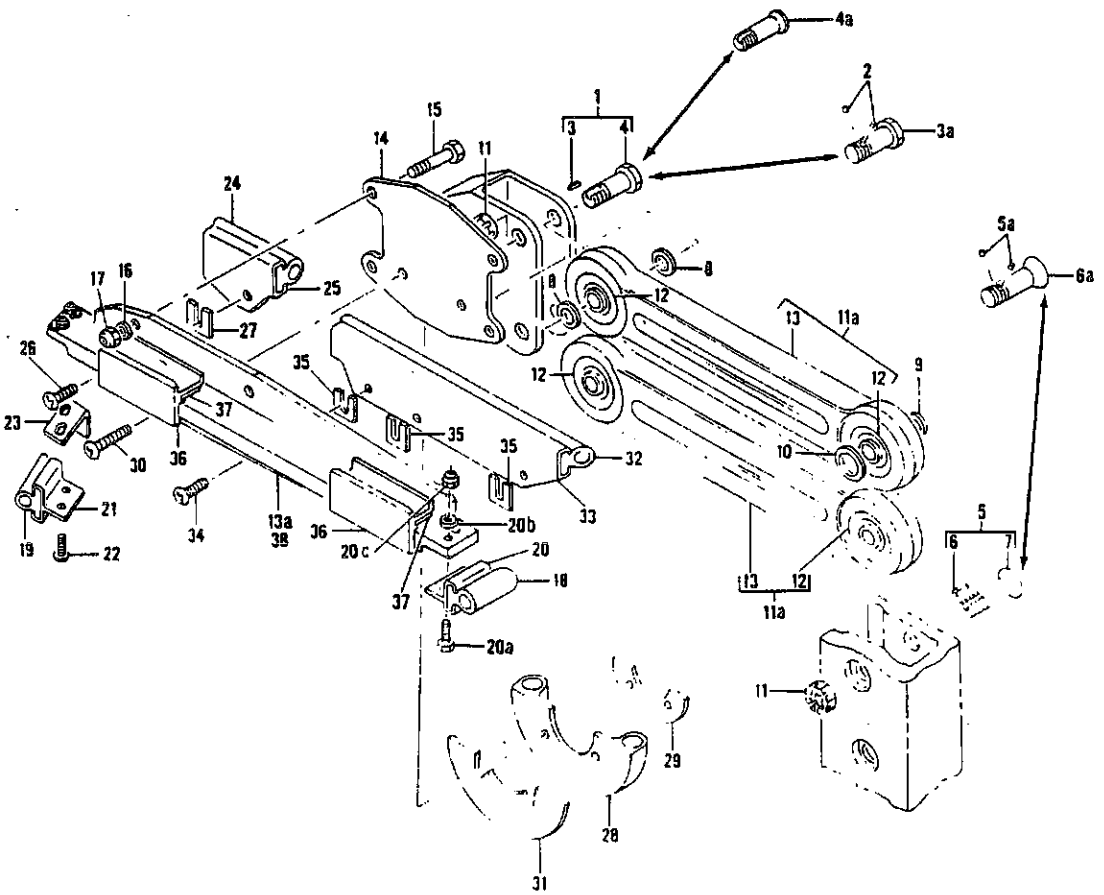


FIGURE 24. MECHANISM INSTL, ELEVATOR STATION 204.78 ELEVATOR BALANCE PANEL SUPPORT

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
24	65-5650-9	MECHANISM INSTL, ELEVATOR STATION 204.78 BALANCE PANEL SUPPORT (LH) (SEE 55-2, FIG. 3, ITEM 49 AND 55-2, FIG. 4, ITEM 46)		RF
	65-5650-10	MECHANISM INSTL, ELEVATOR STATION 204.78 BALANCE PANEL SUPPORT (RH) (SEE 55-2, FIG. 3, ITEM 49 AND 55-2, FIG. 4, ITEM 46)		RF
1	90-8457-3	. BOLT ASSY, RUDDER AND ELEVATOR BALANCE.		2
2	90-8457-801	. . INSERT. . . . . (OPTIONAL 90-8457-2)		2
3	90-8457-2	. . INSERT. . . . . (OPTIONAL TO 90-8457-801)		1
3A	90-8457-800	. . BOLT. . . . . (OPTIONAL 90-8457-4)		1
4	90-8457-4	. . BOLT. . . . . (OPTIONAL TO 90-8457-800)		1
5	90-8452	. BOLT ASSY, RUDDER AND ELEVATOR BALANCE.		2
5A	90-8452-801	. . INSERT, RUDDER AND ELEVATOR BALANCE BOLT (OPTIONAL 90-8452-2)		2
6	90-8452-2	. . INSERT, RUDDER AND ELEVATOR BALANCE BOLT (OPTIONAL TO 90-8452-801)		1
6A	90-8452-800	. . BOLT, RUDDER AND ELEVATOR BALANCE (OPTIONAL . . . . 90-8452-1)		1
7	90-8452-1	. . BOLT, RUDDER AND ELEVATOR BALANCE (OPTIONAL TO. . . 90-8452-800)		1
8	BACW10P195S	. WASHER.		AR
9	AN960D816L	. WASHER.		AR
10	30-3643	. WASHER, ELEVATOR AND RUDDER MECHANISM		2
11	AN320-8	. NUT		4
11A	5-97658-3	. LINK ASSY, ELEVATOR AND RUDDER BALANCE PANEL SUPPORT		2
12	BACB10C163	. . BEARING		2
13	5-97658-9	. . LINK, ELEVATOR AND RUDDER BALANCE PANEL SUPPORT . .		1
13A	65-5650-29	. TRACK ASSY, ELEVATOR STATION 204.78 BALANCE PANEL . . SUPPORT (LH ONLY)		1
13A	65-5650-30	. TRACK ASSY, ELEVATOR STATION 204.78 BALANCE PANEL . . SUPPORT (RH ONLY)		1
14	65-25234-3	. . FITTING, ELEVATOR AND RUDDER BALANCE PANEL LINK . . ADAPTER		1
		ATTACHING PARTS		
15	AN4-6A	. . BOLT.		4
16	AN960D416	. . WASHER.		4
17	NAS679A4W	. . NUT		4
		-------*-------		
18	60-6170-2	. . SEAL, RUDDER AND ELEVATOR BALANCE TRACK AERODYNAMIC (ALTERED FROM BAC SPEC NO. 10-2737-13)		1
19	60-6170-3	. . SEAL, RUDDER AND ELEVATOR BALANCE TRACK AERODYNAMIC (ALTERED FROM BAC SPEC NO. 10-2737-16)		1
20	90-3355-33	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK . SEAL (LH ONLY)		1
20	90-3355-34	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK . SEAL (RH ONLY)		1
		ATTACHING PARTS		
20A	AN3-6A	. . BOLT.		2
20B	AN960D10	. . WASHER.		2
20C	NAS679A3W	. . NUT		2
		-------*-------		
21	90-3355-35	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK . SEAL (LH ONLY)		1
21	90-3355-36	. . RETAINER, ELEVATOR AND RUDDER BALANCE PANEL TRACK . SEAL (RH ONLY)		1
		ATTACHING PARTS		
22	NAS603-10	. . SCREW		2
		-------*-------		
23	66-3957-1	. . CLIP, ELEVATOR BALANCE TRACK SEAL RETAINER. . . . . ATTACHMENT (LH ONLY)		1
23	66-3957-2	. . CLIP, ELEVATOR BALANCE TRACK SEAL RETAINER. . . . . ATTACHMENT (RH ONLY)		1
24	10-2737-122	. . SEAL, FABRIC COVERED AERODYNAMIC STRIP.		1
25	69-4299-1	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. . (LH ONLY)		1
25	69-4299-2	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. . (RH ONLY)		1
		ATTACHING PARTS		
26	NAS603-10	. . SCREW		1
27	BACS40FD1	. . SHIM.		1
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
24 28	10-2737-132	. . SEAL, FABRIC COVERED AERODYNAMIC RING		1
29	90-3355-3	. . RETAINER ASSY, ELEVATOR AND RUDDER BALANCE PANEL. . TRACK SEAL		1
		ATTACHING PARTS		
30	NAS603-14	. . SCREW		2
		--------*--------		
31	66-14405-3	. . SHIM, ELEVATOR AND RUDDER BALANCE PANEL TRACK RING SEAL		1
32	10-2737-131	. . SEAL, FABRIC COVERED AERODYNAMIC STRIP.		1
33	90-8413-27	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. . (LH ONLY)		1
33	90-8413-28	. . RETAINER ASSY, ELEVATOR BALANCE PANEL TRACK SEAL. . (RH ONLY)		1
		ATTACHING PARTS		
34	NAS603-10	. . SCREW		3
35	BACS40FD1	. . SHIM.		3
		--------*--------		
36	60-2083-1	. . PLATE, RUDDER AND ELEVATOR BALANCE PANEL TRACK. . . BEARING		2
37	BACS40A12-45	. . SHIM.		AR
38	50-1597-9	. . TRACK, ELEVATOR STATION 204.78 BALANCE PANEL (LH. . ONLY)		1
38	50-1597-10	. . TRACK, ELEVATOR STATION 204.78 BALANCE PANEL (RH. . ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

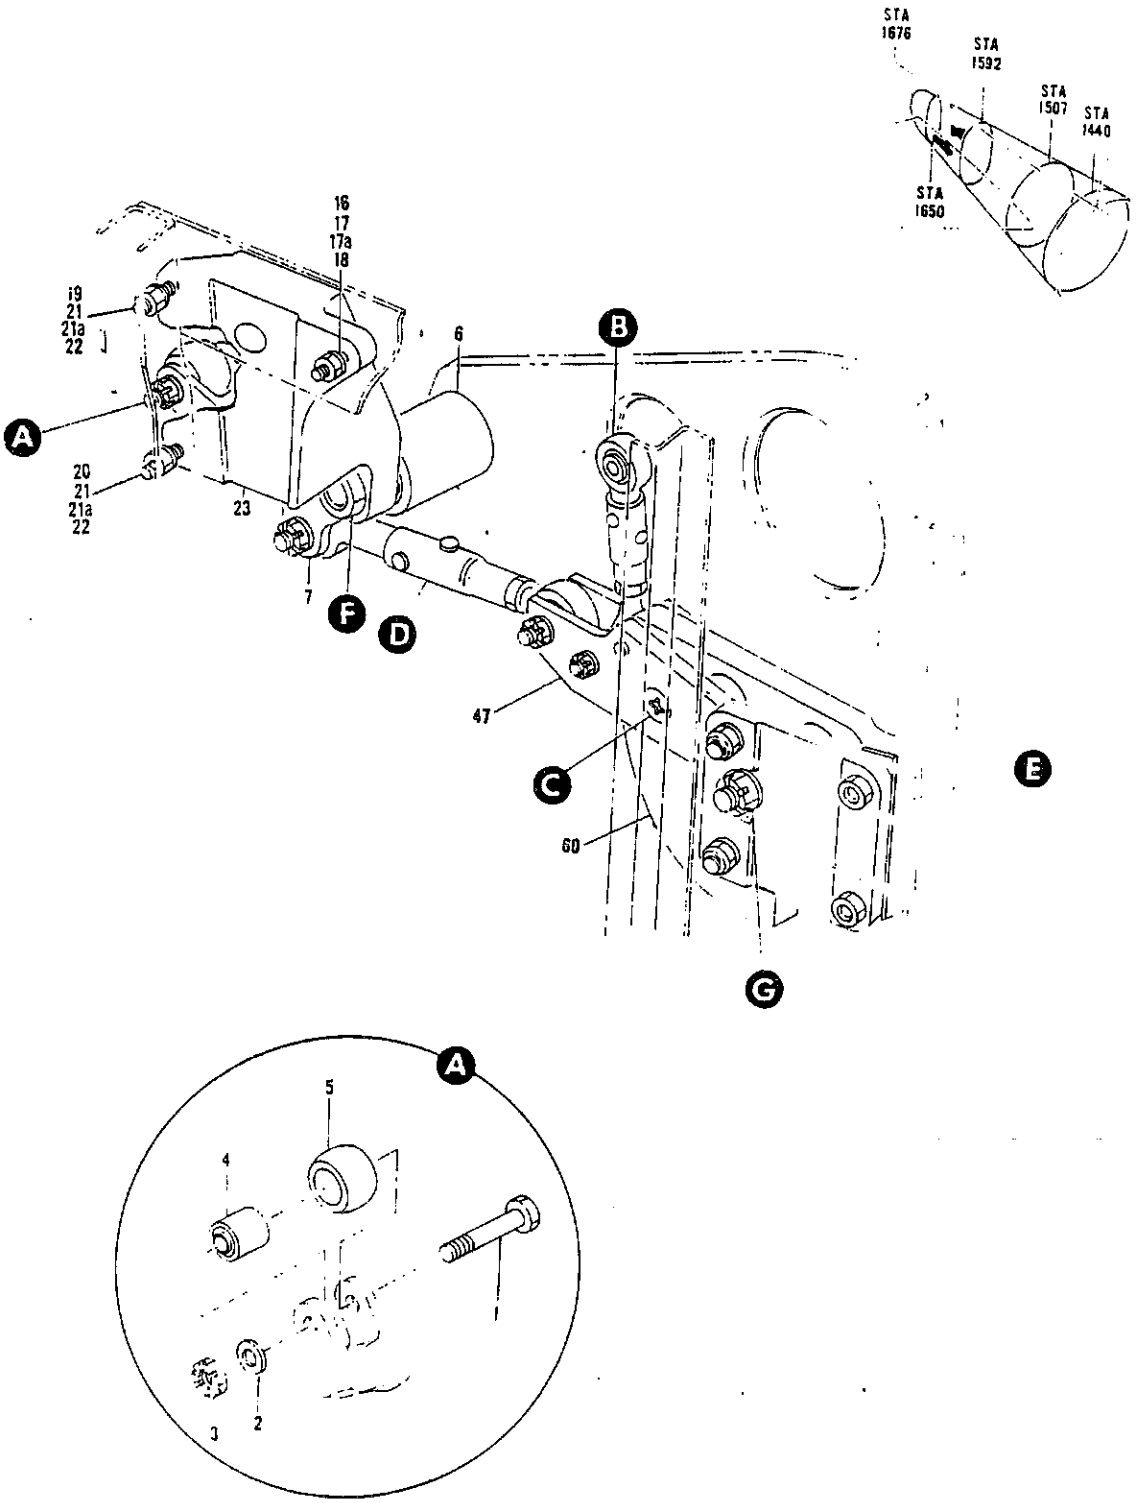


FIGURE 25 MECHANISM INSTL, ELEVATOR ACTUATOR ANTI-BALANCE TAB (SHEET 1)

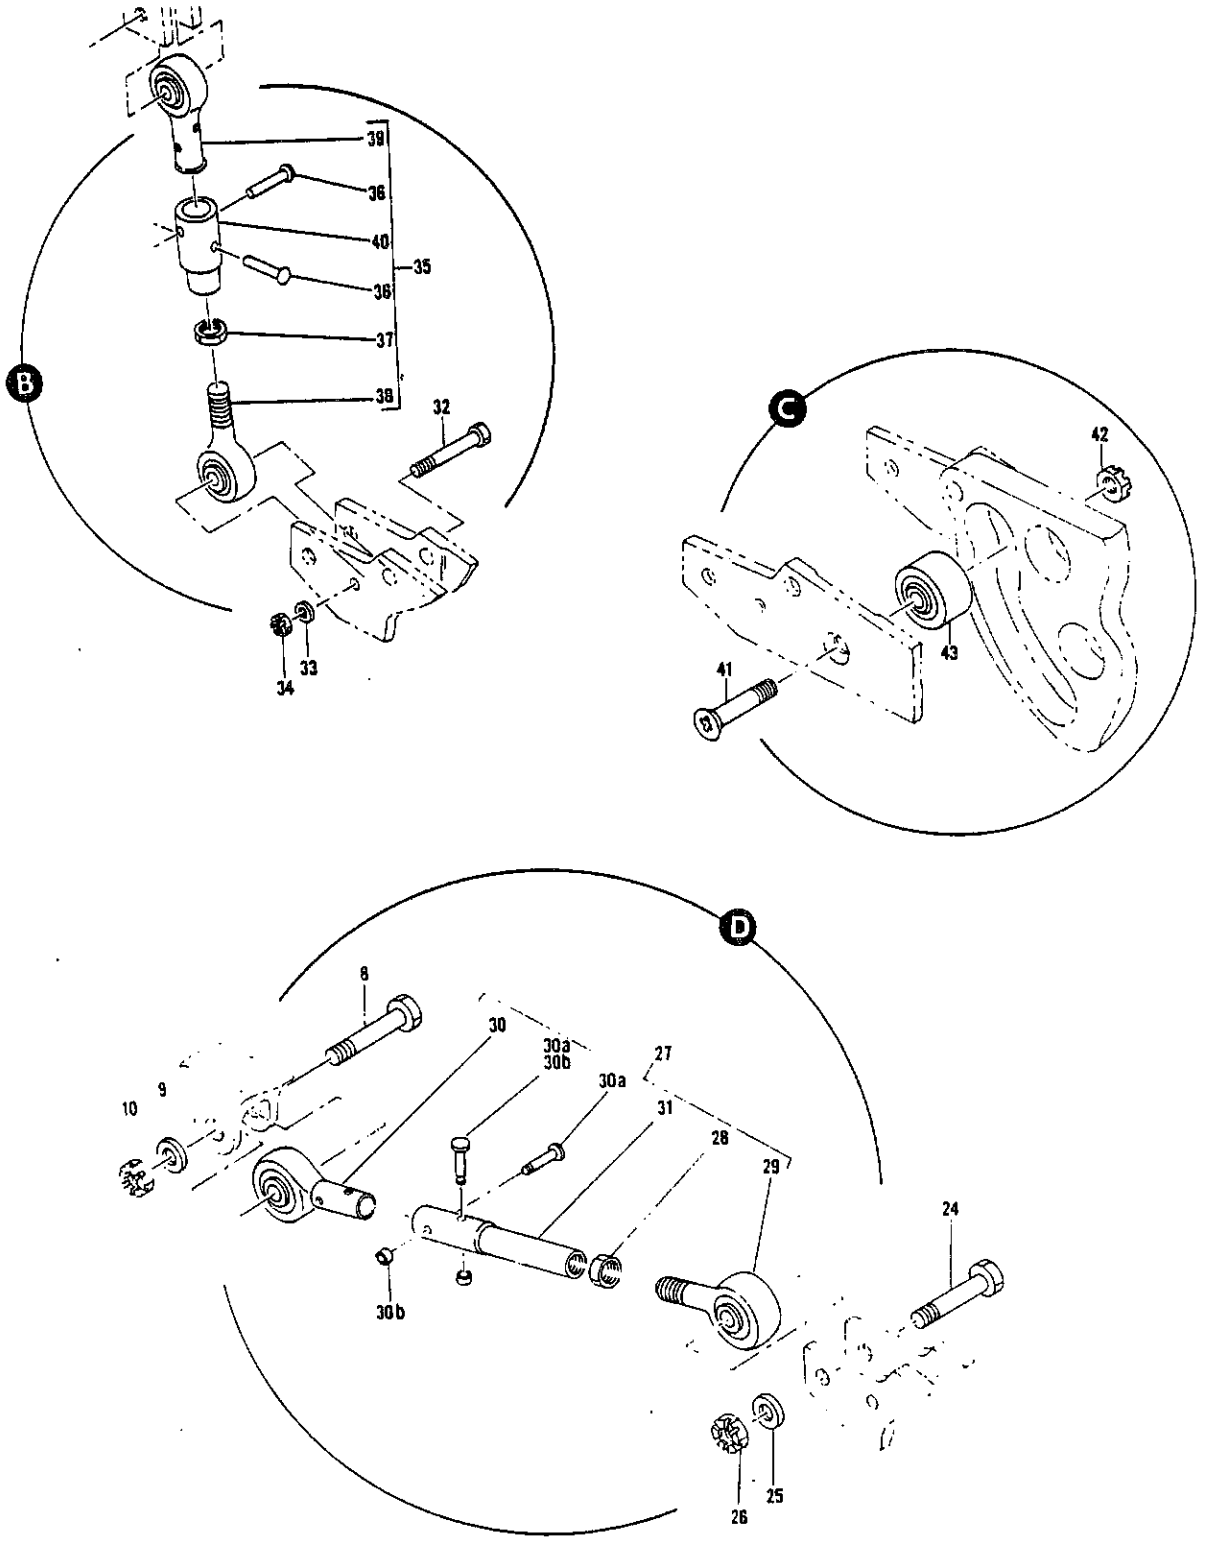


FIGURE 25. MECHANISM INSTL, ELEVATOR ACTUATOR ANTI-BALANCE TAB (SHEET 2)

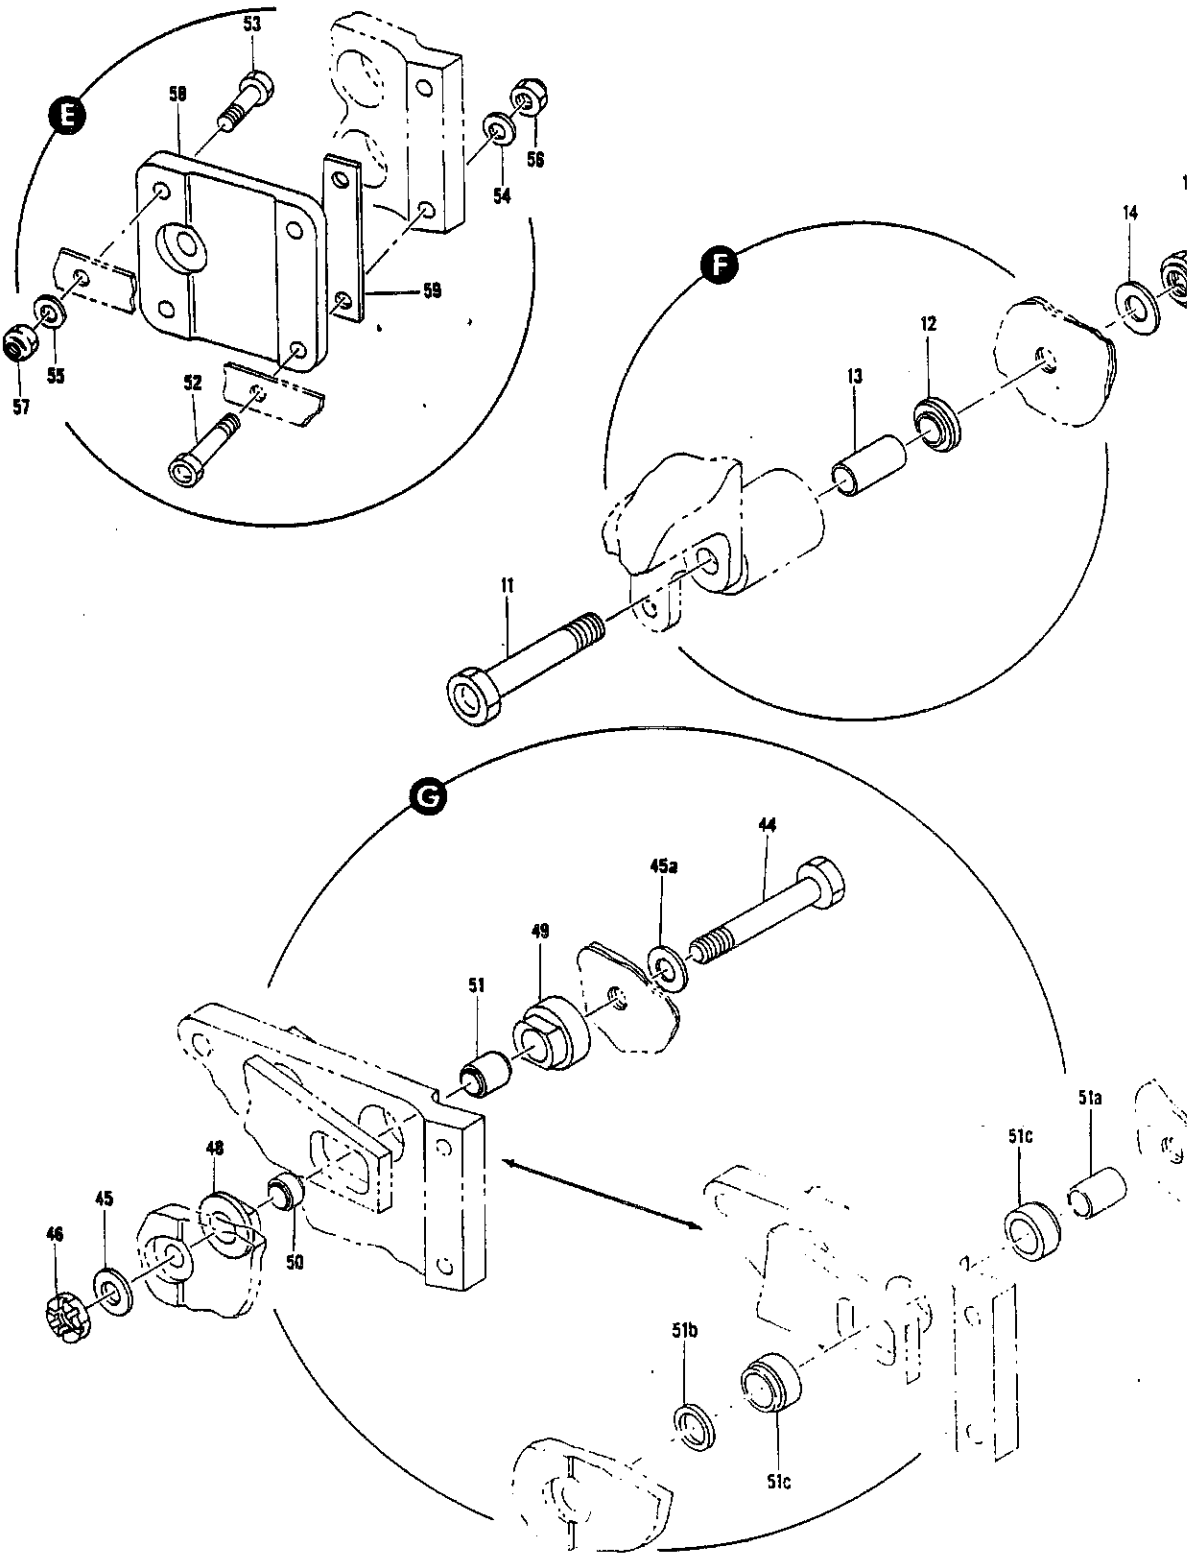


FIGURE 25. MECHANISM INSTL, ELEVATOR ACTUATOR ANTI-BALANCE TAB (SHEET 3)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	25	65-42014-1	MECHANISM INSTL, ELEVATOR ACTUATOR ANTI-BALANCE TAB . . (LH) (SEE FIG. 14, ITEM 3)		RF
		65-42014-2	MECHANISM INSTL, ELEVATOR ACTUATOR ANTI-BALANCE TAB . . (RH) (SEE FIG. 14, ITEM 3)		RF
	1	NAS1104-20DW	. BOLT.		1
	2	AN960PD416	. WASHER.		1
	3	AN320-4	. NUT		1
		66-8843	. ROLLER ASSY, ANTI-BALANCE TAB		1
	4	BACB10A120	. . BEARING		1
	5	66-8843-1	. . ROLLER, ANTI-BALANCE TAB.		1
		65-44072-1	. BELLCRANK ASSY, ELEVATOR ANTI-BALANCE TAB (OPTIONAL . . 69-23011-5) (LH ONLY)		1
		69-23011-5	. BELLCRANK ASSY, ELEVATOR ANTI-BALANCE TAB (OPTIONAL . . TO 65-44072-1) (LH ONLY)		1
		65-44072-2	. BELLCRANK ASSY, ELEVATOR ANTI-BALANCE TAB (OPTIONAL . . 69-23011-6) (RH ONLY)		1
		69-23011-6	. BELLCRANK ASSY, ELEVATOR ANTI-BALANCE TAB (OPTIONAL . . , TO 65-44072-2) (RH ONLY)		1
	6	AN201KP8A	. . BEARING		1
	7	65-44072-3	. . BELLCRANK, ANTI-BALANCE TAB (USED ON 65-44072-1). .		1
	7	69-23011-7	. . BELLCRANK, ANTI-BALANCE TAB (USED ON 69-23011-5). .		1
	7	65-44072-4	. . BELLCRANK, ANTI-BALANCE TAB (USED ON 65-44072-2). .		1
	7	69-23011-8	. . BELLCRANK, ANTI-BALANCE TAB (USED ON 69-23011-6). .		1
	8	NAS1105-19DW	. BOLT.		1
	9	AN960PD516	. WASHER.		1
	10	AN320-5	. NUT		1
	11	BACB30ABP8-51	. BOLT, (USED WITH 65-44054-1 AND 65-44054-2)		1
	11	NAS1108-38DW	. BOLT, (USED WITH 65-40021-1 AND 65-40021-2)		1
	12	AN201KP8A	. BEARING		1
	13	NAS43DD8-81	. SPACER.		1
	14	AN960PD816	. WASHER.		AR
	15	AN320-8	. NUT		1
	16	AN5C14A	. BOLT, (OPTIONALS AN175C14A, NAS1105-17W).		1
	17	AN960PD516	. WASHER.		1
	17A	NAS1197-516L	. WASHER.		1
	18	NAS679A5	. NUT		1
	19	AN4C11A	. BOLT, (USED WITH 65-44054-1 AND 65-44054-2)		1
	19	AN4C10A	. BOLT, (USED WITH 65-40021-1 AND 65-40021-2)		1
	20	AN4C10A	. BOLT, (USED WITH 65-44054-1 AND 65-44054-2)		1
	20	AN4C7A	. BOLT, (USED WITH 65-40021-1 AND 65-40021-2)		1
	21	AN960PD416	. WASHER.		2
	21A	NAS1197-416L	. WASHER.		2
	22	NAS679A4W	. NUT		2
R R	23	65-44054-5	. BRACKET, ELEVATOR ANTI-BALANCE TAB SUPPORT (LH ONLY) (OPTIONAL 65-40021-1)		1
R R	23	65-40021-1	. BRACKET, ELEVATOR ANTI-BALANCE TAB SUPPORT (LH ONLY) (OPTIONAL TO 65-44054-5)		1
R R	23	65-44054-2	. BRACKET, ELEVATOR ANTI-BALANCE TAB SUPPORT (RH ONLY) (OPTIONAL 65-40021-6)		1
R R	23	65-40021-6	. BRACKET, ELEVATOR ANTI-BALANCE TAB SUPPORT (RH ONLY) (OPTIONAL TO 65-44054-2)		1
	24	NAS1105-19DW	. BOLT.		1
	25	AN960PD516	. WASHER.		1
	26	AN320-5	. NUT		1
	27	69-24068-2	. ROD ASSY, ELEVATOR CONTROL ANTI-BALANCE TAB		1
	28	AN316-7R	. . NUT		1
	29	BACB10A438	. . BEARING		1
	30	BACB10C170	. . BEARING		1
	30A	BACR15AY6-12	. . RIVET		2
	30B	NAS528A6	. . COLLAR.		2
	31	69-24068-1	. . ROD, ELEVATOR CONTROL ANTI-BALANCE TAB.		1
	32	NAS1104-20DW	. BOLT.		1
	33	AN960PD416	. WASHER.		1
	34	AN320-4	. NUT		1
	35	69-24069	. ROD ASSY, ELEVATOR CONTROL ANTI-BALANCE TAB		1
	36	AN470D5	. . RIVET		2
	37	AN316-6R	. . NUT		1
	38	BACB10A436	. . BEARING		1
	39	69-24069-1	. . ROD, ELEVATOR CONTROL ANTI-BALANCE TAB END.		1
	40	66-16074	. . ROD, ELEVATOR CONTROL ANTI-BALANCE TAB.		1
	41	BACB30ABP5-19	. BOLT.		1
	42	AN320-5	. NUT		1
	43	BACB10M6	. BEARING		1
	44	NAS1108-38DW	. BOLT.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
25 45	AN960PD816	. WASHER.		1
45A	MS20002C8	. WASHER.		1
46	AN320-8	. NUT		1
47	65-72074-3	. LINK, ELEVATOR ANTI-BALANCE TAB (LH ONLY)		1
47	65-72074-4	. LINK, ELEVATOR ANTI-BALANCE TAB (RH ONLY)		1
51A	NAS43DD8-27	. SPACER.		1
51B	AN960PD816	. WASHER.		1
51C	AN201KP8A	. BEARING		2
52	NAS1105-17W	. BOLT.		2
53	AN4C7A	. BOLT.		2
54	AN960PD516	. WASHER.		2
55	AN960PD416	. WASHER.		2
56	NAS679A5	. NUT		2
57	NAS679A4W	. NUT		2
58	69-25052	. BRACKET, ELEVATOR ANTI-BALANCE TAB SUPPORT.		1
59	63-12035	. SHIM, ELEVATOR ANTI-BALANCE TAB LAMINATED		AR
60	69-50036-801	. CAM, ELEVATOR ANTI-BALANCE TAB (LH ONLY).		1
60	69-50036-802	. CAM, ELEVATOR ANTI-BALANCE TAB (RH ONLY).		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

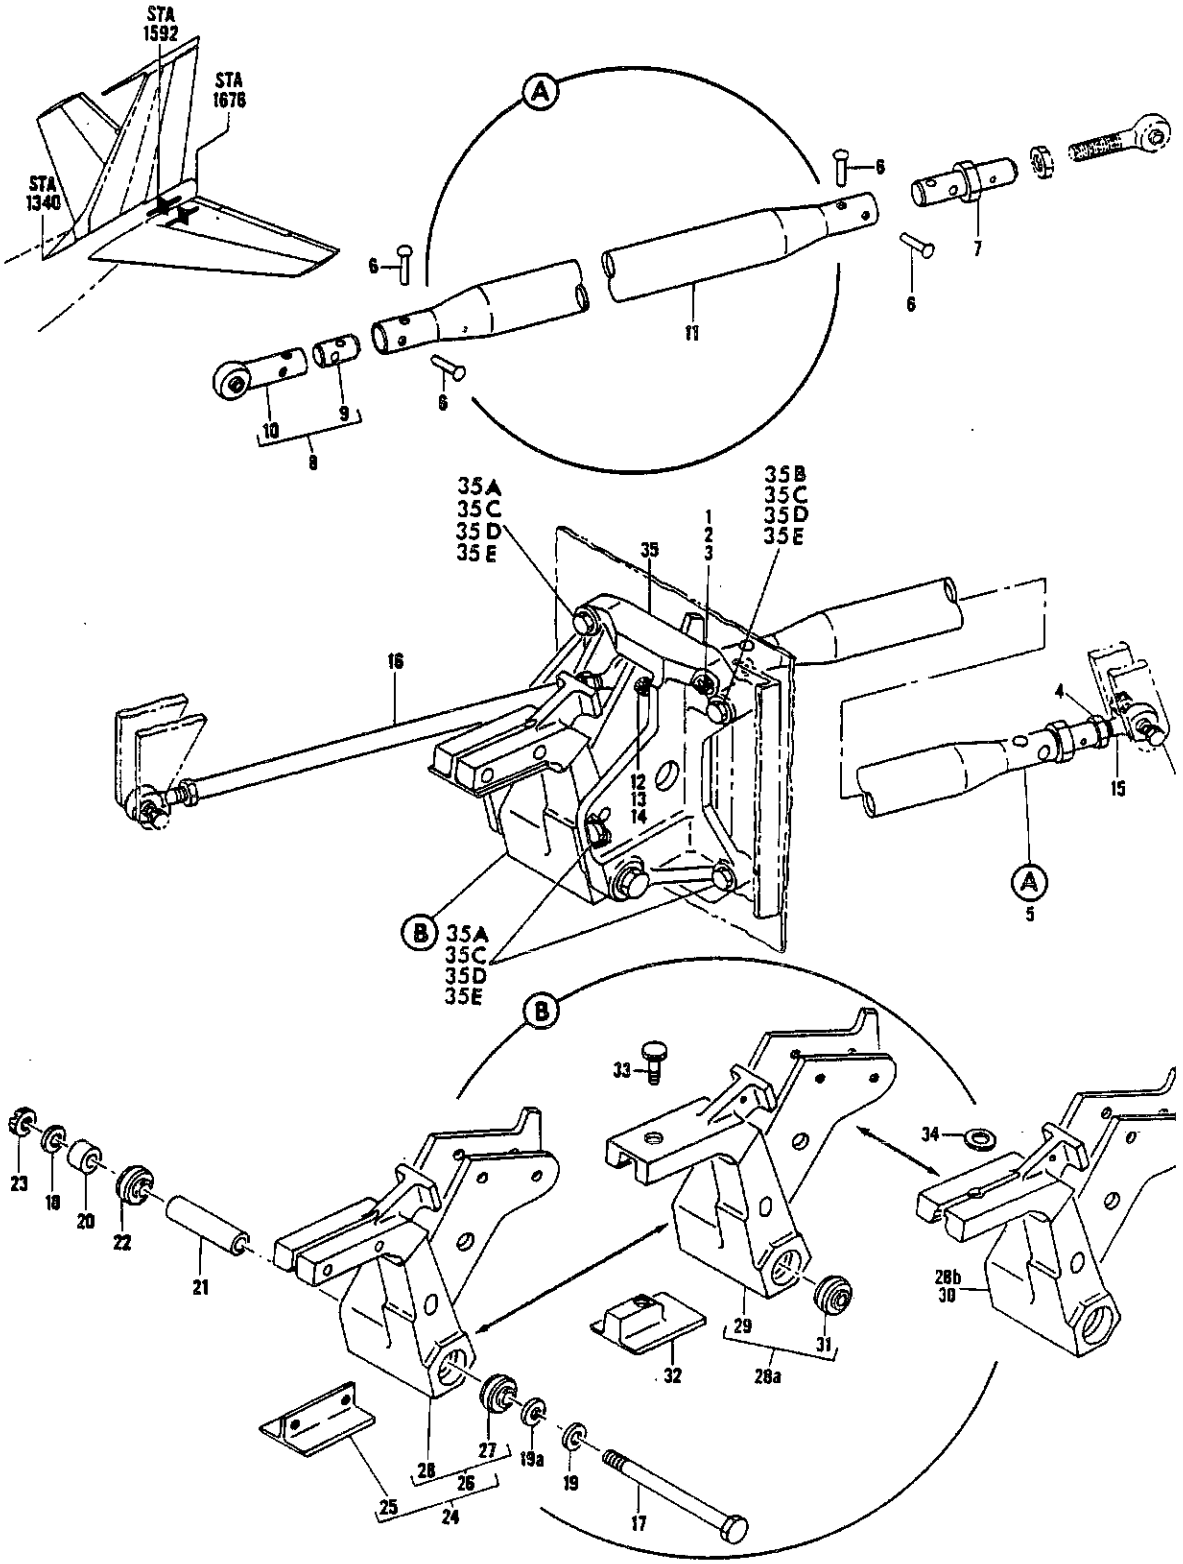


FIGURE 26. BELLCRANK INSTL., ELEVATOR ANTI-BALANCE TAB

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	26	65-42042-1	BELLCRANK INSTL, ELEVATOR ANTI-BALANCE TAB (LH) (SEE. . FIG. 17, ITEM 119)		RF
		65-42042-2	BELLCRANK INSTL, ELEVATOR ANTI-BALANCE TAB (RH) (SEE. . FIG. 17, ITEM 120)		RF
	1	NAS1104-16DW	. BOLT.		1
	2	AN960D416	. WASHER.		1
	3	AN320-4	. NUT		1
	4	AN316-6R	. NUT		1
	5	90-3213-3007	. ROD ASSY, CONTROL		1
	6	AN470D5	. . RIVET		4
	7	66-35050	. . PLUG, ROD END THREADED.		1
	8	60-2293	. . BEARING ASSY, ROD END BALL.		1
	9	60-2293-1	. . . PLUG, ROD END BALL BEARING.		1
	10	BACB10A457	. . . BEARING		1
	11	90-3213-3006	. . ROD, CONTROL.		1
	12	NAS1104-16DW	. BOLT.		2
	13	AN960D416	. WASHER.		2
	14	AN320-4	. NUT		2
	15	BACB10A436	. BEARING		1
	16	BACR24D6-134	. ROD ASSY.		1
	17	NAS1105-57DW	. BOLT, (NOT USED WITH 65-44034-1, -2, 65-37095-1 AND -2)		1
	18	AN935-516	. WASHER, (NOT USED WITH 65-44034-1, -2, 65-37095-1 AND -2)		1
	19	BACW10T516	. WASHER, (NOT USED WITH 65-37095-1 AND -2)		1
	19A	BACW10T516L	. WASHER, (NOT USED WITH 65-37095-1 AND -2)		AR
	20	63-10359	. BUSHING, ELEVATOR ANTI-BALANCE TAB CLAMP-UP (NOT USED WITH 65-44034-1, -2, 65-37095-1 AND -2)		1
	21	NAS43DD5-130	. SPACER.		1
	22	AN201KP5A	. BEARING		1
	23	AN320-5	. NUT		1
	28A	65-40015-17	. CRANK ASSY, IDLER CAM (LH ONLY)		1
	28A	65-40015-18	. CRANK ASSY, IDLER CAM (RH ONLY)		1
	29	65-40015-19	. . CRANK, (USED ON 65-40015-17).		1
	29	65-40015-20	. . CRANK, (USED ON 65-40015-18).		1
	31	AN201KP5A	. . BEARING		1
	32	66-11830-2	. PLATE, CAM SURFACE (RH ONLY).		1
	32	66-11830-3	. PLATE, CAM SURFACE (LH ONLY).		1
R R	35	65-44034-11	. SUPPORT, ELEVATOR ANTI-BALANCE TAB BELLCRANK (LH. . . ONLY)	0150	1
R R	35	65-44034-13	. SUPPORT, ELEVATOR ANTI-BALANCE TAB BELLCRANK (LH. . . ONLY)	5199	1
R R	35	65-44034-12	. SUPPORT, ELEVATOR ANTI-BALANCE TAB BELLCRANK (RH. . . ONLY)	0150	1
R R	35	65-44034-14	. SUPPORT, ELEVATOR ANTI-BALANCE TAB BELLCRANK (RH. . . ONLY)	5199	1
			ATTACHING PARTS		
	35A	AN4C12A	. BOLT, (NOT USED WITH 65-37095-1 AND -2)		3
	35B	AN4C13A	. BOLT, (NOT USED WITH 65-37095-1 AND -2)		1
	35D	AN960D416	. WASHER.		4
	35E	NAS679A4W	. NUT		4
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

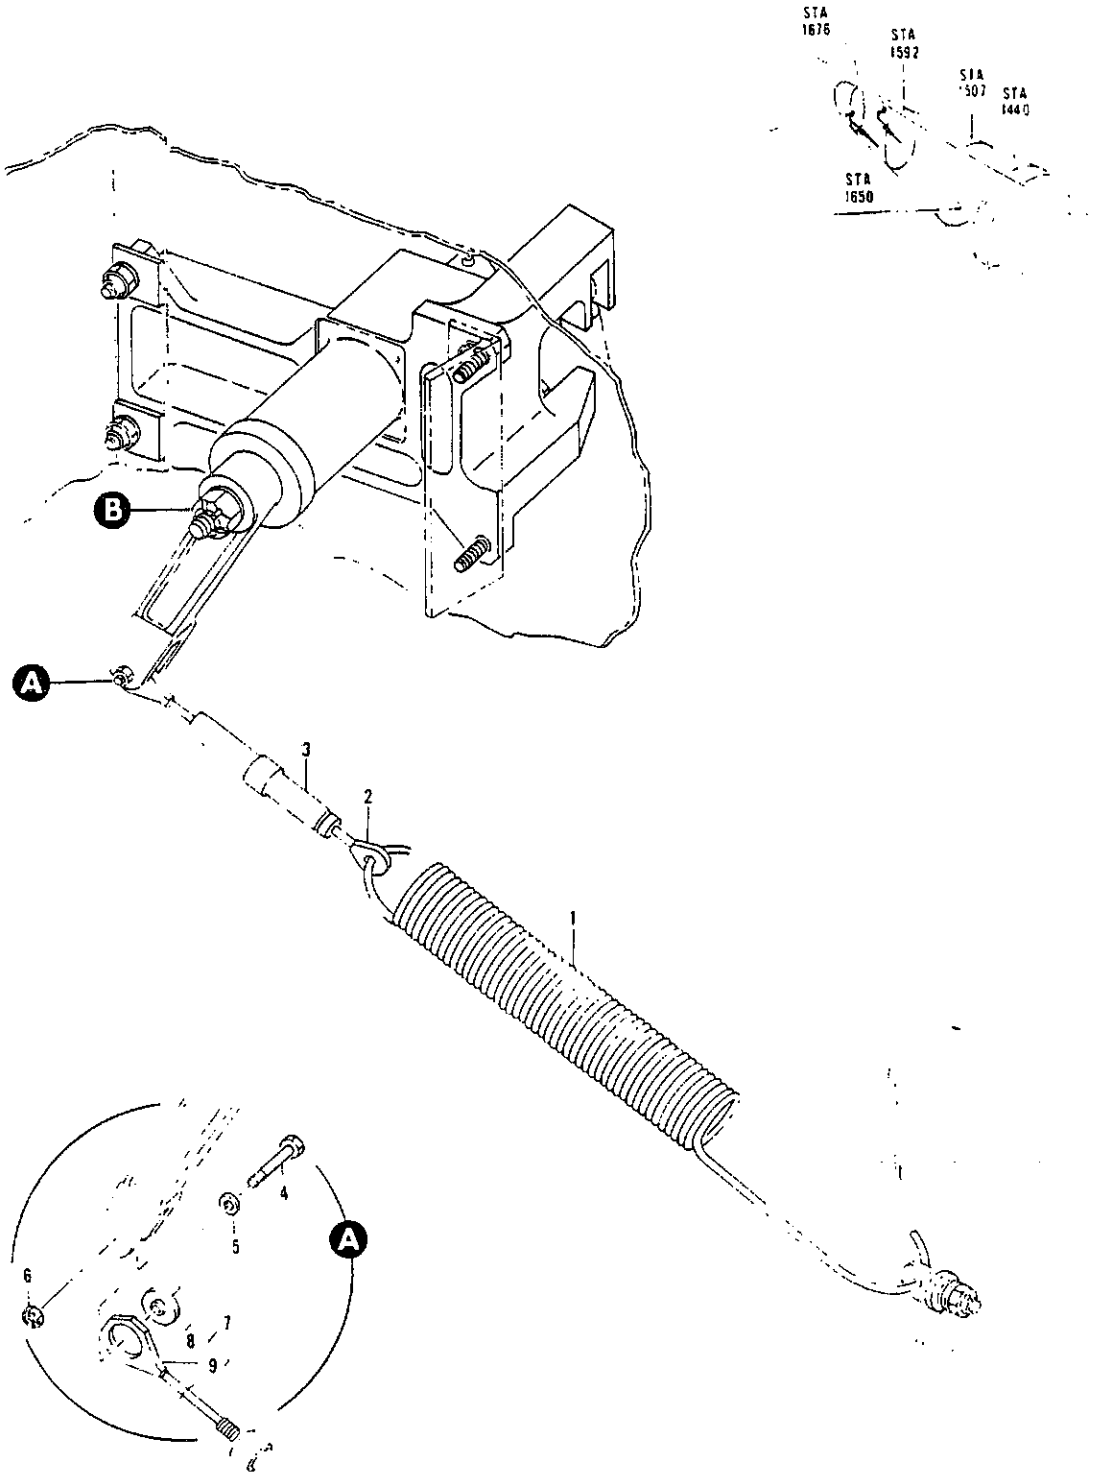


FIGURE 28. SUPPORT INSTL, ELEVATOR ANTI-BALANCE TAB (SHEET 1)

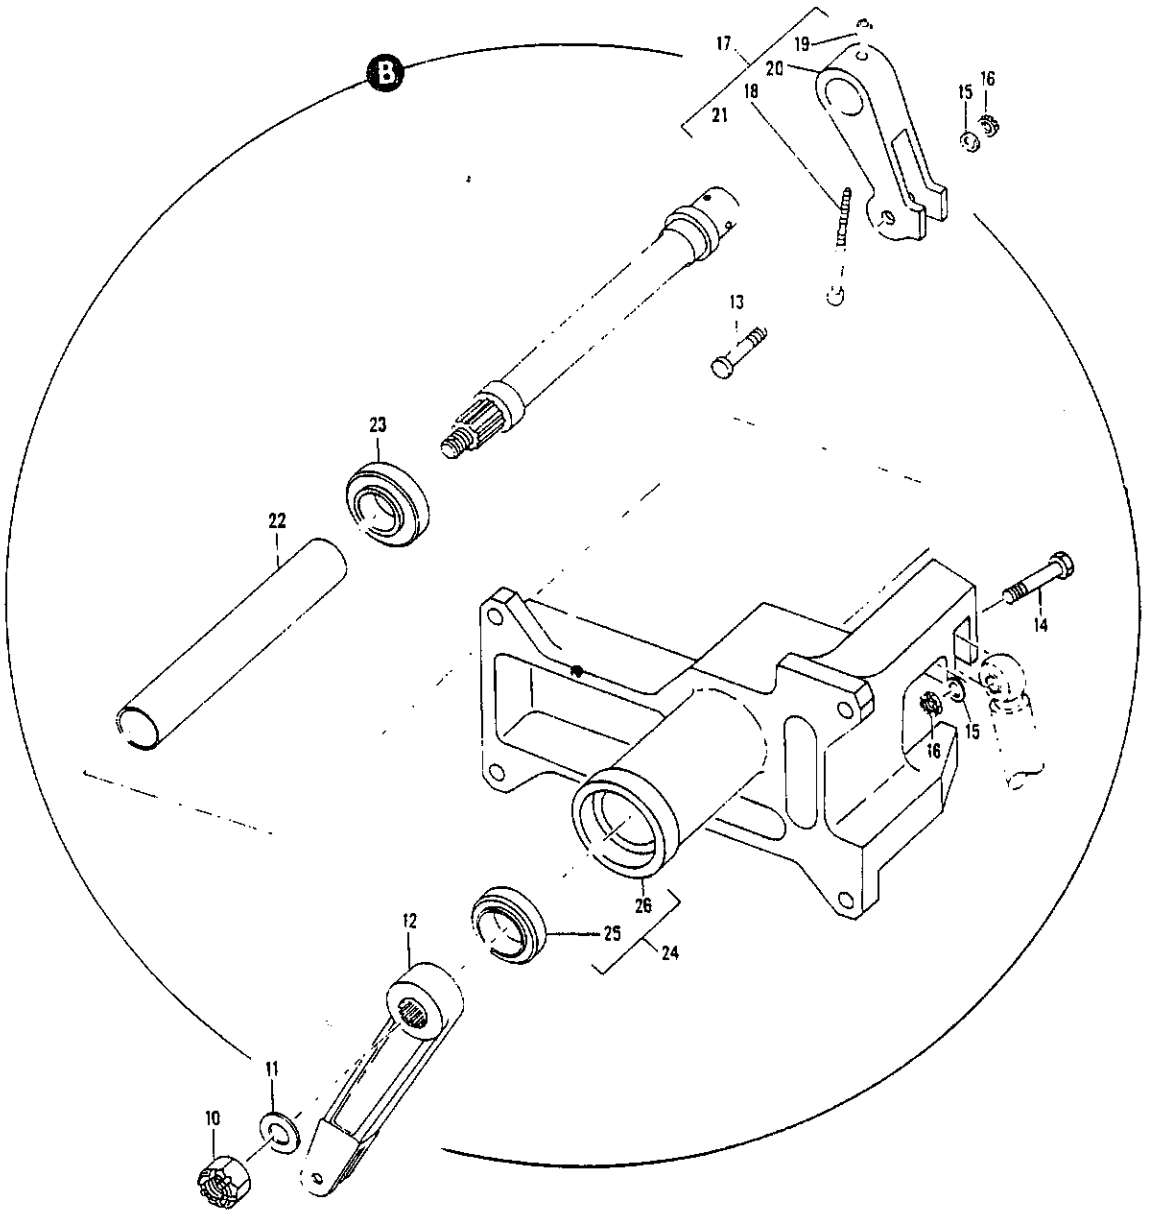


FIGURE 28. SUPPORT INSTL, ELEVATOR ANTI-BALANCE TAB (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	28	65-40091-1	SUPPORT INSTL, ELEVATOR ANTI-BALANCE TAB (LH) (SEE FIG. 6, ITEM 19)		RF
		65-40091-2	SUPPORT INSTL, ELEVATOR ANTI-BALANCE TAB (RH) (SEE FIG. 6, ITEM 20)		RF
	1	69-25099	. SPRING, ELEVATOR ANTI-BALANCE TAB		1
	2	AN170-46LL	. EYE		1
	3	AN155-46L	. BARREL		1
	4	NAS1104-12DW	. BOLT		1
	5	AN960D416	. WASHER		1
	6	AN320-4	. NUT		1
	7	66-11017	. ROD END ASSY, ELEVATOR ANTI-BALANCE TAB		1
	8	AN200KS4	. . BEARING		1
	9	66-11017-3	. . ROD END, ELEVATOR ANTI-BALANCE TAB (OPTIONAL. 66-11017-1)		1
	10	AN310D9	. NUT (OPTIONAL AN310-9)		1
	10	AN310-9	. NUT (OPTIONAL TO AN310D9)		1
	11	BACW10T916L	. WASHER		1
	12	65-27062	. ARM, ELEVATOR ANTI-BALANCE TAB		1
	13	NAS1104-16DW	. BOLT, (USED WITH 65-43047 AND 65-43047-2)		1
R	13	NAS1104-15DW	. BOLT, (USED WITH 69-25014)	0150	1
	14	NAS1104-14DW	. BOLT		1
	15	AN960D416	. WASHER		2
	16	AN320-4	. NUT		2
R	17	65-40091-3	. SHAFT ASSY, (LH ONLY)	0150	1
R	17	65-40091-7	. SHAFT ASSY, (RH ONLY)	5199	1
R	17	65-40091-4	. SHAFT ASSY, (RH ONLY)	0150	1
R	17	65-40091-6	. SHAFT ASSY, (LH ONLY)	5199	1
	18	BACB30AL6-23	. . BOLT, (USED WITH 65-43047 AND 65-43047-2)		1
R	18	BACB30AL6-20	. . BOLT, (USED WITH 69-25014)	0150	1
	19	BACC30A6	. . COLLAR		1
R	20	65-43047	. . ARM (OPTIONAL 69-25014)	0150	1
R	20	69-25014	. . ARM (OPTIONAL TO 65-43047)	0150	1
R	20	65-43047-2	. . ARM	5199	1
	21	69-9402	. . SHAFT, ELEVATOR ANTI-BALANCE TAB		1
	22	NAS43DD16-318	. SPACER		1
	23	AN201KP16A	. BEARING		1
R	24	65-44084-1	. SUPPORT ASSY, (LH ONLY)	0150	1
R	24	65-44084-7	. SUPPORT ASSY, (LH ONLY)	5199	1
R	24	65-44084-8	. SUPPORT ASSY, (RH ONLY)	5199	1
R	24	65-44084-2	. SUPPORT ASSY, (RH ONLY)	0150	1
			ATTACHING PARTS		
		AN4C11A	. BOLT (ALTERED FROM;65-44084-2)		2
		AN4C10A	. BOLT		2
		50-3361-3073	. FILLER, CONTROLS RADIUS		2
		AN960D416	. WASHER		4
		BACN10BY54W	. NUT		2
			-------*-------		
	25	AN201KP16A	. . BEARING		1
R	26	65-44084-3	. . SUPPORT, (LH ONLY)	0150	1
R	26	65-44084-9	. . SUPPORT, (LH ONLY)	5199	1
R	26	65-44084-4	. . SUPPORT, (RH ONLY)	0150	1
R	26	65-44084-10	. . SUPPORT, (RH ONLY)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

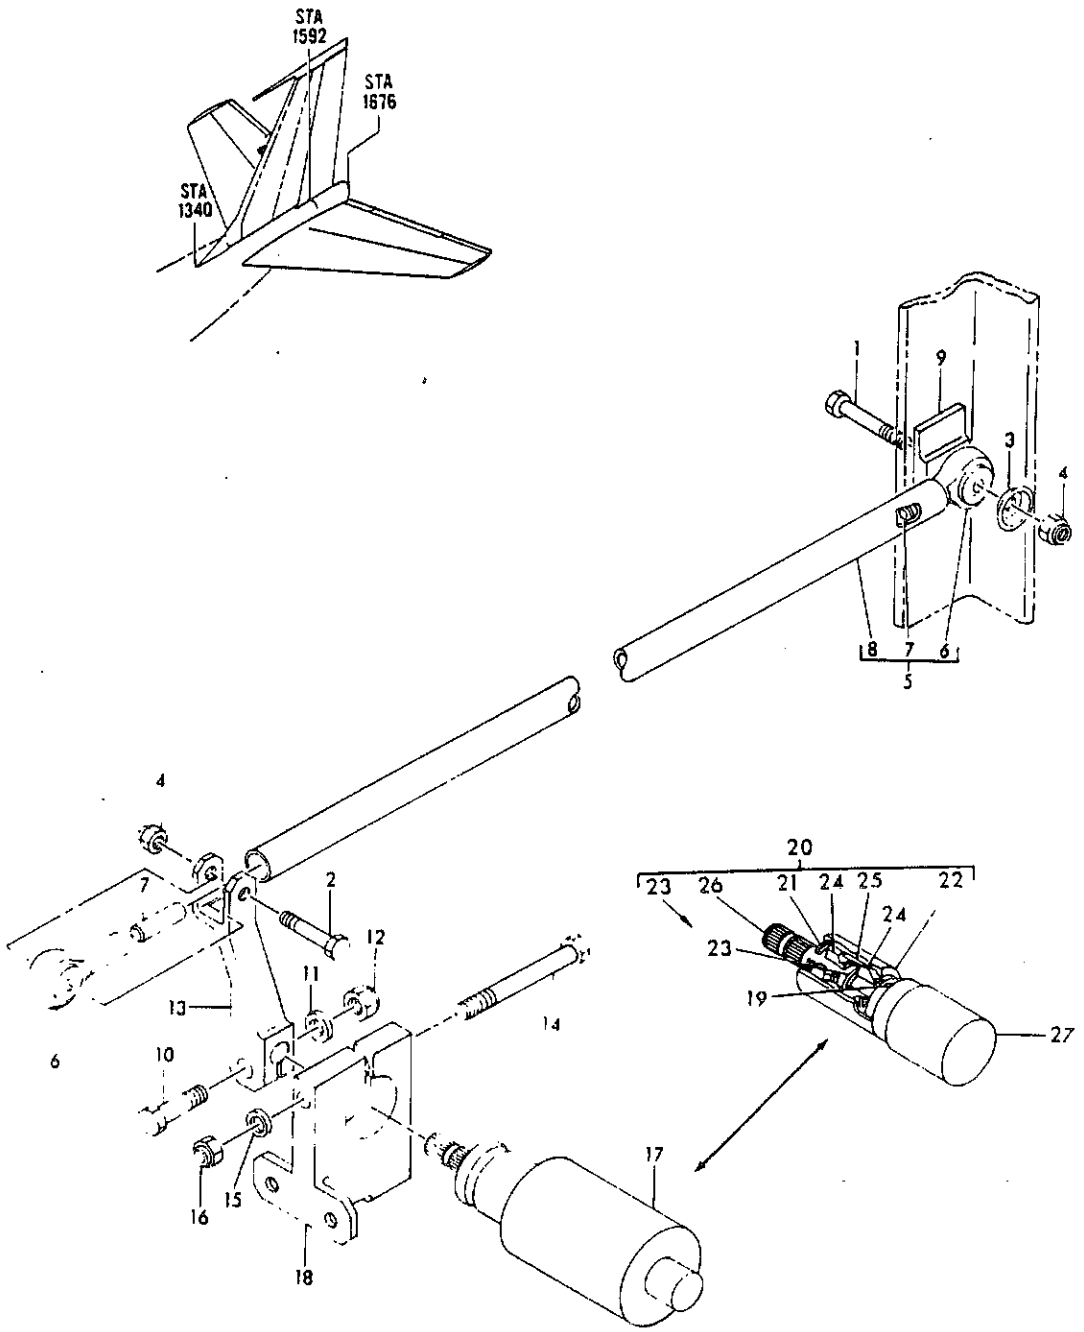


FIGURE 30. TRANSMITTER INSTL, ELEVATOR POSITION

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	30	65-58356-1	TRANSMITTER INSTL, ELEVATOR POSITION (SEE FIG. 14, ITEM 3A)	0150	RF
R	1	NAS623-3-14	. BOLT	0150	1
R	2	NAS623-3-10	. BOLT	0150	1
R	3	BACW10Q3	. WASHER	0150	1
R	4	NAS679A3W	. NUT	0150	2
R	5	69-44868-1	. ROD ASSY	0150	1
R	6	BACB10AE8	. . BEARING (OPTIONAL BACB10A455)	0150	2
R	6	BACB10A455	. . BEARING (OPTIONAL TO BACB10AE8)	0150	2
R	7	66-9445-2	. . PLUG, LEADING EDGE FLAP LINK ASSY, CONTROL	0150	2
R	8	69-44868-2	. . ROD	0150	1
R	9	69-44844-2	. SPACER	0150	1
R	10	NAS1104-10	. BOLT	0150	1
R	11	AN960D416L	. WASHER	0150	1
R	12	NAS679A4W	. NUT	0150	1
R	13	69-44866-1	. CRANK	0150	1
R	14	NAS1104-31	. BOLT	0150	1
R	15	AN960D416L	. WASHER	0150	1
R	16	NAS679A4W	. NUT	0150	1
R	17	10-3056-12	. TRANSMITTER, AUTO PILOT SYSTEM POSITION	0150	1
R	18	69-44867-1	. BRACKET	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING Intercontinental 707

PARTS CATALOG

SECTION 12

HORIZONTAL STABILIZER TRIM

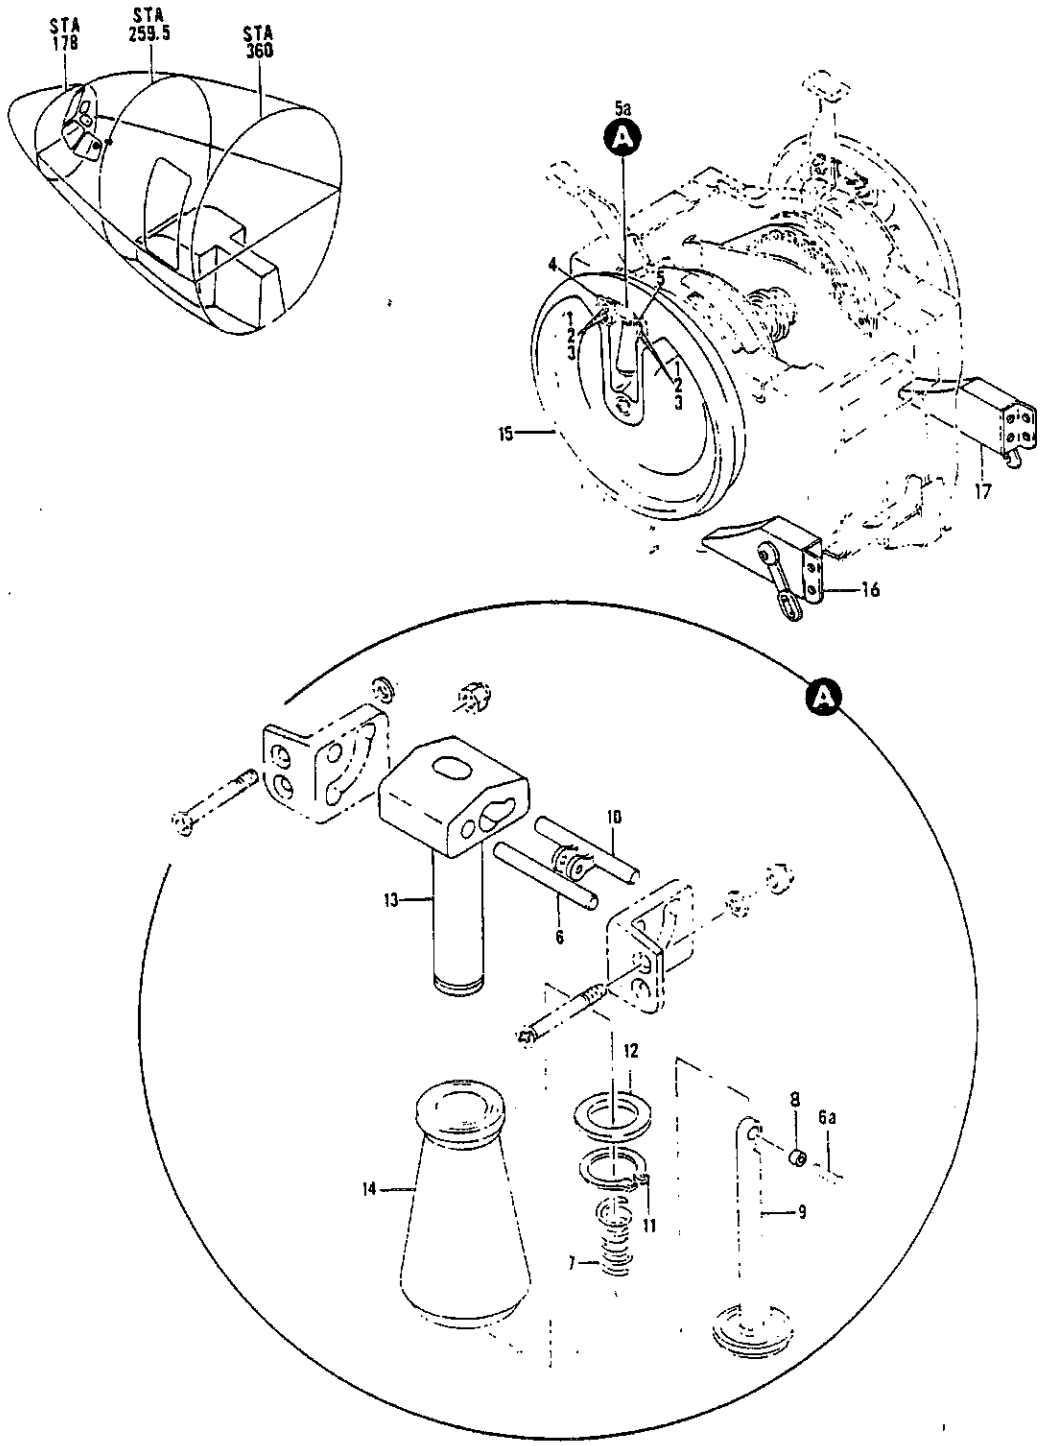
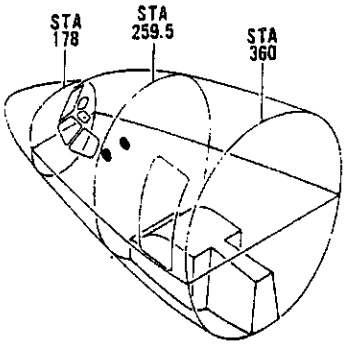


FIGURE 1. WHEEL ASSY, CONTROL STAND STABILIZER TRIM

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1	65-2992	WHEEL ASSY, CONTROL STAND STABILIZER TRIM (SEE 27-1, FIG. 8, ITEM 3) (OPTIONAL TO 65-24721-1 FIG. 2)		RF
1	NAS517-3-13	. SCREW		4
2	BACW10T10L	. WASHER		4
3	BACN10R10L	. NUT		1
4	9-50858-2003	. PLATE, CONTROL STAND STABILIZER KNOB LATCH (USED ON 65-2992)		1
5	9-50858-2004	. PLATE, CONTROL STAND STABILIZER KNOB LATCH (USED ON 65-2992)		1
5A	65-2992-1	. HANDLE ASSY, CONTROL STAND STABILIZER TRIM WHEEL (USED ON 65-2992)		1
6	9-50858-8	. . PIN, CONTROL STAND STABILIZER KNOB LATCH (USED ON 65-2992-1)		1
6A	NAS508M3	. . RIVET		1
7	3-87052	. . SPRING, STABILIZER KNOB COMPRESSION (USED ON 65-2992-1)		1
8	9-50858-6	. . BUSHING, CONTROL STAND STABILIZER KNOB (USED ON 65-2992-1)		1
9	9-50858-2001	. . BUTTON, CONTROL STAND STABILIZER KNOB (USED ON 65-2992-1)		1
10	9-50858-2	. . PIN, CONTROL STAND STABILIZER KNOB LATCH (USED ON 65-2992-1)		1
11	NAS670-50	. . RING (OPTIONAL NAS51-50)		1
11	NAS51-50	. . RING (OPTIONAL TO NAS670-50)		1
12	9-50858-7	. . WASHER, CONTROL STAND STABILIZER KNOB (USED ON 65-2992-1)		1
13	9-50858-2000	. . SPINDLE, CONTROL STAND STABILIZER KNOB (USED ON 65-2992-1)		1
14	66-2621	. . HANDLE ASSY, STABILIZER TRIM CONTROL (USED ON 65-2992-1)		1
15	65-1783	. WHEEL, STABILIZER TRIM CONTROL (USED ON 65-2992)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



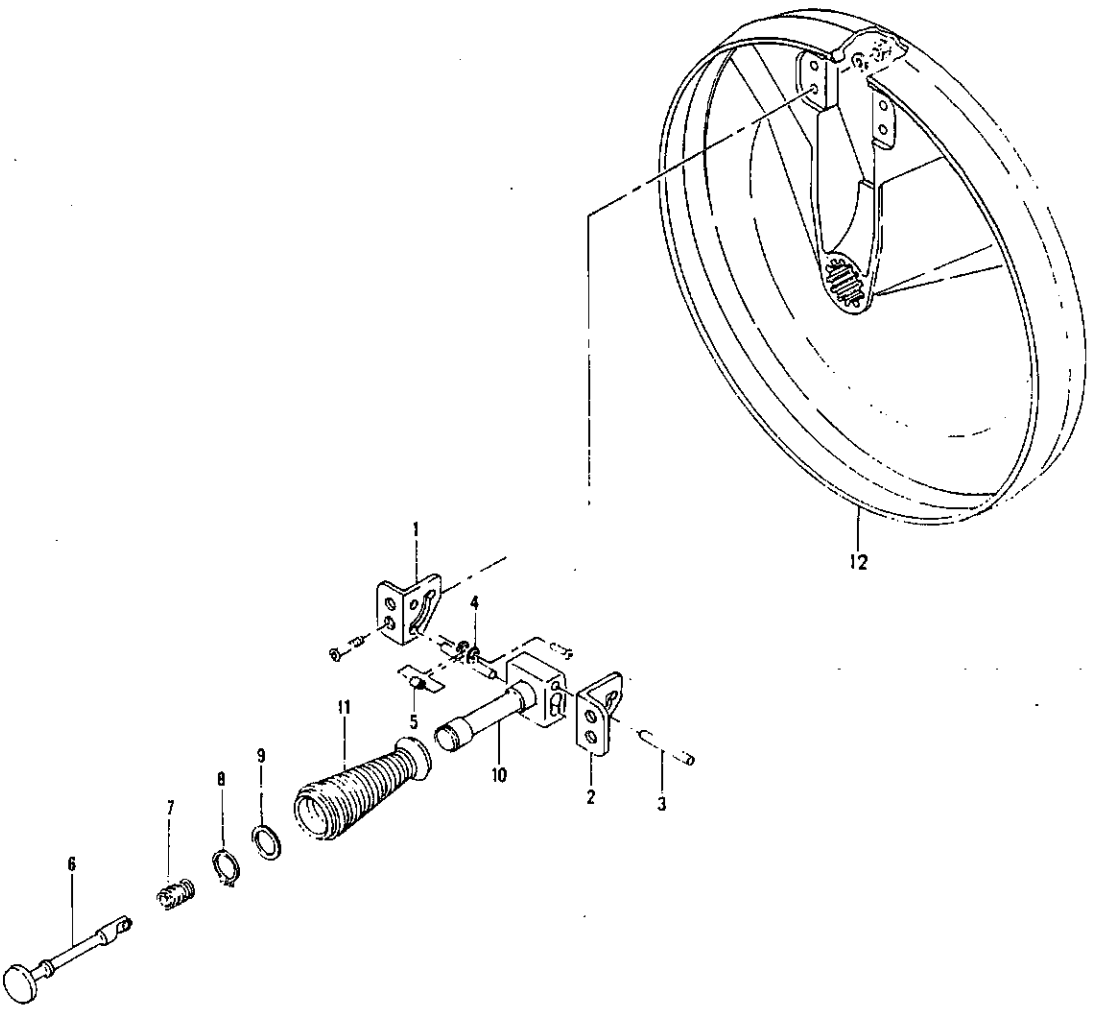
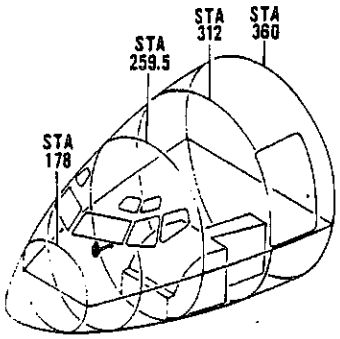


FIGURE 2. WHEEL ASSY, CONTROL STAND STABILIZER TRIM

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
2	65-24721-1	WHEEL ASSY, CONTROL STAND STABILIZER TRIM (SEE 27-1,. . FIG. 8, ITEM 3) (OPTIONAL 65-2992 FIG. 1)		RF
	65-24721-2	SPARES ASSY, CONTROL STAND STABILIZER TRIM WHEEL HANDLE (CONSISTS OF PARTS DENOTED BY (S))		RF
1	69-21293-1	. PLATE, STABILIZER TRIM WHEEL HANDLE LATCH		1
2	69-21293-2	. PLATE, STABILIZER TRIM WHEEL HANDLE LATCH		1
		ATTACHING PARTS		
	BACB30FL3-6	. BOLT.		4
	BACW10T10L	. WASHER.		4
	NAS679A3W	. NUT		4
		-------*-------		
3	S 66-16367-1	. PIN, STABILIZER TRIM WHEEL HANDLE SUPPORT		1
4	S 69-21571-1	. LATCH, STABILIZER TRIM WHEEL HANDLE		1
5	S 9-50858-6	. BUSHING, CONTROL STAND STABILIZER KNOB.		1
6	S 69-21292-1	. LATCH RELEASE, STABILIZER TRIM WHEEL HANDLE		1
7	S 3-87052	. SPRING, STABILIZER KNOB COMPRESSION		1
8	S NAS670-50	. RING.		1
		(OPTIONAL NAS51-50)		
9	S 9-50858-7	. WASHER, CONTROL STAND STABILIZER KNOB		1
10	S 69-21291-1	. SPINDLE, STABILIZER TRIM WHEEL HANDLE		1
11	S 69-21295-1	. HANDLE ASSY, STABILIZER TRIM WHEEL.		1
12	65-24722-1	. WHEEL, CONTROL STABILIZER TRIM.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



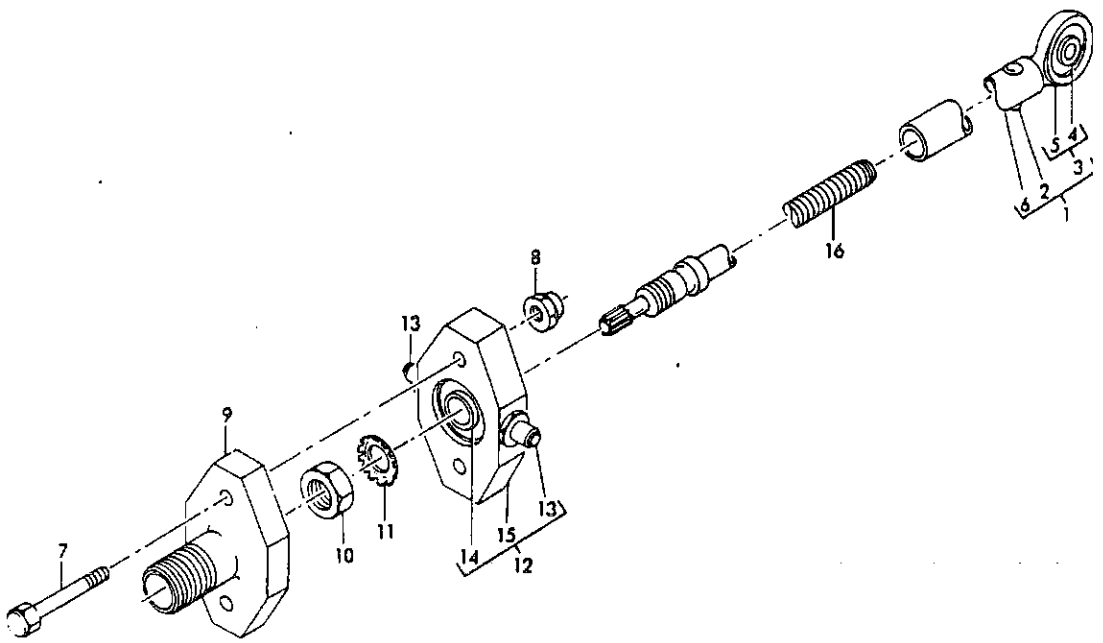


FIGURE 3. JACK ASSY, CONTROL STAND STABILIZER TRIM

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3	6-63931-1	JACK ASSY, CONTROL STAND STABILIZER TRIM (SEE 27-1, FIG. 8, ITEM 39, FIG. 8A, ITEM 26)		RF
1	6-63609-2	. NUT ASSY.		1
2	AN470D5	. . RIVET		1
3	3-86438	. . ROD END ASSY, INDICATOR		1
4	AN201KP3A	. . . BEARING		1
5	3-86438-1	. . . ROD END		1
6	6-63609-3	. . NUT		1
7	AN3-10A	. BOLT.		2
8	NAS679A3W	. NUT		2
9	3-86441	. COUPLING.		1
10	AN316-6R	. NUT		1
11	NAS460-616	. WASHER.		1
12	3-86434	. TRUNNION ASSY		1
13	BACB10D6F	. . BEARING		2
14	AN201KP6A	. . BEARING		1
15	3-86434-1	. . TRUNNION.		1
16	6-61579-1	. SCREW		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE


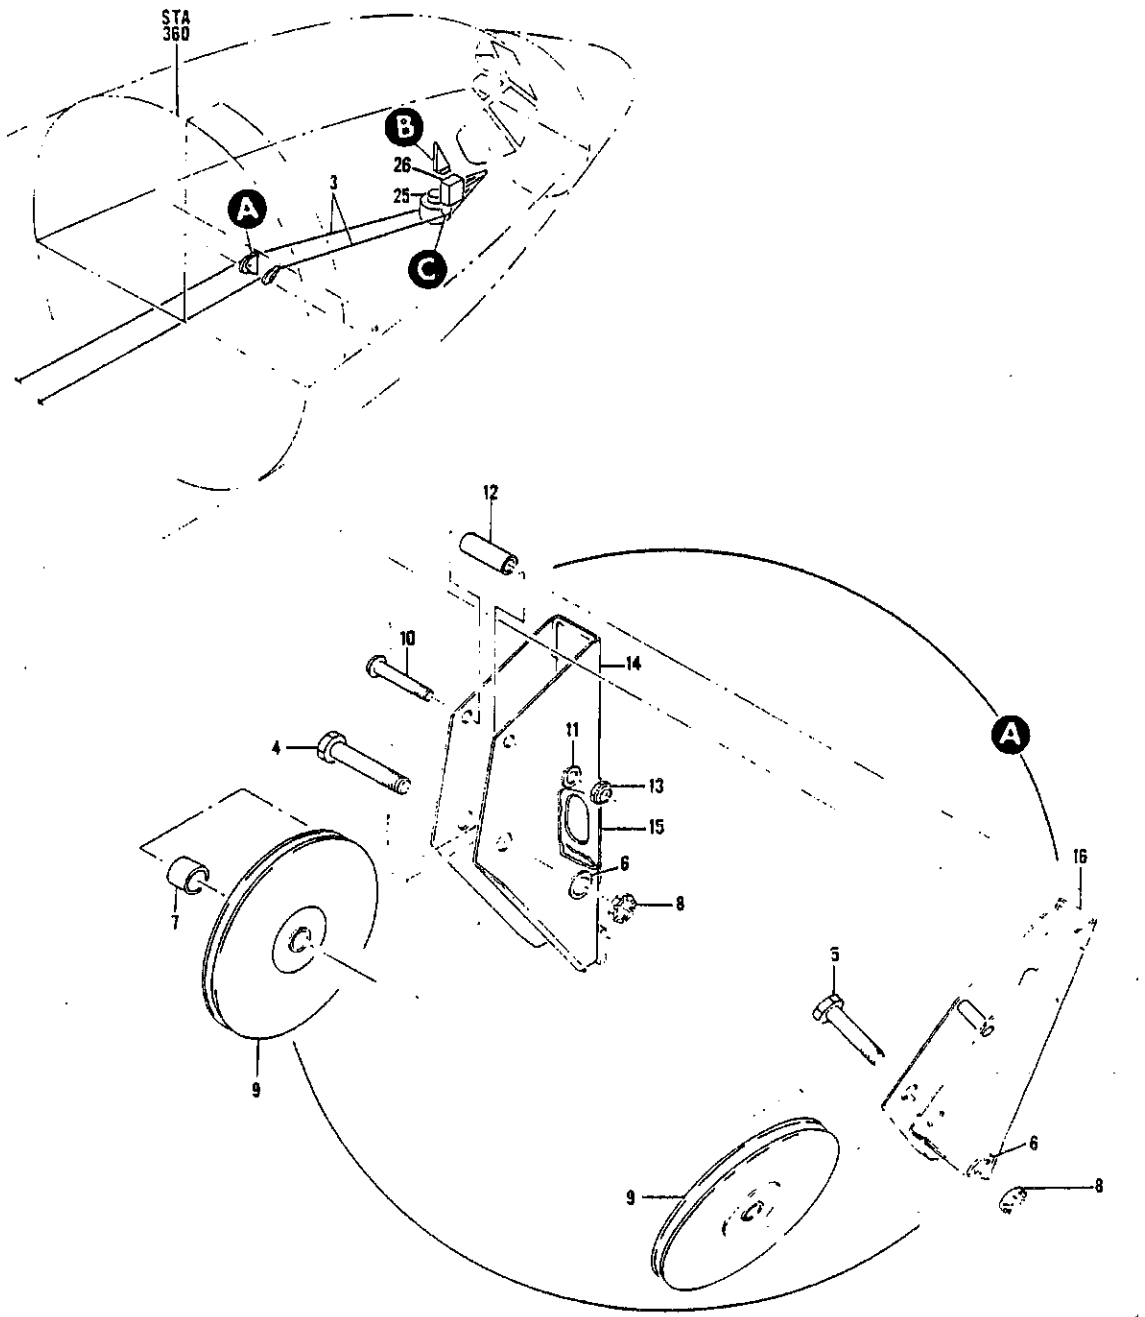


FIGURE 4. CONTROL INSTL, SECTION 51 STABILIZER TRIM (SHEET 1)

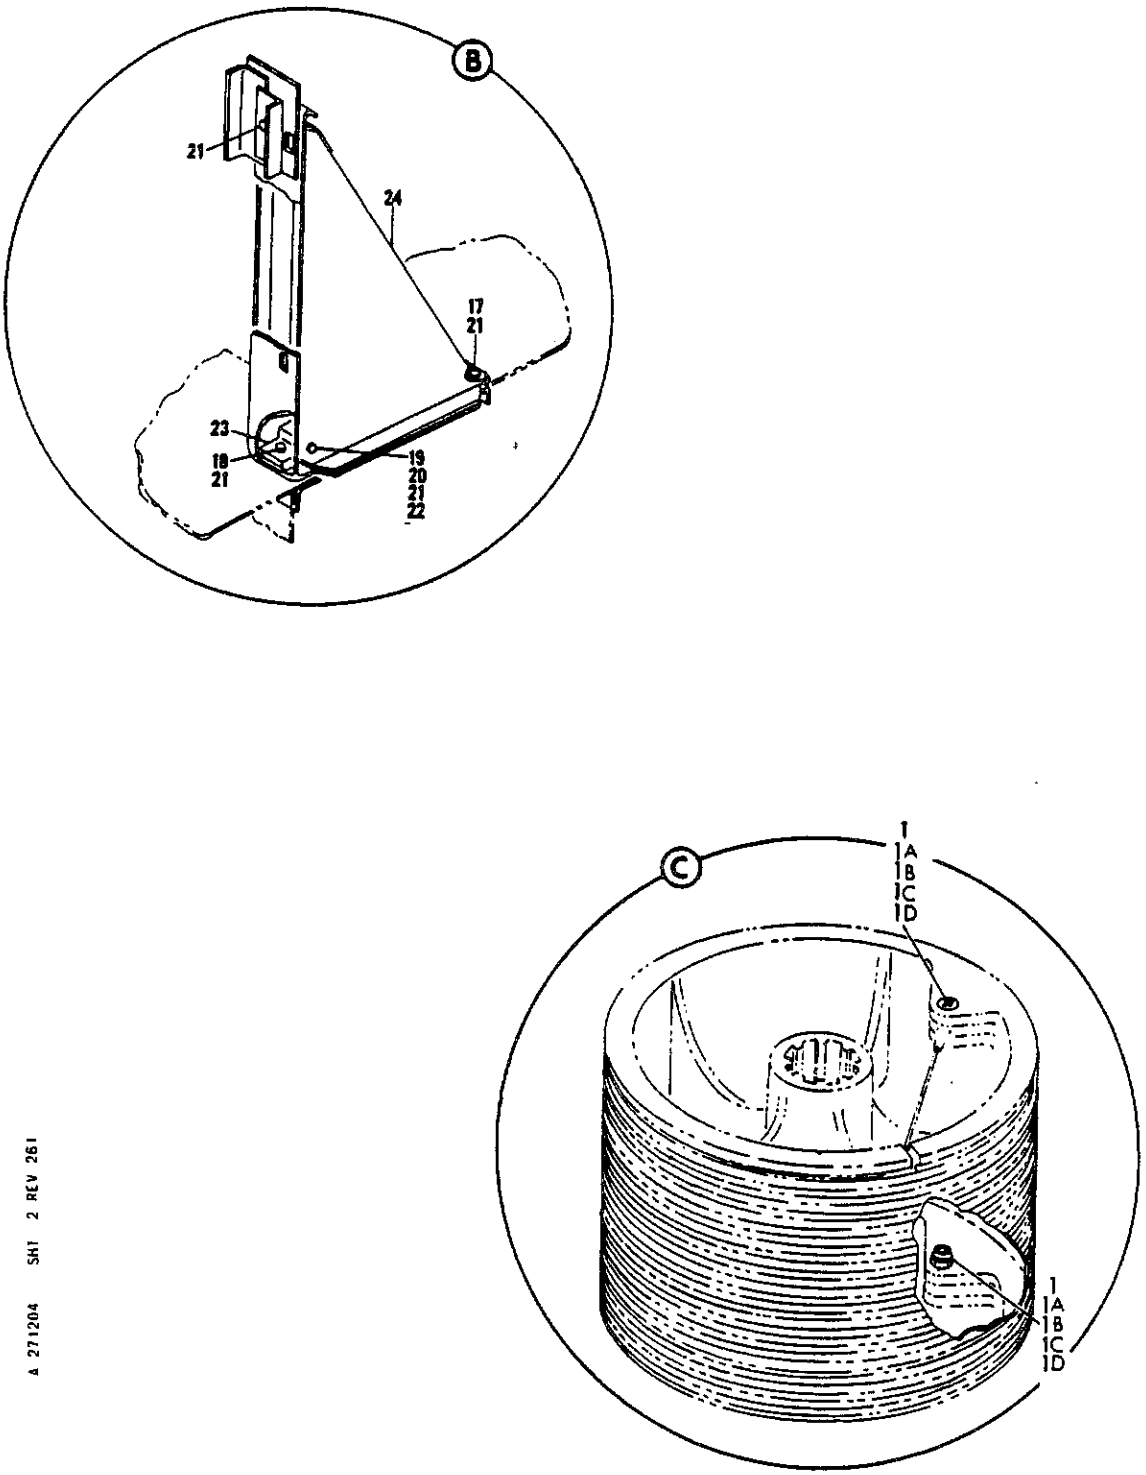

A 271204 SHT 2 REV 261

FIGURE4. CONTROL INSTL, SECTION 51 STABILIZER TRIM (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	4	50-8704-351	CONTROL INSTL, SECTION 51 STABILIZER TRIM (SEE 53-1, FIG. 1, ITEM 7 AND 53-1, FIG. 6, ITEM 2)		RF
R	1	NAS517-3-8	. SCREW		2
R	2	NAS679A3W	. NUT		2
	3	BACC13AM4T-22215	. CABLE ASSY.		2
		AN668-4	. . TERMINAL.		1
		BACT14A4	. . TERMINAL.		1
		50-8295	. BRACKET INSTL, STATION 328 STABILIZER TRIM CONTROL CABLES		1
	4	BACB30NF5-22	. . BOLT.		1
	5	BACB30NF5-12	. . BOLT.		1
	6	AN960D516	. . WASHER.		2
	7	NAS430D5-42	. . SPACER.		1
	8	BACN10JC5	. . NUT		2
	9	AN220-3	. . PULLEY.		2
	10	NAS221-29	. . SCREW		1
	11	AN960D10	. . WASHER.		1
	12	NAS42DD6-82	. . SPACER.		1
	13	BACN10BY53W	. . NUT		1
	14	69-50057-1	. . BRACKET ASSY, STATION 328 STABILIZER TRIM (OPTIONAL 90-7828-10)		1
	14	90-7828-10	. . BRACKET ASSY, STATION 328 STABILIZER TRIM (OPTIONAL TO 69-50057-1)		1
	15	30-3097	. . . FAIRLEAD, STATION 328 STABILIZER TRIM CABLE		1
	16	69-50057-2	. . BRACKET ASSY, STATION 328 STABILIZER TRIM (OPTIONAL 90-7828-9)		1
	16	90-7828-9	. . BRACKET ASSY, STATION 328 STABILIZER TRIM (OPTIONAL TO 69-50057-2)		1
		65-19011	. SHROUD INSTL, STABILIZER CONTROL TRIM CHAIN		1
	17	AN3-5A	. . BOLT.		1
	18	AN3-11A	. . BOLT.		1
	19	AN3-16A	. . BOLT.		1
	20	AN960D10L	. . WASHER.		1
	21	AN960D10	. . WASHER.		4
	22	BACN10BY53W	. . NUT		1
	23	66-35067	. . BLOCK, STABILIZER TRIM CHAIN SHROUD		1
	24	69-47011-3	. . SHROUD ASSY, STABILIZER TRIM CHAIN.		1
R R	25	5-89856-3003	. MECHANISM INSTL, SECTION 51 STABILIZER TRIM (SEE FIG. 5)	0150	1
R R	25	5-89856-3009	. MECHANISM INSTL, SECTION 51 STABILIZER TRIM (SEE FIG. 5A)	5199	1
R	26	65-43713-1	. BRAKE INSTL, STABILIZER TRIM SYSTEM (SEE FIG. 5A)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

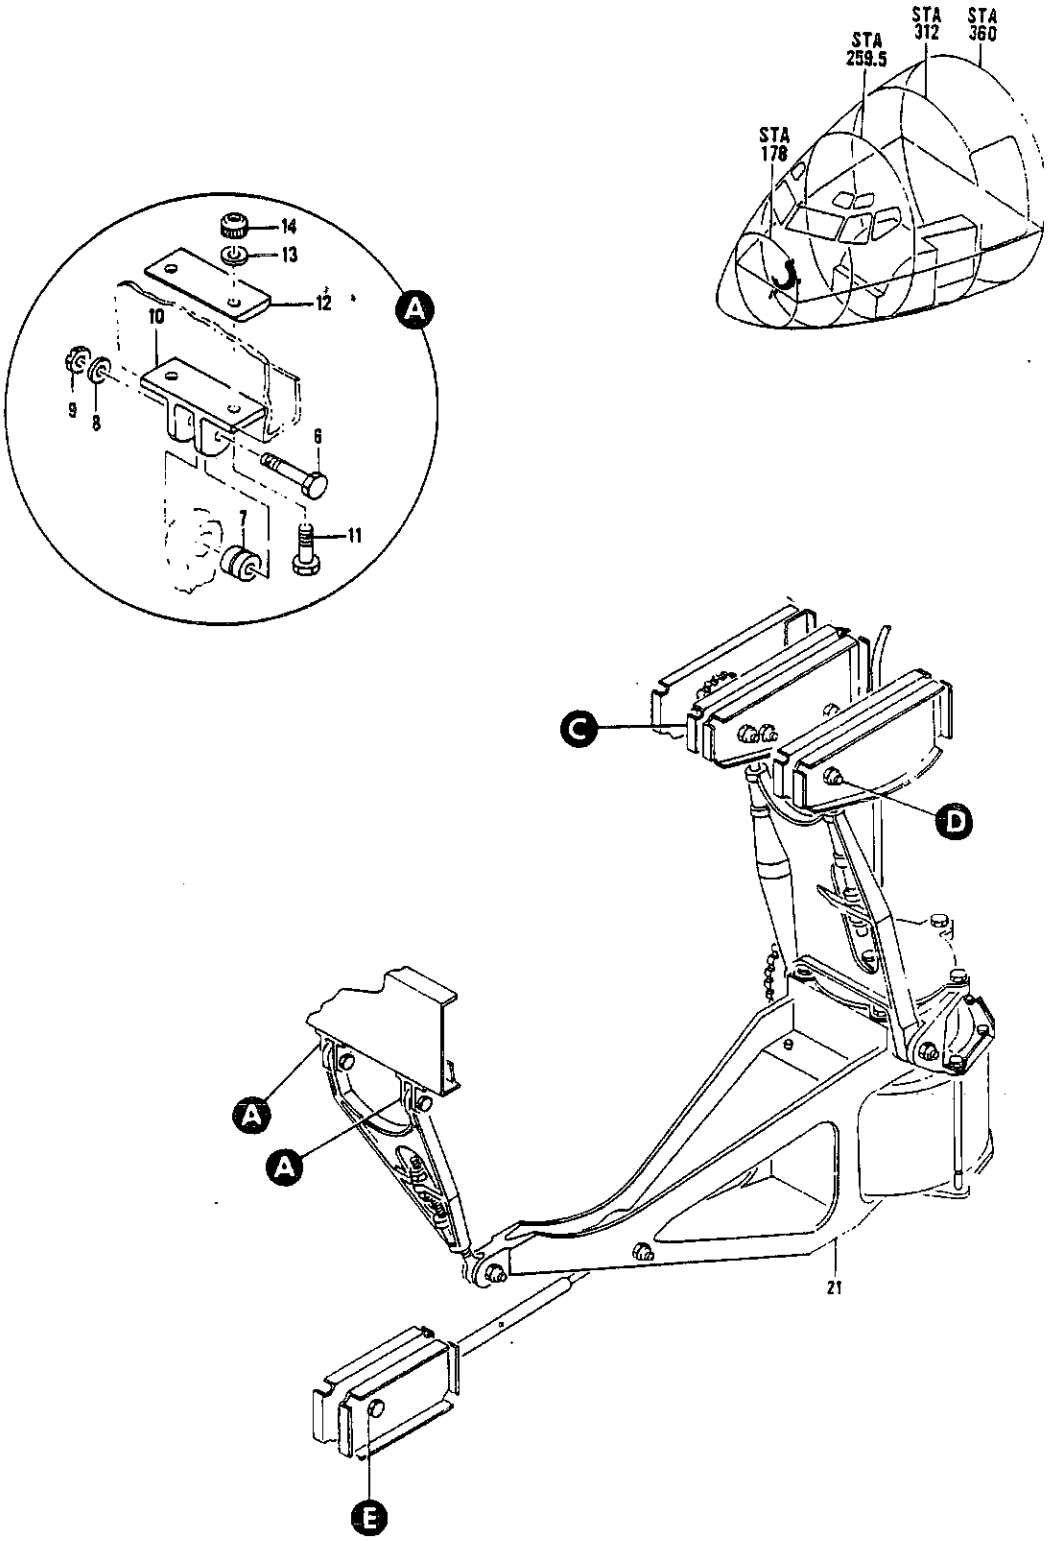


FIGURE 5. MECHANISM INSTL, SECTION 51 STABILIZER TRIM (SHEET 1)

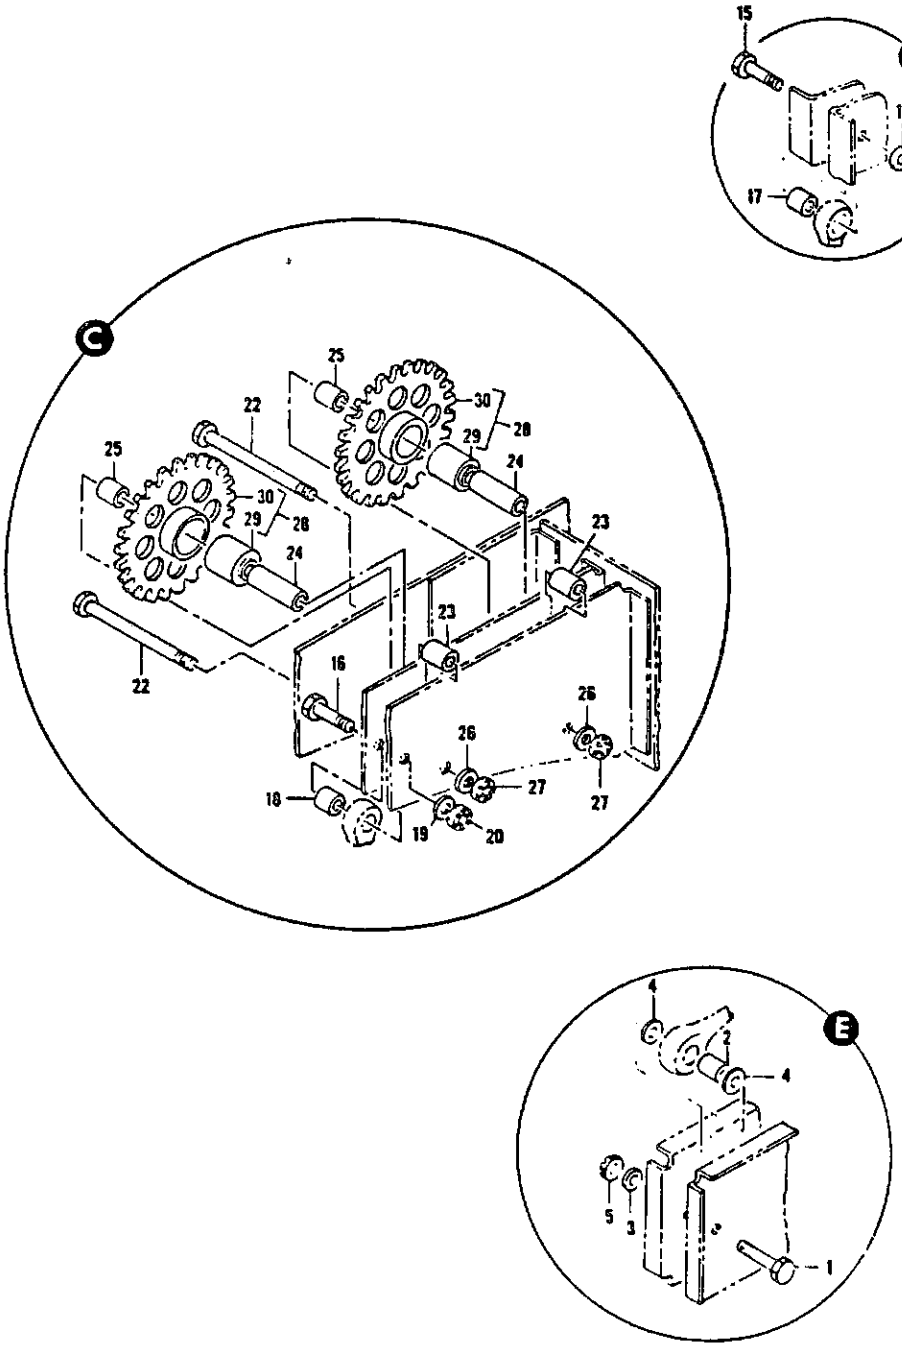


FIGURE 5. MECHANISM INSTL, SECTION 51 STABILIZER TRIM (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	5	5-89856-3003	MECHANISM INSTL, SECTION 51 STABILIZER TRIM (SEE FIG. 4, ITEM 25)	0150	RF
R	1	NAS1104-12DW	. BOLT.	0150	1
R	2	NAS75-4-020	. BUSHING	0150	1
R	3	AN960D416	. WASHER.	0150	1
R	4	AN960D616	. WASHER.	0150	2
R	5	AN320-4	. NUT	0150	1
R	6	NAS1104-13DW	. BOLT.	0150	2
R	7	NAS73-4-008	. BUSHING	0150	2
R	8	AN960D416	. WASHER.	0150	2
R	9	AN320-4	. NUT	0150	2
R	10	6-84571	. FITTING, STABILIZER TRIM SUPPORT LINK	0150	2
R	11	AN4-7A	. BOLT.	0150	4
R	12	50-3361-22	. FILLER, CONTROLS RADIUS	0150	2
R	13	AN960D416	. WASHER.	0150	4
R	14	BACN10EP4	. NUT	0150	4
R	15	NAS1104-10DW	. BOLT.	0150	1
R	16	NAS1104-12DW	. BOLT.	0150	1
R	17	NAS75-4-016	. BUSHING	0150	1
R	18	NAS75-4-020	. BUSHING	0150	1
R	19	AN960D416	. WASHER.	0150	2
R	20	AN320-4	. NUT	0150	2
R	21	5-89856-3012	. MECHANISM ASSY, SECTION 51 STABILIZER TRIM FORWARD. (SEE FIG. 6) (OPTIONAL TO 5-89856-3014)	0150	1
R	21	5-89856-3014	. MECHANISM ASSY, SECTION 51 STABILIZER TRIM FORWARD. (SEE FIG. 6) (OPTIONAL 5-89856-3012)	0150	1
R	22	NAS1104-56DW	. BOLT.	0150	2
R	23	NAS43DD4-40	. SPACER.	0150	2
R	24	NAS43DD4-83	. SPACER.	0150	2
R	25	NAS43DD4-35	. SPACER.	0150	2
R	26	AN960D416	. WASHER.	0150	2
R	27	AN320-4	. NUT	0150	2
R	28	6-65252	. SPROCKET ASSY, STABILIZER TRIM IDLER.	0150	2
R	29	BACB10A120	. . BEARING	0150	1
R	30	6-65252-1	. . SPROCKET, STABILIZER TRIM IDLER	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

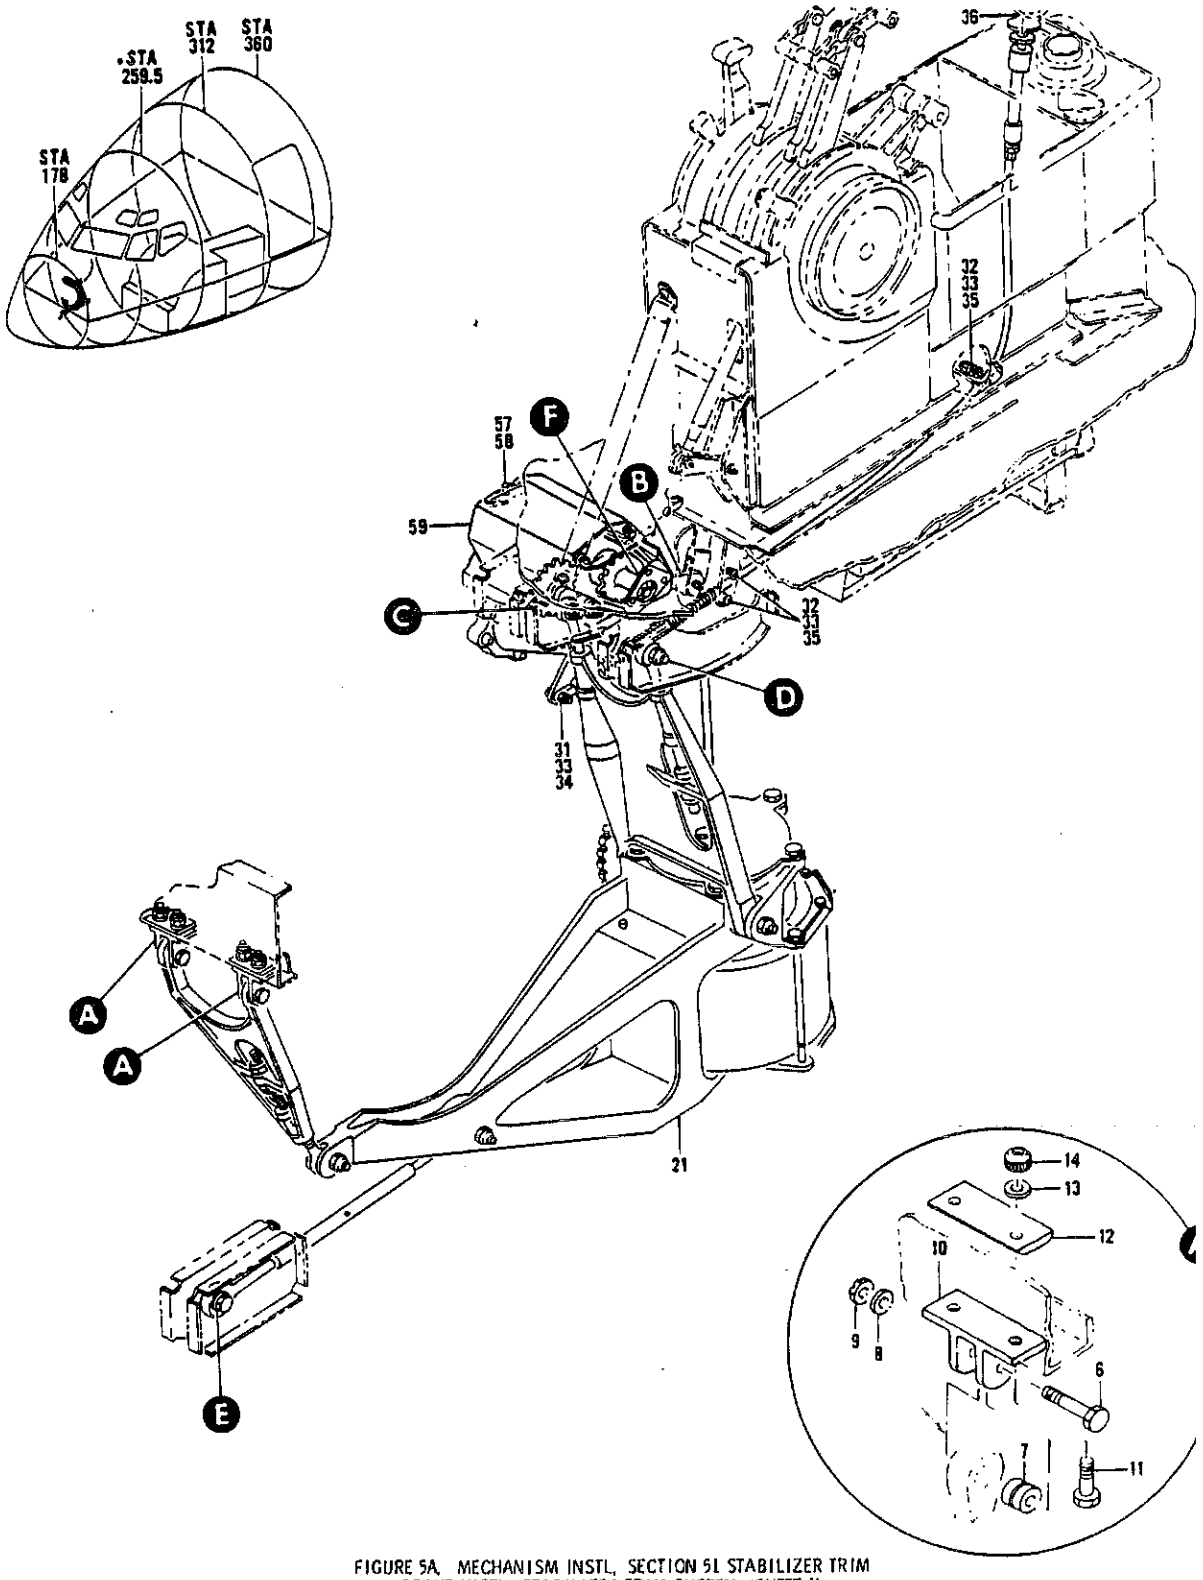


FIGURE 5A. MECHANISM INSTL, SECTION 51 STABILIZER TRIM BRAKE INSTL, STABILIZER TRIM SYSTEM (SHEET 1)

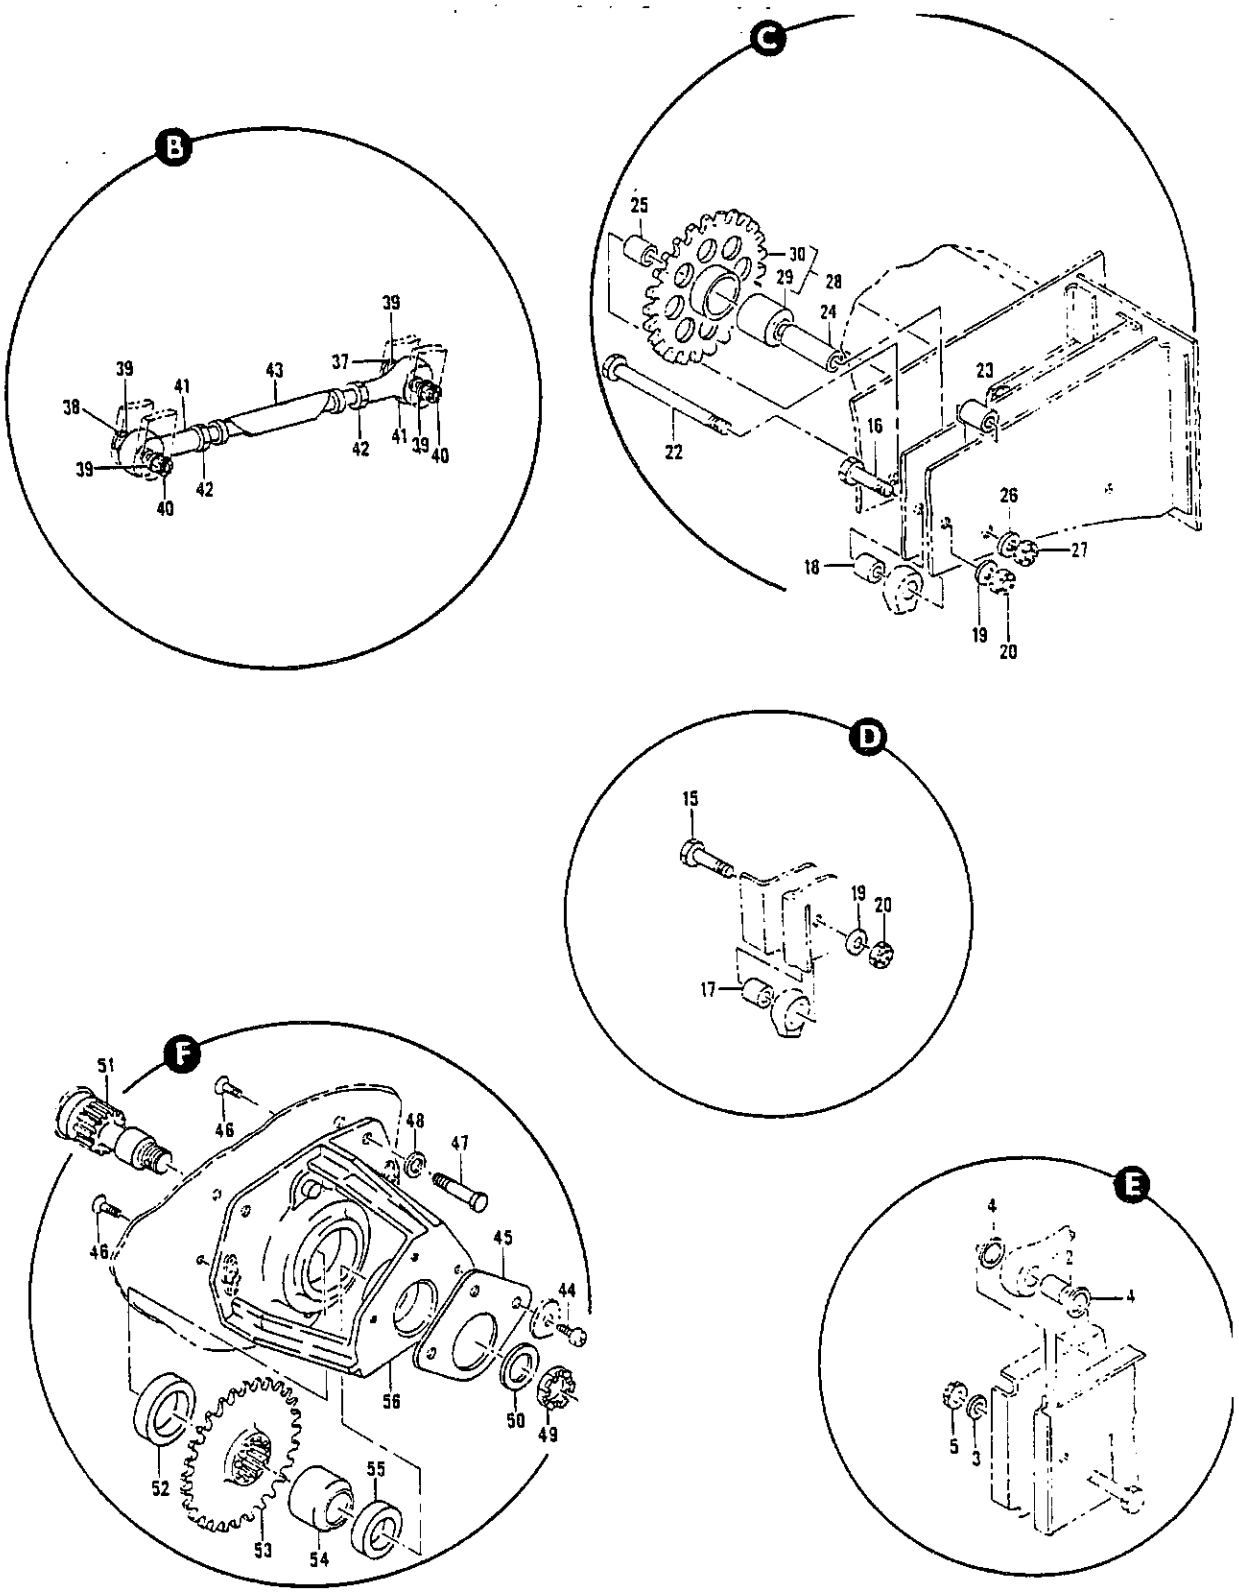


FIGURE 5A. MECHANISM INSTL, SECTION 51 STABILIZFR TRIM BRAKE INSTL, STABILIZER TRIM SYSTEM (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	5A		MECHANISM INSTL, SECTION 51 STABILIZER TRIM	5199	
R			BRAKE INSTL, STABILIZER TRIM SYSTEM	5199	
R		5-89856-3009	. MECHANISM INSTL, SECTION 51 STABILIZER TRIM (SEE FIG. 4, ITEM 25)	5199	RF
R	1	NAS1104-12DW	. . BOLT	5199	1
R	2	NAS75-4-020	. . BUSHING	5199	1
R	3	AN960D416	. . WASHER	5199	1
R	4	AN960D616	. . WASHER	5199	2
R	5	AN320-4	. . NUT	5199	1
R	6	NAS1104-13DW	. . BOLT	5199	2
R	7	NAS73-4-008	. . BUSHING	5199	2
R	8	AN960D416	. . WASHER	5199	2
R	9	AN320-4	. . NUT	5199	2
R	10	6-84571	. . FITTING, STABILIZER TRIM SUPPORT LINK ATTACHING PARTS	5199	2
R	11	AN4-7A	. . BOLT	5199	4
R	12	50-3361-22	. . FILLER, CONTROLS RADIUS	5199	2
R	13	AN960D416	. . WASHER	5199	4
R	14	BACN10EP4	. . NUT	5199	4
			-------*--------		
R	15	NAS1104-10DW	. . BOLT	5199	1
R	16	NAS1104-12DW	. . BOLT	5199	1
R	17	NAS75-4-016	. . BUSHING	5199	1
R	18	NAS75-4-020	. . BUSHING	5199	1
R	19	AN960D416	. . WASHER	5199	2
R	20	AN320-4	. . NUT	5199	2
R	21	5-89856-3016	. . MECHANISM ASSY, SECTION 51 STABILIZER TRIM FORWARD (SEE FIG. 6)	5199	1
R	22	NAS1104-56D	. . BOLT	5199	1
R	23	NAS43DD4-40	. . SPACER	5199	1
R	24	NAS43DD4-83	. . SPACER	5199	1
R	25	NAS43DD4-35	. . SPACER	5199	1
R	26	AN960D416	. . WASHER	5199	1
R	27	AN320-4	. . NUT	5199	1
R	28	6-65252	. . SPROCKET ASSY, STABILIZER TRIM IDLER	5199	1
R	29	BACB10A120	. . . BEARING	5199	1
R	30	6-65252-1	. . . SPROCKET, STABILIZER TRIM IDLER	5199	1
R		65-43713-1	. BRAKE INSTL, STABILIZER TRIM SYSTEM (SEE FIG. 4, ITEM 26)	5199	RF
R	31	BACS12CA3-7	. . SCREW	5199	1
R	32	NAS623-3-1	. . SCREW	5199	3
R	33	AN960D10L	. . WASHER	5199	4
R	34	AN320-3	. . NUT	5199	1
R	35	NAS679A3	. . NUT	5199	3
R	36	40174-2	. . PUSH PULL ASSY, (V78710)	5199	1
R	M 36A	20529	. . . KNOB, (V78710)	5199	1
R	M 36B	MS171528	. . . PIN, SPRING	5199	1
R	37	BACS12CA3-11	. . SCREW	5199	1
R	38	BACS12CA3-12	. . SCREW	5199	1
R	39	AN960D10L	. . WASHER	5199	4
R	40	AN320-3	. . NUT	5199	2
R	41	BACB10A449	. . BEARING	5199	2
R	42	AN316-5	. . NUT	5199	2
R	43	NAS358-82-590	. . TUBE ASSY	5199	1
R	44	NAS623-3-3	. . SCREW	5199	3
R	45	66-17344-1	. . SHIM, STABILIZER BRAKE SYSTEM LAMINATED	5199	AR
R	46	BACB30FL3-2	. . BOLT	5199	2
R	47	BACB30AK4-5	. . BOLT	5199	3
R	48	BACW10T416L	. . WASHER	5199	3
R	49	AN320-7	. . NUT (OPTIONAL TO BACN10JC7)	5199	1
R	49	BACN10JC7	. . NUT (OPTIONAL AN320-7)	5199	1
R	50	AN960D716	. . WASHER	5199	1
R	51	69-22603-1	. . SHAFT, STABILIZER TRIM SYSTEM BRAKE	5199	1
R	52	BACB10A28DD	. . BEARING	5199	1
R	53	69-22496-1	. . SPROCKET, STABILIZER TRIM SYSTEM BRAKE	5199	1
R	54	66-16869-1	. . SPACER, STABILIZER BRAKE SYSTEM	5199	1
R	55	BACB10A27DD	. . BEARING	5199	1
R	56	65-28461-3	. . SUPPORT ASSY, STABILIZER BRAKE SYSTEM SPROCKET	5199	1
R	57	NAS1304-4	. . BOLT	5199	1
R	58	BACW10T416L	. . WASHER	5199	1
R	59	10-60822-4	. . BRAKE, STABILIZER TRIM SYSTEM	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

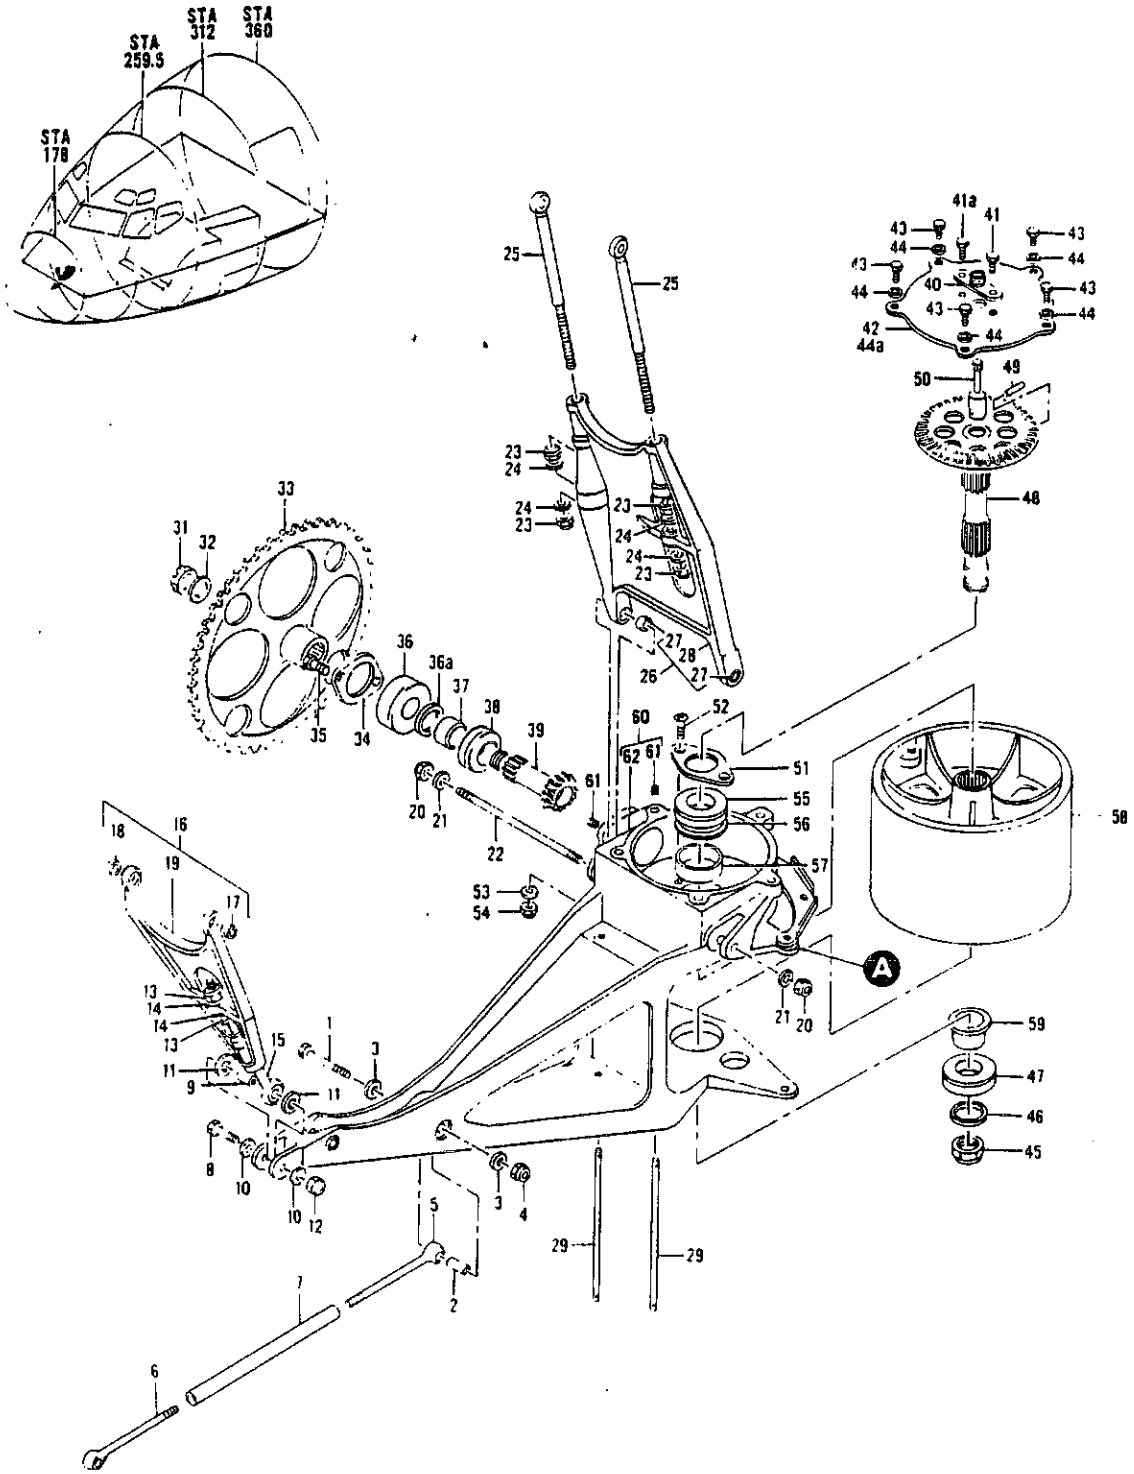


FIGURE 6. MECHANISM ASSY, SECTION 5L STABILIZER TRIM FORWARD (SHEET 1)

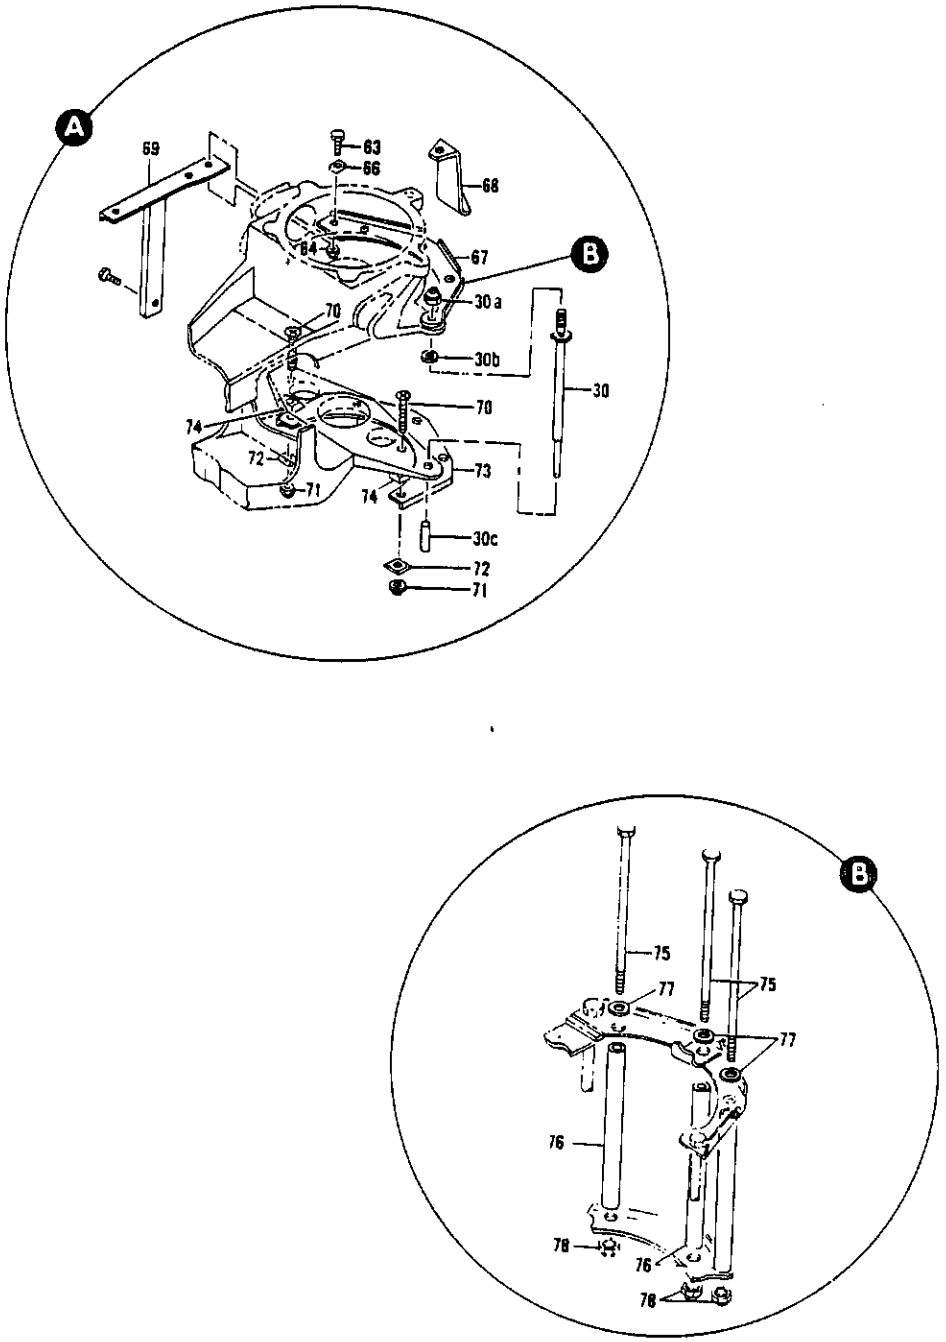


FIGURE 6. MECHANISM ASSY, SECTION 51 STABILIZER TRIM FORWARD (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	6	5-89856-3012	MECHANISM ASSY, SECTION 51 STABILIZER TRIM FORWARD. . .	0150	RF
R			(SEE FIG. 5A, ITEM 21)		
R			(OPTIONAL TO 5-89856-3014)		
R		5-89856-3014	MECHANISM ASSY, SECTION 51 STABILIZER TRIM FORWARD. . .	0150	RF
R			(SEE FIG. 5A, ITEM 21)		
R			(OPTIONAL 5-89856-3012)		
R		5-89856-3016	MECHANISM ASSY, SECTION 51 STABILIZER TRIM FORWARD. . .	5199	RF
R			(SEE FIG. 5A, ITEM 21)		
	1	NAS1104-21DW	. BOLT.		1
	2	NAS75-4-024	. BUSHING		1
	3	NAS1197-416	. WASHER.		2
	4	AN320-4	. NUT		1
	5	6-84532-1	. EYEBOLT, TURNBUCKLE		1
	6	6-84532	. EYEBOLT, TURNBUCKLE		1
	7	6-84540	. TURNBUCKLE.		1
	8	NAS1104-18DW	. BOLT.		1
	9	NAS75-4-020	. BUSHING		1
	10	NAS1197-416	. WASHER.		2
	11	NAS1197-616	. WASHER.		2
	12	AN320-4	. NUT		1
	13	NAS679A6	. NUT		2
	14	NAS1197-616	. WASHER.		2
	15	6-84580	. EYEBOLT, LINK		1
R	16	5-97275	. LINK ASSY, SUPPORT.	0150	1
R	16	5-97275	. LINK ASSY, SUPPORT (USED ON 5-89856-3012)	0150	1
R	16	5-97275-3	. LINK ASSY, SUPPORT (USED ON 5-89856-3014)	0150	1
R	16	5-97275-3	. LINK ASSY, SUPPORT (USED ON 5-89856-3014 AND -3016)	5199	1
	17	NAS75-7-016	. . BUSHING		1
	18	NAS75-7-012	. . BUSHING		1
R	19	5-97275-1	. . LINK.	0150	1
R	19	5-97275-1	. . LINK, (USED ON 5-97275)	0150	1
R	19	5-97275-4	. . LINK, (USED ON 5-97275-3)	0150	1
R	19	5-97275-4	. . LINK.	5199	1
	20	AN320-5	. NUT		2
	21	NAS1197-516	. WASHER.		2
			(OPTIONAL NAS1197-516L)		
	21	NAS1197-516L	. WASHER.		2
			(OPTIONAL TO NAS1197-516)		
	22	6-84589	. STUD, THREADED.		1
	23	NAS679A6	. NUT		4
	24	NAS1197-616	. WASHER.		4
	25	6-84580	. EYEBOLT, LINK		2
R	26	5-97220	. LINK ASSY, SUPPORT.	0150	1
R	26	5-97220	. LINK ASSY, SUPPORT (USED ON 5-89856-3012)	0150	1
R	26	5-97220-3	. LINK ASSY, SUPPORT (USED ON 5-89856-3014)	0150	1
R	26	5-97220-3	. LINK ASSY, SUPPORT (USED ON 5-89856-3014 AND -3016)	5199	1
	27	NAS75-5-016	. . BUSHING		2
R	28	5-97220-1	. . LINK, (USED ON 5-97220)	0150	1
R	28	5-97220-1	. . LINK.	0150	1
R	28	5-97220-4	. . LINK, (USED ON 5-97220-3)	0150	1
R	28	5-97220-4	. . LINK.	5199	1
R	28	5-97220-4	. . LINK, (USED ON 5-97220-3)	0150	1
R			(DELETED BY SB 3119)		
	29	BACP18C4-692	. PIN		2
	30	66-8982	. PIN, DRUM PULLEY GUARD.		1
	30A	NAS679A4W	. NUT		1
	30B	NAS1197-416L	. WASHER.		1
	30C	66-9040	. SLEEVE, DRUM CABLE GUARD RETAINER		1
	31	AN320-12	. NUT		1
	32	AN960-1216	. WASHER.		1
	33	65-72062	. SPROCKET.		1
	34	60-1450-1	. PLATE, BEARING RETAINER		1
			ATTACHING PARTS		
	35	AN4H3A	. BOLT.		2
			-------*-------		
	36	BACB10A353	. BEARING		1
	36A	9-61297-14	. SHIM, LAMINATED		AR
	37	30-1517	. SPACER, PINION.		1
	38	BACB10A117	. BEARING		1
	39	9-66038	. PINION.		1
	40	6-83852	. FITTING, POSITION INDICATOR SHAFT		1
			ATTACHING PARTS		
	41	AN4-3A	. BOLT.		1
	41A	AN4H3A	. BOLT.		1
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
6 42	9-66008	. COVER ASSY, GEAR HOUSING.		1
		ATTACHING PARTS		
43	AN4H3A	. BOLT.		5
44	AN960D416	. WASHER.		5
		-------*-------		
44A	9-66008-1	. . COVER, GEAR HOUSING		1
45	MS21025-15	. NUT		1
		(OPTIONAL 69-70330-1)		
45	69-70330-1	. NUT		1
		(OPTIONAL TO MS21025-15)		
46	30-1445	. WASHER, DRUM BEARING.		1
47	BACB10A117	. BEARING		1
48	9-65485	. GEAR, BEVEL		1
49	30-1587	. PIN		1
50	69-40895-1	. SHAFT, STABILIZER INDICATOR SPLINED		1
51	60-1450	. PLATE, BEARING RETAINER		1
		ATTACHING PARTS		
52	NAS514P428-16	. SCREW		2
53	NAS1197-416	. WASHER.		2
54	NAS679A4W	. NUT		2
		-------*-------		
55	BACB10A95	. BEARING		1
56	9-61297-10	. SHIM, LAMINATED		1
57	30-1447	. SPACER, DRUM BEARING.		1
58	5-97002-2	. DRUM.		1
59	30-1446	. SPACER, DRUM BEARING.		1
60	5-97019	. HOUSING ASSY, GEAR.		1
61	BACS13P4CN2	. . SLEEVE.		7
62	5-97019-1	. . HOUSING, GEAR		1
63	AN4-6	. BOLT.		1
64	NAS679A4W	. NUT		1
66	50-3361-63	. FILLER, CONTROLS RADIUS		1
67	69-9163-1	. BRACKET, STATION 203.48 DRUM GUARD.		1
68	69-9163-3	. BRACKET, STATION 203.48 DRUM GUARD.		1
69	66-8997	. GUARD ASSY, CABLE		1
70	NAS517-3-13	. SCREW		2
71	NAS679A3W	. NUT		2
72	50-3361-3054	. FILLER, CONTROLS RADIUS		2
73	69-9163-2	. BRACKET, STATION 203.48 DRUM GUARD.		1
74	66-8985	. SPACER, STATION 203.48 DRUM CABLE GUARD		2
75	AN3-74A	. BOLT.		3
76	NAS43DD3-442	. SPACER.		3
77	AN960D10L	. WASHER.		3
78	NAS679A3W	. NUT		3

MISSING ITEM NUMBERS ARE NOT APPLICABLE

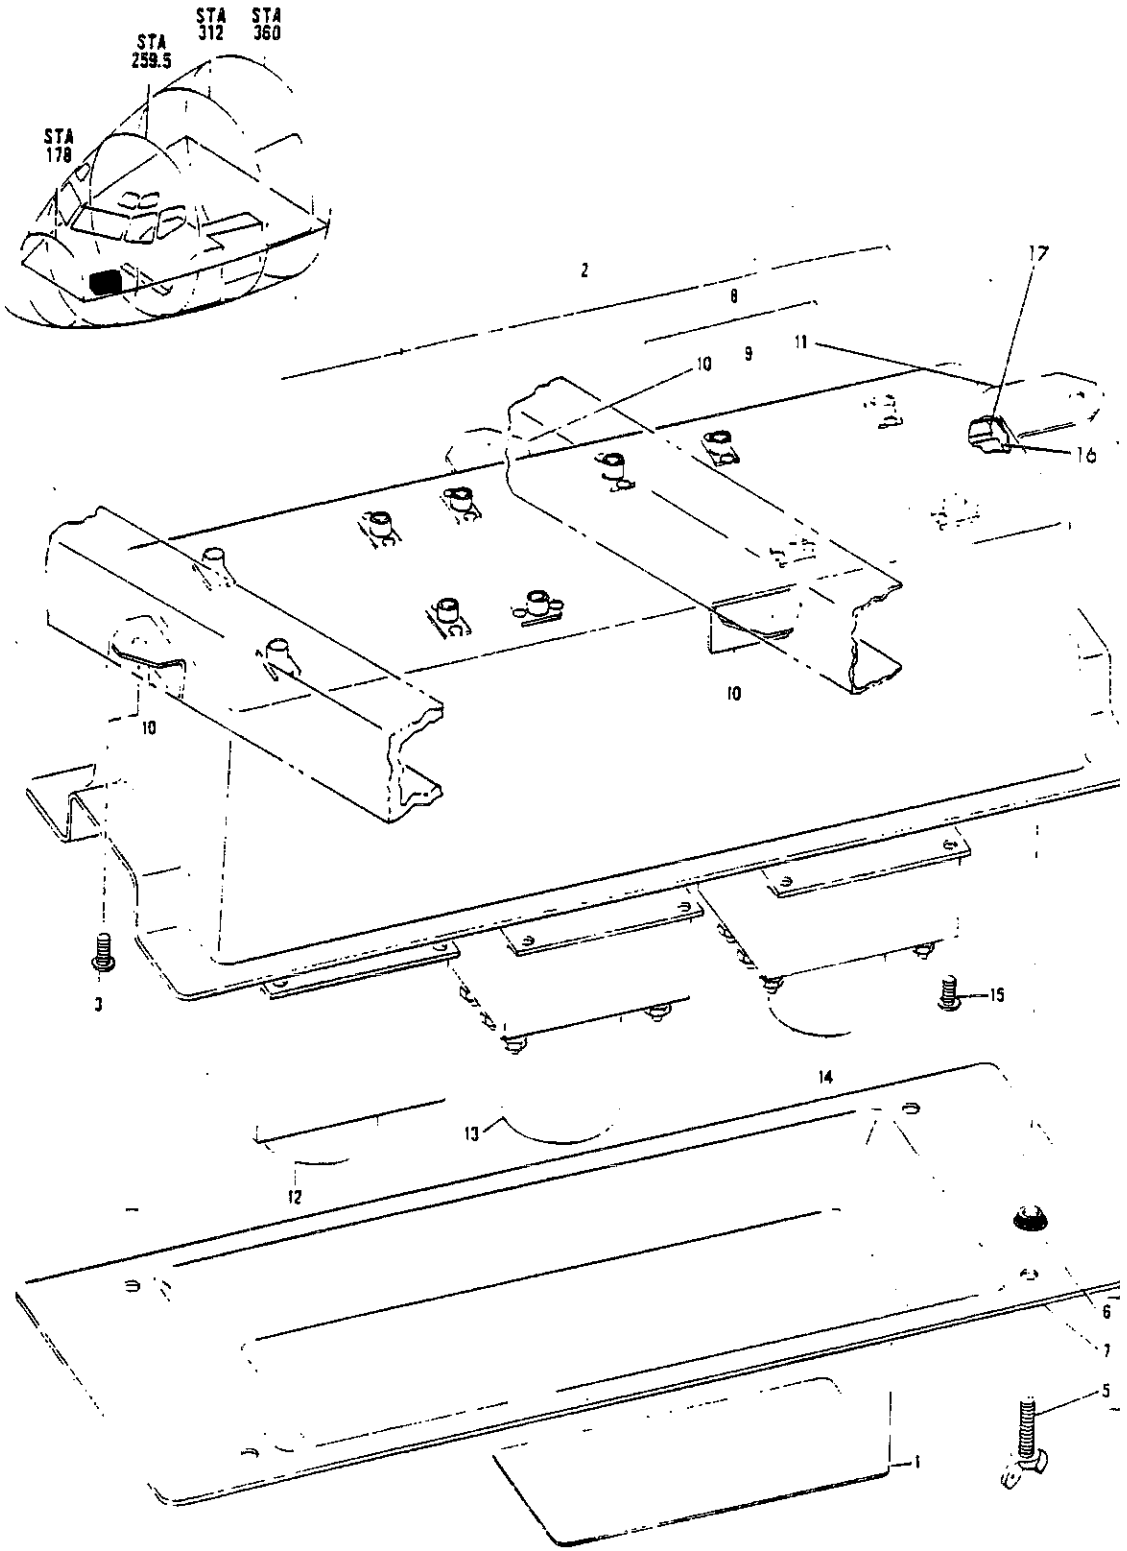
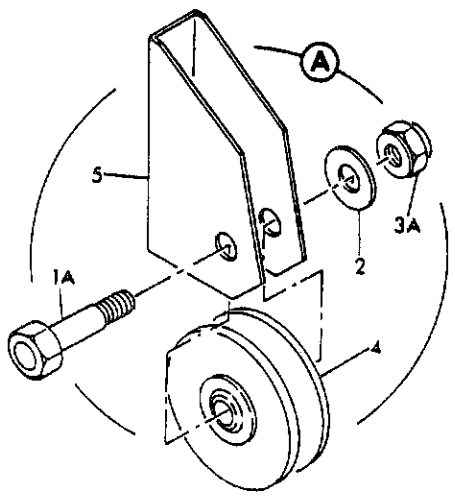
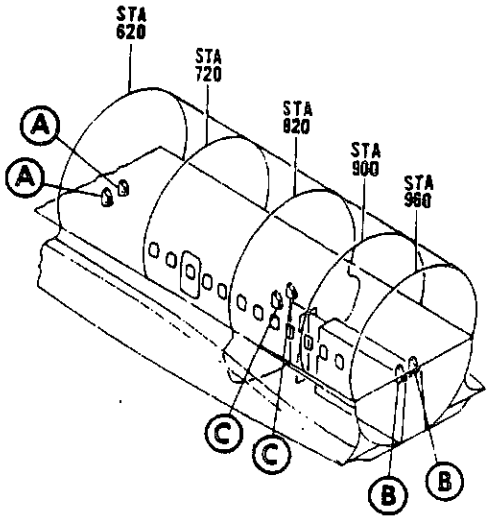



FIGURE 7. SHIELD INSTL. J-18 STABILIZER TRIM CONTROL

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
7	65-28088	SHIELD INSTL, J-18 STABILIZER TRIM CONTROL (SEE 24-3, FIG. 1A, ITEM 64, 24-3, FIG. 1B, ITEM 57 AND 24-3, FIG. 1C, ITEM 53, 24-3, FIG. 1D, ITEM 8)		RF
1	BACM10W52-2VU	. MARKER-ALUMINUM FOIL, WARNING		1
2	65-28088-2	. SHIELD ASSY, J-18 STABILIZER TRIM CONTROL		1
		ATTACHING PARTS		
3	NAS603-8	. SCREW		4
		-------*-------		
4	65-28082-2	. . COVER ASSY, J-18 STABILIZER TRIM CONTROL SHIELD		1
5	BACS12W10-14	. . . SCREW		4
6	BACW10AJ1	. . . WASHER.		4
7	65-28082-4	. . . COVER, J-18 STABILIZER TRIM CONTROL SHIELD.		1
8	65-28082	. . SHIELD ASSY, J-18 STABILIZER TRIM CONTROL		1
9	65-28082-1	. . . SHIELD, J-18 STABILIZER TRIM CONTROL.		1
10	65-28082-3	. . . CLIP, J-18 STABILIZER TRIM CONTROL SHIELD		3
11	65-28082-5	. . . CLIP, J-18 STABILIZER TRIM CONTROL SHIELD		1
12	10-2262	. . RELAY, 200/115 VOLT 3 PHASE 400 CYCLE SPDT PHASE SENSING		1
13	9123-8071	. . RELAY, (V35344) (OPTIONAL TO AND REPLACEMENT FOR 6042H32, 6042H110 (V27193))		1
13	6042H32	. . RELAY, (V27193) (OPTIONAL AND FOR REPLACEMENT ORDER 9123-8071 (V35344))		1
13	6042H110	. . RELAY, (V27193) (OPTIONAL AND FOR REPLACEMENT ORDER 9123-8071 (V35344))		1
14	MS24143-1	. . RELAY (OPTIONAL MS24143D1)		1
14	MS24143D1	. . RELAY (OPTIONAL TO MS24143-1)		1
		ATTACHING PARTS		
15	NAS603-8	. . SCREW		11
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE





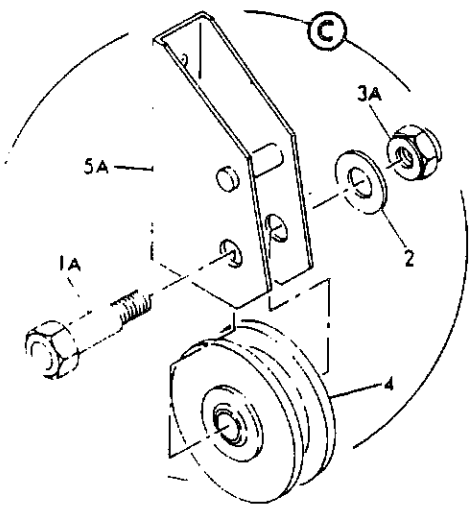

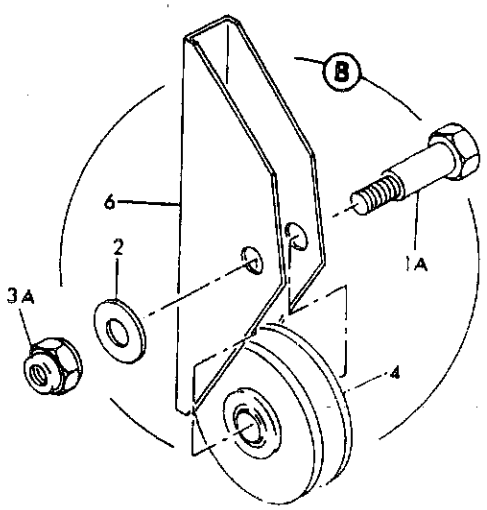


FIGURE 8. CONTROL INSTL, SECTION 53 STABILIZER TRIM

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8	50-8704-353	CONTROL INSTL, SECTION 53 STABILIZER TRIM (SEE 53-1, FIG. 2, ITEM 5 AND 53-1, FIG. 5, ITEM 13)		RF
	50-8723-3	. PULLEY INSTL, STATION 620 STABILIZER TRIM CABLE IDLER		1
	50-8247-3	. PULLEY INSTL, STATION 820 CABLE IDLER		1
	50-8736-3	. PULLEY INSTL, STATION 960 CABLE IDLER		1
1A	BACB30NF5-11	. . BOLT		2
2	AN960D516	. . WASHER		2
3A	BACN10JC5	. . NUT		2
4	AN220-1	. . PULLEY		2
5	60-3106-2000	. . BRACKET ASSY, IDLER PULLEY CONTROL (USED ON 50-8723-3)		2
5A	60-3106	. . BRACKET ASSY, IDLER PULLEY CONTROL (USED ON 50-8247-3)		2
6	90-7852	. . BRACKET ASSY, IDLER PULLEY CONTROL (USED ON 50-8736-3)		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

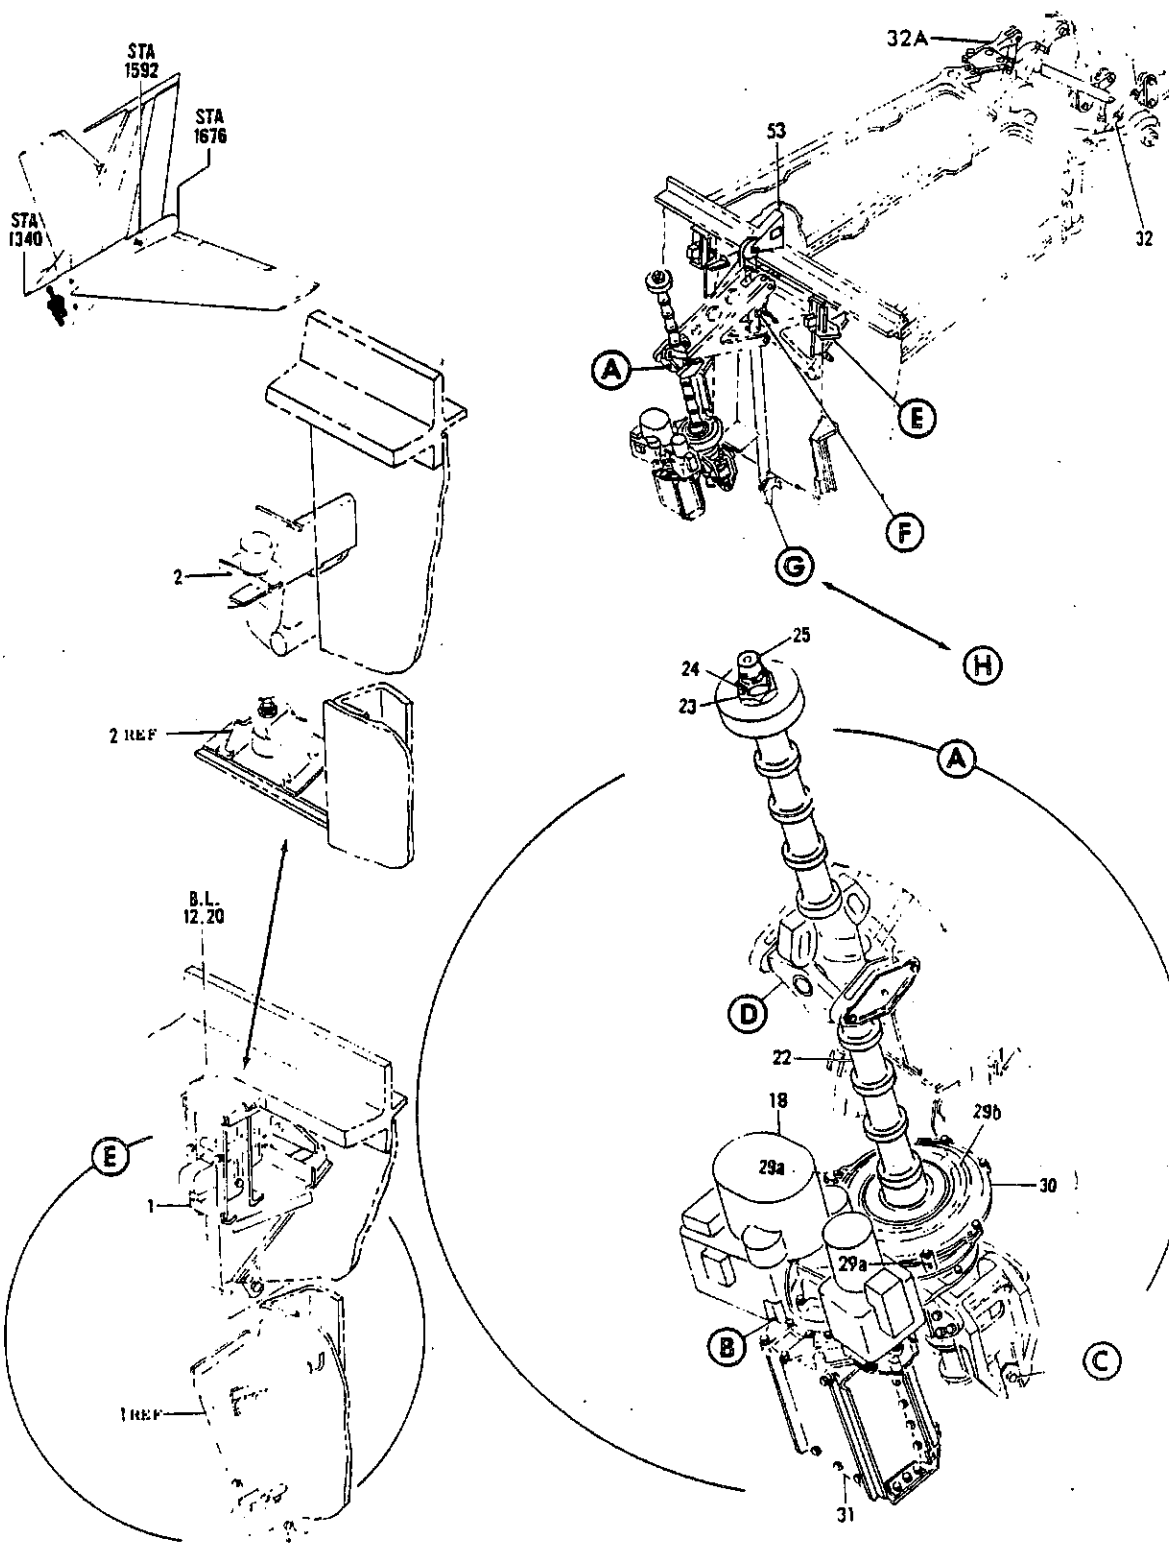


FIGURE 9. CONTROL INSTL, SECTION 58 STABILIZER TRIM (SHEET 1)

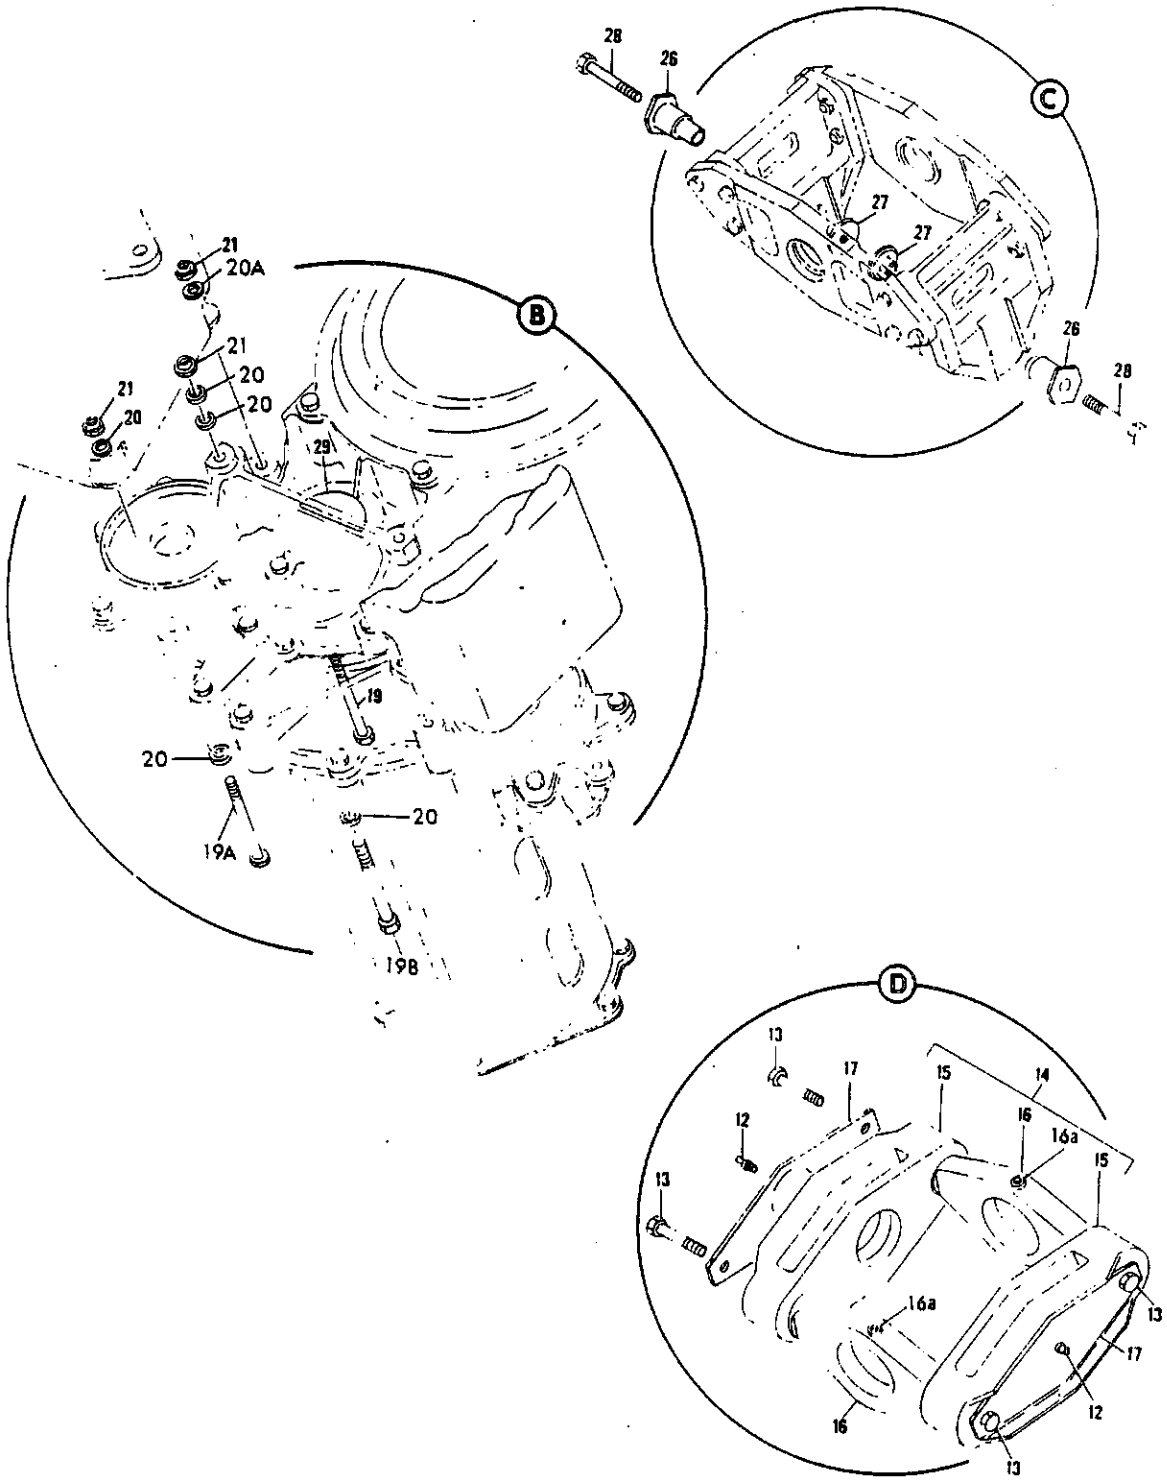


FIGURE 9. CONTROL INSTL, SECTION 58 STABILIZER TRIM (SHEET 2)

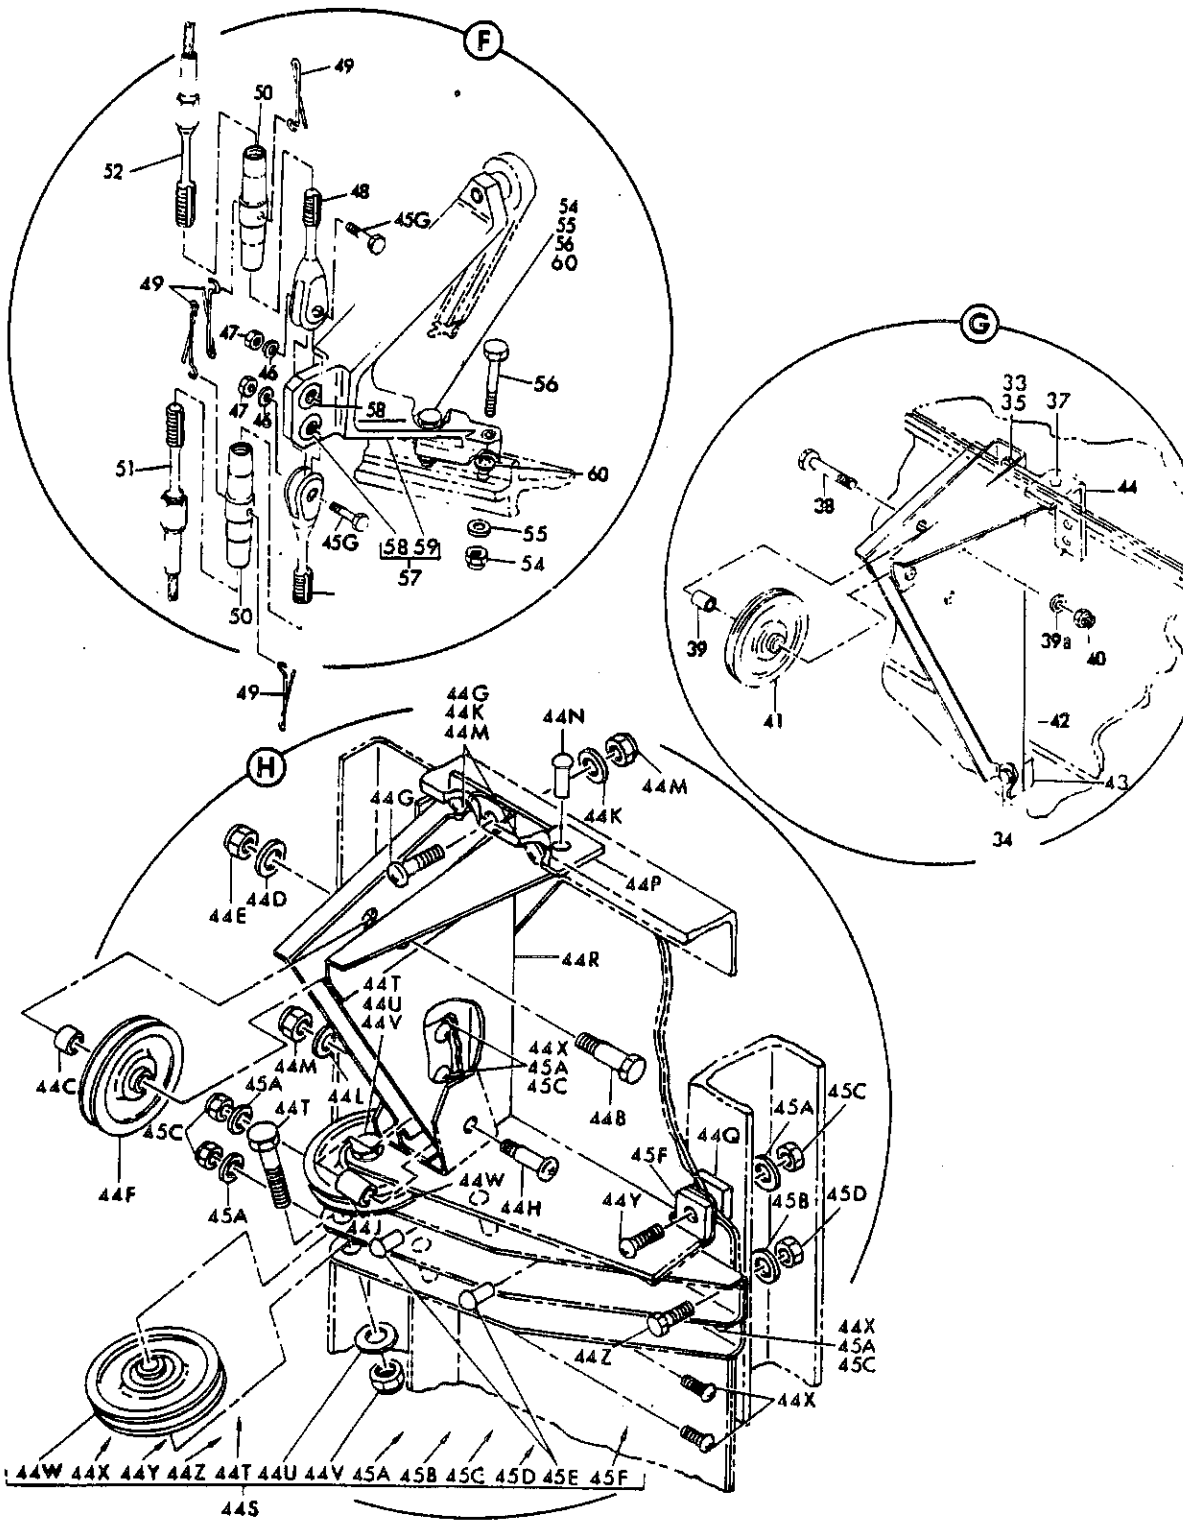



FIGURE 9. CONTROL INSTL SECTION 58 STABILIZER TRIM (SHEET 3)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	9	50-8704-358	CONTROL INSTL, SECTION 58 STABILIZER TRIM (SEE 53-1, FIG. 4, ITEM 5)		RF
	2	65-27455-1	. SWITCH INSTL, STABILIZER TRIM ACTUATOR LIMIT LH (SEE FIG. 17)		1
	2	65-27455-2	. SWITCH INSTL, STABILIZER TRIM ACTUATOR LIMIT RH (SEE FIG. 17)		1
		65-6507	. ACTUATOR INSTL, (FLIGHT CONTROL ONLY)		1
	12	MS15001-1	. . FITTING		2
	13	NAS1306-3H	. . BOLT		4
	14	69-5149-1	. . GIMBAL ASSY, STABILIZER TRIM ACTUATOR UPPER		1
	15	69-5152-1	. . . FITTING, (MATCHED PART, ORDER ASSEMBLY ONLY)		2
	16	69-5151	. . . YOKE, STABILIZER TRIM ACTUATOR (MATCHED PART, ORDER ASSEMBLY ONLY)		2
	17	69-8689	. . FITTING, STABILIZER TRIM ACTUATOR PIN		2
R	18	10-60165-3	. . ACTUATOR, (SAME AS R1604M5-111 (V81039))	0450	1
	18	10-60165-3	. . ACTUATOR, (SAME AS R1604M5-111 (V81039)) (REWORKED BY SB 2734) (FOR REPLACEMENT ORDER BAC SPEC NO. 10-60165-4 (ADDED BY SB 2734))	0103	1
	18	R1604M5-111	. . ACTUATOR ASSY, ROTARY (V81039) (SAME AS BAC SPEC. NO. 10-60165-3 (REWORKED BY SB 2734)) (SEE FIG. 12B) (FOR REPLACEMENT ORDER BAC SPEC NO. 10-60165-4 (ADDED BY SB 2734))	0103	1
R	18	R1604M5-111	. . ACTUATOR ASSY, ROTARY (V81039) (SAME AS BAC SPEC.	0150	RF
R			NO. 10-60165-3) (SEE FIG. 12B)		
	18	10-60165-4	. . ACTUATOR, (ADDED BY SB 2734). (REPLACEMENT FOR BAC SPEC NO. 10-60165-3 (REWORKED BY SB 2734))	0103	1
R	18	10-60165-4	. . ACTUATOR, STABILIZER TRIM	5199	1
			ATTACHING PARTS		
	19	NAS1304-31	. . BOLT		1
	19A	NAS1304-27	. . BOLT		1
	19B	NAS1304-15	. . BOLT		1
	20	AN960D416L	. . WASHER		5
	20A	AN960D416	. . WASHER		1
	21	NAS679A4W	. . NUT		3
			-------*-------		
	22	69-5150	. . ROD, STABILIZER TRIM ACTUATOR SAFETY		1
	23	66-5018	. . NUT, STABILIZER TRIM ACTUATOR SAFETY ROD		1
	24	NAS1303-26	. . BOLT		1
	25	NAS679A3W	. . NUT		1
	26	66-8796	. . PIN, STABILIZER TRIM ACTUATOR LOCKING		2
	27	30-2913	. . NUT, STABILIZER TRIM ACTUATOR LOCKING		2
	28	NAS1307-31H	. . BOLT		2
	29A	63-9826	. . BRACKET, ELECTRICAL WIRE SUPPORT		2
			ATTACHING PARTS		
	29A	NAS1304-9	. . BOLT		2
			-------*-------		
	30	65-6456-16	. . ACTUATOR ASSY, (DELETED BY SB 2619)	0102	1
R	30	65-6456-17	. . ACTUATOR ASSY	0350	1
R	30	65-6456-20	. . ACTUATOR ASSY	5199	1
R			(OPTIONAL TO 65-6456-21)		
R	30	65-6456-21	. . ACTUATOR ASSY	5199	1
R			(OPTIONAL 65-6456-20)		
	30	65-6456-17	. . ACTUATOR ASSY, (ADDED BY SB 2619)	0102	1
			. . . FLIGHT CONTROL, (SEE 27-12, FIG. 12Y, 13A AND 13B)		
			. . . REQUIRED PLACARDS, (SEE 11-2, FIG. 84)		
	31	65-65089	. . SHROUD INSTL, STABILIZER TRIM (SEE FIG. 10)		1
			. . AUTOPILOT, (SEE 22-1, FIG. 18)		
R	32	65-17044-1	. FOLLOW-UP INSTL, MACH BALANCED COMPENSATOR (LH)	0150	1
R	32	65-17044-3	. FOLLOW-UP INSTL, MACH BALANCED COMPENSATOR	5199	1
			. . AUTOPILOT, (SEE 22-1, FIG. 18)		
			. . FLIGHT CONTROL, (SEE FIG. 11)		
		65-44280-4	. BRACKET INSTL, LOWER		1
	33	BACB30FP6-9	. . BOLT		1
	34	BACB30FP8-13	. . BOLT		1
	35	BACC30M6	. . COLLAR		1
	36	BACC30M8	. . COLLAR		1
	37	MS20470D8	. . RIVET		1
	38	NAS1104-19DW	. . BOLT		1
	39	NAS42DD8-32	. . SPACER		1
	39A	AN960D416L	. . WASHER		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	9 40	AN320-4	. . NUT		1
	41	MS20219A4	. . PULLEY.		1
	42	69-36115-7	. . BRACKET ASSY.		1
	43	65-44280-3	. . SPACER.		1
	44	65-44280-2	. . FILLER.		1
	45G	NAS1103-8DW	. BOLT.		2
	46	AN960D10L	. WASHER.		2
	47	AN320-3	. NUT		2
	48	MS21253-3LS	. CLEVIS.		2
	49	BACC15AJ16S	. CLIP.		2
	50	MS21251B3S	. TURNBUCKLE.		2
	51	BACC13AM3C826	. CABLE ASSY.		1
	52	BACC13AM3C382	. CABLE ASSY.		1
		MS21260S	. . TERMINAL.		1
		BACT14A4	. . TERMINAL.		1
R	53	65-46676-2	. TORQUE CONTROL INSTL.	0150	1
R			(OPTIONAL TO 65-46676-4)		
R	53	65-46676-1	. TORQUE CONTROL INSTL.	0150	1
R			(OPTIONAL TO 65-46676-4)		
R	53	65-46676-4	. TORQUE CONTROL INSTL.	0150	1
R			(OPTIONAL 65-46676-1, -2)		
R	53	65-46676-4	. TORQUE CONTROL INSTL.	5199	1
			. . AUTOPILOT, (SEE 22-1, FIG. 38).		
			. . REQUIRED PLACARDS, (SEE 11-2, FIG. 219)		
		65-46684-1	. BRACKET INSTL, TORQUE ACTUATED.		1
	54	NAS679A4W	. . NUT		2
	55	AN960D416	. . WASHER.		2
	56	NAS1104-18	. . BOLT.		2
	57	65-46637-1	. . BRACKET ASSY, TORQUE ACTUATED		1
	58	AN200KS3	. . . BEARING		2
	59	65-46637-2	. . . BRACKET		1
	60	BACS40P1	. . SHIM.		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

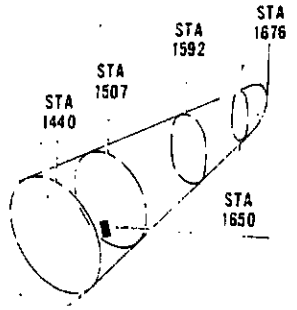

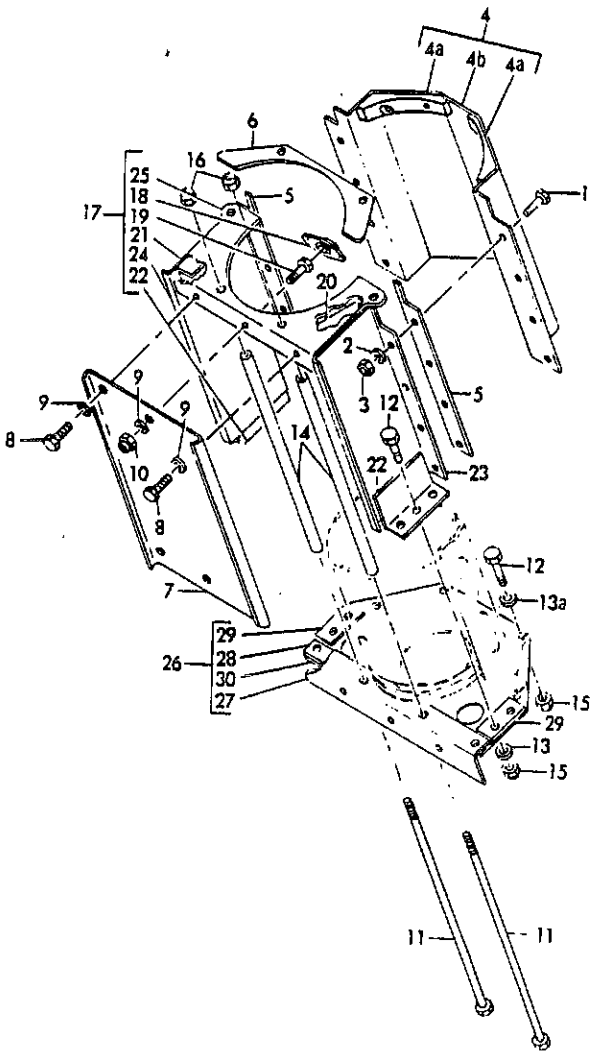


FIGURE 10. SHROUD INSTL, STABILIZER TRIM

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
10	65-65089	SHROUD INSTL, STABILIZER TRIM (SEE FIG. 9, ITEM 31 AND FIG. 9A, ITEM 31)		RF
1	AN3-5A	. BOLT.		8
2	AN960D10L	. WASHER.		8
3	BACN10BY53W	. NUT		8
4	69-41005	. SHROUD ASSY, AFT STABILIZER TRIM.		1
4A	66-29078	. . BLOCK, SHROUD STABILIZER TRIM SHROUD CORNER		2
4B	69-40099	. . SHROUD, STABILIZER TRIM CABLE GUARD AFT		1
5	69-41009-1	. SHIM, STABILIZER ACTUATOR DRUM SHROUD LAMINATED		AR
6	66-29082	. FILLER, UPPER STABILIZER TRIM ACTUATOR.		1
7	69-40096	. CHANNEL, FORWARD STABILIZER TRIM ACTUATOR SHROUD. CABLE GUARD		1
		ATTACHING PARTS		
8	AN3-3A	. BOLT.		5
9	AN960D10L	. WASHER.		6
10	BACN10BY53W	. NUT		4
		--------*--------		
11	NAS464P4A140	. BOLT.		2
12	AN3-5A	. BOLT.		10
13	AN960D10L	. WASHER.		6
13A	BACW10T10L	. WASHER.		4
14	NAS42D08-543	. SPACER.		2
15	BACN10BY53W	. NUT		10
16	BACN10BY54W	. NUT		2
17	69-41000	. SHROUD ASSY, FORWARD STABILIZER TRIM.		1
18	BACR10G31	. . RETAINER.		1
19	AN3-3A	. . BOLT.		1
20	66-29074-1	. . ANGLE, UPPER STABILIZER TRIM SHROUD CORNER (LH)		1
21	66-29074-2	. . ANGLE, UPPER STABILIZER TRIM SHROUD CORNER (RH)		1
22	69-41009-2	. . ANGLE, LOWER STABILIZER TRIM ACTUATOR DRUM SHROUD		2
23	69-40097-1	. . CHANNEL, STABILIZER TRIM ACTUATOR CABLE GUARD SIDE PANEL (LH)		1
24	69-40097-2	. . CHANNEL, STABILIZER TRIM ACTUATOR CABLE GUARD SIDE PANEL (RH)		1
25	69-41006	. . PLATE, UPPER STABILIZER TRIM ACTUATOR		1
26	69-41008	. PLATE ASSY, LOWER STABILIZER TRIM		1
27	69-41009	. . ANGLE, STABILIZER TRIM ACTUATOR DRUM SHROUD		1
28	66-29076	. . SHIM, STABILIZER TRIM SHROUD.		1
29	66-29076-1	. . SHIM, STABILIZER TRIM SHROUD.		2
30	69-40098	. . PLATE, LOWER STABILIZER TRIM ACTUATOR CABLE GUARD		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

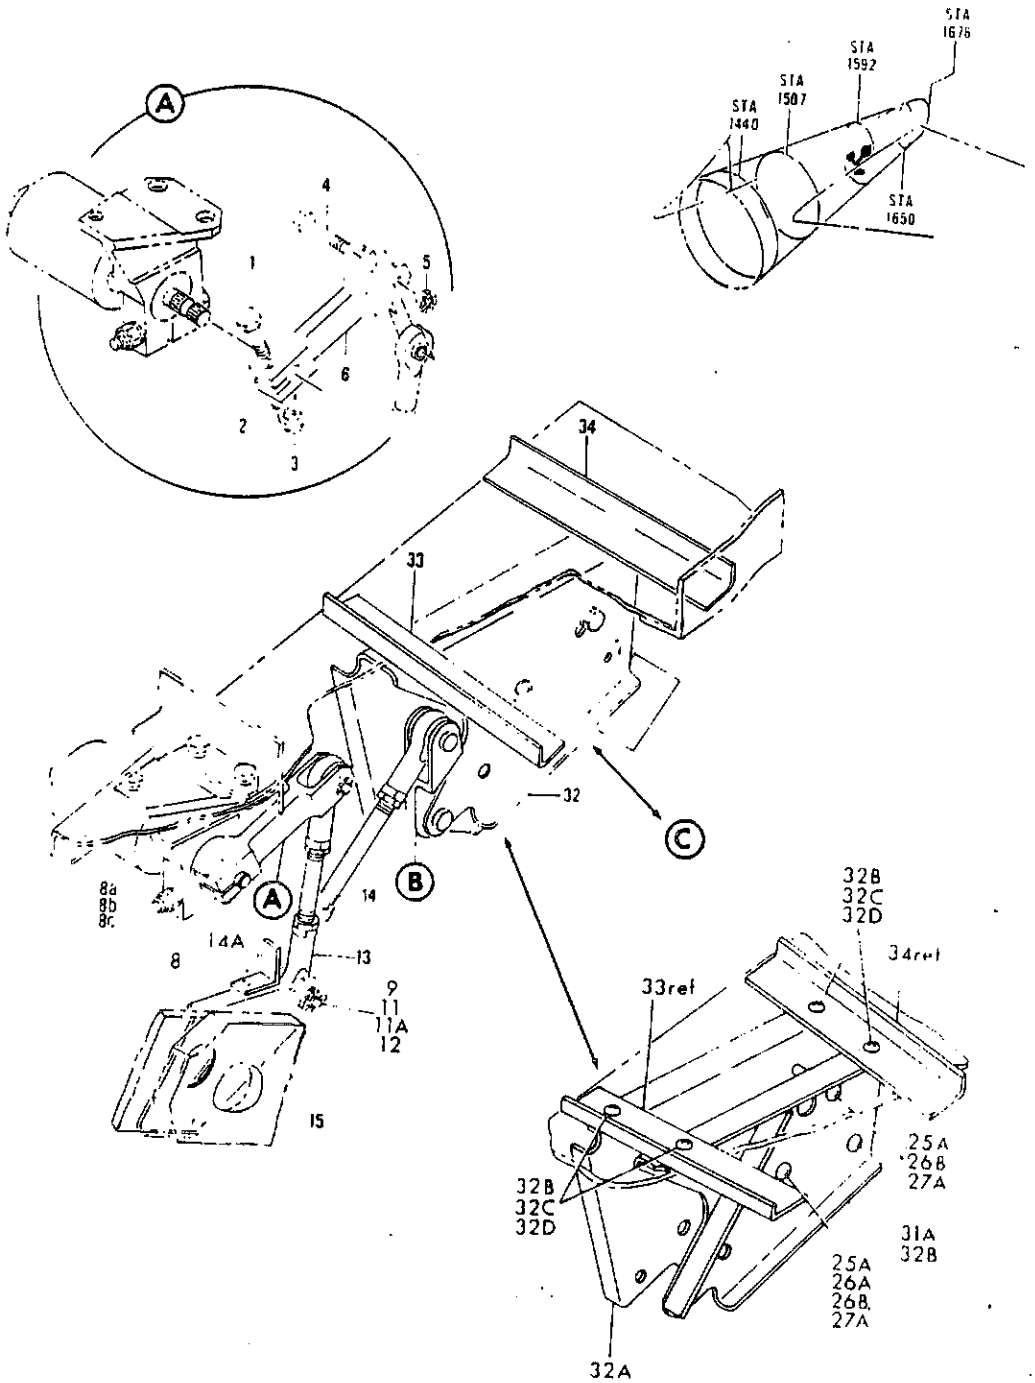


FIGURE 11. FOLLOW-UP INSTL, MACH BALANCE COMPENSATOR (FLIGHT CONTROL ONLY) (SHEET 1)

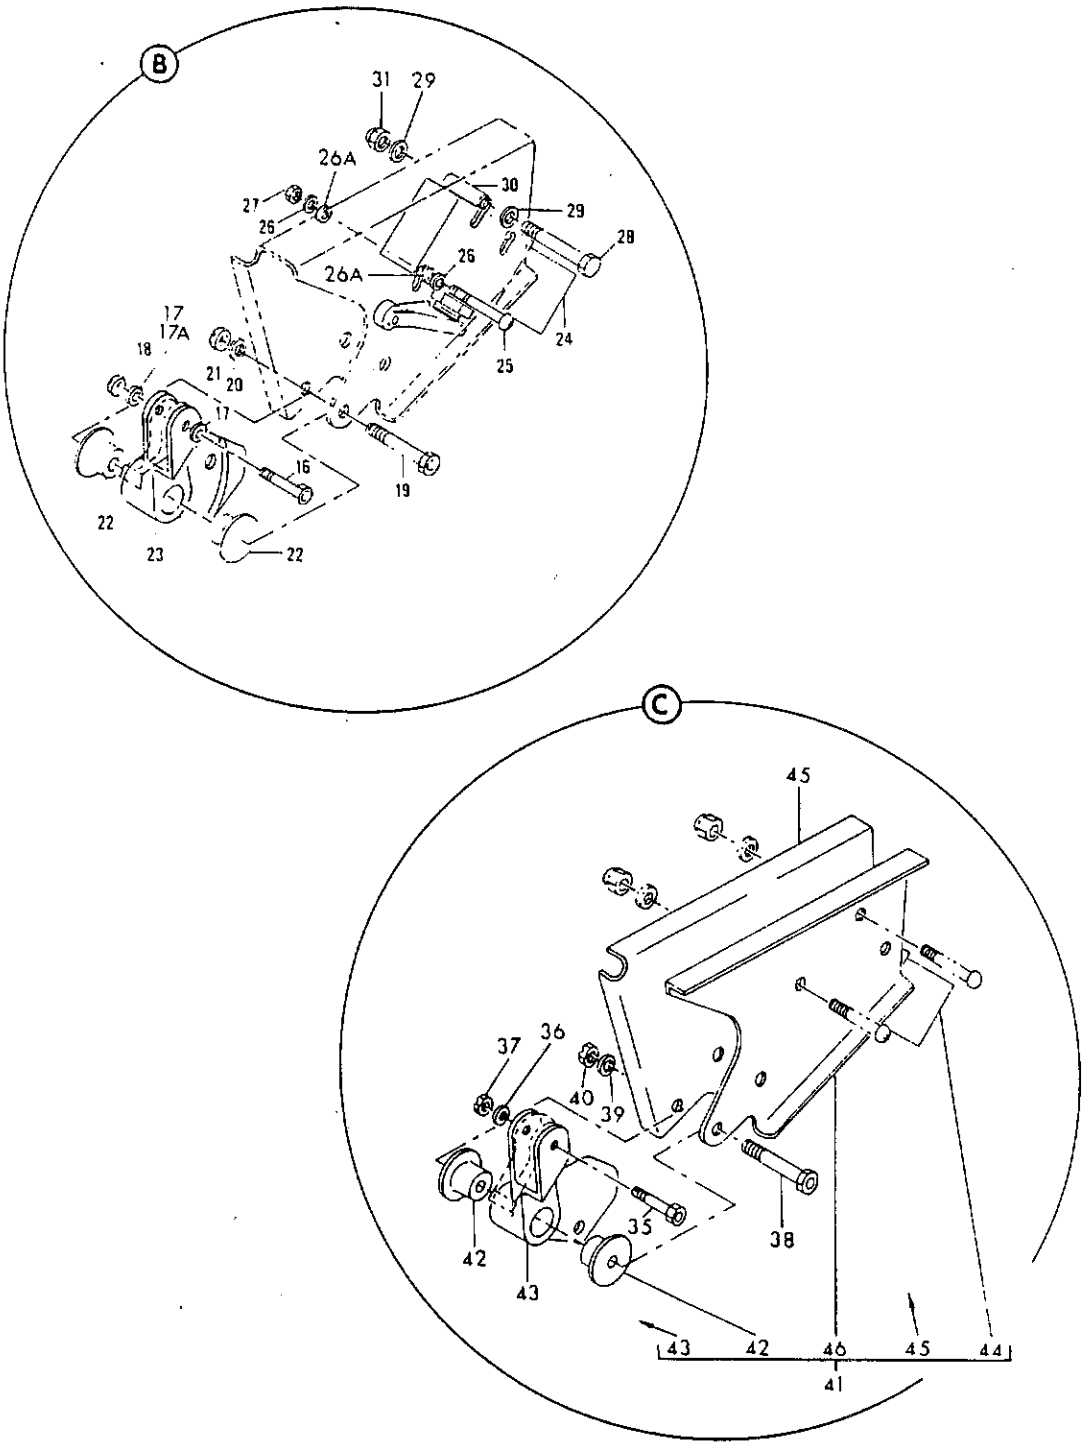



FIGURE 11. FOLLOW-UP INSTL, MACH BALANCE COMPENSATOR (FLIGHT CONTROL ONLY) (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	11	65-17044-1	FOLLOW-UP INSTL, MACH BALANCE COMPENSATOR (LH) (FLIGHT CONTROL ONLY) (SEE FIG. 9, ITEM 32)	0150	RF
R		65-17044-3	FOLLOW-UP INSTL, MACH BALANCE COMPENSATOR (FLIGHT CONTROL ONLY) (SEE FIG. 9, ITEM 32)	5199	RF
R	1	BACB30NE4-11	. BOLT	5199	1
	1	BACB30NE4-9	. BOLT		1
R	2	AN960D416	. WASHER	5199	1
R	3	NAS679A4W	. *NUT*	0150	1
R	3	BACN10JC4	. NUT	5199	1
R	4	NAS1103-10D	. BOLT	0150	1
R	4	BACB30NE3-10	. BOLT	5199	1
R	5	AN320-3	. NUT	0150	1
R	5	AN960D10L	. WASHER	5199	1
	6	66-9350-3	. CRANK, MACH BALANCE COMPENSATOR FOLLOW-UP		1
R	6	66-9350-1	. CRANK, MACH BALANCE COMPENSATOR FOLLOW-UP	5199	1
	8	69-9732	. BRACKET, MACH BALANCE COMPENSATOR FOLLOW-UP (USED ON 65-17044-1, -3)		1
	8A	BACB30NE4-21	. BOLT		1
R	8B	AN960D416	. WASHER	5199	1
R	8C	NAS679A4W	. NUT	0150	1
R	8C	BACN10JC4	. NUT	5199	1
R	9	NAS1103-16D	. BOLT, (USED ON 65-17044-1)	0150	1
R	9	BACB30NE30-16	. BOLT	5199	1
	11	AN960D10	. WASHER		1
R	11A	*BACW10P44AL*	. *WASHER, (USED ON 65-17044-1, -3)*	5199	1
R	12	AN320-3	. NUT, (USED ON 65-17044-1)	0150	1
R	12	BACN10JC3	. NUT, (USED ON 65-17044-3)	5199	1
	13	NAS363-1AA328	. ROD ASSY		1
R	14	NAS363-1AA370	. ROD ASSY	0150	1
R	14	NAS363-1AA400	. ROD ASSY	5199	1
	15	66-9378	. BRACKET, MACH BALANCE COMPENSATOR FOLLOW-UP SUPPORT (USED ON 65-17044-1, -3)		1
R	16	NAS1103-11D	. BOLT, (USED ON 65-17044-1)	0150	1
R	16	BAC8N30NE3-11	. BOLT	5151	1
R	17	NAS1197-10L	. WASHER, (USED ON 65-17044-1)	0150	2
R	17A	AN960D10L	. WASHER	5151	1
R	18	AN320-3	. NUT, (USED ON 65-17044-1)	0150	1
R	18	BACN10JC3	. NUT	5151	1
R	19	NAS1104-18D	. BOLT, (DELETED BY SB 3197)	0150	1
R	19	BACB30NF4D22	. BOLT, (USED ON 65-17044-3)	5151	1
R	19	BACB30NF4-22	. BOLT, (ADDED BY SB 3197)	0150	1
R	20	*BACW10T416A*	. *WASHER, (USED ON 65-17044-1)*	0450	1
R	20	AN960D416	. WASHER	5151	1
R	20	AN960D416	. WASHER, (ADDED BY SB 3197)	0150	1
R	21	AN320-4	. NUT, (USED ON 65-17044-1)	0450	1
R	21	AN320-4	. NUT, (DELETED BY SB 3197)	0150	1
R	21	BACN10JC4	. NUT	5151	1
R	21	BACN10JC4	. NUT, (ADDED BY SB 3197)	0150	1
R	22	63-9356	. BUSHING, STABILIZER POSITION WARNING	0151	2
R	23	65-28009-11	. CAM, STABILIZER POSITION WARNING (USED ON 65-17044-1, -3) (DELETED BY SB 3197)		1
R	23	65-28009-8	. CAM, STABILIZER POSITION WARNING (ADDED BY SB 3197)		1
R	24	3EP22E	. SWITCH, MICRO (V81640) (USED ON 65-17044-1) (OPTIONAL TO H1-1003 (V81640))	0450	1
R	24	H1-1003	. SWITCH, MICRO (V81640) (USED ON 65-17044-1) (OPTIONAL 3EP22E (V81640)	0450	1
R	24	H1-1001-04	. SWITCH, MICRO (V81640)	5151	1
R	24	3EP22E	. SWITCH, MICRO (V81640) (DELETED BY SB 3197) *(OPTIONAL TO H1-1003 (V81640))*	0150	1
R	24	H1-1003	. SWITCH, MICRO (V81640) (DELETED BY SB 3197) (OPTIONAL 3EP22E (V81640))	0150	1
R	24	H1-1001-04	. SWITCH, MICRO (V81640) (ADDED BY SB 3197) ATTACHING PARTS	0150	1
R	25	NAS602-24P	. BOLT, (USED ON 65-17044-1)	0450	2
R	25	NAS602-24P	. BOLT, (DELETED BY SB 3197)	0150	2
R	25A	NAS603-28P	. BOLT	5199	3
R	25A	NAS603-28P	. BOLT, (ADDED BY SB 3197)	0150	3
R	26	AN960D8	. WASHER, (USED ON 65-17044-1)	0450	4
R	26	AN960D8	. WASHER, (DELETED BY SB 3197)	0150	2
R	26A	BACW10DP178AL	. WASHER, (DELETED BY SB 3197)	0150	4
R	26B	AN960D10	. WASHER	5199	3
R	26B	AN960D10	. WASHER, (ADDED BY SB 3197)	0150	3
R	27	BACN10BY508W	. NUT, (DELETED BY SB 3197)	0150	2
R	27A	BACN10JC3	. NUT	5199	3

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	11 27A	BACN10JC3	. NUT, (ADDED BY SB 3197)	0150	3
			-------*-------		
R	28	AN4DD14A	. BOLT, (USED ON 65-17044-1)	0450	1
R	28	AN4DD14A	. BOLT, (DELETED BY SB 3197)	0150	1
R	29	BACW10T416A	. WASHER, (USED ON 65-17044-1)	0450	2
R	30	NAS43DD4-64	. SPACER, (USED ON 65-17044-1)	0450	1
R	30	NAS43DD4-64	. SPACER, (DELETED BY SB 3197)	0150	1
R	31	BACN10BY-54W	. NUT, (DELETED BY SB 3197)	0150	1
R	31A	65C12915-1	. SUPPORT, CAM (ADDED BY SB 3197 AND DELETED BY SB 3197)	5151	1
R	31A	65C12915-11	. SUPPORT, CAM (ADDED BY SB 3197)	5151	1
R	32	69-18054-7	. SUPPORT, STABILIZER POSITION WARNING CAM. (DELETED BY SB 3197)	0150	1
R	32A	65C12915-2	. SUPPORT, CAM (ADDED BY SB 3197 AND DELETED BY SB 3197)	5151	1
R	32A	65C12915-12	. SUPPORT, CAM (ADDED BY SB 3197)	5151	1
R	32B	NAS603-7P	. BOLT.	5199	4
R	32B	NAS603-7P	. BOLT, (ADDED BY SB 3197)	0150	4
R	32C	AN960PD10L	. WASHER.	5199	4
R	32C	AN960PD10L	. WASHER, (ADDED BY SB 3197)	0150	4
R	32D	BACN10JC3	. NUT	5199	4
R	32D	BACN10JC3	. NUT, (ADDED BY SB 3197)	0150	4
R	33	69-19009-2	. ANGLE, STABILIZER POSITION WARNING SUPPORT (USED ON 65-17044-1)	0450	1
R	33	69-19009-5	. ANGLE	5199	1
R	33	69-19009-2	. ANGLE, STABILIZER POSITION WARNING SUPPORT. (DELETED BY SB 3197)	0150	1
R	33	69-67191-3	. ANGLE, (ADDED BY SB 3197)	0150	1
R	34	69-19009-3	. ANGLE, STABILIZER POSITION WARNING SUPPORT (USED ON 65-17044-1)	0450	1
R	34	69-19009-4	. ANGLE	5199	1
R	34	69-19009-3	. ANGLE, STABILIZER POSITION WARNING SUPPORT. (DELETED BY SB 3197)	0150	1
R	34	69-67191-1	. ANGLE, (ADDED BY SB 3197)	0150	1
R	35	BAC830NF3D11	. BOLT.	5299	1
R	36	AN960D10L	. WASHER.	5299	1
R	37	BACN10JC3	. NUT	5299	1
R	38	BAC830NF4D22	. BOLT.	5299	1
R	39	AN960D416	. WASHER.	5299	1
R	40	BACN10JC4	. NUT	5299	1
R	41	65-17044-4	. SWITCH AND CAM ASSY	5299	1
R	42	63-9356	. . BUSHING, STABILIZER POSITION WARNING.	5299	2
R	43	65-28009-11	. . CAM, STABILIZER POSITION WARNING.	5299	1
R	44	H1-1001-04	. . SWITCH, MICRO (V81640).	5299	1
R	45	65C12915-12	. . SUPPORT, CAM.	5299	1
R	46	65C12915-11	. . SUPPORT, CAM.	5299	1
			. FOR REFERENCE TO OTHER FOLLOW-UP DETAILS, SEE NHA . .		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

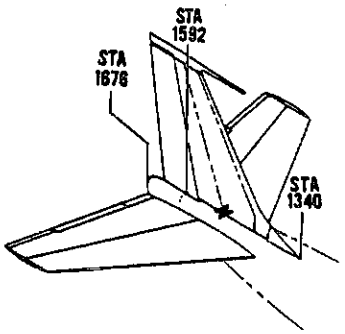

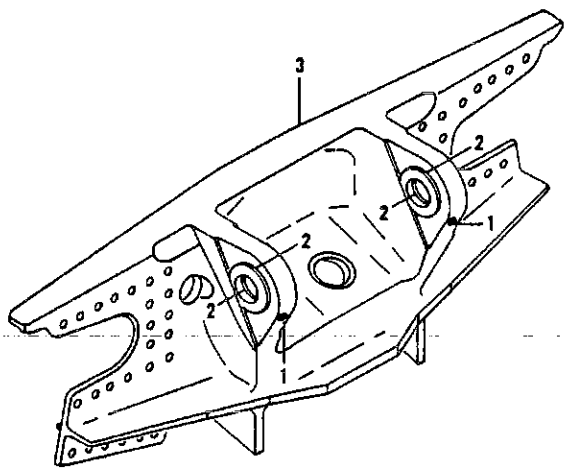


FIGURE 12. FITTING ASSY, STABILIZER JACKING SCREW

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
12	65-5497-4	FITTING ASSY, STABILIZER JACKING SCREW (SEE 53-10, FIG. 7, ITEM 5)		RF
1	NAS516-1	. FITTING		2
2	3-93028-3001	. BUSHING, FLANGED.		4
3	65-5497-5	. FITTING, (USED ON 65-5497-4).		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

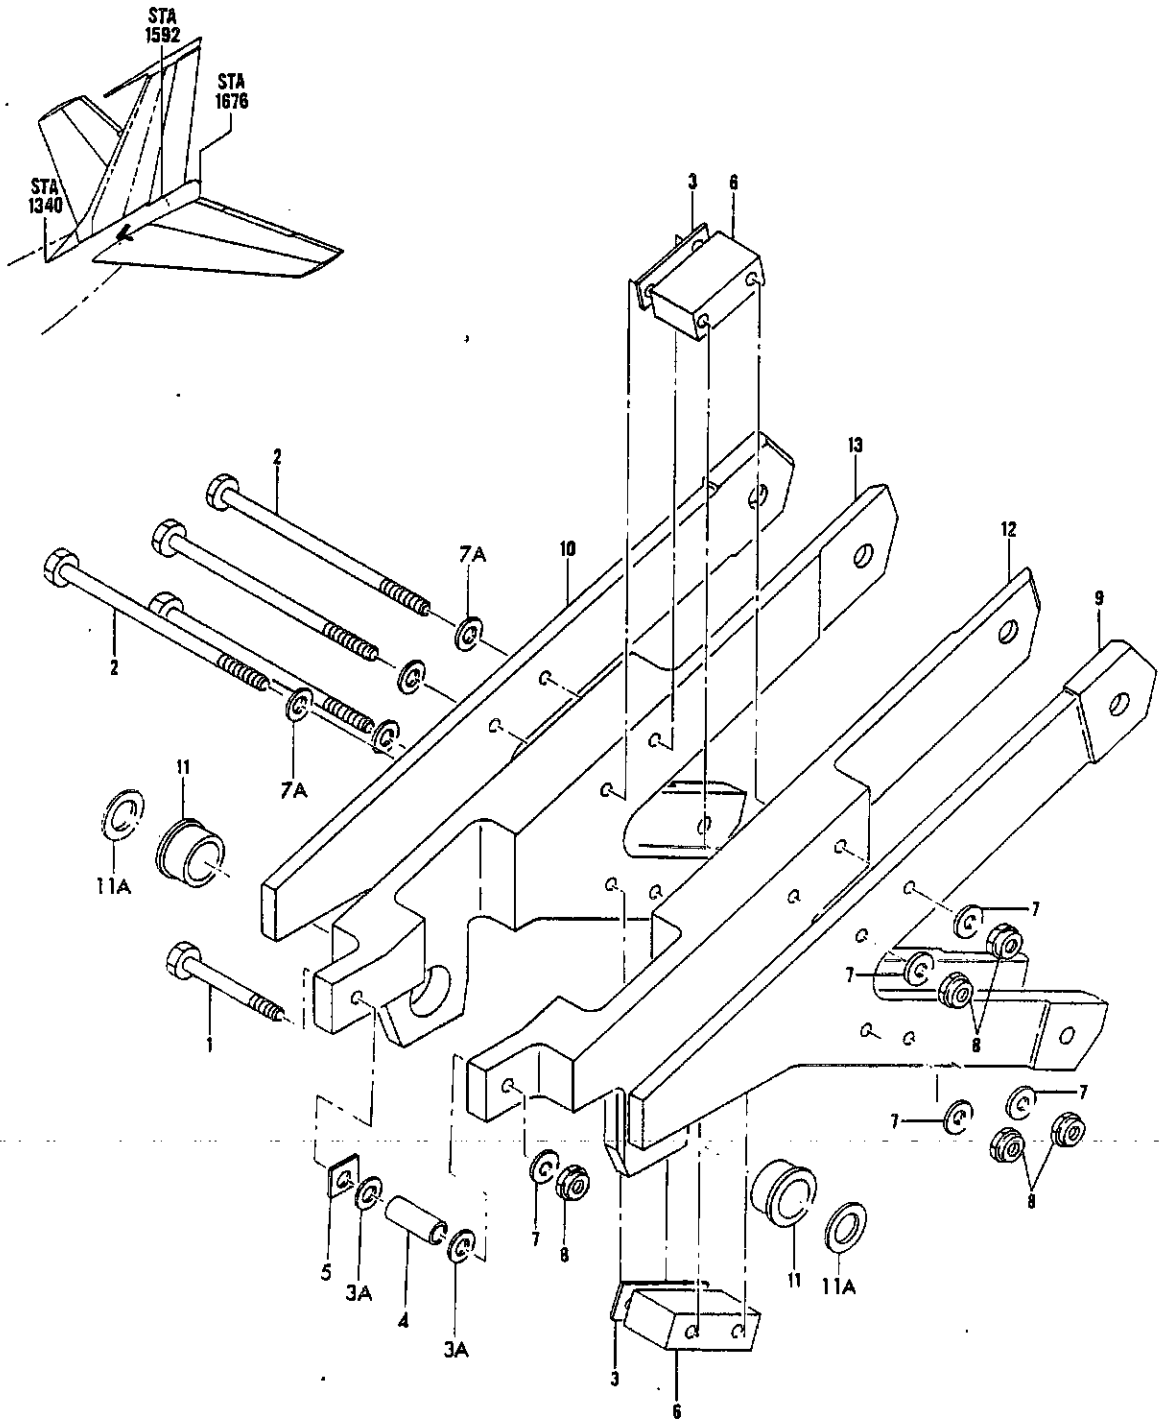


FIGURE 12A. FITTING ASSY, HORIZONTAL STABILIZER ACTUATOR

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R	12A	65-46604-1	FITTING ASSY, HORIZONTAL STABILIZER ACTUATOR (SEE 55-2, FIG. 9, ITEM 23A) (OPTIONAL AND FOR REPLACEMENT ORDER 65-46604-6)	0150	RF
R R R		65-46604-6	FITTING ASSY, HORIZONTAL STABILIZER ACTUATOR (SEE 55-2, FIG. 9, ITEM 23A) (OPTIONAL TO AND REPLACEMENT FOR 65-46604-1)	0150	RF
R R		65-46604-6	FITTING ASSY, HORIZONTAL STABILIZER ACTUATOR (SEE 55-2, FIG. 9, ITEM 23A)	5151	RF
R R R		65-46604-11	FITTING ASSY, HORIZONTAL STABILIZER ACTUATOR (SEE 55-2, FIG. 9, ITEM 23A)	5299	RF
	1	NAS1108-49W	. BOLT.		1
	2	NAS1108-117	. BOLT.		4
	3	BACS40B16-50	. SHIM.		2
	3A	AN960-816	. WASHER.		2
	4	NAS43HT8-104	. SPACER.		1
	5	BACS40B16-16	. SHIM.		1
	6	65-46604-5	. SPACER, HORIZONTAL STABILIZER ACTUATOR FITTING.		2
	7	AN960B816L	. WASHER.		5
	7A	MS20002C8	. WASHER, (USED ON 65-46604-6).		4
	8	BACN10BY58	. NUT		5
R R	9	65-4067-1	. PLATE, HORIZONTAL STABILIZER ACTUATOR (USED ON. 65-46604-1)	0150	1
	9	65-4067-3	. PLATE, HORIZONTAL STABILIZER ACTUATOR (USED ON. 65-46604-6 AND -11)		1
R R	10	65-4067-2	. PLATE, HORIZONTAL STABILIZER ACTUATOR (USED ON. 65-46604-1)	0150	1
	10	65-4067-4	. PLATE, HORIZONTAL STABILIZER ACTUATOR (USED ON. 65-46604-6 AND -11)		1
	11	66-4562	. BUSHING, HORIZONTAL STABILIZER ACTUATOR FITTING		2
R R	12	65-46604-3	. FITTING, HORIZONTAL STABILIZER ACTUATOR (USED ON. 65-46604-1)	0150	1
	12	65-46604-7	. FITTING, HORIZONTAL STABILIZER ACTUATOR (USED ON. 65-46604-6)		1
R R	12	65-46604-9	. FITTING, HORIZONTAL STABILIZER ACTUATOR (USED ON. 65-46604-11)	5299	1
R R	13	65-46604-4	. FITTING, HORIZONTAL STABILIZER ACTUATOR (USED ON. 65-46604-1)	0150	1
	13	65-46604-8	. FITTING, HORIZONTAL STABILIZER ACTUATOR (USED ON. 65-46604-6)		1
R R	13	65-46604-10	. FITTING, HORIZONTAL STABILIZER ACTUATOR (USED ON. 65-46604-11)	5299	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

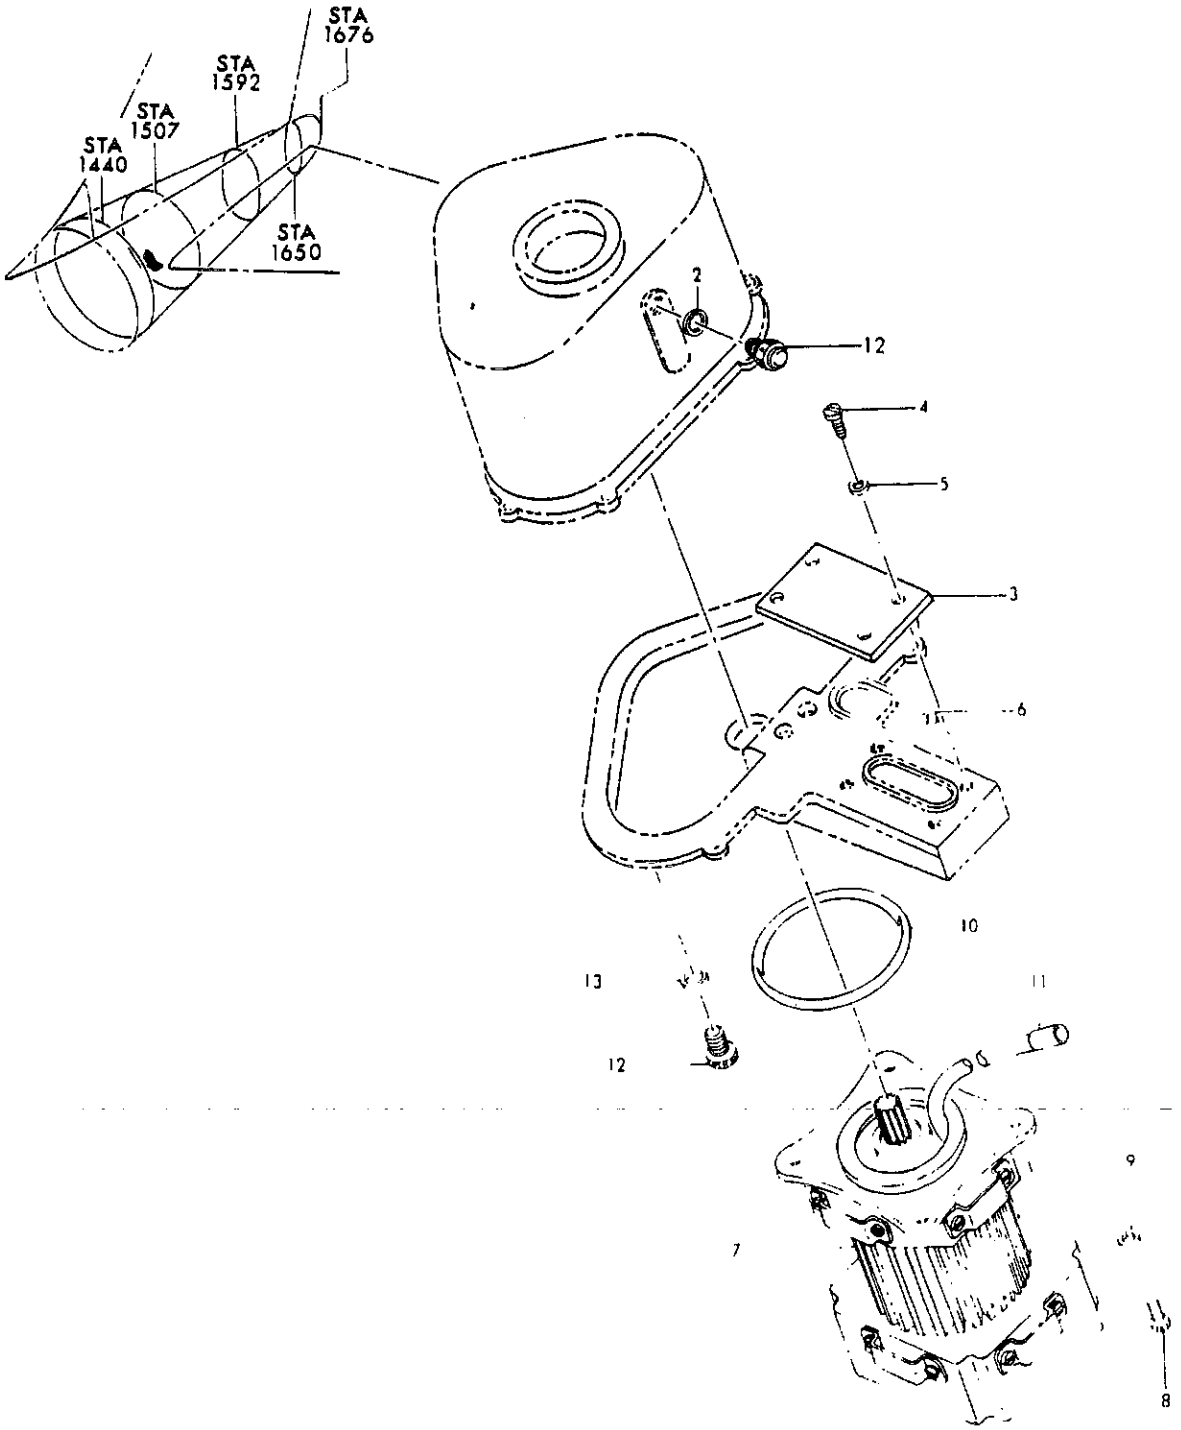


FIGURE 12B. ACTUATOR ASSY, ROTARY

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R	12B	R1604M5-111	ACTUATOR ASSY, ROTARY (V81039) (SAME AS BAC SPEC NO.. 10-60165-3) (SEE FIG. 9, ITEM 18 AND FIG. 9A, ITEM 10)	0450	RF
		R1604M5-111	ACTUATOR ASSY, ROTARY (V81039) (SAME AS BAC SPEC NO.. 10-60165-3) (DELETED BY SB 2734) (SEE FIG. 9, ITEM 18)	0103	RF
R	M 2	AN6290-3	. PACKING	0150	1
R	M 3	6020742	. COVER PLATE (V81039)	0150	1
			ATTACHING PARTS		
R	M 4	AN500A4-5	. SCREW	0150	4
R	M 5	NAS620-4L	. WASHER	0150	4
			-------*-------		
R	M 6	5360208	. O RING (V81039)	0150	1
R	M 7	E6440M10-2	. MOTOR ASSY, (V81039)	0150	1
			ATTACHING PARTS		
R	M 8	AN5H-6A	. SCREW	0150	4
R	M 9	3120448	. WASHER (V81039)	0150	4
			-------*-------		
R	M 10	5360207	. O RING (V81039)	0150	1
R	M 11	9	. SLEEVE (V81851)	0150	AR
R	M 12	MS9015-3	. PLUG SEAL	0150	2
R	M 13	AN6290-3	. PACKING	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

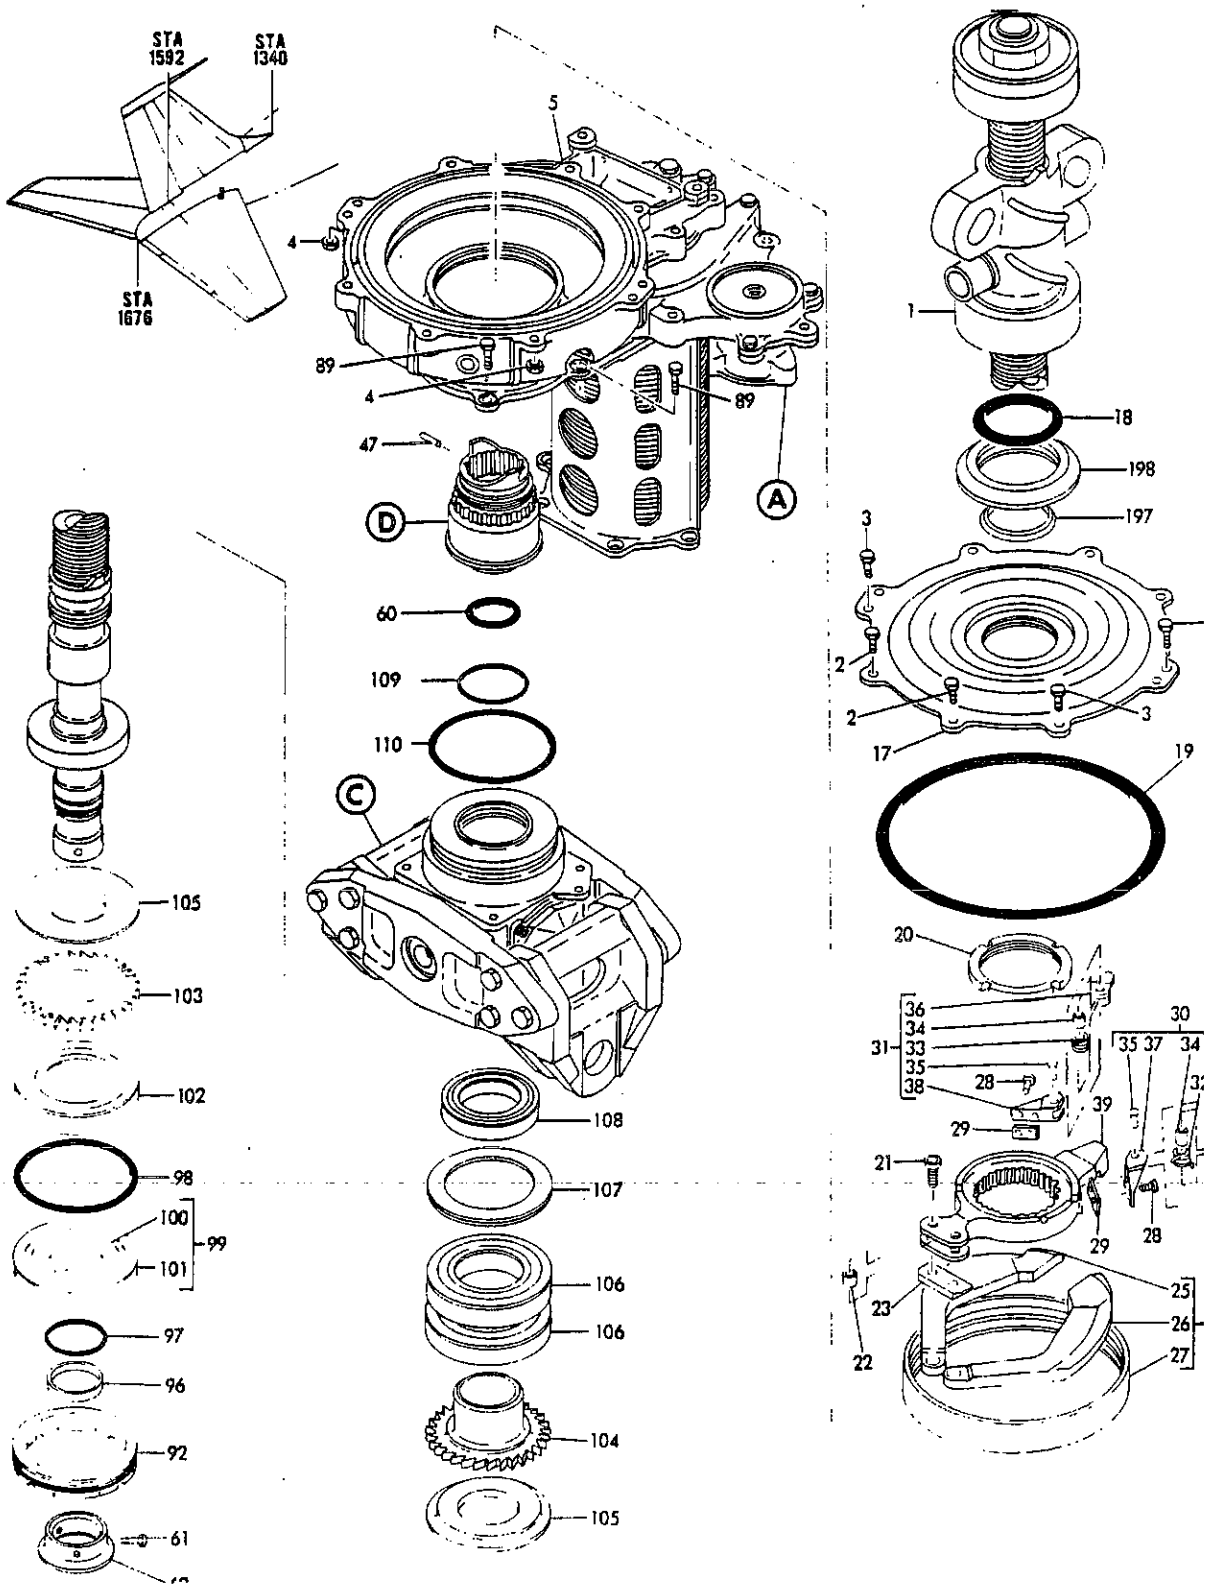


FIGURE 13A. ACTUATOR ASSY, STABILIZER TRIM (SHEET 1)

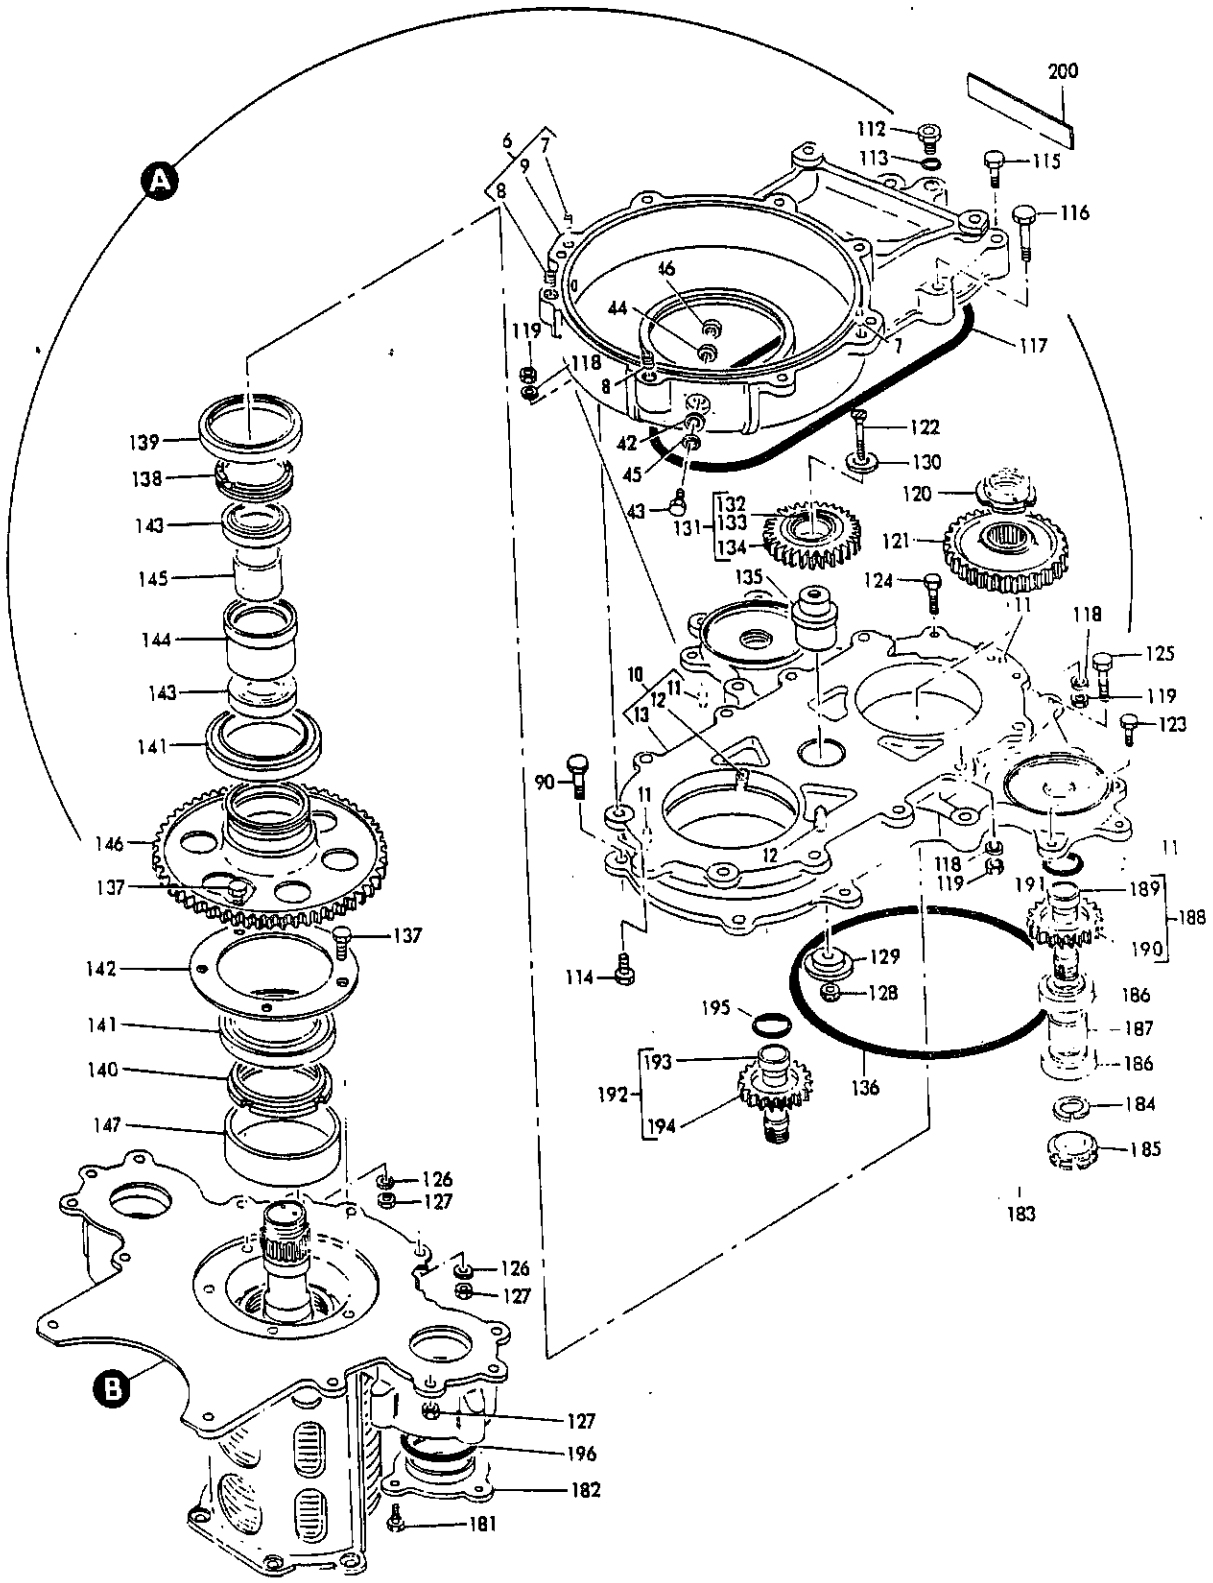


FIGURE 13A. ACTUATOR ASSY, STABILIZER TRIM (SHEET 2)

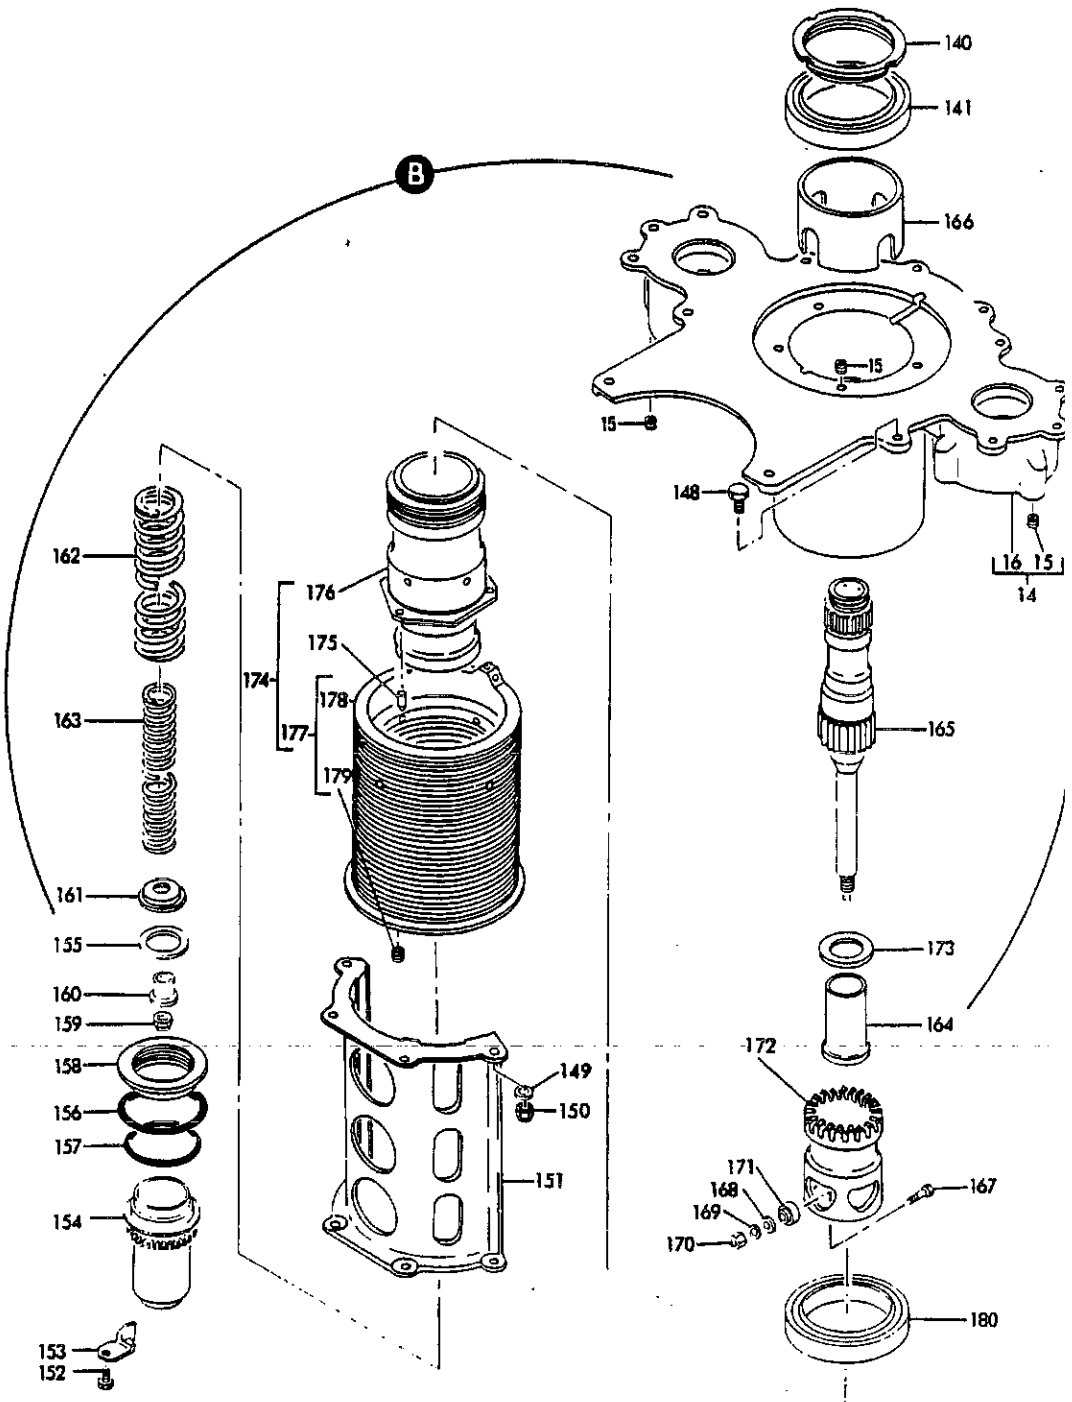


FIGURE 13A. ACTUATOR ASSY, STABILIZER TRIM (SHEET 3)

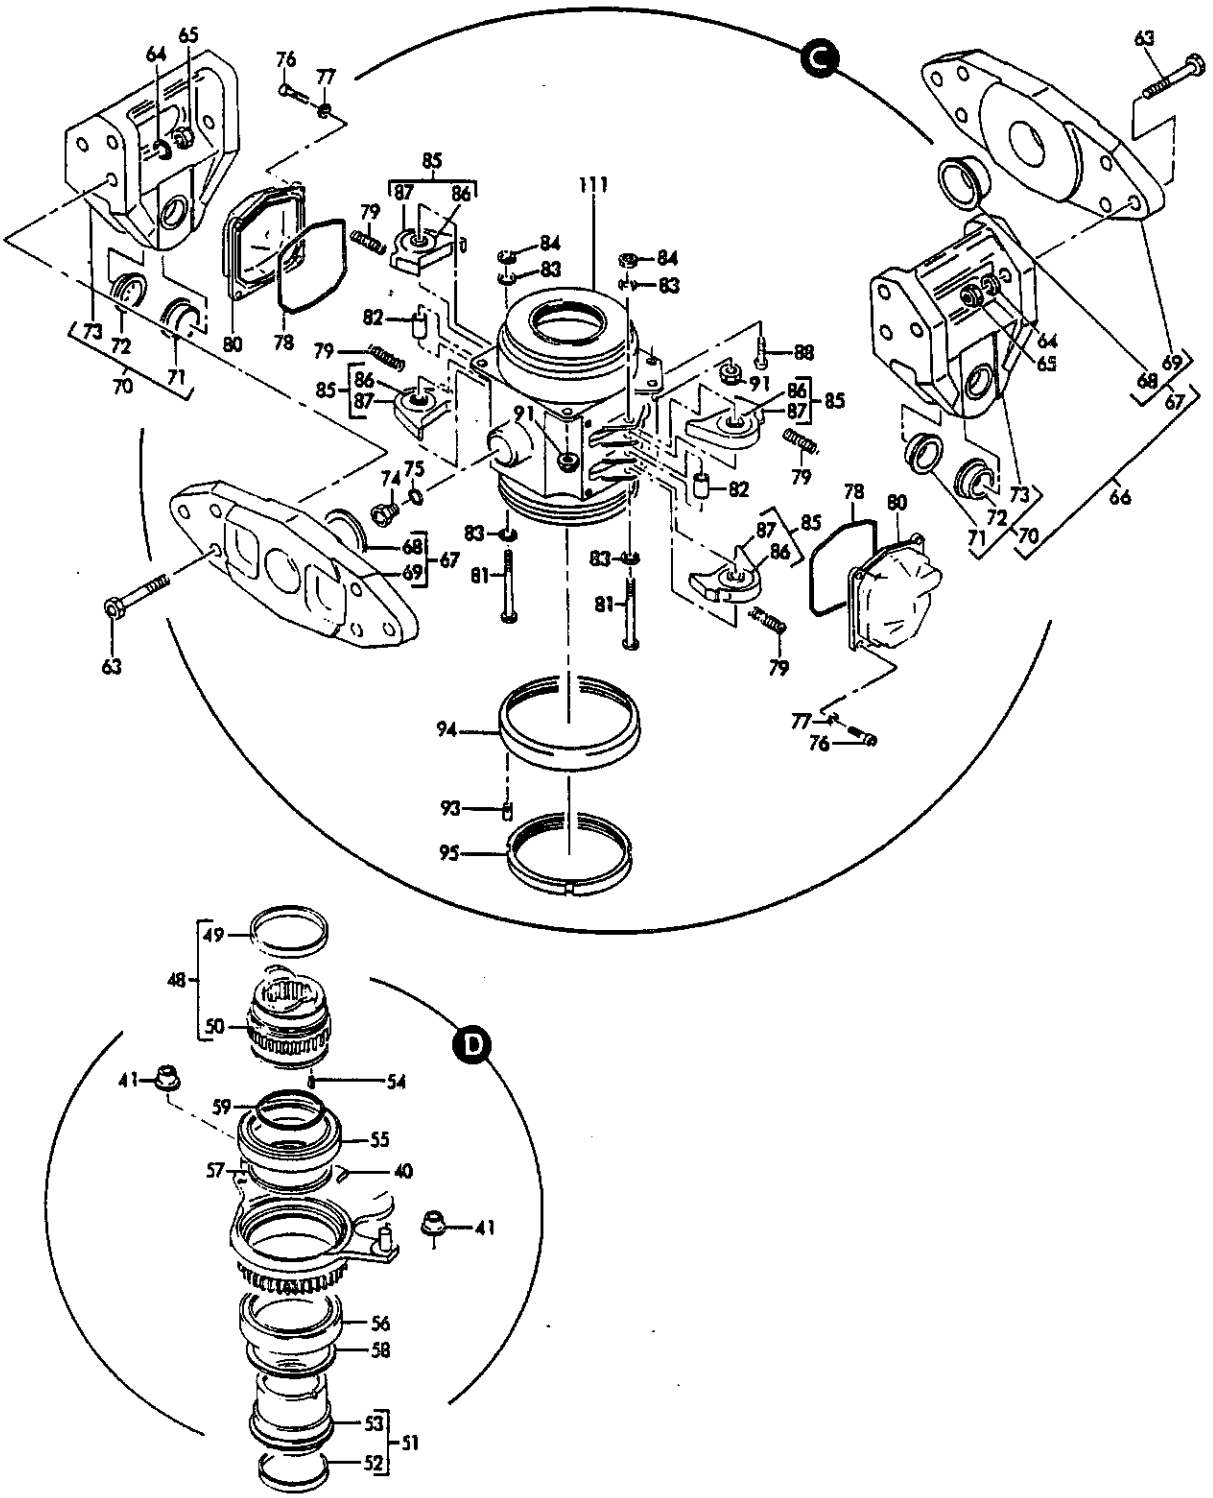


FIGURE 13A. ACTUATOR ASSY, STABILIZER TRIM (SHEET 4)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
13A	65-6456-16	ACTUATOR ASSY, STABILIZER TRIM (FLIGHT CONTROL ONLY). (DELETED BY SB 2619) (SEE FIG. 9, ITEM 30)	0102	RF
1	10-60162-3	. BALL NUT AND SCREW ASSY, JACKSCREW (USED ON 65-6456-14 AND -16)	0102	1
2	AN4H5A	. BOLT.	0102	2
3	AN4-7A	. BOLT.	0102	6
4	NAS679A4W	. NUT	0102	6
5	65-8757-12	. HOUSING ASSY, GEAR BOX.	0102	1
6	65-8757-17	. . HOUSING ASSY, UPPER (MATCHED PART, ORDER ASSEMBLY ONLY)	0102	1
7	BACP18D4-5	. . . PIN	0102	2
8	BACS13P4CN4	. . . SLEEVE.	0102	2
9	65-8757-14	. . . HOUSING	0102	1
10	65-8757-18	. . HOUSING ASSY, CENTER (MATCHED PART, ORDER ASSEMBLY ONLY)	0102	1
11	BACP18D4-5	. . . PIN	0102	4
12	BACS13P5CN4	. . . SLEEVE.	0102	2
13	65-8757-15	. . . HOUSING	0102	1
14	65-8757-19	. . HOUSING ASSY, LOWER (MATCHED PART, ORDER ASSEMBLY ONLY)	0102	1
15	BACS13P4CN4	. . . SLEEVE.	0102	10
16	65-8757-16	. . . HOUSING	0102	1
17	65-8757-13	. . COVER, (MATCHED PART, ORDER ASSEMBLY ONLY).	0102	1
18	AN6230-11	. GASKET.	0102	1
19	MS29513-272	. PACKING	0102	1
20	66-5015	. NUT, AUXILIARY BRAKE.	0102	1
21	AN5HC11A	. BOLT.	0102	2
22	66-19351-2	. SPACER.	0102	2
23	66-19337-1	. NUTPLATE ASSY, SECONDARY BRAKE (ALTERED FROM G1981-5-7 (V75237))	0102	1
24	65-6456-15	. BRAKE ASSY, (USED ON 65-6456-16).	0102	1
25	65-38256-7	. . SHOE, JACKSCREW GEARBOX SECONDARY (MATCHED PART, ORDER ASSEMBLY ONLY) (USED ON 65-6456-15)	0102	1
26	65-38256-8	. . SHOE, JACKSCREW GEARBOX SECONDARY (MATCHED PART, ORDER ASSEMBLY ONLY) (USED ON 65-6456-15)	0102	1
27	90-4553	. . RACE, AUXILIARY (MATCHED PART, ORDER ASSEMBLY ONLY)	0102	1
28	BACS12AF4C	. SCREW, (USED ON 65-6456-10, -12, -14 AND -16)	0102	4
29	66-20440-1	. SHIM, SECONDARY BRAKE	0102	2
30	69-41925-1	. SPRING ASSY, SECONDARY BRAKE ENGAGE (USED ON 65-6456-16)	0102	1
31	69-41925-2	. SPRING ASSY, SECONDARY BRAKE ENGAGE (USED ON 65-6456-16)	0102	1
32	69-41924-1	. . SPRING, TORSION (USED ON 69-41925-1).	0102	1
33	69-41924-2	. . SPRING, TORSION (USED ON 69-41925-2).	0102	1
34	66-20401-1	. . SPACER.	0102	1
35	MS20427M5	. . RIVET	0102	1
36	65-55197-1	. . ARM, (USED ON 69-41925-1 AND -2).	0102	1
37	65-55196-1	. . BRACKET, (USED ON 69-41925-1)	0102	1
38	65-55196-2	. . BRACKET, (USED ON 69-41925-2)	0102	1
39	50-3154-3003	. DOG, PICKUP	0102	1
40	65-13373-2	. GEAR, BRAKE UNLOCK (USED ON 65-6456-12, -14 AND -16) (OPTIONAL 69-34783-1)	0102	1
40	69-34783-1	. GEAR, BRAKE UNLOCK (USED ON 65-6456-12, -14 AND -16) (OPTIONAL TO 65-13373-2)	0102	1
41	66-22342-4	. ROLLER, BRAKE UNLOCK (USED ON 65-6456-12, -14 AND -16) (OPTIONAL 66-22342-2)	0102	2
41	66-22342-2	. ROLLER, BRAKE UNLOCK (USED ON 65-6456-12, -14 AND -16) (OPTIONAL TO 66-22342-4)	0102	2
42	BACS11U3S	. SEAL.	0102	4
43	NAS1104-8W	. BOLT.	0102	4
44	AN960D416	. WASHER.	0102	4
45	AN960D416L	. WASHER.	0102	4
46	NAS679A4W	. NUT	0102	4
47	GP3H094X750-72	. PIN, (V73957) (OPTIONAL NAS561P3-12 (DELETED BY SB 2748))	0102	1
47	NAS561P3-12	. PIN, (DELETED BY SB 2748) (OPTIONAL TO GP3H094X750-72 (V739571) (DELETED BY SB 2748))	0102	1
47	GP3H094X750-72	. PIN, (V73957) (REPLACES NAS561P3-12 BY SB 2748)	0102	1
48	65-33650-1	. ADAPTER ASSY, LOWER STOP.	0102	1
49	69-36083-2	. . SEAL, LOW PRESSURE ROTARY RING.	0102	1
50	65-33650-2	. . ADAPTER	0102	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
13A 51	69-11769-2	. ADAPTER ASSY, LOWER STOP (USED ON 65-6456-12, -14 AND -16)	0102	1
52	69-36083-3	. . SEAL.	0102	1
53	69-11769-3	. . ADAPTER, (USED ON 69-11769-2)	0102	1
54	NAS561C4-7	. PIN	0102	1
55	AN202KP49B	. BEARING	0102	1
56	BACB10C205A	. BEARING	0102	1
57	RS306	. RING, RETAINING (V80756).	0102	1
58	69-20153-17	. SHIM, LAMINATED (USED ON 65-6456-12, -14 AND -16)	0102	1
59	AN6230-9	. GASKET.	0102	1
60	AN6230-3	. GASKET.	0102	1
61	BACS12AG7F	. SCREW	0102	3
62	69-8690	. FLANGE, SAFETY STOP	0102	1
63	NAS1108-24W	. BOLT.	0102	12
64	AN960D816	. WASHER.	0102	12
65	NAS1022A8	. NUT	0102	12
66	65-6868	. GIMBAL ASSY, LOWER.	0102	1
67	65-6867	. . YOKE ASSY	0102	2
68	30-2559	. . . BUSHING	0102	1
69	65-6867-1	. . . YOLK.	0102	1
70	65-6866	. . FORK ASSY	0102	2
71	63-2664	. . . BUSHING	0102	1
72	63-2664-1	. . . BUSHING	0102	1
73	65-6866-1	. . . FORK.	0102	1
74	AN814-4DL	. PLUG.	0102	1
75	MS28778-4	. PACKING	0102	1
76	BACS12AG7F	. SCREW	0102	8
77	BACW10T10L	. WASHER.	0102	8
78	AN6230-17	. GASKET.	0102	2
79	63-8663	. SPRING, COMPRESSION	0102	4
80	65-7086	. COVER, RATCHET.	0102	2
81	66-19069	. BOLT.	0102	2
82	NAS43DD5-44	. SPACER.	0102	2
83	AN960D516L	. WASHER.	0102	4
84	AN320-5	. NUT	0102	2
85	69-5735	. PAWL ASSY, BRAKE.	0102	4
86	AN200KP5	. . BEARING	0102	1
87	69-5735-1	. . PAWL.	0102	1
88	MS20005H6	. BOLT.	0102	2
89	AN4-7A	. BOLT.	0102	2
90	AN4-10A	. BOLT.	0102	2
91	NAS679A4W	. NUT	0102	4
93	NAS559-3	. LOCK, (USED ON 65-6456-16).	0102	1
94	69-44149-1	. NUT, JAM (USED ON 65-6456-16)	0102	1
95	69-44148-1	. NUT, HOUSING (USED ON 65-6456-16)	0102	1
96	6-72465-3004	. RING, LOW PRESSURE ROTARY SEAL.	0102	1
97	AN6230-4	. GASKET.	0102	1
98	AN6230-21	. GASKET.	0102	1
99	69-5794	. ADAPTER ASSY, BEARING	0102	1
100	BACB10A81	. . BEARING	0102	1
101	69-5794-1	. . ADAPTER	0102	1
102	212NPPE8183	. BEARING, (V21335)	0102	1
103	69-8730	. RATCHET	0102	1
104	69-8730-1	. RATCHET	0102	1
105	66-8668	. PLATE, BRAKE.	0102	2
106	212KDDBE8183	. BEARING, BALL (V21335).	0102	2
107	66-8669	. SPACER, BEARING RETAINER.	0102	1
108	9111PPE8183	. BEARING, BALL (V21335).	0102	1
109	AN6230-7	. GASKET.	0102	1
110	AN6230-22	. GASKET.	0102	1
111	65-6623-4	. HOUSING, SCREW (USED ON 65-6456-16)	0102	1
114	NAS1104-9W	. BOLT.	0102	6
115	AN4-10A	. BOLT.	0102	2
116	AN4-16A	. BOLT.	0102	4
117	MS29513-272	. PACKING	0102	1
118	AN960D416	. WASHER.	0102	12
119	NAS679A4W	. NUT	0102	12
120	30-2661	. NUT	0102	1
121	90-3583	. GEAR, SPUR.	0102	1
122	NAS334CP16-5	. BOLT.	0102	1
123	AN4-7A	. BOLT.	0102	4
124	AN4-14A	. BOLT.	0102	1
125	AN4-20A	. BOLT.	0102	2
126	AN960D416	. WASHER.	0102	3

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
13A 127	NAS679A4W	. NUT	0102	7
128	AN310-4	. NUT	0102	1
129	63-8871-1	. PLUG, GEAR ASSY MOUNT	0102	1
130	66-5181	. WASHER, BEARING RETAINER.	0102	1
131	69-6064	. GEAR ASSY, IDLER.	0102	1
132	BACR12Y15	. . RING.	0102	1
133	AN201KP20A	. . BEARING	0102	1
134	69-6064-1	. . GEAR.	0102	1
135	66-5173	. ADAPTER, MOUNT GEAR ASSY.	0102	1
136	MS29513-274	. PACKING	0102	1
		(OPTIONAL MS9021-275)		
136	MS9021-275	. PACKING	0102	1
		(OPTIONAL TO MS29513-274)		
137	AN4H4A	. BOLT.	0102	4
138	60-3114	. NUT, INNER BEARING.	0102	1
139	60-3115	. NUT, OUTER BEARING.	0102	1
140	60-3113-1	. NUT	0102	2
141	AN202KP49B	. BEARING	0102	3
142	60-3286-1	. PLATE, RETAINING.	0102	1
143	AN202KP25B	. BEARING	0102	2
144	30-2538-1	. SPACER, UPPER BEARING OUTER	0102	1
145	30-2493-1	. SPACER, UPPER BEARING	0102	1
146	50-3132	. GEAR, CLUTCH.	0102	1
147	30-2531-1	. SPACER, MIDDLE BEARING.	0102	1
148	AN3-6A	. BOLT.	0102	4
149	BACW10T10L	. WASHER.	0102	4
150	NAS679A3W	. NUT	0102	4
151	50-3370	. GUARD, CABLE.	0102	1
152	NAS1303-1HW	. BOLT.	0102	1
153	69-20906-1	. CLIP, CAP LOCK.	0102	1
154	69-20905-2	. CAP, CABLE DRUM END	0102	1
155	69-20886-1	. WASHER, THRUST.	0102	1
156	AN6230-7	. GASKET.	0102	1
157	AN6230-10	. GASKET.	0102	1
158	66-9675	. ADAPTER, SEAL	0102	1
159	NAS679A3W	. NUT	0102	1
160	69-20887-1	. ADAPTER, RETAINING.	0102	1
161	69-20884-1	. RETAINER, SPRING.	0102	1
162	63-10102	. SPRING, COMPRESSION	0102	1
163	63-10130	. SPRING, COMPRESSION	0102	1
164	66-9677	. SPACER, SPRING.	0102	1
165	69-23594-2	. SHAFT	0102	1
166	30-2492-1	. SPACER, LOWER BEARING	0102	1
167	30-3565	. SCREW, CAM ROLLER	0102	4
168	30-3564	. WASHER.	0102	4
169	AN960D10L	. WASHER.	0102	4
170	AN320-3	. NUT	0102	4
171	BAC8108130	. BEARING	0102	4
172	90-4037-3001	. CLUTCH, JAW	0102	1
173	30-2489	. WASHER, SPRING SEAT	0102	1
174	50-6396-3005	. DRUM ASSY	0102	1
175	BACP18D4-6	. . PIN	0102	1
176	90-6961-1	. . SHAFT, CABLE.	0102	1
177	50-6387-3006	. . DRUM ASSY, REAR CABLE	0102	1
178	50-6387-3005	. . . DRUM.	0102	1
179	MS21208F1-20	. . . INSERT.	0102	1
180	AN202KP49B	. BEARING	0102	1
181	AN4H5A	. BOLT.	0102	6
182	90-3272-2	. CAP, END.	0102	2
183	NAS561CF22	. PIN	0102	2
184	3515-36-02-0541	. WASHER, (V78189).	0102	2
185	66-19334-1	. NUT, INPUT SHAFT LOCK	0102	2
186	AN201KP16A	. BEARING, BALL	0102	4
187	30-2414-1	. SPACER, PINNION GEAR BEARING.	0102	2
188	69-44012-4	. GEAR ASSY, PINION	0102	1
189	69-36083-4	. . SEAL, LOW PRESSURE ROTARY RING.	0102	1
190	69-44012-5	. . GEAR.	0102	1
191	AN6227-19	. PACKING	0102	1
192	69-44011-6	. GEAR ASSY, PINION	0102	1
193	69-36083	. . SEAL, LOW PRESSURE ROTARY RING.	0102	1
194	69-44011-7	. . GEAR.	0102	1
195	AN6227-16	. PACKING	0102	1
196	AN6230-4	. GASKET.	0102	2
197	NAS1611-148	. PACKING	0102	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
13A 198	69-29100-1	. UMBRELLA, JACKSCREW GEAR BOX.	0102	1
200	BACN12A1EZ	. NAMEPLATE	0102	1
		. FOR REFERENCE TO OTHER ACTUATOR DETAILS, SEE NHA. . .	0102	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

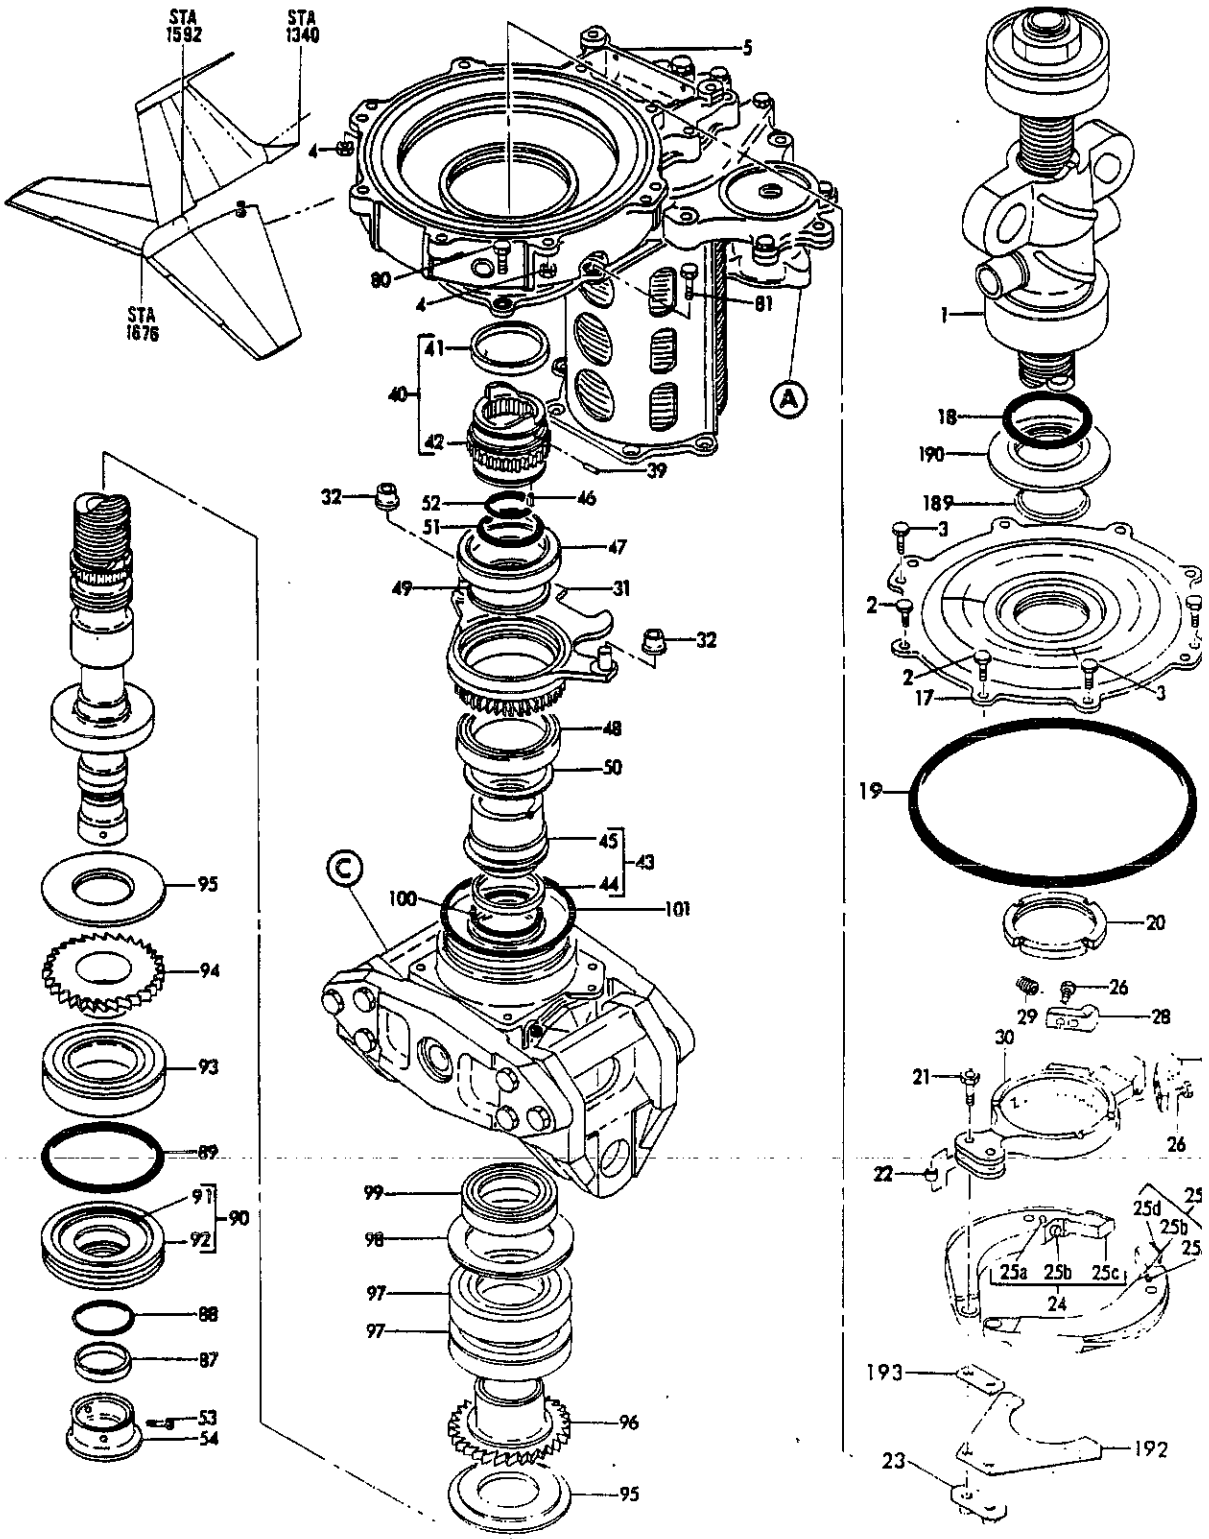


FIGURE 138. ACTUATOR ASSY, STABILIZER TRIM-(FLIGHT CONTROL ONLY) (SHEET 1)

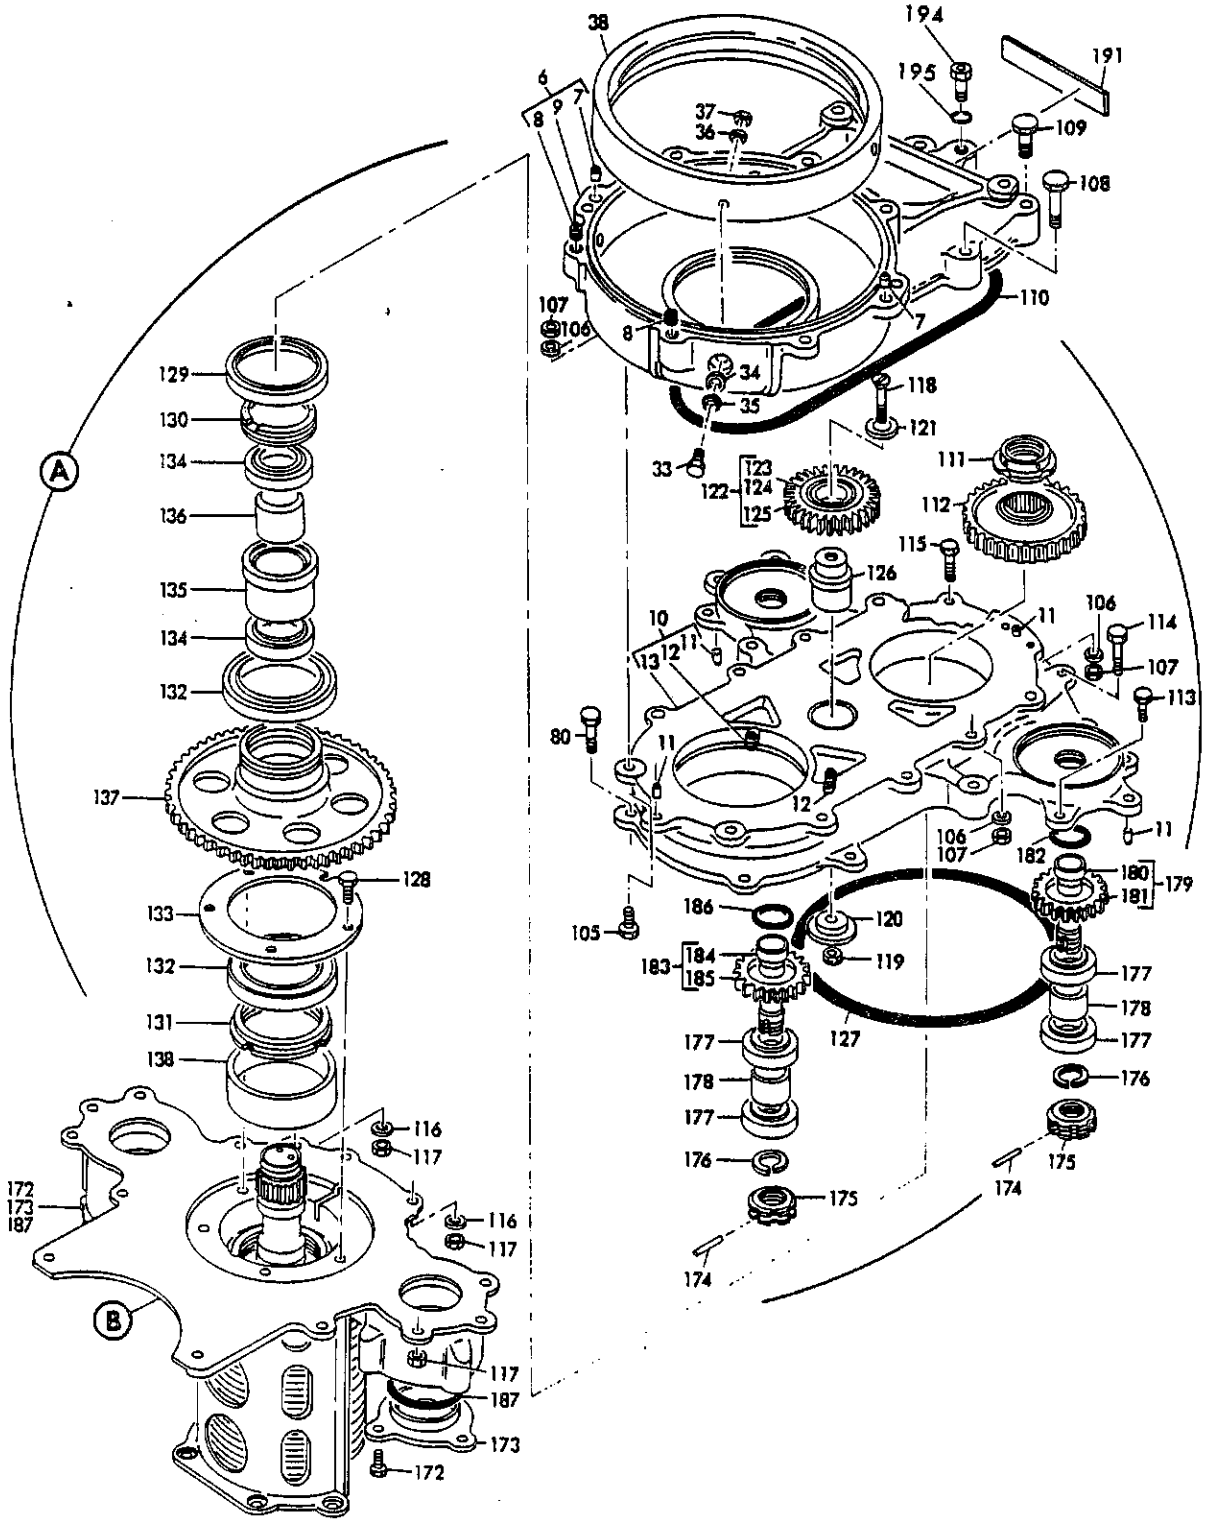


FIGURE 138. ACTUATOR ASSY, STABILIZER TRIM (FLIGHT CONTROL ONLY) (SHEET 2)

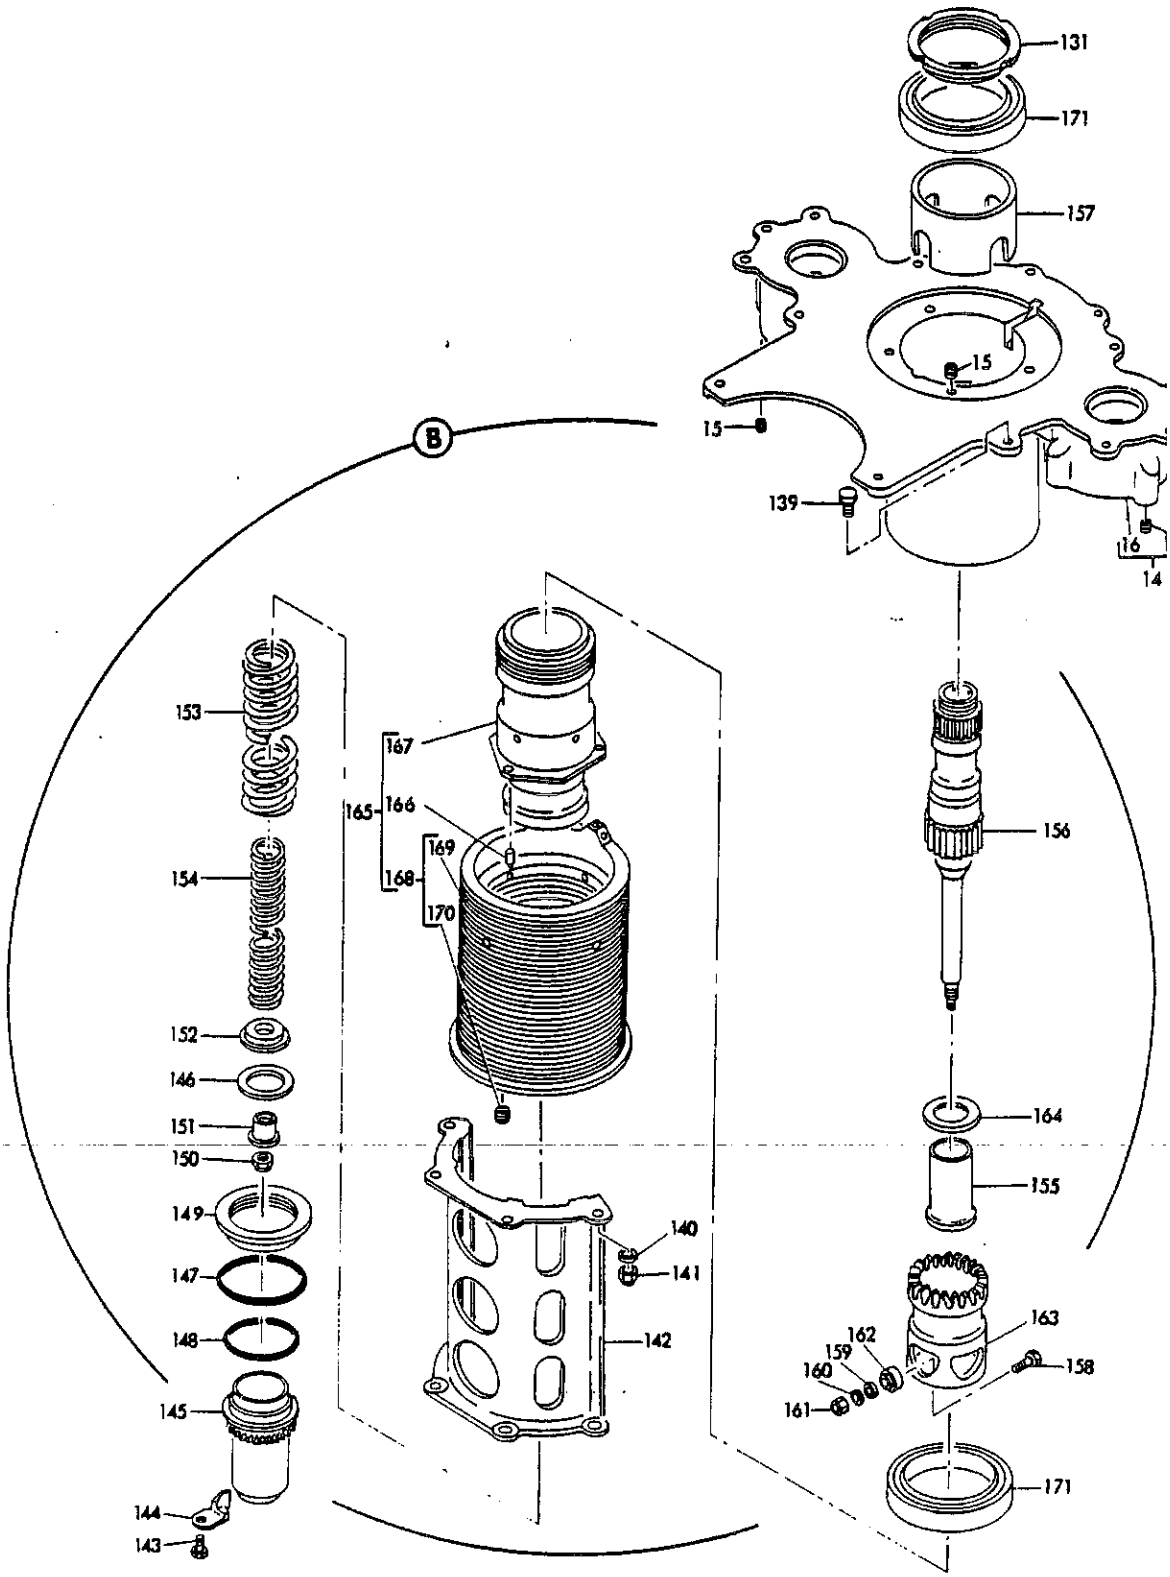


FIGURE 138. ACTUATOR ASSY, STABILIZER TRIM (FLIGHT CONTROL ONLY) (SHEET 3)

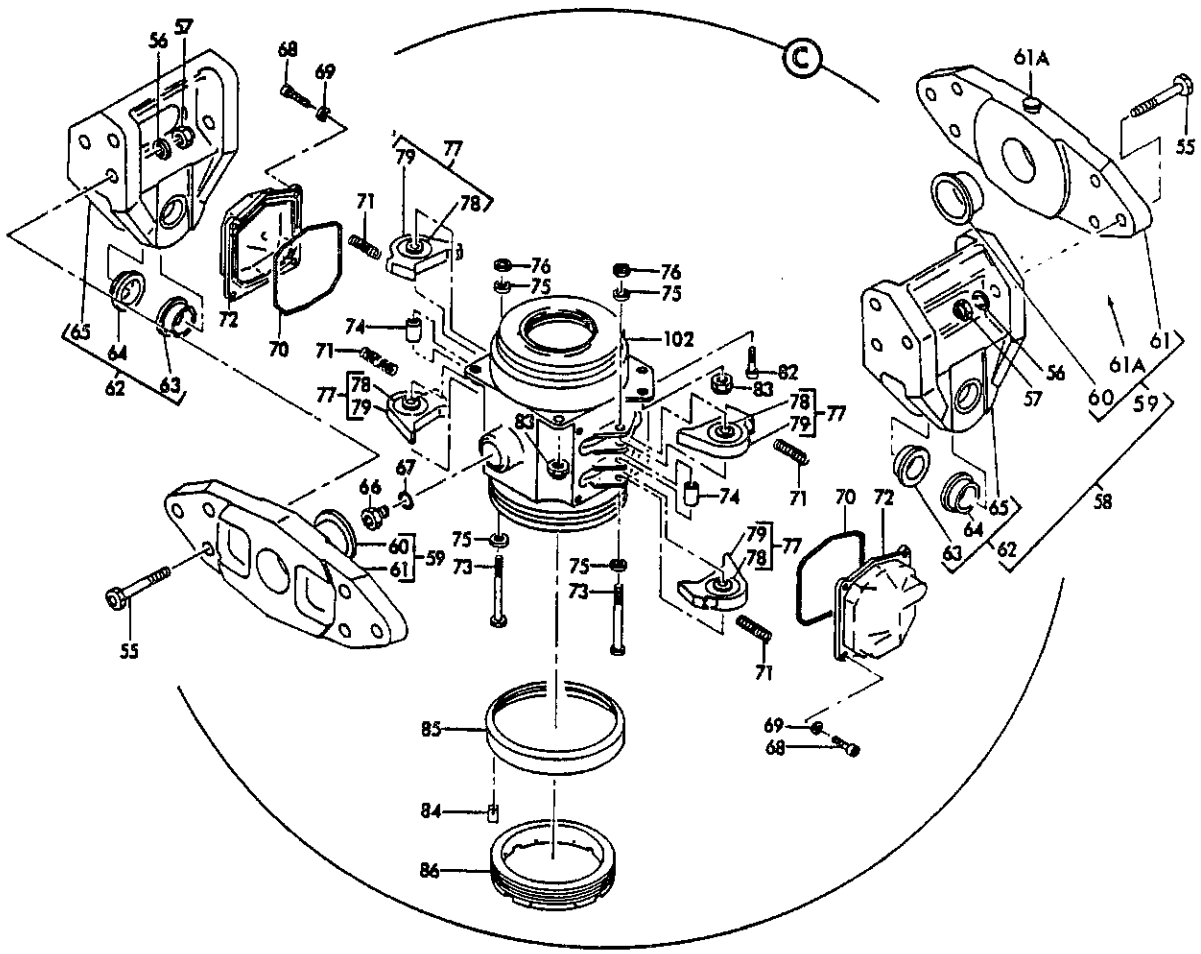


FIGURE 13B. ACTUATOR ASSY, STABILIZER TRIM (FLIGHT CONTROL ONLY) (SHEET 4)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	138	65-6456-17	ACTUATOR ASSY, STABILIZER TRIM (FLIGHT CONTROL ONLY). . (SEE FIG. 9, ITEM 30)	0350	RF
RRRRRRR		65-6456-20	ACTUATOR ASSY, STABILIZER TRIM (FLIGHT CONTROL ONLY). . (SEE FIG. 9, ITEM 30) (OPTIONAL TO 65-6456-21)	5199	RF
RRRRR		65-6456-21	ACTUATOR ASSY, STABILIZER TRIM (FLIGHT CONTROL ONLY). . (SEE FIG. 9, ITEM 30) (OPTIONAL 65-6456-20)	5199	RF
		65-6456-17	ACTUATOR ASSY, STABILIZER TRIM (FLIGHT CONTROL ONLY). . (ADDED BY SB 2619) (SEE FIG. 9, ITEM 30)	0102	RF
	1	10-60162-3	. BALL NUT AND SCREW ASSY, JACKSCREW.		1
	2	AN4H5A	. BOLT.		2
	3	AN4-7A	. BOLT.		6
	4	NAS679A4W	. NUT		4
	5	65-8757-12	. HOUSING ASSY, GEAR BOX.		1
	6	65-8757-17	. . HOUSING ASSY, UPPER (MATCHED PART, ORDER ASSEMBLY ONLY)		1
	7	BACP18D4-5	. . . PIN		2
	8	BACS13P4CN4	. . . SLEEVE.		2
	9	65-8757-14	. . . HOUSING, GEAR BOX		1
	10	65-8757-18	. . HOUSING ASSY, CENTER (MATCHED PART, ORDER ASSEMBLY ONLY)		1
	11	BACP18D4-5	. . . PIN		4
	12	BACS13P5CN4	. . . SLEEVE.		2
	13	65-8757-15	. . . HOUSING, GEAR BOX		1
	14	65-8757-19	. . HOUSING ASSY, LOWER (MATCHED PART, ORDER ASSEMBLY ONLY)		1
	15	BACS13P4CN4	. . . SLEEVE.		10
	16	65-8757-16	. . . HOUSING, GEAR BOX		1
	17	65-8757-13	. . COVER, (MATCHED PART, ORDER ASSEMBLY ONLY).		1
	18	AN6230-11	. GASKET.		1
	19	MS29513-272	. PACKING		1
	20	66-5015	. NUT, AUXILIARY BRAKE.		1
	21	AN5HC11A	. BOLT.		2
	22	66-19351-2	. SPACER, SECONDARY BRAKE ARM		2
	23	66-19337-1	. NUTPLATE ASSY		1
	24	65-64923-1	. BRAKE SHOE ASSY, JACKSCREW GEARBOX SECONDARY BRAKE. (OPTIONAL 69-46527-1)		1
	24	69-46527-1	. BRAKE SHOE ASSY, SECONDARY BRAKE. (OPTIONAL TO 65-64923-1)		1
	25	65-64923-2	. BRAKE SHOE ASSY, JACKSCREW GEARBOX SECONDARY BRAKE. (OPTIONAL 69-46527-2)		1
	25	69-46527-2	. BRAKE SHOE ASSY, SECONDARY BRAKE. (OPTIONAL TO 65-64923-2)		1
	25A	MS20427M4	. . RIVET		1
	25B	69-52387-1	. . RETAINER, SPRING (USED ON 65-64923-1 AND -2).		1
	25B	69-46527-5	. . RETAINER, SPRING (USED ON 69-46527-1 AND -2).		1
	25C	65-64923-3	. . SHOE, (USED ON 65-64923-1).		1
	25C	69-46527-3	. . SHOE, (USED ON 69-46527-1).		1
	25D	65-64923-4	. . SHOE, (USED ON 65-64923-2).		1
	25D	69-46527-4	. . SHOE, (USED ON 69-46527-2).		1
	26	MS24674-7	. SCREW		4
	27	65-64840-1	. BRACKET, SPRING SUPPORT (OPTIONAL 69-46528-1)		1
	27	69-46528-1	. BRACKET, SPRING SUPPORT (OPTIONAL TO 69-64840-1)		1
	28	65-64840-2	. BRACKET, SPRING SUPPORT (OPTIONAL 69-46528-2)		1
	28	69-46528-2	. BRACKET, SPRING SUPPORT (OPTIONAL TO 65-64840-2)		1
	29	69-47337-1	. SPRING, COMPRESSION		2
	30	50-3154-3003	. DOG, PICK UP.		1
	31	65-13373-3	. GEAR, BRAKE UNLOCK. (OPTIONAL 69-52552-2)		1
	31	69-52552-2	. GEAR, BRAKE UNLOCK. (OPTIONAL TO 65-13373-3)		1
	32	69-49226-4	. ROLLER, BRAKE UNLOCK. (OPTIONAL 66-22342-4)		2
	32	66-22342-4	. ROLLER, BRAKE UNLOCK. (OPTIONAL TO 69-49226-4)		2
	33	NAS1104-8W	. BOLT.		4
	34	BACS11U3S	. SEAL.		4
	35	AN960D416L	. WASHER.		4
	36	AN960D416	. WASHER.		4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	138 37	NAS679A4W	. NUT		4
	38	90-4553-2	. RACE, AUXILIARY BRAKE		1
	39	GP3H094X750-72	. PIN, (V73957)		1
	40	65-33650-1	. ADAPTER ASSY, LOWER STOP.		1
	41	69-36083-2	. . SEAL, LOW PRESSURE ROTARY		1
	42	65-33650-2	. . ADAPTER		1
	43	69-11769-2	. ADAPTER ASSY, LOWER STOP.		1
	44	69-36083-3	. . SEAL, LOW PRESSURE ROTARY		1
	45	69-11769-3	. . ADAPTER		1
	46	NAS561C4-7	. PIN		1
	47	AN202KP498	. BEARING		1
	48	BAC810C205A	. BEARING		1
	49	RS306	. RING, RETAINING (V80756).		1
	50	69-20153-17	. SHIM, FLAP TRANSMITTER TORQUE LIMITER LAMINATED		AR
	51	AN6230-9	. GASKET.		1
	52	AN6230-3	. GASKET.		1
	53	BACS12AG7F	. SCREW		3
	54	69-8690	. FLANGE, SAFETY STOP		1
	55	NAS1108-24W	. BOLT.		12
	56	AN960D816	. WASHER.		12
	57	NAS1022A8	. NUT		12
	58	65-6868	. GIMBAL ASSY, LOWER.	0102	1
R	58	65-6868-1	. GIMBAL ASSY, LOWER.	5199	1
	59	65-6867	. . YOKE ASSY	0102	2
R	59	65-6867-3	. . YOKE ASSY	5199	1
	60	30-2559	. . . BUSHING	0102	1
R	60	30-2559	. . . BUSHING	5199	1
	61	65-6867-1	. . . YOKE.	0102	1
R	61	65-6867-4	. . . YOKE.	5199	1
	62	65-6866	. . FORK ASSY	0102	2
R	62	65-6866-3	. . FORK ASSY	5199	1
	63	63-2664	. . . BUSHING	0102	1
R	63	63-2664	. . . BUSHING	5199	1
	64	63-2664-1	. . . BUSHING	0102	1
R	64	63-2664-1	. . . BUSHING	5199	1
	65	65-6866-1	. . . FORK.	0102	1
R	65	65-6866-4	. . . FORK.	5199	1
	66	AN814-4DL	. PLUG.	0102	1
	67	MS28778-4	. PACKING		1
	68	BACS12AG7F	. SCREW		8
	69	BACW10T10L	. WASHER.		8
	70	AN6230-17	. GASKET.		2
	71	63-8663	. SPRING, COMPRESSION		4
	72	65-7086	. COVER, RATCHET.		2
	73	66-19069	. BOLT, CLOSE TOLERANCE		2
	74	NAS43DD5-44	. SPACER.		2
	75	AN960D516L	. WASHER.		4
	76	AN320-5	. NUT		2
	77	69-5735	. PAWL ASSY, BRAKE.		4
	78	AN200KP5	. . BEARING		1
	79	69-5735-1	. . PAWL.		1
	80	AN4-7A	. BOLT.		2
	81	AN4-10A	. BOLT.		2
	82	MS20005H6	. BOLT.		2
	83	NAS679A4W	. NUT		4
	84	NAS559-3	. LOCK.		1
	85	69-44149-1	. NUT, JAM.		1
	86	69-44148-1	. NUT, HOUSING.		1
	87	6-72465-3004	. RING, LOW PRESSURE ROTARY SEAL.		1
	88	AN6230-4	. GASKET.		1
	89	AN6230-21	. GASKET.		1
	90	69-5794	. ADAPTER ASSY, BEARING		1
	91	BACB10A81	. . BEARING		1
	92	69-5794-1	. . ADAPTER		1
	93	212NPPE8183	. BEARING, BALL (V21335).		1
	94	69-8730	. RATCHET		1
	95	66-8668	. PLATE, BRAKE.		2
	96	69-8730-1	. RATCHET		1
	97	212KDDBE8183	. BEARING, BALL (V21335).		2
	98	66-8669	. SPACER, BEARING RETAINER.		1
	99	9111PPE8183	. BEARING, BALL (V21335).		1
	100	AN6230-7	. GASKET.		1
	101	AN6230-22	. GASKET.		1
	102	65-6623-4	. HOUSING, SCREW.		1


MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	138 105	NAS1104-9W	. BOLT.		6
	106	AN960D416	. WASHER.		12
	107	NAS679A4W	. NUT		12
	108	AN4-16A	. BOLT.		4
	109	AN4-10A	. BOLT.		2
	110	MS29513-272	. PACKING		1
	111	30-2661	. NUT, GEAR RETAINER.		1
	112	90-3583	. GEAR, SPUR.		1
	113	AN4-7A	. BOLT.		4
	114	AN4-20A	. BOLT.		2
	115	AN4-14A	. BOLT.		1
	116	AN960D416	. WASHER.		3
	117	NAS679A4W	. NUT		7
	118	NAS334CP16-5	. BOLT.		1
	119	AN310-4	. NUT		1
	120	63-8871-1	. PLUG.		1
	121	66-5181	. WASHER, BEARING RETAINER.		1
	122	69-6064	. GEAR ASSY, IDLER.		1
	123	BACR12Y15	. . RING.		1
	124	AN201KP20A	. . BEARING		1
	125	69-6064-1	. . GEAR.		1
	126	66-5173	. ADAPTER, MOUNT GEAR ASSY.		1
	127	MS29513-274	. PACKING (OPTIONAL MS9021-275)		1
	127	MS9021-275	. PACKING (OPTIONAL TO MS29513-274)		1
	128	AN4H4A	. BOLT.		4
R	129	60-3115	. NUT, OUTER BEARING RETAINER	0350	1
R	129	69-67128-1	. NUT, OUTER BEARING RETAINER	5199	1
	130	60-3114	. NUT, INNER BEARING RETAINER		1
R	131	60-3113-1	. NUT, BEARING RETAINER	0350	2
R	131	69-67128-1	. NUT, BEARING RETAINER	5199	2
	132	AN202KP49B	. BEARING		2
	133	60-3286-1	. PLATE, BEARING RETAINER		1
	134	AN202KP25B	. BEARING		2
	135	30-2538-1	. SPACER, UPPER BEARING OUTER		1
	136	30-2493-1	. SPACER, UPPER BEARING		1
	137	50-3132	. GEAR, CLUTCH.		1
	138	30-2531-1	. SPACER, MIDDLE BEARING.		1
	139	AN3-6A	. BOLT.		4
	140	BACW10T10L	. WASHER.		4
	141	NAS679A3W	. NUT		4
	142	50-3370	. GUARD, CABLE (USED ON 65-6456-17, -20, -18)		1
R	142	50-3370-3	. GUARD, CABLE (USED ON 65-6456-19, -21).	5199	1
	143	NAS1303-1HW	. BOLT.		1
	144	69-20906-1	. CLIP, CAP LOCK.		1
	145	69-20905-2	. CAP, CABLE DRUM END		1
	146	69-20886-1	. WASHER, THRUST.		1
	147	AN6230-7	. GASKET.		1
	148	AN6230-10	. GASKET.		1
	149	66-9675	. ADAPTER, SEAL		1
	150	NAS679A3W	. NUT		1
	151	69-20887-1	. ADAPTER, SPRING RETAINER.		1
	152	69-20884-1	. RETAINER, SPRING.		1
	153	63-10102	. SPRING, COMPRESSION		1
	154	63-10130	. SPRING, COMPRESSION		1
	155	66-9677	. SPACER, SPRING.		1
	156	69-23594-2	. SHAFT		1
	157	30-2492-1	. SPACER, LOW BEARING		1
	158	30-3565	. SCREW, CAM ROLLER		4
	159	30-3564	. WASHER, CAM ROLLER.		4
	160	AN960D10L	. WASHER.		4
	161	AN320-3	. NUT		4
	162	BACB10B130	. BEARING		4
	163	90-4037-3001	. CLUTCH, JAW		1
	164	30-2489	. WASHER, SPRING SEAT		1
	165	50-6396-3005	. DRUM ASSY		1
	166	BACP18D4-6	. . PIN		3
	167	90-6961-1	. . SHAFT, CABLE.		1
	168	50-6387-3006	. . DRUM ASSY, REAR CABLE		1
	169	50-6387-3005	. . . DRUM.		1
	170	MS21208F1-20	. . . INSERT.		1
	171	AN202KP49B	. BEARING		2
	172	AN4H5A	. BOLT.		6

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
138 173	90-3272-2	. CAP, END.		2
174	NAS561CF5-22	. PIN		2
175	66-19334-1	. NUT, INPUT SHAFT LOCK		2
176	3515-36-02-0541	. WASHER, (V78189).		2
177	AN201KP16A	. BEARING		4
178	30-2414-1	. SPACER, PINION GEAR BEARING		2
179	69-44012-4	. GEAR ASSY, PINION		1
180	69-36083-4	. . SEAL, LOW PRESSURE ROTARY RING.		1
181	69-44012-5	. . GEAR.		1
182	AN6227-19	. PACKING		1
183	69-44011-6	. GEAR ASSY, PINION		1
184	69-36083	. . SEAL, LOW PRESSURE ROTARY RING.		1
185	69-44011-7	. . GEAR.		1
186	AN6227-16	. PACKING		1
187	AN6230-4	. GASKET.		2
189	NAS1611-148	. PACKING		1
190	69-29100-1	. UMBRELLA, JACKSCREW GEAR BOX.		1
191	BACN12A1EZ	. NAMEPLATE		1
		. FOR REFERENCE TO OTHER ACTUATOR DETAILS, SEE NHA.		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

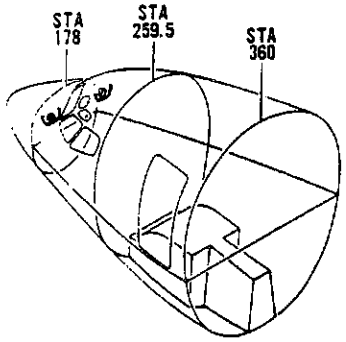

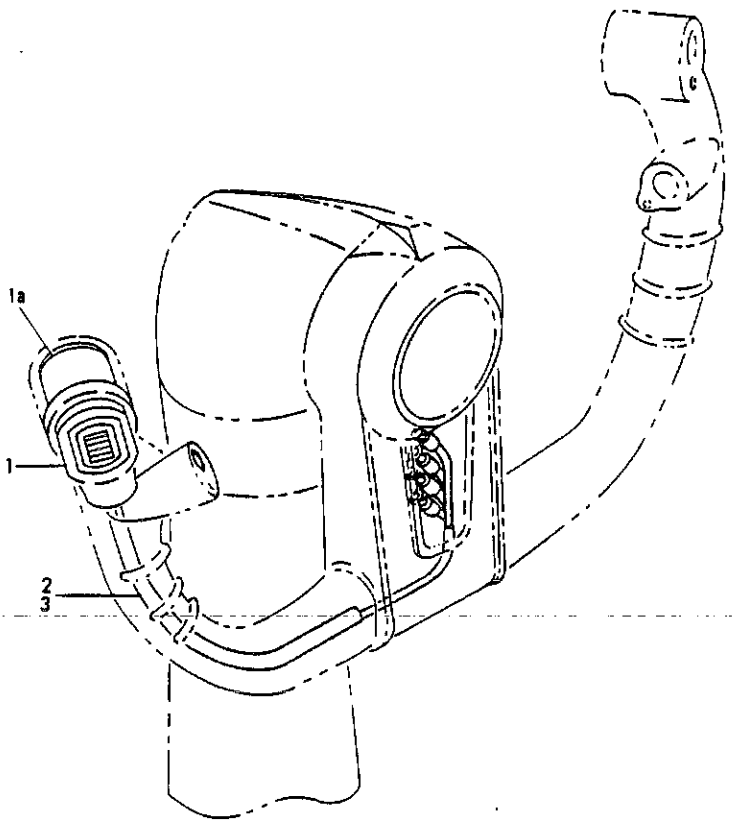


FIGURE 15. WHEEL ASSY, CONTROL COLUMN (PILOT) (FLIGHT CONTROL (HORIZONTAL STABILIZER TRIM) ONLY)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R	15	65-22960-61	WHEEL ASSY, CONTROL COLUMN (PILOT) (FLIGHT CONTROL. . . (HORIZONTAL STABILIZER TRIM) ONLY) (SEE 27-1, FIG. 4, ITEM 1)	0150	RF
R R R		65-22960-81	WHEEL ASSY, CONTROL COLUMN (PILOT) (FLIGHT CONTROL. . . (HORIZONTAL STABLIZER TRIM) ONLY) (SEE 27-1, FIG. 4, ITEM 1)	5199	RF
R R R		65-22960-62	WHEEL ASSY, CONTROL COLUMN (COPILOT) (FLIGHT CONTROL. . (HORIZONTAL STABILIZER TRIM) ONLY) (SEE 27-1, FIG. 4, ITEM 1)	0150	RF
R R R		65-22960-82	WHEEL ASSY, CONTROL COLUMN (COPILOT) (FLIGHT CONTROL. . (HORIZONTAL STABILIZER TRIM) ONLY) (SEE 27-1, FIG. 4, ITEM 1)	5199	RF
	1	10-60705-1	. SWITCH.		1
			ATTACHING PARTS		
		NAS600-98	. SCREW		2
			-------*-------		
	1A	69-47451-1	. SPACER.		1
			. FOR REFERENCE TO OTHER WHEEL DETAILS, SEE NHA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

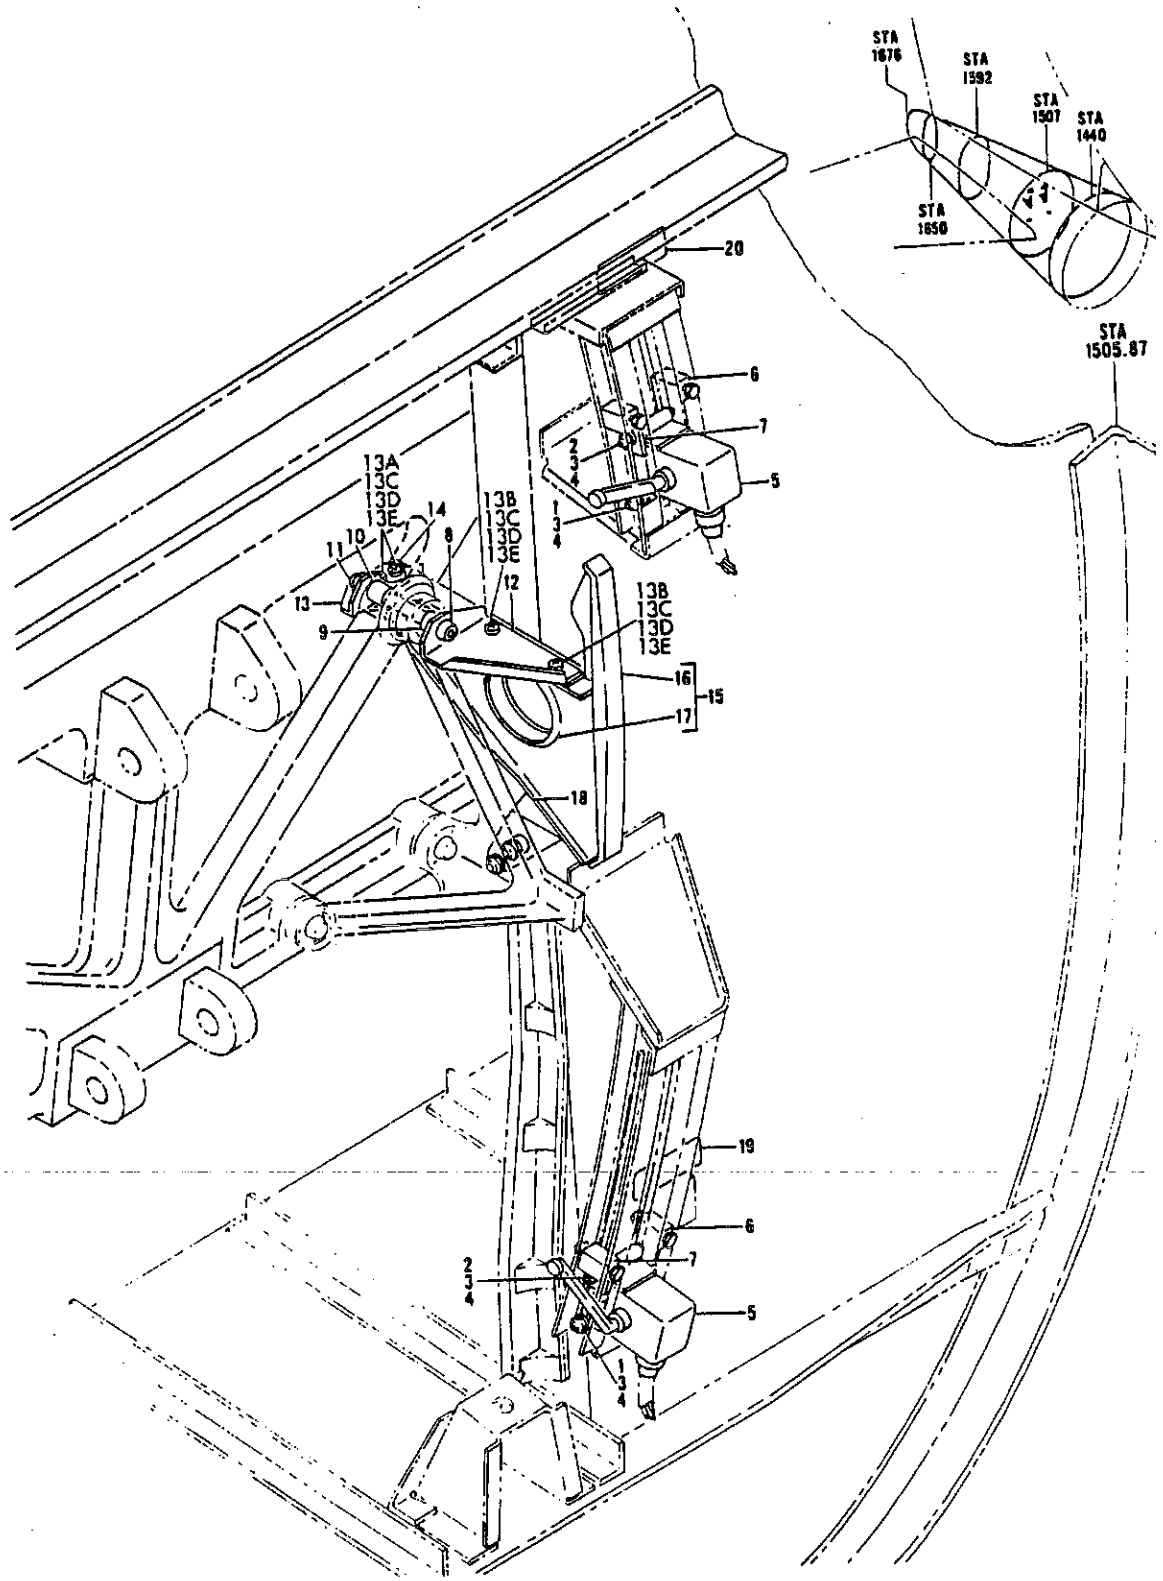


FIGURE 17. SWITCH INSTL, STABILIZER TRIM ACTUATOR LIMIT

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
17	65-27455-1	SWITCH INSTL, STABILIZER TRIM ACTUATOR LIMIT (LH) (SEE FIG. 9, ITEM 2 AND FIG. 9A, ITEM 2)		RF
	65-27455-2	SWITCH INSTL, STABILIZER TRIM ACTUATOR LIMIT (RH) (SEE FIG. 9, ITEM 2 AND FIG. 9A, ITEM 2)		RF
1	NAS1103-22W	. BOLT.		2
2	NAS1103-27W	. BOLT.		2
3	AN960D10	. WASHER.		4
4	NAS679A3W	. NUT		4
5	H10-1001	. SWITCH, HERMETIC ROTARY (V81640).		2
6	66-17716-1	. BLOCK, STABILIZER TRIM LIMIT SWITCH LOCATING.		2
7	66-17716-2	. BLOCK, STABILIZER TRIM LIMIT SWITCH LOCATING.		2
		ATTACHING PARTS		
	NAS1103-18W	. BOLT.		4
	AN960D10L	. WASHER.		4
	NAS679A3W	. NUT		4
		-------*-------		
8	MS20005-51	. BOLT.		1
9	NAS42DD10-38	. SPACER.		1
9	NAS42DD10-38	. SPACER, (RH ONLY)		1
10	NAS42DD10-30	. SPACER.		1
11	MS20365-524C	. NUT		1
12	69-26186-1	. BRACKET, STABILIZER TRIM LIMIT SWITCH CAM SUPPORT MOUNTING (LH ONLY)		1
12	69-26186-2	. BRACKET, STABILIZER TRIM LIMIT SWITCH CAM SUPPORT MOUNTING (RH ONLY)		1
13	69-26186-3	. BRACKET, STABILIZER TRIM LIMIT SWITCH CAM SUPPORT MOUNTING (LH ONLY)		1
13	69-26186-4	. BRACKET, STABILIZER TRIM LIMIT SWITCH CAM SUPPORT MOUNTING (RH ONLY)		1
		ATTACHING PARTS		
13A	NAS623-3-5	. SCREW		2
13B	NAS623-3-3	. SCREW		2
13C	AN960-10	. WASHER.		4
13D	NAS679A3W	. NUT		4
		-------*-------		
14	BACS40K13-26	. SHIM.		AR
15	69-22182-5	. CAM ASSY, STABILIZER TRIM LIMIT SWITCH (LH ONLY).		1
15	69-22182-6	. CAM ASSY, STABILIZER TRIM LIMIT SWITCH (RH ONLY).		1
		ATTACHING PARTS		
	MS20470B5-8	. RIVET		2
		-------*-------		
16	69-31643-1	. . CAM, STABILIZER TRIM LIMIT SWITCH		1
		ATTACHING PARTS		
	MS20470B5-8	. RIVET		4
		-------*-------		
17	69-21539-3	. . SUPPORT, STABILIZER TRIM LIMIT SWITCH CAM (LH ONLY)		1
17	69-21539-4	. . SUPPORT, STABILIZER TRIM LIMIT SWITCH CAM (RH ONLY)		1
18	69-22433-1	. BRACKET, STABILIZER TRIM LIMIT SWITCH CAM SUPPORT (LH ONLY)		1
18	69-22433-2	. BRACKET, STABILIZER TRIM LIMIT SWITCH CAM SUPPORT (RH ONLY)		1
		ATTACHING PARTS		
	NAS1104-15W	. BOLT.		1
	NAS1504-13W	. BOLT.		1
	NAS42DD8-30	. SPACER.		2
	AN960D416	. WASHER.		2
	NAS679A4W	. NUT		2
		-------*-------		
19	BACM10A20-9CT	. MARKER-ALUMINUM FOIL, AUTO-PILOT STAB TRIM ACTUATOR AIRP NOSE UP LIMIT SWITCH (LH ONLY)		1
19	BACM10A20-9CS	. MARKER-ALUMINUM FOIL, NORMAL ELECTRICAL STAB TRIM ACTUATOR AIRP NOSE UP LIMIT SWITCH (RH ONLY)		1
20	BACM10A20-9CP	. MARKER-ALUMINUM FOIL, AUTO-PILOT STAB TRIM ACTUATOR AIRP NOSE DN LIMIT SWITCH (LH ONLY)		1
20	BACM10A20-9CR	. MARKER-ALUMINUM FOIL, NORMAL ELECTRICAL STAB TRIM ACTUATOR AIRP NOSE DN LIMIT SWITCH (RH ONLY)		1


MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING Intercontinental 707

PARTS CATALOG

SECTION 13

INSTRUMENT PANELS

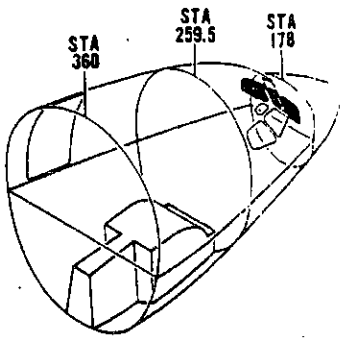


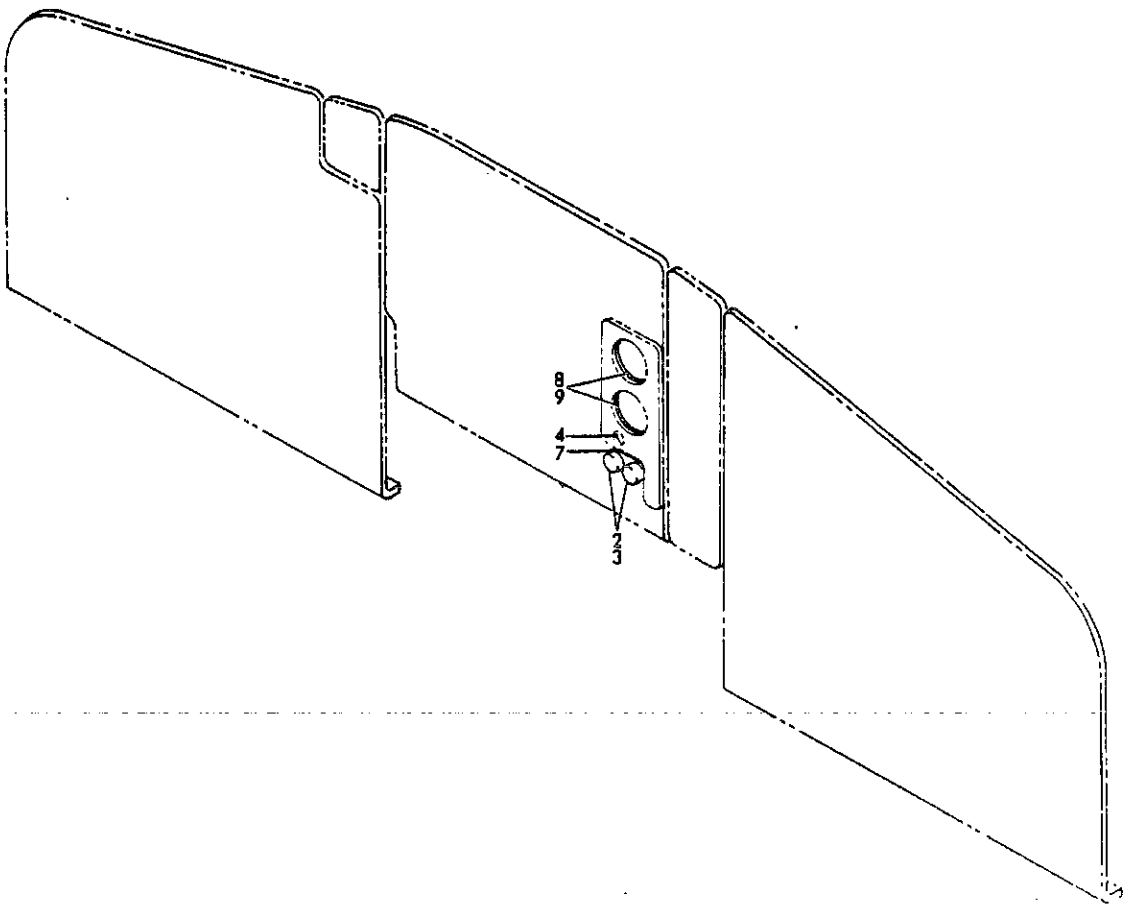


FIGURE 13R. PANEL INSTL, P9 ENGINE INSTRUMENT (FLIGHT CONTROL ONLY)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	13R	65-51823-1	PANEL INSTL, P9 ENGINE INSTRUMENT (FLIGHT CONTROL ONLY)	0150	RF
R			(SEE 25-1, FIG. 1K, ITEM 4)		
R	2	SHGP	. CAP, LEADING EDGE FLAP INDICATOR GREEN LIGHT (V81590)	0150	2
R	3	1864	. BULB, (V08806).	0150	2
R		65-51823-20	. UNIT ASSY, (FLIGHT CONTROL ONLY).	0150	1
R	4	SCN001	. . CONNECTOR, COAXIAL (V26742)	0150	1
R	7	STB261-1	. . BASE ASSY, DUAL (V81590).	0150	1
R	8	10-3089	. . INDICATOR, DUAL FLAP POSITION	0150	2
R	9	BACC10EL3	. . CLAMP	0150	2
R			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	0150	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

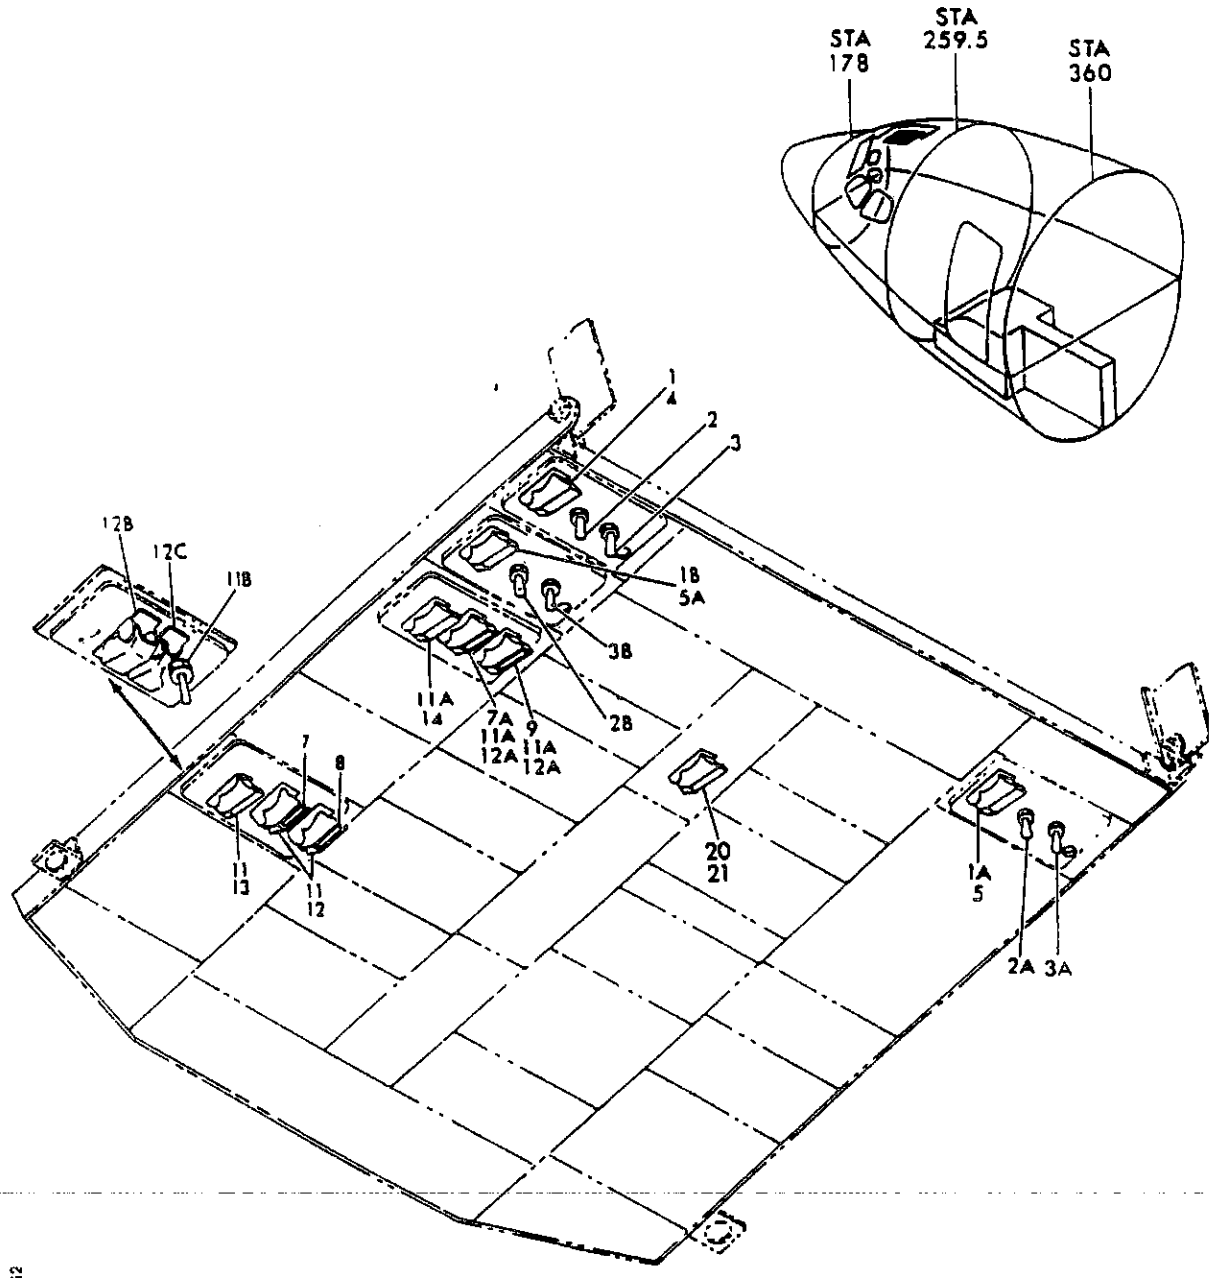


A 2713026H REV 262

FIGURE 26H. MODULE INSTL, P13 PILOTS OVERHEAD (FLIGHT CONTROL ONLY) (SHEET 1)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	26H	65-86177-2	MODULE INSTL, P13 PILOTS OVERHEAD (VARIABLE	5199	RF
R			DWG;65-86177-5011) (FLIGHT CONTROL ONLY) (SEE 25-1,		
R			FIG. 2E, ITEM 92 AND 25-1, FIG. 180H, ITEM 108)		
R		69-46107-4	. MODULE ASSY, P13A EMERGENCY FLAP (FLIGHT CONTROL. . .	5199	RF
R			ONLY)		
R	1	MS24524-23	. . SWITCH.	5199	1
R	2	MS24524-31	. . SWITCH.	5199	1
R	3	MS24523-31	. . SWITCH.	5199	1
R	4	11100	. . GUARD, (V72914)	5199	1
R		69-46111-4	. MODULE ASSY, P13E RUDDER AND SPOILER (FLIGHT CONTROL	5199	RF
R			ONLY)		
R	7	BACM9L10YA	. . SCOTCH-CAL, INBD.	5199	1
R	8	BACM9L10YB	. . SCOTCH-CAL, OUTBD	5199	1
R	11	MS24523-23	. . SWITCH.	5199	3
R	12	11100	. . GUARD, (V72914)	5199	2
R	13	11100-1	. . GUARD, (V72914)	5199	1
R			. FOR REFERENCE TO OTHER MODULE DETAILS, SEE NHA. . . .	5199	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

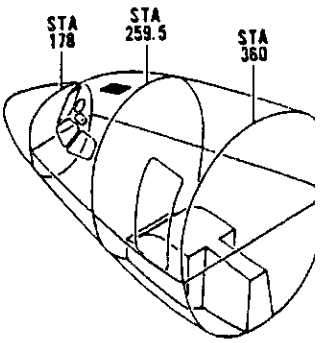

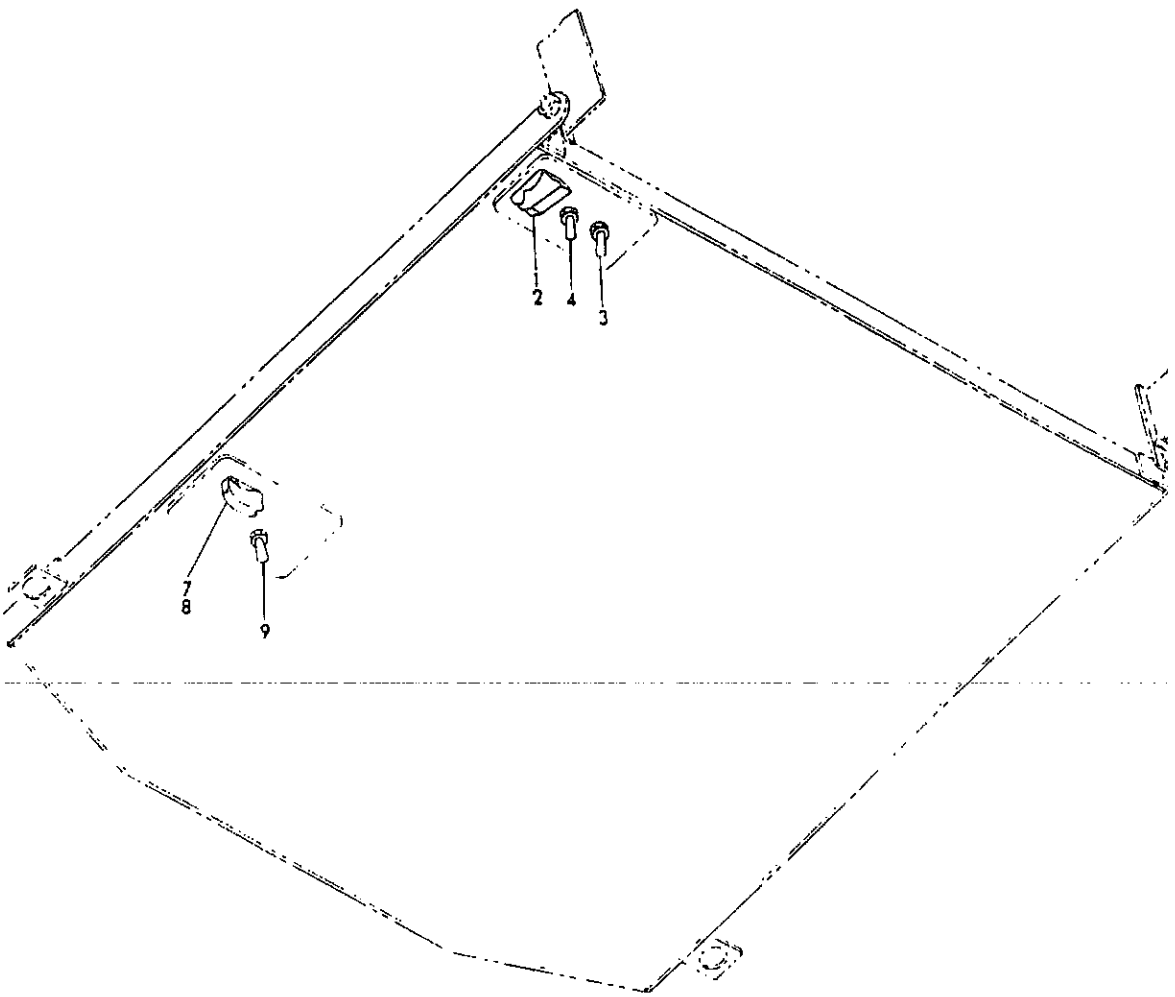


FIGURE 26J. MODULE INSTL, P13 PIECE'S OVERHEAD FLIGHT CONTROL ONLY)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R	26J	65-58786-1	MODULE INSTL, P13 PILOTS OVERHEAD (FLIGHT CONTROL . . . ONLY) (DELETED BY MOD 7211.019-225) (SEE 25-1, FIG. 1K ITTEM 6)	0150	RF
R R R		391-31-10-74168-001	MODULE INSTL, P13 PILOTS OVERHEAD (FLIGHT CONTROL . . . ONLY) (VS2500) (65-58786-1 MODIFIED BY MOD 7211.019-225) (SEE 25-1 FIG. 1K, ITEM 6)	0103	RF
R R R		391-31-10-74168-003	MODULE INSTL, P13 PILOTS OVERHEAD (FLIGHT CONTROL . . . ONLY) (VS2500) (65-58786-1 MODIFIED BY MOD 7211.019-225) (SEE 25-1 FIG. 1K, ITEM 6)	0450	RF
		69-46107-4	. MODULE ASSY, P13A EMERGENCY FLAP (FLIGHT CONTROL. . . ONLY)	0150	RF
	1	111000	. . GUARD, (V72914)	0150	1
	2	MS24524-23	. . SWITCH.	0150	1
	3	MS24524-31	. . SWITCH.	0150	1
	4	MS24523-31	. . SWITCH.	0150	1
		69-52340-1	. MODULE ASSY, P13E SPOILER AND WINDSHIELD WIPER. . . . (FLIGHT CONTROL ONLY)	0150	RF
	7	11100-1	. . GUARD, (V72914)	0150	1
	8	MS24523-23	. . SWITCH.	0150	1
	9	111AT23	. . SWITCH, (V91929).	0150	1
			ATTACHING PARTS		
		AN507B632R7	. . SCREW	0150	2
			-------*-------		
			. FOR REFERENCE TO OTHER MODULE DETAILS, SEE NHA. . . .	0150	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING PROPRIETARY, CONFIDENTIAL, AND / OR TRADE SECRET COPYRIGHT © The Boeing Company Unpublished Work -All Rights Reserved

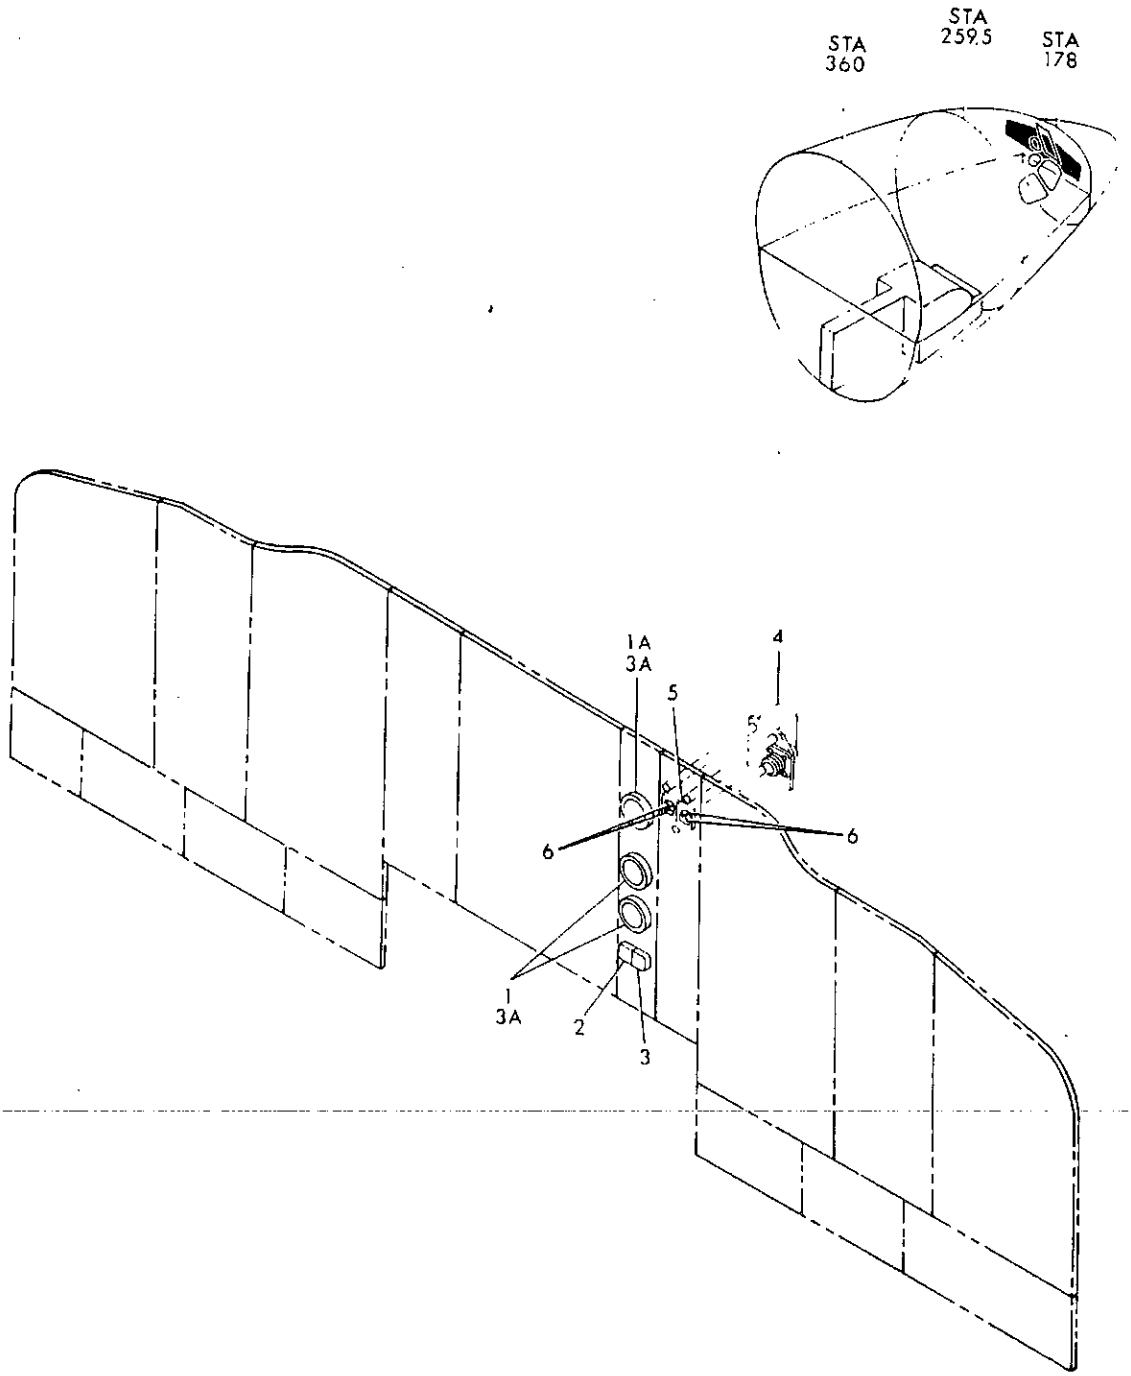


FIGURE 31. MODULE INSTL, CAPTAINS AND FIRST OFFICERS INSTRUMENT PANEL (FLIGHT CONTROL ONLY)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
31	65C10900-1	MODULE INSTL, CAPTAINS AND FIRST OFFICERS (INSTRUMENT PANELS) (VARIABLE DWG;65C10900-5003) (FLIGHT CONTROL ONLY) (SEE 25-1, FIG. 2E, ITEM 107A)	5199	RF
1	10-60791-7	. INDICATOR, DUAL FLAP POSITION	5199	2
1A	18-1584	. INDICATOR, RUDDER POSITION (V96774)	5199	1
	65C10906-3	. MODULE ASSY, P9-3 (FLIGHT CONTROL ONLY)	5199	RF
2	318-630-1003-128	. . LIGHT ASSY, INDICATING L.E. FLAP LEFT (V81590)	5199	1
3	318-630-1003-129	. . LIGHT ASSY, INDICATING L.E. FLAP RIGHT (V81590)	5199	1
	69-67142-1	. MODULE ASSY, P24 (FLIGHT CONTROL ONLY)	5199	RF
3A	BACC10EL3	. . CLAMP	5199	3
4	10167-28	. . TIME DELAY UNIT, (V08719)	5199	1
		ATTACHING PARTS		
	NAS601-13P	. . SCREW	5199	2
	BACN10JC06	. . NUT	5199	2
		-------*-------		
5	211-611-1020-001	. . LIGHT ASSY, INDICATING (LOW PRESSURE RUDDER BOOST) (V81590)	5199	1
6	387	. . BULB, LIGHT (V08806)	5199	4
		. FOR REFERENCE TO OTHER MODULE DETAILS, SEE NHA.	5199	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING Intercontinental 707

PARTS CATALOG

SECTION 14

SLATS

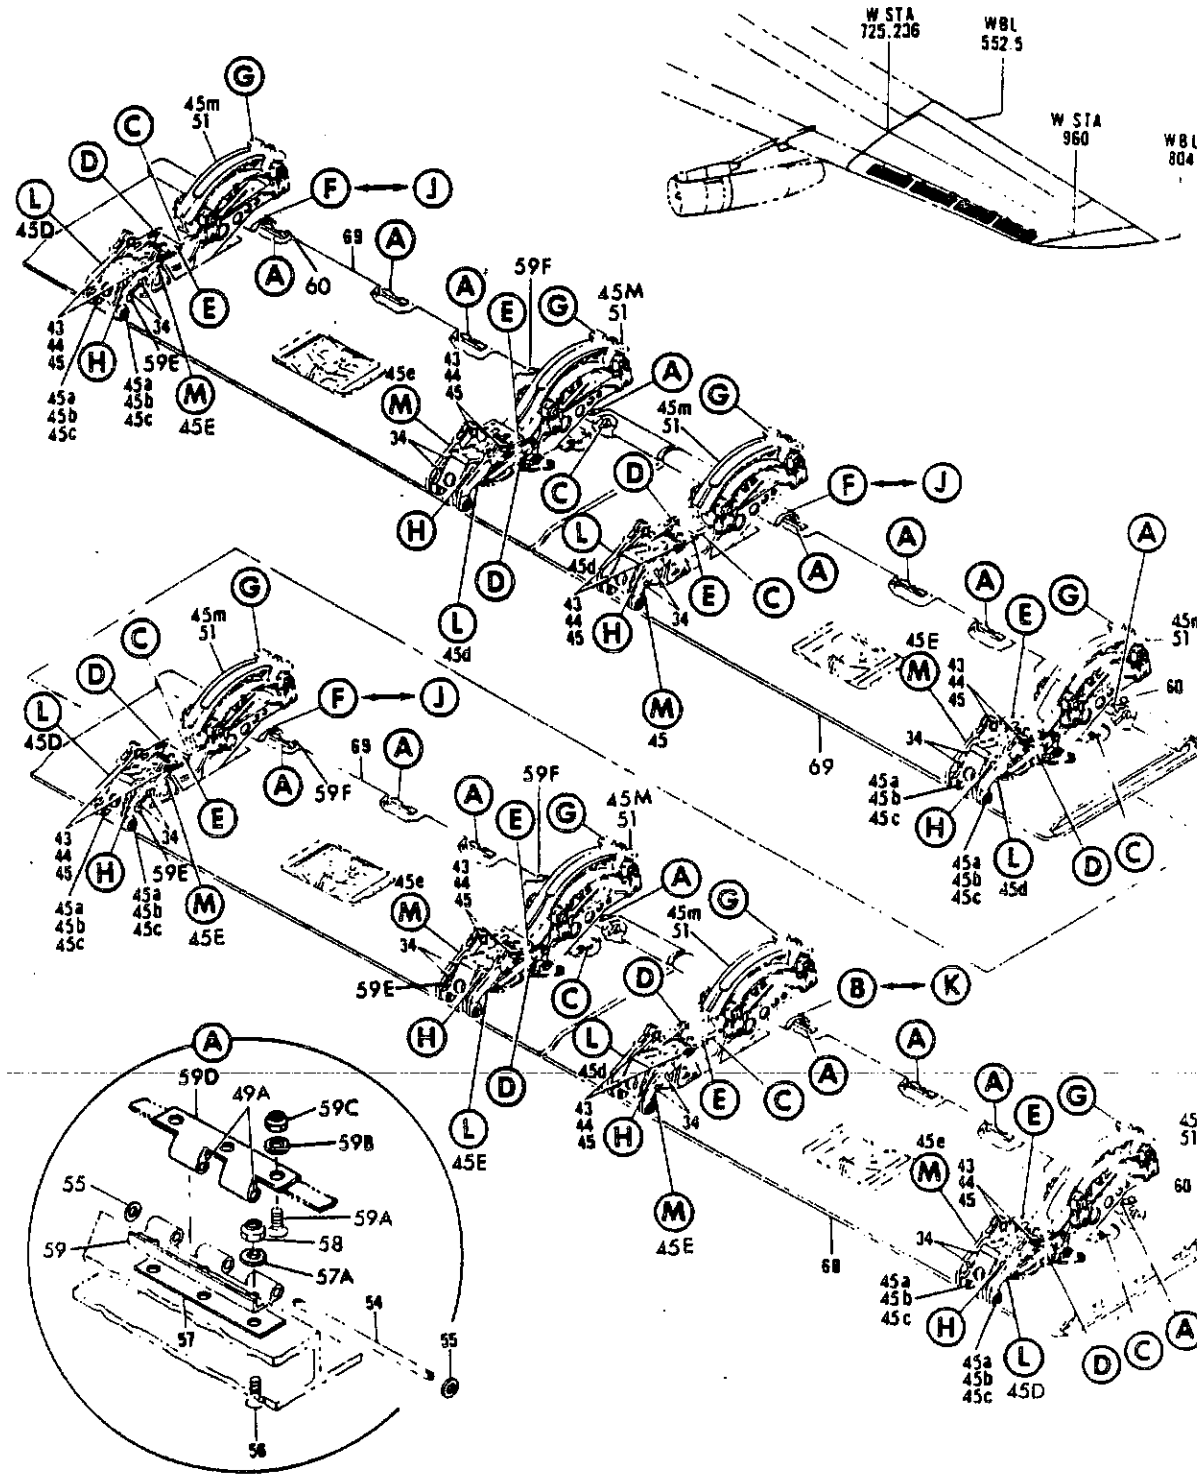


FIGURE 2. SLAT INSTL, SECTION 15 OUTBOARD WING LEADING EDGE (SHEET 1)

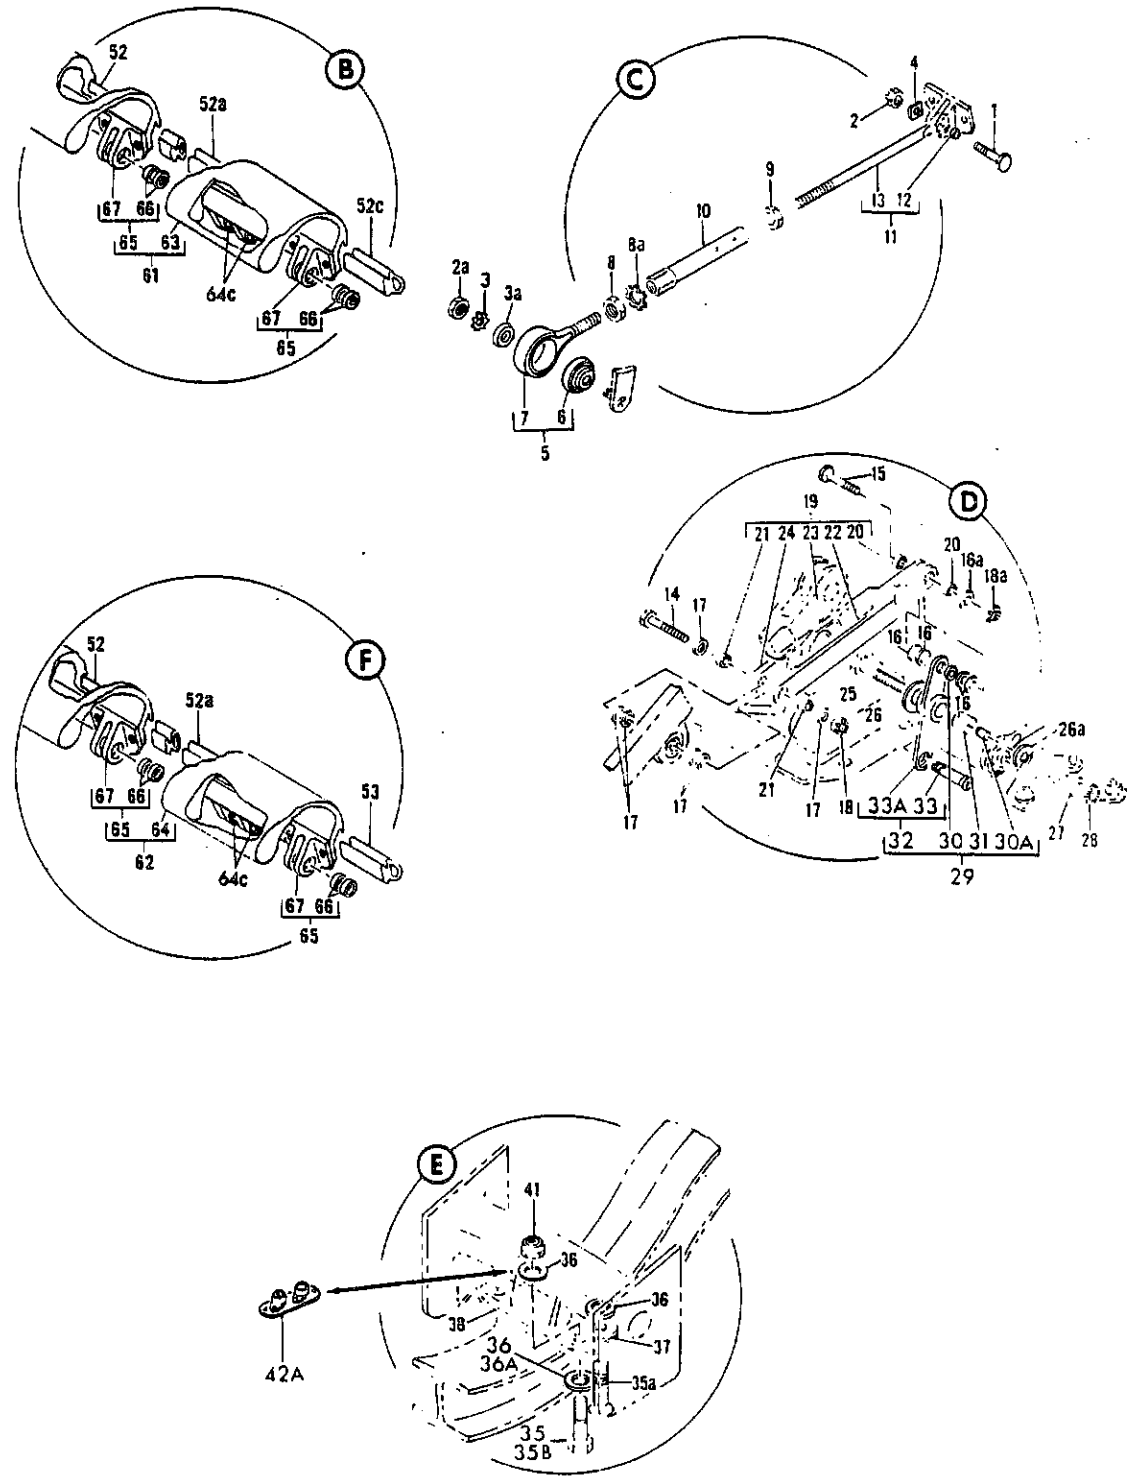


FIGURE 2. SLAT INSTL, SECTION 15 OUTBOARD WING LEADING EDGE (SHEET 2)

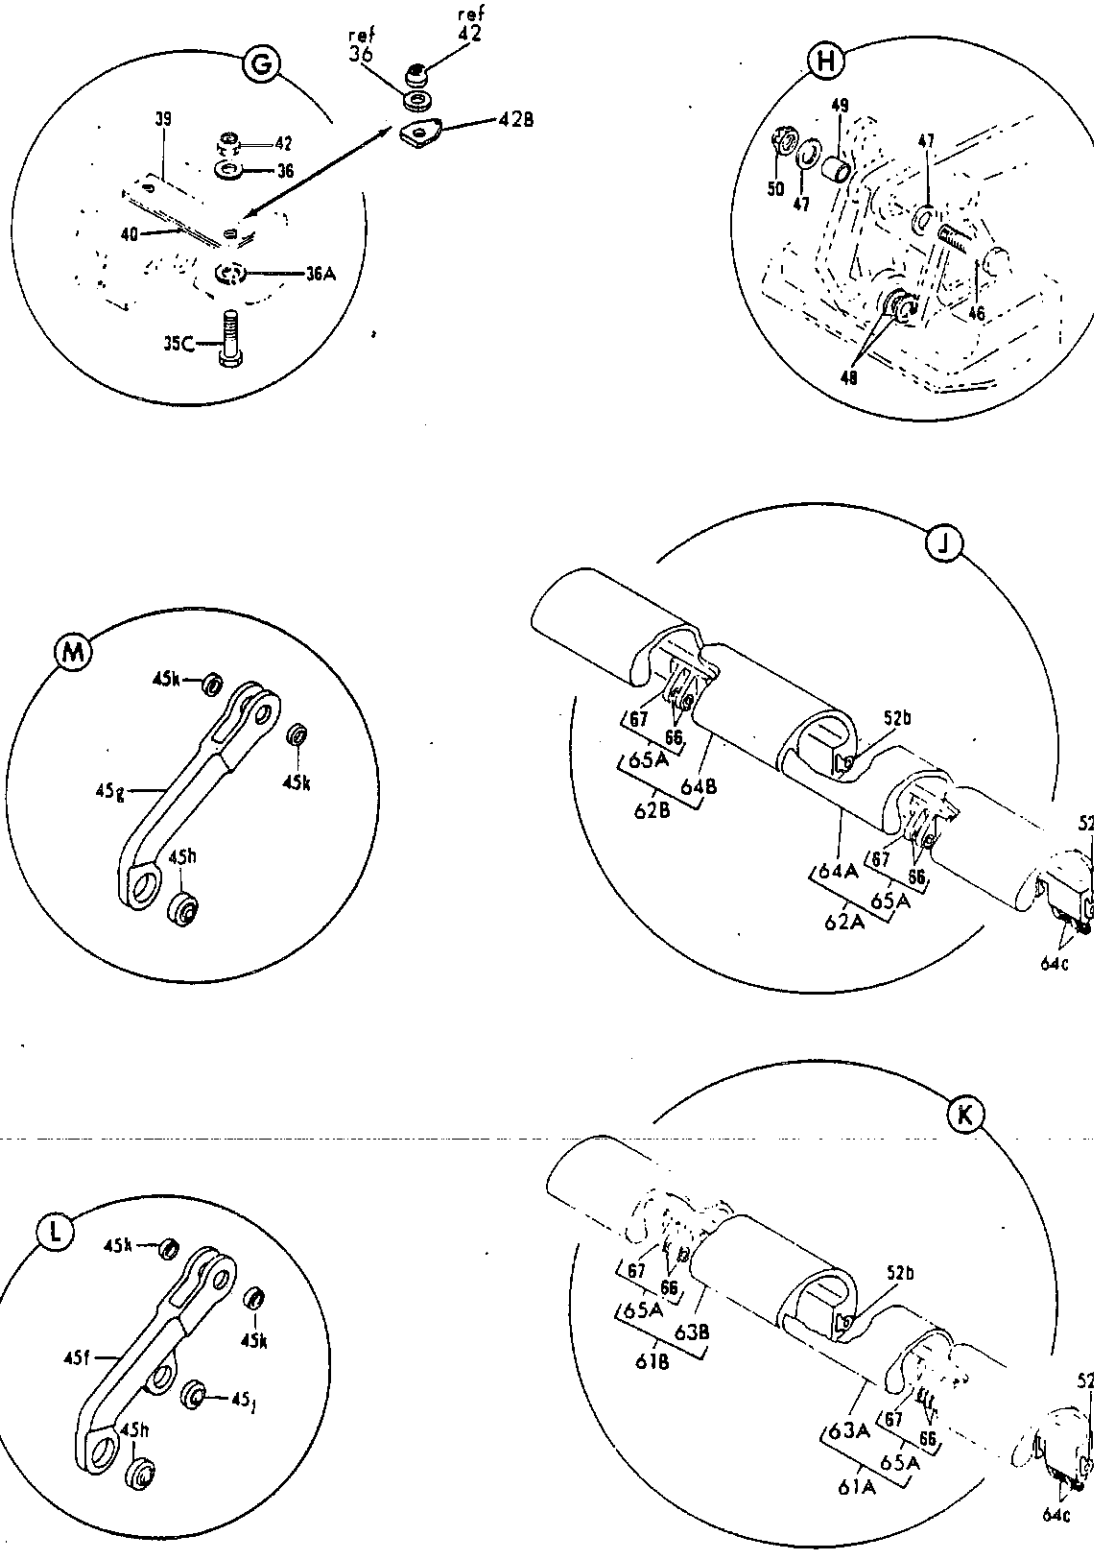


FIGURE 2. SLAT INSTL, SECTION 15 OU. BOARD WING LEADING EDGE (SHEET 3)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	2	65-18421-29	SLAT INSTL, SECTION 15 OUTBOARD WING LEADING EDGE . . . (VARIABLE DWG;65-18421-5005) (LH) (SEE 57-4, FIG. 3, ITEM 51)	5199	RF
		65-18421-29	SLAT INSTL, SECTION 15 OUTBOARD WING LEADING EDGE (LH) (SEE 57-4, FIG. 3, ITEM 51)	0450	RF
		65-18421-1	SLAT INSTL, SECTION 15 OUTBOARD WING LEADING EDGE (LH) (REWORKED BY SB 2651) (SEE 57-4, FIG. 3, ITEM 51)	0103	RF
		65-18421-30	SLAT INSTL, SECTION 15 OUTBOARD WING LEADING EDGE (RH) (SEE 57-4, FIG. 3, ITEM 51)	0450	RF
		65-18421-30	SLAT INSTL, SECTION 15 OUTBOARD WING LEADING EDGE . . . (VARIABLE DWG;65-18421-5006) (RH) (SEE 57-4, FIG. 3, ITEM 51)	5199	RF
		65-18421-2	SLAT INSTL, SECTION 15 OUTBOARD WING LEADING EDGE (RH) (REWORKED BY SB 2651) (SEE 57-4, FIG. 3, ITEM 51)	0103	RF
R	6	10-60545-111S	. . BEARING, TEFLON LUBRICATED SPHERICAL.	0103	1
	7	69-24794-2	. . ROD END, FAIRING MECHANISM LEADING EDGE SLAT. . . .	0103	1
R	12	10-60516-104	. . BUSHING, PRESS FIT STRUCTURAL	0103	1
	13	69-24921-2	. . ROD, FAIRING MECHANISM LEADING EDGE TIE	0103	1
R	19	69-24929-3	. LINK ASSY, NOSE FAIRING	0103	8
R			(OPTIONAL 69-24929-1) (DELETED BY SB 2651)		
	19	69-24929-1	. LINK ASSY, NOSE FAIRING	0103	8
			(OPTIONAL TO 69-24929-3) (DELETED BY SB 2651)		
	20	10-60516-104	. . BUSHING, (USED ON 69-24929-1)	0103	2
	20	10-60516-112	. . BUSHING, (USED ON 69-24929-3)	0103	2
			(OPTIONAL 10-60516-104)		
	20	10-60516-104	. . BUSHING, (USED ON 69-24929-3)	0103	2
			(OPTIONAL TO 10-60516-112)		
	21	66-9266-12	. . BUSHING, (USED ON 69-24929-1, -3)	0103	2
	22	66-19274-1	. . STRIP, RUB (USED ON 69-24929-1, -3)	0103	1
	23	66-19274-2	. . STRIP, RUB (USED ON 69-24929-1, -3)	0103	1
	24	69-24929-2	. . LINK, NOSE FAIRING (USE ON 69-24929-1).	0103	1
	24	69-24929-4	. . LINK, (USED ON 69-24929-3).	0103	1
R	30	10-60516-104	. . BUSHING, PRESS FIT STRUCTURAL	0103	1
	31	10-60516-107	. . BUSHING, PRESS FIT STRUCTURAL	0103	1
	32	69-24781-2	. . BRAZE ASSY, FAIRING MECHANISM DIFFERENTIAL BAR. . .	0103	1
	33	69-24781-1650	. . . BOLT, FAIRING MECHANISM DIFFERENTIAL BAR (ALTERED FROM BACB30EL4-8)	0103	1
	33A	69-24781-3	. . . BAR, FAIRING MECHANISM DIFFERENTIAL	0103	1
	34	BACC10DK2	. CLAMP		16
			ATTACHING PARTS		
R		NAS1103-9	. BOLT.	0499	16
R		AN960-10L	. WASHER.		16
		NAS679A3W	. NUT		16
			-------*-------		
R	35	NAS1104-8	. BOLT, (DELETED BY SVA E.O. 81424)	5199	32
	35	NAS1104-8	. BOLT, (DELETED BY SB 3323).	0450	32
	35	NAS1104-8	. BOLT, (ADDED BY SB 2651 AND DELETED BY SB 3323) . . .	0103	32
	35A	BACB30ABP4-9A	. BOLT, (DELETED BY SB 2651).	0103	16
	35A	BACB30ABP4-9A	. BOLT, (DELETED BY SB 2651 AND SB 3323).	0103	16
	35A	NAS1504-8	. BOLT, (DELETED BY SVA E.O. 81424)	5199	16
	35A	NAS1504-8	. BOLT, (DELETED BY SB 3323).	0450	16
	35A	NAS1504-8	. BOLT, (ADDED BY SB 2651 AND DELETED BY SB 3323) . . .	0103	16
	35A	BACB30LU4-6	. BOLT, (ADDED BY SB 3323).	0150	16
	35A	BACB30LU4-6	. BOLT, (ADDED BY SVA E.O. 81424)	5199	16
	35B	BACB30NF4H6	. BOLT, (ADDED BY SB 3323).	0150	16
	35B	BACB30NF4H6	. BOLT, (ADDED BY SVA E.O. 81424)	5199	16
	35C	BACB30LM4H5P	. BOLT, (ADDED BY SB 3323).	0150	16
	35C	BACB30LM4H6P	. BOLT, (ADDED BY SVA E.O. 81424)	5199	16
	36	AN960-416	. WASHER, (DELETED BY SVA E.O. 81424)	5199	80
	36A	AN960-416	. WASHER, (DELETED BY SB 3323).	0150	80
	36A	AN960-416L	. WASHER, (ADDED BY SB 3323).	0150	32
	36A	AN960-416L	. WASHER, (ADDED BY SVA E.O. 81424)	5199	32
R	37	BACS40R15B36F	. SHIM, (OPTIONAL).	0499	AR
R	37	BACS40R15C36F	. SHIM, (OPTIONAL).	0499	AR
R	37	BACS40R15E36F	. SHIM, (OPTIONAL).	0499	AR
R	38	BACS47G24B58F	. SHIM.	0499	AR
R	39	BACS40R10B36F	. SHIM, (OPTIONAL).	0499	AR
R	39	BACS40R10C36F	. SHIM, (OPTIONAL).	0499	AR
R	39	BACS40R10E36F	. SHIM, (OPTIONAL).	0499	AR
R	40	BACS47G15B58F	. SHIM.	0499	AR
R	41	NAS679A4	. NUT, (DELETED BY SVA E.O. 81424).	5199	32
R	41	NAS679A4W	. NUT, (DELETED BY SVA E.O. 81424).	5199	32
	41	NAS679A4W	. NUT, (DELETED BY SB 3323)	0450	32
	41	NAS679A4W	. NUT, (ADDED BY SB 2651 AND DELETED BY SB 3323). . . .	0103	32

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	2 42	NAS679A4W	. NUT, (DELETED BY SVA E.O. 81424).	5199	32
	42	NAS679A4W	. NUT, (DELETED BY SB 3323)	0150	16
	42A	69-70411-1	. LOCKNUT ASSY, (ADDED BY SB 3323).	0150	16
	42A	69-70411-1	. LOCKNUT ASSY, (ADDED BY SVA E.O. 81424)	5199	16
	42B	69-70412-1	. PLATE, BOLT RETAINING (ADDED BY SB 3323).	0150	16
	42B	69-70412-1	. PLATE, BOLT RETAINING (ADDED BY SVA E.O. 81424) . . .	5199	16
	43	NAS1105-11D	. BOLT.	0499	16
	44	AN960-516	. WASHER.		32
	45	AN320-5	. NUT		16
	45A	NAS1105-16W	. BOLT, (DELETED BY SB 2651).	0103	16
	45A	NAS1105-16D	. BOLT.	0499	16
	45B	AN960-516L	. WASHER.		16
	45C	AN320-5	. NUT		16
	45D	69-14434-4	. LINK ASSY, HINGE (DELETED BY SB 2651)	0103	8
	45D	69-14434-5	. LINK ASSY, HINGE. . . . . (OPTIONAL 69-14434-11)	0450	8
	45D	69-14434-11	. LINK ASSY, HINGE. . . . . (OPTIONAL TO 69-14434-5)	0450	8
	45D	69-14434-11	. LINK ASSY, HINGE.	5199	8
	45E	69-14434-5	. LINK ASSY, SLAT HINGE	0103	8
	45E	69-14434-5	. LINK ASSY, HINGE. . . . . (OPTIONAL 69-14434-11)	0450	8
	45E	69-14434-11	. LINK ASSY, HINGE. . . . . (OPTIONAL TO 69-14434-5)	0450	8
	45E	69-14434-11	. LINK ASSY, HINGE.	5199	8
	45F	69-14434-6	. . LINK, (ALTERED FROM;69-14434-8 OR FROM. . . . . OPTIONAL;69-14434-9 (PREFERRED) OR MAKE FROM 7075-T73 FORGED BLOCK PER BMS7-186)) (USED ON 69-14434-4)	0103	1
	45F	69-14434-7	. . LINK, (USED ON 69-14434-5).	0450	1
	45G	69-14434-7	. . LINK, (USED ON 69-14434-5).	0150	1
	45G	69-14434-10	. . LINK, (USED ON 69-14434-11)	0499	1
	45H	BACB10M11	. . BEARING		1
	45J	BACB10M12	. . BEARING, (DELETED BY SB 2651) (USED ON 69-14434-4)	0103	1
	45K	66-9266-9	. . BUSHING		2
	45M	65-18649-2	. TRACK, SLAT		8
	51	69-43346-1	. CARRIAGE INSTL, SLAT (SEE FIG. 15A)	0150	7
	51	69-43346-7	. CARRIAGE INSTL, (SEE FIG. 15A).	5199	7
	51A	69-43346-1	. CARRIAGE INSTL, (LH ONLY) (SEE FIG. 15A).	0103	1
	51A	69-43346-2	. CARRIAGE INSTL, SWITCH (LH ONLY) (SEE FIG. 15A) . . .	0450	1
	51A	69-43346-8	. CARRIAGE INSTL, SWITCH (LH ONLY) (SEE FIG. 15A) . . .	5199	1
	51A	69-43346-1	. CARRIAGE INSTL, (RH ONLY) (SEE FIG. 15A).	0150	1
	51A	69-43346-7	. CARRIAGE INSTL, (RH ONLY) (SEE FIG. 15A).	5199	1
	52B	65-18421-1651	. SEAL, SECTION 15 OUTBOARD WING LEADING EDGE SLAT. . . (EXTRUSION NO. BAC1530-18 X 27.0 IN. LG)	0103	8
R R	52B	65-18421-1651	. SEAL, (ESTRUSION NO. BAC1530-18 X 27.0 IN. LG). . . . (DELETED BY SB 2651)	0103	8
	54	66-13320-1	. PIN, NOSE FAIRING HINGE (ALTERED FROM MS20253P4-415) (DELETED BY SB 2651)	0103	16
	55	AN960-10L	. WASHER, (DELETED BY SB 2651).	0103	32
	56	BACB30ABP3-4A	. BOLT, (DELETED BY SB 2651).	0103	48
	58	NAS679A3W	. NUT, (DELETED BY SB 2651)	0103	48
	59	69-15476-1	. HINGE, NOSE FAIRING (DELETED BY SB 2651). . . . . (OPTIONAL 69-15476-2 (DELETED BY SB 2651))	0103	16
	59	69-15476-2	. HINGE, NOSE FAIRING (DELETED BY SB 2651). . . . . (OPTIONAL TO 69-15476-1 (DELETED BY SB 2651))	0103	16
	60	BACJ40K5A5A6	. JUMPER, (DELETED BY SB 2651). . . . . ATTACHING PARTS	0103	2
		NAS333CPA4	. BOLT.	0103	2
		NAS679A3W	. NUT	0103	2
			-------*-------		
	61A	65-18483-27	. FAIRING ASSY, NOSE (DELETED BY SB 2651) (LH ONLY) . .	0103	1
	61A	65-18483-28	. FAIRING ASSY, NOSE (DELETED BY SB 2651) (RH ONLY) . .	0103	1
	61B	65-18483-30	. FAIRING ASSY, NOSE (DELETED BY SB 2651) (LH ONLY) . .	0103	1
	61B	65-18483-29	. FAIRING ASSY, NOSE (DELETED BY SB 2651) (RH ONLY) . .	0103	1
	62A	65-18483-29	. FAIRING ASSY, NOSE (DELETED BY SB 2651)	0103	3
	62B	65-18483-30	. FAIRING ASSY, NOSE (DELETED BY SB 2651)	0103	3
	63A	65-18483-31	. . FAIRING, LEADING EDGE SLAT NOSE (USED ON. . . . . 65-18483-27)	0103	1
	63A	65-18483-32	. . FAIRING, LEADING EDGE SLAT NOSE (USED ON. . . . . 65-18483-28)	0103	1
	63B	65-18483-33	. . FAIRING, LEADING EDGE SLAT NOSE (USED ON. . . . . 65-18483-29)	0103	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	2 63B	65-18483-34	. . FAIRING, LEADING EDGE SLAT NOSE (USED ON. . . . . 65-18483-30)	0103	1
	64A	65-18483-33	. . FAIRING, LEADING EDGE SLAT NOSE (USED ON. . . . . 65-18483-29)	0103	1
	64B	65-18483-34	. . FAIRING, LEADING EDGE SLAT NOSE (USED ON. . . . . 65-18483-30)	0103	1
	65A	69-24938-1	. . FITTING ASSY, SLAT NOSE FAIRING LEADING EDGE ATTACH ATTACHING PARTS	0103	1
		BACB30EL3-3	. . BOLT.	0103	2
		NAS679A3W	. . NUT . . . . . -------*-------	0103	2
	66	10-60516-104	. . . BUSHING, PRESS FIT STRUCTURAL	0103	2
	67	69-24938-2	. . . FITTING, SLAT NOSE FAIRING LEADING EDGE ATTACH. .	0103	1
R R R	68	65-18421-31	. SLAT ASSY, (LH ONLY) (CIVIL CONFIGURATION . . . . . ADDED BY RAF 7211.019-225) (SEE FIG. 4A) (OPTIONAL 65-18421-34)	0450	1
R R R R	68	65-18421-34	. SLAT ASSY, (LH ONLY) (CIVIL CONFIGURATION . . . . . ADDED BY RAF 7211.019-225) (SEE FIG. 4A) (OPTIONAL TO 65-18421-31)	0450	1
	68	65-18421-13	. SLAT ASSY, (DELETED BY SB 2651) (LH ONLY) (SEE FIG. . 4)	0103	1
R R R	68	65-18421-31	. SLAT ASSY, (ADDED BY SB 2651) (LH ONLY) (CIVIL. . . . CONFIGURATION ADDED BY RAF 7211.019-225) (SEE FIG. 4A)	0103	1
	68	65-18421-14	. SLAT ASSY, (DELETED BY SB 2651) (RH ONLY) (SEE FIG. . 4)	0103	1
R R R	68	65-18421-32	. SLAT ASSY, (RH ONLY) (CIVIL CONFIGURATION . . . . . ADDED BY RAF 7211.019-225) (SEE FIG. 4A) (OPTIONAL 65-18421-35)	0450	1
R R R	68	65-18421-35	. SLAT ASSY, (RH ONLY) (CIVIL CONFIGURATION . . . . . ADDED BY RAF 7211.019-225) (SEE FIG. 4A) (OPTIONAL TO 65-18421-32)	0450	1
R R R	68	65-18421-32	. SLAT ASSY, (ADDED BY SB 2651) (RH ONLY) (CIVIL. . . . CONFIGURATION ADDED BY RAF 7211.019-225) (SEE FIG. 4A)	0103	1
	68	65-18421-38A	. SLAT ASSY, (LH ONLY) (SEE FIG. 4A).	5199	1
	68	65-18421-39A	. SLAT ASSY, (RH ONLY) (SEE FIG. 4A).	5199	1
R R R	68	361-57-20-74364-001	. DUMMY SLAT INSTL, (LH ONLY) (VS2500) (A/R . . . . . CONFIGURATION ADDED BY RAF 7211.019-225) (SEE FIG. 4B)	0150	1
R R R	68	361-57-20-74364-002	. DUMMY SLAT INSTL, (RH ONLY) (VS2500) (A/R . . . . . CONFIGURATION ADDED BY RAF 7211.019-225) (SEE FIG. 4B)	0150	1
	69	65-18421-15	. SLAT ASSY, (DELETED BY SB 2651) (SEE FIG. 3).	0103	3
	69	65-18421-33	. SLAT ASSY, (REWORKED BY DWG NO.;65-18421-15) (SEE . . FIG. 4A) (OPTIONAL 65-18421-36)	0450	3
	69	65-18421-36	. SLAT ASSY, (REWORKED BY DWG NO.;65-18421-15) (SEE . . FIG. 4A) (OPTIONAL TO 65-18421-33)	0450	3
R	69	65-18421-40A	. SLAT ASSY, (SEE FIG. 4A).	5199	3

MISSING ITEM NUMBERS ARE NOT APPLICABLE

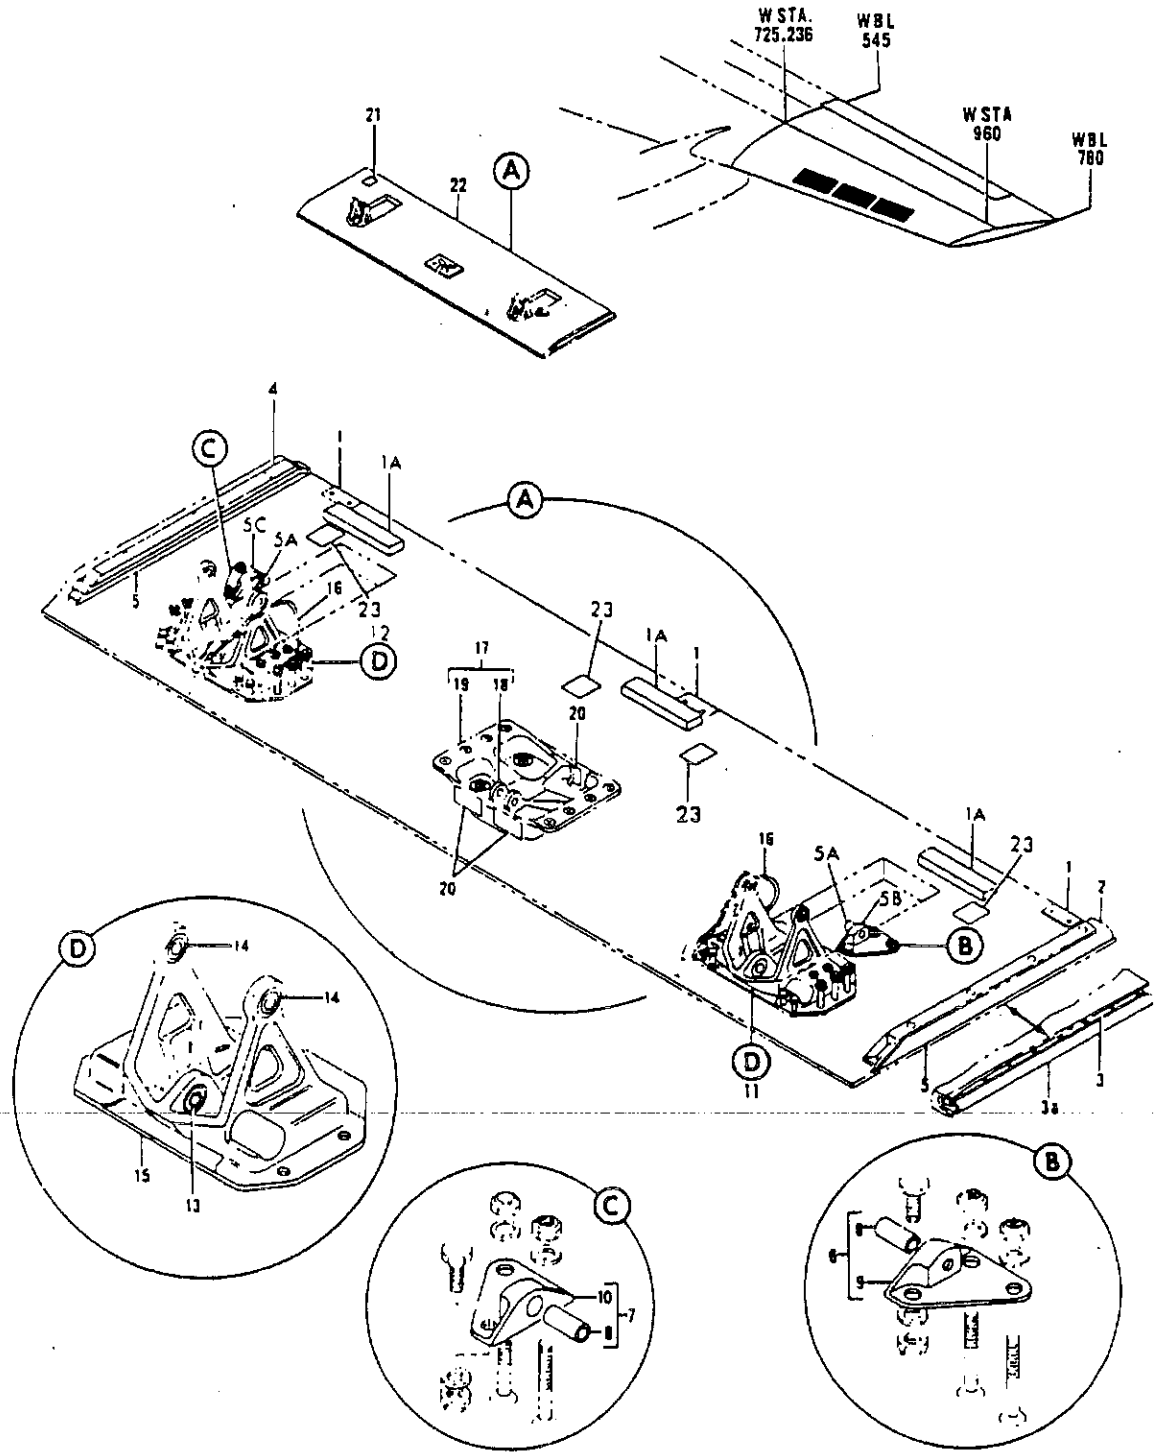


FIGURE 3. SLAT ASSY, SECTION 15 OUTBOARD WING LEADING EDGE

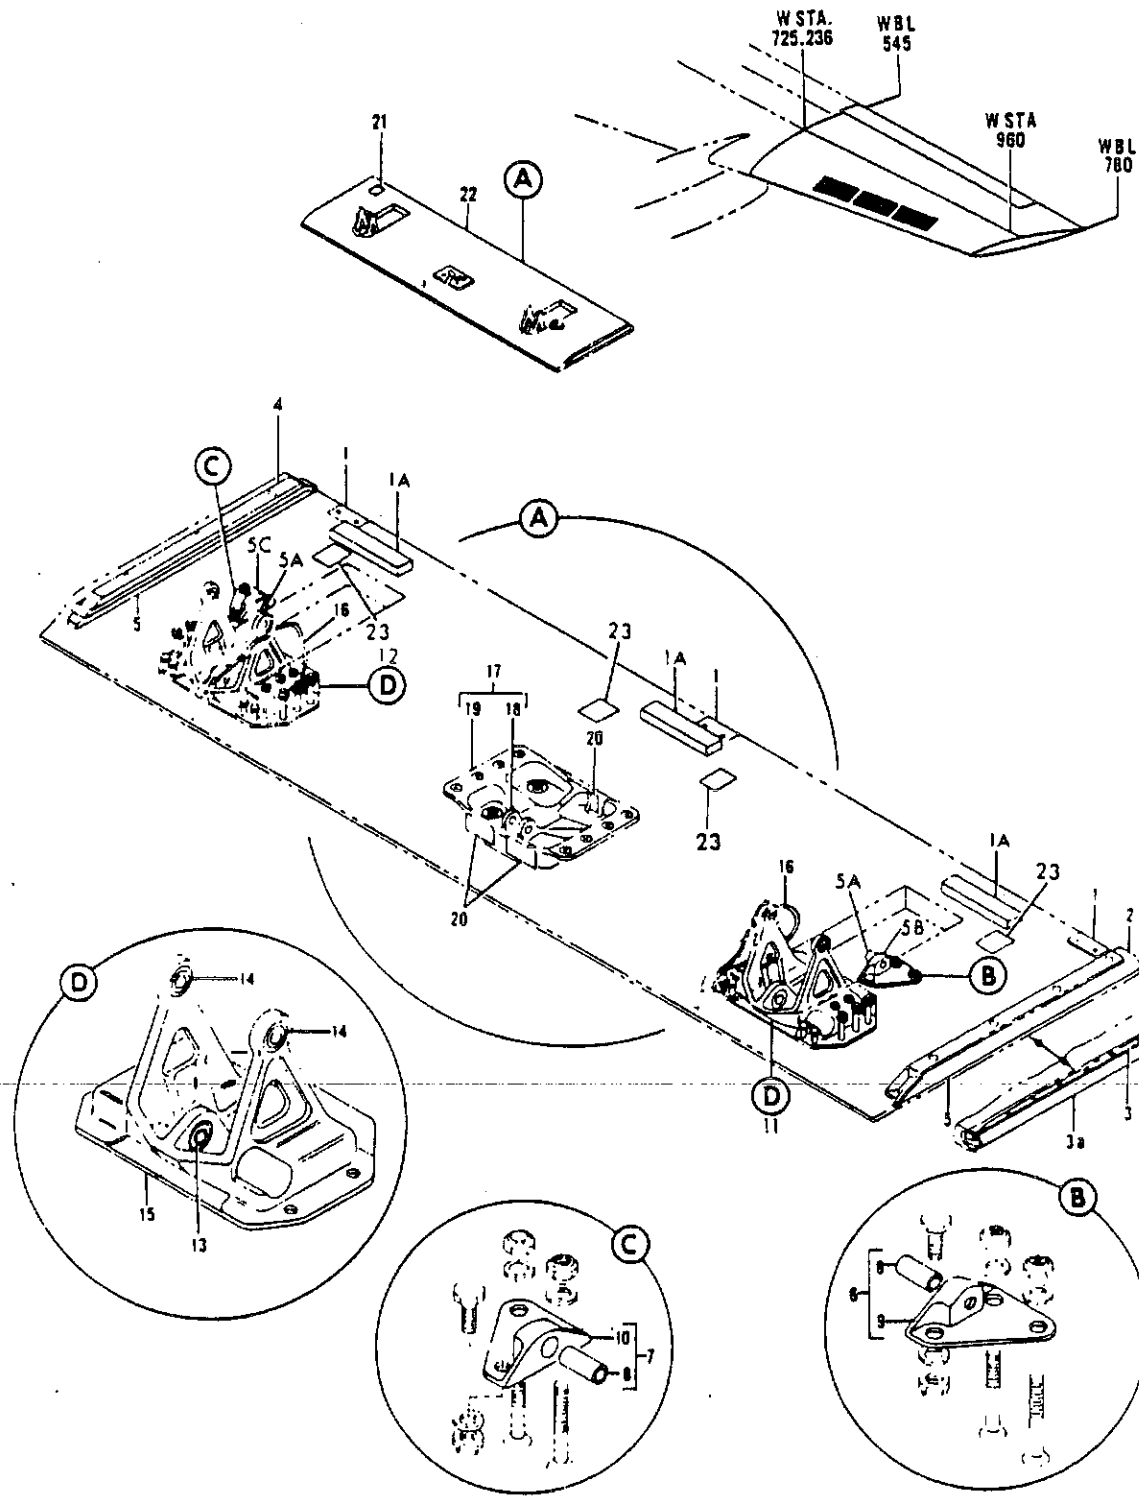



FIGURE 3. SLAT ASSY, SECTION 15 OUTBOARD WING LEADING EDGE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3	65-18421-15	SLAT ASSY, SECTION 15 OUTBOARD WING LEADING EDGE. . . . (DELETED BY SB 2651) (SEE FIG. 2, ITEM 69)	0103	RF
1	66-13277-1	. PAD, LEADING EDGE SLAT STOP	0103	3
		ATTACHING PARTS		
	MS2042686	. RIVET	0103	6
		-------*-------		
3	69-34879-3	. RETAINER, OUTBOARD WING LEADING EDGE SLAT SEAL. . . .	0103	1
		ATTACHING PARTS		
	NAS517-2-10	. SCREW	0103	8
	AN960D8	. WASHER.	0103	8
	NAS679A08W	. NUT	0103	8
		-------*-------		
3A	69-34879-1	. SEAL ASSY, OUTBOARD WING LEADING EDGE SLAT.	0103	1
	69-34879-4	. . SEAL, OUTBOARD WING LEADING EDGE SLAT (EXTRUSION. . NO. BAC1530-44 X 14.4 IN. LG)	0103	1
4	69-34879-1652	. STRIKER ASSY, SEAL.	0103	1
		ATTACHING PARTS		
	NAS517-2-4	. SCREW	0103	7
		-------*-------		
5	BACS40A10-200	. SHIM, (OPTIONALS BACS40B10-200, BACS40C10-200,. . . . BACS40D10-200)	0103	AR
5A	66-13301-3	. BUSHING, PRESS FIT PLAIN (USED WITH 69-31217-1 AND. . -2) (USED ON 65-18421-15)	0103	2
5B	69-31217-1	. BRACKET, FLAP NOSE FAIRING MECHANISM SUPPORT (USED. . WITH 66-13301-3) (USED ON 65-18421-15) (OPTIONAL TO 69-15480-5)	0103	1
5C	69-31217-2	. BRACKET, FLAP NOSE FAIRING MECHANISM SUPPORT (USED. . WITH 66-13301-3) (USED ON 65-18421-15) (OPTIONAL TO 69-15480-6)	0103	1
6	69-15480-5	. BRACKET ASSY, NOSE FAIRING MECHANISM SUPPORT (USED. . ON 65-18421-15) (OPTIONAL 69-31217-1 WITH 66-13301-3)	0103	1
7	69-15480-6	. BRACKET ASSY, NOSE FAIRING MECHANISM SUPPORT (USED ON 65-18421-15) (OPTIONAL 69-31217-2 WITH 66-13301-3)	0103	1
		ATTACHING PARTS		
	BACB30ABP4-24A	. BOLT.	0103	4
	BACW10T416A	. WASHER.	0103	2
	AN960-416L	. WASHER.	0103	4
	NAS679A4W	. NUT	0103	6
		-------*-------		
8	66-13301-2	. . BUSHING, PRESS FIT PLAIN (USED ON 69-15480-5 AND. . -6)	0103	1
9	69-15480-7	. . BRACKET, LEADING EDGE SLAT NOSE FAIRING MECHANISM . SUPPORT (USED ON 69-15480-5)	0103	1
10	69-15480-8	. . BRACKET, LEADING EDGE SLAT NOSE FAIRING MECHANISM . SUPPORT (USED ON 69-15480-6)	0103	1
11	65-18462-1	. FITTING ASSY, LEADING EDGE SLAT CARRIAGE ATTACH . . .	0103	1
12	65-18462-2	. FITTING ASSY, LEADING EDGE SLAT CARRIAGE ATTACH . . .	0103	1
		ATTACHING PARTS		
	MS2042685	. RIVET	0103	8
	BACB30ABP5-23A	. BOLT.	0103	4
	BACB30ABP5-24A	. BOLT.	0103	6
	BACB30ABP5-26A	. BOLT.	0103	2
	NAS1197-516L	. WASHER.	0103	26
	NAS679A5	. NUT	0103	12
	NAS335CPA10	. BOLT.	0103	2
	NAS335CPA11	. BOLT.	0103	8
	BACN10B-L5L	. NUT	0103	10
		-------*-------		
13	BACB10M8	. . BEARING	0103	1
14	BACB10M11	. . BEARING	0103	2
15	65-18462-3	. . FITTING, LEADING EDGE SLAT CARRIAGE ATTACH (USED ON 65-18462-1)	0103	1
15	65-18462-4	. . FITTING, LEADING EDGE SLAT CARRIAGE ATTACH (USED ON 65-18462-2)	0103	1
16	BACJ40K6A7A17	. JUMPER.	0103	2
		ATTACHING PARTS		
	NAS1104-3W	. BOLT.	0103	2
	AN960D416L	. WASHER.	0103	6
	NAS679A4W	. NUT	0103	2
		-------*-------		
17	65-18463-1	. FITTING ASSY, LEADING EDGE SLAT ACTUATOR ATTACH . . . (OPTIONAL AND FOR REPLACEMENT ORDER 65-18463-5)	0103	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3 17	65-18463-5	. FITTING ASSY, LEADING EDGE SLAT ACTUATOR ATTACH . . . (OPTIONAL TO AND REPLACEMENT FOR 65-18463-1)	0103	1
		ATTACHING PARTS		
	BAC830ABP4-8A	. BOLT.	0103	6
	BAC830ABP4-20A	. BOLT.	0103	8
	AN960-416	. WASHER.	0103	6
	BACW10T416A	. WASHER.	0103	8
	NAS679A4W	. NUT	0103	14
		--------*--------		
18	69-14435-1	. . BUSHING, PRESS FIT FLANGED.	0103	1
19	65-18463-2	. . FITTING, LEADING EDGE SLAT ACTUATOR ATTACH. . . .	0103	1
20	66-13277-2	. COVER, LEADING EDGE SLAT CORE HOLE.	0103	3
21	AN7510-2	. PLATE	0103	1
		ATTACHING PARTS		
	BACR15E157C4-8	. RIVET	0103	4
		--------*--------		
22	65-18424-4	. SLAT, OUTBOARD WING LEADING EDGE (USED ON . . . . . 65-18421-15 AND -33)	0103	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

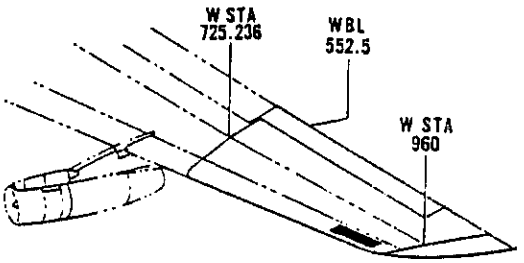

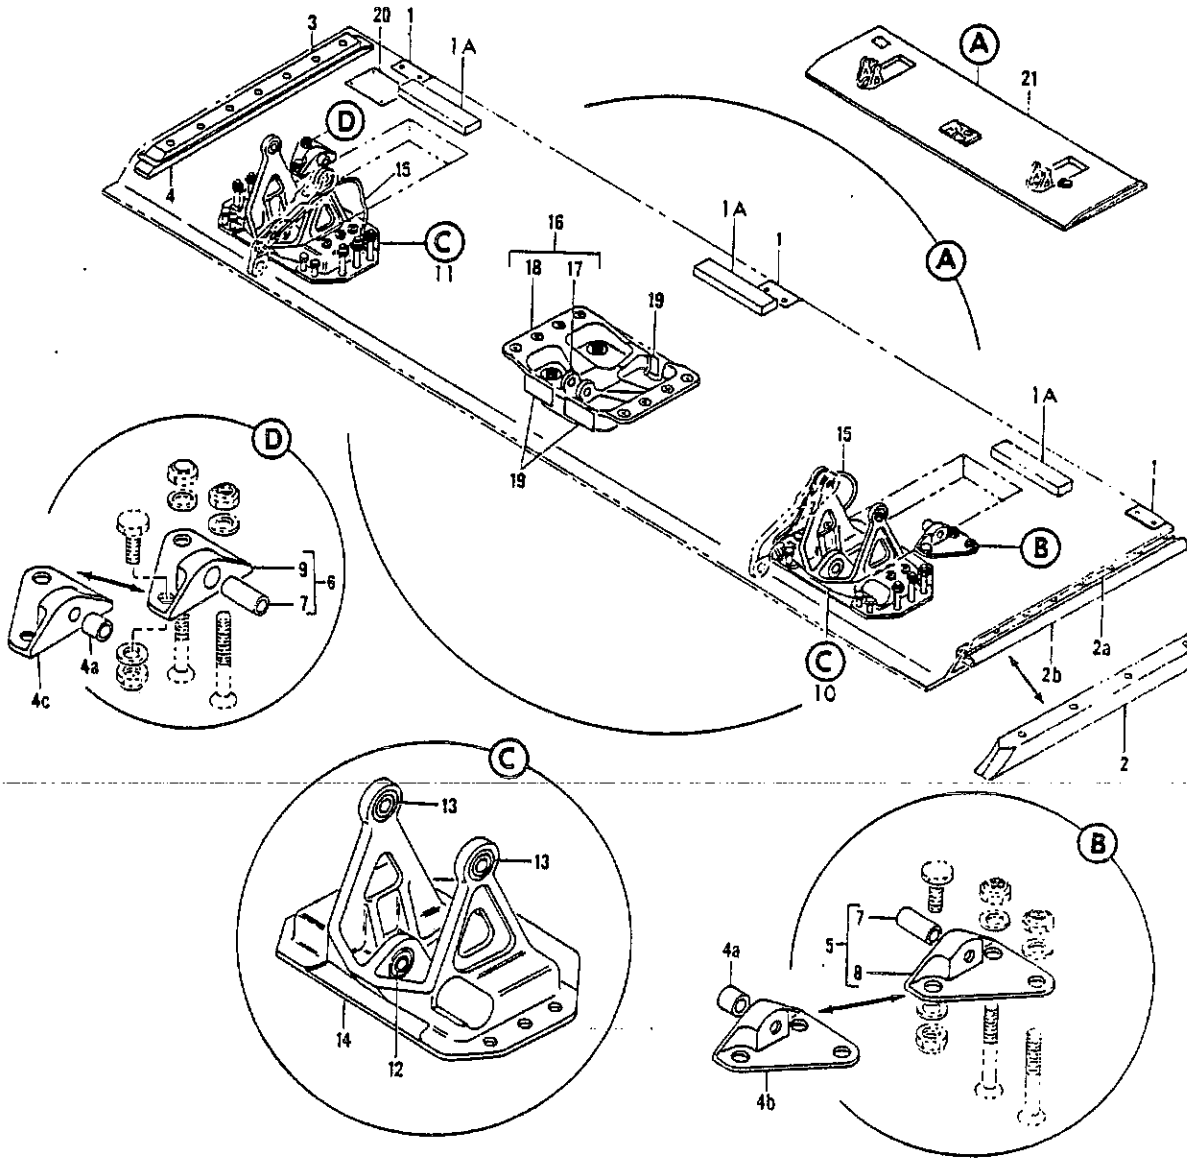


FIGURE 4. SLAT ASSY, SECTION 15 OUTBOARD WING LEADING EDGE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
4	65-18421-13	SLAT ASSY, SECTION 15 OUTBOARD WING LEADING EDGE (LH) . (DELETED BY SB 2651) (SEE FIG. 2, ITEM 68)	0103	RF
	65-18421-14	SLAT ASSY, SECTION 15 OUTBOARD WING LEADING EDGE (RH) . (DELETED BY SB 2651) (SEE FIG. 2, ITEM 68)	0103	RF
1	66-13277-1	. PAD, LEADING EDGE SLAT STOP	0103	3
		ATTACHING PARTS		
	MS2042686	. RIVET	0103	6
		-------*-------		
2A	69-34879-3	. RETAINER ASSY, LEADING EDGE SLAT (RH ONLY).	0103	1
		ATTACHING PARTS		
	NAS517-2-10	. SCREW	0103	8
	AN960D8	. WASHER.	0103	8
	NAS679A08W	. NUT	0103	8
		-------*-------		
2B	69-34879-1	. SEAL ASSY, LEADING EDGE SLAT (RH ONLY).	0103	1
2B	69-34879-4	. . SEAL, (EXTRUSION NO. BAC1530-44 X 14.4 IN. LG). . .	0103	1
3	69-34879-1652	. STRIKER ASSY, SEAL (LH ONLY).	0103	1
		ATTACHING PARTS		
	NAS517-2-4	. SCREW	0103	7
		-------*-------		
4	BACS40A10-200	. SHIM. . . . . (OPTIONALS BACS40B10-200, BACS40C10-200, BACS40D10-200)	0103	AR
4	BACS40B10-200	. SHIM. . . . . (OPTIONAL TO BACS40A10-200)	0103	AR
4	BACS40C10-200	. SHIM. . . . . (OPTIONAL TO BACS40A10-200)	0103	AR
4	BACS40D10-200	. SHIM. . . . . (OPTIONAL TO BACS40A10-200)	0103	AR
4A	66-13301-3	. BUSHING, PRESS FIT PLAIN (USED WITH 69-31217-1 AND . -2) (USED ON 65-18421-13 AND -14)	0103	2
4B	69-31217-1	. BRACKET, LEADING EDGE FLAP NOSE FAIRING MECHANISM . . SUPPORT (USED WITH 66-13301-3) (USED ON 65-18421-13 AND -14) (OPTIONAL TO 69-15480-5)	0103	1
4C	69-31217-2	. BRACKET, LEADING EDGE FLAP NOSE FAIRING MECHANISM . . SUPPORT (USED WITH 66-13301-3) (USED ON 65-18421-13 AND -14) (OPTIONAL TO 69-15480-6)	0103	1
5	69-15480-5	. BRACKET ASSY, NOSE FAIRING MECHANISM SUPPORT (USED ON 65-18421-13 AND -14) (OPTIONAL 69-31217-1 WITH 66-13301-3)	0103	1
6	69-15480-6	. BRACKET ASSY, NOSE FAIRING MECHANISM SUPPORT (USED ON 65-18421-13 AND -14) (OPTIONAL 69-31217-2 WITH 66-13301-3)	0103	1
		ATTACHING PARTS		
	NAS1104-7W	. BOLT.	0103	2
	BACW10T416A	. WASHER.	0103	2
	AN960-416L	. WASHER.	0103	4
	NAS679A4W	. NUT	0103	6
		-------*-------		
7	66-13301-2	. . BUSHING, PRESS FIT PLAIN (USED ON 69-15480-5 AND. . -6)	0103	1
8	69-15480-7	. . BRACKET, SLAT NOSE FAIRING MECHANISM SUPPORT (USED ON 69-15480-5 AND 1-79771-5)	0103	1
9	69-15480-8	. . BRACKET, SLAT NOSE FAIRING MECHANISM SUPPORT. . . . (USED ON 69-15480-6 AND 1-7977-6)	0103	1
10	65-18462-1	. FITTING ASSY, LEADING EDGE SLAT CARRIAGE ATTACH . . .	0103	1
11	65-18462-2	. FITTING ASSY, LEADING EDGE SLAT CARRIAGE ATTACH . . .	0103	1
		ATTACHING PARTS		
	MS2042685	. RIVET	0103	8
	BAC830A8P5-23A	. BOLT.	0103	4
	BAC830A8P5-24A	. BOLT.	0103	6
	BAC830A8P5-26A	. BOLT.	0103	2
	NAS1197-516L	. WASHER.	0103	26
	NAS679A5	. NUT	0103	12
	NAS335CPA10	. BOLT.	0103	2
	NAS335CPA11	. BOLT.	0103	8
	BACN10B-L5L	. NUT	0103	10
		-------*-------		
12	BACB10M8	. . BEARING	0103	1
13	BACB10M11	. . BEARING	0103	2
14	65-18462-3	. . FITTING, LEADING EDGE SLAT CARRIAGE ATTACH (USED ON 65-18462-1)	0103	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
4 14	65-18462-4	. . FITTING, LEADING EDGE SLAT CARRIAGE ATTACH (USED ON 65-18462-2)	0103	1
15	BACJ40K6A7A17	. JUMPER.	0103	2
		ATTACHING PARTS		
	NAS1104-3W	. BOLT.	0103	2
	AN960D416L	. WASHER.	0103	6
	NAS679A4W	. NUT	0103	2
		-------*-------		
16	65-18463-1	. FITTING ASSY, ACTUATOR ATTACH (DELETED BY SB 2956). .	0103	1
16	65-18463-4	. FITTING ASSY, ACTUATOR ATTACH (ADDED BY SB 2956). . .	0103	1
		ATTACHING PARTS		
	BACB30ABP4-8A	. BOLT.	0103	6
	BACB30ABP4-20A	. BOLT.	0103	8
	AN960-416	. WASHER.	0103	6
	BACW10T416A	. WASHER.	0103	8
	NAS679A4W	. NUT	0103	14
		-------*-------		
17	69-14435-1	. . BUSHING, (DELETED BY SB 2956)	0103	1
17	BACB28X6B26	. . BUSHING, (ADDED BY SB 2956)	0103	1
18	65-18463-2	. . FITTING, LEADING EDGE SLAT ACTUATOR ATTACH. . . .	0103	1
19	66-13277-2	. COVER, LEADING EDGE SLAT CORE HOLE.	0103	3
20	AN7510-2	. PLATE	0103	1
		ATTACHING PARTS		
	BACR15E157C4-8	. RIVET	0103	4
		-------*-------		
21	65-18424-5	. SLAT, OUTBOARD WING LEADING EDGE (USED ON . . . . . 65-18421-13)	0103	1
21	65-18424-6	. SLAT, OUTBOARD WING LEADING EDGE (USED ON . . . . . 65-18421-14)	0103	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

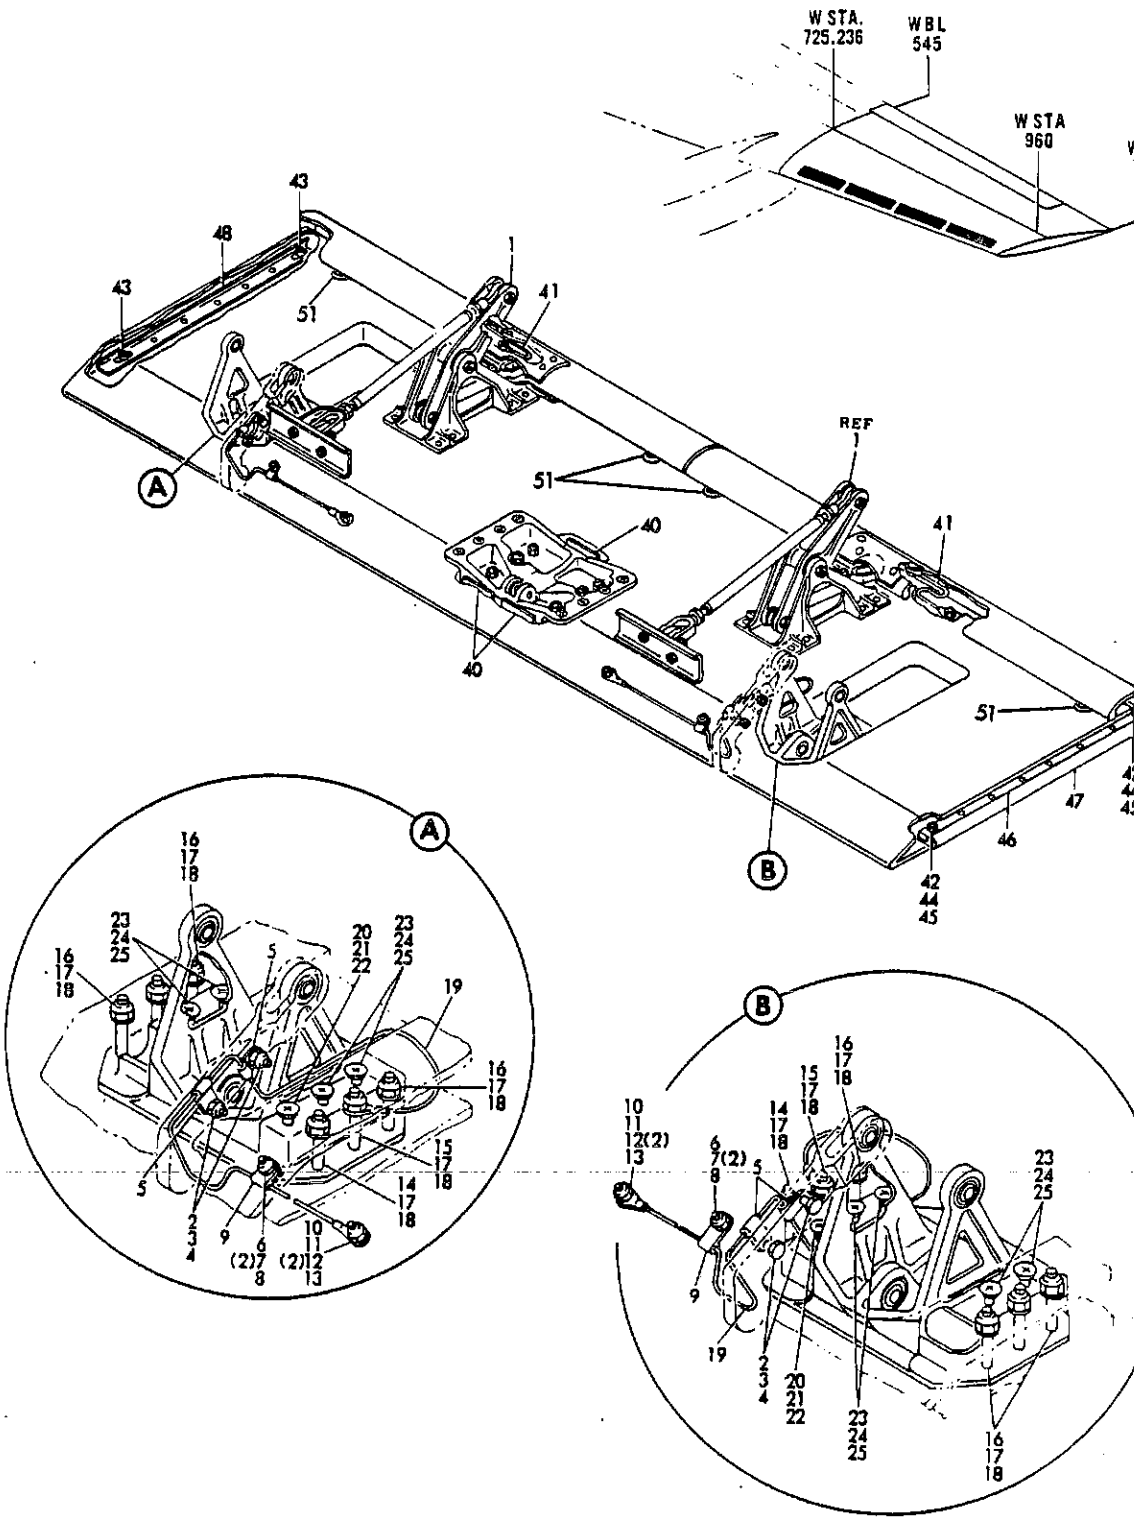


FIGURE 4A. SLAT ASSY, SECTION 15 OUTBOARD WING LEADING EDGE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
4A	65-18421-31	SLAT ASSY, SECTION 15 OUTBOARD WING LEADING EDGE (SEE FIG. 2, ITEM 68) (OPTIONAL 65-18421-34)	0450	RF
	65-18421-34	SLAT ASSY, SECTION 15 OUTBOARD WING LEADING EDGE (SEE FIG. 2, ITEM 68) (OPTIONAL TO 65-18421-31)	0450	RF
	65-18421-31	SLAT ASSY, SECTION 15 OUTBOARD WING LEADING EDGE (ADDED BY SB 2651) (SEE FIG. 2, ITEM 68)	0103	RF
	65-18421-38A	SLAT ASSY, SECTION 15 OUTBOARD WING LEADING EDGE (SEE FIG. 2, ITEM 68)	5199	RF
	65-18421-32	SLAT ASSY, SECTION 15 OUTBOARD WING LEADING EDGE (SEE FIG. 2, ITEM 68) (OPTIONAL 65-18421-35)	0450	RF
	65-18421-35	SLAT ASSY, SECTION 15 OUTBOARD WING LEADING EDGE (SEE FIG. 2, ITEM 68) (OPTIONAL TO 65-18421-32)	0450	RF
	65-18421-32	SLAT ASSY, SECTION 15 OUTBOARD WING LEADING EDGE (ADDED BY SB 2651) (SEE FIG. 2, ITEM 68)	0103	RF
	65-18421-39A	SLAT ASSY, SECTION 15 OUTBOARD WING LEADING EDGE (SEE FIG. 2, ITEM 68)	5199	RF
	65-18421-33	SLAT ASSY, SECTION 15 OUTBOARD WING LEADING EDGE (SEE FIG. 2, ITEM 69) (OPTIONAL 65-18421-36)	0450	RF
	65-18421-36	SLAT ASSY, SECTION 15 OUTBOARD WING LEADING EDGE (SEE FIG. 2, ITEM 69) (OPTIONAL TO 65-18421-33)	0450	RF
	65-18421-33	SLAT ASSY, SECTION 15 OUTBOARD WING LEADING EDGE (ADDED BY SB 2651) (SEE FIG. 2, ITEM 69)	0103	RF
	65-18421-40A	SLAT ASSY, SECTION 15 OUTBOARD WING LEADING EDGE (SEE FIG. 2, ITEM 69)	5199	RF
1	65-64825-1	. MECHANISM INSTL, NOSE FAIRING (USED ON 65-18421-33, -36 AND -40) (SEE 27-15, FIG. 12)	0499	1
1	65-64825-1	. MECHANISM INSTL, NOSE FAIRING (ADDED BY SB 2651). . . (USED ON 65-18421-33) (SEE 27-15, FIG. 12)	0103	1
1	65-64825-1651	. MECHANISM INSTL, NOSE FAIRING (USED ON 65-18421-31, -34 AND -38) (SEE 27-15, FIG. 12)	0499	1
1	65-64825-1651	. MECHANISM INSTL, NOSE FAIRING (ADDED BY SB 2651). . . (USED ON 65-18421-31) (SEE 27-15, FIG. 12)	0103	1
1	65-64825-1652	. MECHANISM INSTL, NOSE FAIRING (USED ON 65-18421-32, -35 AND -39) (SEE 27-15, FIG. 12)	0499	1
1	65-64825-1652	. MECHANISM INSTL, NOSE FAIRING (ADDED BY SB 2651). . . (USED ON 65-18421-32) (SEE 27-15, FIG. 12)	0103	1
2	NAS1103-9	. BOLT.	0150	4
3	AN960-10L	. WASHER.	0150	4
4	NAS679A3W	. NUT		4
5	BACC10DK2	. CLAMP	0150	4
6	NAS1103-4	. BOLT.	0150	2
7	AN960PD10L	. WASHER.	0150	4
8	NAS679A3W	. NUT		2
9	BACC10DK3	. CLAMP	0150	2
10	NAS1104-3	. BOLT.	0150	2
11	AN960D416	. WASHER.	0150	2
12	AN960D416L	. WASHER.	0150	4
13	NAS679A4W	. NUT		2
14	BACB30LU5-23	. BOLT.	0150	2
15	BACB30LU5-25	. BOLT.	0150	2
16	BACB30LU5-24	. BOLT.	0150	8
17	NAS1197-516	. WASHER.	0150	12
18	NAS679A5	. NUT		12
19	BACJ40K6A7A17	. JUMPER.	0150	2
20	BACB30LU5-10	. BOLT.	0150	2
21	AN960-516L	. WASHER.	0150	2
22	NAS679A5	. NUT		2
23	BACB30LU5-11	. BOLT.	0150	8
24	AN960-516	. WASHER.	0150	8
25	NAS679A5	. NUT		8
26	65-18462-1	. FITTING ASSY, CARRIAGE ATTACH	0150	1
26	65-18462-7	. FITTING ASSY, CARRIAGE ATTACH	5199	1
27	65-18462-2	. FITTING ASSY, CARRIAGE ATTACH	0150	1
27	65-18462-8	. FITTING ASSY, CARRIAGE ATTACH	5199	1
28	BACB10M11	. . BEARING, (ONLY BS10ATC24 (V21335) APPROVED)	0150	2
28	MS21233-5	. . BEARING	5199	2
29	BACB10M8	. . BEARING, (ONLY BS12ATC26 (V21335) APPROVED)	0150	1
29	MS21233-6	. . BEARING	5199	2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
4A 30	65-18462-3	. . FITTING, (USED ON 65-18462-1)	0150	1
30	65-18462-4	. . FITTING, (USED ON 65-18462-2)	0150	1
30	65-18462-9	. . FITTING, (USED ON 65-18462-7)	5199	1
30	65-18462-10	. . FITTING, (USED ON 65-18462-8)	5199	1
31	BACB30LU4-20	. BOLT.	0150	8
32	NAS1197-416	. WASHER.	0150	8
33	NAS679A4W	. NUT		8
34	BACB30LU4-8	. BOLT.	0150	6
35	AN960-416	. WASHER.	0150	6
36	NAS679A4W	. NUT		6
37	65-18463-1	. FITTING ASSY, ACTUATOR ATTACH (DELETED BY SB 2956).	0150	1
37	65-18463-5	. FITTING ASSY, ACTUATOR ATTACH	5199	1
37	65-18463-4	. FITTING ASSY, ACTUATOR ATTACH (ADDED BY SB 2956).	0150	1
38	69-14435-1	. . BUSHING, (DELETED BY SB 2956)	0150	1
38	BAC828X6826	. . BUSHING	5199	1
38	BACB28X6B26	. . BUSHING, (ADDED BY SB 2956)	0150	1
39	65-18463-2	. . FITTING	0150	1
39	65-18463-6	. . FITTING	5199	1
40	66-13277-2	. COVER	0150	3
41	BACJ40K5A5A5	. JUMPER.	0150	2
42	BACB30LU2-10	. BOLT, (USED ON 65-18421-32, -33, -35, -36, -39 AND -40)	0150	8
43	BACB30LU2-4	. BOLT, (USED ON 65-18421-31, -33, -34, -36, -38 AND -40)	0150	7
44	AN960D8	. WASHER, (USED ON 65-18421-33)	0150	8
45	NAS679A08W	. NUT, (USED ON 65-18421-33).	0150	8
46	69-34879-3	. SEAL, RETAINER (USED ON 65-18421-32, -33, -35, -36, -39 AND -40)	0150	1
47	69-34879-1	. SEAL ASSY, (USED ON 65-18421-32, -33, -35, -36, -39 AND -40)	0103	1
48	69-34879-1652	. STRIKER ASSY, (USED ON 65-18421-31, -33, -34, -36, -38 AND -40)	0150	1
49	65-18424-4	. SLAT, (USED ON 65-18421-33) (OPTIONAL 65-18424-9)	0150	1
49	65-18424-9	. SLAT, (USED ON 65-18421-33) (OPTIONAL TO 65-18424-4)	0150	1
49	65-18424-9A	. SLAT, (USED ON 65-18421-36 AND -40)	5199	1
49	65-18424-5	. SLAT, (USED ON 65-18421-31) (OPTIONAL 65-18424-7)	0150	1
49	65-18424-7	. SLAT, (USED ON 65-18421-31) (OPTIONAL TO 65-18424-5)	0150	1
49	65-18424-7A	. SLAT, (USED ON 65-18421-34 AND -38)	5199	1
49	65-18424-6	. SLAT, (USED ON 65-18421-32) (OPTIONAL 65-18424-8)	0150	1
49	65-18424-8	. SLAT, (USED ON 65-18421-32) (OPTIONAL TO 65-18424-6)	0150	1
49	65-18424-8A	. SLAT, (USED ON 65-18421-35 AND -39)	5199	1
50	MS27253-2	. PLATE, IDENTIFICATION	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



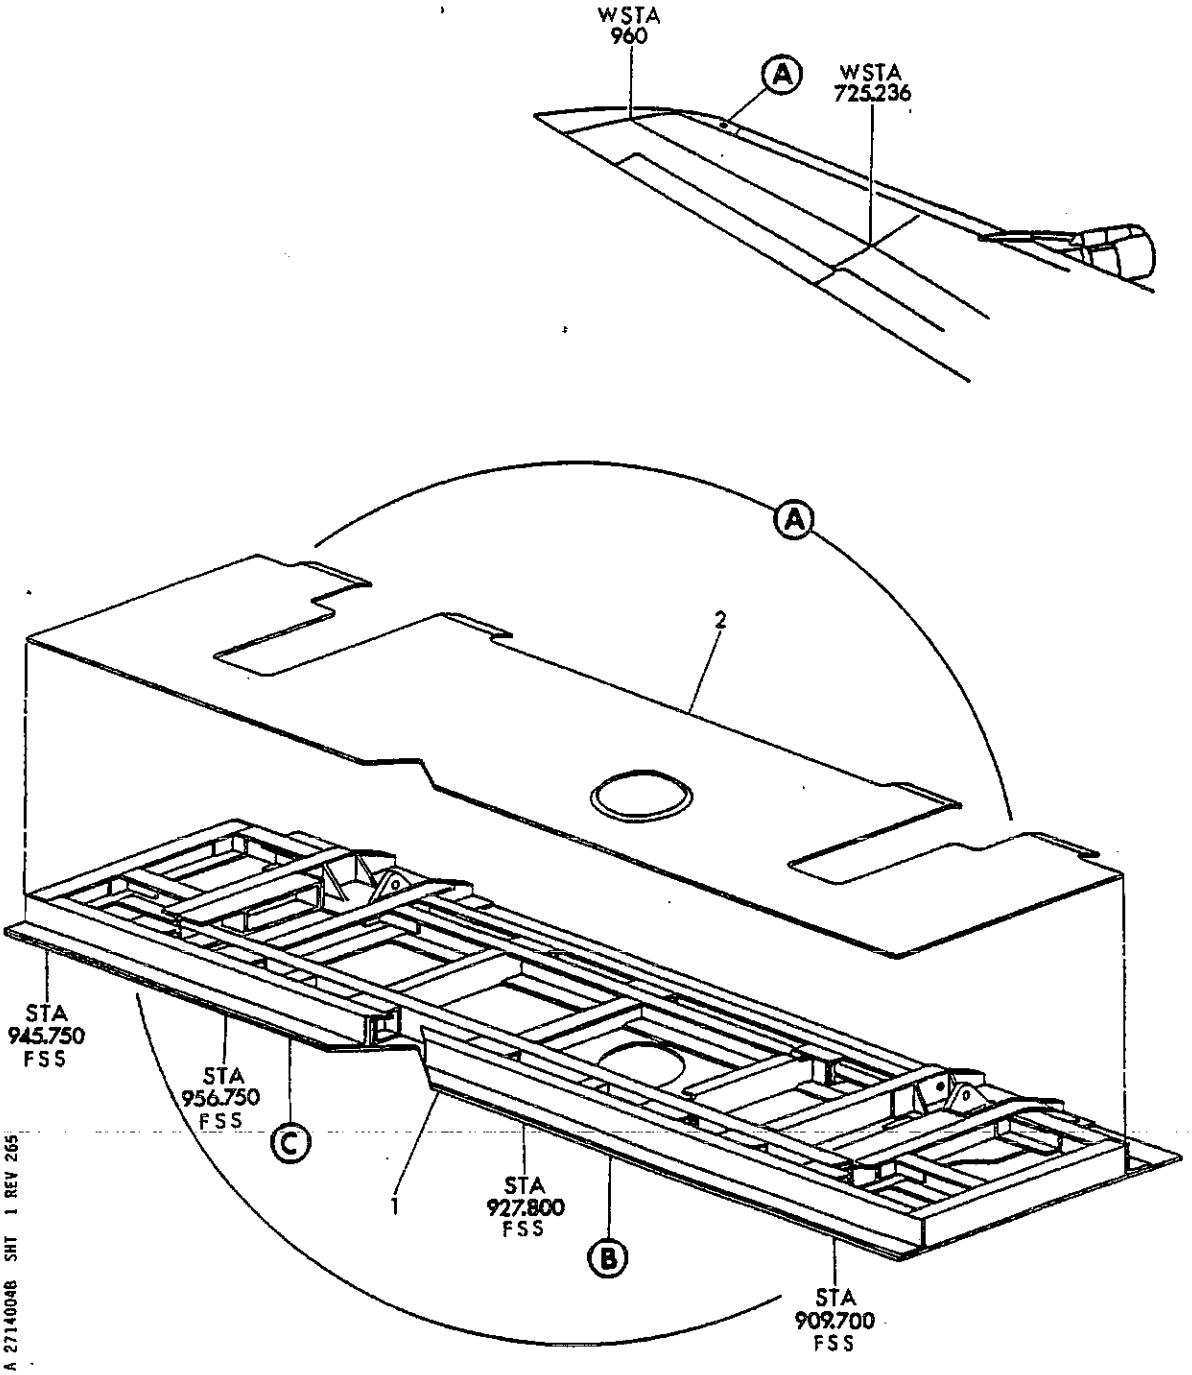


FIGURE 48. DUMMY SLAT INSTL (SHEET 1)

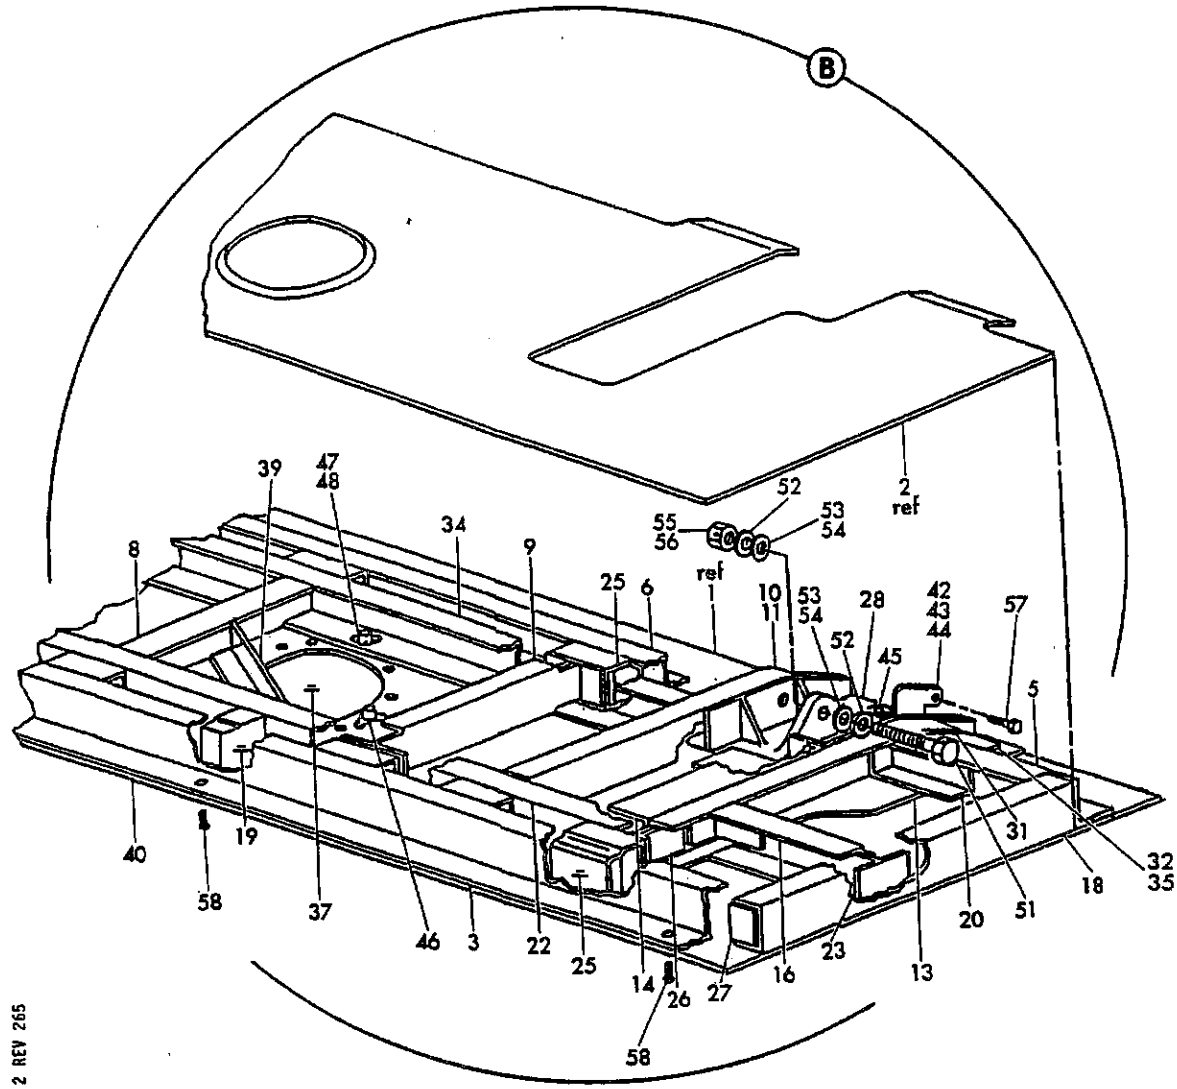

A 2714004B SHT 2 REV 265

FIGURE 4B. DUMMY SLAT INSTL (SHEET 2)

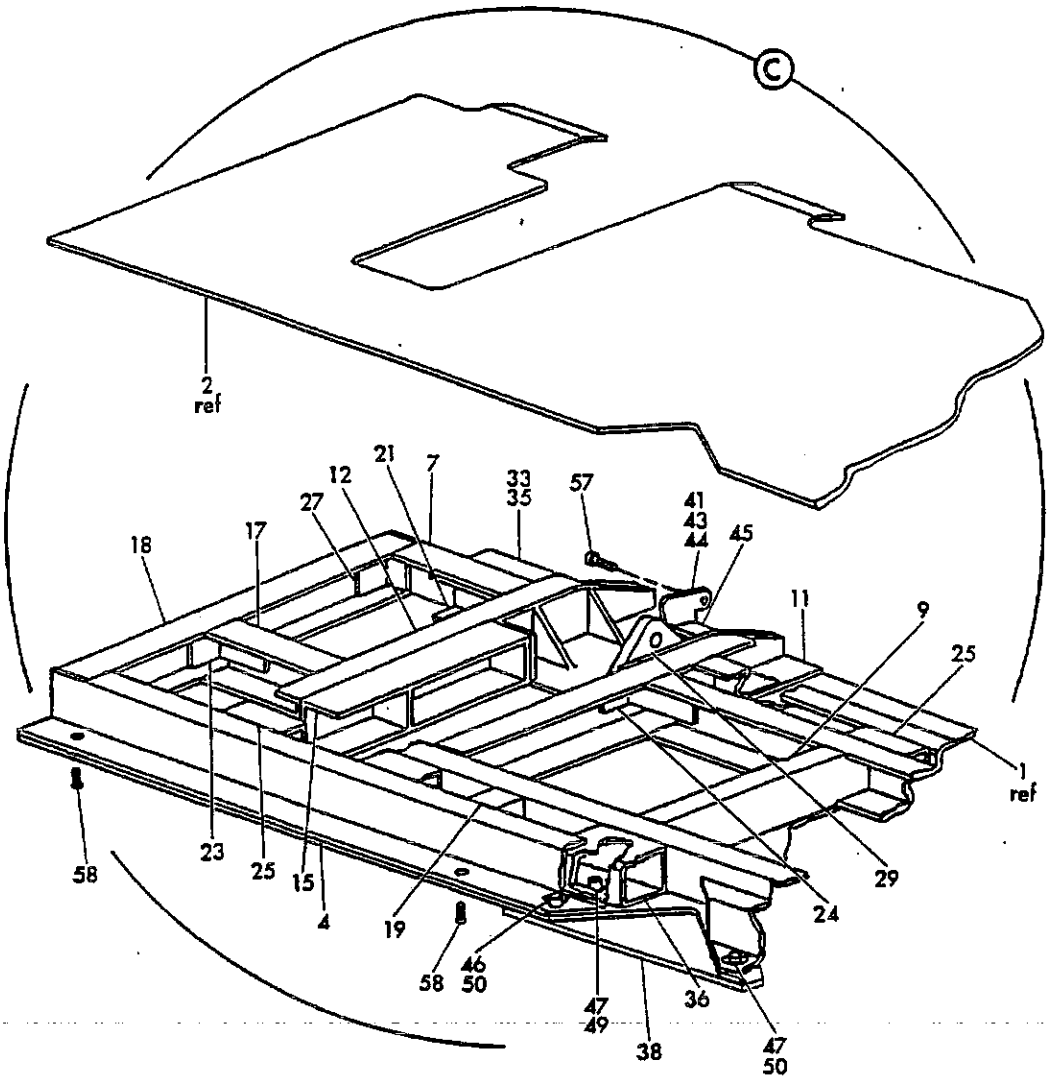

A 27140048 SHT 3 REV 265

FIGURE 48. DUMMY SLAT INSTL (SHEET 3)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	4B	361-57-20-74364-001	DUMMY SLAT INSTL, (LH) (VS2500) (ADDED BY RAF 7211.019-225) (SEE FIG. 2, ITEM 68)	0150	RF
R		361-57-20-74364-002	DUMMY SLAT INSTL, (RH) (VS2500) (ADDED BY RAF 7211.019-225) (SEE FIG. 2, ITEM 68)	0150	RF
R		361-57-20-74364-101	. DUMMY SLAT ASSY, (LH) (VS2500).	0150	1
R		361-57-20-74364-102	. DUMMY SLAT ASSY, (RH) (VS2500).	0150	1
R	1	361-57-20-74399-101	. . LOWER SKIN UPPER, (LH ONLY) (VS2500).	0150	1
R	1	361-57-20-74399-102	. . LOWER SKIN UPPER, (RH ONLY) (VS2500).	0150	1
R	2	361-57-20-74399-103	. . SKIN UPPER, (LH ONLY) (VS2500).	0150	1
R	2	361-57-20-74399-104	. . SKIN UPPER, (RH ONLY) (VS2500).	0150	1
R	3	361-57-20-74399-105	. . ZEE, (LH ONLY) (VS2500)	0150	1
R	3	361-57-20-74399-106	. . ZEE, (RH ONLY) (VS2500)	0150	1
R	4	361-57-20-74399-107	. . ZEE, (LH ONLY) (VS2500)	0150	1
R	4	361-57-20-74399-108	. . ZEE, (RH ONLY) (VS2500)	0150	1
R	5	361-57-20-74399-109	. . ZEE, (LH ONLY) (VS2500)	0150	1
R	5	361-57-20-74399-110	. . ZEE, (RH ONLY) (VS2500)	0150	1
R	6	361-57-20-74399-111	. . ZEE, (VS2500)	0150	2
R	7	361-57-20-74399-113	. . ZEE, (LH ONLY) (VS2500)	0150	1
R	7	361-57-20-74399-114	. . ZEE, (RH ONLY) (VS2500)	0150	1
R	8	361-57-20-74399-115	. . ZEE, (VS2500)	0150	2
R	9	361-57-20-74399-117	. . CHANNEL, (VS2500)	0150	4
R	10	361-57-20-74399-121	. . STIFFENER, (LH ONLY) (VS2500)	0150	1
R	10	361-57-20-74399-122	. . STIFFENER, (RH ONLY) (VS2500)	0150	1
R	11	361-57-20-74399-122	. . STIFFENER, (LH ONLY) (VS2500)	0150	1
R	11	361-57-20-74399-121	. . STIFFENER, (RH ONLY) (VS2500)	0150	1
R	12	361-57-20-74399-123	. . CHANNEL, (VS2500)	0150	1
R	12	361-57-20-74399-124	. . CHANNEL, (VS2500)	0150	1
R	13	361-57-20-74399-124	. . CHANNEL, (LH ONLY) (VS2500)	0150	1
R	13	361-57-20-74399-123	. . CHANNEL, (RH ONLY) (VS2500)	0150	1
R	14	361-57-20-74399-129	. . FITTING, (LH ONLY) (VS2500)	0150	1
R	14	361-57-20-74399-130	. . FITTING, (RH ONLY) (VS2500)	0150	1
R	15	361-57-20-74399-130	. . FITTING, (LH ONLY) (VS2500)	0150	1
R	15	361-57-20-74399-129	. . FITTING, (RH ONLY) (VS2500)	0150	1
R	16	361-57-20-74399-131	. . CHANNEL, (VS2500)	0150	2
R	17	361-57-20-74399-133	. . CHANNEL, (VS2500)	0150	2
R	18	361-57-20-74399-135	. . CHANNEL, (VS2500)	0150	4
R	19	361-57-20-74399-137	. . FITTING, (LH ONLY) (VS2500)	0150	2
R	19	361-57-20-74399-138	. . FITTING, (RH ONLY) (VS2500)	0150	2
R	20	361-57-20-74399-139	. . FITTING, (LH ONLY) (VS2500)	0150	2
R	20	361-57-20-74399-140	. . FITTING, (RH ONLY) (VS2500)	0150	2
R	21	361-57-20-74399-140	. . FITTING, (LH ONLY) (VS2500)	0150	2
R	21	361-57-20-74399-139	. . FITTING, (RH ONLY) (VS2500)	0150	2
R	22	361-57-20-74399-143	. . CHANNEL, (LH ONLY) (VS2500)	0150	1
R	22	361-57-20-74399-144	. . CHANNEL, (RH ONLY) (VS2500)	0150	1
R	23	361-57-20-74399-149	. . TEE, (VS2500)	0150	20
R	24	361-57-20-74399-153	. . TEE, (VS2500)	0150	4
R	25	361-57-20-74399-155	. . FITTING, (VS2500)	0150	18
R	26	361-57-20-74399-159	. . CLIP, (VS2500).	0150	8
R	27	361-57-20-74399-161	. . CLIP, (VS2500).	0150	8
R	28	361-57-20-74399-165	. . FITTING, (VS2500)	0150	2
R	28	361-57-20-74399-166	. . FITTING, (VS2500)	0150	2
R	29	361-57-20-74399-166	. . FITTING, (LH ONLY) (VS2500)	0150	2
R	29	361-57-20-74399-165	. . FITTING, (RH ONLY) (VS2500)	0150	2
R	31	361-57-20-74399-175	. . FILLER, (VS2500).	0150	8
R	32	361-57-20-74399-181	. . FITTING, (LH ONLY) (VS2500)	0150	1
R	32	361-57-20-74399-182	. . FITTING, (RH ONLY) (VS2500)	0150	1
R	33	161-57-20-74399-182	. . FITTING, (LH ONLY) (VS2500)	0150	1
R	33	361-57-20-74399-181	. . FITTING, (RH ONLY) (VS2500)	0150	1
R	34	361-57-20-74399-185	. . CHANNEL, (LH ONLY) (VS2500)	0150	1
R	34	361-57-20-74399-186	. . CHANNEL, (RH ONLY) (VS2500)	0150	1
R	35	361-57-20-74399-187	. . FILLER, (VS2500).	0150	8
R	36	361-57-20-74399-197	. . FITTING, LH (VS2500).	0150	2
R	36	361-57-20-74399-198	. . FITTING, RH (VS2500).	0150	2
R	37	361-57-20-74399-201	. . FWD COVER, LH (WITHOUT PODS CONFIGURATION) (VS2500)	0150	1
R	37	361-57-20-74399-202	. . FWD COVER, RH (WITHOUT PODS CONFIGURATION) (VS2500)	0150	1
R	38	361-57-20-74399-203	. . AFT COVER, LH (WITHOUT PODS CONFIGURATION) (VS2500)	0150	1
R	38	361-57-20-74399-204	. . AFT COVER, RH (WITHOUT PODS CONFIGURATION) (VS2500)	0150	1
R	39	361-57-20-74399-199	. . CLAMP SUPPORT, (VS2500)	0150	2
R	40	361-57-20-74399-207	. . LOWER SKIN ASSY, LH (VS2500).	0150	1
R	40	361-57-20-74399-208	. . LOWER SKIN ASSY, RH (VS2500).	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	4B 41	361-57-20-74399-193	. . CLIP ASSY, (LH) (VS2500).	0150	1
R	41	361-57-20-74399-194	. . CLIP ASSY, (RH) (VS2500).	0150	1
R	42	361-57-20-74399-194	. . CLIP ASSY, (LH) (VS2500).	0150	1
R	42	361-57-20-74399-193	. . CLIP ASSY, (RH) (VS2500).	0150	1
R	43	361-57-20-74399-195	. . . CLIP, (LH ONLY) (VS2500).	0150	1
R	43	361-57-20-74399-196	. . . CLIP, (RH ONLY) (VS2500).	0150	1
R	44	NAS21075-4	. . . NUT PLATE	0150	3
R	45	NAS1580A4R8P	. . BOLT.	0150	12
R	46	MS21055-4	. . NUTPLATE.	0150	8
R	47	MS21047-4	. . NUTPLATE.	0150	30
R	48	NAS1581A4R4	. . BOLT, (WITHOUT PODS CONFIGURATION).	0150	2
R	48	NAS1581A4R6	. . BOLT, (WITH PODS CONFIGURATION)	0150	1
R	49	NAS1581A4R4	. . BOLT, (WITH PODS CONFIGURATION)	0150	6
R	49	NAS1581A4R2	. . BOLT, (WITHOUT PODS CONFIGURATION).	0150	6
R	50	NAS1581A4R5	. . BOLT, (WITHOUT PODS CONFIGURATION).	0150	8
R	50	NAS1581A4R6	. . BOLT, (WITH PODS CONFIGURATION)	0150	8
R	51	NAS1106-21DW	. BOLT.	0150	4
R	52	AN960-616	. WASHER.	0150	4
R	53	AN960-616L	. WASHER.	0150	4
R	54	AN960-616L	. WASHER.	0150	4
R	55	AN320-6	. NUT	0150	4
R	56	MS24665-357	. PIN	0150	2
R	57	NAS1105-15	. BOLT.	0150	4
R	58	NAS1580A4R9P	. BOLT, (WITH PODS INSTL)	0150	16

MISSING ITEM NUMBERS ARE NOT APPLICABLE

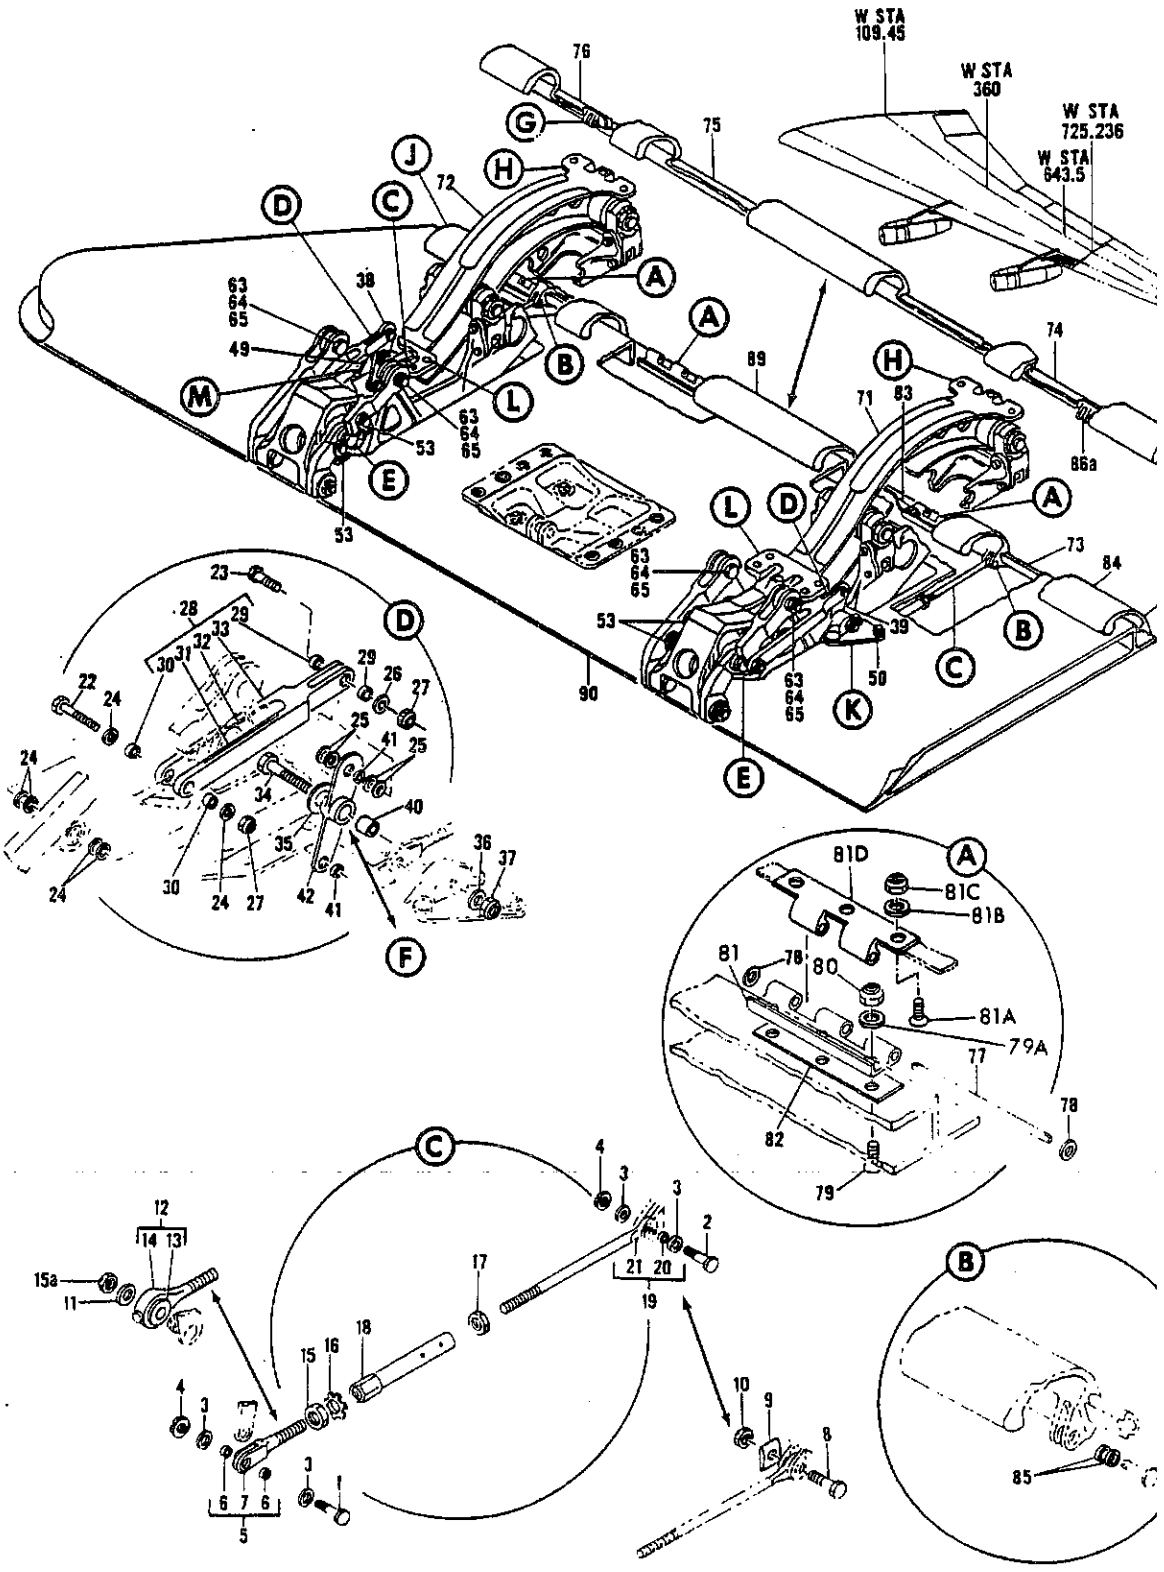


FIGURE 6. SLAT INSTL, FRONT SPAR STATION 710.06 TO 745.06 IN BOARD WING (SHEET 1)

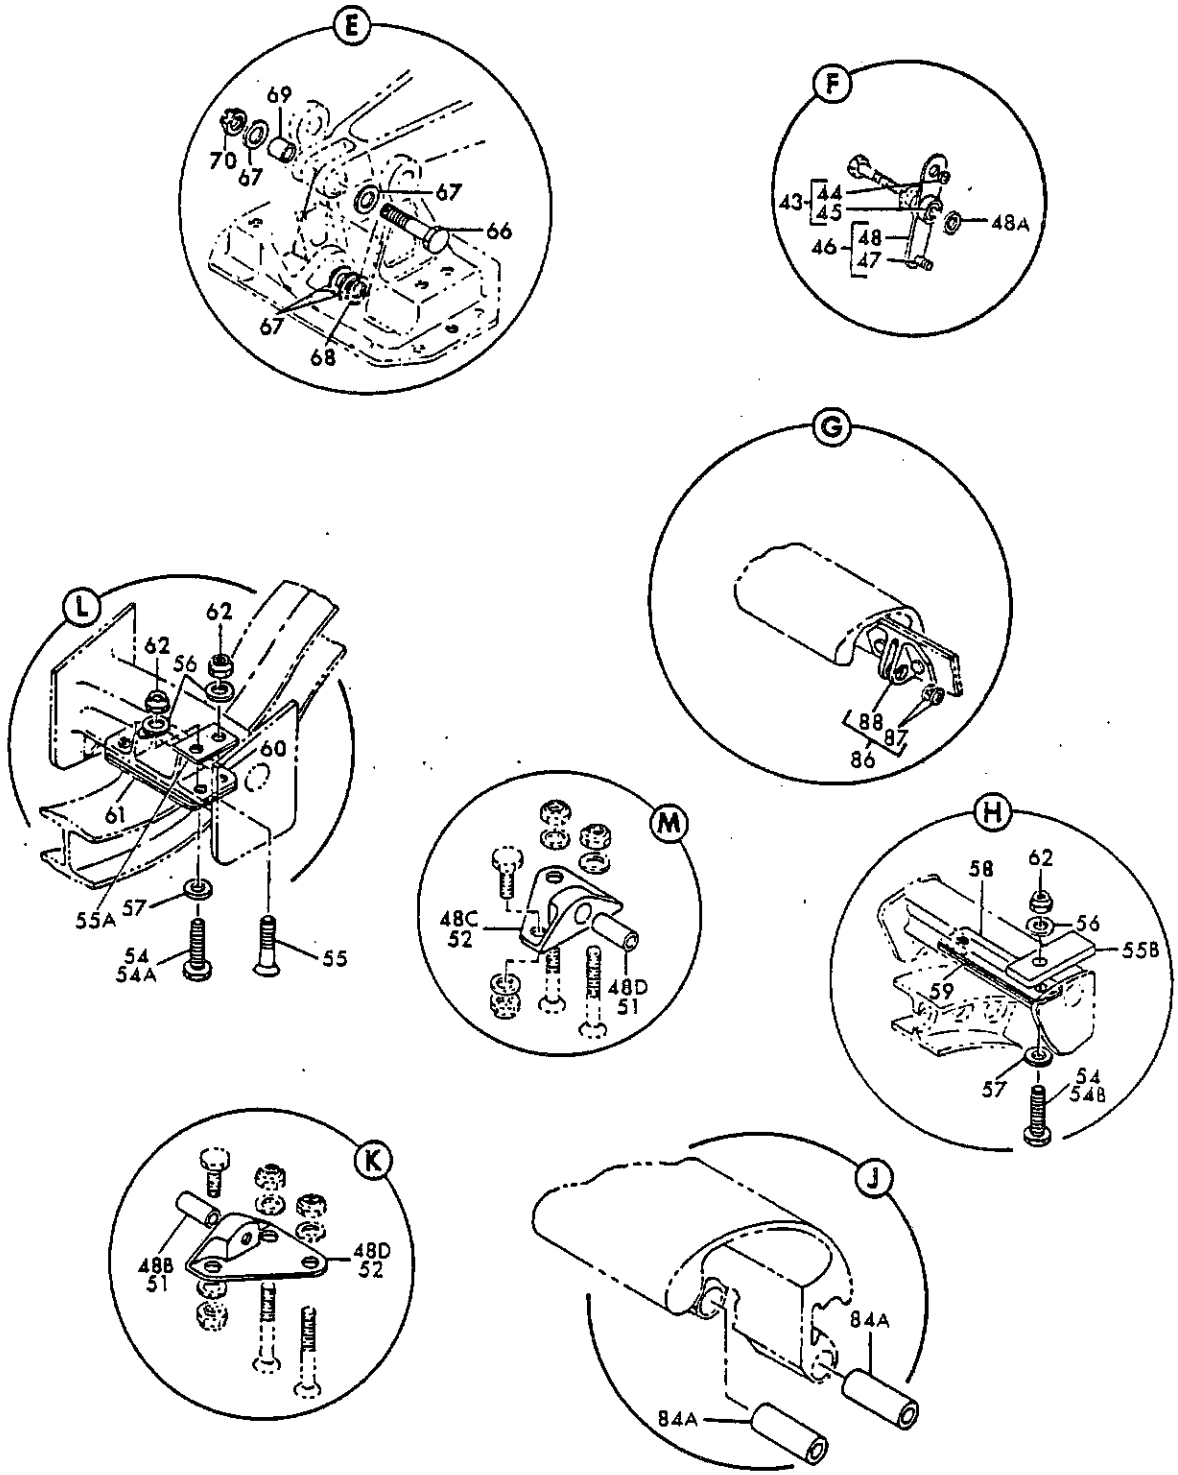


FIGURE 6. SLAT INSTL, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
6	65-18426-1	SLAT INSTL, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING (LH) (DELETED BY SB 2651) (SEE 57-4, FIG. 9, ITEM 9)	0103	RF
	65-18426-1655	SLAT INSTL, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING (LH) (SEE 57-4, FIG. 9, ITEM 9)	0499	RF
	65-18426-1655	SLAT INSTL, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING (LH) (ADDED BY SB 2651) (SEE 57-4, FIG. 9, ITEM 9)	0103	RF
	65-18426-2	SLAT INSTL, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING (RH) (DELETED BY SB 2651) (SEE 57-4, FIG. 9, ITEM 9)	0103	RF
	65-18426-1656	SLAT INSTL, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING (RH) (SEE 57-4, FIG. 9, ITEM 9)	0499	RF
	65-18426-1656	SLAT INSTL, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING (RH) (ADDED BY SB 2651) (SEE 57-4, FIG. 9, ITEM 9)	0103	RF
8	66-19216-1	. BOLT, SPECIAL CLOSE TOLERANCE HEX HEAD (DELETED BY SB 2651)	0103	2
9	66-18550-1	. FILLER, LEADING EDGE SLAT NOSE MECHANISM RADIUS . . . (DELETED BY SB 2651)	0103	2
10	AN320-4	. NUT, (DELETED BY SB 2651)	0103	2
11	MS27111-1	. WASHER, (DELETED BY SB 2651).	0103	2
12	69-24794-1	. ROD END ASSY, LEADING EDGE SLAT FAIRING MECHANISM . . (DELETED BY SB 2651)	0103	2
13	10-60545-111S	. . BEARING, TEFLON LUBRICATED SPHERICAL.	0103	1
14	69-24794-2	. . ROD END, LEADING EDGE SLAT FAIRING MECHANISM. . . .	0103	1
15	AN316-4R	. NUT, (DELETED BY SB 2651)	0103	2
15A	AN316-4R	. NUT, (DELETED BY SB 2651)	0103	2
16	NAS460-416	. WASHER, (DELETED BY SB 2651).	0103	2
17	AN316-4L	. NUT, (DELETED BY SB 2651)	0103	2
18	69-15477-1	. TUBE, LEADING EDGE SLAT NOSE FAIRING MECHANISM TIE. . ROD (DELETED BY SB 2651)	0103	2
19	69-24921-1	. ROD ASSY, LEADING EDGE FAIRING MECHANISM TIE. . . . . (DELETED BY SB 2651)	0103	2
20	10-60516-104	. . BUSHING, SELF LUBRICATED JOURNAL (USED ON . . . . . 69-24921-1)	0103	1
21	69-24921-2	. . ROD, (USED ON 69-24921-1 AND 1-79771-2)	0103	1
22	NAS1103-15DW	. BOLT, (DELETED BY SB 2651).	0103	2
23	66-19216-3	. BOLT, SPECIAL CLOSE TOLERANCE HEX HEAD (DELETED BY. . SB 2651)	0103	2
24	AN960-10L	. WASHER, (DELETED BY SB 2651).	0103	12
25	AN960C416L	. WASHER, (DELETED BY SB 2651).	0103	8
26	AN960D416	. WASHER, (DELETED BY SB 2651).	0103	2
27	AN320-4	. NUT, (DELETED BY SB 2651)	0103	4
28	69-24929-1	. LINK ASSY, LEADING EDGE SLAT NOSE FAIRING (DELETED BY SB 2651)	0103	2
29	10-60516-104	. . BUSHING, PRESS FIT STRUCTURAL	0103	2
30	66-9266-12	. . BUSHING, PRESSED FIT STRUCTURAL	0103	2
31	66-19274-1	. . STRIP, RUB.	0103	1
32	66-19274-2	. . STRIP, RUB.	0103	1
33	69-24929-2	. . LINK, LEADING EDGE SLAT NOSE FAIRING.	0103	1
34	66-19216-2	. BOLT, SPECIAL CLOSE TOLERANCE HEX HEAD (DELETED BY. . SB 2651)	0103	2
35	BACW10P32C	. WASHER, (DELETED BY SB 2651).	0103	2
36	AN960-416L	. WASHER, (DELETED BY SB 2651).	0103	2
37	AN320-4	. NUT, (DELETED BY SB 2651)	0103	2
43	69-24781-1	. BAR ASSY, FAIRING MECHANISM DIFFERENTIAL (DELETED BY SB 2651)	0103	2
44	10-60516-104	. . BUSHING, PRESS FIT STRUCTURAL	0103	1
45	10-60516-107	. . BUSHING, PRESS FIT STRUCTURAL	0103	1
46	69-24781-2	. . BAR ASSY, FAIRING MECHANISM DIFFERENTIAL BRAZE. . .	0103	1
47	69-24781-1650	. . . BOLT, FAIRING MECHANISM DIFFERENTIAL BRAZE BAR. .	0103	1
48	69-24781-3	. . . BAR, FAIRING MECHANISM DIFFERENTIAL BRAZE	0103	1
48A	AN960C616L	. WASHER, (DELETED BY SB 2651).	0103	2
48B	66-13301-3	. BUSHING, PRESS FIT PLAIN (DELETED BY SB 2651) (USED . WITH 69-31217-1 AND -2)	0103	2
48C	69-31217-2	. BRACKET, LEADING EDGE FLAP NOSE FAIRING MECHANISM . . SUPPORT (DELETED BY SB 2651) (USED WITH 66-13301-3) (OPTIONAL TO 69-15480-6 (DELETED BY SB 2651))	0103	1
48C	69-15480-6	. BRACKET, LEADING EDGE FLAP NOSE FAIRING MECHANISM . . SUPPORT (DELETED BY SB 2651) (OPTIONAL 69-31217-2 WITH 66-13301-3 (DELETED BY SB 2651))	0103	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	6 48D	69-31217-1	. BRACKET, LEADING EDGE FLAP NOSE FAIRING MECHANISM . . SUPPORT (DELETED BY SB 2651) (USED WITH 66-13301-3) (OPTIONAL TO 69-15480-5 (DELETED BY SB 2651))	0103	1
	48D	69-15480-5	. BRACKET, LEADING EDGE FLAP NOSE FAIRING MECHANISM . . SUPPORT (DELETED BY SB 2651) (OPTIONAL 69-31217-1 WITH 66-13301-3 (DELETED BY SB 2651))	0103	1
			ATTACHING PARTS		
		NAS1104-7W	. BOLT.	0103	2
		BACB30AB4P24A	. BOLT.	0103	4
		NAS1197-416L	. WASHER.	0103	2
		AN960-416L	. WASHER.	0103	4
		NAS679A4W	. NUT	0103	6
			-------*-------		
	51	66-13301-2	. . BUSHING, PRESS-FIT PLAIN (USED ON 69-15480-5 AND. . -6)	0103	1
	52	69-15480-8	. . BRACKET, LEADING EDGE SLAT NOSE FAIRING MECHANISM . SUPPORT (USED ON 69-15480-6 AND 1-79771-6)	0103	1
	52	69-15480-7	. . BRACKET, LEADING EDGE SLAT NOSE FAIRING MECHANISM . SUPPORT (USED ON 69-15480-5 AND 1-79771-5)	0103	1
	53	BACC10DK2	. CLAMP, (DELETED BY SB 2651)	0103	4
			ATTACHING PARTS		
		NAS1103-9W	. BOLT.	0103	4
		AN960-10L	. WASHER.	0103	4
		NAS679A3W	. NUT	0103	4
			-------*-------		
	54	NAS1104-7W	. BOLT, (DELETED BY SB 2651).	0103	8
	54A	NAS1104-8	. BOLT, (DELETED BY SVA E.O. 81424)	5199	4
R	54A	NAS1104-8	. BOLT, (DELETED BY SB 3323).	0450	4
	54A	NAS1104-8	. BOLT, (ADDED BY SB 2651 AND DELETED BY SB 3323) . . .	0103	4
	54A	BACB30NF4H6	. BOLT, (ADDED BY SB 3323).	0150	4
	54A	BACB30NF4H6	. BOLT, (ADDED BY SVA E.O. 81424)	5199	4
	54B	NAS1104-7	. BOLT, (DELETED BY SVA E.O. 81424)	5199	4
R	54B	NAS1104-7	. BOLT, (DELETED BY SB 3323).	0450	4
	54B	BACB30LM4H6P	. BOLT, (ADDED BY SVA E.O. 81424)	5199	4
	54B	NAS1104-7	. BOLT, (ADDED BY SB 2651 AND DELETED BY SB 3323) . . .	0103	4
	54B	BACB30LM4H5P	. BOLT, (ADDED BY SB 3323).	0150	4
	55	BACB30AB P4-9A	. BOLT, (DELETED BY SB 2651).	0103	4
	55	NAS1504-8	. BOLT, (DELETED BY SVA E.O. 81424)	5199	4
R	55	NAS1504-8	. BOLT, (DELETED BY SB 3323).	0450	4
	55	NAS1504-8	. BOLT, (ADDED BY SB 2651 AND DELETED BY SB 3323) . . .	0103	4
	55	BACB30LU4-6	. BOLT, (ADDED BY SB 3323).	0150	4
	55	BACB30LU4-6	. BOLT, (ADDED BY SVA E.O. 81424)	5199	4
	55A	69-70411-1	. LOCKNUT ASSY, (ADDED BY SB 3323).	0150	4
	55A	69-70411-1	. LOCKNUT ASSY, (ADDED BY SVA E.O. 81424)	5199	4
	55B	69-70412-1	. PLATE, BOLT RETAINING (ADDED BY SB 3323).	0150	4
	55B	69-70412-1	. LOCKNUT ASSY, (ADDED BY SVA E.O. 81424)	5199	4
	56	AN960-416	. WASHER, (DELETED BY SB 3323).	0150	12
	56	AN960-416	. WASHER, (DELETED BY SVA E.O. 81424)	5199	12
	57	AN960-416L	. WASHER, (ADDED BY SB 3323).	0150	8
	57	AN960-416L	. WASHER, (DELETED BY SVA E.O. 81424)	5199	12
	58	BACS40A15-58	. SHIM, (OPTIONAL) (DELETED BY SB 2651)	0103	AR
	58	BACS40B15-58	. SHIM, (OPTIONAL) (DELETED BY SB 2651)	0103	AR
	58	BACS40E15-58	. SHIM, (OPTIONAL) (DELETED BY SB 2651)	0103	AR
	58	BACS40R15B36F	. SHIM, (OPTIONAL).	0499	AR
	58	BACS40R15B36F	. SHIM, (OPTIONAL) (ADDED BY SB 2651)	0103	AR
	58	BACS40R15C36F	. SHIM, (OPTIONAL).	0499	AR
	58	BACS40R15C36F	. SHIM, (OPTIONAL) (ADDED BY SB 2651)	0103	AR
	58	BACS40R15E36F	. SHIM, (OPTIONAL).	0499	AR
	58	BACS40R15E36F	. SHIM, (OPTIONAL) (ADDED BY SB 2651)	0103	AR
	59	BACS47B15-58A	. SHIM, (DELETED BY SB 2651).	0103	AR
	59	BACS47G15B36F	. SHIM.	0499	AR
	59	BACS47G15B36F	. SHIM, (ADDED BY SB 2651).	0103	AR
	60	BACS40A24-58	. SHIM, (OPTIONAL) (DELETED BY SB 2651)	0103	AR
	60	BACS40B24-58	. SHIM, (OPTIONAL) (DELETED BY SB 2651)	0103	AR
	60	BACS40E24-58	. SHIM, (OPTIONAL) (DELETED BY SB 2651)	0103	AR
	60	BACS40R10B36F	. SHIM, (OPTIONAL).	0499	AR
	60	BACS40R10B36F	. SHIM, (OPTIONAL) (ADDED BY SB 2651)	0103	AR
	60	BACS40R10C36F	. SHIM, (OPTIONAL).	0499	AR
	60	BACS40R10C36F	. SHIM, (OPTIONAL) (ADDED BY SB 2651)	0103	AR
	60	BACS40R10E36F	. SHIM, (OPTIONAL).	0499	AR
	60	BACS40R10E36F	. SHIM, (OPTIONAL) (ADDED BY SB 2651)	0103	AR
	61	BACS47B24-58A	. SHIM, (DELETED BY SB 2651).	0103	AR

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
6 61	BACS47G10B36F	. SHIM.	0499	AR
61	BACS47G10B36F	. SHIM, (ADDED BY SB 2651).	0103	AR
62	NAS679A4W	. NUT, (DELETED BY SB 3323)	0150	12
62	NAS679A4W	. NUT, (DELETED BY SVA E.O. 81424).	5199	12
63	NAS1105-11DW	. BOLT, (DELETED BY SB 2651).	0103	4
63	NAS1105-11D	. BOLT.	0499	4
63	NAS1105-11D	. BOLT, (ADDED BY SB 2651).	0103	4
64	AN960-516	. WASHER.		8
65	AN320-5	. NUT		4
66	NAS1106-19DW	. BOLT, (DELETED BY SB 2651).	0103	2
67	AN960-616	. WASHER, (DELETED BY SB 2651).	0103	AR
68	AN960-616L	. WASHER, (DELETED BY SB 2651).	0103	AR
69	66-9266-13	. BUSHING, PRESSED FIT STRUCTURAL (DELETED BY SB 2651)	0103	2
70	AN320-6	. NUT, (DELETED BY SB 2651)	0103	2
71	69-43346-2	. CARRIAGE INSTL, WING LEADING EDGE SLAT SWITCH (LH ONLY) (SEE FIG. 5A AND 15A)	0103	1
71	69-43346-1	. CARRIAGE INSTL, LEADING EDGE (LH ONLY) (SEE FIG. 15A)	0450	1
71	69-43346-7	. CARRIAGE INSTL, LEADING EDGE (LH ONLY) (SEE FIG. 15A)	5199	1
71	69-43346-2	. CARRIAGE INSTL, WING LEADING EDGE SLAT SWITCH (RH ONLY) (SEE FIG. 5A AND 15A)	0150	1
71	69-43346-8	. CARRIAGE INSTL, LEADING EDGE SWITCH (RH ONLY) (SEE. FIG. 15A)	5199	1
72	69-43346-1	. CARRIAGE INSTL, WING LEADING EDGE SLAT (SEE FIG. 5A AND 15A)	0150	1
72	69-43346-7	. CARRIAGE INSTL, LEADING EDGE (SEE FII. 15A)	5199	1
74	65-18426-8	. SEAL, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING SLAT FAIRING (EXTRUSION NO. BAC1530-18 X 2.9 IN. LG) (DELETED BY SB 2651)	0103	1
75	65-18426-9	. SEAL, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING SLAT FAIRING (EXTRUSION NO. BAC1530-18 X 19.4 IN. LG) (DELETED BY SB 2651)	0103	1
76	65-18426-10	. SEAL, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING SLAT FAIRING (EXTRUSION NO. BAC1530-18 X 6.9 IN. LG) (DELETED BY SB 2651)	0103	1
77	66-13320-1	. PIN, LEADING EDGE SLAT NOSE FAIRING HINGE (ALTERED. FROM MS20253P4-415) (DELETED BY SB 2651)	0103	3
78	AN960-10L	. WASHER, (DELETED BY SB 2651).	0103	6
79	BACB30ABP3-4A	. BOLT, (DELETED BY SB 2651).	0103	9
80	NAS679A3W	. NUT, (DELETED BY SB 2651)	0103	9
81	69-15476-2	. HINGE, LEADING EDGE SLAT NOSE FAIRING (DELETED BY SB 2651) (OPTIONAL 69-15476-1 (DELETED BY SB 2651))	0103	3
81	69-15476-1	. HINGE, LEADING EDGE SLAT NOSE FAIRING (DELETED BY SB 2651) (OPTIONAL TO 69-15476-2 (DELETED BY SB 2651))	0103	3
82	BACS40A13-60	. SHIM, (DELETED BY SB 2651). (OPTIONAL BACS40B13-60 (DELETED BY SB 2651))	0103	AR
82	BACS40B13-60	. SHIM, (DELETED BY SB 2651). (OPTIONAL TO BACS40A13-60 (DELETED BY SB 2651))	0103	AR
83	BACJ40K5A5A6	. JUMPER, (DELETED BY SB 2651).	0103	1
		ATTACHING PARTS		
	NAS333CPA4	. BOLT, (DELETED BY SB 2651).	0103	1
	NAS679A3W	. NUT, (DELETED BY SB 2651)	0103	1
		-------*-------		
84	65-18483-21	. FAIRING ASSY, LEADING EDGE SLAT NOSE (DELETED BY SB 2651) (LH ONLY)	0103	1
84	65-18483-22	. FAIRING ASSY, LEADING EDGE SLAT NOSE (DELETED BY SB 2651) (RH ONLY)	0103	1
86	69-24938-1	. . FITTING ASSY, LEADING EDGE SLAT NOSE FAIRING ATTACH (USED ON 65-18483-21 AND -22)	0103	1
86A	69-24938-1651	. . FITTING ASSY, LEADING EDGE SLAT NOSE FAIRING ATTACH (USED ON 65-18483-21)	0103	1
86A	69-24938-1652	. . FITTING ASSY, LEADING EDGE SLAT NOSE FAIRING ATTACH (USED ON 65-18483-22)	0103	1
		ATTACHING PARTS		
	BACB30EL3-3	. . BOLT.	0103	4
	NAS679A3W	. . NUT	0103	4
		-------*-------		
87	10-60516-104	. . . BUSHING, PRESS FIT STRUCTURAL (USED ON. 69-24938-1)	0103	2
87	10-60516-104	. . . BUSHING, PRESS FIT STRUCTURAL (ADDED BY SB 1753) (USED ON 69-24938-1)	0103	2
88	69-24938-2	. . . FITTING, (USED ON 69-24938-1 AND 1-79771-4)	0103	1
89	65-18483-17	. . FAIRING, (USED ON 69-18483-21).	0103	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
6 89	65-18483-18	. . FAIRING, (USED ON 69-18483-22).	0103	1
90	65-18426-1653	. SLAT ASSY, FRONT SPAR STATION 710.06 TO 745.06. . . . INBOARD WING (LH ONLY) (SEE FIG. 8A) (OPTIONAL 65-14826-15)	0450	1
90	65-18426-15	. SLAT ASSY, FRONT SPAR STATION 710.06 TO 745.06. . . . INBOARD WING (LH ONLY) (SEE FIG. 8A) (OPTIONAL TO 65-18426-1653)	0450	1
90	65-18426-11	. SLAT ASSY, (DELETED BY SB 2651) (LH ONLY) (SEE FIG. 8) .	0103	1
90	65-18426-1653	. SLAT ASSY, (ADDED BY SB 2651) (LH ONLY) (SEE FIG. 8A)	0103	1
90	65-18426-21A	. SLAT ASSY, FRONT SPAR STATION 710.06 TO 745.06. . . . INBOARD WING (LH ONLY) (SEE FIG. 8A)	5199	1
90	65-18426-1654	. SLAT ASSY, FRONT SPAR STATION 710.06 TO 745.06. . . . INBOARD WING (RH ONLY) (SEE FIG. 8A) (OPTIONAL 65-18426-16)	0450	1
90	65-18426-16	. SLAT ASSY, FRONT SPAR STATION 710.06 TO 745.06. . . . INBOARD WING (RH ONLY) (SEE FIG. 8A) (OPTIONAL TO 65-18426-1654)	0450	1
90	65-18426-22A	. SLAT ASSY, FRONT SPAR STATION 710.06 TO 745.06. . . . INBOARD WING (RH ONLY) (SEE FIG. 8A)	5199	1
90	65-18426-12	. SLAT ASSY, (DELETED BY SB 2651) (RH ONLY) (SEE FIG. 8) .	0103	1
90	65-18426-1654	. SLAT ASSY, (ADDED BY SB 2651) (RH ONLY) (SEE FIG. 8A)	0103	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

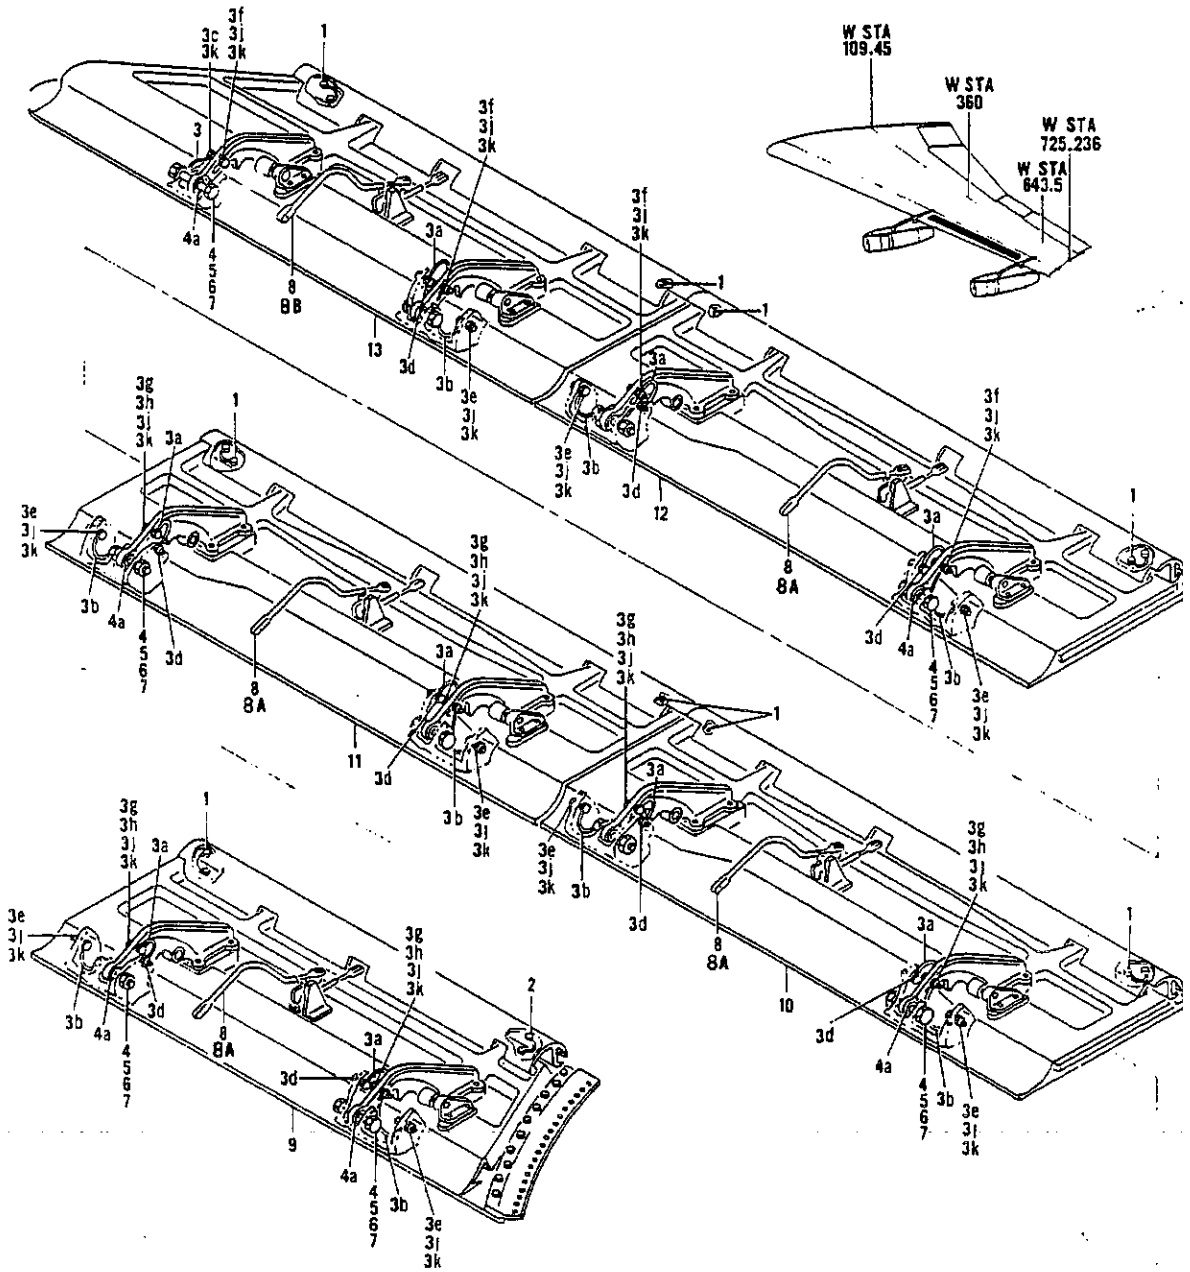


FIGURE 7 SLAT INSTL, INBOARD WING LEADING EDGE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	7	65-18183-1	SLAT INSTL, INBOARD WING LEADING EDGE (LH) (SEE 57-4,	0150	RF
R			FIG. 7, ITEM 3 AND 57-4, FIG. 8, ITEM 31)		
R		65-18183-1	SLAT INSTL, INBOARD WING LEADING EDGE (LH) (VARIABLE.	5199	RF
R			DWG;65-18183-5003) (SEE 57-4, FIG. 8, ITEM 31)		
R		65-18183-2	SLAT INSTL, INBOARD WING LEADING EDGE (RH) (SEE 57-4,	0150	RF
R			FIG. 7, ITEM 3 AND 57-4, FIG. 8, ITEM 31)		
R		65-18183-2	SLAT INSTL, INBOARD WING LEADING EDGE (RH) (VARIABLE.	5199	RF
R			DWG;65-18183-5004) (SEE 57-4, FIG. 8, ITEM 31)		
	1	BACJ40K5A5A4	. JUMPER.		9
	2	BACJ40K5A5A5	. JUMPER.		1
			ATTACHING PARTS		
		BACB30ABP3-3	. BOLT.		10
		BACB30ABP3-4	. BOLT.		10
		AN960D10L	. WASHER.		20
		NAS1197-10	. WASHER.		20
		NAS679A3W	. NUT		20
			-------*-------		
	3	BACJ40K5A5A7	. JUMPER.		1
	3B	BACJ40K5A5A6	. JUMPER.		9
			ATTACHING PARTS		
	3C	AN3-7A	. BOLT.		1
	3E	AN3-7A	. BOLT.		9
	3F	AN3-11A	. BOLT.		4
	3G	AN3-5A	. BOLT.		6
	3H	AN960D10L	. WASHER.		6
	3J	AN960D10L	. WASHER.		45
	3J	AN960D10	. WASHER.		9
	3K	NAS679A3W	. NUT		20
	3K	NAS679A3W	. NUT		9
			-------*-------		
R	4	NAS1106-38DW	. BOLT, (OPTIONAL NAS1306-37DW WITH AN310-6).	0150	10
R	4	BACB30NE6D37	. BOLT.	5199	10
R			(OPTIONAL NAS1106-38DW)		
R	4	NAS1106-38DW	. BOLT.	5199	10
R			(OPTIONAL TO BACB30NE6D37)		
	4A	69-14580-4	. BUSHING, HINGE SUPPORT FITTING.		10
	5	AN960D616L	. WASHER.		AR
	6	AN960D616	. WASHER.		10
	7	AN320-6	. NUT, (USED WITH NAS1106-38DW, BACB30NE6D37)		10
	8	65-20863-3	. LINK INSTL, SLAT MECHANISM (LH ONLY) (SEE 27-15, FIG.	0103	5
			3)		
	8	65-20863-4	. LINK INSTL, SLAT MECHANISM (RH ONLY) (SEE 27-15, FIG.	0103	5
			3)		
	8A	65-20863-7	. LINK INSTL, SLAT MECHANISM (SEE 27-15, FIG. 3A)	0499	4
	8B	65-20863-7	. LINK INSTL, SLAT MECHANISM (SEE 25-15, FIG. 3A)	0499	1
R	9	65-18785-7	. SLAT ASSY, FRONT SPAR STATION 619.76 TO NACELLE	0450	1
R			(LH ONLY) (DELETED BY SB 2956) (SEE FIG. 9)		
	9	65-18785-5	. SLAT ASSY, FRONT SPAR STATION 619.76 TO NACELLE	0103	1
			(LH ONLY) (DELETED BY SB 2956) (SEE FIG. 9)		
R	9	65-18785-9	. SLAT ASSY, FRONT SPAR STATION 619.76 TO NACELLE	0150	1
R			(ADDED BY SB 2956) (LH ONLY) (SEE FIG. 9)		
R	9	65-18785-11A	. SLAT ASSY, FRONT SPAR STATION 619.76 TO NACELLE	5199	1
R			(LH ONLY) (SEE FIG. 9)		
R	9	65-18785-12A	. SLAT ASSY, FRONT SPAR STATION 619.76 TO NACELLE	5199	1
R			(RH ONLY) (SEE FIG. 9)		
	9	65-18785-6	. SLAT ASSY, FRONT SPAR STATION 619.76 TO NACELLE	0103	1
			(RH ONLY) (DELETED BY SB 2956) (SEE FIG. 9)		
R	9	65-18785-8	. SLAT ASSY, FRONT SPAR STATION 619.76 TO NACELLE	0450	1
R			(RH ONLY) (DELETED BY SB 2956) (SEE FIG. 9)		
R	9	65-18785-10	. SLAT ASSY, FRONT SPAR STATION 619.76 TO NACELLE	0150	1
R			(ADDED BY SB 2956) (RH ONLY) (SEE FIG. 9)		
R	10	65-18784-19	. SLAT ASSY, (LH ONLY) (DELETED BY SB 2956) (SEE.	0450	1
R			FIG. 10)		
R	10	65-18784-25	. SLAT ASSY, CENTER (ADDED BY SB 2956) (LH ONLY) (SEE	0150	1
R			FIG. 10)		
R	10	65-18784-31A	. SLAT ASSY, (LH ONLY) (SEE FIG. 10).	5199	1
	10	65-18784-13	. SLAT ASSY, (LH ONLY) (DELETED BY SB 2956) (SEE.	0103	1
			FIG. 10)		
R	10	65-18784-32A	. SLAT ASSY, (RH ONLY) (SEE FIG. 10).	5199	1
	10	65-18784-14	. SLAT ASSY, (RH ONLY) (DELETED BY SB 2956) (SEE.	0103	1
			FIG. 10)		
R	10	65-18784-20	. SLAT ASSY, (RH ONLY) (DELETED BY SB 2956) (SEE.	0450	1
R			FIG. 10)		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R	7 10	65-18784-26	. SLAT ASSY, (RH ONLY) (ADDED BY SB 2956) (SEE FIG. 10)	0150	1
R R	11	65-18784-17	. SLAT ASSY, (LH ONLY) (DELETED BY SB 2956) (SEE FIG. 10) . . .	0450	1
	11	65-18784-11	. SLAT ASSY, (LH ONLY) (DELETED BY SB 2956) (SEE FIG. 10) . . .	0103	1
R	11	65-18784-29A	. SLAT ASSY, (LH ONLY) (SEE FIG. 10).	5199	1
R R	11	65-18784-23	. SLAT ASSY, CENTER (ADDED BY SB 2956) (LH ONLY) (SEE FIG. 10) .	0150	1
R	11	65-18784-30A	. SLAT ASSY, (RH ONLY) (SEE FIG. 10).	5199	1
	11	65-18784-12	. SLAT ASSY, (RH ONLY) (DELETED BY SB 2956) (SEE FIG. 10) . . .	0103	1
R R	11	65-18784-18	. SLAT ASSY, (RH ONLY) (DELETED BY SB 2956) (SEE FIG. 10) . . .	0450	1
R R	11	65-18784-24	. SLAT ASSY, (RH ONLY) (ADDED BY SB 2956) (SEE FIG. 10)	0150	1
	12	65-18784-9	. SLAT ASSY, (LH ONLY) (DELETED BY SB 2956) (SEE FIG. 10) . . .	0103	1
R R	12	65-18784-15	. SLAT ASSY, (LH ONLY) (DELETED BY SB 2956) (SEE FIG. 10) . . .	0450	1
R R	12	65-18784-21	. SLAT ASSY, CENTER (ADDED BY SB 2956) (LH ONLY) (SEE FIG. 10) .	0150	1
R	12	65-18784-27A	. SLAT ASSY, (LH ONLY) (SEE FIG. 10).	5199	1
	12	65-18784-10	. SLAT ASSY, CENTER (RH ONLY) (DELETED BY SB 2956) (SEE FIG. 10)	0103	1
R R	12	65-18784-16	. SLAT ASSY, (RH ONLY) (DELETED BY SB 2956) (SEE FIG. 10) . . .	0450	1
R R	12	65-18784-22	. SLAT ASSY, CENTER (ADDED BY SB 2956) (RH ONLY) (SEE FIG. 10) .	0150	1
R	12	65-18784-28A	. SLAT ASSY, (RH ONLY) (SEE FIG. 10).	5199	1
R R	13	65-18783-11A	. SLAT ASSY, FRONT SPAR STATION 463.22 (LH ONLY) (SEE FIG. 11) .	5199	1
	13	65-18783-5	ISLAT ASSY, NACELLE TO FRONT SPAR STATION 463.22 . . . (LH ONLY) (DELETED BY SB 2956) (SEE FIG. 11)	0103	1
R R	13	65-18783-7	. SLAT ASSY, FRONT SPAR STATION 463.22. . . . . (LH ONLY) (DELETED BY SB 2956) (SEE FIG. 11)	0450	1
R R	13	65-18783-9	. SLAT ASSY, NACELLE TO FRONT SPAR STATION 463.22 . . . (ADDED BY SB 2956) (LH ONLY) (SEE FIG. 11)	0150	1
	13	65-18783-6	. SLAT ASSY, NACELLE TO FRONT SPAR STATION 463.22 . . . (RH ONLY) (DELETED BY SB 2956) (SEE FIG. 11)	0103	1
R R	13	65-18783-8	. SLAT ASSY, NACELLE TO FRONT SPAR STATION 463.22 . . . (RH ONLY) (DELETED BY SB 2956) (SEE FIG. 11)	0450	1
R R	13	65-18783-10	. SLAT ASSY, NACELLE TO FRONT SPAR STATION 463.22 . . . (ADDED BY SB 2956) (RH ONLY) (SEE FIG. 11)	0150	1
R R	13	65-18783-12A	. SLAT ASSY, NACELLE TO FRONT SPAR STATION 463.22 . . . (RH ONLY) (SEE FIG. 11)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

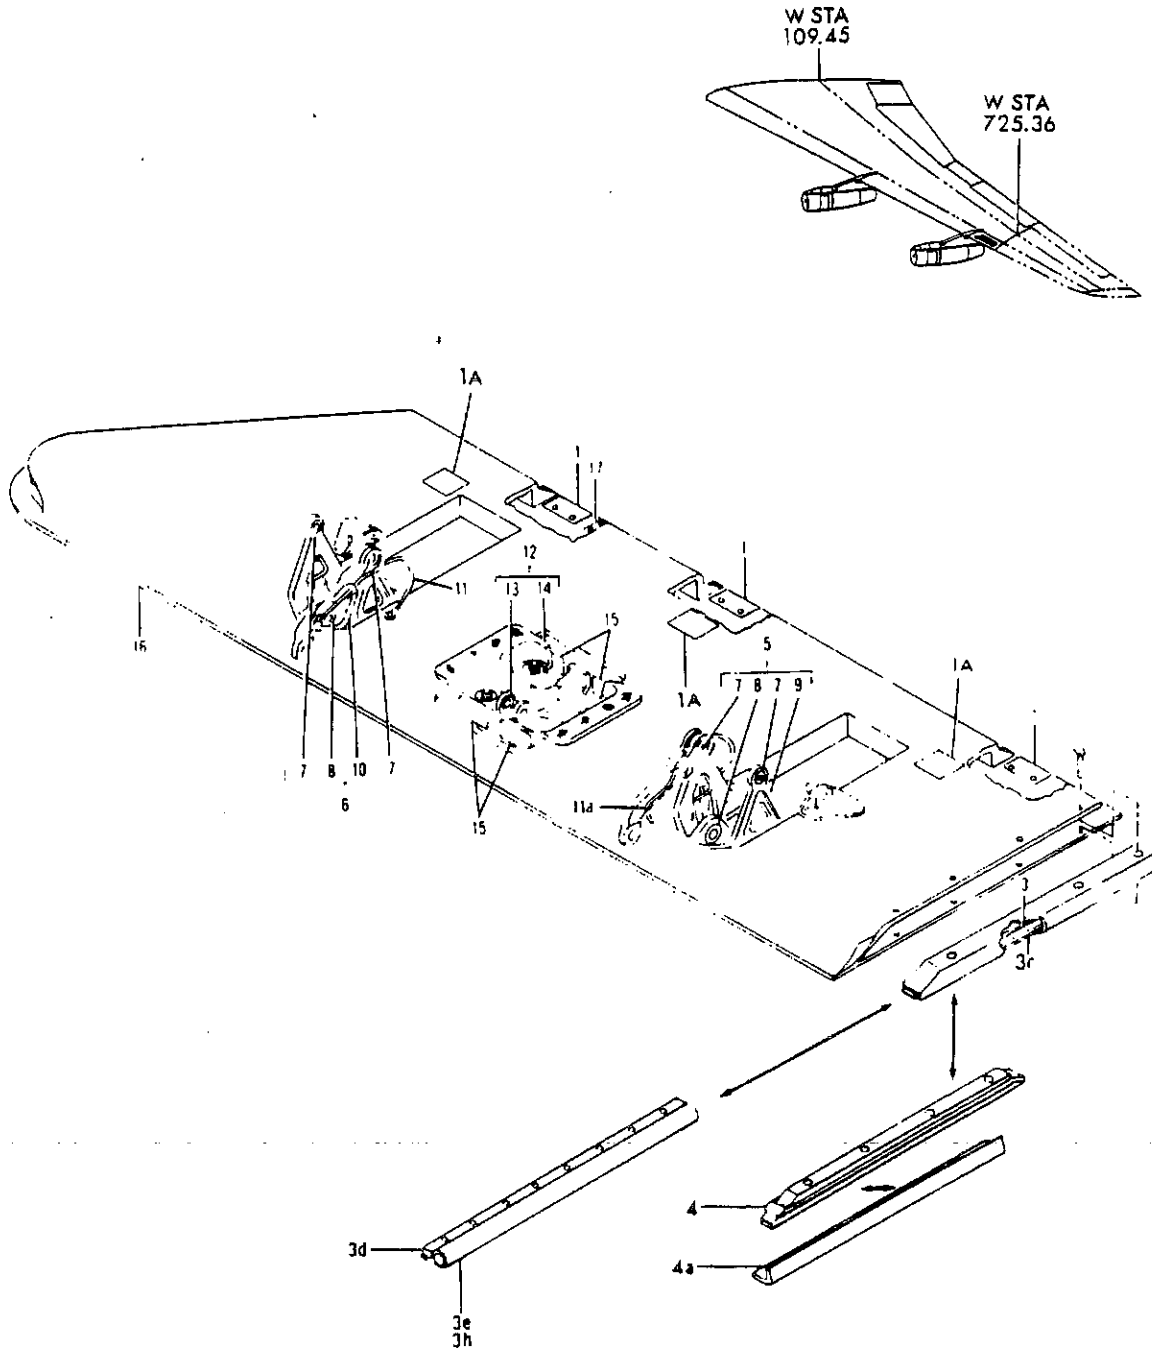


FIGURE 8. SLAT ASSY FRONT SPAR STATION 710.6 TO 745.06 INBOARD WING

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8	65-18426-11	SLAT ASSY, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING (LH) (DELETED BY SB 2651) (SEE FIG. 6, ITEM 90)	0103	RF
	65-18426-12	SLAT ASSY, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING (RH) (DELETED BY SB 2651) (SEE FIG. 6, ITEM 90)	0103	RF
1	66-13277-1	. PAD, LEADING EDGE SLAT STOP	0103	3
3C	BACS40A11-201	. SHIM. (OPTIONALS BACS40B11-201, BACS40C11-201, BACS40D11-201)	0103	AR
3C	BACS40C11-201	. SHIM. (OPTIONAL TO BACS40A11-201)	0103	AR
3C	BACS40B11-201	. SHIM. (OPTIONAL TO BACS40A11-201)	0103	AR
3C	BACS40D11-201	. SHIM. (OPTIONAL TO BACS40A11-201)	0103	AR
3D	69-34879-3	. RETAINER, OUTBOARD WING LEADING EDGE SLAT SEAL. (LH ONLY)	0103	1
3E	69-34879-1	. SEAL ASSY, LEADING EDGE SLAT OUTBOARD WING (LH ONLY)	0103	1
		ATTACHING PARTS		
	NAS517-2-10	. SCREW	0103	8
	NAS679A08W	. NUT	0103	8
		-------*-------		
3H	69-34879-4	. . SEAL, (EXTRUSION NO. BAC1530-44 X 14.4 IN. LG).	0103	1
4A	69-34879-1652	. STRIKER ASSY, LEADING EDGE SEAL	0103	1
		ATTACHING PARTS		
	NAS517-2-4	. SCREW	0103	7
		-------*-------		
5	65-18462-1	. FITTING ASSY, LEADING EDGE SLAT CARRIAGE ATTACH	0103	1
6	65-18462-2	. FITTING ASSY, LEADING EDGE SLAT CARRIAGE ATTACH	0103	1
		ATTACHING PARTS		
	BACB30ABP5-23A	. BOLT.	0103	4
	BACB30ABP5-24A	. BOLT.	0103	6
	BACB30ABP5-26A	. BOLT.	0103	2
	NAS1197-516L	. WASHER.	0103	14
	NAS679A5	. NUT	0103	12
	NAS335CPA10	. BOLT.	0103	2
	NAS335CPA11	. BOLT.	0103	8
	AN960-516L	. WASHER.	0103	10
	BACN10B-L5L	. NUT	0103	10
		-------*-------		
7	BACB10M11	. . BEARING	0103	2
8	BACB10M8	. . BEARING	0103	1
9	65-18462-3	. . FITTING, LEADING EDGE SLAT CARRIAGE ATTACH (USED ON 65-18462-1)	0103	1
10	65-18462-4	. . FITTING, LEADING EDGE SLAT CARRIAGE ATTACH (USED ON 65-18462-2)	0103	1
11	BACJ40K6A7A14	. JUMPER.	0103	1
11A	BACJ40K6A7A17	. JUMPER.	0103	1
		ATTACHING PARTS		
	NAS1104-3W	. BOLT.	0103	2
	AN960D416L	. WASHER.	0103	6
	NAS679A4W	. NUT	0103	2
		-------*-------		
12	65-18463-1	. FITTING ASSY, ACTUATOR ATTACH (DELETED BY SB 2956).	0103	1
12	65-18463-4	. FITTING ASSY, ACTUATOR ATTACH (ADDED BY SB 2956).	0103	1
		ATTACHING PARTS		
	BACB30ABP4-8A	. BOLT.	0103	6
	BACB30ABP4-20A	. BOLT.	0103	8
	AN960-416	. WASHER.	0103	6
	NAS1197-416L	. WASHER.	0103	8
	NAS679A4W	. NUT	0103	14
		-------*-------		
13	69-14435-1	. . BUSHING, (DELETED BY SB 2956)	0103	1
13	BACB28K6B26	. . BUSHING, (ADDED BY SB 2956)	0103	1
14	65-18463-2	. . FITTING, LEADING EDGE SLAT ACTUATOR ATTACH.	0103	1
15	66-13277-2	. COVER, LEADING EDGE SLAT CORE HOLE.	0103	4
16	65-18427-3	. SLAT, INBOARD WING LEADING EDGE (USED ON 65-18426-11) (OPTIONAL 65-18427-5)	0103	1
16	65-18427-4	. SLAT, INBOARD WING LEADING EDGE (USED ON 65-18426-12) (OPTIONAL 65-18427-6)	0103	1
16	65-18427-6	. SLAT, INBOARD WING LEADING EDGE (USED ON 65-18426-12) (OPTIONAL TO 65-18427-4)	0103	1
17	AN7510-2	. PLATE	0103	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8		ATTACHING PARTS		
	BACR15E157C4-10	. RIVET	0103	2
	BACR15E157C4-6	. RIVET	0103	2
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

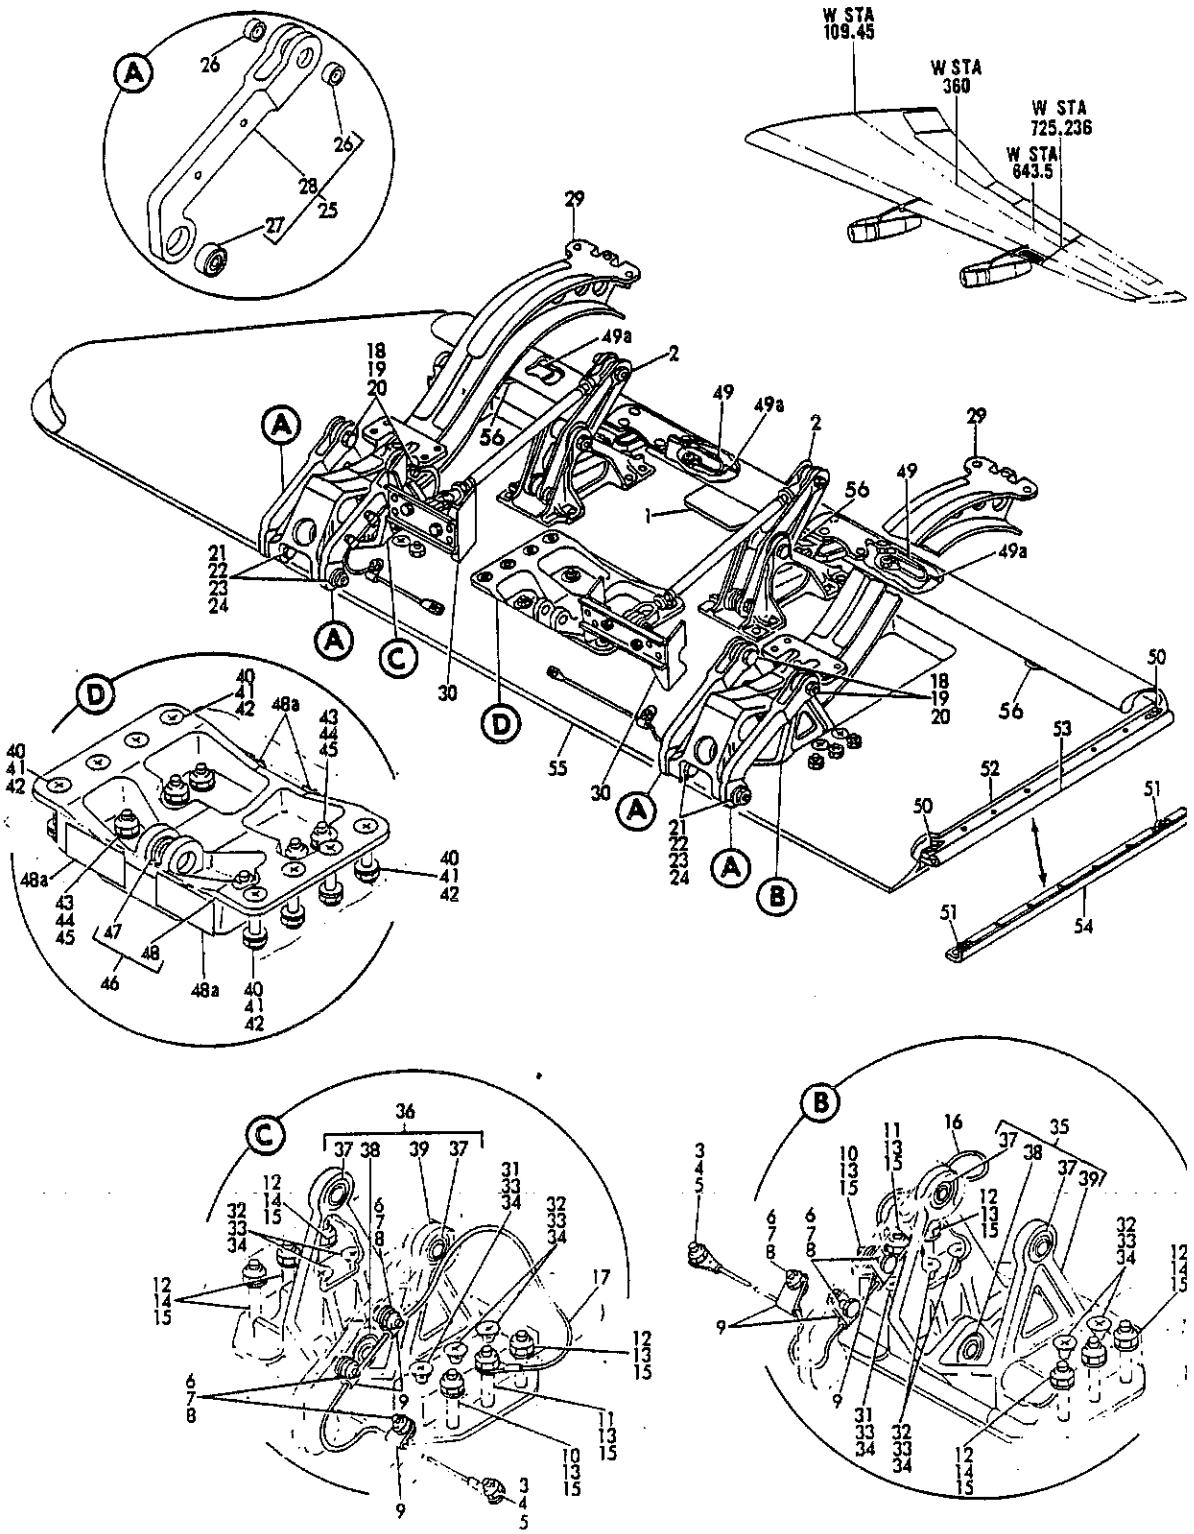


FIGURE 8A. SLAT ASSY, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8A	65-18426-1653	SLAT ASSY, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING (LH) (SEE FIG. 6, ITEM 90) (OPTIONAL 65-18426-15)	0450	RF
	65-18426-15	SLAT ASSY, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING (LH) (SEE FIG. 6, ITEM 90) (OPTIONAL TO 65-18426-1653)	0450	RF
	65-18426-1653	SLAT ASSY, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING (LH) (ADDED BY SB 2651) (SEE FIG. 6, ITEM 90)	0103	RF
	65-18426-21A	SLAT ASSY, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING (LH) (SEE FIG. 6, ITEM 90)	5199	RF
	65-18426-1654	SLAT ASSY, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING (RH) (SEE FIG. 6, ITEM 90) (OPTIONAL 65-18426-16)	0450	RF
	65-18426-16	SLAT ASSY, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING (RH) (SEE FIG. 6, ITEM 90) (OPTIONAL TO 65-18426-1654)	0450	RF
	65-18426-1654	SLAT ASSY, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING (RH) (ADDED BY SB 2651) (SEE FIG. 6, ITEM 90)	0103	RF
	65-18426-22A	SLAT ASSY, FRONT SPAR STATION 710.06 TO 745.06 INBOARD WING (RH) (SEE FIG. 6, ITEM 90)	5199	RF
1	MS27253-2	. PLATE, IDENTIFICATION		1
		ATTACHING PARTS		
	BACR15E157C	. RIVET		4
		-------*-------		
2	65-64825-3	. MECHANISM INSTL, NOSE FAIRING (LH ONLY) (SEE 27-15, FIG. 13) .	0499	2
2	65-64825-3	. MECHANISM INSTL, NOSE FAIRING (LH ONLY) (ADDED BY SB 2651) (SEE 27-15, FIG. 13)	0103	2
2	65-64825-4	. MECHANISM INSTL, NOSE FAIRING (RH ONLY) (SEE 27-15, FIG. 13) .	0499	2
2	65-64825-4	. MECHANISM INSTL, NOSE FAIRING (RH ONLY) (ADDED BY SB 2651) (SEE 27-15, FIG. 13)	0103	2
3	NAS1104-3W	. SCREW		2
4	AN960D416L	. WASHER.		6
5	NAS679A4W	. NUT		2
6	NAS1103-4W	. BOLT.		6
7	AN960PD10L	. WASHER.		12
8	NAS679A3W	. NUT		6
9	BACC10DK3	. CLAMP		6
10	BACB30LU5-23	. BOLT.		2
11	BACB30LU5-25	. BOLT.		2
12	BACB30LU5-24	. BOLT.		8
13	NAS1197-516	. WASHER.		6
14	NAS1197-516L	. WASHER.		6
15	NAS679A5	. NUT		12
16	BACJ40K6A7A17	. JUMPER.		1
17	BACJ40K6A7A14	. JUMPER.		1
18	NAS1105-11D	. BOLT.		4
19	AN960-516	. WASHER.		8
20	AN320-5	. NUT		4
21	NAS1105-16D	. BOLT.		4
22	BACW10P16S	. WASHER.		4
23	AN960-516L	. WASHER.		4
24	AN320-5	. NUT		4
25	69-14434-5	. LINK ASSY, LEADING EDGE SLAT HINGE. . . . . (OPTIONAL 69-14434-11)	0150	4
25	69-14434-11	. LINK ASSY, LEADING EDGE SLAT HINGE. . . . . (OPTIONAL TO 69-14434-5)	0150	4
25	69-14434-11	. LINK ASSY, LEADING EDGE SLAT HINGE.	5199	4
26	66-9266-9	. . BUSHING		2
27	BACB10M11	. . BEARING		1
28	69-14434-7	. . LINK.		1
29	65-18649-2	. TRACK		2
30	65-64825-7	. CLIP INSTL, LEADING EDGE SLAT (LH ONLY)		2
30	65-64825-8	. CLIP INSTL, LEADING EDGE SLAT (RH ONLY)		2
31	BACB30LU5-10	. BOLT.		2
32	BACB30LU5-11	. BOLT.		8
33	AN960-516L	. WASHER.		10
34	BACN10B-L5L	. NUT		10
35	65-18462-1	. FITTING ASSY, LEADING EDGE SLAT CARRIAGE ATTACH . . . (OPTIONAL 65-18462-7)		1
35	65-18462-7	. FITTING ASSY, LEADING EDGE SLAT CARRIAGE ATTACH . . . (OPTIONAL TO 65-18462-1)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8A 36	65-18462-2	. FITTING ASSY, LEADING EDGE SLAT CARRIAGE ATTACH . . . (OPTIONAL 65-18462-8)		1
36	65-18462-8	. FITTING ASSY, LEADING EDGE SLAT CARRIAGE ATTACH . . . (OPTIONAL TO 65-18462-2)		1
37	BACB10M11	. . BEARING, (ONLY BS10ATC24 (V21335) APPROVED)	0150	2
37	MS21233-5	. . BEARING	5199	2
38	BACB10M8	. . BEARING, (ONLY BS12ATC26 (V21335) APPROVED)	0150	1
38	MS21233-6	. . BEARING	5199	1
39	65-18462-3	. . FITTING, (USED ON 65-18462-1)		1
39	65-18462-4	. . FITTING, (USED ON 65-18462-2)		1
39	65-18462-9	. . FITTING, (USED ON 65-18462-7)		1
39	65-18462-10	. . FITTING, (USED ON 65-18462-8)		1
40	BACB30LU4D20	. BOLT.		8
41	NAS1197-416L	. WASHER.		8
42	NAS679A4W	. NUT		8
43	BACB30LU4D9	. BOLT.		6
44	AN960416	. WASHER.		6
45	NAS679A4W	. NUT		6
46	65-18463-1	. FITTING ASSY, ACTUATOR ATTACH (DELETED BY SB 2956). .	0150	1
46	65-18463-4	. FITTING ASSY, ACTUATOR ATTACH (ADDED BY SB 2956). . .	0150	1
46	65-18463-5	. FITTING ASSY, ACTUATOR ATTACH	5199	1
47	69-14435-1	. . BUSHING, (DELETED BY SB 2956)	0150	1
47	BACB28X6B26	. . BUSHING	5199	1
47	BACB28X6B26	. . BUSHING, (ADDED BY SB 2956)	0150	1
48	65-18463-2	. . FITTING		1
48A	66-13277-2	. COVER, LEADING EDGE SLAT CORE HOLE.		4
49	BACJ40K5A5A5	. JUMPER.		2
49A	69-56267-1	. STOP, LEADING EDGE SLAT PAD . . . . . ATTACHING PARTS		3
	BACB30LU3-6	. LOCKBOLT.		6
	AN960PD10L	. WASHER.		6
	BACN10GW3	. NUT		6
		-------*-------		
50	BACB30LU2-10	. BOLT, (LH ONLY)		8
51	BACB30LU2-4	. BOLT, (RH ONLY)		7
52	69-34879-3	. RETAINER, SEAL (LH ONLY).		1
53	69-34879-1	. SEAL ASSY, (LH ONLY). . . . . (OPTIONAL TO 69-34879-7)	5199	1
53	69-34879-7	. SEAL ASSY, (LH ONLY). . . . . (OPTIONAL 69-34879-1)	5199	1
53	69-34879-1	. SEAL ASSY, (LH ONLY).	0150	1
54	69-34879-1652	. STRIKER ASSY, (RH ONLY)		1
55	65-18427-3	. SLAT, LEADING EDGE (LH ONLY). . . . . (OPTIONAL 65-18427-5)	0150	1
55	65-18427-5	. SLAT, LEADING EDGE (LH ONLY). . . . . (OPTIONAL TO 65-18427-3)	0150	1
55	65-18427-5A	. SLAT, LEADING EDGE (LH ONLY).	5199	1
55	65-18427-4	. SLAT, LEADING EDGE (RH ONLY). . . . . (OPTIONAL 65-18427-6)	0150	1
55	65-18427-6	. SLAT, LEADING EDGE (RH ONLY). . . . . (OPTIONAL TO 65-18427-4)	0150	1
55	65-18427-6A	. SLAT, LEADING EDGE (RH ONLY).	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

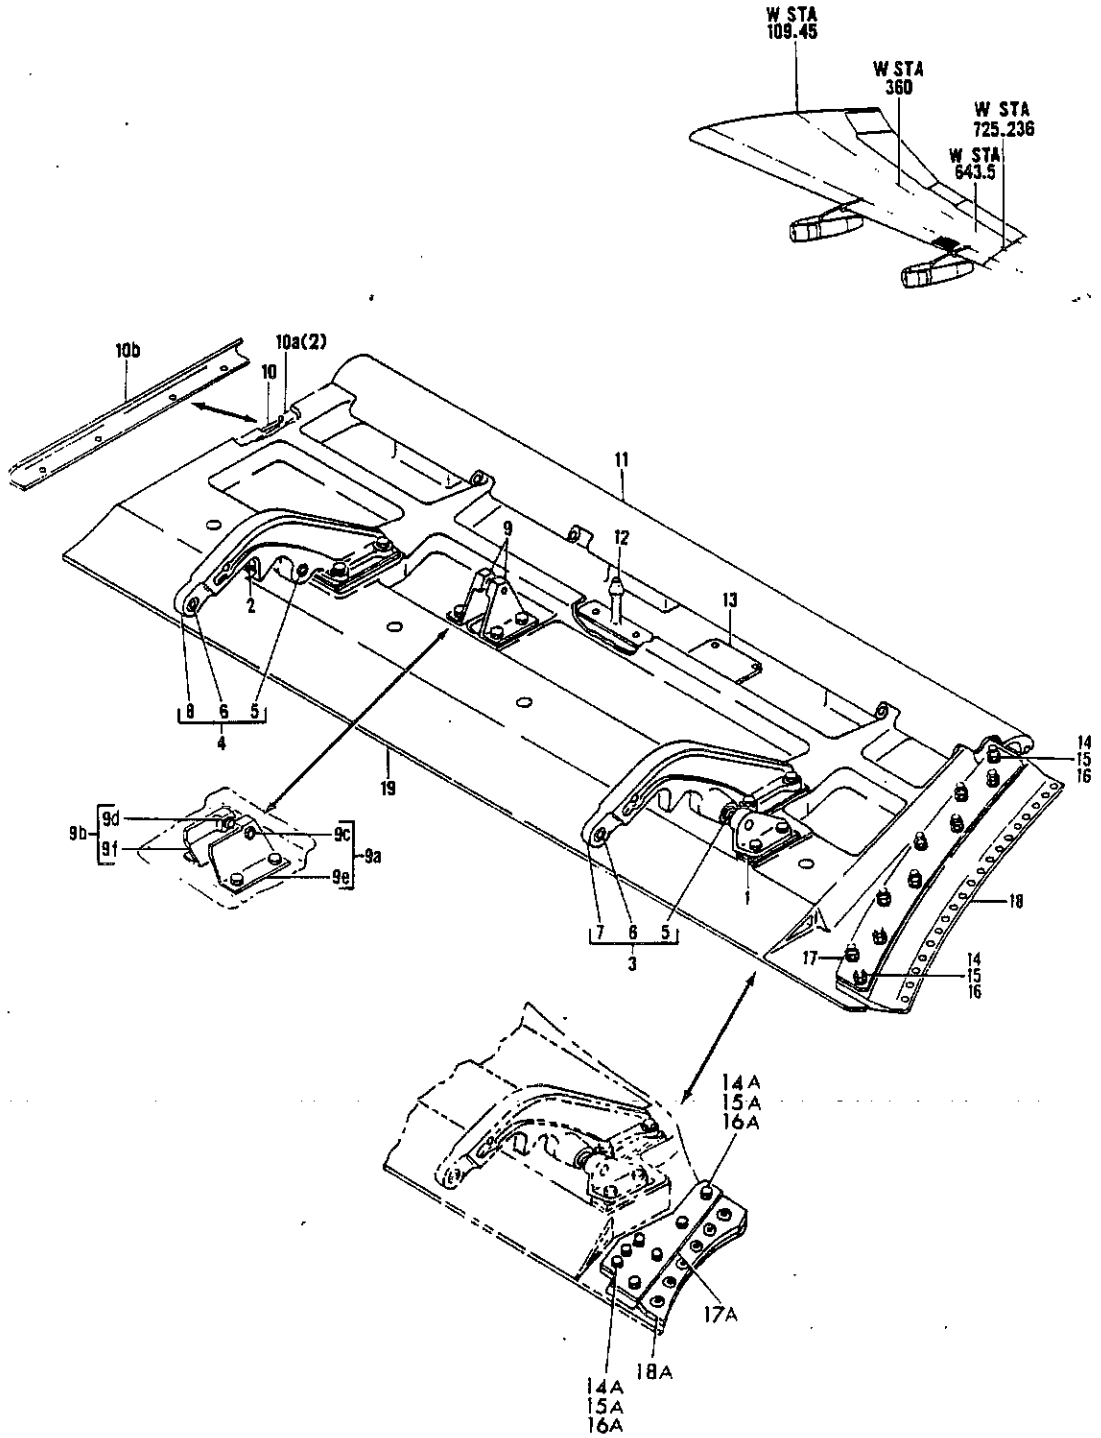


FIGURE 9. SLAT ASSY, FRONT SPAR STATION 619.76 TO NACELLE INBOARD WING LEADING EDGE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	9	65-18785-5	SLAT ASSY, FRONT SPAR STATION 619.76 TO NACELLE INBOARD WING LEADING EDGE (LH) (DELETED BY SB 2956) (SEE FIG. 7, ITEM 9)	0103	RF
R R R		65-18785-7	SLAT ASSY, FRONT SPAR STATION 619.76 TO NACELLE INBOARD WING LEADING EDGE (LH) (DELETED BY SB 2956) (SEE FIG. 7, ITEM 9)	0450	RF
R R R		65-18785-9	SLAT ASSY, FRONT SPAR STATION 619.76 TO NACELLE INBOARD WING LEADING EDGE (LH) (ADDED BY SB 2956) (SEE FIG. 7, ITEM 9)	0150	RF
R R		65-18785-11A	SLAT ASSY, FRONT SPAR STATION 619.76 TO NACELLE INBOARD WING LEADING EDGE (LH) (SEE FIG. 7, ITEM 9)	5199	RF
R R		65-18785-12A	SLAT ASSY, FRONT SPAR STATION 619.76 TO NACELLE INBOARD WING LEADING EDGE (RH) (SEE FIG. 7, ITEM 9)	5199	RF
		65-18785-6	SLAT ASSY, FRONT SPAR STATION 619.76 TO NACELLE INBOARD WING LEADING EDGE (RH) (DELETED BY SB 2956) (SEE FIG. 7, ITEM 9)	0103	RF
R R R		65-18785-8	SLAT ASSY, FRONT SPAR STATION 619.76 TO NACELLE INBOARD WING LEADING EDGE (RH) (DELETED BY SB 2956) (SEE FIG. 7, ITEM 9)	0450	RF
R R R		65-18785-10	SLAT ASSY, FRONT SPAR STATION 619.76 TO NACELLE INBOARD WING LEADING EDGE (RH) (ADDED BY SB 2956) (SEE FIG. 7, ITEM 9)	0150	RF
	1	65-18743-1	. SUPPORT, INBOARD WING LEADING EDGE SLAT HINGE (LH ONLY)		1
	1	65-18743-2	. SUPPORT, INBOARD WING LEADING EDGE SLAT HINGE (RH ONLY)		1
	2	65-18743-2	. SUPPORT, INBOARD WING LEADING EDGE SLAT HINGE (LH ONLY)		1
	2	65-18743-1	. SUPPORT, INBOARD WING LEADING EDGE SLAT HINGE (RH ONLY)		1
			ATTACHING PARTS		
		BACB30LU5-18	. BOLT, (USED WITH 65-18743-1).		2
		BACB30LU5-19	. BOLT, (USED WITH 65-18743-2).		2
		BACS40R11C28F	. SHIM.		AR
		AN960-516	. WASHER.		4
		BACN10JC3	. NUT, (USED WITH 65-18743-1)		2
		BACN10JC5	. NUT, (USED WITH 65-18743-2)		2
			-------*-------		
R	3	65-18732-27	. FITTING ASSY, HINGE (LH ONLY)	5199	1
R R R	3	65-18732-13	. FITTING ASSY, HINGE (DELETED BY SB 2956) (LH ONLY). (OPTIONAL 65-18732-21 (DELETED BY SB 2956))	0150	1
R R R	3	65-18732-21	. FITTING ASSY, HINGE (DELETED BY SB 2956) (LH ONLY). (OPTIONAL TO 65-18732-13 (DELETED BY SB 2956))	0150	1
R R	3	65-18732-27	. FITTING ASSY, HINGE (LH ONLY) (ADDED BY SB 2956).	0150	1
R R R	3	65-18732-14	. FITTING ASSY, HINGE (DELETED BY SB 2956) (RH ONLY). (OPTIONAL 65-18732-22 (DELETED BY SB 2956))	0150	1
R R R	3	65-18732-22	. FITTING ASSY, HINGE (DELETED BY SB 2956) (RH ONLY). (OPTIONAL TO 65-18732-14 (DELETED BY SB 2956))	0150	1
R	3	65-18732-28	. FITTING ASSY, HINGE (RH ONLY)	5199	1
R	3	65-18732-28	. FITTING ASSY, HINGE (RH ONLY) (ADDED BY SB 2956).	0150	1
R	4	65-18732-25	. FITTING ASSY, HINGE (RH ONLY) (ADDED BY SB 2956).	0150	1
R R R	4	65-18732-17	. FITTING ASSY, HINGE (RH ONLY) (DELETED BY SB 2956). (OPTIONAL TO 65-18732-9)	0150	1
R R R	4	65-18732-18	. FITTING ASSY, HINGE (LH ONLY) (DELETED BY SB 2956). (OPTIONAL TO 65-18732-10)	0150	1
R R R	4	65-18732-9	. FITTING ASSY, HINGE (DELETED BY SB 2956) (RH ONLY). (OPTIONAL 65-18732-17)	0150	1
R	4	65-18732-26	. FITTING ASSY, HINGE (LH ONLY) (ADDED BY SB 2956).	0150	1
R R R	4	65-18732-10	. FITTING ASSY, HINGE (DELETED BY SB 2956) (LH ONLY). (OPTIONAL 65-18732-18)	0150	1
			ATTACHING PARTS		
		BACB30LU5-18	. BOLT, (USED WITH 65-18732-13, -21, -27, -14, -22 AND -28)		4
		BACB30LU5-19	. BOLT, (USED WITH 65-18732-9, -17, -25, -10, -18 AND -26)		4
		BACS40R11C28F	. SHIM.		AR
		AN960-516	. WASHER.		8
		BACN10JC3	. NUT, (USED WITH 65-18732-13, -21, -27, -14, -22 AND -28)		4
		BACN10JC5	. NUT, (USED WITH 65-18732-9, -17, -25, -10, -18, 26, 65C20234-1 AND-2)		4
			-------*-------		
R R	5	NAS77A6-182P	. . BUSHING, (USED ON 65-18732-13, -21, -14 AND -22). (DELETED BY SB 2956)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	9 5	BACB28X6B182	. . BUSHING, (USED ON 65-18732-27 AND -28).	5199	1
R	5	BACB28X6B182	. . BUSHING, (USED ON 65-18732-13, -27, -14 AND -28). .	0150	1
R			(ADDED BY SB 2956)		
R	5	NAS77A6-170P	. . BUSHING, (USED ON 65-18732-9, -17, -10 AND -18) . .	0150	1
R			(DELETED BY SB 2956)		
R	5	BACB28X6B170	. . BUSHING, (USED ON 65-18732-9, -17, -10 AND -18) . .	0150	1
R			(ADDED BY SB 2956)		
R	6	10-60545-165	. . BEARING, (USED ON 65-18732-25, -26, -27, -28) . . .	5199	1
R			(OPTIONALS MS14104-6, 10-60545-165A)		
R	6	MS14104-6	. . BEARING, (USED ON 65-18732-25, -26, -27, -28) . . .	5199	1
R			(OPTIONAL TO BAC SPEC NO. 10-60545-165)		
R	6	10-60545-165A	. . BEARING, (USED ON 65-18732-25, -26, -27, -28) . . .	5199	1
R			(OPTIONAL TO BAC SPEC NO. 10-60545-165)		
R	6	BACB10M8	. . BEARING, (DELETED BY SB 2956)	0150	1
R	6	10-60545-165	. . BEARING, (ADDED BY SB 2956)	0150	1
	7	65-18732-15	. . FITTING, (USED ON 65-18732-13).	0103	1
R	7	65-18732-23	. . FITTING, (USED ON 65-18732-21 AND -27).	5199	1
	7	65-18732-16	. . FITTING, (USED ON 65-18732-14).	0103	1
R	7	65-18732-24	. . FITTING, (USED ON 65-18732-22 AND -28).	5199	1
R	7	65-18732-16	. . FITTING, (DELETED BY SB 2956) (USED ON 65-18732-14)	0150	1
R	7	65-18732-15	. . FITTING, (DELETED BY SB 2956) (USED ON 65-18732-13)	0150	1
R	7	65-18732-23	. . FITTING, (ADDED BY SB 2956) (USED ON 65-18732-21. .	0150	1
R			AND -27)		
R	7	65-18732-24	. . FITTING, (ADDED BY SB 2956) (USED ON 65-18732-22. .	0150	1
R			AND -28)		
R	8	65-18732-19	. . FITTING, (USED ON 65-18732-17 AND -25).	5199	1
R	8	65-18732-20	. . FITTING, (USED ON 65-18732-26 AND -18).	5199	1
R	8	65-18732-11	. . FITTING, (DELETED BY SB 2956) (USED ON 65-18732-9)	0150	1
R	8	65-18732-19	. . FITTING, (ADDED BY SB 2956) (USED ON 65-18732-17. .	0150	1
R			AND -25)		
R	8	65-18732-12	. . FITTING, (DELETED BY SB 2956) (USED ON 65-18732-10)	0150	1
R	8	65-18732-20	. . FITTING, (ADDED BY SB 2956) (USED ON 65-18732-18. .	0150	1
R			AND -26)		
R	9A	69-24799-1	. BRACKET ASSY, INBOARD WING SLAT FAIRING (USED ON. . .	0150	1
R			65-18785-5)		
R	9A	69-24799-2	. BRACKET ASSY, INBOARD WING SLAT FAIRING (USED ON. . .	0150	1
R			65-18785-6)		
R	9B	69-24799-3	. BRACKET ASSY, INBOARD WING SLAT FAIRING (USED ON. . .	0150	1
R			65-18785-5)		
R	9B	69-24799-4	. BRACKET ASSY, INBOARD WING SLAT FAIRING (USED ON. . .	0150	1
R			65-18785-6)		
			ATTACHING PARTS		
R		BACB30LU3-8	. BOLT, (USED ON 65-18785-5 AND -6)	0150	4
R		BACS40A16-52	. SHIM, (USED WITH 69-24799-1 AND -2)	0150	AR
R		BACS40A16-39	. SHIM, (USED WITH 69-24799-3 AND -4)	0150	AR
R		AN960D10	. WASHER, (USED ON 65-18785-5 AND -6)	0150	4
R		BACN10JC5	. NUT, (USED WITH 69-24799-1 AND -2).	0150	2
R		BACN10JC3	. NUT, (USED WITH 69-24799-3 AND -4).	0150	2
			-------*-------		
R	9C	10-60516-106	. . BUSHING, SELF LUBRICATED JOURNAL (USED ON	0150	1
R			69-24799-1 AND -2)		
R	9D	10-60516-107	. . BUSHING, SELF LUBRICATED JOURNAL (USED ON	0150	1
R			69-24799-3 AND -4)		
R	9E	69-24799-5	. . BRACKET, INBOARD WING SLAT FAIRING (USED ON	0150	1
R			69-24799-1)		
R	9E	69-24799-6	. . BRACKET, INBOARD WING SLAT FAIRING (USED ON	0150	1
R			69-24799-2)		
R	9F	69-24799-7	. . BRACKET, INBOARD WING SLAT FAIRING (USED ON	0150	1
R			69-24799-3)		
R	9F	69-24799-8	. . BRACKET, INBOARD WING SLAT FAIRING (USED ON	0150	1
R			69-24799-4)		
	10B	69-34883-2	. STRIKER ASSY, LEADING EDGE SLAT SEAL.		1
			ATTACHING PARTS		
		BACB30LU2-4	. BOLT.		4
			-------*-------		
R	11	65-18758-43	. FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (USED .	0150	1
R			ON 65-18785-5) (SEE FIG. 12)		
R	11	65-18758-44	. FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (USED .	0150	1
R			ON 65-18785-6) (SEE FIG. 12)		
	11	65-64580-9	. FAIRING INSTL, (USED ON 65-18785-7, -9, -11, -13) . .	0499	1
			SEE FIG. 13A)		
	11	65-64580-10	. FAIRING INSTL, (USED ON 65-18785-8, -10, -12, -14). .	0499	1
			(SEE FIG. 13A)		
	13	MS27253-2	. PLATE		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	9		ATTACHING PARTS		
		MS20426B3	. RIVET		4
			-------*-------		
	14	BACB30LU3-6	. BOLT		10
	15	AN960D10	. WASHER		10
	16	BACN10JC3	. NUT		10
	17	69-17394-1	. RETAINER, LEADING EDGE SLAT SEAL		1
	18	69-17285-7	. SEAL, LEADING EDGE SLAT (LH ONLY)		1
	18	69-17285-8	. SEAL, LEADING EDGE SLAT (RH ONLY)		1
	19	65-18963-3	. SLAT, (LH ONLY)	0103	1
R	19	65-18963-7A	. SLAT (LH ONLY)	5199	1
	19	65-18963-4	. SLAT, (RH ONLY)	0103	1
R	19	65-18963-8A	. SLAT, (RH)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

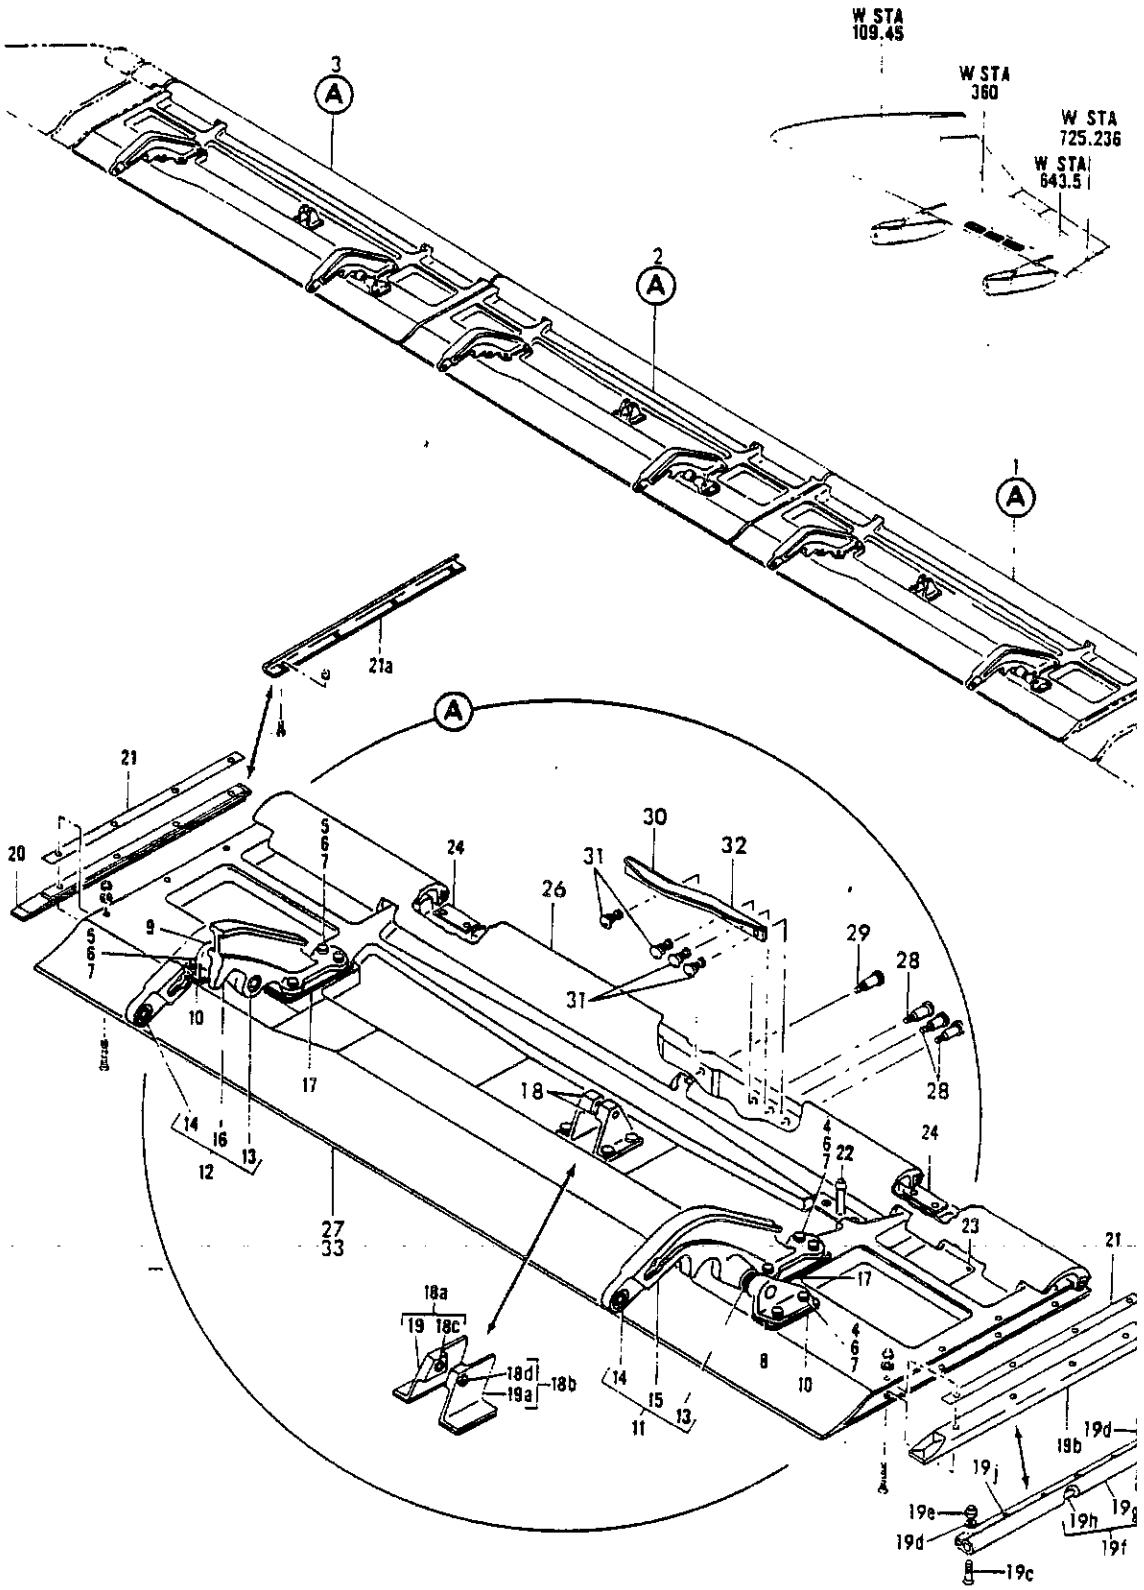


FIGURE 10. SLAT ASSY INBOARD WING LEADING EDGE CENTER

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	10 1	65-18784-13	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (DELETED BY SB 2956) (LH) (SEE FIG. 7, ITEM 10)	0103	RF
R R	1	65-18784-19	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (LH). . . . (DELETED BY SB 2956) (SEE FIG. 7, ITEM 10)	0450	RF
R R	1	65-18784-25	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (LH). . . . (ADDED BY SB 2956) (SEE FIG. 7, ITEM 10)	0150	RF
R R	1	65-18784-31A	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (LH) (SEE . FIG. 7, ITEM 10)	5199	RF
	1	65-18784-14	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (RH). . . . (DELETED BY SB 2956) (SEE FIG. 7, ITEM 10)	0103	RF
R R	1	65-18784-20	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (RH). . . . (DELETED BY SB 2956) (SEE FIG. 7, ITEM 10)	0450	RF
R R	1	65-18784-26	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (RH). . . . (ADDED BY SB 2956) (SEE FIG. 7, ITEM 10)	0150	RF
R R	1	65-18784-32A	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (RH) (SEE . FIG. 7, ITEM 10)	5199	RF
	2	65-18784-11	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (LH). . . . (DELETED BY SB 2956) (SEE FIG. 7, ITEM 11)	0103	RF
R R	2	65-18784-23	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (LH). . . . (ADDED BY SB 2956) (SEE FIG. 7, ITEM 11)	0150	RF
R R	2	65-18784-29A	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (LH) (SEE . FIG. 7, ITEM 11)	5199	RF
R R	2	65-18784-17	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (LH). . . . (DELETED BY SB 2956) (SEE FIG. 7, ITEM 11)	0450	RF
	2	65-18784-12	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (RH). . . . (DELETED BY SB 2956) (SEE FIG. 7, ITEM 11)	0103	RF
R R	2	65-18784-18	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (RH). . . . (DELETED BY SB 2956) (SEE FIG. 7, ITEM 11)	0450	RF
R R	2	65-18784-30A	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (RH) (SEE . FIG. 7, ITEM 11)	5199	RF
R R	2	65-18784-24	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (RH). . . . (ADDED BY SB 2956) (SEE FIG. 7, ITEM 11)	0150	RF
	3	65-18784-9	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (LH). . . . (DELETED BY SB 2956) (SEE FIG. 7, ITEM 12)	0103	RF
R R	3	65-18784-15	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (LH). . . . (DELETED BY SB 2956) (SEE FIG. 7, ITEM 12)	0450	RF
R R	3	65-18784-21	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (LH). . . . (ADDED BY SB 2956) (SEE FIG. 7, ITEM 12)	0150	RF
R R	3	65-18784-27A	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (LH) (SEE . FIG. 7, ITEM 12)	5199	RF
	3	65-18784-10	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (RH). . . . (DELETED BY SB 2956) (SEE FIG. 7, ITEM 12)	0103	RF
R R	3	65-18784-16	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (RH). . . . (DELETED BY SB 2956) (SEE FIG. 7, ITEM 12)	0450	RF
R R	3	65-18784-22	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (RH). . . . (ADDED BY SB 2956) (SEE FIG. 7, ITEM 12)	0150	RF
R R	3	65-18784-28A	SLAT ASSY, INBOARD WING LEADING EDGE CENTER (RH) (SEE . FIG. 7, ITEM 12)	5199	RF
	4	BACB30LU5-22	. BOLT, (USED ON 65-18784-5, -13, -6, -14, -19, -20,. . -25, -26, -31, -32, -37 AND -38)		6
	4	BACB30LU5-23	. BOLT, (USED ON 65-18784-3, -11, -4, -12, -17, -18,. . -23, -24, -29, -30, -35 AND -36)		6
	4	BACB30LU5-21	. BOLT, (USED ON 65-18784-1, -9, -2, -10, -15, -16, . . -21, -22, -27, -28, -33 AND -34)		6
	5	BACB30LU5-23	. BOLT, (USED ON 65-18784-5, -13, -6, -14, -19, -20,. . -25, -26, -31, -32, -37 AND -38)		6
	5	BACB30LU5-24	. BOLT, (USED ON 65-18784-3, -11, -4, -12, -17, -18,. . -23, -24, -29, -30, -35 AND -36)		6
	5	BACB30LU5-22	. BOLT, (USED ON 65-18784-1, -9, -2, -10, -15, -16, . . -21, -22, -27, -28, -33 AND -34)		6
	6	AN960-516	. WASHER.		24
	7	BACN10JC5	. NUT		24
	8	65-18743-1	. SUPPORT, INBOARD SLAT WING LEADING EDGE HINGE (LH . . ONLY)		1
	8	65-18743-2	. SUPPORT, INBOARD SLAT WING LEADING EDGE HINGE (RH . . ONLY)		1
	9	65-18743-2	. SUPPORT, INBOARD SLAT WING LEADING EDGE HINGE (LH . . ONLY)		1
	9	65-18743-1	. SUPPORT, INBOARD SLAT WING LEADING EDGE HINGE (RH . . ONLY)		1
	10	BACS40B18-44	. SHIM.		AR
R R	11	65-18732-9	. FITTING ASSY, HINGE (DELETED BY SB 2956) (USED ON . . 65-18784-11, -13, -17, -19)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R	10 11	65-18732-25	. FITTING ASSY, HINGE (ADDED BY SB 2956) (USED ON . . . 65-18784-23 AND -25)	0150	1
R	11	65-18734-13	. FITTING ASSY, HINGE (ADDED BY SB 2956) (USED ON . . . 65-18784-21)	0150	1
R	11	65-18734-13	. FITTING ASSY, HINGE (REPLACES 65-18734-5 AND -9 BY SB 2956) (USED ON 65-18784-13, -11, -9)	0150	1
R	11	65-18732-10	. FITTING ASSY, HINGE (DELETED BY SB 2956) (USED ON . . 65-18784-14, -12, -18 AND -20)	0150	1
R	11	65-18732-26	. FITTING ASSY, HINGE (ADDED BY SB 2956) (USED ON . . . 65-18784-24 AND -26)	0150	1
R	11	65-18734-14	. FITTING ASSY, HINGE (ADDED BY SB 2956) (USED ON . . . 65-18784-22)	0150	1
R	11	65-18734-14	. FITTING ASSY, HINGE (REPLACES 65-18734-6 AND -10 BY . SB 2956) (USED ON 65-18784-14, -12, -10)	0150	1
R	11	65-18734-13	. FITTING ASSY, HINGE (USED ON 65-18784-21, -27 AND . . -33)	5199	1
R	11	65-18734-14	. FITTING ASSY, HINGE (USED ON 65-18784-22, -28 AND . . -34)	5199	1
R	11	65-18732-25	. FITTING ASSY, HINGE (USED ON 65-18784-25, -23, -29, . -31, -37 AND -38)	5199	1
R	11	65-18732-26	. FITTING ASSY, HINGE (USED ON 65-18784-26, -24, -30, . -32, -35 AND -36)	5199	1
R	12	65-18732-10	. FITTING ASSY, HINGE (DELETED BY SB 2956) (USED ON . . 65-18784-13, -11, -17 AND -19)	0150	1
R	12	65-18734-13	. FITTING ASSY, HINGE (USED ON 65-18784-22, -28 AND . . -34)	5199	1
R	12	65-18734-14	. FITTING ASSY, HINGE (USED ON 65-18784-21, -27 AND . . -33)	5199	1
R	12	65-18732-25	. FITTING ASSY, HINGE (USED ON 65-18784-25, -23, -29, . -31, -37 AND -38)	5199	1
R	12	65-18732-26	. FITTING ASSY, HINGE (USED ON 65-18784-26, -24, -30, . -32, -35 AND -36)	5199	1
R	12	65-18734-13	. FITTING ASSY, HINGE (ADDED BY SB 2956) (USED ON . . . 65-18784-22)	0150	1
R	12	65-18734-14	. FITTING ASSY, HINGE (ADDED BY SB 2956) (USED ON . . . 65-18784-21)	0150	1
R	12	65-18732-25	. FITTING ASSY, HINGE (ADDED BY SB 2956) (USED ON . . . 65-18784-23 AND 25)	0150	1
R	12	65-18732-26	. FITTING ASSY, HINGE (ADDED BY SB 2956) (USED ON . . . 65-18784-24 AND 26)	0150	1
R	13	BAC828X68170	. . BUSHING	5199	1
R	13	NAS77A6-170P	. . BUSHING, (DELETED BY SB 2956)	0150	1
R	13	BAC828X68170	. . BUSHING, (ADDED BY SB 2956)	0150	1
R	14	BAC810M8	. . BEARING, (DELETED BY SB 2956)	0150	1
R	14	10-60545-165	. . BEARING, (ADDED BY SB 2956) (USED ON 65-18732-25, . -26, 65-18734-13 AND -14)	0150	1
R	15	65-18732-19	. . FITTING, (USED ON 65-18732-17 AND -25).	5199	1
R	15	65-18734-11	. . FITTING, (USED ON 65-18734-9 AND -13)	5199	1
R	15	65-18732-11	. . FITTING, (DELETED BY SB 2956) (USED ON 65-18732-9)	0150	1
R	15	65-18732-19	. . FITTING, (ADDED BY SB 2956) (USED ON 65-18732-17. . AND -25)	0150	1
R	15	65-18734-7	. . FITTING, (DELETED BY SB 2956) (USED ON 65-18734-5)	0150	1
R	15	65-18734-11	. . FITTING, (ADDED BY SB 2956) (USED ON 65-18734-9 . . AND -13)	0150	1
R	16	65-18732-20	. . FITTING, (USED ON 65-18732-18 AND -26).	5199	1
R	16	65-18734-12	. . FITTING, (USED ON 65-18734-10 AND -14).	5199	1
R	16	65-18732-12	. . FITTING, (DELETED BY SB 2956) (USED ON 65-18732-10)	0150	1
R	16	65-18732-20	. . FITTING, (ADDED BY SB 2956) (USED ON 65-18732-18. . AND -26)	0150	1
R	16	65-18734-8	. . FITTING, (DELETED BY SB 2956) (USED ON 65-18734-6)	0150	1
R	16	65-18734-12	. . FITTING, (ADDED BY SB 2956) (USED ON 65-18734-10. . AND -14)	0150	1
R	17	BACS40B41-66	. SHIM, (USED ON 65-18784-5, -13, -6, -14, -3, -11, -4, -12, -17, -18, -19 AND -20)		4
	17	BACS40B41-76	. SHIM, (USED ON 65-18784-1, -9, -2, -10, -15 AND -16)		4
	18A	69-24799-1	. BRACKET ASSY, INBOARD WING LEADING EDGE SLAT. . . . . MECHANISM (USED ON 65-18784-13, -11 AND -9)	0103	1
	18A	69-24799-2	. BRACKET ASSY, INBOARD WING LEADING EDGE SLAT. . . . . MECHANISM (USED ON 65-18784-14, -12 AND -10)	0103	1
	18B	69-24799-3	. BRACKET ASSY, INBOARD WING LEADING EDGE SLAT. . . . . MECHANISM (USED ON 65-18784-13, -11 AND -9)	0103	1
	18B	69-24799-4	. BRACKET ASSY, INBOARD WING LEADING EDGE SLAT. . . . . MECHANISM (USED ON 65-18784-14, -12 AND -10)	0103	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	10 18C	10-60516-107	. . BUSHING, PRESS FIT STRUCTURAL (USED ON 69-24799-1 AND -2)	0103	1
	18D	10-60516-106	. . BUSHING, PRESS FIT STRUCTURAL (USED ON 69-24799-3 AND -4)	0103	1
	19	69-24799-5	. . BRACKET, INBOARD WING LEADING EDGE SLAT MECHANISM (USED ON 69-24799-1)	0103	1
	19	69-24799-6	. . BRACKET, INBOARD WING LEADING EDGE SLAT MECHANISM (USED ON 69-24799-2)	0103	1
	19A	69-24799-7	. . BRACKET, INBOARD WING LEADING EDGE SLAT MECHANISM (USED ON 69-24799-3)	0103	1
	19A	69-24799-8	. . BRACKET, INBOARD WING LEADING EDGE SLAT MECHANISM (USED ON 69-24799-4)	0103	1
			ATTACHING PARTS		
		NAS333CPA7	. . BOLT	0103	4
		AN960D10	. . WASHER	0103	4
		NAS679A3W	. . NUT	0103	4
			-------*-------		
	19C	BACB30LU2-8	. BOLT		6
	19D	AN960D8L	. WASHER		6
	19E	BACN10JC08	. NUT		6
R	19F	69-34883-1	. SEAL ASSY	0150	1
R	19F	69-34883-1	. SEAL ASSY, (ADDED BY SB 2702)	0150	1
R	19F	69-34883-1	. SEAL ASSY (OPTIONAL TO 69-34883-7)	5199	1
R	19F	69-34883-7	. SEAL ASSY (OPTIONAL 69-34883-1)	5199	1
R	19G	69-34883-4	. . SEAL, (ALTERED FROM EXTRUSION NO. BAC1530-44 X. . . 13.70 IN. LG)		1
	19H	69-34883-5	. . INSERT		1
	19J	69-34883-3	. RETAINER, LEADING EDGE SLAT SEAL		1
	21A	69-34883-2	. STRIKER ASSY		1
R	21A	69-34883-2	. STRIKER ASSY, (ADDED BY SB 2702)	0150	1
			ATTACHING PARTS		
		NAS517-2-4	. SCREW		4
			-------*-------		
	23	AN7510-2	. PLATE		1
			ATTACHING PARTS		
		MS2042683	. RIVET		4
			-------*-------		
	24	65-18784-7	. STRIP, INBOARD WING LEADING EDGE CENTER SLAT RUB. . .		2
			ATTACHING PARTS		
		MS20426B4	. RIVET		4
			-------*-------		
	26	65-18758-41	. FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (USED ON 65-18784-13) (SEE FIG. 13)	0103	1
	26	65-64580-7	. FAIRING INSTL, (USED ON 65-18784-19, -25, -31 AND . . -37) (SEE FIG. 13A)	0499	1
	26	65-18758-39	. FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (USED ON 65-18784-11) (SEE FIG. 13)	0103	1
	26	65-64580-5	. FAIRING INSTL, (USED ON 65-18784-17, -23, -29 AND . . -35) (SEE FIG. 13A)	0499	1
	26	65-18758-37	. FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (USED ON 65-18784-9) (SEE FIG. 13)	0103	1
	26	65-64580-3	. FAIRING INSTL, (USED ON 65-18784-15, -21, -27 AND . . -33) (SEE FIG. 13A)	0499	1
	26	65-18758-42	. FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (USED ON 65-18784-14) (SEE FIG. 13)	0103	1
	26	65-64580-8	. FAIRING INSTL, (USED ON 65-18784-20, -26, -32 AND . . -38) (SEE FIG. 13A)	0499	1
	26	65-18758-40	. FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (USED ON 65-18784-12) (SEE FIG. 13)	0103	1
	26	65-64580-6	. FAIRING INSTL, (USED ON 65-18784-18, -24, -30 AND . . -36) (SEE FIG. 13A)	0499	1
	26	65-18758-38	. FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (USED ON 65-18784-10) (SEE FIG. 13)	0103	1
	26	65-64580-4	. FAIRING INSTL, (USED ON 65-18784-16, -22, -28 AND . . -34) (SEE FIG. 13A)	0499	1
R	26	65-18758-37	. FAIRING INSTL, (DELETED BY SB 2702 AND SB 2982) (USED ON 65-18784-9) (SEE FIG. 13)	5199	1
R	26	65-18758-42	. FAIRING INSTL, (DELETED BY SB 2702 AND SB 2982) (USED ON 65-18784-14) (SEE FIG. 13)	5199	1
R	26	65-18758-40	. FAIRING INSTL, (DELETED BY SB 2702 AND SB 2982) (USED ON 65-18784-12) (SEE FIG. 13)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R	10 26	65-18758-38	. FAIRING INSTL, (DELETED BY SB 2702 AND SB 2982) (USED ON 65-18784-10) (SEE FIG. 13)	5199	1
	27	65-18962-11	. SLAT, (USED ON 65-18784-5 AND -13).	0103	1
	27	65-18962-9	. SLAT, (USED ON 65-18784-3 AND -11).	0103	1
	27	65-18962-7	. SLAT, (USED ON 65-18784-1 AND -9)	0103	1
	27	65-18962-12	. SLAT, (USED ON 65-18784-6 AND -14).	0103	1
	27	65-18962-10	. SLAT, (USED ON 65-18784-4 AND -12).	0103	1
	27	65-18962-8	. SLAT, (USED ON 65-18784-2 AND -10).	0103	1
R R	27	65-69896-3	. SLAT ASSY, (USED ON 65-18784-17 AND -23). . . . . (OPTIONAL TO 65-18962-15)	0450	1
R	27	65-18962-21	. SLAT, (USED ON 65-18784-23, -29 AND -35).	0450	1
R	27	65-18962-21A	. SLAT, (USED ON 65-18784-29A).	5199	1
R R	27	65-18962-15	. SLAT, (USED ON 65-18784-17 AND -23) . . . . . (OPTIONAL 65-69896-3)	0450	1
R R	27	65-69896-4	. SLAT ASSY, (USED ON 65-18784-18 AND -24). . . . . (OPTIONAL TO 65-18962-16)	0450	1
R	27	65-18962-22	. SLAT, (USED ON 65-18784-24, -30 AND -36).	0450	1
R	27	65-18962-22A	. SLAT, (USED ON 65-18784-30A).	5199	1
R R	27	65-18962-16	. SLAT, (USED ON 65-18784-18 AND -24) . . . . . (OPTIONAL 65-69896-4)	0450	1
R R	27	65-69896-1	. SLAT ASSY, (USED ON 65-18784-15 AND -21). . . . . (OPTIONAL TO 65-18962-13)	0450	1
R	27	65-18962-19	. SLAT, (USED ON 65-18784-21, -27 AND -33).	0450	1
R	27	65-18962-19A	. SLAT, (USED ON 65-18784-27A).	5199	1
R R	27	65-18962-13	. SLAT, (USED ON 65-18784-15 AND -21) . . . . . (OPTIONAL 65-69896-1)	0450	1
R R	27	65-69896-2	. SLAT ASSY, (USED ON 65-18784-16 AND -22). . . . . (OPTIONAL TO 65-18962-14)	0450	1
R R	27	65-18962-14	. SLAT, (USED ON 65-18784-16 AND -22) . . . . . (OPTIONAL 65-69896-2)	0450	1
R	27	65-18962-20	. SLAT, (USED ON 65-18784-22, -28 AND -34).	0450	1
R	27	65-18962-20A	. SLAT, (USED ON 65-18784-28A).	5199	1
R R	27	65-69896-5	. SLAT ASSY, (USED ON 65-18784-19 AND -25). . . . . (OPTIONAL TO 65-18962-17)	0450	1
R	27	65-18962-23	. SLAT, (USED ON 65-18784-25, -31 AND -37).	0450	1
R	27	65-18962-23A	. SLAT, (USED ON 65-18784-31A).	5199	1
R R	27	65-18962-17	. SLAT, (USED ON 65-18784-19 AND -25) . . . . . (OPTIONAL 65-69896-5)	0450	1
R R	27	65-69896-6	. SLAT ASSY, (USED ON 65-18784-20 AND -26). . . . . (OPTIONAL TO 65-18962-18)	0450	1
R R	27	65-18962-18	. SLAT, (USED ON 65-18784-20 AND -26) . . . . . (OPTIONAL 65-69896-6)	0450	1
R	27	65-18962-24	. SLAT, (USED ON 65-18784-26, -32 AND -38).	0450	1
R	27	65-18962-24A	. SLAT, (USED ON 65-18784-32A).	5199	1
	28	BACB30GZ6-4	. . FASTENER, (USED ON 65-69896-5, -6, -3, -4, -1 AND -2) .	0499	3
	29	BACB30GZ6-12	. . FASTENER, (USED ON 65-69896-5, -6, -3, -4, -1 AND -2) .	0499	1
	30	BACS40R6C-28F	. . SHIM, (USED ON 65-69896-5, -6, -3, -4, -1 AND -2) .	0499	AR
	31	BACC30P6	. . COLLAR, (USED ON 65-69896-5, -6, -3, -4, -1 AND -2)	0499	4
	32	69-55631-1	. . ANGLE, SPLICE (USED ON 65-69896-6, -3 AND -1) . . .	0499	1
	32	69-55631-2	. . ANGLE, SPLICE (USED ON 65-69896-5, -4 AND -2) . . .	0499	1
	33	65-69896-11	. . SLAT, (65-18962-11 REWORKED) (USED ON 65-69896-5) .	0499	1
	33	65-69896-12	. . SLAT, (65-18962-12 REWORKED) (USED ON 65-69896-6) .	0499	1
	33	65-69896-9	. . SLAT, (65-18962-9 REWORKED) (USED ON 65-69896-3). .	0499	1
	33	65-69896-10	. . SLAT, (65-18962-10 REWORKED) (USED ON 65-69896-4) .	0499	1
	33	65-69896-7	. . SLAT, (65-18962-7 REWORKED) (USED ON 65-69896-1). .	0499	1
	33	65-69896-8	. . SLAT, (65-18962-8 REWORKED) (USED ON 65-69896-2). .	0499	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

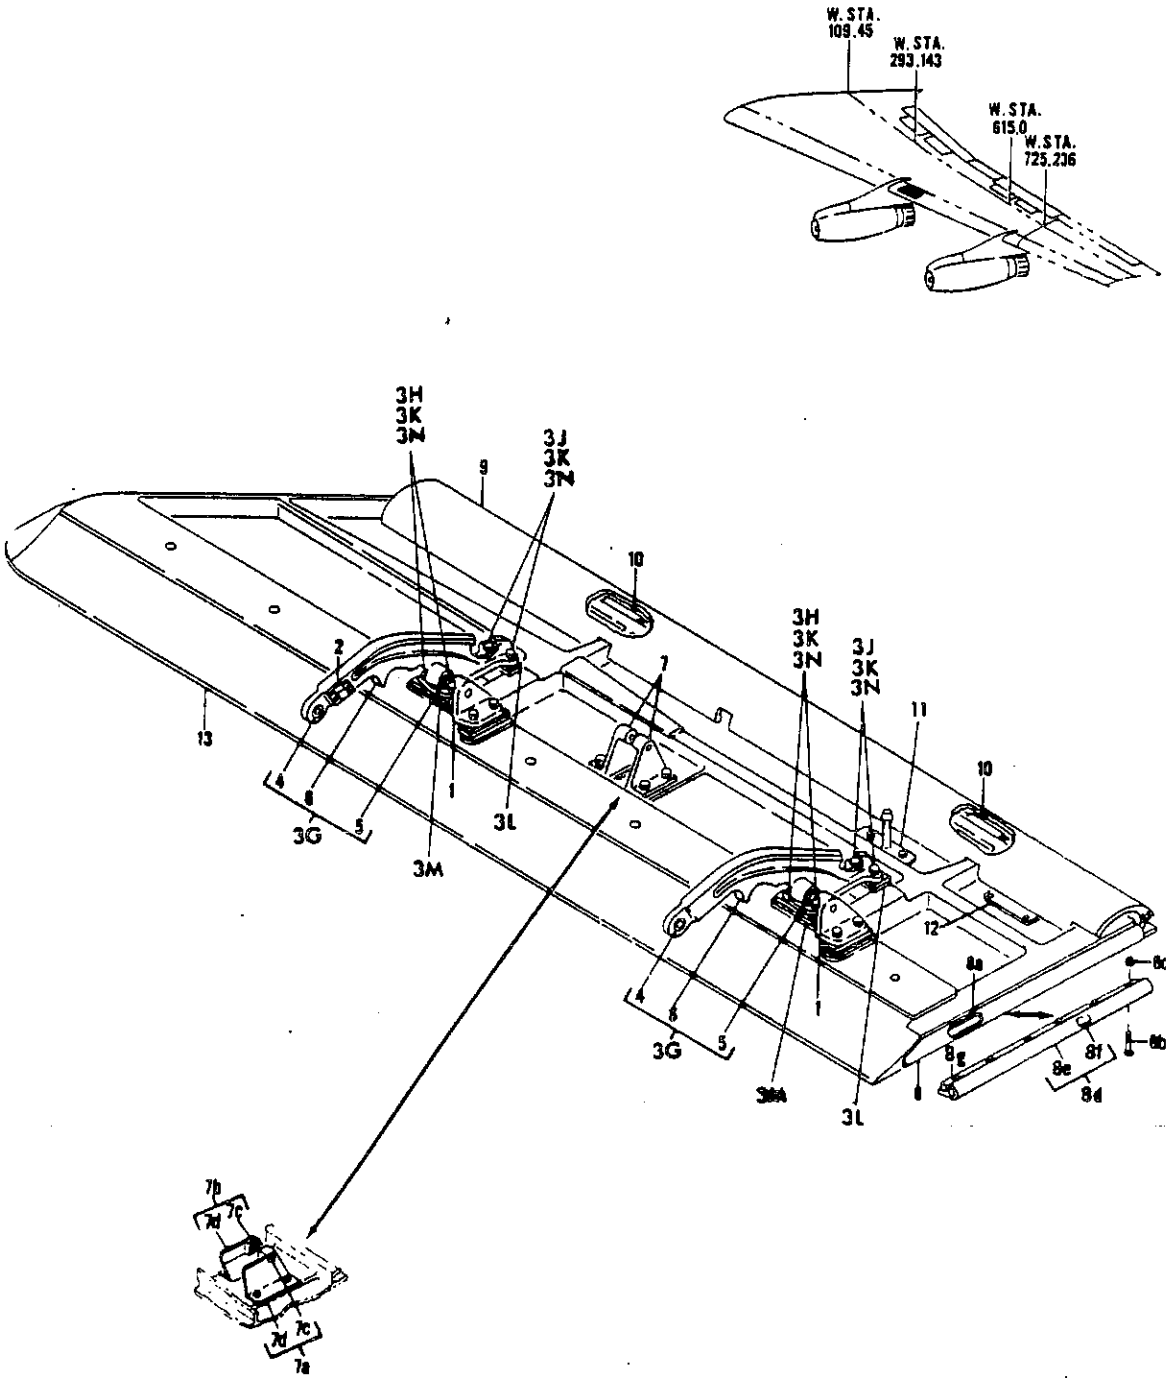


FIGURE 11. SLAT ASSY, INBOARD NACELLE TO FRONT SPAR STATION 463.22 WING LEADING EDGE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R	11	65-18783-11A	SLAT ASSY, INBOARD NACELLE TO FRONT SPAR STATION 463.22 WING LEADING EDGE (LH) (SEE FIG. 7, ITEM 13)	5199	RF
		65-18783-5	SLAT ASSY, INBOARD NACELLE TO FRONT SPAR STATION 463.22 WING LEADING EDGE (LH) (DELETED BY SB 2956) (SEE FIG. 7, ITEM 13)	0103	RF
R R R		65-18783-9	SLAT ASSY, INBOARD NACELLE TO FRONT SPAR STATION 463.22 WING LEADING EDGE (LH) (ADDED BY SB 2956) (SEE FIG. 7, ITEM 13)	0150	RF
R R R		65-18783-7	SLAT ASSY, INBOARD NACELLE TO FRONT SPAR STATION 463.22 WING LEADING EDGE (LH) (DELETED BY SB 2956) (SEE FIG. 7, ITEM 13)	0450	RF
		65-18783-6	SLAT ASSY, INBOARD NACELLE TO FRONT SPAR STATION 463.22 WING LEADING EDGE (RH) (DELETED BY SB 2956) (SEE FIG. 7, ITEM 13)	0103	RF
R R		65-18783-12A	SLAT ASSY, INBOARD NACELLE TO FRONT SPAR STATION 463.22 WING LEADING EDGE (RH) (SEE FIG. 7, ITEM 13)	5199	RF
R R R		65-18783-8	SLAT ASSY, INBOARD NACELLE TO FRONT SPAR STATION 463.22 WING LEADING EDGE (RH) (DELETED BY SB 2956) (SEE FIG. 7, ITEM 13)	0450	RF
R R R		65-18783-10	SLAT ASSY, INBOARD NACELLE TO FRONT SPAR STATION 463.22 WING LEADING EDGE (RH) (ADDED BY SB 2956) (SEE FIG. 7, ITEM 13)	0150	RF
	1	65-18743-1	. SUPPORT, INBOARD SLAT WING LEADING EDGE HINGE (LH ONLY)		2
	1	65-18743-2	. SUPPORT, INBOARD SLAT WING LEADING EDGE HINGE (RH ONLY)		2
			ATTACHING PARTS		
		BACB30LU5D22	. BOLT.		4
		AN960-516	. WASHER.		4
		BACS40B18-44	. SHIM.		4
		BACN10JC5	. NUT		4
			-------*-------		
	2	66-12930-3	. STRIKER, WING LEADING EDGE FLAP SWITCH (LH ONLY).		1
	2	66-12930-4	. STRIKER, WING LEADING EDGE FLAP SWITCH (RH ONLY).		1
			ATTACHING PARTS		
		MS20470D4	. RIVET		1
		NAS1103-14W	. BOLT.		1
		AN960D10	. WASHER.		2
		NAS679A3W	. NUT		1
			-------*-------		
	3G	65-18734-13	. FITTING ASSY, HINGE (LH ONLY) (DELETED BY SB 2956). (REPLACEMENT FOR 65-18734-5 DELETED BY SB 2956)	0103	2
	3G	65-18734-5	. FITTING ASSY, HINGE (LH ONLY) (DELETED BY SB 2956). (FOR REPLACEMENT ORDER 65-18734-13 (DELETED BY SB 2956))	0103	2
R R	3G	65-18734-13	. FITTING ASSY, HINGE (REPLACES 65-18734-9 BY SB 2956) (LH ONLY)	0450	2
R R	3G	65-18734-9	. FITTING ASSY, HINGE (LH ONLY) (DELETED BY SB 2956).	0450	2
R	3G	65-18734-13	. FITTING ASSY, HINGE (LH ONLY)	5199	2
	3G	65-18734-13	. FITTING ASSY, HINGE (ADDED BY SB 2956) (LH ONLY).	0103	2
	3G	65-18734-14	. FITTING ASSY, HINGE (RH ONLY) (DELETED BY SB 2956). (REPLACEMENT FOR 65-18734-6 (DELETED BY SB 2956))	0103	2
	3G	65-18734-6	. FITTING ASSY, HINGE (RH ONLY) (DELETED BY SB 2956). (FOR REPLACEMENT ORDER 65-18734-14 (DELETED BY SB 2956))	0103	2
	3G	65-18734-14	. FITTING ASSY, HINGE (ADDED BY SB 2956) (RH ONLY).	0103	2
R R	3G	65-18734-14	. FITTING ASSY, HINGE (REPLACES 65-18734-10 BY SB 2956) (RH ONLY)	0450	2
R R	3G	65-18734-10	. FITTING ASSY, HINGE (RH ONLY) (DELETED BY SB 2956).	0450	2
R	3G	65-18734-14	. FITTING ASSY, HINGE (RH ONLY)	5199	2
			ATTACHING PARTS		
	3H	BACB30LU5D22	. BOLT.		4
	3J	BACB30U5D23	. BOLT.		4
	3K	AN960-516	. WASHER.		8
	3L	BACS40B16-34	. SHIM.		4
	3M	BACS40B16-41	. SHIM.		4
	3N	BACN10JC5	. NUT		8
			-------*-------		
R R R	4	BACB10M8	. . BEARING, (DELETED BY SB 2956)	0150	1
	4	KSBN6	. . BEARING, (V97613) (ADDED BY SB 2956). (OPTIONAL TFA6 (V98939) (ADDED BY SB 2956))	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	11 4	TFA6	. . BEARING, (V98939) (ADDED BY SB 2956).	0150	1
R			(OPTIONAL TO KSBN6 (V97613) (ADDED BY SB 2956))		
R	4	10-60545-165	. . BEARING	5199	1
R			(OPTIONALS MS14104-6, 10-60545-165A)		
R	4	MS14104-6	. . BEARING	5199	1
R			(OPTIONAL TO BAC SPEC NO. 10-60545-165)		
R	4	10-60545-165S	. . BEARING	5199	1
R			(OPTIONAL TO BAC SPEC NO. 10-60545-165)		
	4	10-60545-165	. . BEARING, (ADDED BY SB 2956)	0103	1
R	5	NAS77A6-170P	. . BUSHING, (DELETED BY SB 2956)	0150	1
R	5	BACB28X68170	. . BUSHING	5199	1
R	5	BACB28X68170	. . BUSHING, (ADDED BY SB 2956)	0150	1
R	6	65-18734-11	. . FITTING, (LH ONLY).	5199	1
	6	65-18734-11	. . FITTING, (ADDED BY SB 2956) (LH ONLY)	0103	1
	6	65-18734-7	. . FITTING, (DELETED BY SB 2956) (LH ONLY)	0103	1
R	6	65-18734-12	. . FITTING, (RH ONLY).	5199	1
	6	65-18734-8	. . FITTING, (DELETED BY SB 2956) (RH ONLY)	0103	1
	6	65-18734-12	. . FITTING, (ADDED BY SB 2956) (RH ONLY)	0103	1
	7A	69-24799-1	. BRACKET ASSY, INBOARD WING SLAT FAIRING (USED ON. . . 65-18783-5)	0103	1
	7A	69-24799-2	. BRACKET ASSY, INBOARD WING SLAT FAIRING (USED ON. . . 65-18783-6)	0103	1
	7B	69-24799-3	. BRACKET ASSY, INBOARD WING SLAT FAIRING (USED ON. . . 65-18783-5)	0103	1
	7B	69-24799-4	. BRACKET ASSY, INBOARD WING SLAT FAIRING (USED ON. . . 65-18783-6)	0103	1
			ATTACHING PARTS		
		NAS333CPA7	. BOLT.	0103	4
		AN960D10	. WASHER.	0103	4
		BACS40A16-52	. SHIM, (USED ON 65-18783-5 AND -6)	0103	AR
		BACS40A16-39	. SHIM, (USED ON 65-18783-5 AND -6)	0103	AR
		NAS679A3W	. NUT	0103	4
			-------*-------		
	7C	10-60516-107	. . BUSHING, PRESS FIT STRUCTURAL (USED ON 69-24799-1 . AND -2)	0103	1
	7C	10-60516-106	. . BUSHING, PRESS FIT STRUCTURAL (USED ON 69-24799-3 . AND -4)	0103	1
	7D	69-24799-5	. . BRACKET, INBOARD WING SLAT FAIRING (USED ON . . . . 69-24799-1)	0103	1
	7D	69-24799-6	. . BRACKET, INBOARD WING SLAT FAIRING (USED ON . . . . 69-24799-2)	0103	1
	7D	69-24799-7	. . BRACKET, INBOARD WING LEADING EDGE SLAT FAIRING . . (USED ON 69-24799-3)	0103	1
	7D	69-24799-8	. . BRACKET, INBOARD WING LEADING EDGE SLAT FAIRING . . (USED ON 69-24799-4)	0103	1
	8B	BACB30LU2-10	. BOLT.		6
	8C	BACN10JC08	. NUT		6
	8D	69-34883-1	. SEAL ASSY, INBOARD WING LEADING EDGE SLAT		1
	8E	69-34883-4	. . SEAL, INBOARD WING LEADING EDGE SLAT (ALTERED FROM EXTRUSION NO. BAC1530-44 X 13.7 IN. LG)		1
	8F	69-34883-5	. . INSERT, INBOARD WING LEADING EDGE SLAT SEAL		1
	8G	69-34883-3	. RETAINER, INBOARD WING LEADING EDGE SLAT SEAL		1
	9	65-18758-35	. FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (USED . ON 65-18783-5) (DELETED BY SB 2956) (SEE FIG. 14)	0103	1
	9	65-64580-1	. FAIRING INSTL, (ADDED BY SB 2956) (USED ON. . . . . 65-18783-7 AND -9) (SEE FIG. 14A)	0103	1
	9	65-64580-1	. FAIRING INSTL, (USED ON 65-18783-7, -9, -11 AND -13) (SEE FIG. 14A)	0499	1
	9	65-18758-36	. FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (USED . ON 65-18783-6) (DELETED BY SB 2956) (SEE FIG. 14)	0103	1
	9	65-64580-2	. FAIRING INSTL, (ADDED BY SB 2956) (USED ON. . . . . 65-18783-8 AND -10) (SEE FIG. 14A)	0103	1
	9	65-64580-2	. FAIRING INSTL, (USED ON 65-18783-8, -10, -12 AND -14) (SEE FIG. 14A)	0499	1
	10	65-18783-3	. STRIP, INBOARD NACELLE TO FRONT SPAR STATION 463.22 . WING LEADING EDGE SLAT RUB		2
			ATTACHING PARTS		
		MS20426B4	. RIVET		4
			-------*-------		
R	11	69-21314-1	. STUD, INBOARD WING LEADING EDGE SLAT.	0150	1
			ATTACHING PARTS		
R		BACB30LU3-4	. BOLT.	0150	2
R		AN960D10L	. WASHER.	0150	2
R		BACN10JC3	. NUT	0150	2
			-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	11 12	MS27253-2	. PLATE		1
			ATTACHING PARTS		
		MS2042683	. RIVET		4
			-------*--------		
	13	65-18961-3	. SLAT, INBOARD NACELLE TO FRONT SPAR STATION 463.22. . WING LEADING EDGE (LH ONLY)	0103	1
	13	65-18961-4	. SLAT, INBOARD NACELLE TO FRONT SPAR STATION 463.22. . WING LEADING EDGE (RH ONLY)	0103	1
R	13	65-18961-7A	. SLAT, (LH ONLY)	5199	1
R	13	65-18961-8A	. SLAT, (RH ONLY)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

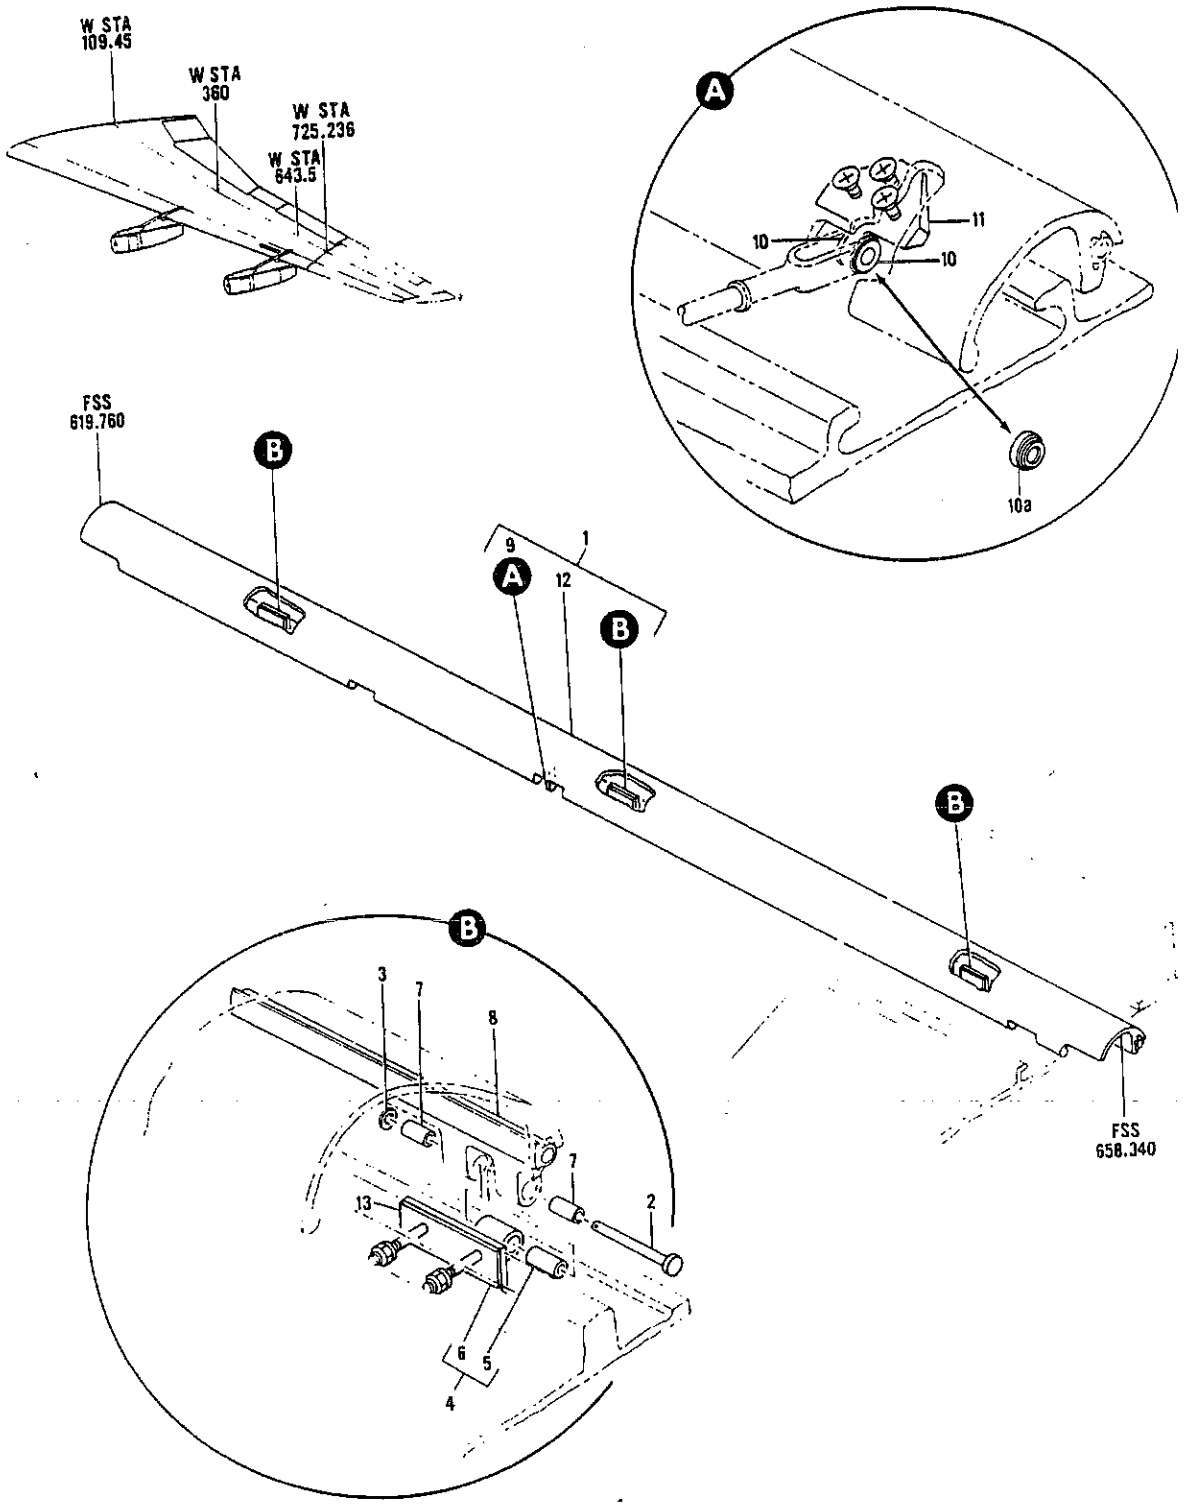


FIGURE 12. FAIRING INSTL, INBOARD WING LEADING EDGE STAT

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	12	65-18758-43	FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (LH). . . (SEE FIG. 9, ITEM 11)	0150	RF
R		65-18758-44	FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (RH). . . (SEE FIG. 9, ITEM 11)	0150	RF
R	1	65-18758-53	. FAIRING ASSY, INBOARD WING LEADING EDGE SLAT (USED. . ON 65-18758-43)	0150	1
R	1	65-18758-54	. FAIRING ASSY, INBOARD WING LEADING EDGE SLAT (USED. . ON 65-18758-44)	0150	1
			ATTACHING PARTS		
R		NAS333CPA11	. BOLT.	0150	6
R		BACW10T10	. WASHER.	0150	6
R		NAS679A3W	. NUT	0150	6
			-------*-------		
R	2	66-18343-1	. . PIN, INBOARD WING SLAT FAIRING HINGE (USED ON . . . 65-18758-53 AND -54)	0150	3
R	3	AN960D10L	. . WASHER.	0150	3
R	4	66-12612-1	. . FITTING ASSY, INBOARD WING LEADING EDGE SLAT. . . . MECHANISM FAIRING HINGE	0150	3
R	5	NAS76A3-016P	. . . BUSHING	0150	1
R	6	66-12612-2	. . . FITTING, INBOARD WING LEADING EDGE SLAT . . . . . MECHANISM FAIRING HINGE	0150	1
R	7	NAS76A3-016P	. . BUSHING	0150	6
R	8	65-18758-33	. . SEAL, INBOARD WING LEADING EDGE SLAT RUBBER . . . . (EXTRUSION NO. BAC1530-18 X 37.7 IN. LG)	0150	1
R	9	66-18357-1	. . FITTING ASSY, INBOARD WING SLAT FAIRING (USED ON. . 65-18758-53 AND -54)	0150	1
			ATTACHING PARTS		
R		BACB30ABP3-4A	. . BOLT.	0150	1
R		BACB30ABP3-6A	. . BOLT.	0150	2
R		AN960D10L	. . WASHER.	0150	3
R		NAS679A3W	. . NUT	0150	3
			-------*-------		
R	10A	10-60545-111S	. . . BEARING, TEFLON LUBRICATED SPHERICAL (USED ON . . 66-18357-1) (OPTIONAL BACB10M24)	0150	1
R	10A	BACB10M24	. . . BEARING, (USED ON 66-18357-1) . . . . . (OPTIONAL TO BAC SPEC 10-60545-111S)	0150	1
R	11	66-18357-2	. . . FITTING, INBOARD WING SLAT FAIRING (USED ON . . . 66-18357-1)	0150	1
R	12	65-18758-63	. . FAIRING, INBOARD WING LEADING EDGE SLAT (USED ON. . 65-18758-53)	0150	1
R	12	65-18758-64	. . FAIRING, INBOARD WING LEADING EDGE SLAT (USED ON. . 65-18758-54)	0150	1
R	13	BACS40B10-24	. SHIM.	0150	3

MISSING ITEM NUMBERS ARE NOT APPLICABLE

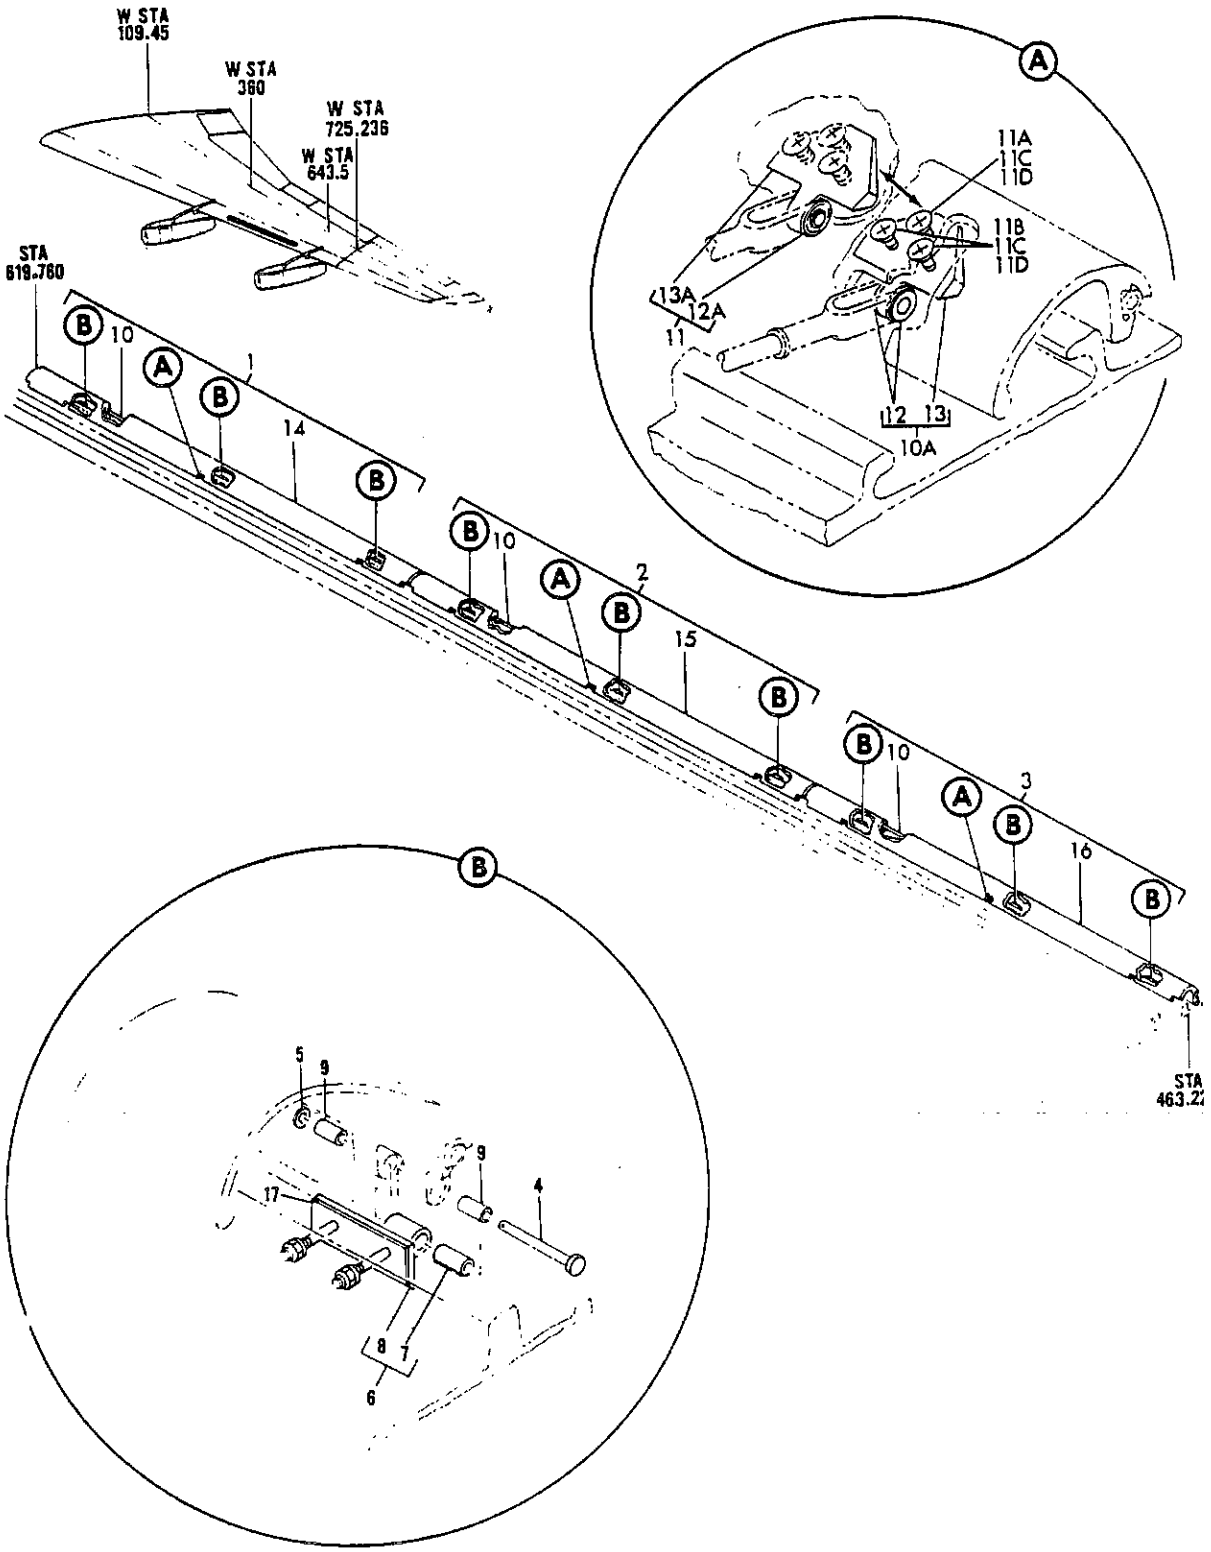


FIGURE 13. FAIRING INSTL, INBOARD WING LEADING EDGE STAT

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
13	65-18758-41	FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (LH) (SEE FIG. 10, ITEM 26)	0103	RF
	65-18758-42	FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (RH) (SEE FIG. 10, ITEM 26)	0103	RF
	65-18758-39	FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (LH) (SEE FIG. 10, ITEM 26)	0103	RF
	65-18758-40	FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (RH) (SEE FIG. 10, ITEM 26)	0103	RF
	65-18758-37	FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (LH) (SEE FIG. 10, ITEM 26)	0103	RF
	65-18758-38	FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (RH) (SEE FIG. 10, ITEM 26)	0103	RF
1	65-18758-51	. FAIRING ASSY, INBOARD WING LEADING EDGE SLAT (USED ON 65-18758-41)	0103	1
1	65-18758-52	. FAIRING ASSY, INBOARD WING LEADING EDGE SLAT (USED ON 65-18758-42)	0103	1
2	65-18758-49	. FAIRING ASSY, INBOARD WING LEADING EDGE SLAT (USED ON 65-18758-39)	0103	1
2	65-18758-50	. FAIRING ASSY, INBOARD WING LEADING EDGE SLAT (USED ON 65-18758-40)	0103	1
3	65-18758-47	. FAIRING ASSY, INBOARD WING LEADING EDGE SLAT (USED ON 65-18758-37)	0103	1
3	65-18758-48	. FAIRING ASSY, INBOARD WING LEADING EDGE SLAT (USED ON 65-18758-38)	0103	1
		ATTACHING PARTS		
	NAS333CPA11	. BOLT.	0103	6
	BACW10T10	. WASHER.	0103	6
	NAS679A3W	. NUT	0103	6
		-------*-------		
4	66-18343-1	. . PIN, INBOARD WING SLAT FAIRING HINGE (USED ON 65-18758-47, -48, -49, -50, -51 AND -52)	0103	3
5	AN960D10L	. . WASHER.	0103	3
6	66-12612-1	. . FITTING ASSY, INBOARD WING LEADING EDGE SLAT MECHANISM FAIRING HINGE	0103	3
7	NAS76A3-016P	. . . BUSHING	0103	3
8	66-12612-2	. . . FITTING, INBOARD WING LEADING EDGE SLAT MECHANISM FAIRING HINGE	0103	3
9	NAS76A3-016P	. . BUSHING	0103	6
10	65-18758-32	. . SEAL, INBOARD WING LEADING EDGE SLAT RUBBER (EXTRUSION NO. BAC1530-18 X 52.1 IN. LG)	0103	1
11	66-18357-1	. . FITTING ASSY, INBOARD WING SLAT FAIRING (USED ON. 65-18758-47, -48, -49, -50, -51 AND -52)	0103	1
		ATTACHING PARTS		
11A	BACB30ABP3-4A	. . BOLT.	0103	1
11B	BACB30ABP3-6A	. . BOLT.	0103	2
11C	AN960D10L	. . WASHER.	0103	3
11D	NAS679A3W	. . NUT	0103	3
		-------*-------		
12A	10-60545-111S	. . . BEARING, TEFLON LUBRICATED SPHERICAL. (OPTIONAL BACB10M24) (USED ON 66-18357-1)	0103	1
12A	BACB10M24	. . . BEARING . . . . . (OPTIONAL TO BAC SPEC NO. 10-60545-111S)	0103	1
13A	66-18357-2	. . . FITTING, INBOARD WING SLAT FAIRING (USED ON 66-18357-1)	0103	1
14	65-18758-61	. . FAIRING, INBOARD WING LEADING EDGE SLAT (USED ON. 65-18758-51)	0103	1
14	65-18758-62	. . FAIRING, INBOARD WING LEADING EDGE SLAT (USED ON. 65-18758-52)	0103	1
15	65-18758-59	. . FAIRING, INBOARD WING LEADING EDGE SLAT (USED ON. 65-18758-49)	0103	1
15	65-18758-60	. . FAIRING, INBOARD WING LEADING EDGE SLAT (USED ON. 65-18758-50)	0103	1
16	65-18758-57	. . FAIRING, INBOARD WING LEADING EDGE SLAT (USED ON. 65-18758-47)	0103	1
16	65-18758-58	. . FAIRING, INBOARD WING LEADING EDGE SLAT (USED ON. 65-18758-48)	0103	1
17	BACS40B10-24	. SHIM.	0103	3

MISSING ITEM NUMBERS ARE NOT APPLICABLE

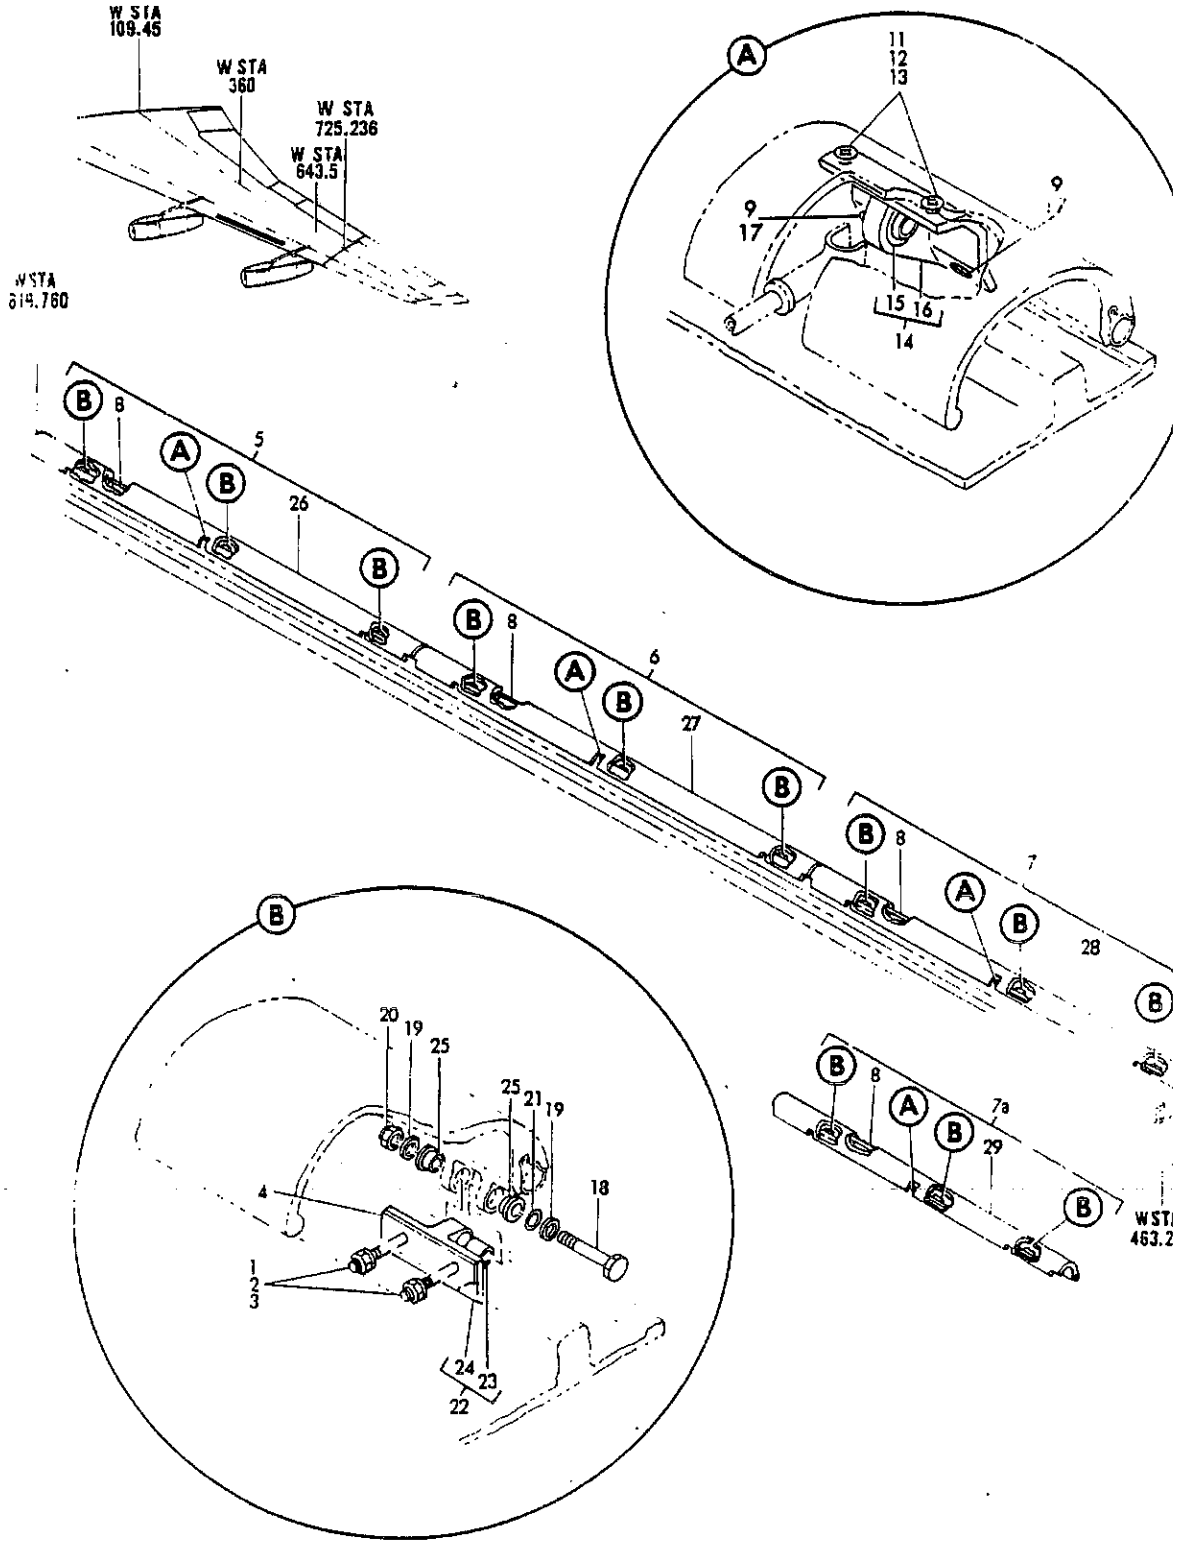


FIGURE 13A. FAIRING INSTL, INBOARD WING LEADING EDGE SLAT

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
13A	65-64580-3	FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (LH) (SEE FIG. 10, ITEM 26)	0499	RF
	65-64580-4	FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (RH) (SEE FIG. 10, ITEM 26)	0499	RF
	65-64580-5	FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (LH) (SEE FIG. 10, ITEM 26)	0499	RF
	65-64580-6	FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (RH) (SEE FIG. 10, ITEM 26)	0499	RF
	65-64580-7	FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (LH) (SEE FIG. 10, ITEM 26)	0499	RF
	65-64580-8	FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (RH) (SEE FIG. 10, ITEM 26)	0499	RF
	65-64580-9	FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (LH) (SEE FIG. 9, ITEM 11)	0499	RF
	65-64580-10	FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (RH) (SEE FIG. 9, ITEM 11)	0499	RF
1	NAS1103-13	. BOLT.	0499	6
2	AN960PD10	. WASHER.	0499	12
3	NAS679A3W	. NUT	0499	6
4	BACS40R07C19	. SHIM.	0499	AR
5	65-64580-13	. FAIRING ASSY, (USED ON 65-64580-3).	0450	1
5	65-64580-53A	. FAIRING ASSY, (USED ON 65-64580-3).	5199	1
5	65-64580-14	. FAIRING ASSY, (USED ON 65-64580-4).	0450	1
5	65-64580-54A	. FAIRING ASSY, (USED ON 65-64580-4).	5199	1
6	65-64580-15	. FAIRING ASSY, (USED ON 65-64580-5).	0450	1
6	65-64580-55A	. FAIRING ASSY, (USED ON 65-64580-5).	5199	1
6	65-64580-16	. FAIRING ASSY, (USED ON 65-64580-6).	0450	1
6	65-64580-56A	. FAIRING ASSY, (USED ON 65-64580-6).	5199	1
7	65-64580-17	. FAIRING ASSY, (USED ON 65-64580-7).	0450	1
7	65-64580-57A	. FAIRING ASSY, (USED ON 65-64580-7).	5199	1
7	65-64580-18	. FAIRING ASSY, (USED ON 65-64580-8).	0450	1
7	65-64580-58A	. FAIRING ASSY, (USED ON 65-64580-8).	5199	1
7A	65-64580-19	. FAIRING ASSY, (USED ON 65-64580-9).	0450	1
7A	65-64580-59A	. FAIRING ASSY, (USED ON 65-64580-9).	5199	1
7A	65-64580-20	. FAIRING ASSY, (USED ON 65-64580-10)	0450	1
7A	65-64580-60A	. FAIRING ASSY, (USED ON 65-64580-10)	5199	1
8	65-64580-32	. . SEAL, (EXTRUSION NO. BAC1530-60 X 37.7 IN. LG). (USED ON 65-64580-13, -14, -15, -16, -17 AND -18)	0450	1
8	65-64580-33	. . SEAL, (EXTRUSION NO. BAC1530-60 X 37.7 IN. LG). (USED ON 65-64580-19 AND -20)	0450	1
9	BACB30LU3-2	. . BOLT.	0499	2
11	BACB30LU3-4	. . BOLT.	0499	2
12	AN960PD10L	. . WASHER.	0499	2
13	NAS679A3W	. . NUT	0499	2
14	65-68606-1	. . FITTING ASSY, ATTACH.	0499	1
15	MS21231-4	. . . BEARING	0499	1
16	65-68606-2	. . . FITTING, (ALTERED FROM 65-68606-3).	0499	1
17	3591-3CN0190	. . INSERT, (V91767).	0499	2
18	NAS1104-19	. . BOLT.	0499	3
19	AN960PD416	. . WASHER.	0499	6
20	NAS679A4W	. . NUT	0499	3
21	69-54285-1	. . SHIM.	0499	AR
22	69-54238-1	. . FITTING ASSY, MECHANISM HINGE	0499	3
23	BACB28AB4-056	. . . BEARING	0499	1
24	69-54238-2	. . . FITTING	0499	1
25	NAS77A4-19P	. . BUSHING	0499	6
26	65-64580-23	. . FAIRING, (LH ONLY) (USED ON 65-64580-13 AND -37).	0450	1
26	65-64580-63A	. . FAIRING, (LH ONLY) (USED ON 65-64580-53A)	5199	1
26	65-64580-24	. . FAIRING, (RH ONLY) (USED ON 65-64580-14 AND -38).	0450	1
26	65-64580-64A	. . FAIRING, (RH ONLY) (USED ON 65-64580-54A)	5199	1
27	65-64580-25	. . FAIRING, (LH ONLY) (USED ON 65-64580-15 AND -39).	0450	1
27	65-64580-65A	. . FAIRING, (LH ONLY) (USED ON 65-64580-55A)	5199	1
27	65-64580-26	. . FAIRING, (RH ONLY) (USED ON 65-64580-16 AND -40).	0450	1
27	65-64580-66A	. . FAIRING, (RH ONLY) (USED ON 65-64580-56A)	5199	1
28	65-64580-27	. . FAIRING, (LH ONLY) (USED ON 65-64580-17 AND -41).	0450	1
28	65-64580-67A	. . FAIRING, (LH ONLY) (USED ON 65-64580-57A)	5199	1
28	65-64580-28	. . FAIRING, (RH ONLY) (USED ON 65-64580-18 AND -42).	0450	1
28	65-64580-68A	. . FAIRING, (RH ONLY) (USED ON 65-64580-58A)	5199	1
29	65-64580-29	. . FAIRING, (LH ONLY) (USED ON 65-64580-19 AND -43).	0450	1
29	65-64580-69A	. . FAIRING, (LH ONLY) (USED ON 65-64580-59A)	0499	1
29	65-64580-30	. . FAIRING, (RH ONLY) (USED ON 65-64580-20 AND -44).	0450	1
29	65-64580-70A	. . FAIRING, (RH ONLY) (USED ON 65-64580-60A)	0499	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

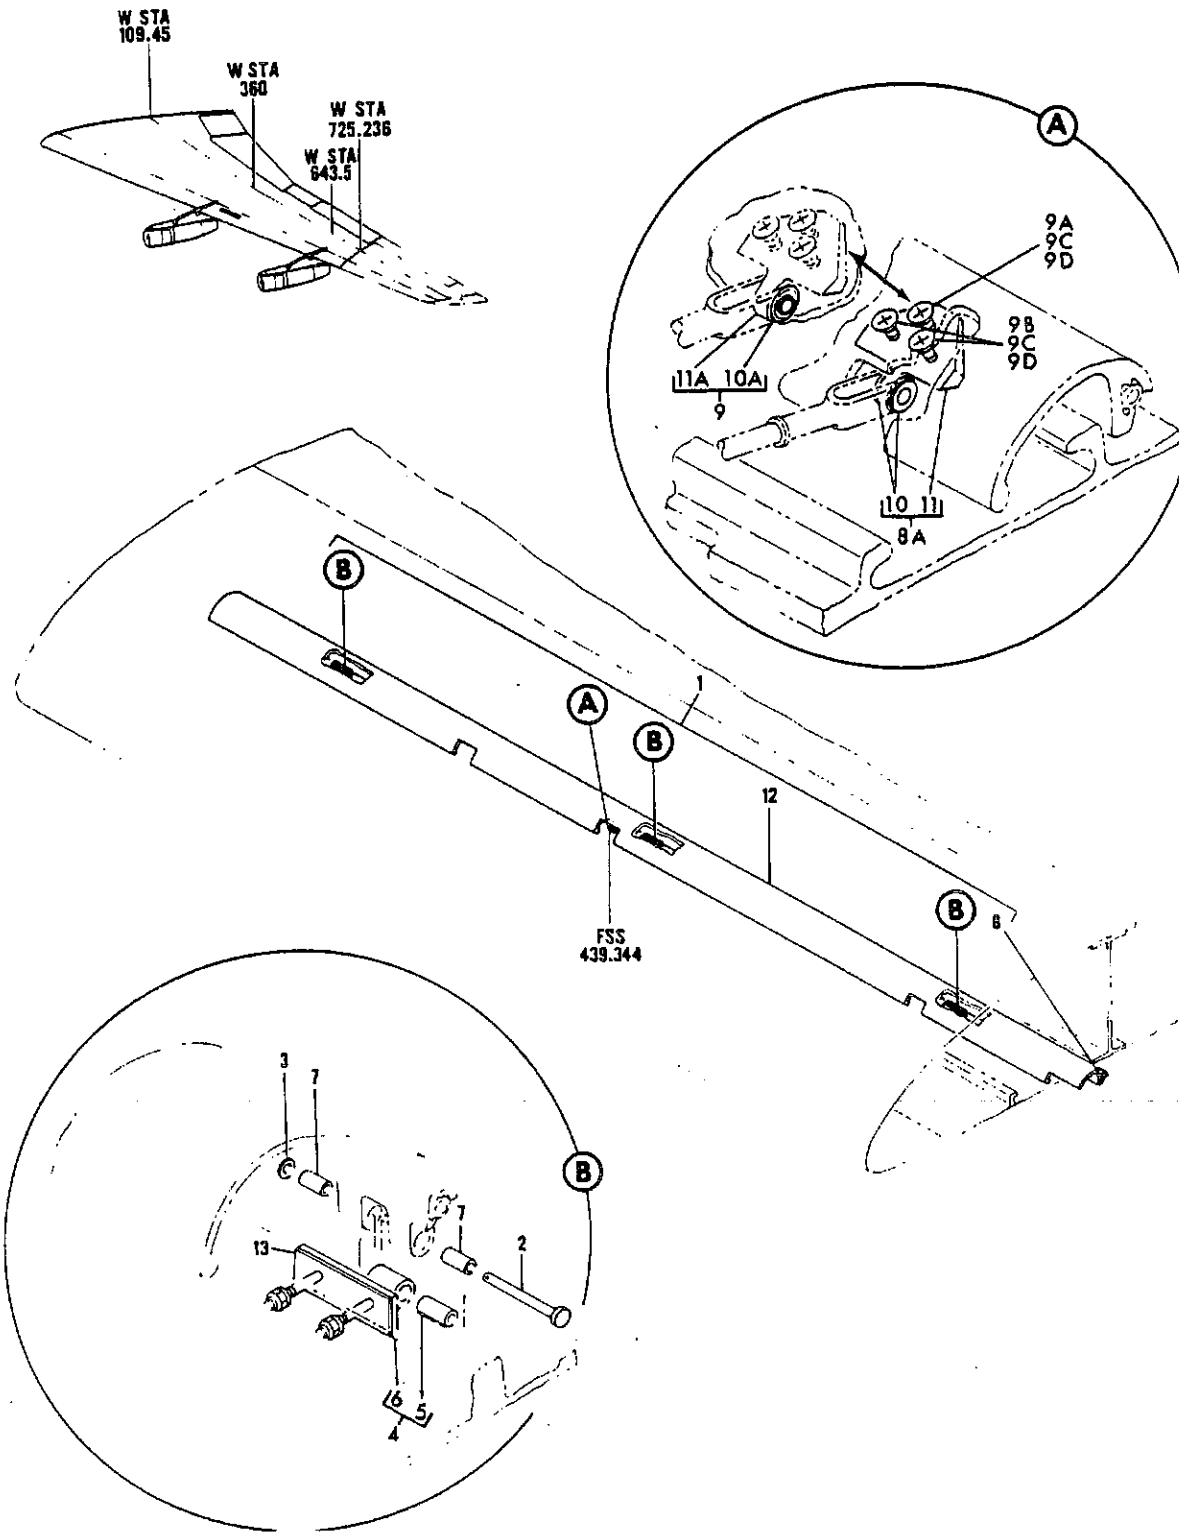


FIGURE 14. FAIRING INSTL, INBOARD WING LEADING EDGE SLAT

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
14	65-18758-35	FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (LH). . . (DELETED BY SB 2956) (SEE FIG. 11, ITEM 9)	0103	RF
	65-18758-36	FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (RH). . . (DELETED BY SB 2956) (SEE FIG. 11, ITEM 9)	0103	RF
1	65-18758-45	. FAIRING ASSY, INBOARD WING LEADING EDGE SLAT (USED. . ON 65-18758-35)	0103	1
1	65-18758-46	. FAIRING ASSY, INBOARD WING LEADING EDGE SLAT (USED. . ON 65-18758-36)	0103	1
		ATTACHING PARTS		
	NAS333CPA11	. BOLT.	0103	6
	BACW10T10	. WASHER.	0103	6
	NAS679A3W	. NUT	0103	6
		-------*-------		
2	66-18343-1	. . PIN, INBOARD WING SLAT FAIRING HINGE (USED ON . . . 65-18758-45 AND -46)	0103	3
3	AN960D10L	. . WASHER.	0103	3
4	66-12612-1	. . FITTING ASSY, INBOARD WING LEADING EDGE SLAT. . . . MECHANISM FAIRING HINGE	0103	3
5	NAS76A3-016P	. . . BUSHING	0103	1
6	66-12612-2	. . . FITTING, INBOARD WING LEADING EDGE SLAT . . . . . MECHANISM FAIRING HINGE	0103	1
7	NAS76A3-016P	. . BUSHING	0103	6
8	65-18758-31	. . SEAL, INBOARD WING LEADING EDGE SLAT RUBBER . . . . (EXTRUSION NO. BAC1530-18 X 44.8 IN. LG)	0103	1
9	66-18357-1	. . FITTING ASSY, INBOARD WING SLAT FAIRING (USED ON. . 65-18758-45 AND -46)	0103	1
		ATTACHING PARTS		
9A	BACB30ABP3-4A	. . BOLT.	0103	1
9B	BACB30ABP3-6A	. . BOLT.	0103	2
9C	AN960D10L	. . WASHER.	0103	3
9D	NAS679A3W	. . NUT	0103	3
		-------*-------		
10A	10-60545-111S	. . . BEARING, TEFLON LUBRICATED SPHERICAL (USED ON . . 66-18357-1) (OPTIONAL BACB10M24)	0103	1
10A	BACB10M24	. . . BEARING . . . . . (OPTIONAL TO BAC SPEC NO. 10-60545-111S)	0103	1
11A	66-18357-2	. . . FITTING, INBOARD WING SLAT FAIRING (USED ON . . . 66-18357-1)	0103	1
12	65-18758-55	. . FAIRING, INBOARD WING LEADING EDGE SLAT (USED ON. . 65-18758-45)	0103	1
12	65-18758-56	. . FAIRING, INBOARD WING LEADING EDGE SLAT (USED ON. . 65-18758-46)	0103	1
13	BACS40B10-24	. SHIM.	0103	3

MISSING ITEM NUMBERS ARE NOT APPLICABLE

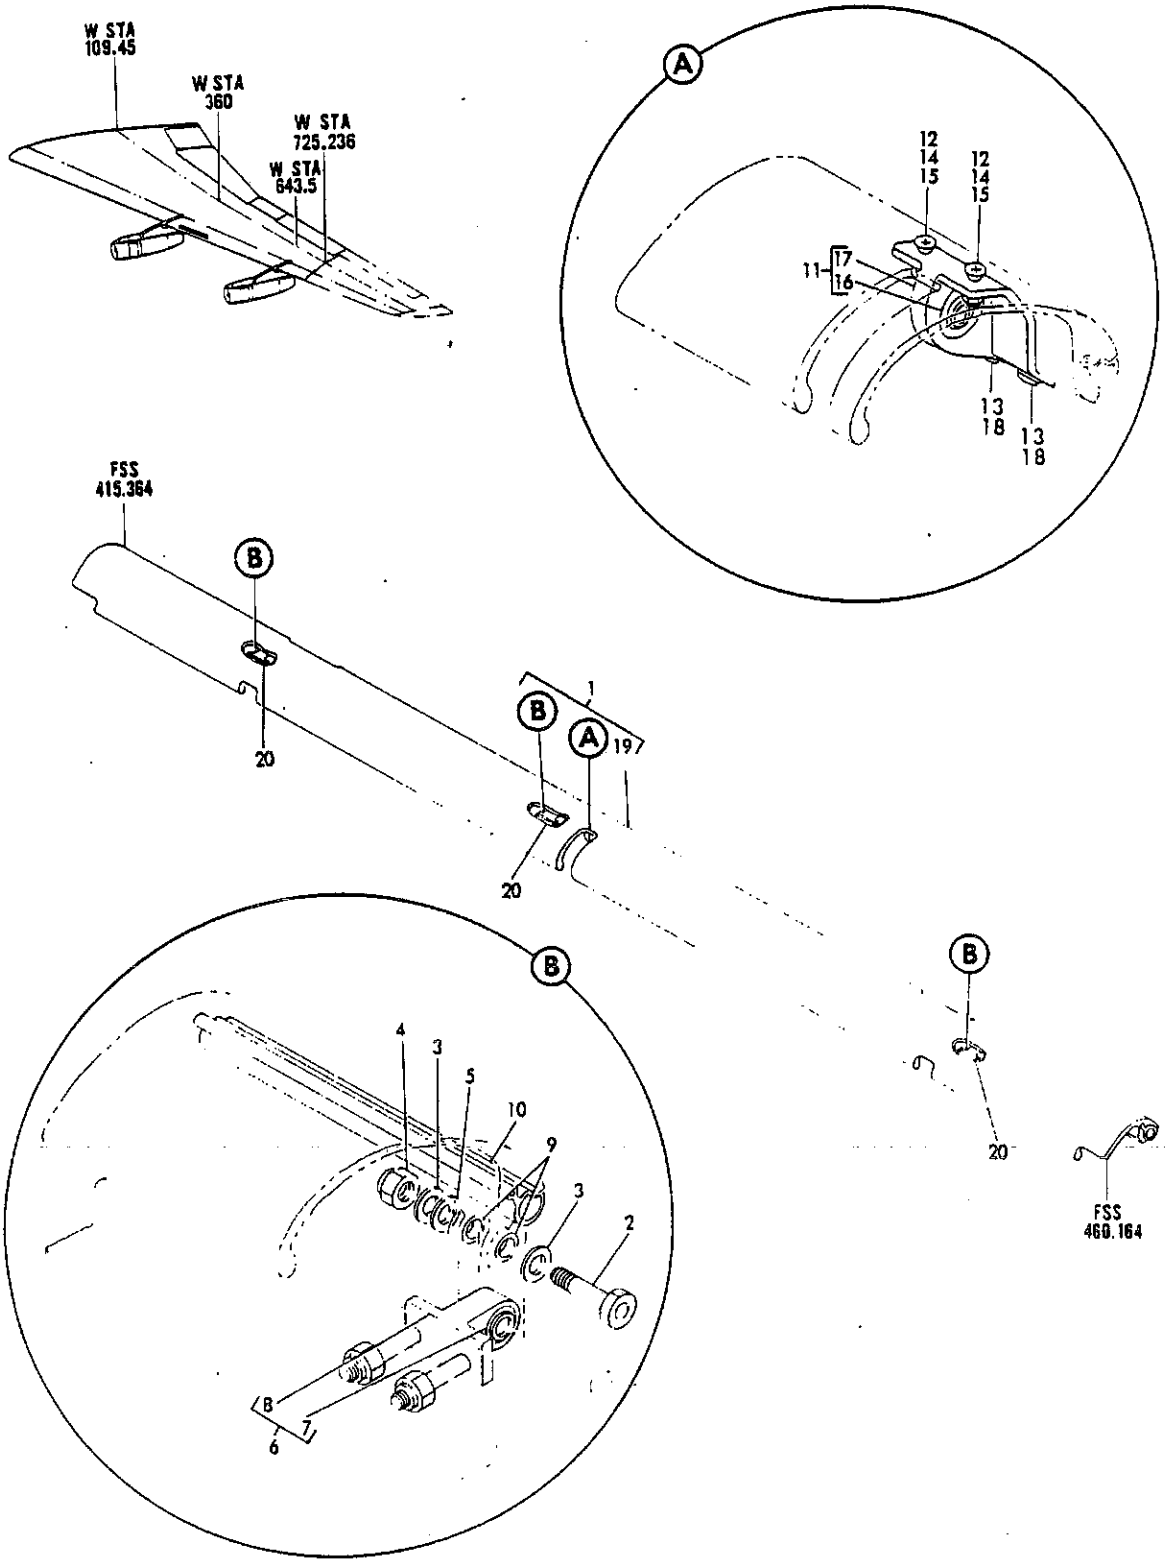


FIGURE 14. FAIRING INSTL, INBOARD WING LEADING EDGE SLAT

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
14A	65-64580-1	FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (LH) (SEE FIG. 11, ITEM 9)	0499	RF
	65-64580-1	FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (LH). . . (ADDED BY SB 2956) (SEE FIG. 11, ITEM 9)	0103	RF
	65-64580-2	FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (RH) (SEE FIG. 11, ITEM 9)	0499	RF
	65-64580-2	FAIRING INSTL, INBOARD WING LEADING EDGE SLAT (RH). . . (ADDED BY SB 2982) (SEE FIG. 11, ITEM 9)	0103	RF
1	65-64580-11	. FAIRING ASSY, (LH ONLY)	0150	1
1	65-64580-51	. FAIRING ASSY, (LH ONLY)	5199	1
1	65-64580-51A	. FAIRING ASSY, (LH ONLY)	5199	1
1	65-64580-12	. FAIRING ASSY, (RH ONLY)	0150	1
1	65-64580-52	. FAIRING ASSY, (RH ONLY)	5199	1
1	65-64580-52A	. FAIRING ASSY, (RH ONLY)	5199	1
		ATTACHING PARTS		
	NAS1103-13	. BOLT.		6
	AN960PD10	. WASHER.		12
	NAS679A3W	. NUT'		6
		-------*-------		
2	NAS1104-19	. . BOLT.		3
3	AN960PD416	. . WASHER.		6
4	NAS679A4W	. . NUT		3
5	69-54285-1	. . SHIM.		3
6	69-54238-1	. . FITTING ASSY, MECHANISM FAIRING HINGE		3
7	BACB28AB4-056	. . . BEARING		1
8	69-54238-2	. . . FITTING		1
9	NAS77A4-19P	. . BUSHING		6
10	65-64580-31	. . SEAL, RUBBER (EXTRUSION NO. BAC1530-60 X 44.8 IN. LG)	0150	1
10	65-64580-45	. . SEAL, RUBBER (EXTRUSION NO. BAC1530-78 X 44. 8 IN. LG)	5199	1
11	65-68606-1	. . FITTING ASSY, MECHANISM FAIRING LINKAGE		1
		ATTACHING PARTS		
12	BACB30LU3-4	. . BOLT.		2
13	BACB30LU3-2	. . BOLT.		2
14	AN960PD10L	. . WASHER.		2
15	NAS679A3W	. . NUT		2
		-------*-------		
16	MS21231-4	. . . BEARING		1
17	65-68606-2	. . . FITTING, (ALTERED FROM 65-68606-3).		1
18	3591-3CN0190	. . INSERT, (V01556).		2
19	65-64580-21	. . FAIRING, (LH ONLY).	0150	1
19	65-64580-61	. . FAIRING, (LH ONLY).	5199	1
19	65-64580-61A	. . FAIRING, (LH ONLY).	5199	1
19	65-64580-22	. . FAIRING, (RH ONLY).	0150	1
19	65-64580-62	. . FAIRING, (RH ONLY).	5199	1
19	65-64580-62A	. . FAIRING, (RH ONLY).	5199	1
20	BACS40R07C19	. SHIM, (OPTIONAL).		3

MISSING ITEM NUMBERS ARE NOT APPLICABLE

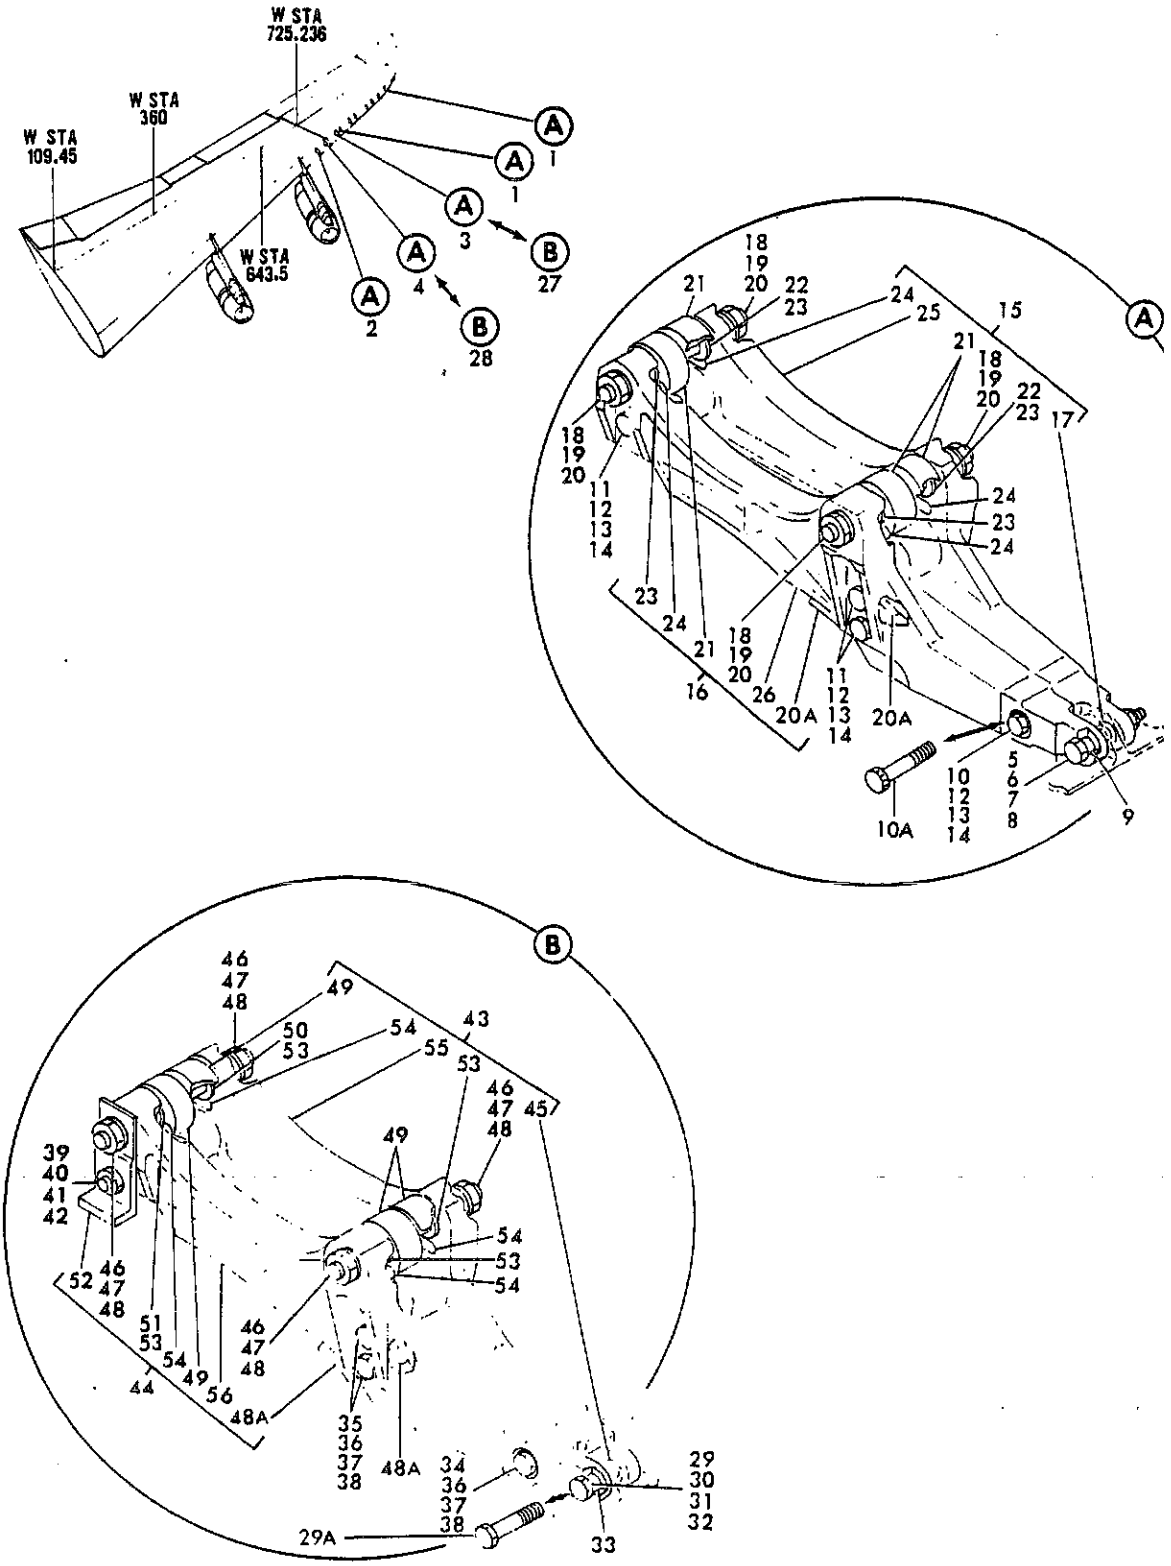


FIGURE 15A. CARRIAGE INSTL, WING LEADING EDGE SLAT SWITCH

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	15A		CARRIAGE INSTL, WING LEADING EDGE SLAT SWITCH		
			CARRIAGE INSTL, WING LEADING EDGE SLAT.		
R	1	69-43346-1	. CARRIAGE INSTL, WING LEADING EDGE SLAT (SEE FIG. 2, . ITEM 51)	0150	RF
R	1	69-43346-7	. CARRIAGE INSTL, WING LEADING EDGE SLAT (SEE FIG. 2, . ITEM 51)	5199	RF
R	2	69-43346-1	. CARRIAGE INSTL, WING LEADING EDGE SLAT (SEE FIG. 6, . ITEM 72)	0150	RF
R	2	69-43346-7	. CARRIAGE INSTL, WING LEADING EDGE SLAT (SEE FIG. 6, . ITEM 72)	5199	RF
	3	69-43346-1	. CARRIAGE INSTL, WING LEADING EDGE SLAT (LH) (SEE FIG. 2, ITEM 51A)	0103	RF
R	3	69-43346-1	. CARRIAGE INSTL, WING LEADING EDGE SLAT (RH) (SEE FIG. 2, ITEM 51A)	0150	RF
R	3	69-43346-7	. CARRIAGE INSTL, WING LEADING EDGE SLAT (RH) (SEE FIG. 2, ITEM 51A)	5199	RF
R	4	69-43346-1	. CARRIAGE INSTL, WING LEADING EDGE SLAT (LH) (SEE FIG. 6, ITEM 71)	0450	RF
R	4	69-43346-7	. CARRIAGE INSTL, WING LEADING EDGE SLAT (LH) (SEE FIG. 6, ITEM 71)	5199	RF
	5	NAS1106-23D	. . BOLT.		1
	6	AN960-616	. . WASHER.		AR
	7	AN960-616L	. . WASHER.		AR
	8	AN320-6	. . NUT		1
	9	69-42689-2	. . BUSHING		1
	10	NAS1105-28D	. . BOLT, (NOT USED ON 69-43346-7).		1
	10A	BACB30NF5D26	. . BOLT, (USED ON 69-43346-7).		1
	11	NAS1105-38D	. . BOLT.		3
	12	AN960PD516L	. . WASHER.		4
	13	AN960PD516	. . WASHER.		4
	14	AN320-5	. . NUT		4
R	15	65-56426-1	. . CARRIAGE ASSY, (LH) (DELETED BY SB 2913).	0150	1
R	15	65-56426-17	. . CARRIAGE ASSY, (LH) (ADDED BY SB 2913).	0150	1
R	15	65-56426-24	. . CARRIAGE ASSY, (LH) (USED ON 69-43346-7).	5199	1
R	16	65-56426-2	. . CARRIAGE ASSY, (RH) (DELETED BY SB 2913).	0150	1
R	16	65-56426-18	. . CARRIAGE ASSY, (RH) (ADDED BY SB 2913).	0150	1
R	16	65-56426-25	. . CARRIAGE ASSY, (RH) (USED ON 69-43346-7).	5199	1
	17	69-42689-1	. . . BUSHING, (LH ONLY).		1
	18	AN316-8R	. . . NUT		2
	19	NAS460-816	. . . WASHER.		2
	20	AN960PD816	. . . WASHER.		2
	21	HRT7CTK11	. . . BEARING UNIT, CAM FOLLOWER NEEDLE (V39317). . . . (OPTIONAL CC38812 (V92172))		2
	21	CC38812	. . . BEARING UNIT, CAM FOLLOWER NEEDLE (V92172). . . . (OPTIONAL TO HRT7CTK11 (V39317))		2
	22	AN960PD816	. . . WASHER, (LH ONLY)		1
	23	69-42689-3	. . . BUSHING		2
	24	65-56426-7	. . . STRIP, RUB.		2
R	25	65-56426-5	. . . CARRIAGE, (DELETED BY SB 2913) (LH ONLY).	0150	1
R	25	65-56426-15	. . . CARRIAGE, (ADDED BY SB 2913) (LH ONLY).	0150	1
R	25	65-56426-22	. . . CARRIAGE, (ALTERED FROM 65-56426-20) (USED ON . . 65-56426-24)	5199	1
R	26	65-56426-6	. . . CARRIAGE, (DELETED BY SB 2913) (RH ONLY).	0150	1
R	26	65-56426-16	. . . CARRIAGE, (ADDED BY SB 2913) (RH ONLY).	0150	1
R	26	65-56426-23	. . . CARRIAGE, (ALTERED FROM 65-56426-21) (USED ON . . 65-56426-25)	5199	1
R	27	69-43346-2	. CARRIAGE INSTL, WING LEADING EDGE SLAT SWITCH (LH). . (SEE FIG. 2, ITEM 51A)	0450	RF
R	27	69-43346-8	. CARRIAGE INSTL, WING LEADING EDGE SLAT SWITCH (LH). . (SEE FIG. 2, ITEM 51A)	5199	RF
	28	69-43346-2	. CARRIAGE INSTL, WING LEADING EDGE SLAT SWITCH (LH). . (SEE FIG. 6, ITEM 71)	0103	RF
R	28	69-43346-2	. CARRIAGE INSTL, WING LEADING EDGE SLAT SWITCH (RH). . (SEE FIG. 6, ITEM 71)	0150	RF
R	28	69-43346-8	. CARRIAGE INSTL, WING LEADING EDGE SLAT SWITCH (RH . . (SEE FIG. 6, ITEM 71)	5199	RF
	29	NAS1106-23D	. . BOLT, (NOT USED ON 69-43346-8).		1
	29A	BACB30NF5D26	. . BOLT, (USED ON 69-43346-8).		1
	30	AN960-616	. . WASHER.		AR
	31	AN960-616L	. . WASHER.		AR
	32	AN320-6	. . NUT		1
	33	69-42689-2	. . BUSHING		1
	34	NAS1105-28D	. . BOLT.		1
	35	NAS1105-38D	. . BOLT.		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	15A 36	AN960PD516L	. . WASHER.		3
	37	AN960PD516	. . WASHER.		3
	38	AN320-5	. . NUT		3
	39	NAS1105-54DW	. . BOLT.		1
	40	NAS43DD5-40	. . SPACER.		1
	41	AN960PD516	. . WASHER.		1
	42	AN320-5	. . NUT		1
R	43	65-56426-1	. . CARRIAGE ASSY, (LH) (DELETED BY SB 2913).	0150	1
R	43	65-56426-17	. . CARRIAGE ASSY, (LH) (ADDED BY SB 2913).	0150	1
R	43	65-56426-24	. . CARRIAGE ASSY, (LH) (USED ON 69-43346-8).	5199	1
R	44	65-56426-8	. . CARRIAGE ASSY, (RH) (DELETED BY SB 2913).	0150	1
R	44	65-56426-19	. . CARRIAGE ASSY, (RH) (ADDED BY SB 2913).	0150	1
R	44	65-56426-26	. . CARRIAGE ASSY, (RH) (USED ON 69-43346-8).	5199	1
	45	69-42689-1	. . . BUSHING, (LH ONLY).		1
	46	AN316-8R	. . . NUT		2
	47	NAS460-816	. . . WASHER.		2
	48	AN960PD816	. . . WASHER.		2
	49	HRT7CTK11	. . . BEARING UNIT, CAM FOLLOWER NEEDLE (V39317). (OPTIONAL CC38812 (V92172))		2
	49	CC38812	. . . BEARING UNIT, CAM FOLLOWER NEEDLE (V92172). (OPTIONAL TO HRT7CTK11 (V39317))		2
	50	AN960PD816	. . . WASHER, (LH ONLY)		1
	51	AN960PD816L	. . . WASHER, (RH ONLY)		1
	52	69-43399-2	. . . STRIKER ASSY, (RH ONLY)		1
	53	69-42689-3	. . . BUSHING		2
	54	65-56426-7	. . . STRIP, RUB.		2
R	55	65-56426-5	. . . CARRIAGE, (DELETED BY SB 2913) (LH ONLY).	0150	1
R	55	65-56426-15	. . . CARRIAGE, (ADDED BY SB 2913) (LH ONLY).	0150	1
R	55	65-56426-22	. . . CARRIAGE, (ALTERED FROM 65-56426-20) (USED ON 65-56426-24)	5199	1
R	56	65-56426-6	. . . CARRIAGE, (DELETED BY SB 2913) (RH ONLY).	0150	1
R	56	65-56426-16	. . . CARRIAGE, (ADDED BY SB 2913) (RH ONLY).	0150	1
R	56	65-56426-23	. . . CARRIAGE, (ALTERED FROM 65-56426-21) (USED ON 65-56426-26)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

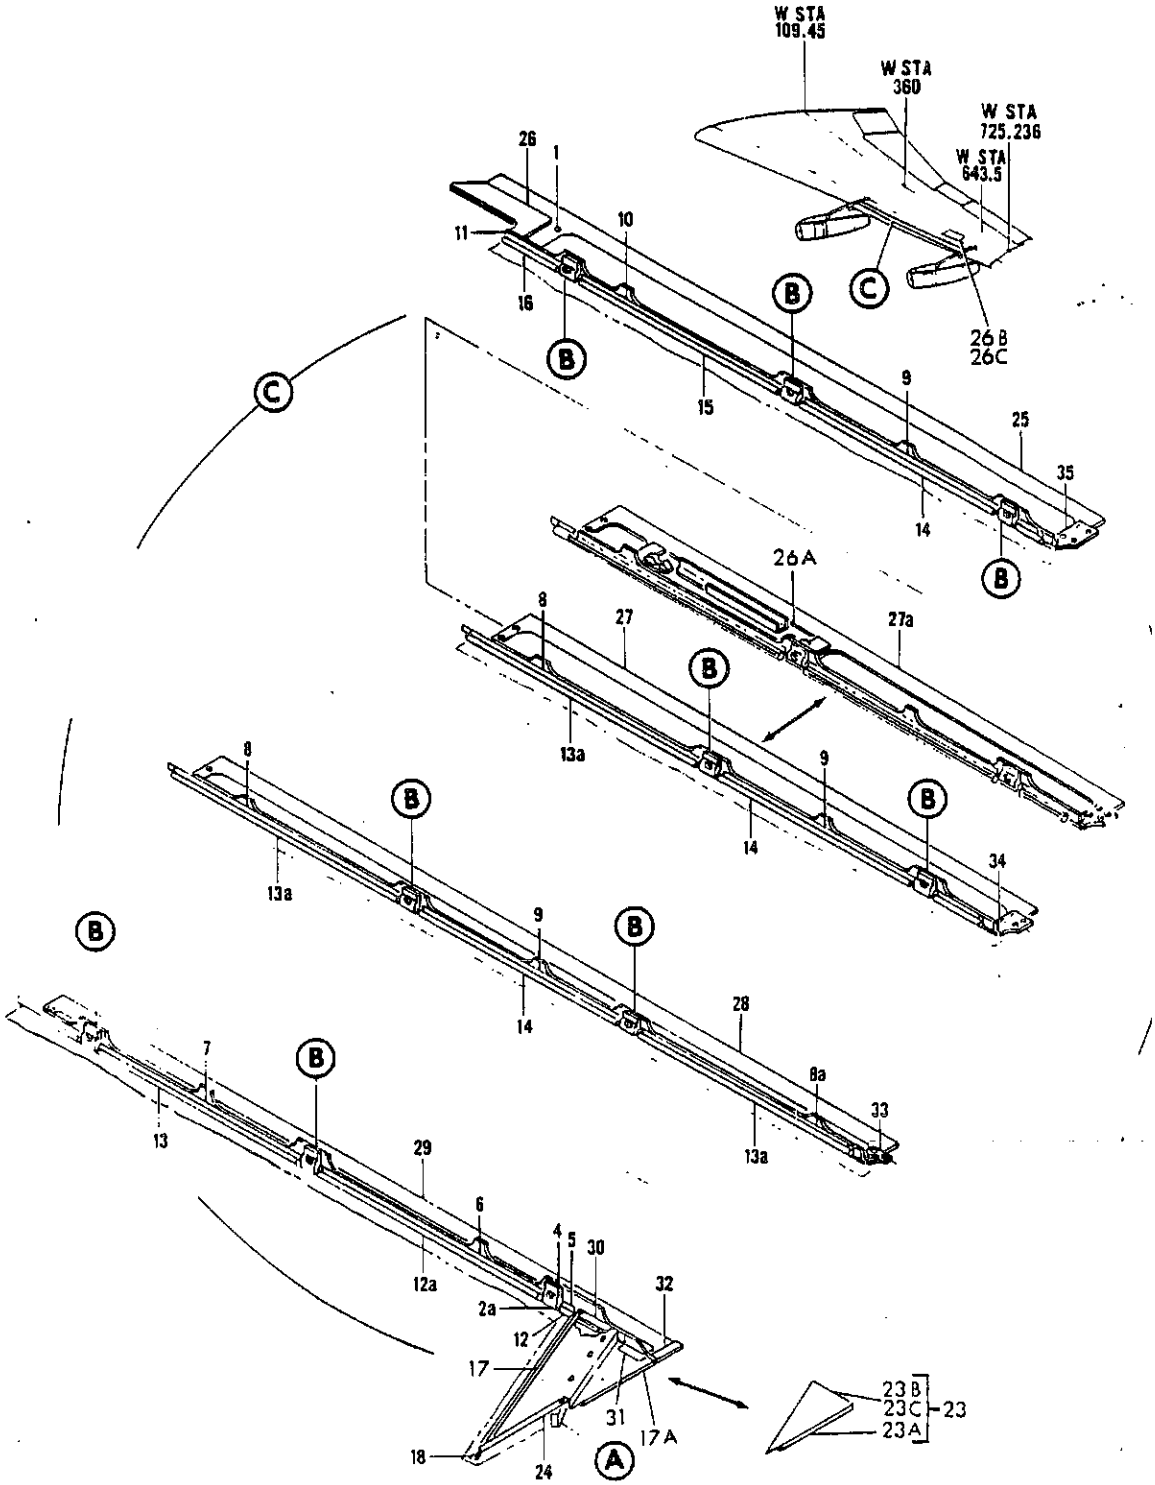
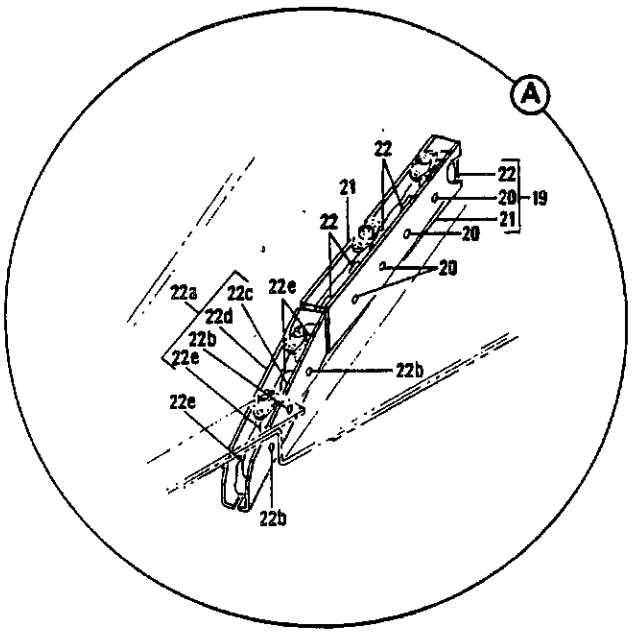


FIGURE 16. PANEL INSTL, INBOARD WING LEADING EDGE SLAT SEAL SUPPORT (SHEET 1)



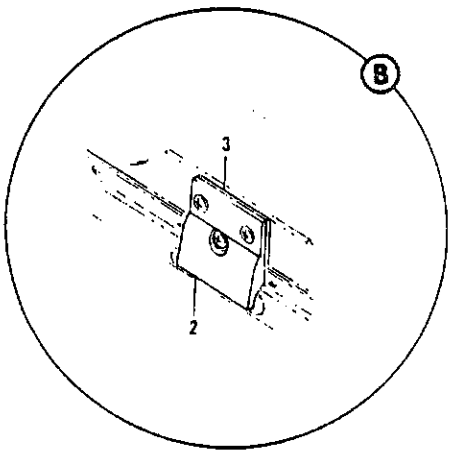


FIGURE 16. PANEL INSTL, INBOARD WING LEADING EDGE SLAT SEAL SUPPORT (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
16	65-18200-1	PANEL INSTL, INBOARD WING LEADING EDGE SLAT SEAL. . . . SUPPORT (LH) (SEE 57-4, FIG. 7, ITEM 4 AND 57-4, FIG. 8, ITEM 32)		RF
	65-18200-2	PANEL INSTL, INBOARD WING LEADING EDGE SLAT SEAL. . . . SUPPORT (RH) (SEE 57-4, FIG. 7, ITEM 4 AND 57-4, FIG. 8, ITEM 32)		RF
1	63-1158-2000	. FITTING, WING LEADING EDGE DRAIN.		1
2	66-12678-10	. STRIKER, LEADING EDGE SLAT.		9
		ATTACHING PARTS		
	NAS623-3-5W	. SCREW		18
	AN960PD416	. WASHER.		18
		-------*-------		
2A	66-12678-11	. STRIKER, LEADING EDGE SLAT.		1
		ATTACHING PARTS		
	NAS623-3-5W	. SCREW		2
	AN960PD416	. WASHER.		2
		-------*-------		
3	66-12678-4	. PLATE, LEADING EDGE SLAT STRIKER.		9
		ATTACHING PARTS		
	NAS517-3-3	. SCREW		18
	AN960PD10L	. WASHER.		18
	NAS679A3W	. NUT		18
		-------*-------		
4	66-12678-6	. PLATE, LEADING EDGE SLAT STRIKER.		1
		ATTACHING PARTS		
	NAS517-3-3	. SCREW		1
	AN960PD10L	. WASHER.		1
	NAS679A3W	. NUT		1
		-------*-------		
5	65-18200-72	. RETAINER, INBOARD WING LEADING EDGE SLAT SEAL		1
6	65-18200-71	. RETAINER, INBOARD WING LEADING EDGE SLAT SEAL		1
7	65-18200-70	. RETAINER, INBOARD WING LEADING EDGE SLAT SEAL		1
8	65-18200-69	. RETAINER, INBOARD WING LEADING EDGE SLAT SEAL (LH . . ONLY)		2
8	65-18200-80	. RETAINER, INBOARD WING LEADING EDGE SLAT SEAL (RH . . ONLY)		2
8A	65-18200-80	. RETAINER, INBOARD WING LEADING EDGE SLAT SEAL (LH . . ONLY)		1
8A	65-18200-69	. RETAINER, INBOARD WING LEADING EDGE SLAT SEAL (RH . . ONLY)		1
9	65-18200-68	. RETAINER, INBOARD WING LEADING EDGE SLAT SEAL		3
10	65-18200-67	. RETAINER, INBOARD WING LEADING EDGE SLAT SEAL		1
11	65-18200-66	. RETAINER, INBOARD WING LEADING EDGE SLAT SEAL (LH . . ONLY)		1
11	65-18200-82	. RETAINER, INBOARD WING LEADING EDGE SLAT SEAL (RH . . ONLY)		1
		ATTACHING PARTS		
	NAS600-8	. SCREW		AR
	AN960PD4L	. WASHER.		AR
	NAS679A04W	. NUT		AR
		-------*-------		
12	65-18200-77	. SEAL, INBOARD WING LEADING EDGE SLAT (EXTRUSION NO. . BAC1530-3 X 1.2 IN. LG) (LH ONLY)		1
12	65-18200-78	. SEAL, INBOARD WING LEADING EDGE SLAT (EXTRUSION NO. . BAC1530-3 X 1.2 IN. LG) (RH ONLY)		1
12A	65-18200-65	. SEAL, INBOARD WING LEADING EDGE SLAT (EXTRUSION NO. . BAC1530-3 X 23.8 IN. LG)		1
13	65-18200-79	. SEAL, INBOARD WING LEADING EDGE SLAT (EXTRUSION NO. . BAC1530-3 X 18.9 IN. LG)		1
13A	65-18200-76	. SEAL, INBOARD WING LEADING EDGE SLAT (EXTRUSION NO. . BAC1530-3 X 29.5 IN. LG)		3
14	65-18200-75	. SEAL, INBOARD WING LEADING EDGE SLAT (EXTRUSION NO. . BAC1530-3 X 18.7 IN. LG)		3
15	65-18200-74	. SEAL, INBOARD WING LEADING EDGE SLAT (EXTRUSION NO. . BAC1530-3 X 21.5 IN. LG)		1
16	65-18200-73	. SEAL, INBOARD WING LEADING EDGE SLAT (EXTRUSION NO. . BAC1530-3 X 5.8 IN. LG)		1
17	65-18200-41	. RETAINER, INBOARD WING LEADING EDGE SLAT SEAL (LH . . ONLY)		1
17	65-18200-42	. RETAINER, INBOARD WING LEADING EDGE SLAT SEAL (RH . . ONLY)		1
		ATTACHING PARTS		
	NAS600-7	. SCREW		11
	AN960PD4L	. WASHER.		11


MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
16	NAS679A04W	. NUT		11
		-------*-------		
17A	65-18200-85	. SKIN, (LH ONLY)		1
17A	65-18200-86	. SKIN, (RH)		1
18	65-18200-45	. SEAL, INBOARD WING LEADING EDGE SLAT (EXTRUSION NO. BAC1530-3 X 19.4 IN. LG) (LH ONLY)		1
18	65-18200-46	. SEAL, INBOARD WING LEADING EDGE SLAT (EXTRUSION NO. BAC1530-3 X 19.4 IN. LG) (RH ONLY)		1
19	69-17284-6	. MAGNET ASSY, OUTBOARD NACELLE LEADING EDGE SLAT SEAL		1
		ATTACHING PARTS		
	BACB30BF3K20	. BOLT		2
	BACS47G9F16F	. SHIM		2
	BACS40H9-16	. SHIM		AR
		-------*-------		
20	MS20470A6	. . RIVET		4
21	69-17284-3	. . ANGLE, OUTBOARD NACELLE LEADING EDGE SLAT SEAL SIDE		2
22	LG1	. . MAGNET, (PERMAG PACIFIC CORP)		5
		ATTACHING PARTS		
	NAS623-3-5W	. . SCREW		2
	AN960PD416	. . WASHER		2
		-------*-------		
22A	69-17284-7	. MAGNET ASSY, OUTBOARD NACELLE LEADING EDGE SLAT SEAL		1
		ATTACHING PARTS		
	BACB30BF3K20	. BOLT		2
	BACS47G9F16F	. SHIM		2
	BACS40H9-16	. SHIM		AR
		-------*-------		
22B	MS20470A6	. . RIVET		3
22C	69-17284-8	. . ANGLE, OUTBOARD NACELLE LEADING EDGE SLAT SEAL SIDE		1
22D	69-17284-9	. . ANGLE, OUTBOARD NACELLE LEADING EDGE SLAT SEAL SIDE		1
22E	LG1	. . MAGNET, (PERMAG PACIFIC CORP)		4
23C	69-16950-3	. PAN, INBOARD WING PANEL SEAL (LH ONLY)		1
23C	69-16950-4	. PAN, INBOARD WING PANEL SEAL (RH ONLY)		1
24	BACS40B13-136	. SHIM		AR
25	65-41676-5	. PANEL ASSY, INBOARD WING LEADING EDGE SLAT SEAL SUPPORT (LH ONLY)		1
25	65-41676-6	. PANEL ASSY, INBOARD WING LEADING EDGE SLAT SEAL SUPPORT (RH ONLY)		1
		ATTACHING PARTS		
	NAS517-3-7	. SCREW		2
	NAS517-3-3	. SCREW		3
	AN960PD10	. WASHER		2
	AN960PD10L	. WASHER		3
	NAS679A3W	. NUT		5
		-------*-------		
27	65-41676-3	. PANEL ASSY, INBOARD WING LEADING EDGE SLAT SEAL SUPPORT (LH ONLY)		1
27	65-41676-4	. PANEL ASSY, INBOARD WING LEADING EDGE SLAT SEAL SUPPORT (RH ONLY)		1
		ATTACHING PARTS		
	NAS517-3-3	. SCREW		5
	AN960PD10L	. WASHER		5
	NAS679A3W	. NUT		5
		-------*-------		
28	65-41676-25	. PANEL ASSY, INBOARD WING LEADING EDGE SLAT SEAL SUPPORT (LH ONLY)		1
28	65-41676-26	. PANEL ASSY, INBOARD WING LEADING EDGE SLAT SEAL SUPPORT (RH ONLY)		1
		ATTACHING PARTS		
	NAS517-3-3	. SCREW		4
	AN960PD10L	. WASHER		4
	NAS679A3W	. NUT		4
		-------*-------		
29	65-41676-1	. PANEL ASSY, INBOARD WING LEADING EDGE SLAT SEAL SUPPORT (LH ONLY) (OPTIONAL 65-20858-17)		1
29	65-20858-17	. PANEL ASSY, INBOARD WING LEADING EDGE SLAT SEAL SUPPORT (LH ONLY) (OPTIONAL TO 65-41676-1)		1
29	65-41676-2	. PANEL ASSY, INBOARD WING LEADING EDGE SLAT SEAL SUPPORT (RH ONLY)		1
		ATTACHING PARTS		
	NAS517-3-3	. SCREW		2
	AN3-4A	. BOLT		1
	AN960PD10L	. WASHER		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
16	AN960-10L	. WASHER.		1
	NAS679A3W	. NUT		3
		-------*-------		
30	66-13962-1	. ANGLE, INBOARD WING LEADING EDGE CLIP (LH ONLY) . . .		1
30	66-13962-2	. ANGLE, INBOARD WING LEADING EDGE CLIP (RH ONLY) . . .		1
31	66-13962-3	. ANGLE, INBOARD WING LEADING EDGE CLIP (RH ONLY) . . .		1
31	66-13962-4	. ANGLE, INBOARD WING LEADING EDGE CLIP (LH ONLY) . . .		1
32	65-18200-25	. STRIP, INBOARD WING LEADING EDGE SLAT SEAL SUPPORT. . PANEL RUB		1
33	65-18200-28	. PLATE, INBOARD WING LEADING EDGE SLAT SEAL SUPPORT. . PANEL SEAL		1
34	65-18200-27	. PLATE, INBOARD WING LEADING EDGE SLAT SEAL SUPPORT. . PANEL SEAL		1
35	65-18200-26	. PLATE, INBOARD WING LEADING EDGE SLAT SEAL SUPPORT. . PANEL SEAL		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

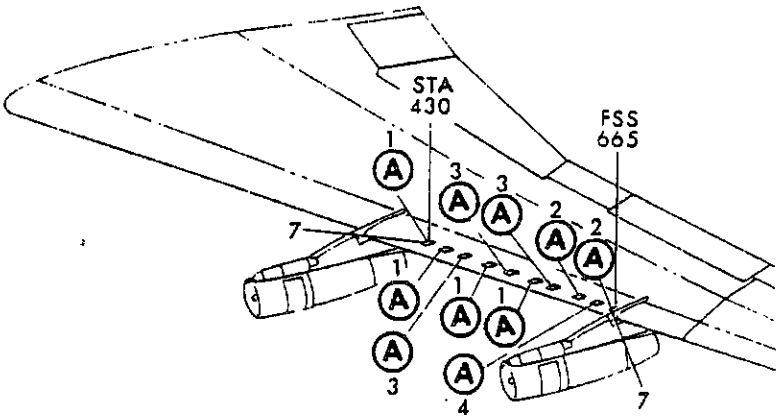

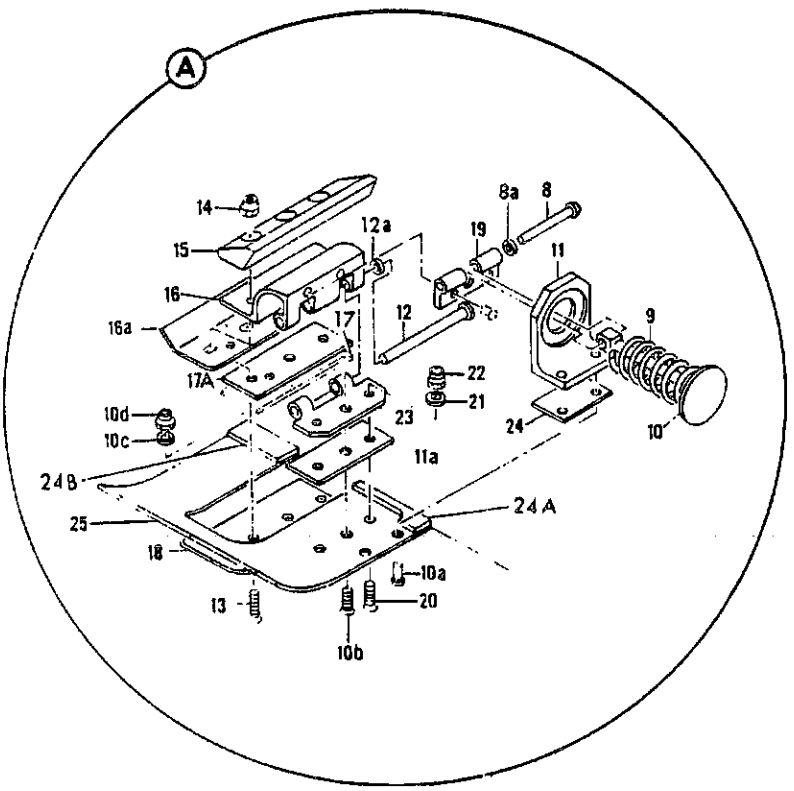


FIGURE 17. DOOR INSTL, LEADING EDGE STATIONGE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
17 1	65-28747-1	DOOR INSTL, LEADING EDGE SLAT HINGE (LH) (SEE 57-4, FIG. 10, ITEM 1B)		RF
1	65-28747-2	DOOR INSTL, LEADING EDGE SLAT HINGE (RH) (SEE 57-4, FIG. 10, ITEM 1B)		RF
2	65-28747-3	DOOR INSTL, LEADING EDGE SLAT HINGE (LH) (SEE 57-4, FIG. 10, ITEM 2)		RF
2	65-28747-4	DOOR INSTL, LEADING EDGE SLAT HINGE (RH) (SEE 57-4, FIG. 10, ITEM 2)		RF
3	65-28747-2	DOOR INSTL, LEADING EDGE SLAT HINGE (LH) (SEE 57-4, FIG. 10, ITEM 3)		RF
3	65-28747-1	DOOR INSTL, LEADING EDGE SLAT HINGE (RH) (SEE 57-4, FIG. 10, ITEM 3)		RF
4	65-28747-4	DOOR INSTL, LEADING EDGE SLAT HINGE (LH) (SEE 57-4, FIG. 10, ITEM 4)		RF
4	65-28747-3	DOOR INSTL, LEADING EDGE SLAT HINGE (RH) (SEE 57-4, FIG. 10, ITEM 4)		RF
7	65-28747-13	. DOOR ASSY, (USED ON 65-28747-1)		1
7	65-28747-14	. DOOR ASSY, (USED ON 65-28747-2)		1
7	65-28747-15	. DOOR ASSY, (USED ON 65-28747-3)		1
7	65-28747-16	. DOOR ASSY, (USED ON 65-28747-4)		1
8	MS20392-1-51	. . PIN		1
8A	AN960PD4L	. . WASHER.		1
9	66-16921-2	. . SPRING, COMPRESSION		1
10	69-22690-1	. . RETAINER, LEADING EDGE SLAT HINGE SPRING.		1
10A	MS2042605	. . RIVET		2
10B	NAS517-3-7	. . SCREW		1
10C	AN960PD10	. . WASHER.		1
10D	NAS679A3W	. . NUT		1
11	69-22689-1	. . FITTING, SPRING SUPPORT (USED ON 65-28747-6, -8, -14 AND -16)		1
11	69-22689-2	. . FITTING, SPRING SUPPORT (USED ON 65-28747-5, -7, -13 AND -15)		1
11A	69-14519-10	. . FILLER, LEADING EDGE SLAT HINGE DOOR.		1
12	MS20392-1-65	. . PIN		1
12A	AN960PD4L	. . WASHER.		1
13	NAS517-2-1	. . SCREW		3
14	NAS679A08W	. . NUT		3
15	69-15374-3	. . BLOCK, RUB (USED ON 65-28747-5, -7, -13 AND -15).		1
15	69-15374-4	. . BLOCK, RUB (USED ON 65-28747-6, -8, -14 AND -16).		1
16	69-48808-1	. . HINGE (USED ON 65-28747-13 AND -15)		1
16	69-48808-2	. . HINGE (USED ON 65-28747-14 AND -16)		1
16A	65-28747-12	. . SEAL, LEADING EDGE SLAT HINGE DOOR TEFLON		1
17	69-14519-15	. . FILLER, LEADING EDGE SLAT HINGE DOOR.		1
17A	BACS40R10B24F	. . SHIM.		AR
18	69-14519-17	. . DOOR, (USED ON 65-28747-5 AND -13).		1
18	69-14519-18	. . DOOR, (USED ON 65-28747-6 AND -14).		1
18	69-14519-19	. . DOOR, (USED ON 65-28747-7 AND -15).		1
18	69-14519-20	. . DOOR, (USED ON 65-28747-8 AND -16).		1
20	NAS517-3-5	. . SCREW		2
21	AN960PD10	. . WASHER.		2
22	NAS679A3W	. . NUT		2
23	69-13766-6	. . HINGE, LEADING EDGE SLAT DOOR		1
24	65-28747-10	. . FILLER, LEADING EDGE SLAT HINGE DOOR.		1
24A	65-28747-9	. . FILLER.		1
24B	65-28747-11	. . FILLER.		1
25	69-14518-5	. . FRAME, (USED ON 65-28747-5 AND -13)		1
25	69-14518-6	. . FRAME, (USED ON 65-28747-6 AND -14)		1
25	69-14518-7	. . FRAME, (USED ON 65-28747-7 AND -15)		1
25	69-14518-8	. . FRAME, (USED ON 65-28747-8 AND -16)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING Intercontinental 707

PARTS CATALOG

SECTION 15

SLAT CONTROL

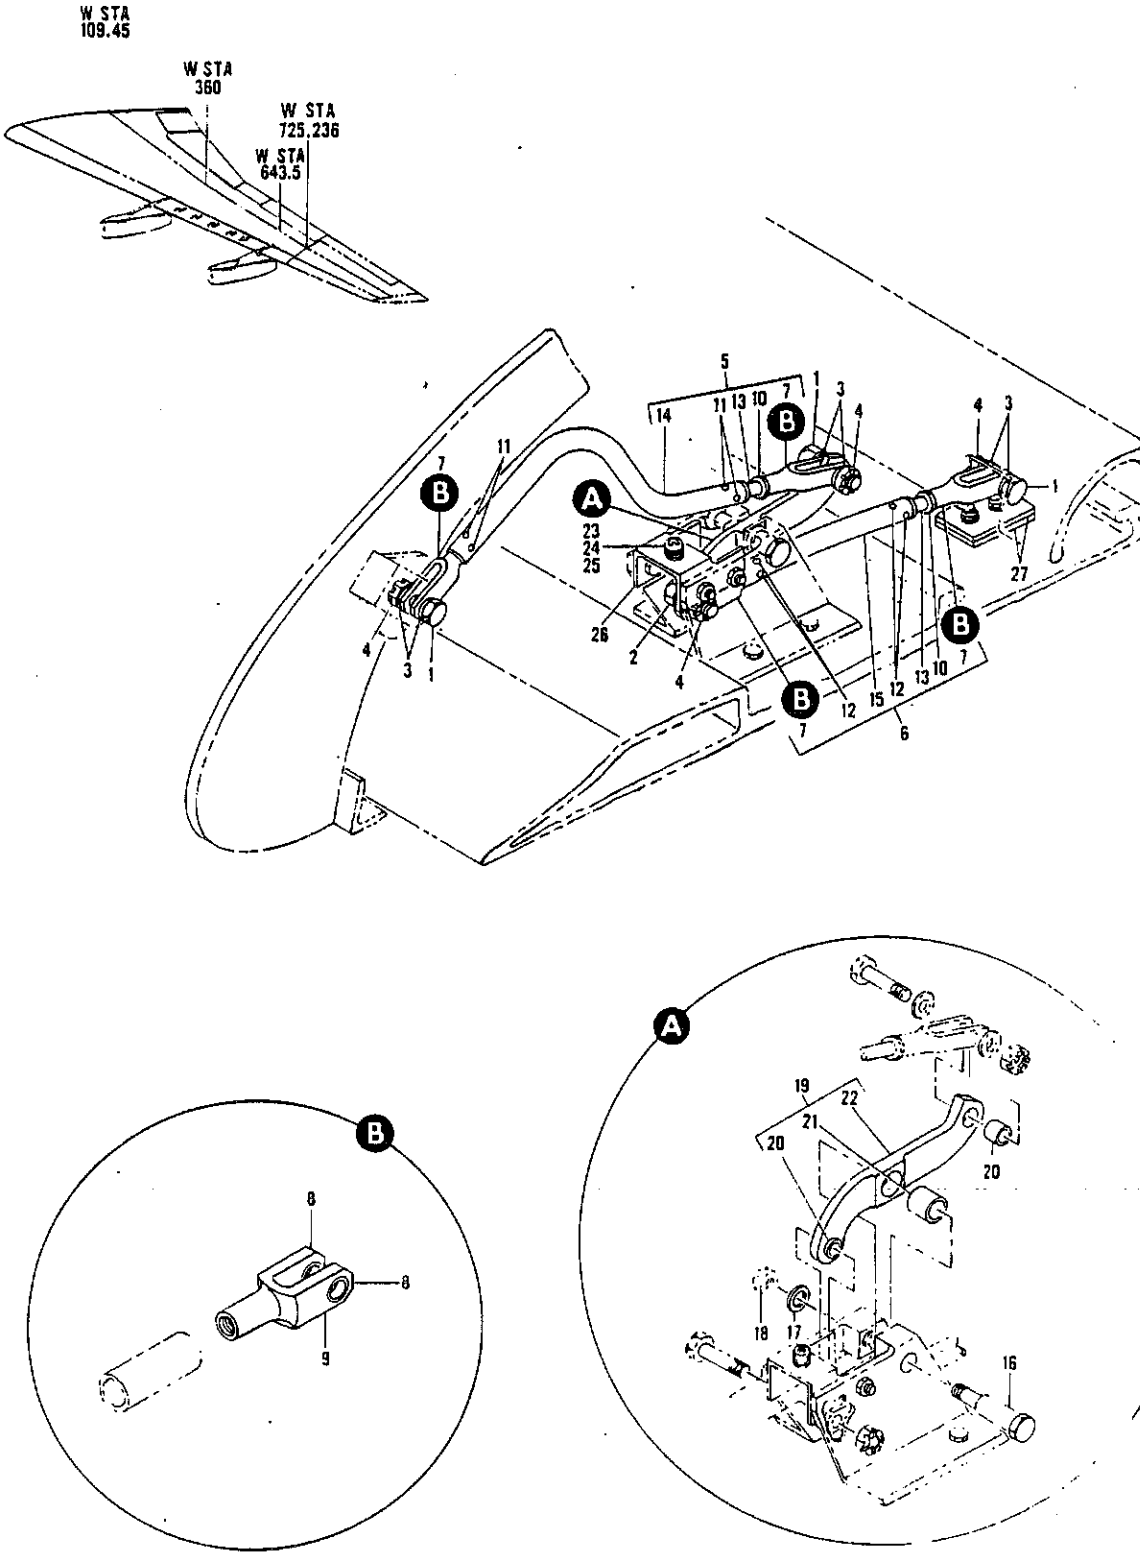


FIGURE 3. LINK INSTL, INBOARD WING LEADING EDGE SLAT MECHANISM

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3	65-20863-3	LINK INSTL, INBOARD WING LEADING EDGE SLAT MECHANISM. (LH) (SEE 27-14, FIG. 7, ITEM 8)	0103	RF
	65-20863-4	LINK INSTL, INBOARD WING LEADING EDGE SLAT MECHANISM. (RH) (SEE 27-14, FIG. 7, ITEM 8)	0103	RF
1	BACB30GE4D13	. BOLT.	0103	3
2	BACB30GE4D12	. BOLT.	0103	1
3	AN960C416L	. WASHER.	0103	6
4	AN320-4	. NUT	0103	4
5	69-24912-2	. LINK ASSY, INBOARD WING FAIRING SLAT FORWARD.	0103	1
6	69-24912-1	. LINK ASSY, INBOARD WING FAIRING SLAT AFT.	0103	1
7	69-24760-1	. . CLEVIS ASSY, INBOARD WING FAIRING SLAT ROD END.	0103	2
8	10-60516-104	. . . BUSHING, SELF LUBRICATED JOURNAL.	0103	2
9	69-24760-2	. . . CLEVIS, INBOARD WING FAIRING SLAT ROD END	0103	1
10	AN316-4R	. . NUT	0103	1
11	NAS508M4-4	. . RIVET, (USED ON 69-24912-2)	0103	4
12	MS20470D4-4	. . RIVET, (USED ON 69-24912-1)	0103	4
13	66-19328-1	. . ROD END, INBOARD WING FAIRING SLAT THREADED	0103	1
14	69-24912-4	. . TUBE, INBOARD WING FAIRING SLAT FORWARD LINK. (USED ON 69-24912-2)	0103	1
15	69-24912-3	. . TUBE, INBOARD WING FAIRING SLAT AFT LINK (USED ON 69-24912-1)	0103	1
16	66-19176-1	. BOLT, SHOULDER SHANK (ALTERED FROM NAS1106-26W)	0103	1
17	AN960PD416	. WASHER.	0103	1
18	AN320-4	. NUT	0103	1
19	69-24783-1	. LINK ASSY, INBOARD WING FAIRING SLAT CENTER (LH ONLY)	0103	1
19	69-24783-2	. LINK ASSY, INBOARD WING FAIRING SLAT CENTER (RH ONLY)	0103	1
20	10-60516-105	. . BUSHING, SELF LUBRICATED JOURNAL.	0103	2
21	10-60516-107	. . BUSHING, SELF LUBRICATED JOURNAL.	0103	1
22	69-24783-3	. . LINK, INBOARD WING FAIRING SLAT CENTER (LH ONLY).	0103	1
22	69-24783-4	. . LINK, INBOARD WING FAIRING SLAT CENTER (RH ONLY).	0103	1
23	NAS603-12	. SCREW	0103	1
24	AN960PD10	. WASHER.	0103	AR
25	AN960PD10L	. WASHER.	0103	1
26	66-18381-1	. STOP ASSY, INBOARD WING FAIRING SLAT LINKAGE (LH. ONLY)	0103	1
26	66-18381-2	. STOP ASSY, INBOARD WING FAIRING SLAT LINKAGE (RH. ONLY)	0103	1
		ATTACHING PARTS		
	NAS1103-3W	. BOLT.	0103	4
	BACS40B12-25	. SHIM.	0103	1
	AN960PD10L	. WASHER.	0103	4
	NAS679A3W	. NUT	0103	4
		-------*-------		
27	66-17343-3	. PAD, INBOARD WING LINKAGE STOP RUBBER	0103	2
		ATTACHING PARTS		
	NAS517-3-6	. SCREW	0103	2
	NAS43DD3-15	. SPACER.	0103	2
	AN960PD10L	. WASHER.	0103	4
	NAS679A3W	. NUT	0103	2
		-------*-------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

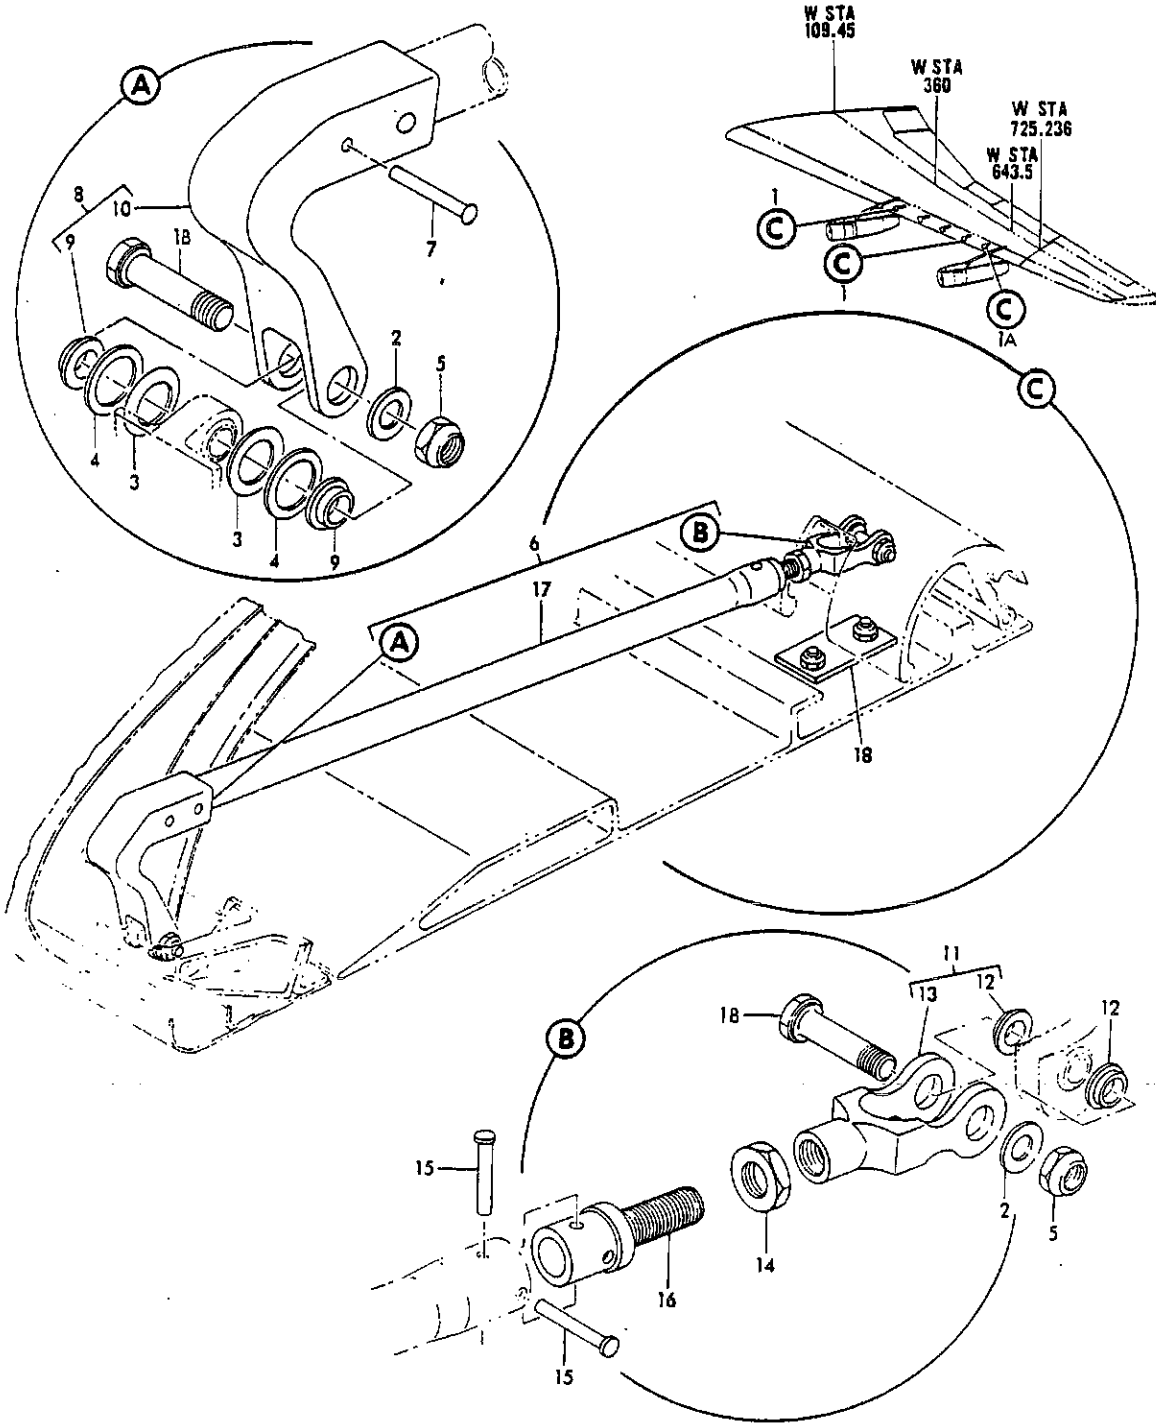
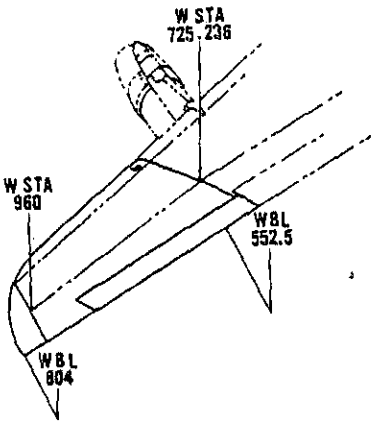


FIGURE 3A. LINK INSTL, INBOARD WING LEADING EDGE SLAT MECHANISM

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3A 1	65-20863-7	LINK INSTL, INBOARD WING LEADING EDGE SLAT MECHANISM. (SEE 27-14, FIG. 7, ITEM 8A)	0499	RF
1A	65-20863-7	LINK INSTL, INBOARD WING LEADING EDGE SLAT MECHANISM. (SEE 27-14, FIG. 7, ITEM 8B)	0499	RF
1B	NAS1104-13	. BOLT.	0499	2
2	AN960PD416	. WASHER.	0499	2
3	69-54088-1	. WASHER.	0499	2
4	69-54088-2	. WASHER.	0499	2
5	NAS679A4W	. NUT	0499	2
6	69-54438-1	. LINK ASSY	0499	1
7	MS20615-5M16	. . RIVET	0499	2
8	65-66254-1	. . CLEVIS ASSY	0499	1
9	NAS77A4-10P	. . . BUSHING	0499	2
10	65-66254-2	. . . CLEVIS.	0499	1
11	69-54040-1	. . FORK ASSY	0499	1
12	NAS77A4-10P	. . . BUSHING	0499	2
13	69-54040-2	. . . FORK.	0499	1
14	AN316-5R	. . NUT	0499	1
15	MS20615-5M13	. . RIVET	0499	2
16	AN490HT10P	. . ROD END	0499	1
17	69-54432-1	. . TUBE.	0499	1
18	66-17343-3	. PAD	0499	1
		ATTACHING PARTS		
	BACB30LU3-3	. BOLT.	0499	2
	NAS4330D3-7	. SPACER.	0499	2
	AN960PD10L	. WASHER.	0499	2
	NAS679A3W	. NUT	0499	2

MISSING ITEM NUMBERS ARE NOT APPLICABLE



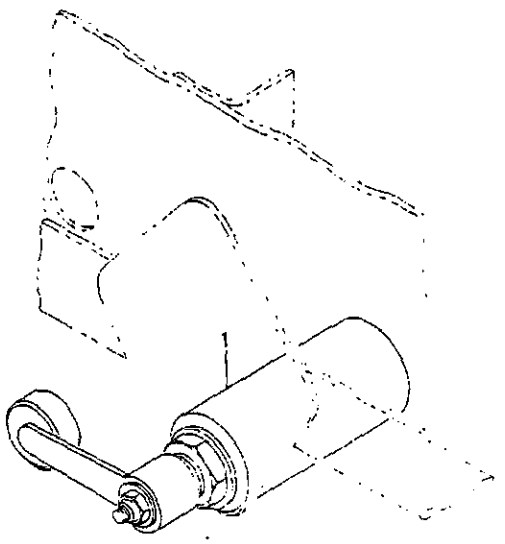
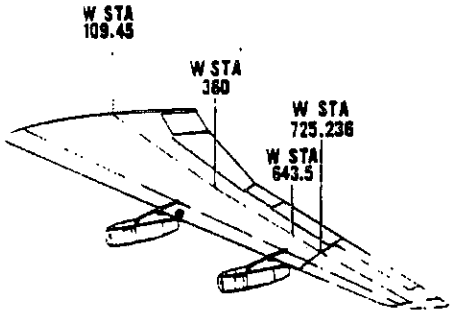


FIGURE 5. SWITCH INSTL, OUTBOARD WING LEADING EDGE SLATS POSITION

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5	65-19526-1	SWITCH INSTL, OUTBOARD WING LEADING EDGE SLATS POSITION (SEE 24-2, FIG. 12, ITEM 8)	0103	RF
	65-19526-2	SWITCH INSTL, OUTBOARD WING LEADING EDGE SLATS POSITION (SEE 24-2, FIG. 12, ITEM 8)	0499	RF
1	H11-183	. SWITCH, (V97198). . . . . (OPTIONAL 131EN27-2 (V91929))		1
1	131EN27-2	. SWITCH, (V91929). . . . . (OPTIONAL TO H11-183 (V97198))		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



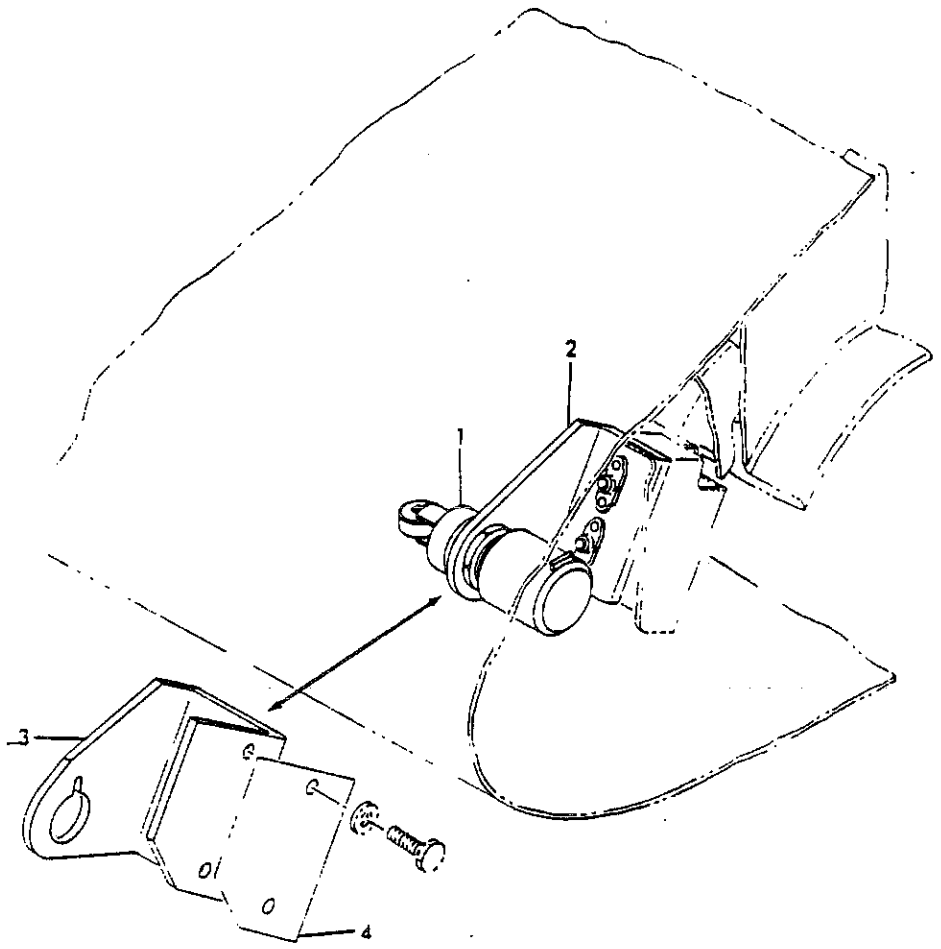
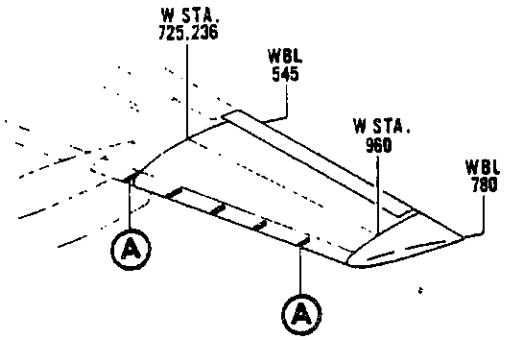


FIGURE 6. SWITCH INSTL. FRONT SPAR STA 434 WING LEADING EDGE FLAPS POSITION

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
6	65-19599-1	SWITCH INSTL, FRONT SPAR STATION 434 WING LEADING EDGE FLAPS POSITION (LH) (SEE 24-2, FIG. 12, ITEM 7)		RF
	65-19599-2	SWITCH INSTL, FRONT SPAR STATION 434 WING LEADING EDGE FLAPS POSITION (RH) (SEE 24-2, FIG. 12, ITEM 7)		RF
1	H11-181	. SWITCH, (V97198) (OPTIONAL 121EN93-2 (V91929)). . . .		1
1	121EN93-2	. SWITCH, (V91929) (OPTIONAL TO H11-181 (V97198)) . . .		1
2	69-15403-9	. BRACKET ASSY, SWITCH SUPPORT (LH ONLY).		1
2	69-15403-10	. BRACKET ASSY, SWITCH SUPPORT (RH ONLY).		1
		ATTACHING PARTS		
	NAS603-7	. SCREW		3
		-------*--------		

MISSING ITEM NUMBERS ARE NOT APPLICABLE



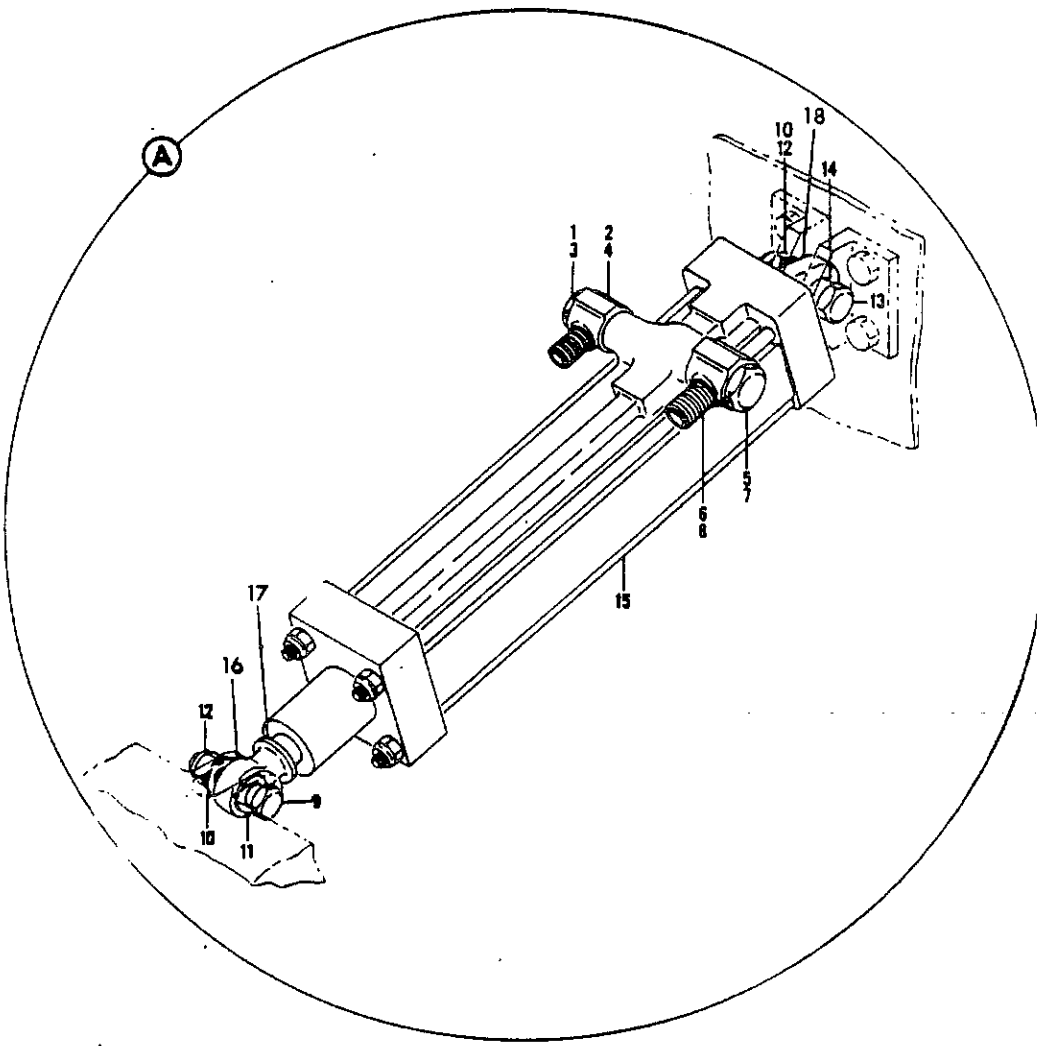


FIGURE 7. ACTUATOR INSTL, OUTBOARD LEADING EDGE FLAP

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	7	65-18727-1	ACTUATOR INSTL, OUTBOARD LEADING EDGE FLAP (DELETED BY SB 2956) (LH) (SEE 29-2, FIG. 16, ITEM 67 AND 29-2, FIG. 16A, ITEM 74)	0150	RF
		65-18727-3	ACTUATOR INSTL, OUTBOARD LEADING EDGE FLAP (ADDED BY SB 2956) (LH) (SEE 29-2, FIG. 16, ITEM 67 AND 29-2, FIG. 16A, ITEM 74)	0150	RF
		65-18727-2	ACTUATOR INSTL, OUTBOARD LEADING EDGE FLAP (DELETED BY SB 2956) (RH) (SEE 29-2, FIG. 16, ITEM 67 AND 29-2, FIG. 16A, ITEM 74)	0150	RF
		65-18727-4	ACTUATOR INSTL, OUTBOARD LEADING EDGE FLAP (ADDED BY SB 2956) (RH) (SEE 29-2, FIG. 16, ITEM 67 AND 29-2, FIG. 16A, ITEM 74)	0150	RF
		65-18727-3	ACTUATOR INSTL, OUTBOARD LEADING EDGE FLAP (LH) (SEE. . 29-2, FIG. 16, ITEM 67 AND 29-2, FIG. 16A, ITEM 74)	5199	RF
		65-18727-4	ACTUATOR INSTL, OUTBOARD LEADING EDGE FLAP (RH) (SEE. . 29-2, FIG. 16, ITEM 67 AND 29-2, FIG. 16A, ITEM 74)	5199	RF
	9	NAS1106-18DW	. BOLT, (DELETED BY SB 2956).	0150	5
	9	BACB30LJ6DU18	. BOLT.	5199	5
	9	BACB30LJ6DU18	. BOLT, (ADDED BY SB 2956).	0150	5
	10	AN960C616	. WASHER.		10
	11	66-9266-10	. BUSHING, (DELETED BY SB 2956)	0150	5
	11	BACB28Y6B41	. BUSHING	5199	5
	11	BACB28Y6B41	. BUSHING, (ADDED BY SB 2956)	0150	5
	12	AN380-3-3	. NUT . . . . . (OPTIONAL NAS679A6W)	5199	10
	12	NAS679A6W	. NUT . . . . . (OPTIONAL TO AN380-3-3)	5199	10
	12	AN320-6	. NUT, (DELETED BY SB 2956)	0150	10
	12	AN380-3-3	. NUT, (ADDED BY SB 2956) . . . . . (OPTIONAL NAS679A6W (ADDED BY SB 2956))	0150	10
	12	NAS679A6W	. NUT, (ADDED BY SB 2956) . . . . . (OPTIONAL TO AN380-3-3 (ADDED BY SB 2956))	0150	10
	13	NAS1106-17DW	. BOLT, (DELETED BY SB 2956).	0150	5
	13	BACB30LJ6DU17	. BOLT.	5199	5
	13	BACB30LJ6DU17	. BOLT, (ADDED BY SB 2956).	0150	5
	14	66-9266-14	. BUSHING, PRESSED FIT STRUCTURAL (DELETED BY SB 2956)	0150	5
	14	66-9266-15	. BUSHING	5199	5
R	14	BACB28U7B37	. BUSHING, (ADDED BY SB 2956)	0450	5
R	14	BACB28U7B37	. BUSHING, (ADDED BY SB 2956 AND DELETED BY SB 2956). .	0103	5
R	14	66-9266-15	. BUSHING, PRESSED FIT STRUCTURAL (ADDED BY SB 2956). .	0103	5
	15	10-60514-13	. ACTUATOR ASSY		5

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING PROPRIETARY, CONFIDENTIAL, AND / OR TRADE SECRET COPYRIGHT © The Boeing Company Unpublished Work -All Rights Reserved

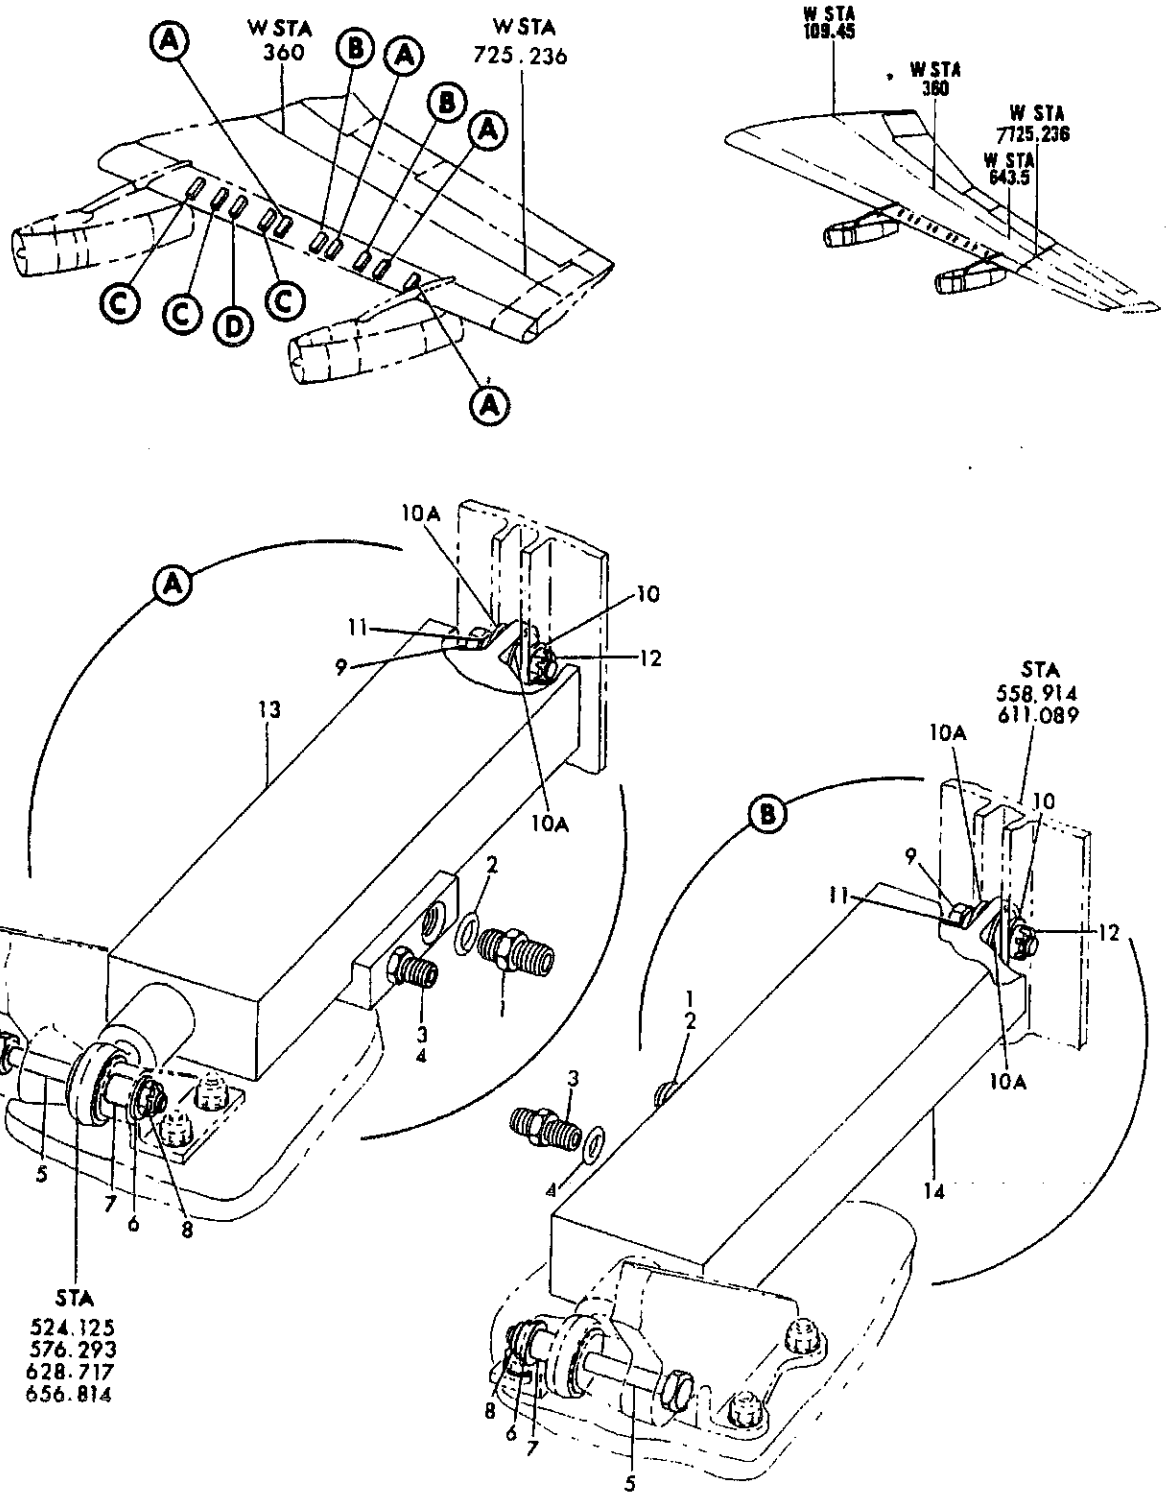


FIGURE 8. ACTUATOR INSTL, MID WING LEADING EDGE FLAP (SHEET 1)

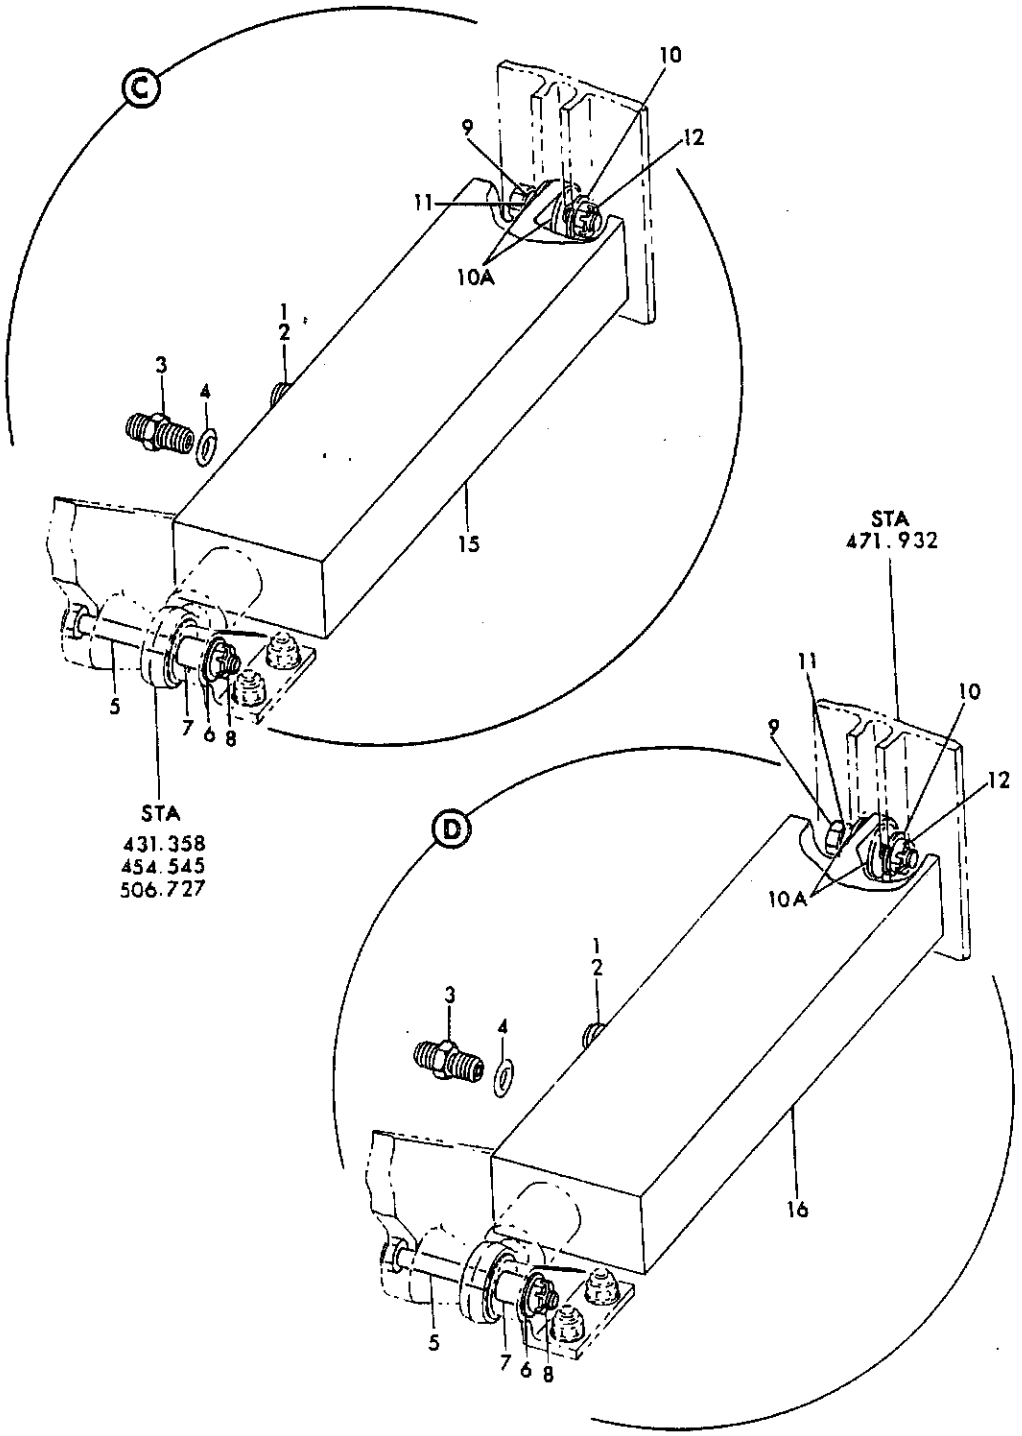
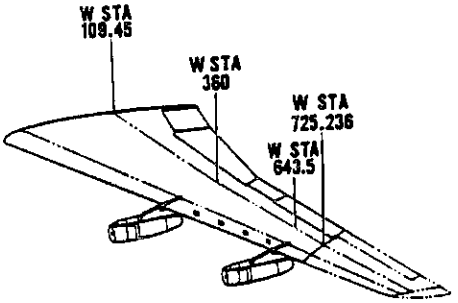


FIGURE 8. ACTUATOR INSTL, MID WING LEADING EDGE FLAP (SHEET 2)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R R R R R	8	65-18728-1	ACTUATOR INSTL, MID WING LEADING EDGE FLAP (DELETED BY SB 2956) (LH) (SEE 29-2, FIG. 13, ITEM 49)	0150	RF
		65-18728-3	ACTUATOR INSTL, MID WING LEADING EDGE FLAP (ADDED BY SB 2956) (LH) (SEE 29-2, FIG. 13, ITEM 49)	0150	RF
		65-18728-2	ACTUATOR INSTL, MID WING LEADING EDGE FLAP (DELETED BY SB 2956) (RH) (SEE 29-2, FIG. 13, ITEM 49)	0150	RF
		65-18728-4	ACTUATOR INSTL, MID WING LEADING EDGE FLAP (ADDED BY SB 2956) (RH) (SEE 29-2, FIG. 13, ITEM 49)	0150	RF
		65-18728-3	ACTUATOR INSTL, MID WING LEADING EDGE FLAP (LH) (SEE. . 29-2, FIG. 13, ITEM 49)	5199	RF
		65-18728-4	ACTUATOR INSTL, MID WING LEADING EDGE FLAP (RH) (SEE. . 29-2, FIG. 13, ITEM 49)	5199	RF
	1	MS21902-6	. UNION		10
	2	BACP11H6	. PACKING		10
	3	MS21902-4	. UNION		10
	4	BACP11H4	. PACKING		10
R	5	NAS1106-48DW	. BOLT, (DELETED BY SB 2956)	0150	10
R	5	BACB30LJ6DU48	. BOLT	5199	10
R	5	BACB30LJ6DU48	. BOLT, (ADDED BY SB 2956)	0150	10
	6	AN960C616	. WASHER		10
R	7	NAS76AS-025P	. BUSHING, (DELETED BY SB 2956)	0150	10
R	7	BACB28Y6B78	. BUSHING	5199	10
R	7	BACB28Y6B78	. BUSHING, (ADDED BY SB 2956)	0150	10
	8	AN320-6	. NUT		10
R	9	NAS1106-17DW	. BOLT, (DELETED BY SB 2956)	0150	10
R	9	BACB30LJ6DU17	. BOLT	5199	10
R	9	BACB30LJ6DU17	. BOLT, (ADDED BY SB 2956)	0150	10
	10	AN960C616	. WASHER		10
	10A	66-18234-1	. WASHER, LEADING EDGE FLAP ACTUATOR NYLON		20
R	11	NAS76A6-012P	. BUSHING, (DELETED BY SB 2956)	0150	10
R	11	BACB28Y6B38	. BUSHING	5199	10
R	11	BACB28Y6B38	. BUSHING, (ADDED BY SB 2956)	0150	10
	12	AN320-6	. NUT		10
	13	10-60514-2	. ACTUATOR ASSY, LEADING EDGE FLAP (LH ONLY)		4
	13	10-60514-1	. ACTUATOR ASSY, LEADING EDGE FLAP (RH ONLY)		4
	14	10-60514-1	. ACTUATOR ASSY, LEADING EDGE FLAP (LH ONLY)		2
	14	10-60514-2	. ACTUATOR ASSY, LEADING EDGE FLAP (RH ONLY)		2
	15	10-60514-3	. ACTUATOR ASSY, LEADING EDGE FLAP (LH ONLY)		3
	15	10-60514-4	. ACTUATOR ASSY, LEADING EDGE FLAP (RH ONLY)		3
	16	10-60514-4	. ACTUATOR ASSY, LEADING EDGE FLAP (LH ONLY)		1
	16	10-60514-3	. ACTUATOR ASSY, LEADING EDGE FLAP (RH ONLY)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



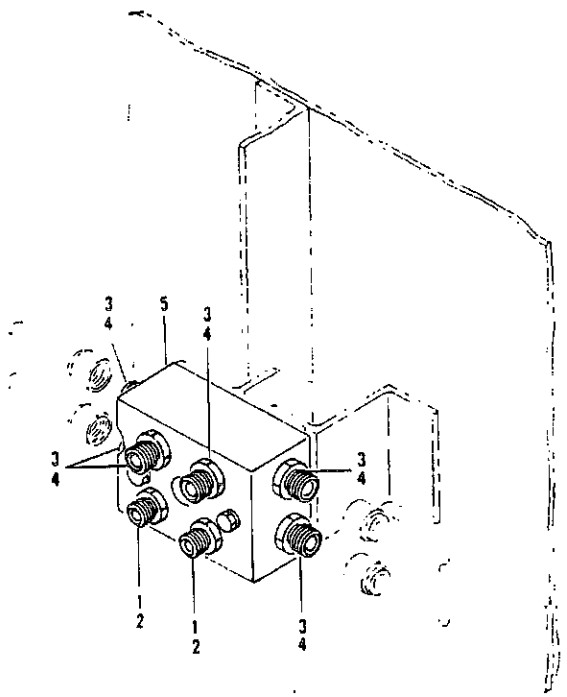
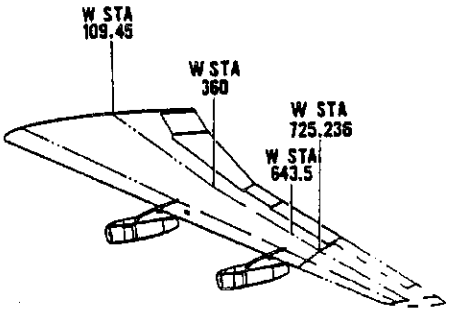


FIGURE 9. MANIFOLD INSTL, LEADING EDGE FLAP HYDRAULIC SYSTEM

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
9	69-16376-1	MANIFOLD INSTL, LEADING EDGE FLAP HYDRAULIC SYSTEM (LH) (SEE 29-2, FIG. 12, ITEM 48 AND 29-2, FIG. 13, ITEM 47)		RF
	69-16376-2	MANIFOLD INSTL, LEADING EDGE FLAP HYDRAULIC SYSTEM (RH) (SEE 29-2, FIG. 12, ITEM 48 AND 29-2, FIG. 13, ITEM 47)		RF
1	MS21902-4	. UNION		2
2	BACP11H4	. PACKING		2
3	MS21902-6	. UNION		6
4	BACP11H6	. PACKING		6
5	66-13281-1	. MANIFOLD, LEADING EDGE FLAP HYDRAULIC SYSTEM. . . . . (OPTIONAL TO 66-13281-2)		1
5	66-13281-2	. MANIFOLD, LEADING EDGE FLAP HYDRAULIC SYSTEM. . . . . (OPTIONAL 66-13281-1)		1
		ATTACHING PARTS		
	AN3-17A	. BOLT.		2
	AN960D10	. WASHER.		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE



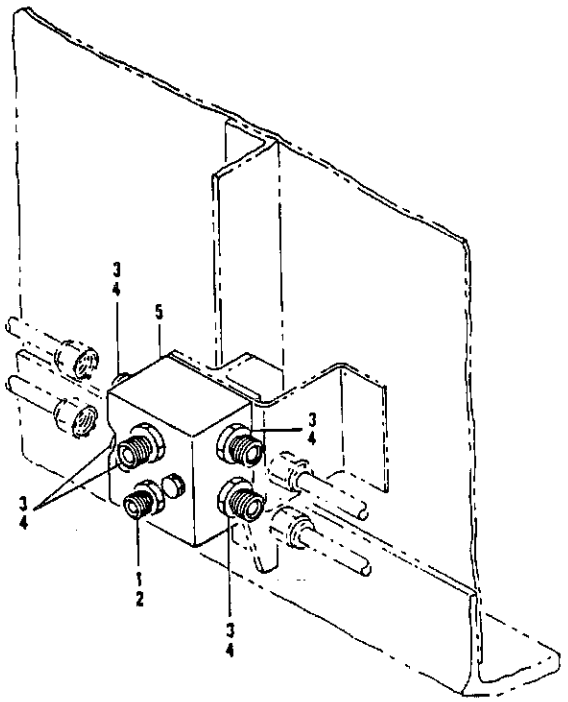


FIGURE 10. MANIFOLD INSTL, LEADING EDGE FLAP HYDRAULIC SYSTEM

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
10	69-16376-3	MANIFOLD INSTL, LEADING EDGE FLAP HYDRAULIC SYSTEM (LH) (SEE 29-2, FIG. 12, ITEM 49 AND 29-2, FIG. 13, ITEM 48)		RF
	69-16376-4	MANIFOLD INSTL, LEADING EDGE FLAP HYDRAULIC SYSTEM (RH) (SEE 29-2, FIG. 12, ITEM 49 AND 29-2, FIG. 13, ITEM 48)		RF
1	MS21902-4	. UNION		1
2	BACP11H4	. PACKING		1
3	MS21902-6	. UNION		5
4	BACP11H6	. PACKING		5
5	66-13282-1	. MANIFOLD, LEADING EDGE FLAP HYDRAULIC SYSTEM. . . . . (OPTIONAL TO 66-13282-2)		1
5	66-13282-2	. MANIFOLD, LEADING EDGE FLAP HYDRAULIC SYSTEM. . . . . (OPTIONAL 66-13282-1)		1
		ATTACHING PARTS		
	AN3-17A	. BOLT.		2
	AN960D10	. WASHER.		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

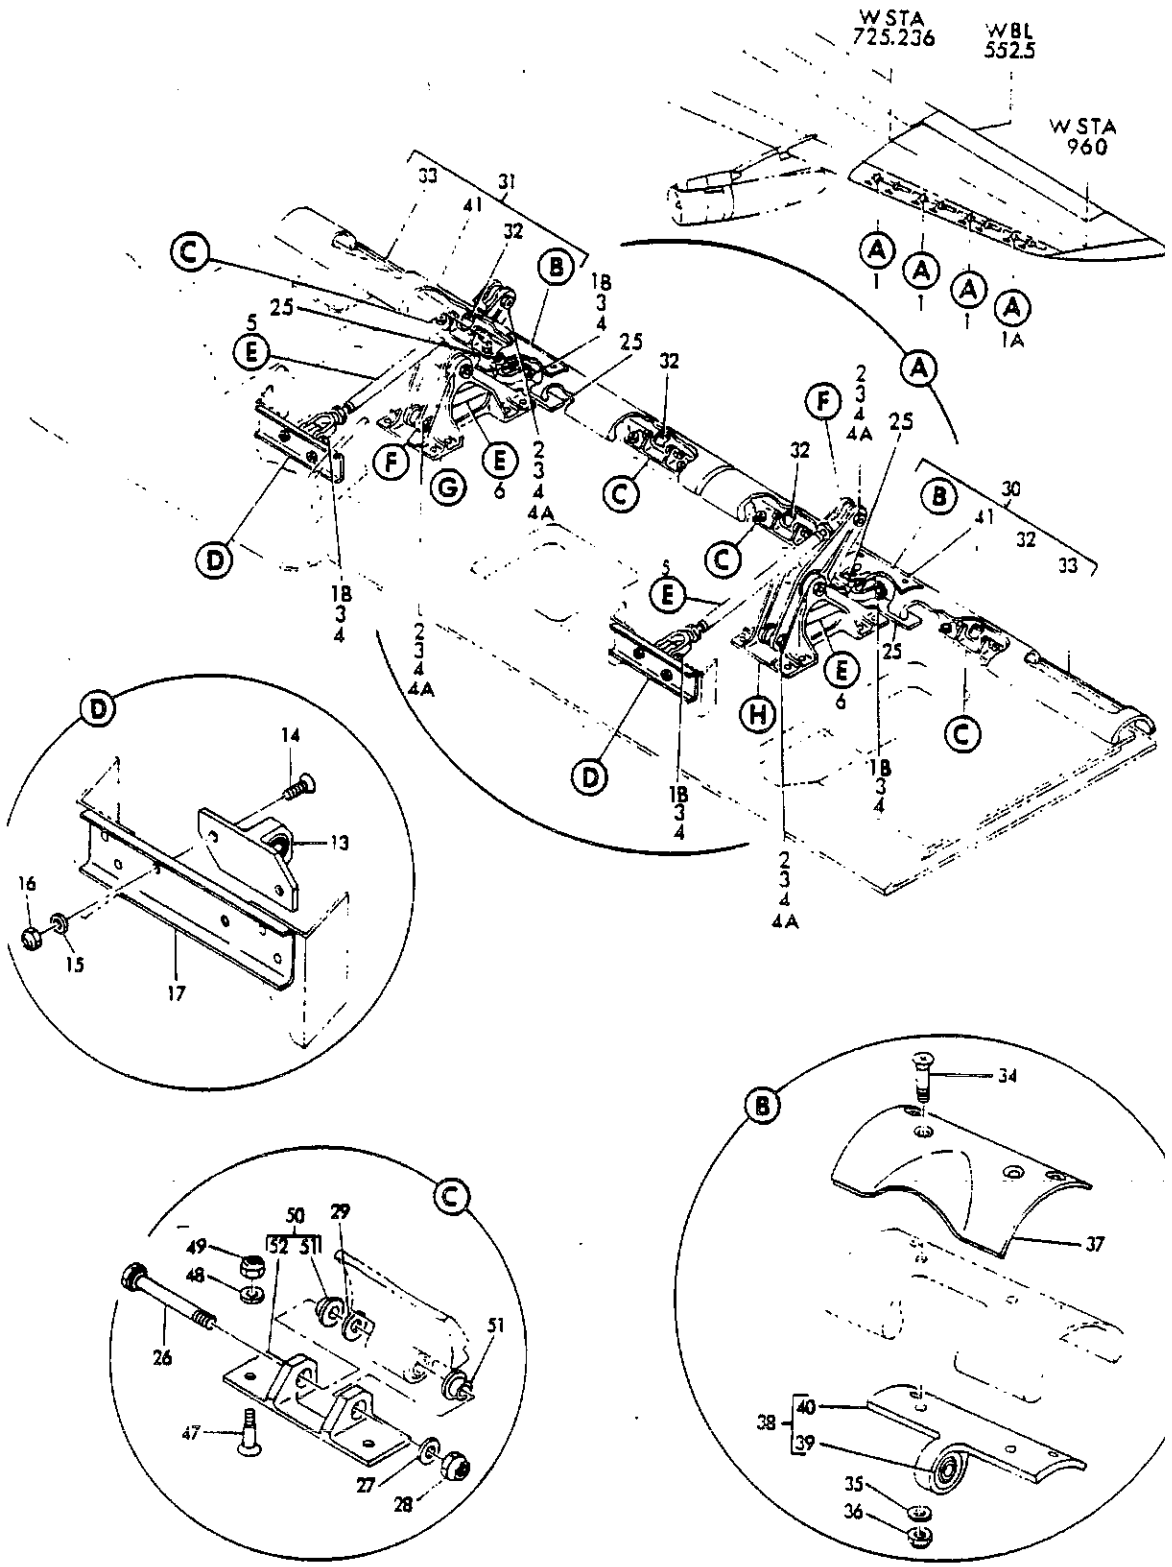


FIGURE 12. MECHANISM INSTL, OUTBOARD WING LEADING EDGE SLAT NOSE FAIRING (SHEET 1)

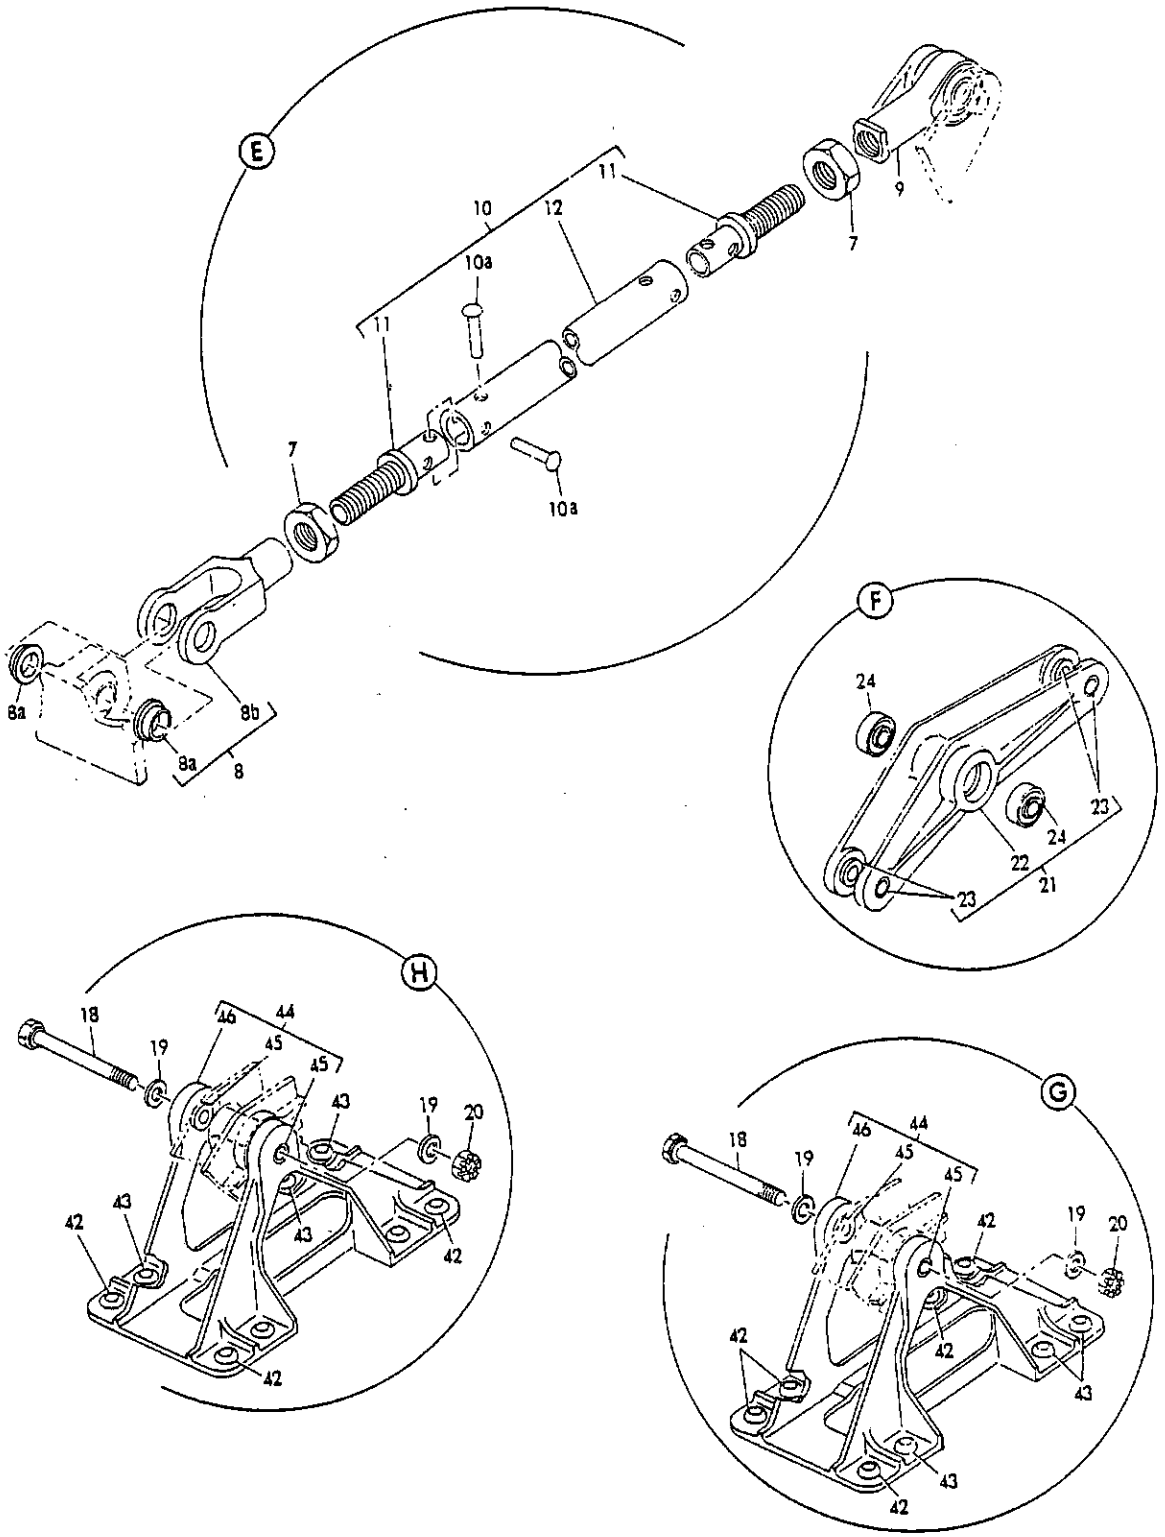


FIGURE 12. MECHANISM INSTL. OUTBOARD WING LEADING EDGE SLAT NOSE FAIRING (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
12 1	65-64825-1	MECHANISM INSTL, OUTBOARD WING LEADING EDGE SLAT NOSE FAIRING (SEE 27-14, FIG. 4A, ITEM 1)	0499	RF
1	65-64825-1	MECHANISM INSTL, OUTBOARD WING LEADING EDGE SLAT NOSE FAIRING (ADDED BY SB 2651) (SEE 27-14, FIG. 4A, ITEM 1)	0103	RF
1A	65-64825-1651	MECHANISM INSTL, OUTBOARD WING LEADING EDGE SLAT NOSE FAIRING (LH) (SEE 27-14, FIG. 4A, ITEM 1)	0499	RF
1A	65-64825-1651	MECHANISM INSTL, OUTBOARD WING LEADING EDGE SLAT NOSE FAIRING (LH) (ADDED BY SB 2651) (SEE 27-14, FIG. 4A, ITEM 1)	0103	RF
1A	65-64825-1652	MECHANISM INSTL, OUTBOARD WING LEADING EDGE SLAT NOSE FAIRING (RH) (SEE 27-14, FIG. 4A, ITEM 1)	0499	RF
1A	65-64825-1652	MECHANISM INSTL, OUTBOARD WING LEADING EDGE SLAT NOSE FAIRING (RH) (ADDED BY SB 2651) (SEE 27-14, FIG. 4A, ITEM 1)	0103	RF
1B	NAS1104-14D	. BOLT.		4
2	BACB30GE4D16	. BOLT.		4
3	AN960PD416	. WASHER.		16
4	AN320-4	. NUT		8
4A	BACS40R10B37F	. SHIM.		4
5	69-51536-1	. ROD ASSY, LINK.		2
6	69-51536-2	. ROD ASSY, LINK.		2
7	NAS509-5	. . NUT		2
8	69-54040-1	. . FORK ASSY		1
8A	NAS77A4-10P	. . . BUSHING		2
8B	69-54040-2	. . . FORK.		1
9	BACB10N54	. . BEARING (OPTIONAL MS21243S04)		1
9	MS21243S04	. . BEARING (OPTIONAL TO BACB10N54)		1
10	69-51536-3	. . ROD ASSY, (USED ON 69-51536-1).		1
10	69-51536-4	. . ROD ASSY, (USED ON 69-51536-2).		1
10A	MS20470D5-5	. . . RIVET		4
11	AN490HT15P	. . . ROD, END.		2
12	69-51536-5	. . . TUBE, (USED ON 69-51536-3).		1
12	69-51536-6	. . . TUBE, (USED ON 69-51536-4).		1
	69-51535-1	. ATTACH ASSY, FITTING.		2
13	69-51537-1	. . FITTING ASSY.		1
14	BACB30LU3-4	. . BOLT.		2
15	AN960PD10	. . WASHER.		2
16	NAS679A3W	. . NUT		2
17	69-51535-3	. . CHANNEL		1
18	NAS1104-35D	. BOLT.		2
19	AN960PD416	. WASHER.		4
20	AN320-4	. NUT		2
21	65-64238-1	. CRANK ASSY.		2
22	65-64238-2	. . CRANK		1
23	NAS77A4-20P	. . BUSHING		4
24	BACB10A661	. . BEARING		2
25	69-54284-1	. PAD		4
26	NAS1104-26D	. BOLT.		4
27	AN960PD416	. WASHER.		4
28	AN320-4	. NUT		4
29	69-54285-1	. WASHER, SHIM.		AR
30	65-64864-2	. FAIRING ASSY, (USED ON 65-64825-1, -1651)	0150	1
30	65-64864-16A	. FAIRING ASSY, (USED ON 65-64825-1, -1651) (OPTIONAL 65-64864-2)	5199	1
30	65-64864-2	. FAIRING ASSY, (USED ON 65-64825-1, -1651) (OPTIONAL TO 65-64864-16A)	5199	1
30	65-64864-1651	. FAIRING ASSY, (LH) (USED ON 65-64825-1651).	0150	1
30	65-64864-17A	. FAIRING ASSY, (LH) (USED ON 65-64825-1651). (OPTIONAL 65-64864-1651)	5199	1
30	65-64864-1651	. FAIRING ASSY, (LH) (USED ON 65-64825-1651). (OPTIONAL TO 65-64864-17A)	5199	1
31	65-64864-1	. FAIRING ASSY, (USED ON 65-64825-1, -1652)	0150	1
31	65-64864-15A	. FAIRING ASSY, (USED ON 65-64825-1, -1652) (OPTIONAL 65-64864-1)	5199	1
31	65-64864-1	. FAIRING ASSY, (USED ON 65-64825-1, -1652) (OPTIONAL TO 65-64864-15A)	5199	1
31	65-64864-1652	. FAIRING ASSY, (RH) (USED ON 65-64825-1652).	0150	1
31	65-64864-18A	. FAIRING ASSY, (RH) (USED ON 65-64825-1652). (OPTIONAL 65-64864-1652)	5199	1
31	65-64864-1652	. FAIRING ASSY, (RH) (USED ON 65-64825-1652). (OPTIONAL TO 65-64864-18A)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
12 32	BACB28AB4-104	. . BEARING		2
33	65-64864-9	. . SEAL, (EXTRUSION NO. BAC1521-709 X 39.0 IN. LG)		1
34	BACB30EL3-6	. . BOLT.		4
35	AN960PD10	. . WASHER.		4
36	NAS679A3W	. . NUT		4
37	69-55333-1	. . COVER, GAP.		1
38	69-52140-1	. . FITTING ASSY.		1
39	10-60545-143S	. . . BEARING		1
40	69-52140-2	. . . FITTING		1
41	65-64864-1653	. . FAIRING, (LH ONLY) (USED ON 65-64864-1651).		1
41	65-64864-12	. . FAIRING, (USED ON 65-64864-2)		1
41	65-64864-20A	. . FAIRING, (USED ON 65-64864-16A)	5199	1
41	65-64864-21A	. . FAIRING, (LH ONLY) (USED ON 65-64864-17A)	5199	1
41	65-64864-1654	. . FAIRING, (RH ONLY) (USED ON 65-64864-1652).		1
41	65-64864-11	. . FAIRING, (USED ON 65-64864-1)		1
41	65-64864-19A	. . FAIRING, (USED ON 65-64864-15A)	5199	1
41	65-64864-22A	. . FAIRING, (RH ONLY) (USED ON 65-64864-18A)	5199	1
42	CKLXP6G	. RIVET, (V29666) (OPT TO NAS1398B6G)		10
42	NAS1398B6G	. RIVET (OPT CKLXP6G (V29666))		10
43	CKLXP6H	. RIVET, (V29666) (OPT TO NAS1398B6H)		6
43	NAS1398B6H	. RIVET (OPT CKLXP6H (V29666))		6
44	65-64239-3	. BRACKET ASSY. (OPTIONAL 69-58966-3)		2
44	69-58966-3	. BRACKET ASSY. (OPTIONAL TO 65-64239-3)		2
45	NAS77A4-20P	. . BUSHING		2
46	65-64239-4	. . BRACKET		1
47	BACB30LU3-4	. BOLT.		8
48	AN960PD10	. WASHER.		8
49	NAS679A3W	. NUT		8
50	69-52139-1	. HINGE ASSY.		4
51	NAS77A4-20P	. . BUSHING		2
52	69-52139-2	. . HINGE		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

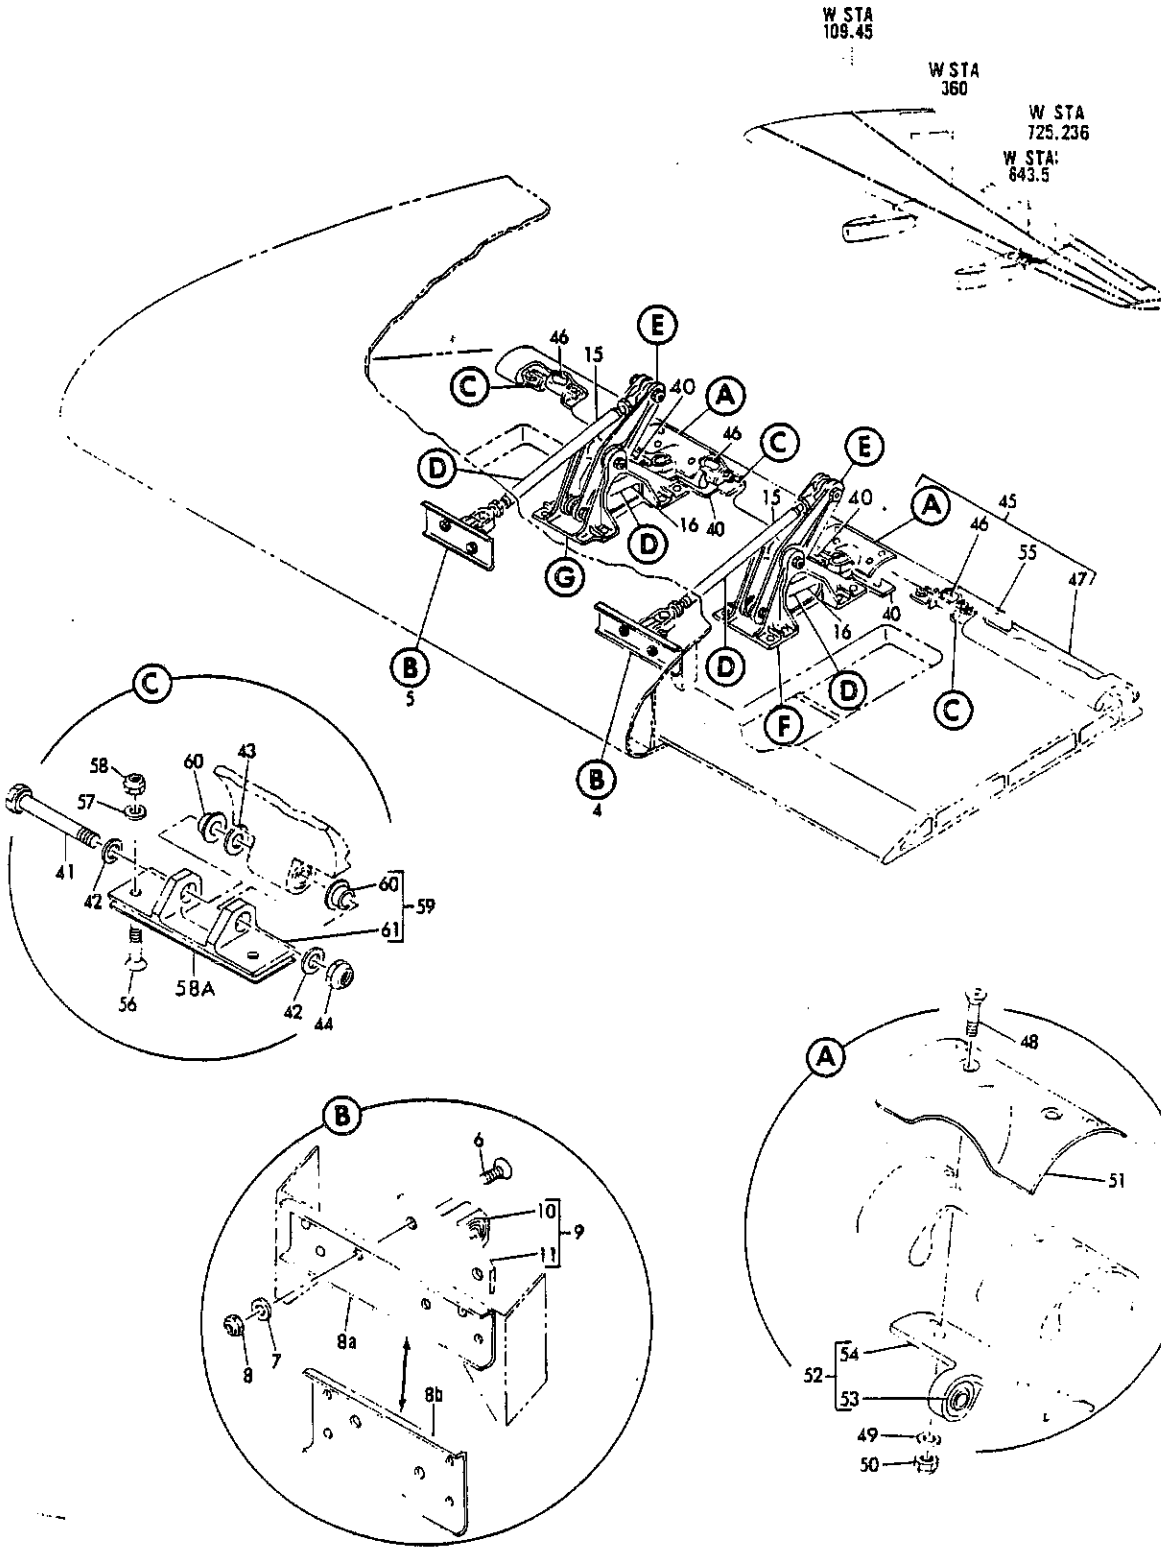


FIGURE 13 MECHANISM INSTL, OUTBOARD WING LEADING SLAT NOSE FAIRING

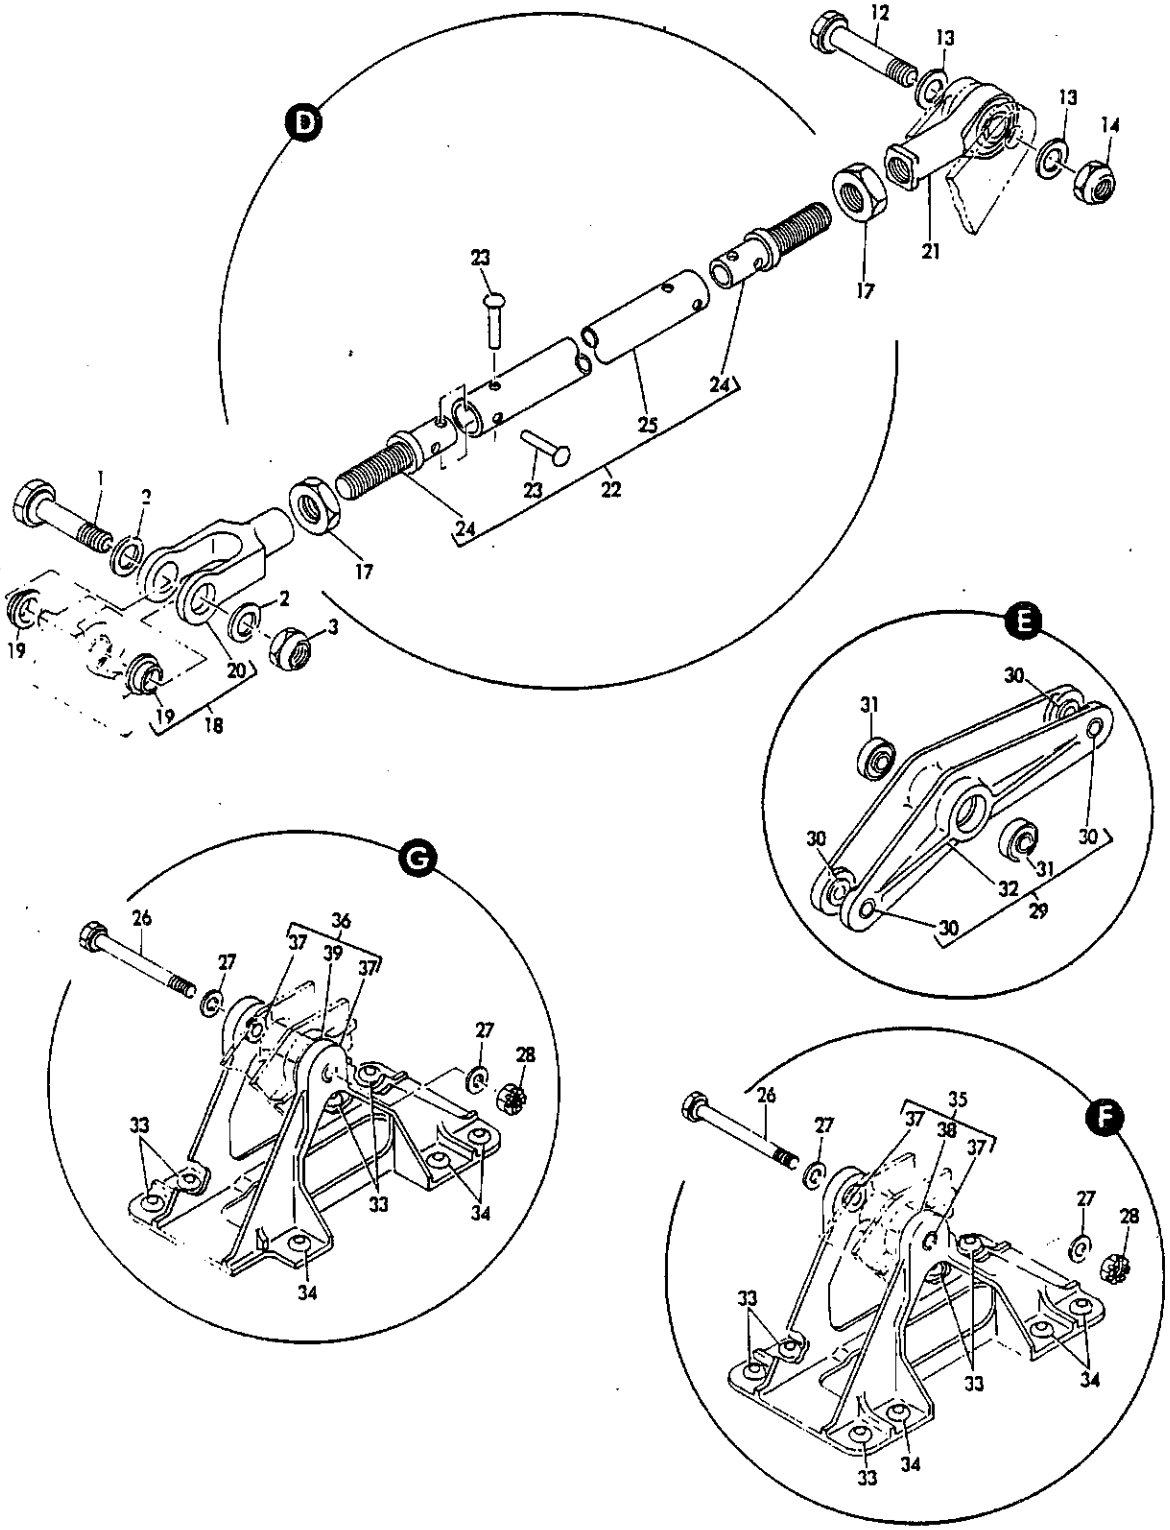


FIGURE 13. MECHANISM INSTL, OUTBOARD WING LEADING SLAT NOSE FAIRING (SHEET 2)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
13	65-64825-3	MECHANISM INSTL, OUTBOARD WING LEADING EDGE SLAT NOSE FAIRING (LH) (SEE 27-14, FIG. 8A, ITEM 2)	0499	RF
	65-64825-3	MECHANISM INSTL, OUTBOARD WING LEADING EDGE SLAT NOSE FAIRING (LH) (ADDED BY SB 2651) (SEE 27-14, FIG. 8A, ITEM 2)	0103	RF
	65-64825-4	MECHANISM INSTL, OUTBOARD WING LEADING EDGE SLAT NOSE FAIRING (RH) (SEE 27-14, FIG. 8A, ITEM 2)	0499	RF
	65-64825-4	MECHANISM INSTL, OUTBOARD WING LEADING EDGE SLAT NOSE FAIRING (RH) (ADDED BY SB 2651) (SEE 27-14, FIG. 8A, ITEM 2)	0103	RF
1	NAS1104-14D	. BOLT		4
2	AN960PD416	. WASHER		8
3	AN320-4	. NUT		4
4	69-51535-1	. FITTING ASSY, UPPER LINK ATTACH		1
5	69-51535-2	. FITTING ASSY, UPPER LINK ATTACH		1
6	BACB30LU3-4	. . BOLT		2
7	AN960PD10	. . WASHER		2
8	NAS679A3W	. . NUT		2
8A	69-51535-3	. . CHANNEL, (USED ON 65-51535-1)		1
8B	69-51535-4	. . CHANNEL, (USED ON 65-51535-2)		1
9	69-51537-1	. . FITTING ASSY		1
10	10-60545-143S	. . . BEARING		1
11	69-51537-2	. . . FITTING		1
12	BACB30GE4D16	. BOLT		4
13	AN960PD416	. WASHER		8
14	AN320-4	. NUT		4
15	69-51536-1	. ROD ASSY		2
16	69-51536-2	. ROD ASSY		2
17	NAS509-5	. . NUT		2
18	69-54040-1	. . FORK ASSY		1
19	NAS77A4-10P	. . . BUSHING		2
20	69-54040-2	. . . FORK		1
21	BACB10N54	. . BEARING (OPTIONAL MS21243S04)		1
21	MS21243S04	. . BEARING (OPTIONAL TO BACB10N54)		1
22	69-51536-3	. . ROD ASSY, (USED ON 69-51536-1)		1
22	69-51536-4	. . ROD ASSY, (USED ON 69-51536-2)		1
23	MS20470D5-5	. . . RIVET		4
24	AN490HT15P	. . . ROD, END		2
25	69-51536-5	. . . TUBE, (USED ON 69-51536-3)		1
25	69-51536-6	. . . TUBE, (USED ON 69-51536-4)		1
26	NAS1104-35D	. BOLT		2
27	AN960PD416	. WASHER		4
28	AN320-4	. NUT		2
29	65-64238-1	. BELLCRANK ASSY		2
30	NAS77A4-20P	. . BUSHING		4
31	BACB10A661	. . BEARING		2
32	65-64238-2	. . BELLCRANK, (ALTERED FROM 65-64238-3)		1
35	65-64239-3	. BRACKET ASSY. (OPTIONAL 69-58966-3)		1
35	69-58966-3	. BRACKET ASSY. (OPTIONAL TO 65-64239-3)		1
36	65-64239-1	. BRACKET ASSY, (USED ON 65-64825-3). (OPTIONAL 69-58966-1)		1
36	69-58966-1	. BRACKET ASSY, (USED ON 65-64825-3). (OPTIONAL TO 65-64239-1)		1
36	65-64239-2	. BRACKET ASSY, (USED ON 65-64825-4). (OPTIONAL 69-58966-2)		1
36	69-58966-2	. BRACKET ASSY, (USED ON 65-64825-4). (OPTIONAL TO 65-64239-2)		1
37	NAS77A4-20P	. . BUSHING		2
38	65-64239-4	. . BRACKET, (USED ON 65-64239-3)		1
39	65-64239-5	. . BRACKET, (USED ON 65-64239-1)		1
39	65-64239-6	. . BRACKET, (USED ON 65-64239-2)		1
40	69-54284-1	. PAD		4
41	NAS1104-26D	. BOLT		3
42	AN960PD416	. WASHER		6
43	69-54285-1	. WASHER		AR
44	AN320-4	. NUT		3
45	65-64864-3	. FAIRING ASSY, (USED ON 65-64825-3)		1
45	65-64864-4	. FAIRING ASSY, (USED ON 65-64825-4)		1
46	BACB28AB4-104	. . BEARING		3
47	65-64864-10	. . SEAL, (EXTRUSION NO. BAC1521-709 X 39 IN. LG)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
13 48	BACB3EL3-5	. . BOLT.		8
49	AN960PD10	. . WASHER.		8
50	NAS679A3W	. . NUT		8
51	69-55333-1	. . COVER, GAP.		2
52	69-52140-1	. . FITTING ASSY, ATTACH.		2
53	10-60545-143S	. . . BEARING		1
54	69-52140-2	. . . FITTING		1
55	65-64864-13	. . FAIRING, (USED ON 65-64864-3)		1
55	65-64864-14	. . FAIRING, (USED ON 65-64864-4)		1
56	BACB30LU3-4	. BOLT.		6
57	AN960PD10	. WASHER.		6
58	NAS679A3W	. NUT		6
58A	BACS40R10B37F	. SHIM.		3
59	69-52139-1	. HINGE ASSY.		3
60	NAS77A4-20P	. . BUSHING		2
61	69-52139-2	. . FITTING		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE