

BOEING 707 **PARTS CATALOG (MAINTENANCE)**

CHAPTER 33

LIGHTS

TABLE OF CONTENTS

SECTION	FIGURE
33-01 NAVIGATION LIGHTS	
ANGLE INSTL, WING TIP LANDING LIGHT SUPPORT ATTACHMENT	15
CAN ASSY, LOWER BEACON LIGHT PRESSURE	5
LIGHT ASSY, AIRCRAFT NAVIGATIONAL ROTATING BEACON	3D
LIGHT INSTL, LANDING AND TAXI LH.	13
LIGHT INSTL, LANDING AND TAXI RH.	13
LIGHT INSTL, NOSE GEAR TAXI	1
LIGHT INSTL, RETRACTABLE LANDING	15
LIGHT INSTL, STATION 1672 TAIL	7
LIGHT INSTL, STATION 930 BEACON	3
LIGHT INSTL, STATION 930, 960N AND 995.60 BEACON	2
LIGHT INSTL, WING BUTTOCK LINE 779.18 WING TIP NAVIGATION	11
PANEL INSTL, WING TIP LANDING LIGHT SUPPORT	15
STRIP INSTL, STATION 1616 TAIL LIGHT TERMINAL	9
STRIP INSTL, UPPER BEACON LIGHT TERMINAL	4
STRUCTURE INSTL, WING LEADING EDGE LANDING LIGHT.	12
33-02 EXTERIOR SERVICE LIGHTS	
FAIRING ASSEMBLY INSTL.	25
LIGHT ASSY, EMERGENCY EGRESS	19
LIGHT INSTL, ESCAPE SLIDE ILLUMINATION	7
LIGHT INSTL, MAIN WHEEL WELL	2
LIGHT INSTL, NOSE GEAR WHEEL WELL	1
LIGHT INSTL, PRESSURE FUELING CONTROL	4
LIGHT INSTL, SECTION 53 AND 56 OVERWING ESCAPE ILLUMINATION	12
LIGHT INSTL, SUPPLEMENTAL ANTI-COLLISION	22
LIGHT INSTL, WING SCANNING.	3
POWER SUPPLY INSTL, ESCAPE SLIDE ILLUMINATION	7
SWITCH INSTL, EXTERIOR EMERGENCY LIGHT	7
SWITCH INSTL, MAIN WHEEL WELL LIGHT	2
33-03 CONTROL CABIN LIGHTING	
BALLAST INSTL, FLIGHT ENGINEERS PANEL DIMMING	20
BALLAST INSTL, NAVIGATORS TABLE FLUORESCENT LIGHTS.	19D
CABINET INSTL, NAVIGATOR.	23
CONTROL UNIT INSTL, MASTER WARNING LIGHT.	36
EQUIPMENT INSTL, CONTROL CAB EMERGENCY.	41
FILTER INSTL, CONTROL CABIN FLUORESCENT BALLAST	24
FLOODLIGHT INSTL, MAIN AC POWER SHIELD	15
FLOODLIGHT INSTL, MAIN AC POWER SHIELD.	15A
LIGHT INSTL, CONTROL CABIN DOME	1
LIGHT INSTL, CONTROL CABIN MISCELLANEOUS	2
LIGHT INSTL, COPILOTS MAP	2C
LIGHT INSTL, COPILOTS MAP	7A
LIGHT INSTL, FLIGHT ENGINEERS TABLE	3
LIGHT INSTL, J-1 RELAY SHIELD	15
LIGHT INSTL, PILOTS MAP	2C
LIGHT INSTL, PILOTS MAP	7A
LIGHTSHIELD INSTL, CAPTAIN AND FIRST OFFICER P15 PANEL.	11A
LIGHTSHIELD INSTL, FLIGHT ENGINEERS	12
LIGHTSHIELD INSTL, PILOT AND COPILOT.	11
PANEL ASSY, P3 CIRCUIT BREAKER.	38
PANEL ASSY, RADIO AND T-R CIRCUIT BREAKER	39H
PANEL INSTL, MISSION COORDINATOR STATION.	10A
SPOTLIGHT ASSY, PILOTS AND COPILOTS MAP	13E
SPOTLIGHT INSTL, RADIO CIRCUIT BREAKER PANEL.	13
33-04 COMPARTMENT LIGHTING	
BALLAST INSTL, WINDOW LIGHT	224
BOX ASSY, ELECTRICAL DISCONNECT	70R
BOX INSTL, AFT GALLEY CEILING FLUORESCENT LIGHT DISCONNECT.	75
BOX INSTL, AFT LOWERED CEILING LIGHTS DISCONNECT.	76
BOX INSTL, FORWARD GALLEY CEILING FLUORESCENT LIGHT DISCONNECT	71
BOX INSTL, FORWARD LOWERED CEILING LIGHTS DISCONNECT.	72
BOX INSTL, LH AFT COAT COMPARTMENT ELECTRICAL DISCONNECT.	76D
BOX INSTL, MURAL LIGHT AND LOUDSPEAKER DISCONNECT	73
BOX INSTL, STATION 1144 CENTER LOWERED CEILING LIGHT DISCONNECT	74
BOX INSTL, STATION 804 CENTER LOWERED CEILING LIGHT DISCONNECT.	74

BOEING 707 **PARTS CATALOG (MAINTENANCE)**

SECTION

FIGURE

COVE INSTL, PASSENGER CABIN	18D
COVER ASSY, WINDOW PANEL	207L
FLOODLIGHT INSTL, MAIN CABIN CARGO	84
FLOODLIGHT INSTL, STATION 1484 AND 1475 TAIL COMPARTMENT	87
LAMP ASSY, FLUORESCENT	6P
LIGHT ASSY, CEILING DOME	203
LIGHT ASSY, PASSENGER SERVICE UNIT ADJUSTABLE READING	195
LIGHT INSTL, AIR CONDITIONING COMPARTMENT	85
LIGHT INSTL, CABIN INTERIOR	6C
LIGHT INSTL, CARGO COMPARTMENT CEILING AND DOOR ILLUMINATION	82
LIGHT INSTL, CARGO WALL PASSENGER AREA INDIRECT	83
LIGHT INSTL, FORWARD GALLEY FLUORESCENT	22
LIGHT INSTL, SECTION 51 AND 53 DOME	61
LIGHT INSTL, SECTION 53 AND 56 CARGO COMPARTMENT DOME	77
LIGHT INSTL, STATION 316.5 AND STATION 344 LOWER SECTION 41 RH	67L
LIGHT INSTL, TOILET COMPARTMENT DOME	28
LIGHT SUB ASSY, EMERGENCY EXIT	204
LIGHTING INSTL, MAIN CABIN	6F
MIRROR AND LIGHT INSTL, MODIFICATION, TOILET A	32
MIRROR AND LIGHT INSTL, TOILET A	32
MIRROR AND LIGHT INSTL, TOILET C	34
MIRROR AND LIGHT INSTL, TOILET D	34
PANEL ASSY	254
PANEL ASSY, AFT GALLEY AREA CEILING	24
PANEL ASSY, CURVED CEILING SCULPTURED	6Q
PANEL ASSY, DRY SHAVE STATION FACE	27
PANEL ASSY, EMERGENCY EXIT UPPER	209
PANEL ASSY, PASSENGER CABIN WINDOW	207L
PANEL ASSY, SCULPTURED TRIM	6P
PANEL ASSY, UPPER OVERWING HATCHWAY	209
PANEL INSTL, AFT GALLEY ATTENDANTS	109C
PANEL INSTL, AFT GALLEY ATTENDANTS	109J
PANEL INSTL, CARGO ATTENDANTS	113
PANEL INSTL, FORWARD ATTENDANTS	102G
PANEL INSTL, FORWARD GALLEY ATTENDANTS	100D
PANEL INSTL, STATION 344 TO 360 TRANSFORMER	66
PARTITION INSTL, STATION 1382.75 LH AFT CLOSET	196
SERVICE UNIT INSTL, PASSENGER	175
SERVICE UNIT INSTL, PASSENGER	188D
SHIELD ASSY, STATION 335 J27 ELECTRICAL EQUIPMENT	70F
SHIELD ASSY, STATION 336 J4 RELAY	708
SUPPORT INSTL, SECTION 53 AND 56 CARGO COMPARTMENT DOME LIGHT	77
SWITCH INSTL, AIR CONDITIONING COMPARTMENT LIGHT	85
SWITCH INSTL, CARGO VIEWING HOLE	81
SWITCH INSTL, LIGHT	87
SWITCH INSTL, LOWER CAB DOME LIGHT	61
SWITCH INSTL, SECTION 53 CARGO LIGHTS	78
SWITCH INSTL, SECTION 56 CARGO LIGHTS	78
SWITCH INSTL, TOILET MIRROR LIGHTS AND OCCUPIED INDICATOR LIGHT	30

33-05 INSTRUMENT PANELS

EQUIPMENT INSTL, NAVIGATORS PANEL	63A
GAUGE INSTL, EMERGENCY BRAKE PRESSURE	74
MODULE INSTL, CAPTAINS AND FIRST OFFICERS	81
MODULE INSTL, P13 PILOTS OVERHEAD	16L
MODULE INSTL, P13 PILOTS OVERHEAD	16M
PANEL INSTL, COPILOTS AUXILIARY EQUIPMENT	68
PANEL INSTL, FLIGHT ENGINEERS AUXILIARY	48U
PANEL INSTL, FLIGHT ENGINEERS AUXILIARY	48Y
PANEL INSTL, FLIGHT ENGINEERS LOWER	48Q
PANEL INSTL, FLIGHT ENGINEERS UPPER	48L
PANEL INSTL, MISSION CO-ORDINATORS STATION	63A
PANEL INSTL, MOD FLIGHT ENGINEERS AUXILIARY	482
PANEL INSTL, NAVIGATORS	58F
PANEL INSTL, OBSERVER AUXILIARY EQUIPMENT	64
PANEL INSTL, PILOTS AUXILIARY EQUIPMENT	68
PANEL INSTL, P10 COPILOTS MAIN INSTRUMENT	31F
PANEL INSTL, P9 ENGINE INSTRUMENT	31H
RACK INSTL, NAVIGATORS EQUIPMENT	61
STAND ASSY, PILOT AND COPILOT CONTROL	1

33-06 LIGHTPLATES

LIGHTPLATE ASSY, TYPICAL	1
LIGHTPLATE ASSY, TYPICAL	2
LIGHTPLATE ASSY, TYPICAL	3
LIGHTPLATE ASSY, TYPICAL	4

CHAPTER TABLE OF CONTENTS

33-0

PAGE 2

RAF
NOV 21/01

BOEING
 707
PARTS CATALOG (MAINTENANCE)

SECTION	FIGURE
LIGHTPLATE ASSY, TYPICAL.	5
LIGHTPLATE ASSY, TYPICAL.	6
SHROUD ASSY, LIGHTING RMI	7
33-07 AIR REFUELING SYSTEM	
AFT FAIRING ASSY, L.H.	9A
AFT FAIRING ASSY, R.H.	9A
EXTERIOR VERT. STB. LIGHT INSTL, L.H.	4A
EXTERIOR VERT. STB. LIGHT INSTL, R.H.	4A
EXTERIOR WING LIGHT INSTL, L.H.	5A
EXTERIOR WING LIGHT INSTL, R.H.	5A
FORMATION LIGHT INSTL	8A
FORMATION LIGHTS INSTL, L.H. AFT.	7A
FORMATION LIGHTS INSTL, L.H.	6A
FORMATION LIGHTS INSTL, R.H. AFT.	7A
FORMATION LIGHTS INSTL, R.H.	6A
INFRA-RED LIGHT INSTL, AFT STA. 1633.	3A
INFRA-RED LIGHT INSTL, FWD STA. 1623.	3A

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 01
NAVIGATION LIGHTS

RAF
NOV 21/90

33-01
PAGE 1




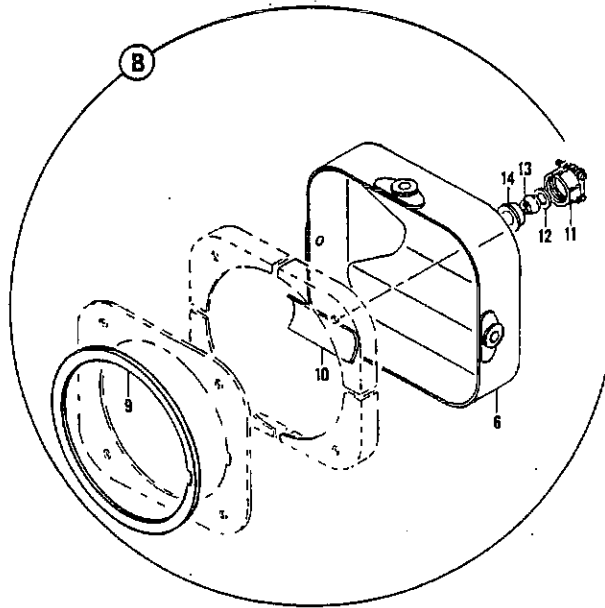


FIGURE 1. LIGHT INSTL, NOSE GEAR TAXI

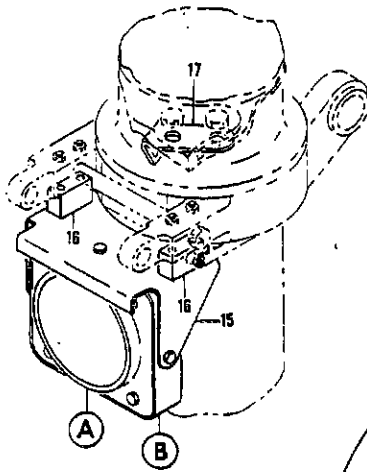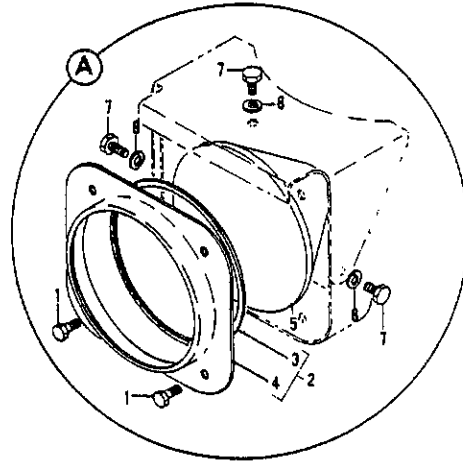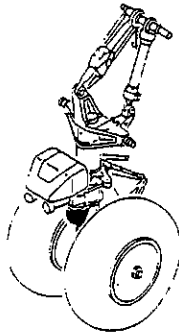

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1	65-1671-1		LIGHT INSTL, NOSE GEAR TAXI (SEE 32-3, FIG. 2, ITEM 4A)	5199	RF
1	BACB3ONE3-4		. BOLT.	5199	4
2	9-65896		. RETAINER ASSY, TAXI LIGHT	5199	1
3	9-65896-2		. . GASKET, TAXI LIGHT RETAINER	5199	1
4	9-65896-1		. . RETAINER, TAXI LIGHT.	5199	1
5	4551		. LAMP, (V08806).	5199	1
5	10P250W28UP46		. LAMP, (V92966).	5199	1
			(OPTIONAL TO 4551 (V08806))		
6	9-65897		. HOUSING ASSY, TAXI LIGHT.	5199	1
			ATTACHING PARTS		
7	BACB3OLM4HU1		. BOLT.	5199	3
8	MS35338-44		. WASHER.	5199	3
			-----*		
9	9-65897-3		. . GASKET, TAXI LIGHT HOUSING.	5199	1
10	9-65897-4		. . INSULATOR, TAXI LIGHT HOUSING	5199	1
11	AN3057-6A		. . ADAPTOR	5199	1
12	AN3067-W3		. . WASHER.	5199	1
13	AN3067-2		. . INSERT.	5199	1
14	A7124		. . BUSHING, (V72914)	5199	1
15	9-65170-1		. BRACKET, NOSE GEAR TAXI LIGHT	5199	1
			ATTACHING PARTS		
	BACB3OLM4DU42		. BOLT.	5199	4
	AN960C416L		. WASHER.	5199	4
	BACN10JD4AU		. NUT	5199	4
			-----*		
16	3-93350-1		. SPACER, NOSE GEAR TAXI LIGHT SUPPORT.	5199	2
17	63-9631-3		. BRACKET, WIRE CONNECTOR MOUNTING.	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

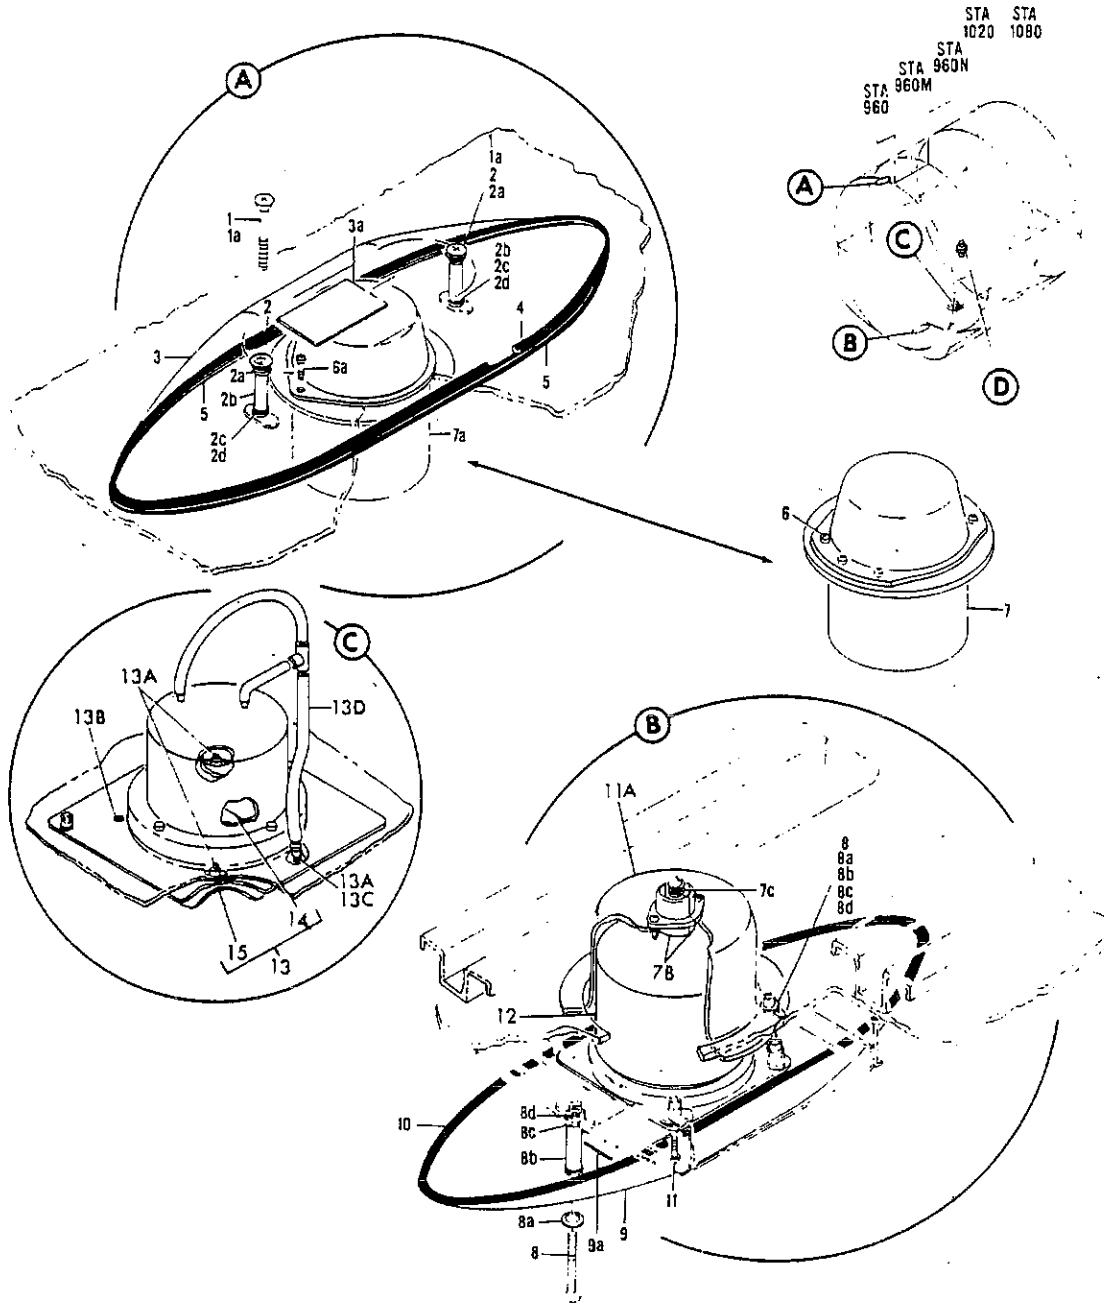


FIGURE 2. LIGHT INSTL, STATION 930, 960N AND 995.60 BEACON (SHEET 1)

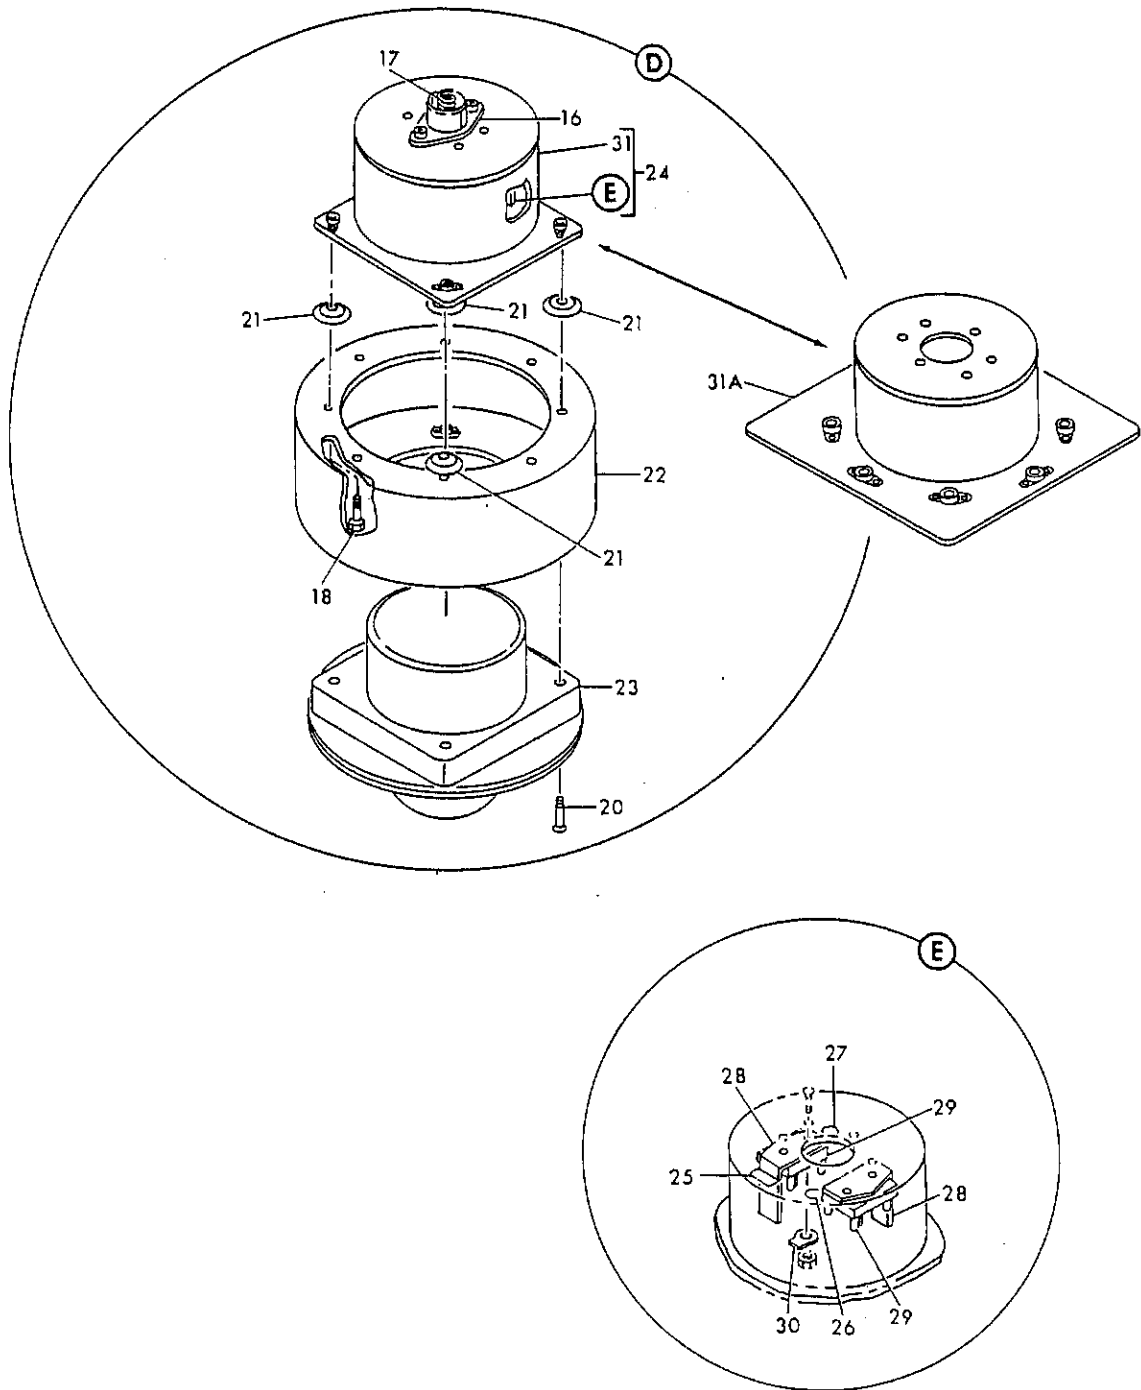


FIGURE 2. LIGHT INSTL, STATION 930, 960W AND 995.60 BEACON (SHEET 2)

NOV 21/90

33-01-2

DETAILED PARTS LIST
33-01-2
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R R R R R R R R R R R R R	2	LIGHT INSTL, STATION 930, 960N AND 995.60 BEACON. . . .									
	65-8304	. LIGHT INSTL, STATION 960N LOWER BEACON (SEE 24-3, . .							0150	RF	
		65-8304	FIG. 3, ITEM 10)								
		65-8304	. LIGHT INSTL, STATION 960N LOWER BEACON (VARIABLE. . .							5199	RF
	7B	BACS45A2	DWG;65-8304-5001) (SEE 24-3, FIG. 3, ITEM 10)								
		BACS45A2	. . SEAL.							0103	2
		BACS45A2	. . SEAL, (DELETED BY RAF MOD 7211.019-147)							5199	
		NAS602-7	ATTACHING PARTS							0450	2
		NAS679A08W	. . SCREW								2
			. . NUT								2
			-----*								
	7C	BACS45A20	. . SPACER.							0103	1
		BACS45A20	. . SPACER, (DELETED BY RAF MOD 7211.019-147)							5199	
	7C	NAS514P1032-40	. . SCREW							0450	1
	8	BACW10UD101	. . WASHER.								2
	8A	69-10789-1	. . FAIRING ASSY, ROTATING BEACON LIGHT (AFFECTED . . .								1
			BY AD 63-2-1)								
	9	69-10789-2	. . . FAIRING, ROTATING BEACON LIGHT (USED ON								1
			69-10789-1)								
	9A	9-66041-6	. . . PLACARD, ROTATING BEACON LIGHT.								1
	10	69-10789-4	. . . SEAL, ROTATING BEACON LIGHT FAIRING (USED ON. . .								1
			69-10789-1)								
	11	NAS603-7P	. . SCREW								4
	12	G9325A2	. . LIGHT ASSY, AIRCRAFT NAVIGATIONAL ROTATING (V72914) .							5199	1
			(SEE FIG. 3D)								
	12	G9325A2	. . LIGHT ASSY, AIRCRAFT NAVIGATIONAL ROTATING (V72914) .							0150	1
			(DELETED BY RAF MOD 7211.019-147) (SEE FIG. 3D)								
	12	30-1037-1	. . LIGHT ASSY, AIRCRAFT NAVIGATIONAL ROTATING (ADDED .							0150	1
			BY RAF MOD 7211.019-147) (SEE FIG. 3D)								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											



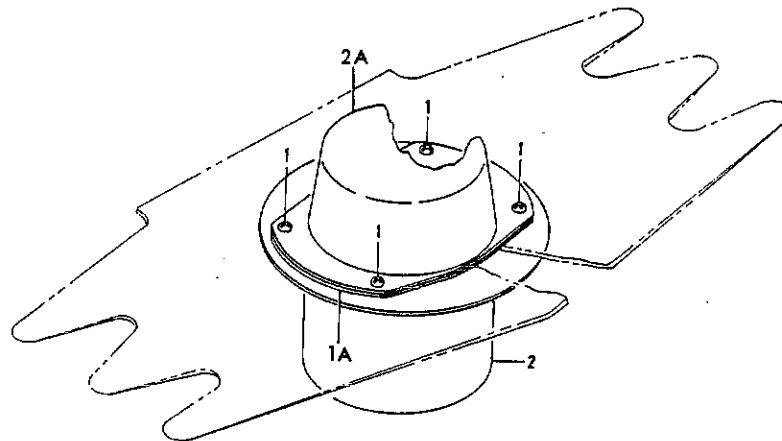


FIGURE 3. LIGHT INSTL, STATION 930 BEACON

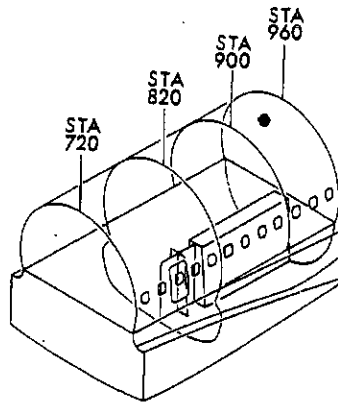

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
3	65-4714-9	LIGHT INSTL, STATION 930 BEACON (SEE 24-3, FIG. 2, . . . ITEM 8)								RF
1	NAS603-B	. SCREW								4
2	G9325A1	. LIGHT ASSY, AIRCRAFT NAVIGATIONAL ROTATING (V72914) . (SEE FIG. 3D)							5199	1
2	G9325A1	. LIGHT ASSY, AIRCRAFT NAVIGATIONAL ROTATING (V72914) . (DELETED BY RAF MOD 7211.019-147) (SEE FIG. 3D)							0150	1
2	30-1037-1	. LIGHT ASSY, AIRCRAFT NAVIGATIONAL ROTATING (ADDED BY RAF MOD 7211.019-147) (SEE FIG. 3D)							0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

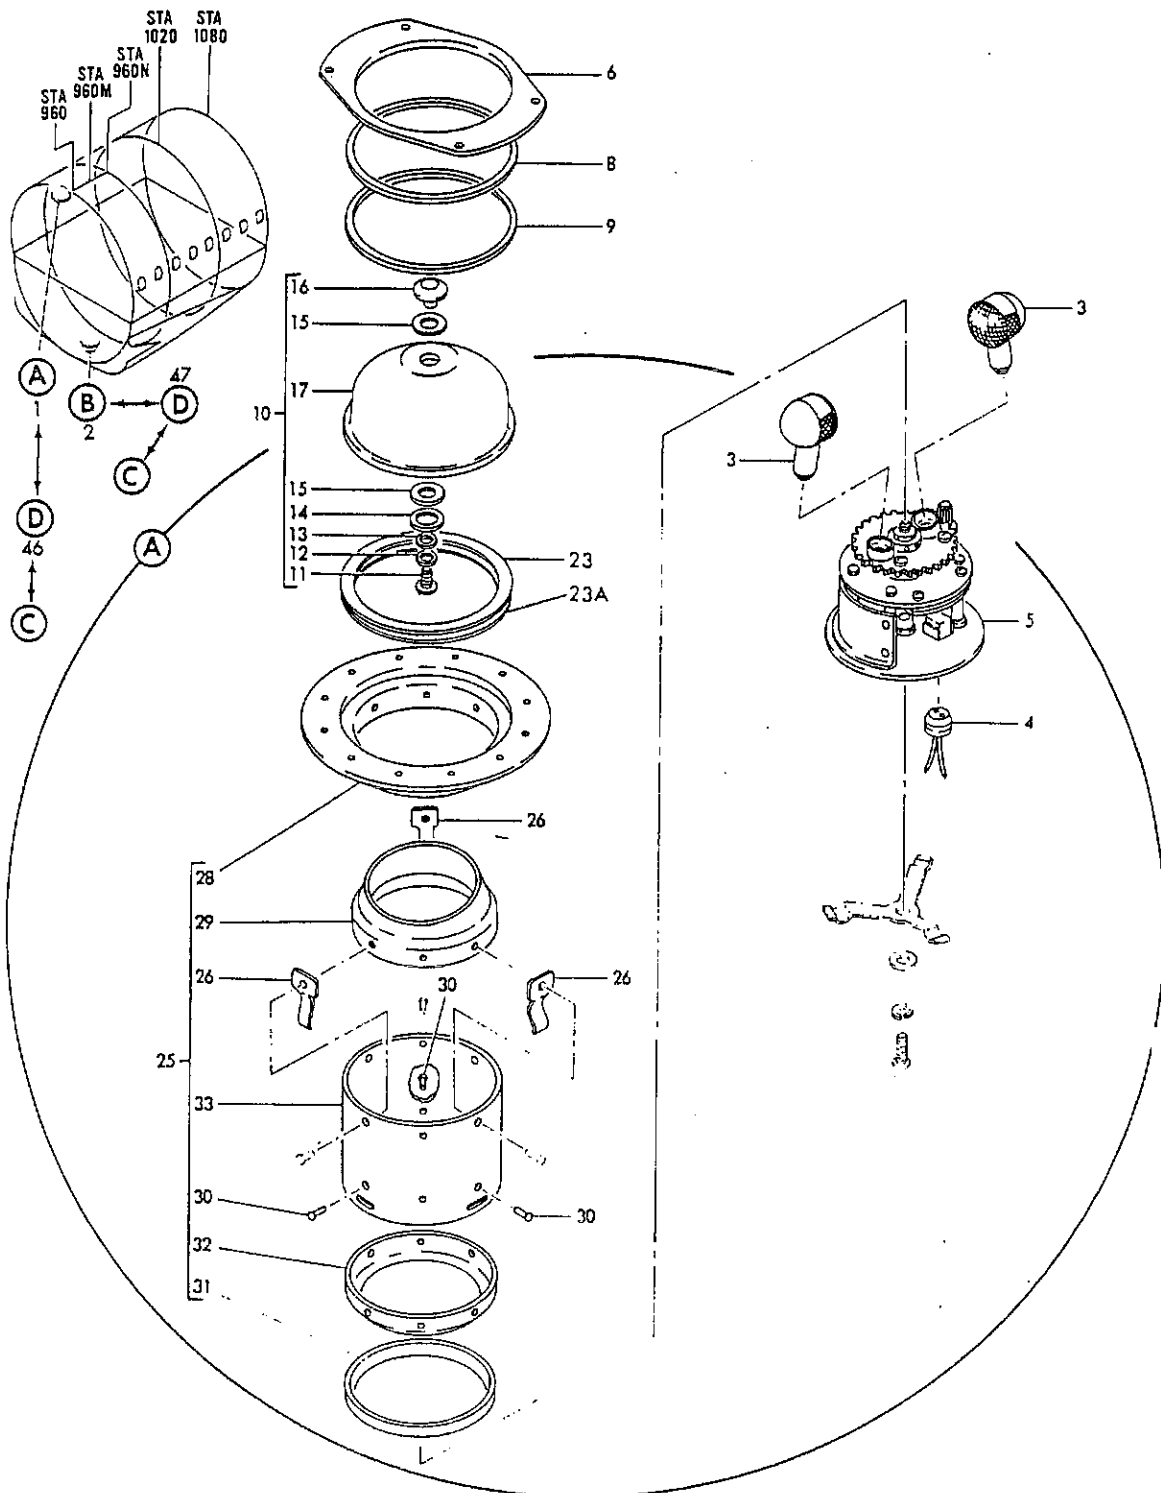

LIGHT ASSY, UPPER AND LOWER NAVIGATIONAL ROTATING BEACON
LIGHT ASSY, AIRCRAFT NAVIGATIONAL ROTATING BEACON
FIGURE 3D, LIGHT ASSY, STROBE ANTI-COLLISION AIRCRAFT NAVIGATIONAL (SHEET 1)


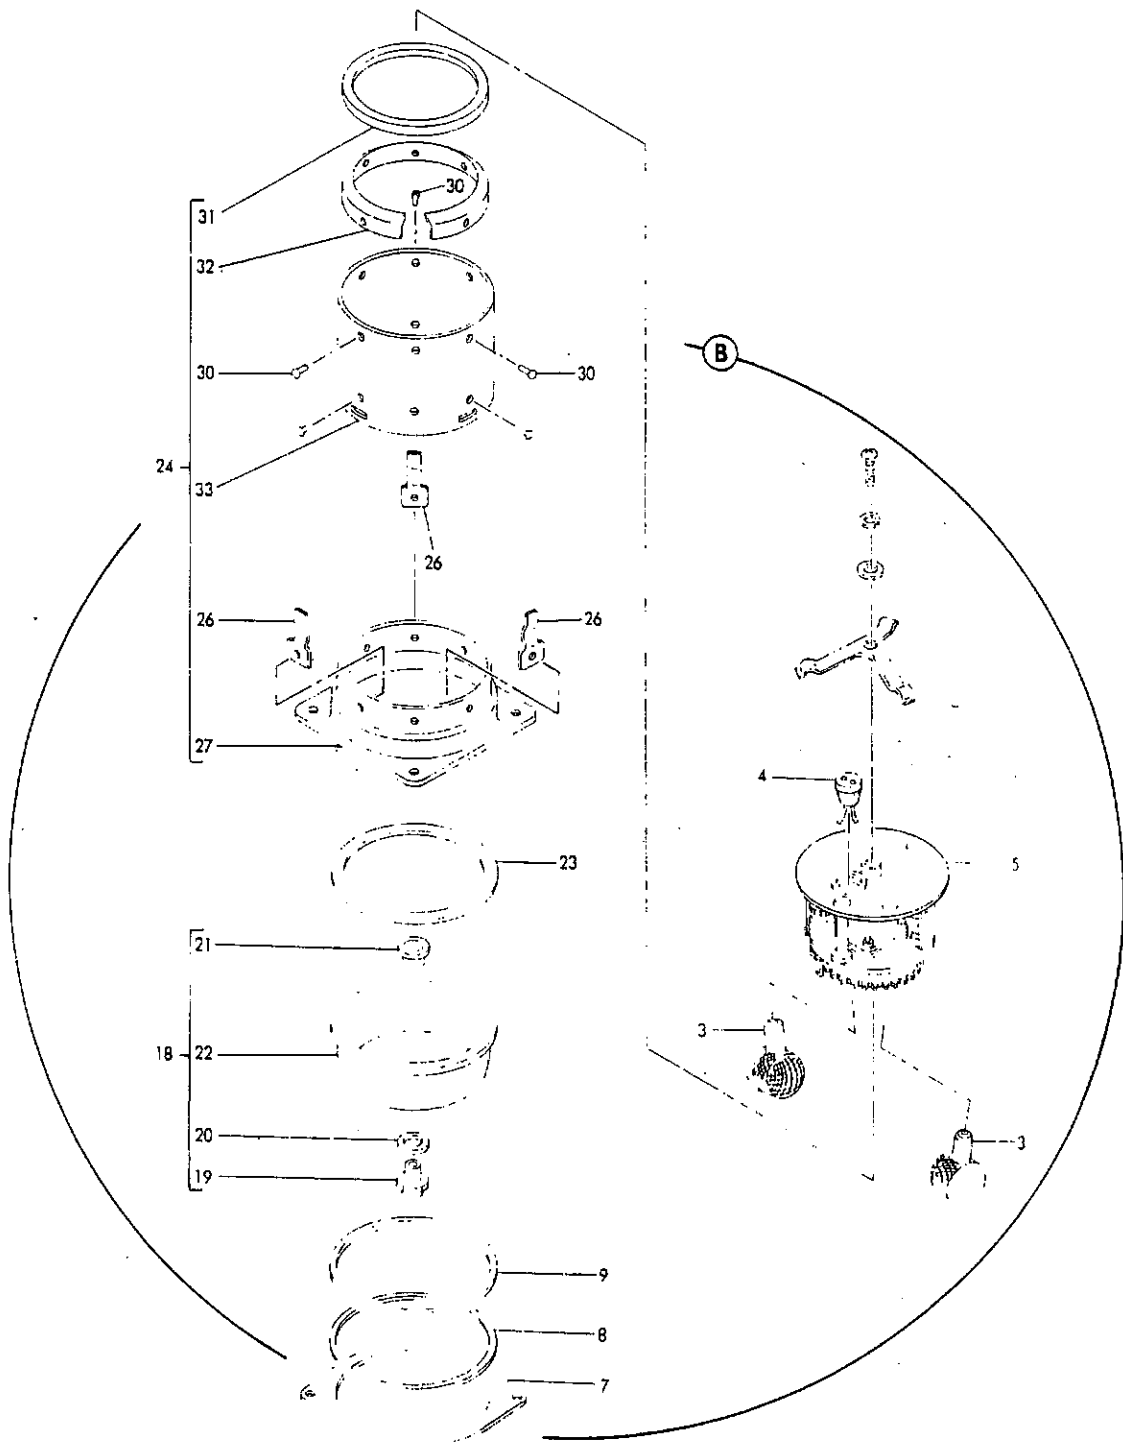


FIGURE 3D. LIGHT ASSY, UPPER AND LOWER NAVIGATIONAL ROTATING BEACON
LIGHT ASSY, AIRCRAFT NAVIGATIONAL ROTATING BEACON (SHEET 2)


NOV 21/90

33-01-30

DETAILED PARTS LIST
33-01-30
PAGE 1

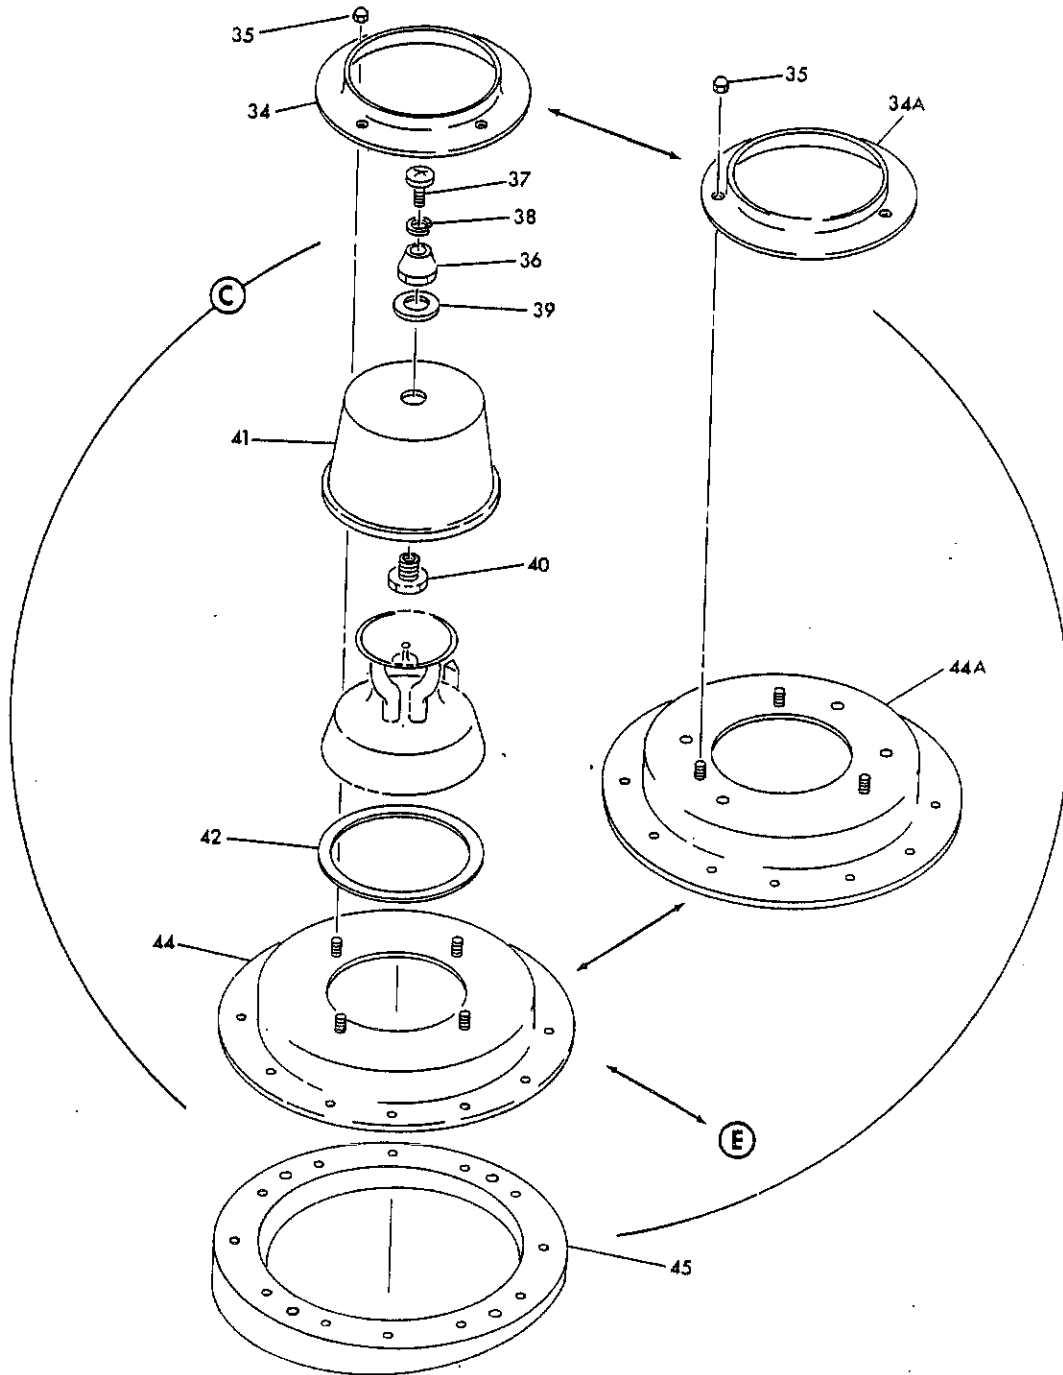

LIGHT ASSY, UPPER AND LOWER NAVIGATIONAL ROTATING BEACON
 LIGHT ASSY, AIRCRAFT NAVIGATIONAL ROTATING BEACON
 FIGURE 3D. LIGHT ASSY, STROBE ANTI-COLLISION AIRCRAFT NAVIGATIONAL (SHEET 3)


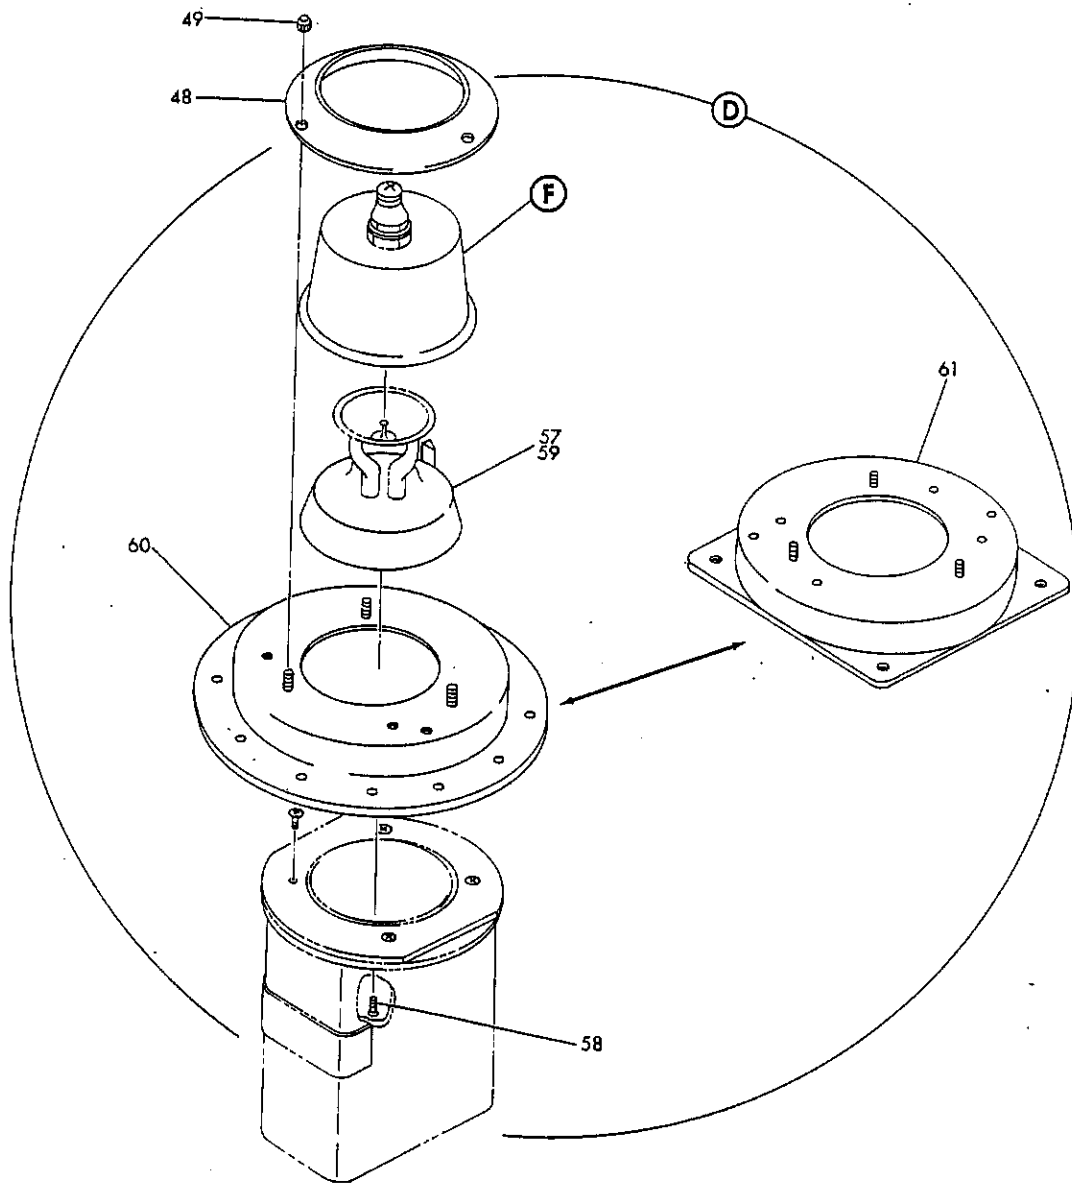


LIGHT ASSY, UPPER AND LOWER NAVIGATIONAL ROTATING BEACON
LIGHT ASSY, AIRCRAFT NAVIGATIONAL ROTATING BEACON
FIGURE 3D. LIGHT ASSY, STROBE ANTI-COLLISION AIRCRAFT NAVIGATIONAL (SHEET 4)

NOV 21/90

33-01-30

DETAILED PARTS LIST
33-01-30
PAGE 3

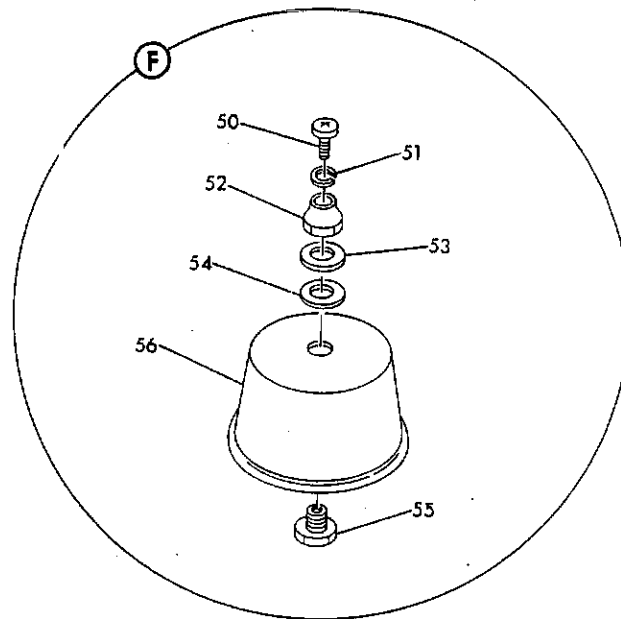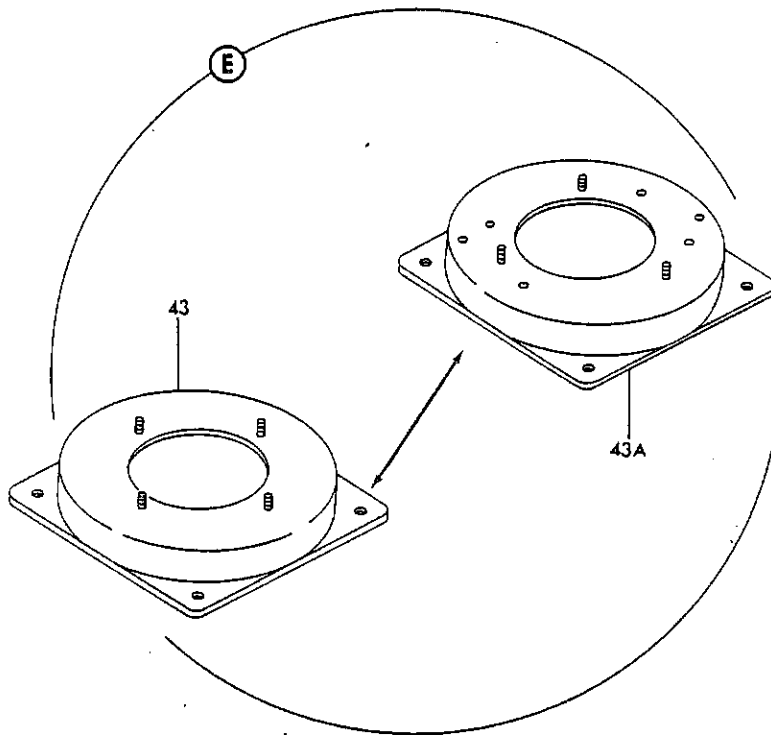

LIGHT ASSY, UPPER AND LOWER NAVIGATIONAL ROTATING BEACON
 LIGHT ASSY, AIRCRAFT NAVIGATIONAL ROTATING BEACON
 FIGURE 30. LIGHT ASSY, STROBE ANTI-COLLISION AIRCRAFT NAVIGATIONAL (SHEET 5)

MISSING ITEM NUMBERS ARE NOT APPLICABLE


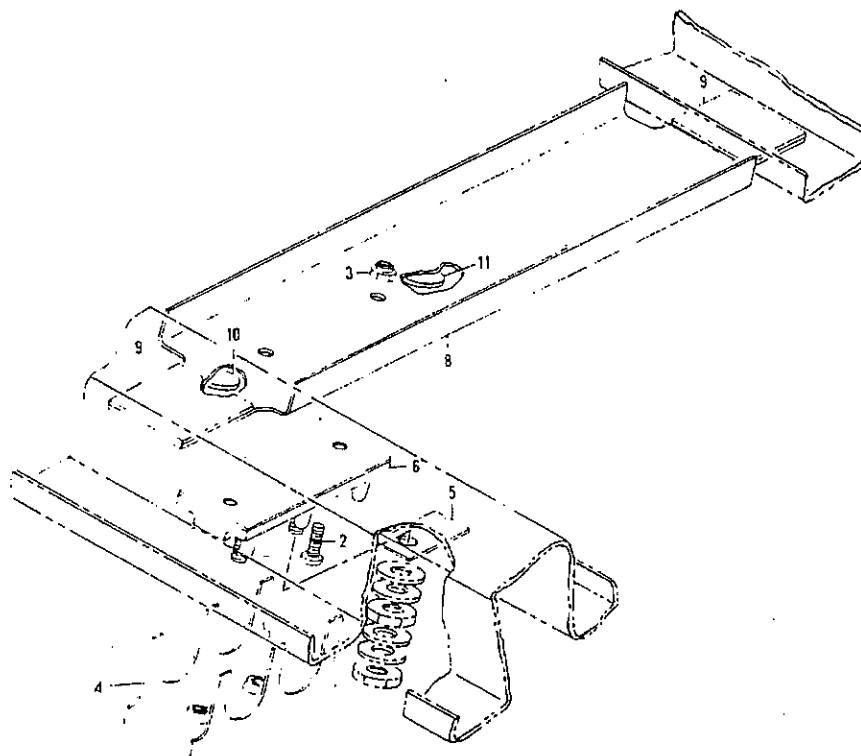


FIGURE 4 STRIP INSTL. UPPER BEACON LIGHT TERMINAL

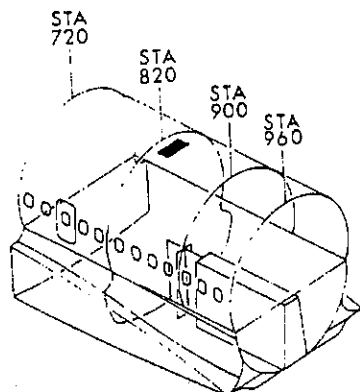

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R R R R	4	69-29071	0103	RF
		FIG. 2, ITEM 85)	5199	
		69-29071	0450	RF
		STRIP INSTL, UPPER BEACON LIGHT TERMINAL (DELETED BY. RAF MOD 7211.019-147) (SEE 24-3, FIG. 2, ITEM 85)		
	2	. SCREW		2
	3	. NUT		2
	4	. COVER ASSY, TERMINAL STRIP.		1
	5	. STRIP		2
	6	. TERMINAL BOARD ASSY		1
	8	. BRACKET, TERMINAL STRIP SUPPORT		1
	9	. INSULATOR, UPPER BEACON LIGHT TERMINAL STRIP.		2
	10	. METAL-CAL		1
	11	. METAL-CAL		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

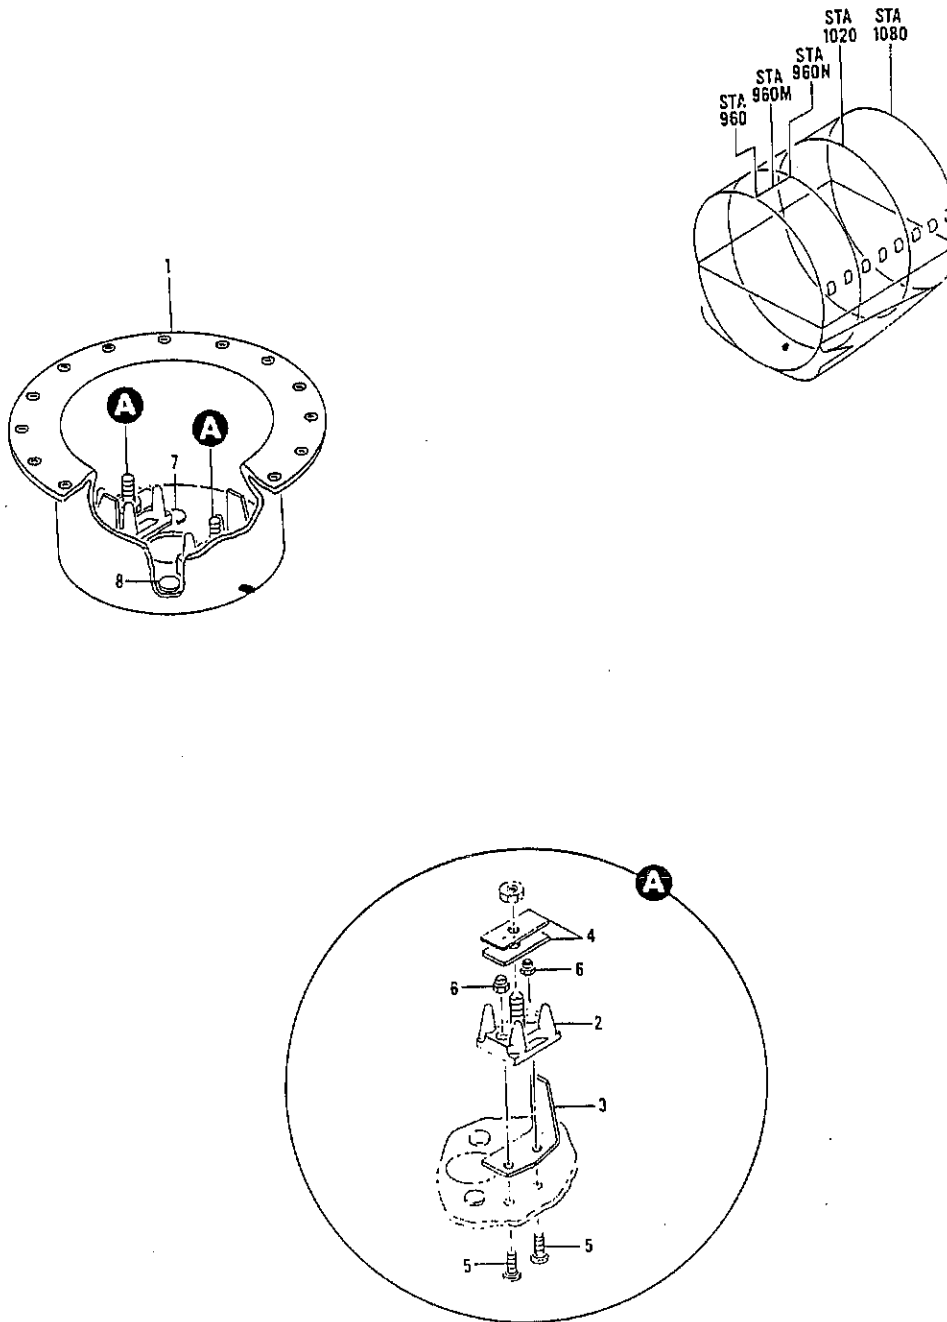


FIGURE 5. CAN ASSY, LOWER BEACON LIGHT PRESSURE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5	66-5566-1		CAN ASSY, LOWER BEACON LIGHT PRESSURE (SEE 53-2, FIG. . 3, ITEM 59)		RF
1	66-5566-800		. CAN		1
2	MS25123-2-1		. TERMINAL BOARD ASSY	0103 5199 0450	2
2	MS25123-2-1		. TERMINAL BOARD ASSY, (DELETED BY RAF MOD. 7211.019-147)	0450	2
3	63-9570		. GUARD, TERMINAL	0103 5199 0450	2
3	63-9570		. GUARD, TERMINAL (DELETED BY RAF MOD 7211.019-147) . . .	0450	2
4	MS25227-3		. STRIP		4
5	NAS600-6		. SCREW		4
6	BACN10BY504W		. NUT		4
7	BACM10N00-2AAS		. MARKER-ALUMINUM FOIL, 1	0103 5199 0450	1
7	BACM10N00-2AAS		. MARKER-ALUMINUM FOIL, 1 (DELETED BY RAF MOD 7211.019-147)	0450	1
8	BACM10N00-2PP		. MARKER-ALUMINUM FOIL, 2	0103 5199 0450	1
8	BACM10N00-2PP		. MARKER-ALUMINUM FOIL, 2 (DELETED BY RAF MOD 7211.019-147)	0450	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					



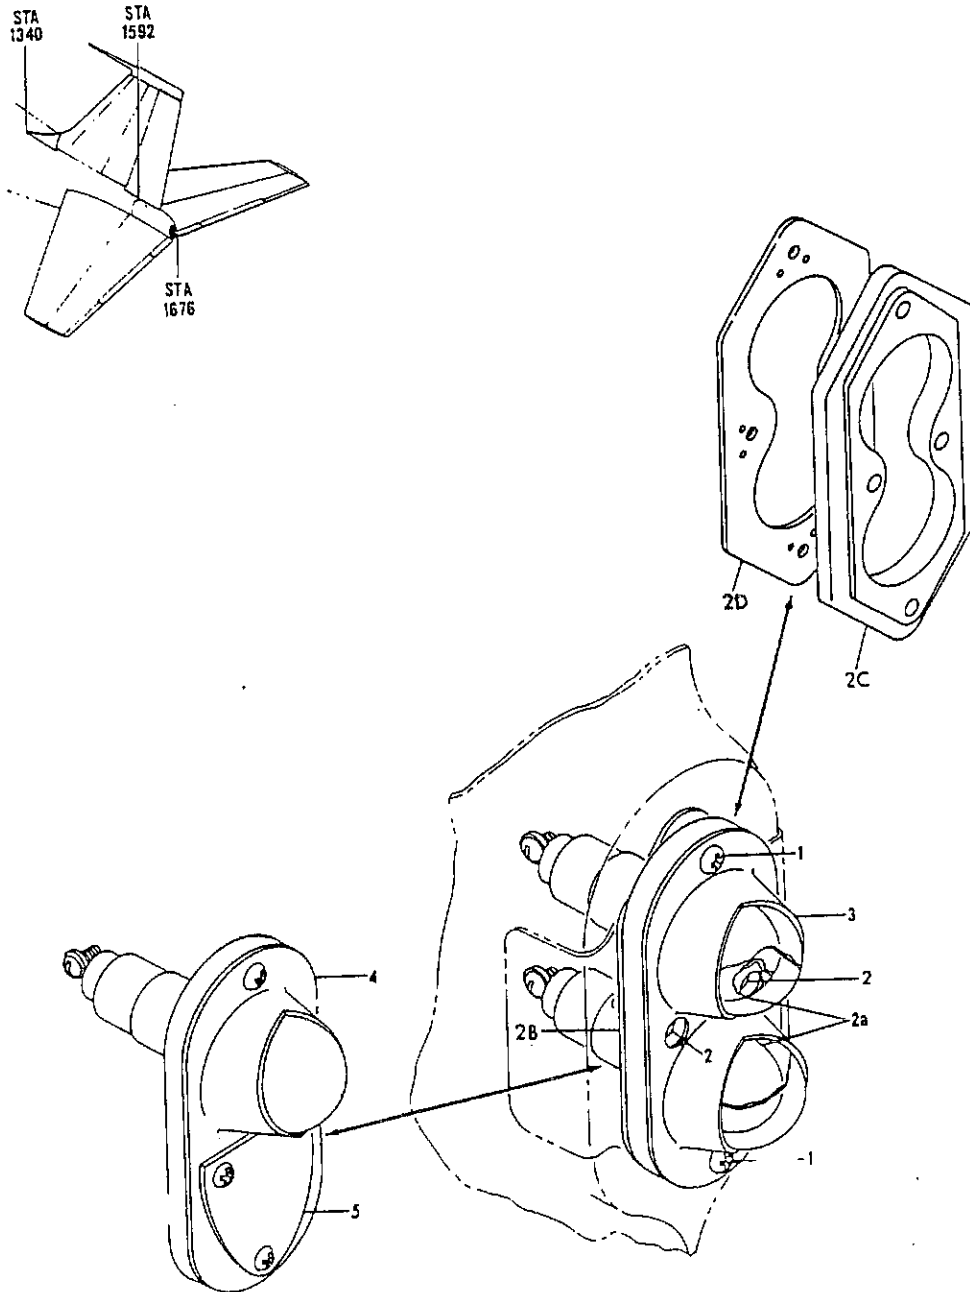


FIGURE 7. BUNDLE ASSY, TAIL LIGHT AND FRAME RELEASE ELECTRICAL

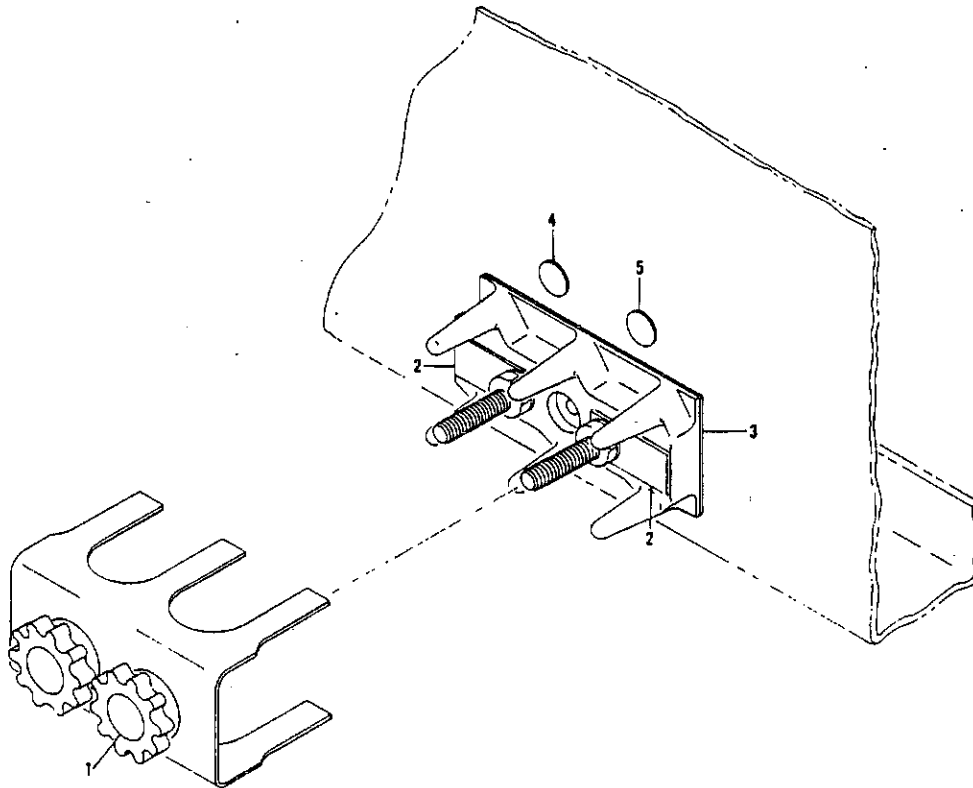

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
7	69-10118		LIGHT INSTL, STATION 1672 TAIL.		RF
1	NAS602-12P		. LIGHT INSTL, STATION 1672 TAIL (SEE 24-3, FIG. 4, . . .		
2	NAS514P632-8		ITEM 4 AND 24-3, FIG. 7A, ITEM 32)		
3	36260-23-1683		. . SCREW		2
			. . SCREW		2
			. . LIGHT ASSY, (V72914).		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

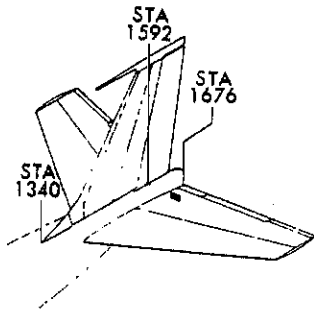

LIGHT INSTL, STATION 1672 TAIL FIGURE 9. STRIP INSTL, STATION 1616 TAIL LIGHT TERMINAL

DETAILED PARTS LIST
33-01-9
PAGE 0

33-01-9

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
9	69-11284	STRIP INSTL, STATION 1616 TAIL LIGHT TERMINAL (SEE. . . 24-3, FIG. 4, ITEM 3)								RF
1	BACC50C18A	. COVER ASSY.								1
2	MS25227-3	. STRIP								2
3	MS25123-2-2	. TERMINAL BOARD ASSY								1
	NAS600-5	ATTACHING PARTS								
	AN960-4	. SCREW								2
	NAS679A04W	. WASHER.								2
		. NUT								2
		-----*								
4	BACM10N00-2PP	. MARKER-ALUMINUM FOIL, NO. 1								1
5	BACM10N00-2AAS	. MARKER-ALUMINUM FOIL, NO. 2								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										


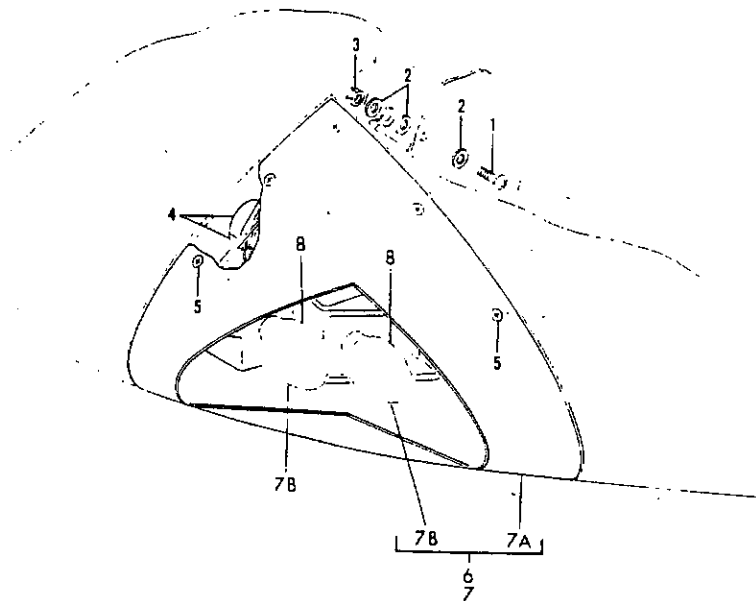


FIGURE 11. WING BUTTOCK LINE 779 18 WING TIP LIGHT INSTALLATION

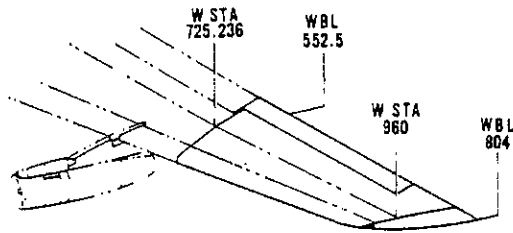

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
11	69-14522-1		LIGHT INSTL, WING BUTTOCK LINE 779.18 WING TIP.		RF
	69-14522-2		NAVIGATION (LH) (SEE 24-2, FIG. 12, ITEM 1)		
			LIGHT INSTL, WING BUTTOCK LINE 779.18 WING TIP.		RF
			NAVIGATION (RH) (SEE 24-2, FIG. 12, ITEM 1)		
1	AN520PB10R8		. SCREW		1
2	AN960D10L		. WASHER.		3
3	NAS679A3W		. NUT		1
4	BACS45A12		. FITTING		2
			ATTACHING PARTS		
	BACB30BG3K3A		. BOLT.		2
			-----*		
5	BACB30BF3C4		. BOLT.		10
6	30-0025-1		. LIGHT ASSY, WING TIP POSITION LIGHT COMPLETE.		1
			LH (V72914) (LH ONLY)		
6	30-0025-2		. LIGHT ASSY, WING TIP POSITION LIGHT COMPLETE.		1
			RH (V72914) (RH ONLY)		
			ATTACHING PARTS		
M	BACB30BG3K4A		. BOLT.		4
			-----*		
M 7	30-0025-5		. . COVER AND LENS ASSY, RED LH (V72914).		1
M 7	30-0025-6		. . COVER AND LENS ASSY, GREEN RH (V72914).		1
M 7A	31-0146-21		. . . COVER, GLASS RED LH (V72914).		1
M 7A	31-0146-22		. . . COVER, GLASS GREEN RH (V72914).		1
M 7B	A4174-24		. . . BULB, (V16873).		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/90

33-01-11

DETAILED PARTS LIST
33-01-11
PAGE 1

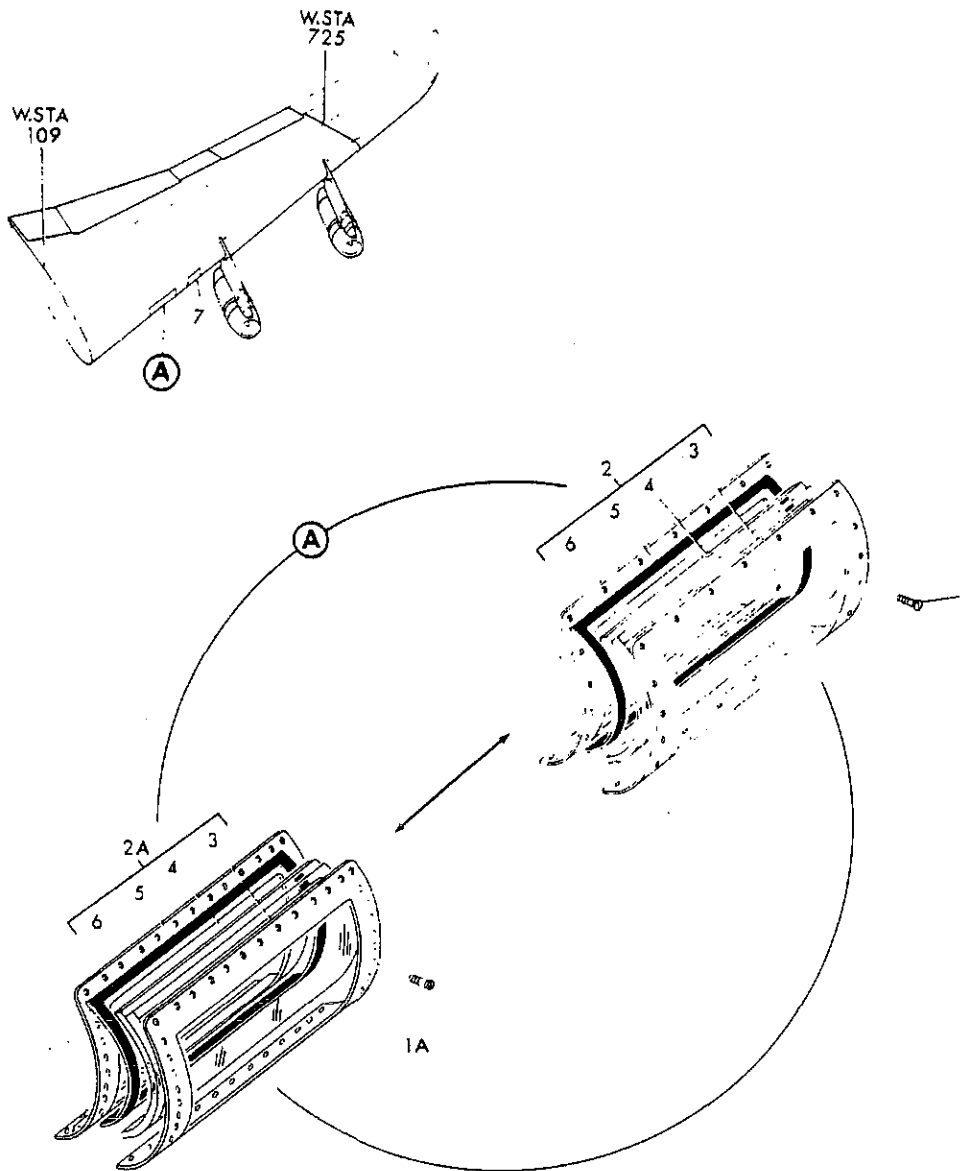


FIGURE 12. STRUCTURE INSTL, WING LEADING EDGE LANDING LIGHT



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
12	65-1077-1		STRUCTURE INSTL, WING LEADING EDGE LANDING LIGHT (LH) . (SEE 57-4, FIG. 6, ITEM 16, 57-4, FIG. 7, ITEM 35 AND 57-4, FIG. 8, ITEM 85)		RF
	65-1077-2		STRUCTURE INSTL, WING LEADING EDGE LANDING LIGHT (RH) . (SEE 57-4, FIG. 6, ITEM 16, 57-4, FIG. 7, ITEM 35 AND 57-4, FIG. 8, ITEM 85)		RF
1A	NAS517-3-3		. SCREW		44
2A	65-1077-33		. WINDOW ASSY, WING LEADING EDGE LANDING LIGHT. STRUCTURE (LH ONLY)		1
2A	65-1077-34		. WINDOW ASSY, WING LEADING EDGE LANDING LIGHT. STRUCTURE (RH ONLY)		1
3	65-1077-21		. . RING, WING LEADING EDGE LANDING LIGHT STRUCTURE . . WINDOW (LH ONLY)		1
3	65-1077-22		. . RING, WING LEADING EDGE LANDING LIGHT STRUCTURE . . WINDOW (RH ONLY)		1
4	65-6850-1		. . WINDOW, WING LEADING EDGE LANDING LIGHT (LH ONLY) .		1
4	65-6850-2		. . WINDOW, WING LEADING EDGE LANDING LIGHT (RH ONLY) .		1
5	65-1077-23		. . SEAL, WING LEADING EDGE LANDING LIGHT STRUCTURE . . RUBBER		AR
6	65-1077-19		. . FRAME, WING LEADING EDGE LANDING LIGHT STRUCTURE. . WINDOW (LH ONLY)		1
6	65-1077-20		. . FRAME, WING LEADING EDGE LANDING LIGHT STRUCTURE. . WINDOW (RH ONLY)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

RAF
NOV 21/90

33-01-12

DETAILED PARTS LIST
33-01-12
PAGE 1

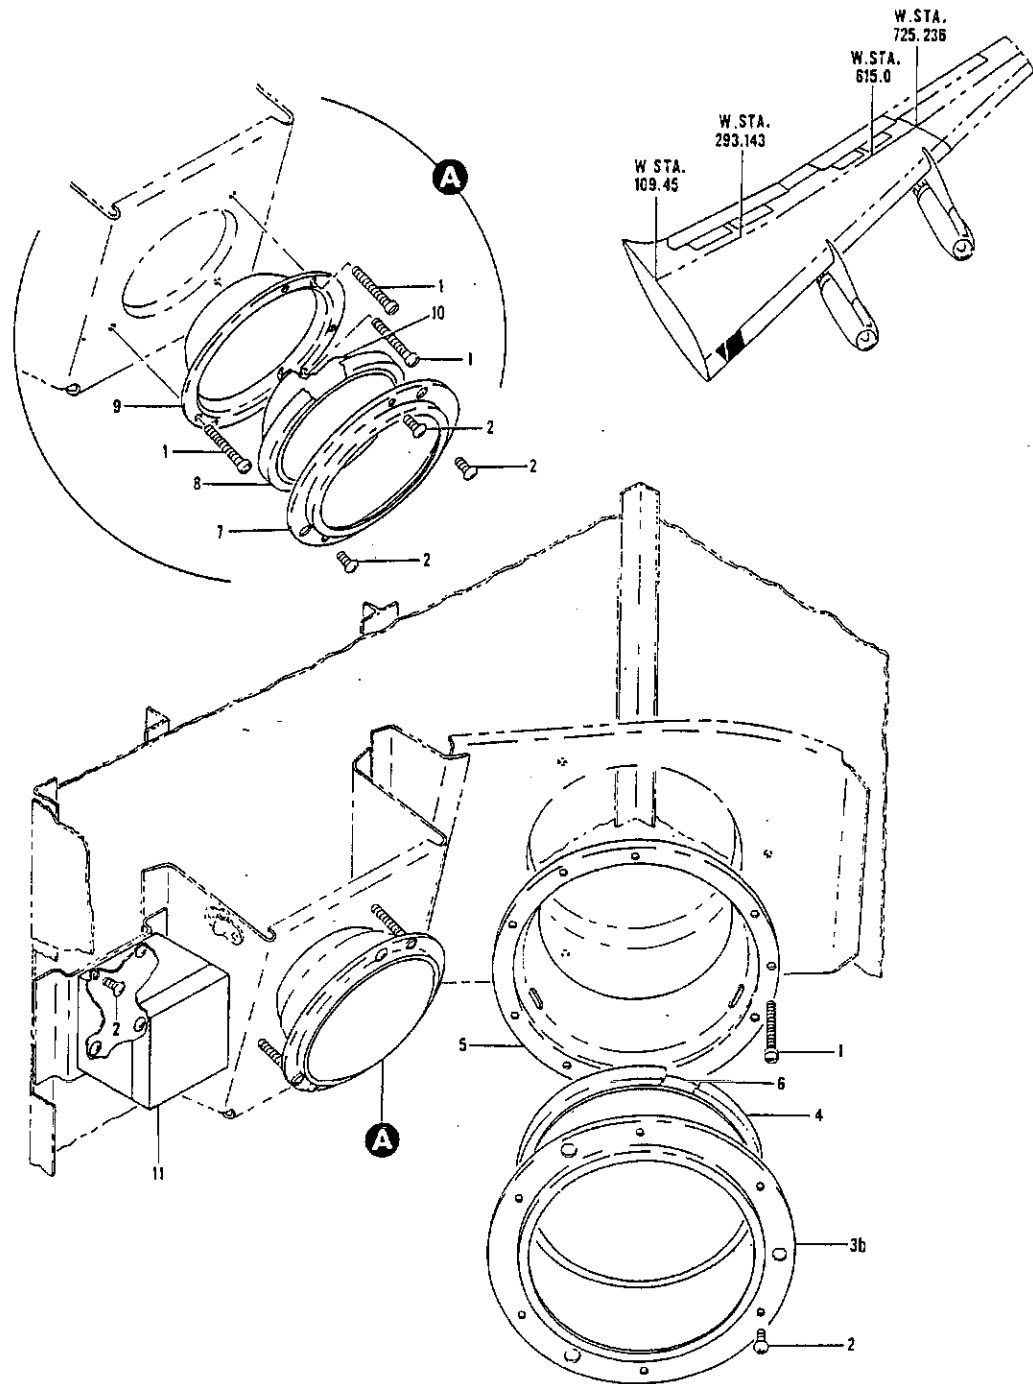


FIGURE 13. LIGHT INSTL, LANDING AND TAXI



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
13	50-9372-1		LIGHT INSTL, LANDING AND TAXI LH (SEE 24-2, FIG. 11, . . . ITEM 3A, 24-2, FIG. 12, ITEM 3 AND 24-2, FIG. 12A, ITEM 4)		RF
	50-9372-2		LIGHT INSTL, LANDING AND TAXI RH (SEE 24-2, FIG. 11, . . . ITEM 3A 24-2, FIG. 12, ITEM 3 AND 24-2, FIG. 12A, ITEM 4)		RF
1	AN501A10-28		. SCREW		6
2	NAS603-6P		. SCREW		9
	9-64386-4		. RETAINER ASSY, LANDING LIGHT (LIGHTS ONLY).		1
3B	9-64386-3		. . RETAINER, LANDING LIGHT		1
			. . REQUIRED PLACARDS, (SEE 11-3, FIG. 19).		1
4	50-9372-3		. GASKET.		1
			(OPTIONAL TO 65-17604-3)		
4	65-17604-3		. GASKET.		1
			(OPTIONAL 50-9372-3)		
5	9-64387		. FRAME ASSY, LANDING LIGHT		1
6	4559		. LAMP, PAR 64 (V08806)	0102	1
			(OPTIONAL MS25242-4559)		
6	MS25242-4559		. LAMP.	0102	1
			(OPTIONAL TO 4559 (V08806))		
6	Q4559		. LAMP, PAR 64 (V08806)	0399	1
			(OPTIONAL Q4559X (V08806))		
			(OPTIONAL 10P600W28UP69 (V92966))		
6	Q4559X		. LAMP, (V08806).	0399	1
			(OPTIONAL TO Q4559 (V08806))		
6	10P600W28UP69		. LAMP, (V92966).	0399	1
			(OPTIONAL TO Q4559 (V08806))		
7	90-10021-2		. RETAINER, TAXI LIGHT.		1
8	50-9372-4		. GASKET.		1
			(OPTIONAL TO 65-17604-4)		
8	65-17604-4		. GASKET.		1
			(OPTIONAL 50-9372-4)		
9	90-10021		. RETAINER ASSY, TAXI LIGHT		1
10	4551		. LAMP, PAR 46 (V08806)		1
11	10-3254		. AUTOTRANSFORMER, 115/2B VOLTS (PART NO. 6332. (V95266))		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

RAF
NOV 21/90

33-01-13

DETAILED PARTS LIST
33-01-13
PAGE 1

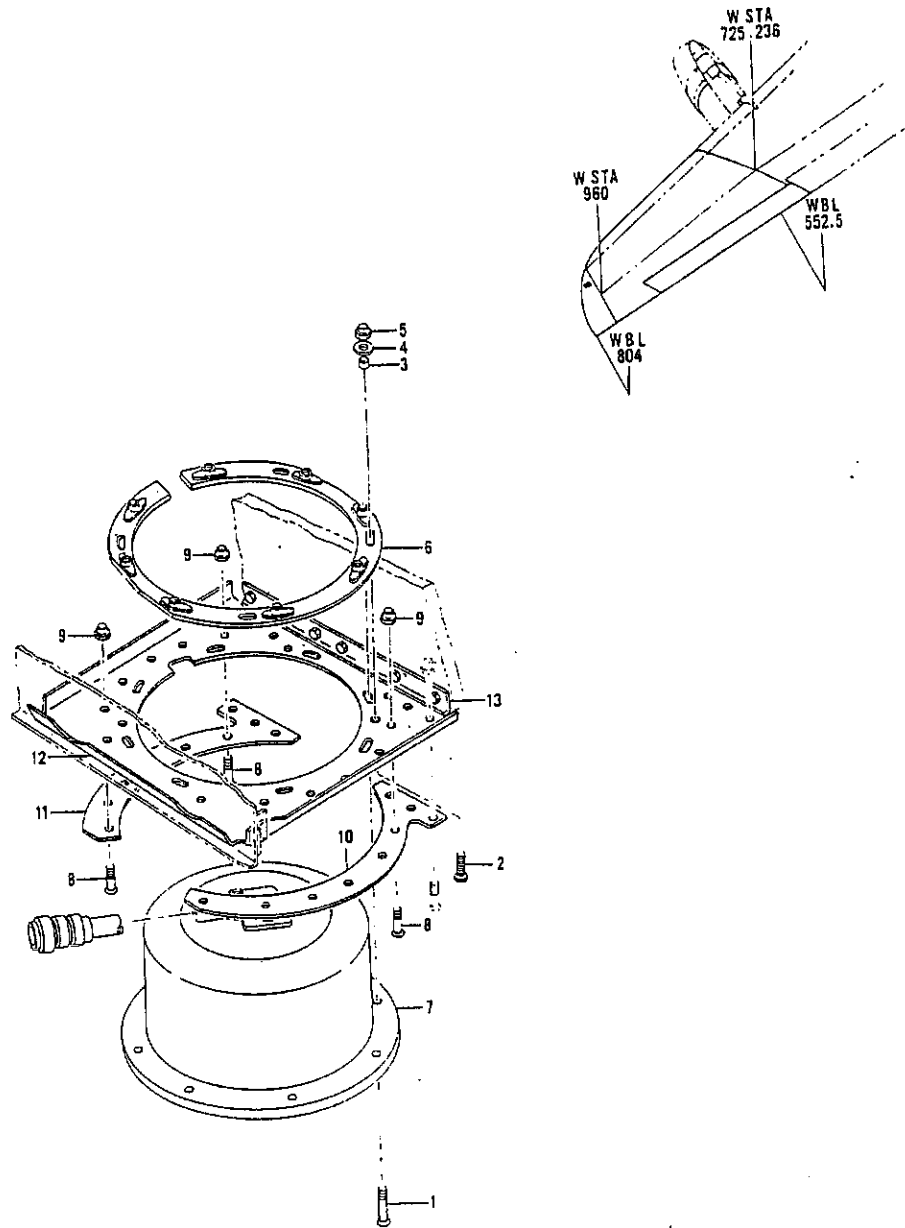


FIGURE 15. LIGHT INSTL, RETRACTABLE LANDING (LIGHTS ONLY)
PANEL INSTL, WING TIP LANDING LIGHT SUPPORT
ANGLE INSTL, WING TIP LANDING LIGHT SUPPORT ATTACHMENT



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
15			LIGHT INSTL, RETRACTABLE LANDING.		
	65-20690-1		PANEL INSTL, WING TIP LANDING LIGHT SUPPORT		RF
	65-20690-2		ANGLE INSTL, WING TIP LANDING LIGHT SUPPORT ATTACHMENT		RF
	65-20690-1		. LIGHT INSTL, RETRACTABLE LANDING (LH) (LIGHTS ONLY)		RF
	65-20690-2		(SEE 24-2, FIG. 12, ITEM 2)		RF
	65-20690-1		. LIGHT INSTL, RETRACTABLE LANDING (RH) (LIGHTS ONLY)		RF
	65-20690-2		(SEE 24-2, FIG. 12, ITEM 2)		RF
	65-20690-1		. LIGHT INSTL, RETRACTABLE LANDING (LH) (SEE 24-2, FIG. 12, ITEM 2, 24-2, FIG. 12A, ITEM 3)		RF
	65-20690-2		. LIGHT INSTL, RETRACTABLE LANDING (RH) (SEE 24-2, FIG. 12, ITEM 2, 24-2, FIG. 12A, ITEM 3)		RF
1	BACB30BF3K7		 BOLT		8
2	AN515PB6R7		 SCREW		2
			(OPTIONAL TO AN515B6R7)		
2	AN515B6R7		 SCREW		2
			(OPTIONAL TO AN515PB6R7)		
3	BACS18N3-9		 SPACER		2
4	AN960D6L		 WASHER		2
5	NAS679C06W		 NUT		2
6	10-3294-5		 RING ASSY, RETRACTABLE LANDING LIGHT MOUNTING		1
7	10-3294-4		 LIGHT ASSY, RETRACTABLE LANDING	0399	1
7	10-3294-4		 LIGHT ASSY.	0102	1
			(OPTIONAL 10-3294-7)		
7	10-3294-7		 LIGHT ASSY.	0102	1
			(OPTIONAL TO 10-3294-4)		
	65-20672-1		 FOR REFERENCE TO OTHER LIGHT DETAILS, SEE NHA		RF
	65-20672-2		 PANEL INSTL, WING TIP LANDING LIGHT SUPPORT (LH) (SEE 57-2, FIG. 6, ITEM 9 AND 57-2, FIG. 7, ITEM 9)		RF
	65-20672-2		 PANEL INSTL, WING TIP LANDING LIGHT SUPPORT (RH) (SEE 57-2, FIG. 6 AND 57-2, FIG. 7, ITEM 9)		RF
8	NAS517-3-8		 SCREW		12
9	NAS679A3W		 NUT		12
10	65-20672-7		 FILLER, WING TIP LANDING LIGHT SUPPORT PANEL AFT.		1
			(LH ONLY)		
10	65-20672-8		 FILLER, WING TIP LANDING LIGHT SUPPORT PANEL AFT.		1
			(RH ONLY)		
11	65-20672-9		 FILLER, WING TIP LANDING LIGHT SUPPORT PANEL.		1
			FORWARD (LH ONLY)		
11	65-20672-10		 FILLER, WING TIP LANDING LIGHT SUPPORT PANEL.		1
			FORWARD (RH ONLY)		
12	65-20672-5		 PANEL, WING TIP LANDING LIGHT SUPPORT (LH ONLY)		1
12	65-20672-6		 PANEL, WING TIP LANDING LIGHT SUPPORT (RH ONLY)		1
	65-20672-3		 ANGLE INSTL, WING TIP LANDING LIGHT SUPPORT		RF
			ATTACHMENT (SEE 57-2, FIG. 3, ITEM 21 AND 57-2, FIG. 4, ITEM 25)		
13	65-20672-4		 ANGLE, WING TIP LANDING LIGHT SUPPORT ATTACHMENT.		1
			ATTACHING PARTS		
	AN3-4A		 BOLT		6
	NAS517-3-9		 SCREW		6
	NAS679A3W		 NUT		12

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/90

33-01-15

DETAILED PARTS LIST
33-01-15
PAGE 1

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 02
EXTERIOR SERVICE LIGHTS



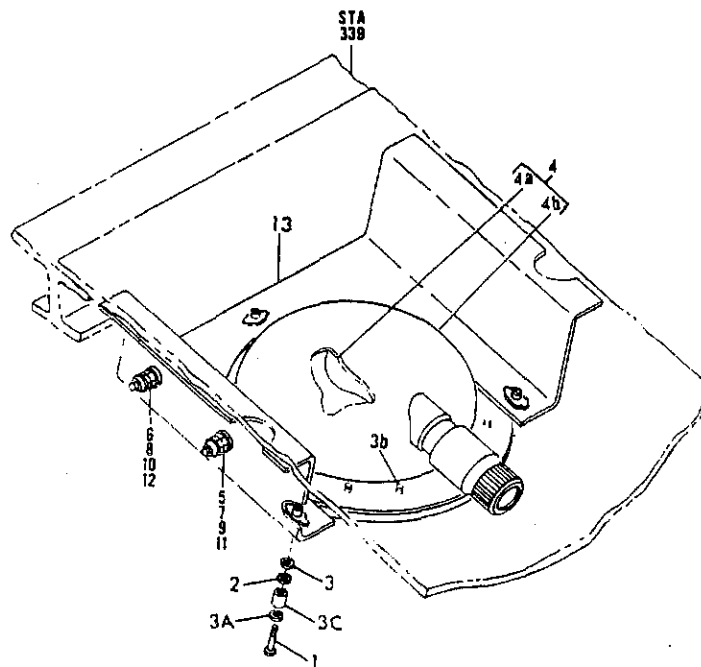


FIGURE 1. LIGHT INSTL, NOSE GEAR WHEEL WELL

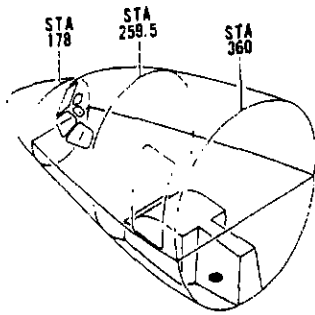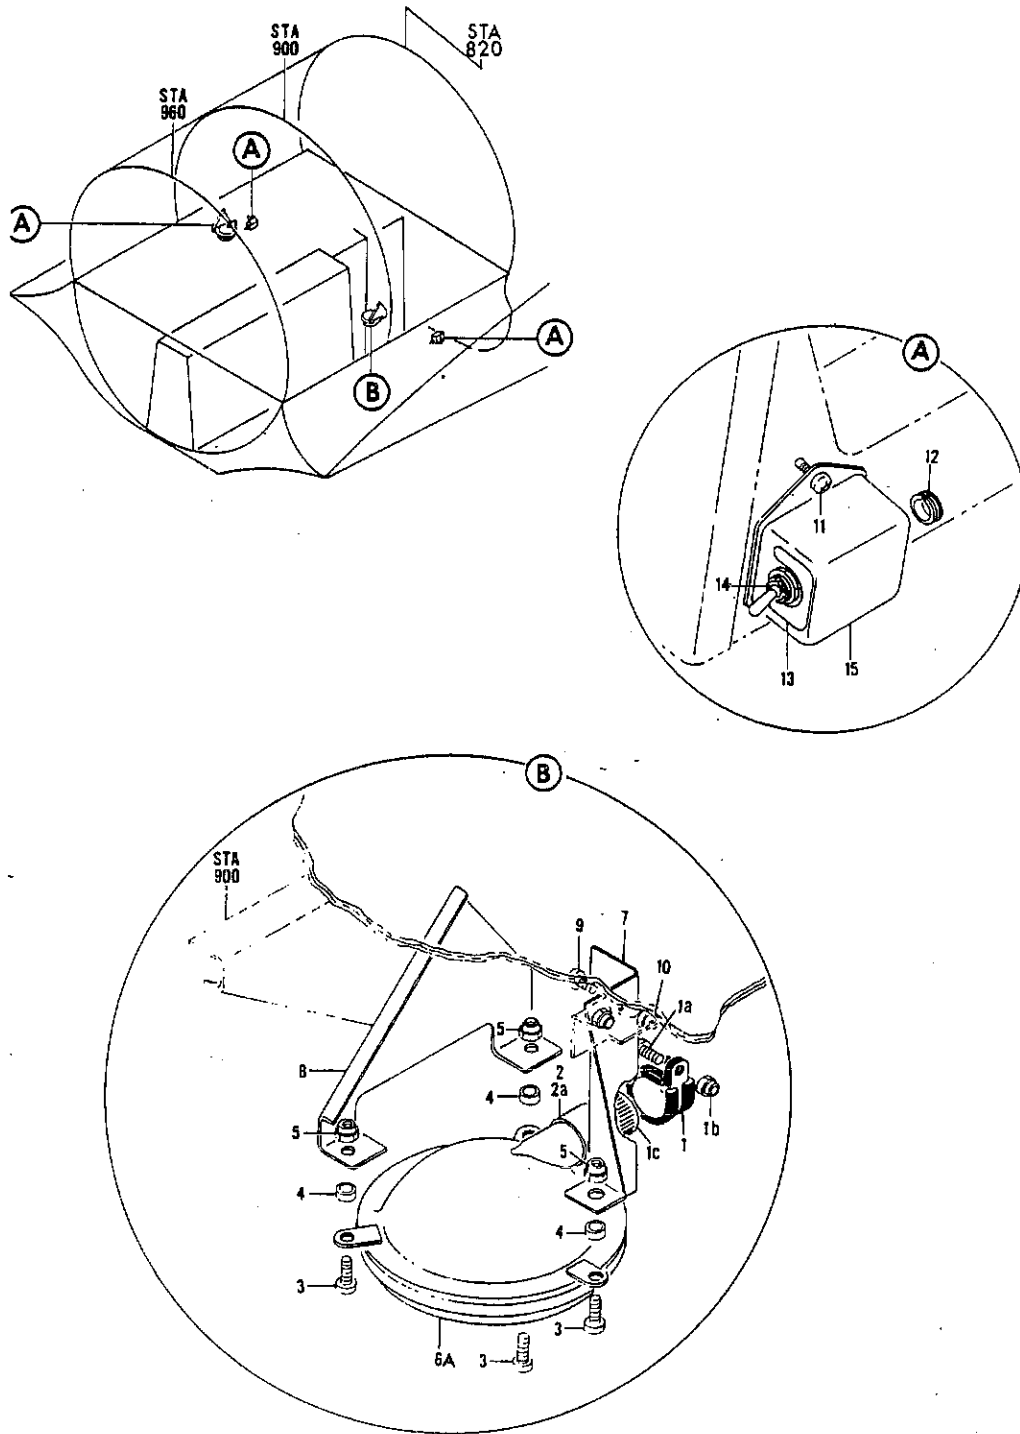

LIGHT INSTL, MAIN WHEEL WELL
FIGURE 2. SWITCH INSTL, MAIN WHEEL WELL

DETAILED PARTS LIST
33-02-2
PAGE 0

33-02-2

NOV 21/90

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2		1 2 3 4 5 6 7 LIGHT INSTL, MAIN WHEEL WELL.		
	50-1446-3001	SWITCH INSTL, MAIN WHEEL WELL LIGHT		RF
	50-1446-3002	. LIGHT INSTL, MAIN WHEEL WELL (LH) (SEE 24-3, FIG. 2, ITEM 6 AND 24-3, FIG. 2A, ITEM 32)		RF
		. LIGHT INSTL, MAIN WHEEL WELL (RH) (SEE 24-3, FIG. 2, ITEM 7 AND 24-3, FIG. 2A, ITEM 33)		
3	NAS602-8P	. . SCREW		3
4	NAS43DD3-12	. . SPACER.		3
5	NAS679A08W	. . NUT		3
6	10-0015-1	. . LIGHT ASSY, (V72914).		1
M 6A	11-0111-1	. . COVER ASSY, (V72914).		1
7	63-8630-1	. . SUPPORT, WHEEL WELL LIGHT (LH ONLY)		1
7	63-8630-2	. . SUPPORT, WHEEL WELL LIGHT (RH ONLY)		1
8	60-1561-2001	. . SUPPORT, MAIN WHEEL LIGHT (LH ONLY)		1
8	60-1561-2002	. . SUPPORT, MAIN WHEEL LIGHT (RH ONLY)		1
		ATTACHING PARTS		
9	NAS603-6P	. . SCREW		2
10	NAS679A3W	. . NUT		2
	69-17007-1	. SWITCH INSTL, MAIN WHEEL WELL LIGHT (LH) (SEE 24-2, FIG. 11, ITEM 59 AND 24-2, FIG. 12, ITEM 7A)		RF
	69-17007-2	. SWITCH INSTL, MAIN WHEEL WELL LIGHT (RH) (SEE 24-2, FIG. 11, ITEM 59 AND 24-2, FIG. 12, ITEM 7A)		RF
11	NAS603-6P	. . SCREW		2
12	NAS557-6A	. . GROMMET		1
13	BACM10L10-4SW	. . MARKER-ALUMINUM FOIL, LIGHT ON OFF.		1
14	MS35058-23	. . SWITCH.		1
15	66-1502	. . BOX, SWITCH		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

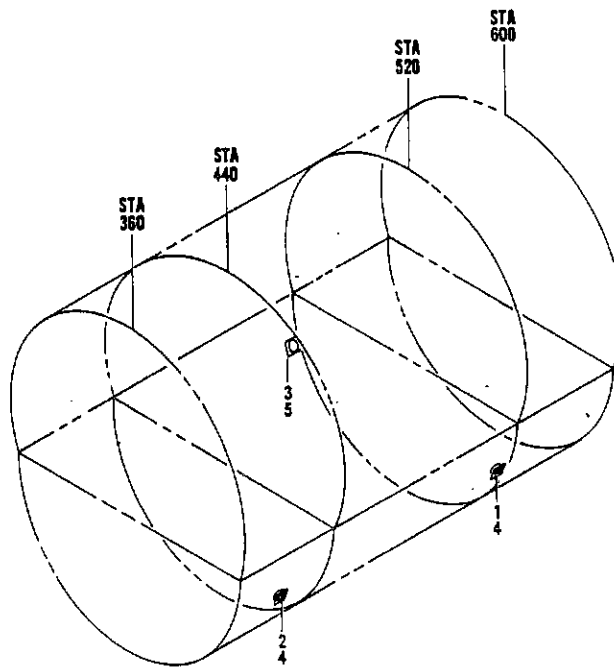


FIGURE 3. LIGHT INTL, WING SCANNING

DETAILED PARTS LIST
33-02-3
PAGE 0

33-02-3

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3	2	69-1520-1		LIGHT INSTL, WING SCANNING (LH) (SEE 24-3, FIG. 2, . . . ITEM 4)		RF
	3	69-1520-2		LIGHT INSTL, WING SCANNING (RH) (SEE 24-3, FIG. 2, . . . ITEM 5)		RF
	4	G8855A2-4594		. LIGHT ASSY, WING SCANNING (V72914) (LH ONLY).		1
	5	G8855A1-4594		. LIGHT ASSY, WING SCANNING (V72914) (RH ONLY).		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

RAF
NOV 21/90

33-02-3

DETAILED PARTS LIST
33-02-3
PAGE 1


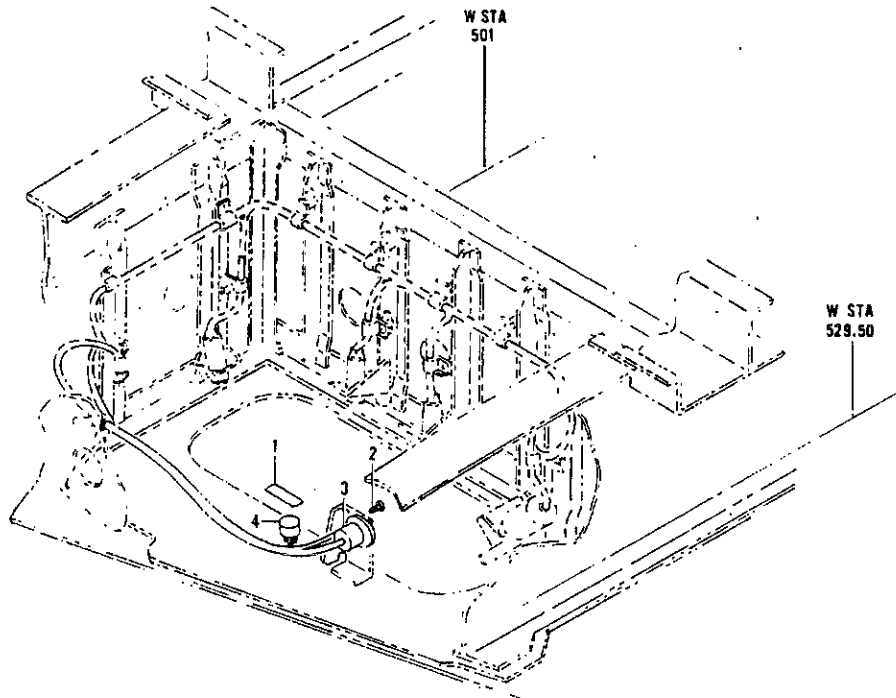


FIGURE 4. LIGHT INSTL, PRESSURE FUELING CONTROL (LIGHTS ONLY)

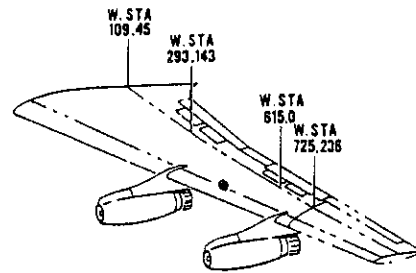


PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
4	65-2982-1		LIGHT INSTL, PRESSURE FUELING CONTROL (LH) (LIGHTS. . . ONLY) (SEE 24-2, FIG. 11, ITEM 4 AND 24-2, FIG. 12, ITEM 3A)		RF
	65-2982-2		LIGHT INSTL, PRESSURE FUELING CONTROL (RH) (LIGHTS. . . ONLY) (SEE 24-2, FIG. 11 AND 24-2, FIG. 12, ITEM 3A)		RF
1	BACMIOS3ZA		. METAL-CAL, INTERLOCK SWITCH RETR LDG LIGHT.		1
2	NAS600-7		. SCREW		2
			. FOR REFERENCE TO OTHER LIGHT DETAILS, SEE NHA		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					


RAF
NOV 21/90

33-02-4

DETAILED PARTS LIST
33-02-4
PAGE 1

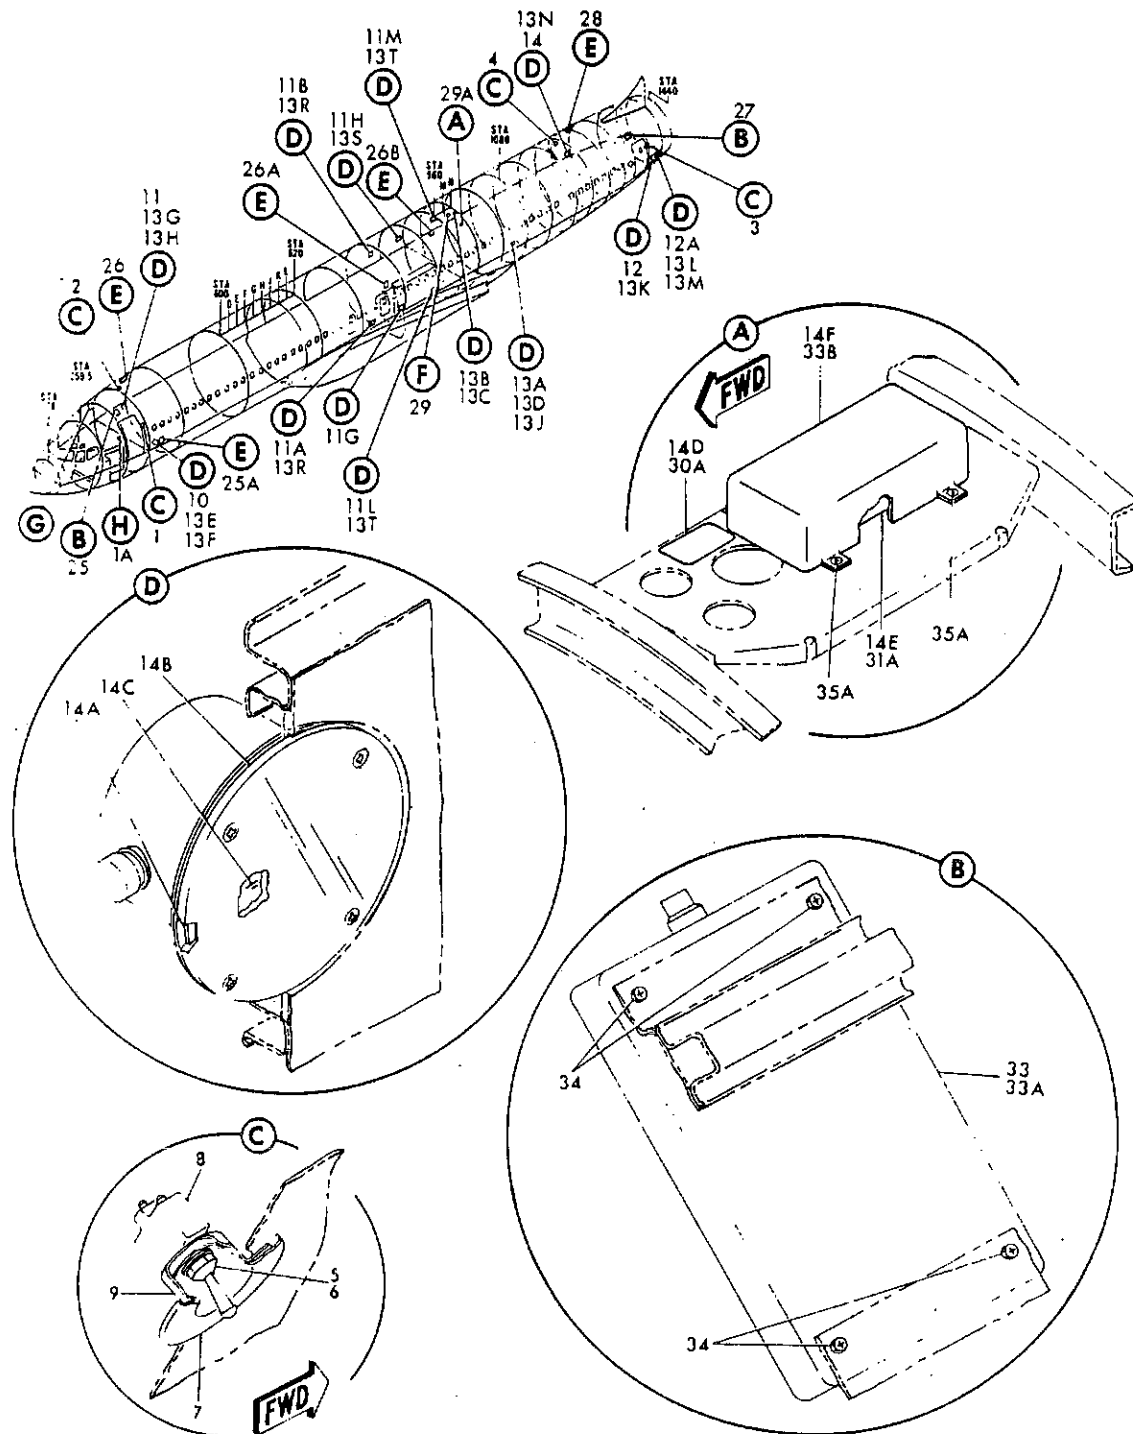

LIGHT INSTL, CHUTE
SWITCH INSTL, EXTERIOR EMERGENCY LIGHT
LIGHT INSTL, ESCAPE SLIDE ILLUMINATION
FIGURE 7. POWER SUPPLY INSTL, ESCAPE SLIDE ILLUMINATION (SHEET 1)

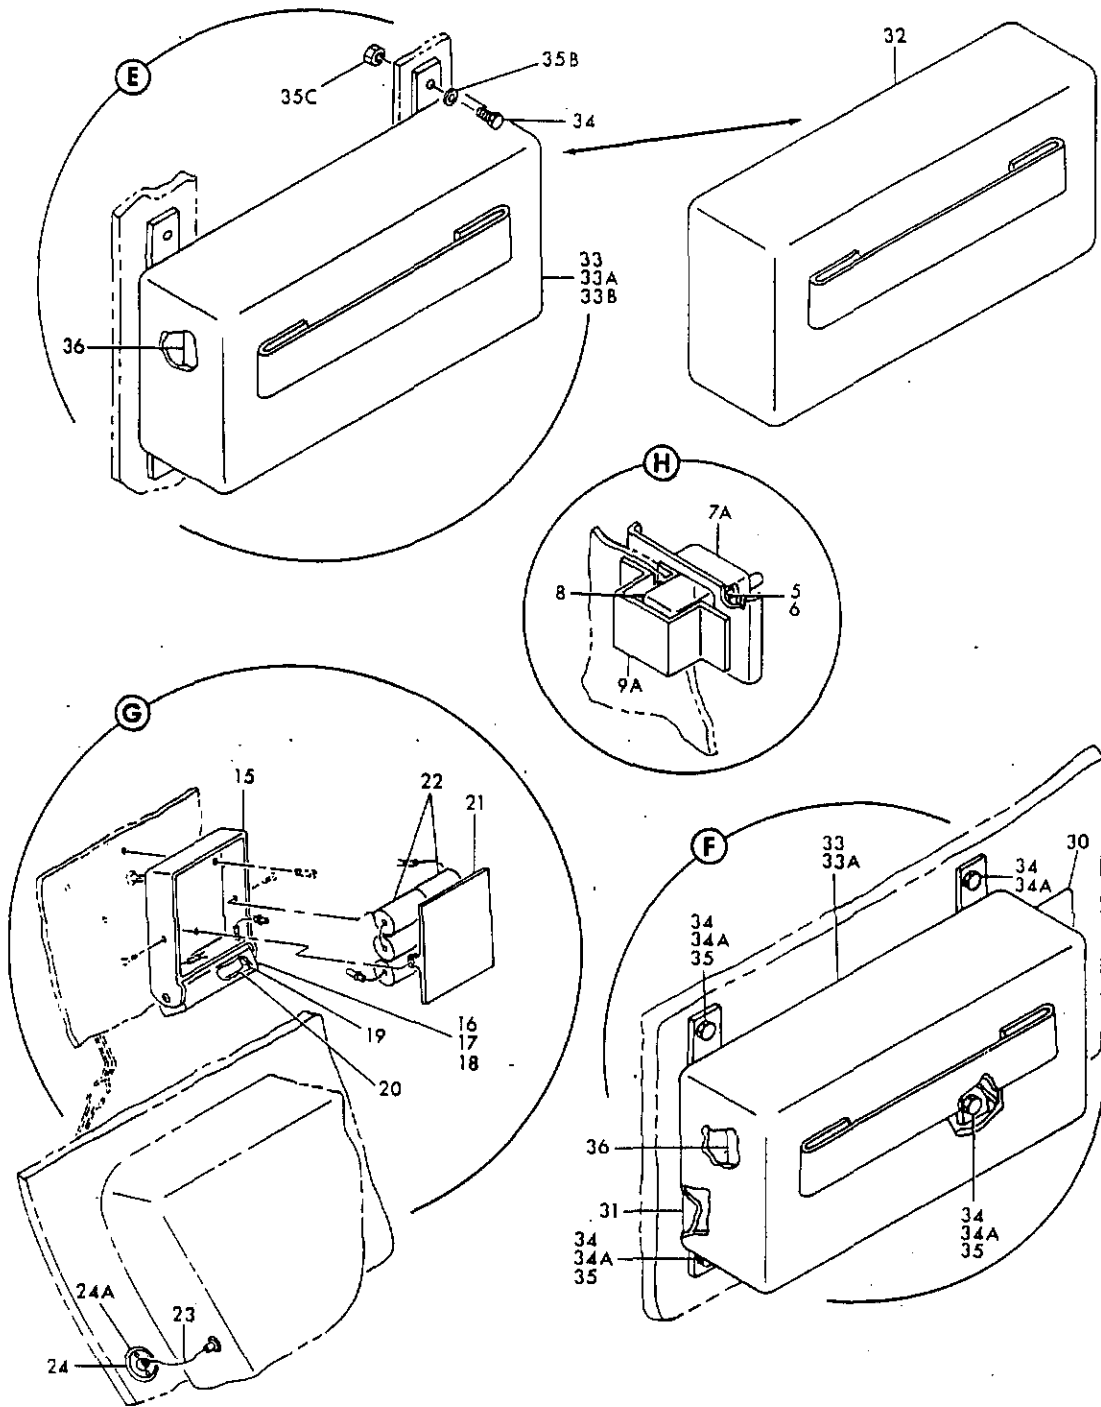

LIGHT INSTL, CHUTE
 SWITCH INSTL, EXTERIOR EMERGENCY LIGHT
 LIGHT INSTL, ESCAPE SLIDE ILLUMINATION
 FIGURE 7. POWER SUPPLY INSTL, ESCAPE SLIDE ILLUMINATION (SHEET 2)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
7		SWITCH INSTL, EXTERIOR EMERGENCY LIGHT.		
		LIGHT INSTL, ESCAPE SLIDE ILLUMINATION.	5199	
		POWER SUPPLY INSTL, ESCAPE SLIDE ILLUMINATION.	5199	
3	65-71596-1	. SWITCH INSTL, EXTERIOR EMERGENCY LIGHTS AFT (SEE.	5199	RF
		25-18, FIG. 13A, ITEM 27A, 25-18, FIG. 14F, ITEM		
		69, 25-18, FIG. 14Q, ITEM 49, 25-18, FIG. 15,		
		ITEM 24A, 25-18 FIG. 15G, ITEM 77, 25-18, FIG.		
		16H, ITEM 82, 25-18, FIG. 16F, ITEM 28, 25-18,		
		FIG. 16L, ITEM 63, 25-18, FIG. 16M, ITEM 56,		
		25-18, FIG. 16P, ITEM 71, 25-18, FIG. 16Q, ITEM		
		51, 25-18, FIG. 16R, ITEM 73, 25-18, FIG. 16S,		
		ITEM 51, 25-18, FIG. 16T, ITEM 14, 25-18,		
		FIG. 16W, ITEM 18, 25-18, FIG. 16V, ITEM 43,		
		25-18, FIG. 16Z, ITEM 44, 25-18, FIG. 17J,		
		ITEM 72, 25-18, FIG. 17V, ITEM 23A, 25-18,		
		FIG. 17X, ITEM 25A, 25-18, FIG. 18A, ITEM 44,		
		25-18, FIG. 18B, ITEM 46, 25-18, FIG.		
		18C, ITEM 82 AND 25-18, FIG. 221, ITEM 56)		
3	65-71596-1	. SWITCH INSTL, EXTERIOR EMERGENCY LIGHTS AFT (ADDED BY	0150	RF
		SB 2719) (SEE 25-18, FIG. 17E, ITEM 154 AND		
		25-18, FIG. 17Q, ITEM 83B)		
5	AN960D816L	. . . WASHER.	5199	1
5	AN960D816L	. . . WASHER.	0150	1
6	MS25082-8	. . . NUT	5199	1
6	MS25082-8	. . . NUT	0150	1
7	69-52095-2	. . . ESCUTCHEON, (USED ON 65-71596-1).		1
8	MS24658-23D	. . . SWITCH.	5199	1
8	MS24658-23D	. . . SWITCH.	0150	1
9	69-28756-2	. . . SWITCH SUPPORT, (NOT USED ON 65-71741-1).	5199	1
9	69-28756-2	. . . SWITCH SUPPORT, (USED ON 65-71596-1).	0150	1
		ATTACHING PARTS		
	NAS601-5P	. . . SCREW	5199	3
	NAS601-5P	. . . SCREW	0150	3
	BACN10FX61	. . . NUT, (USED ON 65-71596-1).	0150	3
	SL1650-06-5S	. . . INSERT, (V97393).	0150	3
10	65-58620-1	. LIGHT INSTL, ESCAPE SLIDE ILLUMINATION (SEE 24-3, . .	5199	RF
		FIG. 1A, ITEM 78, 24-3, FIG. 1B, ITEM 70 AND		
		24-3, FIG. 1C, ITEM 66)		
11	65-58620-2	. LIGHT INSTL, ESCAPE SLIDE ILLUMINATION (SEE 24-3, . .	5199	RF
		FIG. 2, ITEM 14)		
12	65-58620-3	. LIGHT INSTL, ESCAPE SLIDE ILLUMINATION (SEE 24-3, . .	5199	RF
		FIG. 3, ITEM 37)		
13	65-58620-4	. LIGHT INSTL, ESCAPE SLIDE ILLUMINATION (SEE 24-3, . .	5199	RF
		FIG. 3, ITEM 38)		
13A	65-58620-14	. LIGHT INSTL, ESCAPE SLIDE ILLUMINATION (SEE 24-3, . .	5199	RF
		FIG. 3, ITEM 38A)		
13B	65-58620-15	. LIGHT INSTL, ESCAPE SLIDE ILLUMINATION (SEE 24-3, . .	5199	RF
		FIG. 3, ITEM 38B)		
13E	30-0432-3	. . LIGHT ASSY, STATION 353 EMERGENCY EGRESS LH . . .	5199	1
		(V72914) (SEE FIG. 19)		
13G	30-0432-5	. . LIGHT ASSY, STATION 451.8 EMERGENCY EGRESS RH . . .	5199	1
		(V72914) (SEE FIG. 19)		
13J	30-0432-1	. . LIGHT ASSY, STATION 1031.3 EMERGENCY EGRESS . . .	5199	1
		(V72914) (SEE FIG. 19)		
13K	30-0432-7	. . LIGHT ASSY, STATION 1395 EMERGENCY EGRESS LH. . .	5199	1
		(V72914) (SEE FIG. 19)		
13N	30-0432-9	. . LIGHT ASSY, STATION 1355 EMERGENCY EGRESS RH. . .	5199	1
		(V72914) (SEE FIG. 19)		
26	65-58620-6	. POWER SUPPLY INSTL, ESCAPE SLIDE ILLUMINATION (SEE. .	5199	RF
		24-3, FIG. 2, ITEM 15)		
28	65-58620-8	. POWER SUPPLY INSTL, STATION 1307.3 ESCAPE SLIDE . .	5199	RF
		ILLUMINATION (SEE 24-3, FIG. 3, ITEM 40)		
29A	65-58620-20	. POWER SUPPLY INSTL, ESCAPE SLIDE ILLUMINATION (SEE. .	5199	RF
		24-3, FIG. 3, ITEM 40B)		
30A	BAC27CEE613	. . MARKER-ALUMINUM FOIL, M576 POWER PACK	5199	1
31A	BAC27CEE616	. . MARKER-ALUMINUM FOIL, ESCAPE SLIDE LIGHT POWER. .	5199	1
		SUPPLY		
33	60-1321-1	. . POWER SUPPLY, EMERGENCY EXIT LIGHT (V72914)	5199	1
33B	60-1321-1	. . POWER SUPPLY, EMERGENCY EXIT LIGHT (V72914)	5199	1
		ATTACHING PARTS		
35A	BACS12CB3-8	. . SCREW, (USED ON 65-58620-20).	5199	4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

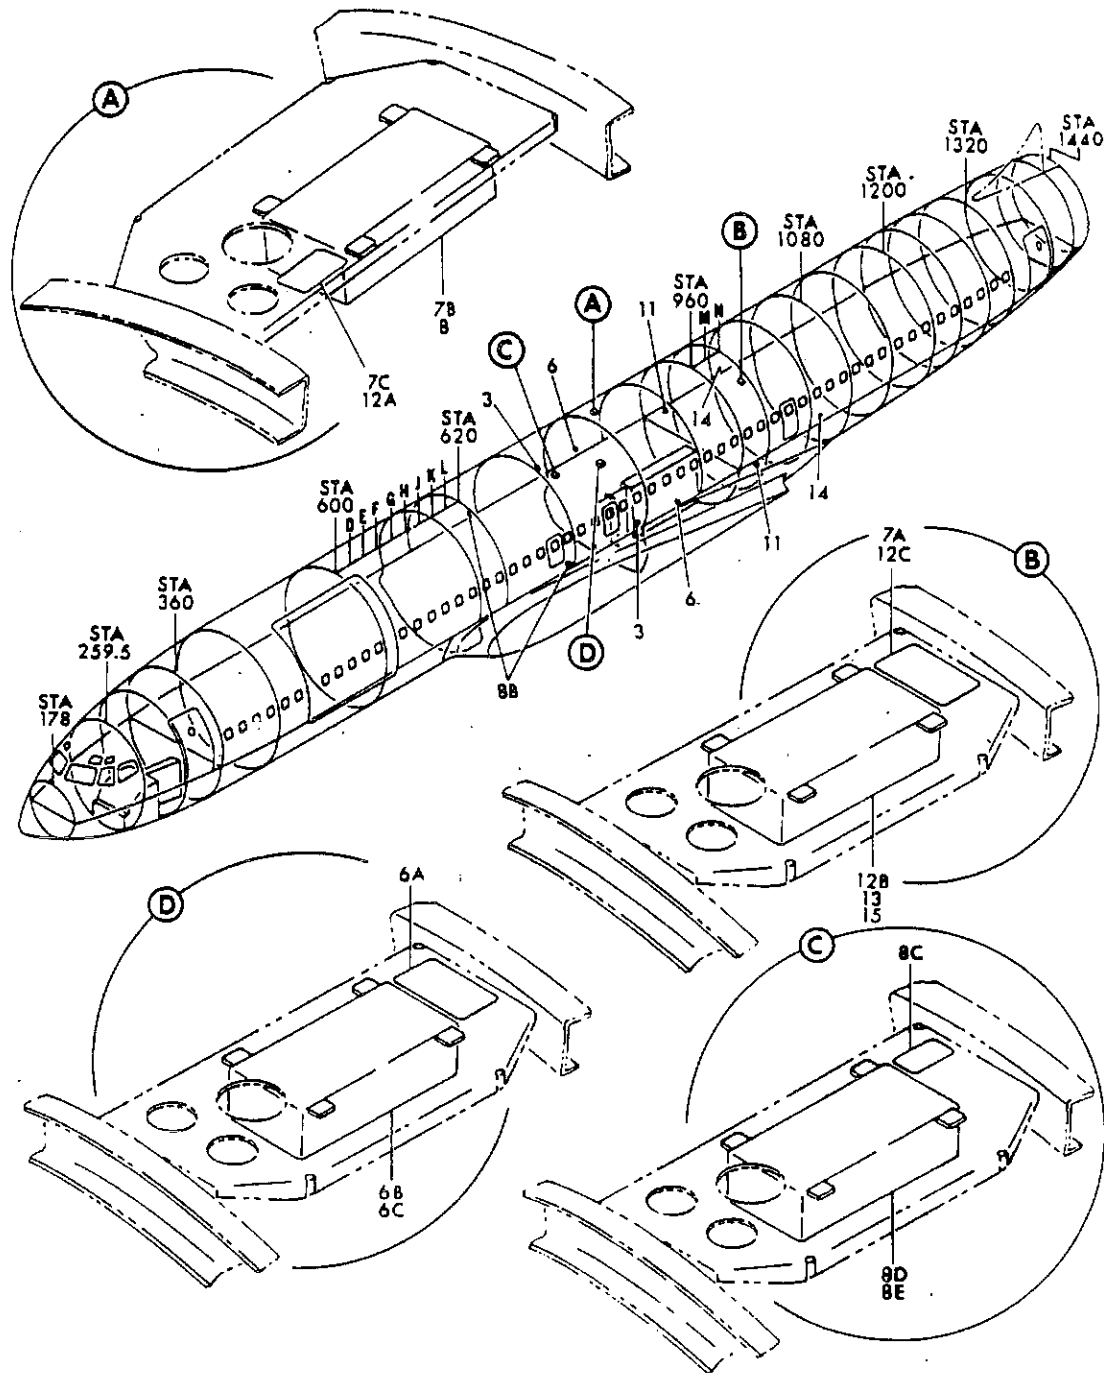


FIGURE 12. LIGHT INSTL, SECTION 56 OVERWING ESCAPE ILLUMINATION (LIGHTS ONLY)

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
12			LIGHT INSTL, SECTION 53 AND 56 OVERWING ESCAPE. ILLUMINATION (LIGHTS ONLY)		
	65-71727-13		. LIGHT INSTL, SECTION 53 OVERWING ESCAPE ILLUMINATION (LIGHTS ONLY) (ADDED BY SB 2754) (SEE 24-3, FIG. 2, ITEM 17)	0150	RF
	65-71727-23		. LIGHT INSTL, SECTION 53 OVERWING ESCAPE ILLUMINATION (LIGHTS ONLY) (SEE 24-3, FIG. 2, ITEM 17)	5199	RF
	65-71727-5		. . . LIGHT INSTL, LH		1
	65-71727-6		. . . LIGHT INSTL, RH		1
3	30-0431-1		. . . LIGHT ASSY, STATION 794.3 (V72914).		1
	65-71727-7		. . . LIGHT INSTL, LH		1
	65-71727-8		. . . LIGHT INSTL, RH		1
6	30-0431-3		. . . LIGHT ASSY, (V72914).		1
	65-71727-25		. . . POWER SUPPLY INSTL, STATION 785 LH (LIGHTS ONLY). . (ADDED BY SVA MSL 33-026)	5199	1
6A	BAC27CEE479		. . . MARKER-ALUMINUM FOIL, M524 POWER PACK	5199	1
6B	60-1321-1		. . . POWER SUPPLY ASSY, EMERGENCY EXIT LIGHT (V72914) ATTACHING PARTS	5199	1
	BACS12CB3-8		. . . SCREW	5199	4
			-----*		
6C	61-0478-1		 BATTERY ASSY, (V72914).	5199	1
	65-71727-25		. . . POWER SUPPLY INSTL, STATION 850 RH (LIGHTS ONLY). . (DELETED BY SVA MSL 33-026)	5199	1
7A	BAC27CEE479		. . . MARKER-ALUMINUM FOIL, M524 POWER PACK	5199	1
7B	60-1321-1		. . . POWER SUPPLY ASSY, EMERGENCY EXIT LIGHT (V72914) ATTACHING PARTS	5199	1
	BACS12CB3-8		. . . SCREW	5199	4
			-----*		
M 7B	61-0478-1		 BATTERY ASSY, (V72914).	5199	1
	65-71727-11		. . . POWER SUPPLY INSTL, STATION 866.44 RH (LIGHTS ONLY)	0150	1
7C	BAC27CEE479		. . . MARKER-ALUMINUM FOIL, M524 POWER PACK	0150	1
8	60-1321-1		. . . POWER SUPPLY ASSY, EMERGENCY EXIT LIGHT (V72914) ATTACHING PARTS	0150	1
	BACS12CB3-4		. . . SCREW	0150	4
			-----*		
M 8	61-0478-1		 BATTERY ASSY, (V72914).	0150	1
	65-81513-5		. . . FOR REFERENCE TO OTHER LIGHT DETAILS, SEE NHA LIGHT INSTL, SECTION 53 OVERWING AND ESCAPE SLIDE . . ILLUMINATION (LIGHTS ONLY) (SEE 24-3, FIG. 2, ITEM 18)	5199	RF
			. . . LIGHT ASSY, STATION 714 (LH AND RH) (V72914).	5199	2
8B	30-0431-5		. . . MARKER-ALUMINUM FOIL, M652 POWER PACK	5199	1
8C	BAC27CEE614		. . . POWER SUPPLY ASSY, STATION 730 (LH) (V72914).	5199	1
8D	60-1321-1		. . . ATTACHING PARTS		
	BACS12CB3-4		. . . SCREW	5199	4
			-----*		
M 8E	61-0478-1		 BATTERY ASSY, (V72914).	5199	1
	65-71727-13		. . . FOR REFERENCE TO OTHER LIGHT DETAILS, SEE NHA LIGHT INSTL, SECTION 56 OVERWING ESCAPE ILLUMINATION (LIGHTS ONLY) (ADDED BY SB 2754) (SEE 24-3, FIG. 3, ITEM 41)	5199	RF
	65-71727-24		. . . LIGHT INSTL, SECTION 56 OVERWING ESCAPE ILLUMINATION (LIGHTS ONLY) (SEE 24-3, FIG. 3, ITEM 41)	5199	RF
	65-71727-9		. . . LIGHT INSTL, LH		1
	65-71727-10		. . . LIGHT INSTL, RH		1
11	30-0432-1		. . . LIGHT ASSY, STATION 960 PLUS 31 EMERGENCY EGRESS (V72914) (SEE FIG. 19)		1
	65-71727-26		. . . POWER SUPPLY INSTL, STATION 960N PLUS 10 LH (LIGHTS ONLY)	5199	1
12A	BAC27CEE612		. . . MARKER-ALUMINUM FOIL, M525 POWER PACK	5199	1
12B	60-1321-1		. . . POWER SUPPLY ASSY, EMERGENCY EXIT LIGHT (V72914) ATTACHING PARTS	5199	1
	BACS12CB3-8		. . . SCREW	5199	4
			-----*		
M 12B	61-0478-1		 BATTERY ASSY, (V72914).	5199	1
	65-71727-12		. . . POWER SUPPLY INSTL, STATION 960 PLUS 28.65 LH . . . (LIGHTS ONLY)	0150	1
12C	BAC27CEE518		. . . MARKER-ALUMINUM FOIL, M525 POWER PACK	0150	1
13	60-1321-1		. . . POWER SUPPLY ASSY, EMERGENCY EXIT LIGHT (V72914) ATTACHING PARTS	0150	1
	BACS12CB3-4		. . . SCREW	0150	4
			-----*		
M 13	61-0478-1		 BATTERY ASSY, (V72914).		1
			. . . FOR REFERENCE TO OTHER LIGHT DETAILS, SEE NHA . . .		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

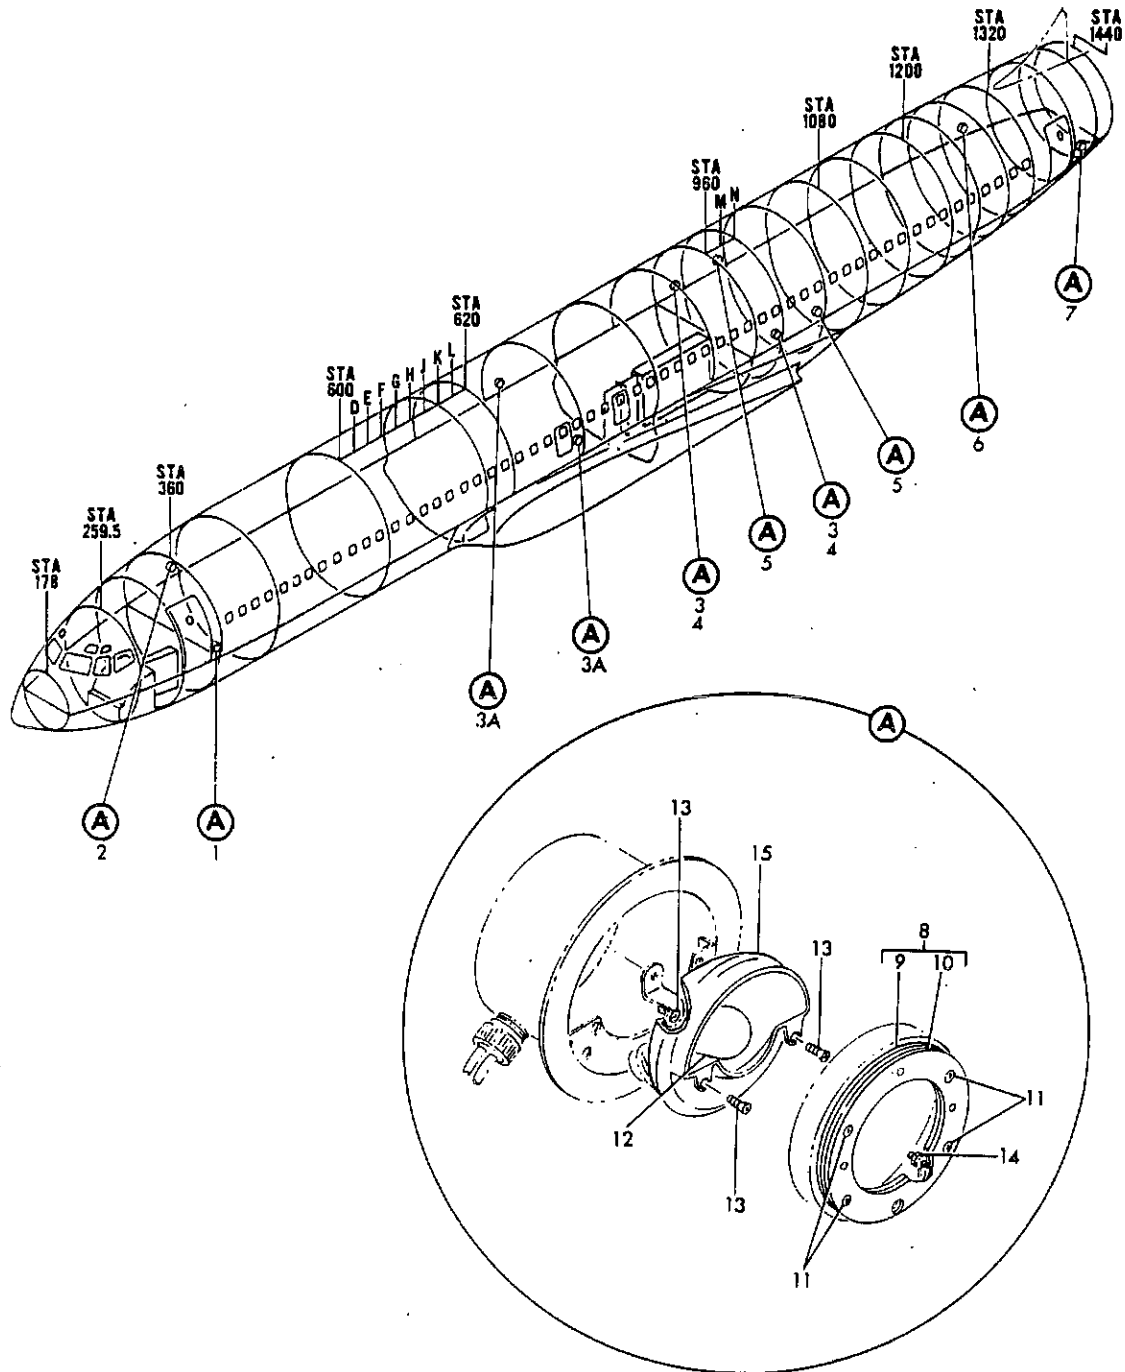


FIGURE 19. LIGHT ASSY, EMERGENCY EGRESS

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
19			LIGHT ASSY, EMERGENCY EGRESS.		
1	30-0432-3		. LIGHT ASSY, STATION 353 EMERGENCY EGRESS LH (V72914) (SEE FIG. 7, ITEM 13E AND FIG. 18, ITEM 1)	5199	RF
2	30-0432-5		. LIGHT ASSY, STATION 451.8 EMERGENCY EGRESS RH (V72914) (SEE FIG. 7, ITEM 13G AND FIG. 18, ITEM 2)	5199	RF
3	30-0432-1		. LIGHT ASSY, STATION 960 PLUS 31 EMERGENCY EGRESS. . . (V72914) (ADDED BY SB 2754) (SEE FIG. 12, ITEM 11 AND FIG. 13, ITEM 8A)	0150	RF
5	30-0432-1		. LIGHT ASSY, STATION 1031.3 EMERGENCY EGRESS (V72914) (SEE FIG. 7, ITEM 13J AND FIG. 18, ITEM 3)	5199	RF
6	30-0432-9		. LIGHT ASSY, STATION 1355 EMERGENCY EGRESS RH (V72914) (SEE FIG. 7, ITEM 13N AND FIG. 18 ITEM 4)	5199	RF
7	30-0432-7		. LIGHT ASSY, STATION 1395 EMERGENCY EGRESS LH (V72914) (SEE FIG. 7, ITEM 13K AND FIG. 18, ITEM 5)	5199	RF
M 8	31-1500-1		. . RETAINER ASSY, LENS (V72914).		1
M 9	31-1493-1		. . . GASKET, (V72914).		1
M 10	25-0471-23		. . . LENS, (V72914).		1
M 11	SCREW		. . SCREW, (V72914) (PN UNASSIGNED)		4
M 12	1619		. . LAMP, (V08806).		1
M 13	MS24693S25		. . SCREW		3
M 14	MS21042-06		. . NUT		1
M 15	31-1498-1		. . REFLECTOR ASSY, (V72914).		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

RAF
NOV 21/90

33-02-19

DETAILED PARTS LIST
33-02-19
PAGE 1

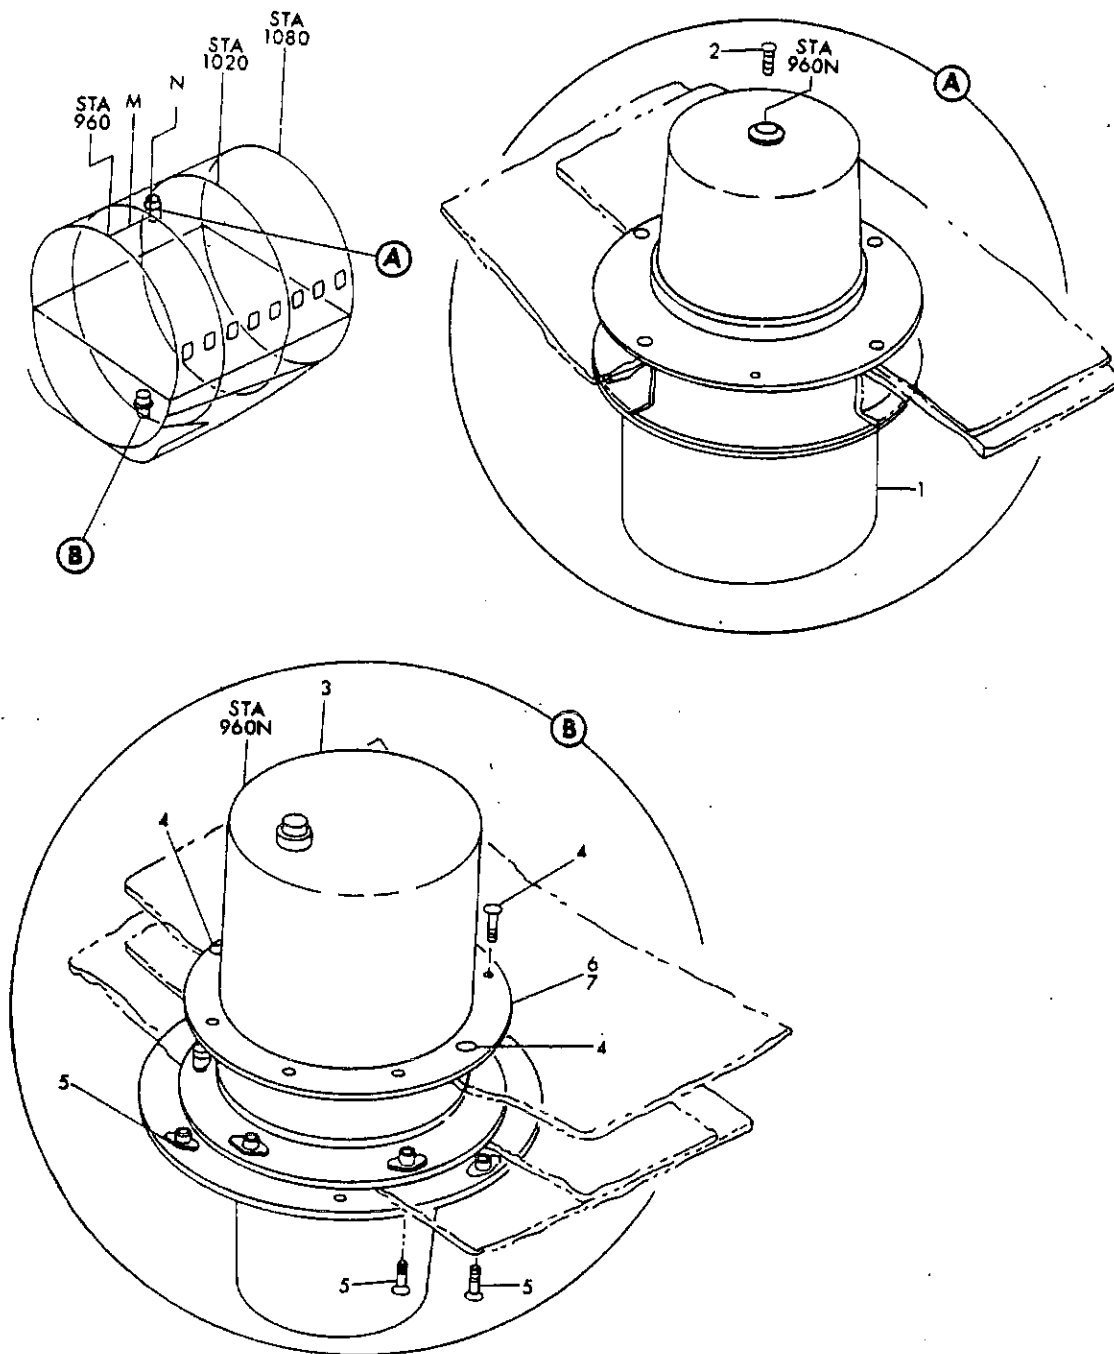


FIGURE 22. LIGHT INSTL, SUPPLEMENTAL ANTI-COLLISION (SHEET 1)

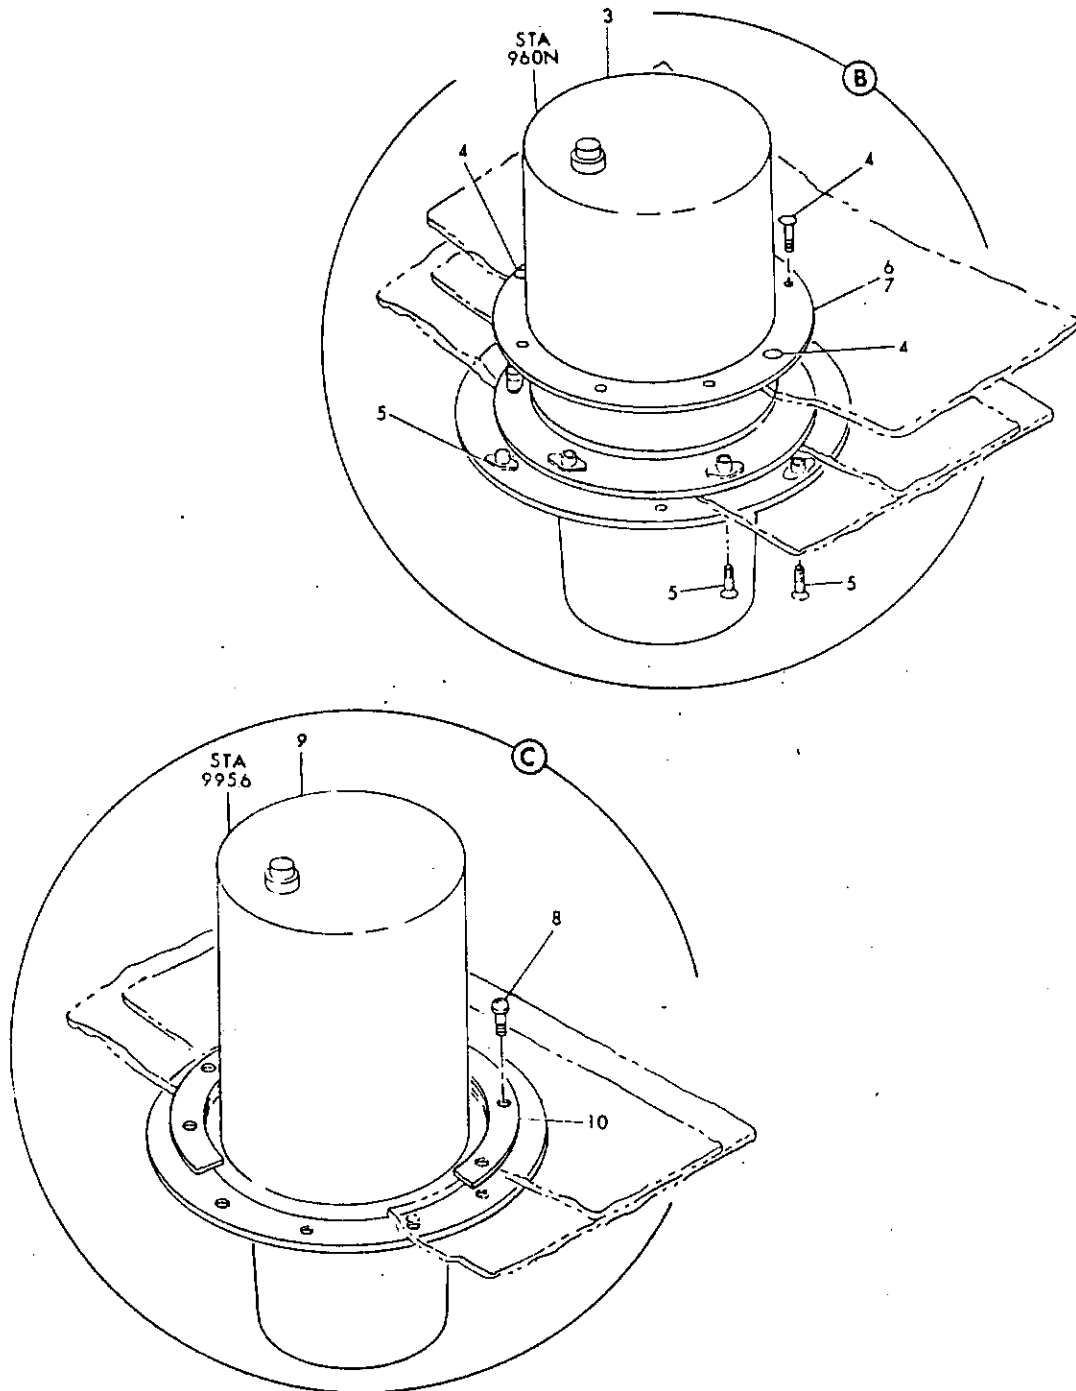


FIGURE 22. LIGHTINSTL, SUPPLEMENTAL ANTI-COLLISION (SHEET 2)

NOV 21/90

33-02-22

DETAILED PARTS LIST
33-02-22
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
22	65-79183-10		LIGHT INSTL, SUPPLEMENTAL ANTI-COLLISION.	5199	
			. LIGHT INSTL, SUPPLEMENTAL ANTI-COLLISION (UPPER). . .	5199	RF
			(SEE 24-3, FIG. 3, ITEM 63)		
1	30-0657-1		. . LIGHT, STROBE (V72914).	5199	1
			ATTACHING PARTS		
2	NAS603-9P		. . SCREW	5199	6
			-----*		
	65-79183-9		. LIGHT INSTL, SUPPLEMENTAL ANTI-COLLISION (LOWER). . .	5199	RF
			(SEE 24-3, FIG. 3, ITEM 64)		
3	30-0657-5		. . LIGHT, STROBE (V72914).	5199	1
			ATTACHING PARTS		
4	NAS603-12P		. . SCREW	5199	8
			-----*		
5	NAS603-16P		. . SCREW	5199	16
6	69-61480-5		. . RING ASSY	5199	1
7	69-61480-6		. . . RING.	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

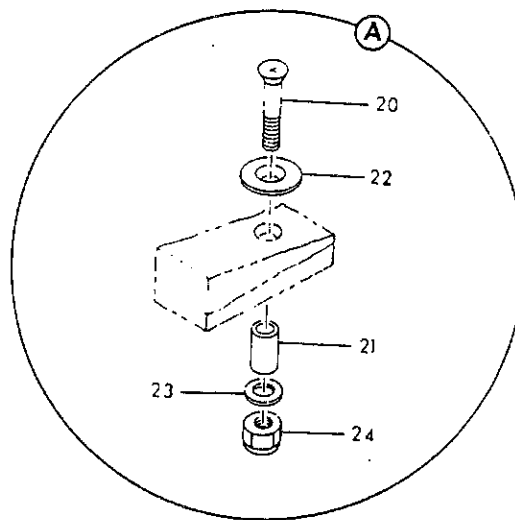
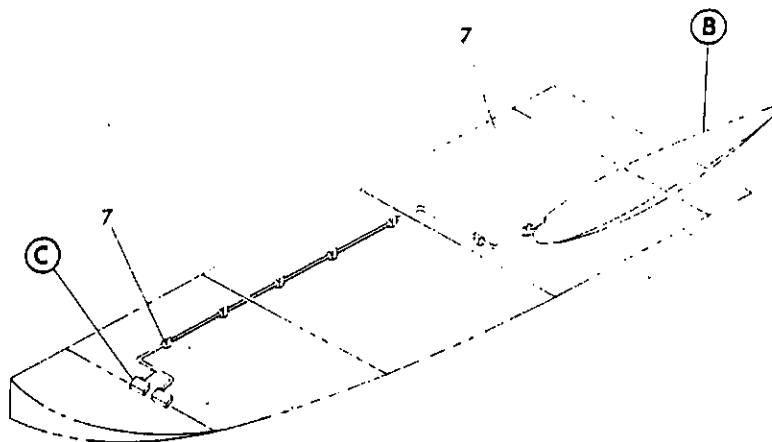
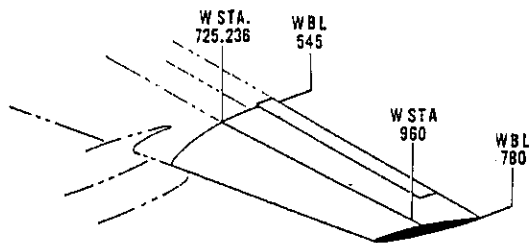


FIGURE 25. FAIRING ASSEMBLY INSTALLATION (SHEET 1)

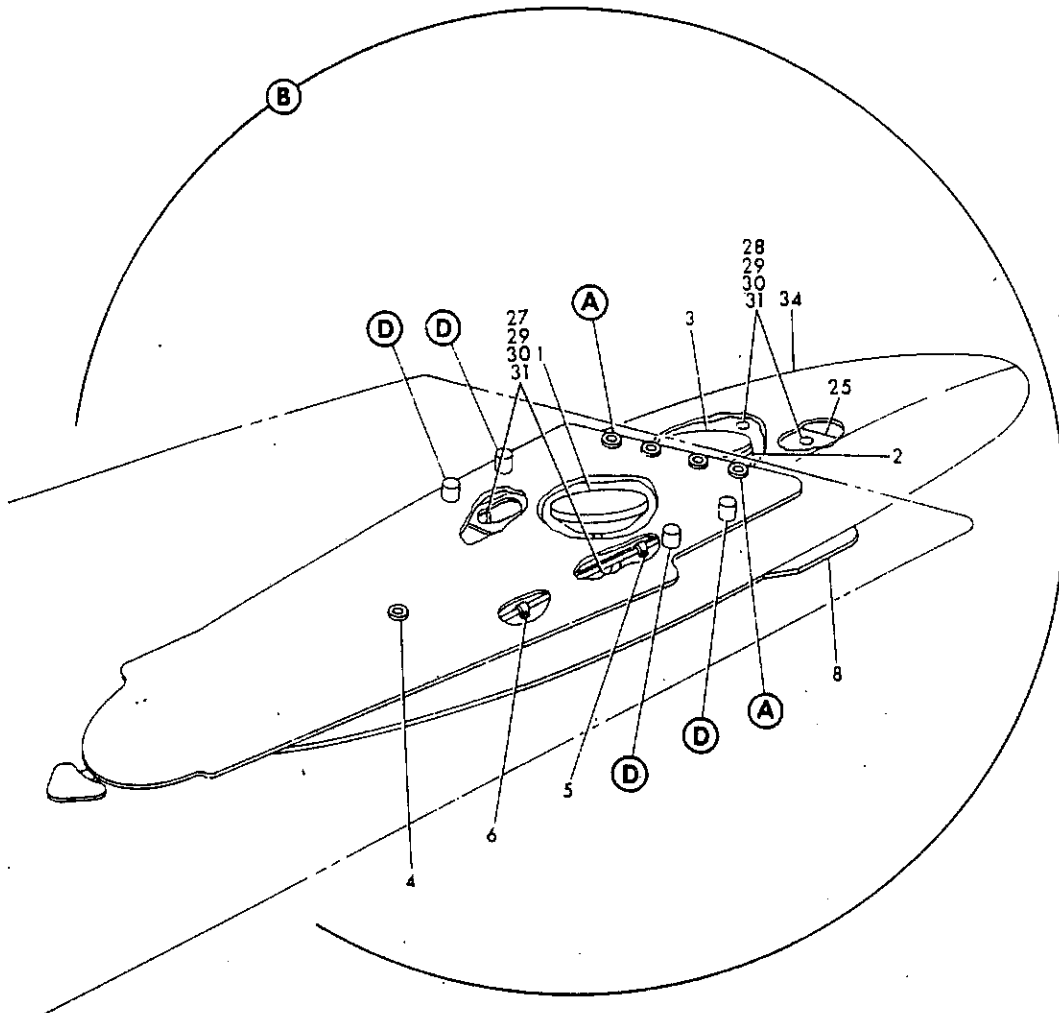


FIGURE 25. FAIRING ASSEMBLY INSTALLATION (SHEET 2)

NOV 21/90

33-02-25

DETAILED PARTS LIST
33-02-25
PAGE 1

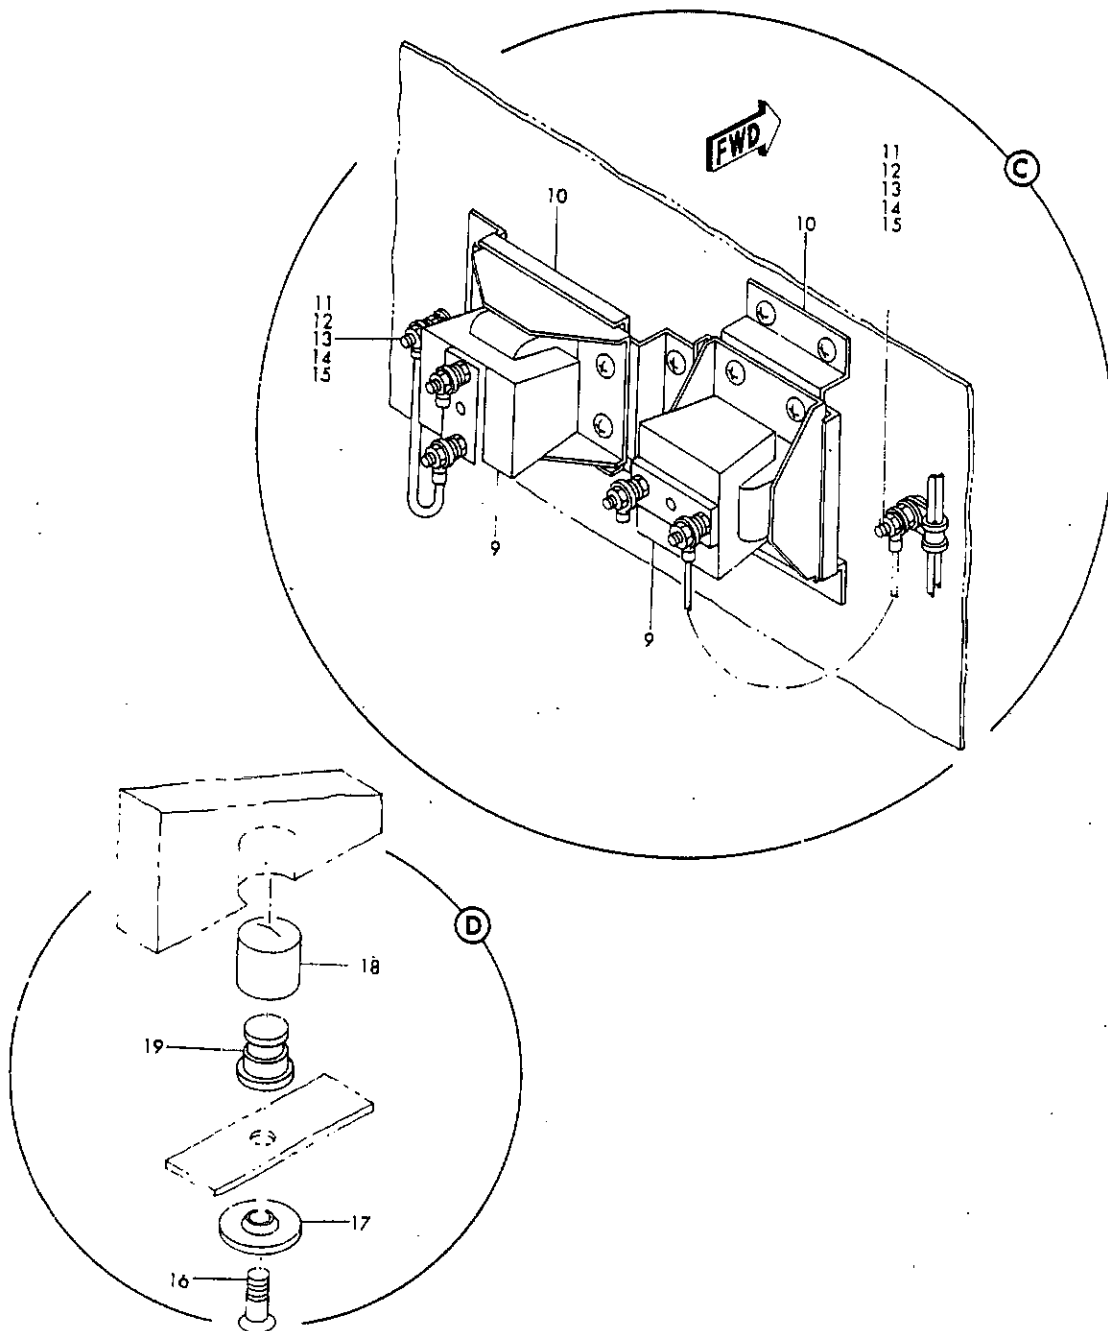


FIGURE 25. FAIRING ASSEMBLY INSTALLATION (SHEET 3)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
25	70733501-1	PAIRING ASSEMBLY INSTL, (LH) (V0438B) (ADDED BY SVA . . . E.O. 80458) (SEE 57-2, FIG. 3, ITEM 49)	5199	RF
	70733501-2	PAIRING ASSEMBLY INSTL, (RH) (V0438B) (ADDED BY SVA . . . E.O. 80458) (SEE 57-2, FIG. 3, ITEM 49)	5199	RF
1	00033005-3	. LAMPHOUSING ASSY, FWD POSITION (LH) (V0438B).	5199	1
1	00033005-4	. LAMPHOUSING ASSY, FWD POSITION (RH) (V0438B).	5199	1
2	00033005-5	. LAMPHOUSING ASSY, AFT POSITION (LH) (V0438B).	5199	1
2	00033005-6	. LAMPHOUSING ASSY, AFT POSITION (RH) (V0438B).	5199	1
3	00833016	. GASKET, (V0438B).	5199	1
4	NAS557-8A	. GROMMET	5199	1
5	NAS1715D3K	. CLAMP	5199	1
6	NAS1715D6K	. CLAMP	5199	1
		ATTACHING PARTS		
	NAS60CK3-2	. SCREW	5199	2
	AN960D10	. WASHER	5199	2
	A3235SS020	. WASHER, (V78553).	5199	2
	NAS679C3M	. NUT	5199	2
7	NAS1715D6K	. CLAMP	5199	7
		ATTACHING PARTS		
	NAS1635-3-8	. SCREW	5199	7
	AN960D10	. WASHER	5199	7
	MS21045C3	. NUT	5199	7
8	00033003	. DISCHARGER ASSY, LIGHTNING-STRIKE/STATIC (V0438B) . .	5199	1
9	12965	. TRANSFORMER, (V95266)	5199	2
		ATTACHING PARTS		
	NAS1635-3-8	. SCREW	5199	8
	AN960D10	. WASHER	5199	8
10	73733001-3	. BRACKET ASSY, (V0438B)	5199	2
		ATTACHING PARTS		
	NAS1635-3-8	. SCREW	5199	8
	AN960D10	. WASHER	5199	8
	MS21045C3	. NUT	5199	8
11	AN520PB10-10	. BOLT	5199	2
12	AN960PB10L	. WASHER	5199	8
13	MS35337-100	. LOCKWASHER	5199	2
14	AN345B10	. NUT	5199	2
15	NAS679C3M	. NUT	5199	2
16	NAS560CK3-00	. SCREW	5199	4
17	A3235SS020	. WASHER, (V78553).	5199	4
18	SL601-3-4C	. INSERT, (V97393).	5199	4
19	SLT600T3	. TAB, (V97393)	5199	4
20	NAS560CK3-7	. SCREW	5199	4
21	NAS43DD3-25	. SPACER	5199	4
22	A3235SS020	. WASHER, (V78553).	5199	4
23	AN960D10	. WASHER	5199	4
24	NAS679C3M	. NUT	5199	4
25	70733006-1	. SHIELD ASSY, HEAT (LH) (V0438B) (ADDED BY DEVORE. . . SB 7-76)	5199	1
	70733006-2	. SHIELD ASSY, HEAT (RH) (V0438B) (ADDED BY DEVORE. . . SB 7-76)	5199	1
		ATTACHING PARTS		
27	NAS560CK3-2	. SCREW	5199	2
28	NAS560CK3-3	. SCREW	5199	2
29	AN960D10	. WASHER	5199	4
30	A3235-55-020	. WASHER, (V78553).	5199	4
34	70733002-11	. FAIRING ASSY, (LH) (V0438B)	5199	1
	70733002-12	. FAIRING ASSY, (RH) (V0438B)	5199	1
37	NAS679C3M	ATTACHING PARTS		
		. NUT	5199	4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/90

33-02-25

DETAILED PARTS LIST
33-02-25
PAGE 3

BOEING *Intercontinental* **707**
PARTS CATALOG

SECTION 03
CONTROL CABIN LIGHTING

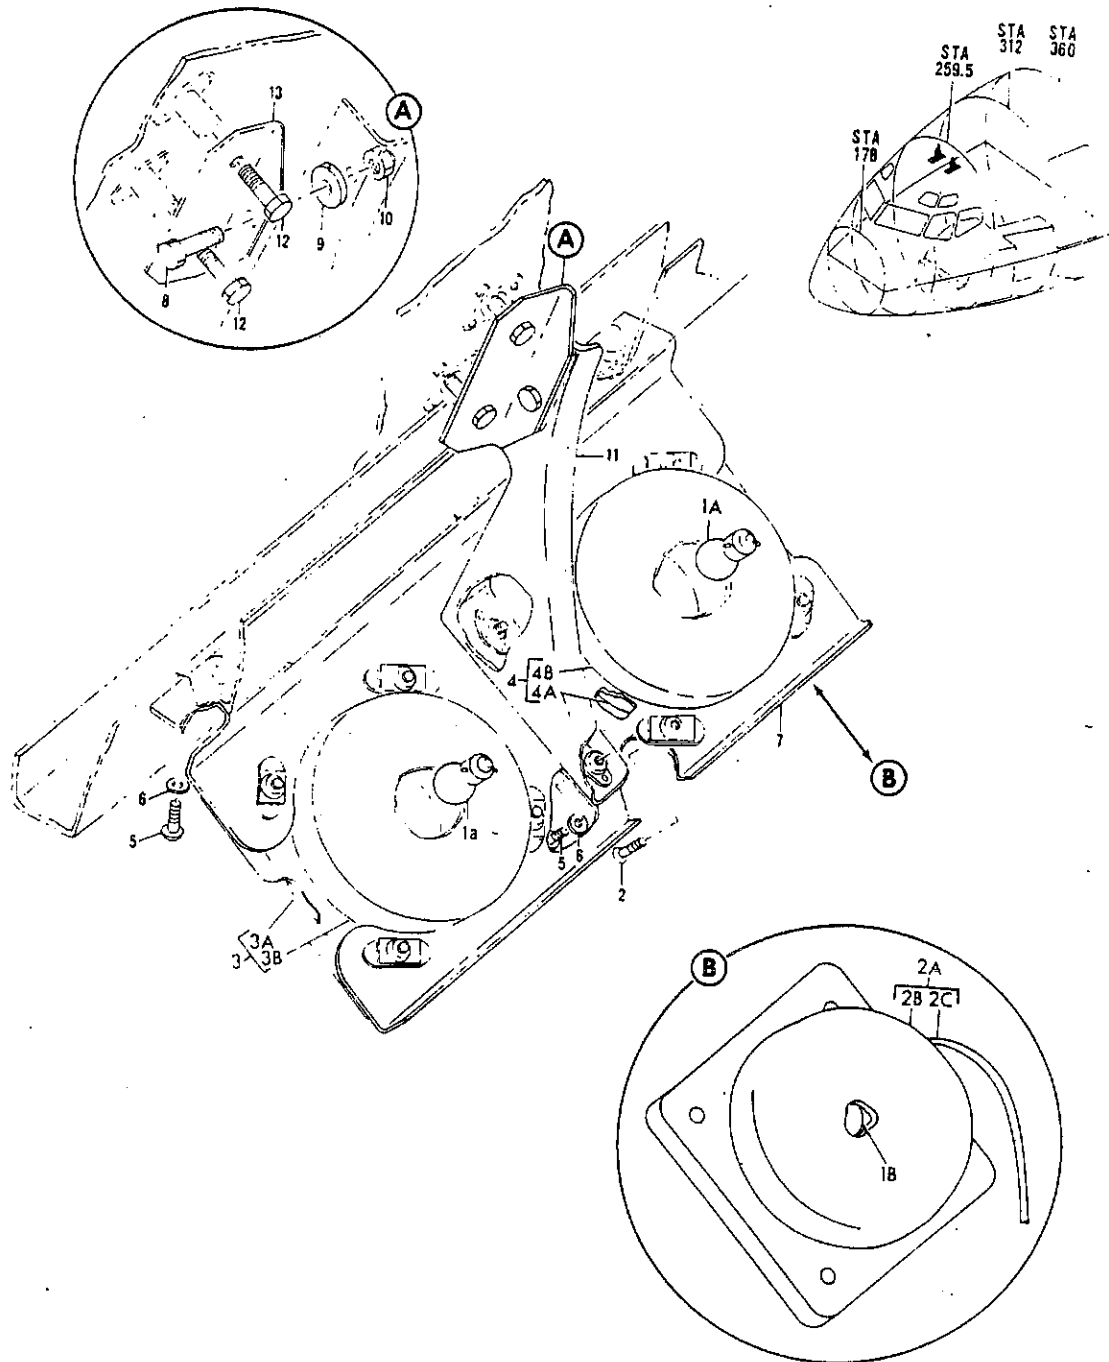


FIGURE 1 LIGHT INSTL, CONTROL CABIN DOME



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY		
			1	2	3	4	5	6	7				
1		65-2876-1	LIGHT INSTL, CONTROL CABIN DOME (LH) (SEE 25-1, FIG. 1, ITEM 97, 25-1, FIG. 1B, ITEM 87, 25-1, FIG. 1C, ITEM 101, 25-1, FIG. 1D, ITEM 96, 25-1, FIG. 1E, ITEM 92, 25-1, FIG. 1F, ITEM 73, 25-1, FIG. 1G, ITEM 80, 25-1, FIG. 1H, ITEM 90, 25-1, FIG. 1J, ITEM 85, 25-1, FIG. 1K, ITEM 83, 25-1, FIG. 2B, ITEM 88, 25-1, FIG. 2C, ITEM 78, 25-1, FIG. 2D, ITEM 69, 25-1, FIG. 2E, ITEM 48, 25-1, FIG. 2F, ITEM 79, 25-1, FIG. 2G, ITEM 77, 25-1, FIG. 2H, ITEM 86 AND 25-1, FIG. 2J, ITEM 13)										RF
		65-2876-2	LIGHT INSTL, CONTROL CABIN DOME (RH) (SEE 25-1, FIG. 1, ITEM 97, 25-1, FIG. 1B, ITEM 87A, 25-1, FIG. 1C, ITEM 101, 25-1, FIG. 1D, ITEM 97, 25-1, FIG. 1E, ITEM 93, 25-1, FIG. 1F, ITEM 74, 25-1, FIG. 1G, ITEM 81, 25-1, FIG. 1H, ITEM 90, 25-1, FIG. 1J, ITEM 85, 25-1, FIG. 1K, ITEM 83, 25-1, FIG. 2B, ITEM 88A, 25-1, FIG. 2C, ITEM 79, 25-1, FIG. 2D, ITEM 70, 25-1, FIG. 2E, ITEM 49, 25-1, FIG. 2F, ITEM 79, 25-1, FIG. 2G, ITEM 77, 25-1, FIG. 2H, ITEM 86 AND 25-1, FIG. 2J, ITEM 14)										RF
	1	307	. LAMP, (V24446)										1
	2	AN507C632R7	. SCREW										8
	5	NAS603-8P	. SCREW										4
	6	AN960D10L	. WASHER										4
	7	66-3283-4	. SUPPORT ASSY, (LH ONLY)										1
	7	66-3283	. SUPPORT ASSY, DOME LIGHT (RH ONLY)										1
	8	AN3-3A	. BOLT										1
	9	BACW10J3	. WASHER										1
	10	NAS679A3W	. NUT										1
	11	66-3284-1	. BRACKET ASSY, DOME LIGHT (LH ONLY)										1
	11	66-3284-2	. BRACKET ASSY, DOME LIGHT (RH ONLY)										1
12	AN3-10A	. BOLT										2	
13	63-1857	. ANGLE, DOME LIGHT SUPPORT										1	
MISSING ITEM NUMBERS ARE NOT APPLICABLE													

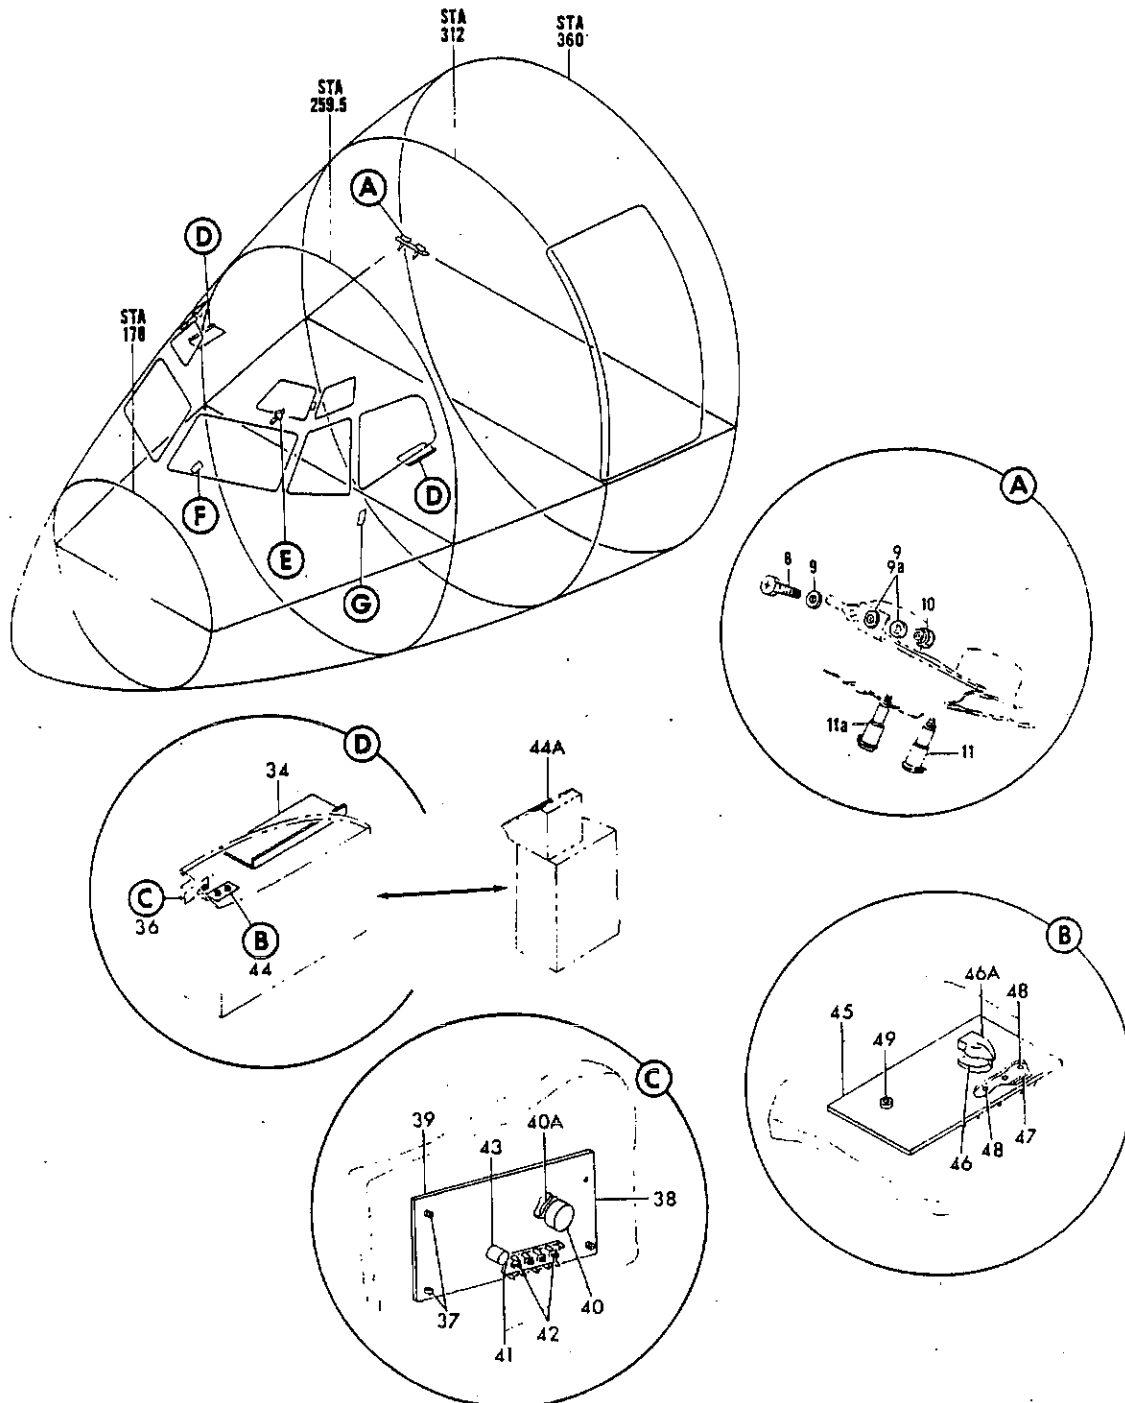


FIGURE 2. LIGHT INSTL. CONTROL CABIN MISCELLANEOUS
BRACKET INSTL. CONTROL CABIN SIGNAL LIGHT
SWITCH INSTL. CHART LIGHT
FLIGHT DESK INSTL. PILOT AND COPILOT (SHEET 1)




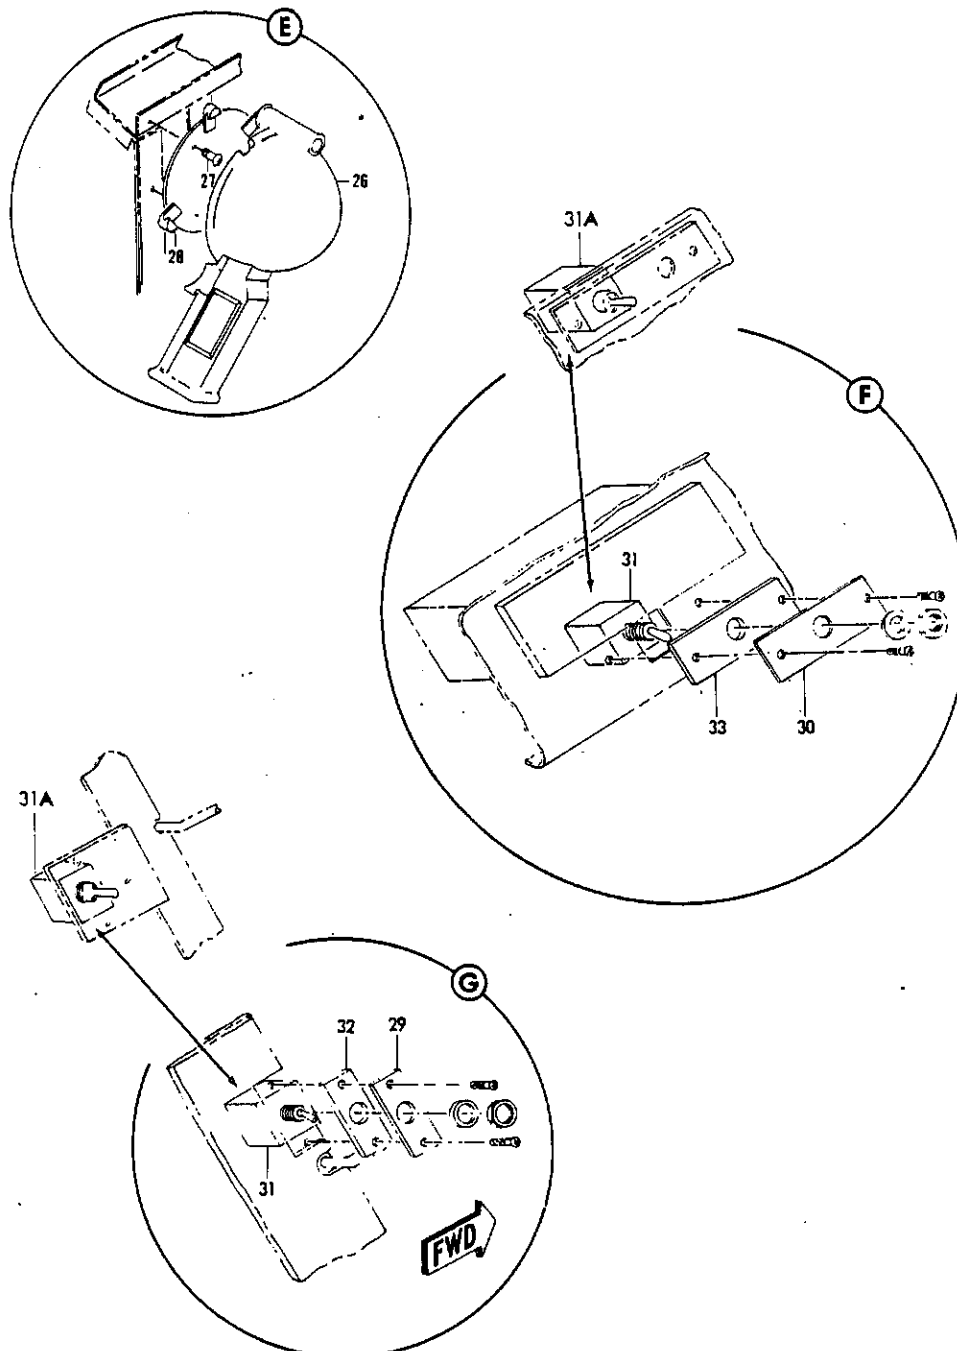


FIGURE 2. LIGHT INSTL, CONTROL CABIN MISCELLANEOUS
BRACKET INSTL, CONTROL CABIN SIGNAL LIGHT
SWITCH INSTL, CHART LIGHT
FLIGHT DESK INSTL PILOT AND COPILOT (SHEET 2)

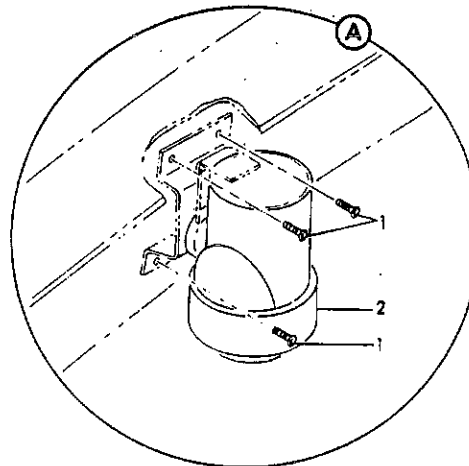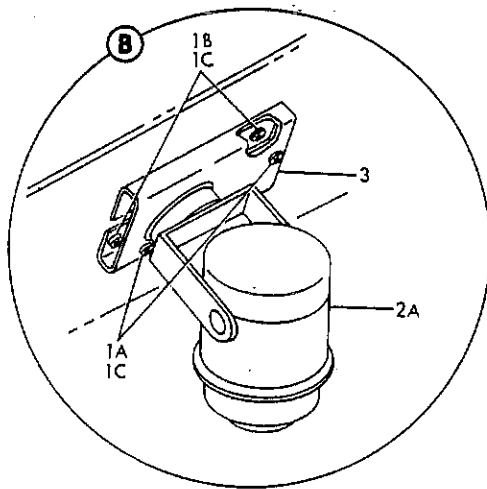

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
2	69-4924	LIGHT INSTL, CONTROL CABIN MISCELLANEOUS.								
		. LIGHT INSTL, CONTROL CABIN OXYGEN GAGE (SEE 25-1, . .								RF
		FIG. 1, ITEM 72, 25-1, FIG. 1B, ITEM 69 25-1, . .								
		FIG. 1C, ITEM 79, 25-1, FIG. 1D, ITEM 71, 25-1, . .								
		FIG. 1E, ITEM 67, 25-1, FIG. 1F, ITEM 53, 25-1, . .								
		FIG. 1G, ITEM 60, 25-1, FIG. 1H, ITEM 68, 25-1, . .								
		FIG. 1J, ITEM 62, 25-1, FIG. 1K, ITEM 60, 25-1, . .								
		FIG. 2B, ITEM 62, 25-1, FIG. 2C, ITEM 55, 25-1, . .								
		FIG. 2D, ITEM 48, 25-1, FIG. 2E, ITEM 28, 25-1, . .								
		FIG. 2F, ITEM 60, 25-1, FIG. 2G, ITEM 58 AND . .								
		25-1, FIG. 2H, ITEM 65)								
8	BACS12CB3-8	. . SCREW								1
9	AN960D10L	. . WASHER								3
10	NAS679A3W	. . NUT								1
11A	A6745C24	. . LIGHT, (V72914)								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

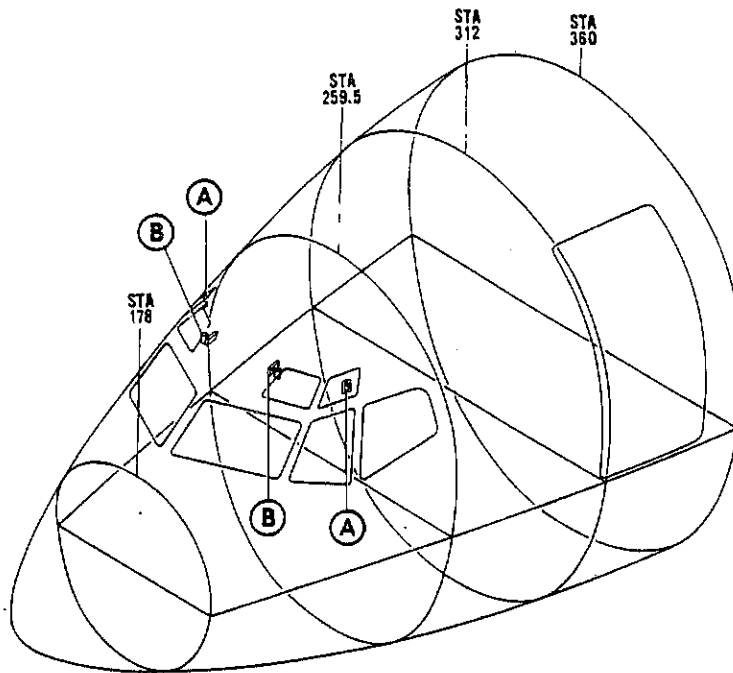

LIGHT INSTL, PILOTS MAP
FIGURE 2C. LIGHT INSTL, COPILOTS MAP

DETAILED PARTS LIST
33-03-2C
PAGE 0

33-03-2C

NOV 21/90

MISSING ITEM NUMBERS ARE NOT APPLICABLE

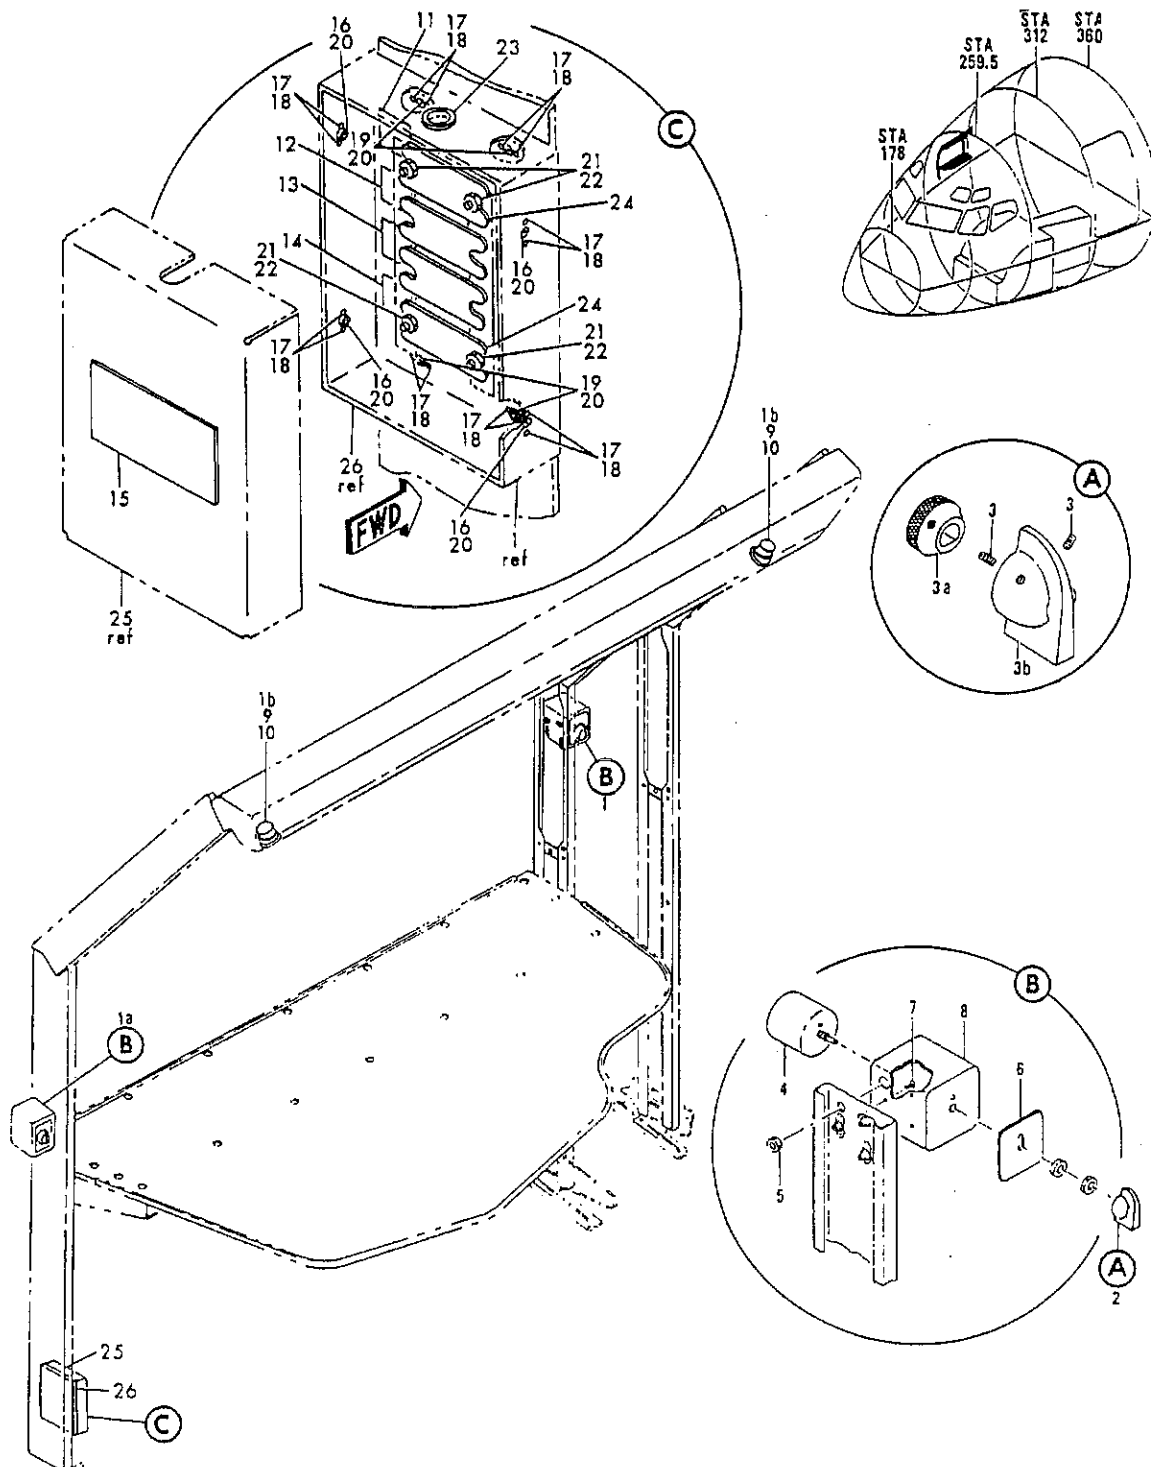


FIGURE 3. LIGHT INSTL, FLIGHT ENGINEERS TABLE

BOEING *707*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1	2	3	4	5	6	7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3	65-8785-4								LIGHT INSTL, FLIGHT ENGINEERS TABLE LIGHT INSTL, FLIGHT ENGINEERS TABLE (SEE 25-1, FIG. . 1, ITEM 91, 25-1, FIG. 1B, ITEM 82, 25-1, FIG. 1C, ITEM 96, 25-1, FIG. 1D, ITEM 88, 25-1, FIG. 1E, ITEM 86, 25-1, FIG. 1F, ITEM 70, 25-1, FIG. 1G, ITEM 75, 25-1, FIG. 1H, ITEM 85, 25-1, FIG. 1J, ITEM 80, 25-1, FIG. 1K, ITEM 78, 25-1, FIG. 2B, ITEM 81, 25-1, FIG. 2C, ITEM 73, 25-1, FIG. 2D, ITEM 65, 25-1, FIG. 2E, ITEM 45, 25-1, FIG. 2G, ITEM 72 AND 25-1, FIG. 2H, ITEM 72) . . SPOTLIGHT ASSY, FRONT ATTACHING PARTS . . SCREW -----*		RF
9	10-60204-3 AN507DD632R5										2 8
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

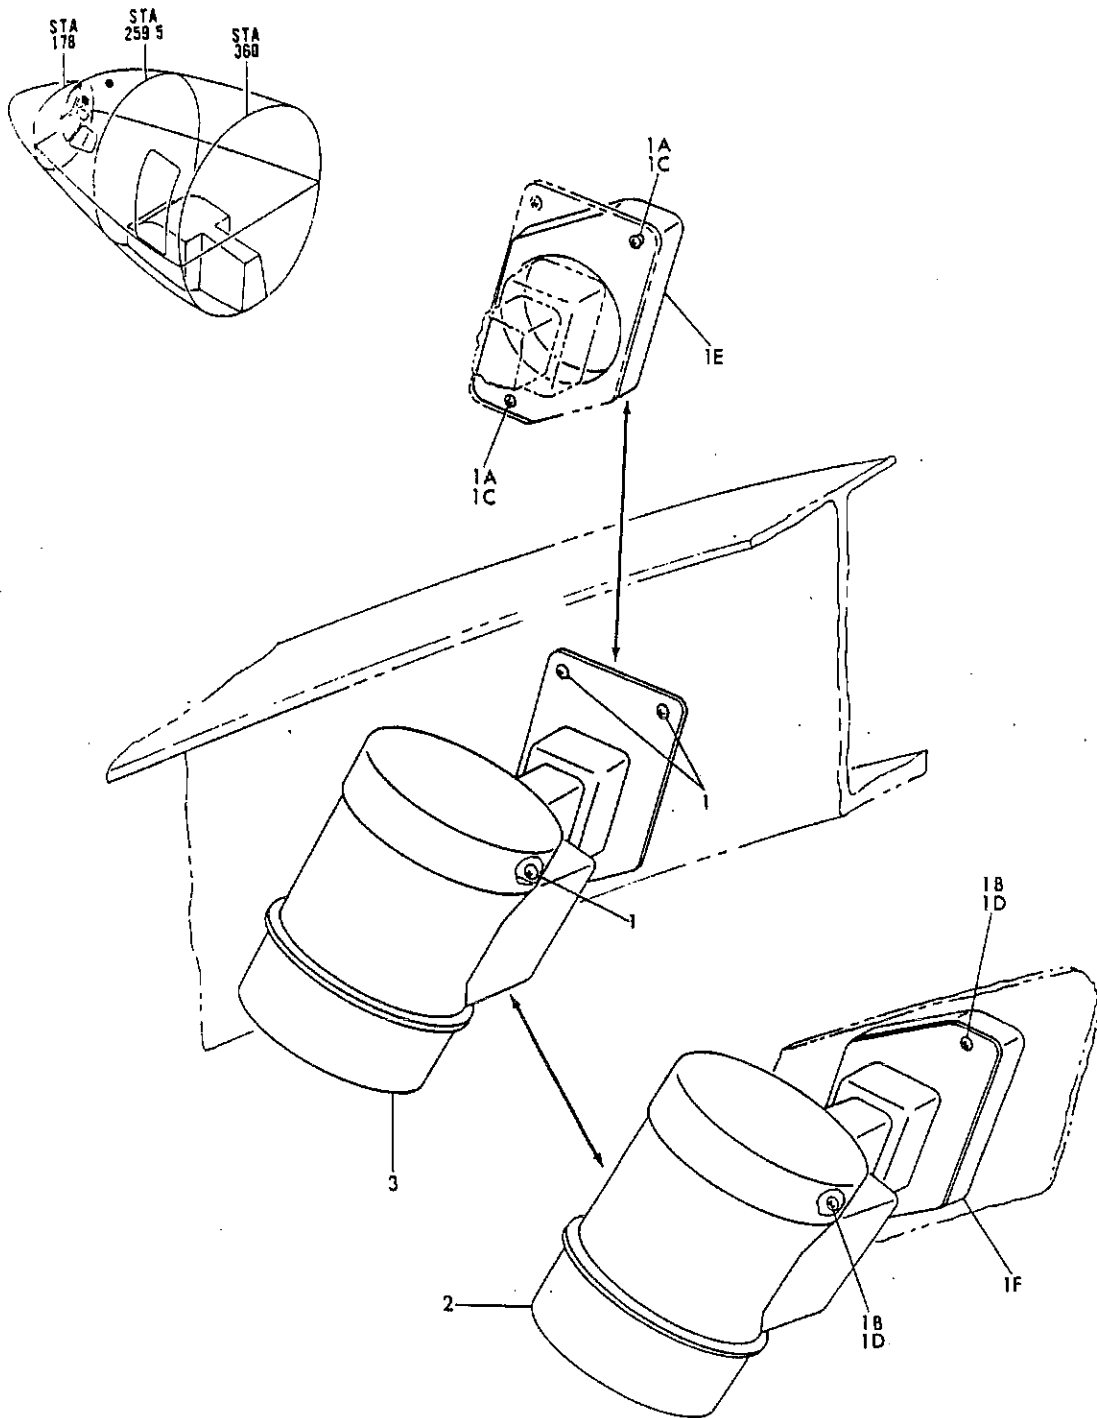


FIGURE 7A. LIGHT INSTL, PILOTS AND COPILOTS MAP

DETAILED PARTS LIST
33-03-7A
PAGE 0



33-03-7A

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF	UNITS
				FROM TO	PER ASSY
7A	69-34206-1		LIGHT INSTL, PILOTS MAP (SEE 25-1, FIG. 1C, ITEM 99, . . . 25-1, FIG. 1H, ITEM 88 AND 25-1, FIG. 2E, ITEM 46)	5299	RF
	69-34206-2		LIGHT INSTL, COPILOTS MAP (SEE 25-1, FIG. 1C, ITEM 100, 25-1, FIG. 1H, ITEM 88 AND 25-1, FIG. 2E, ITEM 47)	5299	RF
	1 NAS603-9		. SCREW	5299	3
	1A NAS603-18		. SCREW	5299	2
	1B NAS603-22		. SCREW	5299	2
	1C BACW10CA3CV		. WASHER.	5299	2
	1D BACW10CA3CC		. WASHER.	5299	2
	1E 69-55096-1		. SPACER.	5299	1
	1F 69-55096-2		. SPACER, (PILOT)	5299	1
	1F 69-55096-3		. SPACER, (COPILOT)	5299	1
	2 15-0069-15		. SPOTLIGHT ASSY, (V72914) (SEE FIG. 13E)	5299	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

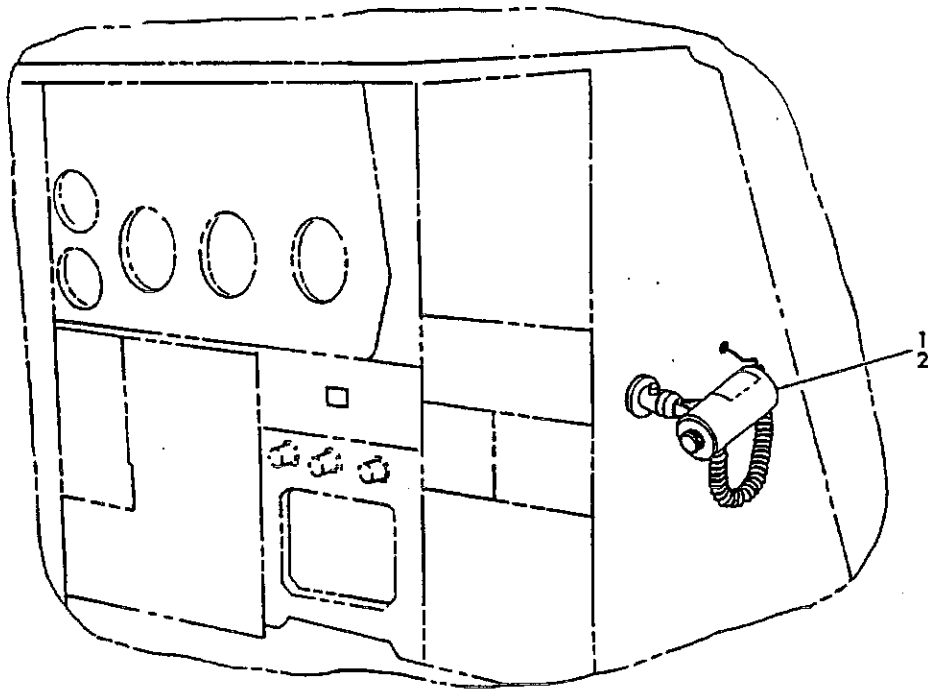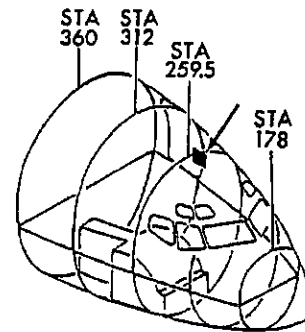

A 3303010A REV 265

FIGURE 10A. LIGHT INSTL. MISSION COORDINATOR STATION



PARTS CATALOG

R R R R	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	10A	391-25-10-74001-001		PANEL INSTL, MISSION COORDINATOR STATION (VS2500) . . . (ADDED BY RAF 7211.019-225)	0150	RF
	1	ALD89-00-079067		. LIGHT INSTL, MISSION COORDINATOR STATION (ECP 043). . (SEE 25-01, FIG. 1K, ITEM 161)	0150	RF
	2	MS172455		. . LIGHT, COCKPIT UTILITY TYPE C-4A.	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

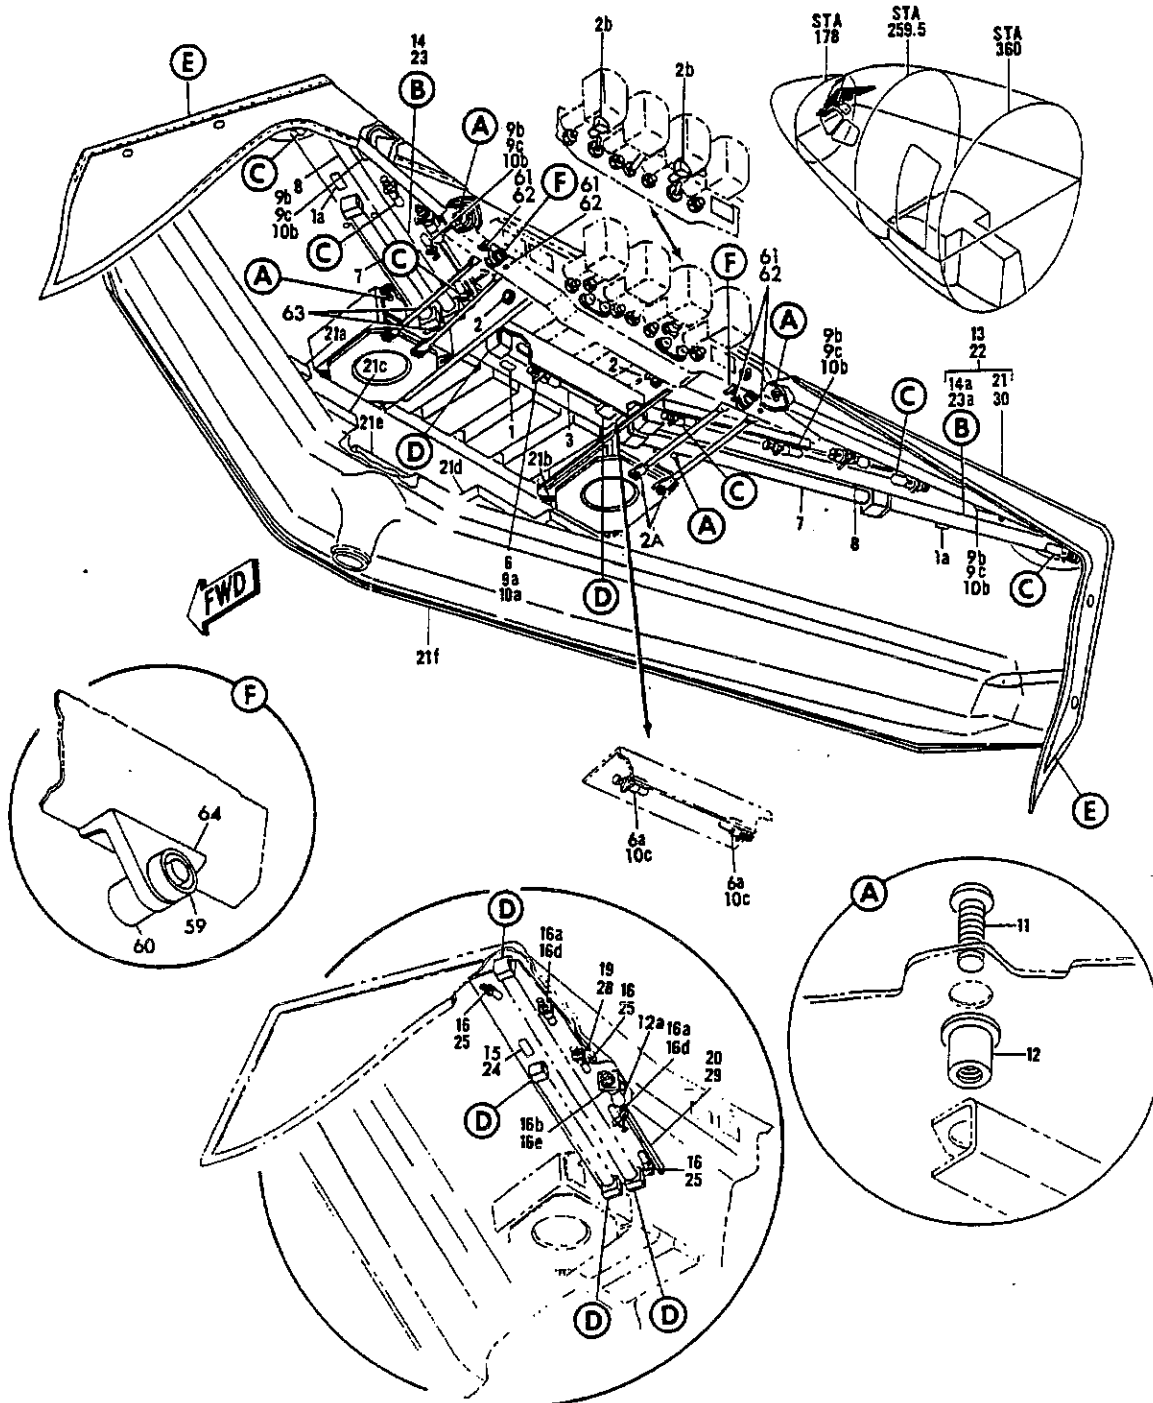


FIGURE 11. LIGHTSHIELD INSTL. PILOT AND COPILOT (LIGHTS ONLY) (SHEET 1)

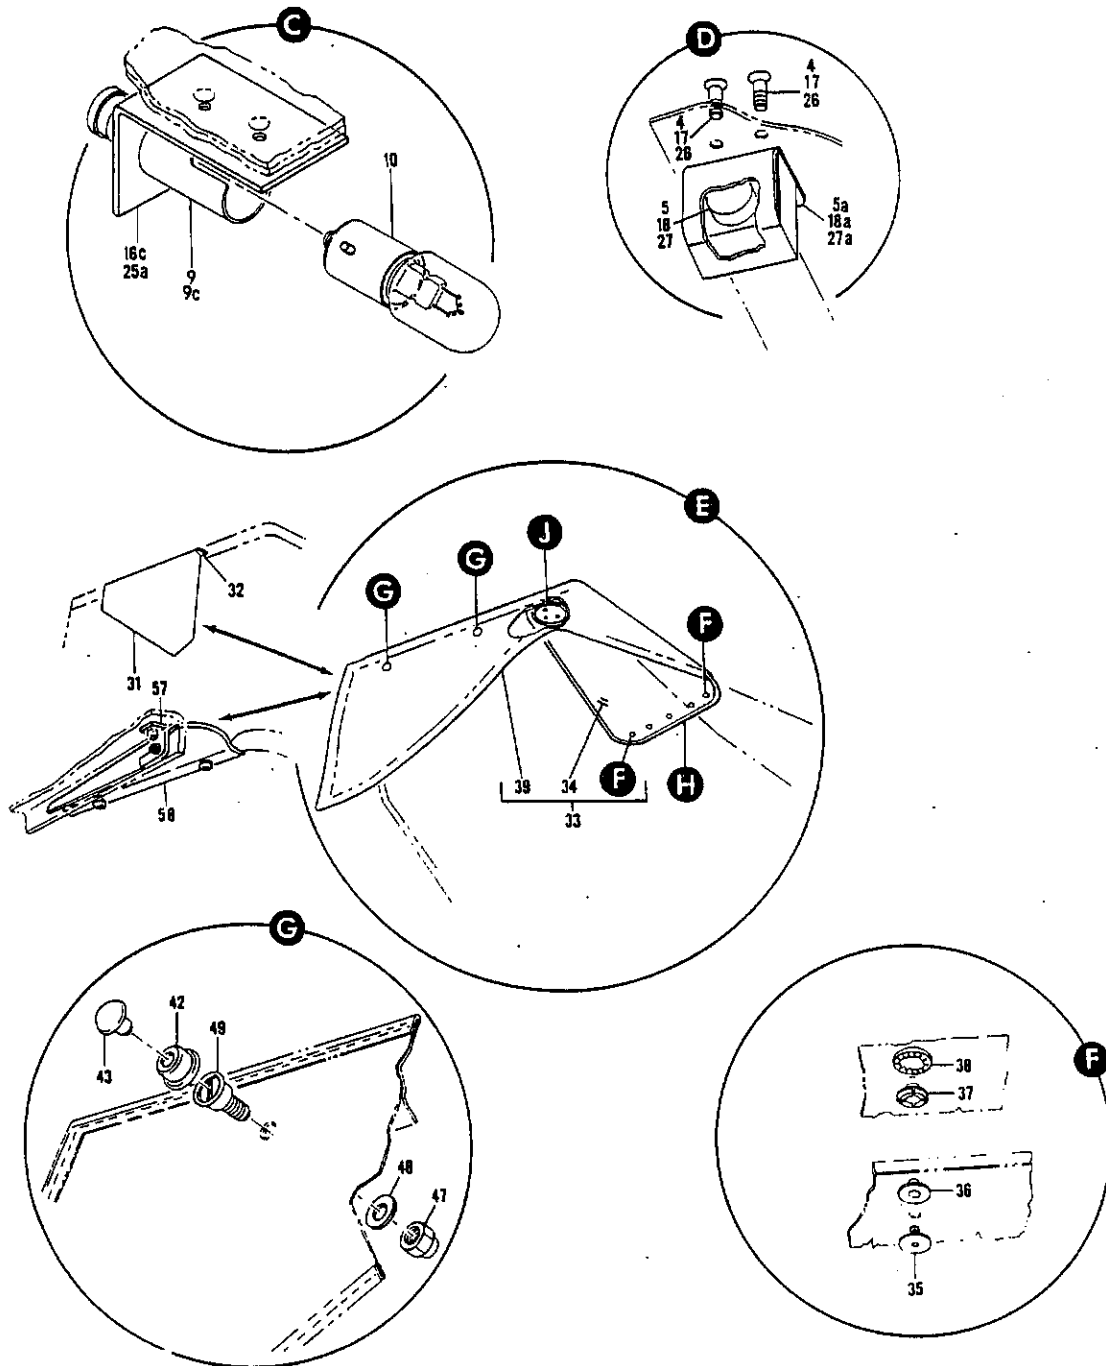


FIGURE 11. LIGHTSHIELD INSTL. PILOT AND COPILOT (LIGHTS ONLY) (SHEET 2)

NOV 21/90

33-03-11

DETAILED PARTS LIST
33-03-11
PAGE 1


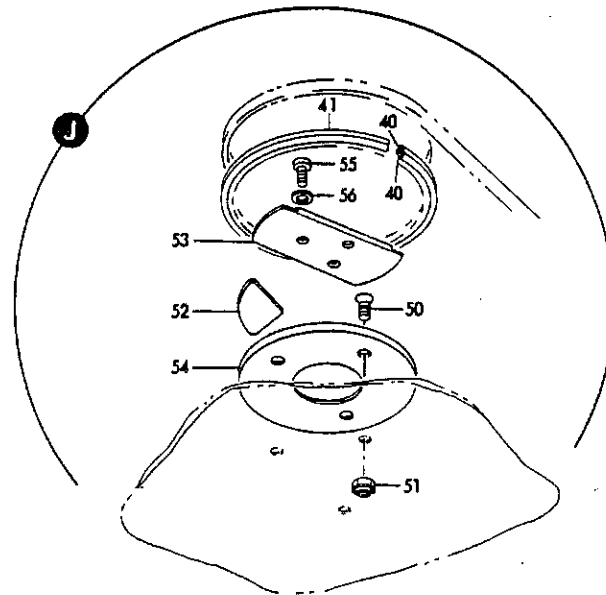


FIGURE 11. LIGHTSHIELD INSTL. PILOT AND COPILOT (LIGHTS ONLY) (SHEET 3)

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
11	65-8365	LIGHTSHIELD INSTL, PILOT AND COPILOT (LIGHTS ONLY) (SEE 25-1, FIG. 1, ITEM 15, 25-1, FIG. 1B, ITEM 20, 25-1, FIG. 1C, ITEM 19, 25-1, FIG. 1D, ITEM 19, 25-1, FIG. 1E, ITEM 17, 25-1, FIG. 1F, ITEM 14, 25-1, FIG. 1G, ITEM 18, 25-1, FIG. 1H, ITEM 16, 25-1, FIG. 1J, ITEM 16, 25-1, FIG. 1K, ITEM 16, 25-1, FIG. 2B, ITEM 15, 25-1, FIG. 2C, ITEM 16, 25-1, FIG. 2D, ITEM 12, 25-1, FIG. 2E, ITEM 5, 25-1, FIG. 2F, ITEM 15, 25-1, FIG. 2G, ITEM 15 AND 25-1, FIG. 2H, ITEM 15)	0150	RF
1	BACM10L20-3BF	MARKER-ALUMINUM FOIL, LAMP.	0150	1
2	NAS557-8A	GROMMET	0150	2
2A	65-8365-24	GUARD, PILOT AND COPILOT LIGHTSHIELD TUBE	0150	2
		ATTACHING PARTS		
	NAS601-6	SCREW	0150	4
	NAS620-6L	WASHER.	0150	2
	NAS679A06W	NUT	0150	4
3	FA4T5CW	LAMP, FLUORESCENT (V58854).	0150	1
		(OPTIONAL 5004CW (V08806))		
3	5004CW	LAMP, FLUORESCENT (V08806).	0150	1
		(OPTIONAL TO FA4T5CW (V58854))		
	65-8365-22	SUPPORT ASSY, PILOT AND COPILOT LIGHTSHIELD	0150	1
		ATTACHING PARTS		
	NAS221-8	SCREW	0150	8
	AN960PD10L	WASHER.	0150	8
4	NAS601-3	SCREW	0150	4
5	560	SOCKET, LIGHT (V81590).	0150	2
5A	66-10608	GUARD, FLUORESCENT BULB SOCKET.	0150	2
6A	BACS1681	SOCKET ASSY	0150	2
7	FA8T5CW	LAMP, FLUORESCENT (V58854).	0150	2
		(OPTIONAL 5008CW (V24455))		
7	5008CW	LAMP, FLUORESCENT (V08806).	0150	2
		(OPTIONAL TO FA8T5CW (V58854))		
8	FA13T5CW	LAMP, FLUORESCENT (V58854).	0150	2
		(OPTIONAL 5013CW (V24455))		
8	5013CW	LAMP, FLUORESCENT (V24455).	0150	2
		(OPTIONAL TO FA13T5CW (V58854))		
9	407	GUARD, LIGHT (V81590).	0150	6
9B	407	GUARD, LIGHT (V81590).	0150	4
10	1864	LAMP, (V08806).	0150	6
10B	1864	LAMP, (V08806).	0150	4
10C	1864	LAMP, (V08806).	0150	2
11	AN515B416R12	SCREW	0150	4
12	1-4S	WELL-NUT, (V05341).	0150	4
13	65-8364-52	LIGHTSHIELD ASSY, (LIGHTS ONLY)	0150	1
14	65-8364-17	LAMP ASSY, PILOT AND COPILOT LIGHTSHIELD (PILOT).	0150	1
14A	65-8364-18	LAMP ASSY, PILOT AND COPILOT LIGHTSHIELD (COPILOT)	0150	1
		ATTACHING PARTS		
	NAS514P632-5	SCREW	0150	10
	NAS679A06W	NUT	0150	10
15	BACM10L20-3BG	MARKER-ALUMINUM FOIL, LAMP REPLACEMENT.	0150	1
16	BACS1681	SOCKET ASSY	0150	3
16A	BACS1681	SOCKET ASSY	0150	2
16C	65-8364-7	BRACKET, PILOT AND COPILOT LIGHTSHIELD LAMP	0150	3
16D	65-8364-7	BRACKET, PILOT AND COPILOT LIGHTSHIELD LAMP	0150	2
17	AN507-632R4	SCREW	0150	8
18	560	SOCKET, LIGHT (V81590).	0150	4
18A	66-10608	GUARD, FLUORESCENT BULB SOCKET.	0150	4
19	MS35489-6	GROMMET	0150	1
20	65-8364-9	REFLECTOR, PILOT AND COPILOT LIGHTSHIELD LAMP	0150	1
		(PILOT)		
20	65-8364-10	REFLECTOR, PILOT AND COPILOT LIGHTSHIELD LAMP	0150	1
		(COPILOT)		
21	65-8364-54	LIGHTSHIELD ASSY, (USED ON 65-8364-51, -52 AND -53)	0150	1
21A	69-16936-7	DEFLECTOR, LIGHTSHIELD LIGHT (USED ON 65-8364-30 AND -54)	0150	1
21B	69-16936-8	DEFLECTOR, LIGHTSHIELD LIGHT (USED ON 65-8364-30 AND -54)	0150	1
21C	69-16936-3	DEFLECTOR, LIGHTSHIELD LIGHT (USED ON 65-8364-30 AND -54)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

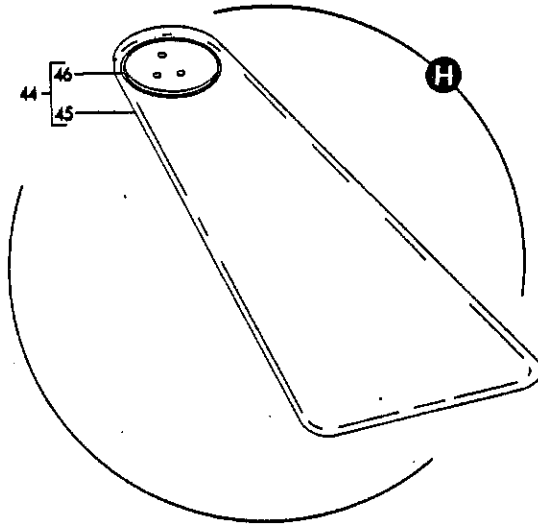

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R R R	11	21D	69-16936-4	. . . DEFLECTOR, LIGHTSHIELD LIGHT (USED ON 65-8364-30 AND -54)	0150	1
		21F	65-8364-55	. . . LIGHTSHIELD, (USED ON 65-8364-54)	0150	1
			65-54004-1	. SHADE INSTL, PILOT AND COPILOT LIGHT (PILOT)	0150	1
			65-54004-2	. SHADE INSTL, PILOT AND COPILOT LIGHT (COPILOT)	0150	1
		31	65-54004-3	. . SHADE, PILOT AND COPILOT LIGHT (PILOT)	0150	1
		31	65-54004-4	. . SHADE, PILOT AND COPILOT LIGHT (COPILOT)	0150	1
				ATTACHING PARTS		
			NAS601-B	. . SCREW	0150	3
			AN960D6L	. . WASHER	0150	3
			NAS679A06W	. . NUT	0150	3
R R	32		65-54004-5	. . PLATE, PILOT AND COPILOT LIGHTSHADE RETAINER.	0150	1
				. FOR REFERENCE TO OTHER LIGHTSHIELD DETAILS, SEE NHA	0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

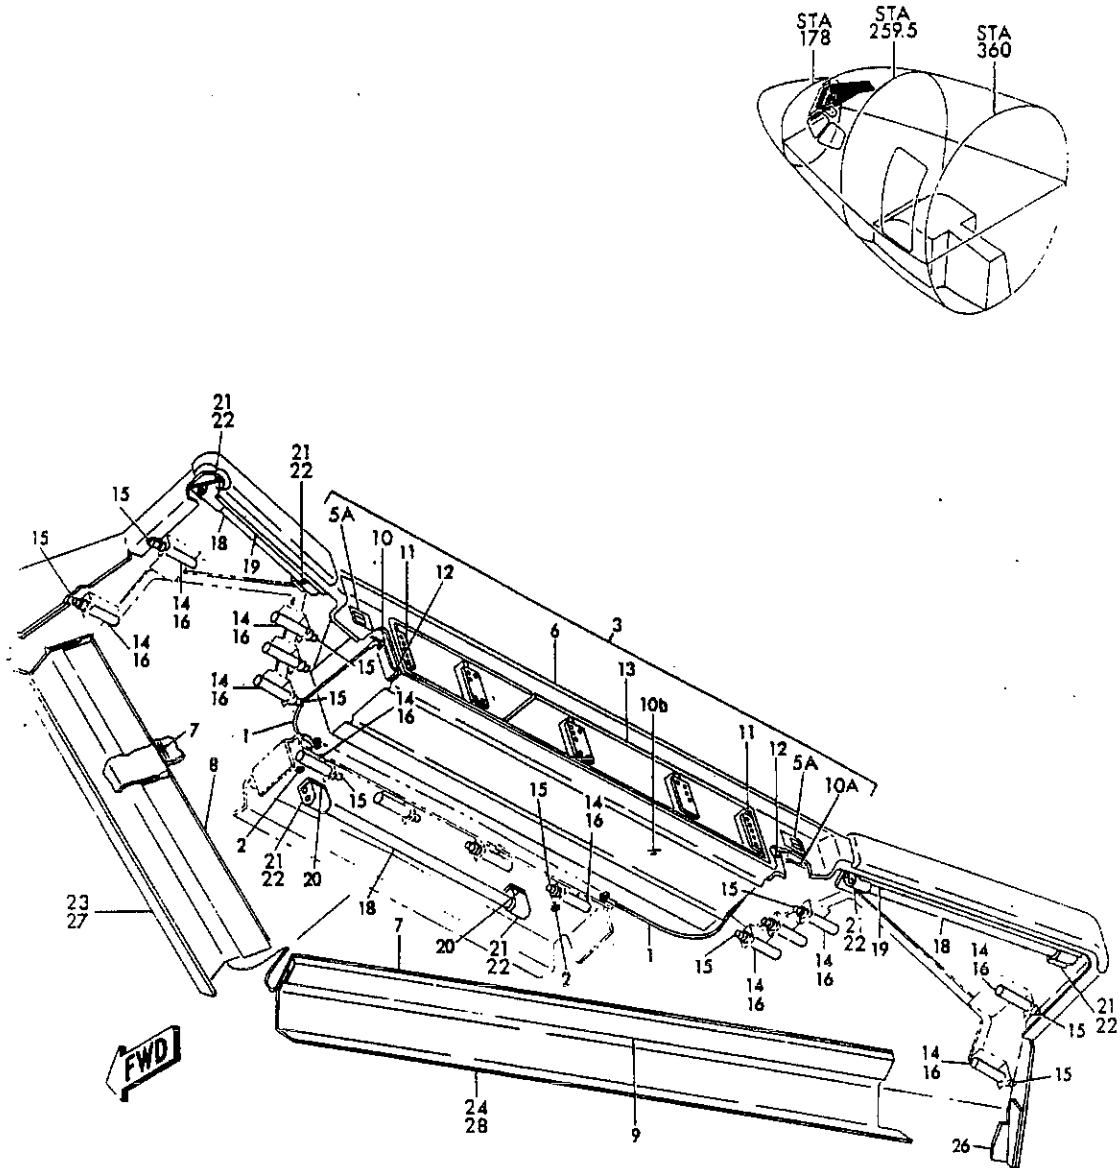


FIGURE 11A. LIGHTSHIELD INSTL, CAPTAINS AND FIRST OFFICER P15 PANEL (LIGHTS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
11A	65-59470-1		LIGHTSHIELD INSTL, CAPTAIN AND FIRST OFFICER P15 PANEL (LIGHTS ONLY) (SEE 25-1, FIG. 1B, ITEM 20, 25-1, FIG. 2D, ITEM 12, 25-1, FIG. 2E, ITEM 5, 25-1, FIG. 1F, ITEM 14 AND 25-1, FIG. 2J, ITEM 32)	5199	RF
1	MS25083-2889		JUMPER ASSY	5199	2
	BACS12CB3-8		ATTACHING PARTS		
	AN960D10L		SCREW	5199	4
	NAS679A3W		WASHER	5199	8
			NUT	5199	4
2	BACS12N10-9		SCREW	5199	2
3	65-59470-39		LIGHTSHIELD ASSY, (LIGHTS ONLY)	5199	1
5A	211-1048-001		LIGHT ASSY, FIRE PUSH TO RESET (V81590)	5199	2
6	65-59470-18		LIGHTSHIELD	5199	1
7	65-59471-11		GUARD, SUPPORT ANGLE CHAFE	5199	2
8	65-59471-9		RETAINER, SUPPORT ANGLE	5199	1
9	65-59471-10		RETAINER, SUPPORT ANGLE	5199	1
10	65-59470-4		SUPPORT, BONDING (ALTERED FROM; BACB2A13PA)	5199	1
10A	65-59470-4		SUPPORT, BONDING (ALTERED FROM; BACB2A13PA)	5199	1
10B	65-59470-21		BOX	5199	1
11	BACSZZAB		STRIP	5199	2
12	65-59471-4		STRAP, SUPPORT ANGLE	5199	2
13	65-59473-12		BOX ASSY, ADAPTER	5199	1
	65-59519-2		LIGHT ARRANGEMENT INSTL, MAIN INSTRUMENT	5199	1
14	1864		LAMP, (V08806)	5199	14
15	4068		SOCKET, LAMP (V81590)	5199	14
16	409		HOOD, LAMP (V81590)	5199	14
18	FA8T5CW		LAMP, FLUORESCENT (V58854)	5199	3
			(OPTIONAL 5008/CW (V08805))		
18	5008/CW		LAMP, FLUORESCENT (V08805)	5199	3
			(OPTIONAL TO FA8T5/CW (V80368))		
19	69-46750-5		LIGHTSHIELD	5199	2
20	69-46750-1		SPACER, LIGHTSHIELD	5199	2
21	560		SOCKET, FLUORESCENT (V81590) (USED WITH 66-10608)	5199	6
			(OPTIONAL TO 104-1021)		
21	104-1021		SOCKET, FLUORESCENT (V81590)	5199	6
			(OPTIONAL 560 WITH 66-10608)		
			ATTACHING PARTS		
	NAS514P632-5		SCREW	5199	12
22	66-10608		GUARD, SOCKET FLUORESCENT BULB (USED WITH 560)	5199	6
25	65-59470-19		BRACKET	5199	1
26	65-59470-20		BRACKET	5199	1
			ATTACHING PARTS		
	NAS604-4		SCREW	5199	4
	BACB30CC5W3		BOLT	5199	4
	NAS679A4W		NUT	5199	4
27	65-75271-1		BRACKET, SUPPORT	5199	1
28	65-75271-2		BRACKET, SUPPORT	5199	1
			FOR REFERENCE TO OTHER LIGHTSHIELD DETAILS, SEE NHA	5199	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/90

33-03-11A

DETAILED PARTS LIST
33-03-11A
PAGE 1

BOEING **707**
Intercontinental
PARTS CATALOG

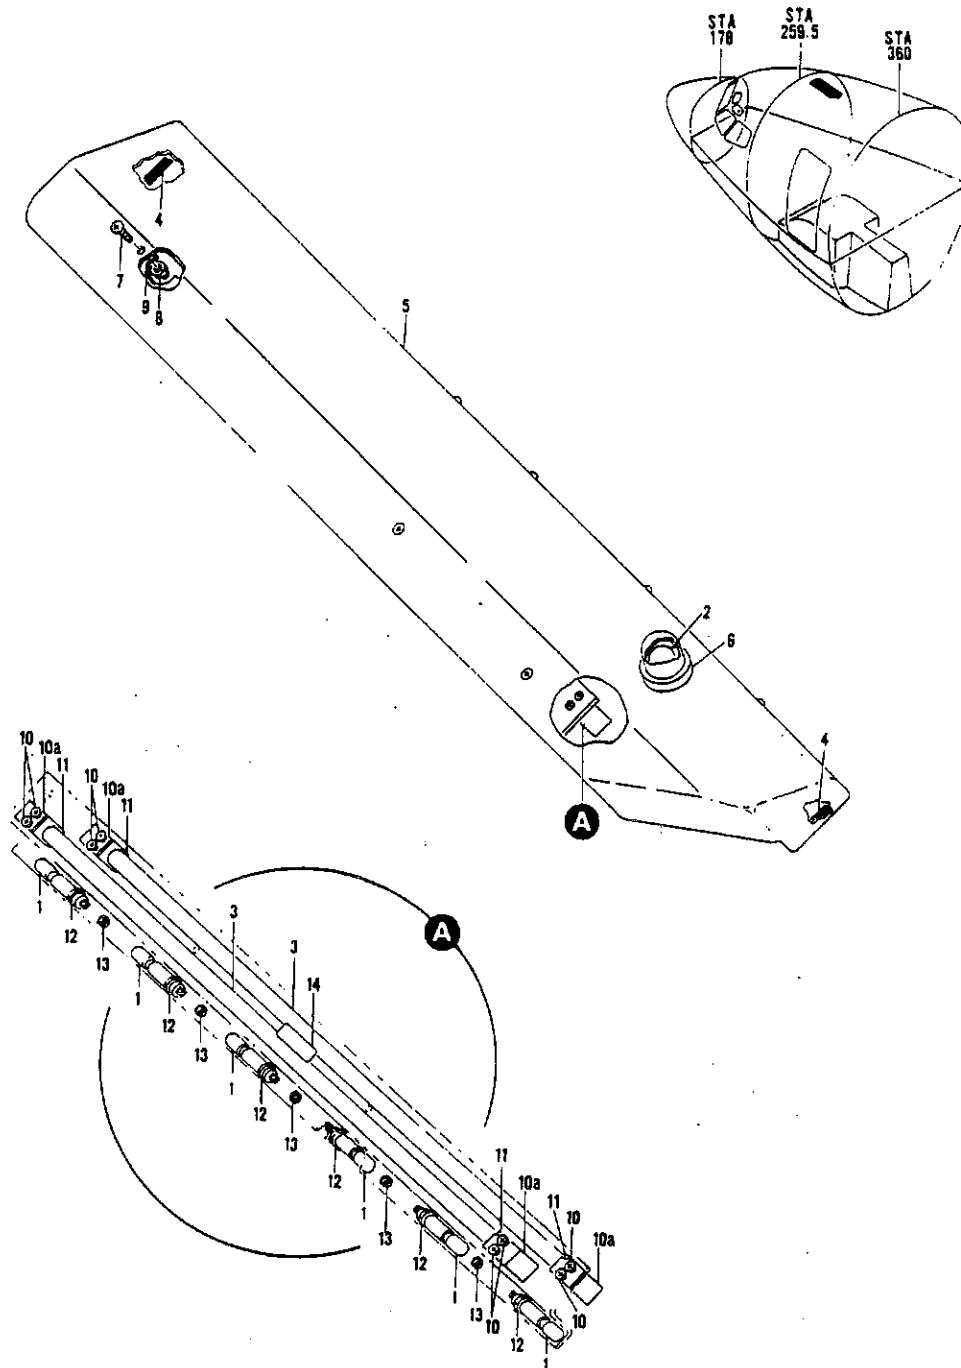


FIGURE 12. LIGHTSHIELD INSTL, FLIGHT ENGINEERS

DETAILED PARTS LIST
 33-03-12
 PAGE 0

33-03-12

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
12	65-8366	LIGHTSHIELD INSTL, FLIGHT ENGINEERS (SEE 25-1, FIG. 1, ITEM 16, 25-1, FIG. 1B, ITEM 21, 25-1, FIG. 1C, ITEM 20, 25-1, FIG. 1D, ITEM 20, 25-1, FIG. 1E, ITEM 18, 25-1, FIG. 1F, ITEM 15, 25-1, FIG. 1G, ITEM 19, 25-1, FIG. 1H, ITEM 17, 25-1, FIG. 1J, ITEM 17, 25-1, FIG. 1K, ITEM 17, 25-1, FIG. 2B, ITEM 15, 25-1, FIG. 2C, ITEM 17, 25-1, FIG. 2D, ITEM 13, 25-1, FIG. 2E, ITEM 6, 25-1, FIG. 2F, ITEM 16, 25-1, FIG. 2G, ITEM 16 AND 25-1, FIG. 2H, ITEM 16)								RF
1	1864	. LAMP, (V08806)								6
2	MS25232-307	. LAMP.								1
3	5013CW	. LAMP, FLUORESCENT (V24455) (OPTIONAL FA13T5CW (V90139))								2
3	FA13T5CW	. LAMP, FLUORESCENT (V90139) (OPTIONAL TO 5013CW (V24455))								2
4	65-8366-5	. SEAL, FLIGHT ENGINEERS LIGHTSHIELD.								2
5	65-8366-12	. LIGHTSHIELD ASSY, FLIGHT ENGINEERS. ATTACHING PARTS								1
	NAS603-5	. SCREW								11
6	5118	*								
7	NAS514P632-5	. . . SOCKET ASSY, CIRCUIT BREAKER (V81590)								1
8	NAS679A06W	. . . SCREW								4
9	65-8366-8	. . . NUT								4
10	NAS514P632-4	. . . LIGHT ASSY, FLIGHT ENGINEERS LIGHTSHIELD.								1
10A	66-10608	. . . SCREW								8
11	560	. . . GUARD, FLUORESCENT BULB SOCKET (USED WITH 560).								4
		. . . SOCKET, FLUORESCENT (V81590) (USED WITH 66-10608) (OPTIONAL TO 104-1021 (V81590))								4
11	104-1021	. . . SOCKET, FLUORESCENT (V81590). (OPTIONAL 560 (V81590) WITH 66-10608)								4
12	BACS16B1	. . . SOCKET ASSY								6
13	NAS557-3A	. . . GROMMET								5
14	BACM10L20-3BE	. . . MARKER-ALUMINUM FOIL, LAMP REPLACEMENT. FA13T5 OR 5013								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

RAF
NOV 21/90

33-03-12

DETAILED PARTS LIST
33-03-12
PAGE 1


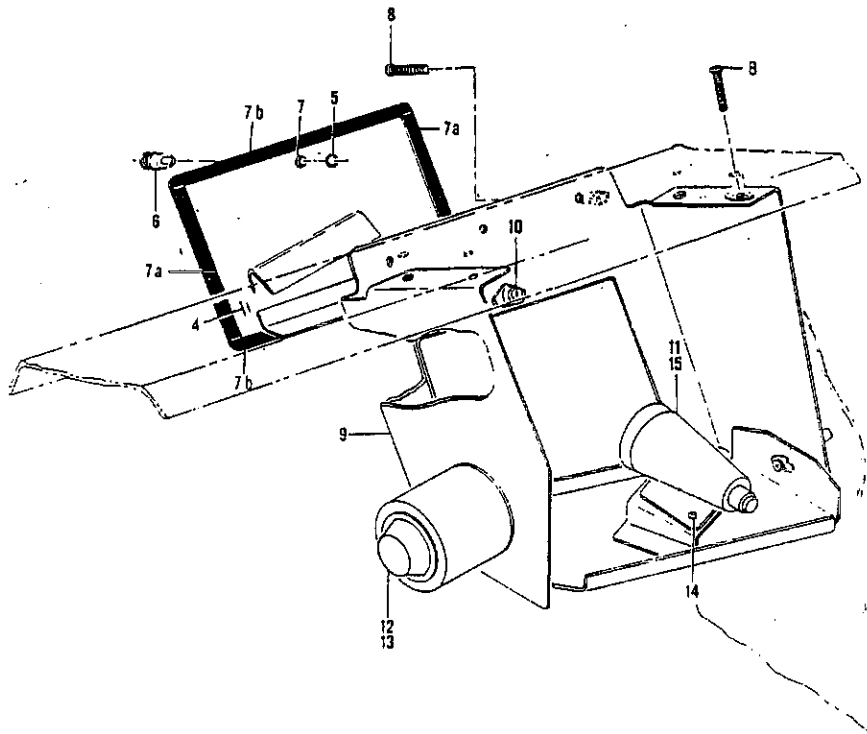


FIGURE 13. SPOTLIGHT INSTL, RADIO CIRCUIT BREAKER PANEL

DETAILED PARTS LIST
33-03-13
PAGE 2

33-03-13

NOV 21/90

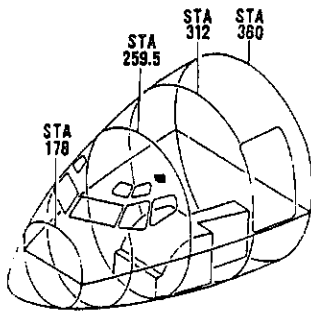

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
13	65-2879-15	SPOTLIGHT INSTL, RADIO CIRCUIT BREAKER PANEL (SEE 25-1, FIG. 1, ITEM 90, 25-1; FIG. 1B, ITEM 81, 25-1, FIG. 1C, ITEM 95, 25-1, FIG. 1D, ITEM 87, 25-1, FIG. 1E, ITEM 85, 25-1, FIG. 1F, ITEM 69, 25-1, FIG. 1G, ITEM 74, 25-1, FIG. 1H, ITEM 84, 25-1, FIG. 1J, ITEM 79, 25-1, FIG. 1K, ITEM 77, 25-1, FIG. 2B, ITEM 80, 25-1, FIG. 2C, ITEM 72, 25-1, FIG. 2D, ITEM 64, 25-1, FIG. 2E, ITEM 44, 25-1, FIG. 2F, ITEM 75, 25-1, FIG. 2G, ITEM 71 AND 25-1, FIG. 2H, ITEM 82)								RF
4	69-8794	. PLATE ASSY, CIRCUIT BREAKER LIGHT COVER								1
5	BACR12X1	. . RING.								1
6	BACS21X3	. . STUD ASSY								1
7	BACG20X1	. . GROMMET								1
7A	69-8794-4	. . GASKET, CIRCUIT BREAKER LIGHT COVER PLATE								2
7B	69-8794-5	. . GASKET, CIRCUIT BREAKER LIGHT COVER PLATE								2
8	NAS603-16	. SCREW								7
9	65-2879-13	. SUPPORT ASSY.								1
	65-2879-11	. . SUPPORT ASSY, RADIO CIRCUIT BREAKER PANEL SPOTLIGHT								1
10	BACR11X3	. . RECEPTACLE.								1
11	BACL12H20	. LAMP.								1
12	AB115-24	. LAMP, (V72914).								1
13	15-0115	. SPOTLIGHT, UTILITY (V72914)								1
14	NAS600-5	. SCREW								2
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

RAF
NOV 21/90

33-03-13

DETAILED PARTS LIST
33-03-13
PAGE 1



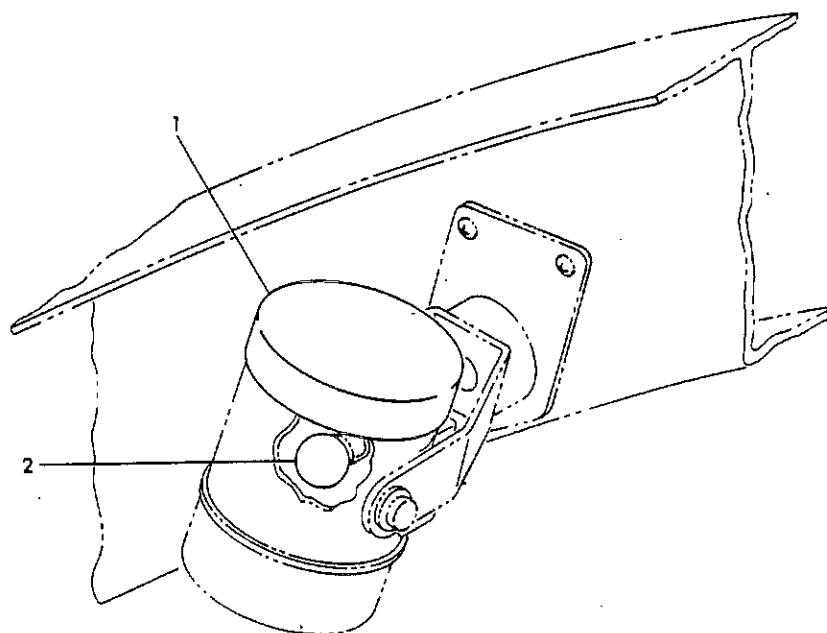


FIGURE 13E. SPOTLIGHT ASSY, PILOTS AND COPILOTS MAP

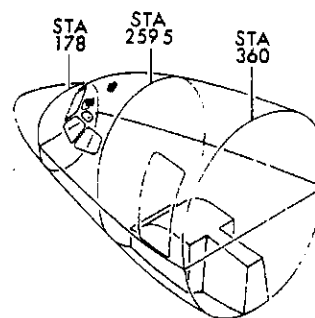

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
R R R R R R	13E	15-0069-15	5299	RF
		15-0069-15	5151	RF
	M 1	16-0310-1	5199	1
	M 2	1691	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

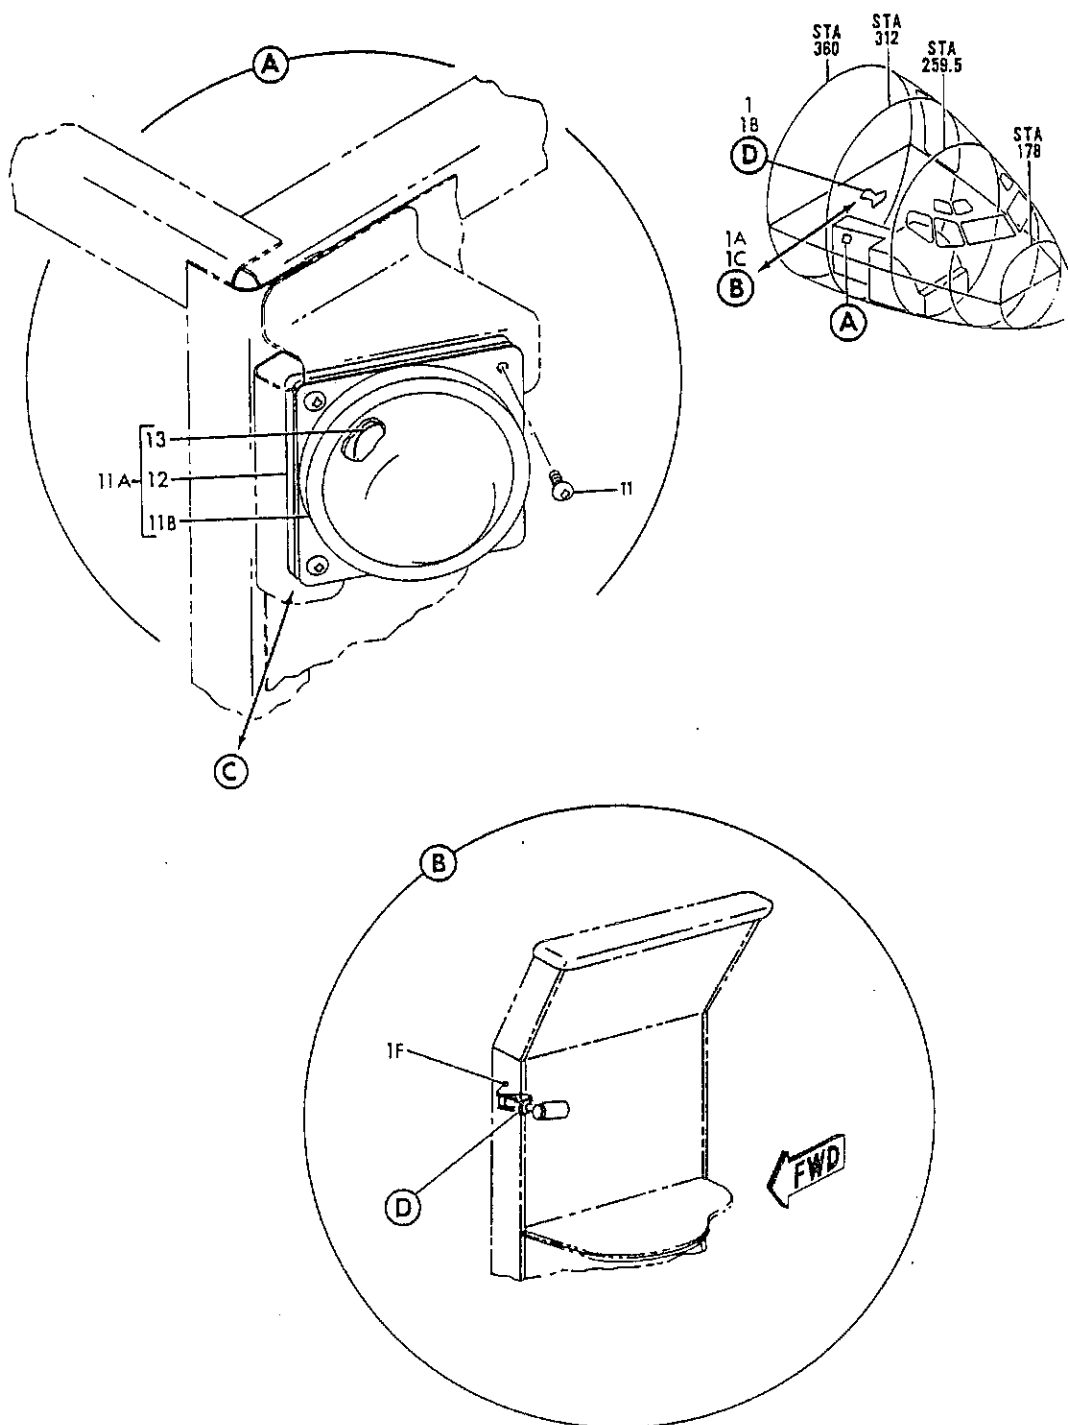

FLOODLIGHT INSTL, MAIN AC POWER SHIELD
FIGURE 15. LIGHT INSTL, J-1 RELAY SHIELD (SHEET 1)

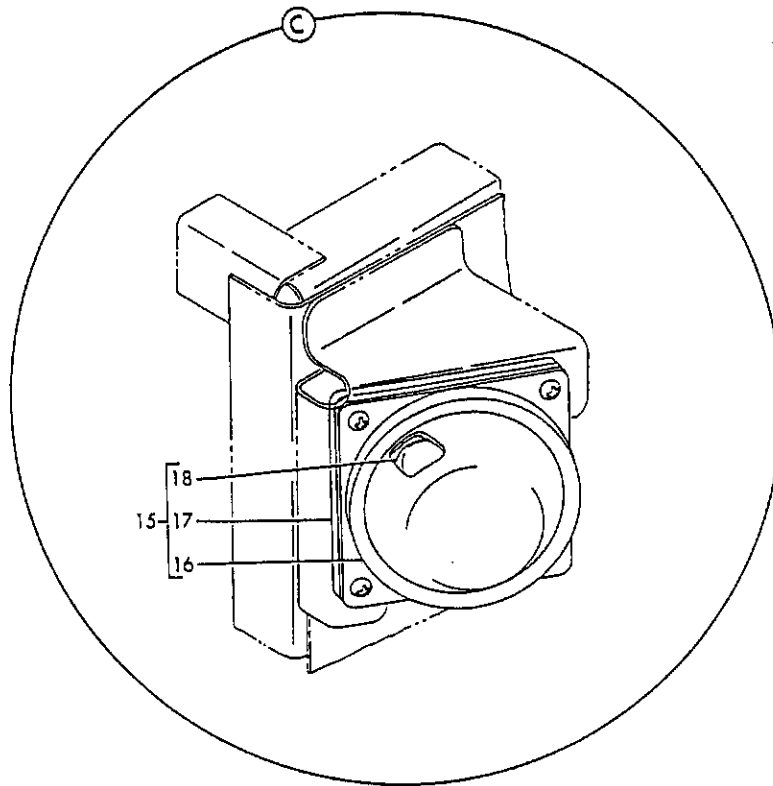


FIGURE 15, FLOODLIGHT INSTL, MAIN AC POWER SHIELD
LIGHT INSTL, J-1 RELAY SHIELD (SHEET 2)

NOV 21/90

33-03-15

DETAILED PARTS LIST
33-03-15
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 15			FLOODLIGHT INSTL, MAIN AC POWER SHIELD.	0150	
R 1	65-30064-2		LIGHT INSTL, J-1 RELAY SHIELD	0150	RF
R 2	30235-313		. FLOODLIGHT INSTL, MAIN AC POWER SHIELD (SEE 24-3, FIG. 1A, ITEM 65, 24-3, FIG. 1B, ITEM 58 AND 24-3, FIG. 1C, ITEM 54)	0150	1
R 2	15-0007-1		. . LIGHT, INCANDESCENT COCKPIT SPOT (V72914) (OPTIONAL TO 15-0007-1 (V72914))	0150	1
R 3	NAS601-7P		. . LIGHT, INCANDESCENT COCKPIT SPOT (V72914) (OPTIONAL 30235-313 (V72914))	0150	2
R 4	66-12067		ATTACHING PARTS	0150	1
R 5	NAS603-30P		. . SCREW	0150	1
R 6	NAS43DD3-68		. . SUPPORT ASSY, FLOODLIGHT.	0150	1
R 7	AN960D10L		. . SCREW	0150	1
R 8	66-12067-2		. . SPACER.	0150	3
R 9	NAS603-6P		. . WASHER.	0150	1
R 10	NAS679A3W		. . CHANNEL, FLOODLIGHT SUPPORT	0150	2
	66-5379		ATTACHING PARTS	0150	2
	NAS601-5		. . SCREW	0150	2
	69-12253-3		. . NUT	0150	2
	B9845-3-307		-----*		
	B9845-8-307		. LIGHT INSTL, J1 RELAY SHIELD (SEE 24-3, FIG. 1A, ITEM 56, 24-3, FIG. 1B, ITEM 51 AND 24-3, FIG. 1C, ITEM 47)		RF
M 16	B9845-9		. . SCREW		3
M 16	B9845-12		. . BUNDLE ASSY, FORWARD AND AFT CARGO COMPARTMENT. . .		1
M 17	B9845-14-307		. . LIGHTS ELECTRICAL (SEE 24-3, FIG. 1A, 1B AND 1C FOR NHA)		1
M 18	307		. . . LIGHT ASSY, (WHITE) (V72914). (OPTIONAL B9845-8-307 (V72914))		1
			. . . LIGHT ASSY, (WHITE) (V72914). (OPTIONAL TO B9845-3-307 (V72914))		1
			. . . COVER ASSY, (WHITE) (V72914) (INCLUDES LENS . .		1
			 A7029-1) (USED ON B9845-3-307)		1
			. . . COVER ASSY, (WHITE) (V72914) (INCLUDES LENS . .		1
			 A7029-4) (USED ON B9845-8-307)		1
			. . . HOUSING ASSY, (V72914).		1
			. . . LAMP, (V08806).		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

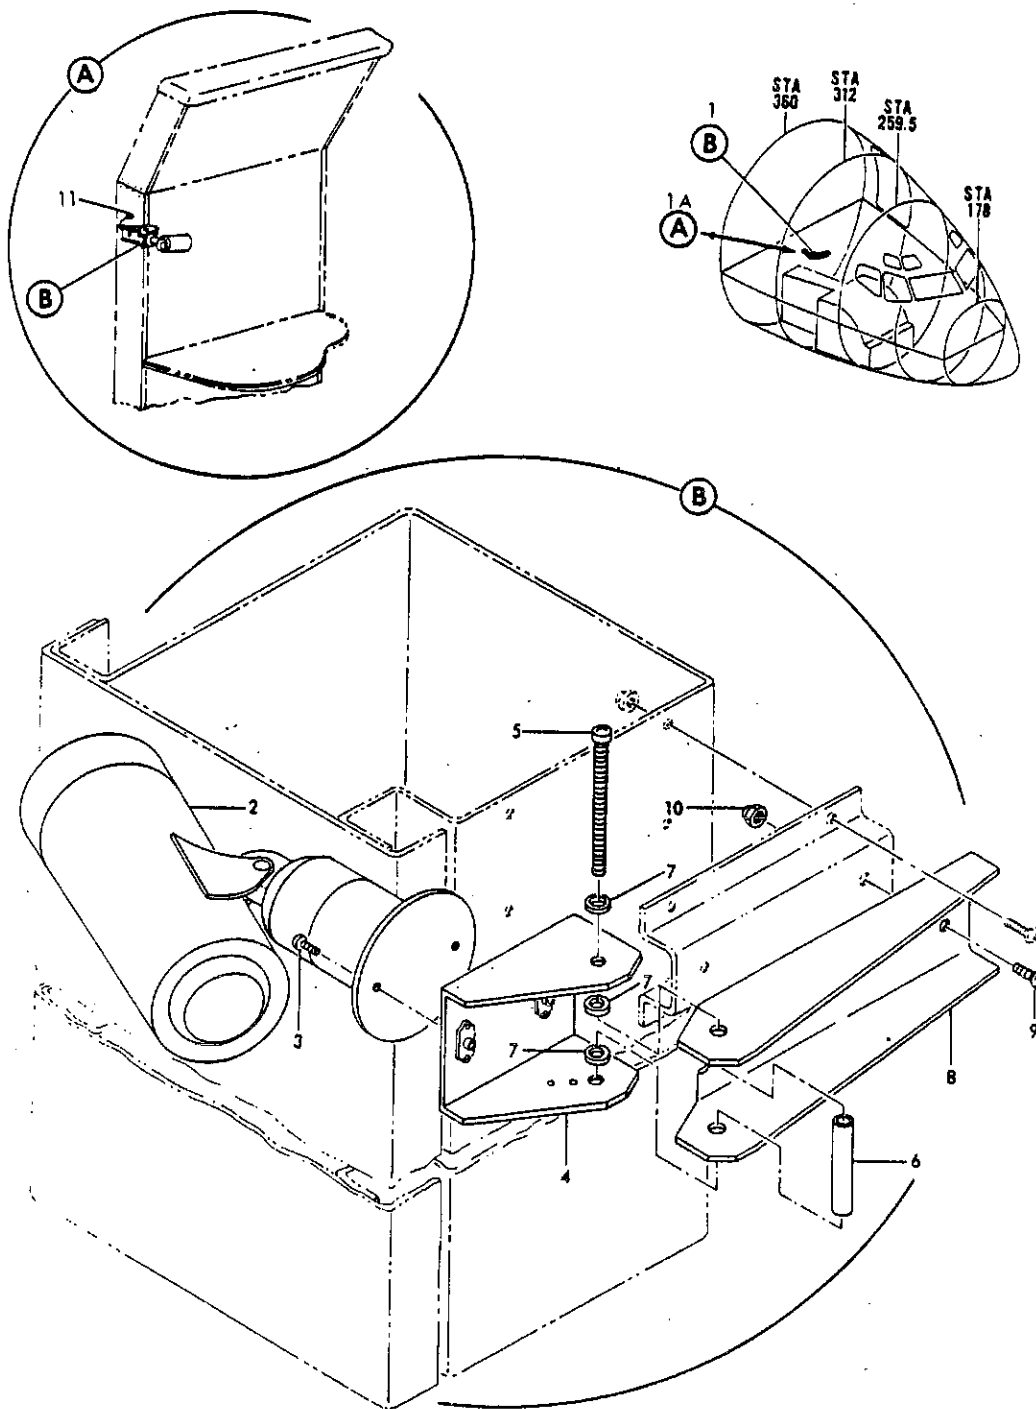


FIGURE 15A. FLOODLIGHT INSTL, MAIN AC POWER SHIELD

DETAILED PARTS LIST
33-03-15A
PAGE 0

33-03-15A

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
15A 1	65-30064-3		FLOODLIGHT INSTL, MAIN AC POWER SHIELD (SEE 24-3, FIG. 1A, ITEM 65, 24-3, FIG. 1B, ITEM 58 AND 24-3, FIG. 1C, ITEM 54)	5199	RF
2	30235-2-313		. LIGHT, INCANDESCENT COCKPIT SPOT (V72914)	5199	1
3	NAS601-7P		. ATTACHING PARTS	5199	2
4	66-12067		. SCREW	5199	1
5	NAS603-30P		. SUPPORT ASSY.	5199	1
6	NAS43DD3-68		. SCREW	5199	1
7	AN960DIOL		. SPACER.	5199	1
8	66-12067-3		. WASHER.	5199	3
9	NAS603-6P		. CHANNEL, SUPPORT.	5199	1
10	NAS679A3W		. ATTACHING PARTS	5199	2
			. SCREW	5199	2
			. NUT	5199	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

RAF
NOV 21/90

33-03-15A

DETAILED PARTS LIST
33-03-15A
PAGE 1

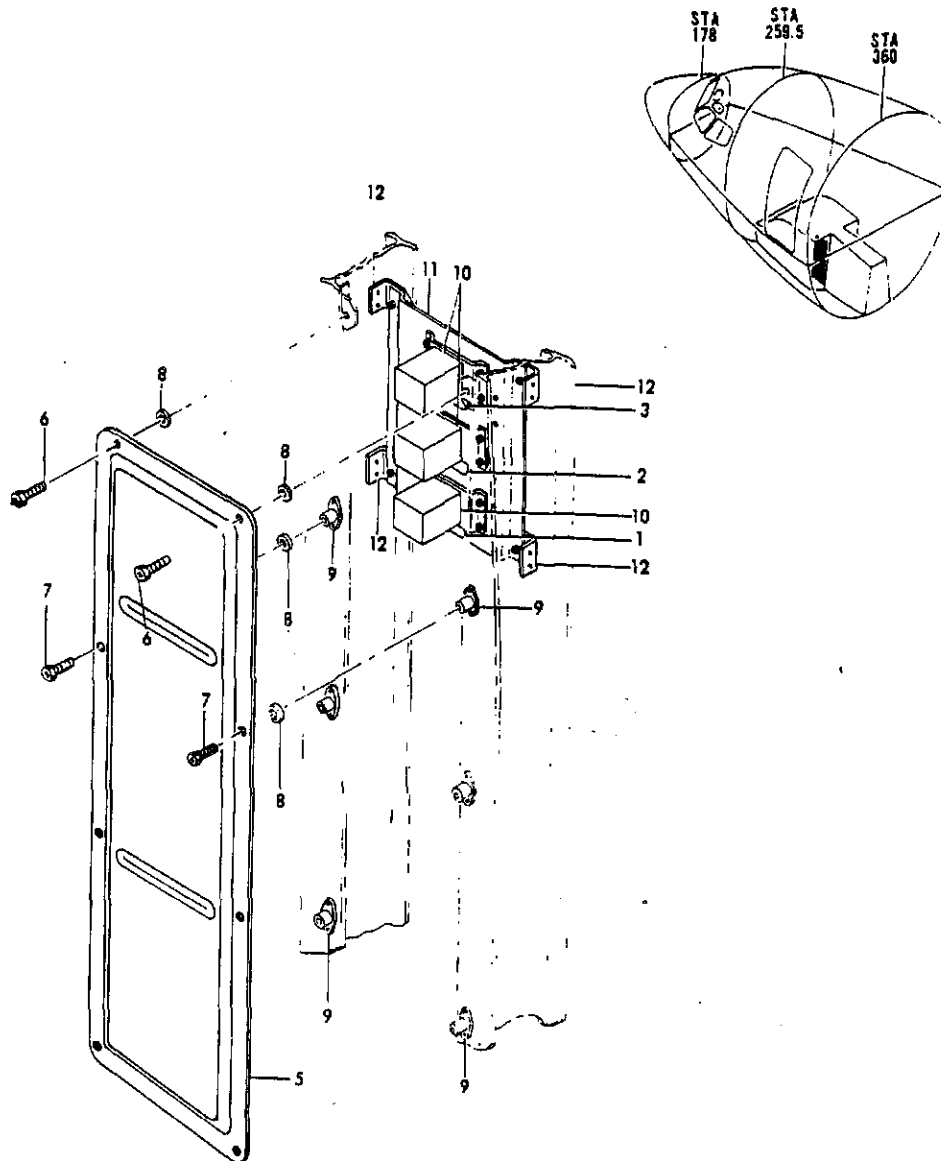


FIGURE 190. BALLAST INSTL, NAVIGATORS TABLE FLUORESCENT LIGHTS (LIGHTS ONLY)

DETAILED PARTS LIST
33-03-190
PAGE 0

33-03-190

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	19D	65-51373-1	BALLAST INSTL, NAVIGATORS TABLE FLUORESCENT LIGHTS. . .							0150	RF
R			(LIGHTS ONLY) (SEE 24-3, FIG. 18, ITEM 55)								
R	1	BACM10B20-21B	. METAL-CAL, BALLAST.							0150	1
R	2	BACM10B20-21C	. METAL-CAL, BALLAST.							0150	1
R	3	BACM10B20-21A	. METAL-CAL, BALLAST.							0150	1
R	5	65-10652	. COVER ASSY.							0150	1
			ATTACHING PARTS								
R	6	BACS12CB3-20	. SCREW							0150	2
R	7	BACS12CB3-1B	. SCREW							0150	6
R	8	AN960D10L	. WASHER.							0150	8
R	9	BACS1BF50B	. SPACER.							0150	6
			-----*								
R	10	65-51373-2	. BALLAST, DIMMING 8W 1 LAMP.							0150	3
			ATTACHING PARTS								
R		BACS12CB3-6	. SCREW							0150	12
			-----*								
R	11	69-46303-1	. PLATE ASSY, SUPPORT							0150	1
			ATTACHING PARTS								
R		BACS12CB3-6	. SCREW							0150	4
R		NAS679A3W	. NUT							0150	4
			-----*								
R	12	66-10301-3	. ANGLE, SUPPORT.							0150	4
			ATTACHING PARTS								
R		MS20470D5	. RIVET							0150	8
			-----*								
R			. FOR REFERENCE TO OTHER BALLAST DETAILS, SEE NHA . . .							0150	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

MISSING ITEM NUMBERS ARE NOT APPLICABLE

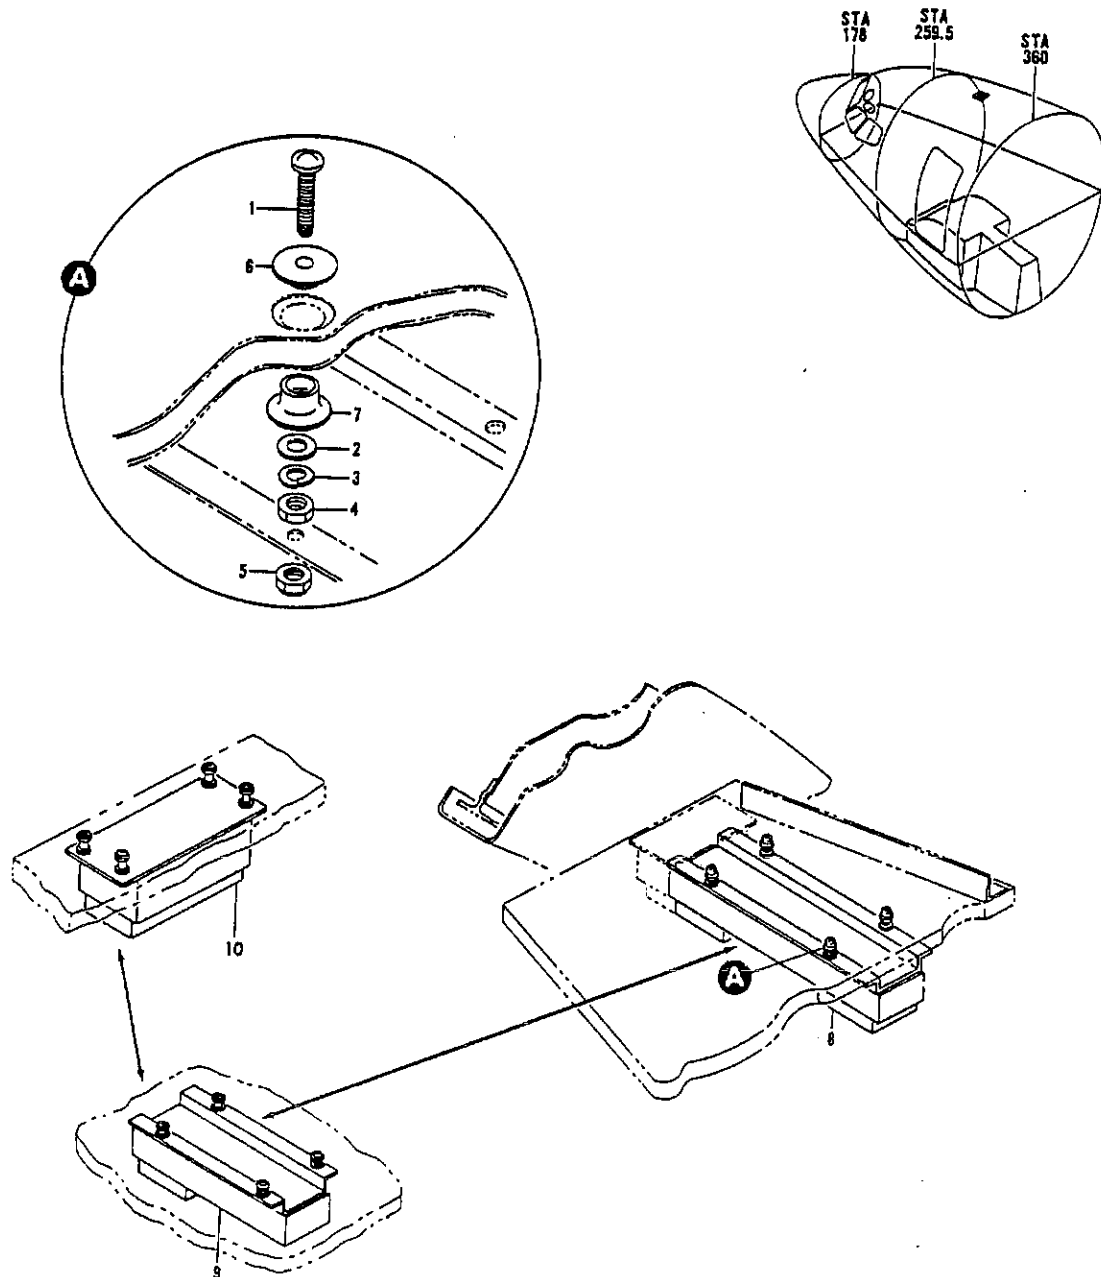


FIGURE 20. BALLAST INSTL, FLIGHT ENGINEERS PANEL DIMMING

BOEING *707* Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R R R R R R R R	20	65-8918	BALLAST INSTL, FLIGHT ENGINEERS PANEL DIMMING (SEE. . . 25-1, FIG. 1, ITEM 73, 25-1, FIG. 1B, ITEM 70, 25-1, FIG. 1C, ITEM 80, 25-1, FIG. 1D, ITEM 72, 25-1, FIG. 1E, ITEM 68, 25-1, FIG. 1F, ITEM 54, 25-1, FIG. 1G, ITEM 61, 25-1, FIG. 1H, ITEM 69, 25-1, FIG. 1J, ITEM 63, 25-1, FIG. 1K, ITEM 61, 25-1, FIG. 2B, ITEM 63, 25-1, FIG. 2C, ITEM 56, 25-1, FIG. 2D, ITEM 49, 25-1, FIG. 2E, ITEM 29, 25-1, FIG. 2F, ITEM 61, 25-1, FIG. 2G, ITEM 73, AND 25-1, FIG. 2H ITEM 66)							0150	RF
		65-8919	BALLAST INSTL, FLIGHT ENGINEERS PANEL DIMMING (VARIABLE DWG;65-8919-5001) (SEE 25-1, FIG. 2E, ITEM 29)							5199	RF
	1	NAS602-15P	. SCREW								4
	2	AN960DBL	. WASHER.								4
	3	MS35337-42	. WASHER.								4
	4	MS35649-282	. NUT								4
	5	BACN10JC08	. NUT								4
	6	BACS18P3B5P	. SPACER.								4
	7	BACS18P3B12S	. SPACER.								4
	9	4RBA13-2T	. BALLAST ASSY, (V82255) (OPTIONAL AND FOR REPLACEMENT ORDER 61-48-1 (V82255))								1
	9	61-48-1	. BALLAST ASSY, (V82255) (OPTIONAL TO AND REPLACEMENT FOR 4RBA13-2T (V82255) 28734 (V88204) 563123 (V98571))								1
	9	28734	. BALLAST ASSY, (V88204) (OPTIONAL AND FOR REPLACEMENT ORDER 61-48-1 (V82255))								1
	9	563123	. BALLAST ASSY, (V98571) (OPTIONAL AND FOR REPLACEMENT ORDER 61-48-1 (V82255))								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

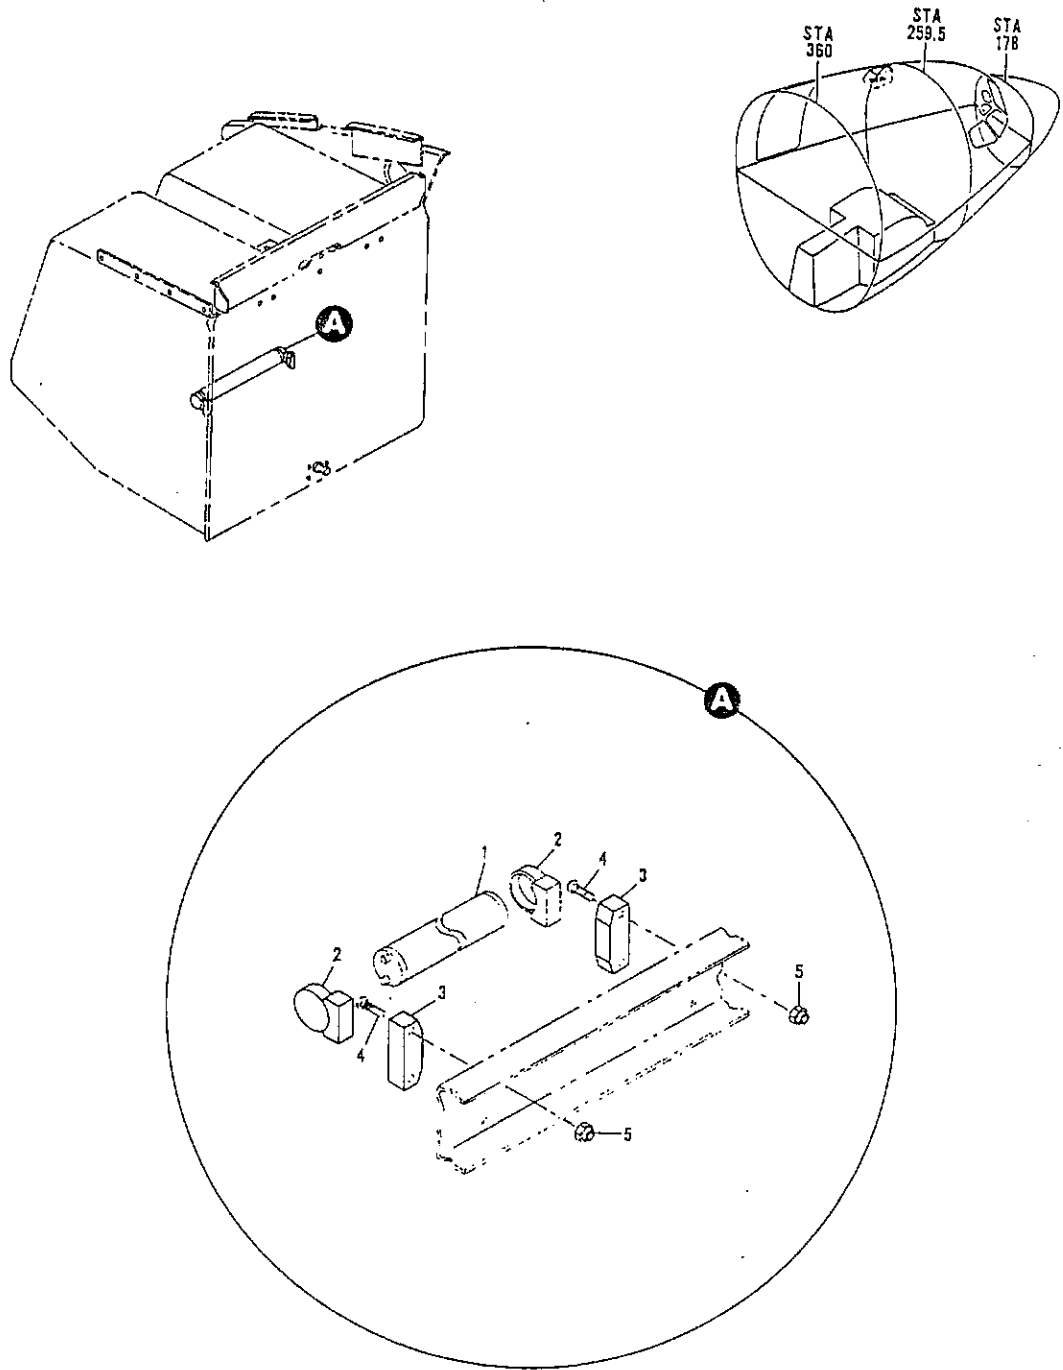


FIGURE 23. CABINET INSTL, NAVIGATOR (LIGHTS ONLY)

MISSING ITEM NUMBERS ARE NOT APPLICABLE

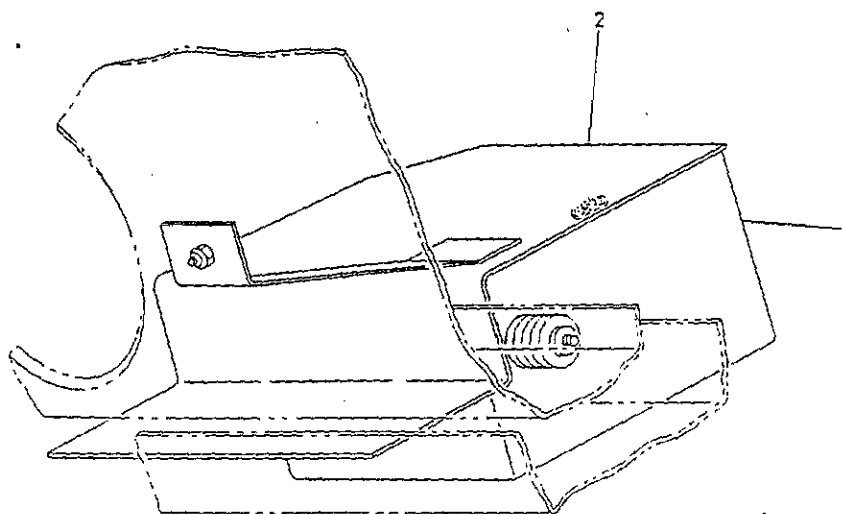
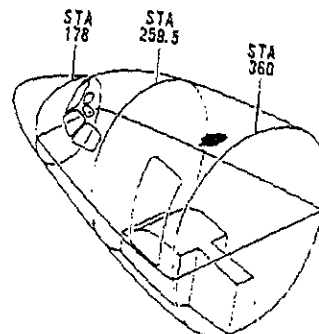


FIGURE 24. FILTER INSTL. CONTROL CABIN FLUORESCENT BALLAST

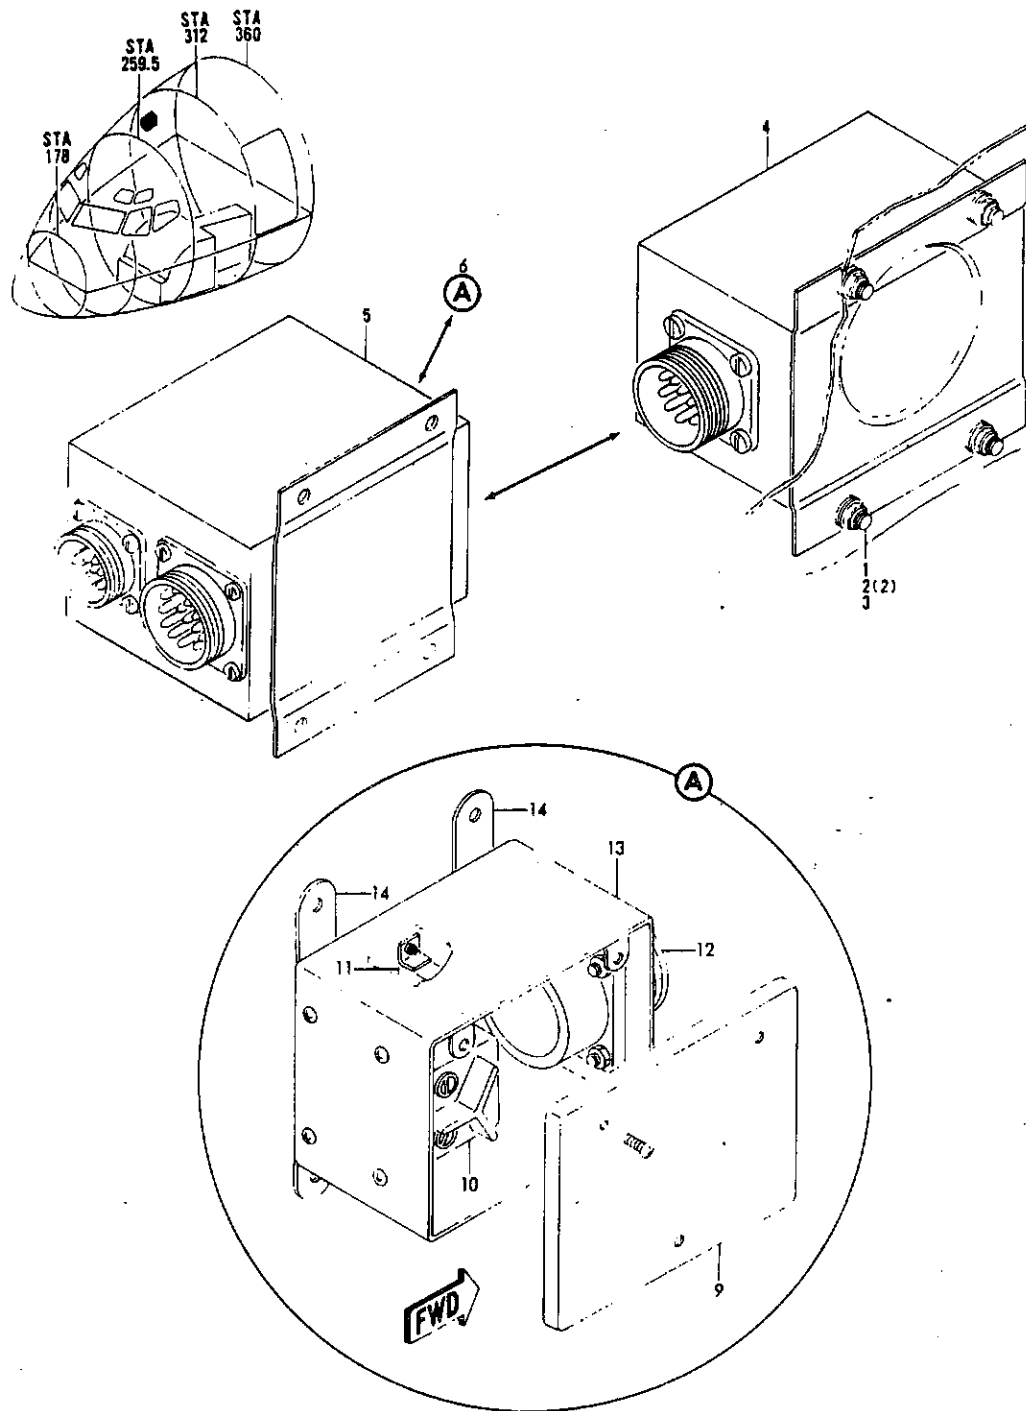


FIGURE 36. CONTROL UNIT INSTL, MASTER WARNING LIGHT

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
36	66-3001-1	CONTROL UNIT INSTL, MASTER WARNING LIGHT (SEE 25-1, . . . FIG. 1, ITEM 121, 25-1, FIG. 1B, ITEM 107, 25-1, FIG. 1C, ITEM 123, 25-1, FIG. 1D, ITEM 120, 25-1, FIG. 1E, ITEM 116, 25-1, FIG. 1F, ITEM 95, 25-1, FIG. 1G, ITEM 98, 25-1, FIG. 1H, ITEM 113, 25-1, FIG. 1J, ITEM 115, 25-1, FIG. 1K, ITEM 109, 25-1, FIG. 2B, ITEM 113, 25-1, FIG. 2C, ITEM 104, 25-1, FIG. 2D, ITEM 88, 25-1, FIG. 2E, ITEM 61, 25-1, FIG. 2F, ITEM 101, 25-1, FIG. 2G, ITEM 101 AND 25-1, FIG. 2H, ITEM 109)		RF
1	NAS603-8	. . . SCREW		4
2	AN960PD10	. . . WASHER		8
3	NAS679A3W	. . . NUT		4
6	65-4537B-1	. . . CONTROL ASSY, (LIGHTS ONLY)		1
9	65-4537B-4	. . . COVER		1
		ATTACHING PARTS		
	NAS602-10	. . . SCREW		3
	AN960D6L	. . . WASHER		3
10	1332-1A	. . . FLASHER, (V97896)		1
		ATTACHING PARTS		
	NAS602-6	. . . SCREW		4
	AN960D8L	. . . WASHER		4
	AN679A08W	. . . NUT		4
11	BR7Y900B7-Z6VRO	. . . RELAY, (VB2050)		1
		ATTACHING PARTS		
	NAS601-5	. . . SCREW		2
	AN960D6L	. . . WASHER		2
	NAS609A06W	. . . NUT		2
12	MS3102R24-5P	. . . CONNECTOR		1
		ATTACHING PARTS		
	NAS601-7	. . . SCREW		4
	AN960D6L	. . . WASHER		4
	NAS679A06W	. . . NUT		4
13	65-4537B-2	. . . BOX, (ALTERED FROM BACB16031-250)		1
14	65-4537B-3	. . . PLATE		2
		. . . REQUIRED PLACARDS, (SEE 11-2, FIG. 89)		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/90

33-03-36

DETAILED PARTS LIST
33-03-36
PAGE 1


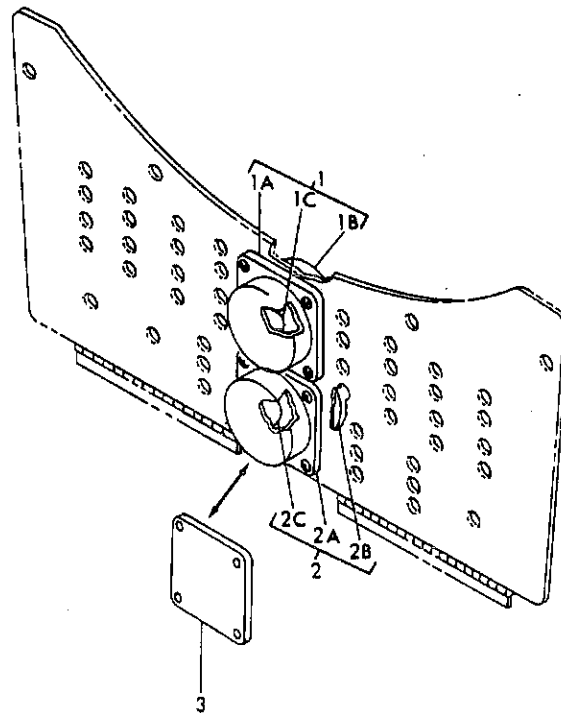


FIGURE 38. PANEL ASSY, P3 CIRCUIT BREAKER (LIGHTS ONLY)

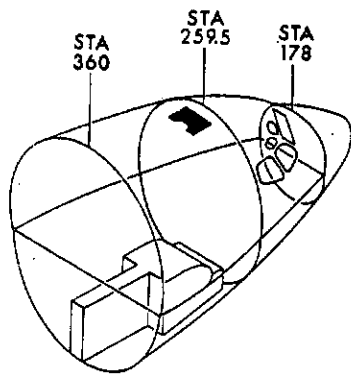

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
R R R R	38	65-2841-97	PANEL ASSY, P3 CIRCUIT BREAKER (LIGHTS ONLY) (SEE 24-7, FIG. 25, ITEM 11)	0150 RF
		65-2841-257	PANEL ASSY, P3 CIRCUIT BREAKER (LIGHTS ONLY) (SEE 24-7, FIG. 25, ITEM 11)	5199 RF
	1	B9845-3-307	. LIGHT ASSY, (WHITE) (V72914).	1
			ATTACHING PARTS	
		NAS601-5P	. SCREW	4
		BACN10JC06	. NUT	4
			-----*	
	M 1A	B9845-9	. COVER ASSY, (V72914) (INCLUDES LENS A7029-1).	1
	M 1B	B9845-14-307	. HOUSING ASSY, (V72914).	1
	M 1C	307	. LAMP, (V08806).	1
			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

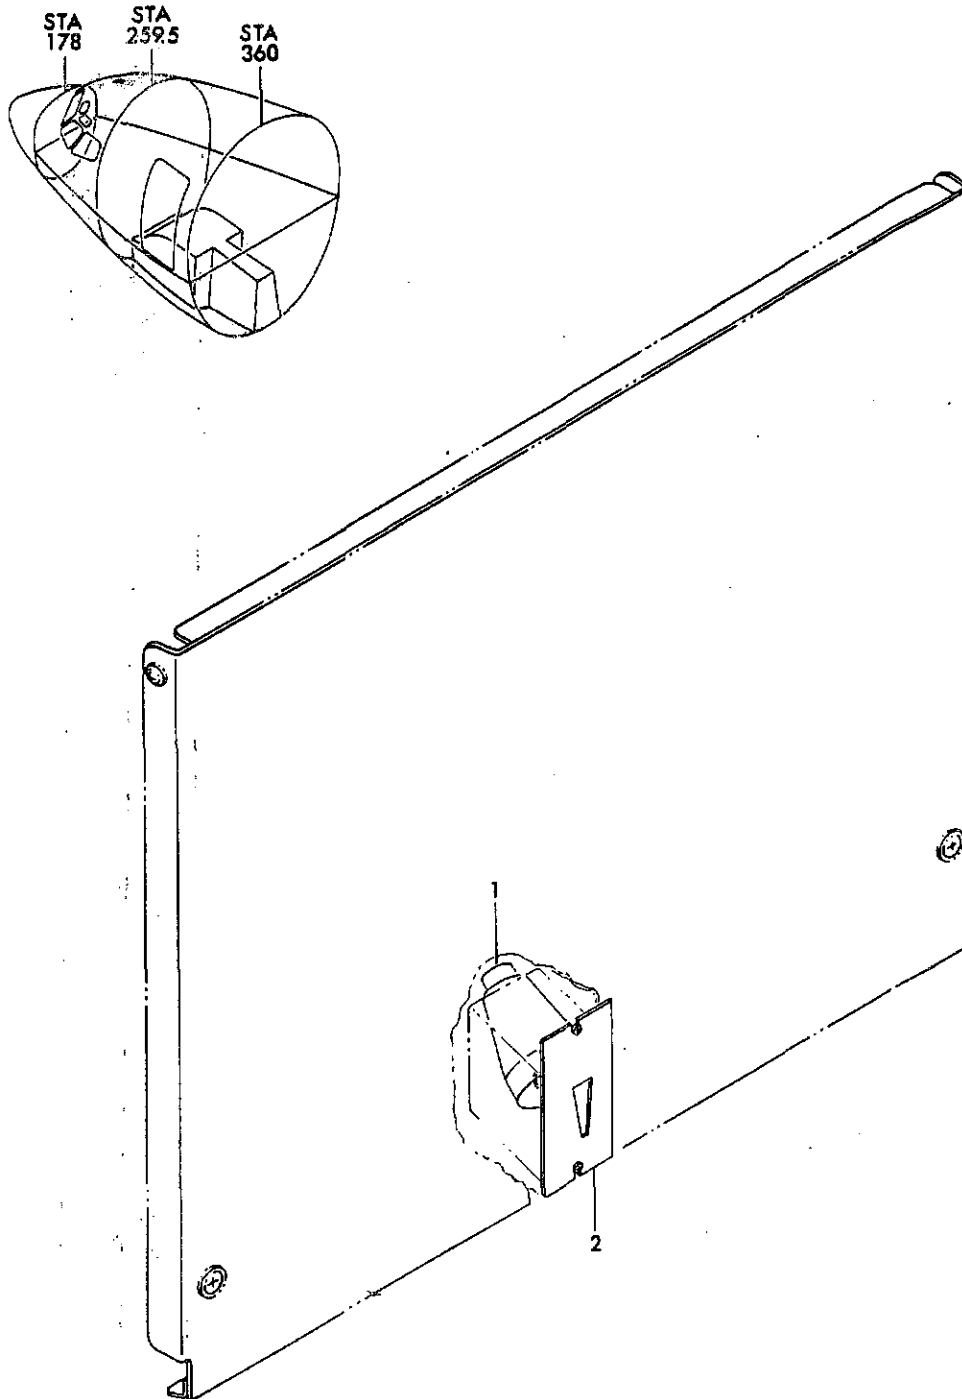


FIGURE 39H. PANEL ASSY, RADIO AND T-R CIRCUIT BREAKER (LIGHTS ONLY)

BOEING
Intercontinental

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
39H	65-6447-124	PANEL ASSY, RADIO AND T-R CIRCUIT BREAKER (LIGHTS ONLY) (SEE 24-7, FIG. 1, ITEM 11)	5199	RF
1	89735-2-1385	. LAMP ASSY, (V72914)	5199	1
	NAS601-7P	. ATTACHING PARTS . SCREW	5199	2
2	50-11365-49	. LIGHT MASK.	5199	1
	NAS601-7P	. ATTACHING PARTS . SCREW	5199	2
		. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



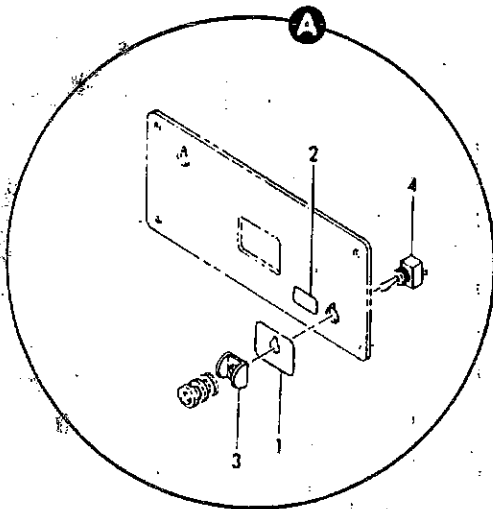


FIGURE 41. EQUIPMENT INSTL, CONTROL CAB EMERGENCY (LIGHTS ONLY)

BDEING

Intercontinental

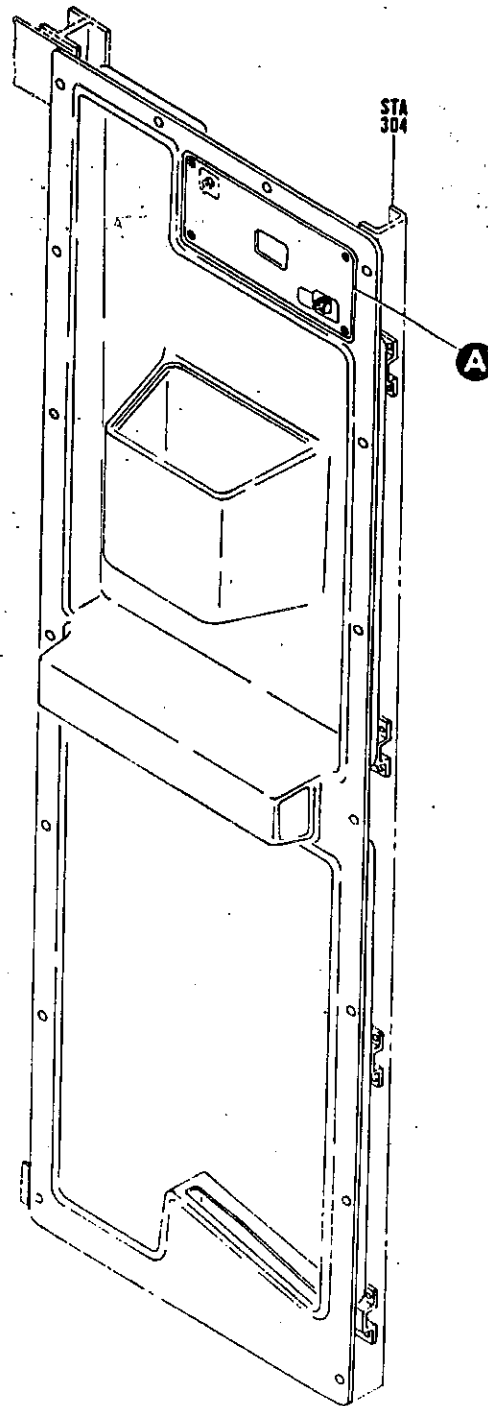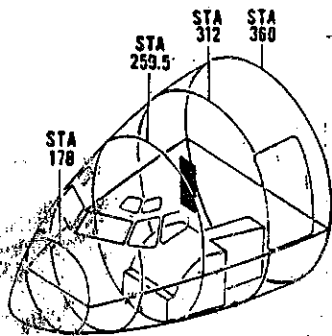

PARTS CATALOG

FIGURE 6 ITEM NO.	MANUFACTURER PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
41	50-9385-27	EQUIPMENT INSTL, CONTROL CAB EMERGENCY (LIGHTS ONLY). (SEE 25-1, FIG. 1B, ITEM 76, 25-1, FIG. 1C, ITEM 89, 25-1, FIG. 1D, ITEM 82, 25-1, FIG. 1E, ITEM 79, 25-1, FIG. 1F, ITEM 65, 25-1, FIG. 1G, ITEM 69, 25-1, FIG. 1H, ITEM 78, 25-1, FIG. 1J, ITEM 74, 25-1, FIG. 1K, ITEM 71, 25-1, FIG. 2B, ITEM 72, 25-1, FIG. 2C, ITEM 67, 25-1, FIG. 2D, ITEM 60, 25-1, FIG. 2E, ITEM 40, 25-1, FIG. 2F, ITEM 69, 25-1, FIG. 2G, ITEM 66 AND 25-1, FIG. 2H, ITEM 73)		RF
1	50-9385-9	MARKER-ALUMINUM FOIL, DOME LIGHT.	0103	1
2	BAC27CEQ117	MARKER-ALUMINUM FOIL, DOME LIGHT.	0499	1
4	66-3260	PLATE ASSY, SENSOR UNIT (LIGHTS ONLY)		RF
	MS35058-23	SWITCH.		1
		FOR REFERENCE TO OTHER EQUIPMENT DETAILS, SEE NHA . . .		

MISSING ITEM NUMBERS ARE NOT APPLICABLE



SECTION 04
COMPARTMENT LIGHTING

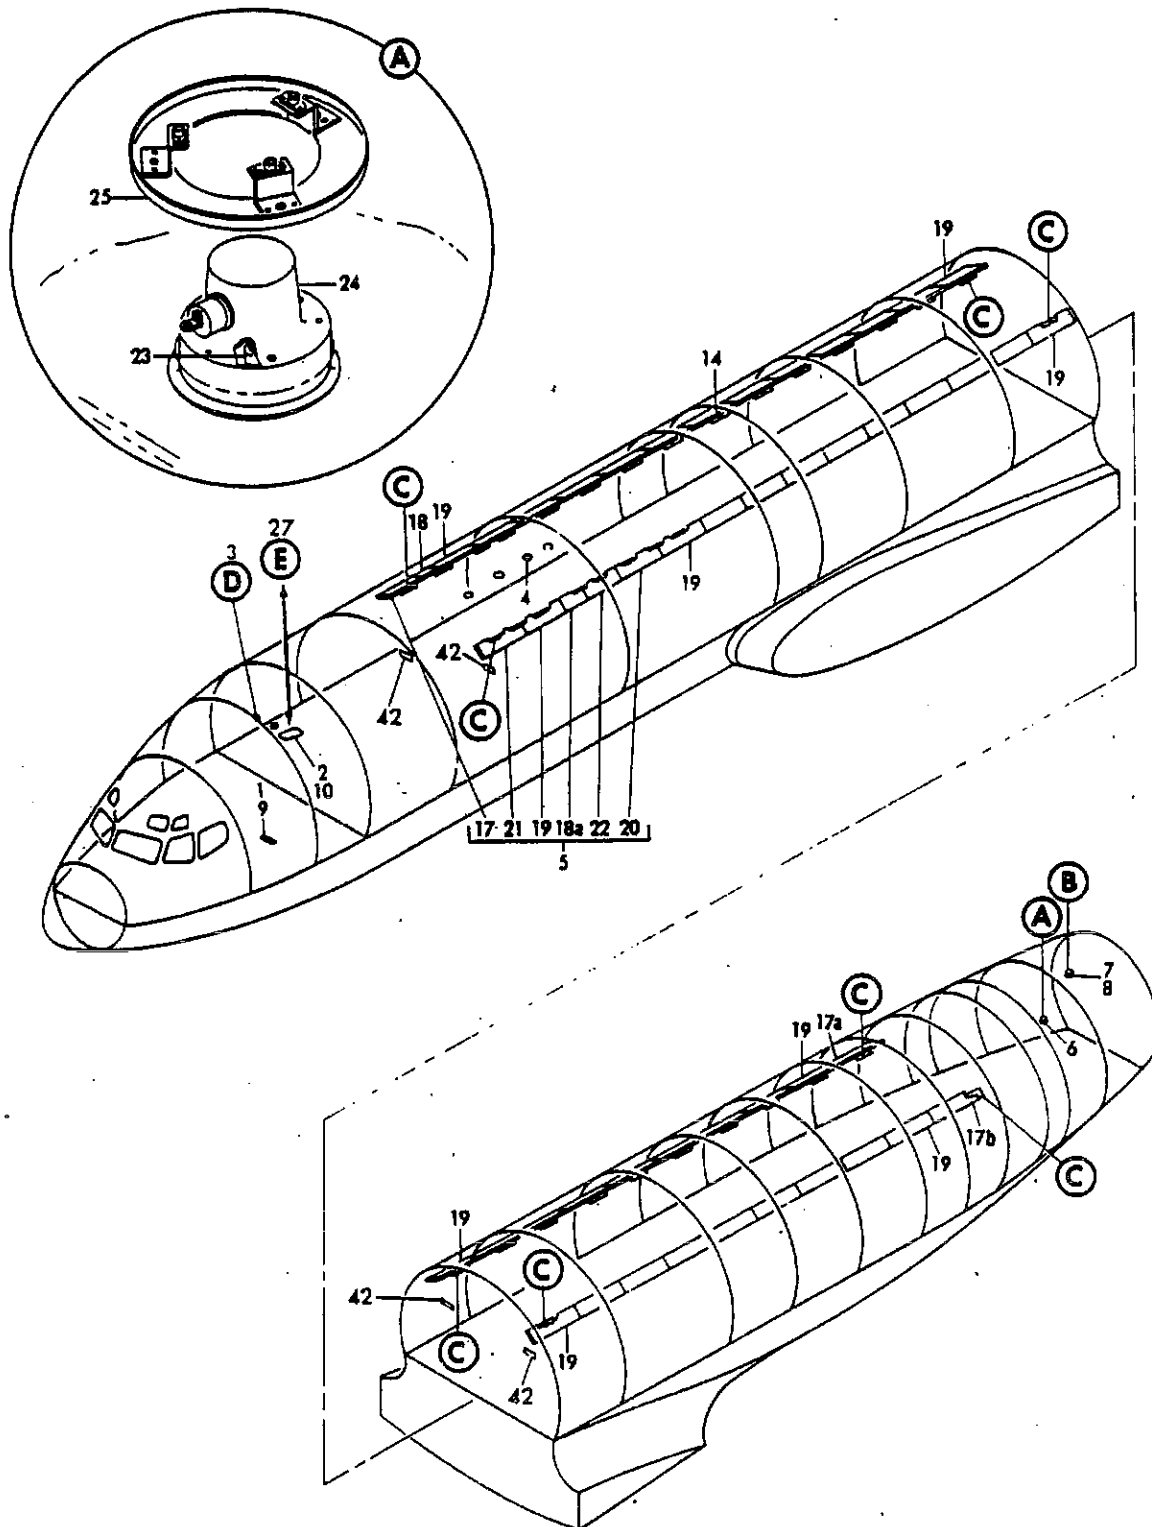


FIGURE 6C. LIGHT INSTL, CABIN INTERIOR (SHEET 1)

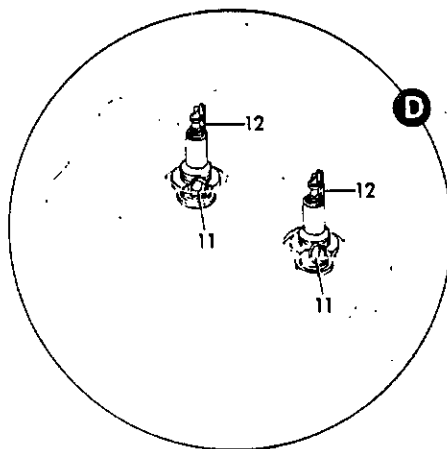
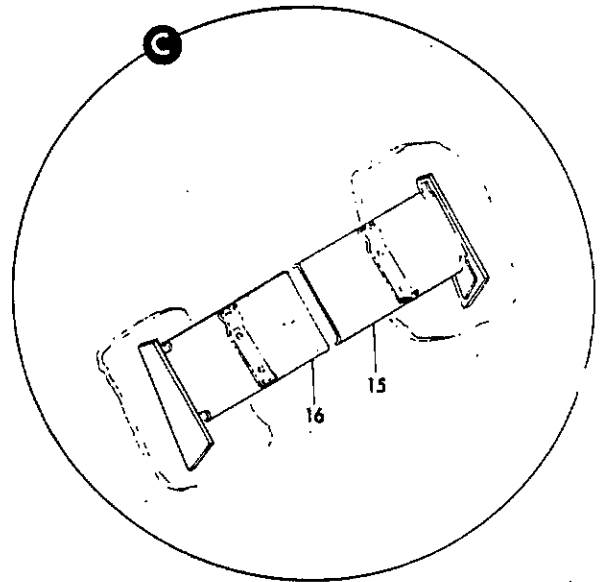
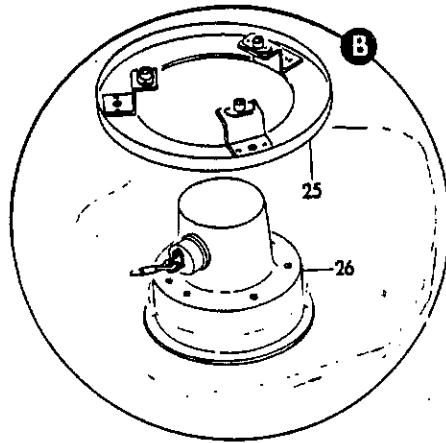


FIGURE 6C. LIGHT INSTL, CANIN INTERIOR (SHEET 2)

NOV 21/90

33-04-60

DETAILED PARTS LIST
33-04-60
PAGE 1

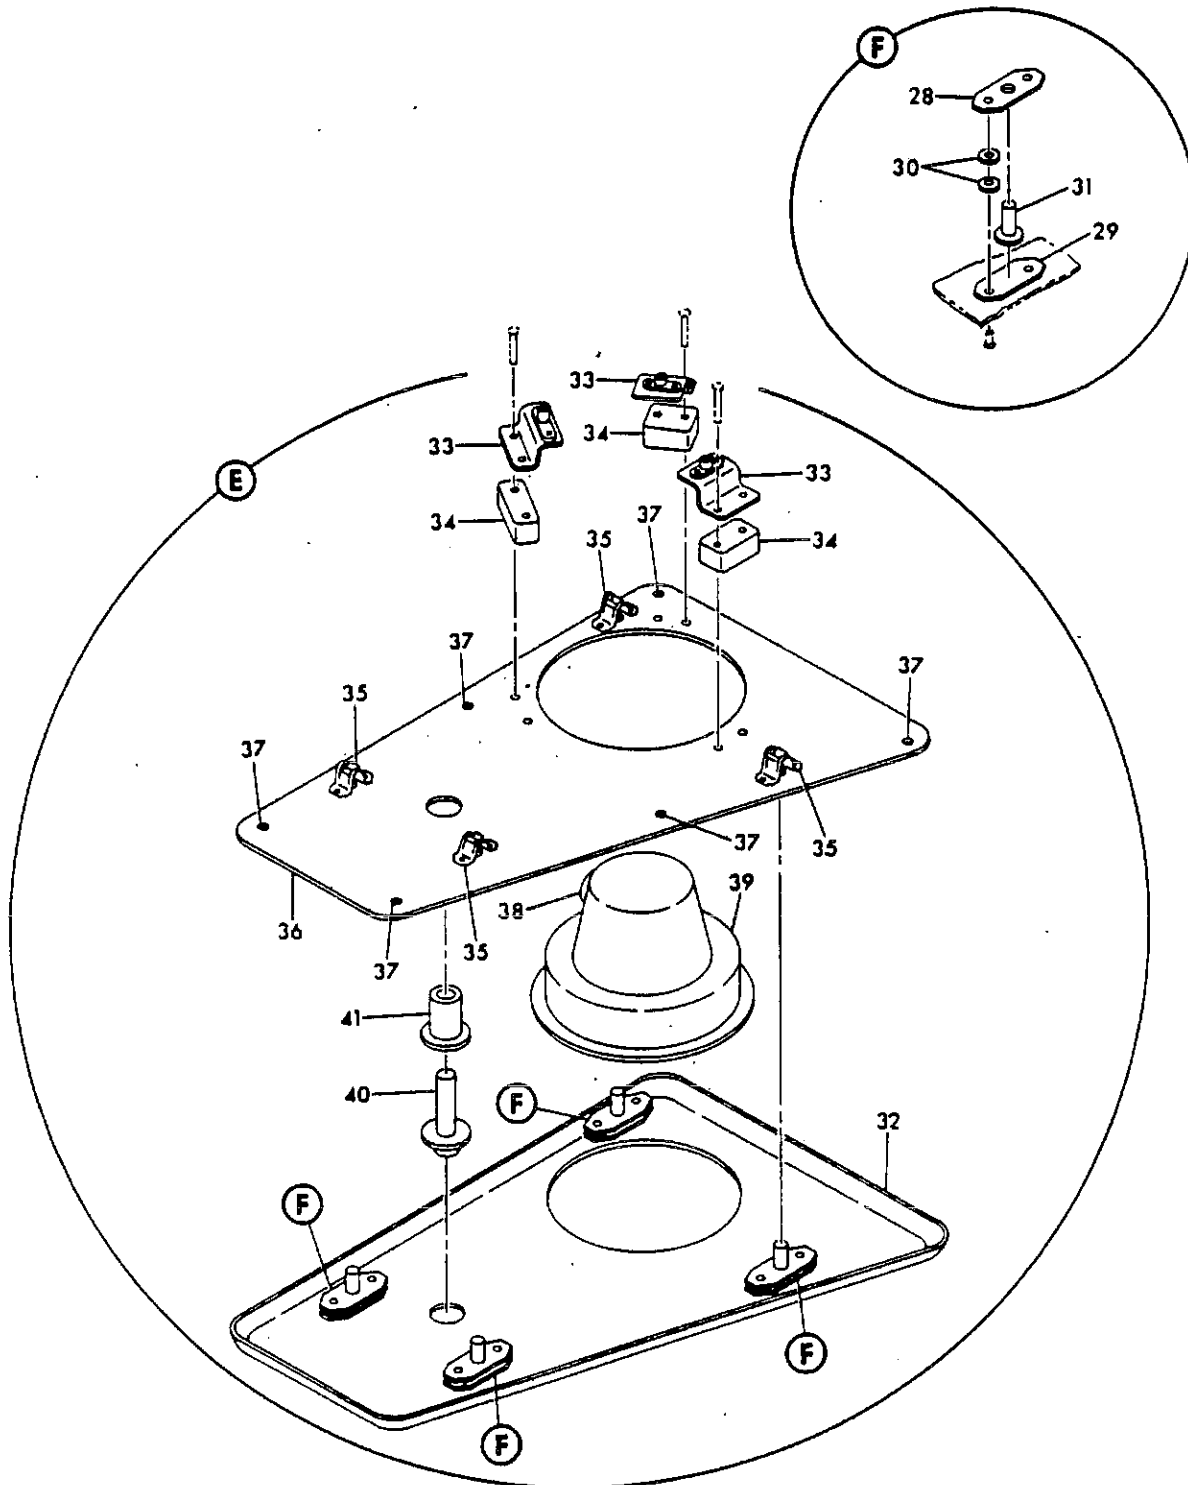


FIGURE 6C. LIGHT INSTL, CABIN INTERIOR (SHEET 3)

MISSING ITEM NUMBERS ARE NOT APPLICABLE

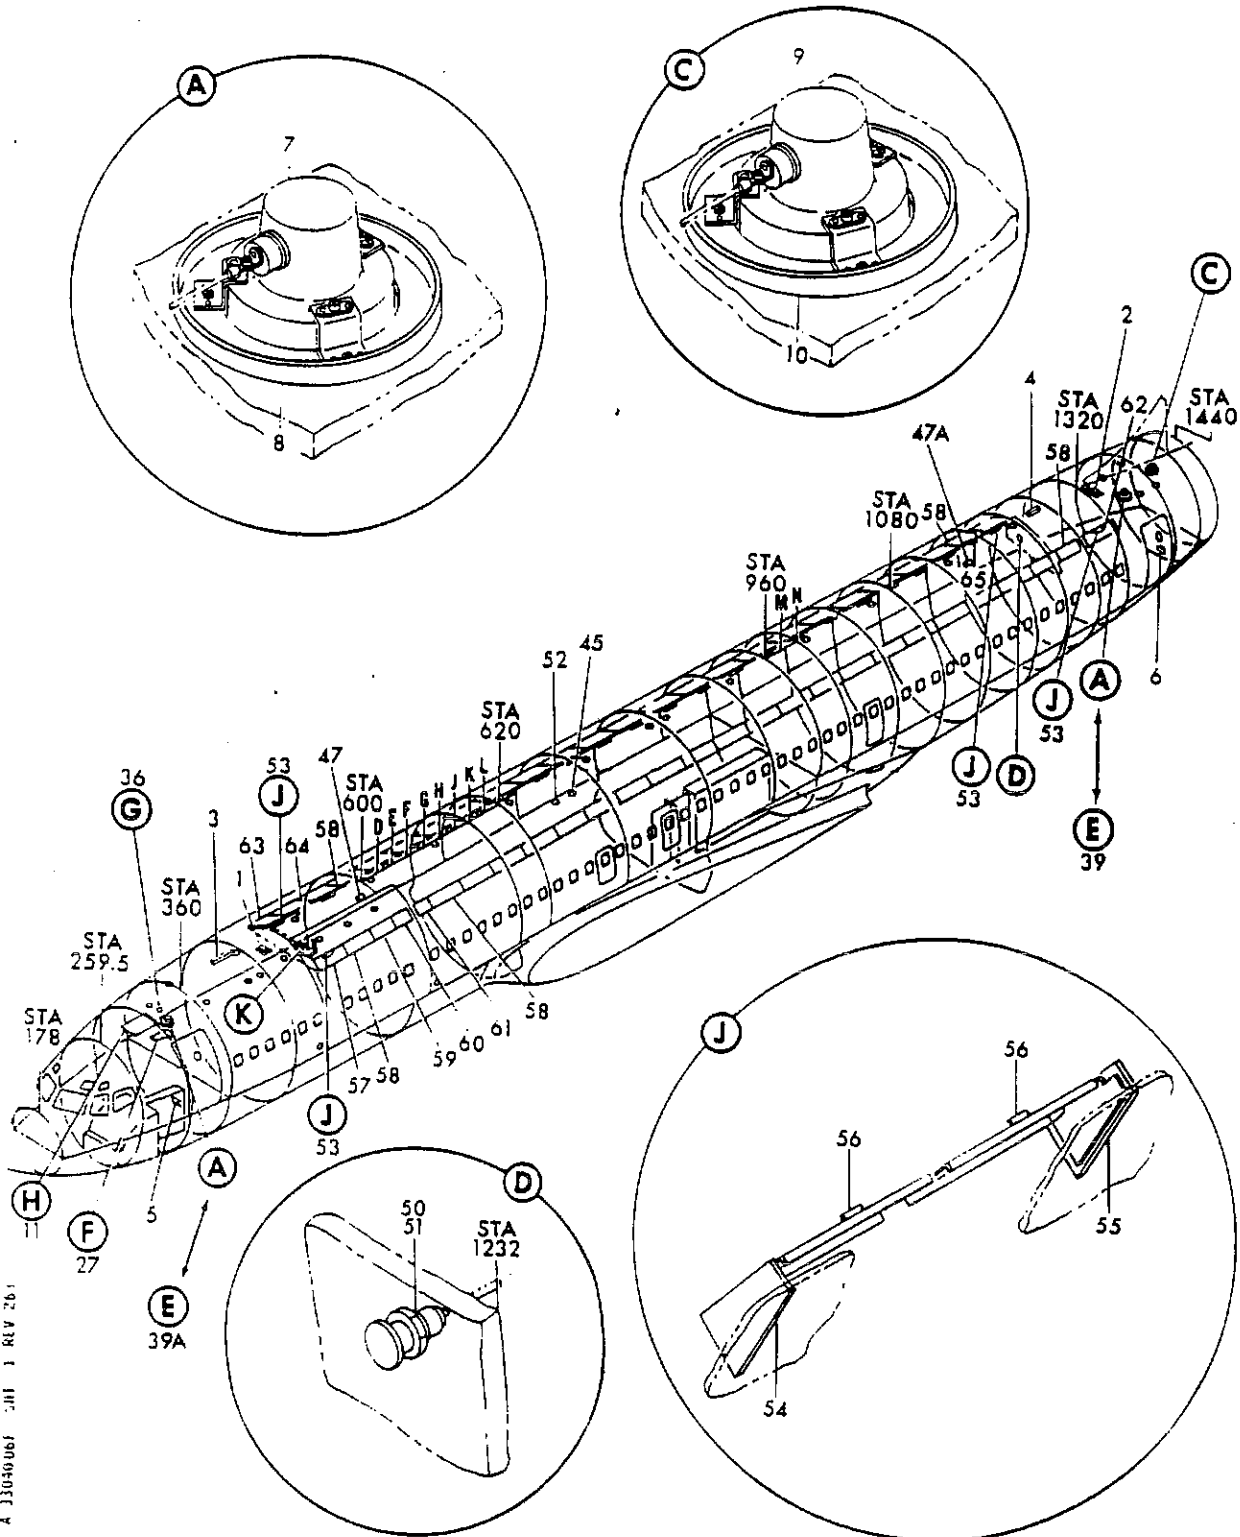


FIGURE 6F. LIGHTING INSTL. MAIN CABIN (SHEET 1)

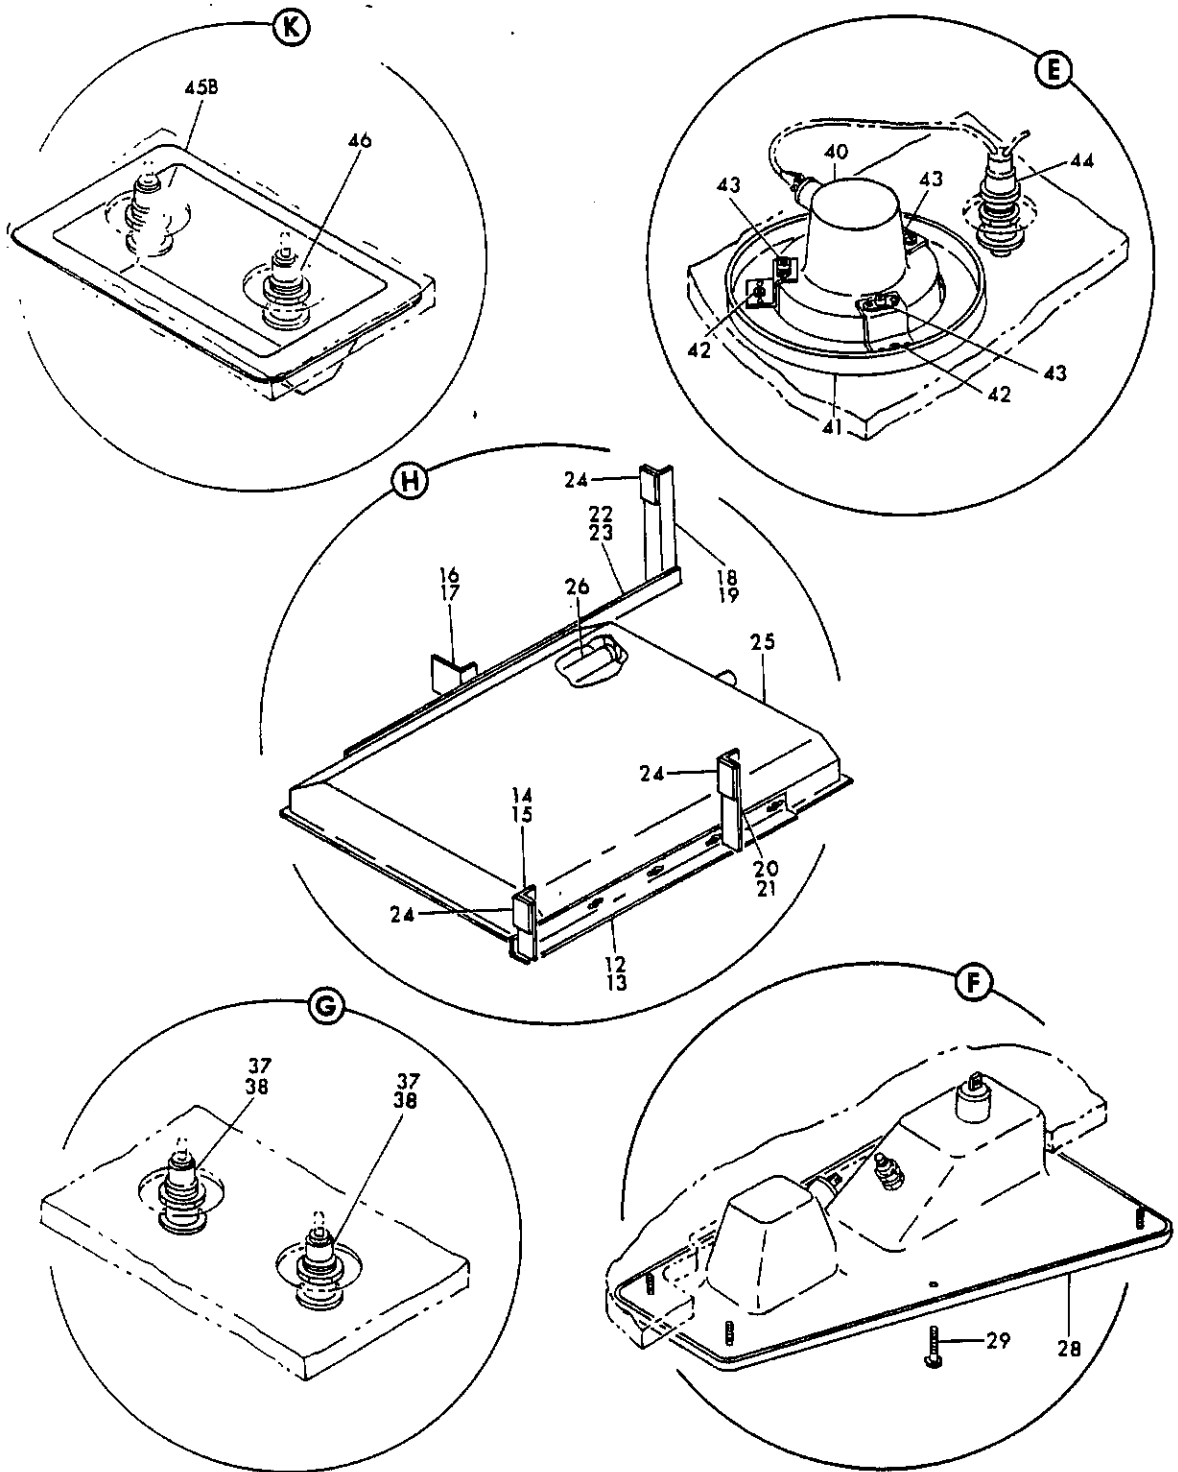


FIGURE 6F. LIGHTING INSTL. MAIN CABIN (SHEET 2)

NOV 21/90

33-04-6F


DETAILED PARTS LIST
33-04-6F
PAGE 1




PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
	6F	65-85096-4	LIGHTING INSTL, MAIN CABIN (SEE 25-1, FIG. 174, ITEM 2 25-1, FIG. 174B, ITEM 2, 25-1, FIG. 174C, ITEM 2 AND 25-1, FIG. 174E ITEM 2)	5199	RF
R	5	B9700-1	. . LIGHT ASSY, (V72914)	5199	1
		NAS514P832-10	. . ATTACHING PARTS . . SCREW	5199	4
R	9	10-60196-2	. . LIGHT ASSY, (SAME AS L15257 (V17744))	5199	1
	9	L15257	. . LIGHT ASSY, (V17744) (SAME AS BAC SPEC NO. 10-60196-2) (SEE FIG. 203)	5199	RF
		NAS602-10	. . ATTACHING PARTS . . SCREW	5199	3
		69-9392-1	. ADAPTER INSTL, AFT LAVATORY ENTRANCE AISLE LIGHT. . . MOUNTING	5199	1
	10	10-60196-1	. . ADAPTER ASSY.	5199	1
		NAS603-5	. . ATTACHING PARTS . . SCREW	5199	3
	11	65-74204-5	. . LIGHT INSTL, FORWARD ENTRY.	5199	1
	12	69-58217-18	. . ANGLE ASSY.	5199	1
	13	69-58217-19	. . ANGLE	5199	1
	14	69-58217-16	. . ANGLE ASSY.	5199	1
	15	69-58217-17	. . ANGLE	5199	1
	16	69-58217-13	. . ANGLE ASSY.	5199	1
	17	69-58217-14	. . ANGLE	5199	1
	18	69-58217-8	. . ANGLE ASSY.	5199	1
	19	69-58217-12	. . ANGLE	5199	1
	20	69-58217-5	. . ANGLE ASSY.	5199	1
	21	69-58217-9	. . ANGLE	5199	1
	22	69-58217-2	. . ANGLE ASSY.	5199	1
	23	69-58217-15	. . ANGLE	5199	1
	24	65-74204-2	. . SHIM, NYLON	5199	3
	25	L20856	. . LIGHT ASSY, (V17744).	5199	1
	26	5113W/W	. . LAMP, FLUORESCENT (V08806).	5199	4
	36	69-20951-18	. LIGHT INSTL, NO SMOKING FASTEN SEAT BELTS	5199	1
	37	ST703FIPL39237	. . LIGHT ASSY, (V81590).	5199	2
	38	MS25237-387	. . LAMP, INCANDESCENT (REPLACES MS18209-387)	5199	2
	38	MS18209-387	. . LAMP, INCANDESCENT (REPLACED BY MS25237-327).	5199	2
	39	69-24479-9A	. LIGHT INSTL, AFT CEILING ENTRY.	5199	1
	39A	69-24479-9A	. LIGHT INSTL, FWD CEILING ENTRY.	5199	1
	40	10-60196-8	. . LIGHT ASSY.	5199	1
	41	10-60196-1	. . ADAPTER MOUNTING.	5199	1
	43	NAS603-4P	. . SCREW	5199	3
	44	J4007W	. . SWITCH, PUSH-PUSH (V81640). (OPTIONAL TO J6300W (V81640))	5199	2
	44	J6300W	. . . SWITCH, PUSH-PUSH (V81640). (OPTIONAL J4007W (V81640))	5199	2
	45	65-36508-6	. FLOODLIGHT INSTL, CARGO (SEE FIG. 84)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

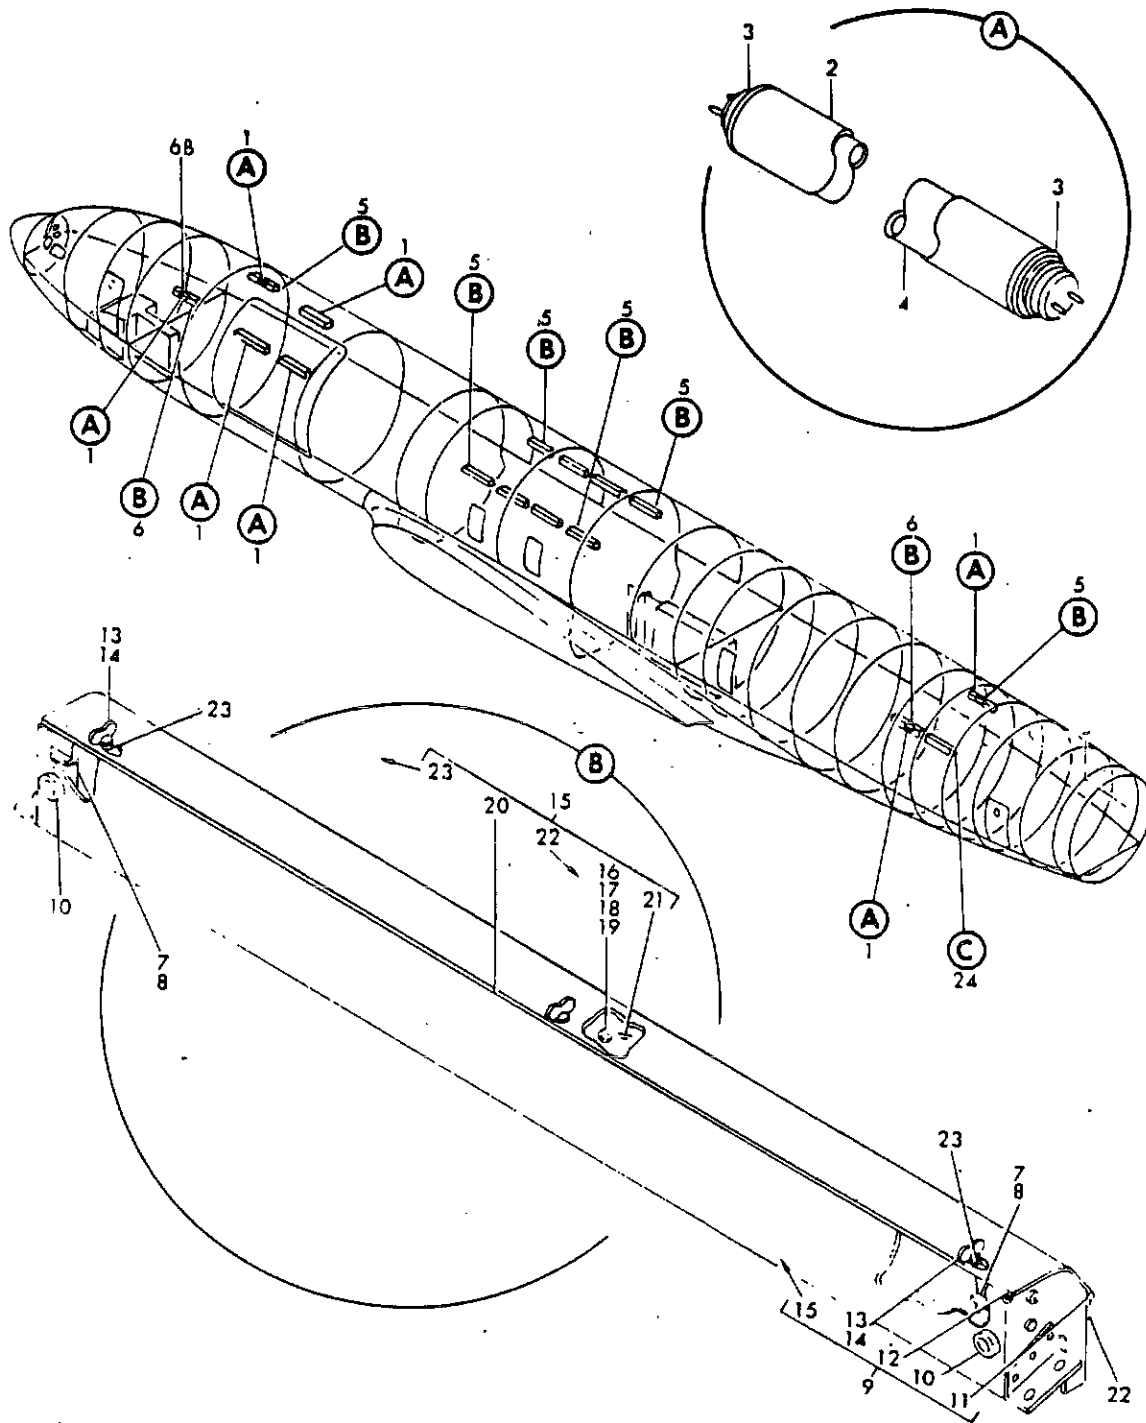

LAMP ASSY, FLUORESCENT
FIGURE 6P. PANEL ASSY, SCULPTURED TRIM (LIGHTS ONLY) (SHEET 1)

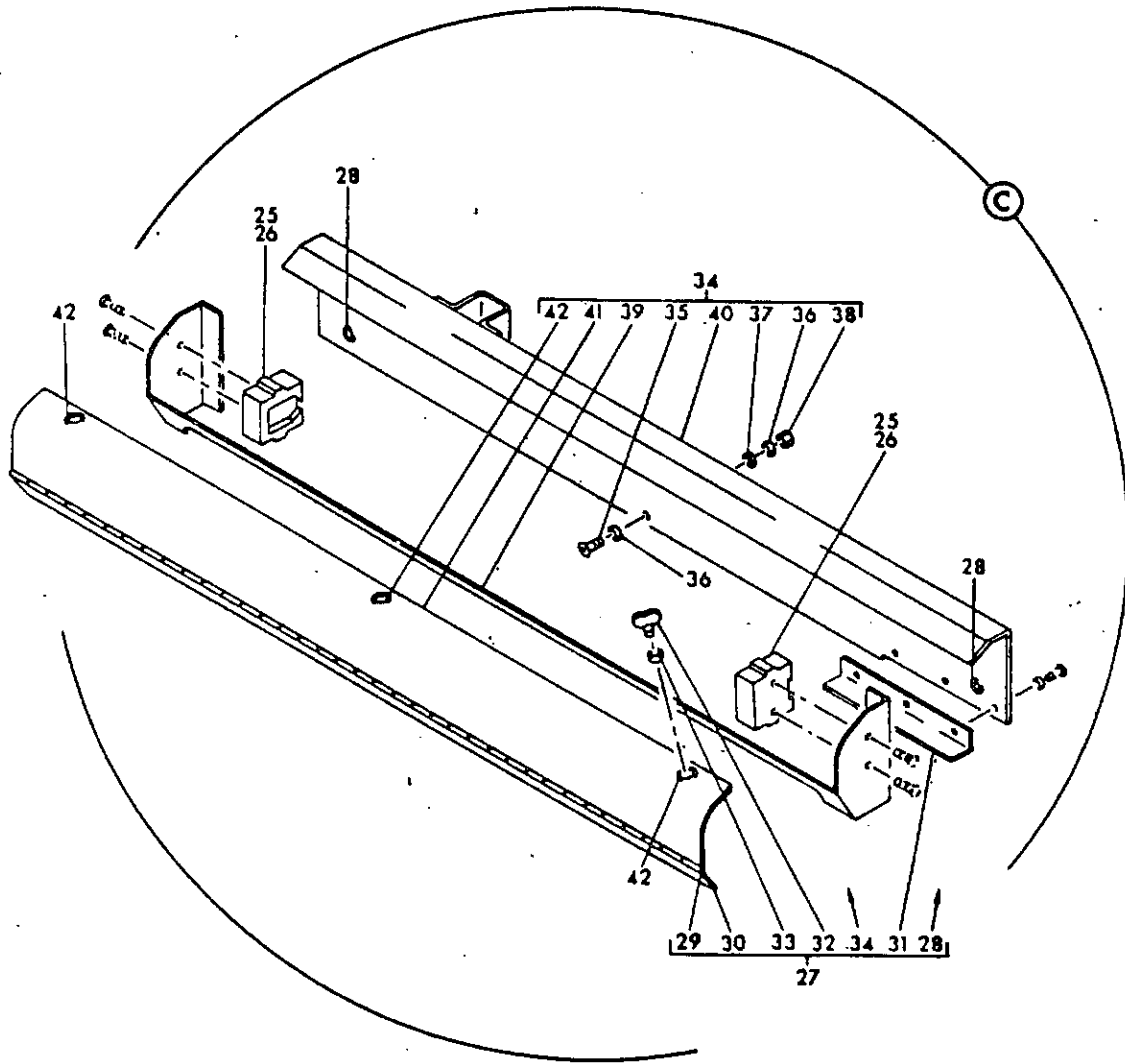

LAMP ASSY, FLUORESCENT
FIGURE 6P, PANEL ASSY, SCULPTURED TRIM (LIGHTS ONLY) (SHEET 2)

NOV 21/90

33-04-6P

DETAILED PARTS LIST
33-04-6P
PAGE 1

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
6P		LAMP ASSY, FLUORESCENT.	5199	
1	69-62359-4	PANEL ASSY, SCULPTURED TRIM (LIGHTS ONLY)	5199	RF
		. LAMP ASSY, FLUORESCENT (SEE 25-11, FIG. 48D, ITEM	5199	
		118, 25-11, FIG. 202C, ITEM 5, 25-11, FIG. 202D, ...		
		ITEMS 24 AND 38, 25-11, FIG. 202E, ITEMS 1 AND		
		21, 25-11, FIG. 202F, ITEM 1, AND 25-11, FIG.		
		210, ITEM 21)		
2	NI120LGWUV1000	. . . TUBE, (V06034) (TOGETHER WITH NI120ECMOD)	5199	1
		(OPTIONALS NI120LGW OR LP1610-34 (V06034))		
2	NI120LGW	. . . TUBE, (V06034) (TOGETHER WITH NI120ECMOD)	5199	1
		(OPTIONAL TO NI120LGWUV1000 OR LP1610-34		
		(V06034))		
2	LP1610-34	. . . TUBE, (V06034) (TOGETHER WITH 2055132).	5199	1
		(OPTIONAL TO NI120LGWUV1000 OR NI120LGW		
		(V06034))		
3	NI120ECMOD	. . . COLLAR, (V06034) (TOGETHER WITH NI120LGWUV1000. . .	5199	2
		OR NI120LGW)		
		(OPTIONAL TO 2055132 (V06034))		
3	2055132	. . . END CAP, (V06034) (TOGETHER WITH LP1610-34)	5199	2
		(OPTIONAL NI120ECMOD (V06034))		
4	F30TBWW	. . . LAMP, (V08805).	5199	1
5	65-81132-12F	. . . PANEL ASSY, SCULPTURED TRIM (LIGHTS ONLY) (SEE 25-11, . . .	5199	RF
		FIG. 202C, ITEM 7, 25-11, FIG. 202D, ITEM 44		
		AND 25-11, FIG. 210, ITEM 22)		
6	65-81132-13F	. . . PANEL ASSY, SCULPTURED TRIM (LIGHTS ONLY) (SEE 25-11, . . .	5199	RF
		FIG. 202D, ITEM 31 AND 25-11, FIG. 202F, ITEM 3)		
7	PA56547	. . . LOCK, LAMP (V17744)	5151	2
8	395-500SAN487	. . . HOLDER, LAMP (V75582)	5151	2
		ATTACHING PARTS		
	BACS12CB04-7	. . . SCREW	5151	4
		-----*-----		
9	65-81131-5	. . . HOUSING ASSY, LAMP.	5151	1
10	BACG20AF383	. . . GROMMET	5151	2
11	MS20253P2-3599	. . . PIN, HINGE.	5151	1
12	69-62676-2	. . . HINGE HALF.	5151	1
13	82-12-080-16	. . . STUD, (V94222).	5151	3
14	82-32-101-17	. . . RETAINER, (V94222).	5151	3
15	65-81131-6	. . . HOUSING ASSY.	5151	1
16	NAS603-10P	. . . SCREW	5151	1
17	AN960D10L	. . . WASHER.	5151	1
18	MS35338-43	. . . WASHER.	5151	1
19	MS35650-305T	. . . NUT	5151	1
20	65-81130-20	. . . BODY.	5151	1
21	65-81130-2	. . . BACK.	5151	1
22	MS20001PY2-3550	. . . HINGE HALF.	5151	1
23	82-35-302-15	. . . RECEPTACLE, (V94222).	5151	3
		. . . FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	5199	
24	65-81132-17B	. . . PANEL ASSY, SCULPTURED TRIM (LIGHTS ONLY) (SEE 25-11, . . .	5199	RF
		FIG. 48D, ITEM 119 AND 25-11, FIG. 202E, ITEM 22)		
25	PA56547	. . . LOCK, LAMP (V17744)	5199	2
26	395-500SAN487	. . . HOLDER, LAMP (V75582)	5199	2
		ATTACHING PARTS		
	BACS12CB04-7	. . . SCREW	5199	4
		-----*-----		
27	65-81131-7	. . . HOUSING ASSY, LAMP.	5199	1
28	BACG20AF383	. . . GROMMET	5199	2
29	MS20253P2-3599	. . . PIN, HINGE.	5199	1
30	69-62676-2	. . . HINGE HALF.	5199	1
31	69-65677-2	. . . ANGLE	5199	1
		ATTACHING PARTS		
	BACS12CB3-7	. . . SCREW	5199	3
	AN960PD10	. . . WASHER.	5199	3
		-----*-----		
32	82-12-080-16	. . . STUD, (V94222).	5199	3
33	82-32-101-17	. . . RETAINER, (V94222).	5199	3
34	65-81131-8	. . . HOUSING ASSY.	5199	1
35	NAS603-10P	. . . SCREW	5199	1
36	AN960PD10L	. . . WASHER.	5199	2
37	MS35338-43	. . . WASHER.	5199	1
38	MS35650-305T	. . . NUT	5199	1
39	65-81130-27	. . . BODY.	5199	1
40	65-81130-28	. . . BACK.	5199	1
41	MS20001PY2-3550	. . . HINGE HALF.	5199	1
42	82-35-302-15	. . . RECEPTACLE, (V94222).	5199	3
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
6P		. . FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA . . .							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

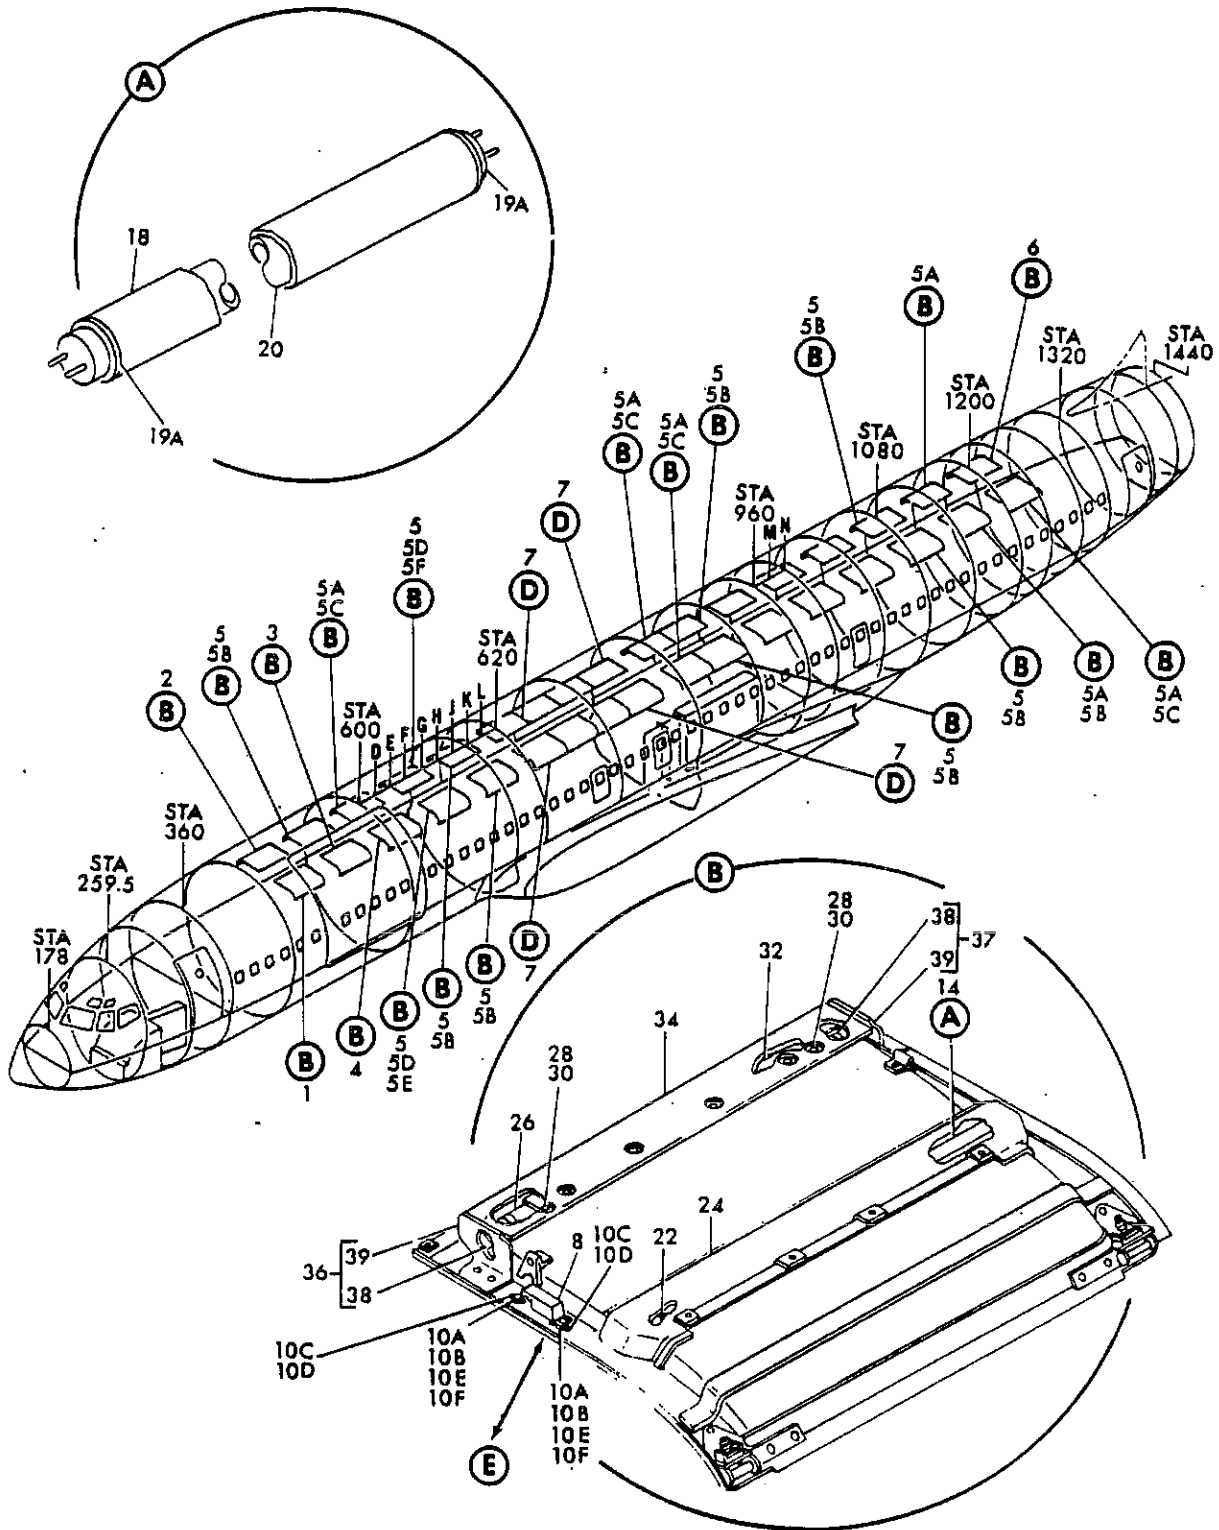


FIGURE 60. PANEL ASSY, CURVED CEILING SCULPTURED (LIGHTS ONLY) (SHEET 1)

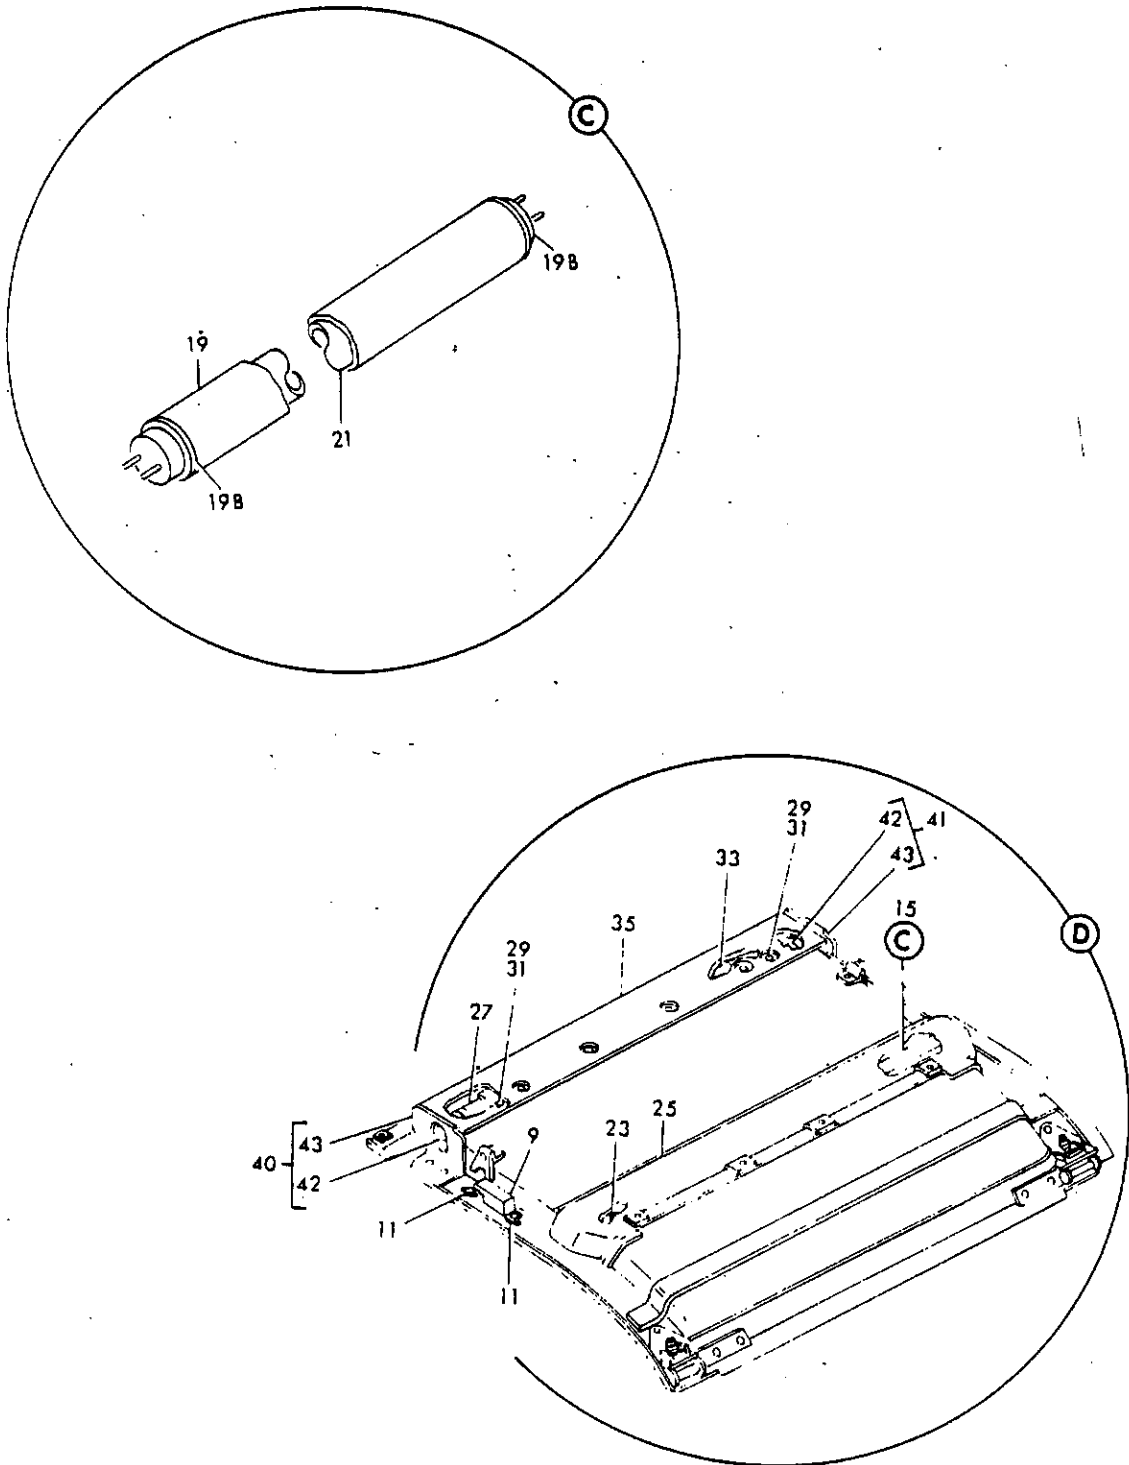


FIGURE 60. PANEL ASSY, CURVED CEILING SCULPTURED LIGHTS ONLY (SHEET 2)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
6Q 1	65-86690-88	PANEL ASSY, CURVED CEILING SCULPTURED (LIGHTS ONLY) . . (SEE 25-11, FIG. 201F, ITEM 67)	5199	RF
2	65-86690-128	PANEL ASSY, CURVED CEILING SCULPTURED (LIGHTS ONLY) . . (SEE 25-11, FIG. 201F, ITEM 68)	5199	RF
3	65-86690-98	PANEL ASSY, CURVED CEILING SCULPTURED (LIGHTS ONLY) . . (SEE 25-11, FIG. 201F, ITEM 69)	5199	RF
4	65-86690-118	PANEL ASSY, CURVED CEILING SCULPTURED (LIGHTS ONLY) . . (DELETED BY SVA REQUEST) (SEE 25-11, FIG. 201F, ITEM 70)	5199	RF
5B	65-86690-1A	PANEL ASSY, CURVED CEILING SCULPTURED (LIGHTS ONLY) . . (SEE 25-11, FIG. 201F, ITEM 71A)	5199	RF
5C	65-86690-1A	PANEL ASSY, CURVED CEILING SCULPTURED (LIGHTS ONLY) . . (DELETED BY SVA REQUEST) (SEE 25-11, FIG. 201F, ITEM 71B)	5199	RF
5D	65-86690-1A	PANEL ASSY, CURVED CEILING SCULPTURED (LIGHTS ONLY) . . (SEE 25-11, FIG. 201F, ITEM 70A)	5199	RF
6	65-86690-2A	PANEL ASSY, CURVED CEILING SCULPTURED (LIGHTS ONLY) . . (DELETED BY SVA REQUEST) (SEE 25-11, FIG. 201F, ITEM 71C)	5199	RF
8	10-61782-3	. BALLAST	5199	1
	BACS21AP100R	. ATTACHING PARTS	5199	2
		. STUD.	5199	1
14	69-62359-5	. LAMP ASSY	5199	1
18	NI120LGWUV1000	. . TUBE, (V06034) (TOGETHER WITH NI120EC8) (OPTIONALS NI120LGW OR LP1610-34 (V06034))	5199	1
18	NI120LGW	. . TUBE, (V06034) (TOGETHER WITH NI120EC8) (OPTIONAL TO NI120LGWUV1000 OR LP1610-34 (V06034))	5199	1
18	LP1610-34	. . TUBE, (V06034) (TOGETHER WITH 2055132) (OPTIONAL TO NI120LGWUV1000 OR NI120LGW (V06034))	5199	1
19A	NI120EC8	. . END CAP, (V06034) (TOGETHER WITH NI120LGWUV1000 . . OR NI120LGW) (OPTIONAL TO 2055132 (V06034))	5199	2
19A	2055132	. . END CAP, (V06034) (TOGETHER WITH LP1610-34) (OPTIONAL NI120EC8 (V06034))	5199	2
20	F30T8WW	. . LAMP, (V08805)	5199	1
22	757	. . LAMP, (V08806)	5199	1
	NAS602-3P	. ATTACHING PARTS	5199	12
	AN960PDB	. SCREW	5199	12
		. WASHER.	5199	12
26	F30T8WW	. LAMP, (V08805)	5199	1
28	NAS602-5P	. SCREW	5199	6
30	AN960PDB	. WASHER.	5199	6
32	65-86978-1	. LENS, LIGHT HOUSING	5199	1
34	65-86980-1	. HOUSING ASSY, LIGHT	5199	1
36	69-65416-2	. END CAP ASSY, LIGHT HOUSING	5199	1
37	69-65416-1	. END CAP ASSY, LIGHT HOUSING	5199	1
	NAS602-5P	. ATTACHING PARTS	5199	4
	AN960PDB	. SCREW	5199	4
		. WASHER.	5199	4
38	395-500SAN486	. . SOCKET, (V75582) (USED ON 69-65416-2) (OPTIONAL 69-65416-5 (ALTERED FROM;100589-004 (V17744))	5199	1
38	69-65416-5	. . SOCKET, (ALTERED FROM 100589-004 (V17744)) (USED ON 69-65416-2) (OPTIONAL TO 395-500SAN486 (V75582))	5199	1
38	395-500SAN487	. . SOCKET, (V75582) (USED ON 69-65416-1) (OPTIONAL 69-65416-6 (ALTERED FROM;100589-005 (V17744))	5199	1
38	69-65416-6	. . SOCKET, (ALTERED FROM 100589-005 (V17744)) (USED ON 69-65416-1) (OPTIONAL TO 395-500SAN487 (V75582))	5199	1
	3351-13	. ATTACHING PARTS	5199	2
	MS35338-40	. . SCREW, (V75582)	5199	2
	AN960-4T	. . WASHER.	5199	2
		. . WASHER.	5199	2
39	69-65416-4	. . END CAP, (USED ON 69-65416-2)	5199	1
39	69-65416-3	. . END CAP, (USED ON 69-65416-1)	5199	1
		. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	5199	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

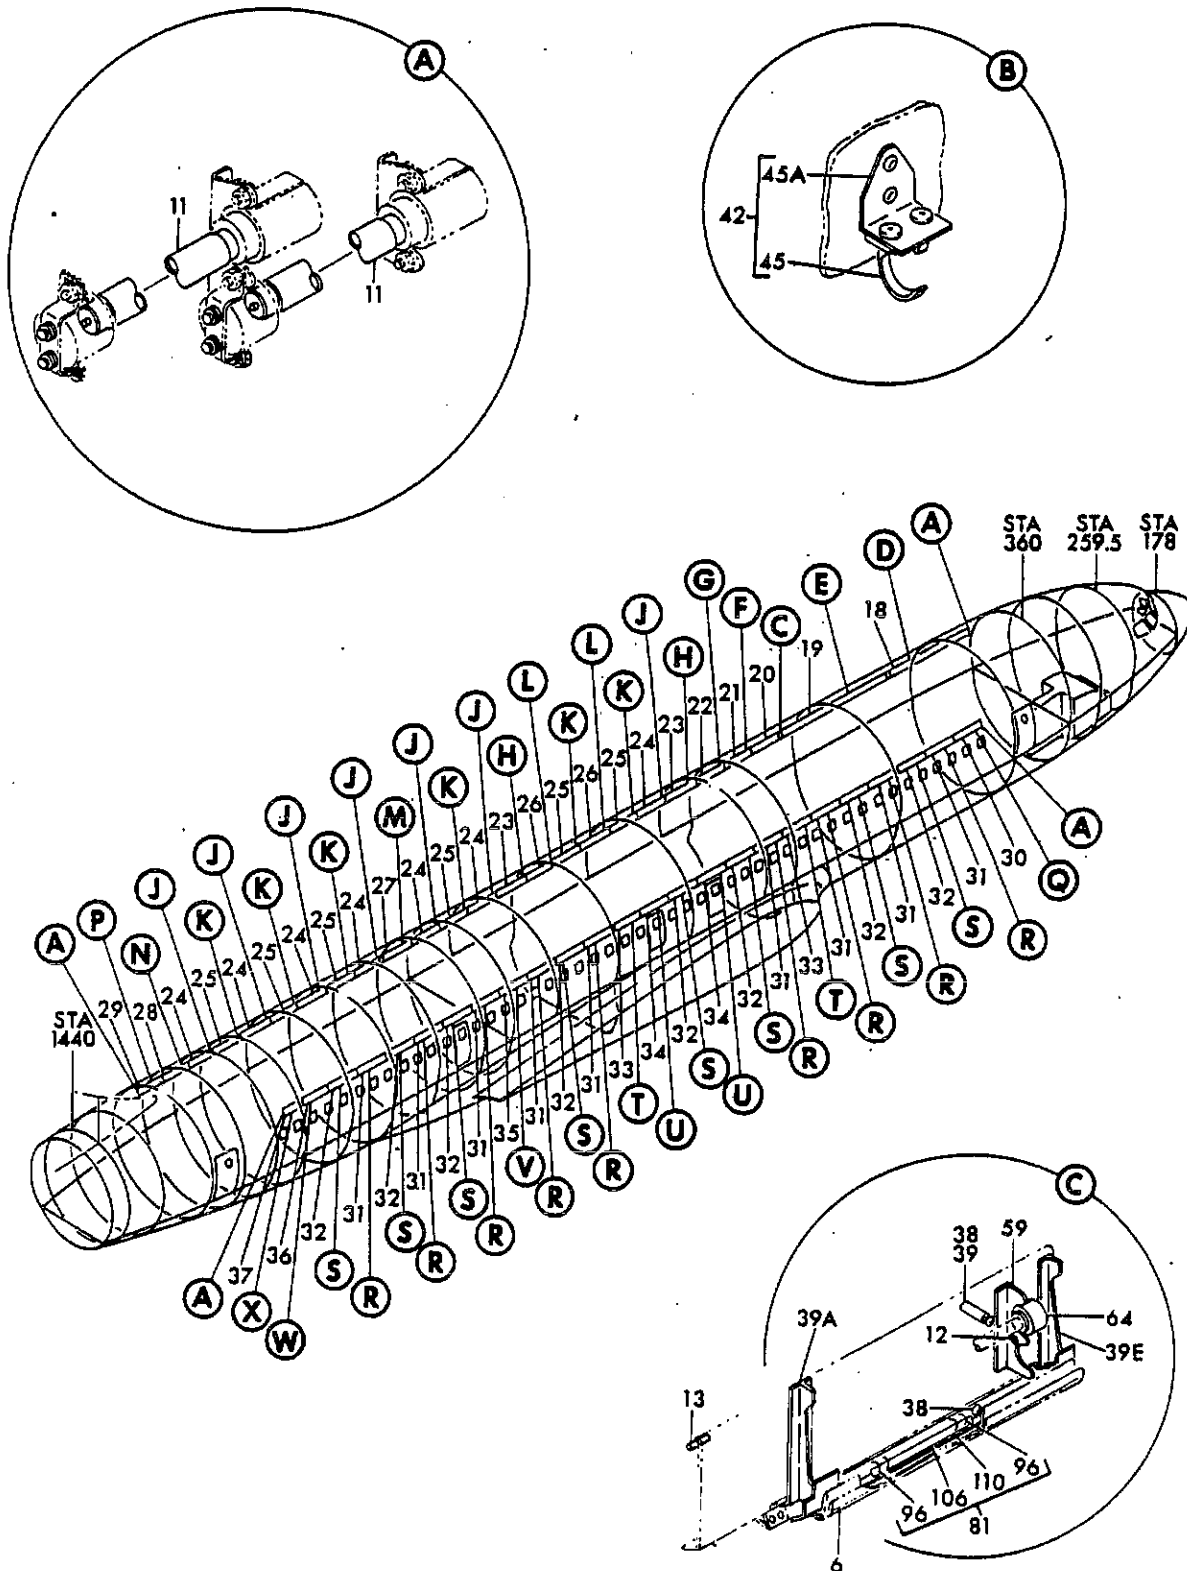


FIGURE 18D. COVE INSTL, PASSENGER CABIN (LIGHTS ONLY) (SHEET 1)

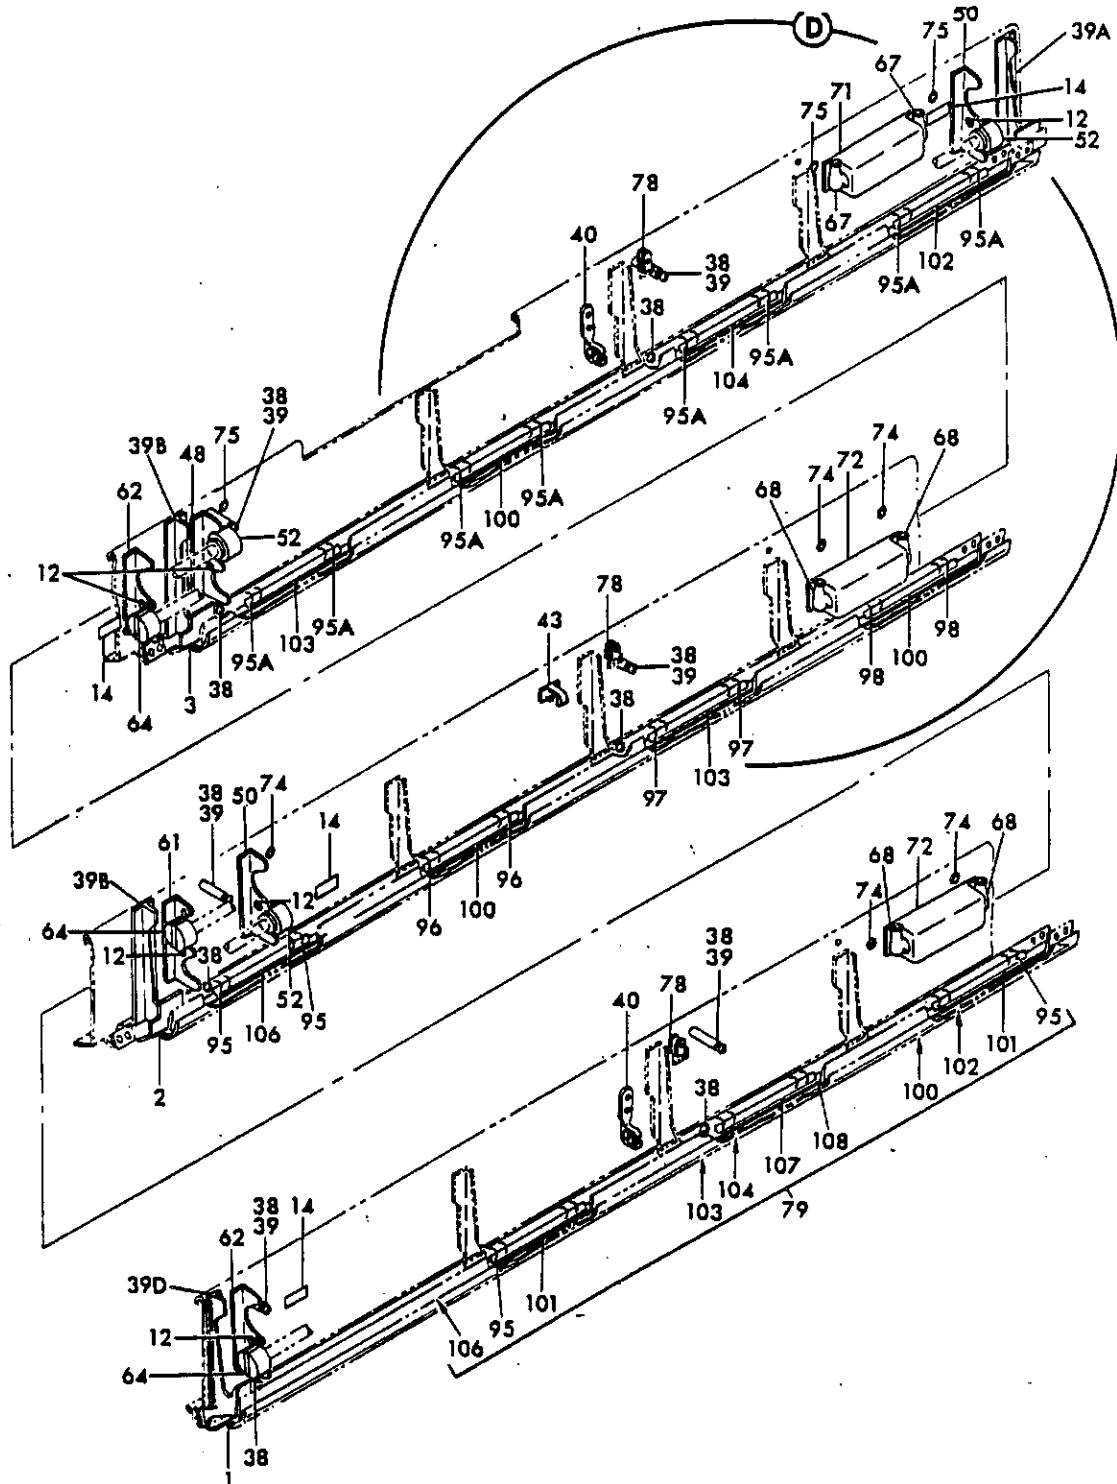


FIGURE 18D. COVE INSTL, PASSENGER CABIN (LIGHTS ONLY) (SHEET 2)

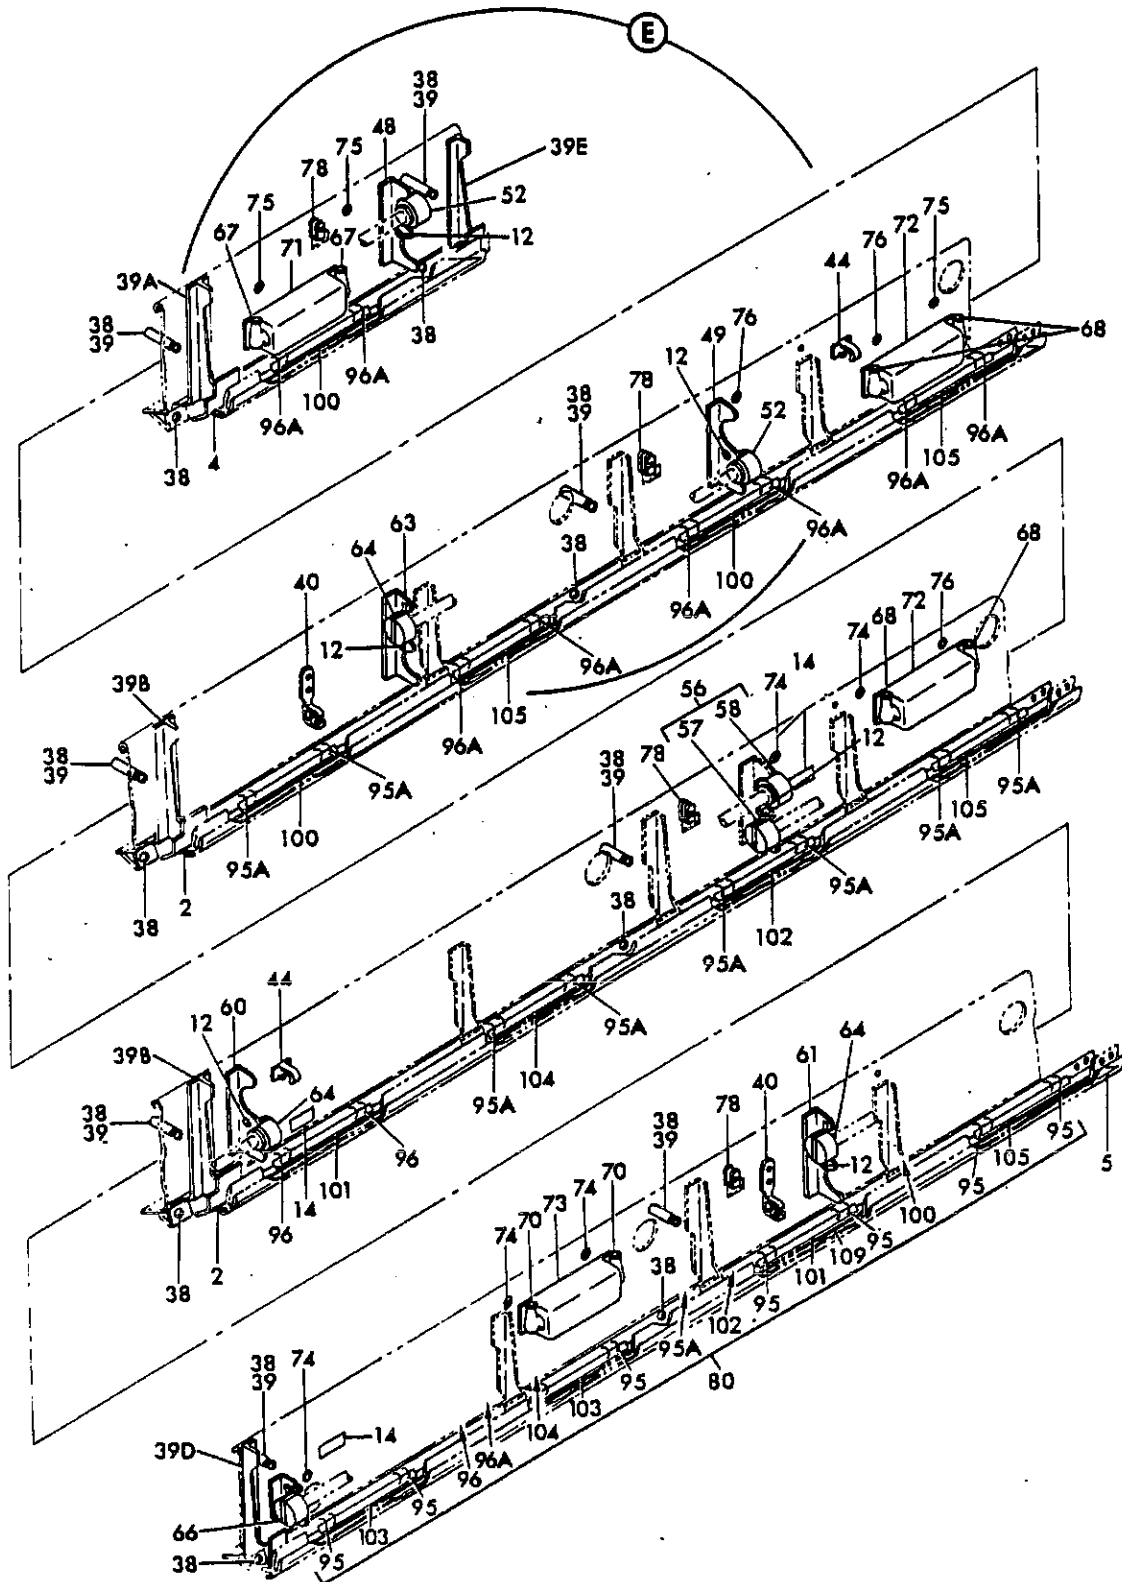


FIGURE 18D. COVE INSTL, PASSENGER CABIN (LIGHTS ONLY) (SHEET 3)

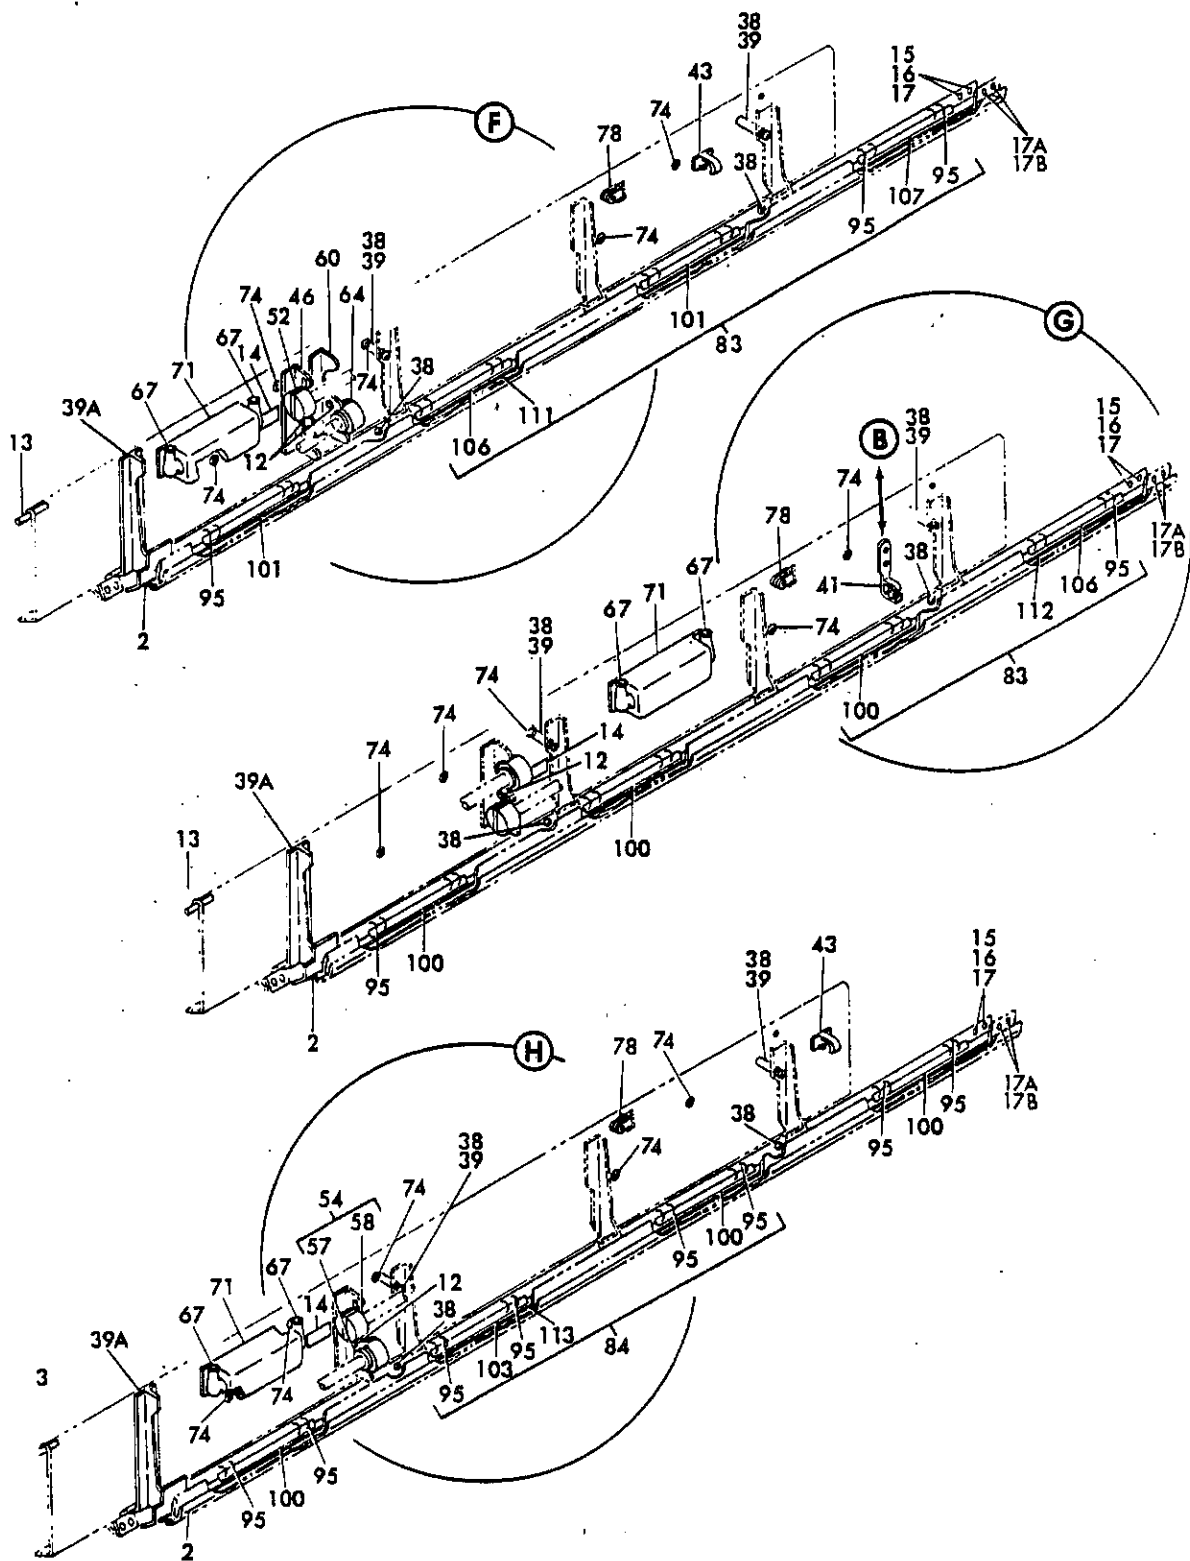


FIGURE 18D. COVE INSTL, PASSENGER CABIN (LIGHTS ONLY) (SHEET 4)

NOV 21/90

33-04-100

DETAILED PARTS LIST
33-04-18D
PAGE 3

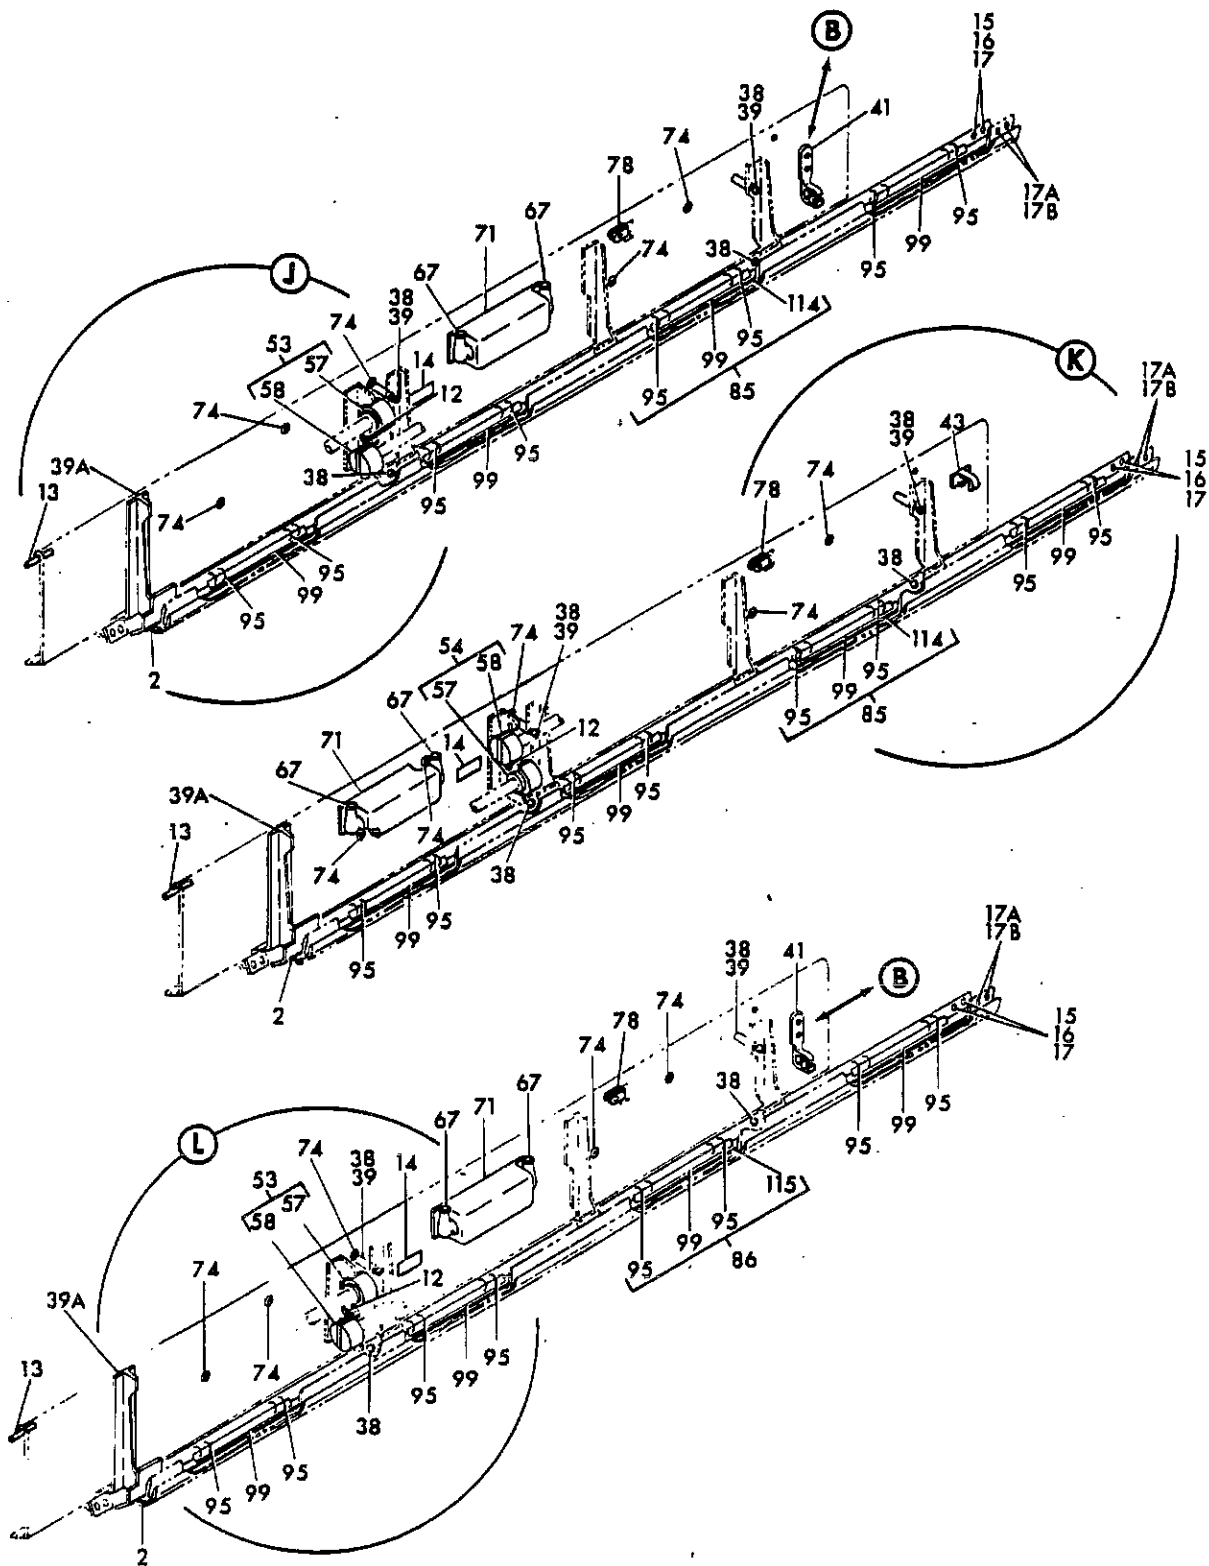


FIGURE 18D. COVE INSTL, PASSENGER CABIN (LIGHTS ONLY) (SHEET 5)


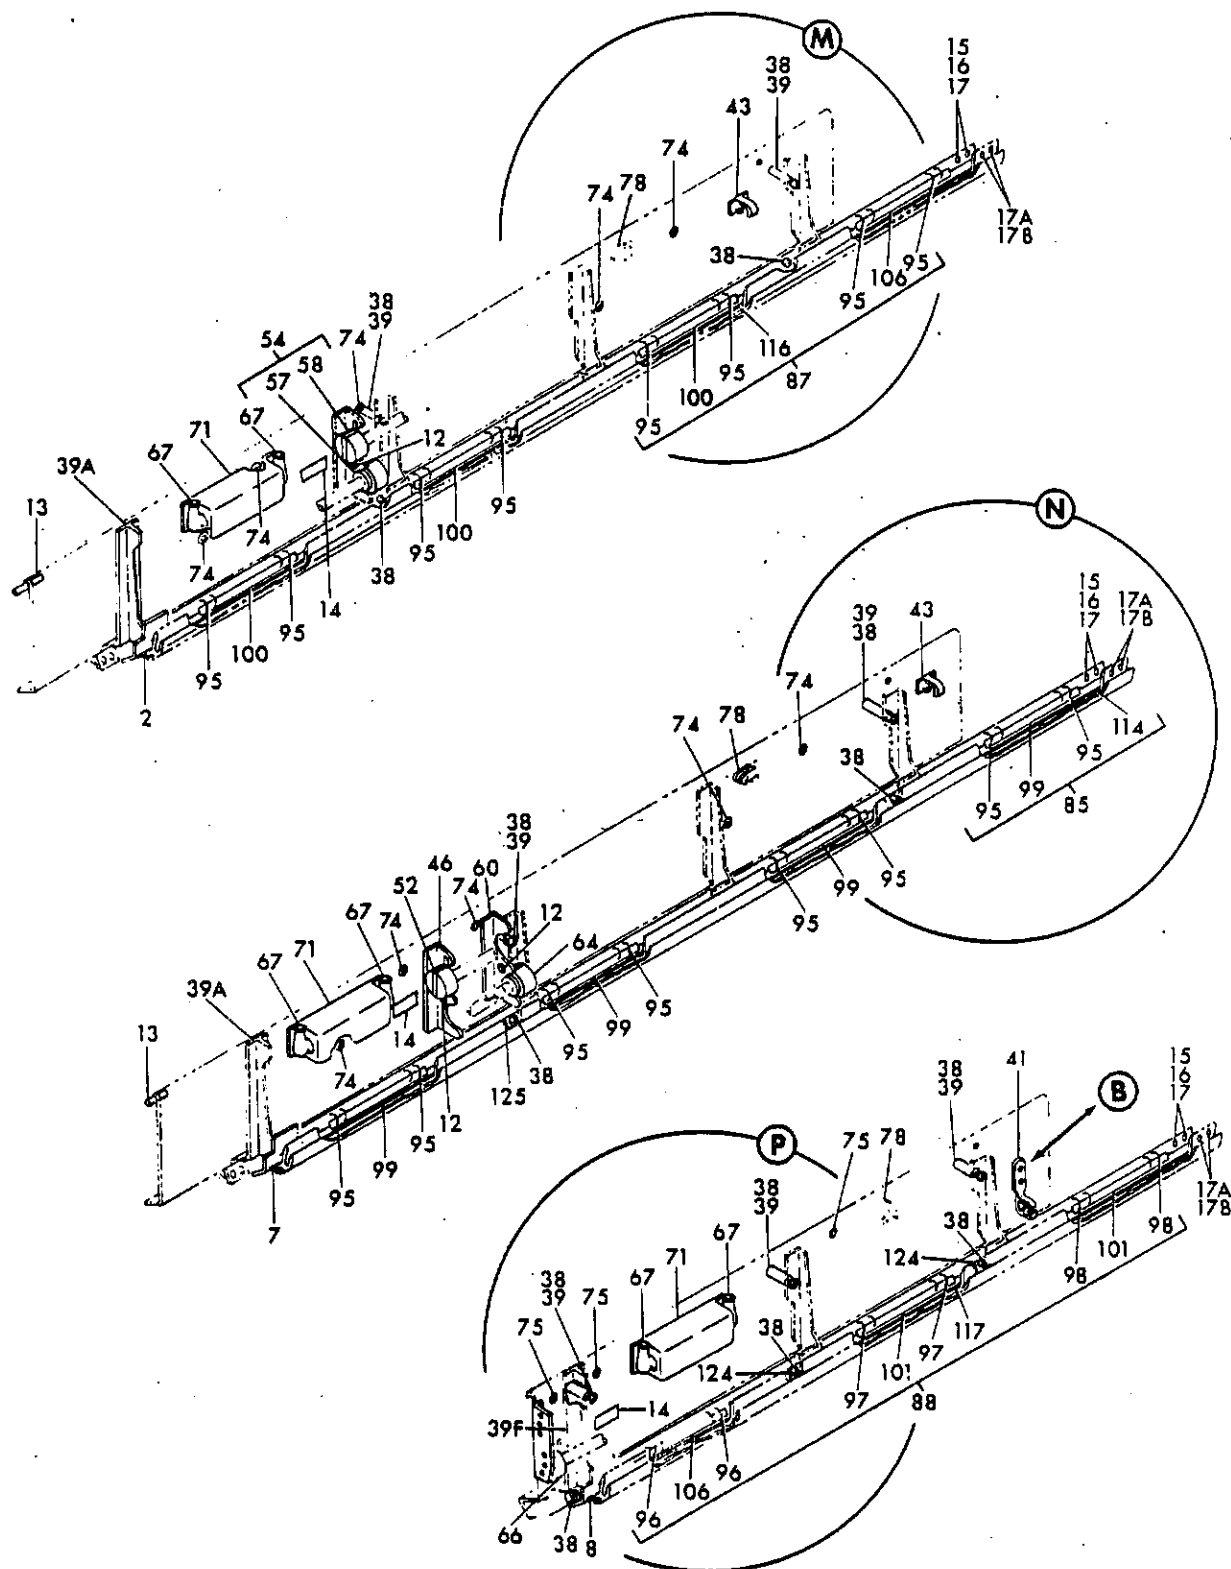


FIGURE 18D. COVE INSTL, PASSENGER CABIN (LIGHTS ONLY) (SHEET 6)

NOV 21/90

33-04-100

DETAILED PARTS LIST
33-04-180
PAGE 5

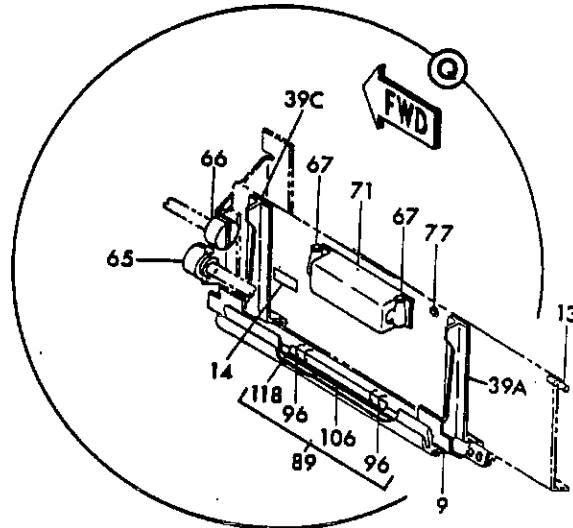

33-04-100





PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
180	65-63959-5	COVE INSTL, PASSENGER CABIN (LIGHTS ONLY) (SEE 25-1, . . . FIG. 23D, ITEM 8)	0150	RF
1	65-7038-151	. LENS, STATION 361.64 TO 401.57.	0150	1
2	65-7038-101	. LENS, STANDARD SECTION.	0150	46
3	65-7038-156	. LENS, STATION 441.53 TO 478.45.	0150	1
4	65-7038-157	. LENS, STATION 484.37 TO 496.82.	0150	1
5	65-7038-158	. LENS, STATION 576.82 TO 600 PLUS 15.60.	0150	1
6	65-7038-159	. LENS, STATION 600D PLUS .60 TO 600D PLUS 15.45.	0150	1
7	65-7038-102	. LENS, STATION 1230.45 TO 1270.45.	0150	1
8	65-7038-135	. LENS, STATION 1270.45 TO 1299.75.	0150	1
9	65-7038-154	. LENS, STATION 499.50 TO 510.45.	0150	1
10	65-7038-142	. LENS, STATION 1230.45 TO 1253.75 RH.	0150	1
11	F42T6WW	. LAMP, FLUORESCENT (V24455). (OPTIONAL F42T6AWW (V58854))	0150	55
11	F42T6AWW	. LAMP, FLUORESCENT (V58854). (OPTIONAL TO F42T6WW (V24455))	0150	55
12	MS35489-4	. GROMMET	0150	61
13	MS16562-50	. PIN	0150	AR
14	BACM10WZACS	. MARKER-ALUMINUM FOIL, WARNING DO NOT REMOVE COVE. LIGHT TUBES WITH POWER ON	0150	54
15	NAS601-5	. SCREW	0150	92
16	AN960D6L	. WASHER.	0150	92
17	NAS679A06W	. NUT	0150	92
17A	NAS514P632-5	. SCREW	0150	92
17B	NAS679A06W	. NUT	0150	92
18	65-51804-11A	. RACEWAY ASSY, FORWARD LOUNGE.	0150	1
19	65-51804-15A	. RACEWAY ASSY, CARGO DOOR.	0150	1
20	65-18270-425A	. RACEWAY ASSY, STATION 600D PLUS .60 TO 600D PLUS. 10.45 LH	0150	1
21	65-18270-294A	. RACEWAY ASSY, STATION 600D PLUS 15.45 TO 600F PLUS. 15.45 LH	0150	1
22	65-18270-324A	. RACEWAY ASSY, STATION 600F PLUS 15.45 TO 600H PLUS. 15.45 LH	0150	1
23	65-18270-208A	. RACEWAY ASSY, PRODUCTION BREAK.	0150	2
24	65-18270-202A	. RACEWAY ASSY, STANDARD SECTION.	0150	7
25	65-18270-200A	. RACEWAY ASSY, STANDARD SECTION.	0150	6
26	65-18270-204A	. RACEWAY ASSY, EMERGENCY EXIT.	0150	2
27	65-18270-226A	. RACEWAY ASSY, 960 PRODUCTION BREAK.	0150	1
28	65-18270-376	. RACEWAY ASSY, 1235.45 TO 1275.45 LH.	0150	1
29	65-18270-375	. RACEWAY ASSY, 1275.45 TO 1297.50 LH.	0150	1
30	65-18270-419	. RACEWAY ASSY, 499.5 TO 510.45 RH.	0150	1
31	65-18270-203A	. RACEWAY ASSY, STANDARD SECTION.	0150	9
32	65-18270-201A	. RACEWAY ASSY, STANDARD SECTION.	0150	8
33	65-18270-209A	. RACEWAY ASSY, PRODUCTION BREAK.	0150	2
34	65-18270-205A	. RACEWAY ASSY, EMERGENCY EXIT.	0150	2
35	65-18270-227A	. RACEWAY ASSY, 960 PRODUCTION BREAK.	0150	1
36	65-18270-370A	. RACEWAY ASSY, 1195.45 TO 1235.45 RH.	0150	1
37	65-18270-369A	. RACEWAY ASSY, 1235.45 TO 1253.75 RH. ATTACHING PARTS	0150	1
38	NAS603-8	. SCREW	0150	AR
39	66-8788	. SLEEVE.	0150	AR
39A	65-7039-10	. . . BRACKET ASSY, LENS JOINT SUPPORT (NOT USED ON . . . 65-18270-375 AND -369A)	0150	1
39A	65-7039-4	. . . BRACKET	0150	1
39B	65-7039-10	. . . BRACKET ASSY, LENS JOINT SUPPORT (USED ON . . . 65-51804-11A AND -15A)	0150	2
39B	65-7039-4	. . . BRACKET	0150	1
39C	65-7039-10	. . . BRACKET ASSY, LENS JOINT SUPPORT (USED ON . . . 65-18270-419)	0150	1
39C	65-7039-4	. . . BRACKET	0150	1
39D	65-7039-18	. . . BRACKET ASSY, LENS JOINT SUPPORT (USED ON . . . 65-51804-11A AND -15A)	0150	1
39D	65-7039-14	. . . BRACKET	0150	1
39E	65-7039-19	. . . BRACKET ASSY, LENS JOINT SUPPORT (USED ON . . . (65-51804-15A AND 65-18270-425A)	0150	1
39E	65-7039-15	. . . BRACKET	0150	1
39F	65-7039-2	. . . BRACKET ASSY, LENS JOINT SUPPORT (USED ON . . . (65-18270-375)	0150	1
39F	65-7039-4	. . . BRACKET	0150	1
40	66-23451-1	. . . SUPPORT ASSY, LAMP CENTER (USED ON 65-51804-11A AND -15A)	0150	2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE				EFF FROM TO	UNITS PER ASSY			
			1	2	3	4	5	6	7		
R	18D	NAS679A06W	. . . NUT							0150	3
			-----*								
R	59	65-18266-9	. . . SUPPORT ASSY, SOCKET (USED ON 65-18270-425A) . . .							0150	1
R	60	65-18266-11	. . . SUPPORT ASSY, SOCKET (USED ON 65-51804-15A, . . .							0150	1
R			65-18270-294A AND -376)								
R	61	65-18266-10	. . . SUPPORT ASSY, SOCKET (USED ON 65-51804-11A AND . . .							0150	1
R			-15A)								
R	62	65-18266-12	. . . SUPPORT ASSY, SOCKET (USED ON 65-51804-11A) . . .							0150	2
R	63	65-18266-32	. . . SUPPORT ASSY, SOCKET (USED ON 65-51804-15A) . . .							0150	1
			ATTACHING PARTS								
R		MS2047084	. . . RIVET							0150	2
			-----*								
R	64	ALF472-101	. . . SOCKET, LOW VOLTAGE (V04314)							0150	1
			ATTACHING PARTS								
R		NAS601-5	. . . SCREW							0150	2
R		NAS679A06W	. . . NUT							0150	2
			-----*								
R	65	ALF472-101	. . . SOCKET, LOW VOLTAGE (V04314) (USED ON 65-18270-419							0150	1
R			AND -369A)								
R	66	ALF473-101	. . . SOCKET, HIGH VOLTAGE (V24453) (USED ON							0150	1
R			65-51804 -15A, 65-18270-375 AND -419)								
			ATTACHING PARTS								
R		NAS514P632-4	. . . SCREW, (USED WITH 65-18270-375)							0150	2
R		NAS601-5	. . . SCREW, (USED WITH 65-18270-369A)							0150	2
R		NAS601-4P	. . . SCREW, (USED WITH 65-51804-15A)							0150	2
R		NAS601-5P	. . . SCREW, (USED WITH 65-18270-419)							0150	1
R		NAS601-6P	. . . SCREW, (USED WITH 65-18270-419)							0150	1
R		NAS601-7P	. . . SCREW, (USED WITH 65-18270-419)							0150	1
R		NAS679A06W	. . . NUT							0150	2
			-----*								
R	67	MS25171-1S	. . . NIPPLE, (NOT USED ON 65-18270-425A AND -369A) . . .							0150	2
R	68	MS25171-1S	. . . NIPPLE, (USED ON 65-18270-370A, 65-51804-11A AND . .							0150	4
R			-15A)								
R	70	MS25171-1S	. . . NIPPLE, (USED ON 65-51804-15A)							0150	2
R	71	62-37	. . . BALLAST, (V82255) (NOT USED ON 65-18270-425A AND . .							0150	1
R			-369A)								
R	72	62-37	. . . BALLAST, (V82255) (USED ON 65-18270-370A, ...							0150	2
R			65-51804-11A AND -15A)								
R	73	62-37	. . . BALLAST, (V82255) (USED ON 65-51804-15A)							0150	1
			ATTACHING PARTS								
R		NAS514P632-7	. . . SCREW							0150	2
R		MS35338-3	. . . WASHER							0150	4
R		MS25082-1	. . . NUT							0150	2
R		MS20341-6	. . . NUT							0150	2
			-----*								
R	74	BACG20C8	. . . GROMMET, (NOT USED ON 65-18270-425A, -419, -369A . .							0150	5
R			AND -375)								
R	75	BACG20C8	. . . GROMMET, (USED ON 65-51804-11A, -15A AND							0150	3
R			65-18270-375A)								
R	76	BACG20C8	. . . GROMMET, (USED ON 65-51804-15A)							0150	3
R	77	BACG20C8	. . . GROMMET, (USED ON 65-18270-419 AND -369A)							0150	1
R	78	BACN10FX1	. . . NUT							0150	AR
R	79	65-32217-15	. . . SUPPORT ASSY, OUTBOARD EXTRUSION (USED ON							0150	1
R			65-51804-11A)								
R	80	65-32217-18	. . . SUPPORT ASSY, OUTBOARD EXTRUSION (USED ON							0150	1
R			65-51804-15A)								
R	81	65-8926-242	. . . SUPPORT ASSY, OUTBOARD EXTRUSION (USED ON							0150	1
R			65-18270-425A)								
R	82	65-8926-214	. . . SUPPORT ASSY, OUTBOARD EXTRUSION (USED ON							0150	1
R			65-18270-294A)								
R	83	65-8926-216	. . . SUPPORT ASSY, OUTBOARD EXTRUSION (USED ON							0150	1
R			65-18270-324A)								
R	84	65-8926-5	. . . SUPPORT ASSY, OUTBOARD EXTRUSION (USED ON							0150	1
R			65-18270-208A)								
R	85	65-8926-1	. . . SUPPORT ASSY, OUTBOARD EXTRUSION (USED ON							0150	1
R			65-18270-202A, -200A AND -376)								
R	86	65-8926-3	. . . SUPPORT ASSY, OUTBOARD EXTRUSION (USED ON							0150	1
R			65-18270-204A)								
R	87	65-8926-45	. . . SUPPORT ASSY, OUTBOARD EXTRUSION (USED ON							0150	1
R			65-18270-226A)								
R	88	65-8926-59	. . . SUPPORT ASSY, OUTBOARD EXTRUSION (USED ON							0150	1
R			65-18270-375)								
R	89	65-8926-238	. . . SUPPORT ASSY, OUTBOARD EXTRUSION (USED ON							0150	1
R			65-18270-419)								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

BOEING *707*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 180 90	65-8926-2		. . SUPPORT ASSY, OUTBOARD EXTRUSION (USED ON 65-18270-203A, -201A AND -370A)	0150	1
R 91	65-8926-6		. . SUPPORT ASSY, OUTBOARD EXTRUSION (USED ON 65-18270-209A)	0150	1
R 92	65-8926-4		. . SUPPORT ASSY, OUTBOARD EXTRUSION (USED ON 65-18270-205A)	0150	1
R 93	65-8926-46		. . SUPPORT ASSY, OUTBOARD EXTRUSION (USED ON 65-18270-227A)	0150	1
R 94	65-8926-224		. . SUPPORT ASSY, OUTBOARD EXTRUSION (USED ON 65-18270-369A)	0150	1
R 95	66-4991		. . . SPRING, (NOT USED ON 65-8926-242, -59, -238 AND -224)	0150	8
R 95A	66-4991		. . . SPRING, (USED ON 65-32217-15 AND -18)	0150	8
R 96	66-4991		. . . SPRING, (USED ON 65-32217-15, -18, 65-8926-242, -59, -238 AND -224)	0150	2
R 96A	66-4991		. . . SPRING, (USED ON 65-32217-18)	0150	8
R 97	66-4991		. . . SPRING, (USED ON 65-32217-15, 65-8926-59 AND -224)	0150	2
R 98	66-4991		. . . SPRING, (USED ON 65-32217-15 AND 65-8926-59)	0150	2
R 99	66-4986		. . . BAR, (USED ON 65-32217-15, -18, 65-8926-1, -3 AND -2)	0150	4
R 100	66-4986		. . . BAR, (USED ON 65-8926-216, -5, -45, -6, -4 AND -46)	0150	3
R 101	66-4986		. . . BAR, (USED ON 65-32217-15, -18, 65-8926-214, -59 AND -224)	0150	2
R 102	66-4986		. . . BAR, (USED ON 65-8926-238)	0150	1
R 103	66-4986-1		. . . BAR, (USED ON 65-32217-15 AND -18)	0150	2
R 104	66-4986-1		. . . BAR, (USED ON 65-32217-15, -18, 65-8926-5, -59, -6 AND -4)	0150	1
R 105	66-4986-1		. . . BAR, (USED ON 65-32217-18)	0150	4
R 106	66-4986-2		. . . BAR, (USED ON 65-32217-15, 65-8926-242, -214, -216, -45, -59, -238 AND -46)	0150	1
R 107	66-4986-2		. . . BAR, (USED ON 65-32217-15 AND 65-8926-214)	0150	1
R 108	65-32217-17		. . . EXTRUSION, (USED ON 65-32217-15)	0150	1
R 109	65-32217-19		. . . EXTRUSION, (USED ON 65-32217-18)	0150	1
R 110	65-8926-243		. . . EXTRUSION, (USED ON 65-8926-242)	0150	1
R 111	65-8926-215		. . . EXTRUSION, (USED ON 65-8926-214)	0150	1
R 112	65-8926-217		. . . EXTRUSION, (USED ON 65-8926-216)	0150	1
R 113	65-8926-27		. . . EXTRUSION, (USED ON 65-8926-5)	0150	1
R 114	65-8926-23		. . . EXTRUSION, (USED ON 65-8926-1)	0150	1
R 115	65-8926-25		. . . EXTRUSION, (USED ON 65-8926-3)	0150	1
R 116	65-8926-47		. . . EXTRUSION, (USED ON 65-8926-45)	0150	1
R 117	65-8926-65		. . . EXTRUSION, (USED ON 65-8926-59)	0150	1
R 118	65-8926-239		. . . EXTRUSION, (USED ON 65-8926-238)	0150	1
R 119	65-8926-24		. . . EXTRUSION, (USED ON 65-8926-2)	0150	1
R 120	65-8926-28		. . . EXTRUSION, (USED ON 65-8926-6)	0150	1
R 121	65-8926-26		. . . EXTRUSION, (USED ON 65-8926-4)	0150	1
R 122	65-8926-48		. . . EXTRUSION, (USED ON 65-8926-46)	0150	1
R 123	65-8926-225		. . . EXTRUSION, (USED ON 65-8926-224)	0150	1
R 124	69-3759-5		. . SHIM, (USED ON 65-18270-375)	0150	2
R 125	69-3759-5		. . SHIM, (USED ON 65-18270-376)	0150	1
R			. FOR REFERENCE TO OTHER COVE DETAILS, SEE NHA.	0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

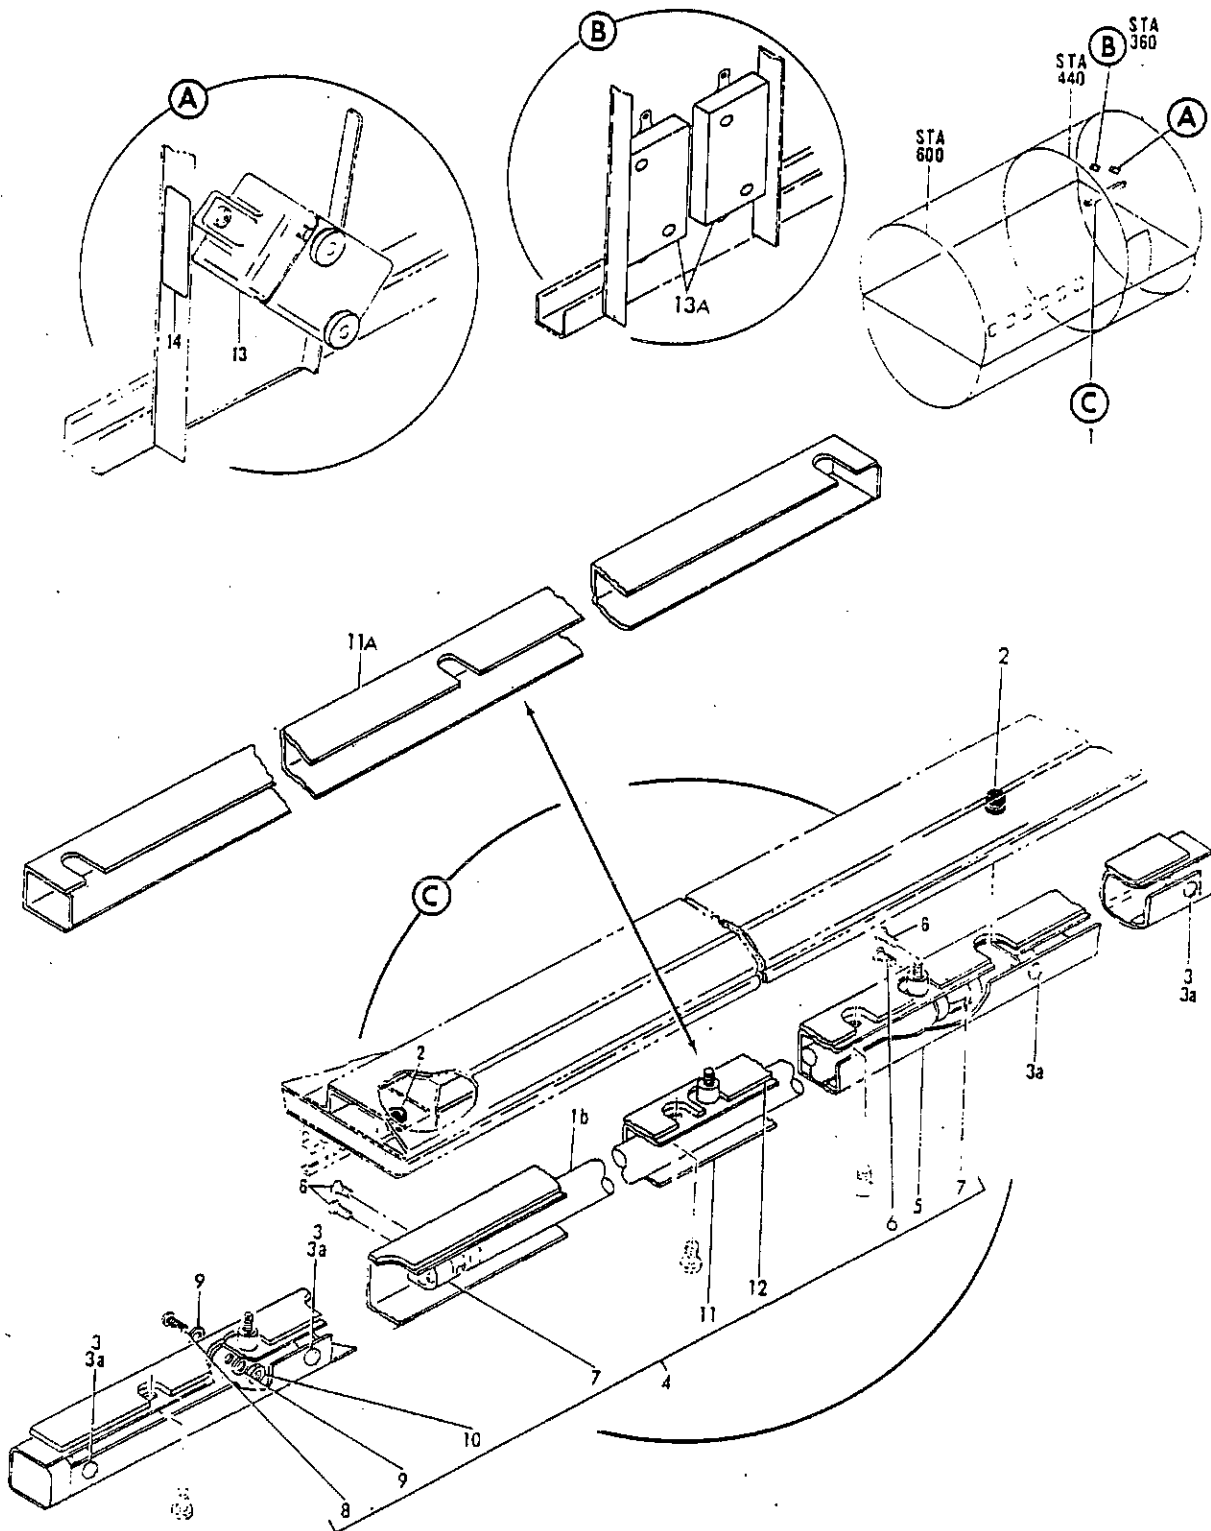


FIGURE 22. LIGHT INSTL, FORWARD GALLEY FLOURESCENT

MISSING ITEM NUMBERS ARE NOT APPLICABLE

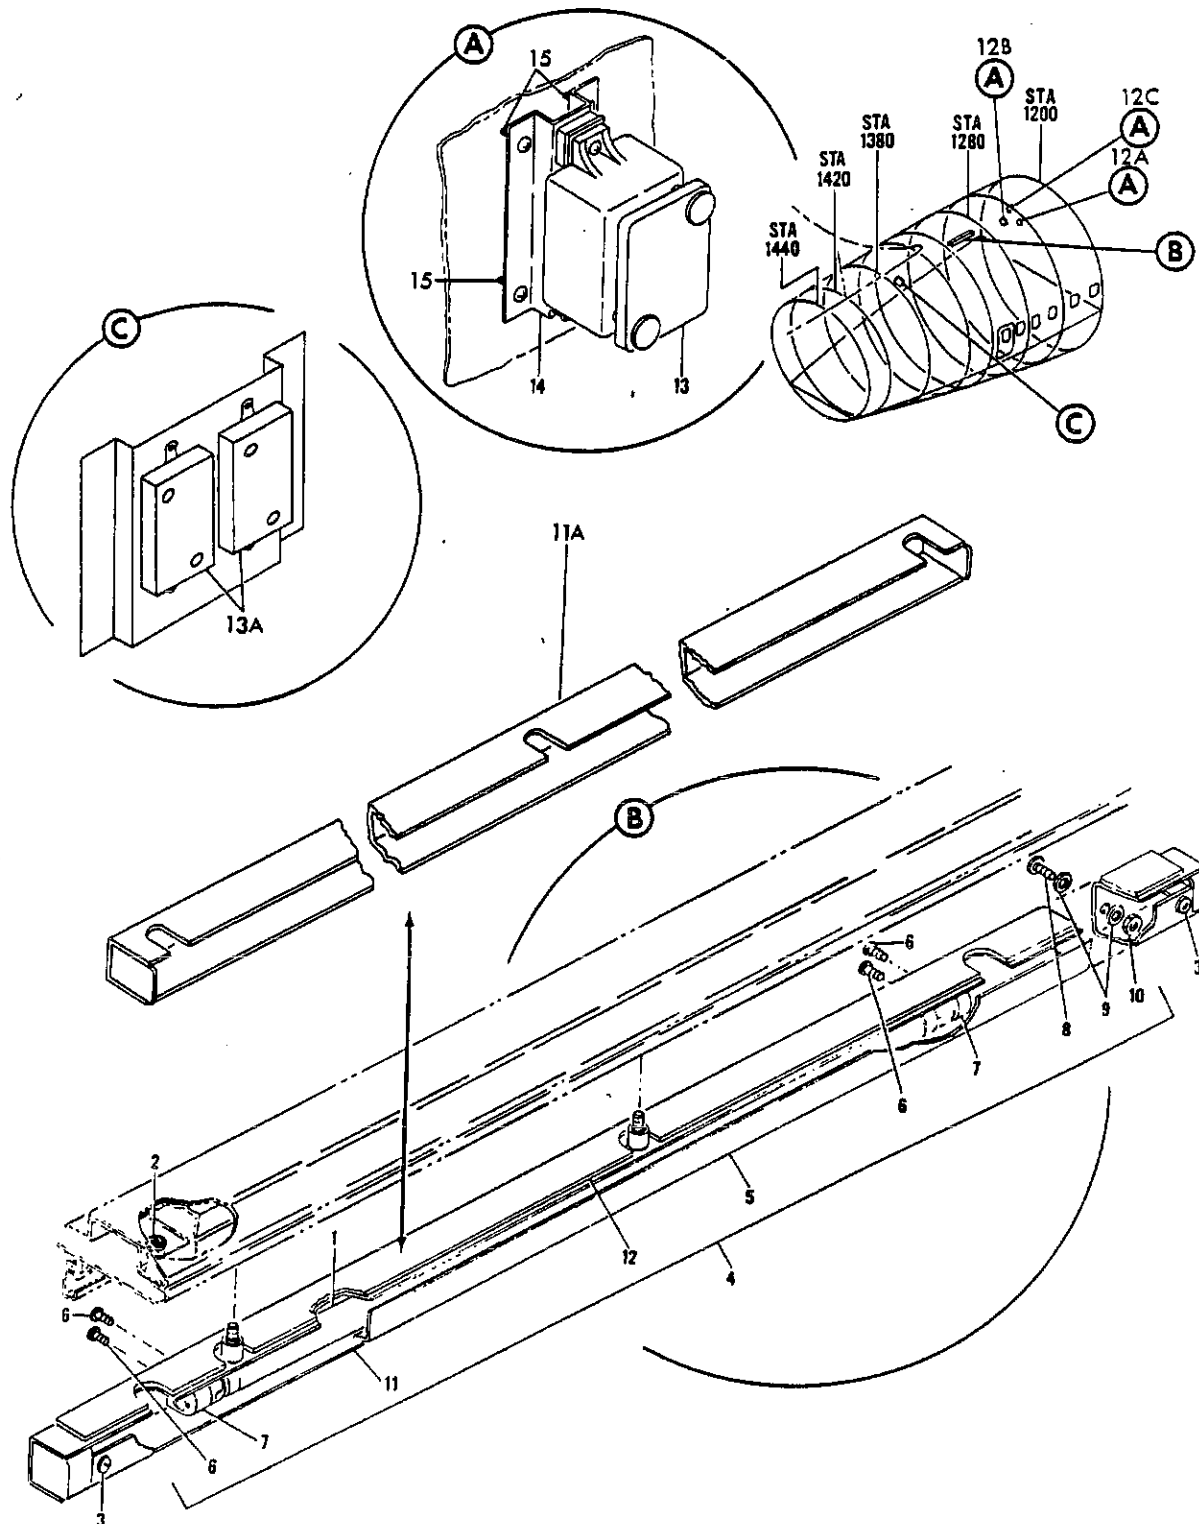


FIGURE 24. COMPARTMENT ASSY, AFT GALLEY ESCAPE SLIDE (LIGHTS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R	24	65-31217-44A	0150	RF
		25-1, FIG. 127, ITEM 12)		
		65-85728-23B	5199	RF
		(SEE 25-11, FIG. 201F, ITEM 66)		
		65-28071-147		1
	1	FA13T5WW		1
	2	NAS1368N3D		1
	3	AN525-10R6		2
	4	65-28071-42		1
		.. LIGHT INSTL, AFT GALLEY FLUORESCENT ..		
		.. BULB, FLUORESCENT (V58854) ..		
		.. GROMMET ..		
		.. SCREW ..		
		.. LIGHT ASSY, AFT GALLEY FLUORESCENT ..		
		ATTACHING PARTS		
		.. SCREW ..		2
		-----*		
	5	65-28071-54		1
		.. SHIELD, AFT GALLEY TRANSLUCENT PLASTIC ..		
		FLUORESCENT LIGHT		
	6	NAS601-3		4
	7	560		2
	8	NAS428-3-4		1
	9	AN960D10L		2
	10	MS20341-10		1
	11	65-28071-52		1
	12	65-28071-53		1
	12A	65-28071-144		1
	13	61-38-1		1
		.. BALLAST ASSY, HI-LO 13 WATT FLUORESCENT LAMP ..		
		(V82255)		
		(OPTIONALS 58-59 (V82255) 27883 (V58854)		
		563213 (V98571))		
	13	58-59		1
		.. BALLAST ASSY, HI-LO 13 WATT FLUORESCENT LAMP ..		
		(V82255)		
		(OPTIONAL TO 61-38-1 (V82255))		
	13	27883		1
		.. BALLAST ASSY, HI-LO 13 WATT FLUORESCENT LAMP ..		
		(V88204)		
		(OPTIONAL TO 61-38-1 (V82255))		
	13	563213		1
		.. BALLAST ASSY, HI-LO 13 WATT FLUORESCENT LAMP ..		
		(V98571)		
		(OPTIONAL TO 61-38-1 (V82255))		
		ATTACHING PARTS		
		.. SCREW ..		2
		.. FILLER, AFT GALLEY FLUORESCENT LIGHT BALLAST ..		2
		.. WASHER ..		2
		-----*		
	14	65-28071-145		1
		.. BRACKET ASSY, AFT GALLEY FLUORESCENT LIGHT ..		
		BALLAST		
		ATTACHING PARTS		
		.. SCREW ..		4
		-----*		
		.. FOR REFERENCE TO OTHER COMPARTMENT DETAILS, SEE NHA ..		

MISSING ITEM NUMBERS ARE NOT APPLICABLE


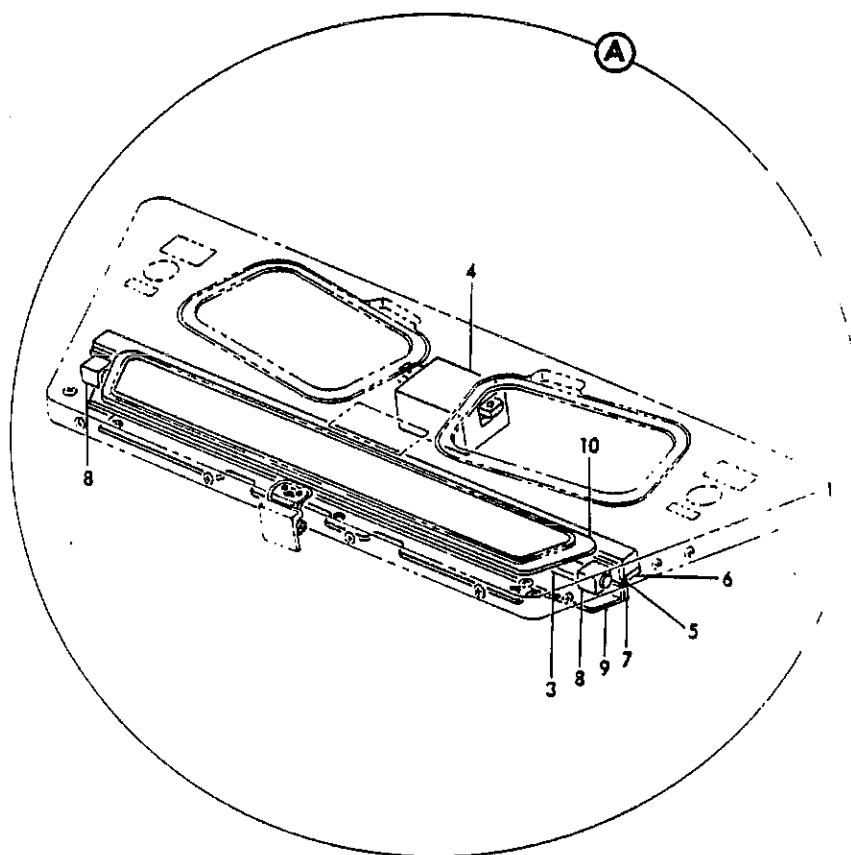


FIGURE 27. PANEL ASSY, DRY SHAVE STATION FACE (LIGHTS ONLY)

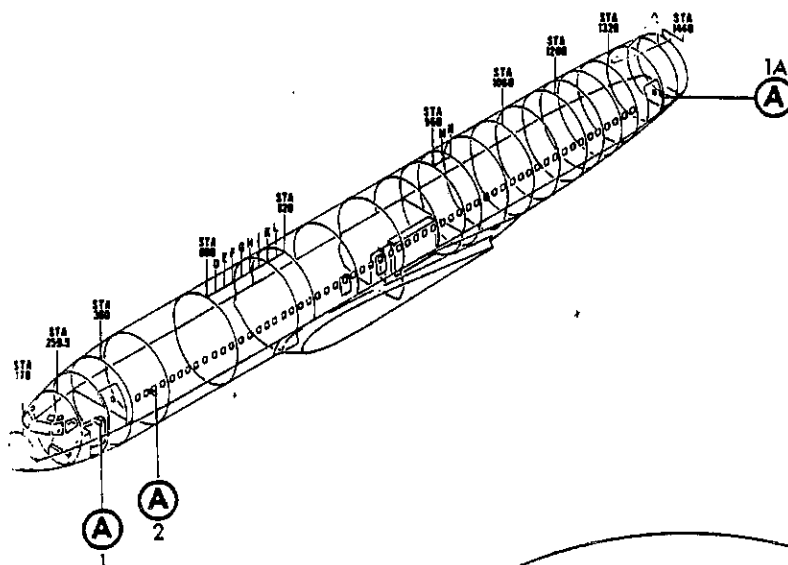

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 27	1 65-27067	PANEL ASSY, DRY SHAVE STATION FACE (LIGHTS ONLY) (SEE .	0150	RF
R		25-14, FIG. 22, ITEM 27)		
R	3 FA13T5CW	. LAMP, FLUORESCENT (V80368)	0150	1
R	4 4RBA13-1T	. BALLAST ASSY, (V82255)	0150	1
R		(OPTIONALS 61-36-1 (V82255) 28733 (V88204) 563113		
R		(V98571))		
R	4 61-36-1	. BALLAST ASSY, (V82255)	0150	1
R		(OPTIONAL TO 4RBA13-1T (V82255))		
R	4 563113	. BALLAST ASSY, (V98571)	0150	1
R		(OPTIONAL TO 4RBA13-1T (V82255))		
R	4 28733	. BALLAST ASSY, (V88204)	0150	1
R		(OPTIONAL TO 4RBA13-1T (V82255))		
R		ATTACHING PARTS		
R	NAS514P832-8	. SCREW	0150	2
R	NAS679A08W	. NUT	0150	2
R		-----*		
R	5 69-18087	. FIXTURE ASSY, FLUORESCENT LIGHT	0150	1
R	6 AN253-2-2100	. PIN	0150	1
R	7 69-18087-2	. HINGE, FLUORESCENT LIGHT FIXTURE	0150	1
R	8 69-18087-3	. HINGE, FLUORESCENT LIGHT FIXTURE	0150	1
R		. SOCKET, FLUORESCENT (V81590)	0150	2
R		ATTACHING PARTS		
R	NAS601-3	. SCREW	0150	4
R	AN936A6	. WASHER	0150	4
R		-----*		
R	9 69-18087-1	. BASE, FLUORESCENT LIGHT FIXTURE	0150	1
R	10 69-17019	. GLASS, DRY SHAVE STATION FLUORESCENT LIGHT	0150	1
R		. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE				


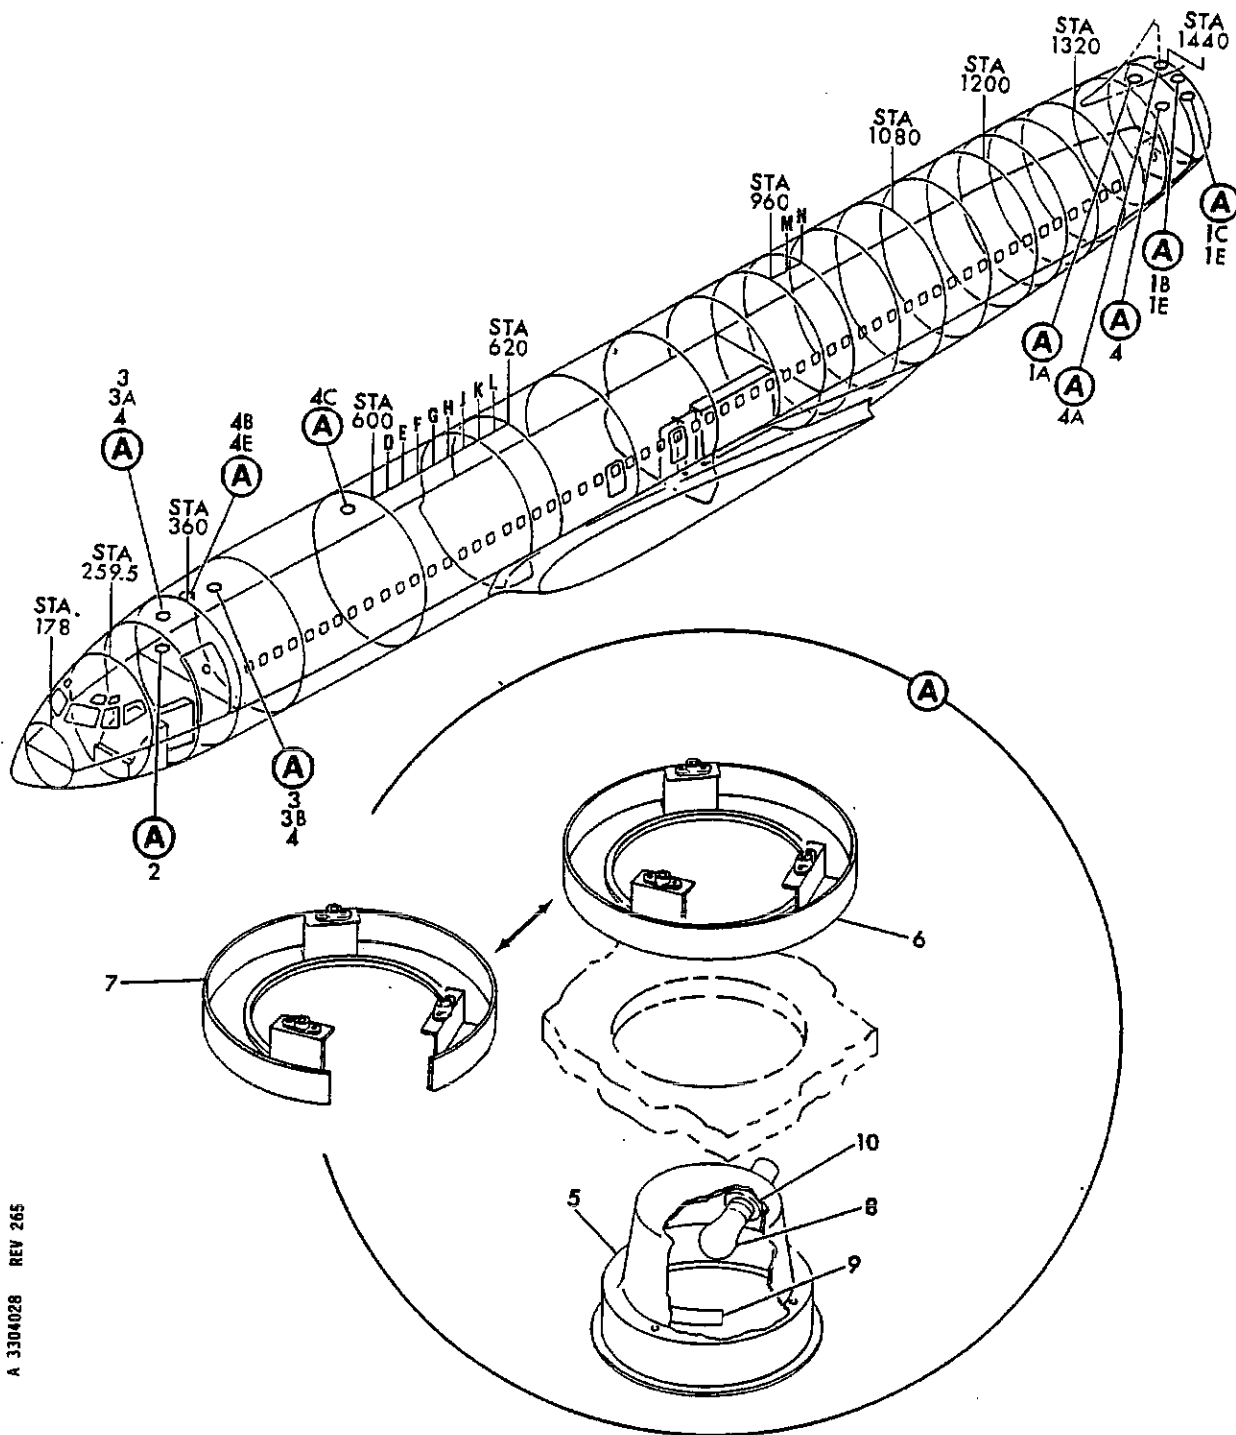


FIGURE 28. LIGHTS INSTL, TOILET COMPT DOME

A 3304028 REV 265

BOEING **707** Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
28	1	65-12736-1	LIGHT INSTL, TOILET COMPARTMENT DOME (SEE 25-15, FIG. 1, ITEM 24B, 25-15, FIG. 2, ITEM 28A, 25-15, FIG. 3, ITEM 25A, 25-15, FIG. 4, ITEM 28D, 25-15, FIG. 5, ITEM 25A, 25-15, FIG. 6, ITEM 29A, 25-15, FIG. 7, ITEM 29, 25-15, FIG. 8, ITEM 31A, 25-15, FIG. 8, ITEM 31C, 25-15, FIG. 9, ITEM 32A, 25-15, FIG. 10, ITEM 34A, 25-15, FIG. 11, ITEM 34, 25-15, FIG. 11, ITEM 34A, 25-15, FIG. 12, ITEM 26, 25-15, FIG. 12A, ITEM 26, 25-15, FIG. 12B, ITEM 26, 25-15, FIG. 12E, ITEM 38, 25-15, FIG. 12G, ITEM 38, 25-15, FIG. 12H, ITEM 35, 25-15, FIG. 12J, ITEM 31, 25-15, FIG. 13, ITEM 21, 25-15, FIG. 13M, ITEM 22, 25-15, FIG. 14A, ITEM 23, 25-15, FIG. 14B, ITEM 15, 25-15, FIG. 14C, ITEM 21, 25-15, FIG. 14D, ITEM 18, 25-15, FIG. 14E, ITEM 18, 25-15, FIG. 14H, ITEM 21, 25-15, FIG. 14J, ITEM 18, 25-15, FIG. 14K, ITEM 16, 25-15, FIG. 14L, ITEM 30, 25-15, FIG. 14M, ITEM 19, 25-15, FIG. 14N, ITEM 19, 25-15, FIG. 14P, ITEM 19 AND 25-15, FIG. 14Q, ITEM 27)		RF
	3	65-12736-4	LIGHT INSTL, TOILET COMPARTMENT DOME (SEE 25-15, FIG. 1, ITEM 24D, 25-15, FIG. 2, ITEM 28B, 25-15, FIG. 3, ITEM 25B, 25-15, FIG. 4, ITEM 28B, 25-15, FIG. 5, ITEM 25B, 25-15, FIG. 6, ITEM 29B, 25-15, FIG. 7, ITEM 30, 25-15, FIG. 8, ITEM 31B, 25-15, FIG. 9, ITEM 32B, 25-15, FIG. 10, ITEM 34B, 25-15, FIG. 11, ITEM 34B, 25-15, FIG. 12A, ITEM 27, 25-15, FIG. 12B, ITEM 27, 25-15, FIG. 12E, ITEM 37, 25-15, FIG. 12G, ITEM 37, 25-15, FIG. 12H, ITEM 34, 25-15, FIG. 12J, ITEM 30, 25-15, FIG. 13, ITEM 20 AND 20A 25-15, FIG. 13M ITEM 22A, 25-15, FIG. 14, ITEM 9, 25-15, FIG. 14A, ITEM 22, 25-15, FIG. 14B, ITEM 16, 25-15, FIG. 14C, ITEM 21, 25-15, FIG. 14D, ITEM 19, 25-15, FIG. 14E, ITEM 19, 25-15, FIG. 14H, ITEM 20, 25-15, FIG. 14J, ITEM 19, 25-15, FIG. 14K, ITEM 17, 25-15, FIG. 14L, ITEM 29, 25-15, FIG. 14, ITEM 18, 25-15, FIG. 14N, ITEM 18, 25-15, FIG. 14P, ITEM 18 AND 25-15, FIG. 14Q ITEM 26)		RF
	5	L16223	. LIGHT ASSY, CEILING (V17744) (BAC SPEC NO. ;10-60196-6)		1
		NAS602-10	. ATTACHING PARTS		
			. SCREW		3
	6	10-60196-1	. ADAPTER ASSY, CEILING DOME LIGHT MOUNTING (USED ON. 65-12736-1, -7 AND -9)		1
		BACS12F10-6	. ATTACHING PARTS		
			. SCREW, (USED ON 65-12736-1, AND -7)		3
	7	66-10988-1	. ADAPTER, DOME LIGHT MOUNTING (ALTERED FROM BAC SPEC NO. 10-60196-1) (USED ON 65-12736-4, -5 AND -8)		1
		BACS12F10-6	. ATTACHING PARTS		
			. SCREW		3
	8	GE1691	. LAMP, (V24455) (USED ON 65-12736-1, -4, -5 AND -9). . (OPTIONAL GE305 (V24455))		1
	8	GE305	. LAMP, (V24455) (USED ON 65-12736-1, -4, -5 AND -9). . (OPTIONAL TO GE1691 (V24455))		1
	9	BACM9L20-10AN	. SCOTCH-CAL, USE GE305 LAMP.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

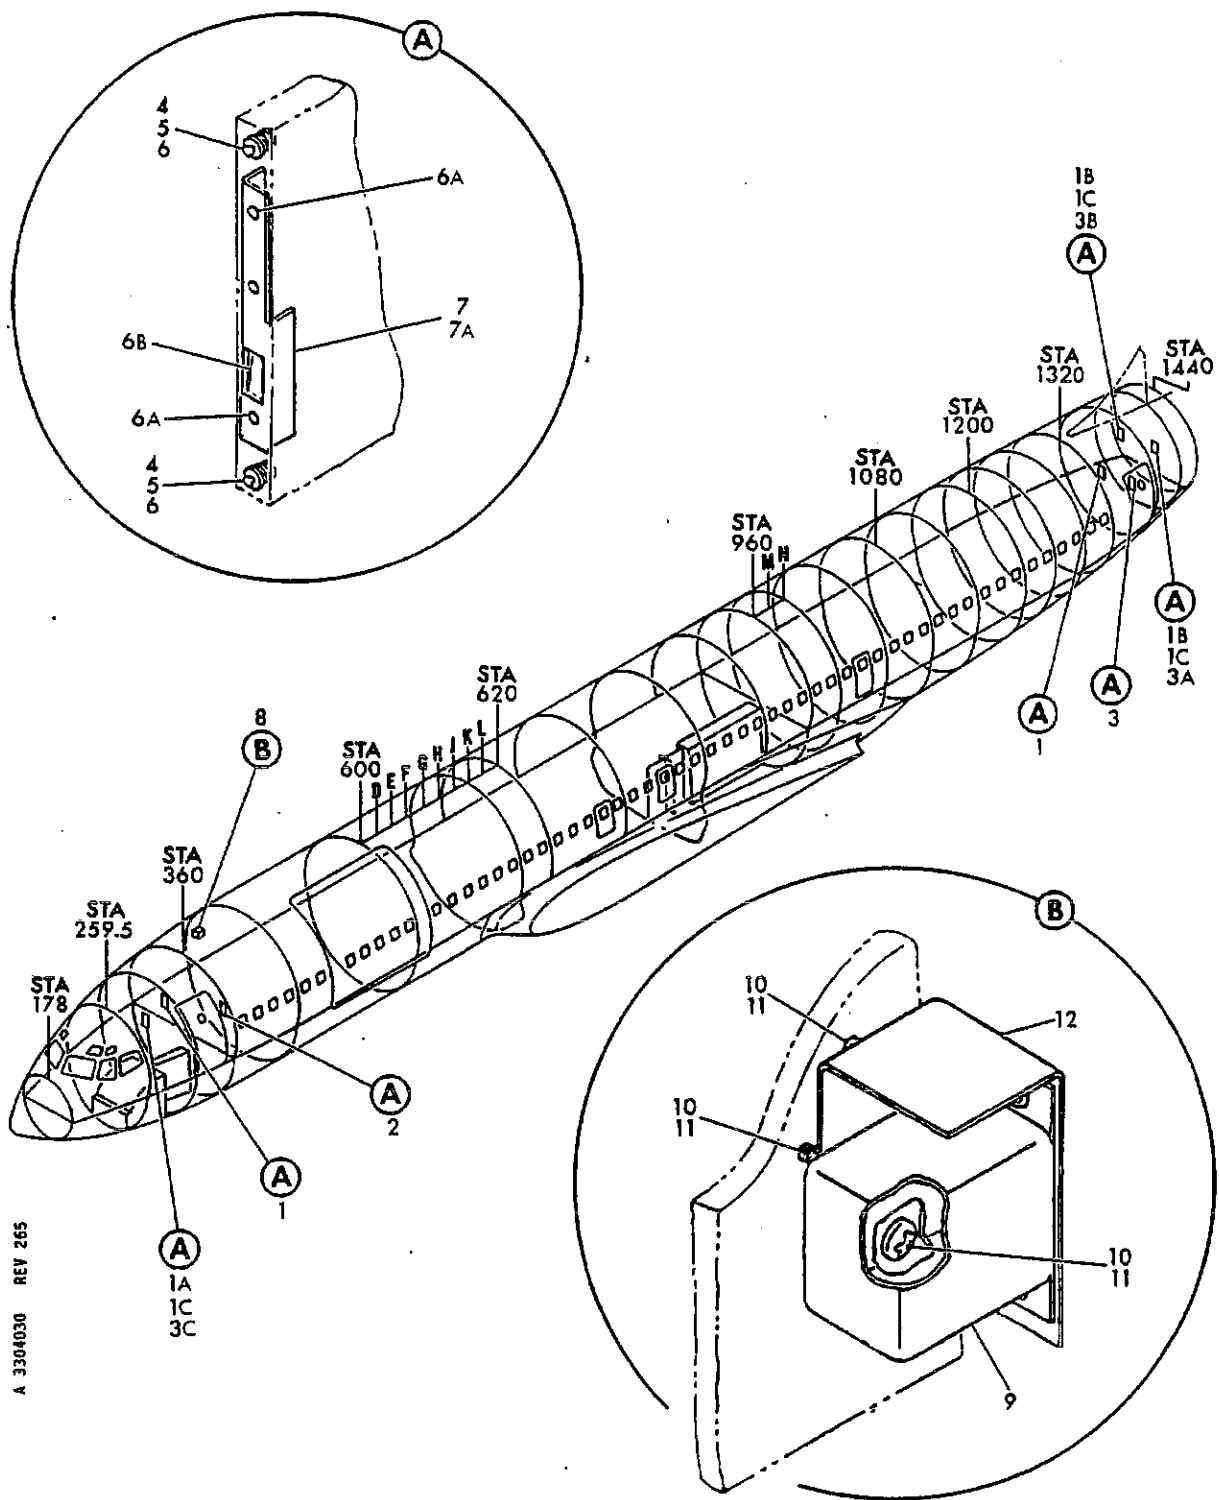

A 3304030 REV 265

FIGURE 30. SWITCH INSTL, TOILET MIRROR LIGHTS AND OCCUPIED INDICATOR LIGHT

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
30			SWITCH INSTL, TOILET MIRROR LIGHTS AND OCCUPIED INDICATOR LIGHT								
R R R R R R R R R R R	1A	69-12304	. SWITCH INSTL, TOILET MIRROR LIGHTS AND OCCUPIED . . . INDICATOR LIGHT (SEE 25-15, FIG. 1, ITEM 27A, 25-15, FIG. 2, ITEM 7, 25-15, FIG. 3, ITEM 6, 25-15, FIG. 4, ITEM 7, 7B, 25-15, FIG. 5, ITEM 6, 25-15, FIG. 6, ITEM 7, 25-15, FIG. 7, ITEM 7, 25-15, FIG. 8, ITEM 7, 25-15, FIG. 9, ITEM 7, 25-15, FIG. 10, ITEM 8, 25-15, FIG. 11, ITEM 70, 25-15, FIG. 12, ITEM 6, 25-15, FIG. 12A, ITEM 6, 25-15, FIG. 12B, ITEM 6, 25-15, FIG. 12E, ITEM 35, 25-15, FIG. 12H, ITEM 33, 25-15, FIG. 12J, ITEM 28, 25-15, FIG. 13, ITEM 4 AND 4A, 25-15, FIG. 13M, ITEM 4, 25-15, FIG. 14, ITEM 2, 25-15, FIG. 14A, ITEM 4, 25-15, FIG. 14B, ITEM 6, 25-15, FIG. 14C, ITEM 4, 25-15, FIG. 14D, ITEM 4, 25-15, FIG. 14H, ITEM 4, 25-15, FIG. 14J, ITEM 4, 25-15, FIG. 14K, ITEM 4, 25-15, FIG. 14L, ITEM 26, 25-15, FIG. 14M, ITEM 4, 25-15, FIG. 14N, ITEM 4, 25-15, FIG. 14P, ITEM 4, 25-15, FIG. 14Q, ITEM 6 AND FIG. 14U, ITEM								RF
	1B	69-12304	. SWITCH INSTL, TOILET MIRROR LIGHTS AND OCCUPIED . . . INDICATOR LIGHT (SEE 25-15, FIG. 1, ITEM 27A, 25-15, FIG. 2, ITEM 7, 25-15, FIG. 3, ITEM 6, 25-15, FIG. 4, ITEM 7, 7B, 25-15, FIG. 5, ITEM 6, 25-15, FIG. 6, ITEM 7, 25-15, FIG. 7, ITEM 7, 25-15, FIG. 8, ITEM 7, 25-15, FIG. 9, ITEM 7, 25-15, FIG. 10, ITEM 8, 25-15, FIG. 11, ITEM 70, 25-15, FIG. 12, ITEM 6, 25-15, FIG. 12A, ITEM 6, 25-15, FIG. 12B, ITEM 6, 25-15, FIG. 12E, ITEM 35, 25-15, FIG. 12H, ITEM 33, 25-15, FIG. 12J, ITEM 28, 25-15, FIG. 13, ITEM 4, 25-15, FIG. 13M, ITEM 4, 25-15, FIG. 14A, ITEM 4, 25-15, FIG. 14B, ITEM 6, 25-15, FIG. 14C, ITEM 4, 25-15, FIG. 14D, ITEM 4, 25-15, FIG. 14H, ITEM 4, 25-15, FIG. 14J, ITEM 4, 25-15, FIG. 14K, ITEM 4, 25-15, FIG. 14L, ITEM 26, 25-15, FIG. 14M, ITEM 4, 25-15, FIG. 14N, ITEM 4, 25-15, FIG. 14P, ITEM 4 AND 25-15, FIG. 14Q, ITEM 6)								RF
	1C	69-12304	. SWITCH INSTL, TOILET MIRROR LIGHTS AND OCCUPIED . . . INDICATOR LIGHT (SEE 25-15, FIG. 1, ITEM 27A, 25-15, FIG. 2, ITEM 7, 25-15, FIG. 3, ITEM 6, 25-15, FIG. 4, ITEM 7, 7B, 25-15, FIG. 5, ITEM 6, 25-15, FIG. 6, ITEM 7, 25-15, FIG. 7, ITEM 7, 25-15, FIG. 8, ITEM 7, 25-15, FIG. 9, ITEM 7, 25-15, FIG. 10, ITEM 8, 25-15, FIG. 11, ITEM 70, 25-15, FIG. 12, ITEM 6, 25-15, FIG. 12A, ITEM 6, 25-15, FIG. 12B, ITEM 6, 25-15, FIG. 12E, ITEM 35, 25-15, FIG. 12H, ITEM 33, 25-15, FIG. 12J, ITEM 28, 25-15, FIG. 13, ITEM 4, 25-15, FIG. 13M, ITEM 4, 25-15, FIG. 14A, ITEM 4, 25-15, FIG. 14B, ITEM 6, 25-15, FIG. 14C, ITEM 4, 25-15, FIG. 14D, ITEM 4, 25-15, FIG. 14H, ITEM 4, 25-15, FIG. 14J, ITEM 4, 25-15, FIG. 14K, ITEM 4, 25-15, FIG. 14L, ITEM 26, 25-15, FIG. 14M, ITEM 4, 25-15, FIG. 14N, ITEM 4, 25-15, FIG. 14P, ITEM 4 AND 25-15, FIG. 14Q, ITEM 6)								RF
	4	NAS514P832-10	. . . SCREW, (NOT USED ON TOILET A)								2
	4	NAS514P832-10	. . . SCREW, (USED ON TOILET A)								2
	5	RLN2824S88	. . . RING, LOCKING (V83324) (NOT USED ON TOILET A) . . .								2
	5	RLN2824S88	. . . RING, LOCKING (V83324) (USED ON TOILET A)								2
	6	RNA104S88L	. . . INSERT, (V83324) (NOT USED ON TOILET A)								2
	6	RNA104S88L	. . . INSERT, (V83324) (USED ON TOILET A)								2
	6A	NAS514P632-5	. . . SCREW, (NOT USED ON TOILET A)								3
6A	NAS514P632-5	. . . SCREW, (USED ON TOILET A)								3	
6B	69-12304-5	. . . PAD, STRIKER (NOT USED ON TOILET A)								1	
6B	69-12304-5	. . . PAD, STRIKER (USED ON TOILET A)								1	
7	10C108	. . . SWITCH ASSY, LIGHT (V15438) (NOT USED ON TOILET A)								1	
7	10C108	. . . SWITCH ASSY, LIGHT (V15438) (USED ON TOILET A) . . .								1	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											


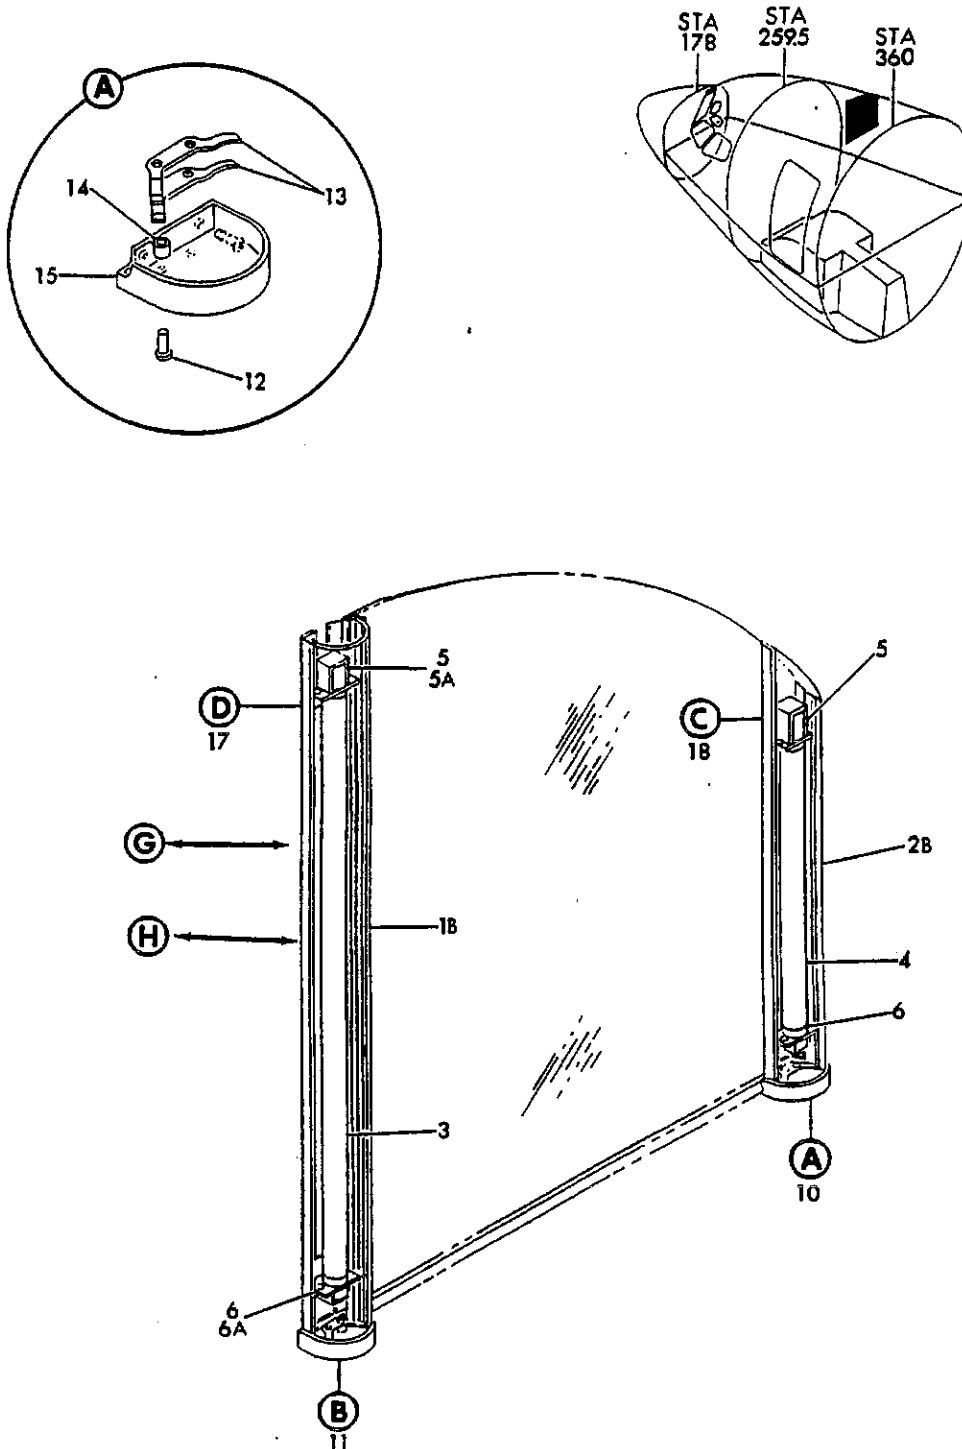


FIGURE 32. MIRROR AND LIGHT INSTL. TOILET A (LIGHTS ONLY) (SHEET 1)

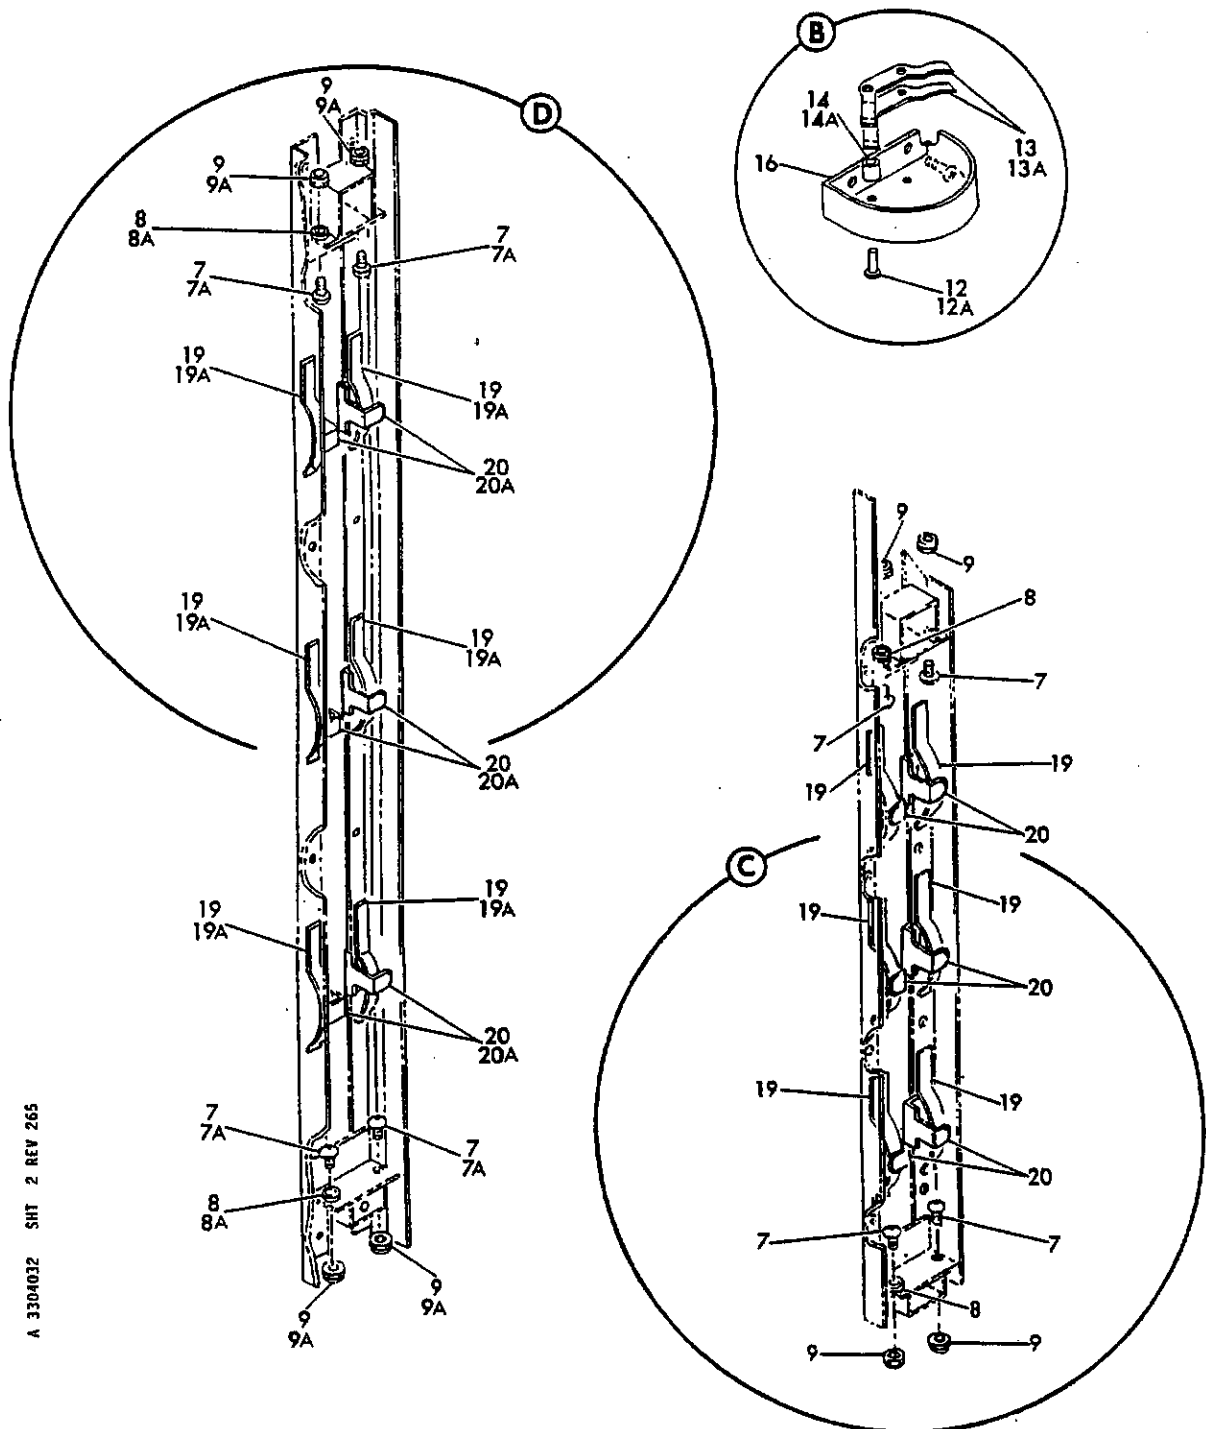


A 3304032 SHT 2 REV 265

FIGURE 32. MIRROR AND LIGHT INSTL. TOILET A (LIGHTS ONLY) (SHEET 2)

NOV 21/94


33-04-32

DETAILED PARTS LIST
33-04-32
PAGE 1

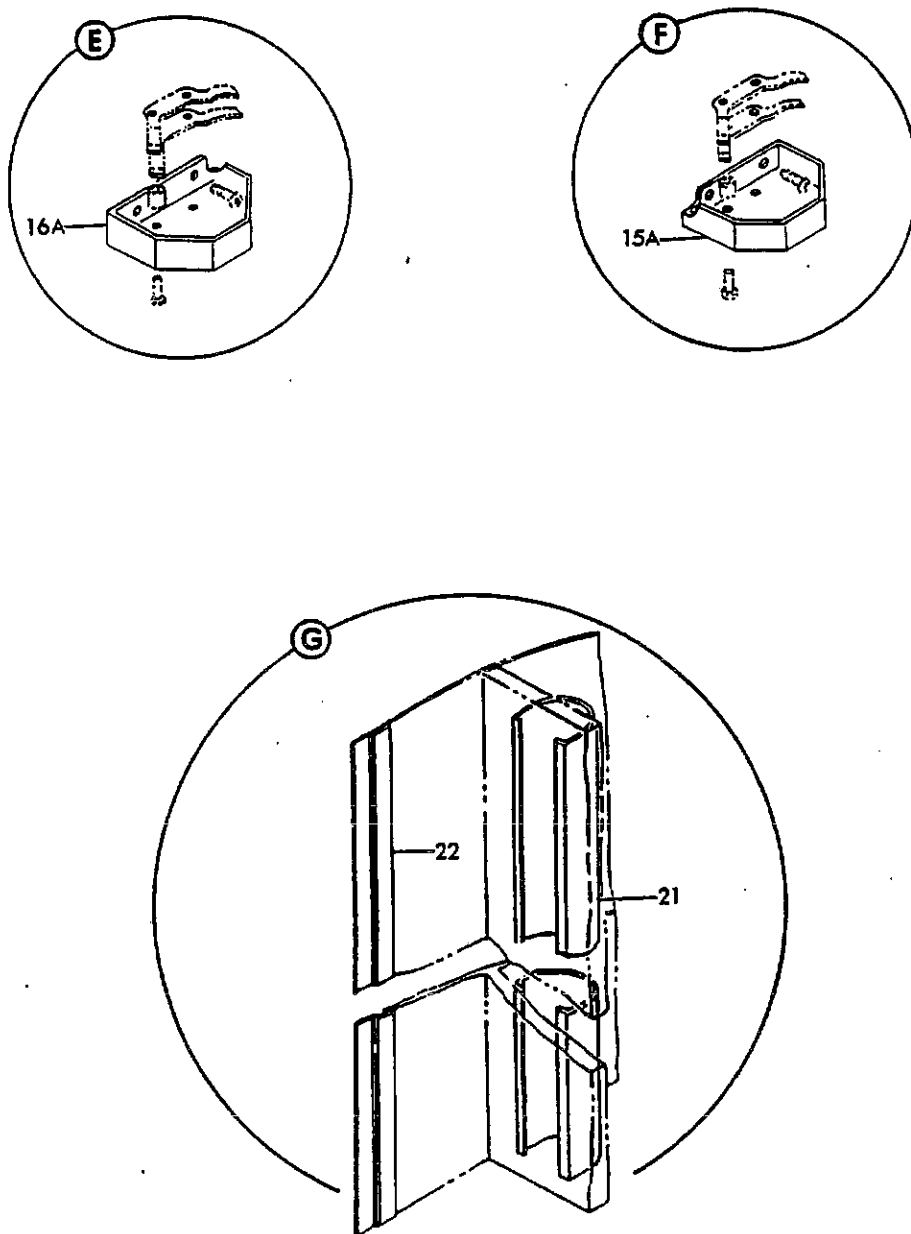

A 3304032 SMT 3 REV 265

FIGURE 32. MIRROR AND LIGHT INSTL, TOILET A (LIGHTS ONLY) (SHEET 3)

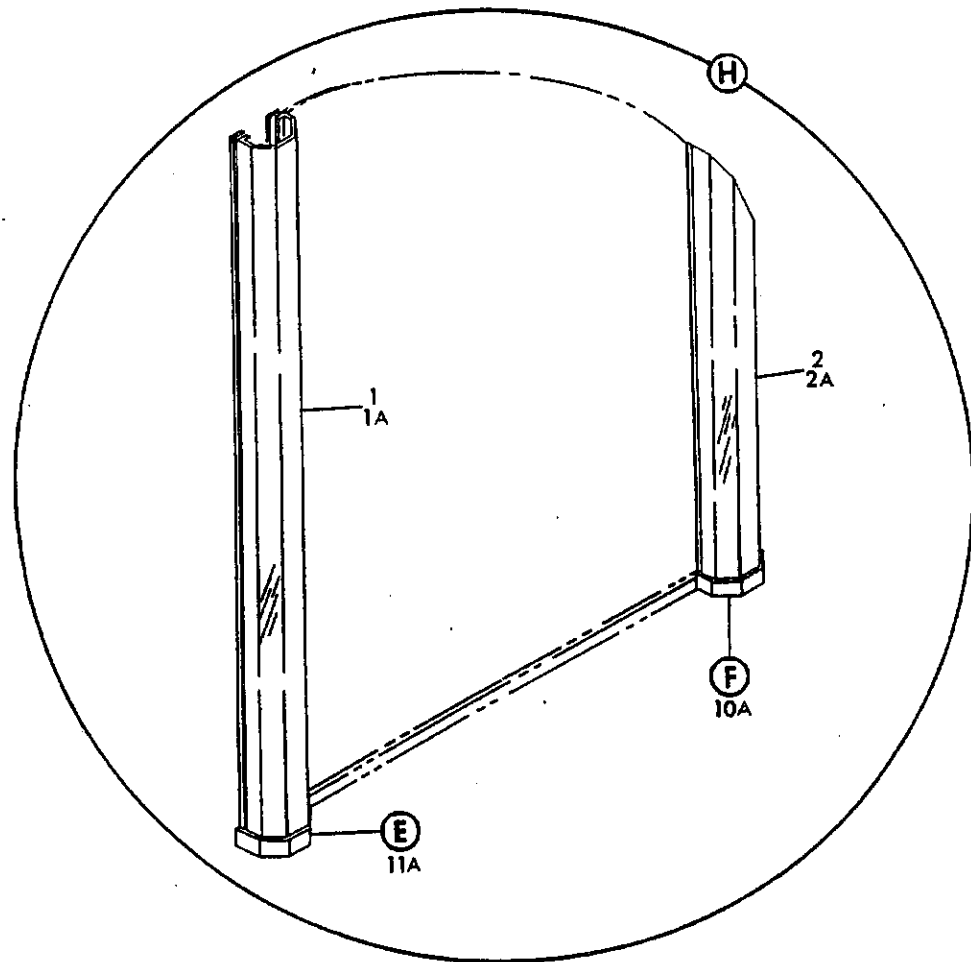

A 3304032 SIIT 4 REV 265

FIGURE 32. MIRROR AND LIGHT INSTL, TOILET A (LIGHTS ONLY) (SHEET 4)

NOV 21/94

33-04-32

DETAILED PARTS LIST
33-04-32
PAGE 3



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
	32	65-5410	MIRROR AND LIGHT INSTL, TOILET A (LIGHTS ONLY) (SEE . . . 25-15, FIG. 1, ITEM 13, 25-15, FIG. 3, ITEM 2, 25-15, FIG. 4, ITEM 1, 25-15, FIG. 5, ITEM 2, 25-15, FIG. 6, ITEM 3, 25-15, FIG. 7, ITEM 3, 25-15, FIG. 8, ITEM 2, 25-15, FIG. 9, ITEM 2, 25-15, FIG. 10, ITEM 1, 25-15, FIG. 11, ITEM 1, 25-15, FIG. 12, ITEM 1, 25-15, FIG. 12A, ITEM 1, 25-15, FIG. 12B, ITEM 1, 25-15, FIG. 12E, ITEM 1, 25-15, FIG. 12G, ITEM 1, 25-15, FIG. 12H, ITEM 1, 25-15, FIG. 12J, ITEM 1, 25-15, FIG. 13, ITEM 1, 25-15, FIG. 13M, ITEM 1, 25-15, FIG. 14, ITEM 1, 25-15, FIG. 14A, ITEM 1, 25-15, FIG. 14B, ITEM 1, 25-15, FIG. 14D, ITEM 1, 25-15, FIG. 14E, ITEM 1, 25-15, FIG. 14H, ITEM 1, 25-15, FIG. 14J, ITEM 1, 25-15, FIG. 14K, ITEM 1, 25-15, FIG. 14L, ITEM 1, 25-15, FIG. 14M, ITEM 1, 25-15, FIG. 14N, ITEM 1, 25-15, FIG. 14P, ITEM 1 AND 25-15, FIG. 14Q, ITEM 1)								
R		65-5410	MIRROR AND LIGHT INSTL, TOILET A (LIGHTS ONLY).							0150	RF
R			(DELETED BY RAF 7211.019-225)								
R		ALD33-00P01928	MIRROR AND LIGHT INSTL, MODIFICATION, TOILET A.							0150	RF
R			(LIGHTS ONLY) (VS2500) (ADDED BY RAF 7211.019-225) (SEE 25-15, FIG. 14A, ITEM 1) (ECPO68)								
R	1B	65-6187-5	. SHADE, TOILET LIGHT							5199	1
R	1B	65-6187-5	. SHADE, TOILET LIGHT (DELETED BY RAF 7211.019-225) . . .							0150	1
R	1B	ALD33-00P0128-101	. SHADE, TOILET LIGHT (REWORKED FROM P/N 65-6187-2) . . .							0150	1
R			(VS2500) (ADDED BY RAF 7211.019-225)								
R	2B	65-6187-26	. SHADE, TOILET LIGHT								1
R	3	F36T12WW	. LIGHT, FLUORESCENT (V08805)							5199	1
R	3	F36T12WW	. LIGHT, FLUORESCENT (V08805) (DELETED BY RAF							0150	1
R			7211.019-225)								
R	4	F24T12WW	. LIGHT, FLUORESCENT (V08805)								1
R	5	ALF473-101	. SOCKET, LIGHT (V04314).								2
R	6	ALF472-101	. SOCKET, LOW VOLTAGE (V04314).								2
R	7	NAS601-5	. SCREW								8
R	8	NAS557-4A	. GROMMET								4
R	9	NAS679A06W	. NUT								8
R	10	66-3892-1	. CUP ASSY, TOILET LIGHTS								1
R	11	66-3892-2	. CUP ASSY, TOILET LIGHTS							5199	1
R	12	AN426D	. RIVET								2
R	13	66-3981-3	. SPRING, TOILET LIGHT SHADE CLIP TENSION								2
R	14	NAS42DD5-25	. SPACER.								2
R	15	66-3878-1	. CUP, TOILET LIGHTS (USED ON 66-3892-1).								1
R	16	66-3878-2	. CUP, TOILET LIGHTS (USED ON 66-3892-2).							5199	1
R	17	65-5999-45	. RETAINER ASSY, TOILET A LIGHT AND SHADE								1
R	18	65-5999-46	. RETAINER ASSY, TOILET A LIGHT AND SHADE								1
R			ATTACHING PARTS								
R		NAS602-6	. SCREW								20
R			-----*								
R	19	66-3981-1	. SPRING, TOILET LIGHT SHADE CLIP TENSION								6
R	20	63-2137	. RETAINER.								6
R			. FOR REFERENCE TO OTHER MIRROR AND LIGHT DETAILS, SEE NHA								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

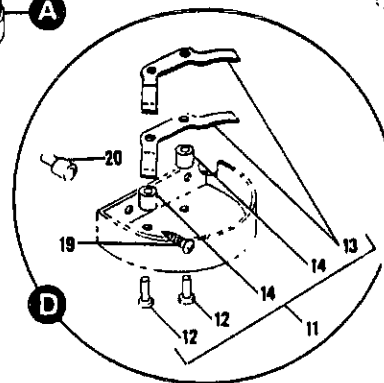
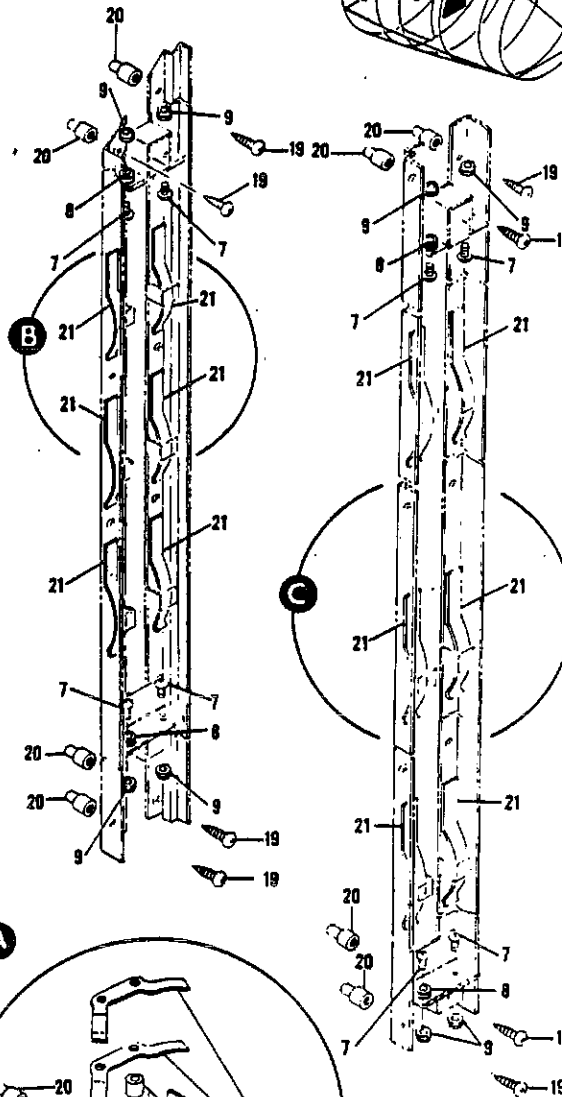
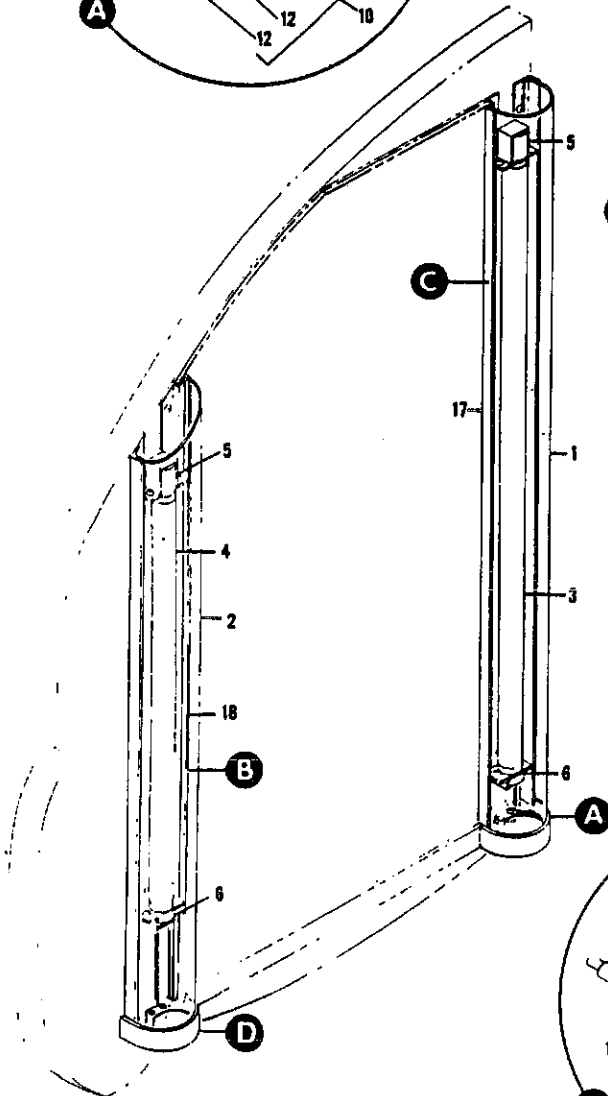
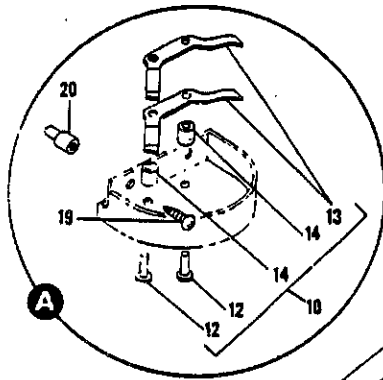
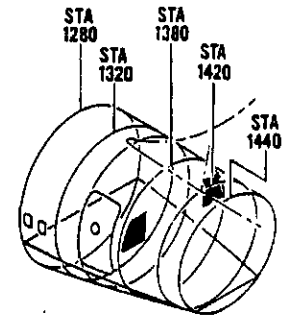


FIGURE 34. MIRROR AND LIGHT INSTL, TOILET D AND C (LIGHTS ONLY)

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R					

MISSING ITEM NUMBERS ARE NOT APPLICABLE

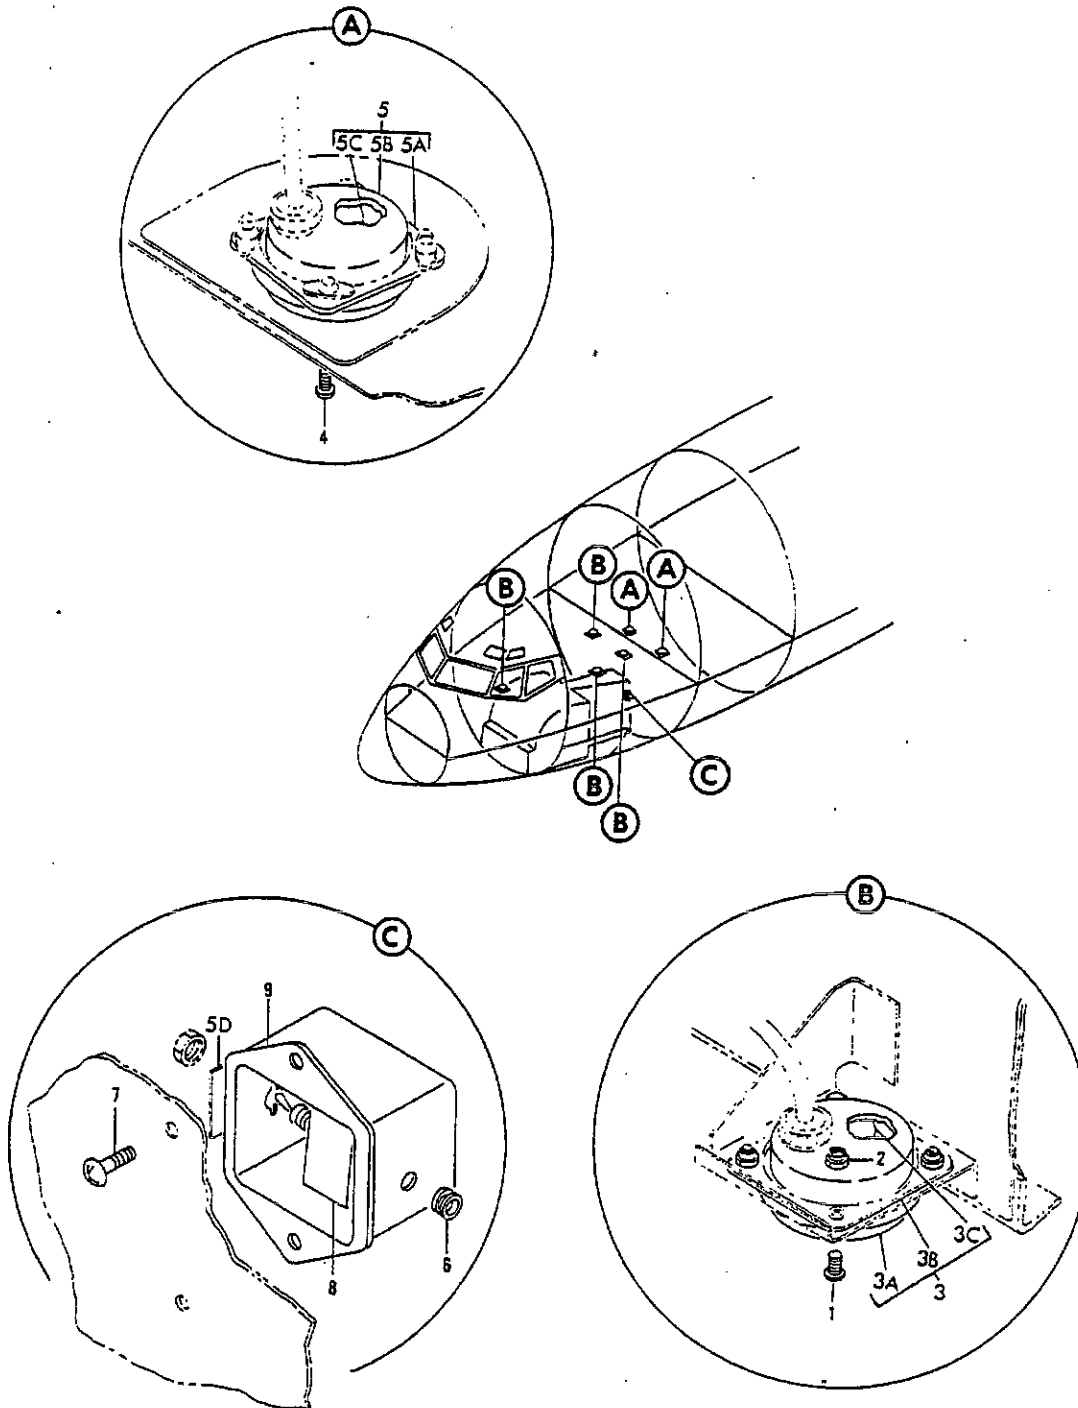



FIGURE 61. LIGHT INSTL, SECTION 51 AND 53 DOME
SWITCH INSTL, LOWER CAB DOME LIGHT

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
61	50-11323		LIGHT INSTL, SECTION 51 AND 53 DOME SWITCH INSTL, LOWER CAB DOME LIGHT. LIGHT INSTL, SECTION 51 DOME (SEE 24-3, FIG. 1A, ITEM 9, 24-3, FIG. 1B, ITEM 8 AND 24-3, FIG. 1C, ITEM 7)		RF
1	NAS601-4		. . . SCREW		4
2	NAS679A06W 69-12253-3		. . . NUT BUNDLE ASSY, FORWARD AND AFT CARGO COMPARTMENT. . . LIGHTS ELECTRICAL (SEE 24-3, FIG. 1A, 1B, 1C FOR NHA)		4 1
3	B9845-3-307		. . . LIGHT ASSY, (WHITE) (V72914). (OPTIONAL B9845-8-307 (V72914))		1
3	B9845-8-307		. . . LIGHT ASSY, (CLEAR) (V72914). (OPTIONAL TO B9845-3-307 (V72914))		1
M 3A	B9845-9		 COVER ASSY, (V72914) (INCLUDES LENS A7029-1). . . (USED ON B9845-3-307)		1
M 3A	B9845-12		 COVER ASSY, (V72914) (INCLUDES LENS A7029-4). . . (USED ON B9845-8-307)		1
M 3B	B9845-14-307		 HOUSING ASSY, (V72914).		1
M 3C	307		 LAMP, (V08806).		1
	50-11323-7		. LIGHT INSTL, SECTION 53 DOME (LH) (SEE 24-3, FIG. 2, ITEM 51)		RF
	50-11323-14		. LIGHT INSTL, SECTION 53 DOME (RH) (SEE 24-3, FIG. 2, ITEM 51A)		RF
4	NAS601-4 69-12253-3		. . . SCREW BUNDLE ASSY, FORWARD AND AFT CARGO COMPARTMENT. . . LIGHTS ELECTRICAL (SEE 24-3, FIG. 1 FOR NHA)		4 1
5	B9845-3-307		. . . LIGHT ASSY, (WHITE) (V72914). (OPTIONAL B9845-8-307 (V72914))		1
5	B9845-8-307		. . . LIGHT ASSY, (CLEAR) (V72914). (OPTIONAL TO B9845-3-307 (V72914))		1
M 5A	B9845-9		 COVER ASSY, (V72914) (INCLUDES LENS A7029-1). . . (USED ON B9845-3-307)		1
M 5A	B9845-12		 COVER ASSY, (V72914) (INCLUDES LENS A7029-4). . . (USED ON B9845-8-307)		1
M 5B	B9845-14-307		 HOUSING ASSY, (V72914).		1
M 5C	307		 LAMP, (V08806).		1
	66-1039		. SWITCH INSTL, LOWER CAB DOME LIGHT (SEE 24-3, FIG. . . 1A, ITEM 13, 24-3, FIG. 1B, ITEM 12 AND 24-3, FIG. 1C, ITEM 11)		RF
5D	BACM10L10-13AN		. . . MARKER-ALUMINUM FOIL, LIGHT		1
6	NAS557-6A		. . . GROMMET		1
7	NAS603-7		. . . SCREW		2
8	MS35058-23		. . . SWITCH.		1
9	66-1502		. . . BOX, SWITCH		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING **707** *Intercontinental*
PARTS CATALOG

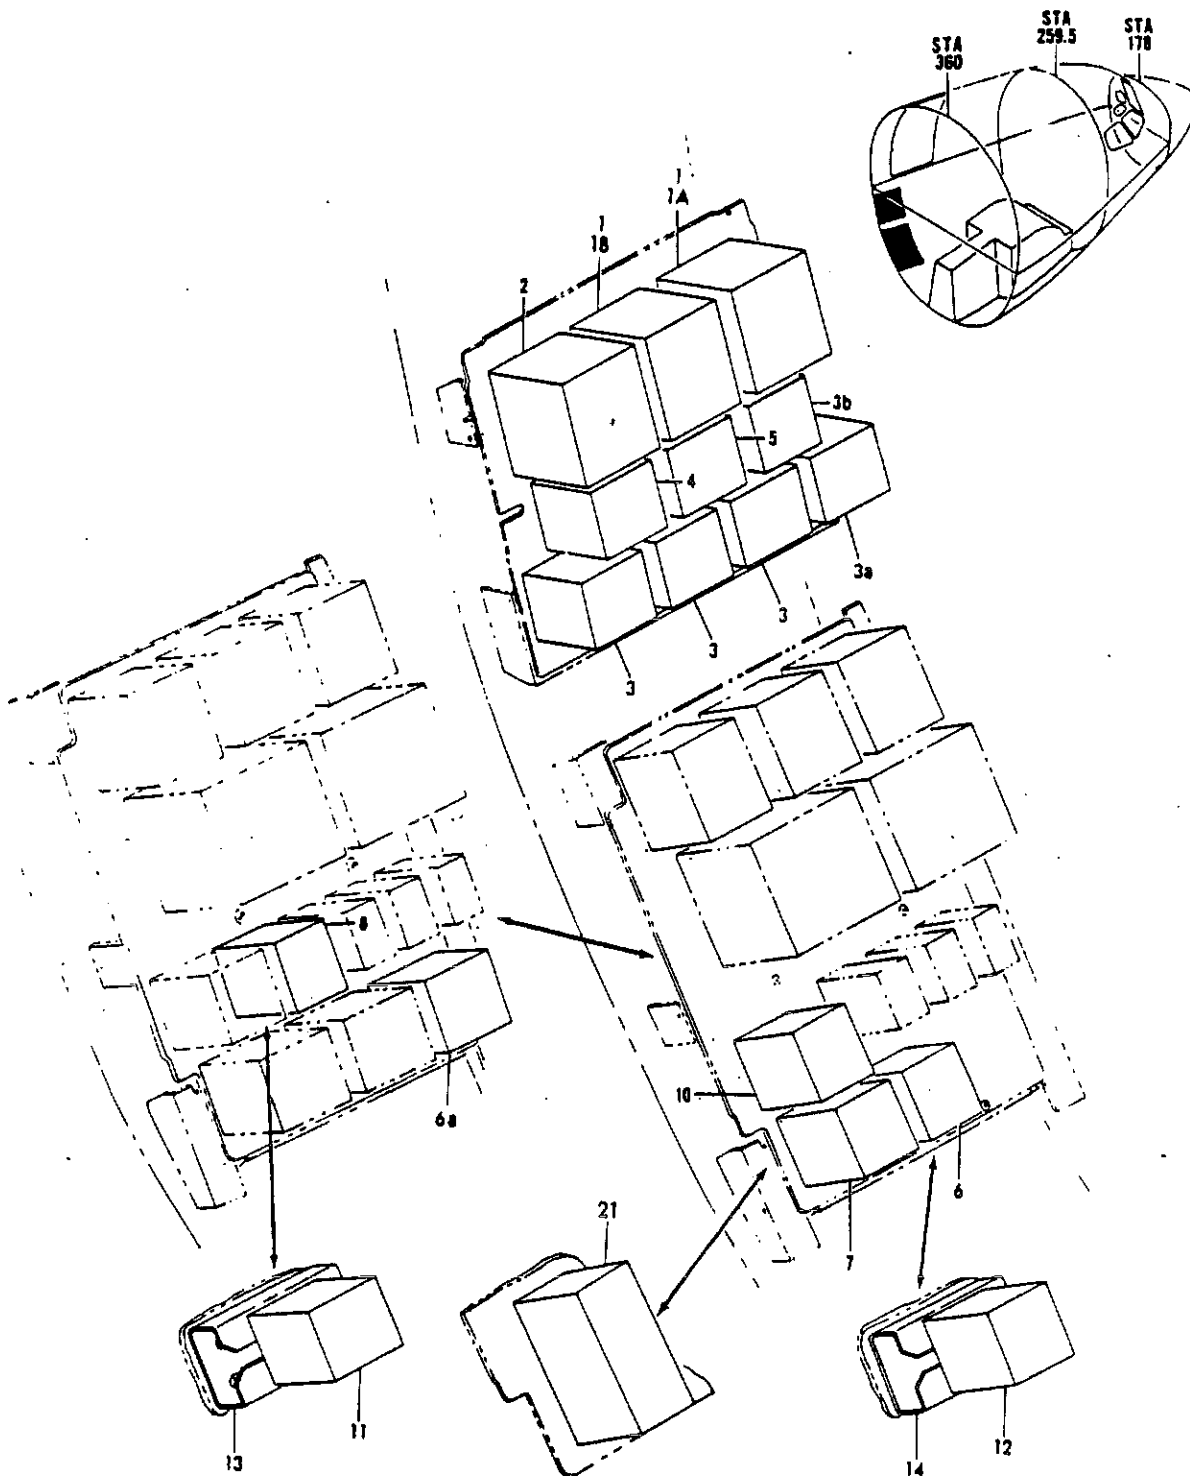

PANEL INSTL, STATION 344 TO 360 TRANSFORMER

DETAILED PARTS LIST
33-04-66
PAGE 0

33-04-66

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
R 66	50-11348	PANEL INSTL, STATION 344 TO 360 TRANSFORMER (LIGHTS . . . ONLY) (SEE 24-3, FIG. 1A, ITEM 26, 24-3, FIG. 1B, ITEM 25 AND 24-3, FIG. 1C, ITEM 22)	0150	RF
R 1	10-3250	. TRANSFORMER, 115/450 VOLTS MAIN FLUORESCENT LIGHTING	0150	2
R	NAS603-8P	. ATTACHING PARTS	0150	8
R 2	10-3250	. SCREW	0150	1
R	NAS603-8P	. TRANSFORMER, 115/450 VOLTS MAIN FLUORESCENT LIGHTING	0150	4
R 3	10-3254	. ATTACHING PARTS	0150	3
R	NAS603-8P	. SCREW	0150	12
R 3B	10-3254	. AUTOTRANSFORMER, 115/28 VOLTS	0150	1
R	NAS603-8P	. ATTACHING PARTS	0150	4
R 4	10-60268-1	. SCREW	0150	1
R	NAS603-8P	. TRANSFORMER, CEILING LIGHTS	0150	4
R 5	10-60268-1	. ATTACHING PARTS	0150	1
R	NAS603-8P	. SCREW	0150	4
R 6	10-60268-1	. TRANSFORMER, CEILING LIGHTS	0150	1
R	NAS603-8P	. ATTACHING PARTS	0150	4
R 6A	10-60268-1	. SCREW	0150	1
R	NAS603-8P	. TRANSFORMER, CEILING LIGHTS	0150	4
R 7	10-60268-1	. ATTACHING PARTS	0150	1
R	NAS603-8P	. SCREW	0150	4
R 8	10-3250-1	. TRANSFORMER, 115/450 VOLTS MAIN FLUORESCENT LIGHTING	0150	1
R	NAS603-8P	. ATTACHING PARTS	0150	4
R		. SCREW	0150	
		. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	0150	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

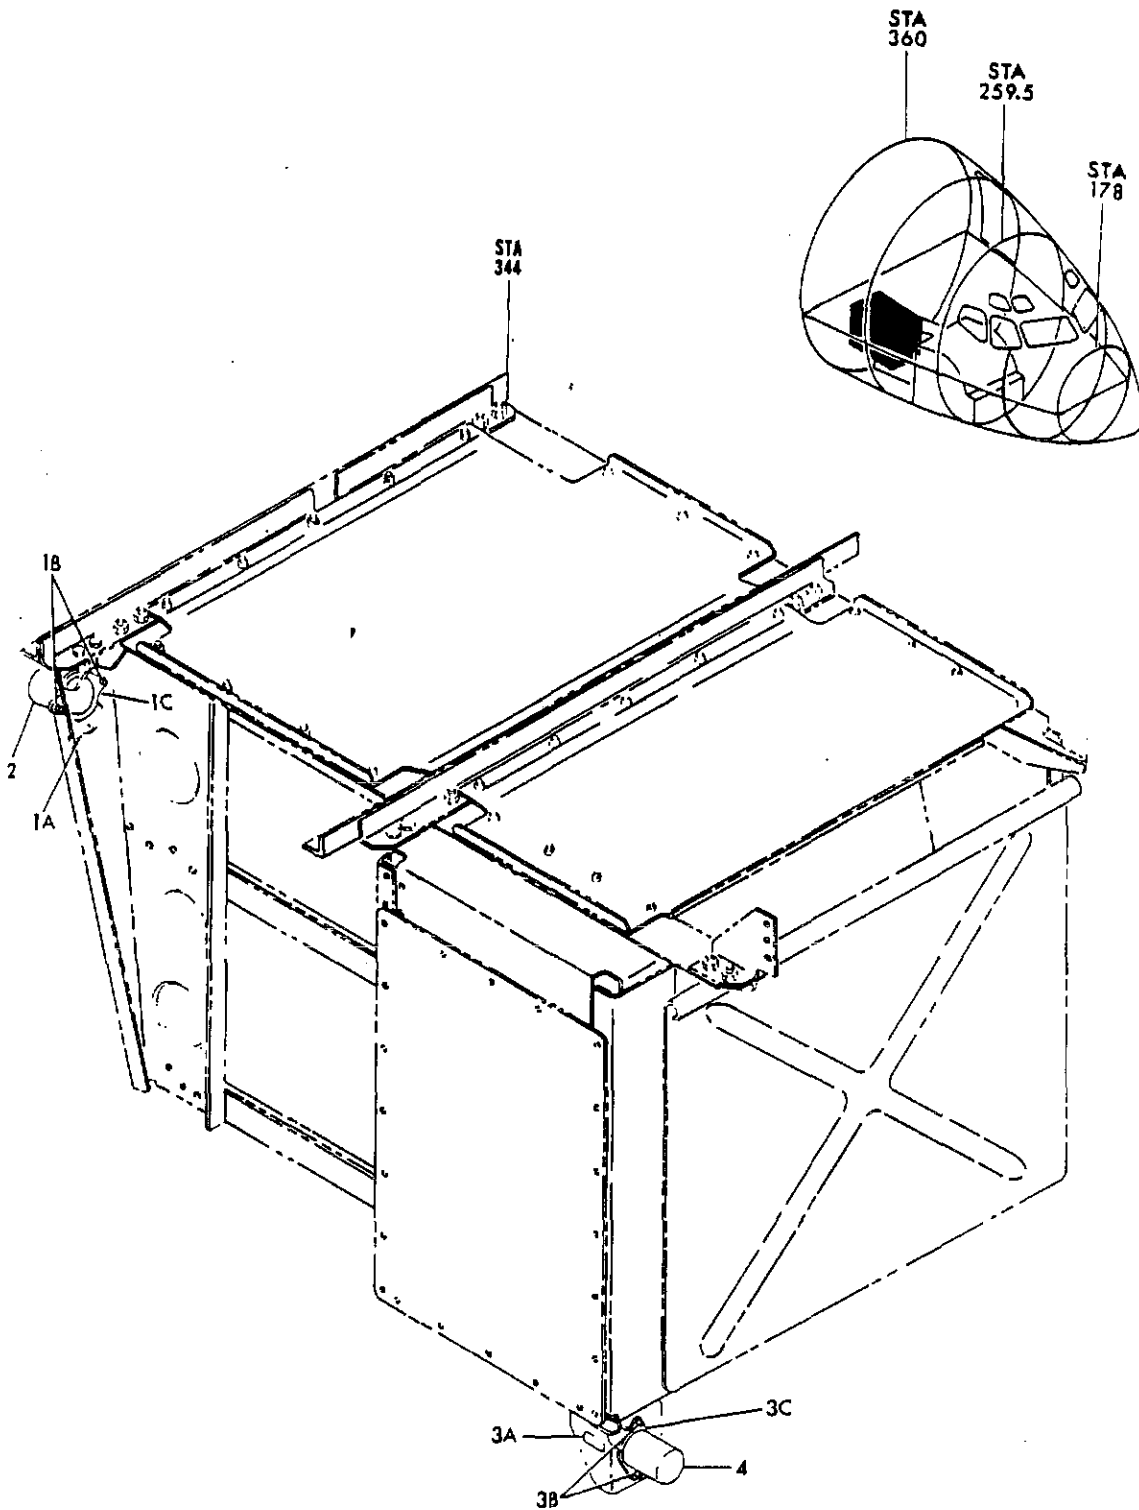


FIGURE 67L. LIGHT INSTL-STATION 316.5 AND STATION 344 LOWER SECTION 41 RIGHT HAND

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R	67L	LIGHT INSTL, STATION 316.5 AND STATION 344 LOWER.							5199	
		SECTION 41 RH								
		. LIGHT INSTL, STATION 344 LOWER SECTION 41 RH (SEE . . .							5199	RF
		24-3, FIG. 1A, ITEM 80, 24-3, FIG. 1B, ITEM 71								
		AND 24-3, FIG. 1C, ITEM 68)								
	1A	. . MARKER-ALUMINUM FOIL, L1042							5199	1
	1B	. . SCREW							5199	2
	2	. . LAMP, (V08806).							5199	1
		. LIGHT INSTL, STATION 316.5 LOWER SECTION 41 RH (SEE .							5199	RF
		24-3, FIG. 1A, ITEM 81, 24-3, FIG. 1B, ITEM 72								
		AND 24-3, FIG. 1C, ITEM 69)								
	3A	. . MARKER-ALUMINUM FOIL, L211.							5199	1
	3B	. . SCREW							5199	2
	4	. . LAMP, (V08806).							5199	1
		MISSING ITEM NUMBERS ARE NOT APPLICABLE								

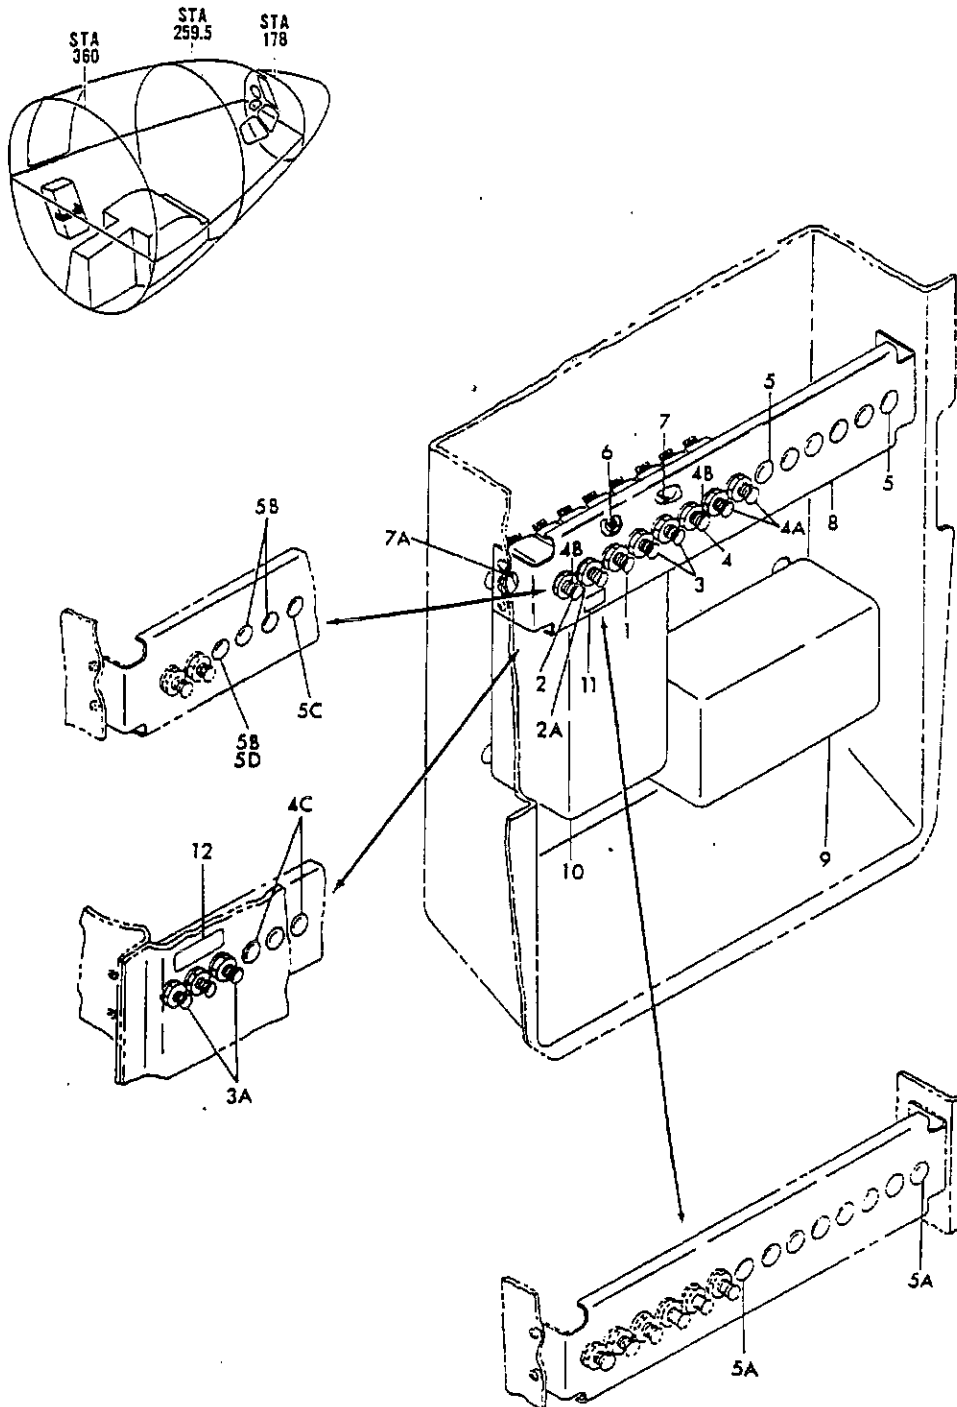


FIGURE 708. SHIELD ASSY, STATION 336 J4 RELAY (LIGHTS ONLY)

MISSING ITEM NUMBERS ARE NOT APPLICABLE

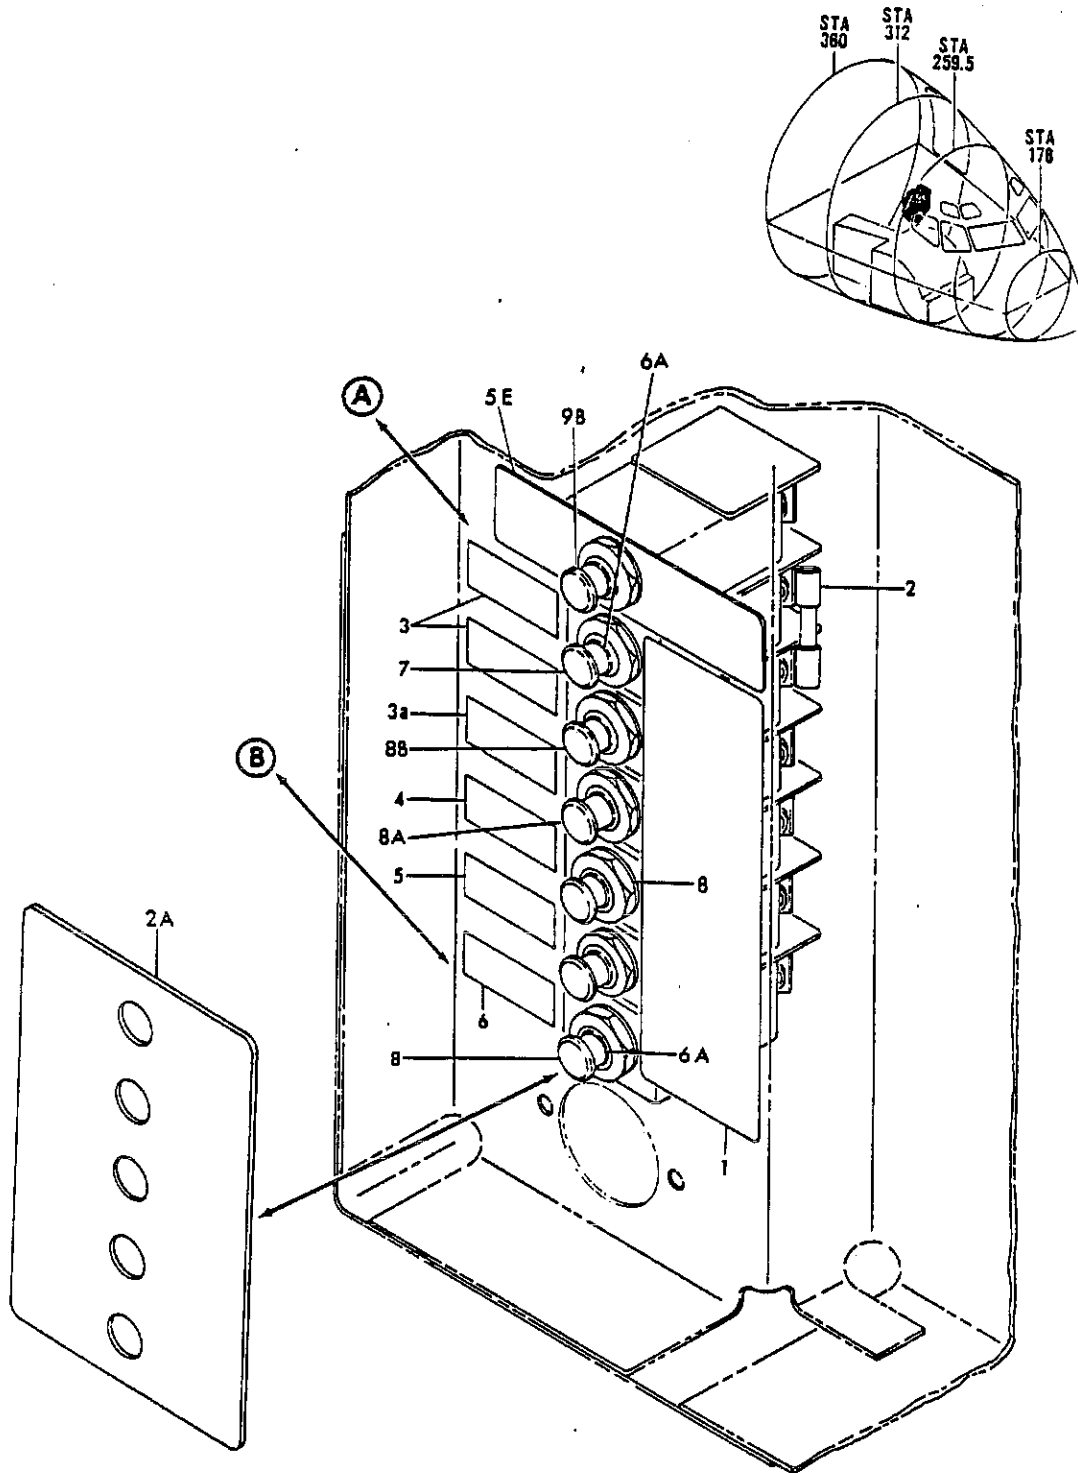


FIGURE 70F. SHIELD ASSY, STATION 335 J27 ELECTRICAL EQUIPMENT (LIGHTS ONLY) (SHEET 1)

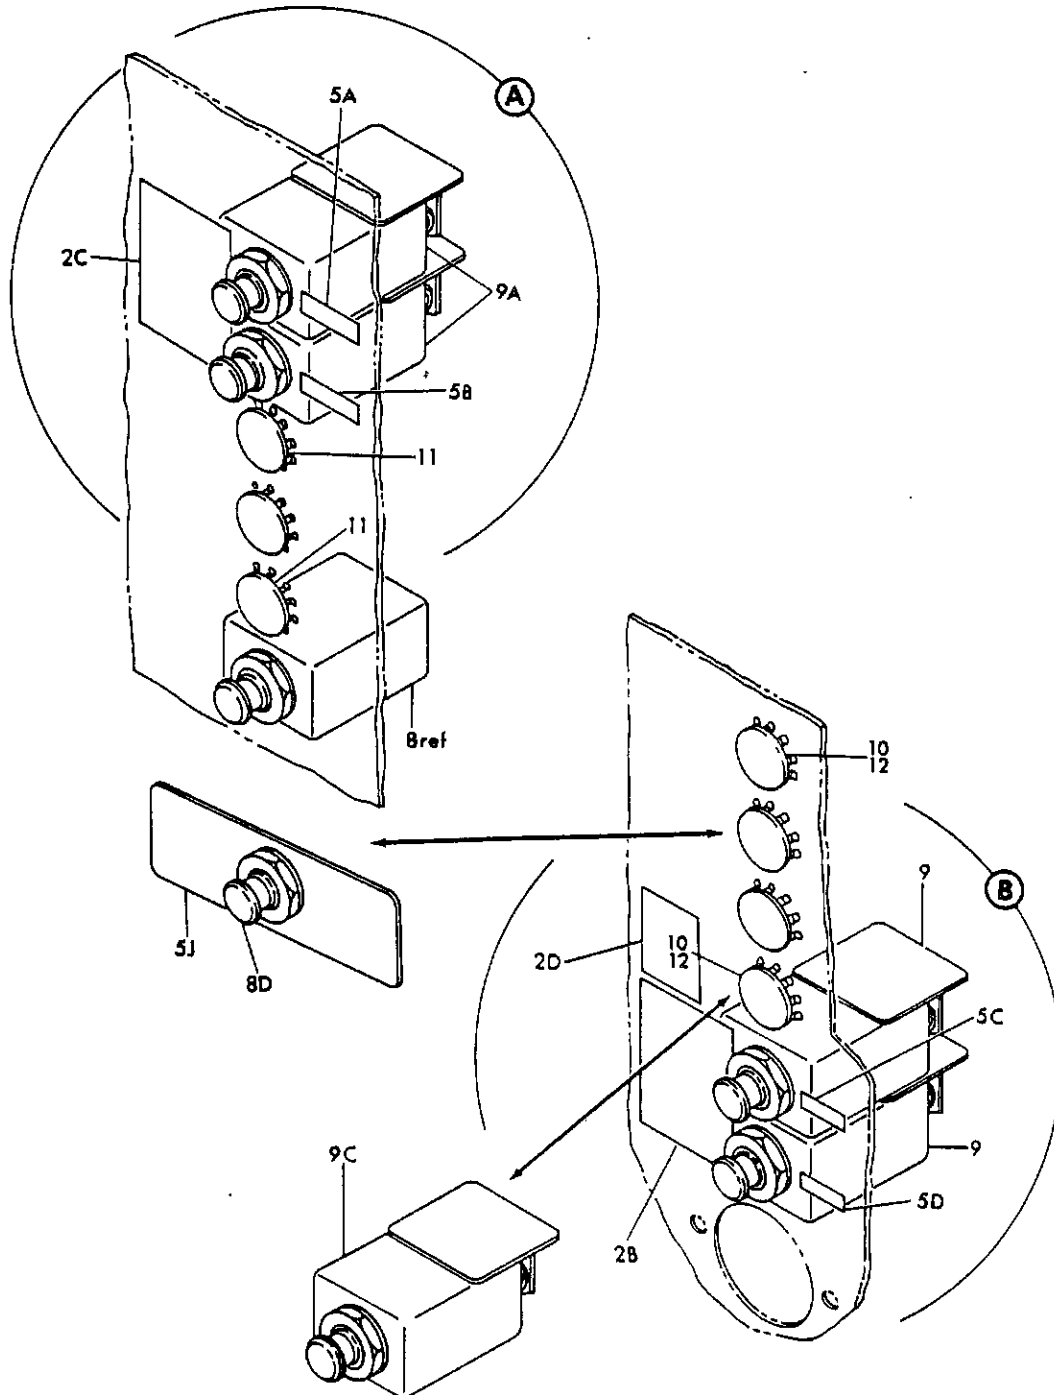


FIGURE 70F. SHIELD ASSY, STATION 335 J27 ELECTRICAL EQUIPMENT (LIGHTS ONLY) (SHEET 2)

NOV 21/90

33-04-70F

DETAILED PARTS LIST
33-04-70F
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
70F	65-58627-18	SHIELD ASSY, STATION 335 J27 ELECTRICAL EQUIPMENT . . .							5199	RF
		(LIGHTS ONLY) (SEE 24-6, FIG. 11N, ITEM 4)								
28	BAC27CEE647	. MARKER-ALUMINUM FOIL, CABIN CEILING LIGHTS.							5199	1
5C	BAC27CEE854	. MARKER-ALUMINUM FOIL, T485.							5199	1
5D	BAC27CEE855	. MARKER-ALUMINUM FOIL, T487.							5199	1
9	BACC18R58	. CIRCUIT BREAKER							5199	2
10	BACP20B43	. PLUG BUTTON							5199	AR
		. FOR REFERENCE TO OTHER SHIELD DETAILS, SEE NHA. . . .							5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										





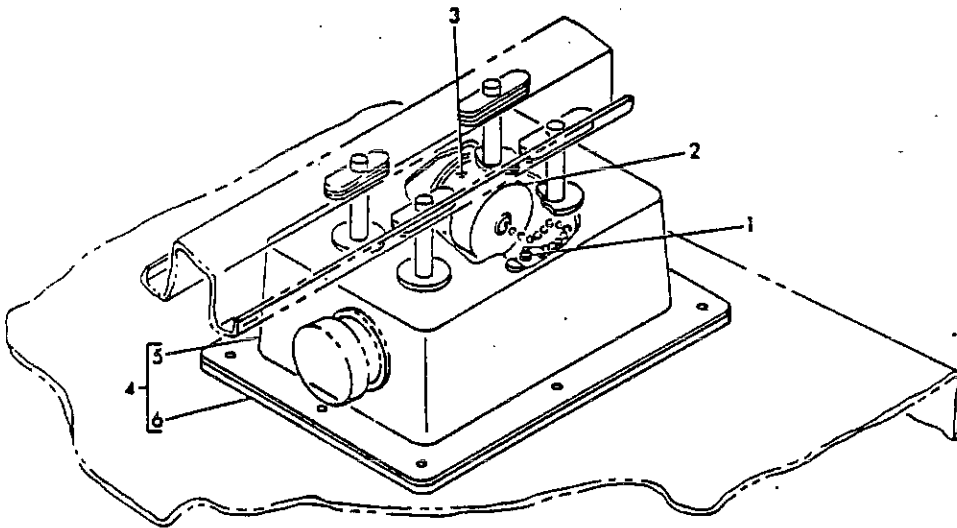


FIGURE 70R. BOX ASSY, ELECTRICAL DISCONNECT

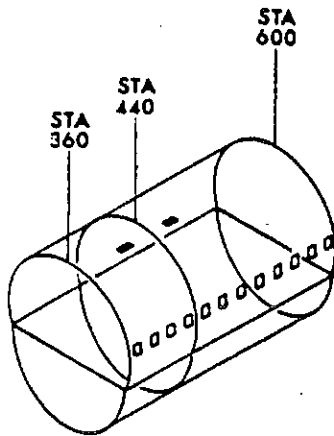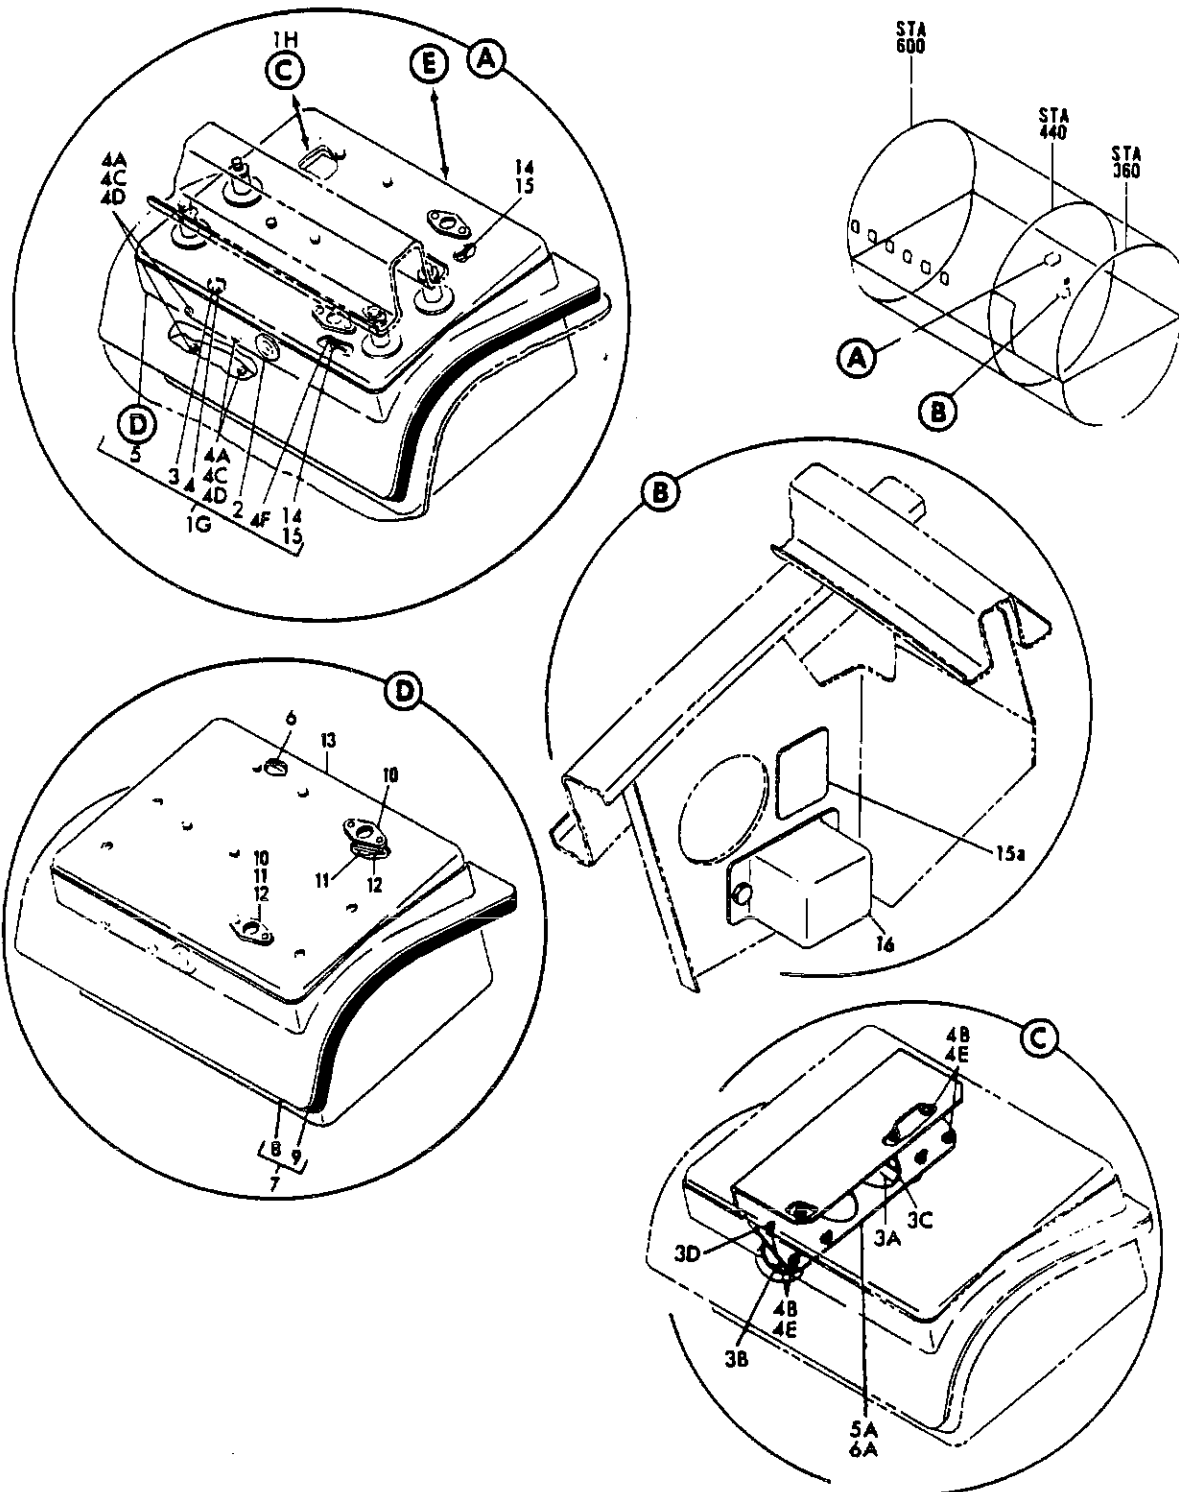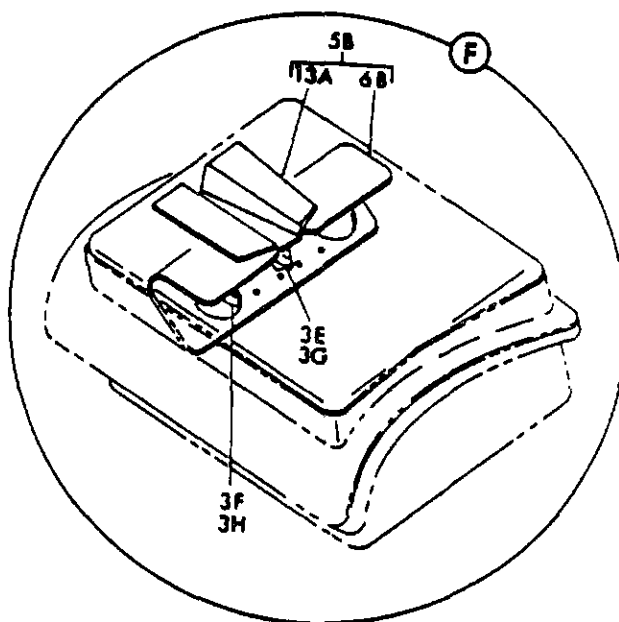

BALLAST INSTL, FORWARD GALLEY CEILING FLUORESCENT LIGHT
FIGURE 71. BOX INSTL, FORWARD GALLEY CEILING FLUORESCENT LIGHT DISCONNECT (SHEET 1)

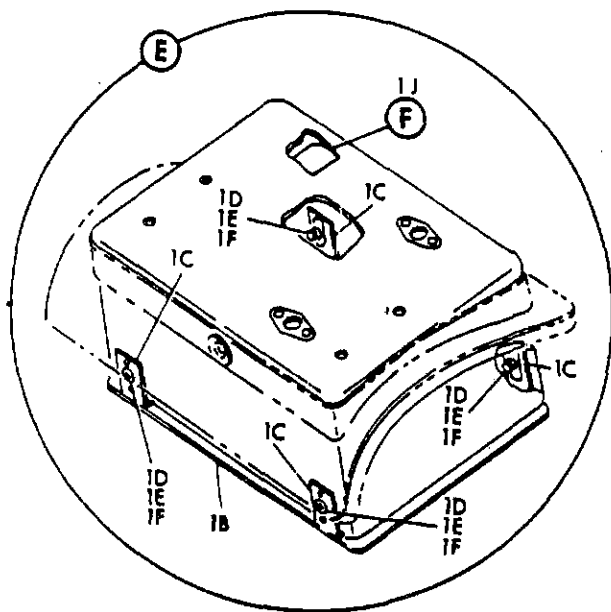

BALLAST INSTL, FORWARD GALLEY CEILING FLUORESCENT LIGHT
FIGURE 71. BOX INSTL, FORWARD GALLEY CEILING FLUORESCENT LIGHT DISCONNECT (SHEET 2)



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE										EFF FROM TO	UNITS PER ASSY
71			BOX INSTL, FORWARD GALLEY CEILING FLUORESCENT LIGHT . . DISCONNECT											RF
		65-33257-1	. BOX INSTL, FORWARD GALLEY CEILING FLUORESCENT LIGHT . DISCONNECT (SEE 24-3, FIG. 2, ITEM 90)											
R	1G	65-33265-11	. . BOX ASSY, ELECTRICAL.										5199	1
R	1G	65-33265-1	. . BOX ASSY, ELECTRICAL (DELETED BY SB 2995)										0150	1
R	1G	65-33265-11	. . BOX ASSY, ELECTRICAL (ADDED BY SB 2995)										0150	1
			ATTACHING PARTS											
		NAS603-16	. . SCREW											4
		BACS18F45B	. . SPACER.											4
		AN970-3	. . WASHER.											8
		NAS680A3	. . NUT											4
			-----*											
		2 NAS1368-4B	. . GROMMET											1
		3 MS25043-22C	. . CAP											1
R	4	BACR11AD22	. . RECEPTACLE.										0150	1
			ATTACHING PARTS											
		4A BACS12CB06-7	. . SCREW											4
		4C AN960PD6	. . WASHER.											4
		4D NAS679A06W	. . NUT											4
			-----*											
		4F 61-38-1	. . BALLAST, (V82255)											1
			(OPTIONAL 27883 (V88204))											
		4F 27883	. . BALLAST, (V88204)											1
			(OPTIONAL TO 61-38-1 (V82255))											
R	5	65-33265-2	. . BOX ASSY, (DELETED BY SB 2995).										0150	1
R	5	65-33265-12	. . BOX ASSY.										5199	1
R	5	65-33265-12	. . BOX ASSY, (ADDED BY SB 2995).										0150	1
R	6	69-26403-1	. . BRACKET, RECEPTACLE (DELETED BY SB 2995).										0150	1
R	6	69-26403-3	. . BRACKET, RECEPTACLE										5199	1
R	6	69-26403-3	. . BRACKET, RECEPTACLE (ADDED BY SB 2995).										0150	1
			ATTACHING PARTS											
		MS20470D3	. . RIVET											4
		AN960PD8	. . WASHER.											4
			-----*											
R	7	65-33265-3	. . SEAL ASSY, (DELETED BY SB 2995)										0150	1
R	7	65-33265-13	. . SEAL ASSY										5199	1
R	7	65-33265-13	. . SEAL ASSY, (ADDED BY SB 2995)										0150	1
R	8	65-33265-5	. . ANGLE, (DELETED BY SB 2995)										0150	1
R	8	65-33265-15	. . ANGLE										5199	1
R	8	65-33265-15	. . ANGLE, (ADDED BY SB 2995)										0150	1
R	9	65-33265-6	. . GASKET, (DELETED BY SB 2995).										0150	1
R	9	65-33265-16	. . GASKET.										5199	1
R	9	65-33265-16	. . GASKET, (ADDED BY SB 2995).										0150	1
		10 NAS463WDD10	. . SHIM.											2
		11 AN3-3A	. . BOLT.											2
		12 BACR10G31	. . RETAINER.											2
R	13	65-33265-4	. . BOX, (DELETED BY SB 2995)										0150	1
R	13	65-33265-14	. . BOX										5199	1
R	13	65-33265-14	. . BOX, (ADDED BY SB 2995)										0150	1
		14 AN960PD10	. . WASHER.											2
		15 NAS679A3W	. . NUT											2
MISSING ITEM NUMBERS ARE NOT APPLICABLE														

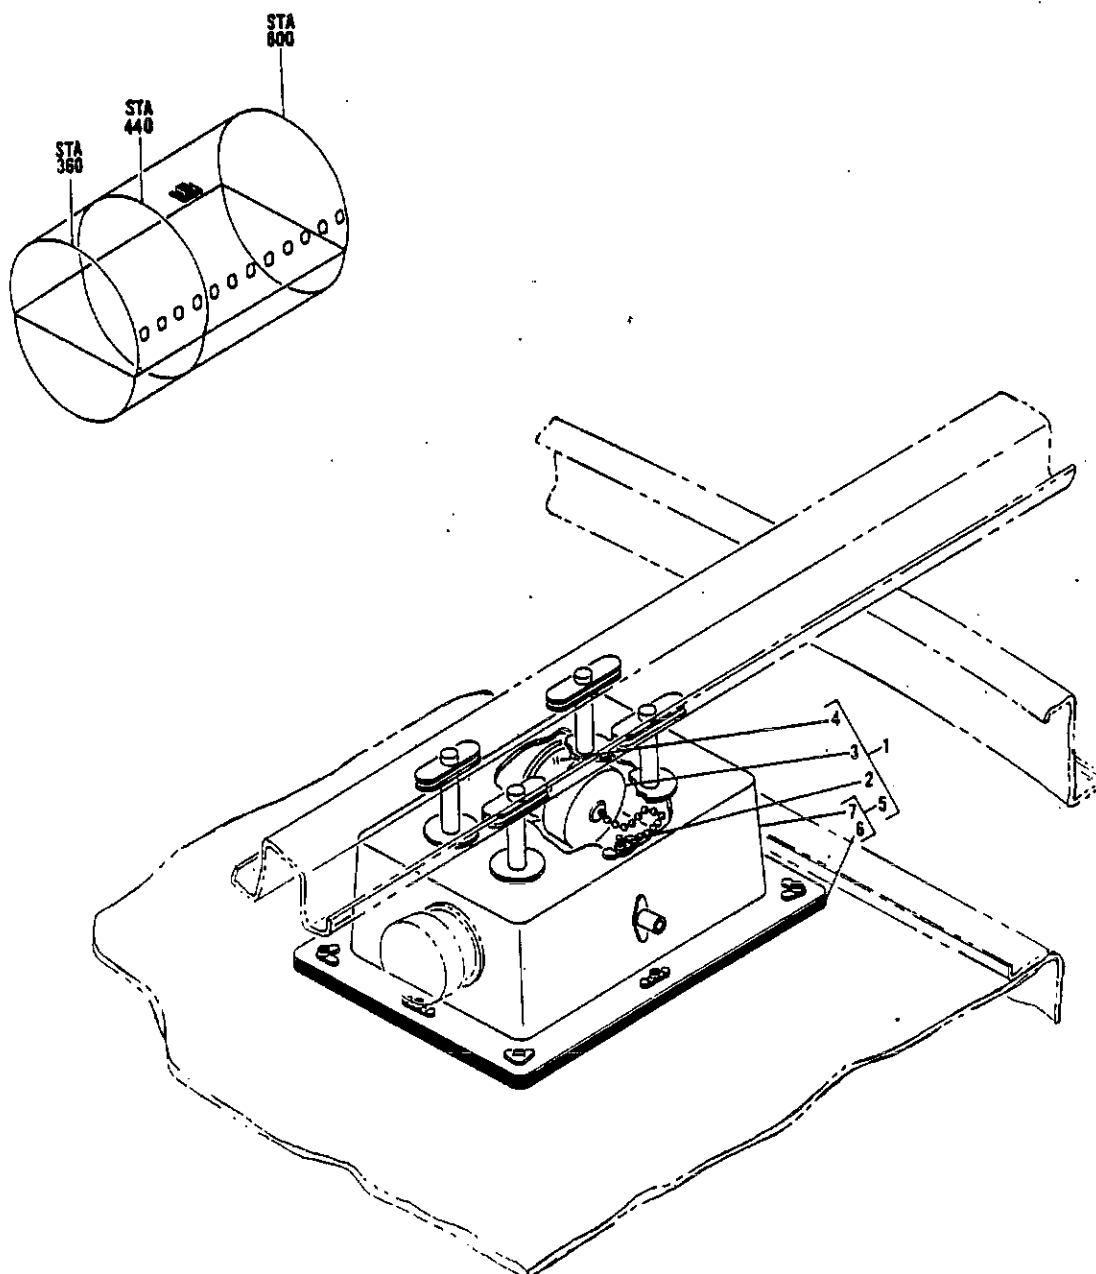


FIGURE 72. BOX INSTL, FORWARD LOWERED LIGHTS DISCONNECT



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 8 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	72	65-31943-1		BOX INSTL, FORWARD LOWERED CEILING LIGHTS DISCONNECT. . (SEE 24-3, FIG. 2, ITEM 152)		RF
	1	65-32265-2		. BOX ASSY, ELECTRICAL DISCONNECT	0150	1
R	1	65-32265-25		. BOX ASSY, ELECTRICAL DISCONNECT	5199	1
				ATTACHING PARTS		
		NAS603-28P		. SCREW		4
		BACS18F1108		. SPACER.		4
		AN970-3		. WASHER.		8
				-----*		
	2	NAS600-6P		. . SCREW		1
R	3	MS25043-28C		. . CAP	0150	1
R	3	MS27295-2		. . CAP	5199	1
R	4	BACR11AD28		. . RECEPTACLE.	0150	1
R	4	MS27297-2		. . RECEPTACLE.	5199	1
				ATTACHING PARTS		
R		NAS601-6P		. . SCREW	0150	4
R		NAS600-6P		. . SCREW	5199	4
R		AN960PD6		. . WASHER.	0150	4
R		AN960PD4		. . WASHER.	5199	4
R		BACN10JC06		. . NUT	0150	4
R		BACN10JC04		. . NUT	5199	4
				-----*		
R	5	65-32265-5		. . BOX ASSY.	0150	1
R	5	65-32265-24		. . BOX ASSY.	5199	1
	6	65-32265-11		. . GASKET.		1
R	7	65-32265-8		. . BOX	0150	1
R	7	65-32265-26		. . BOX	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

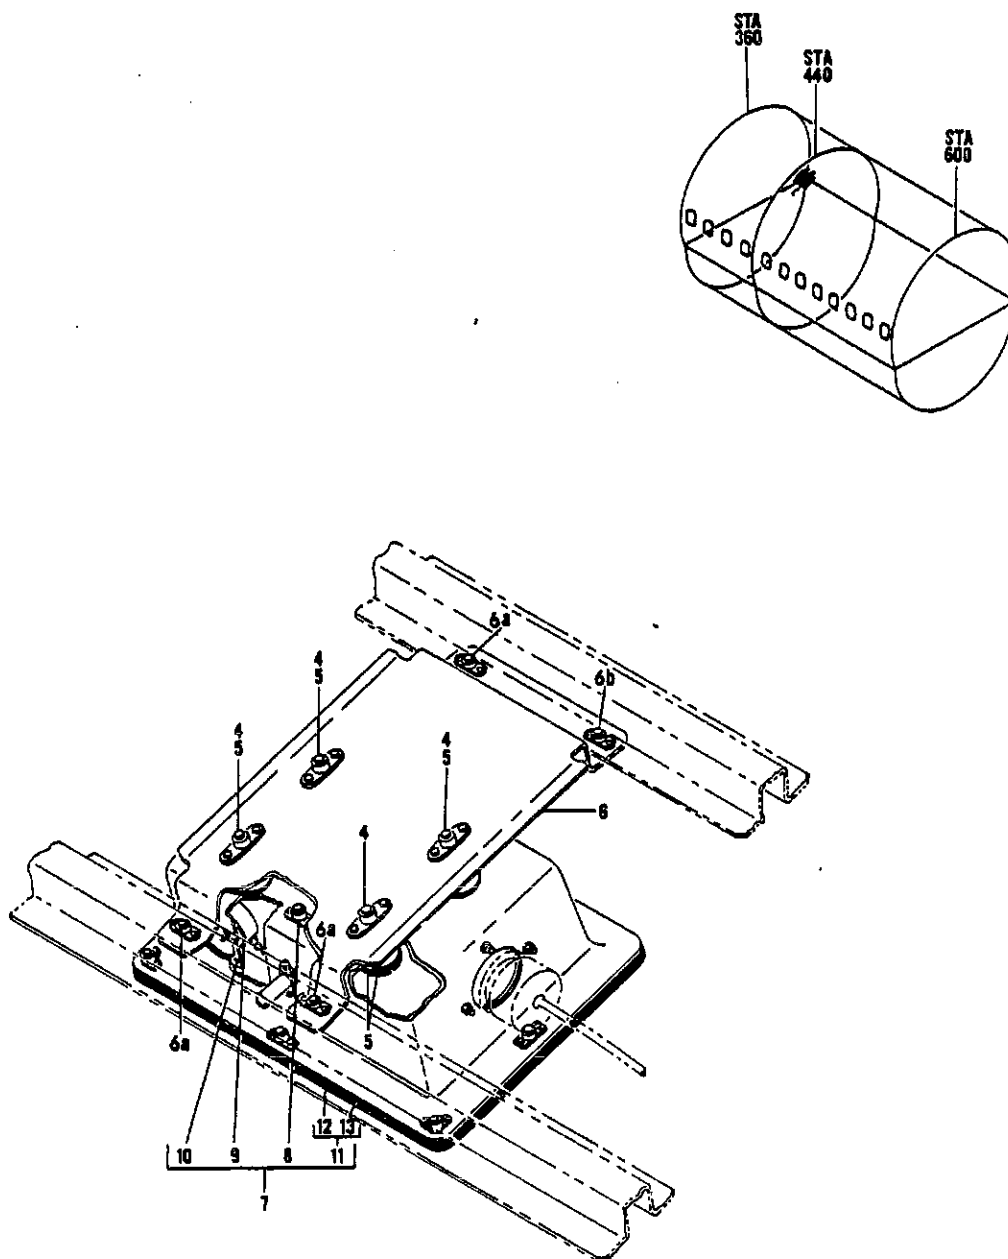


FIGURE 73. BOX INSTL, MURAL LIGHT AND LOUDSPEAKER DISCONNECT



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	73	65-32608-1	BOX INSTL, MURAL LIGHT AND LOUDSPEAKER DISCONNECT (SEE 24-3, FIG. 2, ITEM 153)	RF
R	4	NAS603-22P	. SCREW	4
R	5	AN970-3	. WASHER.	8
R	6	69-31191-1	. BRACKET ASSY, SUPPORT	1
R		(OPTIONAL TO AND REPLACEMENT FOR 69-26319-1)		
R	6	69-26319-1	. BRACKET ASSY, SUPPORT (NOT RELEASED).	1
R		(OPTIONAL AND FOR REPLACEMENT ORDER 69-31191-1)		
R	6A	NAS603-6P	ATTACHING PARTS	
R		. SCREW	5151	3
R	7	65-32265-3	. BOX ASSY, ELECTRICAL DISCONNECT	1
R	8	NAS600-6	. SCREW	1
R	9	MS25043-16C	. CAP	1
R	10	BACR11AD16S	. RECEPTACLE.	1
R		ATTACHING PARTS		
R		. SCREW	5151	4
R		. WASHER.	5151	4
R		. NUT	5151	4
R	11	65-32265-6	. BOX ASSY, ELECTRICAL DISCONNECT	1
R	12	65-32265-13	. GASKET, ELECTRICAL DISCONNECT BOX	1
R	13	65-32265-9	. BOX, ELECTRICAL DISCONNECT.	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

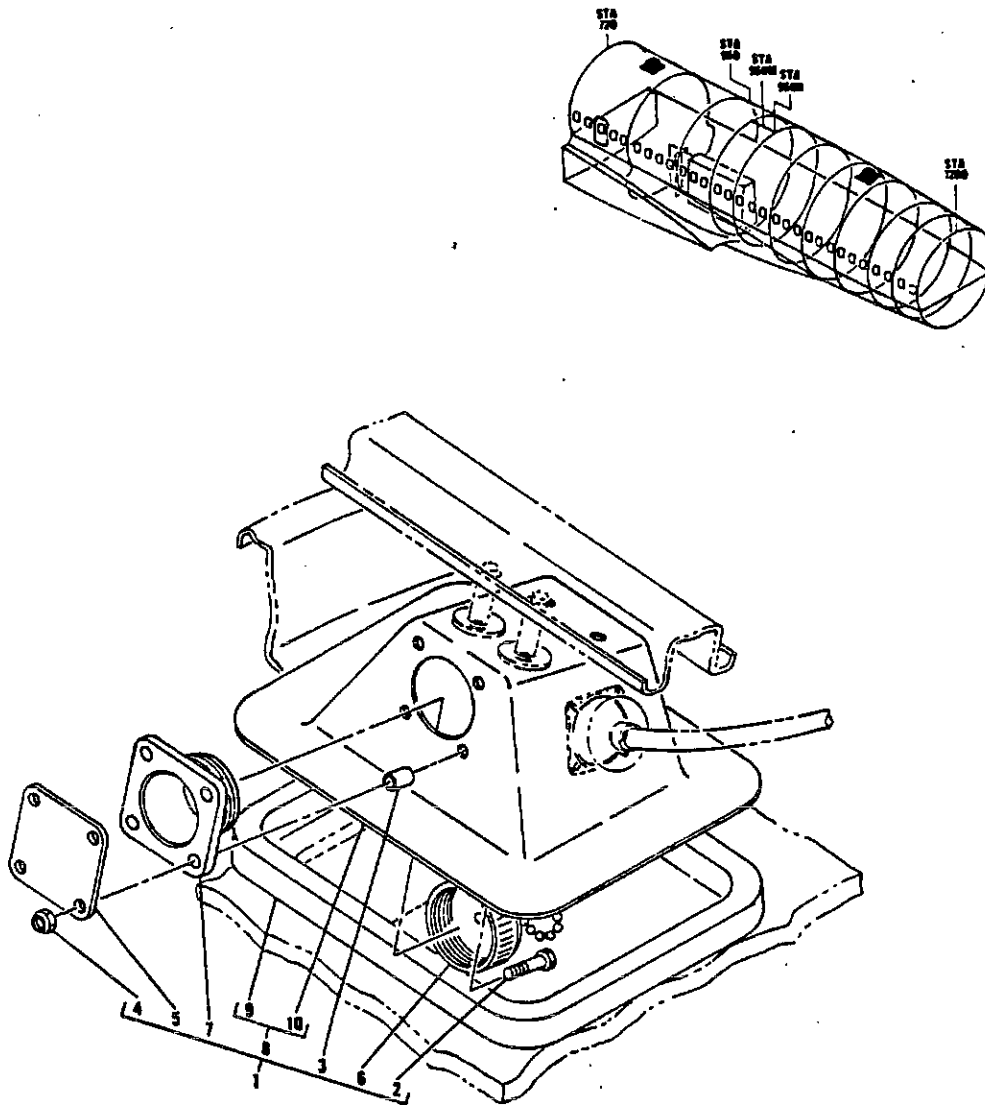


FIGURE 74. BOX INSTL. STATION 804 AND 1144 CENTER LOWERED CEILING LIGHT DISCONNECT



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
74	65-33155-1		BOX INSTL, STATION 804 CENTER LOWERED CEILING LIGHT . .		RF
	65-33155-2		DISCONNECT (SEE 24-3, FIG. 2, ITEM 154)		
			BOX INSTL, STATION 1144 CENTER LOWERED CEILING LIGHT. .		RF
			DISCONNECT (SEE 24-3, FIG. 3, ITEM 45)		
1	69-26214-1		. BOX ASSY, ELECTRICAL DISCONNECT		1
			ATTACHING PARTS		
	NAS603-28		. SCREW		4
	BACS18F115B		. SPACER.		4
	AN970-3		. WASHER.		8
2	NAS600-12		. . SCREW		4
3	NAS43DD0-20		. . SPACER.		4
4	NAS679A04W		. . NUT		4
5	BACP19B8		. . PLATE		1
6	MS25043-22C		. . CAP		1
7	BACR11AD22		. . RECEPTACLE.		1
8	69-26214-2		. . BOX ASSY.		1
9	69-26214-4		. . GASKET.		1
10	69-26214-3		. . BOX		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					


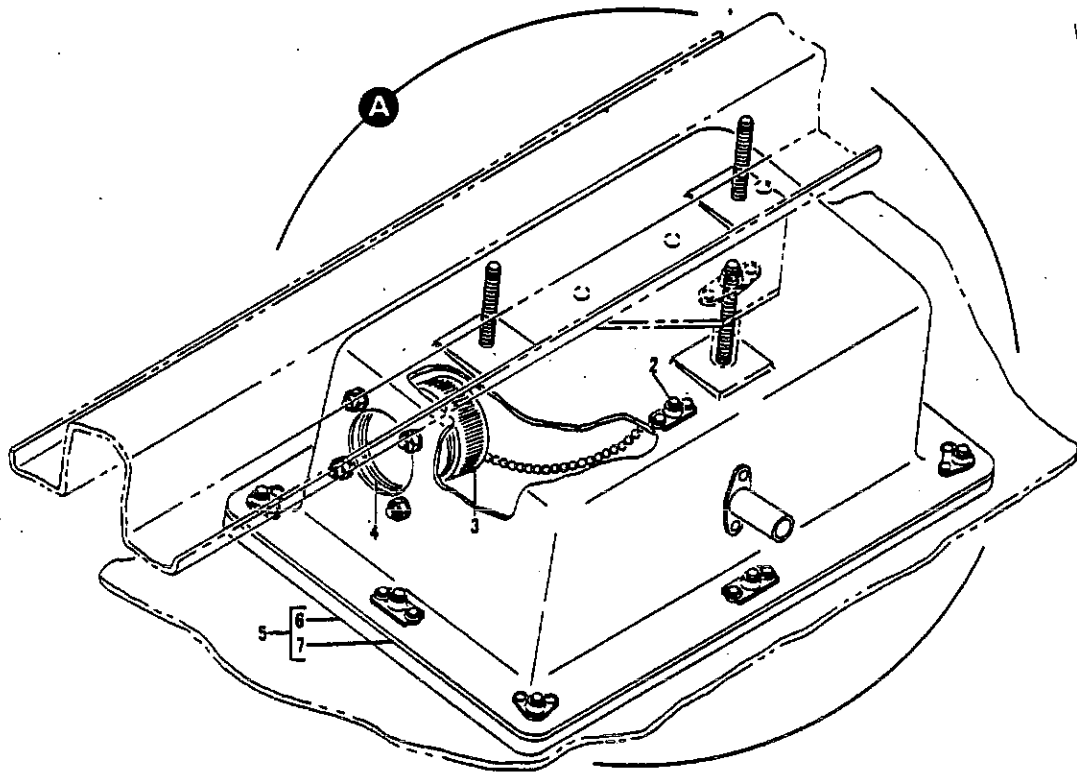


FIGURE 75. BOX INSTL, AFT GALLEY CEILING FLUORESCENT LIGHT DISCONNECT

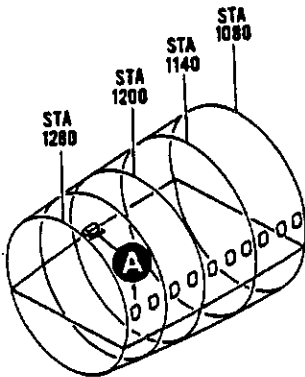

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
75	65-32294-1		BOX INSTL, AFT GALLEY CEILING FLUORESCENT LIGHT DISCONNECT (SEE 24-3, FIG. 3, ITEM 47)		RF
1	65-32265-1		. BOX ASSY, ELECTRICAL.		1
1A	NAS603-22P		. ATTACHING PARTS		2
1B	NAS603-24P		. SCREW		1
			. SCREW		
2	NAS600-6P		. . SCREW		1
3	MS25043-18C		. . CAP		1
4	BACR11AD18		. . RECEPTACLE.		1
			. ATTACHING PARTS		
	NAS600-6P		. . SCREW		4
	AN960PD4		. . WASHER.		4
	BACN10JC04		. . NUT		4
					
5	65-32265-4		. . BOX ASSY, ELECTRICAL.		1
6	65-32265-11		. . . GASKET, ELECTRICAL DISCONNECT BOX		1
7	65-32265-7		. . . BDX		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					


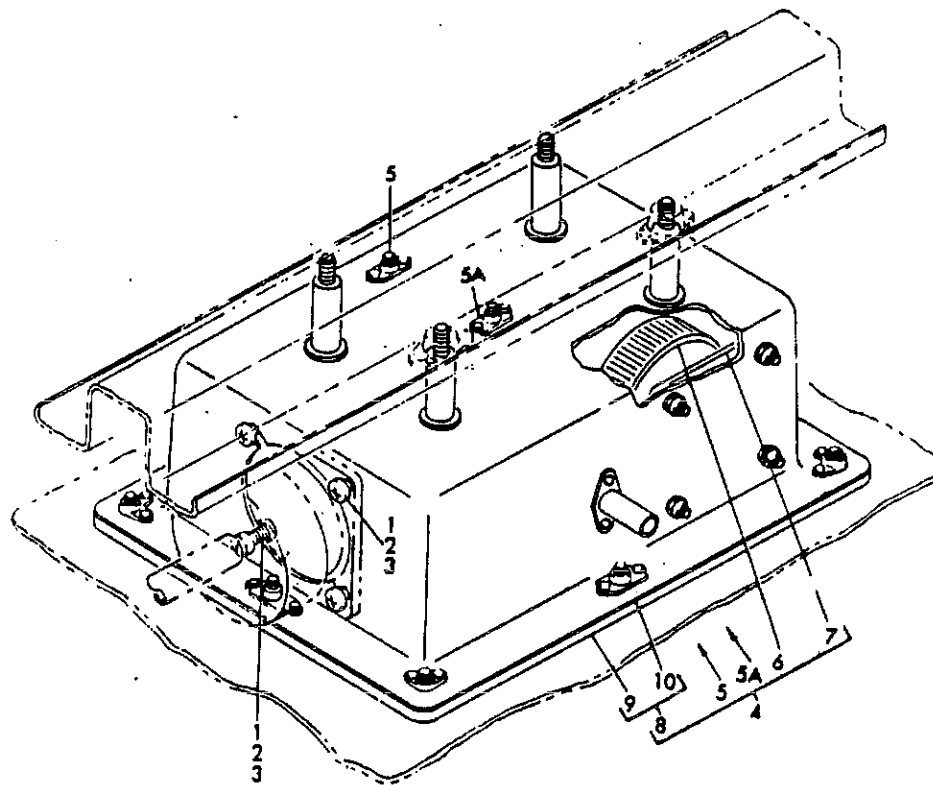


FIGURE 76. BOX INSTL, AFT LOWERED CEILING LIGHTS DISCONNECT

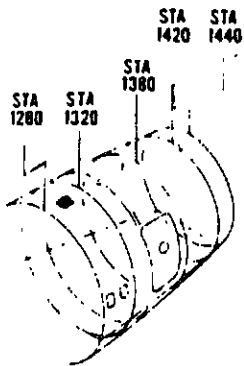

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
76		65-32250-1	BOX INSTL, AFT LOWERED CEILING LIGHTS DISCONNECT (SEE . 24-3, FIG. 3, ITEM 46)								RF
R	1	NAS600-6P	. SCREW							5199	4
R	1	NAS601-6P	. SCREW							0150	4
R	2	AN960PD4	. WASHER.							5199	4
R	2	AN960PD6	. WASHER.							0150	4
R	3	BACN10JC04	. NUT							5199	4
R	3	BACN10JC06	. NUT							0150	4
R	4	65-32265-2	. BOX ASSY, ELECTRICAL.							0150	1
R	4	65-32265-25	. BOX ASSY, ELECTRICAL.							5199	1
			ATTACHING PARTS								
		NAS603-26P	. SCREW								4
		BACS18F105B	. SPACER.								4
		AN970-3	. WASHER.								8
			-----*								
R	5	NAS600-6P	. SCREW							0150	1
R	5A	NAS600-6P	. SCREW							5199	1
R	6	MS25043-28C	. CAP							0150	1
R	6	MS27295-2	. CAP							5199	1
R	7	BACR11AD28	. RECEPTACLE.							0150	1
R	7	MS27297-2	. RECEPTACLE.							5199	1
			ATTACHING PARTS								
R		NAS601-6P	. SCREW							0150	4
R		NAS600-6P	. SCREW							5199	4
R		AN960PD6	. WASHER.							0150	4
R		AN960PD4	. WASHER.							5199	4
R		BACN10JC06	. NUT							0150	4
R		BACN10JC04	. NUT							5199	4
			-----*								
R	8	65-32265-5	. BOX ASSY.							0150	1
R	8	65-32265-24	. BOX ASSY.							5199	1
	9	65-32265-11	. GASKET.								1
R	10	65-32265-8	. BOX							0150	1
R	10	65-32265-26	. BOX							5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

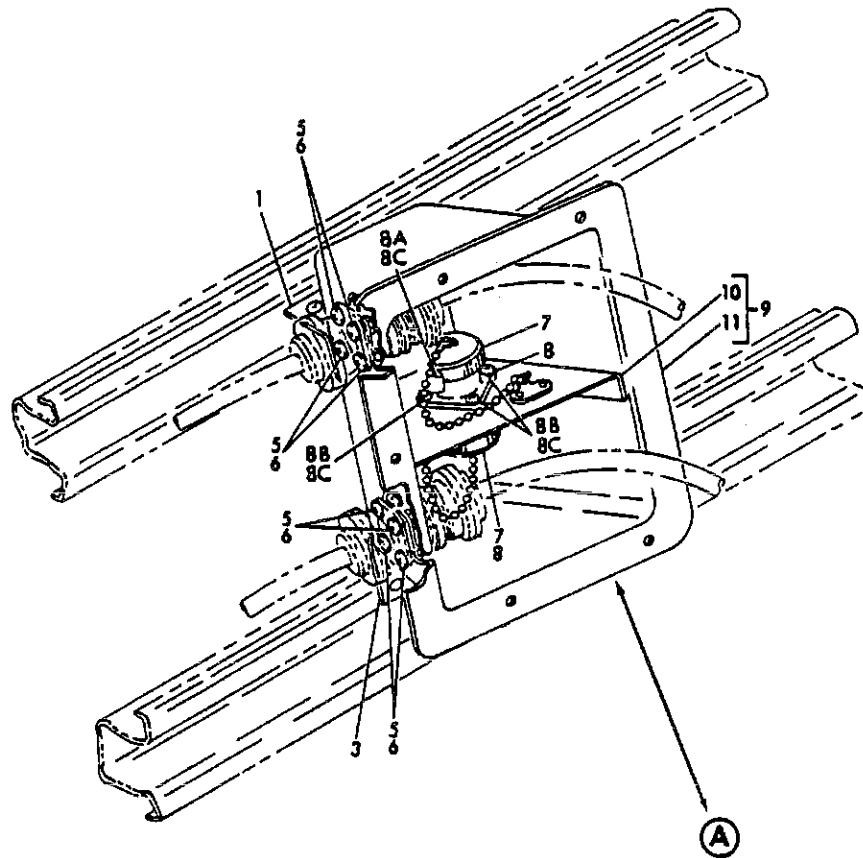
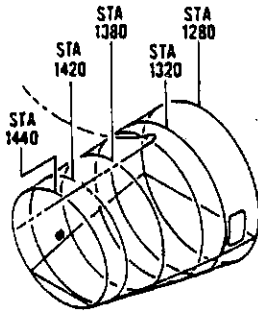


FIGURE 76D. 80X INS(L, LH AFT COAT COMPARTMENT ELECTRICAL DISCONNECT (SHEET 1)

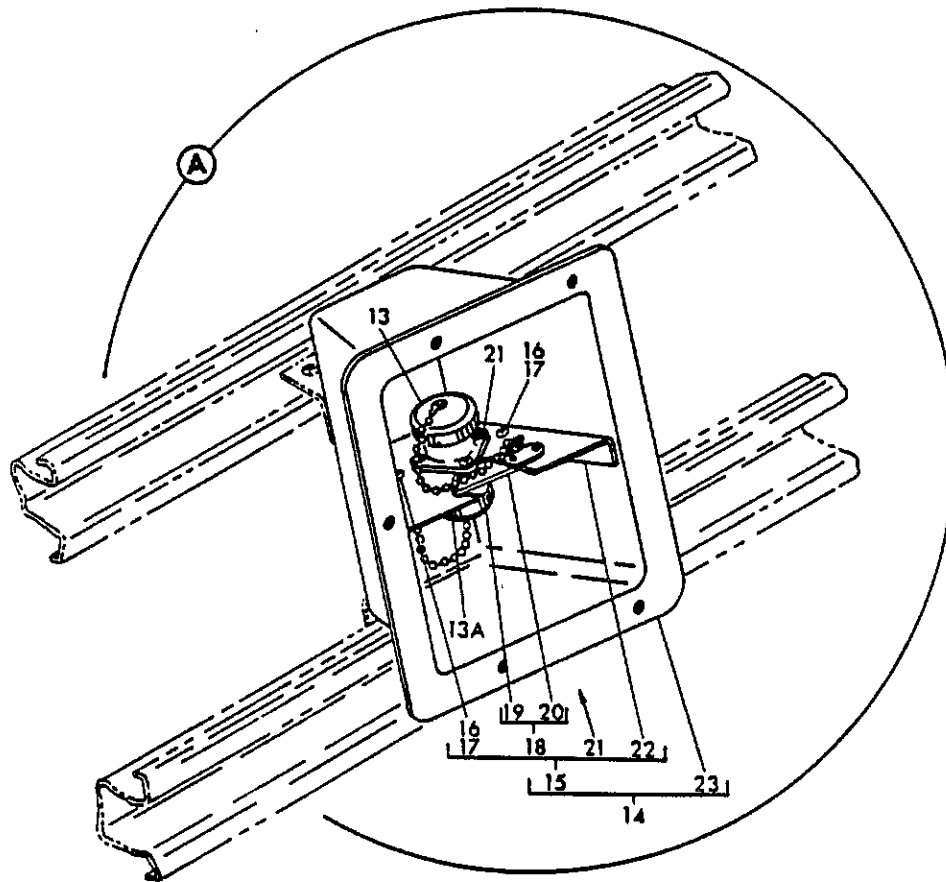


FIGURE 76D. BOX INSTL, LH AFT COAT COMPARTMENT ELECT. DISCONNECT (SHEET 2)


NOV 21/90

33-04-760


DETAILED PARTS LIST
33-04-760
PAGE 1

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	76D	65-31714-1	BOX INSTL, LH AFT COAT COMPARTMENT ELECTRICAL							5199	RF
R			DISCONNECT (SEE 24-3, FIG. 3, ITEM 48)								
R	1	69-24792-1	. BRACKET ASSY, BOX SUPPORT							5199	1
R		NAS603-5P	. SCREW							5199	2
R			-----*								
R	1	69-24792-2	. . BRACKET							5199	1
R	3	69-24792-3	. BRACKET ASSY, BOX SUPPORT							5199	1
R			ATTACHING PARTS								
R		NAS603-5P	. SCREW							5199	2
R			-----*								
R	3	69-24792-4	. . BRACKET							5199	1
R	5	NAS600-6P	. SCREW							5199	8
R	6	BACN10JC04	. NUT							5199	8
R		69-24764-1	. BOX ASSY, LH AFT COAT COMPARTMENT ELECTRICAL							5199	1
R			DISCONNECT								
R	7	MS25043-20C	. . CAP							5199	2
R	8	BACR11AD20	. . RECEPTACLE							5199	2
R			ATTACHING PARTS								
R	8A	NAS600-9	. . SCREW							5199	1
R	8B	NAS600-7	. . SCREW							5199	3
R	8C	NAS679A04W	. . NUT							5199	4
R			-----*								
R	9	69-24764-2	. . BOX ASSY.							5199	1
R	10	69-24764-4	. . . BRACKET							5199	1
R	11	69-24764-3	. . . BOX							5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

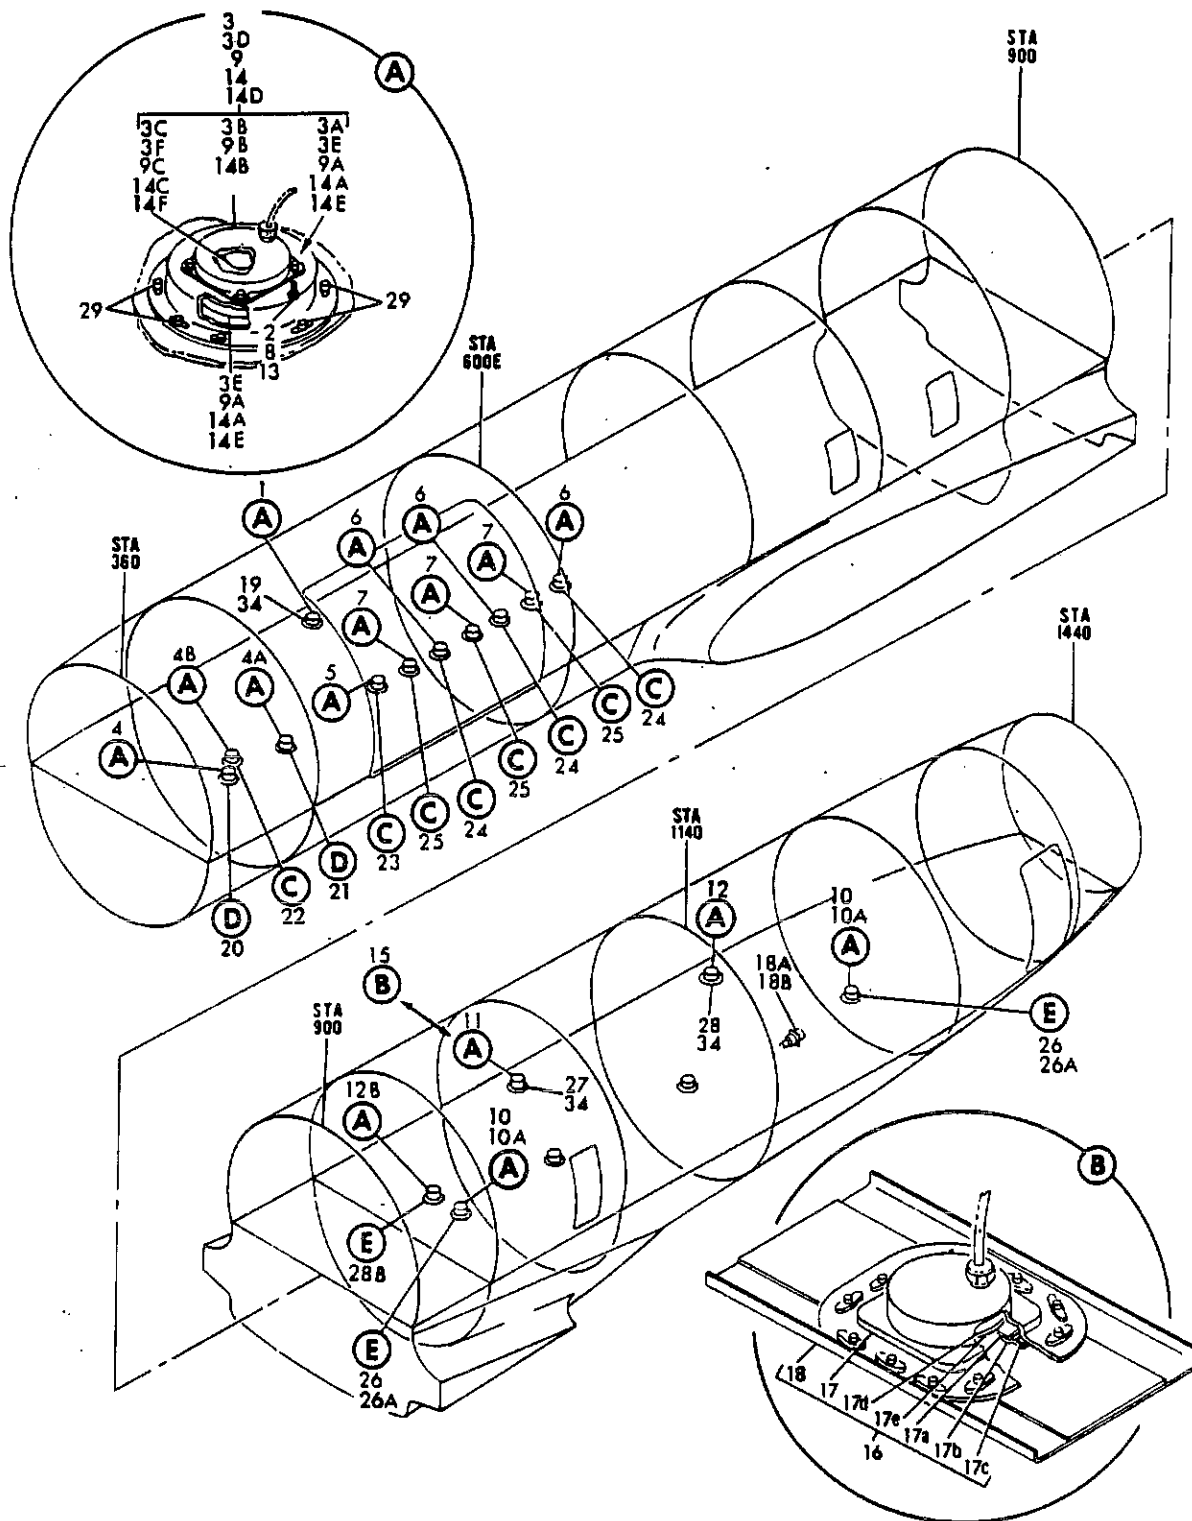

LIGHT INSTL. SECTION 53 AND 56 CARGO COMPARTMENT DOME
FIGURE 77. SUPPORT INSTL. SECTION 53 AND 56 CARGO COMPARTMENT DOME LIGHT (SHEET 1)

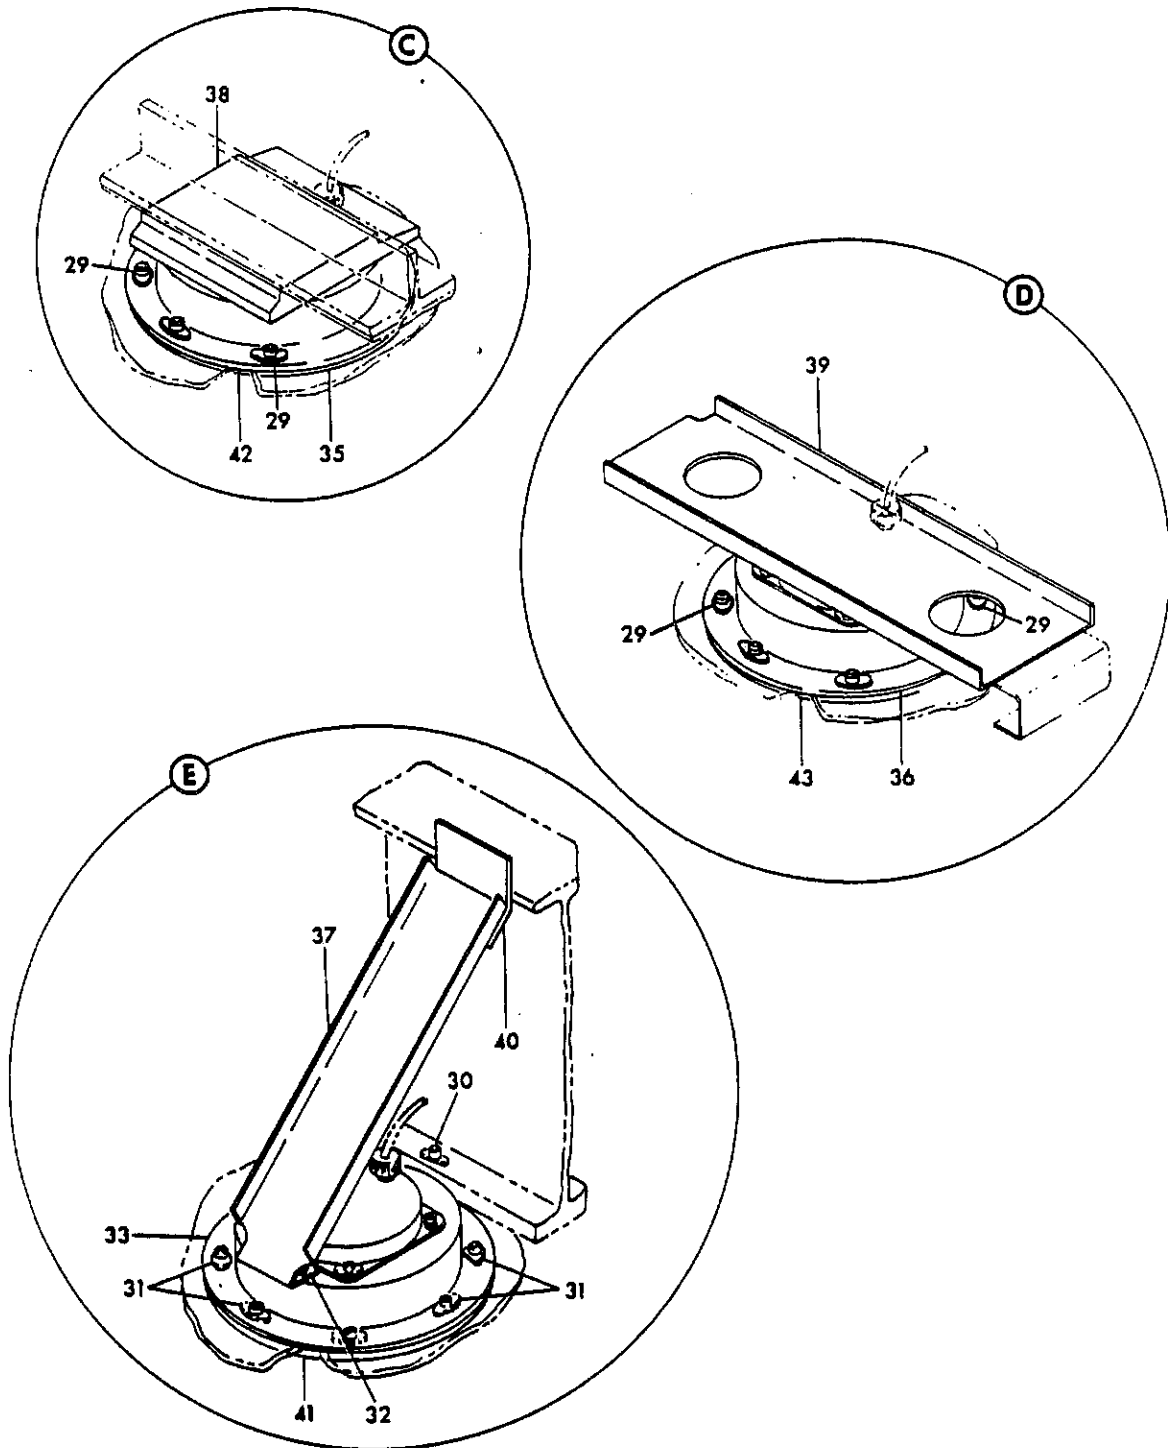

LIGHT INSTL. SECTION 53 AND 56 CARGO COMPARTMENT DOME
FIGURE 77. SUPPORT INSTL., SECTION 53 AND 56 CARGO COMPARTMENT DOME LIGHT (SHEET 2)

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
77		LIGHT INSTL, SECTION 53 AND 56 CARGO COMPARTMENT DOME . SUPPORT INSTL, SECTION 53 AND 56 CARGO COMPARTMENT DOME . LIGHT		
1	65-1669-24	. LIGHT INSTL, SECTION 53 CARGO COMPARTMENT DOME (SEE . 24-3, FIG. 2, ITEM 1)		RF
2	NAS601-6 69-12253-3	. . SCREW BUNDLE ASSY, FORWARD CARGO COMPARTMENT LIGHTS . . . ELECTRICAL		4 1
3	B9845-3-307	. . . LIGHT ASSY, (WHITE) (V72914). (OPTIONAL B9845-8-307 (V72914))		1
3	B9845-8-307	. . . LIGHT ASSY, (CLEAR) (V72914). (OPTIONAL TO B9845-3-307 (V72914))		1
M 3A	B9845-9	 COVER ASSY, (V72914) (INCLUDES LENS A7029-1). . (USED ON B9845-3-307)		1
M 3A	B9845-12	 COVER ASSY, (V72914) (INCLUDES LENS A7029-4). . (USED ON B9845-8-307)		1
M 3B	B9845-14-307	 HOUSING ASSY, (V72914).		1
M 3C	307	 LAMP, (V08806).		1
4	65-1669-28	. LIGHT INSTL, SECTION 53 CARGO COMPARTMENT DOME (SEE . 24-3, FIG. 2, ITEM 1A)		RF
4A	65-1669-28	. LIGHT INSTL, SECTION 53 CARGO COMPARTMENT DOME (SEE . 24-3, FIG. 2, ITEM 1B)		RF
4B	65-1669-34	. LIGHT INSTL, SECTION 53 CARGO COMPARTMENT DOME (SEE . 24-3, FIG. 2, ITEM 1D)	0150	RF
5	65-1669-30	. LIGHT INSTL, SECTION 53 CARGO COMPARTMENT DOME (SEE . 24-3, FIG. 2, ITEM 1C)		RF
7	65-1669-30	. LIGHT INSTL, SECTION 53 CARGO COMPARTMENT DOME (SEE . 24-3, FIG. 2, ITEM 1C)		RF
8	NAS601-6 69-12253-3	. . SCREW BUNDLE ASSY, FORWARD CARGO COMPARTMENT LIGHTS . . . ELECTRICAL		4 1
9	B9845-3-307	. . . LIGHT ASSY, (WHITE) (V72914). (OPTIONAL B9845-8-307 (V72914))		1
9	B9845-8-307	. . . LIGHT ASSY, (CLEAR) (V72914). (OPTIONAL TO B9845-3-307 (V72914))		1
M 9A	B9845-9	 COVER ASSY, (V72914) (INCLUDES LENS A7029-1). . (USED ON B9845-3-307)		1
M 9A	B9845-12	 COVER ASSY, (V72914) (INCLUDES LENS A7029-4). . (USED ON B9845-8-307)		1
M 9B	B9845-14-307	 HOUSING ASSY, (V72914).		1
M 9C	307	 LAMP, (V08806).		1
10	65-1669-32	. LIGHT INSTL, SECTION 56 CARGO COMPARTMENT DOME (SEE . 24-3, FIG. 3, ITEM 1)		RF
10A	65-1669-32	. LIGHT INSTL, SECTION 56 CARGO COMPARTMENT DOME (SEE . 24-3, FIG. 3, ITEM 1)		RF
11	65-1669-24	. LIGHT INSTL, SECTION 56 CARGO COMPARTMENT DOME (SEE . 24-3, FIG. 3, ITEM 2)		RF
12	65-1669-24	. LIGHT INSTL, SECTION 56 CARGO COMPARTMENT DOME (SEE . 24-3, FIG. 3, ITEM 2A)		RF
13	NAS601-6 69-12253-3	. . SCREW BUNDLE ASSY, AFT CARGO COMPARTMENT LIGHTS ELECTRICAL		4 1
14	B9845-3-307	. . . LIGHT ASSY, (WHITE) (V72914). (OPTIONAL B9845-8-307 (V72914))		1
14	B9845-8-307	. . . LIGHT ASSY, (CLEAR) (V72914). (OPTIONAL TO B9845-3-307 (V72914))		1
M 14A	B9845-9	 COVER ASSY, (V72914) (INCLUDES LENS A7029-1). . (USED ON B9845-3-307)		1
M 14A	B9845-12	 COVER ASSY, (V72914) (INCLUDES LENS A7029-4). . (USED ON B9845-8-307)		1
M 14B	B9845-14-307	 HOUSING ASSY, (V72914).		1
M 14C	307	 LAMP, (V08806).		1
19	65-1669-25	. SUPPORT INSTL, (SEE 24-3, FIG. 2, ITEM 1E).		RF
20	65-1669-29	. SUPPORT INSTL, (SEE 24-3, FIG. 2, ITEM 1F).		RF
21	65-1669-29	. SUPPORT INSTL, (SEE 24-3, FIG. 2, ITEM 1G).		RF
22	65-1669-35	. SUPPORT INSTL, (SEE 24-3, FIG. 2, ITEM 1J).	0150	RF
23	65-1669-31	. SUPPORT INSTL, (SEE 24-3, FIG. 2, ITEM 1H).		RF
25	65-1669-31	. SUPPORT INSTL, (SEE 24-3, FIG. 2, ITEM 1H).		RF
26	65-1669-33	. SUPPORT INSTL, (SEE 24-3, FIG. 3, ITEM 1A).		RF
26A	65-1669-33	. SUPPORT INSTL, (SEE 24-3, FIG. 3, ITEM 1A).		RF
27	65-1669-25	. SUPPORT INSTL, (SEE 24-3, FIG. 3, ITEM 2C).		RF
28	65-1669-25	. SUPPORT INSTL, (SEE 24-3, FIG. 3, ITEM 2D).		RF
29	NAS514P1032-7	. . SCREW		8
30	NAS514P1032-7	. . SCREW, (USED ON 65-1669-33, -37).		7
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
R	77 31	NAS514P1032-10	1	2	3	4	5	6	7		1
	32	NAS602-5	1	2	3	4	5	6	7		2
	33	90-9146-1	1	2	3	4	5	6	7		1
	34	90-9146-4	1	2	3	4	5	6	7		1
	35	90-9146	1	2	3	4	5	6	7		1
	35	90-9146	1	2	3	4	5	6	7	0150	1
	36	90-9146	1	2	3	4	5	6	7		1
	37	90-9166-12	1	2	3	4	5	6	7		1
	38	90-9166-8	1	2	3	4	5	6	7		1
	38	90-9166-8	1	2	3	4	5	6	7	0150	1
	39	90-9166-9	1	2	3	4	5	6	7		1
	40	90-9166-14	1	2	3	4	5	6	7		1
	41	60-4467-1	1	2	3	4	5	6	7		1
	42	60-4467-1	1	2	3	4	5	6	7		1
	42	60-4467-1	1	2	3	4	5	6	7	0150	1
	43	60-4467-1	1	2	3	4	5	6	7		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

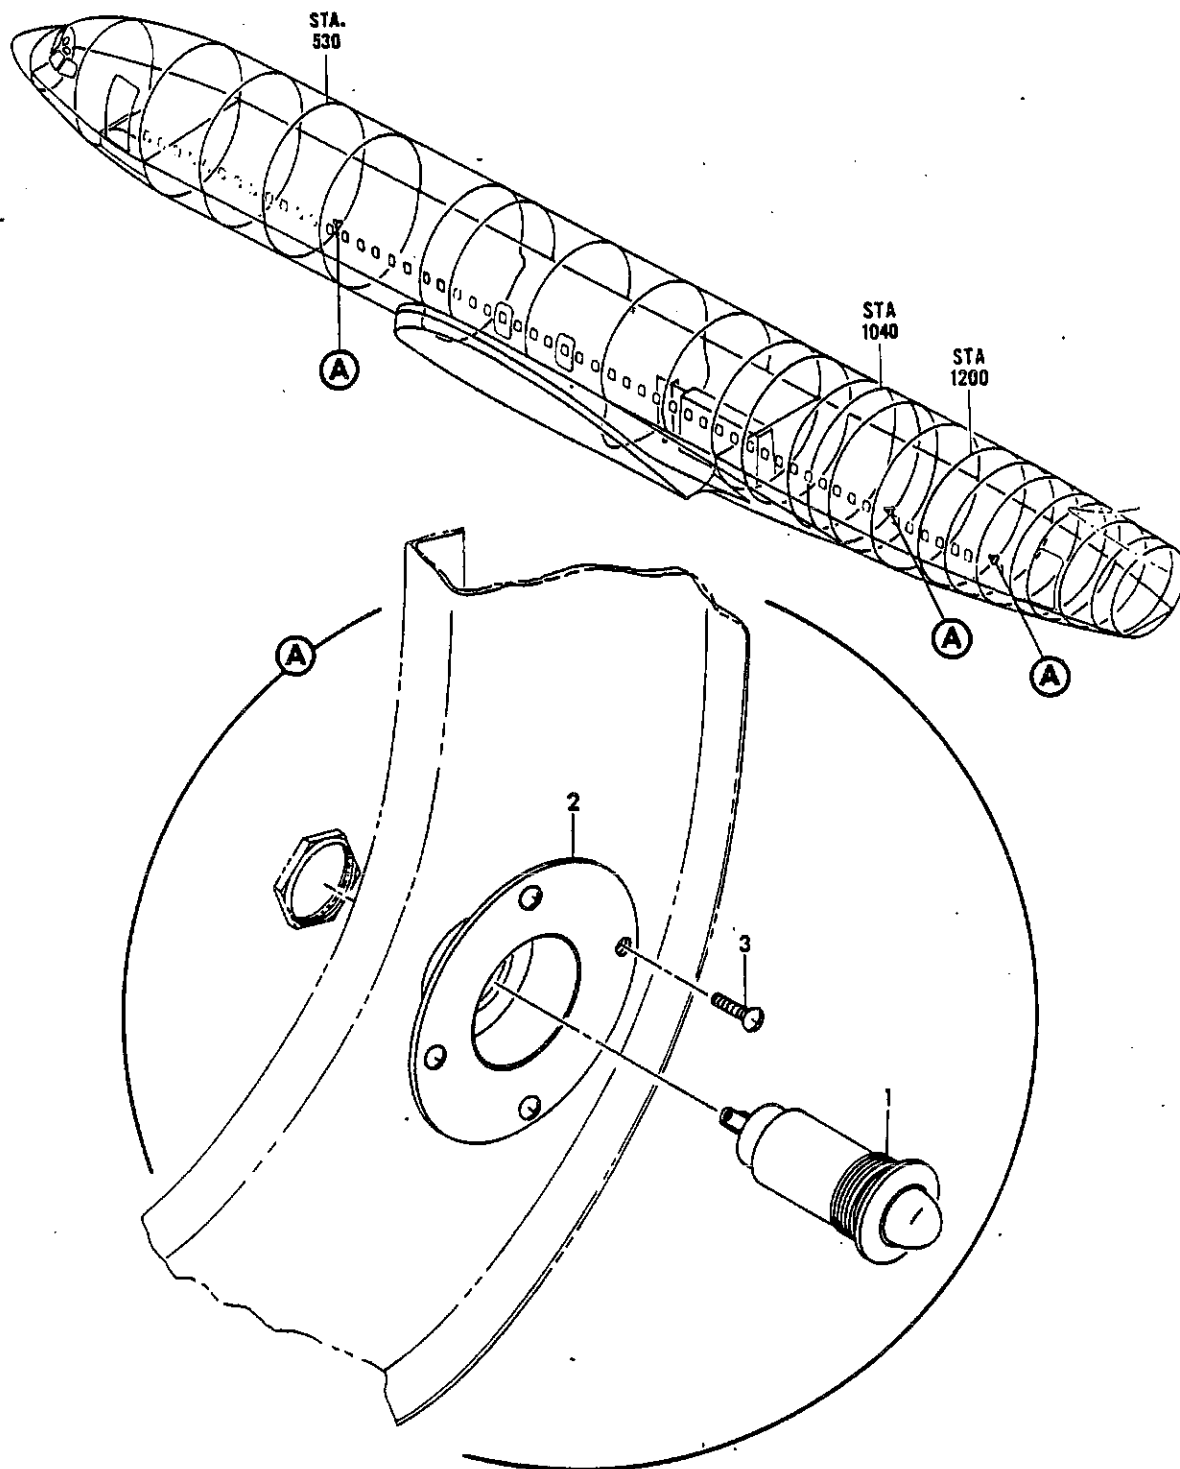


FIGURE 78. SWITCH INSTL, SECTION 53 AND 56 CARGO LIGHTS (LIGHTS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
78	69-1346		SWITCH INSTL, SECTION 53 CARGO LIGHTS (LIGHTS ONLY) . . (SEE 24-3, FIG. 2, ITEM 47)		RF
	69-1346-1		SWITCH INSTL, SECTION 56 CARGO LIGHTS (LIGHTS ONLY) . . (SEE 24-3, FIG. 3, ITEM 3)		RF
	69-1346-2		SWITCH INSTL, SECTION 56 CARGO LIGHTS (LIGHTS ONLY) . . (SEE 24-3, FIG. 3, ITEM 4)		RF
1	J100		. SWITCH, (V81640)		1
2	63-1081		. BRACKET, SWITCH		1
			ATTACHING PARTS		
3	NAS602-B		. SCREW		4
			-----*		
			. FOR REFERENCE TO OTHER SWITCH DETAILS, SEE NHA. . . .		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

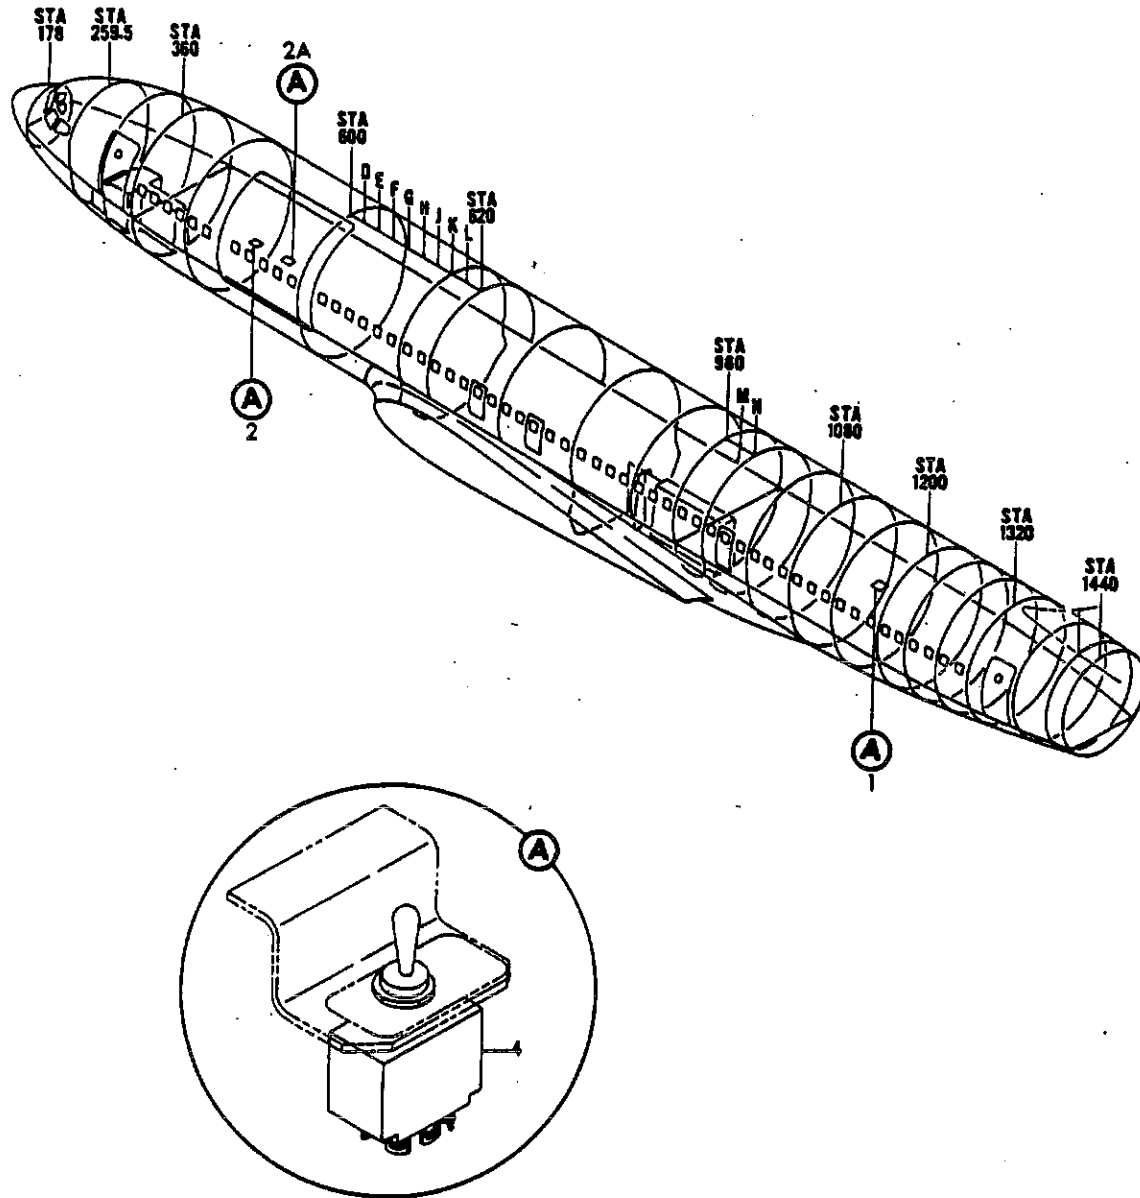


FIGURE 81. SWITCH INSTL, CARGO VIEWING HOLE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
81	1	66-2541	SWITCH INSTL, CARGO VIEWING HOLE (LIGHTS ONLY) (SEE . . 24-3, FIG. 3, ITEM 9)								RF
	4	MS35059-26	. SWITCH. FOR REFERENCE TO OTHER SWITCH DETAILS, SEE NHA. . . .								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

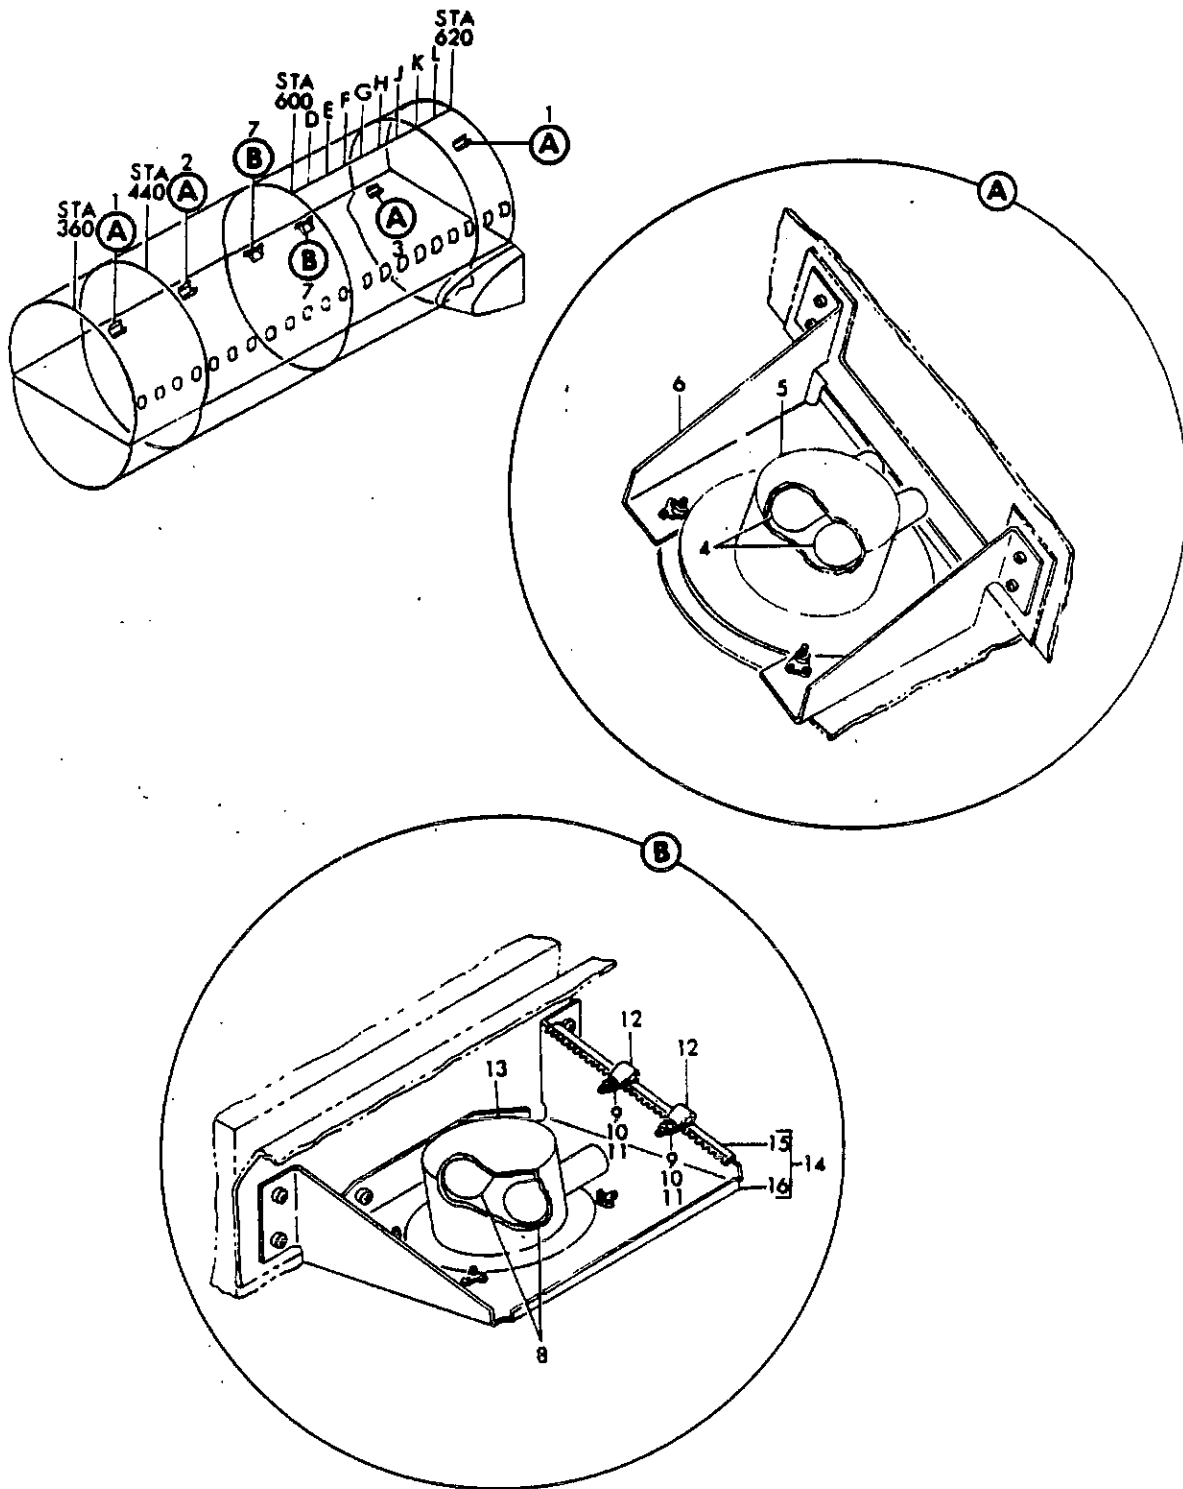


FIGURE 82. LIGHT INSTL, CARGO COMPARTMENT CEILING AND DOOR ILLUMINATION

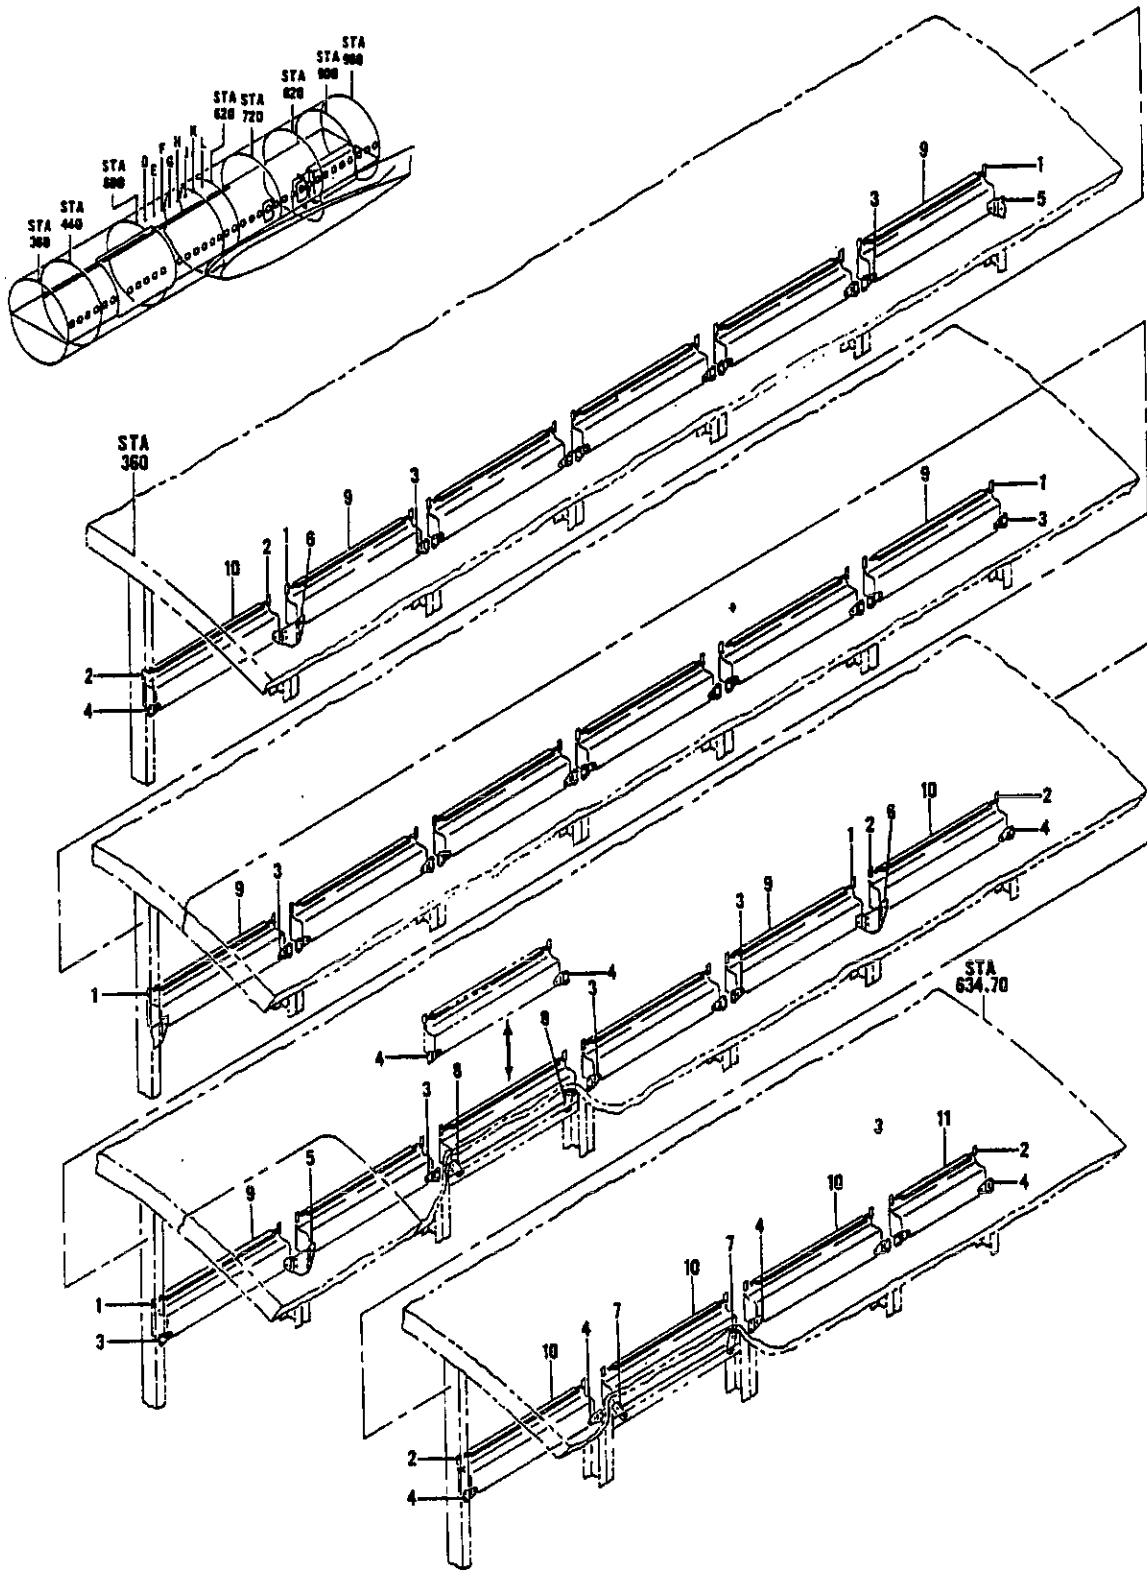


FIGURE 83. LIGHT INSTL, CARGO WALL PASSENGER AREA INDIRECT



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 83	65-33175-2	LIGHT INSTL, CARGO WALL PASSENGER AREA INDIRECT (SEE. . FIG. 6B, ITEM 43)	0150	RF
R 1	BACC10T1	. CLIP.	0150	32
R	NAS602-5	. ATTACHING PARTS . SCREW	0150	32
R 3	66-19316-1	. BRACKET, INDIRECT LIGHT BOX	0150	24
R 5	66-19316-4	. BRACKET, INDIRECT LIGHT BOX	0150	2
R 8	66-19659-3	. BRACKET ASSY, STATION 600E TO 600F LIGHT. ATTACHING PARTS . SCREW	0150	2
R	NAS602-4	. SCREW	0150	32
R	NAS514P832-6	. SCREW	0150	52
R	NAS514P1032-8	. SCREW	0150	2
R	AN960D8L	. WASHER.	0150	32
R	NAS671-8	. NUT	0150	32
R 9	10-60917-3	. LIGHT ASSY, CARGO WALL PASSENGER AREA INDIRECT.	0150	16
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

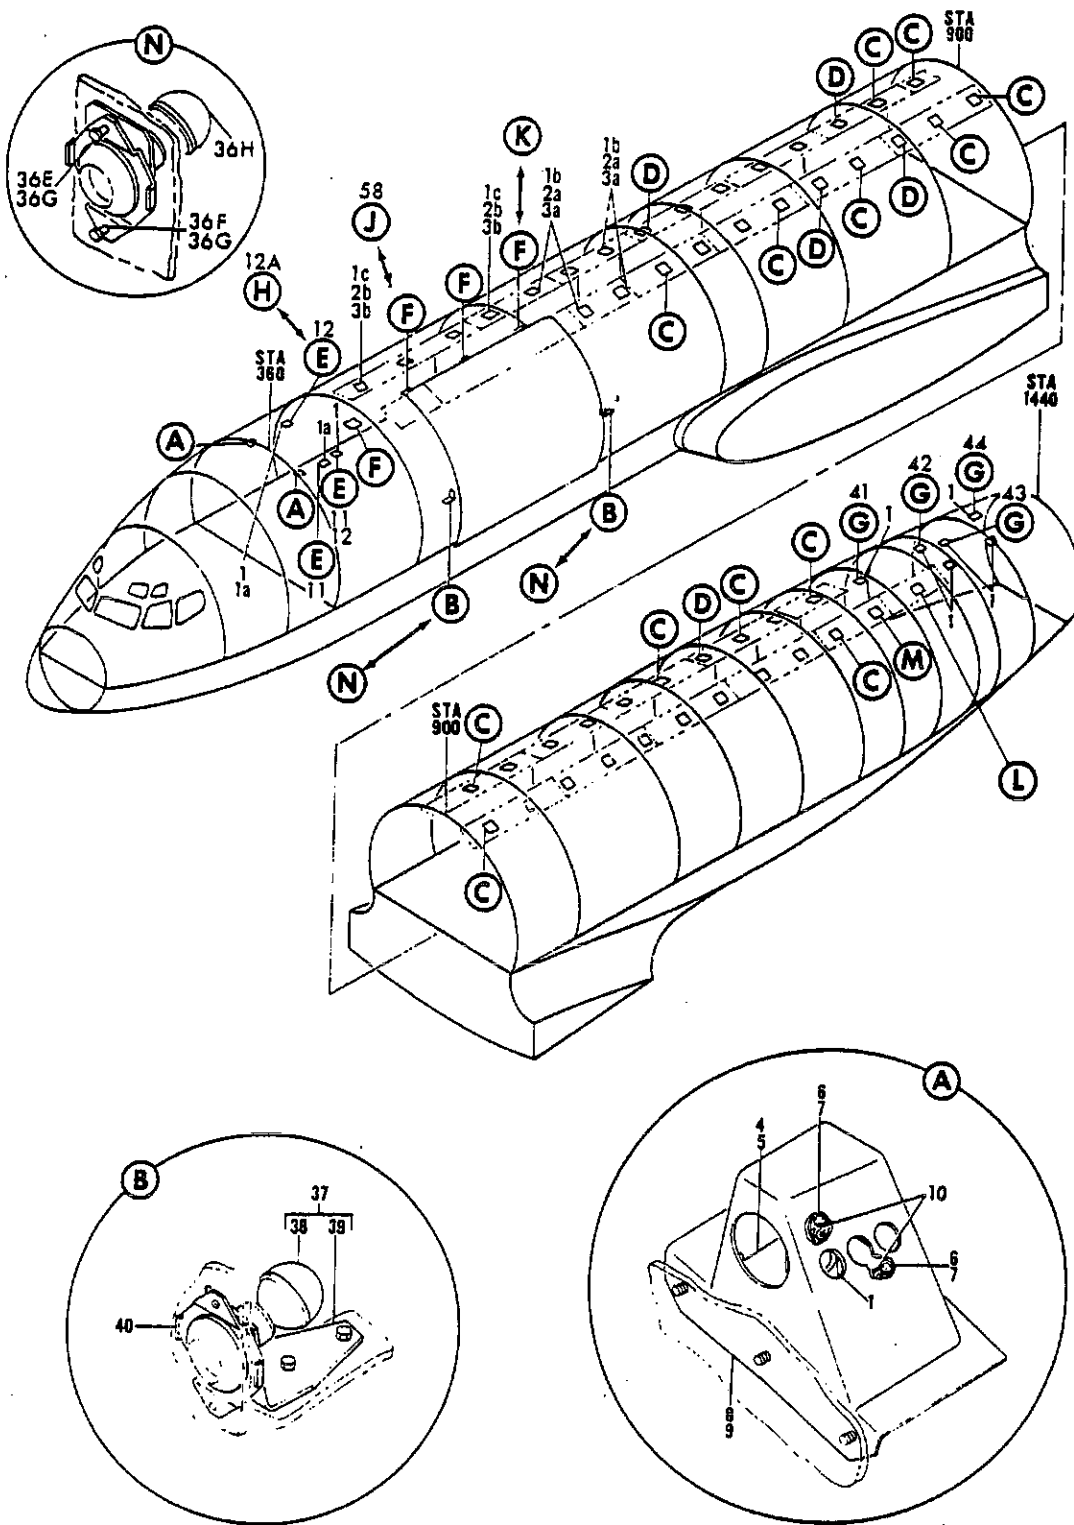


FIGURE 84. FLOODLIGHT INSTL, MAIN CABIN CARGO (SHEET 1)

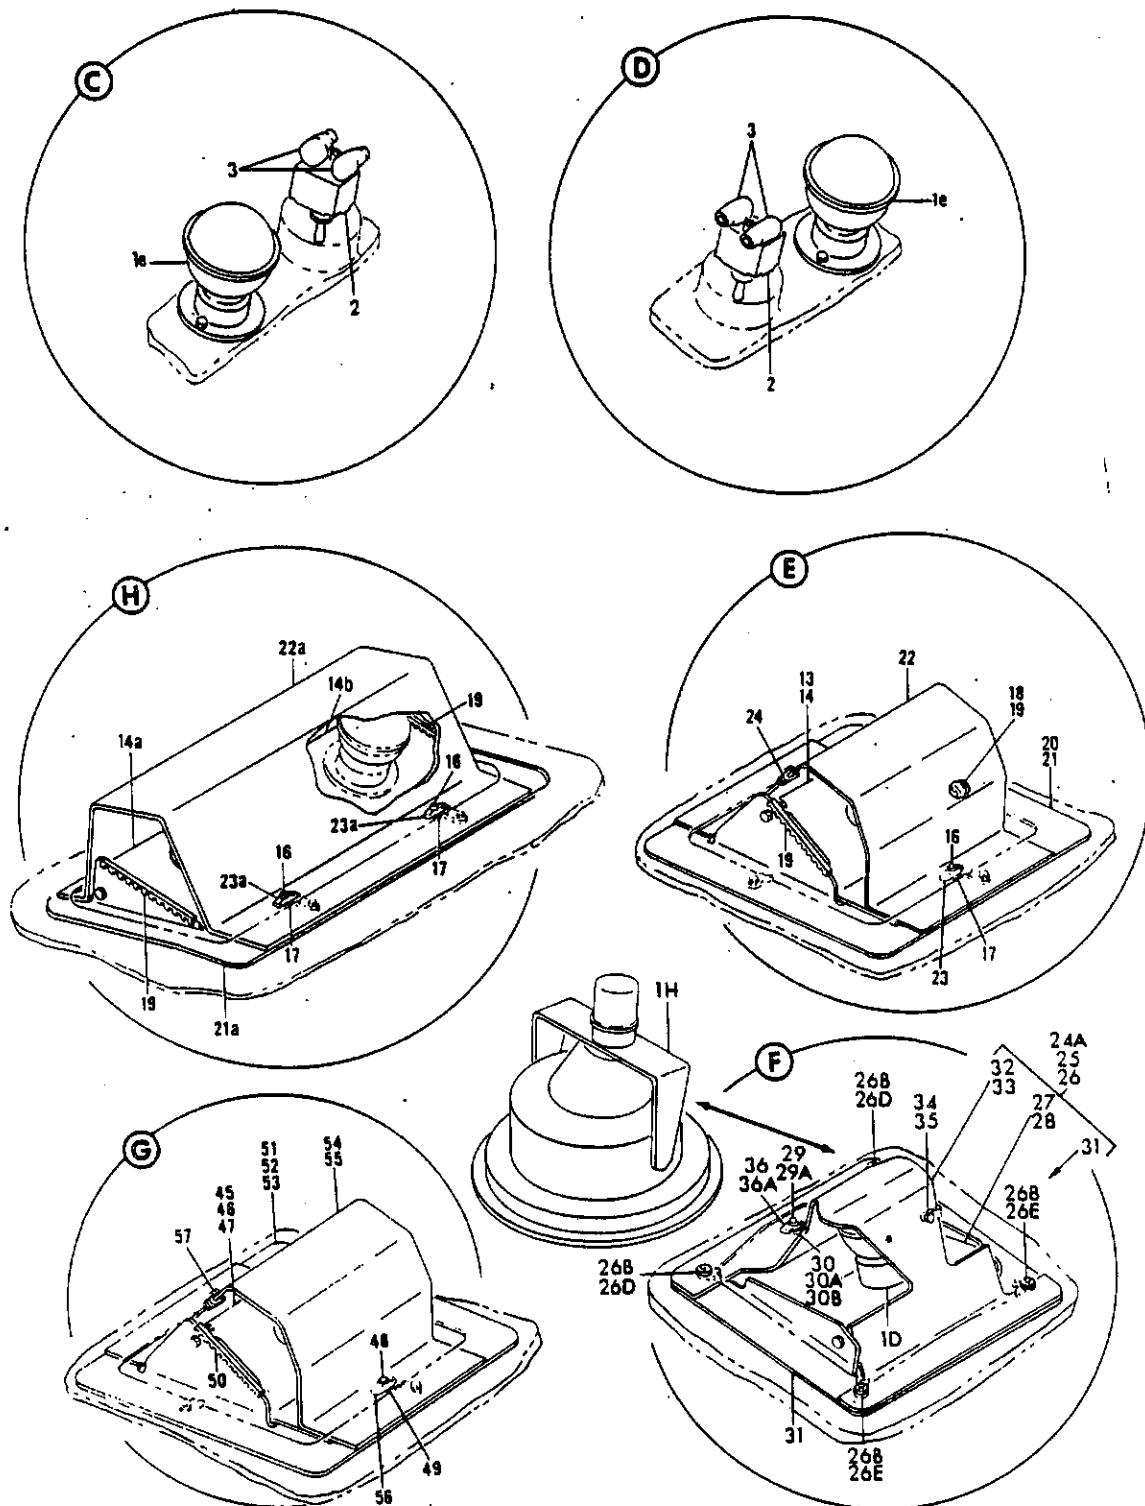


FIGURE 84. FLOODLIGHT INSTL, MAIN CABIN CARGO (SHEET 2)

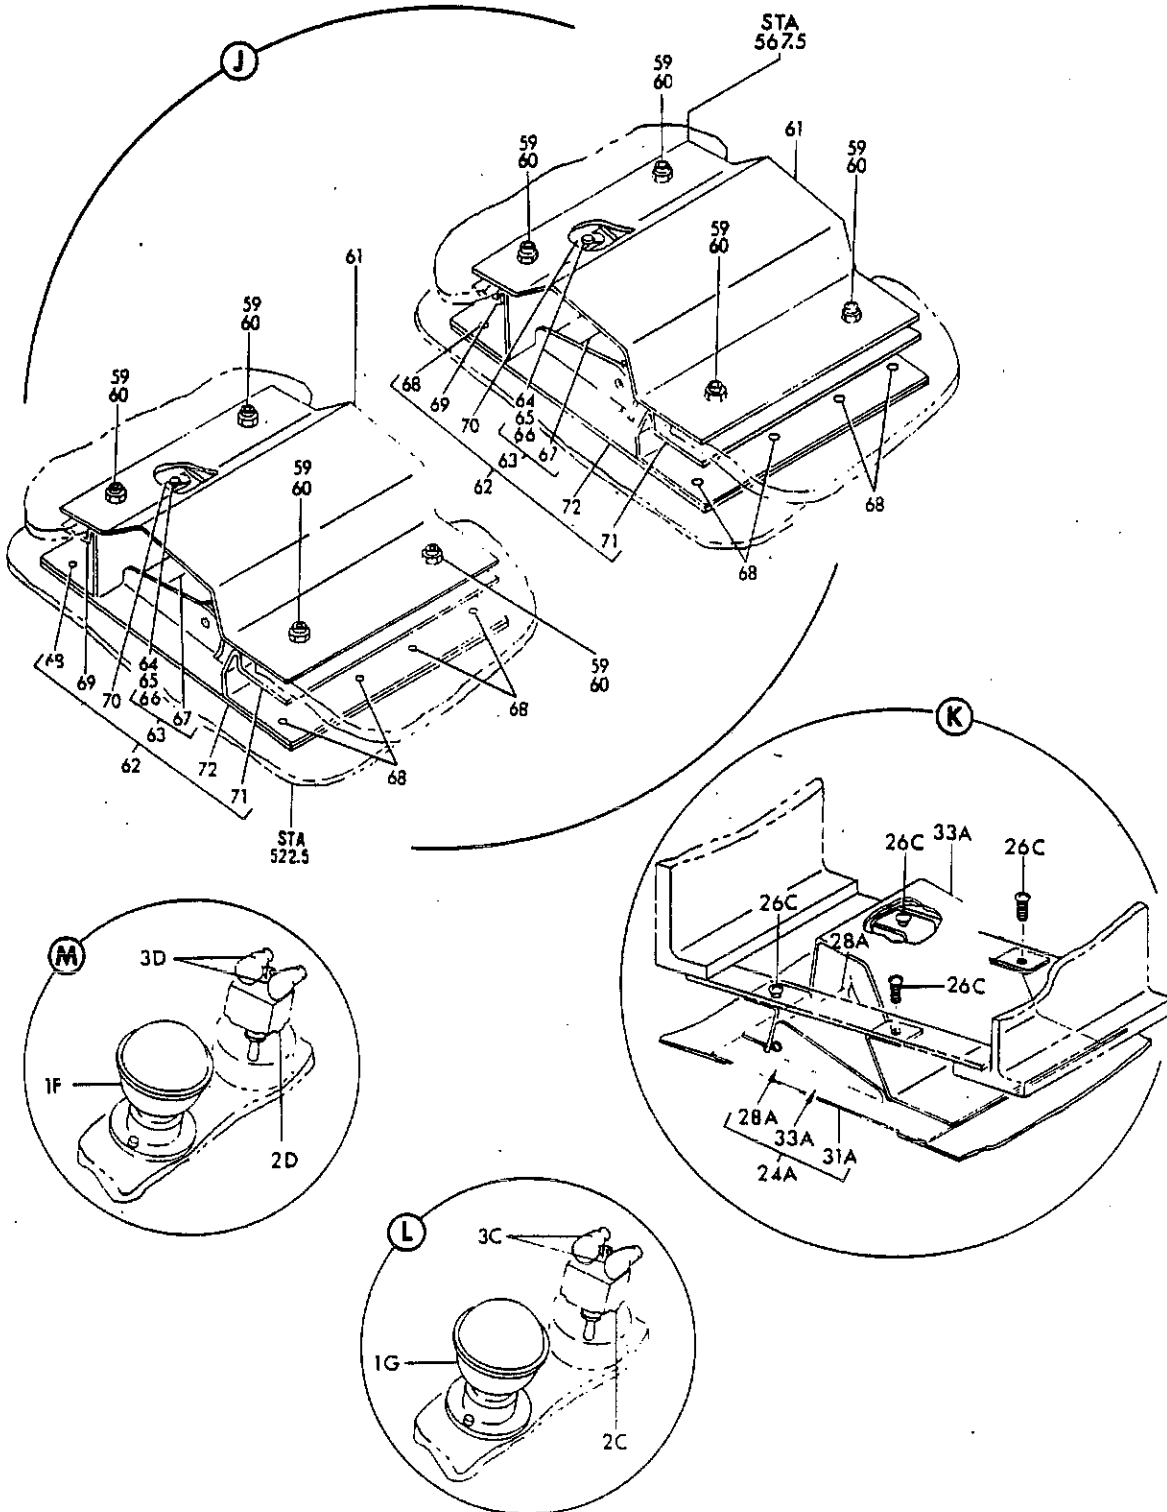


FIGURE 84. FLOODLIGHT INSTL. MAIN CABIN CARGO (SHEET 3)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
84	AN960PD6 NAS679A06W	...	WASHER.		2
		...	NUT		2
		...	*-----*		
16	BACS21AP80R	...	STUD.		1
17	BACR12AG	...	RING.		1
18	BACG20ZA320	...	GROMMET, (USED ON 65-36507-3)		1
19	BACG20ZA320	...	GROMMET, (USED ON 65-36507-4)		2
19	BACG20ZA320B	...	GROMMET, (USED ON 65-36507-8)		2
20	65-36823-17	...	COVER, CARGO FLOODLIGHTS DOOR (USED ON 65-36507-3)		1
21	65-36823-16	...	COVER, CARGO FLOODLIGHTS DOOR (USED ON. 65-36507-4)		1
21A	65-37643-1	...	COVER, CARGO FLOODLIGHTS DOOR (USED ON. 65-36507-8)		1
22	65-36823-5	...	SHIELD ASSY, CARGO FLOODLIGHTS DOOR (USED ON. 65-36507-3 AND -4)		1
22A	65-37643-2	...	SHIELD ASSY, CARGO FLOODLIGHTS DOOR (USED ON. 65-36507-8)		1
23	BACR11AM2	...	RECEPTACLE, (USED ON 65-36823-5).		1
	MS20426D3	...	ATTACHING PARTS RIVET		2
		...	*-----*		
23A	BACR11AM2	...	RECEPTACLE, (USED ON 65-37643-2).		2
	MS20426D3	...	ATTACHING PARTS RIVET		4
		...	*-----*		
24	BACN10FX1	...	NUT, (USED ON 65-36823-5)		1
	65-36506-1	...	MOUNTING INSTL, CARGO DOOR AREA FLOODLIGHT (STATION 473)		1
	65-64138-1	...	SUPPORT INSTL, DOOR AREA (STATION 594).		1
24A	65-64138-3	...	SUPPORT ASSY, (USED ON 65-64138-1).		1
25	65-36506-5	...	MOUNTING ASSY, CARGO DOOR AREA FLOODLIGHT (USED ON 65-36506-1)		1
		...	ATTACHING PARTS		
26B	NAS603-6	...	SCREW, (USED ON 65-36506-1, -2, -3 AND -4).		4
26C	BAC512C83-8	...	SCREW, (USED ON 65-64138-1)		4
26D	BACN10FX2	...	NUT, (USED ON 65-36506-1, -2, -3 AND -4).		2
26E	BACN10FX1	...	NUT, (USED ON 65-36506-1, -2, -3 AND -4).		2
		...	*-----*		
27	65-36823-7	...	DOOR ASSY, CARGO FLOODLIGHTS (USED ON 65-36506-5)		1
28A	65-64139-3	...	DOOR ASSY, (USED ON 65-64138-3)		1
		...	ATTACHING PARTS		
	NAS601-5	...	SCREW, (USED ON 65-36506-5 AND 65-64138-3).		2
	AN960PD6	...	WASHER, (USED ON 65-36506-5 AND 65-64138-3)		2
	NAS679A06W	...	NUT, (USED ON 65-36506-5 AND 65-64138-3).		2
		...	*-----*		
29	BACS21AP80R	...	STUD, (USED ON 65-36823-7 AND -11).		1
29A	BACS21X3C	...	STUD, (USED ON 65-64139-3).		1
30	BACR12AG	...	RING, (USED ON 65-36823-7 AND -11).		1
30A	BACR12X1	...	RING, (USED ON 65-64139-3).		1
30B	BACG20X1	...	GROMMET, (USED ON 65-64139-3)		1
31	65-36823-15	...	COVER, (USED ON 65-36506-5 AND -6).		1
31A	65-64139-8	...	COVER, (USED ON 65-64138-3)		1
32	65-36823-9	...	SHIELD ASSY, CARGO FLOODLIGHTS DOOR HEAT (USED ON 65-36506-5)		1
33A	65-64139-1	...	SHIELD ASSY, HEAT (USED ON 65-64138-3).		1
34	BACN10FX1	...	NUT, (USED ON 65-36823-9)		1
36	BACR11AM2	...	RECEPTACLE, (USED ON 65-36823-9 AND -13).		1
36A	BACR11X3	...	RECEPTACLE, (USED ON 65-64139-1).		1
		...	ATTACHING PARTS		
	MS20426D3	...	RIVET, (USED ON 65-36823-9 AND -13)		2
	MS20426B4	...	RIVET, (USED ON 65-64139-1)		2
		...	*-----*		
R	65-34816-1	...	LIGHT INSTL, CARGO DOOR THRESHOLD	0151	1
R	65-34816-2	...	LIGHT INSTL, CARGO DOOR THRESHOLD	0151	1
R	65C16297-1	...	LIGHT INSTL, CARGO DOOR THRESHOLD	5299	1
R	65C16297-2	...	LIGHT INSTL, CARGO DOOR THRESHOLD	5299	1
R	36E NAS601-13P	...	SCREW	5299	1
R	36F NAS601-9P	...	SCREW	5299	1
R	36G BACN10JC6	...	NUT	5299	2
R	36H 69-69037-1	...	LIGHT ASSY.	5299	1
R	37 69-27998-1	...	LIGHT ASSY, CARGO DOOR THRESHOLD.	0151	1
		...	ATTACHING PARTS		
R	AN3-5	...	BOLT.	0151	2

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 84	AN960D10	WASHER.	0151	4
R 38	10-60930-1	FLOODLIGHT ASSY, AIRCRAFT INTERIOR.	0151	1
R	NAS601-5	ATTACHING PARTS	0151	2
R	NAS679A06W	SCREW	0151	2
R	69-27998-2	NUT	0151	1
R 40	66-20221-2	BRACKET, CARGO DOOR THRESHOLD LIGHT	0151	1
R	NAS601-8	WINDOW ASSY, CARGO DOOR THRESHOLD LIGHT	0151	1
R	NAS679A06W	ATTACHING PARTS	0151	2
	65-36505-1	SCREW	0151	2
	65-36505-2	NUT	0151	1
	65-36505-3	MOUNTING INSTL, AFT CARGO CEILING FLOODLIGHT (STATION 1270)		1
	65-36505-4	MOUNTING INSTL, AFT CARGO CEILING FLOODLIGHT (STATION 1329)		1
41	65-36505-5	MOUNTING INSTL, AFT CARGO CEILING FLOODLIGHT (STATION 1350)		1
42	65-36505-6	MOUNTING INSTL, AFT CARGO CEILING FLOODLIGHT (STATION 1393)		1
43	65-36505-7	BRACKET ASSY, AFT CARGO CEILING FLOODLIGHT MOUNTING (USED ON 65-36505-1 AND -9)		1
44	65-36505-8	BRACKET ASSY, AFT CARGO CEILING FLOODLIGHT MOUNTING (USED ON 65-36505-2)		1
	NAS603-6	BRACKET ASSY, AFT CARGO CEILING FLOODLIGHT MOUNTING (USED ON 65-36505-3)		1
	NAS601-5	BRACKET ASSY, AFT CARGO CEILING FLOODLIGHT MOUNTING (USED ON 65-36505-4)		1
	BACN10FX1	ATTACHING PARTS		4
45	65-36823-20	SCREW, (USED ON 65-36505-1 AND -9).		4
46	65-36823-24	SCREW, (USED ON 65-36505-2, -3 AND -4).		4
47	65-36823-28	NUT, (USED ON 65-36505-1 AND -9).		4
	NAS601-5	DOOR ASSY, CARGO FLOODLIGHTS (USED ON 65-36505-5)		1
	AN960PD6	DOOR ASSY, CARGO FLOODLIGHTS (USED ON 65-36505-6)		1
	NAS679A06W	DOOR ASSY, CARGO FLOODLIGHTS (USED ON 65-36505-7 AND -8)		1
48	BACS21AP80R	ATTACHING PARTS		2
49	BACR12AG	SCREW		2
50	BACG20ZA315	WASHER.		2
51	65-36823-16	NUT		1
52	65-36823-18	STUD.		1
53	65-36823-19	RING.		1
54	65-36823-5	GROMMET		1
55	65-36823-45	COVER, CARGO FLOODLIGHTS DOOR (USED ON 65-36505-5)		1
56	BACR11AM2	COVER, CARGO FLOODLIGHTS DOOR (USED ON 65-36505-6)		1
	MS20426D3	COVER, CARGO FLOODLIGHTS DOOR (USED ON 65-36505-7 AND -8)		1
57	BACN10FX1	SHIELD ASSY, CARGO FLOODLIGHTS DOOR HEAT (USED ON 65-36505-5 AND -6)		1
58	65-64138-2	SHIELD ASSY, CARGO FLOODLIGHTS DOOR HEAT (USED ON 65-36505-7 AND -8)		1
59	BACS12CB3-14	RECEPTACLE.		1
60	NAS679A3W	ATTACHING PARTS		2
61	65-64139-9	RIVET		2
62	65-64138-4	NUT		1
63	65-64139-3	SUPPORT INSTL, DOOR AREA (STATION 525 AND 565).		1
	NAS601-5	SCREW		4
	AN960PD6	NUT		4
	NAS679A06W	SHIELD, HEAT.		1
64	BACS21X3C	SUPPORT ASSY.		1
65	BACR12X1	DOOR ASSY		1
		ATTACHING PARTS		2
		SCREW		2
		WASHER.		2
		NUT		2
		STUD.		1
		RING.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
84 66	BACG20X1	.	GROMMET		1
67	65-64139-6	.	DOOR.		1
68	MS2042684	.	RIVET		8
69	65-64139-2	.	BRACKET ASSY.		1
70	BACR11X3	.	RECEPTACLE.		1
		.	ATTACHING PARTS		
	MS2042684	.	RIVET		2
		.	-----*		
71	65-64139-7	.	BRACKET, SUPPORT.		1
72	65-64139-8	.	COVER		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

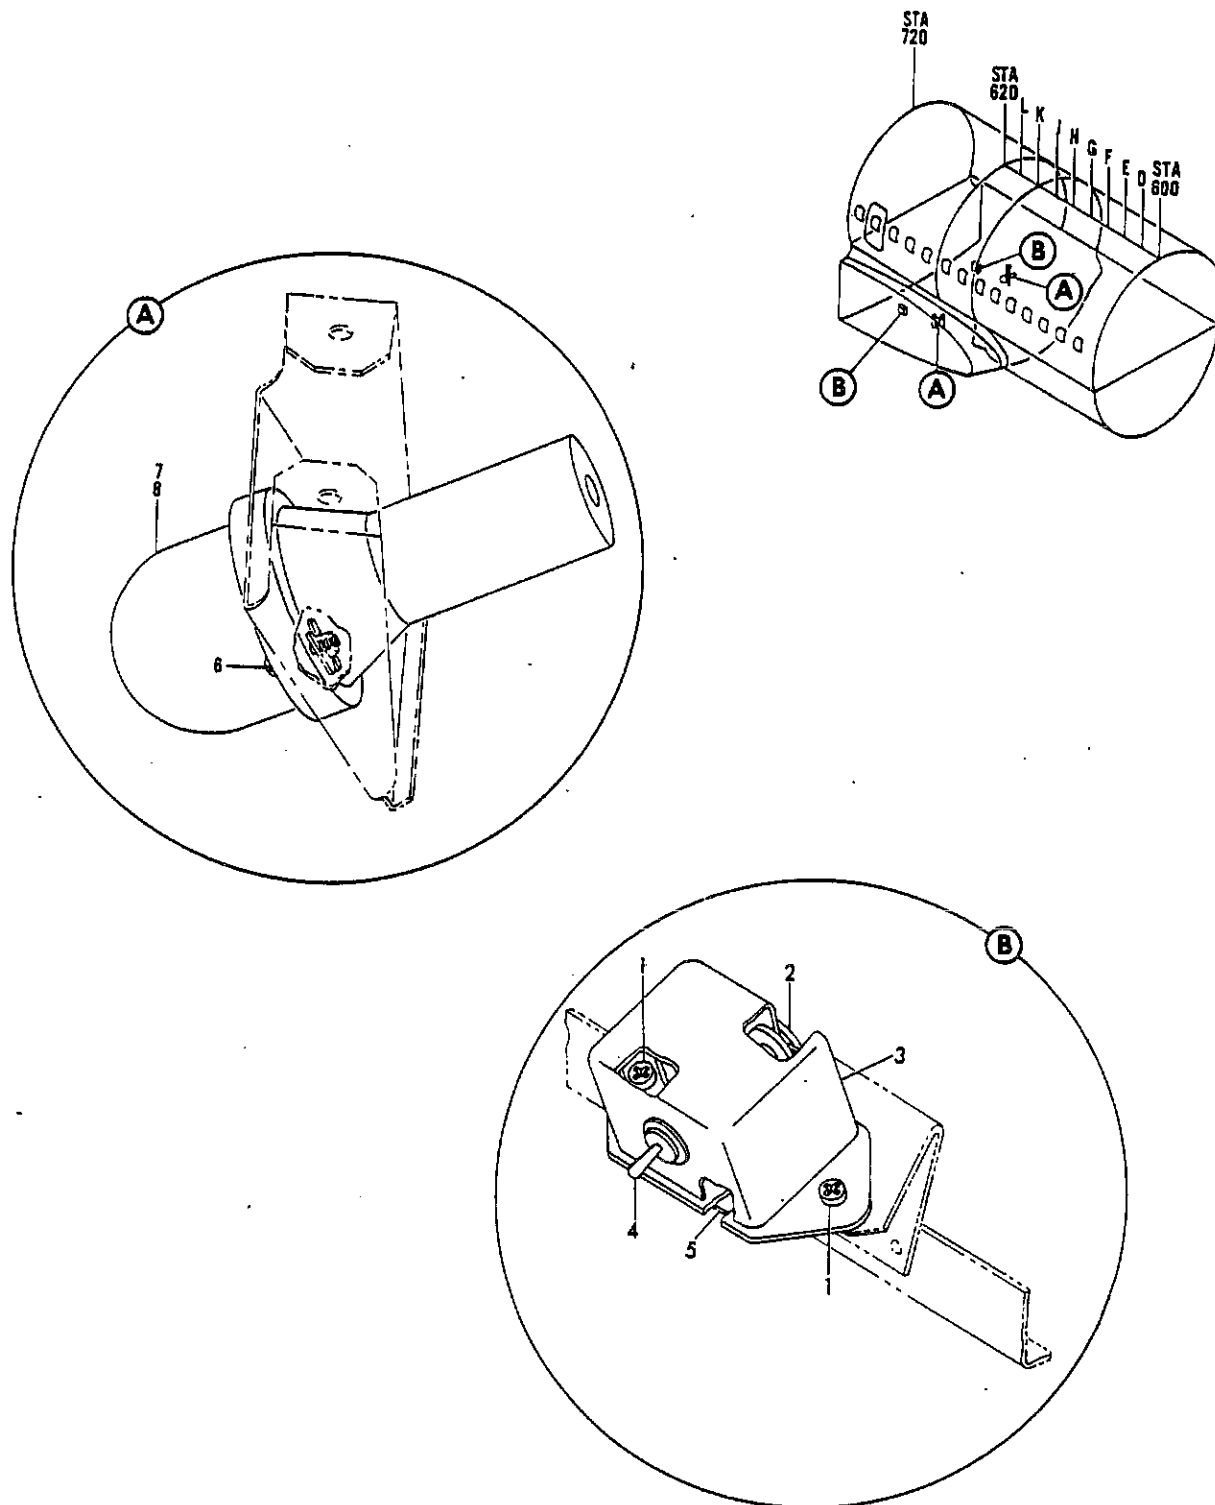


FIGURE 85. SWITCH INSTL, AIR CONDITIONING COMPARTMENT LIGHT
LIGHT INSTL, AIR CONDITIONING COMPARTMENT



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
85			SWITCH INSTL, AIR CONDITIONING COMPARTMENT LIGHT. . . .		
	65-8788-3		LIGHT INSTL, AIR CONDITIONING COMPARTMENT		RF
			. SWITCH INSTL, AIR CONDITIONING COMPARTMENT LIGHT (LH)		
			(SEE 24-3, FIG. 2, ITEM 55)		
	65-8788-4		. SWITCH INSTL, AIR CONDITIONING COMPARTMENT LIGHT (RH)		RF
			(SEE 24-3, FIG. 2, ITEM 56)		
1	NAS603-7P		. . SCREW		2
2	NAS557-6A		. . GROMMET		1
3	66-1502		. . BOX, SWITCH		1
4	MS35058-23		. . SWITCH.		1
5	BACM10L10-4NZ		. . METAL-CAL, LETTERS (LH ONLY).		1
5	BACM10L10-4NJ		. . METAL-CAL, LETTERS (RH ONLY).		1
	65-8788-1		. LIGHT INSTL, AIR CONDITIONING COMPARTMENT (LH) (SEE .		RF
			24-3, FIG. 2, ITEM 2)		
	65-8788-2		. LIGHT INSTL, AIR CONDITIONING COMPARTMENT (RH) (SEE .		RF
			24-3, FIG. 2, ITEM 3)		
6	NAS600-10		. . SCREW		2
7	307		. . LAMP, (V24455).		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

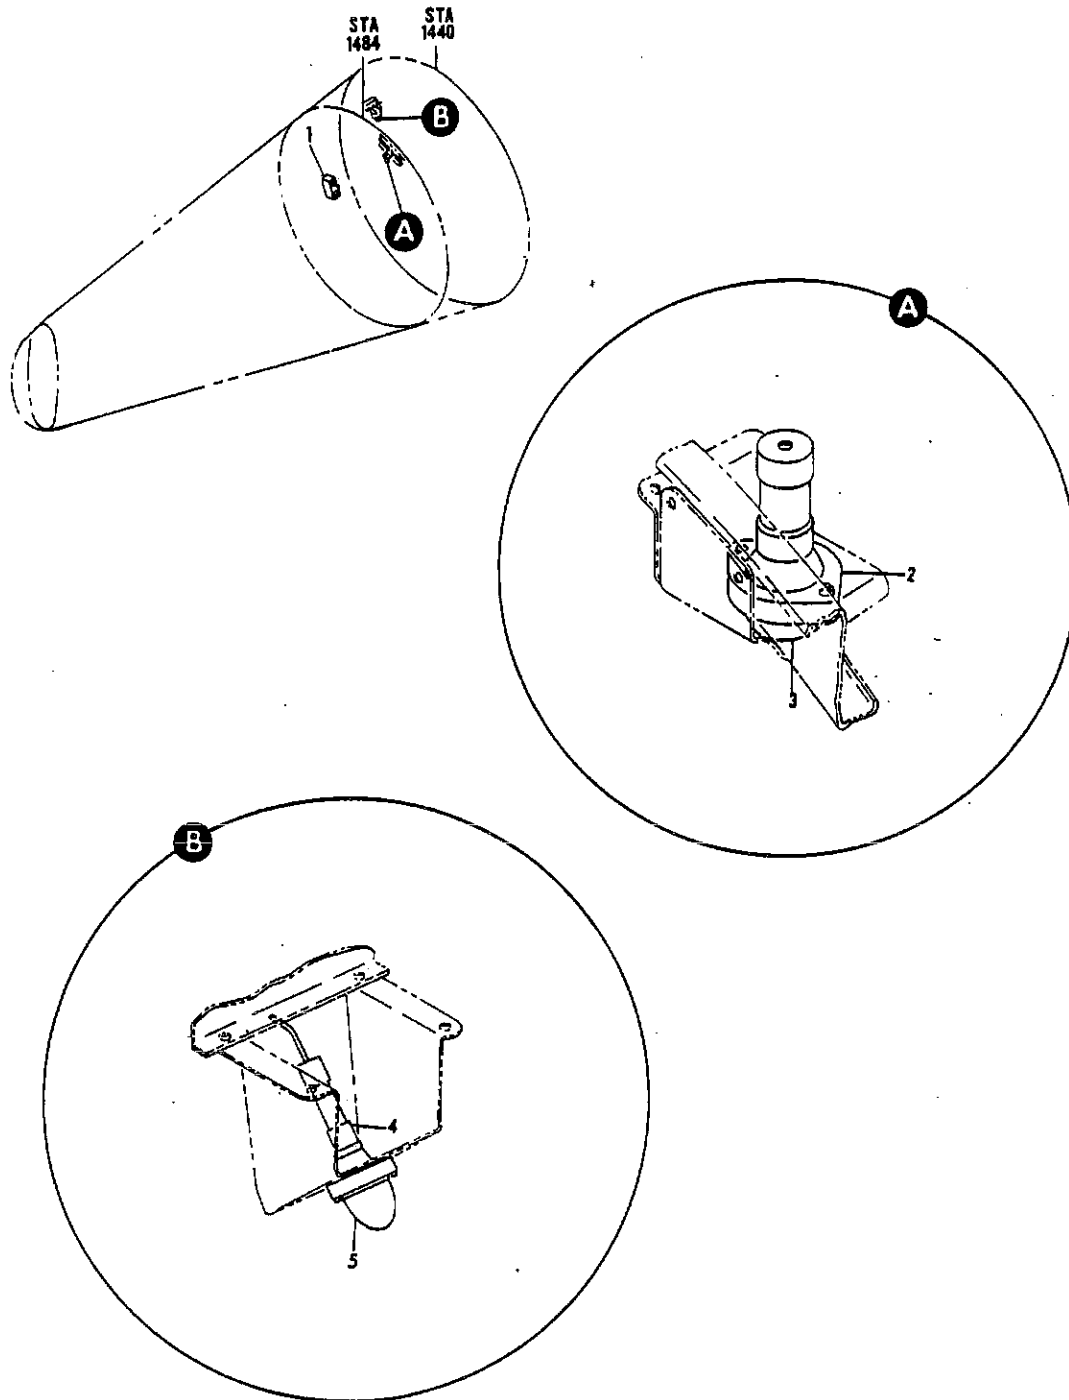


FIGURE 87. SWITCH INSTL, LIGHT
FLOODLIGHT INSTL, STATION 1484 AND 1475 TAIL COMPARTMENT



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
87			SWITCH INSTL, LIGHT		
			FLOODLIGHT INSTL, STATION 1484 AND 1475 TAIL.		
			COMPARTMENT		
1	69-2875-1		. SWITCH INSTL, LIGHT (SEE 24-3, FIG. 4, ITEM 1).		RF
	AN3021-3		. . SWITCH.		1
	65-14246		. FLOODLIGHT INSTL, STATION 1475 TAIL COMPARTMENT (SEE		RF
			24-3, FIG. 4, ITEM 7)		
5	307		. . LAMP, (V24446).		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

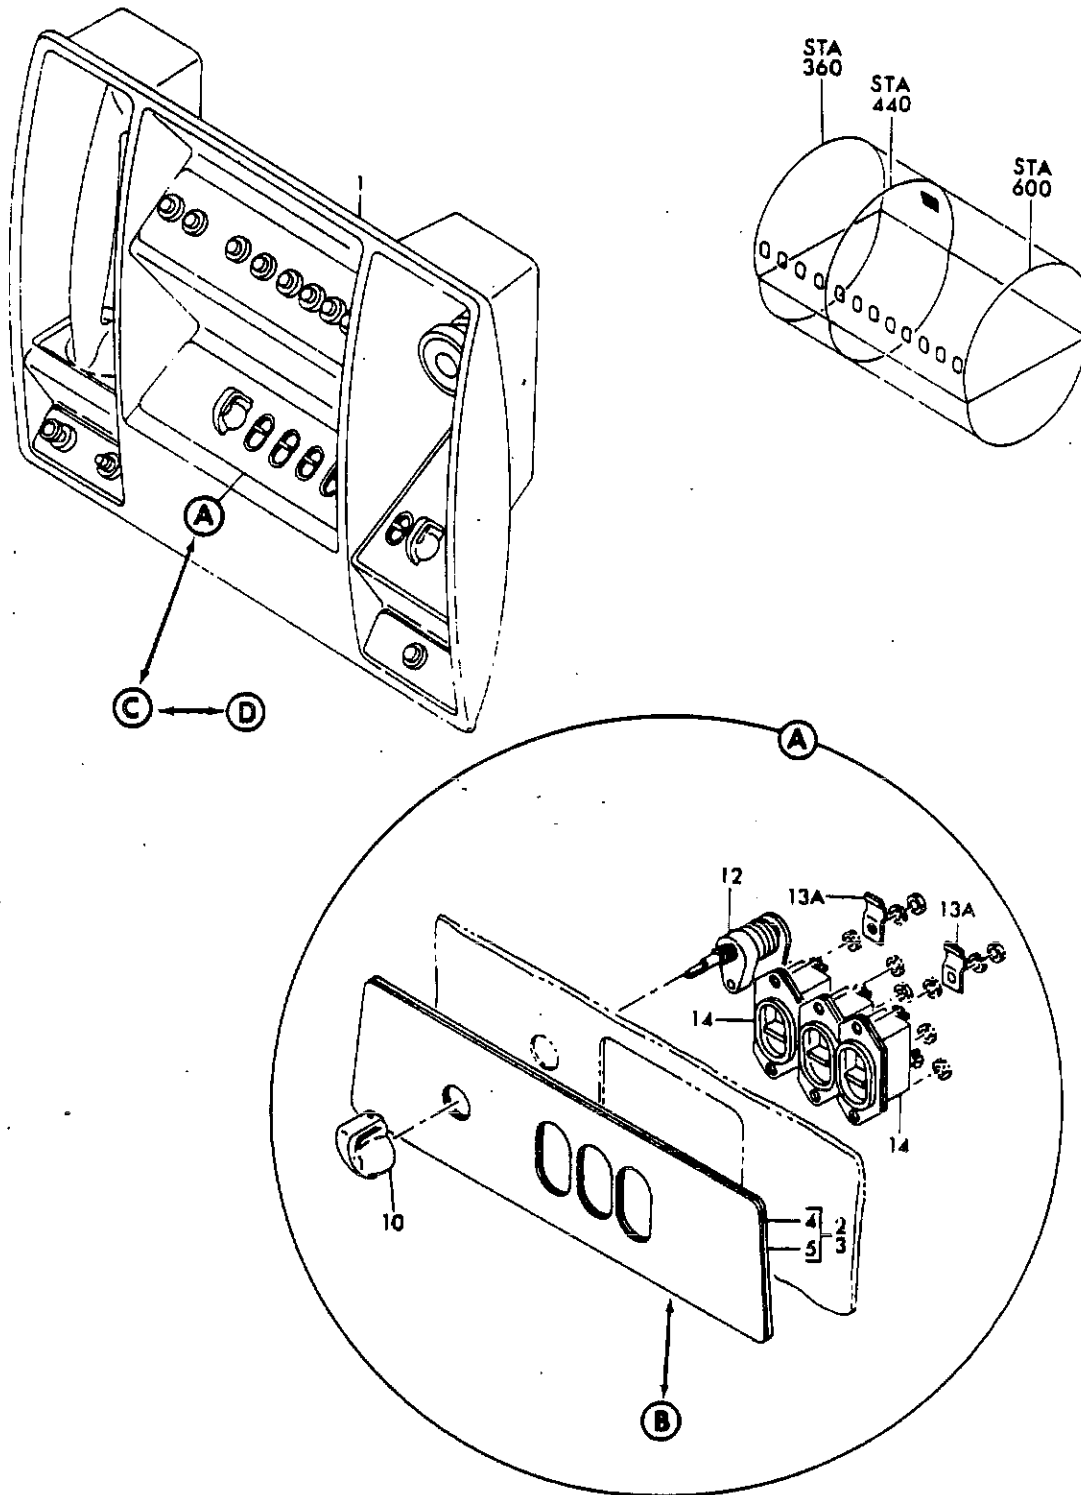


FIGURE 100D. PANEL INSTL, FORWARD GALLEY ATTENDANTS (SHEET 1)

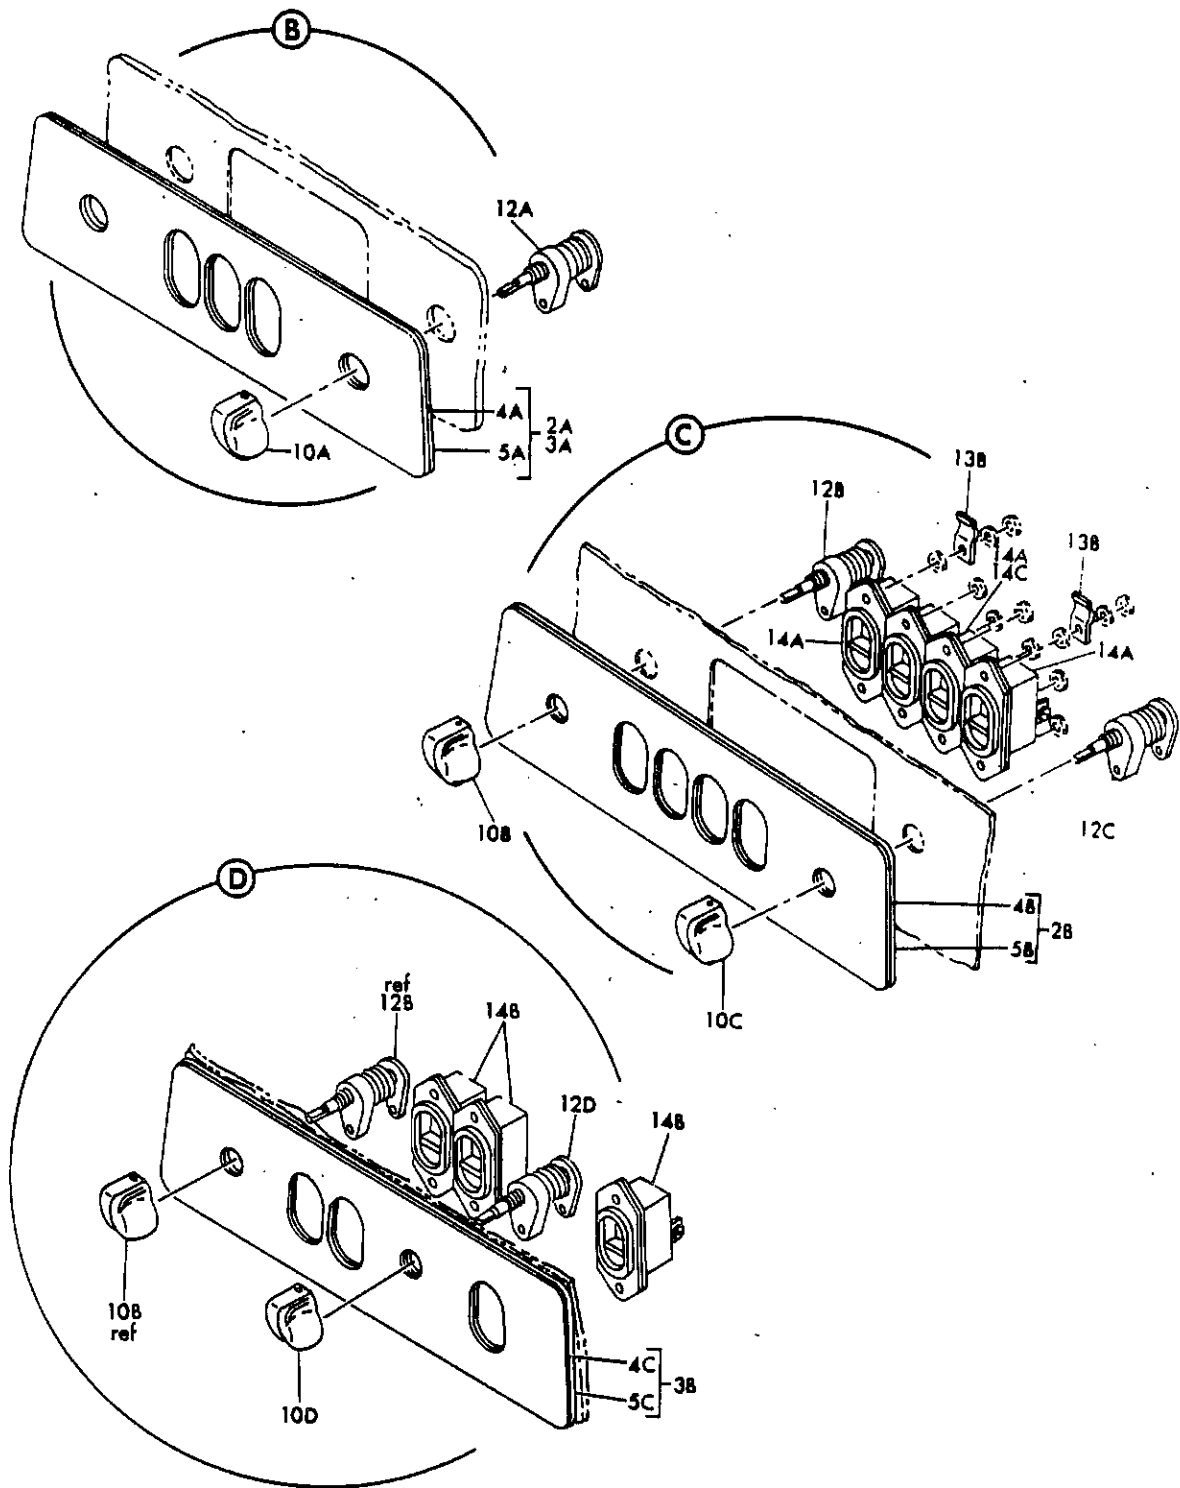


FIGURE 1000. PANEL INSTL, FORWARD GALLEY ATTENDANTS (SHEET 2)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
100D	65-63545-39	PANEL INSTL, FORWARD GALLEY ATTENDANTS (LIGHTS ONLY). (SEE 25-10, FIG. 33D, ITEM 32)	5199	RF
1	65-63544-34	. PANEL ASSY, (LIGHTS ONLY)	5199	RF
2B	65-81478-30	. . PLATE ASSY, SWITCH.	5199	1
		ATTACHING PARTS		
	AN960C8	. . WASHER.	5199	4
	BACN10MG8	. . NUT	5199	4
		-----*		
3B	65-81478-18	. . . PLATE ASSY.	5199	1
4B	65-81478-19	. . . BACK.	5199	1
5B	65-81478-20	. . . SIGN.	5199	1
10B	RB31	. . KNOB, POINTER (V86797).	5199	1
10C	RB31	. . KNOB, POINTER (V86797).	5199	1
12B	17AS224	. . SWITCH, (V91929).	5199	1
12C	17AS224	. . SWITCH, (V91929).	5199	1
13B	BACC10T3	. . CLAMP	5199	2
		ATTACHING PARTS		
	AN960PD6	. . WASHER.	5199	2
	BACN10MG6	. . NUT	5199	2
		-----*		
14A	8480K2	. . SWITCH, (V27193).	5199	4
		ATTACHING PARTS		
	BACN10MG6	. . NUT	5199	8
		-----*		
		. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

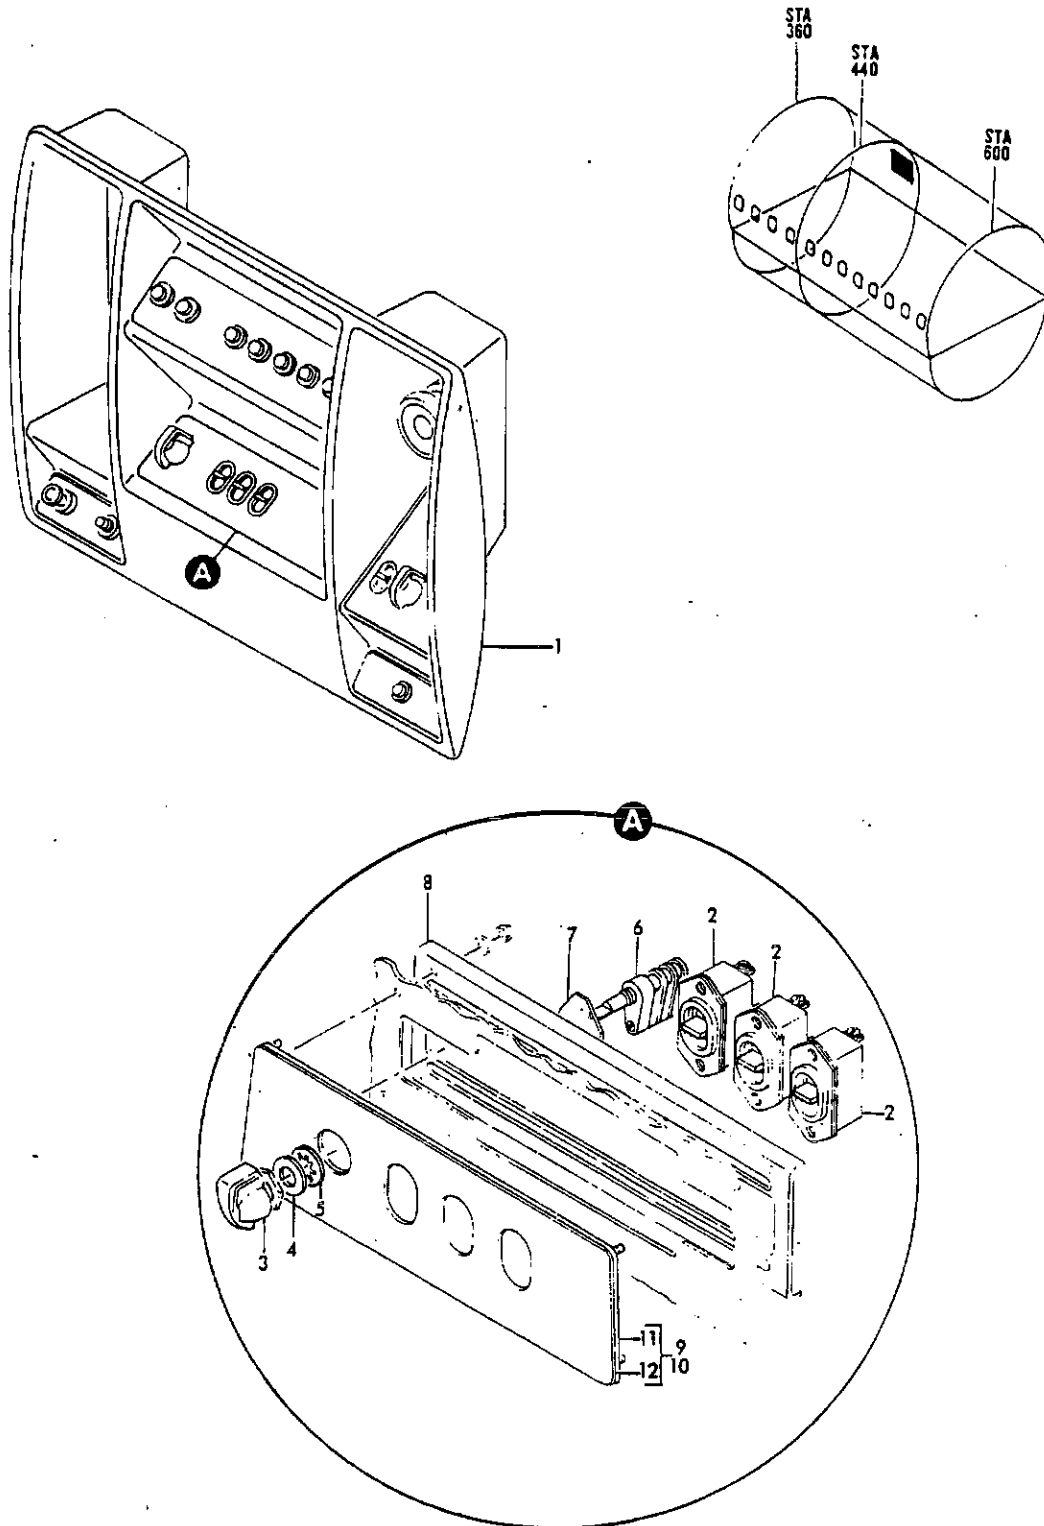


FIGURE 102G. PANEL INSTL, FORWARD ATTENDANTS (LIGHTS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	102G	65-5793-17	PANEL INSTL, FORWARD ATTENDANTS (LIGHTS ONLY) (SEE. . .							0150	RF
R			25-16, FIG. 14C, ITEM 5)								
R	1	65-4830-29	. PANEL ASSY, GALLEY (LIGHTS ONLY).							0150	1
R	2	AN3209-2	. . SWITCH.							0150	3
R			(OPTIONAL 8480K2 (V27193))								
R	2	8480K2	. . SWITCH, (V27193).							0150	3
R			(OPTIONAL TO AN3209-2)								
R			ATTACHING PARTS								
R		NAS514P440-5	. . SCREW							0150	6
R		AN960PD6	. . WASHER.							0150	12
R		NAS679A04W	. . NUT							0150	6
R			-----*								
R	3	RB31	. . KNOB, POINTER (V86797).							0150	1
R	4	AN960PD516L	. . WASHER.							0150	1
R	5	AN936A516	. . WASHER.							0150	1
R	6	17AS224	. . SWITCH, GANG (V91929)							0150	1
R	7	69-11299-3	. . SHIM, SWITCH.							0150	1
R			ATTACHING PARTS								
R		BACS12Y4-5	. . SCREW							0150	2
R		AN960PD6	. . WASHER.							0150	4
R		NAS679A04W	. . NUT							0150	2
R			-----*								
R	8	66-21535-1	. . PLATE, BACKING SWITCH SUPPORT							0150	1
R	9	69-11299-46	. . PLATE ASSY, FORWARD AND AFT GALLEY PANEL SWITCH							0150	1
R	10	69-11299-80	. . . PLATE ASSY.							0150	1
R	11	69-11299-11	 SIGN, SWITCH.							0150	1
R	12	69-11299-47	 BACK, SWITCH.							0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											


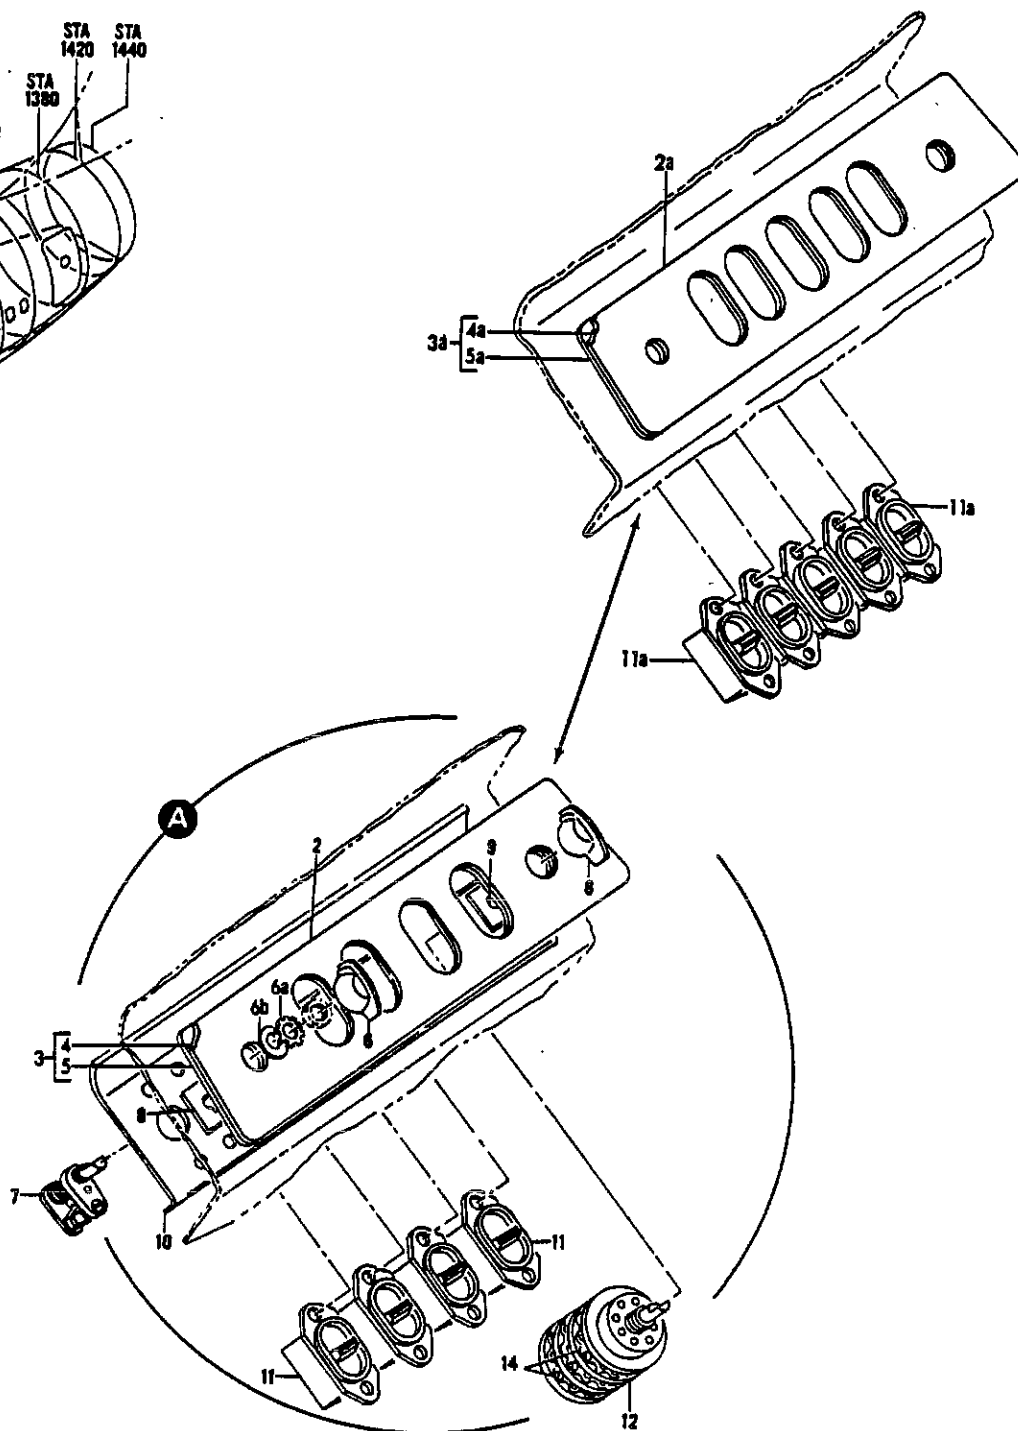


FIGURE 109C. PANEL INSTL, AFT GALLEY ATTENDANTS (LIGHTS ONLY)

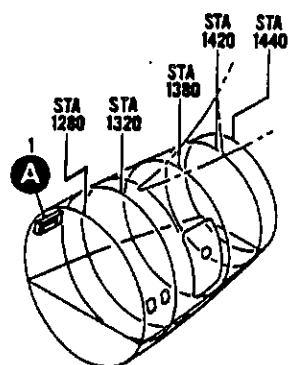

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R 109C	65-8951-36A	PANEL INSTL, AFT GALLEY ATTENDANTS (LIGHTS ONLY) (SEE 25-16, FIG. 14C, ITEM 6)							0150	RF
R 1	65-8951-37A	. PANEL ASSY, AFT GALLEY ATTENDANTS (LIGHTS ONLY) . . .							0150	1
R 2A	69-11299-234	. . . PLATE ASSY, SWITCH FACE							0150	1
R	GRC912616	ATTACHING PARTS							0150	4
R	AN960C8	. . . NUT							0150	4
R		. . . WASHER.							0150	4
R	3A 69-11299-235	. . . PLATE ASSY.							0150	1
R	4A 69-11299-236	 SIGN.							0150	1
R	5A 69-11299-206	 BACK.							0150	1
R	6 RB31	. . . KNOB, POINTER (V86797).							0150	2
R	6A AN936A516	. . . WASHER.							0150	1
R	6B AN960PD516L	. . . WASHER.							0150	1
R	7 17AS224	. . . SWITCH, (V91929).							0150	1
R	8 69-31685-15	. . . DISK, ATTENDANTS PANEL FACE PLATE BACK UP							0150	1
R	9 63-9890	. . . PLATE, SWITCH INDEX							0150	1
R	10 66-20322-1	. . . SUPPORT, BRACKET.							0150	1
R	11A AN3209-2	. . . SWITCH.							0150	5
R		(OPTIONAL 8480K2 (V27193)								
R	11A 8480K2	. . . SWITCH, (V27193).							0150	5
R		(OPTIONAL TO AN3209-2)								
R		ATTACHING PARTS								
R	NAS514P440-5	. . . SCREW							0150	10
R	AN960PD6	. . . WASHER.							0150	20
R	NAS679A04W	. . . NUT							0150	10
R	12 M2082A2	. . . SWITCH, (V81579).							0150	1
R	14 6-33160-13	. . . BUS, ROTARY SWITCH CONNECTOR.							0150	3
R		. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA							0150	

MISSING ITEM NUMBERS ARE NOT APPLICABLE



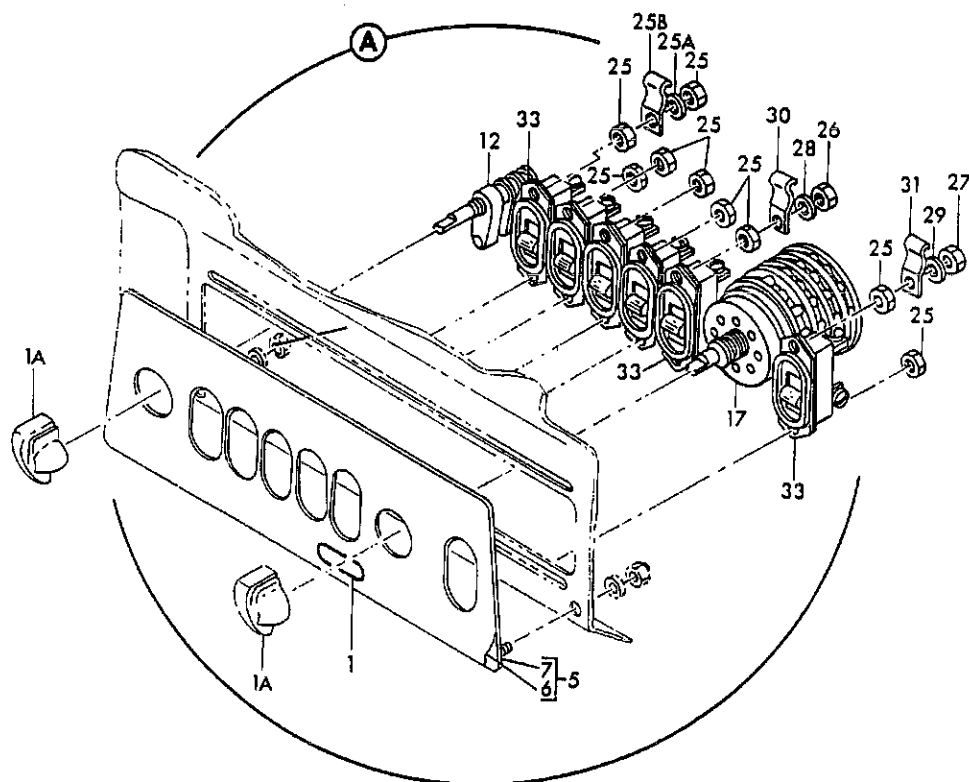


FIGURE 109J. PANEL INSTL, AFT GALLEY ATTENDANTS (LIGHTS ONLY)

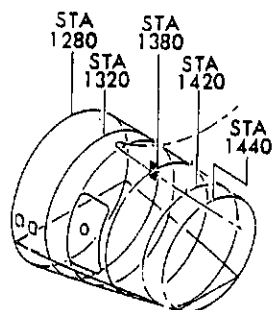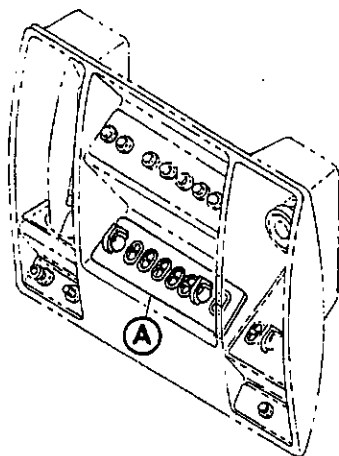

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
109J	65-63549-39		PANEL INSTL, AFT GALLEY ATTENDANTS (LIGHTS ONLY).	5199	RF
			(SEE 25-10, FIG. 33D, ITEM 33)		
	65-63548-34		. PANEL ASSY, (LIGHTS ONLY)	5199	RF
1A	R831		. . KNOB, (V86797)	5199	2
5	65-81478-1		. . PLATE ASSY, SWITCH.	5199	1
			ATTACHING PARTS		
	AN960CB		. . WASHER.	5199	2
	BACN10MG8		. . NUT	5199	2
			-----*		
5	65-81478-2		. . . PLATE ASSY.	5199	1
6	65-81478-3		 SIGN.	5199	1
7	65-81478-10		 BACK.	5199	1
12	17AS224		. . SWITCH, (V91929).	5199	1
17	M2082A2		. . SWITCH, ROTARY (V81579)	5199	1
25	BACN10MG6		. . NUT	5199	13
25A	AN960PD6		. . WASHER.	5199	1
25B	BACC10T3		. . CLAMP	5199	1
26	BACN10MG6		. . NUT	5199	1
28	AN960PD6		. . WASHER.	5199	1
30	BACC10T3		. . CLAMP	5199	1
33	8480K2		. . SWITCH, (V27193).	5199	6
			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE					


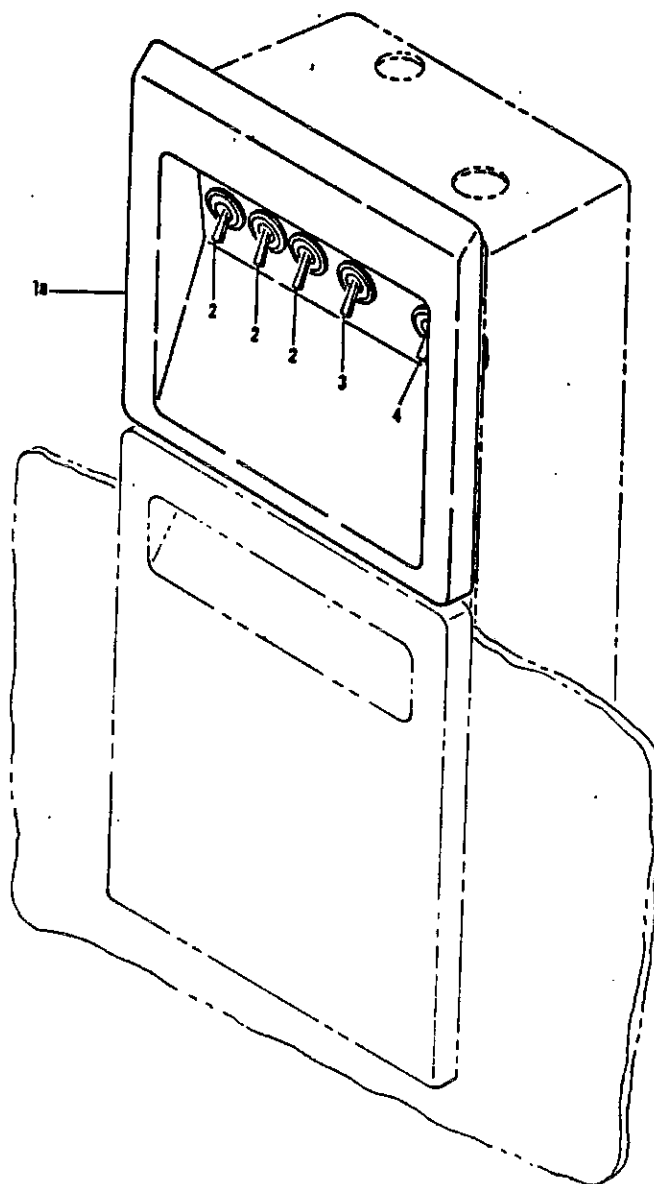


FIGURE 113. PANEL INSTL, CARGO ATTENDANTS (LIGHTS ONLY)

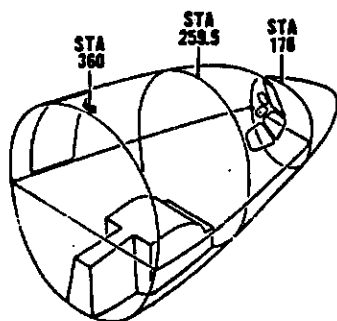

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF	UNITS
			FROM TO	PER ASSY
R R R R R R R R R R	113 65-36748-19	PANEL INSTL, CARGO ATTENDANTS (LIGHTS ONLY) (SEE 25-18, FIG. 118, ITEM 30, 25-18, FIG. 14M, ITEM 47, 25-18, FIG. 15, ITEM 45, 25-18, FIG. 15A, ITEM 50, 25-18, FIG. 15G, ITEM 48, 25-18, FIG. 15H, ITEM 40, 25-18, FIG. 16, ITEM 46, 25-18, FIG. 16G, ITEM 47, 25-18, FIG. 16H, ITEM 50, 25-18, FIG. 16K, ITEM 50, 25-18, FIG. 16M, ITEM 49, 25-18, FIG. 16N, ITEM 49, 25-18, FIG. 17C, ITEM 54, 25-18, FIG. 17D, ITEM 58, 25-18, FIG. 17F, ITEM 52, 25-18, FIG. 17H, ITEM 40, 25-18, FIG. 17J, ITEM 41, 25-18, FIG. 17K, ITEM 52, 25-18, FIG. 17L, ITEM 52, 25-18, FIG. 17M, ITEM 54, 25-18, FIG. 17N, ITEM 40, 25-18, FIG. 17P, ITEM 50, 25-18, FIG. 17Q, ITEM 38, 25-18, FIG. 17R, ITEM 38, 25-18, FIG. 17S, ITEM 47, 25-18, FIG. 17T, ITEM 47, 25-18, FIG. 17V, ITEM 50, 25-18, FIG. 17W, ITEM 42, 25-18, FIG. 17X, ITEM 47, 25-18, FIG. 17Y, ITEM 55 AND 25-18, FIG. 17Z, ITEM 47)	0150	RF
	65-36748-30	PANEL INSTL, CARGO ATTENDANTS (LIGHTS ONLY) (SEE . . . 25-10, FIG. 33D, ITEM 47)	5199	RF
	1A 65-36748-4	. COVER ASSY, CARGO ATTENDANTS PANEL (LIGHTS ONLY). . .	0150	RF
	1A 65-36748-29	. COVER ASSY, (LIGHTS ONLY)	5199	RF
	2 A3-102	. . SWITCH, (V81640).		3
	3 A3-131	. . SWITCH, (V81640). (OPTIONAL AND FOR REPLACEMENT ORDER A3-131-01 (V81640))		1
	3 A3-131-01	. . SWITCH, (V81640). (OPTIONAL TO AND REPLACEMENT FOR A3-131 (V81640))		1
	4 A3-103D4-209	. . SWITCH, (V81640). FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

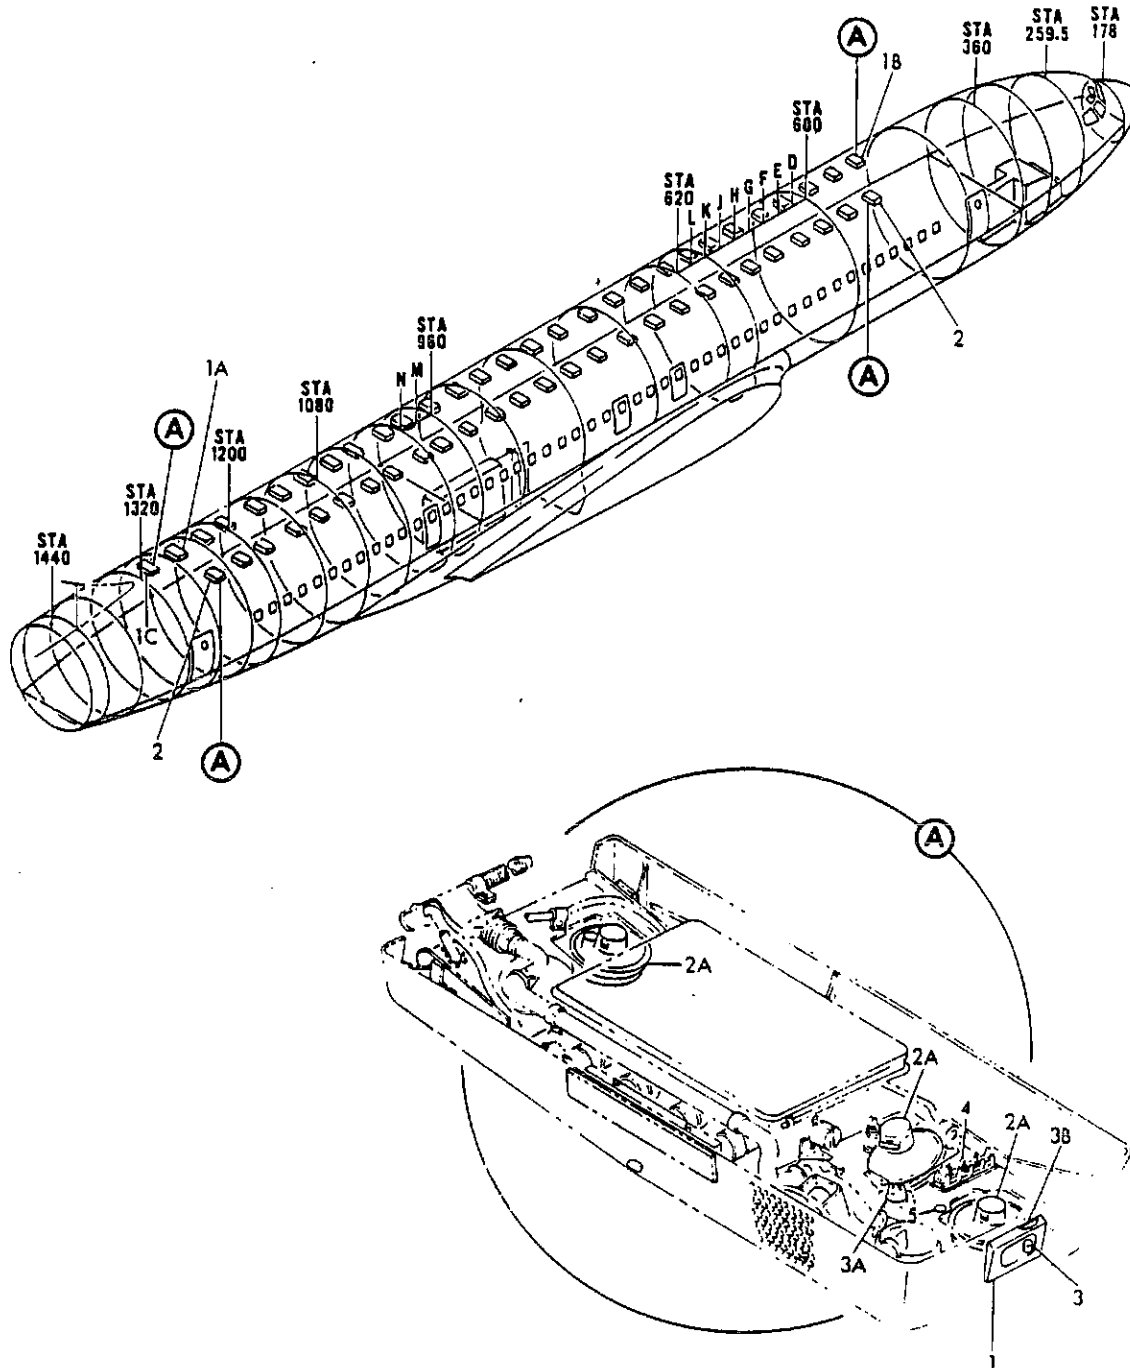


FIGURE 175. SERVICE UNIT INSTL (PASSENGER LIGHTS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
175	65-42148-110	SERVICE UNIT INSTL, PASSENGER (LIGHTS ONLY) (SEE 25-1, FIG. 127, ITEM 46)	0150	RF
1	10-60153-19	. LENS, ATTENDANT CALL ILLUMINATED SIGN (OPTIONAL BAC SPEC NO. 10-60153-12)	0150	55
1	10-60153-12	. LENS, ATTENDANT CALL ILLUMINATED SIGN (OPTIONAL TO BAC SPEC NO. 10-60153-19)	0150	55
1A	65-42148-169	. SERVICE UNIT ASSY, FINAL (LH) (LIGHTS ONLY) (REWORKED BY DWG NO. 65-70773)	0150	27
2	65-42148-32	. SERVICE UNIT ASSY, FINAL (RH) (LIGHTS ONLY) (REWORKED BY DWG NO. 65-70773)	0150	27
2A	10-60914-37	. . LIGHT ASSY, READING (SAME AS 10-0050-51 (V72914)) . (ADDED BY REWORK DWG NO. 65-70773) (LH ONLY) (OPTIONAL BAC SPEC NO. 10-60914-17 (REWORKED BY DWG NO. 65-70773))	0150	3
2A	10-60914-38	. . LIGHT ASSY, READING (SAME AS 10-0050-52 (V72914)) . (ADDED BY REWORK DWG NO. 65-70773) (RH ONLY) (OPTIONAL BAC SPEC NO. 10-60914-17 (REWORKED BY DWG NO. 65-70773))	0150	3
2A	10-60914-17	. . LIGHT ASSY, READING (SAME AS 10-0050-17 (V72914)) . (REWORKED BY DWG NO. 65-70773) (OPTIONAL TO BAC SPEC NO. 10-60914-37, -38 (ADDED BY REWORK DWG NO. 65-70773))	0150	3
2A	10-0050-51	. . LIGHT ASSY, ADJUSTABLE READING (V72914) (SAME AS. . BAC SPEC NO. 10-60914-37) (LH ONLY) (SEE FIG. 195) (OPTIONAL 10-0050-17 (V72914))	0150	RF
2A	10-0050-52	. . LIGHT ASSY, ADJUSTABLE READING (V72914) (SAME AS. . BAC SPEC NO. 10-60914-38) (RH ONLY) (SEE FIG. 195) (OPTIONAL 10-0050-17 (V72914))	0150	RF
2A	10-0050-17	. . LIGHT ASSY, ADJUSTABLE READING (V72914) (SAME AS. . BAC SPEC NO. 10-60914-17) (SEE FIG. 195) (OPTIONAL TO 10-0050-51, -52 (V72914))	0150	RF
3	1864NR	. . LAMP, (V24455) (REPLACES EXISTING LAMP INCLUDED . . WITH BAC SPEC NO. 10-60153-9)	0150	1
3A	65-42366-5A	. . SERVICE UNIT ASSY, (LIGHTS ONLY) (LH ONLY).	0150	1
3A	65-42366-6A	. . SERVICE UNIT ASSY, (LIGHTS ONLY) (RH ONLY).	0150	1
3A	BACS30EG11BL	. . . SWITCH.	0150	1
3A	65-42366-9	. . . FRAME ASSY, (LIGHTS ONLY) (LH ONLY)	0150	1
3A	65-42366-10	. . . FRAME ASSY, (LIGHTS ONLY) (RH ONLY)	0150	1
3B	10-60153-9	. . . HOUSING, ATTENDANT CALL ILLUMINATED SIGN.	0150	1
	NAS601-3	. . . ATTACHING PARTS	0150	2
	NAS679A06W	. . . SCREW	0150	2
		. . . NUT	0150	2
4	MS27212-1-4	. . . *-----		
	NAS600-4	. . . TERMINAL BLOCK ASSY	0150	1
		. . . ATTACHING PARTS		
		. . . SCREW	0150	2
5	BACM10N00-2S	. . . *-----		
		. . . MARKER-ALUMINUM FOIL, 1	0150	1
		. . . FOR REFERENCE TO OTHER SERVICE UNIT DETAILS, SEE NHA	0150	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

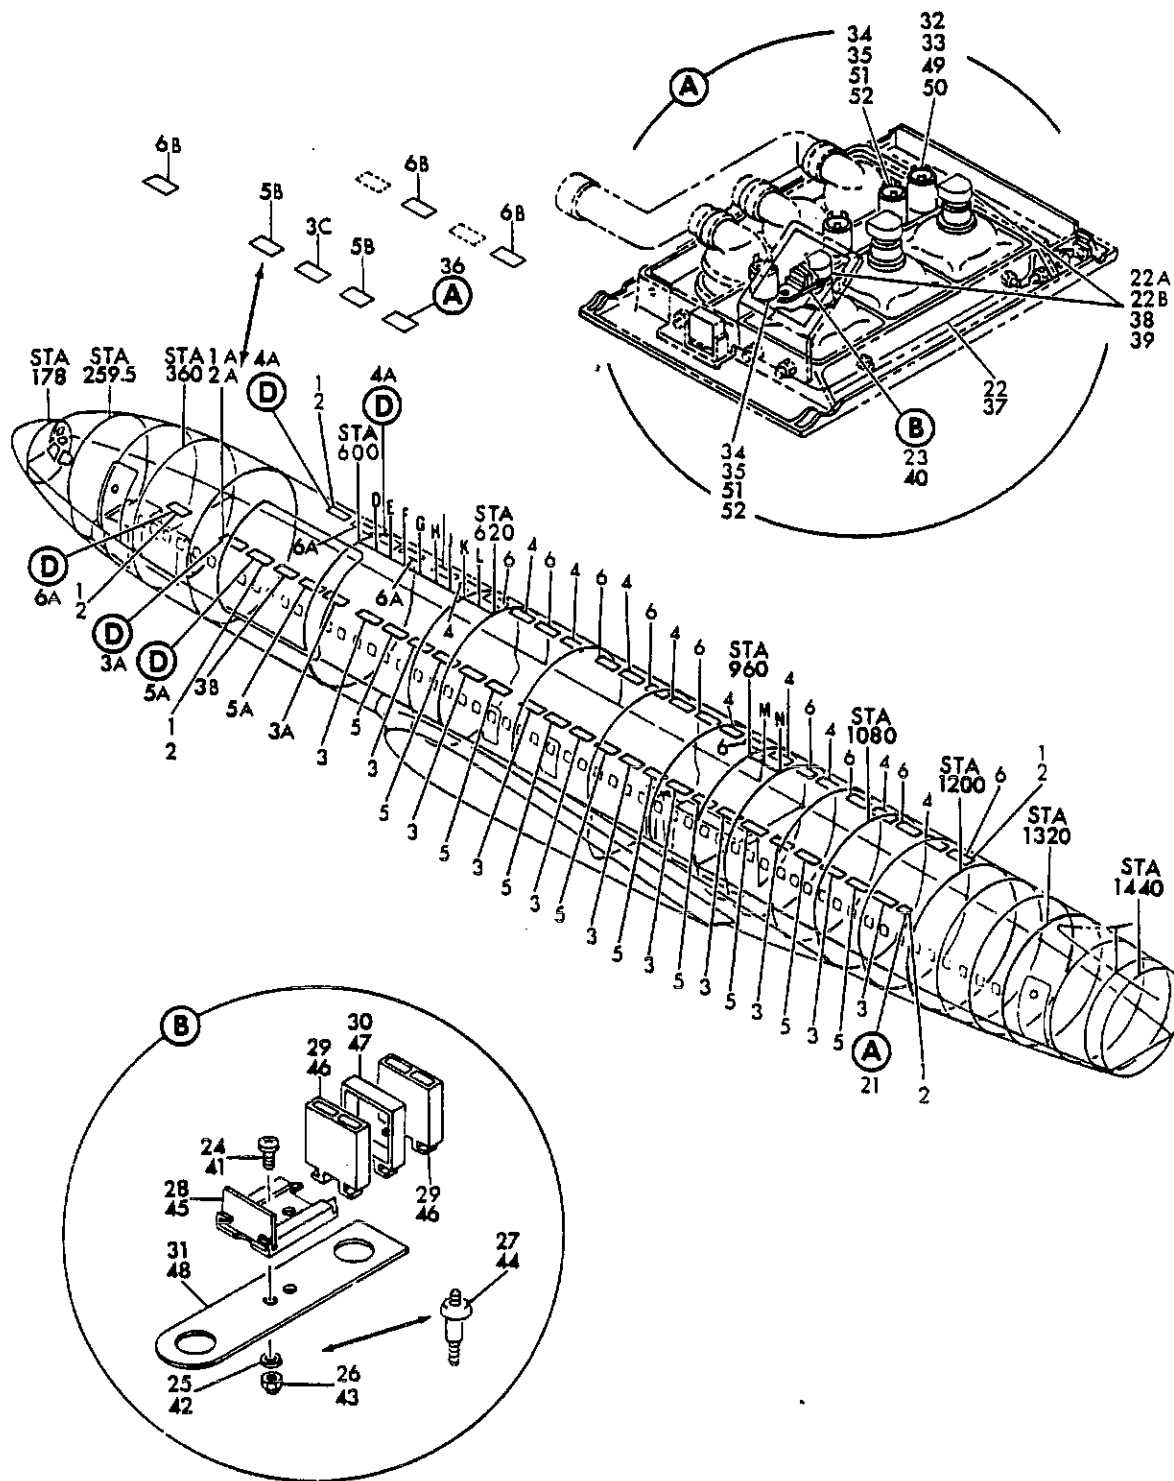


FIGURE 188D. SERVICE UNIT INSTL, PASSENGER (LIGHTS ONLY) (SHEET 1)


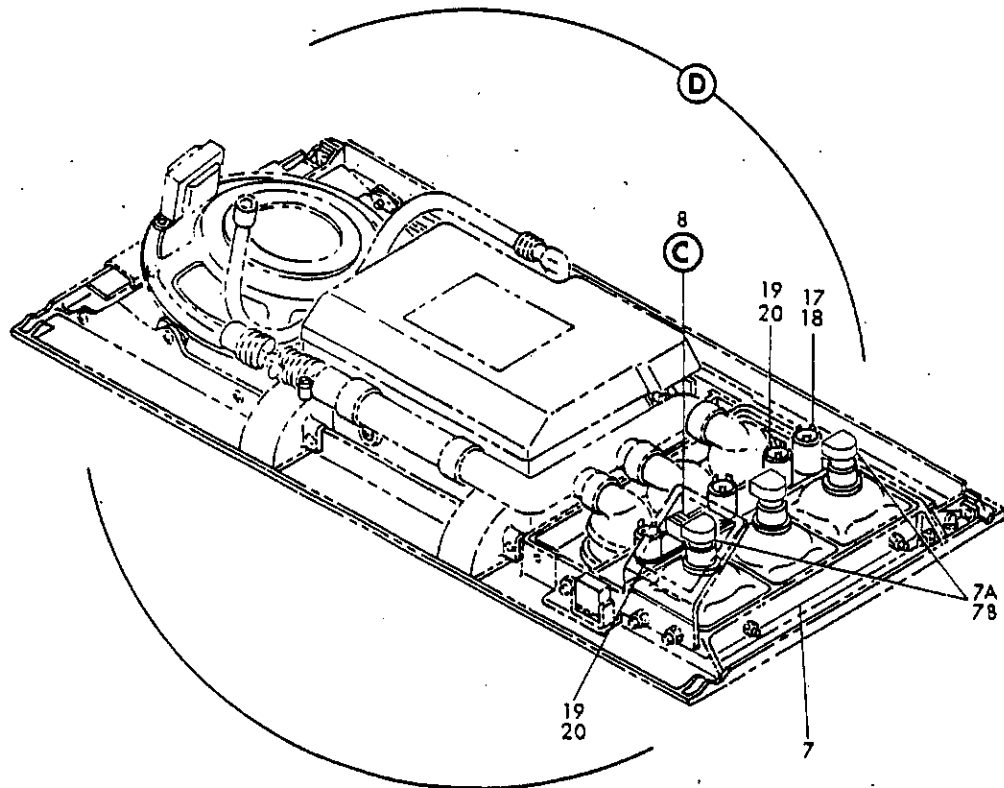


FIGURE 188D. SERVICE UNIT INSIL, PASSENGER (LIGHTS ONLY) (SHEET 2)

NOV 21/90

33-04-188D

DETAILED PARTS LIST
33-04-188D
PAGE 1

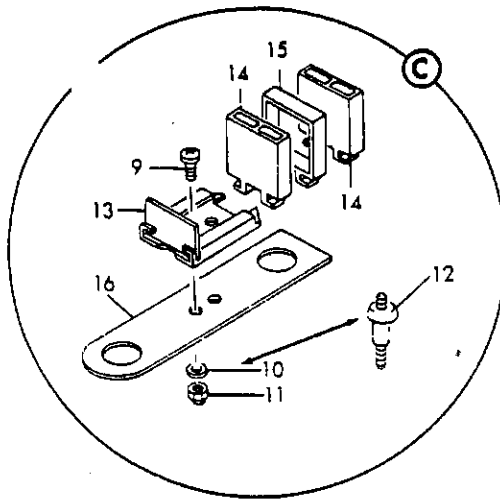

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE										EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7					
188D	65-86409-42	SERVICE UNIT INSTL, PASSENGER (LIGHTS ONLY) (SEE. 25-1, FIG. 174C, ITEM 3)										5151	RF
	65-86409-43	SERVICE UNIT INSTL, PASSENGER (LIGHTS ONLY) (SEE. 25-1, FIG. 174C, ITEM 3)										5299	RF
1	10-61892-3	HOUSING, NO SMOKING FASTEN SEAT BELT SIGN LAMP.										5199	52
1A	10-61892-3	HOUSING, NO SMOKING FASTEN SEAT BELT SIGN LAMP.										5199	1
2	10-61892-145	LENS, NO SMOKING FASTEN SEAT BELT SIGN.										5199	52
2A	10-61892-145	LENS, NO SMOKING FASTEN SEAT BELT SIGN.										5199	1
3	65-79164-129AV	SERVICE UNIT ASSY, (LIGHTS ONLY).										5199	RF
3A	65-79164-129AV	SERVICE UNIT ASSY, (LIGHTS ONLY).										5199	RF
3B	65-79164-129AV	SERVICE UNIT ASSY, (LIGHTS ONLY).										5199	RF
4	65-79164-130AV	SERVICE UNIT ASSY, (LIGHTS ONLY).										5199	RF
4A	65-79164-130AV	SERVICE UNIT ASSY, (LIGHTS ONLY).										5199	RF
5	65-79164-131AV	SERVICE UNIT ASSY, (LIGHTS ONLY).										5199	RF
5A	65-79164-131AV	SERVICE UNIT ASSY, (LIGHTS ONLY).										5199	RF
6	65-79164-132AV	SERVICE UNIT ASSY, (LIGHTS ONLY).										5199	RF
6A	65-79164-132AV	SERVICE UNIT ASSY, (LIGHTS ONLY).										5199	RF
7	10-61779-1A	LIGHT ASSY, READING (SAME AS 10-0429-1A (V72914)) (USED ON 65-79164-129AV, -131AV)										5199	1
7	10-0429-1A	LIGHT ASSY, READING (V72914) (SAME AS BAC SPEC. NO. 10-61779-1A) (USED ON 65-79164-129AV, -131AV)										5199	RF
7	10-61779-1A	LIGHT ASSY, READING (SAME AS 10-0429-1A (V72914)) (USED ON 65-79164-129AV)										5199	1
7	10-61779-2A	LIGHT ASSY, READING (SAME AS 10-0429-2A (V72914)) (USED ON 65-79164-130AV, -132AV)										5199	1
7	10-0429-2A	LIGHT ASSY, READING (V72914) (SAME AS BAC SPEC. NO. 10-61779-2A) (USED ON 65-79164-130AV, -132AV)										5199	RF
	MS35335-31	WASHER, (USED WITH MS35649-282) (OPTIONAL BACN10JC08)										5199	2
	MS35335-31	WASHER, (USED WITH MS35649-282) (OPTIONAL BACN10JC08)										5199	2
	MS35649-282	NUT, (USED WITH MS35335-31) (OPTIONAL BACN10JC08)										5199	2
	MS35649-282	NUT, (USED WITH MS35335-31) (OPTIONAL BACN10JC08)										5199	2
	BACN10JC08	NUT (OPTIONAL TO MS35335-31 WITH MS35649-282)										5199	2
	BACN10JC08	NUT (OPTIONAL TO MS35335-31 WITH MS35649-282)										5199	2
M 7A	2233	LAMP, (V08806)										5199	3
M 7A	2233	LAMP, (V08806)										5199	3
M 7B	16-0753-1	BOOT, (V72914)										5199	3
M 7B	16-0753-1	BOOT, (V72914)										5199	3
8	69-65298-1	BLOCK ASSY, TERMINAL										5199	1
8	69-65298-1	BLOCK ASSY, TERMINAL										5199	1
9	NAS602-7	SCREW, (USED WITH AN960PDBL AND BACN10JC08) (OPTIONAL TO MS20604B6W2)										5199	2
9	NAS602-7	SCREW, (USED WITH AN960PDBL AND BACN10JC08) (OPTIONAL TO MS20604B6W2)										5199	2
10	AN960PDBL	WASHER, (USED WITH NAS602-7)										5199	2
10	AN960PDBL	WASHER, (USED WITH NAS602-7)										5199	2
11	BACN10JC08	NUT, (USED WITH NAS602-7)										5199	2
11	BACN10JC08	NUT, (USED WITH NAS602-7)										5199	2
12	MS20604B6W2	RIVET (OPTIONAL NAS602-7 WITH AN960PDBL, BACN10JC08)										5199	2
12	MS20604B6W2	RIVET (OPTIONAL NAS602-7 WITH AN960PDBL, BACN10JC08)										5199	2
13	AMY0110T-8	BOTTOM AND KEEPER, (V09922)										5199	1
13	AMY0110T-8	BOTTOM AND KEEPER, (V09922)										5199	1
14	BACM15C1A	CONNECTOR										5199	2
14	BACM15C1A	CONNECTOR										5199	2
15	YHLZ1C8	SPACER, (V09922)										5199	1
15	YHLZ1C8	SPACER, (V09922)										5199	1
16	69-65258-1	BASE										5199	1
16	69-65258-1	BASE										5199	1
17	710906-13A1	SWITCH, CALL LIGHT (V97564)										5199	1
17	710906-13A1	SWITCH, CALL LIGHT (V97564)										5199	1
18	690623A1-4	LENS, CALL LIGHT SWITCH (V97564)										5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE										EFF FROM TO	UNITS PER ASSY							
			1	2	3	4	5	6	7												
188D	18	690623A1-4	. . . LENS, CALL LIGHT SWITCH (V97564)										5199	1							
	19	710907-13A2	. . . SWITCH, READING LIGHT (V97564)										5199	3							
	19	710907-13A2	. . . SWITCH, READING LIGHT (V97564)										5199	3							
	20	69-1212-13A1-1A	. . . LENS, READING LIGHT SWITCH (V97564)										5199	3							
	20	69-1212-13A1-1A	. . . LENS, READING LIGHT SWITCH (V97564)										5199	3							
	21	65-86413-41AV	. . . SERVICE UNIT ASSY, (LIGHTS ONLY) (PARTIAL)										5199	RF							
	22	10-61779-1A	. . . LIGHT ASSY, READING (SAME AS 10-0429-1A (V08806))										5199	1							
	22	10-0429-1A	. . . LIGHT ASSY, READING (V72914) (SAME AS BAC SPEC.										5199	RF							
													NO. 10-61779-1A)								
													ATTACHING PARTS								
		MS35335-31	. . . WASHER, (USED WITH MS35649-282)										5199	2							
													(OPTIONAL BACN10JC08)								
		MS35649-282	. . . NUT, (USED WITH MS35335-31)										5199	2							
													(OPTIONAL BACN10JC08)								
	BACN10JC08	. . . NUT										5199	2								
												(OPTIONAL TO MS35335-31 WITH MS35649-282)									
-----*																					
M 22A	2233	. . . LAMP, (V08806)										5199	3								
M 22B	16-0753-1	. . . BOOT, (V72914)										5199	3								
23	69-65298-1	. . . BLOCK ASSY, TERMINAL										5199	1								
24	NAS602-7	. . . SCREW, (USED WITH AN960PDBL AND BACN10JC08)										5199	2								
												(OPTIONAL TO MS20604B6W2)									
25	AN960PDBL	. . . WASHER, (USED WITH NAS602-7)										5199	2								
26	BACN10JC08	. . . NUT, (USED WITH NAS602-7)										5199	2								
27	MS20604B6W2	. . . RIVET										5199	2								
												(OPTIONAL NAS602-7 WITH AN960PDBL, BACN10JC08)									
28	AMY011QT-8	. . . BOTTOM AND KEEPER, (V09922)										5199	1								
29	BACM15C1A	. . . CONNECTOR										5199	2								
30	YHLZ1C8	. . . SPACER, (V09922)										5199	1								
31	69-65258-1	. . . BASE										5199	1								
32	710906-13A1	. . . SWITCH, CALL LIGHT (V97564)										5199	1								
33	690623A1-4G	. . . LENS, CALL LIGHT SWITCH (V97564)										5199	1								
34	710907-13A2	. . . SWITCH, READING LIGHT (V97564)										5199	3								
35	691212-13A1-1E	. . . LENS, READING LIGHT SWITCH (V97564)										5199	3								
50	690623A1-4G	. . . LENS, CALL LIGHT SWITCH (V97564)										5199	1								
												FOR REFERENCE TO OTHER SERVICE UNIT DETAILS, SEE NHA									
												5199									

MISSING ITEM NUMBERS ARE NOT APPLICABLE

MISSING ITEM NUMBERS ARE NOT APPLICABLE

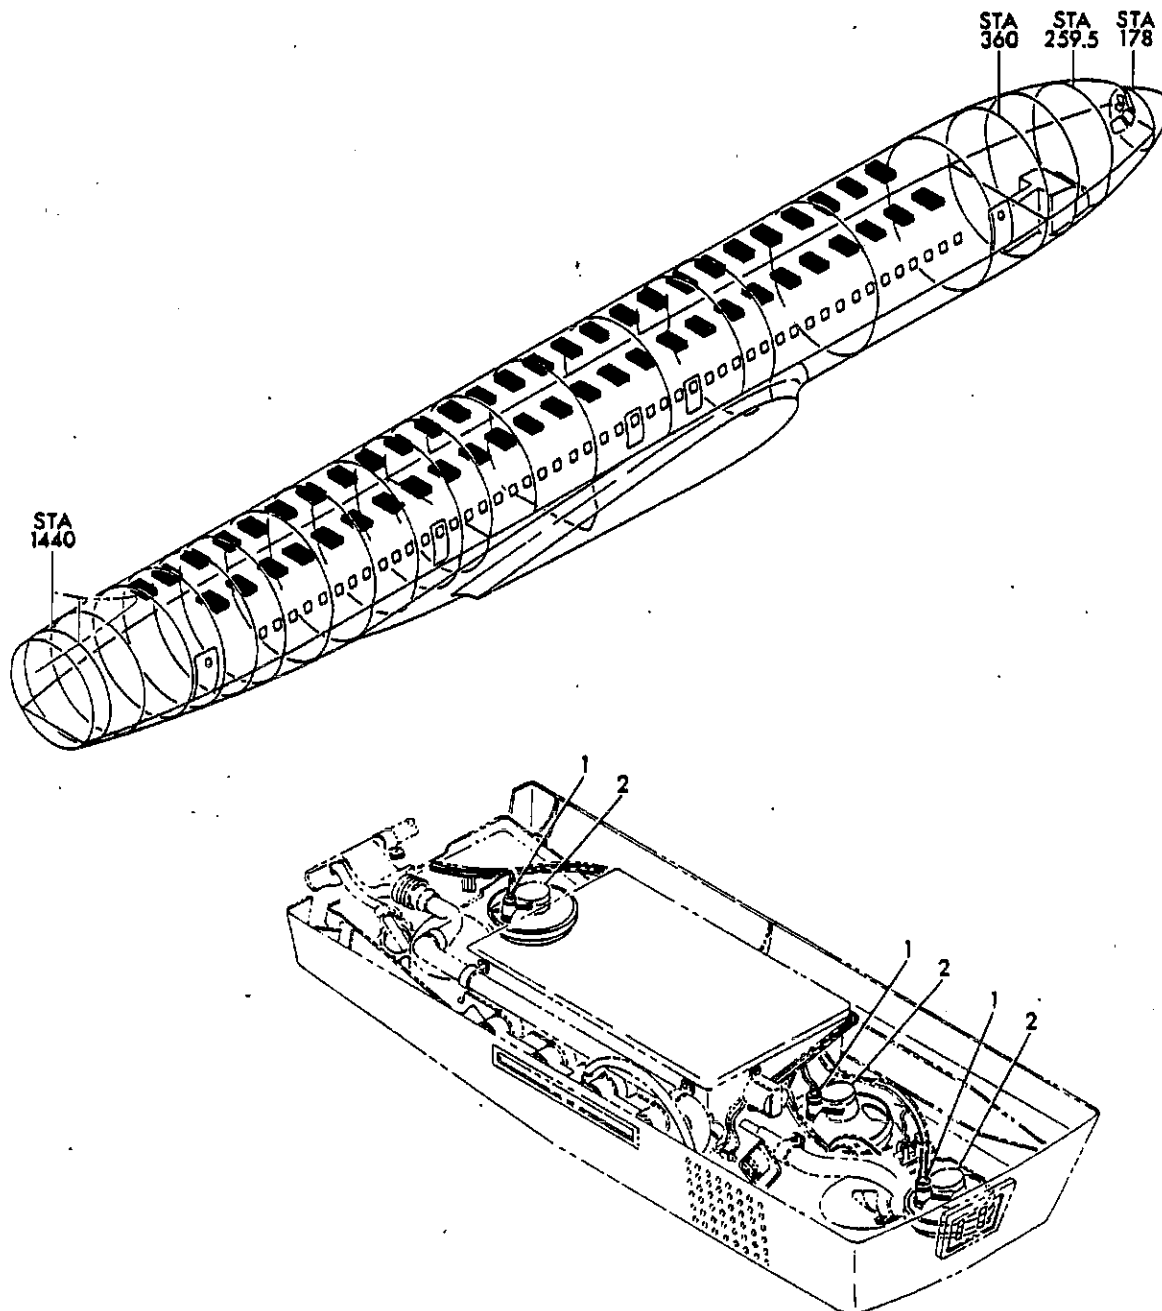


FIGURE 195. LIGHT ASSY, PASSENGER SERVICE UNIT ADJUSTABLE READING



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R R R	195	10-0050-51	0150	RF
		10-0050-52	0150	RF
		10-0050-17	0150	RF
	M 1	55-0045-5	0150	1
	M 2	GE1691	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				


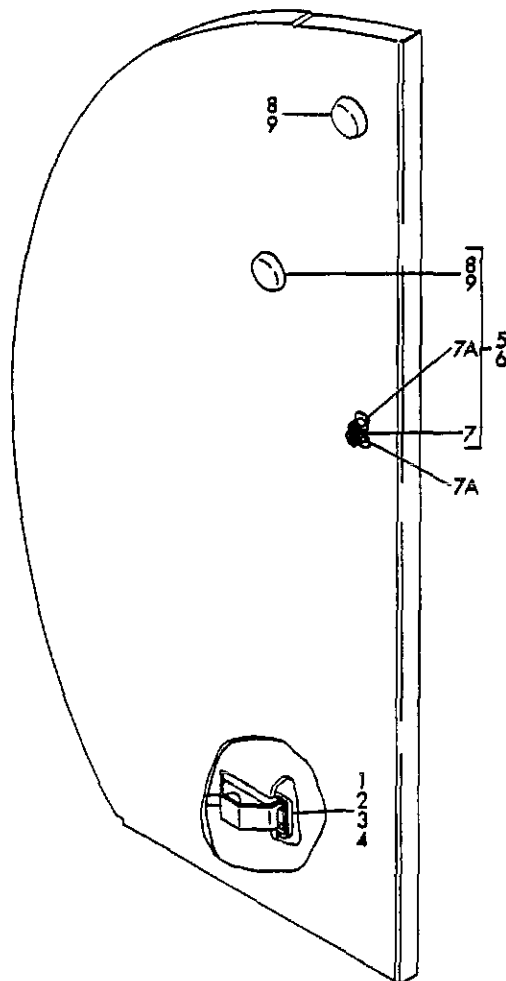


FIGURE 196. PARTITION INSTL. STATION 1382.75 LH AFT CLOSET (LIGHTS ONLY)

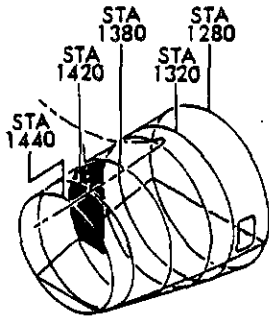

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
196	65-73524-16P		PARTITION INSTL, STATION 1382.75 LH AFT CLOSET (LIGHTS ONLY) (SEE 25-17, FIG. 47A, ITEM 26)	5199	RF
3	69-34853-4D		. LIGHT INSTL, AFT ENTRY DOOR THRESHOLD	5151	1
4	89700-2		. . LIGHT ASSY, (V72914).	5151	1
	NAS514P832-10		ATTACHING PARTS		
	NAS679A08W		. . SCREW	5151	4
			. . NUT	5151	4
			-----*		
5	65-73524-17P		. PANEL AND STRUCTURE ASSY, (LIGHTS ONLY)	5199	RF
6	65-73496-9R		. . PANEL ASSY, (LIGHTS ONLY)	5199	1
7	8480K3		. . . SWITCH, (V27193).	5199	1
	NAS601-3P		ATTACHING PARTS		
			. . . SCREW	5199	2
			-----*		
7A	SL607-06-4S		. . . INSERT, (V97393).	5199	2
8	63-2644		. . . PLATE, LIGHT MOUNTING	5199	2
	NAS514P832-10		ATTACHING PARTS		
	NAS43DD3-8		. . . SCREW	5199	8
	BACN10JC08		. . . SPACER.	5199	8
			. . . NUT	5199	8
			-----*		
9	22170-230303-10		. . . LIGHT, (V72914)	5199	2
	NAS514P632-6		ATTACHING PARTS		
	BACN10JC06		. . . SCREW	5199	8
			. . . NUT	5199	8
			-----*		
			. FOR REFERENCE TO OTHER PARTITION DETAILS, SEE NHA . .	5199	

MISSING ITEM NUMBERS ARE NOT APPLICABLE


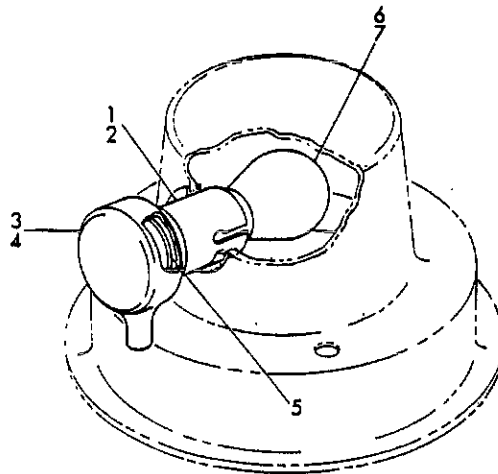


FIGURE 203. LIGHT ASSY, CEILING DOME

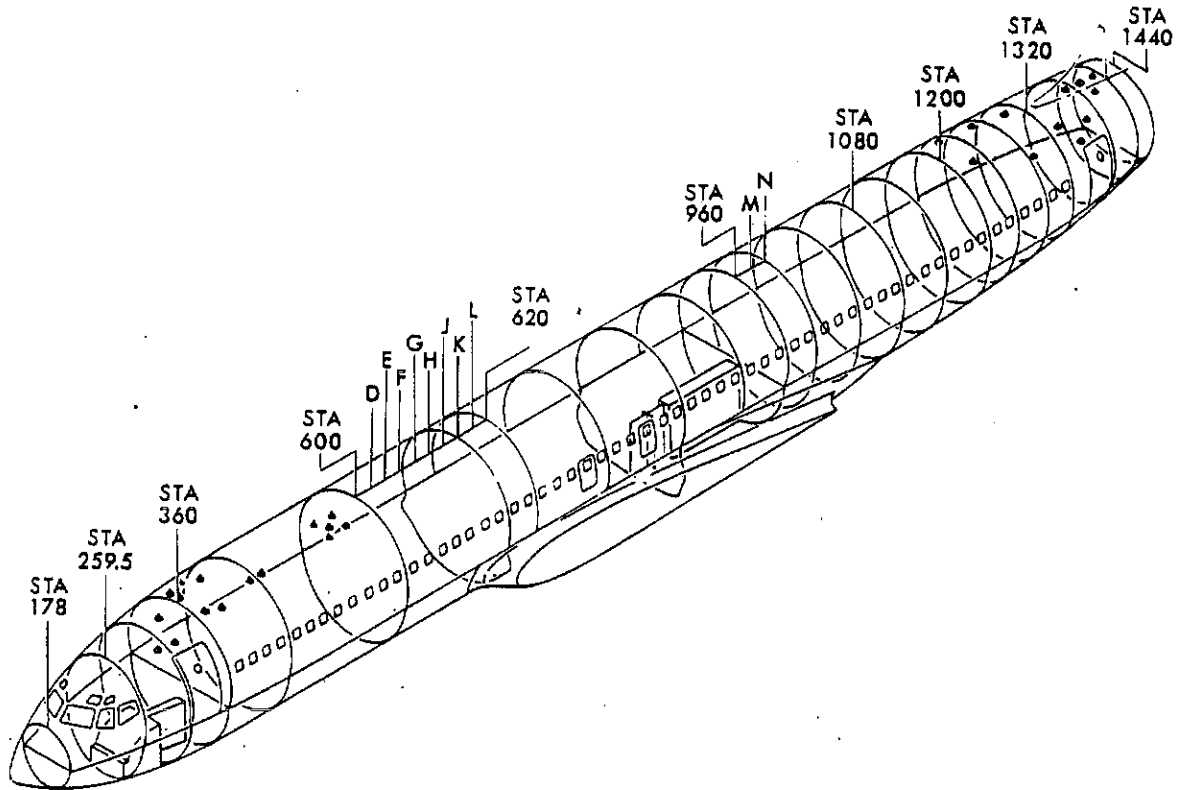

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R R R	203	L15257		LIGHT ASSY, CEILING DOME (V17744) (SAME AS BAC SPEC NO. 10-60196-2) (SEE NUMERICAL ITEM FOR APPLICABLE NHA)		RF
		L15297		LIGHT ASSY, CEILING DOME (V17744) (SAME AS BAC SPEC NO. 10-60196-4) (SEE NUMERICAL ITEM FOR APPLICABLE NHA)	0150	RF
		L16223		LIGHT ASSY, CEILING DOME (V17744) (SAME AS BAC SPEC NO. 10-60196-6) (SEE FIG. 28, ITEM 5 AND FIG. 28A, ITEM 2)	0150	RF
	M 1	P19403-1		. SOCKET, (V17744)		1
	M 2	P19403-1		. SOCKET, (V17744) (USED ON L15297 AND L16277 (V17744))	0150	1
	M 3	P37861		. BOOT, SILICONE (V17744)		1
	M 4	P37861		. BOOT, SILICONE (V17744) (USED ON L15297 AND L16277. . . (V17744))	0150	1
	M 5	P23680		. DISC, INSULATING (V17744)		1
	M 6	GE1251		. LAMP, CLEAR (V08806) (USED ON L15257, L15293, . . . L16276, L16223 (V17744))	0150	1
	M 6	GE1665		. LAMP, CLEAR (V08806) (USED ON L15297 AND L18631 . . . (V17744))	0150	1
	M 7	GE1251		. LAMP, CLEAR (V08806) (USED ON L15297 AND L16277 . . . (V17744))	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

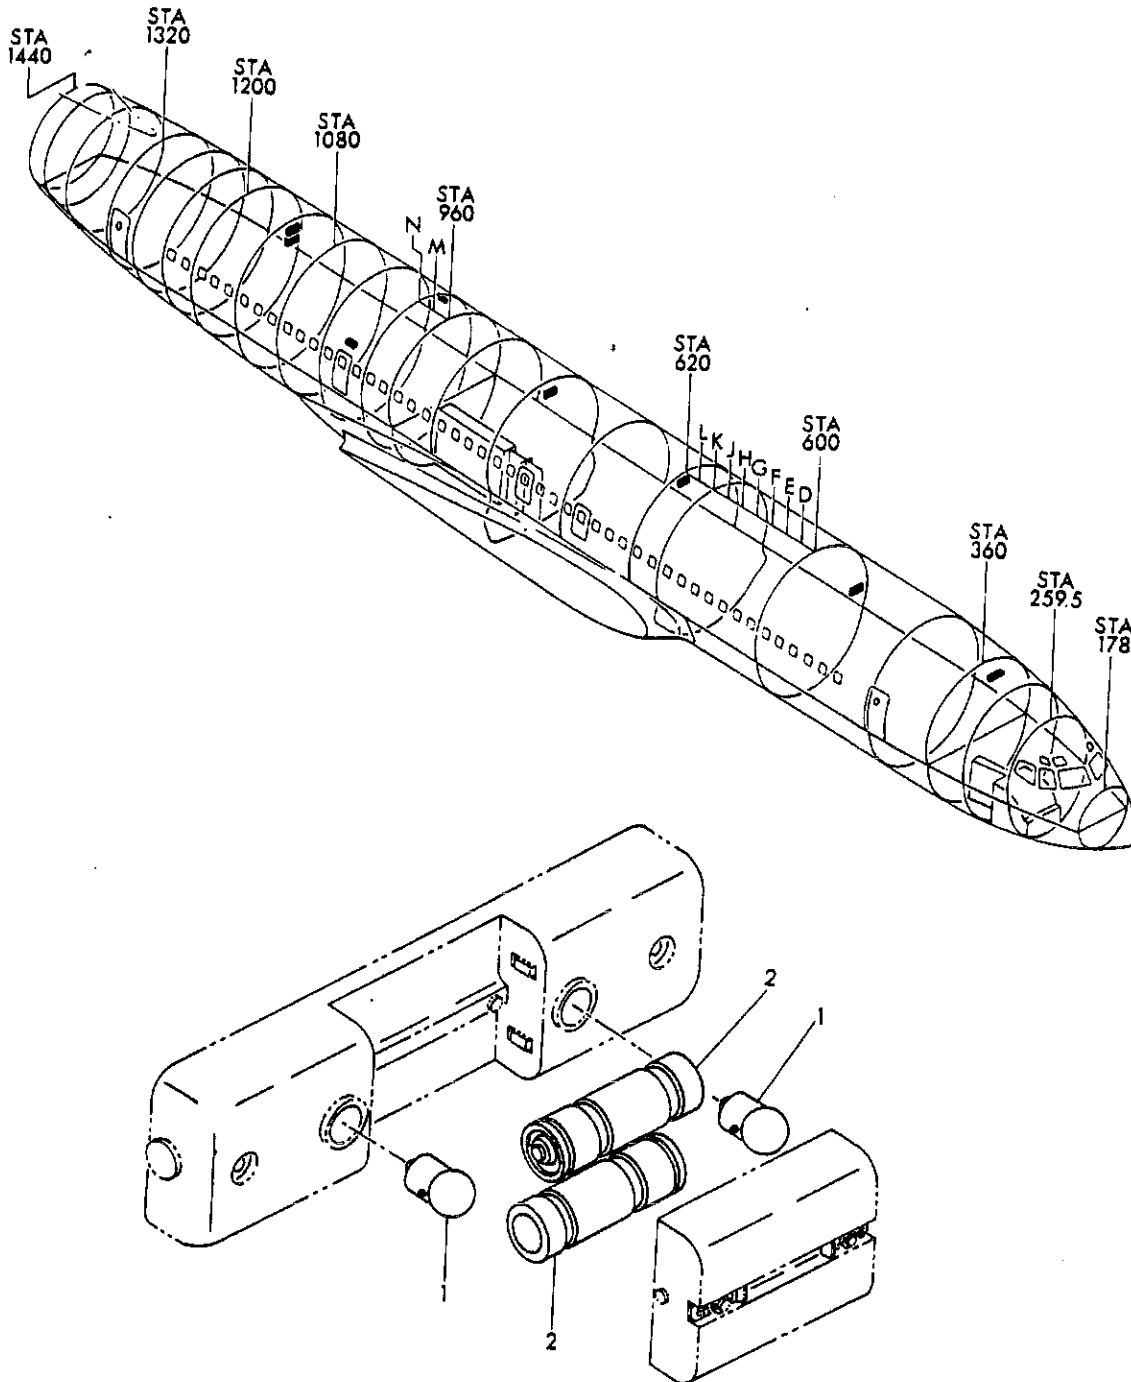


FIGURE 204. LIGHT SUB ASSY, EMERGENCY EXIT



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
204	11-0283-3	LIGHT SUB ASSY, EMERGENCY EXIT (V72914) (SAME AS BAC. . SPEC NO. 10-60091-126) (SEE 11-1, FIG. 19, ITEM 8, 8B, 8D, 8E, 8G, 8J AND 11-1, FIG. 20C, ITEM 5, 10, 11 AND 12)							0150	RF
M 1	1315	. LAMP, 2.5V, 1 AMP (V08806).							0150	2
M 2	S106	. BATTERY, (V55933)							0150	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

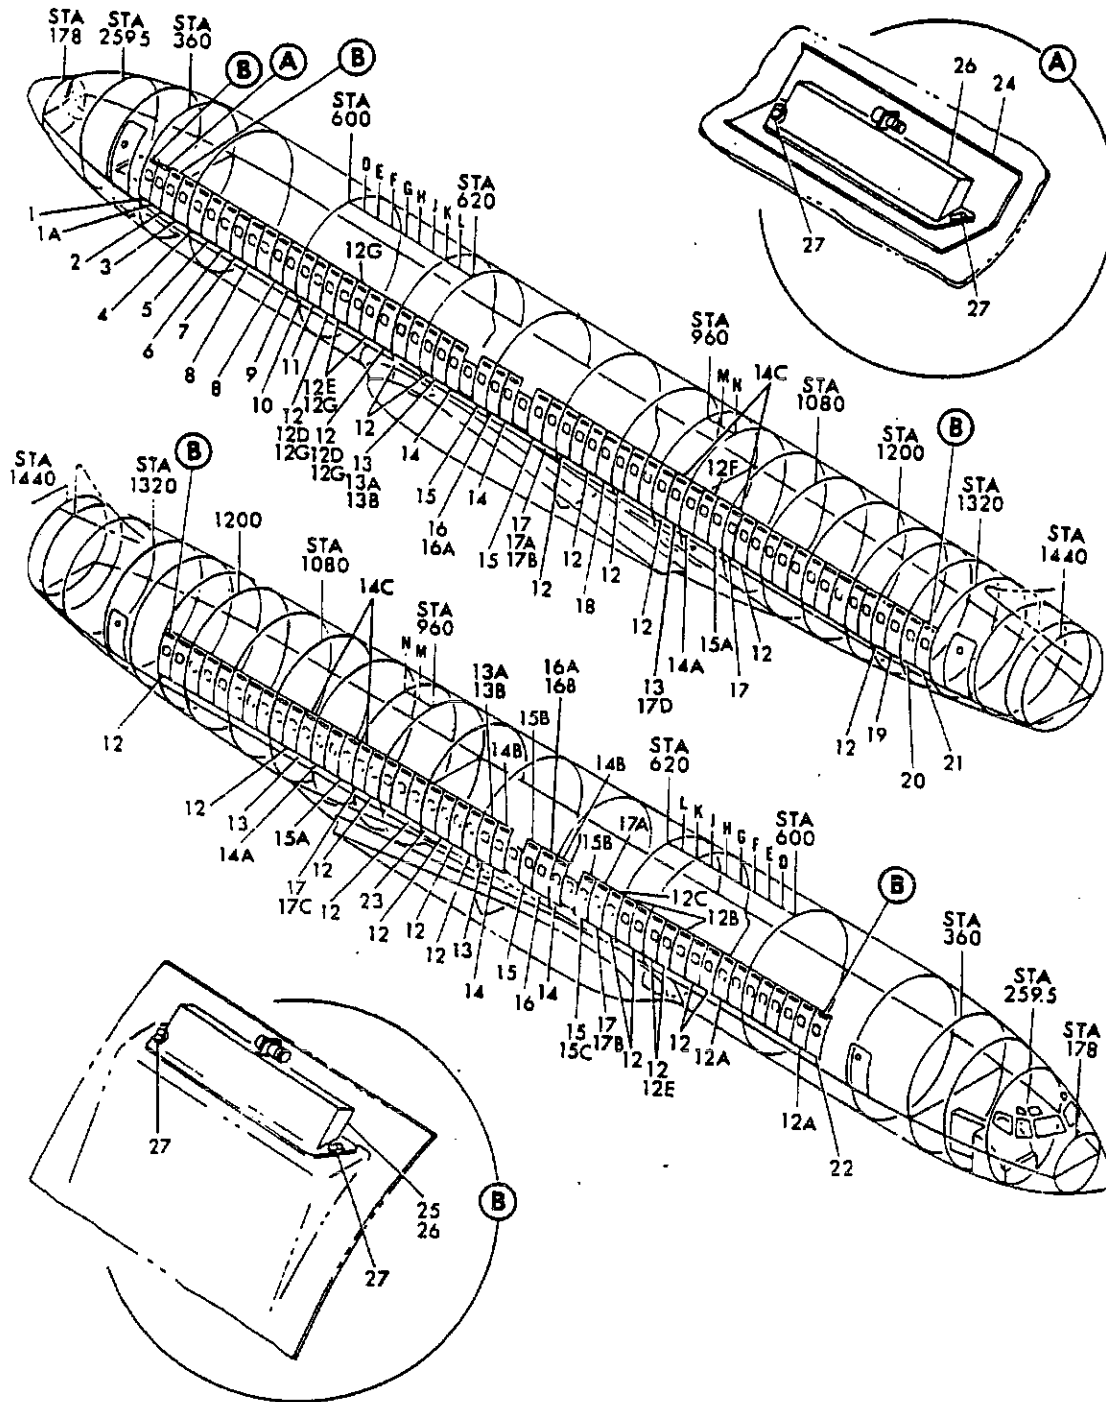


FIGURE 207L PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) FIGURE 207L COVER ASSY, WINDOW PANEL (LIGHTS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
207L 1	65-79108-50N		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151 25-10, FIG. 33E, ITEM 11A)		RF
1	65-79108-556N		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299 25-10, FIG. 33E, ITEM 11A)		RF
2	65-79108-47R		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151 25-10, FIG. 33E, ITEM 12)		RF
2	65-79108-554R		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299 25-10, FIG. 33E, ITEM 12)		RF
3	65-79108-49A		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5199 25-10, FIG. 31P, ITEM 40 AND 25-10, FIG. 33J, ITEM 14)		RF
3	65-79108-49S		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151 25-10, FIG. 33E, ITEM 13)		RF
3	65-79108-555S		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299 25-10, FIG. 33E, ITEM 13)		RF
4	65-79108-46S		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151 25-10, FIG. 33E, ITEM 14)		RF
4	65-79108-553S		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299 25-10, FIG. 33E, ITEM 14)		RF
5	65-79108-239M		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151 25-10, FIG. 33E, ITEM 15)		RF
5	65-79108-610M		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299 25-10, FIG. 33E, ITEM 15)		RF
6	65-79108-225P		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151 25-10, FIG. 33E, ITEM 79)		RF
6	65-79108-603P		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299 25-10, FIG. 33E, ITEM 79)		RF
7	65-79108-40R		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151 25-10, FIG. 33E, ITEM 80)		RF
7	65-79108-551R		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299 25-10 FIG. 33E, ITEM 80)		RF
8	65-79108-39R		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151 25-10, FIG. 33E, ITEM 81)		RF
8	65-79108-550R		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299 25-10, FIG. 33E, ITEM 81)		RF
9	65-79108-41R		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151 25-10, FIG. 33E, ITEM 82)		RF
9	65-79108-552R		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299 25-10, FIG. 33E, ITEM 82)		RF
10	65-79108-224P		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151 25-10, FIG. 33E, ITEM 83)		RF
10	65-79108-602P		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299 25-10, FIG. 33E, ITEM 83)		RF
11	65-79108-222P		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151 25-10, FIG. 33E, ITEM 84)		RF
11	65-79108-601P		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299 25-10, FIG. 33E, ITEM 84)		RF
12	65-79108-32AD		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151 25-10, FIG. 33E, ITEM 85, 25-10, FIG. 33G, ITEM 56, 25-10, FIG. 33H, ITEM 12, 93, 25-10, FIG. 33S, ITEM 12, 105)		RF
12	65-79108-544AD		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299 25-10, FIG. 33E, ITEM 85, 25-10, FIG. 33G, ITEM 56, 25-10, FIG. 33H, ITEM 12, 93 AND 25-10, FIG. 33S, ITEM 12, 105)		RF
12A	65-79108-379J		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151 25-10, FIG. 33G, ITEM 20 AND ITEM 55)		RF
12A	65-79108-611J		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299 25-10, FIG. 33G, ITEM 20, 55)		RF
12G	65-79108-544AD		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299 25-10, FIG. 33E, ITEM 85D)		RF
13	65-79108-36Y		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151 25-10, FIG. 33E, ITEM 86, 25-10, FIG. 33G, ITEM 61, 25-10, FIG. 33H, ITEM 17, 25-10, FIG. 33S, ITEM 14, 25-10, FIG. 35C, ITEM 50, 179 AND 25-10, FIG. 35D, ITEM 48, 131)		RF
13	65-79108-548Y		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299 25-10, FIG. 33E, ITEM 86, 25-10, FIG. 33G, ITEM 61, 25-10, FIG. 33H, ITEM 17 AND 25-10, FIG. 33S, ITEM 14)		RF
14	65-79108-35Z		PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151 25-10, FIG. 33E, ITEM 87 AND 25-10, FIG. 33G, ITEM 59)		RF
MISSING ITEM NUMBERS ARE NOT APPLICABLE					



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
207L 14	65-79108-547Z	PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299		RF
		25-10, FIG. 33E, ITEM 87 AND 25-10, FIG. 33G, .		
		ITEM 59)		
14A	65-79108-263K	PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151		RF
		25-10, FIG. 33H, ITEM 16 AND 25-10, FIG. 33S, .		
		ITEM 15)		
14A	65-79108-716K	PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299		RF
		25-10, FIG. 33H, ITEM 16 AND 25-10, FIG. 33S, .		
		ITEM 15)		
15	65-79108-34Z	PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151		RF
		25-10, FIG. 33E, ITEM 88 AND 25-10, FIG. 33G, .		
		ITEM 58)		
15	65-79108-546Z	PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299		RF
		25-10, FIG. 33E, ITEM 88 AND 25-10, FIG. 33G, .		
		ITEM 58)		
15A	65-79108-262K	PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151		RF
		25-10, FIG. 33H, ITEM 15 AND 25-10, FIG. 33S, ITEM .		
		16)		
15A	65-79108-715K	PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299		RF
		25-10, FIG. 33H, ITEM 15 AND 25-10, FIG. 33S, ITEM .		
		16)		
16	65-79108-38W	PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151		RF
		25-10, FIG. 33E, ITEM 89 AND 25-10, FIG. 33G, ITEM .		
		60)		
16	65-79108-549W	PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299		RF
		25-10, FIG. 33E, ITEM 89 AND 25-10, FIG. 33G, ITEM .		
		60)		
17	65-79108-33W	PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151		RF
		25-10, FIG. 33E, ITEM 90, 25-10, FIG. 33G, ITEM 57, .		
		25-10, FIG. 33H, ITEM 14 AND 25-10, FIG. 33S, .		
		ITEM 17)		
17	65-79108-545W	PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299		RF
		25-10, FIG. 33E, ITEM 90, 25-10, FIG. 33G, ITEM 57, .		
		25-10, FIG. 33H, ITEM 14 AND 25-10, FIG. 33S, .		
		ITEM 17)		
18	65-79108-381J	PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151		RF
		25-10, FIG. 33S, ITEM 13)		
18	65-79108-613J	PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299		RF
		25-10, FIG. 33S, ITEM 13)		
19	65-79108-31Q	PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151		RF
		25-10, FIG. 33S, ITEM 106)		
19	65-79108-543Q	PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299		RF
		25-10, FIG. 33S, ITEM 106)		
20	65-79108-30P	PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151		RF
		25-10, FIG. 33S, ITEM 107)		
20	65-79108-542P	PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299		RF
		25-10, FIG. 33S, ITEM 107)		
21	65-79108-29P	PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151		RF
		25-10, FIG. 33S, ITEM 108)		
21	65-79108-541P	PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299		RF
		25-10, FIG. 33S, ITEM 108)		
22	65-79108-539A	PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151		RF
		25-10, FIG. 33G, ITEM 19)		
22	65-79108-798A	PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299		RF
		25-10, FIG. 33G, ITEM 19)		
23	65-79108-382J	PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5151		RF
		25-10, FIG. 33H, ITEM 13)		
23	65-79108-614J	PANEL ASSY, PASSENGER CABIN WINDOW (LIGHTS ONLY) (SEE . 5299		RF
		25-10, FIG. 33H, ITEM 13)		
24	65-85750-1M	COVER ASSY, WINDOW PANEL (LIGHTS ONLY) (SEE 25-10, . . . 5199		RF
		FIG. 61Y, ITEM 1)		
25	10-61773-1	. LIGHT, (NOT USED ON 65-79108-225, -603, -224, -602, . 5199		1
		-338, -339 AND 65-85750-1)		
26	10-61773-2	. LIGHT, (USED ON 65-79108-225, -603, -224, -602, . . . 5199		1
		-338, -339)		
26	10-61773-2	. LIGHT, (USED ON 65-85750-1) 5199		1
27	BACN10FX61	. NUT, (NOT USED ON 65-85750-1) 5199		2
27	BACN10FX61	. NUT, (USED ON 65-85750-1) 5199		2
		. FOR REFERENCE TO OTHER PANEL AND COVER DETAILS, SEE . 5199		
		NHA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

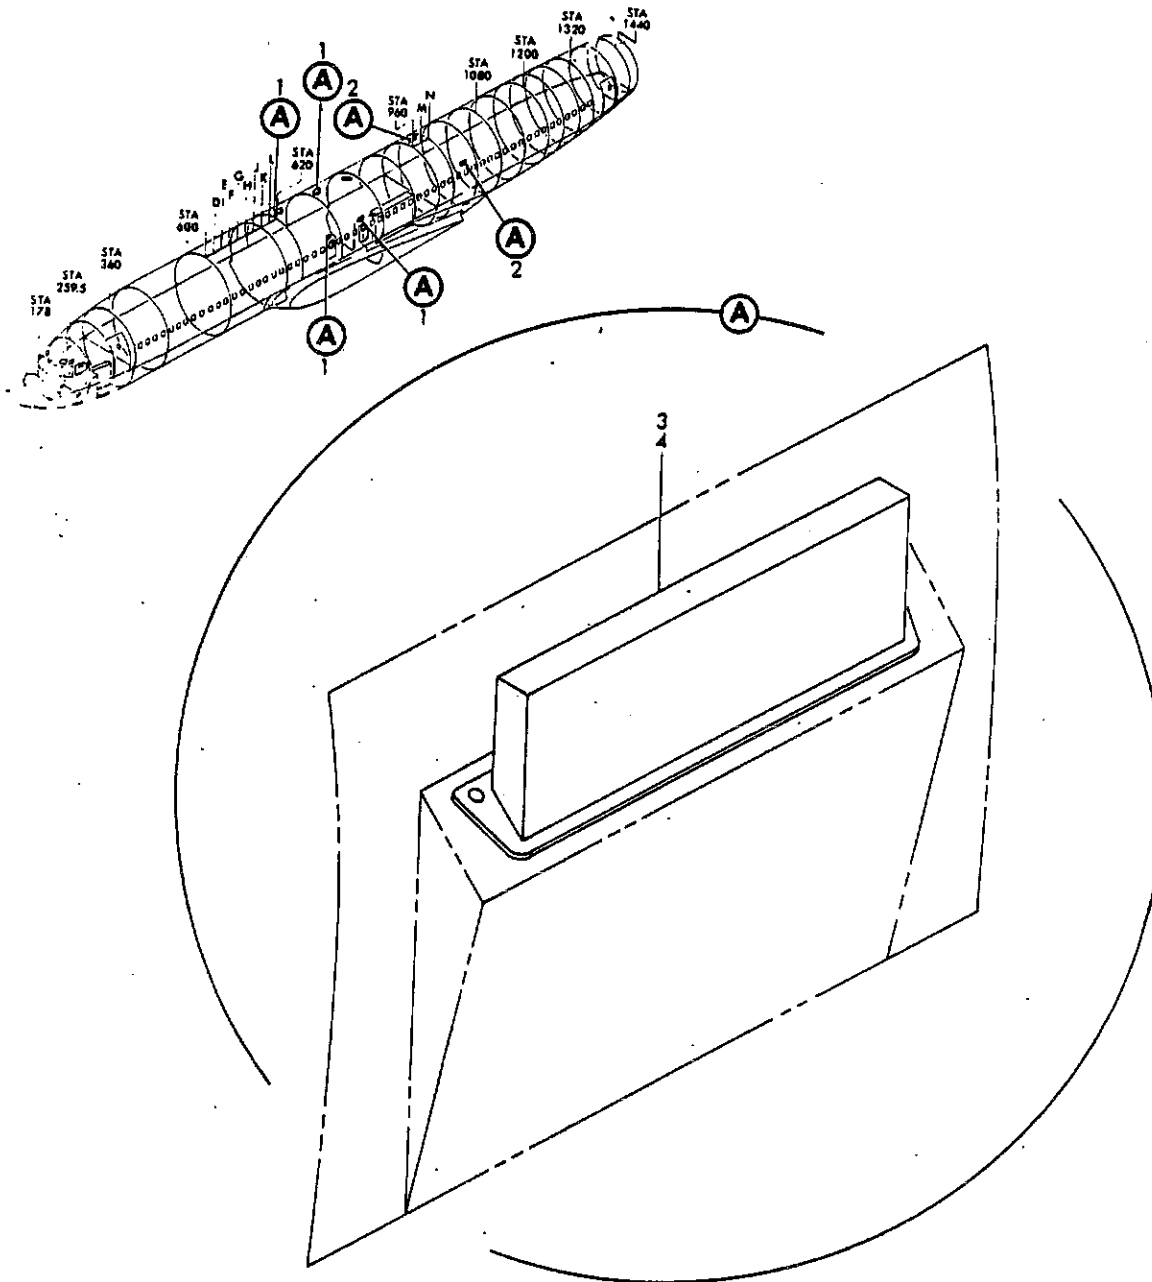


FIGURE 209. PANEL ASSY, UPPER OVERWING HATCHWAY (LIGHTS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
			1	2	3	4	5	6	7			
R R R R R R R	209	1	65-79132-1G	PANEL ASSY, UPPER OVERWING HATCHWAY (LIGHTS ONLY) . . . (SEE 25-10, FIG. 97, ITEM 3)							5199	RF
		2	65-86107-9L	PANEL ASSY, EMERGENCY EXIT UPPER (LIGHTS ONLY) (SEE . . 25-10, FIG. 99, ITEM 1)							5199	RF
		3	10-61773-1	. LIGHT (OPTIONAL TO 10-61773-3)							5199	1
		3	10-61773-3	. LIGHT (OPTIONAL 10-61773-1)							5199	1
			5106WW	. BULB, (V08806) FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA							5199 5199	RF
MISSING ITEM NUMBERS ARE NOT APPLICABLE												

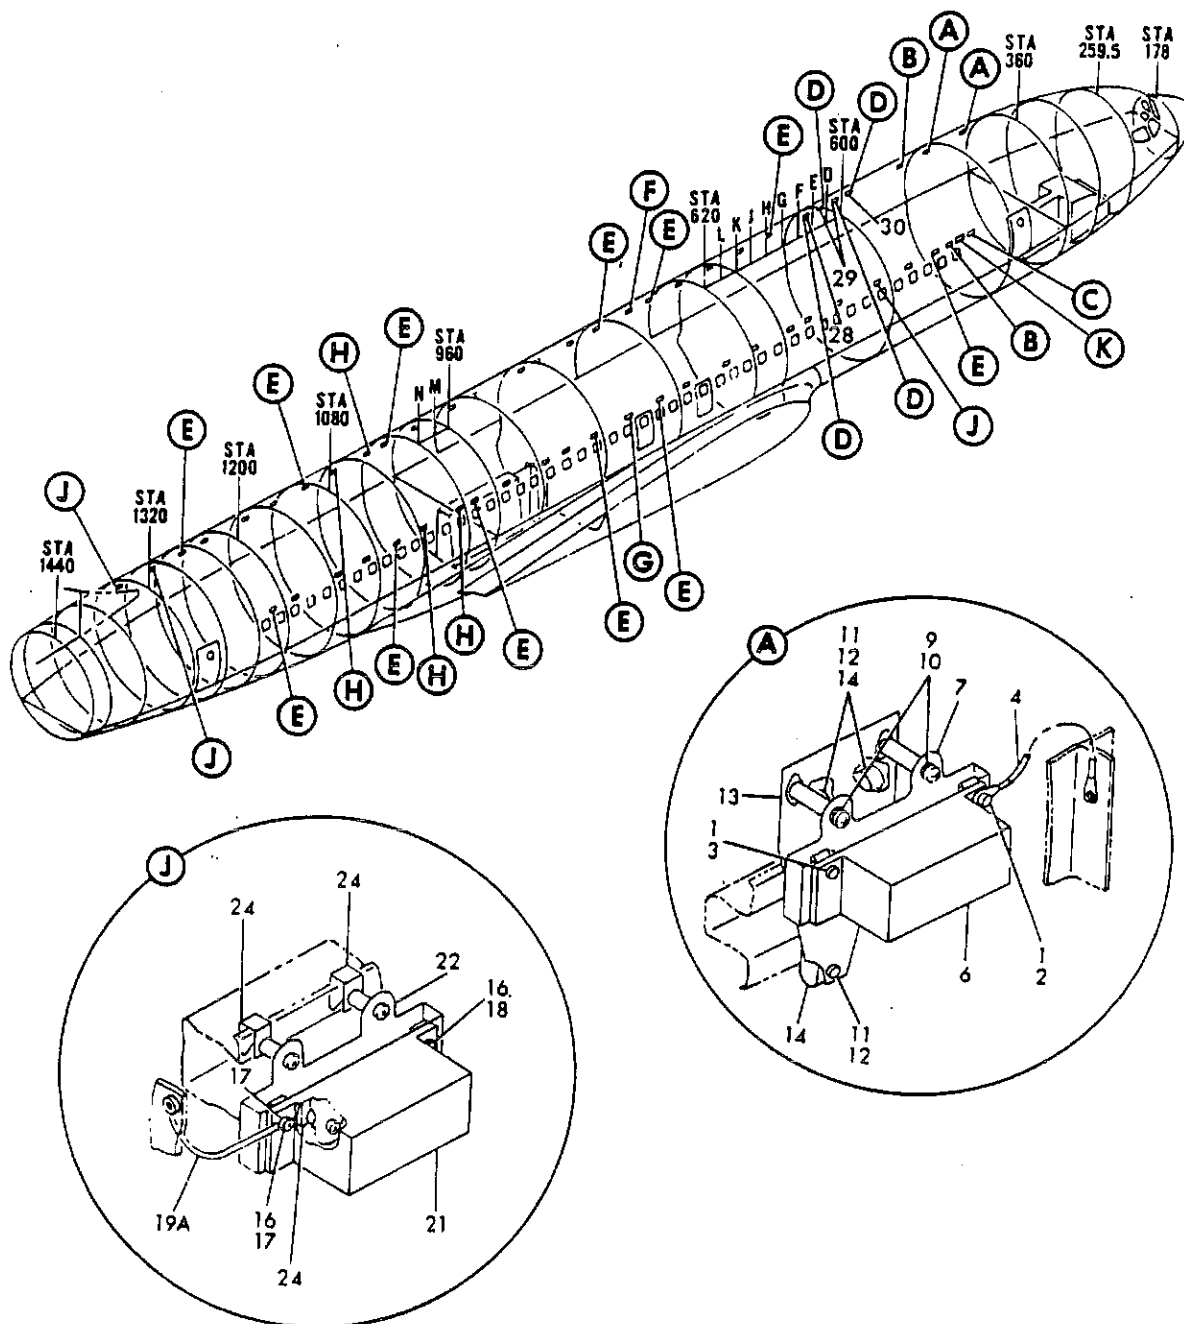


FIGURE 224. BALLAST INSTL., WINDOW LIGHT (SHEET 1)

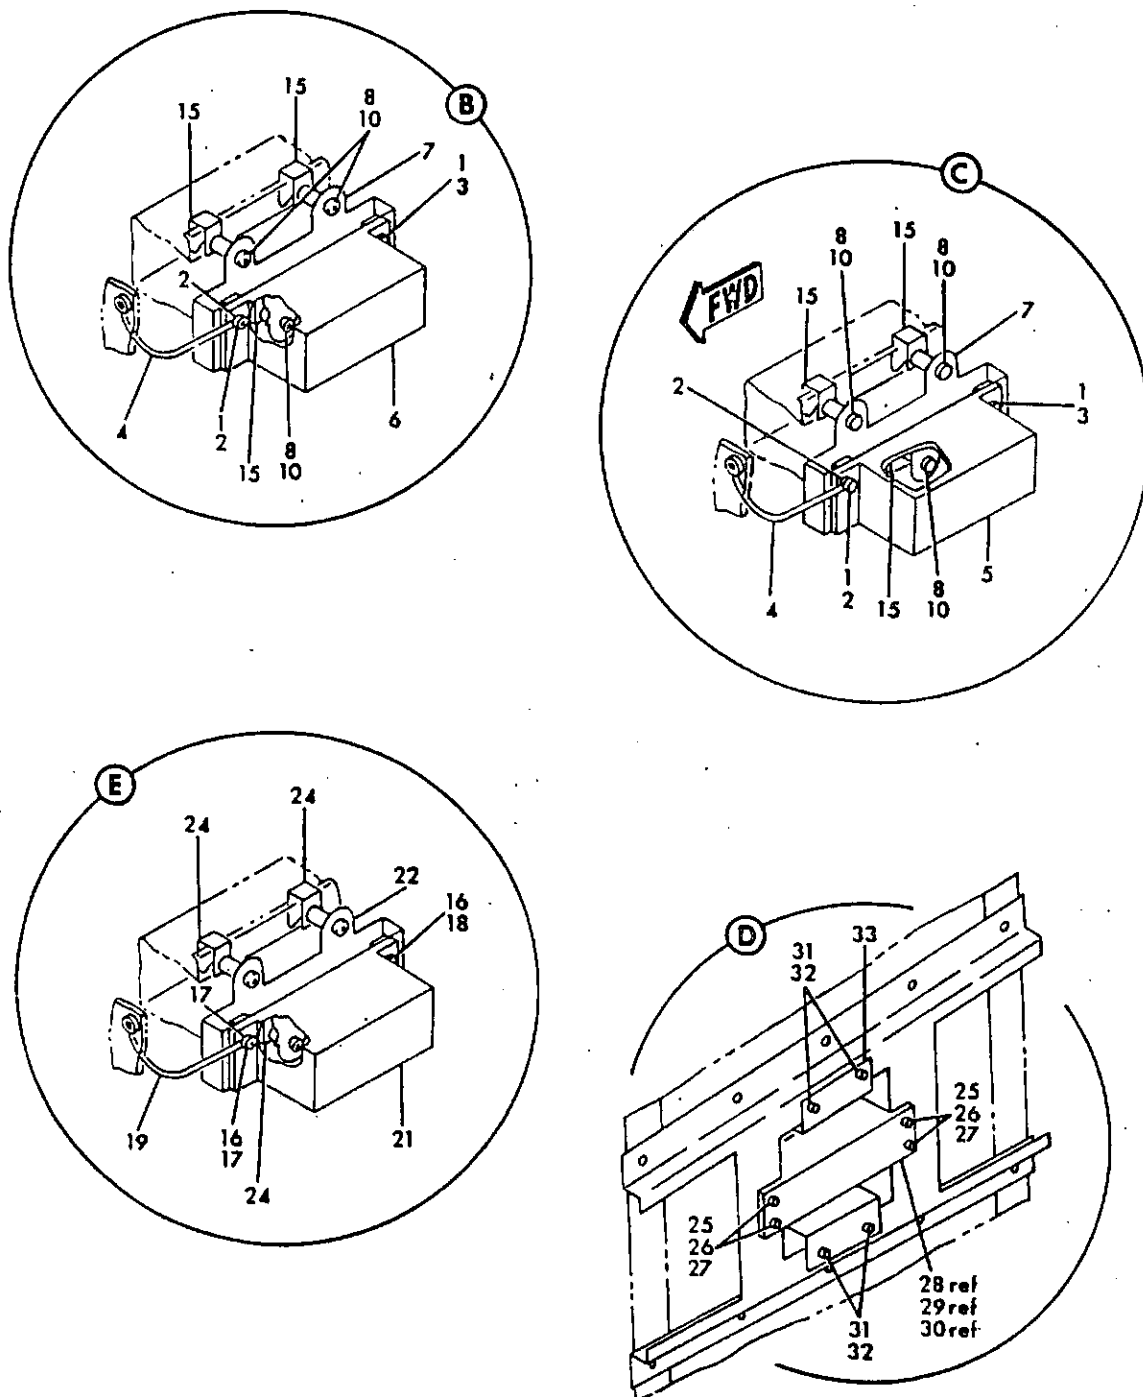


FIGURE 224. BALLAST INSTL WINDOW LIGHT (SHEET 2)

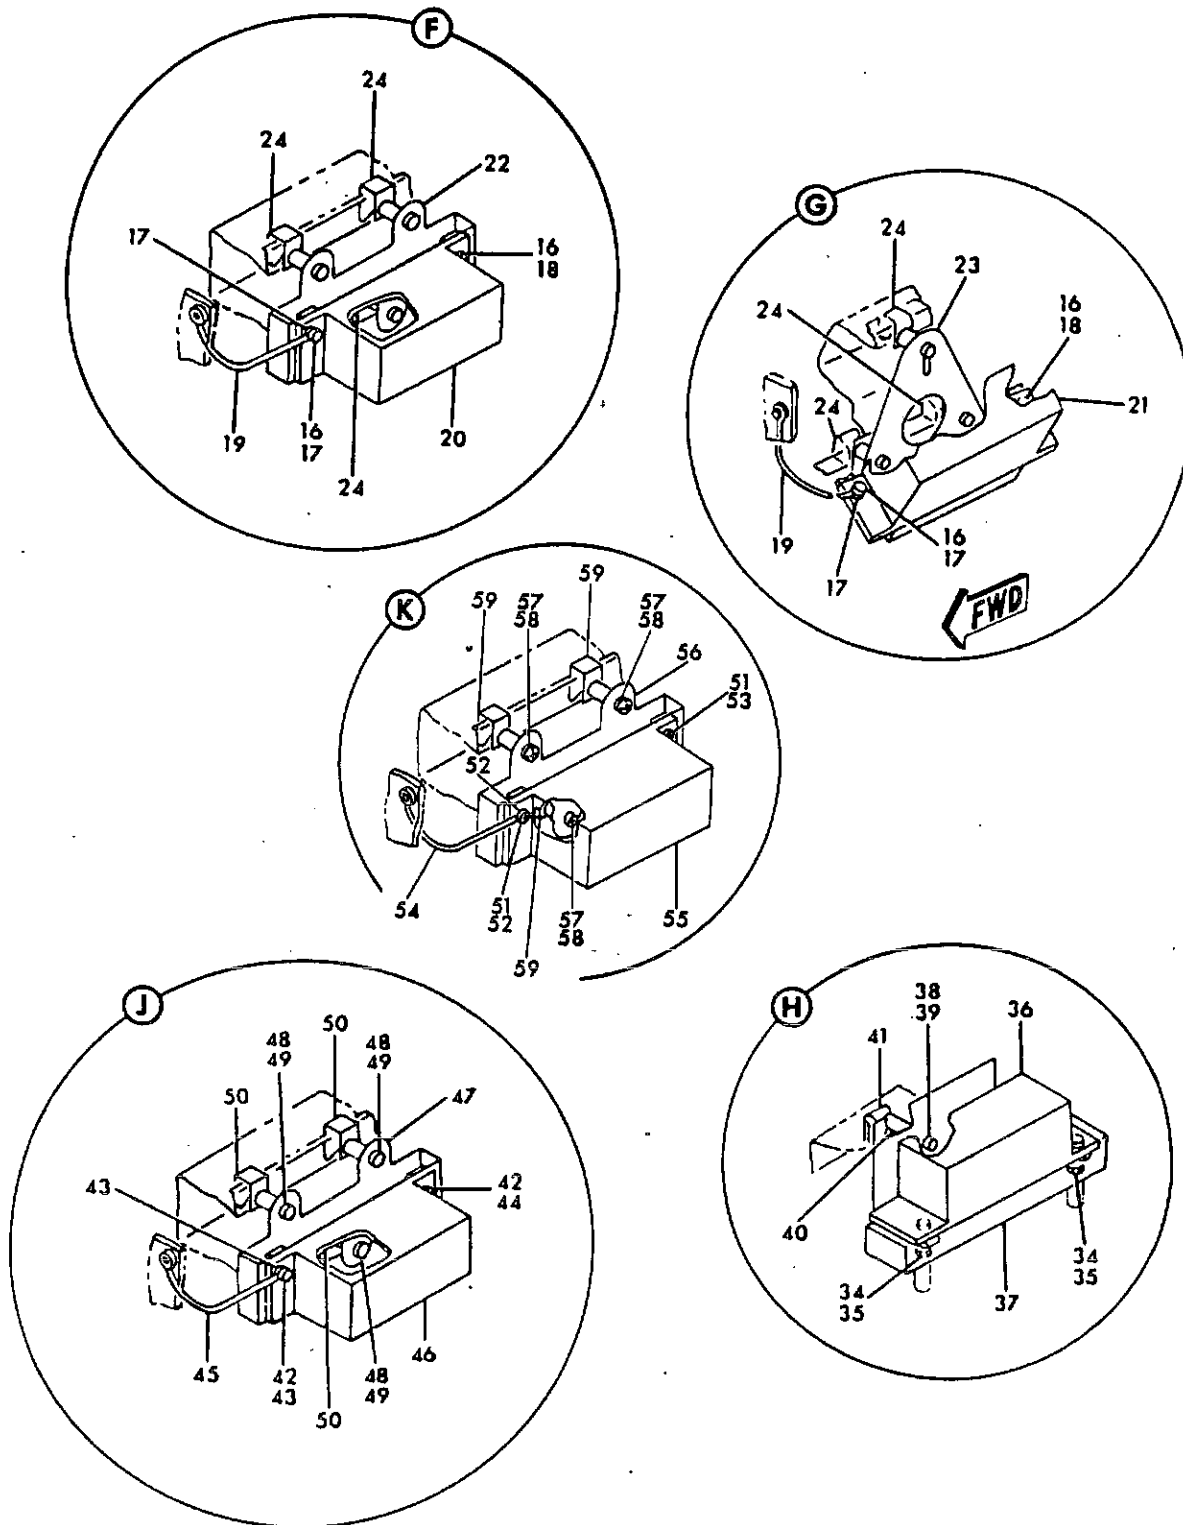


FIGURE 224. BALLAST INSTL, WINDOW LIGHT (SHEET 3)

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
224	65-88470-7		BALLAST INSTL, WINDOW LIGHT	5199	
			. BALLAST INSTL, WINDOW LIGHT (SEE 25-1, FIG. 174B, . .	5199	RF
			ITEM 13, 25-1, FIG. 174C, ITEM 18, 25-1, FIG.		
			174D, ITEM 17A AND 25-1, FIG. 174G, ITEM 14)		
1	NAS603-8P		. . . SCREW	5199	10
2	AN960D10L		. . . WASHER.	5199	10
3	AN960PD10L		. . . WASHER.	5199	5
4	MS25083-2BB10		. . . JUMPER.	5199	5
			ATTACHING PARTS		
	AN960D10L		. . . WASHER.	5199	10
			-----*		
	61-20872-2		. . . WIRE BUNDLE ASSY.	5199	RF
6	65B40025-35		. . . BALLAST	5199	4
	65-88470-8		. BALLAST INSTL, WINDOW LIGHT (SEE 25-1, FIG. 174B, . .	5199	RF
			ITEM 14, 25-1, FIG. 174C, ITEM 19, 25-1, FIG.		
			174E, ITEM 18 AND 25-1, FIG. 174G, ITEM 15)		
16	NAS603-8P		. . . SCREW	5199	80
17	AN960D10L		. . . WASHER.	5199	80
18	AN960PD10L		. . . WASHER.	5199	40
19	MS25083-2BB10		. . . JUMPER.	5199	39
			ATTACHING PARTS		
	BACR15BB6D9		. . . RIVET	5199	40
	AN960D10L		. . . WASHER.	5199	80
			-----*		
	61-20870-2		. . . WIRE BUNDLE ASSY.	5199	RF
20	60B40025-36		. . . BALLAST	5199	1
	61-20872-2		. . . WIRE BUNDLE ASSY.	5199	RF
21	60B40025-35		. . . BALLAST	5199	39
22	69-63179-1		. . . BRACKET, SUPPORT.	5199	39
			ATTACHING PARTS		
	NAS603-7P		. . . SCREW	5199	117
	AN960PD10L		. . . WASHER.	5199	117
			-----*		
23	69-62493-3		. . . BRACKET, SUPPORT.	5199	1
			ATTACHING PARTS		
	NAS603-8P		. . . SCREW	5199	3
	AN960PD10L		. . . WASHER.	5199	3
			-----*		
24	294243-12C		. . . BRACKET, MOUNTING (V76530).	5199	120
25	BACS12CB08-8		. . . SCREW	5199	16
26	AN960PD8L		. . . WASHER.	5199	16
27	NAS43DD3-36		. . . SPACER.	5199	16
	61-26662-1		. . . WIRE BUNDLE ASSY.	5199	RF
28	60B40025-36		. . . BALLAST	5199	1
	61-26664-1		. . . WIRE BUNDLE ASSY.	5199	RF
29	60B40025-35		. . . BALLAST	5199	2
	61-26704-1		. . . WIRE BUNDLE ASSY.	5199	RF
30	60B40025-35		. . . BALLAST	5199	1
31	BACS12CB08-8		. . . SCREW	5199	16
32	AN960PD8L		. . . WASHER.	5199	16
33	69-63180-1		. . . BRACKET.	5199	4
34	BACS12CB3-7		. . . SCREW	5199	8
35	AN960PD10L		. . . WASHER.	5199	8
	61-20872-2		. . . WIRE BUNDLE ASSY.	5199	RF
36	60B40025-35		. . . BALLAST	5199	4
37	69-63183-1		. . . BRACKET, SUPPORT.	5199	4
38	NAS603-24P		. . . SCREW	5199	4
39	AN960PD10L		. . . WASHER.	5199	4
40	NAS43DD3-45		. . . SPACER.	5199	4
41	293255		. . . BRACKET, MOUNTING (V76530).	5199	4
	65-88470-9		. BALLAST INSTL, WINDOW LIGHT (SEE 25-1, FIG. 174B, . .	5199	RF
			ITEM 15, 25-1, FIG. 174C, ITEM 20, 25-1, FIG.		
			174D, ITEM 17B AND 25-1, FIG. 174G, ITEM 16)		
42	NAS603-8P		. . . SCREW	5199	4
43	AN960D10L		. . . WASHER.	5199	4
44	AN960PD10L		. . . WASHER.	5199	2
45	MS25083-2BB10		. . . JUMPER.	5199	2
			ATTACHING PARTS		
	AN960D10L		. . . WASHER.	5199	4
			-----*		
	61-20870-2		. . . WIRE BUNDLE ASSY.	5199	RF
46	60B40025-35		. . . BALLAST	5199	2
47	69-63179-1		. . . BRACKET, SUPPORT.	5199	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE					



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY		
			1	2	3	4	5	6	7				
224			ATTACHING PARTS										
	48	NAS603-7P	.	.	SCREW	.	.	.	.	.	5199	6	
	49	AN960PD10L	.	.	WASHER.	.	.	.	.	.	5199	6	
			-----*										
	50	294243-12C	.	.	BRACKET, MOUNTING (V76530).	.	.	.	.	.	5199	6	
MISSING ITEM NUMBERS ARE NOT APPLICABLE													

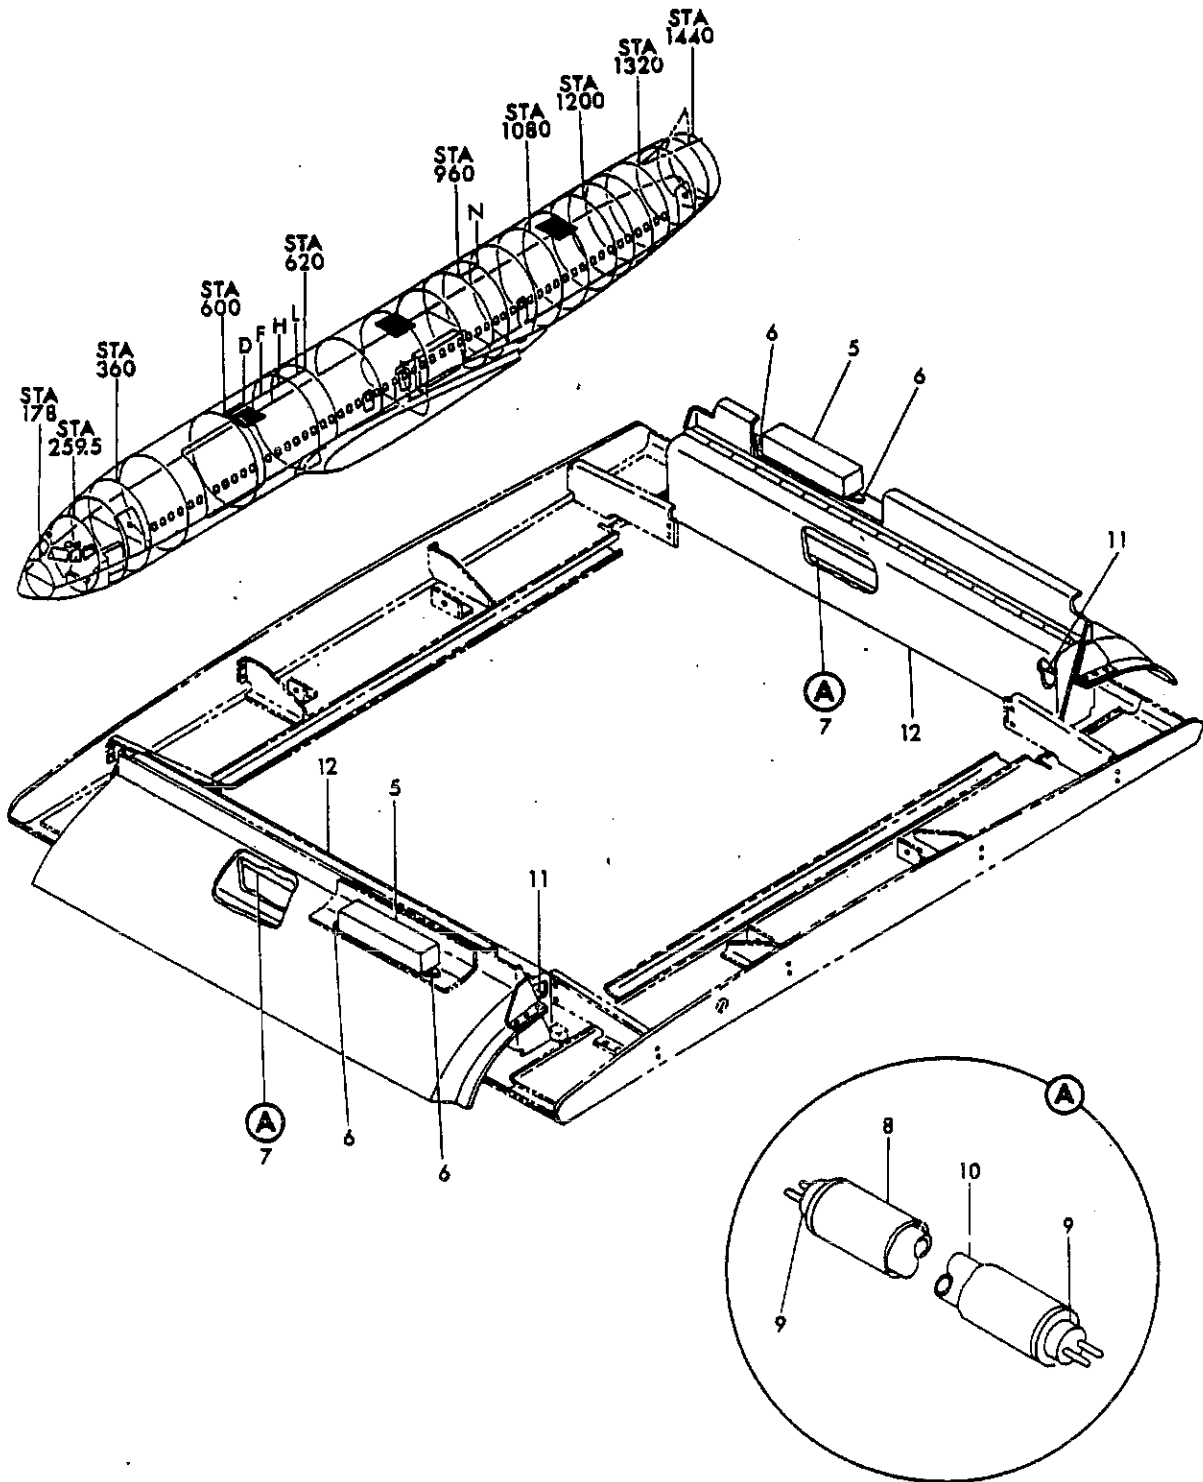


FIGURE 254. PANEL ASSY-(LIGHTS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
254	607-2809-004		PANEL ASSY, (LIGHTS ONLY)	5199	
	607-2809-005		. PANEL ASSY, LH (V97896) (LIGHTS ONLY) (ADDED BY SVA . REQUEST) (SEE FIG. 201F, ITEM 72D)	5199	RF
	607-2809-006		. PANEL ASSY, RH (V97896) (LIGHTS ONLY) (ADDED BY SVA . REQUEST) (SEE FIG. 201F, ITEM 72E)	5199	RF
	607-2809-007		. PANEL ASSY, LH (V97896) (LIGHTS ONLY) (ADDED BY SVA . REQUEST) (SEE FIG. 201F, ITEM 72F)	5199	RF
	607-2809-007		. PANEL ASSY, RH (V97896) (LIGHTS ONLY) (ADDED BY SVA . REQUEST) (SEE FIG. 201F, ITEM 72G)	5199	RF
5	10-61782-3		. . BALLAST	5199	1
	BACS21AP100R		. . ATTACHING PARTS		
			. . STUD.	5199	2
6	SL8011		. . SHOCKMOUNT, (V97393).	5199	2
	NAS1096-2-7		. . ATTACHING PARTS		
	AN960-8		. . SCREW	5199	4
			. . WASHER.	5199	4
7	69-62359-5		. . LAMP ASSY	5199	1
8	NI120LGWUV1000		. . . TUBE, (V06034).	5199	1
			(OPTIONAL NI120LGW (V06034))		
8	NI120LGW		. . . TUBE, (V06034).	5199	1
			(OPTIONAL TO NI120LGWUV1000 (V06034))		
9	NI120EC8		. . . END CAP, (V06034).	5199	2
10	F30TBWW		. . . LAMP, (V08805).	5199	1
11	757		. . . LAMP, (V08806).	5199	1
12	10-61772-1		. . . LIGHT ASSY.	5199	1
			. . ATTACHING PARTS		
	NAS602-3P		. . SCREW	5199	12
	AN960PD8		. . WASHER.	5199	12
			. . FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 05
INSTRUMENT PANELS

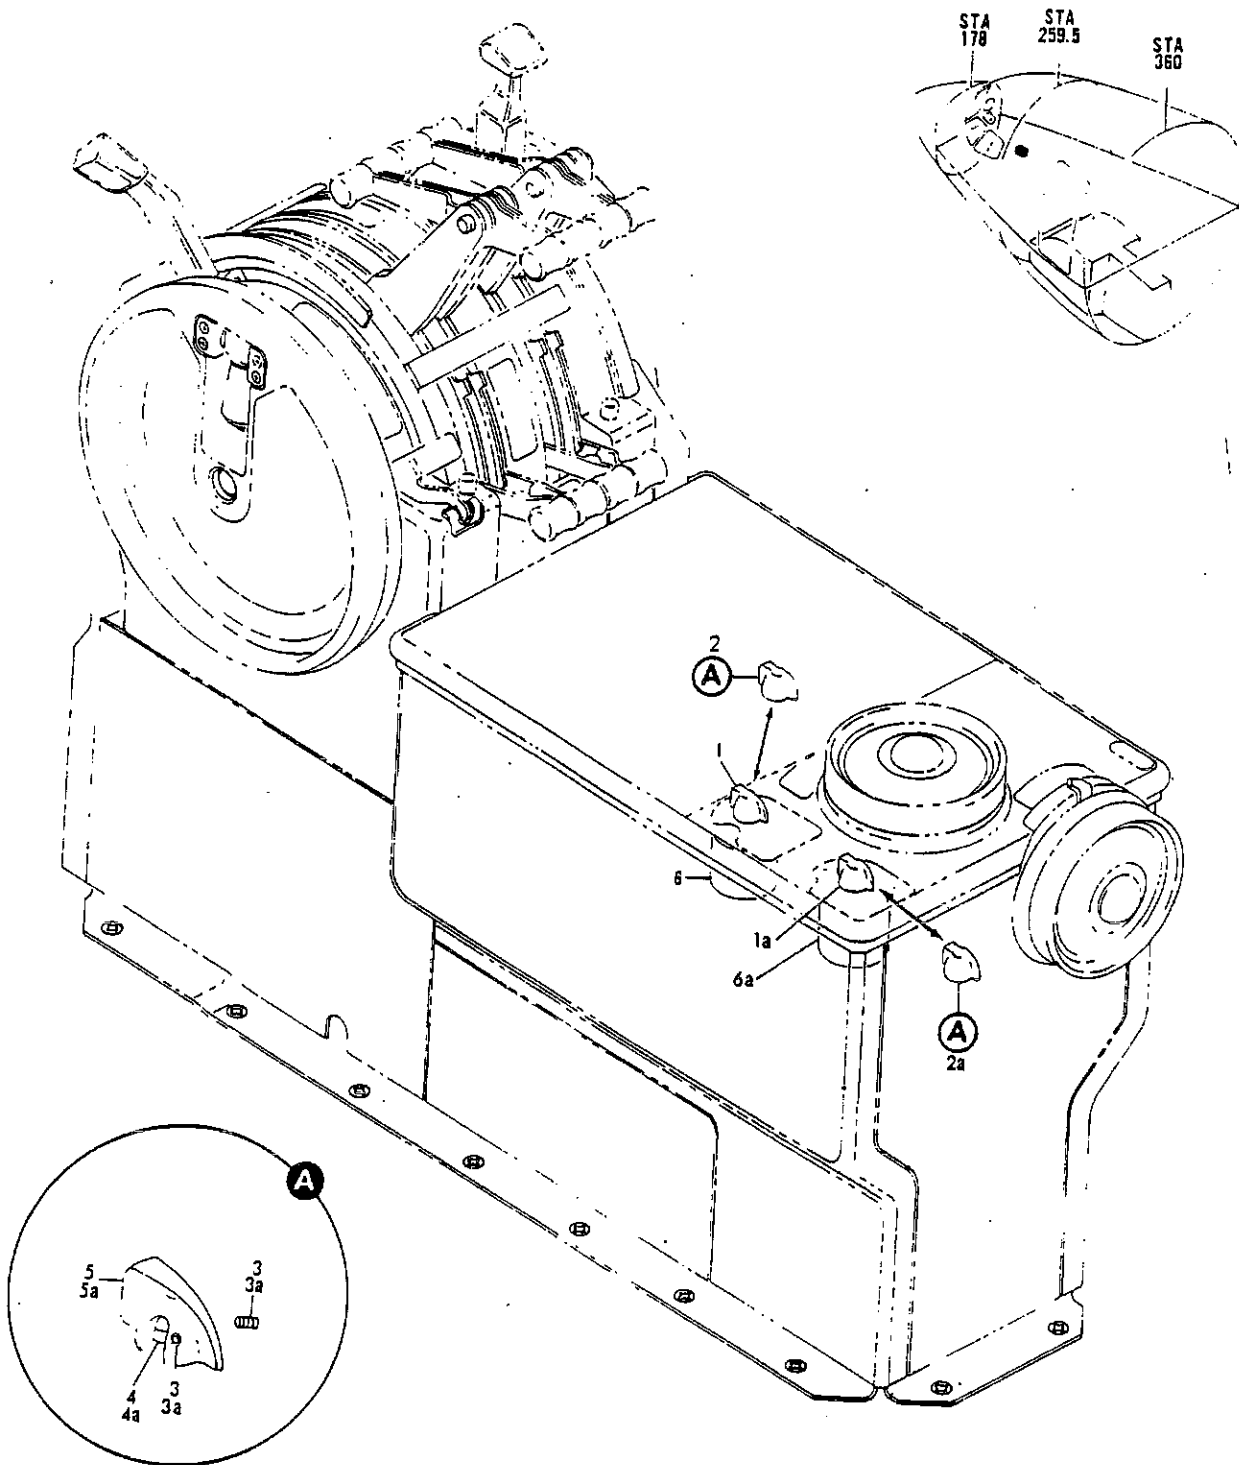


FIGURE 1. STAND ASSY, PILOT AND COPILOT CONTROL (LIGHTS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 1	50-5561-94	STAND ASSY, PILOT AND COPILOT CONTROL (LIGHTS ONLY)	0150	RF
R		(SEE 25-2, FIG. 15, ITEM 12)		
R	50-5561-149	STAND ASSY, PILOT AND COPILOT CONTROL (LIGHTS ONLY)	5199	RF
R		(SEE 25-2, FIG. 15, ITEM 12)		
R 2	66-9039	. KNOB ASSY, SMALL POINTER.		1
R 2A	66-9039	. KNOB ASSY, SMALL POINTER.	5199	1
R 3	LL22XD62J3	. . SETSCREW, HEX SOCKET (V03038)		2
R 3A	LL22XD62J3	. . SETSCREW, HEX SOCKET (V03038)	5199	2
R 4	66-9039-2	. . INSERT, SMALL POINTER KNOB.		1
R 4A	66-9039-2	. . INSERT.	5199	1
R 5	66-9039-1	. . KNOB, SMALL POINTER		1
R 5A	66-9039-1	. . KNOB.	5199	1
R 6	10-3173-4	. TRANSFORMER, VARIABLE POWER		1
		(OPTIONAL TO 6430A (V95266))		
R 6	6430A	. TRANSFORMER, VARIABLE POWER (V95266		1
		(OPTIONALS 10-3173-4, 5-1216) (V58474))		
R 6	5-1216	. TRANSFORMER, VARIABLE POWER (V58474).		1
		(OPTIONAL TO 6430A (V95266))		
R 6A	6430A	. TRANSFORMER, VARIABLE POWER (V95266).	5199	1
		(OPTIONALS 10-3173-4, 5-1216 (V58474))		
R 6A	10-3173-4	. TRANSFORMER, VARIABLE POWER	5199	1
		(OPTIONAL TO 6430A (V95266))		
R 6A	5-1216	. TRANSFORMER, VARIABLE POWER (V58474).	5199	1
		(OPTIONAL TO 6430A (V95266))		
		. FOR REFERENCE TO OTHER STAND DETAILS, SEE NHA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

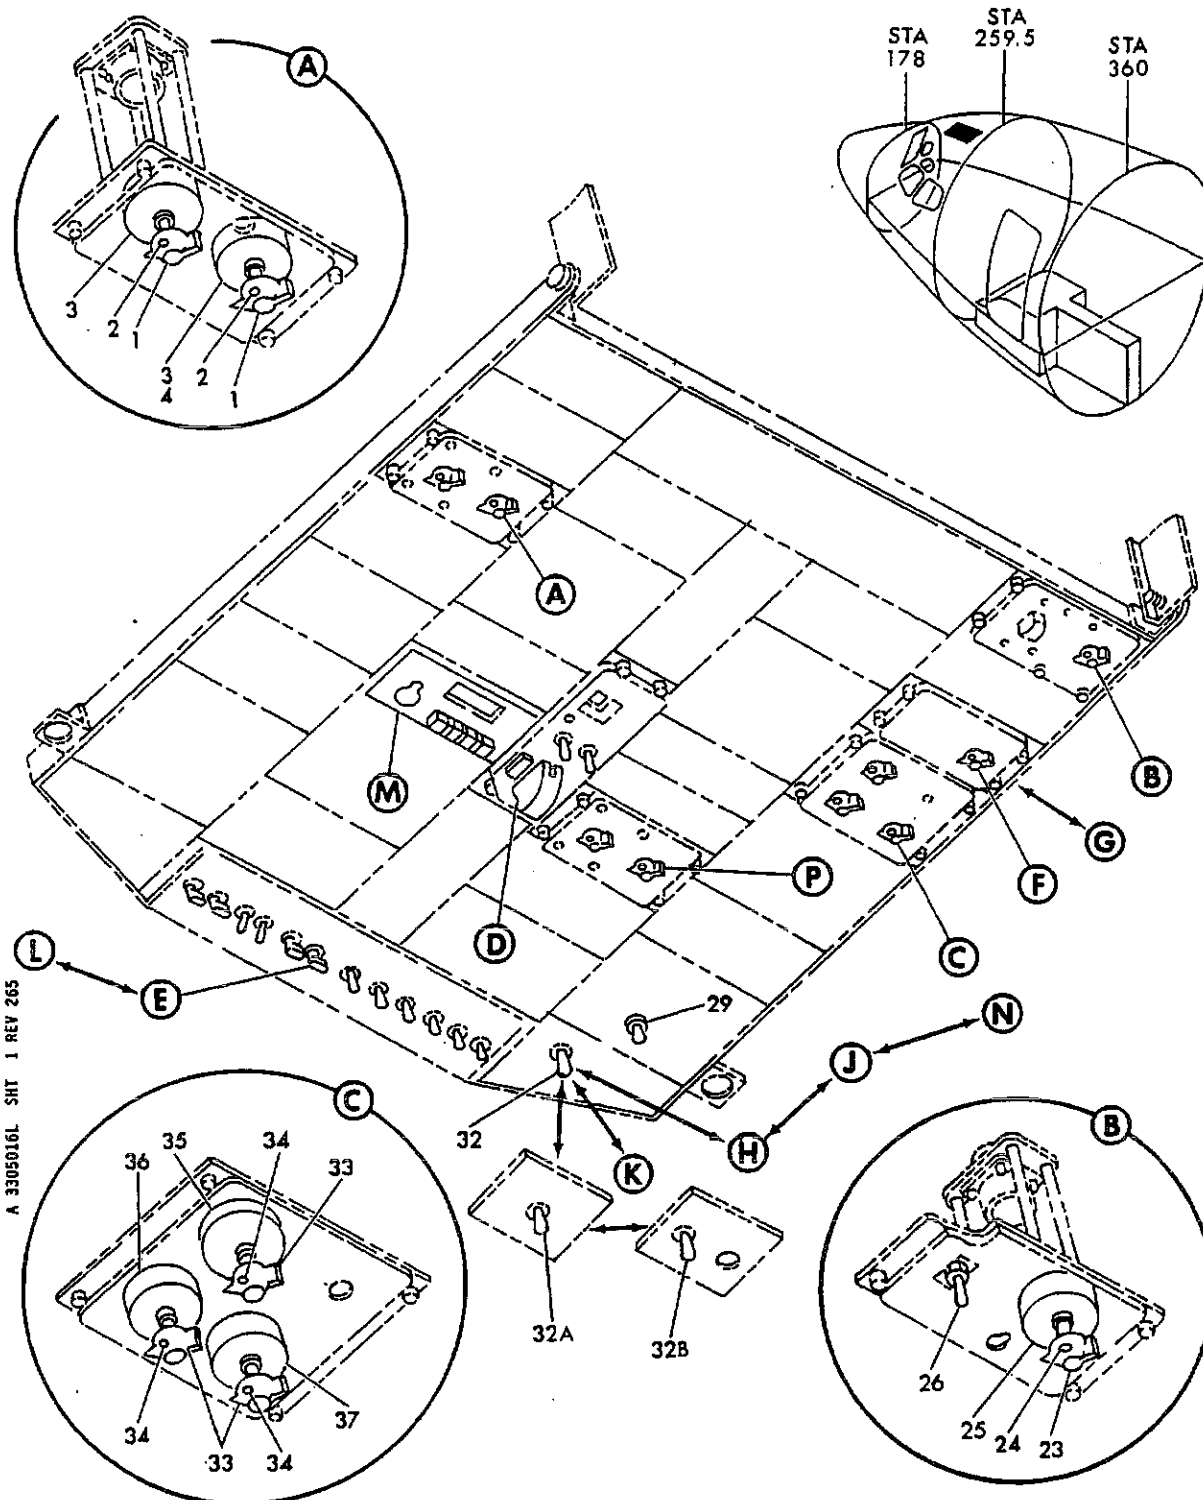


FIGURE 16L. MODULE INSTL. P13 PILOTS OVERHEAD PANEL (LIGHTS) (SHEET 1)

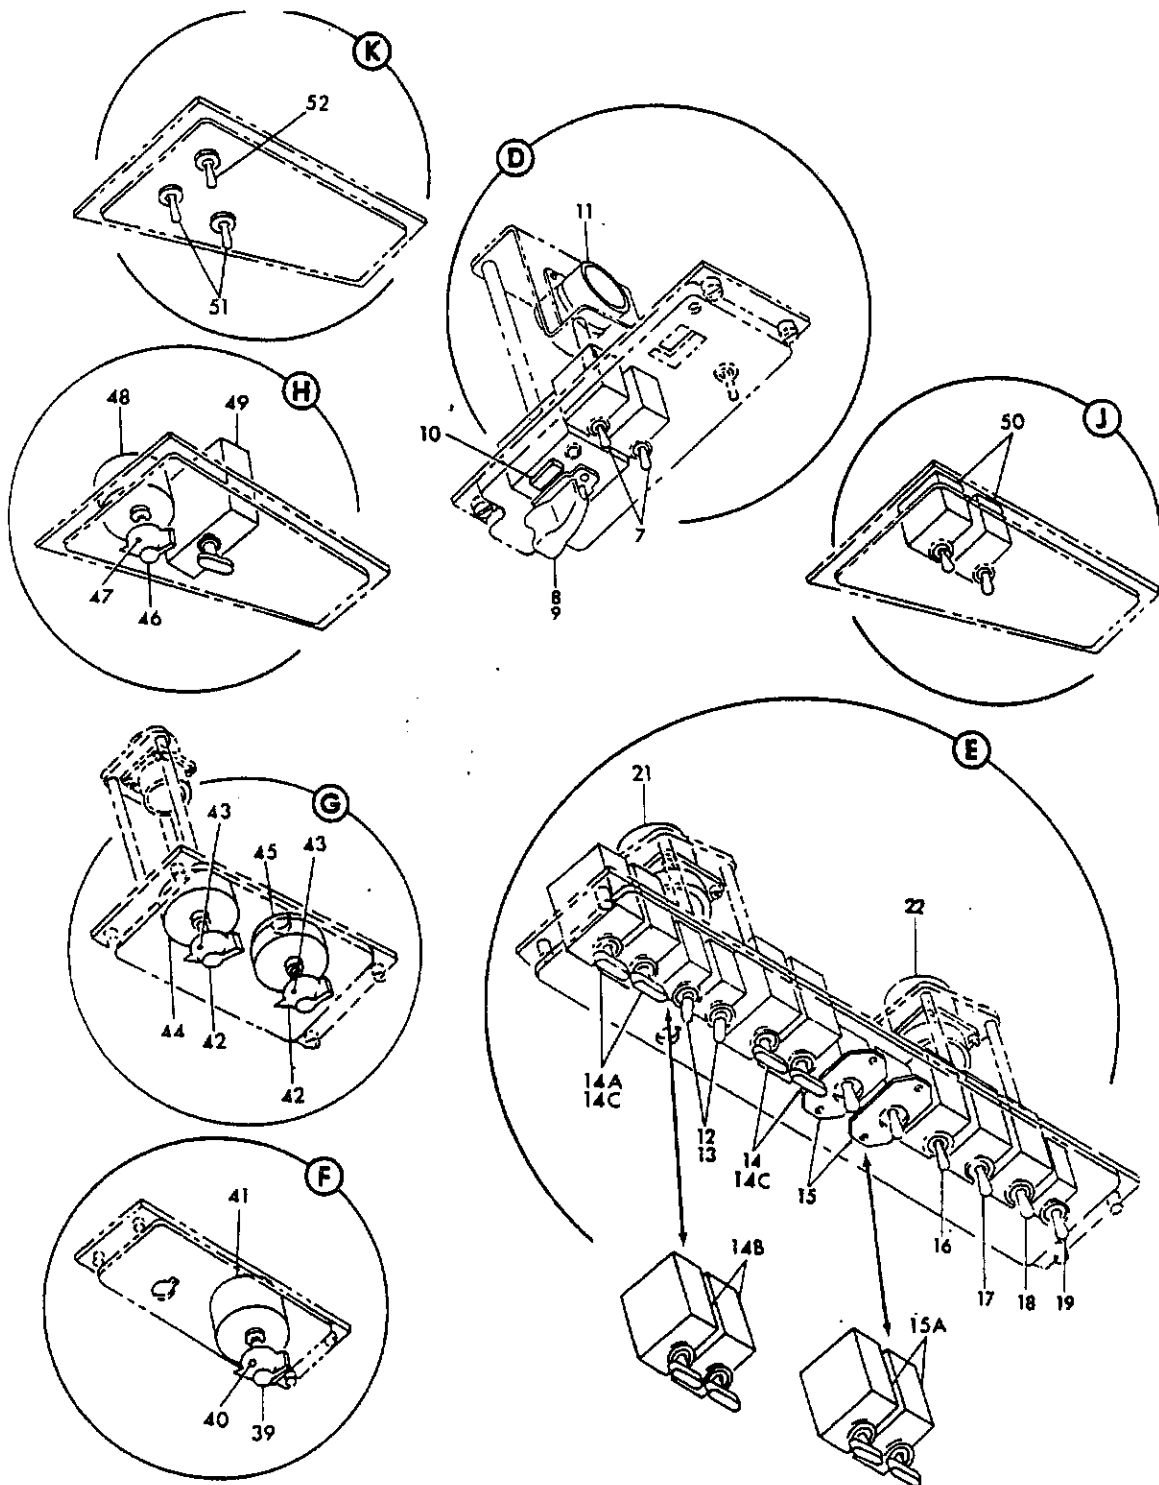


FIGURE 16L. MODULE INSTL, P13 PILOTS OVERHEAD (LIGHTS ONLY) (SHEET 2)

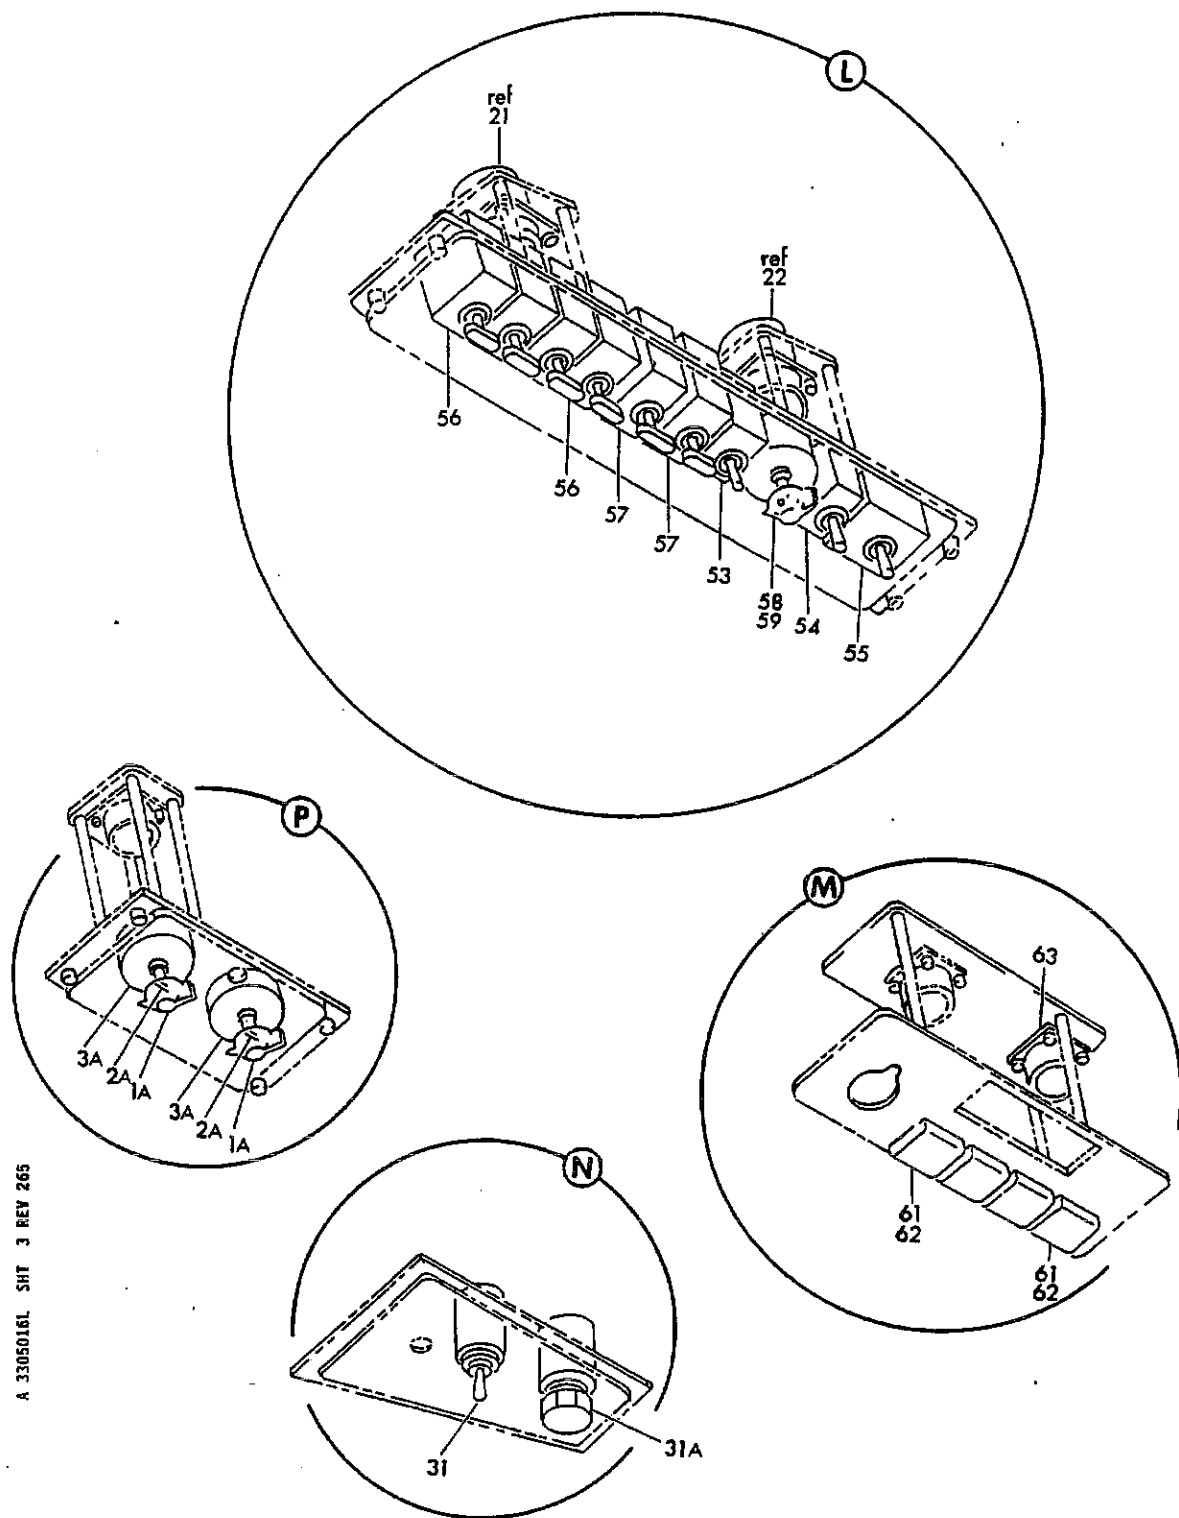


FIGURE 16L. MODULE INSTL, P13 PILOTS OVERHEAD PANEL (LIGHTS) (SHEET 3)

A 3305016L SHT 3 REV 265



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 16L	65-86177-2		MODULE INSTL, P13 PILOTS OVERHEAD (VARIABLE DWG; 65-86177-5011) (LIGHTS ONLY) (SEE 25-1, FIG. 2E, ITEM 92 AND 25-1, FIG. 180H, ITEM 108)	5199	RF
R	69-46108-4		. MODULE ASSY, P13B LIGHTING CONTROLS (LIGHTS ONLY) . .	5199	RF
R 1	66-9039		. . . KNOB ASSY	5199	2
R 2	LL22XD62J3		. . . SETSCREW, HEX SOCKET (V03038)	5199	4
R 3	6430A		. . . TRANSFORMER, VARIABLE (V95266)	5199	1
R 4	6429		. . . TRANSFORMER, VARIABLE (V95266)	5199	1
R	69-46109-29		. MODULE ASSY, P13P OXYGEN AND EMERGENCY EXIT LIGHTS. .	5199	RF
R			(LIGHTS ONLY)		
R 7	64AT22-3		. . SWITCH, TOGGLE (V91929)	5199	2
R			(OPTIONAL A3-1110-05-1 (V81640))		
R 7	A3-1110-05-1		. . SWITCH, TOGGLE (V81640)	5199	2
R			(OPTIONAL TO 64AT22-3 (V91929))		
R 8	B9985-1		. . GUARD, (V72914)	5199	1
R 9	7AT41		. . SWITCH, TOGGLE (V91929)	5199	1
R			ATTACHING PARTS		
R	NAS601-7P		. . SCREW	5199	2
R	65-58795-7		. MODULE ASSY, P13M EXTERIOR LIGHTING (LIGHTS ONLY) . .	5199	RF
R 12	24-1164-3		. . LEVER, EXTENSION.	5199	2
R 13	MS24523-21		. . SWITCH, TOGGLE.	5199	2
R 14	A3-1034		. . SWITCH, TOGGLE (V81640)	5199	2
R 14A	A3-1034		. . SWITCH, TOGGLE (V81640)	5199	2
R 15	32TS1-3		. . SWITCH, TOGGLE (V91929)	5199	2
R			ATTACHING PARTS		
R	NAS514P632-7		. . SCREW	5199	4
R	16	2TL1-1N	. . SWITCH, TOGGLE (V91929)	5199	1
R 17	MS24524-23		. . SWITCH, TOGGLE.	5199	1
R 18	MS24524-22		. . SWITCH, TOGGLE.	5199	1
R 19	MS24523-23		. . SWITCH, TOGGLE.	5199	1
R	69-46122-4		. MODULE ASSY, P13S LIGHT OVERRIDE AND COMPASS DIM. .	5199	RF
R			(LIGHTS ONLY)		
R 23	66-9039		. . KNOB ASSY	5199	1
R 24	LL22XD62J3		. . SETSCREW, HEX SOCKET (V03038)	5199	2
R 25	RP11-2FD751KK		. . RESISTOR, VARIABLE (V44655)	5199	1
R 26	17AT6		. . SWITCH, TOGGLE (V91929)	5199	1
R			. FOR REFERENCE TO OTHER MODULE DETAILS, SEE NHA. . . .	5199	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
707
PARTS CATALOG (MAINTENANCE)

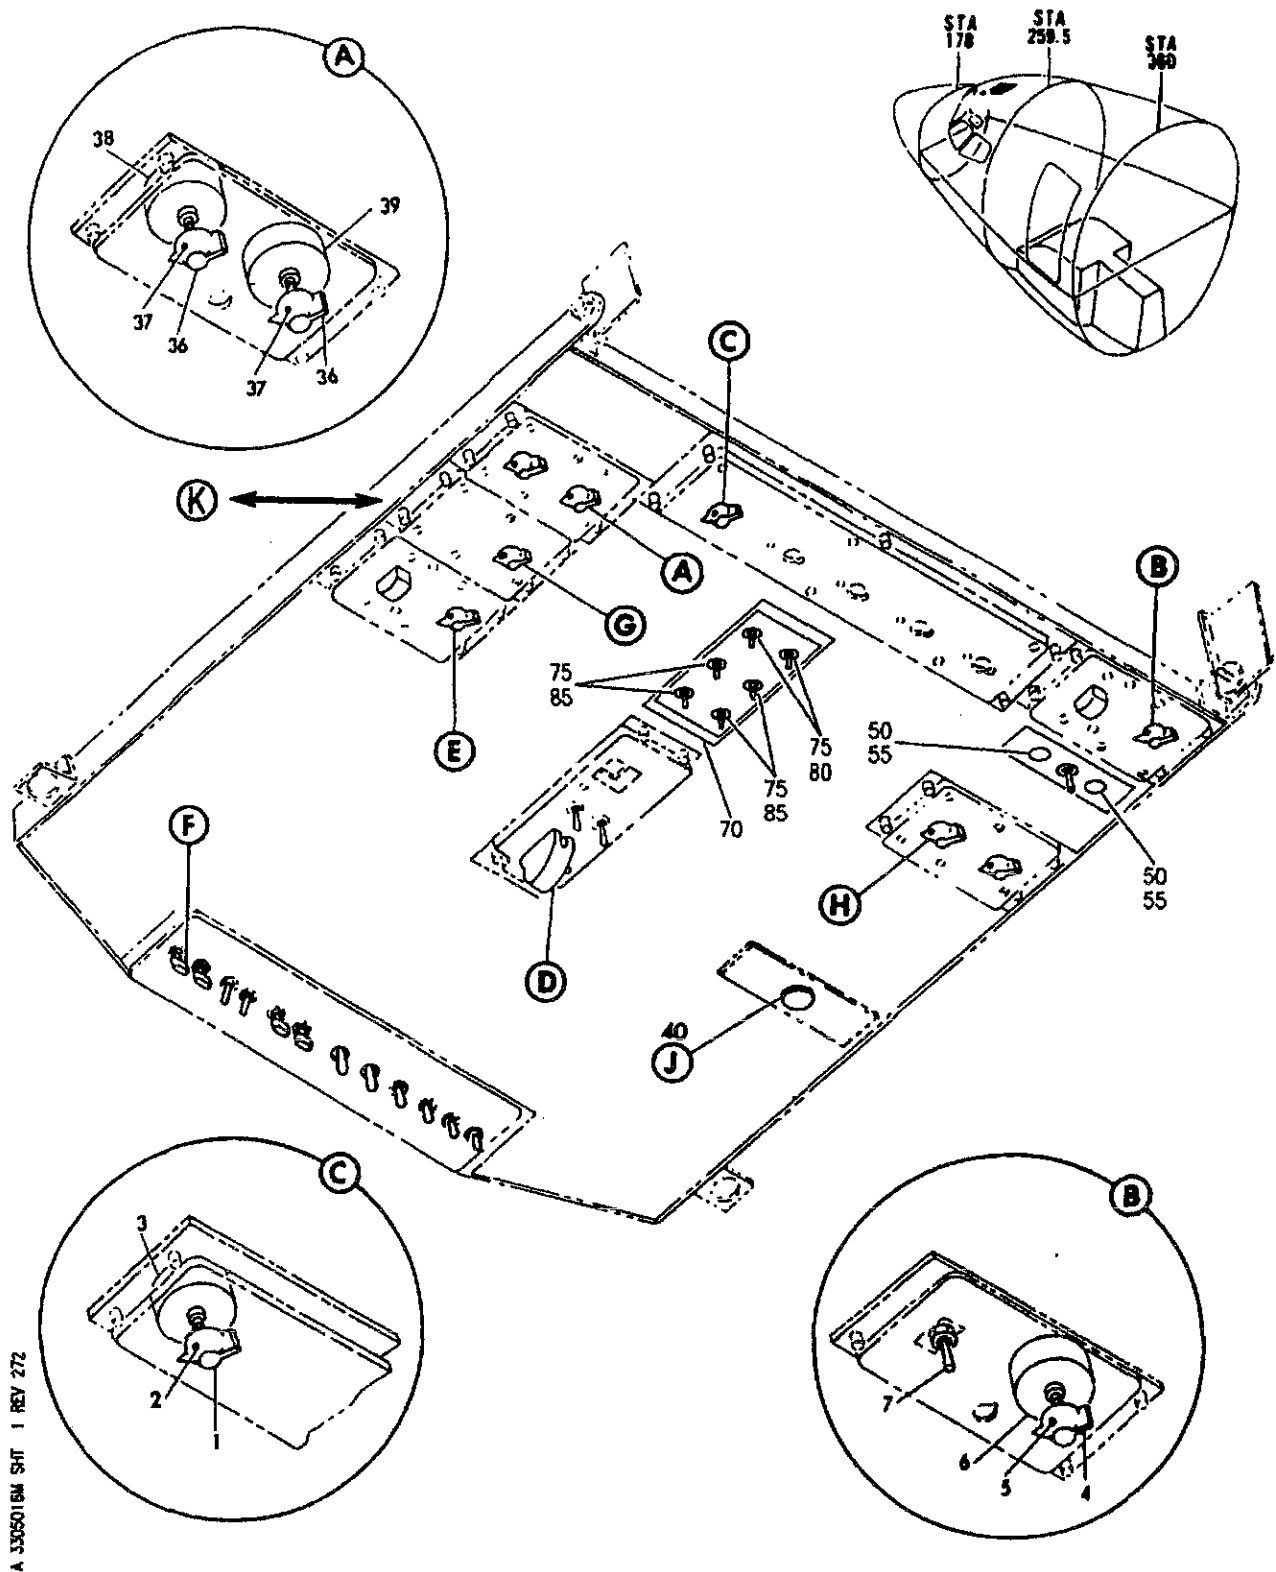



FIGURE 16M. MODULE INSTL, P13 PILOTS OVERHEAD (LIGHTS ONLY) (SHEET 1)

DETAILED PARTS LIST
33-05-16M
PAGE 0

33-05-16M

NOV 21/01

BOEING
707
PARTS CATALOG (MAINTENANCE)

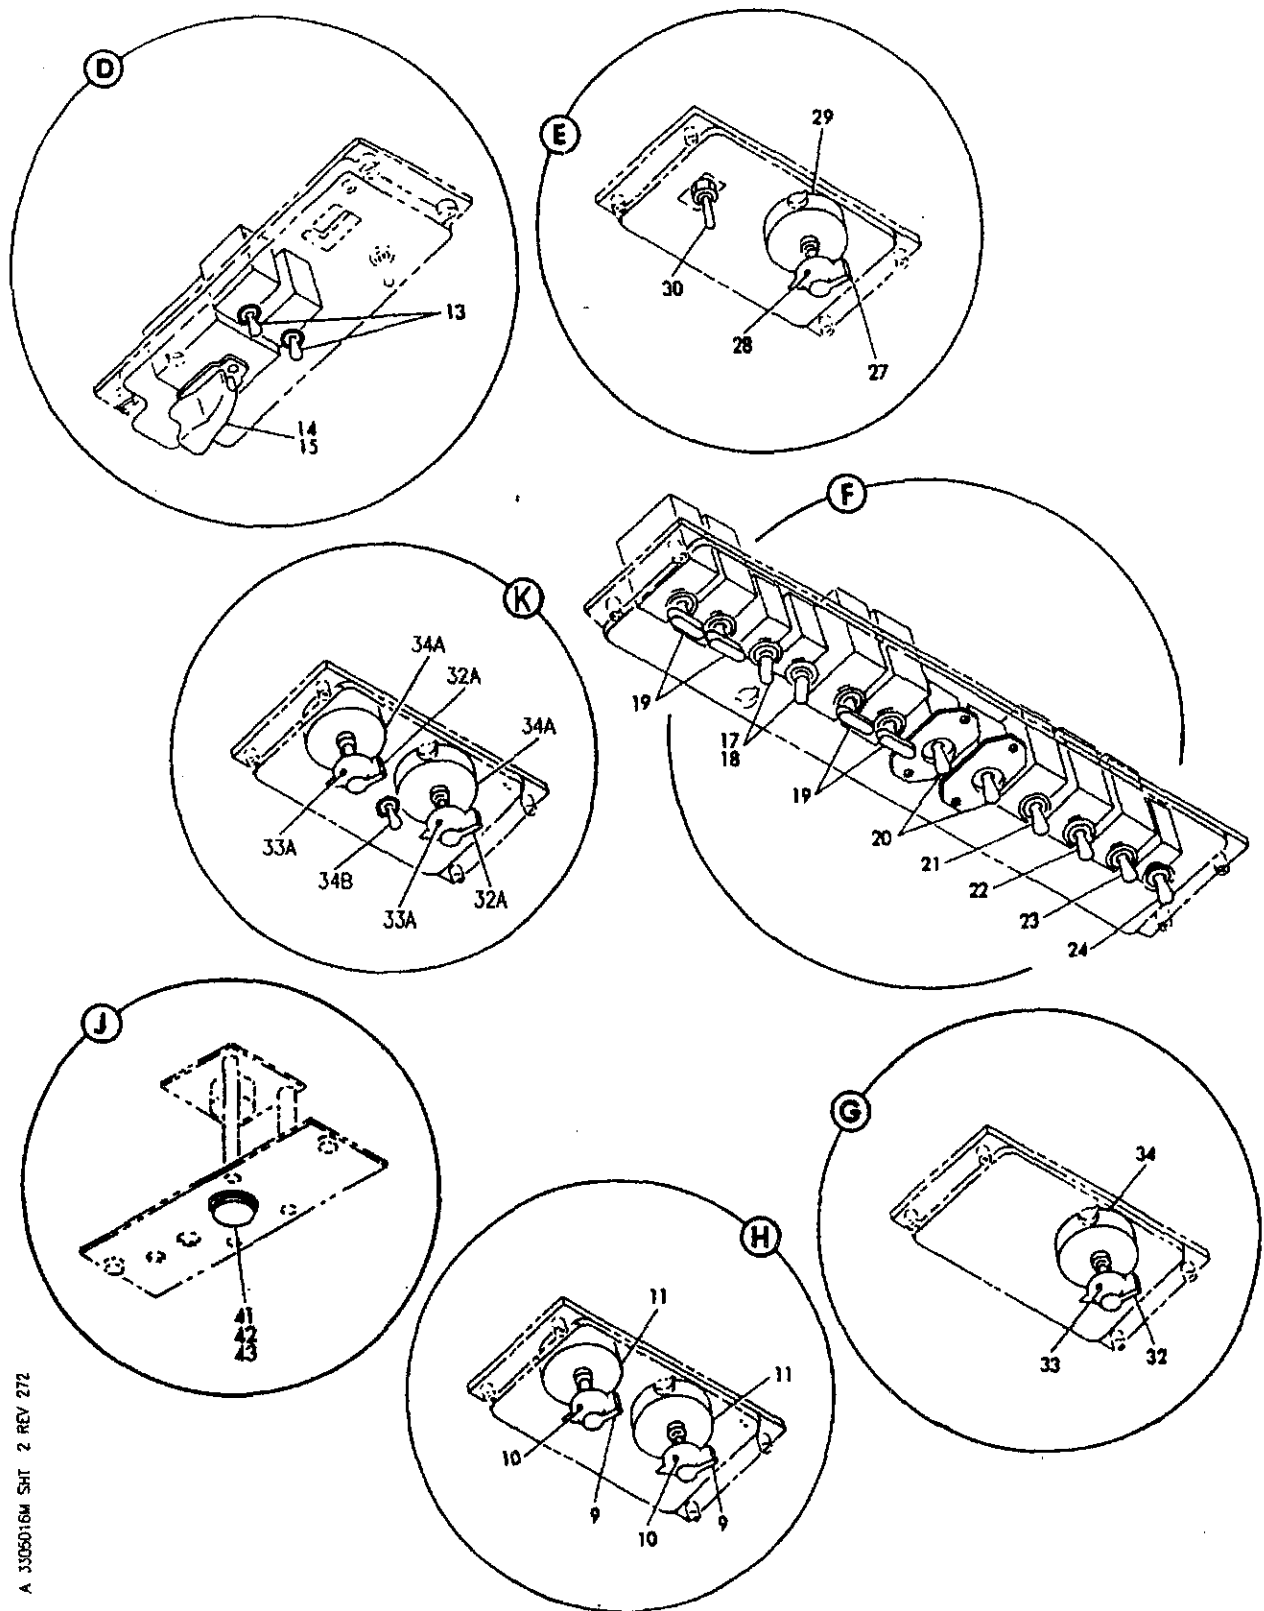

A 3305016M SH1 2 REV 272

FIGURE 16M. MODULE INSTL. P13 PILOTS OVERHEAD (LIGHTS ONLY) (SHEET 2)

NOV 21/01

33-05-16M

DETAILED PARTS LIST
33-05-16M
PAGE 1

BOEING

707

PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
16M	65-58786-1	MODULE INSTL, P13 PILOTS OVERHEAD (LIGHTS ONLY) (SEE . . . 25-1, FIG. 1F, ITEM 8 AND 25-1, FIG. 1K, ITEM 6)	0150	RF
	65-64865-1	. MODULE ASSY, P13J ENGINE START (LIGHTS ONLY). (REWORKED BY SB 2875)	0150	RF
1	66-9039	. . . KNOB ASSY, SMALL POINTER.	0150	1
2	LL22XD62J3	. . . SETSCREW, HEX SOCKET (V03038)	0150	2
3	6429	. . . TRANSFORMER, VARIABLE POWER (V95266).	0150	1
	69-46122-5	. MODULE ASSY, P13S LIGHT OVERRIDE AND COMPASS DIMMER (LIGHTS ONLY)	0150	RF
4	66-9039	. . . KNOB ASSY, SMALL POINTER.	0150	1
5	LL22XD62J3	. . . SETSCREW, HEX SOCKET (V03038)	0150	2
6	RP11-2FD751KK	. . . RESISTOR, VARIABLE (V44655)	0150	1
7	17AT7	. . . SWITCH, TOGGLE (V91929)	0150	1
	69-52343-1	. MODULE ASSY, P13AD LIGHTING CONTROLS (LIGHTS ONLY).	0150	RF
9	66-9039	. . . KNOB ASSY, SMALL POINTER.	0150	2
10	LL22XD62J3	. . . SETSCREW, HEX SOCKET (V03038)	0150	2
11	16425	. . . TRANSFORMER, VARIABLE POWER (V95266). (OPTIONAL 5-1035 (V58474))	0150	2
11	5-1035	. . . TRANSFORMER, VARIABLE POWER (V58474). (OPTIONAL TO 16425 (V95266))	0150	2
	69-46109-5	. MODULE ASSY, P13P OXYGEN AND EMERGENCY EXIT LIGHTS. (LIGHTS ONLY)	0150	RF
13	BACS30EM5	. . . SWITCH, TOGGLE.	0150	2
14	B9985-1	. . . GUARD, (V72914)	0150	1
15	7AT41	. . . SWITCH, TOGGLE (V91929)	0150	1
	NAS601-7P	. . . ATTACHING PARTS . . . SCREW	0150	2
	65-58795-7	. . . MODULE ASSY, P13M EXTERIOR LIGHTING (LIGHTS ONLY)	0150	RF
17	24-1164-3	. . . LEVER, EXTENSION.	0150	2
18	MS24523-21	. . . SWITCH, TOGGLE.	0150	2
19	A3-1034	. . . SWITCH, TOGGLE (V81640)	0150	4
20	532TS1-3	. . . SWITCH, TOGGLE (V91929)	0150	2
	NAS514P632-7	. . . ATTACHING PARTS . . . SCREW	0150	4
21	2TL1-1N	. . . SWITCH, TOGGLE (V91929)	0150	1
22	MS24524-23	. . . SWITCH, TOGGLE.	0150	1
23	MS24524-22	. . . SWITCH, TOGGLE.	0150	1
24	MS24523-23	. . . SWITCH, TOGGLE.	0150	1
	69-52098-1	. MODULE ASSY, P13B DC AUXILIARY HYDRAULIC PUMP AND OVERHEAD DIMMER (LIGHTS ONLY)	0150	RF
27	66-9039	. . . KNOB ASSY, SMALL POINTER.	0150	1
28	LL22XD62J3	. . . SETSCREW, HEX SOCKET (V03038)	0150	2
29	16425	. . . TRANSFORMER, VARIABLE POWER (V95266). (OPTIONAL 5-1035 (V58474))	0150	1
29	5-1035	. . . TRANSFORMER, VARIABLE POWER (V58474). (OPTIONAL TO 16425 (V95266))	0150	1
30	MS24523-30	. . . SWITCH.	0150	1
	69-52099-1	. MODULE ASSY, P13AB CAPTAIN PANEL DIMMER (LIGHTS ONLY) (DELETED BY RAF MOD 7211.019-4)	0150	RF
	391-33-10-17018-001	. MODULE ASSY, P13AB CAPTAIN PANEL DIMMER (LIGHTS ONLY) (VZ0031) (ADDED BY RAF MOD 7211.019-4)	0150	RF
32A	66-9039	. . . KNOB ASSY, (USED ON 69-52099-1)	0150	2
33	LL22XD62J3	. . . SETSCREW, HEX SOCKET (V03038)	0150	2
33A	LL22XD62J3	. . . SETSCREW, HEX SOCKET (V03038)	0150	2
34	16425	. . . TRANSFORMER, VARIABLE POWER (V95266). (USED ON 69-52099-1) (OPTIONAL 5-1035 (V58474))	0150	1
34	5-1035	. . . TRANSFORMER, VARIABLE POWER (V58474) (USED ON (69-52099-1) (OPTIONAL TO 16425) (V95266))	0150	1
34A	16425	. . . TRANSFORMER, VARIABLE POWER (V95266). (USED ON 69-52099-1) (OPTIONAL 5-1035 (V58474))	0150	2
34B	MS24523-22	. . . SWITCH, OVERRIDE.	0150	1
	69-52339-5	. MODULE ASSY, P13AA LIGHTING CONTROLS (LIGHTS ONLY).	0150	RF
36	66-9039	. . . KNOB ASSY, SMALL POINTER.	0150	2
37	LL22XD62J3	. . . SETSCREW, HEX SOCKET (V03038)	0150	2
38	6430A	. . . TRANSFORMER, VARIABLE POWER (V95266).	0150	1
39	6430A	. . . TRANSFORMER, VARIABLE POWER (V95266).	0150	1
40	65C21713-65	. MODULE ASSY, PITOT HEAT (LIGHTS ONLY) (ADDED BY SB 3371)	0303	RF
41	SHAP	. . . CAP, AMBER (V81590)	0303	1
42	1864	. . . LAMP, (V08806).	0303	1
43	STB130-4	. . . BASE ASSY, LIGHT (V81590)	0303	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 16M	391-34-30-74452-001	. MODULE ASSY, MARKER BEACON (VZ0031) (ADDED BY RAF . .	0150	RF
R		MOD 7211.019-4)		
R 50	A5890	. . LIGHT, PANEL (V72914)	0150	2
R 55	327	. . LAMP, (V08806).	0150	2
R 60	MS27407-4	. . SWITCH.	0150	1
R	391-34-50-74452-001	. MODULE ASSY, ANTENNA CONTROL (VZ0031) (ADDED BY RAF .	0150	RF
R		MOD 7211.019-4)		
R 70	391-34-50-74452-005	. . PCB ASSY (VZ0031)	0150	1
R 75	MS90451-7152	. . LAMP.	0150	6
R 80	MS24523-23	. . SWITCH, TOGGLE 1 POLE	0150	2
R 85	MS27407-1	. . SWITCH, TOGGLE 2 POLE	0150	4
		. FOR REFERENCE TO OTHER MODULE DETAILS, SEE NHA. . . .	0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/01

33-05-16

DETAILED PARTS LIST
33-05-16M
PAGE 3

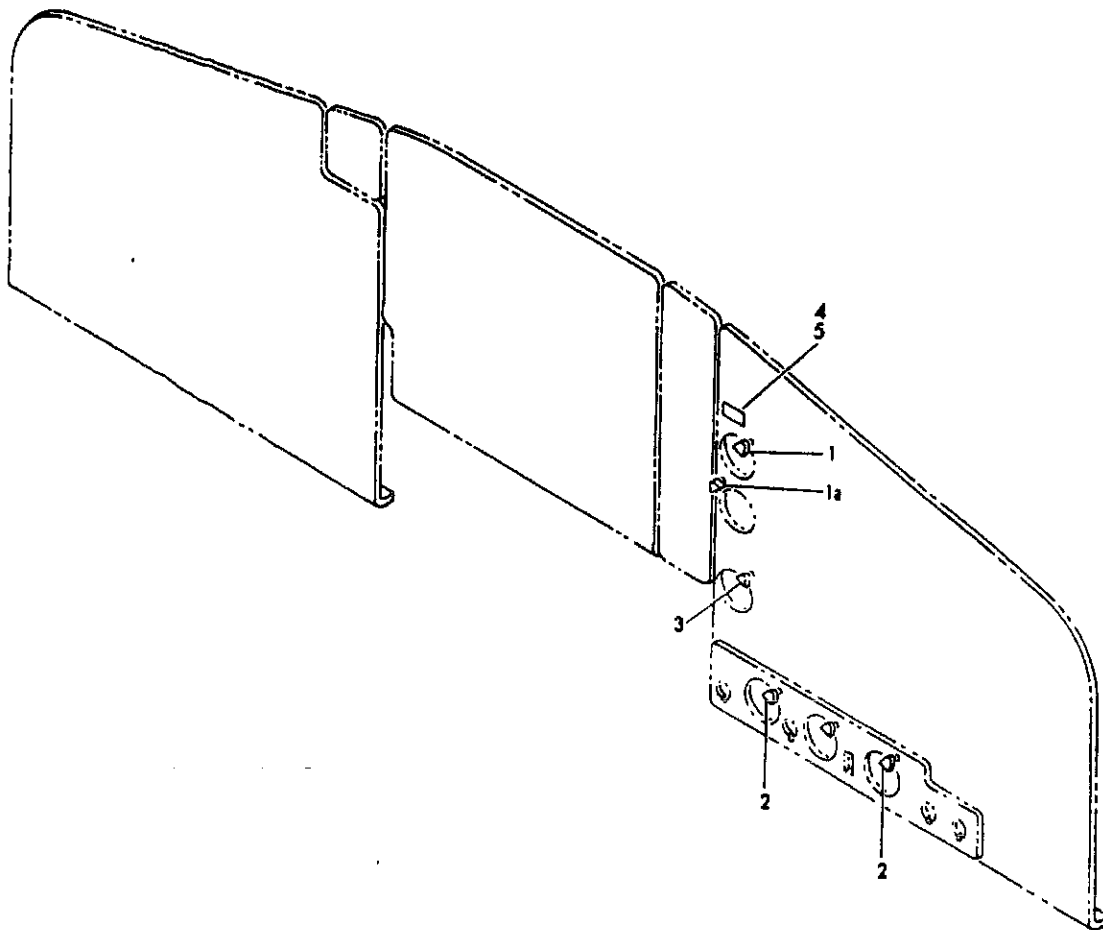
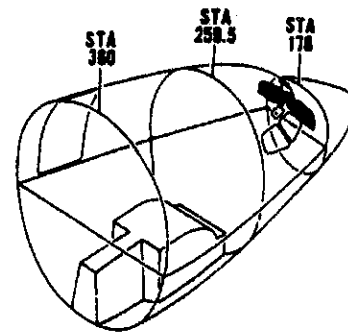


FIGURE 31F. PANEL INSTL, P10 COPILOTS MAIN INSTRUMENT (LIGHTS ONLY)

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
			1	2	3	4	5	6	7			
R R R R R R R R	31F	65-51822-2	PANEL INSTL, P10 COPILOTS MAIN INSTRUMENT (LIGHTS . . . ONLY) (DELETED BY MOD 7211.019-225) (SEE 25-1, FIG. 1K, ITEM 4)							0150	RF	
		391-31-10-74166-001	PANEL INSTL, P10 COPILOTS MAIN INSTRUMENT (LIGHTS . . . ONLY) (VZ0031) (65-51822-2 MODIFIED BY MOD 7211.019-225 AND 7211.019-4) (SEE 25-1, FIG. 1K, ITEM 4)							0103	RF	
		391-31-10-74166-003	PANEL INSTL, P10 COPILOTS MAIN INSTRUMENT (LIGHTS . . . ONLY) (VZ0031) (65-51822-2 MODIFIED BY MOD 7211.019-225 AND 7211.019-4) (SEE 25-1, FIG. 1K, ITEM 4)							0450	RF	
		65-51822-74	. UNIT ASSY, (LIGHTS ONLY).							0150	RF	
	2	5408M8C28	. . BOLT/LITE, (V07204).							0150	3	
	4	ST136ML5-31	. . LIGHT, VIP CALL (ADDED BY RAF MOD 7211.019-133 AND DELETED BY RAF MOD 7211.019-154)							0203	1	
		5	SS51074	. . BUTTON, PLUG (ADDED BY RAF MOD 7211.019-154).							0203	1
				. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE												

RAF
NOV 21/01

33-05-31F

DETAILED PARTS LIST
33-05-31F
PAGE 1

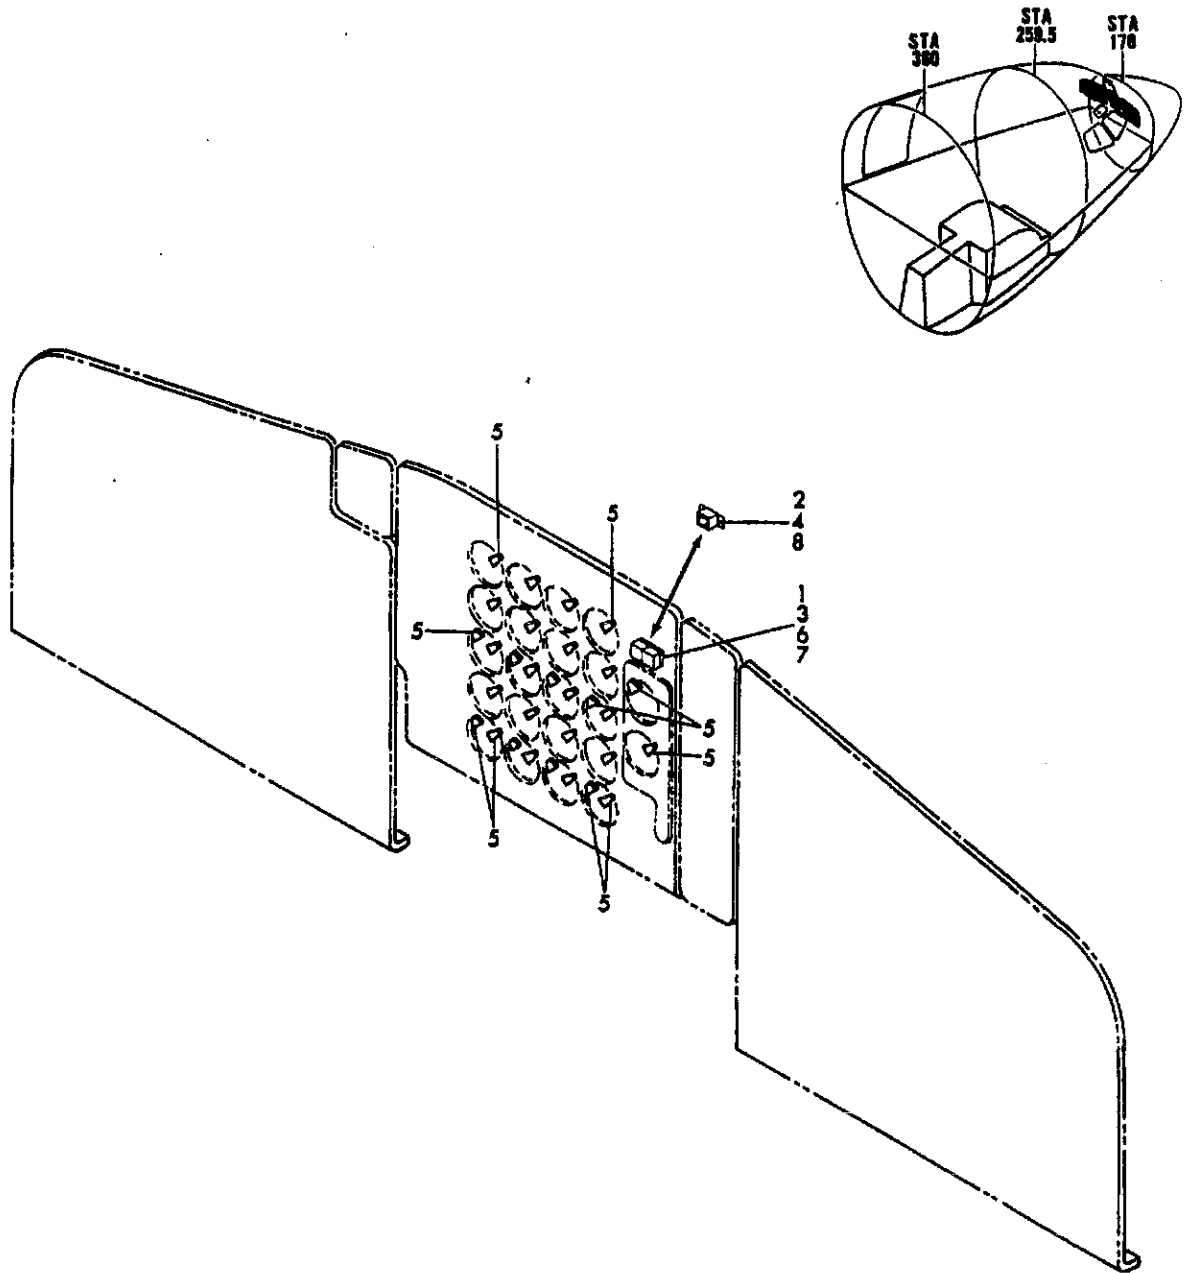


FIGURE 31H. PANEL INSTL, P9 ENGINE INSTRUMENT (LIGHTS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R R R R	31H	65-51823-1	PANEL INSTL, P9 ENGINE INSTRUMENT (LIGHTS ONLY) (SEE . . . 25-1, FIG. 1E, ITEM 7, 25-1, FIG. 1F, ITEM 4, 25-1, FIG. 1G, ITEM 7, 25-1, FIG. 1J, ITEM 7 AND 25-1, FIG. 1K, ITEM 4)	0150	RF
	2	611-1012-001	. CAP, INDICATOR LIGHT (V81590)	0150	1
	4	387	. BULB, (V08806)	0150	2
		65-51823-20	. UNIT ASSY, (LIGHTS ONLY)	0150	RF
	5	5408M8C28	. . BOLTITE, (V07204)	0150	30
	8	211-1012-001	. . BASE ASSY, INDICATOR LIGHT (V81590)	0150	1
			ATTACHING PARTS		
		NAS514P440-5	. . SCREW	0150	2
			-----*		
			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

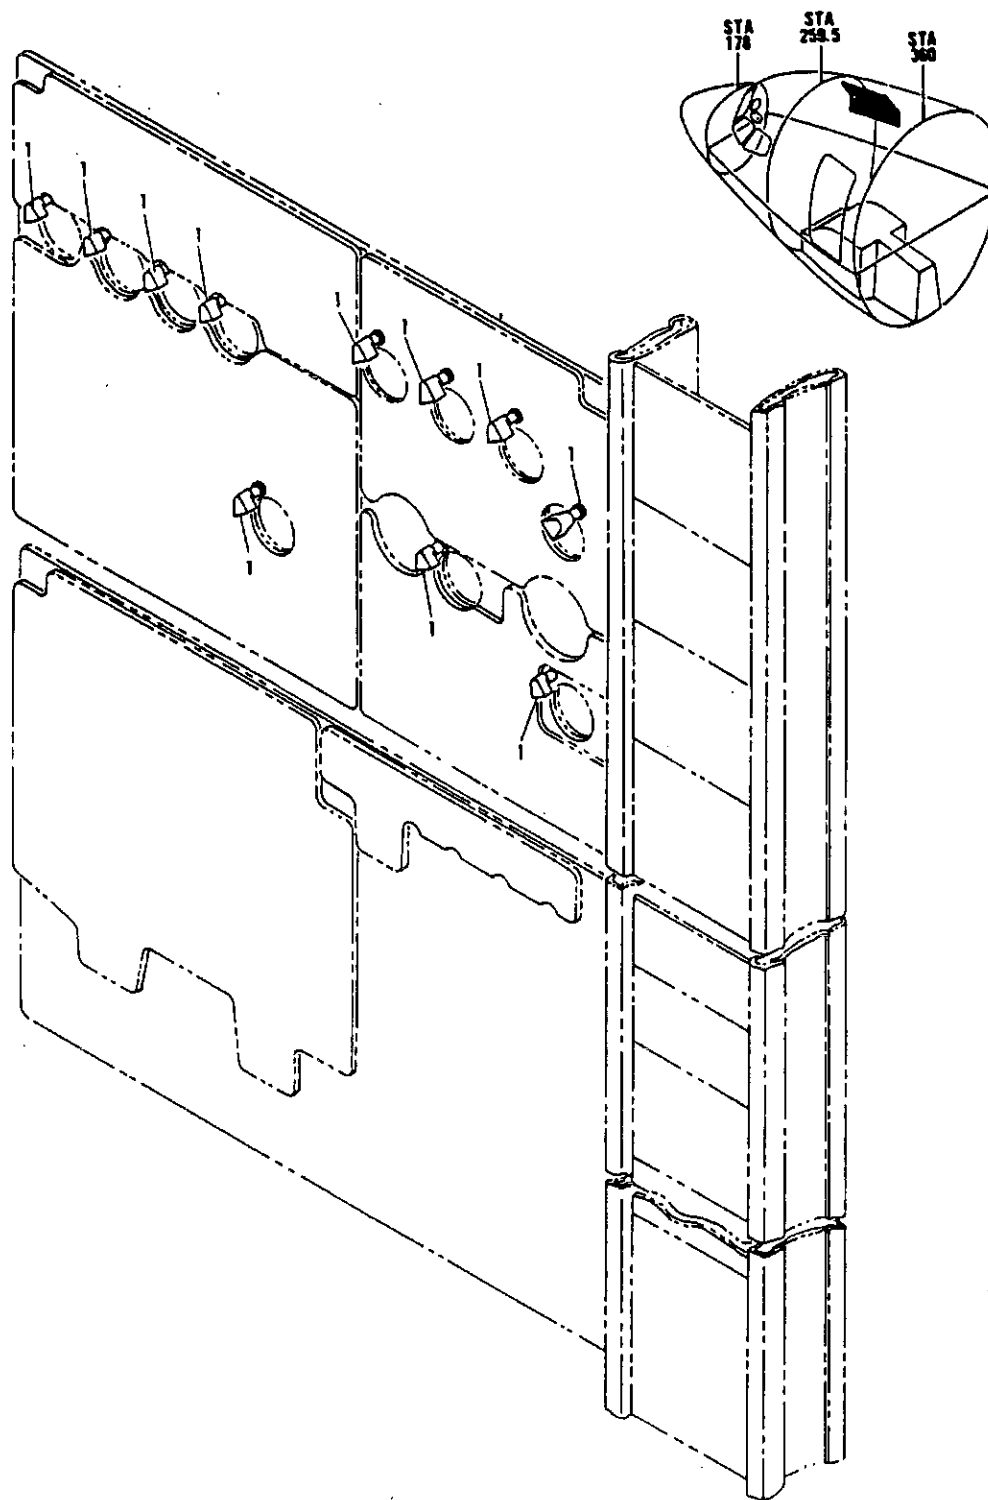


FIGURE 48L. PANEL INSTL, FLIGHT ENGINEER'S UPPER (LIGHTS ONLY)



PARTS CATALOG

R R R R R	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
	48L	65-58397-1	PANEL INSTL, FLIGHT ENGINEERS UPPER (LIGHTS ONLY) (SEE 25-1, FIG. 1E, ITEM 8, 25-1, FIG. 1K, ITEM 5 AND 25-1, FIG. 2E, ITEM 102)							0150	RF
		65-58397-16	. UNIT ASSY, (LIGHTS ONLY).							0150	RF
	1	5602MSPBC28	. . BOLTITE, (V22973).							0150	11
			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA							0150	
			MISSING ITEM NUMBERS ARE NOT APPLICABLE								

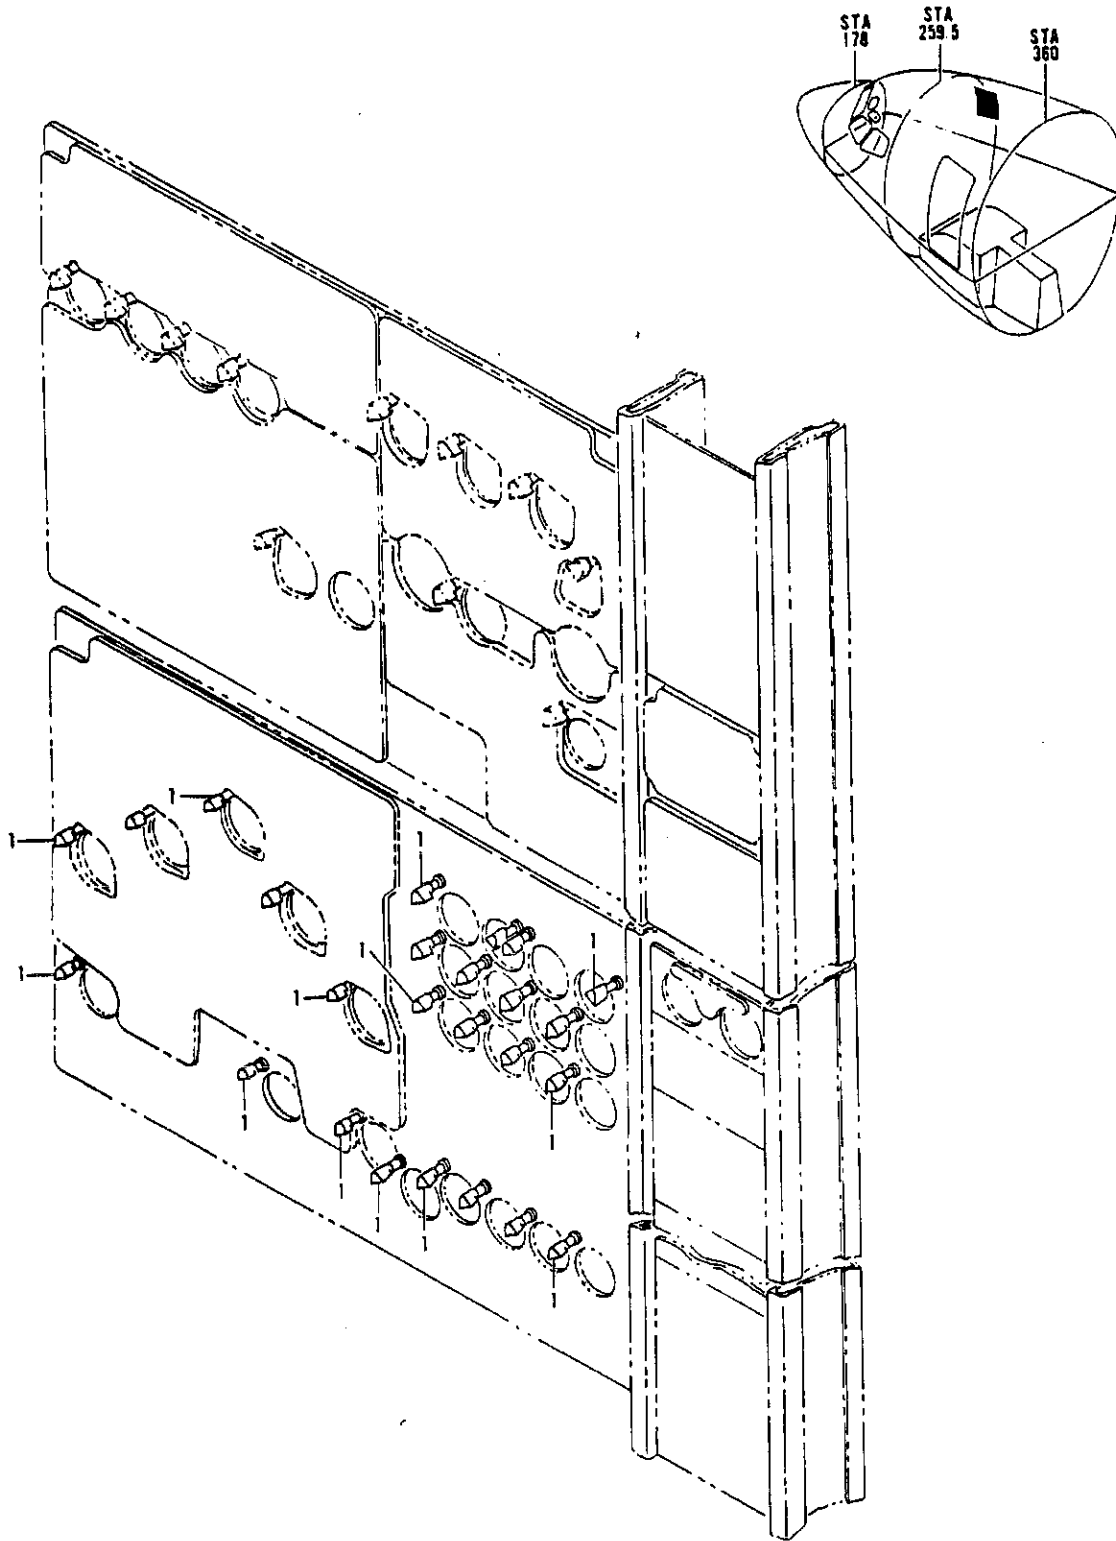


FIGURE 48Q. PANEL INSTL, FLIGHT ENGINEERS LOWER (LIGHTS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R 1	48Q	65-58398-1	PANEL INSTL, FLIGHT ENGINEERS LOWER (LIGHTS ONLY) (DELETED BY RAF 7211.019-225) (SEE 25-1, FIG. 1K, ITEM 5)							0150	RF
		361-39-11-74192-001	PANEL INSTL, FLIGHT ENGINEERS LOWER (LIGHTS ONLY) (ADDED BY RAF 7211.019-225) (SEE 25-1, FIG. 1K, ITEM 5)							0150	RF
		65-58398-13	. UNIT ASSY, (LIGHTS ONLY).							0150	RF
		5602MSPBC28	. . BOLT/LITE, (V22973). FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA							0150 0150	RF 25
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

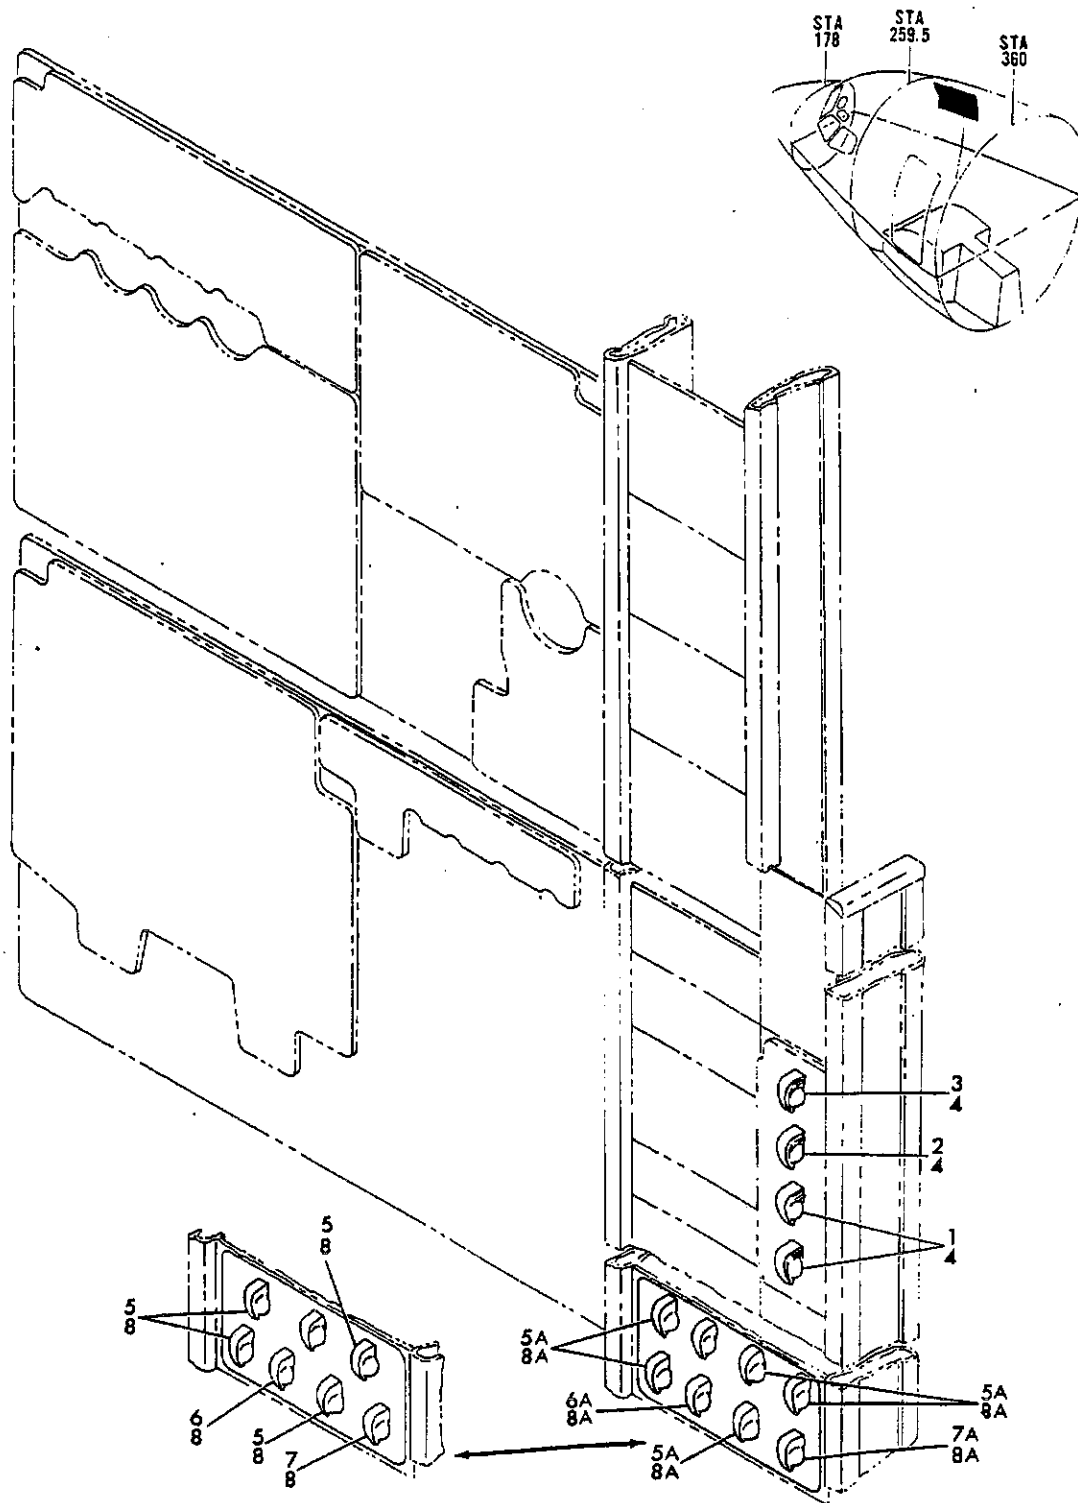


FIGURE 48U. PANEL (INSTL, FLIGHT ENGINEERS AUXILIARY (LIGHTS ONLY))

BOEING



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
48U	65-58957-1		PANEL INSTL, FLIGHT ENGINEERS AUXILIARY (LIGHTS ONLY) . (SEE 25-1, FIG. 1B, ITEM 8, 25-1, FIG. 1F, ITEM 7, 25-1, FIG. 2D, ITEM 8 AND 25-1, FIG. 2E, ITEM 83)	5199	RF
	65-58958-10		. MODULE INSTL, LIGHTING CONTROLS (LIGHTS ONLY)	5199	RF
	65-58958-11		. . UNIT ASSY, (LIGHTS ONLY)	5199	RF
1	6430A		. . . POWERSTAT, VARIABLE POWER (V95266)	5199	2
2	5-1073		. . . POWERSTAT, (V58474) (OPTIONAL TO 16423 (V95266))	5199	1
2	16423		. . . POWERSTAT, (V95266) (OPTIONAL 5-1073 (V58474))	5199	1
3	5-1319		. . . POWERSTAT, (V58474) (OPTIONAL TO 16432 (V95266))	5199	1
3	16432		. . . POWERSTAT, (V95266) (OPTIONAL 5-1319 (V58474))	5199	1
4	BACK20E2		. . . KNOB	5199	4
			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

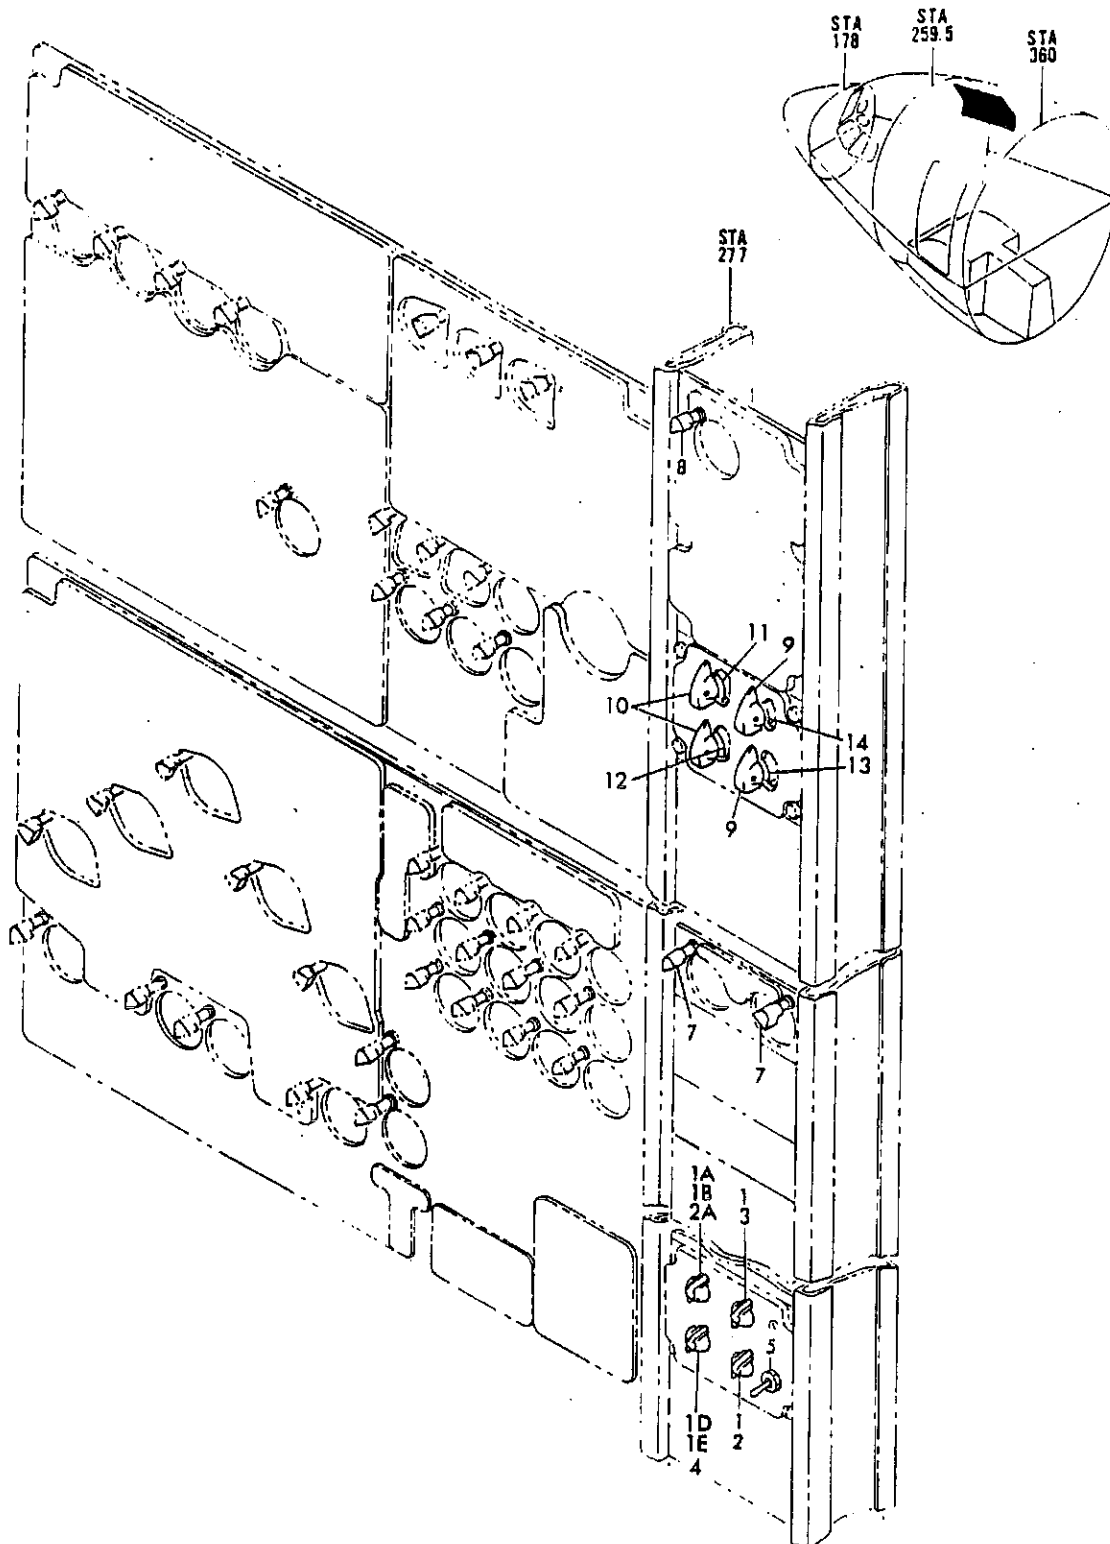


FIGURE 48Y. PANEL INSTL, FLIGHT ENGINEERS AUXILIARY (LIGHTS ONLY)

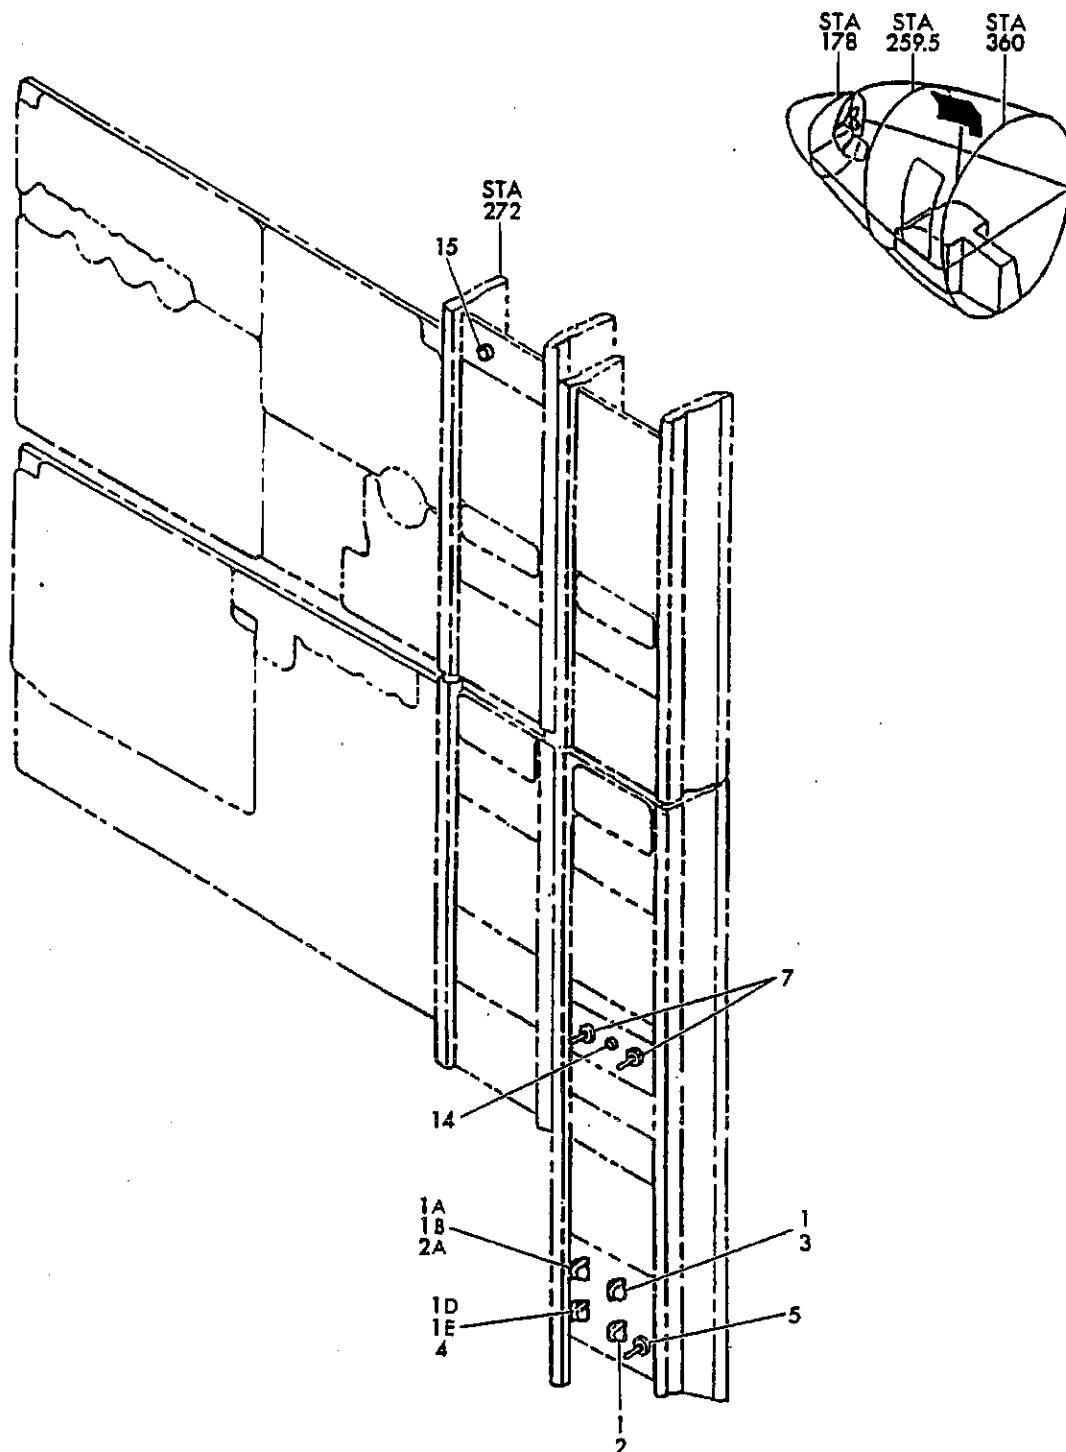


FIGURE 48Z. PANEL INSTL. MOD FLIGHT ENGINEERS AUXILIARY



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	48Z	361-39-11-74193-001	PANEL INSTL, MOD FLIGHT ENGINEERS AUXILIARY (VS2500). .							0150	RF
R			(ADDED BY RAF 7211.019-225) (SEE 25-1, FIG. 1K,								
R			ITEM 5) (LIGHTS ONLY)								
R		65-57565-4	. PANEL INSTL, LIGHTING CONTROLS (LIGHTS ONLY).							0150	RF
R		65-57565-5	. . . UNIT ASSY, (LIGHTS ONLY).							0150	RF
R	1	BACK20E2	. . . KNOB.							0150	1
R	1A	66-9039	. . . KNOB ASSY							0150	1
R	1B	LL22XD62J3	. . . SETSCREW, HEX SOCKET (V03038)							0150	2
R	1D	BACK20E2	. . . KNOB.							0150	1
R	2	16425	. . . POWERSTAT, (V95266)							0150	1
R			(OPTIONAL 5-1035 (V58474))								
R	2	5-1035	. . . POWERSTAT, (V58474)							0150	1
R			(OPTIONAL TO 16425 (V95266))								
R	2A	16425	. . . POWERSTAT, (V95266)							0150	1
R	2A	5-1035	. . . POWERSTAT, (V58474)							0150	1
R			(OPTIONAL TO 16425 (V95266))								
R	3	16423	. . . POWERSTAT, (V95266)							0150	1
R			(OPTIONAL 5-1073 (V58474))								
R	3	5-1073	. . . POWERSTAT, (V58474)							0150	1
R			(OPTIONAL TO 16423 (V95266))								
R	4	16427	. . . POWERSTAT, (V95266)							0150	1
R			(OPTIONAL 5-1092 (V58474))								
R	4	5-1092	. . . POWERSTAT, (V58474)							0150	1
R			(OPTIONAL TO 16427 (V95266))								
R		361-39-11-74201-001	. OXYGEN PANEL LIGHT ASSY, (OXYGEN ONLY) (VS2500)							0150	RF
R		65-40586-31	. . . UNIT ASSY, (LIGHTS ONLY).							0150	RF
R	7	5602MSPBC28	. . . BOLT LIGHT							0150	2
R	14	MS25010B16A	. . . LIGHT							0150	1
R		65-58399-1	PANEL INSTL, FLIGHT ENGINEERS AUXILIARY (LIGHTS ONLY) .							0150	RF
R			(SEE 25-1, FIG. 1E, ITEM 8, 25-1, FIG. 1J, ITEM 8,								
R			25-1, FIG. 1K, ITEM 5, 25-1, FIG. 2C, ITEM 7 AND								
R			25-1, FIG. 2E, ITEM 115)								
R		65-57565-33	. PANEL INSTL, COOLANT AIR SYSTEM (LIGHTS ONLY)							0150	RF
R		65-57565-34	. . . UNIT ASSY, (LIGHTS ONLY).							0150	RF
R			FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA								
R	15	5602MSPBC28	. . . BOLT LIGHT (V22973).							0150	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

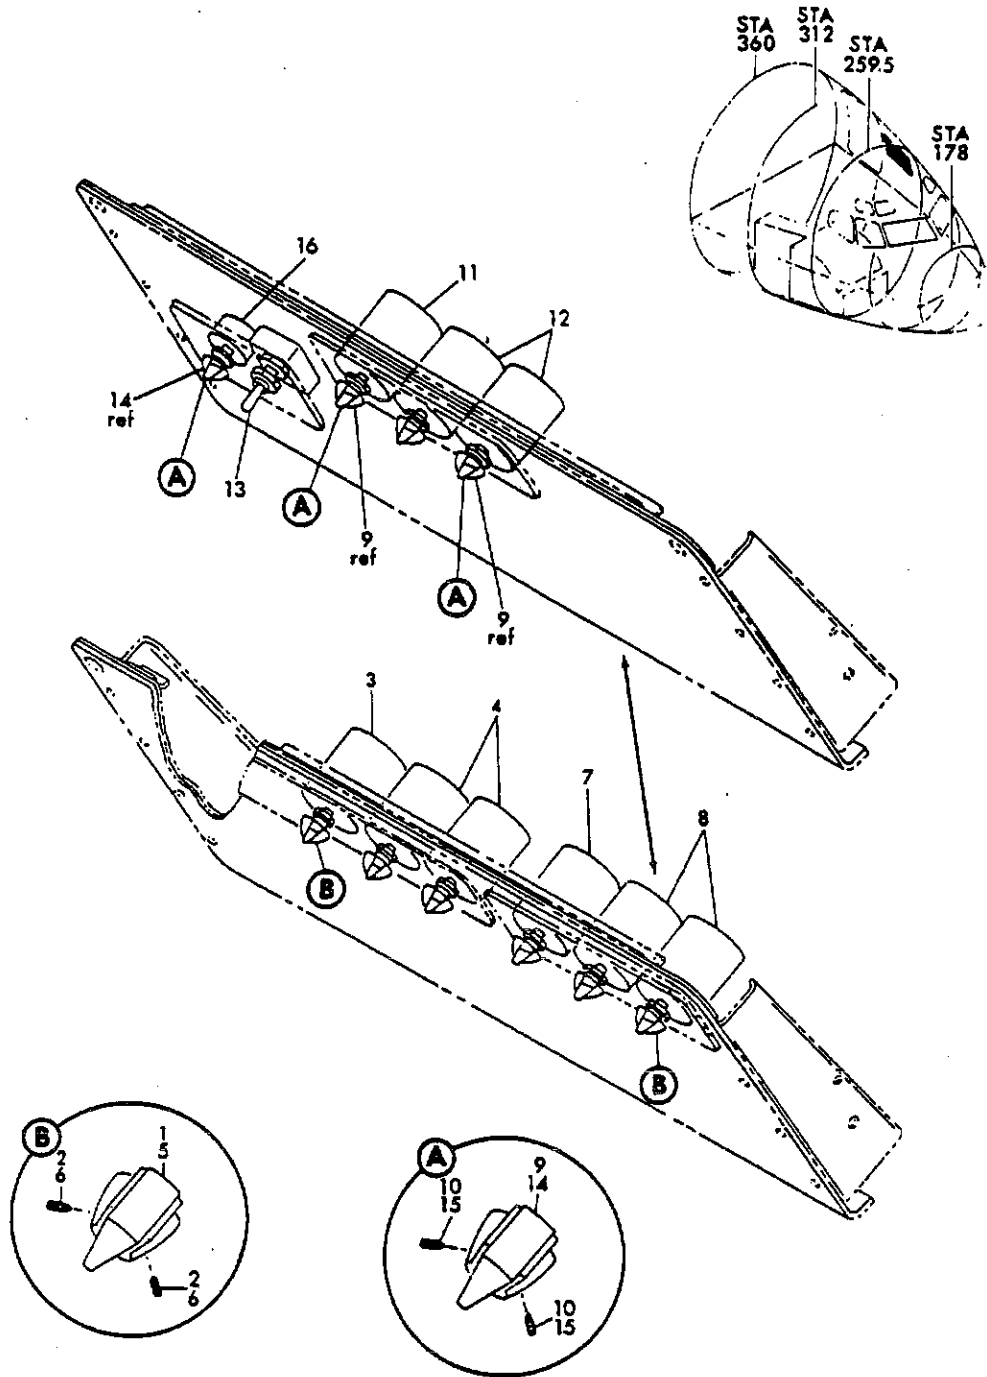


FIGURE 58F. PANEL INSTL, NAVIGATORS (LIGHTS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
58F	50-5559		PANEL INSTL, NAVIGATORS (LIGHTS ONLY) (SEE 25-1, FIG. 1E, ITEM 20, 25-1, FIG. 1F, ITEM 17, 25-1, FIG. 2C, ITEM 19, 25-1, FIG. 2D, ITEM 15 AND 25-1, FIG. 2E, ITEM 7A)	5199	RF
1	66-9039		. KNOB ASSY, SMALL POINTER.	5199	3
2	LL22XD62J3		. . SETSCREW, (V03038).	5199	2
	50-5559-179		. UNIT ASSY, (LIGHTS ONLY).	5199	RF
3	16424		. . POWERSTAT, (V95266)	5199	1
			(OPTIONALS 5-1231 (V58474) 5-1051 (V58474))		
3	5-1231		. . POWERSTAT, (V58474)	5199	1
			(OPTIONAL TO 16424 (V95266))		
3	5-1051		. . POWERSTAT, (V58474)	5199	1
			(OPTIONAL TO 16424 (V95266))		
4	6430A		. . POWERSTAT, (V95266)	5199	2
			(OPTIONAL 5-1216 (V58474))		
4	5-1216		. . POWERSTAT, (V58474)	5199	2
			(OPTIONAL TO 6430A (V95266))		
			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

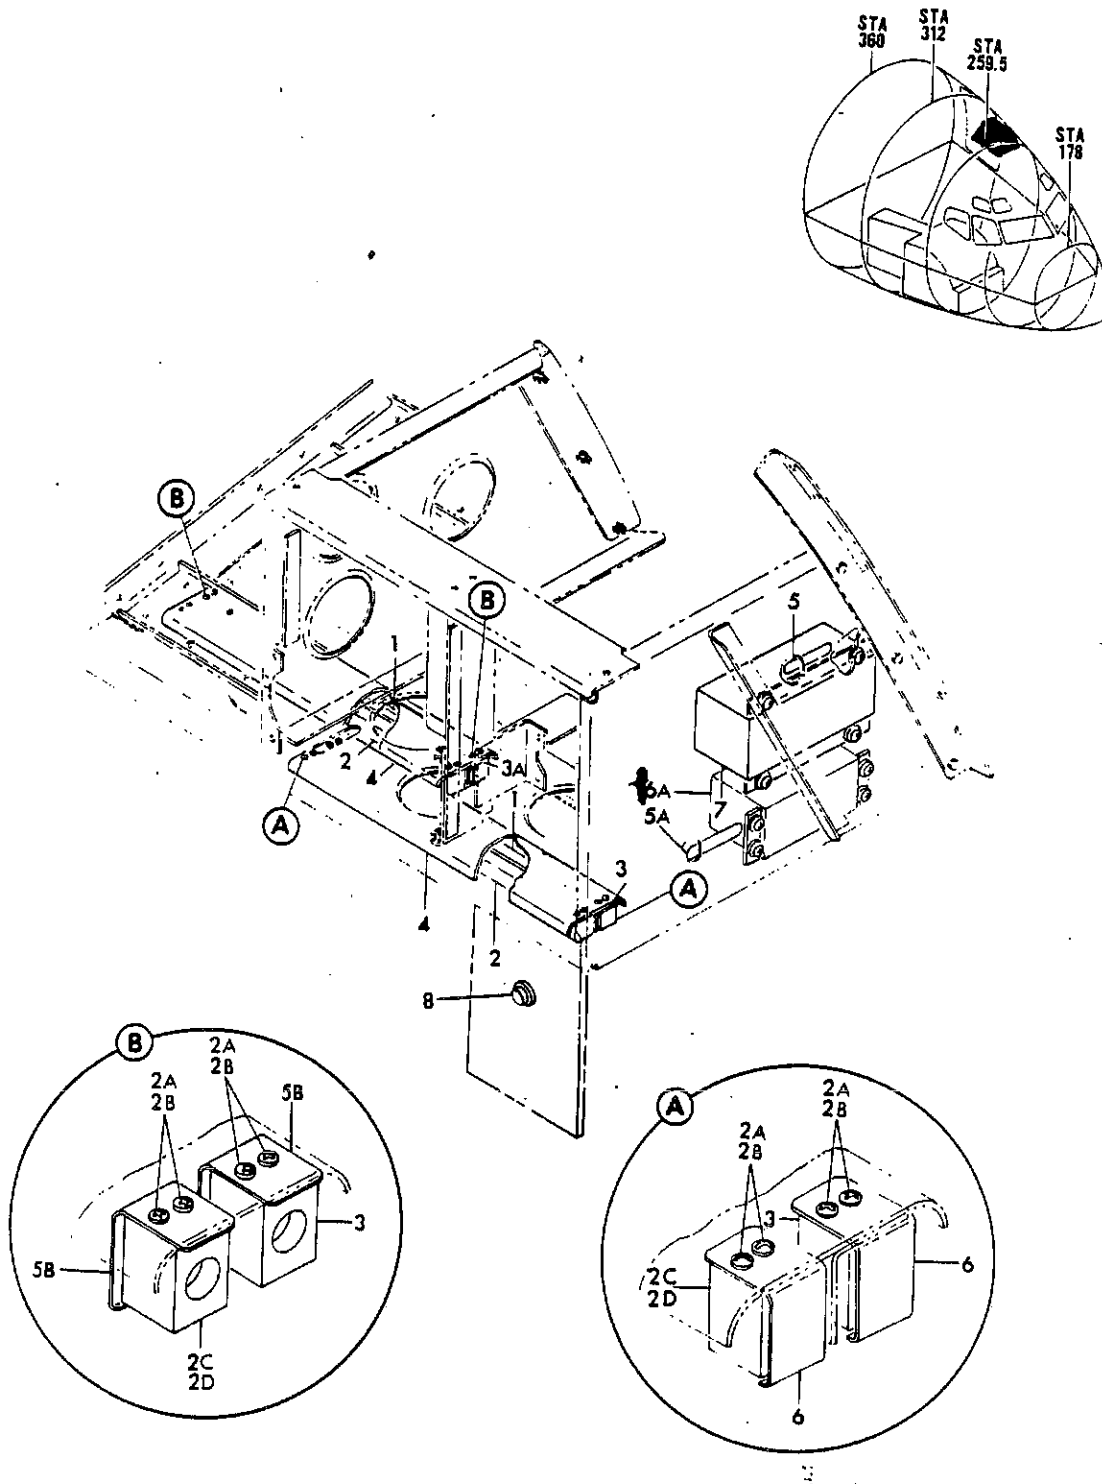


FIGURE 61. RACK INSTL, NAVIGATORS EQUIPMENT (LIGHTS ONLY)

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE											EFF FROM TO	UNITS PER ASSY							
			1	2	3	4	5	6	7													
R R R R R R R R R R R R R R R R R	61	65-53037	RACK INSTL, NAVIGATORS EQUIPMENT (LIGHTS ONLY) (SEE . . . 25-1, FIG. 1, ITEM 20, 25-1, FIG. 1B, ITEM 26, 25-1, FIG. 1C, ITEM 26, 25-1, FIG. 1D, ITEM 24, 25-1, FIG. 1E, ITEM 23, 25-1, FIG. 1F, ITEM 20, 25-1, FIG. 1G, ITEM 23, 25-1, FIG. 1H, ITEM 21, 25-1, FIG. 1J, ITEM 21, 25-1, FIG. 1K, ITEM 14, 25-1, FIG. 2B, ITEM 20, 25-1, FIG. 2E, ITEM 90 AND 25-1, FIG. 2H, ITEM 20)												RF							
	1	5008CW	. LAMP, FLUORESCENT COOL WHITE (V08806) (OPTIONAL FA8T5CW (V58854))											5199	2							
	1	FA8T5CW	. LAMP, FLUORESCENT COOL WHITE (V58854) (OPTIONAL TO 5008CW (V24455))											5199	2							
		65-53037-1	. SUPPORT ASSY, NAVIGATORS EQUIPMENT RACK (LIGHTS ONLY)											5199	1							
	2A	NAS601-3	. . SCREW											5199	16							
	2B	AN960D6L	. . WASHER.											5199	16							
	3	560	. . SOCKET, FLUORESCENT (V81590). (OPTIONAL TO 104-1021 (V81590))											5199	4							
	3	104-1021	. . SOCKET, FLUORESCENT (V81590). (OPTIONAL 560 (V81590))											5199	4							
	3A	65-46022-80	. . BAFFLE, NAVIGATORS PANEL EQUIPMENT RACK											5199	2							
	4	65-17016-10	. . REFLECTOR, NAVIGATORS PANEL EQUIPMENT											5199	2							
	5A	BACM10B20-21B	. MARKER-ALUMINUM FOIL, DIM BALLAST NAV TABLE FLUOR . . WHITE											5199	1							
	6	66-10608	. GUARD, FLUORESCENT BULB SOCKET.											5199	4							
		NAS603-7	ATTACHING PARTS																			
		BACW10J3	. SCREW											5199	4							
		NAS679A3W	. WASHER.											5199	4							
			. NUT											5199	4							
			-----*																			
			. FOR REFERENCE TO OTHER RACK DETAILS, SEE NHA.											5199								
MISSING ITEM NUMBERS ARE NOT APPLICABLE																						

BOEING
707
PARTS CATALOG (MAINTENANCE)

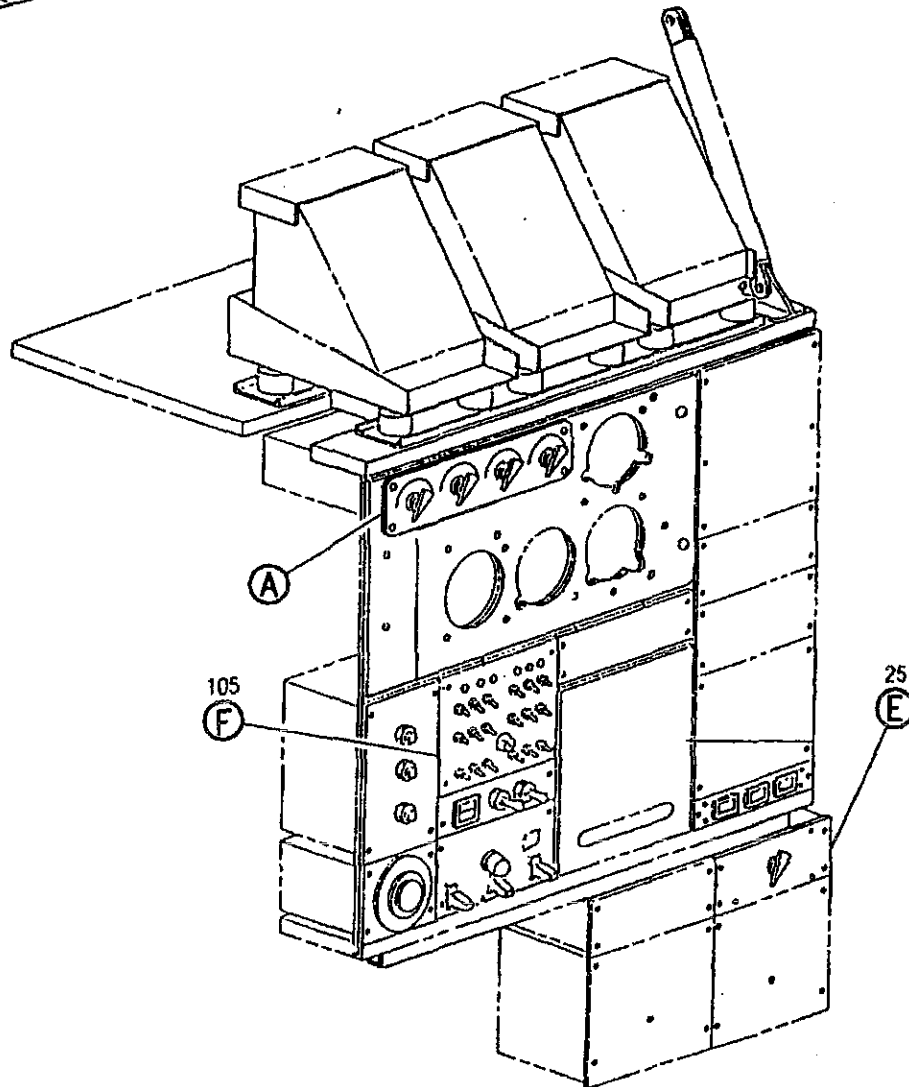
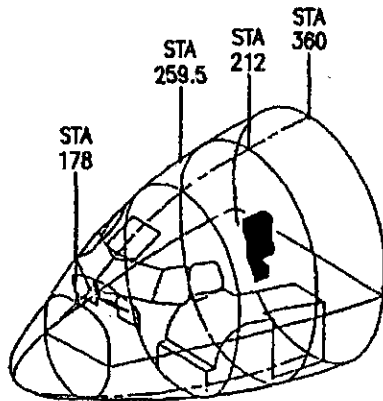


FIGURE 63A EQUIPMENT INSTL., COORDINATOR PANEL (LIGHTS ONLY) (SHEET 1)

DETAILED PARTS LIST
33-05-63A
PAGE 0

33-05-63A

NOV 21/01

BOEING
707
PARTS CATALOG (MAINTENANCE)

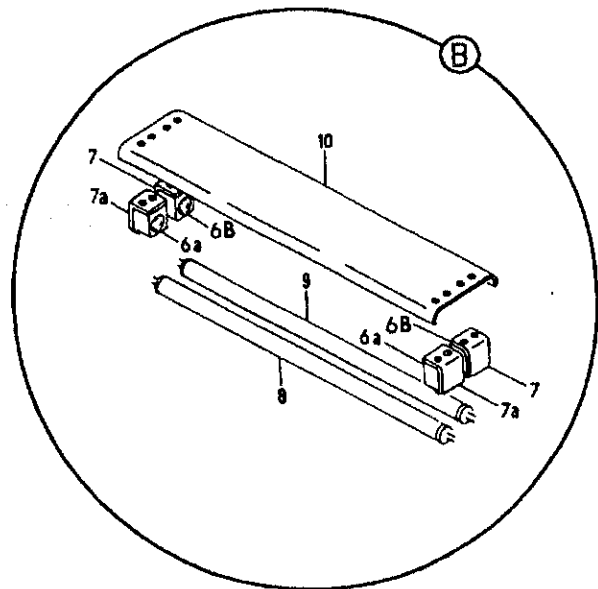
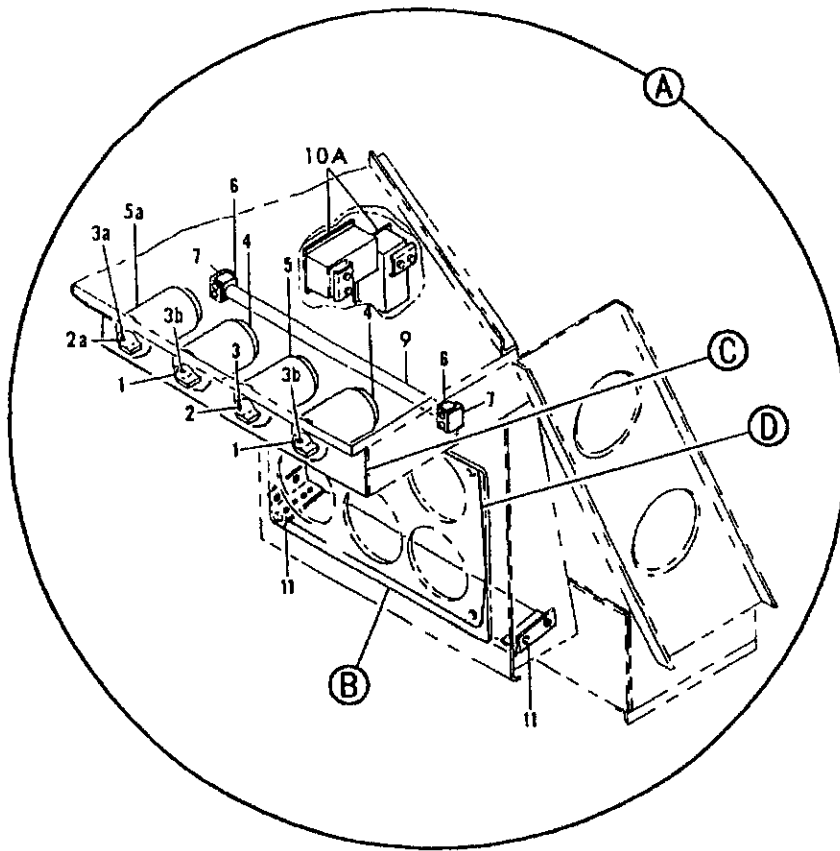


FIGURE 63A EQUIPMENT INSTL., MISSION COORDINATOR PANEL (LIGHTS ONLY) (SHEET 3)

A 330563A SHIT 2 REV 272

NOV 21/01

33-05-63A

DETAILED PARTS LIST
33-05-63A
PAGE 1

BOEING
707
PARTS CATALOG (MAINTENANCE)

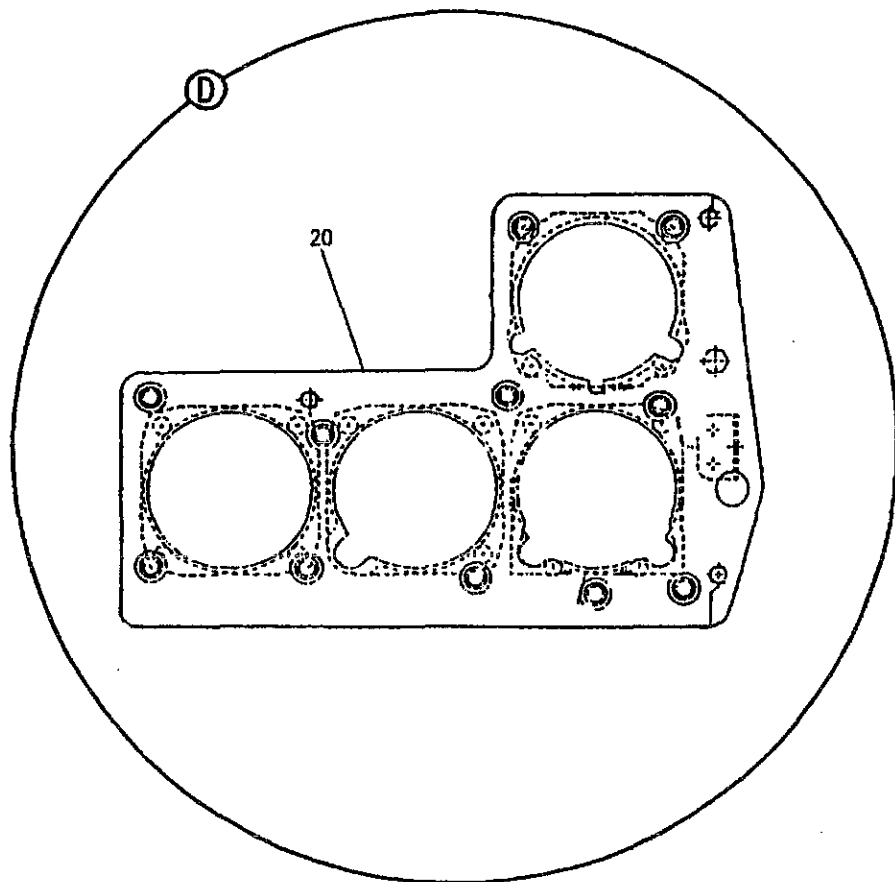
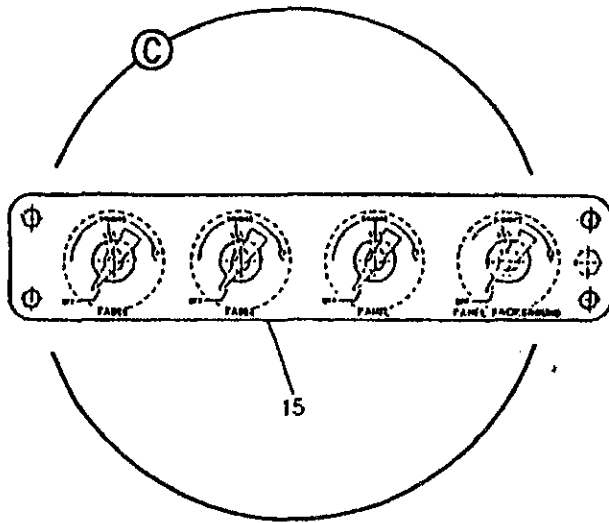




FIGURE 63A EQUIPMENT INSTL., MISSION COORDINATOR PANEL (LIGHTS ONLY) (SHEET 3)

DETAILED PARTS LIST
33-05-63A
PAGE 2

33-05-63A

NOV 21/01

BOEING
707
PARTS CATALOG (MAINTENANCE)

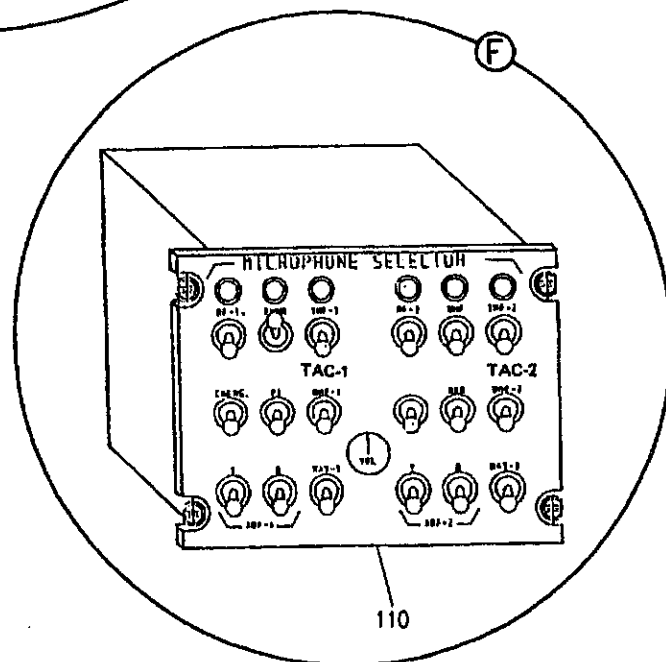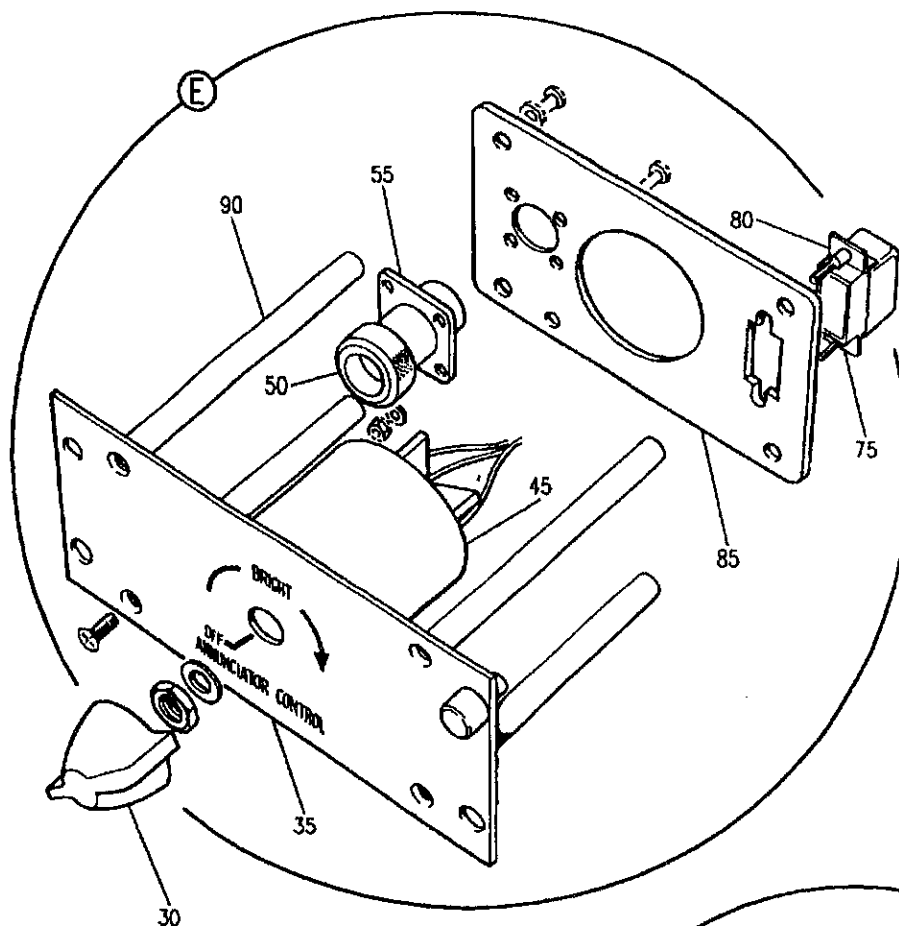

A 3305063A SHT 4 REV 272

FIGURE 63A EQUIPMENT INSTLL. MISSION COORDINATOR PANEL (LIGHTS ONLY) (SHEET 5)

NOV 21/01

33-05-63A

DETAILED PARTS LIST
33-05-63A
PAGE 3

BOEING

707

PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE					EFF FROM TO	UNITS PER ASSY			
			1	2	3	4	5	6	7			
R R R R R R R	63A	65-40548-1	EQUIPMENT INSTL, NAVIGATORS PANEL (LIGHTS ONLY)							0150	RF	
			(DELETED BY RAF MOD 7211.019-4)									
		391-25-10-74001-001	PANEL INSTL, MISSION CO-ORDINATORS STATION (VZ0031) . .							0101	RF	
			(65-40548-1 MODIFIED BY MOD 7211.019-225 AND							0450		
			7211.019-4)									
		391-25-10-74001-003	PANEL INSTL, MISSION CO-ORDINATORS STATION (VZ0031) . .							0203	RF	
			(65-40548-1 MODIFIED BY MOD 7211.019-225 AND									
			7211.019-4)									
		1	66-9039	. KNOB ASSY, SMALL POINTER.							0150	2
		2	66-9039	. KNOB ASSY, SMALL POINTER.							0150	1
R R R R R R R	3	LL22XD62J3	. . SETSCREW, HEX SOCKET (V03038)							0150	2	
	3B	LL22XD62J3	. . SETSCREW, HEX SOCKET (V03038)							0150	2	
	4	16424	. POWERSTAT, VARIABLE POWER (V95266).							0150	2	
			(OPTIONAL 5-1231 (V58474))									
	4	5-1231	. POWERSTAT, VARIABLE POWER (V58474).							0150	2	
			(OPTIONAL TO 16424 (V95266))									
	5	16425	. POWERSTAT, VARIABLE POWER (V95266).							0150	1	
			(OPTIONAL 5-1035 (V58474))									
	5	5-1035	. POWERSTAT, VARIABLE POWER (V58474).							0150	1	
			(OPTIONAL TO 16425 (V95266))									
R R R R R R R	6	560	. SOCKET, FLUORESCENT (V81590).							0150	2	
	6A	560	. SOCKET, FLUORESCENT (V81590) (ADDED BY RAF MOD. . . .							0150	2	
			7211.019-4)									
	6B	560	. SOCKET, FLUORESCENT (V81590).							0150	2	
			ATTACHING PARTS									
		NAS601-3	. SCREW							0150	4	
		NAS601-3	. SCREW							0150	6	
		AN960D6L	. WASHER.							0150	4	
		AN960D6L	. WASHER.							0150	6	
			-----*									
R R R R R R R	7	66-10608	. GUARD, FLUORESCENT BULB SOCKET.							0150	4	
	7A	66-10608	. GUARD, FLUORESCENT BULB SOCKET (ADDED BY RAF MOD. . .							0150	2	
			7211.019-4)									
	8	5008CW	. LAMP, FLUORESCENT COOL WHITE (V08806)							0150	1	
			(OPTIONAL FA8T5CW (V88204)) (ADDED BY RAF MOD									
			7211.019-4)									
	8	FA8T5CW	. LAMP, FLUORESCENT COOL WHITE (V58854)							0150	1	
			(OPTIONAL TO 5008CW (V24455)) (ADDED BY RAF MOD									
			7211.011-019)									
		9	5008CW	. LAMP, FLUORESCENT COOL WHITE (V08806)							0150	2
R R R R R R R			(OPTIONAL FA8T5CW (V88204))									
	9	FA8T5CW	. LAMP, FLUORESCENT COOL WHITE (V58854)							0150	2	
			(OPTIONAL TO 5008CW (V24455))									
	10	65-40548-10	. REFLECTOR, NAVIGATORS PANEL EQUIPMENT							0150	1	
	11	65-40548-11	. CLIP, NAVIGATORS PANEL EQUIPMENT LIGHT SUPPORT. . . .							0150	2	
			ATTACHING PARTS									
		NAS514P1032-5	. SCREW							0150	4	
		AN960D10L	. WASHER.							0150	4	
		NAS679A3W	. NUT							0150	4	
			-----*									
R R R R R R R	15	391-25-10-74016-103	. LIGHTPLATE (VZ0031) (ADDED BY RAF MOD 7211.019-4) . .							0150	1	
	20	10-60424-2294	. LIGHTPLATE (V0561) (ADDED BY RAF MOD 7211.019-4). . .							0150	1	
	25	391-33-10-74459-001	. ANNUNCIATOR DIMMER (VZ0031) (ADDED BY RAF MOD							0150	1	
			7211.019-4)									
	30	66-9039	. . KNOB.							0150	1	
	35	391-33-10-74459-003	. . PANEL ASSY, FRONT (VZ0031) (ALTERED FROM.							0150	1	
			391-31-10-73984-009)									
			ATTACHING PARTS									
	R		NAS514P632-6	. . SCREW, CSK.							0150	4
			-----*									
R R R R R R R	45	16425	. . POWERSTAT, VARIABLE POWER (VZ0031).							0150	1	
	50	MS504931-12N	. NUT, GROMMET.							0150	1	
	55	MS3470L12-10P	. RECEPTACLE.							0150	1	
			ATTACHING PARTS									
		MS35026-215	. . SCREW, CSK.							0150	4	
		MS15795-803	. . WASHER.							0150	4	
		MS2104S-L04	. NUT, SELF-LOCKING							0150	4	
			-----*									
	R	75	XD4N	. . RELAY, (V35344)							0150	1
	R	80	S0106-001	. . SOCKET, (V35344).							0150	1
R R R R R R R	85	391-33-10-74459-101	. . PANEL ASSY, RE AR							0150	1	
	90	8183A063ZHL	. . STANDOFF, (V9W423).							0150	4	
			ATTACHING PARTS									
	R		MS35206-228	. . . SCREW							0150	4
	MISSING ITEM NUMBERS ARE NOT APPLICABLE											

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
707
PARTS CATALOG (MAINTENANCE)

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	63A	AN96KD6L	.	.	.	WASHER.	.	.	.	0150	4
R	105	391-23-50-74163-001	.	.	.	PANEL, AUDIO SELECTOR (G-2472-1) (LIGHTS ONLY).	.	.	.	0150	RF
R	110	391-23-50-74163-101	.	.	.	LIGHTPLATE, (VZ0031) (MODIFY FROM 600A14120).	.	.	.	0150	1
R		NAS514P632-6	.	.	.	SCREW	.	.	.	0150	4
			.	.	.	FOR REFERENCE TO OTHER EQUIPMENT DETAILS, SEE NHA	.	.	.	0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

RAF
NOV 21/01

33-05-63A

DETAILED PARTS LIST
33-05-63A
PAGE 5

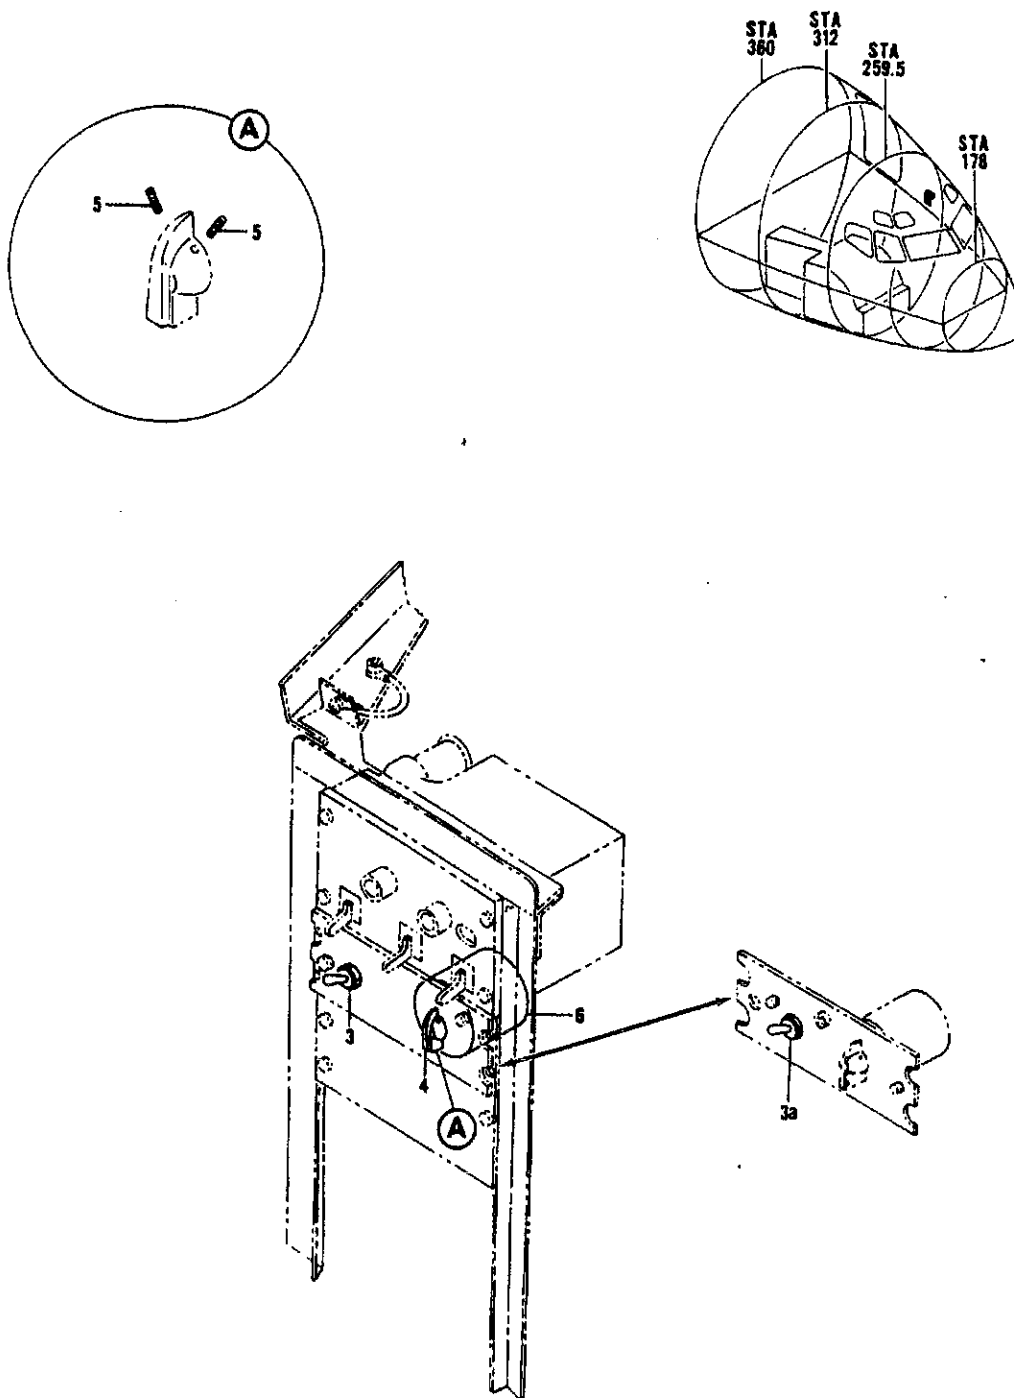




FIGURE 64. PANEL INSTL, OBSERVERS AUXILIARY EQUIPMENT (LIGHTS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
R R R R R R R R R	64 50-11388	PANEL INSTL, OBSERVER AUXILIARY EQUIPMENT (LIGHTS ONLY) (SEE 25-1, FIG. 1, ITEM 4, 25-1, FIG. 1B, ITEM 4, 25-1, FIG. 1C, ITEM 4, 25-1, FIG. 1D, ITEM 4, 25-1, FIG. 1E, ITEM 4, 25-1, FIG. 1F, ITEM 2, 25-1, FIG. 1G, ITEM 4, 25-1, FIG. 1H, ITEM 4, 25-1, FIG. 1J, ITEM 4, 25-1, FIG. 1K, ITEM 2, 25-1, FIG. 2B, ITEM 4, 25-1, FIG. 2C, ITEM 4, 25-1, FIG. 2D, ITEM 2, 25-1, FIG. 2E, ITEM 89, 25-1, FIG. 2F, ITEM 4, 25-1, FIG. 2G, ITEM 4 AND 25-1, FIG. 2H, ITEM 4)		RF
	50-11388-91	. PANEL ASSY, OBSERVER AUXILIARY EQUIPMENT (LIGHTS. . . ONLY)	0150	RF
	50-11388-127	. PANEL ASSY, (LIGHTS ONLY)	5199	RF
	3A MS35058-23	. . SWITCH.		1
	4 66-9039	. . KNOB ASSY, SMALL POINTER.		1
	5 LL22XD62J3	. . . SCREW, HEX SOCKET SET (V03038).		2
	6 16425	. . TRANSFORMER, VARIABLE POWER (V95266). (OPTIONAL 5-1035 (V58474))	0150	1
	6 5-1035	. . TRANSFORMER, VARIABLE POWER (V58474). (OPTIONAL TO 16425 (95266))	0150	1
	6 6430A	. . TRANSFORMER, VARIABLE POWER (V95266). (OPTIONAL 5-1216 (V58474))	5199	1
	6 5-1216	. . TRANSFORMER, VARIABLE POWER (V58474). (OPTIONAL TO 6430A (V95266))	5199	1
. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA				
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

BOEING
707
PARTS CATALOG (MAINTENANCE)

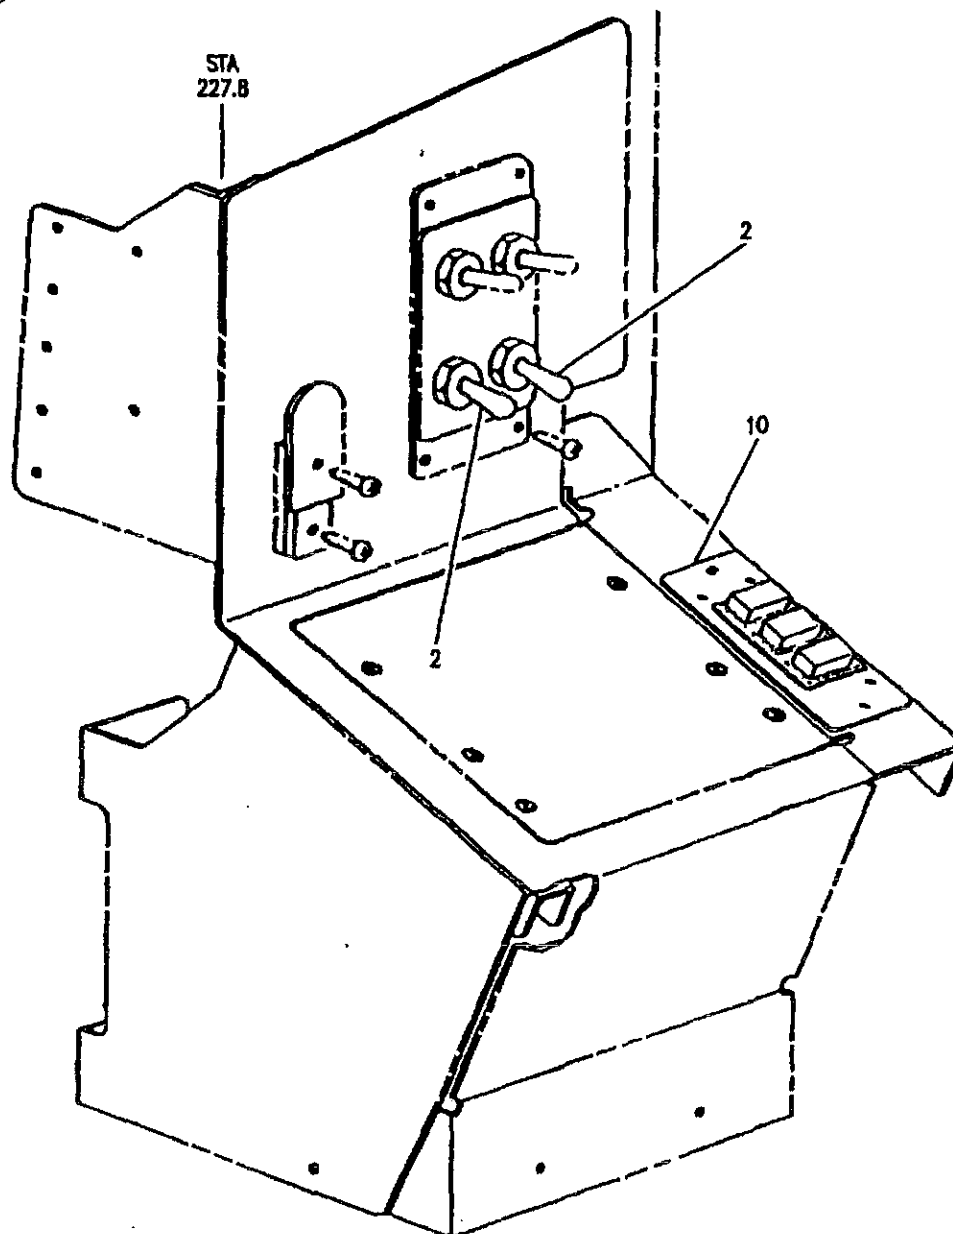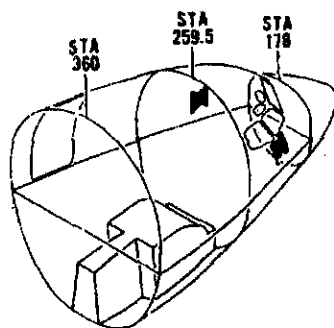

A 330568 REV 272

FIGURE 68. PANEL INSTL, PILOTS AND COPILOTS AUXILIARY EQUIPMENT (LIGHTS ONLY)

DETAILED PARTS LIST
33-05-68
PAGE 0

33-05-68

NOV 21/01

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF	UNITS
				FROM TO	PER ASSY
R R R R R R R R R R	68	65-63209-1	PANEL INSTL, PILOTS AUXILIARY EQUIPMENT (LH) (LIGHTS. ONLY) (SEE 25-1, FIG. 2J, ITEM 35, AND 25-5, FIG. 14B, ITEM 1)	5199	RF
		65-63209-1	PANEL INSTL, PILOTS AUXILIARY EQUIPMENT (LH) (LIGHTS. ONLY) (DELETED BY RAF MOD 7211-019-4) (SEE 25-1, FIG. 14B, ITEM 1)	0150	RF
		391-34-50-73971-002	PANEL INSTL, PILOTS AUXILIARY EQUIPMENT (RH) (LIGHTS. ONLY) (VZ0031) (65-63209-1 MODIFIED BY MOD 7211.019-225 AND 7211.019-4) (SEE 25-5, FIG. 14E, ITEM 1)	0150	RF
		391-34-50-73971-001	PANEL INSTL, PILOTS AUXILIARY EQUIPMENT (LH) (LIGHTS. ONLY) (VZ0031) (65-63209-1 MODIFIED BY MOD 7211.019-225 AND 7211.019-4) (SEE 25-5, FIG. 14B, ITEM 1)	0150	RF
		65-63209-2	PANEL INSTL, COPILOTS AUXILIARY EQUIPMENT (RH) (LIGHTS ONLY) (SEE 25-1, FIG. 2J, ITEM 36, AND 25-5, FIG. 14E, ITEM 1)	5199	RF
		65-63209-2	PANEL INSTL, COPILOTS AUXILIARY EQUIPMENT (RH) (LIGHTS ONLY) (DELETED BY RAF MOD 7211.019-4) (SEE 25-5, FIG. 14E, ITEM 1)	0150	RF
		65-63209-11	. PANEL ASSY, (LIGHTS ONLY) (LH ONLY)		RF
		65-63209-12	. PANEL ASSY, (LIGHTS ONLY) (RH ONLY)		RF
		MS24523-23	. . SWITCH.		1
		MS24523-23	. . SWITCH.		1
R	2	20475-23-1495	. . LIGHTING UNIT, (V72914)		1
R	3		. . AIR CONDITIONING, (SEE 21-5, FIG. 71)		
R	5		. . INSTRUMENTS, (SEE 31-5, FIG. 9)		
R			. PANEL ASSY, EXTENSION AUDIO SELECT (VZ0031)	0150	RF
R	10	391-23-50-73995-001	(ADDED BY RAF MOD 7211.019-4) (SEE 23-02, FIG. 62C FOR BREAKDOWN) . FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/01

33-05-68

DETAILED PARTS LIST
33-05-68
PAGE 1


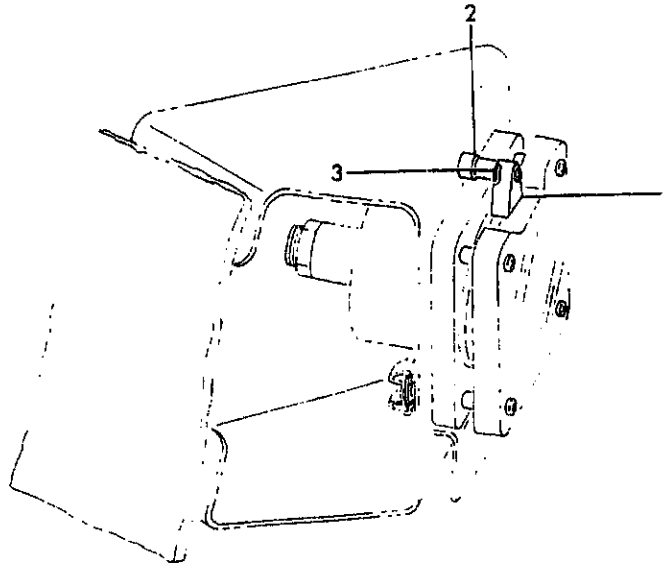


FIGURE 74. GAUGE INSTL, EMERGENCY BRAKE PRESSURE (LIGHTS ONLY)

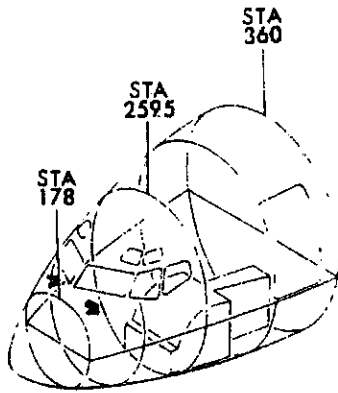

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
74		65-8708-6	GAUGE INSTL, EMERGENCY BRAKE PRESSURE (LIGHTS ONLY) . . (SEE 25-5, FIG. 14E, ITEM 6 AND 25-5, FIG. 14H, ITEM 2)								RF
R R	1	5602MSPBC28	. BOLTITE, (V22973)							5199	1
	1	5408MBC28	. BOLTITE, (V07204)							0150	1
	2	NAS43D04-12	. SPACER, (V07204)								1
			. FOR REFERENCE TO OTHER GAUGE DETAILS, SEE NHA								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

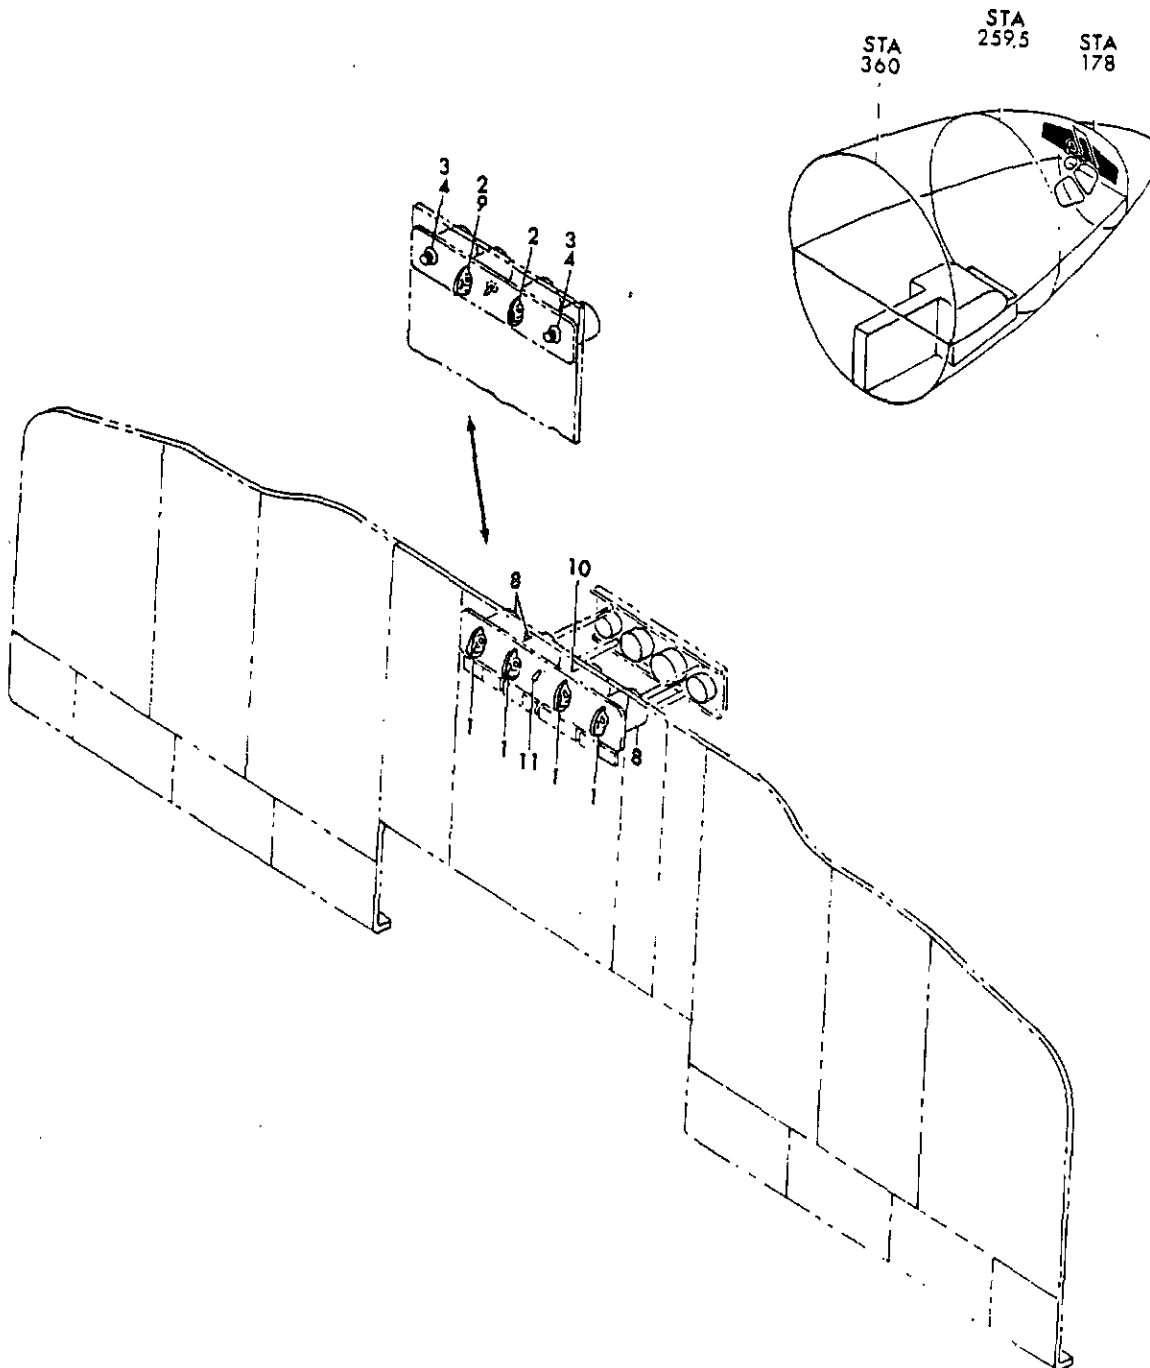


FIGURE 81. MODULE INSTL, CAPTAINS AND FIRST OFFICERS INSTRUMENT PANELS (LIGHTS ONLY)

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
81	65C10900-1	MODULE INSTL, CAPTAINS AND FIRST OFFICERS (INSTRUMENT PANELS) (VARIABLE DWG; 65C10900-5003) (LIGHTS ONLY) (SEE 25-1, FIG. 2E, ITEM 107A)	5199	RF
1	BACK20E2	. KNDB ASSY	5199	4
8	65C10905-1	. MODULE ASSY, P9-2 (LIGHTS ONLY)	5199	RF
10	6430A	. . POWERSTAT, (V95266)	5199	3
11	16423	. . POWERSTAT, (V95266)	5199	1
	MS24523-23	. . SWITCH.	5199	1
		. FOR REFERENCE TO OTHER MODULE DETAILS, SEE NHA. . . .	5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 06
LIGHTPLATES


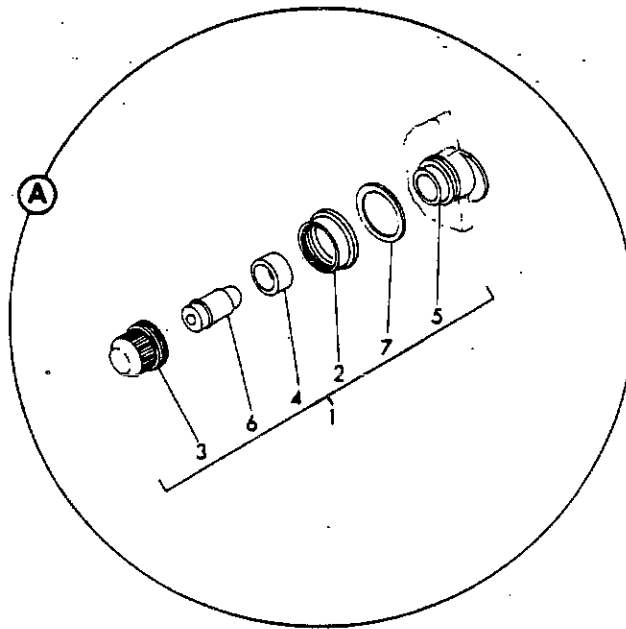


FIGURE 1. LIGHTPLATE ASSY, TYPICAL (AIRMARK PLASTICS CORP.)

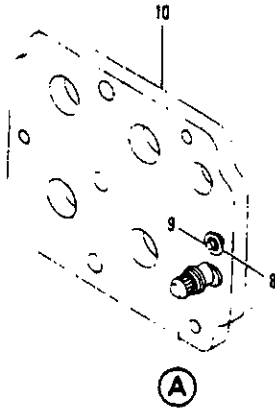

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1		1 2 3 4 5 6 7 LIGHTPLATE ASSY, TYPICAL (AIRMARK PLASTICS CORP) (SEE . APPLICABLE CHAPTER FOR NHA)		RF
1	B8900C12-327	. LIGHT ASSY, (V72914).		1
2	A8898B1	. RING, RETAINER (V72914)		1
3	A9305-1	. CAP, (V72914)		1
4	A5746A	. RETAINER, (V72914).		1
5	B9304-12	. FILTER, (V72914).		1
6	MS25237-327	. BULB.		1
7	WASHER	. WASHER, FISHPAPER .474 ID X .590 OD X .010 THICK.		AR
8	52031	. SLEEVE, MALE GROUND (V04211).		1
9	52032	. TERMINAL, MALE PIN (V04211)		1
10	LIGHTPLATE	. LIGHTPLATE, PRINTED CIRCUIT		RF

MISSING ITEM NUMBERS ARE NOT APPLICABLE


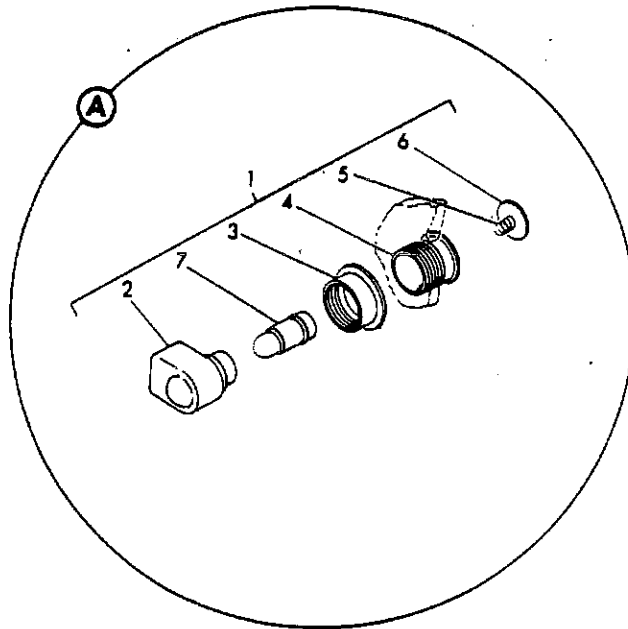


FIGURE 2. LIGHTPLATE ASSY, TYPICAL (AIRMARK PLASTICS CORP.)

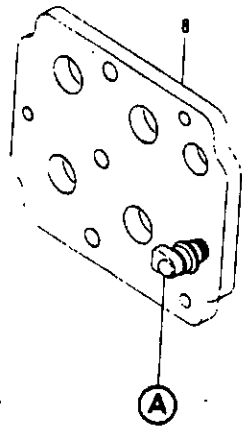

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2			LIGHTPLATE ASSY, TYPICAL (AIRMARK PLASTICS CORP) (SEE . APPLICABLE CHAPTER FOR NHA)		RF
1	8403M		. BOLTITE ASSY, (GLAR-BAN CORP).		1
2	5602M		. CAP, (GLAR-BAN CORP).		1
3	8403-4		. NUT, (GLAR-BAN CORP).		1
4	8403-1		. BASE, (GLAR-BAN CORP).		1
5	8403-3		. SPRING, (GLAR-BAN CORP).		1
6	8403-2		. PLATE, BASE (GLAR-BAN CORP).		1
7	MS25237-327		. BULB.		1
8	LIGHTPLATE		. LIGHTPLATE, PRINTED CIRCUIT		RF
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

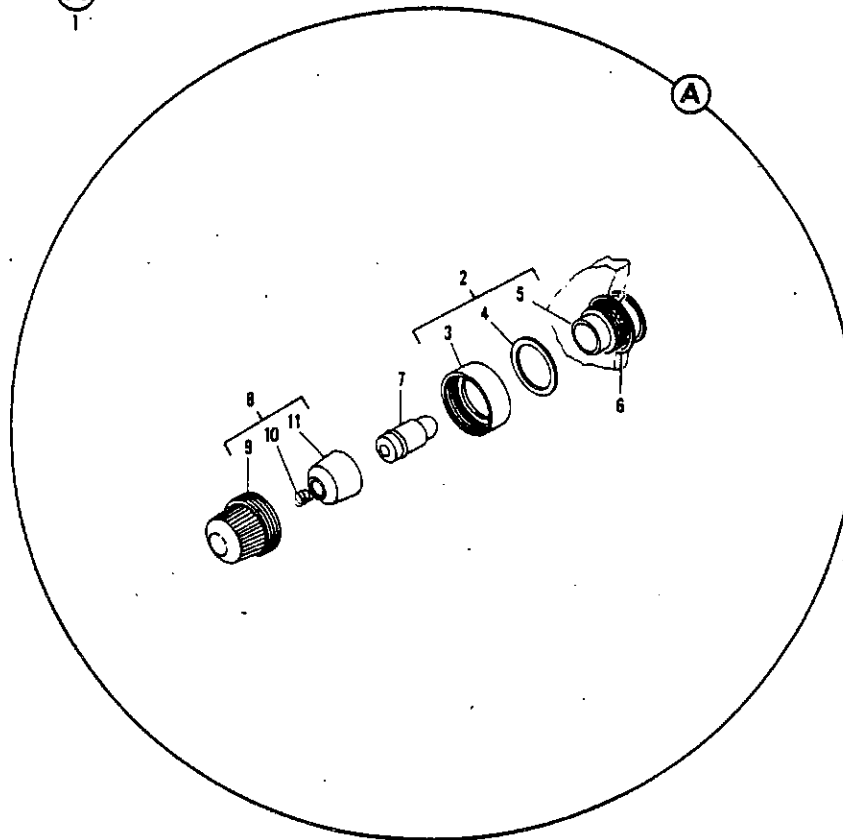
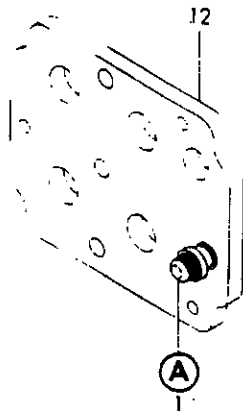


FIGURE 3: LIGHTPLATE ASSY, TYPICAL (COASTAL MFG. CORP.)

BOEING *707* Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3			LIGHTPLATE ASSY, TYPICAL (COASTAL MFG CORP) (SEE. . . . APPLICABLE CHAPTER FOR NHA)		RF
1	103		. LIGHT ASSY, (V04211).		1
2	103-1		. . SOCKET ASSY, (V04211)		1
3	52019		. . . NUT, (V04211)		1
4	52003		. . . SPRING, (V04211).		1
5	52002		. . . SOCKET, FILTER (V04211)		1
6	9C10003		. . . CONNECTOR, (V83B35)		1
7	MS25237-327		. . . BULB.		1
8	103-3		. . . CAP ASSY, (V04211).		1
9	52016		. . . CAP, (V04211)		1
10	52008		. . . SPRING, (V04211).		1
11	52018		. . . SLEEVE, (V04211).		1
12	LIGHTPLATE		. LIGHTPLATE, PRINTED CIRCUIT		RF
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

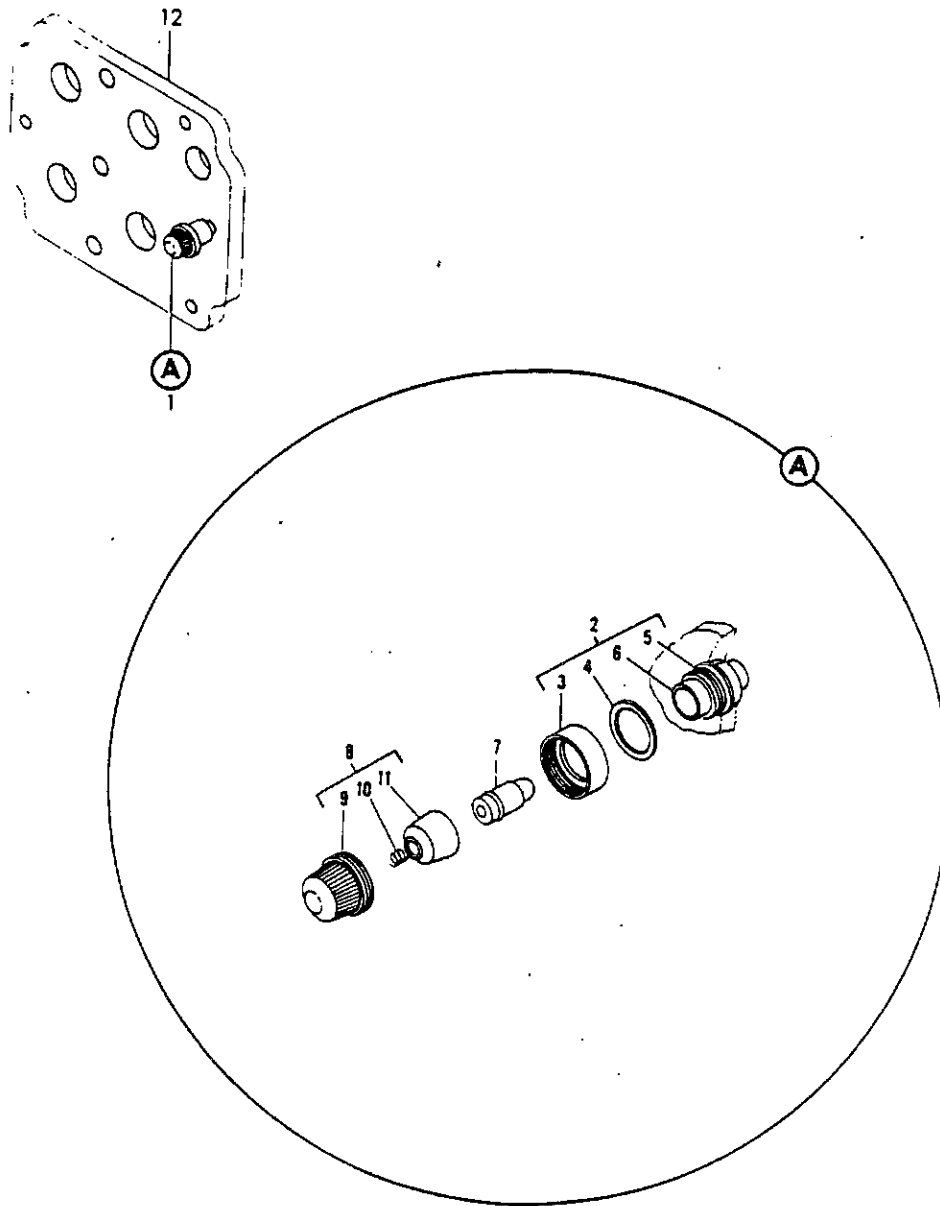


FIGURE 4. LIGHTPLATE ASSY, TYPICAL (COASTAL MFG. CORP.)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
4			LIGHTPLATE ASSY, TYPICAL (COASTAL MFG CORP) (SEE. . . . APPLICABLE CHAPTER FOR NHA)		RF
1	103HG		. LIGHT ASSY, (V04211) (FOR REPLACEMENT ORDER 115HG . . (V04211))		1
1	115HG		. LIGHT ASSY, (V04211) (REPLACEMENT FOR 103HG).		1
2	115-7		. . . SOCKET ASSY, (V04211)		1
3	52019		. . . NUT, (V04211)		1
4	52003		. . . SPRING, (V04211).		1
5	52015		. . . SLEEVE, GROUND (V04211) (USED ON 103HG) (FOR. . . REPLACEMENT ORDER 52038 (V04211))		1
5	52038		. . . SLEEVE, GROUND (V04211) (USED ON 115HG) (REPLACEMENT FOR 52015)		1
6	52002-1		. . . SOCKET, FILTER (V04211)		1
7	MS25237-927		. . . BULB.		1
8	103-3		. . . CAP ASSY, (V04211).		1
9	52016		. . . CAP, (V04211)		1
10	52008		. . . SPRING, (V04211).		1
11	52018		. . . SLEEVE, (V04211).		1
12	LIGHTPLATE		. LIGHTPLATE, PRINTED CIRCUIT		RF
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

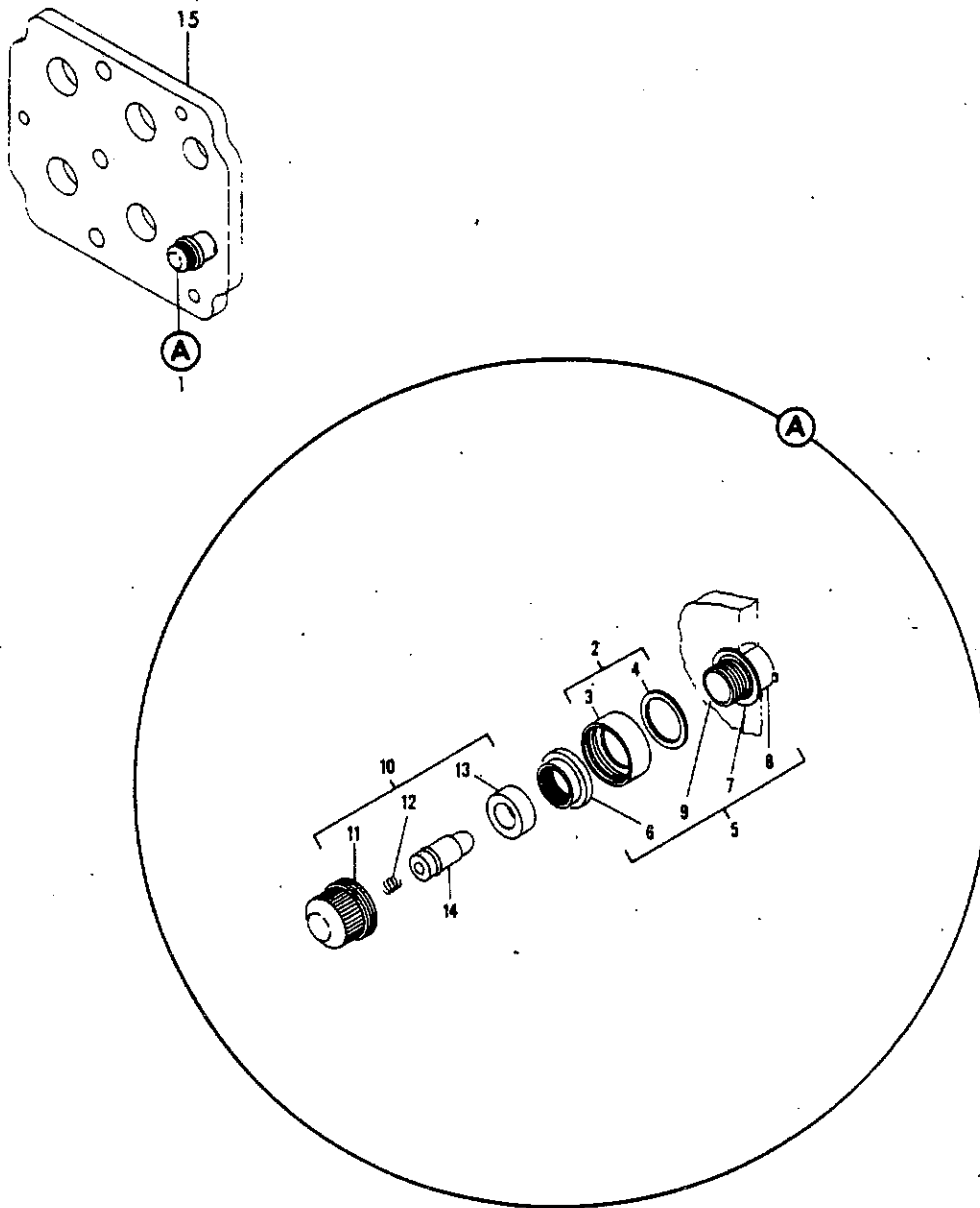


FIGURE 5. LIGHTPLATE ASSY, TYPICAL (US RADIUM CORP.)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5			LIGHTPLATE ASSY, TYPICAL (U S RADIUM CORP) (SEE APPLICABLE CHAPTER FOR NHA)		RF
1	459		. LIGHT ASSY, (V83835)		1
2	B459-2		. . . BASE ASSY, (V83835)		1
3	9C10007		. . . NUT, RING (V83835)		1
4	9C1008		. . . SPRING, BASE		1
5	B459-1		. . . FILTER ASSY, (V83835)		1
6	9C10009		. . . NUT, RETAINER (V83835)		1
7	9C10003		. . . CONNECTOR, GROUND (V83835)		1
8	9C10001		. . . CONNECTOR, FI		1
9	9C10002		. . . FILTER, (V83835)		1
10	C459-3		. . . CAP ASSY, (V83835)		1
11	9C10004		. . . CAP, (V83835)		1
12	9C10005		. . . SPRING, (V83835)		1
13	9C10006		. . . RETAINER, (V83835)		1
14	MS25237-327		. . . BULB		1
15	LIGHTPLATE		. LIGHTPLATE, PRINTED CIRCUIT		RF
MISSING ITEM NUMBERS ARE NOT APPLICABLE					


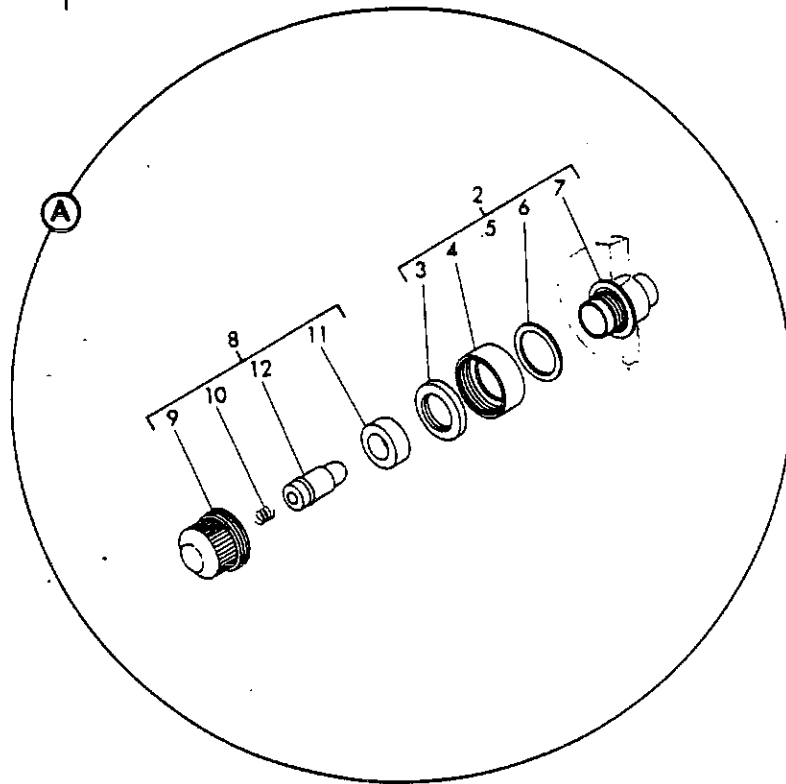




FIGURE 6. LIGHTPLATE ASSY, TYPICAL (US RADIUM CORP.)

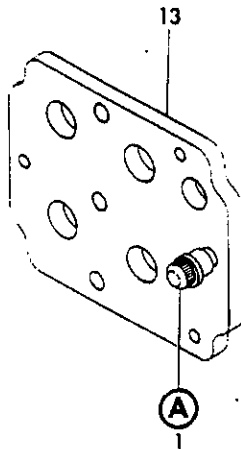

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
6			LIGHTPLATE ASSY, TYPICAL (UNITED STATES RADIUM CORP). . . (SEE APPLICABLE CHAPTER FOR NHA)		RF
1	659		. LIGHT ASSY, (V83835).		1
2	8659-2		. . . BASE ASSY, (V83		1
3	9C10007		. . . NUT, RING (V83835).		1
4	9C10008		. . . SPRING, BASE CONTACT (V83835)		1
5	9C10010		. . . NUT, RETAINER (V83835).		1
6	52038		. . . CONNECTOR, GR		1
7	52002-1		. . . SOCKET, LIGHT (V04211).		1
8	C459-3		. . . CAP ASSY, (V83835).		1
9	9C10004		. . . CAP, (V83835)		1
10	9C10005		. . . SPRING, (V838		1
11	9C10006		. . . RETAINER, (V83835).		1
12	MS25237-327		. . . BULB.		1
13	LIGHTPLATE		. LIGHTPLATE, PRINTED CIRCUIT		RF
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING
707
PARTS CATALOG (MAINTENANCE)

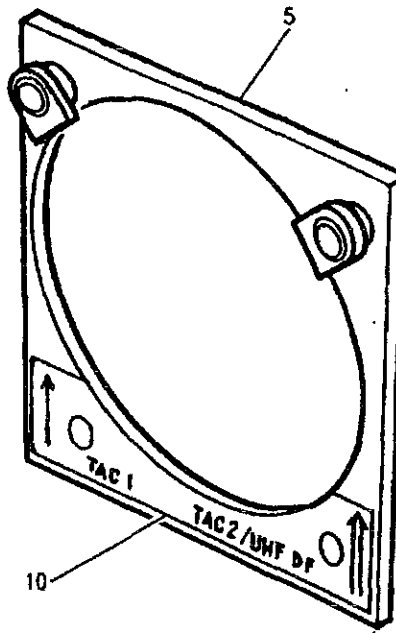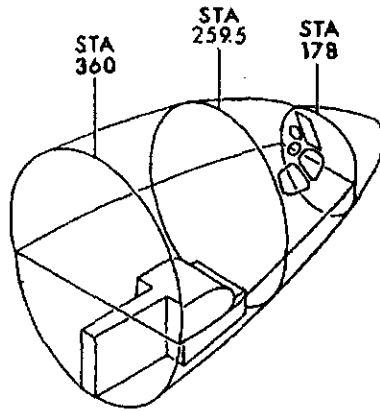

A 3306007 REV 272

LIGHTS- LIGHTPLATES
FIGURE 7. SHROUD ASSY, LIGHTING RM1

DETAILED PARTS LIST
33-06-7
PAGE 0

33-06-7

NOV 21/01

BOEING
707
PARTS CATALOG (MAINTENANCE)

R R R R	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
	7		SHROUD ASSY, LIGHTING RMI							0150	
		391-33-10-73982-001	SHROUD ASSY, LIGHTING RMI (VZ0031) (ADDED BY RAF MOD.							0150	1
			7211.019-226)								
	10	391-11-00-73987-109	. DECAL, (PART OF) (VZ0031) (SEE 11-06-18A)							0150	AR
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

RAF
NOV 21/01

33-06-7

DETAILED PARTS LIST
33-06-7
PAGE 1

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 07
AIR REFUELING SYSTEM



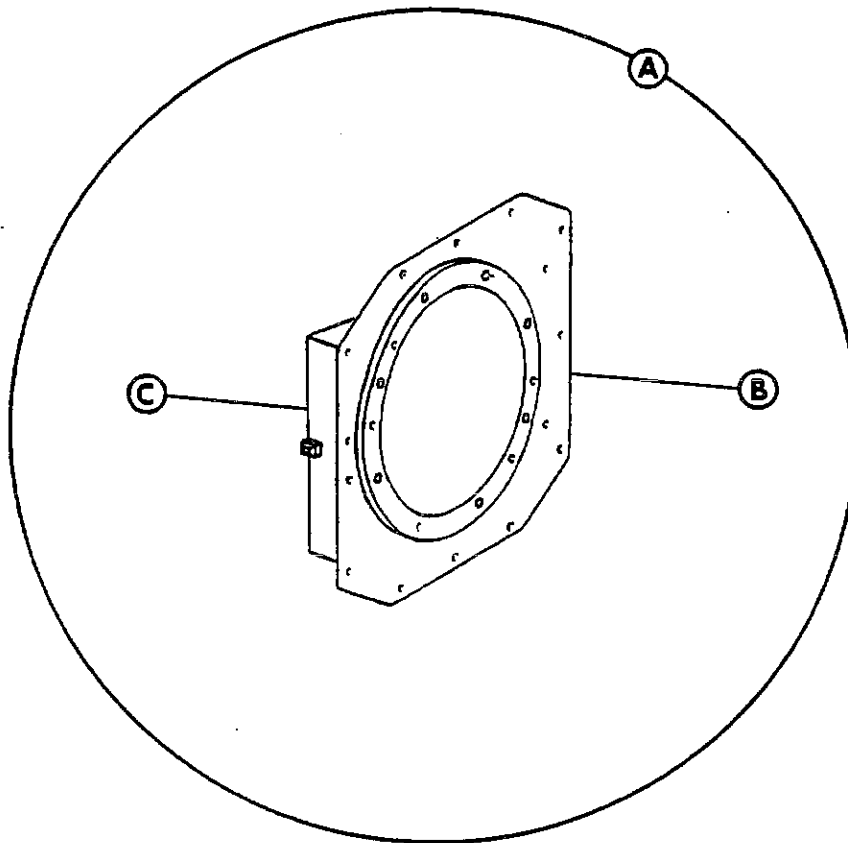


FIGURE 3A. INFRA-RED LIGHT INSTL, (A/R ONLY) (SHEET 1)

A 3307003A SHY 1 REV 265

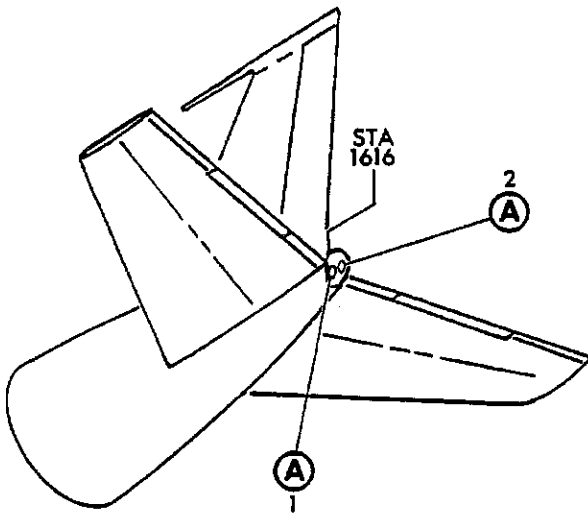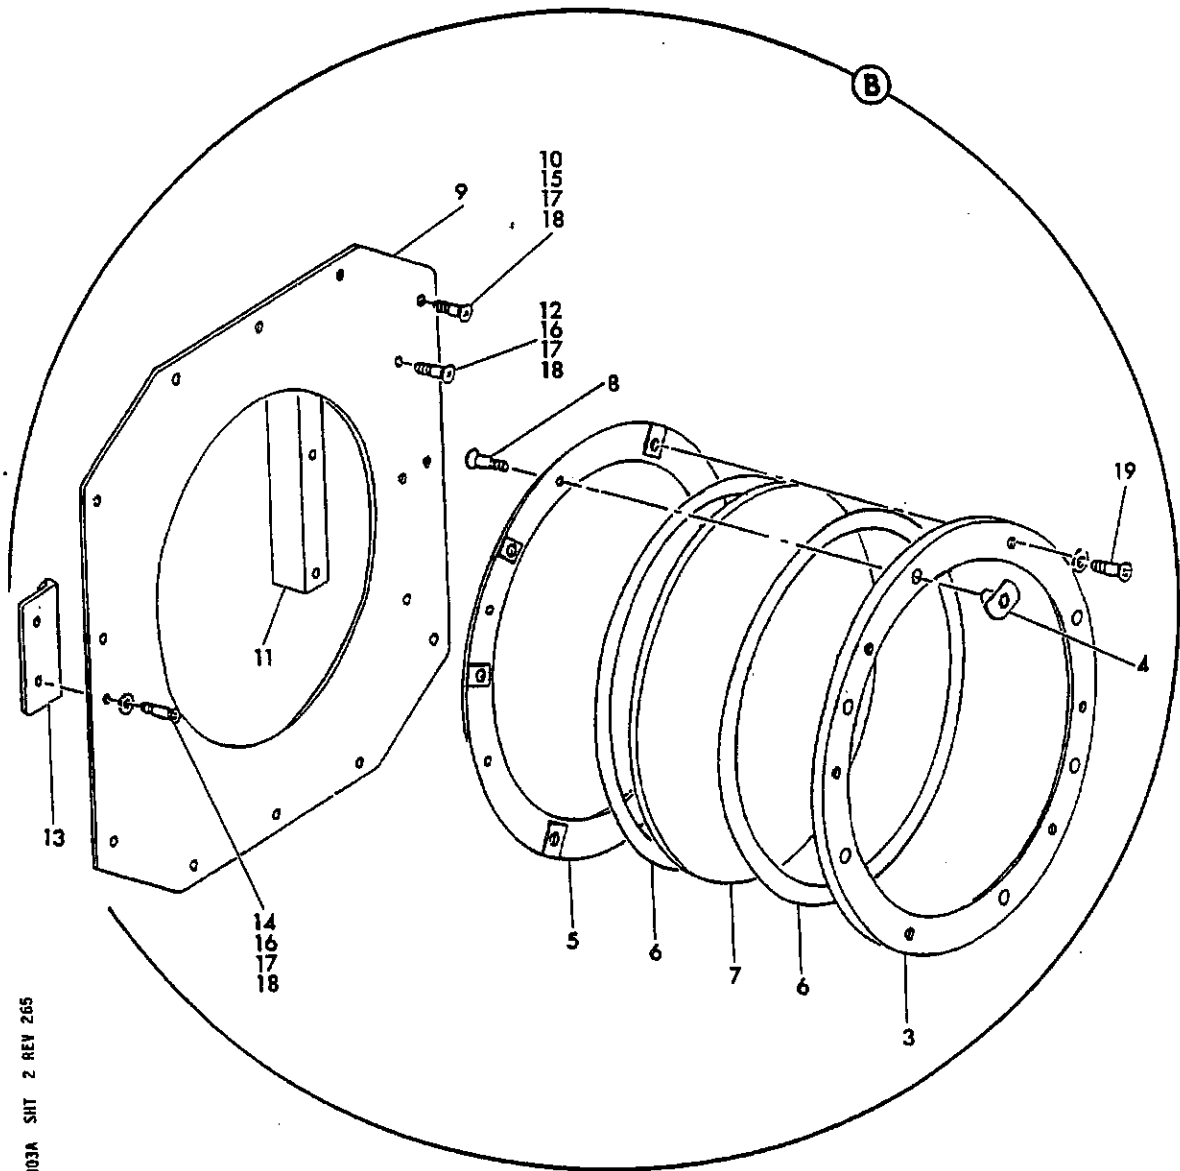

A 3307003A SHIT 2 REV 265

FIGURE 3A. INFRA-RED LIGHT INSTL. (A/R ONLY) (SHEET 2)

NOV 21/94

33-07-3A

DETAILED PARTS LIST
33-07-3A
PAGE 1

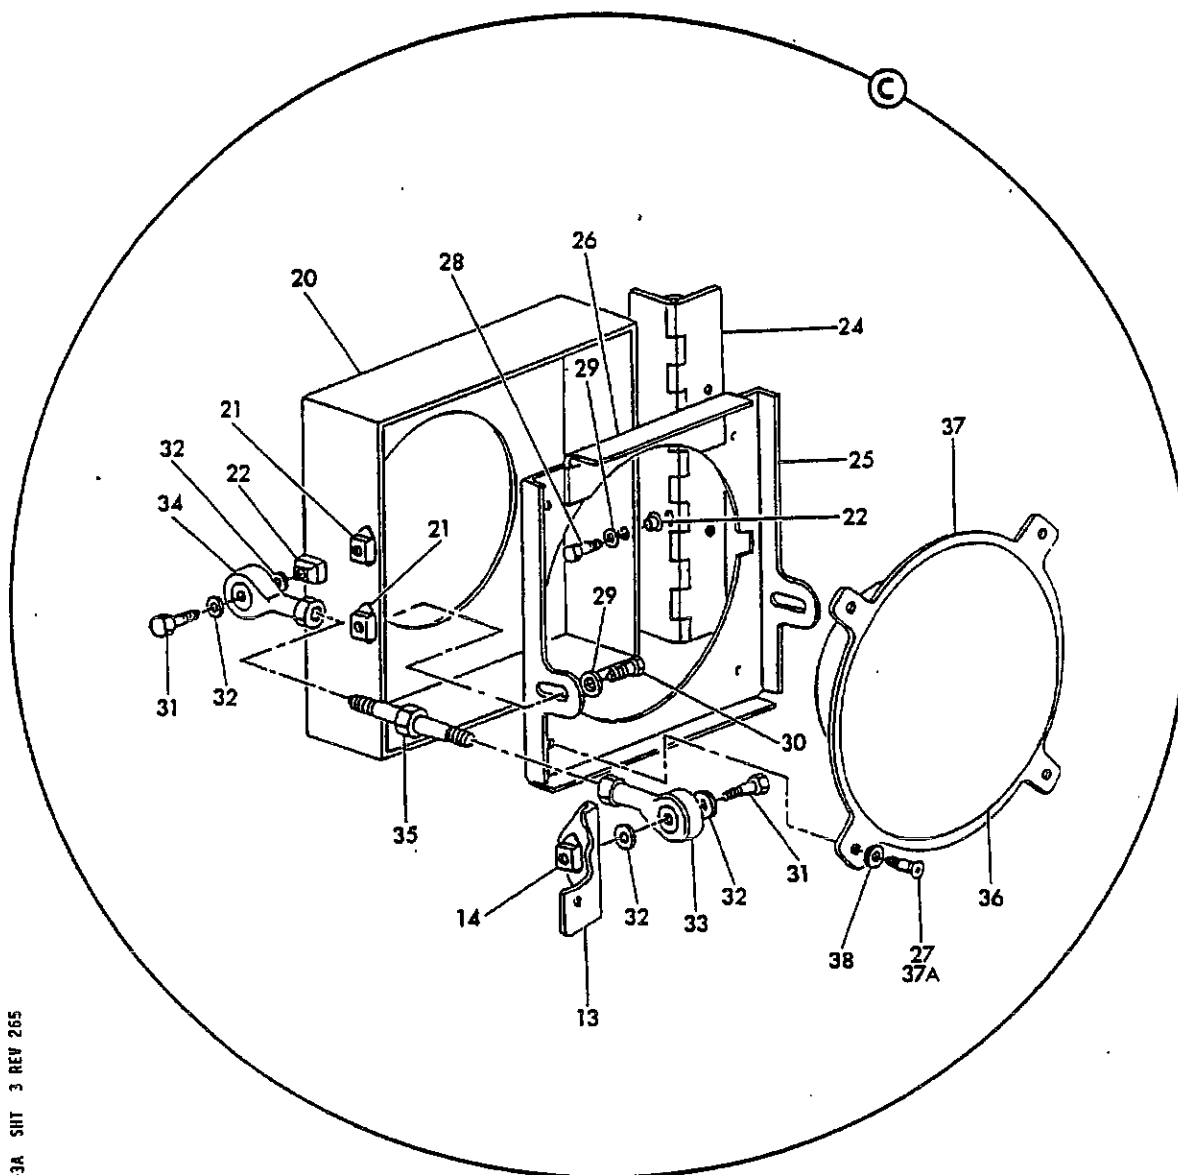


FIGURE 3A. INFRA-RED LIGHT INSTL, (A/R ONLY) (SHEET 3)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 3A 1	361-33-40-73194-001	INFRA-RED LIGHT INSTL, FWD STA. 1623 (LH) (A/R ONLY). (VS2500) (ADDED BY RAF 7211.019-225) (SEE 24-3, FIG. 4, ITEM 65)	0150	RF
R 1	361-33-40-73194-002	INFRA-RED LIGHT INSTL, FWD STA. 1623 (RH) (A/R ONLY). (VS2500) (ADDED BY RAF 7211.019-225) (SEE 24-3, FIG. 4, ITEM 65)	0150	RF
R 2	361-33-40-73194-003	INFRA-RED LIGHT INSTL, AFT STA. 1633 (LH) (A/R ONLY). (VS2500) (ADDED BY RAF 7211.019-225) (SEE 24-3, FIG. 4, ITEM 66)	0150	RF
R 2	361-33-40-73194-004	INFRA-RED LIGHT INSTL, AFT STA. 1633 (RH) (A/R ONLY). (VS2500) (ADDED BY RAF 7211.019-225) (SEE 24-3, FIG. 4, ITEM 66)	0150	RF
R 3	361-33-40-73196-121	. FILTER HOLDER PLATE ASSY, (VS2500).	0150	RF
R 4	361-33-40-73196-103	. . PLATE, (VS2500)	0150	4
R 4	361-33-40-73196-119	. . INSERT, (VS2500).	0150	24
R 5	361-33-40-73196-109	. FILTER HOLDER PLATE, (VS2500)	0150	4
R 6	361-33-40-73196-111	. WASHER RUBBER, (VS2500)	0150	8
R 7	RG-850	. FILTER.	0150	4
R 8	MS24693-226	. SCREW	0150	24
R 9	361-33-40-73196-105	. REINFORCEMENT ASSY, (VS2500).	0150	RF
R 9	361-33-40-73196-107	. . PLATE, (VS2500)	0150	4
R 10	MS21059L3	. . NUT PLATE	0150	68
R 11	361-31-40-73193-103	. SUPPORT ASSY, (VS2500).	0150	RF
R 12	361-31-40-73193-115	. . SUPPORT, (VS2500)	0150	4
R 12	MS21059L3	. . NUT PLATE	0150	12
R 13	361-33-40-73196-115	. . ANGLE, (VS2500)	0150	4
R 14	361-33-40-73196-113	. SUPPORT ANGLE ASSY, (VS2500).	0150	RF
R 14	MS21059L3	. . NUT PLATE	0150	12
R 15	MS24694-56	. SCREW	0150	44
R 16	MS24694-58	. SCREW	0150	16
R 17	S102D10-08	. SLEEVE.	0150	60
R 18	P102C10-0	. PLUG.	0150	60
R 19	MS24693-271	. SCREW	0150	6
R 20	361-33-40-73193-101	. BASE LAMP ASSY, (VS2500).	0150	RF
R 21	361-33-40-73193-113	. . BASE LAMP, (VS2500)	0150	4
R 22	MS21059L3	. . NUT PLATE	0150	8
R 22	MS21209F-10PL	. . INSERT.	0150	12
R 24	361-33-40-73193-119	. HINGE, (VS2500)	0150	4
R 25	361-33-40-73194-117	. . LAMP HOLDER, (VS2500)	0150	4
R 25	361-33-40-73194-107	. LAMP HOLDER ASSY, (VS2500).	0150	RF
R 26	361-33-40-73194-111	. . HINGE, (VS2500)	0150	4
R 27	MS21059L08	. . NUT PLATE	0150	16
R 28	AN3-2	. BOLT.	0150	4
R 29	AN960JD10	. WASHER.	0150	8
R 30	AN3-4	. BOLT.	0150	4
R 31	NAS6203-7	. BOLT.	0150	8
R 32	AN960-10	. WASHER.	0150	16
R 33	MS21153-4	. BEARING	0150	4
R 34	MS21153-1	. BEARING	0150	4
R 35	361-33-40-73196-117	. ADJUSTMENT SCREW, (VS2500).	0150	4
R 36	Q4597	. LAMP.	0150	4
R 37	361-33-40-73193-105	. LAMP RETAINER, (VS2500)	0150	4
R 37A	MS35206-248	. SCREW	0150	16
R 38	AN960J08	. WASHER.	0150	16

MISSING ITEM NUMBERS ARE NOT APPLICABLE


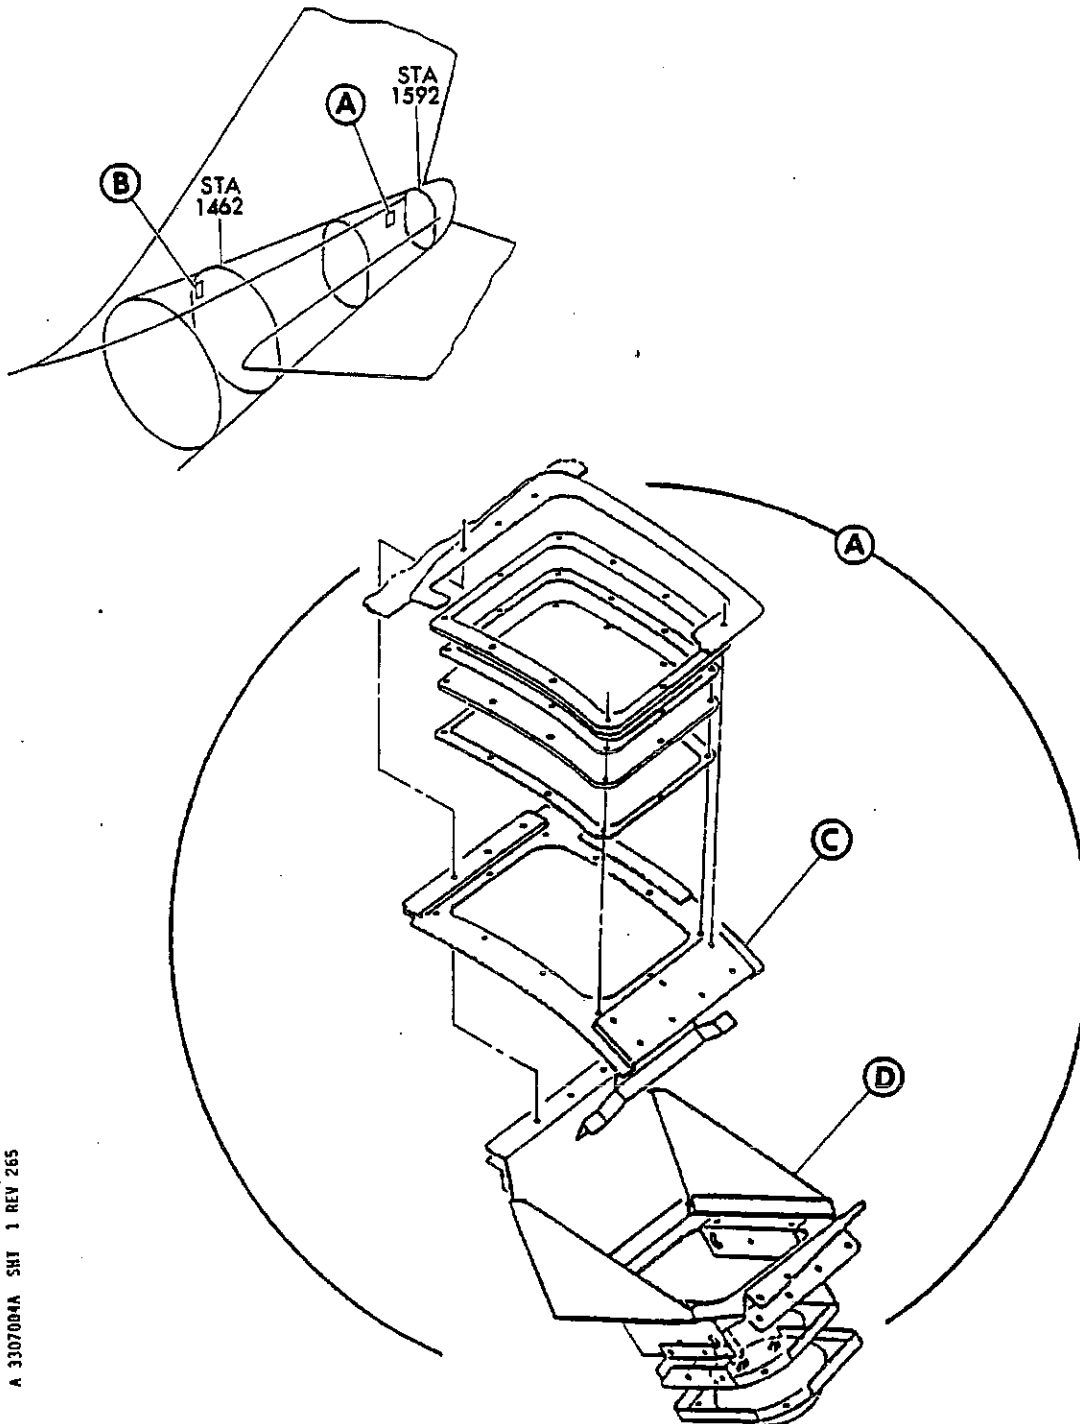


FIGURE 4A. EXTERIOR VERT. STB LIGHT INSTL (SHEET 1)

A 3307004A SHT 1 REV 265

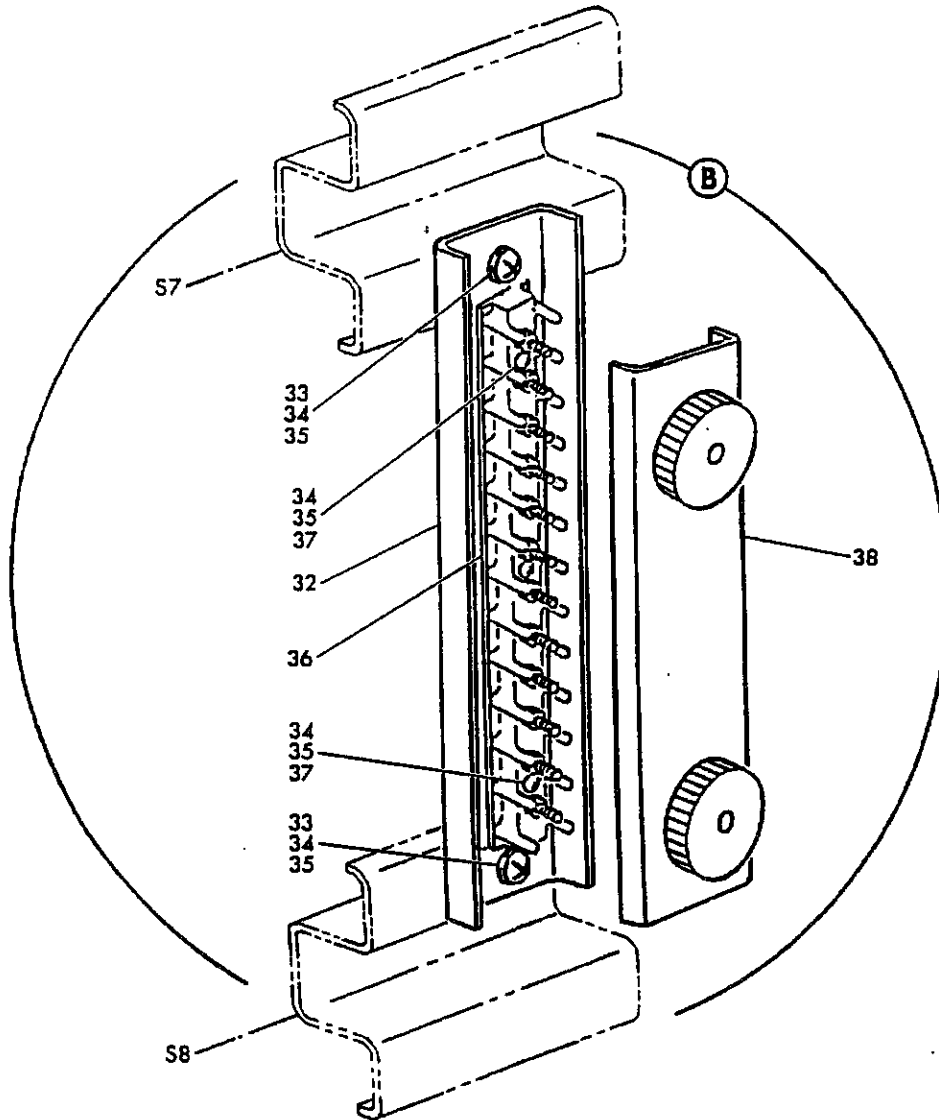

A 3307004A SHT 2 REV 265

FIGURE 4A. EXTERIOR VERT. STB LIGHT INSTL (SHEET 2)

NOV 21/94

33-07-4A

DETAILED PARTS LIST
33-07-4A
PAGE 1


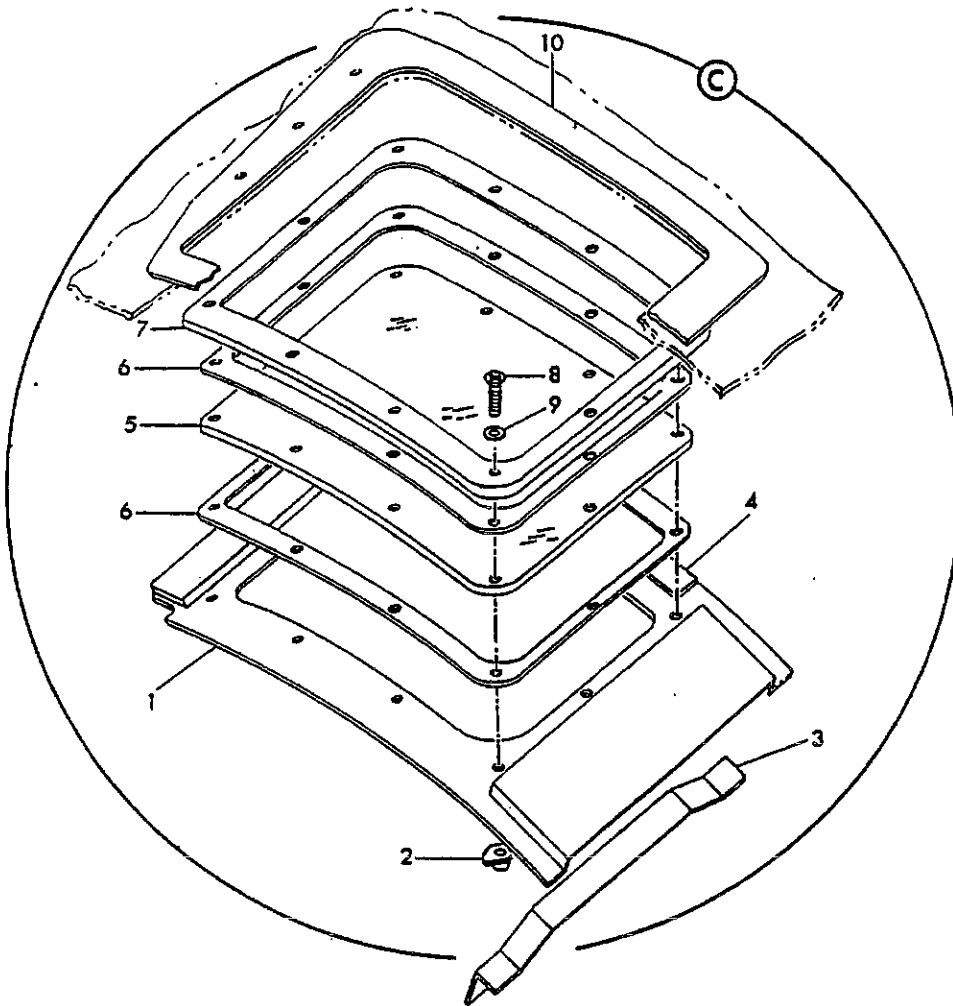


FIGURE 4A. EXTERIOR VERT. STB LIGHT INSTL (SHEET 3)

A 3107004A SHT 3 REV 265

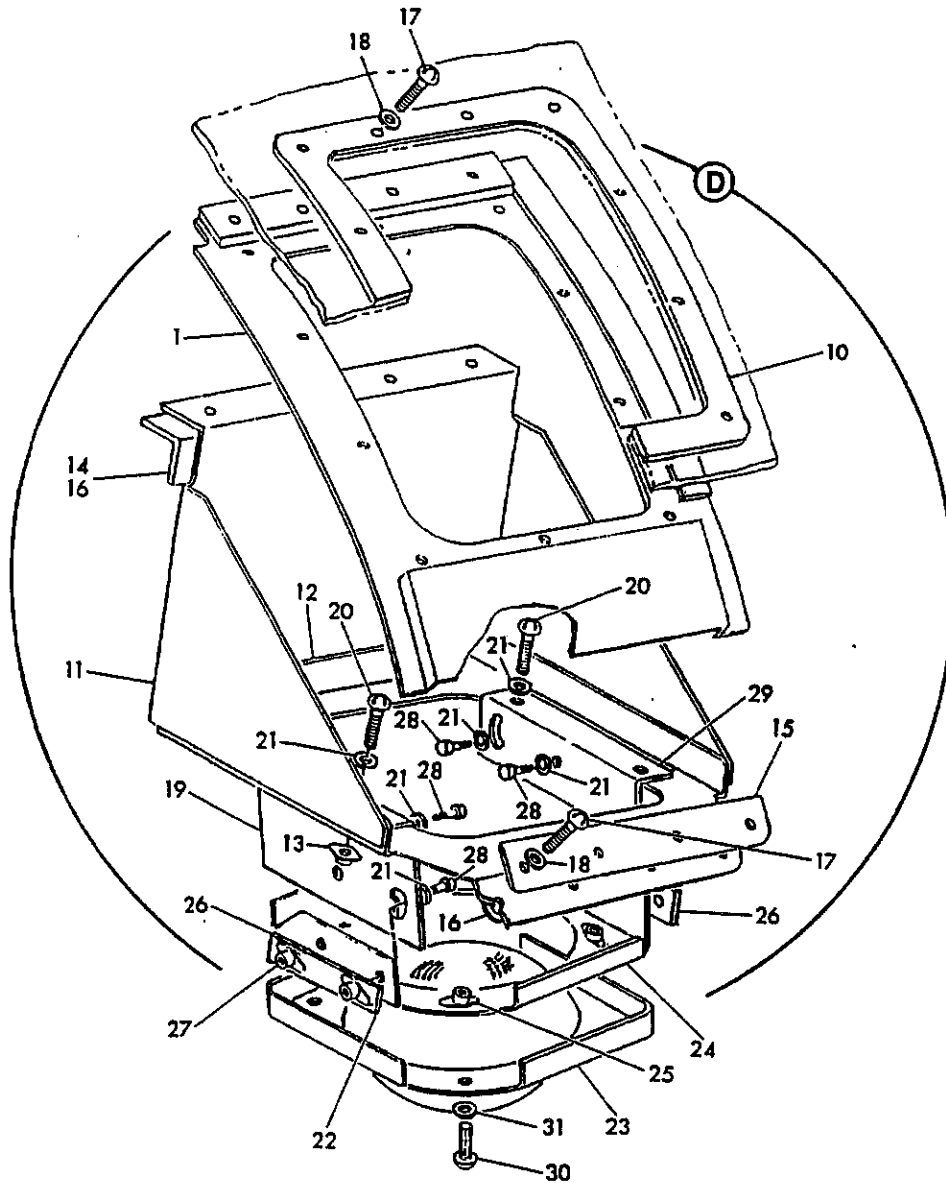

A 3307004A SHIT 4 REV 265

FIGURE 4A. EXTERIOR VERT. STB LIGHT INSTL (SHEET 4)

NOV 21/94

33-07-4A

DETAILED PARTS LIST
33-07-4A
PAGE 3

MISSING ITEM NUMBERS ARE NOT APPLICABLE

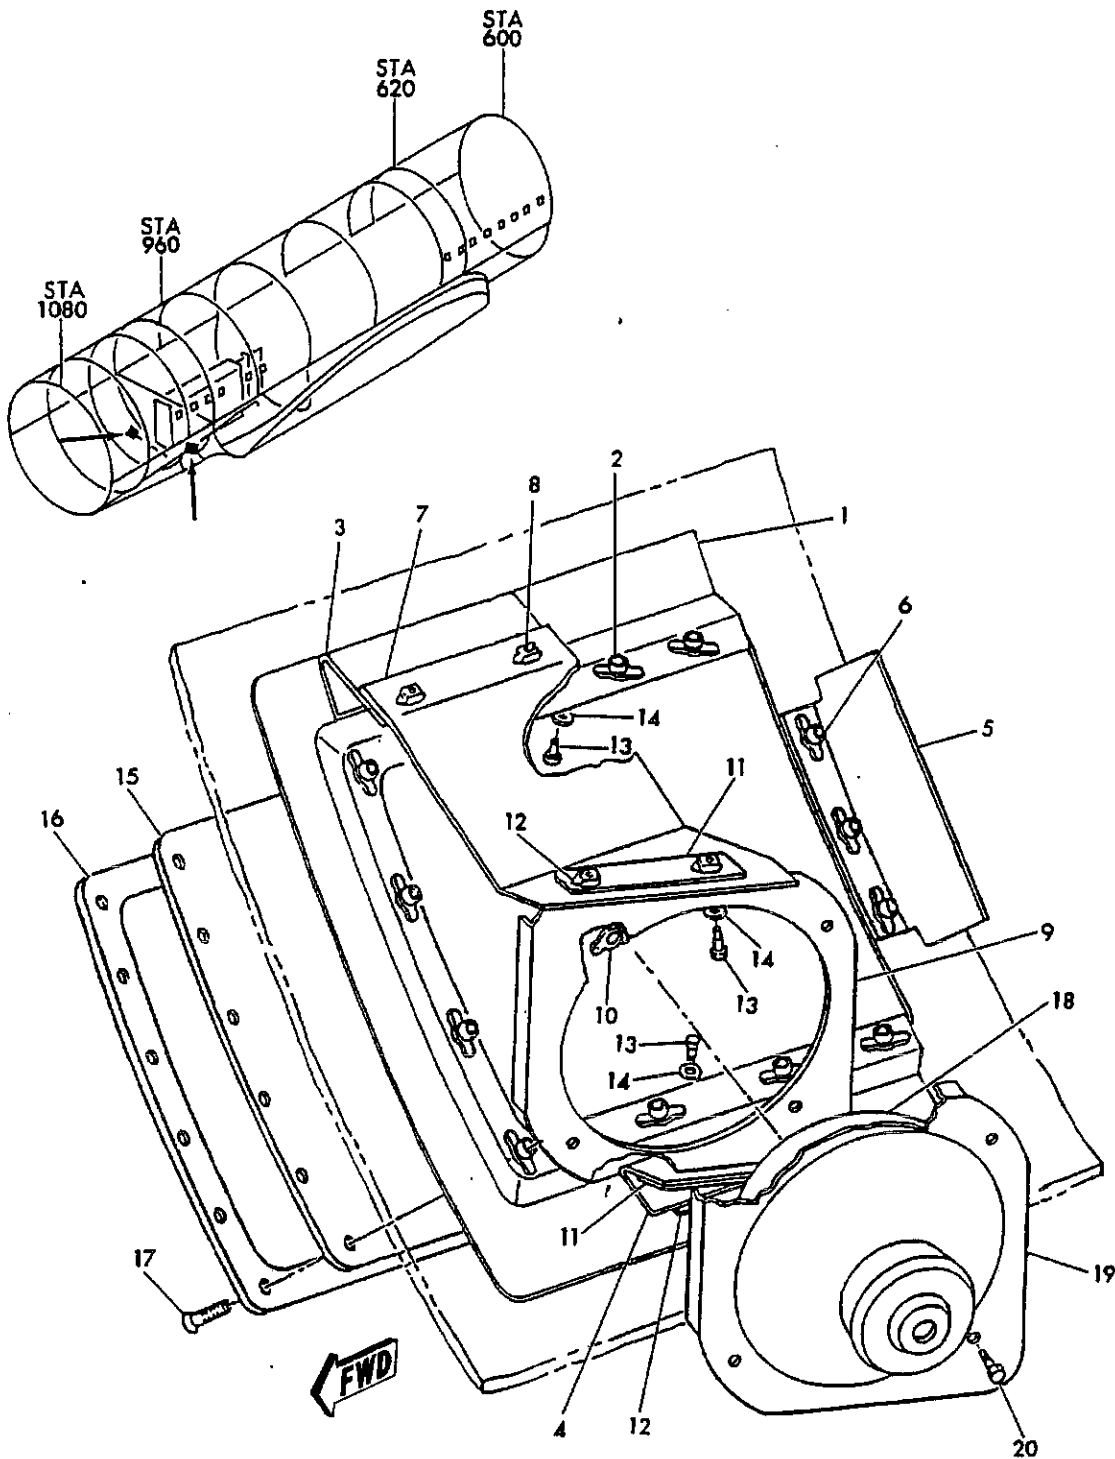



FIGURE 5A. EXTERIOR WING LIGHT INSTL



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R 5A	391-33-00-72899-005	EXTERIOR WING LIGHT INSTL, L.H. (VS2500) (ADDED BY. . .							0150	RF
R		7211-019-225) (SEE 24-03-3, ITEM 71)								
R	391-33-00-72899-006	EXTERIOR WING LIGHT INSTL, R.H. (VS2500) (ADDED BY. . .							0150	RF
R		7211-019-225) (SEE 24-03-3, ITEM 71)								
R	391-33-00-72898-141	. RETAINER ASSY, (FOR L.H. ONLY) (VS2500)							0150	RF
R	391-33-00-72898-142	. RETAINER ASSY, (FOR R.H. ONLY) (VS2500)							0150	RF
R	1 391-33-00-72898-145	. . RETAINER ASSY, (FOR L.H. ONLY) (VS2500)							0150	1
R	1 391-33-00-72898-146	. . RETAINER ASSY, (FOR R.H. ONLY) (VS2500)							0150	1
R	2 MS21069L06	. NUT PLATE							0150	24
R	3 391-33-00-72898-159	. UPPER SUPPORT, (VS2500)							0150	2
R	4 391-33-00-72898-133	. LOWER SUPPORT, (FOR L.H. ONLY) (VS2500)							0150	1
R	4 391-33-00-72898-134	. LOWER SUPPORT, (FOR R.H. ONLY) (VS2500)							0150	1
R	5 391-33-00-72898-143	. SUPPORT ASSY, (VS2500)							0150	RF
R	6 391-33-00-72898-147	. . SUPPORT, (VS2500)							0150	2
R	6 MS21069L06	. NUT PLATE							0150	6
R	391-33-00-72898-161	. UPPER SUPPORT ASSY, (FOR L.H. ONLY) (VS2500)							0150	RF
R	391-33-00-72898-162	. UPPER SUPPORT ASSY, (FOR R.H. ONLY) (VS2500)							0150	RF
R	7 391-33-00-72898-157	. UPPER SUPPORT, (FOR L.H. ONLY) (VS2500)							0150	1
R	7 391-33-00-72898-158	. UPPER SUPPORT, (FOR R.H. ONLY) (VS2500)							0150	1
R	8 MS21069-3	. NUT PLATE							0150	1
R	391-33-00-72898-131	. HOLDER ASSY, (FOR L.H. ONLY) (VS2500)							0150	RF
R	391-33-00-72898-132	. HOLDER ASSY, (FOR R.H. ONLY) (VS2500)							0150	RF
R	9 391-33-00-72898-139	. . LAMP HOLDER, (FOR L.H. ONLY) (VS2500)							0150	1
R	9 391-33-00-72898-140	. . LAMP HOLDER, (FOR R.H. ONLY) (VS2500)							0150	1
R	10 MS21069L06	. NUT PLATE							0150	8
R	391-33-00-72898-149	. PLATE ASSY, (VS2500)							0150	RF
R	11 391-33-00-72898-151	. . PLATE, (VS2500)							0150	4
R	12 MS21069-3	. NUT PLATE							0150	8
R	13 NAS6603-3	. SCREW							0150	12
R	14 AN960-10	. WASHER							0150	12
R	15 391-33-00-72901-101	. WINDOW, (VS2500)							0150	2
R	16 391-33-00-72898-113	. WINDOW HOLDER, (VS2500)							0150	2
R	17 NAS514P632-10	. SCREW							0150	30
R	18 4627PAR36GE	. LAMP							0150	2
R	19 391-33-00-72898-137	. RETAINER, (FOR L.H. ONLY) (VS2500)							0150	1
R	391-33-00-72898-138	. RETAINER, (FOR R.H. ONLY) (VS2500)							0150	1
R	20 MS35206-248	. SCREW							0150	8

MISSING ITEM NUMBERS ARE NOT APPLICABLE

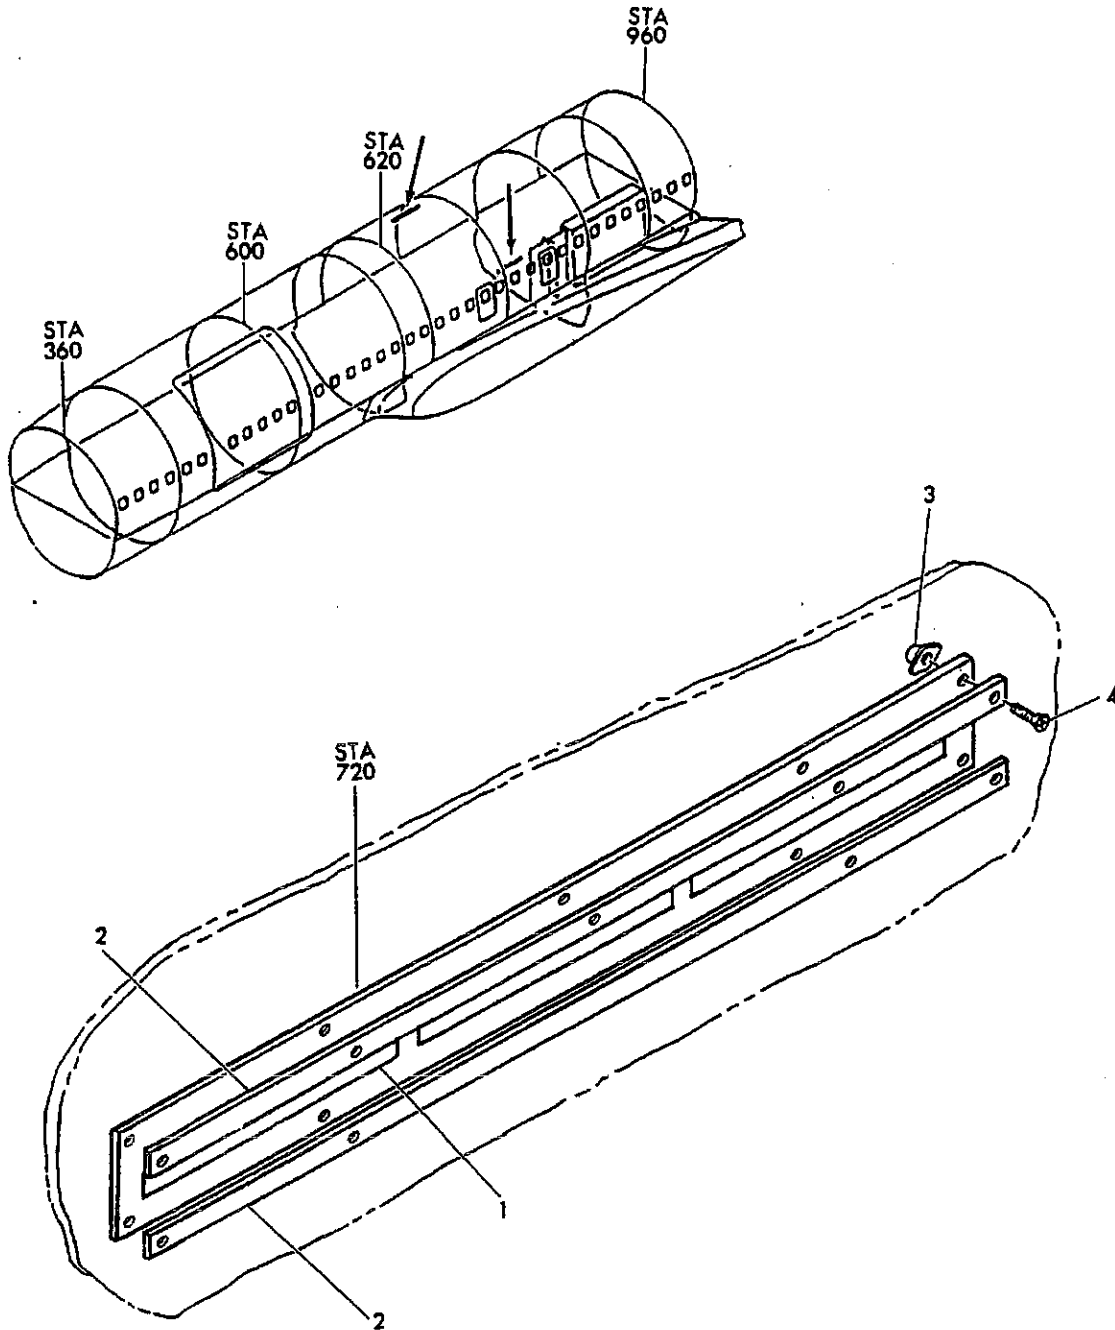


A 3307006A REV 265

FIGURE 6A. FORMATION LIGHTS INSTL



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
R R R R R R	6A	361-33-00-26591-001	FORMATION LIGHTS INSTL, L.H. (VS2500) (ADDED BY RAF . .							0150	RF
			7211.019-225) (SEE 24-03, FIG. 2, ITEM 175)								
		361-33-00-26591-002	FORMATION LIGHTS INSTL, R.H. (VS2500) (ADDED BY RAF . .							0150	RF
			7211.019-225) (SEE 24-03, FIG. 2, ITEM 175)								
	1	69029928-70	. FORMATION LIGHT ASSY.							0150	2
	2	ALD33-00-26591-101	. STRIP, (VS2500)							0150	4
	3	NAS1473A3	. NUTPLATE.							0150	20
	4	NAS514P1032-14	. SCREW							0150	20
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

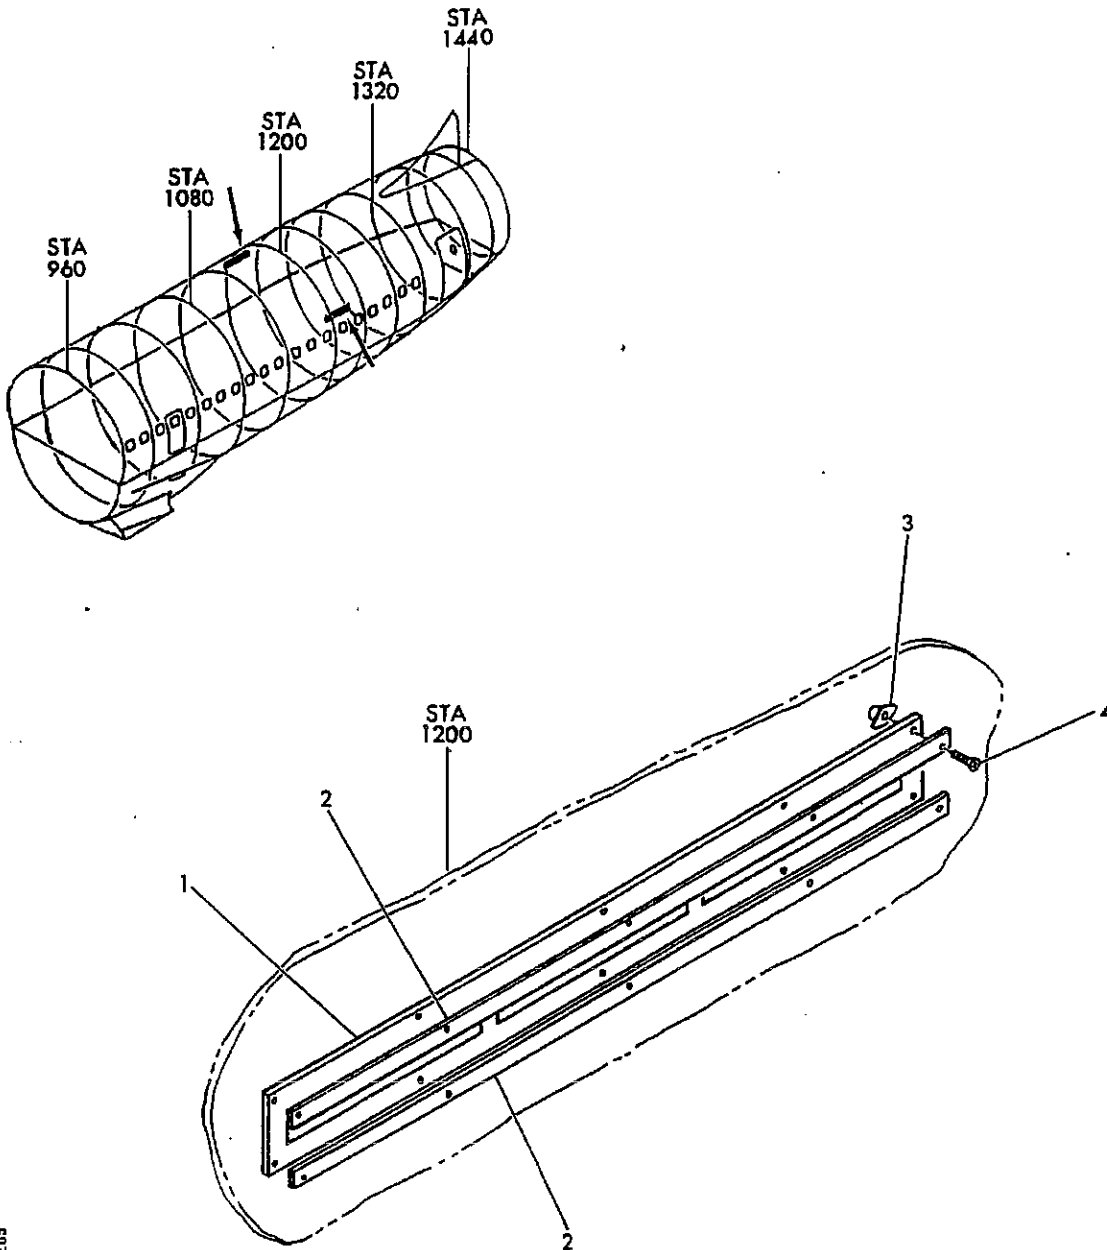


A 3307007A REV 265

FIGURE 7A. FORMATION LIGHTS INSTL



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R	7A	361-33-00-26591-003	FORMATION LIGHTS INSTL, L.H. AFT. (VS2500) (ADDED BY. . . RAF 7211.019-225) (SEE 24-03, FIG. 3, ITEM 70)	0150 RF
		361-33-00-26591-004	FORMATION LIGHTS INSTL, R.H. AFT. (VS2500) (ADDED BY. . . RAF 7211.019-225) (SEE 24-03, FIG. 3, ITEM 70)	0150 RF
	1	69D29928-70	. FORMATION LIGHT ASSY.	0150 2
	2	ALD33-00-26591-101	. STRIP, (VS2500)	0150 4
	3	NAS1473A3	. NUTPLATE.	0150 20
	4	NAS514P1032-12	. SCREW	0150 20
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

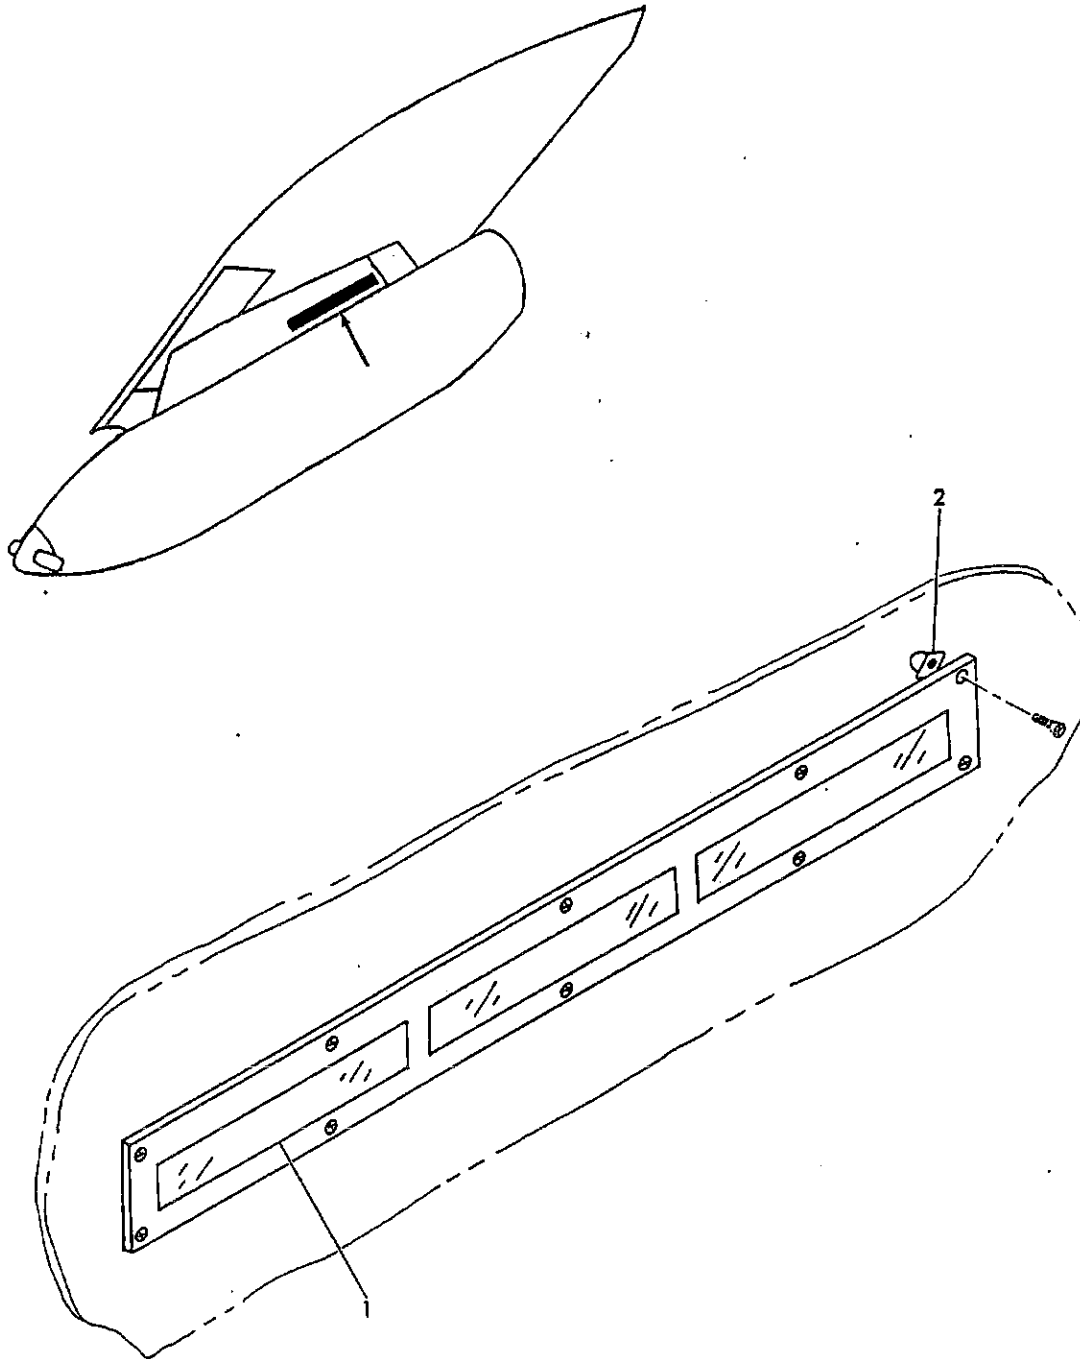


A 3307008A REV 265

FIGURE 8A. FORMATION LIGHTS INSTL



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF	UNITS
			FROM TO	PER ASSY
R R R R R R	8A	361-33-00-27231-001	FORMATION LIGHT INSTL, (L.H. ONLY) (VS2500) (ADDED BY .	0150 RF
			RAF 7211.019-225) (SEE 24-02, FIG. 38, ITEM 5)	
		361-33-00-27231-002	FORMATION LIGHT INSTL, (R.H. ONLY) (VS2500) (ADDED BY .	0150 RF
			RAF 7211.019-225) (SEE 24-02, FIG. 38, ITEM 5)	
	1	69D2992B-70	. FORMATION LIGHT ASSY.	0150 1
	1	MS24693-551	. SCREW	0150 22
	2	NAS1330A06K106	. BLIND RIVET	0150 22
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

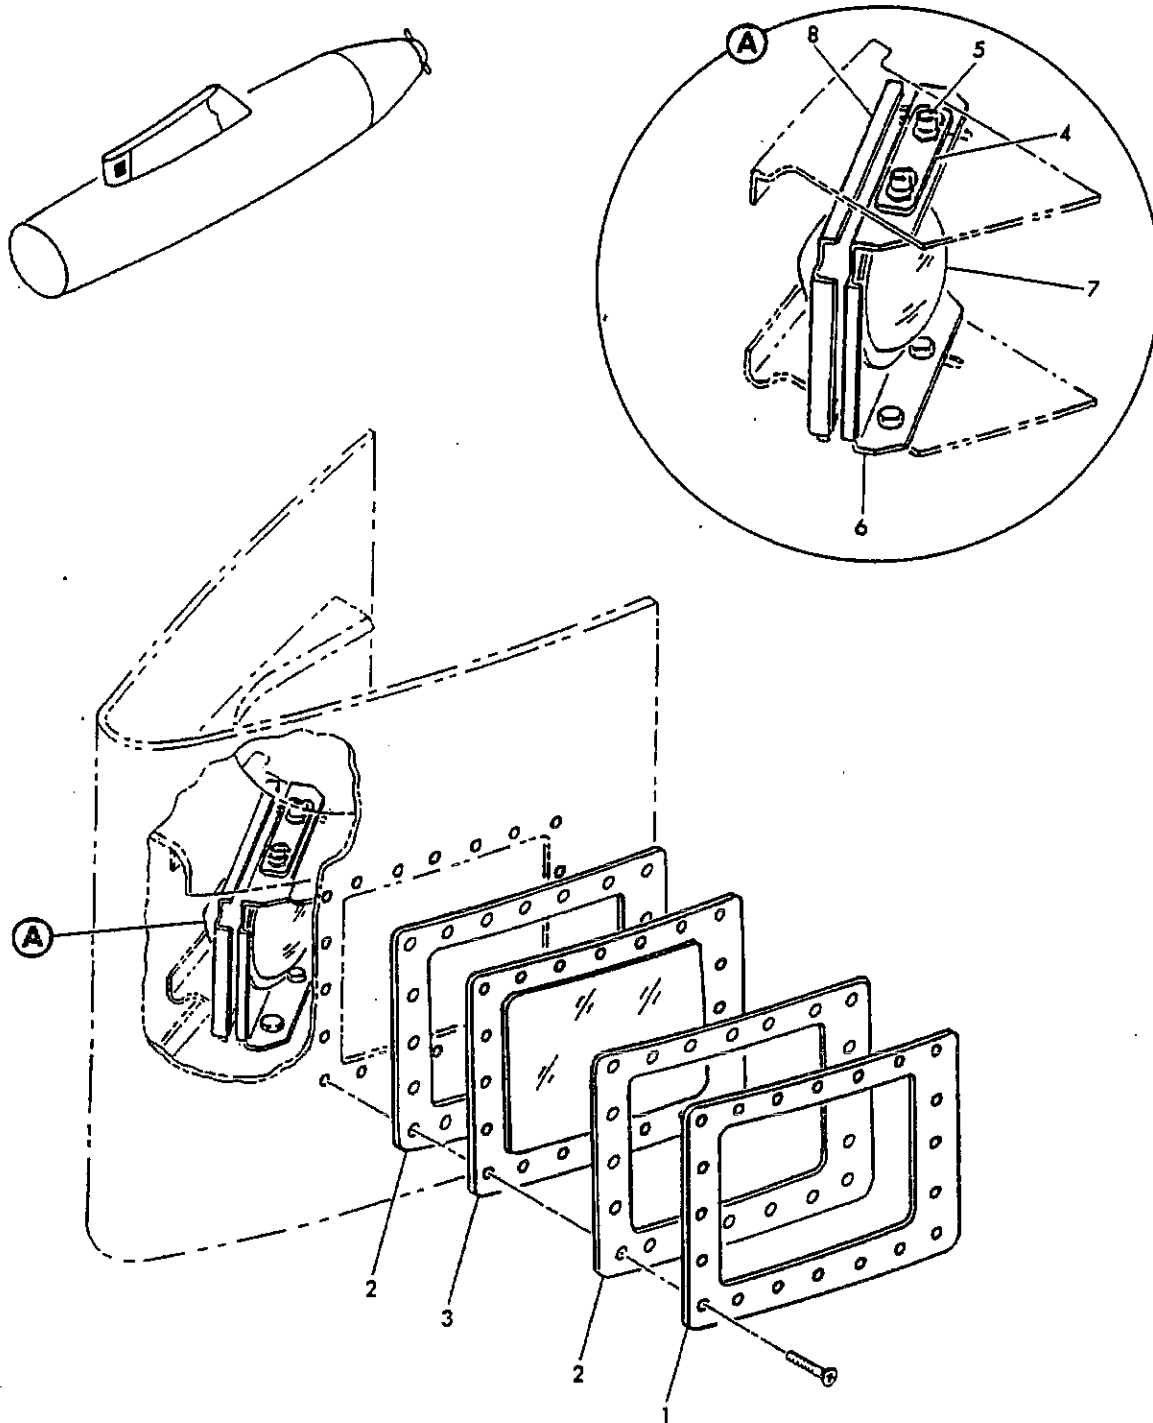

A 3307009A REV 265

FIGURE 9A. AFT FAIRING ASSY (LIGHT INSTL ONLY)



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R R R R R R R R R R R	9A	361-89-40-74103-107	AFT FAIRING ASSY, L.H. (LIGHTS INSTL ONLY) (VS2500) . .							0150	RF
		(ADDED BY RAF 7211.019-225) (SEE 24-02, FIG. 38, ITEM 6)									
		361-89-40-74103-108	AFT FAIRING ASSY, R.H. (LIGHTS INSTL ONLY) (VS2500) . .							0150	RF
		(ADDED BY RAF 7211.019-225) (SEE 24-02, FIG. 38, ITEM 6)									
	1	361-89-40-74103-221	. FRAME, (VS2500)							0150	1
	2	361-89-40-74103-227	. GASKET, (VS2500)							0150	2
	3	361-89-40-74103-217	. WINDOW, (VS2500)							0150	1
		ATTACHING PARTS									
		NAS517-2-2	. SCREW							0150	20
		-----*									
	4	391-33-00-72898-149	. PLATE ASSY, (VS2500)							0150	2
5	MS21069-3	. . NUT PLATE							0150	2	
	MS20426AD3	. ATTACHING PARTS									
		. RIVET							0150	4	
	-----*										
6	391-33-00-72898-153	. HOLDER ASSY, (VS2500)							0150	1	
	ATTACHING PARTS										
	NAS603-7	. SCREW							0150	4	
	AN960JD10	. WASHER							0150	4	
	-----*										
7	4627PAR36GE	. LAMP							0150	1	
8	391-33-00-72898-137	. RETAINER, (VS2500)							0150	1	
	ATTACHING PARTS										
	MS35206-248	. SCREW							0150	11	
	-----*										
MISSING ITEM NUMBERS ARE NOT APPLICABLE											