

BOEING 707 **PARTS CATALOG (MAINTENANCE)**

CHAPTER 52

DOORS

TABLE OF CONTENTS

SECTION

FIGURE

52-01 ENTRY DOORS

ARM ASSY, ENTRY DOOR GUIDE	10
ARM ASSY, GUIDE	10
BOLT INSTL, STATION 348.20	14
DOOR ASSY, AFT ENTRY	7
DOOR ASSY, FORWARD ENTRY	3
DOOR ASSY, FORWARD ENTRY	3A
DOOR INSTL, AFT ENTRY	5
DOOR INSTL, FORWARD ENTRY	1
DOOR INSTL, FORWARD ENTRY	1A
FRAME INSTL, BODY STATION 1330.9 AFT ENTRY DOOR	15
FRAME INSTL, BODY STATION 1375.2 AFT ENTRY DOOR	16
FRAME INSTL, STATION 303.9	13
FRAME INSTL, STATION 348.20	14
LINING INSTL, AFT ENTRY DOOR	20A
LINING INSTL, FORWARD ENTRY DOOR	18
LINING INSTL, FORWARD ENTRY DOOR	18A
PLATE INSTL, AFT ENTRY DOOR REMOVABLE SCUFF	22
PLATE INSTL, FORWARD ENTRY DOOR REMOVABLE SCUFF	21
ROD ASSY, DOOR MECHANISM CONTROL	8
ROD ASSY, DOOR MECHANISM CONTROL	9
ROD ASSY, ENTRY DOOR COCKING PUSH	8
SEAL INSTL, FORWARD ENTRY	4
SEAL INSTL, FORWARD ENTRY DOOR	4
SNUBBER ASSY, ENTRY DOOR	23
SPARES ASSY, AFT ENTRY DOOR MECHANISM	6
SPARES ASSY, FORWARD ENTRY DOOR MECHANISM	2
SUPPORT ASSY, FORWARD ENTRY DOOR HINGE	12
SUPPORT INSTL, FORWARD ENTRY DOOR LINING	11

52-02 GALLEY SERVICE DOORS

DOOR ASSY, AFT GALLEY	6
DOOR ASSY, FORWARD GALLEY	3
DOOR INSTL, AFT GALLEY	4
DOOR INSTL, FORWARD GALLEY	1
FRAME INSTL, STATION 1286	12
FRAME INSTL, STATION 1320	13
FRAME INSTL, STATION 410 FORWARD GALLEY DOOR	10
FRAME INSTL, STATION 443.5 FORWARD GALLEY DOOR	11
GATE INSTL, AFT GALLEY DOOR LOWER HINGE	8
GATE INSTL, AFT GALLEY DOOR UPPER HINGE	8
INSERT ASSY, ENTRY AND GALLEY DOOR INTERIOR HANDLE	21
LINING INSTL, AFT GALLEY DOOR	17
LINING INSTL, FORWARD GALLEY DOOR	16
PLATE INSTL, AFT GALLEY DOOR REMOVABLE SCUFF	19
PLATE INSTL, FORWARD GALLEY DOOR REMOVABLE SCUFF	18
REVEAL INSTL, AFT GALLEY DOOR	15
REVEAL INSTL, FORWARD GALLEY DOOR	14
SNUBBER ASSY, GALLEY DOOR	20
SPARES ASSY, AFT GALLEY DOOR MECHANISM	5
SPARES ASSY, FORWARD GALLEY DOOR MECHANISM	2
SUPPORT INSTL, FORWARD GALLEY DOOR ROLLER CAMPLATE	9

52-03 CARGO COMPARTMENT DOORS

ACTUATOR ASSY, CARGO DOOR	26A
ACTUATOR ASSY, CARGO DOOR CAM	28
ACTUATOR ASSY, CARGO DOOR DRIFT PIN	31
ACTUATOR ASSY, CARGO DOOR LOCK	29
ACTUATOR ASSY, DOOR PRESSURE	30
BOX INSTL, MAIN CARGO DOOR ELECTRICAL	43
COMPENSATOR INSTL, AFT CARGO DOOR	13
COMPENSATOR INSTL, CENTER CARGO DOOR	8
COMPENSATOR INSTL, FORWARD CARGO DOOR	4
CONTROL INSTL, CARGO DOOR SAFETY VALVE PUSH PULL	35
DOOR ASSY, AFT CARGO	11
DOOR ASSY, CENTER CARGO	7
DOOR ASSY, STATION 554.15 FORWARD CARGO	2
DOOR INSTL, AFT CARGO	10
DOOR INSTL, CENTER CARGO	6

BOEING 707 **PARTS CATALOG (MAINTENANCE)**

SECTION
FIGURE

DOOR INSTL, FORWARD CARGO	1
DOOR INSTL, MAIN CARGO DOOR LOWER ACCESS.	19
DOOR INSTL, MAIN CARGO.	16
EQUIPMENT INSTL, CARGO DOOR HYDRAULIC ACTUATOR.	27
FRAME AND STRAP INSTL	5
FRAME AND STRAP INSTL, FORWARD CARGO DOOR	5
FRAME INSTL, CENTER CARGO DOOR.	9
FRAME INSTL, STA 480 STRINGER 5 RH TO 25 LH	33
FRAME INSTL, STA 600D STRINGER 5 RH TO 25 LH.	33
FRAME INSTL, STATION 482.75 MAIN CARGO DOOR	22
FRAME INSTL, STATION 487.10 AND 600 PLUS 12.9 MAIN CARGO DOOR	23A
FRAME INSTL, STATION 600 PLUS 17.25 MAIN CARGO DOOR	22
HEATER INSTL, MAIN CARGO DOOR SURFACE	43
INSULATION INSTL, CARGO DOOR	17A
INSULATION INSTL, FORWARD CARGO DOOR.	3
LINING INSTL, CARGO DOOR.	38C
LINKAGE INSTL, MAIN CARGO DOOR ACTUATOR	25A
LOCK ASSY, CARGO DOOR FLUSH	20C
MECHANISM INSTL, MAIN CARGO DOOR LATCH.	20B
PANEL INSTL, CARGO ATTENDANTS	40
PLATE INSTL, CARGO DOORS SCUFF	15
ROD ASSY, CARGO DOOR MECHANISM PUSH	21
ROLLER INSTL, AFT CARGO DOOR.	12
SILL INSTL, MAIN CARGO DOOR LOWER	34
SILL INSTL, MAIN CARGO DOOR LOWER	34A
SPARES ASSY, MAIN CARGO DOOR LATCH CAM	20A
SPARES ASSY, MAIN CARGO DOOR LATCH HOOK	20A
STRAP AND DOUBLER INSTL, AFT CARGO DOOR	14
STRAP INSTALLATION, MAIN CARGO DOOR	32
TRIM INSTL, CARGO DOOR AND DOORWAY.	38J
VALVE INSTL, CARGO DOOR SAFETY.	36

52-04 MISCELLANEOUS DOORS

CONNECTOR INSTL, STATION 690 ESCAPE HATCH HEATER BLANKET	38
CONNECTOR INSTL, STATION 770 ESCAPE HATCH HEATER BLANKET	38
DOOR ASSY, PASSENGER CARGO DIVIDER PARTITION.	27A
DOOR ASSY, STATION 465 CREW REST PARTITION PASSENGER.	31
DOOR ASSY, TOILET A	12B
DOOR ASSY, TOILET C	14A
DOOR ASSY, TOILET D	15A
DOOR INSTL, ELECTRONIC ACCESS	1
DOOR INSTL, STATION 302 PARTITION	8
DOOR INSTL, STATION 302 PARTITION	8A
DOOR INSTL, STATION, STATION 990.45 OUTWARD OPENING	44
DOOR INSTL, STATION, STATION 990.45 OUTWARD OPENING	44
DOOR INSTL, TOILET C FOLDING.	18
DOOR INSTL, TOILET D FOLDING.	18
FRAME INSTL, STATION 1001.95 EMERGENCY EXIT	6
FRAME INSTL, STATION 1001.95 KIT.	6A
FRAME INSTL, STATION 678.95 EMERGENCY EXIT.	4
FRAME INSTL, STATION 701.95 EMERGENCY EXIT.	4
FRAME INSTL, STATION 758.95 EMERGENCY EXIT.	5
FRAME INSTL, STATION 781.95 EMERGENCY EXIT.	5
FRAME INSTL, STATION 960N PLUS 18.95 EMERGENCY EXIT	6
FRAME INSTL, STATION 960N PLUS 18.95 KIT.	6A
HATCH ASSY, EMERGENCY	2
HATCH INSTL, STATION 990.45 EMERGENCY EXIT.	3
HINGE INSTL, STATION 990 OUTWARD OPENING DOOR	46
HOOK ASSY, ELECTRONIC ACCESS DOOR	1
LAVATORY ASSY, TOILET COMPARTMENT B PALLETIZED.	17G
LAVATORY ASSY, TOILET COMPARTMENT B PALLETIZED.	17J
LAVATORY ASSY, TOILET COMPARTMENT E PALLETIZED.	17J
LINING INSTL, STATION 990 OUTWARD OPENING EMERGENCY EXIT.	47
PLATE AND FRAME INSTL, ELECTRONIC ACCESS DOOR	1
SEAL INSTL, STATION 990 EMERGENCY EXIT OUTWARD OPENING DOOR	45
SEAL INSTL, STATION 990.45 EMERGENCY EXIT KIT	45
SPARES ASSY, STATION 302 PARTITION DOOR	8
STRAP INSTL, STATION 990.45 EMERGENCY EXIT.	7
SUPPORT INSTL, EMERGENCY EXIT LOWER SILL	2

52-05 DOOR WARNING SYSTEM

PANEL INSTL, CARGO ATTENDANTS	10
PANEL INSTL, COPILOTS AUXILIARY EQUIPMENT	20
PANEL INSTL, FLIGHT ENGINEERS AUXILIARY	24
SWITCH INSTL, CENTER CARGO, AFT CARGO, AFT GALLEY AND AFT ENTRY DOOR	4
SWITCH INSTL, FORWARD CARGO AND GALLEY DOOR AND UPPER CARGO DOOR LOCKED POSITION	2

CHAPTER TABLE OF CONTENTS

52-0
PAGE 2

RAF
NOV 21/01

BOEING
707
PARTS CATALOG (MAINTENANCE)

SECTION

FIGURE

INDICATOR	2
SWITCH INSTL, FORWARD ENTRY DOOR WARNING	3
SWITCH INSTL, MAIN CARGO DOOR HAND PUMP	2A
SWITCH INSTL, RADIO ACCESS DOOR	5
SWITCH INSTL, STATION 400 CARGO DOOR	1
SWITCH INSTL, STATION 990 EMERGENCY EXIT DOOR KIT	26

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 01

ENTRY DOORS

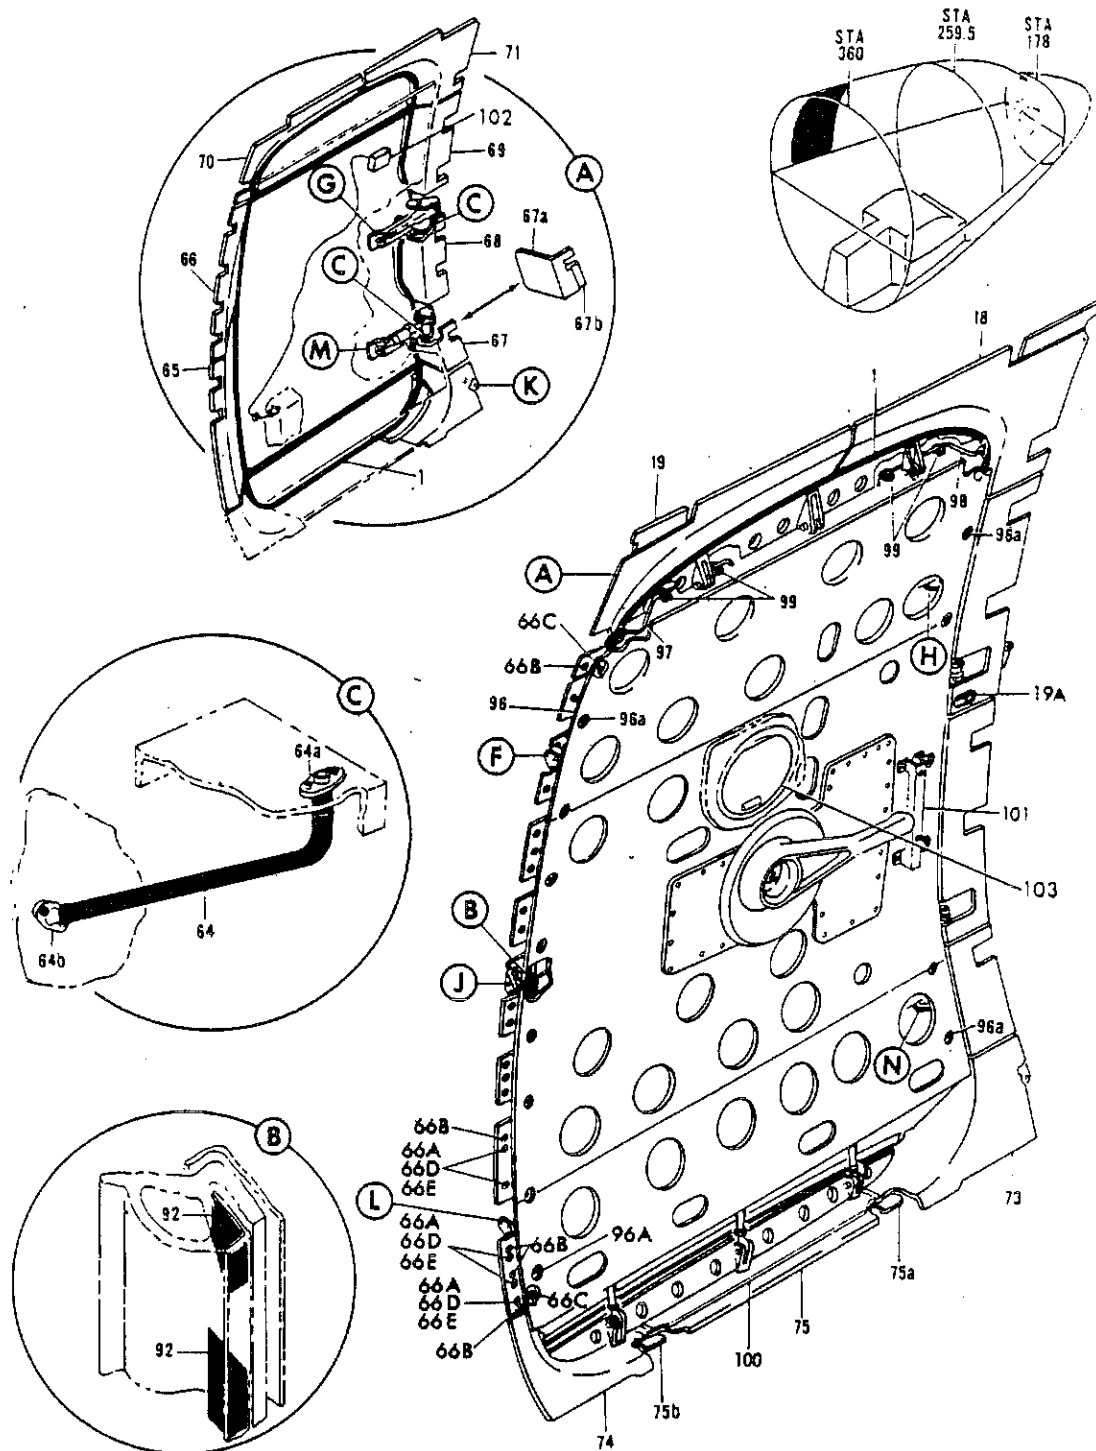


FIGURE L. DOOR INSTL, FORWARD ENTRY (DOORS ONLY) (SHEET 1)

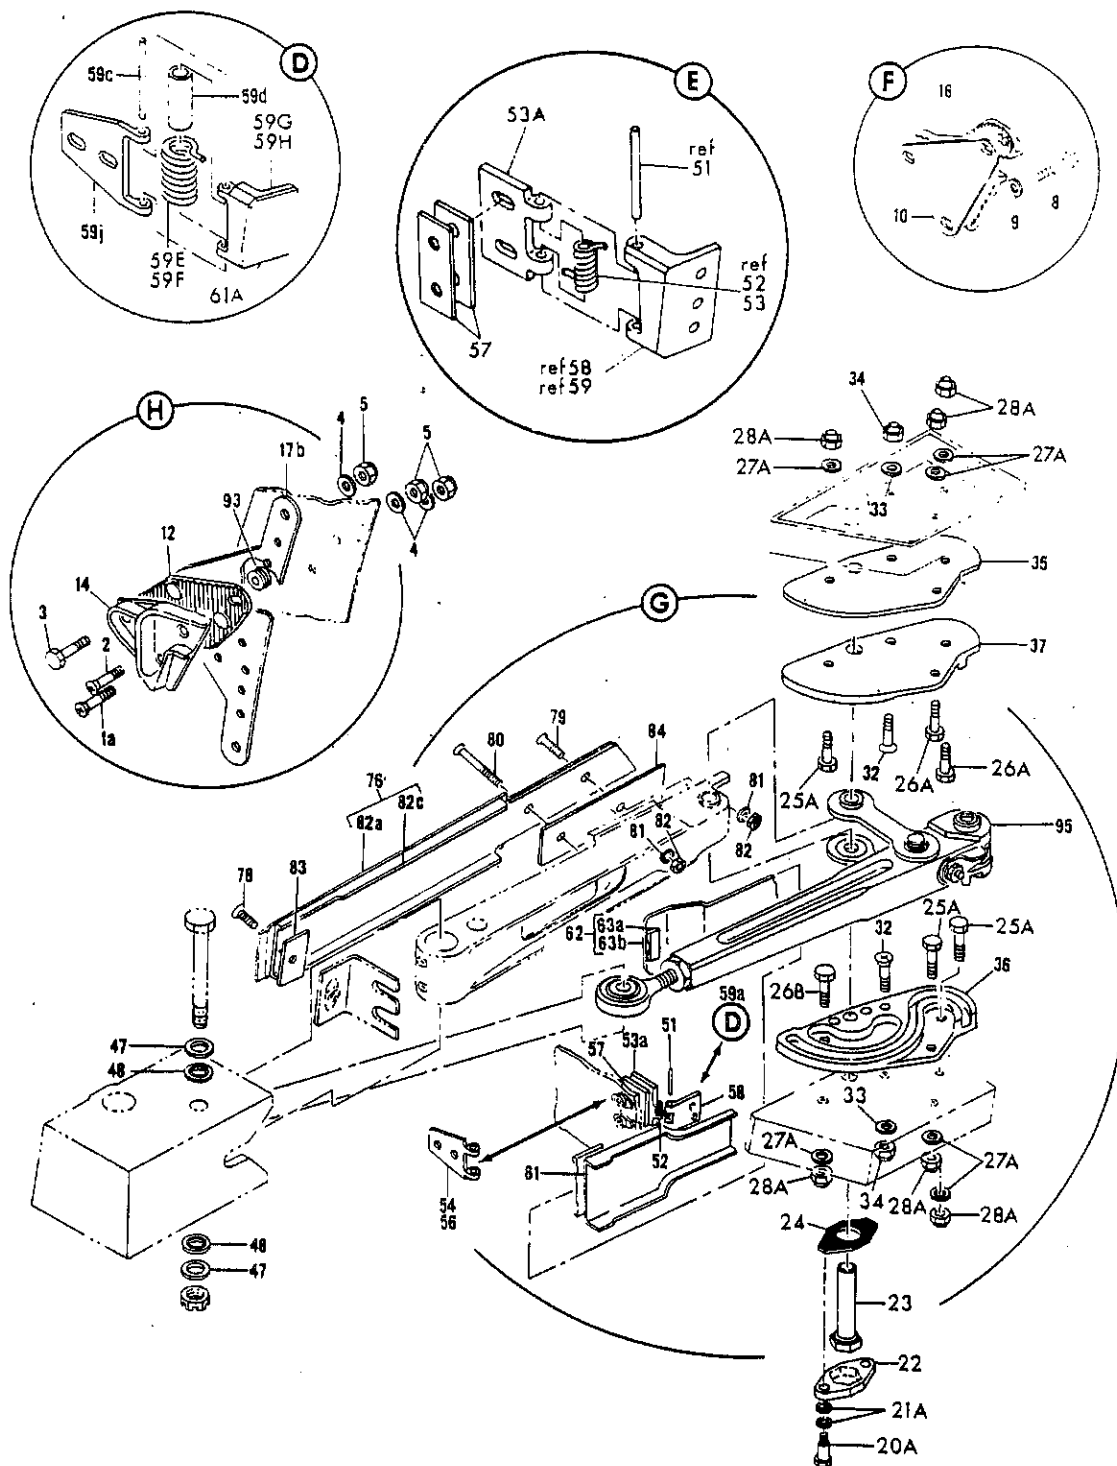


FIGURE 1. DOOR INSTL, FORWARD ENTRY (DOORS ONLY) (SHEET 2)

NOV 21/90

52-01-1

DETAILED PARTS LIST
52-01-1
PAGE 1

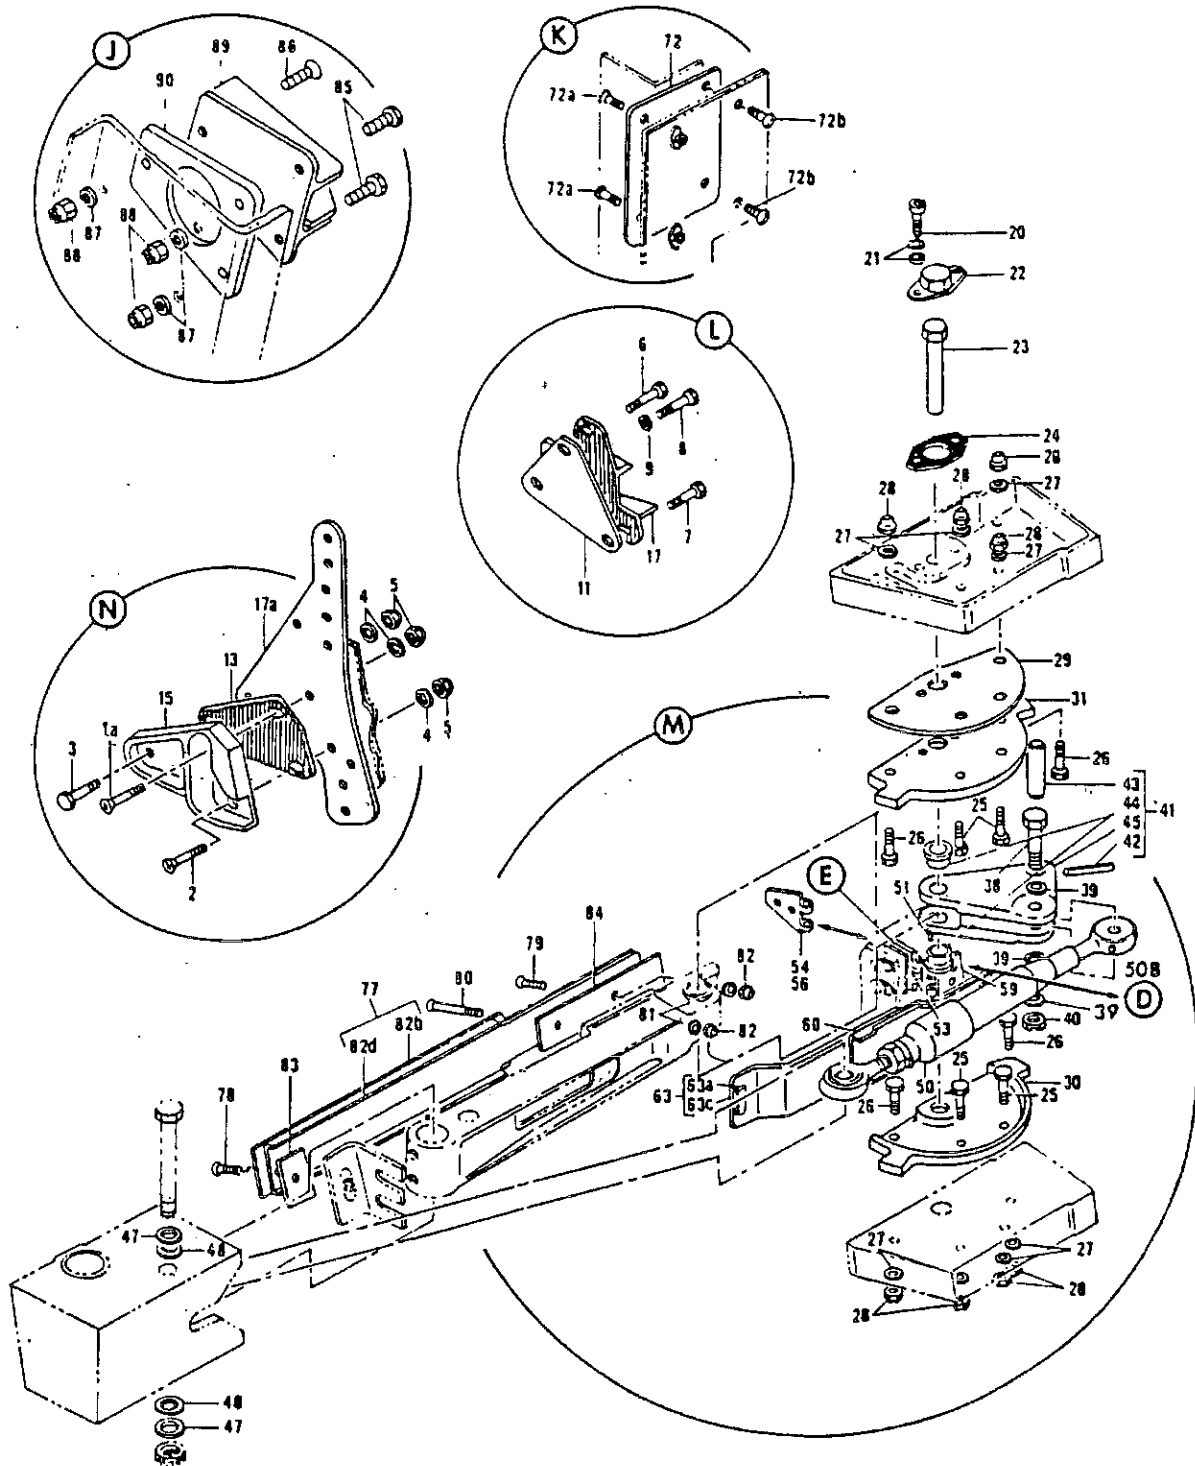


FIGURE 1. DOOR INSTL, FORWARD ENTRY (DOORS ONLY) (SHEET 3)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1	50-7945	DOOR INSTL, FORWARD ENTRY (DOORS ONLY) (SEE 53-2, FIG. 1, ITEM 18)	0150	RF
1	50-9369-2	SEAL, FORWARD ENTRY DOOR.	0150	1
1A	NAS517-4-9	SCREW	0150	2
2	NAS517-4-8	SCREW	0150	2
3	AN4-7A	BOLT	0150	2
4	AN960D416	WASHER	0150	6
5	NAS679A4W	NUT	0150	6
6	NAS1104-7	BOLT	0150	1
7	AN4-7A	BOLT	0150	1
8	AN4-6A	BOLT	0150	4
9	AN960D416	WASHER	0150	4
10	90-8623	PLATE, LATCH SUPPORT.	0150	1
11	90-8623-1	PLATE, LATCH SUPPORT.	0150	1
12	90-8623-3	PLATE, LATCH SUPPORT.	0150	1
13	90-8623-4	PLATE, LATCH SUPPORT.	0150	1
14	65-1762-9	FITTING, FORWARD LATCH.	0150	1
15	65-1762-10	FITTING, FORWARD LATCH.	0150	1
16	65-1760	FITTING, UPPER AFT LATCH.	0150	1
17	65-1761	FITTING, LOWER AFT LATCH.	0150	1
17A	60-4428	DOUBLER, LATCH SUPPORT.	0150	1
17B	60-4428-1	DOUBLER, LATCH SUPPORT.	0150	1
18	50-7945-17	PLATE	0150	1
19	50-7945-18	PLATE	0150	1
	NAS221-8	ATTACHING PARTS SCREW	0150	5
20	BAC512AF20	SCREW	0150	2
20A	BAC512AF20	SCREW	0150	2
21	NAS549-8	WASHER	0150	4
21A	NAS549-8	WASHER	0150	4
22	66-9439	RETAINER, DOOR HINGE PIN.	0150	2
23	66-2617-8	PIN, DOOR HINGE	0150	2
24	63-1672	GASKET, AFT RUBBER RETAINER	0150	2
25	NAS1104-4	BOLT	0150	4
25A	NAS1104-4	BOLT	0150	3
26	NAS1104-5	BOLT	0150	4
26A	NAS1104-5	BOLT	0150	2
26B	NAS1104-5	BOLT	0150	1
27	AN960D416	WASHER	0150	8
27A	AN960D416	WASHER	0150	6
28	NAS679A4W	NUT	0150	8
28A	NAS679A4W	NUT	0150	6
29	30-3031	SHIM, LOWER HINGE STOP PLATE.	0150	AR
30	69-2376-1	PLATE, LOWER HINGE STOP	0150	1
31	69-2376-2	PLATE, LOWER HINGE STOP	0150	1
32	NAS517-4-4	SCREW	0150	2
33	AN960D416L	WASHER	0150	2
34	NAS679A4W	NUT	0150	2
35	30-3030-1	SHIM, UPPER HINGE CAM PLATE	0150	AR
36	69-10463-1	PLATE, GUIDE	0150	1
37	69-10463-2	PLATE, FORWARD ENTRY DOOR GUIDE	0150	1
38	66-20211-2	BOLT	0150	1
38	NAS1105-13DW	(OPTIONAL NAS1105-13DW) BOLT	0150	1
39	AN960D516L	WASHER	0150	3
40	AN320-5	NUT	0150	1
41	69-2377-3	LINK ASSY, RADIUS	0150	1
42	NAS561P3-16	PIN	0150	1
43	63-1015	DOWEL	0150	1
44	NAS77A7-19	BUSHING	0150	2
45	69-2377-4	LINK	0150	1
47	AN960D516	WASHER	0150	4
50	90-10072-1	SNUBBER ASSY. (OPTIONAL 90-10072)	0101	1
50	90-10072	SNUBBER ASSY. (OPTIONAL TO 90-10072-1)	0101	1
50	90-10072-2	SNUBBER ASSY. DOORS, (SEE FIG. 23).	0250 0150	1
59A	66-10905-8	REQUIRED PLACARDS, (SEE 11-2, FIG. 232)	0150	
59B	66-10905-9	HINGE ASSY, FORWARD ENTRY DOOR FLAP UPPER	0150	1
59C	AN253-2-187	HINGE ASSY, FORWARD ENTRY DOOR FLAP LOWER PIN	0150 0150	1 1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 1	590	NAS42005-77	SPACER.	0150	1
R	59E	66-10901-3	SPRING, TORSION (USED ON 66-10905-6 AND -8)	0150	1
R	59F	66-10901-4	SPRING, TORSION (USED ON 66-10905-7 AND -9)	0150	1
R	59G	66-10905-3	HINGE HALF, (USED ON 66-10905-6 AND -8)	0150	1
R	59H	66-10905-4	HINGE HALF, (USED ON 66-10905-7 AND -9)	0150	1
R	59J	66-10905-10	HINGE HALF.	0150	1
R	60	69-9262-1	COVER, UPPER AND LOWER HINGES HINGE	0150	1
R	61	69-9262-2	COVER, UPPER AND LOWER HINGES HINGE	0150	1
R	61A	BACF3F10R18	FILLER.	0150	2
R	62	69-9028-5	FLAP ASSY, UPPER HINGE.	0150	1
R			(OPTIONAL 69-9028)		
R	62	69-9028	FLAP ASSY, UPPER HINGE.	0150	1
R			(OPTIONAL TO 69-9028-5)		
R	63	69-9029-6	FLAP ASSY, LOWER HINGE.	0150	1
R			(OPTIONAL 69-9029)		
R	63	69-9029	FLAP ASSY, LOWER HINGE.	0150	1
R			(OPTIONAL TO 69-9029-6)		
R	63A	63-10297	STRIP, GALLEY RUB.	0150	1
R			ATTACHING PARTS		
R		MS20426A	RIVET.	0150	2
R		NAS42DD4-3A	SPACER.	0150	2
R			-----*		
R	63B	69-9028-3	FLAP ASSY, MOLDED (USED ON 63-9028)	0150	1
R	63B	69-9028-6	FLAP ASSY, MOLDED (USED ON 63-9028-5)	0150	1
R	63C	69-9029-3	FLAP ASSY, MOLDED (USED ON 63-9029)	0150	1
R	63C	69-9029-6	FLAP ASSY, MOLDED (USED ON 63-9029-6)	0150	1
R		65-14013	DRAIN INSTL, UPPER AND LOWER HINGES WATER	0150	1
R	64	65-14013-4	HOSE, UPPER AND LOWER HINGES WATER DRAIN.	0150	2
R			CONNECTING		
R	64A	66-4742	FITTING ASSY.	0150	2
R	64B	66-9201	FITTING.	0150	2
R			ATTACHING PARTS		
R		NAS514P440-B	SCREW.	0150	8
R		NAS679A04W	NUT.	0150	8
R			-----*		
R		65-3359	REVEAL INSTL, STATION 348.20.	0150	1
R	65	65-3359-1	REVEAL.	0150	1
R	66	65-3359-3	REVEAL.	0150	1
R			ATTACHING PARTS		
R	66A	NAS517-3-00	SCREW.	0150	5
R	66B	NAS221-9	SCREW.	0150	18
R	66C	NAS221-8	SCREW.	0150	26
R	66D	AN960D10	WASHER.	0150	5
R	66E	NAS679A3W	NUT.	0150	5
R			-----*		
R		65-3360	REVEAL INSTL, STATION 303.90.	0150	1
R	67A	65-3360-31	REVEAL, STATION 303.90 FORWARD ENTRY DOOR	0150	1
R	67B	65-3360-32	TAB, STATION 303.90 FORWARD ENTRY DOOR REVEAL	0150	1
R	68	65-3360-38	REVEAL.	0150	1
R	69	65-3360-21	REVEAL.	0150	1
R	70	65-3103	REVEAL, FORWARD ENTRY DOOR AFT CORNER	0150	1
R	71	65-2983	REVEAL, FORWARD CORNER.	0150	1
R	72	63-8817	TAB, SCUFF PLATE.	0150	1
R			ATTACHING PARTS		
R	72A	NAS221-8	SCREW.	0150	2
R	72B	NAS221-9	SCREW.	0150	2
R			-----*		
R	73	65-2937-12	PLATE ASSY, CORNER SCUFF.	0150	1
R			(OPTIONAL 65-2937-11)		
R	73	65-2937-11	PLATE ASSY, CORNER SCUFF.	0150	1
R			(OPTIONAL TO 65-2937-12)		
R	74	65-2938-10	PLATE ASSY, AFT CORNER SCUFF.	0150	1
R			(OPTIONAL 65-2938-5) (FOR REPLACEMENT ORDER 65-2938-14)		
R	74	65-2938-14	PLATE ASSY, FORWARD CORNER SCUFF.	0150	1
R			(OPTIONAL TO AND REPLACEMENT FOR 65-2938-5)		
R			(REPLACEMENT FOR 65-2938-10)		
R	74	65-2938-5	PLATE ASSY, FORWARD CORNER SCUFF.	0150	1
R			(OPTIONAL TO 65-2938-10) (OPTIONAL AND FOR REPLACEMENT ORDER 65-2938-14)		
R	75	65-2998-3	PLATE, SCUFF THRESHOLD.	0150	1
R		66-2738	ANGLE ASSY, THRESHOLD.	0150	1
R		66-2738-1	ANGLE ASSY, THRESHOLD.	0150	1
R	75A	66-2738-2	ANGLE, (USED ON 66-2738).	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF	UNITS
				FROM TO	PER ASSY
R 1	75B	66-2738-3	. . . ANGLE, (USED ON 66-2738-1).	0150	1
R	76	69-2562-7	. COVER ASSY, HINGE ARM	0150	1
R	77	69-2562-8	. COVER ASSY, HINGE ARM	0150	1
			ATTACHING PARTS		
R	78	NAS517-3-2	. SCREW	0150	2
R	79	NAS517-3-4	. SCREW	0150	2
R	80	NAS517-3-12	. SCREW	0150	2
R	81	AN960D10	. WASHER	0150	4
R	82	NAS679A3W	. NUT	0150	4
			-----*		
R	82A	69-2562-9	. . COVER, (USED ON 69-2562-7).	0150	1
R	82B	69-2562-10	. . COVER, (USED ON 69-2562-8).	0150	1
R	82C	69-2562-11	. . STIFFENER, (USED ON 69-2562-7).	0150	1
R	82D	69-2562-12	. . STIFFENER, (USED ON 69-2562-8).	0150	1
R	83	BACS40812-27	. SHIM	0150	AR
R	84	BACS40812-73	. SHIM	0150	AR
R	85	NAS517-3-3	. SCREW	0150	2
R	86	NAS517-3-3	. SCREW	0150	1
R	87	AN960C10	. WASHER	0150	3
R	88	NAS679C3W	. NUT	0150	3
R	89	66-10360	. TRACK ASSY, FORWARD ENTRY DOOR CENTERING.	0150	1
R		65-12353	. SHIM INSTL, ENTRY AND GALLEY DOORS SEAL	0150	1
R	92	65-12353-1	. . SHIM, (EXTRUSION NO. BAC1521-585 X LENGTH AS REQUIRED) (ORDER IN FOOT LENGTHS)	0150	AR
R	93	NAS1368N6A	. GROMMET	0150	1
R	95	69-5338-6	. ARM ASSY, DOOR GUIDE (SEE FIG. 10).	0150	1
R	96	50-7945-1	. DOOR ASSY, (SEE FIG. 3) (SEE FIG. 2 FOR SPARES ASSY) (FOR REPLACEMENT ORDER 50-7945-88) (DELETED BY SB 3337)	0103	1
	96	50-7945-88	. DOOR ASSY, (SEE FIG. 3) (SEE FIG. 2 FOR SPARES ASSY) (REPLACEMENT FOR 50-7945-1) (DELETED BY SB 3337)	0103	1
	96	50-7945-195	. DOOR ASSY, (SEE FIG. 3) (ADDED BY SB 3337).	0103	1
R	96	50-7945-1	. DOOR ASSY, (REWORKED BY SB 3337) (MAY USE 50-7945-195 AFTER SB 3337 INCORPORATION) (SEE FIG. 3) (SEE FIG. 2 FOR SPARES ASSY) (FOR REPLACEMENT ORDER 50-7945-88)	0450	1
R		96	. DOOR ASSY, (REWORKED BY SB 3337) (MAY USE 50-7945-195 AFTER SB 3337 INCORPORATION) (SEE FIG. 3) (SEE FIG. 2 FOR SPARES ASSY) (REPLACEMENT FOR 50-7945-1)	0450	1
R	96A	66-24075-3	. PIN, STOP	0150	AR
R		65-42052-1	. KEEPER INSTL, SEAL.	0150	1
R	97	66-18031-1	. . SPRING, CANTILEVER.	0150	AR
R	98	66-18031-2	. . SPRING, CANTILEVER.	0150	AR
R	99	63-9484	. . CLAMP, SPRING RETAINER.	0150	AR
R		65-69063-1	. PAD INSTL, NON SLIP	0150	1
R	100	65-69063-7	. PAD	0150	1
R		69-4831-2	. BRACKET INSTL, ASSIST HANDLE.	0150	1
R	101	66-9794	. BRACKET ASSY.	0150	1
			ATTACHING PARTS		
R		NAS221-11	. . SCREW	0150	4
			-----*		
R			. FOR REFERENCE TO OTHER DOOR DETAILS, SEE NHA.	0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

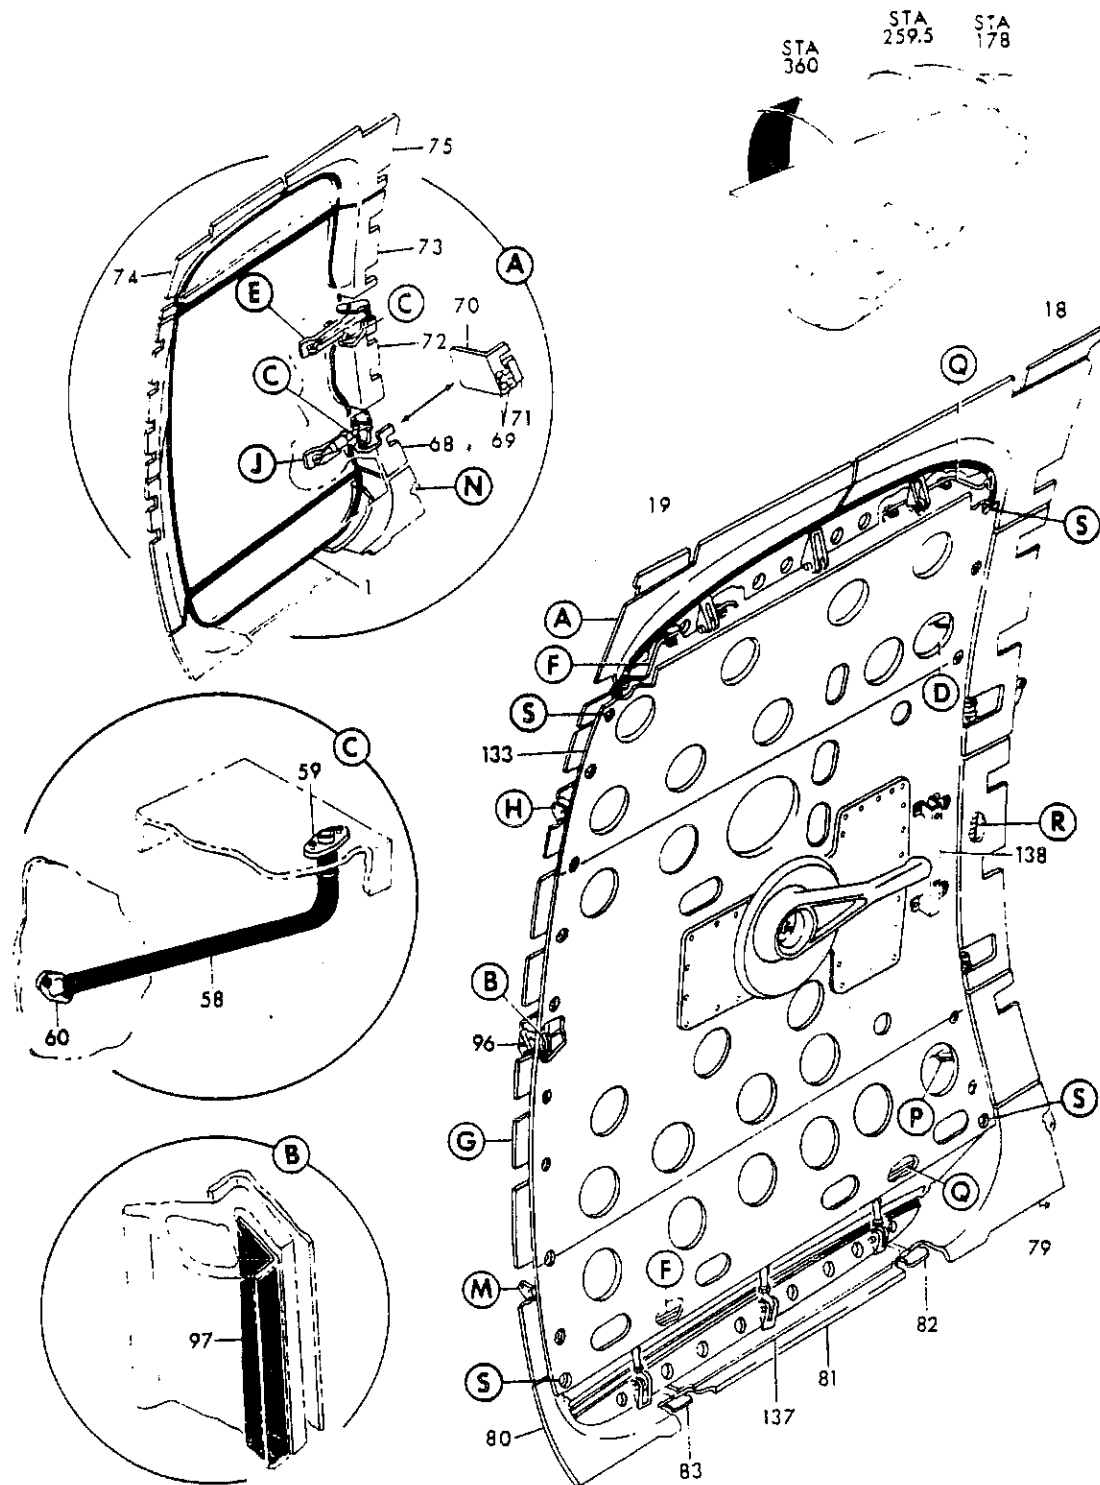


FIGURE 1A. DOOR INSTL, FORWARD ENTRY (DOORS ONLY) (SHEET 1)

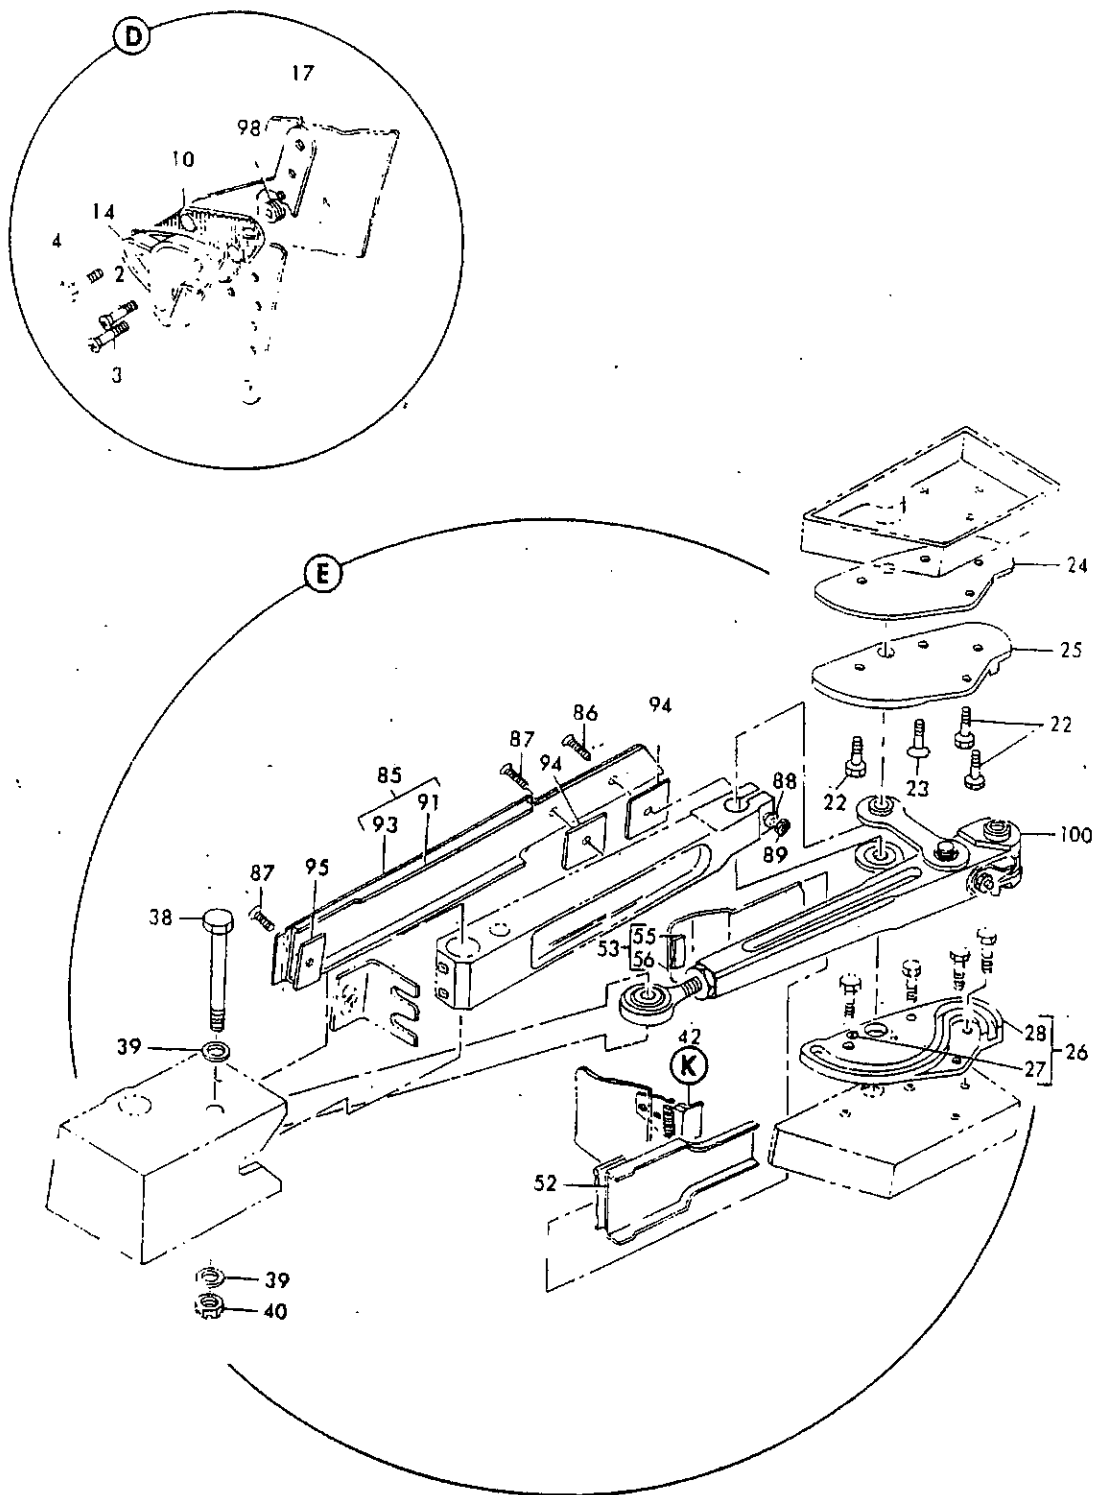


FIGURE 1A. DOOR INSTL, FORWARD ENTRY (DOORS ONLY) (SHEET 2)

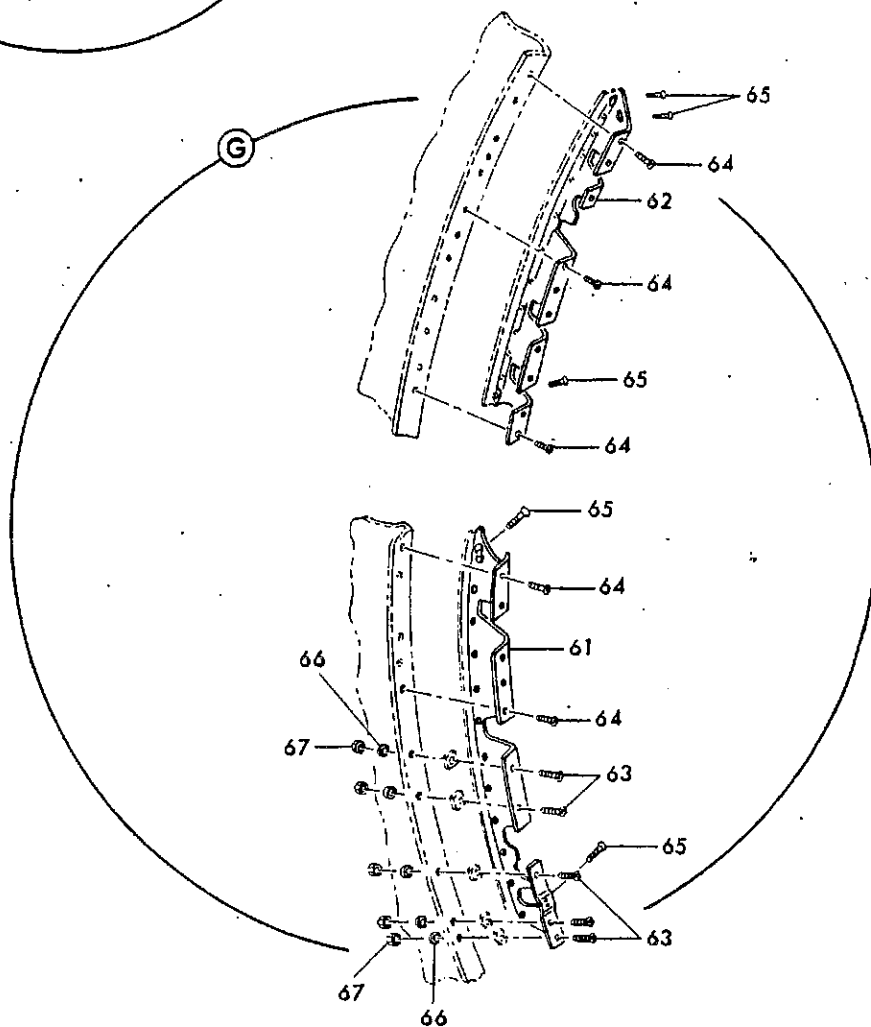
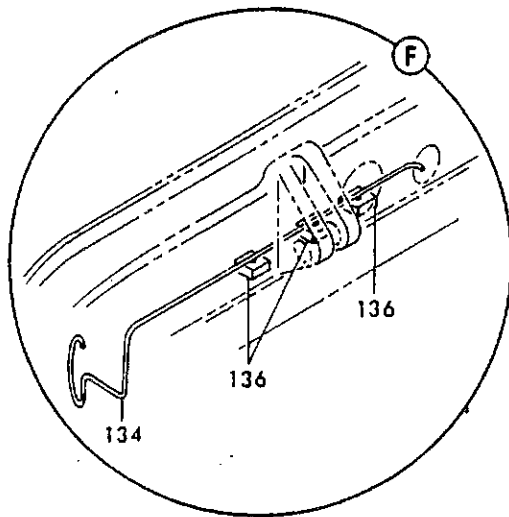


FIGURE 1A. DOOR INSTL, FORWARD ENTRY (DOORS ONLY) (SHEET 3)

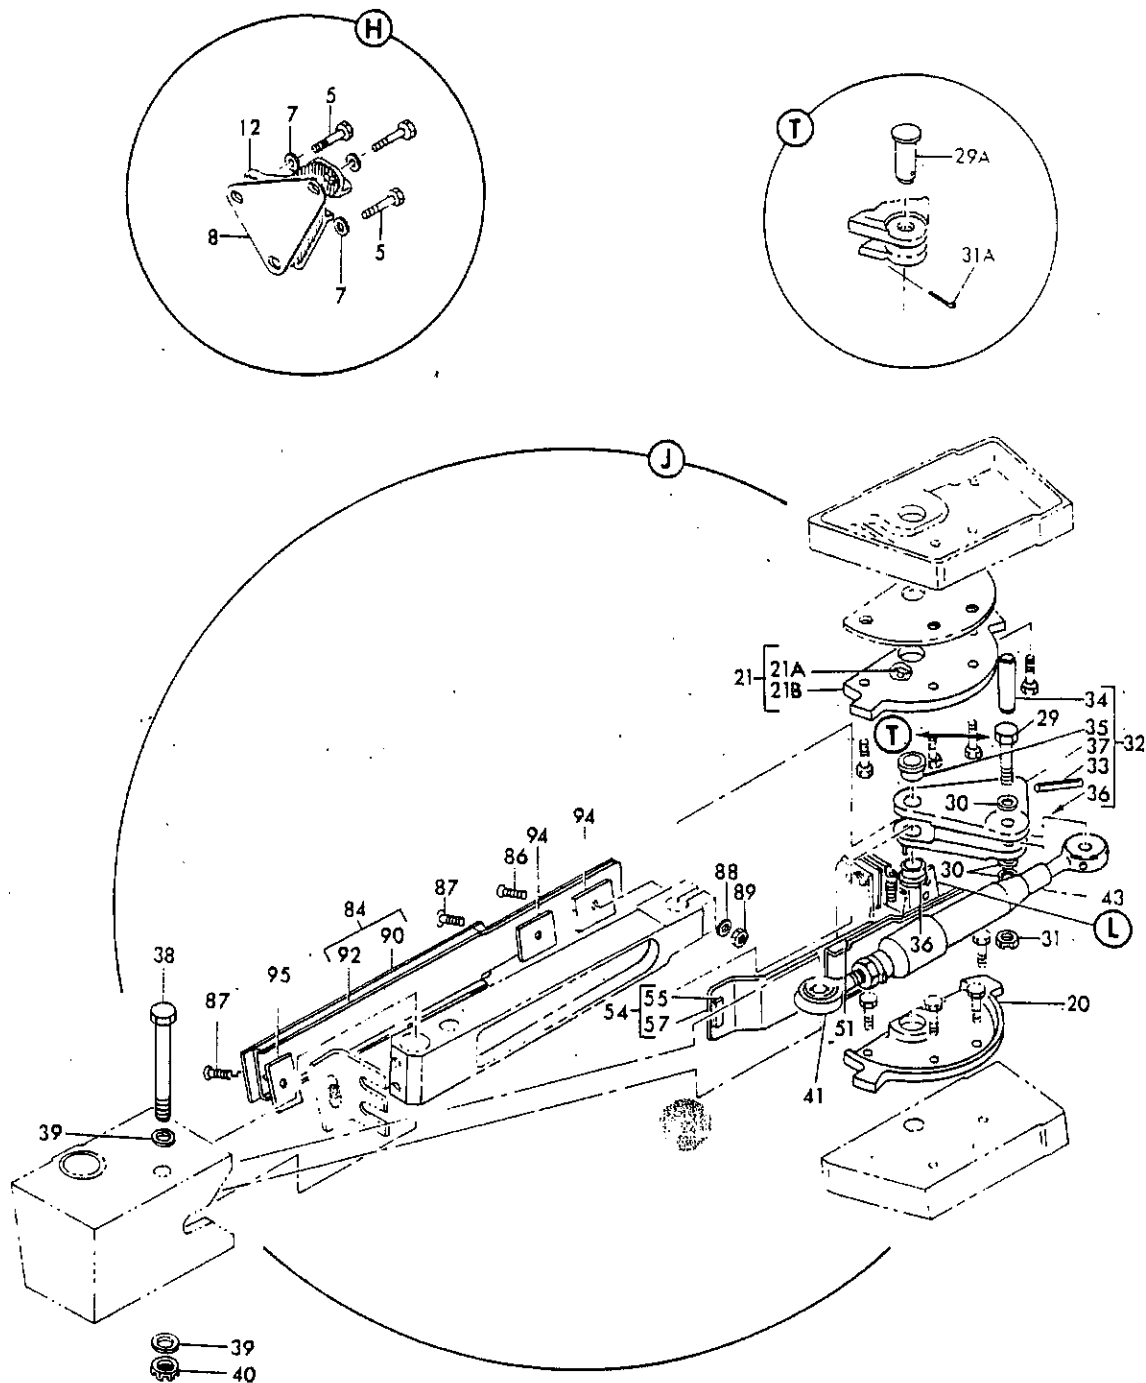


FIGURE 1A. DOOR INSTL, FORWARD ENTRY (DOORS ONLY) (SHEET 4)

NOV 21/90

52-01-1A

DETAILED PARTS LIST
52-01-1A
PAGE 3

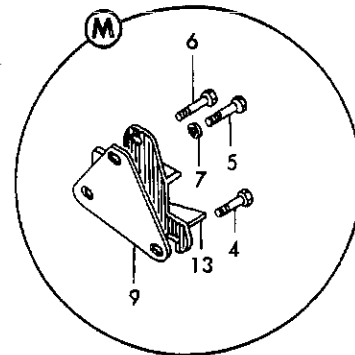
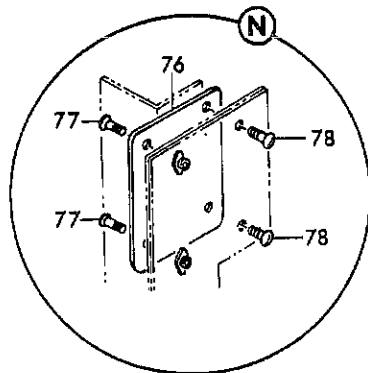
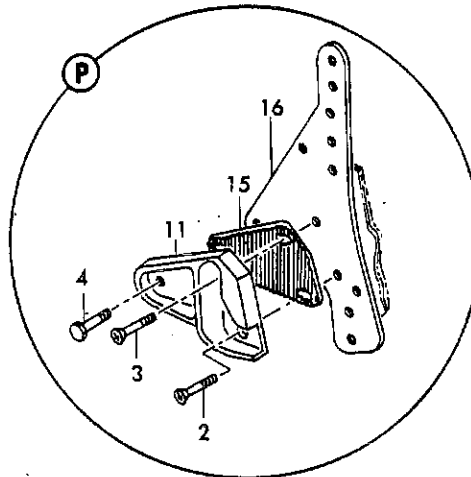
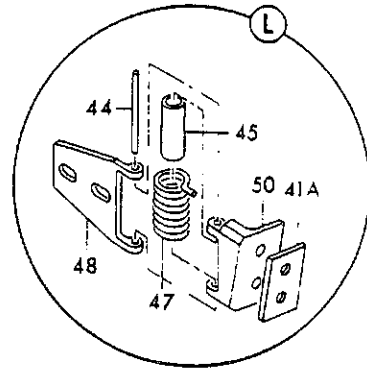
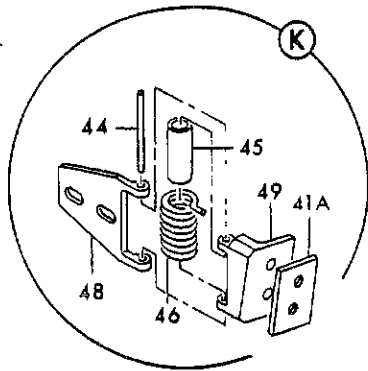


FIGURE 1A, DOOR INSTL, FORWARD ENTRY (DOORS ONLY) (SHEET 5)

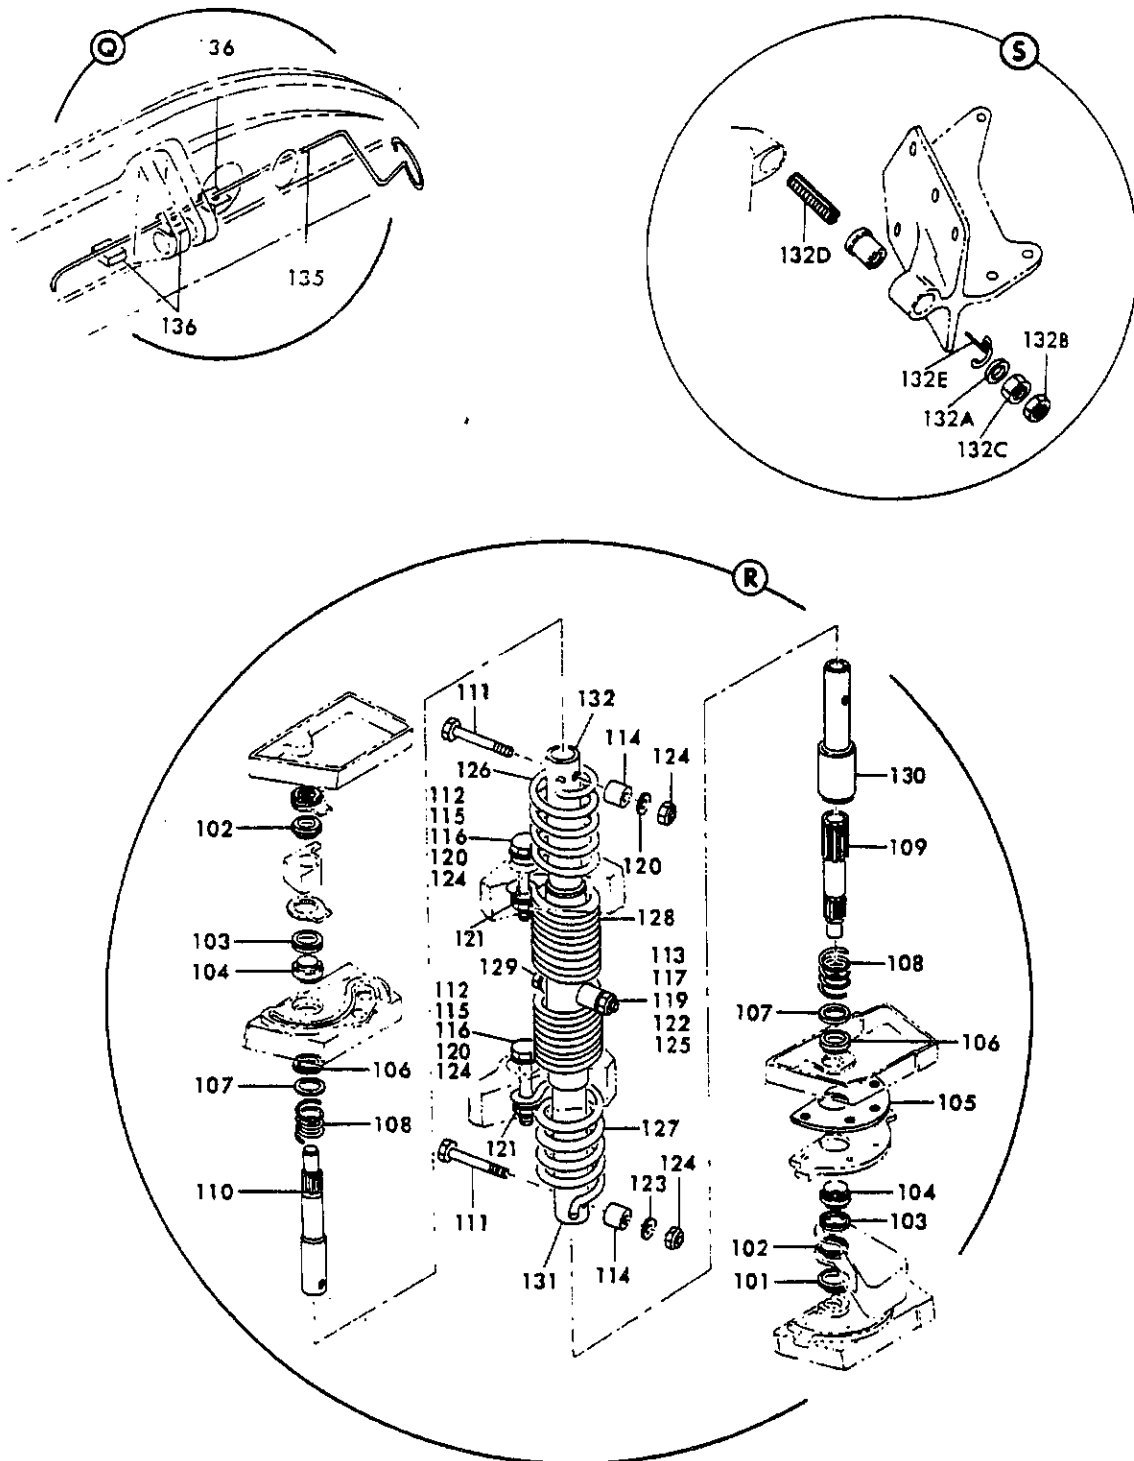


FIGURE 1A. DOOR INSTL, FORWARD ENTRY (DOORS ONLY) (SHEET 6)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1A	50-7945-149	DOOR INSTL, FORWARD ENTRY (DOORS ONLY) (SEE 53-2, FIG. 1, ITEM 18)	5199	RF
1	50-9369-2	. SEAL	5199	1
2	NAS517-4-8	. SCREW	5199	2
3	NAS517-4-9	. SCREW	5199	2
4	AN4-7A	. BOLT	5199	3
5	AN4-6A	. BOLT	5199	4
6	NAS1104-7	. BOLT	5199	1
7	AN960D416	. WASHER	5199	4
8	90-8623	. PLATE, LATCH SUPPORT.	5199	1
9	90-8623-1	. PLATE, LATCH SUPPORT.	5199	1
10	90-8623-3	. PLATE, LATCH SUPPORT.	5199	1
11	90-8623-4	. PLATE, LATCH SUPPORT.	5199	1
12	65-64837-3	. FITTING, UPPER AFT LATCH. (OPTIONAL 65-1760)	5199	1
12	65-1760	. FITTING, UPPER AFT LATCH. (OPTIONAL TO 65-64837-3)	5199	1
13	65-64838-1	. FITTING, LOWER AFT LATCH. (OPTIONALS 65-1761 OR 69-52685-1)	5199	1
13	65-1761	. FITTING, LOWER AFT LATCH. (OPTIONAL TO 65-64838-1)	5199	1
13	69-52685-1	. FITTING, LOWER AFT LATCH. (OPTIONAL 65-64838-1)	5199	1
14	65-64836-7	. FITTING, FORWARD LATCH. (OPTIONAL 65-1762-9)	5199	1
14	65-1762-9	. FITTING, FORWARD LATCH. (OPTIONAL TO 65-64836-7)	5199	1
15	65-64836-2	. FITTING, FORWARD LATCH. (OPTIONALS 65-1762-10 OR 69-52683-2)	5199	1
15	65-1762-10	. FITTING, FORWARD LATCH. (OPTIONAL TO 65-64836-2)	5199	1
15	69-52683-2	. FITTING, FORWARD LATCH. (OPTIONAL TO 65-64836-2)	5199	1
16	60-4428	. DOUBLER, LATCH SUPPORT.	5199	1
17	60-4428-1	. DOUBLER, LATCH SUPPORT.	5199	1
18	50-7945-17	. PLATE ATTACHING PARTS	5199	1
	NAS221-8	. SCREW	5199	3
	NAS686A3	. NUT	5199	3
19	50-7945-18	. PLATE ATTACHING PARTS	5199	1
	NAS221-8	. SCREW	5199	2
	NAS686A3	. NUT	5199	2
20	69-24246-1	. PLATE ASSY, LOWER HINGE STOP. ATTACHING PARTS	5199	1
	NAS1104-6	. BOLT	5199	4
21	69-46724-1	. PLATE ASSY, LOWER HINGE STOP. ATTACHING PARTS	5199	1
	NAS1104-6	. BOLT	5199	4
21A	NAS516-1	. . FITTING	5199	1
21B	69-24246-2	. . PLATE	5199	1
22	NAS1104-6	. BOLT	5199	3
23	BACB30LU4-7	. BOLT	5199	1
24	30-3030-1	. SHIM	5199	AR
25	65-29993-2	. PLATE, GUIDE.	5299	1
25	65-29993-3	. PLATE, GUIDE.	5151	1
26	65-59449-1	. PLATE ASSY, GUIDE ATTACHING PARTS	5199	1
	NAS1104-6	. BOLT	5199	4
27	NAS516-1	. . FITTING	5199	1
28	65-59449-2	. . PLATE	5199	1
29	66-20211-2	. BOLT (OPTIONAL NAS1105-13DW)	5199	1
29	NAS1105-13DW	. BOLT (OPTIONAL TO 66-20211-2)	5199	1
30	AN960PD516	. WASHER	5199	3
31	AN320-5	. NUT	5199	1
32	69-24249-1	. LINK ASSY, RADIUS	5199	1
33	NAS561P3-16	. . PIN	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R	1A 34	63-1015	..	..	..	..	..	..	5199	1
R	35	NAS76A7-006P	..	..	..	..	..	..	5199	1
R	36	NAS77A12-19	..	..	..	..	..	..	5199	1
R	37	69-24249-2	..	..	..	..	..	..	5199	1
R	38	NAS1105-130	..	..	..	..	..	..	5199	2
R	39	AN960PD516	..	..	..	..	..	..	5199	4
R	40	AN320-5	..	..	..	..	..	..	5199	2
R	41	90-10072-2	..	..	..	..	..	..	5199	1
R	41A	BACF3F10R18	..	..	..	..	..	..	5199	2
R	42	66-10905-8	..	..	..	..	..	..	5199	1
R	43	66-10905-9	..	..	..	..	..	..	5199	1
R		NAS517-4-3	..	..	..	..	..	..	5199	4
R	44	AN253-2-187	..	..	..	..	..	..	5199	1
R	45	NAS42DD5-77	..	..	..	..	..	..	5199	1
R	46	66-10901-3	..	..	..	..	..	..	5199	1
R	47	66-10901-4	..	..	..	..	..	..	5199	1
R	48	66-10905-10	..	..	..	..	..	..	5199	1
R	49	66-10905-3	..	..	..	..	..	..	5199	1
R	50	66-10905-4	..	..	..	..	..	..	5199	1
R	51	69-9262-1	..	..	..	..	..	..	5199	1
R	52	69-9262-2	..	..	..	..	..	..	5199	1
R	53	69-9028-5	..	..	..	..	..	..	5199	1
R		69-9028	..	..	..	..	..	..	5199	1
R		69-9029-6	..	..	..	..	..	..	5199	1
R		69-9029	..	..	..	..	..	..	5199	1
R		63-10297	..	..	..	..	..	..	5199	1
R		MS20426A	..	..	..	..	..	..	5199	2
R		NAS42DD4-3A	..	..	..	..	..	..	5199	2
R	56	69-9028-6	..	..	..	..	..	..	5199	1
R	56	69-9028-3	..	..	..	..	..	..	5199	1
R	57	69-9029-7	..	..	..	..	..	..	5199	1
R	57	69-9029-3	..	..	..	..	..	..	5199	1
R		65-14013	..	..	..	..	..	..	5199	2
R	58	65-14013-5	..	..	..	..	..	..	5199	2
R	59	66-4742	..	..	..	..	..	..	5199	2
R	60	66-9201	..	..	..	..	..	..	5199	2
R		NAS514P440-8	..	..	..	..	..	..	5199	8
R		NAS679A04W	..	..	..	..	..	..	5199	8
R		65-3359	..	..	..	..	..	..	5199	1
R	61	65-3359-1	..	..	..	..	..	..	5199	1
R	62	65-3359-3	..	..	..	..	..	..	5199	1
R	63	NAS517-3-00	..	..	..	..	..	..	5199	5
R	64	NAS221-9	..	..	..	..	..	..	5199	15
R	65	NAS221-8	..	..	..	..	..	..	5199	26
R	66	AN960D10	..	..	..	..	..	..	5199	5
R	67	NAS679A3W	..	..	..	..	..	..	5199	5
R		65-3360	..	..	..	..	..	..	5199	1
R	68	65-3360-1	..	..	..	..	..	..	5199	1
R	69	NAS221-8	..	..	..	..	..	..	5199	4
R	70	65-3360-31	..	..	..	..	..	..	5199	1
R	71	65-3360-32	..	..	..	..	..	..	5199	1
R	72	65-3360-38	..	..	..	..	..	..	5199	1
R	73	65-3360-21	..	..	..	..	..	..	5199	1
R	74	65-3103	..	..	..	..	..	..	5199	1
R	75	65-2983	..	..	..	..	..	..	5199	1
R	76	63-8817	..	..	..	..	..	..	5199	1
R	77	NAS221-8	..	..	..	..	..	..	5199	2
R	78	NAS221-9	..	..	..	..	..	..	5199	2
R	79	65-2937-12	..	..	..	..	..	..	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R 1A 79	65-2937-11	. PLATE ASSY, FORWARD CORNER SCUFF. (OPTIONAL TO 65-2937-12)	5199	1
R 80	65-2938-10	. PLATE, AFT CORNER SCUFF (OPTIONAL 65-2938-5 (OPTIONAL AND FOR REPLACEMENT ORDER 65-2938-14))	5199	1
R 80	65-2938-5	. PLATE, AFT CORNER SCUFF (OPTIONAL TO 65-2938-10) (OPTIONAL AND FOR REPLACEMENT ORDER 65-2938-14)	5199	1
R 80	65-2938-14	. PLATE, AFT CORNER SCUFF (OPTIONAL TO AND REPLACEMENT FOR 65-2938-5)	5199	1
R 81	65-2998-3	. PLATE ASSY, SCUFF THRESHOLD	5199	1
R 66-2738		. ANGLE ASSY, THRESHOLD	5199	1
R 66-2738-1		. ANGLE ASSY, THRESHOLD	5199	1
R 82	66-2738-2	. . ANGLE, (USED ON 66-2738)	5199	1
R 83	66-2738-3	. . ANGLE, (USED ON 66-2738-1)	5199	1
R 84	69-24248-7	. COVER ASSY-HINGE ARM, ... (OPTIONAL 69-24248-1)	5199	1
R 84	69-24248-1	. COVER ASSY, HINGE ARM (OPTIONAL TO 69-24248-7)	5199	1
R 85	69-24248-8	. COVER ASSY-HINGE ARM, ... (OPTIONAL 69-24248-2)	5199	1
R 85	69-24248-2	. COVER ASSY, HINGE ARM (OPTIONAL TO 69-24248-8)	5199	1
R 86	BACB30LU4-16	ATTACHING PARTS	5199	2
R 87	BACB30LU3-2	. BOLT.	5199	4
R 88	AN960PD416L	. WASHER.	5199	2
R 89	BACN10B-L4L	. NUT	5199	2
R 90	69-24248-3	. . COVER, (USED ON 69-24248-1)	5199	1
R 91	69-24248-4	. . COVER, (USED ON 69-24248-2)	5199	1
R 92	69-24248-5	. . STIFFNER, (USED ON 69-24248-1)	5199	1
R 93	69-24248-6	. . STIFFNER, (USED ON 69-24248-2)	5199	1
R 94	BACS40R08C08	. SHIM.	5199	4
R 95	BACS40R08C17	. SHIM.	5199	2
R 96	66-10360	. TRACK ASSY, CENTERING	5199	1
R	NAS517-3-3	ATTACHING PARTS	5199	3
R	AN960C10	. SCREW	5199	3
R	NAS679C3W	. WASHER.	5199	3
R		. NUT	5199	3
R 97	65-12353	. SHIM INSTL, GALLEY SEAL	5199	1
R	65-12353-1	. . SHIM, (EXTRUSION NO. BAC1521-585 X LENGTH AS. REQUIRED)	5199	1
R 98	NAS1368N6A	. GROMMET	5199	1
R 100	65-29994-2	. ARM ASSY, GUIDE (SEE FIG. 10)	5151	1
R 100	65-29994-5	. ARM ASSY, GUIDE (SEE FIG. 10)	5299	1
R 101	66-18570-2	. WASHER, THRUST.	5199	AR
R 102	66-18570-1	. WASHER, THRUST.	5199	AR
R 103	66-18312-2	. WASHER, THRUST.	5199	AR
R 104	BACB10A398GCM2	. BEARING	5199	2
R 105	66-18571-1	. SHIM.	5199	AR
R 106	MS29513-210	. PACKING	5199	2
R 107	66-18312-1	. WASHER, THRUST.	5199	AR
R 108	66-18325-1	. SPRING, COMPRESSION	5199	2
R 109	65-86207-9	. SPIGOT. (OPTIONAL 65-86207-6)	5199	1
R 109	65-86207-6	. SPIGOT. (OPTIONAL TO 65-86207-9)	5199	1
R 110	65-86207-7	. SPIGOT. (OPTIONAL 65-86207-4)	5199	1
R 110	65-86207-4	. SPIGOT. (OPTIONAL TO 65-86207-7)	5199	1
R 111	NAS1105-29	. BOLT.	5199	2
R 112	NAS1105-40	. BOLT.	5199	2
R 113	69-45634-1	. BOLT.	5199	1
R 114	NAS430D5-29	. SPACER.	5199	2
R 115	NAS430D5-18	. SPACER.	5199	2
R 116	NAS430D5-14	. SPACER.	5199	2
R 117	NAS430D6-44	. SPACER.	5199	1
R 119	AN960PD616	. WASHER.	5199	1
R 120	BACW10P94D	. WASHER.	5199	AR
R 121	50-7945-130	. WASHER.	5199	2
R 122	BACW10P49AL	. WASHER.	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	1A 123	8ACWLOP95D	.	WASHER.	.	.	.	.	.	5199	1
R	124	8ACN10JC5	.	NUT	.	.	.	.	.	5199	4
R	125	8ACN10JC6	.	NUT	.	.	.	.	.	5199	1
R	126	69-24250-1	.	SPRING.	.	.	.	.	.	5199	1
R			.	(OPTIONAL TO 69-24250-5)	.	.	.	.	.		
R	126	69-24250-5	.	SPRING.	.	.	.	.	.	5199	1
R			.	(OPTIONAL 69-24250-1)	.	.	.	.	.		
R	127	69-24250-3	.	SPRING.	.	.	.	.	.	5199	1
R			.	(OPTIONAL TO 69-24250-6)	.	.	.	.	.		
R	127	69-24250-6	.	SPRING.	.	.	.	.	.	5199	1
R			.	(OPTIONAL 69-24250-3)	.	.	.	.	.		
R	128	69-45538-1	.	SPRING.	.	.	.	.	.	5199	1
R	129	69-47344-2	.	SLEEVE, TORQUE SHAFT.	.	.	.	.	.	5199	1
R	130	69-45230-1	.	SHAFT, EXTENSION LOWER TORQUE	.	.	.	.	.	5199	1
R	131	69-45517-1	.	SHAFT, EXTENSION INTERMEDIATE TORQUE.	.	.	.	.	.	5199	1
R	132	69-45286-1	.	SHAFT, TORQUE	.	.	.	.	.	5199	1
R	132A	AN9600616	.	WASHER.	.	.	.	.	.	5199	18
R	132B	AN316-6R	.	NUT, (USED WITH 66-12687-1)	.	.	.	.	.	5199	18
R	132C	NAS679A6	.	NUT, (USED WITH 66-16691-1)	.	.	.	.	.	5199	18
R	132D	66-12687-1	.	PIN, STOP	.	.	.	.	.	5199	18
R	132E	66-16691-1	.	SPRING, STOP PIN RETAINER	.	.	.	.	.	5199	18
R	133	50-7945-153	.	DOOR ASSY, (REWORKED BY S8 3337) (MAY USE 50-7945-195	.	.	.	.	.	5199	1
R			.	AFTER S8 3337 INCORPORATION) (SEE FIG. 3A)	.	.	.	.	.		
R		65-42052-1	.	KEEPER INSTL, SEAL.	.	.	.	.	.	5199	1
R	134	66-18031-1	.	SPRING, CANTILEVER.	.	.	.	.	.	5199	2
R	135	66-18031-2	.	SPRING, CANTILEVER.	.	.	.	.	.	5199	2
R	136	63-9484	.	CLAMP, SPRING RETAINER.	.	.	.	.	.	5199	12
R		65-69063-1	.	PAD INSTL, NON SLIP	.	.	.	.	.	5199	1
R	137	65-69063	.	PAD	.	.	.	.	.	5199	1
R		69-4831-2	.	BRACKET INSTL, ASSIST HANDLE.	.	.	.	.	.	5199	1
R	138	66-9794	.	BRACKET ASSY.	.	.	.	.	.	5199	1
R			.	ATTACHING PARTS	.	.	.	.	.		
R		NAS221-11	.	SCREW	.	.	.	.	.	5199	4
R			.	-----*	.	.	.	.	.		
			.	FOR REFERENCE TO OTHER DOOR DETAILS, SEE NHA.	.	.	.	.	.	5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

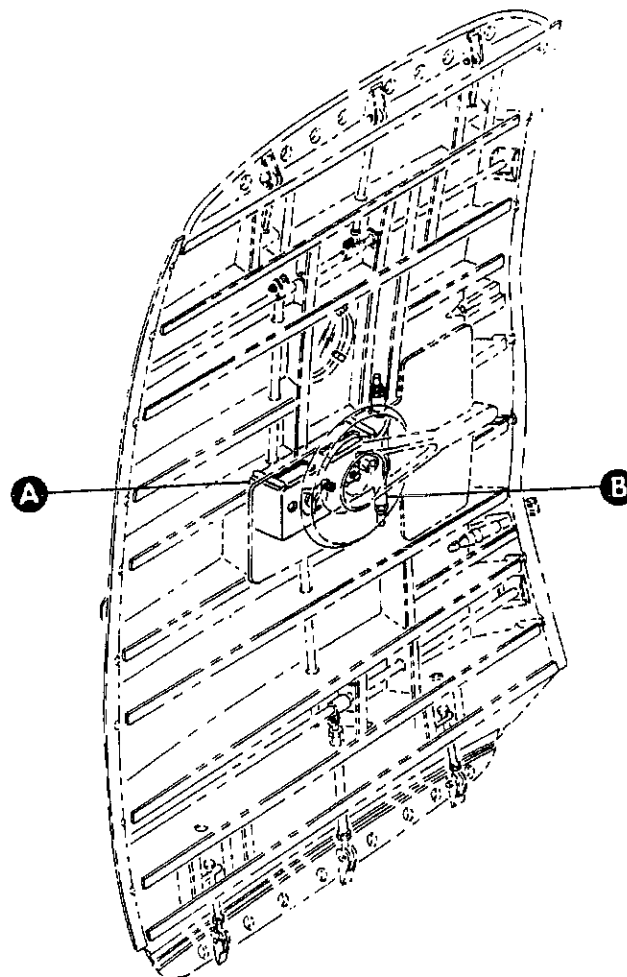
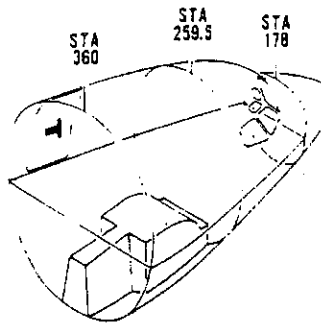


FIGURE 2. SPARES ASSY, FORWARD ENTRY DOOR MECHANISM (SHEET 1)

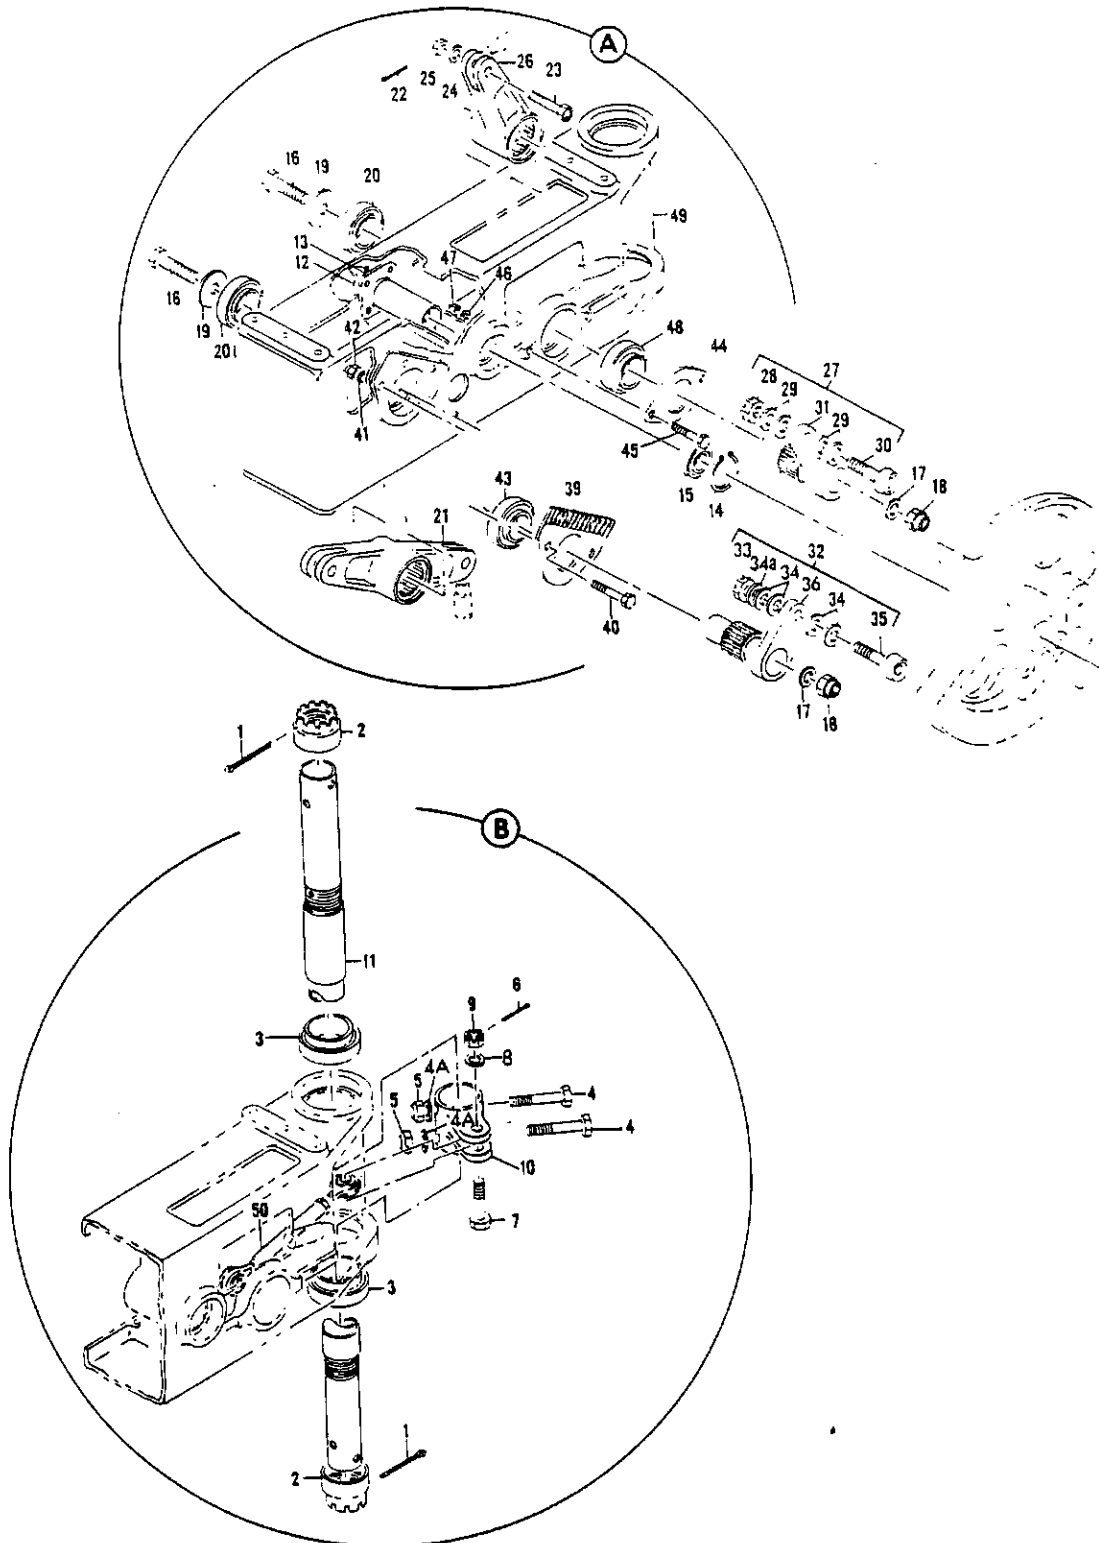


FIGURE 2. SPARES ASSY, FORWARD ENTRY DOOR MECHANISM. (SHEET 2)

NOV 21/90

52-01-2

DETAILED PARTS LIST
52-01-2
PAGE 1

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
2	50-7945-81	SPARES ASSY, FORWARD ENTRY DOOR MECHANISM (SEE FIG. 1, ITEM 96)	0150	RF
1	AN380-4-7	. PIN	0150	2
2	60-4405	. NUT, SPECIAL BEARING RETAINER	0150	2
3	AN202KP25B	. BEARING	0150	2
4	NAS1105-29	. BOLT	0150	2
4A	AN9600516	. WASHER	0150	2
5	BACN10JC5	. NUT	0150	2
6	AN380-2-3	. PIN	0150	1
7	NAS1105-13D	. BOLT	0150	1
8	AN9600516	. WASHER	0150	1
9	AN320-5	. NUT	0150	1
10	60-4366	. CRANK, ENTRY DOOR TORQUE TUBE	0150	1
11	90-6753-1	. TUBE, VERTICAL HINGE TORQUE	0150	1
	90-7820	. HOUSING ASSY, HANDLE MECHANISM	0150	1
12	NAS516-1	. . FITTING	0150	1
13	90-7820-1	. . FITTING, HANDLE MECHANISM HOUSING	0150	1
14	NAS50-162	. RING	0150	1
15	AN201KP12A	. BEARING	0150	1
16	AN4-6A	. BOLT	0150	2
17	AN960-416L	. WASHER	0150	2
18	NAS679A4W	. NUT	0150	2
19	63-1692	. WASHER, ENTRY DOOR MECHANISM	0150	2
20	AN202KP21B	. BEARING	0150	2
21	65-54013	. CRANK ASSY, LATCHING (OPTIONAL 65-1932-2)	0150	1
21	65-1932-2	. CRANK ASSY, LATCHING (OPTIONAL TO 65-54013)	0150	1
21	65-54013-2	. . CRANK, (USED ON 65-54013)	0150	1
21	65-1932	. . CRANK, (USED ON 65-1932-2)	0150	1
22	AN380-2-3	. PIN	0150	1
23	NAS1105-11D	. BOLT	0150	1
24	AN9600516	. WASHER	0150	1
25	AN320-5	. NUT	0150	1
26	65-1933	. CRANK, COCKING (OPTIONAL TO 65-54024-3)	0150	1
26	65-54024-3	. CRANK ASSY, COCKING (OPTIONAL 65-1933)	0150	1
26	65-54024-1	. . CRANK, (USED ON 65-54024-3)	0150	1
27	90-7815-1	. CRANK ASSY, CAM FOLLOWER	0150	1
28	AN320-6	. NUT	0150	1
29	AN960-616L	. . WASHER	0150	4
30	BACB10BH60CF6	. . BEARING (OPTIONAL BACB10AF6F6H)	0150	1
30	BACB10AF6F6H	. . BEARING (OPTIONAL TO BACB10BH60CF6)	0150	1
31	90-7815-3	. . ARM	0150	1
32	69-38733-1	. CRANK ASSY, CAM FOLLOWER (OPTIONAL 90-7815-1)	0150	1
32	90-7815-1	. CRANK ASSY, CAM FOLLOWER (OPTIONAL TO 69-38733-1)	0150	1
33	AN320-6	. . NUT, (USED ON 90-7815-1)	0150	1
33	AN310-6	. . NUT, (USED ON 69-38733-1)	0150	1
34	AN960-616L	. . WASHER, (USED ON 90-7815-1)	0150	4
34	AN960PD616L	. . WASHER, (USED ON 69-38733-1)	0150	4
34A	AN960PD616	. . WASHER, (USED ON 69-38733-1)	0150	1
35	BACB10BH60CF6	. . BEARING, (USED ON 90-7815-1) (OPTIONAL BACB10AF6F6H)	0150	1
35	BACB10AF6F6H	. . BEARING, (USED ON 90-7815-1) (OPTIONAL TO BACB10BH60CF6)	0150	1
35	BACB10BH60F9	. . BEARING, (USED ON 69-38733-1)	0150	1
36	90-7815-3	. . ARM, (USED ON 90-7815-1)	0150	1
36	69-38733-2	. . ARM, (USED ON 69-38733-1)	0150	1
39	63-1058	. RETAINER, ENTRY DOOR LATCHING MECHANISM BEARING ATTACHING PARTS	0150	1
40	AN3-5A	. BOLT	0150	2
41	NAS1197-10	. WASHER	0150	2
42	NAS679A3W	. NUT	0150	2
43	AN202KP23B	. BEARING	0150	1
44	63-1059	. RETAINER, ENTRY DOOR LATCHING MECHANISM BEARING ATTACHING PARTS	0150	1
45	AN3-7A	. BOLT	0150	2
46	NAS1197-10	. WASHER	0150	2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING **707** *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	2 47	NA5679A3W	.	NUT	0150	2
			-----*			
R	48	AN202KP238	.	BEARING	0150	1
R	49	65-1642-1	.	HOUSING ASSY, ENTRY DOOR HANDLE MECHANISM	0150	1
R	50	60-7208	.	ROD ASSY, ENTRY DOOR COCKING PUSH (SEE FIG. 8)	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

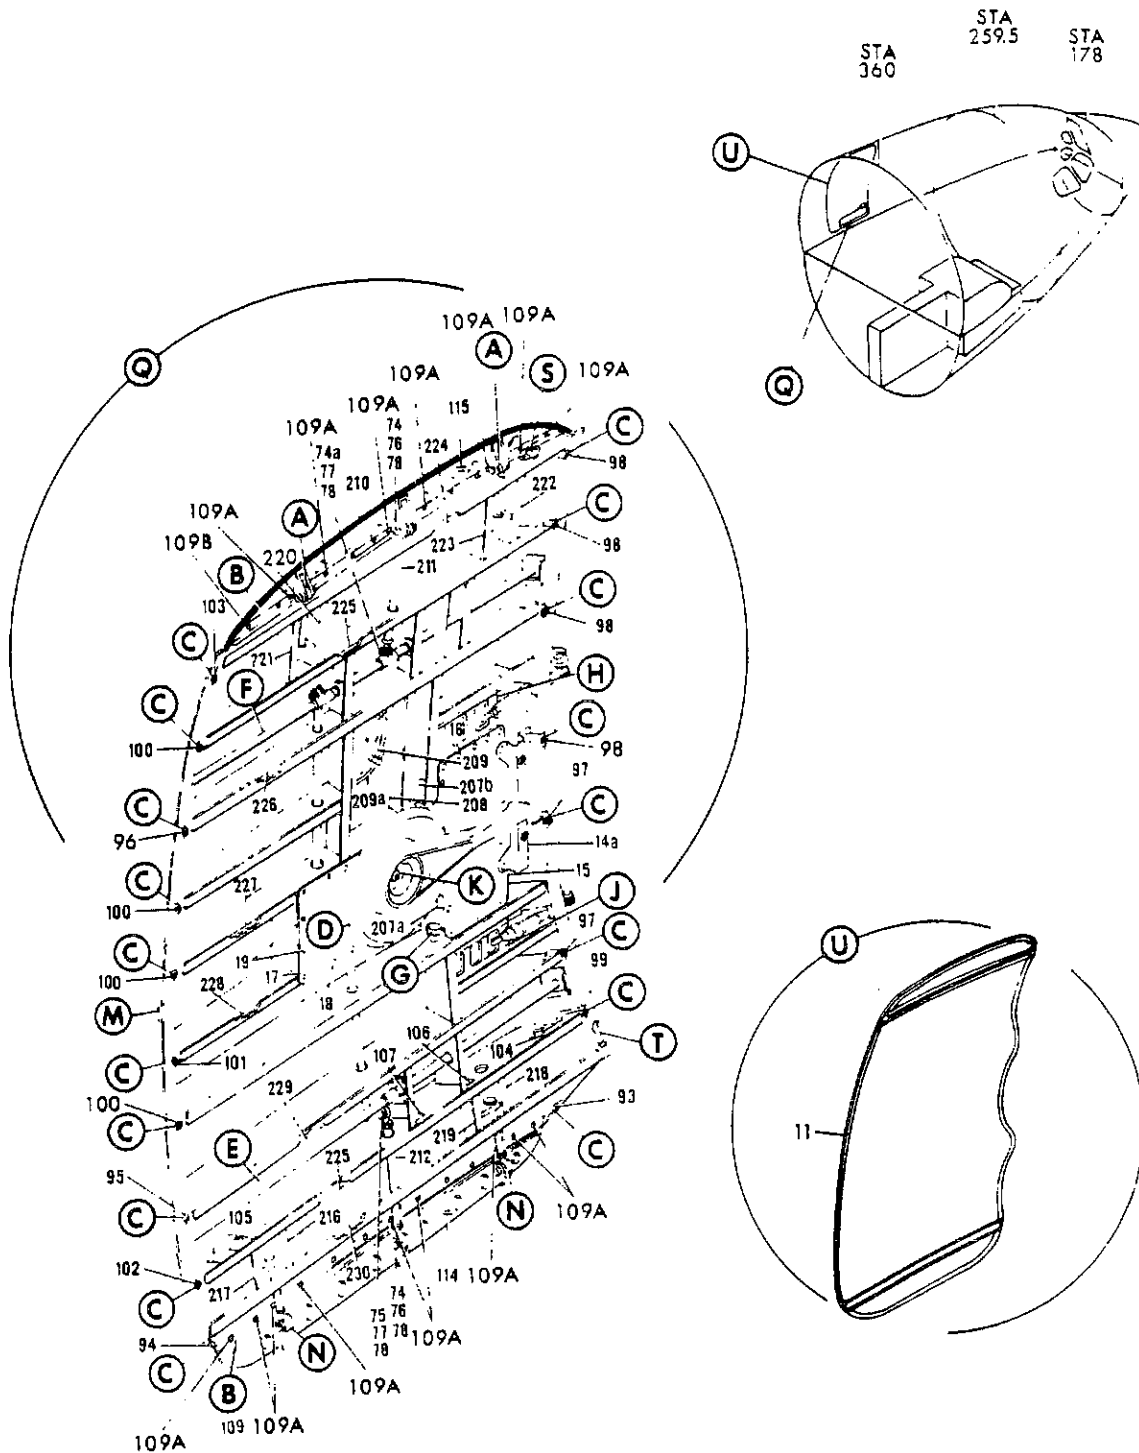


FIGURE 3. DOOR INSTL, FORWARD ENTRY (SHEET 1)

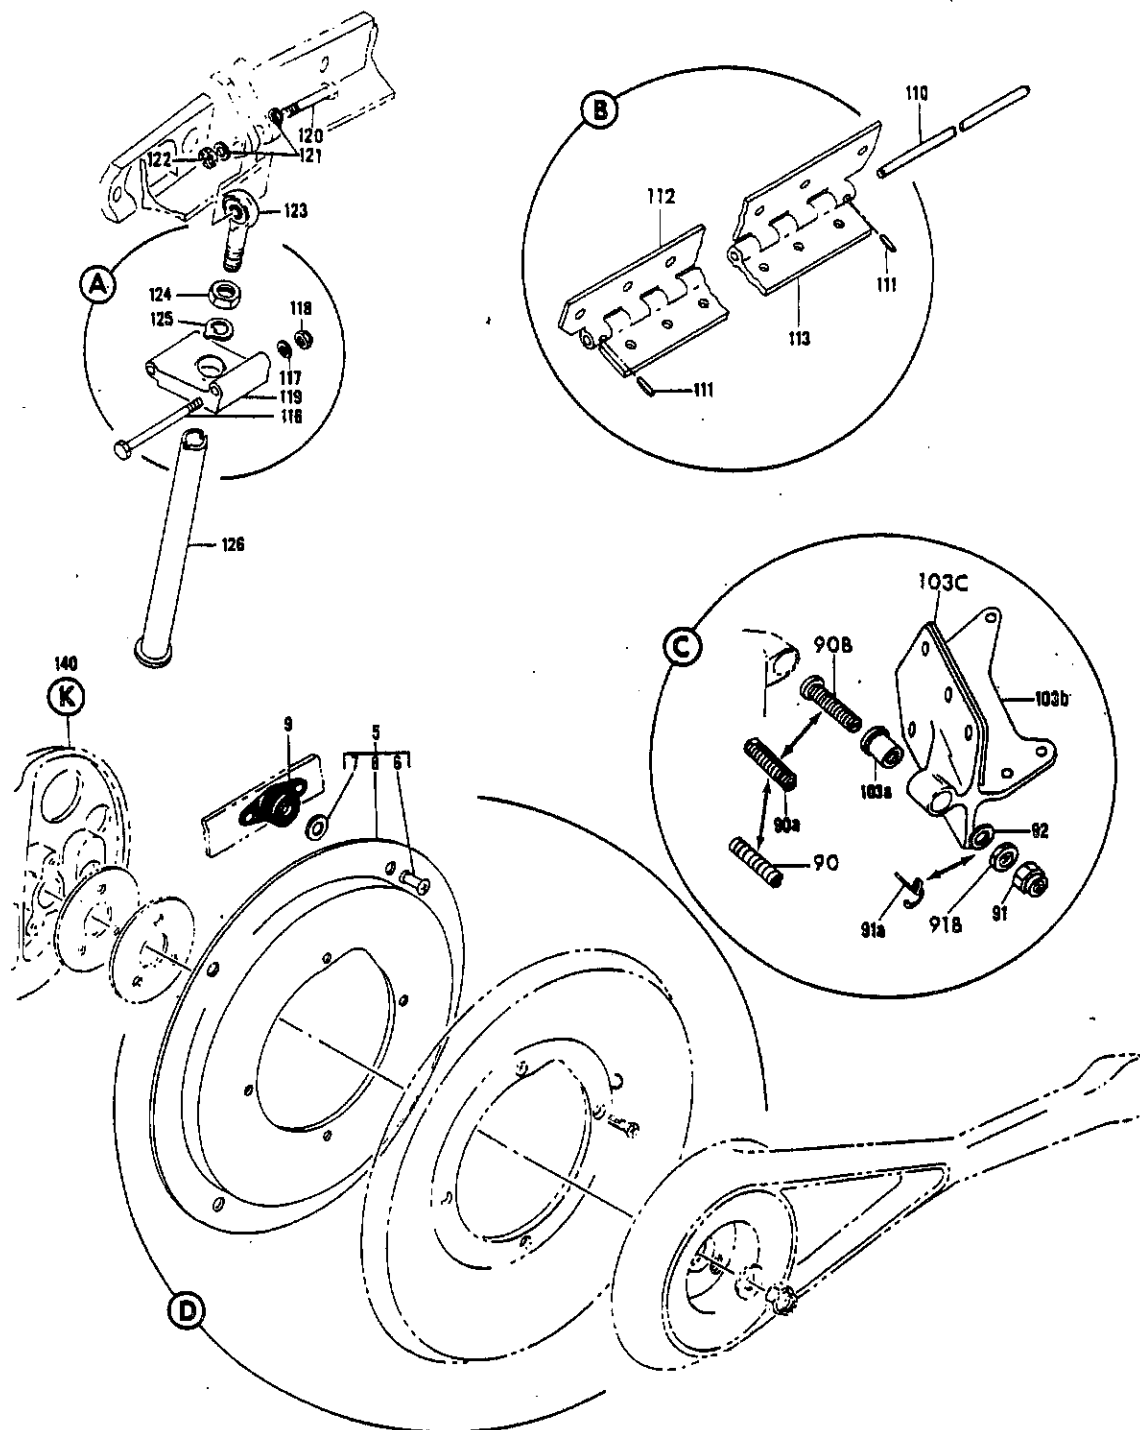


FIGURE 3. DOOR ASSY, FORWARD ENTRY (SHEET 2)

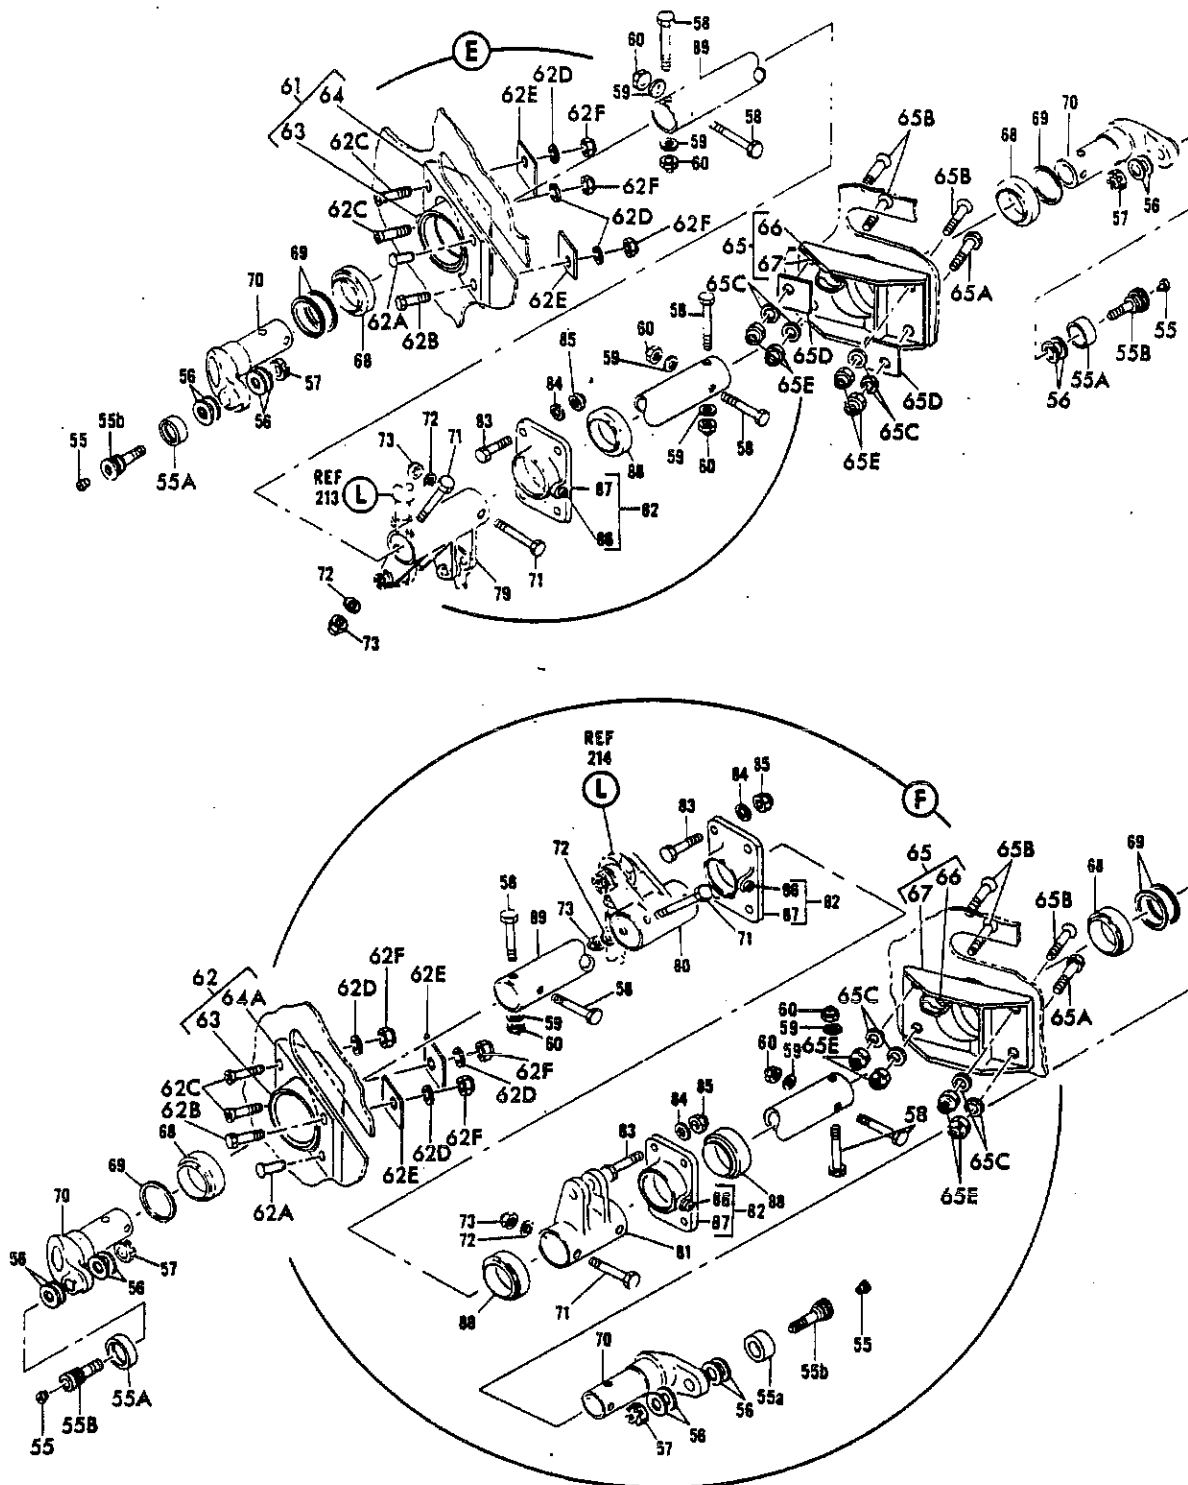


FIGURE 3. DOOR ASSY, FORWARD ENTRY (SHEET 3)

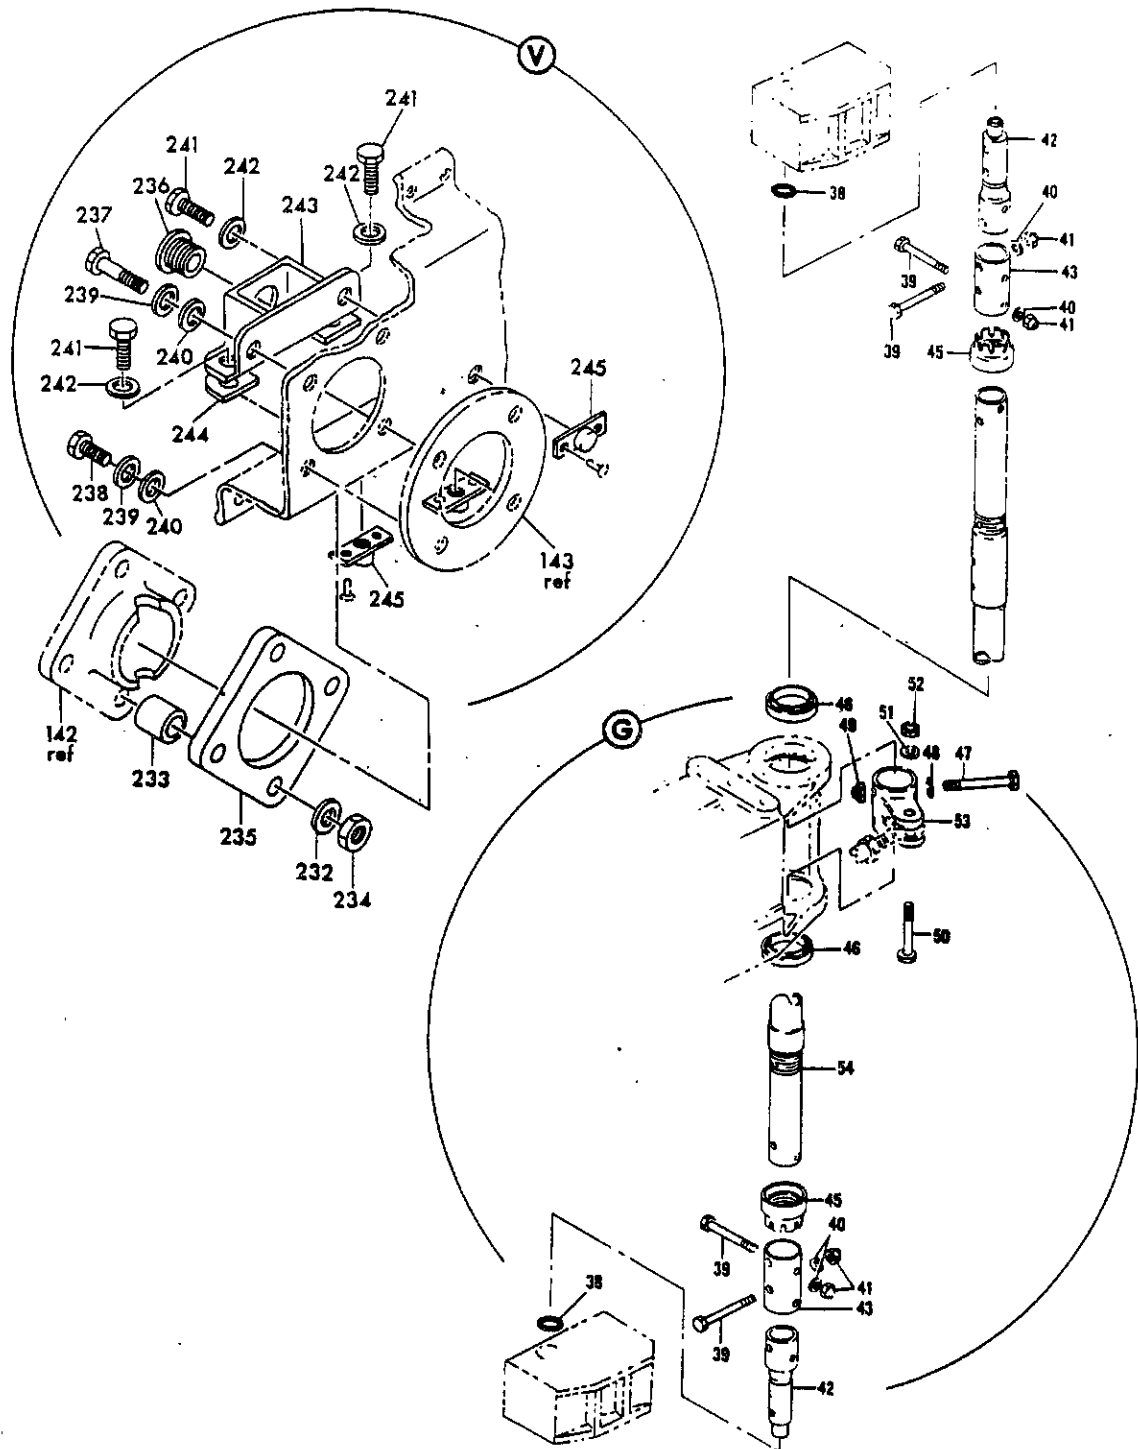


FIGURE 3. DOOR ASSY, FORWARD ENTRY (SHEET 4)

NOV 21/90

52-01-3

DETAILED PARTS LIST
52-01-3
PAGE 3

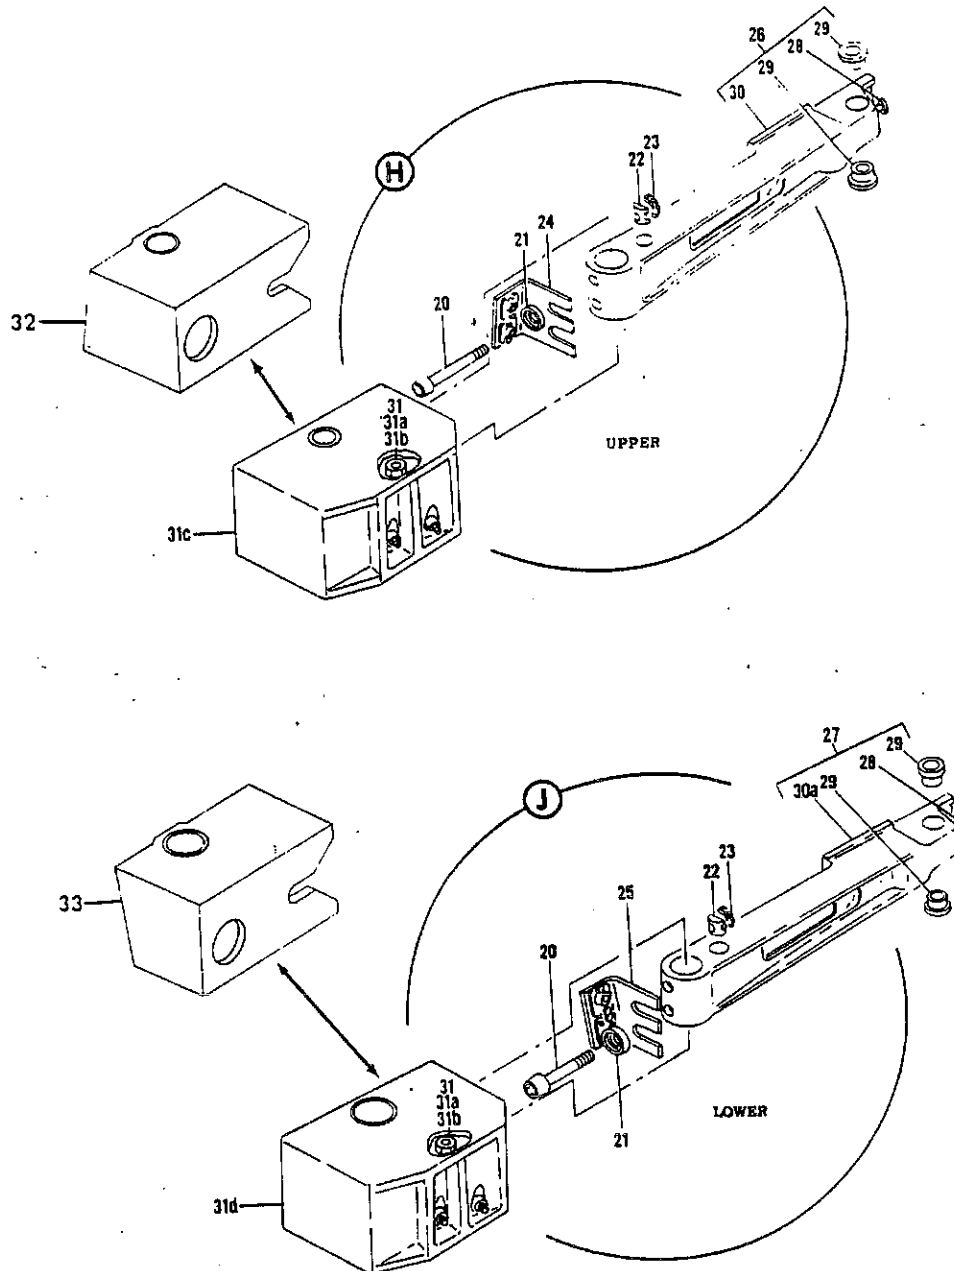


FIGURE 3. DOOR ASSY, FORWARD ENTRY (SHEET 5)

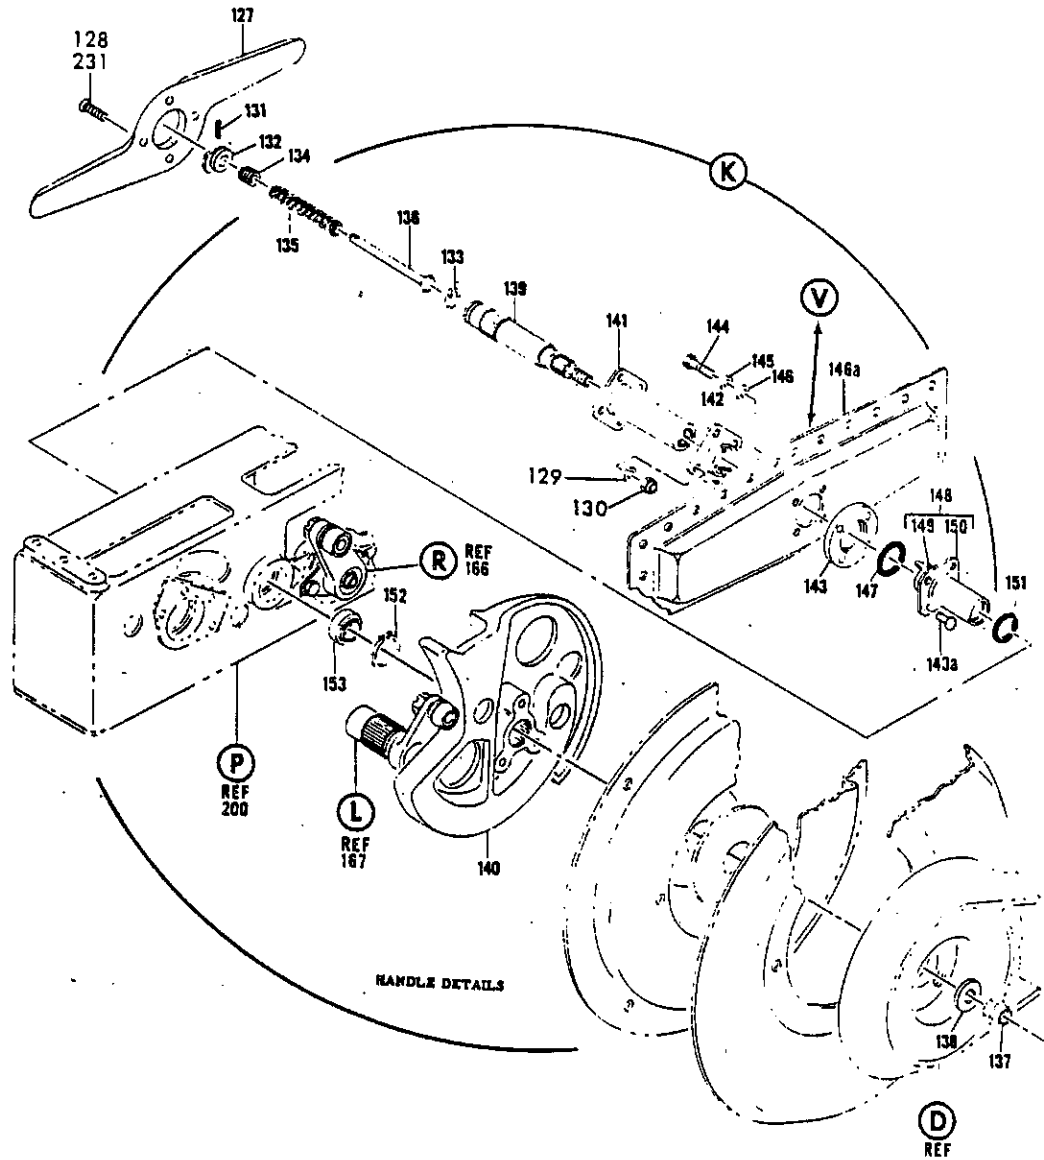


FIGURE 3. DOOR ASSY, FORWARD ENTRY (SHEET 6)

NOV 21/90

52-01-3

DETAILED PARTS LIST
52-01-3
PAGE 5

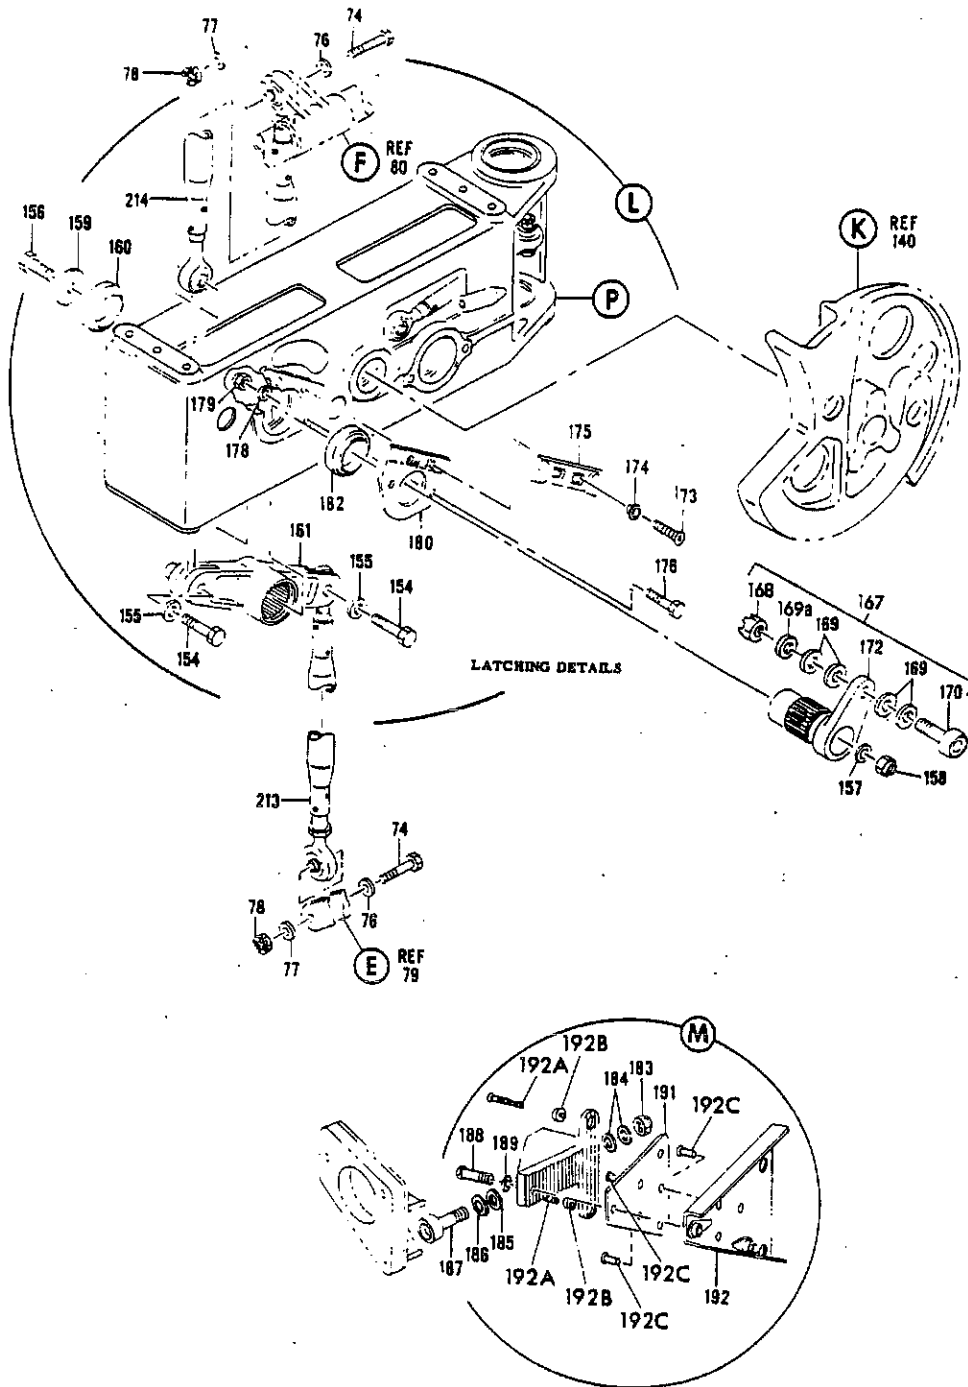


FIGURE 3. DOOR ASSY, FORWARD ENTRY (SHEET 7)

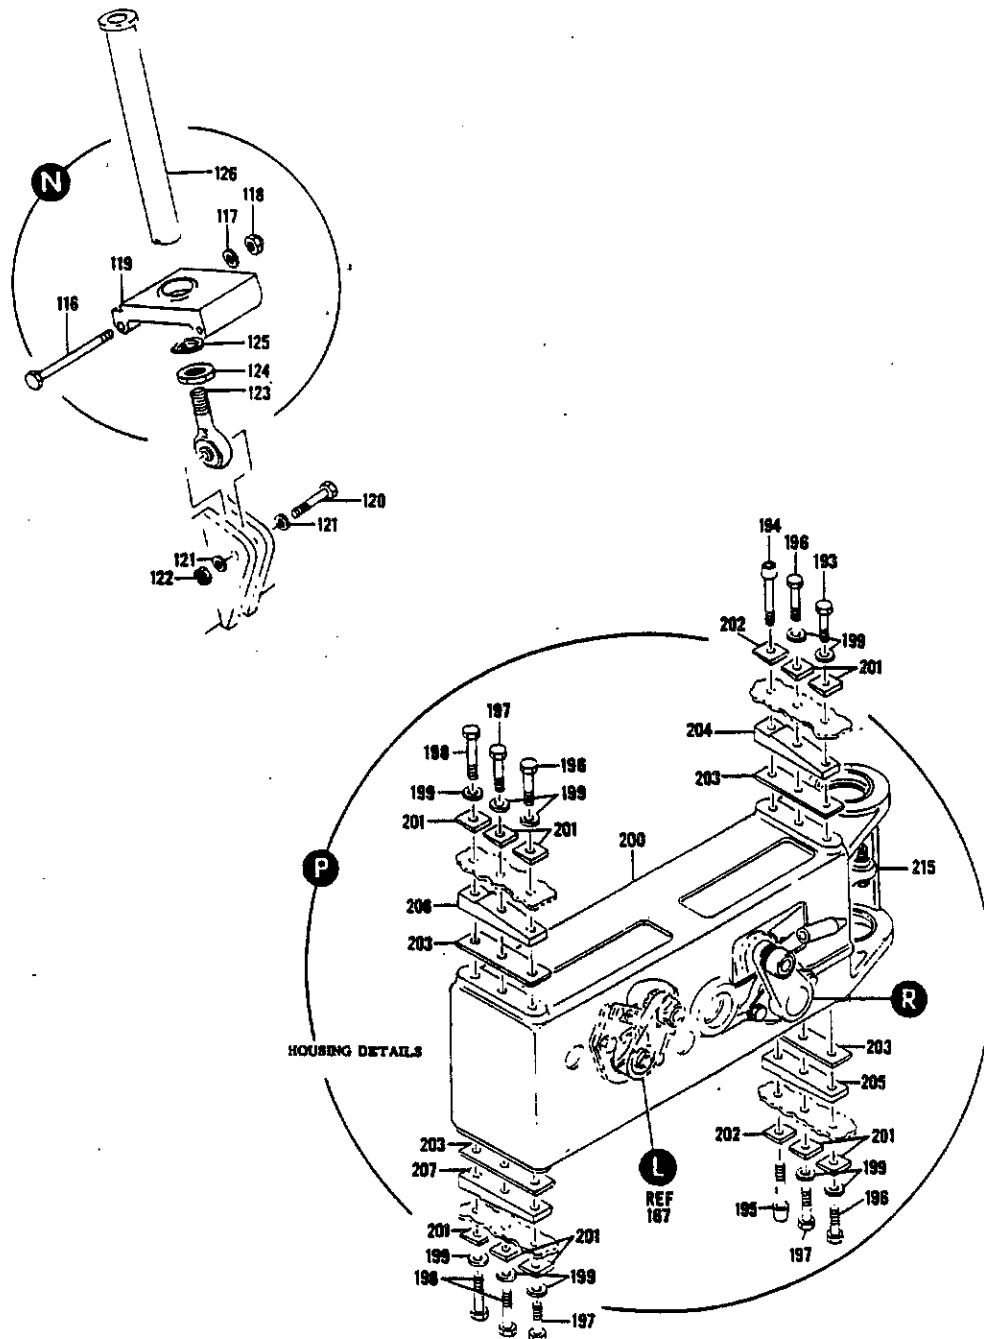


FIGURE 3. DOOR ASSY, FORWARD ENTRY (SHEET 8)

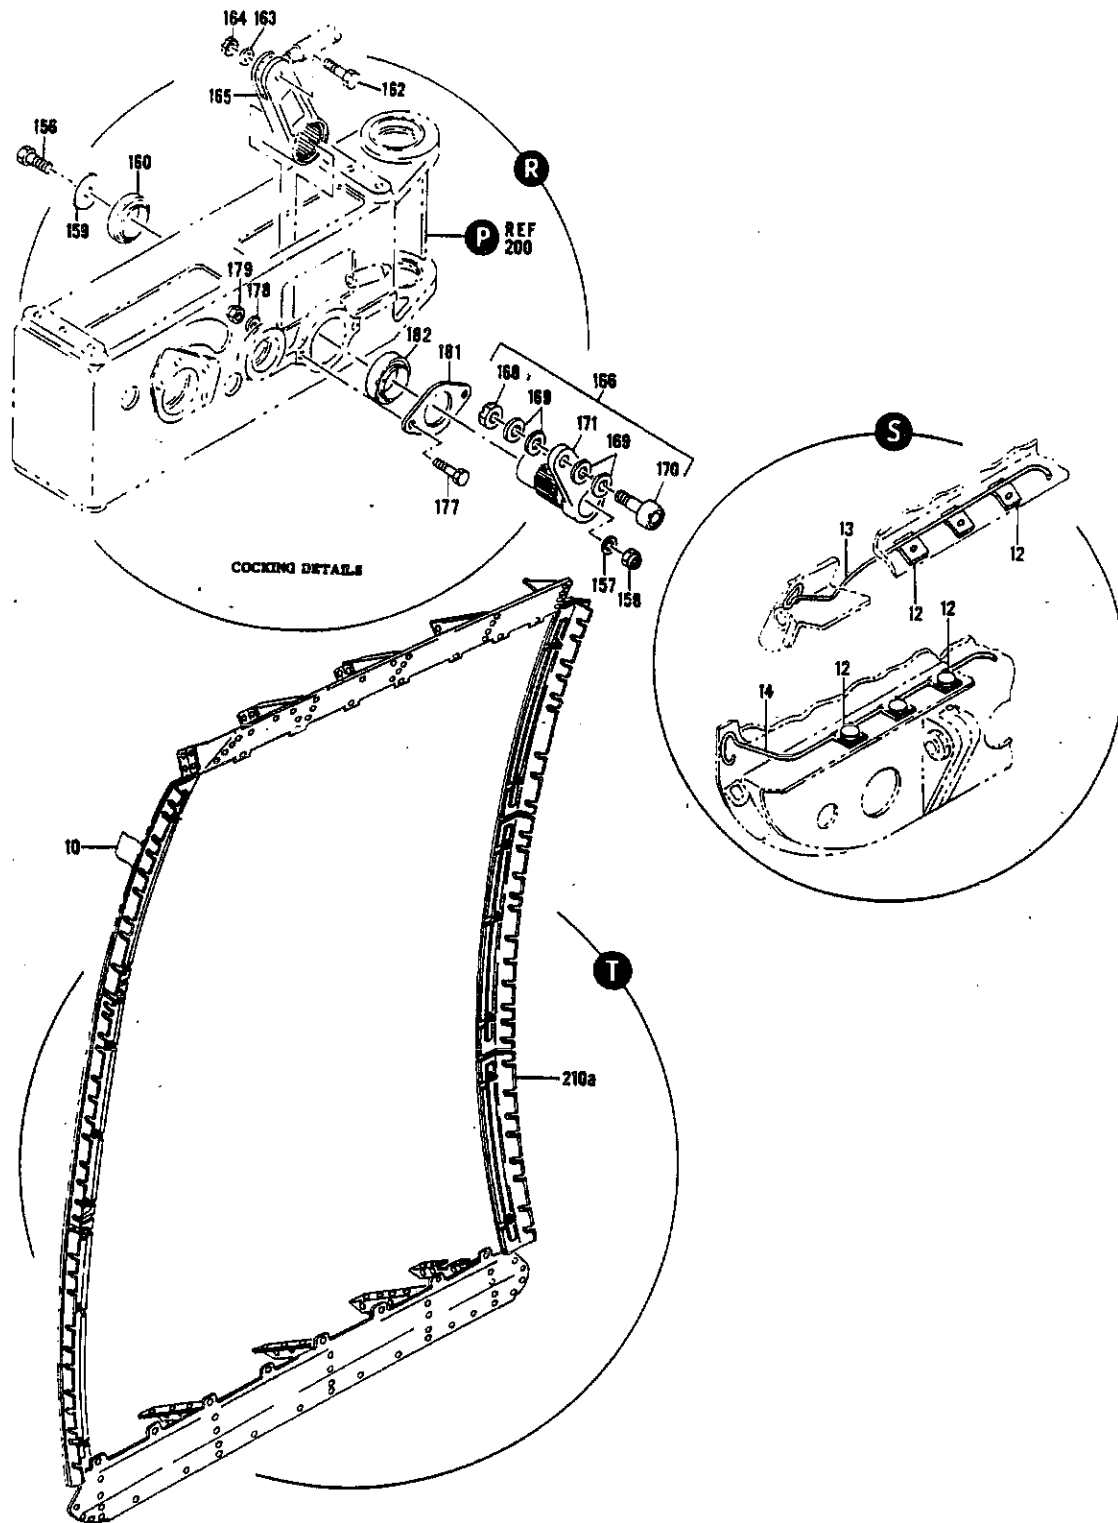


FIGURE 3. DOOR ASSY, FORWARD ENTRY (SHEET 9)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3	50-7945-1	DOOR ASSY, FORWARD ENTRY (SEE FIG. 1 ITEM 96) (FOR REPLACEMENT ORDER 50-7945-88) (DELETED BY SB 3337)	0103	RF
	50-7945-88	DOOR ASSY, FORWARD ENTRY (SEE FIG. 1 ITEM 96) (REPLACEMENT FOR 50-7945-1) (DELETED BY SB 3337)	0103	RF
	50-7945-195	DOOR ASSY, FORWARD ENTRY (SEE FIG. 1 ITEM 96) (ADDED BY SB 3337)	0103	RF
	50-7945-1	DOOR ASSY, FORWARD ENTRY (REWORKED BY SB 3337) (MAY . . USE 50-7945-195 AFTER SB 3337 INCORPORATION) (SEE FIG. 1, ITEM 96)	0450	RF
	50-7945-88	DOOR ASSY, FORWARD ENTRY (REWORKED BY SB 3337) (MAY . . USE 50-7945-195 AFTER SB 3337 INCORPORATION) (SEE FIG. 1, ITEM 96) (REPLACEMENT FOR 50-7945-1)	0450	RF
	90-7826-2	. RETAINER ASSY, LINING	0150	1
	2-0-180	. . STUD, (V24248)	0150	4
	GSR2-93	. . GROMMET, (V94222)	0150	4
	90-7826-4	. . RETAINER	0150	1
	10-60124	. FASTENER ASSY, CABIN SOUND PROOFING (OPTIONAL TO 10-60831-7)	0150	4
	10-60831-7	. FASTENER ASSY, CABIN SOUND PROOFING (OPTIONAL 10-60124)	0150	4
	MS20426D5	ATTACHING PARTS . RIVET	0150	8
	AN7510-1	. PLATE	0150	1
	50-9369-2	. SEAL, (USED ON 50-7945-88)	0150	1
	65-42052-1	. KEEPER INSTL, SEAL (USED ON 50-7945-88)	0150	1
	63-9484	. . CLAMP, SPRING RETAINER	0150	6
	66-18031-1	. . SPRING, SEAL KEEPER CANTILEVER	0150	1
	66-18031-2	. . SPRING, SEAL KEEPER CANTILEVER	0150	1
	65-27472-2	. BRACKET INSTL, ASSIST HANDLE (USED ON 50-7945-88)	0150	1
	69-20200-5	. . BRACKET ASSY, ENTRY DOOR ASSIST HANDLE (USED ON . . 65-27472-2)	0150	1
	NAS221-11	ATTACHING PARTS . . SCREW	0150	4
	NAS679A3W	. . NUT, (USED ON 65-27472-2)	0150	2
	50-7945-35	. PANEL, MECHANICAL ACCESS.	0150	1
	NAS221-6	ATTACHING PARTS . SCREW	0150	14
	50-7945-36	. PANEL, MECHANICAL ACCESS.	0150	1
	NAS221-10	ATTACHING PARTS . SCREW	0150	6
	NAS221-6	. SCREW	0150	2
	MS20004-24	. BOLT, (USED WITH 50-8294-5 AND -10)	0102	4
	NAS1304-27	. BOLT, (USED WITH 50-8294-15 AND -18)	0150	4
	MS20002C4	. WASHER, (USED WITH 50-8294-5 AND -10)	0150	4
	AN960PD416L	. WASHER, (USED WITH 50-8294-15 AND -18)	0150	4
	BACN10EU4	. NUT, (USED WITH 50-8294-5 AND -10)	0150	4
	BACN10HC4	. NUT, (USED WITH 50-8294-15 AND -18)	0150	4
	BACR10W4	. RETAINER, (USED WITH 50-8294-5 AND -10)	0150	4
	BACR10V4	. RETAINER, (USED WITH 50-8294-15 AND -18)	0150	4
	60-4474-7	. CLIP ASSY, HINGE COVER ATTACH (USED WITH 50-8294-5)	0150	1
	60-4474-9	. CLIP ASSY, HINGE COVER ATTACH (USED WITH 50-8294-15)	0150	1
	60-4474-8	. CLIP ASSY, HINGE COVER ATTACH (USED WITH 50-8294-10)	0150	1
	60-4474-10	. CLIP ASSY, HINGE COVER ATTACH (USED WITH 50-8294-18)	0150	1
	50-8294-5	. ARM ASSY, HINGE (UPPER) (USED WITH MS20004-24, ... NAS1304-24, MS20002C4, BACN10EU4, BACR10W4 AND 60-4474-7) (USED ON 50-7945-1) (FOR REPLACEMENT ORDER 50-8294-15)	0150	1
	50-8294-15	. ARM ASSY, HINGE (UPPER) (USED WITH NAS1304-27, ... AN960PD416L, BACN10HC4, BACR10V4 AND 60-4474-9) (USED ON 50-7945-1) (REPLACEMENT FOR 50-8294-5)	0150	1
	50-8294-5	. ARM ASSY, HINGE (UPPER) (USED ON 50-7945-88)	0150	1
	50-8294-10	. ARM ASSY, HINGE (LOWER) (USED WITH MS20004-24, ... NAS1304-24, MS20002C4, BACN10EU4, BACR10W4 AND 60-4474-8) (USED ON 50-7945-1) (FOR REPLACEMENT ORDER 50-8294-18)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF	UNITS
			FROM TO	PER ASSY
R 3 27	50-8294-18	. ARM ASSY, HINGE (LOWER) (USED WITH NAS1304-27, ... AN960PD416L, BACN10HC4, BACR10V4 AND 60-4474-10) (USED ON 50-7945-1) (REPLACEMENT FOR 50-8294-10)	0150	1
R 27	50-8294-10	. ARM ASSY, HINGE (LOWER) (USED ON 50-7945-88).	0150	1
R 28	NAS516-1	. FITTING	0150	1
R 29	NAS77A7-32	. BUSHING	0150	2
R 30	50-8294-11	. ARM, HINGE (UPPER).	0150	1
R 30A	50-8294-14	. ARM, HINGE (LOWER).	0150	1
R 31	NAS1105-13D	. BOLT.	0150	2
R 31B	AN320-5	. NUT	0150	2
R 31C	69-22323-9	. SUPPORT ASSY, FORWARD ENTRY DOOR HINGE (UPPER) (SEE FIG. 12)	0150	1
R 31D	69-22323-10	. SUPPORT ASSY, FORWARD ENTRY DOOR HINGE (LOWER) (SEE FIG. 12)	0150	1
R	AN3-5A	ATTACHING PARTS		
R	AN960D10	. BOLT.	0150	30
R	NAS679A3W	. WASHER.	0150	30
		. NUT	0150	30
R 38	AN6227-15	. PACKING	0150	2
R 39	NAS1104-26	. BOLT.	0150	8
R 40	AN960D416	. WASHER.	0150	8
R 41	NAS679A4W	. NUT	0150	8
R 42	60-4364	. PIN, HINGE.	0150	2
R 43	60-4365	. SLEEVE, TORQUE TUBE COUPLING.	0150	2
R 45	60-4405	. NUT, SPECIAL BEARING RETAINER	0150	2
R 46	AN202KP25B	. BEARING	0150	2
R 47	NAS1105-29	. BOLT.	0150	2
R 48	AN960D516	. WASHER.	0150	2
R 49	NAS679A5	. NUT	0150	2
R 50	NAS1104-13D	. BOLT.	0150	1
R 51	AN960D516	. WASHER.	0150	1
R 52	AN320-5	. NUT	0150	1
R 53	60-4366	. CRANK, TORQUE TUBE.	0150	1
R 54	90-6753-1	. TUBE, VERTICAL HINGE TORQUE	0150	1
R	69-48008	. ROLLER ASSY, ENTRY DOOR	0150	4
R 55	NAS516-1	. FITTING, LUBRICATION.	0150	1
R 55A	69-48008-2	. ROLLER.	0150	1
R 55B	69-48008-1	. STUD, ROLLER.	0150	1
R 56	AN960-516L	. WASHER.	0150	16
R 57	AN320-5	. NUT	0150	4
R 58	NAS1103-16	. BOLT.	0150	8
R 59	AN960D10	. WASHER.	0150	8
R 60	NAS679A3W	. NUT	0150	8
R 61	65-2047-7	. FITTING ASSY, AFT LATCH CRANK SUPPORT	0150	1
R 62	65-2047-8	. FITTING ASSY, AFT LATCH CRANK SUPPORT	0150	1
R	62A	ATTACHING PARTS		
R	62B	. RIVET	0150	2
R	62C	. BOLT.	0150	2
R	62D	. SCREW	0150	4
R	62E	. WASHER.	0150	6
R	62F	. SHIM.	0150	AR
		. NUT	0150	6
R 63	NAS516-1	. FITTING	0150	1
R 64	65-2047-9	. FITTING, (USED ON 65-2047-7).	0150	1
R 64A	65-2047-10	. FITTING, (USED ON 65-2047-8).	0150	1
R 65	65-2048-2	. FITTING ASSY, FORWARD LATCH CRANK SUPPORT	0150	2
R	65A	ATTACHING PARTS		
R	65B	. BOLT.	0150	2
R	65C	. SCREW	0150	6
R	65D	. WASHER.	0150	8
R	65E	. SHIM.	0150	AR
		. NUT	0150	8
R 66	NAS516-1	. FITTING	0150	1
R 67	65-2048-3	. FITTING	0150	1
R 68	BACB10A397GCM2	. BEARING	0150	4
R 69	30-3004	. WASHER, LATCH MECHANISM	0150	AR
R 70	90-10001-1	. CRANK, ROLLER CAM	0150	4
R		(OPTIONAL TO 69-37418-3)		
R 70	69-37418-3	. CRANK, ROLLER CAM	0150	4
R		(OPTIONAL 90-10001-1)		

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 3	71	NAS1103-18	BOLT.	0150 6
R	72	AN960D10	WASHER.	0150 6
R	73	NAS679A3W	NUT.	0150 6
R	74	NAS1104-130	BOLT.	0150 4
R	74A	NAS1104-11D	BOLT.	0150 1
R	75	NAS1104-100	BOLT.	0150 1
R	76	BACW10T416A	WASHER.	0150 4
R	77	AN960D416	WASHER.	0150 4
R	78	AN320-4	NUT.	0150 6
R	79	90-7825-2	CRANK, LOWER GATE AND LATCH TORQUE TUBE	0150 1
R	80	60-4409	CRANK, TORQUE TUBE LATCH.	0150 1
R	81	60-4431	CRANK, UPPER GATE TORQUE TUBE	0150 1
R	82	65-2306	HOUSING ASSY, DOOR CAM SHAFT.	0150 3
		ATTACHING PARTS		
R	83	AN3-3A	BOLT.	0150 12
R	84	AN960D10	WASHER.	0150 12
R	85	NAS679A3W	NUT.	0150 12
		-----*		
R	86	NAS516-1	FITTING.	0150 1
R	87	65-2306-1	HOUSING.	0150 1
R	88	BACB10A397GCM2	BEARING.	0150 3
R	89	60-4406	TUBE, ENTRY DOOR LATCH ACTUATOR TORQUE.	0150 2
R	90A	66-12687-1	PIN, DOOR STOP.	0150 18
R	91	NAS679A6	NUT.	0150 18
R	91A	66-16691-1	SPRING, DOOR STOP PIN RETAINER.	0150 18
R	91B	AN316-6R	NUT.	0150 18
R	92	AN960D616	WASHER.	0150 18
R	93	50-9758-7	FITTING ASSY, STRINGER 16 FORWARD STOP.	0150 1
R	94	50-9759-8	FITTING ASSY, STRINGER 16 AFT STOP (DELETED BY SB	0103 1
		3281)		
R	94	65-95479-2	FITTING ASSY, STRINGER 16 AFT STOP (ADDED BY SB 3281)	0150 1
R		(OPTIONAL 65-95479-3)		
R	94	65-95479-3	FITTING ASSY, STRINGER 16 AFT STOP (ADDED BY SB 3281)	0150 1
R		(OPTIONAL TO 65-95479-2)		
R	95	69-1948-5	FITTING ASSY, STRINGER 14 AFT STOP.	0150 1
R	96	69-1949-5	FITTING ASSY, STRINGER 9 AFT STOP.	0150 1
R	97	90-7804-7	FITTING ASSY, STRINGER 7 THRU 14 FORWARD STOP.	0150 2
R	98	90-7804-8	FITTING ASSY, STRINGER 7 THRU 14 FORWARD STOP.	0150 4
R	99	90-7805-3	FITTING ASSY, STRINGER 15 FORWARD STOP.	0150 1
R	100	90-7807-7	FITTING ASSY, STRINGER 8 THRU 13 STOP.	0150 4
R	101	90-7807-8	FITTING ASSY, STRINGER 8 THRU 13 AFT STOP.	0150 1
R	102	90-7808-3	FITTING ASSY, STRINGER 15 AFT STOP.	0150 1
R	103	65-2122-4	FITTING ASSY, STRINGER 7 AFT STOP.	0150 1
R	103A	66-12688-1	BUSHING, DOOR STOP.	0150 1
R	103B	50-9758-6	FITTING, STRINGER 16 FORWARD STOP (USED ON.	0150 1
		50-9758-7)		
R	103B	69-1948-6	FITTING, STRINGER 14 AFT STOP (USED ON 69-1948-5).	0150 1
R	103B	69-1949-6	FITTING, STRINGER 9 AFT STOP (USED ON 69-1949-5).	0150 1
R	103B	90-7804-9	FITTING, STRINGER 7 THRU 14 FORWARD STOP (USED ON.	0150 1
		90-7804-7)		
R	103B	90-7804-10	FITTING, STRINGER 7 THRU 14 FORWARD STOP (USED ON.	0150 1
		90-7804-8)		
R	103B	90-7805-4	FITTING, STRINGER 15 FORWARD STOP (USED ON.	0150 1
		90-7805-3)		
R	103B	90-7807-9	FITTING, STRINGER 8 THRU 13 STOP (USED ON.	0150 1
		90-7807-7)		
R	103B	90-7807-10	FITTING, STRINGER 8 THRU 13 AFT STOP (USED ON.	0150 1
		90-7807-8)		
R	103B	90-7808-4	FITTING, STRINGER 15 AFT STOP (USED ON 90-7808-3).	0150 1
R	103B	65-2122-5	FITTING, (USED ON 65-2122-4).	0150 1
R	103C	65-80053-4	SHIM, (USED WITH 50-9758, -5 AND -7).	0150 AR
R	103C	65-80053-5	SHIM, (USED WITH 50-9758, -5 AND -7).	0150 AR
R	103C	65-80053-2	SHIM, (USED WITH 50-9759, -6 AND -8).	0150 AR
R	103C	65-80053-3	SHIM, (USED WITH 50-9759, -6 AND -8).	0150 AR
R	103C	65-80053-7	SHIM, (USED WITH 69-1948-2, -4 AND -5).	0150 AR
R	103C	65-80053-8	SHIM, (USED WITH 69-1949-2, -4 AND -5).	0150 AR
R	103C	65-80053-6	SHIM, (USED WITH 90-7804-1, -2, -5, -6, -7 AND -8).	0150 AR
R	103C	65-80053-9	SHIM, (USED WITH 90-7805, -2 AND -3).	0150 AR
R	103C	65-80053-10	SHIM, (USED WITH 90-7807-1, -2, -5, -6, -7 AND -8).	0150 AR
R	103C	65-80053-11	SHIM, (USED WITH 90-7808, -2 AND -3).	0150 AR
R	103C	65-80053-1	SHIM, (USED WITH 65-2122, -3, -4 AND 65-51276-4).	0150 AR
R	104	60-4413-1	CLIP, STOP FITTING.	0150 1
R	105	60-4413-2	CLIP, STOP FITTING.	0150 1
R	106	60-4413-3	CLIP, STOP FITTING.	0150 1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	3	107	60-4413-4	.	CLIP, STOP FITTING.	.	.	.	.	0150	1
R		108	90-7816	.	HINGE ASSY, GATE.	.	.	.	.	0150	1
R		109	90-7816-1	.	HINGE ASSY, GATE.	.	.	.	.	0150	1
				.	ATTACHING PARTS	.	.	.	.		
R	109A	NAS517-3-2	.	SCREW	.	.	.	.	.	0150	25
R	109B	NAS517-3-5	.	SCREW	.	.	.	.	.	0150	1
				.	-----*	.	.	.	.		
R	110	AN253-2-3220	.	PIN	.	.	.	.	.	0150	1
R	111	NAS561P3-5	.	PIN	.	.	.	.	.	0150	2
R	112	90-7816-6	.	HINGE-HALF, (USED ON 90-7816)	.	.	.	.	.	0150	1
R	112	90-7816-5	.	HINGE-HALF, (USED ON 90-7816-1)	.	.	.	.	.	0150	1
R	113	90-7816-4	.	HINGE-HALF.	.	.	.	.	.	0150	1
R	114	65-1648-4	.	GATE, LOWER	.	.	.	.	.	0150	1
				.	(OPTIONAL 65-1648-5)	.	.	.	.		
R	114	65-1648-5	.	GATE, LOWER	.	.	.	.	.	0150	1
				.	(OPTIONAL TO 65-1648-4)	.	.	.	.		
R	115	65-1647-2	.	GATE, UPPER	.	.	.	.	.	0150	1
R	116	AN3-15A	.	BOLT.	.	.	.	.	.	0150	8
R	117	AN960D10	.	WASHER.	.	.	.	.	.	0150	8
R	118	NAS679A3W	.	NUT	.	.	.	.	.	0150	8
R	119	USB7-101	.	BEARING, (V02758)	.	.	.	.	.	0150	4
				.	(OPTIONALS BSSR7570 (V81376), KR7-1 (V96579))	.	.	.	.		
R	119	BSSR7570	.	BEARING, (V81376)	.	.	.	.	.	0150	4
				.	(OPTIONAL TO USB7-101 (V02758))	.	.	.	.		
R	119	KR7-1	.	BEARING, (V96579)	.	.	.	.	.	0150	4
				.	(OPTIONAL TO USB7-101 (V02758))	.	.	.	.		
R	120	NAS1104-13D	.	BOLT.	.	.	.	.	.	0150	4
R	121	BACW10T416A	.	WASHER.	.	.	.	.	.	0150	8
R	122	AN320-4	.	NUT	.	.	.	.	.	0150	4
R	123	BACB10A278L	.	BEARING	.	.	.	.	.	0150	4
R	124	NAS509-5	.	NUT	.	.	.	.	.	0150	4
R	125	NAS513-5	.	WASHER.	.	.	.	.	.	0150	4
R	126	66-2620-1	.	ROD, ENTRY AND GALLEY DOORS STOP.	.	.	.	.	.	0150	4
R	127	90-7879	.	HANDLE, ENTRY DOOR EXTERNAL	.	.	.	.	.	0150	1
				.	ATTACHING PARTS	.	.	.	.		
R	128	NAS517-3-7	.	SCREW	.	.	.	.	.	0150	4
R	129	AN960D10	.	WASHER.	.	.	.	.	.	0150	4
R	130	NAS679A3W	.	NUT	.	.	.	.	.	0150	4
				.	-----*	.	.	.	.		
R	131	MS39086-13	.	PIN	.	.	.	.	.	0150	1
R	132	30-3019-1	.	WASHER, DOOR HANDLE MECHANISM	.	.	.	.	.	0150	1
R	133	AN996-14	.	RING.	.	.	.	.	.	0150	1
R	134	30-3010	.	NUT, DOOR HANDLE MECHANISM.	.	.	.	.	.	0150	1
R	135	63-2848	.	SPRING, ENTRY AND GALLEY DOOR COMPRESSION	.	.	.	.	.	0150	1
R	136	30-3013-2	.	PIN, DOOR HANDLE MECHANISM.	.	.	.	.	.	0150	1
R	137	NAS679A6	.	NUT	.	.	.	.	.	0150	1
R	138	63-9386	.	WASHER, HANDLE MECHANISM SHAFT.	.	.	.	.	.	0150	1
R	139	60-4455	.	SHAFT, HANDLE MECHANISM	.	.	.	.	.	0150	1
R	140	65-31057-4	.	PLATE, HANDLE MECHANISM CAM (USED ON 50-7945-1)	.	.	.	.	.	0150	1
				.	(OPTIONALS 65-1398-4, 65-31057-2)	.	.	.	.		
R	140	65-1398-4	.	PLATE, HANDLE MECHANISM CAM (USED ON 50-7945-1)	.	.	.	.	.	0150	1
				.	(OPTIONAL TO 65-31057-4)	.	.	.	.		
R	140	65-31057-2	.	PLATE, HANDLE MECHANISM CAM (USED ON 50-7945-1)	.	.	.	.	.	0150	1
				.	(OPTIONAL TO 65-31057-4)	.	.	.	.		
R	140	65-31057-4	.	PLATE, HANDLE MECHANISM CAM (USED ON 50-7945-88).	.	.	.	.	.	0150	1
				.	(OPTIONAL TO 65-51687-1)	.	.	.	.		
R	140	65-51687-1	.	PLATE, HANDLE MECHANISM CAM (USED ON 50-7945-88).	.	.	.	.	.	0150	1
				.	(OPTIONAL 65-31057-4)	.	.	.	.		
R	141	90-7821	.	SLEEVE, HANDLE MECHANISM.	.	.	.	.	.	0150	1
R	142	90-7811	.	CAM, HANDLE CENTERING	.	.	.	.	.	0150	1
R	143	60-4412	.	PLATE, HANDLE MECHANISM SEAL.	.	.	.	.	.	0150	1
				.	ATTACHING PARTS	.	.	.	.		
R	143A	BACR15CE5D	.	RIVET	.	.	.	.	.	0150	4
R	144	AN3-10A	.	BOLT.	.	.	.	.	.	0150	4
R	145	AN960D10L	.	WASHER.	.	.	.	.	.	0150	4
R	146	BACS11W3	.	SEAL.	.	.	.	.	.	0150	4
				.	-----*	.	.	.	.		
R	146A	90-7875	.	PAN, EXTERIOR HANDLE.	.	.	.	.	.	0150	1
				.	ATTACHING PARTS	.	.	.	.		
R		BACR15CE5D	.	RIVET	.	.	.	.	.	0150	40
				.	-----*	.	.	.	.		
R	147	AN6227-28	.	PACKING	.	.	.	.	.	0150	1
R	148	90-7820	.	HOUSING ASSY, HANDLE MECHANISM.	.	.	.	.	.	0150	1
R	149	NAS516-1	.	FITTING	.	.	.	.	.	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 3	150	90-7820-1	0150	1
R	151	AN6227-17	0150	1
R	152	NAS50-162	0150	1
R	153	AN201KP12A	0150	1
R	154	NAS1104-11	0150	2
R	155	AN9600416	0150	2
R	156	AN4-6A	0150	2
R	157	AN960-416L	0150	2
R	158	NAS679A4W	0150	2
R	159	63-1692	0150	2
R	160	AN202KP21B	0150	2
R		65-54013	0150	1
R	161	65-54013-2	0150	1
R	162	NAS1105-11D	0150	1
R	163	AN960D516	0150	1
R	164	AN320-5	0150	1
R		65-54024-3	0150	1
R	165	65-54024-1	0150	1
R	166	90-7815	0150	1
R	166	90-7815-1	0150	1
R	167	69-38733-1	0150	1
R	168	AN320-6	0150	1
R	168	AN310-6	0150	1
R	169	AN960-616L	0150	4
R	169	AN960PD616L	0150	4
R	169A	AN960PD616	0150	1
R	170	BACB10B60F9	0150	1
R	171	90-7815-2	0150	1
R	171	90-7815-3	0150	1
R	172	69-38733-2	0150	1
R	173	NAS517-3-10	0150	2
R	174	BACW10UB10	0150	2
R	175	60-4407-1	0150	1
R	176	AN3-5A	0150	2
R	177	AN3-7A	0150	2
R	178	BACW10T10	0150	4
R	179	NAS679A3W	0150	4
R	180	63-1058	0150	1
R	181	63-1059	0150	1
R	182	AN202KP23B	0150	2
R	183	NAS679A5	0150	1
R	184	AN960-516L	0150	2
R	186	MS20002C5	0150	1
R	187	66-10363	0150	1
R	188	AN3-6A	0150	3
R	189	AN960D10	0150	3
R	190	90-7810	0150	1
R	191	60-4410	0150	1
R	192	60-4473	0150	1
R	192A	NAS1476-6-2	0150	2
R	192B	NAS1080-6	0150	2
R	192C	MS2042605	0150	3
R	193	AN4-10A	0150	1
R	194	MS20004-16	0150	1
R	195	MS20004-18	0150	1
R	196	AN4-11A	0150	3
R	197	AN4-12A	0150	3
R	198	AN4-13A	0150	3
R	199	AN960D416	0150	10
R	200	65-1642-1	0150	1
R	201	30-3020	0150	10
R	202	30-3020-1	0150	2
R	203	30-3021	0150	AR
R	204	60-4367	0150	1
R	205	60-4367-1	0150	1
R	206	60-4367-2	0150	1
R	207	60-4367-3	0150	1
R	207A	69-2590	0150	1
R	207B	69-2590-1	0150	1
R	208	90-7806	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 3 209	65-2863	. WINDOW ASSY, 5 IN. DIAMETER OBSERVATION (USED ON. . . 50-7945-1) (SEE FIG. 9)	0150	1
R 209	65-2863-3	. WINDOW ASSY, 5 IN. DIAMETER OBSERVATION (USED ON. . . 50-7945-88) (SEE FIG. 9)	0150	1
R 209A	90-7824	. PAN ASSY, WINDOW.	0150	1
R 210	65-2124	. SEAL INSTL, FORWARD ENTRY DOOR (USED ON 50-7945-1). . . (SEE FIG. 4)	0150	1
R 210	65-2124-3	. SEAL INSTL, FORWARD ENTRY DOOR (USED ON 50-7945-88). . . (SEE FIG. 4)	0150	1
R 210A	65-1348-2	. SUPPORT INSTL, LINING (SEE FIG. 11)	0150	1
R 211	65-28925-1	. ROD ASSY, MECHANISM CONTROL (SEE FIG. 9). (OPTIONAL 90-7823 FIG. 8)	0150	1
R 211	90-7823	. ROD ASSY, MECHANISM CONTROL (SEE FIG. 8). (OPTIONAL TO 65-28925-1 FIG. 9)	0150	1
R 211	65-28925-1	. ROD ASSY, DOOR MECHANISM CONTROL (USED ON 50-7945-88) (SEE FIG. 9)	0150	1
R 212	65-28925-2	. ROD ASSY, MECHANISM CONTROL (SEE FIG. 9). (OPTIONAL 90-7823-1 FIG. 8)	0150	1
R 212	90-7823-1	. ROD ASSY, MECHANISM CONTROL (SEE FIG. 8). (OPTIONAL TO 65-28925-2 FIG. 9)	0150	1
R 212	65-28925-2	. ROD ASSY, DOOR MECHANISM CONTROL (USED ON 50-7945-88) (SEE FIG. 9)	0150	1
R 213	65-28925-3	. ROD ASSY, MECHANISM CONTROL (SEE FIG. 9). (OPTIONAL 90-7823-2 FIG. 8)	0150	1
R 213	90-7823-2	. ROD ASSY, MECHANISM CONTROL (SEE FIG. 8). (OPTIONAL TO 65-28925-3 FIG. 9)	0150	1
R 213	65-28925-3	. ROD ASSY, DOOR MECHANISM CONTROL (USED ON 50-7945-88) (SEE FIG. 9)	0150	1
R 214	65-28925-4	. ROD ASSY, DOOR MECHANISM CONTROL (SEE FIG. 9) (OPTIONAL 90-7823-3 FIG. 8)	0150	1
R 214	90-7823-3	. ROD ASSY, DOOR MECHANISM CONTROL (SEE FIG. 8) (OPTIONAL TO 65-28925-4 FIG. 9)	0150	1
R 214	65-28925-4	. ROD ASSY, DOOR MECHANISM CONTROL (USED ON 50-7945-88) (SEE FIG. 9)	0150	1
R 215	60-7208	. ROD ASSY, COCKING PUSH (SEE FIG. 8)	0150	1
R 216	65C19147-15	. INTERCOSTAL, GATE STOP.	0150	1
R 217	65C19147-16	. INTERCOSTAL, GATE STOP.	0150	1
R 218	65C19147-17	. INTERCOSTAL, GATE STOP.	0150	1
R 219	65C19147-18	. INTERCOSTAL, GATE STOP.	0150	1
R 220	69-2825-1	. INTERCOSTAL, GATE STOP.	0150	1
R 221	69-2825-2	. INTERCOSTAL, GATE STOP.	0150	1
R 222	69-2826-1	. INTERCOSTAL, GATE STOP.	0150	1
R 223	69-2826-2	. INTERCOSTAL, GATE STOP.	0150	1
R 224	69-2842-5	. FILLER, BEAM NO. 7.	0150	1
R 225	69-2842	. FILLER, BEAM NO. 8 AND 15	0150	2
R 226	69-2842-1	. FILLER, BEAM NO. 9.	0150	1
R 227	69-2842-8	. FILLER, BEAM NO. 11	0150	1
R 228	69-2842-4	. FILLER, BEAM NO. 12	0150	1
R 229	69-2842-2	. FILLER, BEAM NO. 14	0150	1
R 230	69-2842-6	. FILLER, BEAM NO. 16	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

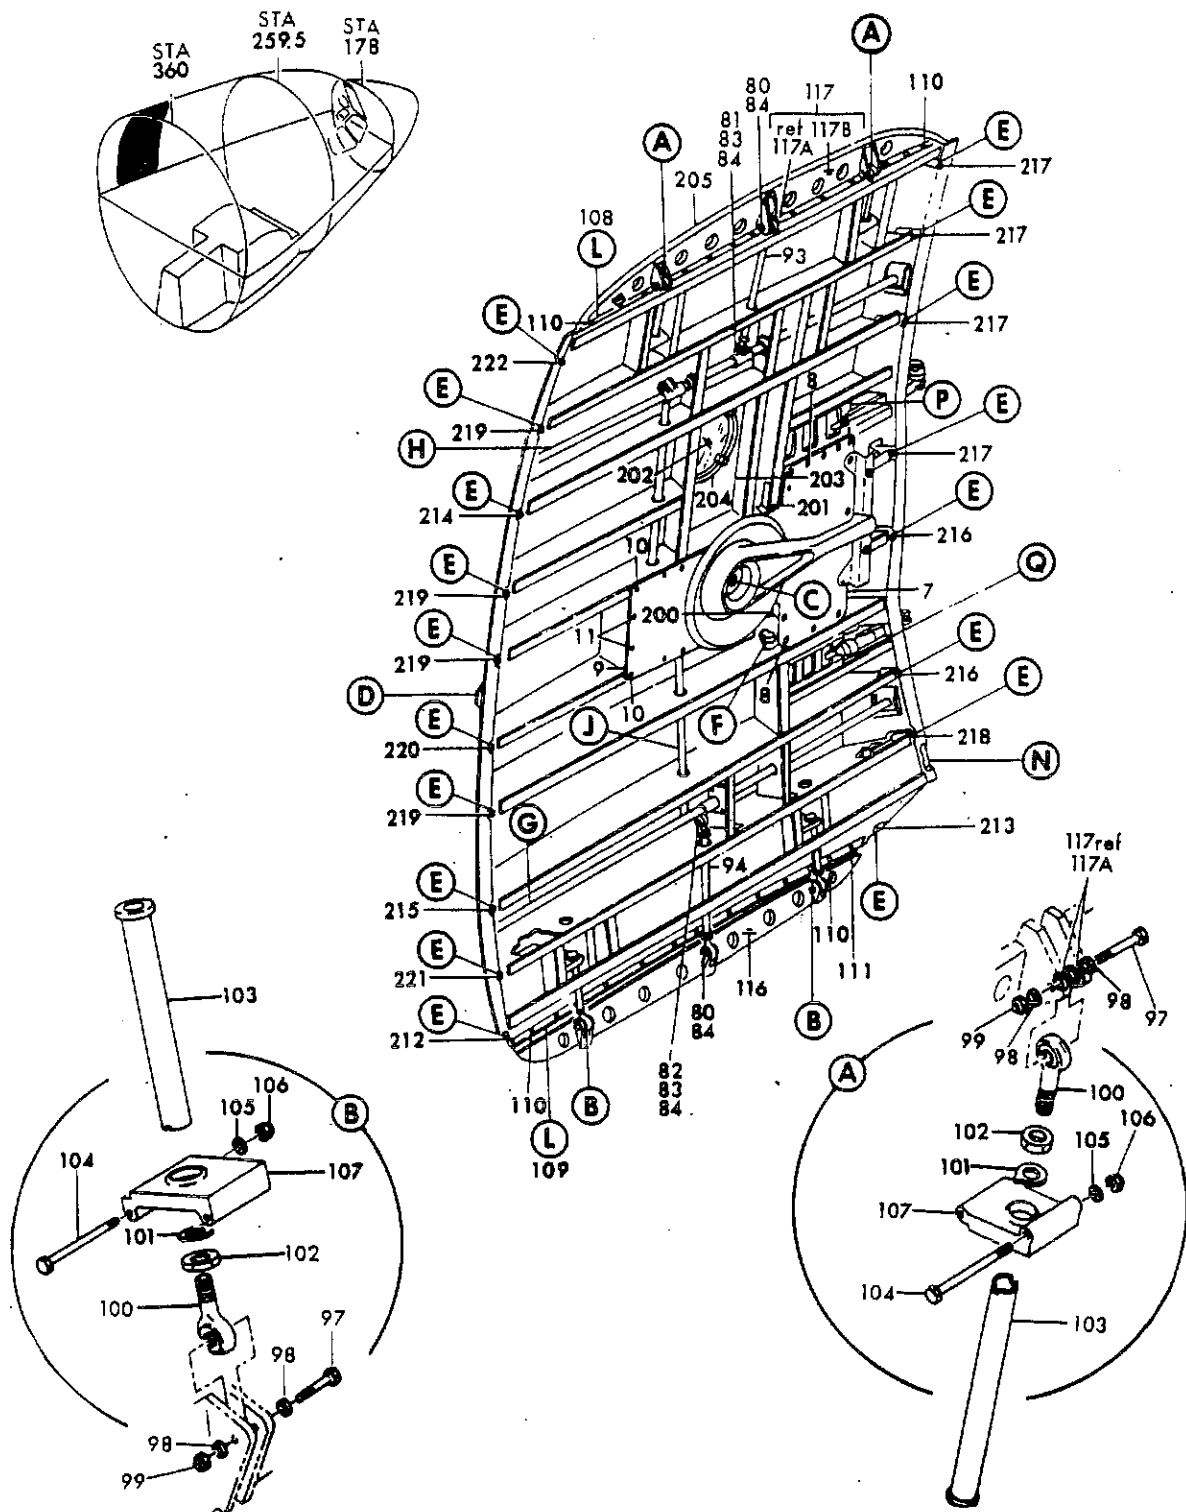


FIGURE 3A. DOOR ASSY, FORWARD ENTRY (SHEET 1)

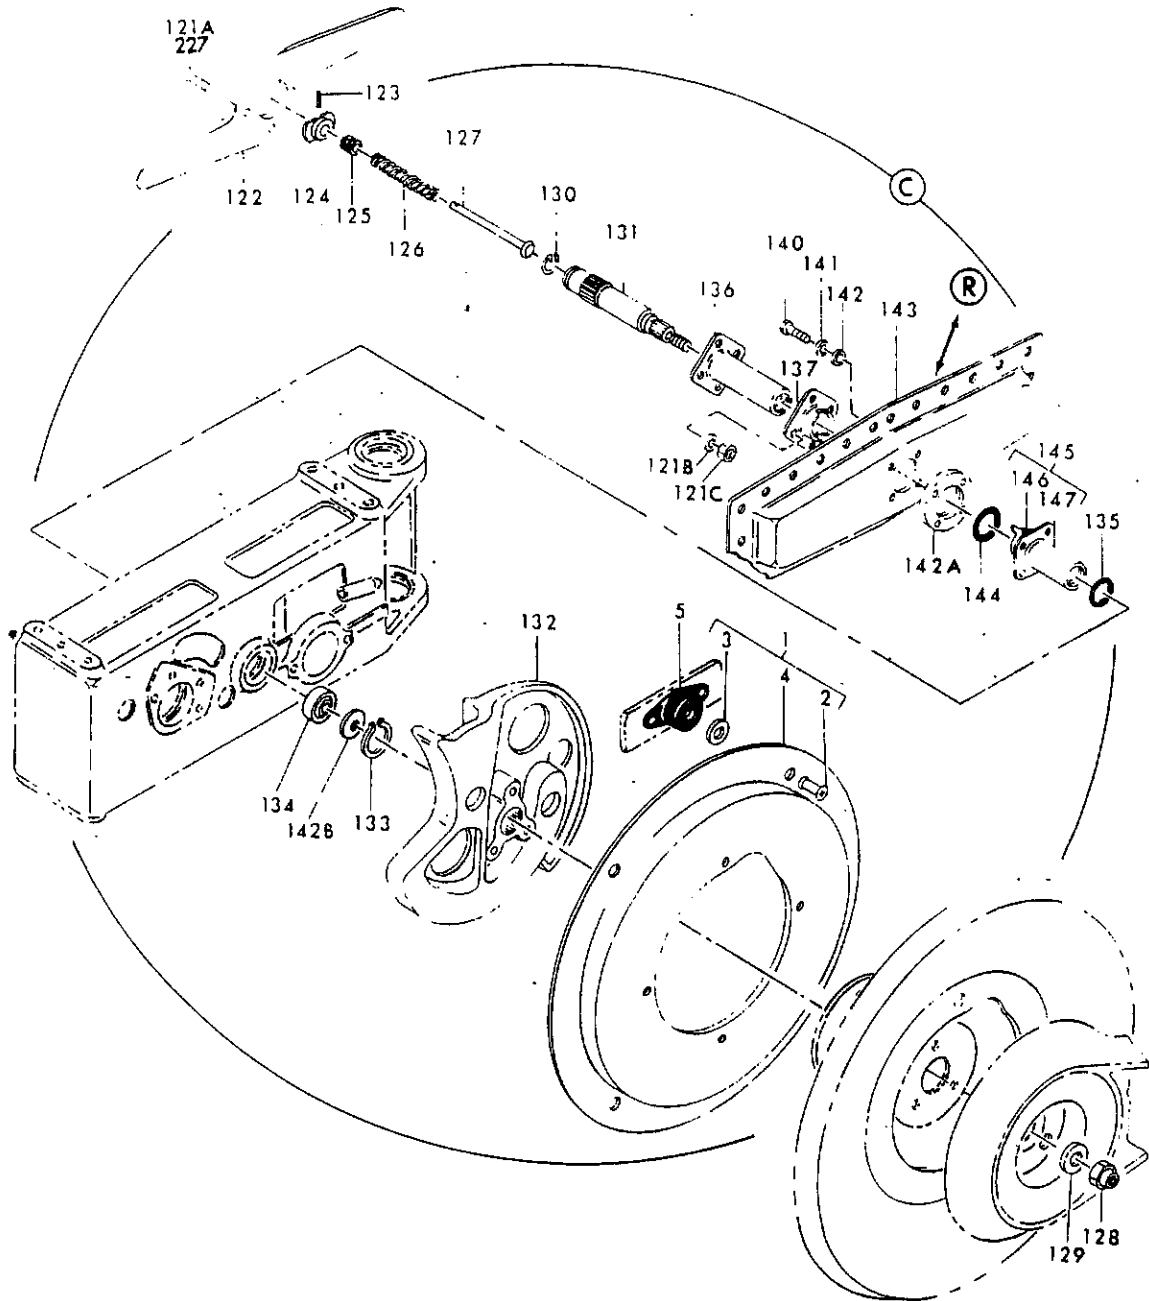


FIGURE 3A. DOOR ASSY, FORWARD ENTRY (SHEET 2)

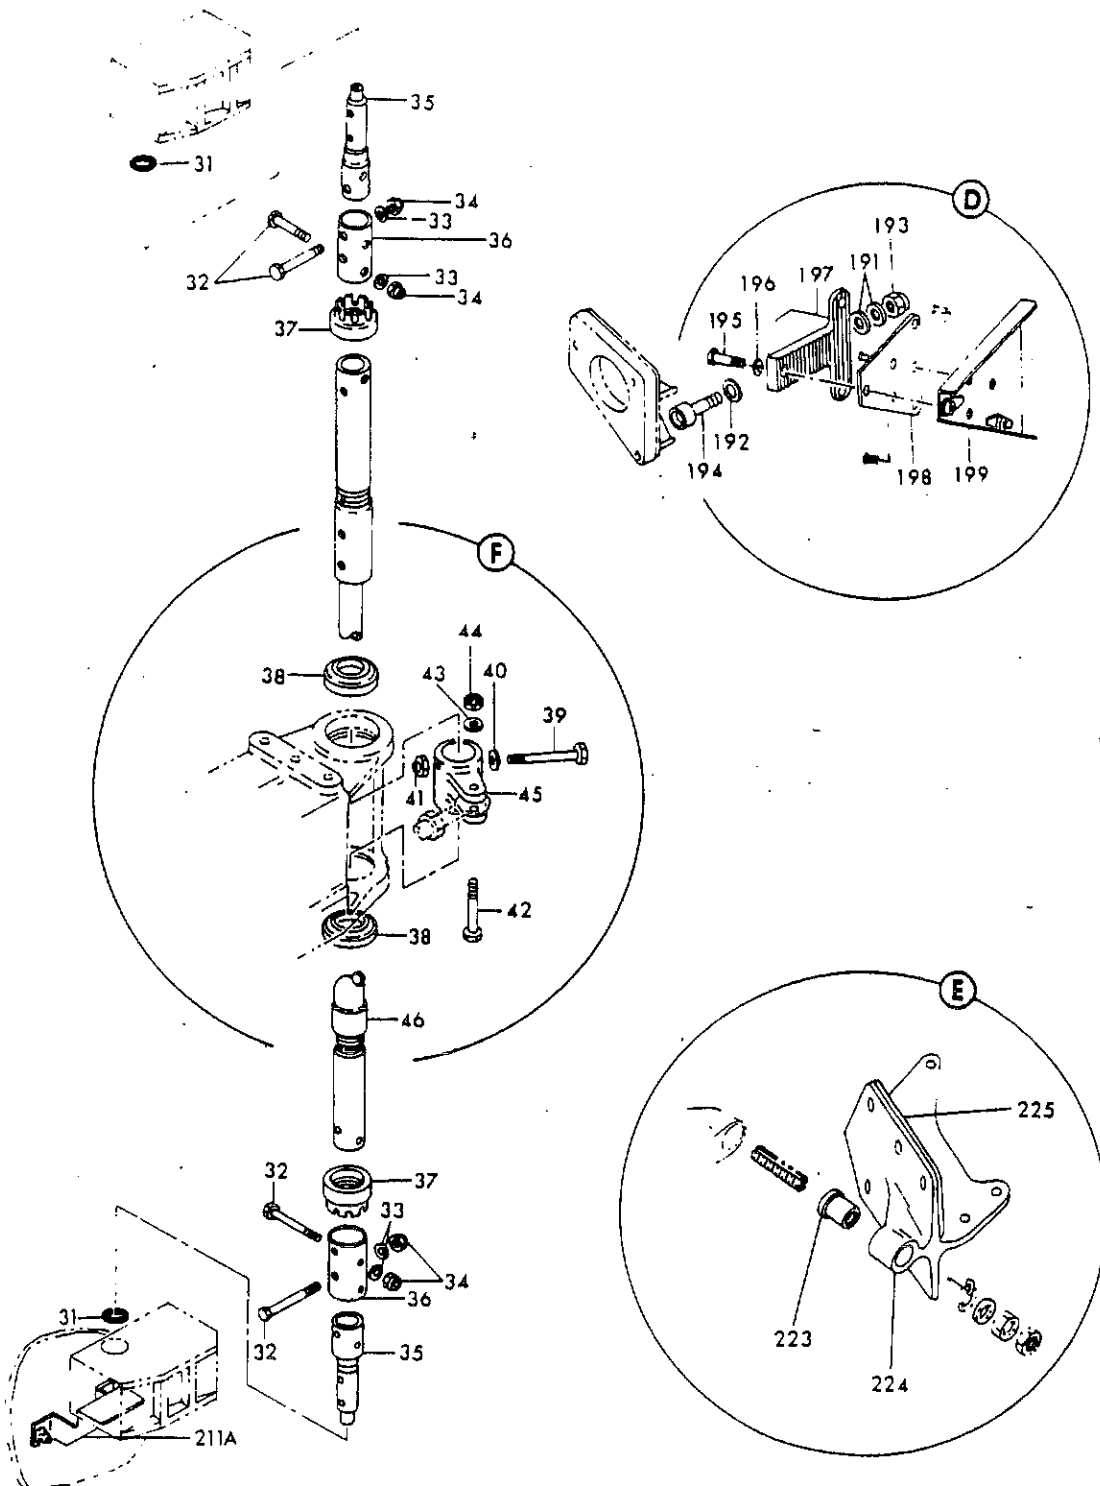


FIGURE 3A. DOOR ASSY, FORWARD ENTRY (SHEET 3)

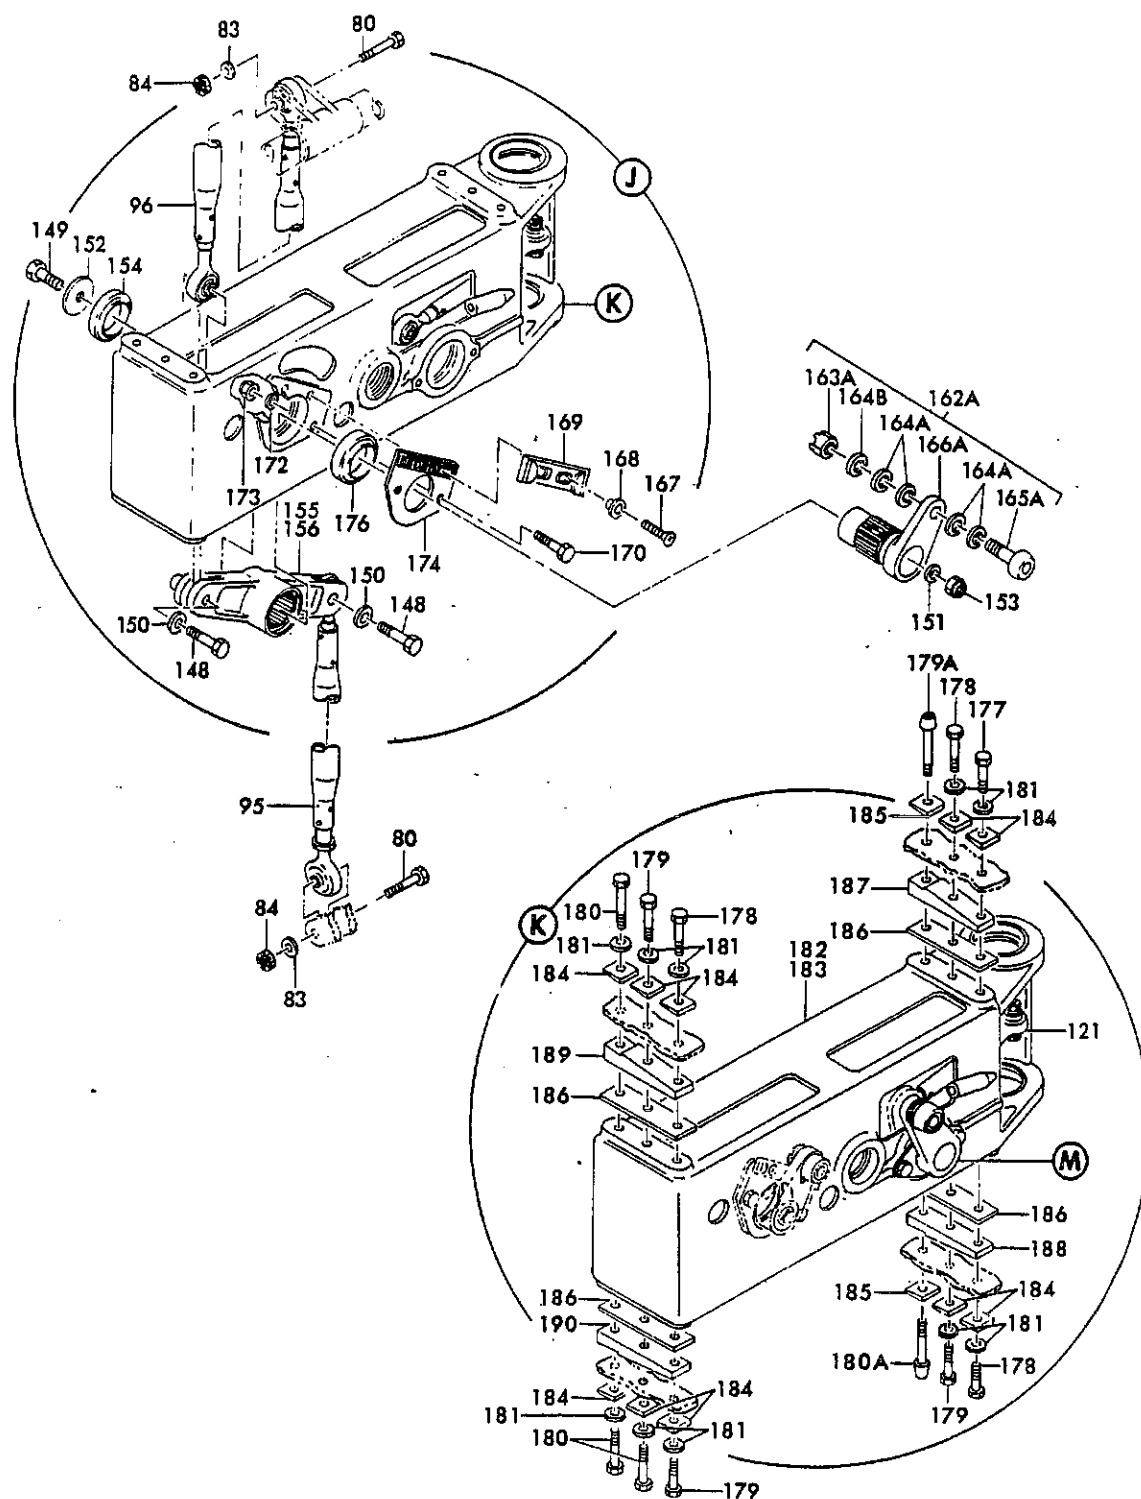


FIGURE 3A. DOOR ASSY, FORWARD ENTRY (SHEET 5)

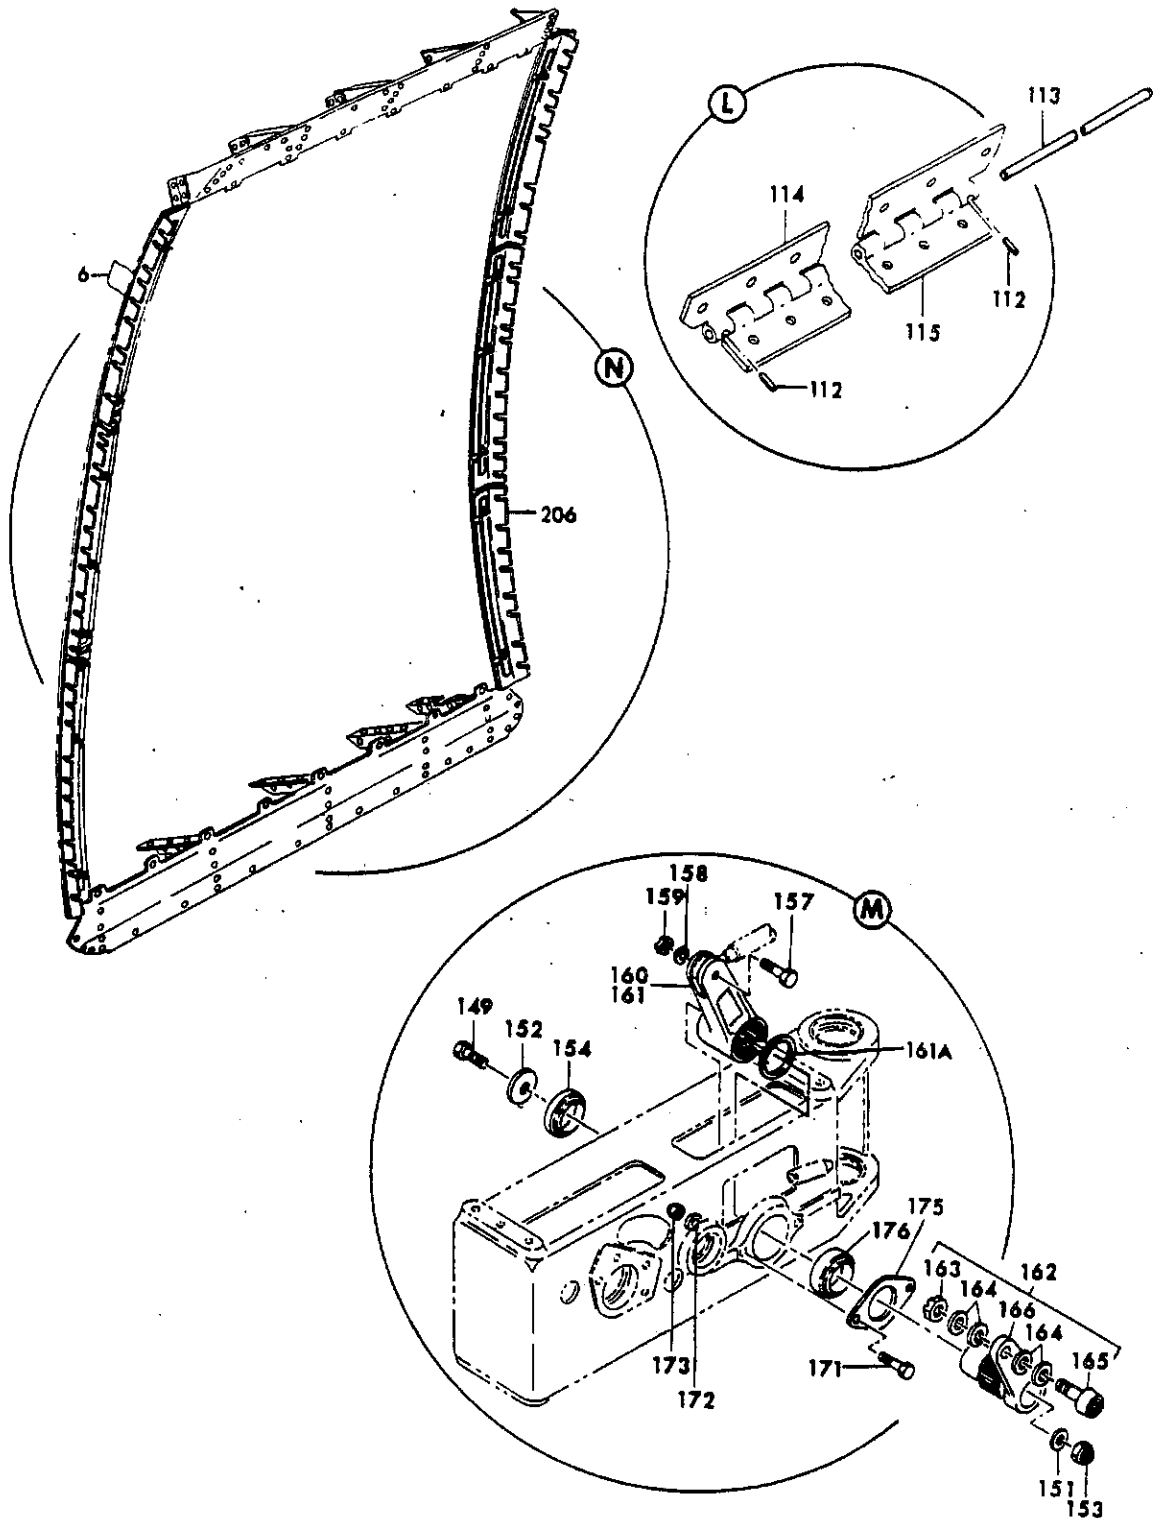


FIGURE 3A. DOOR ASSY, FORWARD ENTRY (SHEET 6)

NOV 21/90

52-01-3A

DETAILED PARTS LIST
52-01-3A
PAGE 5

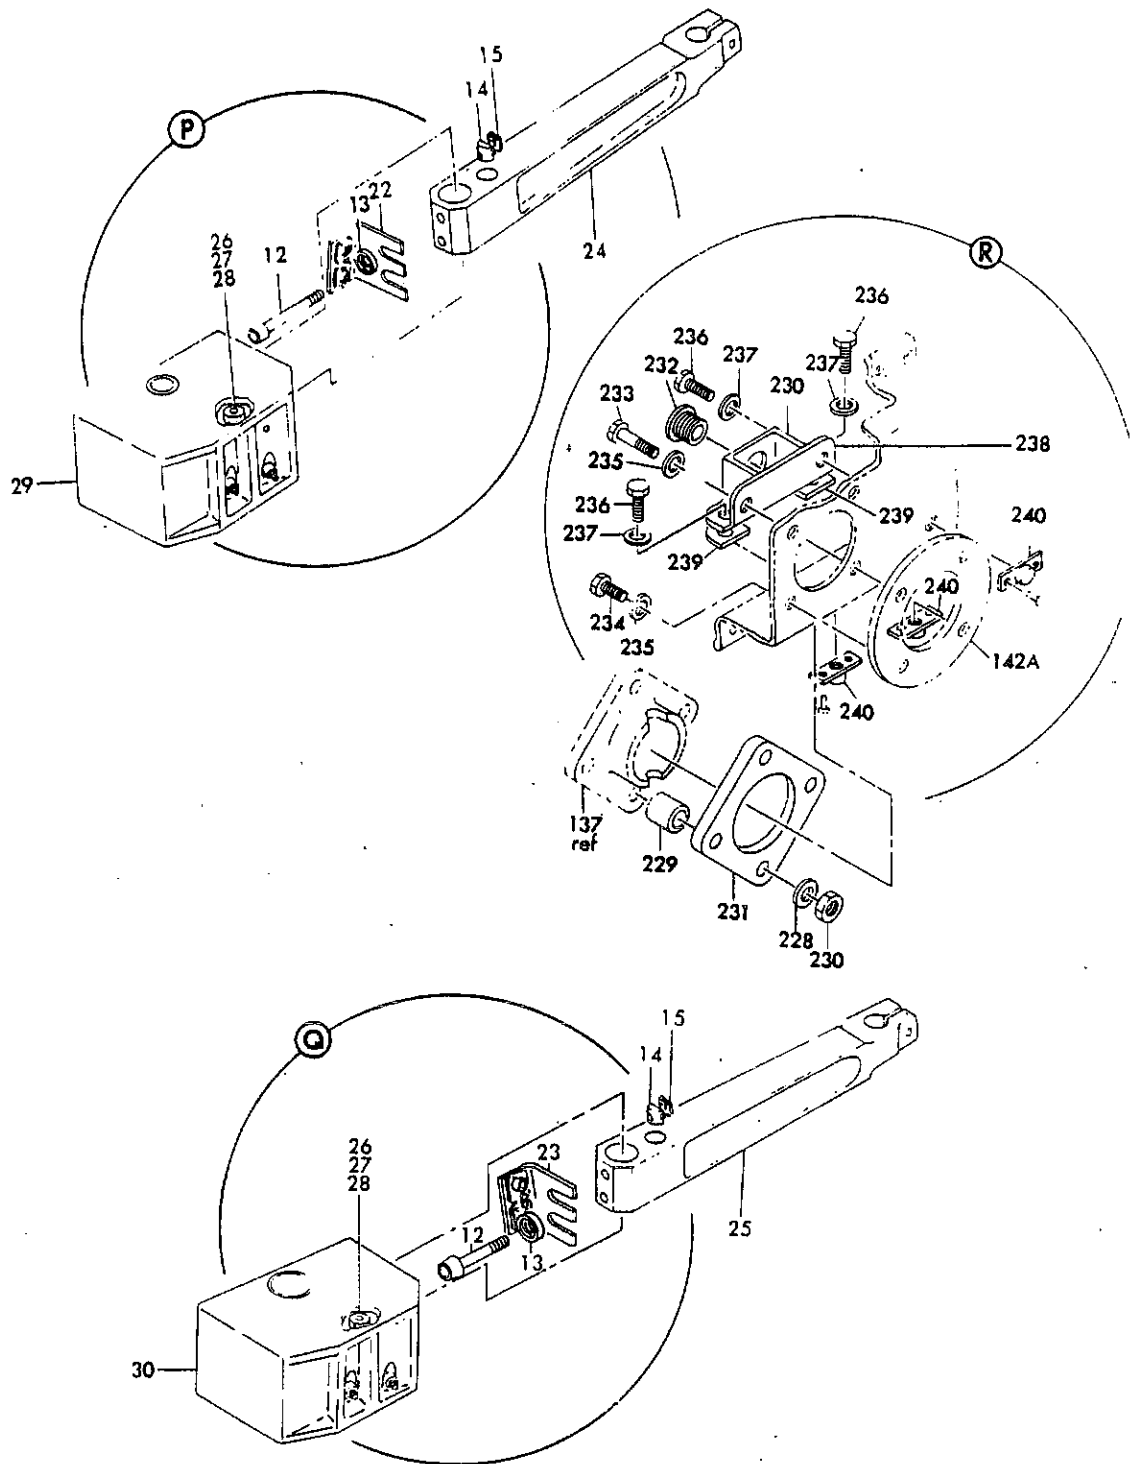


FIGURE 3A. DOOR ASSY, FORWARD ENTRY (SHEET 7)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
3A	50-7945-153	DOOR ASSY, FORWARD ENTRY (REWORKED BY SB 3337) (MAY . . . USE 50-7945-195 AFTER SB 3337 INCORPORATION) (SEE FIG. 1, ITEM 96)	5199	RF
1	90-7826-2	. RETAINER ASSY, LINING	5199	1
2	2-0-180	. . STUD, (V24248)	5199	4
3	GSR2-93	. . GROMMET, (V94222)	5199	4
4	90-7826-4	. . RETAINER	5199	1
5	10-60831-7	. FASTENER ASSY, CABIN SOUND PROOFING (OPTIONAL 10-60124)	5199	4
5	10-60124	. FASTENER ASSY, CABIN SOUND PROOFING (OPTIONAL TO 10-60831-7)	5199	4
		ATTACHING PARTS		
	MS20426D5	. RIVET	5199	8
6	AN7510-1	. PLATE (OPTIONAL MS27253F1)	5199	1
6	MS27253F1	. PLATE (OPTIONAL TO AN7510-1)	5199	1
7	50-7945-35	. PANEL, MECHANICAL ACCESS	5199	1
8	NAS221-6	. ATTACHING PARTS . SCREW	5199	14
9	50-7945-36	. PANEL, MECHANICAL ACCESS	5199	1
10	NAS221-10	. ATTACHING PARTS . SCREW	5199	6
11	NAS221-6	. SCREW	5199	2
12	MS20004-24	. BOLT	5199	4
13	MS20002C4	. WASHER	5199	4
14	NAS577-4A	. NUT	5199	4
15	NAS578-4B	. RETAINER	5199	4
22	60-4474-7	. CLIP ASSY, HINGE COVER ATTACH	5199	1
23	60-4474-8	. CLIP ASSY, HINGE COVER ATTACH	5199	1
24	65-86784-1	. ARM, HINGE (OPTIONAL TO 65-85986-1)	5199	1
24	65-85986-1	. ARM, HINGE (OPTIONAL 65-86784-1)	5199	1
25	65-85986-2	. ARM, HINGE (OPTIONAL 65-86784-2)	5199	1
25	65-86784-2	. ARM, HINGE (OPTIONAL TO 65-85986-2)	5199	1
26	NAS1105-13D	. BOLT	5199	2
27	AN960PD516	. WASHER	5199	4
28	AN320-5	. NUT	5199	2
29	69-22323-9	. SUPPORT ASSY, HINGE (UPPER) (SEE FIG. 12)	5199	1
30	69-22323-10	. SUPPORT ASSY, HINGE (LOWER) (SEE FIG. 12)	5199	1
31	AN6227-15	. PACKING	5199	2
32	BAC830NE4-26	. BOLT	5199	8
33	AN960D416	. WASHER	5199	8
34	BACN10JC4	. NUT	5199	8
35	60-4364	. PIN, HINGE	5199	2
36	60-4365	. SLEEVE, TORQUE TUBE COUPLING	5199	2
37	60-4405-1	. NUT, BEARING RETAINER SPECIAL	5199	2
38	AN202KP25B	. BEARING	5199	2
39	NAS1105-29	. BOLT	5199	2
40	AN960D516	. WASHER	5199	2
41	BACN10JC5	. NUT	5199	2
42	NAS1105-13D	. BOLT	5199	1
43	AN960D516	. WASHER	5199	1
44	AN320-5	. NUT	5199	1
45	60-4366	. CRANK, TORQUE TUBE	5199	1
46	90-6753-1	. TUBE, VERTICAL HINGE TORQUE	5199	1
47	69-48008	. ROLLER ASSY	5199	4
48	NAS516-1	. . FITTING, LUBRICATION	5199	1
49	69-48008-2	. . ROLLER	5199	1
50	69-48008-1	. . STUD, ROLLER	5199	1
50A	AN960-516L	. WASHER	5199	16
51	AN320-5	. NUT	5199	4
52	NAS1103-16	. BOLT	5199	8
53	AN960D10	. WASHER	5199	8
54	NAS679A3W	. NUT	5199	8
55	69-37418-502	. CRANK, ROLLER CAM (OPTIONAL 90-10001-1)	5199	4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 3A 55	90-10001-1	.	CRANK, ROLLER CAM	5199	4
R 56	BACB10A397GCM2	.	(OPTIONAL TO 69-37418-502)		
R 57	30-3004	.	BEARING	5199	4
R 58	65-2047-7	.	WASHER, LATCH MECHANISM	5199	AR
R 59	65-2047-8	.	FITTING ASSY, AFT CRANK LATCH SUPPORT	5199	1
		.	FITTING ASSY, AFT CRANK LATCH SUPPORT	5199	1
		.	ATTACHING PARTS		
R 60	MS20470D6	.	RIVET	5199	2
R 61	AN3-6A	.	BOLT	5199	2
R 62	NAS517-3-4	.	SCREW	5199	4
R 63	AN960D10	.	WASHER	5199	6
R 64	BACS40A16-16	.	SHIM	5199	AR
R 65	NAS679A3W	.	NUT	5199	6
		*			
R 66	NAS516-1	.	FITTING	5199	1
R 67	65-2047-9	.	FITTING, (USED ON 65-2047-7)	5199	1
R 68	65-2047-10	.	FITTING, (USED ON 65-2047-8)	5199	1
R 69	65-2048-2	.	FITTING ASSY, LATCH CRANK SUPPORT	5199	2
		.	ATTACHING PARTS		
R 70	AN3-5A	.	BOLT	5199	2
R 71	NAS517-3-4	.	SCREW	5199	6
R 72	AN960D10	.	WASHER	5199	8
R 73	BACS40A16-16	.	SHIM	5199	AR
R 74	NAS679A3W	.	NUT	5199	8
		*			
R 75	NAS516-1	.	FITTING	5199	1
R 76	65-2048-3	.	FITTING	5199	1
R 77	NAS1103-18	.	BOLT	5199	6
R 78	AN960D10	.	WASHER	5199	6
R 79	NAS679A3W	.	NUT	5199	6
R 80	NAS1104-13D	.	BOLT	5199	4
R 81	NAS1104-11D	.	BOLT	5199	1
R 82	NAS1104-10D	.	BOLT	5199	1
R 83	AN960D16	.	WASHER	5199	4
R 84	AN320-4	.	NUT	5199	6
R 85	60-4409	.	CRANK, LATCH TORQUE TUBE	5199	1
R 86	60-4431	.	CRANK, UPPER GATE TORQUE TUBE	5199	1
R 87	90-7825-2	.	CRANK, LOWER GATE AND LATCH TORQUE TUBE	5199	1
R 88	60-4406	.	TUBE, LATCH ACTUATOR TORQUE	5199	2
R 89	65-2306	.	HOUSING ASSY, CAM SHAFT	5199	3
		.	ATTACHING PARTS		
R	AN3-3A	.	BOLT	5199	12
R	AN960D10	.	WASHER	5199	12
R	NAS679A3W	.	NUT	5199	12
		*			
R 90	NAS516-1	.	FITTING	5199	1
R 91	65-2306-1	.	HOUSING	5199	1
R 92	BACB10A397GCM2	.	BEARING	5199	3
R 93	65-28925-1	.	ROD ASSY, MECHANISM CONTROL (SEE FIG. 9)	5199	1
R 94	65-28925-2	.	ROD ASSY, MECHANISM CONTROL (SEE FIG. 9)	5199	1
R 95	65-28925-3	.	ROD ASSY, MECHANISM CONTROL (SEE FIG. 9)	5199	1
R 96	65-28925-4	.	ROD ASSY, MECHANISM CONTROL (SEE FIG. 9)	5199	1
R 97	NAS1104-13	.	BOLT	5199	4
R 97	NAS1104-13D	.	BOLT	5199	4
R 98	BACW10P258AT	.	WASHER	5199	8
R 99	AN320-4	.	NUT	5199	4
R 100	BACB10A278L	.	BEARING	5199	4
R 101	NAS513-5	.	WASHER	5199	4
R 102	NAS509-5	.	NUT	5199	4
R 103	66-2620-1	.	ROD, GALLEY STOP	5199	4
R 104	AN3-15A	.	BOLT	5199	8
R 105	AN960D10	.	WASHER	5199	8
R 106	BACN10JJC3	.	NUT	5199	8
R 107	USB7-101	.	BEARING, (V02758)	5199	4
		.	(OPTIONALS BSSR7570 (V81376) KR7-1 (V96579))		
R 107	BSSR7570	.	BEARING, (V81376)	5199	4
		.	(OPTIONAL TO USB7-101 (V02758))		
R 107	KR7-1	.	BEARING, (V96579)	5199	4
		.	(OPTIONAL TO USB7-101 (V02758))		
R 108	90-7816-7	.	HINGE ASSY, GATE	5199	1
R 109	90-7816-8	.	HINGE ASSY, GATE	5199	1
		.	ATTACHING PARTS		
R 110	NAS517-3-2	.	SCREW	5199	25
R 111	NAS517-3-5	.	SCREW	5199	1
		*			

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R 3A 112	NAS561P3-5	.	.	.	.	.	.	PIN	5199	2
R 113	AN253-2-3220	.	.	.	.	.	.	PIN	5199	1
R 114	90-7816-10	.	.	.	.	.	.	HINGE-HALF, (USED ON 90-7816-7)	5199	1
R 114	90-7816-11	.	.	.	.	.	.	HINGE-HALF, (USED ON 90-7816-8)	5199	1
R 115	90-7816-9	.	.	.	.	.	.	HINGE-HALF, (USED ON 90-7816-7 AND -8)	5199	1
R 116	65-1648-7	.	.	.	.	.	.	GATE, LOWER	5199	1
R 117	65-1647-4	.	.	.	.	.	.	GATE ASSY, UPPER	5199	1
R 117A	BAC828X409	.	.	.	.	.	.	BUSHING	5199	6
R 117B	65-1647-3	.	.	.	.	.	.	GATE	5199	1
R 121	60-7208	.	.	.	.	.	.	ROD ASSY, COCKING PUSH (SEE FIG. 8)	5199	1
R 121A	NAS517-3-7	.	.	.	.	.	.	SCREW	5199	4
R 121B	AN960010	.	.	.	.	.	.	WASHER	5199	4
R 121C	NAS679A3W	.	.	.	.	.	.	NUT	5199	4
R 122	90-7879	.	.	.	.	.	.	HANDLE, EXTERNAL	5199	1
R 123	MS39086-13	.	.	.	.	.	.	PIN	5199	1
R 124	30-3019-1	.	.	.	.	.	.	WASHER, HANDLE MECHANISM	5199	1
R 125	30-3010	.	.	.	.	.	.	NUT, HANDLE MECHANISM	5199	1
R 126	63-2848	.	.	.	.	.	.	SPRING, GALLEY COMPRESSION	5199	1
R 127	30-3013-2	.	.	.	.	.	.	PIN, HANDLE MECHANISM	5199	1
R 128	BACN10JD6	.	.	.	.	.	.	NUT	5199	1
R 129	63-9386	.	.	.	.	.	.	WASHER, HANDLE MECHANISM SHAFT	5199	1
R 130	AN996-14	.	.	.	.	.	.	RING	5199	1
R 131	60-4455-1	.	.	.	.	.	.	SHAFT, HANDLE MECHANISM	5199	1
R 132	65-31057-4	.	.	.	.	.	.	PLATE, HANDLE MECHANISM CAM	5199	1
R 133	NAS50-162	.	.	.	.	.	.	RING	5199	1
R 134	AN201KP12A	.	.	.	.	.	.	BEARING	5199	1
R 135	AN6227-17	.	.	.	.	.	.	PACKING	5199	1
R 136	90-7821	.	.	.	.	.	.	SLEEVE, HANDLE MECHANISM	5199	1
R 137	90-7811	.	.	.	.	.	.	CAM, HANDLE CENTERING	5199	1
R 140	AN3-10A	.	.	.	.	.	.	BOLT	5199	3
R 140A	AN3-10A	.	.	.	.	.	.	BOLT	5199	1
R 141	AN960010L	.	.	.	.	.	.	WASHER	5199	4
R 142	BACS11W3	.	.	.	.	.	.	SEAL	5199	4
R 142A	60-4412	.	.	.	.	.	.	PLATE, HANDLE MECHANISM SEAL	5199	1
R 142B	BACW10P14BAL	.	.	.	.	.	.	WASHER	5199	1
R 143	90-7875	.	.	.	.	.	.	PAN, EXTERIOR HANDLE	5199	1
R	BACR15CED5	.	.	.	.	.	.	ATTACHING PARTS	5199	40
R	144	AN6227-28	.	.	.	.	.	RIVET	5199	1
R 145	90-7820	.	.	.	.	.	.	PACKING	5199	1
R 146	NAS516-1	.	.	.	.	.	.	HOUSING ASSY, HANDLE MECHANISM	5199	1
R 147	90-7820-1	.	.	.	.	.	.	FITTING	5199	1
R 148	NAS1104-11	.	.	.	.	.	.	FITTING	5199	1
R 149	AN4-6A	.	.	.	.	.	.	BOLT	5199	2
R 150	AN9600416	.	.	.	.	.	.	BOLT	5199	2
R 151	AN960-416L	.	.	.	.	.	.	WASHER	5199	2
R 152	63-1692	.	.	.	.	.	.	WASHER	5199	2
R 153	NAS679A4W	.	.	.	.	.	.	WASHER, MECHANISM	5199	2
R 154	AN202KP21B	.	.	.	.	.	.	NUT	5199	2
R 155	65-54013-503	.	.	.	.	.	.	BEARING	5199	2
R 155	65-54013	.	.	.	.	.	.	CRANK ASSY, LATCHING	5299	1
R 155	65-54013-503	.	.	.	.	.	.	CRANK ASSY, LATCHING	5151	1
R 155	65-54013-503	.	.	.	.	.	.	(OPTIONAL TO 65-54013-503)	5151	1
R 156	65-54013-502	.	.	.	.	.	.	CRANK, (USED ON 65-54013-503)	5299	1
R 156	65-54013-502	.	.	.	.	.	.	CRANK, (USED ON 65-54013-503)	5151	1
R 156	65-54013-2	.	.	.	.	.	.	(OPTIONAL 65-54013)	5151	1
R 157	NAS1105-11D	.	.	.	.	.	.	CRANK, (USED ON 65-54013-2)	5151	1
R 158	AN9600516	.	.	.	.	.	.	(OPTIONAL TO 65-54013-502)	5199	1
R 159	AN320-5	.	.	.	.	.	.	BOLT	5199	1
R 160	65-1933-3	.	.	.	.	.	.	WASHER	5199	1
R 161	65-1933	.	.	.	.	.	.	NUT	5199	1
R 161A	65-8795-801	.	.	.	.	.	.	CRANK ASSY, COCKING	5199	1
R 162	90-7815	.	.	.	.	.	.	CRANK, (USED ON 65-1933, -3)	5199	1
R 162A	90-7815-1	.	.	.	.	.	.	SPACER	5199	1
R 162A	69-38733-1	.	.	.	.	.	.	CRANK ASSY, CAM FOLLOWER	5199	1
R 162A	90-7815-1	.	.	.	.	.	.	(OPTIONAL TO 90-7815-1)	5151	1
R 162A	90-7815-1	.	.	.	.	.	.	CRANK ASSY, CAM FOLLOWER	5151	1
R 162A	90-7815-1	.	.	.	.	.	.	(OPTIONAL TO 69-38733-1)	5151	1
R 162A	90-7815-1	.	.	.	.	.	.	CRANK ASSY, CAM FOLLOWER	5151	1
R 162A	90-7815-1	.	.	.	.	.	.	(OPTIONAL 90-7815-1)	5299	1
R 162A	90-7815-1	.	.	.	.	.	.	CRANK ASSY, CAM FOLLOWER	5299	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3A 162A	90-7815-1	CRANK ASSY, CAM FOLLOWER. (OPTIONAL 90-7815)	5199	1
163	AN320-6	NUT, (USED ON 90-7815).	5199	1
163A	AN310-6	NUT, (USED ON 69-38733-1).	5199	1
164	AN960616L	WASHER, (USED ON 90-7815).	5199	4
164A	AN960PD616L	WASHER, (USED ON 69-38733-1).	5199	4
164B	AN960PD616	WASHER, (USED ON 69-38733-1).	5199	1
165	8ACB10BH60CF6	BEARING, (USED ON 90-7815). (OPTIONAL 8ACB10AF6F6H)	5199	1
165	8ACB10AF6F6H	BEARING, (USED ON 90-7815). (OPTIONAL TO 8ACB10BH60CF6)	5199	1
165A	8ACB10BH60F9	BEARING, (USED ON 69-38733-1).	5199	1
166	90-7815-2	ARM, (USED ON 90-7815).	5199	1
166A	69-38733-2	ARM, (USED ON 69-38733-1).	5199	1
167	NAS517-3-10	SCREW	5199	2
168	BACW10UB10	WASHER.	5199	2
170	AN3-5A	BOLT.	5199	2
171	AN3-7A	BOLT.	5199	2
172	NAS1197-10	WASHER.	5199	4
173	NAS679A3W	NUT	5199	4
174	63-1058-2	RETAINER, LATCH MECHANISM BEARING (OPTIONAL TO 63-1059-1)	5199	1
175	63-1059-1	RETAINER, LATCH MECHANISM BEARING (OPTIONAL 63-1058-2)	5199	1
176	AN202KP238	BEARING	5199	2
177	AN4-10A	BOLT.	5199	1
178	AN4-11A	BOLT.	5199	3
179	AN4-12A	BOLT.	5199	3
179A	MS20004-16	BOLT.	5199	1
180	AN4-13A	BOLT.	5199	3
180A	MS20004-18	BOLT.	5199	1
181	AN960D416	WASHER.	5199	10
182	65-1642-23	HOUSING ASSY, HANDLE MECHANISM.	5199	1
183	65-1642-6	FITTING	5199	1
184	30-3020	FILLER, TAPERED	5199	10
185	30-3020-1	FILLER, RADIUS.	5199	2
186	30-3021	SHIM, LAMINATED	5199	AR
187	60-4367	FILLER, HANDLE MECHANISM HOUSING.	5199	1
188	60-4367-1	FILLER, HANDLE MECHANISM HOUSING.	5199	1
189	60-4367-2	FILLER, HANDLE MECHANISM HOUSING.	5199	1
190	60-4367-3	FILLER, HANDLE MECHANISM HOUSING.	5199	1
190A	69-2842-8	FILLER, BEAM NO. 11	5199	1
191	AN960516L	WASHER.	5199	2
192	MS20002C5	WASHER.	5199	1
193	NAS679A5	NUT	5199	1
194	66-10363	GUIDE, CENTERING.	5199	1
195	AN3-6A	BOLT.	5199	3
196	AN960D10	WASHER.	5199	3
197	90-7810	FITTING, CENTERING ROLLER	5199	1
198	60-4410	PLATE, CENTERING SERRATED	5199	1
199	60-4473	CHANEL ASSY, CENTERING ROLLER BACK UP ATTACHING PARTS	5199	1
R	MS20426D5	RIVET	5199	3
R	200	ANGLE	5199	1
R	201	ANGLE	5199	1
R	202	WINDOW ASSY, 5 IN. DIAMETER OBSERVATION (SEE 56-1, FIG. 9)	5199	1
R	203	PLATE, WINDOW	5199	1
R	204	PAN ASSY, WINDOW.	5199	1
R	205	SEAL INSTL, (SEE FIG. 4).	5199	1
R	206	SUPPORT INSTL, LINING (SEE FIG. 11)	5199	1
R	212	FITTING ASSY, STRINGER 16 AFT STOP (DELETED BY SB 3281)	5199	1
R	212	FITTING ASSY, STRINGER 16 AFT STOP (ADDED BY SB 3281) (OPTIONAL TO 65-95479-2, 65-95479-3)	5199	1
R	213	FITTING ASSY, STRINGER 16 FORWARD STOP.	5199	1
R	214	FITTING ASSY, STRINGER 9 AFT STOP	5199	1
R	215	FITTING ASSY, STRINGER 14 AFT STOP.	5199	1
R	216	FITTING ASSY, STRINGER 7 THRU 14 FORWARD STOP	5199	2
R	217	FITTING ASSY, STRINGER 7 THRU 14 FORWARD STOP	5199	4
R	218	FITTING ASSY, STRINGER 15 FORWARD STOP.	5199	1
R	219	FITTING ASSY, STRINGER 8 THRU 13 AFT STOP	5199	4
R	220	FITTING ASSY, STRINGER 8 THRU 13 AFT STOP	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 3A 221	90-7808-3	. FITTING ASSY, STRINGER 15 AFT STOP	5199	1
R 222	65-51276-9	. FITTING ASSY, STRINGER 7 AFT STOP	5199	1
R 223	66-12688-1	. . BUSHING	5199	1
R 224	50-9759-7	. . FITTING, STRINGER 16 AFT STOP (REWORKED BY SB 3281) (USED ON 50-9759-8, -9)	5199	1
R 224	50-9758-6	. . FITTING, STRINGER 16 FORWARD STOP (USED ON 50-9758-7 AND -8)	5199	1
R 224	69-1949-6	. . FITTING, STRINGER 9 AFT STOP (USED ON 69-1949-5)	5199	1
R 224	69-1948-6	. . FITTING, STRINGER 14 AFT STOP (USED ON 69-1948-5)	5199	1
R 224	90-7804-9	. . FITTING, STRINGER 7 THRU 14 FORWARD STOP (USED ON 90-7804-7)	5199	1
R 224	90-7804-10	. . FITTING, STRINGER 7 THRU 14 FORWARD STOP (USED ON 90-7804-8)	5199	1
R 224	90-7805-4	. . FITTING, STRINGER 15 FORWARD STOP (USED ON 90-7805-3)	5199	1
R 224	90-7807-9	. . FITTING, STRINGER 8 THRU 13 AFT STOP (USED ON 90-7807-7)	5199	1
R 224	90-7807-10	. . FITTING, STRINGER 8 THRU 13 AFT STOP (USED ON 90-7807-8)	5199	1
R 224	90-7808-4	. . FITTING, STRINGER 15 AFT STOP (USED ON 90-7808-3)	5199	1
R 224	65-51276-8	. . FITTING, STRINGER 7 AFT STOP (USED ON 65-51276-9)	5199	1
R 225	65-80053-2	. SHIM, (USED WITH 50-9759-8)	5199	AR
R 225	65-80053-3	. SHIM, (USED WITH 50-9759-8)	5199	AR
R 225	65-80053-4	. SHIM, (USED WITH 50-7958-7)	5199	AR
R 225	65-80053-5	. SHIM, (USED WITH 50-7958-7)	5199	AR
R 225	65-80053-8	. SHIM, (USED WITH 69-1949-5)	5199	AR
R 225	65-80053-7	. SHIM, (USED WITH 69-1948-5)	5199	AR
R 225	65-80053-6	. SHIM, (USED WITH 90-7804-7 AND -8)	5199	AR
R 225	65-80053-9	. SHIM, (USED WITH 90-7805-3)	5199	AR
R 225	65-80053-10	. SHIM, (USED WITH 90-7807-7 AND -8)	5199	AR
R 225	65-80053-11	. SHIM, (USED WITH 90-7808-3)	5199	AR
R 225	65-80053-1	. SHIM, (USED WITH 65-51276-4 AND -9)	5199	AR

MISSING ITEM NUMBERS ARE NOT APPLICABLE


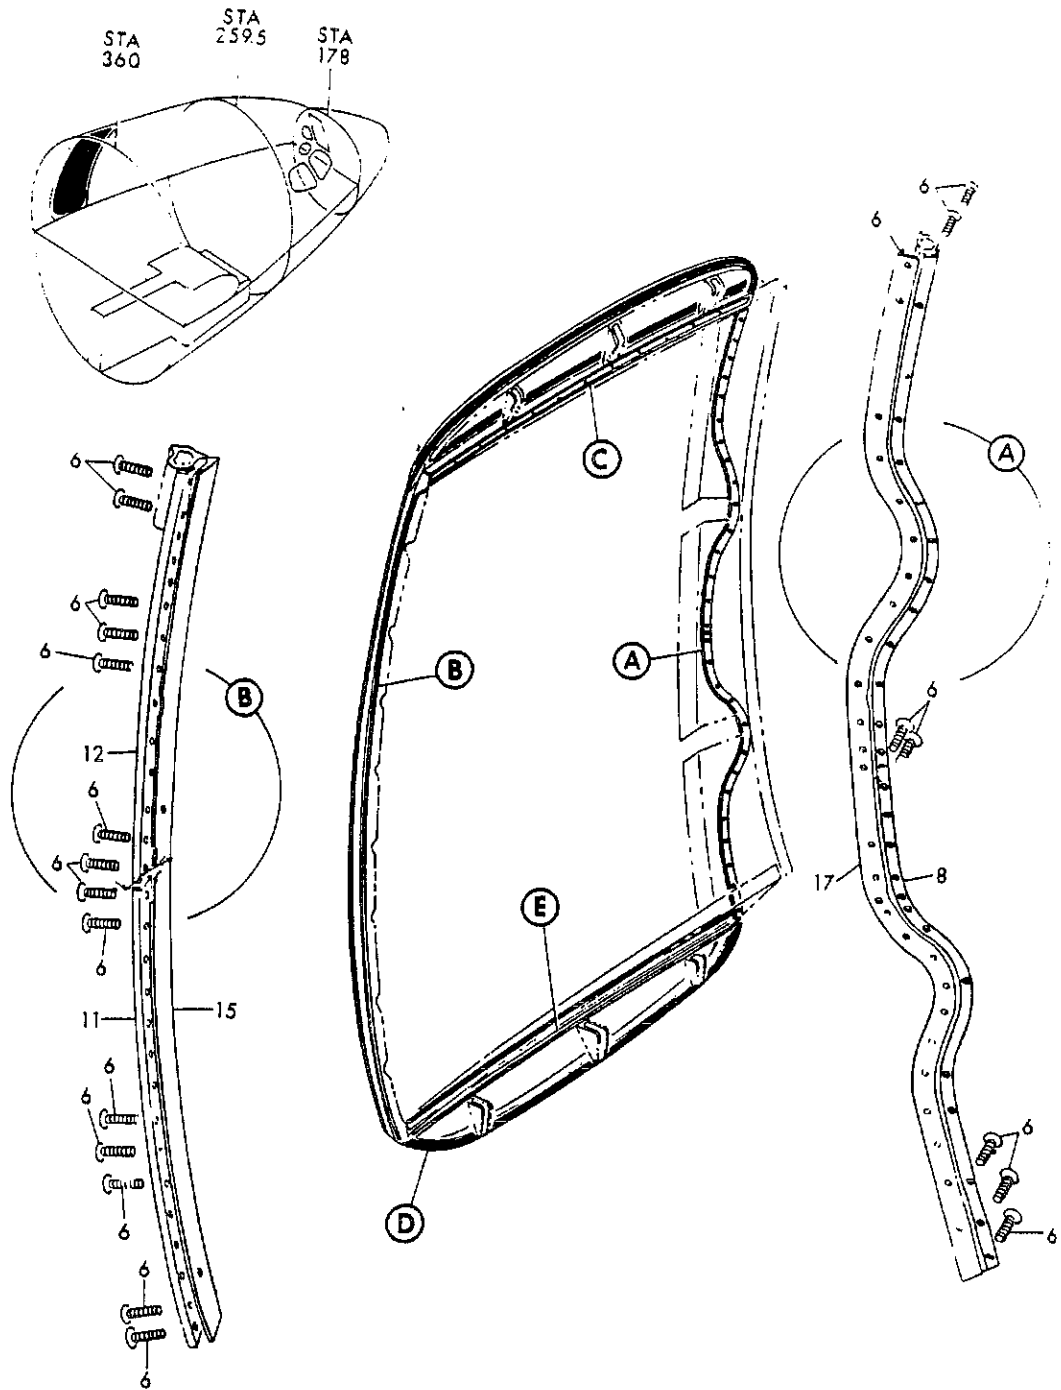


FIGURE 4. SEAL INSTL, FORWARD ENTRY DOOR (SHEET 1)



52-01-04 SHT 2 707-320 R 257

FIGURE 4. SEAL INSTL, FORWARD ENTRY DOOR (SHEET 2)

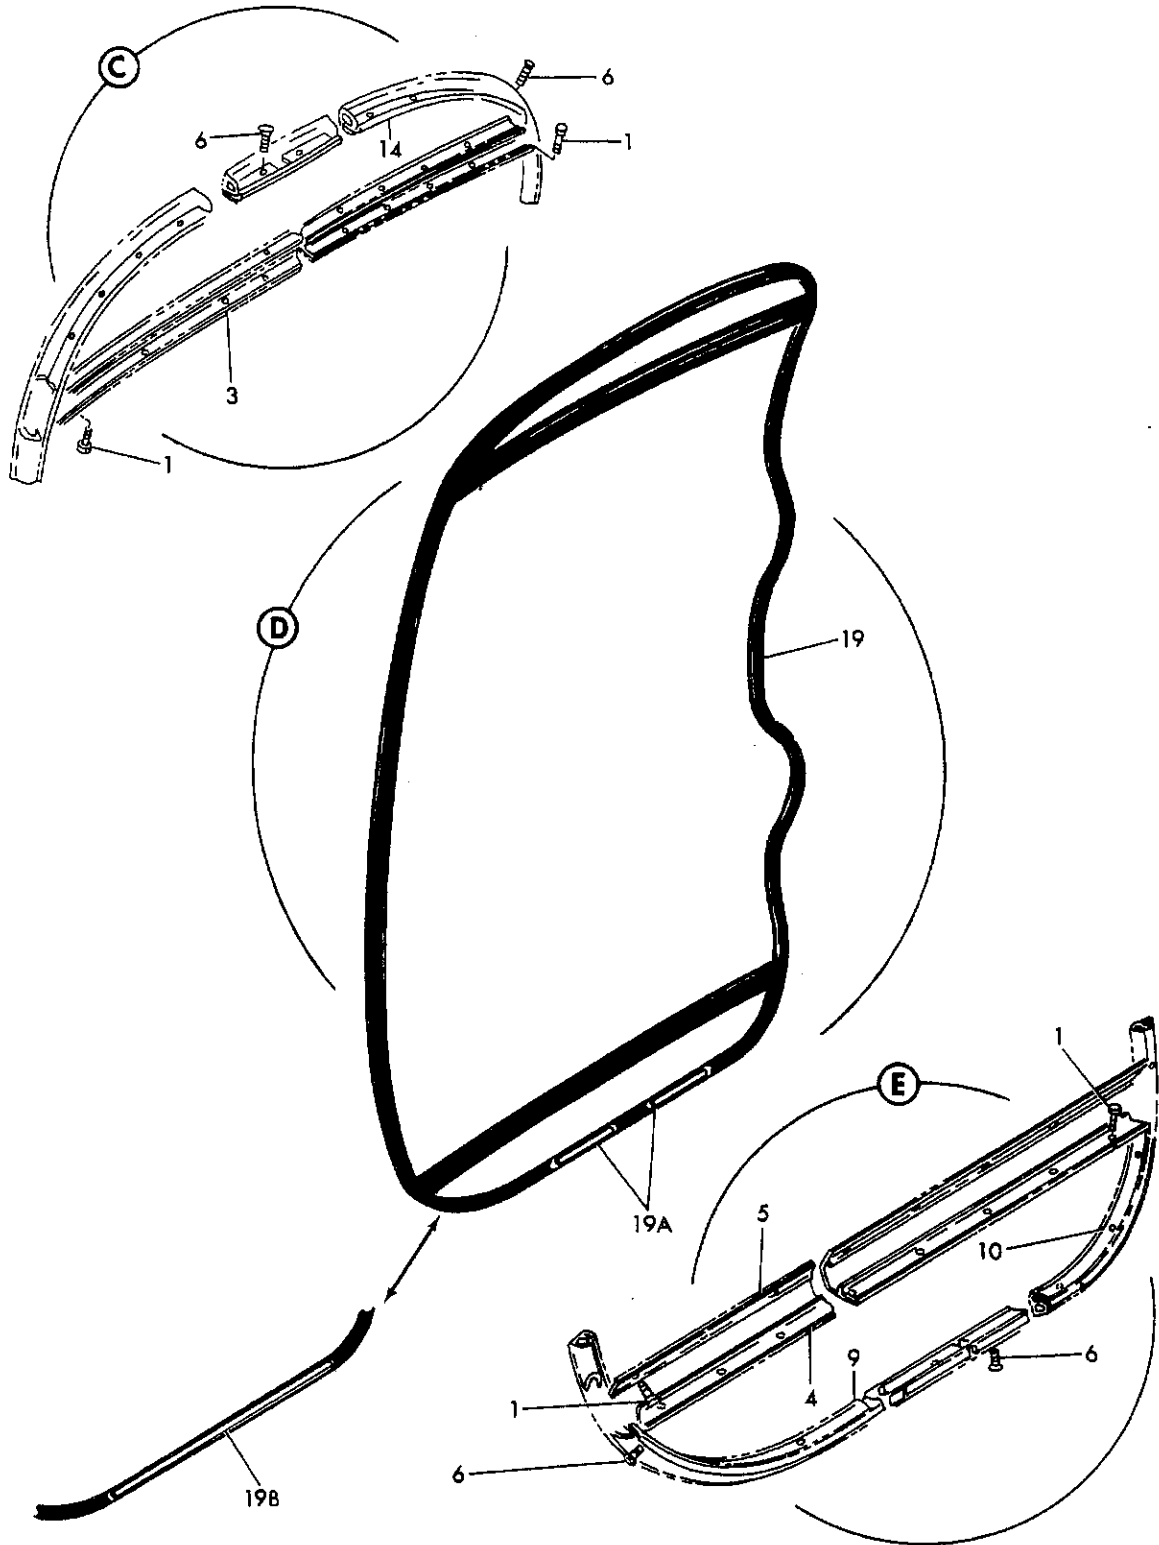

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
4	65-2124		SEAL INSTL, FORWARD ENTRY DOOR (SEE FIG. 3, ITEM 210. . AND FIG. 3A, ITEM 205)		RF
	65-2124-3		SEAL INSTL, FORWARD ENTRY (USED ON REPLACEMENT DOOR. . ASSY 50-7945-88) (SEE FIG. 3, ITEM 210)	0150	RF
1	AN3-5A		. BOLT.		56
2	90-7809-19		. RETAINER, UPPER HINGE UPPER		1
3	90-7809-20		. RETAINER, UPPER HINGE LOWER		1
4	90-7809-21		. RETAINER, LOWER HINGE UPPER		1
5	90-7809-22		. RETAINER, LOWER HINGE LOWER		1
6	NAS602-10		. SCREW		87
7	69-12003-7		. RETAINER, FORWARD LOWER		1
8	69-12003-6		. RETAINER, FORWARD UPPER		1
9	90-7809-6		. RETAINER, LOWER FORWARD		1
10	90-7809-5		. RETAINER, LOWER AFT		1
11	90-7809-23		. RETAINER, AFT LOWER (OPTIONAL 90-7809-15)		1
11	90-7809-15		. RETAINER, AFT LOWER (OPTIONAL TO 90-7809-23)		1
12	90-7809-24		. RETAINER, AFT UPPER (OPTIONAL 90-7809-16)		1
12	90-7809-16		. RETAINER, AFT UPPER (OPTIONAL TO 90-7809-24)		1
13	90-7809-3		. RETAINER, UPPER AFT		1
14	90-7809-4		. RETAINER, UPPER FORWARD		1
15	69-9307-5		. ANGLE, LOCATOR. (OPTIONAL 69-9307-1)		1
15	69-9307-1		. ANGLE, LOCATOR. (OPTIONAL TO 69-9307-5)		1
16	69-9307-6		. ANGLE, LOCATOR. (OPTION 69-9307-2)		1
16	69-9307-2		. ANGLE, LOCATOR. (OPTIONAL TO 69-9307-6)		1
17	69-12003-5		. ANGLE, LOCATOR.		1
18	69-12003-4		. ANGLE, LOCATOR.		1
19A	65-2124-1		. INSERT. (OPTIONAL 65-2124-25)		2
19B	65-2124-25		. SEAL INSERT (OPTIONAL TO 65-2124-1)		1
100	BACR16C10-201S		. RIVNUT.		28
	BACR16C8-201S		. RIVNUT.		3
	BACR16C8-161S		. RIVNUT.		35
	BACR16C8-106S		. RIVNUT.		53
			DOOR INSTL, FORWARD ENTRY (FOR REF SEE 52-01, FIG. 1 AN 1A)		RF
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

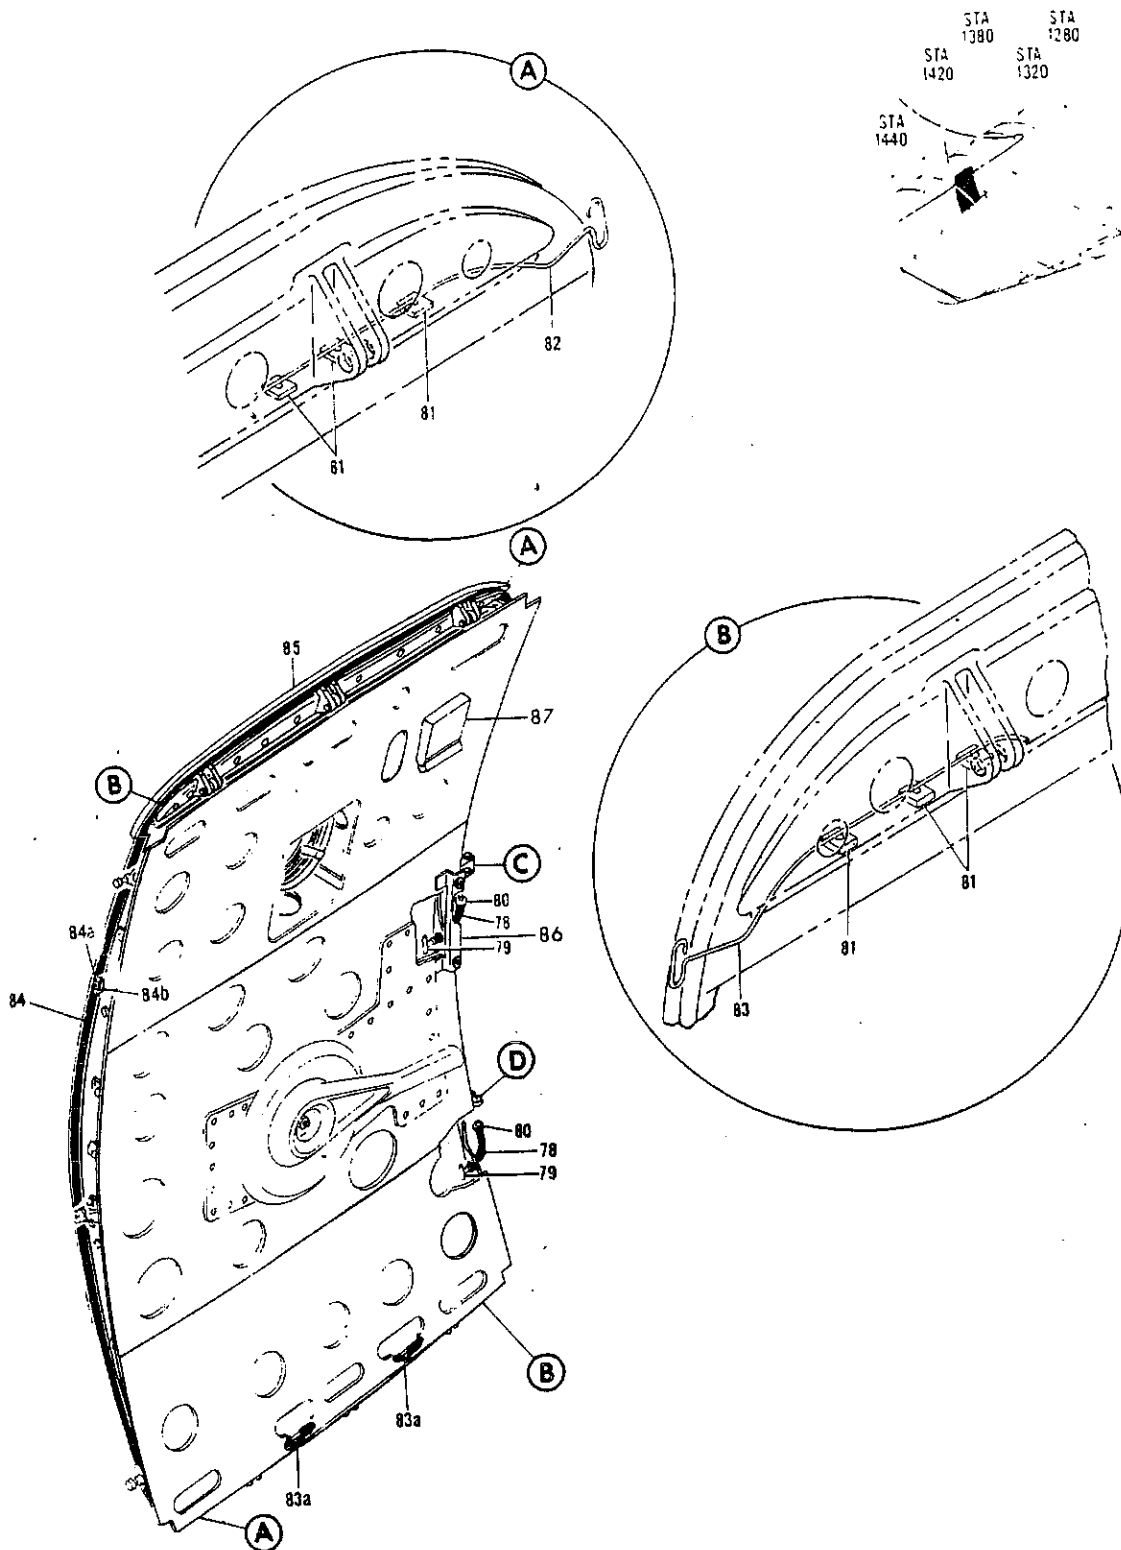


FIGURE 5. DOOR INSTL, AFT ENTRY (DOORS ONLY) (SHEET 1)

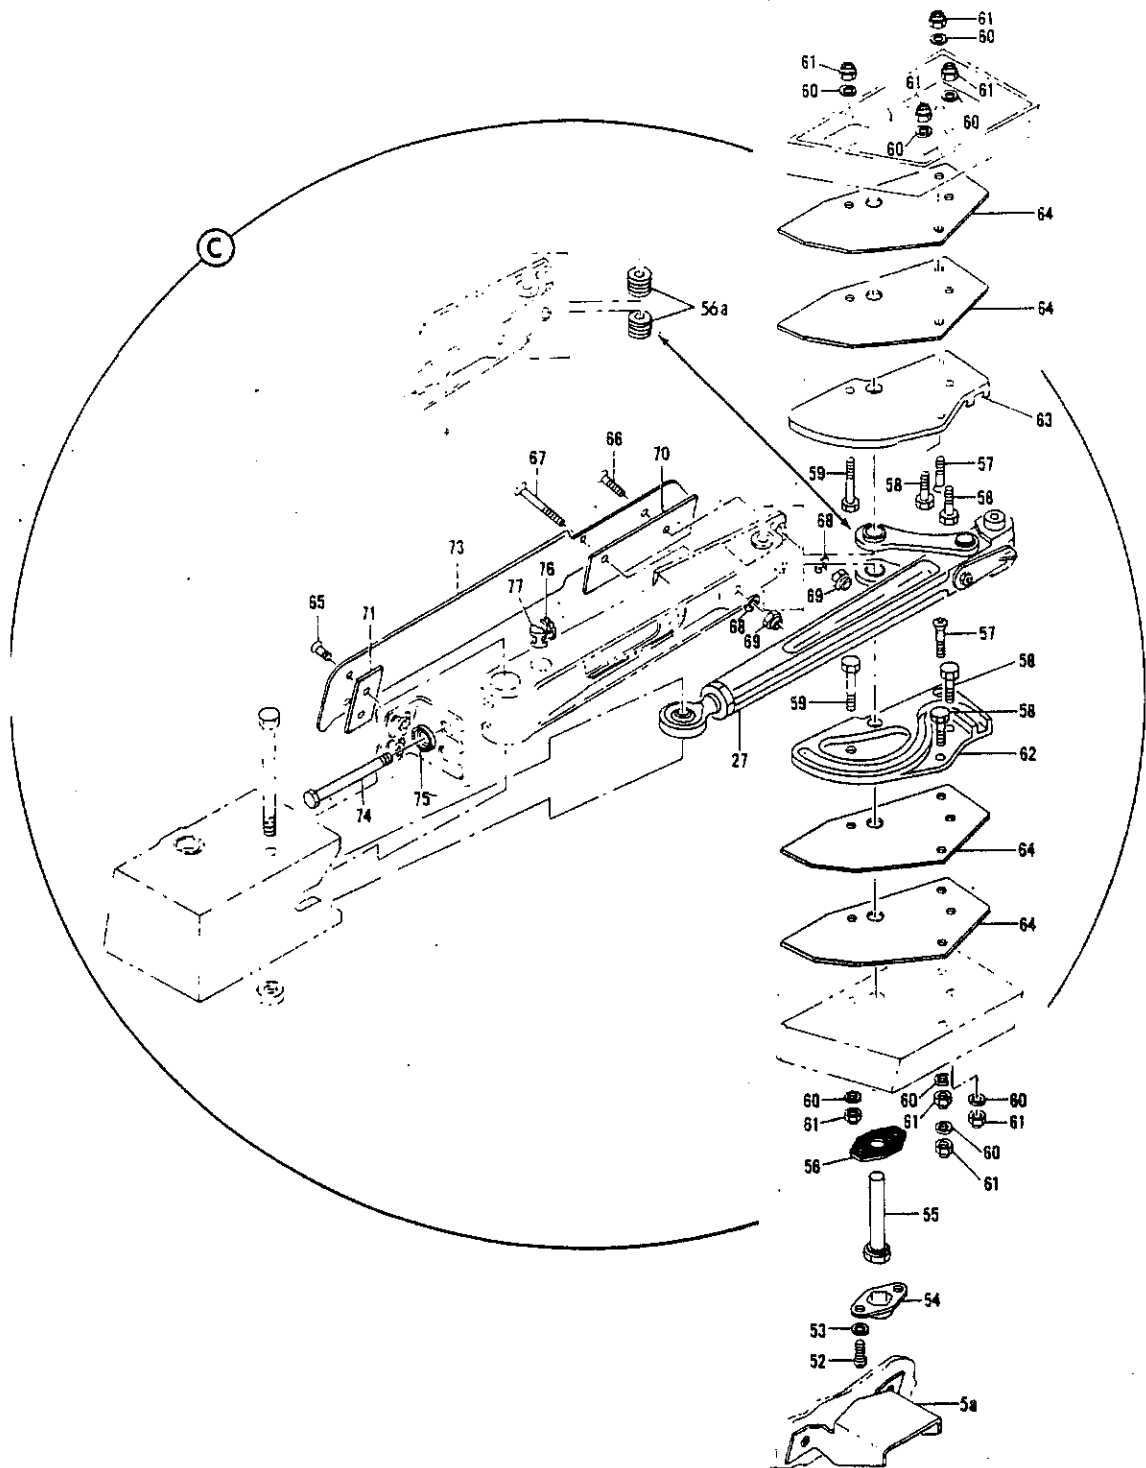


FIGURE 5. DOOR INSTL, AFT ENTRY (DOORS ONLY) (SHEET 2)

NOV 21/90

52-01-5

DETAILED PARTS LIST
52-01-5
PAGE 1

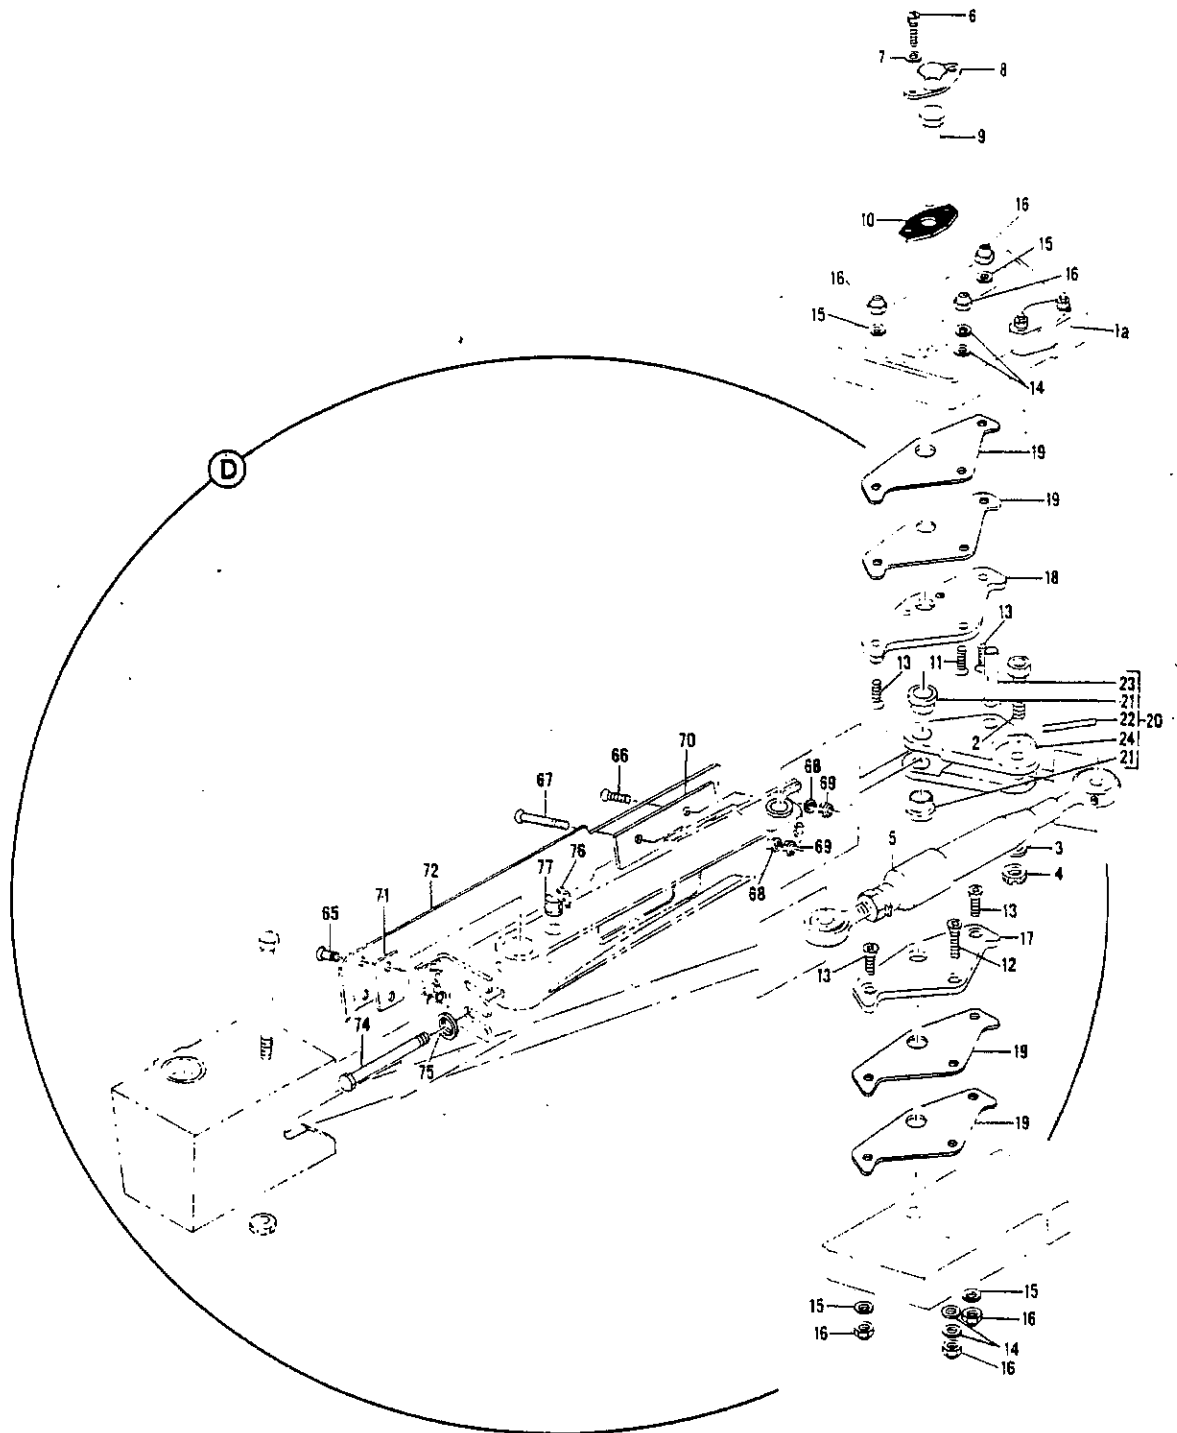


FIGURE 5. DOOR INSTL, AFT ENTRY (DOORS ONLY) (SHEET 3)

BOEING *707* Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5	50-7988		DOOR INSTL, AFT ENTRY (DOORS ONLY) (SEE 53-2, FIG. 3, . ITEM 36 AND 53-2, FIG. 7A, ITEM 36)		RF
1A	69-42601-1		. CAP, DOOR SNUBBER ATTACHMENT.		1
	BAC830FL2-12		ATTACHING PARTS		2
	AN960D8L		. BOLT.		2
	NAS679A08W		. WASHER.		2
			. NUT		2
2	NAS1105-13D		-----*		
3	AN960D516L		. BOLT.		1
4	AN320-5		. WASHER.		1
5	90-10072-1		. NUT		1
			. SNUBBER ASSY.	0101	1
5	90-10072		(OPTIONAL 90-10072)		
			. SNUBBER ASSY.	0101	1
5	90-10072-2		(OPTIONAL TO 90-10072-1)		
			. SNUBBER ASSY.	0299	1
			. DOORS, (SEE FIG. 23).		
			. REQUIRED PLACARDS, (SEE 11-2, FIG. 232)		
6	MS24677-20		. SCREW		2
7	NAS549-8		. WASHER.		2
8	66-9439		. RETAINER, DOOR HINGE PIN.		1
9	66-2617-8		. PIN, HINGE.		1
10	63-1672		. GASKET, AFT ENTRY DOOR RETAINER RUBBER.		1
11	NAS517-4-6		. SCREW		1
12	NAS517-4-12		. SCREW		1
13	NAS517-4-7		. SCREW		4
14	AN960D416L		. WASHER.		4
15	AN960D416		. WASHER.		4
16	NAS679A4W		. NUT		6
17	60-7280-1101		. PLATE, AFT ENTRY DOOR STOP.		1
18	60-7280-800		. PLATE, STOP		1
19	66-3182		. SHIM, AFT ENTRY DOOR.		AR
20	90-10400-4		. LINK ASSY, AFT ENTRY DOOR RADIUS.		1
21	NAS77A7-19		. BUSHING		2
22	NAS561P3-16		. PIN		1
23	63-1015		. DOWEL, DOOR RADIUS LINK		1
24	90-10400-5		. LINK, AFT ENTRY DOOR RADIUS		1
27	69-5338-7		. ARM ASSY, GUIDE (SEE FIG. 10)		1
52	MS24677-20		. SCREW		2
53	NAS549-8		. WASHER.		2
54	66-9439		. RETAINER, DOOR HINGE PIN.		1
55	66-2617-8		. PIN, HINGE.		1
56	63-1672		. GASKET, AFT ENTRY DOOR RETAINER RUBBER.		1
57	NAS517-4-4		. SCREW		2
58	NAS1104-3		. BOLT.		4
59	NAS1104-9		. BOLT.		2
60	AN960D416L		. WASHER.		8
61	NAS679A4W		. NUT		8
62	69-5260-3		. PLATE, GUIDE.		1
63	69-5260-4		. PLATE, AFT ENTRY DOOR GUIDE		1
64	66-3182-2		. SHIM, AFT ENTRY DOOR.		AR
65	NAS517-3-2		. SCREW		4
66	NAS517-3-4		. SCREW		2
67	NAS517-3-18		. SCREW		2
68	AN960D10		. WASHER.		4
69	NAS679A3W		. NUT		4
70	BACS40A12-74		. SHIM.		AR
70	BACS40B12-74		. SHIM.		AR
70	BACS40C12-74		. SHIM.		AR
71	BACS40A12-27		. SHIM.		AR
71	BACS40B12-27		. SHIM.		AR
71	BACS40C12-27		. SHIM.		AR
72	69-3192-9		. COVER, AFT ENTRY DOOR LOWER HINGE		1
73	69-3192-8		. COVER, AFT ENTRY DOOR UPPER HINGE		1
74	NAS1304-24		. BOLT.		4
75	AN960-416		. WASHER.		4
76	BACR10W4		. RETAINER.		4
77	BACN10EU4		. NUT		4
	65-14014		. DRAIN INSTL, AFT ENTRY DOOR UPPER AND LOWER HINGE		1
			WATER		
R	78	65-14014-1	. HOSE, DRAIN CONNECTING.	0150	2
R	78	65-14014-3	. HOSE, DRAIN CONNECTING.	5199	2
	79	66-9201	. FITTING ASSY, CAVITY DRAIN HINGE.		2
	80	66-4742-800	. FITTING ASSY, CAVITY DRAIN HINGE.		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
5	65-42052-1	.	KEEPER	INSTL	,	ENTRY	DOOR	SEAL		1
81	63-9484	.	.	CLAMP	,	SPRING	RETAINER	.		12
82	66-18031-1	.	.	SPRING	,	CANTILEVER	SEAL	KEEPER		2
83	66-18031-2	.	.	SPRING	,	CANTILEVER	SEAL	KEEPER		2
83A	50-7988-202	.	INSERT	,	AFT	ENTRY	DOOR	SEAL		2
	65-12353	.	SHIM	INSTL	,	ENTRY	AND	GALLEY	DOORS	1
84A	65-12353-1	.	.	SHIM	,	ENTRY	AND	GALLEY	DOORS	AR
		.	.	SHIM	,	ENTRY	AND	GALLEY	DOORS	SEAL (EXTRUSION NO. BAC1521-585)
84B	66-10869	.	.	CLIP	,	ENTRY	AND	GALLEY	DOORS	AR
85	50-7988-1	.	DOOR	ASSY	,	AFT	ENTRY	(SEE FIG. 7) (SEE FIG. 6 FOR . . .	5199	1
		.	SPARES	ASSEMBLY)						
85	65-60432-1	.	DOOR	ASSY	,	AFT	ENTRY	(50-7988-1 REWORKED) (REWORKED . . .	0150	1
		.	BY SB 3309) (SEE FIG. 7)							
86	69-4832-3	.	BRACKET	INSTL	,	AFT	ENTRY	DOOR	ASSIST	1
		.	25-10, FIG. 65)							
		.	FOR	REFERENCE	TO	OTHER	DOOR	DETAILS	, SEE	
		.	NHA.							
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

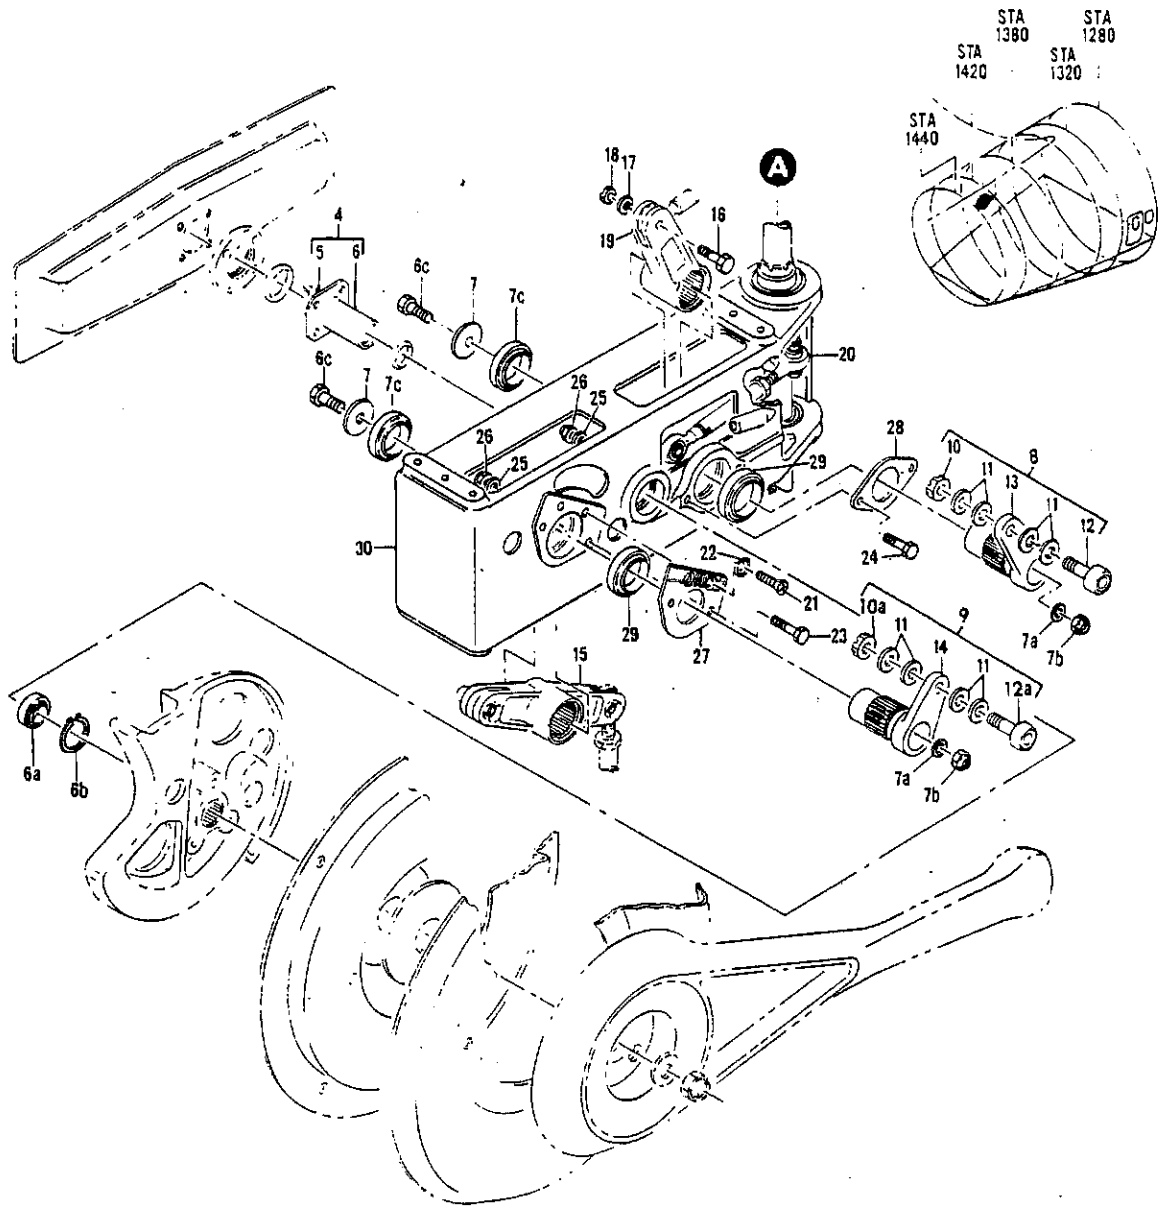


FIGURE 6. SPARES ASSY, AFT ENTRY DOOR MECHANISM (SHEET 1)

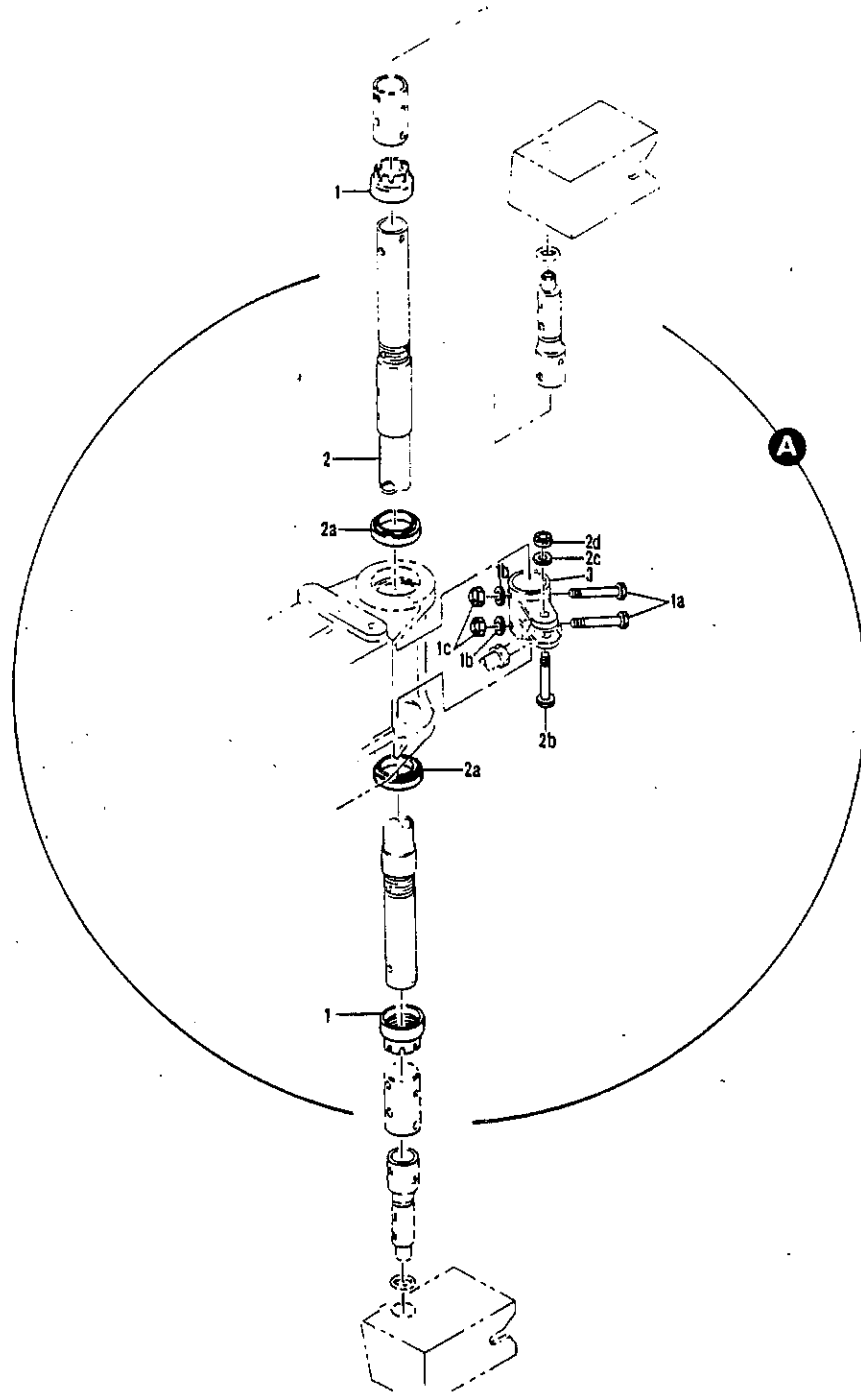


FIGURE 6. SPARES ASSY, AFT ENTRY DOOR MECHANISM (SHEET 2)

NOV 21/90

52-01-6

DETAILED PARTS LIST
52-01-6
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
6	50-7988-200	SPARES ASSY, AFT ENTRY DOOR MECHANISM (SEE FIG. 5, . . . ITEM 85)								RF
1	60-4405	. NUT, ENTRY DOOR BEARING RETAINER SPECIAL.								2
1A	NAS1105-28DW	. BOLT.								2
1B	AN960-516	. WASHER.								2
1C	NAS679A5W	. NUT.								2
2	90-6753	. TUBE, ENTRY DOOR VERTICAL HINGE TORQUE.								1
2A	AN202KP25B	. BEARING.								2
2B	NAS1105-14DW	. BOLT.								1
2C	AN960-516	. WASHER.								1
2D	AN320-5	. NUT.								1
3	60-4366	. CRANK, ENTRY DOOR TORQUE TUBE.								1
4	90-7820	. HOUSING ASSY, HANDLE MECHANISM.								1
5	NAS516-1	. FITTING.								1
6	90-7820-1	. HOUSING, HANDLE MECHANISM.								1
6A	AN201KP12A	. BEARING.								1
6B	NAS50-162	. RING.								1
6C	AN4-5A	. BOLT.								2
7	63-1692	. WASHER.								2
7A	AN960-416L	. WASHER.								2
7B	NAS679A4W	. NUT.								2
7C	AN202KP21B	. BEARING.								2
8	90-7815	. CRANK ASSY, ENTRY DOOR CAM FOLLOWER.								1
9	90-7815-1	. CRANK ASSY, CAM FOLLOWER. (FOR REPLACEMENT ORDER 69-38733-1)								1
9	69-38733-1	. CRANK ASSY, CAM FOLLOWER. (REPLACEMENT FOR 90-7815-1)								1
10	AN320-6	. NUT, (USED ON 90-7815).								1
10A	AN320-6	. NUT, (USED ON 90-7815-1).								1
10A	AN310-6	. NUT, (USED ON 69-38733-1).								1
11	AN960-616L	. WASHER.								4
12	BACB108H60CF6	. BEARING, (USED ON 90-7815). (OPTIONAL BACB10AF6F6H)								1
12	BACB10AF6F6H	. BEARING, (USED ON 90-7815). (OPTIONAL TO BACB108H60CF6)								1
12A	BACB108H60CF6	. BEARING, (USED ON 90-7851-1). (OPTIONAL BACB10AF6F6H)								1
12A	BACB108H60F9	. BEARING, (USED ON 69-38733-1). (OPTIONAL TO BACB108H60CF6)								1
12A	BACB10AF6F6H	. BEARING, (USED ON 90-7815-1). (OPTIONAL TO BACB108H60CF6)								1
13	90-7815-2	. ARM, ENTRY DOOR CAM FOLLOWER CRANK (USED ON 90-7815)								1
14	90-7815-3	. ARM, ENTRY DOOR CAM FOLLOWER CRANK (USED ON 90-7815-1)								1
14	69-38733-2	. ARM, (USED ON 69-38733-1).								1
15	65-1932-2	. CRANK ASSY, LATCHING. (FOR REPLACEMENT ORDER 65-54013)								1
15	65-54013	. CRANK ASSY, LATCHING. (REPLACEMENT FOR 65-1932-2)								1
15	65-1932	. CRANK, LATCHING (USED ON 65-1932-2).								1
15	65-54013-2	. CRANK, (USED ON 65-54013).								1
16	NAS1105-12DW	. BOLT.								1
17	AN960-516	. WASHER.								1
18	AN320-5	. NUT.								1
19	65-1933-2	. CRANK, COCKING. (FOR REPLACEMENT ORDER 65-54024-4)								1
19	65-54024-4	. CRANK, COCKING. (REPLACEMENT FOR 65-1933-2)								1
20	60-7208	. ROD ASSY, ENTRY DOOR COCKING PUSH (SEE FIG. 8).								1
21	NAS517-3-10	. SCREW.								2
22	BACW10UB10	. WASHER.								2
23	AN3-5A	. BOLT.								2
24	AN3-7A	. BOLT.								2
25	BACW10T10	. WASHER.								4
26	NAS679A3W	. NUT.								4
27	63-1058	. RETAINER, ENTRY DOOR LATCH MECHANISM BEARING.								1
28	63-1059	. RETAINER, ENTRY DOOR LATCH MECHANISM.								1
29	AN202KP23B	. BEARING.								2
30	65-1642	. HOUSING ASSY, ENTRY DOOR HANDLE MECHANISM.								1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

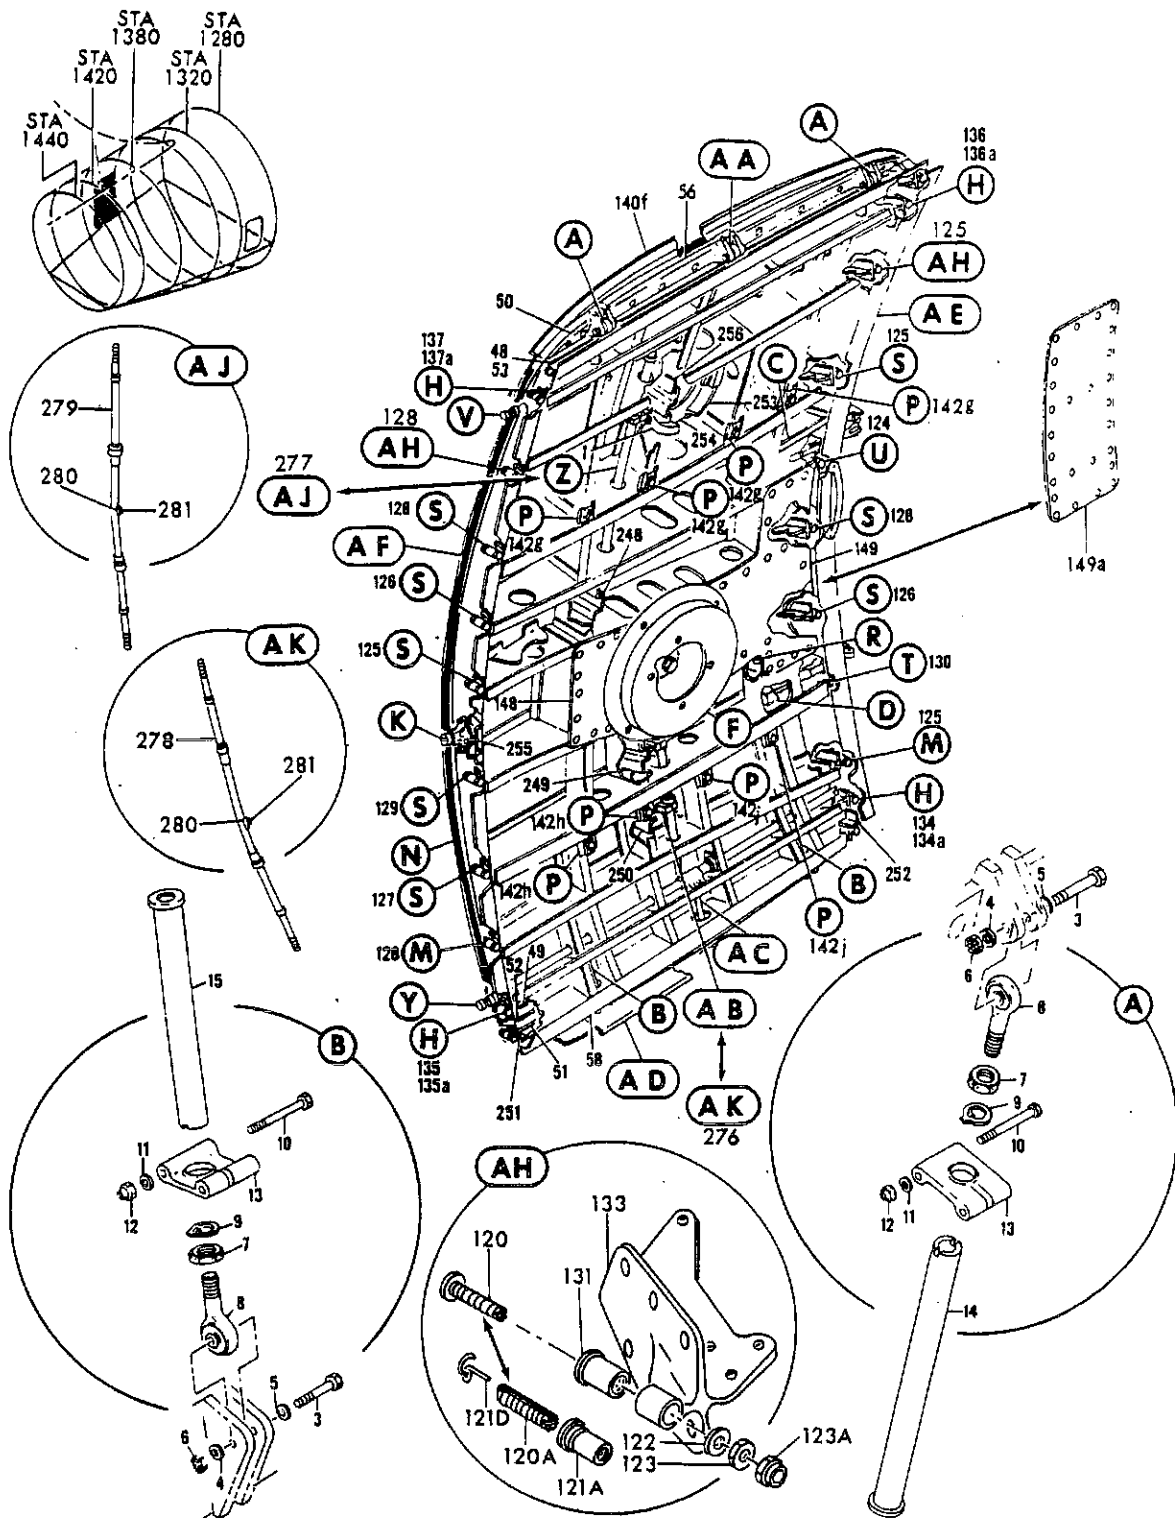
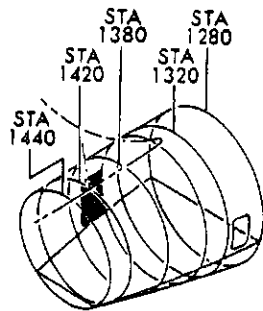


FIGURE 7. DOOR ASSY, AFT ENTRY (SHEET 1)

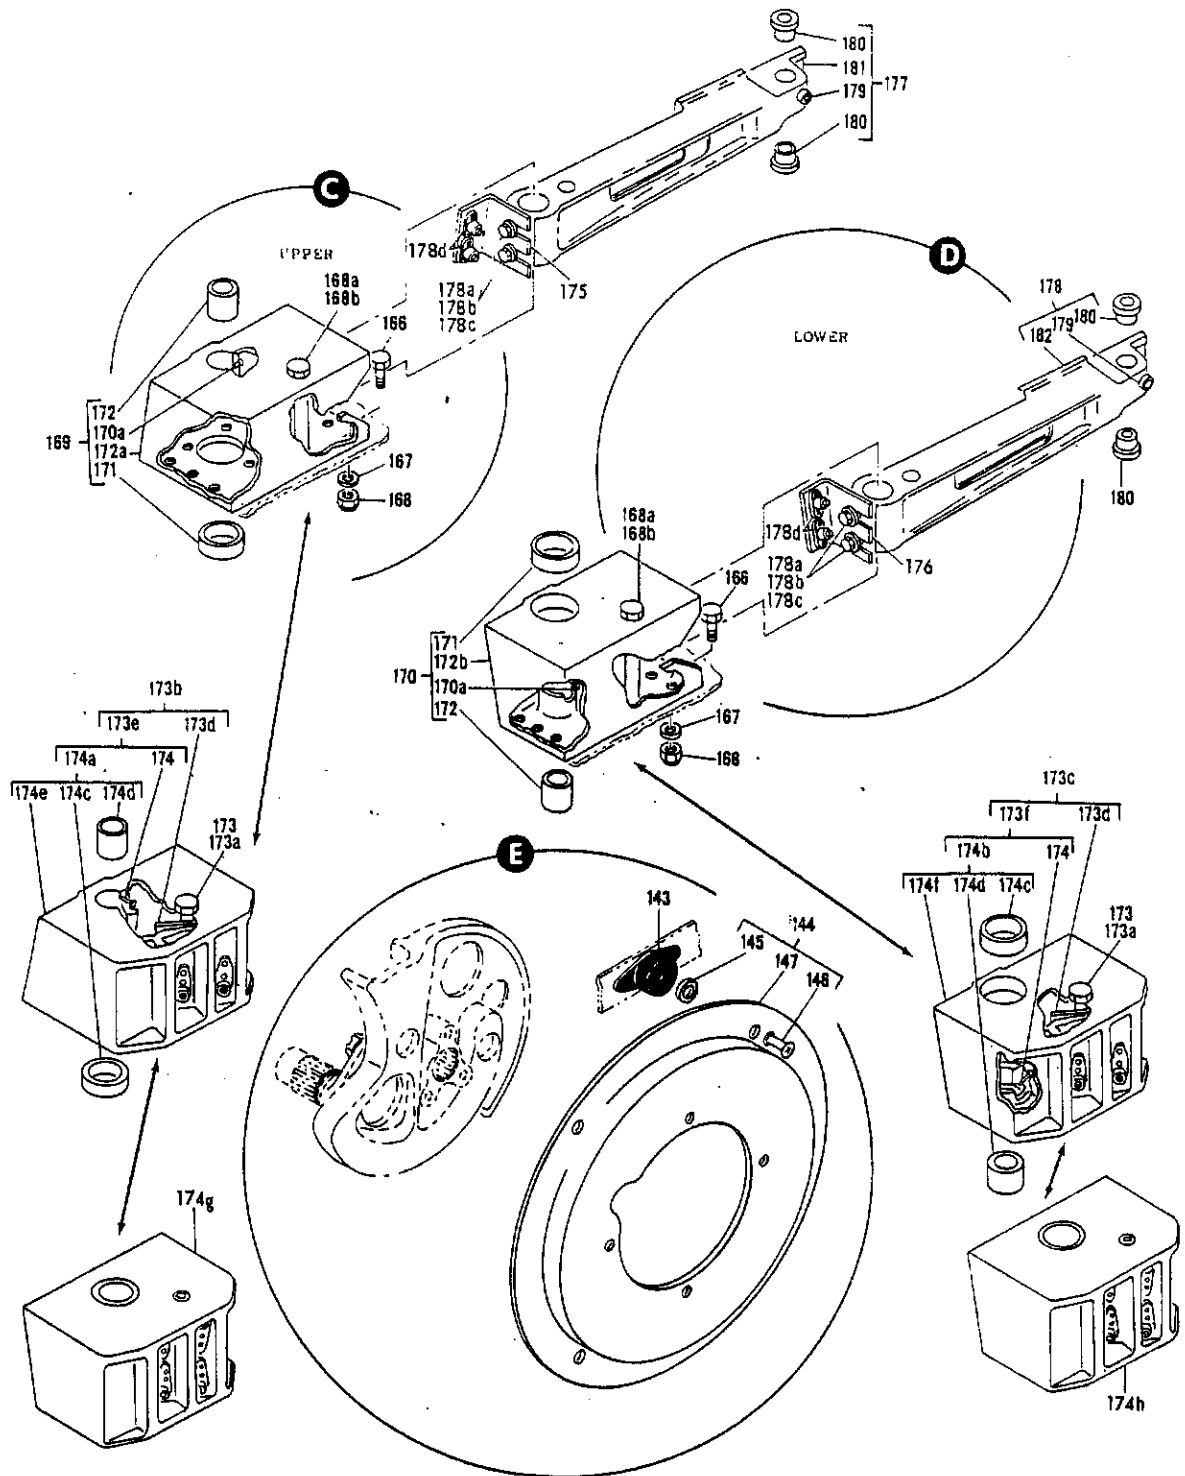


FIGURE 7. DOOR ASSY, AFT ENTRY (SHEET 2)

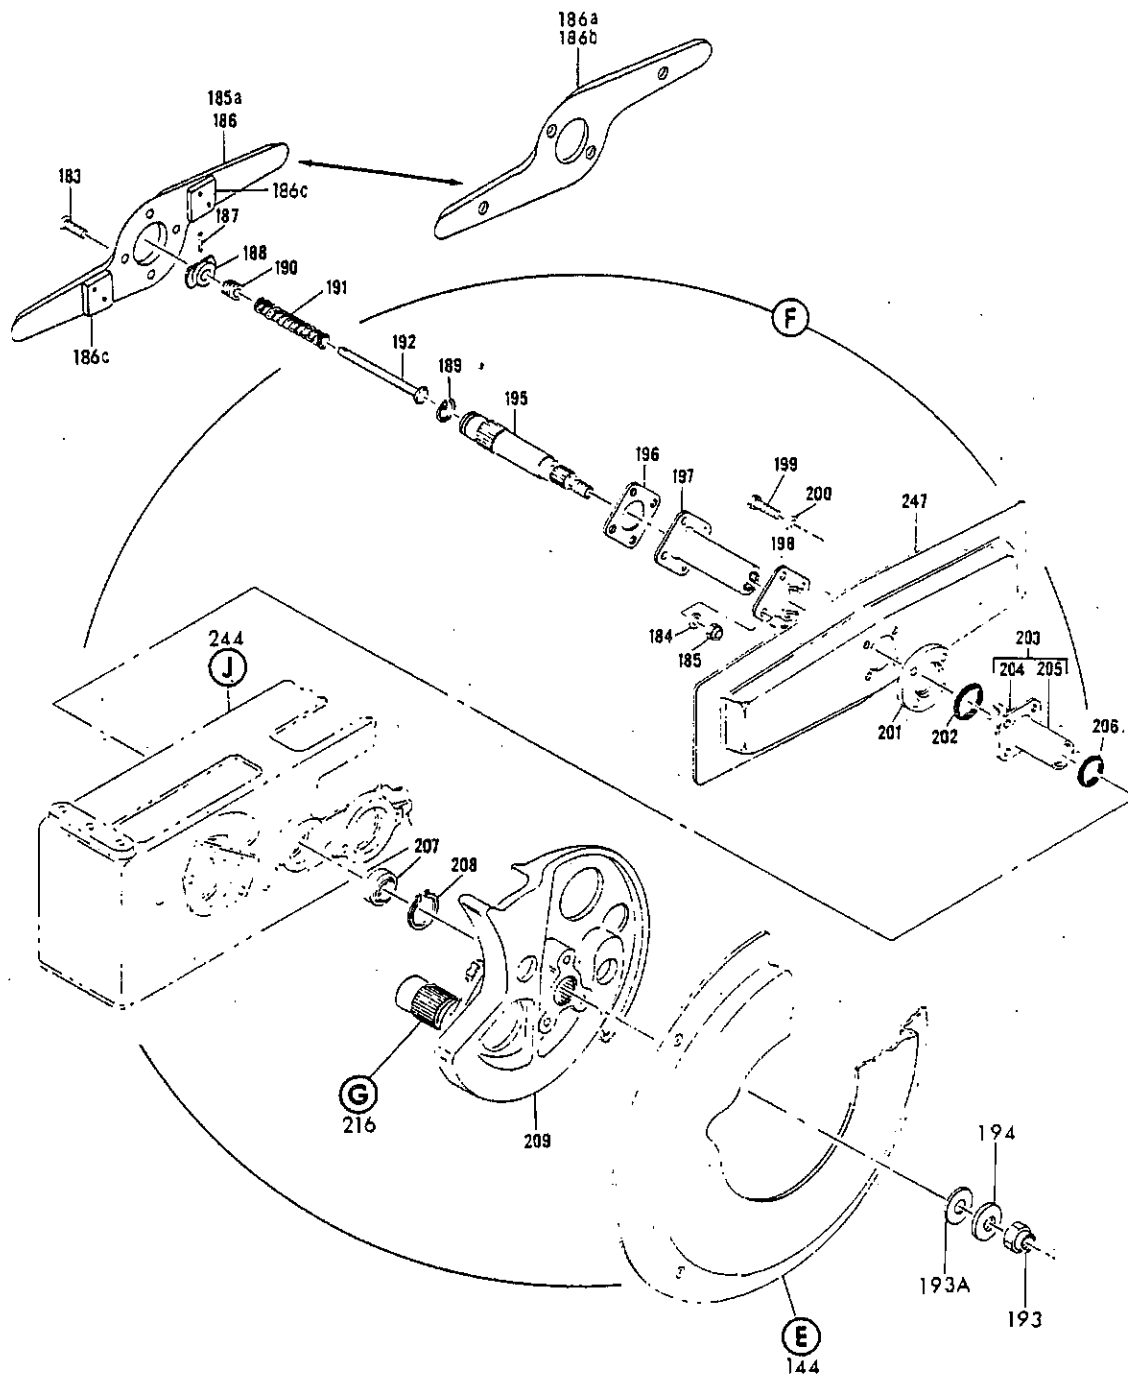


FIGURE 7. DOOR ASSY, AFT ENTRY (SHEET 3)

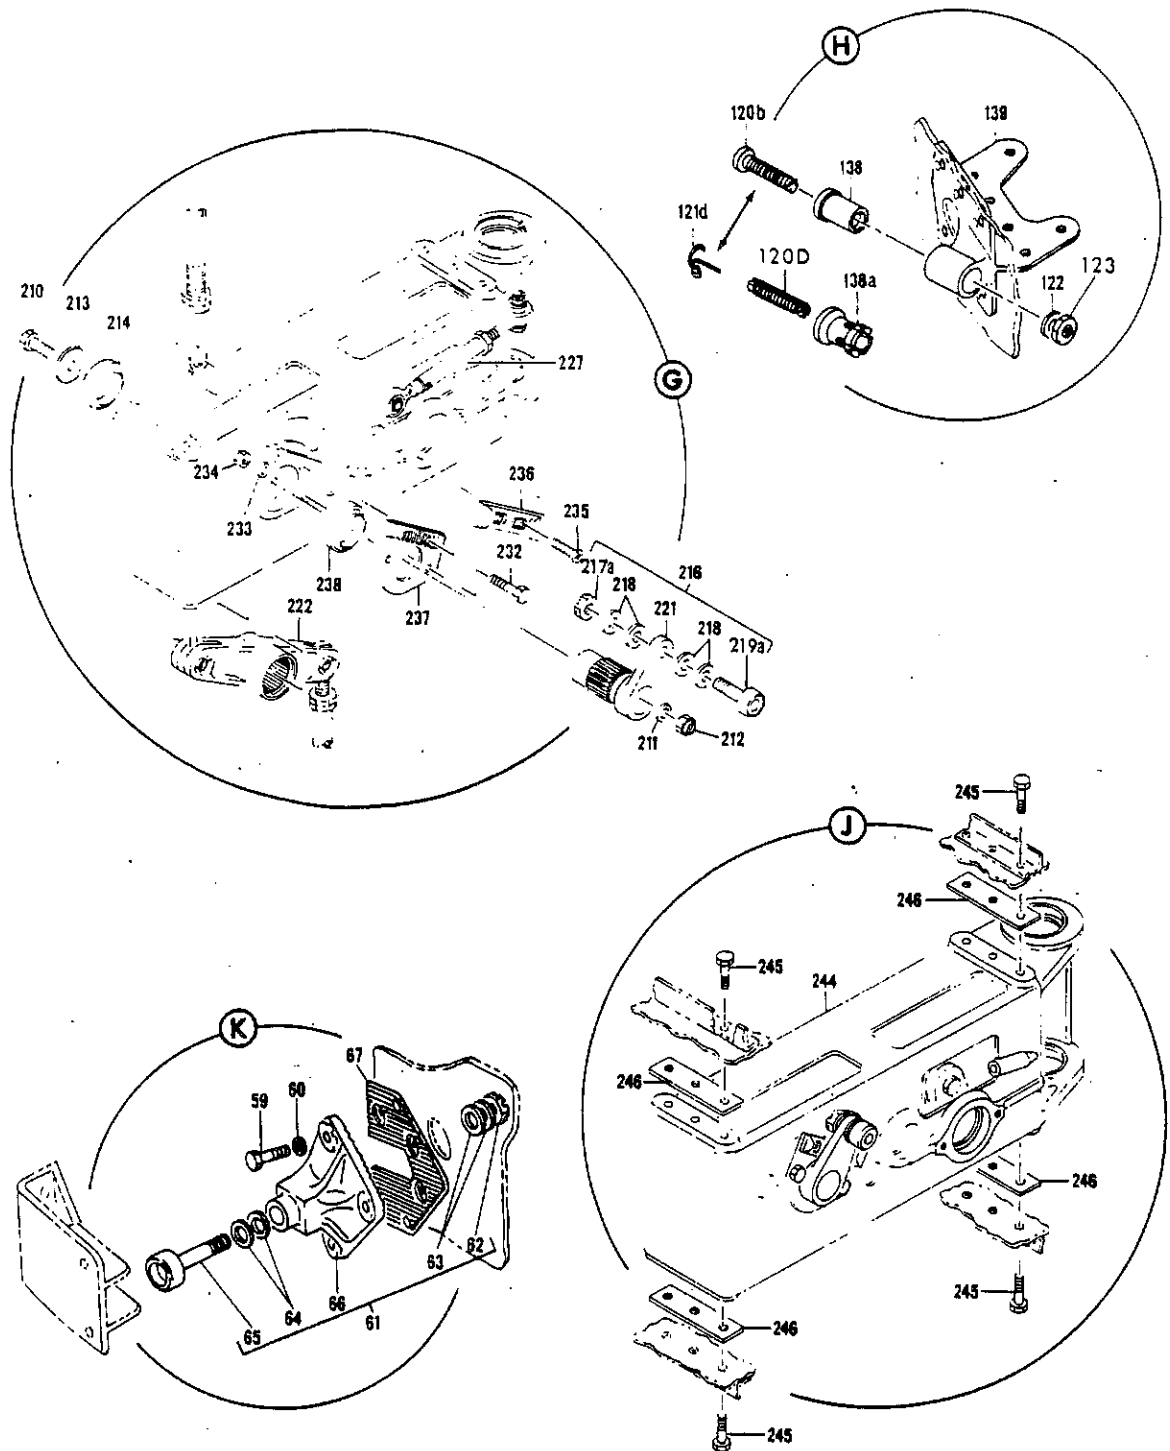


FIGURE 7. DOOR ASSY, AFT ENTRY (SHEET 4)

NOV 21/90

52-01-7

DETAILED PARTS LIST
52-01-7
PAGE 3

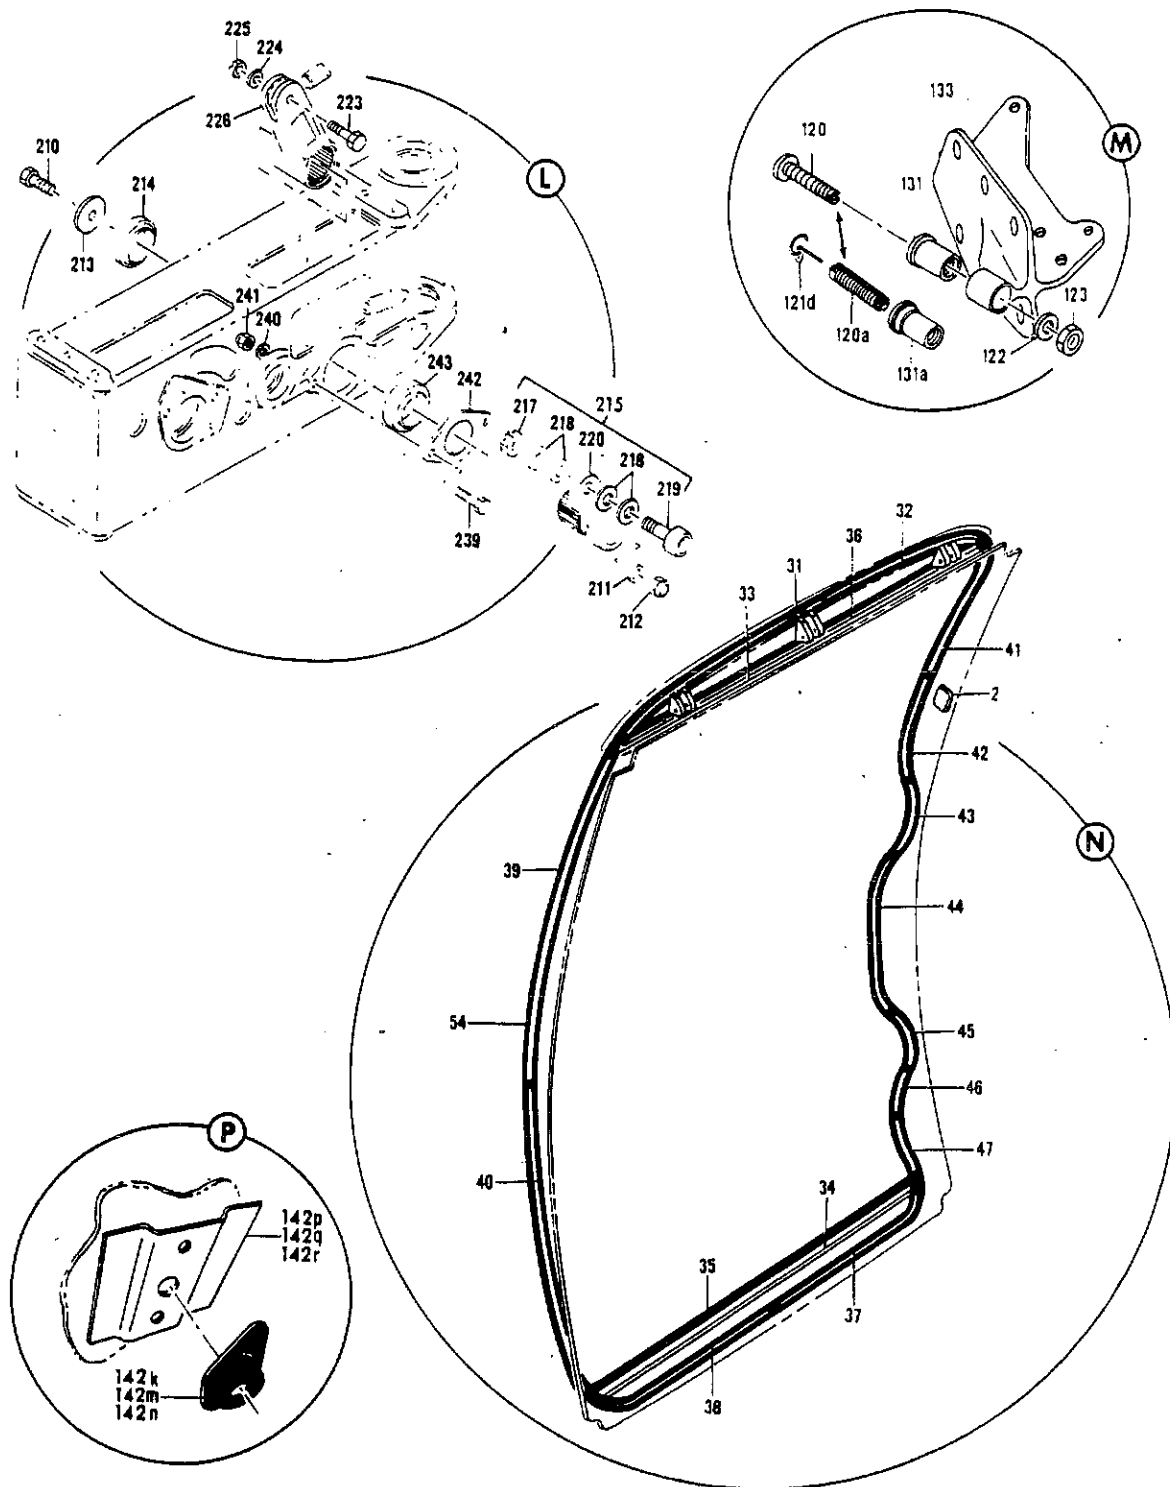


FIGURE 7. DOOR ASSY, AFT ENTRY (SHEET 5)

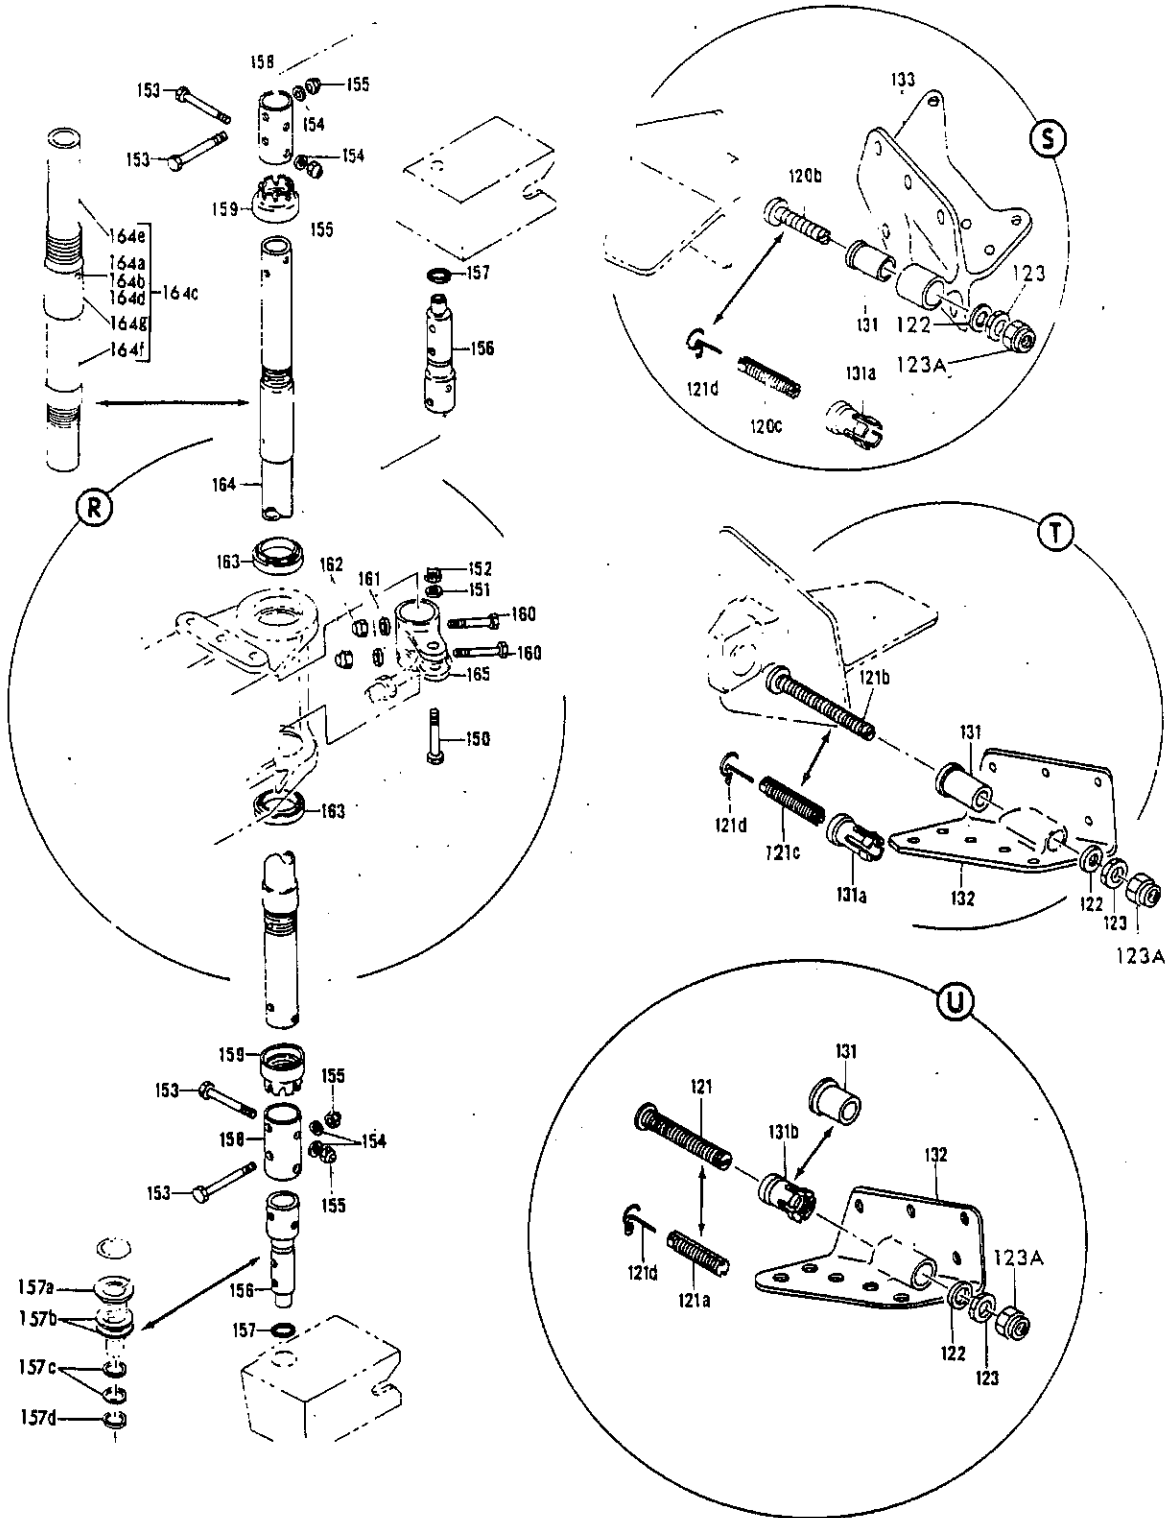


FIGURE 7. DOOR ASSY, AFT ENTRY (SHEET 6)

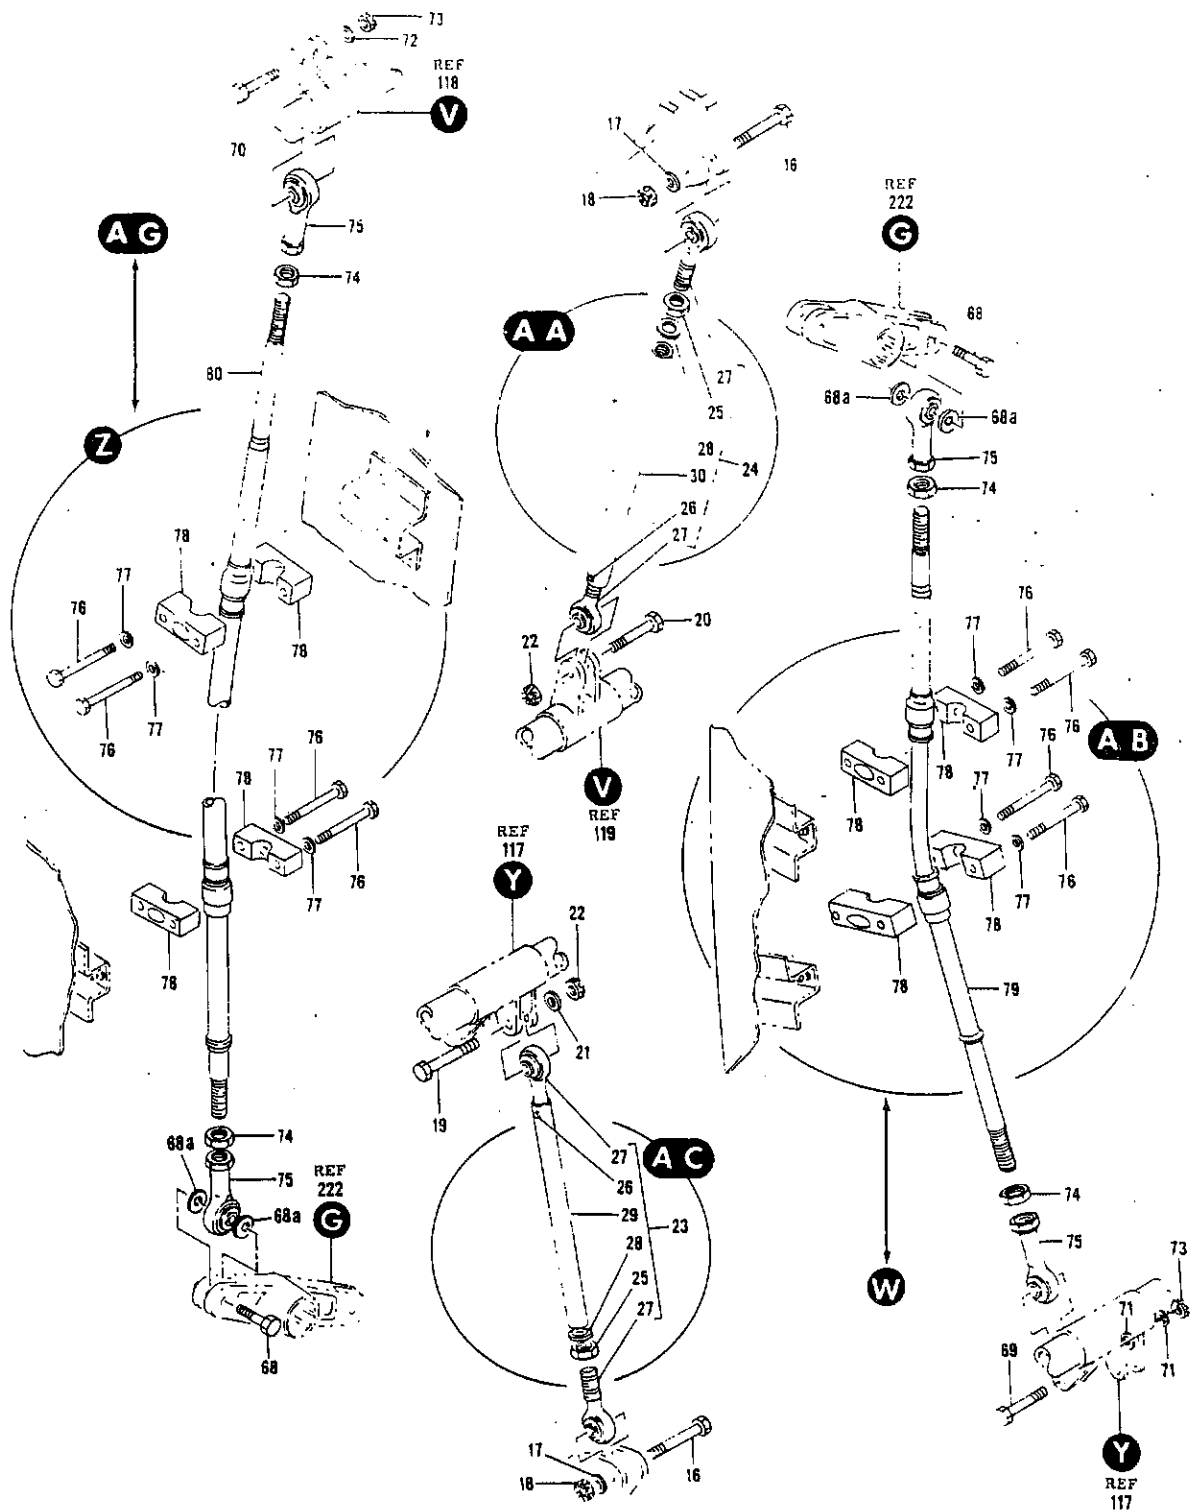


FIGURE 7. DOOR ASSY, AFT ENTRY (SHEET 8)

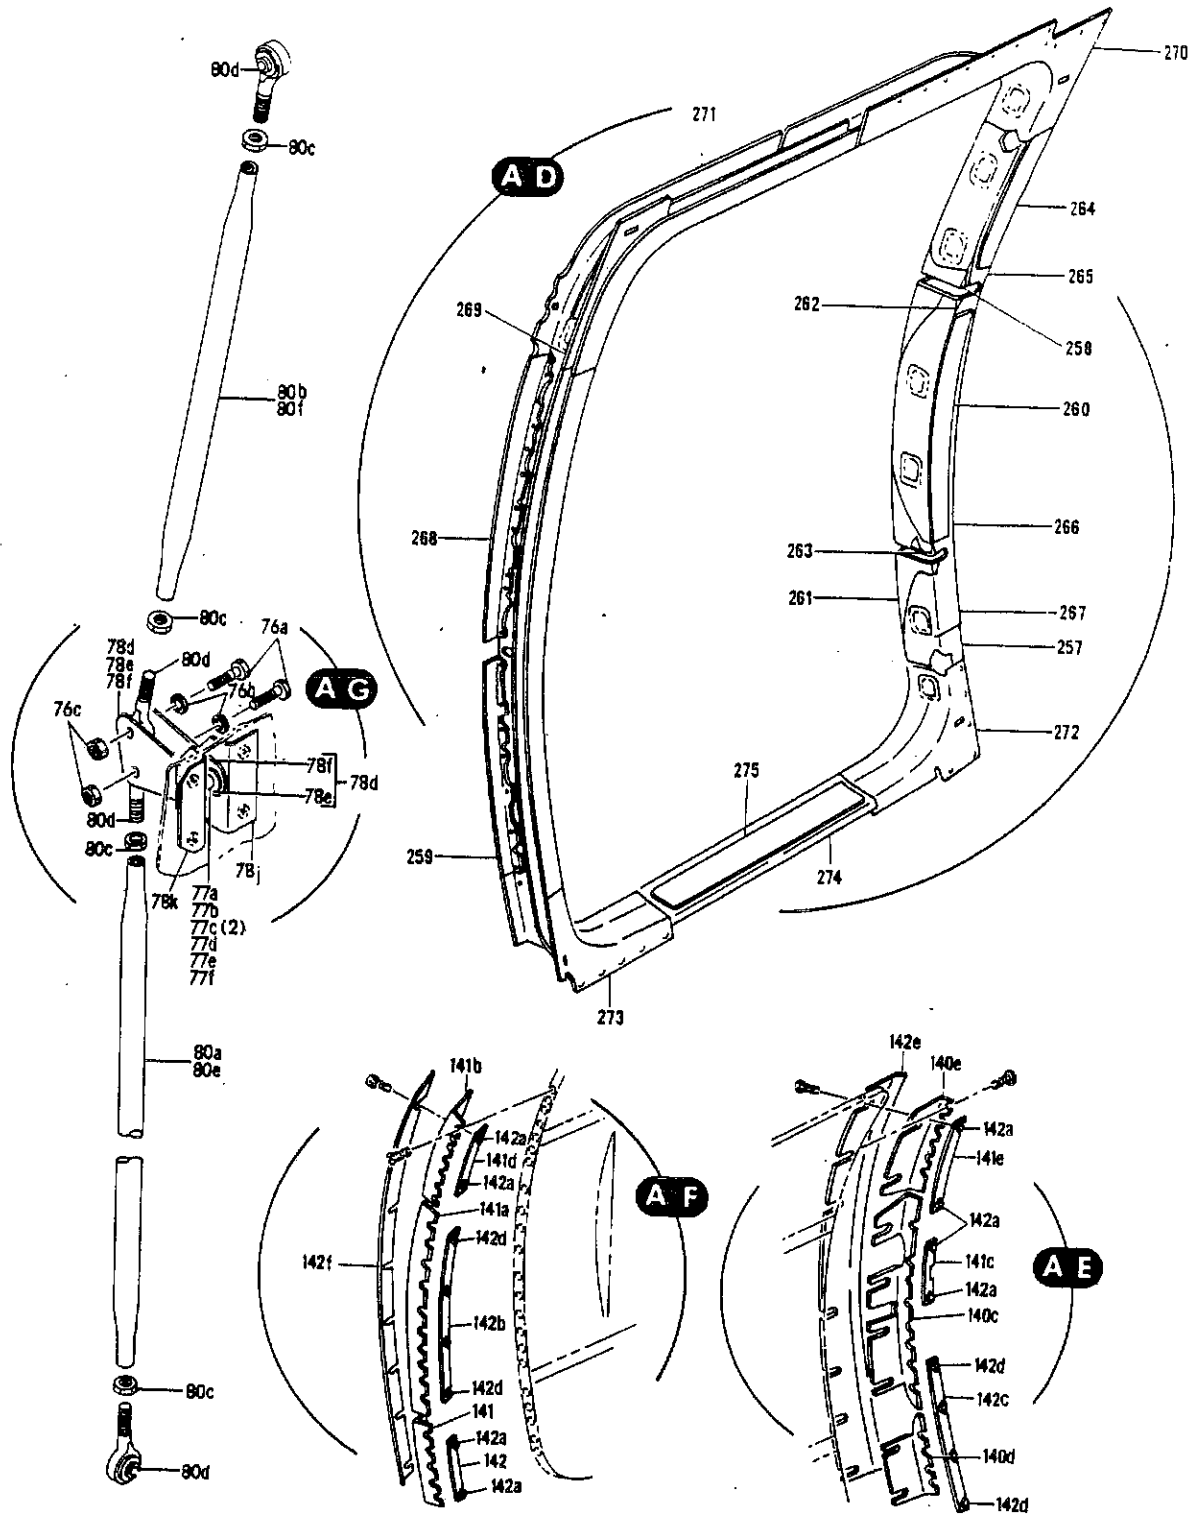


FIGURE 7. DOOR ASSY, AFT ENTRY (SHEET 9)

BOEING **707**
Intercontinental

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R 7	50-7988-1 65-60432-1	DOOR ASSY, AFT ENTRY (SEE FIG. 5, ITEM 85) DOOR ASSY, AFT ENTRY (50-7988-1 REWORKED) (REWORKED . . BY SB 3309) (SEE FIG. 5, ITEM 85)	5199 0150	RF RF
1	65-2863-1	. WINDOW ASSY, 5 IN. DIA OBSERVATION (SEE 56-1, FIG. 9)		1
2	AN7510-1	. NAMEPLATE		1
3	AN4-11	. BOLT		4
4	BACW10T416A	. WASHER		4
5	BACW10T416	. WASHER		4
6	AN320-4	. NUT		4
7	NAS509-5	. NUT		4
8	BACB10A278L	. BEARING		4
9	NAS513-5	. WASHER		4
10	AN3-15A	. BOLT		4
11	AN960D10L	. WASHER		4
12	NAS679A3W	. NUT		4
13	US87-101	. BEARING, (V02758)		4
14	66-2620-800	. ROD, ENTRY AND GALLEY DOORS STOP		2
15	66-2620-3	. ROD, ENTRY AND GALLEY DOORS STOP		2
16	NAS1104-13D	. BOLT		2
17	BACW10T416A	. WASHER		2
18	AN320-4	. NUT		2
19	NAS1104-16D	. BOLT		1
20	NAS1104-12D	. BOLT		1
21	AN960D416	. WASHER		1
22	AN320-4	. NUT		2
23	60-6959-1	. LINK ASSY, AFT ENTRY DOOR GATE ACTUATOR		1
24	60-6959	. LINK ASSY, AFT ENTRY DOOR GATE ACTUATOR		1
25	AN316-5R	. NUT		1
26	NAS508M5-12	. RIVET		1
27	BACB10A187M2	. BEARING (OPTIONAL BACB10A187M2L)		2
27	BACB10A187M2L	. BEARING (OPTIONAL TO BACB10A187M2)		2
28	AN960-516L	. WASHER		1
29	60-6959-1101	. TUBE, AFT ENTRY DOOR GATE ACTUATOR LINK (USED ON . . 60-6959-1)		1
30	60-6959-1102	. TUBE, AFT ENTRY DOOR GATE ACTUATOR LINK (USED ON . . 60-6959)		1
31	69-3315-1	. RETAINER, AFT ENTRY DOOR UPPER SEAL AFT		1
32	69-3315-2	. RETAINER, AFT ENTRY DOOR UPPER SEAL FORWARD ATTACHING PARTS		1
	NAS602-10	. SCREW		14
33	69-9967-3	. RETAINER, DOOR SEAL ATTACHING PARTS		1
	AN3-5A	. SCREW		12
34	69-9967-2	. RETAINER, DOOR SEAL ATTACHING PARTS		1
	AN3-5A	. SCREW		14
35	69-9967	. CHANNEL, AFT ENTRY DOOR		1
36	69-9967-1	. CHANNEL, AFT ENTRY DOOR ATTACHING PARTS		1
	NAS221-11	. SCREW		30
37	69-3316	. RETAINER, AFT ENTRY DOOR LOWER CORNER FORWARD SEAL . .		1
38	69-3317	. RETAINER, AFT ENTRY DOOR LOWER CORNER AFT SEAL		1
	NAS602-10	. ATTACHING PARTS . SCREW		15
39	69-9237-13	. RETAINER, AFT ENTRY DOOR AFT UPPER SEAL		1
40	69-9237-12	. RETAINER, AFT ENTRY DOOR AFT LOWER SEAL		1
41	69-9237-3	. RETAINER, AFT ENTRY DOOR FORWARD UPPER SEAL		1
42	69-9237-4	. RETAINER, AFT ENTRY DOOR FORWARD UPPER HINGE UPPER . . SEAL		1
43	69-9237-5	. RETAINER, AFT ENTRY DOOR FORWARD UPPER HINGE LOWER . . SEAL		1
44	69-9237-6	. RETAINER, AFT ENTRY DOOR FORWARD CENTER SEAL		1
45	69-9237-7	. RETAINER, AFT ENTRY DOOR FORWARD LOWER HINGE UPPER . . SEAL		1
46	69-9237-8	. RETAINER, AFT ENTRY DOOR FORWARD LOWER HINGE LOWER . . SEAL		1
47	69-9237-9	. RETAINER, AFT ENTRY DOOR FORWARD LOWER SEAL		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 8 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
7	NAS602-10		ATTACHING PARTS SCREW		64
48	50-7988-805		HINGE HALF, AFT ENTRY DOOR (ALTERED FROM MS2000LY12-3310)		1
49	50-7988-804		HINGE HALF, AFT ENTRY DOOR (ALTERED FROM MS2000LY12-3380)		28
	NAS517-3-3		ATTACHING PARTS SCREW		28
50	50-7988-180		HINGE HALF, AFT ENTRY DOOR.		1
51	50-7988-182		HINGE HALF, AFT ENTRY DOOR.		1
52	AN253-2-3120		PIN		1
53	AN253-2-3020		PIN		1
54	65-3292-2		SEAL ASSY, AFT ENTRY DOOR.		1
56	65-1980-2		GATE, AFT ENTRY DOOR UPPER.		1
58	65-2069-2		GATE, AFT ENTRY DOOR LOWER.		1
59	AN3-6A		BOLT		3
60	AN960D10L		WASHER		3
61	90-7803		ROLLER ASSY, AFT ENTRY DOOR CAM FOLLOWER.		1
62	AN320-5		NUT		1
63	AN960D516L		WASHER		2
64	AN960D516		WASHER		2
65	BACB10BH59CF10		BEARING UNIT.		1
66	90-7803-2		FOLLOWER, AFT ENTRY DOOR CAM.		1
67	60-6960-2		PLATE, AFT ENTRY DOOR CENTERING SERRATED.		1
68	AN4-11A		BOLT		2
68A	AN960-416L		WASHER		4
69	NAS1104-13D		BOLT		1
70	NAS1104-13D		BOLT		1
71	AN960D416L		WASHER		2
72	AN960-416		WASHER		1
73	AN320-4		NUT		2
R 74	AN316-5R		NUT	5199	4
R 75	BACB10A180L		BEARING	5199	4
R 76	NAS1103-24		BOLT	5199	8
R 76A	NAS1104-10D		BOLT	0150	4
R 76B	AN960D416		WASHER	0150	4
R 76C	AN320-4		NUT	0150	4
R 77	AN960D10		WASHER	5199	8
R 77A	NAS1104-14D		BOLT	0150	2
R 77B	NAS1057T4-064		SPACER	0150	2
R 77C	AN960D616L		WASHER	0150	4
R 77D	NAS1057T7-015		SPACER	0150	2
R 77E	AN960D416		WASHER	0150	2
R 77F	AN320-4		NUT	0150	2
R 78	63-1767		CLAMP ASSY, AFT ENTRY DOOR.	5199	4
R 78	63-1767-1		CLAMP, AFT ENTRY DOOR (MATCHED PART, ORDER ASSEMBLY ONLY)	5199	2
R 78A	65-60432-10		ARM ASSY.	0150	2
R 78B	NAS538B6P16		BUSHING	0150	1
R 78C	65-60432-9		ARM	0150	1
R 78D	65-60432-12		ARM ASSY.	0150	2
R 78E	NAS538B6P16		BUSHING	0150	1
R 78F	65-60432-11		ARM	0150	1
R 78G	65-60432-2		ANGLE, 82 DEG	0150	1
R 78H	65-60432-3		ANGLE, 98 DEG	0150	1
R	NAS623-3-5		ATTACHING PARTS SCREW	0150	4
R	AN960D10L		WASHER	0150	4
R	NAS679A3		NUT	0150	4
R 78J	65-60432-4		ANGLE	0150	1
R 78K	65-60432-5		ANGLE	0150	1
R	NAS623-3-4		ATTACHING PARTS SCREW	0150	4
R	AN960D10L		WASHER	0150	4
R	NAS679A3W		NUT	0150	4
79	CER45000D		CONTROL, PUSH-PULL (V81376) (OPTIONAL 108612 (V16722))		1
79	108612		CONTROL, PUSH-PULL (V16722) (OPTIONAL TO CER45000D (V81376))		1
R 79A	65-28925-59		ROD ASSY, DOOR MECHANISM CONTROL.	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

52-01-7

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R	7	798	65-28925-65	ROD ASSY, DOOR MECHANISM CONTROL.					0150	1
R		79C	AN316-5R	NUT					0150	4
R		79D	BAC810A187L	BEARING					0150	4
R				(OPTIONAL 11-667A (V73134))						
R		79D	11-667A	BEARING, (V73134)					0150	4
R				(OPTIONAL TO BAC810A187L)						
R		79E	65-28925-60	ROD, (USED ON 65-28925-59)					0150	1
R		79F	65-28925-66	ROD, (USED ON 65-28925-65)					0150	1
R		80	CER44000D	CONTROL, PUSH-PULL (V81376)						1
				(OPTIONAL 108613 (V77932))						
		80	108613	CONTROL, PUSH-PULL (V16722)						1
				(OPTIONAL TO CER44000D (V81376))						
R		80A	65-28925-61	ROD ASSY, DOOR MECH CONTROL					0150	1
R		80B	65-28925-63	ROD ASSY, DOOR MECH CONTROL					0150	1
R		80C	AN316-5R	NUT					0150	4
R		80D	BAC810A187L	BEARING					0150	4
R		80E	65-28925-62	ROD, (USED ON 65-28925-61)					0150	1
R		80F	65-28925-64	ROD, (USED ON 65-28925-63)					0150	1
		81	AN320-5	NUT						4
		82	AN960-516	WASHER						10
		83	69-48008	ROLLER ASSY, ENTRY AND GALLEY DOOR						2
		83A	69-48008-800	ROLLER ASSY, ENTRY AND GALLEY DOOR						2
		83B	NAS516-1	FITTING						1
		83C	69-48008-2	ROLLER, ENTRY AND GALLEY DOOR						1
		83D	69-48008-1	STUD, ENTRY AND GALLEY DOOR (USED ON 69-48008)						1
		83D	69-48008-801	STUD, ENTRY AND GALLEY DOOR (USED ON 69-48008-800)						1
		84	NAS1103-16	BOLT						8
		85	AN960-10L	WASHER						8
		86	NAS679A3W	NUT						8
		87	90-10001-1	CRANK, ROLLER CAM						1
				(OPTIONAL TO 69-37418-3)						
		87	69-37418-3	CRANK, ROLLER CAM						1
				(OPTIONAL 90-10001-1)						
				(OPTIONAL TO 69-37418-5)						
		87	69-37418-5	CRANK, ROLLER CAM						1
				(OPTIONAL 69-37418-3)						
		87A	90-10001-802	CRANK, ENTRY DOOR ROLLER CAM						1
				(OPTIONAL TO 69-37418-7)						
		87A	69-37418-7	CRANK, ROLLER CAM						1
				(OPTIONAL 90-10001-802)						
		88	90-10001-801	CRANK, ENTRY DOOR ROLLER CAM						2
				(OPTIONAL TO 69-37418-6)						
		88	69-37418-6	CRANK, ROLLER CAM						2
				(OPTIONAL 90-10001-801)						
		89	BACW10PB3L	WASHER						6
		90	30-3004	WASHER, ENTRY DOOR LATCH MECHANISM						AR
				(OPTIONAL TO 66-15332-1)						
		90	66-15332-1	SPACER						1
				(OPTIONAL 30-3004)						
R		91	65-1929-3	HOUSING, LOWER BEARING					0150	1
R				(OPTIONAL AND FOR REPLACEMENT ORDER 65-1929-5)						
R		91A	65-1929-5	HOUSING ASSY, LOWER BEARING					0150	1
R				(OPTIONAL TO AND REPLACEMENT FOR 65-1929-3)						
R		91A	65-1929-5	HOUSING ASSY, LOWER BEARING					5199	1
R		91B	NAS516-1	BRACKET ASSY, HINGE COVER					0150	1
R		91C	65-1929-3	HOUSING, (USED ON 65-1929-5)						1
R		92	65-1929-4	HOUSING, UPPER BEARING					0150	1
R				(OPTIONAL AND FOR REPLACEMENT ORDER 65-1929-6)						
R		92A	65-1929-6	HOUSING ASSY, UPPER BEARING					0150	1
R				(OPTIONAL TO AND REPLACEMENT FOR 65-1929-4)						
R		92A	65-1929-6	HOUSING ASSY, UPPER BEARING					5199	1
		92B	NAS516-1	FITTING, (USED ON 65-1929-6)						1
		92C	65-1929-4	HOUSING, (USED ON 65-1929-6)						1
				ATTACHING PARTS						
		93	NAS1103-4	BOLT						2
		93A	NAS517-3-4	SCREW						2
		94	NAS1103-3	BOLT						8
		95	AN960D10L	WASHER						12
		96	NAS679A3W	NUT						12
R		97	65-1969-1102	HOUSING, LOWER BEARING					0150	1
R				(OPTIONAL AND FOR REPLACEMENT ORDER 65-1969-1104)						
R		97A	65-1969-1104	HOUSING ASSY, LOWER BEARING					0150	1
				(OPTIONAL TO AND REPLACEMENT FOR 65-1969-1102)						

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 7	97A 65-1969-1104	. HOUSING ASSY, LOWER BEARING	5199	1
R 97B	NAS516-1	. . FITTING, (USED ON 65-1969-1104)		1
R 97C	65-1969-1102	. . HOUSING, (USED ON 65-1969-1104)		1
R 98	65-1969-1101	. HOUSING, UPPER BEARING	0150	1
R 98A	65-1969-1105	. HOUSING ASSY, UPPER BEARING	0150	1
R 98B	65-1969-1105	. . FITTING, (USED ON 65-1969-1105)	5199	1
R 98C	65-1969-1101	. . HOUSING, (USED ON 65-1969-1105)		1
		ATTACHING PARTS		
	99 NAS1103-5	. BOLT.		4
	100 NAS1103-7	. BOLT.		4
	101 AN960D10L	. WASHER.		4
	102 AN960D10	. WASHER.		4
	103 NAS679A3W	. NUT		8
		-----*		
	104 NAS1103-19	. BOLT.		2
	105 NAS1103-18	. BOLT.		4
	106 AN960-10L	. WASHER.		4
	107 AN960D10	. WASHER.		2
	108 NAS679A3W	. NUT		6
	109 60-4406-1	. TUBE, ENTRY DOOR LATCH ACTUATOR TORQUE.		2
	110 BAC810A397GCM2	. BEARING		8
	111 65-2306	. BEARING ASSY, DOOR CAMSHAFT HOUSING		4
		ATTACHING PARTS		
	112 AN3-4A	. BOLT.		16
	113 AN960D10L	. WASHER.		16
	114 NAS679A3W	. NUT		16
		-----*		
	115 NAS516-1	. . FITTING		1
	116 65-2306-1	. . HOUSING, DOOR CAMSHAFT.		1
	117 60-6995	. CRANK, AFT ENTRY DOOR		1
	118 60-4409	. CRANK, TORQUE TUBE LATCH.		1
	119 66-2677	. CRANK, AFT ENTRY DOOR TORQUE TUBE		1
	120A 66-12687-1	. PIN, DOOR STOP.		4
	120C 66-12687-1	. PIN, DOOR STOP.		8
	120D 66-12687-1	. PIN, STOP (USED WITH 69-58734-1, -2, -3 AND -4)		4
	121A 66-12687-2	. PIN, DOOR STOP.		1
	121C 66-12687-2	. PIN, DOOR STOP.		1
	121D 66-16691-1	. SPRING, DOOR STOP PIN RETAINER.		18
	122 AN960D616	. WASHER.		18
	123 AN316-6R	. NUT		18
	123A NAS679A6	. NUT		12
	124 65-1778-4	. STOP ASSY, AFT ENTRY DOOR BEAM NO. 11		1
	125 65-1779-20	. STOP ASSY, BEAM ENDS (REWORKED BY SB 3309) (MAY USE	0150	4
		65-1779-50 AFTER SB 3309 INCORPORATION)		
		(OPTIONAL 65-1779-30)		
	125 65-1779-30	. STOP ASSY, BEAM ENDS (REWORKED BY SB 3309) (MAY USE	0150	4
		65-1779-50 AFTER SB 3309 INCORPORATION)		
		(OPTIONAL TO 65-1779-20)		
	125 65-1779-30	. STOP ASSY, BEAM ENDS.	5199	4
	126 65-1779-21	. STOP ASSY, BEAM ENDS (REWORKED BY SB 3309) (MAY USE	0150	2
		65-1779-51 AFTER SB 3309 INCORPORATION)		
		(OPTIONAL 65-1779-31)		
	126 65-1779-31	. STOP ASSY, BEAM ENDS (REWORKED BY SB 3309) (MAY USE	0150	2
		65-1779-51 AFTER SB 3309 INCORPORATION)		
		(OPTIONAL TO 65-1779-21)		
	126 65-1779-31	. STOP ASSY, BEAM ENDS.	5199	2
	127 65-1779-22	. STOP ASSY, BEAM ENDS (REWORKED BY SB 3309) (MAY USE	0150	1
		65-1779-52 AFTER SB 3309 INCORPORATION)		
		(OPTIONAL 65-1779-32)		
	127 65-1779-32	. STOP ASSY, BEAM ENDS (REWORKED BY SB 3309) (MAY USE	0150	1
		65-1779-52 AFTER SB 3309 INCORPORATION)		
		(OPTIONAL TO 65-1779-22)		
	127 65-1779-32	. STOP ASSY, BEAM ENDS.	5199	1
	128 65-1779-23	. STOP ASSY, BEAM ENDS (REWORKED BY SB 3309) (MAY USE	0150	4
		65-1779-53 AFTER SB 3309 INCORPORATION)		
		(OPTIONAL 65-1779-33)		
	128 65-1779-33	. STOP ASSY, BEAM ENDS (REWORKED BY SB 3309) (MAY USE	0150	4
		65-1779-53 AFTER SB 3309 INCORPORATION)		
		(OPTIONAL TO 65-1779-23)		
	128 65-1779-33	. STOP ASSY, BEAM ENDS.	5199	4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R	7 129	65-1779-24	. STOP ASSY, BEAM ENDS (REWORKED BY SB 3309) (MAY USE 65-1779-54 AFTER SB 3309 INCORPORATION) (OPTIONAL 65-1779-34)	0150
R	129	65-1779-34	. STOP ASSY, BEAM ENDS (REWORKED BY SB 3309) (MAY USE 65-1779-54 AFTER SB 3309 INCORPORATION) (OPTIONAL TO 65-1779-24)	0150
R	129	65-1779-34	. STOP ASSY, BEAM ENDS.	5199
R	130	50-11374-5	. STOP ASSY, AFT ENTRY DOOR BEAM NO. 14	1
R	131A	66-12688-1	. BUSHING, DOOR STOP (USED ON 65-1779-20, 65-1779-21, 65-1779-22, 65-1779-23, 65-1779-24, 65-1779-30, 65-1779-31, 65-1779-32, 65-1779-33 AND 65-1779-34)	1
R	131B	66-12688-3	. BUSHING, DOOR STOP (USED ON 65-1778-4 AND 50-11374-5)	1
R	132	50-11374-6	. FITTING, AFT ENTRY DOOR BEAM NO. 14 STOP (USED ON 50-11374-5)	1
R	133	65-1779-25	. STOP, BEAM ENDS (USED ON 65-1779-20)	0150
R	133	65-1779-26	. STOP, BEAM ENDS (USED ON 65-1779-21)	0150
R	133	65-1779-27	. STOP, BEAM ENDS (USED ON 65-1779-22)	0150
R	133	65-1779-28	. STOP, BEAM ENDS (USED ON 65-1779-23)	0150
R	133	65-1779-29	. STOP, BEAM ENDS (USED ON 65-1779-24)	0150
R	133	65-1779-40	. STOP, (USED ON 65-1779-30)	1
R	133	65-1779-41	. STOP, (USED ON 65-1779-31)	1
R	133	65-1779-42	. STOP, (USED ON 65-1779-32)	1
R	133	65-1779-43	. STOP, (USED ON 65-1779-33)	1
R	133	65-1779-44	. STOP, (USED ON 65-1779-34)	1
R	134A	69-5274-12	. STOP ASSY, BEAM ENDS (REWORKED BY SB 3309) (MAY USE 69-58734-9 AFTER SB 3309 INCORPORATION)	0150
R	134A	69-58734-9	. STOP ASSY, BEAM ENDS.	5199
R	135A	69-5274-13	. STOP ASSY, BEAM ENDS (REWORKED BY SB 3309) (MAY USE 69-58734-10 AFTER SB 3309 INCORPORATION)	0150
R	135A	69-58734-10	. STOP ASSY, BEAM ENDS.	5199
R	136A	69-5274-14	. STOP ASSY, BEAM ENDS (REWORKED BY SB 3309) (MAY USE 69-58734-11 AFTER SB 3309 INCORPORATION)	0150
R	136A	69-58734-11	. STOP ASSY, BEAM ENDS.	5199
R	137A	69-5274-15	. STOP ASSY, BEAM ENDS (REWORKED BY SB 3309) (MAY USE 69-58734-12 AFTER SB 3309 INCORPORATION)	0150
R	137A	69-58734-12	. STOP ASSY, BEAM ENDS.	5199
R	138A	66-12688-1	. BUSHING, (USED ON 69-5274-12, -13, -14, -15, 69-58734-1, -2, -3, -4, -9, -10 AND -11)	1
R	139	69-5274-16	. STOP, AFT ENTRY DOOR (USED ON 69-5274-12)	1
R	139	69-5274-17	. STOP, AFT ENTRY DOOR (USED ON 69-5274-13)	1
R	139	69-5274-18	. STOP, AFT ENTRY DOOR (USED ON 69-5274-14)	1
R	139	69-5274-19	. STOP, AFT ENTRY DOOR (USED ON 69-5274-15)	1
R	140C	65-19153-7	. SUPPORT INSTL, AFT ENTRY DOOR LINING.	1
R	140D	65-19153-8	. ANGLE, AFT ENTRY DOOR LINING ATTACHMENT.	1
R	140E	65-19153-9	. ANGLE, AFT ENTRY DOOR LINING ATTACHMENT.	1
R	140F	69-5482-2	. ANGLE, AFT ENTRY DOOR PANEL ATTACHMENT.	1
R	141	65-19153-10	. ANGLE, AFT ENTRY DOOR LINING ATTACHMENT.	1
R	141A	65-19153-11	. ANGLE, AFT ENTRY DOOR LINING ATTACHMENT.	1
R	141B	65-19153-12	. ANGLE, AFT ENTRY DOOR LINING ATTACHMENT.	1
R	141C	65-19164-25	. STRIP ASSY, ENTRY DOOR LINING RETAINER.	1
R	141D	65-19164-30	. STRIP ASSY, ENTRY DOOR LINING RETAINER.	1
R	141E	65-19164-27	. STRIP ASSY, ENTRY DOOR LINING RETAINER.	1
R	142	65-19164-28	. STRIP ASSY, ENTRY DOOR LINING RETAINER.	1
R		ATTACHING PARTS		
R		SCREW		8
R		NUT		2
R	142A	BACN10FX1	. STRIP ASSY, ENTRY DOOR LINING RETAINER.	1
R	142B	65-19164-29	. STRIP ASSY, ENTRY DOOR LINING RETAINER.	1
R	142C	65-19164-26	. STRIP ASSY, ENTRY DOOR LINING RETAINER.	1
R		ATTACHING PARTS		
R		SCREW		8
R		NUT		4
R	142D	BACN10FX1	. SEAL, AFT ENTRY DOOR LINING FORWARD (EXTRUSION NO. BAC1530-17 X 66.0 IN. LG)	1
R	142E	65-1349-18	. SEAL, AFT ENTRY DOOR LINING AFT (EXTRUSION NO. BAC1530-17 X 65.5 IN. LG)	1
R	142F	65-1349-19	. FASTENER ASSY, CABIN SOUNDPROOFING.	4
R	143	10-60124	. RETAINER ASSY, ENTRY DOOR LINING.	1
R	144	90-7826-3	. GROMMET, (V94222)	4
R	145	GSR2-93	. STUD, OVAL HEAD (V24248).	4
R	146	2-0-180		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
7 147	90-7826-5	. . . RETAINER, ENTRY DOOR LINING		1
148	50-7988-150	. . . PLATE, AFT ENTRY DOOR COVER		1
	NAS221-8	. . . ATTACHING PARTS		9
		. . . SCREW		
149	50-7988-151	. . . PLATE, AFT ENTRY DOOR COVER		1
	NAS221-8	. . . ATTACHING PARTS		26
		. . . SCREW		
150	NAS1105-140	. . . BOLT.		1
151	AN960-516	. . . WASHER.		1
152	AN320-5	. . . NUT		1
153	NAS1104-25	. . . BOLT.		8
154	AN960-416	. . . WASHER.		8
155	NAS679A4W	. . . NUT		8
R 156	60-4364	. . . PIN, ENTRY DOOR HINGE	5199	2
R 157	AN6227-15	. . . PACKING		2
158	60-4365	. . . SLEEVE, ENTRY DOOR TUBE COUPLING TORQUE	5199	2
159	60-4405	. . . NUT, ENTRY DOOR BEARING RETAINER SPECIAL.		2
160	NAS1105-280	. . . BOLT.		2
161	AN960-516	. . . WASHER.		2
162	NAS679A5	. . . NUT		2
163	AN202KP25B	. . . BEARING		2
R 164	90-6753	. . . TUBE, ENTRY DOOR VERTICAL HINGE TORQUE.	5199	1
165	60-4366	. . . CRANK, ENTRY DOOR TORQUE TUBE		1
166	AN3-3A	. . . BOLT.		15
167	AN960D10L	. . . WASHER.		15
168	NAS679A3W	. . . NUT		15
173	NAS1105-130	. . . BOLT.		2
173A	AN960PD516	. . . WASHER.		2
173B	65-33555-1	. . . SUPPORT ASSY, AFT ENTRY DOOR HINGE.		1
173C	65-33555-2	. . . SUPPORT ASSY, AFT ENTRY DOOR HINGE.		1
173D	66-19496-1	. . . FITTING, AFT ENTRY DOOR ATTACH.		1
		. . . ATTACHING PARTS		
	MS20004-8	. . . BOLT.		4
	MS20002C4	. . . WASHER.		4
	AN960PD416	. . . WASHER, (OPTIONAL AN960PD416L).		AR
173E	65-33555-3	. . . SUPPORT ASSY, AFT ENTRY DOOR HINGE (USED ON		1
		65-33555-1)		
173F	65-33555-4	. . . SUPPORT ASSY, AFT ENTRY DOOR HINGE (USED ON		1
		65-33555-2)		
174	NAS516-1	. . . FITTING		1
174A	65-25838-1	. . . SUPPORT ASSY, ENTRY DOOR HINGE (USED ON		1
		65-33555-3)		
174B	65-25838-2	. . . SUPPORT ASSY, ENTRY DOOR HINGE (USED ON		1
		65-33555-4)		
174C	NAS537B10-66	. . . BUSHING		1
174D	NAS537B16-044	. . . BUSHING		1
		(OPTIONAL NAS537B16P044)		
174D	NAS537B16P044	. . . BUSHING		1
		(OPTIONAL TO NAS537B16-044)		
174E	65-25838-5	. . . SUPPORT, ENTRY DOOR HINGE (USED ON 65-25838-1)		1
174F	65-25838-6	. . . SUPPORT, ENTRY DOOR HINGE (USED ON 65-25838-2)		1
R 175	69-3192-4	. . . BRACKET ASSY, HINGE COVER (USED WITH 50-8294-7)	0150	1
R 175	69-3192-12	. . . BRACKET ASSY, HINGE COVER	5199	1
R 176	69-3192-3	. . . BRACKET ASSY, HINGE COVER	0150	1
R 176	69-3192-11	. . . BRACKET ASSY, HINGE COVER	5199	1
		. . . ATTACHING PARTS		
R	NAS517-3-2	. . . SCREW, (USED WITH 69-3192-3 AND -4)	0150	2
R	NAS517-3-4	. . . SCREW, (USED WITH 69-3192-11 AND -12)	5199	2
		. . . ATTACHING PARTS		
R 177	50-8294-7	. . . ARM ASSY, HINGE (UPPER)	0150	1
R 177	50-8294-17	. . . ARM ASSY, HINGE (UPPER)	5199	1
R 178	50-8294-6	. . . ARM ASSY, HINGE (LOWER)	0150	1
R 178	50-8294-16	. . . ARM ASSY, HINGE (LOWER)	5199	1
		. . . ATTACHING PARTS		
R 178A	NAS1304-24	. . . BOLT.	0150	2
R 178A	NAS1304-27	. . . BOLT.	5199	2
R 178B	AN960-416	. . . WASHER.	0150	2
R 178B	AN960PD416L	. . . WASHER.	5199	2
R 178C	BACR10W4	. . . RETAINER.	0150	2
R 178C	BACR10V4	. . . RETAINER, (USED WITH 50-8294-17 AND -16).	5199	2
		. . . ATTACHING PARTS		

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R	7 179	NAS516-1	.	.	FITTING	.	.	.	0150	1
	180	NAS77A7-32	.	.	BUSHING	.	.	.		2
	181	50-8294-13	.	.	ARM, ENTRY DOOR HINGE (UPPER)	.	.	.		1
	182	50-8294-12	.	.	ARM, ENTRY DOOR HINGE (LOWER)	.	.	.		1
	183	NAS517-3-10	.	.	SCREW	.	.	.		4
	184	AN960-10	.	.	WASHER	.	.	.		4
	185	NAS679A3W	.	.	NUT	.	.	.		4
	185A	50-7988-204	.	.	HANDLE ASSY	.	.	.		1
	186A	90-7879-4	.	.	HANDLE ASSY	.	.	.		1
	186B	90-7879-3	.	.	HANDLE	.	.	.		1
	186C	63-9961-1	.	.	STRIP, ENTRY DOOR RUB	.	.	.		2
	187	MS39086-13	.	.	PIN	.	.	.		1
	188	30-3019-1	.	.	WASHER, DOOR HANDLE MECHANISM	.	.	.		1
	189	AN996-14	.	.	RING	.	.	.		1
	190	30-3010	.	.	NUT, DOOR HANDLE MECHANISM	.	.	.		1
	191	63-2848	.	.	SPRING, ENTRY AND GALLEY DOOR COMPRESSION	.	.	.		1
	192	30-3013-2	.	.	PIN, DOOR HANDLE MECHANISM	.	.	.		1
	193	NAS679A6	.	.	NUT	.	.	.		1
	194	63-9386	.	.	WASHER, ENTRY DOOR HANDLE MECHANISM SHAFT	.	.	.		1
	195	60-4455	.	.	SHAFT, DOOR HANDLE MECHANISM	.	.	.		1
	196	30-3035	.	.	SHIM, AFT ENTRY DOOR	.	.	.		AR
	197	90-7821	.	.	SLEEVE, DOOR HANDLE MECHANISM	.	.	.		1
	198	90-7811	.	.	CAM, DOOR HANDLE CENTERING	.	.	.		1
	199	AN3-12A	.	.	BOLT	.	.	.		4
	200	BAC511W3	.	.	SEAL	.	.	.		4
R	201	60-4412-1	.	.	PLATE, DOOR HANDLE MECHANISM	.	.	.	0150	1
	202	AN6227-28	.	.	PACKING	.	.	.		1
	203	90-7820	.	.	HOUSING ASSY, HANDLE MECHANISM	.	.	.		1
	204	NAS516-1	.	.	FITTING	.	.	.		1
	205	90-7820-1	.	.	HOUSING, HANDLE MECHANISM	.	.	.		1
	206	AN6227-17	.	.	PACKING	.	.	.		1
	207	AN201KP12A	.	.	BEARING	.	.	.		1
	208	NAS50-162	.	.	RING	.	.	.		1
	209	65-31057-4	.	.	PLATE, ENTRY DOOR HANDLE MECHANISM CAM. (OPTIONALS 65-31057-2, 65-1398-4)	.	.	.		1
	209	65-1398-4	.	.	PLATE, ENTRY DOOR HANDLE MECHANISM CAM. (OPTIONAL TO 65-31057-4 AND -2)	.	.	.		1
	209	65-31057-2	.	.	PLATE, ENTRY DOOR HANDLE MECHANISM CAM. (OPTIONAL TO 65-31057-4, 65-1398-4)	.	.	.		1
	210	AN4-5A	.	.	BOLT	.	.	.		2
	211	AN960-416L	.	.	WASHER	.	.	.		2
	212	NAS679A4W	.	.	NUT	.	.	.		2
	213	63-1692	.	.	WASHER, ENTRY DOOR MECHANISM	.	.	.		2
	214	AN202KP21B	.	.	BEARING	.	.	.		2
	215	90-7815	.	.	CRANK ASSY, ENTRY DOOR CAM FOLLOWER	.	.	.		1
	216	69-38733-1	.	.	CRANK ASSY, CAM FOLLOWER	.	.	.		1
	217	AN320-6	.	.	NUT, (USED ON 90-7815)	.	.	.		1
	217A	AN310-6	.	.	NUT, (USED ON 69-38733-1)	.	.	.		1
	218	AN960-616L	.	.	WASHER	.	.	.		4
	219	BAC810BH60CF6	.	.	BEARING UNIT, (USED ON 90-7815) (OPTIONAL BAC810AF6F6H)	.	.	.		1
	219	BAC810AF6F6H	.	.	BEARING UNIT, (USED ON 90-7815) (OPTIONAL TO BAC810BH60CF6)	.	.	.		1
	219A	BAC810BH60F9	.	.	BEARING UNIT, (USED ON 69-38733-1)	.	.	.		1
	220	90-7815-2	.	.	ARM, ENTRY DOOR CAM FOLLOWER CRANK (USED ON 90-7815)	.	.	.		1
	221	69-38733-2	.	.	ARM, (USED ON 69-38733-1)	.	.	.		1
	222	65-54013	.	.	CRANK ASSY, LATCHING	.	.	.		1
	222	65-54013-2	.	.	CRANK	.	.	.		1
	223	NAS1105-12D	.	.	BOLT	.	.	.		1
	224	AN960-516	.	.	WASHER	.	.	.		1
	225	AN320-5	.	.	NUT	.	.	.		1
	226	65-1933-2	.	.	CRANK, ENTRY DOOR COCKING (OPTIONAL TO 65-54024-4)	.	.	.		1
	226	65-54024-4	.	.	CRANK, COCKING (OPTIONAL TO 65-1933-2)	.	.	.		1
	227	60-7208	.	.	ROD ASSY, ENTRY DOOR COCKING PUSH (SEE FIG. 8)	.	.	.		1
	232	AN3-5A	.	.	BOLT	.	.	.		2
	233	BACW10T10	.	.	WASHER	.	.	.		2
	234	NAS679A3W	.	.	NUT	.	.	.		2
	235	NAS517-3-10	.	.	SCREW	.	.	.		2
	236	60-4407-1	.	.	FITTING, ENTRY DOOR LATCHING MECHANISM STOP (USED WITH OPTIONALS 65-31057, -2, 65-1398-2 AND -4)	.	.	.		1
R	237	63-1058	.	.	RETAINER, ENTRY DOOR LATCH MECHANISM BEARING	.	.	.	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY	
R	7	237	63-1058-2	. RETAINER, LATCH MECHANISM BEARING	5199	1	
	238	AN202KP238	. BEARING	1			
	239	AN3-7A	. BOLT	2			
	240	BACH10T10	. WASHER.	2			
R	241	NAS679A3W	. NUT	0150 5199	2		
	242	63-1059	. RETAINER, ENTRY DOOR LATCH MECHANISM.		1		
	242	63-1059-1	. RETAINER, LATCH MECHANISM		1		
	243	AN202KP238	. BEARING		1		
	244	65-1642	. HOUSING ASSY, ENTRY DOOR HANDLE MECHANISM		1		
			ATTACHING PARTS				
	245	AN4-11A	. BOLT.		12		
	246	BACS40A16-72	. SHIM.		AR		
	246	BACS40B16-72	. SHIM.		AR		
	246	BACS40C16-72	. SHIM.		AR		
			-----*				
	247	65-2017	. PAN, AFT ENTRY DOOR HANDLE RECESS		1		
			ATTACHING PARTS				
		AN3-12A	. BOLT.		4		
		BACS11W3	. SEAL.		4		
			-----*				
	248	50-7988-152	. BRACKET, AFT ENTRY DOOR INSTALLATION SUPPORT.		1		
	249	50-7988-153	. BRACKET, AFT ENTRY DOOR INSTALLATION SUPPORT.		1		
	250	50-7988-154	. BRACKET, AFT ENTRY DOOR INSTALLATION SUPPORT.		1		
	251	63-2591	. CLIP, AFT ENTRY DOOR LOWER ANGLE.		1		
	252	63-2591-1	. CLIP, AFT ENTRY DOOR LOWER ANGLE.		1		
	253	90-7874	. RING ASSY, WINDOW SUPPORT		1		
			ATTACHING PARTS				
		NAS603-10	. SCREW		3		
		AN960D10	. WASHER.		3		
			-----*				
	254	90-7818	. RING, AFT ENTRY DOOR WINDOW RETAINER.		1		
	255	66-3178-1	. CHANNEL, CENTERING ROLLER BACKUP.		1		
R	256	66-2843	. BRACKET, AFT ENTRY DOOR SUPPORT	0150 5199	1		
		50-11391	. REVEAL INSTL, AFT ENTRY DOOR.		1		
		50-11391	. REVEAL INSTL, AFT ENTRY DOOR.		1		
			(VARIABLE DWG:50-11391-5001)				
	257	50-11391-38	. REVEAL, AFT ENTRY DOOR.		1		
			ATTACHING PARTS				
		NAS221-8	. SCREW		4		
			-----*				
	258	50-11391-11	. REVEAL, AFT ENTRY DOOR.		1		
			ATTACHING PARTS				
		NAS221-8	. SCREW		1		
			-----*				
	259	50-11391-20	. REVEAL, AFT ENTRY DOOR.		1		
			ATTACHING PARTS				
		NAS221-8	. SCREW		19		
			-----*				
	260	50-11391-5	. REVEAL, AFT ENTRY DOOR.		1		
			ATTACHING PARTS				
		NAS221-8	. SCREW		8		
		NAS221-11	. SCREW		2		
			-----*				
	261	50-11391-2	. REVEAL, AFT ENTRY DOOR.		1		
	262	50-11391-10	. REVEAL, AFT ENTRY DOOR.		1		
	263	50-11391-4	. REVEAL, AFT ENTRY DOOR.		1		
	264	50-11391-39	. REVEAL, AFT ENTRY DOOR.		1		
	265	50-11391-47	. REVEAL, AFT ENTRY DOOR.		1		
	266	50-11391-800	. REVEAL, AFT ENTRY DOOR.		1		
	267	50-11391-801	. REVEAL, AFT ENTRY DOOR.		1		
	268	50-11391-52	. REVEAL.		1		
	269	69-8358	. COVER, AFT ENTRY DOOR REVEAL PLATE.		1		
			ATTACHING PARTS				
		NAS221-8	. SCREW		4		
			-----*				
	270	65-3467-800	. REVEAL, AFT ENTRY DOOR FORWARD UPPER CORNER		1		
			ATTACHING PARTS				
		NAS221-8	. SCREW		20		
			-----*				
	271	65-3472-801	. REVEAL, AFT ENTRY DOOR AFT UPPER CORNER		1		
	272	65-3475-800	. REVEAL, AFT ENTRY DOOR FORWARD LOWER CORNER		1		
			ATTACHING PARTS				
		NAS221-11	. SCREW		1		
		NAS221-8	. SCREW		4		
	MISSING ITEM NUMBERS ARE NOT APPLICABLE						

BOEING **707**
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
7	NAS517-3-2	.	.	SCREW	.	.	.	.		5
		.	.	-----*	.	.	.	.		
273	65-3476	.	.	REVEAL, AFT ENTRY DOOR AFT LOWER CORNER	.	.	.	.		1
		.	.	ATTACHING PARTS	.	.	.	.		
	NAS517-3-2	.	.	SCREW	.	.	.	.		4
		.	.	-----*	.	.	.	.		
274	65-3477-4	.	.	THRESHOLD, AFT ENTRY DOOR	.	.	.	.		1
	65-69063-6	.	.	PAD INSTL, NON-SLIP	.	.	.	.		1
275	65-69063-12	.	.	PAD, NON-SLIP	.	.	.	.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

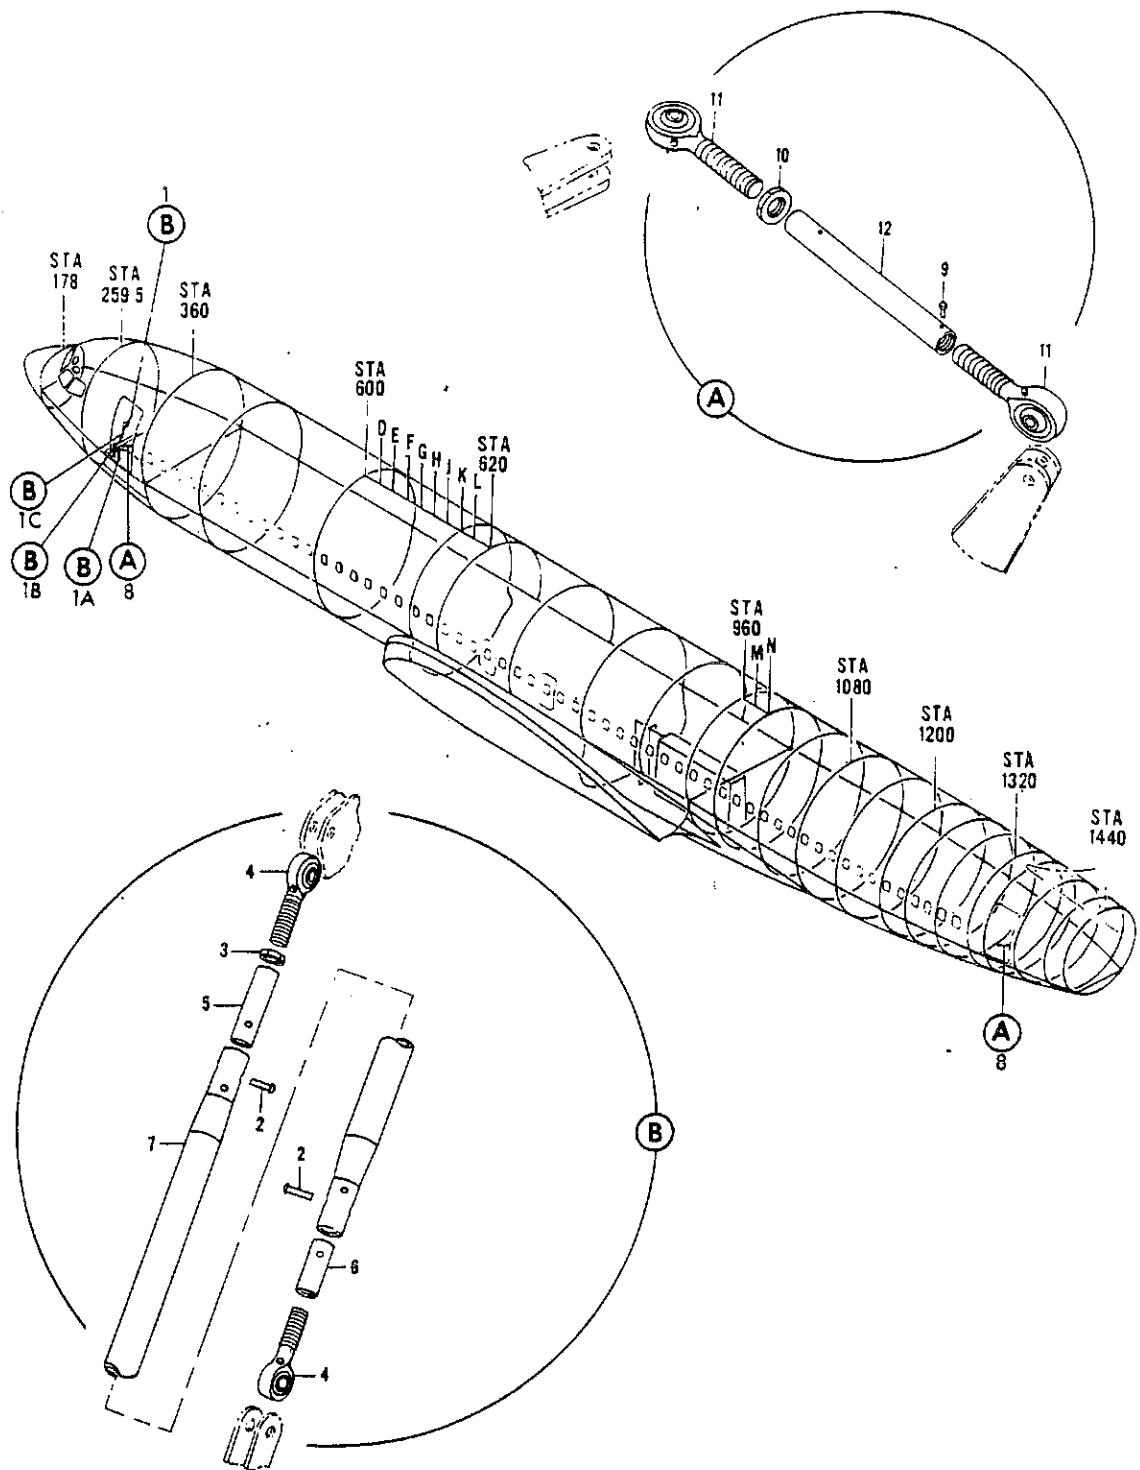


FIGURE 8. ROD ASSY, DOOR MECHANISM CONTROL ROD AND ENTRY DOOR COCKING PUSH



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 8		ROD ASSY, DOOR MECHANISM CONTROL.	0150	
R 1	90-7823	ROD ASSY, ENTRY DOOR COCKING PUSH.	0150	RF
R 1A	90-7823-1	. ROD ASSY, DOOR MECHANISM CONTROL (SEE FIG. 3, ITEM. 211) (OPTIONAL TO 65-28925-1 FIG. 9)	0150	RF
R 1B	90-7823-2	. ROD ASSY, DOOR MECHANISM CONTROL (SEE FIG. 3, ITEM. 212) (OPTIONAL TO 65-28925-2 FIG. 9)	0150	RF
R 1C	90-7823-3	. ROD ASSY, DOOR MECHANISM CONTROL (SEE FIG. 3, ITEM. 213) (OPTIONAL TO 65-28925-3 FIG. 9)	0150	RF
R 2	AN470D5	. ROD ASSY, DOOR MECHANISM CONTROL (SEE FIG. 3, ITEM. 214) (OPTIONAL TO 65-28925-4 FIG. 9)	0150	4
R 3	AN316-5R	. RIVET	0150	1
R 4	BACB10A187M2L	. NUT	0150	2
R 5	30-3008	. BEARING	0150	1
R 6	30-3008-1	. ADAPTER, PUSH ROD	0150	1
R 7	60-4453	. ADAPTER, PUSH ROD	0150	1
R 7	60-4453-1	. ROD, LATCH (USED ON 90-7823).	0150	1
R 7	60-4454	. ROD, LATCH (USED ON 90-7823-1).	0150	1
R 7	60-4454-1	. ROD, LATCH (USED ON 90-7823-2).	0150	1
R 8	60-7208	. ROD, LATCH (USED ON 90-7823-3).	0150	1
R 9	NAS508M6	. ROD ASSY, ENTRY DOOR COCKING PUSH (SEE FIG. 2, ITEM. 50, FIG. 3, ITEM 215, FIG. 3A ITEM 121, FIG. 6, ITEM 17 AND FIG. 7 ITEM 227)	5199	RF
R 10	AN316-8R	. RIVET	5199	1
R 11	BACB10A400M2L	. NUT	5199	1
R 12	60-7208-1	. BEARING	5199	2
		. ROD	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

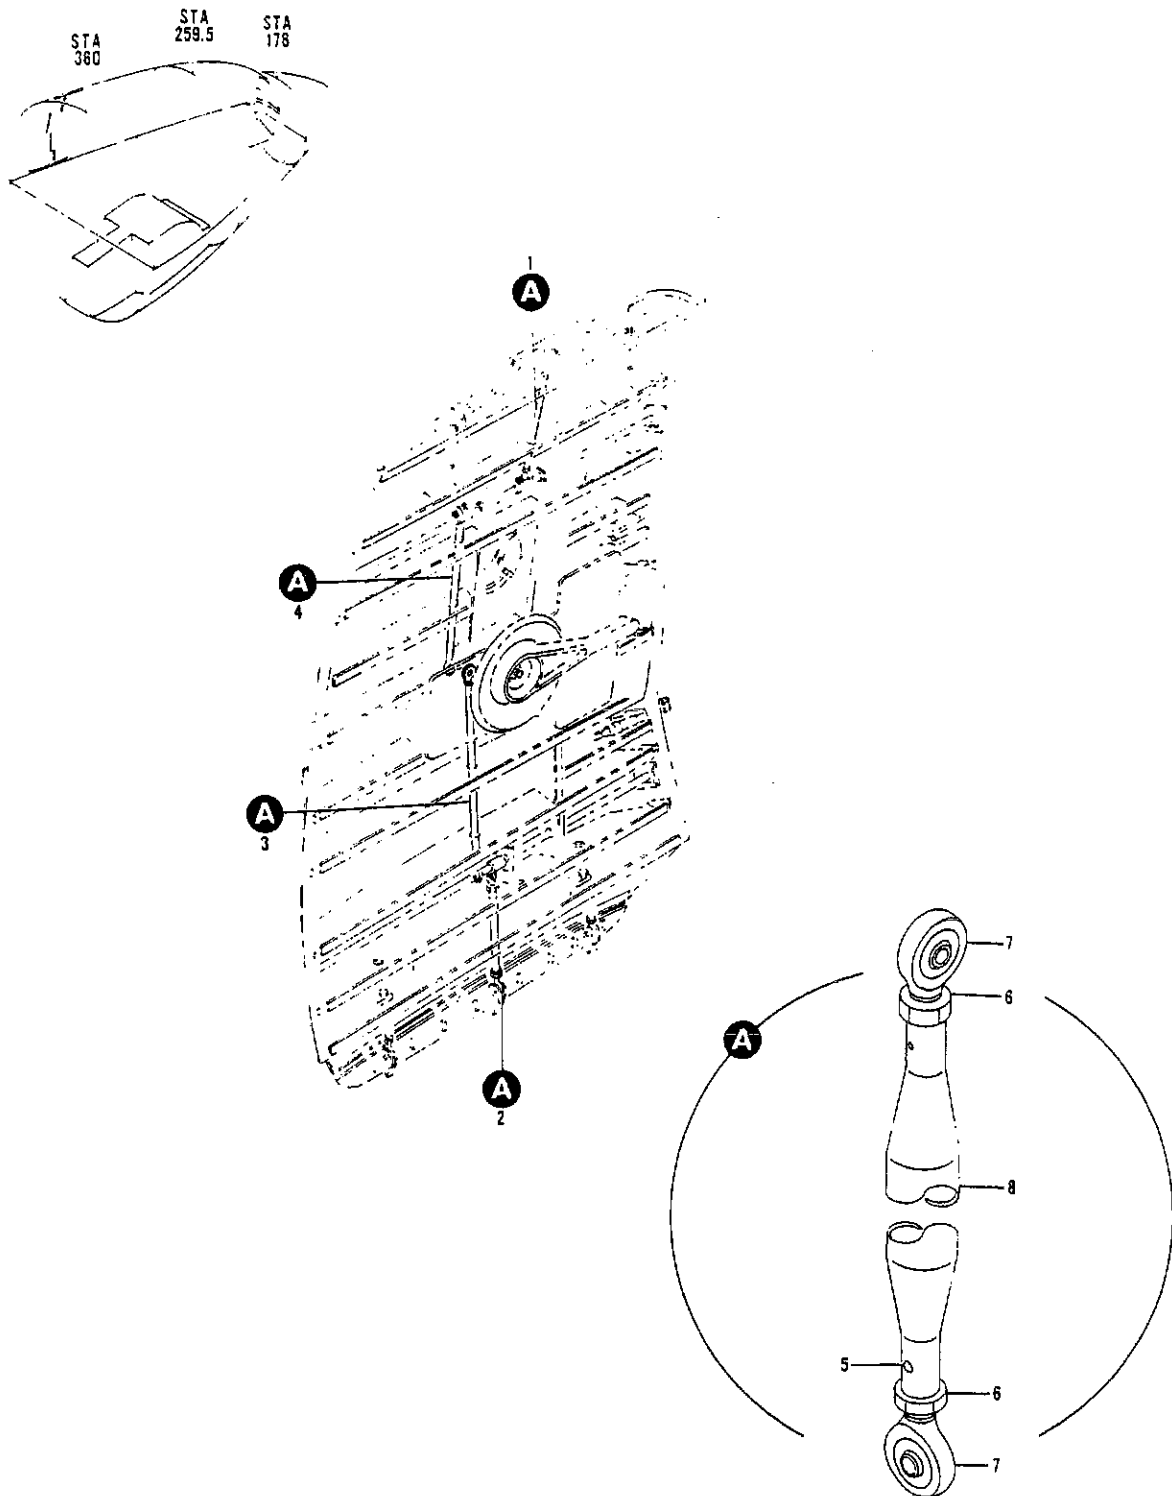


FIGURE 9. ROD ASSY, DOOR MECHANISM CONTROL



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R R R R R R R R R R R R R R	9	1	65-28925-1	ROD ASSY, DOOR MECHANISM CONTROL (SEE FIG. 3, ITEM 211, FIG. 3A, ITEM 93) (OPTIONAL 90-7823 FIG. 8)	0150	RF
		1	65-28925-1	ROD ASSY, DOOR MECHANISM CONTROL (USED ON REPLACEMENT . DOOR ASSY 50-7945-88) (SEE FIG. 3, ITEM 211)	0150	RF
		1	65-28925-1	ROD ASSY, DOOR MECHANISM CONTROL (SEE FIG. 3A, ITEM 93)	5199	RF
		2	65-28925-2	ROD ASSY, DOOR MECHANISM CONTROL (SEE FIG. 3, ITEM 212, FIG. 3A, ITEM 94) (OPTIONAL 90-7823-1 FIG. 8)	0150	RF
		2	65-28925-2	ROD ASSY, DOOR MECHANISM CONTROL (USED ON REPLACEMENT . DOOR ASSY 50-7945-88) (SEE FIG. 3, ITEM 212)	0150	RF
		2	65-28925-2	ROD ASSY, DOOR MECHANISM CONTROL (SEE FIG. 3A, ITEM 94)	5199	RF
		3	65-28925-3	ROD ASSY, DOOR MECHANISM CONTROL (SEE FIG. 3, ITEM 213, FIG. 3A, ITEM 95) (OPTIONAL 90-7823-2 FIG. 8)	0150	RF
		3	65-28925-3	ROD ASSY, DOOR MECHANISM CONTROL (USED ON REPLACEMENT . DOOR ASSY 50-7945-88) (SEE FIG. 3, ITEM 213)	0150	RF
		3	65-28925-3	ROD ASSY, DOOR MECHANISM CONTROL (SEE FIG. 3A, ITEM 95)	5199	RF
		4	65-28925-4	ROD ASSY, DOOR MECHANISM CONTROL (SEE FIG. 3, ITEM 214, FIG. 3A ITEM 96) (OPTIONAL 90-7823-3 FIG. 8)	0150	RF
		4	65-28925-4	ROD ASSY, DOOR MECHANISM CONTROL (USED ON REPLACEMENT . DOOR ASSY 50-7945-88) (SEE FIG. 3, ITEM 214)	0150	RF
		4	65-28925-4	ROD ASSY, DOOR MECHANISM CONTROL (SEE FIG. 3A, ITEM 96)	5199	RF
		5	MS20470D3	. RIVET		1
		6	AN316-5R	. NUT		2
		7	BACB10A187L	. BEARING, ... (OPTIONAL 11-667A (V73134))		2
		7	11-667A	. BEARING, (V73134) (OPTIONAL TO BACB10A187L)		2
		8	65-28925-13	. ROD, DOOR MECHANISM CONTROL (USED ON 65-28925-1). . .		1
		8	65-28925-14	. ROD, DOOR MECHANISM CONTROL (USED ON 65-28925-2). . .		1
		8	65-28925-15	. ROD, DOOR MECHANISM CONTROL (USED ON 65-28925-3). . .		1
		8	65-28925-16	. ROD, DOOR MECHANISM CONTROL (USED ON 65-28925-4). . .		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

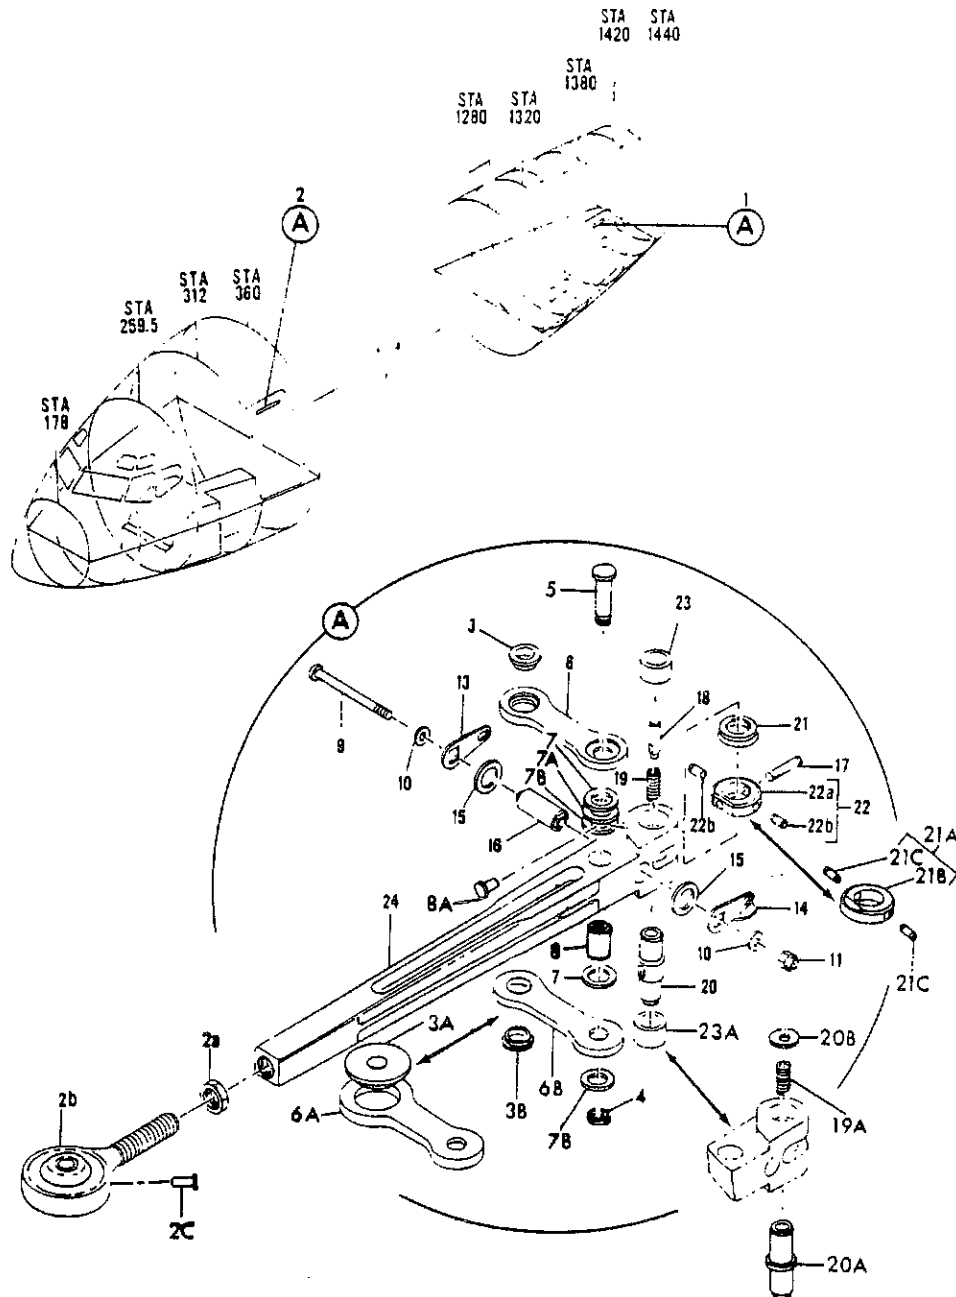


FIGURE 10A. ARM ASSY, ENTRY DOOR GUIDE

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
			1	2	3	4	5	6	7			
R R R	10	1	69-5338-7	ARM ASSY, ENTRY DOOR GUIDE (SEE FIG. 5, ITEM 27)								RF
		2	69-5338-6	ARM ASSY, ENTRY DOOR GUIDE (SEE FIG. 1, ITEM 95)							0150	RF
		2	65-29994-2	ARM ASSY, ENTRY DOOR GUIDE (SEE FIG. 1A, ITEM 100)							5151	RF
		2	65-29994-5	ARM ASSY, GUIDE (SEE FIG. 1A, ITEM 100)							5299	RF
R R		2A	AN316-8R	NUT								1
		2B	BACB10A400M2L	BEARING								1
		3	NAS77A7-19	BUSHING, (USED ON 69-5338-3, -7, -4, -5, -6 AND								1
				1-83825-1 (T0001)								
R R		3	NAS76A7-006P	BUSHING, (USED ON 65-29994-2, -5)							5199	1
		3A	NAS77A12-19P	BUSHING, (USED ON 65-29994-2, -5)							5199	1
		3B	NAS77A7-19	BUSHING, (USED ON 69-5338-3, -7, -4, -5, -6 AND								1
				1-83825-1 (T0001)								
R		4	NAS670-37	RING, (USED ON 69-5338-3, -7, -4, -5, -6 AND								1
				1-83825-1 (T0001)								
		4	MS16624-1037	RETAINER, (USED ON 65-29994-2, -5)							5199	1
		5	63-2589	PIN, ENTRY AND GALLEY DOOR								1
R R R R		6	63-2570	LINK, RADIUS (USED ON 69-5338-3, -7 AND -4)								1
		6	63-9786-1	LINK, RADIUS (USED ON 65-5338-5, -6 AND 1-83825-1							0150	1
				(T0001)								
		6	63-9786-1	LINK, (USED ON 65-29994-2, -5)							5199	1
R R R		6A	66-18315-1	LINK, (USED ON 65-29994-2, -5)							5199	1
		6B	63-2570	LINK, RADIUS (USED ON 69-5338-3, -7 AND -4)								1
		6B	63-9786-1	LINK, RADIUS (USED ON 69-5338-5, -6 AND 1-83825-1							0150	1
				(T0001)								
R		7	AN960PD616L	WASHER								2
		8	NAS76A6-026	BUSHING								1
		9	AN515C6R24	SCREW								1
		10	AN960PD6L	WASHER								2
R		11	NAS679A06W	NUT, (USED ON 69-5338-3, -7, -4, -5, -6 AND								1
				1-83825-1 (T0001)								
		11	BACN10JC06	NUT, (USED ON 65-29994-2, -5)							5199	1
		13	63-2546	LINK, ENTRY DOOR								1
R		14	66-4740-1	LEVER, STOWING LATCH (USED ON 69-5338-3, -7, -4, -5, ...								1
				-6 AND 1-83825-1 (T0001)								
		14	66-18573-1	LEVER, STOWING LATCH (USED ON 65-29994-2, -5)							5199	1
		15	AN960PD616L	WASHER								2
R		16	63-2552	SHAFT, ENTRY AND GALLEY DOOR								1
		17	NAS561C3-12	PIN, (USED ON 69-5338-3, -7, -5, -6 AND 1-83825-1								1
				(T0001)								
		17	MS16562-216	PIN, (USED ON 65-29994-2, -5)							5199	1
R R R R		18	63-2539	PIN, (USED ON 69-5338-3, -7, -4, -5, -6, 65-29994-2, ...								1
				-5, 1-83825-1 (T0001)								
		19	63-2554	SPRING, COMPRESSION (USED ON 69-5338-3, -7, -4, -5, ...								1
				-6, 65-29994-2, -5, 1-83825-1 (T0001)								
R R R R		20	66-4727	ROLLER, (USED ON 69-5338-3, -7, -4, -5, -6, ...								1
				65-29994-2, -5, 1-83825-1 (T0001)								
		20	66-4727-3	ROLLER, (USED ON 69-5338-3, -4, -5, -6, -7, ...								1
				65-29994-2, -5, 1-83825-1 (VT0001)								
R R R R		20	66-4727-3	ROLLER, (USED ON 65-29994-5)							5299	1
				(OPTIONAL 66-4727)								
		20	66-4727	ROLLER, (USED ON 69-65-29994-5)							5299	1
				(OPTIONAL TO 66-4727)								
R		21	BACB10D67T	BEARING, (USED ON 69-5338-3, -7, -4, -5, -6, ...								1
				65-29994-2, -5, 1-83825-1 (T0001)								
		22	66-9968	COLLAR ASSY, (USED ON 69-5338-3, -7, -4, -5, -6, ...								1
				65-29994-2, -5, 1-83825 (T0001)								
R		22A	63-2551-1	COLLAR								1
		22B	66-9968-1	PIN								2
		23	NAS76A8-012	BUSHING								1
		23A	NAS76A8-012	BUSHING, (USED ON 69-5338-3, -7, -4, -5, -6, ...								1
R				65-29994-2, -5 AND 1-83825-1 (T0001)								
		24	69-5133-4	ARM, (USED ON 65-29994-2, -5)							5199	1
		24	69-5133-3	ARM, (USED ON 69-5338-7)								1
		24	69-5133-4	ARM, (USED ON 69-5338-6, 1-83825-1 (T0001)							0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE												

MISSING ITEM NUMBERS ARE NOT APPLICABLE

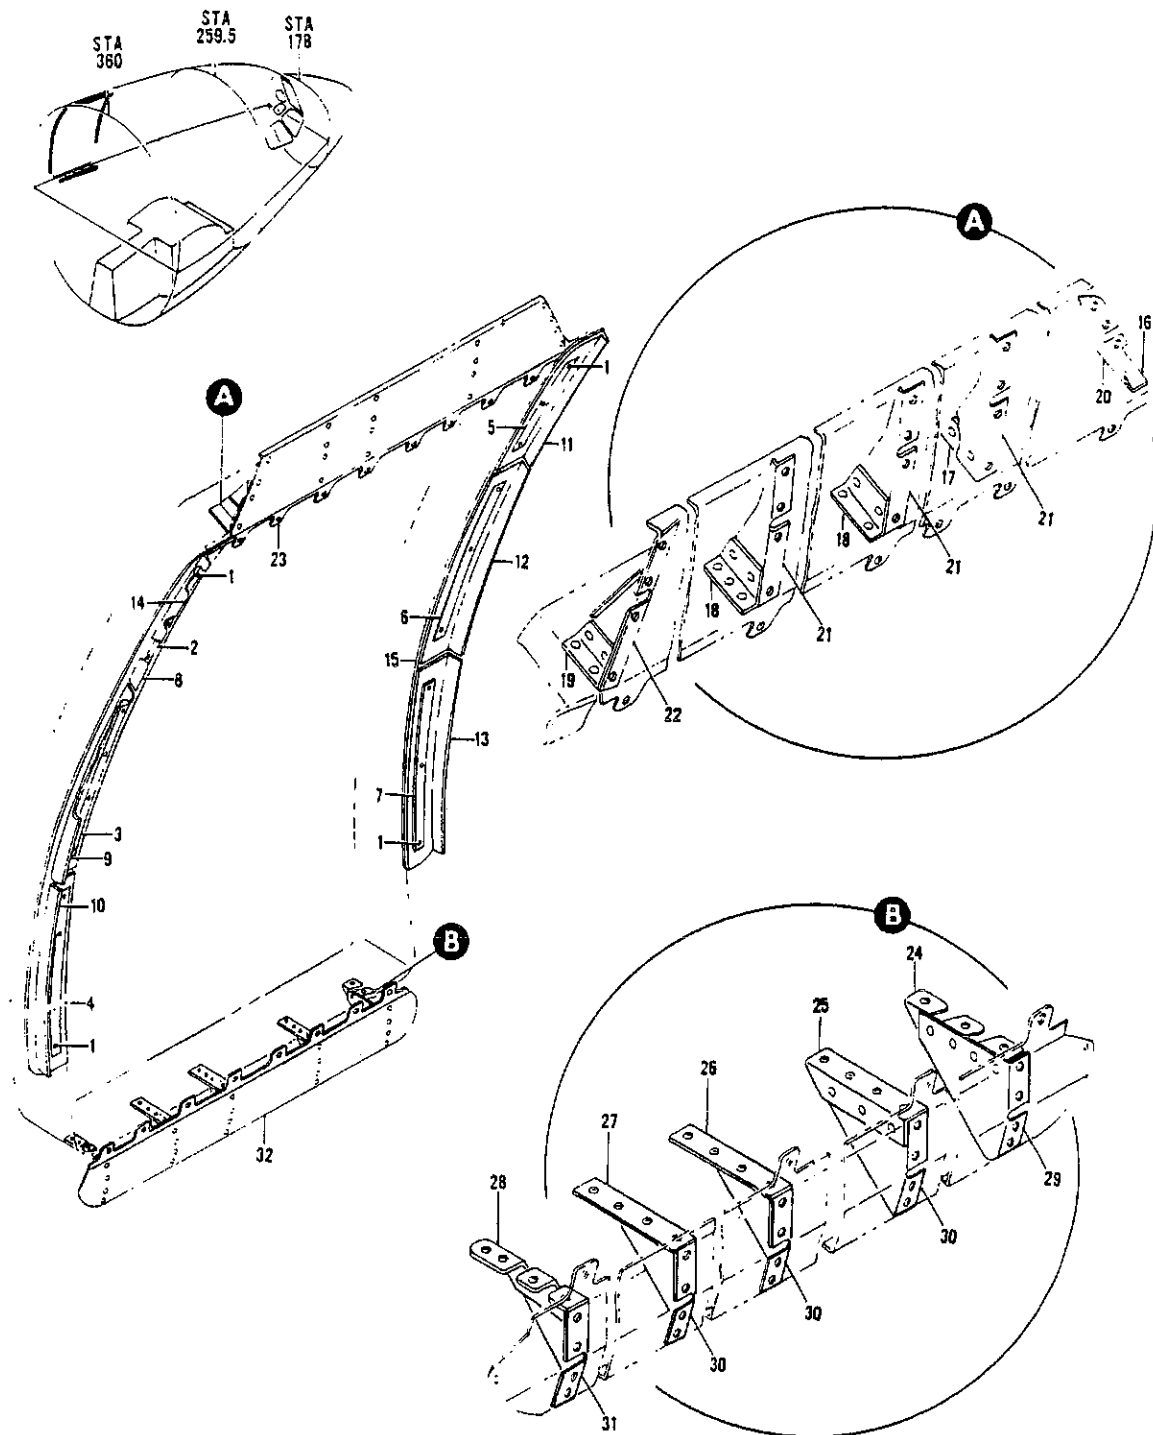


FIGURE 11. SUPPORT INSTL, FORWARD ENTRY DOOR LINING



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
11	65-1348-2		SUPPORT INSTL, FORWARD ENTRY DOOR LINING (SEE FIG. 3, . ITEM 210A AND FIG. 3A, ITEM 206)		RF
1	NAS603-9		. SCREW		20
2	65-19164-33		. STRIP, ENTRY DOOR LINING RETAINER		1
3	65-19164-32		. STRIP, ENTRY DOOR LINING RETAINER		1
4	65-19164-31		. STRIP, ENTRY DOOR LINING RETAINER		1
5	65-19164-36		. STRIP, ENTRY DOOR LINING RETAINER		1
6	65-19164-35		. STRIP, ENTRY DOOR LINING RETAINER		1
7	65-19164-34		. STRIP, ENTRY DOOR LINING RETAINER		1
8	65-18629-9		. ANGLE, FORWARD ENTRY DOOR LINING ATTACHMENT		1
9	65-18629-8		. ANGLE, FORWARD ENTRY DOOR LINING ATTACHMENT		1
10	65-18629-7		. ANGLE, FORWARD ENTRY DOOR LINING ATTACHMENT		1
11	65-18629-12		. ANGLE, FORWARD ENTRY DOOR LINING ATTACHMENT		1
12	65-18629-11		. ANGLE, FORWARD ENTRY DOOR LINING ATTACHMENT		1
13	65-18629-10		. ANGLE, FORWARD ENTRY DOOR LINING ATTACHMENT		1
14	65-1348-38		. SEAL, FORWARD ENTRY DOOR LINING SUPPORT AFT		1
15	65-1348-37		. SEAL, FORWARD ENTRY DOOR LINING SUPPORT FORWARD		1
16	69-5422-6		. ANGLE, FORWARD ENTRY DOOR UPPER SEAL SUPPORT		1
17	69-5422-8		. ANGLE, FORWARD ENTRY DOOR UPPER SEAL SUPPORT		1
18	69-5422-7		. ANGLE, FORWARD ENTRY DOOR UPPER SEAL SUPPORT		2
19	69-5422-5		. ANGLE, FORWARD ENTRY DOOR UPPER SEAL SUPPORT		1
			ATTACHING PARTS		
	MS20470D5		. RIVET		10
			-----*		
20	69-5422-4		. BRACKET, FORWARD ENTRY DOOR UPPER SEAL SUPPORT		1
21	69-5422-3		. BRACKET, FORWARD ENTRY DOOR UPPER SEAL SUPPORT		3
22	69-5422-2		. BRACKET, FORWARD ENTRY DOOR UPPER SEAL SUPPORT		1
			ATTACHING PARTS		
	NAS603-5		. SCREW		15
	BACN10FX1		. NUT		15
			-----*		
23	69-5422-9		. PLATE, FORWARD ENTRY DOOR UPPER SEAL SUPPORT		1
			ATTACHING PARTS		
	NAS603-10		. SCREW		8
			-----*		
24	69-5187-6		. ANGLE, FORWARD ENTRY DOOR LOWER SEAL SUPPORT		1
25	69-5187-4		. ANGLE, FORWARD ENTRY DOOR LOWER SEAL SUPPORT		1
26	69-5187-5		. ANGLE, FORWARD ENTRY DOOR LOWER SEAL SUPPORT		1
27	69-5187-3		. ANGLE, FORWARD ENTRY DOOR LOWER SEAL SUPPORT		1
28	69-5187-2		. ANGLE, FORWARD ENTRY DOOR LOWER SEAL SUPPORT		1
			ATTACHING PARTS		
	MS20470D5		. RIVET		17
			-----*		
29	69-5187-8		. BRACKET, FORWARD ENTRY DOOR LOWER SEAL SUPPORT		1
30	69-5187-10		. BRACKET, FORWARD ENTRY DOOR LOWER SEAL SUPPORT		3
31	69-5187-7		. BRACKET, FORWARD ENTRY DOOR LOWER SEAL SUPPORT		1
			ATTACHING PARTS		
	NAS603-5		. SCREW		15
	BACN10FX1		. NUT		15
			-----*		
32	69-5187-11		. PLATE, FORWARD ENTRY DOOR LOWER SEAL SUPPORT		1
			ATTACHING PARTS		
	NAS603-10		. SCREW		8
			-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

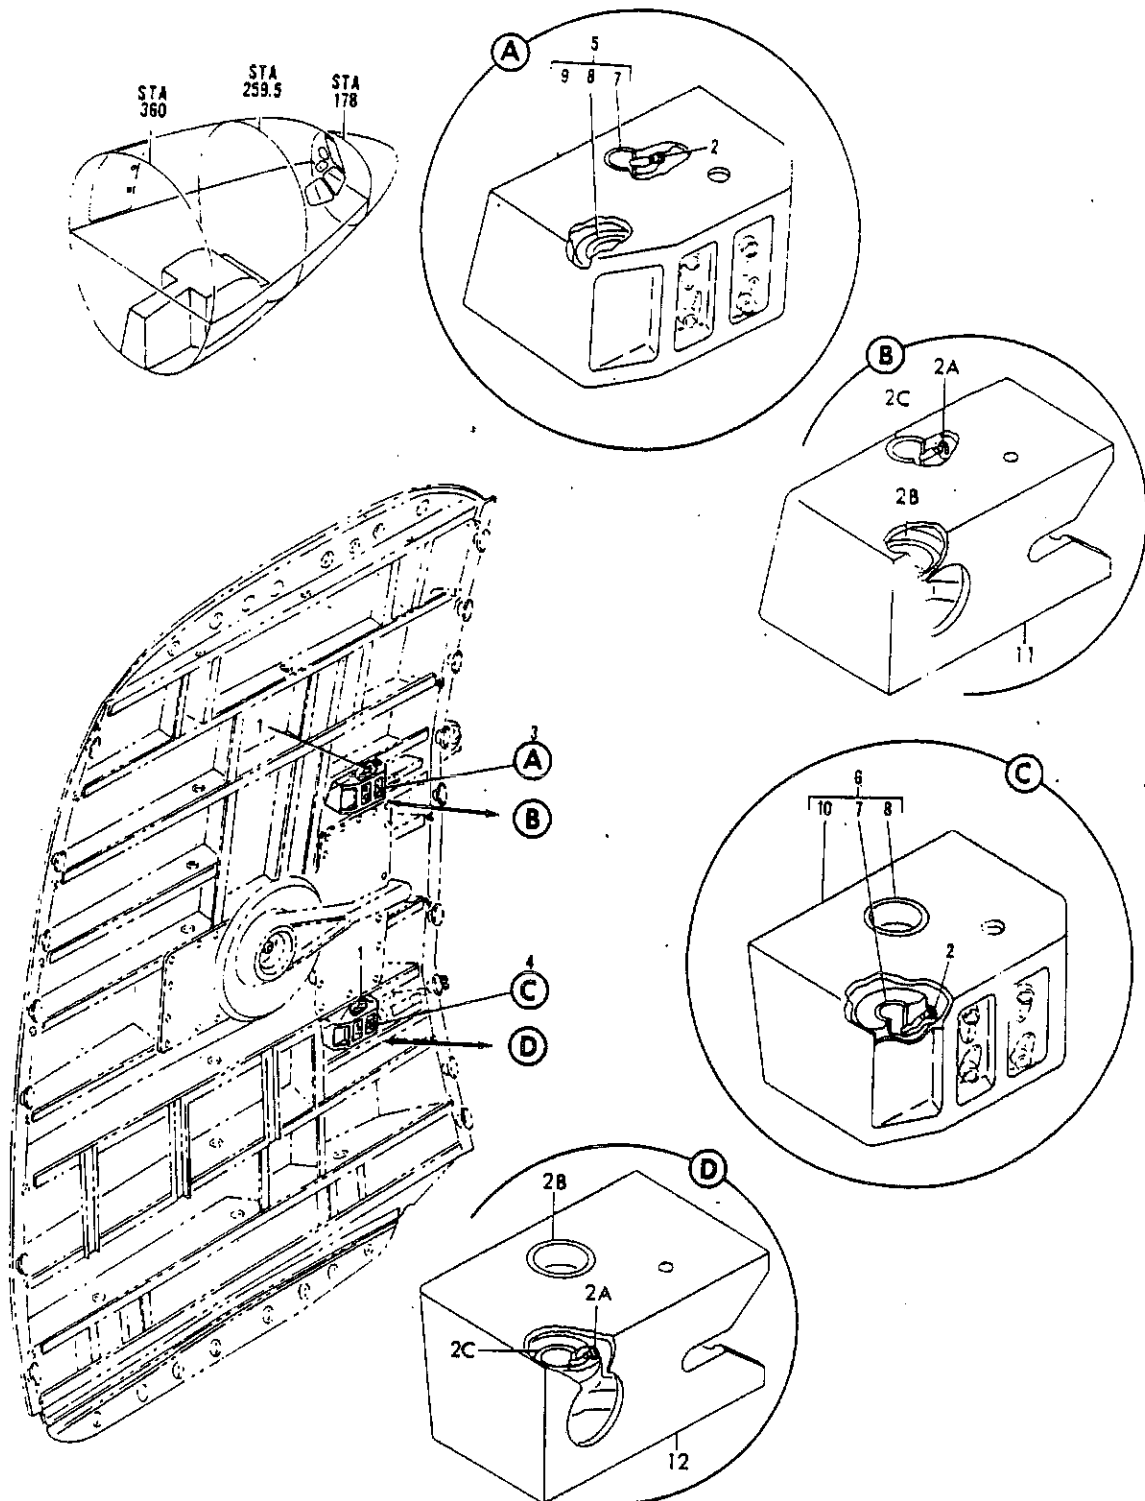


FIGURE 12. SUPPORT INSTL, FORWARD ENTRY DOOR HINGE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
12	69-22323-9		SUPPORT ASSY, FORWARD ENTRY DOOR HINGE (UPPER) (SEE . . FIG. 3, ITEM 31C AND FIG. 3A, ITEM 29)		RF
	69-22323-10		SUPPORT ASSY, FORWARD ENTRY DOOR HINGE (LOWER) (SEE . . FIG. 3, ITEM 31D AND FIG. 3A, ITEM 30)		RF
1	66-24884-1		. FITTING, ATTACH		1
	NAS1104-8W		. ATTACHING PARTS		4
	AN960PD416L		. BOLT, (USED ON 69-22323-5, -9, -6 AND -10).		AR
	AN960PD416		. WASHER, (USED ON 69-22323-5, -9, -6 AND -10). (OPTIONAL AN960PD416)		AR
	NAS682A4		. WASHER, (USED ON 69-22323-5, -9, -6 AND -10). (OPTIONAL TO AN960PD416L)		4
2	NAS516-1		. NUT, (USED ON 69-22323-5, -9, -6 AND -10)		1
3	69-22323-7		. FITTING, (USED ON 69-22323-5, -9, -6 AND -10)		1
4	69-22323-8		. SUPPORT ASSY, (UPPER) (USED ON 69-22323-5 AND -9)		1
5	65-25838-3		. SUPPORT ASSY, (LOWER) (USED ON 69-22323-6 AND -10).		1
6	65-25838-4		. SUPPORT ASSY, ENTRY DOOR UPPER HINGE (UPPER).		1
7	NAS537B10-066		. SUPPORT ASSY, ENTRY DOOR LOWER HINGE (LOWER).		1
8	NAS537B16-044		. . . BUSHING		1
	NAS537B16P044		. . . BUSHING (OPTIONAL NAS537B16P044)		1
9	65-25838-7		. . . BUSHING (OPTIONAL TO NAS537B16-044)		1
10	65-25838-8		. . . SUPPORT, (UPPER) (ALTERED FROM 65-25838-9).		1
			. . . SUPPORT, (LOWER) (ALTERED FROM 65-25838-9).		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE


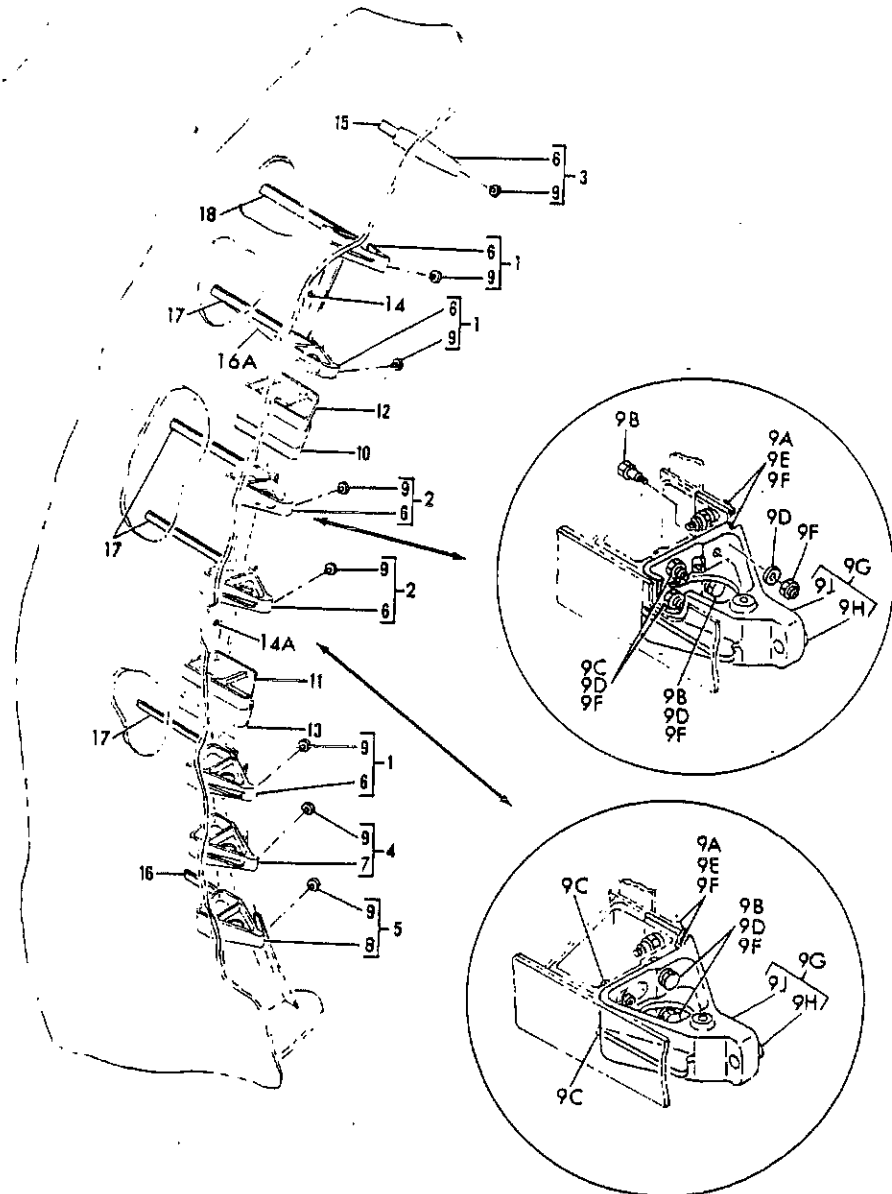


FIGURE 13. FRAME INSTL, STATION 303.9

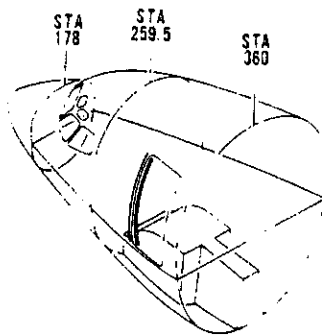

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
13	50-7946	FRAME INSTL, STATION 303.9 (SEE 53-2, FIG. 1, ITEM 45)							0150	RF
	50-7946-161	FRAME INSTL, STATION 303.9 (VARIABLE DWG. NO.; 50-7946-5002) (SEE 53-2, FIG. 1, ITEM 45)							5199	RF
1	50-9370-13	. FITTING ASSY, FORWARD ENTRY DOOR STOP							0150	3
2	50-9370-14	. FITTING ASSY, FORWARD ENTRY DOOR STOP								2
3	50-9370-15	. FITTING ASSY, FORWARD ENTRY DOOR STOP								1
4	65-14076-9	. FITTING ASSY, FORWARD ENTRY DOOR STOP								1
5	65-14076-10	. FITTING ASSY, FORWARD ENTRY DOOR STOP								1
6	50-9370-16	. . FITTING, FORWARD ENTRY DOOR STOP (USED ON 50-9370-13)							0150	1
6	50-9370-17	. . FITTING, FORWARD ENTRY DOOR STOP (USED ON 50-9370-14)								1
6	50-9370-18	. . FITTING, FORWARD ENTRY DOOR STOP (USED ON 50-9370-15)								1
7	65-14076-11	. . FITTING, FORWARD ENTRY DOOR STOP (USED ON 65-14076-9)								1
8	65-14076-12	. . FITTING, FORWARD ENTRY DOOR STOP (USED ON 65-14076-10)								1
9	69-16954-2	. . PLATE, DOOR STOP FITTING BEARING (USED ON 50-9370-13, -15, 65-14076-9, AND -10) (OPT 69-16954-3)							0150	1
9	69-16954-3	. . PLATE, DOOR STOP FITTING BEARING (USED ON 50-9370-13, -15, 65-14076-9, AND -10) (OPT TO 69-16954-2)								1
9	69-16954-2	. . PLATE, DOOR STOP FITTING BEARING (USED ON 50-9370-14) (OPT 69-16954-3)								1
9	69-16954-3	. . PLATE, DOOR STOP FITTING BEARING (USED ON 50-9370-14) (OPT TO 69-16954-2)								1
9G	65-57558-13	. FITTING ASSY, FORWARD ENTRY DOOR STOP (OPTIONAL AND FOR REPLACEMENT ORDER 65-57558-1, 69-29990-9)							5199	2
9H	69-16954-2	. . PLATE, DOOR STOP FITTING BEARING (OPT 69-16954-3)							5199	1
9H	69-16954-3	. . PLATE, DOOR STOP FITTING BEARING (OPT TO 69-16954-2)							5199	1
9J	65-57558-11	. . FITTING, (USED ON 65-57558-13).							5199	1
10	50-9326-3	. FITTING, FORWARD ENTRY DOOR LOWER HINGE							5199	1
11	50-9326-4	. FITTING, FORWARD ENTRY DOOR UPPER HINGE								1
12	50-9327-3	. FITTING, FORWARD ENTRY DOOR UPPER HINGE								1
13	50-9327-4	. FITTING, FORWARD ENTRY DOOR LOWER HINGE								1
14	AN931-4-7	. GROMMET							5199	1
14A	MS35489-7	. GROMMET							5199	1
15	50-7946-102	. STRAP, STATION 303.9 BEAM NO. 7 INTERCOSTAL FRAME . .								1
16	50-7946-103	. STRAP, STATION 303.9 BEAM NO. 16 INTERCOSTAL FRAME . .								1
16A	50-7946-16	. STRAP, STATION 303.9 BEAM NO. 9 INTERCOSTAL FRAME . .								1
17	BACS40A13-144	. SHIM.								AR
17	BACS40B13-144	. SHIM.							0150	AR
18	BACS40A13-128	. SHIM.							0150	AR
18	BACS40B13-128	. SHIM.							0150	AR

MISSING ITEM NUMBERS ARE NOT APPLICABLE

MISSING ITEM NUMBERS ARE NOT APPLICABLE

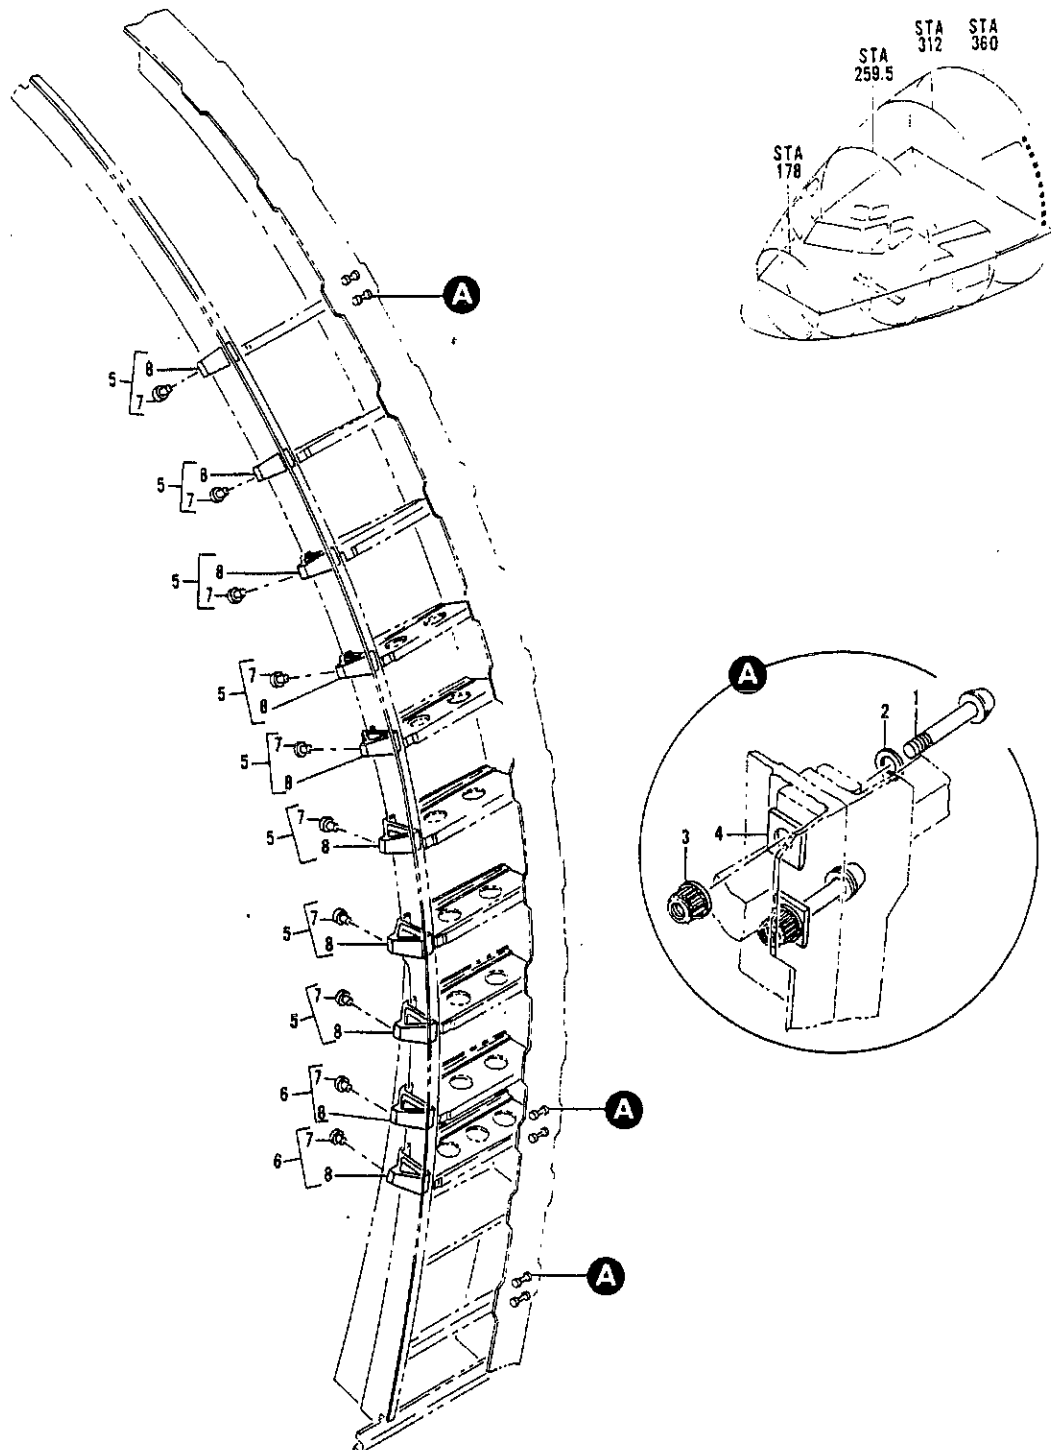


FIGURE 14. BOLT INSTL, STATION 348.20
FRAME INSTL, STATION 348.20

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
14	50-7947-24		BOLT INSTL, STATION 348.20 FRAME INSTL, STATION 348.20 BOLT INSTL, STATION 348.20 (SEE 53-1, FIG. 1, ITEM . 35 AND 53-2, FIG. 6, ITEM 42)		RF
1	MS20006-24		. . BOLT.		6
2	MS20002C6		. . WASHER.	0150	6
2	BACW10BN6AC		. . WASHER.	5199	6
3	BACN10B-L6L		. . NUT		6
	50-7947		. FRAME INSTL, STATION 348.20 (SEE 53-2, FIG. 1, ITEM . 46)	0150	RF
	50-7947		. FRAME INSTL, STATION 348.20 (VARIABLE DWG;50-7947-5001) (SEE 53-2, FIG. 1, ITEM 46)	5199	RF
4	50-7947-22		. . FILLER, STATION 348.20 FRAME.		6
5	90-7813-6		. . FITTING ASSY, FORWARD ENTRY DOOR STOP		8
6	65-14079-5		. . FITTING ASSY, FORWARD ENTRY DOOR STOP ATTACHING PARTS		2
	NAS1103-3W		. . BOLT.		4
	NAS679A3W		. . NUT		4
			-----*		
7	69-16954-2		. . . PLATE, DOOR STOP FITTING BEARING (USED ON 90-7813-6 AND 65-14079-5) (OPTIONAL 69-16954-3)		1
7	69-16954-3		. . . PLATE, DOOR STOP FITTING BEARING (USED ON 90-7813-6 AND 65-14079-5) (OPTIONAL 69-16954-2)		1
8	90-7813-7		. . . FITTING, FORWARD ENTRY DOOR STOP (USED ON 90-7813-6)		1
8	65-14079-6		. . . FITTING, FORWARD ENTRY DOOR STOP (USED ON 65-14079-5)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

R
R
R
R
R

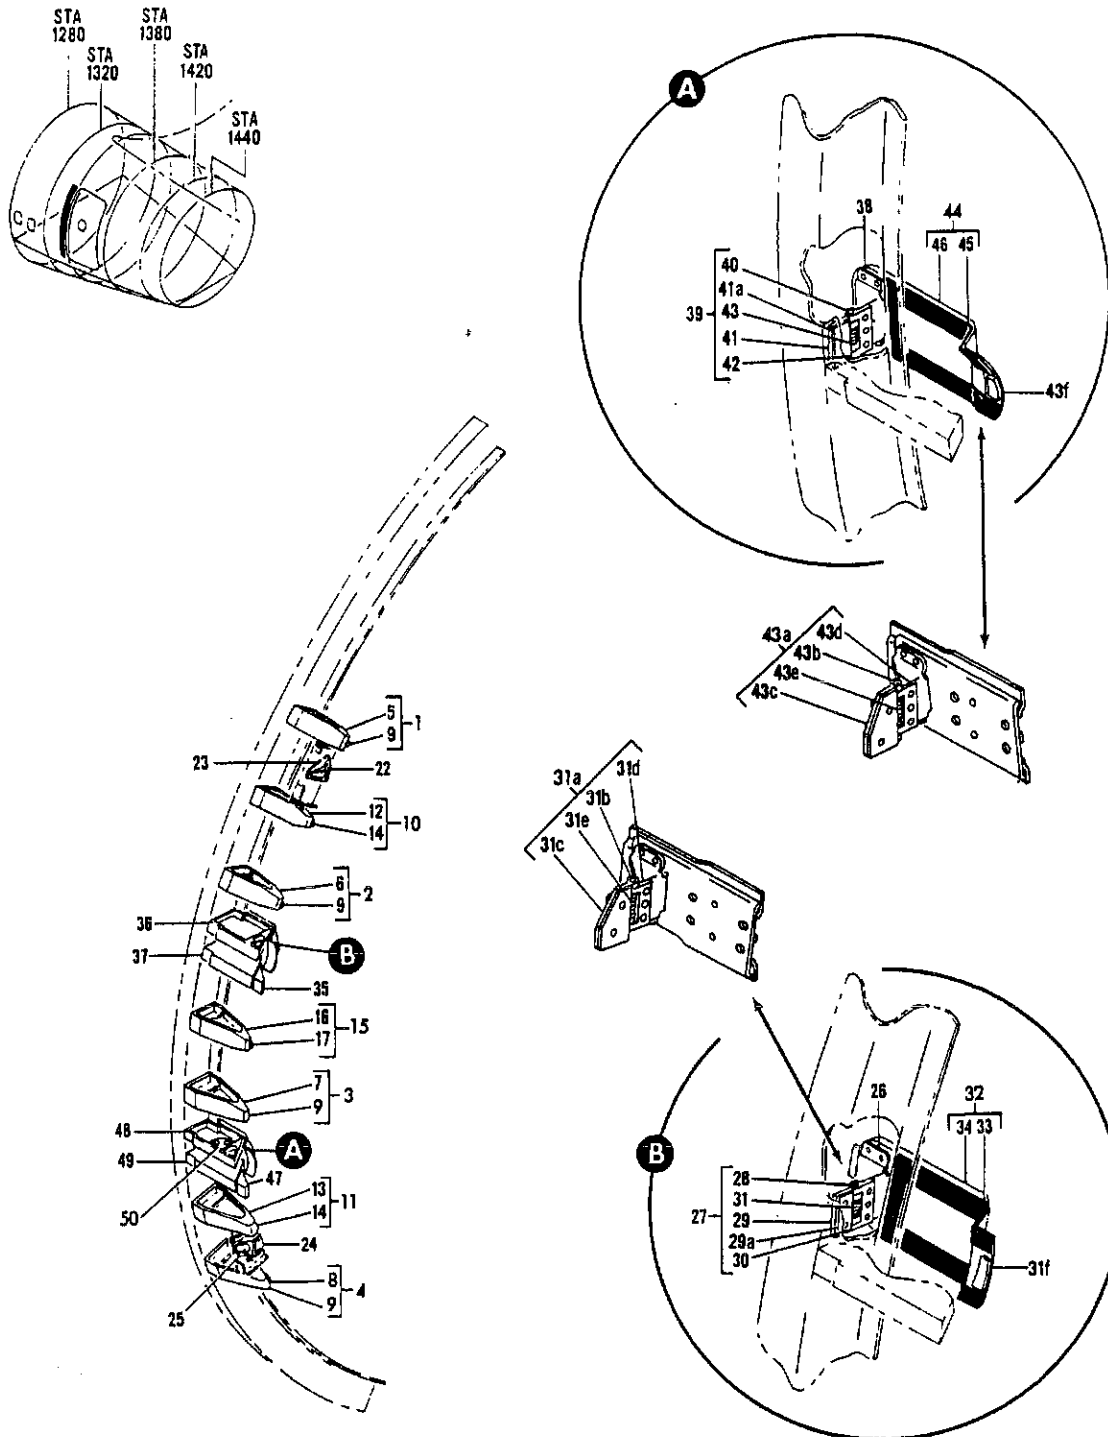


FIGURE 15. FRAME INSTL., BODY STATION 1330.9 AFT ENTRY DOOR

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
15	50-9395-108		FRAME INSTL, BODY STATION 1330.9 AFT ENTRY DOOR (SEE. . 53-2, FIG. 3, ITEM 40 AND 53-2, FIG. 7A, ITEM 29)		RF
1	50-10828-43		. FITTING ASSY, STATION 1330.9 FRAME STOP		1
2	50-10828-45		. FITTING ASSY, STATION 1330.9 FRAME STOP		1
3	50-10828-47		. FITTING ASSY, STATION 1330.9 FRAME STOP		1
4	50-10828-805		. FITTING ASSY, STATION 1330.9 FRAME STOP		1
			ATTACHING PARTS		
	NAS1105-9W		. BOLT		8
	AN960PD516		. WASHER		8
	NAS679A5		. NUT		8
	BACR15AZ8-B		. RIVET		8
			-----*		
5	50-10828-50		. . FITTING, STATION 1330.9 FRAME STOP (USED ON 50-10828-43)		1
6	50-10828-52		. . FITTING, STATION 1330.9 FRAME STOP (USED ON 50-10828-45)		1
7	50-10828-54		. . FITTING, STATION 1330.9 FRAME STOP (USED ON 50-10828-47)		1
8	50-10828-56		. . FITTING, STATION 1330.9 FRAME STOP (USED ON 50-10828-49)		1
9	69-16954-2		. . PLATE, ENTRY DOOR BEARING (USED ON 50-10828-43, . . -45, -47, -49 AND -805) (OPTIONAL 69-16954-3)		1
9	69-16954-3		. . PLATE, ENTRY DOOR BEARING (USED ON 50-10828-43, . . -45, -47, -49 AND -805) (OPTIONAL 69-16954-2)		1
10	50-10828-44		. FITTING ASSY, STATION 1330.9 FRAME STOP		1
11	50-10828-48		. FITTING ASSY, STATION 1330.9 FRAME STOP		1
			ATTACHING PARTS		
	NAS1104-9W		. BOLT		4
	AN960D416L		. WASHER, (USED WITH 50-10828-30)		4
	AN960PD416L		. WASHER, (USED WITH 50-10828-34)		2
	NAS679A4W		. NUT		4
	BACR15AZ8-B		. RIVET		4
			-----*		
12	50-10828-51		. . FITTING, STATION 1330.9 FRAME STOP (USED ON 50-10828-44)		1
13	50-10828-55		. . FITTING, STATION 1330.9 FRAME STOP (USED ON 50-10828-48)		1
14	69-16954-2		. . PLATE, ENTRY DOOR BEARING (USED ON 50-10828-44 AND -48) (OPTIONAL 69-16954-3)		1
14	69-16954-3		. . PLATE, ENTRY DOOR BEARING (USED ON 50-10828-44 AND -48) (OPTIONAL 69-16954-2)		1
15	50-10828-46		. FITTING ASSY, STATION 1330.9 FRAME STOP		1
			ATTACHING PARTS		
	NAS1104-9W		. BOLT		2
	AN960PD416L		. WASHER		2
	NAS679A4W		. NUT		2
	BACR15AZ8-B		. RIVET		2
			-----*		
16	50-10828-53		. . FITTING, STATION 1330.9 FRAME STOP (USED ON 50-10828-46)		1
17	69-16954-2		. . PLATE, ENTRY DOOR BEARING (USED ON 50-10828-46) . . (OPTIONAL 69-16954-3)		1
17	69-16954-3		. . PLATE, ENTRY DOOR BEARING (USED ON 50-10828-46) . . (OPTIONAL 69-16954-2)		1
22	90-9405-4		. FITTING, AFT ENTRY DOOR ROLLER LATCH.	0151	1
22	90-9405-5		. FITTING, AFT ENTRY DOOR ROLLER LATCH.	5299	1
			ATTACHING PARTS		
	NAS517-4-12		. SCREW		2
	AN4-10A		. BOLT		1
			-----*		
23	90-9407-7		. PLATE, AFT ENTRY DOOR SERRATED.		1
24	90-9406-4		. FITTING, AFT ENTRY DOOR ROLLER LATCH.	0151	1
24	90-9406-5		. FITTING, AFT ENTRY DOOR ROLLER LATCH.	5299	1
			ATTACHING PARTS		
	NAS517-4-10		. SCREW		2
	AN4-10A		. BOLT		1
			-----*		
25	90-9407-6		. PLATE, AFT ENTRY DOOR SERRATED.		1
31A	65-12706-1		. COVER ASSY, AFT ENTRY DOOR HINGE UPPER.		1
			ATTACHING PARTS		
	NAS221-8		. SCREW		4
	AN960C10		. WASHER.		4
			-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
15	31B	AN253-2-250		1
	31C	65-12706-2		1
	31D	65-12706-3		1
	31E	66-10898		1
		69-8824-4		1
		69-8824		1
	31F	63-10297		1
	32	69-8824-5		1
	32	69-8824-3		1
	33	69-8824-6		1
	33	69-8824-2		1
	34	69-8824-1		1
	35	60-6931		1
		MS20004-6		1
		NAS1104-6DW		1
		NAS679A4W		2
	36	90-9493-1		1
	37	90-9494		1
	38	90-9185-6		1
	43A	65-12706		1
		NAS221-8		4
		AN960C10		4
	43B	AN253-2-250		1
	43C	65-12706-2		1
	43D	65-12706-3		1
	43E	66-10898		1
		69-8823-4		1
		69-8823		1
	43F	63-10297		1
	44	69-8823-5		1
	44	69-8823-3		1
	45	69-8823-6		1
	45	69-8823-2		1
	46	69-8823-1		1
	47	60-6932		1
		MS20004-6		1
		NAS1104-6DW		1
		NAS679A4W		2
	48	90-9495		1
	49	90-9492		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				






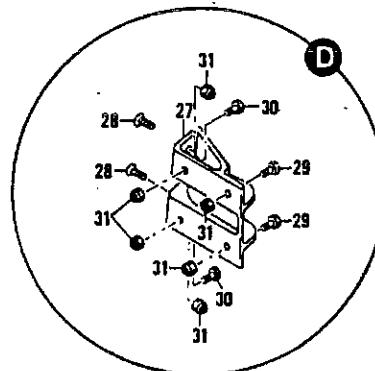


FIGURE 16. FRAME INSTL, BODY STATION 1375.2 AFT ENTRY DOOR

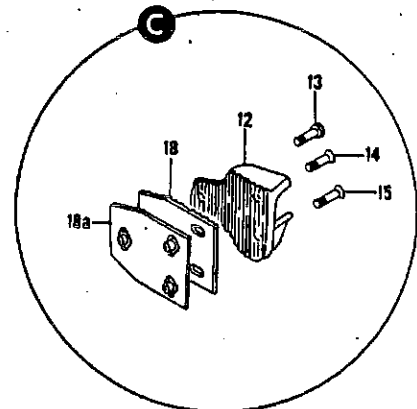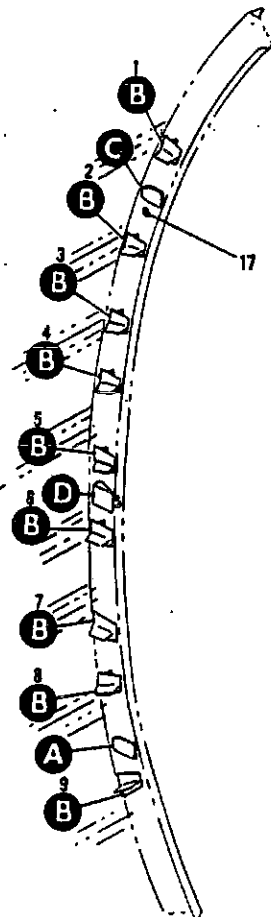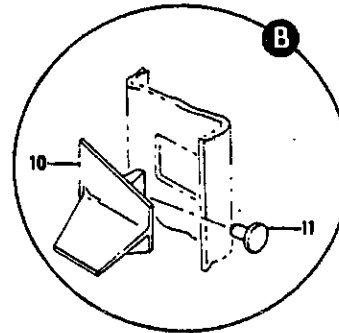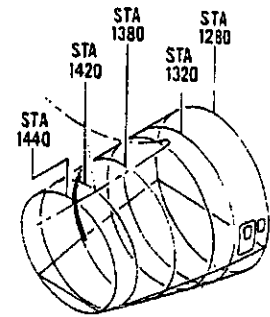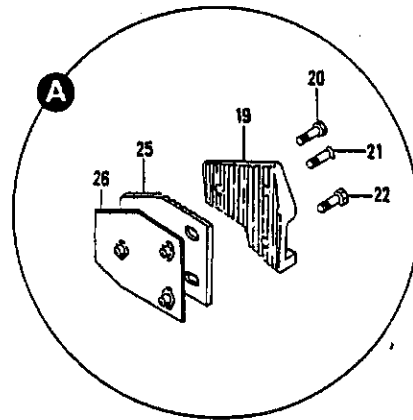

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
16	50-9702-26	FRAME INSTL, BODY STATION 1375.2 AFT ENTRY DOOR (SEE . 53-2, FIG. 3, ITEM 39 AND 53-2, FIG. 7A, ITEM 30)		RF
1	65-51333-1	. FITTING ASSY, FRAME STATION 1375.2 AFT ENTRY DOOR . . STOP		1
2	65-51333-3	. FITTING ASSY, FRAME STATION 1375.2 AFT ENTRY DOOR . . STOP		1
3	65-51333-5	. FITTING ASSY, FRAME STATION 1375.2 AFT ENTRY DOOR . . STOP		1
4	65-51333-7	. FITTING ASSY, FRAME STATION 1375.2 AFT ENTRY DOOR . . STOP		1
5	65-51333-9	. FITTING ASSY, FRAME STATION 1375.2 AFT ENTRY DOOR . . STOP		1
6	65-51333-11	. FITTING ASSY, FRAME STATION 1375.2 AFT ENTRY DOOR . . STOP		1
7	65-51333-13	. FITTING ASSY, FRAME STATION 1375.2 AFT ENTRY DOOR . . STOP		1
8	65-51333-15	. FITTING ASSY, FRAME STATION 1375.2 AFT ENTRY DOOR . . STOP		1
9	65-51333-17	. FITTING ASSY, FRAME STATION 1375.2 AFT ENTRY DOOR . . STOP		1
10	65-51333-2	. . FITTING, AFT ENTRY DOOR STOP (USED ON 65-51333-1)		1
10	65-51333-4	. . FITTING, AFT ENTRY DOOR STOP (USED ON 65-51333-3)		1
10	65-51333-6	. . FITTING, AFT ENTRY DOOR STOP (USED ON 65-51333-5)		1
10	65-51333-8	. . FITTING, AFT ENTRY DOOR STOP (USED ON 65-51333-7)		1
10	65-51333-10	. . FITTING, AFT ENTRY DOOR STOP (USED ON 65-51333-9)		1
10	65-51333-12	. . FITTING, AFT ENTRY DOOR STOP (USED ON 65-51333-11)		1
10	65-51333-14	. . FITTING, AFT ENTRY DOOR STOP (USED ON 65-51333-13)		1
10	65-51333-16	. . FITTING, AFT ENTRY DOOR STOP (USED ON 65-51333-15)		1
10	65-51333-18	. . FITTING, AFT ENTRY DOOR STOP (USED ON 65-51333-17)		1
11	69-16954-2	. . PLATE, DOOR STOP FITTING BEARING (USED ON 65-51333-1, -3, -5, -7, -9, -11, -13, -15 AND -17)		1
R	12	90-9403-1477	. FITTING, AFT ENTRY DOOR ROLLER LATCH.	0151
R	12	90-9403-1478	. FITTING, AFT ENTRY DOOR ROLLER LATCH.	5299
		ATTACHING PARTS		
	13	AN4-6A	. BOLT.	1
	14	NAS517-4-4	. SCREW	1
	15	NAS517-4-5	. SCREW	1
		-----*		
	17	AN931-4-7	. GROMMET	1
	18	90-9407-5	. PLATE, AFT ENTRY DOOR SERRATED.	1
	18A	50-9702-32	. FILLER, BODY STATION 1375.2 AFT ENTRY DOOR.	1
R	19	90-9404	. FITTING, AFT ENTRY DOOR ROLLER LATCH.	0151
R	19	90-9404-2	. FITTING, AFT ENTRY DOOR ROLLER LATCH.	5299
		ATTACHING PARTS		
	20	AN4-7A	. BOLT.	1
	21	NAS517-4-6	. SCREW	1
	22	NAS517-4-5	. SCREW	1
		-----*		
	25	90-9407-4	. PLATE, AFT ENTRY DOOR SERRATED.	1
	26	50-9702-22	. FILLER, BODY STATION 1375.2 AFT ENTRY DOOR.	1
	27	65-1981	. GUIDE ASSY, DOOR CENTERING.	1
		ATTACHING PARTS		
	28	NAS334PA6	. BOLT.	2
	29	NAS334PA5	. BOLT.	2
	30	NAS1104-3W	. BOLT.	2
	31	BACN108Y54W	. NUT	6
		-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

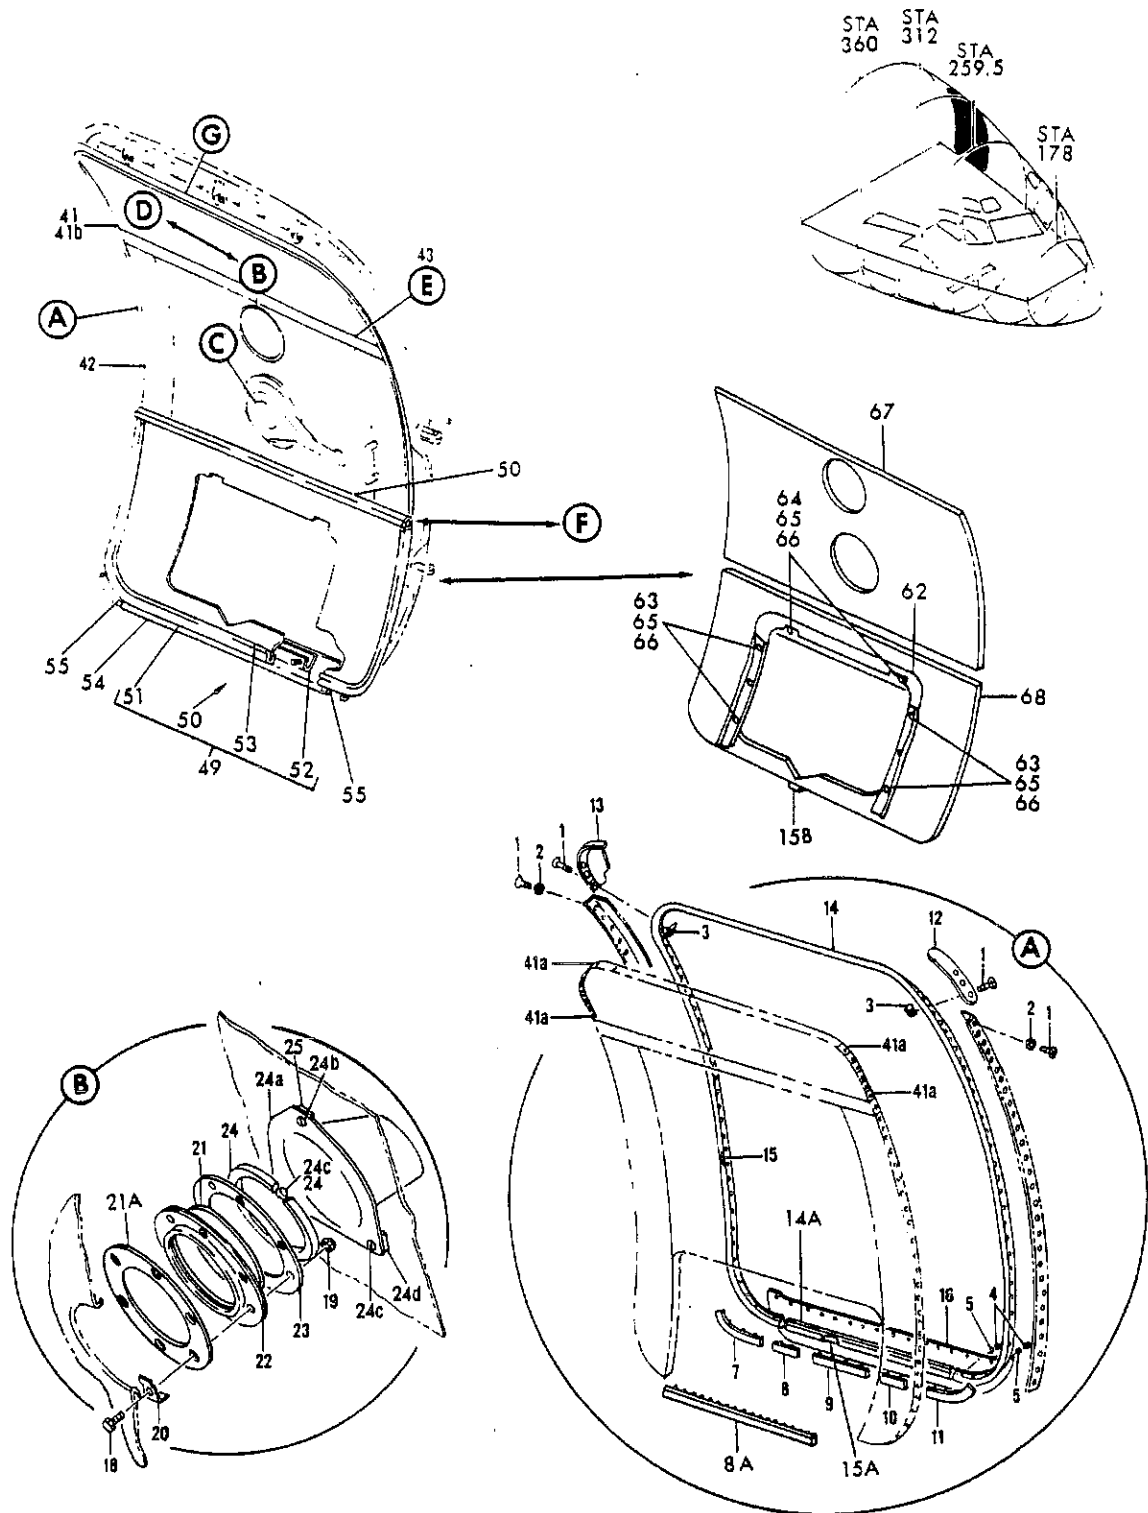


FIGURE 18. LINING INSTL, FORWARD ENTRY DOOR (SHEET 1)

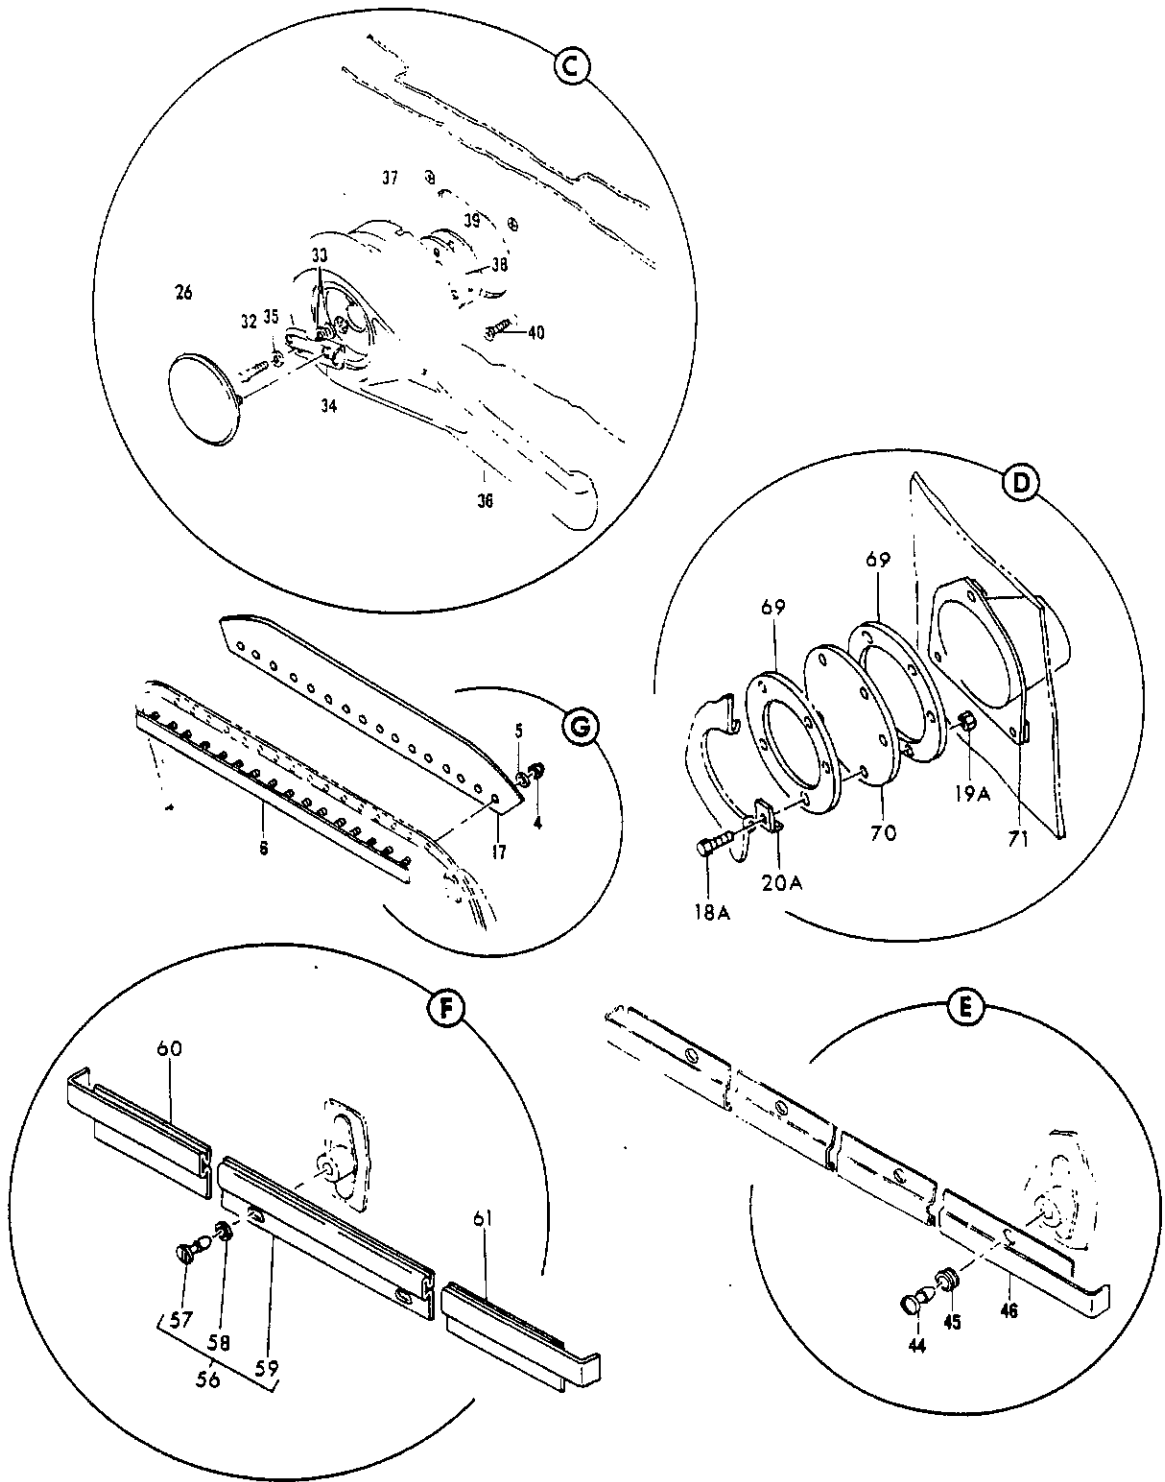


FIGURE 18. LINING INSTL, FORWARD ENTRY DOOR (SHEET 2)

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	18	65-1348-41R	LINING INSTL, FORWARD ENTRY DOOR (SEE 25-10, FIG. 36W, ITEM 9)							0150	RF
R	1	NAS514P832-7	. SCREW							0150	68
R	2	BACW10UD8	. WASHER.							0150	62
R	3	BACN10FX82	. NUT							0150	6
R	4	NAS679A3W	. NUT							0150	35
R	5	AN960C416L	. WASHER.							0150	35
R	6	65-21860-26	. STRIP ASSY, RETAINER (OPTIONAL 65-1348-3)							0150	1
R	7	65-21860-53	. STRIP ASSY, RETAINER.							0150	1
R	8	65-21860-51	. STRIP ASSY, RETAINER.							0150	1
R	9	65-21860-49	. STRIP ASSY, RETAINER.							0150	1
R	10	65-21860-47	. STRIP ASSY, RETAINER.							0150	1
R	11	65-21860-45	. STRIP ASSY, RETAINER.							0150	1
R	12	66-35017-1	. COVER, FORWARD AND AFT ENTRY DOOR CORNER.							0150	1
R	13	66-35017-2	. COVER, FORWARD AND AFT ENTRY DOOR CORNER.							0150	1
R	14	65-1348-42M	. WELTING, PLASTIC (EXTRUSION NO. 8AC1522-116-734 X 200 IN. LG)							0150	1
R	15	65-1348-43	. FILLER, FORWARD ENTRY DOOR LINING WELTING							0150	1
R	16	69-5199-4D	. SEAL, LOWER PANEL							0150	1
R	17	69-5199-3D	. SEAL, UPPER PANEL							0150	1
R	18	AN3-6A	. BOLT.							0150	6
R	19	NAS679A3W	. NUT							0150	6
R	20	63-2601	. CLIP, ENTRY AND GALLEY DOOR WINDOW. (OPTIONAL AND FOR REPLACEMENT ORDER 69-56988-1)							0150	6
R	20	69-56988-1	. RETAINER ASSY, LINING (OPTIONAL TO AND REPLACEMENT FOR 63-2601)							0150	6
R	21	66-33036-2B	. WINDOW, AFT GALLEY DOOR							0150	1
R	21A	66-17991-1	. SHIM, FORWARD ENTRY DOOR WINDOW							0150	1
R	22	66-33033-1J	. SUPPORT, AFT GALLEY							0150	1
R	23	66-33034-1A	. RETAINER, AFT GALLEY DOOR WINDOW.							0150	1
R	24	66-33035-2A	. SPACER, AFT GALLEY DOOR WINDOW FOAM							0150	1
R	24A	69-24404-1A	. REVEAL, FORWARD ENTRY DOOR WINDOW ATTACHING PARTS							0150	1
R	24B	NAS603-15	. SCREW							0150	1
R	24C	NAS603-18	. SCREW							0150	2
R	24D	NAS430D3-39	. SPACER.							0150	2
R	25	NAS430D3-26	. SPACER.							0150	1

R	26	69-10070-1B	. INSERT ASSY, INTERIOR HANDLE (SEE 52-2, FIG. 21). . . (OPTIONAL 69-10070-17A)							0150	1
R	26	69-10070-17A	. INSERT ASSY, INTERIOR HANDLE (SEE 52-2, FIG. 21). . . (OPTIONAL TO 69-10070-1B)							0150	1
R	32	MS20005H8	. BOLT.							0150	3
R	33	AN960-516	. WASHER.							0150	6
R	34	63-8947-15	. BRACKET ASSY, INSERT SUPPORT.							0150	1
R	35	MS20002C5	. WASHER.							0150	3
R	36	50-10831-2	. HANDLE, INTERIOR ENTRY DOOR							0150	1
R	37	69-13363-4	. INSERT, INTERIOR HANDLE FOAM.							0150	1
R	38	66-3740-4	. SHIM, INTERIOR HANDLE DOOR.							0150	1
R	39	66-3740-5	. SHIM, INTERIOR HANDLE DOOR.							0150	AR
R	40	NAS514P1032-5	. SCREW							0150	4
R	41	65-6414-19D	. PANEL ASSY, UPPER							0150	1
R	41A	BACN10FX82	. NUT							0150	14
R	41B	65-6414-20D	. . PANEL, (ALTERED FROM BAC SPEC NO. 10-60128-22). . .							0150	1
R	42	65-24758-1E	. PANEL ASSY, FORWARD ENTRY DOOR LOWER.							0150	1
R	42	65-24758-2S	. . PANEL, (ALTERED FROM BAC SPEC NO. 10-60128-22). . .							0150	1
R	43	69-5126-1D	. STRIP ASSY, UPPER							0150	1
R	44	2-0-180	. . STUD, (V24248).							0150	4
R	45	BACR12AG2C	. . RING.							0150	4
R	46	69-5126-3D	. . STRIP, (ALTERED FROM BAC SPEC NO. 10-60128-22). . .							0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

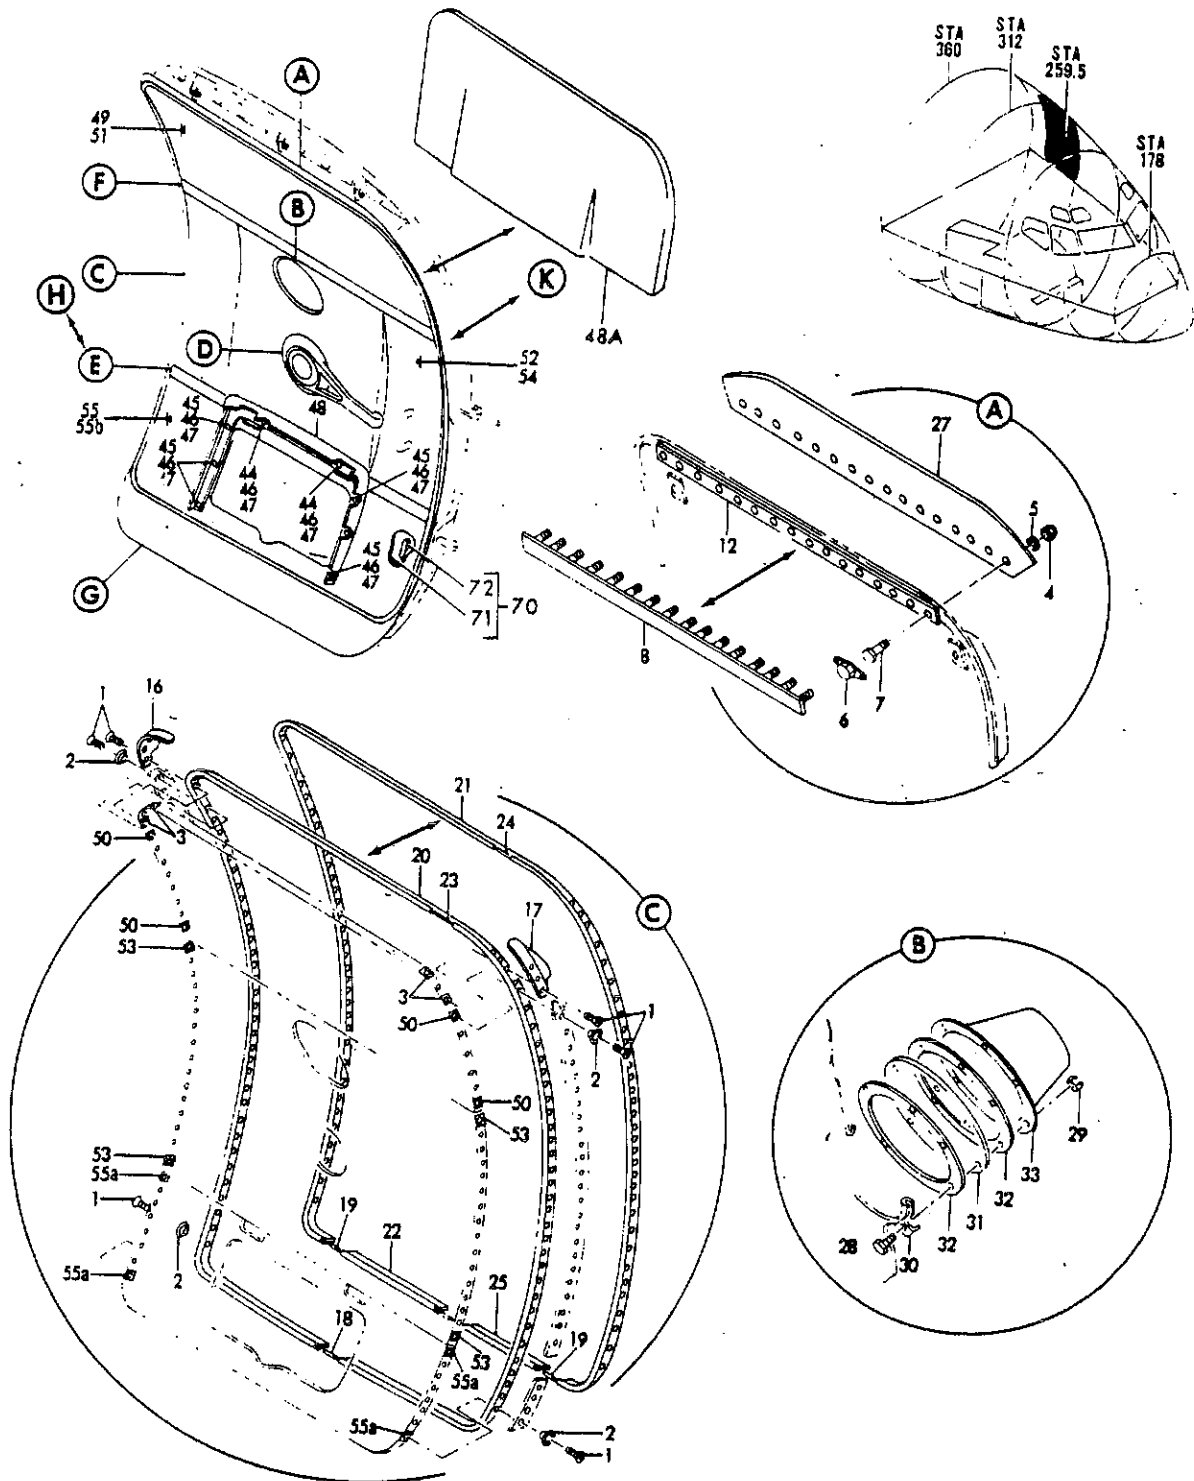


FIGURE 18A. LINING INSTL, FORWARD ENTRY DOOR (SHEET 1)

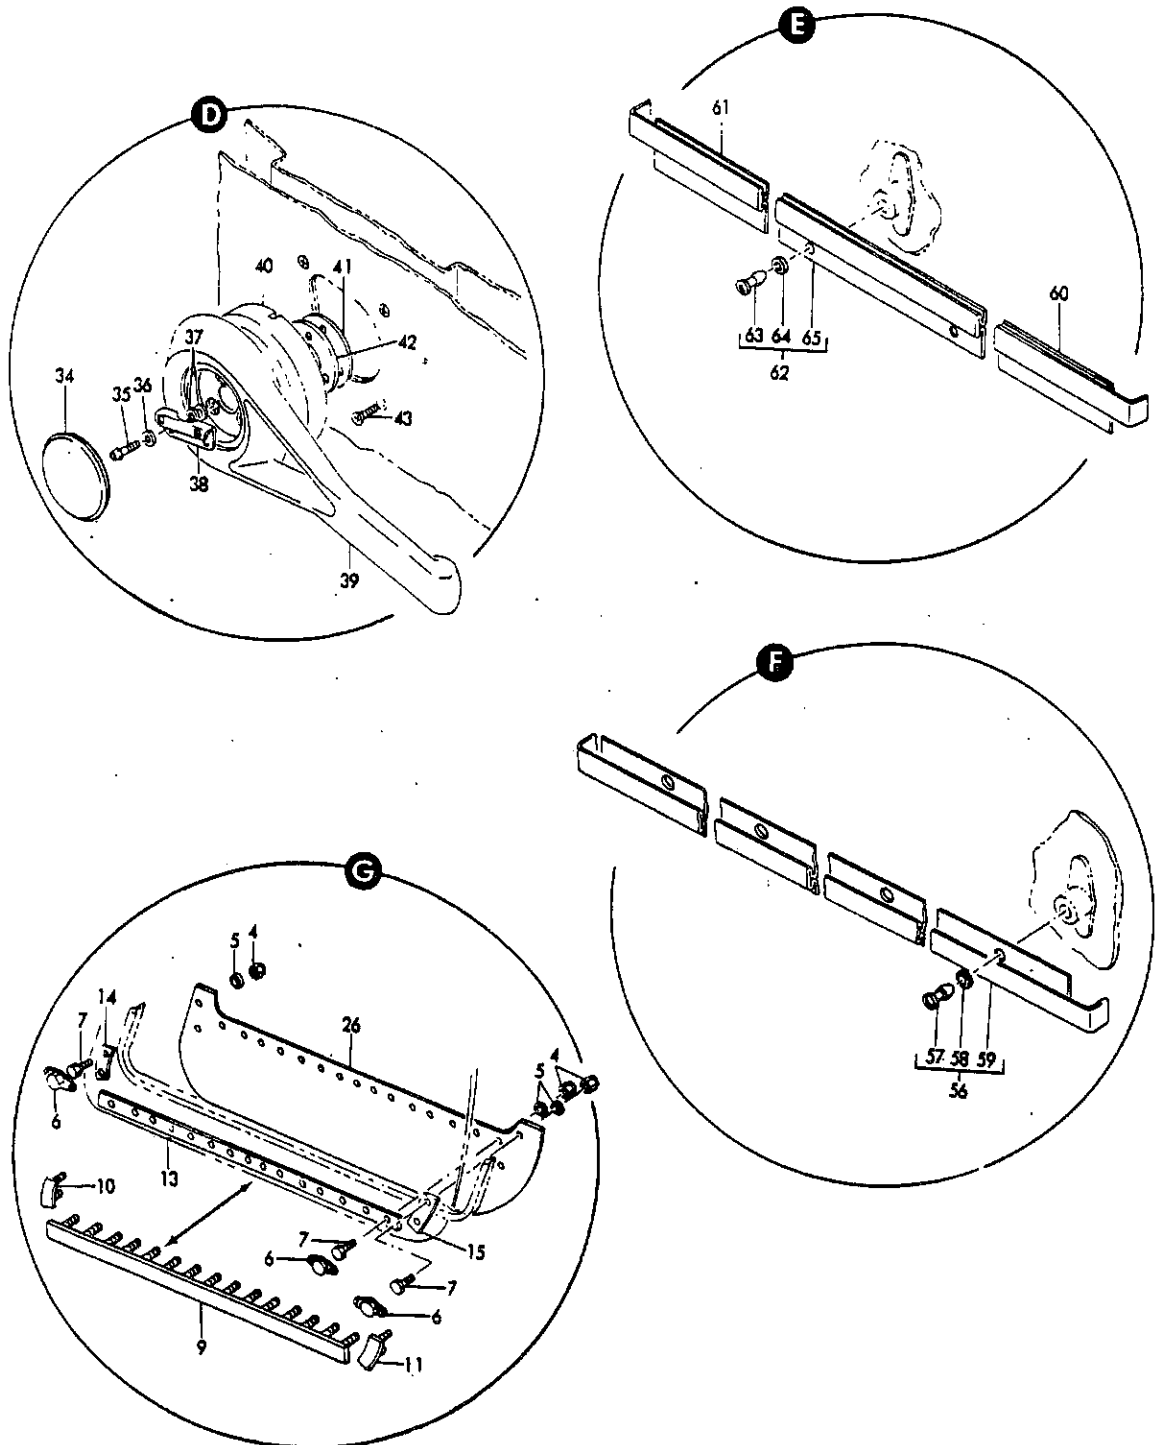


FIGURE 18A. LINING INSTL, FORWARD ENTRY DOOR (SHEET 2)

NOV 21/90

52-01-18A

DETAILED PARTS LIST
52-01-18A
PAGE 1

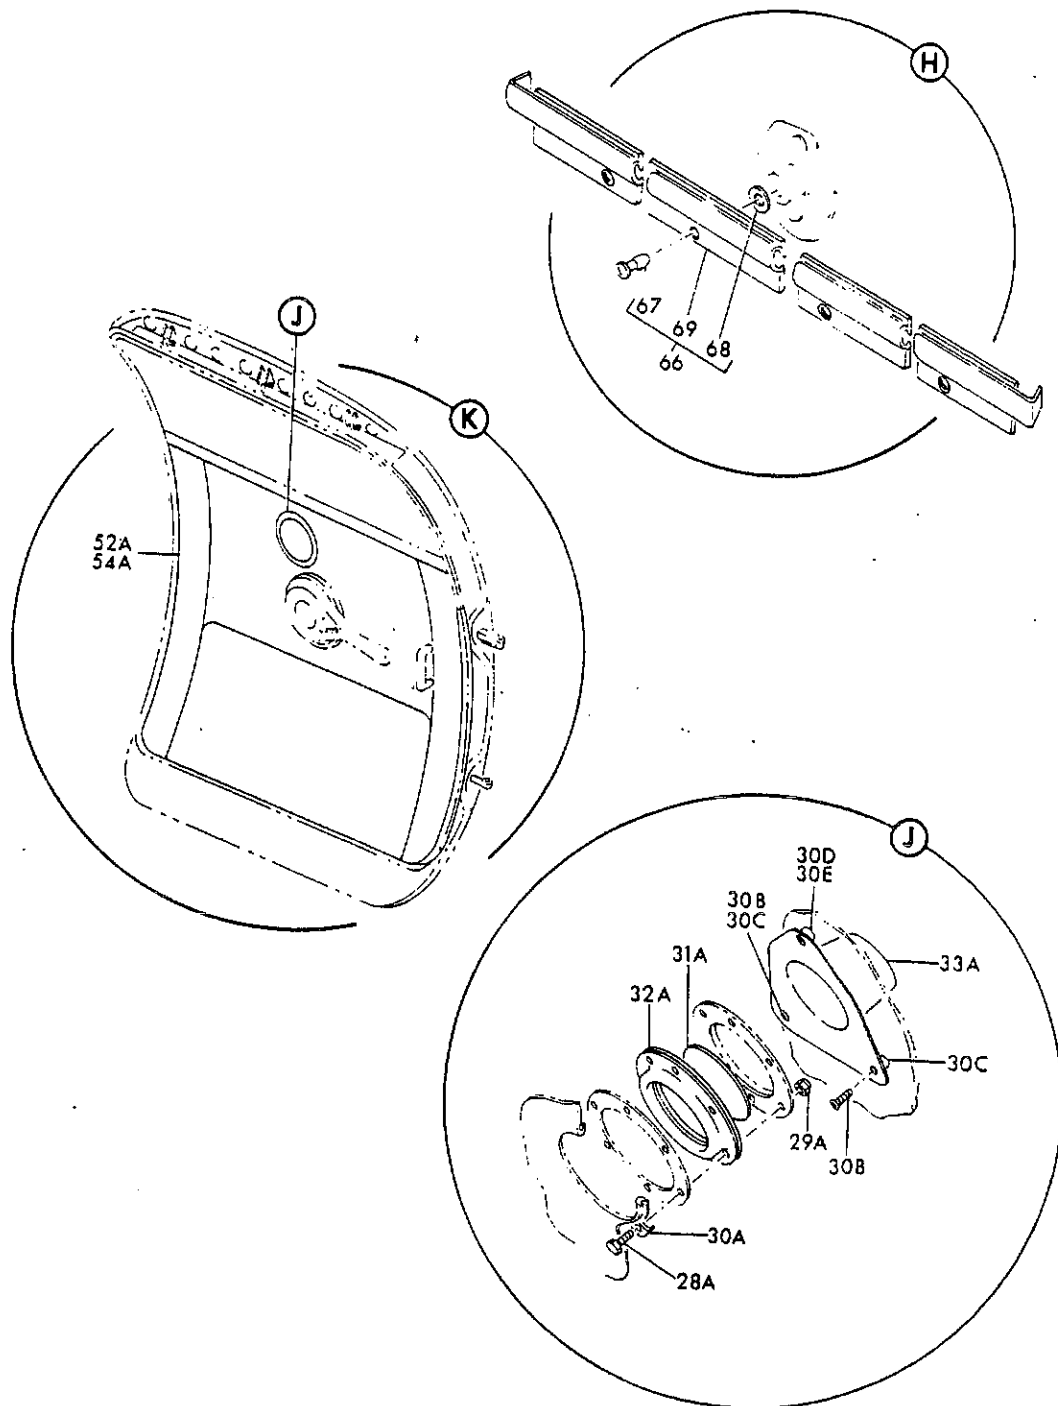


FIGURE 18A. LINING INSTL, FORWARD ENTRY DOOR (SHEET 3)


BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R R	18A 65-1348-44F	LINING INSTL, FORWARD ENTRY DOOR (SEE 25-10, FIG. 18A, ITEM 9, 25-10, FIG. 36W, ITEM 9 AND 25-10, FIG. 36Y, ITEM 9)	0150	RF
	65-1348-51	LINING INSTL, FORWARD ENTRY DOOR (SEE 25-10, FIG. 31P, ITEM 9, 25-10, FIG. 33C, ITEM 13, 25-10, FIG. 33D, ITEM 13 AND 25-10, FIG. 35Y, ITEM 9)	5199	RF
1	NAS514P832-7	• SCREW		68
	2 BACN10UD8	• WASHER		62
3	BACN10FX82	• NUT		6
	4 NAS679A3W	• NUT		35
8	AN960C416L	• WASHER		35
	65-21860-26	• STRIP ASSY, RETAINER		1
9	65-21860-25	• STRIP ASSY, RETAINER		1
	10 65-21860-30	• STRIP ASSY, RETAINER		1
11	65-21860-32	• STRIP ASSY, RETAINER		1
	16 66-35017-1	• COVER, CORNER		1
17	66-35017-2	• COVER, CORNER		1
	18 NAS430D7-96	• SPACER		1
20	65-1348-35M	• WELTING, PLASTIC (EXTRUSION NO. BAC1522-116-734 X 230 IN. LG)	0150	1
	20 65-1348-35V	• WELTING, PLASTIC (EXTRUSION NO. BAC1522-116-7144 X 230 IN. LG)	5199	1
23	65-1348-36	• FILLER, WELTING		1
	26 69-5199-4D	• SEAL, LOWER PANEL	0150	1
26	69-5199-4U	• SEAL, LOWER PANEL	5199	1
	27 69-5199-3D	• SEAL, UPPER PANEL	0150	1
27	69-5199-3U	• SEAL, UPPER PANEL	5199	1
	28 AN3-5A	• BOLT		5
29	NAS679A3W	• NUT		5
	30 63-2601	• CLIP		5
30	69-56988-1	(OPTIONAL AND FOR REPLACEMENT ORDER 69-56988-1) • RETAINER ASSY, LINING		5
	31 69-4830-1A	(OPTIONAL TO AND REPLACEMENT FOR 63-2601) • WINDOW, AFT GALLEY DOOR		1
32	66-4466-1A	• GASKET, WINDOW		2
	33 65-6329-1B	• REVEAL, WINDOW	0150	1
33	65-6329-1E	• REVEAL, WINDOW	5199	1
	34 69-10070-1B	• INSERT ASSY, INTERIOR HANDLE (SEE 52-2, FIG. 21) (OPTIONAL 69-10070-17A)		1
34	69-10070-17A	• INSERT ASSY, INTERIOR HANDLE (SEE 52-2, FIG. 21) (OPTIONAL TO 69-10070-1B)		1
	35 MS20005H8	• BOLT		3
36	MS20002C5	• WASHER		3
	37 AN960-516	• WASHER		6
38	63-8947-19	• BRACKET ASSY, INSERT SUPPORT		1
	39 50-10831-2	• HANDLE, INTERIOR		1
40	69-13363-4	• INSERT, INTERIOR HANDLE FOAM		1
	41 66-3740-5	• SHIM, INTERIOR HANDLE		AR
42	66-3740-4	• SHIM, INTERIOR HANDLE		1
	43 NAS514P1032-5	• SCREW		4
44	NAS603-10P	• SCREW		2
	46 AN960PD10L	• WASHER		8
47	NAS679A3W	• NUT		8
	47 NAS1329A3-10K140	(OPTIONAL NAS1329A3-10K140) • NUT		8
48	65-52702-1F	(OPTIONAL TO NAS679A3W) • COLLAR, ESCAPE SLIDE	0150	1
	48 65-52702-1S	• COLLAR, ESCAPE SLIDE	5199	1
49	65-6414-19D	• PANEL ASSY, UPPER	0150	1
	49 65-6414-19AJ	• PANEL ASSY, UPPER	5199	1
50	BACN10FX82	• NUT		14
	51 65-6414-20D	• PANEL, (ALTERED FROM BAC SPEC NO. 10-60128-22)	0150	1
51	65-6414-20AJ	• PANEL, (ALTERED FROM BAC SPEC NO. 10-60128-410)	5199	1
	52 65-6414-16D	• PANEL ASSY, CENTER	0150	1
52	65-6414-16AC	• PANEL ASSY, CENTER	5199	1
	53 BACN10FX82	• NUT		32
54	65-6414-17D	• PANEL, (ALTERED FROM BAC SPEC NO. 10-60128-22)	0150	1
	54 65-6414-17AD	• PANEL, (ALTERED FROM BAC SPEC NO. 10-60128-419)	5199	1
55	65-6414-24E	• PANEL ASSY, LOWER	0150	1
	55 65-6414-24R	• PANEL ASSY, LOWER	5199	1
55A	BACN10FX82	• NUT		16
	55B 65-6414-25E	• PANEL, (ALTERED FROM BAC SPEC NO. 10-60128-22)	0150	1
55B	65-6414-25R	• PANEL, (ALTERED FROM BAC SPEC NO. 10-60128-410)	5199	1
	56 69-5126-1D	• STRIP ASSY, UPPER TRIM	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING **707** *Intercontinental*
PARTS CATALOG

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	18A	56	69-5126-1AF	.	STRIP ASSY, UPPER TRIM.	.	.	.	.	5199	1
		57	2-0-180	.	STUD, (V24248).	.	.	.	.		4
		58	8ACR12AG2C	.	RING.	.	.	.	.		4
R		59	69-5126-3D	.	STRIP, (ALTERED FROM BAC SPEC NO. 10-60128-22).	.	.	.	.	0150	1
R		59	69-5126-3AF	.	STRIP, (ALTERED FROM BAC SPEC NO.; 10-60128-410).	.	.	.	.	5199	1
R		60	69-40440-4E	.	TRIM ASSY.	.	.	.	.	0150	1
R		60	69-40440-4U	.	TRIM ASSY.	.	.	.	.	5199	1
R		60	69-40440-6E	.	TRIM, (ALTERED FROM BAC SPEC NO. 10-60128-22).	.	.	.	.	0150	1
R		60	69-40440-6U	.	TRIM, (ALTERED FROM BAC SPEC NO.; 10-60128-410).	.	.	.	.	5199	1
R		61	69-40440-3E	.	TRIM ASSY.	.	.	.	.	0150	1
R		61	69-40440-3T	.	TRIM ASSY.	.	.	.	.	5199	1
R		61	69-40440-5E	.	TRIM, (ALTERED FROM BAC SPEC NO. 10-60128-22).	.	.	.	.	0150	1
R		61	69-40440-5T	.	TRIM, (ALTERED FROM BAC SPEC NO.; 10-60128-410).	.	.	.	.	5199	1
R		62	69-40440-1E	.	TRIM ASSY.	.	.	.	.	0150	1
R		62	69-40440-1T	.	TRIM ASSY.	.	.	.	.	5199	1
		63	8ACS21AP160R	.	STUD.	.	.	.	.		2
		64	8ACR12AG	.	RING.	.	.	.	.		2
R		65	69-40440-2E	.	TRIM, (ALTERED FROM BAC SPEC NO. 10-60128-22).	.	.	.	.	0150	1
R		65	69-40440-2T	.	TRIM, (ALTERED FROM BAC SPEC NO.; 10-60128-410).	.	.	.	.	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											



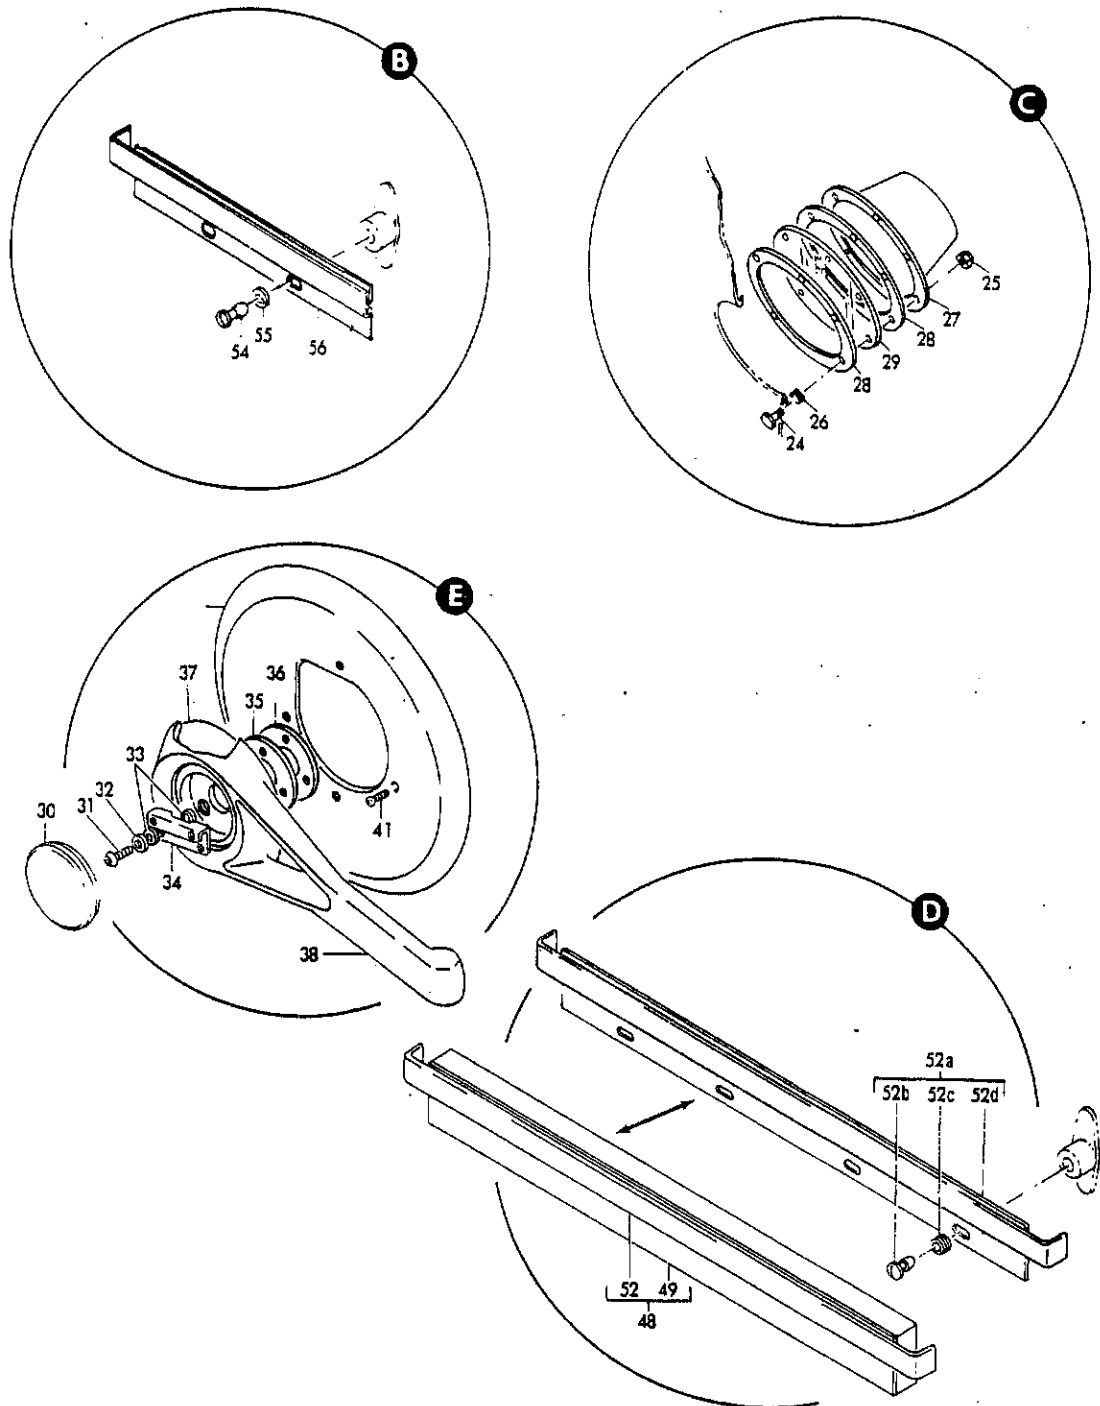


FIGURE 20A. LINING INSTL, AFT ENTRY DOOR (SHEET 2)

NOV 21/90

52-01-20A

DETAILED PARTS LIST
52-01-20A
PAGE 1

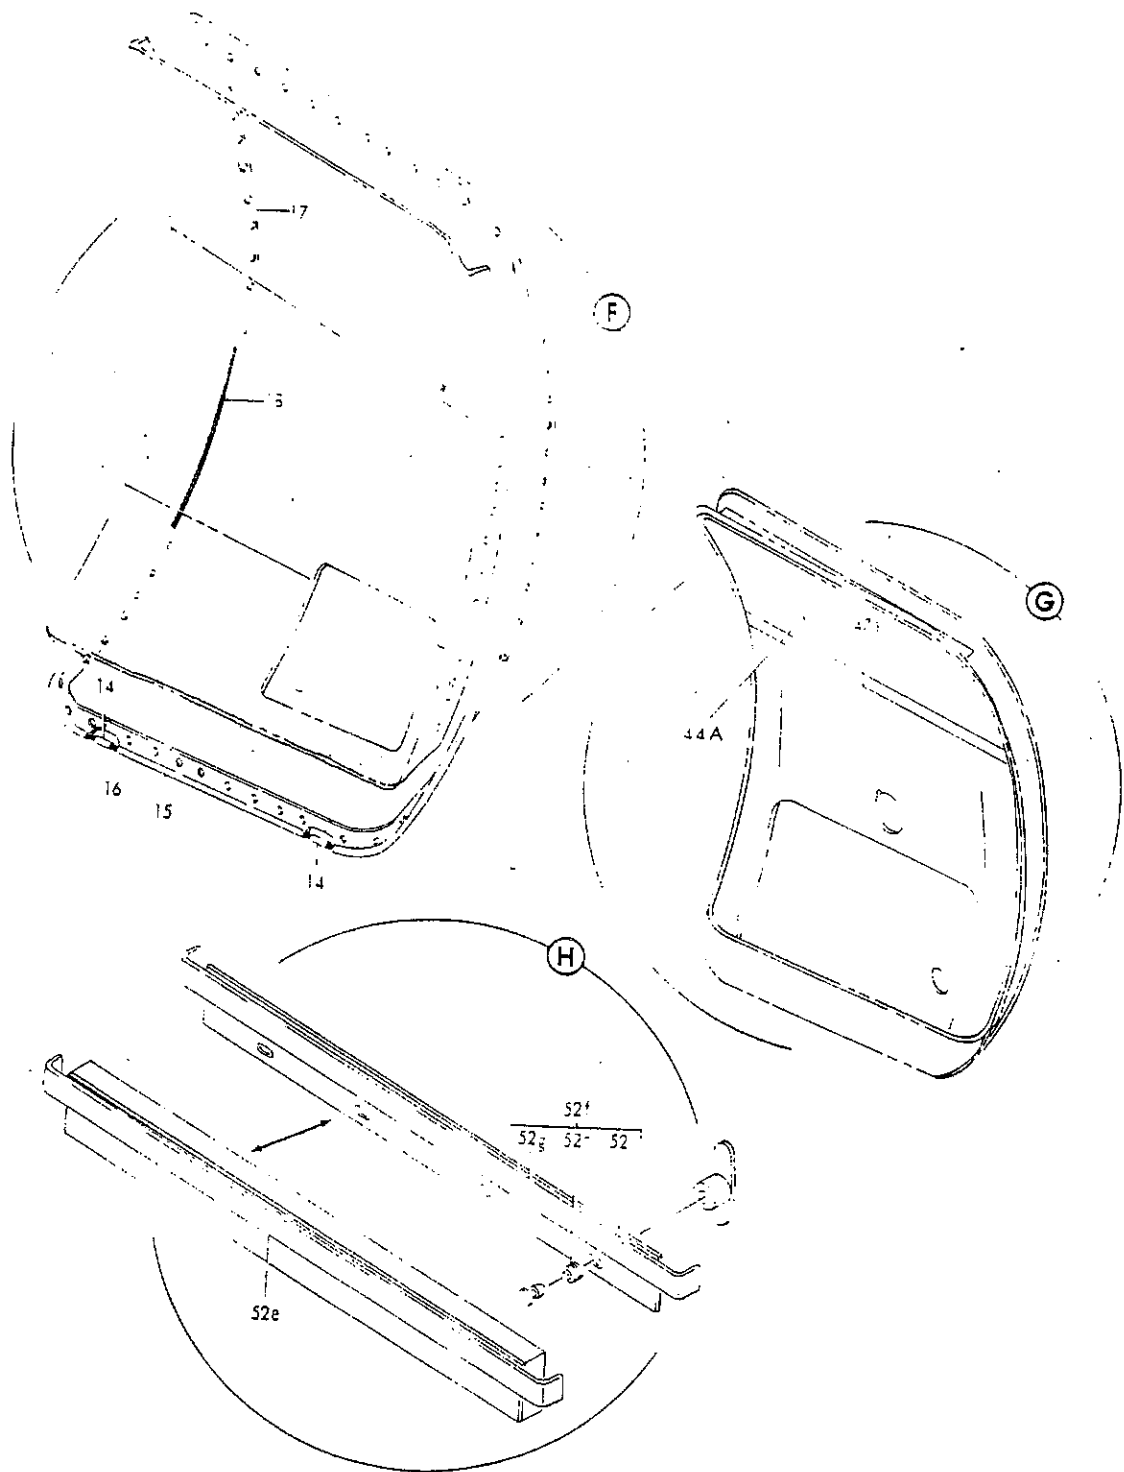


FIGURE 20A. LINING INSTL, AFT ENTRY DOOR (SHEET 3)

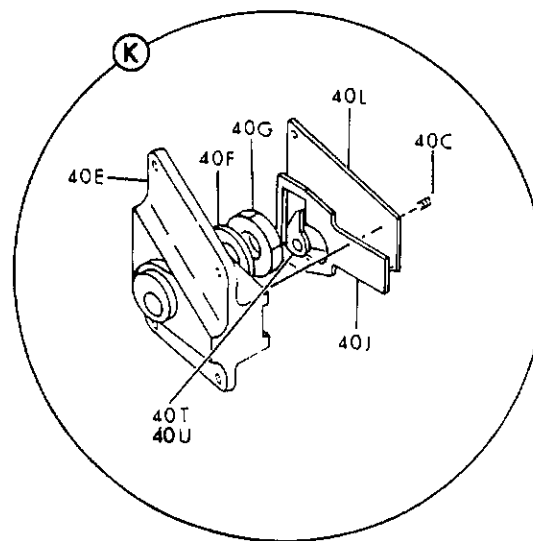
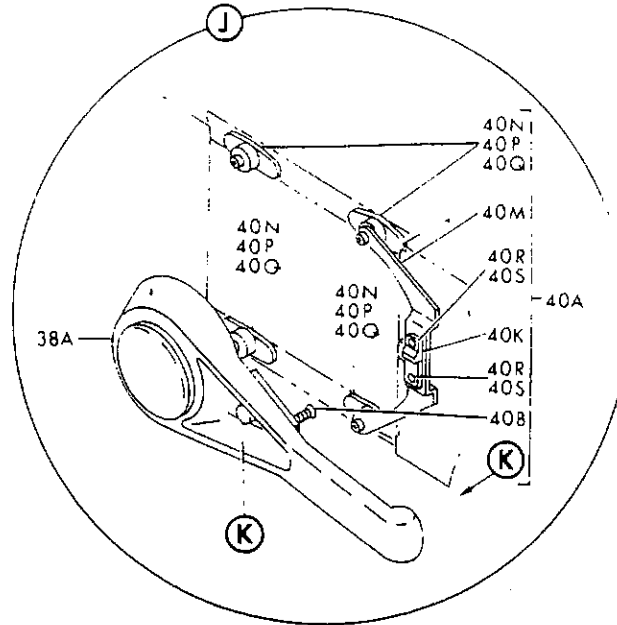


FIGURE 20A. LINING INSTL, AFT ENTRY DOOR (SHEET 4)

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R	20A 65-1349-26G	LINING INSTL, AFT ENTRY DOOR (SEE 25-10, FIG. 36W, ITEM 10 AND 25-10, FIG. 36Y, ITEM 11)	0150	RF
	65-1349-30	LINING INSTL, AFT ENTRY DOOR (SEE 25-10, FIG. 31P, ITEM 10, 25-10, FIG. 33C, ITEM 14, 25-10, FIG. 33D, ITEM 14 AND 25-10, FIG. 35Y, ITEM 10)	5199	RF
1	65-1349-6	. STRIP ASSY, BOLT RETAINER		1
	65-1349-11	. STRIP ASSY, BOLT RETAINER		1
2	BACR10G31	. RETAINER.		11
		ATTACHING PARTS		
3	MS20426D3	. RIVET		22

4	AN3-6A	. BOLT.		22
	65-1349-8	. STRIP, (USED ON 65-1349-6).		1
5	65-1349-10	. STRIP, (USED ON 65-1349-11).		1
	BACR10G31	. RETAINER.		4
6	AN3-6A	. BOLT.		4
	AN960C416L	. WASHER.		22
7	NAS679A3W	. NUT		26
	NAS514P832-7	. SCREW		40
8	BACW10UD8	. WASHER.		40
	NAS43UD7-96	. SPACER.		1
9	65-1349-20D	. WELTING, PLASTIC (EXTRUSION NO. BAC1522-116-734 X)	0150	1
		225 IN. LG)		
10	65-1349-20V	. WELTING, PLASTIC (EXTRUSION NO.; BAC1522-116-7144 X)	5199	1
		225 IN. LG)		
11	65-1349-21	. FILLER, WELTING		1
	69-5448-3D	. SEAL, UPPER	0150	1
12	69-5448-3S	. SEAL, UPPER	5199	1
	69-5448-4D	. SEAL, LOWER	0150	1
13	69-5448-4S	. SEAL, LOWER	5199	1
	AN3-5A	. BOLT.		5
14	NAS679A3W	. NUT		5
	63-2601	. CLIP, WINDOW.		5
15		(OPTIONAL TO 69-56988-1)		
	69-56988-1	. RETAINER ASSY, LINING		5
16		(OPTIONAL 63-2601)		
	65-6633-1B	. REVEAL, WINDOW.	0150	1
17	65-6633-1E	. REVEAL, WINDOW.	5199	1
	66-4892-1A	. GASKET, WINDOW (ALTERED FROM BAC SPEC NO.)		2
18		10-60128-16)		
	66-4891-1A	. WINDOW.		1
19	69-10070-1B	. INSERT ASSY, INTERIOR HANDLE (SEE 52-2, FIG. 21).		1
		(OPTIONAL 69-10070-17A)		
20	69-10070-17A	. INSERT ASSY, INTERIOR HANDLE (SEE 52-2, FIG. 21).		1
		(OPTIONAL TO 69-10070-1B)		
21	MS20005H8	. BOLT.		3
	MS20002C5	. WASHER.		3
22	AN960-516	. WASHER.		6
	63-8947-15	. BRACKET ASSY, INSERT SUPPORT.		1
23	66-3740-4	. SHIM, INTERIOR DOOR HANDLE.		AR
	66-3740-5	. SHIM, INTERIOR DOOR HANDLE.		AR
24	69-13363-4	. INSERT, INTERIOR HANDLE FOAM.		1
	50-10831-2	. HANDLE, INTERIOR.		1
25	69-10867-1D	. COVER ASSY, PANEL ACCESS HOLE	0150	1
	69-10867-1AE	. COVER ASSY, PANEL ACCESS HOLE	5199	1
26	69-10867-4D	. COVER ASSY, PANEL ACCESS HOLE	0150	1
	69-10867-4AE	. COVER ASSY.	5199	1
27	69-10867-6D	. COVER, (ALTERED FROM BAC SPEC NO. 10-60128-22).	0150	1
	69-10867-6AE	. COVER, (ALTERED FROM BAC SPEC NO.; 10-60128-410).	5199	1
28	NAS514P1032-5	. SCREW		4
	NAS603-7P	. SCREW		9
29	AN960PD10L	. WASHER.		9
	NAS679A3W	. NUT		9
30		(OPTIONAL NAS1329A3-10K140)		
	NAS1329A3-10K140	. NUT		9
31		(OPTIONAL TO NAS679A3W)		
	65-6476-28D	. PANEL ASSY, UPPER	0150	1
32	65-6476-28AJ	. PANEL ASSY, UPPER	5199	1
	65-6476-29D	. PANEL, (ALTERED FROM BAC SPEC NO. 10-60128-22).	0150	1
33	65-6476-29AJ	. PANEL, (ALTERED FROM BAC SPEC NO.; 10-60128-410).	5199	1
	65-6476-38F	. PANEL ASSY, CENTER.	0150	1
34	65-6476-38U	. PANEL ASSY, CENTER.	5199	1
	65-6476-39F	. PANEL, (ALTERED FROM BAC SPEC NO. 10-60128-22).	0150	1
	65-6476-39U	. PANEL, (ALTERED FROM BAC SPEC NO.; 10-60128-410).	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 20A 47	65-6476-36F	. PANEL ASSY, LOWER	0150	1
R 47	65-6476-36U	. PANEL ASSY, LOWER	5199	1
R 47	65-6476-37F	. . PANEL, (ALTERED FROM BAC SPEC NO. 10-60128-22)	0150	1
R 47	65-6476-37U	. . PANEL, (ALTERED FROM BAC SPEC NO.; 10-60128-410)	5199	1
R 48	69-5387-80	. STRIP ASSY, UPPER TRIM.	0150	1
R 48	69-5387-8AE	. STRIP ASSY, UPPER TRIM.	5199	1
R 49	69-5387-10	. . BLANKET, INSULATION		1
R 52	69-5387-9D	. . STRIP, (ALTERED FROM BAC SPEC NO. 10-60128-22)	0150	1
R 52	69-5387-9AE	. . STRIP, (ALTERED FROM BAC NO.; 10-60128-410)	5199	1
R 53	69-40441-1F	. TRIM ASSY	0150	1
R 53	69-40441-1V	. TRIM ASSY	5199	1
R 54	BACS2LAP160R	. . STUD.		2
R 55	BACR12AG	. . RING.		2
R 56	69-40441-2F	. . TRIM, (ALTERED FROM BAC SPEC NO. 10-60128-22)	0150	1
R 56	69-40441-2V	. . TRIM, (ALTERED FROM BAC SPEC NO.; 10-60128-410)	5199	1
R 57	69-40441-3F	. TRIM ASSY	0150	1
R 57	69-40441-3U	. TRIM ASSY	5199	1
R 57	69-40441-4F	. . TRIM, (ALTERED FROM BAC SPEC NO. 10-60128-22)	0150	1
R 57	69-40441-4U	. . TRIM, (ALTERED FROM BAC SPEC NO.; 10-60128-410)	5199	1
R 58	65-52703-1G	. COLLAR, ESCAPE SLIDE.	0150	1
R 58	65-52703-1T	. COLLAR, ESCAPE SLIDE.	5199	1
R 59	66-35017-3	. COVER, LOWER AFT CORNER		1
R 60	66-35017-4	. COVER, LOWER FORWARD CORNER		1
R 61	66-35017-5	. COVER, UPPER FORWARD CORNER		1
R 62	66-35017-6	. COVER, UPPER AFT CORNER		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
21	65-52080	PLATE INSTL, FORWARD ENTRY DOOR REMOVABLE SCUFF (SEE . 53-1, FIG. 1, ITEM 40 AND 53-2, FIG. 1, ITEM 18A)	5199	RF
10	NAS517-3-7	. SCREW	5199	1
11	NAS517-3-5	. SCREW	5199	AR
12	65-52080-1	. PLATE, LOWER.	5199	1
13	65-52080-2	. PLATE, UPPER.	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

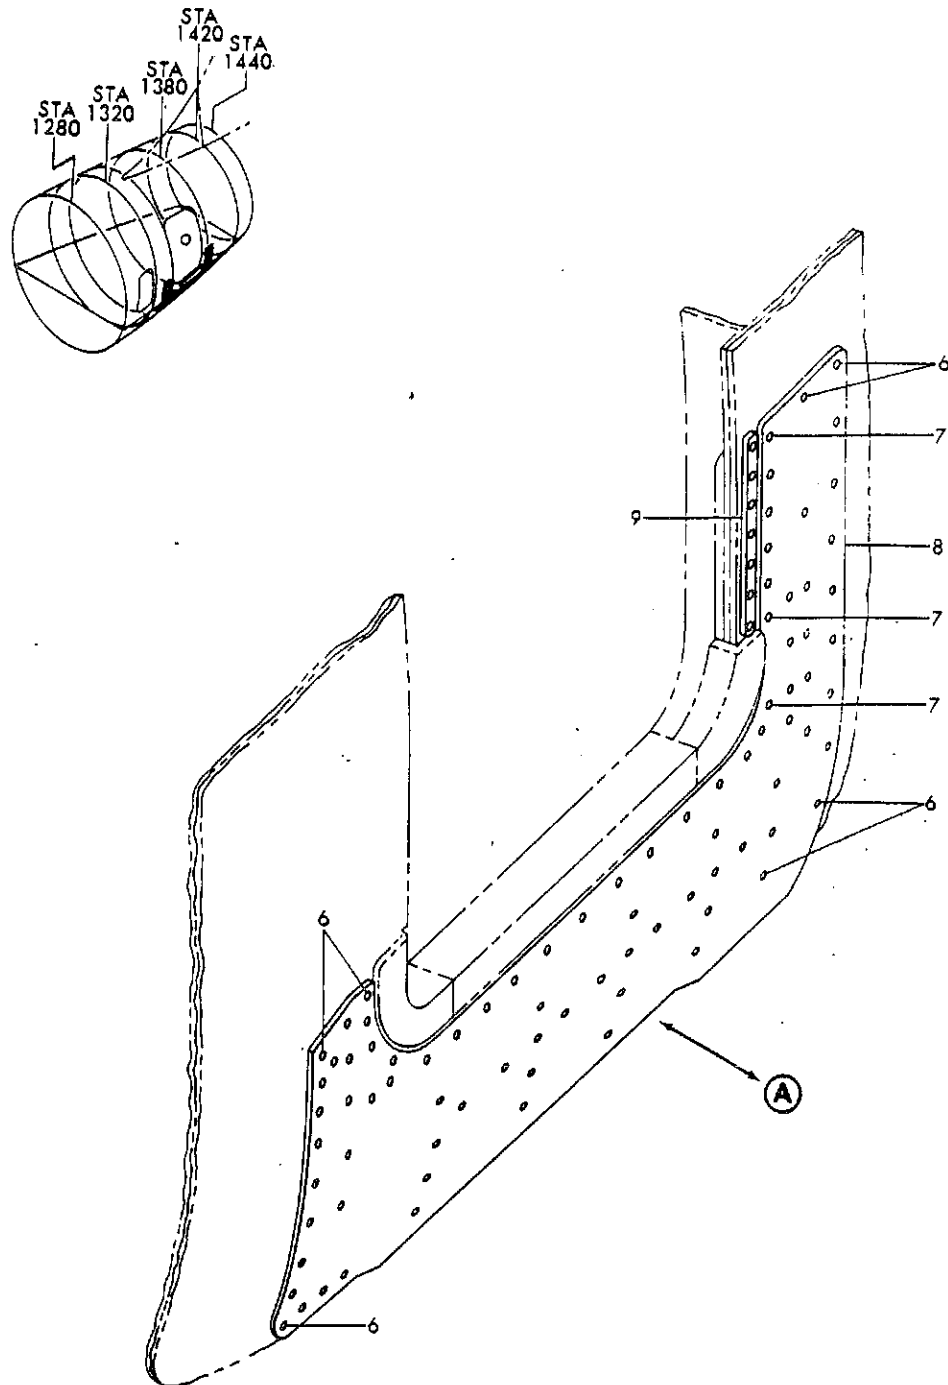


FIGURE 22. PLATE INSTL, AFT ENTRY DOOR REMOVABLE SCUFF (SHEET 1)

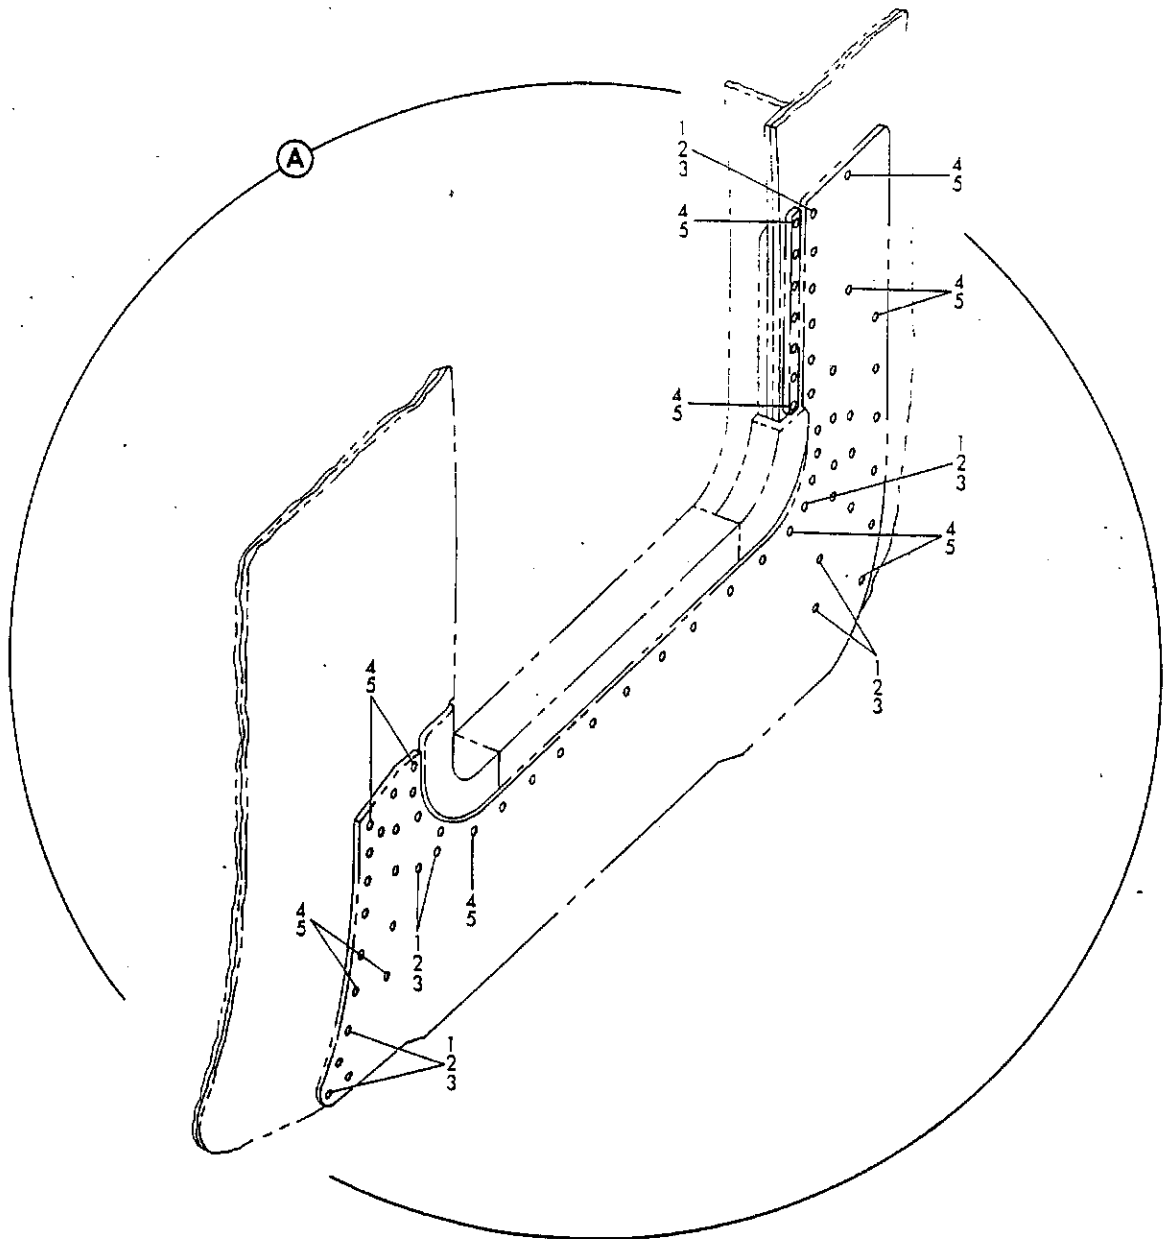


FIGURE 22. PLATE INSTL, AFT ENTRY DOOR REMOVABLE SCUFF (SHEET 2)

NOV 21/90

52-01-22

DETAILED PARTS LIST
52-01-22
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
22	65-52081	PLATE INSTL, AFT ENTRY DOOR REMOVABLE SCUFF (SEE 53-2, FIG. 3, ITEM 56)							5199	RF
6	NAS517-3-5	.	SCREW	.	.	.	.	.	5199	AR
7	NAS517-3-8	.	SCREW	.	.	.	.	.	5199	7
8	65-52081-1	.	PLATE, LOWER.	.	.	.	.	.	5199	1
9	65-52081-2	.	PLATE, UPPER.	.	.	.	.	.	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

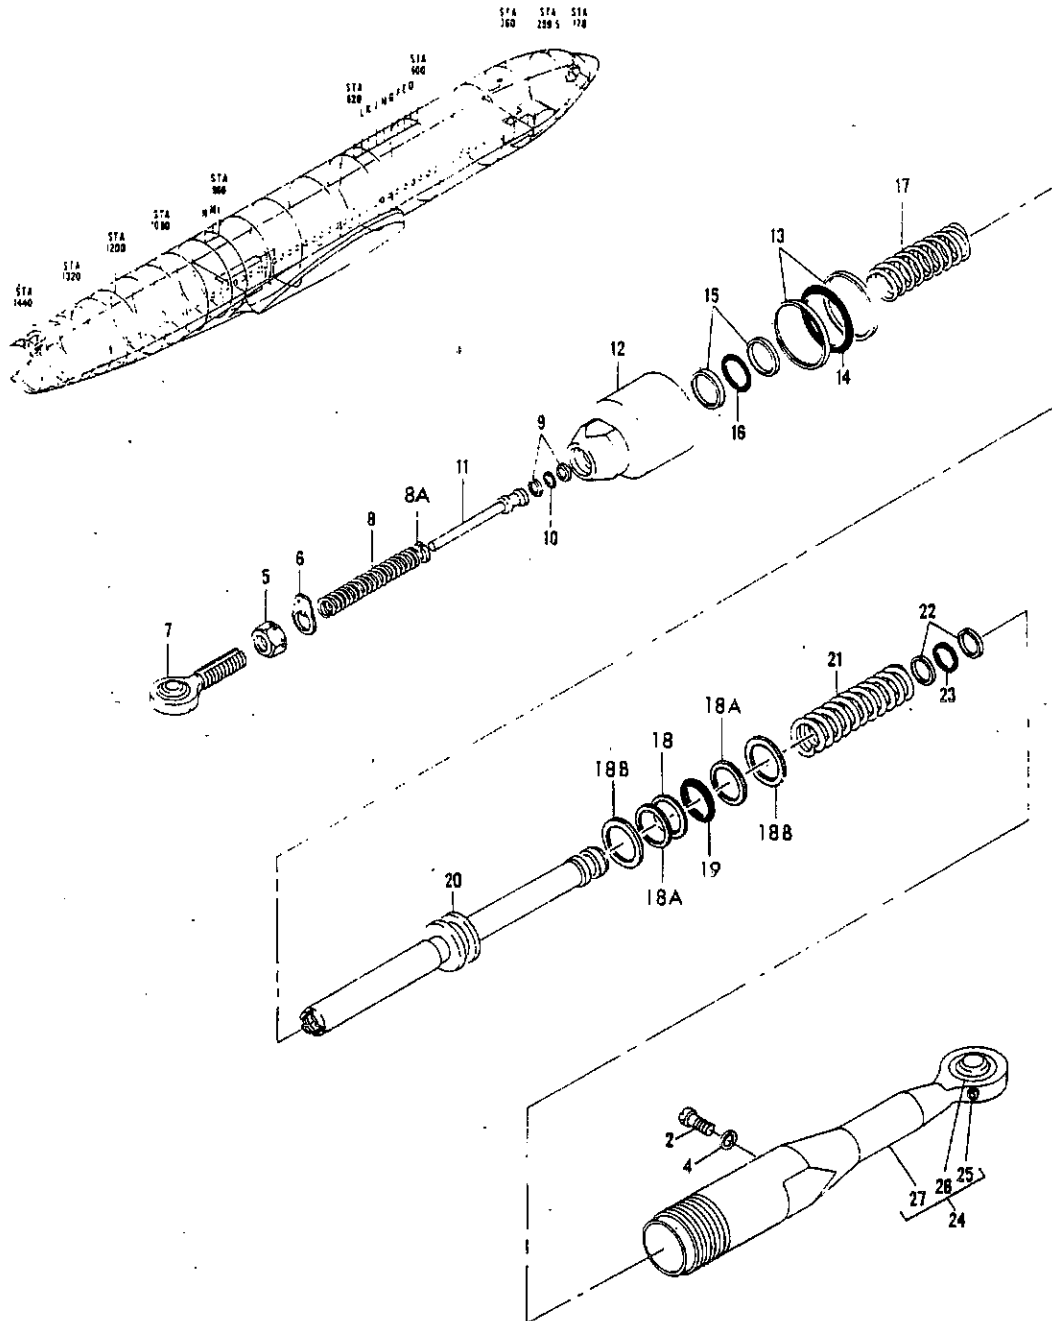


FIGURE 23. SNUBBER ASSY, ENTRY DOOR (DOORS ONLY)

DETAILED PARTS LIST
52-01-23
PAGE 0

52-01-23

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
23	90-10072-1		SNUBBER ASSY, ENTRY DOOR (DOORS ONLY) (SEE FIG. 1, ITEM 50 AND FIG. 5, ITEM 5) (OPTIONAL 90-10072)	0101	RF
	90-10072		SNUBBER ASSY, ENTRY DOOR (DOORS ONLY) (SEE FIG. 1, ITEM 50 AND FIG. 5, ITEM 5) (OPTIONAL TO 90-10072-1)	0101	RF
	90-10072-2		SNUBBER ASSY, ENTRY DOOR (DOORS ONLY) (SEE FIG. 1, ITEM 50, FIG. 1A, ITEM 41 AND FIG. 5, ITEM 5)	0299	RF
2	AN501A10-4		. SCREW		1
4	BACS11S23AL		. SEAL (OPTIONALS BACS11UIS)	0101	1
4	BACS11UIS		. SEAL (OPTIONAL TO BACS11S23AL)	0101	1
4	NAS159B-3R		. SEAL	0299	1
5	NAS509-6		. NUT		1
6	NAS513-6		. WASHER		1
7	BACB10A421L		. BEARING		1
8	30-3141		. SPRING, COMPRESSION		1
9	MS28782-1		. RING		2
10	AN6227B1		. PACKING		1
11	63-1619		. PISTON, HYDRAULIC SNUBBER		1
12	60-7260		. CAP, HYDRAULIC SNUBBER		1
13	MS28782-21		. RING		2
14	AN6227B21		. PACKING		1
15	MS28782-10		. RING		2
16	AN6227B10		. PACKING		1
17	66-13260-1		. SPRING, SNUBBER COMPRESSION (OPTIONAL 30-3157)		1
17	30-3157		. SPRING, SNUBBER COMPRESSION (OPTIONAL TO 66-13260-1)		1
18	S12716-210		. SEAL, (V97820) (USED ON 90-10072-1 AND -2).		1
18B	MS28782-15		. RING		2
19	AN6227B15		. PACKING		1
20	60-7262		. PLUNGER, HYDRAULIC (USED ON 90-10072)	0101	1
20	60-7262-1		. PLUNGER, HYDRAULIC (USED ON 90-10072-1)	0101	1
20	69-49963-1		. PLUNGER, HYDRAULIC	0299	1
21	66-13261-1		. SPRING, SNUBBER COMPRESSION (OPTIONAL 30-3158)		1
21	30-3158		. SPRING, SNUBBER COMPRESSION (OPTIONAL TO 66-13261-1)		1
22	MS28782-7		. RING (OPTIONAL MS28774-012)		2
22	MS28774-012		. RING (OPTIONAL TO MS28782-7)		2
23	AN6227B7		. PACKING		1
24	60-7261		. CYLINDER ASSY, HYDRAULIC SNUBBER	0101	1
24	60-7261-2		. CYLINDER ASSY, HYDRAULIC	0299	1
25	NAS516-1		. FITTING		1
26	BACB10A358GCM2		. BEARING		1
27	60-7261-1		. CYLINDER, HYDRAULIC SNUBBER	0101	1
27	60-7261-3		. CYLINDER, HYDRAULIC	0299	1
			. FOR REFERENCE TO OTHER SNUBBER DETAILS, SEE NHA		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 02
GALLEY SERVICE DOORS

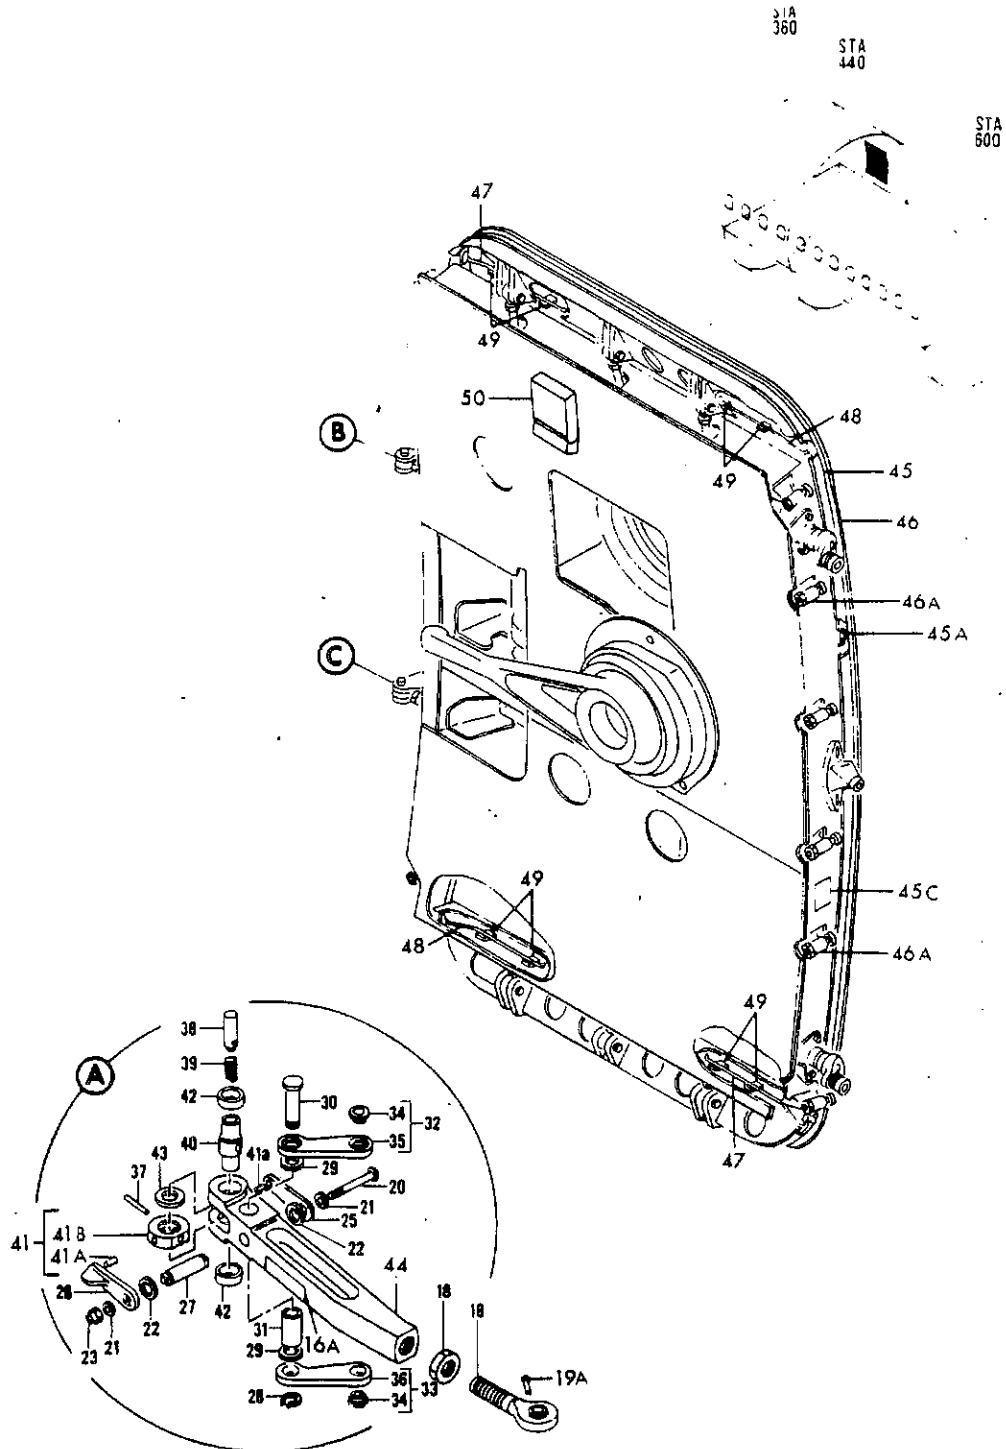


FIGURE 1. DOOR INSTL, FORWARD GALLEY (SHEET 1)

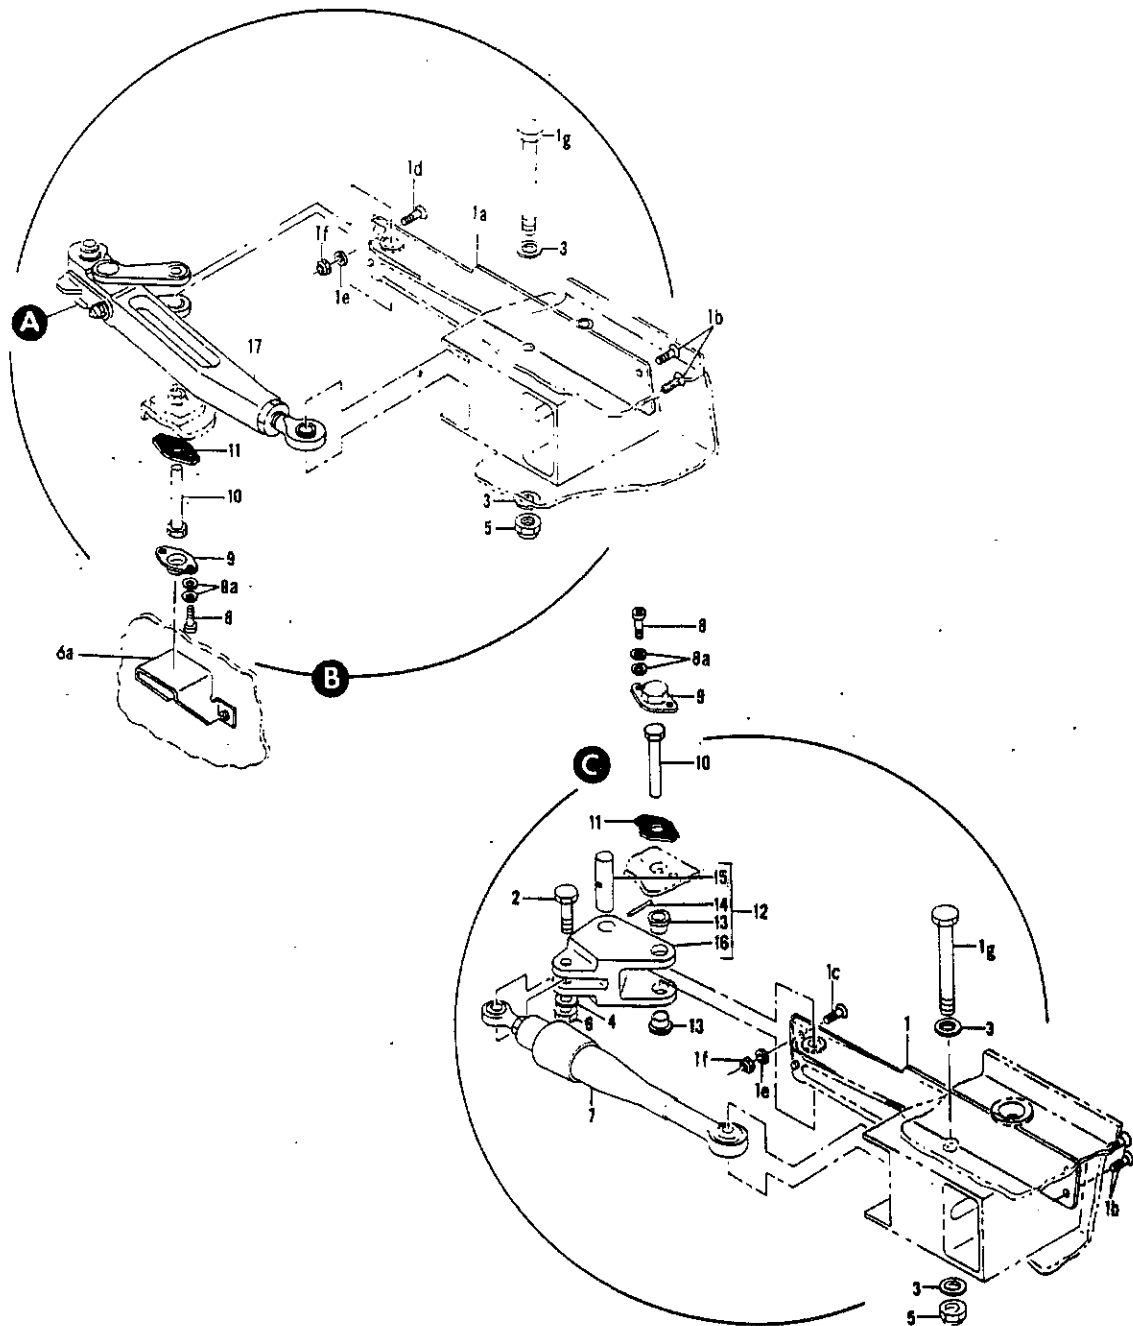


FIGURE 1. DOOR INSTL, FORWARD GALLEY (SHEET 2)

NOV 21/90

52-02-1

DETAILED PARTS LIST
52-02-1
PAGE 1

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1	50-7954-1	DOOR INSTL, FORWARD GALLEY (SEE 53-2, FIG. 2, ITEM 40)		RF
1	69-2593-3	. PLATE, FORWARD GALLEY DOOR HINGE COVER.		1
1A	69-2593-4	. PLATE, FORWARD GALLEY DOOR HINGE COVER. ATTACHING PARTS		1
1B	NAS517-3-0	. SCREW		4
1C	NAS517-3-5	. SCREW		1
1D	NAS517-3-4	. SCREW		1
1E	AN960-10	. WASHER.		2
1F	NAS679A3W	. NUT		2
1G	NAS1105-52W	. BOLT.		2
2	NAS1105-110W	. BOLT.		1
3	BAC511W5	. SEAL.		4
4	AN960-516L	. WASHER.		1
5	NAS679A5	. NUT		2
6	AN320-5	. NUT		1
7	65-2346-3	. SNUBBER ASSY. (OPTIONALS 65-2346-1, -4)	0101	1
7	65-2346-1	. SNUBBER ASSY. (OPTIONAL TO 65-2346-3)	0101	1
7	65-2346-4	. SNUBBER ASSY. (OPTIONAL TO 65-2346-3)	0101	1
7	65-2346-4	. SNUBBER ASSY. (OPTIONALS 65-2346-1, -3)	0299	1
7	65-2346-1	. SNUBBER ASSY. (OPTIONAL TO 65-2346-4)	0299	1
7	65-2346-3	. SNUBBER ASSY. (OPTIONAL TO 65-2346-4)	0299	1
8	MS24677-17	. DOORS, (SEE FIG. 20).		4
8A	NAS549-8	. REQUIRED PLACARDS, (SEE 11-2, FIG. 231)		8
9	66-9439	. SCREW		2
10	66-2617-7	. WASHER.		2
10	66-2617-7	. RETAINER, DOOR HINGE PIN.		2
11	63-1672	. PIN, (DELETED BY PAA MAR 52M002). (OPTIONAL TO 66-2617-4 (DELETED BY PAA MAR 52M002))		2
12	66-2364-2	. PIN, GALLEY AND ENTRY DOOR HINGE.		2
13	NAS77A6-19	. GASKET, AFT ENTRY DOOR RUBBER RETAINER.		1
14	NAS561-3P14	. LINK ASSY, GALLEY DOOR SNUBBER STOP		2
15	63-1015-1	. BUSHING		1
16	66-2364-3	. PIN		1
16A	BACM10LICNH	. DOWEL, DOOR RADIUS LINK		1
17	69-8679-1	. LINK, GALLEY DOOR SNUBBER STOP.		1
18	AN316-8R	. MARKER, HOLD OPEN LATCH PRESS TO CLOSE DOOR ALUMINUM FOIL		1
19	BAC810A400M2L	. ARM ASSY, FORWARD GALLEY DOOR GUIDE		1
20	AN515C6R24	. NUT		1
21	AN960PD6L	. BEARING		1
22	AN960PD616L	. SCREW		2
23	BACN10BY506	. WASHER.		2
25	63-8337	. WASHER.		1
26	66-8615-1	. NUT		1
27	63-2552	. LINK, GALLEY DOOR STOWING LATCH		1
28	NAS670-37	. LEVER, GALLEY DOOR STOWING LATCH.		1
29	AN960PD616L	. SHAFT, ENTRY AND GALLEY DOOR.		1
30	63-2589	. RING.		2
31	NAS76A5-026	. WASHER.		1
32	63-8327-1	. PIN, ENTRY AND GALLEY DOOR.		1
33	63-8327-2	. BUSHING		1
34	NAS77A6-19	. LINK ASSY, FORWARD GALLEY DOOR RADIUS		1
35	63-8327-3	. LINK ASSY, FORWARD GALLEY DOOR RADIUS		1
36	63-8327-4	. BUSHING LINK, FORWARD GALLEY DOOR RADIUS (USED ON 63-8327-1) LINK, FORWARD GALLEY DOOR RADIUS (USED ON 63-8327-2)		1
37	NAS561C3-12	. PIN		1
38	63-2539	. PIN, ENTRY DOOR		1
39	63-2554	. SPRING, ENTRY AND GALLEY DOOR COMPRESSION		1
40	66-4727	. ROLLER, ENTRY AND GALLEY DOOR GUIDE ARM		1
41	66-9968	. COLLAR ASSY, ENTRY DOOR		1
41A	66-9968-1	. PIN, ENTRY DOOR COLLAR.		2
41B	63-2551-1	. COLLAR, ENTRY DOOR.		1
42	NAS76A8-012	. BUSHING		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	43	BACB10D67T	.	.	BEARING	.	.	.		1
	44	69-8644	.	.	ARM, FORWARD GALLEY DOOR GUIDE.	.	.	.		1
	45	65-2978-1	.	.	SEAL ASSY, FORWARD GALLEY DOOR.	.	.	.		1
		65-12353	.	.	SHIM INSTL, ENTRY AND GALLEY DOORS SEAL	.	.	.		1
	45A	65-12353-1	.	.	SHIM, ENTRY AND GALLEY DOORS SEAL (EXTRUSION NO.	.	.	.		AR
			.	.	BAC1521-585) (ORDER IN FOOT LENGTHS)	.	.	.		
	45C	AN7510-1	.	.	PLATE	.	.	.		1
			.	.	ATTACHING PARTS	.	.	.		
		MS20470D3	.	.	RIVET	.	.	.		4
			.	.	-----	.	.	.		
	46	50-7954	.	.	DOOR ASSY, FORWARD GALLEY (SEE FIG. 3) (SEE FIG. 2.	.	.	.		1
			.	.	FOR SPARES ASSEMBLY)	.	.	.		
		65-42052-2	.	.	KEEPER INSTL, GALLEY DOOR SEAL.	.	.	.		1
	47	66-18031-1	.	.	SPRING, CANTILEVER SEAL KEEPER.	.	.	.		2
	48	66-18031-2	.	.	SPRING, CANTILEVER SEAL KEEPER.	.	.	.		2
	49	63-9484	.	.	CLAMP, SPRING RETAINER.	.	.	.		8
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

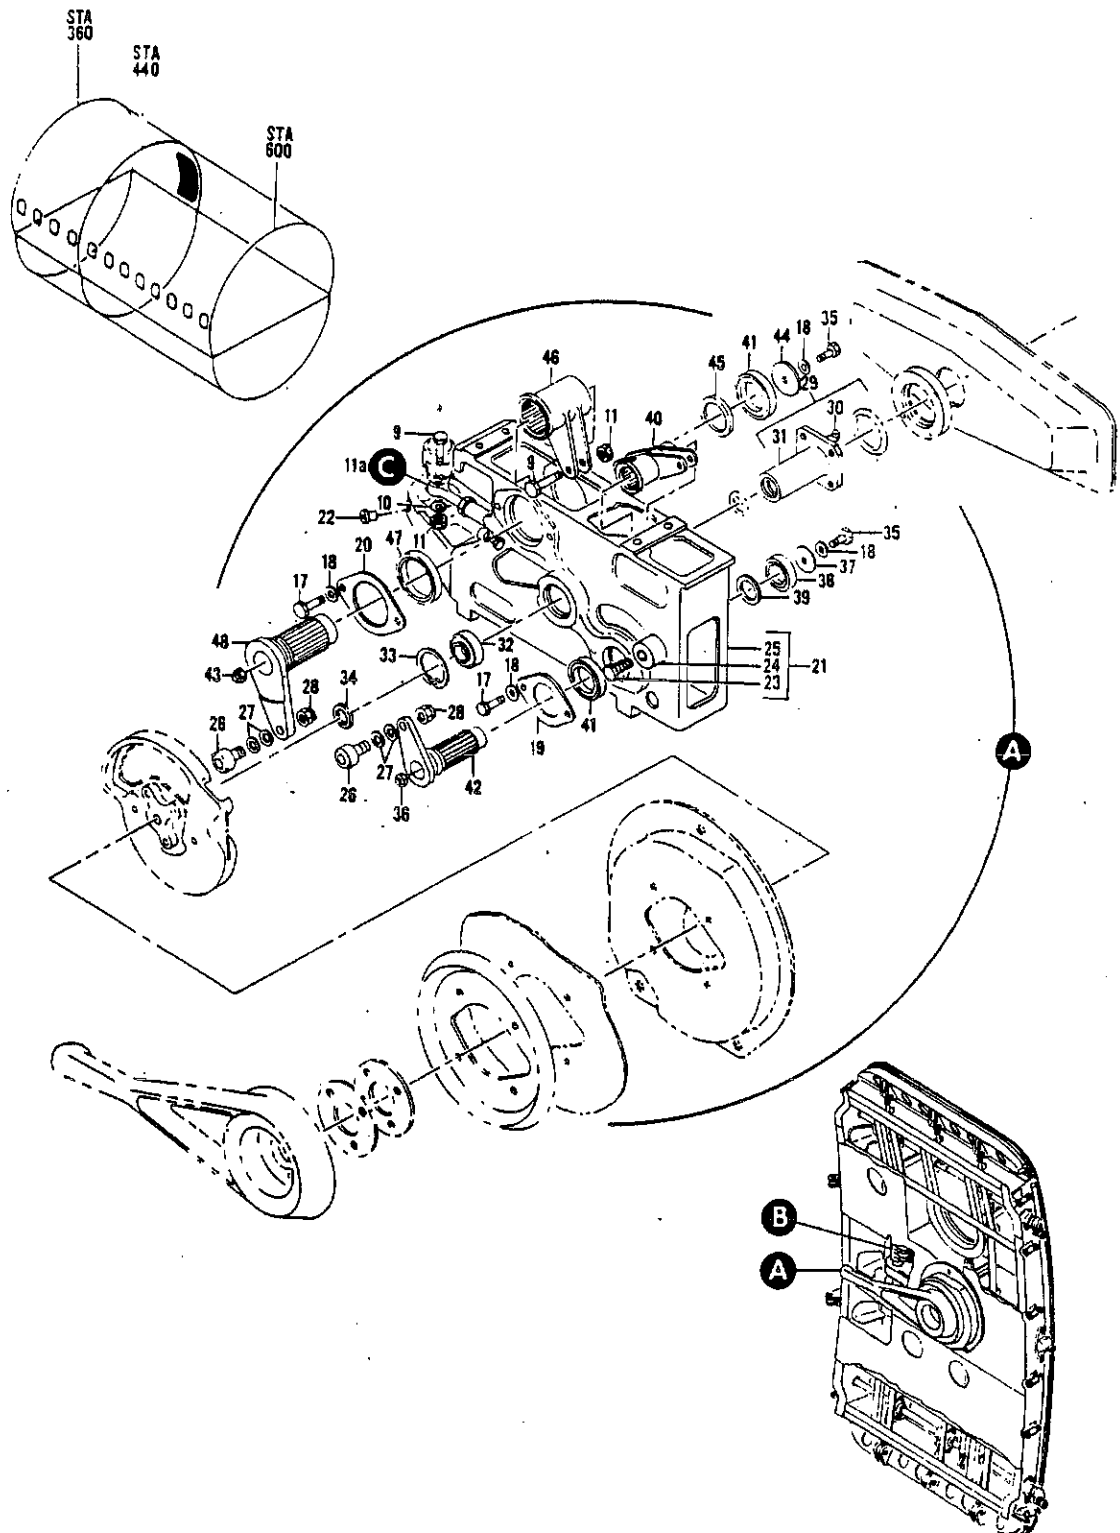


FIGURE 2. SPARES ASSY, FORWARD GALLEY DOOR MECHANISM (SHEET 1)

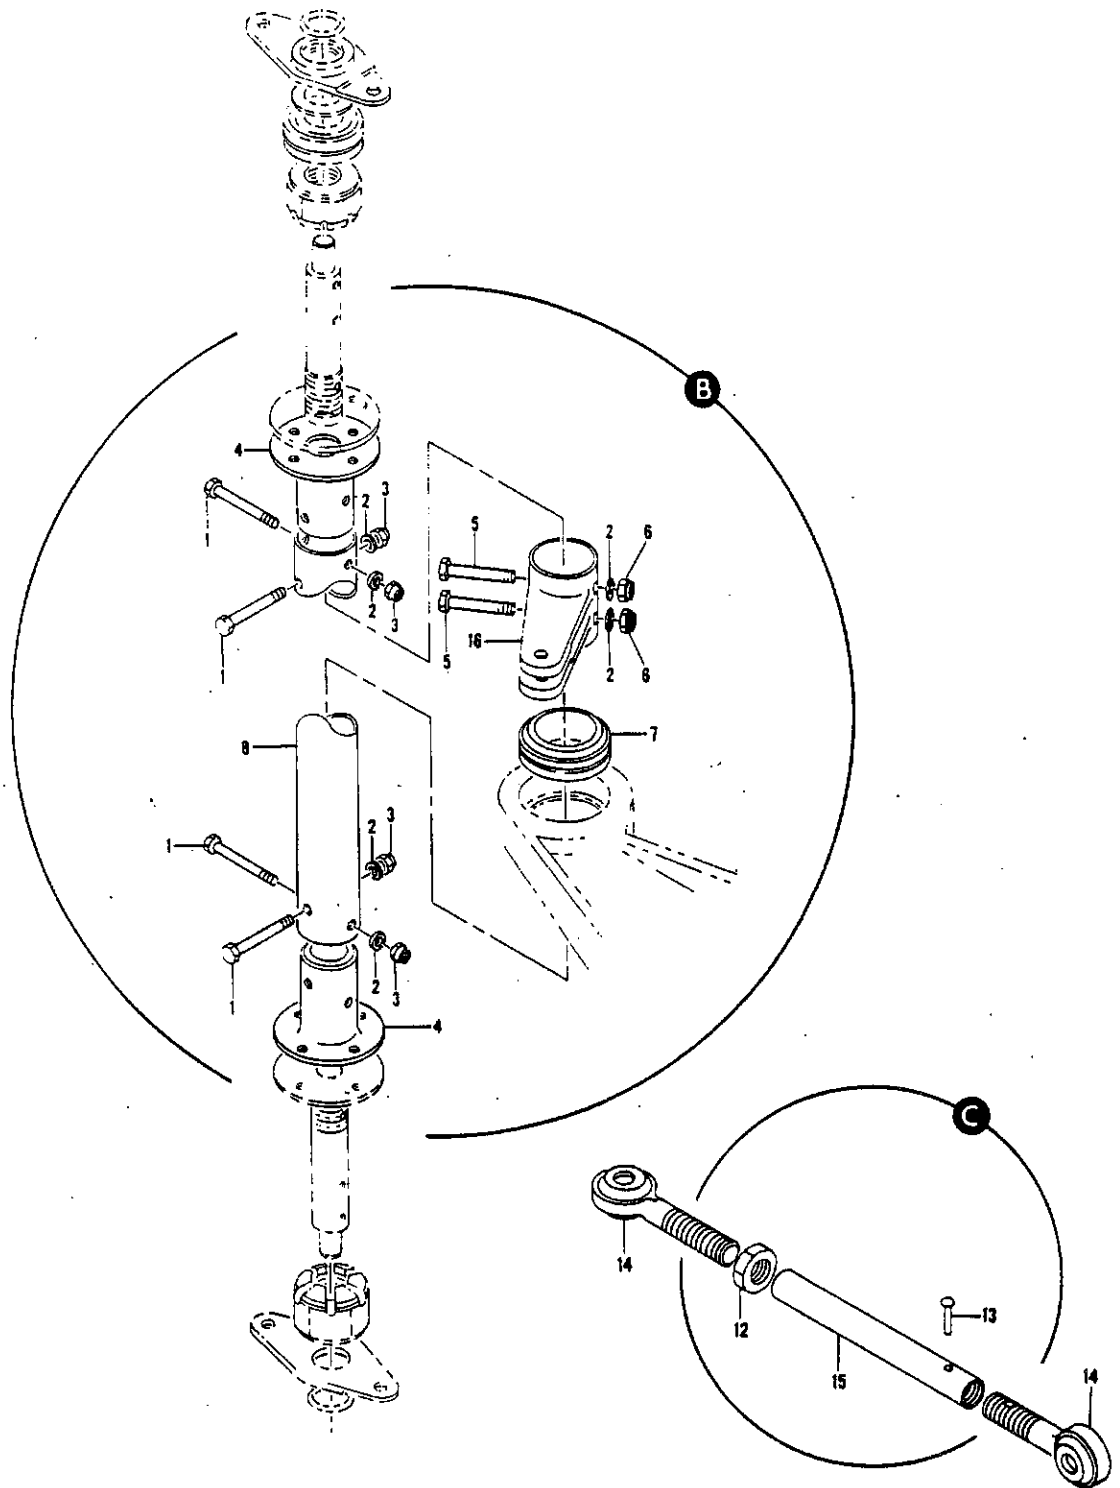


FIGURE 2. SPARES ASSY, FORWARD GALLEY DOOR MECHANISM (SHEET 2)

NOV 21/90

52-02-2

DETAILED PARTS LIST
52-02-2
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2	50-7954-47		SPARES ASSY, FORWARD GALLEY DOOR MECHANISM (SEE FIG. 1, ITEM 46)		RF
1	NAS1103-20		. BOLT.		4
2	AN960-10L		. WASHER.		6
3	NAS679A3W		. NUT		4
4	66-1356		. TERMINAL, GALLEY DOOR TORQUE TUBE		2
5	NAS1103-23		. BOLT.		2
6	NAS679A3W		. NUT		2
7	BACB10C151		. BEARING		1
8	60-7251		. TUBE, GALLEY DOOR TORQUE.		1
9	NAS1105-13DW		. BOLT.		2
10	AN960-516		. WASHER.		2
11	AN320-5		. NUT		2
11A	66-2655-2		. ROD ASSY, GALLEY DOOR MECHANISM CONTROL		1
12	AN316-8R		. NUT		1
13	AN470D5		. RIVET		1
14	BACB10A400M2L		. BEARING		2
15	66-2655-1		. TUBE, GALLEY DOOR MECHANISM CONTROL ROD		1
16	60-4466		. BELLCRANK, GALLEY DOOR.		1
17	AN3-7A		. BOLT.		4
18	AN960-10		. WASHER.		6
19	66-2687		. RETAINER, GALLEY DOOR HANDLE MECHANISM BEARING.		1
20	66-2687-1		. RETAINER, GALLEY DOOR HANDLE MECHANISM BEARING.		1
21	65-1753-5		. HOUSING ASSY, GALLEY DOOR LOCK MECHANISM.		1
22	NAS516-1		. FITTING		1
23	AN3-10A		. BOLT.		1
24	63-1790		. STOP, GALLEY DOOR HANDLE MECHANISM.		1
25	65-1753-6		. HOUSING, GALLEY DOOR LOCK MECHANISM		1
26	BACB10BH60CF6		. BEARING		2
27	AN960-616		. WASHER.		4
28	AN310-6		. NUT		2
29	90-7820		. HOUSING ASSY, HANDLE MECHANISM.		1
30	NAS516-1		. FITTING		1
31	90-7820-1		. FITTING, HANDLE MECHANISM HOUSING		1
32	AN201KP12A		. BEARING		1
33	NAS50-162		. RING.		1
34	AN960C1216L		. WASHER.		1
35	AN3-5A		. BOLT.		2
36	NAS679A3W		. NUT		1
37	63-1726		. RETAINER, GALLEY DOOR HANDLE MECHANISM BEARING.		1
38	BACB10A28DD		. BEARING		1
39	63-1614		. SPACER, GALLEY DOOR BELL CRANK.		1
40	66-1346-2		. BELLCRANK ASSY, GALLEY DOOR HANDLE MECHANISM.		1
41	BACB10A30DD		. BEARING		1
42	66-1347		. BELLCRANK, GALLEY DOOR HANDLE MECHANISM		1
43	NAS679A3W		. NUT		1
44	63-1726-1		. RETAINER, GALLEY DOOR HANDLE MECHANISM BEARING.		1
45	63-1614-1		. SPACER, GALLEY DOOR BELLCRANK		1
46	66-1362-2		. BELLCRANK ASSY, GALLEY DOOR HANDLE MECHANISM.		1
47	BACB10A31DD		. BEARING		1
48	66-1361		. BELLCRANK, GALLEY DOOR HANDLE		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

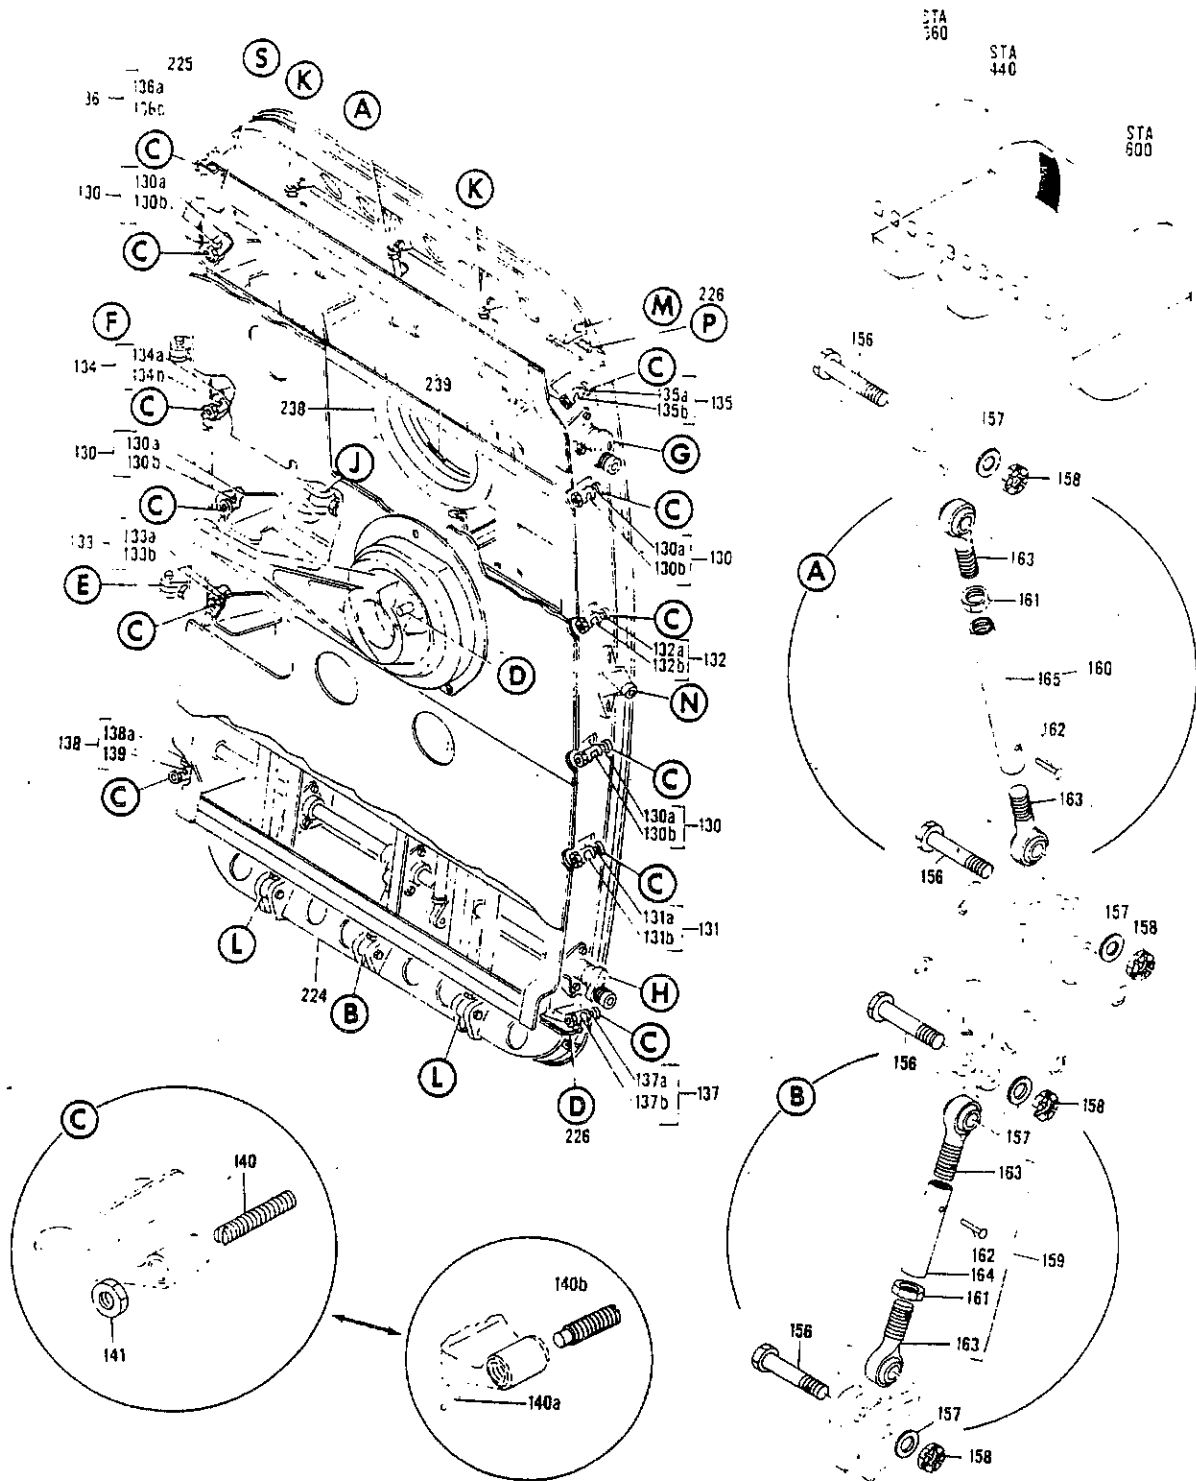


FIGURE 3. DOOR ASSY, FORWARD GALLEY (SHEET 1)

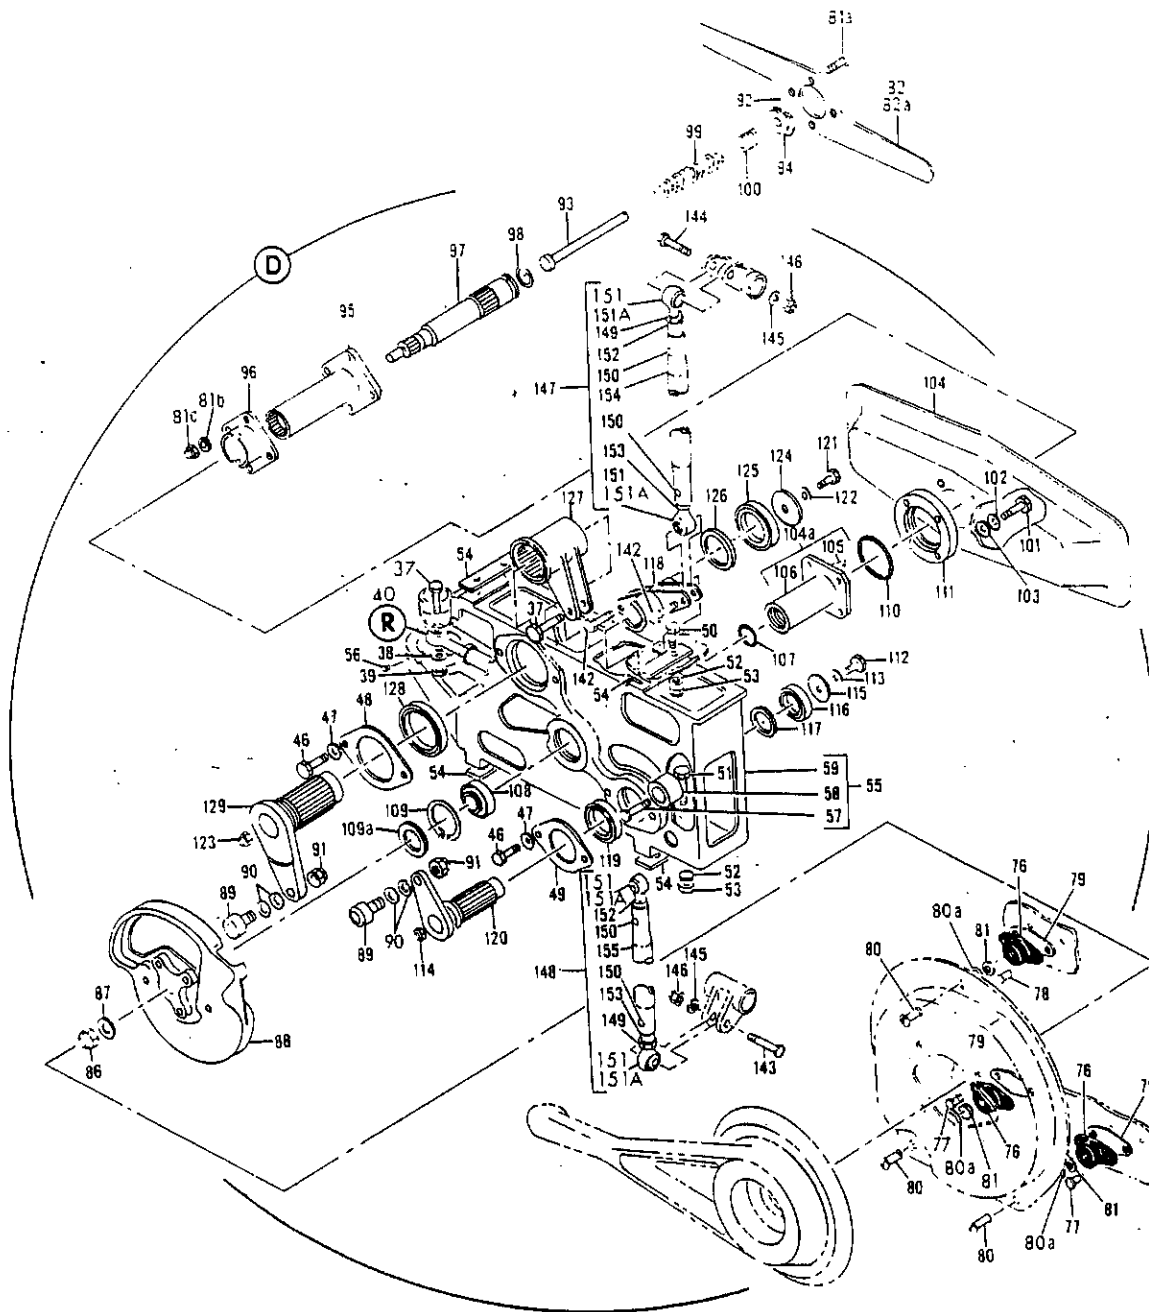


FIGURE 3. FORWARD GALLEY DOOR ASSEMBLY (SHEET 2)

NOV 21/90

52-02-3

DETAILED PARTS LIST
52-02-3
PAGE 1

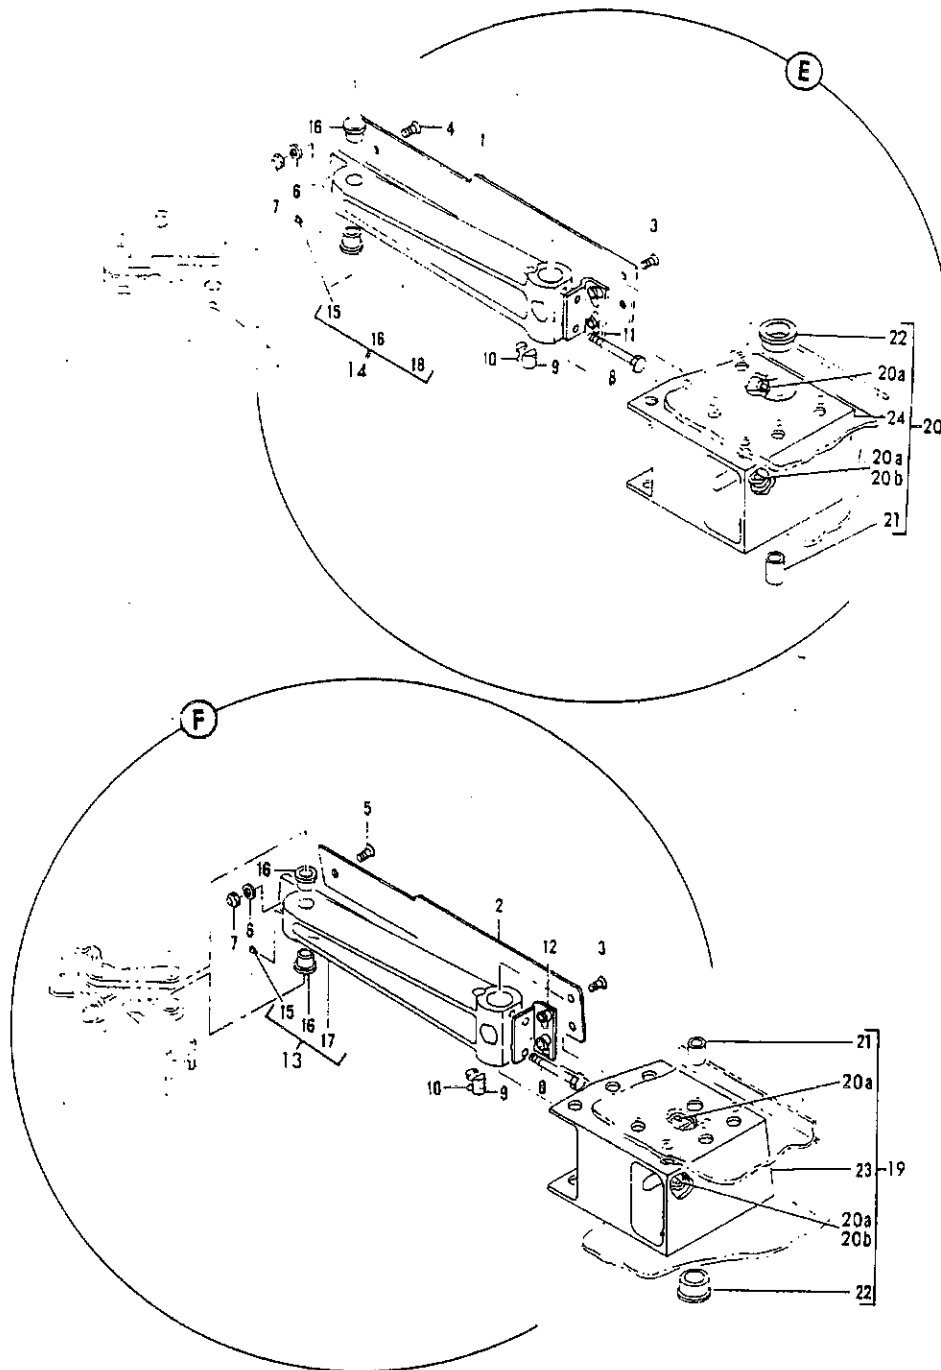


FIGURE 3. DOOR ASSY. FORWARD GALLEY (SHEET 3)

DETAILED PARTS LIST
52-02-3
PAGE 2

52-02-3

NOV 21/9

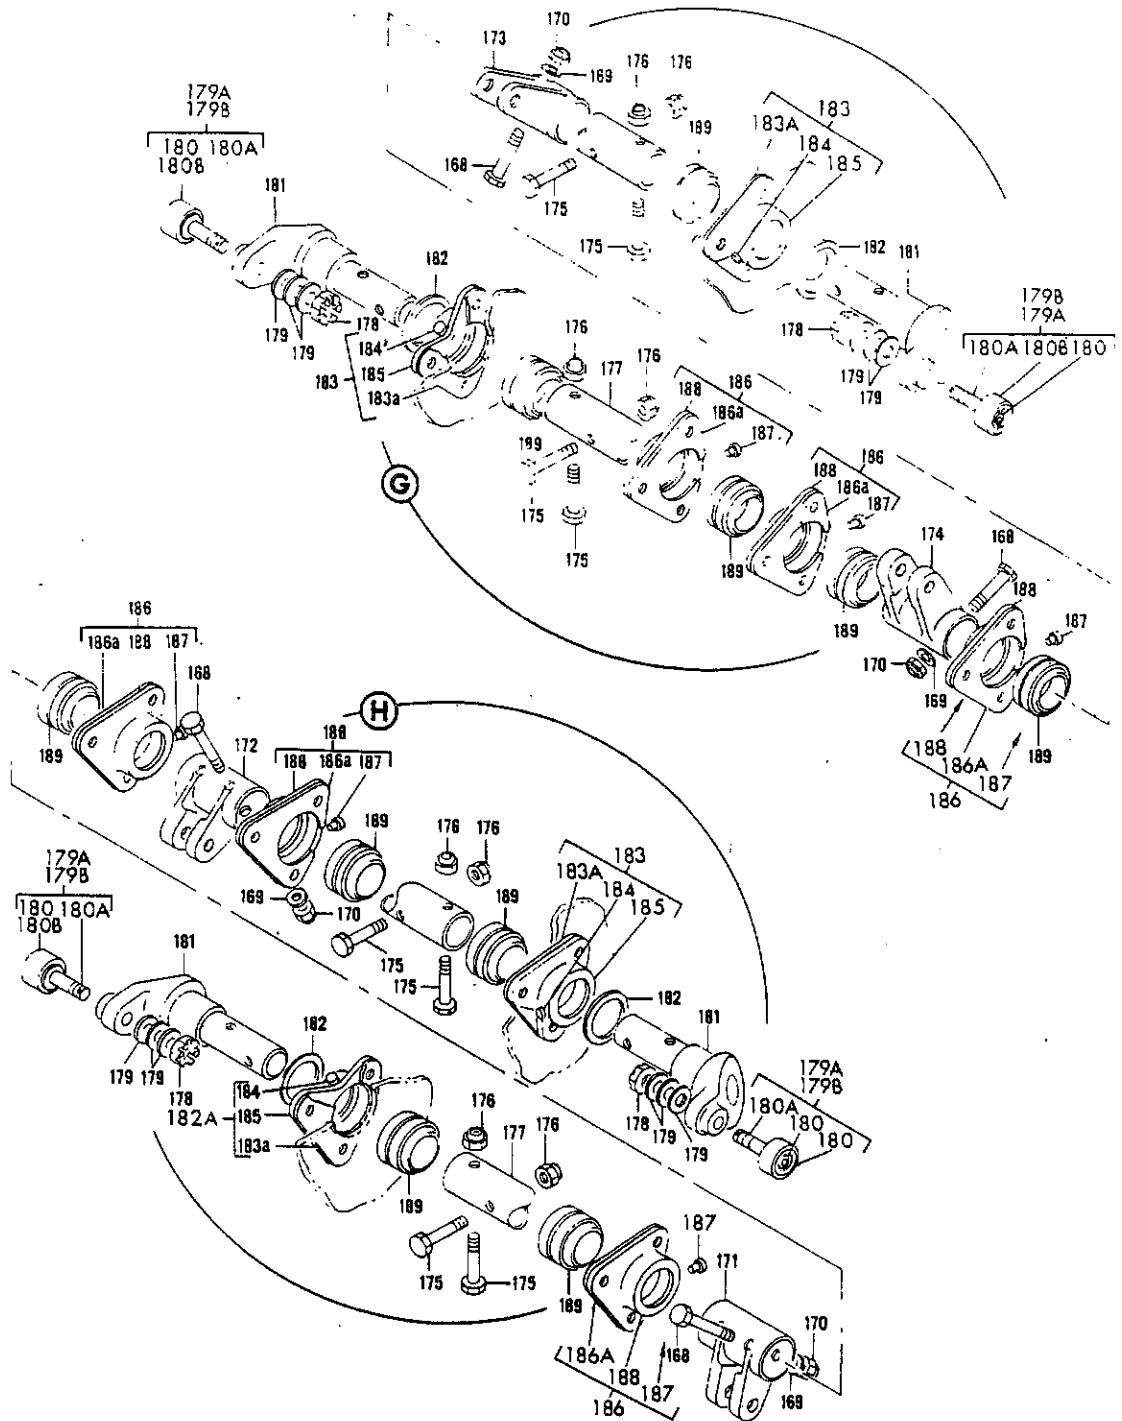


FIGURE 3. DOOR ASSY, FORWARD GALLEY (SHEET 4)

NOV 21/90

52-02-3

DETAILED PARTS LIST
52-02-3
PAGE 3

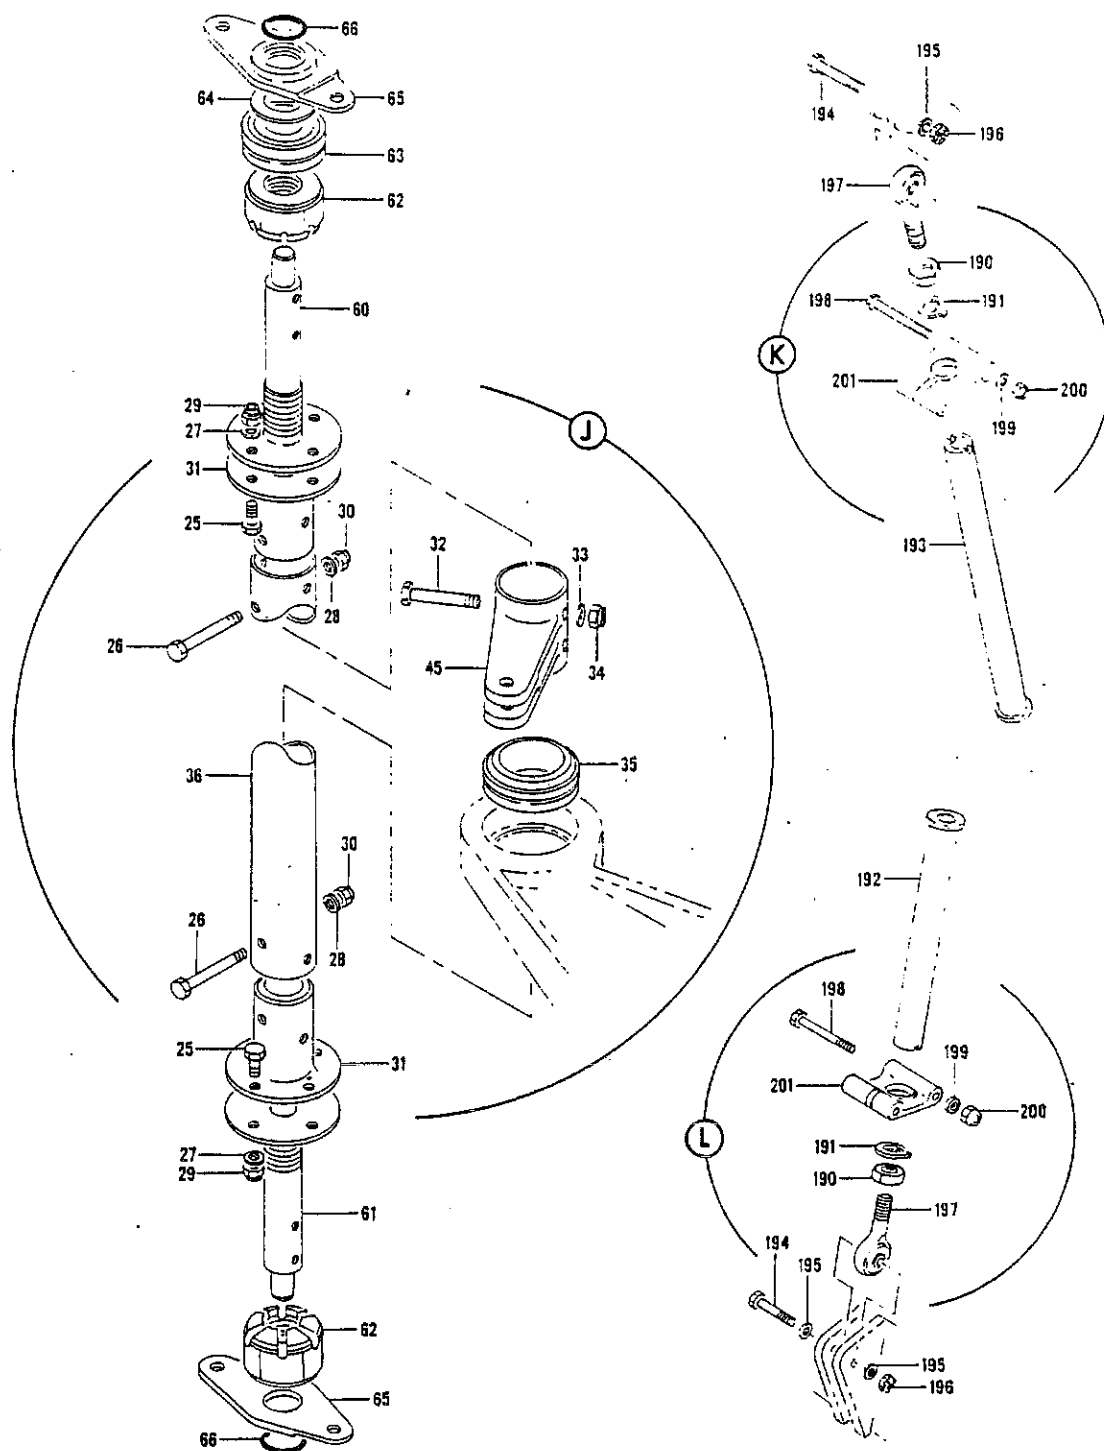


FIGURE 3. DOOR ASSY, FORWARD GALLEY (SHEET 5)

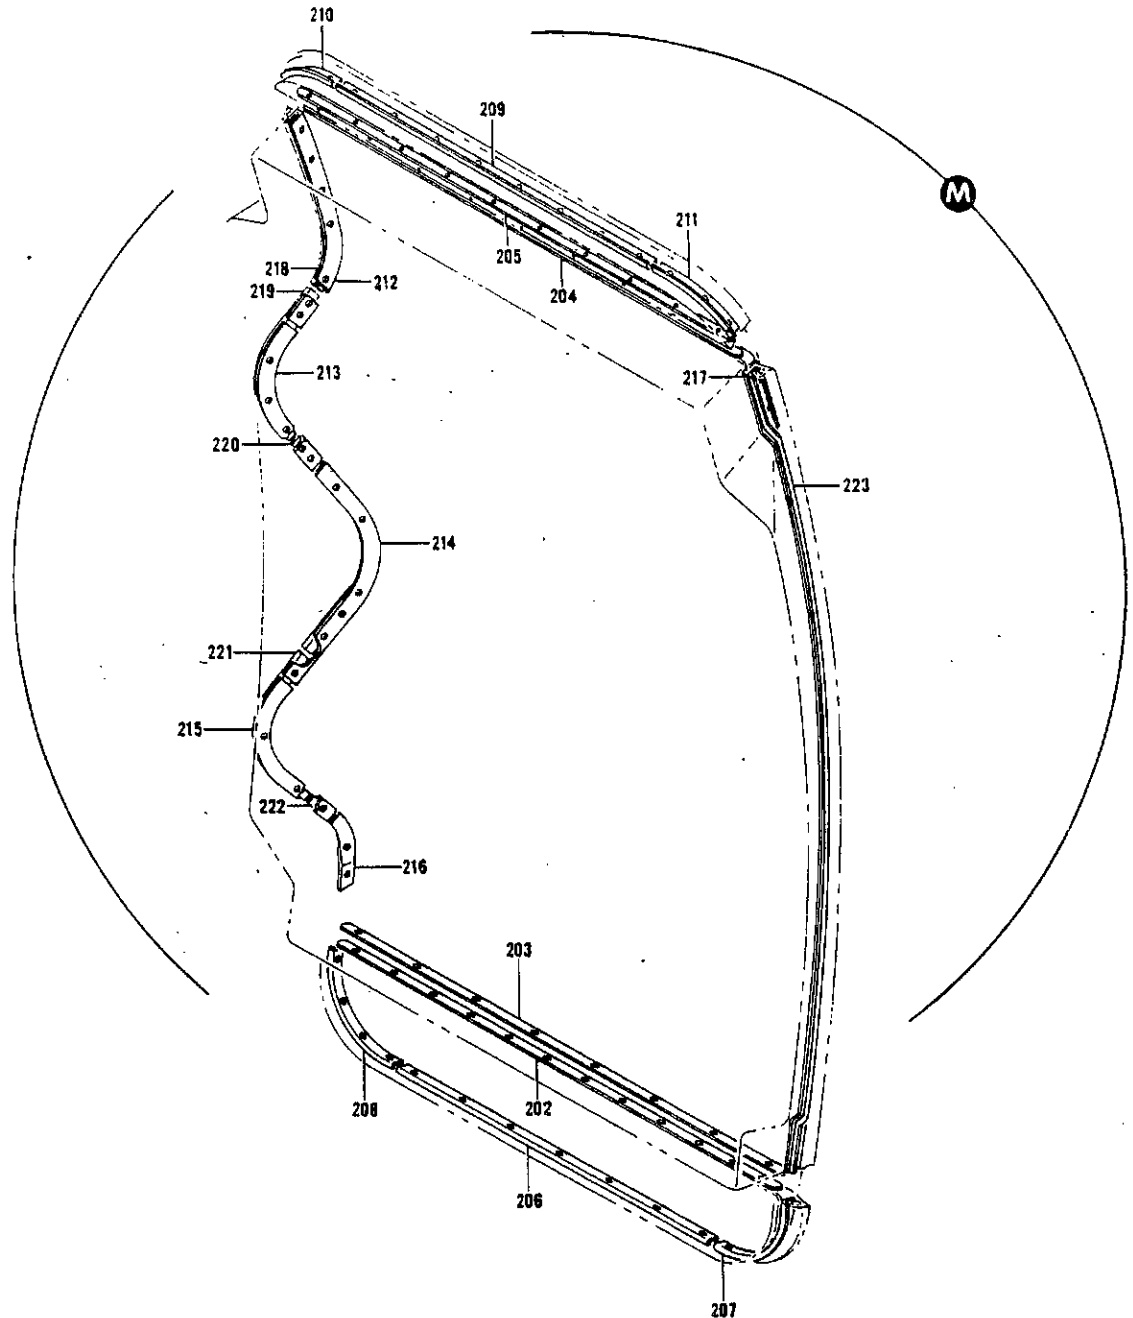


FIGURE 3. DOOR ASSY. FORWARD GALLEY (SHEET 6)

NOV 21/90

52-02-3

DETAILED PARTS LIST
52-02-3
PAGE 5

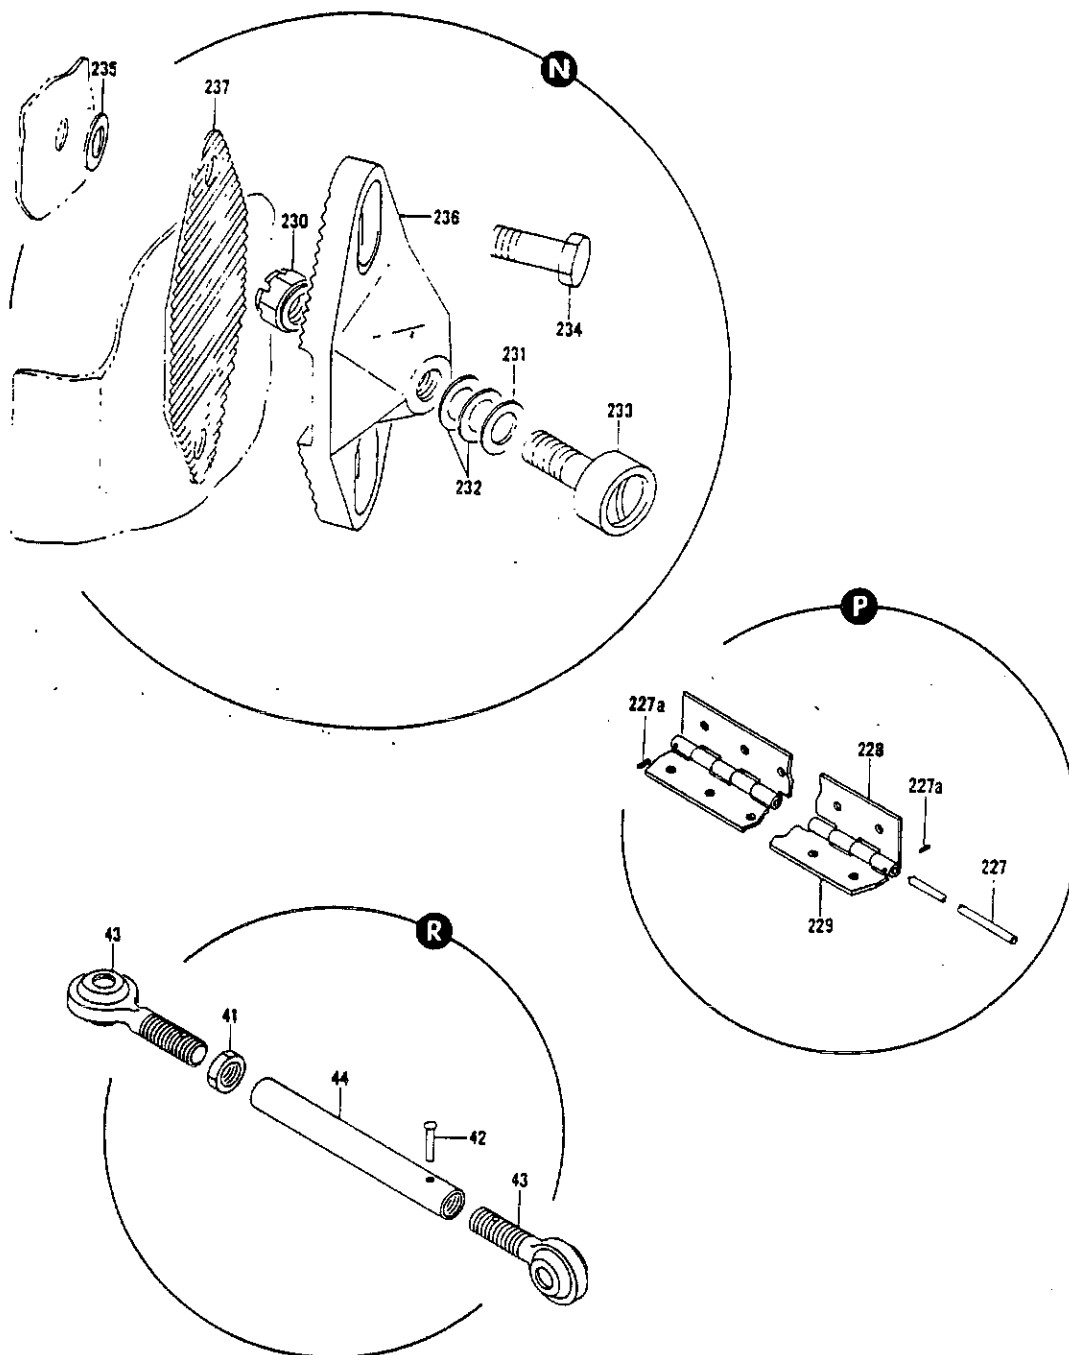


FIGURE 3. DOOR ASSY, FORWARD GALLEY (SHEET 7)

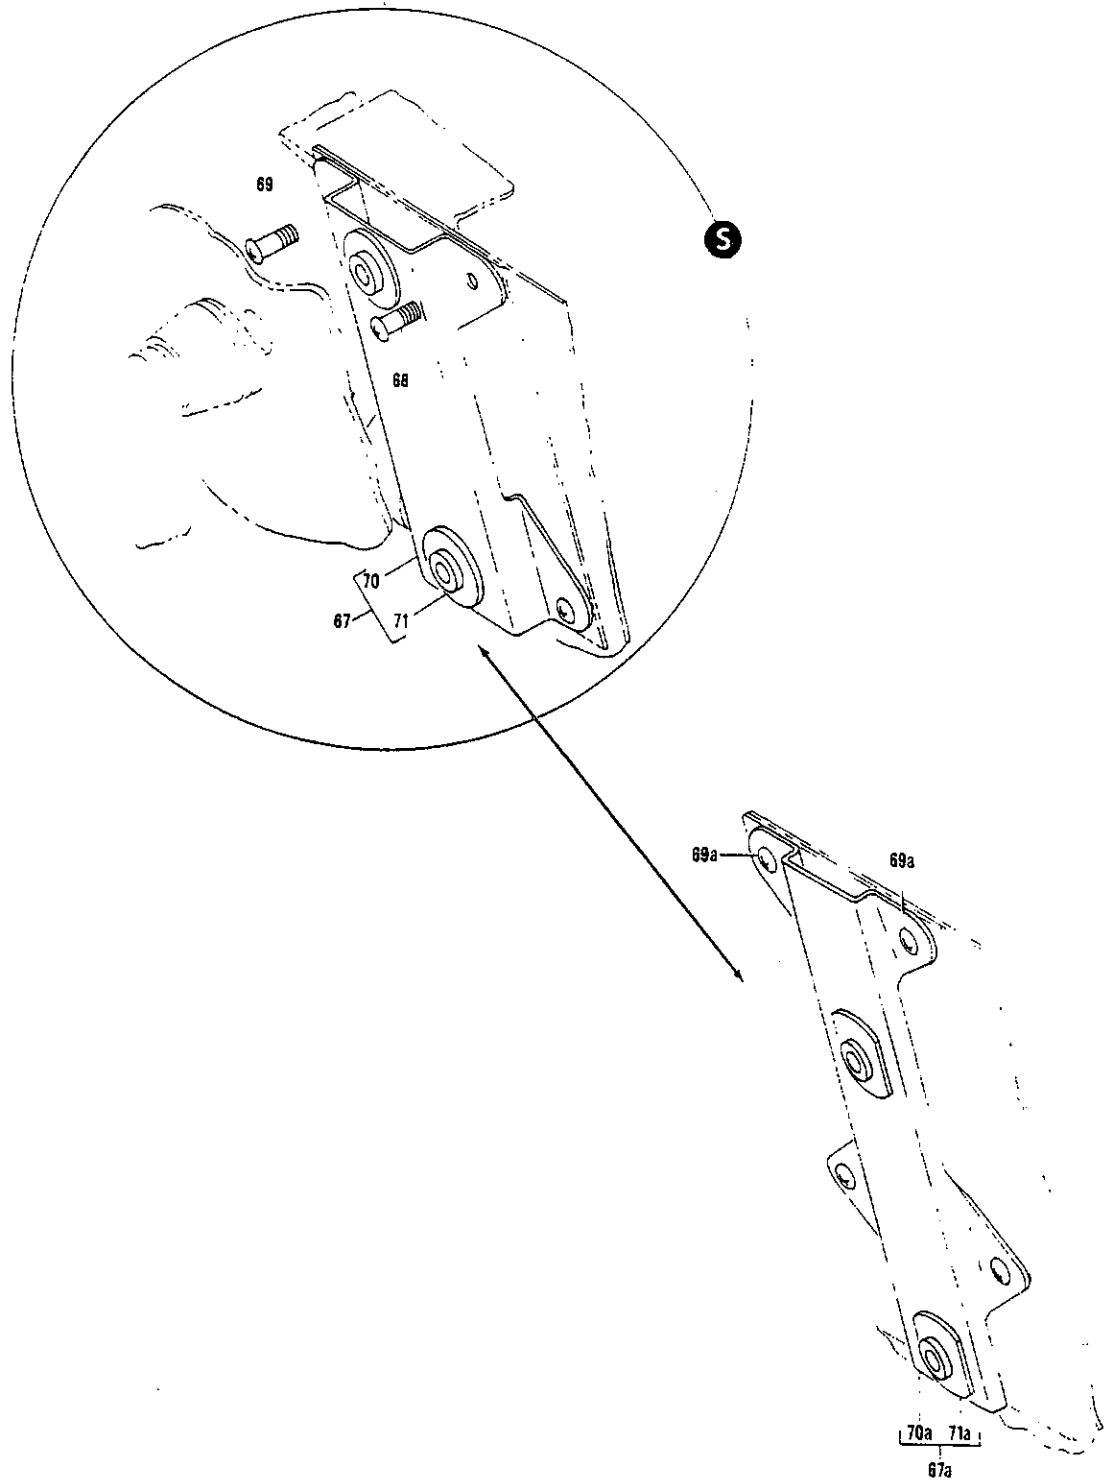


FIGURE 3. DOOR ASSY, FORWARD GALLEY (SHEET 8)

NOV 21/90

52-02-3

DETAILED PARTS LIST
52-02-3
PAGE 7

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
3	50-7954	DOOR ASSY, FORWARD GALLEY (SEE FIG. 1, ITEM 46)		RF
8	50-7954-53	. BOLT, (ALTERED FROM NAS1103-26)		4
		(OPTIONAL AND FOR REPLACEMENT ORDER NAS1303-21)		
8	NAS1303-21	. BOLT		4
		(OPTIONAL TO AND REPLACEMENT FOR 50-7954-53)		
9	BACN10CP3L	. NUT		4
10	BACR10V3	. RETAINER		4
11	66-2746-1	. CLIP, FORWARD GALLEY DOOR HINGE		1
12	66-2746-2	. CLIP, FORWARD GALLEY DOOR HINGE		1
13	50-10398-1	. ARM ASSY, HINGE	0150	1
		(OPTIONAL AND FOR REPLACEMENT ORDER 50-10398-10)		
13	50-10398-10	. ARM ASSY, HINGE	0150	1
		(OPTIONAL TO AND REPLACEMENT FOR 50-10398-1)		
13	50-10398-10	. ARM ASSY, HINGE	5199	1
14	50-10398-2	. ARM ASSY, HINGE	0150	1
		(OPTIONAL AND FOR REPLACEMENT ORDER 50-10398-11)		
14	50-10398-11	. ARM ASSY, HINGE	0150	1
		(OPTIONAL TO AND REPLACEMENT FOR 50-10398-2)		
14	50-10398-11	. ARM ASSY, HINGE	5199	1
15	NAS516-1	. FITTING		1
16	NAS77A6-32	. BUSHING (USED ON 50-10398-1 AND -2)	0150	2
16	NAS77A6-32P	. BUSHING (USED ON 50-10398-10 AND -11)		2
17	50-10398-5	. ARM, GALLEY DOOR HINGE (USED ON 50-10398-1)	0150	1
17	50-10398-14	. ARM, HINGE (USED ON 50-10398-10)		1
18	50-10398-6	. ARM, GALLEY DOOR HINGE (USED ON 50-10398-2)	0150	1
18	50-10398-15	. ARM, HINGE (USED ON 50-10398-11)		1
19	50-10830-1	. FITTING ASSY, HINGE	0150	1
		(OPTIONAL AND FOR REPLACEMENT ORDER 50-10830-17)		
19	50-10830-17	. FITTING ASSY, HINGE	0150	1
		(OPTIONAL TO AND REPLACEMENT FOR 50-10830-1)		
19	50-10830-17	. FITTING ASSY, HINGE	5199	1
20	50-10830-10	. FITTING ASSY, HINGE	0150	1
		(OPTIONAL AND FOR REPLACEMENT ORDER 50-10830-18)		
20	50-10830-18	. FITTING ASSY, HINGE	0150	1
		(OPTIONAL TO AND REPLACEMENT FOR 50-10830-10)		
20	50-10830-18	. FITTING ASSY, HINGE	5199	1
		ATTACHING PARTS		
	AN3-5A	. BOLT		12
	BACSL1W3	. SEAL		12
	NAS679A3W	. NUT		12
		-----*		
209	NAS516-1	. FITTING, (USED ON 50-10830-17 AND -18)		2
21	NAS76A8-020	. BUSHING, (USED ON 50-10830-1 AND -10)	0150	1
21	69-55820-1	. BUSHING, (USED ON 50-10830-17 AND -18)		1
22	NAS77A12-32	. BUSHING, (USED ON 50-10830-1 AND -10)	0150	1
22	69-55819-1	. BUSHING, (USED ON 50-10830-17 AND -18)		1
23	50-10830-5	. FITTING, GALLEY DOOR HINGE (USED ON 50-10830-1)	0150	1
23	50-10830-21	. FITTING, (USED ON 50-10830-17)		1
24	50-10830-14	. FITTING, GALLEY DOOR HINGE (USED ON 50-10830-10)	0150	1
24	50-10830-22	. FITTING, (USED ON 50-10830-18)		1
25	NAS1103-3	. BOLT		8
26	NAS1103-20	. BOLT		4
27	AN960-10L	. WASHER		8
28	AN960-10L	. WASHER		4
29	NAS679A3W	. NUT		8
30	NAS679A3W	. NUT		4
31	66-1356	. TERMINAL, GALLEY DOOR TORQUE TUBE		2
32	NAS1103-23	. BOLT		2
33	AN960-10L	. WASHER		2
34	NAS679A3W	. NUT		2
35	BACB10C151	. BEARING		1
36	60-7251	. TUBE, GALLEY DOOR TORQUE		1
37	NAS1103-13DW	. BOLT		2
38	AN960-516	. WASHER		1
39	AN320-5	. NUT		1
40	66-2655-2	. ROD ASSY, GALLEY DOOR MECHANISM CONTROL		1
41	AN316-8R	. NUT		1
42	AN470D5	. RIVET		1
43	BACB10A400M2L	. BEARING		2
44	66-2655-1	. TUBE, GALLEY DOOR MECHANISM CONTROL ROD		1
45	60-4466	. BELLCRANK, GALLEY DOOR		1
46	AN3-7A	. BOLT		4
47	AN960-10	. WASHER		4
48	66-2687	. RETAINER, GALLEY DOOR HANDLE MECHANISM BEARING	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	3	48 66-2687-2		1
R		49 66-2687-1	5199	1
R		49 66-2687-3	0150	1
		50 AN4-7A	5199	1
		51 AN4-13A		4
		52 BACW10T416		4
		53 NAS679A4W		8
		54 BACS40B12-45		8
		55 65-1753-5		AR
		56 NAS516-1		1
		57 AN3-10A		1
		58 63-1790		1
		59 65-1753-6		1
R		60 66-1355-1	0150	1
R		60 66-1355-6	0150	1
R		60 66-1355-6	5199	1
R		61 66-1355-2	0150	1
R		61 66-1355-5	0150	1
R		61 66-1355-5	5199	1
		62 AN310D14		2
		63 BACB10C43KP		1
		64 AN960-1216L		1
		65 90-6757		2
		66 AN6227-14		2
		69-5837-2		1
		69-5837-3		1
		68 NAS221-10		2
		69 NAS221-11		2
		70 69-5837-4		1
		71 66-4444		2
		76 10-60124		3
		77 NAS221-13		4
		78 AN470D4		2
		79 63-2059-2		1
		69-3685		1
		80 2-0-180		3
80A		AN960-D416		3
81		G0-2-93		3
81A		NAS333CPA7		4
81B		AN960-10		4
81C		NAS679A3W		4
82		69-2491-2		1
82A		69-2491-1		1
86		NAS679A6		1
87		63-9386		1
88		50-11375-3		1
89		BACB10B60CF6		2
90		AN960-616		4
		90 AN960-616L		AR
		91 AN310-6		2
		92 MS39086-13		1
		93 30-3013-2		1
		94 30-3019-1		1
		95 90-7821		1
		96 90-7811		1
		97 60-4455		1
		98 AN996-14		1
		99 63-2848		1
100		30-3010		1
101		AN3-11A		4
102		AN960D10		4
103		BACSL1W3		4
104		69-2485-1		1
104A		90-7820		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
3 105	NAS516-1	. . FITTING		1
106	90-7820-1	. . FITTING, HANDLE MECHANISM HOUSING		1
107	AN6227817	. PACKING		1
108	AN201KP12A	. BEARING		1
109	NAS50-162	. RING		1
109A	AN960C1216L	. WASHER		1
110	AN6227828	. PACKING		1
111	60-4412	. PLATE, DOOR HANDLE MECHANISM SEAL		1
112	AN3-5A	. BOLT		1
113	AN960-10	. WASHER		1
114	NAS679A3W	. NUT		1
115	63-1726	. RETAINER, GALLEY DOOR HANDLE MECHANISM BEARING		1
116	BAC810A28DD	. BEARING		1
117	63-1614	. SPACER, GALLEY DOOR BELLCRANK		1
118	66-1346-2	. BELLCRANK ASSY, GALLEY DOOR HANDLE MECHANISM		1
119	BAC810A30DD	. BEARING		1
120	66-1347	. BELLCRANK, GALLEY DOOR HANDLE MECHANISM		1
121	AN3-5A	. BOLT		1
122	AN960-10	. WASHER		1
123	NAS679A3W	. NUT		1
124	63-1726-1	. RETAINER, GALLEY DOOR HANDLE MECHANISM BEARING		1
125	BAC810A30DD	. BEARING		1
126	63-1614-1	. SPACER, GALLEY DOOR BELLCRANK		1
127	66-1362-2	. BELLCRANK ASSY, GALLEY DOOR HANDLE MECHANISM		1
128	BAC810A31DD	. BEARING		1
129	66-1361	. BELLCRANK, GALLEY DOOR HANDLE		1
130	66-1091-3	. STOP ASSY, GALLEY DOOR		4
130A	66-1091-4	. . FITTING, GALLEY DOOR STOP		1
130B	66-12688-1	. . BUSHING, DOOR STOP		1
131	69-2473-11	. STOP ASSY, GALLEY DOOR		1
131A	69-2473-13	. . FITTING, GALLEY DOOR STOP		1
131B	66-12688-1	. . BUSHING, DOOR STOP		1
132	69-2473-12	. STOP ASSY, GALLEY DOOR		1
132A	69-2473-14	. . FITTING, GALLEY DOOR STOP		1
132B	66-12688-1	. . BUSHING, DOOR STOP		1
133	65-1947-4	. STOP ASSY, FORWARD GALLEY DOOR		1
133A	65-1947-5	. . FITTING, FORWARD GALLEY DOOR STOP		1
133B	66-12688-1	. . BUSHING, DOOR STOP		1
134	65-1946-4	. STOP ASSY, FORWARD GALLEY DOOR		1
134A	65-1946-5	. . FITTING, FORWARD GALLEY DOOR STOP		1
134B	66-12688-1	. . BUSHING, DOOR STOP		1
135	66-1684-13	. STOP ASSY, GALLEY DOOR		1
135A	66-1684-17	. . FITTING, GALLEY DOOR STOP		1
135B	66-12688-1	. . BUSHING, DOOR STOP		1
136	66-1684-14	. STOP ASSY, GALLEY DOOR		1
136A	66-1684-18	. . FITTING, GALLEY DOOR STOP		1
136B	66-12688-1	. . BUSHING, DOOR STOP		1
137	66-1684-15	. STOP ASSY, GALLEY DOOR		1
137A	66-1684-19	. . FITTING, GALLEY DOOR STOP		1
137B	66-12688-1	. . BUSHING, DOOR STOP		1
138	66-1684-16	. STOP ASSY, GALLEY DOOR		1
138A	66-1684-20	. . FITTING, GALLEY DOOR STOP		1
139	66-12688-1	. . BUSHING, DOOR STOP		1
140A	66-16691-1	. SPRING, DOOR STOP PIN RETAINER		12
140B	66-12687-1	. PIN, DOOR STOP		12
142	NAS1104-11DW	. BOLT		2
143	AN4-14	. BOLT		1
144	AN4-11	. BOLT		1
145	AN960-416	. WASHER		2
146	AN320-4	. NUT		2
147	90-7823-4	. ROD ASSY, DOOR MECHANISM CONTROL		1
147	65-28925-5	. ROD ASSY, MECHANISM CONTROL (OPTIONAL 90-7823-4)		1
148	90-7823-5	. ROD ASSY, DOOR MECHANISM CONTROL (OPTIONAL TO 65-28925-6)		1
148	65-28925-6	. ROD ASSY, MECHANISM CONTROL (OPTIONAL 90-7823-5)		1
149	AN316-5R	. . NUT		1
150	AN470D5	. . RIVET		2
151	BAC810A187M2L	. . BEARING, (USED ON 90-7823-4, -5)		2
151	BAC810A187L	. . BEARING, (USED ON 65-28925-5, -6) (OPTIONAL 11-667A (V73134))		2
151A	11-667A	. . ROD END, (V73134) (USED ON 65-28925-5, -6) (OPTIONAL TO BAC810A187L)		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3 152	30-3008	. . ADAPTER, DOOR PUSH ROD (USED ON 90-7823-4, -5) . .		1
153	30-3008-1	. . ADAPTER, DOOR PUSH ROD (USED ON 90-7823-4, -5) . .		1
154	60-4454-2	. . ROD, DOOR LATCH CONTROL (USED ON 90-7823-4) . .		1
154	65-28925-17	. . ROD, (USED ON 65-28925-5) . .		1
155	60-4454-3	. . ROD, DOOR LATCH CONTROL (USED ON 90-7823-5) . .		1
155	65-28925-18	. . ROD, (USED ON 65-28925-6) . .		1
156	AN4-14	. . BOLT . .		4
157	AN960-416	. . WASHER . .		4
158	AN320-4	. . NUT . .		4
159	69-2477	. . ROD ASSY, GALLEY DOOR GATE CONTROL . .		1
160	69-2477-1	. . ROD ASSY, GALLEY DOOR GATE CONTROL . .		1
161	AN316-5R	. . NUT . .		1
162	AN470D5	. . RIVET . .		1
163	BAC810A187M2L	. . BEARING . .		2
164	66-2641-1	. . ROD, ACTUATOR (USED ON 69-2477) . .		1
165	66-2641-2	. . ROD, GALLEY DOOR GATE ACTUATOR (USED ON 69-2477-1) . .		1
168	AN3-13A	. . BOLT . .		8
169	AN960-10	. . WASHER . .		8
170	NAS679A3W	. . NUT . .		8
171	66-1074	. . BELLCRANK, GALLEY DOOR . .		1
172	66-1074-2	. . BELLCRANK, GALLEY DOOR . .		1
173	66-1074-3	. . BELLCRANK, GALLEY DOOR . .		1
174	66-2611	. . BELLCRANK, FORWARD GALLEY DOOR UPPER TORQUE TUBE . .		1
175	NAS464P3LA12	. . BOLT . .		8
176	NAS679A3W	. . NUT . .		8
177	66-2658-2	. . SHAFT, GALLEY DOOR ROLLER CAM . .		2
178	AN320-5	. . NUT . .		4
179	AN960-516L	. . WASHER . .		12
179B	69-48008	. . ROLLER ASSY, ENTRY . .		4
180	NAS516-1	. . FITTING . .		1
180A	69-48008-1	. . STUD, ENTRY AND GALLEY DOOR ROLLER . .		1
180B	69-48008-2	. . ROLLER, ENTRY AND GALLEY DOOR . .		1
181	90-10001	. . CRANK, ENTRY DOOR ROLLER CAM . .		4
182	63-1769	. . SPACER, GALLEY DOOR TORQUE TUBE CRANK . .		AR
182A	66-1075-5	. . HOUSING ASSY, GALLEY DOOR BEARING . .		1
183	66-1075-5	. . HOUSING ASSY, GALLEY DOOR BEARING . .		3
		ATTACHING PARTS		
	AN3-5A	. . BOLT . .		12
	AN960D10L	. . WASHER . .		12
	AN960D10	. . WASHER . .		12
	NAS679A3W	. . NUT . .		12

183A	66-1075-8	. . SHIM, GALLEY DOOR BEARING HOUSING . .		AR
184	NAS516-1	. . FITTING . .		1
185	66-1075-6	. . HOUSING, GALLEY DOOR BEARING . .		1
186	66-1075	. . HOUSING ASSY, GALLEY DOOR BEARING . .		6
		ATTACHING PARTS		
	AN3-5A	. . BOLT . .		12
	AN960D10L	. . WASHER . .		12
	NAS679A3W	. . NUT . .		12

186A	66-1075-8	. . SHIM, GALLEY DOOR BEARING HOUSING . .		AR
187	NAS516-1	. . FITTING . .		1
188	66-1075-1	. . HOUSING, GALLEY DOOR BEARING . .		1
189	BAC810A398GCM2	. . BEARING . .		10
190	NAS509-5	. . NUT . .		4
191	NAS513-5	. . WASHER . .		4
192	66-2620-4	. . ROD, ENTRY AND GALLEY DOORS STOP . .		2
193	66-2620-5	. . ROD, ENTRY AND GALLEY DOORS STOP . .		2
194	AN4-14	. . BOLT . .		4
195	AN960-416	. . WASHER . .		6
196	AN320-4	. . NUT . .		4
197	BAC810A278L	. . BEARING . .		4
198	AN3-16A	. . BOLT . .		8
199	AN960D10	. . WASHER . .		8
200	NAS679A3W	. . NUT . .		8
201	US87-101	. . BEARING, (V02758) . .		4
		(OPTIONALS KR7-1 (V96579), 30053 (V50830))		
201	KR7-1	. . BEARING, (V96579) . .		4
		(OPTIONAL TO US87-101 (V02758))		
201	30053	. . BEARING, (V50830) . .		4
		(OPTIONAL TO US87-101 (V02758))		
202	69-9778-1	. . RETAINER, FORWARD GALLEY DOOR SEAL . .		1
203	69-9778-2	. . RETAINER, FORWARD GALLEY DOOR SEAL . .		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
3	204	69-9778-3	.	RETAINER, FORWARD GALLEY DOOR SEAL.	.	.	.	.		1
	205	69-9778-4	.	RETAINER, FORWARD GALLEY DOOR SEAL.	.	.	.	.		1
		AN3-6A	.	ATTACHING PARTS	.	.	.	.		35
			.	BOLT.	.	.	.	.		
			.	RETAINER, FORWARD GALLEY DOOR SEAL.	.	.	.	.		1
206	50-7954-52	.	RETAINER, FORWARD GALLEY DOOR LOWER GATE SEAL.	.	.	.	.	.		1
207	66-2873-1	.	RETAINER, FORWARD GALLEY DOOR LOWER GATE SEAL.	.	.	.	.	.		1
208	66-2873-2	.	RETAINER, FORWARD GALLEY DOOR LOWER GATE SEAL.	.	.	.	.	.		1
209	50-7954-32	.	RETAINER, FORWARD GALLEY DOOR SEAL.	.	.	.	.	.		1
210	66-2581-1	.	RETAINER, FORWARD GALLEY DOOR UPPER GATE SEAL.	.	.	.	.	.		1
211	66-2581-2	.	RETAINER, FORWARD GALLEY DOOR UPPER GATE SEAL.	.	.	.	.	.		1
212	69-9144	.	ANGLE, FORWARD GALLEY DOOR SEAL POSITIONING.	.	.	.	.	.		1
213	69-9144-8	.	ANGLE, FORWARD GALLEY DOOR SEAL POSITIONING.	.	.	.	.	.		1
214	69-9146-2	.	ANGLE, FORWARD GALLEY DOOR SEAL POSITIONING.	.	.	.	.	.		1
215	69-9144-9	.	ANGLE, FORWARD GALLEY DOOR SEAL POSITIONING.	.	.	.	.	.		1
216	69-9144-4	.	ANGLE, FORWARD GALLEY DOOR SEAL POSITIONING.	.	.	.	.	.		1
217	69-9144-5	.	ANGLE, FORWARD GALLEY DOOR SEAL POSITIONING.	.	.	.	.	.		1
218	69-2923	.	RETAINER, FORWARD GALLEY DOOR SEAL.	.	.	.	.	.		1
219	69-2923-1	.	RETAINER, FORWARD GALLEY DOOR SEAL.	.	.	.	.	.		1
220	69-2923-2	.	RETAINER, FORWARD GALLEY DOOR SEAL.	.	.	.	.	.		1
221	69-2923-3	.	RETAINER, FORWARD GALLEY DOOR SEAL.	.	.	.	.	.		1
222	69-2923-4	.	RETAINER, FORWARD GALLEY DOOR SEAL.	.	.	.	.	.		1
223	50-7954-30	.	RETAINER, FORWARD GALLEY DOOR SEAL.	.	.	.	.	.		1
			.	ATTACHING PARTS	.	.	.	.		
			.	SCREW	.	.	.	.		67
224	65-1784-2	.	GATE, FORWARD GALLEY DOOR LOWER	.	.	.	.	.		1
			(FOR REPLACEMENT ORDER 65-1784-4)	.	.	.	.	.		
225	65-1785-2	.	GATE, FORWARD GALLEY DOOR UPPER	.	.	.	.	.		1
			(FOR REPLACEMENT ORDER 65-1785-4)	.	.	.	.	.		
226	69-2866	.	HINGE ASSY, FORWARD GALLEY DOOR GATE.	.	.	.	.	.		2
227	MS20253P2-2320	.	PIN	.	.	.	.	.		1
227A	NAS561P2-3	.	PIN	.	.	.	.	.		2
228	69-2866-1	.	HINGE, FORWARD GALLEY DOOR GATE Y HALF.	.	.	.	.	.		1
229	69-2866-2	.	HINGE, FORWARD GALLEY DOOR GATE X HALF.	.	.	.	.	.		1
230	AN310-5	.	NUT	.	.	.	.	.		1
231	AN960-516L	.	WASHER.	.	.	.	.	.		1
232	AN960-516	.	WASHER.	.	.	.	.	.		2
233	BACB10BH59CF7	.	BEARING	.	.	.	.	.		1
			(OPTIONAL BACB10AF5F9H)	.	.	.	.	.		
233	BACB10AF5F9H	.	BEARING	.	.	.	.	.		1
			(OPTIONAL TO BACB10BH59CF7)	.	.	.	.	.		
234	AN4-7A	.	BOLT.	.	.	.	.	.		2
235	AN960-416	.	WASHER.	.	.	.	.	.		2
236	65-1949-1	.	FITTING, GALLEY DOOR CENTERING PLATE.	.	.	.	.	.		1
237	66-1913	.	PLATE, GALLEY DOOR CENTERING ROLLER ADJUSTMENT.	.	.	.	.	.		1
238	65-2863	.	WINDOW ASSY, 5 IN. DIA OBSERVATION (SEE 56-1, FIG. 9)	.	.	.	.	.		1
239	69-2486	.	DOUBLER, FORWARD GALLEY DOOR WINDOW CUTOUT.	.	.	.	.	.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

STA
1440

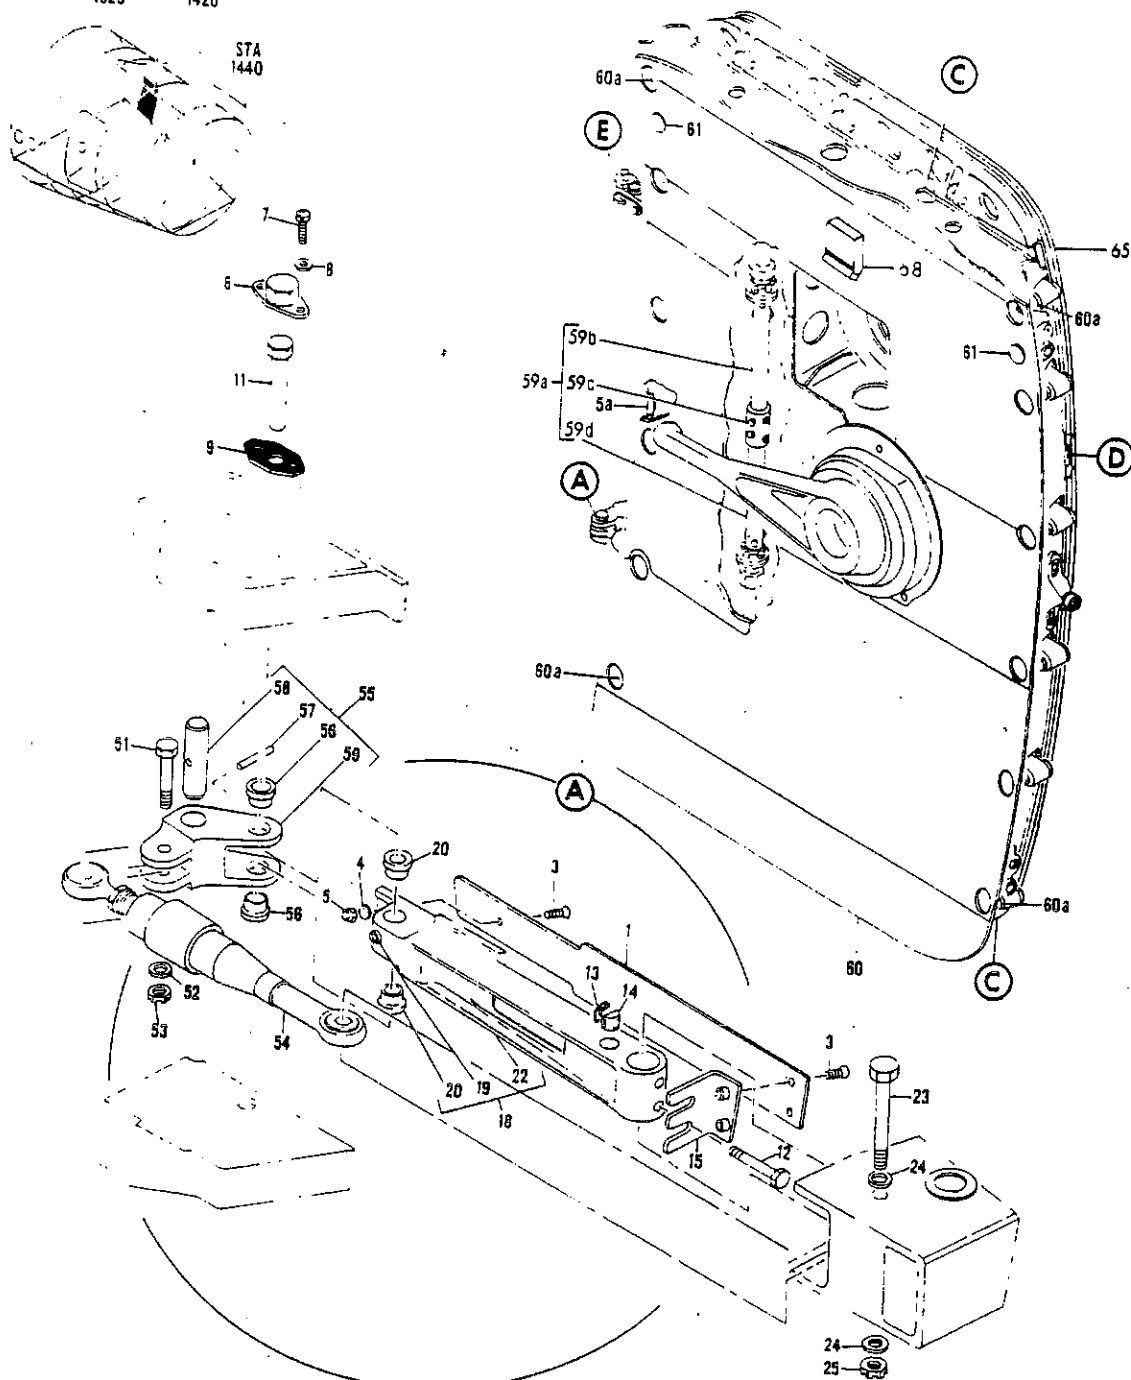


FIGURE 4. DOOR INSTL, AFT GALLEY (DOORS ONLY) (SHEET 1)

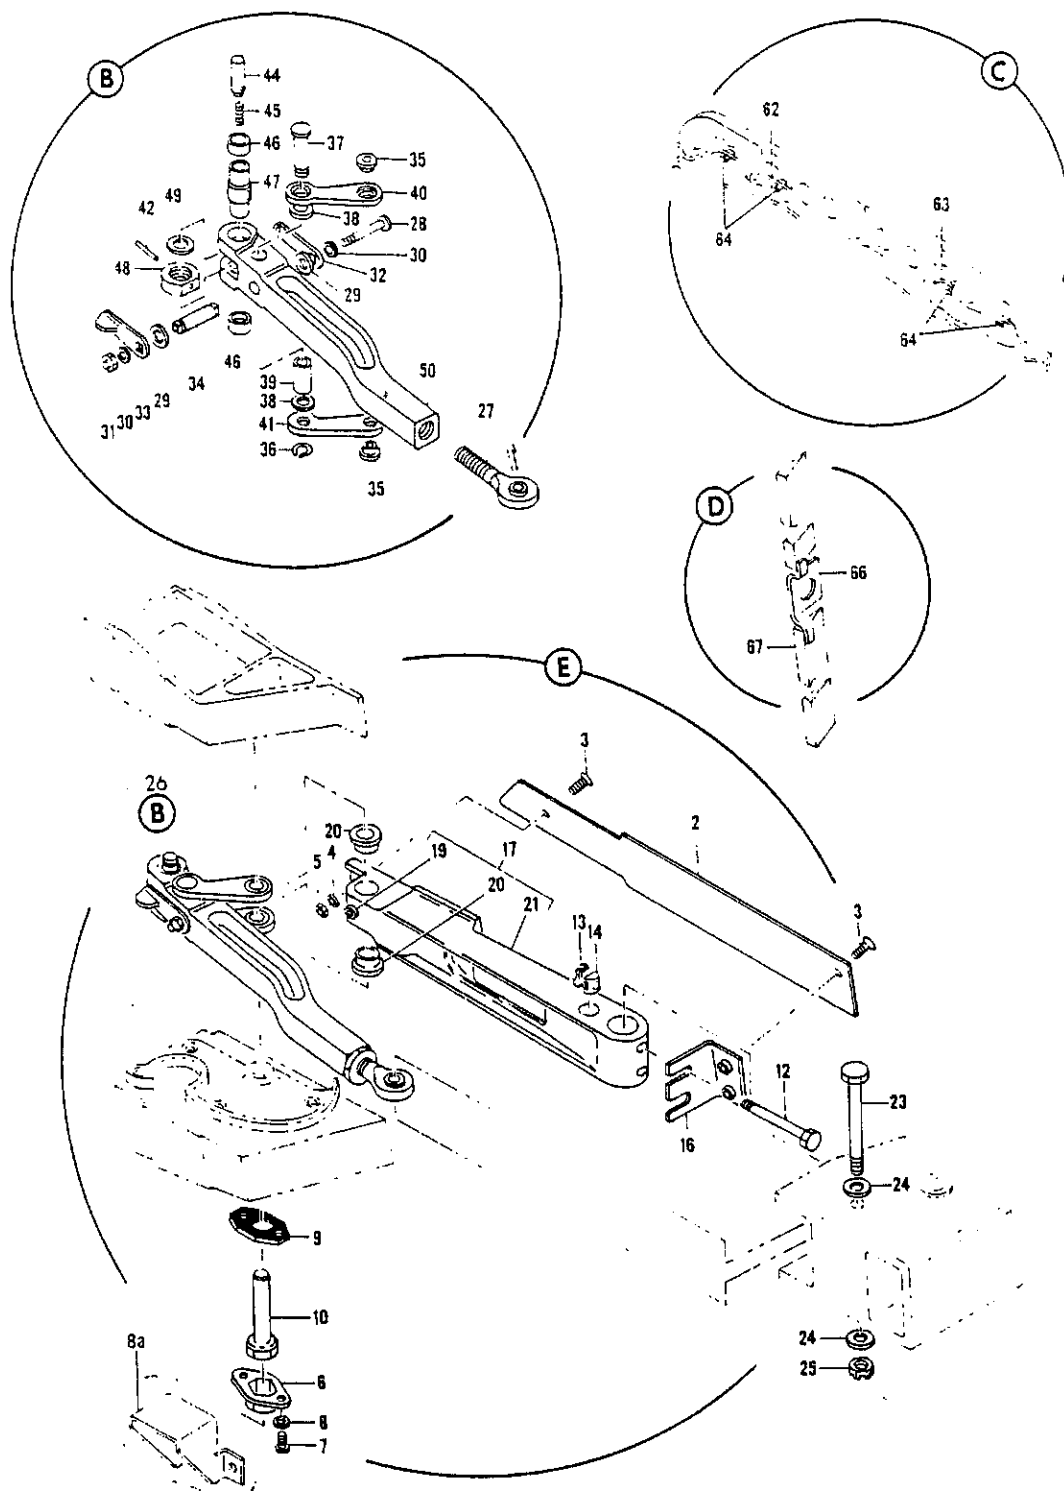


FIGURE 4. DOOR INSTL, AFT GALLEY (DOORS ONLY) (SHEET 2)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R	4	50-7983-1	0150	RF
		50-7983-1	5199	RF
	1	66-2659-1		1
	2	66-2659-2		1
	3	NAS517-3-2		6
	4	AN960-10L		2
	5	NAS679A3W		2
		-----*		
	5A	AN7510-1		1
		ATTACHING PARTS		
		MS2047003		4
		-----*		
	6	66-9439		2
		ATTACHING PARTS		
	7	BACS12AF12		4
	8	AN960-8		4
		-----*		
	9	63-1672		2
	10	66-2617-7		1
	11	66-2617-9		1
	12	50-7954-53		4
		. BOLT, FORWARD GALLEY DOOR (ALTERED FROM NAS1103-26W) (OPTIONALS NAS1303-21 AND BACB30NE3-21 (FOR REPLACEMENT ORDER 8ACB30NE3-21))		
	12	NAS1303-21		4
	12	BACB30NE3-21		4
		. BOLT, (OPTIONAL TO 50-7954-53)		
		. BOLT, (OPTIONAL TO AND REPLACEMENT FOR 50-7954-53)		
	13	BACR10V3		4
	14	BACN10CP3L		4
	15	63-10332-1		1
	16	63-10332-2		1
	17	50-10398-3		1
		. ARM ASSY, HINGE (OPTIONAL AND FOR REPLACEMENT ORDER 50-10398-12)		
	17	50-10398-12		1
		. ARM ASSY, HINGE (OPTIONAL TO AND REPLACEMENT FOR 50-10398-3)		
	18	50-10398-4		1
		. ARM ASSY, HINGE (OPTIONAL AND FOR REPLACEMENT ORDER 50-10398-13)		
	18	50-10398-13		1
		. ARM ASSY, HINGE (OPTIONAL TO AND REPLACEMENT FOR 50-10398-4)		
	19	NAS516-1		1
	20	NAS77A6-32		2
	20	NAS77A6-32P		2
	21	50-10398-7		1
	21	50-10398-16		1
	22	50-10398-8		1
	22	50-10398-17		1
	23	NAS1105-510W		2
	24	BACS11W5		4
	25	AN320-5		2
	26	69-8687		1
	27	BACB10A400M2L		1
	28	AN515C6R24		1
	29	AN960PD616L		2
	30	AN960PD6L		2
	31	NAS679A06		1
	32	63-8337		1
	33	66-8615-1		1
	34	63-2552		1
	35	NAS77A6-19		2
	36	NAS670-37		1
	37	63-2589		1
	38	AN960PD616L		2
	39	NAS76A6-026		1
	40	63-8343-1		1
	41	63-8343-2		1
	42	NAS561C3-12		1
	44	63-2539		1
	45	63-2554		1
	46	NAS76A8-012		2
	47	66-4727		1
	48	66-9968		1
		. COLLAR ASSY, ENTRY DOOR		

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
4 R R R R	49	BACB10067T	. . BEARING							1
	50	69-8663	. . ARM, AFT GALLEY DOOR GUIDE.							1
	51	NAS1105-100W	. . BOLT.							1
	52	AN960-516L	. . WASHER.							1
	53	AN320-5	. . NUT							1
	54	65-2346-3	. . SNUBBER ASSY.						0101	1
			(OPTIONALS 65-2346-1 AND -4)							
	54	65-2346-1	. . SNUBBER ASSY.						0101	1
			(OPTIONAL TO 65-2346-3)							
	54	65-2346-4	. . SNUBBER ASSY.						0101	1
			(OPTIONAL TO 65-2346-3)							
	54	65-2346-4	. . SNUBBER ASSY.						0299	1
			(OPTIONALS 65-2346-1 AND -3)							
	54	65-2346-1	. . SNUBBER ASSY.						0299	1
			(OPTIONAL TO 65-2346-4)							
	54	65-2346-3	. . SNUBBER ASSY.						0299	1
			(OPTIONAL TO 65-2346-4)							
			. . DOORS, (SEE FIG. 20).							
			. . REQUIRED PLACARDS, (SEE 11-2, FIG. 231)							
	55	90-7899	. . LINK ASSY, AFT GALLEY DOOR.							1
	56	NAS77A6-19	. . BUSHING							2
	57	NAS561-3P14	. . PIN							1
	58	63-1015-1	. . DOWEL, DOOR RADIUS LINK							1
	59	90-7899-1	. . LINK, AFT GALLEY DOOR							1
	60	50-7983	. . DOOR ASSY, AFT GALLEY (SEE FIG. 6) (SEE FIG. 5 FOR . . SPARES ASSEMBLY)							1
	60A	66-24075-3	. . PIN, DOOR STOP.							AR
	61	BACP20E23	. . PLUG.							2
		65-42052-2	. . SEAL KEEPER INSTL, ENTRY AND GALLEY DOOR.						5199	2
	62	66-18031-1	. . SPRING, CANTILEVER SEAL KEEPER.						5199	2
	63	66-18031-2	. . SPRING, CANTILEVER SEAL KEEPER.						5199	2
	64	63-9484	. . CLAMP, SPRING RETAINER.						5199	AR
	65	65-3283-15	. . SEAL ASSY, AFT GALLEY DOOR (ALTERED FROM 65-3283)							1
		65-12353	. . SHIM INSTL, ENTRY AND GALLEY DOORS SEAL							1
	66	66-10869	. . CLIP, ENTRY AND GALLEY DOORS SEAL SHIM.							AR
	67	65-12353-1	. . SHIM, ENTRY AND GALLEY DOORS SEAL (EXTRUSION NO. . . BAC1521-585 (ORDER IN FOOT LENGTHS))							AR
			. . FOR REFERENCE TO OTHER DOOR DETAILS, SEE NHA.							
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

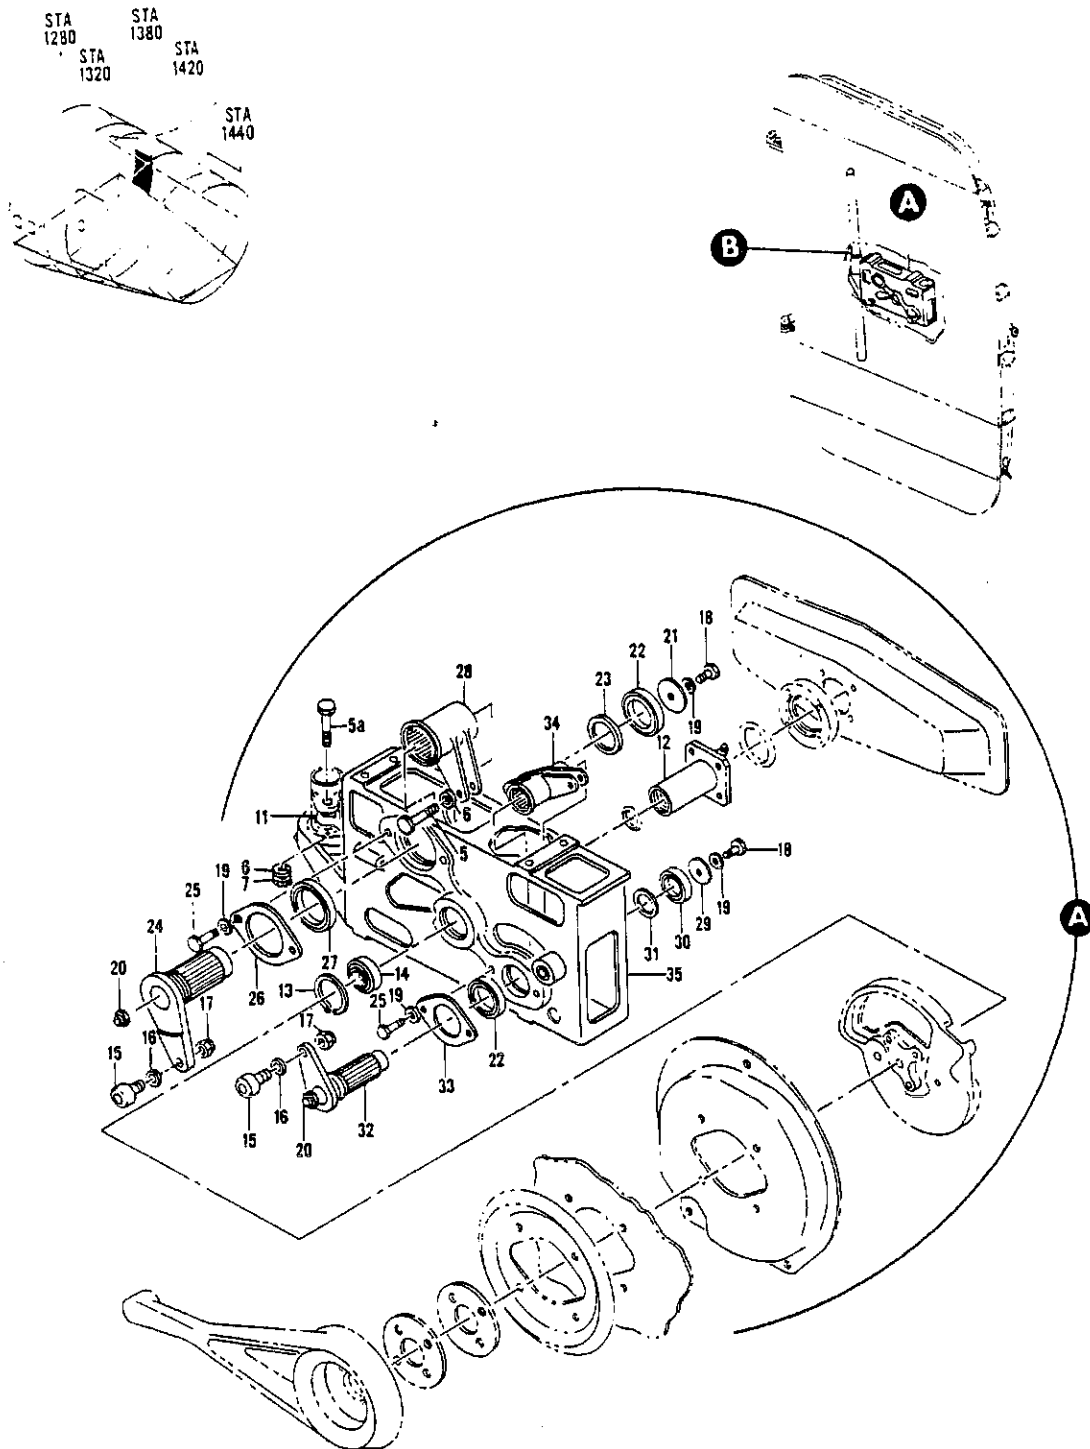


FIGURE 5. SPARES ASSY, AFT GALLEY DOOR MECHANISM (SHEET 1)

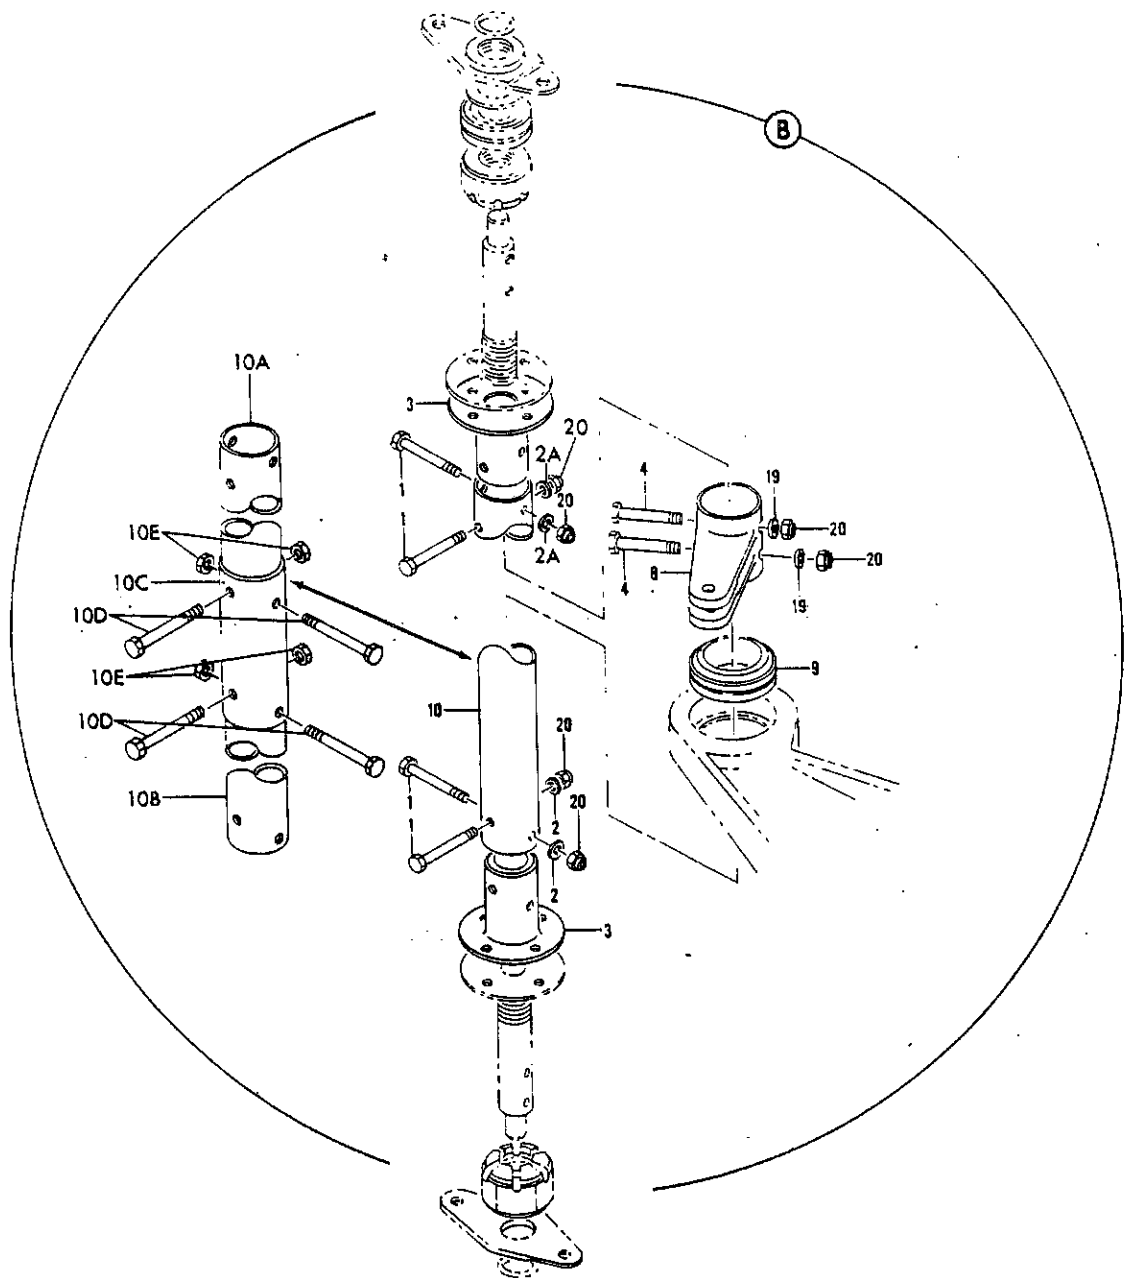


FIGURE 5. SPARES ASSY, AFT GALLEY DOOR MECHANISM (SHEET 2)

NOV 21/90

52-02-5

DETAILED PARTS LIST
52-02-5
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
5	50-7983-175	SPARES ASSY, AFT GALLEY DOOR MECHANISM (SEE FIG. 4, . . . ITEM 60)								RF
1	NAS1103-21	. BOLT.								4
2	AN960-10L	. WASHER.								2
2A	AN960-10	. WASHER.								2
3	66-1356	. TERMINAL, GALLEY DOOR TORQUE TUBE								2
4	NAS1103-24	. BOLT.								2
5	NAS1105-13D	. BOLT.								1
5A	NAS1105-14D	. BOLT.								1
6	AN960-516L	. WASHER.								2
7	AN320C5	. NUT								1
8	60-4466	. BELLCRANK, GALLEY DOOR.								1
9	BACB10C151	. BEARING								1
10	60-7251-1	. TUBE, TORQUE.								1
11	66-2655	. ROD ASSY, GALLEY DOOR MECHANISM CONTROL								1
12	90-7820	. HOUSING ASSY, HANDLE MECHANISM.								1
13	NAS50-162	. RING.								1
14	AN201KP12A	. BEARING								1
15	BACB108H60CF6	. BEARING								2
16	AN960-616	. WASHER.								2
17	AN310-6	. NUT								2
18	AN3-5A	. BOLT.								2
19	AN960-10	. WASHER.								8
20	NAS679A3W	. NUT								8
21	63-1726-1	. RETAINER, GALLEY DOOR HANDLE MECHANISM BEARING.								1
22	BACB10A30DD	. BEARING								2
23	63-1614-1	. SPACER, GALLEY DOOR BELLCRANK								1
24	66-1361	. BELLCRANK, GALLEY DOOR HANDLE MECHANISM								1
25	AN3-7A	. BOLT.								4
26	66-2687-1	. RETAINER, GALLEY DOOR HANDLE MECHANISM.								1
27	BACB10A31DD	. BEARING								1
28	66-1362-3	. BELLCRANK ASSY, GALLEY DOOR HANDLE MECHANISM.								1
28	66-1362-1	. . BELLCRANK, GALLEY DOOR HANDLE MECHANISM								1
29	63-1726	. RETAINER, GALLEY DOOR HANDLE MECHANISM BEARING.								1
30	BACB10A28DD	. BEARING								1
31	63-1614	. SPACER, GALLEY DOOR BELLCRANK								1
32	66-1347	. BELLCRANK, GALLEY DOOR HANDLE MECHANISM								1
33	66-2687	. RETAINER, GALLEY DOOR HANDLE MECHANISM BEARING.								1
34	66-1346-3	. BELLCRANK ASSY, GALLEY DOOR HANDLE MECHANISM.								1
34	66-1346-1	. . BELLCRANK, GALLEY DOOR HANDLE MECHANISM								1
35	65-1753-8	. HOUSING ASSY, GALLEY DOOR LOCK MECHANISM.								1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

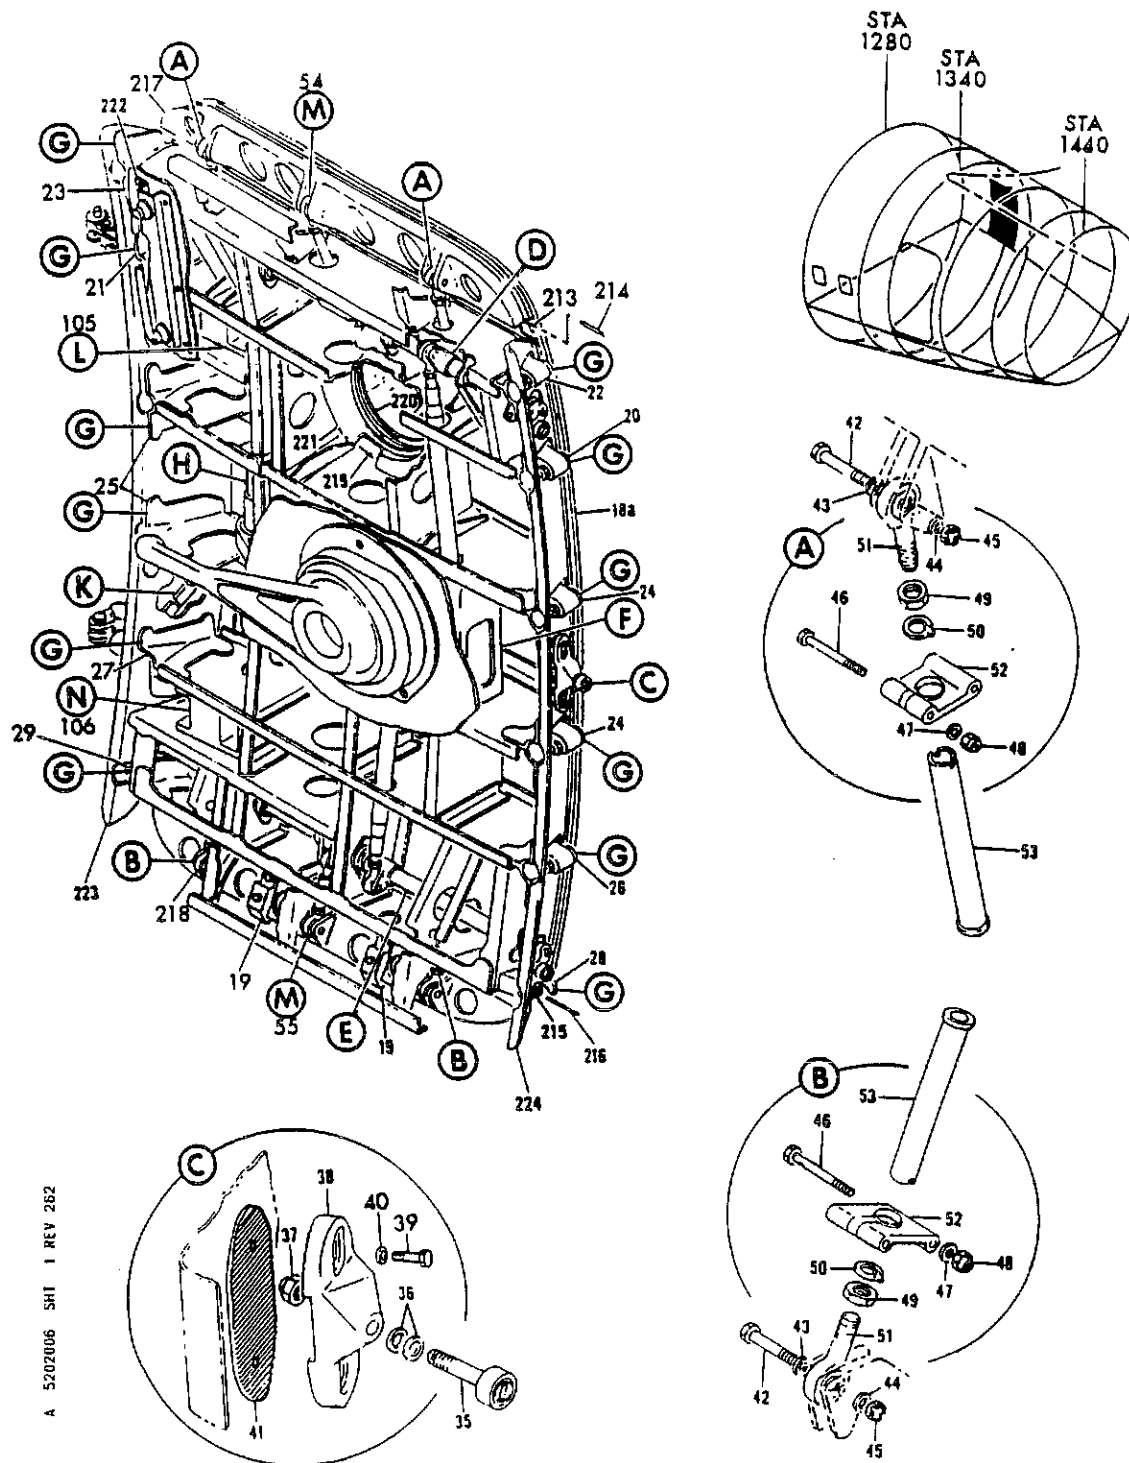


FIGURE 06. DOOR ASSEMBLY, AFT GALLEY (SHEET 1)

DETAILED PARTS LIST
52-02-6
PAGE 0

52-02-6

NOV 21/91

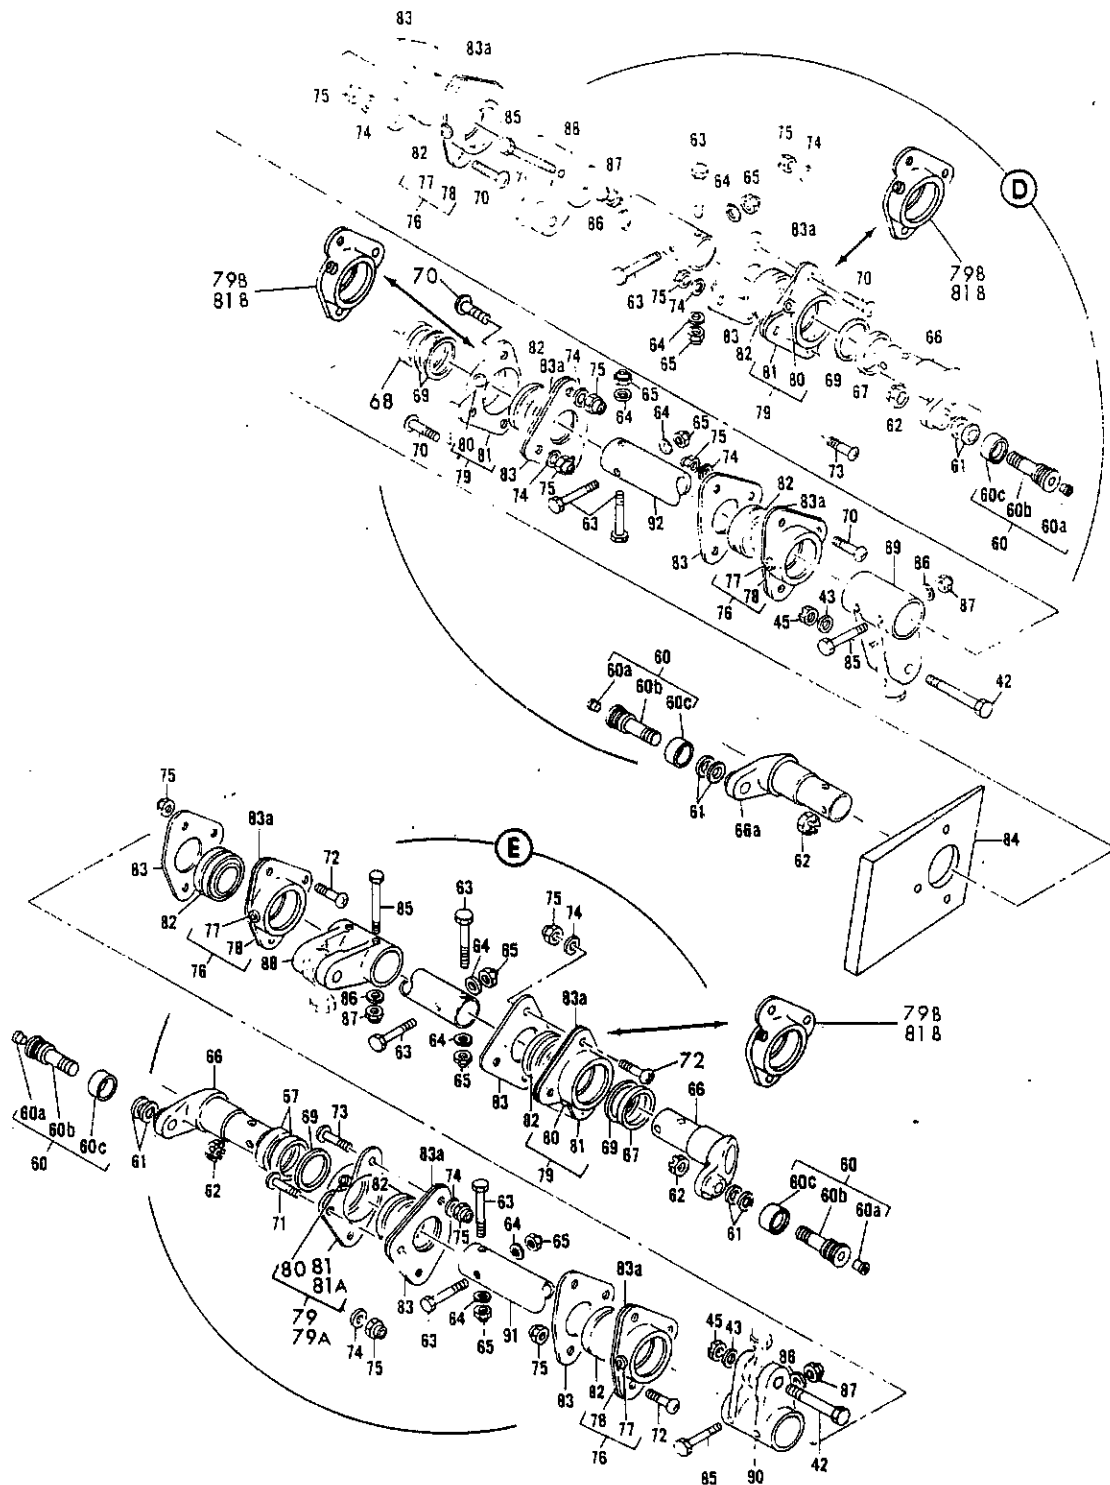


FIGURE 6. DOOR ASSY, AFT GALLEY (SHEET 2)

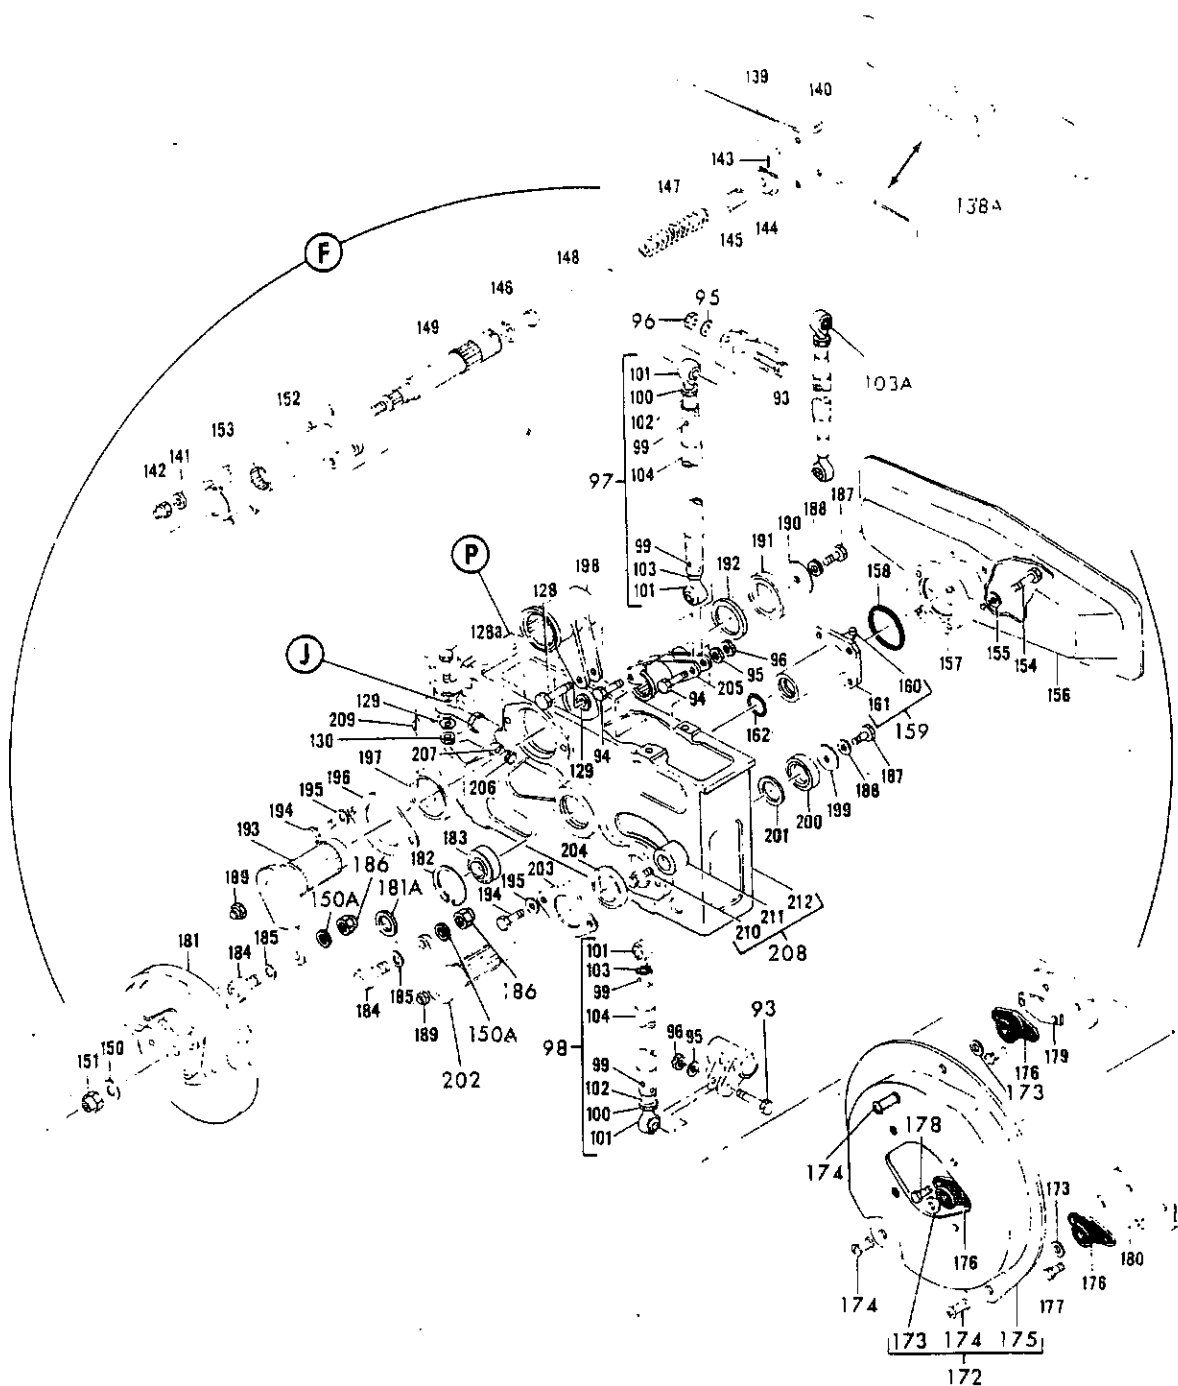


FIGURE 6. DOOR ASSEMBLY, AFT-GALLEY (SHEET 3)

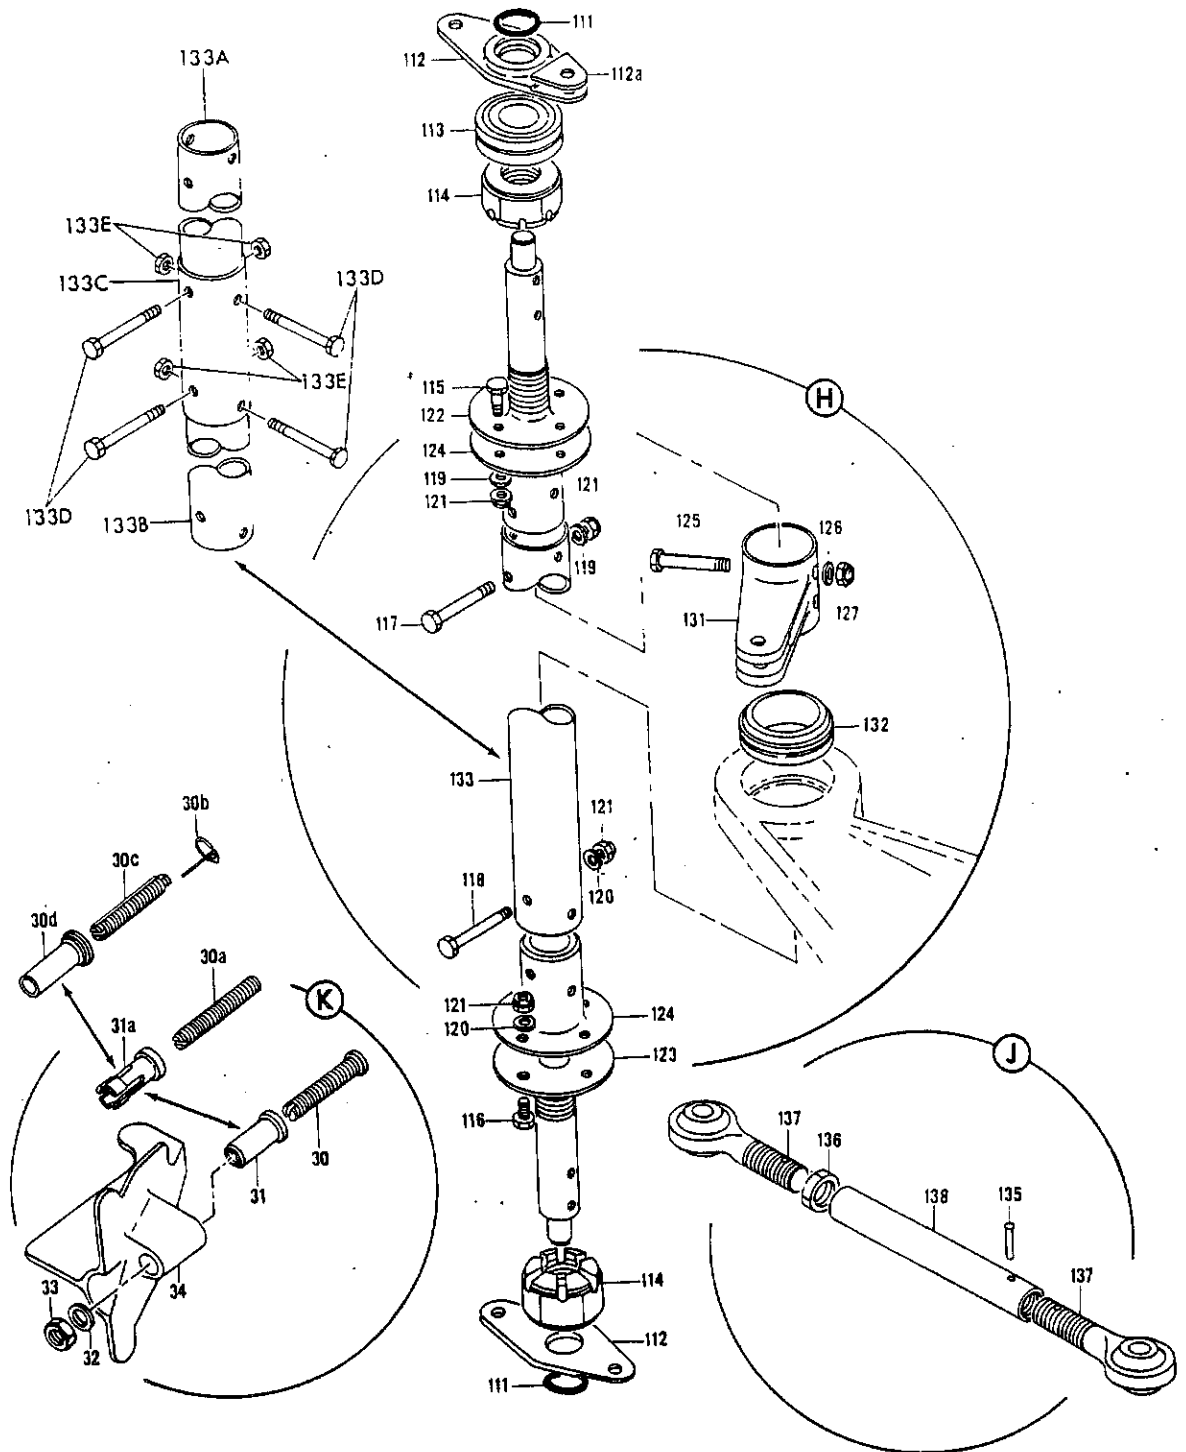


FIGURE 6. DOOR ASSY, AFT GALLEY (SHEET 4)

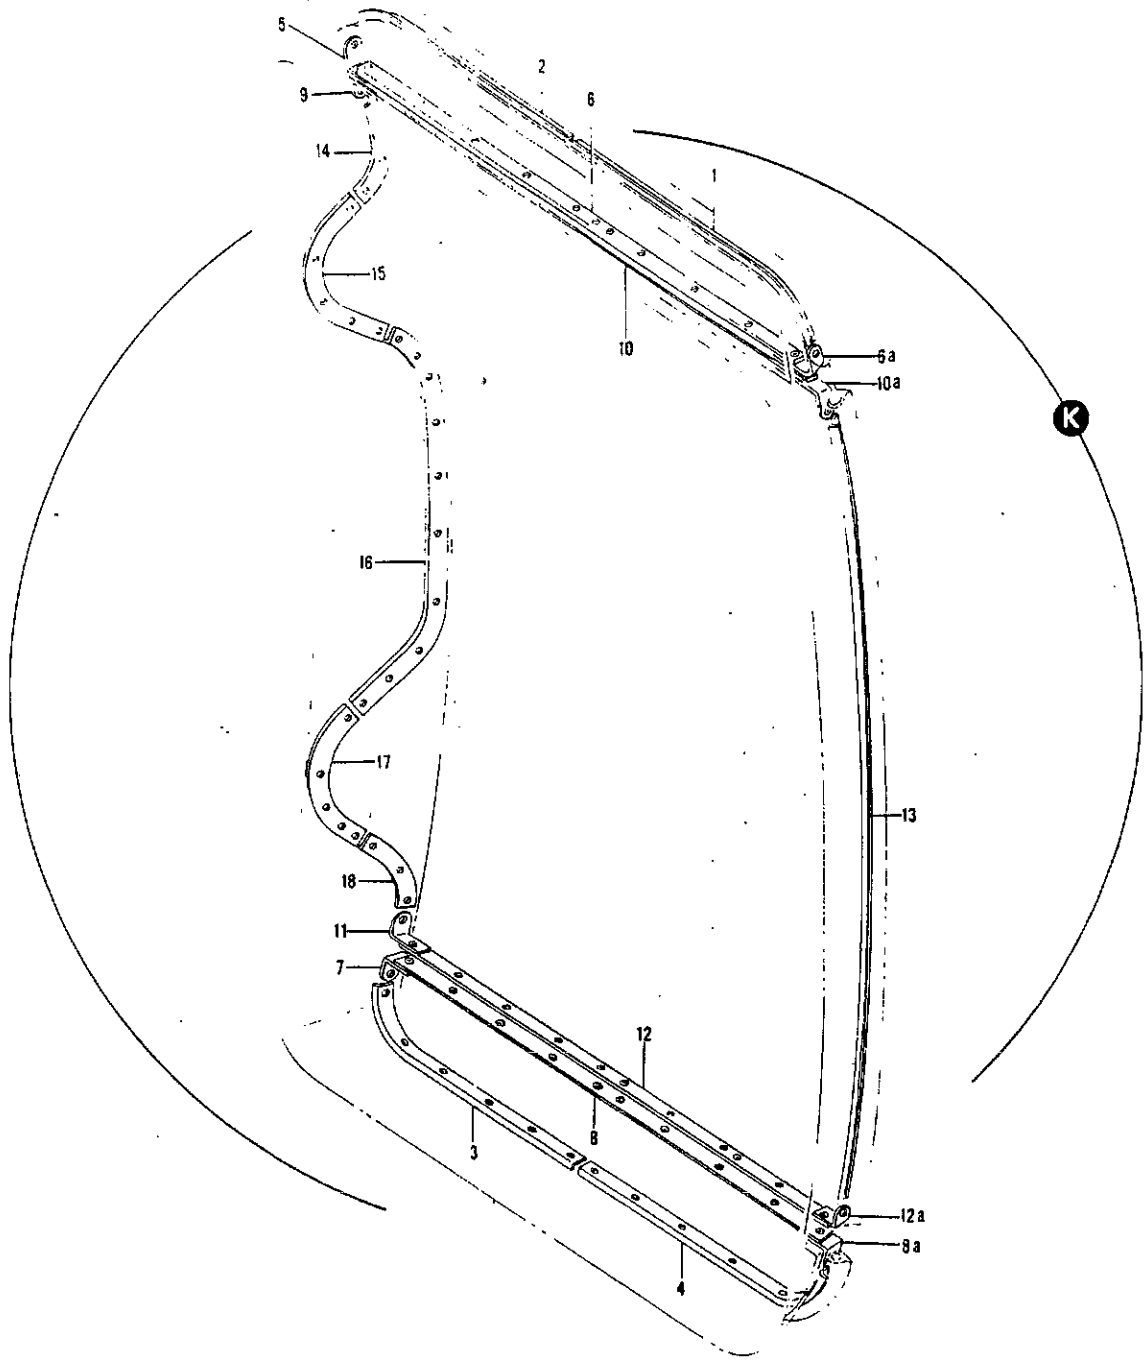


FIGURE 6. DOOR ASSY, AFT GALLEY (SHEET 5)

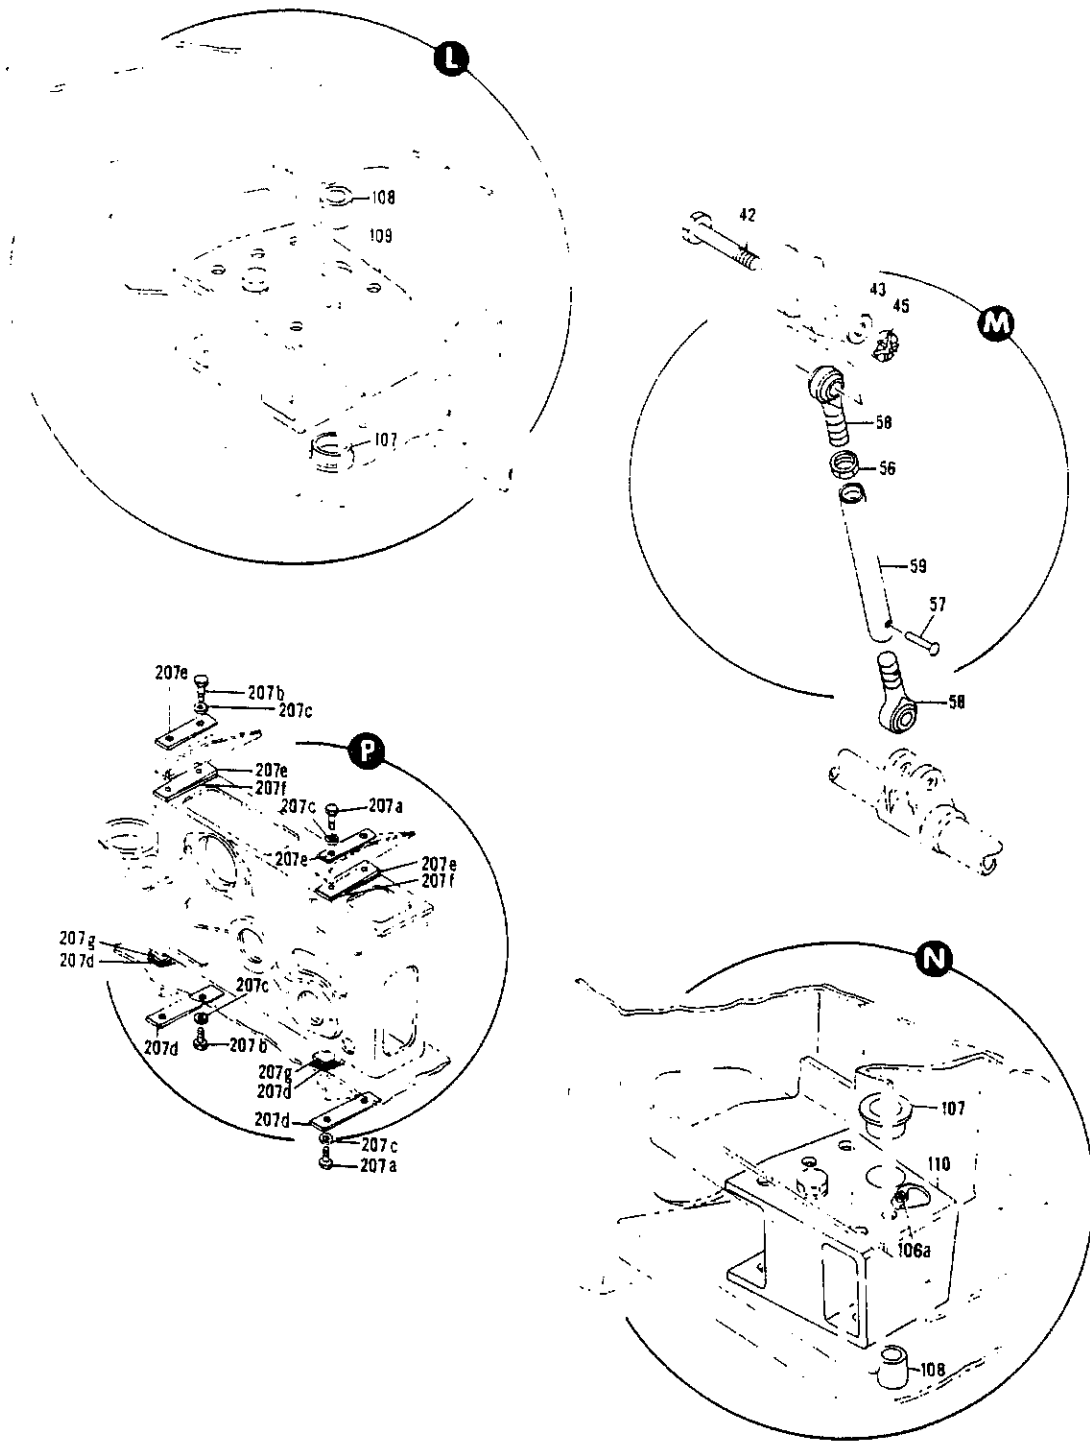


FIGURE 6. DOOR ASSY, AFT GALLEY (SHEET 6)

NOV 21/90

52-02-6

DETAILED PARTS LIST
52-02-6
PAGE 5



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
6	50-7983		DOOR ASSY, AFT GALLEY (SEE FIG. 4, ITEM 60)		RF
1	69-2516		. ANGLE, SEAL RETAINER.		1
2	69-2516-1		. ANGLE, SEAL RETAINER.		1
3	69-2516-2		. ANGLE, SEAL RETAINER.		1
4	69-2516-3		. ANGLE, SEAL RETAINER.		1
	NAS602-10		ATTACHING PARTS . SCREW		24
5	69-9972-803		. RETAINER, AFT GALLEY DOOR SEAL.		1
6	69-9972-1		. RETAINER, AFT GALLEY DOOR SEAL.		1
6A	69-9972-806		. RETAINER, AFT GALLEY DOOR SEAL.		1
	NAS603-12		ATTACHING PARTS . SCREW		2
	AN3-7A		. BOLT.		10
7	69-9972-801		. RETAINER, AFT GALLEY DOOR SEAL.		1
8	69-9972-10		. RETAINER, AFT GALLEY DOOR SEAL.		1
8A	69-9972-805		. RETAINER, AFT GALLEY DOOR SEAL.		1
	NAS602-10		ATTACHING PARTS . SCREW		2
	AN3-7A		. BOLT.		12
9	69-9972-3		. RETAINER, AFT GALLEY DOOR SEAL.		1
10	69-9972-4		. RETAINER, AFT GALLEY DOOR SEAL.		1
10A	69-9972-5		. RETAINER, AFT GALLEY DOOR SEAL.		1
	NAS603-12		ATTACHING PARTS . SCREW		2
	AN3-6A		. BOLT.		9
	AN3-6		. BOLT.		2
	AN960D10		. WASHER.		2
11	69-9972-6		. RETAINER, AFT GALLEY DOOR SEAL.		1
12	69-9972-7		. RETAINER, AFT GALLEY DOOR SEAL.		1
12A	69-9972-8		. RETAINER, AFT GALLEY DOOR SEAL.		1
	NAS603-12		ATTACHING PARTS . SCREW		2
	AN3-6A		. BOLT.		11
13	50-7983-5		. ANGLE, AFT GALLEY DOOR SEAL		1
14	50-7983-137		. ANGLE, AFT GALLEY DOOR SEAL		1
15	50-7983-18		. ANGLE, AFT GALLEY DOOR SEAL		1
16	50-7983-174		. ANGLE, AFT GALLEY DOOR SEAL		1
17	50-7983-73		. ANGLE, AFT GALLEY DOOR SEAL		1
18	50-7983-74		. ANGLE, AFT GALLEY DOOR SEAL		1
	NAS603-10		ATTACHING PARTS . SCREW		3
	NAS603-12		. SCREW		7
	NAS602-10		. SCREW		33
	NAS679A08W		. NUT		1
18A	65-3283-15		. SEAL ASSY, AFT GALLEY DOOR (ALTERED FROM 65-3283)		1
18A	65-3283-17		. SEAL ASSY, AFT GALLEY DOOR.		1
20	65-3280-7		. FITTING ASSY, AFT GALLEY DOOR STOP.	0150	1
			(OPTIONAL 65-3280-9)		
20	65-3280-9		. FITTING ASSY, AFT GALLEY DOOR STOP.	0150	1
			(OPTIONAL TO 65-3280-7)		
20	65-3280-9		. FITTING ASSY, AFT GALLEY DOOR STOP.	5199	1
21	65-2194-7		. FITTING ASSY, AFT GALLEY DOOR STOP.	0150	1
21	65-2194-10		. FITTING ASSY, AFT GALLEY DOOR STOP.	5199	1
22	65-2192-7		. FITTING ASSY, AFT GALLEY DOOR STOP.		1
23	65-2191-7		. FITTING ASSY, AFT GALLEY DOOR STOP.		1
24	65-2189-5		. FITTING ASSY, AFT GALLEY DOOR STOP.		2
25	65-2190-5		. FITTING ASSY, AFT GALLEY DOOR STOP.		2
26	65-3281-4		. FITTING ASSY, AFT GALLEY DOOR STOP.	0150	1
			(OPTIONAL 65-3281-6)		
26	65-3281-6		. FITTING ASSY, AFT GALLEY DOOR STOP.	0150	1
			(OPTIONAL TO 65-3281-4)		
26	65-3281-6		. FITTING ASSY, AFT GALLEY DOOR STOP.	5199	1
27	65-2193-7		. FITTING ASSY, AFT GALLEY DOOR STOP.	0150	1
			(OPTIONAL 65-2193-9)		
27	65-2193-9		. FITTING ASSY, AFT GALLEY DOOR STOP.	0150	1
			(OPTIONAL TO 65-2193-7)		
27	65-2193-9		. FITTING ASSY, AFT GALLEY DOOR STOP.	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R 6 28	65-2195-8.	. FITTING ASSY, AFT GALLEY DOOR STOP. (OPTIONAL 65-2195-10)	0150	1
R 28	65-2195-10	. FITTING ASSY, AFT GALLEY DOOR STOP. (OPTIONAL TO 65-2195-8)	0150	1
R 28	65-2195-10	. FITTING ASSY, AFT GALLEY DOOR STOP.	5199	1
R 29	65-3282-7	. FITTING ASSY, AFT GALLEY DOOR STOP. (OPTIONAL 65-3282-9)	0150	1
R 29	65-3282-9	. FITTING ASSY, AFT GALLEY DOOR STOP. (OPTIONAL TO 65-3282-7)	0150	1
R 29	65-3282-9	. FITTING ASSY, AFT GALLEY DOOR STOP.	5199	1
30B	66-16691-1	. SPRING, DOOR STOP PIN RETAINER.		1
30C	66-12687-1	. PIN, DOOR STOP.		1
30D	66-12688-1	. BUSHING, DOOR STOP.		1
R 34	65-3280-8	. FITTING, AFT GALLEY DOOR STOP (USED ON 65-3280-7)	0150	1
R 34	65-3280-10	. FITTING, (USED ON 65-3280-9)		1
R 34	65-2194-8	. FITTING, AFT GALLEY DOOR STOP (USED ON 65-2194-7)	0150	1
R 34	65-2194-9	. FITTING, AFT GALLEY DOOR STOP (USED ON 65-2194-10) (ALTERED FROM BAC SPEC NO. 65-2196-2)	5199	1
R 34	65-2192-8	. FITTING, AFT GALLEY DOOR STOP (USED ON 65-2192-7)		1
R 34	65-2191-8	. FITTING, AFT GALLEY DOOR STOP (USED ON 65-2191-7)		1
R 34	65-2189-6	. FITTING, AFT GALLEY DOOR STOP (USED ON 65-2189-5)		1
R 34	65-2190-4	. FITTING, AFT GALLEY DOOR STOP (USED ON 65-2190-5)		1
R 34	65-3281-5	. FITTING, AFT GALLEY DOOR STOP (USED ON 65-3281-4)	0150	1
R 34	65-3281-7	. FITTING, (USED ON 65-3281-6)		1
R 34	65-2193-8	. FITTING, AFT GALLEY DOOR STOP (USED ON 65-2193-7)	0150	1
R 34	65-2193-10	. FITTING, AFT GALLEY DOOR STOP (USED ON 65-2193-9)		1
R 34	65-2195-7	. FITTING, AFT GALLEY DOOR STOP (USED ON 65-2195-8)	0150	1
R 34	65-2195-9	. FITTING, AFT GALLEY DOOR STOP (USED ON 65-2195-10)		1
R 34	65-3282-8	. FITTING, AFT GALLEY DOOR STOP (USED ON 65-3282-7)	0150	1
R 34	65-3282-10	. FITTING, (USED ON 65-3282-9)		1
35	BACB10BH59CF9	. BEARING		1
36	AN960-516L	. WASHER.		AR
37	NAS679A5	. NUT		1
38	65-1949-2	. FITTING, GALLEY DOOR CENTERING PLATE. ATTACHING PARTS		1
39	AN4-7A	. BOLT.		2
40	AN960-416	. WASHER.		2
41	66-1913	*-----*		
42	NAS1104-16DW	. PLATE, GALLEY DOOR CENTERING ROLLER ADJUSTMENT.		1
43	BACW10T416A	. BOLT.		8
44	AN960-416	. WASHER.		8
45	AN320-4	. WASHER.		4
46	AN3-17	. NUT		8
47	AN960D10	. BOLT.		8
48	NAS679A3W	. WASHER.		8
49	NAS509-5	. NUT		8
50	NAS513-5	. NUT		4
51	BACB10A278L	. WASHER.		4
52	BSSR7570	. BEARING		4
52	KR7-1	. BEARING ASSY, GATE LINK SELF ALIGNING (V81736). (OPTIONALS KR7-1 (V97613) USB7-101 (V02758))		4
52	USB7-101	. BEARING ASSY, GATE LINK SELF ALIGNING (V97613). (OPTIONALS BSSR7570 (V81736) USB7-101 (V02758))		4
53	66-2620-2	. BEARING ASSY, GATE LINK SELF ALIGNING (V02758). (OPTIONALS BSSR7570 (V81736) KR7-1 (V97613))		4
54	69-2477-2	. ROD, ENTRY AND GALLEY DOORS STOP.		1
55	69-2477-3	. ROD ASSY, GALLEY DOOR GATE CONTROL.		1
56	AN316-5R	. ROD ASSY, GALLEY DOOR GATE CONTROL.		1
57	AN47005	. NUT		1
58	BACB10A187M2L	. RIVET		1
59	66-2641-3	. BEARING		2
59	66-2641-4	. ROD, GALLEY DOOR GATE ACTUATING (USED ON 69-2477-2)		1
60	69-48008	. ROD, GALLEY DOOR GATE ACTUATING (USED ON 69-2477-3)		1
60A	NAS516-1	. ROLLER ASSY, ENTRY AND GALLEY DOOR.		4
60B	69-48008-1	. FITTING		1
60C	69-48008-2	. STUD, ENTRY AND GALLEY DOOR ROLLER.		1
61	AN960C516L	. ROLLER, ENTRY AND GALLEY DOOR		1
62	AN310-5	. WASHER.		AR
63	NAS1103-12W	. NUT		4
64	AN960D10L	. BOLT.		8
65	NAS679A3W	. WASHER.		8
66	90-10001	. NUT		8
66A	90-10001-800	. CRANK, ENTRY DOOR ROLLER CAM. CRANK, ENTRY DOOR ROLLER CAM.		3 1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *707* Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
6	67	63-1769-1	. SPACER, GALLEY DOOR TORQUE TUBE CRANK		4
	68	63-1769-2	. SPACER, GALLEY DOOR TORQUE TUBE CRANK		1
	69	63-1769	. SPACER, GALLEY DOOR TORQUE TUBE CRANK		5
	70	NAS221-11	. SCREW		8
	71	NAS221-13	. SCREW		1
	72	NAS221-10	. SCREW		9
	73	NAS221-12	. SCREW		6
	74	AN960D10	. WASHER		18
	75	NAS679A3W	. NUT		24
	76	66-1075	. HOUSING ASSY, GALLEY DOOR BEARING		4
	77	NAS516-1	. . FITTING		1
	78	66-1075-1	. . HOUSING, GALLEY DOOR BEARING		1
R	79	66-1075-5	. HOUSING ASSY, GALLEY DOOR BEARING	5199	4
R	80	NAS516-1	. . FITTING		1
	81	66-1075-6	. . HOUSING, GALLEY DOOR BEARING	5199	1
	82	BACB10A398GCM2	. BEARING		8
	83	30-3023	. RETAINER, AFT GALLEY DOOR BEARING		8
	83A	66-1075-8	. SHIM, GALLEY DOOR BEARING HOUSING LAMINATED		8
	84	63-1303	. FILLER, AFT GALLEY DOOR		1
	85	NAS1103-16	. BOLT		8
	86	AN960-10L	. WASHER		8
	87	NAS679A3W	. NUT		8
	88	66-1074-1	. BELLCRANK, GALLEY DOOR		2
	89	66-1074-3	. BELLCRANK, GALLEY DOOR		1
	90	66-1074-4	. BELLCRANK, GALLEY DOOR		1
	91	66-2658	. SHAFT, GALLEY DOOR ROLLER CAM		1
	92	66-2658-1	. SHAFT, GALLEY DOOR ROLLER CAM		1
	93	NAS1104-16W	. BOLT		2
	94	NAS1104-12DW	. BOLT		2
	95	AN960-416L	. WASHER		4
	96	AN320-4	. NUT		4
	97	90-7823-6	. ROD ASSY, DOOR MECHANISM CONTROL (OPTIONAL TO 65-28925-7)		1
	97	65-28925-7	. ROD ASSY, DOOR MECHANISM CONTROL (OPTIONAL 90-7823-6)		1
	98	90-7823-7	. ROD ASSY, DOOR MECHANISM CONTROL (OPTIONAL TO 65-28925-8)		1
	98	65-28925-8	. ROD ASSY, DOOR MECHANISM CONTROL (OPTIONAL 90-7823-7)		1
	99	AN47005	. . RIVET		4
	100	AN316-5R	. . NUT		1
	101	BACB10A187M2L	. . BEARING, (USED ON 90-7823-6 AND -7)		2
	101	BACB10A187L	. . BEARING, (USED ON 65-28925-7 AND -8)		2
	102	30-3008	. . ADAPTER, DOOR PUSH ROD (USED ON 90-7823-6 AND -7)		1
	103	30-3008-1	. . ADAPTER, DOOR PUSH ROD (USED ON 65-28925-7 AND -8)		1
	103A	11-667A	. . ROD END, (V73134) (USED ON 65-28925-7 AND -8)		2
	104	60-4454-4	. . ROD, DOOR LATCH CONTROL (USED ON 90-7823-6)		1
	104	60-4454-5	. . ROD, DOOR LATCH CONTROL (USED ON 90-7823-7)		1
	104	65-28925-19	. . ROD, (USED ON 65-28925-7)		1
	104	65-28925-20	. . ROD, (USED ON 65-28925-8)		1
R	105	50-10830-3	. FITTING ASSY, HINGE (OPTIONAL AND FOR REPLACEMENT ORDER 50-10830-19)	0150	1
R	105	50-10830-19	. FITTING ASSY, HINGE (OPTIONAL TO AND REPLACEMENT FOR 50-10830-3)	0150	1
R	105	50-10830-19	. FITTING ASSY, HINGE	5199	1
R	106	50-10830-12	. FITTING ASSY, HINGE (OPTIONAL AND FOR REPLACEMENT ORDER 50-10830-20)	0150	1
R	106	50-10830-20	. FITTING ASSY, HINGE (OPTIONAL TO AND REPLACEMENT FOR 50-10830-12)	0150	1
R	106	50-10830-20	. FITTING ASSY, HINGE	5199	1
		NAS1103-3W	. ATTACHING PARTS		2
		NAS1103-4W	. BOLT		10
		AN960D10	. WASHER		6
		NAS679A3W	. NUT		12
R	106A	NAS516-1	. . FITTING	5199	1
R	107	NAS77A12-32	. . BUSHING, (USED ON 50-10830-3 AND -12)	0150	1
	107	69-55820-1	. . BUSHING, (USED ON 50-10830-19 AND -20)		1
R	108	NAS76A8-020	. . BUSHING, (USED ON 50-10830-3 AND -12)	0150	1
	108	69-55819-1	. . BUSHING, (USED ON 50-10830-19 AND -20)		1
R	109	50-10830-7	. . FITTING, HINGE (USED ON 50-10830-3)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R	6 109	50-10830-23	0150	1
	110	50-10830-16		1
	110	50-10830-24		1
	111	AN6227814		2
	112	90-6757		2
	112A	50-7983-803		1
	113	BACB10C43KP		1
	114	AN310-14		2
	115	NAS1103-4W		4
	116	NAS1103-4W		4
	117	NAS1103-21W		2
	118	NAS1103-21W		2
	119	AN960-10		6
	120	AN960-10L		6
	121	NAS679A3W		12
	122	66-1355-1		1
	122	66-1355-6		1
R	123	66-1355-2	0150	1
	123	66-1355-5		1
	124	66-1356		2
	125	NAS1103-24W		2
	126	AN960-10		2
	127	NAS679A3W		2
	128	NAS1105-13DW		1
	128A	NAS1105-14DW		1
	129	AN960-516L		2
	130	AN320C5		1
	131	60-4466		1
	132	BACB10C151		1
	133	60-7251-1		1
	134	66-2655		1
	135	AN470D5		1
	136	AN316-8R		1
R	137	BACB10A400M2L	0150	2
	138	66-2655-1		1
	139	69-2491-2		1
	140	NAS333CPA11		4
	141	AN960-10		4
	142	NAS679A3W		4
	143	MS39086-13		1
	144	30-3019-1		1
	145	30-3010		1
	146	AN996-14		1
	147	63-2848		1
	148	30-3013-2		1
	149	60-4455		1
	149	60-4455-1		1
	150	63-9386		1
	150A	AN960-616		5199
	151	NAS679A6		5199
R	151	BACN10JD6	0150	1
	152	90-7821		1
	153	90-7811		1
	154	AN3-10A		4
	155	BACS11W3		4
	156	69-2513		1
	157	60-4412		1
	158	AN6227828		1
	159	90-7820		1
	160	NAS516-1		1
	161	90-7820-1		1
	162	AN6227817		1
	172	69-3690		1
	173	GO-2-93		3
	174	2-0-180		3
	175	69-3690-1		1
	176	10-60124		3

MISSING ITEM NUMBERS ARE NOT APPLICABLE

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
6			ATTACHING PARTS		
177	NAS221-11		. SCREW		2
178	NAS221-10		. SCREW		2
179	63-2059		. SHIM, LINING RETAINER SOUNDPROOF FASTENER		1
180	63-2059-1		. SHIM, LINING RETAINER SOUNDPROOF FASTENER		2

181	50-11375-3		. CAM, GALLEY DOOR LOCK MECHANISM CONTROL		1
181A	AN960C1216L		. WASHER.		1
182	NAS50-162		. RING.		1
183	AN201KP12A		. BEARING		1
184	BACB108H60CF6		. BEARING		2
185	AN960-616		. WASHER.		2
186	AN310-6		. NUT		2
187	AN3-5A		. BOLT.		2
188	AN960-10		. WASHER.		2
189	NAS679A3W		. NUT		2
190	63-1726-1		. RETAINER, GALLEY DOOR HANDLE MECHANISM BEARING.		1
191	BACB10A30DD		. BEARING		1
192	63-1614-1		. SPACER, GALLEY DOOR BELLCRANK		1
193	66-1361		. BELLCRANK, GALLEY DOOR HANDLE MECHANISM		1
194	AN3-7A		. BOLT.		4
195	AN960-10		. WASHER.		4
R 196	66-2687-1		. RETAINER, DOOR HANDLE MECHANISM BEARING	0150	1
R 196	66-2687-3		. RETAINER, DOOR HANDLE MECHANISM BEARING	5199	1
197	BACB10A310D		. BEARING		1
198	66-1362-3		. BELLCRANK ASSY, GALLEY DOOR HANDLE MECHANISM.		1
198	66-1362-1		. . BELLCRANK, GALLEY DOOR HANDLE MECHANISM		1
199	63-1726		. RETAINER, GALLEY DOOR HANDLE MECHANISM BEARING.		1
200	BACB10A28DD		. BEARING		1
201	63-1614		. SPACER, GALLEY DOOR BELLCRANK		1
R 202	66-1347		. BELLCRANK, GALLEY DOOR HANDLE MECHANISM		1
R 203	66-2687		. RETAINER, DOOR HANDLE MECHANISM BEARING	0150	1
203	66-2687-2		. RETAINER, DOOR HANDLE MECHANISM BEARING	5199	1
204	BACB10A30DD		. BEARING		1
205	66-1346-3		. BELLCRANK ASSY, GALLEY DOOR HANDLE MECHANISM.		1
206	66-1346-1		. . BELLCRANK, GALLEY DOOR HANDLE MECHANISM		1
207	NAS565-73		. BOLT.		1
207	AN316-5R		. NUT		1
207A	AN174-10A		. BOLT.		6
207B	AN174-11A		. BOLT.		2
207C	AN960D416		. WASHER.		8
207D	50-7983-71		. FILLER, AFT GALLEY DOOR TAPERED		4
207E	66-2823		. SHIM, AFT GALLEY DOOR TAPERED		4
207F	BACS40A12-44		. SHIM.		AR
207G	BACS40E12-44		. SHIM.		AR
208	65-1753-8		. HOUSING ASSY, GALLEY DOOR LOCK MECHANISM.		1
209	NAS516-1		. FITTING		1
210	AN3-10A		. BOLT.		1
211	63-1790		. . STOP, GALLEY DOOR HANDLE MECHANISM.		1
212	65-1753-7		. HOUSING, GALLEY DOOR LOCK MECHANISM		1
213	50-7983-808		. HINGE, (ALTERED FROM MS20001P5-2470).		1
214	AN253-2-2340		. PIN, AFT GALLEY DOOR HINGE.		1
215	50-7983-809		. HINGE, (ALTERED FROM MS20001P5-2400).		1
216	AN253-2-2280		. PIN		1
217	50-11384-2		. GATE, AFT GALLEY DOOR UPPER		1
R 218	50-11385-3		. GATE, AFT GALLEY DOOR LOWER	0150	1
R 218	50-11385-3		. GATE, AFT GALLEY DOOR LOWER	5199	1
			(OPTIONAL 50-11385-5)		
R 218	50-11385-5		. GATE, AFT GALLEY DOOR LOWER	5199	1
			(OPTIONAL TO 50-11385-3)		
219	69-2517		. RETAINER ASSY, AFT GALLEY DOOR OBSERVATION WINDOW		1
220	90-7897		. DOUBLER, AFT GALLEY DOOR OBSERVATION WINDOW		1
221	65-2863-1		. WINDOW ASSY, 5 IN. DIAMETER OBSERVATION (SEE 56-1, ...		1
			FIG. 9)		
			ATTACHING PARTS		
	NAS221-9		. SCREW		3

222	69-5839-2		. BRACKET INSTL, AFT GALLEY DOOR ASSIST HANDLE (SEE		1
			25-10, FIG. 66)		
223	50-7983-2		. REVEAL, AFT GALLEY DOOR FORWARD		1
224	50-7983-169		. REVEAL, AFT GALLEY DOOR AFT		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					



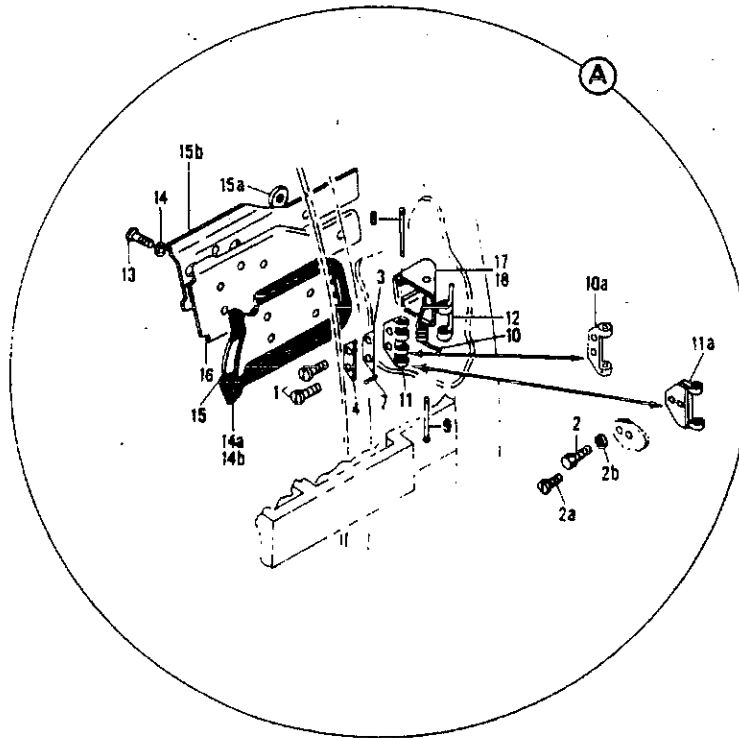


FIGURE 8. GATE INSTL, AFT GALLEY DOOR HINGE

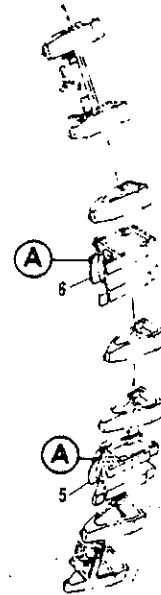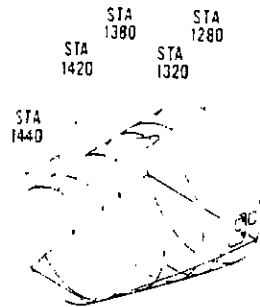

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8	65-12056		GATE INSTL, AFT GALLEY DOOR LOWER HINGE (SEE 53-2, FIG. 3, ITEM 47)		RF
	65-12056-1		GATE INSTL, AFT GALLEY DOOR UPPER HINGE (SEE 53-2, FIG. 3, ITEM 48)		RF
1	NAS517-4-2		. SCREW, (USED ON 65-12056)		2
1	NAS517-4-3		. SCREW, (USED ON 65-12056-1)		2
3	65-12056-7		. SHIM, AFT GALLEY DOOR HINGE GATE LAMINATED (USED ON 65-12056)		1
4	65-12056-804		. PLATE, AFT GALLEY DOOR HINGE GATE (USED ON 65-12056)		1
5	65-12056-11		. HINGE ASSY, AFT GALLEY DOOR HINGE GATE LOWER (USED ON 65-12056)		1
6	65-12056-13		. HINGE ASSY, AFT GALLEY DOOR HINGE GATE UPPER (USED ON 65-12056-1)		1
7	NAS561-2-8		. . PIN		1
8	AN393-89		. . PIN		1
9	AN393-71		. . PIN		1
10	66-10908		. . SPRING, AFT GALLEY DOOR HINGE FLAP TORSION (USED ON 65-12056-11 AND -13)		1
10A	63-9327-4		. . HINGE ASSY, AFT GALLEY DOOR HINGE GATE (USED ON 65-12056-11)		1
11	66-10814		. . HINGE HALF ASSY, AFT GALLEY DOOR UPPER (USED ON 65-12056-13)		1
12	66-9137		. . HINGE HALF, AFT GALLEY DOOR FLAP GATE		1
13	NAS221-9		. . SCREW		4
14	BACW10P136AL		. . WASHER		4
14A	69-9236-9		. . FLAP ASSY, AFT GALLEY DOOR LOWER HINGE (OPTIONAL 69-9236) (USED ON 65-12056-5 AND -11)		1
14A	69-9236		. . FLAP ASSY, AFT GALLEY DOOR LOWER HINGE (USED ON 65-12056-5 AND -11)		1
			(OPTIONAL TO 69-9236-9)		
14B	69-9235-8		. . FLAP ASSY, AFT GALLEY DOOR UPPER HINGE (OPTIONAL 69-9235) (USED ON 65-12056-6, -12 AND -13)		1
14B	69-9235		. . FLAP ASSY, AFT GALLEY DOOR UPPER HINGE (USED ON 65-12056-6, -12 AND -13)		1
			(OPTIONAL TO 69-9235-8)		
15	63-10297		. . . STRIP, GALLEY DOOR RUB.		1
15A	65-14089-7		. . WASHER, AFT GALLEY DOOR FLAP.		3
15B	69-10113-3		. . SHIELD, ENTRY AND GALLEY DOOR HINGE		1
16	66-9154		. . CHANNEL, AFT GALLEY DOOR HINGE FLAP (USED ON 65-12056-5 AND -11)		1
			. . CHANNEL, AFT GALLEY DOOR HINGE FLAP (USED ON 65-12056-6, -12 AND -13)		1
16	66-9154-1		. . CHANNEL, AFT GALLEY DOOR HINGE FLAP (USED ON 65-12056-6, -12 AND -13)		1
17	69-18062-802		. . BRACKET, AFT GALLEY DOOR HINGE FLAP (USED ON 65-12056-5 AND -11)		1
18	69-18062-803		. . BRACKET, AFT GALLEY DOOR HINGE FLAP (USED ON 65-12056-6, -12 AND -13)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

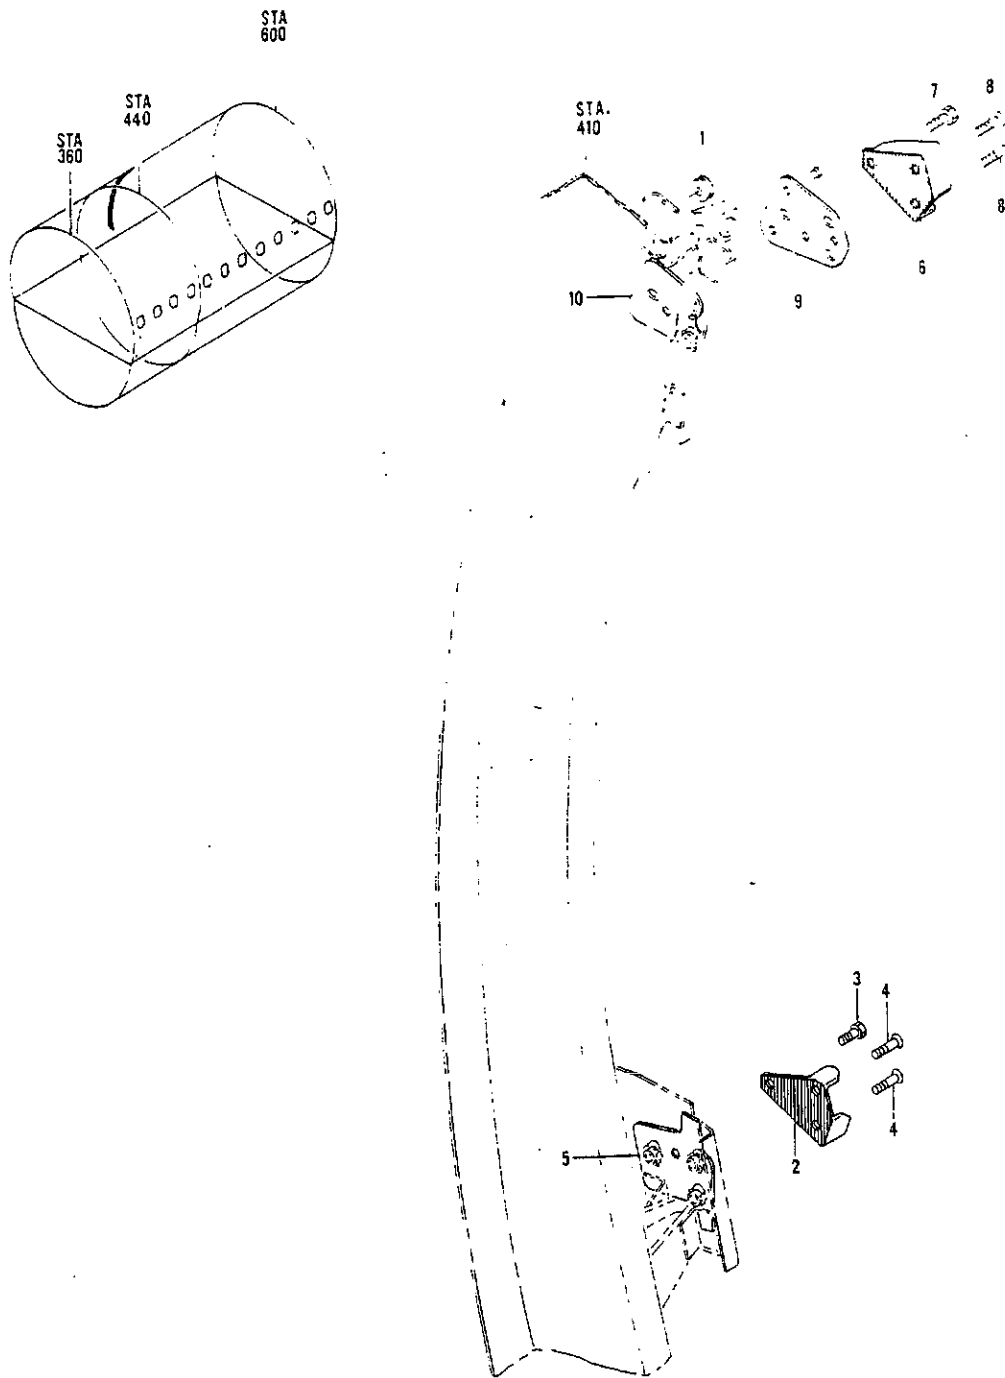


FIGURE 9. SUPPORT INSTL, FORWARD GALLEY DOOR ROLLER CAMPLATE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
9	50-9708		SUPPORT INSTL, FORWARD GALLEY DOOR ROLLER CAMPLATE (SEE 53-2, FIG. 2, ITEM 108)		RF
1	AN931-4-7		. GROMMET		1
2	50-10893-14		. FITTING, GALLEY DOOR ROLLER CAM		1
			ATTACHING PARTS		
3	AN4-6A		. BOLT.		1
4	NAS517-4-7		. SCREW		2
			-----*		
5	66-1679		. PLATE, FORWARD GALLEY DOOR LOWER ROLLER CAM FITTING .		1
			ATTACH		
6	50-10893-15		. FITTING, GALLEY DOOR ROLLER CAM		1
			ATTACHING PARTS		
7	AN4-7A		. BOLT.		1
8	NAS517-4-9		. SCREW		2
			-----*		
9	60-7203-2		. PLATE, FORWARD GALLEY DOOR UPPER ROLLER CAM FITTING .		1
			ATTACH		
10	66-2397-1		. PLATE, FORWARD GALLEY DOOR ROLLER CAM FITTING		1
			ADJUSTMENT.		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

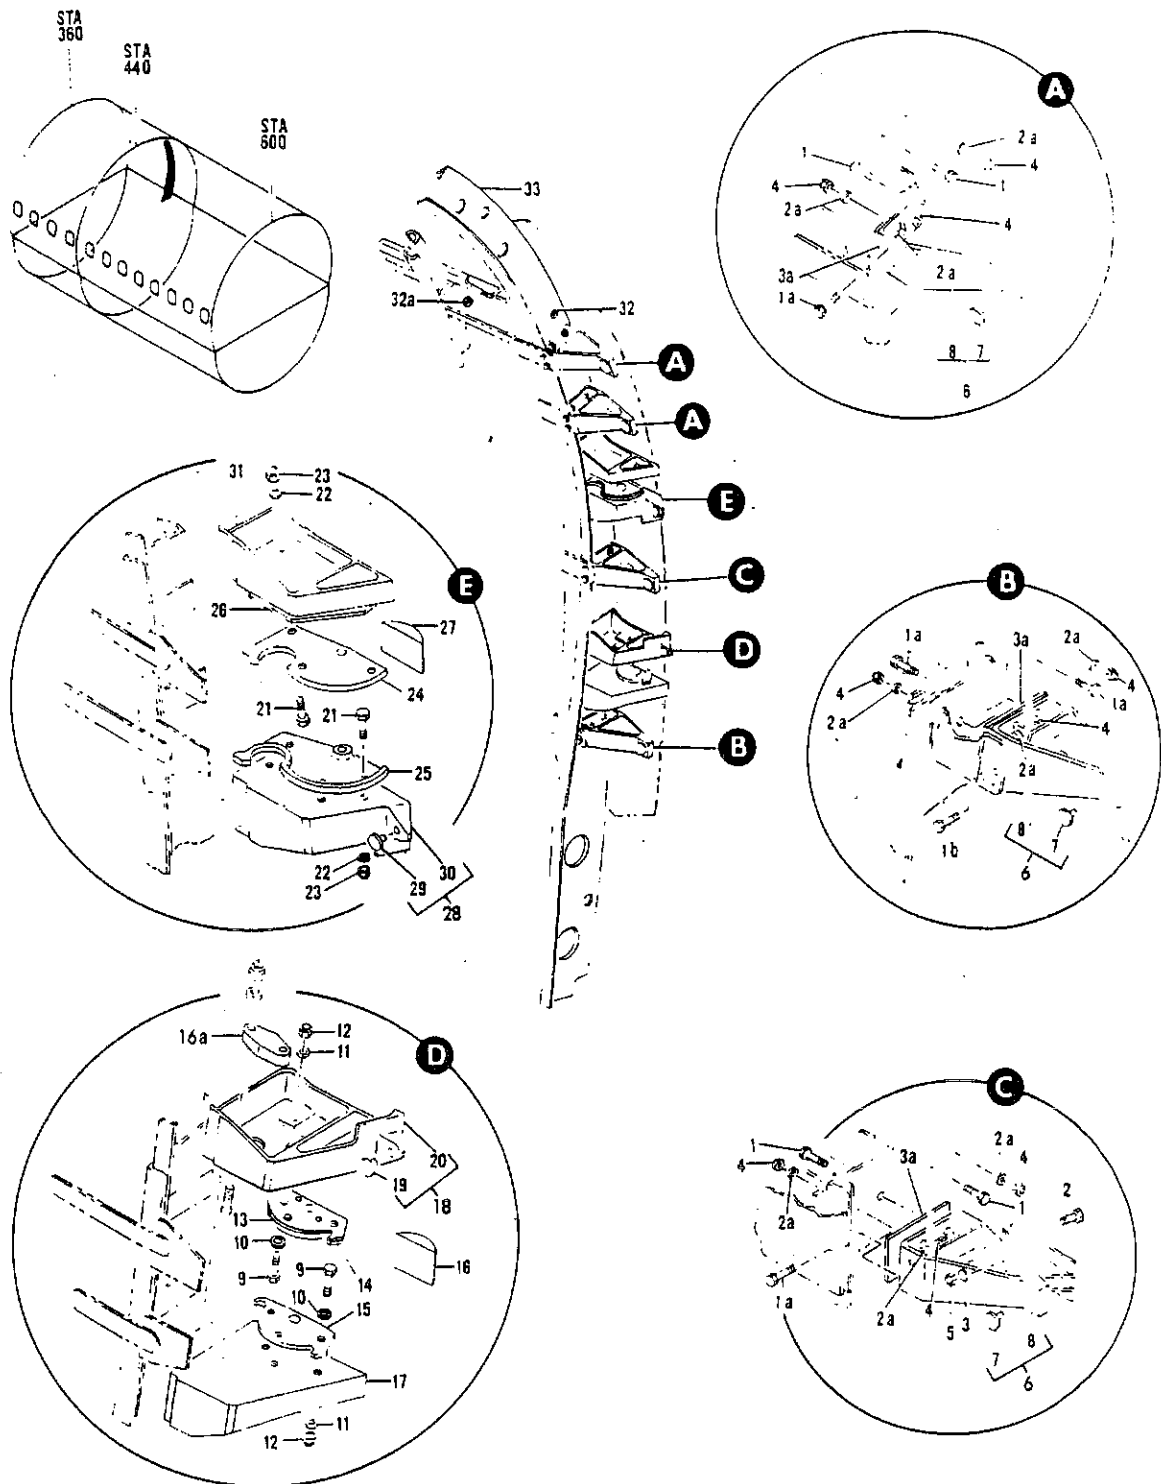


FIGURE 10. FRAME INSTL, STATION 410 FORWARD GALLEY DOOR



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
10	50-7955		FRAME INSTL, STATION 410 FORWARD GALLEY DOOR (SEE 53-2, FIG. 2, ITEM 37)		RF
1	NAS1304-5W		. BOLT.		10
1A	NAS1304-6W		. BOLT.		10
1B	NAS1304-4W		. BOLT.		2
2	AN3DD3		. BOLT.		4
2A	AN960D416		. WASHER.		24
3	AN960PD10L		. WASHER.		4
3A	8ACS40B32-44		. SHIM.		AR
4	NAS679A4W		. NUT		24
5	NAS679A3W		. NUT		4
6	90-7868-6		. STOP ASSY, GALLEY DOOR.		4
7	69-16954-2		. . PLATE, ENTRY DOOR BEARING (USED ON 90-7868-6) . . . (OPTIONAL 69-16954-3)		1
7	69-16954-3		. . PLATE, ENTRY DOOR BEARING (USED ON 50-7868-6) . . . (OPTIONAL TO 69-16954-2)		1
8	90-7868-7		. . FITTING, GALLEY DOOR STOP (USED ON 90-7868-6) . . .		1
9	8ACB30ABP3-9A		. BOLT.		6
10	AN960D10		. WASHER.		6
11	AN960D10L		. WASHER.		6
12	NAS679A3W		. NUT		6
13	50-7955-24		. SHIM, STATION 410 FORWARD GALLEY FRAME.		AR
14	69-1644-3		. PLATE, FORWARD GALLEY DOOR LOWER HINGE CAM.		1
15	69-1644-4		. PLATE, FORWARD GALLEY DOOR LOWER HINGE CAM.		1
16	50-7955-62		. PLUG, STATION 410 FORWARD GALLEY DOOR FRAME		1
16A	69-42601-1		. CAP		1
			ATTACHING PARTS		
	NAS623-2-12		. SCREW		2
	AN960D8L		. WASHER.		2
	NAS679A08W		. NUT		2
			-----*		
17	50-10204		. FITTING, FORWARD GALLEY DOOR HINGE SUPPORT. (OPTIONAL TO 50-10204-2)	0150	1
17	50-10204-2		. FITTING, FORWARD GALLEY DOOR HINGE SUPPORT. (OPTIONAL 50-10204)	0150	1
17	50-10204-2		. FITTING, FORWARD GALLEY DOOR HINGE SUPPORT.	5199	1
18	50-10205-4		. FITTING ASSY, FORWARD GALLEY DOOR HINGE SUPPORT		1
19	69-16954-2		. . PLATE, ENTRY DOOR BEARING (USED ON 50-10205-4). . . . (OPTIONAL 69-16954-3)		1
19	69-16954-3		. . PLATE, ENTRY DOOR BEARING (USED ON 50-10205-4). . . . (OPTIONAL TO 69-16954-2)		1
20	50-10205-5		. . FITTING, FORWARD GALLEY DOOR HINGE (USED ON 50-10205-4)		1
21	NAS1103-3W		. BOLT.		8
22	AN960D10L		. WASHER.		8
23	NAS679A3W		. NUT		8
24	69-8628-4		. PLATE, FORWARD GALLEY DOOR LOWER GUIDE.	0150	1
24	69-8628-6		. PLATE, FORWARD GALLEY DOOR LOWER GUIDE.	5199	1
25	69-8628-5		. PLATE, FORWARD GALLEY DOOR UPPER GUIDE.	0150	1
25	69-8628-7		. PLATE, FORWARD GALLEY DOOR UPPER GUIDE.	5199	1
26	60-4457-3		. SHIM, GALLEY DOOR		AR
27	50-7955-63		. PLUG, STATION 410 FORWARD GALLEY DOOR FRAME		1
28	50-10202-4		. FITTING ASSY, FORWARD GALLEY DOOR HINGE SUPPORT		1
29	69-16954-2		. . PLATE, ENTRY DOOR BEARING (USED ON 50-10202-4). . . .		1
30	50-10202-5		. . FITTING, FORWARD GALLEY DOOR HINGE SUPPORT (USED ON 50-10202-4)		1
31	50-10203		. FITTING, FORWARD GALLEY DOOR HINGE SUPPORT. (OPTIONAL TO 50-10203-2)	0150	1
31	50-10203-2		. FITTING, FORWARD GALLEY DOOR HINGE SUPPORT. (OPTIONAL 50-10203)	0150	1
31	50-10203-2		. FITTING, FORWARD GALLEY DOOR HINGE SUPPORT.	5199	1
32	AN931-4-7		. GROMMET		1
33	50-7955-59		. FRAME, STATION 410 FORWARD GALLEY DOOR.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

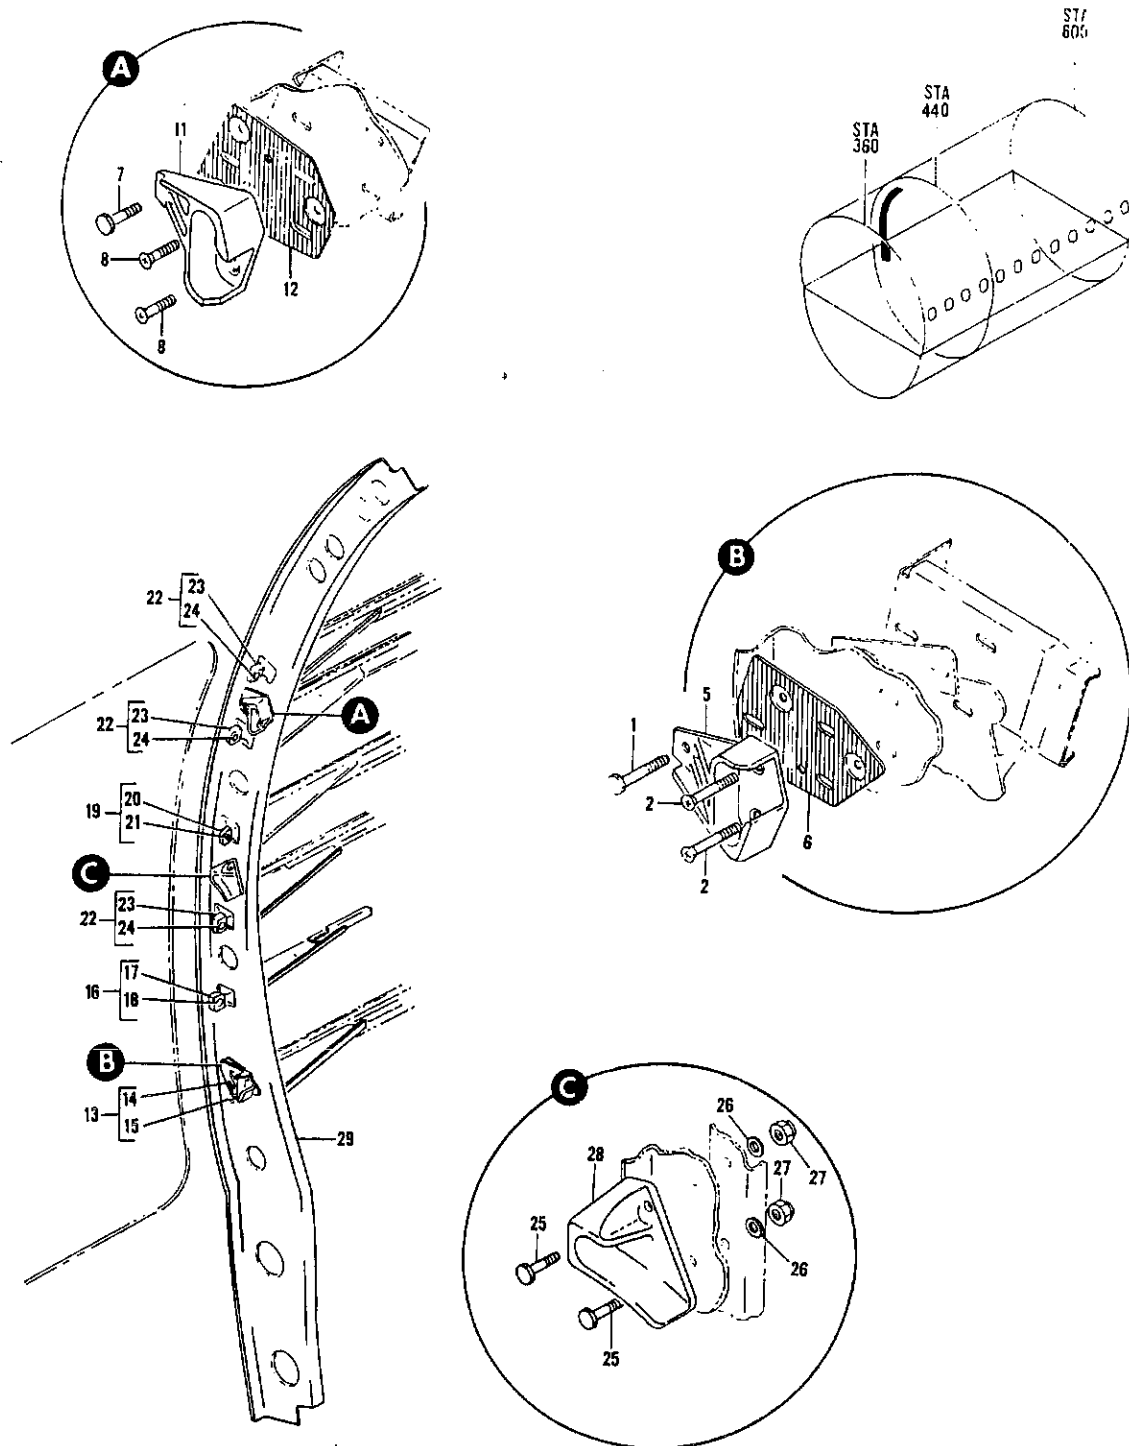


FIGURE 11. FRAME INSTL. STATION 443.5 FORWARD GALLEY DOOR



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
11	50-7956	FRAME INSTL, STATION 443.5 FORWARD GALLEY DOOR (SEE . . 53-2, FIG. 2, ITEM 38)								RF
1	AN4C7A	. BOLT.								1
2	NAS517-4-9	. SCREW								2
5	50-10893-13	. FITTING, GALLEY DOOR ROLLER CAM								1
6	60-6912-2	. PLATE, FORWARD GALLEY DOOR ROLLER CAM FITTING LOWER . ATTACH								1
7	AN4C6A	. BOLT.								1
8	NAS517-4-6	. SCREW								2
11	50-10893-14	. FITTING, GALLEY DOOR ROLLER CAM								1
12	60-7203-1	. PLATE, FORWARD GALLEY DOOR ROLLER CAM FITTING UPPER . ATTACH								1
13	90-9137-21	. FITTING ASSY, STATION 443.50 FORWARD GALLEY DOOR STOP								1
14	69-16954-2	. . PLATE, DOOR STOP FITTING BEARING (USED ON 90-9137-21)								1
15	90-9137-25	. . FITTING, STATION 443.50 FORWARD GALLEY DOOR STOP. . (USED ON 90-9137-21)								1
16	90-9137-20	. FITTING ASSY, STATION 443.50 FORWARD GALLEY DOOR STOP								1
17	69-16954-2	. . PLATE, DOOR STOP FITTING BEARING (USED ON 90-9137-20)								1
18	90-9137-24	. . FITTING, STATION 443.50 FORWARD GALLEY DOOR STOP. . (USED ON 90-9137-20)								1
19	90-9137-19	. FITTING ASSY, STATION 443.50 FORWARD GALLEY DOOR STOP								1
20	69-16954-2	. . PLATE, DOOR STOP FITTING BEARING (USED ON 90-9137-19)								1
21	90-9137-23	. . FITTING, STATION 443.50 FORWARD GALLEY DOOR STOP. . (USED ON 90-9137-19)								1
22	90-9137-18	. FITTING ASSY, STATION 443.50 FORWARD GALLEY DOOR STOP								3
23	69-16954-2	. . PLATE, DOOR STOP FITTING BEARING (USED ON 90-9137-18)								1
24	90-9137-22	. . FITTING, STATION 443.50 FORWARD GALLEY DOOR STOP. . (USED ON 90-9137-18)								1
25	AN4C5A	. BOLT.								2
26	AN960C416	. WASHER.								2
27	NAS679A4W	. NUT								2
28	65-1948-1	. FITTING, GALLEY DOOR CENTERING CAM.								1
29	50-7956-1	. FRAME, STATION 443.5 FORWARD GALLEY DOOR.								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

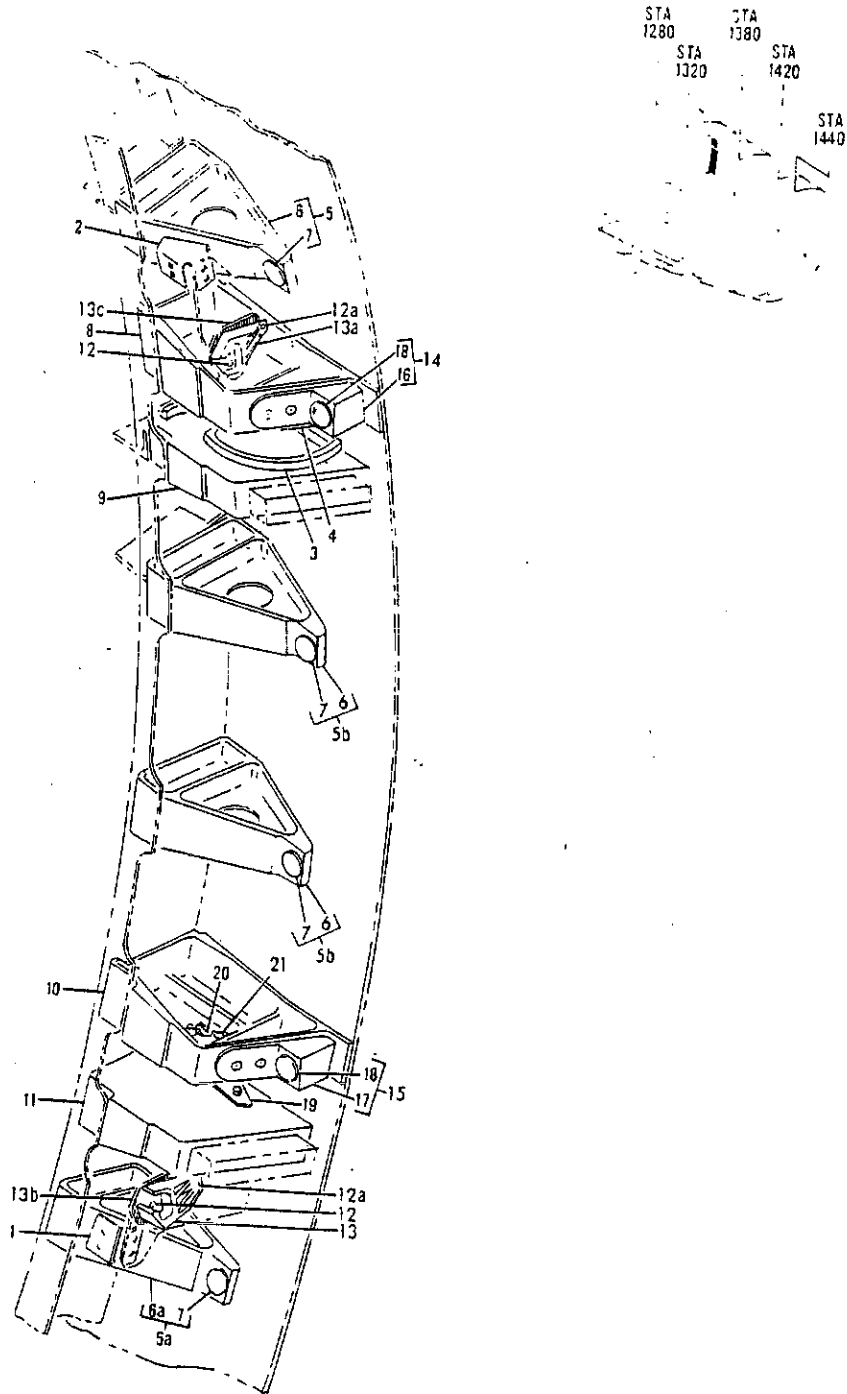


FIGURE 12. FRAME INSTL, STATION 1286



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
12	50-7984	FRAME INSTL, STATION 1286 (SEE 53-2, FIG. 3, ITEM 50. . AND 53-2, FIG. 7A, ITEM 27)		RF
1	63-1301-1	. BRACKET, STATION 1286 AFT GALLEY LOWER ROLLER CAM . .		1
2	63-1302	. BRACKET, STATION 1286 AFT GALLEY UPPER ROLLER CAM . .		1
3	69-8677-5	. PLATE, AFT GALLEY DOOR GUIDE.		1
4	69-8677-6	. PLATE, AFT GALLEY DOOR GUIDE.		1
		ATTACHING PARTS		
	NAS1103-4W	. BOLT.		8
	AN960D10	. WASHER.		8
	60-4457-4	. SHIM, GALLEY DOOR (USED WITH 69-8677-4 AND -6). . . .		AR
	NAS679A3W	. NUT		8
		-----*		
5	90-7868-6	. STOP ASSY, GALLEY DOOR.		1
		(OPTIONAL 90-7868-801)		
5	90-7868-801	. STOP ASSY, GALLEY DOOR.		1
		(OPTIONAL TO 90-7868-6)		
5A	90-7868-803	. STOP ASSY, GALLEY DOOR.		1
5B	90-7868-6	. STOP ASSY, GALLEY DOOR.		2
6	90-7868-7	. FITTING, GALLEY DOOR STOP (USED ON 90-7868-6)		1
6A	90-7868-804	. FITTING, GALLEY DOOR STOP (USED ON 90-7868-803)		1
7	69-16954-2	. PLATE, DOOR STOP FITTING BEARING (USED ON		1
		90-7868-6 AND -803)		
7	69-16954-3	. PLATE, DOOR STOP FITTING BEARING (USED.		1
		ON 90-7868-6 AND -803) (OPTIONAL TO		
		69-16954-2)		
8	50-11352	. FITTING, AFT GALLEY DOOR UPPER HINGE UPPER.		1
9	50-11353-1	. FITTING, AFT GALLEY DOOR UPPER HINGE LOWER.		1
		ATTACHING PARTS		
	NAS1104-6W	. BOLT.		4
	AN960D416L	. WASHER.		4
	NAS679A4W	. NUT		4
		-----*		
10	50-11354-1	. FITTING, AFT GALLEY DOOR LOWER HINGE UPPER.		1
		ATTACHING PARTS		
	NAS1104-8W	. BOLT.		2
	AN960D416L	. WASHER.		2
	NAS679A4W	. NUT		2
		-----*		
11	50-11355	. FITTING, AFT GALLEY DOOR LOWER HINGE LOWER.		1
		ATTACHING PARTS		
	NAS1104-6W	. BOLT.		2
	AN960D416L	. WASHER.		2
	NAS679A4W	. NUT		2
		-----*		
12	NAS334CPA6	. BOLT.		2
12A	NAS1104-5W	. BOLT.		2
13	50-10893-6	. FITTING, GALLEY DOOR ROLLER CAM		1
13A	50-10893-5	. FITTING, GALLEY DOOR ROLLER CAM		1
13B	66-1078-1	. PLATE, STATION 1286 FRAME ROLLER CAM FITTING.		1
13C	66-1078-2	. PLATE, STATION 1286 FRAME ROLLER CAM FITTING.		1
14	90-7893-11	. STOP ASSY, AFT GALLEY DOOR HINGE FITTING.		1
15	90-7893-12	. STOP ASSY, AFT GALLEY DOOR HINGE FITTING.		1
		ATTACHING PARTS		
	NAS333CPA6	. BOLT.		4
	AN960D10	. WASHER.		4
	NAS679A3W	. NUT		4
		-----*		
16	90-7893-13	. FITTING, AFT GALLEY DOOR HINGE STOP (USED ON.		1
		90-7893-11)		
17	90-7893-14	. FITTING, AFT GALLEY DOOR HINGE STOP (USED ON.		1
		90-7893-12)		
18	69-16954-2	. PLATE, DOOR STOP FITTING BEARING (USED ON		1
		90-7893-11 AND -12)		
19	60-4462-1103	. PLATE, AFT GALLEY DOOR LOWER HINGE STOP		1
20	60-4462-7	. PLATE, AFT GALLEY DOOR LOWER HINGE STOP		1
		ATTACHING PARTS		
	NAS334CPA10	. BOLT.		4
	AN960D416	. WASHER.		4
	60-4457-2	. SHIM, GALLEY DOOR		AR
	NAS679A4W	. NUT		4
		-----*		
21	69-42601-3	. CAP, SNUBBER ATTACHMENT BOLT.		1
		ATTACHING PARTS		
	BACB30FL2-10	. BOLT.		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1234567	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
12	AN960D8L NAS679A08W	.	WASHER.		2
		.	NUT		2
			-----*-----		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

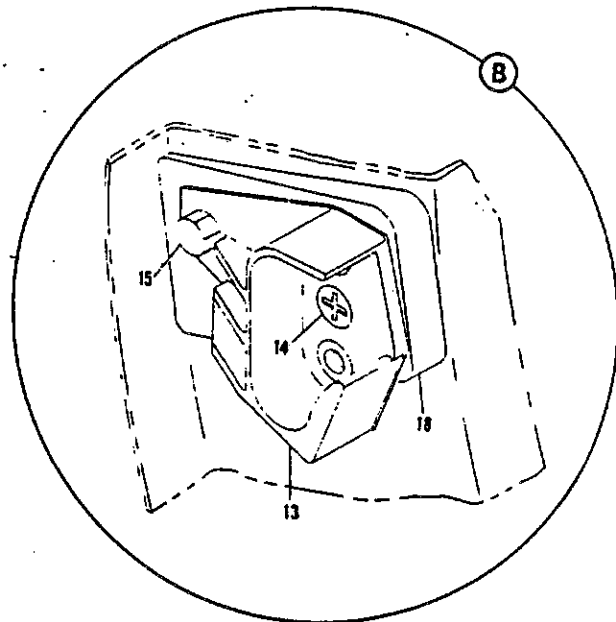
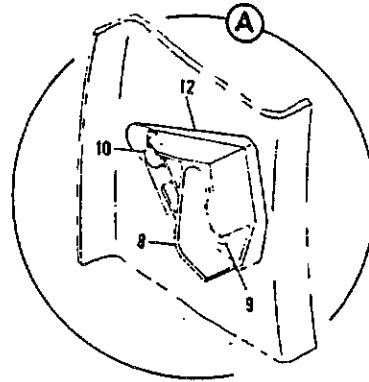
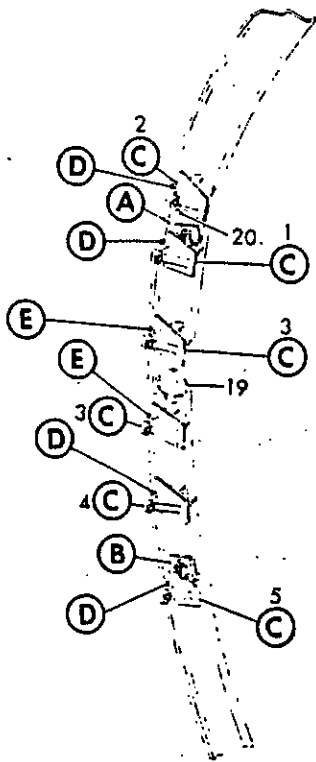
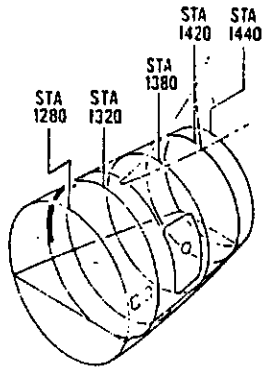


FIGURE 13. FRAME INSTL, STATION 1320 (SHEET 1)

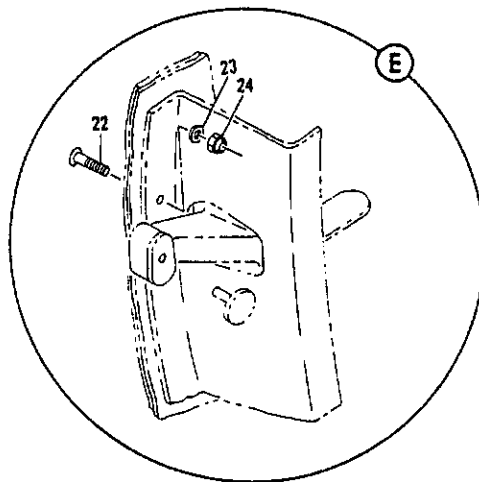
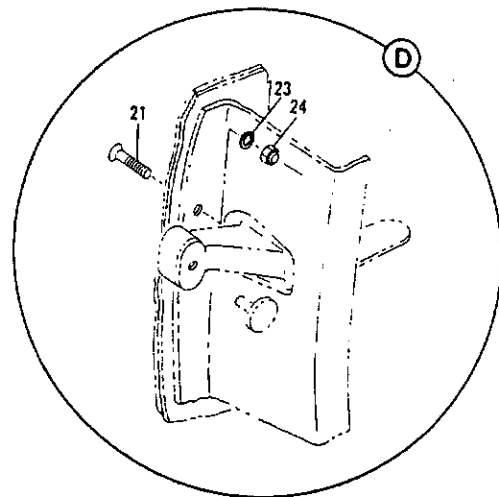
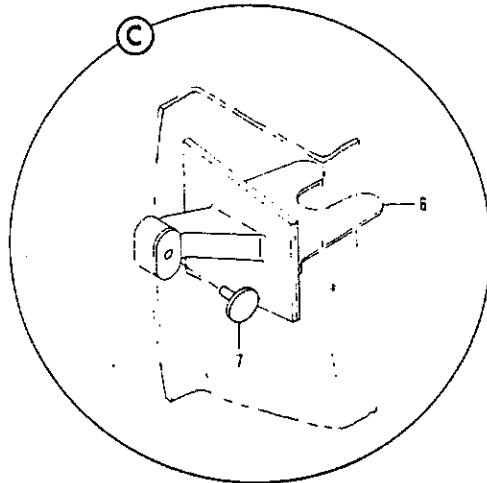


FIGURE 13. FRAME INSTL, STATION 1320 (SHEET 2)

NOV 21/90

52-02-13

DETAILED PARTS LIST
52-02-13
PAGE 1

BOEING
Intercontinental
747
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
13	50-7985	FRAME INSTL, STATION 1320 (SEE 53-2, FIG. 3, ITEM 49. . AND 53-2, FIG. 7A, ITEM 27)		RF
1	90-7894-6	. FITTING ASSY, STATION 1320 AFT GALLEY DOOR STOP . . .		1
2	90-6755-19	. FITTING ASSY, STATION 1320 AFT GALLEY DOOR STOP . . .		1
3	90-6755-20	. FITTING ASSY, STATION 1320 AFT GALLEY DOOR STOP . . .		2
4	90-6755-21	. FITTING ASSY, STATION 1320 AFT GALLEY DOOR STOP . . .		1
5	90-6755-22	. FITTING ASSY, STATION 1320 AFT GALLEY DOOR STOP . . .		1
6	90-7894-7	. . FITTING, STATION 1320 AFT GALLEY DOOR STOP (USED ON 90-7894-6)		1
6	90-6755-23	. . FITTING, STATION 1320 AFT GALLEY DOOR STOP (USED ON 90-6755-19)		1
6	90-6755-24	. . FITTING, STATION 1320 AFT GALLEY DOOR STOP (USED ON 90-6755-20)		1
6	90-6755-25	. . FITTING, STATION 1320 AFT GALLEY DOOR STOP (USED ON 90-6755-21)		1
6	90-6755-26	. . FITTING, STATION 1320 AFT GALLEY DOOR STOP (USED ON 90-6755-22)		1
7	69-16954-1	. . PLATE, DOOR STOP FITTING BEARING (USED ON 90-7894-6)		1
7	69-16954-2	. . PLATE, DOOR STOP FITTING BEARING (USED ON 90-6755-19, -20, -21 AND -22) (OPTIONAL 69-16954-3)		1
7	69-16954-3	. . PLATE, DOOR STOP FITTING BEARING (USED. ON 90-6755-19, -20, -21 AND -22) (OPTIONAL TO 69-16954-2)		1
8	50-10893-4	. FITTING, GALLEY DOOR ROLLER CAM ATTACHING PARTS		1
9	NAS334CPA11	. BOLT.		1
10	NAS1104-8W	. BOLT.		1
12	60-4463	. FILLER, AFT GALLEY DOOR CAM FITTING TAPERED		1
13	50-10893-5	. FITTING, GALLEY DOOR ROLLER CAM ATTACHING PARTS		1
14	NAS334CPA12	. BOLT.		1
15	NAS1104-7W	. BOLT.		1
18	60-4463-1	. FILLER, AFT GALLEY DOOR CAM FITTING TAPERED		1
19	65-1948	. FITTING, GALLEY DOOR CENTERING CAM. ATTACHING PARTS		1
	AN4C6A	. BOLT.		2
	AN960C416	. WASHER.		2
	BACN10BY54W	. NUT		2
20	AN931-4-7	. GROMMET		1
21	NAS333CPA5-5	. BOLT.		4
22	NAS333CPA6-5	. BOLT.		2
23	AN960D10	. WASHER.		6
24	BACN10BY53W	. NUT		6
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

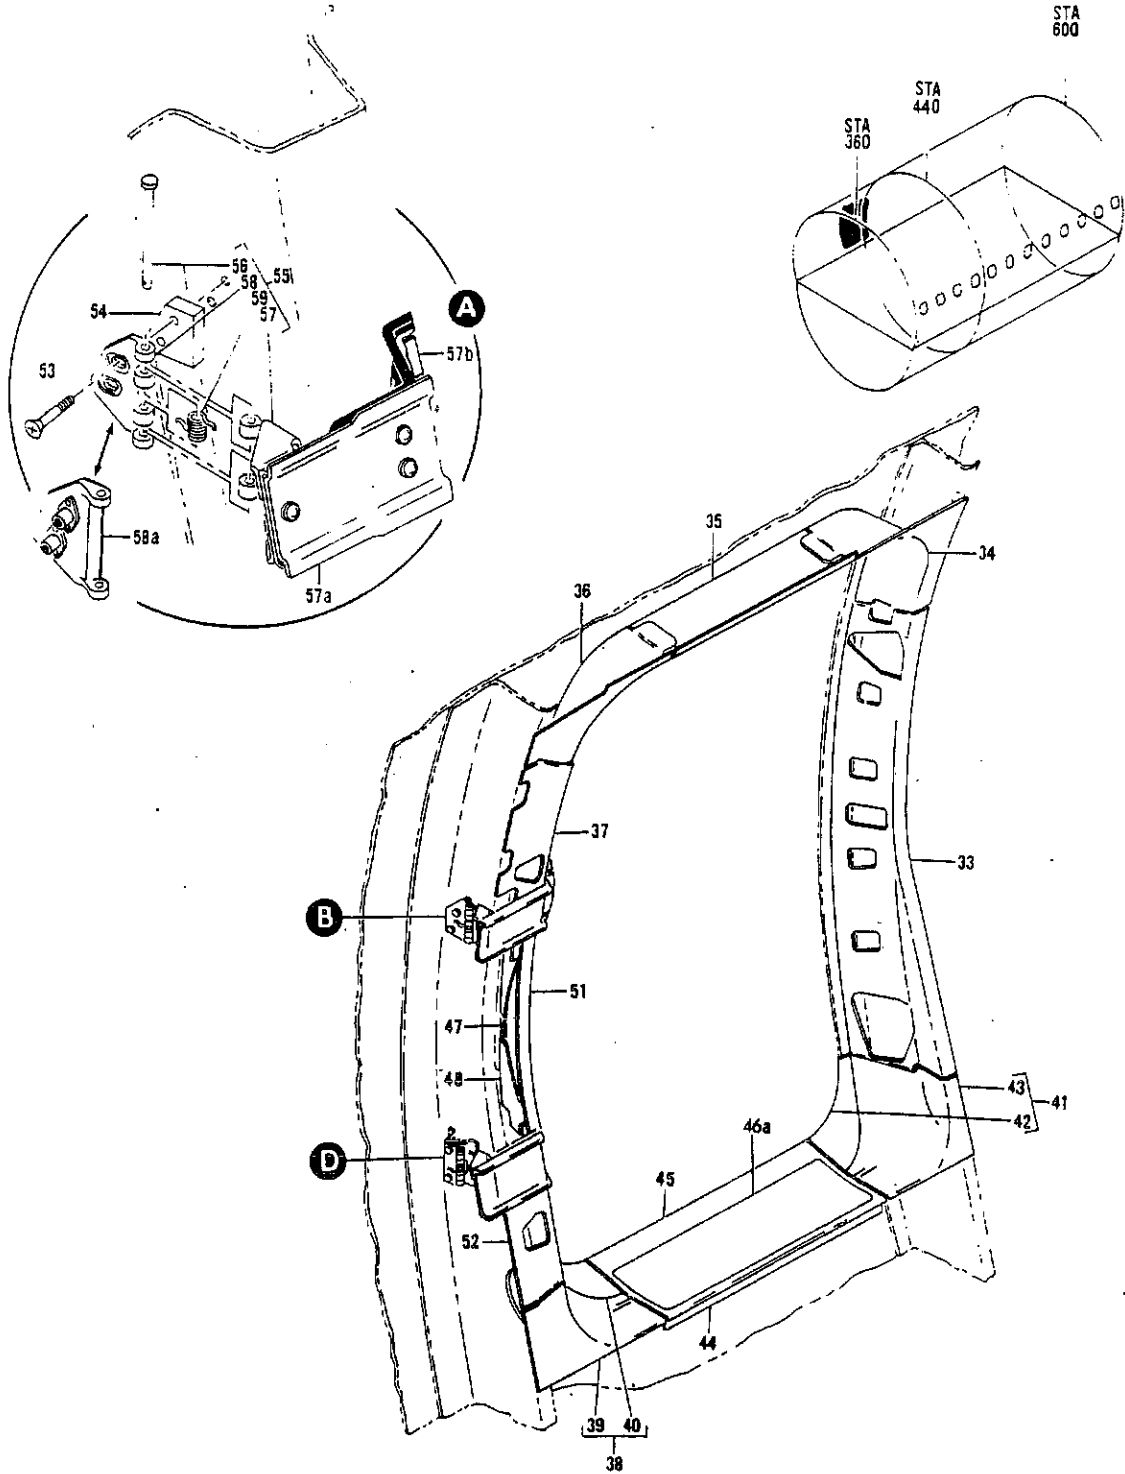


FIGURE 14. REVEAL INSTL, FORWARD GALLEY DOOR (SHEET 1)

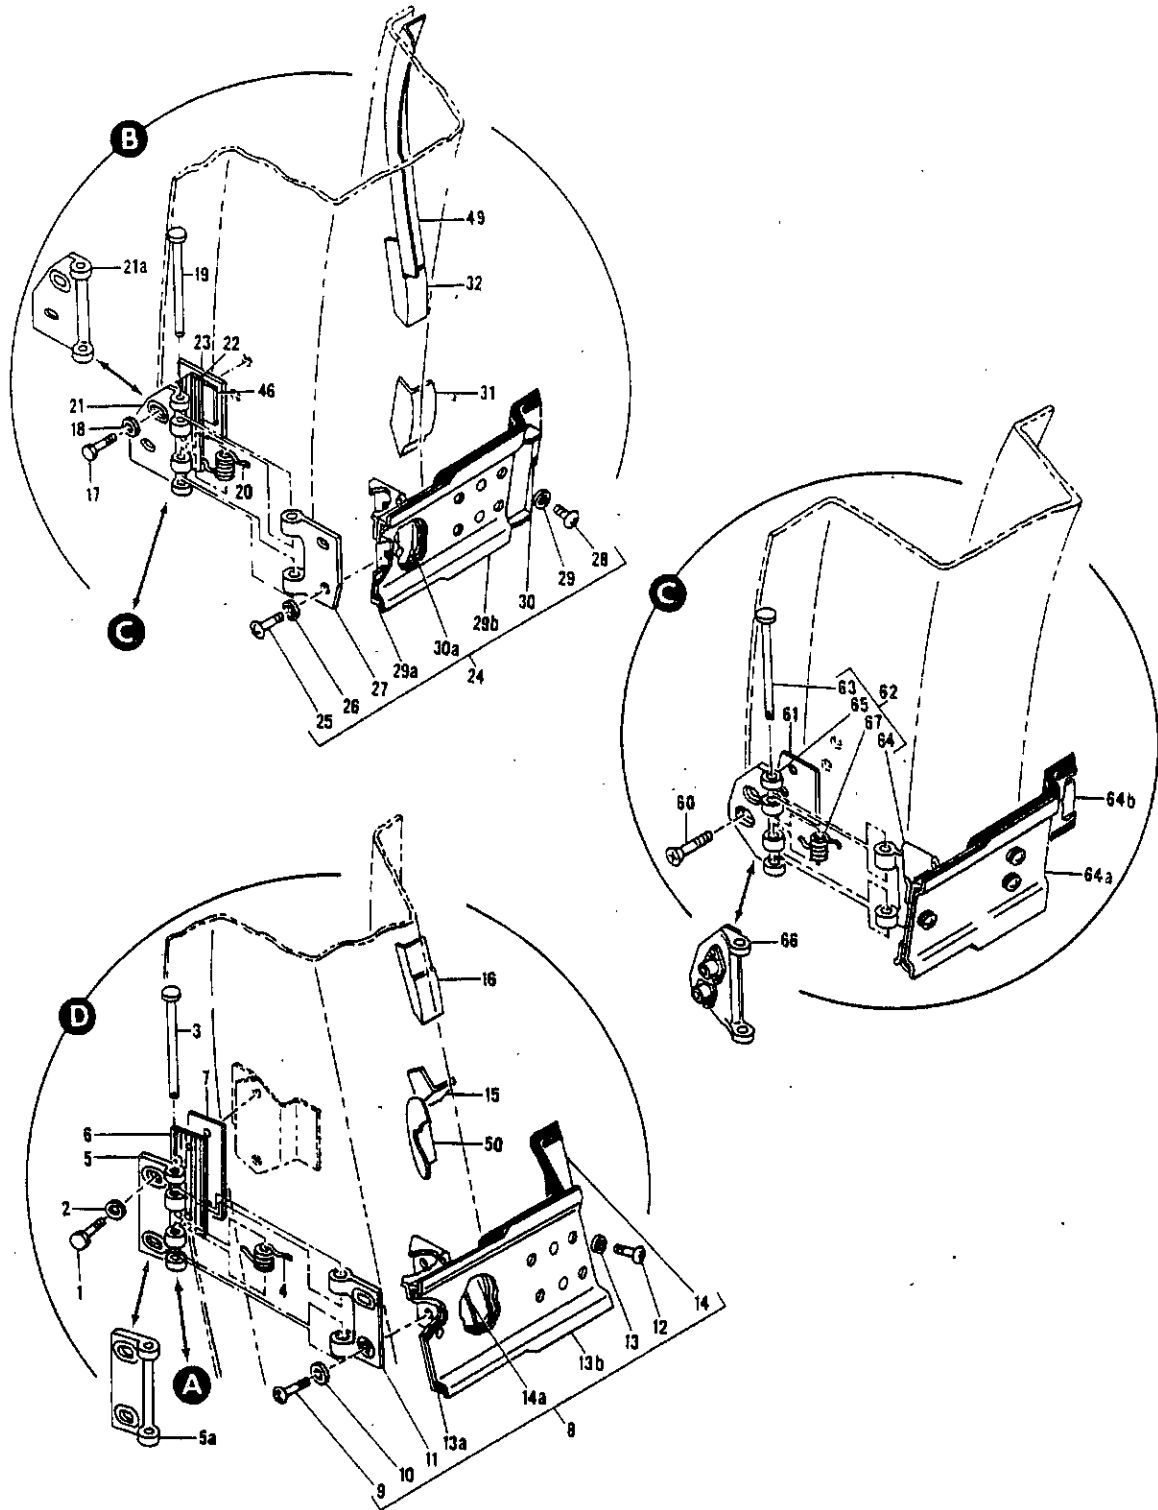


FIGURE 14. REVEAL INSTL, FORWARD GALLEY DOOR (SHEET 2)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
14	50-9741	REVEAL INSTL, FORWARD GALLEY DOOR (SEE 53-2, FIG. 2, . . . ITEM 39)		RF
15	69-9896	. DEPRESSOR, LOWER FLAPPER GATE LOWER SEAL. (OPTIONAL 66-9105)		1
15	66-9105	. DEPRESSOR, LOWER FLAPPER GATE LOWER SEAL. (OPTIONAL TO 69-9896)		1
16	69-9873	. DEPRESSOR, LOWER FLAPPER GATE UPPER SEAL. (OPTIONAL 66-9104)		1
16	66-9104	. DEPRESSOR, LOWER FLAPPER GATE UPPER SEAL. (OPTIONAL TO 69-9873)		1
31	69-9879	. DEPRESSOR, UPPER FLAPPER GATE LOWER SEAL. (OPTIONAL 66-9103)		1
31	66-9103	. DEPRESSOR, UPPER FLAPPER GATE LOWER SEAL. (OPTIONAL TO 69-9879)		1
32	69-9823	. DEPRESSOR, UPPER FLAPPER GATE SEAL. (OPTIONAL 66-9102)		1
32	66-9102	. DEPRESSOR, UPPER FLAPPER GATE SEAL. (OPTIONAL TO 69-9823)		1
33	50-9741-1	. REVEAL, FORWARD GALLEY DOOR AFT		1
34	50-9741-12	. REVEAL, FORWARD GALLEY DOOR AFT UPPER CORNER.		1
35	50-9741-14	. REVEAL, UPPER PLATE		1
36	50-9741-13	. REVEAL, FORWARD UPPER CORNER.		1
37	50-9741-43	. REVEAL, FORWARD GALLEY DOOR UPPER FORWARD		1
38	50-9741-52	. REVEAL ASSY, FORWARD GALLEY DOOR FORWARD LOWER CORNER (OPTIONAL 50-9741-50)		1
38	50-9741-50	. REVEAL ASSY, FORWARD GALLEY DOOR FORWARD LOWER CORNER (OPTIONAL TO 50-9741-52)		1
39	50-9741-36	. . REVEAL, FORWARD GALLEY DOOR FORWARD LOWER CORNER. .		1
40	50-9741-11	. . REVEAL, FORWARD GALLEY DOOR FORWARD LOWER CORNER. .		1
41	50-9741-53	. REVEAL ASSY, FORWARD GALLEY DOOR AFT LOWER CORNER . . (OPTIONAL 50-9741-51)		1
41	50-9741-51	. REVEAL ASSY, FORWARD GALLEY DOOR AFT LOWER CORNER . . (OPTIONAL TO 50-9741-53)		1
42	50-9741-10	. . REVEAL, FORWARD GALLEY DOOR AFT LOWER CORNER. . . .		1
43	50-9741-35	. . REVEAL, FORWARD GALLEY DOOR AFT LOWER CORNER. . . .		1
44	50-9741-9	. ANGLE, FORWARD GALLEY DOOR REVEAL RUG SUPPORT		1
45	50-9741-5	. PLATE, FORWARD GALLEY DOOR REVEAL SCUFF		1
46	50-9741-20	. FILLER, FORWARD GALLEY DOOR REVEAL HINGE SUPPORT. . .		1
46A	65-69063-3	. PAD INSTL, NON-SLIP		1
47	50-9741-30	. . PAD		1
48	50-9741-85	. DEPRESSOR, FORWARD GALLEY DOOR REVEAL CENTER SEAL . .		1
49	50-9741-29	. DEPRESSOR, FORWARD GALLEY DOOR REVEAL UPPER SEAL. . .		1
50	50-9741-31	. DEPRESSOR, FORWARD GALLEY DOOR REVEAL LOWER SEAL. . .		1
51	50-9741-38	. REVEAL, FORWARD GALLEY DOOR FORWARD MIDDLE COVER. . .		1
52	50-9741-42	. REVEAL, FORWARD GALLEY DOOR LOWER FORWARD		1
53	65-72023-6	. FLAP INSTL, FORWARD GALLEY DOOR HINGE LOWER		1
54	NAS517-4-16	. . SCREW		2
55	63-9983	. . BLOCK, SPACER		1
56	65-72023-8	. . HINGE ASSY, FORWARD GALLEY DOOR HINGE FLAP LOWER. .		1
57	MS20392-2-95	. . . PIN		1
57A	65-12090-2	. . . FLAP ASSY, FORWARD GALLEY DOOR LOWER.		1
57A	69-9196-4	. . . FLAP ASSY, FORWARD GALLEY DOOR LOWER HINGE. . . (OPTIONAL 69-9196)		1
57A	69-9196	. . . FLAP ASSY, FORWARD GALLEY DOOR LOWER HINGE. . . (OPTIONAL TO 69-9196-4)		1
57B	63-10297	 STRIP, ENTRY AND GALLEY DOORS RUB		1
58A	66-10911-2	. . . HINGE ASSY, FORWARD GALLEY DOOR LOWER		1
59	66-10898	. . . SPRING, TORSION		1
60	65-72023-7	. FLAP INSTL, FORWARD GALLEY DOOR HINGE UPPER		1
61	NAS517-4-9	. . SCREW		2
62	63-9983-1	. . BLOCK, SPACER		1
63	65-72023-9	. . HINGE ASSY, FORWARD GALLEY DOOR HINGE FLAP UPPER. .		1
64	MS20392-2-93	. . . PIN		1
64A	65-12090-3	. . . FLAP ASSY, FORWARD GALLEY DOOR UPPER.		1
64A	69-9234-4	. . . FLAP ASSY, FORWARD GALLEY DOOR UPPER HINGE. . . (OPTIONAL 69-9234)		1
64A	69-9234	. . . FLAP ASSY, FORWARD GALLEY DOOR UPPER HINGE. . . (OPTIONAL TO 69-9234-4)		1
64B	63-10297	 STRIP, ENTRY AND GALLEY DOORS RUB		1
66	66-10911-1	. . . HINGE ASSY, FORWARD GALLEY DOOR UPPER		1
67	66-10898	. . . SPRING, TORSION		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

STA 1380 STA 1280
STA 1420 STA 1320

STA 1440

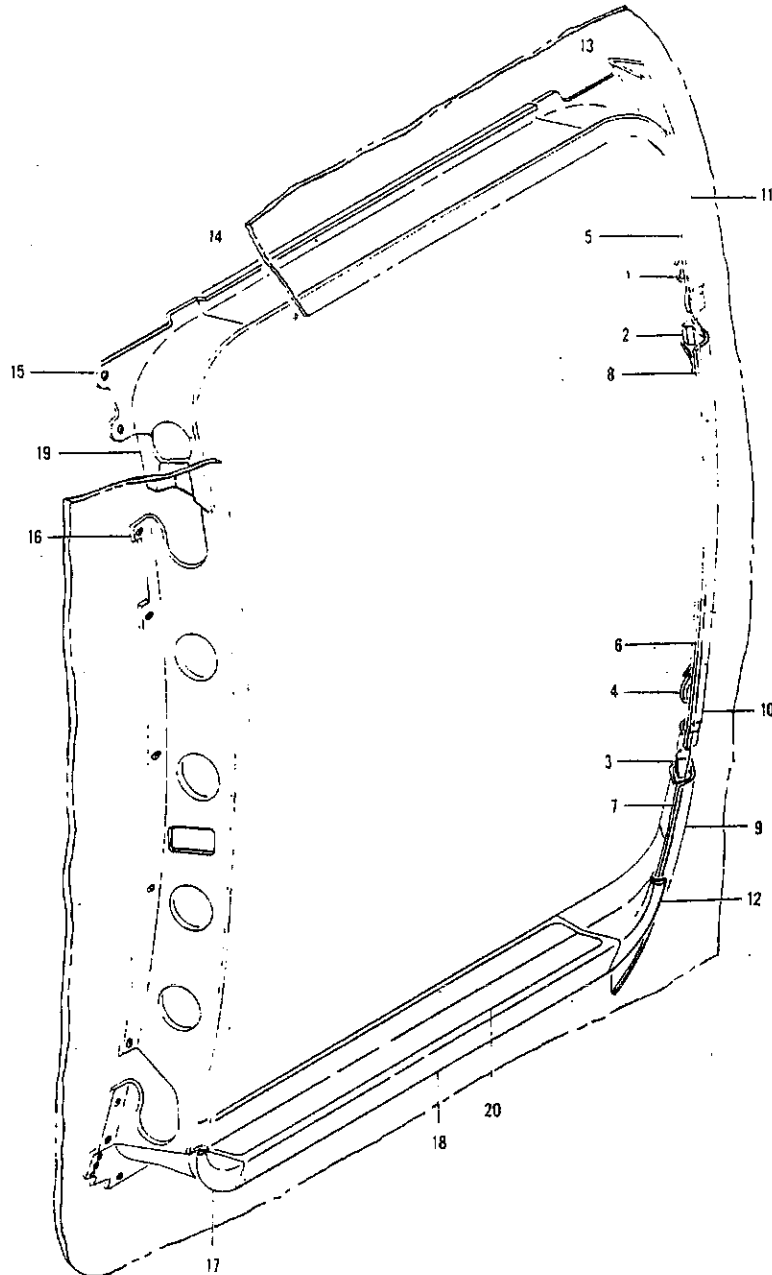


FIGURE 15. REVEAL INSTL, AFT GALLEY DOOR



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
15	50-11382		REVEAL INSTL, AFT GALLEY DOOR (SEE 53-2, FIG. 3, ITEM 62 AND 53-2, FIG. 7A, ITEM 32)		RF
1	69-9298		. DEPRESSOR, AFT GALLEY DOOR (OPTIONAL 69-9850)		1
2	69-9297		. DEPRESSOR, AFT GALLEY DOOR (OPTIONAL 69-9794)		1
3	69-9296		. DEPRESSOR, AFT GALLEY DOOR (OPTIONAL 69-9796)		1
4	69-9295		. DEPRESSOR, AFT GALLEY DOOR (OPTIONAL 69-9842)		1
5	69-3302-1101		. DEPRESSOR, AFT GALLEY DOOR ANGLE SEAL		1
6	69-3256-1101		. DEPRESSOR, AFT GALLEY DOOR ANGLE SEAL		1
7	69-3256-1102		. DEPRESSOR, AFT GALLEY DOOR ANGLE SEAL		1
8	69-3256-1103		. DEPRESSOR, AFT GALLEY DOOR ANGLE SEAL		1
9	50-11382-1		. REVEAL, AFT GALLEY DOOR FORWARD		1
10	50-11382-2		. REVEAL, AFT GALLEY DOOR FORWARD		1
11	50-11382-3		. REVEAL, AFT GALLEY DOOR FORWARD		1
12	69-2518-14		. REVEAL, AFT GALLEY DOOR LOWER FORWARD CORNER.		1
			ATTACHING PARTS		
	NAS517-3-1		. SCREW		2
13	69-2518-2		. REVEAL, UPPER FORWARD CORNER.		1
14	50-11382-18		. REVEAL, AFT GALLEY DOOR TOP		1
15	69-2518-800		. REVEAL, AFT GALLEY DOOR UPPER AFT CORNER.		1
16	50-11382-29		. REVEAL, AFT GALLEY DOOR AFT		1
			ATTACHING PARTS		
	NAS221-7		. SCREW		13
	AN960D10L		. WASHER		13
17	69-2518-13		. REVEAL, AFT GALLEY DOOR LOWER AFT CORNER.		1
18	50-11382-30		. PLATE, AFT GALLEY DOOR REVEAL SCUFF		1
			ATTACHING PARTS		
	BACB308F3-2		. BOLT		10
19	69-6307		. PLATE, AFT GALLEY DOOR REVEAL COVER		1
	65-69063-4		. PAD INSTL, NON-SLIP		1
20	65-69063-10		. PAD, NON-SLIP		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

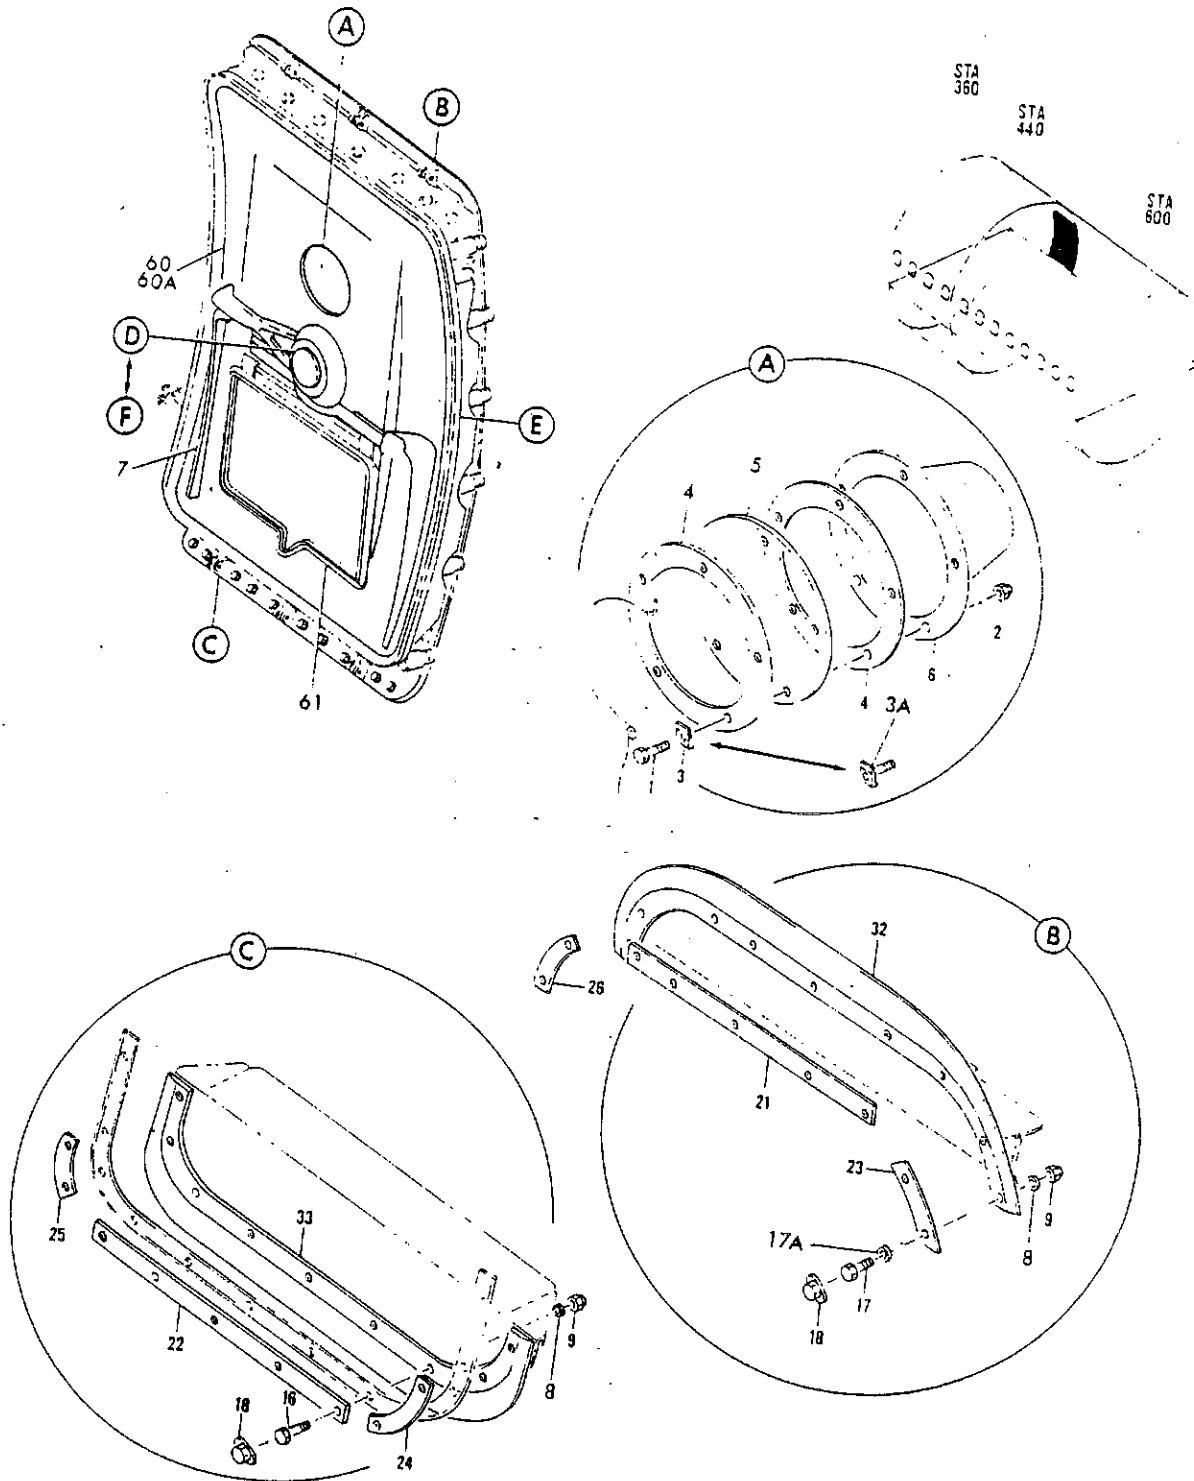


FIGURE 16. LINING INSTL, FORWARD GALLEY DOOR (SHEET 1)

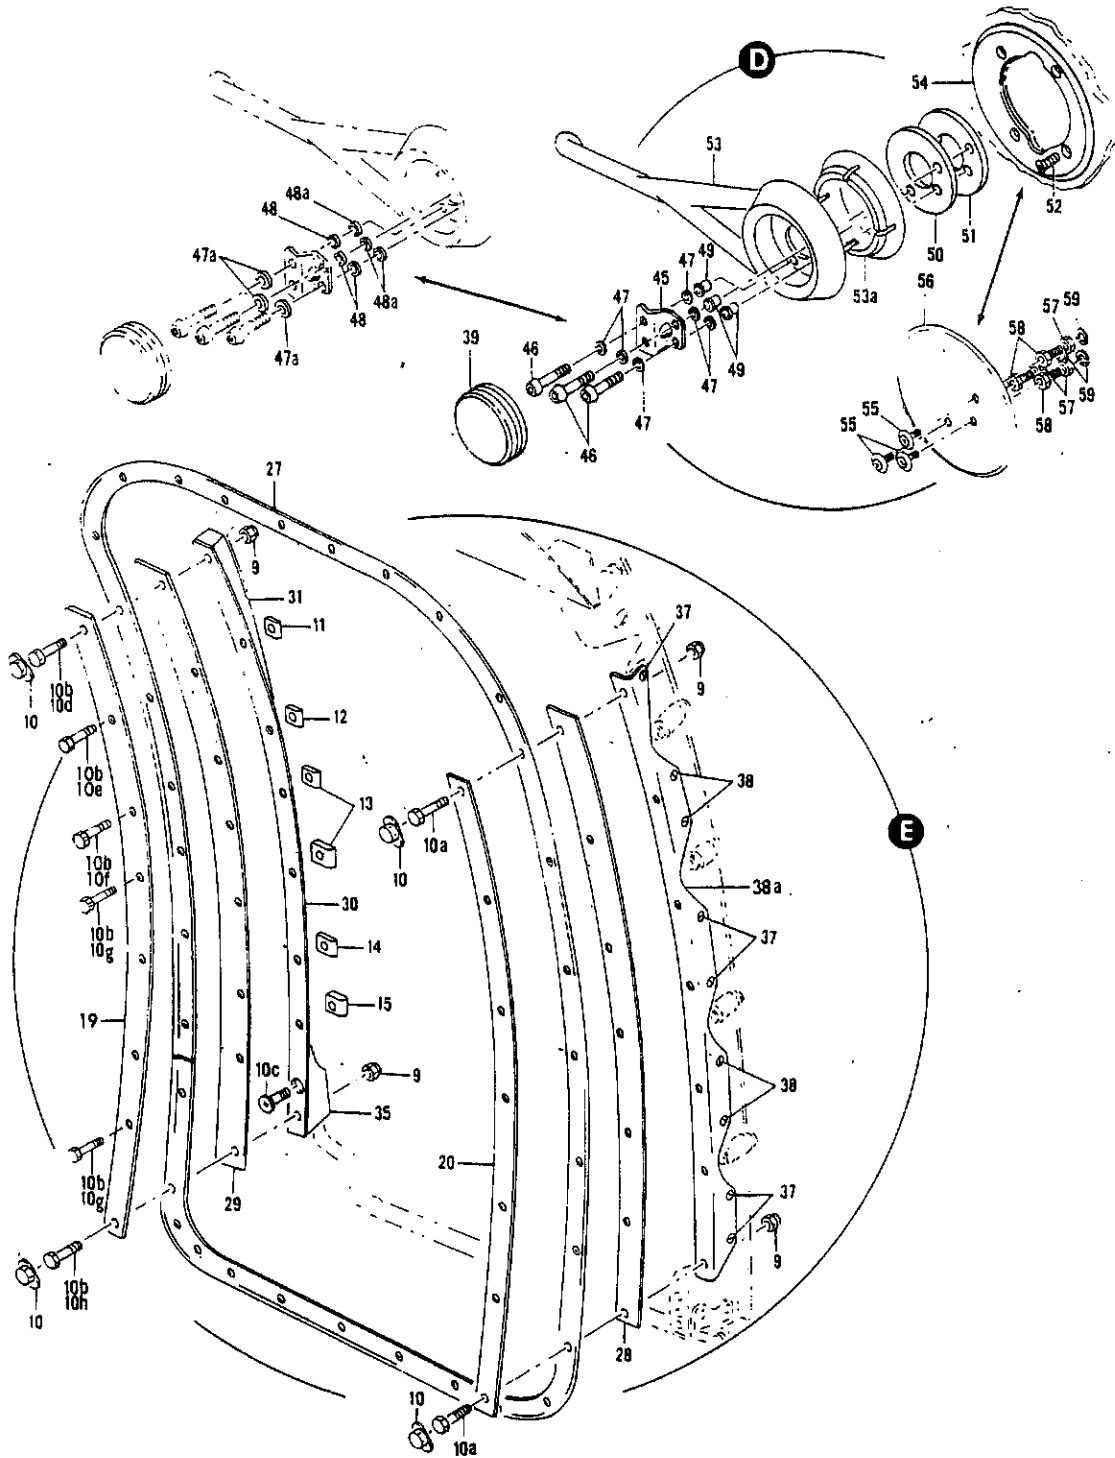


FIGURE 16. LINING INSTL, FORWARD GALLEY DOOR (SHEET 2)


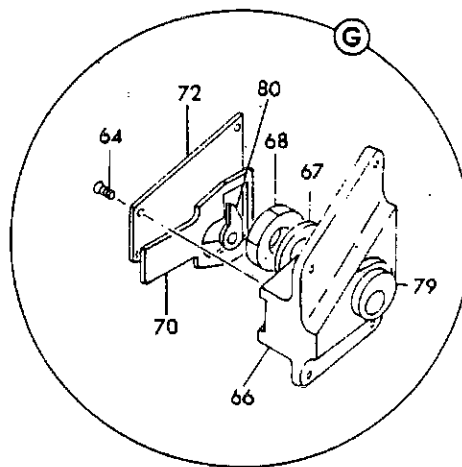


FIGURE 016. LINING INST, FORWARD GALLEY DOOR

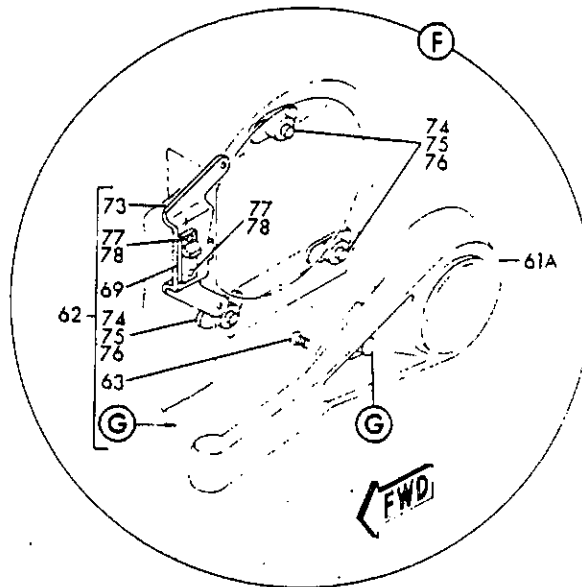

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
16	65-1377-31F	LINING INSTL, FORWARD GALLEY DOOR (SEE 25-10, FIG. 36X, ITEM 7 AND 25-10, FIG. 36Z, ITEM 7)	0150	RF
	65-1377-35	LINING INSTL, FORWARD GALLEY DOOR (SEE 25-10, FIG. 31Q, ITEM 7, 25-10, FIG. 33C, ITEM 17, 25-10, FIG. 33D, ITEM 18 AND 25-10, FIG. 35Z, ITEM 7)	5199	RF
	65-1377-35	LINING INSTL, FORWARD GALLEY DOOR (REWORKED BY DWG. NO. 65V10441-3) (SEE 25-10, FIG. 33D, ITEM 18)	5199	RF
1	AN3-5A	. BOLT, (USED WITH 63-2601)		5
2	NAS679A3W	. NUT		5
3	63-2601	. CLIP, (USED WITH AN3-5A). (OPTIONAL TO AND FOR REPLACEMENT ORDER 69-56988-1)		5
3A	69-56988-1	. RETAINER ASSY (OPTIONAL AND REPLACEMENT FOR 63-2601)		5
4	66-4481-1A	. GASKET, FORWARD GALLEY DOOR WINDOW.		2
5	66-4478-1A	. WINDOW, FORWARD GALLEY DOOR		1
6	65-6330-18	. REVEAL, FORWARD GALLEY DOOR WINDOW.	0150	1
6	65-6330-1D	. REVEAL.	5199	1
7	65-52700-1F	. COLLAR, ESCAPE SLIDE.	0150	1
7	65-52700-1S	. COLLAR, ESCAPE.	5199	1
		ATTACHING PARTS		
	NAS603-7P	. SCREW		8
	AN960PD10L	. WASHER.		8
	NAS679A3W	. NUT		8
8	AN960PD10L	. WASHER.		15
9	NAS679A3W	. NUT		33
10	BACR10G31	. RETAINER.		15
10A	AN3-4A	. BOLT.		7
10D	AN3-13A	. BOLT.		1
10E	AN3-12A	. BOLT.		1
10F	AN3-11A	. BOLT.		1
10G	AN3-7A	. BOLT.		4
10H	AN3-14A	. BOLT.		1
13	65-1377-21	. FILLER, RADIUS.		2
14	65-1377-21	. FILLER, RADIUS.		1
15	65-1377-21	. FILLER, RADIUS.		1
16	AN3-15A	. BOLT, (USED WITH 65-1377-13, -15 AND -16)		9
17	AN3-5	. BOLT, (USED WITH 65-1377-12, -14 AND -22)		9
17A	AN960PD10L	. WASHER.		18
17B	NAS679A3W	. NUT		18
18	BACR10G31	. RETAINER, (USED WITH 65-1377-12, -13, -14, -15, -16 AND -22)		18
19	65-1377-10	. STRIP, FORWARD GALLEY DOOR LINING BOLT RETAINER		1
20	65-1377-11	. STRIP, FORWARD GALLEY DOOR LINING BOLT RETAINER		1
21	65-21860-27	. STRIP ASSY, RETAINER.		1
22	65-21860-28	. STRIP ASSY, RETAINER.		1
23	65-21860-31	. STRIP ASSY, RETAINER.		1
24	65-21860-34	. STRIP ASSY, RETAINER.		1
25	65-21860-33	. STRIP ASSY, RETAINER.		1
26	65-21860-29	. STRIP ASSY, RETAINER.		1
27	65-1377-3C	. WELTING, PLASTIC. (EXTRUSION NO. BAC1522-66-734 X 150.0 IN. LG)	0150	1
27	65-1377-3Y	. WELTING, PLASTIC (EXTRUSION NO. BAC1522-66-7144 X 150 IN. LG)	5199	1
28	65-1377-5C	. STRIP, FORWARD GALLEY DOOR LINING AFT EDGE PLASTIC. (EXTRUSION NO. BAC1522-68-734 X 42.0 IN. LG)	0150	1
28	65-1377-5W	. STRIP, AFT EDGE PLASTIC (EXTRUSION NO. BAC1522-68-7144 X 42.0 IN. LG)	5199	1
29	65-1377-4C	. STRIP, FORWARD GALLEY DOOR LINING FORWARD EDGE. PLASTIC (EXTRUSION NO. BAC1522-68-734 X 42.0 IN. LG)	0150	1
29	65-1377-4Y	. STRIP, PLASTIC (EXTRUSION NO. BAC1522-68-7144 X 42. IN. LG)	5199	1
30	65-1377-6	. STRIP, FORWARD GALLEY DOOR LINING FORWARD EDGE VINYL		1
31	65-1377-7	. FILLER, FORWARD GALLEY DOOR LINING MICARTA.		1
32	69-5449-4C	. SEAL, FORWARD GALLEY DOOR UPPER	0150	1
32	69-5449-4Q	. SEAL, UPPER	5199	1
33	69-5449-3C	. SEAL, FORWARD GALLEY DOOR LOWER	0150	1
33	69-5449-3Q	. SEAL, LOWER	5199	1
35	65-1377-8	. FILLER, FORWARD GALLEY DOOR LINING MICARTA.		1
37	NAS603-10P	. SCREW		5
38	NAS603-10P	. SCREW		4
38A	65-1377-9	. ANGLE, AFT EDGE		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
16	39	69-10070-68	. INSERT ASSY, INTERIOR HANDLE (SEE FIG. 21).								1
			(OPTIONAL 69-10070-21A)								
	39	69-10070-21A	. INSERT ASSY, INTERIOR HANDLE (SEE FIG. 21).								1
			(OPTIONAL TO 69-10070-68)								
45		63-8947-16	. BRACKET ASSY, INSERT SUPPORT.								1
46		MS20005H8	. BOLT.								3
47A		MS20002C5	. WASHER.								3
48		AN960D516	. WASHER.								3
48A		63-10169	. WASHER, FLAT.								3
50		66-3740-6	. SHIM, INTERIOR DOOR HANDLE.								1
51		66-3740-7	. SHIM, INTERIOR DOOR HANDLE LAMINATED.								AR
53		65-16048-2	. HANDLE, GALLEY INTERIOR DOOR.								1
53A		69-13363-3	. INSERT, INTERIOR HANDLE FOAM.								1
60		65-6477-5E	. PANEL ASSY.							0150	1
60		65-6477-5T	. PANEL ASSY.							5199	1
60A		65-6477-6E	. . PANEL, (ALTERED FROM BAC SPEC NO. 10-60128-22). . .							0150	1
60A		65-6477-6T	. . PANEL, (ALTERED FROM BAC SPEC NO.; 10-60128-410) . .							5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

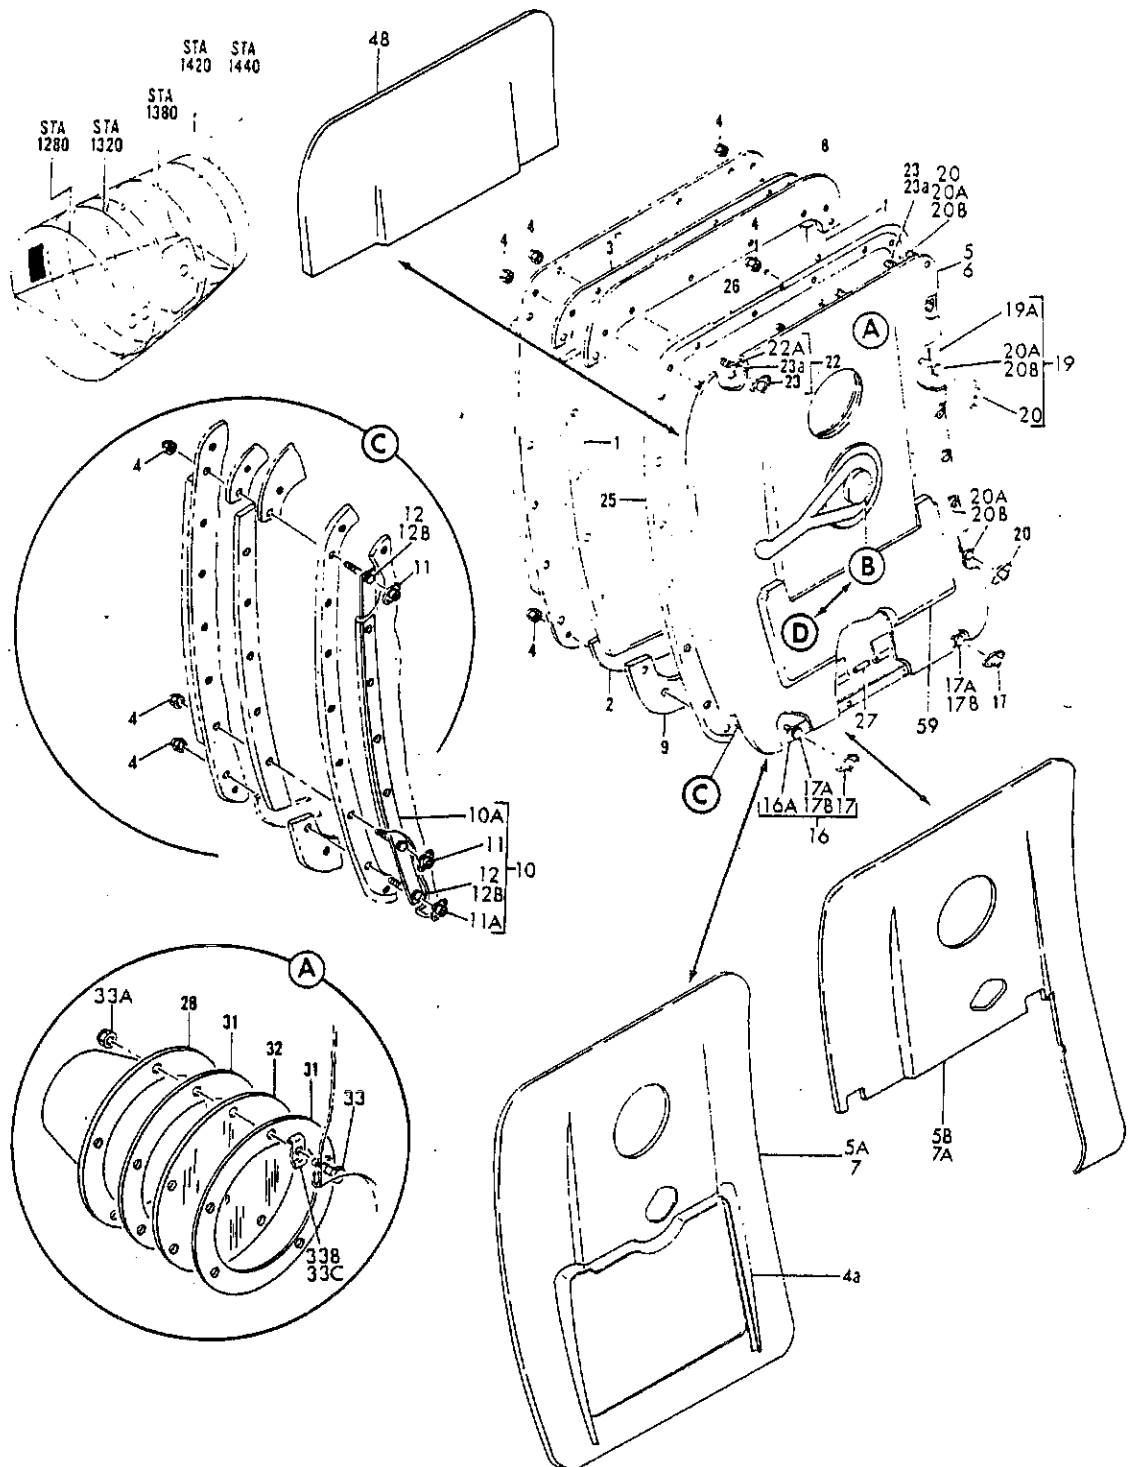


FIGURE 17. LINING INSTL, AFT GALLEY DOOR (SHEET 1)

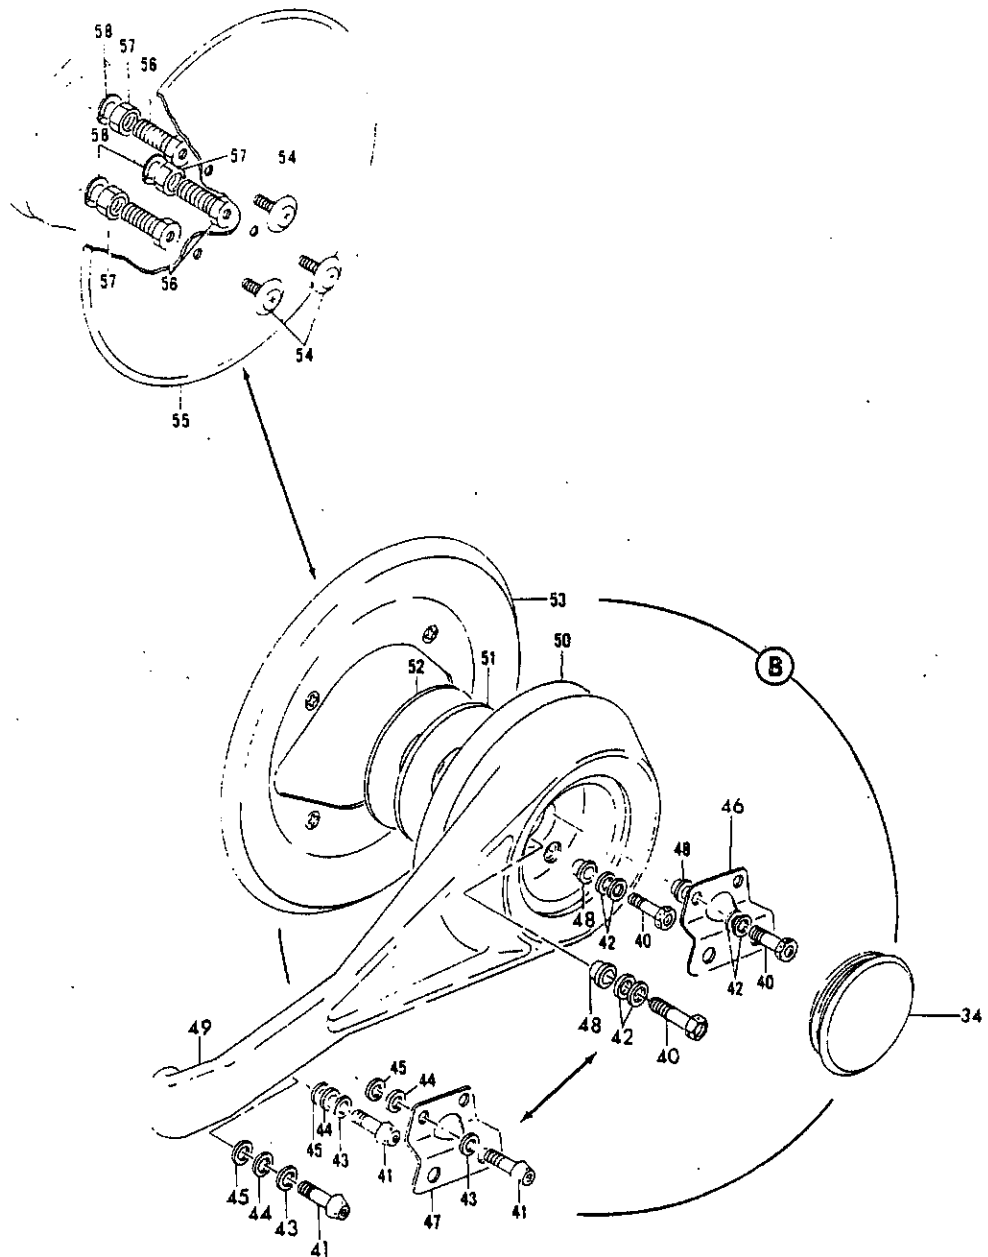


FIGURE 17. LINING INSTL., AFT GALLEY DOOR (SHEET 2)

NOV 21/90

52-02-17

DETAILED PARTS LIST
52-02-17
PAGE 1


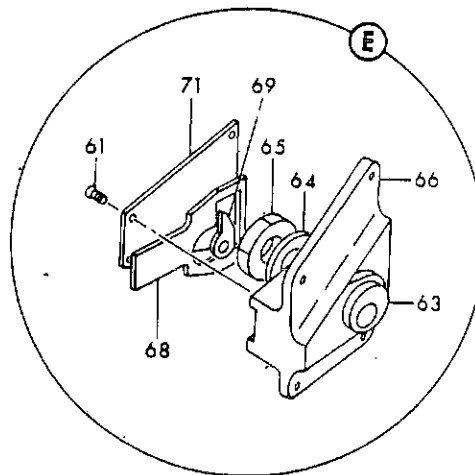


FIGURE 17. LINING INSTL, AFT GALLEY DOOR (SHEET 3)

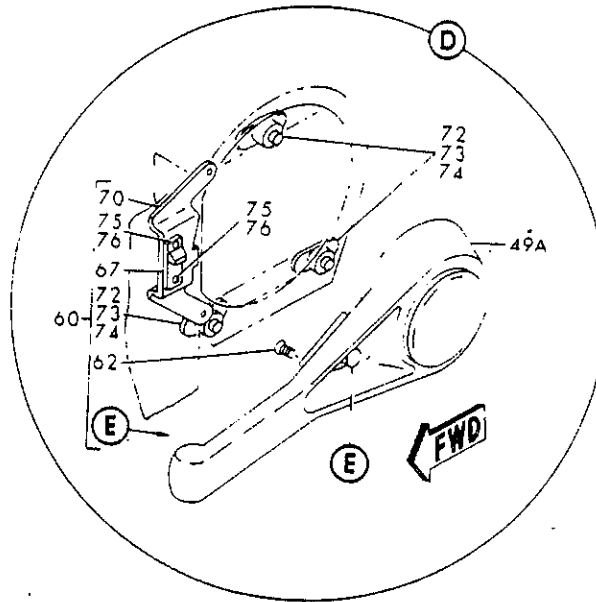

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R R R	17 65-1378-22F	LINING INSTL, AFT GALLEY DOOR (SEE 25-10, FIG. 36X, . . . ITEM 8 AND 25-10, FIG. 36Z, ITEM 8)	0150	RF
	65-1378-25	LINING INSTL, AFT GALLEY DOOR (SEE 25-10, FIG. 31L, . . . ITEM 8, 25-10, FIG. 33C, ITEM 18, 25-10, FIG. 33D ITEM 19, 25-10, FIG. 35T, ITEM 8 AND 25-10, FIG. 35Z, ITEM 8)	5199	RF
	1 65-1378-2	. SPACER, AFT GALLEY DOOR LINING SIDE		2
	2 65-1378-6	. SPACER, AFT GALLEY DOOR LINING BOTTOM		1
	3 65-1378-3	. SPACER, AFT GALLEY DOOR LINING TOP		1
	4 NAS679A3W	ATTACHING PARTS . NUT		25
R R	4A 65-52701-1F	. COLLAR, ESCAPE SLIDE DOOR	0150	1
	4A 65-52701-1S	. COLLAR, ESCAPE SLIDE	5199	1
	NAS603-7P	ATTACHING PARTS . SCREW		8
	AN960PD10L	. WASHER		8
	NAS679A3W	. NUT		8
	NAS1329A3-10K140	(OPTIONAL NAS1329A3-10K140) . NUT		8
		(OPTIONAL TO NAS679A3W)		
R R R R R R R R	5A 65-6478-5E	. PANEL ASSY.	0150	1
	5A 65-6478-5T	. PANEL ASSY.	5199	1
	7 65-6478-6E	. . PANEL, (ALTERED FROM BAC SPEC NO. 10-60128-22).	0150	1
	7 65-6478-6T	. . PANEL, (ALTERED FROM BAC SPEC NO. 10-60128-410)	5199	1
	8 69-5374-3D	. SEAL, UPPER	0150	1
	8 69-5374-3Q	. SEAL, UPPER	5199	1
	9 69-5374-4D	. SEAL, LOWER	0150	1
	9 69-5374-4Q	. SEAL, LOWER	5199	1
	10 65-1378-19	. STRIP ASSY, AFT GALLEY DOOR LINING BOLT RETAINER.		1
	10A 65-1378-18	. . STRIP, AFT GALLEY DOOR LINING BOLT RETAINER		1
	11 BACR10G31	. RETAINER.		6
R	11A BACR10G31	. RETAINER.	0150	1
	12 AN3-10A	. BOLT.		7
	12B AN960PD10L	. WASHER.		7
	16 65-1378-8	. STRIP ASSY, AFT GALLEY DOOR LINING BOLT RETAINER.		1
	16A 65-1378-11	. . STRIP, AFT GALLEY DOOR LINING LOWER BOLT RETAINER		1
	17 BACR10G31	. RETAINER.		4
	17A AN3-10A	. BOLT.		4
	17B AN960PD10L	. WASHER.		4
	19 65-1378-9	. STRIP ASSY, AFT GALLEY DOOR LINING BOLT RETAINER.		1
	19A 65-1378-12	. . STRIP, AFT GALLEY DOOR LINING SIDE BOLT RETAINER.		1
	20 BACR10G31	. RETAINER.		7
	20A AN3-10A	. BOLT.		7
	20B AN960PD10L	. WASHER.		7
	22 65-1378-10	. STRIP ASSY, AFT GALLEY DOOR LINING BOLT RETAINER.		1
	22A 65-1378-13	. . STRIP, AFT GALLEY DOOR LINING UPPER BOLT RETAINER		1
	23 BACR10G31	. RETAINER.		4
R R R R	23A AN3-10A	. BOLT.	0150	4
	25 65-1378-20D	. WELTING, AFT GALLEY DOOR LINING PLASTIC (EXTRUSION. NO. BAC1522-116-734 X 160.000 IN. LG)	0150	1
	25 65-1378-20V	. WELTING	5199	1
	26 65-1378-21	. CORD, AFT GALLEY DOOR LINING WELTING.		1
	27 NAS43DD7-96	. SPACER.		1
R	28 65-6331-18	. REVEAL, AFT GALLEY DOOR WINDOW.	0150	1
	28 65-6331-1D	. REVEAL, WINDOW.	5199	1
	31 66-4556-1A	. GASKET, AFT GALLEY DOOR WINDOW.		2
	32 66-4555-1A	. WINDOW, AFT GALLEY DOOR		1
	33 AN3-5A	. BOLT, (USED WITH 63-2601)		5
	33A NAS679A3W	. NUT		5
	33B 63-2601	. CLIP		5
	33C 69-56988-1	(OPTIONAL AND FOR REPLACEMENT ORDER 69-56988-1) . RETAINER ASSY		5
	69-56988-2	(OPTIONAL TO AND REPLACEMENT FOR 63-2601) . RETAINER.		1
	34 69-10070-68	. INSERT ASSY, INTERIOR HANDLE (SEE FIG. 21). (OPTIONAL 69-10070-21A)		1
	34 69-10070-21A	. INSERT ASSY, INTERIOR HANDLE (SEE FIG. 21). (OPTIONAL TO 69-10070-68)		1
	41 MS20005H8	. BOLT, (OPTIONALS MS20005H10, MS20005H12).		3
	43 MS20002C5	. WASHER.		3
	44 AN960D516	. WASHER.		3
	45 63-10169	. WASHER, FLAT.		3

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	17 47	63-8947-17		. BRACKET ASSY, INSERT SUPPORT.	0150	1
	49	50-10833-5		. HANDLE, GALLEY DOOR INTERIOR.		1
	50	69-13363-3		. INSERT, INTERIOR HANDLE FOAM.		1
	51	66-3740-6		. SHIM, INTERIOR DOOR HANDLE.		1
	52	66-3740-7		. SHIM, INTERIOR DOOR HANDLE LAMINATED.		AR
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

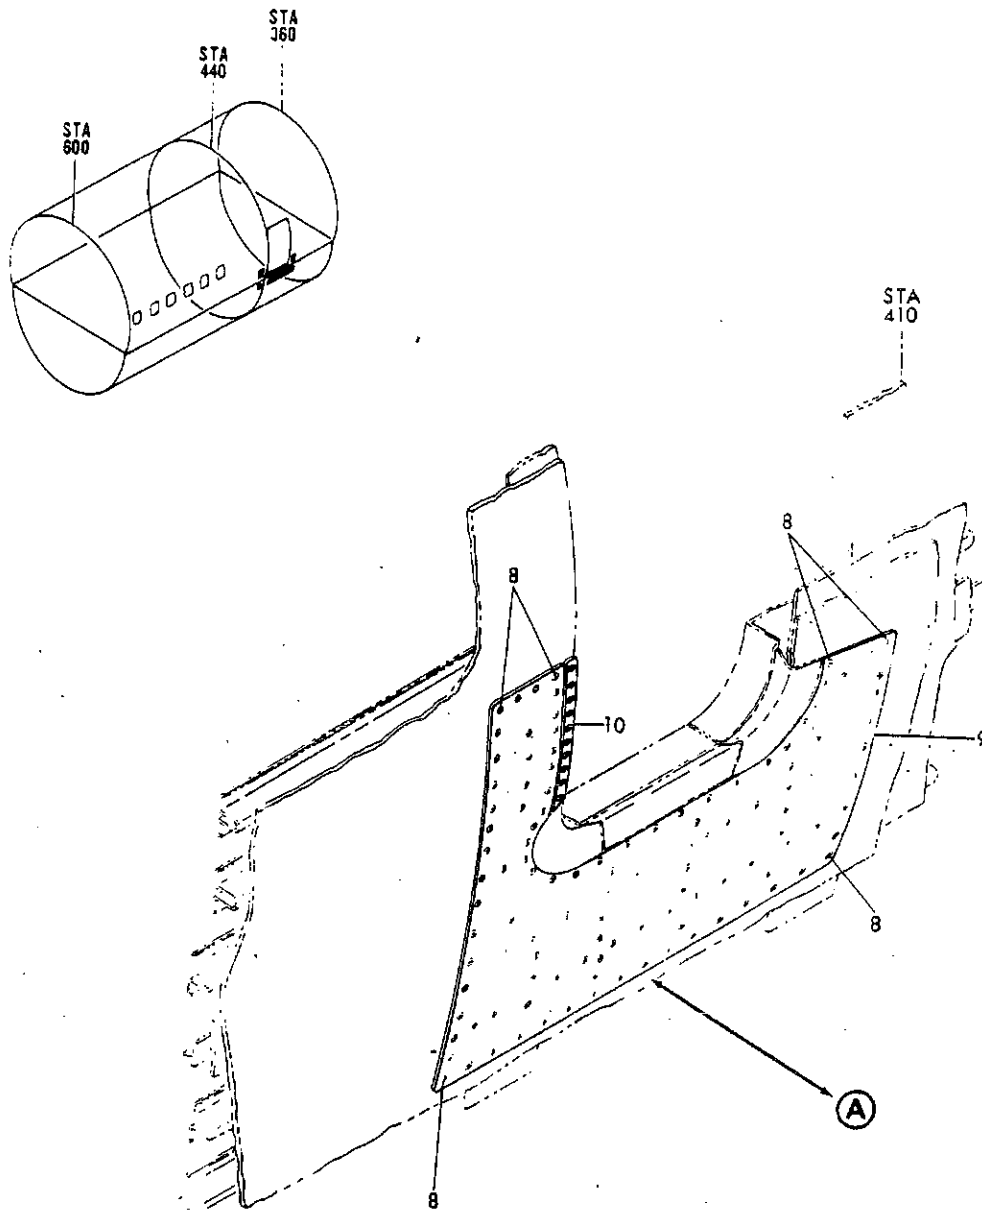


FIGURE 18. PLATE INSTL, FORWARD GALLEY DOOR SCUFF (SHEET 1)

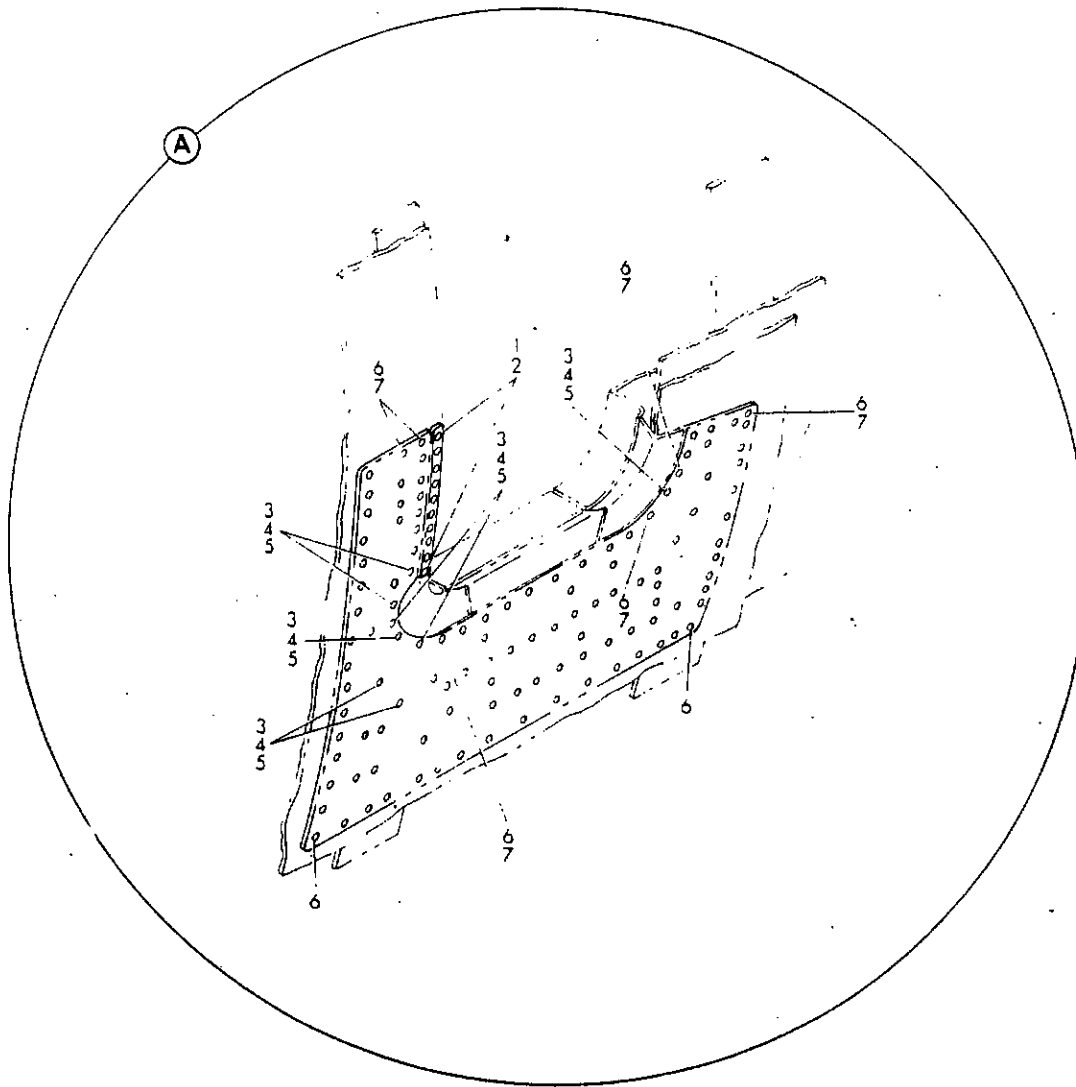


FIGURE 18. PLATE INSTL, FORWARD GALLEY DOOR SCUFF (SHEET 2)

NOV 21/90

52-02-10

DETAILED PARTS LIST
52-02-18
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
18	65-52079		PLATE INSTL, FORWARD GALLEY DOOR REMOVABLE SCUFF (SEE . 5199		RF
			53-2, FIG. 2, ITEM 112)		
8	NAS517-3-6		. SCREW	5199	AR
9	65-52079-1		. PLATE, LOWER.	5199	1
10	65-52079-2		. PLATE, UPPER.	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

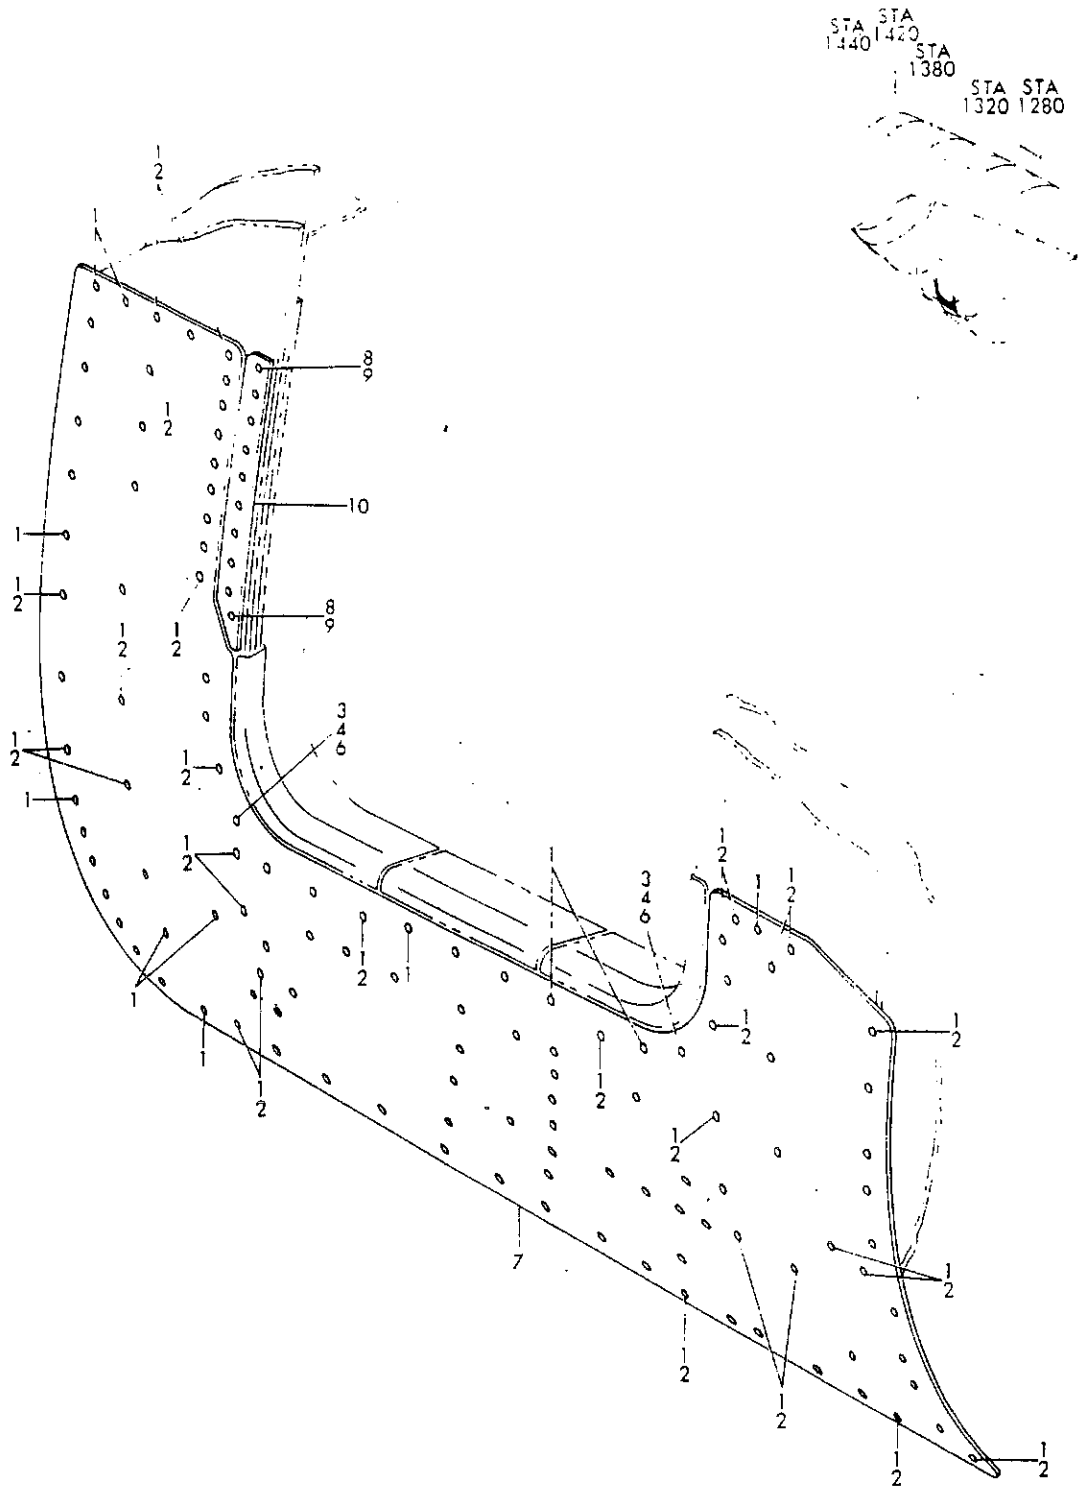


FIGURE 19. PLATE INSTL, GALLEY DOOR REMOVABLE SCUFF



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
19	65-52078	PLATE INSTL, AFT GALLEY DOOR REMOVABLE SCUFF (SEE 53-2, FIG. 3, ITEM 57)							5199	RF
7	65-52078-1	. PLATE, LOWER.							5199	1
	NAS517-3-5	. ATTACHING PARTS							5199	AR
		. SCREW							5199	
		-----*								
10	65-52078-2	. PLATE, UPPER.							5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

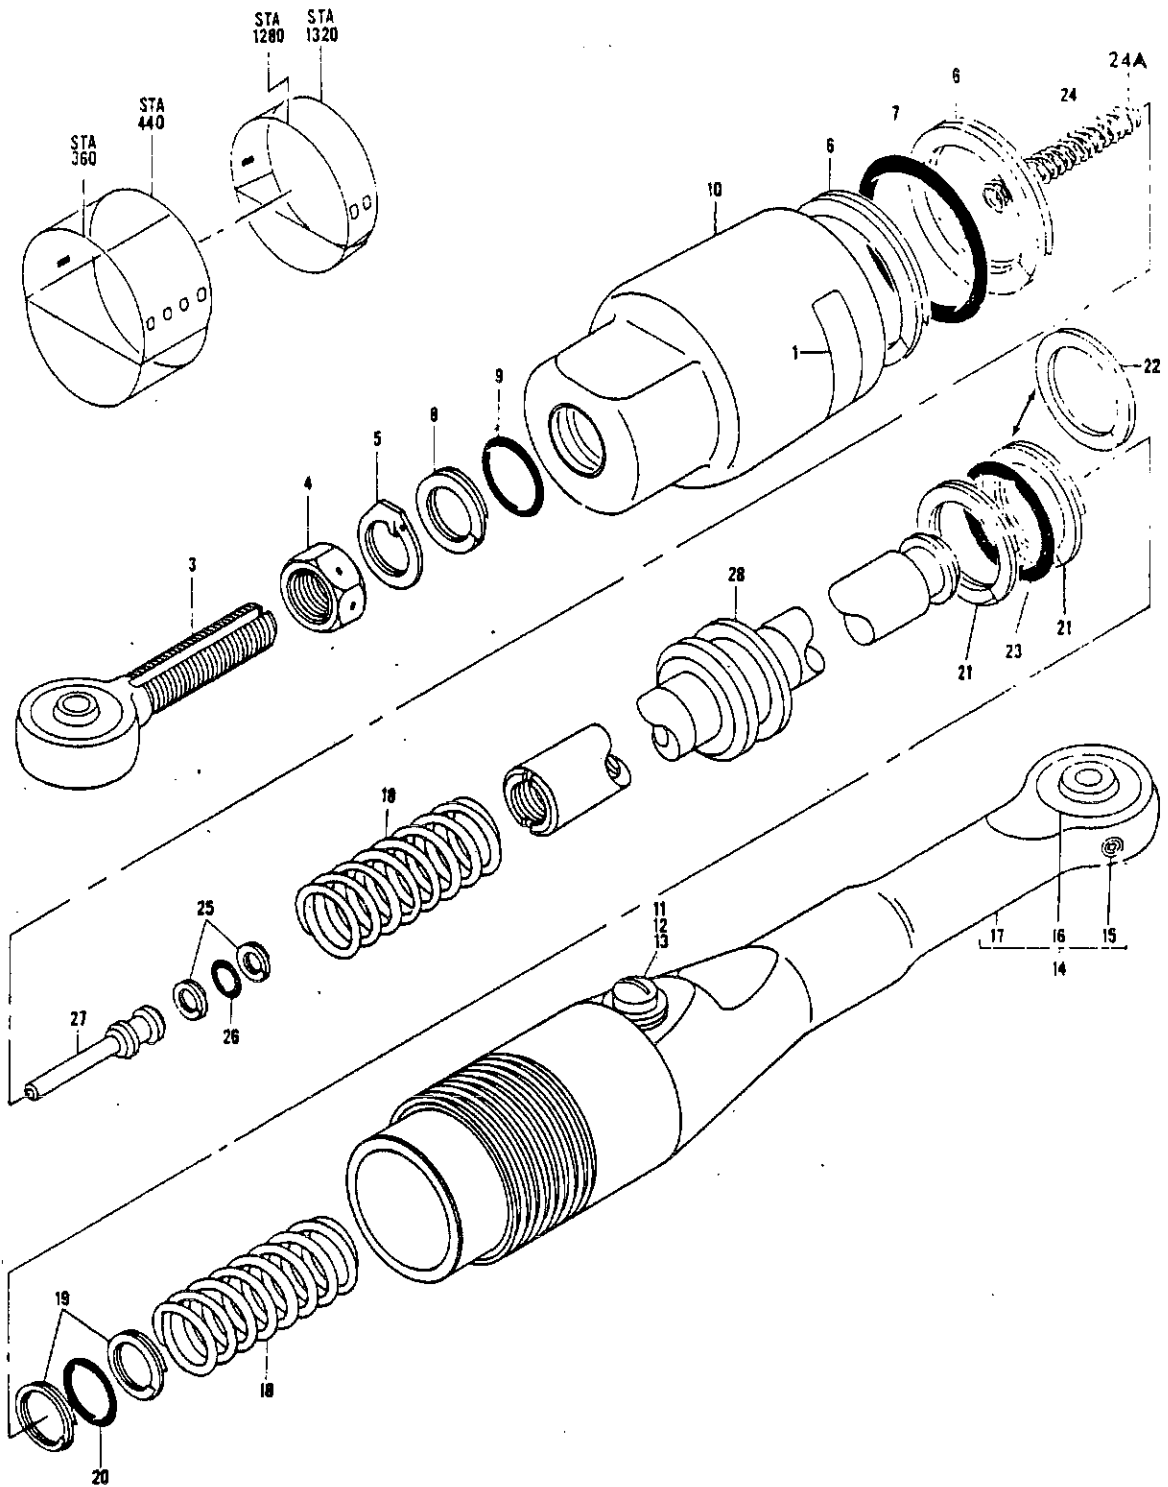


FIGURE 20. SNUBBER ASSY, GALLEY DOOR (DOORS ONLY)

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
20	65-2346-1	SNUBBER ASSY, GALLEY DOOR (DOORS ONLY) (SEE FIG. 1, . . . ITEM 7 AND FIG. 4, ITEM 54) (OPTIONAL TO 65-2346-3)							0101	RF
	65-2346-4	SNUBBER ASSY, GALLEY DOOR (DOORS ONLY) (SEE FIG. 1, . . . ITEM 7 AND FIG. 4, ITEM 54) (OPTIONAL TO 65-2346-3)							0101	RF
	65-2346-3	SNUBBER ASSY, GALLEY DOOR (DOORS ONLY) (SEE FIG. 1, . . . ITEM 7 AND FIG. 4, ITEM 54) (OPTIONALS 65-2346-1, -4)							0101	RF
	65-2346-4	SNUBBER ASSY, GALLEY DOOR (DOORS ONLY) (SEE FIG. 1, . . . ITEM 7 AND FIG. 4, ITEM 54) (OPTIONALS 65-2346-1, -3)							0299	RF
	65-2346-1	SNUBBER ASSY, GALLEY DOOR (DOORS ONLY) (SEE FIG. 1, . . . ITEM 7 AND FIG. 4, ITEM 54) (OPTIONAL TO 65-2346-4)							0299	RF
	65-2346-3	SNUBBER ASSY, GALLEY DOOR (DOORS ONLY) (SEE FIG. 1, . . . ITEM 7 AND FIG. 4, ITEM 54) (OPTIONAL TO 65-2346-4)							0299	RF
1	BACM10A20-168M	. METAL-CAL, PART NO. 65-2346-1 (USED ON 65-2346-1) . . .								1
3	BACB10A421L	. BEARING								1
4	NAS509-6	. NUT								1
5	NAS513-6	. WASHER								1
6	MS28782-20	. RING								2
7	AN6227B20	. PACKING								1
8	MS28782-10	. RING								1
9	AN6227B10	. PACKING								1
10	66-2540-1	. CAP, GALLEY DOOR HYDRAULIC SNUBBER								1
11	AN501A10-4	. SCREW								1
12	AN960-10L	. WASHER								1
13	BACS11S23A1	. SEAL, (USED ON 65-2346-1 AND -3) (OPTIONAL BACS11U1SH)								1
13	BACS11U1SH	. SEAL, (USED ON 65-2346-1 AND -3) (OPTIONAL TO BACS11S23A1)								1
13	NAS1598-3R	. SEAL, (USED ON 65-2346-4)								1
14	66-2527	. CYLINDER ASSY, (USED ON 65-2346-1 AND -3)								1
14	66-2527-2	. CYLINDER ASSY, (USED ON 65-2346-4)								1
15	NAS516-1	. FITTING								1
16	BACB10A358GCM2	. BEARING								1
17	66-2527-1	. CYLINDER, (USED ON 66-2527)								1
17	66-2527-3	. CYLINDER, (USED ON 66-2527-2)								1
18	63-2364	. SPRING, GALLEY DOOR SNUBBER COMPRESSION								2
19	MS28774-012	. RING (OPTIONAL MS78782-7)								2
19	MS28782-7	. RING (OPTIONAL TO MS78774-02)								2
20	AN6227B7	. PACKING								1
21	MS28782-13	. RING, (USED ON 65-2346-1)								2
22	S12716-115	. SEAL, (V97B20) (USED ON 65-2346-3 AND -4)								1
23	AN6227B13	. PACKING								1
24	63-1632	. SPRING, GALLEY DOOR SNUBBER COMPRESSION								1
25	MS28782-1	. RING								2
26	AN6227B1	. PACKING								1
27	63-1625	. PISTON, GALLEY DOOR HYDRAULIC SNUBBER								1
28	90-7819	. PLUNGER, GALLEY DOOR HYDRAULIC SNUBBER (USED ON . . . 65-2346-1)								1
28	90-7819-1	. PLUNGER, GALLEY DOOR HYDRAULIC SNUBBER (USED ON . . . 65-2346-3)							0299	1
28	69-49964-1	. PLUNGER, (NOT RELEASED) (USED ON 65-2346-4) FOR REFERENCE TO OTHER SNUBBER DETAILS, SEE NHA) . . .								1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

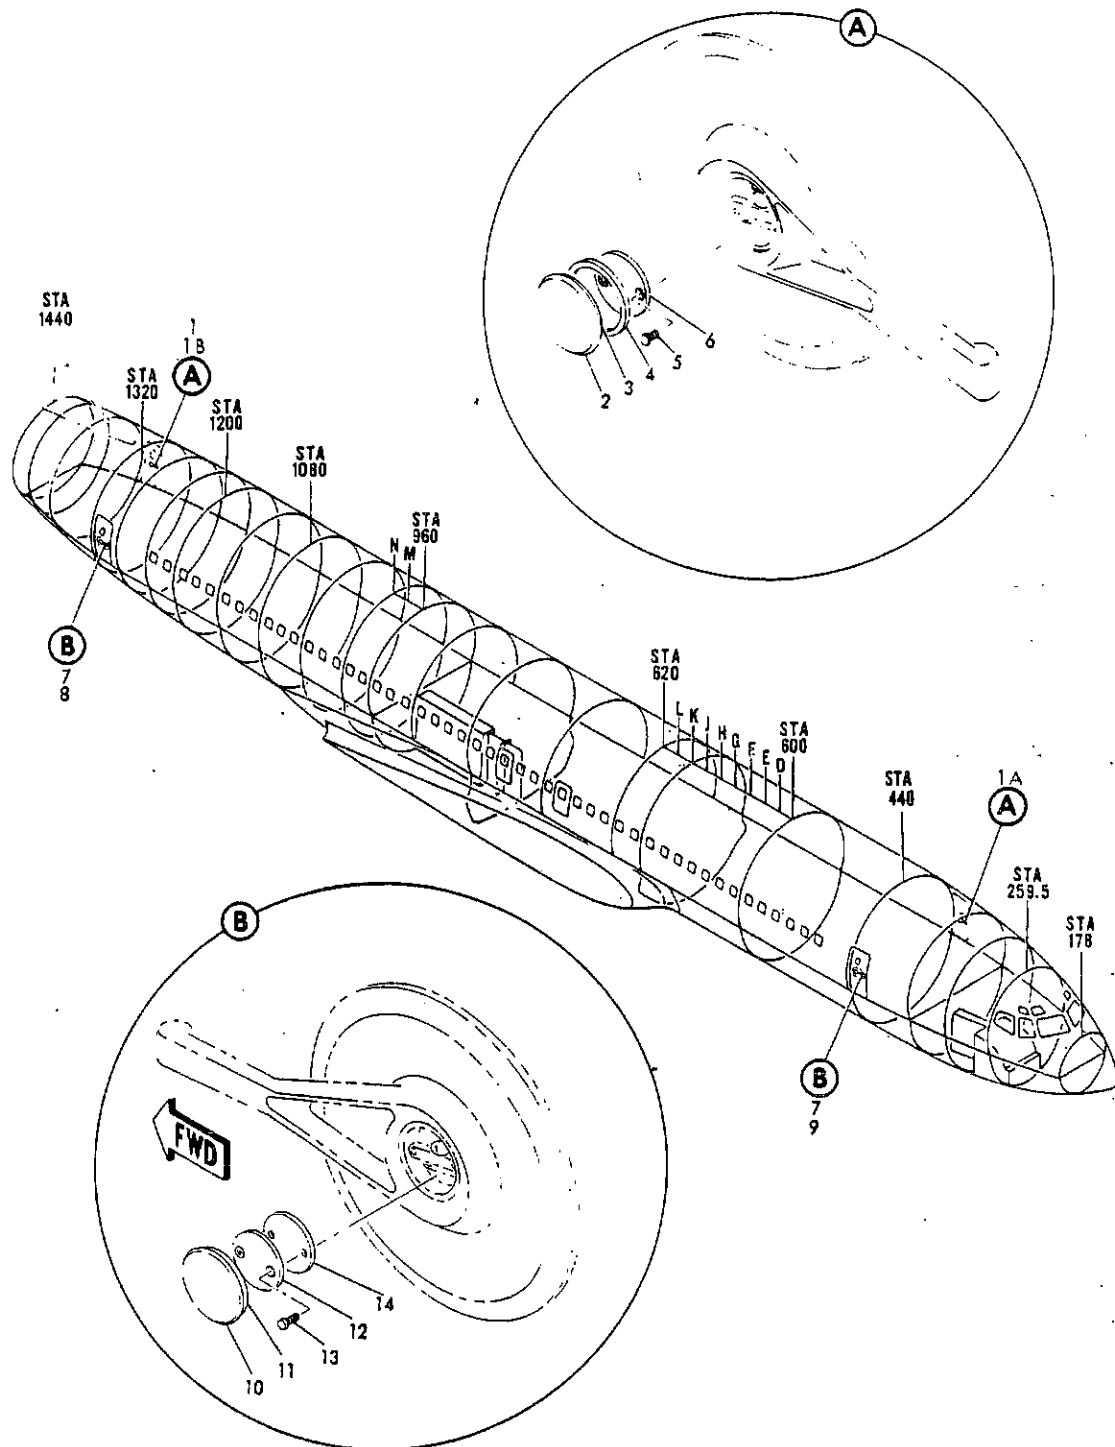


FIGURE 21. INSERT ASSY, ENTRY AND GALLEY DOOR INTERIOR HANDLE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
21			INSERT ASSY, ENTRY AND GALLEY DOOR INTERIOR HANDLE. . .								
	1	69-10070-18	. INSERT ASSY, ENTRY AND GALLEY DOOR INTERIOR HANDLE. . (SEE 52-1, FIG. 17, ITEM 33, 52-1, FIG. 18, ITEM 26, 52-1, FIG. 18A, ITEM 34, 52-1, FIG. 19, ITEM 18, 52-1, FIG. 20, ITEM 22 AND 52-1, FIG. 20A, ITEM 30) (OPTIONAL 69-10070-17A)								RF
	1	69-10070-17A	. INSERT ASSY, ENTRY AND GALLEY DOOR INTERIOR HANDLE. . (SEE 52-1, FIG. 17, ITEM 33, 52-1, FIG. 18, ITEM 26, 52-1, FIG. 18A, ITEM 34, 52-1, FIG. 19, ITEM 18, 52-1, FIG. 20, ITEM 22 AND 52-1, FIG. 20A, ITEM 30) (OPTIONAL TO 69-10070-18)								RF
	2	69-8642-4A	. . INSERT, (USED ON 69-10070-18)								1
	2	69-10070-16A	. . INSERT, (ALTERED FROM BAC SPEC NO. 10-60199-287). . (USED ON 69-10070-17A)								1
	3	69-10070-3A	. . BACKING, (USED ON 69-10070-1A AND -18).								1
	3	69-10070-15	. . BACKING, (USED ON 69-10070-17A AND -22A).								1
	4	69-10070-4	. . GASKET.								1
	5	BACS21A9	. . STUD.								2
	6	69-10070-2	. . SUPPORT, (USED ON 69-10070-1A AND -18).								1
	6	69-10070-14	. . SUPPORT, (USED ON 69-10070-17A AND -22A).								1
	7	69-10070-68	. INSERT ASSY, ENTRY AND GALLEY DOOR INTERIOR HANDLE. . (SEE FIG. 16, ITEM 39 AND FIG. 17, ITEM 34) (OPTIONAL 69-10070-21A)								RF
	7	69-10070-21A	. INSERT ASSY, ENTRY AND GALLEY DOOR INTERIOR HANDLE. . (SEE FIG. 16, ITEM 39 AND FIG. 17, ITEM 34) (OPTIONAL TO 69-10070-68)								RF
	10	69-8642-5A	. . INSERT, (USED ON 69-10070-68)								1
	10	69-10070-20A	. . INSERT, (ALTERED FROM BAC SPEC NO. 10-60199-287). . (USED ON 69-10070-21A)								1
	11	69-10070-8A	. . BACKING, (USED ON 69-10070-6A AND -68).								1
	11	69-10070-18	. . BACKING, (USED ON 69-10070-21A AND -26A).								1
	12	69-10070-10	. . GASKET, (USED ON 69-10070-6A, -6B, -21A -26A, -6. AND -21)							0150	1
	13	BACS21A9	. . STUD.								2
	14	69-10070-7	. . SUPPORT, (USED ON 69-10070-6A, -6B, -26A, -11A. -11B AND -6)							0150	1
	14	69-10070-19	. . SUPPORT, (USED ON 69-10070-21A AND -21)								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 03
CARGO COMPARTMENT DOORS

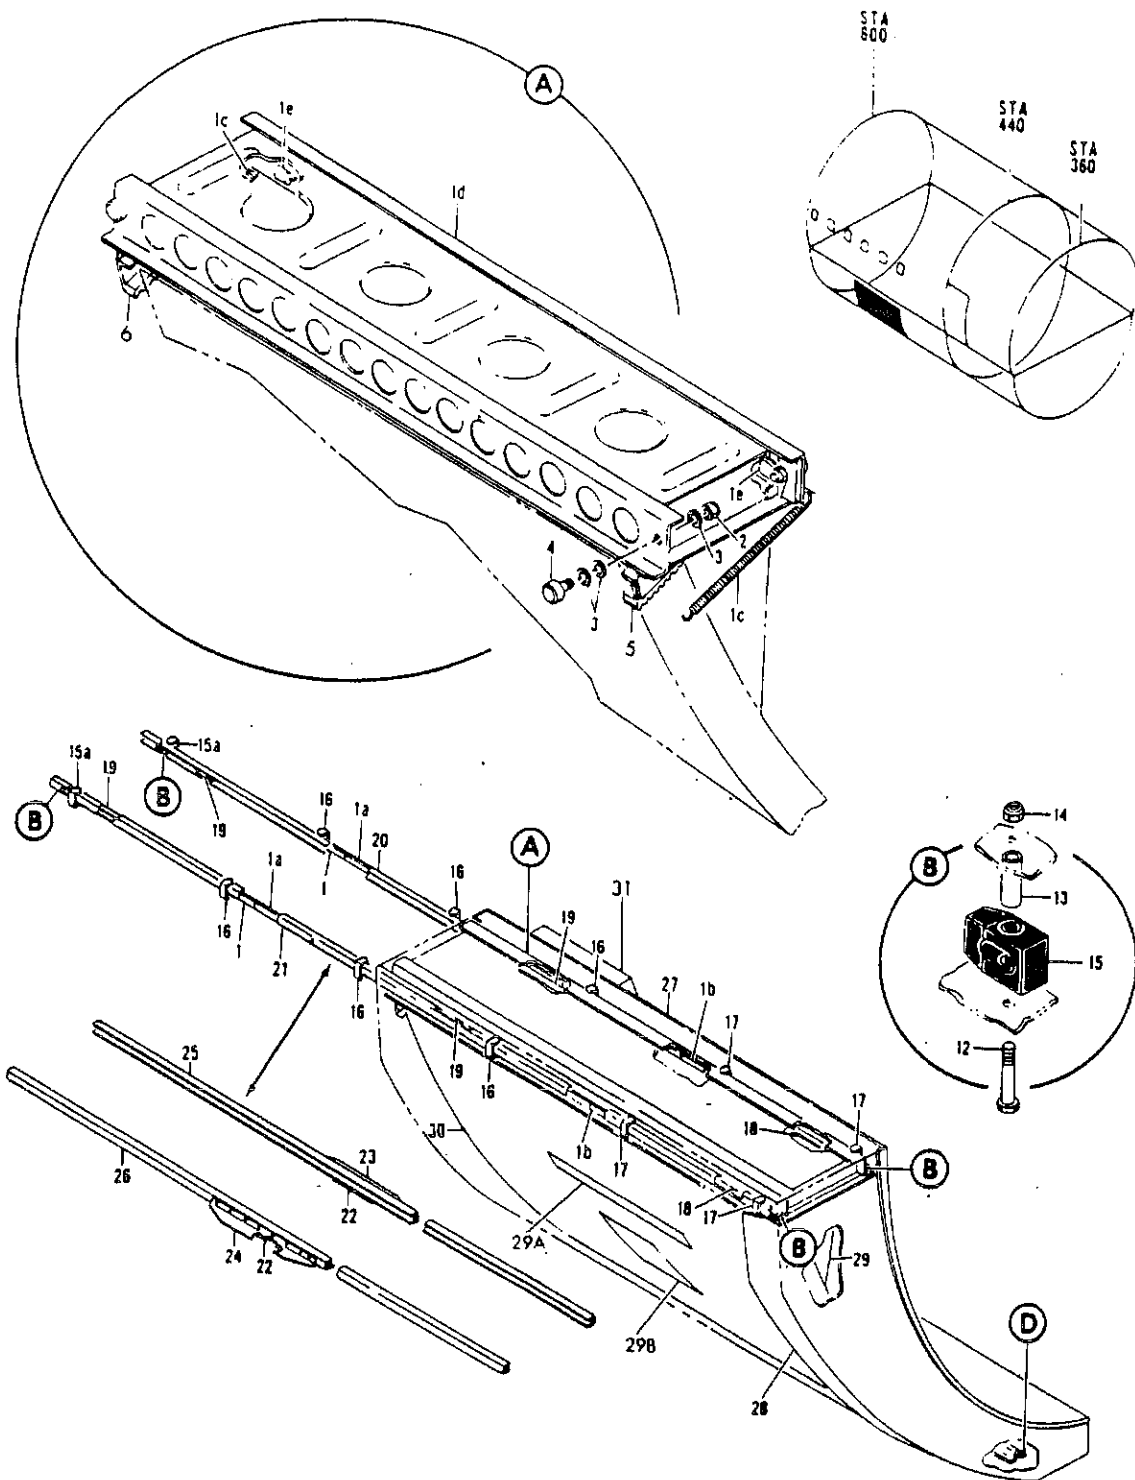


FIGURE 1. DOOR INSTL, FORWARD CARGO (SHEET 1)

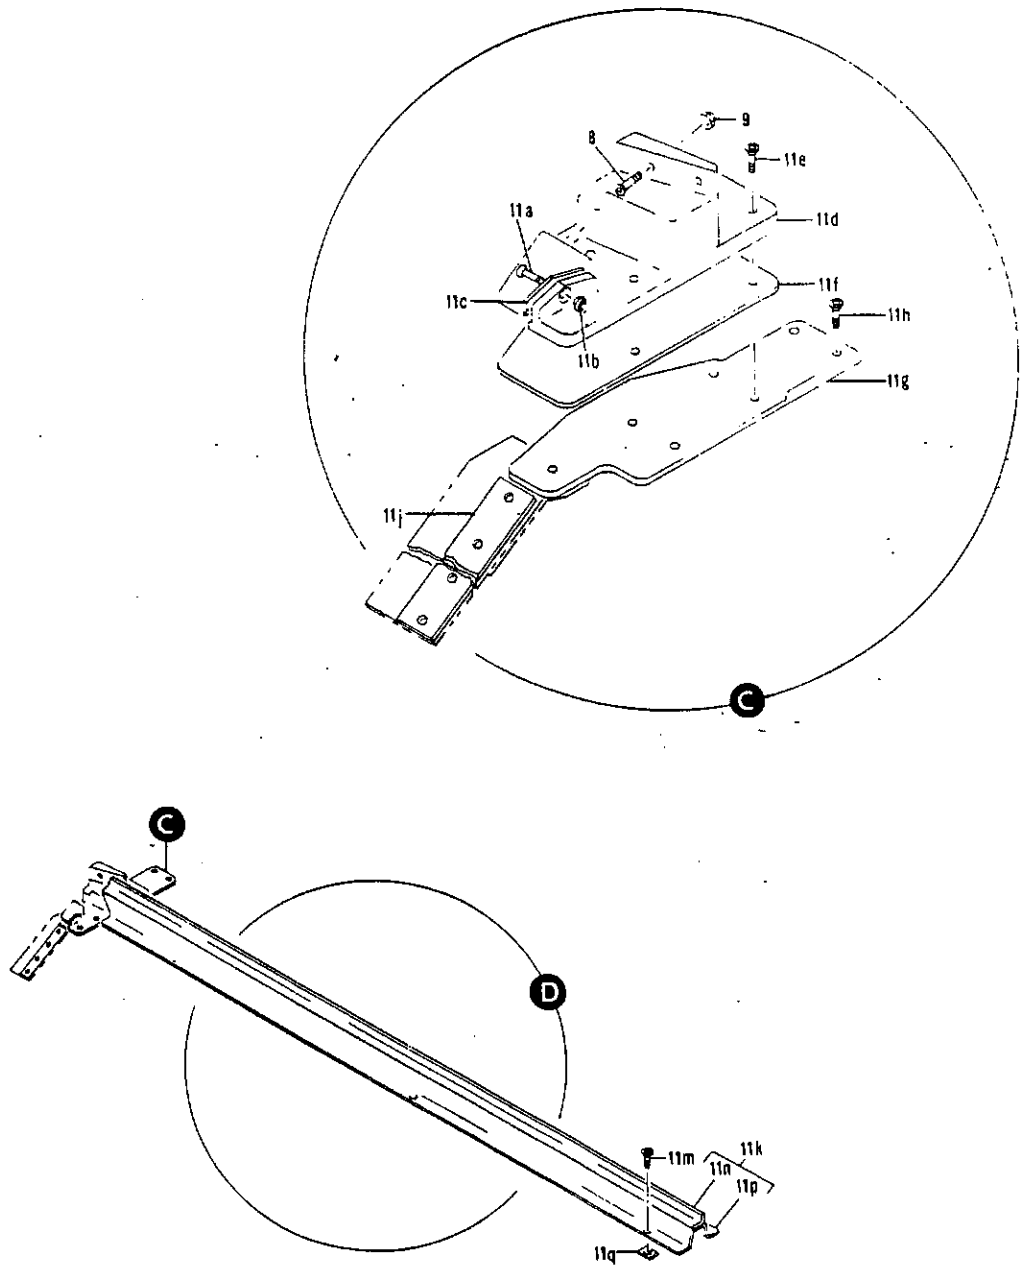


FIGURE 1. DOOR INSTL, FORWARD CARGO (SHEET 2)

NOV 21/90

52-03-1

DETAILED PARTS LIST
52-03-1
PAGE 1

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1	50-10861	DOOR INSTL, FORWARD CARGO (SEE 53-2, FIG. 2, ITEM 76)		RF
1	50-10861-15	. STRIP, FORWARD CARGO DOOR WEAR.		2
1A	50-10861-16	. STRIP, FORWARD CARGO DOOR WEAR.		2
1B	50-10861-17	. STRIP, FORWARD CARGO DOOR WEAR.		2
1C	63-8952	. SPRING, CARGO DOOR TENSION.		2
1D	65-2012	. CARRIAGE ASSY, CARGO DOOR		1
1E	BACB45814	. BUMPER ASSY		2
2	AN365-720	. NUT		4
3	AN960D716	. WASHER		12
4	BACB10862CT8	. BEARING		4
5	69-1639-5	. TRACK, CARGO DOOR ROLLER		1
6	69-1639-6	. TRACK, CARGO DOOR ROLLER		1
	65-21040	. TRACK INSTL, FORWARD CARGO DOOR LOWER ROLLER		1
8	NAS514P632-10	. SCREW		2
9	BACN108Y506W	. NUT		2
11A	NAS514P632-6	. SCREW		1
11B	BACN108Y506W	. NUT		1
11C	69-10093-3	. GUIDE, FORWARD CARGO DOOR LOWER ROLLER FITTING		1
11D	65-19015	. FITTING, FORWARD CARGO DOOR LOWER ROLLER TRACK		1
		ATTACHING PARTS		
11E	NAS514P1032-14	. SCREW		5
		-----*		
11F	69-10027-1	. SHIM, FORWARD CARGO DOOR LOWER ROLLER FITTING		AR
		LAMINATED		
11G	69-10027	. PLATE, FORWARD CARGO DOOR LOWER ROLLER FITTING		1
		ATTACHING PARTS		
11H	NAS514P1032-14	. SCREW		5
		-----*		
11K	69-10083-7	. TRACK ASSY, FORWARD CARGO DOOR LOWER ROLLER SUPPORT		1
11K	69-10083-9	. TRACK ASSY, FORWARD CARGO DOOR LOWER ROLLER SUPPORT		1
		ATTACHING PARTS		
11M	NAS603-10	. SCREW		13
		-----*		
11N	69-10083-8	. TRACK, FORWARD CARGO DOOR LOWER ROLLER		1
11P	69-10083-3	. SUPPORT, FORWARD CARGO DOOR LOWER ROLLER TRACK		1
11Q	69-10027-2	. SHIM, FORWARD CARGO DOOR LOWER ROLLER FITTING		AR
12	AN3-15A	. BOLT		4
13	NAS430D3-68	. SPACER		4
14	NAS679A3W	. NUT		4
15	69-1874	. PAD, CARGO DOOR ROLLER STOP		4
15A	65-1924	. FITTING, CARGO DOOR TRACK SUPPORT		2
		ATTACHING PARTS		
	AN3-6A	. BOLT		2
		(OPTIONAL NAS623-3-6)		
	NAS623-3-6	. BOLT		2
		(OPTIONAL TO AN3-6A)		
	NAS517-3-4	. SCREW		2
	NAS514P1032-8	. SCREW		2
	AN960D10L	. WASHER		2
	BACS40810-17	. SHIM		AR
	NAS679A3W	. NUT		6
		-----*		
16	65-1924	. FITTING, CARGO DOOR TRACK SUPPORT		6
		ATTACHING PARTS		
	AN3-6A	. BOLT		6
		(OPTIONAL NAS623-3-6)		
	NAS623-3-6	. BOLT		6
		(OPTIONAL TO AN3-6A)		
	NAS517-3-5	. SCREW		6
	NAS514P1032-8	. SCREW		6
	AN960D10L	. WASHER		6
	BACS40810-17	. SHIM		AR
	NAS679A3W	. NUT		18
		-----*		
17	65-1924	. FITTING, CARGO DOOR TRACK SUPPORT		4
		ATTACHING PARTS		
	AN3-6A	. BOLT		4
		(OPTIONAL NAS623-3-6)		
	NAS623-3-6	. BOLT		4
		(OPTIONAL TO AN3-6A)		
	NAS517-3-4	. SCREW		4
	NAS517-3-5	. SCREW		4
	AN960D10L	. WASHER		12
	BACS40810-17	. SHIM		AR

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	NAS679A3W	.	NUT	.	.	.	.	.	.	12
18	66-5541	.	SPRING, CARGO DOOR HOLD OPEN.	.	.	.	.	.	.	2
	NAS514P632-5	.	ATTACHING PARTS	.	.	.	.	.	.	4
	NAS679A06W	.	SCREW	.	.	.	.	.	.	4
19	66-4939	.	NUT	.	.	.	.	.	.	4
22	66-21212-1	.	SHIM, CARGO DOOR TRACK.	.	.	.	.	.	.	AR
	NAS517-3	.	ANGLE ASSY, SPLICE.	.	.	.	.	.	.	2
	AN960PD10	.	ATTACHING PARTS	.	.	.	.	.	.	4
	NAS679A3W	.	SCREW	.	.	.	.	.	.	4
		.	WASHER.	.	.	.	.	.	.	4
		.	NUT	.	.	.	.	.	.	4
23	50-10861-30	.	ANGLE, FORWARD CARGO DOOR	.	.	.	.	.	.	1
24	50-10861-31	.	ANGLE, FORWARD CARGO DOOR	.	.	.	.	.	.	1
25	50-10861-28	.	CHANNEL, FORWARD CARGO DOOR TRACK	.	.	.	.	.	.	1
26	50-10861-29	.	CHANNEL, FORWARD CARGO DOOR TRACK	.	.	.	.	.	.	1
27	50-10368-29	.	COVER ASSY, CARGO DOOR RECESS FORWARD	.	.	.	.	.	.	1
	BACS12N10-10	.	ATTACHING PARTS	.	.	.	.	.	.	33
		.	SCREW ASSY.	.	.	.	.	.	.	33
28	50-10861-5	.	COVER, FORWARD CARGO DOOR	.	.	.	.	.	.	1
29	65-2020	.	COMPENSATOR INSTL, FORWARD CARGO DOOR (SEE FIG. 4).	.	.	.	.	.	.	1
30	50-7944-92	.	DOOR ASSY, STATION 554.15 FORWARD CARGO (REWORKED BY SB 3322)	.	.	.	.	.	5199	1
30	50-7944-92	.	DOOR ASSY, STATION 554.15 FORWARD CARGO (REWORKED BY SB 3322 AND SB 3310)	.	.	.	.	.	0150	1
		.	DOORS, (SEE FIG. 2)	.	.	.	.	.	.	
		.	REQUIRED PLACARDS, (SEE 11-2, FIG. 228)	.	.	.	.	.	.	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

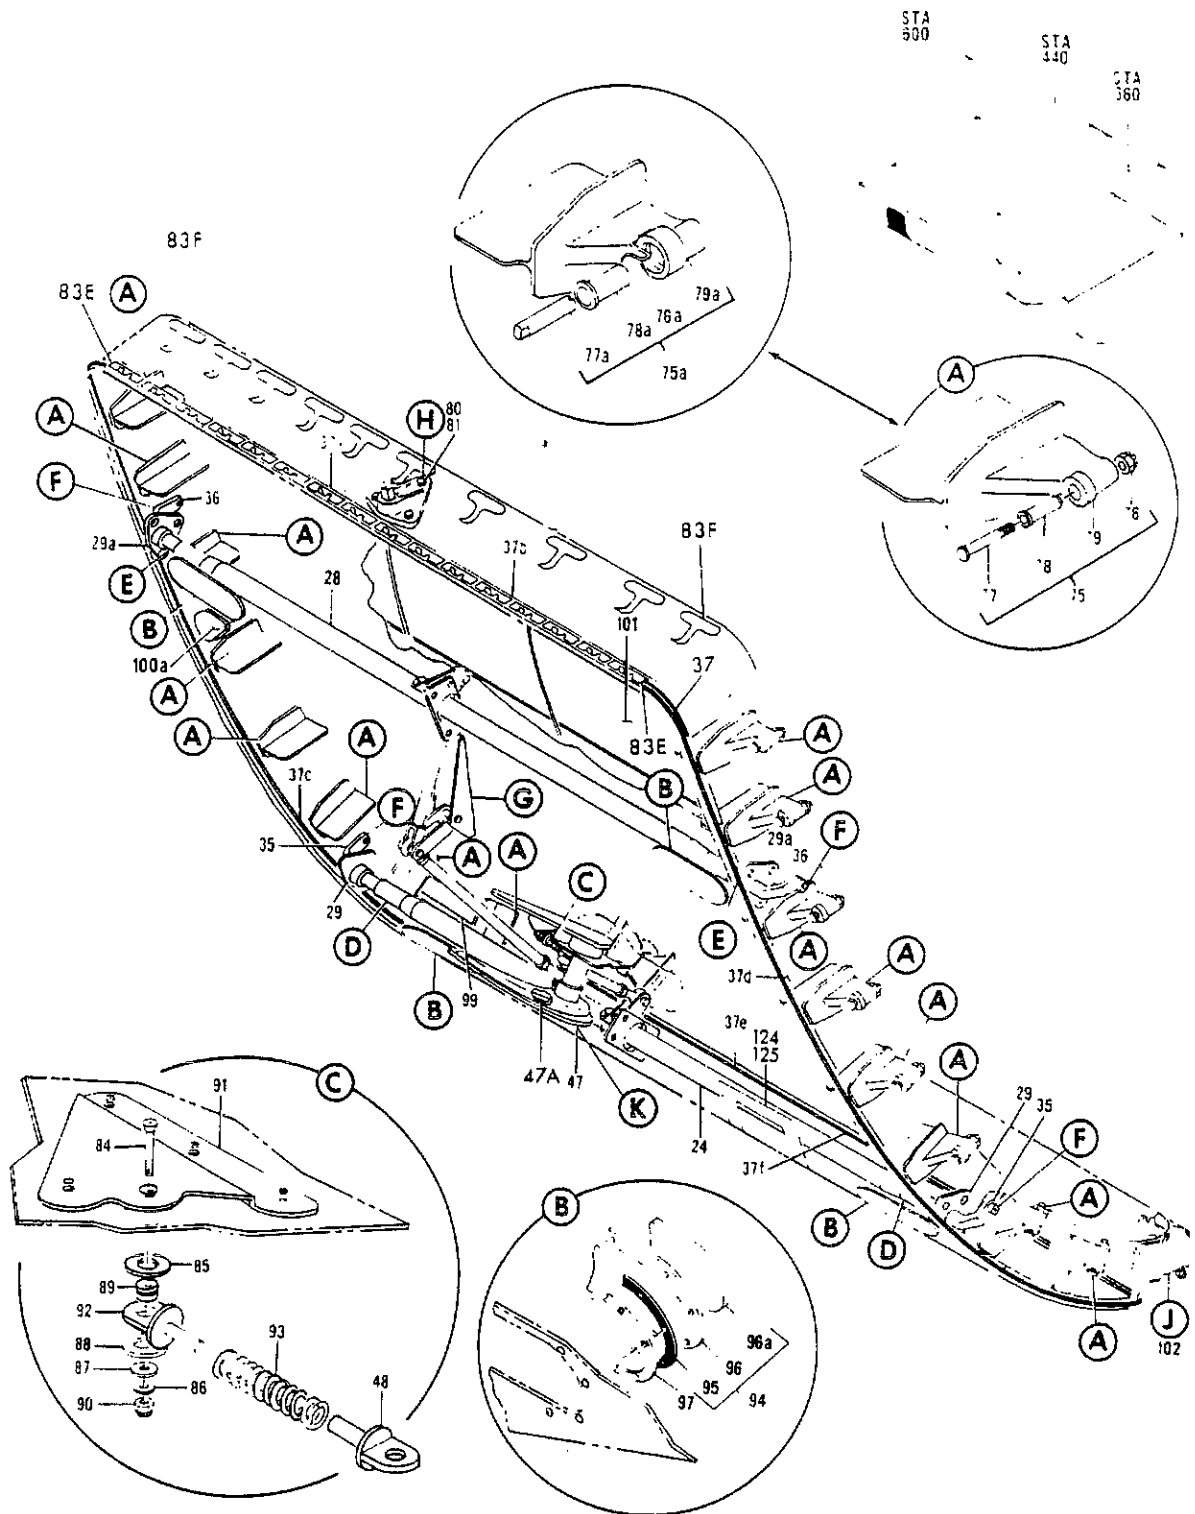


FIGURE 2. DOOR ASSY, STATION 554, 15 FORWARD CARGO (DOORS ONLY) (SHEET 1)

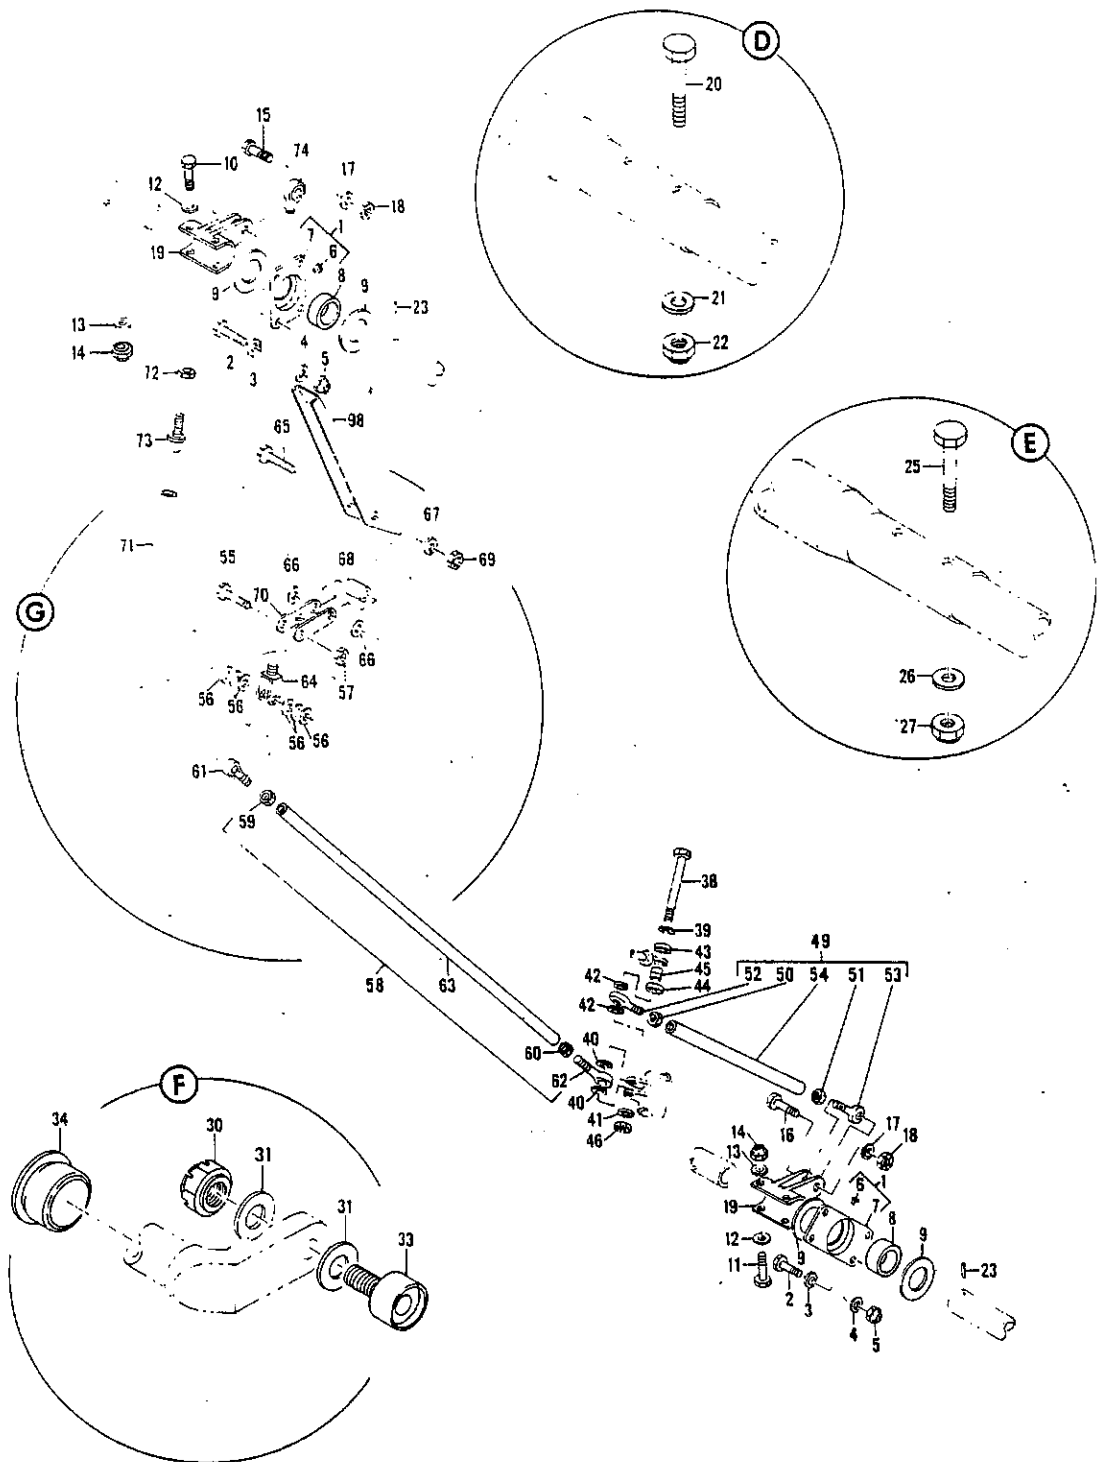


FIGURE 2. DOOR ASSY, STATION 554, 15 FORWARD CARGO (DOORS ONLY) (SHEET 2)

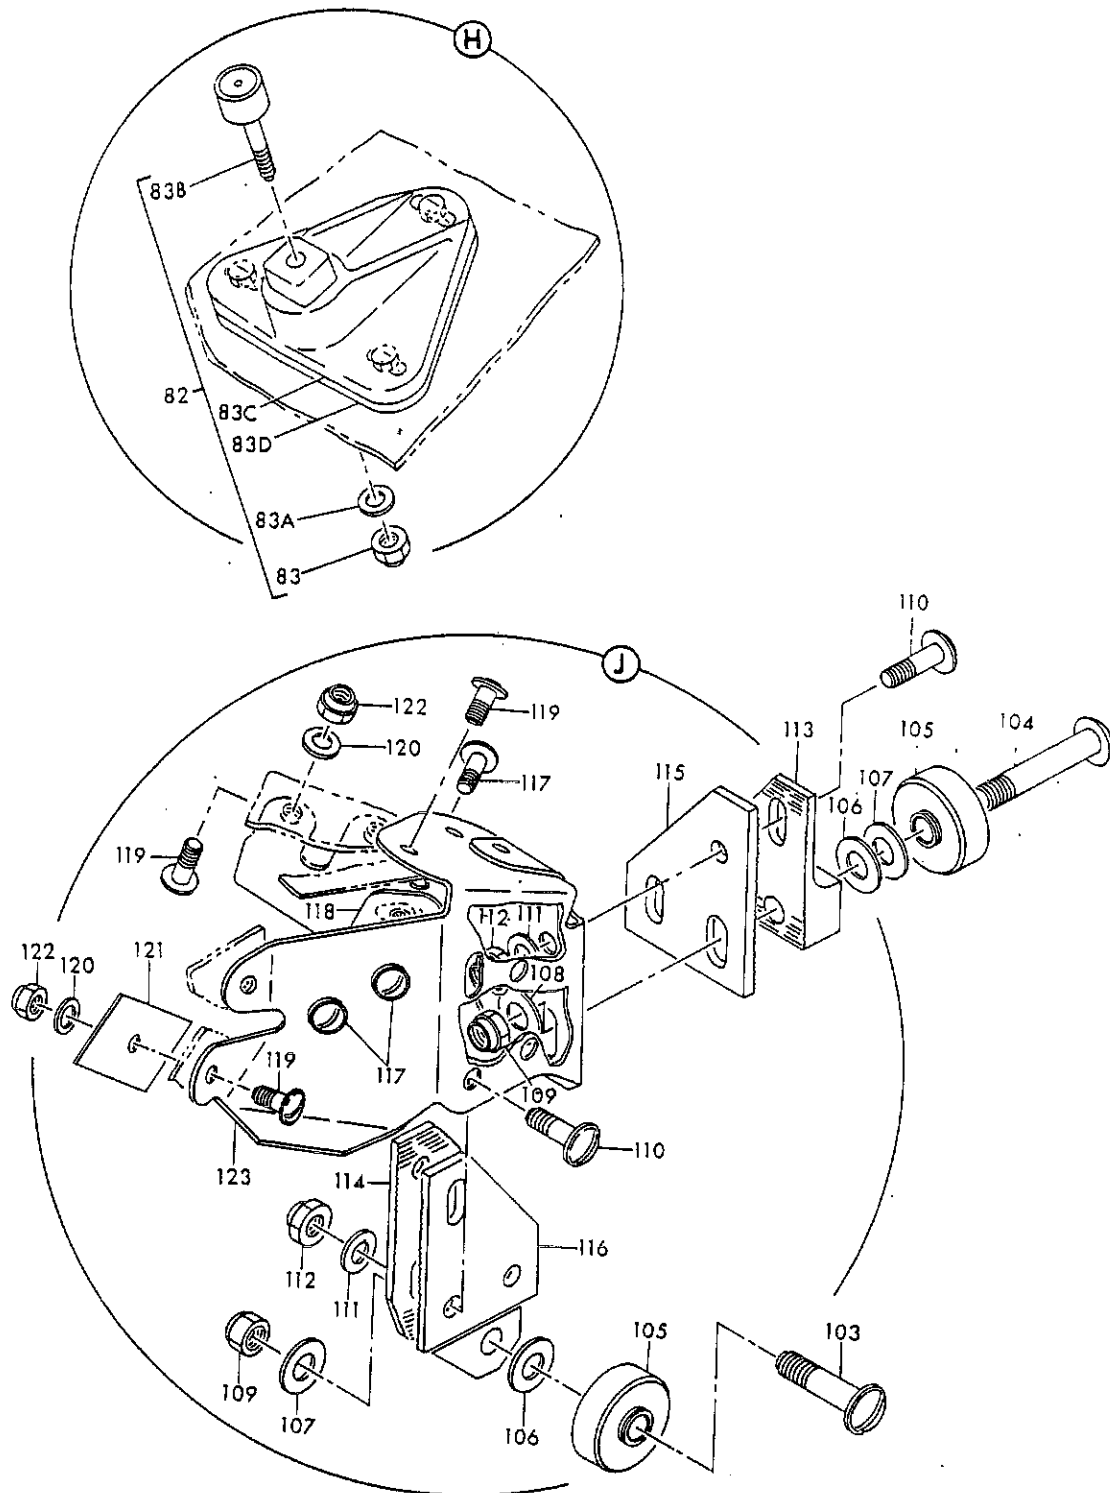


FIGURE 2. DOOR ASSY, STATION 554, 15 FORWARD CARGO (DOORS ONLY) (SHEET 3)

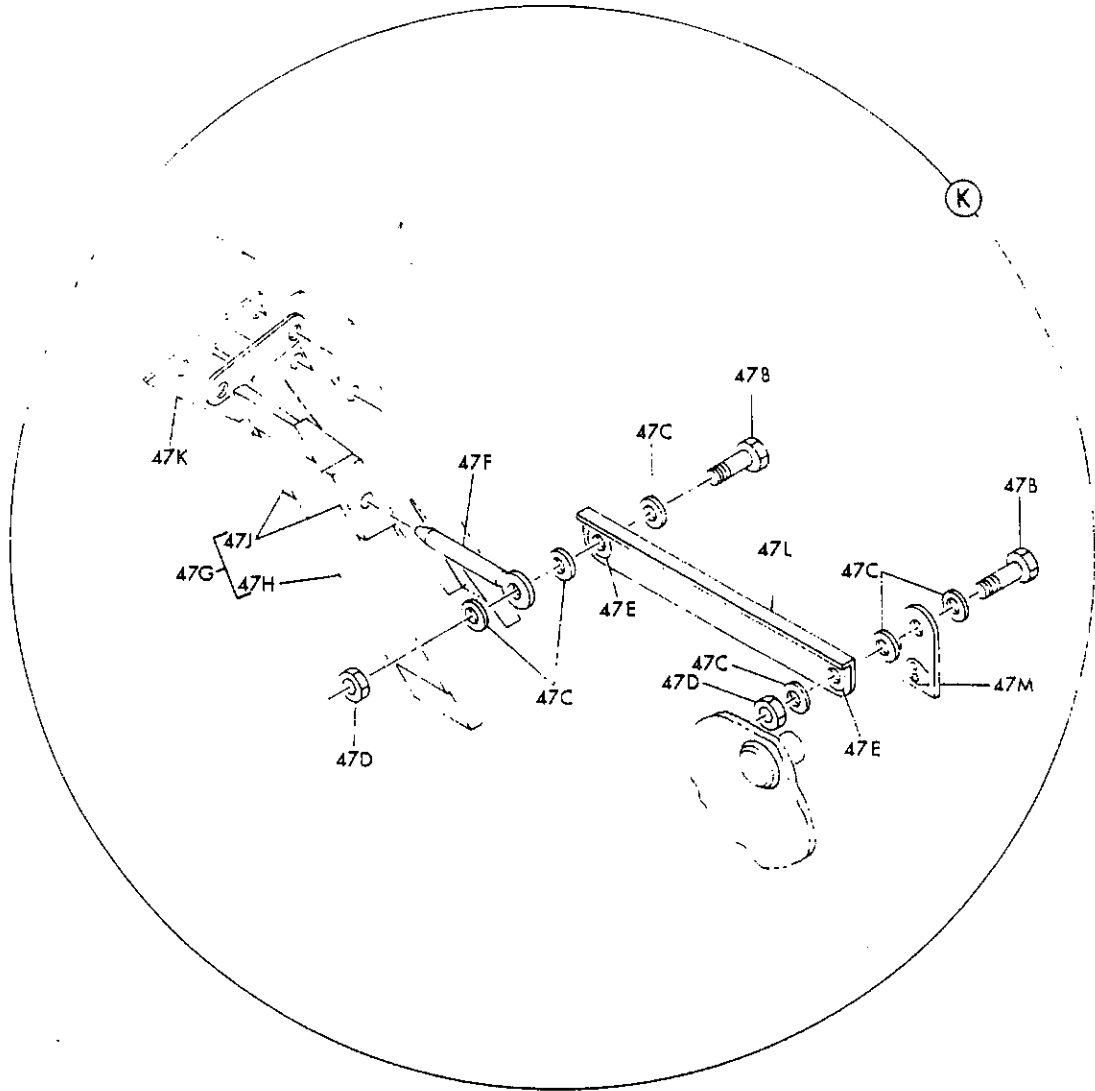


FIGURE 2. DOOR ASSY. STATION 554.15 FORWARD CARGO (DOORS ONLY) (SHEET 4)

NOV 21/90

52-03-2

DETAILED PARTS LIST
52-03-2
PAGE 3



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R	2	50-7944-92	5199	RF
		DOOR ASSY, STATION 554.15 FORWARD CARGO (DOORS ONLY). (REWORKED BY SB 3322) (SEE FIG. 1, ITEM 30)		
		50-7944-92	0150	RF
		DOOR ASSY, STATION 554.15 FORWARD CARGO (DOORS ONLY). (REWORKED BY SB 3322 AND SB 3310) (SEE FIG. 1, ITEM 30)		
	1	65-2306		2
		BEARING ASSY, DOOR CAM SHAFT HOUSING.		
	2	AN3-5		8
		ATTACHING PARTS		
	3	AN960D10		8
		BOLT.		
	4	AN960D10L		8
		WASHER.		
	5	NAS679A3W		8
		WASHER.		
		NUT		
	6	NAS516-1		1
		FITTING		
	7	65-2306-1		1
		HOUSING, DOOR CAM SHAFT		
	8	BACB10A397GCM2		2
		BEARING		
	9	NAS1515M16H		4
		WASHER.		
	10	NAS1103-21DW		2
		BOLT.		
	11	NAS1103-21DW		2
		BOLT.		
	12	AN960D10		4
		WASHER.		
	13	AN960D10L		4
		WASHER.		
	14	NAS679A3W		4
		NUT		
	15	NAS1103-12DW		1
		BOLT.		
	16	NAS1103-12DW		1
		BOLT.		
	17	AN960D10		2
		WASHER.		
	18	AN320-3		2
		NUT		
	19	65-1797		2
		FITTING, CARGO DOOR ARM		
	20	NAS1103-13W		4
		BOLT.		
	21	AN960D10L		4
		WASHER.		
	22	NAS679A3W		4
		NUT		
	23	NAS561P4-22		2
		PIN		
	24	65-2800		1
		TUBE, CARGO DOOR TORQUE		
	25	NAS1103-14W		4
		BOLT.		
	26	AN960D10		4
		WASHER.		
	27	NAS679A3W		4
		NUT		
	28	50-7944-22		1
		TUBE, STATION 554.15 FORWARD CARGO TORQUE		
	29	69-1396		2
		HOUSING, CARGO DOOR TORQUE TUBE		
		ATTACHING PARTS		
		BOLT.		4
		SCREW		2
		NUT		6
	29A	69-1396		2
		HOUSING, CARGO DOOR TORQUE TUBE		
		ATTACHING PARTS		
		BOLT.		4
		SCREW		2
		WASHER.		6
		NUT		6
	30	AN320-6		4
		NUT		
	31	AN960D616		8
		WASHER.		
	33	CB36015		4
		BEARING, (V60380) (OPTIONAL CF2000 (V92563))		
	33	CF2000		4
		BEARING, (V92563) (OPTIONAL TO CB36015 (V60380))		
	34	NAS77A12-40		4
		BUSHING		
	35	65-1900-6		2
		FITTING, CARGO DOOR ROLLER ARM.		
	36	65-1900-7		2
		FITTING, CARGO DOOR ROLLER ARM.		
	37	65-2865-12		1
		SEAL, CARGO DOOR.		
	37A	50-7944-78		1
		RETAINER, STATION 554.15 FORWARD CARGO DOOR ANGLE . . (LH)		
	37B	50-7944-79		1
		RETAINER, STATION 554.15 FORWARD CARGO DOOR ANGLE . . (RH)		
	37C	50-7944-80		1
		RETAINER, STATION 554.15 FORWARD CARGO DOOR ANGLE . . (LH)		
	37D	50-7944-81		1
		RETAINER, STATION 554.15 FORWARD CARGO DOOR ANGLE . . (RH)		
	37E	50-7944-82		1
		RETAINER, STATION 554.15 FORWARD CARGO DOOR ANGLE . . (LH)		
	37F	50-7944-83		1
		RETAINER, STATION 554.15 FORWARD CARGO DOOR ANGLE . . (RH)		
		ATTACHING PARTS		
		SCREW		84
	38	NAS1103-34DW		1
		BOLT.		

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2 39	AN9600416L	. WASHER.		1
40	AN960D10L	. WASHER.		1
41	AN960D10	. WASHER.		1
42	AN960-10L	. WASHER.		2
43	NAS549-716	. WASHER.		2
44	NAS43-7-16	. SPACER.		1
45	NAS72-3-009	. BUSHING.		1
46	AN320-3	. NUT.		1
47	10-60006-4	. LOCK ASSY, FLUSH (SAME AS H64-9 (V83014))	5199	1
47	H64-9	. LOCK ASSY, FLUSH (V83014) (SAME AS BAC SPEC NO. 10-60006-4) (SEE FIG. 20C)	5199	RF
47	10-60006-4	. LOCK ASSY, FLUSH (SAME AS H64-9 (V83014)) (DELETED BY RAF MOD 7211.019-157)	0150	1
47	H64-9	. LOCK ASSY, FLUSH (V83014) (SAME AS BAC SPEC NO. 10-60006-4) (DELETED BY RAF MOD 7211.019-157) (SEE FIG. 20C)	0150	RF
47	QB33992-1	. LOCK ASSY, FLUSH (VZ0268) (ALTERED FROM H64-9 (V83014)) (ADDED BY RAF MOD 7211.019-157) (SEE FIG. 20C)	0150	RF
48	63-1630-1	. RETAINER, CARGO DOOR SPRING		1
49	BACR24E2L60	. ROD ASSY, (OPTIONAL BACR24D2L60).		1
49	BACR24D2L60	. ROD ASSY, (OPTIONAL TO BACR24E2L60)		1
49	BACR24N2BL60	. ROD ASSY, (OPTIONAL BACR24D2L60).		1
50	AN316-6R	. NUT		1
51	AN316-6L	. NUT		1
52	BACB10A434	. BEARING, (USED ON BACR24E2L60).		1
52	BACB10A73	. BEARING, (USED ON BACR24D2L60).		1
53	BACB10A435L	. BEARING, (USED ON BACR24E2L60).		1
53	BACB10A72L	. BEARING, (USED ON BACR24D2L60).		1
54	BACR24E2L60E	. TUBE, (USED ON BACR24E2L60)		1
54	BACR24D2L60E	. TUBE, (USED ON BACR24D2L60)		1
55	NAS1103-16DW	. BOLT.		1
56	AN960D10L	. WASHER.		6
57	AN320-3	. NUT		1
58	BACR24E2L162	. ROD ASSY, (OPTIONAL BACR24D2L162)		1
58	BACR24D2L162	. ROD ASSY, (OPTIONAL TO BACR24E2L162).		1
59	AN316-6R	. NUT		1
60	AN316-6L	. NUT		1
61	BACB10A434	. BEARING, (USED ON BACR24E2L162)		1
61	BACB10A73	. BEARING, (USED ON BACR24D2L162)		1
62	BACB10A435L	. BEARING, (USED ON BACR24E2L162)		1
62	BACB10A72L	. BEARING, (USED ON BACR24D2L162)		1
63	BACR24E2L162E	. TUBE, (USED ON BACR24E2L162).		1
63	BACR24D2L162E	. TUBE, (USED ON BACR24D2L162).		1
64	69-1523	. FITTING, CARGO DOOR CLEVIS ROD END.		1
65	NAS1103-21DW	. BOLT.		1
66	AN960D10	. WASHER.		2
67	AN960D10L	. WASHER.		1
68	NAS43DD3-51	. SPACER.		1
69	AN320-3	. NUT		1
70	69-1393	. FITTING, CARGO DOOR IDLER		1
71	NAS357-80-680	. TUBE.		1
72	AN316-4R	. NUT		1
73	AN490HT8P	. ROD END		1
74	BACB10A450	. BEARING		1
75A	50-10370-13	. FITTING ASSY, CARGO DOOR ADJUSTABLE STOP. (OPTIONAL 50-10370-24) (DELETED BY SB 3310)	0150	16
75A	50-10370-24	. FITTING ASSY, CARGO DOOR ADJUSTABLE STOP (REPLACES. 50-10370-13 BY SB 3310)	0150	16
75A	50-10370-24	. FITTING ASSY, CARGO DOOR ADJUSTABLE STOP.	5199	16
76A	66-16691-1	. SPRING, DOOR STOP PIN RETAINER.		1
77A	66-12687-1	. PIN, DOOR STOP.		1
78A	66-12688-1	. BUSHING, DOOR STOP.		1
79A	50-10370-14	. FITTING, CARGO DOOR ADJUSTABLE STOP (USED ON. 50-10370-13) (DELETED BY SB 3310)	0150	1
79A	50-10370-25	. FITTING, CARGO DOOR ADJUSTABLE STOP (USED ON. 50-10370-24)		16
80	AN3-5A	. BOLT.		3
81	NAS679A3W	. NUT		3
82	69-1504-5	. FITTING ASSY, CARGO DOOR ADJUSTABLE DOOR GUIDE.		1
83	BACN108Y53W	. NUT		1
83A	AN960D10	. WASHER.		1
83B	BACB108H72CF7	. BEARING UNIT.		1
83C	69-1504-6	. FITTING, CARGO DOOR ADJUSTABLE DOOR GUIDE		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

R
R
R
R

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2 830	69-1808	.	PLATE, CARGO DOOR GUIDE SERRATED.		1
84	BAC830LU3014	.	BOLT.		1
85	NAS549-716	.	WASHER.		1
86	AN960D416	.	WASHER.		1
87	AN960D10	.	WASHER.		1
88	NAS549-716	.	WASHER.		1
89	NAS72-3-005	.	BUSHING.		1
90	AN310-3	.	NUT.		1
91	63-1627	.	SUPPORT, FORWARD CARGO DOOR SPRING.		1
92	63-1629-1	.	CENTERER, CARGO DOOR SPRING.		1
93	63-1628	.	SPRING, CARGO DOOR COMPRESSION SAFETY (DELETED BY SB 3322)		1
93	69-69349-1	.	SPRING, CARGO DOOR COMPRESSION SAFETY (ADDED BY SB. 3322)		1
94	65-2908	.	DOOR ASSY, FORWARD CARGO DOOR ACCESS.		4
	NAS517-3-4	.	ATTACHING PARTS		32
		.	SCREW.		
		.	-----*		
95	65-2908-2	.	SEAL, FORWARD CARGO DOOR ACCESS DOOR.		1
96	65-2908-1	.	DOOR, FORWARD CARGO DOOR ACCESS.		1
96A	65-2908-5	.	PAD, FORWARD CARGO DOOR ACCESS DOOR INSULATION.		1
97	50-7944-23	.	DOUBLER, STATION 554.15 FORWARD CARGO ACCESS DOOR.		4
98	66-1610	.	SUPPORT, FORWARD CARGO DOOR CHANNEL.		1
		.	ATTACHING PARTS		
	NAS517-3-3	.	SCREW.		1
	AN960D10	.	WASHER.		1
	NAS679A3W	.	NUT.		1
		.	-----*		
99	69-4457-1	.	HANDLE, CARGO DOOR CLOSING.		1
100A	AN7510-1	.	PLATE.		1
101	65-17093	.	INSULATION INSTL, FORWARD CARGO DOOR (SEE FIG. 3)		1
102	65-21078-1	.	SUPPORT ASSY, FORWARD CARGO DOOR ROLLER.		1
103	AN525-416-18	.	SCREW.		1
104	AN525-416-24	.	SCREW.		1
105	BACB10A338	.	BEARING.		2
106	AN960-416L	.	WASHER.		AR 2
107	AN960-416	.	WASHER.		2
108	AN960D416	.	WASHER.		1
109	NAS679A4W	.	NUT.		2
110	AN525-10-11	.	SCREW.		5
111	AN960D10	.	WASHER.		5
112	NAS679A3W	.	NUT.		5
113	69-9991	.	FITTING, FORWARD CARGO DOOR FORE AND AFT ROLLER.		1
114	69-9992	.	FITTING, FORWARD CARGO DOOR IN AND OUT ROLLER.		1
115	69-9990-1	.	PLATE, FORWARD CARGO DOOR SERRATED.		1
116	69-9990	.	PLATE, FORWARD CARGO DOOR SERRATED.		1
117	AN525-10-8	.	SCREW.		3
118	69-10031-5	.	SUPPORT ASSY, FORWARD CARGO DOOR ROLLER (USED ON. 65-21078-1)		1
119	AN525-10-8	.	SCREW.		6
120	AN960D10	.	WASHER.		4
121	BACS40B16-16	.	SHIM.		AR 4
122	NAS679A3W	.	NUT.		4
123	69-10031-7	.	SUPPORT, FORWARD CARGO DOOR ROLLER (USED ON. 65-21078-1)		1
		.	FOR REFERENCE TO OTHER DOOR DETAILS, SEE NHA.		

MISSING ITEM NUMBERS ARE NOT APPLICABLE


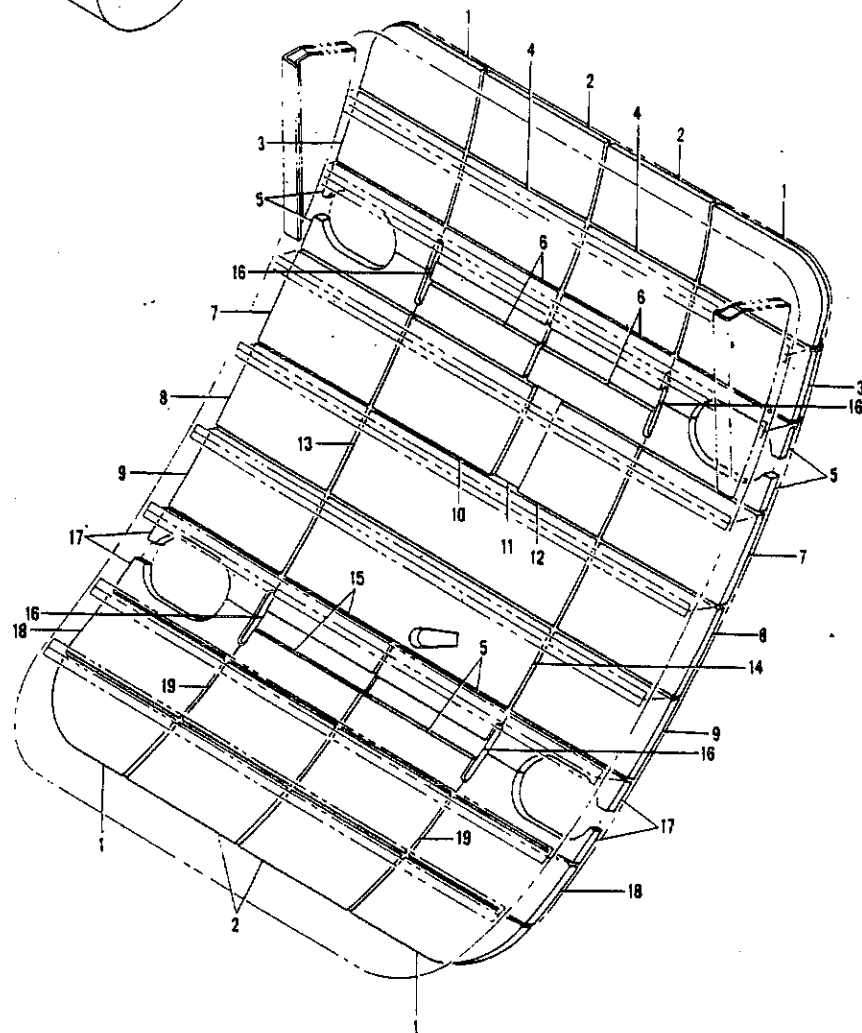


FIGURE 3. INSULATION INSTL, FORWARD CARGO DOOR,

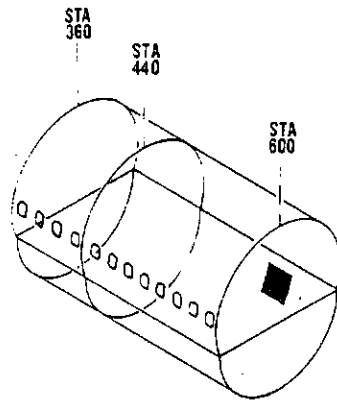

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3	65-17093		INSULATION INSTL, FORWARD CARGO DOOR (SEE FIG. 2, ITEM 101)		RF
1	65-17093-1		. PAD, FORWARD CARGO DOOR INSULATION.		4
2	65-17093-2		. PAD, FORWARD CARGO DOOR INSULATION.		4
3	65-17093-3		. PAD, FORWARD CARGO DOOR INSULATION.		2
4	65-17093-4		. PAD, FORWARD CARGO DOOR INSULATION.		2
5	65-17093-20		. PAD, FORWARD CARGO DOOR INSULATION.		4
6	65-17093-22		. PAD, FORWARD CARGO DOOR INSULATION.		4
7	65-17093-6		. PAD, FORWARD CARGO DOOR INSULATION.		2
8	65-17093-8		. PAD, FORWARD CARGO DOOR INSULATION.		2
9	65-17093-10		. PAD, FORWARD CARGO DOOR INSULATION.		2
10	65-17093-7		. PAD, FORWARD CARGO DOOR INSULATION.		1
11	65-17093-18		. PAD, FORWARD CARGO DOOR INSULATION.		1
12	65-17093-12		. PAD, FORWARD CARGO DOOR INSULATION.		1
13	65-17093-9		. PAD, FORWARD CARGO DOOR INSULATION.		1
14	65-17093-11		. PAD, FORWARD CARGO DOOR INSULATION.		1
15	65-17093-13		. PAD, FORWARD CARGO DOOR INSULATION.		4
16	65-17093-17		. PAD, FORWARD CARGO DOOR INSULATION.		4
17	65-17093-21		. PAD, FORWARD CARGO DOOR INSULATION.		4
18	65-17093-14		. PAD, FORWARD CARGO DOOR INSULATION.		2
19	65-17093-15		. PAD, FORWARD CARGO DOOR INSULATION.		2
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

STA
600

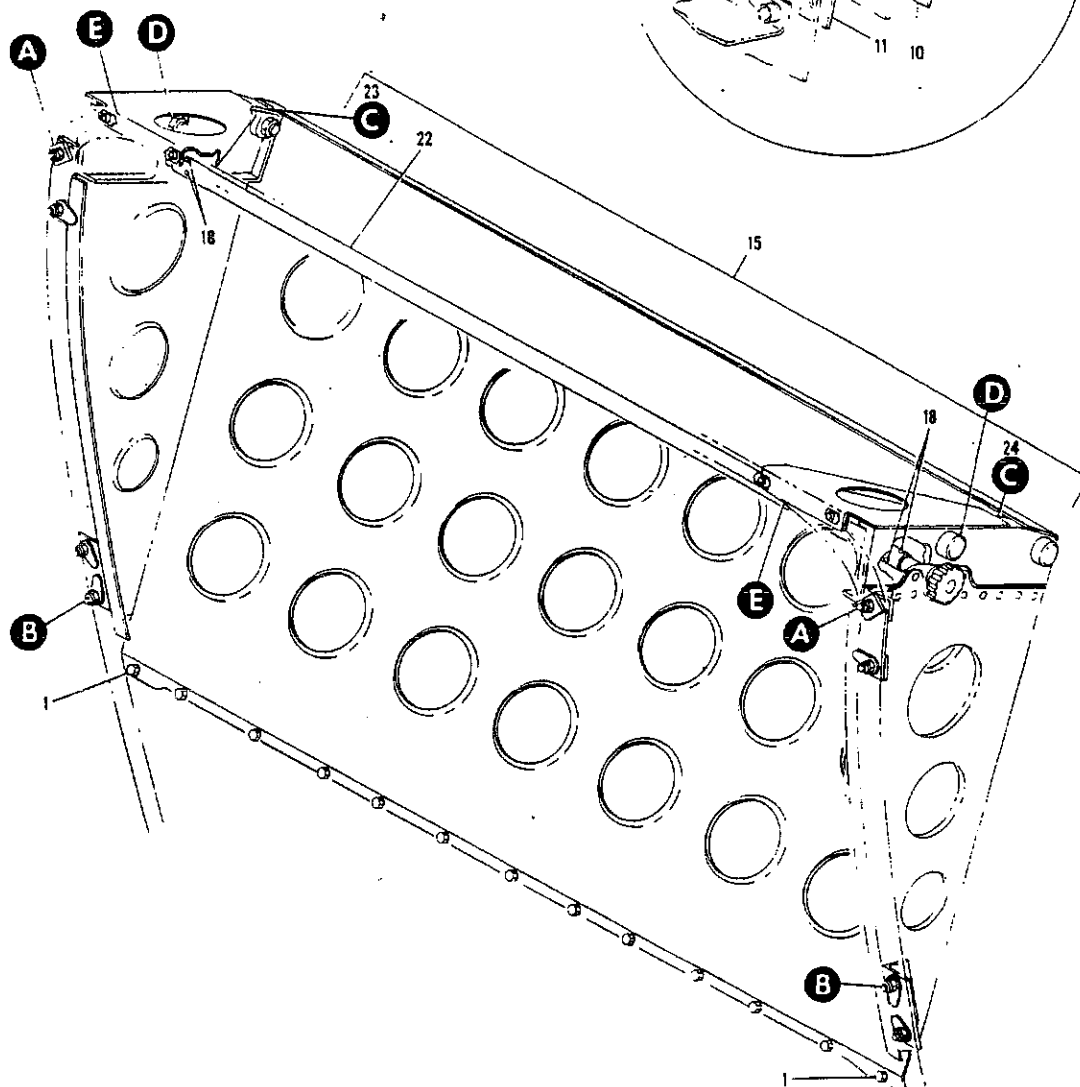
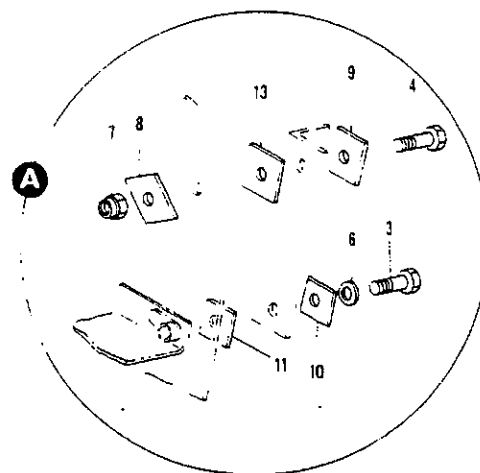
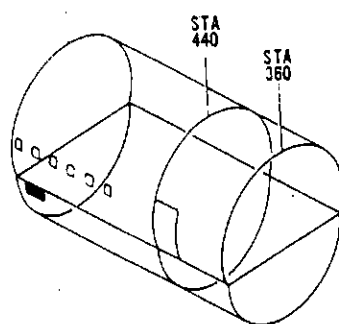


FIGURE 4. COMPENSATOR INSTL, FORWARD CARGO DOOR (SHEET 1)

DETAILED PARTS LIST
52-03-4
PAGE 0

52-03-4

NOV 21/90

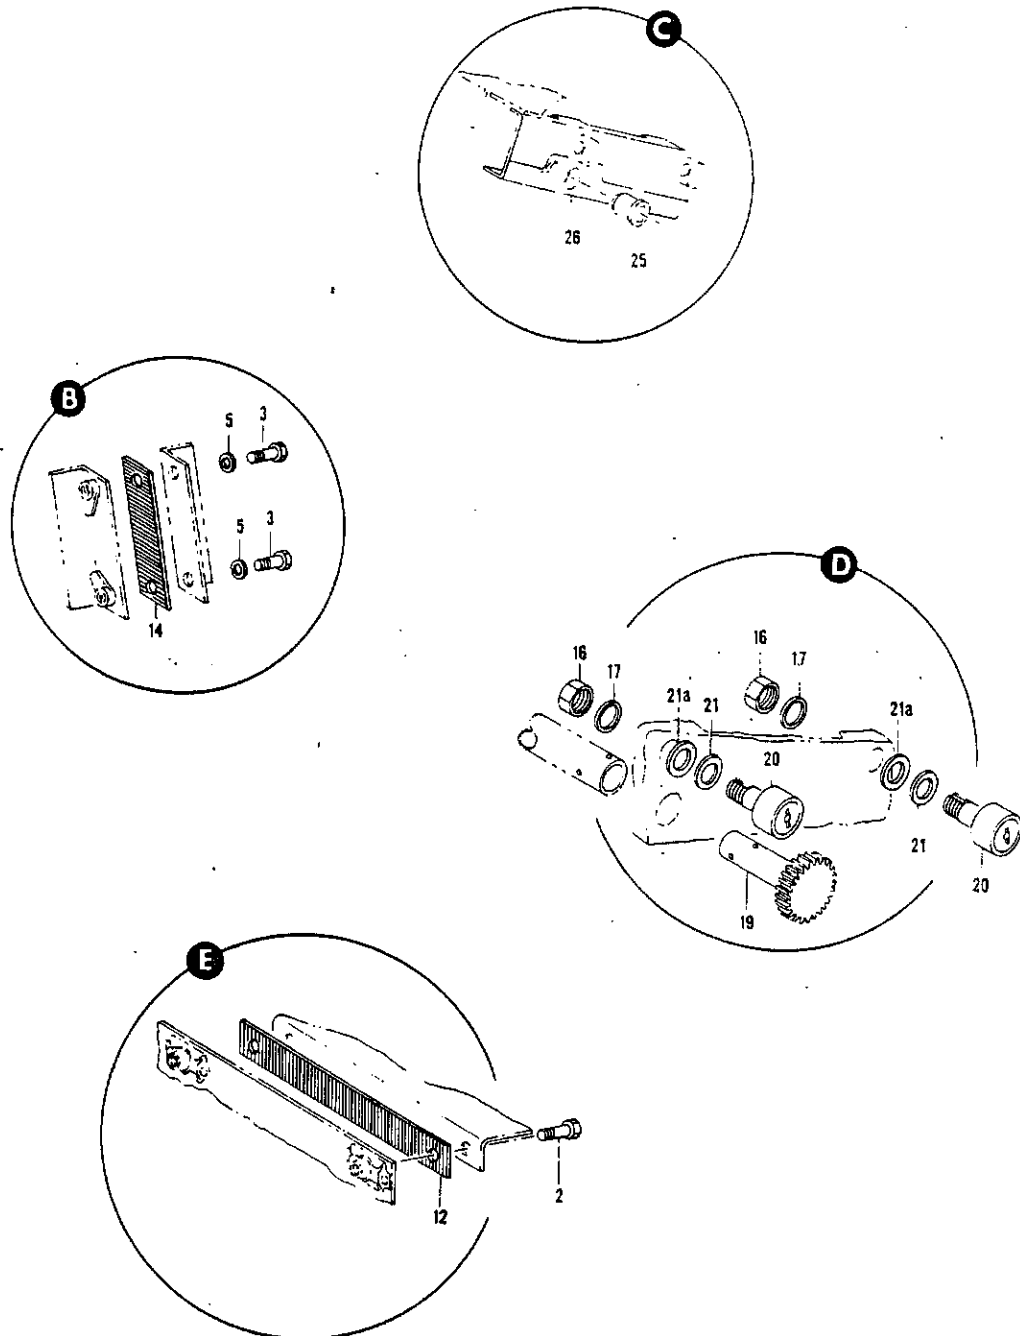


FIGURE 4 COMPENSATOR INSTL, FORWARD CARGO DOOR (SHEET 2)

NOV 21/90

52-03-4

DETAILED PARTS LIST
52-03-4
PAGE 1

BOEING



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
4	65-2020	COMPENSATOR INSTL, FORWARD CARGO DOOR (SEE FIG. 1, . . . ITEM 29)								RF
1	AN3-4A	.	BOLT.	.	.	.	.	.		13
2	AN3-5A	.	BOLT.	.	.	.	.	.		4
3	AN3-6A	.	BOLT.	.	.	.	.	.		6
4	AN3-7A	.	BOLT.	.	.	.	.	.		2
5	AN960D10	.	WASHER.	.	.	.	.	.		4
6	AN960D10L	.	WASHER.	.	.	.	.	.		2
7	BACN10BY54W	.	NUT	.	.	.	.	.		2
8	65-2020-13	.	FILLER, CARGO DOOR COMPENSATOR RADIUS	.	.	.	.	.		2
9	65-2020-14	.	FILLER, CARGO DOOR COMPENSATOR RADIUS	.	.	.	.	.		2
10	65-2020-15	.	FILLER, CARGO DOOR COMPENSATOR RADIUS	.	.	.	.	.		2
11	BACS40B12-14	.	SHIM.	.	.	.	.	.		2
12	BACS40B12-92	.	SHIM.	.	.	.	.	.		2
13	BACS40B14-16	.	SHIM.	.	.	.	.	.		2
14	BACS40B14-53	.	SHIM.	.	.	.	.	.		2
15	65-2020-18	.	COMPENSATOR ASSY, FORWARD CARGO DOOR.	.	.	.	.	.		1
16	AN316-7R	.	NUT	.	.	.	.	.		4
17	NAS460-716	.	WASHER.	.	.	.	.	.		4
18	NAS561P5-14	.	PIN	.	.	.	.	.		4
19	69-1654-2	.	GEAR, CARGO DOOR COMPENSATOR.	.	.	.	.	.		2
20	BACB10B62CTK7	.	BEARING	.	.	.	.	.		4
21	AN960D716	.	WASHER.	.	.	.	.	.		4
21A	AN960D716L	.	WASHER.	.	.	.	.	.		AR
22	65-2020-7	.	TUBE, CARGO DOOR COMPENSATOR TORQUE	.	.	.	.	.		1
23	65-1908-7	.	FITTING ASSY, CARGO DOOR ROLLER SUPPORT (LH).	.	.	.	.	.		1
24	65-1908-8	.	FITTING ASSY, CARGO DOOR ROLLER SUPPORT (RH).	.	.	.	.	.		1
25	NAS77A11-50	.	BUSHING	.	.	.	.	.		1
26	65-1908-1	.	FITTING, CARGO DOOR ROLLER SUPPORT (LH ONLY).	.	.	.	.	.		1
26	65-1908-2	.	FITTING, CARGO DOOR ROLLER SUPPORT (RH ONLY).	.	.	.	.	.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

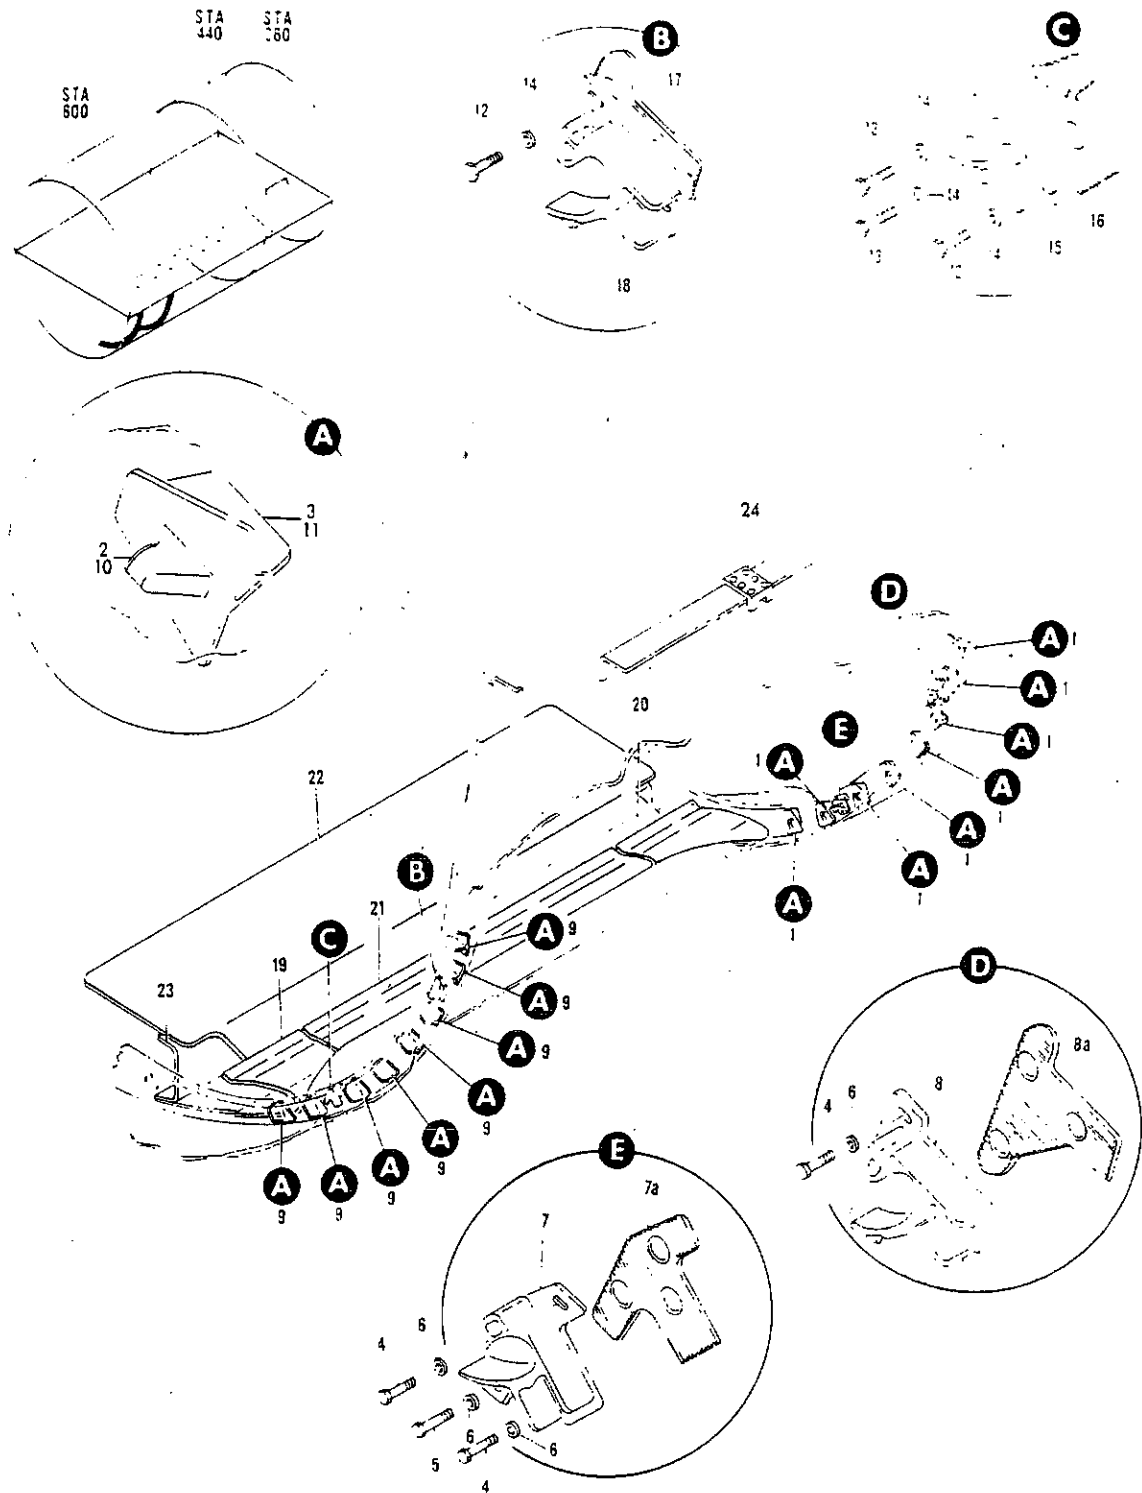


FIGURE 5 FRAME AND STRAP INSTL, FORWARD CARGO DOOR



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R	5	50-10227	0150	RF
		50-10227	5199	RF
		50-5575		1
	1	65-46043-5		8
	2	69-16954-1		1
	3	65-46043-15		1
	4	NAS1103-6W		5
	5	NAS1103-7W		1
	6	AN960C10L		6
	7	50-10212-9	0151	1
R	7	50-10212-17	5299	1
R	7A	90-9430-3		1
	8	50-10211-7	0151	1
R	8	50-10211-11	5299	1
	8A	90-9431-1		1
		50-5578		1
	9	65-46043-5		8
	10	69-16954-1		1
		65-46043-5)		
	11	65-46043-15		1
	12	NAS1103-6W		5
	13	NAS1103-7W		1
	14	AN960C10L		6
R	15	50-10212-10	0151	1
R	15	50-10212-18	5299	1
	16	90-9430-4		1
	17	90-9431-2		1
R	18	50-10211-8	0151	1
R	18	50-10211-12	5299	1
		50-5581		1
	19	50-5581-27		1
	20	50-5581-28		1
	21	50-5581-29		1
		ATTACHING PARTS		
		SCREW		15
	22	50-5581-73		1
		WEB, DECK		
		ATTACHING PARTS		
		SCREW		4
		NAS514P1032-8		9
		NAS514P1032-10		13
		NAS514P1032-5		2
		NAS514P1032-12		
	23	50-5581-26		1
		50-5580		1
	24	69-1676		1
		ATTACHING PARTS		
		SCREW		6
		NAS517-3-15		
		-----*		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

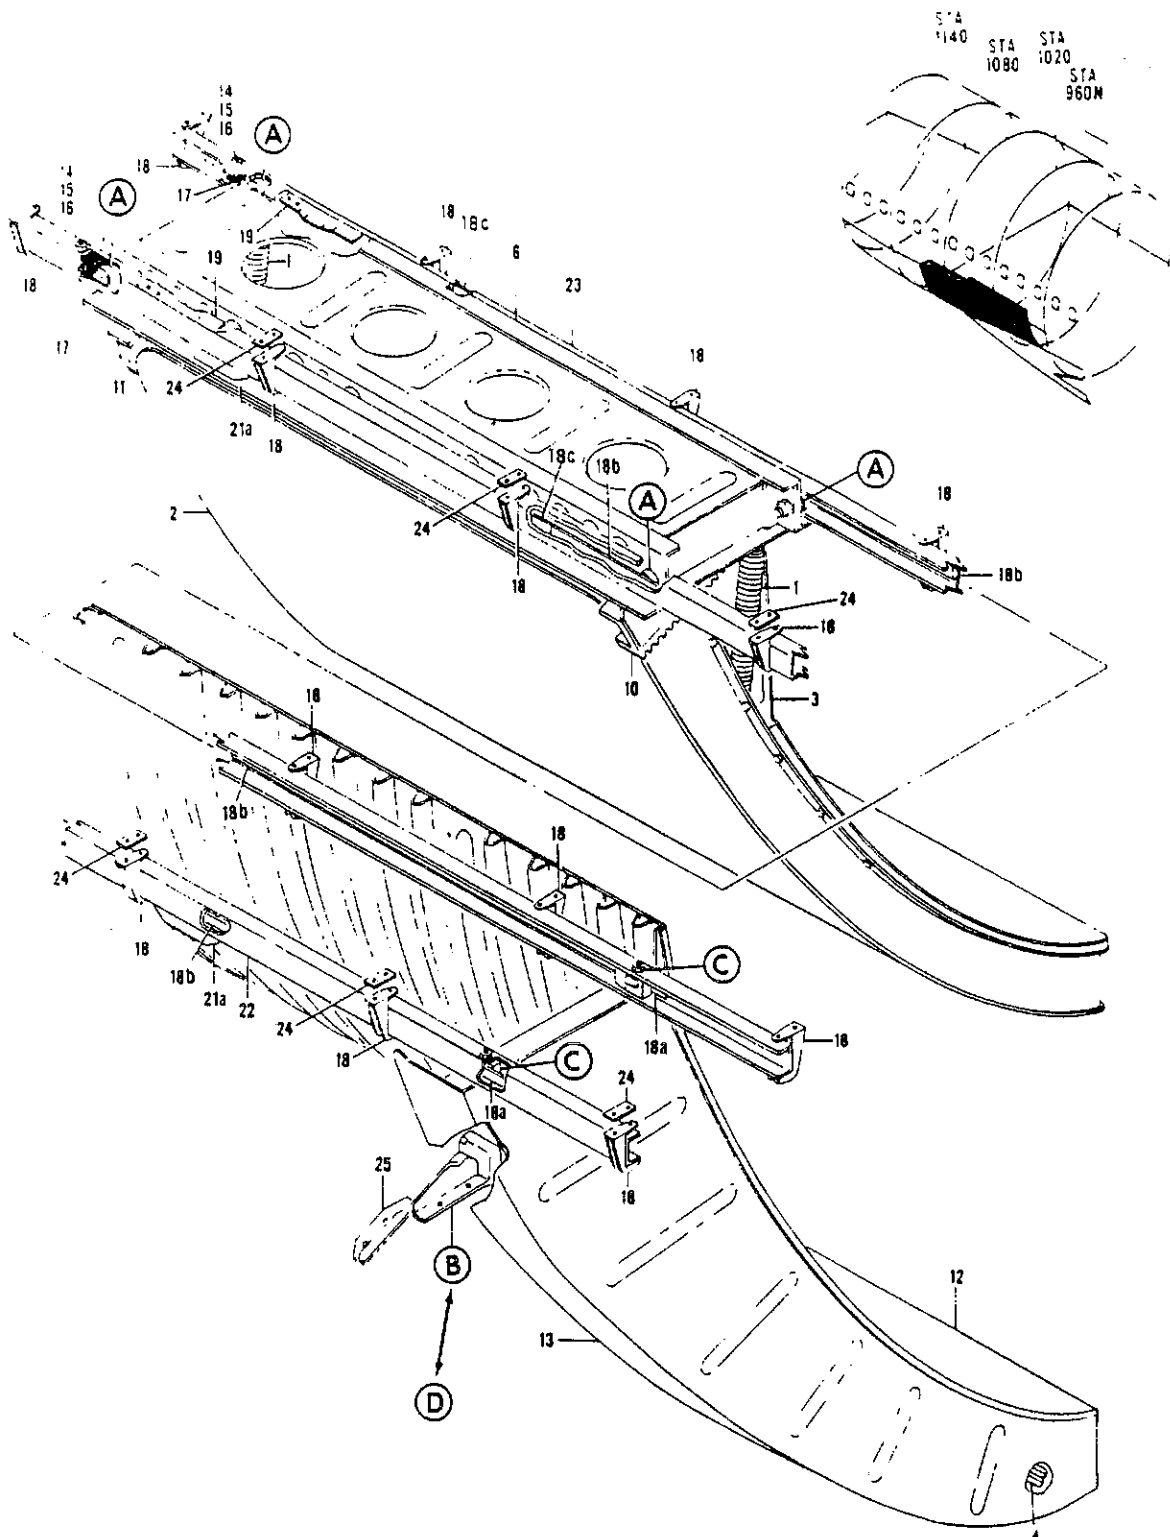


FIGURE 6. DOOR INSTALLATION, CENTER CARGO (SHEET 1)

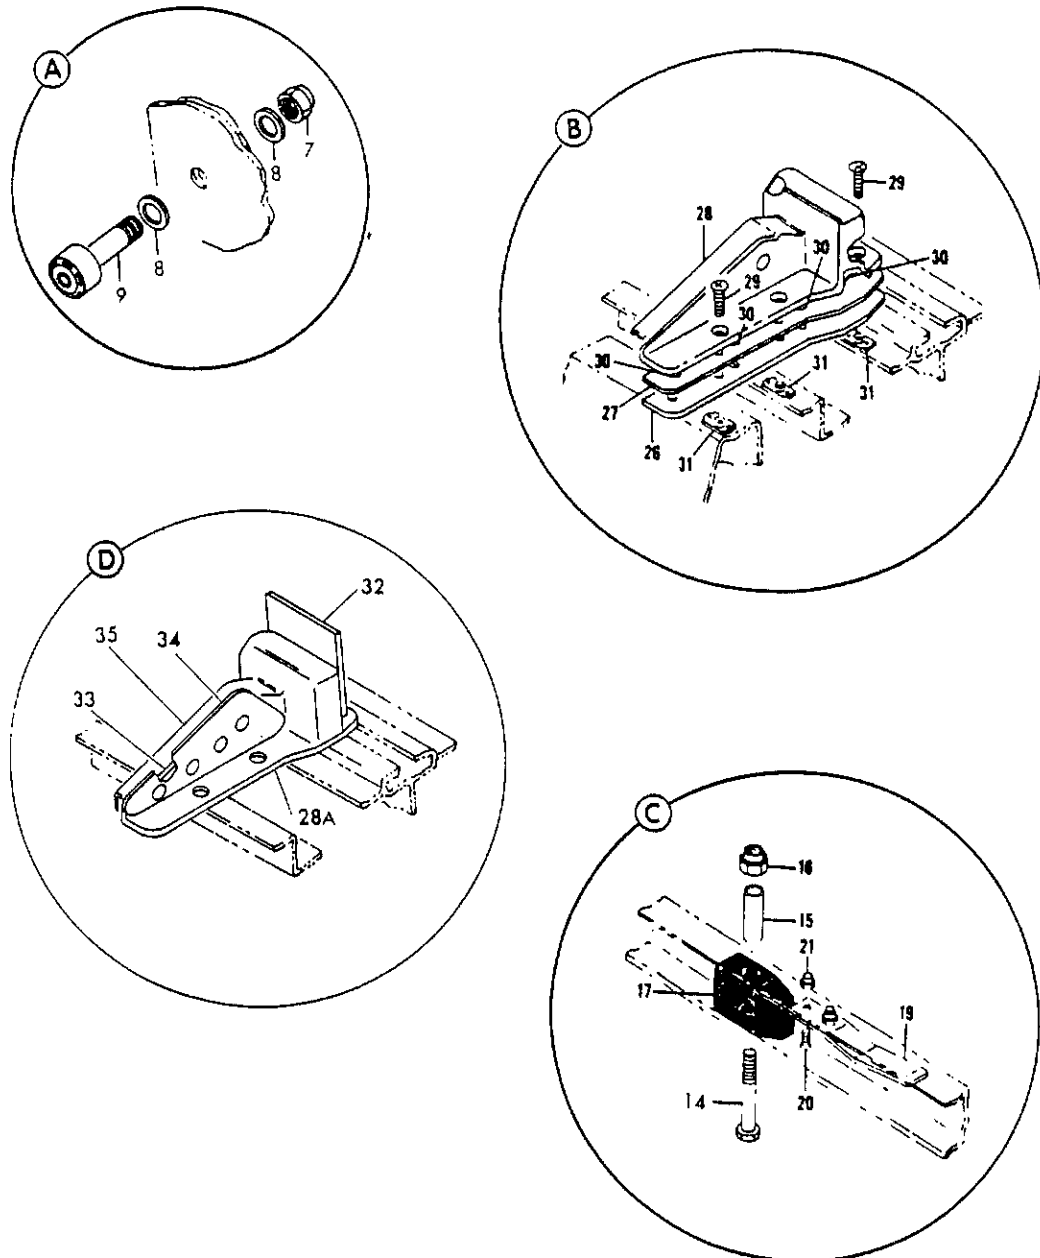


FIGURE 6. DOOR INSTALLATION, CENTER CARGO (SHEET 2)

NOV 21/90

52-03-6

DETAILED PARTS LIST
52-03-6
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R	6	50-10358-16	5199 0150	RF
	1	66-9918		2
	2	50-7990-156		1
	2	50-7990-156		1
		DOOR INSTL, CENTER CARGO (SEE 53-2, FIG. 3, ITEM 42).		
		DOOR ASSY, CENTER CARGO (REWORKED BY SB 3322)		
		DOOR ASSY, CENTER CARGO (REWORKED BY SB 3322 AND SB 3310)		
		DOORS, (SEE FIG. 7)		
		REQUIRED PLACARDS, (SEE 11-2, FIG. 229)		
	3	65-2020-23		1
	4	69-12074-3		1
		COMPENSATOR INSTL, CENTER CARGO DOOR (SEE FIG. 8)		
		TRACK ASSY, CENTER CARGO DOOR LOWER ROLLER.		
		ATTACHING PARTS		
		SCREW		6
		SCREW		5
		NUT		11
		-----*		
	6	65-2012-16		1
	7	BACN108Y57		4
	8	AN960D716		8
	9	BAC810862CT8		4
	10	69-1639-7		1
	11	69-1639-8		1
	12	50-10368-6		1
		COVER ASSY, CENTER CARGO DOOR RECESS.		
		ATTACHING PARTS		
		SCREW ASSY.		9
		-----*		
	13	50-10358-22		1
		WEB, CENTER CARGO DOOR COVER.		
		ATTACHING PARTS		
		SCREW ASSY.		4
		-----*		
	14	AN3-15A		4
	15	NAS42DD6-70		4
	16	NAS679A3W		4
	17	69-1874		4
	18	65-1924		14
		FITTING, CARGO DOOR TRACK SUPPORT		
		ATTACHING PARTS		
		BOLT.		14
		BOLT.		14
		SCREW		12
		SCREW		10
		SHIM.		8
		FILLER.		4
		NUT		50
		-----*		
	18A	50-10358-803		2
	18B	50-10358-53		2
	18C	50-10358-65		2
	19	66-5541		2
		SPRING, CARGO DOOR HOLD OPEN.		
		ATTACHING PARTS		
		SCREW		4
		NUT		4
		-----*		
	21A	50-10358-74		2
		ANGLE, CENTER CARGO		
		ATTACHING PARTS		
		BOLT.		8
		-----*		
	22	50-10358-804		1
	23	50-10358-802		1
	24	66-4939		AR
	25	66-9974		1
	26	66-9981		1
		PLATE, CENTER CARGO DOOR LOWER ROLLER FITTING BASE.		
		CARGO DECK SPLICE		
	27	66-9981-1		AR
		SHIM, CENTER CARGO DOOR LOWER ROLLER FITTING BASE		
		LAMINATED		
	28	65-21042		1
		FITTING, CENTER CARGO DOOR ROLLER TRACK		
		ATTACHING PARTS		
	29	NAS514P1032-12		4
	30	NAS514P1032-10		4
	31	NAS686A3		4
		NUTPLATE.		
		-----*		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

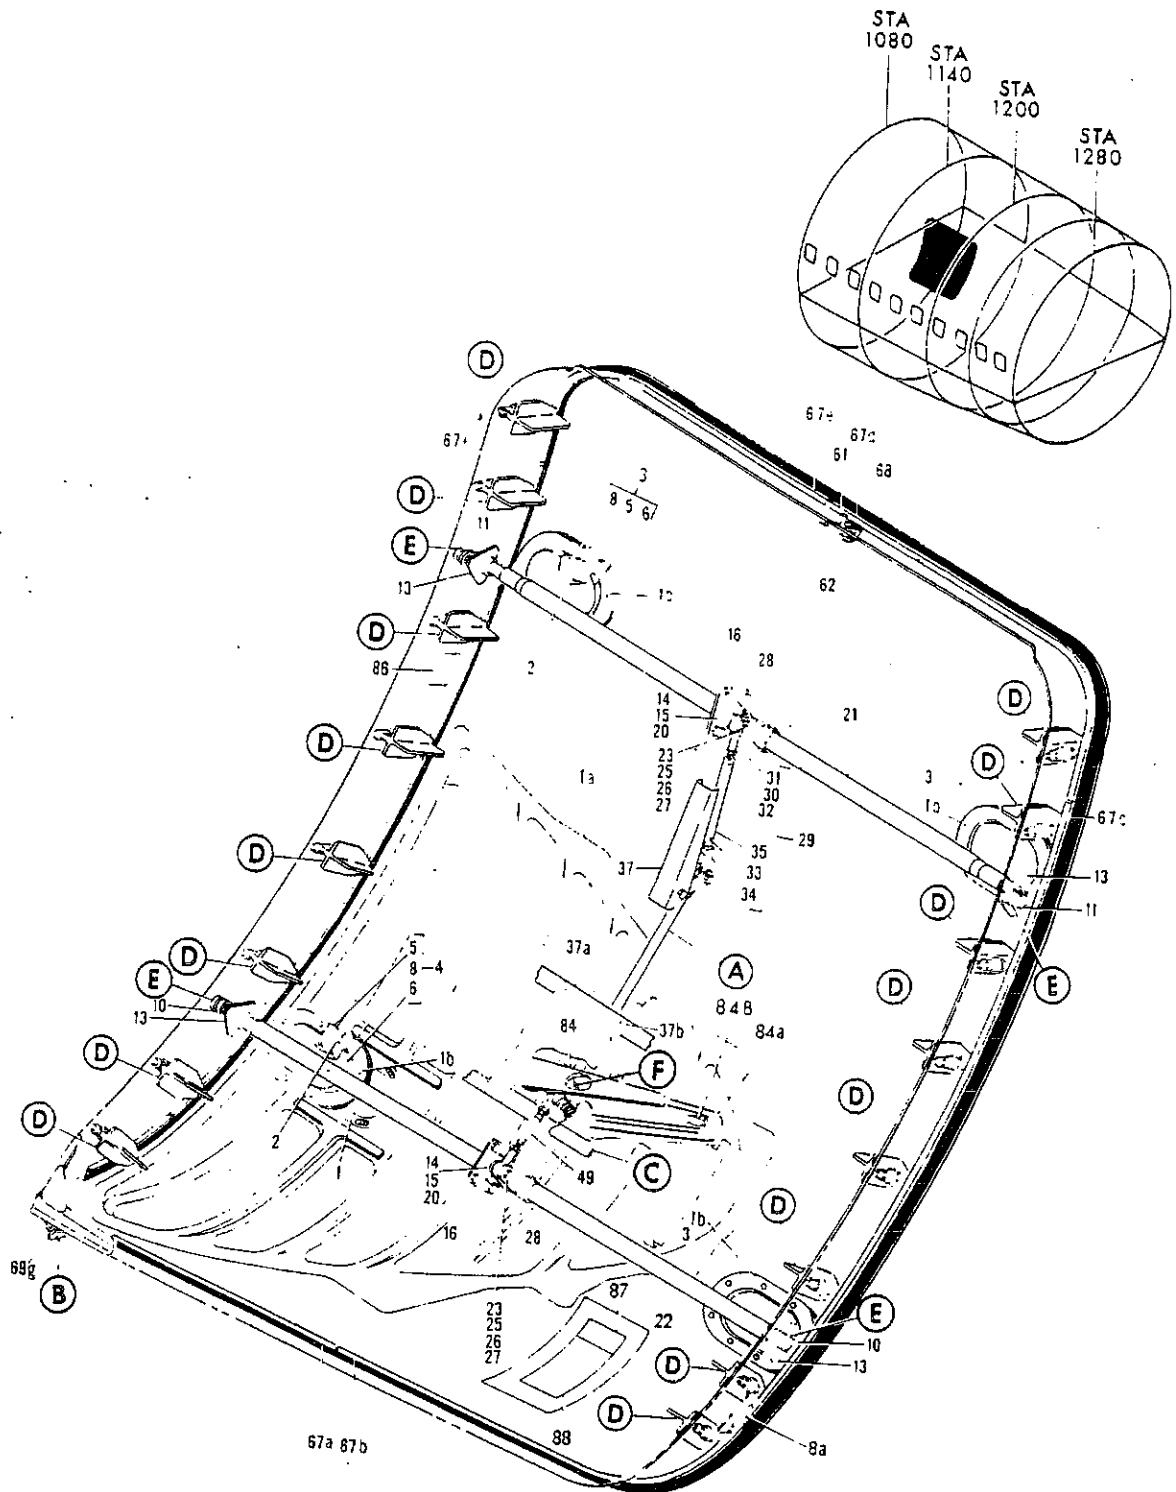


FIGURE 7, DOOR ASSY, CENTER CARGO (DOORS ONLY) (SHEET 1)

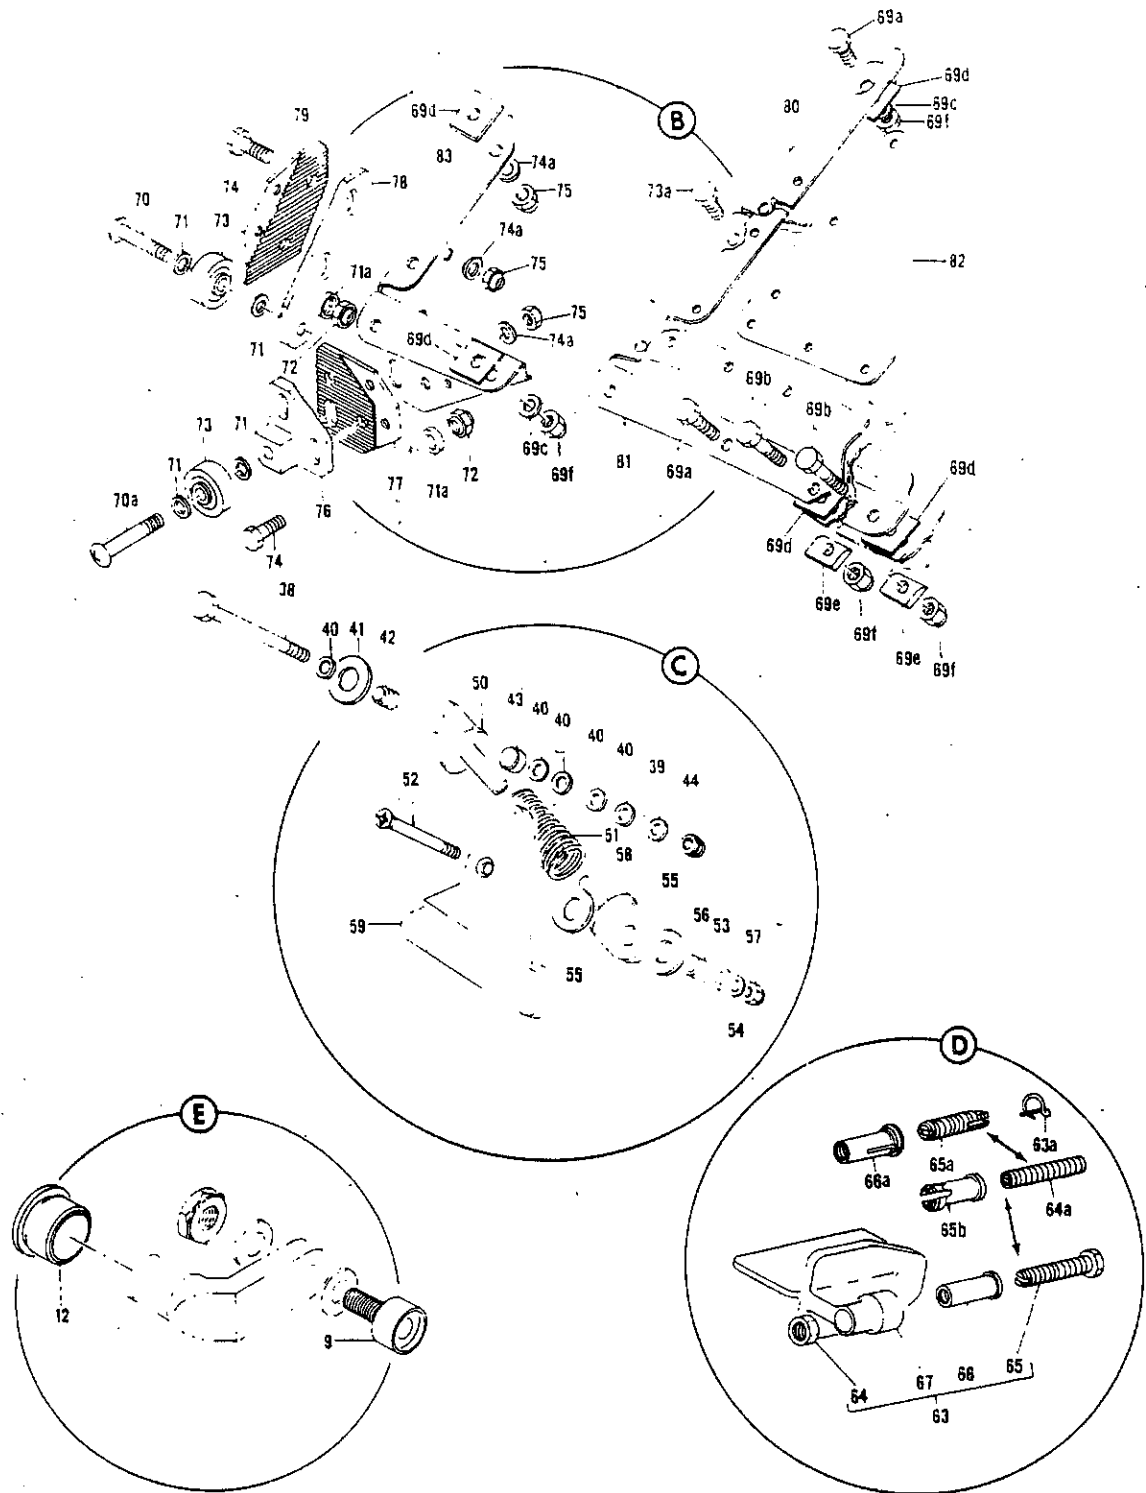


FIGURE 7. DOOR ASSY, CENTER CARGO (DOORS ONLY) (SHEET 2)

NOV 21/90

52-03-7

DETAILED PARTS LIST
52-03-7
PAGE 1

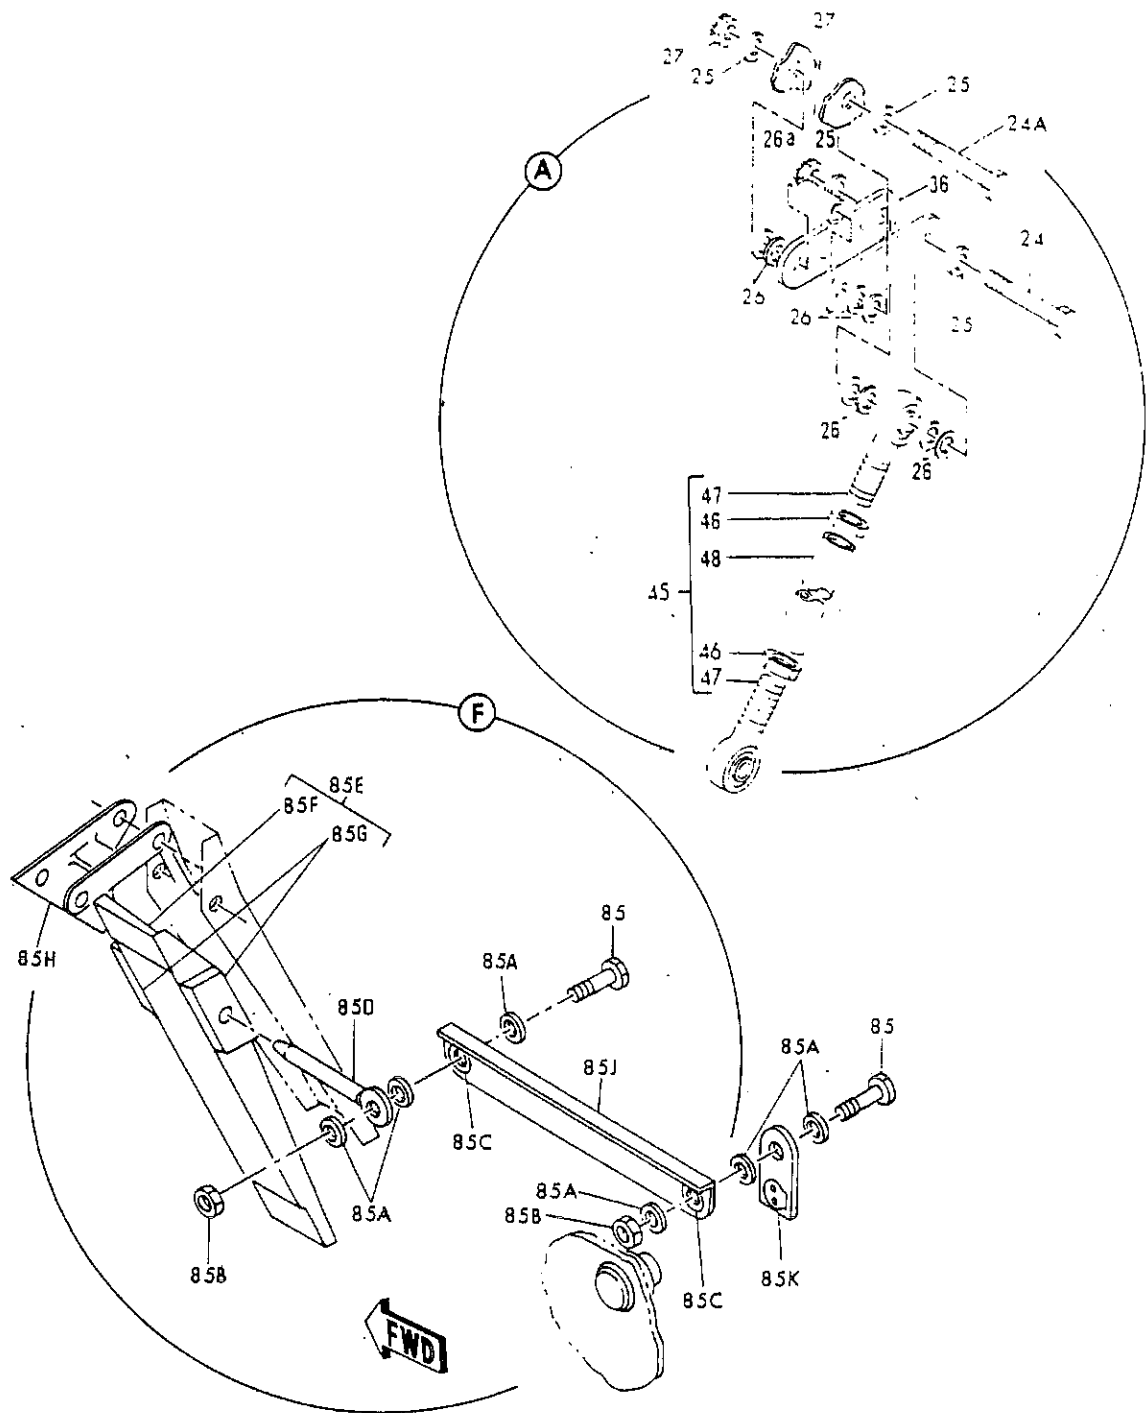


FIGURE 7. DOOR ASSY, CENTER CARGO (DOORS ONLY) (SHEET 3)

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R R R	7	50-7990-156	DOOR ASSY, CENTER CARGO (DOORS ONLY) (REWORKED BY SB. 3322 AND SB 3310) (SEE FIG. 6, ITEM 2)	0150 RF
		50-7990-156	DOOR ASSY, CENTER CARGO (DOORS ONLY) (REWORKED BY SB. 3322) (SEE FIG. 6, ITEM 2)	5199 RF
		50-7990-156	DOOR ASSY, CENTER CARGO (DOORS ONLY) (REWORKED BY DWG. NO. 65V10058-B) (REWORKED BY SB 3322) (SEE FIG. 6, ITEM 2)	RF
	1	65-8634-21	FAIRING INSTL, CENTER CARGO DOOR.	1
		65-8634-10	DOOR ASSY, CENTER CARGO ACCESS.	1
		NAS514P1032-8	ATTACHING PARTS SCREW	6
	1B	NAS517-3-4	SCREW	32
	2	50-7990-31	RING, CENTER CARGO DOOR DOUBLER	4
	3	50-7990-29	PANEL ASSY, CENTER CARGO DOOR TORQUE TUBE ACCESS.	3
	4	50-7990-83	PANEL ASSY, CENTER CARGO DOOR TORQUE TUBE ACCESS.	1
	5	50-7990-800	GASKET, CENTER CARGO DOOR TORQUE TUBE ACCESS PANEL	1
	6	50-7990-144	PAD, CENTER CARGO DOOR TORQUE TUBE ACCESS INSULATION	1
	8	50-7990-33	DOOR, CENTER CARGO DOOR TORQUE TUBE ACCESS PANEL.	1
	8A	69-4457	HANDLE, CARGO DOOR CLOSING.	1
	9	CB36015	BEARING, (V60380) (OPTIONAL CF2000 (V92563)).	4
	9	CF2000	BEARING, (V92563) (OPTIONAL TO CB36015 (V60380))	4
		AN960D616	ATTACHING PARTS WASHER.	4
		AN320-6	NUT	4
	10	65-1900-6	FITTING, CARGO DOOR ROLLER ARM.	2
	11	65-1900-7	FITTING, CARGO DOOR ROLLER ARM.	2
		AN310-5	ATTACHING PARTS BOLT.	8
		AN960D10L	WASHER.	8
		NAS679A3W	NUT	8
	12	NAS77A12-40P	BUSHING	4
	13	69-1396	HOUSING, CARGO DOOR TORQUE TUBE ATTACHING PARTS	4
		AN3-6A	BOLT.	4
		AN4-6A	BOLT.	4
		NAS517-3-4	SCREW	2
		NAS517-4-5	SCREW	2
		AN960D10	WASHER.	6
		NAS679A3W	NUT	6
		NAS679A4W	NUT	6
		BACS40A12-12	SHIM, (OPTIONAL BACS40B12-12)	AR
	14	NAS549H1616	WASHER.	4
	15	BACB10A397GCMZ	BEARING	2
	16	65-2306	BEARING ASSY, DOOR CAMSHAFT HOUSING ATTACHING PARTS	2
		AN3-5A	BOLT.	8
		AN960D10	WASHER.	16
		NAS679A3W	NUT	8
		NAS516-1	FITTING	1
	20	NAS561P4-22	PIN	2
	21	50-7990-73	TUBE, CENTER CARGO DOOR UPPER	1
	22	65-2800-1	TUBE, CARGO DOOR TORQUE	1
	23	AN3-10	BOLT.	2
	24	AN3-14	BOLT.	1
	24A	AN3-15	BOLT.	1
	25	AN960D10	WASHER.	6
	26	AN960D10L	WASHER.	12
	26A	NAS43DD3-51	SPACER.	1
	27	AN310-3	NUT	4
	28	65-1797	FITTING, CARGO DOOR ARM ATTACHING PARTS	2
		AN3-15A	BOLT.	4
		AN960D10	WASHER.	4
		NAS679A3W	NUT	4
	29	50-7990-36	ROD ASSY, CENTER CARGO DOOR LATCH CONTROL	1
	30	AN316-4R	NUT	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING 707 PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
7 31	BACB10A448	. . BEARING, (OPTIONAL BACB10A76)		1
32	AN490HT8P	. . ROD END		1
33	MS2047004	. . RIVET		1
34	69-1523	. . FITTING, CARGO DOOR CLEVIS ROD END.		1
35	NAS357-80-664	. . TUBE		1
36	69-1393	. . FITTING, CARGO DOOR IDLER		1
37	66-1873-1	. . CHANNEL, CENTER CARGO DOOR IDLER SUPPORT.		1
37A	50-7990-146	. . COVER, CENTER CARGO DOOR.		1
		ATTACHING PARTS		
37B	NAS514P1032-10	. . SCREW		10
		-----*		
38	AN3-23	. . BOLT.		1
39	AN960D10	. . WASHER.		1
40	AN960D10L	. . WASHER.		5
41	NAS549-616	. . WASHER.		1
42	NAS72-3-009	. . BUSHING		1
43	NAS76A6-008P	. . BUSHING		1
44	AN310-3	. . NUT		1
45	BACR24D4-157	. . ROD ASSY.		1
46	AN316-6R	. . NUT		2
47	BACB10A72	. . BEARING		2
48	BACR24D4-157E	. . TUBE.		1
49	NAS364-1AA450	. . ROD ASSY, CONTROL		1
50	63-1630-1	. . RETAINER, CARGO DOOR SPRING		1
51	63-1628	. . SPRING, CARGO DOOR SAFETY COMPRESSION (DELETED BY SB 3322)		1
51	69-69349-1	. . SPRING, CARGO DOOR SAFETY COMPRESSION (ADDED BY SB. . 3322)		1
52	NAS333CP12	. . BOLT.		1
53	AN960D416	. . WASHER.		1
54	AN960D10L	. . WASHER.		1
55	NAS549-616	. . WASHER.		2
56	NAS72-3-005	. . BUSHING		1
57	AN310-3	. . NUT		1
58	63-1629-1	. . CENTERER, CARGO DOOR SPRING		1
59	63-1687	. . SUPPORT, CENTER CARGO DOOR SPRING		1
61	69-1504-804	. . FITTING, ADJUSTABLE GUIDE		1
		(OPTIONAL 69-1504-5)		
61	69-1504-5	. . FITTING, ADJUSTABLE GUIDE		1
		(OPTIONAL TO 69-1504-804)		
		ATTACHING PARTS		
	AN3-6A	. . BOLT.		3
	AN960D10	. . WASHER.		3
	NAS679A3W	. . NUT		3
		-----*		
62	69-1808	. . PLATE, CARGO DOOR GUIDE SERRATED.		1
63	50-10370-13	. . FITTING ASSY, ADJUSTABLE CARGO DOOR STOP.	0150	16
		(OPTIONAL 50-10370-24) (DELETED BY SB 3310)		
		(REPLACEMENT FOR 50-10370-7) (MAY USE 50-10370-24)		
63	50-10370-24	. . FITTING ASSY, ADJUSTABLE CARGO DOOR STOP (REPLACES. . 50-10370-13 BY SB 3310) (FOR REPLACEMENT ORDER 50-10370-35) (MAY NOT USE 50-10370-13)	0150	16
63	50-10370-24	. . FITTING ASSY, ADJUSTABLE CARGO DOOR STOP (FOR REPLACEMENT ORDER 50-10370-35) (MAY NOT USE 50-10370-13)	5199	16
63A	66-16691-1	. . SPRING, DOOR STOP PIN RETAINER.		1
65A	66-12687-1	. . PIN, DOOR STOP.		1
66A	66-12688-1	. . BUSHING, DOOR STOP.		1
67	50-10370-14	. . FITTING, ADJUSTABLE CARGO DOOR STOP (USED ON. 50-10370-13) (DELETED BY SB 3310)	0150	1
67	50-10370-25	. . FITTING, ADJUSTABLE CARGO DOOR STOP (USED ON. 50-10370-24)		1
67A	50-7990-138	. . STRIP, CENTER CARGO DOOR LOWER FORWARD RETAINER		1
67B	50-7990-139	. . STRIP, CENTER CARGO DOOR LOWER AFT RETAINER		1
67C	50-7990-140	. . STRIP, CENTER CARGO DOOR AFT SIDE		1
67D	50-7990-141	. . STRIP, CENTER CARGO DOOR UPPER AFT.		1
67E	50-7990-142	. . STRIP, CENTER CARGO DOOR UPPER FORWARD.		1
67F	50-7990-143	. . STRIP, CENTER CARGO DOOR FORWARD SIDE		1
		ATTACHING PARTS		
	NAS514P632-6	. . SCREW		69
	NAS679A06W	. . NUT		69
		-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

R
R
R
R
R
R
R

BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
7 68	65-2865-13	. SEAL, CARGO DOOR (EXTRUSION NO. BAC1521-523 X 220 IN. LG)		1
	65-22018	. ROLLER INSTL, CENTER CARGO DOOR LOWER		1
69A	AN3-4A	. BOLT.		2
69B	AN3-5A	. BOLT.		2
69C	AN960D10	. WASHER.		4
69D	BAC540B13-13	. SHIM.		AR
69E	65-22018-2	. FILLER, CENTER CARGO DOOR LOWER ROLLER.		2
69F	BACN108Y53W	. NUT		4
69G	65-22018-3	. ROLLER ASSY, CENTER CARGO DOOR LOWER.		1
70	AN525-416R20	. . SCREW, (OPTIONAL AN4-12A)		1
70A	AN525-416R26	. . SCREW, (OPTIONAL AN4-15A)		1
71	AN960-416L	. . WASHER.		4
71A	BACW10AN4	. . WASHER.		2
72	BACN10FD45	. . NUT		2
73	BACB10A33B	. . BEARING ASSY.		2
73A	AN3-4A	. . BOLT.		4
74	AN3-5A	. . BOLT.		4
74A	AN960D10	. . WASHER.		8
75	BACN108Y53W	. . NUT		8
76	69-17017	. . FITTING, CENTER CARGO DOOR ROLLER		1
77	66-9954	. . PLATE, CENTER CARGO DOOR SERRATED		1
78	69-17017-1	. . FITTING, CENTER CARGO DOOR ROLLER		1
79	66-9954-1	. . PLATE, CENTER CARGO DOOR SERRATED		1
80	69-17045-3	. . . BRACKET, CENTER CARGO DOOR LOWER ROLLER (USED ON 65-22018-3)		1
81	69-17045-4	. . . BRACKET, CENTER CARGO DOOR LOWER ROLLER (USED ON 65-22018-3)		1
82	69-17045-5	. . . SUPPORT, CENTER CARGO DOOR LOWER ROLLER (USED ON 65-22018-3)		1
83	69-17034-1	. . . BRACKET, CENTER CARGO DOOR LOWER ROLLER (USED ON 65-22018-3)		1
84	10-60006-5	. LOCK ASSY, FLUSH (SAME AS H145-3 (V83014)).		1
84	H145-3	. LOCK ASSY, FLUSH (V83014) (SAME AS BAC SPEC NO. 10-60006-5) (SEE FIG. 20C)		RF
		ATTACHING PARTS		
	NAS221-8	. SCREW		11
	NAS221-11	. SCREW		2
	NAS679A3W	. NUT		2
	50-7990-152	. SHIM, CENTER CARGO DOOR		AR
86	AN7510-1	. PLATE		1
		. FOR REFERENCE TO OTHER DOOR DETAILS, SEE NHA.		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/01

52-03-7

DETAILED PARTS LIST
52-03-7
PAGE 5

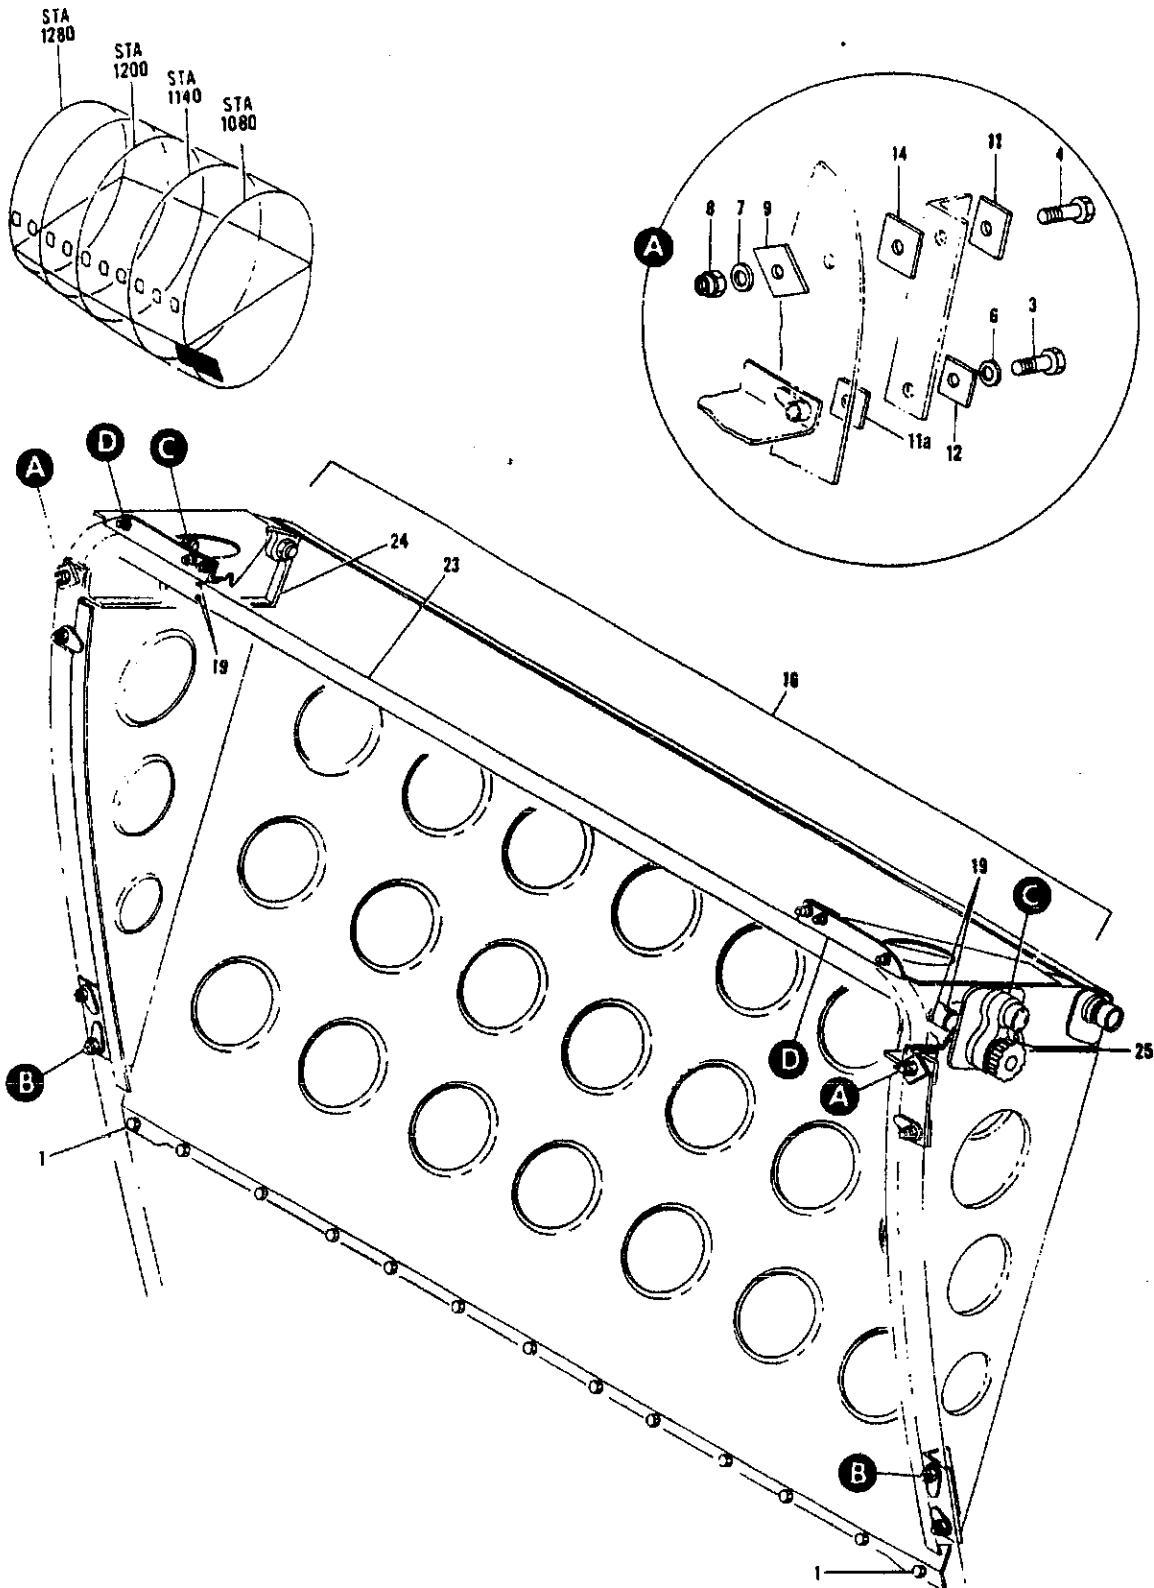


FIGURE 8. COMPENSATOR INSTL, CENTER CARGO DOOR (SHEET 1)

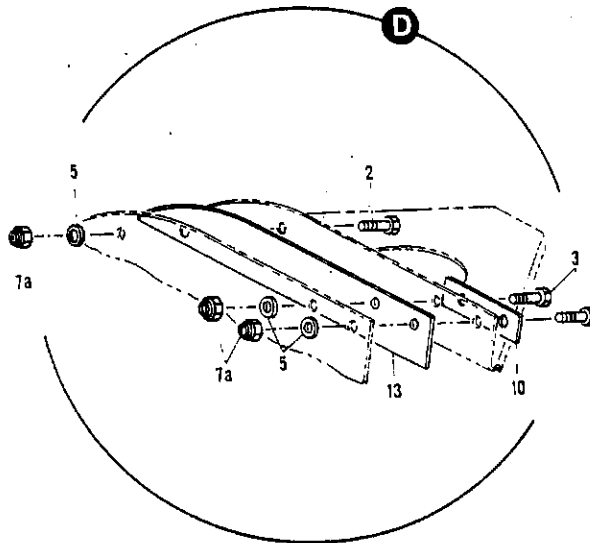
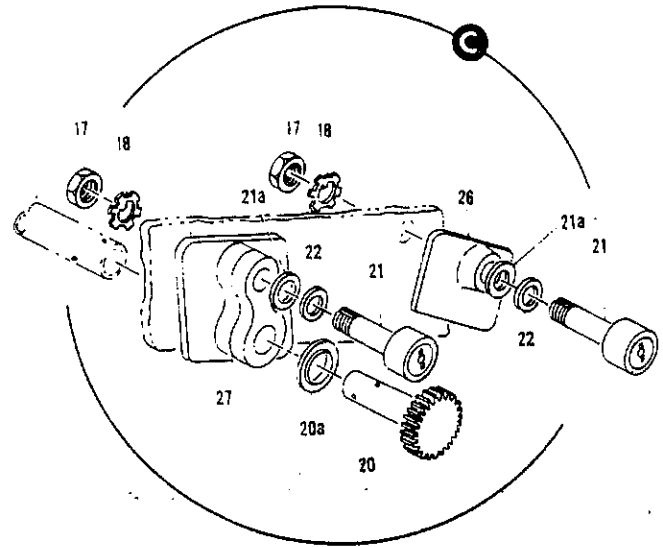
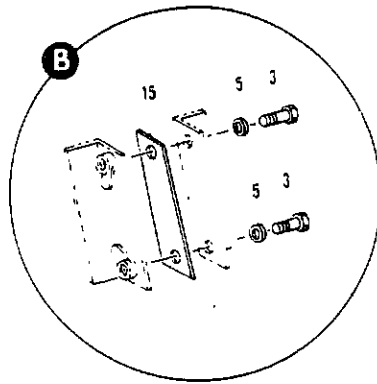


FIGURE 8. COMPENSATOR INSTL. CENTER CARGO DOOR (SHEET 2)

NOV 21/90

52-03-0

DETAILED PARTS LIST
52-03-8
PAGE 1

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8	65-2020-23		COMPENSATOR INSTL, CENTER CARGO DOOR (SEE FIG. 6, ITEM 3)		RF
1	AN3-4A		. BOLT.		13
2	AN3-5A		. BOLT.		2
3	AN3-6A		. BOLT.		10
4	AN4-10A		. BOLT.		2
5	AN960D10		. WASHER.		10
6	AN960D10L		. WASHER.		2
7	AN960D416L		. WASHER.		2
7A	NAS679A3W		. NUT, (OPTIONAL NAS686A3).		6
8	NAS679A4W		. NUT		2
9	65-2020-13		. FILLER, CARGO DOOR COMPENSATOR.		2
10	65-2020-31		. FILLER, CARGO DOOR COMPENSATOR.		2
11	65-2020-32		. FILLER, CARGO DOOR COMPENSATOR.		2
11A	65-2020-33		. FILLER, CARGO DOOR COMPENSATOR.		2
12	BACS40B12-14		. SHIM.		2
13	BACS40B19-92		. SHIM.		2
14	BACS40B14-16		. SHIM.		2
15	BACS40B14-53		. SHIM.		2
16	65-2020-24		. COMPENSATOR ASSY, CENTER CARGO DOOR		1
17	AN316-7R		. NUT		4
18	NAS460-716		. WASHER.		4
19	NAS561P5-14		. PIN		4
20	69-1654-4		. GEAR, CARGO DOOR COMPENSATOR.		2
20A	NAS77A11-140		. BUSHING		2
21	BACB10862CTK15		. BEARING		4
21A	AN960D716L		. WASHER.		AR
22	AN960D716		. WASHER.		4
23	65-2020-7		. TUBE, CARGO DOOR COMPENSATOR TORQUE		1
24	65-1908-1		. FITTING, CARGO DOOR ROLLER SUPPORT.		1
25	65-1908-2		. FITTING, CARGO DOOR ROLLER SUPPORT.		1
26	69-9128		. FITTING, CARGO DOOR COMPENSATOR ROLLER.		2
27	69-9121		. FITTING, CARGO DOOR COMPENSATOR ROLLER.		2
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

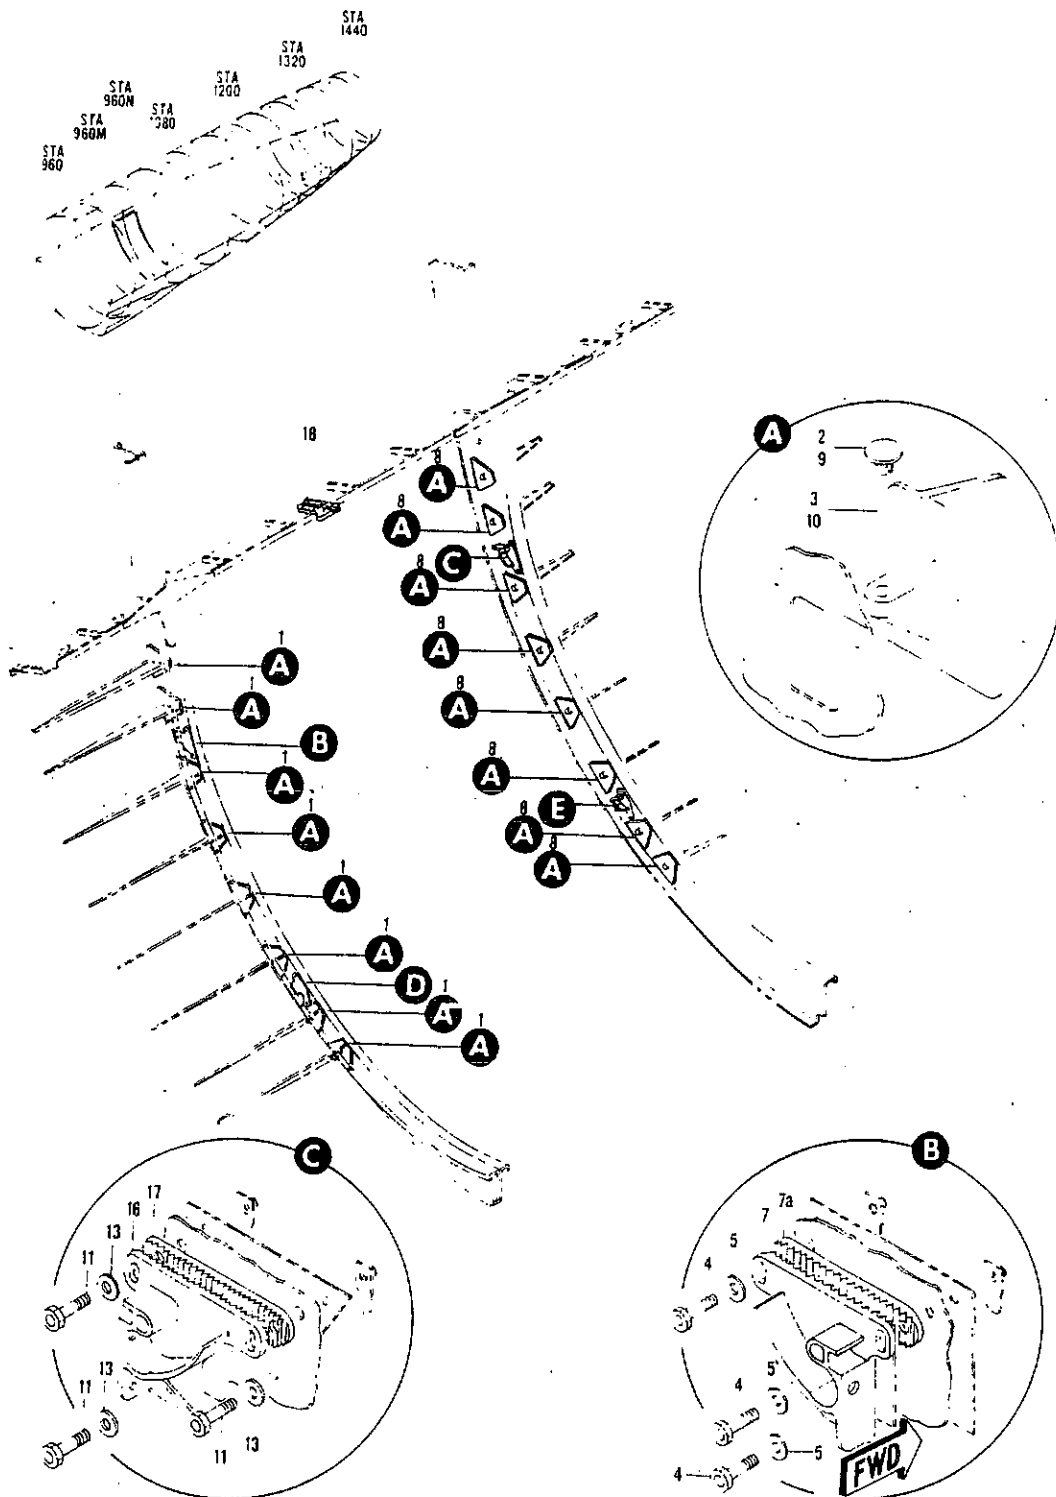


FIGURE 9. FRAME INSTL, CENTER CARGO DOOR (SHEET 1)


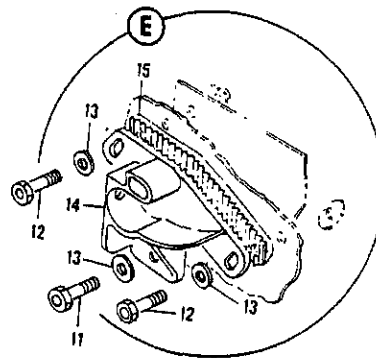


FIGURE 9. FRAME INSTL, CENTER CARGO DOOR (SHEET 2)

NOV 21/90

52-03-9

DETAILED PARTS LIST
52-03-9
PAGE 1

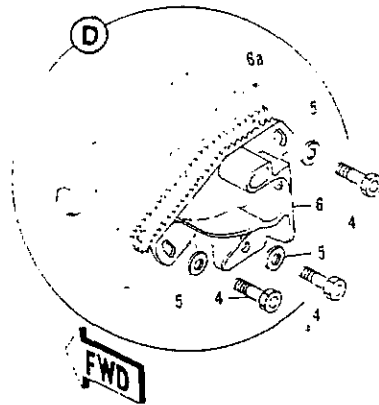

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
9	50-10364-4	FRAME INSTL, CENTER CARGO DOOR (SEE 53-2, FIG. 3, ITEM 63)								RF
	50-10359-47	. FRAME INSTL, STATION 1040 CENTER CARGO DOOR								1
1	65-46043-5	. . . FITTING ASSY, CARGO DOOR STOP								8
2	69-16954-1	. . . PLATE, DOOR STOP FITTING BEARING (USED ON								1
		65-46043-5)								
3	65-46043-15	. . . FITTING, CARGO DOOR STOP (USED ON 65-46043-5) . .								1
4	NAS1103-6W	. . . BOLT.								6
5	AN960C10L	. . . WASHER.								6
6	50-10212-9	. . . FITTING, CARGO DOOR LOWER ROLLER STOP							0151	1
6	50-10212-17	. . . FITTING, CARGO DOOR LOWER ROLLER STOP							5299	1
6A	90-9430-3	. . . PLATE, CARGO DOOR LOWER ROLLER STOP SERRATED.								1
7	50-10211-7	. . . FITTING, CARGO DOOR UPPER ROLLER STOP							0151	1
7	50-10211-11	. . . FITTING, CARGO DOOR UPPER ROLLER STOP							5299	1
7A	90-9431-3	. . . PLATE, CARGO DOOR UPPER ROLLER STOP SERRATED.								1
	50-10360-49	. FRAME INSTL, STATION 1091.5 CENTER CARGO DOOR								1
8	65-46043-5	. . . FITTING ASSY, CARGO DOOR STOP								8
9	69-16954-1	. . . PLATE, DOOR STOP FITTING BEARING (USED ON								1
		65-46043-5)								
10	65-46043-15	. . . FITTING, CARGO DOOR STOP (USED ON 65-46043-5) . .								1
11	NAS1103-6W	. . . BOLT.								4
12	NAS1103-5W	. . . BOLT.								2
13	AN960C10L	. . . WASHER.								6
14	50-10212-10	. . . FITTING, CARGO DOOR LOWER ROLLER STOP							0151	1
14	50-10212-18	. . . FITTING, CARGO DOOR LOWER ROLLER STOP							5299	1
15	90-9430-4	. . . PLATE, CARGO DOOR LOWER ROLLER STOP SERRATED.								1
16	50-10211-8	. . . FITTING, CARGO DOOR UPPER ROLLER STOP							0151	1
16	50-10211-12	. . . FITTING, CARGO DOOR UPPER ROLLER STOP							5299	1
17	90-9431-2	. . . PLATE, CARGO DOOR UPPER ROLLER STOP SERRATED.								1
	50-10361-38	. SILL, INSTL, CENTER CARGO DOOR UPPER.								1
18	69-1922	. . . GUIDE, UPPER.								1
		ATTACHING PARTS								
	NAS517-3-14	. . . SCREW								6
		-----*								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

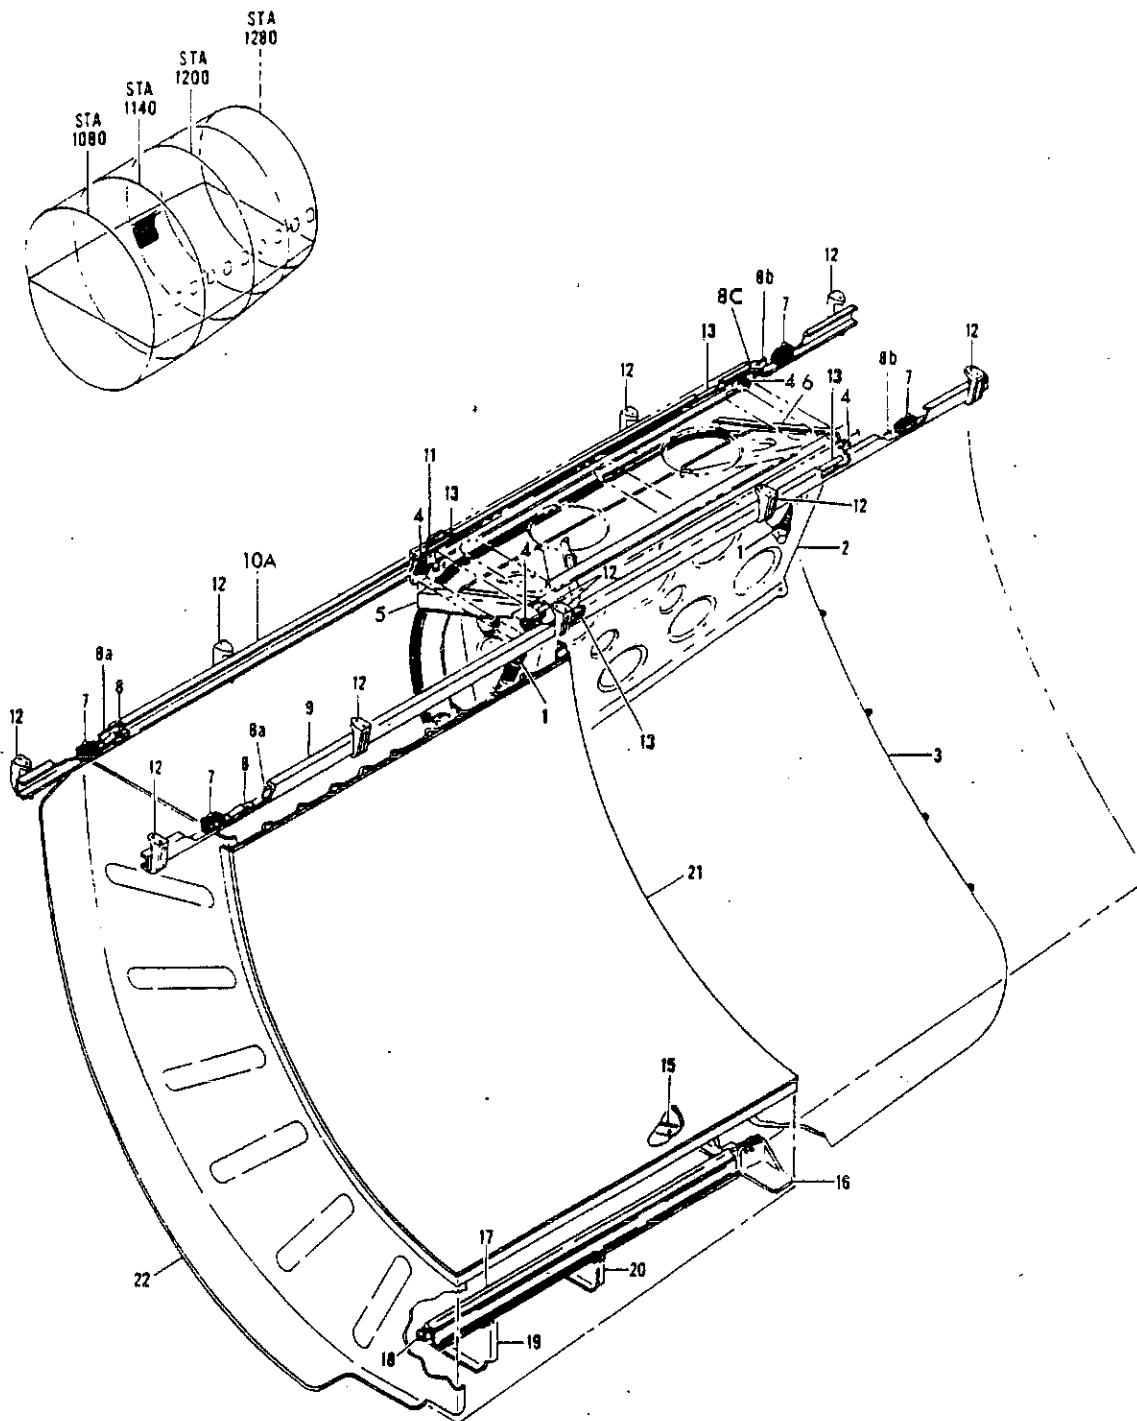


FIGURE 10. DOOR INSTL, AFT CARGO

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R R	10	DOOR INSTL, AFT CARGO (SEE 53-2, FIG. 3, ITEM 41) . . .		RF.
	1	66-9756 . . . SPRING, AFT CARGO DOOR TENSION. . .		2
	2	65-2068 . . . COMPENSATOR INSTL, AFT CARGO DOOR (SEE FIG. 13) . . .		1
	3	50-7991-100 . . . DOOR ASSY, AFT CARGO (REWORKED BY SB 3322). . .		1
		. . . DOORS, (SEE FIG. 11). . .		
		. . . REQUIRED PLACARDS, (SEE 11-2, FIG. 230) . . .		
	4	65-2012-1 . . . CARRIAGE ASSY, CARGO DOOR . . .		1
		8ACB10B62CT8 . . . BEARING . . .		4
		AN365-720 . . . ATTACHING PARTS . . .		4
		AN960D716 . . . NUT . . .		8
		. . . WASHER. . .		
	5	69-1639-5 . . . TRACK, CARGO DOOR ROLLER. . .		1
	6	69-1639-6 . . . TRACK, CARGO DOOR ROLLER. . .		1
	7	69-1874 . . . PAD, CARGO DOOR ROLLER STOP . . .		4
		. . . ATTACHING PARTS . . .		
		AN3-15A . . . BOLT. . .		4
		NAS43003-68 . . . SPACER. . .		4
		AN960D10 . . . WASHER. . .		4
		NAS679A3W . . . NUT . . .		4
	8	66-5541 . . . SPRING, CARGO DOOR HOLD OPEN. . .		2
		. . . ATTACHING PARTS . . .		
		NAS514P632-5 . . . SCREW . . .		4
		NAS679A06W . . . NUT . . .		4
	8A	50-11399-32 . . . STRIP, AFT CARGO DOOR WEAR. . .		2
	8B	50-11399-34 . . . STRIP, AFT CARGO DOOR WEAR. . .		2
	9	50-11399-4 . . . TRACK, AFT CARGO DOOR INBOARD . . .		1
	10	50-11399-5 . . . TRACK, AFT CARGO DOOR OUTBOARD. . .		1
		. . . ATTACHING PARTS . . .		
		NAS517-3-5 . . . SCREW . . .		5
		NAS514P1032-12 . . . SCREW . . .		1
		NAS514P1032-10 . . . SCREW . . .		5
		50-11399-8 . . . FILLER, AFT CARGO DOOR. . .		1
		BACS40B11-17 . . . SHIM. . .		AR
		NAS517-3-3 . . . SCREW . . .		4
		NAS517-3-5 . . . SCREW . . .		5
		NAS514P1032-12 . . . SCREW . . .		1
		NAS514P1032-10 . . . SCREW . . .		5
		50-11399-8 . . . FILLER, AFT CARGO DOOR. . .		1
		BACS40B11-17 . . . SHIM. . .		AR
		NAS679A3W . . . NUT . . .		15
	11	50-11399-7 . . . BRACKET, AFT CARGO DOOR TRACK . . .		1
		. . . ATTACHING PARTS . . .		
		AN4-6A . . . BOLT. . .		1
		50-11399-8 . . . FILLER, AFT CARGO DOOR. . .		3
		NAS679A3W . . . NUT . . .		1
	12	65-1924 . . . FITTING, CARGO DOOR TRACK SUPPORT . . .		9
		. . . ATTACHING PARTS . . .		
		AN3-6A . . . BOLT. . .		9
		AN3-5A . . . BOLT. . .		9
		50-11399-3 . . . SHIM, AFT CARGO DOOR. . .		5
		NAS679A3W . . . NUT . . .		18
	13	66-4939 . . . SHIM, CARGO DOOR TRACK. . .		4
	15	66-9731 . . . STRIP, AFT CARGO DOOR WEAR. . .		1
		. . . ATTACHING PARTS . . .		
		NAS517-3-5 . . . SCREW . . .		2
		NAS517-3-7 . . . SCREW . . .		1
		AN960D10L . . . WASHER. . .		3
		NAS679A3W . . . NUT . . .		1
	16	65-19087 . . . FITTING, AFT CARGO DOOR ROLLER TRACK. . .		1
		. . . ATTACHING PARTS . . .		
		NAS514P1032-5 . . . SCREW . . .		3
		NAS514P1032-12 . . . SCREW . . .		5
		NAS514P1032-20 . . . SCREW . . .		1
	17	50-11399-37 . . . TRACK, AFT CARGO DOOR LOWER ROLLER. . .		1
	18	50-11399-25 . . . SUPPORT, AFT CARGO DOOR TRACK SUPPORT . . .		1
		MISSING ITEM NUMBERS ARE NOT APPLICABLE		

BOEING *707* *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
10	AN3-4A NAS679A3W		ATTACHING PARTS • BOLT • NUT		6 6
19	50-11399-27		• BRACKET, AFT CARGO DOOR TRACK		1
20	50-11399-28		• BRACKET, AFT CARGO DOOR TRACK		1
21	50-11399-29		• COVER ASSY, AFT CARGO DOOR INBOARD.		1
22	50-11399-31		• COVER, AFT CARGO DOOR END		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

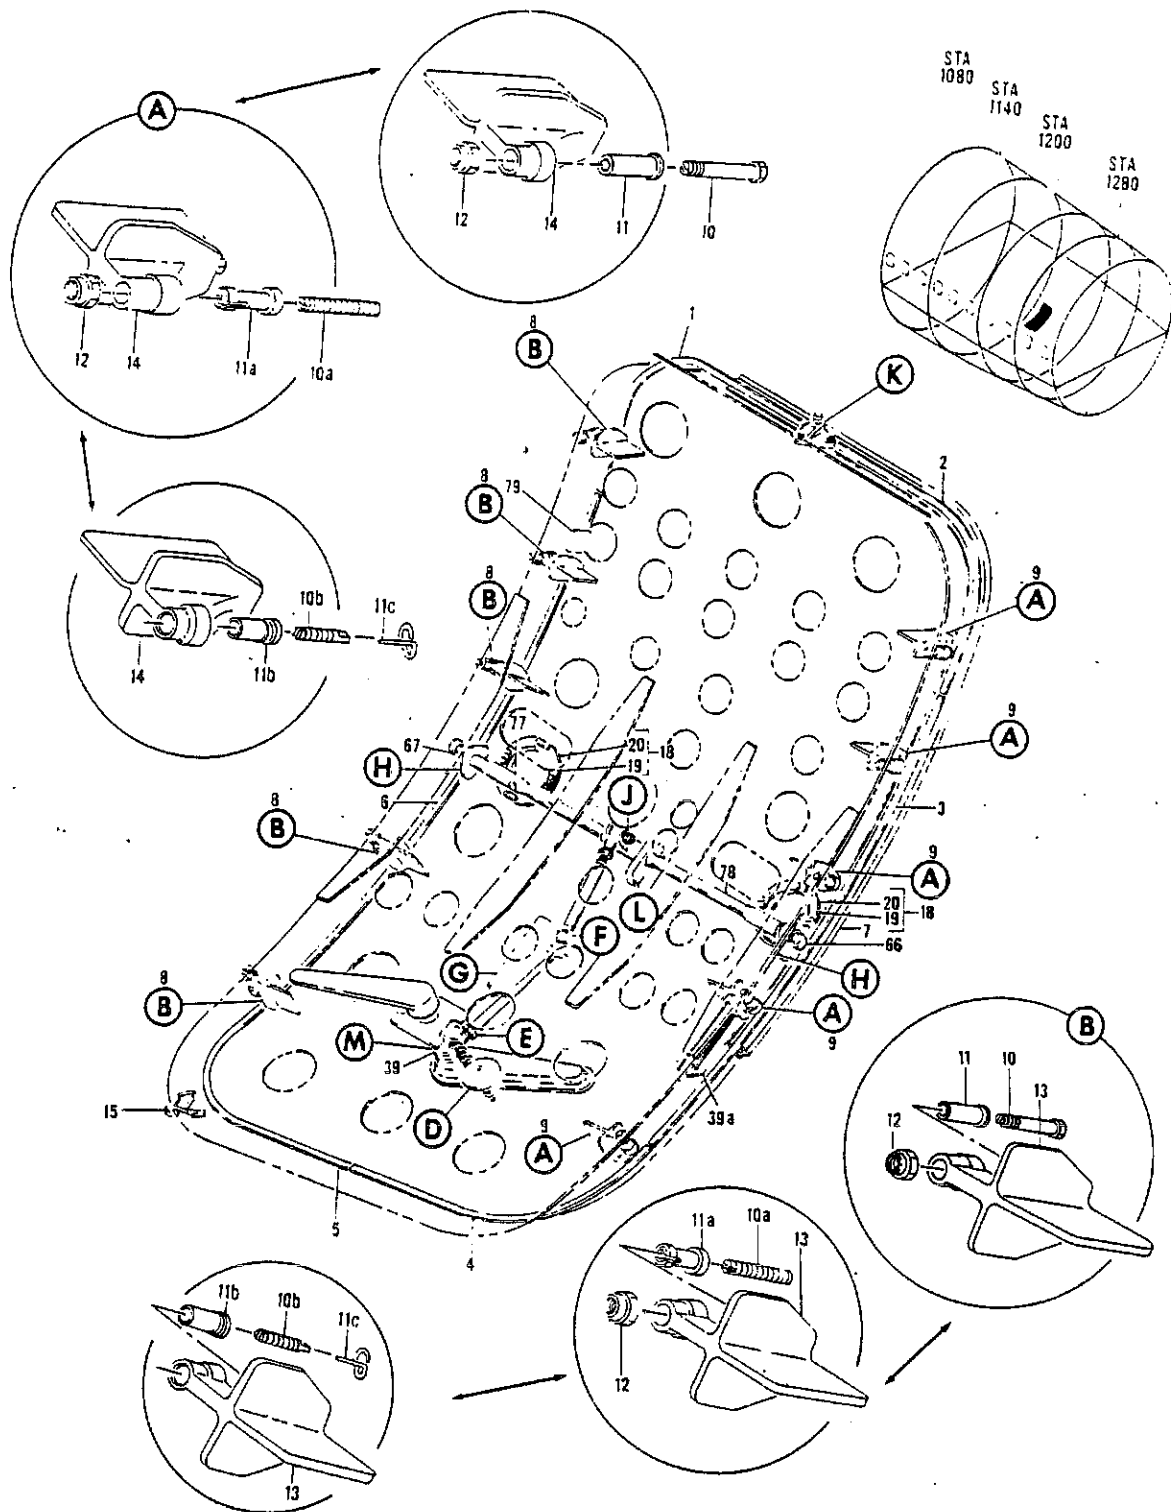


FIGURE 11. DOOR ASSY, AFT CARGO (DOORS ONLY) (SHEET 1)

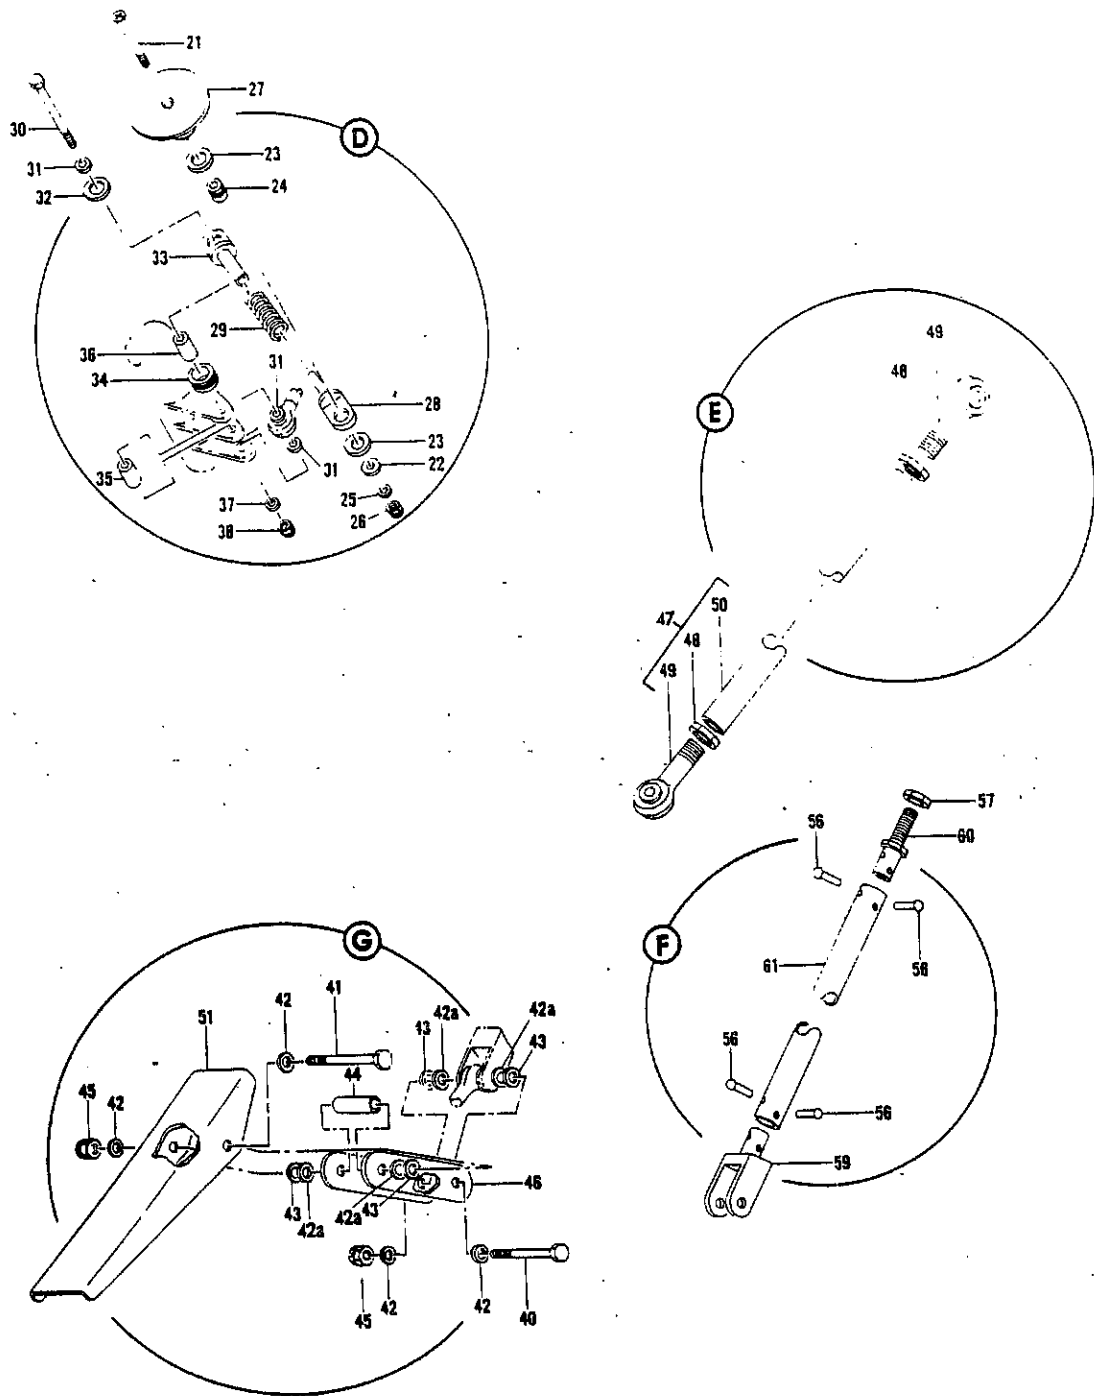


FIGURE 11. DOOR ASSY, AFT CARGO (DOORS ONLY) (SHEET 2)

NOV 21/90

52-03-11

DETAILED PARTS LIST
52-03-11
PAGE 1

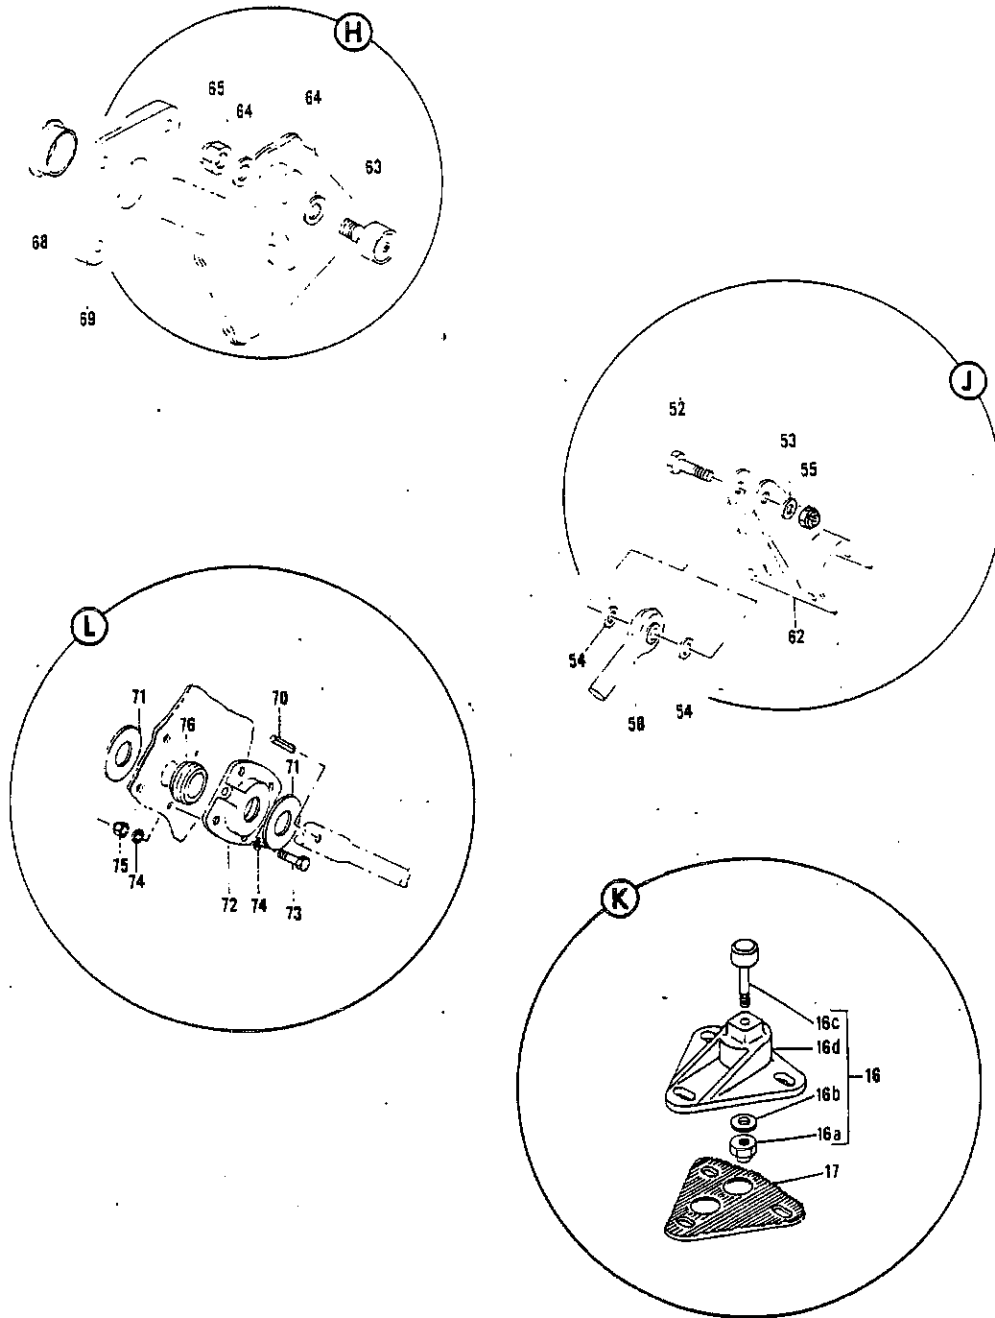


FIGURE 11. DOOR ASSY, AFT CARGO (DOORS ONLY) (SHEET 3)

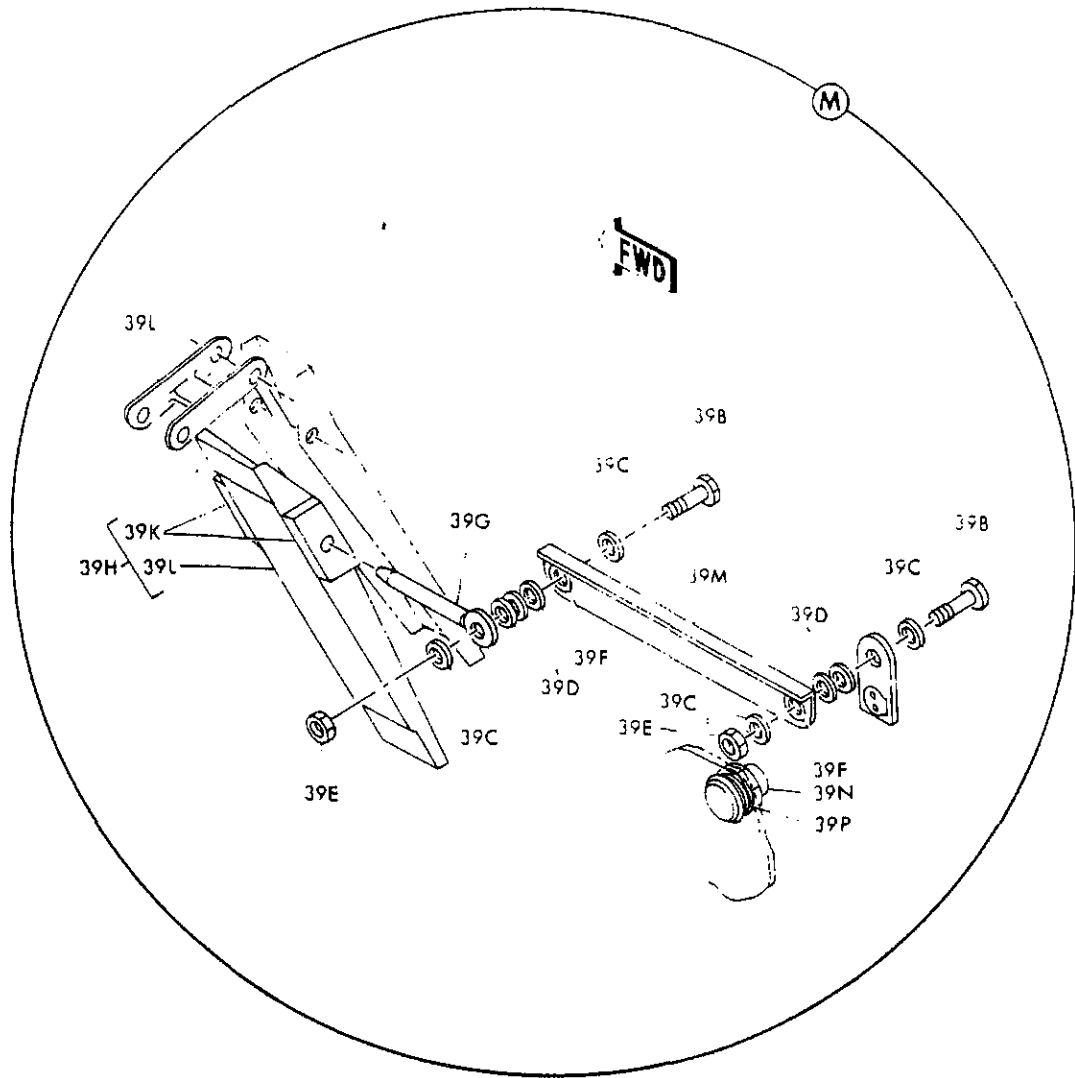


FIGURE 11. DOOR ASSY, AFT CARGO (DOORS ONLY) (SHEET 4)

NOV 21/90

52-03-11

DETAILED PARTS LIST
52-03-11
PAGE 3

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R	11 50-7991-100	DOOR ASSY, AFT CARGO (DOORS ONLY) (REWORKED BY SB 3322) (SEE FIG. 10, ITEM 3)		RF
	1 50-7991-87	. RETAINER, AFT CARGO DOOR SEAL UPPER FORWARD		1
	2 50-7991-88	. RETAINER, AFT CARGO DOOR SEAL UPPER AFT		1
	3 50-7991-89	. RETAINER, AFT CARGO DOOR SEAL SIDE AFT.		1
	4 50-7991-90	. RETAINER, AFT CARGO DOOR SEAL LOWER AFT		1
	5 50-7991-91	. RETAINER, AFT CARGO DOOR SEAL LOWER FORWARD		1
	6 50-7991-92	. RETAINER, AFT CARGO DOOR SEAL SIDE FORWARD		1
		ATTACHING PARTS		
	NAS514P632-6	. SCREW		65
	NAS679A06W	. NUT, (OPTIONAL)		65
		-----*		
	7 65-2865-14	. SEAL, CARGO DOOR.		1
R	8 50-10370-15	. FITTING ASSY, CARGO DOOR ADJUSTABLE STOP.	0150	5
R		(OPTIONAL 50-10370-26)		
R	8 50-10370-26	. FITTING ASSY, CARGO DOOR ADJUSTABLE STOP.	0150	5
R		(OPTIONAL TO 50-10370-15)		
R	8 50-10370-26	. FITTING ASSY, CARGO DOOR ADJUSTABLE STOP.	5199	5
R	9 50-10370-17	. FITTING ASSY, CARGO DOOR ADJUSTABLE STOP.	0150	5
R		(OPTIONAL 50-10370-28)		
R	9 50-10370-28	. FITTING ASSY, CARGO DOOR ADJUSTABLE STOP.	0150	5
R		(OPTIONAL TO 50-10370-17)		
	9 50-10370-28	. FITTING ASSY, CARGO DOOR ADJUSTABLE STOP.	5199	5
	10B 66-12687-1	. PIN, DOOR STOP (USED ON 50-10370-15 AND -17).		1
	11B 66-12688-1	. BUSHING, DOOR STOP (USED ON 50-10370-15 AND -17).		1
	11C 66-16691-1	. SPRING, DOOR STOP PIN RETAINER (USED ON 50-10370-15 AND -17)		1
R	13 50-10370-16	. FITTING, CARGO DOOR ADJUSTABLE STOP (USED ON.	0150	1
R		50-10370-15)		
	13 50-10370-27	. FITTING, CARGO DOOR ADJUSTABLE STOP (USED ON.		1
		50-10370-26)		
R	14 50-10370-18	. FITTING, CARGO DOOR ADJUSTABLE STOP (USED ON.	0150	1
		50-10370-17)		
	14 50-10370-29	. FITTING, CARGO DOOR ADJUSTABLE STOP (USED ON.		1
		50-10370-28)		
	15 65-21076	. ROLLER INSTL, AFT CARGO DOOR (SEE FIG. 12).		1
	16 69-1504-5	. FITTING ASSY, CARGO DOOR ADJUSTABLE DOOR GUIDE.		1
		ATTACHING PARTS		
	AN3-6A	. BOLT.		3
	AN960D10	. WASHER.		3
	NAS679A3W	. NUT		3
		-----*		
	16A BACN10BY53W	. NUT		1
	16B AN960D10	. WASHER.		1
	16C BACB10BH72CF7	. BEARING		1
	16D 69-1504-6	. FITTING, CARGO DOOR ADJUSTABLE DOOR GUIDE		1
	17 69-1808	. PLATE, CARGO DOOR GUIDE SERRATED.		1
	18 50-7991-60	. DOOR ASSY, AFT CARGO DOOR ACCESS.		2
		ATTACHING PARTS		
	NAS517-3-4	. SCREW		8
		-----*		
	19 50-7991-59	. DOOR, AFT CARGO DOOR ACCESS		1
	20 50-7991-58	. GASKET, AFT CARGO DOOR ACCESS DOOR.		1
	21 NAS333CP12	. BOLT.		1
	22 AN960D416	. WASHER.		1
	23 NAS549-616	. WASHER.		2
	24 NAS72-3-003	. BUSHING		1
	25 AN960D10L	. WASHER.		1
	26 AN310-3	. NUT		1
	27 63-1768	. SUPPORT, AFT CARGO DOOR SPRING.		1
	28 63-1629-1	. CENTERER, CARGO DOOR SPRING		1
R	29 63-1628	. SPRING, CARGO DOOR SAFETY COMPRESSION (DELETED BY SB 3322)		1
R	29 69-69349-1	. SPRING, CARGO DOOR SAFETY COMPRESSION (ADDED BY SB. 3322)		1
R		3322)		
	30 AN3-23	. BOLT.		1
	31 AN960D10L	. WASHER.		3
	32 NAS549-616	. WASHER.		1
	33 63-1630-1	. RETAINER, CARGO DOOR SPRING		1
	34 NAS72-3-009	. BUSHING		1
	35 NAS43DD3-32	. SPACER.		1
	36 NAS76A6-008P	. BUSHING		1
	37 AN960D10	. WASHER.		1
	38 AN310-3	. NUT		1
		MISSING ITEM NUMBERS ARE NOT APPLICABLE		

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
11 39	10-60006-4	. LOCK ASSY, FLUSH (SAME AS H64-9 (V83014))	5199	1
39	H64-9	. LOCK ASSY, FLUSH (V83014) (SAME AS BAC SPEC NO. 10-60006-4) (SEE FIG. 20C)	5199	RF
39	10-60006-4	. LOCK ASSY, FLUSH (SAME AS H64-9 (V83014)) (DELETED BY RAF MOD 7211.019-157)	0150	1
39	H64-9	. LOCK ASSY, FLUSH (V83014) (SAME AS BAC SPEC NO. 10-60006-4) (DELETED BY RAF MOD 7211.019-157) (SEE FIG. 20C)	0150	RF
39	Q833992-1	. LOCK ASSY, FLUSH (VZ0268) (ALTERED FROM H64-9 (V83014)) (ADDED BY RAF MOD 7211.019-157) (SEE FIG. 20C)	0150	RF
39A	69-4457-2	. HANDLE, AFT CARGO DOOR CLOSING.		1
40	AN3-14	. BOLT.		1
41	AN3-15	. BOLT.		1
42	AN960D10	. WASHER.		4
42A	AN960D10	. WASHER.		AR
43	AN960D10L	. WASHER.		AR
44	NAS430D3-51	. SPACER.		1
45	AN310-3	. NUT		2
46	69-1393	. FITTING, CARGO DOOR IDLER		1
47	BACR24D4-92	. ROD ASSY.		1
48	AN316-6R	. NUT		2
49	BACB10A72	. BEARING		2
50	BACR24D4-92E	. TUBE.		1
51	50-7991-56	. SUPPORT, AFT CARGO DOOR CHANNEL		1
52	AN3-11	. BOLT.		1
53	AN960D10	. WASHER.		1
54	AN960D10L	. WASHER.		2
55	AN310-3	. NUT		1
56	AN470D4	. RIVET		4
57	AN316-4R	. NUT		1
58	BACB10A448	. BEARING, (OPTIONAL BACB10A76)		1
59	69-1523	. FITTING, CARGO DOOR ROD END CLEVIS.		1
60	AN490HT8P	. ROD END		1
61	NAS357-80-463	. TUBE.		1
62	65-1797	. FITTING, CARGO DOOR ARM		1
		ATTACHING PARTS		
	AN3-15A	. BOLT.		2
	AN960D10	. WASHER.		2
	NAS679A3W	. NUT		2
63	CB36015	. BEARING, (V60380) (OPTIONAL CF2000 (V92563))		2
63	CF2000	. BEARING, (V92563) (OPTIONAL TO CB36015 (V60380))		2
64	AN960D616	. WASHER.		4
65	AN320-6	. NUT		2
66	65-1900-8	. FITTING, CARGO DOOR ROLLER ARM.		1
67	65-1900-9	. FITTING, CARGO DOOR ROLLER ARM.		1
		ATTACHING PARTS		
	AN3-13A	. BOLT.		4
	AN960D10	. WASHER.		4
	NAS679A3W	. NUT		4
68	NAS77A12-40P	. BUSHING		2
69	69-1396	. HOUSING, CARGO DOOR TORQUE TUBE		2
		ATTACHING PARTS		
	NAS517-4-10	. SCREW		1
	NAS517-4-7	. SCREW		1
	AN4-10A	. BOLT.		4
	AN960D416	. WASHER.		6
	BACS40A12-12	. SHIM.		AR
	50-7991-61	. FILLER, AFT CARGO DOOR TAPERED.		1
	50-7991-62	. FILLER, AFT CARGO DOOR TAPERED.		1
	50-7991-74	. FILLER, AFT CARGO DOOR TAPERED.		6
	NAS679A4W	. NUT		6
70	NAS561P4-22	. PIN		1
71	NAS549H1616	. WASHER.		2
72	65-2306	. BEARING ASSY, DOOR CAMSHAFT HOUSING		1
		ATTACHING PARTS		
73	AN3-5A	. BOLT.		4
74	AN960D10	. WASHER.		8
75	NAS679A3W	. NUT		4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

MISSING ITEM NUMBERS ARE NOT APPLICABLE

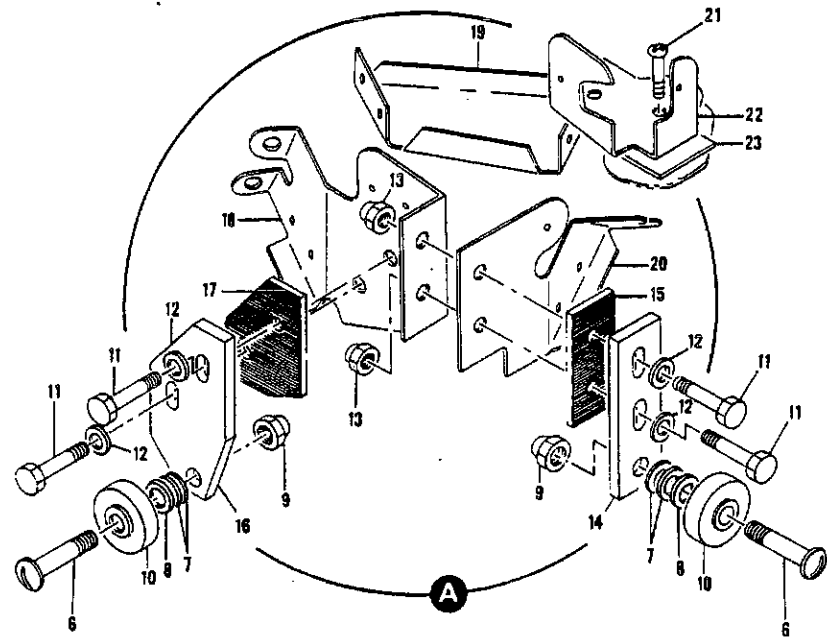
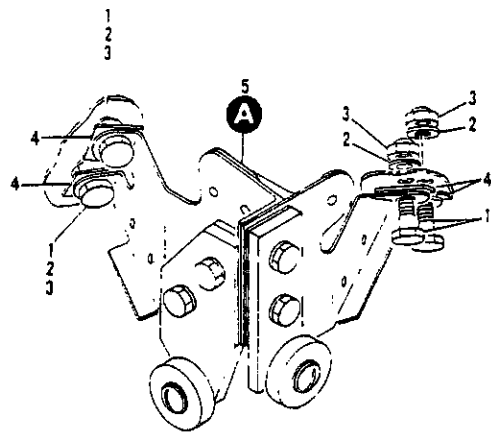
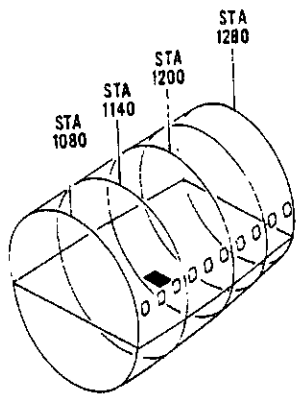


FIGURE 12. ROLLER INSTL, AFT CARGO DOOR

DETAILED PARTS LIST
52-03-12
PAGE 0

52-03-12

NOV 21/90

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
12	65-21076	ROLLER INSTL, AFT CARGO DOOR (SEE FIG. 11, ITEM 15)								RF
1	AN3-5A	. BOLT.								4
2	AN960D10	. WASHER.								4
3	BACN10BY53W	. NUT								4
4	BACS40B16-16	. SHIM.								AR
5	65-21076-1	. ROLLER ASSY, AFT CARGO DOOR								1
6	AN525-416R18	. SCREW								2
7	AN960-416L	. WASHER.								4
8	AN960-416	. WASHER.								2
9	BACN10BY54W	. NUT								2
10	BACB10A33B	. BEARING								2
11	AN3-7A	. BOLT.								4
12	AN960D10	. WASHER.								4
13	BACN10BY53W	. NUT								2
14	66-9693-1	. FITTING, AFT CARGO DOOR ROLLER.								1
15	66-9692-1	. PLATE, AFT CARGO DOOR SERRATED.								1
16	66-9693	. FITTING, AFT CARGO DOOR ROLLER.								1
17	66-9692	. PLATE, AFT CARGO DOOR SERRATED.								1
18	69-10039-5	. BRACKET, AFT CARGO DOOR ROLLER.								1
19	69-10059-6	. BRACKET, AFT CARGO DOOR ROLLER.								1
20	69-10059-7	. BRACKET, AFT CARGO DOOR ROLLER.								1
21	NAS221-11	. SCREW								2
22	69-10059-8	. BRACKET, AFT CARGO DOOR ROLLER.								1
23	BACS40B16-32	. SHIM.								AR
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

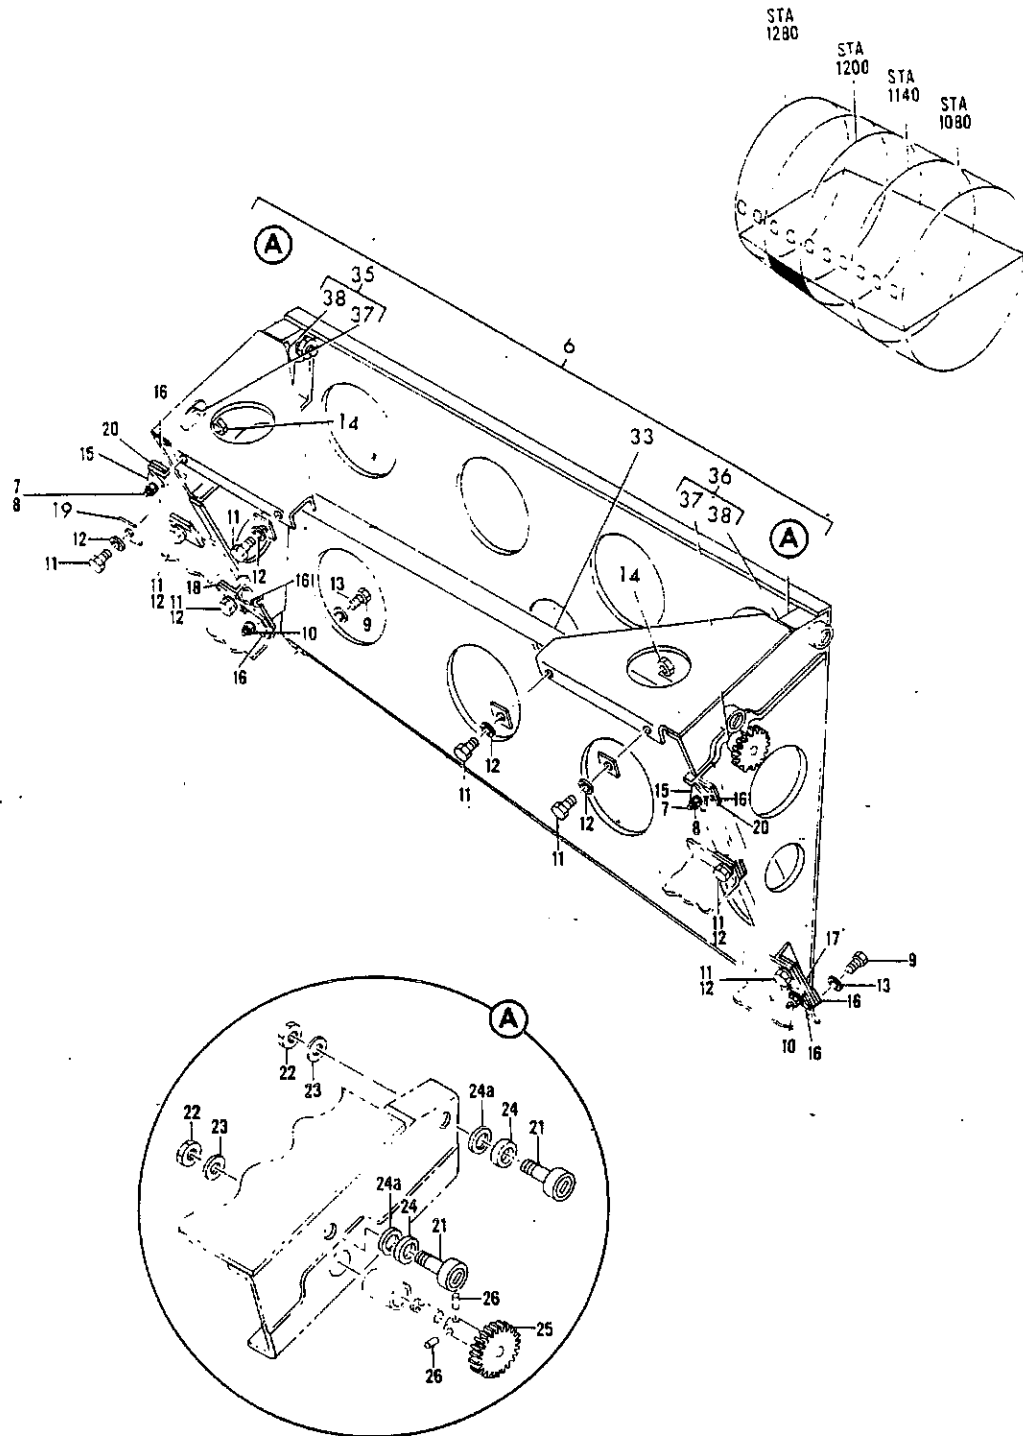


FIGURE 13. COMPENSATOR INSTL, AFT CARGO DOOR



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
13	65-2068	COMPENSATOR INSTL, AFT CARGO DOOR (SEE FIG. 10, ITEM. 2)		RF
6	65-2068-17	. COMPENSATOR ASSY, AFT CARGO DOOR.		1
7	AN4-7A	. ATTACHING PARTS		2
8	BACN10BY54W	. BOLT.		2
9	AN3-3A	. NUT.		9
10	AN3-7A	. BOLT.		2
11	AN3-5A	. BOLT.		8
12	AN960D10	. BOLT.		8
13	AN960D10L	. WASHER.		9
14	BACN10BY53W	. WASHER.		2
15	65-2068-13	. NUT.		2
16	65-2068-14	. FILLER, AFT CARGO DOOR COMPENSATOR RADIUS		6
17	BACS40B14-37	. FILLER, AFT CARGO DOOR COMPENSATOR RADIUS		AR
18	BACS40B14-42	. SHIM.		AR
19	BACS40B12-12	. SHIM.		AR
20	BACS40B14-14	. SHIM.		AR
21	BACB10B62CTK7	. BEARING		4
22	AN316-7R	. ATTACHING PARTS		4
23	NAS460-716	. NUT		4
24	AN960D716	. WASHER.		4
24A	AN960D716L	. WASHER.		AR
25	69-1654-2	. GEAR, CARGO DOOR COMPENSATOR.		2
26	NAS561P5-14	. ATTACHING PARTS		4
33	65-2068-7	. PIN		1
35	65-1908-9	. TUBE, AFT CARGO DOOR COMPENSATOR TORQUE		1
36	65-1908-10	. FITTING ASSY, CARGO DOOR ROLLER SUPPORT		1
37	NAS77A11-50	. FITTING ASSY, CARGO DOOR ROLLER SUPPORT		1
38	65-1908-3	. BUSHING		1
38	65-1908-4	. FITTING, CARGO DOOR ROLLER SUPPORT (USED ON 65-1908-9)		1
		. FITTING, CARGO DOOR ROLLER SUPPORT (USED ON 65-1908-10)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

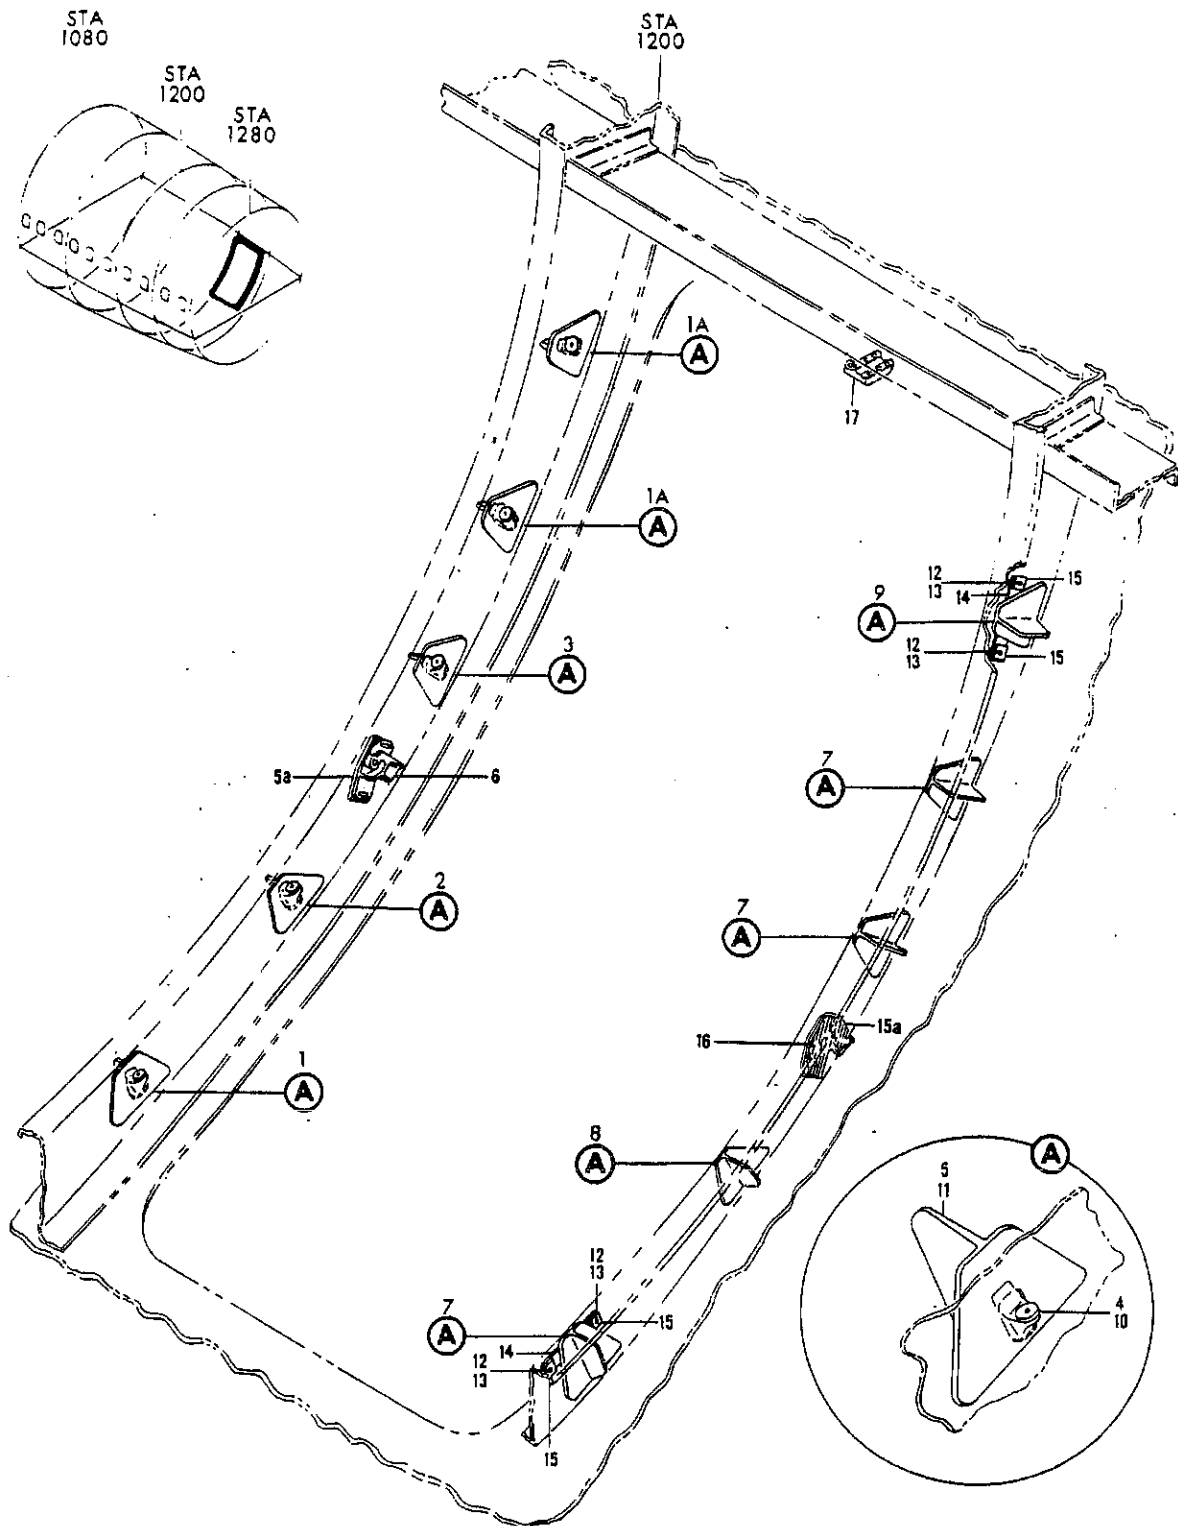


FIGURE 14 STRAP AND DOUBLER INSTL, AFT CARGO DOOR

DETAILED PARTS LIST
52-03-14
PAGE 7

52-03-14

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
14	50-8788-9		STRAP AND DOUBLER INSTL, AFT CARGO DOOR (SEE 53-2, FIG. 3, ITEM 64)		RF
	50-8789-43		. FRAME INSTL, STATION 1200 LOWER RH.		1
1	65-46043-5		. . FITTING ASSY, CARGO DOOR STOP		1
1A	65-46043-801		. . FITTING ASSY, STOP.		2
2	65-46043-6		. . FITTING ASSY, CARGO DOOR STOP		1
3	65-46043-9		. . FITTING ASSY, CARGO DOOR STOP		1
4	69-16954-1		. . . PLATE, DOOR STOP FITTING BEARING (USED ON 65-46043-5, -6, -9 AND -801)		1
5	65-46043-15		. . . FITTING, CARGO DOOR STOP (USED ON 65-46043-5) . .		1
5	65-46043-800		. . . FITTING, (USED ON 65-46043-801)		1
5	65-46043-16		. . . FITTING, CARGO DOOR STOP (USED ON 65-46043-6) . .		1
5	65-46043-19		. . . FITTING, CARGO DOOR STOP (USED ON 65-46043-9) . .		1
5A	90-9430-3		. . . PLATE, CARGO DOOR LOWER ROLLER STOP SERRATED. . .		1
6	50-10212-9		. . . FITTING, CARGO DOOR LOWER ROLLER STOP	0151	1
6	50-10212-17		. . . FITTING, CARGO DOOR LOWER ROLLER STOP	5299	1
	NAS1103-6W		ATTACHING PARTS		
	AN960C10L		. . BOLT.		3
			. . WASHER.		3
	50-8790-13		. . . FRAME INSTL, STATION 1233.50 AFT CARGO DOOR		1
7	65-46043-5		. . . FITTING ASSY, CARGO DOOR STOP		3
8	65-46043-7		. . . FITTING ASSY, CARGO DOOR STOP		1
9	65-46043-8		. . . FITTING ASSY, CARGO DOOR STOP		1
10	69-16954-1		. . . PLATE, DOOR STOP FITTING BEARING (USED ON 65-46043-5, -7 AND -8)		1
	65-46043-15		. . . FITTING, CARGO DOOR STOP (USED ON 65-46043-5) . .		1
11	65-46043-17		. . . FITTING, CARGO DOOR STOP (USED ON 65-46043-7) . .		1
11	65-46043-18		. . . FITTING, CARGO DOOR STOP (USED ON 65-46043-8) . .		1
12	AN3-4A		. . . BOLT.		4
13	AN960D10		. . . WASHER.		4
14	66-18060-1		. . . BLOCK, STATION 1233.50 AFT CARGO DOOR GUIDE		2
15	63-9509-1		. . . SHIM, STATION 1233.50 AFT CARGO DOOR GUIDE BLOCK. .		AR
			LAMINATED		
15A	90-9430-4		. . . PLATE, CARGO DOOR LOWER ROLLER STOP SERRATED. . .		1
16	50-10212-13		. . . FITTING, CARGO DOOR LOWER ROLLER STOP	0151	1
16	50-10212-20		. . . FITTING, CARGO DOOR LOWER ROLLER STOP	5299	1
	NAS1103-6W		ATTACHING PARTS		
	AN960C10L		. . BOLT.		3
			. . WASHER.		3
	50-10827-15		. . . SILL INSTL, AFT CARGO DOOR UPPER MAIN		1
17	69-1922		. . . GUIDE, AFT CARGO DOOR UPPER		1
	NAS517-3-14		ATTACHING PARTS		
			. . . SCREW		6
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

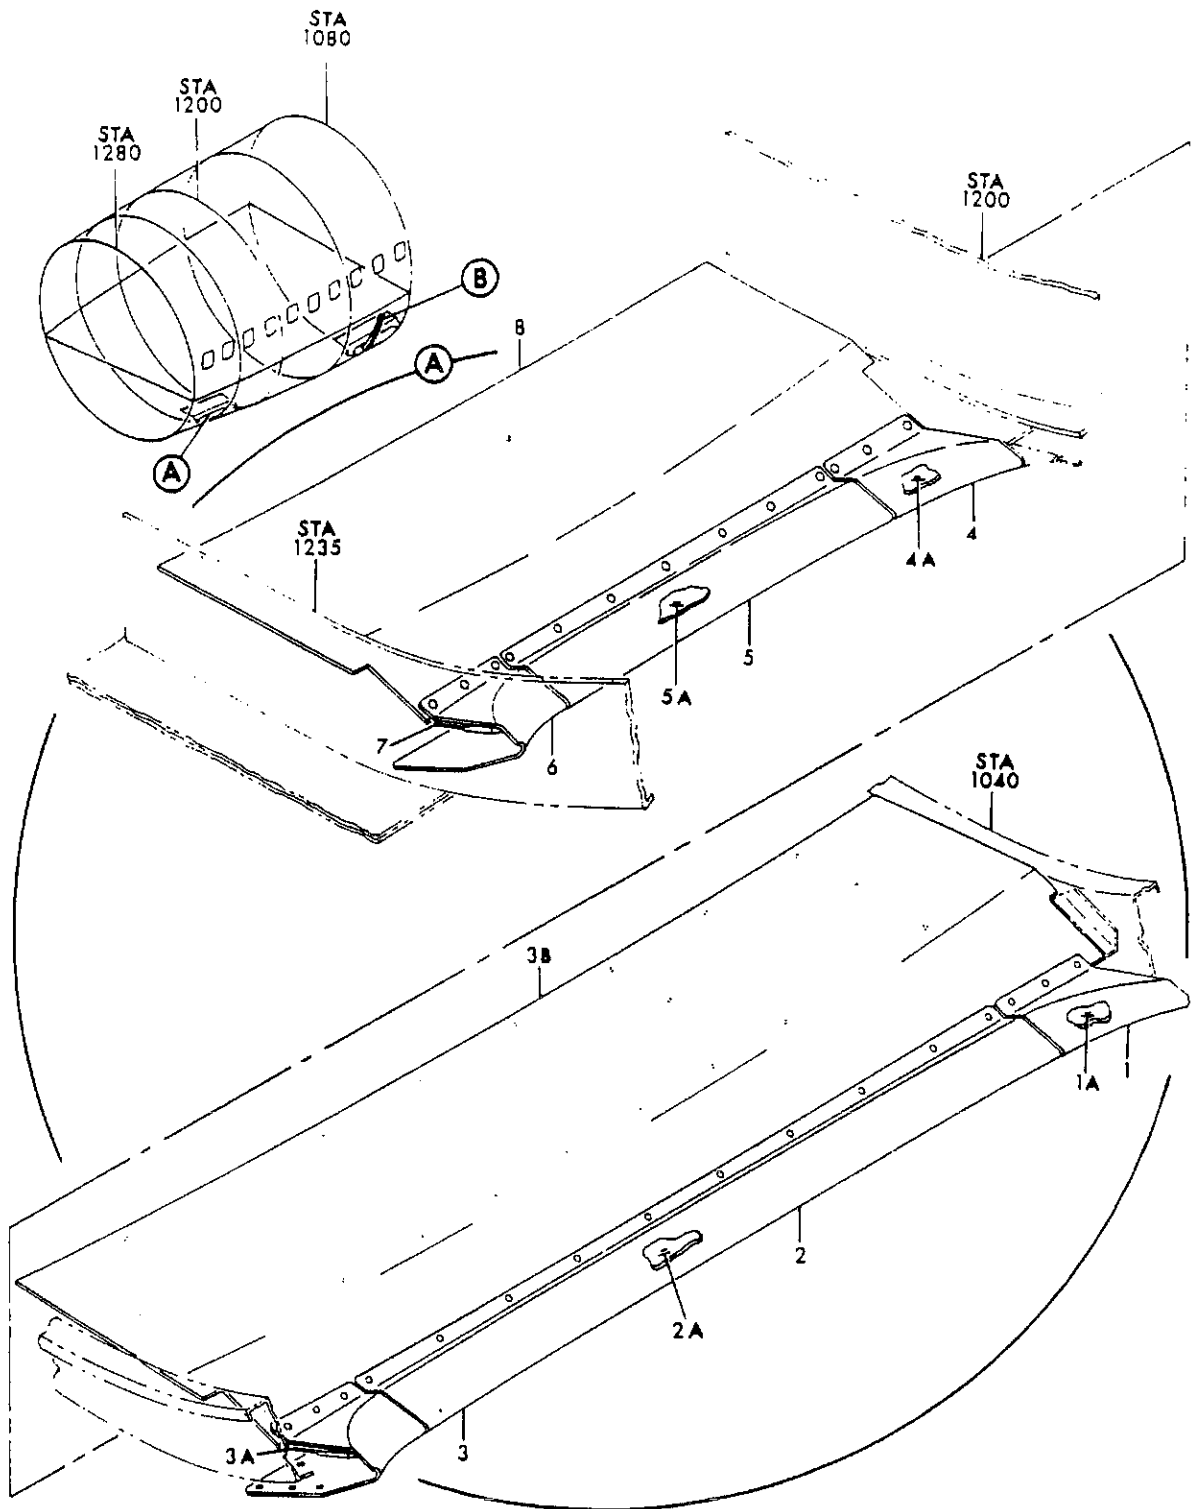


FIGURE 15. PLATE INSTL, CARGO DOOR SCUFF (SHEET 1)

DETAILED PARTS LIST
52-03-15
PAGE 0

52-03-15

NOV 21/90

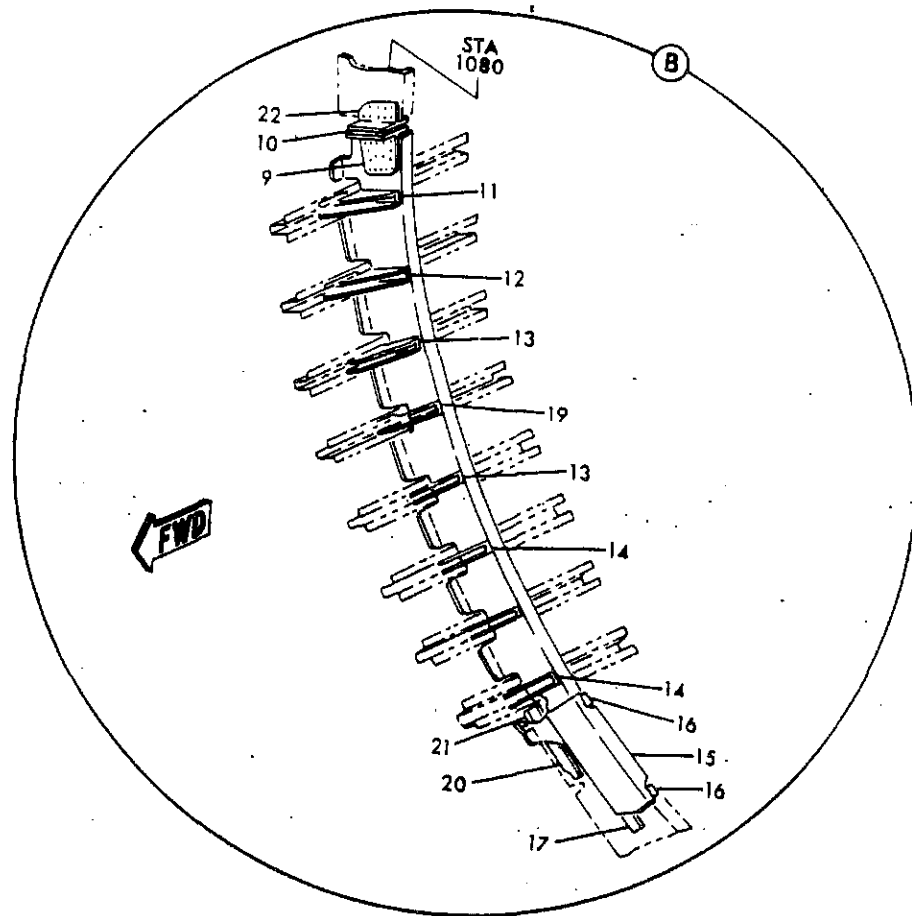


FIGURE 15. PLATE INSTL, CARGO DOOR SCUFF (SHEET 2)

NOV 21/90

52-03-15

DETAILED PARTS LIST
52-03-15
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
15	50-10363-18	PLATE INSTL, CARGO DOORS SCUFF.		RF
1	50-10363-11	. PLATE INSTL, CENTER CARGO DOOR SCUFF (SEE 53-2, FIG. 3, ITEM 38)		1
		. . CORNER ASSY, CENTER CARGO DOOR SCUFF PLATE FORWARD SCUFF		1
		ATTACHING PARTS		3
	NAS517-3-0	. . SCREW		1
	NAS517-3-3	. . SCREW		1
	NAS517-3-4	. . SCREW		2
	NAS517-3-5	. . SCREW		4
	NAS517-3-6	. . SCREW		1
	NAS517-3-9	. . SCREW		2
	BACN10BY53W	. . NUT		2
1A	50-10363-16	. . BLOCK, CENTER CARGO DOOR SCUFF PLATE FORWARD CORNER		1
		ATTACHING PARTS		13
	NAS517-3-7	. . SCREW		2
	NAS517-3-9	. . SCREW		2
	BACN10BY53W	. . NUT		2
2	50-10363-40	. . PLATE		1
		ATTACHING PARTS		6
	NAS517-3-4	. . SCREW		9
	NAS517-3-6	. . SCREW		2
	NAS517-3-5	. . SCREW		2
2A	50-10363-6	. . BLOCK, CENTER CARGO DOOR SCUFF PLATE CENTER		1
		ATTACHING PARTS		26
	NAS517-3-7	. . SCREW		26
	BACN10BY53W	. . NUT		26
3	50-10363-15	. . CORNER, CENTER CARGO DOOR AFT SCUFF PLATE		1
		ATTACHING PARTS		1
	NAS517-3-3	. . SCREW		2
	NAS517-3-5	. . SCREW		4
	NAS517-3-6	. . SCREW		2
	NAS517-3-9	. . SCREW		2
	BACN10BY53W	. . NUT		2
3A	50-10363-7	. . BLOCK, CENTER CARGO DOOR SCUFF PLATE AFT CORNER . .		1
		ATTACHING PARTS		6
	NAS517-3-7	. . SCREW		6
	BACN10BY53W	. . NUT		6
3B	50-10363-37	. . STEP		1
		ATTACHING PARTS		10
	NAS517-3-3	. . SCREW		13
	NAS517-3-1	. . SCREW		13
	50-11200-9	. PLATE INSTL, AFT CARGO DOOR SCUFF (SEE 53-2, FIG. 3, ITEM 37)		RF
4	50-11200-10	. . CORNER, AFT CARGO DOOR FORWARD SCUFF.		1
		ATTACHING PARTS		1
	NAS517-3-3	. . SCREW		3
	NAS517-3-5	. . SCREW		2
	NAS517-3-8	. . SCREW		2
	NAS679A3W	. . NUT		2
4A	50-11200-5	. . BLOCK, AFT CARGO DOOR FORWARD CORNER.		1
		ATTACHING PARTS		6
	NAS517-3-8	. . SCREW		6
	NAS679A3W	. . NUT		6
5	50-11200-18	. . PLATE, AFT CARGO DOOR SCUFF		1
		ATTACHING PARTS		7
	NAS517-3-5	. . SCREW		7
5A	50-11200-6	. . BLOCK, AFT CARGO DOOR CENTER.		1
		ATTACHING PARTS		13
	NAS517-3-8	. . SCREW		13
	NAS679A3W	. . NUT		13
6	50-11200-12	. . CORNER, AFT CARGO DOOR AFT SCUFF.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
15	NAS517-3-3 NAS517-3-5 NAS517-3-8 NAS679A3W	.	ATTACHING PARTS SCREW SCREW SCREW NUT		1 3 2 2
7	50-11200-7 NAS517-3-7 NAS679A3W	.	BLOCK, AFT CARGO DOOR AFT CORNER. ATTACHING PARTS SCREW NUT		1 6 6
8	50-11200-16 NAS517-3-2 NAS221-8	.	STEP, AFT CARGO DOOR. ATTACHING PARTS SCREW SCREW		1 11 2
20	65-87240-12	.	ANGLE		1
21	BACF3F17W17	.	FILLER		1
22	65-87240-10	.	CLIP		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

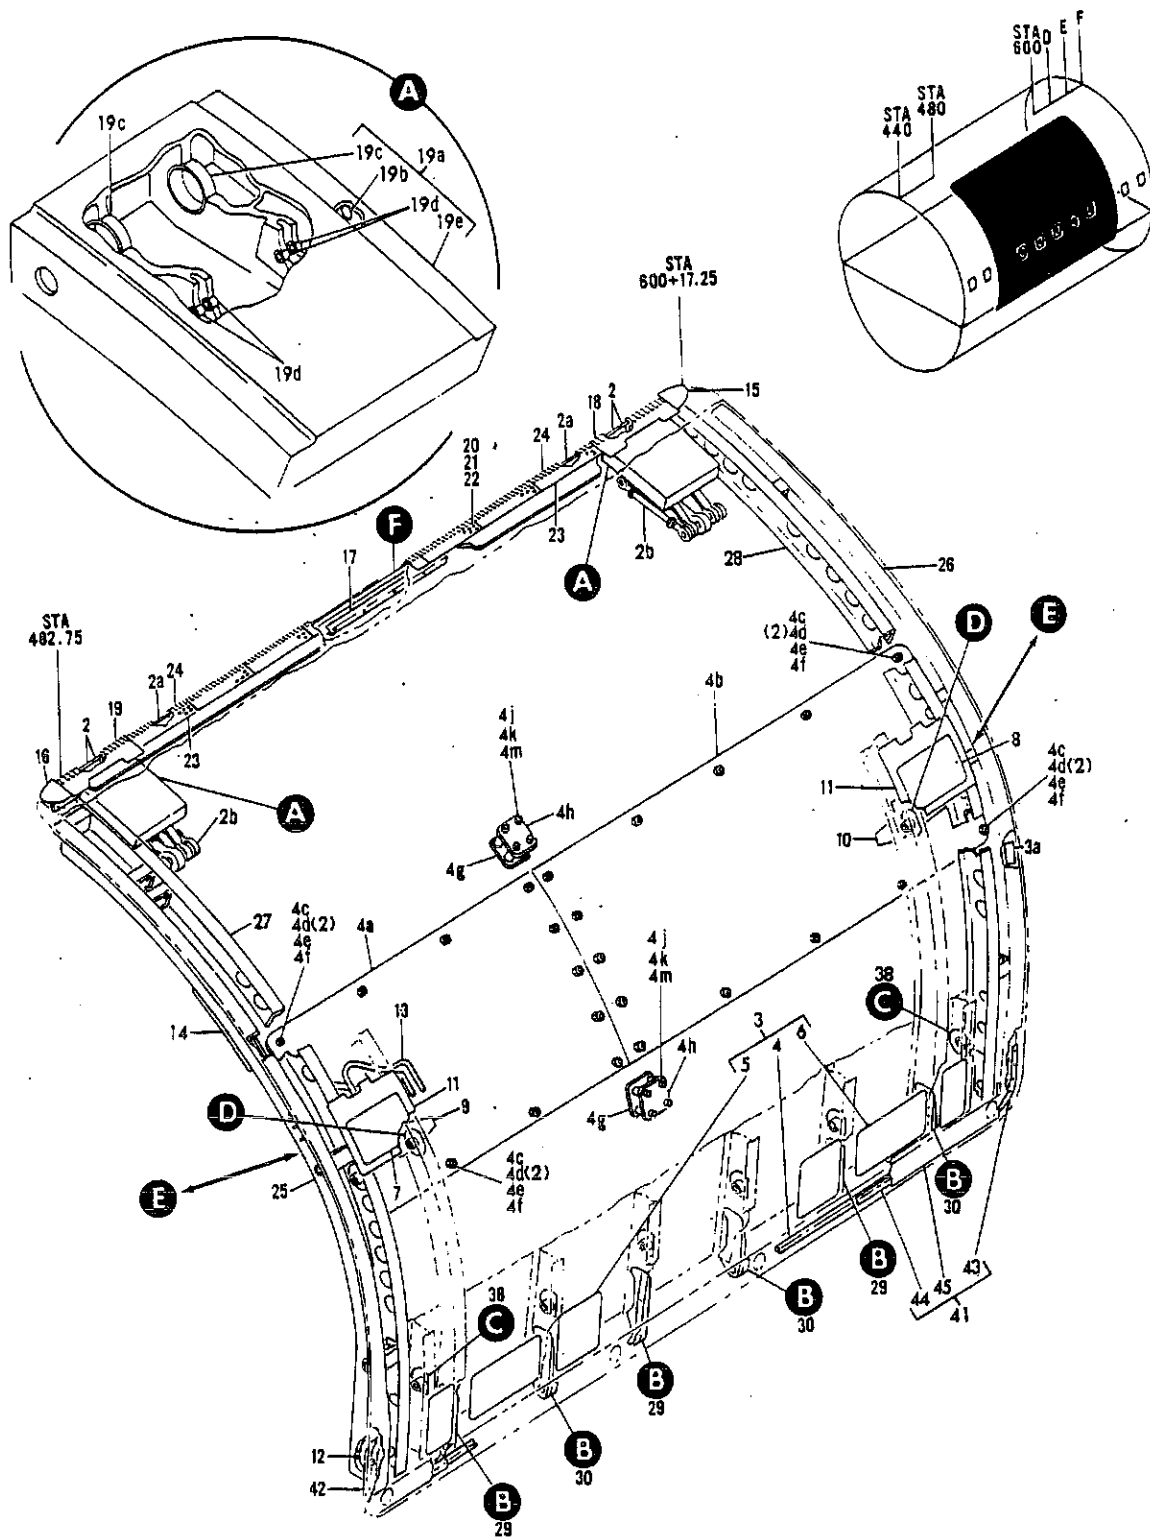


FIGURE 16. DOOR INSTL, MAIN CARGO (SHEET 1)

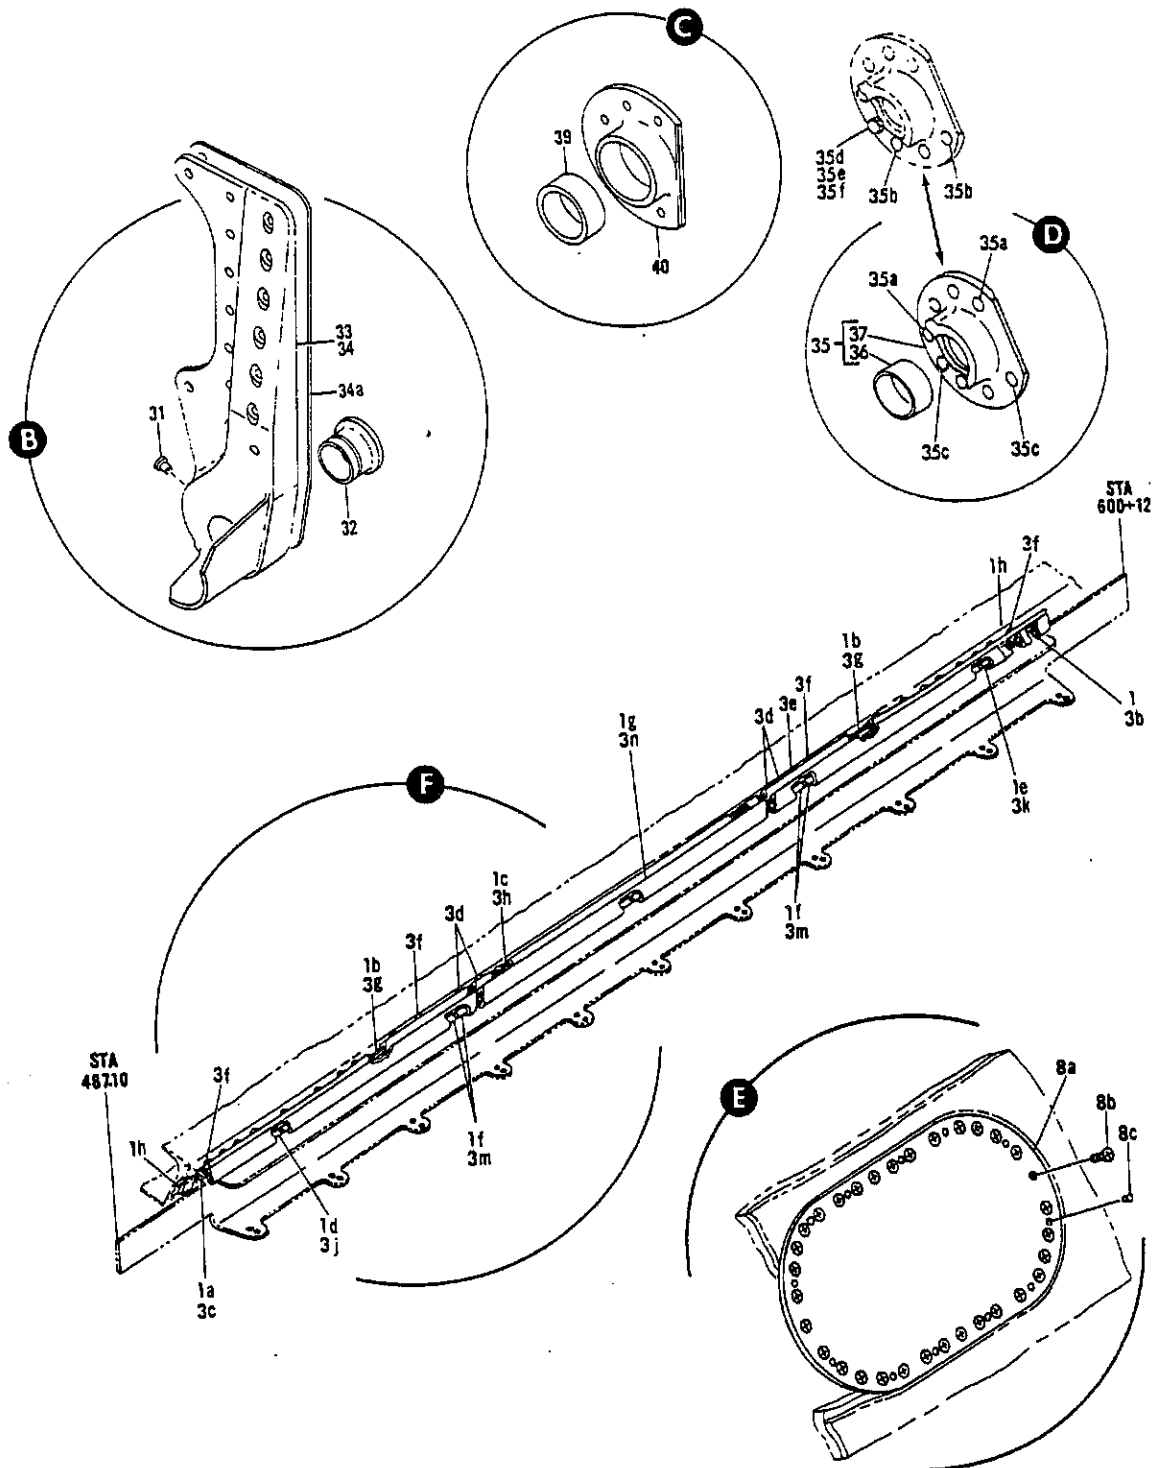


FIGURE 6. DOOR INSTL, CENTER CARGO (SHEET 2)

NOV 21/90

52-03-16

DETAILED PARTS LIST
52-03-16
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
16	65-25326-501	DOOR INSTL, MAIN CARGO (SEE 53-2, FIG. 2, ITEM 121) . .	0102	RF
	65-25326-5	DOOR INSTL, MAIN CARGO (SEE 53-2, FIG. 2, ITEM 121) . .	0350	RF
	65-25326-9	DOOR INSTL, MAIN CARGO (SEE 53-2, FIG. 2, ITEM 121) . .	5199	RF
	65-25337-2	. PIN INSTL, MAIN CARGO DOOR HINGE		1
2	69-20817-4	. . PIN, CARGO DOOR HINGE		4
2A	69-20817-3	. . PIN, CARGO DOOR HINGE		8
2B	65-48208-2	. LINKAGE INSTL, MAIN CARGO DOOR ACTUATOR (SEE FIG. . .		2
		25A)		
3	65-25326-502	. DOOR ASSY, MAIN CARGO (DELETED BY SB 2999)	0102	1
3	65-82571-2	. DOOR ASSY, MAIN CARGO (ADDED BY SB 2999)	0102	1
3	65-25326-6	. DOOR ASSY, MAIN CARGO (DELETED BY SB 2999)	0350	1
3	65-82571-1	. DOOR ASSY, MAIN CARGO (ADDED BY SB 2999)	0350	1
3	65-25326-10	. DOOR ASSY, MAIN CARGO	5199	1
3A	AN7510-1	. . PLATE		1
	65-36524-501	. . SEAL INSTL		1
3B	65-36524-503	. . RETAINER, STRIP	0150	1
3B	65-36524-49	. . RETAINER, STRIP	5199	1
3C	65-36524-502	. . RETAINER, STRIP	0150	1
3C	65-36524-48	. . RETAINER, STRIP	5199	1
		ATTACHING PARTS		
3D	NAS623-3-7	. . . SCREW		4
3E	NAS623-3-8	. . . SCREW		1
3F	NAS623-3-12	. . . SCREW		21
		-----*		
3G	65-36524-4	. . . RETAINER, STRIP	0150	2
3G	65-36524-47	. . . RETAINER, STRIP	5199	2
3H	65-36524-3	. . . RETAINER, STRIP	0150	1
3H	65-36524-46	. . . RETAINER, STRIP	5199	1
		ATTACHING PARTS		
	NAS623-3-7	. . . SCREW		38
		-----*		
3J	65-36524-506	. . . RETAINER, ANGLE		1
3K	65-36524-505	. . . RETAINER, ANGLE		1
		ATTACHING PARTS		
	NAS514P632-6P	. . . SCREW		4
		-----*		
3M	65-36524-504	. . . RETAINER, STRIP		4
		ATTACHING PARTS		
	NAS514P632-6P	. . . SCREW		52
	AN960PD6L	. . . WASHER		52
	NAS679A06W	. . . NUT		52
		-----*		
3N	65-36524-35	. . . SEAL, MOULDED RUBBER (EXTRUSION NO. BAC1530-59 . .		1
		(OPTIONAL EXTRUSION NO. BAC1530-49) X 138 IN.		
		LG)		
4	10-60912-3	. . SEAL, DOOR BULB TYPE		1
5	65-25336-1	. . DOOR INSTL, MAIN CARGO DOOR LOWER ACCESS (SEE FIG.		1
		19)		
6	65-25336-2	. . DOOR INSTL, MAIN CARGO DOOR LOWER ACCESS (SEE FIG.		1
		19)		
	65-48223-3	. . DOOR INSTL, DRIFT PIN ACTUATOR MAIN CARGO		2
8A	65-48223-4	. . DOOR, (USED ON 65-48223-3)		2
		ATTACHING PARTS		
8B	NAS333CPA5-5	. . . BOLT		32
8C	MS20426D3	. . . RIVET		12
		-----*		
12	65-25339-501	. . MECHANISM INSTL, LATCH (SEE FIG. 20B)	0102	1
12	65-25339-13	. . MECHANISM INSTL, LATCH (SEE FIG. 20B)	0399	1
13	65-31451-82	. . HYDRAULIC INSTL, CARGO DOOR	0150	1
		. . HYDRAULIC POWER, (SEE 29-4, FIG. 27 AND 27A)		
		. . REQUIRED PLACARDS, (SEE 11-2, FIG. 139 AND 140) . .		
14	65-54107-110	. . INSULATION INSTL, (SEE FIG. 17A)		1
	65-25337-506	. . BEAM INSTL, UPPER	0102	1
14	65-25337-31	. . BEAM INSTL, UPPER	0350	1
14	65-25337-33	. . BEAM INSTL, UPPER	5199	1
15	69-21942-1	. . FAIRING, MAIN CARGO DOOR END	0150	1
		(OPTIONAL 69-21942-5)		
15	69-21942-5	. . FAIRING, MAIN CARGO DOOR END	0150	1
		(OPTIONAL TO 69-21942-1)		
15	69-21942-5	. . FAIRING, MAIN CARGO DOOR END	5199	1
16	69-21942-2	. . FAIRING, MAIN CARGO DOOR END	0150	1
		(OPTIONAL 69-21942-6)		
16	69-21942-6	. . FAIRING, MAIN CARGO DOOR END	0150	1
		(OPTIONAL TO 69-21942-2)		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 16 16	69-21942-6	. . .	FAIRING, MAIN CARGO DOOR END.	5199	1
	NAS333CPA6	. . .	ATTACHING PARTS		8
	AN960C10L	. . .	BOLT.		8
	NAS679A3W	. . .	WASHER.		8
		. . .	NUT		8

17	65-25337-502	. . .	RETAINER, UPPER SEAL.		1
	NAS333CPA8	. . .	ATTACHING PARTS		2
	AN960C10L	. . .	BOLT.		2
	NAS679A3W	. . .	WASHER.		2
	NAS679A4W	. . .	NUT		7
	NAS679A6	. . .	NUT		2

18	65-26337-502	. . .	HINGE HALF, CARGO DOOR.		1
	NAS1104-4	. . .	ATTACHING PARTS		1
	NAS1105-8	. . .	BOLT.		1
	NAS1105-7	. . .	BOLT.		6
	NAS334CPA7	. . .	BOLT.		5
	NAS335CPA7	. . .	BOLT.		3
	NAS335CPA10	. . .	BOLT.		8
	NAS335CPA11	. . .	BOLT.		2
	AN960C416L	. . .	WASHER.		13
	AN960C516L	. . .	WASHER.		33
	NAS679A4W	. . .	NUT		13
	NAS679A5	. . .	NUT		33

19	65-26337-501	. . .	HINGE HALF, CARGO DOOR.		1
	NAS1104-6	. . .	ATTACHING PARTS		1
	NAS1504-7	. . .	BOLT.		1
	NAS1105-8	. . .	BOLT.		4
	NAS1105-7	. . .	BOLT.		6
	NAS334CPA7	. . .	BOLT.		4
	NAS335CPA7	. . .	BOLT.		3
	NAS335CPA10	. . .	BOLT.		8
	AN960C416L	. . .	WASHER.		28
	AN960C516L	. . .	WASHER.		29
	NAS679A4W	. . .	NUT		28
	NAS679A5	. . .	NUT		29

19A	65-48200-1	. . .	FITTING ASSY, ACTUATOR SUPPORT PAN.		2
19B	65-48200-3	. . .	PLUG.		1
19C	69-36709-1	. . .	SLEEVE.		2
19D	NAS76A7-012P	. . .	BUSHING		4
19E	65-48200-2	. . .	FITTING		1
20	NAS333CPA7	. . .	BOLT.		AR
21	AN960C10L	. . .	WASHER.		AR
22	NAS679A3W	. . .	NUT		AR
23	69-24400-1	. . .	FAIRING, CARGO DOOR HINGE		8
24	69-22750-1	. . .	HINGE HALF, CARGO DOOR.		8
25	65-25335-511	. . .	FRAME INSTL, STATION 482.75 MAIN CARGO DOOR (SEE . FIG. 22)		1
26	65-25335-512	. . .	FRAME INSTL, STATION 600 PLUS 17.25 MAIN CARGO. . . DOOR (SEE FIG. 22)		1
27	65-25327-502	. . .	FRAME INSTL, STATION 487.10 MAIN CARGO DOOR (SEE . FIG. 23A)		1
28	65-25330-504	. . .	FRAME INSTL, STATION 600 PLUS 12.9 MAIN CARGO DOOR (SEE FIG. 23A)		1
	65-25328-501	. . .	FRAME INSTL, STATION 500 MAIN CARGO DOOR (USED ON . 65-25326-502)		1
	65-25331-8	. . .	FRAME INSTL, STATION 520 MAIN CARGO DOOR.		1
	65-25331-2	. . .	FRAME INSTL, STATION 540 AND 580 MAIN CARGO DOOR. . .		2
	65-25331-1	. . .	FRAME INSTL, STATION 560 MAIN CARGO DOOR.		1
	65-25332-1	. . .	FRAME INSTL, STATION 493.55 MAIN CARGO DOOR		1
	65-25332-4	. . .	FRAME INSTL, STATION 600 PLUS 6.45 MAIN CARGO DOOR . . .		1
	65-25329-501	. . .	FRAME INSTL, STATION 600 MAIN CARGO DOOR (USED ON . 65-25326-502)		1
R 29	69-23588-2	. . .	SUPPORT ASSY, CARGO DOOR CAM (USED ON 65-25328-1, -501, AND 65-25331-2) (OPTIONAL TO 69-23588-6)	5199	1
	69-23588-5	. . .	SUPPORT ASSY. (OPTIONAL 69-23588-1)	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
16 29	69-23588-2	. . .	SUPPORT ASSY, CARGO DOOR CAM (DELETED BY SB 3387)	0150	1
29	69-23588-6	. . .	SUPPORT ASSY, (REPLACES 69-23588-2 BY SB 3387)	0150	1
30	69-23588-1	. . .	SUPPORT ASSY, CARGO DOOR CAM (USED ON 65-25331-8, -1, 65-25329-1 AND -501) (OPTIONAL TO 69-23588-5)	5199	1
30	69-23588-1	. . .	SUPPORT ASSY, CARGO DOOR CAM (DELETED BY SB 3387)	0150	1
30	69-23588-5	. . .	SUPPORT ASSY, (REPLACES 69-23588-1 BY SB 3387)	0150	1
30	69-23588-6	. . .	SUPPORT ASSY. (OPTIONAL 69-23588-2)	5199	1
	BACB30N10	. . .	ATTACHING PARTS BOLT, (LENGTH AS REQUIRED)		16
	NAS1080C10	. . .	COLLAR, (USED ON 65-25328-1)		16
	BACC30K10	. . .	COLLAR.		16

31	NAS516-1	. . .	FITTING, (USED ON 69-23588-1, -2)		1
31	NAS516-1A	. . .	FITTING, (USED ON 69-23588-5, -6)		1
32	69-23588-3	. . .	BUSHING, (USED ON 69-23588-1, -2)		1
32	69-23588-4	. . .	BUSHING, (USED ON 69-23588-5, -6)		1
33	5-89829-2	. . .	FITTING, CARGO DOOR CAM SUPPORT (USED ON 69-23588-2)		1
33	5-89829-4	. . .	FITTING, (USED ON 69-23588-6)		1
34	5-89829-1	. . .	FITTING, CARGO DOOR CAM SUPPORT (USED ON 69-23588-1)		1
34	5-89829-3	. . .	FITTING, (USED ON 69-23588-5)		1
34A	BACS40A74-194	. . .	SHIM, (USED ON 65-25328-1, -501, 65-25331-8, -2, -1, 65-25329-1 AND -501)		AR
35	6-74861-1	. . .	BEARING ASSY, LATCH SUPPORT (USED ON 65-25328-1, -501, 65-25329-1 AND -501) (OPTIONAL TO 6-74861-2)	0102	1
35	6-74861-2	. . .	BEARING ASSY, LATCH SUPPORT (USED ON 65-25328-1, -501, 65-25329-1 AND -501) (OPTIONAL 65-74861-1)	0102	1
		. . .	ATTACHING PARTS		
35A	MS20470D5	. . .	RIVET	0102	4
35B	MS20426D5	. . .	RIVET, (USED ON 65-25328-1, -501, 65-25329-1 AND -501)	0102	3
35C	MS20470D5	. . .	RIVET, (USED ON 65-25330-1 AND -504)	0102	4
35D	NAS1103-5	. . .	BOLT, (USED ON 65-25328-1, -501, 65-25329-1 AND -501)	0102	1
35E	AN960D10	. . .	WASHER, (USED ON 65-25328-1, -501, 65-25329-1 AND -501)	0102	1
35F	NAS679A3W	. . .	NUT, (USED ON 65-25328-1, -501, 65-25329-1 AND -501)	0102	1

36	BACB10D168	. . .	BEARING	0102	1
37	6-74861-3	. . .	HOUSING, CARGO DOOR LATCH SUPPORT BEARING (USED ON 6-74861-1)	0102	1
37	6-74861-4	. . .	HOUSING, CARGO DOOR LATCH SUPPORT BEARING (USED ON 6-74861-2)	0102	1
38	69-21147-1	. . .	SUPPORT ASSY, CARGO DOOR TORQUE TUBE BEARING. (USED ON 65-25331-8, -2 AND -1)		1
38	69-21147-1	. . .	SUPPORT ASSY, CARGO DOOR TORQUE TUBE BEARING. (USED ON 65-25328-501 AND 65-25329-501)		1
		. . .	ATTACHING PARTS		
	MS20470D6	. . .	RIVET		6

39	BACB10D113	. . .	BEARING		1
40	69-21147-2	. . .	HOUSING, CARGO DOOR TORQUE TUBE BEARING SUPPORT		1
41	65-25338-1	. . .	BEAM INSTL, MAIN CARGO DOOR LOWER (DOORS ONLY)		1
42	65-25338-3	. . .	RETAINER, MAIN CARGO DOOR LOWER BEAM SEAL		1
43	65-25338-4	. . .	RETAINER, MAIN CARGO DOOR LOWER BEAM SEAL		1
44	65-25338-5	. . .	RETAINER, MAIN CARGO DOOR LOWER BEAM SEAL		1
45	65-25338-2	. . .	BEAM, MAIN CARGO DOOR LOWER		1
		. . .	WINDOWS, (SEE 56-2, FIG. 7)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

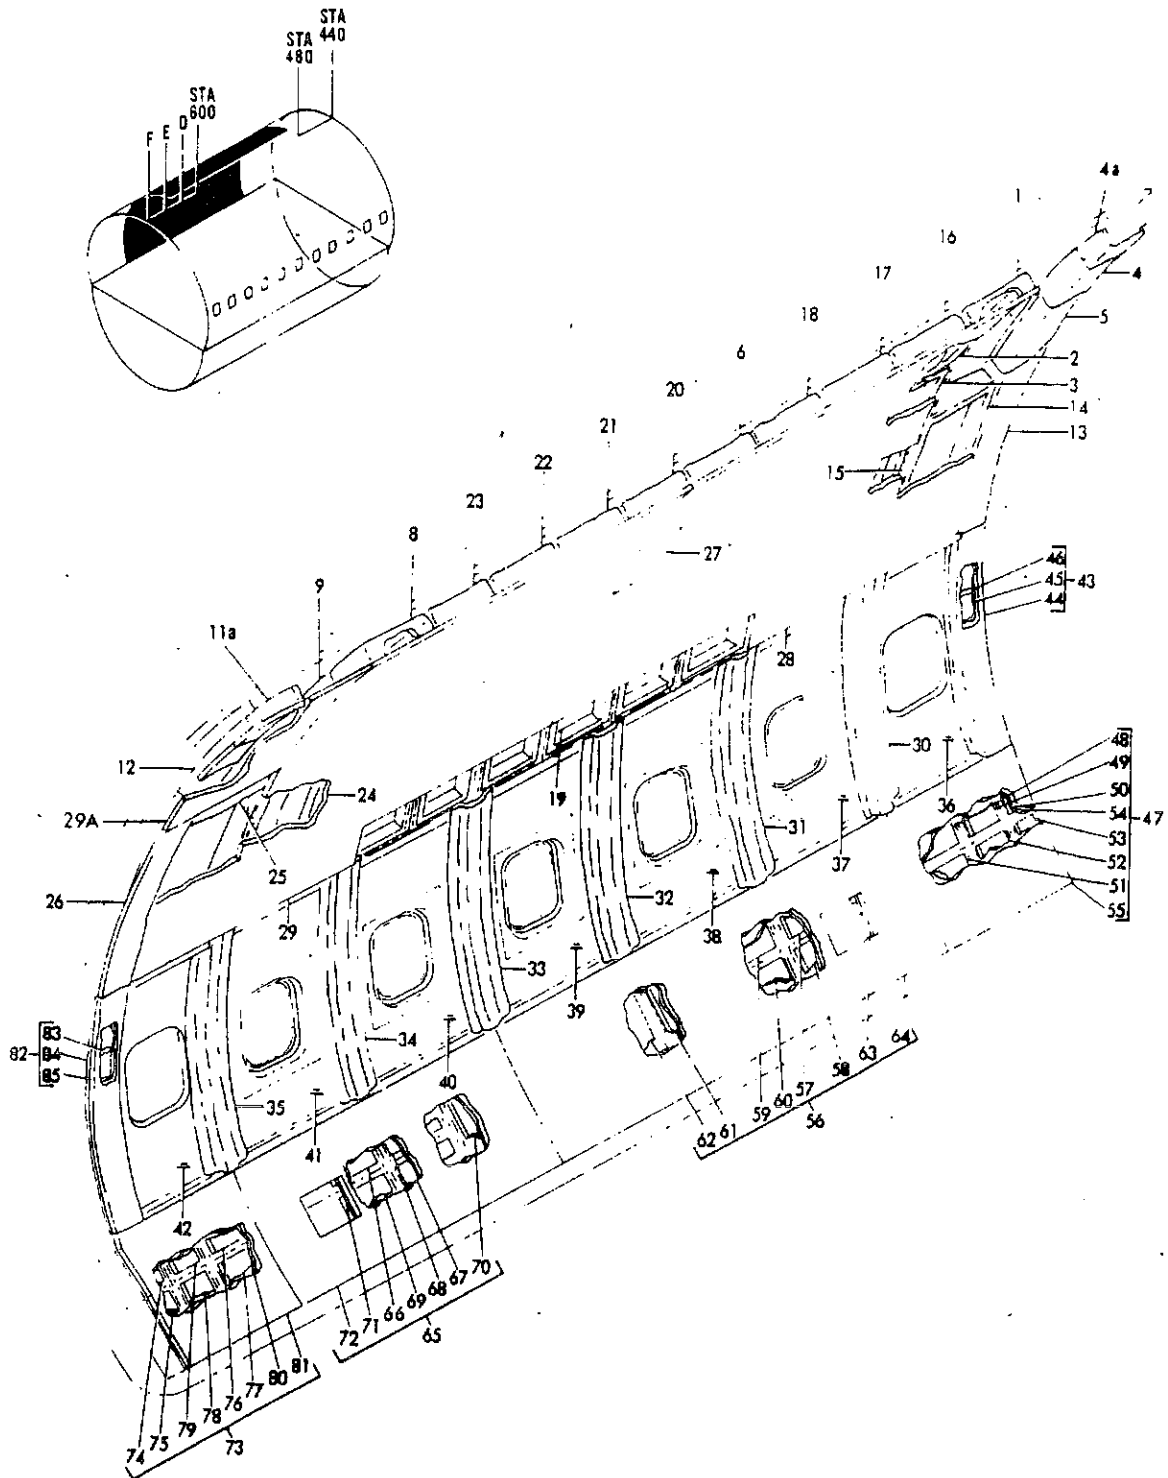


FIGURE 17A. INSULATION INSTL, CARGO DOOR

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R 17A	65-54107-1		INSULATION INSTL, CARGO DOOR.	5199	RF
	65-54107-110		INSULATION INSTL, CARGO DOOR (SEE FIG. 16, ITEM 14)		RF
1	65-54107-135		BLANKET ASSY.		1
2	65-54107-136		BLANKET ASSY.		1
3	65-54107-137		BLANKET ASSY.		1
4	65-54107-139		BLANKET ASSY.		1
4A	65-54107-138		BLANKET ASSY.		1
5	65-54107-132		BLANKET ASSY.		1
6	65-54107-133		BLANKET ASSY.		1
8	65-54107-130		BLANKET ASSY.		1
9	65-54107-131		BLANKET ASSY.		1
10	65-54107-132		BLANKET ASSY.		1
11	65-54107-128		BLANKET ASSY.		1
11A	65-54107-129		BLANKET ASSY.		1
12	65-54107-127		BLANKET ASSY.		1
13	65-54107-113		BLANKET ASSY.		1
14	65-54107-114		BLANKET ASSY.		1
15	65-54107-115		BLANKET ASSY.		1
16	65-54107-116		BLANKET ASSY.		1
17	65-54107-117		BLANKET ASSY.		1
18	65-54107-118		BLANKET ASSY.		1
19	65-54107-119		BLANKET ASSY.		1
20	65-54107-120		BLANKET ASSY.		1
21	65-54107-121		BLANKET ASSY.		1
22	65-54107-122		BLANKET ASSY.		1
23	65-54107-123		BLANKET ASSY.		1
24	65-54107-124		BLANKET ASSY.		1
25	65-54107-125		BLANKET ASSY.		1
26	65-54107-126		BLANKET ASSY.		1
	66-24419-1		RETAINER, INSULATION.		AR
R	65-54107-204		INSULATION INSTL, CARGO DOOR (SEE 25-12, FIG. 37D)	0150	RF
R			ITEM 90, 25-12, FIG. 37F, ITEM 90, 25-12, FIG.		
R			38M, ITEM 70 AND 25-12, FIG. 30M, ITEM 70)		
R	65-54107-239		INSULATION INSTL, CARGO DOOR (SEE 25-12, FIG. 37S, ITEM 4)	5199	RF
R	27	65-54107-140	BLANKET ASSY.		1
R	28	65-54107-141	BLANKET ASSY.	0150	1
R	28	65-54107-241	BLANKET ASSY.	5199	1
R	29	65-54107-211	BLANKET ASSY.		1
R	29	65-54107-240	BLANKET ASSY.	5199	1
	30	65-54107-155	STRIP ASSY, CAP		1
	31	65-54107-154	STRIP ASSY, CAP		1
	32	65-54107-153	STRIP ASSY, CAP		1
	33	65-54107-152	STRIP ASSY, CAP		1
	34	65-54107-151	STRIP ASSY, CAP		1
	35	65-54107-150	STRIP ASSY, CAP		1
			ATTACHING PARTS		
		BACS21AG4B7	STUD.		AR
		BACS21AG4B9	STUD.		AR
		BACS21AG4F13	STUD.		AR
		BACC15AC3A	CLIP.		AR
		BACC15AC4	CLIP.		AR
		BACS21AG4E13	NUT		AR
	36	65-54107-143	BLANKET ASSY.		1
	37	65-54107-206	BLANKET ASSY.		1
	38	65-54107-207	BLANKET ASSY.		1
	39	65-54107-208	BLANKET ASSY.		1
	40	65-54107-209	BLANKET ASSY.		1
	41	65-54107-210	BLANKET ASSY.		1
	42	65-54107-149	BLANKET ASSY.		1
R	43	65-54107-195	PANEL ASSY.	0150	1
R	43	65-54107-235	PANEL ASSY.	5199	1
R	44	65-54107-197	BLANKET ASSY.	0150	1
R	44	65-54107-238	BLANKET ASSY.	5199	1
R	45	65-54107-196	BACKING, FIBER GLASS.	0150	1
R	45	65-54107-236	BACKING, FIBER GLASS.	5199	1
R	46	65-54107-198	BLANKET ASSY.	0150	1
R	46	65-54107-237	BLANKET ASSY.	5199	1
R	47	65-54107-186	PANEL ASSY.	0150	1
R	47	65-54107-232	PANEL ASSY.	5199	1
	48	65-54107-194	BLANKET ASSY.		1
	49	65-54107-193	BLANKET ASSY.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R 17A 50	65-54107-192	.	.	.	BLANKET	ASSY.	.	.	0150	1
	51 65-54107-191	.	.	.	BLANKET	ASSY.	.	.		1
	52 65-54107-190	.	.	.	BLANKET	ASSY.	.	.		1
R 53	65-54107-189	.	.	.	BLANKET	ASSY.	.	.	0150	1
R 54	65-54107-188	.	.	.	BLANKET	ASSY.	.	.	0150	1
R 54	65-54107-234	.	.	.	BLANKET	ASSY.	.	.	5199	1
R 55	65-54107-187	.	.	.	BACKING, FIBER GLASS.	.	.	.	0150	1
R 55	65-54107-233	.	.	.	BACKING, FIBER GLASS.	.	.	.	5199	1
R 56	65-54107-177	.	.	.	PANEL ASSY.	.	.	.	0150	1
R 56	65-54107-227	.	.	.	PANEL ASSY.	.	.	.	5199	1
R 57	65-54107-185	.	.	.	BLANKET ASSY.	.	.	.	0150	1
R 57	65-54107-231	.	.	.	BLANKET ASSY.	.	.	.	5199	1
	59 65-54107-183	.	.	.	BLANKET ASSY.	.	.	.		1
	60 65-54107-182	.	.	.	BLANKET ASSY.	.	.	.		1
	61 65-54107-181	.	.	.	BLANKET ASSY.	.	.	.		1
R 62	65-54107-180	.	.	.	BLANKET ASSY.	.	.	.	0150	1
R 62	65-54107-230	.	.	.	BLANKET ASSY.	.	.	.	5199	1
R 63	65-54107-178	.	.	.	BACKING, FIBER GLASS.	.	.	.	0150	1
R 63	65-54107-228	.	.	.	BACKING, FIBER GLASS.	.	.	.	5199	1
R 64	65-54107-179	.	.	.	BLANKET ASSY.	.	.	.	0150	1
R 64	65-54107-229	.	.	.	BLANKET ASSY.	.	.	.	5199	1
R 65	65-54107-169	.	.	.	PANEL ASSY.	.	.	.	0150	1
R 65	65-54107-221	.	.	.	PANEL ASSY.	.	.	.	5199	1
R 66	65-54107-172	.	.	.	BLANKET ASSY.	.	.	.	0150	1
R 66	65-54107-224	.	.	.	BLANKET ASSY.	.	.	.	5199	1
R 67	65-54107-173	.	.	.	BLANKET ASSY.	.	.	.	0150	1
R 67	65-54107-225	.	.	.	BLANKET ASSY.	.	.	.	5199	1
	68 65-54107-174	.	.	.	BLANKET ASSY.	.	.	.		1
R 70	65-54107-176	.	.	.	BLANKET ASSY.	.	.	.	0150	1
R 70	65-54107-226	.	.	.	BLANKET ASSY.	.	.	.	5199	1
R 71	65-54107-171	.	.	.	BLANKET ASSY.	.	.	.	0150	1
R 71	65-54107-223	.	.	.	BLANKET ASSY.	.	.	.	5199	1
R 72	65-54107-170	.	.	.	BACKING, FIBER GLASS.	.	.	.	0150	1
R 72	65-54107-222	.	.	.	BACKING, FIBER GLASS.	.	.	.	5199	1
R 73	65-54107-160	.	.	.	PANEL ASSY.	.	.	.	0150	1
R 73	65-54107-219	.	.	.	PANEL ASSY.	.	.	.	5199	1
R 74	65-54107-165	.	.	.	BLANKET ASSY.	.	.	.	0150	1
	75 65-54107-166	.	.	.	BLANKET ASSY.	.	.	.		1
	76 65-54107-168	.	.	.	BLANKET ASSY.	.	.	.		1
	77 65-54107-167	.	.	.	BLANKET ASSY.	.	.	.		1
	78 65-54107-164	.	.	.	BLANKET ASSY.	.	.	.		1
R 79	65-54107-163	.	.	.	BLANKET ASSY.	.	.	.	0150	1
R 80	65-54107-162	.	.	.	BLANKET ASSY.	.	.	.		1
R 81	65-54107-161	.	.	.	BACKING, FIBER GLASS.	.	.	.	0150	1
R 81	65-54107-220	.	.	.	BACKING, FIBER GLASS.	.	.	.	5199	1
R 82	65-54107-156	.	.	.	PANEL ASSY.	.	.	.	0150	1
R 82	65-54107-215	.	.	.	PANEL ASSY.	.	.	.	5199	1
R 83	65-54107-159	.	.	.	BLANKET ASSY.	.	.	.	0150	1
R 83	65-54107-218	.	.	.	BLANKET ASSY.	.	.	.	5199	1
R 84	65-54107-158	.	.	.	BLANKET ASSY.	.	.	.	0150	1
R 84	65-54107-217	.	.	.	BLANKET ASSY.	.	.	.	5199	1
R 85	65-54107-157	.	.	.	BACKING, FIBER GLASS.	.	.	.	0150	1
R 85	65-54107-216	.	.	.	BACKING, FIBER GLASS.	.	.	.	5199	1
	66-24419-1	.	.	.	RETAINER, INSULATION.	.	.	.		AR

MISSING ITEM NUMBERS ARE NOT APPLICABLE

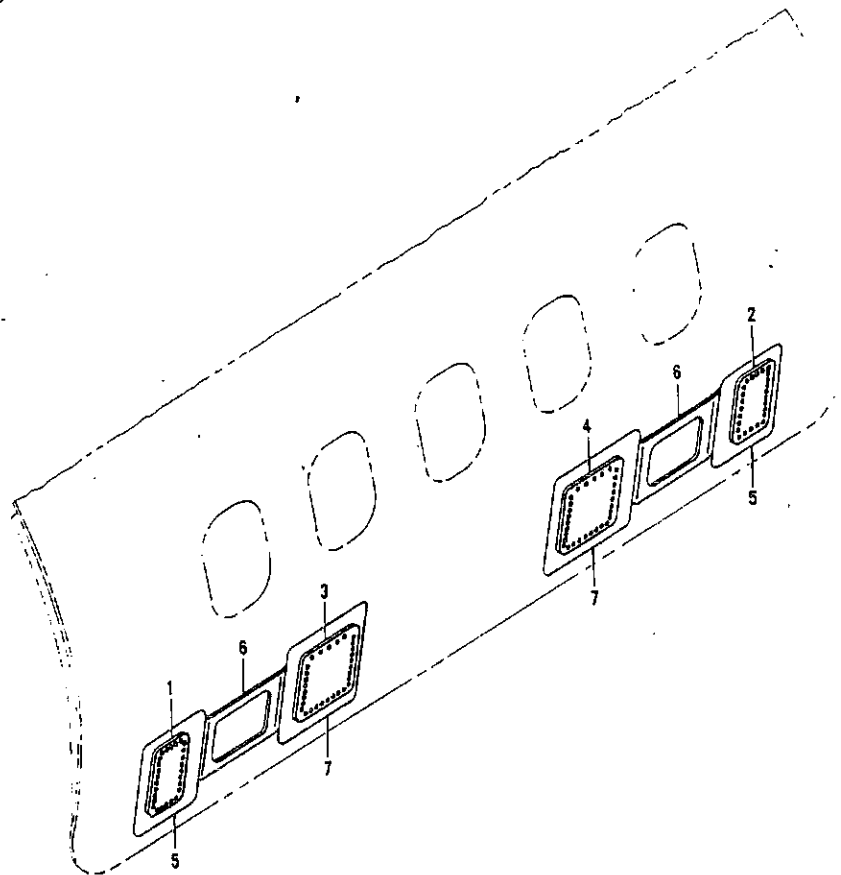
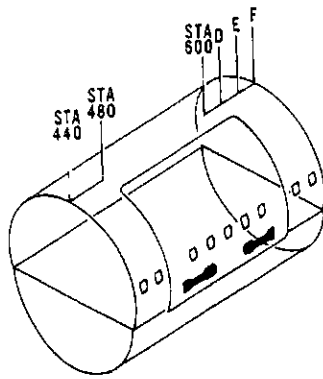


FIGURE 19. DOOR INSTL, MAIN CARGO LOWER ACCESS

BOEING *707* *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
19	65-25336-1	DOOR INSTL, MAIN CARGO DOOR LOWER ACCESS (SEE FIG. 16, ITEM 5)		RF
	65-25336-2	DOOR INSTL, MAIN CARGO DOOR LOWER ACCESS (SEE FIG. 16, ITEM 6)		RF
1	65-25336-503	. DOOR, MAIN CARGO DOOR LOWER FORWARD ACCESS (USED ON 65-25336-1)		1
2	65-25336-504	. DOOR, MAIN CARGO DOOR LOWER FORWARD ACCESS (USED ON 65-25336-2)		1
	NAS333CPA4	ATTACHING PARTS		6
	NAS333CPA5	. BOLT.		23
	BACB30ABP3A4	. BOLT.		1
		-----*		
3	65-25336-505	. DOOR, MAIN CARGO DOOR LOWER AFT ACCESS (USED ON 65-25336-1)		1
4	65-25336-506	. DOOR, MAIN CARGO DOOR LOWER AFT ACCESS (USED ON 65-25336-2)		1
	NAS333CPA4	ATTACHING PARTS		10
	NAS333CPA5	. BOLT.		33
	BACB30ABP3A4	. BOLT.		1
		-----*		
5	65-25336-5	. SEAL, MAIN CARGO DOOR LOWER ACCESS DOOR FORWARD . . . PRESSURE		1
		ATTACHING PARTS		
5	MS20426D3	. RIVET		14
		-----*		
6	65-25336-12	. SEAL, MAIN CARGO DOOR LOWER ACCESS DOOR PRESSURE. . .		1
	8ACR15CE5D	ATTACHING PARTS		
		. RIVET		50
		-----*		
7	65-25336-17	. SEAL, MAIN CARGO DOOR LOWER ACCESS DOOR AFT PRESSURE		1
	MS20426D3	ATTACHING PARTS		
		. RIVET		20
		-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

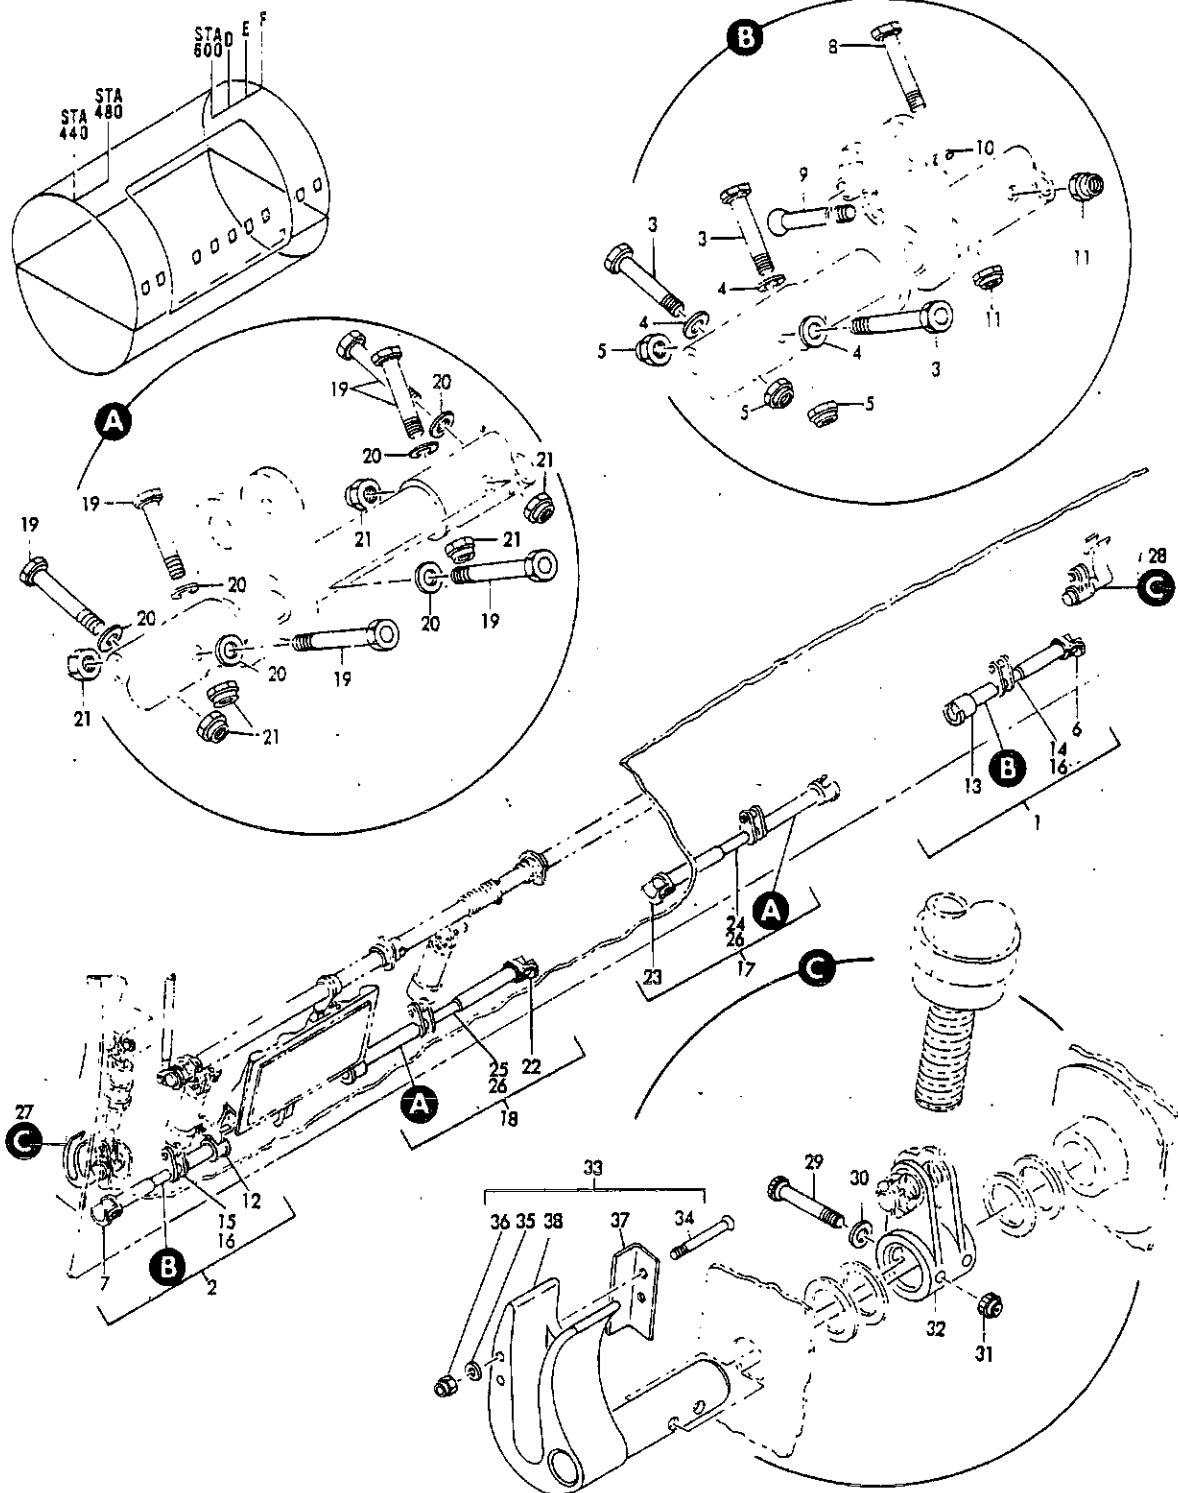


FIGURE 20A. SPARES ASSY, MAIN CARGO DOOR LATCH CAM
SPARES ASSY, MAIN CARGO DOOR LATCH HOOK

DETAILED PARTS LIST
52-03-20A
PAGE 3

52-03-20A

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
20A			SPARES ASSY, MAIN CARGO DOOR LATCH CAM.		
1	65-25339-5		SPARES ASSY, MAIN CARGO DOOR LATCH HOOK		RF
2	65-25339-8		SPARES ASSY, MAIN CARGO DOOR LATCH CAM.		RF
3	NAS1104-20W		SPARES ASSY, MAIN CARGO DOOR LATCH CAM.		3
4	BACW10P208S		BOLT.		3
5	NAS679A4W		WASHER.		3
6	69-23438-1		NUT		1
			CAM, CARGO DOOR LATCH MECHANISM (ALTERED FROM		
			9-65154-3) (USED ON 65-25339-5)		
7	69-23438-2		CAM, CARGO DOOR LATCH MECHANISM (ALTERED FROM		1
			9-65154-4) (USED ON 65-25339-8)		
8	NAS1105-20W		BOLT.		1
9	BACB30EL5CN19		BOLT.		1
10	AN960C616L		WASHER.		1
11	NAS679A5		NUT		2
12	69-21971-3		CAM, CARGO DOOR LATCH MECHANISM (USED ON.		1
			65-25339-8)		
13	69-21971-4		CAM, CARGO DOOR LATCH MECHANISM (USED ON.		1
			65-25339-5)		
14	69-21969-3		BELLCRANK ASSY, CARGO DOOR LATCH MECHANISM (USED ON		1
			65-25339-5)		
			(OPTIONAL 69-21969-502)		
14	69-21969-502		BELLCRANK ASSY, MECHANISM (USED ON 65-25339-5).		1
			(OPTIONAL TO 69-21969-3)		
15	69-21969-4		BELLCRANK ASSY, CARGO DOOR LATCH MECHANISM (USED ON		1
			65-25339-8)		
			(OPTIONAL 69-21969-502)		
15	69-21969-502		BELLCRANK ASSY, MECHANISM (USED ON 65-25339-8).		1
			(OPTIONAL TO 69-21969-4)		
16	69-21969-8		BELLCRANK ASSY, CARGO DOOR LATCH MECHANISM.		1
			(OPTIONALS 69-21969-3, -4, -502)		
16	69-21969-3		BELLCRANK ASSY, MECHANISM		1
			(OPTIONAL TO 69-21969-8)		
16	69-21969-4		BELLCRANK ASSY, MECHANISM		1
			(OPTIONAL TO 69-21969-8)		
16	69-21969-502		BELLCRANK ASSY, MECHANISM		1
			(OPTIONAL TO 69-21969-8)		
17	65-25339-6		SPARES ASSY, MAIN CARGO DOOR LATCH CAM.		RF
18	65-25339-7		SPARES ASSY, MAIN CARGO DOOR LATCH CAM.		RF
19	NAS1104-20W		BOLT.		6
20	BACW10P208S		WASHER.		6
21	NAS679A4W		NUT		6
22	69-23439-3		CAM, CARGO DOOR LATCH MECHANISM (ALTERED FROM		1
			9-65168-5) (USED ON 65-25339-7)		
23	69-23439-4		CAM, CARGO DOOR LATCH MECHANISM (ALTERED FROM		1
			9-65168-6) (USED ON 65-25339-6)		
24	69-21969-1		BELLCRANK ASSY, CARGO DOOR LATCH MECHANISM (USED ON		1
			65-25339-6)		
24	69-21969-501		BELLCRANK ASSY, MECHANISM (USED ON 65-25339-6).		1
			(OPTIONAL TO 69-21969-1)		
25	69-21969-2		BELLCRANK ASSY, CARGO DOOR LATCH MECHANISM (USED ON		1
			65-25339-7)		
			(OPTIONAL 69-21969-501)		
25	69-21969-501		BELLCRANK ASSY, MECHANISM (USED ON 65-25339-7).		1
			(OPTIONAL TO 69-21969-2)		
26	69-21969-7		BELLCRANK ASSY, CARGO DOOR LATCH MECHANISM.		1
			(OPTIONALS 69-21969-1, -2, -501)		
26	69-21969-1		BELLCRANK ASSY, MECHANISM		1
			(OPTIONAL TO 69-21969-7)		
26	69-21969-2		BELLCRANK ASSY, MECHANISM		1
			(OPTIONAL TO 69-21969-7)		
26	69-21969-501		BELLCRANK ASSY, MECHANISM		1
			(OPTIONAL TO 69-21969-7)		
27	65-25339-9		SPARES ASSY, MAIN CARGO DOOR LATCH HOOK		RF
			(OPTIONAL TO 65-25339-11)		
27	65-25339-11		SPARES ASSY, MAIN CARGO DOOR LATCH HOOK		RF
			(OPTIONAL 65-25339-9)		
28	65-25339-10		SPARES ASSY, MAIN CARGO DOOR LATCH HOOK		RF
			(OPTIONAL TO 65-25339-12)		
28	65-25339-12		SPARES ASSY, MAIN CARGO DOOR LATCH HOOK		RF
			(OPTIONAL 65-25339-10)		
29	BACB30EK5A26		BOLT.		2
30	AN960C616L		WASHER.		2
31	BACN10MD5		NUT		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
20A 32	69-21498-1	.	.	BELLCRANK, CARGO DOOR HOOK.	.	.	.	.		1
33	69-22464-7	.	.	HOOK ASSY, (USED ON 65-25339-11).	.	.	.	.		1
33	69-22464-5	.	.	HOOK ASSY, (USED ON 65-25339-9).	.	.	.	.		1
33	69-22464-8	.	.	HOOK ASSY, (USED ON 65-25339-12).	.	.	.	.		1
33	69-22464-6	.	.	HOOK ASSY, (USED ON 65-25339-10).	.	.	.	.		1
34	BAC830LU3-24	.	.	BOLT.	.	.	.	.		1
35	AN960-10L	.	.	WASHER.	.	.	.	.		1
36	NAS679A3W	.	.	NUT.	.	.	.	.		1
37	66-16509-2	.	.	PLATE, STOP STRIKER.	.	.	.	.		1
38	65-42514-6	.	.	HOOK, (USED ON 69-22464-6).	.	.	.	.		1
38	65-42514-5	.	.	HOOK, (USED ON 69-22464-5).	.	.	.	.		1
38	65-74787-1	.	.	HOOK, (USED ON 69-22464-7).	.	.	.	.		1
38	65-74787-2	.	.	HOOK, (USED ON 69-22464-8).	.	.	.	.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

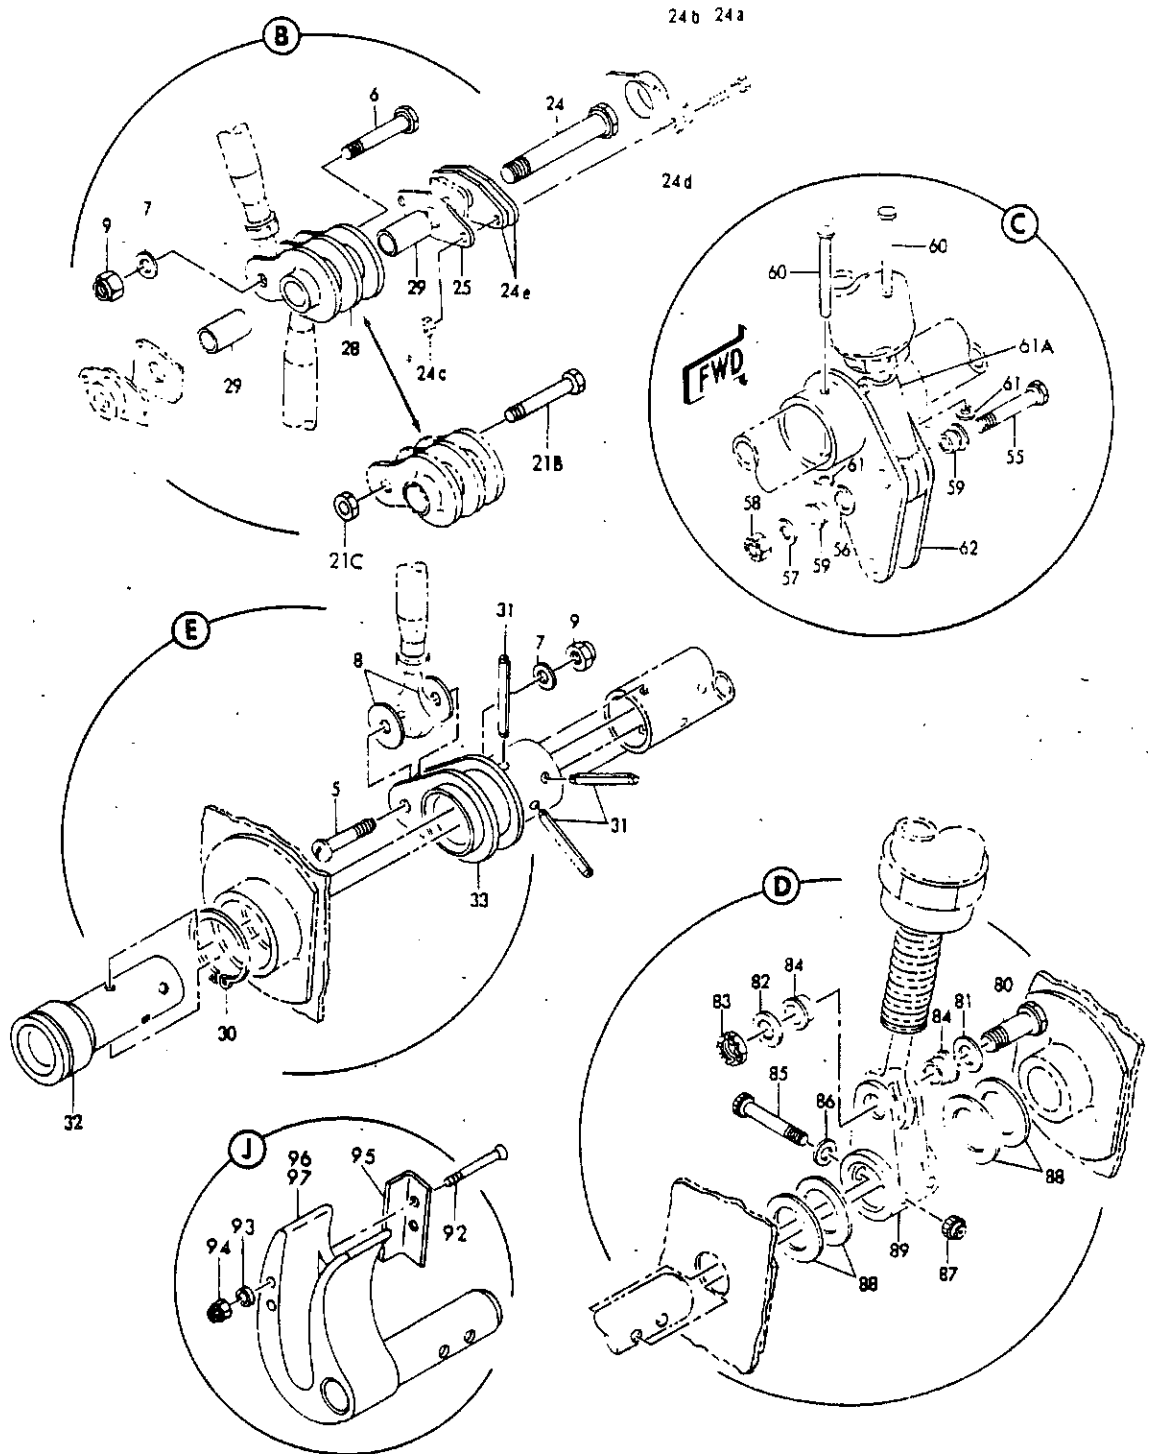


FIGURE 208 MECHANISM INSTL, MAIN CARGO DOOR LATCH DOORS (P.L.V.) (SHEET 2)

NOV 21/90

52-03-208

DETAILED PARTS LIST
52-03-208
PAGE 1

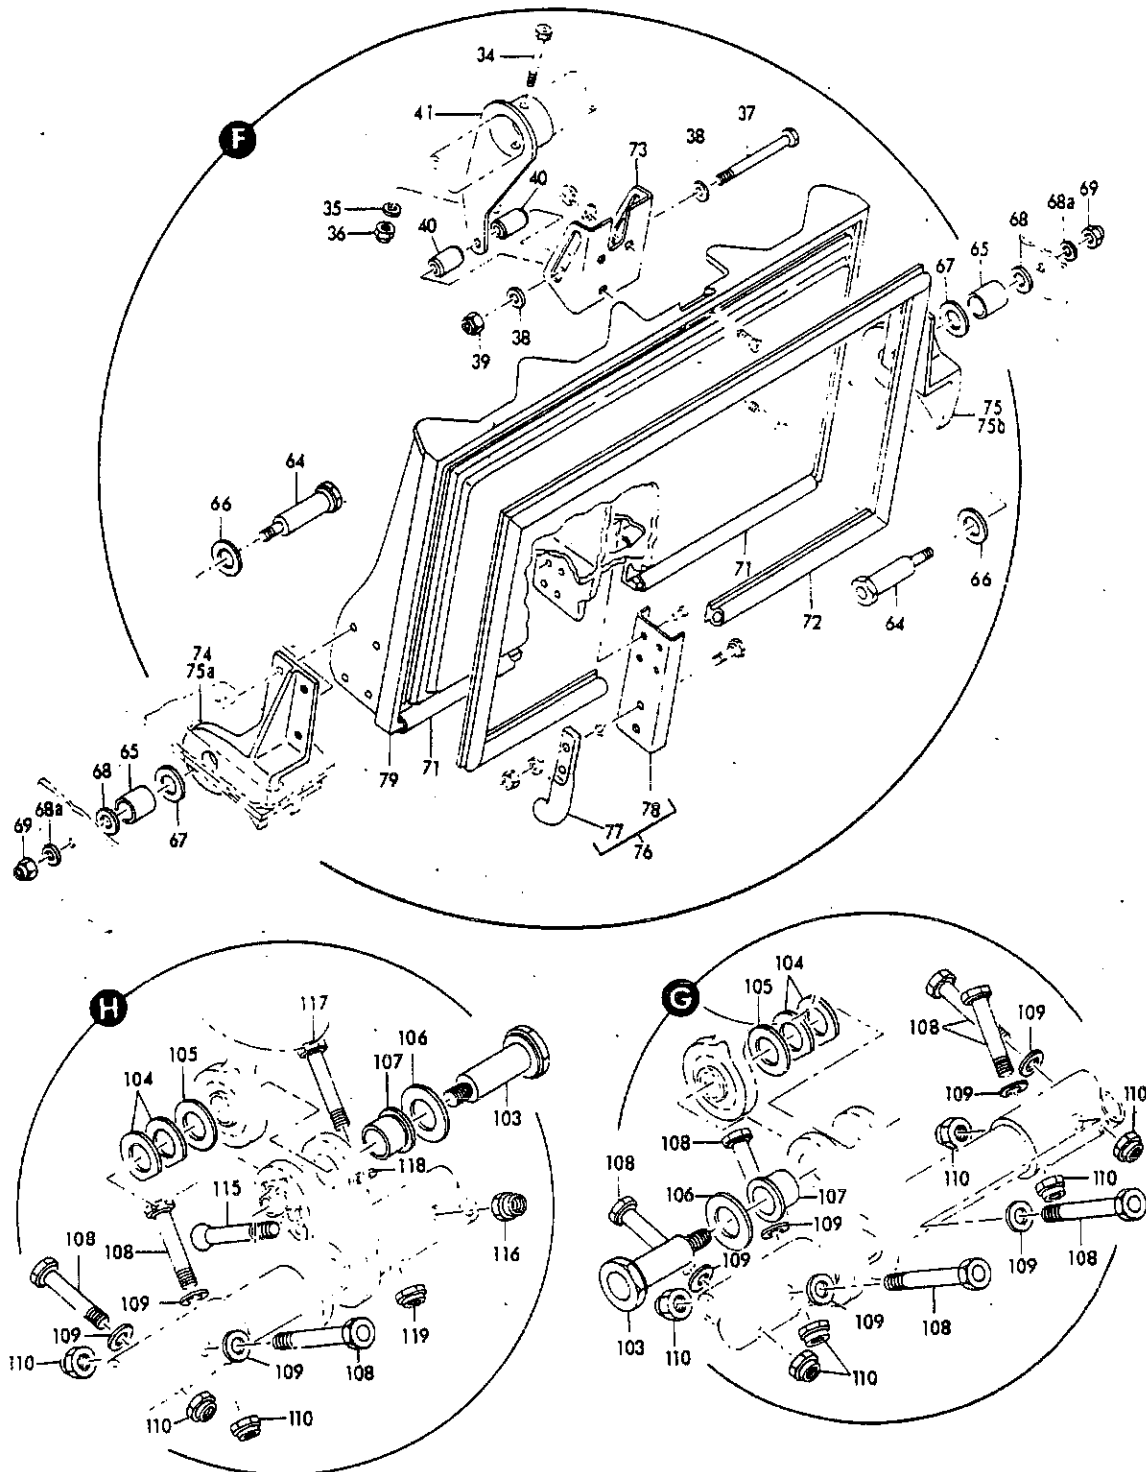


FIGURE 20B. MECHANISM INSTL. MAIN CARGO DOOR LATCH (DOORS ONLY) (SHEET 3)

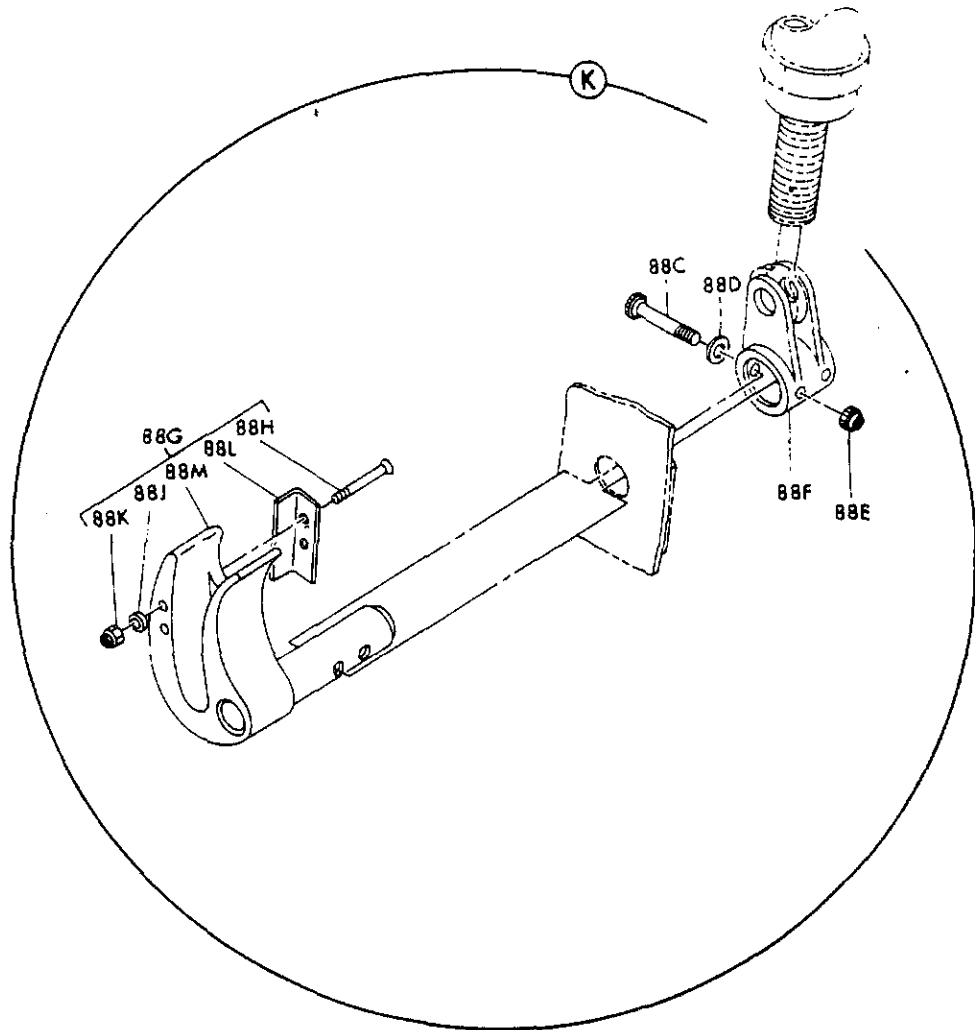


FIGURE 208. MECHANISM INSTL, MAIN CARGO DOOR LATCH (DOORS ONLY) (SHEET 4)

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
208	65-25339-501	MECHANISM INSTL, MAIN CARGO DOOR LATCH (SEE FIG. 16, . . . ITEM 12)	0102	RF
	65-25339-13	MECHANISM INSTL, MAIN CARGO DOOR LATCH (SEE FIG. 16, . . . ITEM 12)	0399	RF
1	BACB30ABP5-15	. BOLT, (DELETED BY SB 2628).	0102	2
2	AN960C516	. WASHER, (DELETED BY SB 2628).	0102	AR
3	AN320C5	. NUT, (DELETED BY SB 2628).	0102	2
4	69-21439-1	. PIN, DRIFT (DELETED BY SB 2628).	0102	2
5	AN24-18A	. BOLT, (DELETED BY SB 2628).	0102	4
6	AN24-25A	. BOLT, (DELETED BY SB 2628).	0102	2
7	AN960C416	. WASHER, (DELETED BY SB 2628).	0102	6
8	30-3611	. WASHER, (DELETED BY SB 2628).	0102	8
9	NAS679A4W	. NUT, (DELETED BY SB 2628).	0102	6
10	69-22948-1	. ROD ASSY, PUSH (DELETED BY SB 2628)	0102	4
		. DOORS, (SEE FIG. 21).	0102	
		. REQUIRED PLACARDS, (SEE 11-2, FIG. 58).	0102	
11	NAS670-100	. RING, (DELETED BY SB 2628).	0102	2
12	NAS1103-1B	. BOLT, (DELETED BY SB 2628).	0102	12
12A	AN960-10	. WASHER, (DELETED BY SB 2628).	0102	12
12B	NAS679A3W	. NUT, (DELETED BY SB 2628).	0102	12
12C	BACS40R23U33	. SHIM, (DELETED BY SB 2628).	0102	AR
13	66-16554-1	. SHAFT END, DRIFT PIN (DELETED BY SB 2628)	0102	2
14	69-36725-1	. BELLCRANK ASSY, STOP (DELETED BY SB 2628)	0102	2
15	69-36726-6	. MECHANISM ASSY, DRIFT PIN ACTUATOR STOP (DELETED BY SB 2628)	0102	1
16	69-36726-5	. MECHANISM ASSY, DRIFT PIN ACTUATOR STOP (DELETED BY SB 2628)	0102	1
17	NAS334CP20-5	. BOLT.	0102	2
18	BACN10B-L4L	. NUT.	0102	2
19	66-17141-2	. PLATE, STRIKER.	0102	1
20	69-36726-7	. SHIM, LAMINATED (ALTERED FROM BACS40B13-24)	0102	1
21	66-16558-3	. BLOCK.	0102	1
21A	69-36726-3	. SHAFT, TUBE.	0102	1
21B	BACB30FN6-4	. BOLT, (ADDED BY SB 2628).	0102	2
21C	BACC30M6	. COLLAR, (ADDED BY SB 2628).	0102	2
22	69-36727-1	. SUPPORT ASSY, PUSH ROD (DELETED BY SB 2628)	0102	1
23	69-36727-2	. SUPPORT ASSY, PUSH ROD (DELETED BY SB 2628)	0102	1
		ATTACHING PARTS		
	BACB30FN6-5	. BOLT.	0102	2
	BACC30M6	. COLLAR.	0102	2
		-----*		
24	NAS1106-36	. BOLT.	0102	1
24A	NAS514P440-10	. SCREW.	0102	2
24B	AN960-4L	. WASHER.	0102	2
24C	NAS679A04W	. NUT.	0102	2
24D	BACR10G63	. RETAINER.	0102	1
24E	NAS463X DD616	. SHIM.	0102	2
25	NAS463XC616	. SPACER.	0102	1
28	69-36731-1	. BELLCRANK ASSY, DRIFT PIN MECHANISM.	0102	1
29	BACB10D172	. BEARING.	0102	2
30	NAS670-137	. RING.		2
31	MS39086-257	. PIN.		6
32	69-36732-1	. SHAFT END, TORQUE TUBE.		2
33	69-36730-1	. BELLCRANK ASSY, TORQUE TUBE (DELETED BY SB 2628).	0102	2
34	NAS1103-23W	. BOLT.		2
35	AN960C10	. WASHER.		2
36	NAS679A3W	. NUT.		2
37	NAS1103-38W	. BOLT.		2
38	AN960C10	. WASHER.		4
39	NAS679A3W	. NUT.		2
40	65-25339-2	. BUSHING, LATCH (ALTERED FROM NAS75-3-104)		4
41	69-20835-1	. BELLCRANK ASSY, PRESSURE DOOR.		2
42	NAS561CF5-24	. PIN.		4
43	66-16555-2	. SLEEVE, TORQUE TUBE SUPPORT FILLER.		4
44	AN3-22A	. BOLT.		1
45	NAS43DD3-107	. SPACER.		1
46	NAS43DD5-32	. SPACER.		1
47	AN960D10	. WASHER.		3
48	NAS679A3W	. NUT.		1
49	69-27788-2	. SPRING, ACTUATOR RETURN TORSION.		1
49A	69-61405-1	. SLEEVE.	5199	1
50	NAS1104-11DW	. BOLT.		1
51	AN960C416L	. WASHER.		1
52	AN960C516	. WASHER.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *707* Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
208 53	AN310C4	.	NUT		1
54	NAS77-4-8	.	BUSHING		2
55	NAS1104-15DW	.	BOLT		1
56	AN960C516L	.	WASHER		1
57	AN960C416	.	WASHER		1
58	AN310C4	.	NUT		1
59	NAS77-4-18	.	BUSHING		2
60	MS2032-2-49	.	PIN		2
61	AN960-10L	.	WASHER		2
62	69-27820-1	.	BELLCRANK ASSY, CARGO DOOR. (OPTIONAL 69-20819-1)		1
62	69-20819-1	.	BELLCRANK ASSY, CARGO DOOR. (OPTIONAL TO 69-27820-1)		1
63	65-25339-502	.	TUBE, TORQUE		1
64	66-17945-1	.	BOLT, LATCH MECHANISM		4
65	NAS43HT8-58	.	SPACER		4
66	BACW10AWC8S	.	WASHER		4
67	AN960C816L	.	WASHER		4
68	AN960C616	.	WASHER		4
68A	AN960C416	.	WASHER		4
69	NAS679A4W	.	NUT		4
70	65-26121-5	.	VALVE ASSY, PRESSURE		2
71	66-21505-1	.	RETAINER, VALVE SEAL. ATTACHING PARTS		2
	NAS623-3-3W	.	SCREW		8
	AN960PD10L	.	WASHER		8
	NAS679A3W	.	NUT		8
72	9-65455-1	.	SEAL, VALVE		1
73	69-23639-1	.	BRACKET, SIDE ATTACHING PARTS		1
	NAS517-3-3	.	SCREW		2
	NAS517-3-15	.	SCREW		1
	AN960PD10L	.	WASHER		3
	NAS679A3W	.	NUT		3
74	65-26120-3	.	HINGE, VALVE		1
75	65-26120-4	.	HINGE, VALVE. ATTACHING PARTS		1
	MS20470B8	.	RIVET		8
75A	65-26120-5	.	STOP		1
75B	65-26120-6	.	STOP		1
76	69-21960-1	.	ARM ASSY, SWITCH ACTUATOR ATTACHING PARTS		1
	MS20470B5	.	RIVET		4
77	66-16920-1	.	ARM, ACTUATOR ATTACHING PARTS		1
	NAS1103-5	.	BOLT		2
	MS35337-43	.	WASHER		2
	AN960-10L	.	WASHER		2
	NAS679A3W	.	NUT		2
78	66-16919-1	.	SUPPORT, ARM		1
79	65-26121-4	.	VALVE, PRESSURE (ALTERED FROM 5-96157-1).		1
80	NAS1108-17DW	.	BOLT		4
81	MS20002C8	.	WASHER		4
82	AN960C816	.	WASHER		4
83	AN320C8	.	NUT		4
84	NAS77-8-21	.	BUSHING	0399	8
84	NAS77-8-18	.	BUSHING	0102	8
85	BACB30EK5A26	.	BOLT		4
86	AN960C616L	.	WASHER		4
87	BACN10MD5	.	NUT		4
88	BACW10P101S	.	WASHER		AR
89	69-21498-1	.	BELLCRANK, HOOK		2
90	69-22464-5	.	HOOK ASSY (OPTIONAL 69-22464-7)		1
90	69-22464-7	.	HOOK ASSY (OPTIONAL TO 69-22464-5)		1
91	69-22464-6	.	HOOK ASSY (OPTIONAL 69-22464-8)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R R	20B 91	69-22464-8	.	.	.	.	.	.	.	1
			.	.	.	.	.	.	.	
	92	BACB30LU3-24	.	.	.	.	.	.	.	2
	93	AN960-10L	.	.	.	.	.	.	.	2
	94	BACN10JC3	.	.	.	.	.	.	.	2
	95	66-16509-2	.	.	.	.	.	.	.	1
	96	65-42514-5	.	.	.	.	.	.	.	1
	96	65-74787-1	.	.	.	.	.	.	.	1
	97	65-42514-6	.	.	.	.	.	.	.	1
	97	65-74787-2	.	.	.	.	.	.	.	1
	98	69-34974-4	.	.	.	.	.	.	5199	2
	99	69-34974-3	.	.	.	.	.	.	5199	2
			.	.	.	.	.	.		
		NAS602-7	.	.	.	.	.	.		2
		AN960PDBL	.	.	.	.	.	.		4
		NAS679A08W	.	.	.	.	.	.		2
			.	.	.	.	.	.		
	100	66-17789-2	.	.	.	.	.	.		4
	101	AN960C1016L	.	.	.	.	.	.		4
	102	NAS77-9-25	.	.	.	.	.	.		4
	103	66-17789-1	.	.	.	.	.	.		4
	104	66-17956-1	.	.	.	.	.	.		8
	105	AN960C916L	.	.	.	.	.	.		4
	106	AN960C1016L	.	.	.	.	.	.		4
	107	NAS77-9-47	.	.	.	.	.	.		4
	108	NAS1104-20W	.	.	.	.	.	.		18
	109	BACW10P208S	.	.	.	.	.	.		18
	110	NAS679A4W	.	.	.	.	.	.		18
	111	69-23438-2	.	.	.	.	.	.		1
	112	69-23438-1	.	.	.	.	.	.		1
	113	69-23439-4	.	.	.	.	.	.		2
	114	69-23439-3	.	.	.	.	.	.		2
	115	BACB30EL5CN19	.	.	.	.	.	.		2
	116	NAS679A5	.	.	.	.	.	.		2
	117	NAS1105-20W	.	.	.	.	.	.		2
	118	AN960C616L	.	.	.	.	.	.		2
	119	NAS679A5	.	.	.	.	.	.		2
	120	69-21971-3	.	.	.	.	.	.		1
	121	69-21971-4	.	.	.	.	.	.		1
	122	69-21969-8	.	.	.	.	.	.		2
	123	69-21969-7	.	.	.	.	.	.		2
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

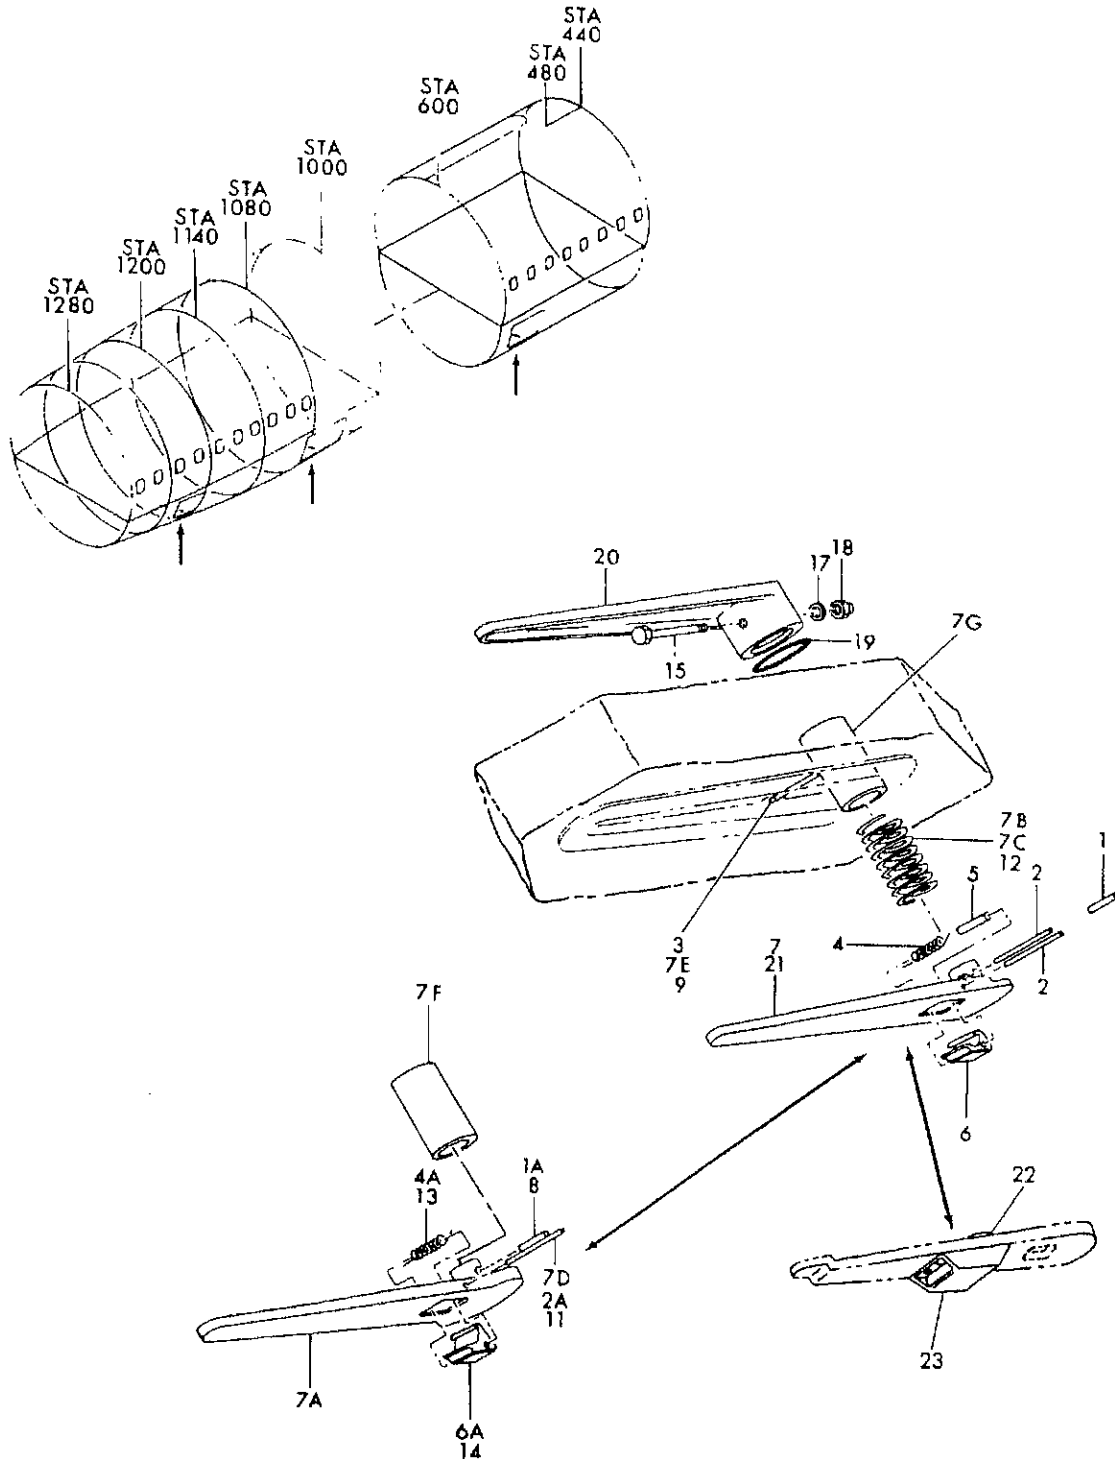


FIGURE 20C. LOCK ASSY, CARGO DOOR FLUSH

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R R R R R R R R R R R R R R R R R R R R R R R	20C	H64-9	LOCK ASSY, CARGO DOOR FLUSH (V83014) (SAME AS BAC SPEC NO. 10-60006-4) (SEE FIG. 2, ITEM 47 AND FIG. 11, ITEM 39)	5199 RF
		H64-9	LOCK ASSY, CARGO DOOR FLUSH (V83014) (SAME AS BAC SPEC NO. 10-60006-4) (DELETED BY RAF MOD 7211.019-157) (SEE FIG. 2, ITEM 47 AND FIG. 11, ITEM 39)	0150 RF
		Q833992-1	LOCK ASSY, CARGO DOOR FLUSH (VZ0268) (ALTERED FROM. . . H64-9 (V83014)) (ADDED BY RAF MOD 7211.019-157) (SEE FIG. 2, ITEM 47 AND FIG. 11, ITEM 39)	0150 RF
		H145-3	LOCK ASSY, CARGO DOOR FLUSH (V83014) (SAME AS BAC SPEC NO. 10-60006-5) (SEE FIG. 7, ITEM 84)	RF
		H64-11	. HANDLE ASSY, (V83014) (USED ON H64-9)	RF
		H145-100	. HANDLE ASSY, (V83014) (USED ON H145-3)	RF
	M 1	101366-1	. . PIN, (V83014) (USED ON H64-11 AND 1-85896-1)	1
	M 1A	52-048-250-1750	. . PIN, (V83014) (USED ON H145-100 AND 1-85897-1)	1
	M 2	HSP115P094-1550	. . PIN, (V83014) (USED ON H64-11 AND -3)	2
	M 2A	52-022-094-1625	. . PIN, (V83014) (USED ON H145-100 AND 1-85897-1)	1
	M 3	HSP115A093-1250	. . PIN, (V83014) (USED ON H145-100)	1
	M 4	H29-12A	. . SPRING, (V83014) (USED ON H64-11, -3 AND 1-85896-1)	1
	M 4A	100958-1	. . SPRING, (V83014) (USED ON H145-100 AND 1-85897-1)	1
	M 5	HSP800A12	. . SPACER, (V83014) (USED ON H64-11, -3 AND 1-85896-1)	1
	M 6	101264-1	. . TRIGGER, (V83014) (USED ON H64-11, -3 AND 1-85896-1)	1
	M 6A	101263-1	. . TRIGGER, (V83014) (USED ON H145-100 AND 1-85897-1)	1
	M 7	100791-1	. . HANDLE, (V83014) (USED ON H64-11, -3 AND 1-85896-1)	1
	M 7A	101616-1	. . HANDLE, (V83014) (USED ON H145-100 AND 1-85897-1)	1
	M 9	HSP115P094-1850	. PIN, (V83014) (USED ON H64-9 AND -5)	1
	M 12	100964-5	. SPRING, (V83014) (USED ON H64-9)	1
	M 12	100964-3	. SPRING, (V83014) (USED ON H145-3)	1
	M 15	NAS464P3-28A	. BOLT, (USED ON H64-9 AND H145-3)	1
	M 17	AN960D10	. WASHER	1
	M 18	AN364-1032	. NUT	1
	M 19	MS29513-127	. PACKING, (USED ON H64-9 AND H145-3)	1
	M 20	100992-1	. HANDLE, (V83014)	1
R R R R	22	Q833992-2	. LOCK, (VZ0268) (ADDED BY RAF MOD 7211.019-157) (USED ON Q833992-1)	0150 1
	23	QC33993	. SHROUD ASSY, LOCK (WELDED) (VZ0268) (ADDED. BY RAF MOD 7211.019-157) (USED ON Q833992-1)	0150 1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				


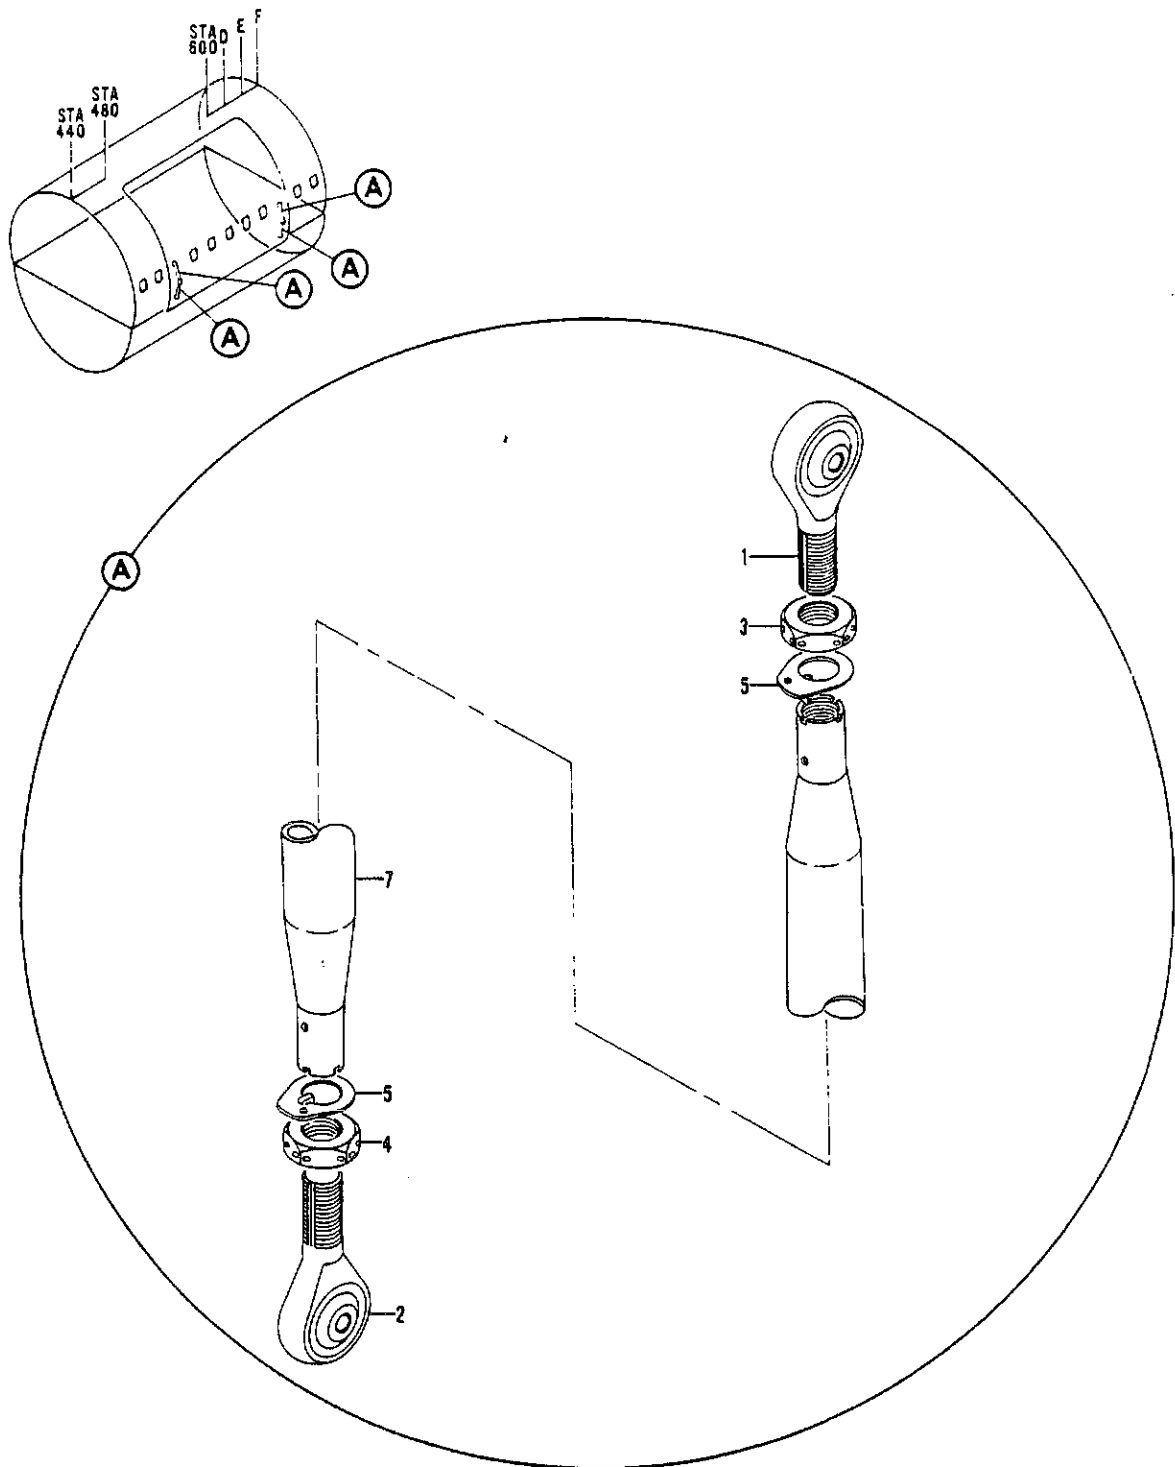


FIGURE 21. ROD ASSY, CARGO DOOR MECHANISM PUSH (DOORS ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
21	69-22948-1	ROD ASSY, CARGO DOOR MECHANISM PUSH (DOORS ONLY). . . .							0102	RF
		(DELETED BY SB 2628) (SEE FIG. 20, ITEM 10)								
1	66-16557-2	. ROD END, CARGO DOOR LH THREAD PUSH (ALTERED FROM. . .							0102	1
		BACB10A197M2 OR BACB10A197M2L)								
2	66-16557-1	. ROD END, CARGO DOOR RH THREAD PUSH (ALTERED FROM. . .							0102	1
		BACB10A187M2 OR BACB10A187M2L)								
3	NAS509L5	. NUT							0102	1
4	NAS509-5	. NUT							0102	1
5	NAS513-5	. WASHER.							0102	2
7	69-22948-2	. ROD, CARGO DOOR MECHANISM PUSH.							0102	1
		. FOR REFERENCE TO OTHER ROD DETAILS, SEE NHA							0102	
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

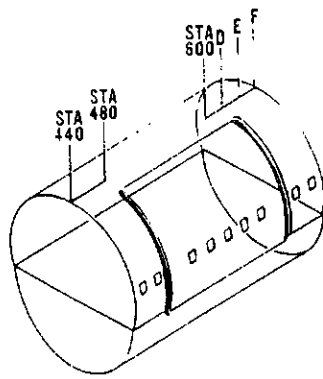

STA
600+17.25

STA
482.75

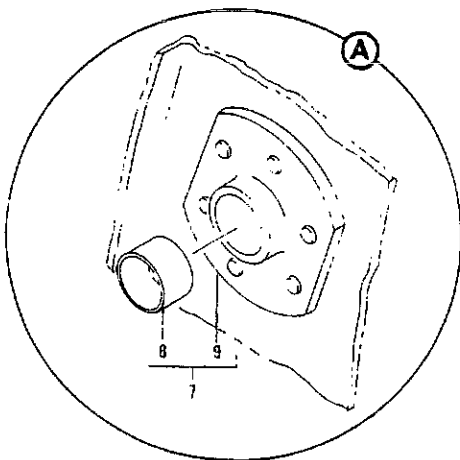
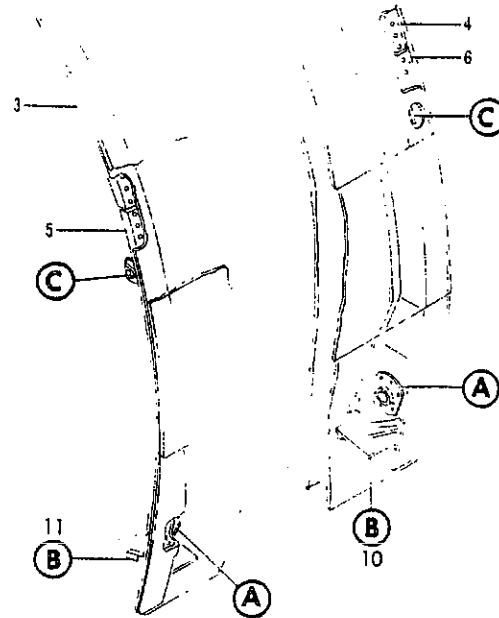


FIGURE 22. FRAME INSTL, STATION 482.75 AND 600 + 17.25 MAIN CARGO DOOR (SHEET 1)

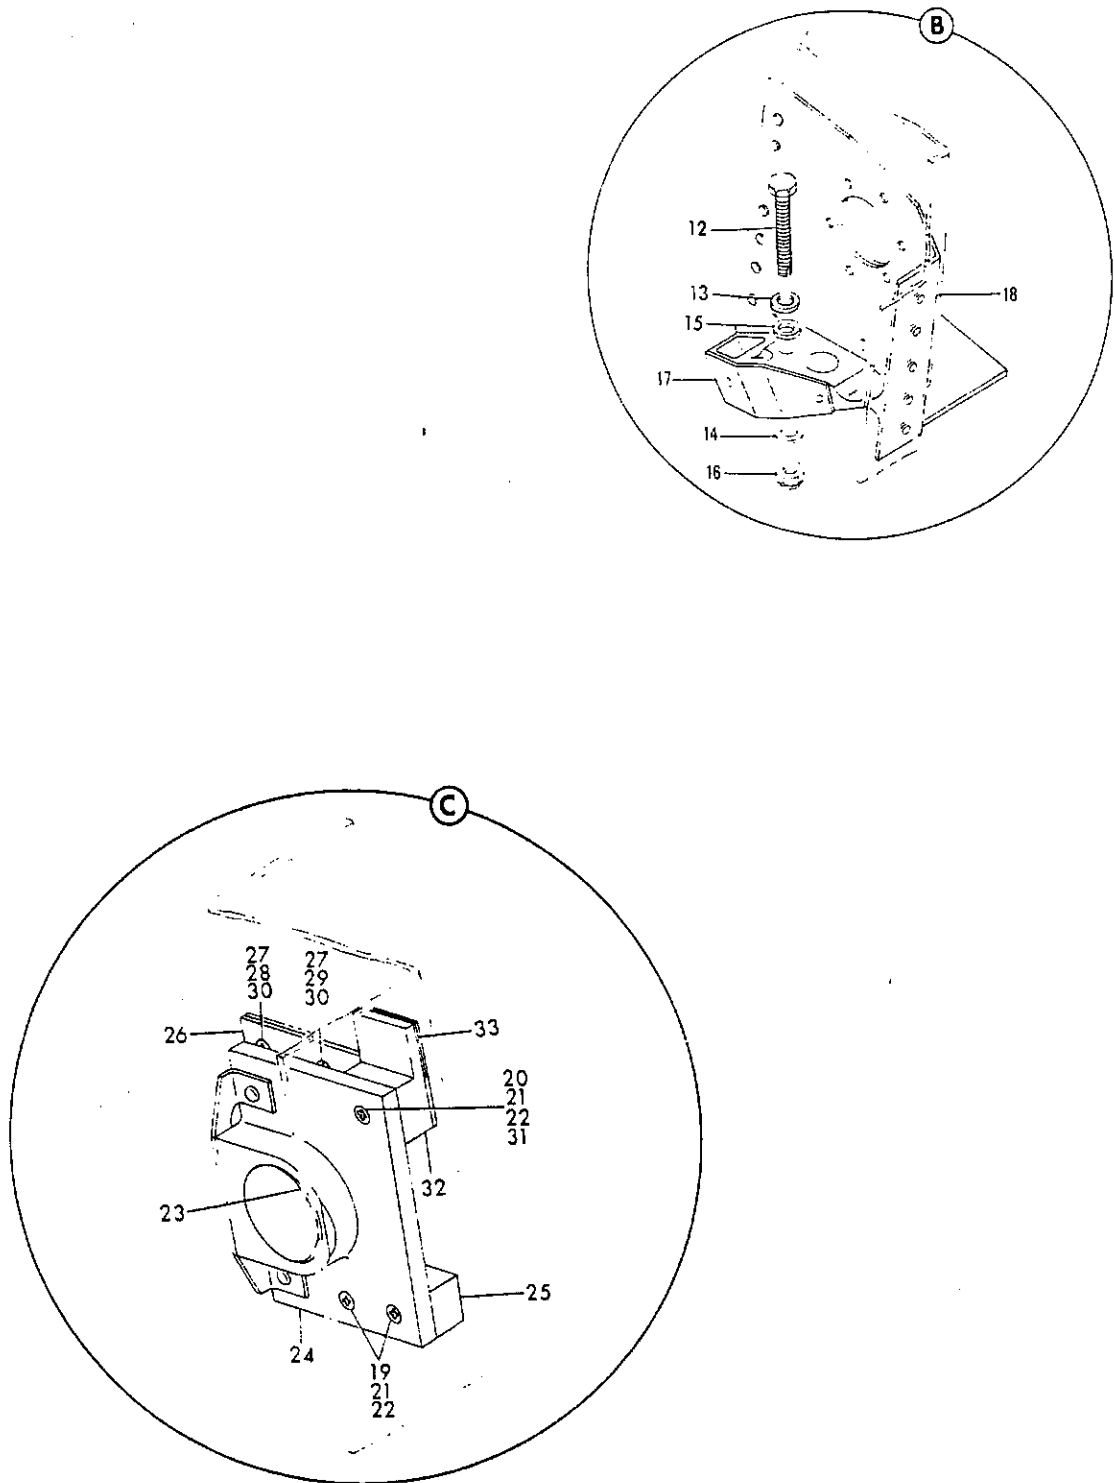


FIGURE 22 FRAME INSTL, STATION 482, 75 AND 600 + 17, 25 MAIN CARGO DOOR (SHEET 2)

 BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
22	65-25335-511	FRAME INSTL, STATION 482.75 MAIN CARGO DOOR (SEE FIG. 16, ITEM 25)		RF
	65-25335-512	FRAME INSTL, STATION 600 PLUS 17.25 MAIN CARGO DOOR . . (SEE FIG. 16, ITEM 26)		RF
3	65-25335-7	. RETAINER, STATION 482.75 MAIN CARGO DOOR UPPER SEAL . (USED ON 65-25335-1 AND -511)		1
4	65-25335-8	. RETAINER, STATION 600 PLUS 17.25 MAIN CARGO DOOR. . . UPPER SEAL (USED ON 65-25335-2 AND -512)		1
	BACR15CE5	ATTACHING PARTS		33
	BACR15CE6	. RIVET		2
		. RIVET		
5	65-25335-9	. RETAINER, STATION 482.75 MAIN CARGO DOOR LOWER SEAL . (USED ON 65-25335-1 AND -511)		1
6	65-25335-10	. RETAINER, STATION 600 PLUS 17.25 MAIN CARGO DOOR. . . LOWER SEAL (USED ON 65-25335-2 AND -512)		1
	BACR15CE5	ATTACHING PARTS		25
	BACR15CE6	. RIVET		14
		. RIVET		
7	69-21148-1	. SUPPORT ASSY, CARGO DOOR HOOK BEARING		1
	BACB30GW8-9	ATTACHING PARTS		6
	BACC30K8	. BOLT.		6
		. COLLAR.		
8	10-60516-111	. . BUSHING, TEFLON		1
9	69-21148-2	. . HOUSING, CARGO DOOR HOOK BEARING SUPPORT BEARING. .		1
10	69-23175-3	. CAM ASSY, CARGO DOOR CENTERING (USED ON 65-25335-2. . AND -512)	0150	1
10	69-23175-5	. CAM ASSY, CENTERING (USED ON 65-25335-512).	5199	1
11	69-23175-4	. CAM ASSY, CARGO DOOR CENTERING (USED ON 65-25335-1. . AND -511)	0150	1
11	69-23175-6	. CAM ASSY, CENTERING (USED ON 65-25335-511).	5199	1
	BACB30N8-5	ATTACHING PARTS		3
	BACB30P8-5	. BOLT.		5
	BACC30K8	. BOLT.		15
		. COLLAR.		
12	NAS428-6-22	. . BOLT.		1
13	MS20002C6	. . WASHER.		1
14	AN960C616L	. . WASHER.		1
15	AN960C616	. . WASHER.		1
16	NAS679A6	. . NUT		1
17	66-17265-3	. . LINING, CARGO DOOR CENTERING CAM (USED ON 69-23175-3 AND -5)		1
17	66-17265-4	. . LINING, CARGO DOOR CENTERING CAM (USED ON 69-23175-4 AND -6)		1
	MS2042686	ATTACHING PARTS		1
	MS2042685	. . RIVET		1
		. . RIVET		
18	65-26680-3	. . CAM, MAIN SUPPORT (USED ON 69-23175-3).	0150	1
18	65-26680-4	. . CAM, MAIN SUPPORT (USED ON 69-23175-4).	0150	1
18	65-26680-5	. . CAM, MAIN SUPPORT (USED ON 69-23175-5).	5199	1
18	65-26680-6	. . CAM, MAIN SUPPORT (USED ON 69-23175-6).	5199	1
19	BACB30LU3-15	. BOLT.	0399	2
19	BACB30LU3-15	. BOLT, (ADDED BY SB 2628 AND SB 2546).	0102	2
20	BACB30LU3-19	. BOLT.	0399	1
20	BACB30LU3-19	. BOLT, (ADDED BY SB 2628 AND SB 2546).	0102	1
21	AN960PD10	. WASHER.	0399	3
21	AN960PD10	. WASHER, (ADDED BY SB 2628 AND SB 2546).	0102	3
22	BACN10JC3	. NUT	0399	3
22	BACN10JC3	. NUT, (ADDED BY SB 2628)	0102	3
		(OPTIONAL NAS679A3W (ADDED BY SB 2628 AND SB 2546))		
22	NAS679A3W	. NUT, (ADDED BY SB 2628 AND SB 2546)	0102	3
		(OPTIONAL TO BACN10JC3 (ADDED BY SB 2628))		
23	BACS40A3-11	. SHIM.	0399	1
		(OPTIONAL BACS40B3-11)		
23	BACS40B3-11	. SHIM.	0399	1
		(OPTIONAL TO BACS40A3-11)		
23	BACS40A3-11	. SHIM, (ADDED BY SB 2628 AND SB 2546).	0102	1
		(OPTIONAL BACS40B3-11 (ADDED BY SB 2628 AND SB 2546))		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *707* Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
			1 2 3 4 5 6 7		
R R	22 23	BACS4083-11	. SHIM, (ADDED BY SB 2628 AND SB 2546). (OPTIONAL TO BACS40A3-11 (ADDED BY SB 2628 AND SB 2546))	0102	1
	24	69-53167-6	. STOP ASSY	5199	1
	24	69-53167-4	. STOP ASSY	0350	1
	24	65-53167-1	. STOP ASSY, (ADDED BY SB 2628 AND SB 2546)	0102	1
	25	69-53175-1	. FILLER, STOP.	0399	1
	25	69-53175-1	. FILLER, STOP (ADDED BY SB 2628 AND SB 2546)	0102	1
	31	NAS43HT3-41	. SPACER, (USED ON 65-25335-512).	0399	1
	31	NAS43HT3-41	. SPACER, (ADDED BY SB 2628).	0102	1
	32	69-54276-1	. FILLER, HOLD OPEN STRUT (USED ON 65-25335-511).	0399	1
	32	69-54276-1	. FILLER, HOLD OPEN STRUT (ADDED BY SB 2628 AND SB 2546) (USED ON 65-25335-511)	0102	1
	33	65-25335-516	. FILLER, (USED ON 65-25335-511).	0499	1
	33	65-25335-516.	. FILLER, (ADDED BY SB 2628 AND SB 2546) (USED ON . . . 65-25335-511)	0102	1
	MISSING ITEM NUMBERS ARE NOT APPLICABLE				

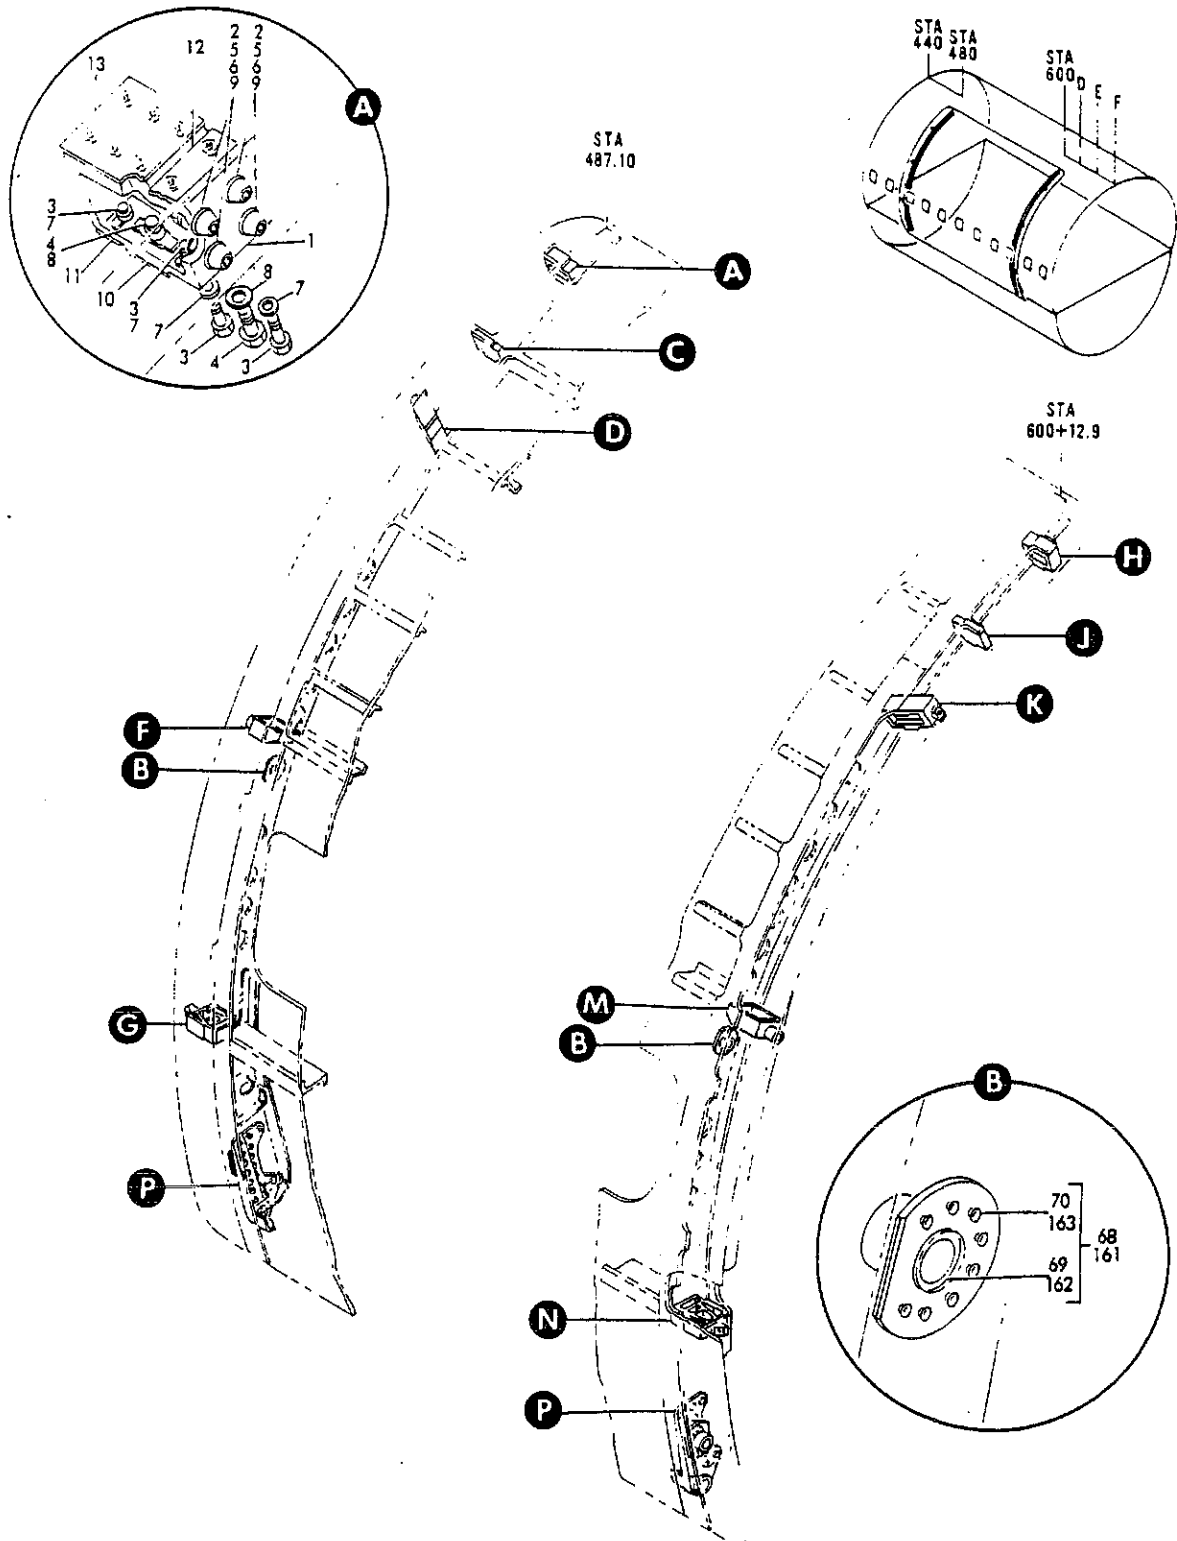


FIGURE 23A. FRAME INSTL, STATION 487, 10 AND 600 PLUS 12.9 MAIN CARGO DOOR (SHEET 1)

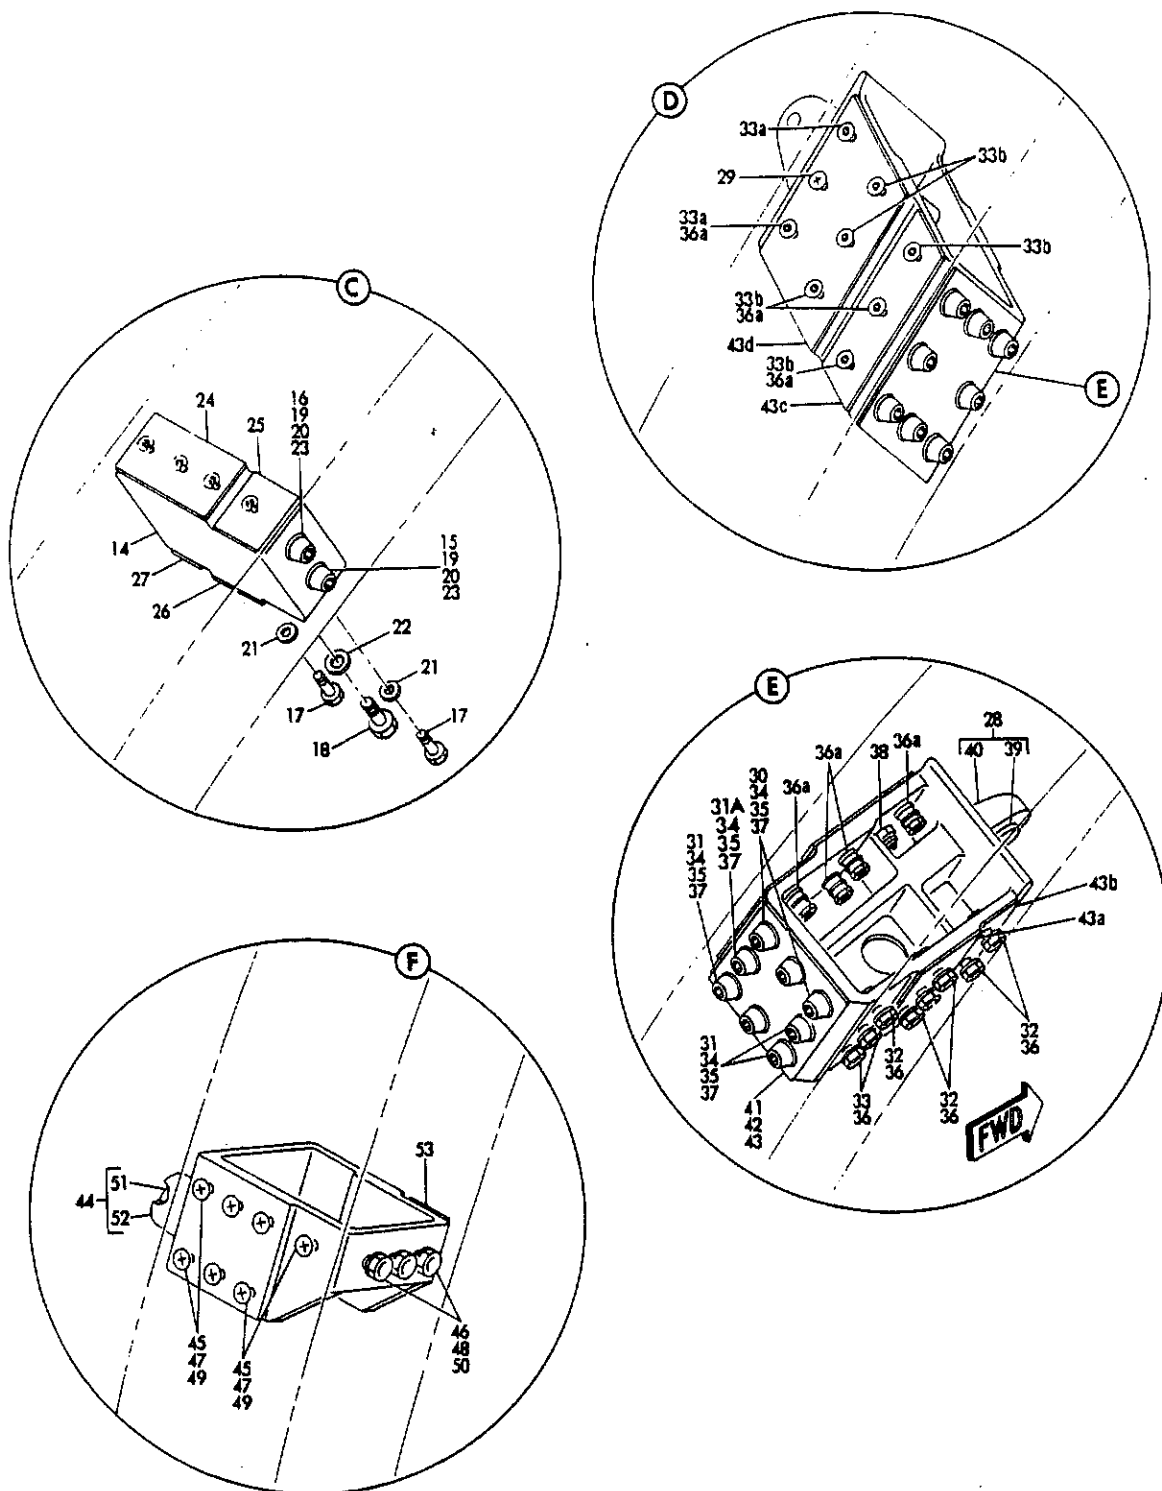


FIGURE 23A. FRAME INSTL. STATION 487.10 AND 600 PLUS 12.9 MAIN CARGO DOOR (SHEET 2)

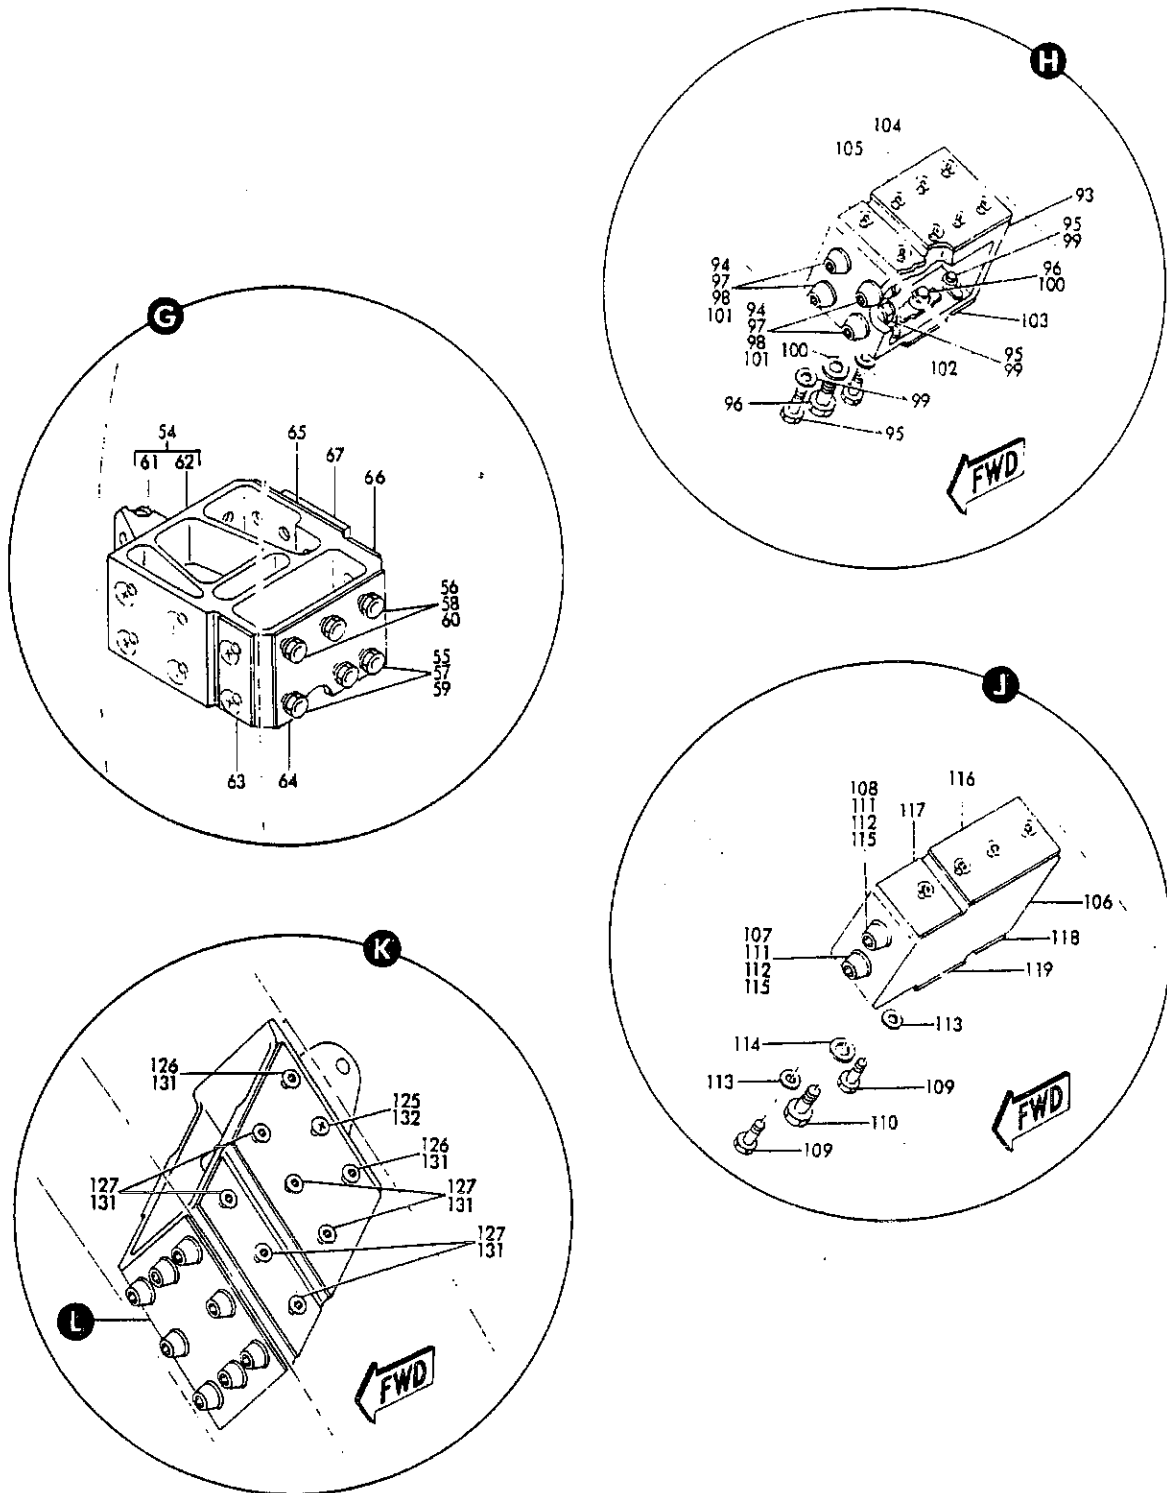


FIGURE 23A. FRAME INSTL, STATION 487.10 AND 600 PLUS 12.9 MAIN CARGO DOOR (SHEET 3)

DETAILED PARTS LIST
52-03-23A
PAGE 2

52-03-23A

NOV 21/90

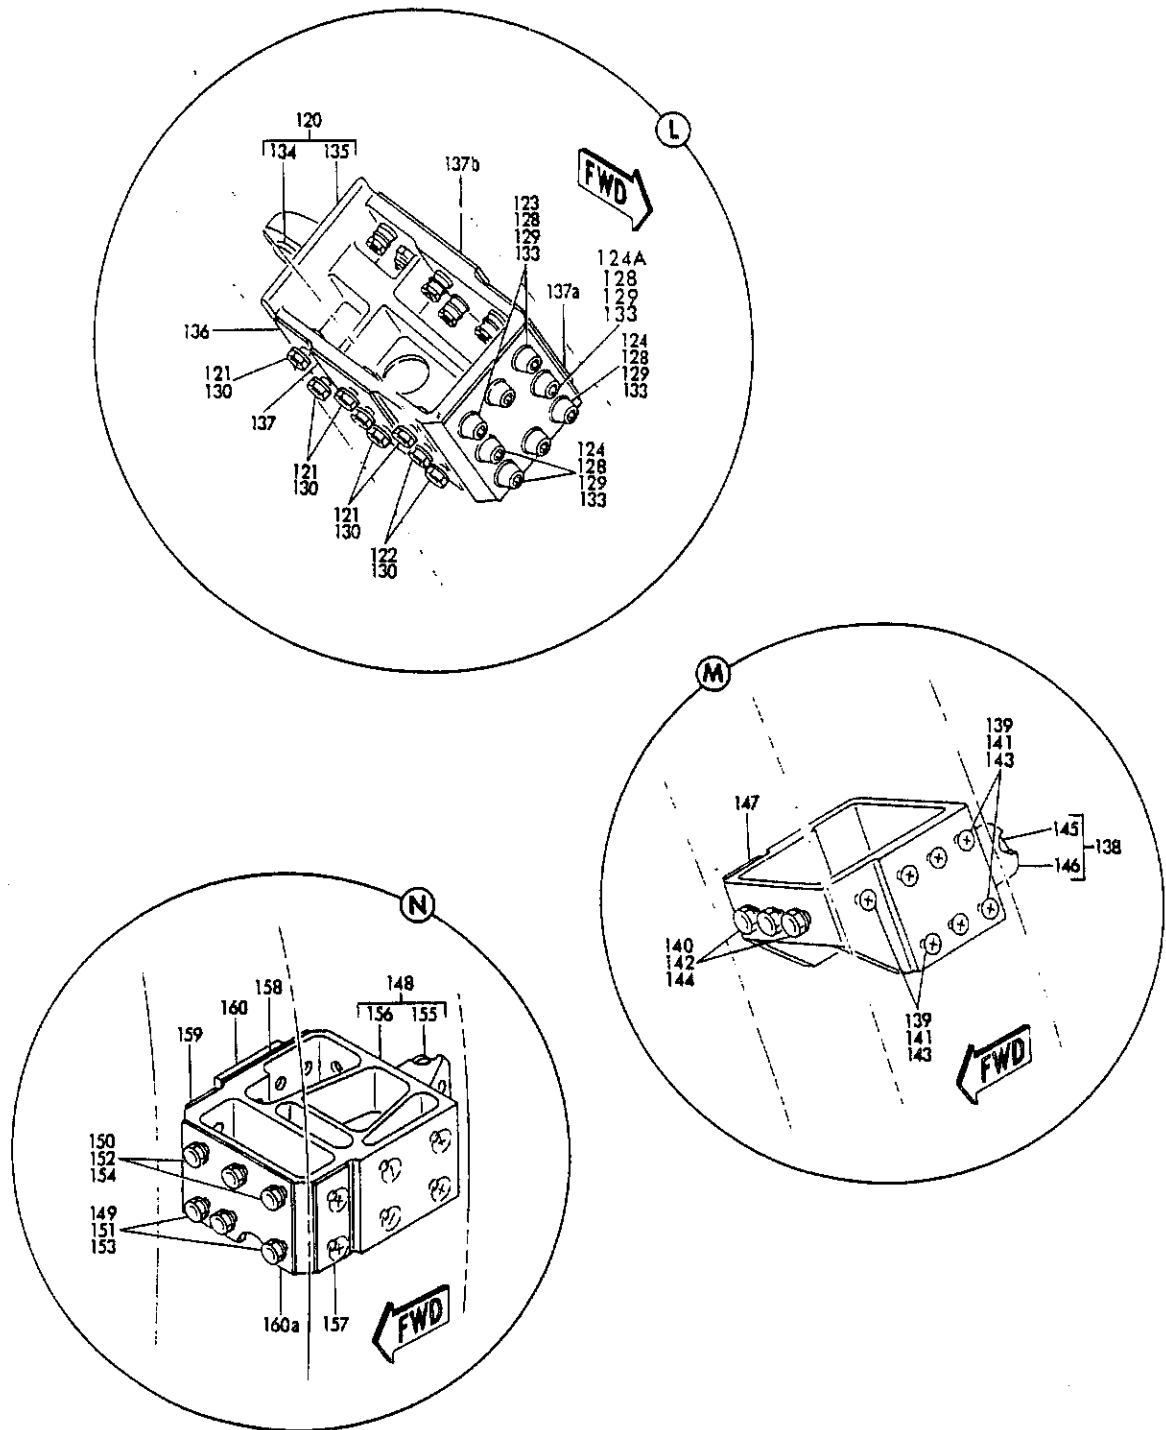


FIGURE 23A. FRAME INSTL, STATION 487.10 AND 600 PLUS 12.9 MAIN CARGO DOGR (SHEET 4)

NOV 21/90

52-03-23A

DETAILED PARTS LIST
52-03-23A
PAGE 3

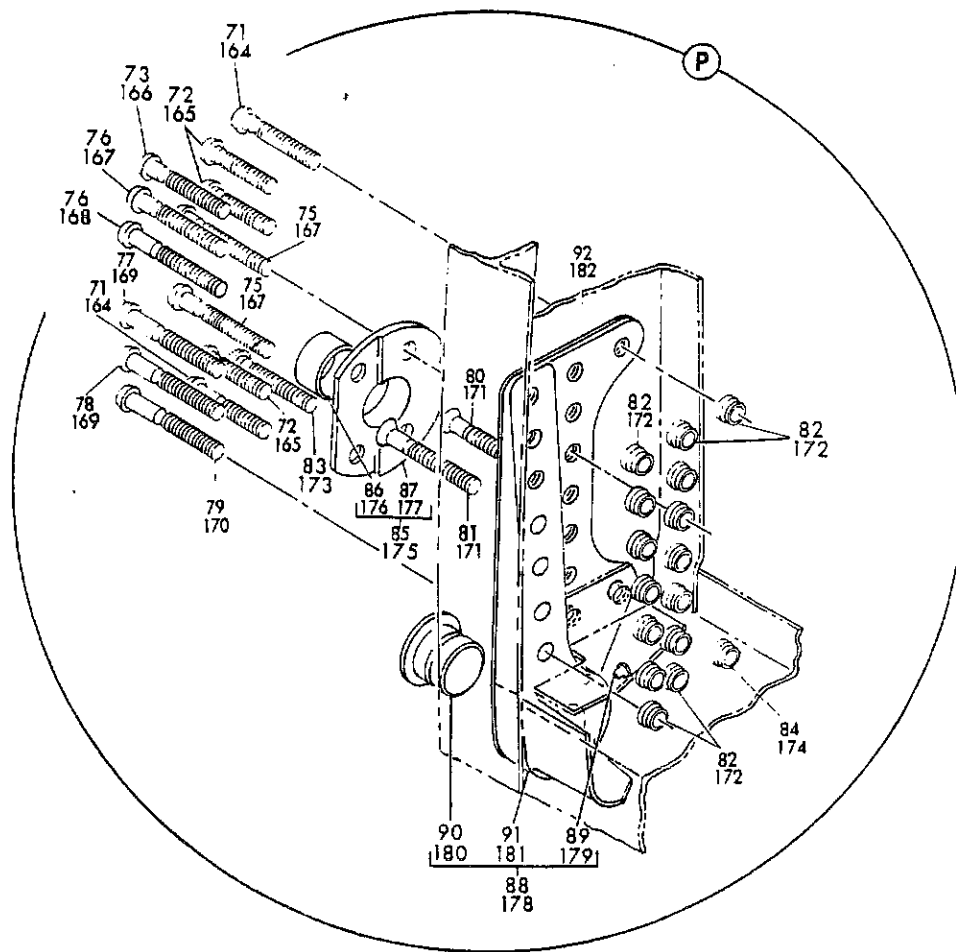


FIGURE 23A. FRAME INSTL, STATION 487, 10 AND 600 PLUS 12, 9 MAIN CARGO DOOR (SHEET 5)

DETAILED PARTS LIST
52-03-23A
PAGE 4

52-03-23A

NOV 21/91



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
23A		FRAME INSTL, STATION 487.10 AND 600 PLUS 12.9 MAIN. . .								
	65-25327-502	CARGO DOOR								RF
		. FRAME INSTL, STATION 487.10 MAIN CARGO DOOR (SEE FIG.								
		16, ITEM 27)								
1	65-48202-502	. . FITTING, MAIN CARGO DOOR STATION 487.10 UPPER . . .								1
		INTERCOSTAL								
		ATTACHING PARTS								
2	MS20005-16	. . BOLT.								4
3	NAS1103-8	. . BOLT.								4
4	NAS1104-8	. . BOLT.								2
5	MS20002C5	. . WASHER.								4
6	MS20002-5	. . WASHER.								4
7	AN960PD10	. . WASHER.								4
8	AN960PD416	. . WASHER.								2
9	BACN10B-L5L	. . NUT								4

10	BACS40A21-42	. . SHIM.								AR
11	BACS40B13-42	. . SHIM.								AR
12	BACS40B12-42	. . SHIM.								AR
13	BACS40B42-42	. . SHIM.								AR
14	65-48203-503	. . FITTING, MAIN CARGO DOOR STATION 487.10 UPPER . . .								1
		INTERCOSTAL								
		ATTACHING PARTS								
15	MS20004-11	. . BOLT.								1
16	MS20004-15	. . BOLT.								1
17	NAS1103-8	. . BOLT.								2
18	NAS1104-8	. . BOLT.								1
19	MS20002C4	. . WASHER.								2
20	MS20002-4	. . WASHER.								2
21	AN960PD10	. . WASHER.								2
22	AN960PD416	. . WASHER.								1
23	BACN10B-L4L	. . NUT								2

24	BACS40B22-40	. . SHIM.								AR
25	BACS40B16-22	. . SHIM.								AR
26	BACS40A22-24	. . SHIM.								AR
27	BACS40B13-22	. . SHIM.								AR
28	65-48217-1	. . FITTING ASSY, STOP.								1
		ATTACHING PARTS								
29	NAS333CPA6	. . BOLT.								1
30	MS20004-6	. . BOLT.								3
31	MS20004-8	. . BOLT.								4
31A	MS20004-10	. . BOLT.								1
32	NAS1103-7	. . BOLT.								6
33	NAS1103-9	. . BOLT.								2
33A	BACB30FN6-6	. . BOLT.								2
33B	BACB30FN6-8	. . BOLT.								6
34	MS20002C4	. . WASHER.								8
35	MS20002-4	. . WASHER.								8
36	AN960PD10	. . WASHER.								9
36A	BACC30M6	. . COLLAR.								8
37	BACN10B-L4L	. . NUT								8
38	NAS679A3W	. . NUT								1

39	69-16954-2	. . . PLATE, DOOR STOP FITTING BEARING (OPT 69-16954-3)								1
39	69-16954-3	. . . PLATE, DOOR STOP FITTING BEARING.								1
		(OPT TO 69-16954-2)								
40	65-48217-3	. . FITTING								1
41	BACS40A48-60	. . SHIM.								AR
42	BACS40B48-60	. . SHIM.								AR
43	BACS40B47-60	. . SHIM.								AR
43A	65-25327-507	. . SHIM, (ALTERED FROM BACS40A20-74)								AR
43B	65-25327-508	. . SHIM, (ALTERED FROM BACS40B13-67)								AR
43C	65-25327-509	. . SHIM, (ALTERED FROM BACS40B16-69)								AR
43D	65-25327-510	. . SHIM, (ALTERED FROM BACS40B36-80)								AR
44	65-48224-8	. . FITTING, DRIFT PIN SUPPORT (ALTERED FROM.							5199	1
		65-48224-6)								
44	65-48224-2	. . FITTING ASSY, CARGO DOOR DRIFT PIN SUPPORT.							0150	1
		ATTACHING PARTS								
45	NAS333CPA6	. . BOLT.								7
46	NAS1104-7	. . BOLT.								3
47	AN960PD10	. . WASHER.								7
48	AN960-416L	. . WASHER.								3
49	NAS679A3W	. . NUT								7
MISSING ITEM NUMBERS ARE NOT APPLICABLE										



PARTS CATALOG

R
R
R

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
23A 50	NAS679A4W	.	NUT		3
		.	-----*		
51	69-21316-2	.	BUSHING	0150	1
52	65-48224-4	.	FITTING, (ALTERED FROM 65-48224-6).	0150	1
53	BACS40B16-19	.	SHIM.		AR
54	65-26973-502	.	SUPPORT ASSY, STRINGER 14 CARGO DOOR FORWARD STOP ATTACHING PARTS		1
55	NAS1103-7	.	BOLT.		3
56	NAS1104-7	.	BOLT.		3
57	AN960PD10	.	WASHER.		3
58	AN960PD416L	.	WASHER.		3
59	NAS679A3W	.	NUT		3
60	NAS679A4W	.	NUT		3
		.	-----*		
61	69-16954-2	.	PLATE, DOOR STOP FITTING BEARING (OPT 69-16954-3)		1
61	69-16954-3	.	PLATE, DOOR STOP FITTING BEARING. (OPT TO 69-16954-2)		1
62	65-26973-504	.	SUPPORT, STRINGER 14 CARGO DOOR FORWARD STOP. . .		1
63	BACS40A12-32	.	SHIM.		AR
64	BACS40A34-50	.	SHIM.		AR
65	BACS40B34-41	.	SHIM.		AR
66	BACS40B18-34	.	SHIM.		AR
67	65-25327-501	.	FILLER, STATION 487.10 MAIN CARGO DOOR FRAME. . .		1
68	6-74861-1	.	BEARING ASSY, CARGO DOOR LATCH SUPPORT. (OPTIONAL 6-74861-2)		1
68	6-74861-2	.	BEARING ASSY, CARGO DOOR LATCH SUPPORT. (OPTIONAL TO 6-74861-1)		1
		.	ATTACHING PARTS		
	MS20470D5	.	RIVET		8
		.	-----*		
69	BACB10D168	.	BEARING		1
70	6-74861-3	.	HOUSING, CARGO DOOR LATCH SUPPORT BEARING (USED ON 6-74861-1)		1
70	6-74861-4	.	HOUSING, CARGO DOOR LATCH SUPPORT BEARING (USED ON 6-74861-2)		1
71	BACB30GW10-7	.	BOLT.		2
72	BACB30GW10-5	.	BOLT.		3
73	BACB30GW10-8	.	BOLT.		1
74	BACB30GW10-10	.	BOLT.		1
75	BACB30GW10-11	.	BOLT.		2
76	BACB30GW10-16	.	BOLT.		1
77	BACB30GW10-19	.	BOLT.		1
78	BACB30GW10-18	.	BOLT.		1
79	BACB30GW10-21	.	BOLT.		1
80	BACB30GY10-6	.	BOLT.		1
81	BACB30GY10-15	.	BOLT.		1
82	BACC30K10	.	COLLAR.		15
83	BACB30GW12-7	.	BOLT.		1
84	BACC30K12	.	COLLAR.		1
85	69-21148-3	.	SUPPORT ASSY, CARGO DOOR HOOK BEARING		1
86	YTS196A	.	BUSHING, TEFLON (V77896).		1
87	69-21148-4	.	HOUSING, CARGO DOOR HOOK BEARING SUPPORT.		1
88	69-23588-1	.	SUPPORT ASSY, CARGO DOOR CAM. (OPTIONAL TO 69-23588-5)	5199	1
88	69-23588-5	.	SUPPORT ASSY. (OPTIONAL 69-23588-1)	5199	1
88	69-23588-1	.	SUPPORT ASSY, CARGO DOOR CAM (DELETED BY SB 3387)	0150	1
88	69-23588-5	.	SUPPORT ASSY, (REPLACES 69-23588-1 BY SB 3387). . .	0150	1
89	NAS516-1	.	FITTING, (USED ON 69-23588-1)		1
89	NAS516-1A	.	FITTING, (USED ON 69-23588-5)		1
90	69-23588-3	.	BUSHING, (USED ON 69-23588-1)		1
90	69-23588-4	.	BUSHING, (USED ON 69-23588-5)		1
91	5-89829-1	.	FITTING, (USED ON 69-23588-1)		1
91	5-89829-3	.	FITTING, (USED ON 69-23588-5)		1
92	BACS40A74-194	.	SHIM.		AR
	65-25330-504	.	FRAME INSTL, STATION 600 PLUS 12.9 MAIN CARGO DOOR. . (SEE FIG. 16, ITEM 28)		RF
93	65-48202-502	.	FITTING, MAIN CARGO DOOR STATION 600 PLUS 12.9. . . UPPER INTERCOSTAL		1
		.	ATTACHING PARTS		
94	MS20005-18	.	BOLT.		4
95	NAS1103-7	.	BOLT.		4
96	NAS1104-7	.	BOLT.		2
97	MS20002C5	.	WASHER.		4
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
23A 98	MS20002-5	..	WASHER.		4
99	AN960PD10	..	WASHER.		4
100	AN960PD416	..	WASHER.		2
101	BACN10B-L5L	..	NUT		4
		..	*-----		
102	BACS40A24-42	..	SHIM.		AR
103	BACS40B13-42	..	SHIM.		AR
104	BACS40B40-42	..	SHIM.		AR
105	BACS40B16-42	..	SHIM.		AR
106	65-48203-504	..	FITTING, MAIN CARGO DOOR STATION 600 PLUS 12.9. . . UPPER INTERCOSTAL ATTACHING PARTS		1
107	MS20004-8	..	BOLT.		1
108	MS20004-12	..	BOLT.		1
109	NAS1103-7	..	BOLT.		2
110	NAS1104-7	..	BOLT.		1
111	MS20002C4	..	WASHER.		2
112	MS20002-4	..	WASHER.		2
113	AN960PD10	..	WASHER.		2
114	AN960PD416	..	WASHER.		1
115	BACN10B-L4L	..	NUT		2
		..	*-----		
116	BACS40B22-40	..	SHIM.		AR
117	BACS40B16-22	..	SHIM.		AR
118	BACS40B13-22	..	SHIM.		AR
119	BACS40A22-24	..	SHIM.		AR
120	65-48217-2	..	FITTING ASSY, STOP. ATTACHING PARTS		1
121	NAS1103-7	..	BOLT.		6
122	NAS1103-9	..	BOLT.		2
123	MS20004-5	..	BOLT.		3
124	MS20004-7	..	BOLT.		4
124A	MS20004-10	..	BOLT.		1
125	NAS333CPA6	..	BOLT.		1
126	BACB30FN6-6	..	BOLT.		2
127	BACB30FN6-8	..	BOLT.		6
128	MS20002C4	..	WASHER.		8
129	MS20002-4	..	WASHER.		8
130	AN960PD10	..	WASHER.		8
131	BACC30M6	..	COLLAR.		8
132	NAS679A3W	..	NUT		1
133	BACN10B-L4L	..	NUT		8
		..	*-----		
R 134	69-16954-2	..	PLATE, DOOR STOP FITTING BEARING (OPT 69-16954-3)		1
R 134	69-16954-3	..	PLATE, DOOR STOP FITTING BEARING. (OPT TO 69-16954-2)		1
135	65-48217-4	..	FITTING		1
136	65-25330-513	..	SHIM, (ALTERED FROM BACS40B13-68)		AR
137	65-25330-514	..	SHIM, (ALTERED FROM BACS40A20-72)		AR
137A	65-25330-515	..	SHIM, (ALTERED FROM BACS40B15-68)		AR
137B	65-25330-516	..	SHIM, (ALTERED FROM BACS40B36-80)		AR
138	65-48224-7	..	FITTING, DRIFT PIN SUPPORT (ALTERED FROM. 65-48224-5)	5199	1
138	65-48224-1	..	FITTING ASSY, MAIN CARGO DOOR DRIFT PIN SUPPORT . . ATTACHING PARTS	0150	1
139	NAS333CPA6	..	BOLT.		7
140	NAS1104-7	..	BOLT.		3
141	AN960PD10	..	WASHER.		7
142	AN960PD416L	..	WASHER.		3
143	NAS679A3W	..	NUT		7
144	NAS679A4W	..	NUT		3
		..	*-----		
145	69-21316-2	..	BUSHING	0150	1
146	65-48224-3	..	FITTING, MAIN CARGO DOOR DRIFT PIN SUPPORT. . . .	0150	1
147	BACS40B17-18	..	SHIM.		AR
148	65-26973-501	..	SUPPORT ASSY, STRINGER 14 CARGO DOOR AFT STOP . . ATTACHING PARTS		1
149	NAS1103-7	..	BOLT.		3
150	NAS1104-7	..	BOLT.		3
151	AN960PD10	..	WASHER.		3
152	AN960PD416L	..	WASHER.		3
153	NAS679A3W	..	NUT		3
154	NAS679A4W	..	NUT		3
		..	*-----		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R R R	23A 155	69-16954-2	. . .	PLATE, DOOR STOP FITTING BEARING (OPT 69-16954-3)						1
	155	69-16954-3	. . .	PLATE, DOOR STOP FITTING BEARING.						1
				(OPT TO 69-16954-2)						
	156	65-26973-503	. . .	SUPPORT, STRINGER 14 CARGO DOOR AFT STOP.						1
	157	BACS40A15-34	. . .	SHIM.						AR
	158	BACS40C34-41	. . .	SHIM.						AR
	159	BACS40C18-34	. . .	SHIM.						AR
	160	65-25330-522	. . .	FILLER, STATION 600 PLUS 12.9 MAIN CARGO DOOR FRAME						1
	160A	BACS40A34-49	. . .	SHIM.						AR
	161	6-74861-1	. . .	BEARING ASSY, CARGO DOOR LATCH SUPPORT.						1
				(OPTIONAL 6-74861-2)						
	161	6-74861-2	. . .	BEARING ASSY, CARGO DOOR LATCH SUPPORT.						1
				(OPTIONAL TO 6-74861-1)						
		MS20470D5	. . .	ATTACHING PARTS						
			. . .	RIVET						8
				-----*						
	162	BACB10D168	. . .	BEARING						1
	163	6-74861-3	. . .	HOUSING, CARGO DOOR LATCH SUPPORT BEARING (USED						1
				ON 6-74861-1)						
	163	6-74861-4	. . .	HOUSING, CARGO DOOR LATCH SUPPORT BEARING (USED						1
				ON 6-74861-2)						
	164	BACB30GW10-7	. . .	BOLT.						2
	165	BACB30GW10-5	. . .	BOLT.						3
	166	BACB30GW10-9	. . .	BOLT.						1
	167	BACB30GW10-11	. . .	BOLT.						3
	168	BACB30GW10-16	. . .	BOLT.						1
	169	BACB30GW10-19	. . .	BOLT.						2
	170	BACB30GW10-22	. . .	BOLT.						1
	171	BACB30GY10-6	. . .	BOLT.						2
	172	BACC30K10	. . .	COLLAR.						15
	173	BACB30GW12-7	. . .	BOLT.						1
	174	BACC30K10	. . .	COLLAR.						1
	175	69-21148-3	. . .	SUPPORT ASSY, CARGO DOOR HOOK BEARING						1
	176	YTS196A	. . .	BUSHING, TEFLON (V77B96).						1
	177	69-21148-4	. . .	HOUSING, CARGO DOOR HOOK BEARING SUPPORT.						1
	178	69-23588-2	. . .	SUPPORT ASSY, CARGO DOOR CAM.					5199	1
				(OPTIONAL TO 69-23588-6)						
	178	69-23588-6	. . .	SUPPORT ASSY.					5199	1
				(OPTIONAL 69-23588-2)						
	178	69-23588-2	. . .	SUPPORT ASSY, CARGO DOOR CAM (DELETED BY SB 3387)					0150	1
	178	69-23588-6	. . .	SUPPORT ASSY, (REPLACES 65-23588-2 BY SB 3387). . .					0150	1
	179	NAS516-1	. . .	FITTING, (USED ON 69-23588-2)						1
	179	NAS516-1A	. . .	FITTING, (USED ON 69-23588-6)						1
	180	69-23588-3	. . .	BUSHING, (USED ON 69-23588-2)						1
	180	69-23588-4	. . .	BUSHING, (USED ON 69-23588-6)						1
	181	5-89829-2	. . .	FITTING, (USED ON 69-23588-2)						1
	181	5-89829-4	. . .	FITTING, (USED ON 69-23588-6)						1
	182	BACS40A74-194	. . .	SHIM.						AR
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

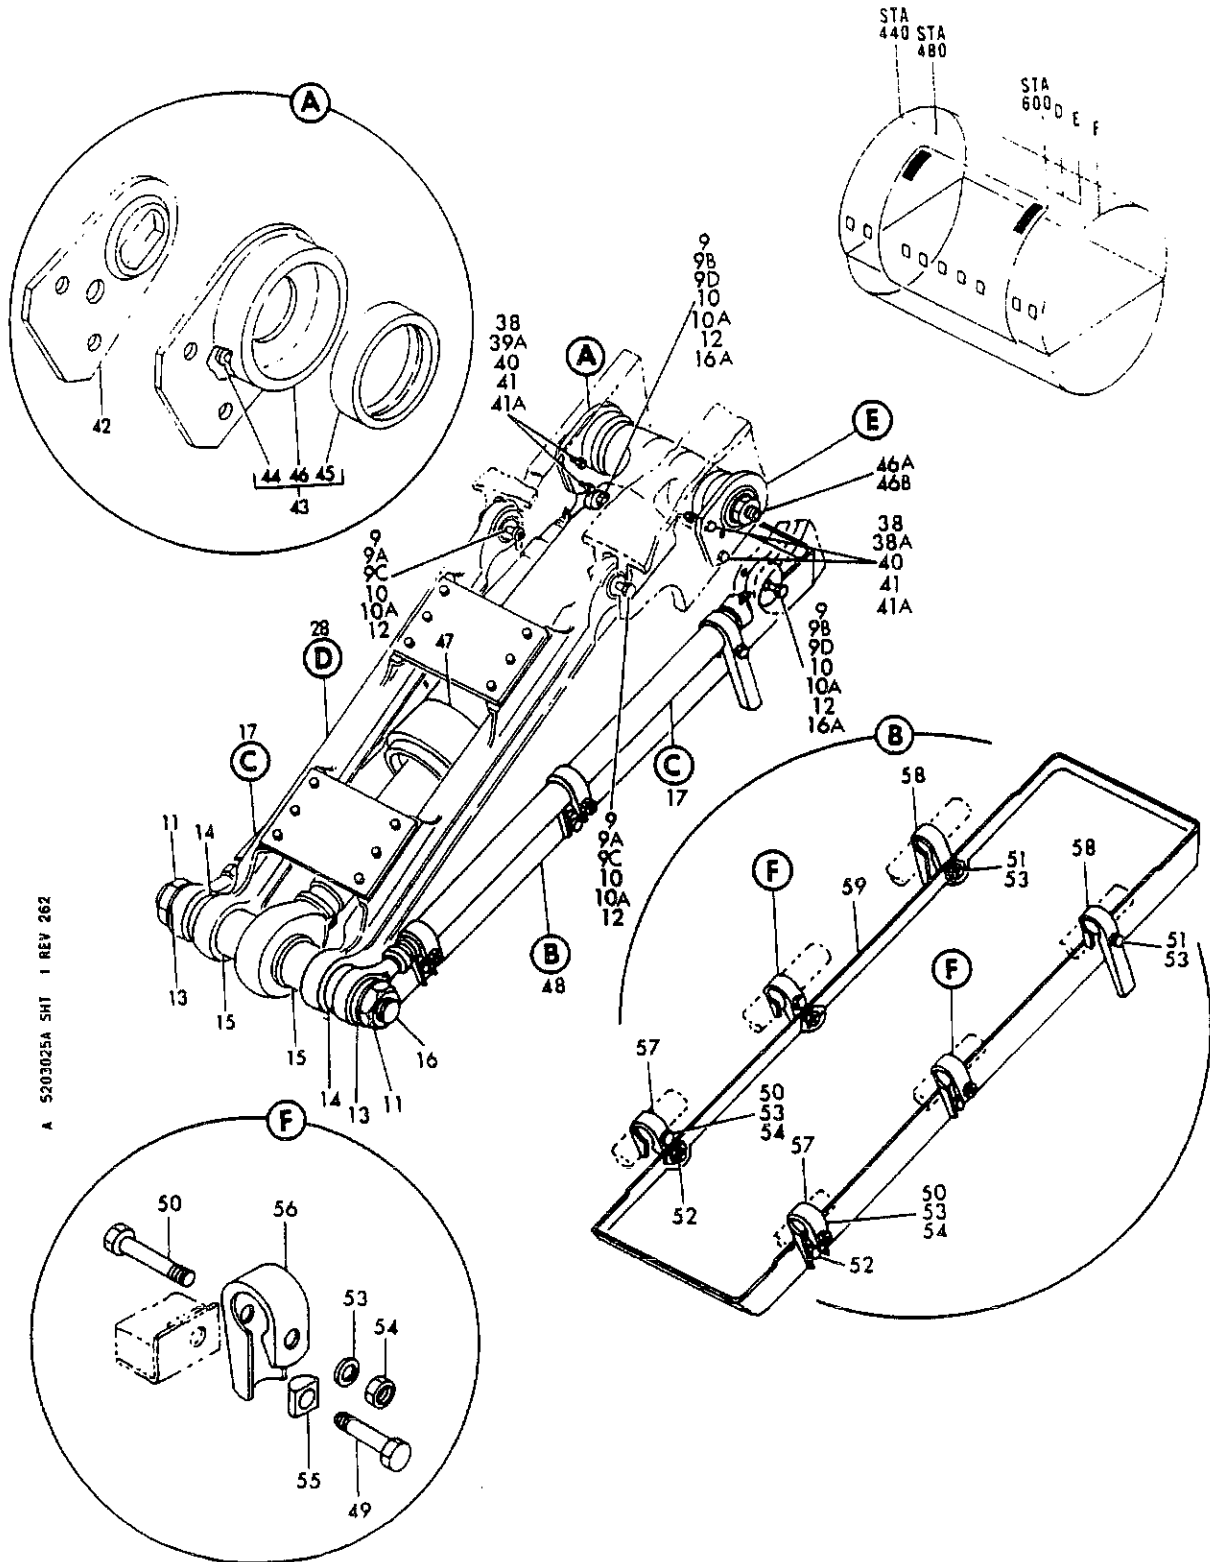


FIGURE 25A. LINKAGE INSTL, MAIN CARGO DOOR ACTUATOR (SHEET 1)

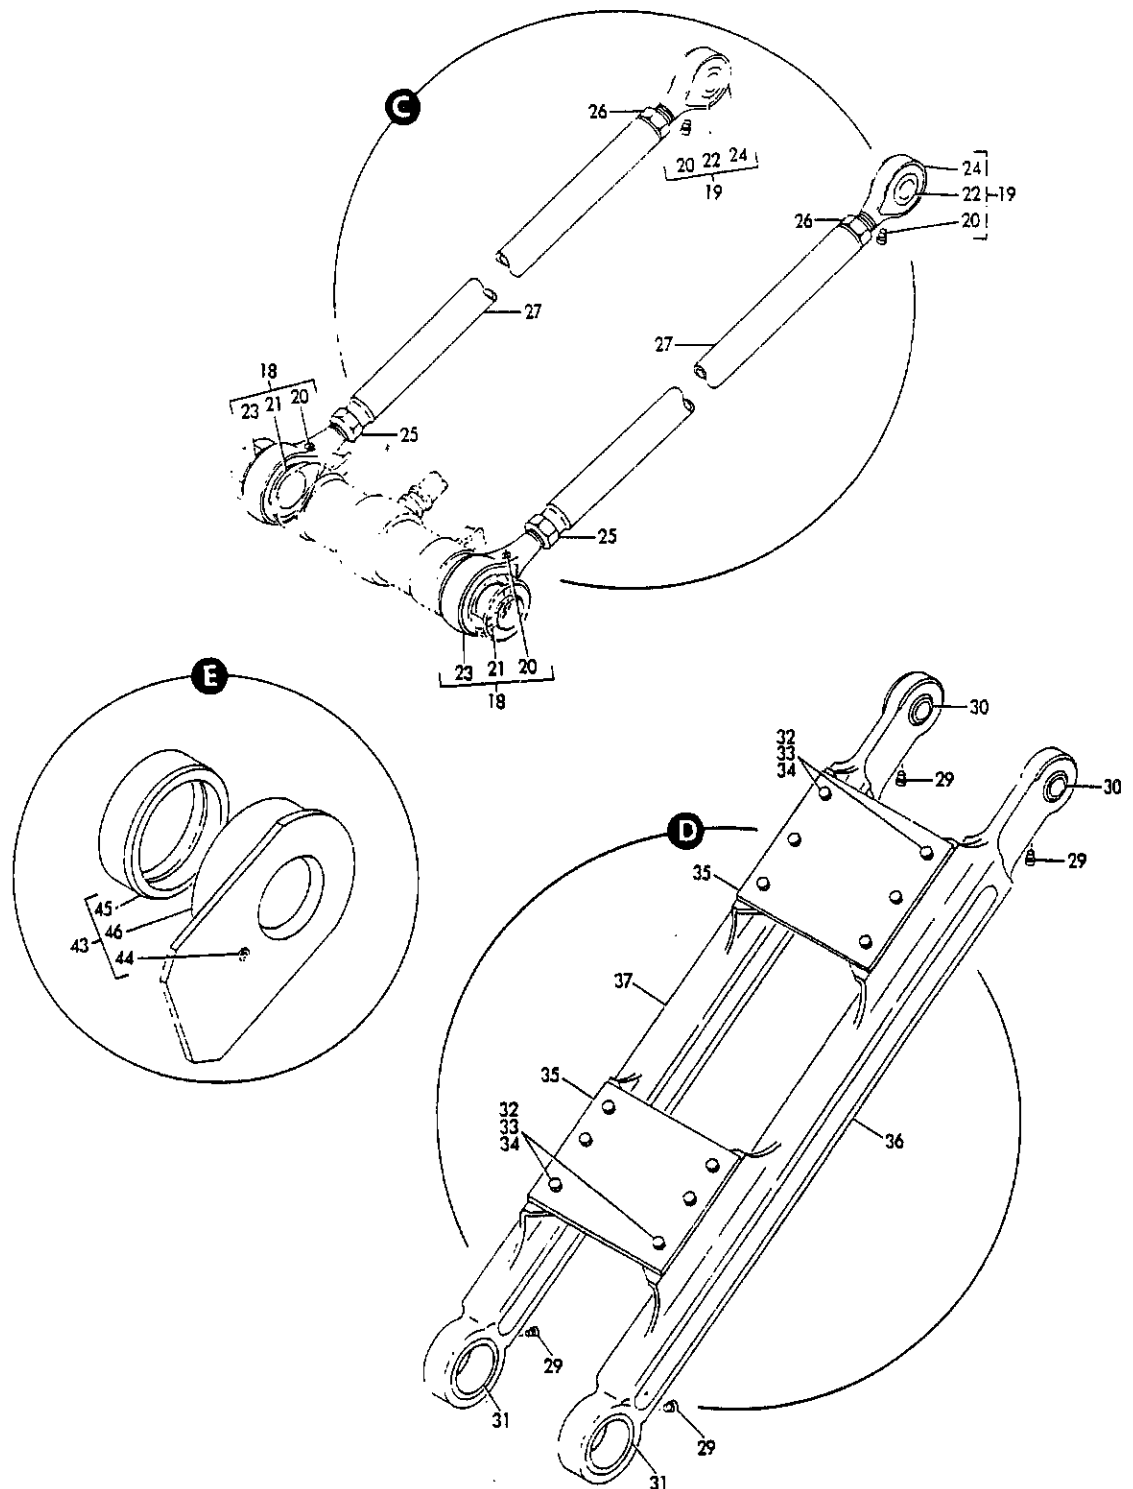


FIGURE 25A. LINKAGE INSTL, MAIN CARGO DOOR ACTUATOR (SHEET 2)

NOV 21/90

52-03-25A

DETAILED PARTS LIST
52-03-25A
PAGE 1

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
25A	65-48208-2	LINKAGE INSTL, MAIN CARGO DOOR ACTUATOR (SEE FIG. 16, . ITEM 28)		RF
R	9	69-36705-1		4
R	10	AN320C5		4
	11	AN320C16		2
	12	AN960PD516L		4
	13	AN960C1616		2
	14	69-36713-2		2
	15	69-36713-1		2
	16	69-36704-1		1
	16A	NAS73-7-003		2
	17	69-36700-1		2
	18	69-36702-1		1
	19	69-36701-1		1
	20	NAS516-1		1
	21	BACB10A396M3		1
	22	BACB10A215GM2		1
	23	69-36702-2		1
	24	69-36701-2		1
	25	NAS509-10		1
	26	NAS509L10		1
	27	69-36703-2		1
R	28	65-48209-1		1
R	28	65-48209-5		1
R	28	65-48209-5		1
R	29	NAS516-1		4
	30	BACB10A215GM2		2
	31	69-36706-1		2
	32	NAS1103-4		12
	33	AN960-10L		12
	34	NAS679A3W		12
	35	65-48209-2		2
	36	65-48210-1		1
	37	65-48210-2		1
	38	NAS1304-11		2
	39	NAS1304-13		2
	40	AN960PD416		4
	41	NAS679A08W		4
	42	69-36735-1		1
	43	69-36710-501		2
	44	NAS516-1		1
	45	69-36708-1		1
	46	69-36707-501		1
	47	65-56298-1		1
R	48	65-48212-2		1
R	49	NAS1103-8		5199
R	50	NAS1103-20		5199
R	51	NAS1303-21		5199
R	52	NAS1503-8		5199
R	53	AN960PD10		5199
R	54	NAS679A3W		5199
R	55	69-36712-1		5199
R	56	BACCC10AA16-16		5199
R	57	BACCC10AA16-20		5199
R	58	BACCC10AA16-28		5199
R	59	65-48214-1		5199
		LINKAGE INSTL, MAIN CARGO DOOR ACTUATOR (SEE FIG. 16, . ITEM 28)		
		. BOLT, MAIN CARGO DOOR ACTUATOR LINKAGE SPECIAL.		
		(ALTERED FROM NAS1107-24 (OPTIONAL NAS1307-23))		
		. NUT		
		. NUT		
		. WASHER.		
		. WASHER.		
		. SPACER, MAIN CARGO DOOR DETAIL.		
		. SPACER, MAIN CARGO DOOR DETAIL.		
		. SHAFT, MAIN CARGO DOOR ACTUATOR LINKAGE		
		. BUSHING		
		. ROD ASSY, MAIN CARGO DOOR SUPPORT		
		. . . ROD END ASSY, MAIN CARGO DOOR SUPPORT ROD LOWER . . .		
		. . . ROD END ASSY, MAIN CARGO DOOR SUPPORT ROD UPPER . . .		
		. . . FITTING		
		. . . BEARING, (LOWER).		
		. . . BEARING, (UPPER).		
		. . . ROD END, MAIN CARGO DOOR SUPPORT ROD LOWER.		
		. . . ROD END, MAIN CARGO DOOR SUPPORT ROD UPPER.		
		. . . NUT		
		. . . NUT		
		. . . TUBE, MAIN CARGO DOOR SUPPORT ROD (ALTERED FROM . . . 69-36703-1)		
		. LINK ASSY, SUPPORT.	0150	
		(OPTIONAL 65-48209-5)		
		. LINK ASSY, SUPPORT.	0150	
		(OPTIONAL TO 65-48209-1)		
		. LINK ASSY, SUPPORT.	5199	
		. . . FITTING		
		. . . BEARING		
		. . . BUSHING, MAIN CARGO DOOR SUPPORT LINK		
		. . . BOLT.		
		. . . WASHER.		
		. . . NUT		
		. . . PLATE, MAIN CARGO DOOR SUPPORT LINK TIE		
		. . . LINK, MAIN CARGO DOOR SUPPORT		
		. . . LINK, MAIN CARGO DOOR SUPPORT		
		. . . BOLT.		
		. . . BOLT.		
		. . . WASHER.		
		. . . NUT		
		. . . FITTING, MAIN CARGO DOOR SWIVEL PIN ANTI-ROTATION . . .		
		. . . CAP ASSY, MAIN CARGO DOOR ACTUATOR RETAINER		
		. . . FITTING		
		. . . BUSHING, MAIN CARGO DOOR RETAINER CAP		
		. . . RETAINER, MAIN CARGO DOOR ACTUATOR CAP.		
		. . . ACTUATOR ASSY, CARGO DOOR (SEE FIG. 26A).		
		. . . PAN INSTL, MAIN CARGO DOOR HYDRAULIC FLUID DRIP		
		. . . BOLT.	5199	
		. . . BOLT.	5199	
		. . . BOLT.	5199	
		. . . BOLT.	5199	
		. . . WASHER.	5199	
		. . . NUT	5199	
		. . . FILLER.	5199	
		. . . CLAMP	5199	
		. . . CLAMP	5199	
		. . . CLAMP	5199	
		. . . PAN ASSY.	5199	

MISSING ITEM NUMBERS ARE NOT APPLICABLE



52-03-26A

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
		1	2	3	4	5	6	7			
26A	65-56298-1	ACTUATOR ASSY, CARGO DOOR (SEE FIG. 25A ITEM 47).									RF
1	BACN12A3MS	. NAMEPLATE									1
2	69-35587-6	. STRAP, NAMEPLATE (NOT RELEASED)									1
3	MS21916-6-4	. REDUCER									2
4	NAS1612-6	. PACKING									2
5	69-30548-1	. RING, ACTUATOR CARGO DOOR SWIVEL PIN LOCK									1
6	69-42639-1	. PIN, SWIVEL									1
7	NAS1611-210	. PACKING									3
8	BACR12BE210	. RING									3
9	69-42628-1	. PISTON									1
10	NAS1611-332	. PACKING									1
11	66-14295-13	. CHANNEL, PISTON SEAL									1
12	69-42621-1	. BEARING									1
13	NAS1611-230	. PACKING									1
14	MS28783-8	. RING									2
15	NAS1611-218	. PACKING									1
16	BACS11AA218	. SEAL									1
17	66-17917-1	. SLEEVE, CARGO DOOR ACTUATOR									1
18	69-30541-1	. ROD END ASSY, CARGO DOOR ACTUATOR									1
19	69-30541-3	. ROD END ASSY, CARGO DOOR ACTUATOR (OPTIONAL TO 69-30541-2)									1
20	66-22519-1	. . . WASHER									1
21	69-30541-4	. . . ROD END, CARGO DOOR ACTUATOR									1
21	69-30541-2	. . . ROD END, CARGO DOOR ACTUATOR (OPTIONAL 69-30541-3)									1
22	10-60545-144S	. . BEARING									1
23	66-12156-4	. CUP, LOCKWASHER									1
24	69-42625-1	. PLUG									1
25A	65-56275-1	. CYLINDER ASSY									1
26A	BACP20AX25	. . PLUG									1
27A	BACP20AX25P	. . PIN									1
29A	65-56275-2	. . CYLINDER									1
30	BACS34A13	. SCRAPER									1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

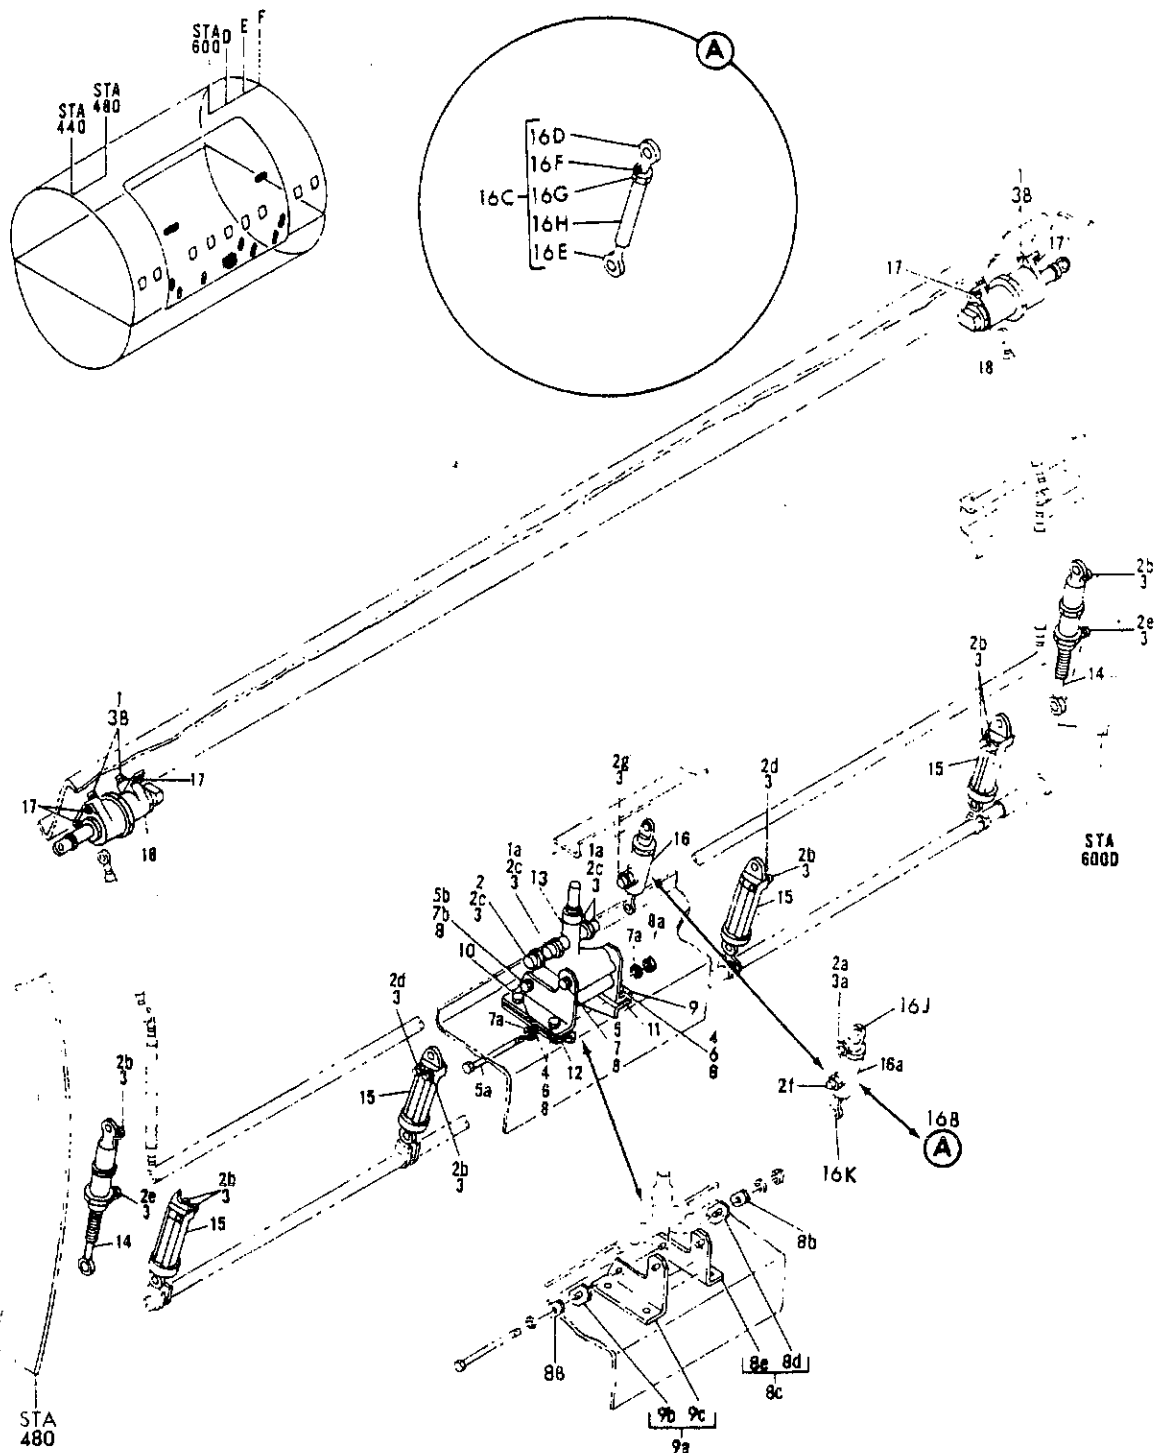


FIGURE 27. EQUIPMENT INSTL, CARGO DOOR HYDRAULIC ACTUATOR

DETAILED PARTS LIST
52-03-27
PAGE 3

52-03-27

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
27	65-28919-1	EQUIPMENT INSTL, CARGO DOOR HYDRAULIC ACTUATOR (SEE							0150	RF
		29-4, FIG. 27, ITEM 79 AND 29-4, FIG. 27A, ITEM								
		144)								
	65-28919-1	EQUIPMENT INSTL, CARGO DOOR HYDRAULIC ACTUATOR.							5199	RF
		(REWORKED BY DWG NO.;65-73846-4 AND DWG								
		NO.;65-73846-5) (SEE 29-4, FIG. 27A, ITEM 144)								
1	MS21902-6	. UNION, (DELETED BY SB 2628)							0102	4
2A	MS21916-6-4	. UNION								1
2B	MS21916-6-4	. REDUCER								8
2C	MS21916-6-4	. REDUCER								4
2D	MS21916-6-4	. REDUCER								2
2E	BACU24AA0406	. REDUCER								2
2F	BACU24AA0406	. REDUCER								1
3	NAS1612-6	. PACKING								17
3A	NAS1612-4	. PACKING								1
3B	NAS1612-6	. PACKING							0399	4
3B	NAS1612-6	. PACKING, (DELETED BY SB 2816)							5299	4
3B	NAS1612-6	. PACKING, (DELETED BY SB 2628)							0102	4
4	NAS1104-5W	. BOLT								4
5	NAS1304-52	. BOLT								1
5B	NAS1304-58	. BOLT								1
6	AN960D416	. WASHER								4
7	AN960D416	. WASHER								1
8	NAS679A4W	. NUT								6
8B	69-38467-3	. PLATE, SEQUENCE VALVE SERRATED								2
8C	69-38468-1	. BRACKET ASSY, SEQUENCE VALVE MOUNTING								1
8D	69-38467-1	. PLATE, SERRATED								1
8E	69-24219-1	. BRACKET								1
9A	69-38468-2	. BRACKET ASSY, SEQUENCE VALVE MOUNTING								1
9B	69-38467-2	. PLATE, SERRATED								1
9C	69-24219-2	. BRACKET								1
13	10-60849-2	. VALVE, SEQUENCING								1
14	65-28441-2	. ACTUATOR ASSY, CARGO DOOR CAM (SEE FIG. 28)								2
15	65-28943-2	. ACTUATOR ASSY, CARGO DOOR LOCK (SEE FIG. 29)								4
	65-28919-2	. ACTUATOR ASSY, DOOR PRESSURE								1
		(OPTIONAL TO 65-27999-2)								
15A	65-28919-3	. PLUG								1
15B	65-27999-3	. ACTUATOR ASSY, DOOR PRESSURE (SEE FIG. 30)								1
16A	65-27999-3	. ACTUATOR ASSY, DOOR PRESSURE (SEE FIG. 30)							0450	1
16A	65-27999-3	. ACTUATOR ASSY, DOOR PRESSURE (DELETED BY SB 3311)							0103	1
		(SEE FIG. 30)							5199	
16B	65-65445-1	. ROD INSTL, TORQUE TUBE LOCK (CARGO DOOR HYDRAULIC							5151	1
		SYSTEM DEACTIVATION) (ADDED BY REWORK DWG								
		NO.;65-73846-4)								
16B	65-65445-4	. ROD INSTL, TORQUE TUBE LOCK (ADDED BY SB 3311)							0103	1
									5199	
16B	65-65445-4	. ROD INSTL, TORQUE TUBE LOCK (CARGO DOOR HYDRAULIC							5299	1
		SYSTEM DEACTIVATION) (ADDED BY REWORK DWG								
		NO.;65-73846-4)								
16C	65-65445-2	. ROD ASSY.							5151	1
16C	65-65445-5	. ROD ASSY.							5299	1
16D	10-60779-157	. BEARING, ROD END							5199	1
		(OPTIONAL TO 10-60779-157A)								
16D	10-60779-157A	. BEARING, ROD END							5199	1
		(OPTIONAL 10-60779-157)								
16E	10-60779-174	. BEARING, ROD END							5151	1
16E	65-65445-7	. BEARING, ROD END							5299	1
16F	NAS559-1	. LOCK, ROD END							5199	1
16G	NAS509-5	. NUT, JAM.							5199	1
16H	65-65445-3	. ROD							5151	1
16H	65-65445-6	. ROD							5299	1
16J	NAS76A4-002	. BUSHING							5199	2
16K	NAS76A4-003	. BUSHING							5199	2
17	NAS1104-10W	. BOLT, (DELETED BY SB 2628)							0102	8
18	65-27935-3	. ACTUATOR ASSY, DRIFT PIN (DELETED BY SB 2628) (SEE							0102	2
		FIG. 31)								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

MISSING ITEM NUMBERS ARE NOT APPLICABLE

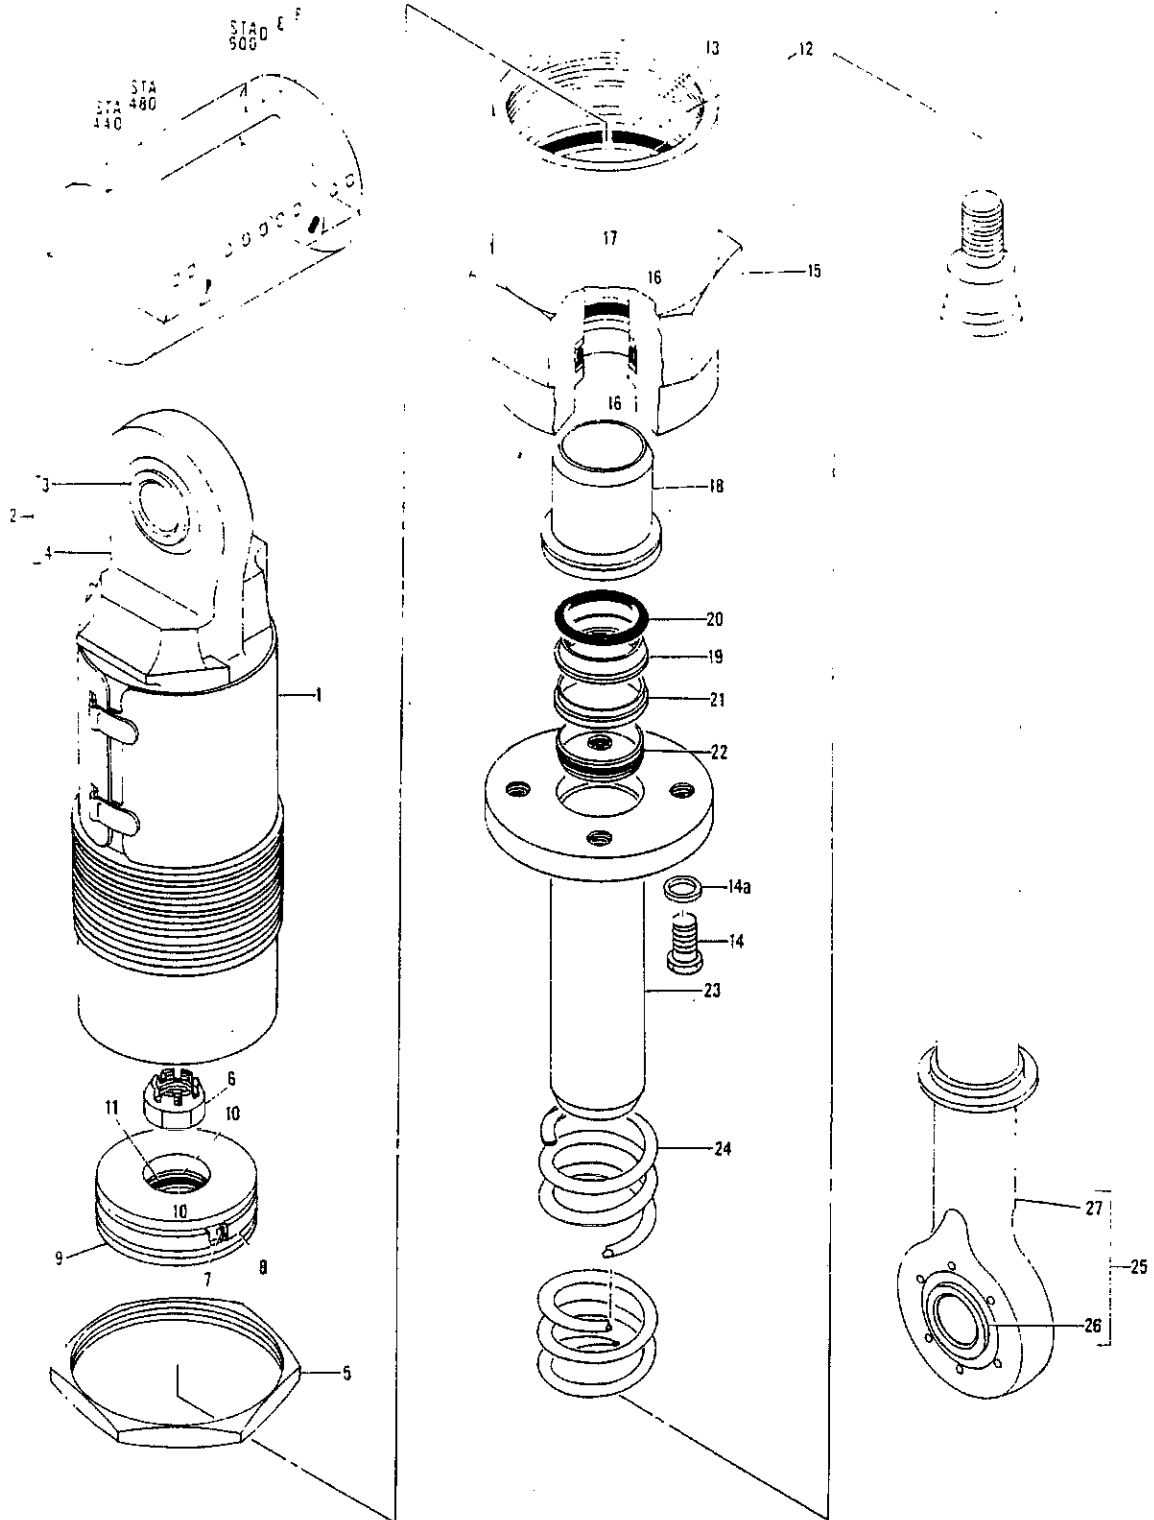


FIGURE 28. ACTUATOR ASSY, CARGO DOOR CAM



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
28	65-28441-2	ACTUATOR ASSY, CARGO DOOR CAM (SEE FIG. 27, ITEM 14).		RF
1	BACN12A1FP	. NAMEPLATE		1
2	69-22423-1	. CYLINDER ASSY, CARGO DOOR CAM ACTUATOR.		1
3	BACB10F16	. . BEARING, (OPTIONAL BACB10M32)		1
4	69-22423-2	. . CYLINDER, CARGO DOOR CAM ACTUATOR		1
5	66-16805-1	. NUT, CARGO DOOR CAM ACTUATOR JAM.		1
6	AN310C7	. NUT		1
7	NAS1611-219	. PACKING		1
8	66-14295-4	. SEAL, PISTON CHANNEL.		1
9	66-16804-1	. PISTON, CARGO DOOR CAM ACTUATOR		1
10	MS28774-014	. RETAINER.		2
11	NAS1611-014	. PACKING		1
12	MS28774-133	. RETAINER.		2
13	NAS1611-133	. PACKING		1
14	NAS1304-4HW	. BOLT.		4
14A	AN960-416	. WASHER.		4
15	69-22422-1	. CAP, CAM ACTUATOR ROD END		1
16	MS28774-120	. RETAINER.		2
17	NAS1611-120	. PACKING		1
18	66-16807-1	. BUSHING, CARGO DOOR CAM ACTUATOR.		1
19	BACB11AA115	. SEAL.		1
20	NAS1611-115	. PACKING		1
21	66-16806-1	. SLEEVE, CARGO DOOR CAM ACTUATOR		1
22	BACB34A4	. SCRAPER		1
23	66-16808-1	. RETAINER, CARGO DOOR CAM ACTUATOR		1
24	66-16810-1	. SPRING, CARGO DOOR CAM ACTUATOR COMPRESSION		1
25	69-22988-1	. ROD ASSY, CARGO DOOR CAM ACTUATOR PISTON.		1
26	BACB10F16	. . BEARING, (OPTIONAL BACB10M32)		1
27	69-22988-2	. . ROD, CARGO DOOR CAM ACTUATOR PISTON		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

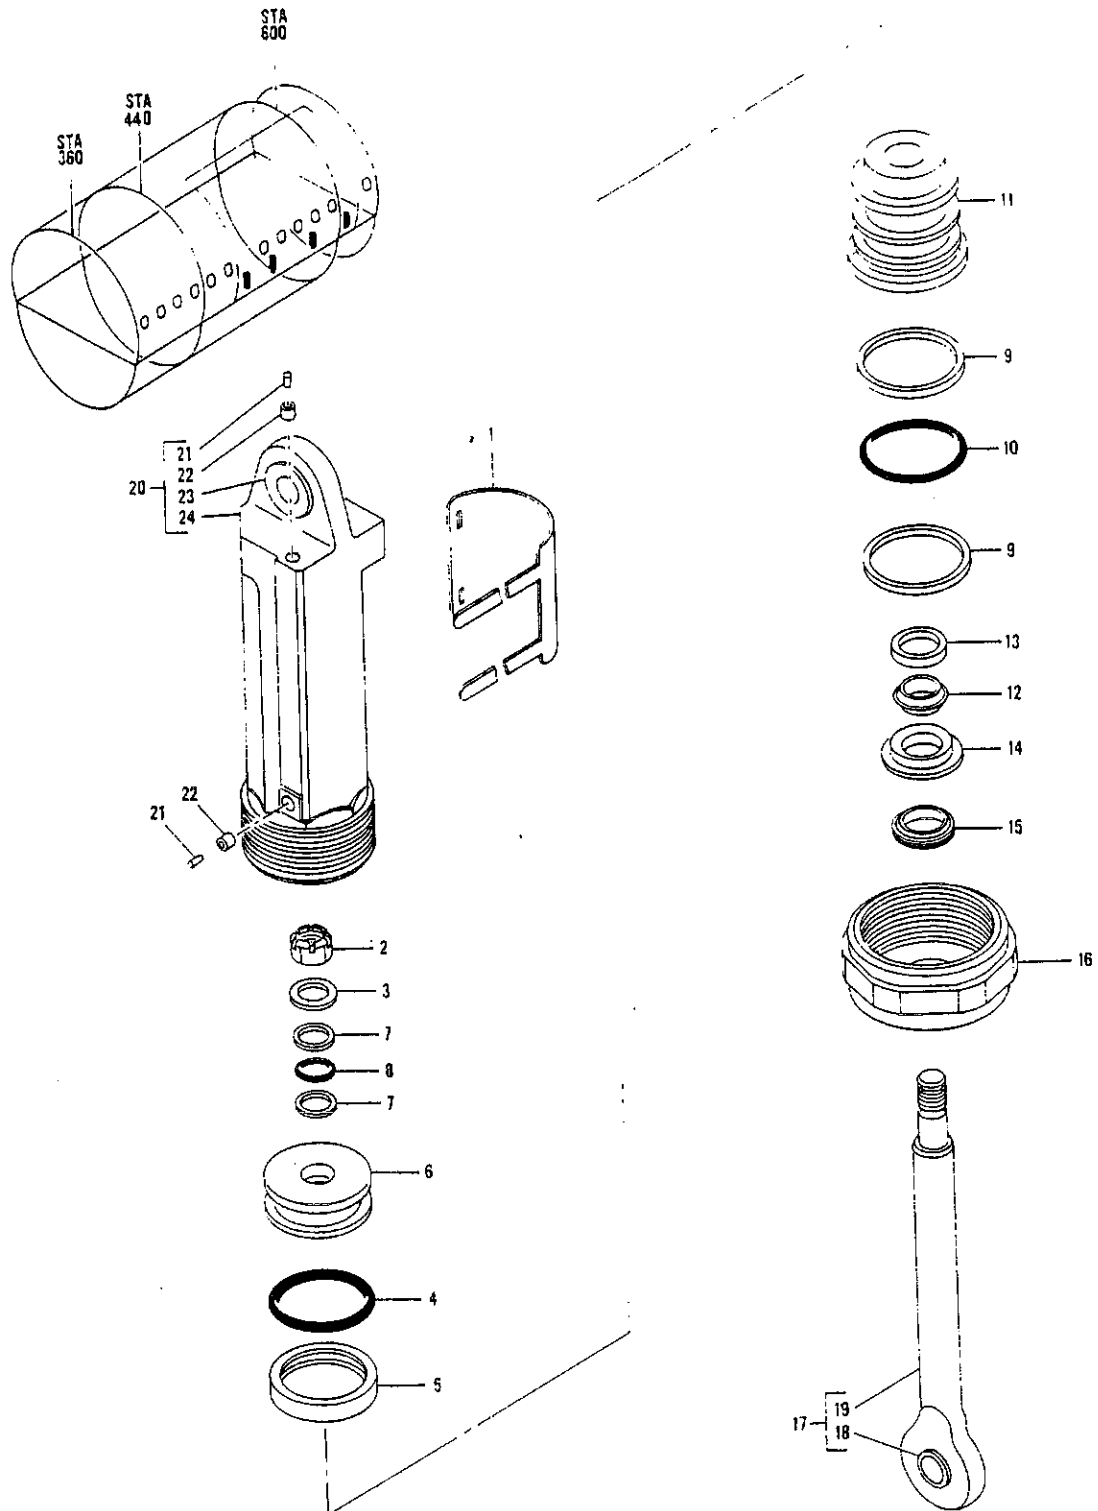


FIGURE 29. ACTUATOR ASSY, CARGO DOOR LOCK

DETAILED PARTS LIST
52-03-29
PAGE 7

52-03-29

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
29	65-28943-2	ACTUATOR ASSY, CARGO DOOR LOCK (SEE FIG. 27, ITEM 15)		RF
1	BACN12A1FJ	. NAMEPLATE		1
2	AN310-8	. NUT		1
3	AN960-816	. WASHER		1
4	NAS1611-326	. PACKING		1
5	66-14295-9	. SEAL, PISTON CHANNEL		1
6	66-17668-1	. PISTON, ACTUATOR LOCK		1
7	MS28774-015	. RETAINER		2
8	NAS1611-015	. PACKING		1
9	MS28774-326	. RETAINER		2
10	NAS1611-326	. PACKING		1
11	69-23634-1	. BEARING, ACTUATOR LOCK		1
12	BACS11AA210	. SEAL		1
13	NAS1611-210	. PACKING		1
14	66-16537-1	. SLEEVE, FOOT SEAL RETAINER		1
15	BACS34A5	. SCRAPER		1
16	66-17676-1	. CAP, ACTUATOR LOCK		1
17	69-23139-1	. ROD ASSY, ACTUATOR LOCK PISTON		1
18	BACB10M34	. BEARING		1
19	69-23139-2	. ROD, ACTUATOR LOCK PISTON		1
20	65-29395-1	. HOUSING ASSY, CARGO DOOR ACTUATOR LOCK		1
21	BACP20AX25AP	. PIN		2
22	BACP20AX25A	. PLUG		2
23	BACB10M34	. BEARING		1
24	65-29395-2	. HOUSING, CARGO DOOR ACTUATOR LOCK		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				


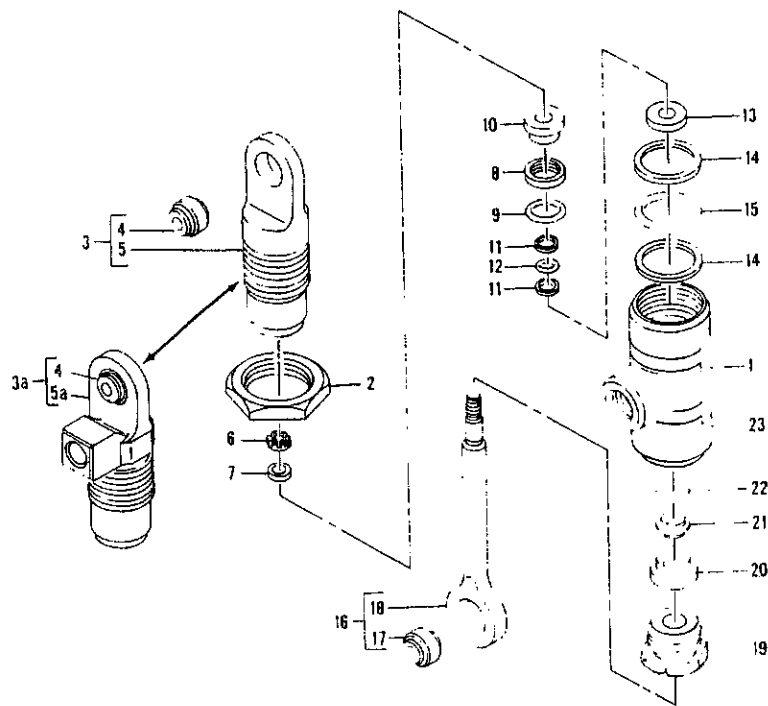


FIGURE 30. ACTUATOR ASSY, DOOR PRESSURE

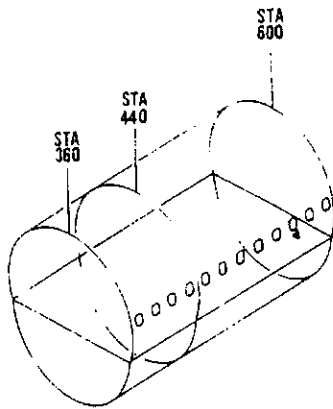

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
30	65-27999-3	ACTUATOR ASSY, DOOR PRESSURE (SEE FIG. 27, ITEM 16A)...	0450	RF
	65-27999-3	ACTUATOR ASSY, DOOR PRESSURE (DELETED BY SB 3311) . . .	0103	RF
		(SEE FIG. 27, ITEM 16A)	5199	
1	BACN12A1FK	. NAMEPLATE		1
2	66-16593-1	. NUT, DOOR PRESSURE ACTUATOR JAM		1
3A	69-31263-1	. CYLINDER ASSY, DOOR PRESSURE ACTUATOR		1
4	BACB10M9	. . BEARING		1
5A	69-31263-2	. . CYLINDER, DOOR PRESSURE ACTUATOR.		1
6	AN320C3	. NUT		1
7	AN960-10	. WASHER.		1
8	66-14295-10	. SEAL, PISTON CHANNEL.		1
9	NAS1611-113	. PACKING		1
10	66-16595-1	. PISTON, DOOR PRESSURE ACTUATOR.		1
11	MS28774-010	. RETAINER.		2
12	NAS1611-010	. PACKING		1
13	66-17910-1	. WASHER, DOOR PRESSURE ACTUATOR PISTON		1
14	MS28774-121	. RETAINER.		2
15	NAS1611-121	. PACKING		1
16	66-16596-1	. ROD ASSY, DOOR PRESSURE ACTUATOR PISTON		1
17	BACB10M9	. . BEARING		1
18	66-16596-2	. . ROD, DOOR PRESSURE ACTUATOR PISTON.		1
19	66-16597-1	. RETAINER, DOOR PRESSURE ACTUATOR.		1
20	66-16594-1	. SLEEVE, DOOR PRESSURE ACTUATOR.		1
21	BACSI1AA110	. SEAL.		1
22	NAS1611-110	. PACKING		1
23	69-22169-1	. CAP, DOOR PRESSURE ACTUATOR END		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
31	65-27935-3	ACTUATOR ASSY, CARGO DOOR DRIFT PIN (DELETED BY SB 2628) (SEE FIG. 27, ITEM 18)	0102	RF
1	BACN12A1FU	. NAMEPLATE	0102	1
	MS21318-8	. ATTACHING PARTS . SCREW	0102	2
2	69-22686-1	. END ASSY, DRIFT PIN ACTUATOR ROD.	0102	1
3	BACB10M11	. . BEARING	0102	1
4	69-22686-2	. . END, DRIFT PIN ACTUATOR ROD	0102	1
5	66-12156-1	. LOCKWASHER, CUP	0102	1
5A	NAS561-3-20	. PIN	0102	1
6	66-16538-2	. STOP, DRIFT PIN ACTUATOR.	0102	1
7	66-16536-1	. RETAINER, DRIFT PIN ACTUATOR.	0102	2
8	BACS34A5	. SCRAPER	0102	2
9	66-16537-1	. SLEEVE, FOOT SEAL RETAINER.	0102	2
10	BACS11AA210	. SEAL.	0102	2
11	NAS1611-210	. PACKING	0102	2
12	69-21933-1	. CAP, DRIFT PIN ACTUATOR END	0102	1
13	MS28774-227	. RETAINER.	0102	2
14	NAS1611-227	. PACKING	0102	1
15	66-16535-1	. NUT, DRIFT PIN ACTUATOR JAM	0102	1
16	69-21932-1	. CYLINDER, DRIFT PIN ACTUATOR.	0102	1
17	66-14295-5	. SEAL, PISTON CHANNEL.	0102	1
18	NAS1611-325	. PACKING	0102	1
19	66-16533-1	. PISTON, DRIFT PIN ACTUATOR.	0102	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

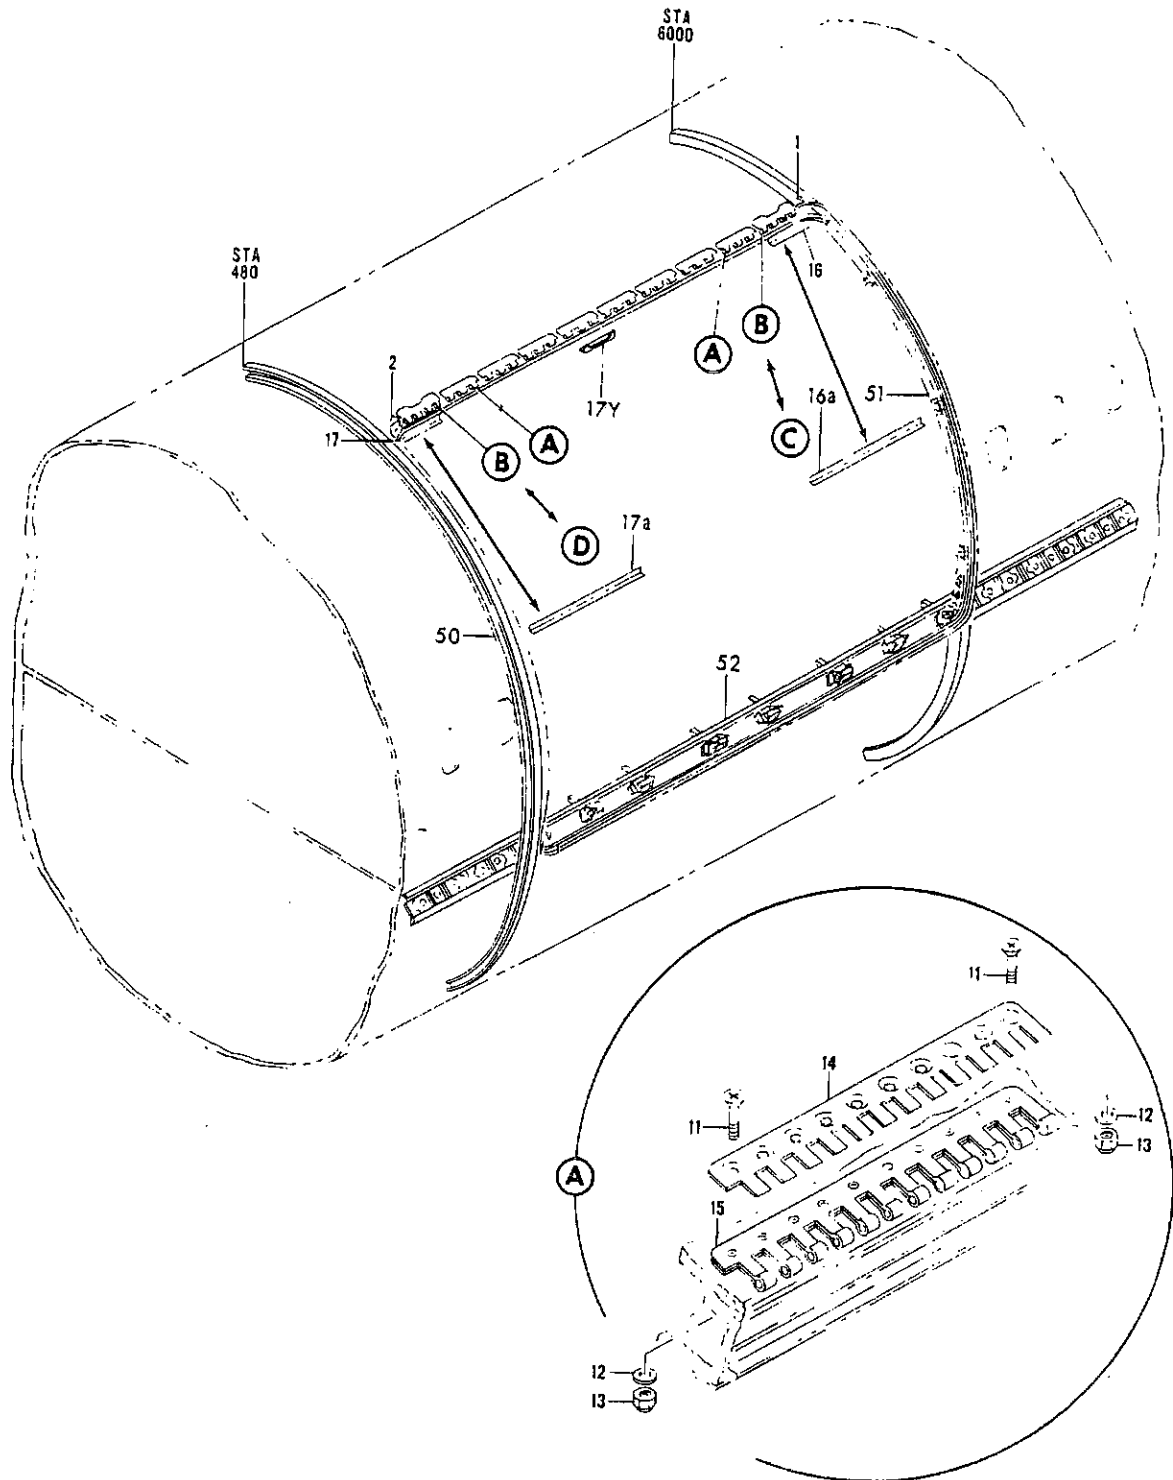


FIGURE 32. STRAP INSTL, MAIN CARGO DOOR (SHEET 1)

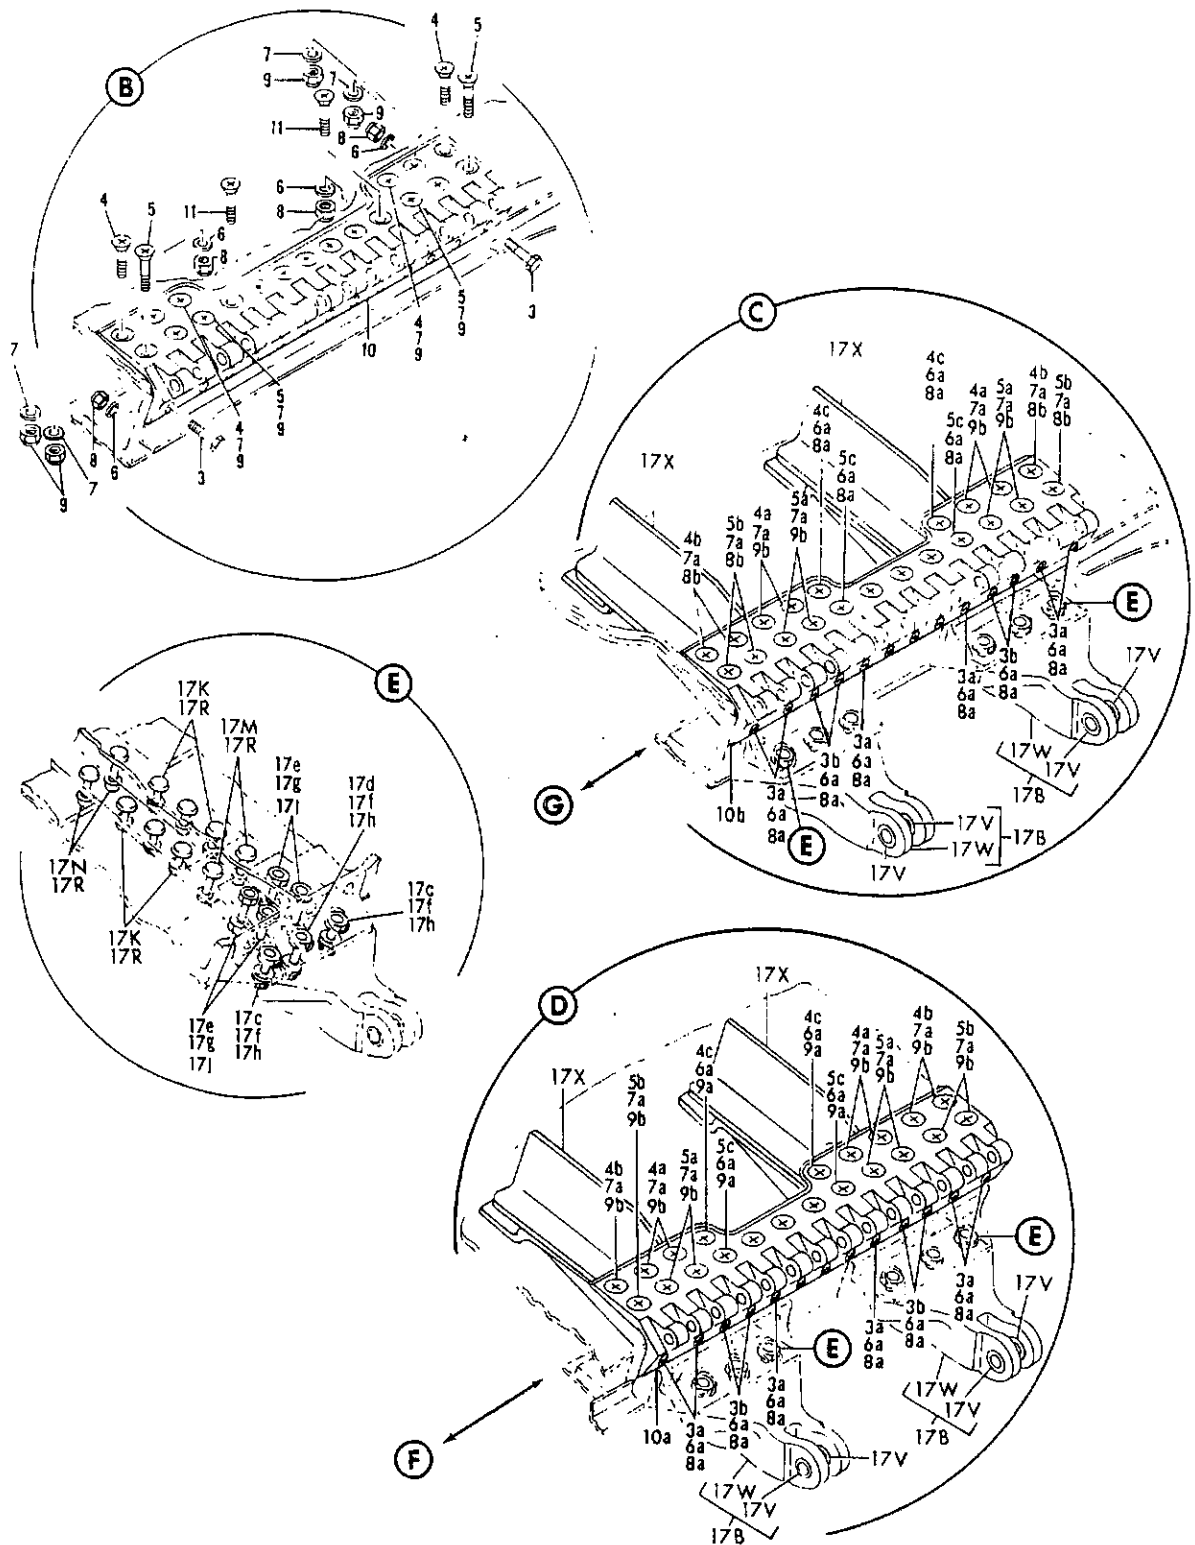


FIGURE 32. STRAP INSTL, MAIN CARGO DOOR (SHEET 2)

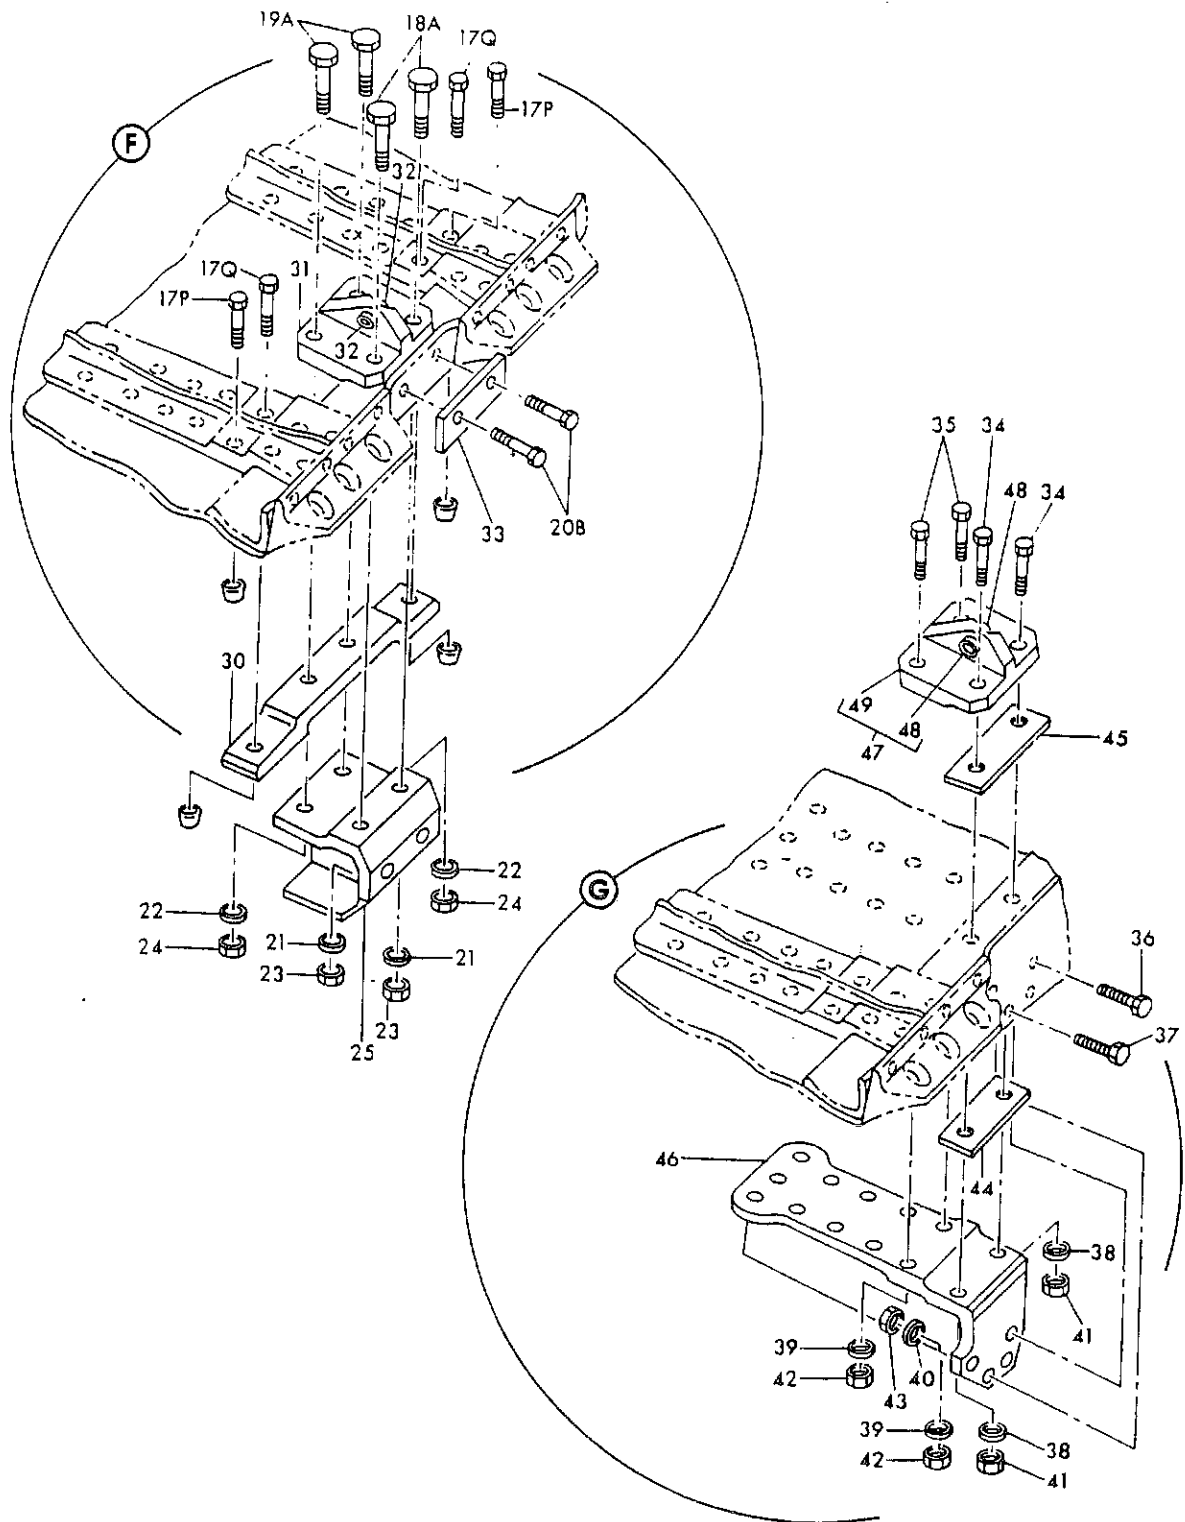


FIGURE 32. STRAP INSTL, MAIN CARGO DOOR (SHEET 3)

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
32	65-25340-1	STRAP INSTALLATION, MAIN CARGO DOOR (SEE 53-2, FIG. 2, ITEM 122)		RF
R	65-25341-1	. SILL INSTL, MAIN CARGO DOOR UPPER		1
	69-21646-1	. . FAIRING, MAIN CARGO DOOR UPPER SILL END	0150	1
R		(OPTIONAL 69-21646-5)		
R	69-21646-5	. . FAIRING, MAIN CARGO DOOR UPPER SILL END	0150	1
R		(OPTIONAL TO 69-21646-1)		
R	69-21646-5	. . FAIRING, MAIN CARGO DOOR UPPER SILL END	5199	1
R	69-21646-2	. . FAIRING, MAIN CARGO DOOR UPPER SILL END	0150	1
R		(OPTIONAL 69-21646-6)		
R	69-21646-6	. . FAIRING, MAIN CARGO DOOR UPPER SILL END	0150	1
R		(OPTIONAL TO 69-21646-2)		
R	69-21646-6	. . FAIRING, MAIN CARGO DOOR UPPER SILL END	5199	1
		ATTACHING PARTS		
	BACB30FN8-11	. . BOLT.		2
	BACB30FN8-12	. . BOLT.		2
		-----*		
	3A NAS334CPA7-5	. . BOLT.		18
	3B BACB30ABP4-11A	. . BOLT.		8
	4A NAS335CPA13-5	. . BOLT.		8
	4B NAS335CPA11	. . BOLT.		6
	4C NAS334CPA11	. . BOLT.		4
	5A BACB30ABP5-15A	. . BOLT.		8
	5B NAS335CPA13	. . BOLT.		6
	5C NAS334CPA13	. . BOLT.		10
	6A AN960PD416	. . WASHER.		40
	7A AN960PD516	. . WASHER.		28
	8A NAS679A4W	. . NUT		33
	8B NAS679A5W	. . NUT		6
	9A NAS679A4	. . NUT		7
	9B NAS679A5	. . NUT		22
	10A 65-47176-501	. . HINGE HALF, UPPER SILL.		1
	10B 65-47176-502	. . HINGE HALF, UPPER SILL.		1
	11 NAS334CA13	. . BOLT.		94
	12 AN960PD416	. . WASHER.		80
	13 NAS679A4W	. . NUT		80
	14 69-20734-1	. . FAIRING, CARGO DOOR HINGE		8
	15 69-20733-1	. . HINGE HALF, CARGO DOOR.		8
	16A 65-27770-501	. . DEPRESSOR, SEAL	0102	1
	16A 65-27770-5	. . DEPRESSOR, SEAL	0399	1
		ATTACHING PARTS		
	MS20470D6	. . RIVET		10
	BACB30FM8-12	. . BOLT.		4
		-----*		
	17A 65-27770-502	. . DEPRESSOR, SEAL	0102	1
	17A 65-27770-6	. . DEPRESSOR, SEAL	0399	1
		ATTACHING PARTS		
	17A NAS623-3-5	. . SCREW		2
	17A NAS679A3	. . NUT		2
		-----*		
R	17B 65-48219-1	. . SUPPORT ASSY, ACTUATOR.	0150	4
R	17B 65-48219-7	. . SUPPORT ASSY, ACTUATOR.	5199	4
		ATTACHING PARTS		
	17C NAS1305-13	. . BOLT.		8
	17D NAS1305-16	. . BOLT.		4
	17E NAS1304-19	. . BOLT.		16
	17F MS20002-5	. . WASHER.		12
	17G AN960D416	. . WASHER.		16
	17H BACN108-L5L	. . NUT		12
	17J NAS679A4W	. . NUT		16
	17K BACB30DX8-7	. . LOCKBOLT.		24
	17M BACB30DX8-12	. . LOCKBOLT.		8
	17N BACB30DX8-14	. . LOCKBOLT.		8
	17R NAS1080	. . COLLAR.		40
		-----*		
	17V NAS76A7-10P	. . BUSHING		2
	17W 65-48219-2	. . SUPPORT		1
	17X 65-47368-501	. . FITTING, SUPPORT.		4
		ATTACHING PARTS		
	NAS334CPA12	. . BOLT.		4
	AN960PD416	. . WASHER.		4
	NAS679A4W	. . NUT		4
		-----*		

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
32	50	65-25345-1	. FRAME INSTL, STATION 480 STRINGER 5 RH TO STRINGER 25 LH								1
	51	65-25346-1	. FRAME INSTL, STATION 600D STRINGER 5 RH TO STRINGER . 25 LH								1
			. . DOORS, (SEE FIG. 33).								
			. . REQUIRED PLACARDS, (SEE 11-2, FIG. 74).								
52		65-25343-1	. SILL INSTL, MAIN CARGO DOOR LOWER (SEE FIG. 34) . . .							0102	1
52		65-25343-1	. SILL INSTL, MAIN CARGO DOOR LOWER (SEE FIG. 34A). . .							0399	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

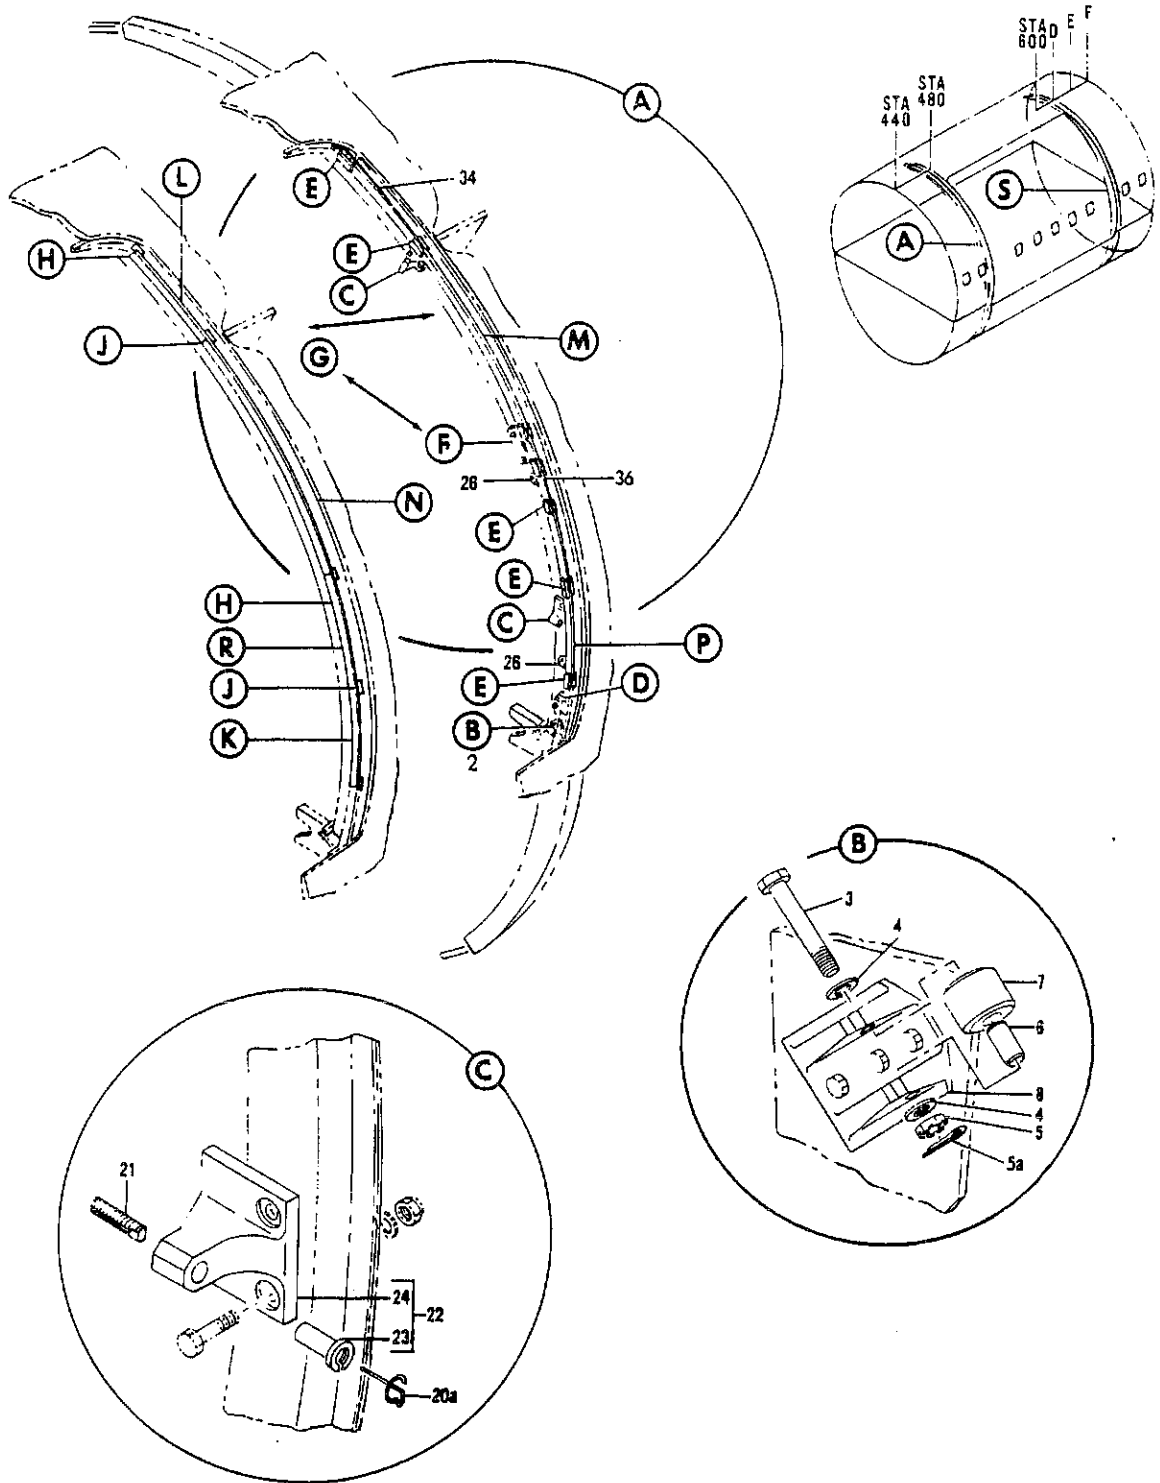


FIGURE 33. FRAME INSTL, STATION 480 AND 6000 STRINGER 5 RH TO 25 LH (DOORS ONLY) (SHEET II)

DETAILED PARTS LIST
52-03-33
PAGE 0

52-03-33

NOV 21/90

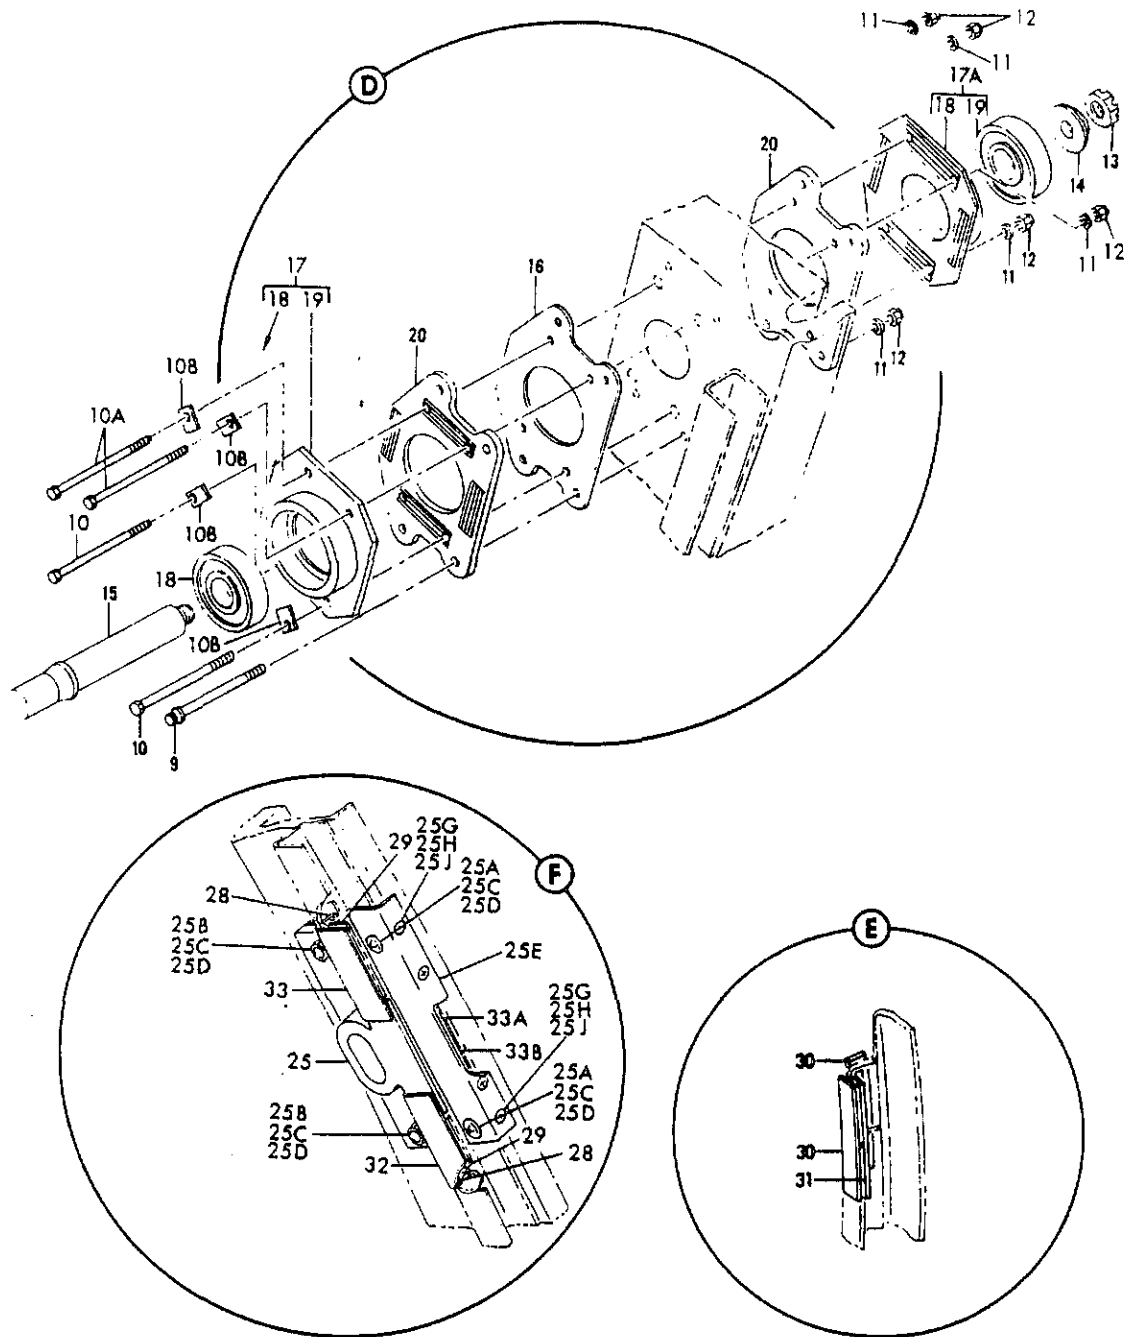


FIGURE 33. FRAME INSTL, STATION 480 AND 600D STRINGER 5 RH TO 25 LH (DOORS ONLY) (SHEET 2)

NOV 21/90

52-03-33

DETAILED PARTS LIST
52-03-33
PAGE 1

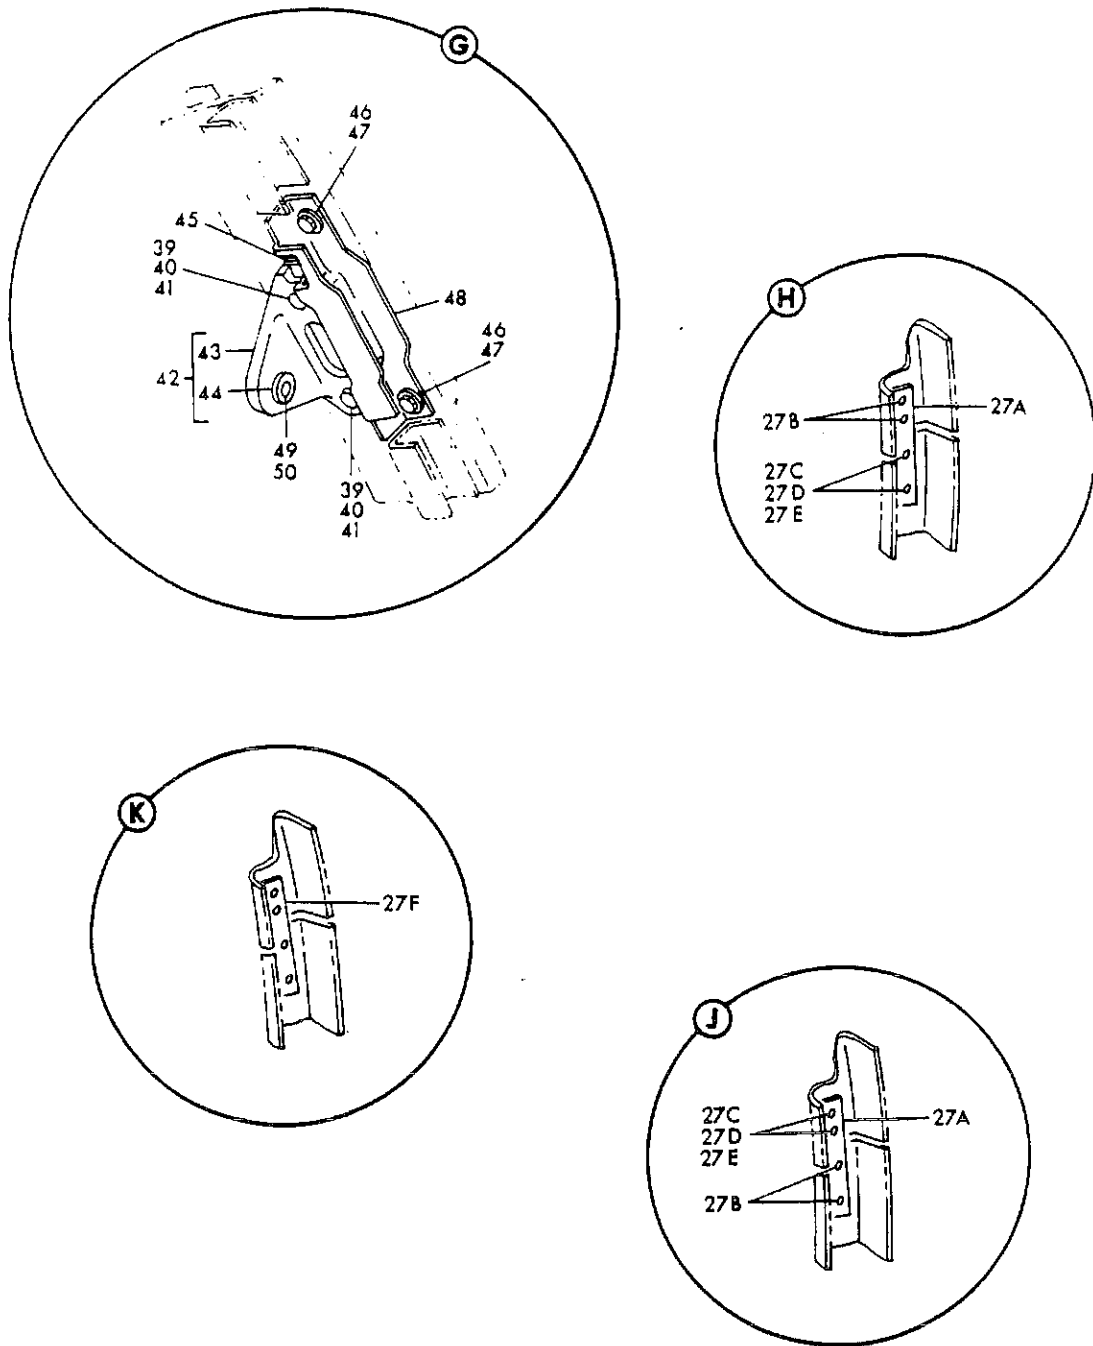


FIGURE 33. FRAME INSTL. STA 480 AND 6000 STRINGER 5 RH TO 25 LH (DOORS ONLY) (SHEET 3)

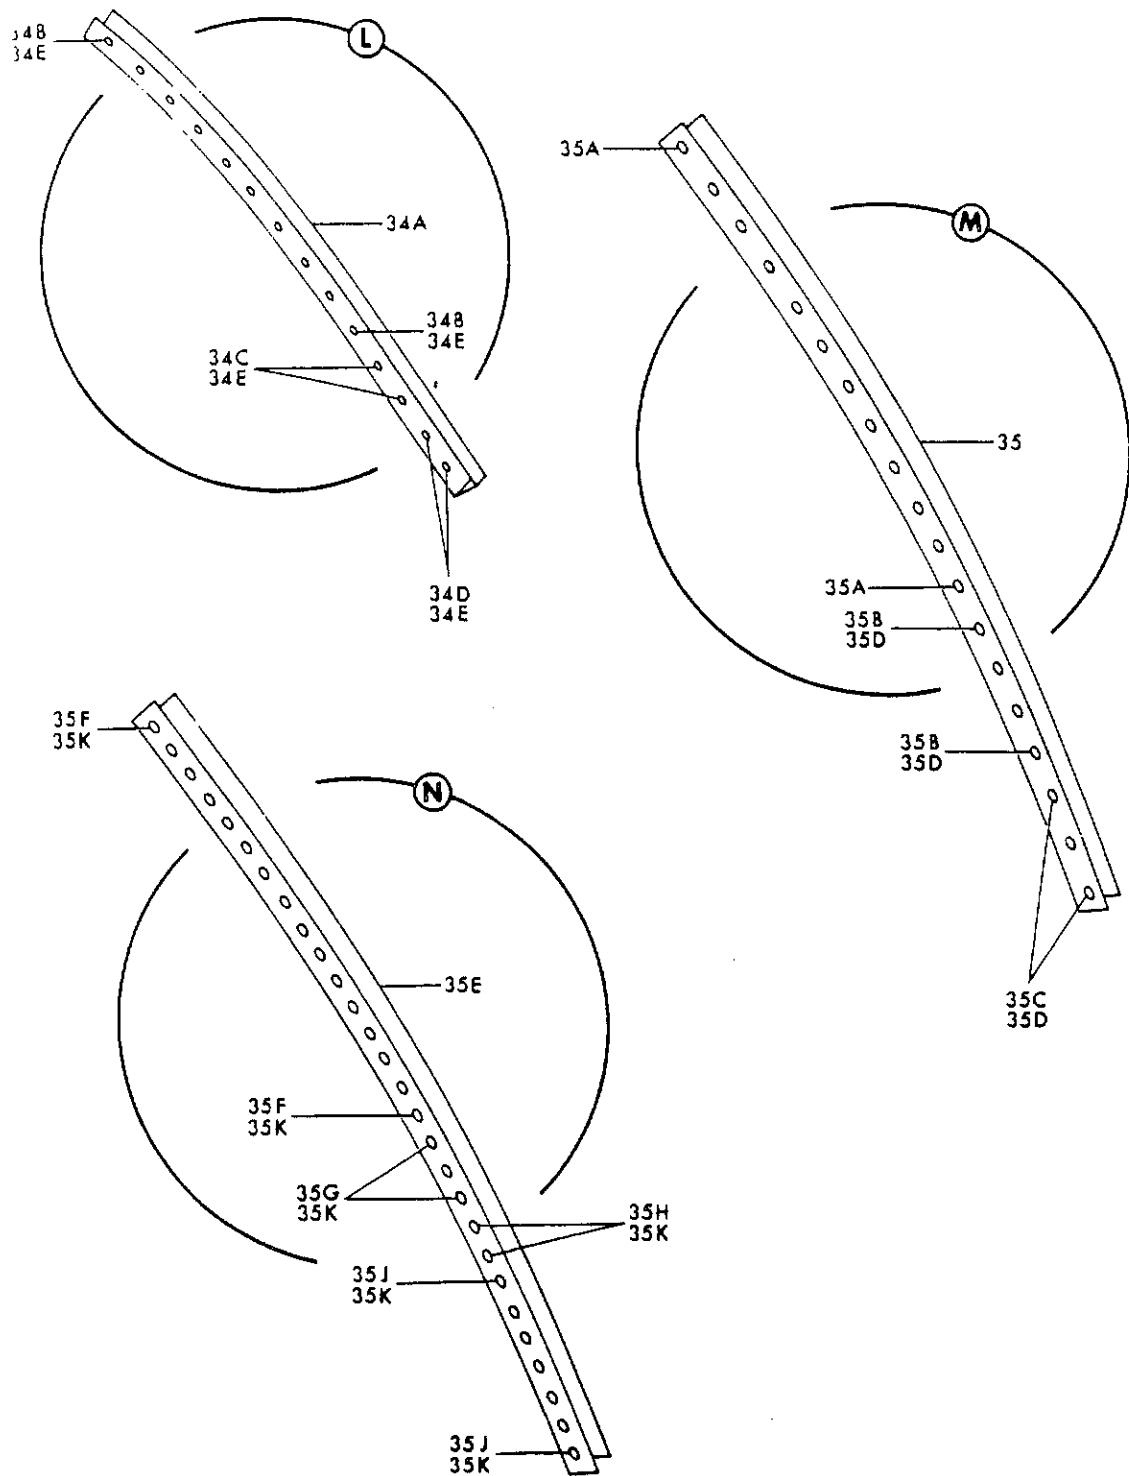


FIGURE 33. FRAME INSTL. STA 480 AND 6000 STRINGER 5 RH TO 25 LH (DOORS ONLY) (SHEET 4)

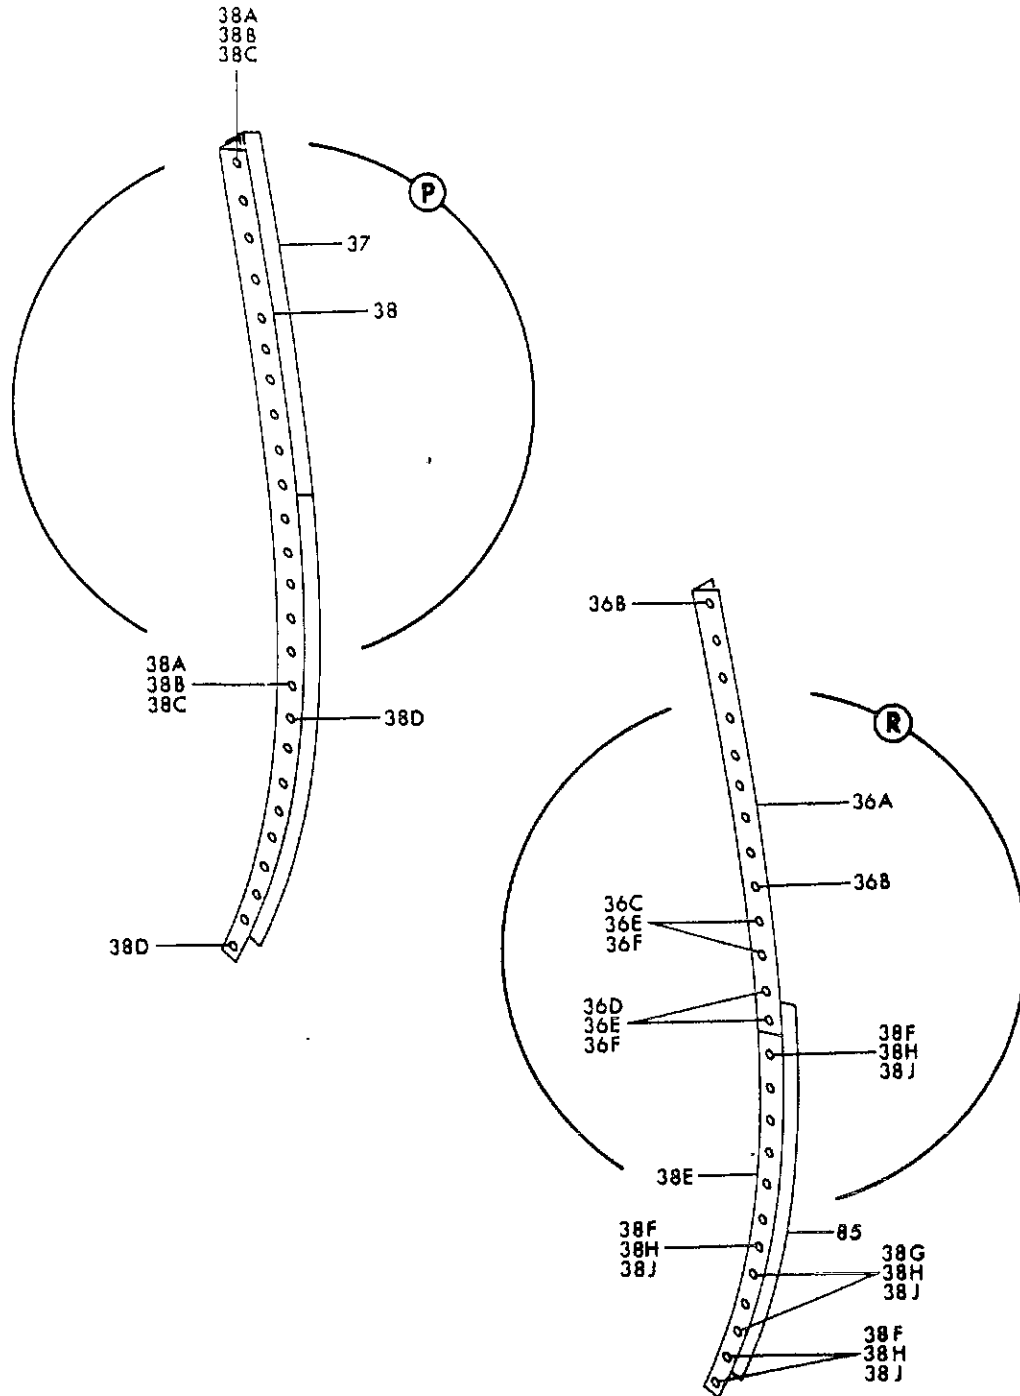


FIGURE 33. FRAME INSTL. STA 480 AND 6000 STRINGER 5 RH TO 25 LH (DOORS ONLY) (SHEET 5)

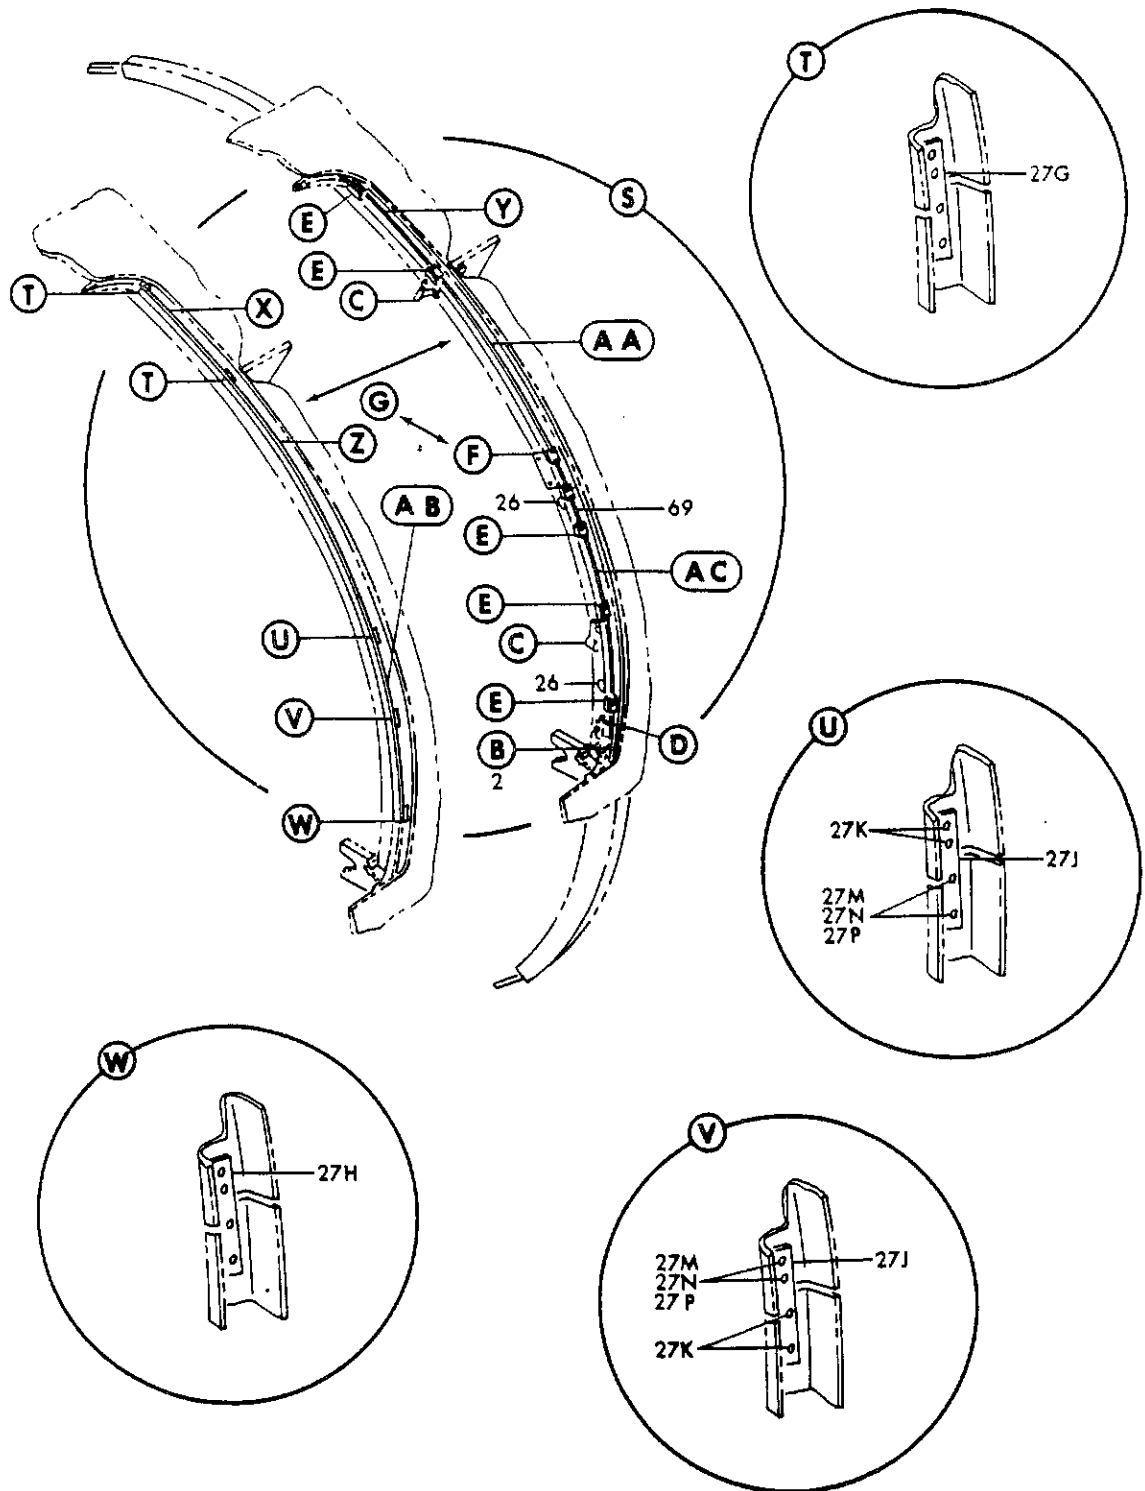


FIGURE 33. FRAME INSTL. STA 480 AND 6000 STRINGER 5 RH TO 25 LH (DOORS ONLY) (SHEET 6)

NOV 21/90

52-03-33

DETAILED PARTS LIST
52-03-33
PAGE 5

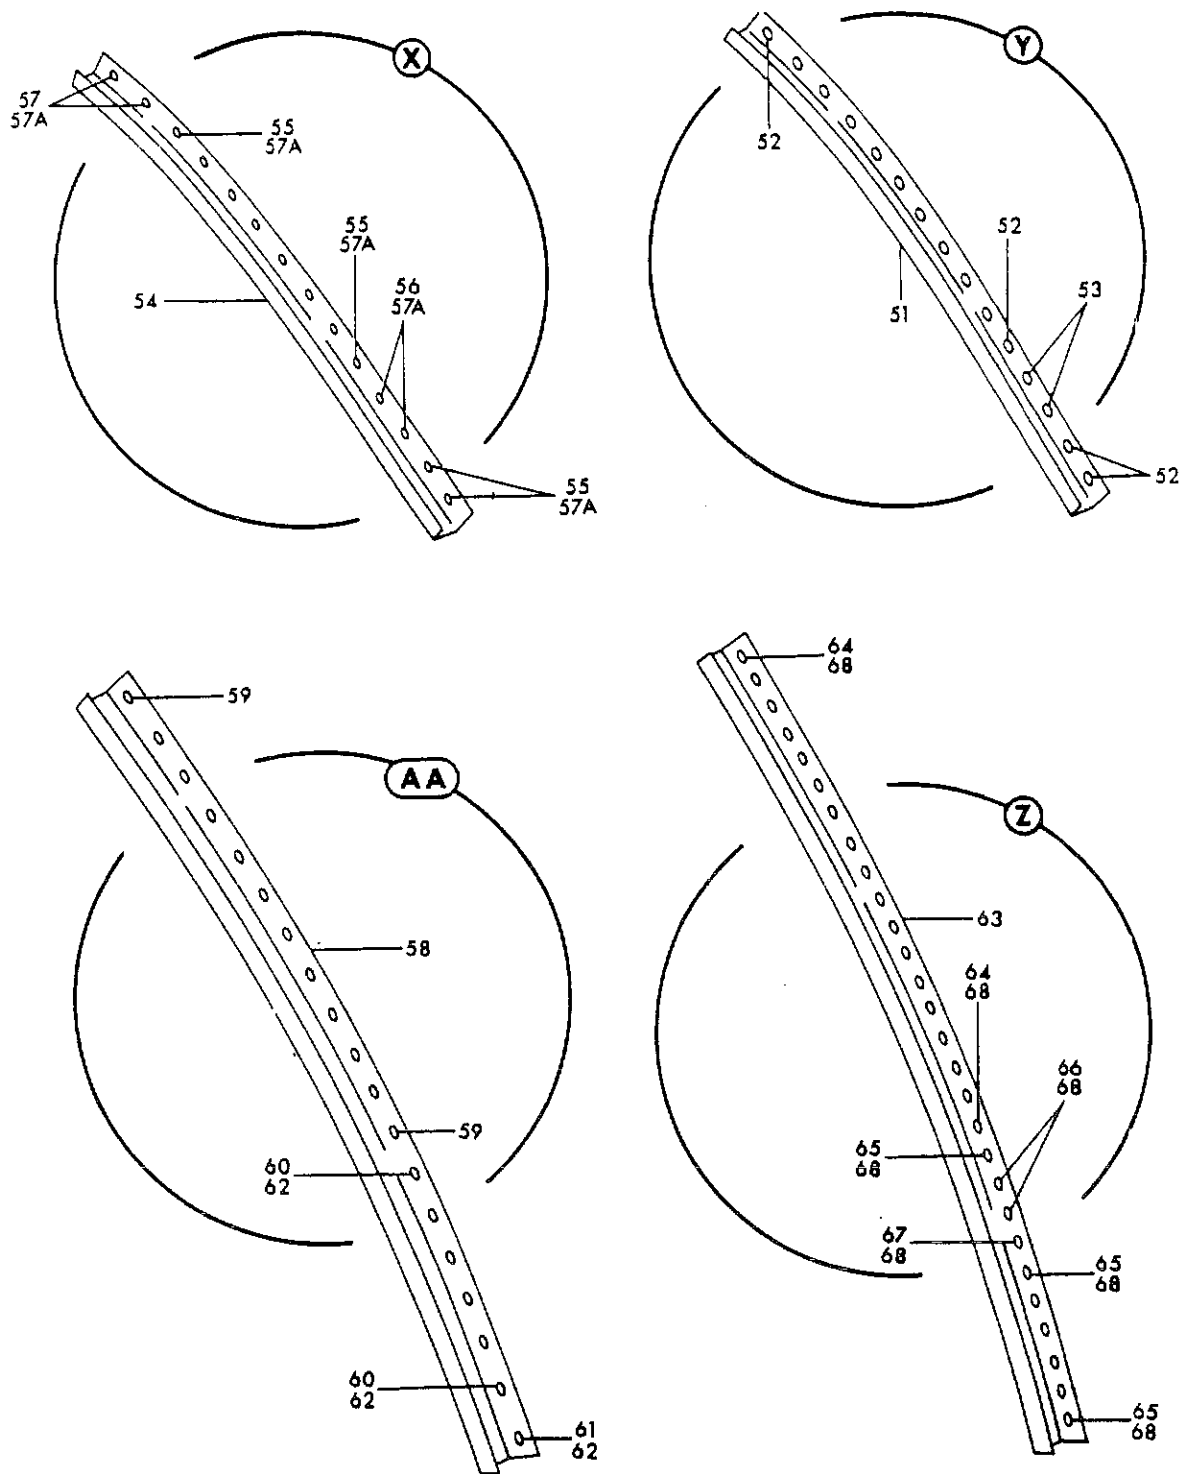


FIGURE 33. FRAME INSTL. STA 480 AND 6000 STRINGER 5 RH TO 25 LH (DOORS ONLY) (SHEET 7)

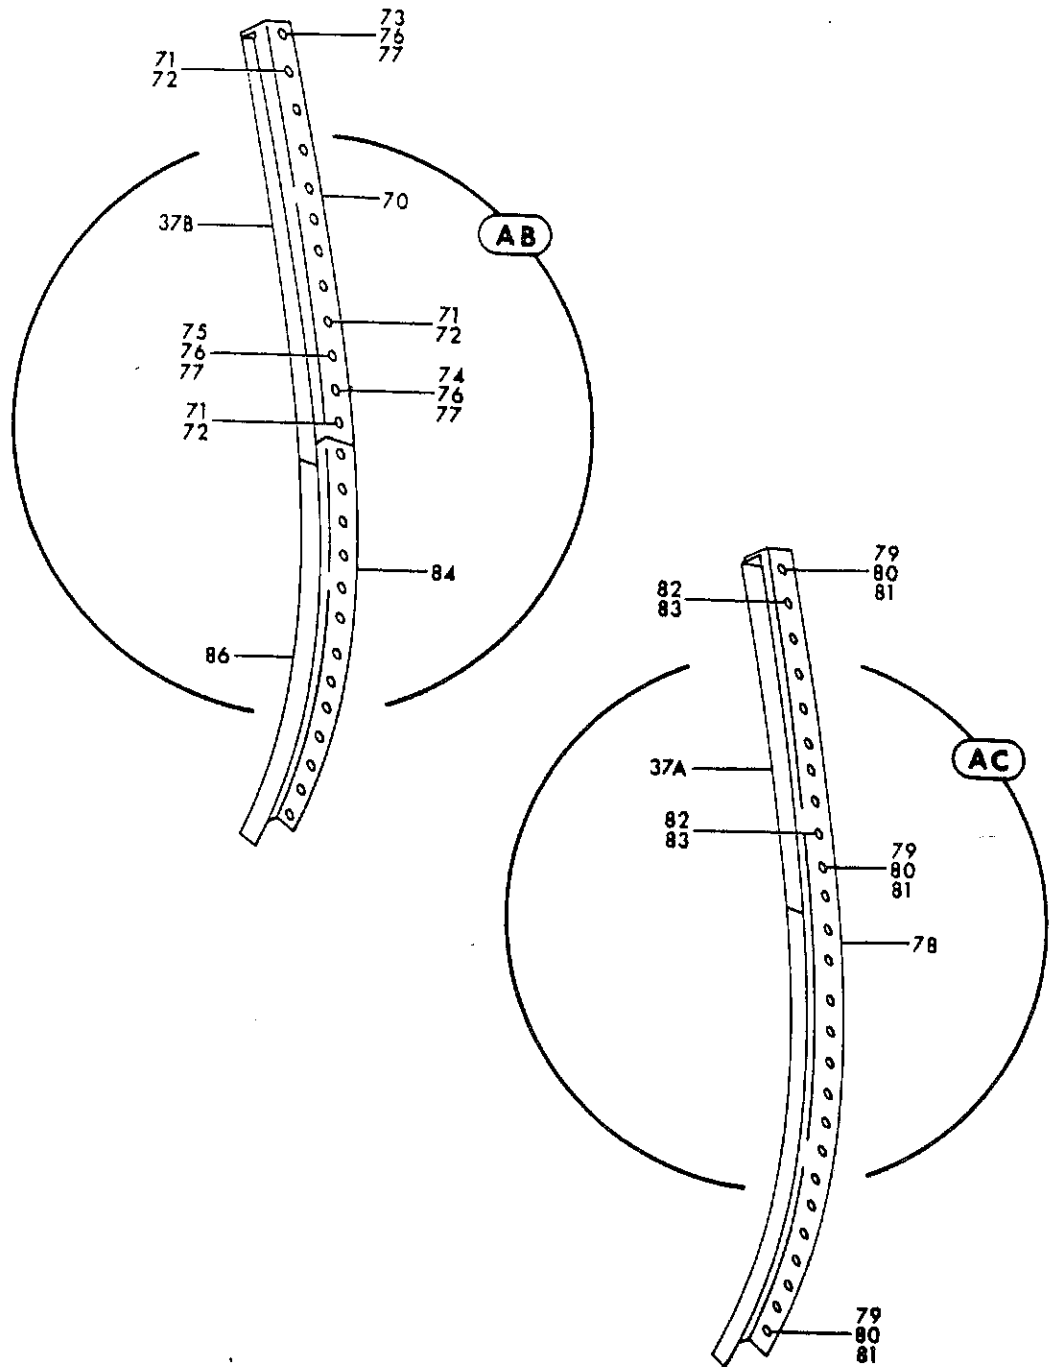


FIGURE 33. FRAME INSTL. STA 480 AND 600D STRINGER 5 RH TO 25 LH (DOORS ONLY) (SHEET 8)

NOV 21/90

52-03-33

DETAILED PARTS LIST
52-03-33
PAGE 7



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
33	65-25345-1	FRAME INSTL, STA 480 STRINGER 5 RH TO 25 LH (DOORS. . . ONLY) (SEE FIG. 32, ITEM 18)								RF
	65-25346-1	FRAME INSTL, STA 600D STRINGER 5 RH TO 25 LH (DOORS. . . ONLY) (SEE FIG. 32, ITEM 19)								RF
2	69-21886-1	GUIDE ASSY, CARGO DOOR ROLLER								1
	BACB30NF5	ATTACHING PARTS								3
	AN960PD516	BOLT, (LENGTH TO BE DETERMINED AT INSTL).								3
	NAS679A5	WASHER.								3
		NUT								3
3	AN6-25	BOLT.								1
4	AN960PD616	WASHER.								2
5	AN310-6	NUT								1
5A	AN380C3-5	PIN								1
6	NAS75-6-107	BUSHING								1
7	BACB10B138	BEARING								1
8	69-21886-5	FITTING, CARGO DOOR ROLLER GUIDE.								1
	65-28707-1	PIN INSTL, STATION 480 MAIN CARGO DOOR HOOK							0102	1
	65-28707-3	PIN INSTL, STATION 480 MAIN CARGO DOOR HOOK							0399	1
	65-28707-2	PIN INSTL, STATION 600D MAIN CARGO DOOR HOOK.							0102	1
	65-28707-4	PIN INSTL, STATION 600D MAIN CARGO DOOR HOOK.							0399	1
9	BACB30MT4-46	BOLT, (USED ON 65-28707-1 AND -3)								4
9	BACB30MT4-52	BOLT, (USED ON 65-28707-2 AND -4)								4
		(OPTIONAL BACB30MT4H-52)								
9	BACB30MT4H-52	BOLT, (USED ON 65-28707-2 AND -4)								4
		(OPTIONAL TO BACB30MT4-52)								
10	BACB30NF4-52	BOLT, (USED ON 65-28707-1 AND -3)								2
10	BACB30NF4-56	BOLT, (USED ON 65-28707-2 AND -4)								2
10A	BACB30NF4-52	BOLT, (USED ON 65-28707-1)							0102	2
10A	BACB30NF4-56	BOLT, (USED ON 65-28707-2)							0102	2
10A	BACB30NF4-54	BOLT, (USED ON 65-28707-3)							0399	2
10A	BACB30NF4-58	BOLT, (USED ON 65-28707-4)							0399	2
10B	65-28707-5	FILLER, RADIUS.							0399	4
11	AN960C416	WASHER.								8
12	NAS679A4W	NUT								8
13	AN320C8	NUT								1
14	66-17218-1	WASHER, CARGO DOOR SPECIAL.								1
15	69-22633-3	PIN, STATION 480 DOOR HOOK (USED ON 65-28707-1. . . AND -3)								1
15	69-22633-4	PIN, STATION 600D DOOR HOOK (USED ON 65-28707-2 . . AND -4)								1
16	69-23300-2	SHIM, BEARING HOUSING LAMINATED								AR
17	69-22627-3	HOUSING ASSY, BEARING							0102	1
17	69-54026-1	HOUSING ASSY, BEARING							0399	1
		(OPTIONAL 69-54026-501)								
17	69-54026-501	HOUSING ASSY, BEARING							0399	1
		(OPTIONAL TO 69-54026-1)								
17A	69-22627-3	HOUSING ASSY, BEARING							0102	1
17A	69-54026-2	HOUSING ASSY, BEARING							0399	1
		(OPTIONAL 69-54026-502)								
17A	69-54026-502	HOUSING ASSY, BEARING							0399	1
		(OPTIONAL TO 69-54026-2)								
18	206WD	BEARING, (V21335)							0102	1
		(OPTIONAL 206MFZ (V21335))								
18	206MFZ	BEARING, (V21335)							0102	1
		(OPTIONAL TO 206WD (V21335))								
18	206MFZ	BEARING, (V21335) (USED ON 69-54026-1 AND -2)							0399	1
18	206MFZ	BEARING, (V21335) (USED ON 69-54026-501 AND -502)							0399	1
		(OPTIONAL 206WD (V21335))								
18	206WD	BEARING, (V21335) (USED ON 69-54026-501 AND -502)							0399	1
		(OPTIONAL TO 206MFZ (V21335))								
19	69-22627-4	HOUSING							0102	1
19	69-54026-3	HOUSING, (USED ON 69-54026-1 AND -501)							0399	1
19	69-54026-4	HOUSING, (USED ON 69-54026-2 AND -502)							0399	1
20	69-22626-2	PLATE, CARGO DOOR LATCH SERRATED.								2
20A	66-16691-1	SPRING, DOOR STOP PIN RETAINER.								2
21	66-12687-1	PIN, DOOR STOP.								2
22	69-20931-5	FITTING ASSY, STATION 480 AND 600D STOP								2
		ATTACHING PARTS								
	NAS1105-11W	BOLT.								2
	NAS1105-16W	BOLT.								2
	AN960PD516	WASHER.								4
	NAS679A5W	NUT								4
MISSING ITEM NUMBERS ARE NOT APPLICABLE										



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
33	23	66-12688-1		1
	24	69-20931-4		1
	25	69-22645-1	0102	1
	25A	NAS1104-15W	0102	2
	25B	NAS1104-15	0102	2
	25C	AN960PD16	0102	4
	25D	NAS679A4W	0102	4
	26	20050		2
		PLATE, ANCHOR (V95957).		
		ATTACHING PARTS		
		SCREW		2
		SCREW		2
		WASHER.		4
		NUT		4
	27A	69-54289-1	0399	4
		PLATE, STATION 480 SEALING (USED ON 65-25345-1)		
		ATTACHING PARTS		
	27B	MS20470D4	0399	8
	27C	NAS623-2-5	0399	8
	27D	AN960PD8	0399	8
	27E	NAS679A08W	0399	8
		RIVET		
		SCREW		
		WASHER.		
		NUT		
	27F	66-16931-3	0399	1
		PLATE, STATION 480 SEALING (USED ON 65-25345-1)		
		ATTACHING PARTS		
		RIVET	0399	4
	27G	69-54289-1	0399	2
		PLATE, STATION 6000 SEALING (USED ON 65-25346-1)		
		ATTACHING PARTS		
		RIVET	0399	8
	27H	66-16931-3	0399	1
		PLATE, STATION 6000 SEALING (USED ON 65-25346-1)		
		ATTACHING PARTS		
		RIVET	0399	4
	27J	69-54289-1	0399	2
		PLATE, STATION 6000 SEALING (USED ON 65-25346-1)		
		ATTACHING PARTS		
		RIVET	0399	4
	27K	MS20470D4	0399	4
	27M	NAS623-2-5	0399	4
	27N	AN960PD8	0399	4
	27P	NAS679A08W	0399	4
		SCREW		
		WASHER.		
		NUT		
	28	66-16931-1	0102	2
	29	66-16931-2	0102	2
	30	66-16931-3	0102	10
	31	66-16931-4	0102	5
	32	66-16931-501	0102	1
	33	66-16931-502	0102	1
		PLATE, STATION 480 AND 6000 SEALING		
		ATTACHING PARTS		
		RIVET	0102	52
R	33A	69-35275-1	0350	1
	33A	69-35275-1	0102	1
R	33A	69-35275-2	0350	1
	33A	69-35275-2	0102	1
R	33B	65-25345-46	0350	1
	33B	65-25345-46	0102	1
R	33B	65-25346-39	0350	1
	33B	65-25346-39	0102	1
	34	69-29233-1	0102	1
		DEPRESSOR, TRANSITION UPPER SEAL (USED ON 65-25345-1)		
		ATTACHING PARTS		
		RIVET	0102	14
	34A	69-54008-1	0399	1
		DEPRESSOR, TRANSITION UPPER SEAL (USED ON 65-25345-1)		
		ATTACHING PARTS		
	34B	BACB30NF3-6	0399	10
	34C	BACB30NF3-11	0399	2
	34D	BACB30NF3-3	0399	2
	34E	AN960PD10	0399	14
		BOLT.		
		BOLT.		
		BOLT.		
		WASHER.		
	35	65-25345-44	0102	1
		DEPRESSOR, SEAL (USED ON 65-25345-1)		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
33			ATTACHING PARTS		
35A	MS20470D5	.	RIVET	0102	12
35B	NAS1103-4	.	BOLT.	0102	4
35C	NAS1103-6	.	BOLT.	0102	3
35D	AN960PD10	.	WASHER.	0102	7
			-----*		
35E	65-25345-50	.	DEPRESSOR, SEAL (USED ON 65-25345-1).	0399	1
			ATTACHING PARTS		
35F	BACB30NF3-3	.	BOLT.	0399	16
35G	BACB30NF3-7	.	BOLT.	0399	3
35H	BACB30NF3-11	.	BOLT.	0399	2
35J	BACB30NF3-6	.	BOLT.	0399	7
35K	AN960PD10	.	WASHER.	0399	28
			-----*		
36	65-25345-43	.	DEPRESSOR, SEAL (USED ON 65-25345-1).	0102	1
			ATTACHING PARTS		
	NAS1103-6	.	BOLT.	0102	7
	AN960PD10	.	WASHER.	0102	7
			-----*		
36A	65-25345-49	.	ANGLE, (USED ON 65-25345-1)	0399	1
			ATTACHING PARTS		
36B	MS20426D8	.	RIVET	0399	9
36C	BACB30NF3-8	.	BOLT.	0399	2
36D	BACB30NF3-7	.	BOLT.	0399	2
36E	AN960PD10	.	WASHER.	0399	4
36F	NAS679A3W	.	NUT	0399	4
			-----*		
37	69-24419-3	.	ANGLE, MAIN CARGO DOOR SEAL DEPRESSOR (USED ON. 65-25345-1)	0102	1
37	69-24419-5	.	ANGLE, MAIN CARGO DOOR SEAL DEPRESSOR (USED ON. 65-25345-1)	0399	1
			ATTACHING PARTS		
	MS20470D5	.	RIVET	0102	6
	NAS623-2-5	.	SCREW	0399	6
	AN960PD8	.	WASHER.	0399	6
	NAS679A08W	.	NUT	0399	6
			-----*		
37A	69-24419-4	.	ANGLE, MAIN CARGO DOOR SEAL DEPRESSOR (USED ON. 65-25346-1)	0102	1
			ATTACHING PARTS		
	MS20470D5	.	RIVET	0102	7
			-----*		
37B	69-24419-6	.	ANGLE, MAIN CARGO DOOR SEAL DEPRESSOR (USED ON. 65-25346-1)	0399	1
			ATTACHING PARTS		
	NAS623-2-5	.	SCREW	0399	6
	AN960PD8	.	WASHER.	0399	6
	NAS679A08W	.	NUT	0399	6
			-----*		
38	65-25345-45	.	DEPRESSOR, SEAL (USED ON 65-25345-1). (OPTIONALS 65-25345-47 AND 69-52554-2)	0102	1
38	65-25345-47	.	ANGLE, SEAL DEPRESSOR (USED ON 65-25345-1). (OPTIONAL TO 65-25345-45)	0102	1
38	69-52554-2	.	ANGLE, SEAL DEPRESSOR (USED ON 65-25345-1). (OPTIONAL TO 65-25345-45)	0102	1
			ATTACHING PARTS		
38A	NAS1103-8	.	BOLT.	0102	16
38B	AN960PD10	.	WASHER.	0102	16
38C	NAS679A3W	.	NUT	0102	16
38D	MS20426D8	.	RIVET	0102	9
			-----*		
38E	65-25345-48	.	ANGLE, (USED ON 65-25345-1)	0399	1
			ATTACHING PARTS		
38F	BACB30NF3-6	.	BOLT.	0399	9
38G	BACB30NF3-3	.	BOLT.	0399	3
38H	AN960PD10	.	WASHER.	0399	12
38J	NAS679A3W	.	NUT	0399	12
			-----*		
39	BACB30NF5-26	.	BOLT, (ADDED BY SB 2628).	0102	2
40	AN960PD516	.	WASHER, (ADDED BY SB 2628).	0102	2
41	BACN10JC5	.	NUT, (ADDED BY SB 2628)	0102	2
			(OPTIONAL NAS679A5 (ADDED BY SB 2628))		
41	NAS679A5	.	NUT, (ADDED BY SB 2628) (OPTIONAL TO BACN10JC5 (ADDED BY SB 2628))	0102	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
33 42	69-54256-1		. FITTING ASSY, STOP (ADDED BY SB 2628)	0102	1
45	69-54497-1		. SHIM, (ADDED BY SB 2628).	0102	1
			(OPTIONAL 69-54497-2 (ADDED BY SB 2628))		
45	69-54497-2		. SHIM, (ADDED BY SB 2628).	0102	1
			(OPTIONAL TO 69-54497-1 (ADDED BY SB 2628))		
46	BACB30NF4-11		. BOLT, (ADDED BY SB 2628).	0102	2
47	AN960PD416		. WASHER, (ADDED BY SB 2628).	0102	2
48	69-54470-2		. DEPRESSOR, SEAL (ADDED BY SB 2628).	0102	1
49	66-12687-6		. PIN, DOOR STOP (ADDED BY SB 2628).	0102	1
50	66-16691-1		. SPRING, PIN RETAINER (ADDED BY SB 2628).	0102	1
51	69-29233-2		. DEPRESSOR, TRANSITION UPPER SEAL (USED ON 65-25346-1)	0102	1
			ATTACHING PARTS		
52	MS20470D5		. RIVET	0102	13
53	MS20426D5		. RIVET	0102	2
			-----*		
54	69-54008-4		. DEPRESSOR, TRANSITION UPPER SEAL (USED ON 65-25346-1)	0399	1
			ATTACHING PARTS		
55	BACB30NF3-4		. BOLT.	0399	10
56	BACB30NF3-11		. BOLT.	0399	2
57	BACB30NF3-6		. BOLT.	0399	2
57A	AN960PD10		. WASHER.	0399	14
			-----*		
58	65-25346-36		. DEPRESSOR, SEAL (USED ON 65-25346-1).	0102	1
			ATTACHING PARTS		
59	MS20470D5		. RIVET	0102	12
60	NAS1103-4		. BOLT.	0102	6
61	NAS1103-6		. BOLT.	0102	1
62	AN960PD10		. WASHER.	0102	7
			-----*		
63	65-25346-43		. DEPRESSOR, SEAL (USED ON 65-25346-1).	0399	1
			ATTACHING PARTS		
64	BACB30NF3-4		. BOLT.	0399	18
65	BACB30NF3-7		. BOLT.	0399	7
66	BACB30NF3-11		. BOLT.	0399	2
67	BACB30NF3-8		. BOLT.	0399	1
68	AN960PD10		. WASHER.	0399	28
			-----*		
69	65-25346-37		. DEPRESSOR, SEAL (USED ON 65-25346-1).	0102	1
			ATTACHING PARTS		
	NAS1103-6		. BOLT.	0102	7
	AN960PD10		. WASHER.	0102	7
			-----*		
70	65-25346-42		. DEPRESSOR, SEAL (USED ON 65-25346-1).	0399	1
			ATTACHING PARTS		
71	BACB30GW6-8		. BOLT.	0399	9
72	BACC30K6		. COLLAR.	0399	9
73	BACB30NF3-7		. BOLT.	0399	1
74	BACB30NF3-9		. BOLT.	0399	1
75	BACB30NF3-10		. BOLT.	0399	1
76	AN960PD10		. WASHER.	0399	3
77	NAS679A3W		. NUT	0399	3
			-----*		
78	65-25346-38		. DEPRESSOR, SEAL (USED ON 65-25346-1).	0102	1
			(OPTIONALS 65-25346-41 AND 69-52554-1)		
78	65-25346-41		. ANGLE, SEAL DEPRESSOR (USED ON 65-25346-1).	0102	1
			(OPTIONAL TO 65-25346-38)		
78	69-52554-1		. ANGLE, SEAL DEPRESSOR (USED ON 65-25346-1).	0102	1
			(OPTIONAL TO 65-25346-38)		
			ATTACHING PARTS		
	NAS1103-8		. BOLT.	0102	18
	AN960PD10		. WASHER.	0102	18
81	NAS679A3W		. NUT	0102	18
82	BACB30P6-8		. BOLT.	0102	8
83	BACC30K6		. COLLAR.	0102	8
			-----*		
84	65-25346-44		. DEPRESSOR, SEAL (USED ON 65-25346-1).	0399	1
			ATTACHING PARTS		
	BACB30NF3-7		. BOLT.	0399	13
	AN960PD10		. WASHER.	0399	13
	NAS679A3W		. NUT	0399	13
			-----*		
85	69-32554-4		. ANGLE, (USED ON 65-25345-1)	0399	1
			ATTACHING PARTS		
	MS20470D5		. RIVET	0399	10
			-----*		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *707*
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
33	86	69-52554-3 MS20470D5	. ANGLE, (USED ON 65-25346-1)							0399	1
			ATTACHING PARTS								
			. RIVET							0399	11
			-----*								
			. FOR REFERENCE TO OTHER FRAME DETAILS, SEE NHA								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

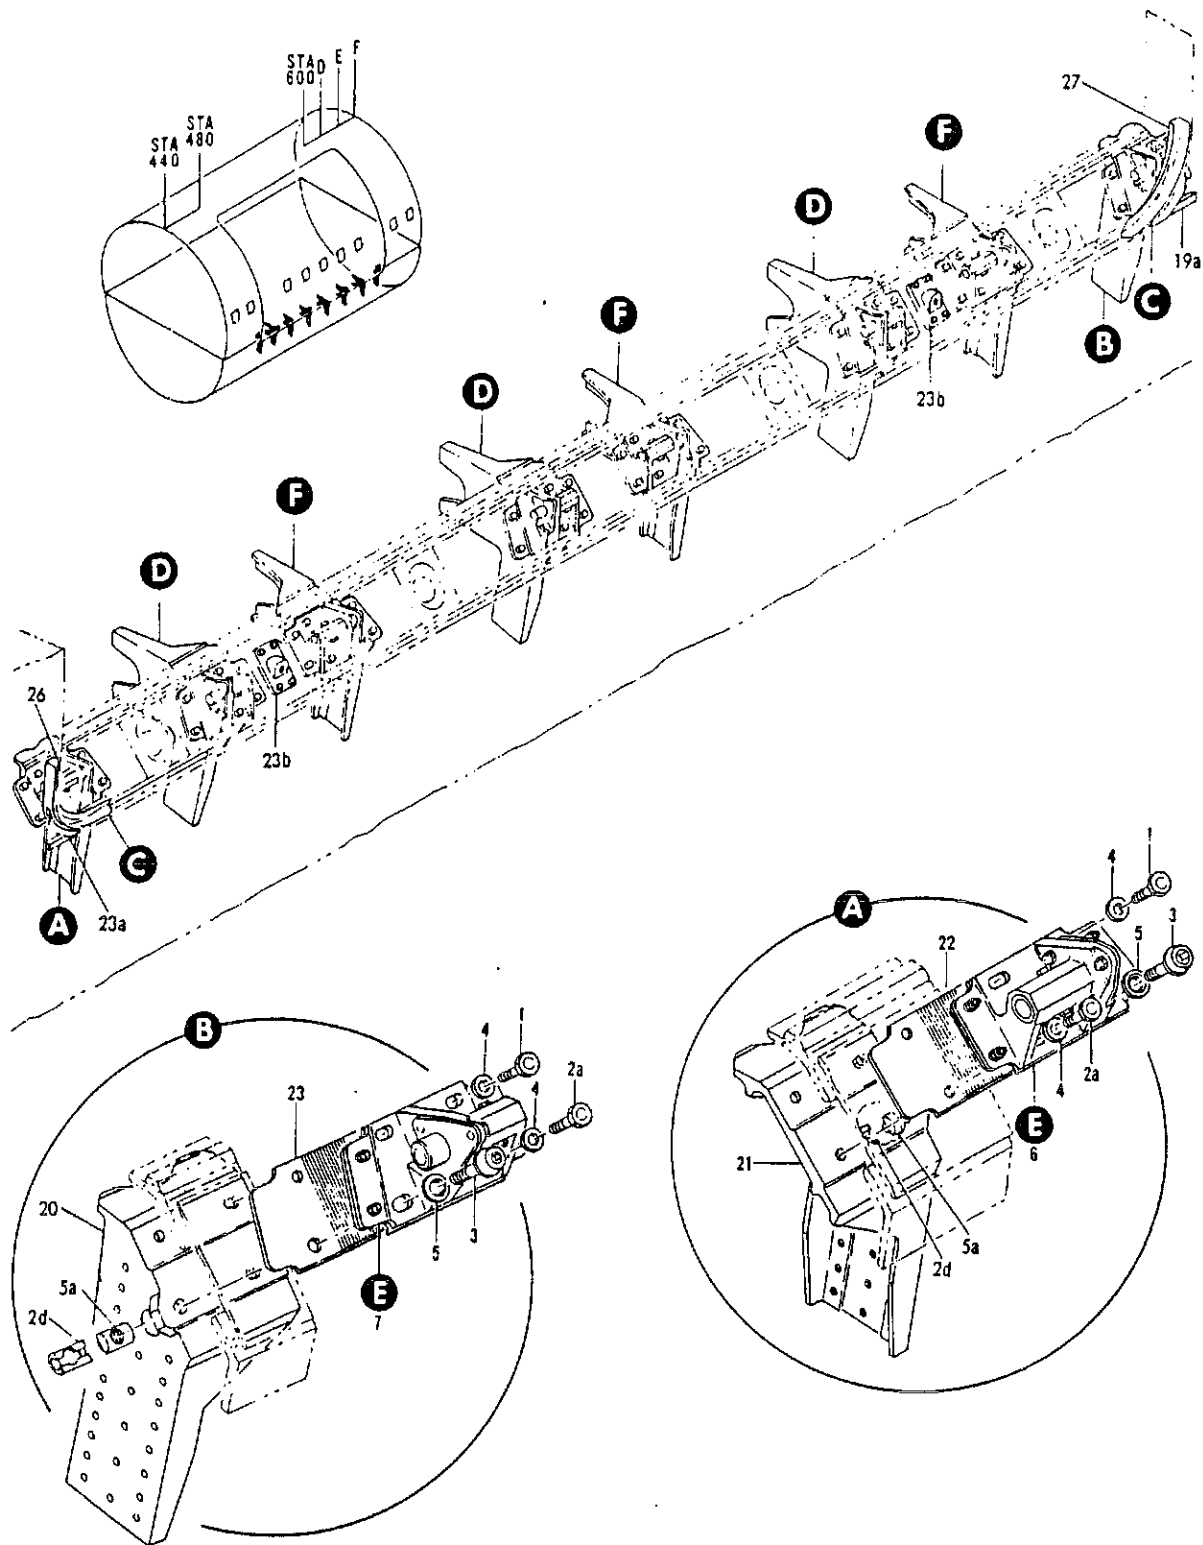


FIGURE 34. SILL INSTL, MAIN CARGO DOOR LOWER (SHEET 1)

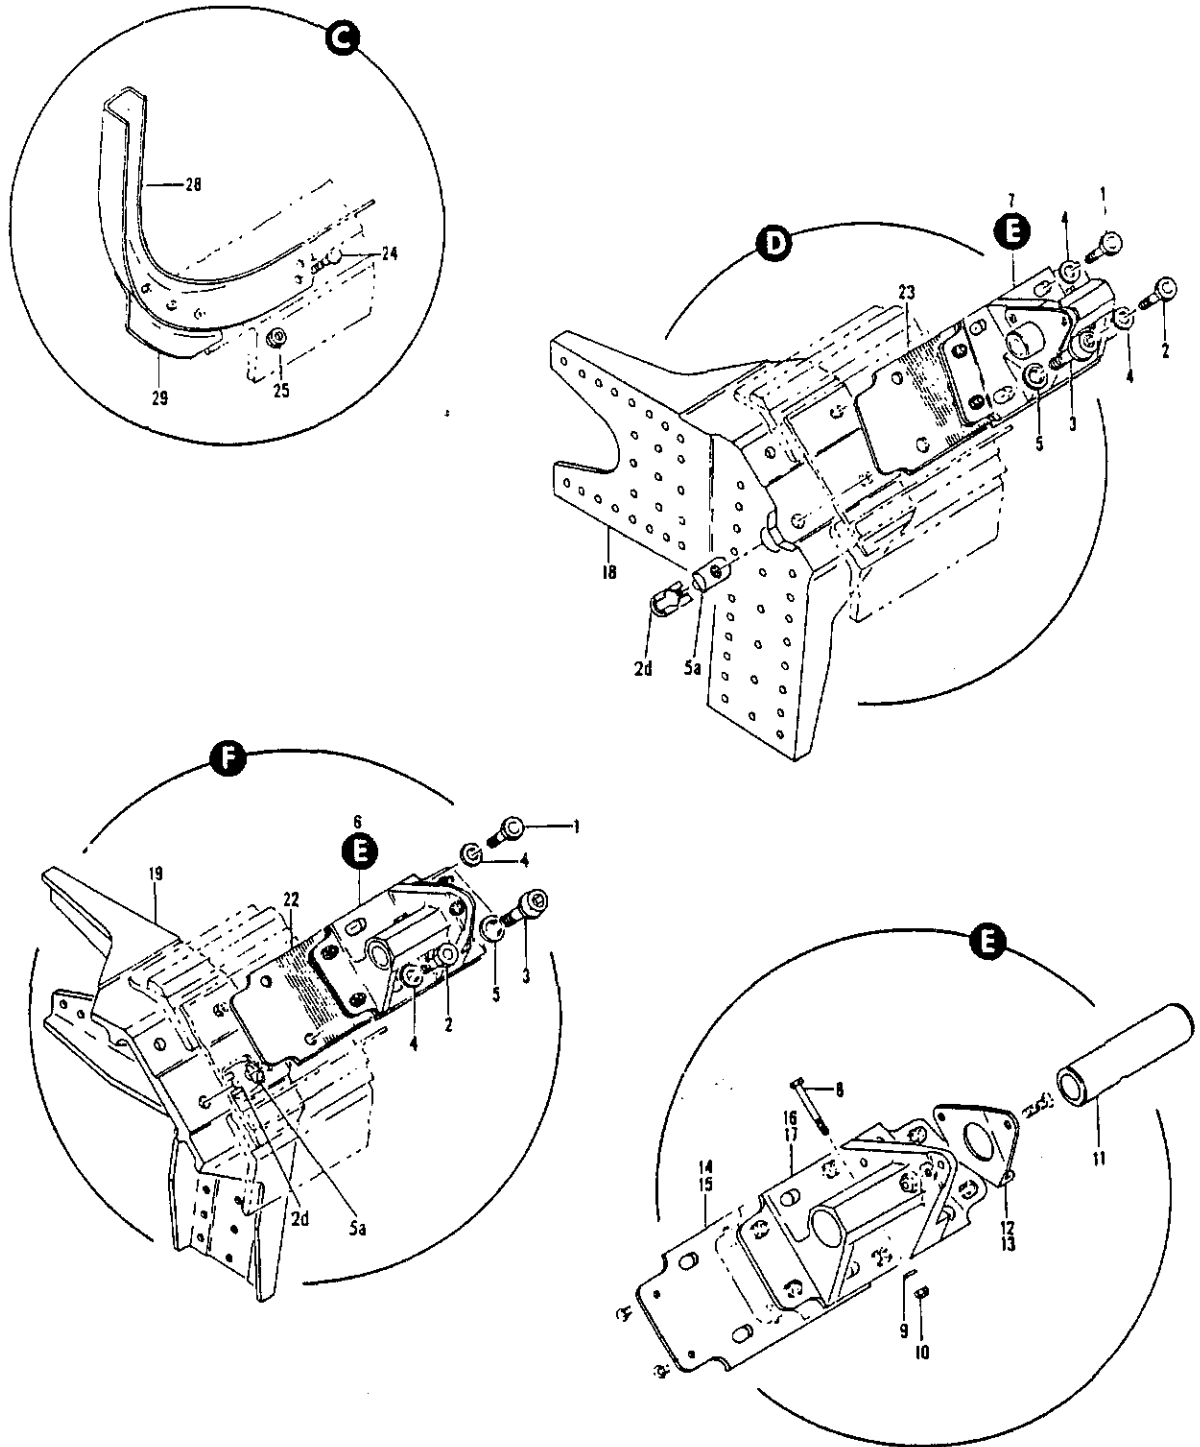


FIGURE 34. SILL INSTL, MAIN CARGO DOOR LOWER (SHEET 2)

NOV 21/90

52-03-34

DETAILED PARTS LIST
52-03-34
PAGE 1

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
34	65-25343-1		SILL INSTL, MAIN CARGO DOOR LOWER (SEE FIG. 32, ITEM. 52)	0102	RF
1	NAS1308-27		. BOLT.	0102	16
2	NAS1308-30		. BOLT.	0102	6
2A	MS20008-30		. BOLT.	0102	2
2D	BACR10V10		. RETAINER.	0102	8
3	MS20010-28		. BOLT.	0102	8
4	MS20002C8		. WASHER.	0102	24
5	MS20002C10		. WASHER.	0102	8
5A	BACN10CP10L		. NUT, CYLINDRICAL.	0102	8
6	65-25771-1		. FITTING ASSY, LATCH PIN	0102	4
7	65-25771-2		. FITTING ASSY, LATCH PIN	0102	4
8	NAS1303-22W		. BOLT.	0102	1
9	AN960-10		. WASHER.	0102	1
10	NAS679A3W		. NUT	0102	1
11	6-83137-2000		. PIN, CARGO DOOR LATCH FITTING	0102	1
12	69-20189-1		. PLATE, LATCH FITTING BEARING (USED ON 65-25771-1)	0102	1
13	69-20189-2		. PLATE, LATCH FITTING BEARING (USED ON 65-25771-2)	0102	1
			ATTACHING PARTS		
	NAS517-3-6		. SCREW	0102	1
	NAS517-3-10		. SCREW	0102	1
	AN960-10		. WASHER.	0102	2
	NAS679A3W		. NUT	0102	2
14	69-21245-1		. PLATE, CARGO DOOR LATCH FITTING SERRATED (USED ON 65-25771-1)	0102	1
15	69-21245-2		. PLATE, CARGO DOOR LATCH FITTING SERRATED (USED ON 65-25771-2)	0102	1
			ATTACHING PARTS		
	NAS517-5-7		. SCREW	0102	4
	NAS517-5-10		. SCREW	0102	2
	69-21247-1		. SHIM, LAMINATED (OPTIONAL 69-21247-2)	0102	1
	69-21247-2		. SHIM, LAMINATED (OPTIONAL TO 69-21247-1)	0102	1
	AN960-516		. WASHER.	0102	6
	NAS679A5		. NUT	0102	6
16	65-25769-1		. FITTING, CARGO DOOR LATCH (USED ON 65-25771-1)	0102	1
17	65-25769-2		. FITTING, CARGO DOOR LATCH (USED ON 65-25771-2)	0102	1
18	65-27187-9		. FITTING, LATCH SUPPORT. (OPTIONAL 65-27187-503)	0102	3
18	65-27187-503		. FITTING, LATCH SUPPORT. (OPTIONAL TO 65-27187-9)	0102	3
19	65-25343-503		. FITTING, LATCH SUPPORT (ALTERED FROM 65-27187-504) (OPTIONAL TO 65-25343-54)	0102	3
19	65-25343-54		. FITTING, LATCH SUPPORT (ALTERED FROM 65-27187-10) (OPTIONAL 65-25343-503)	0102	3
			ATTACHING PARTS		
	BACB30N8-5		. BOLT.	0102	96
	BACB30P8-17		. BOLT.	0102	18
	BACB30N10-7		. BOLT.	0102	AR
	BACB30N10-8		. BOLT.	0102	AR
	AN960PD10L		. WASHER.	0102	12
	BACC30K8		. COLLAR.	0102	AR
	BACC30K10		. COLLAR.	0102	AR
19A	69-22195-2		. BAR, SPLICE	0102	1
			ATTACHING PARTS		
	NAS1104-18W		. BOLT.	0102	12
	AN960PD416L		. WASHER.	0102	12
	MS21042L4		. NUT	0102	12
20	65-27187-11		. FITTING, LATCH SUPPORT.	0102	1
21	65-27187-12		. FITTING, LATCH SUPPORT.	0102	1
			ATTACHING PARTS		
	BACB30N8-17		. BOLT.	0102	8
	BACB30N8-19		. BOLT.	0102	2
	BACB30N10-6		. BOLT.	0102	20
	BACB30N10-8		. BOLT.	0102	16
	BACB30P8-17		. BOLT.	0102	8
	BACC30K8		. COLLAR.	0102	18
	BACC30K10		. COLLAR.	0102	36

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
34 22	69-21265-1	. PLATE, CARGO DOOR SILL SERRATED	0102	4
23	69-21265-2	. PLATE, CARGO DOOR SILL SERRATED	0102	4
		ATTACHING PARTS		
	BACB30P8-5	. BOLT.	0102	AR
	BACB30P8-10	. BOLT.	0102	AR
	BACC30K8	. COLLAR.	0102	14
	MS20426D8	. RIVET	0102	AR
		-----*		
23A	69-22195-1	. BAR, SPLICE	0102	1
		ATTACHING PARTS		
	MS20470D8	. RIVET	0102	8
		(OPTIONALS NAS1104-14B, NAS1104-18W USED WITH AN960PD416L AND NAS679A4W)		
	NAS1104-14B	. BOLT.	0102	4
		(OPTIONAL TO MS20470D8)		
	NAS1104-18W	. BOLT.	0102	4
		(OPTIONAL TO MS20470D8)		
	AN960PD416L	. WASHER, (USED WITH NAS1104-14B AND NAS1104-18W) . . .	0102	8
		(OPTIONAL TO MS20470D8)		
	NAS679A4W	. NUT, (USED WITH NAS1104-14B AND NAS1104-18W).	0102	8
		(OPTIONAL TO MS20470D8)		
		-----*		
23B	69-24195-1	. BRACKET, SWITCH	0102	2
		ATTACHING PARTS		
	NAS623-3-5W	. SCREW	0102	4
	AN960PD10L	. WASHER.	0102	4
	NAS463WDD10	. SHIM.	0102	8
		-----*		
24	BACB30N8-7	. BOLT.	0102	4
25	BACC30K8	. COLLAR.	0102	4
26	65-28708-1	. DEPRESSOR INSTL, MAIN CARGO DOOR LOWER CORNER SEAL. .	0102	1
27	65-28708-2	. DEPRESSOR INSTL, MAIN CARGO DOOR LOWER CORNER SEAL. .	0102	1
28	65-28708-5	. . DEPRESSOR, MAIN CARGO DOOR LOWER CORNER SEAL (USED ON 65-28708-1)	0102	1
28	65-28708-6	. . DEPRESSOR, MAIN CARGO DOOR LOWER CORNER SEAL (USED ON 65-28708-2)	0102	1
29	66-16958-501	. . ANGLE ASSY, MAIN CARGO DOOR SEAL DEPRESSOR SUPPORT (USED ON 65-28708-1)	0102	1
29	66-16958-502	. . ANGLE ASSY, MAIN CARGO DOOR SEAL DEPRESSOR SUPPORT (USED ON 65-28708-2)	0102	1
		ATTACHING PARTS		
	NAS221-7	. . SCREW	0102	6
		-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

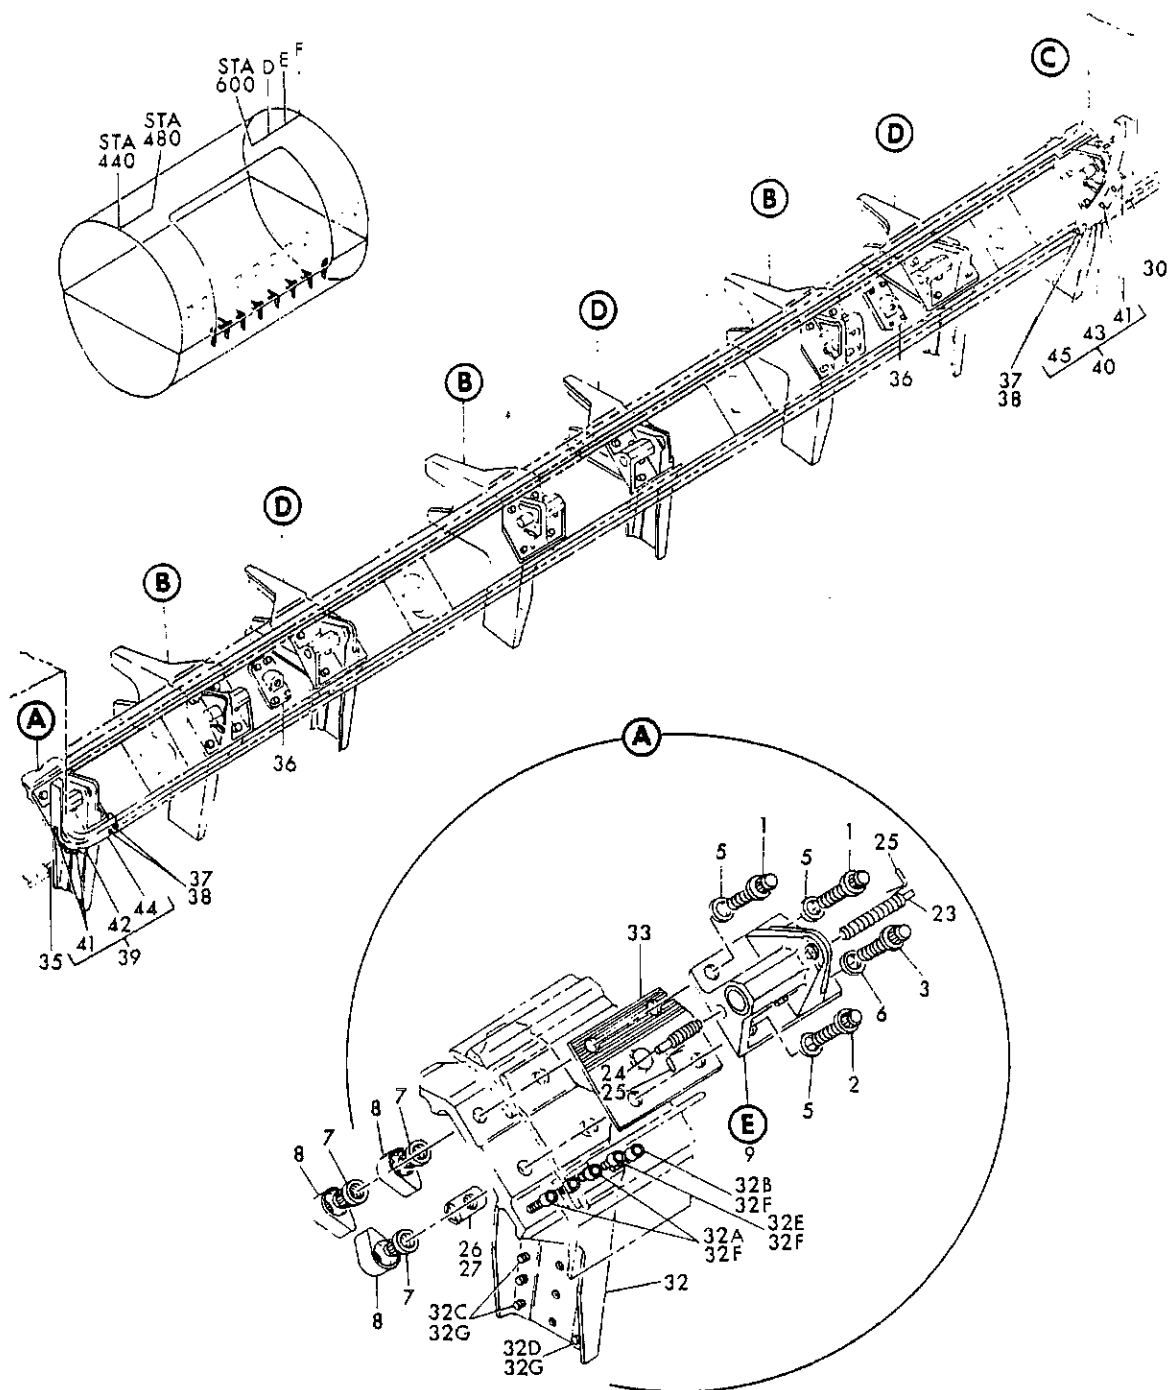


FIGURE 34A. SILL INSTL, MAIN CARGO LOWER (SHEET 1)

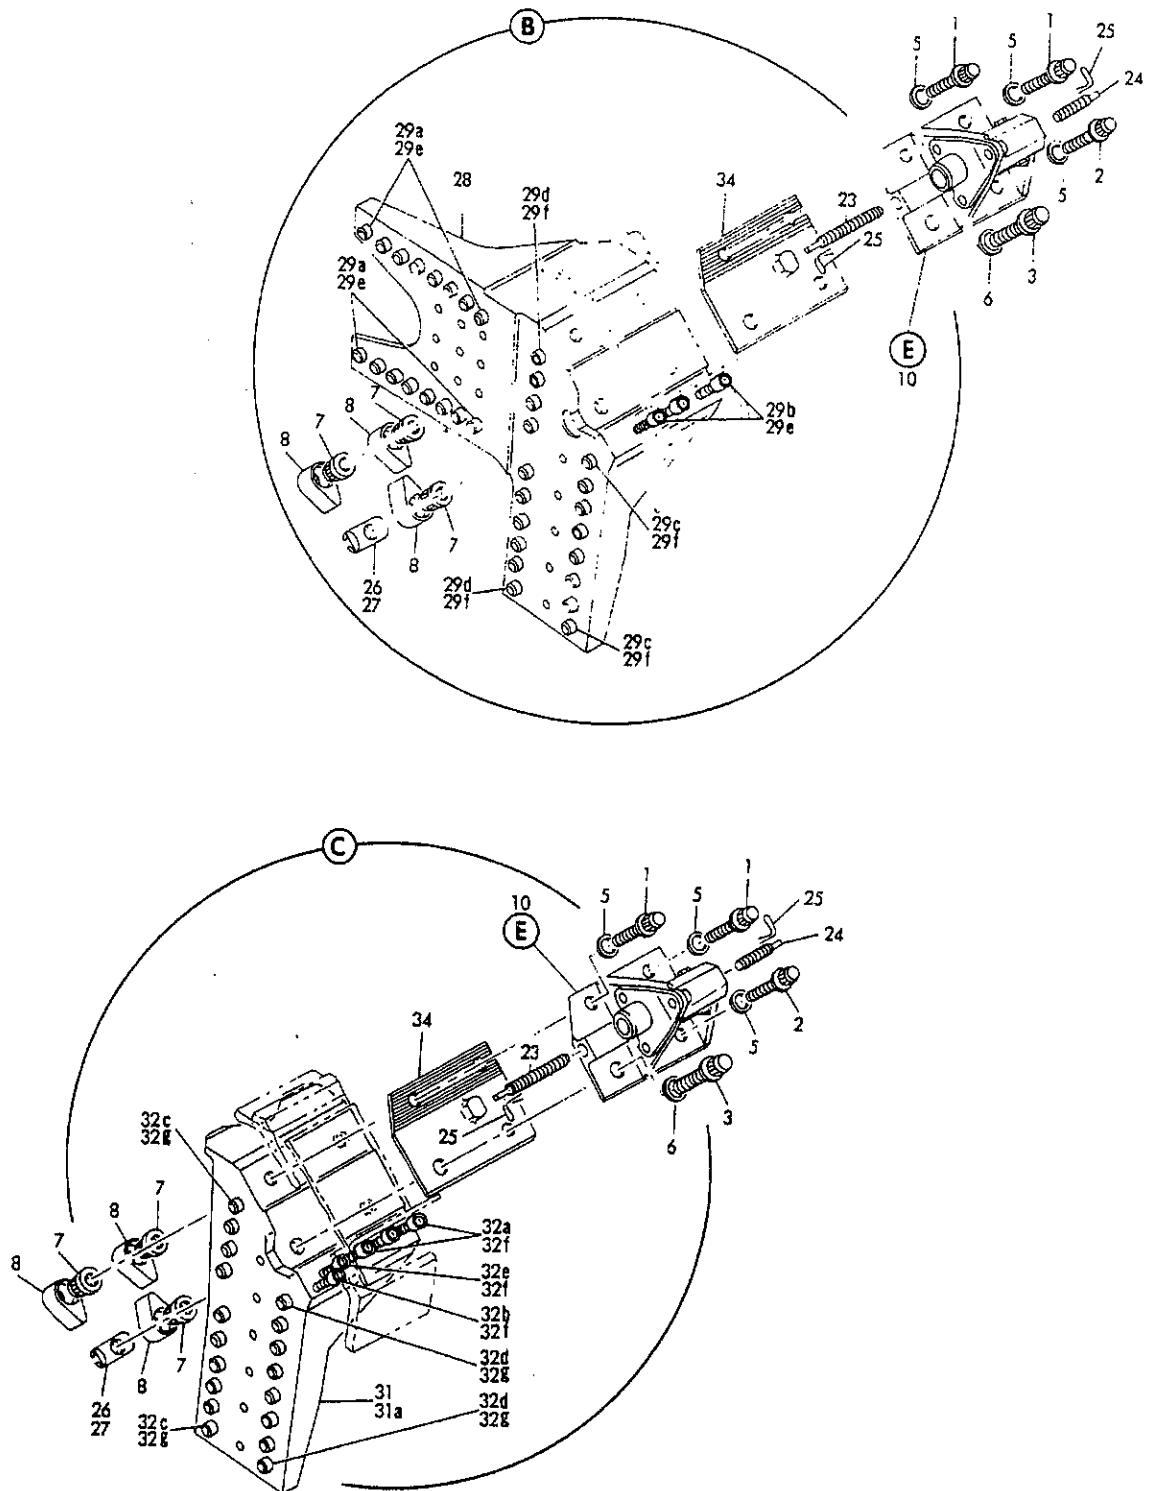


FIGURE 34A. SILL INSTL, MAIN CARGO LOWER (SHEET 2)

NOV 21/90

52-03-34A

DETAILED PARTS LIST
52-03-34A
PAGE 1

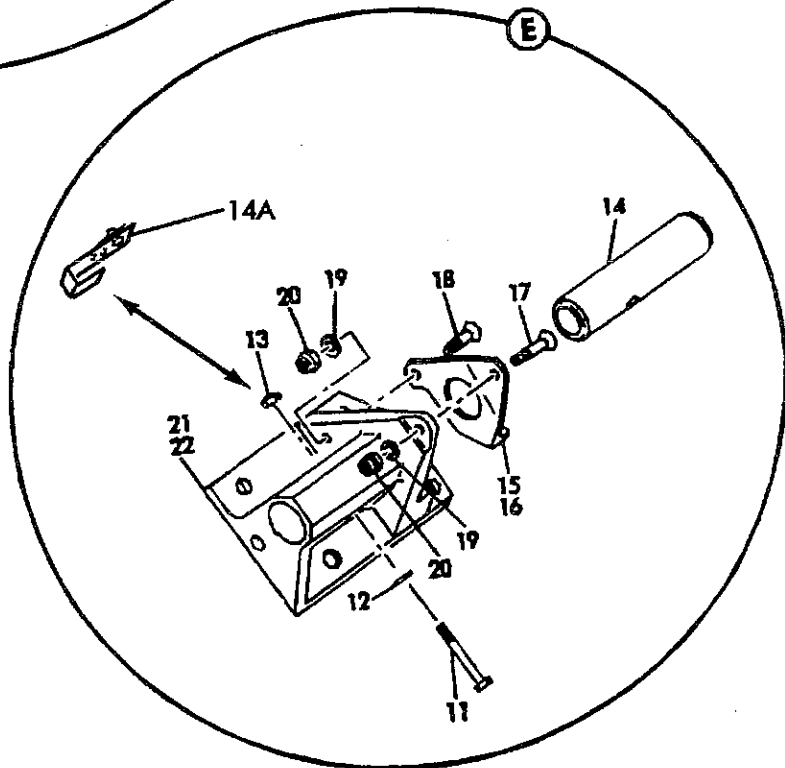
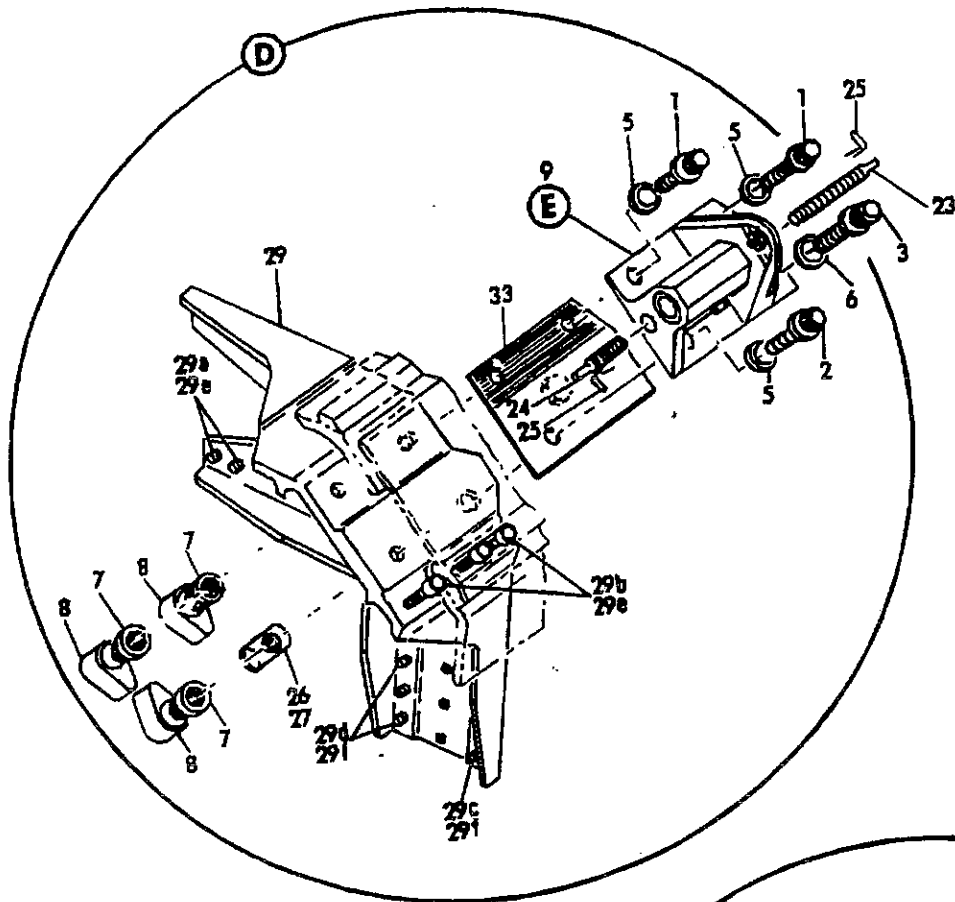


FIGURE 34A. SILL INSTL, MAIN CARGO LOWER (SHEET 1)

52-03-34A

BOEING

707

PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
34A	65-25343-1	SILL INSTL, MAIN CARGO DOOR LOWER (SEE FIG. 32, ITEM. 52)	0399	RF
1	EWB22-8-24	. BOLT, (V80539).	0399	16
1	BACB30MT8-24	(OPTIONAL TO BACB30MT8-24)	0399	16
2	EWB22-8	. BOLT, (V80539) (LENGTH TO BE DETERMINED AT INSTL)	0399	8
3	EWB22-10	. BOLT, (V80539) (LENGTH TO BE DETERMINED AT INSTL)	0399	8
3A	EWB22-8-26	. BOLT, (V80539).	0399	8
3A	BACB30MT8-26	(OPTIONAL TO BACB30MT8-26)	0399	8
3A	EWB22-8-28	. BOLT, (V80539).	0399	8
3A	BACB30MT8-28	(OPTIONAL TO BACB30MT8-28)	0399	8
3B	EWB22-10-20	. BOLT, (V80539).	0399	8
3B	BACB30MT10-20	(OPTIONAL TO BACB30MT10-20)	0399	8
3B	EWB22-10-22	. BOLT, (V80539).	0399	8
3B	BACB30MT10-22	(OPTIONAL TO BACB30MT10-22)	0399	8
3B	EWB22-10-24	. BOLT, (V80539).	0399	8
3B	BACB30MT10-24	(OPTIONAL TO BACB30MT10-24)	0399	8
5	BACN10BN8C	. WASHER.	0399	24
6	BACN10BN10C	. WASHER.	0399	8
7	42FW820	. NUT, (V80539).	0399	24
7	BACN10GW8	(OPTIONAL TO BACN10GW8)	0399	24
8	6610EWH7080	. RETAINER, NUT (V80539).	0399	24
9	65-67872-1	. FITTING ASSY, LATCH PIN.	0399	4
10	65-67872-2	. FITTING ASSY, LATCH PIN.	0399	4
11	BACB30NF3-22	. BOLT.	0399	1
11	BACB30NF3-22	. BOLT, (DELETED BY SB 3494).	0399	1
12	AN960-10	. WASHER.	0399	1
13	NAS679A3W	. NUT.	0399	1
14	6-83137-2	. PIN.	0399	1
14	65C37791-1	. PIN-(ADDED BY SB 3494).	0399	4
14	65C37791-4	(OPTIONAL TO 65C37791-4)	0399	4
15	69-20189-5	. PLATE, BEARING (USED ON 65-67872-1)	0399	1
16	69-20189-6	. PLATE, BEARING (USED ON 65-67872-2)	0399	1
17	BACB30LU3-6	ATTACHING PARTS	0399	1
18	BACB30LU3-10	. BOLT.	0399	1
19	AN960-10	. WASHER.	0399	2
20	BACN10R10L	. NUT.	0399	2
21	65-65979-1	. FITTING, (USED ON 65-67872-1)	0399	1
22	65-65979-2	. FITTING, (USED ON 65-67872-2)	0399	1
23	69-53791-1	. SCREW, SET.	0399	8
24	69-53791-2	. SCREW, SET.	0399	8
25	69-53799-1	. SPRING, SCREW RETAINER.	0399	16
26	BACN10HC10	. NUT.	0399	8
27	BACR10V10	. RETAINER.	0399	8
28	65-27187-9	. FITTING, LATCH SUPPORT.	0350	3
28	65-27187-503	(OPTIONAL 65-27187-503)	0350	3
28	65-27187-19	. FITTING, LATCH SUPPORT.	5199	3
29	65-25343-54	. FITTING, LATCH SUPPORT (ALTERED FROM 65-27187-10)	0350	3
29	65-25343-503	(OPTIONAL 65-25343-503)	0350	3
29	65-25343-503	. FITTING, LATCH SUPPORT (ALTERED FROM 65-27187-504).	0350	3
29	65-25343-73	(OPTIONAL TO 65-25343-54)	5199	3
29A	BACB30N8-5	ATTACHING PARTS	0399	AR
29B	BACB30N8-17	. BOLT.	0399	AR

MISSING ITEM NUMBERS ARE NOT APPLICABLE

RAF
NOV 21/01

52-03-34A

DETAILED PARTS LIST
52-03-34A
PAGE 3

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
34A 29C	BACB30N10-7	.	BOLT.	0399	AR
29D	BACB30N10-8	.	BOLT.	0399	AR
29E	BACC30K8	.	COLLAR.	0399	AR
29F	BACC30K10	.	COLLAR.	0399	AR
			-----*		
30	69-22195-2	.	BAR, SPLICE	0399	1
		.	ATTACHING PARTS		
	NAS1104-18W	.	BOLT.	0399	12
	AN960PD416	.	WASHER.	0399	12
	MS21042L4	.	NUT	0399	12
			-----*		
31	65-27187-11	.	FITTING, LATCH SUPPORT.	0350	1
31	65-27187-21	.	FITTING, LATCH SUPPORT.	5199	1
32	65-27187-12	.	FITTING, LATCH SUPPORT.	0350	1
32	65-27187-22	.	FITTING, LATCH SUPPORT.	5199	1
		.	ATTACHING PARTS		
32A	BACB30N8-17	.	BOLT.	0399	AR
32B	BACB30N8-19	.	BOLT.	0399	AR
32C	BACB30N10-6	.	BOLT.	0350	AR
32D	BACB30N10-8	.	BOLT.	0350	AR
32E	BACB30P8-17	.	BOLT.	0350	AR
32F	BACC30K8	.	COLLAR.	0399	AR
32G	BACC30K10	.	COLLAR.	0350	AR
			-----*		
33	65-67847-1	.	PLATE, SERRATED	0399	4
34	65-67847-2	.	PLATE, SERRATED	0399	4
		.	ATTACHING PARTS		
	BACB30P8-5	.	BOLT.	0399	AR
	BACB30P8-10	.	BOLT.	0399	AR
	BACC30K8	.	COLLAR.	0399	AR
	MS20426D8	.	RIVET	0399	AR
			-----*		
35	69-22195-1	.	BAR, SPLICE	0399	1
		.	ATTACHING PARTS		
	MS20470D8	.	RIVET	0399	8
			(OPTIONALS NAS1104-14B AND NAS1104-18W USED WITH AN960PD416 AND NAS679A4W)		
	NAS1104-14B	.	BOLT, (USED WITH AN960PD416 AND NAS679A4W).	0399	4
			(OPTIONAL TO MS20470D8)		
	NAS1104-18W	.	BOLT, (USED WITH AN960PD416 AND NAS679A4W).	0399	4
			(OPTIONAL TO MS20470D8)		
	AN960PD416	.	WASHER, (USED WITH NAS1104-14B AND NAS1104-18W)	0399	8
	NAS679A4W	.	NUT, (USED WITH NAS1104-14B AND NAS1104-18W).	0399	8
			-----*		
36	69-24195-4	.	BRACKET, SWITCH	0399	2
			(OPTIONAL 69-24195-1)		
36	69-24195-1	.	BRACKET, SWITCH	0399	2
			(OPTIONAL TO 69-24195-4)		
		.	ATTACHING PARTS		
	NAS623-3-5W	.	SCREW	0399	8
	AN960PD10L	.	WASHER.	0399	8
	NAS463WDD10	.	SHIM.	0399	16
			-----*		
37	BACB30N8-7	.	BOLT.	0399	4
38	BACC30K8	.	COLLAR.	0399	4
39	65-28708-7	.	DEPRESSOR INSTL, CORNER SEAL.	0399	1
40	65-28708-8	.	DEPRESSOR INSTL, CORNER SEAL.	0399	1
41	NAS221-7	.	SCREW	0399	3
42	66-16958-501	.	ANGLE ASSY, (USED ON 65-28708-7).	0399	1
43	66-16958-502	.	ANGLE ASSY, (USED ON 65-28708-8).	0399	1
44	65-28708-9	.	DEPRESSOR, (USED ON 65-28708-7)	0399	1
45	65-28708-10	.	DEPRESSOR, (USED ON 65-28708-8)	0399	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
35	69-26457-1		CONTROL INSTL, CARGO DOOR SAFETY VALVE PUSH PULL (SEE . 29-4, FIG. 28, ITEM 60 AND 29-4, FIG. 28A, ITEM 86)		RF
1A	69-26457-5		. TUBE ASSY, CONTROL 1/4 AISI304.		1
1B	69-26457-6		. TUBE ASSY, CONTROL 1/4 AISI304.		1
2	69-26457-3		. TUBE ASSY, CONTROL 1/4 AISI304.		1
3	69-26457-2		. TUBE ASSY, CONTROL 1/4 AISI304.		1
	5001-3		. . NUT, (V11346)		2
4	5002-3		. CONNECTOR, TUBE LINE (V11346)		3
4A	5002-3		. CONNECTOR, TUBE LINE (V11346)		1
5	10195-3		. TUBE ASSY, SPENT (V11346)		1
6	16550-230		. PUSH PULL ASSY, (V11346).		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

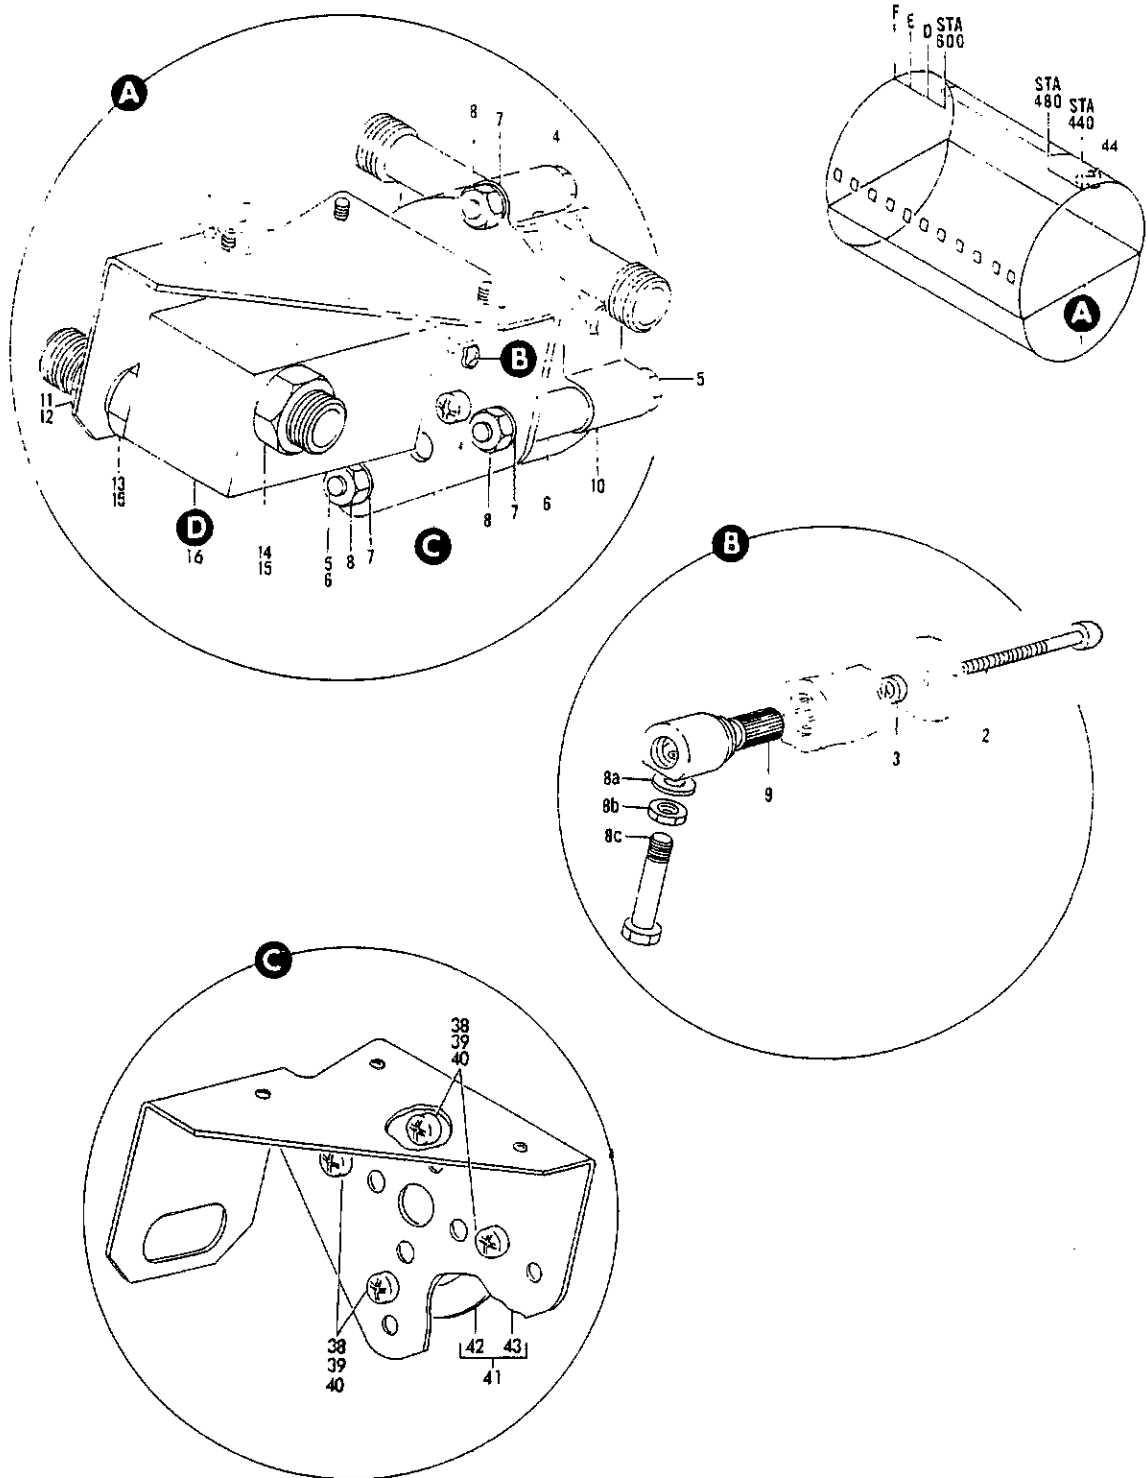


FIGURE 36. VALVE INSTL, CARGO DOOR SAFETY (SHEET 1)

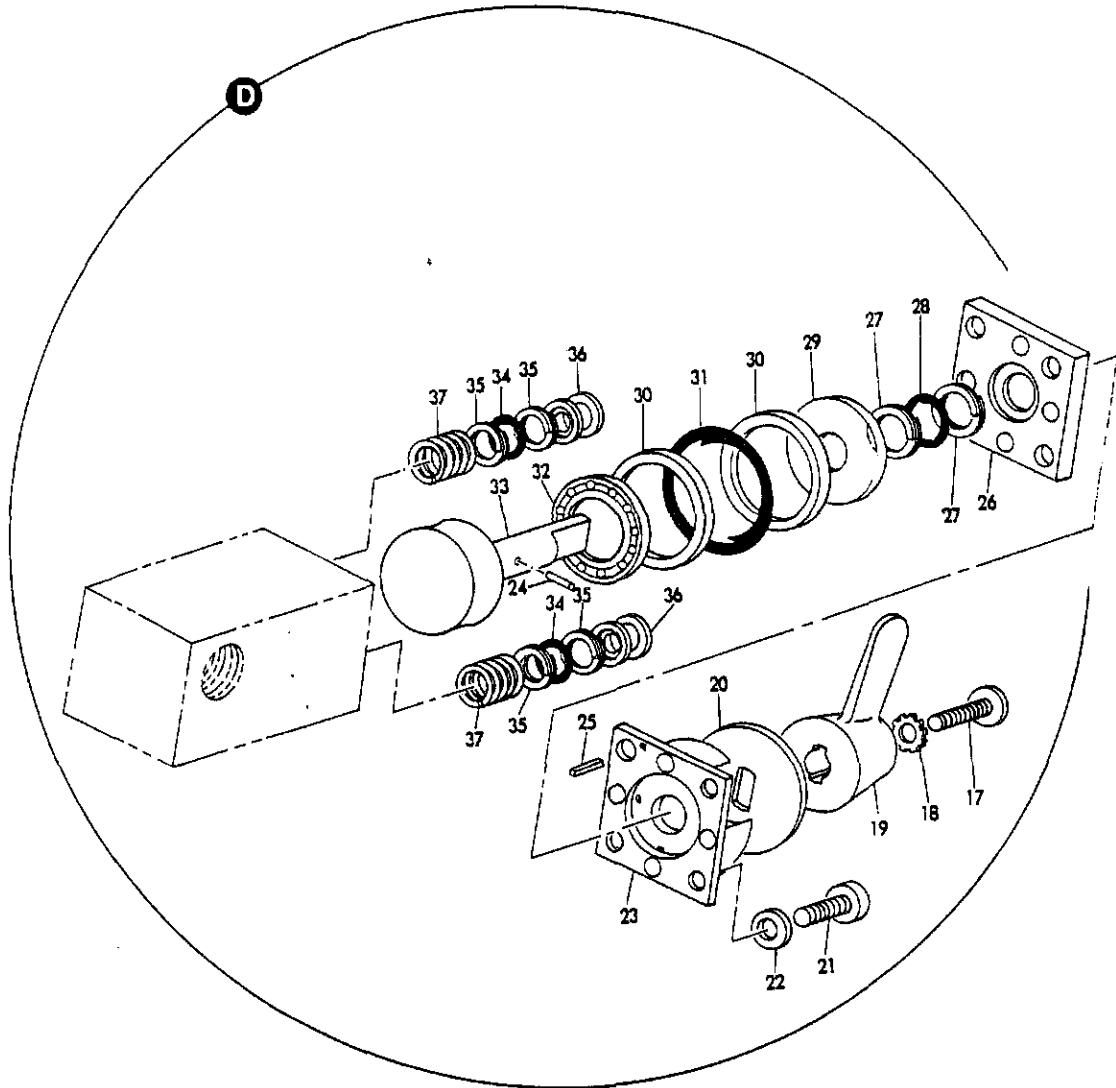


FIGURE 36. VALVE INSTL, CARGO DOOR SAFETY (SHEET 2)

NOV 21/90

52-03-36

DETAILED PARTS LIST
52-03-36
PAGE 1

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
36	69-26394-1	VALVE INSTL, CARGO DOOR SAFETY (SEE 29-4, FIG. 28, . . . ITEM 59 AND 29-4, FIG. 28A, ITEM 62 AND 85)		RF
1	69-26394-2	VALVE ASSY, CARGO DOOR SAFETY		1
	NAS1303-3W	ATTACHING PARTS		3
	AN960D10	BOLT.		3
		WASHER.		
2	MS35458-17	SCREW		1
3	NAS43-3-4	SPACER.		1
4	NAS1303-12W	BOLT.		1
5	NAS1303-25W	BOLT.		3
6	NAS43DD3-54	SPACER.		3
7	AN960D10	WASHER.		4
8	NAS679A3W	NUT		4
8A	AN960D10L	WASHER.		1
8B	MS25082-3	NUT		1
8C	NAS464-3A13	BOLT.		1
9	66-19187-2	ADAPTER, CARGO DOOR SAFETY VALVE.		1
10	12600-1	CONTROL BOX, (V11346)		1
11	AN924-6B	NUT		1
12	AN960D916	WASHER.		1
13	MS21924-6	UNION		1
14	MS21902-6	UNION		1
15	NAS1612-6	PACKING		2
16	10-3340-1	VALVE, 3000 PSI HYDRAULIC MANUAL SHUTOFF (SAME AS 140925 OR 140925-1 (V79318))		1
16	140925	VALVE ASSY, MANUALLY OPERATED ROTARY SHUTOFF. . . . (V79318) (SAME AS BAC SPEC NO. 10-3340-1) (FOR REPLACEMENT ORDER 140925-1 (V79318))		RF
16	140925-1	VALVE ASSY, MANUALLY OPERATED ROTARY SHUTOFF. . . . (V79318) (SAME AS BAC SPEC NO. 10-3340-1) (REPLACEMENT FOR 140925 (V79318))		RF
	NAS603-7	ATTACHING PARTS		4
	AN960D10	SCREW		4
		WASHER.		
M 17	AN526C1032-8	SCREW		1
M 18	AN936B10	WASHER.		1
M 19	141221	HANDLE, (V79318)		1
M 20	141211	PLATE, DIRECTION (V79318)		1
M 21	AN503-416-12	SCREW		4
M 22	100168-169	WASHER, (V79318)		4
M 23	141212	CAP, (V79318)		1
M 24	23400-4-24	PIN, DOWEL (V79318)		1
M	141217	COVER ASSY, (V79318) (USED ON 140925)		RF
M	143697	COVER ASSY, (V79318) (USED ON 140925-1)		RF
M 25	MS171434	PIN, (USED ON 140925)		3
M 25	100107-18	PIN, (V73957) (USED ON 140925-1)		3
M 26	143697-1	COVER, (V79318) (USED ON 140925-1)		1
M 26	COVER	COVER, (USED ON 140925)		1
M 27	MS28782-8	RING, (USED ON 140925)		2
M 27	143699	WASHER, (V79318) (USED ON 140925-1)		2
M 28	1001118G8	SEAL, (V79318) (USED ON 140925)		1
M 28	1001118K8	SEAL, (V79318) (USED ON 140925-1)		1
M 29	3068	WASHER, (V79318)		1
M 30	143698	WASHER, (V79318) (USED ON 140925-1)		2
M 31	1001118G18	SEAL, (V79318) (USED ON 140925)		1
M 31	1001118K99	SEAL, (V79318) (USED ON 140925-1)		1
M 32	R5498-1	BEARING, (V43766)		1
M 33	141220	ROTOR, (V79318)		1
M 34	1001118G5	SEAL, (V79318) (USED ON 140925)		2
M 34	1001118K5	SEAL, (V79318) (USED ON 140925-1)		2
M 35	26000-5	RING, (V79318)		4
M 36	141218	SEAL, (V79318)		2
M 37	2414	SPRING, (V79318)		2
38	NAS603-12	SCREW		4
39	AN960D10L	WASHER.		4
40	NAS679A3W	NUT		4
41	66-19302-2	BRACKET ASSY, CARGO DOOR SHUTOFF VALVE.		1
42	66-19302-3	SPACER, CARGO DOOR SHUTOFF VALVE BRACKET.		1
43	66-19302-1	BRACKET, CARGO DOOR SHUTOFF VALVE		1
44	66-19446-1	PLATE ASSY, CARGO DOOR SAFETY VALVE		1
	MS20426D3-6	ATTACHING PARTS		1
		RIVET		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

MISSING ITEM NUMBERS ARE NOT APPLICABLE

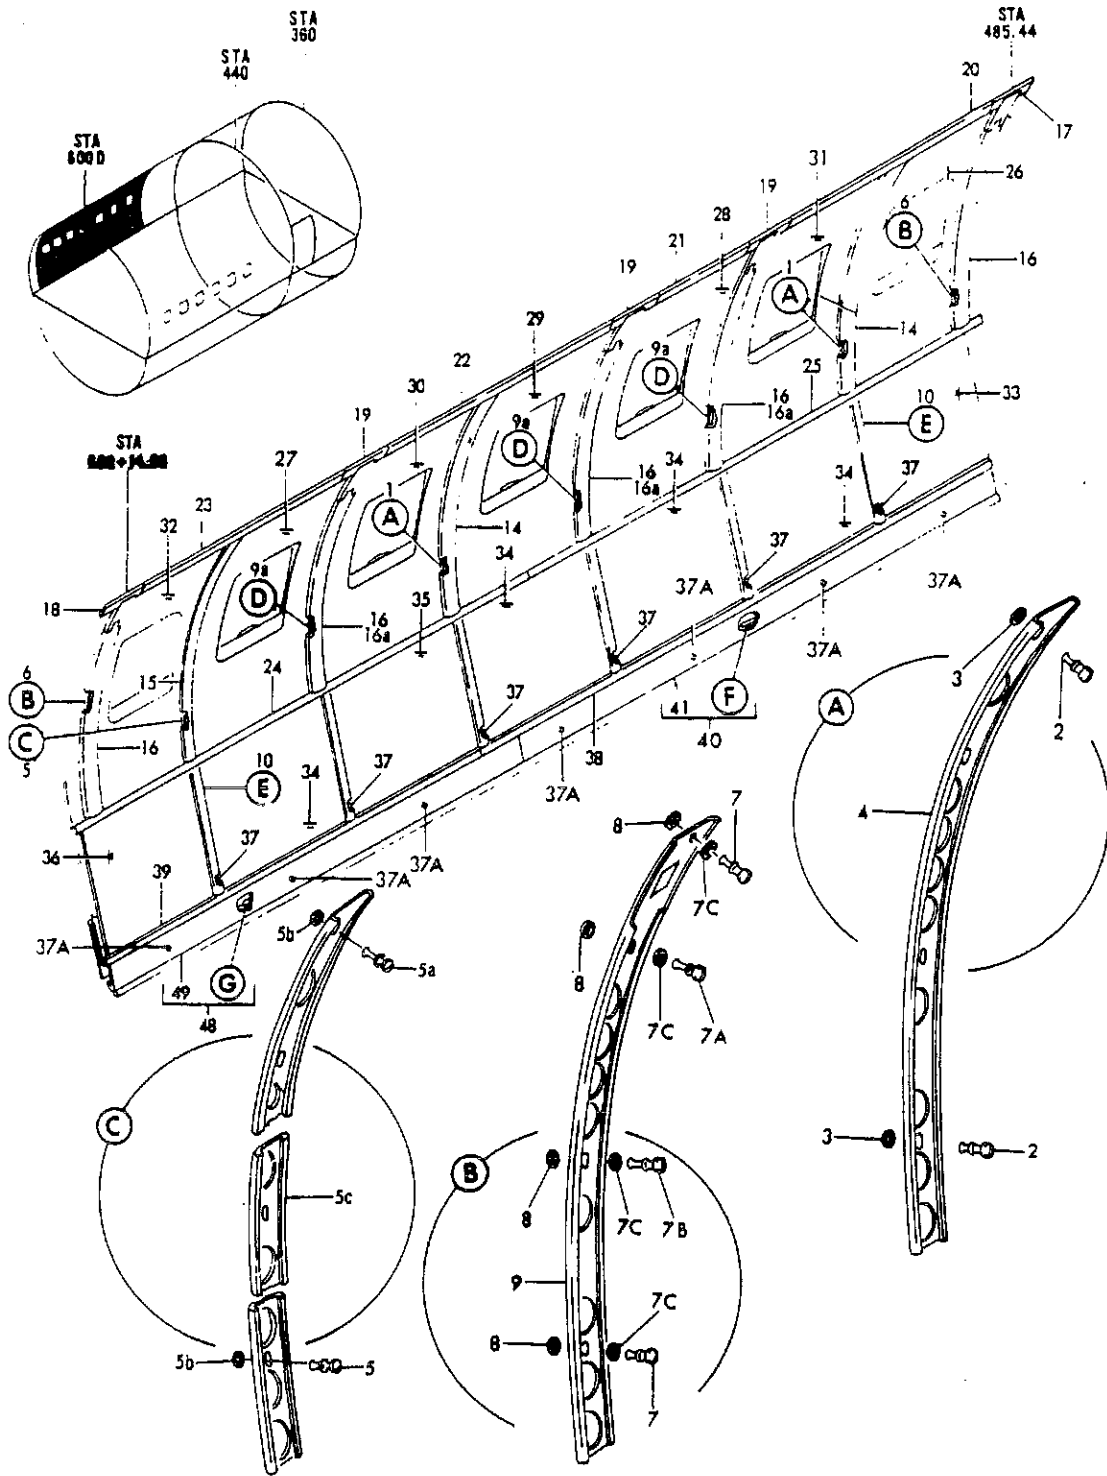


FIGURE 38C. LINING INSTL, CARGO DOOR (SHEET 1)

DETAILED PARTS LIST
52-03-33C
PAGE 2

52-03-30C

NOV 21/90

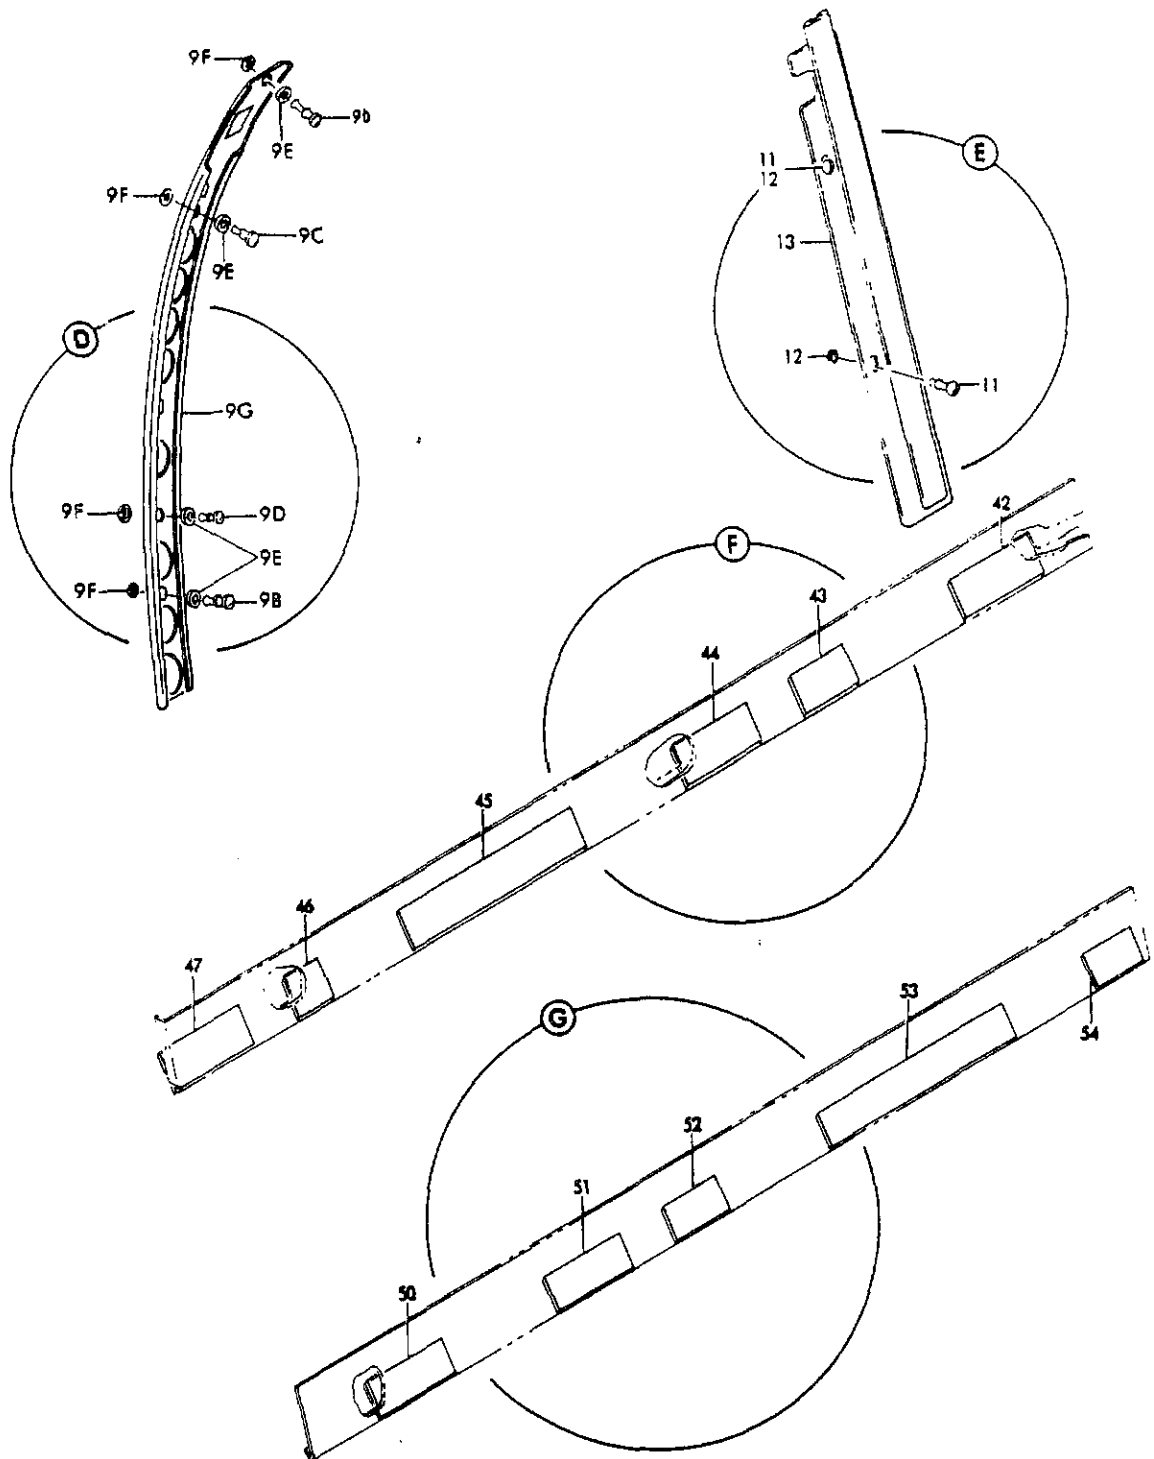


FIGURE 38C. LINING INSTL. CARGO DOOR (SHEET 2)

NOV 21/90

52-03-38C

DETAILED PARTS LIST
52-03-38C
PAGE 1

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
38C	65-63975-1	LINING INSTL, CARGO DOOR (SEE 25-10, FIG. 10A, ITEM 11, 25-10, FIG. 20G, ITEM 11, 25-10, FIG. 20J, ITEM 11, 25-10, FIG. 20Q, ITEM 11, 25-10, FIG. 20S, ITEM 11, 25-10, FIG. 24A, ITEM 11, 25-10, FIG. 24E, ITEM 10, 25-10, FIG. 31M, ITEM 22, 25-10, FIG. 32Q, ITEM 11, 25-10, FIG. 32U, ITEM 14, 25-10, FIG. 32W, ITEM 14, 25-10, FIG. 32Y, ITEM 15, 25-10, FIG. 34G, ITEM 13, 25-10, FIG. 34J, ITEM 125, 25-10, FIG. 35, ITEM 3, 25-10, FIG. 36N, ITEM 2, 25-10, FIG. 36U, ITEM 2, 25-10, FIG. 36W, ITEM 9A AND 25-10, FIG. 36Y, ITEM 10)	0150	RF
1	65-1690-10	. FASTENER ASSY, CABIN SIDEWALL MULLION TRIM.	0150	2
2	BACS21AP200R	. . STUD.	0150	4
3	GSR2-93	. . GROMMET, (V94222)	0150	4
4	65-1690-11	. FASTENER.	0150	1
5	65-4144-5	. FASTENER ASSY, CABIN SIDEWALL MULLION TRIM.	0150	1
5A	BACS21AP200R	. . STUD.	0150	4
5B	GSR2-93	. . GROMMET, (V94222)	0150	4
		(OPTIONAL BACR12AG)		
5B	BACR12AG	. . RING, SPLIT.	0150	4
		(OPTIONAL TO GSR2-93 (V94222))		
5C	65-4144-6	. FASTENER.	0150	1
9A	65-32517-28	. RETAINER ASSY, CABIN SIDEWALL CONSTANT SECTION.	0150	3
		MULLION TRIM		
9B	BACS21AP280R	. . STUD.	0150	2
9C	BACS21AP380R	. . STUD.	0150	1
9D	BACS21AP360R	. . STUD.	0150	1
9E	BACW10P10AL	. . WASHER.	0150	4
9F	GSR2-93	. . GROMMET, (V94222)	0150	4
9G	65-32517-38	. RETAINER.	0150	1
10	69-25625-1G	. RETAINER ASSY, DADO PANEL	0150	6
11	BACS21AP140R	. . STUD.	0150	2
12	BACR12AG	. . RING.	0150	2
13	69-25625-2G	. . RETAINER, DADO PANEL (ALTERED FROM BAC SPEC NO. 10-60128-282)	0150	1
14	65-1690-29N	. TRIM, CABIN SIDEWALL MULLION (ALTERED FROM.	0150	2
		65-10077-16T)		
15	65-4144-7R	. TRIM, CABIN SIDEWALL MULLION (ALTERED FROM.	0150	1
		65-10077-28T)		
16A	65-32517-5M	. TRIM, CABIN SIDEWALL CONSTANT SECTION MULLION	0150	3
		(ALTERED FROM 65-10077-16T)		
17	69-41564-7	. PLATE, CABIN WINDOW PANEL DECORATIVE TRIM COVER	0150	1
18	69-41564-8	. PLATE, CABIN WINDOW PANEL DECORATIVE TRIM COVER	0150	1
19	66-19979-1	. PLATE, CABIN WINDOW PANEL DECORATIVE TRIM COVER	0150	3
20	69-3648-31	. TRIM, CABIN WINDOW PANEL SNAP ON MOLDING DECORATIVE	0150	1
21	69-3648-71	. TRIM, CABIN WINDOW PANEL SNAP ON MOLDING DECORATIVE	0150	1
22	69-3648-75	. TRIM, CABIN WINDOW PANEL SNAP ON MOLDING DECORATIVE	0150	1
23	69-3648-84	. TRIM, CABIN WINDOW PANEL SNAP ON MOLDING DECORATIVE	0150	1
24	65-64819-3	. TRIM ASSY, DADO EXTRUSION	0150	1
25	65-64819-4	. TRIM ASSY, DADO EXTRUSION	0150	1
26	65-53407-1G	. PANEL ASSY, CARGO DOOR WINDOW (SEE 25-10, FIG. 61F)	0150	1
27	65-1938-87G	. PANEL ASSY, CABIN WINDOW (SEE 25-10, FIG. 61F).	0150	1
28	69-25804-6G	. PANEL ASSY, CARGO DOOR WINDOW (ALTERED FROM	0150	1
		65-1938-41AB) (SEE 25-10, FIG. 61F)		
29	69-25804-5G	. PANEL ASSY, CARGO DOOR WINDOW (ALTERED FROM	0150	1
		65-1938-40N) (SEE 25-10, FIG. 61F)		
30	69-25804-4G	. PANEL ASSY, CARGO DOOR WINDOW (ALTERED FROM	0150	1
		65-1938-42P) (SEE 25-10, FIG. 61F)		
31	65-1938-88G	. PANEL ASSY, CABIN WINDOW (SEE 25-10, FIG. 61F).	0150	1
32	65-53407-2G	. PANEL ASSY, CARGO DOOR WINDOW (SEE 25-10, FIG. 61F)	0150	1
33	65-32286-120	. PANEL, DADO (ALTERED FROM BAC SPEC NO. 10-60128-281)	0150	1
34	65-32286-8G	. PANEL, DADO (ALTERED FROM BAC SPEC NO. 10-60128-281)	0150	4
35	65-32286-5G	. PANEL, DADO (ALTERED FROM BAC SPEC NO. 10-60128-281)	0150	1
36	65-32286-130	. PANEL, DADO (ALTERED FROM BAC SPEC NO. 10-60128-281)	0150	1
37	BACS21AP200R	. . STUD.	0150	6
37A	BACS21AP140R	. . STUD.	0150	7
38	65-64819-14	. STIFFENER ASSY.	0150	1
39	65-64819-15	. STIFFENER ASSY.	0150	1
40	65-52378-27	. PANEL ASSY, MAIN CARGO DOOR LOWER SIDEWALL.	0150	1
41	65-52378-29	. . PANEL, MAIN CARGO DOOR LOWER SIDEWALL	0150	1
42	65-52378-17	. . FILLER, MAIN CARGO DOOR LOWER SIDEWALL.	0150	1
43	65-52378-19	. . FILLER, MAIN CARGO DOOR LOWER SIDEWALL.	0150	1
44	65-52378-25	. . FILLER, MAIN CARGO DOOR LOWER SIDEWALL.	0150	1
45	65-52378-24	. . FILLER, MAIN CARGO DOOR LOWER SIDEWALL.	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *707*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R R R R R	38C 46	65-52378-23	. . FILLER, MAIN CARGO DOOR LOWER SIDEWALL.	0150 1
	47	65-52378-22	. . FILLER, MAIN CARGO DOOR LOWER SIDEWALL.	0150 1
	48	65-52378-26	. PANEL ASSY, MAIN CARGO DOOR LOWER SIDEWALL.	0150 1
	49	65-52378-28	. . PANEL, MAIN CARGO DOOR LOWER SIDEWALL.	0150 1
	50	65-52378-17	. . FILLER, MAIN CARGO DOOR LOWER SIDEWALL.	0150 1
	51	65-52378-18	. . FILLER, MAIN CARGO DOOR LOWER SIDEWALL.	0150 1
	52	65-52378-19	. . FILLER, MAIN CARGO DOOR LOWER SIDEWALL.	0150 1
	53	65-52378-20	. . FILLER, MAIN CARGO DOOR LOWER SIDEWALL.	0150 1
	54	65-52378-21	. . FILLER, MAIN CARGO DOOR LOWER SIDEWALL.	0150 1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

STA
360

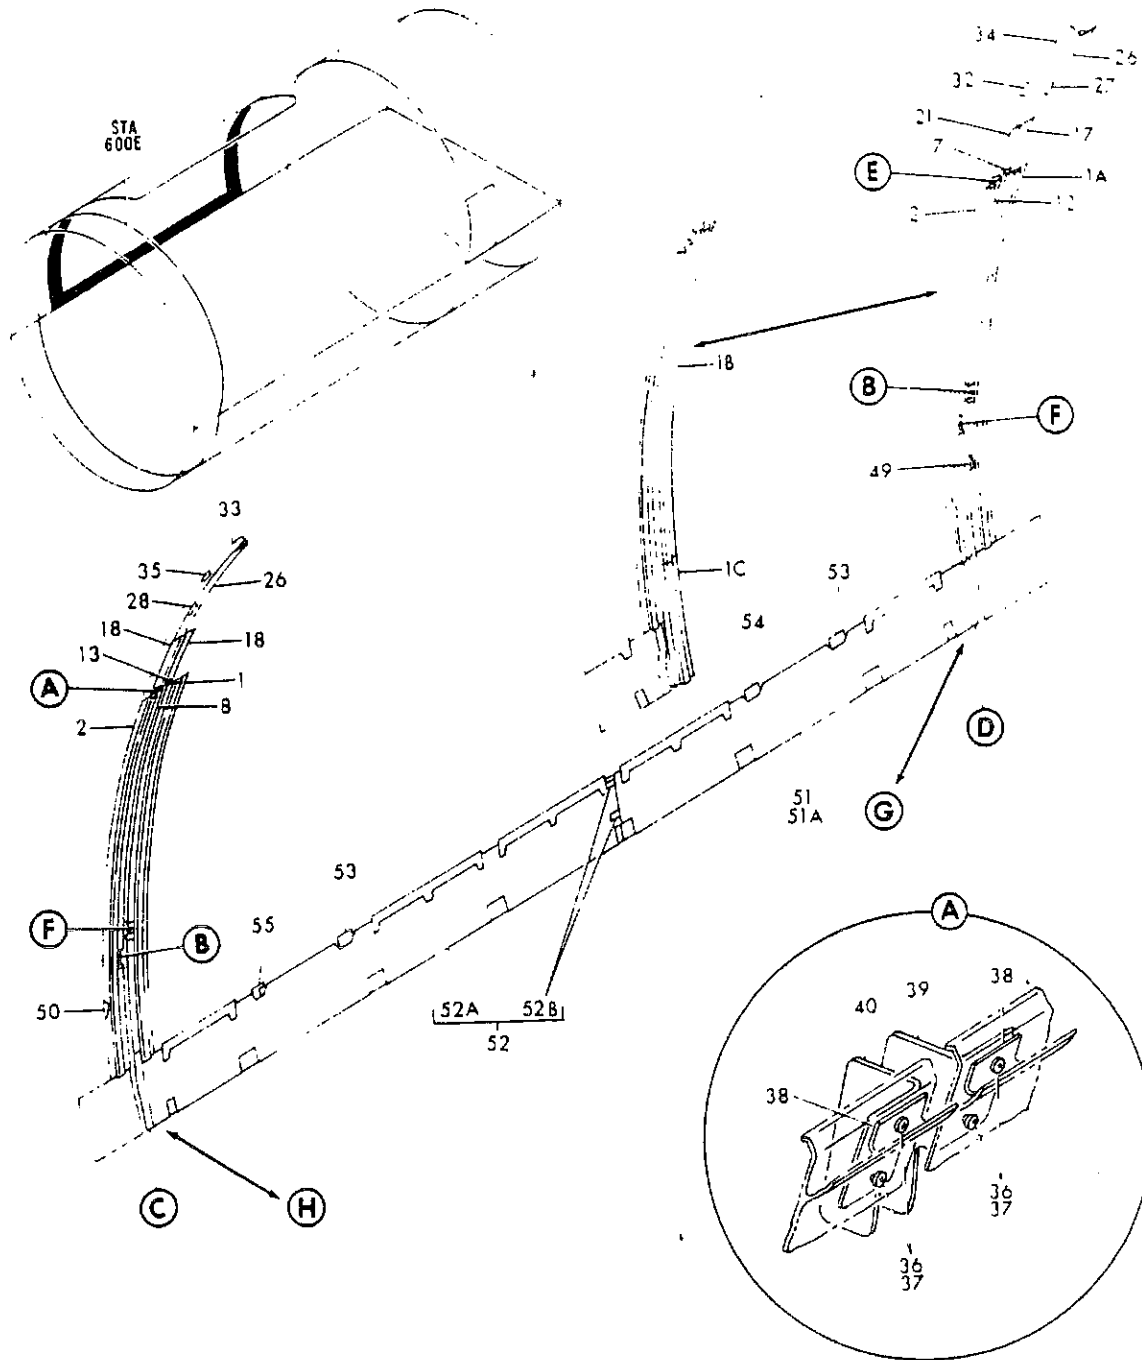


FIGURE 38J. TRIM INSTL, CARGO DOOR AND DOORWAY (SHEET 1)

DETAILED PARTS LIST
52-03-3AJ
PAGE 0

52-03-30J

NOV 21/90

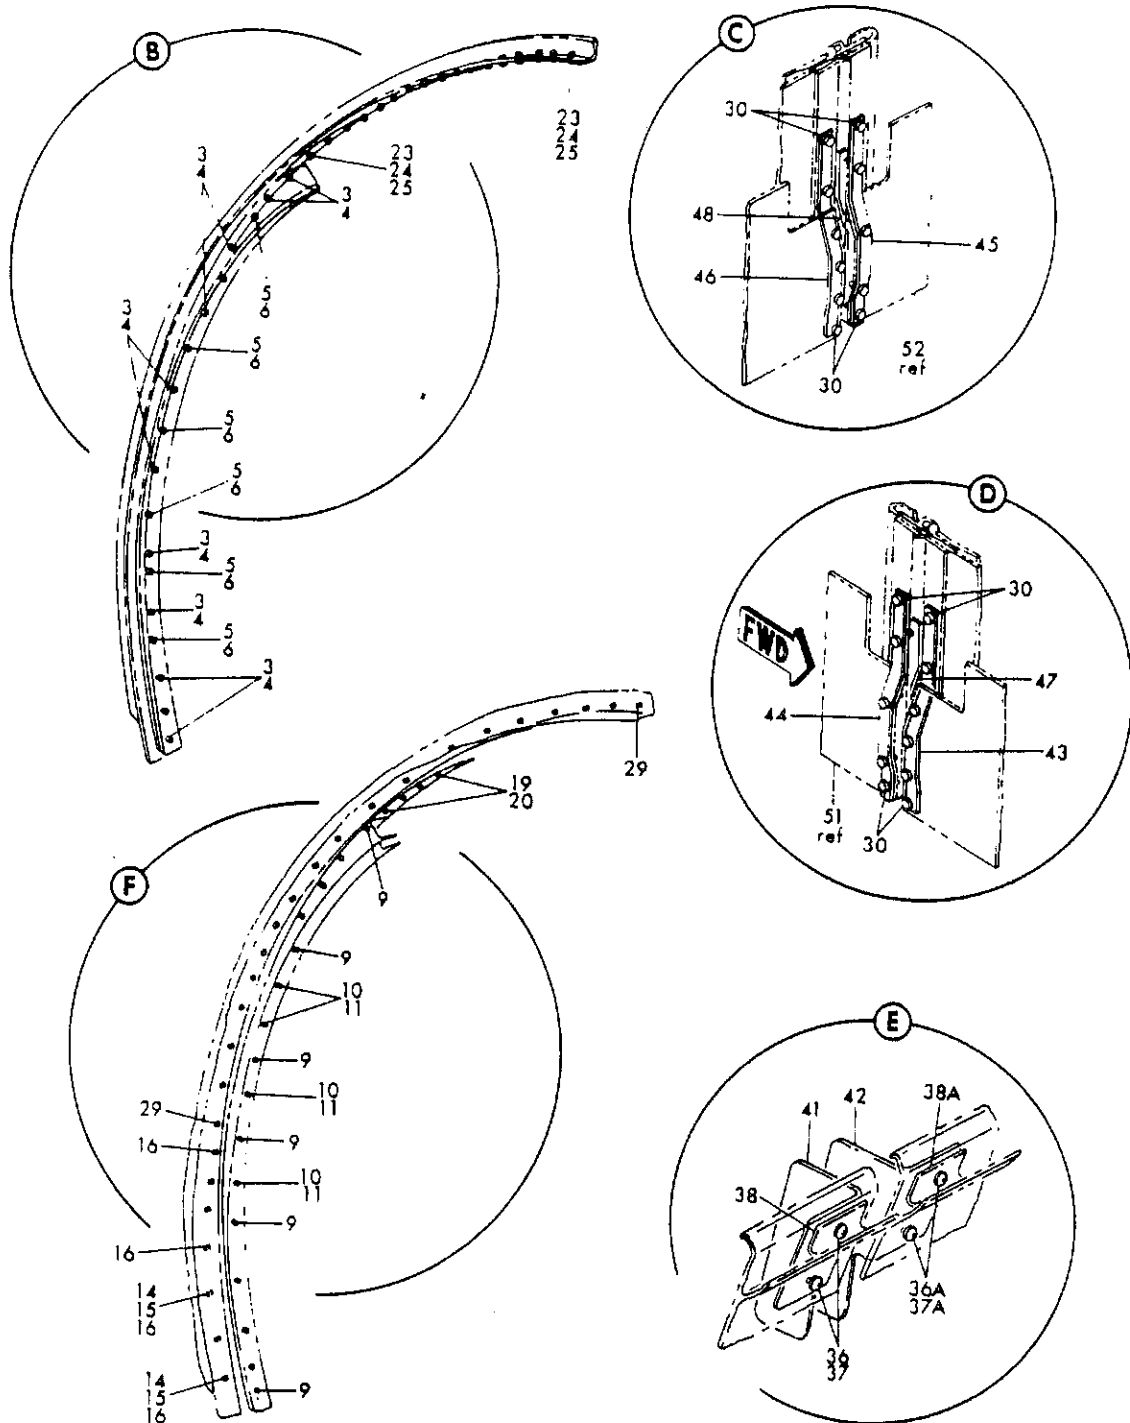


FIGURE 38J. TRIM INSTL, CARGO DOOR AND DOORWAY (SHEET 2)

NOV 21/90

52-03-38J

DETAILED PARTS LIST
52-03-38J
PAGE 1

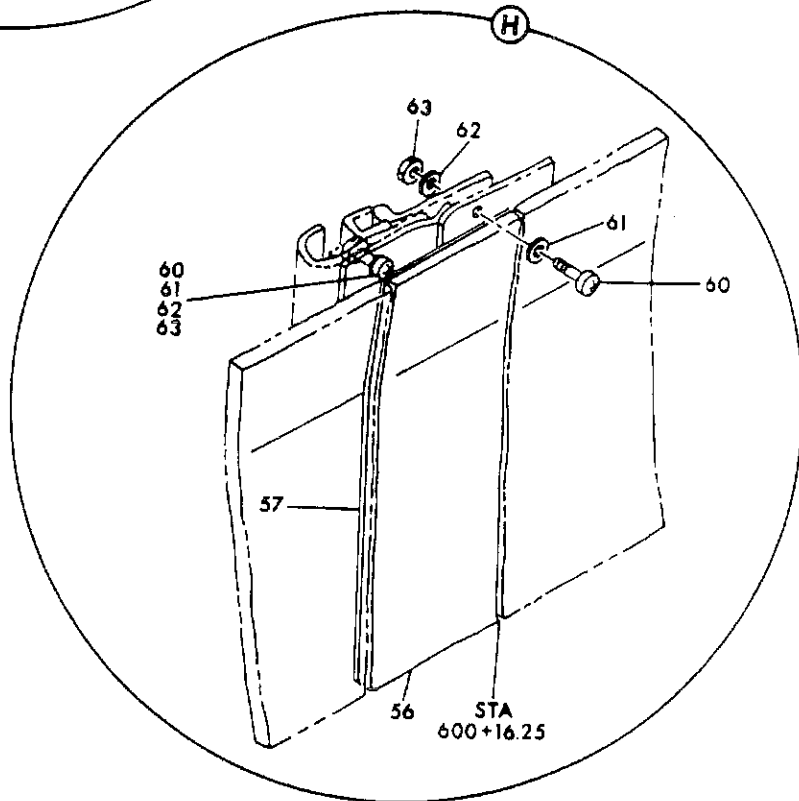
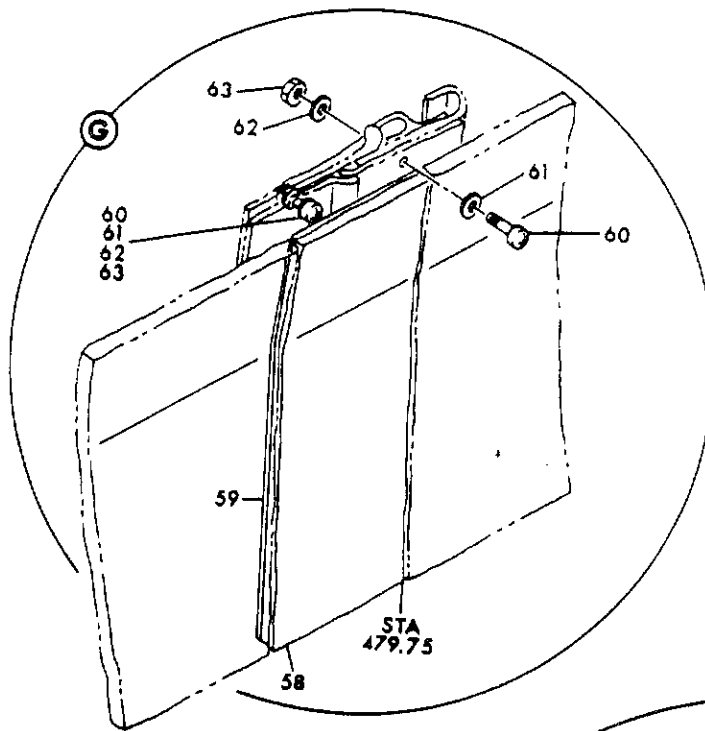


FIGURE 38J. TRIM INSTL, CARGO DOOR AND DOORWAY (SHEET 3)

DETAILED PARTS LIST
52-03-33J
PAGE 2

52-03-307

NOV 21/90

BOEING *707* Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
38J	65-85779-1	TRIM INSTL, CARGO DOOR AND DOORWAY (SEE 25-10, FIG. 33D, ITEM 16, 25-10, FIG. 33J, ITEM 137, 25-10, FIG. 35C, ITEM 17 AND 25-10, FIG. 35S, ITEM 83)	5199	RF
1	65-33737-30W	. RETAINER, SIDEWALL TRIM	5199	1
2	65-33737-31W	. RETAINER, SIDEWALL TRIM	5199	2
3	NAS603-8P	. SCREW	5199	24
4	AN960PD10L	. WASHER	5199	24
5	NAS514P1032-10	. SCREW	5199	12
6	BACW10UB101	. WASHER	5199	12
7	65-84055-2E	. TRIM ASSY	5199	1
8	65-84055-1Y	. TRIM ASSY	5199	1
12	65-84055-4Y	. TRIM ASSY	5199	1
13	65-84055-3W	. TRIM ASSY	5199	1
14	NAS603-8P	. SCREW	5199	6
15	AN960PD10L	. WASHER	5199	6
16	BACN10JC3	. NUT	5199	18
17	65-47115-11	. TRIM, RUBBER DOORWAY	5199	1
18	65-47115-12	. TRIM, RUBBER DOORWAY	5199	2
19	BACB30NE3-5	. BOLT	5199	4
20	AN970-3	. WASHER	5199	4
21	65-47115-13	. TRIM, RUBBER	5199	1
22	65-47115-14	. TRIM, RUBBER	5199	1
23	NAS603-8P	. SCREW	5199	28
24	AN960PD10L	. WASHER	5199	28
25	BACN10JC3	. NUT	5199	28
26	65-47116-8	. TRIM, RUBBER	5199	2
27	65-52367-2	. RETAINER	5199	1
28	65-52367-1	. RETAINER	5199	1
29	BACS12CB3-9	. SCREW	5199	38
30	BACN10JC3	. NUT	5199	18
31	NAS603-8P	. SCREW	5199	6
32	65-52366-2	. RETAINER	5199	1
33	65-52366-1	. RETAINER	5199	1
34	65-47116-9	. TRIM, RUBBER	5199	1
35	65-47116-10	. TRIM, RUBBER	5199	1
36	BACS12CB3-7	. SCREW	5199	6
37	AN960PD10L	. WASHER	5199	6
38	66-25197-1	. SUPPORT ASSY	5199	3
39	69-63531-6	. SUPPORT ASSY	5199	1
40	69-63531-8	. SUPPORT ASSY	5199	1
41	69-63531-11	. SUPPORT ASSY	5199	1
42	69-63531-10	. SUPPORT ASSY	5199	1
43	65-52369-15	. STUD PLATE ASSY	5199	1
44	65-52369-5	. STUD PLATE ASSY	5199	1
45	65-52369-6	. STUD PLATE ASSY	5199	1
46	65-52369-16	. STUD PLATE ASSY	5199	1
47	65-52366-6	. RETAINER	5199	1
48	65-52366-7	. RETAINER	5199	1
49	65-52367-5	. RETAINER	5199	1
50	65-52367-6	. RETAINER	5199	1
51	65-81071-19	. RISER ASSY, CARPET	5199	1
51A	65-81455-12	. RISER, CARPET	5199	1
52	65-81071-18	. RISER ASSY, CARPET	5199	1
52A	65-81455-11	. RISER, CARPET	5199	1
52B	82-47-104-15	. RECEPTACLE, (V94222)	5199	2
53	69-63120-1	. SUPPORT ASSY	5199	2
54	69-63120-2	. SUPPORT ASSY	5199	1
55	69-63120-3	. SUPPORT ASSY	5199	1
		ATTACHING PARTS		
	NAS603-8P	. SCREW	5199	8
	AN960PD10L	. WASHER	5199	8
		-----*		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

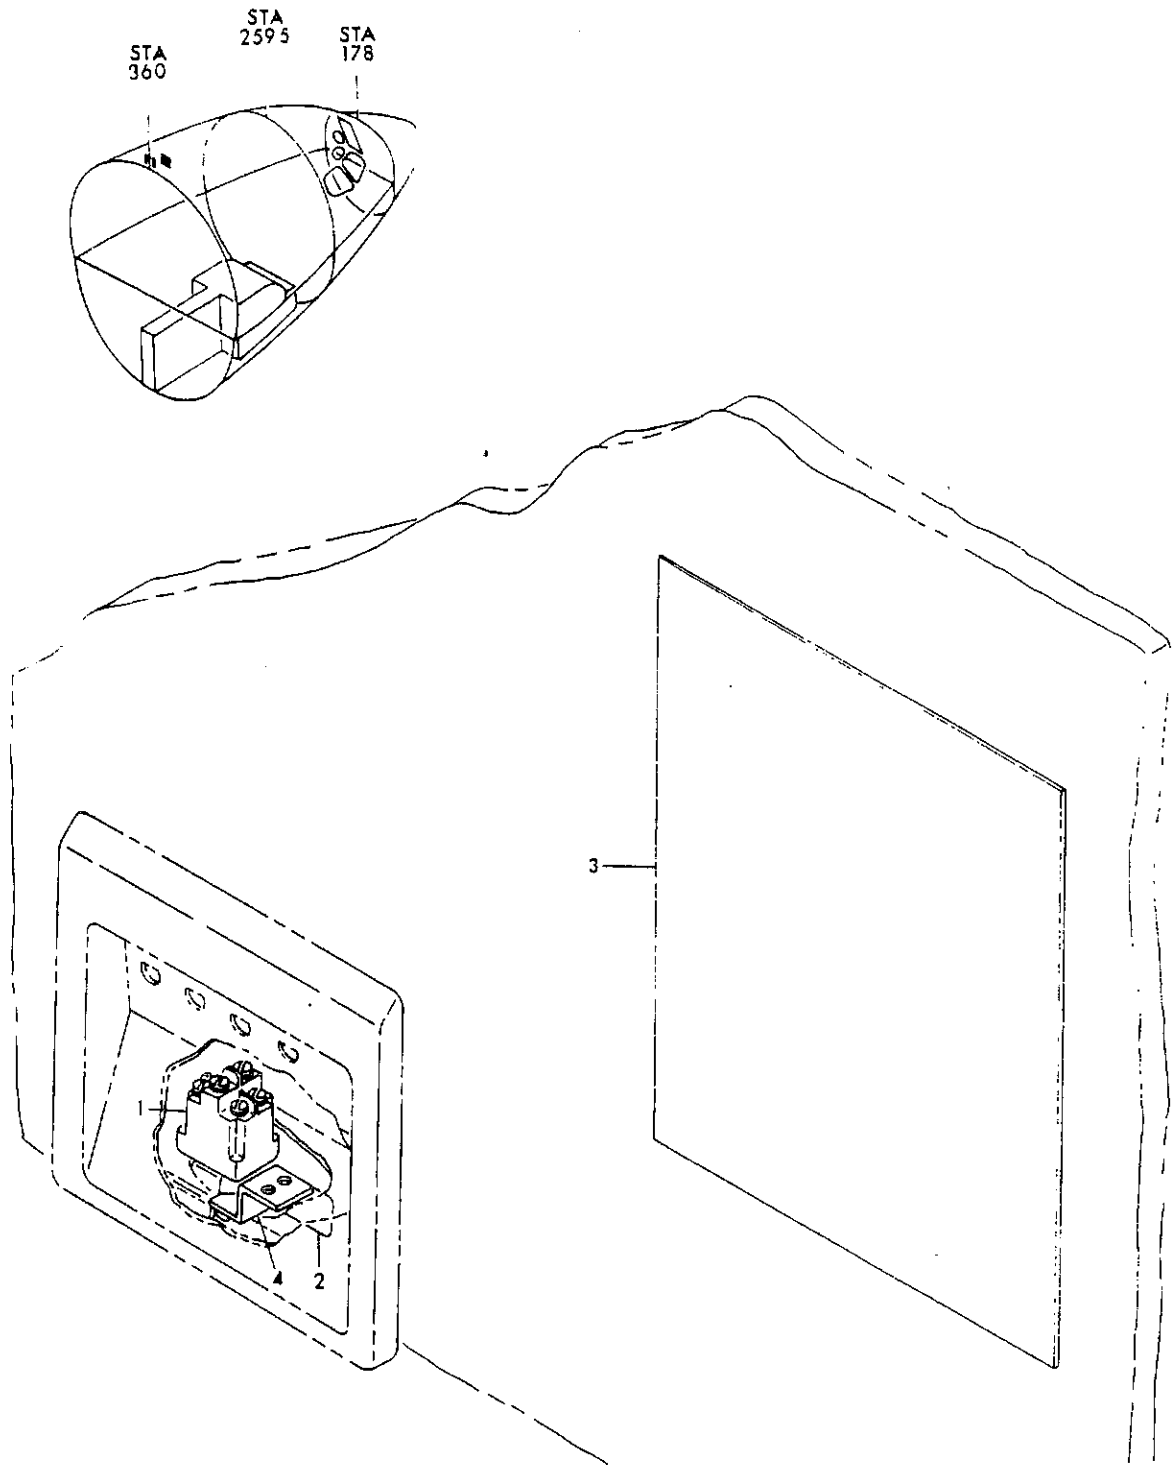


FIGURE 40. PANEL INSTL, CARGO ATTENDANTS (CARGO COMPARTMENT DOORS ONLY)

DETAILED PARTS LIST
52-03-40
PAGE 7

52-03-40

NOV 21/90

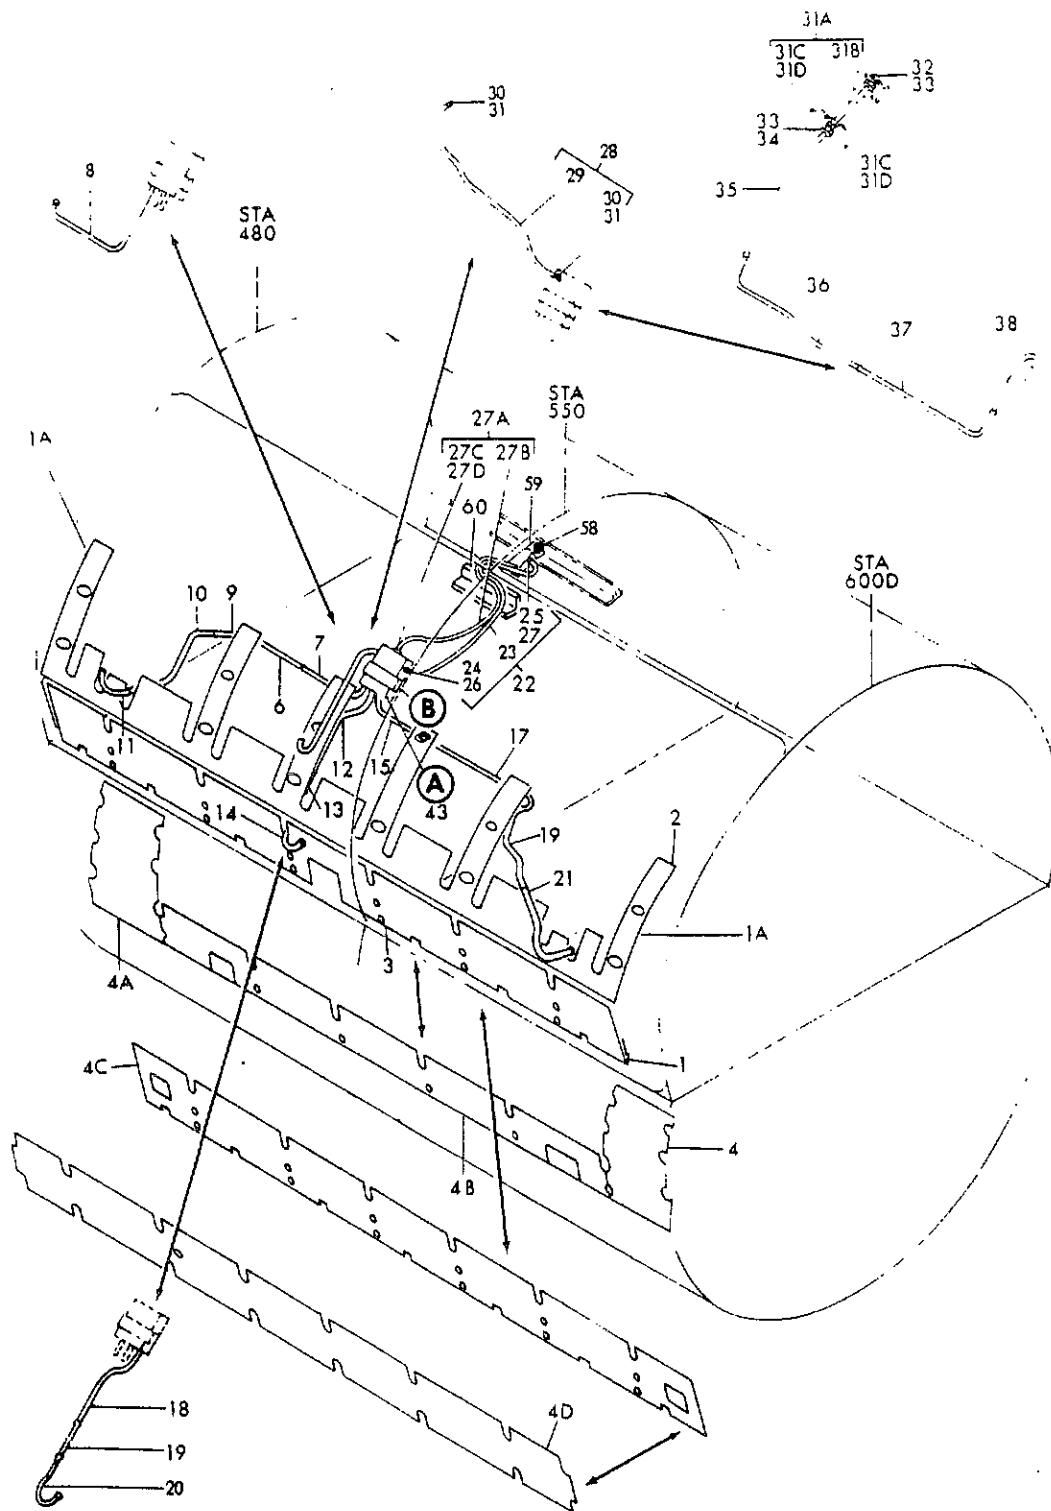


FIGURE 43. HEATER INSTL, MAIN CARGO DOOR
SURFACE BOX INSTL, MAIN CARGO DOOR ELECTRICAL (SHEET 1)

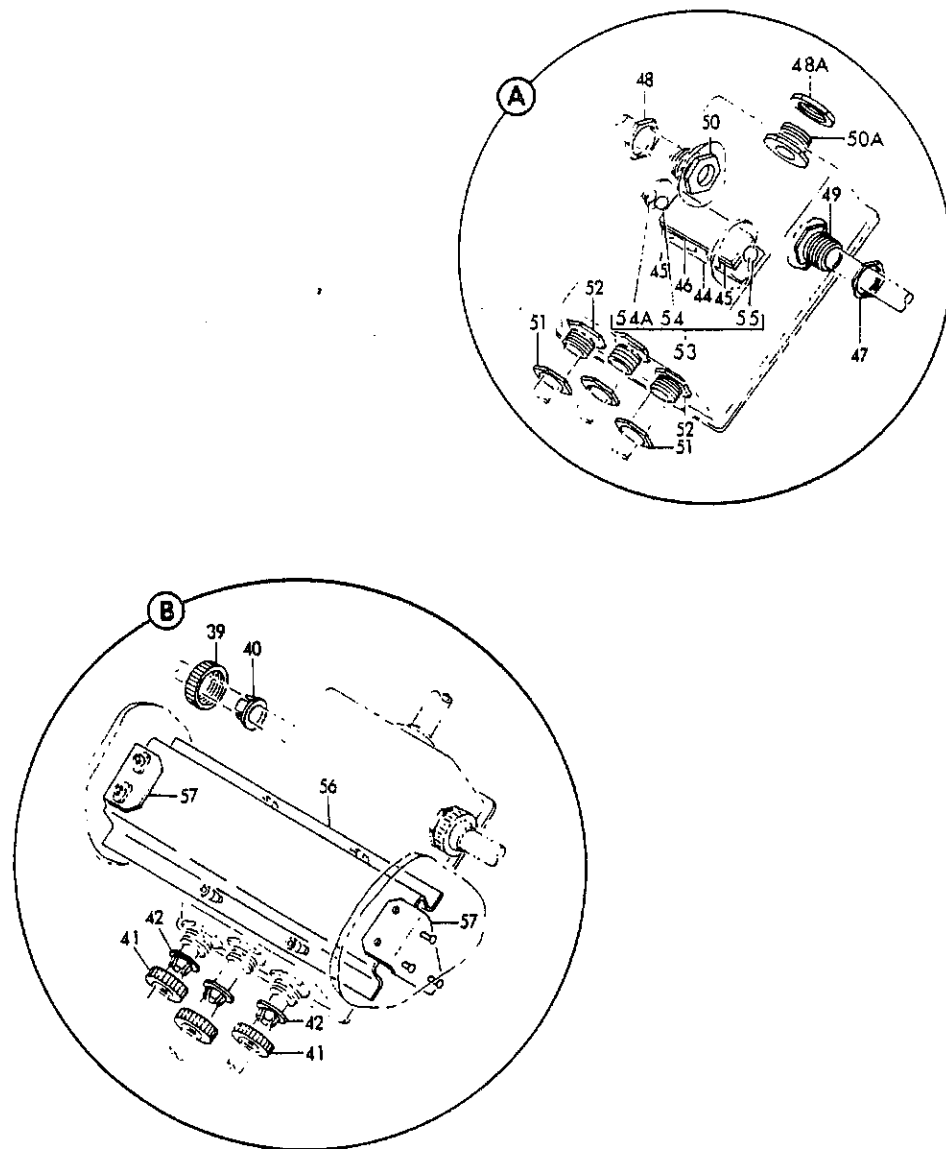


FIGURE 43. HEATER INSTL, MAIN CARGO DOOR SURFACE
BOX INSTL, MAIN CARGO DOOR ELECTRICAL (SHEET 2)

BOEING *707*
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R	43	65-32222-3		HEATER INSTL, MAIN CARGO DOOR SURFACE		RF
				BOX INSTL, MAIN CARGO DOOR ELECTRICAL		
				. HEATER INSTL, MAIN CARGO DOOR SURFACE (SEE 21-2, FIG. 2, ITEM 36)		
R	1A	SYD29918-1		. . STRIP, WEAR (VZ0268) (ADDED BY QEA E.O. 9470) . . .	0150	6
	2	10-60911-22		. . HEATER, ELECTRIC.		1
R	3	10-60911-21		. . HEATER, ELECTRIC.	0150	1
R	4D	10-60911-42		. . HEATER, ELECTRIC.	5199	1
		65-32255-22		. BOX INSTL, MAIN CARGO DOOR ELECTRICAL (SEE 24-3, FIG. 2, ITEM 151)		RF
	5	65-32255-6		. . CONDUIT, 3/4 IN. .028 5052-0.		1
	6	65-32255-14		. . CONDUIT, 3/4 IN. .028 5052-0.		1
	8	65-32255-21		. . CONDUIT, 1/2 IN. .028 5052-0.		1
	12	65-32255-7		. . CONDUIT, 1/2 IN. .028 5052-0.		1
	13	65-32255-13		. . CONDUIT, 1/2 IN. .028 5052-0.		1
	14	65-32255-8		. . CONDUIT, 1/2 IN. .028 5052-0.		1
	16	65-32255-18		. . CONDUIT, 1/2 IN. .028 5052-0.		1
	18	65-32255-19		. . CONDUIT, 1/2 IN. .028 5052-0.		1
	20	65-32255-20		. CONDUIT, 1/2 IN. .028 5052-0.		1
	22	69-25820-6		. . CONDUIT ASSY.		1
	23	69-25820-7		. . HOSE.		1
	24	AN3054-12		. . NUT		1
	26	69-25820-5		. . FERRULE		1
	27A	69-25820-6		. . CONDUIT ASSY.		1
	27B	69-25820-7		. . HOSE.		1
	27C	AN3054-12		. . NUT		1
	27D	69-25820-5		. . FERRULE		1
	39	AN3054-12		. . NUT		1
	40	AN3053-12		. . FERRULE		1
	41	AN3054-8		. . NUT		3
	42	AN3053-8		. . FERRULE		3
R	43	69-25789-6		. . BOX ASSY, DISCONNECT.	5199	1
	44	MS18029-2S3		. . COVER ASSY.		1
				ATTACHING PARTS		
		NAS600-6P		. . SCREW		2
	45	MS25227-3A		. . STRIP		2
	46	MS27212-2-3		. . TERMINAL STRIP.		1
	47	AN3066-12		. . NUT		1
	48	AN3066-12		. . NUT		1
	48A	AN3066-12		. . NUT		1
	49	AN3064-12		. . CONNECTOR		1
	50	AN3064-12		. . CONNECTOR		1
	50A	AN3064-12		. . CONNECTOR		1
	51	AN3066-8		. . NUT		3
	52	AN3064-8		. . CONNECTOR		3
R	53	69-25789-7		. . BOX ASSY.	5199	1
	54	BACM10N00-2AAT		. . MARKER, 3 ALUMINUM FOIL		1
	55	BACM10N00-2PP		. . MARKER, 1 ALUMINUM FOIL		1
	56	69-25797-1		. . BRACKET ASSY, SUPPORT		1
				ATTACHING PARTS		
		NAS603-5P		. . SCREW		4
	57	69-25797-3		. . BRACKET ASSY, SUPPORT		2
		MS20470D5		. . RIVET		6
	58	NAS1368N10A		. . GROMMET		1
R	59	69-29126-1		. . BRACKET ASSY, RECEPTACLE SUPPORT.	0150	1
R	59	69-29126-3		. . BRACKET ASSY, RECEPTACLE SUPPORT.	5199	1
				ATTACHING PARTS		
		NAS517-3-9		. . SCREW		2
		AN960PD10		. . WASHER.		2
		NAS679A3W		. . NUT		2
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 04
MISCELLANEOUS DOORS

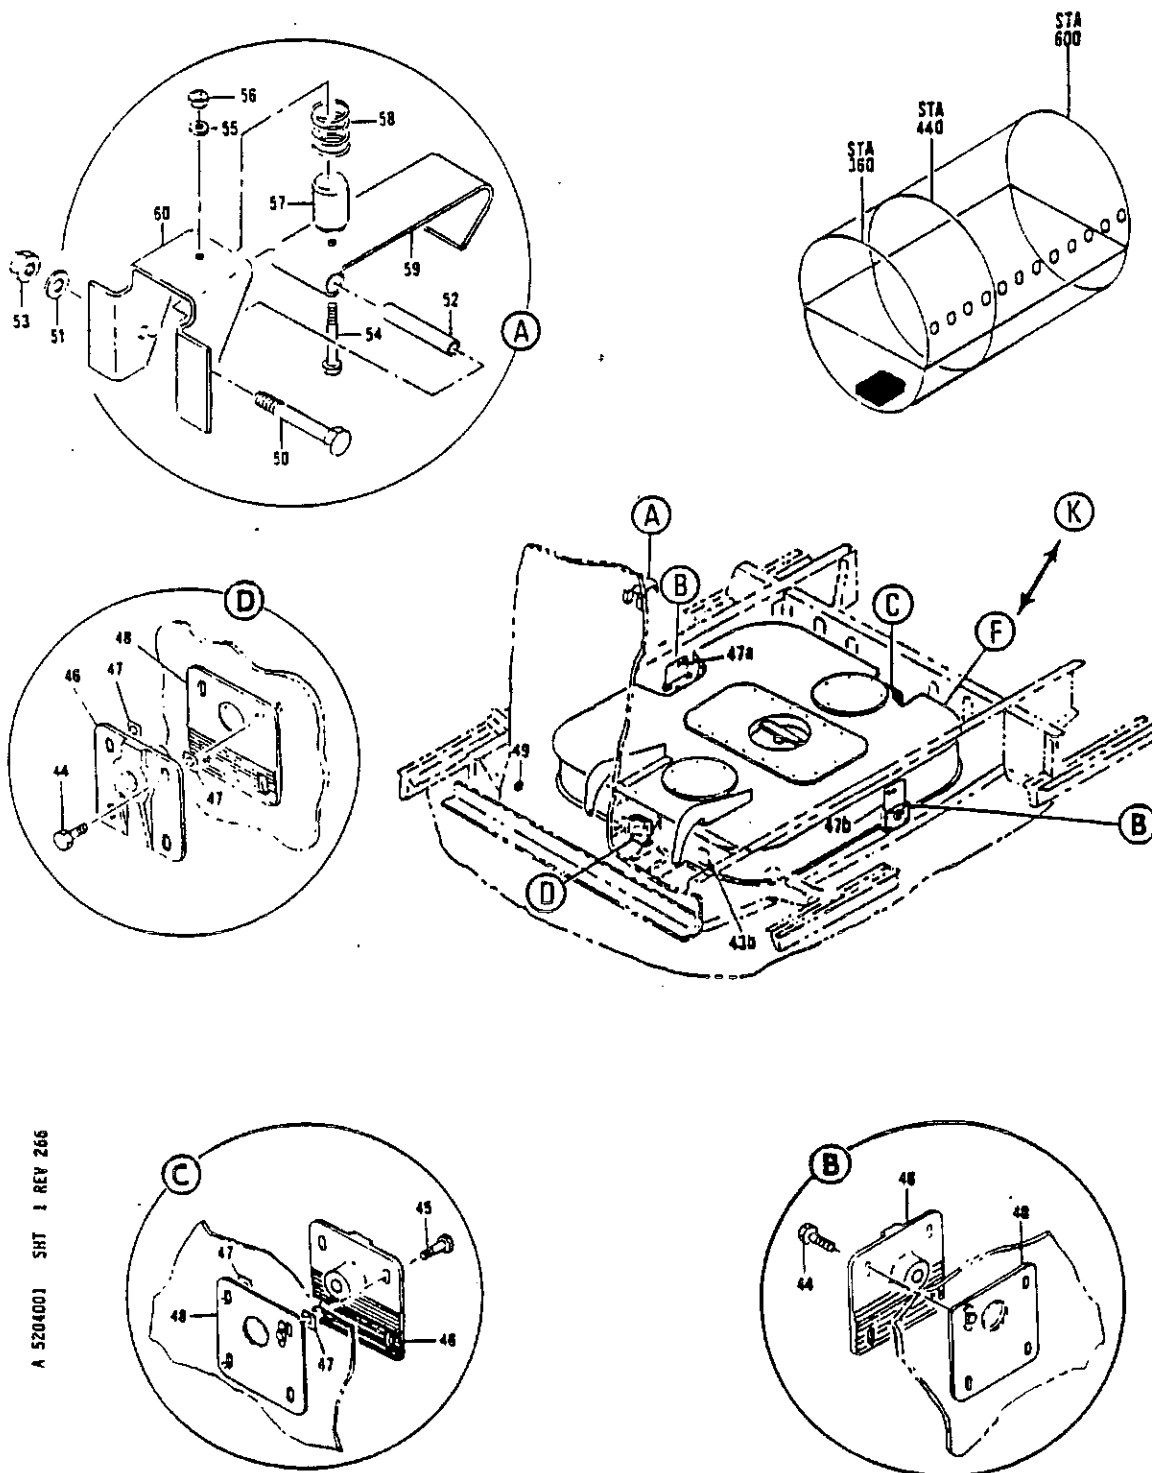


FIGURE 1. DOOR INSTL. ELECTRONICS ACCESS DOOR (SHEET 1)


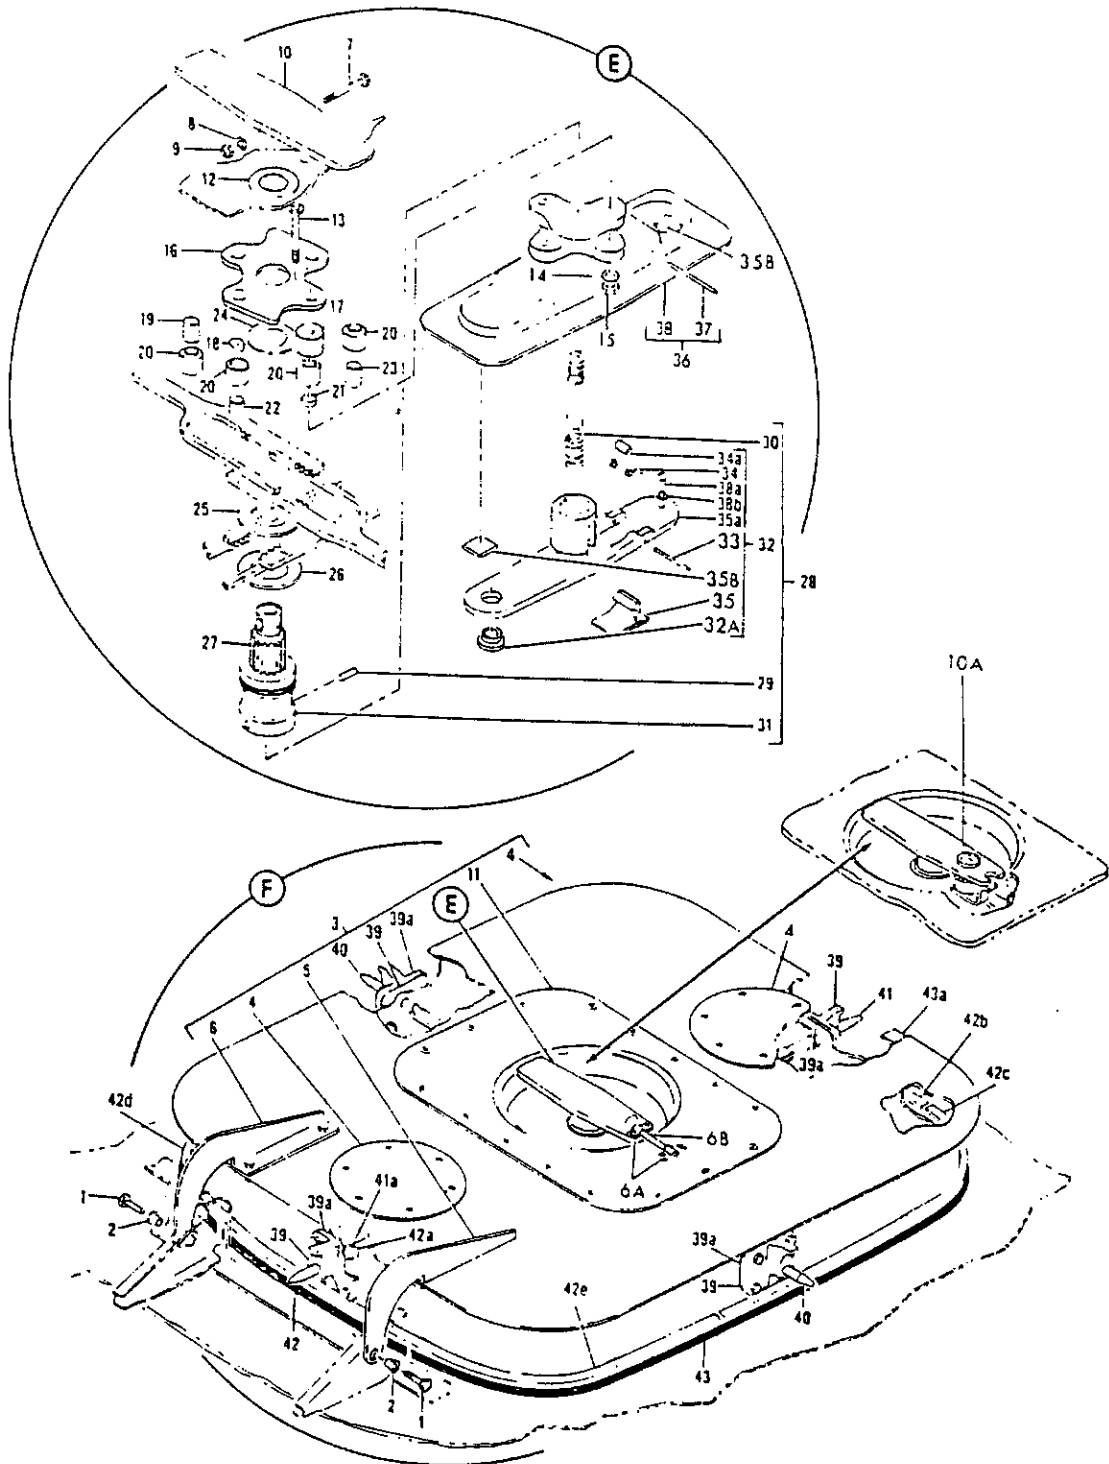


FIGURE 1. DOOR INSTL, ELECTRONIC ACCESS PLATE AND FRAME INSTL, ELECTRONIC ACCESS DOOR
HOOK ASSY, ELECTRONIC ACCESS DOOR (SHEET 2)


NOV 21/90

52-04-1

DETAILED PARTS LIST
52-04-1
PAGE 1

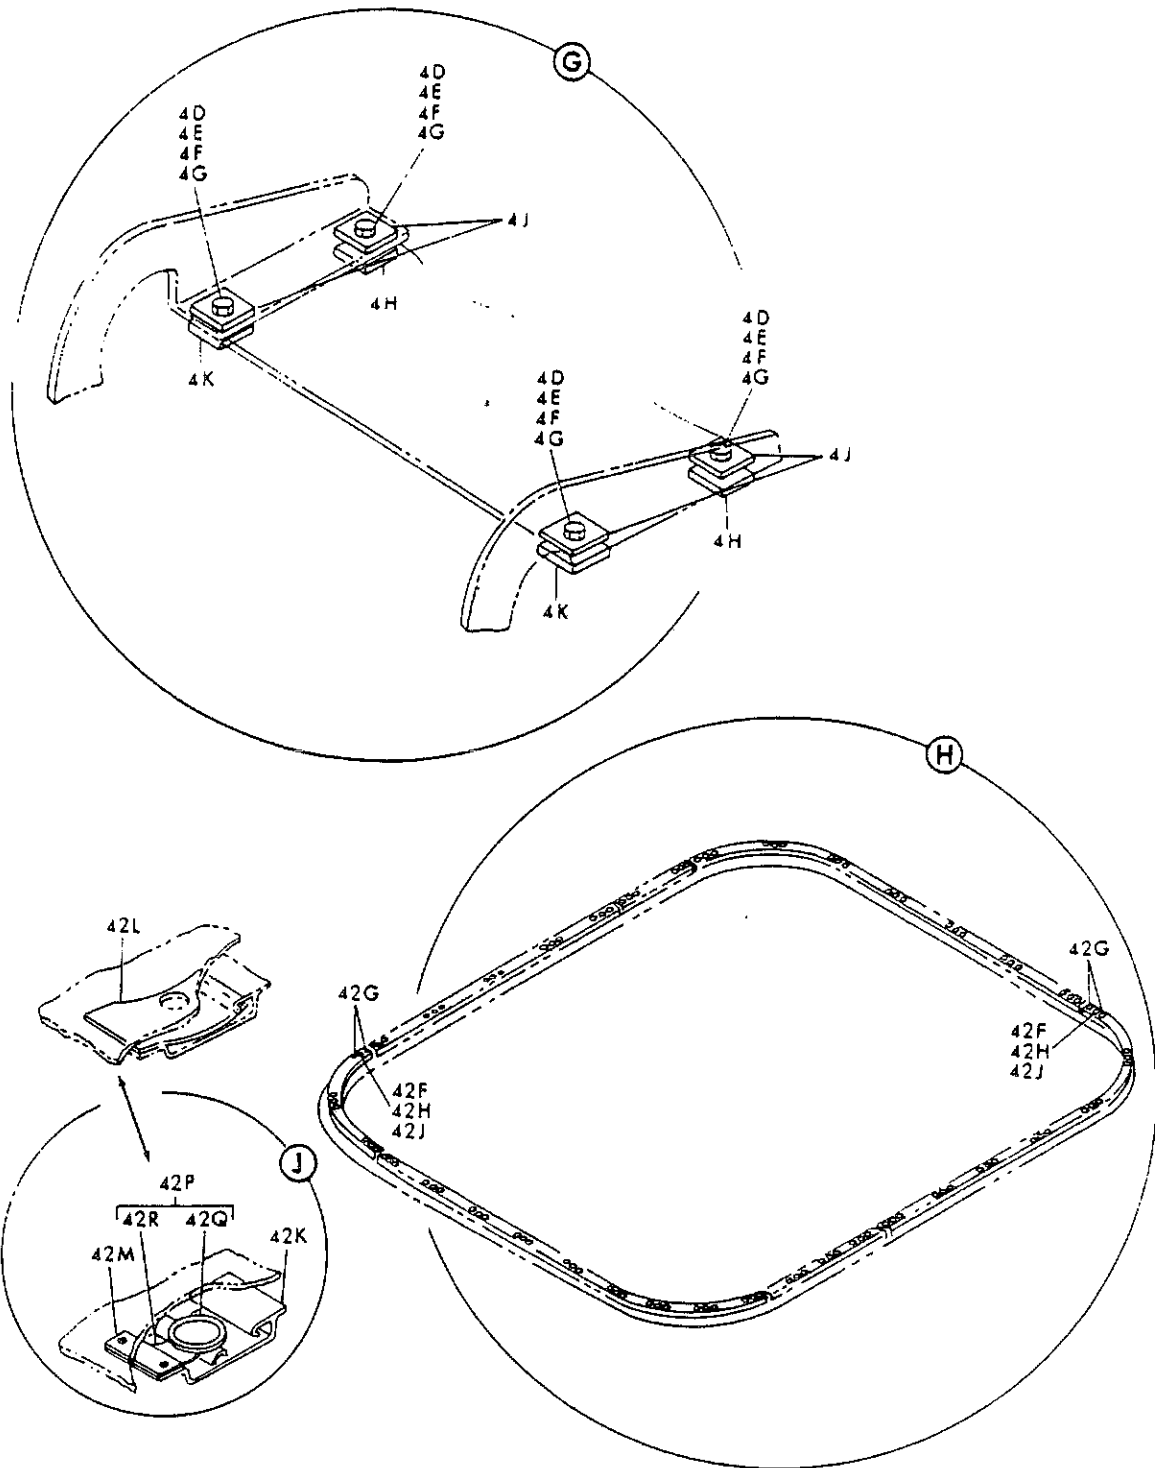

DOOR INSTL-ELECTRONIC ACCESS
PLATE AND FRAME INSTL, ELECTRONIC ACCESS DOOR
FIGURE 1. HOOK ASSY, ELECTRONIC ACCESS DOOR (SHEET 3)

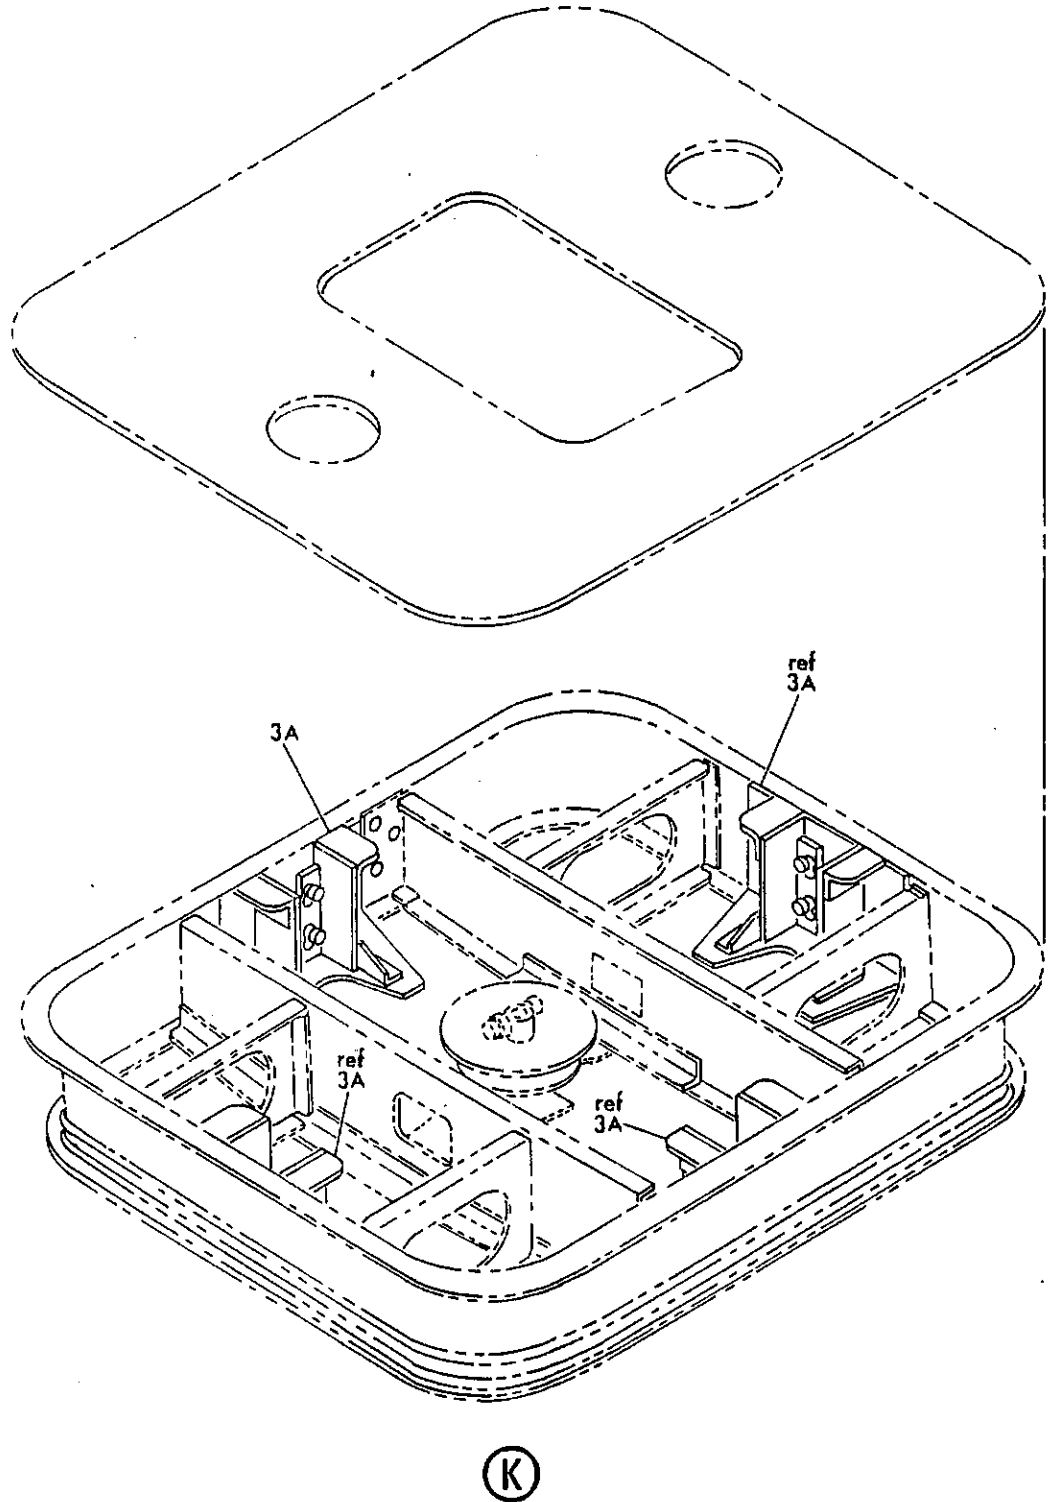

A 5204001 SHT 4 REV 266

FIGURE 1. DOOR INSTL, ELECTRONICS ACCESS DOOR (SHEET 4)

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1		DOOR INSTL, ELECTRONIC ACCESS		
	65-2163	PLATE AND FRAME INSTL, ELECTRONIC ACCESS DOOR		
		HOOK ASSY, ELECTRONIC ACCESS DOOR		
		DOOR INSTL, ELECTRONICS ACCESS (SEE 53-2, FIG. 2, ...	0151	RF
		ITEM 75)		
	65-2163-83	DOOR INSTL, ELECTRONICS ACCESS (SEE 53-2, FIG. 2, ...	5299	RF
		ITEM 75)		
1	AN5-5A	BOLT.		2
2	NAS77-5-21	BUSHING		2
3A	65-2163-1	DOOR ASSY, ELECTRONICS ACCESS (DOORS ONLY).	0150	1
		(REWORKED BY SB 3241) (MAY USE 65-2163-85		
		AFTER SB 3241 INCORPORATION)		
3A	65-2163-85	DOOR ASSY, ELECTRONICS ACCESS	5299	1
3A	65-2163-1	DOOR ASSY-ELECTRONICS ACCESS (REWORKED BY SB 3241)	5151	1
		(MAY USE 65-2163-85 AFTER SB 3241		
		INCORPORATION)		
4	65-2163-20	COVER, ELECTRONICS ACCESS DOOR.		2
		ATTACHING PARTS		
	NAS221-8	SCREW	0151	12
	NAS221-9	SCREW	5299	12
		-----*		
4A	65-2163-43	HINGE		1
4B	65-2163-44	HINGE		1
		ATTACHING PARTS		
4C	AN3-7A	BOLT.	0151	2
4D	BACB3ONE3-10	BOLT.	5299	4
4E	AN3-10A	BOLT.	0151	2
4F	AN960D10	WASHER.		4
4G	BACN10BY53W	NUT	0151	4
4G	BACN10JC3	NUT	5299	4
		-----*		
4H	65-2163-12	FILLER, RADIUS.		2
4J	65-2163-45	FILLER, RADIUS.		4
4K	65-2163-19	FILLER, RADIUS.		2
7	AN3-13A	BOLT, (USED WITH 69-2352)	5299	1
8	AN960D10	WASHER, (USED WITH 69-2352)	5299	1
9	NAS679A3W	NUT, (USED WITH 69-2352).	5299	1
10	69-2352-2	HANDLE, INNER (USED WITH AN3-13A, AN960D10 AND.	0151	1
		NAS679A3W)		
		(OPTIONAL H759-15 (V83014))		
10	H759-15	HANDLE, INNER (V83014).	0151	1
		(OPTIONAL TO 69-2352-2 (USED WITH AN3-13A,		
		AN960D10 AND NAS679A3W))		
10	H759-15	HANDLE, INNER (V83014).	5299	1
11	65-2163-37	COVER, ELECTRONICS ACCESS DOOR.		1
		ATTACHING PARTS		
	NAS517-3-2	SCREW	0151	16
	BACB30LU3-2	BOLT.	5299	16
		-----*		
12	63-1658-2	WASHER.		1
13	NAS584-24	BOLT.	0151	4
13	BACB30LU4-26	BOLT.	5299	4
14	AN960D416	WASHER.		4
15	NAS679A4W	NUT	0151	4
15	BACN10JC4	NUT	5299	4
16	65-2163-52	PLATE, ELECTRONICS ACCESS DOOR SUPPORT.		1
17	NAS43DD4-23	SPACER.		1
18	NAS43DD4-9	SPACER.		1
19	NAS43DD4-35	SPACER.		1
20	DW4K2	BEARING, (V21335)	0151	4
20	BACB10CG4	BEARING	5299	4
21	NAS43DD4-12	SPACER.		1
22	63-9328-1	SPACER.		1
23	NAS43DD4-35	SPACER.		1
24	63-1658-2	WASHER, ELECTRONICS ACCESS DOOR		1
25	63-1658	WASHER, ELECTRONICS ACCESS DOOR		1
26	63-1658-1	WASHER, ELECTRONICS ACCESS DOOR		1
27	6227Q27	QUAD RING, (V07322) (USED WITH 65-2163-53 AND	0151	1
		-69)		
28	65-2163-69	HANDLE ASSY, (USED WITH 6227Q27 (V79689).	0151	1
		BACSI2BG3AL4 AND AN960PD10L)		
		(OPTIONAL TO H759-11 (V83014))		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				




PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE						EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6		
1 28	H759-11	. . .	HANDLE ASSY, (V83014)					0151	1
			(OPTIONAL 65-2163-69 WITH 6227Q27 (V79689)						
			BACSI2BG3AL4 AND AN960PD10L)						
28	H759-11	. . .	HANDLE ASSY, (V83014)					5299	1
29	63-9316	. . .	PIN, ELECTRONICS ACCESS DOOR STEEL					0151	2
30	63-1659	. . .	SPRING, ELECTRONICS ACCESS DOOR COMPRESSION					0151	1
31	69-2462-1	. . .	SHAFT, ELECTRONICS ACCESS DOOR ACTUATOR					0151	1
32	69-2349-4	. . .	HANDLE ASSY, ELECTRONIC ACCESS DOOR OUTER					0151	1
32A	QB33992-2	. . .	LOCK, (V20268) (ADDED BY RAF MOD.					0130	1
			7211.019-157)						
33	NAS561P3-24	. . .	PIN					0151	2
34	66-2737-1	. . .	SPRING, ELECTRONICS ACCESS DOOR HANDLE					0151	1
34A	NAS42DD4-41	. . .	SPACER					0151	1
35	116497-1	. . .	TRIGGER, (V83014)					0151	1
			(OPTIONAL 105251-1 (V83014), 66-2705-1)						
35	105251-1	. . .	TRIGGER, (V83014)					0151	1
			(OPTIONAL 66-2705-1)						
			(OPTIONAL TO 116497-1 (V83014))						
35	66-2705-1	. . .	TRIGGER					0151	1
			(OPTIONAL TO 105251-1 (V83014)						
			116497-1 (V83014))						
35A	69-2349-5	. . .	HANDLE, ELECTRONIC ACCESS DOOR OUTER (ALTERED					0151	1
			FROM 69-2349-2)						
35B	65-2163-68	. . .	PLATE, STRIKER					0151	2
36	65-2905-5	. . .	HOUSING ASSY, OUTER HANDLE					0151	1
			(OPTIONAL H759-33 (V83014))						
36	H759-33	. . .	HOUSING ASSY, OUTER HANDLE (V83014)					0151	1
			(OPTIONAL TO 65-2905-5)						
36	H759-33	. . .	HOUSING ASSY, OUTER HANDLE (V83014)					5299	1
37	65-2905-4	. . .	PIN, ELECTRONICS ACCESS DOOR OUTER HANDLE					0151	2
			HOUSING						
38	65-2905-2	. . .	HOUSING, ELECTRONIC ACCESS DOOR OUTER HANDLE					0151	1
38A	BACSI2BG3AL4	. . .	SCREW, (USED WITH 65-2163-69)					0151	1
38B	AN960PD10L	. . .	WASHER, (USED WITH 65-2163-69)					0151	1
39	69-2158	. . .	FITTING, ELECTRONICS ACCESS DOOR LOCK PIN GUIDE						4
			ATTACHING PARTS						
	AN3-5A	. . .	BOLT					0151	16
	BACB30NE3-10	. . .	BOLT					5299	16
	AN960D10	. . .	WASHER					5299	16
			-----*						
39A	BACS40R023B024F	. . .	SHIM						4
39B	65-2163-115	. . .	FILLER, RADIUS					5299	8
40	H759-111	. . .	PIN ASSY, RACK (V83014)					5199	2
40	65-2993-1	. . .	PIN ASSY, LATCH (DELETED BY SB 3277)					0150	2
			(OPTIONAL H759-19 (V83014)						
40	H759-19	. . .	PIN ASSY, LATCH (V83014) (DELETED BY SB 3277)					0150	2
			(OPTIONAL 65-2993-1)						
40	H759-111	. . .	PIN ASSY, LATCH (V83014) (ADDED BY SB 3277)					0150	2
41	H759-113	. . .	PIN ASSY, RACK (V83014)					5199	1
41	65-2993-2	. . .	PIN ASSY, LATCH (DELETED BY SB 3277)					0150	2
			(OPTIONAL H759-21 (V83014)						
41	H759-21	. . .	PIN ASSY, LATCH (V83014) (DELETED BY SB 3277)					0150	2
			(OPTIONAL TO 65-2993-2)						
41	H759-113	. . .	PIN ASSY, LATCH (V83014) (ADDED BY SB 3277)					0150	2
41A	NAS561P3-10	. . .	PIN, (USED WITH 65-2993-3 (DELETED BY SB 3277)					0150	1
42	65-2993-3	. . .	PIN ASSY, LATCH (DELETED BY SB 3277)					0150	2
			(OPTIONAL H759-23 (V83014)						
42	H759-23	. . .	PIN ASSY, LATCH (V83014) (DELETED BY SB 3277)					0150	2
			(OPTIONAL TO 65-2993-3)						
42	H759-115	. . .	PIN ASSY, LATCH (V83014) (ADDED BY SB 3277)					0150	2
42	H759-115	. . .	PIN ASSY, RACK (V83014)					5199	1
42A	63-9329-1	. . .	RING, ELECTRONICS ACCESS DOOR SNAP (USED WITH					0150	1
			65-2993-3)						
42B	65-2163-48	. . .	STRIP, ELECTRONICS ACCESS DOOR AFT RIGHT						1
42C	65-2163-49	. . .	STRIP, ELECTRONICS ACCESS DOOR AFT LEFT						1
42D	65-2163-50	. . .	STRIP, ELECTRONICS ACCESS DOOR FORWARD RIGHT						1
42E	65-2163-51	. . .	STRIP, ELECTRONICS ACCESS DOOR FORWARD LEFT						1
			ATTACHING PARTS						
42F	NAS514P632-6	. . .	SCREW						36
42G	BACR15BB3D	. . .	RIVET					0151	72
42H	BACN10LFF15	. . .	NUTPLATE					0151	36
			(OPTIONAL BACN10BY506W)						
42J	BACN10BY506W	. . .	NUT					0151	36
			(OPTIONAL TO BACN10LFF15)						
MISSING ITEM NUMBERS ARE NOT APPLICABLE									


BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1 42J	BACN10JC06	. . .	NUT	5299	36
42K	69-41867-1	. . .	RETAINER, SEAL.	5299	1
	BACR15BA4A	. . .	ATTACHING PARTS RIVET	5299	4
42L	90-4007-3009	. . .	SEAL.	5299	1
42S	AN960C716	. . .	WASHER, (ADDED BY SB 3277).	0150	6
42T	AN960C716L	. . .	WASHER, (ADDED BY SB 3277).	0150	2
43	69-2452-2	. . .	SEAL, ELECTRONICS ACCESS DOOR SNAP.		1
43A	69-9744-1	. . .	PAD, ELECTRONICS ACCESS DOOR HOLD-OPEN HOOK SCUFF		1
43B	MS27253-1	. . .	PLATE		1
43B	MS27253F3	. . .	(OPTIONAL MS27253F3) PLATE		1
	65-2162	. . .	(OPTIONAL TO MS27253-1) PLATE AND FRAME INSTL, ELECTRONICS ACCESS DOOR (SEE . 53-2, FIG. 2, ITEM 74)		RF
44	AN3C5A	. . .	BOLT.		12
45	AN3C6A	. . .	BOLT.		4
46	69-2157-2	. . .	FITTING, DOOR LOCK KEEPER		4
46	69-2157	. . .	(OPTIONAL 69-2157) FITTING, DOOR LOCK KEEPER		4
47	BACS40A10-10	. . .	(OPTIONAL TO 69-2157-2) SHIM.		4
47A	65-2162-44	. . .	PLATE, ELECTRONICS ACCESS DOOR FRAME SCUFF.		1
47B	65-2162-45	. . .	PLATE, ELECTRONICS ACCESS DOOR FRAME SCUFF.		1
	NAS221-13	. . .	ATTACHING PARTS SCREW		8
48	69-2002	. . .	PLATE, ELECTRONICS ACCESS DOOR SERRATED		4
49	NAS357-3A	. . .	GROMMET		1
	69-3643-3	. . .	HOOK ASSY, ELECTRONICS ACCESS DOOR (SEE 53-8, FIG. 2, ITEM 30)		RF
50	AN4-24A	. . .	BOLT.		1
51	AN960D416	. . .	WASHER.		1
52	NAS43DD4-128	. . .	SPACER.		1
53	BACN10BY54W	. . .	NUT		1
54	AN3-15A	. . .	BOLT.		1
55	BACW10P44AL	. . .	WASHER.		1
56	BACN10BY53W	. . .	NUT		1
57	69-9744	. . .	SPACER, ELECTRONICS ACCESS DOOR HOLD OPEN HOOK.		1
58	63-8846	. . .	SPRING, ELECTRONICS ACCESS DOOR COMPRESSION		1
59	69-3643-2	. . .	HOOK, ELECTRONICS ACCESS DOOR		1
60	69-3643-1	. . .	BRACKET, ELECTRONICS ACCESS DOOR HOOK		1


MISSING ITEM NUMBERS ARE NOT APPLICABLE

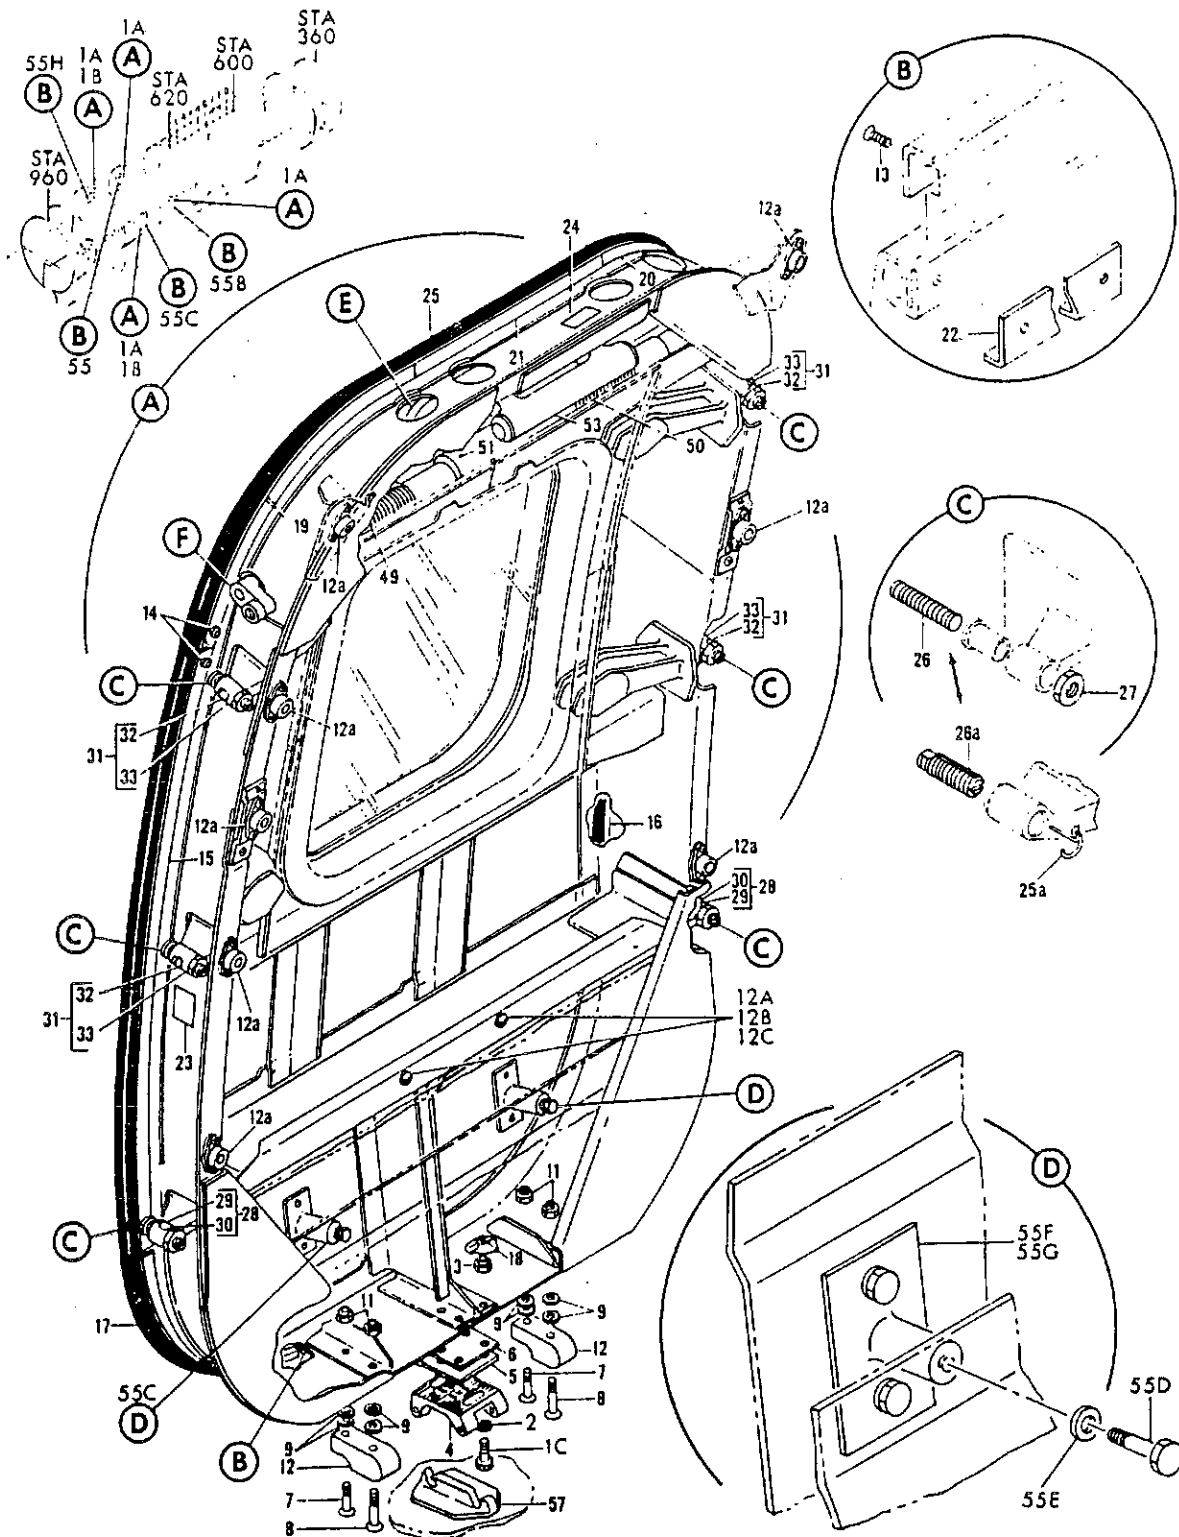

HATCH ASSY, EMERGENCY (DOORS ONLY) (SHEET 1)
FIGURE 2. SUPPORT INSTL, EMERGENCY EXIT LOWER SILL

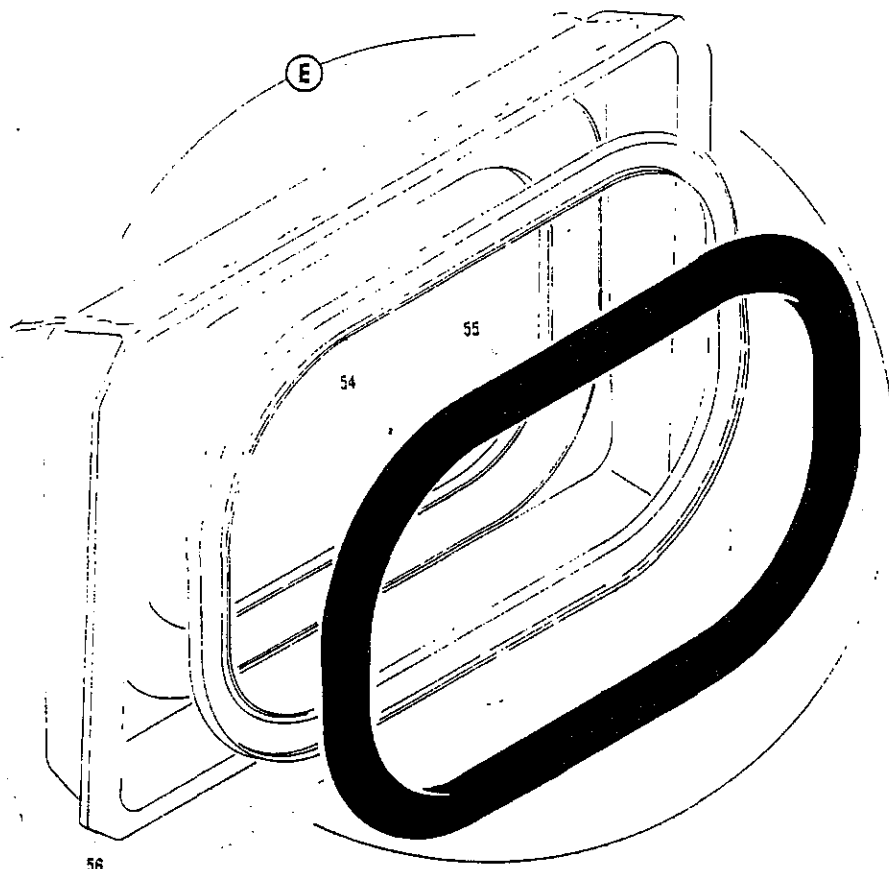

56

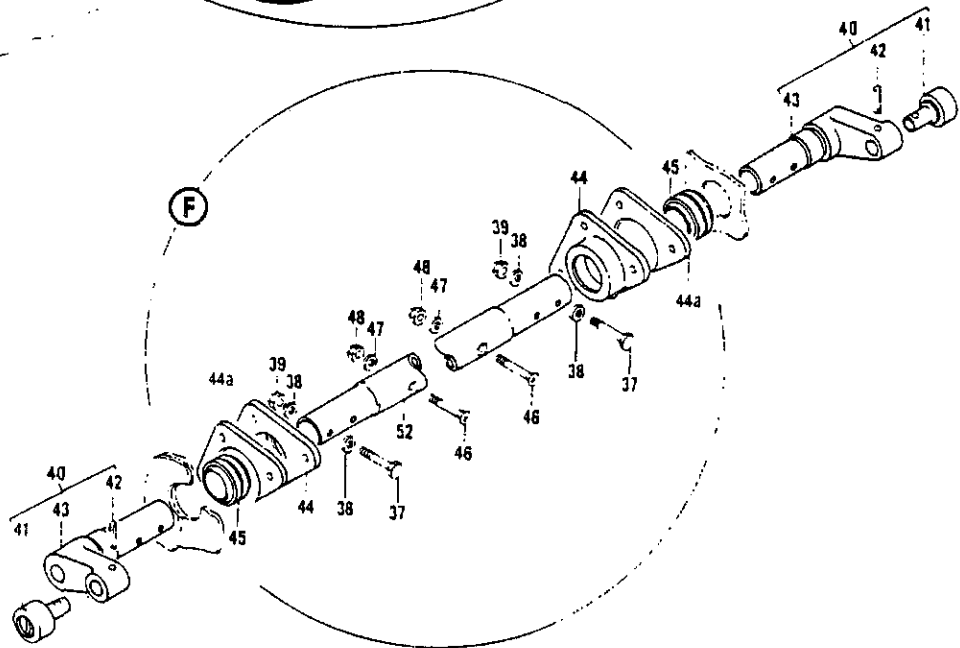

SUPPORT INSTL, EMERGENCY EXIT LOWER SILL
FIGURE 2. HATCH ASSY, EMERGENCY (DOOR ONLY) (SHEET 21)

NOV 21/90

52-04-2

DETAILED PARTS LIST
52-04-2
PAGE 1

BOEING *707* Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
2		HATCH ASSY, EMERGENCY (DOORS ONLY)		
1A	50-7978-92	SUPPORT INSTL, EMERGENCY EXIT LOWER SILL.		RF
		. HATCH ASSY, EMERGENCY (DOORS ONLY) (SEE 53-2, FIG. 2, ITEM 34)		
1C	AN3-6A	. . BOLT.		4
2	AN960D10	. . WASHER.		4
3	BACN10JP3C	. . NUT		4
4	65-14577	. . FITTING, EMERGENCY HATCH LOWER PIVOT.		1
5	63-8998	. . PLATE, EMERGENCY HATCH LOWER PIVOT FITTING SERRATED		1
6	BACS40824-34	. . SHIM.		AR
7	NAS517-3-9	. . SCREW		2
8	NAS517-3-15	. . SCREW		2
9	AN960-10L	. . WASHER.		AR
11	BACN10JP3C	. . NUT		4
12	63-1422-1	. . PAD, EMERGENCY HATCH HEEL		2
	65-4030-77	. . SUPPORT INSTL, EMERGENCY ESCAPE HATCH PANEL		1
12A	10-60831-7	. . FASTENER ASSY, CABIN SOUND PROOFING		12
12B	2-0-140	. . STUD, (V94222).		2
12C	GSR2-93	. . GROMMET, (V94222)		2
13	NAS514P632-6	. . SCREW		18
14	NAS679A06W	. . NUT		4
15	50-7978-65	. . ANGLE, EMERGENCY HATCH SIDE SEAL RETAINING (LH)		1
16	50-7978-66	. . ANGLE, EMERGENCY HATCH SIDE SEAL RETAINING (RH)		1
17	50-7978-67	. . ANGLE, EMERGENCY HATCH LOWER CORNER SEAL RETAINING (LH)		1
18	50-7978-68	. . ANGLE, EMERGENCY HATCH LOWER CORNER SEAL RETAINING (RH)		1
19	50-7978-69	. . ANGLE, EMERGENCY HATCH UPPER CORNER SEAL RETAINING (LH)		1
20	50-7978-70	. . ANGLE, EMERGENCY HATCH UPPER CORNER SEAL RETAINING (RH)		1
21	50-7978-71	. . ANGLE, EMERGENCY HATCH UPPER SEAL RETAINING		1
22	50-7978-72	. . ANGLE, EMERGENCY HATCH LOWER SEAL RETAINING		1
23	MS27253-1	. . PLATE, IDENTIFICATION (OPTIONAL MS27253F3)		1
23	MS27253F3	. . PLATE, IDENTIFICATION (OPTIONAL TO MS27253-1)		1
		ATTACHING PARTS		
	MS20470D3	. . RIVET		4
R	25	69-41868-1		1
R	25	69-41868-3		1
	25A	66-16691-1		6
	26A	66-12687-1		6
	28	65-2129-5		2
	29	66-12688-2		1
	30	65-2129-6		1
R	31	65-2110-10		4
R	31	65-2110-19		4
	32	66-12688-2		1
R	33	65-2110-13		1
R	33	65-2110-20		1
	37	AN173-12A		4
	38	AN960-10		8
	39	NAS679A3W		4
	40	69-1526		2
	41	BACB10BH211CF5		1
		. . BEARING (OPTIONAL 69-1526-3 (ALTERED FROM BACB10BH59CF7))		
	41	69-1526-3		1
		. . BEARING, (ALTERED FROM BACB10BH59CF7) (OPTIONAL TO BACB10BH211CF5)		
	42	NAS561P4-10		1
	43	69-1526-1		1
	44	66-1075-4		2
	44A	66-1075-8		AR
	45	BACB10A398GCM2		2
	46	NAS514P1032-20		2
	47	AN960-10		2
	48	NAS679A3W		2
	48	NAS679A3W		2
	49	66-1689-1		1
	50	66-1689-2		1
	51	NAS561P6-20		2
R	52	66-1579		1
		. . PIN		
		. . BELLCRANK, EMERGENCY HATCH LATCH ROLLER		
		. . BEARING, HOUSING.		
		. . SHIM, GALLEY DOOR BEARING HOUSING		
		. . BEARING		
		. . SCREW		
		. . WASHER.		
		. . NUT		
		. . NUT		
		. . SPRING, EMERGENCY HATCH TORSION (LH).		
		. . SPRING, EMERGENCY HATCH TORSION (RH).		
		. . PIN		
		. . TUBE, EMERGENCY HATCH LATCH TORQUE.	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
R R R R R R R R R R	2 52	66-1579-1	.	.	TUBE, LATCH TORQUE.	.	.	.	5199	1
	53	65-1750-7	.	.	HANDLE ASSY.	.	.	.	0150	1
			.	.	(OPTIONAL 65-1750-8)	.	.	.		
	53	65-1750-8	.	.	HANDLE ASSY.	.	.	.	0150	1
			.	.	(OPTIONAL TO 65-1750-7)	.	.	.		
	53	65-1750-8	.	.	HANDLE ASSY.	.	.	.	5199	1
	54	69-8857	.	.	RETAINER, EMERGENCY HATCH SEAL.	.	.	.		1
	54E	66-8712	.	.	SEAL, EMERGENCY HATCH.	.	.	.		1
			.	.	(OPTIONAL TO 66-8712-1)	.	.	.		
	54E	66-8712-1	.	.	SEAL, EMERGENCY HATCH.	.	.	.		1
R R R R R R R R R R	56	65-2108-5	.	.	FRAME ASSY, EMERGENCY EXIT HANDLE.	.	.	.	0150	1
			.	.	(OPTIONAL 65-2108-7, -9)	.	.	.		
	56	65-2108-7	.	.	FRAME ASSY, HANDLE.	.	.	.	0150	1
			.	.	(OPTIONAL TO 65-2108-5, -9)	.	.	.		
	56	65-2108-9	.	.	FRAME ASSY, HANDLE.	.	.	.	0150	1
			.	.	(OPTIONAL TO 65-2108-5, -7)	.	.	.		
	56	65-2108-9	.	.	FRAME ASSY, HANDLE.	.	.	.	5199	1
		65-1974-25	.	.	FOR REFERENCE TO OTHER HATCH DETAILS, SEE NHA.	.	.	.		RF
		65-1974-26	.	.	SUPPORT INSTL, STATION 690.5 EMERGENCY EXIT LOWER.	.	.	.		RF
		65-1974-23	.	.	SILL (LH) (SEE 53-2, FIG. 2, ITEM 34A)	.	.	.		RF
		65-1974-24	.	.	SUPPORT INSTL, STATION 770.5 EMERGENCY EXIT LOWER.	.	.	.		RF
			.	.	SILL (RH) (SEE 53-2, FIG. 2, ITEM 34A)	.	.	.		
			.	.	SUPPORT INSTL, STATION 770.5 EMERGENCY EXIT LOWER.	.	.	.		RF
			.	.	SILL (LH) (SEE 53-2, FIG. 2, ITEM 34B AND 53-2, FIG. 5, ITEM 64)	.	.	.		
			.	.	SUPPORT INSTL, STATION 770.5 EMERGENCY EXIT LOWER.	.	.	.		RF
			.	.	SILL (RH) (SEE 53-2, FIG. 2, ITEM 34B AND 53-2, FIG. 5, ITEM 65)	.	.	.		
	57	65-22065-4	.	.	FITTING, EMERGENCY HATCH LOWER PIVOT HOOK.	.	.	.		1
		NAS517-3-5	.	.	ATTACHING PARTS	.	.	.		4
		NAS679A3W	.	.	SCREW.	.	.	.		4
			.	.	NUT.	.	.	.		4

MISSING ITEM NUMBERS ARE NOT APPLICABLE

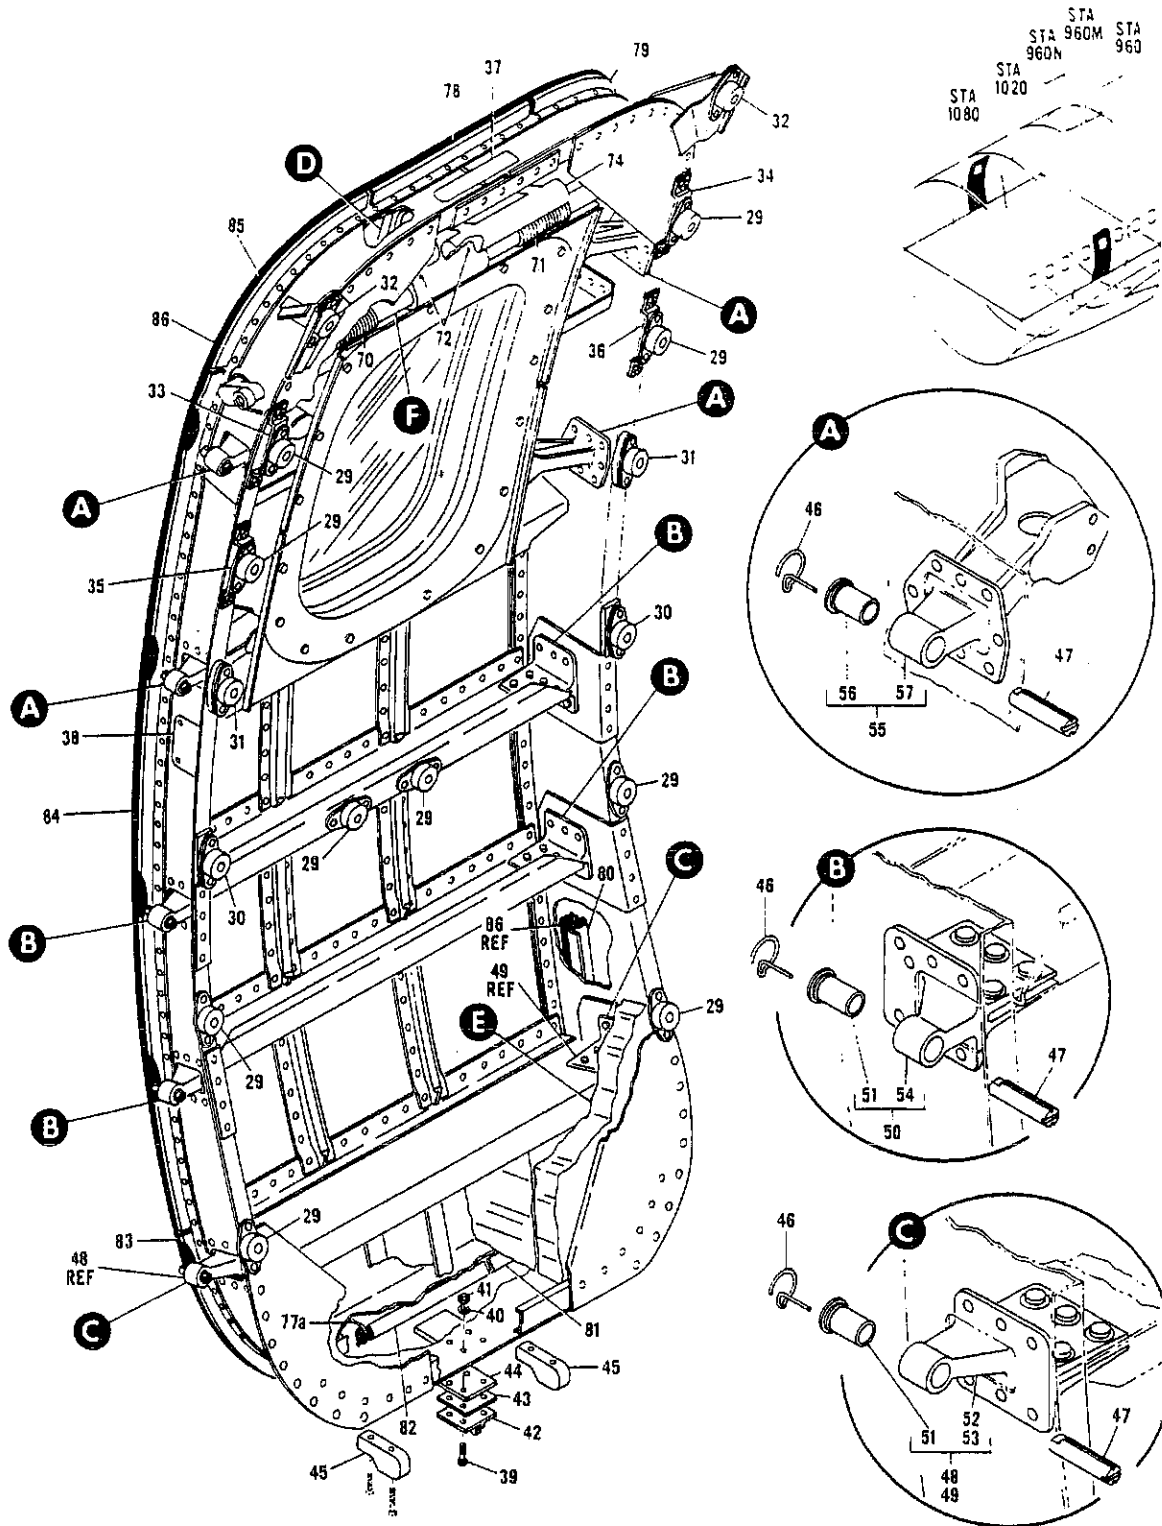


FIGURE 3. HATCH INSTL, STATION 990, 45 EMERGENCY EXIT (DOORS ONLY) (SHEET 1)

DETAILED PARTS LIST
52-04-3
PAGE 0

52-04-3

NOV 21/9

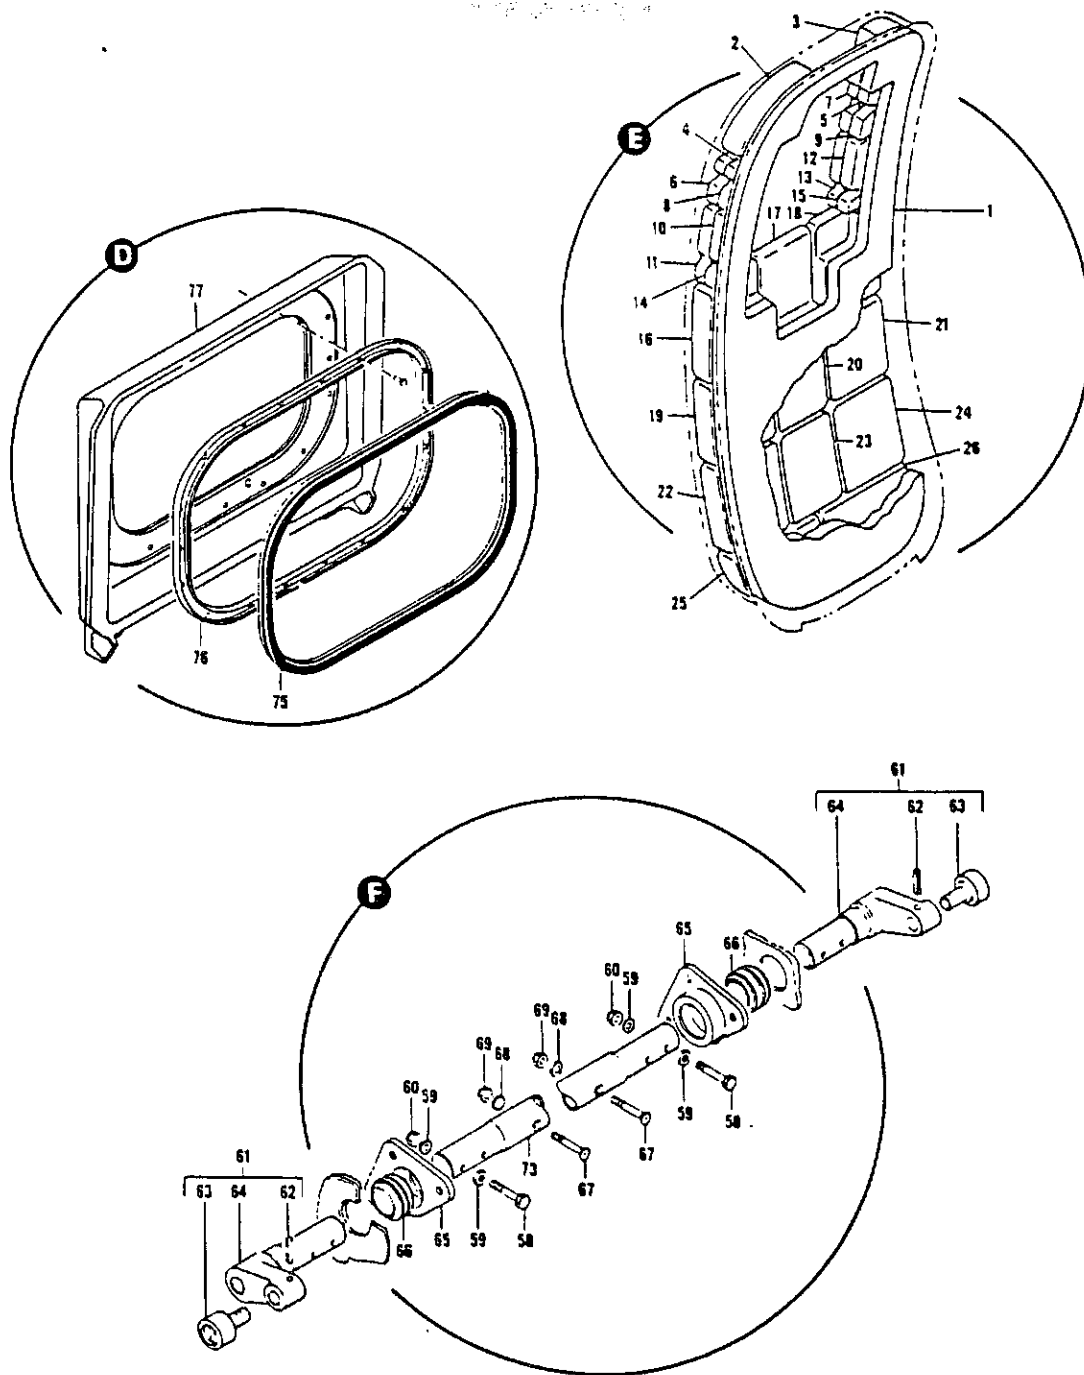


FIGURE 3. HATCH INSTL, STATION 990.45 EMERGENCY (DOORS ONLY) (SHEET 2)

NOV 21/90

52-04-3

DETAILED PARTS LIST
52-04-3
PAGE 1

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R	3	HATCH INSTL, STATION 990.45 EMERGENCY EXIT (DOORS ONLY) (SEE 53-2, FIG. 3, ITEM 66)	0150	RF
R		. HATCH ASSY, STATION 990.45 EMERGENCY EXIT	0150	1
R		. . INSULATION INSTL, STATION 990 EMERGENCY EXIT LINING	0150	1
R	1	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	2	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	3	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	4	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	5	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	6	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	7	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	8	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	9	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	10	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	11	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	12	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	13	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	14	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	15	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	16	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	17	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	18	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	19	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	20	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	21	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	22	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	23	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	24	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	25	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R	26	. . . BLANKET, STATION 990 EMERGENCY EXIT LINING. . . .	0150	1
R		INSULATION		
R		. . . SUPPORT INSTL, STATION 990 EMERGENCY EXIT LINING. .	0150	1
R	29	. . . FASTENER ASSY, CABIN SOUNDPROOFING.	0150	10
R		ATTACHING PARTS		
R		RIVET	0150	20
R		*-----*		
R	30	. . . FASTENER ASSY, CABIN SOUNDPROOFING.	0150	2
R		ATTACHING PARTS		
R		RIVET	0150	4
R		. . . SHIM, EMERGENCY ESCAPE HATCH.	0150	2
R		. . . SPACER, EMERGENCY ESCAPE HATCH LINING SUPPORT . .	0150	2
R		*-----*		
R	31	. . . FASTENER ASSY, CABIN SOUNDPROOFING.	0150	2
R		ATTACHING PARTS		
R		RIVET	0150	4
R		. . . SHIM, EMERGENCY ESCAPE HATCH.	0150	2
R		. . . FILLER, EMERGENCY ESCAPE HATCH SHOCKMOUNT	0150	2
R		*-----*		
R	32	. . . FASTENER ASSY, CABIN SOUNDPROOFING.	0150	2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
777
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	3	NAS602-8	ATTACHING PARTS								
R		63-2541	. . . SCREW							0150	4
R		NAS679A08W	. . . SHIM, EMERGENCY ESCAPE HATCH.							0150	AR
			. . . NUT							0150	4
			-----*								
R	33	69-24268-3	. . . BRACKET, EMERGENCY ESCAPE HATCH LINING SUPPORT.							0150	1
R	34	69-24268-4	. . . BRACKET, EMERGENCY ESCAPE HATCH LINING SUPPORT.							0150	1
R	35	69-24268-1	. . . BRACKET, EMERGENCY ESCAPE HATCH LINING SUPPORT.							0150	1
R	36	69-24268-2	. . . BRACKET, EMERGENCY ESCAPE HATCH LINING SUPPORT.							0150	1
			ATTACHING PARTS								
R		NAS1103-3W	. . . BOLT.							0150	6
R		NAS1103-4W	. . . BOLT, (USED WITH 69-24268-1 AND -2)							0150	2
R		BACS40A13-16	. . . SHIM.							0150	8
R		AN960PD10	. . . WASHER.							0150	6
R		AN960PD10L	. . . WASHER, (USED WITH 69-24268-1 AND -2)							0150	2
R		NAS679A3W	. . . NUT							0150	8
			-----*								
R	37	BACM9L41-38H	. . . SCOTCH-CAL, LH G RH D							0150	1
R	38	AN7510-1	. . . PLATE							0150	1
			ATTACHING PARTS								
R		MS20470D3	. . . RIVET							0150	4
			-----*								
R	39	NAS1103-8W	. . . BOLT.							0150	4
R	40	AN960PD10	. . . WASHER.							0150	4
R	41	NAS679A3W	. . . NUT							0150	4
R	42	9-66548-3001	. . . FITTING, LOWER PIVOT.							0150	1
R	43	3-94351	. . . PLATE, EMERGENCY ESCAPE HATCH SERRATED.							0150	1
R	44	BACS40B24-24	. . . SHIM.							0150	AR
R	45	66-17134-1	. . . PAD, EMERGENCY HATCH HEEL							0150	2
			ATTACHING PARTS								
R		NAS517-3-18	. . . SCREW							0150	2
R		NAS517-3-12	. . . SCREW							0150	2
R		AN960-10L	. . . WASHER.							0150	AR
			-----*								
R	46	66-16691-1	. . . SPRING, DOOR STOP PIN RETAINER.							0150	10
R	47	66-12687-1	. . . PIN, DOOR STOP.							0150	10
R	48	65-2129-7	. . . STOP ASSY, EMERGENCY HATCH.							0150	1
R	49	65-2129-8	. . . STOP ASSY, EMERGENCY HATCH.							0150	1
R	50	65-2129-9	. . . STOP ASSY, EMERGENCY HATCH.							0150	4
			ATTACHING PARTS								
R		MS20470D4	. . . RIVET, (USED WITH 65-2129-9).							0150	8
R		MS20470D6	. . . RIVET							0150	28
R		MS2042606	. . . RIVET, (USED WITH 65-2129-9).							0150	8
R		BACB30FM6-5	. . . BOLT.							0150	18
R		BACB30FM6-7	. . . BOLT.							0150	18
R		BACC30M6	. . . COLLAR.							0150	36
			-----*								
R	51	66-12688-2	. . . BUSHING, DOOR STOP.							0150	1
R	52	65-2129-11	. . . FITTING, EMERGENCY HATCH STOP (USED ON 65-2129-7)							0150	1
R	53	65-2129-12	. . . FITTING, EMERGENCY HATCH STOP (USED ON 65-2129-8)							0150	1
R	54	65-2129-10	. . . FITTING, EMERGENCY HATCH STOP (USED ON 65-2129-9)							0150	1
R	55	65-2110-10	. . . STOP ASSY							0150	4
			(OPTIONAL 65-2110-19)								
R	55	65-2110-19	. . . STOP ASSY							0150	4
			(OPTIONAL TO 65-2110-10)								
			ATTACHING PARTS								
R		MS20470D6	. . . RIVET							0150	32
R		MS20470D5	. . . RIVET							0150	8
R		BACR15CED6	. . . RIVET							0150	8
R		NAS1103-3W	. . . BOLT.							0150	8
R		AN960D10	. . . WASHER.							0150	8
R		NAS679A3W	. . . NUT							0150	8
			-----*								
R	56	66-12688-2	. . . BUSHING, DOOR STOP.							0150	1
R	57	65-2110-13	. . . STOP, EMERGENCY HATCH							0150	1
R	58	NAS1303-14W	. . . BOLT.							0150	4
R	59	AN960-10	. . . WASHER.							0150	8
R	60	NAS679A3W	. . . NUT							0150	4
R	61	69-1526	. . . BELLCRANK ASSY, EMERGENCY HATCH LATCH ROLLER.							0150	2
R	62	NAS561P4-10	. . . PIN							0150	1
R	63	BACB10BH211CF5	. . . BEARING							0150	1
			(OPTIONAL 69-1526-3)								
R	63	69-1526-3	. . . BEARING, (ALTERED FROM BACB10BH59CF7)							0150	1
			(OPTIONAL TO BACB10BH211CF5)								
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R	3 64	69-1526-1	. . .	BELLCRANK, EMERGENCY HATCH LATCH ROLLER	0150	1
	65	66-1075-4	. . .	HOUSING, GALLEY DOOR BEARING.	0150	2
R		MS2047006	. . .	ATTACHING PARTS RIVET	0150	6
			. . .	*-----*		
R	66	BACB10A398GCM2	. . .	BEARING	0150	2
R	67	NAS514P1032-20	. . .	SCREW	0150	2
R	68	AN960-10	. . .	WASHER.	0150	2
R	69	NAS679A3W	. . .	NUT	0150	2
R	70	66-1689-1	. . .	SPRING, EMERGENCY HATCH TORSION	0150	1
R	71	66-1689-2	. . .	SPRING, EMERGENCY HATCH TORSION	0150	1
R	72	NAS561P6-20	. . .	PIN	0150	2
R	73	66-1579	. . .	TUBE, TORQUE.	0150	1
R	74	65-1750-7	. . .	HANDLE ASSY	0150	1
R			. . .	(OPTIONAL 65-1750-8)		
R	74	65-1750-8	. . .	HANDLE ASSY	0150	1
R			. . .	(OPTIONAL TO 65-1750-7)		
R	75	66-8712	. . .	SEAL, EMERGENCY HATCH (EXTRUSION NO. BAC1521-518 X 18.40 IN. LG)	0150	1
R	76	69-8857	. . .	RETAINER, EMERGENCY HATCH SEAL.	0150	1
R		MS2042686	. . .	ATTACHING PARTS RIVET	0150	18
			. . .	*-----*		
R	77	65-2108-5	. . .	FRAME ASSY, EMERGENCY EXIT HANDLE	0150	1
R			. . .	(OPTIONAL 65-2108-9)		
R	77	65-2108-9	. . .	FRAME ASSY, EMERGENCY EXIT HANDLE	0150	1
R			. . .	(OPTIONAL TO 65-2108-5)		
R		MS2042686	. . .	ATTACHING PARTS RIVET	0150	6
			. . .	*-----*		
R	77A	69-24107-1	. . .	RETAINER, EMERGENCY HATCH SEAL.	0150	1
R	78	65-26587-41	. . .	ANGLE, STATION 990.45 EMERGENCY EXIT HATCH SEAL	0150	1
R			. . .	RETAINING UPPER		
R	79	65-26587-40	. . .	ANGLE, STATION 990.45 EMERGENCY EXIT HATCH SEAL	0150	1
R			. . .	RETAINING UPPER CORNER		
R	80	65-26587-36	. . .	ANGLE, STATION 990.45 EMERGENCY EXIT HATCH SEAL	0150	1
R			. . .	RETAINING SIDE		
R	81	65-26587-46	. . .	ANGLE, STATION 990.45 EMERGENCY EXIT HATCH SEAL	0150	1
R			. . .	RETAINING LOWER CORNER		
R	82	65-26587-42	. . .	ANGLE, STATION 990.45 EMERGENCY EXIT HATCH SEAL	0150	1
R			. . .	RETAINING LOWER		
R	83	65-26587-45	. . .	ANGLE, STATION 990.45 EMERGENCY EXIT HATCH SEAL	0150	1
R			. . .	RETAINING LOWER CORNER		
R	84	65-26587-35	. . .	ANGLE, STATION 990.45 EMERGENCY EXIT HATCH SEAL	0150	1
R			. . .	RETAINING SIDE		
R	85	65-26587-39	. . .	ANGLE, STATION 990.45 EMERGENCY EXIT HATCH SEAL	0150	1
R			. . .	RETAINING UPPER CORNER		
R		NAS514P632-6	. . .	ATTACHING PARTS SCREW	0150	44
		NAS679A06W	. . .	NUT	0150	42
R R	86	66-1576-3	. . .	SEAL, PRESSURE (EXTRUSION NO. BAC1521-523 X 144 IN. LG)	0150	1
			. . .	FOR REFERENCE TO OTHER HATCH DETAILS, SEE NHA	0150	

MISSING ITEM NUMBERS ARE NOT APPLICABLE



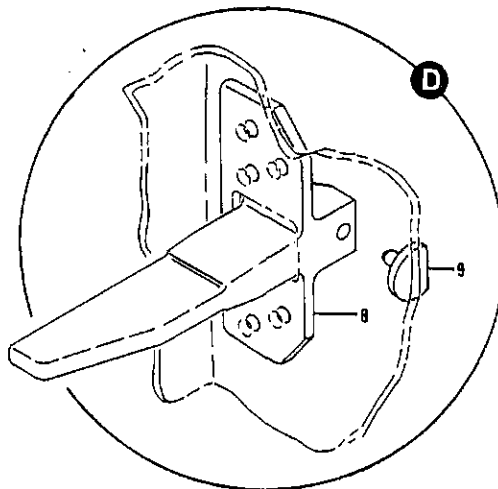


FIGURE 4. FRAME INSTL, STATIONS 678, 95 AND 701, 95 EMERGENCY EXIT (DOORS ONLY) (SHEET 2)

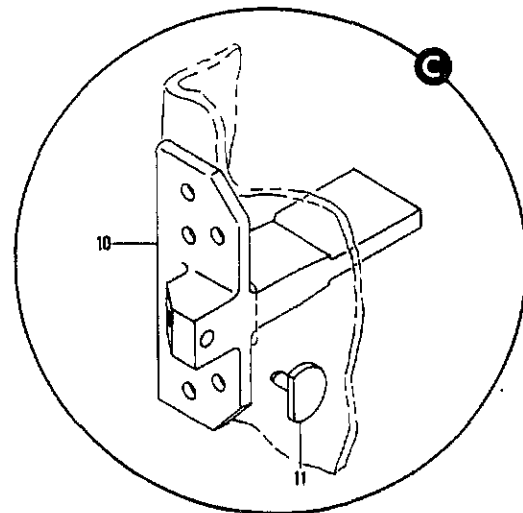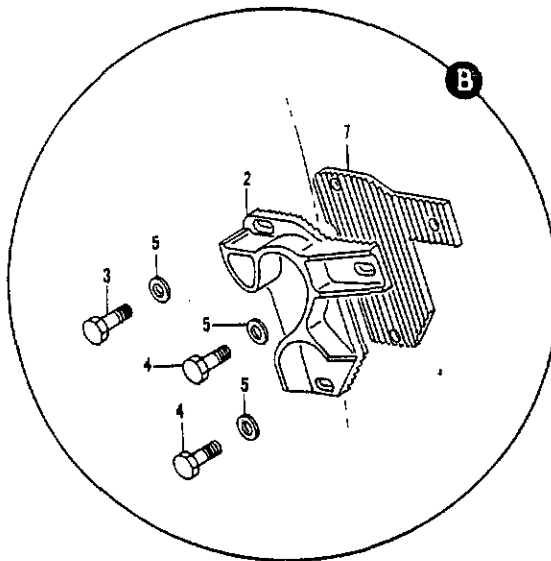

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
4	50-5595-40	FRAME INSTL, STATION 678.95 EMERGENCY EXIT (DOORS ONLY) (SEE 53-2, FIG. 2, ITEM 25)								RF
	50-5596-37	FRAME INSTL, STATION 701.95 EMERGENCY EXIT (DOORS ONLY) (SEE 53-2, FIG. 2, ITEM 26)								RF
1	65-1944-1	. FITTING, EMERGENCY EXIT LATCH CAM								1
2	65-1944-2	. FITTING, EMERGENCY EXIT LATCH CAM								1
3	AN4-7A	ATTACHING PARTS								2
4	AN4-5A	. BOLT								4
5	AN960-416	. WASHER								6
6	66-1391-1	. PLATE, EMERGENCY HATCH LATCH CAM SERRATED								1
7	66-1391-2	. PLATE, EMERGENCY HATCH LATCH CAM SERRATED								1
7A	69-1062-11	. STOP ASSY, EMERGENCY EXIT FRAME								4
8	69-1062-16	. . FITTING, EMERGENCY EXIT FRAME STOP (USED ON 69-1062-11)								1
9	63-9600-1	. . PLATE, BEARING (USED ON 69-1062-11)								1
9	30-3003-1	. . PLATE, ENTRY DOOR BEARING (USED ON 69-1062)								1
9A	69-1062-12	. STOP ASSY, EMERGENCY EXIT FRAME								2
10	69-1062-17	. . FITTING, EMERGENCY EXIT FRAME STOP (USED ON 69-1062-12)								1
11	63-9600-1	. . PLATE, BEARING (USED ON 69-1062-12)								1
11	30-3003-1	. . PLATE, ENTRY DOOR BEARING (USED ON 69-1062-3)								1
12	63-1631	. SPACER, EMERGENCY HATCH GUIDE TAPERED								2
		ATTACHING PARTS								
	NAS517-3-3	. SCREW								2
	AN960D10	. WASHER								2
	NAS679A3W	. NUT								2
		-----*								
13	NAS1368N38	. GROMMET								AR
		. FOR REFERENCE TO OTHER FRAME DETAILS, SEE NHA								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

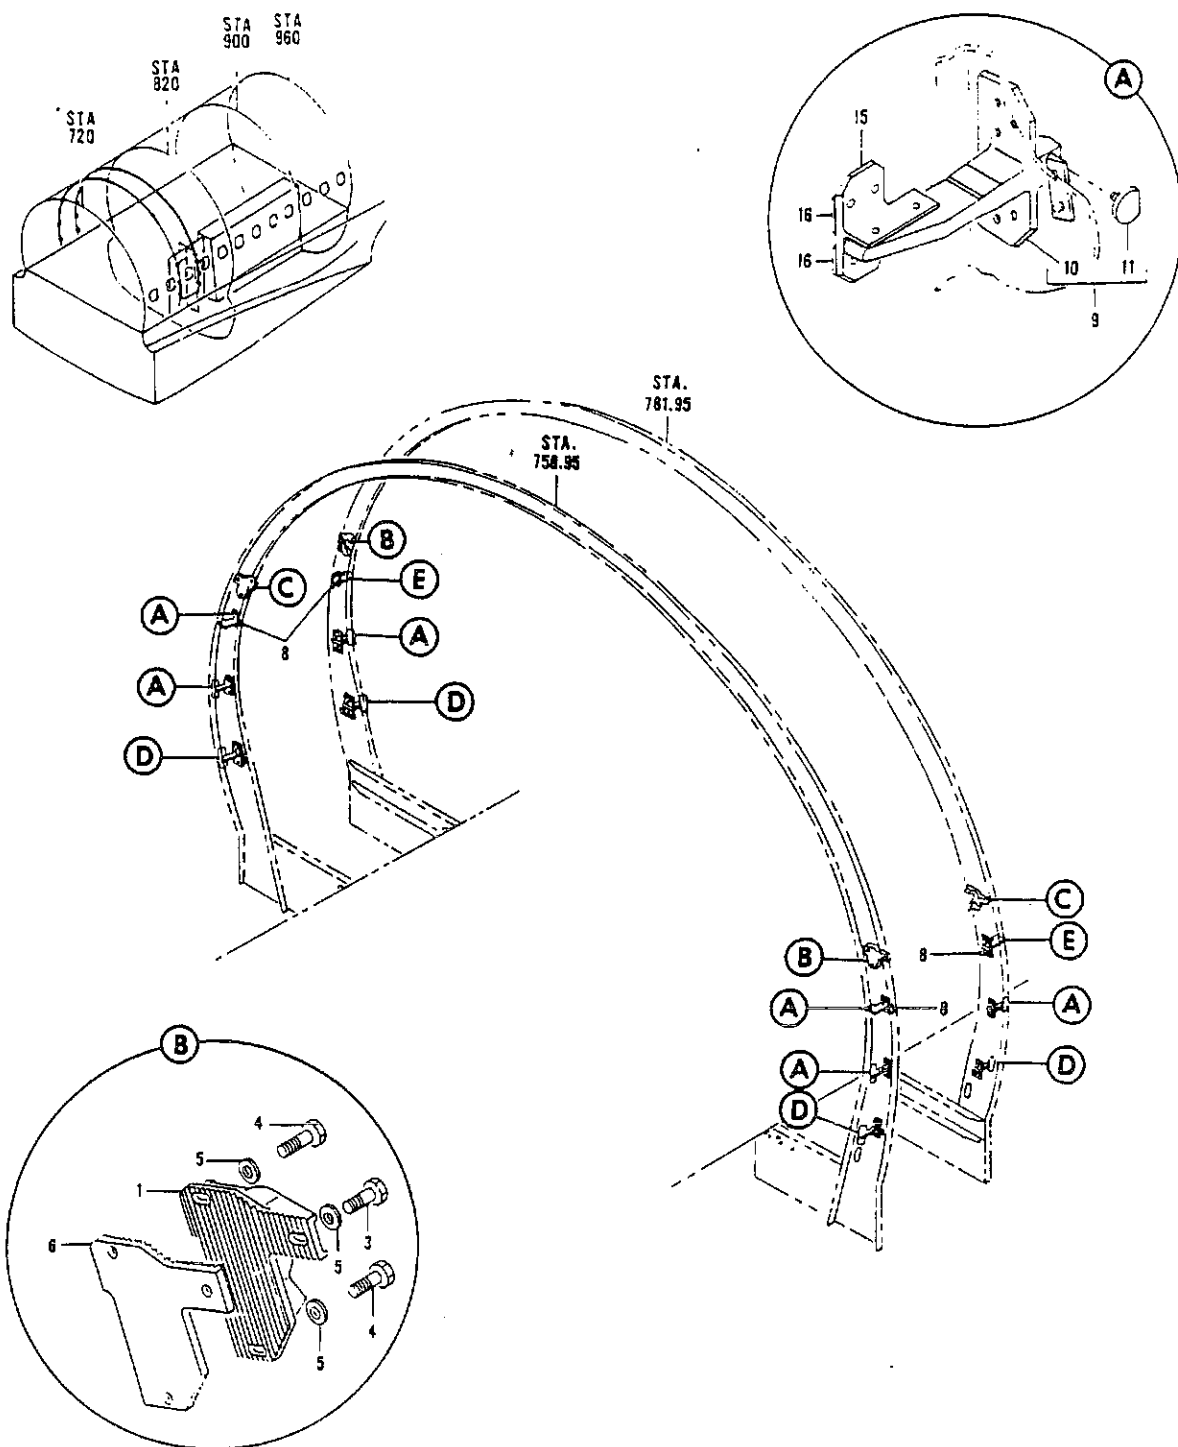


FIGURE 5. FRAME INSTL, STATIONS 758.95 AND 781.95 EMERGENCY EXIT (DOORS ONLY) (SHEET 1)

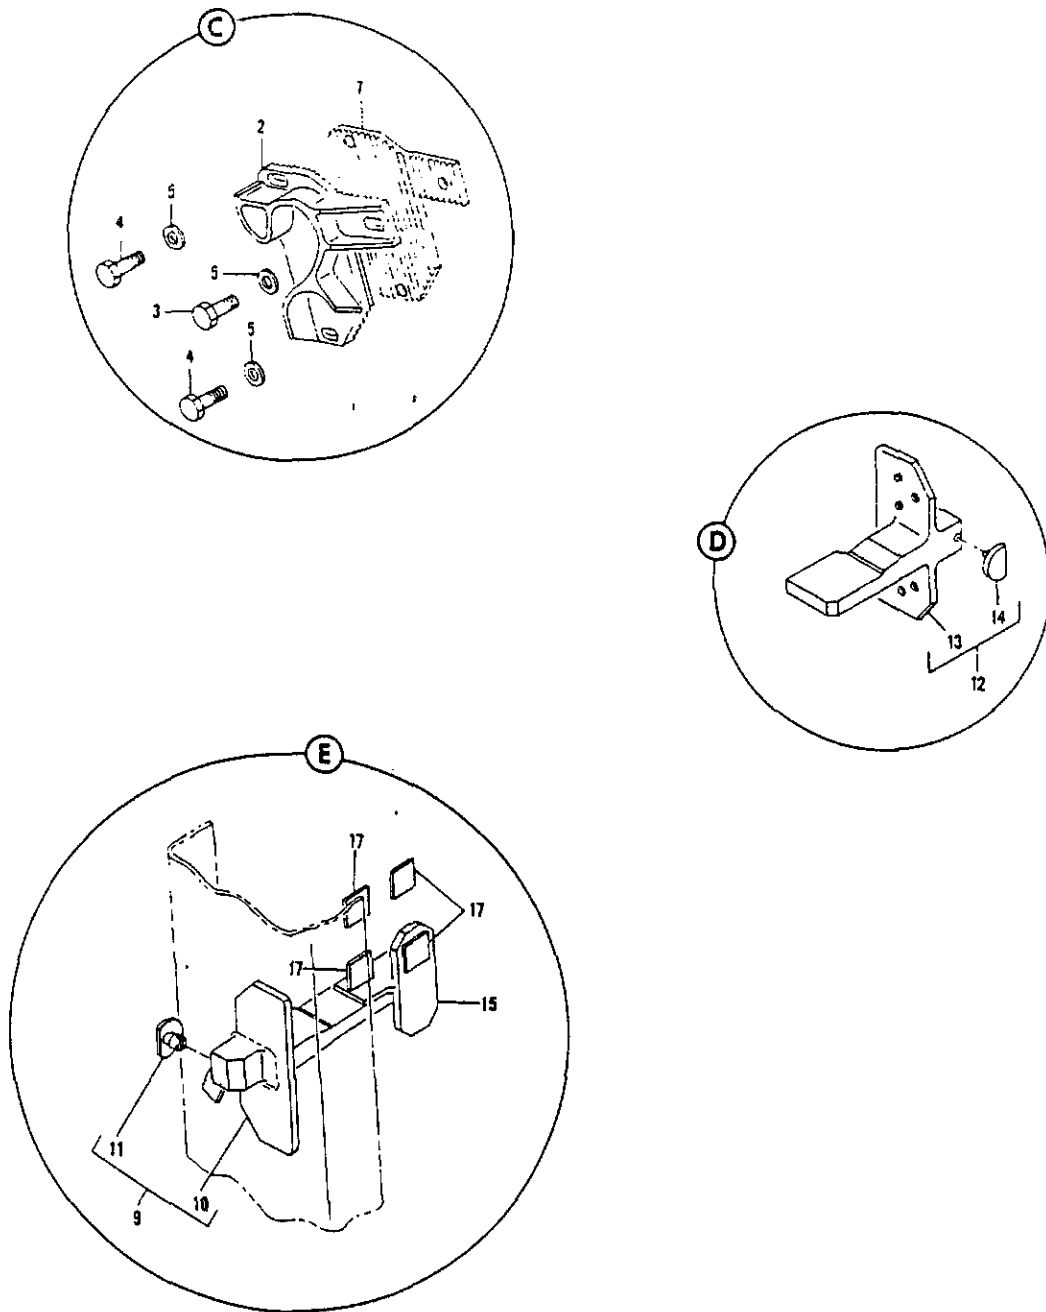


FIGURE 5. FRAME INSTL, STATIONS 758, 95 AND 781, 95 EMERGENCY EXIT (DOORS ONLY) (SHEET 2)

NOV 21/90

52-04-5

DETAILED PARTS LIST
52-04-5
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
5	50-6801-97		FRAME INSTL, STATION 758.95 EMERGENCY EXIT (DOORS ONLY) (SEE 53-2, FIG. 2, ITEM 29)		RF
	50-6802-83		FRAME INSTL, STATION 781.95 EMERGENCY EXIT (DOORS ONLY) (SEE 53-2, FIG. 2, ITEM 30)		RF
1	65-1944-1		. FITTING, EMERGENCY EXIT LATCH CAM		1
2	65-1944-2		. FITTING, EMERGENCY EXIT LATCH CAM ATTACHING PARTS		1
3	AN4-7A		. BOLT.		2
4	AN4-5A		. BOLT.		4
5	AN960-416		. WASHER.		6
			-----*		
6	66-1391-1		. PLATE, EMERGENCY HATCH LATCH CAM.		1
7	66-1391-2		. PLATE, EMERGENCY HATCH LATCH CAM.		1
8	63-1631		. SPACER, EMERGENCY HATCH GUIDE TAPERED ATTACHING PARTS		2
	NAS517-3-3		. SCREW		4
	AN960D10		. WASHER.		4
	NAS679A3W		. NUT, (USED ON 50-6801-61, -97, -163, -167).		2
	BACN10BYS3W		. NUT, (USED ON 50-6802-50 AND -83)		2
			-----*		
9	69-1062-11		. STOP ASSY, EMERGENCY EXIT FRAME		4
10	69-1062-16		. . FITTING, EMERGENCY EXIT FRAME STOP (USED ON 69-1062-11)		1
11	63-9600-1		. . PLATE, BEARING (USED ON 69-1062-11)		1
12	69-1062-12		. STOP ASSY, EMERGENCY EXIT FRAME		2
13	69-1062-17		. . FITTING, EMERGENCY EXIT FRAME STOP (USED ON 69-1062-12)		1
14	63-9600-1		. . PLATE, BEARING (USED ON 69-1062-12)		1
15	63-1313		. TEE, EMERGENCY EXIT FRAME STOP STABILIZING.		4
16	BACS40B10-10		. SHIM.		AR
17	BACS40E10-10		. SHIM, (USED ON 50-6802-50 AND -83).		AR
			. FOR REFERENCE TO OTHER FRAME DETAILS, SEE NHA		
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

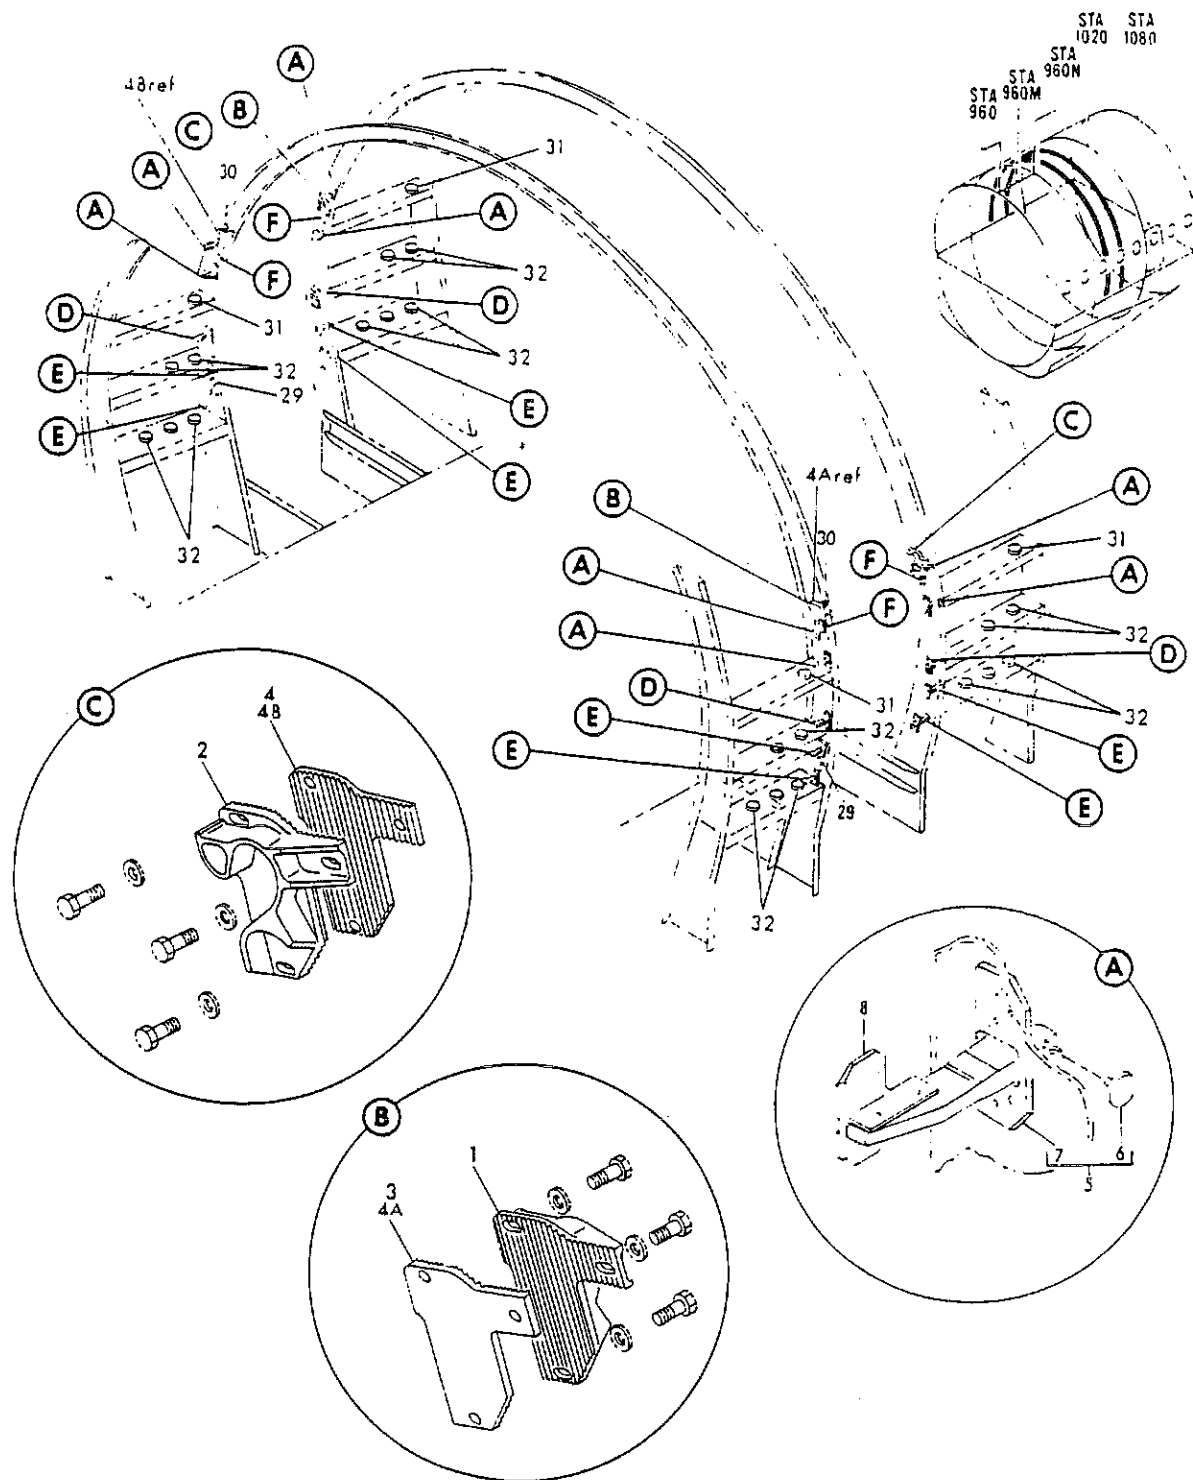


FIGURE 6. FRAME INSTL, STATION 960N PLUS 18.95 AND 1001.95 EMERGENCY EXIT (SHEET 1)

DETAILED PARTS LIST
52-04-6
PAGE 7

52-04-6

NOV 21/90

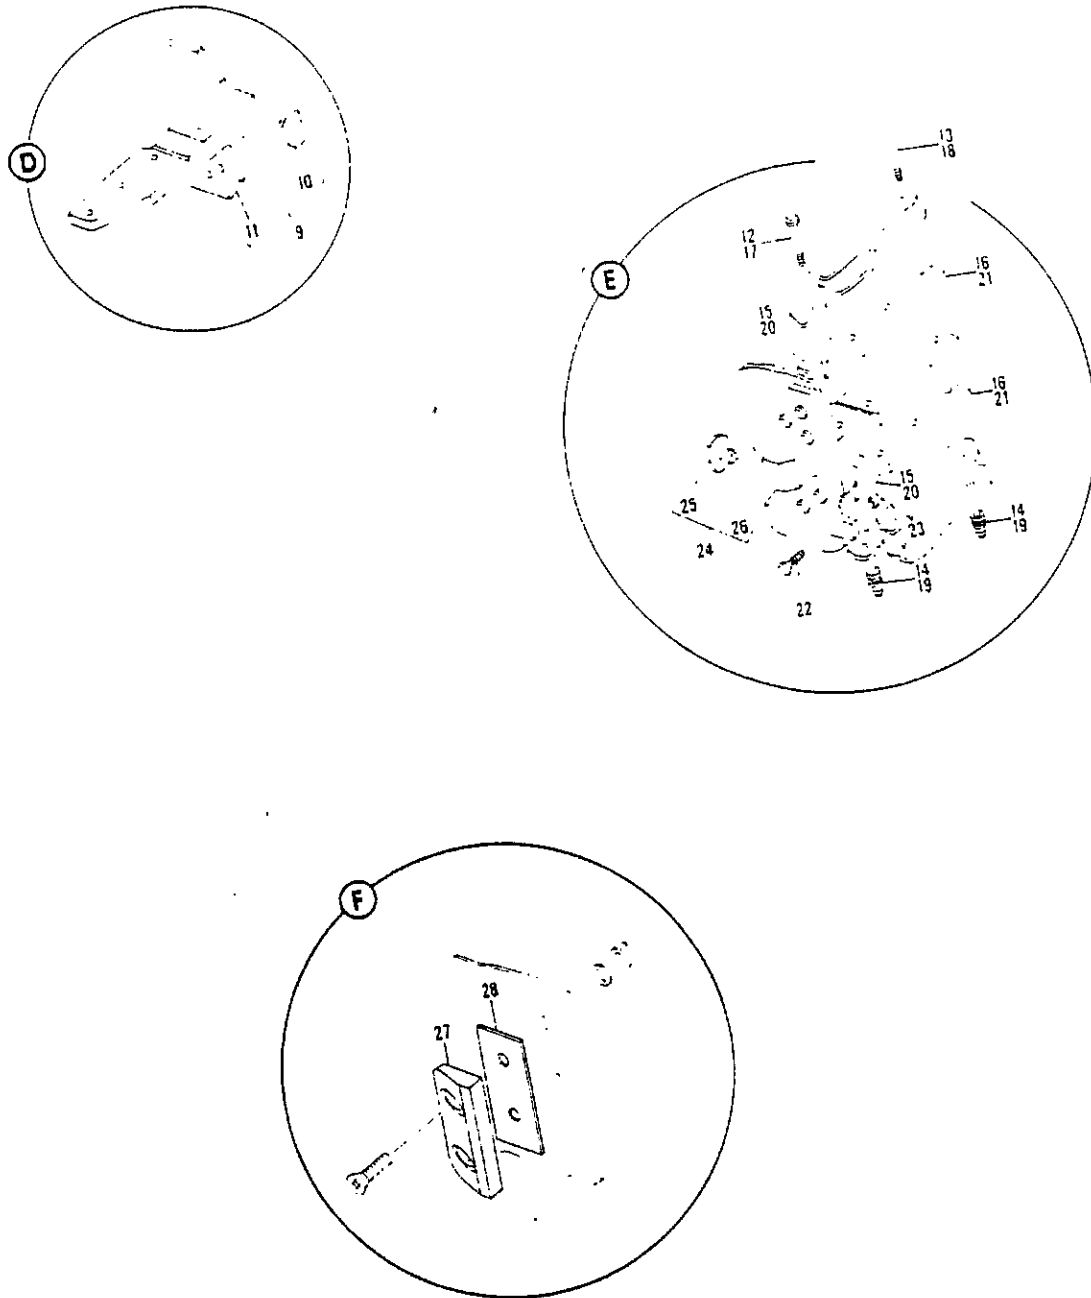


FIGURE 6. FRAME INSTL, STATION 960N PLUS 18.95 AND 1001.95 EMERGENCY EXIT (SHEET 2)

NOV 21/90

52-04-6

DETAILED PARTS LIST
52-04-6
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 6	65-29260-1	FRAME INSTL, STATION 960N PLUS 18.95 EMERGENCY EXIT (SEE 53-2, FIG. 3, ITEM 72)	0151	RF
R 6	65-29260-40	FRAME INSTL, STATION 960N PLUS 18.95 EMERGENCY EXIT (SEE 53-2, FIG. 3, ITEM 72)	5299	RF
R 6	65-29261-1	FRAME INSTL, STATION 100L.95 EMERGENCY EXIT (SEE 53-2, FIG. 3, ITEM 73)	0151	RF
R 6	65-29261-31	FRAME INSTL, STATION 100L.95 EMERGENCY EXIT (SEE 53-2, FIG. 3, ITEM 73)	5299	RF
R 1	65-1944-1	. FITTING, EMERGENCY HATCH LATCH CAM (LH)	0151	1
R 2	65-1944-2	. FITTING, EMERGENCY HATCH LATCH CAM (RH)	0151	1
R	NAS1104-5	ATTACHING PARTS	0151	4
R	NAS1104-5W	. BOLT, (USED ON 65-29260-1)	0151	4
R	NAS1104-7	. BOLT, (USED ON 65-29260-1)	0151	2
R	NAS1104-7W	. BOLT, (USED ON 65-29261-1)	0151	2
R	AN960-416	. WASHER	0151	6
R 3	66-1391-1	. PLATE, EMERGENCY HATCH LATCH CAM SERRATED (LH)	0151	1
R 4	66-1391-2	. PLATE, EMERGENCY HATCH LATCH CAM SERRATED (RH)	0151	1
R 4A	69-58265-3	. PLATE, SERRATED	5299	1
R 4B	69-58265-4	. PLATE, SERRATED	5299	1
R	BACB30NE3-7	ATTACHING PARTS	5299	2
R	AN960PD10	. BOLT	5299	2
R	BACN10GW3	. WASHER	5299	2
R	69-17278-7	. NUT	5299	2
R 5	69-17278-7	. STOP ASSY, EMERGENCY EXIT FRAME	0151	4
R	BACB30FM6-6	ATTACHING PARTS	0151	24
R	BACB30N6-5	. BOLT	0151	8
R	BACC30M6	. BOLT	0151	32
R	63-9600-2	. COLLAR	0151	32
R 7	69-17278-8	. PLATE, DOOR BEARING	0151	1
R 8	63-1313-1	. FITTING, EMERGENCY EXIT FRAME STOP	0151	1
R	BACB30P8-11	. TEE, EMERGENCY EXIT FRAME STOP STABILIZING	0151	4
R	BACB30P8-12	ATTACHING PARTS	0151	8
R	BACS40A10-10	. BOLT, (USED ON 65-29260-1)	0151	8
R	BACC30K8	. BOLT, (USED ON 65-29261-1)	0151	8
R	69-17278-5	. SHIM	0151	AR
R	BACB30FM6-8	. COLLAR	0151	8
R	BACB30FM6-10	. STOP ASSY, EMERGENCY EXIT FRAME	0151	2
R	BACB30N6-5	ATTACHING PARTS	0151	6
R	BACS40A10-40	. BOLT	0151	2
R	BACC30M6	. BOLT, (USED ON 65-29261-1)	0151	12
R	BACC30M6	. BOLT	0151	12
R	BACC30K6	. SHIM	0151	2
R	63-9600-2	. COLLAR	0151	6
R	69-17278-6	. COLLAR, (USED ON 65-29261-1)	0151	2
R	BACB30FM6-16	. COLLAR	0151	12
R	BACB30FM6-18	. PLATE, DOOR BEARING	0151	1
R	BACC30M6	. FITTING, EMERGENCY EXIT FRAME STOP	0151	1
R	69-1652-198	. BOLT, (USED ON 65-29260-1)	0151	4
R	69-1652-199	. BOLT, (USED ON 65-29260-1)	0151	12
R	BACB30FM6-12	. COLLAR, (USED ON 65-29260-1)	0151	16
R	BACB30FM6-15	. FILLER, BODY SKIN FLAT (USED ON 65-29260-1)	0151	8
R	BACC30M6	. FILLER, BODY SKIN FLAT (USED ON 65-29260-1)	0151	8
R	69-1652-196	. BOLT, (USED ON 65-29261-1)	0151	4
R	69-1652-197	. BOLT, (USED ON 65-29261-1)	0151	12
R	BACB30N6-5	. COLLAR, (USED ON 65-29261-1)	0151	16
R	BACC30K6	. FILLER, BODY SKIN FLAT (USED ON 65-29261-1)	0151	8
R	69-17278-5	. FILLER, BODY SKIN FLAT (USED ON 65-29261-1)	0151	8
R	63-9600-2	. BOLT	0151	24
R	69-17278-6	. COLLAR	0151	24
R	63-1631	. STOP ASSY, EMERGENCY EXIT FRAME	0151	4
R	NAS5117-3-3	. PLATE, DOOR BEARING	0151	1
R	AN960D10	. FITTING, EMERGENCY EXIT FRAME STOP	0151	1
R	NAS679A3W	. SPACER, TAPERED EMERGENCY HATCH GUIDE	0151	2
R		ATTACHING PARTS	0151	4
R		. SCREW	0151	4
R		. WASHER	0151	4
R		. NUT	0151	4

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	6	28	BACS40C9-21	.	SHIM.	.	.	.	.	0151	2
R		29	NAS1368N88	.	GROMMET, (USED ON 65-29260-1)	.	.	.	.	0150	2
		30	NAS1368N38	.	GROMMET, (USED ON 65-29260-1 AND-40)	.	.	.	.		2
R		31	BACG20AD549	.	GROMMET	.	.	.	.	5299	2
R		32	BACG20AD650	.	GROMMET	.	.	.	.	5299	10
R		33	NAS557-3C	.	GROMMET	.	.	.	.	5299	2
R		34	BACB30NE4-9	.	BOLT.	.	.	.	.	5299	8
R		35	BACB30NE3-9	.	BOLT.	.	.	.	.	5299	8
R		36	BACB30NE4-12	.	BOLT.	.	.	.	.	5299	4
R		37	BACB30NE3-12	.	BOLT.	.	.	.	.	5299	4
R		38	BACB30NE4-10	.	BOLT.	.	.	.	.	5299	8
R		39	BACB30NE3-10	.	BOLT.	.	.	.	.	5299	8
R		40	AN960PD416	.	WASHER.	.	.	.	.	5299	20
R		41	AN960PD10	.	WASHER.	.	.	.	.	5299	20
R		42	BACN10GW4	.	NUT	.	.	.	.	5299	20
R		43	BACN10GW3	.	NUT	.	.	.	.	5299	20
R		44	65-73495-21	.	FITTING ASSY, STOP.	.	.	.	.	5299	1
R		45	65-73495-22	.	FITTING ASSY, STOP.	.	.	.	.	5299	1
R		46	65-73495-19	.	FITTING ASSY, STOP.	.	.	.	.	5299	1
R		47	65-73495-20	.	FITTING ASSY, STOP.	.	.	.	.	5299	1
R		48	65-73495-17	.	FITTING ASSY, STOP.	.	.	.	.	5299	1
R		49	65-73495-18	.	FITTING ASSY, STOP.	.	.	.	.	5299	1
R		50	65-73495-23	.	FITTING ASSY, STOP.	.	.	.	.	5299	2
R		51	65-73495-24	.	FITTING ASSY, STOP.	.	.	.	.	5299	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

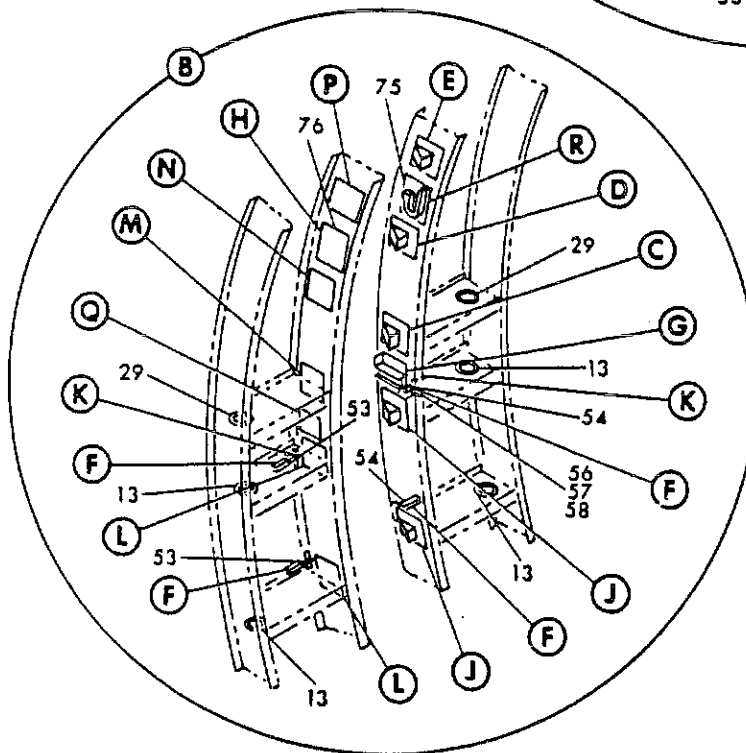
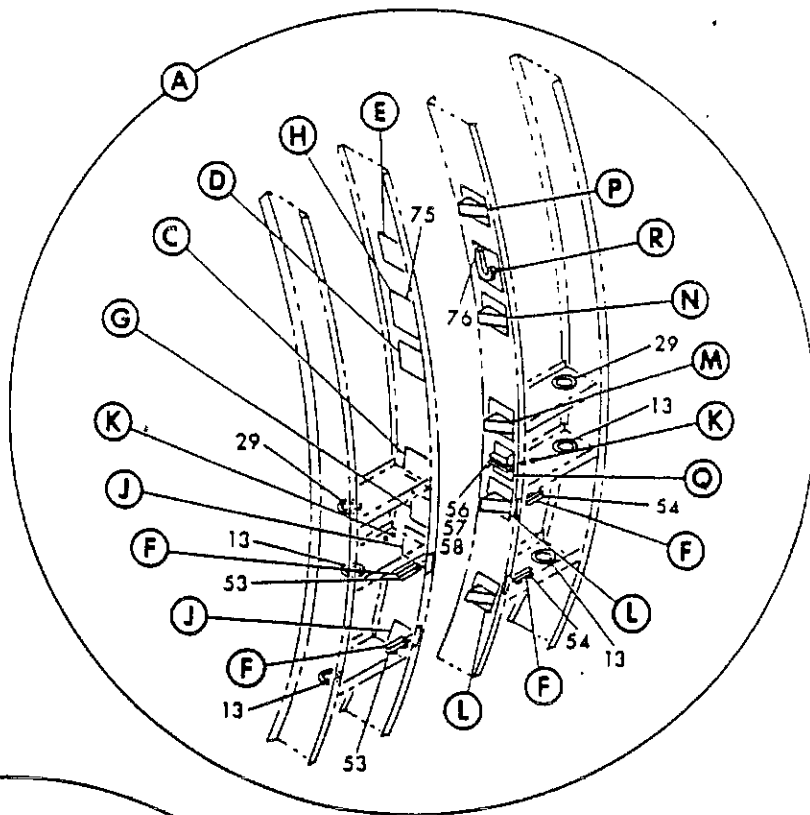
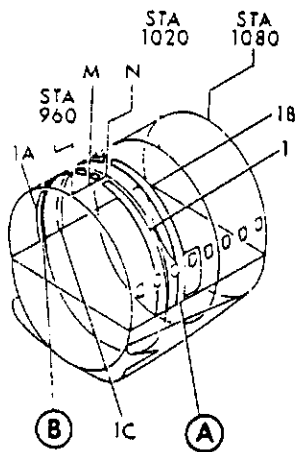


FIGURE 6A. FRAME INSTL, STATION 960N PLUS 13.95 AND STATION 1001.95 KIT (SHEET 1)

DETAILED PARTS LIST
52-04-06A
PAGE 0

52-04-6A

NOV 21/90

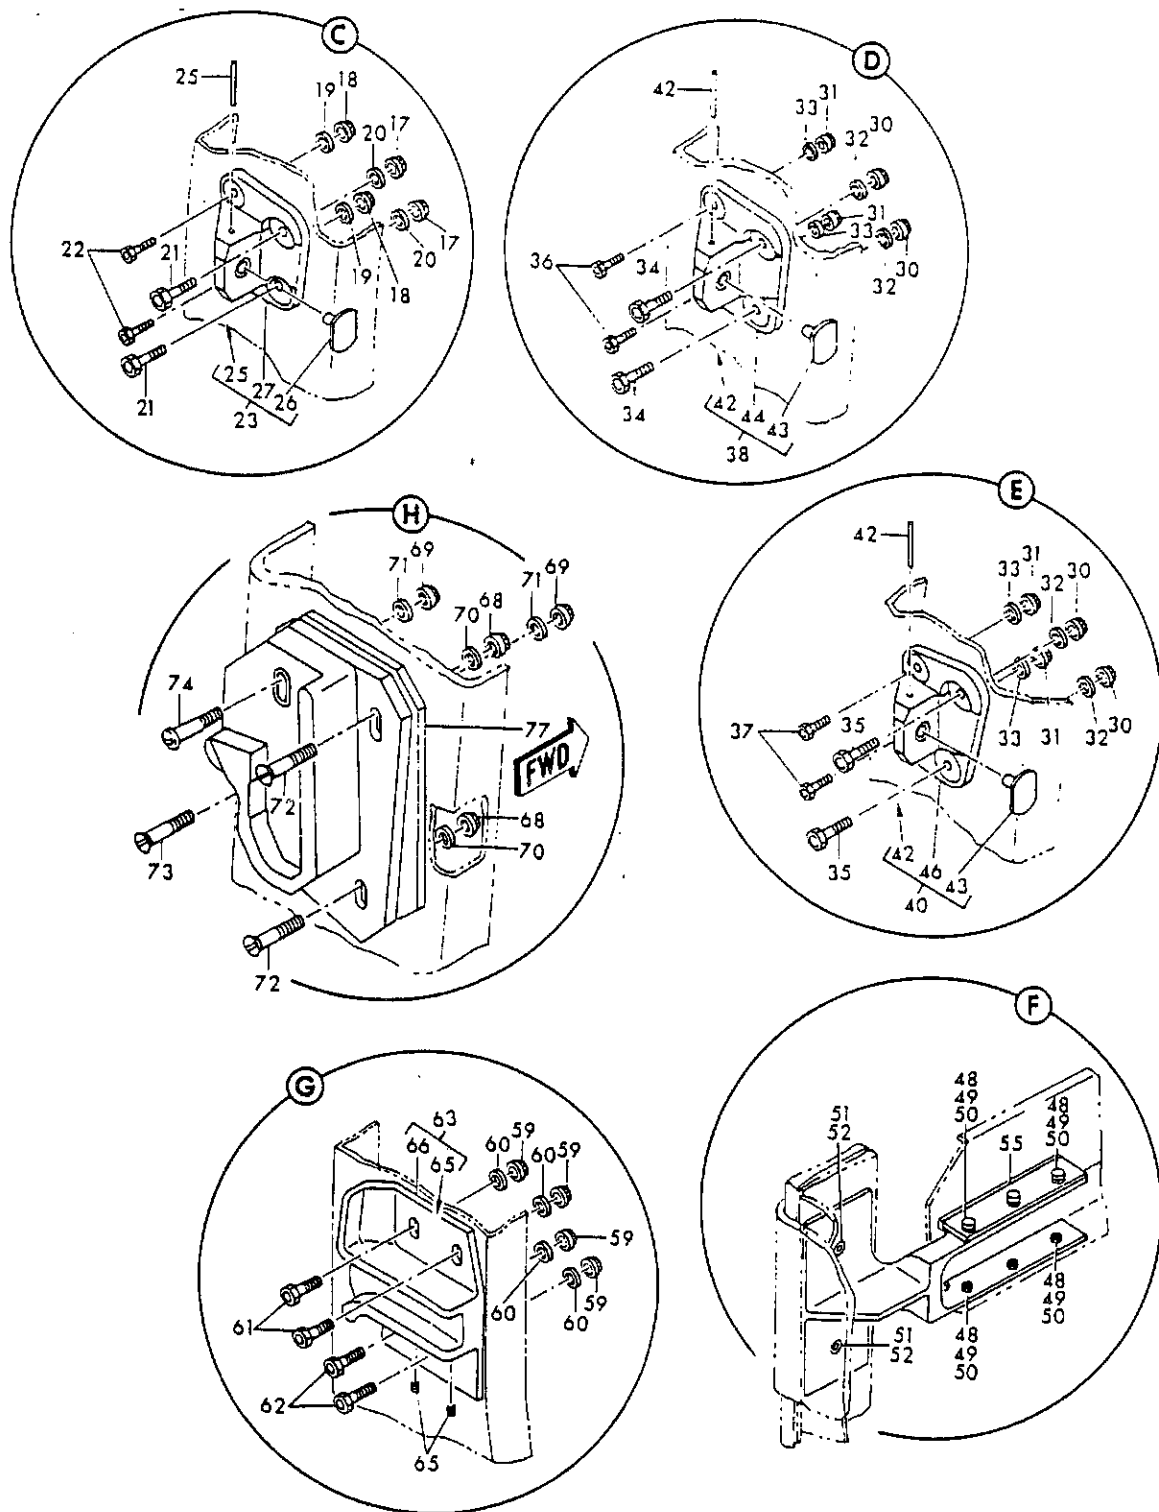


FIGURE 6A. FRAME INSTL. STATION 960N PLUS 13.95 AND STATION 100L 95 KIT (SHEET 2)

NOV 21/90

52-04-6A

DETAILED PARTS LIST
52-04-6A
PAGE 1

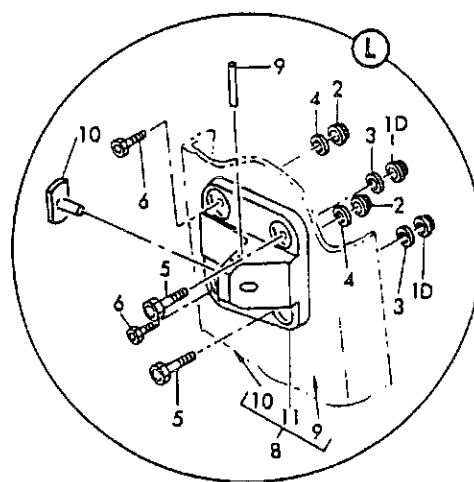
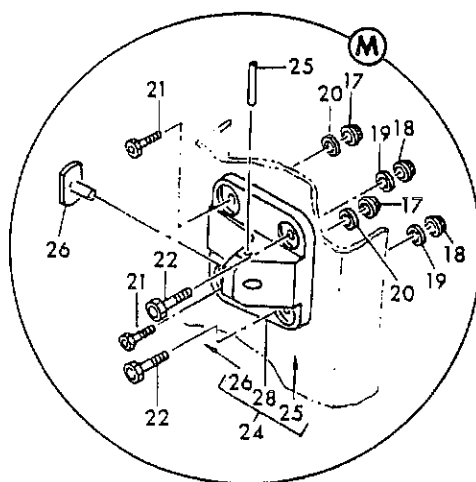
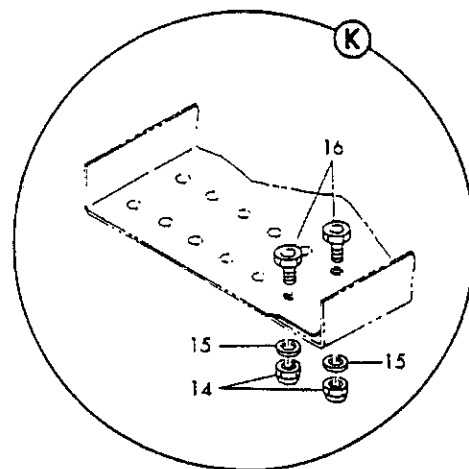
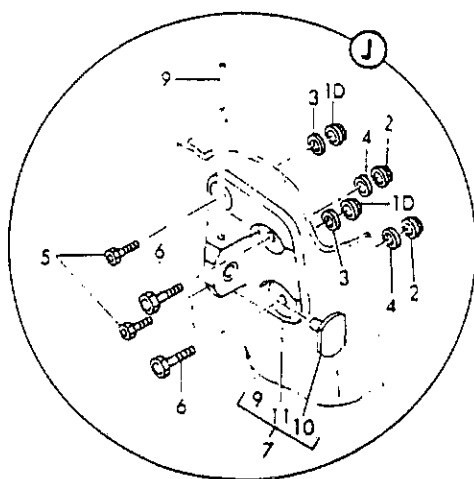


FIGURE 6A. FRAME INSTL, STATION 960N PLUS 13.95 AND STATION 100L 95 KIT (SHEET 3)

DETAILED PARTS LIST
52-04-6A
PAGE 2

52-04-6A

NOV 21/90

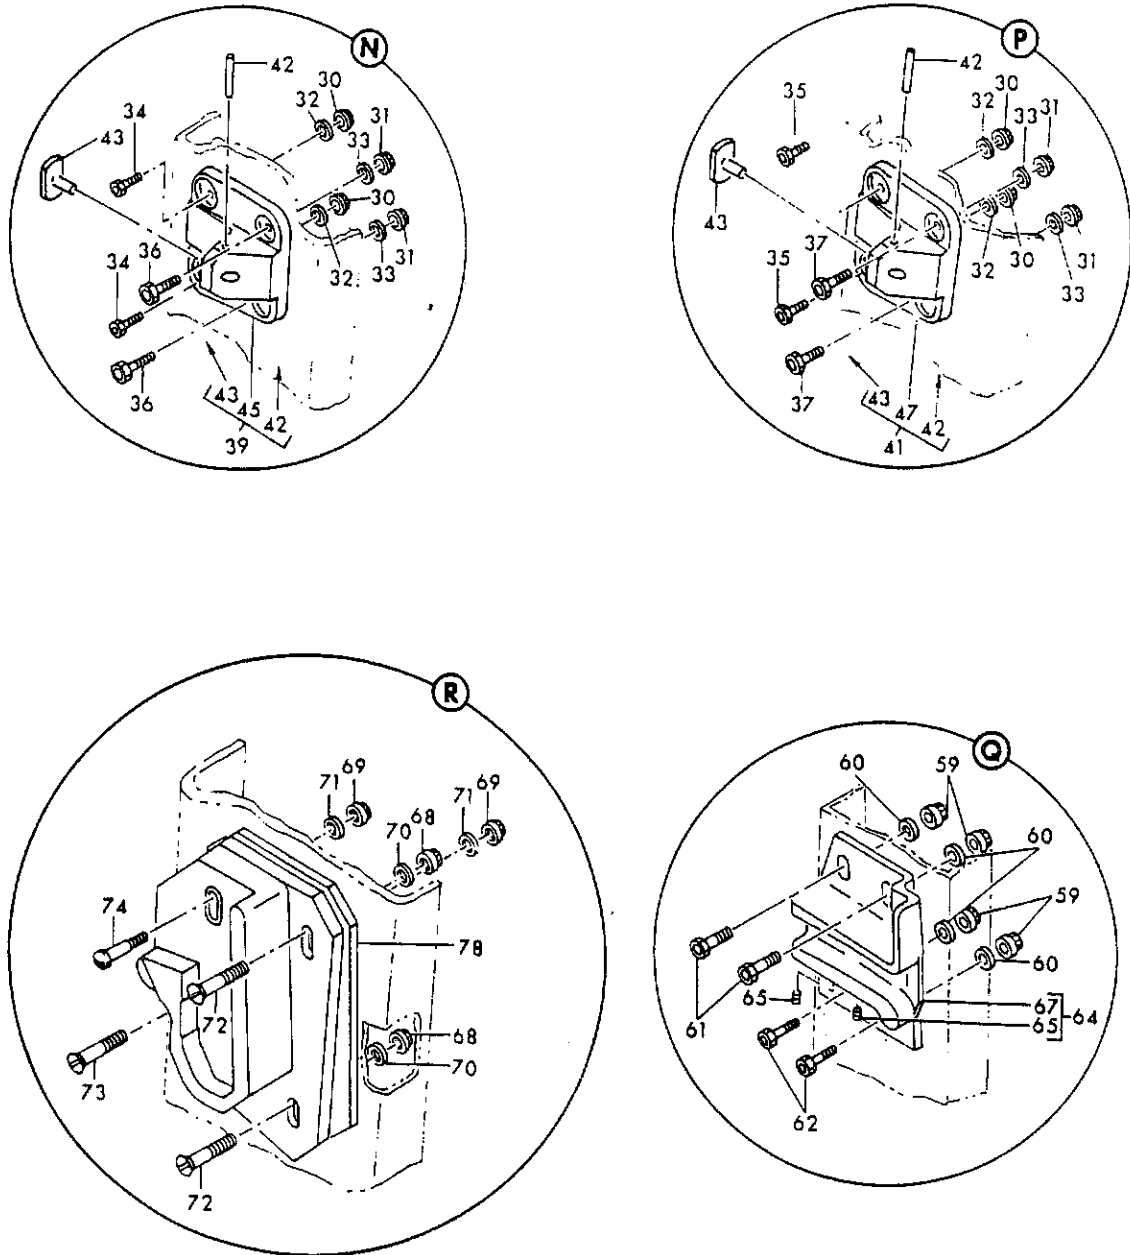


FIGURE 6A. FRAME INSTL, STATION 960N PLUS 13, 95 AND STATION 100L, 95 KIT (SHEET 4)

NOV 21/90

52-04-6A

DETAILED PARTS LIST
52-04-6A
PAGE 3

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
6A 1	65-73494-1	FRAME INSTL, STATION 960N PLUS 18.95 KIT (LH) (SEE 53-1, FIG. 3, ITEM 34)	5151	RF
1A	65-73494-2	FRAME INSTL, STATION 960N PLUS 18.95 KIT (RH) (SEE 53-1, FIG. 3, ITEM 34)	5151	RF
1B	65-73494-3	FRAME INSTL, STATION 1001.95 KIT (LH) (SEE 53-1, FIG. 3, ITEM 35)	5151	RF
1C	65-73494-4	FRAME INSTL, STATION 1001.95 KIT (RH) (SEE 53-1, FIG. 3, ITEM 35)	5151	RF
1D	BACN10GW3	NUT	5151	4
2	BACN10GW4	NUT	5151	4
3	AN960PD10	WASHER	5151	4
4	AN960PD416	WASHER	5151	4
5	BACB30NE3-10	BOLT	5151	4
6	BACB30NE4-10	BOLT	5151	4
7	65-73495-23	FITTING ASSY, STOP (USED ON 65-73494-1 AND -4)	5151	2
8	65-73495-24	FITTING ASSY, STOP (USED ON 65-73494-2 AND -3)	5151	2
9	BACP18L4P1000	PIN	5151	1
10	69-58097-2	PLATE, BEARING	5151	1
11	65-73495-31	FITTING, (USED ON 65-73494-23)	5151	1
12	65-73495-32	FITTING, (USED ON 65-73494-24)	5151	1
13	BACG20AD650	GROMMET	5151	2
14	BACN10JC3	NUT	5151	2
15	AN960PD10	WASHER	5151	2
16	BACB30NF3-3	BOLT	5151	2
17	BACN10GW4	NUT	5151	2
18	BACN10GW3	NUT	5151	2
19	AN960PD10	WASHER	5151	2
20	AN960PD416	WASHER	5151	2
21	BACB30NE4-12	BOLT	5151	2
22	BACB30NE3-12	BOLT	5151	2
23	65-73495-17	FITTING ASSY, STOP (USED ON 65-73494-1 AND -4)	5151	1
24	65-73495-18	FITTING ASSY, STOP (USED ON 65-73494-2 AND -3)	5151	1
25	BACP18L4P1000	PIN	5151	1
26	69-58097-2	PLATE, BEARING	5151	1
27	65-73495-25	FITTING, (USED ON 65-73495-17)	5151	1
28	65-73495-26	FITTING, (USED ON 65-73495-18)	5151	1
29	BACG20AD549	GROMMET	5151	1
30	BACN10GW4	NUT	5151	4
31	BACN10GW3	NUT	5151	4
32	AN960PD416	WASHER	5151	4
33	AN960PD10	WASHER	5151	4
34	BACB30NE4-9	BOLT	5151	2
35	BACB30NE4-9	BOLT, (USED ON 65-73494-1 AND -2)	5151	2
35	BACB30NE4-10	BOLT, (USED ON 65-73494-3 AND -4)	5151	2
36	BACB30NE3-9	BOLT	5151	2
37	BACB30NE3-9	BOLT, (USED ON 65-73494-1 AND -2)	5151	2
37	BACB30NE3-10	BOLT, (USED ON 65-73494-3 AND -4)	5151	2
38	65-73495-19	FITTING ASSY, STOP (USED ON 65-73494-1 AND -4)	5151	1
39	65-73495-20	FITTING ASSY, STOP (USED ON 65-73494-2 AND -3)	5151	1
40	65-73495-21	FITTING ASSY, STOP (USED ON 65-73494-1 AND -4)	5151	1
41	65-73495-22	FITTING ASSY, STOP (USED ON 65-73494-2 AND -3)	5151	1
42	BACP18L4P1000	PIN	5151	1
43	69-58097-2	PLATE, BEARING	5151	1
44	65-73495-27	FITTING, (USED ON 65-73495-19)	5151	1
45	65-73495-28	FITTING, (USED ON 65-73495-20)	5151	1
46	65-73495-29	FITTING, (USED ON 65-73495-21)	5151	1
47	65-73495-30	FITTING, (USED ON 65-73495-22)	5151	1
48	BACN10JC3	NUT	5151	12
49	BACW10BN31AP	WASHER	5151	12
50	BACB30NF3-4X	BOLT	5151	12
51	BACB30FQ8-15	BOLT	5151	2
52	BACC30M	COLLAR	5151	2
53	69-58244-5	FITTING, STRINGER TIE (USED ON 65-73494-1 AND -2)	5151	2
54	69-58244-6	FITTING, STRINGER TIE (USED ON 65-73494-3 AND -4)	5151	2
55	BACS40R10B25	SHIM	5151	AR
56	BACN10GW4	NUT, (USED ON 65-73494-3 AND -4)	5151	1
57	BACW10AW4AST	WASHER, (USED ON 65-73494-3 AND -4)	5151	1
58	BACB30NE4-10X	BOLT, (USED ON 65-73494-3 AND -4)	5151	1
59	BACN10GW3	NUT	5151	4
60	AN960PD10	WASHER	5151	4
61	BACB30NE3-7	BOLT	5151	2
62	BACB30NE3-8	BOLT	5151	2
63	69-58273-9	FITTING ASSY, LATCH CAM (USED ON 65-73494-1, -4)	5151	1
64	69-58273-10	FITTING ASSY, LATCH CAM (USED ON 65-73494-2, -3)	5151	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
6A 65	MS21208C06-20	.	.	.	.	.	.	.	5151	2
66	69-58273-7	.	.	.	.	.	.	.	5151	1
67	69-58273-8	.	.	.	.	.	.	.	5151	1
68	BACN10GW4	.	.	.	.	.	.	.	5151	2
69	BACN10GW3	.	.	.	.	.	.	.	5151	2
70	AN960PD416	.	.	.	.	.	.	.	5151	2
71	AN960PD10	.	.	.	.	.	.	.	5151	2
72	BAC830NE4-14	.	.	.	.	.	.	.	5151	2
73	BAC830NE3-14	.	.	.	.	.	.	.	5151	1
74	NAS623-3-17	.	.	.	.	.	.	.	5151	1
75	69-58257-3	.	.	.	.	.	.	.	5151	1
76	69-58257-4	.	.	.	.	.	.	.	5151	1
77	69-58265-1	.	.	.	.	.	.	.	5151	1
78	69-58265-2	.	.	.	.	.	.	.	5151	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

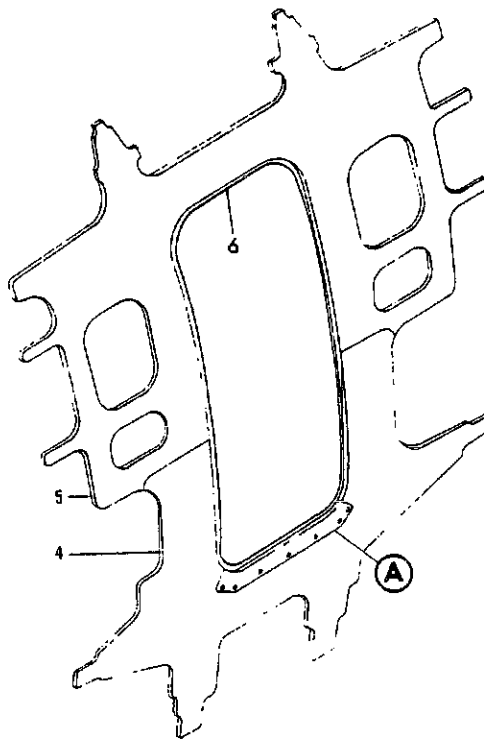
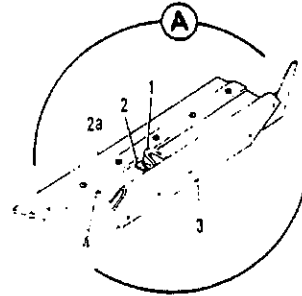
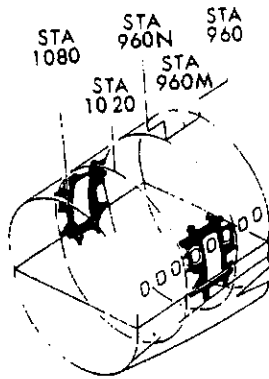


FIGURE 7. STRAP INSTL, STATION 990.45 EMERGENCY EXIT

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R R R R R R R R R R R R	7	65-26980-1	STRAP INSTL, STATION 990.45 EMERGENCY EXIT (LH) (SEE. . 53-2, FIG. 3, ITEM 67)	0151 RF
		65-26980-3	STRAP INSTL, STATION 990.45 EMERGENCY EXIT (LH) (SEE. . 53-2, FIG. 3, ITEM 67)	5299 RF
		65-26980-2	STRAP INSTL, STATION 990.45 EMERGENCY EXIT (RH) (SEE. . 53-2, FIG. 3, ITEM 68)	0151 RF
		65-26980-4	STRAP INSTL, STATION 990.45 EMERGENCY EXIT (RH) (SEE. . 53-2, FIG. 3, ITEM 68)	5299 RF
		65-29825-1	. SUPPORT INSTL, EMERGENCY EXIT LOWER SILL (LH ONLY).	0151 1
		65-29825-2	. SUPPORT INSTL, EMERGENCY EXIT LOWER SILL (RH ONLY).	0151 1
	1	9-65808-2000	. . STOP, EMERGENCY HATCH PIVOT	0151 1
			ATTACHING PARTS	
		NAS623-3-11	. . SCREW	0151 2

	2	BACS40825-30	. . SHIM.	0151 AR
		65-29915-1	. PLATE INSTL, STATION 990.45 EMERGENCY EXIT SCUFF (LH ONLY)	1
		65-29915-2	. PLATE INSTL, STATION 990.45 EMERGENCY EXIT SCUFF (RH ONLY)	1
	2A	69-29281-1	. . PLATE, STATION 990.45 EMERGENCY EXIT SCUFF.	1
			ATTACHING PARTS	
		NAS517-3-2	. . SCREW	6

	3	65-29985-3	. . PLATE, STATION 990.45 EMERGENCY EXIT SCUFF (LH. . . ONLY)	1
	3	65-29985-4	. . PLATE, STATION 990.45 EMERGENCY EXIT SCUFF (RH. . . ONLY)	1
			ATTACHING PARTS	
		NAS517-3-2	. . SCREW	4
		NAS517-3-8	. . SCREW	4
		NAS517-3-10	. . SCREW	5
		NAS517-3-12	. . SCREW	2
		NAS679A3W	. . NUT	2

	4	65-29863-1	. STRAP, STATION 990.45 EMERGENCY EXIT LOWER (LH ONLY)	0151 1
	4	65-29863-5	. STRAP, LOWER (LH ONLY).	5299 1
	4	65-29863-2	. STRAP, STATION 990.45 EMERGENCY EXIT LOWER (RH ONLY)	0151 1
	4	65-29863-6	. STRAP, LOWER (RH ONLY).	5299 1
	5	65-29863-3	. STRAP, STATION 990.45 EMERGENCY EXIT UPPER (LH ONLY)	0151 1
	5	65-29863-7	. STRAP, UPPER (LH ONLY).	5299 1
	5	65-29863-4	. STRAP, STATION 990.45 EMERGENCY EXIT UPPER (RH ONLY)	0151 1
	5	65-29863-8	. STRAP, UPPER (RH ONLY).	5299 1
	6	65-74224-13	. SEAL INSTL, STATION 990.45 EMERGENCY EXIT KIT (SEE. . FIG. 45)	5299 1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

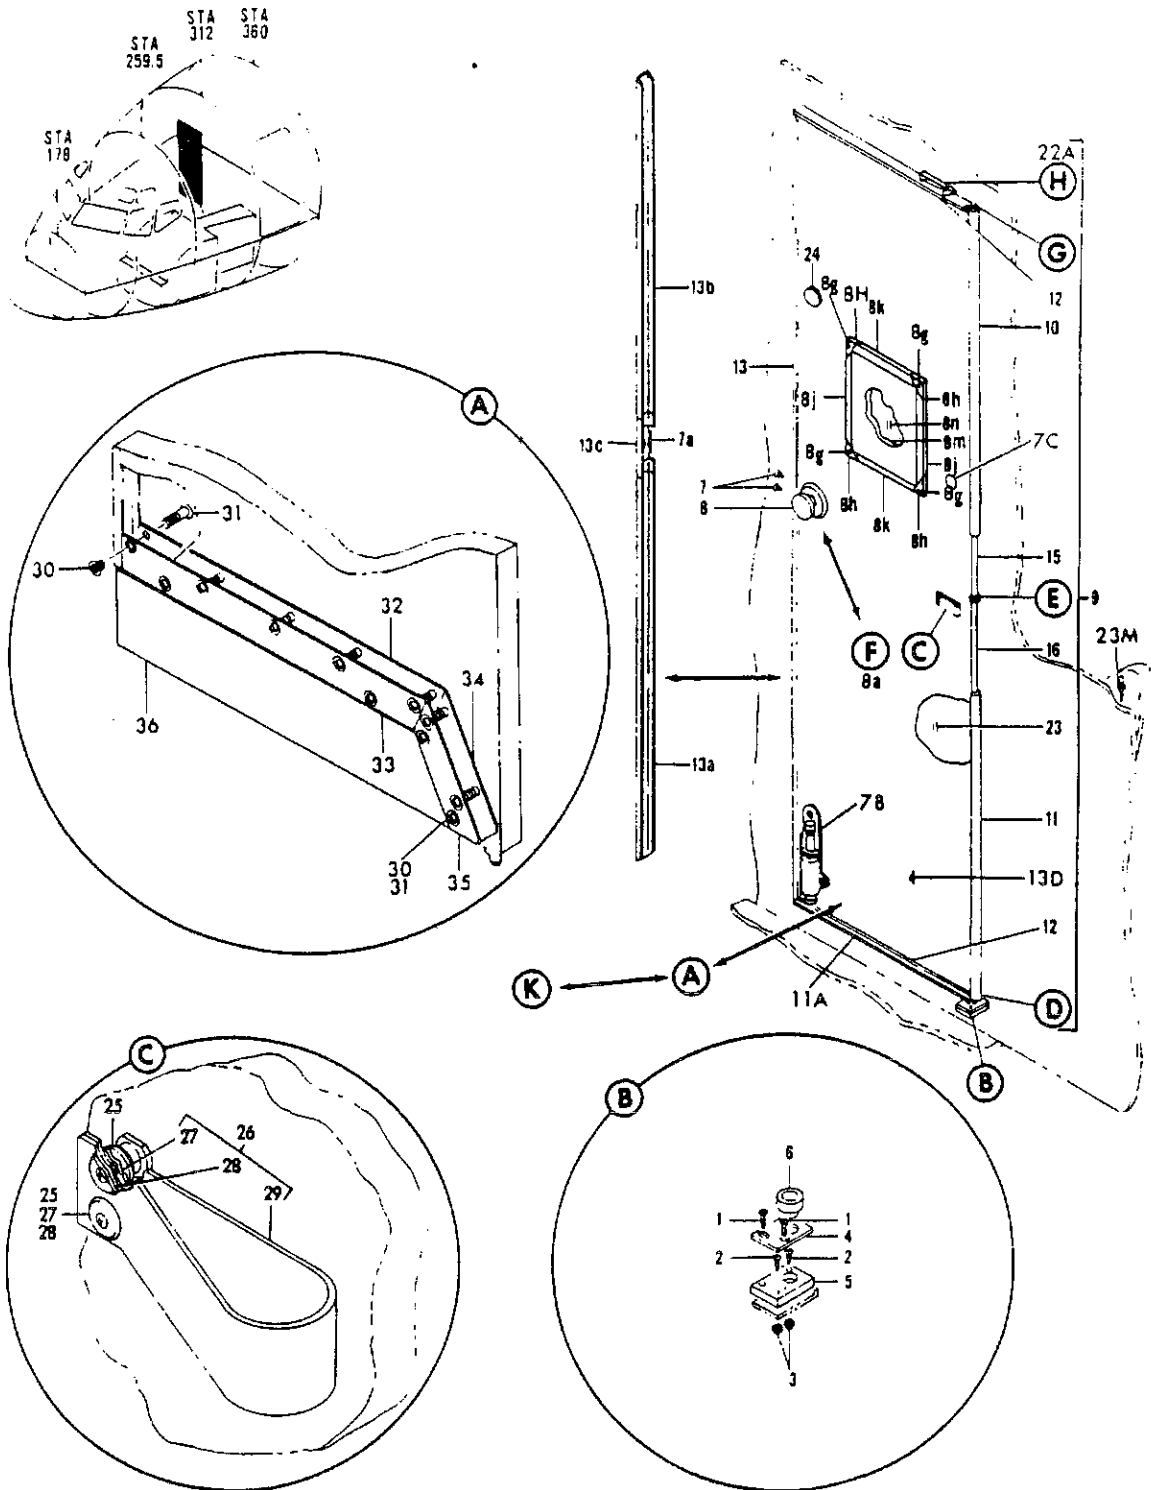


FIGURE 8. DOOR INSTL, STATION 302 PARTITION

DETAILED PARTS LIST
52-04-8
PAGE 0

52-04-8

NOV 21/90

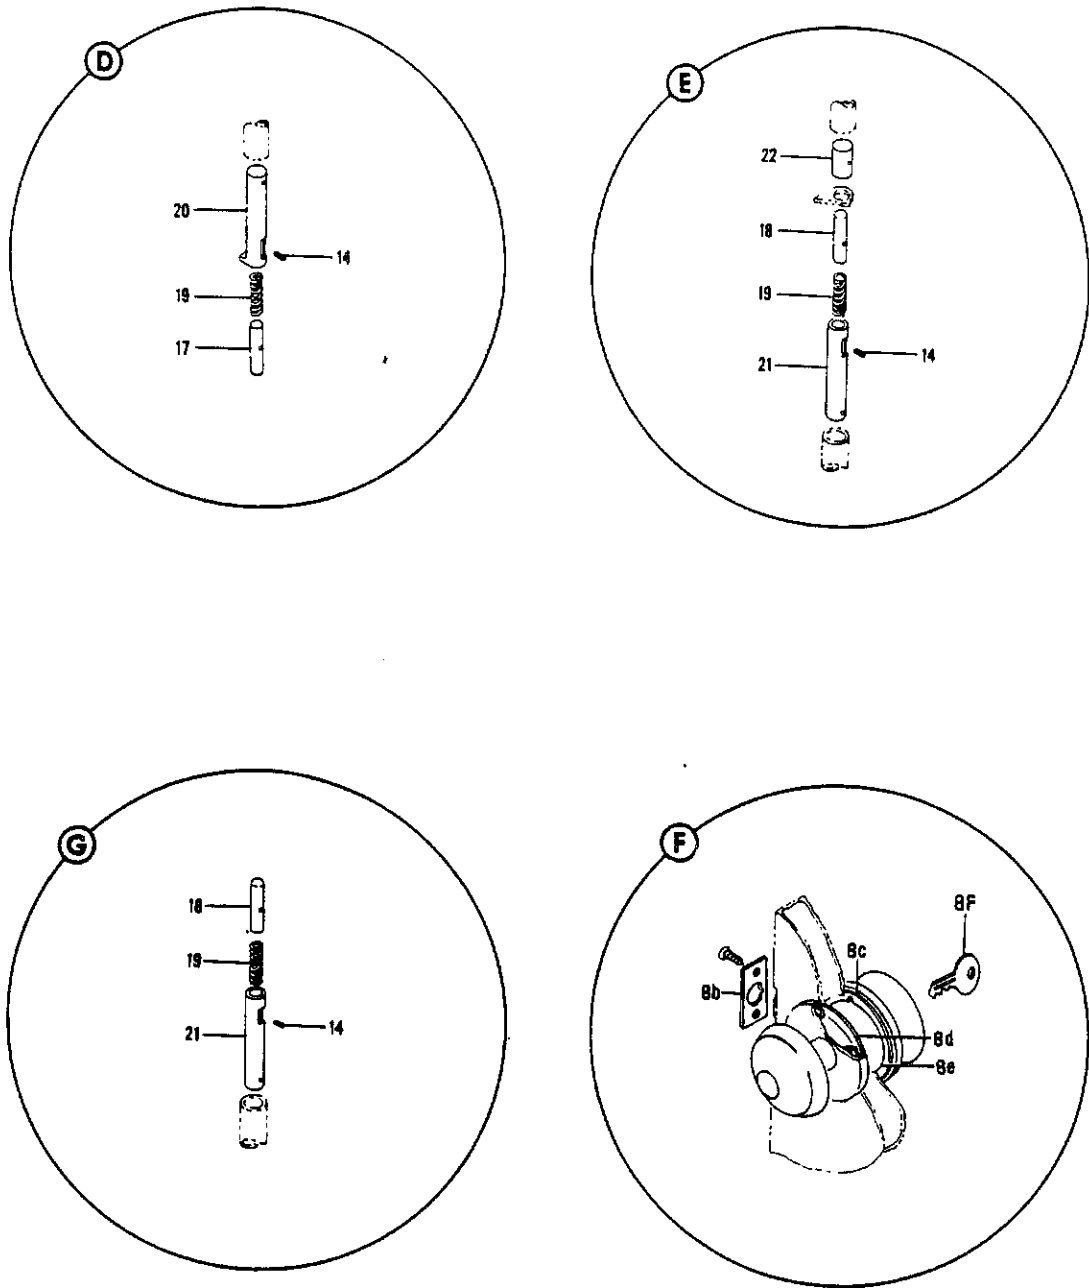


FIGURE 8. DOOR INSTL, STATION 302 PARTITION (SHEET 2)

NOV 21/90

52-04-8

DETAILED PARTS LIST
52-04-8
PAGE 1

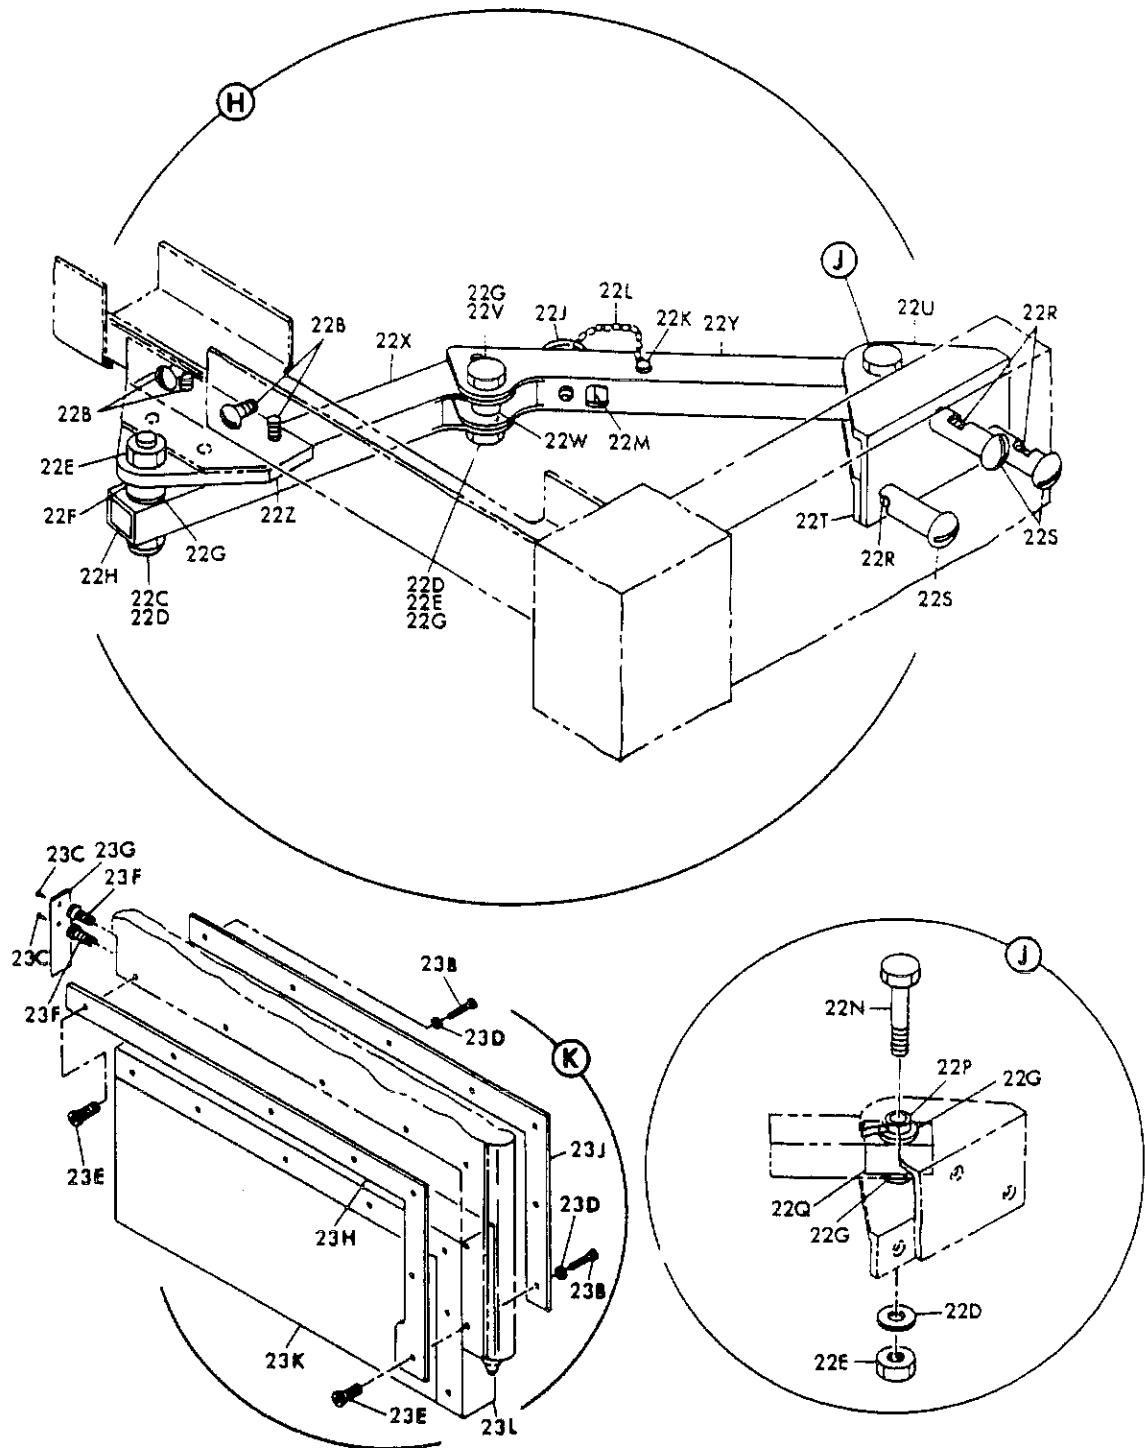


FIGURE 8. DOOR INSTL. STATION 302 PARTITION (SHEET 3)

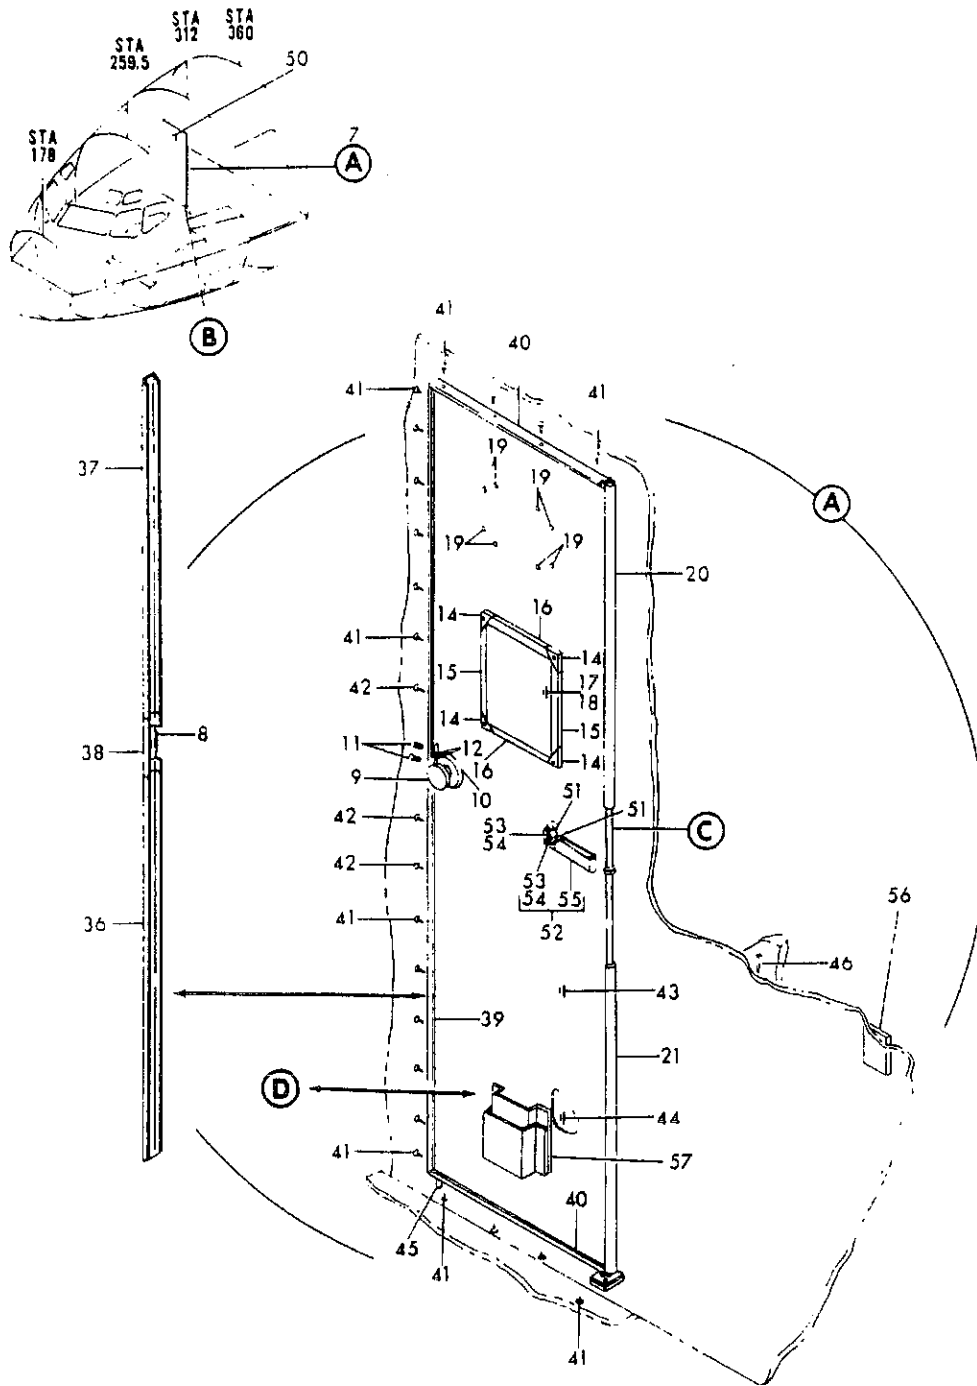


FIGURE 8A. DOOR INSTL, STATION 302 PARTITION (DOORS ONLY) (SHEET 1)

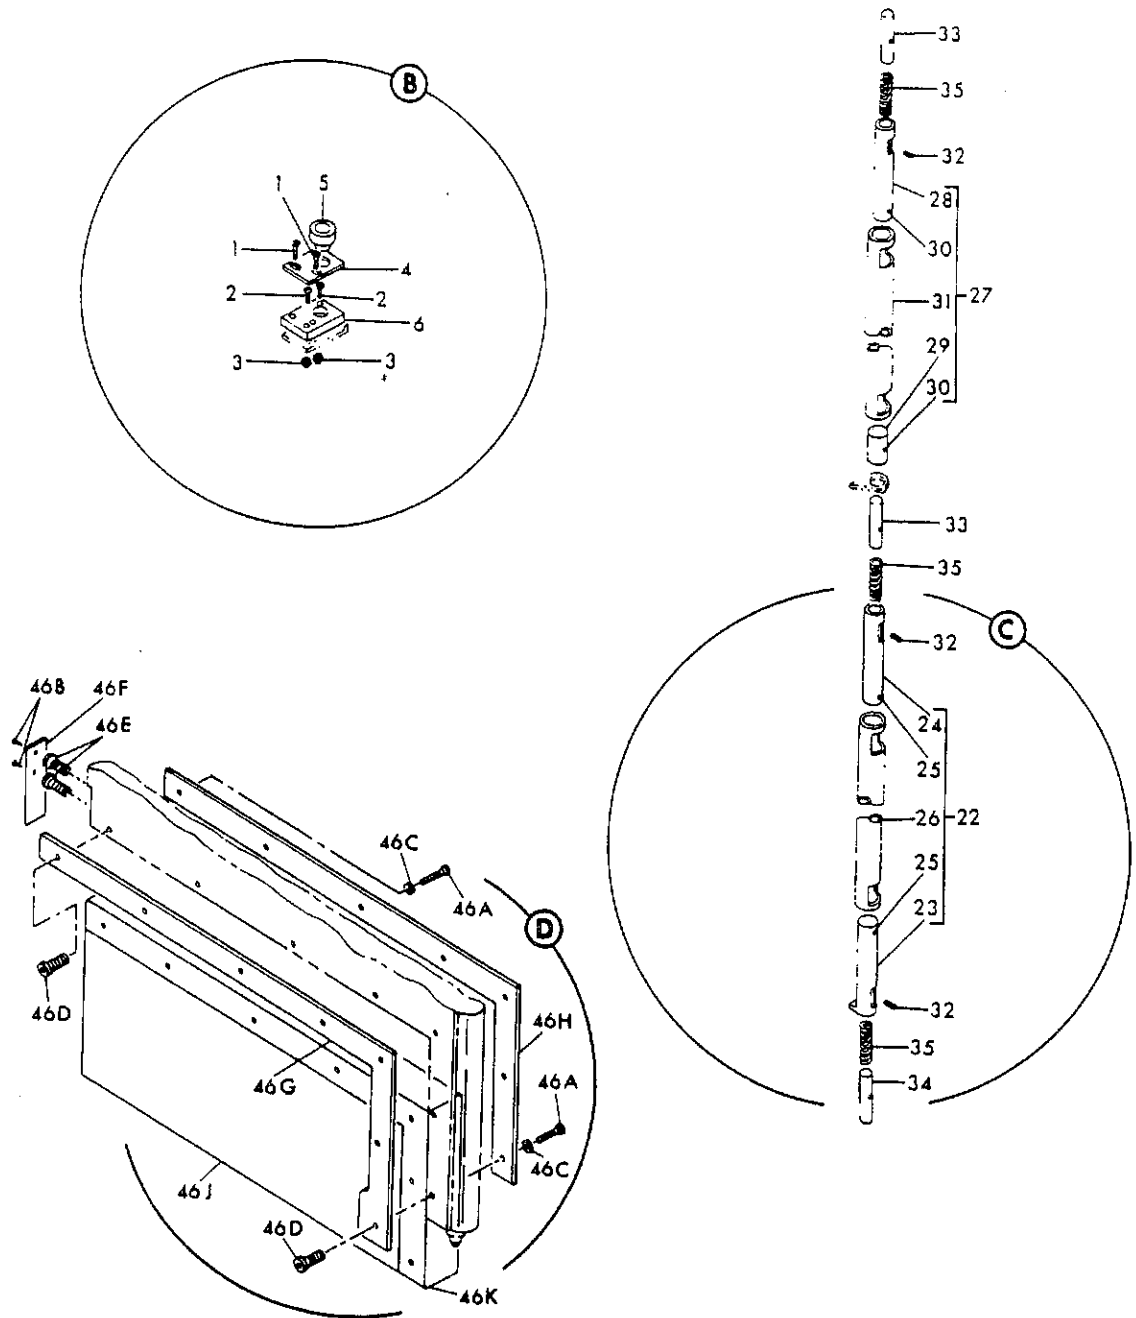


FIGURE 8A. DOOR INSTL, STATION 302 PARTITION (DOORS ONLY) (SHEET 2)

NOV 21/90

52-04-0A

DETAILED PARTS LIST
52-04-8A
PAGE 1

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
8A	65-70376-1		DOOR INSTL, STATION 302 PARTITION (DOORS ONLY) (SEE . . . 25-1, FIG. 20F, ITEM 7, 25-1, FIG. 20L, ITEM 13, 25-1, FIG. 20N, ITEM 24, 25-1, FIG. 20Q, ITEM 25, 25-1, FIG. 20S, ITEM 26, 25-1, FIG. 21K, ITEM 25, 25-1, FIG. 21L, ITEM 26, 25-1, FIG. 21M, ITEM 26, 25-1, FIG. 21N, ITEM 25, 25-1, FIG. 23E, ITEM 24, 25-1, FIG. 23J, ITEM 24, 25-1, FIG. 23M, ITEM 25, 25-1, FIG. 23X, ITEM 25, 25-1, FIG. 23Z, ITEM 25, 25-1, FIG. 174, ITEM 15, 25-1, FIG. 174A, ITEM 23, 25-1, FIG. 174B, ITEM 40, 25-1, FIG. 174C, ITEM 26D, 25-1, FIG. 174D, ITEM 28, 25-1, 174E, ITEM 41, 25-1, FIG. 174G, ITEM 22, 25-1, FIG. 174H, ITEM 33 AND 25-17, FIG. 16A, ITEM 1)	5199	RF
1	NAS517-3-11		SCREW	5199	2
2	NAS333CPA6		BOLT	5199	2
3	NAS679A3W		NUT	5199	2
4	63-2129		BLOCK, ADJUSTING	5199	1
5	63-2057-3		SLEEVE, HINGE	5199	1
6	63-2129-2		BLOCK, ADJUSTING	5199	1
7	65-70376-11AF		DOOR ASSY	5199	1
8	66-17064-7		STOP ASSY	5199	1
9	2028-3		LOCK, (V80477)	5199	1
11	NAS514P1032-10		SCREW	5199	2
12	SL607-3-10S		NUT, ANCHOR (V97397)	5199	2
19	SL607-3-10S		NUT, ANCHOR (V97397)	5199	8
20	65-73498-1		TRIM, UPPER	5199	1
			ATTACHING PARTS		
	NAS514-1032-22		SCREW	5199	9
	SL607-3-10S		NUT, ANCHOR (V97397)	5199	9
21	65-73498-2		TRIM, LOWER	5199	1
			ATTACHING PARTS		
	NAS514-1032-22		SCREW	5199	9
	SL607-3-10S		NUT, ANCHOR (V97397)	5199	9
22	65-73499-1		TUBE ASSY	5199	1
23	66-5019		SLEEVE	5199	1
24	66-5019-1		SLEEVE	5199	1
25	MS16562-49		PIN	5199	2
26	65-73499-3		TUBE, .875 IN. .095 WWT700-3	5199	1
27	65-73499-2		TUBE ASSY	5199	1
28	66-5019-1		SLEEVE	5199	1
29	66-5019-2		SLEEVE	5199	1
30	MS16562-49		PIN	5199	2
31	65-73499-4		TUBE, .875 IN. .095 WWT700-3	5199	1
32	AN565D103H9		SETSCREW	5199	3
33	63-2056-2		PIN, HINGE	5199	2
34	63-2056-1		PIN, HINGE	5199	1
35	63-2131		SPRING, COMPRESSION	5199	3
36	65-70376-35		TRIM, EDGE LOWER	5199	1
37	65-70376-36		TRIM, EDGE UPPER	5199	1
38	65-70376-37		TRIM, EDGE CENTER	5199	1
40	65-70376-34		TRIM, EDGE	5199	2
			ATTACHING PARTS		
41	BACS12H10-10		SCREW	5199	20
42	BACS12H10-10		SCREW	5199	3
43	65-70376-30AF		FACING, DECORATIVE (ALTERED FROM BAC. NO:10-60199-2042)	5199	1
44	65-70376-21		PANEL ASSY	5199	1
46	10-60370-1		KEY	5199	AR
56	137-2646		POUCH, COCKPIT KEY (V0563B) (ADDED BY SVA E.O. 80067)	5199	1
			ATTACHING PARTS		
	701-8764		SCREW, (V0563B)	5199	2
	701-7337		WASHER, (V0563B)	5199	2
57	81615-3		HOLDER ASSY, (V0563B) (ADDED BY SVA E.O. 81615)	5199	1
			ATTACHING PARTS		
	701-4573		SCREW, (V0563B)	5199	6
	701-3679		WASHER, (V0563B)	5199	6
			FOR REFERENCE TO OTHER DOOR DETAILS, SEE NHA.	5199	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

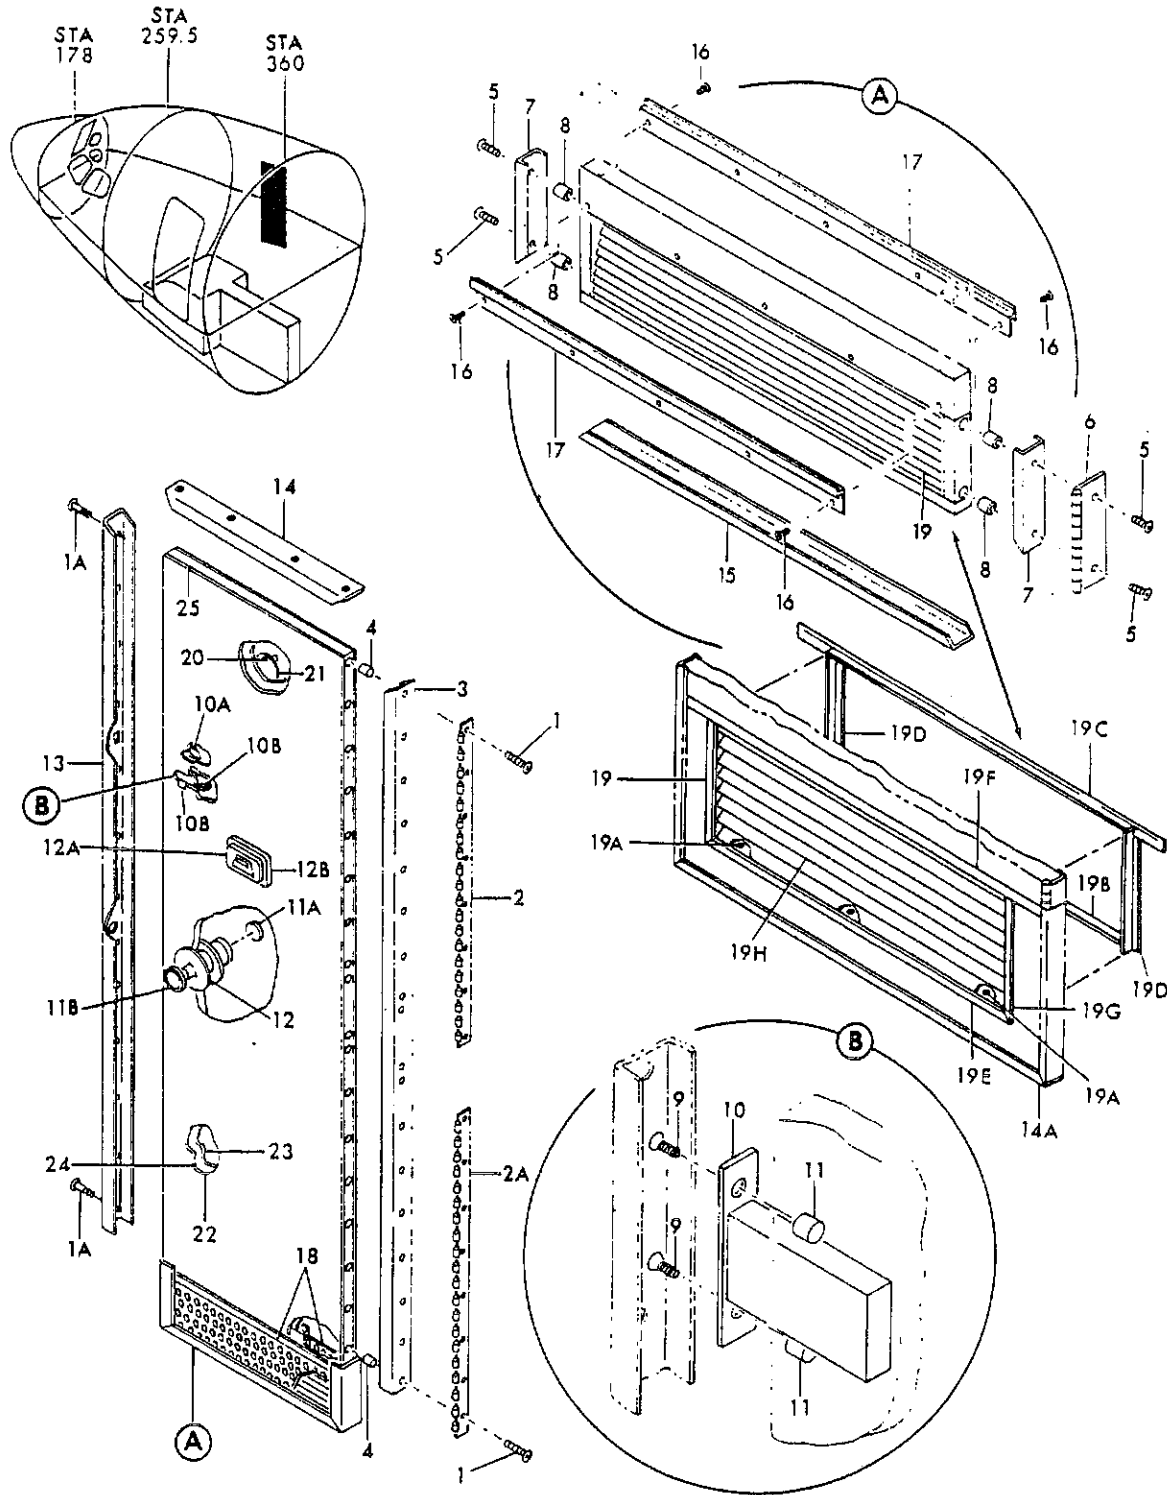


FIGURE 12B. DOOR ASSY, TOILET A

DETAILED PARTS LIST
52-04-12B
PAGE 0

52-04-12B

NOV 21/90



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
12B	65C10429-1N	DOOR ASSY, TOILET A (SEE 25-17, FIG. 91A, ITEM 5)	5199	RF
1	NAS514P1032-8	. SCREW	5199	16
2	69-10856-1	. HINGE HALF	5199	1
2A	69-10856-1	. HINGE HALF	5199	1
3	65-70316-32	. TRIM, EDGE	5199	1
4	SL607-3-10S	. INSERT, (V97397)	5199	18
5	NAS514P1032-7	. SCREW	5199	4
6	69-10856-2	. PLATE, COVER	5199	1
7	65-70316-38	. TRIM, EDGE	5199	2
8	SL607-3-10S	. INSERT, (V97397)	5199	4
9	NAS514P1032-7	. SCREW	5199	2
10	SAML0-1R	. LOCK ASSY, (V31845)	5199	1
12	L107A	. LATCH ASSY, (V15438)	5199	1
12A	69-69079-1	. ASHTRAY ASSY, (OPTIONAL TO 1052-14 (V25846))	5199	1
12A	1052-14	. ASHTRAY ASSY, (V25846) (OPTIONAL 69-69079-1)	5199	1
	MS51861-26C	ATTACHING PARTS . SCREW	5199	2
12B	69-68067-1	. SPACER, ASHTRAY	5199	1
13	65-70316-34	. TRIM, EDGE	5199	1
14	65-70316-36	. TRIM, EDGE ATTACHING PARTS . SCREW	5199	17
15	65-70316-37	. TRIM, BOTTOM	5199	1
16	BACS12H6-6	. SCREW	5199	10
17	65-70316-39	. MOLDING	5199	2
18	69-4938-7	. GRILL, AIR	5199	2
19	65-70316-30	. SHEET, LOUVERED	5199	1
20	BACS12H6-8	. SCREW	5199	1
21	OP111-2	. HOOK, COAT (V81872)	5199	1
22	65C10429-4M	. FACING, DECORATIVE (ALTERED FROM BAC SPEC NO;10-60199-2042)	5199	1
23	65C10429-5A	. FACING, DECORATIVE (ALTERED FROM BAC SPEC NO;10-60128-338T)	5199	1
25	65C10424-1	. PANEL ASSY	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

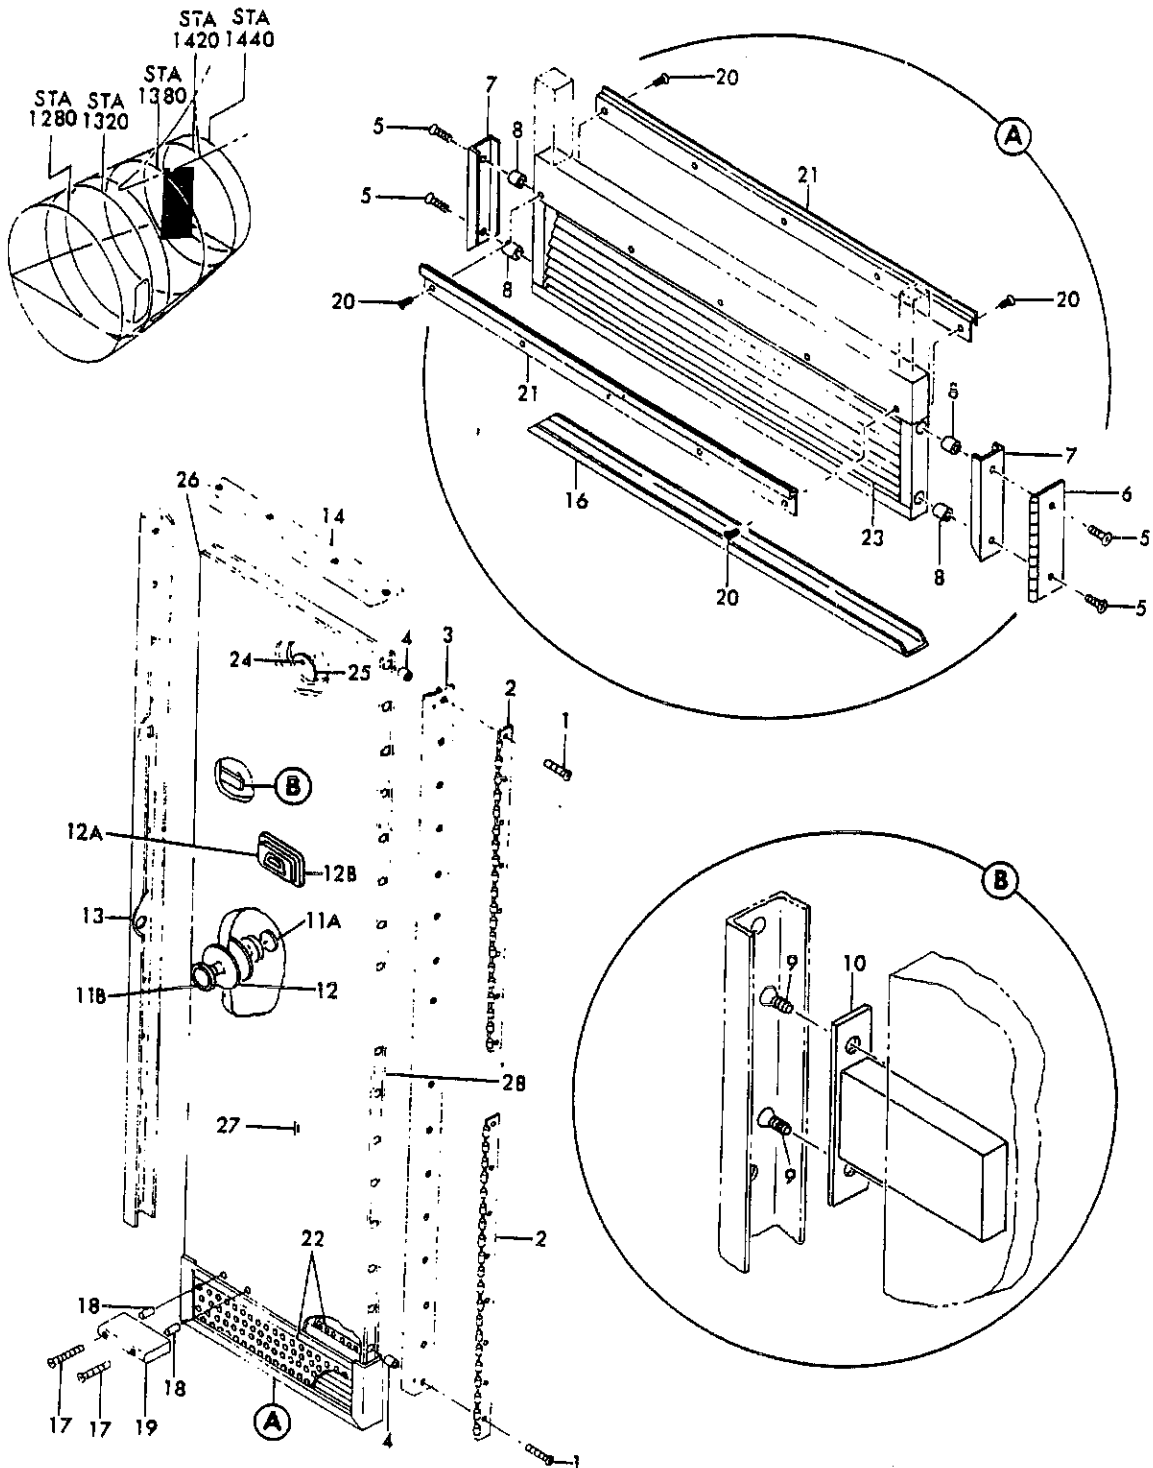


FIGURE 14A. DOOR ASSY, TOILET C

ETAILED PARTS LIST
2-04-14A
AGE 0

52-04-14A

NOV 21/90

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
14A	65C10429-3XXX		DOOR ASSY, TOILET C (SEE 25-17, FIG. 938, ITEM 3 AND . . . 25-17, FIG. 958, ITEM 23)	5199	RF
	65C10429-3M		DOOR ASSY, TOILET C (SEE 25-17, FIG. 938, ITEM 3) . . .	5199	RF
1	NAS514P1032-8		. SCREW	5199	16
2	69-10856-1		. HINGE HALF.	5199	2
3	65-70316-32		. TRIM, EDGE.	5199	1
5	NAS514P1032-7		. SCREW	5199	4
6	69-10856-2		. PLATE, COVER.	5199	1
7	65-70316-38		. TRIM, EDGE.	5199	2
9	NAS514P1032-7		. SCREW	5199	2
12	L107A		. LATCH ASSY, (V15438).	5199	1
12A	69-69079-1		. ASHTRAY ASSY, ... (OPTIONAL TO 1052-14 (V25846))	5199	1
12A	1052-14		. ASHTRAY ASSY, (V25846). (OPTIONAL 69-69079-1)	5199	1
	MS51861-26C		ATTACHING PARTS . SCREW	5199	2
12B	69-68067-1		. SPACER, ASHTRAY	5199	1
13	65-70316-34		. TRIM, EDGE.	5199	1
14	65-70316-36		. TRIM, EDGE.	5199	1
	BACS12H10-10		ATTACHING PARTS . SCREW	5199	17
16	65-70316-37		. TRIM, BOTTOM.	5199	1
17	NAS602-20		. SCREW	5199	2
18	SL607-08-10S		. INSERT, (V97393).	5199	2
19	69-58280-1		. BUMPER.	5199	1
20	BACS12H6-6		. SCREW	5199	10
21	65-70316-39		. MOLDING	5199	2
22	69-4938-7		. AIR GRILL	5199	2
23	65-70316-30		. SHEET, LOUVERED	5199	1
24	BACS12H6-8		. SCREW	5199	1
25	OP111-2		. HOOK, COAT (V81872)	5199	1
26	65C10424-1		. PANEL ASSY.	5199	1
27	65C10429-4XXX		. FACING, DECORATIVE.	5199	1
27	65C10429-4K		. FACING, DECORATIVE (ALTERED FROM BAC SPEC NO. 10-60199-2042)	5199	1
28	65C10429-5XXX		. FACING, DECORATIVE.	5199	1
28	65C10429-5A		. SHEET, DECORATIVE DOOR (ALTERED FROM BAC SPEC NO. 10-60128-338T)	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

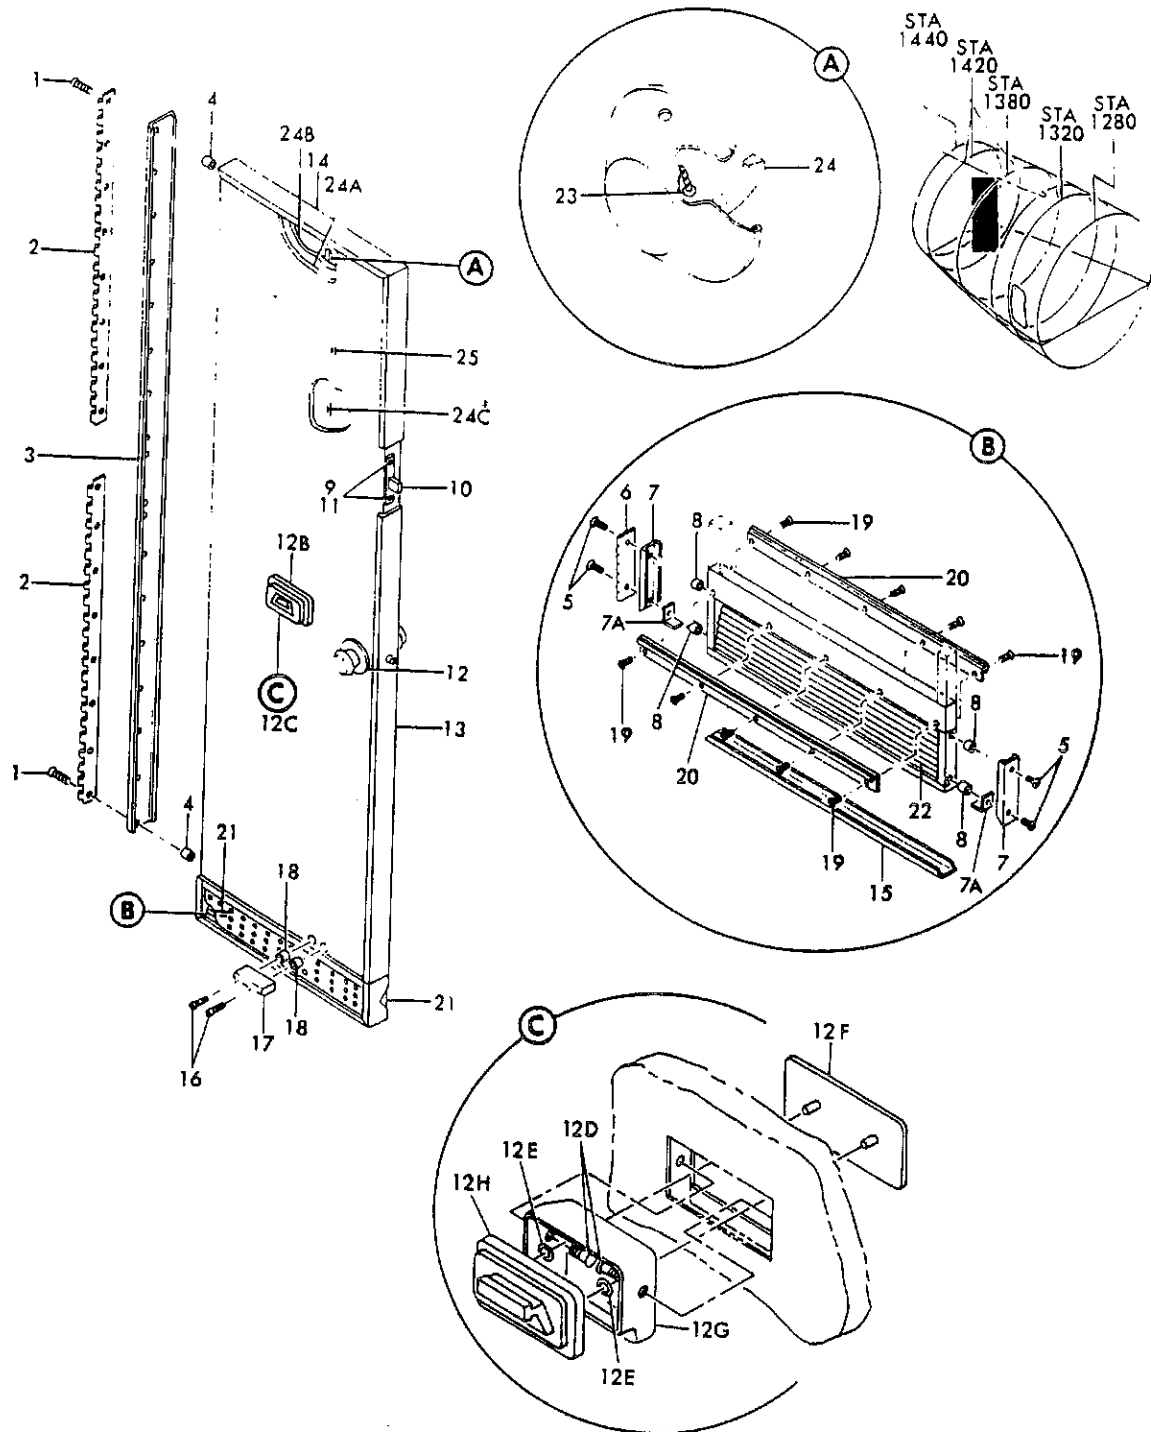


FIGURE 15A. DOOR ASSY, TOILET D

DETAILED PARTS LIST
52-04-15A
PAGE 0

52-04-15A

NOV 21/90

BOEING *707* Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 15A	65C10429-2M	DOOR ASSY, TOILET D (SEE 25-17, FIG. 958, ITEM 24).	5199	RF
R 1	NAS514P1032-8	. SCREW	5199	18
R 2	69-10856-1	. HINGE HALF.	5199	2
R 3	65-70316-32	. TRIM, EDGE.	5199	1
R 5	NAS514P1032-7	. SCREW	5199	4
R 6	69-10856-2	. PLATE, COVER.	5199	1
R 7	65-70316-38	. TRIM, EDGE.	5199	2
R 7A	BACB2C08GG	. BRACKET	5199	2
R 8	SL607-3-10S	. INSERT, (V97397).	5199	4
R 9	NAS514P1032-7	. SCREW	5199	2
R 10	SAM10-43L	. LOCK ASSY, (V31845)	5199	1
R 12	L107A	. LATCH ASSY, (V15438).	5199	1
R 12A	69-69079-1	. ASHTRAY ASSY, ... (OPTIONAL TO 1052-14 (V25846))	5199	1
R 12A	1052-14	. ASHTRAY ASSY, (V25846). (OPTIONAL 69-69079-1)	5199	1
R	MS51861-26C	ATTACHING PARTS . SCREW	5199	2
R 12B	69-68067-1	. SPACER, ASHTRAY	5199	1
R 13	65-70316-35	. TRIM, EDGE.	5199	1
R 14	65-70316-36	. TRIM, EDGE.	5199	1
R	BAC512H10-10	ATTACHING PARTS . SCREW	5199	17
R 15	65-70316-37	. TRIM, BOTTOM.	5199	1
R 16	NAS602-20	. SCREW	5199	2
R 17	69-58280-1	. BUMPER.	5199	1
R 18	SL607-08-10S	. INSERT, (V97393).	5199	2
R 19	BAC512H6-6	. SCREW	5199	10
R 20	65-70316-39	. MOLDING	5199	2
R 21	69-4938-7	. AIR GRILL	5199	2
R 22	65-70316-30	. SHEET, LOUVERED	5199	1
R 23	BAC512H6-8	. SCREW	5199	1
R 24	OP111-2	. HOOK, COAT (V81872)	5199	1
R 24A	65C10429-4M	. FACING, DECORATIVE (ALTERED FROM BAC SPEC NO.;10-60199-2042)	5199	1
R 24B	65C10429-5A	. FACING, DECORATIVE (ALTERED FROM BAC SPEC NO.;10-60128-338T)	5199	1
R 25	65C10424-1	. PANEL ASSY.	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

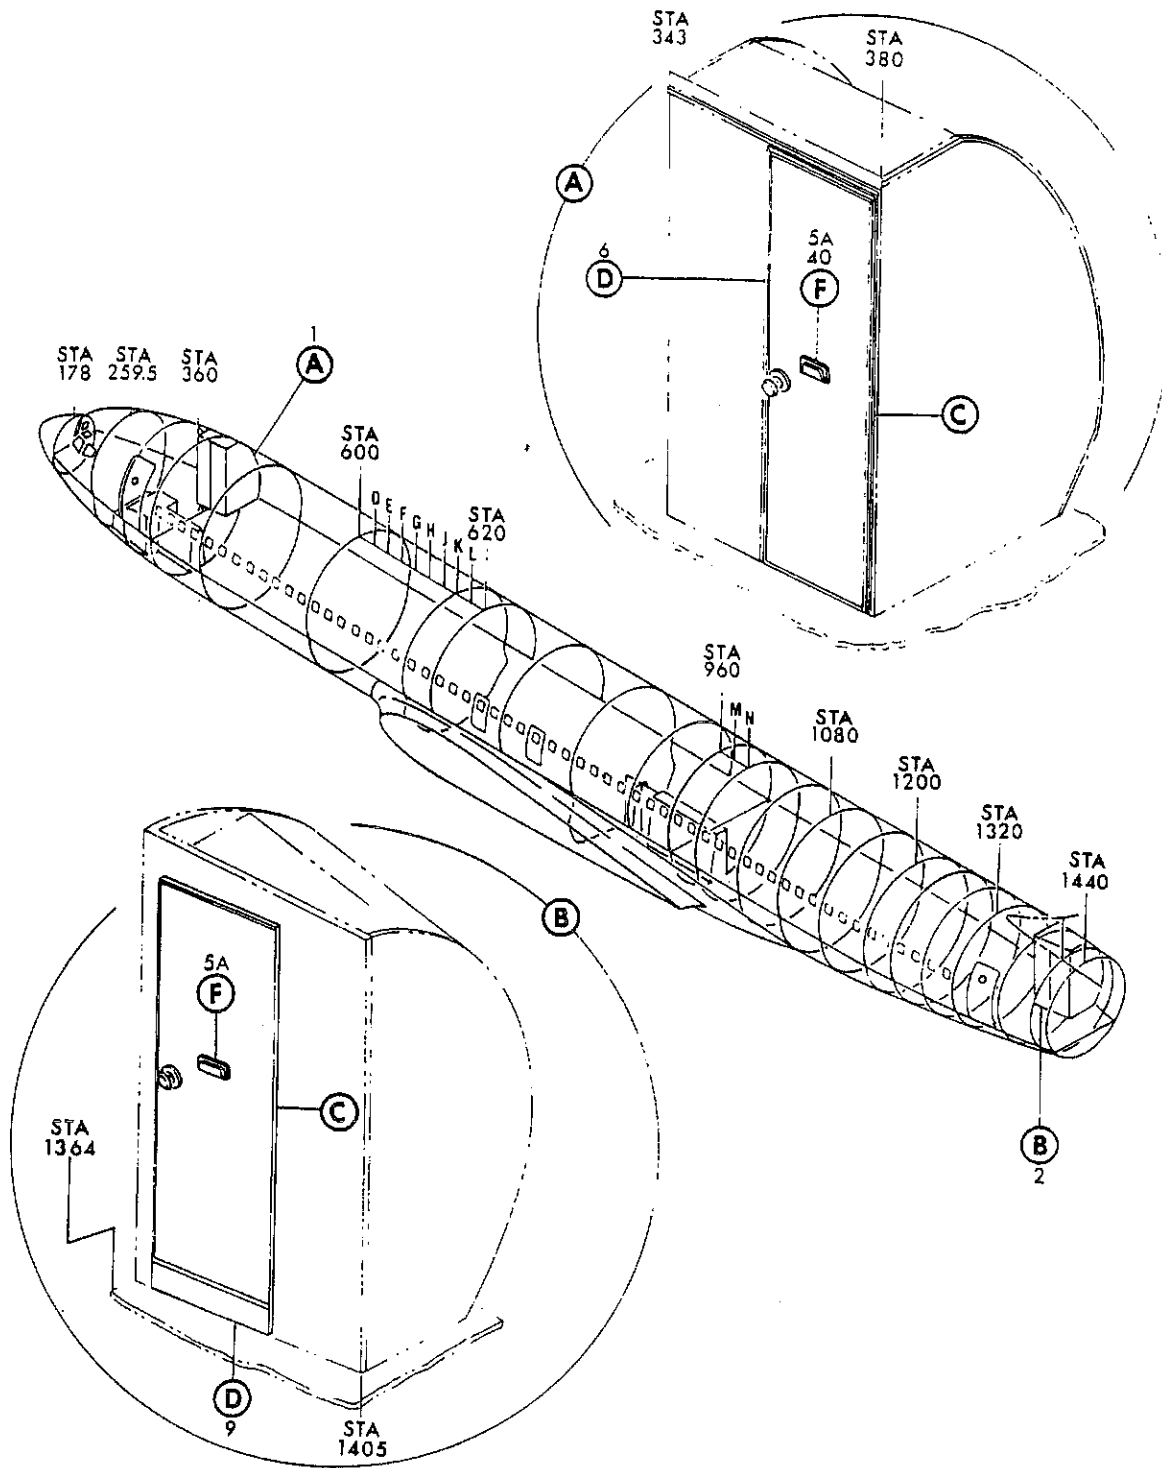


FIGURE 17G. LAVATORY ASSY, TOILET COMPARTMENT B AND E PALLETIZED (DOORS ONLY) (SHEET 1)

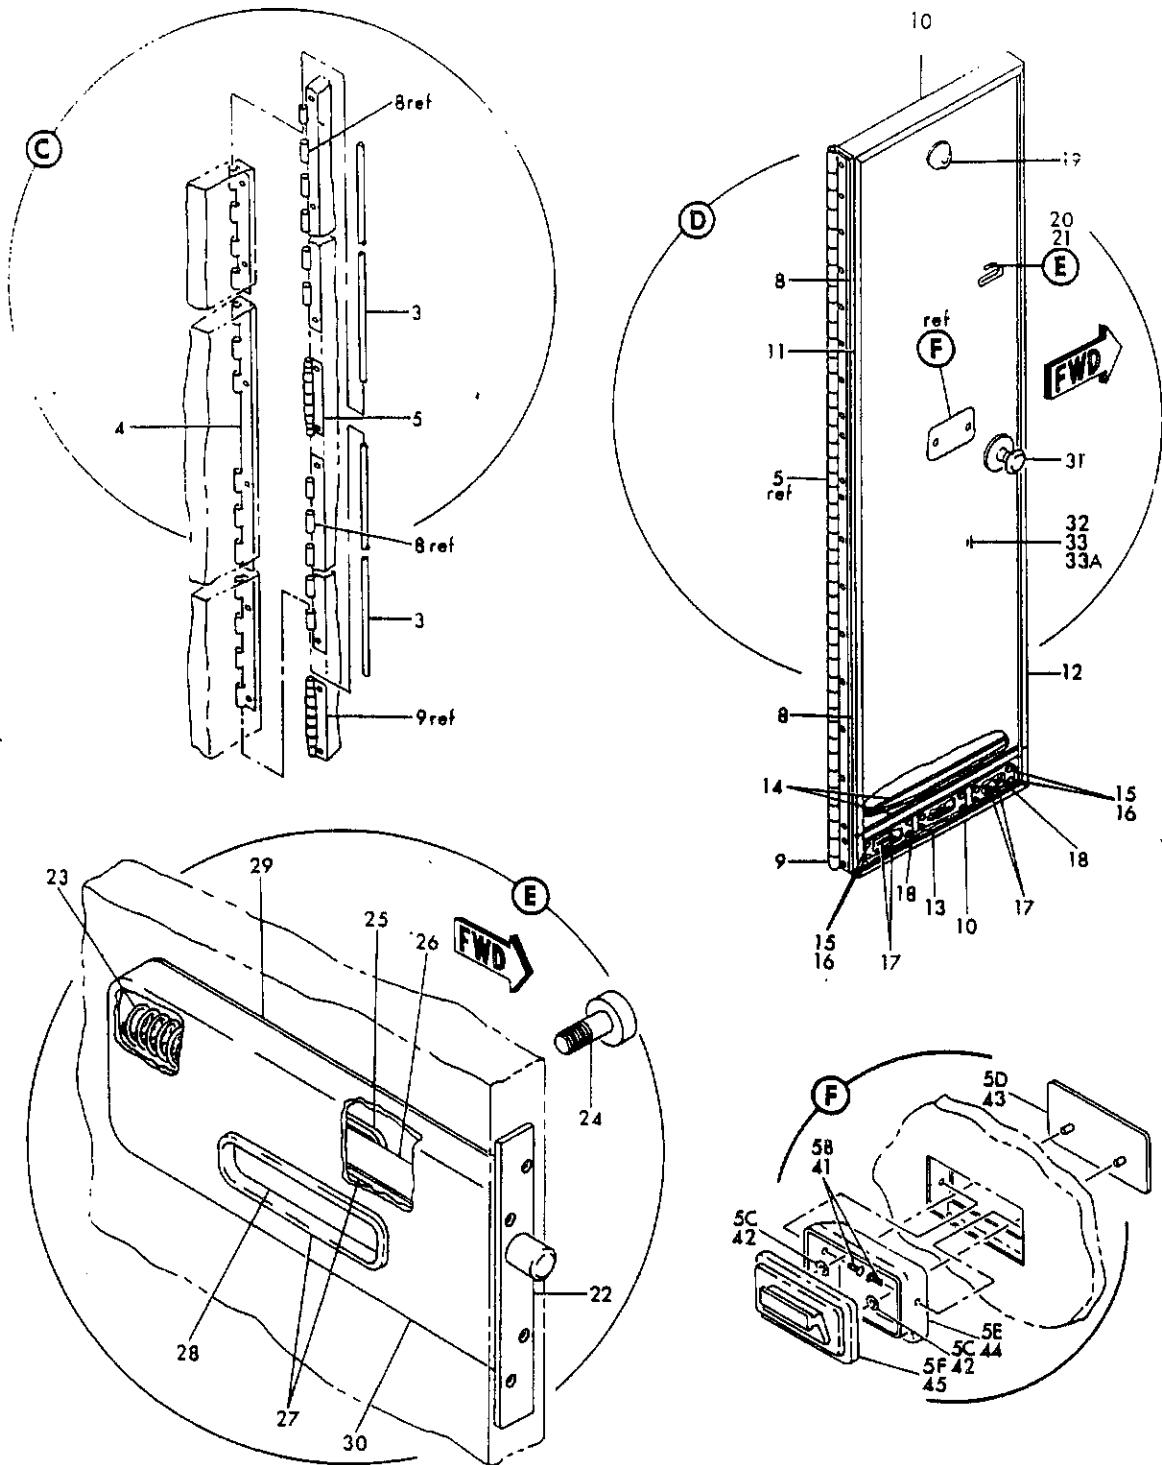


FIGURE 17C. LAVATORY ASSY, TOILET COMPARTMENT B AND E PALLETIZED (DOORS ONLY) (SHEET 2)

NOV 21/90

52-04-17C

DETAILED PARTS LIST
52-04-17C
PAGE 1

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY	
			1	2	3	4	5	6	7			
R	17G	1	65-29519-49	LAVATORY ASSY, TOILET COMPARTMENT B PALLETIZED.							0150	RF
R				(DOORS ONLY) (REWORKED BY SB 3146 AND SB 3159)								
R				(SEE 25-1, FIG. 127, ITEM 15)								
R			65-32231-1F	DOOR INSTL, FORWARD TOILET B.							0150	1
R		3	AN253-2-3265	PIN							0150	2
R		4	69-10856	HINGE HALF.							0150	1
R			BACS12H8-12	ATTACHING PARTS								
R				SCREW							0150	17
R		5	69-10856-2	PLATE, COVER.							0150	1
R			BACS12H8-12	ATTACHING PARTS								
R				SCREW							0150	2
R		6	65-4741-40B	DOOR ASSY, TOILET B (DOORS ONLY) (USED ON							0150	1
R				65-32231-1F) (REWORKED BY SB 3159)								
R		8	69-10856-1	HINGE HALF, TOILET DOORS.							0150	2
R			BACS12H8-12	ATTACHING PARTS								
R				SCREW, (NOT USED ON 65-20960-25C, -25D, -35L, ...							0150	16
R				-35T)								
R		9	69-10856-2	PLATE, TOILET DOORS HINGE COVER							0150	1
R			BACS12H8-12	ATTACHING PARTS								
R				SCREW, (NOT USED ON 65-20960-25C, -25D, -35L, ...							0150	2
R				-35T)								
R		10	65-4741-5	TRIM, TOILET DOOR EDGE (TOILET B AND E)							0150	2
R			BACS12H6-10	ATTACHING PARTS								
R				SCREW, (NOT USED ON 65-20960-25C, -25D)							0150	14
R		11	65-4741-6	TRIM, TOILET DOOR EDGE (TOILET B AND E)							0150	1
R			BACS12H6-10	ATTACHING PARTS								
R				SCREW, (NOT USED ON 65-20960-25C, -25D)							0150	21
R		12	65-4741-22	TRIM, TOILET DOOR EDGE (TOILET B AND E)							0150	1
R			BACS12H6-10	ATTACHING PARTS								
R				SCREW, (NOT USED ON 65-20960-25C, -25D)							0150	25
R		13	69-4938-7	GRILLE, TOILET DOOR AIR							0150	2
R		14	65-4741-10	MOULDING, TOILET DOOR (TOILET B AND E).							0150	2
R			BAC12H6-6	ATTACHING PARTS								
R				SCREW, (NOT USED ON 65-20960-25C, -25D)							0150	11
R		15	65-4741-14	CLIP, TOILET DOOR (TOILET B AND E).							0150	12
R			BACS12F6-6	ATTACHING PARTS								
R				SCREW, (NOT USED ON 65-20960-25C, -25D)							0150	24
R		16	65-4741-12	SEAL, TOILET DOOR (TOILET B AND E).							0150	12
R		17	65-4741-13	SEAL, TOILET DOOR (TOILET B AND E).							0150	6
R		18	66-4546	LOUVER, TOILET DOOR (TOILET B AND E).							0150	3
R		19	OP111-2	HOOK, COAT (V81872)							0150	1
R			BACS12H6-8	ATTACHING PARTS								
R				SCREW, (NOT USED ON 65-20960-25C, -25D)							0150	1
R		20	SAM10-1R	LATCH ASSY, (V31845) (TOILET B AND E)							0150	1
R			NAS514P832-8	ATTACHING PARTS								
R			BACS12H8-8	SCREW							0150	2
R				SCREW, (NOT USED ON 65-20960-25C, -25D)							0150	2
R		31	L107A	LATCH ASSY, DOOR (V15438)							0150	1
R			BACS12H10-8	ATTACHING PARTS								
R				SCREW, (NOT USED ON 65-20960-25C, -25D)							0150	2
R		32	65-4706-61B	PANEL ASSY, TOILET DOOR (TOILET B).							0150	1
R		33	65-4706-37	PANEL ASSY, TOILET DOOR (UNDECORATED) (NOT USED							0150	1
R				ON 65-20960-26C AND -26D)								
R		40	1052-1	REQUIRED PLACARDS, (SEE 11-1, FIG. 23A AND 23D)							0150	1
R		41	SCREW	ASHTRAY ASSY, (V25846) (ADDED BY SB 3161)							0150	1
R		42	5115-12	SCREW, SELF TAPPING							0150	2
R		43	1052-15	RING, RETAINING (V0323B).							0150	2
R		44	1052-13	PLATE, BACKING (V25846)							0150	1
R		45	1052-11	HOUSING, (V25846)							0150	1
R				ASHTRAY (V25846).							0150	1
R				FOR REFERENCE TO OTHER LAVATORY DETAILS, SEE NHA.							0150	
MISSING ITEM NUMBERS ARE NOT APPLICABLE												

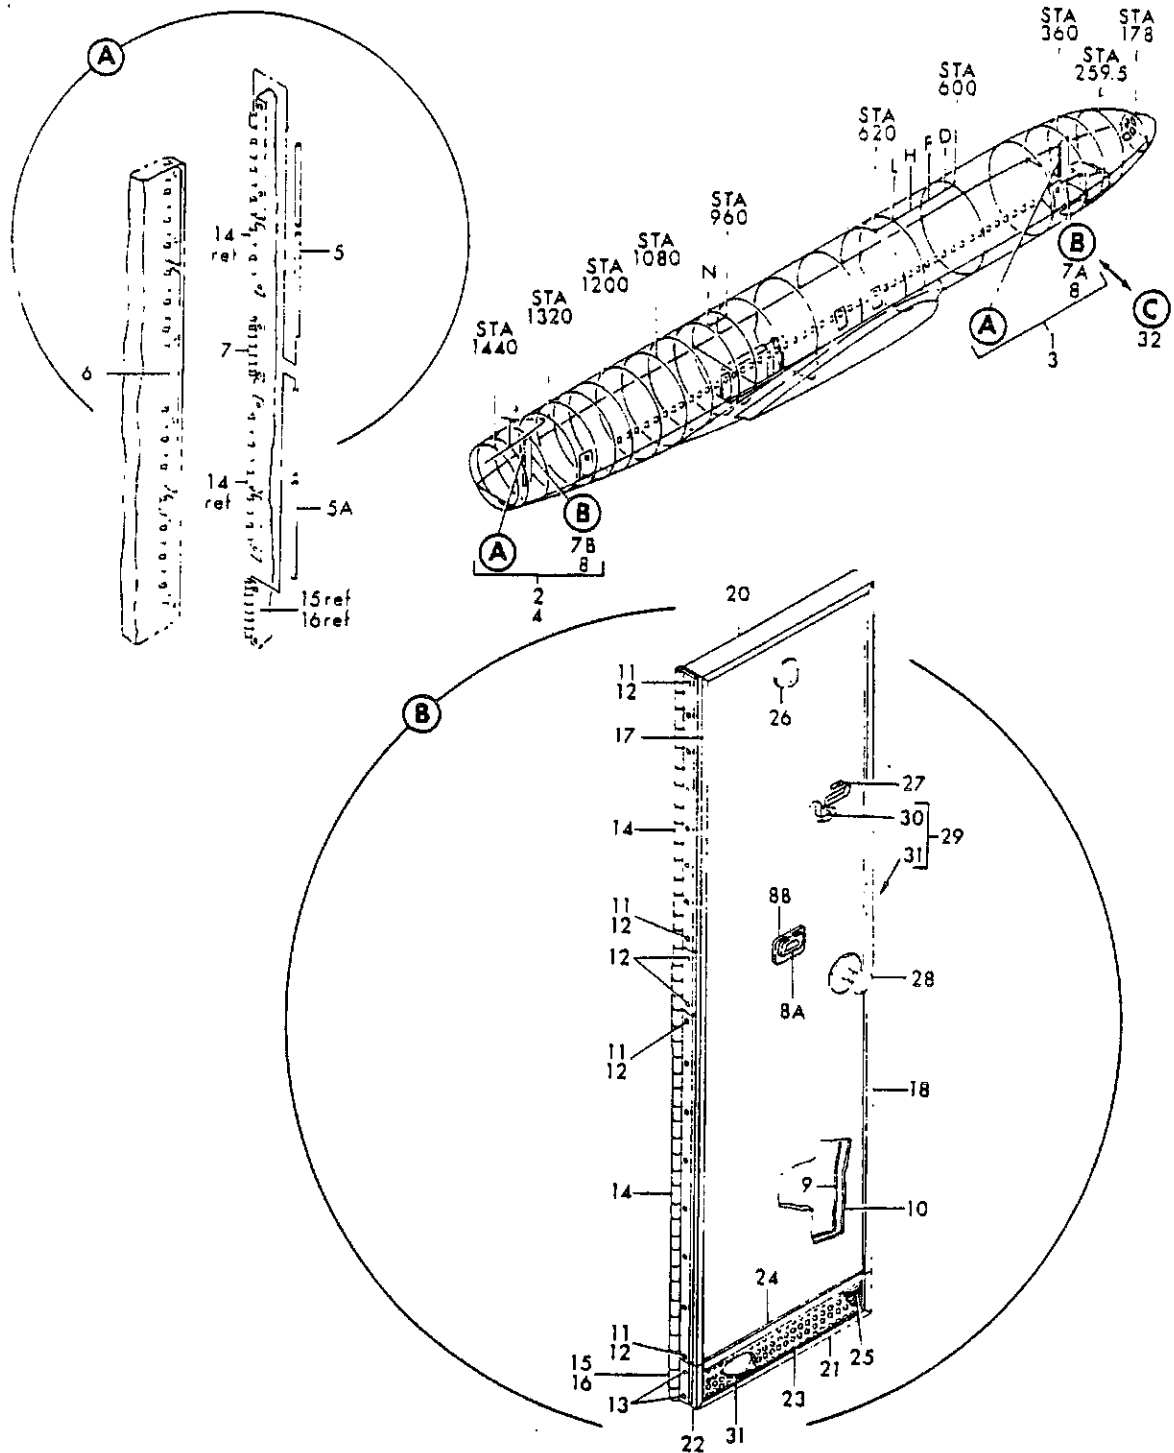


FIGURE 17J. LAVATORY ASSY, TOILET COMPARTMENT B AND E PALLETIZED (DOORS ONLY) SHEET 1

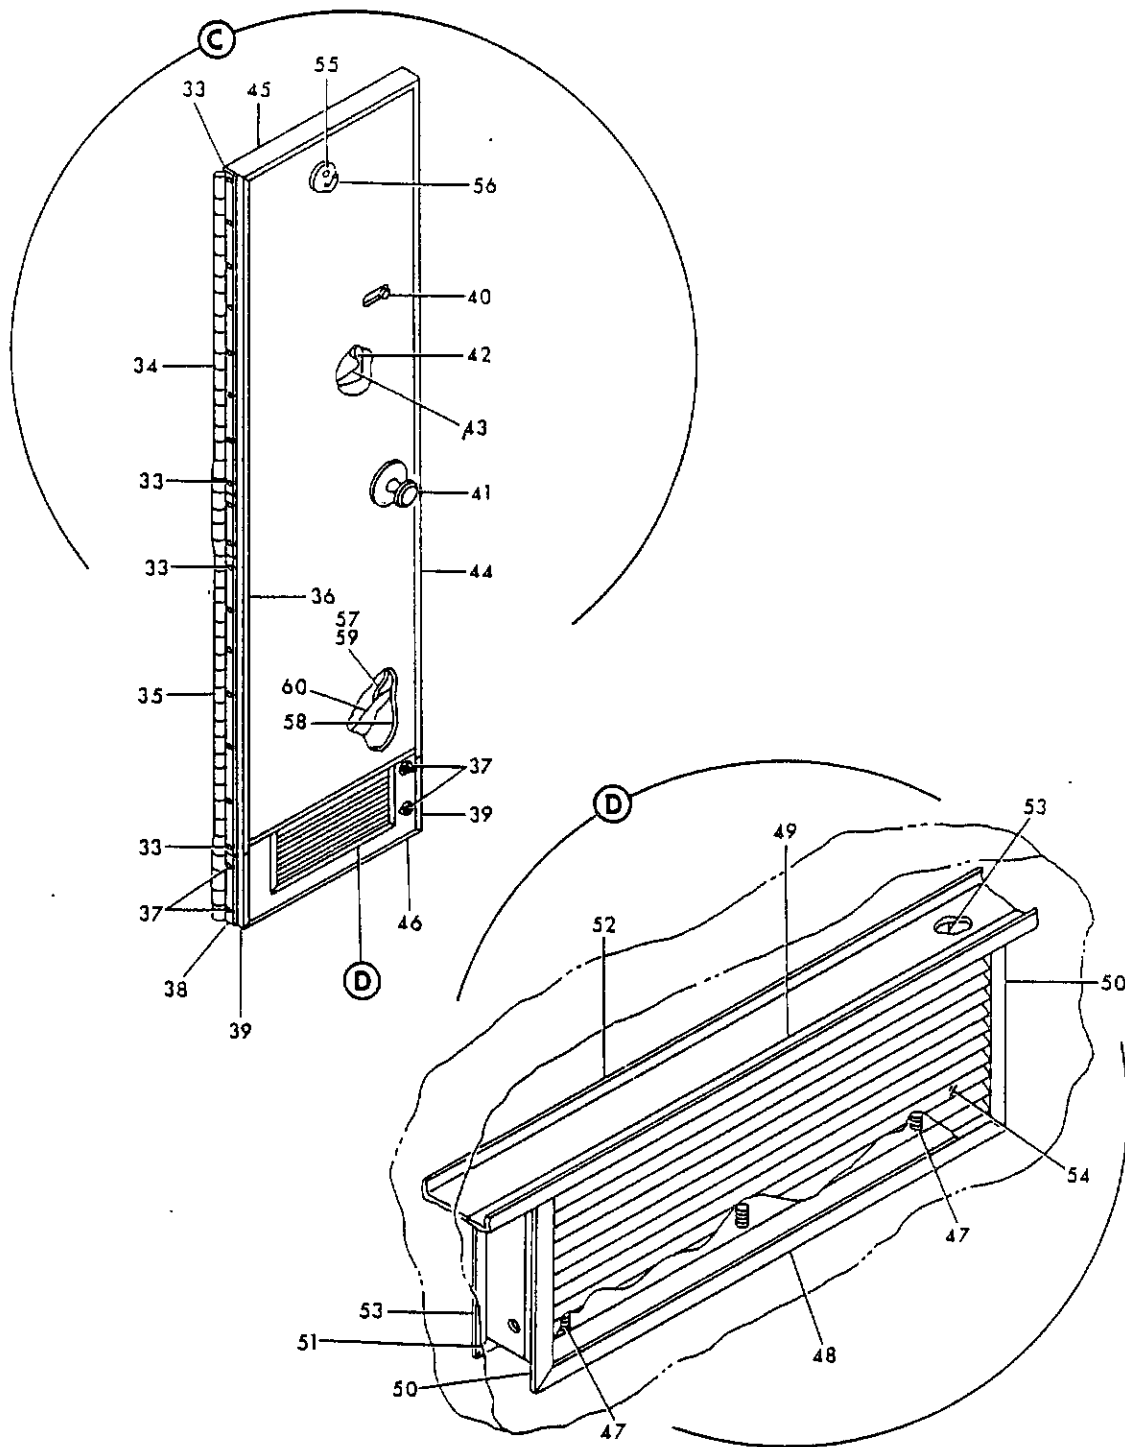


FIGURE 17J. LAVATORY ASSY, TOILET COMPARTMENT B AND E PALLETIZED (DOORS ONLY) (SHEET 2)

NOV 21/90

52-04-17J

DETAILED PARTS LIST
52-04-17J
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
17J 1	65-29519-120		LAVATORY ASSY, TOILET COMPARTMENT B PALLETIZED (DOORS . ONLY) (SEE 25-1, FIG. 180C, ITEM 1 AND 25-1, FIG. 180H, ITEM 451)	5199	RF
2	65-29520-123		LAVATORY ASSY, TOILET COMPARTMENT E PALLETIZED (DOORS . ONLY) (SEE 25-1, FIG. 180C, ITEM 81)	5199	RF
3	65-73549-8		DOOR INSTL, FORWARD TOILET B.	5199	1
4	65-73549-9		DOOR INSTL, AFT TOILET E.	5199	1
5	AN253-2-3265		PIN	5199	1
5A	AN253-2-3265		PIN	5199	1
6	69-10856		HINGE HALF.	5199	1
	BACS12H8-12		ATTACHING PARTS SCREW	5199	17
7	69-10856-2		PLATE COVER	5199	1
	NAS514P1032-8		ATTACHING PARTS SCREW	5199	2
8	65C10429-1XXX		DOOR ASSY, TOILET B AND E	5199	1
8A	1052-3ASHTRAY		ASHTRAY ASSY, (V25846).	5199	1
8B	69-68067-1		SPACER, ASHTRAY	5199	1
9	65C10429-4XXX		FACING, DECORATIVE.	5199	1
10	65C10429-5XXX		FACING, DECORATIVE.	5199	1
11	NAS514P1032-8		SCREW	5199	16
12	SL607-3-10S		INSERT, (V97397).	5199	18
13	MS20426D4		RIVET	5199	2
14	69-10856-1		HINGE HALF.	5199	2
15	69-10856-2		PLATE, COVER.	5199	1
17	65-70316-32		TRIM, EDGE.	5199	1
18	65-70316-34		TRIM, LATCH SIDE EDGE	5199	1
20	65-70316-36		TRIM, TOP EDGE.	5199	1
21	65-70316-37		TRIM, BOTTOM EDGE	5199	1
22	65-70316-38		TRIM, BOTTOM SIDE EDGE.	5199	2
23	69-4938-7		GRILLE AIR.	5199	2
24	65-70316-39		MOULDING, (ALTERED FROM; 7023 (V05043)).	5199	2
	NAS514P1032-7		ATTACHING PARTS SCREW	5199	4
	SL607-3-10S		INSERT, (V97397).	5199	4
25	65-70316-30		LOUVER.	5199	1
	BACS12H6-6		ATTACHING PARTS SCREW	5199	5
26	OP111-2		HOOK, COAT (V81872)	5199	1
	BACS12H6-8		ATTACHING PARTS SCREW	5199	1
27	SAM10-		LOCK ASSY, (V31845)	5199	1
	NAS514P1032-7		ATTACHING PARTS SCREW	5199	2
	SL607-3-10S		INSERT, (V97397).	5199	2
29	65C10424-1		PANEL ASSY.	5199	1
30	69-60549-1		HOUSING, LOCK	5199	1
31	69-58931-1		PANEL ASSY.	5199	1
			FOR REFERENCE TO OTHER LAVATORY DETAILS, SEE NHA.	5199	

MISSING ITEM NUMBERS ARE NOT APPLICABLE

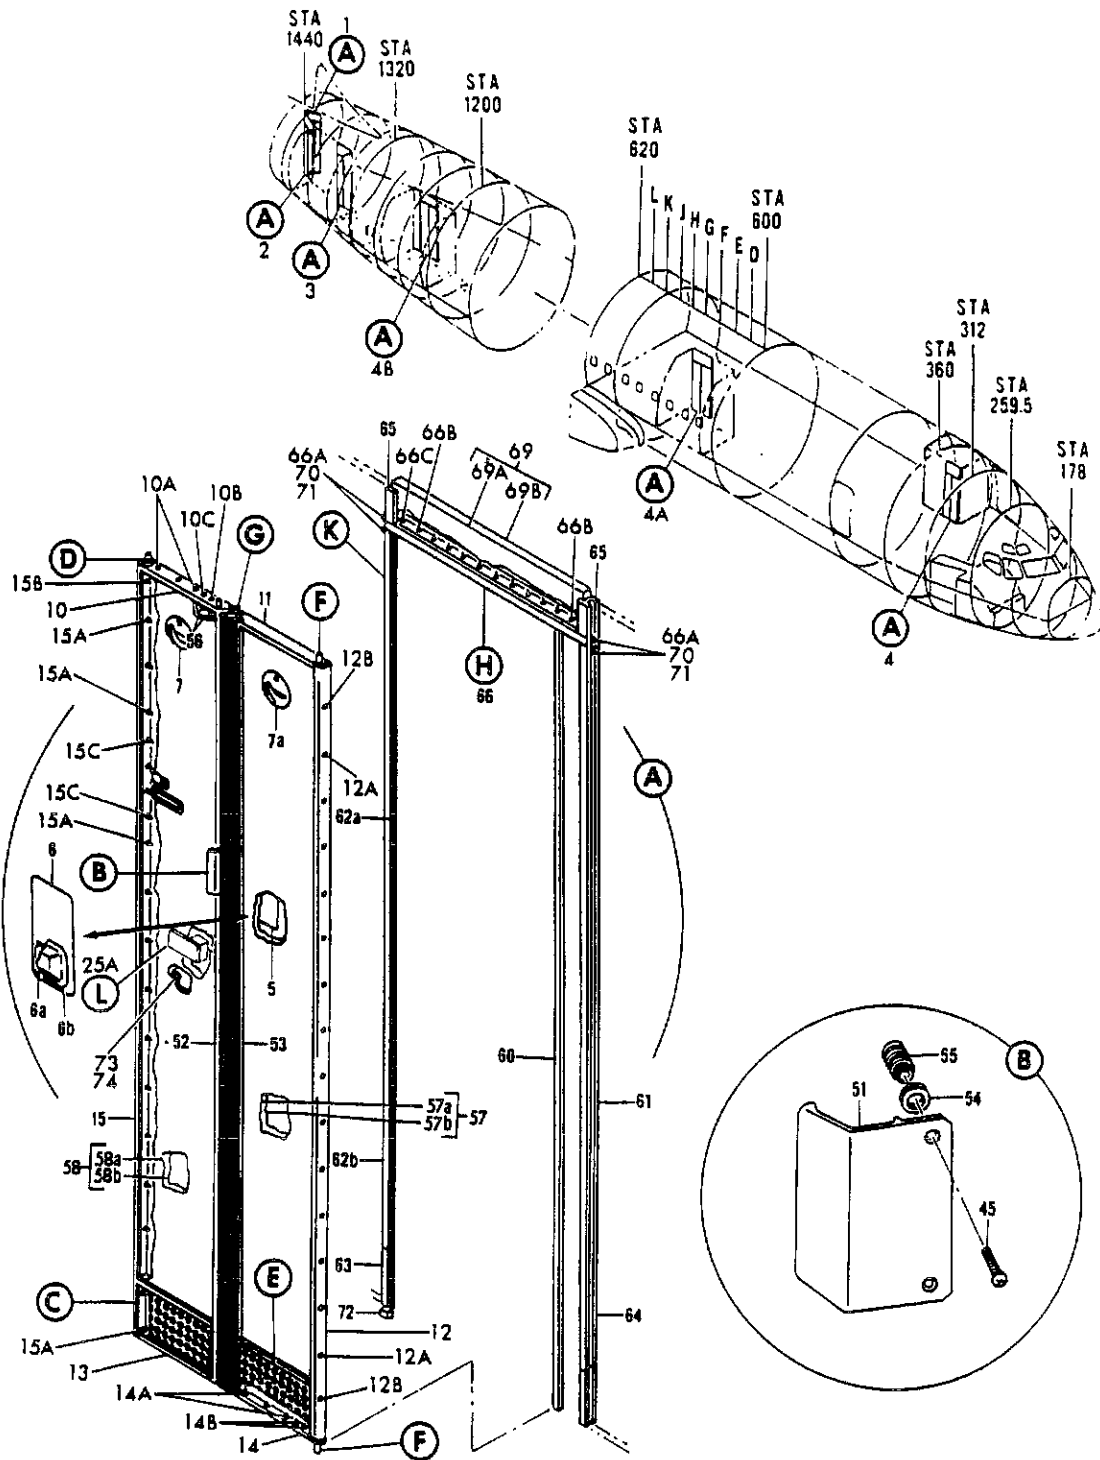


FIGURE 18. DOOR INSTL, TOILET FOLDING (SHEET 1)

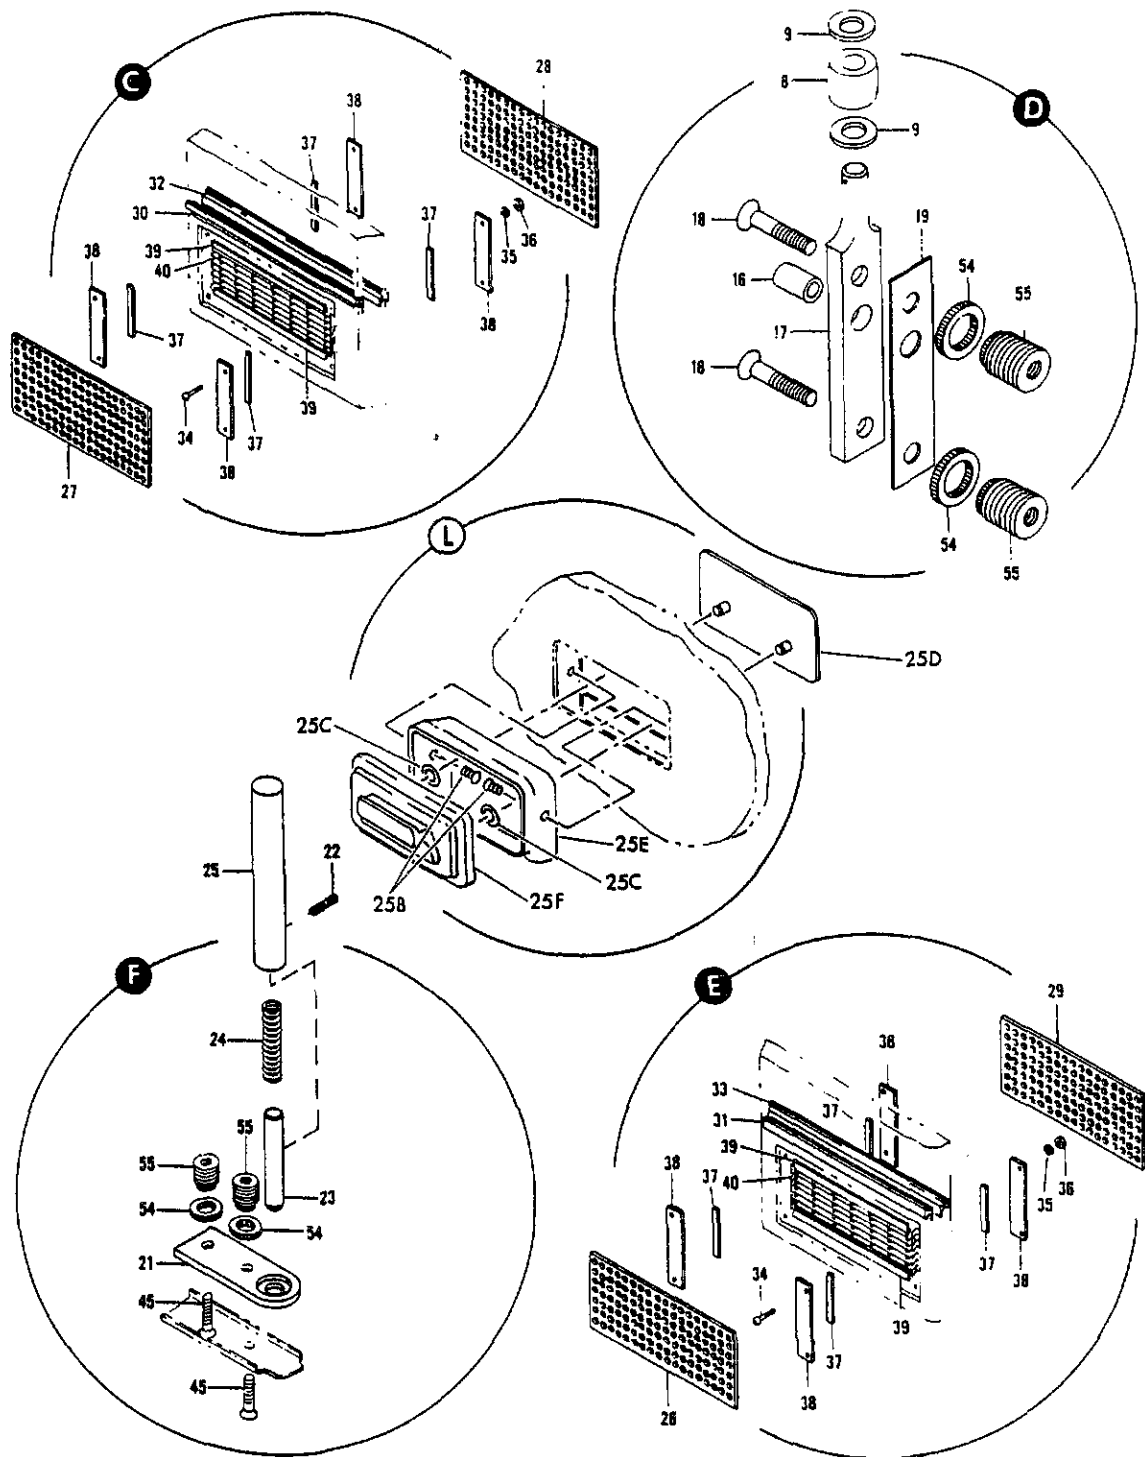


FIGURE 18. DOOR INSTL., TOILET FOLDING (SHEET 2)

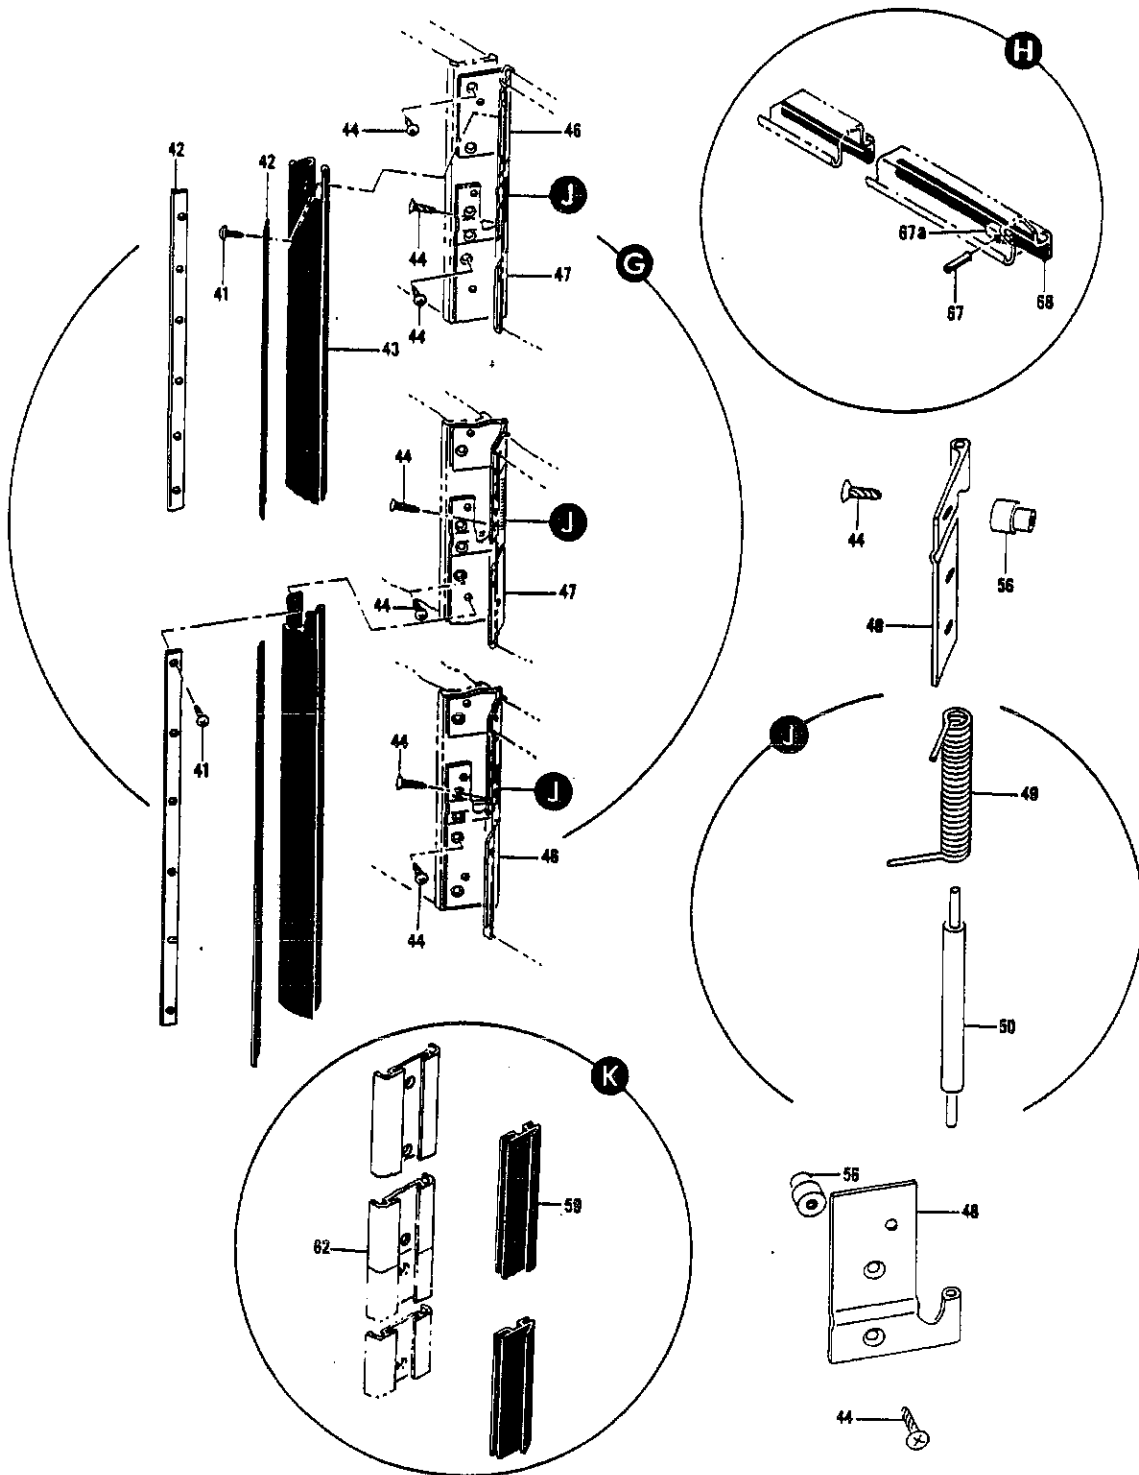


FIGURE 18. DOOR INSTL, TOILET FOLDING (SHEET 3)

BOEING *Intercontinental*
PARTS CATALOG

	FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R	18	65-22030-1F	DOOR INSTL, TOILET D FOLDING (SEE 25-17, FIG. 95A, ITEM 14)	0150	RF
R		65-22030-2F	DOOR INSTL, TOILET C FOLDING (SEE 25-17, FIG. 95A, ITEM 15)	0150	RF
R	1	65-22029-1F	. DOOR ASSY, COMPARTMENT (TOILET D) (DOORS ONLY)	0150	1
R	2	65-22029-2F	. DOOR ASSY, COMPARTMENT (TOILET C) (DOORS ONLY)	0150	1
R	6	69-11709	. . PUSHPLATE, TOILET COMPARTMENT FOLDING DOOR	0150	1
R	6A	69-11709-1	. . TEE, TOILET COMPARTMENT FOLDING DOOR	0150	1
			ATTACHING PARTS		
R		BACSI2H10-12	. . SCREW	0150	2
			-----*		
R	6B	69-11706	. . HANDLE, FOLDING DOOR PULL	0150	1
R	7A	OP111-2	. . HOOK, COAT (V81872)	0150	1
			ATTACHING PARTS		
R		BACSI2H6-8	. . SCREW	0150	1
			-----*		
R	8	69-12072-7	. . ROLLER, TOILET FOLDING DOOR	0150	1
R	9	NAS620A4-16L	. . WASHER	0150	2
R	10	65-22029-6	. . TRIM, TOILET COMPARTMENT FOLDING DOOR (TOILETS D, E AND K)	0150	1
R	10	65-22029-7	. . TRIM, COMPARTMENT (TOILETS C, F, H AND J)	0150	1
			ATTACHING PARTS		
R	10A	BACSI2H6-6	. . SCREW	0150	3
R	10B	BACSI2H8-8	. . SCREW	0150	1
R	10C	NAS514P832-8	. . SCREW	0150	1
			-----*		
R	11	65-22029-10	. . TRIM, TOILET COMPARTMENT FOLDING DOOR (TOILETS D, E AND K)	0150	1
R	11	65-22029-11	. . TRIM, COMPARTMENT (TOILETS C, F, H AND J)	0150	1
			ATTACHING PARTS		
R		BACSI2H6-6	. . SCREW	0150	3
			-----*		
R	12	65-22029-2B	. . TRIM, TOILET COMPARTMENT FOLDING DOOR	0150	1
			ATTACHING PARTS		
R	12A	BACSI2H6-6	. . SCREW	0150	14
R	12B	BACSI2H10-24	. . SCREW	0150	2
			-----*		
R	13	65-22029-8	. . TRIM, TOILET COMPARTMENT FOLDING DOOR (TOILETS D, E AND K)	0150	1
R	13	65-22029-9	. . TRIM, COMPARTMENT (TOILETS C, F, H AND J)	0150	1
			ATTACHING PARTS		
R		BACSI2H6-6	. . SCREW	0150	5
			-----*		
R	14	65-22029-12	. . TRIM, TOILET COMPARTMENT FOLDING DOOR (TOILETS D, E AND K)	0150	1
R	14	65-22029-13	. . TRIM, COMPARTMENT (TOILETS C, F, H AND J)	0150	1
			ATTACHING PARTS		
R	14A	BACSI2H6-6	. . SCREW	0150	3
R	14B	NAS514P1032-12	. . SCREW	0150	1
			-----*		
R	15	65-22029-5	. . TRIM, TOILET COMPARTMENT FOLDING DOOR	0150	1
			ATTACHING PARTS		
R	15A	BACSI2H6-6	. . SCREW	0150	14
R	15B	BACSI2H6-14	. . SCREW	0150	1
R	15C	BACSI2H8-8	. . SCREW	0150	4
			-----*		
R	16	NAS43DD1-26	. . SPACER	0150	1
R	17	69-12072-6	. . SPINDLE, TOILET FOLDING DOOR	0150	1
			ATTACHING PARTS		
R	18	NAS514P1032-14	. . SCREW	0150	2
R	19	BACS40C9-42	. . SHIM	0150	AR
			-----*		
R	20	2486-1-1-2	. . LATCH ASSY, LH (V80477) (TOILET D)	0150	1
R	20	2486-2-1-2	. . LATCH ASSY, RH (V80477) (TOILET C)	0150	1
R	21	65-22029-25	. . PLATE, TOILET COMPARTMENT FOLDING DOOR HINGE	0150	2
R	22	AN565D1032H9	. . SCREW	0150	2
R	23	63-2056-2	. . PIN, TOILET FOLDING DOOR HINGE	0150	2
R	24	63-2131	. . SPRING, TOILET FOLDING DOOR COMPRESSION	0150	2
R	25	66-11014	. . SLEEVE, FOLDING DOOR HINGE	0150	2
R	25A	1052-1	. . ASHTRAY ASSY, (V25846) (TOILETS C AND D) (ADDED BY SB 3161)	0150	1
			-----*		
R	25B	SCREW	. . . SCREW, SELF TAPPING	0150	2
R	25C	5115-12	. . . RING, RETAINING (V0323B)	0150	1
R	25D	1052-15	. . . PLATE, BACKING (V25846)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *707* Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
R 18	59	65-22030-5		
R		. DAM, TOILET FOLDING DOOR LIGHT (EXTRUSION NO. BAC1522-95-725 X 75.5 IN. LG) (OPTIONAL TO 65-22030-17 (EXTRUSION NO. BAC1522-95-725 X 75.5 IN. LG))	0150	1
R	60	65-22030-7		
R	61	65-22030-8		
R	61	65-22030-12		
R	62	65-22030-25		
R	62	65-22030-26		
R	62A	65-22030-24		
R	62B	65-22030-23		
R	63	65-22030-10		
R	64	65-22030-11		
R	65	65-22030-6		
R		. DIVIDER, FOLDING DOOR PARTITION	0150	2
R		ATTACHING PARTS		
R		. SCREW	0150	36
R	66	69-19086-1		
R	66	69-19086-2		
R	66A	NAS514P1032-12		
R	67	NAS561P3-10		
R	67A	69-19086-3		
R	68	69-19086-6		
R	69	65-22028-48F		
R	69A	65-22028-49E		
R	69B	65-22028-50E		
R		. PANEL DECORATIVE (ALTERED FROM BAC SPEC NO. 10-60199-316) (USED ON 65-22028-48E AND -48F)	0150	1
R		. PANEL DECORATIVE (ALTERED FROM BAC SPEC NO. 10-60782-351) (USED ON 65-22028-48F)	0150	1
R		ATTACHING PARTS		
R		. SCREW	0150	4
R	70	RL3328A89		
R	71	RNAB205A89TL		
R	72	65-22030-18		
R	72	65-22030-19		
R		. RING, LOCKING (V83324) (NOT USED ON TOILET K)	0150	4
R		. INSERT, (V83324) (NOT USED ON TOILET K)	0150	4
R		. STOP, TOILET FOLDING DOOR NYLON DOOR (TOILETS D, E AND K)	0150	1
R		. STOP, NYLON (TOILETS C, F, H AND J)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

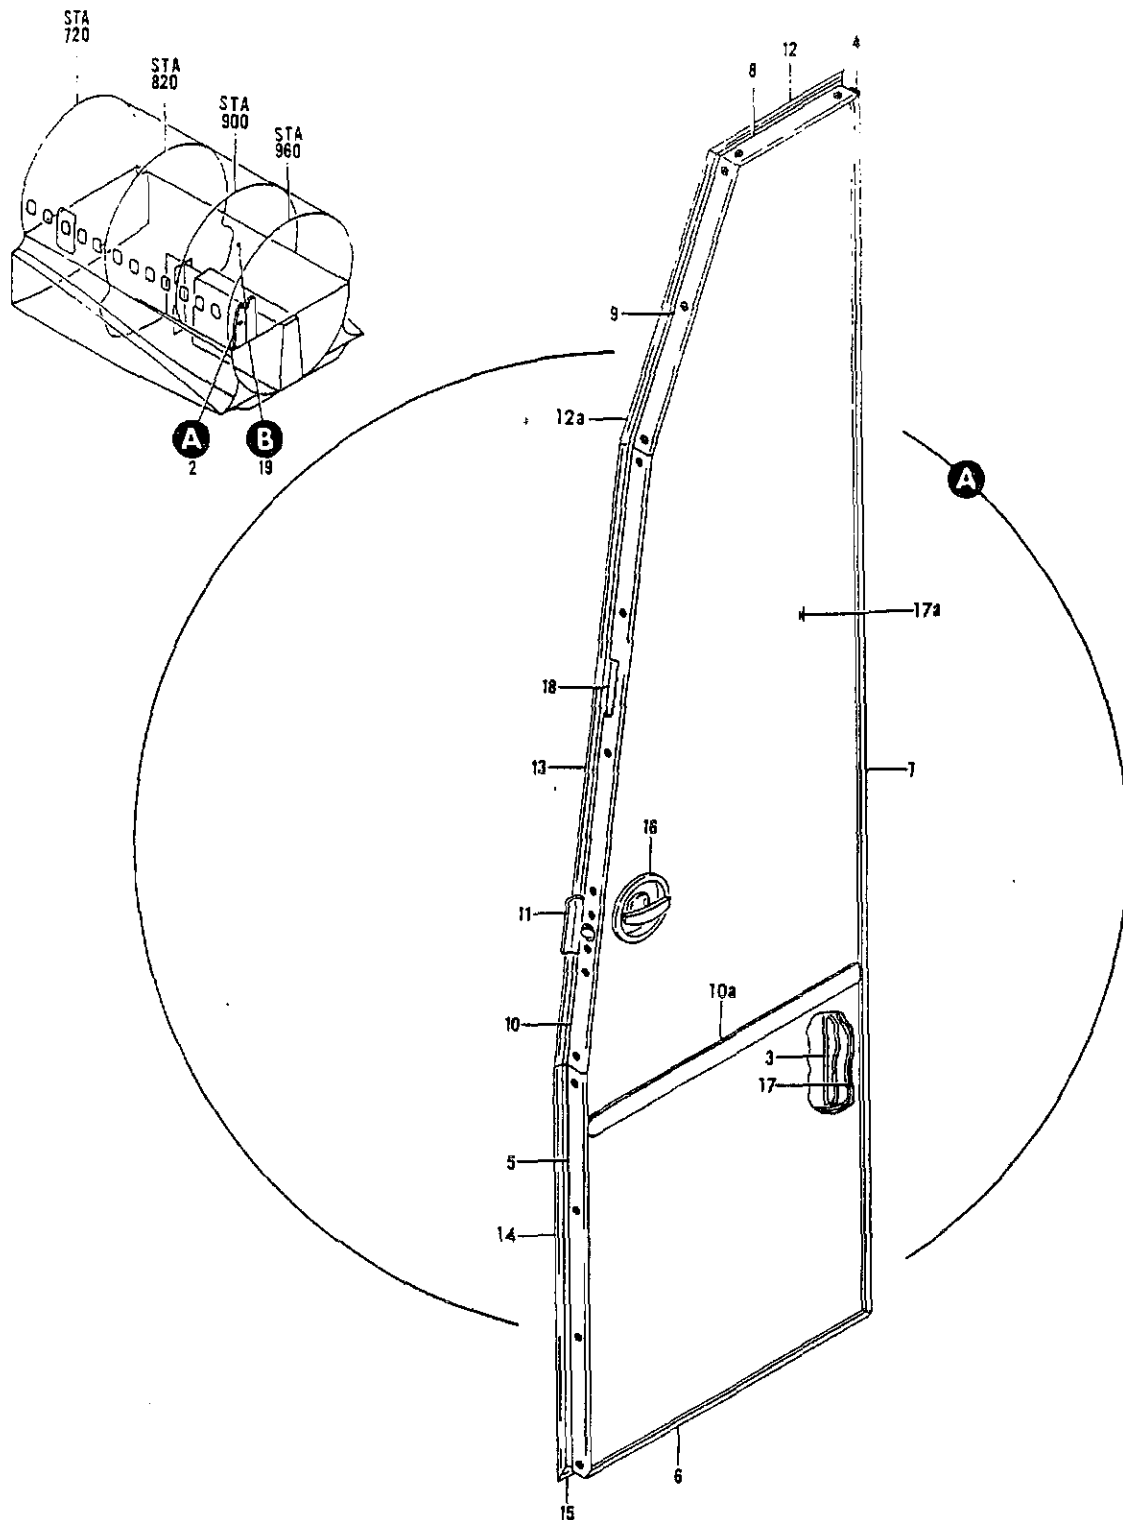


FIGURE 27A. DOOR ASSY, PASSENGER CARGO DIVIDER PARTITION (SHEET L)

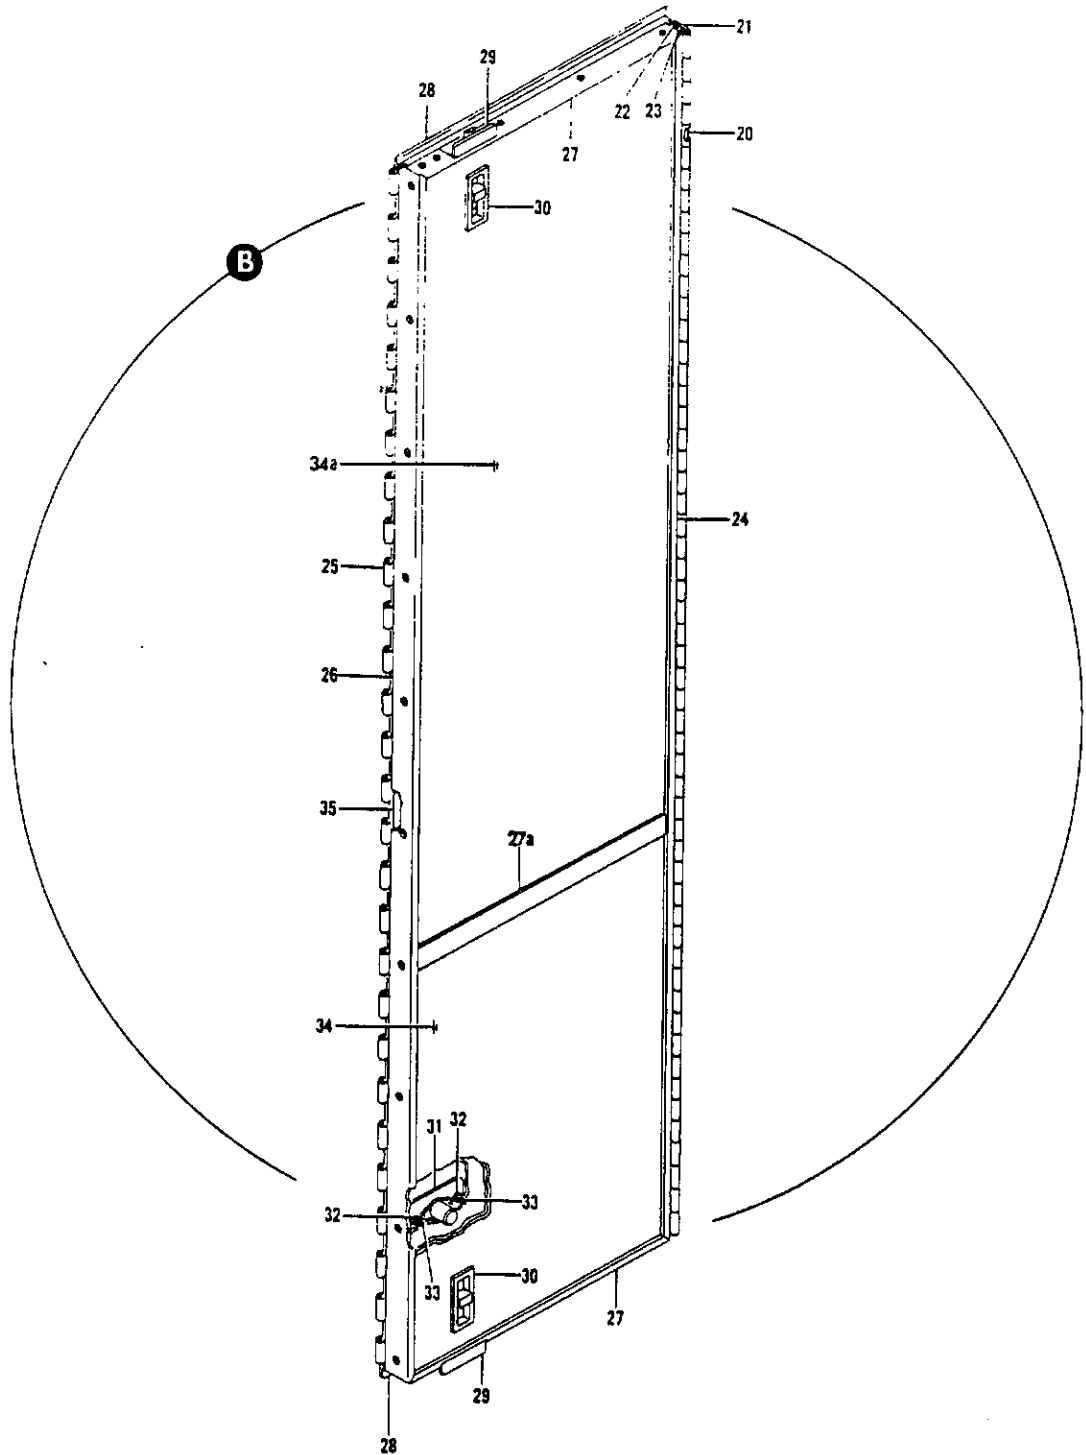


FIGURE 27A. DOOR ASSY, PASSENGER CARGO DIVIDER PARTITION (SHEET 2)

NOV 21/90

52-04-27A

DETAILED PARTS LIST
52-04-27A
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
27A	65-44408-486	DOOR ASSY, PASSENGER CARGO DIVIDER PARTITION (SEE . . . 25-17, FIG. 130C, ITEM 37)							0150	RF
1	MS20253-2-5577	PIN							0150	1
2	65-44408-508	DOOR ASSY							0150	1
3	MS20001PX6-5602	HINGE HALF							0150	1
	BACS12H10-10	ATTACHING PARTS SCREW							0150	10
4	65-44408-26	SEAL, PASSENGER CARGO DIVIDER PARTITION DOOR HINGE							0150	1
5	65-44408-21	TRIM, PASSENGER CARGO DIVIDER PARTITION DOOR EDGE							0150	1
6	65-44408-45	TRIM, PASSENGER CARGO DIVIDER PARTITION DOOR EDGE							0150	1
7	65-44408-25	TRIM, PASSENGER CARGO DIVIDER PARTITION DOOR EDGE							0150	1
8	65-44408-43	TRIM, PASSENGER CARGO DIVIDER PARTITION DOOR EDGE							0150	1
9	65-44408-23	TRIM, PASSENGER CARGO DIVIDER PARTITION DOOR EDGE							0150	1
	BACS12H6-10	ATTACHING PARTS SCREW							0150	23
10	65-44408-22	TRIM, PASSENGER CARGO DIVIDER PARTITION DOOR EDGE							0150	1
	BACS12H10-10	ATTACHING PARTS SCREW							0150	2
	BACS12H10-6	SCREW							0150	6
10A	69-46101-1	TRIM ASSY							0150	1
	NAS514P1032-12	ATTACHING PARTS SCREW							0150	3
11	66-22656-1	STOP, PASSENGER CARGO DIVIDER PARTITION DOOR							0150	1
12	65-44408-44	SEAL, PASSENGER CARGO DIVIDER PARTITION DOOR GAP (EXTRUSION NO. BAC1522-95-725 X 6.3 IN. LG)							0150	1
12A	65-44408-68	SEAL, GAP (EXTRUSION NO. BAC1522-98-725 X 13 IN. LG)							0150	1
13	65-44408-67	SEAL, GAP (EXTRUSION NO. BAC1522-98-725 X 26.8 IN. LG)							0150	1
14	65-44408-65	SEAL, GAP (EXTRUSION NO. BAC1522-98-725 X 18.4 IN. LG)							0150	1
15	65-44408-46	SEAL, PASSENGER CARGO DIVIDER PARTITION DOOR GAP (EXTRUSION NO. BAC1522-95-725 X 15.4 IN. LG)							0150	1
16	L100-08	LATCH ASSY, (V15438)							0150	1
17	65-44408-548	COVERING, DECORATIVE (ALTERED FROM BAC SPEC NO. 10-60128-280)							0150	1
17A	65-44408-538	COVERING, DECORATIVE (ALTERED FROM BAC SPEC NO. 10-60199-284)							0150	1
18	65-44408-58	FRAME ASSY, DOOR							0150	1
19	65-44408-498	DOOR ASSY							0150	1
20	MS20253-2-5577	PIN							0150	1
21	65-44408-28	HINGE HALF, (ALTERED FROM MS20001PY6-5602)							0150	1
22	65-44408-26	SEAL, PASSENGER CARGO DIVIDER PARTITION DOOR HINGE							0150	1
23	65-44408-27	HINGE HALF, (ALTERED FROM MS20001PX6-5602)							0150	1
	BACS12H10-10	ATTACHING PARTS SCREW							0150	10
24	65-44408-37	TRIM, PASSENGER CARGO DIVIDER PARTITION DOOR EDGE							0150	1
25	MS20001PY6-5602	HINGE HALF							0150	1
	BACS12H10-10	ATTACHING PARTS SCREW							0150	10
26	65-44408-25	TRIM, PASSENGER CARGO DIVIDER PARTITION DOOR EDGE							0150	1
27	65-44408-40	TRIM, PASSENGER CARGO DIVIDER PARTITION DOOR EDGE							0150	2
	BACS12H6-10	ATTACHING PARTS SCREW							0150	20
27A	69-46101-2	TRIM ASSY							0150	1
	NAS514P1032-12	ATTACHING PARTS SCREW							0150	3
28	65-44408-41	SEAL, PASSENGER CARGO DIVIDER PARTITION DOOR GAP (EXTRUSION NO. BAC1522-95-725 X 14.3 IN. LG)							0150	2
29	66-22656-1	STOP, PASSENGER CARGO DIVIDER PARTITION DOOR							0150	2
	BACS12H10-10	ATTACHING PARTS SCREW							0150	4
30	10C61-05	LATCH, SLIDE (V15438)							0150	2
31	69-35229-1	RECEPTACLE ASSY, CARGO PASSENGER PARTITION							0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
R	27A	NAS514P1032-8	ATTACHING PARTS								
			. . SCREW							0150	2
R	34	65-44408-518	. . COVERING, DECORATIVE (ALTERED FROM BAC SPEC NO. . .							0150	1
R			10-60128-280)								
R	34A	65-44408-528	. . COVERING, DECORATIVE (ALTERED FROM BAC SPEC NO. . .							0150	1
R			10-60199-286)								
	35	65-44408-57	. . FRAME							0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

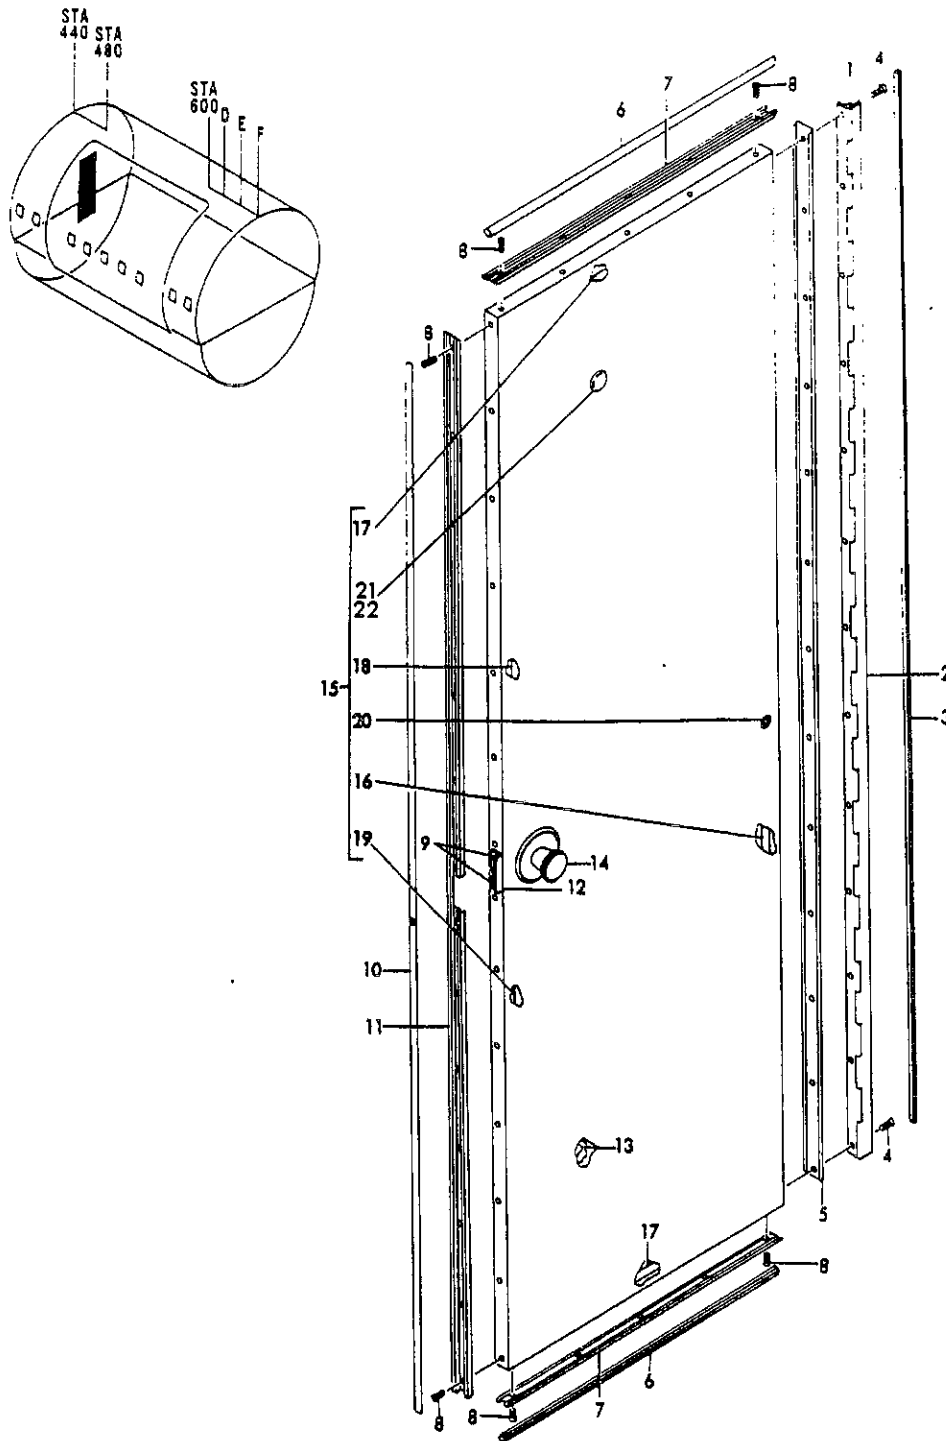



FIGURE 31. DOOR ASSY, STATION 465 CREW REST PARTITION PASSENGER



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
31	65-59420-18A	DOOR ASSY, STATION 465 CREW REST PARTITION PASSENGER. . . (SEE 25-17, FIG. 72D, ITEM 87)	0102	RF
	65-59420-22A	DOOR ASSY, STATION 465 CREW REST PARTITION PASSENGER. . (SEE 25-17, FIG. 72D, ITEM 87)	0350	RF
R	1	MS2025-3P2-71-11		
R	2	65-59420-16	0150	1
R	3	65-59420-12	0150	1
R	4	8AC512H10-10	0150	13
R	5	65-59420-9	0150	1
R	6	65-59420-15	0150	2
R	7	65-59420-10	0150	2
R	8	8AC512H6-10	0150	24
R	9	MS20426A3N	0150	2
R	10	65-59420-14	0150	1
R	11	65-59420-11	0150	1
R	12	69-43181-1	0150	1
R	13	65-59420-3A	0150	1
R	14	L107A		
R	15	65-59420-2	0150	1
R	16	65-59420-4	0150	1
R	17	65-59420-7	0150	2
R	18	65-59420-6	0150	1
R	19	65-59420-5	0150	1
R	20	BACN10CA10	0150	1
R	21	SCSD44	0350	1
R	22	SCSD43	0350	1
		DOOR ASSY, STATION 465 CREW REST PARTITION PASSENGER. . (SEE 25-17, FIG. 72D, ITEM 87)		
		. PIN, HINGE.	0150	1
		. HINGE.	0150	1
		. SEAL, HINGE.	0150	1
		. SCREW.	0150	13
		. TRIM, EDGE.	0150	1
		. SEAL, (EXTRUSION NO. 8AC1522-95-725 X 22.1 IN. LG). . .	0150	2
		. TRIM, EDGE.	0150	2
		. SCREW.	0150	24
		. RIVET.	0150	2
		. SEAL, (EXTRUSION NO. 8AC1522-95-725 X 72.1 IN. LG). . .	0150	1
		. TRIM, EDGE.	0150	1
		. STOP, DOOR.	0150	1
		. FACING, DECORATIVE (ALTERED FROM BAC SPEC NO. 10-60782-351)	0150	1
		. LATCH ASSY, (V15438).	0150	1
		. FRAME ASSY.	0150	1
		. . STIFFENER, EDGE.	0150	1
		. . STIFFENER, EDGE.	0150	2
		. . STIFFENER, EDGE.	0150	1
		. . STIFFENER, EDGE.	0150	1
		. . STIFFENER, EDGE.	0150	1
		. . INSERT.	0150	1
		. . SLEEVE, LOCK (V01038).	0350	1
		. . BUMPER, TACK (V01038).	0350	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

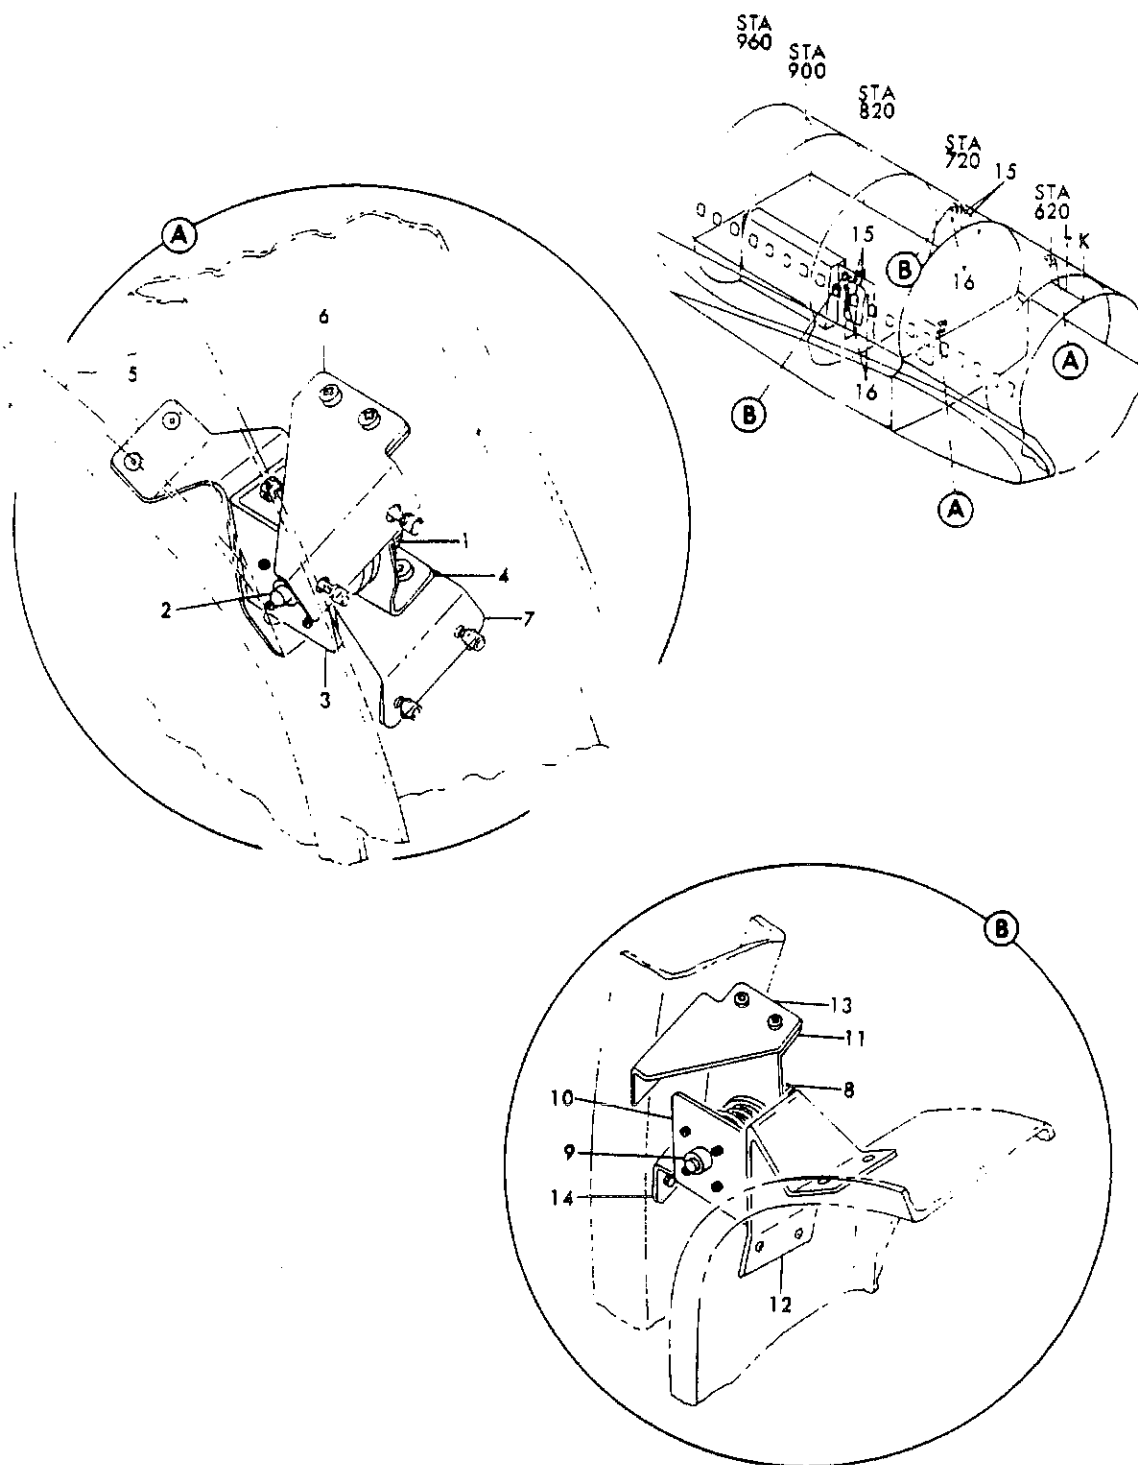

CONNECTOR INSTL, STATION 690 ESCAPE HATCH HEATER BLANKET
FIGURE 38. CONNECTOR INSTL, STATION 770 ESCAPE HATCH HEATER BLANKET



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
38		CONNECTOR INSTL, STATION 690 ESCAPE HATCH HEATER. . . . BLANKET		
	65-60988-1	CONNECTOR INSTL, STATION 770 ESCAPE HATCH HEATER. . . . BLANKET		RF
	65-60988-2	CONNECTOR INSTL, STATION 690 ESCAPE HATCH HEATER. . . . BLANKET (LH) (SEE 24-3, FIG. 6A, ITEM 107, 24-3, FIG. 6B, ITEM 110, 24-3, FIG. 6C, ITEM 89, 24-3, FIG. 6D, ITEM 51, 24-3, FIG. 6E, ITEM 60 AND 24-3, FIG. 6F, ITEM 42C)		RF
	48-7164-1S	CONNECTOR INSTL, STATION 770 ESCAPE HATCH HEATER. . . . BLANKET (RH) (SEE 24-3, FIG. 6A, ITEM 108, 24-3, FIG. 6B, ITEM 111, 24-3, FIG. 6C, ITEM 90, 24-3, FIG. 6D, ITEM 52, 24-3, FIG. 6E, ITEM 61 AND 24-3, FIG. 6F, ITEM 42D)		
1	48-7164-2P	CONNECTOR ASSY, RECEPTACLE (V02660)		1
2	69-48696-1	CONNECTOR ASSY, PLUG (V02660)		1
3		PLATE, PLUG MOUNTING.		1
	BACS12CB3-8	ATTACHING PARTS		
		SCREW		2
4	69-47922-21	SUPPORT, PLUG (LH ONLY)		1
4	69-47922-22	SUPPORT, PLUG (RH ONLY)		1
5	69-47922-11	BRACKET, RECEPTACLE (LH ONLY)	0150	1
5	69-47922-25	BRACKET, SUPPORT (LH ONLY)	5199	1
5	69-47922-12	BRACKET, RECEPTACLE (RH ONLY)	0150	1
5	69-47922-26	BRACKET, SUPPORT (RH ONLY)	5199	1
	MS204-2606	ATTACHING PARTS		
		RIVET		4
6	69-47922-19	ANGLE, (LH ONLY)		1
6	69-47922-20	ANGLE, (RH ONLY)		1
	NAS603-7P	ATTACHING PARTS		
	NAS679A3W	SCREW		4
		NUT		4
7	69-47922-24	ANGLE, (LH ONLY)	5151	1
7	69-47922-30	ANGLE, (LH ONLY)	5299	1
7	69-47922-23	ANGLE, (RH ONLY)	5151	1
7	69-47922-29	ANGLE, (RH ONLY)	5299	1
	NAS1103-3	ATTACHING PARTS		
		BOLT		2
	65-60988-3	CONNECTOR INSTL, STATION 770 ESCAPE HATCH HEATER. . . . BLANKET (LH) (SEE 24-3, FIG. 6A, ITEM 109, 24-3, FIG. 6B, ITEM 112, 24-3, FIG. 6C, ITEM 91, 24-3, FIG. 6D, ITEM 53, 24-3, FIG. 6E, ITEM 62 AND 24-3, FIG. 6F, ITEM 42E)		RF
	65-60988-4	CONNECTOR INSTL, STATION 770 ESCAPE HATCH HEATER. . . . BLANKET (RH) (SEE 24-3, FIG. 6A, ITEM 110, 24-3, FIG. 6B, ITEM 113, 24-3, FIG. 6C, ITEM 92, 24-3, FIG. 6D, ITEM 54, 24-3, FIG. 6E, ITEM 63 AND 24-3, FIG. 6F, ITEM 42F)		RF
8	48-7164-1S	CONNECTOR ASSY, RECEPTACLE (V02660)		1
9	48-7164-2P	CONNECTOR ASSY, PLUG (V02660)		1
10	69-48696-1	PLATE, PLUG MOUNTING.		1
	BACS12CB3-8	ATTACHING PARTS		
		SCREW		2
11	69-47922-22	SUPPORT, PLUG (LH ONLY)		1
11	69-47922-21	SUPPORT, PLUG (RH ONLY)		1
12	69-47922-12	BRACKET, RECEPTACLE (LH ONLY)	0150	1
12	69-47922-25	BRACKET, SUPPORT (LH ONLY)	5199	1
12	69-47922-11	BRACKET, RECEPTACLE (RH ONLY)	0150	1
12	69-47922-26	BRACKET, SUPPORT (RH ONLY)	5199	1
	MS204-2606	ATTACHING PARTS		
		RIVET		4
13	69-47922-20	ANGLE, (LH ONLY)		1
13	69-47922-19	ANGLE, (RH ONLY)		1
	NAS603-7P	ATTACHING PARTS		
	NAS679A3W	SCREW		4
		NUT		4
14	69-47922-23	ANGLE, (LH ONLY)	5151	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING **707** *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R	38	14	69-47922-29	. . ANGLE, (LH ONLY)	5299	1
		14	69-47922-24	. . ANGLE, (RH ONLY)	5151	1
		14	69-47922-30	. . ANGLE, (RH ONLY)	5299	1
				ATTACHING PARTS		
			NAS1103-3	. . BOLT.		2
				-----*		
	15		BAC5117	. . STUD.		2
	16		BACG20C8	. . GROMMET		2
MISSING ITEM NUMBERS ARE NOT APPLICABLE						

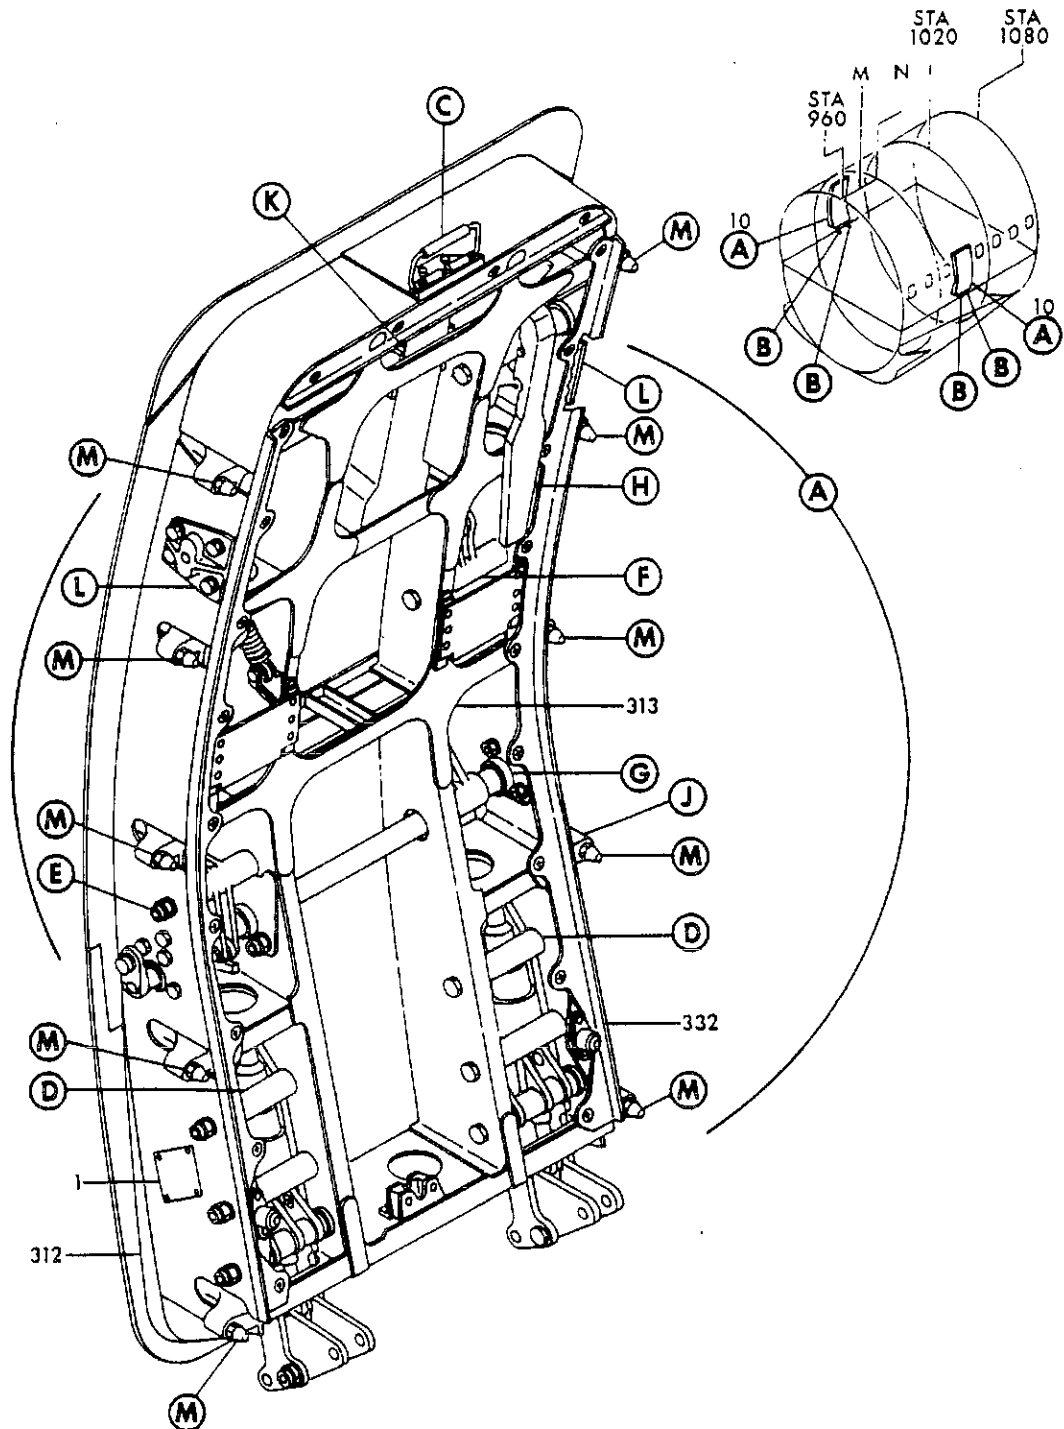


FIGURE 44. DOOR INSTL, STATION 990.45 OUTWARD OPENING (SHEET 1)

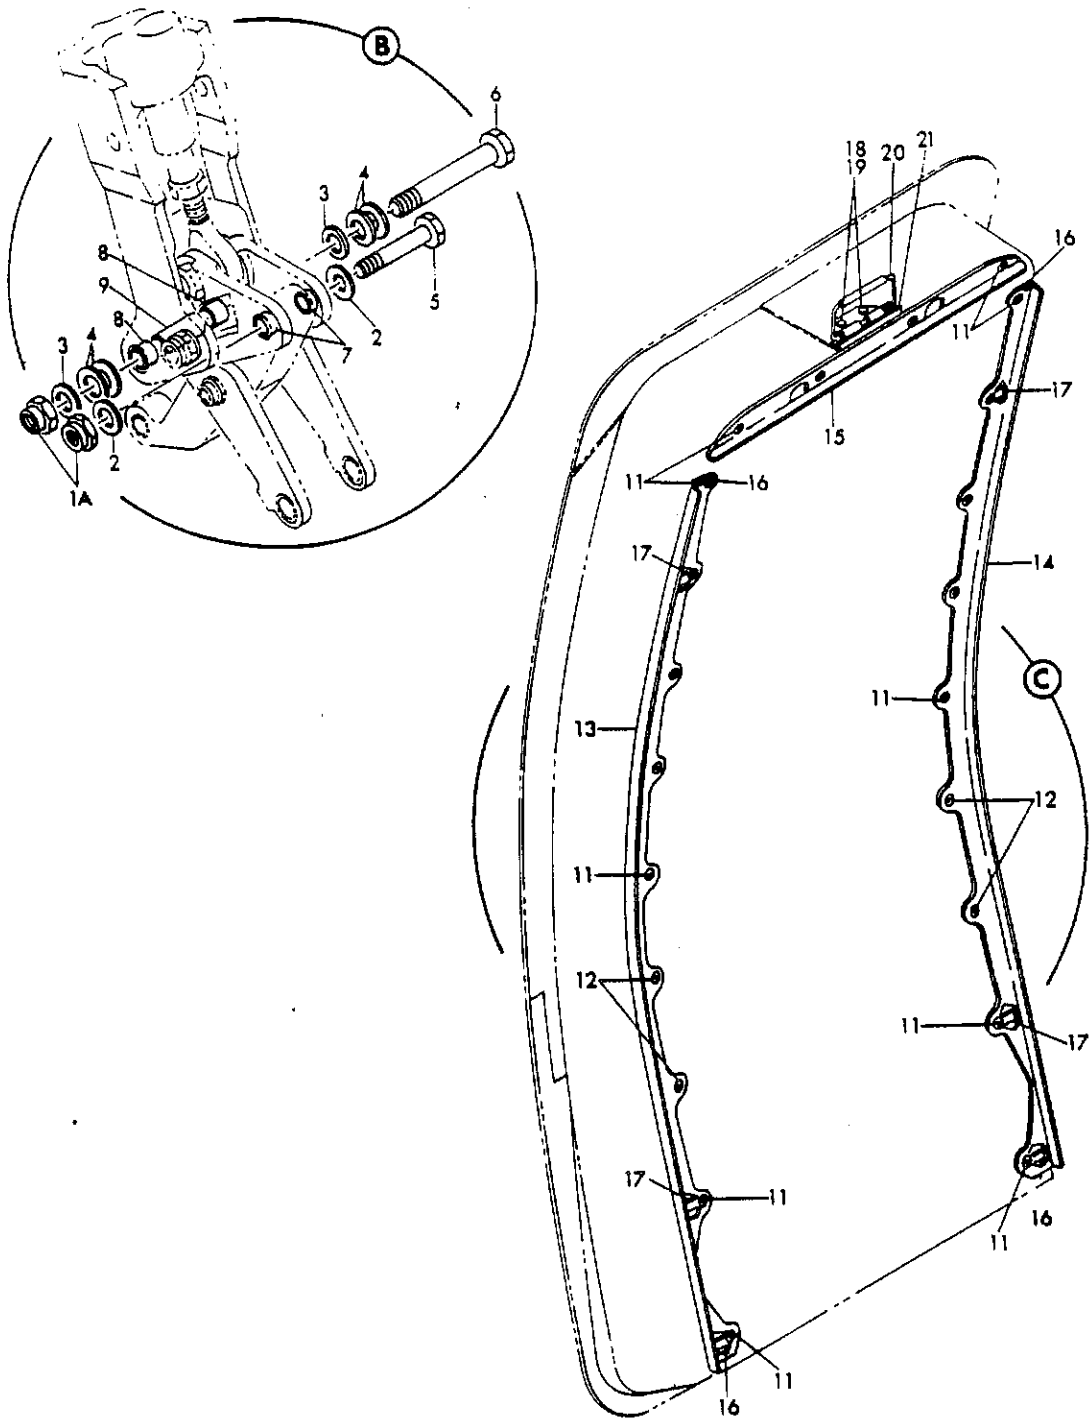


FIGURE 44. DOOR INSTL, STATION 990.45 OUTWARD OPENING (SHEET 2)

NOV 21/90

52-04-44

DETAILED PARTS LIST
52-04-44
PAGE 1

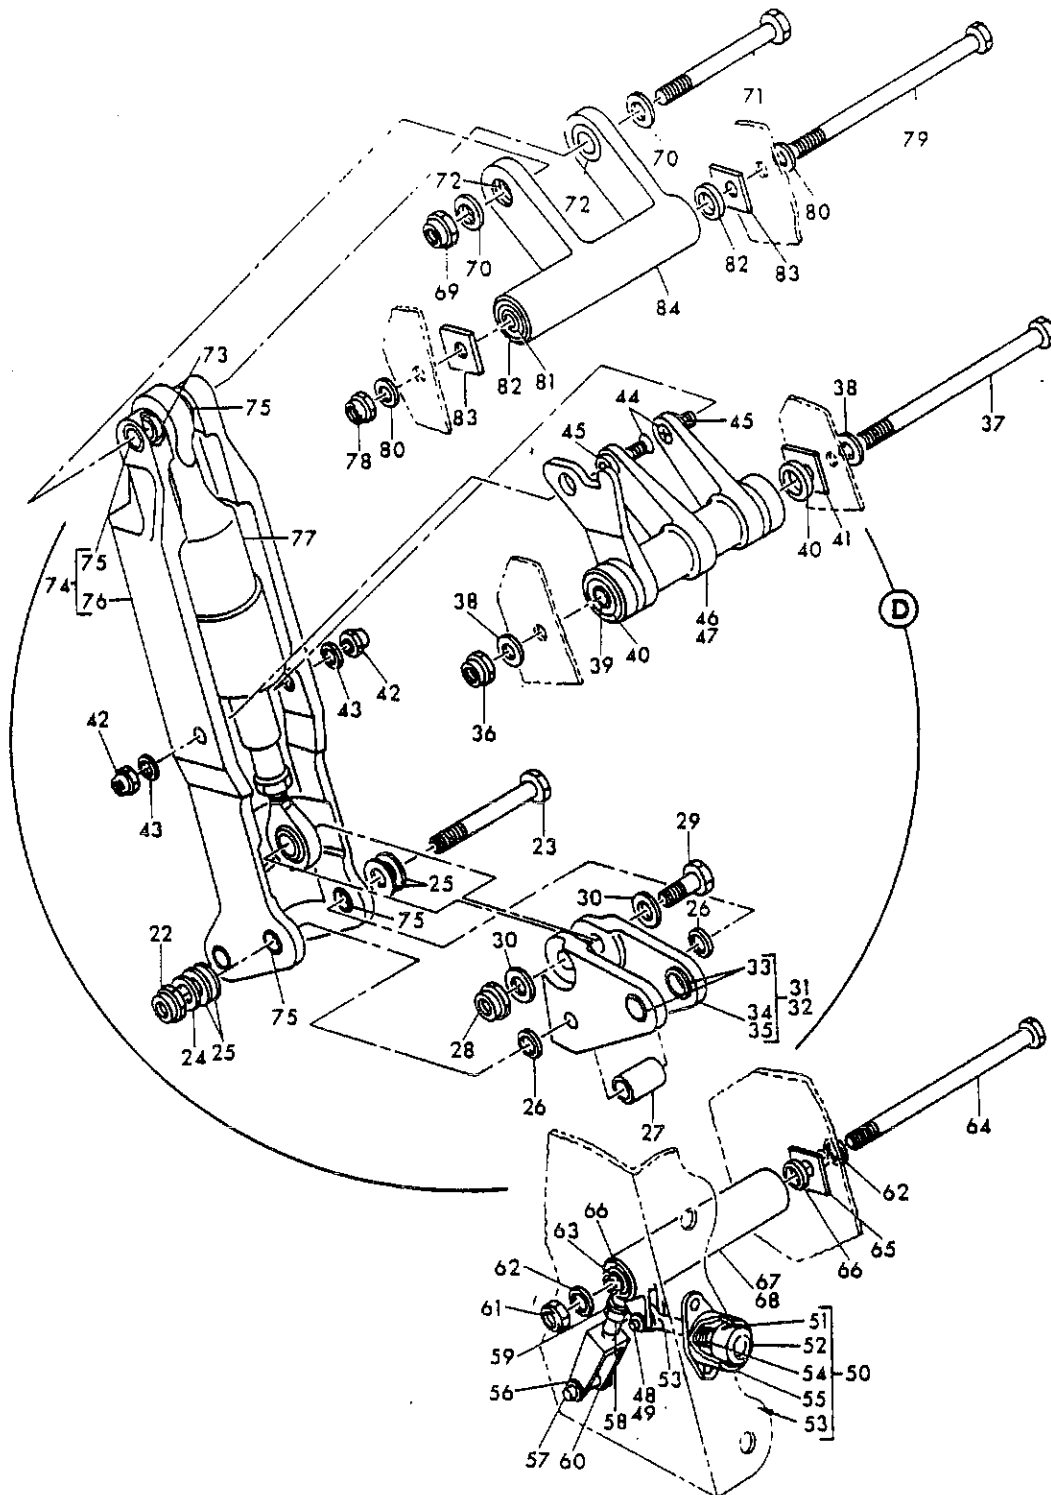


FIGURE 44. DOOR INSTL. STATION 990.45 OUTWARD OPENING (SHEET 3)

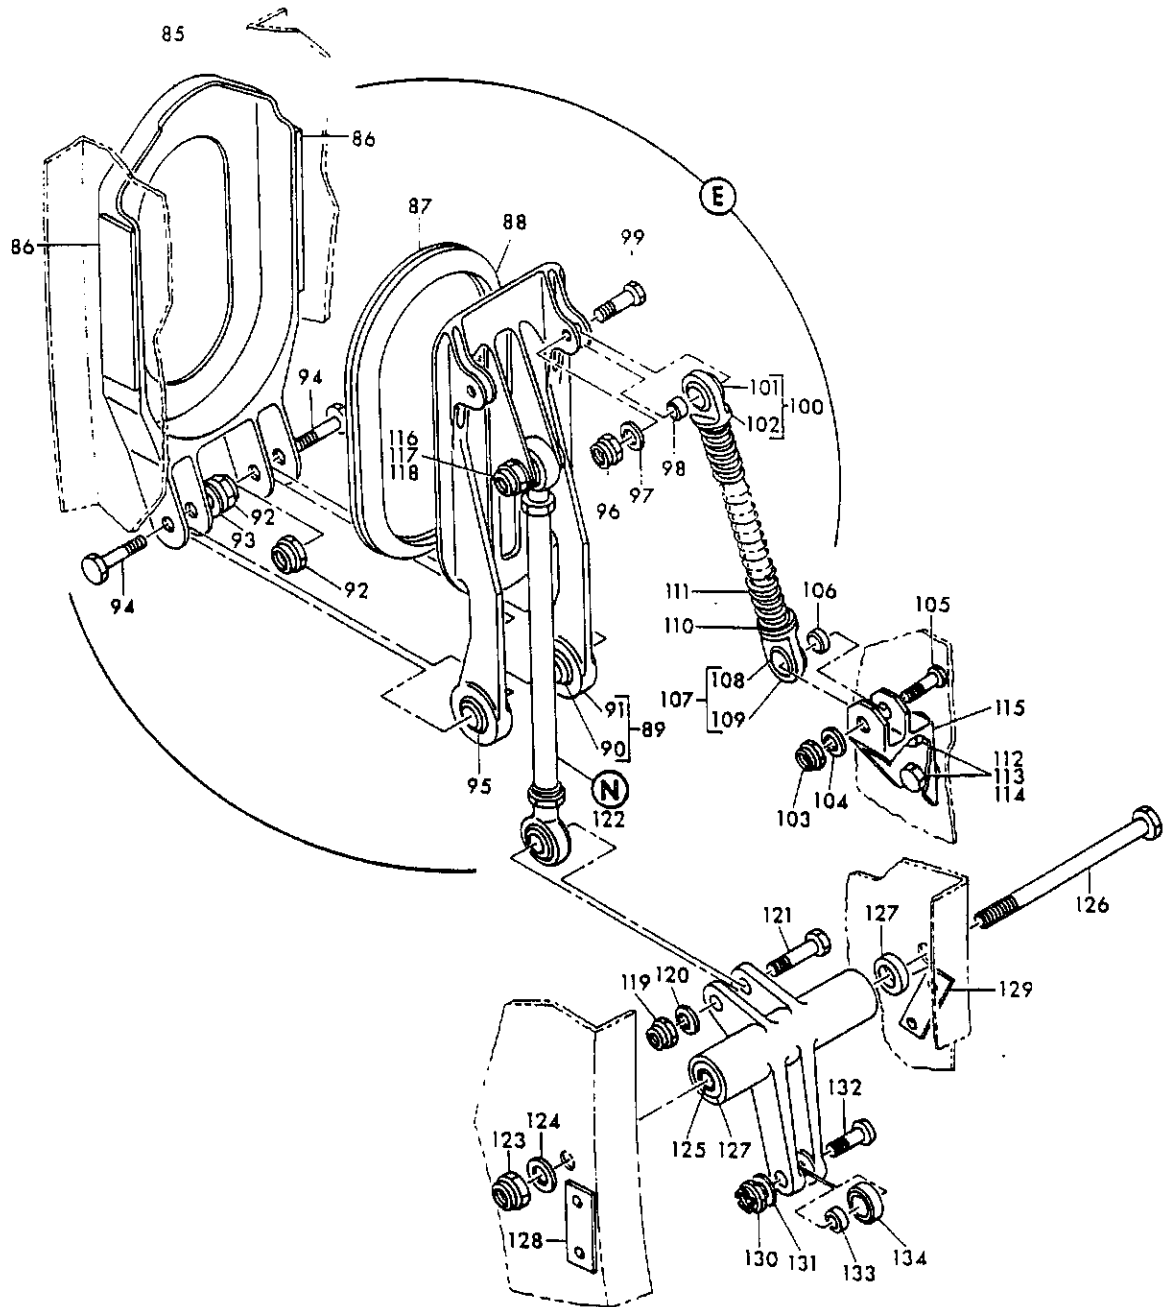


FIGURE 44. DOOR INSTL, STATION 990.45 OUTWARD OPENING (SHEET 4)

NOV 21/90

52-04-44

DETAILED PARTS LIST
52-04-44
PAGE 3

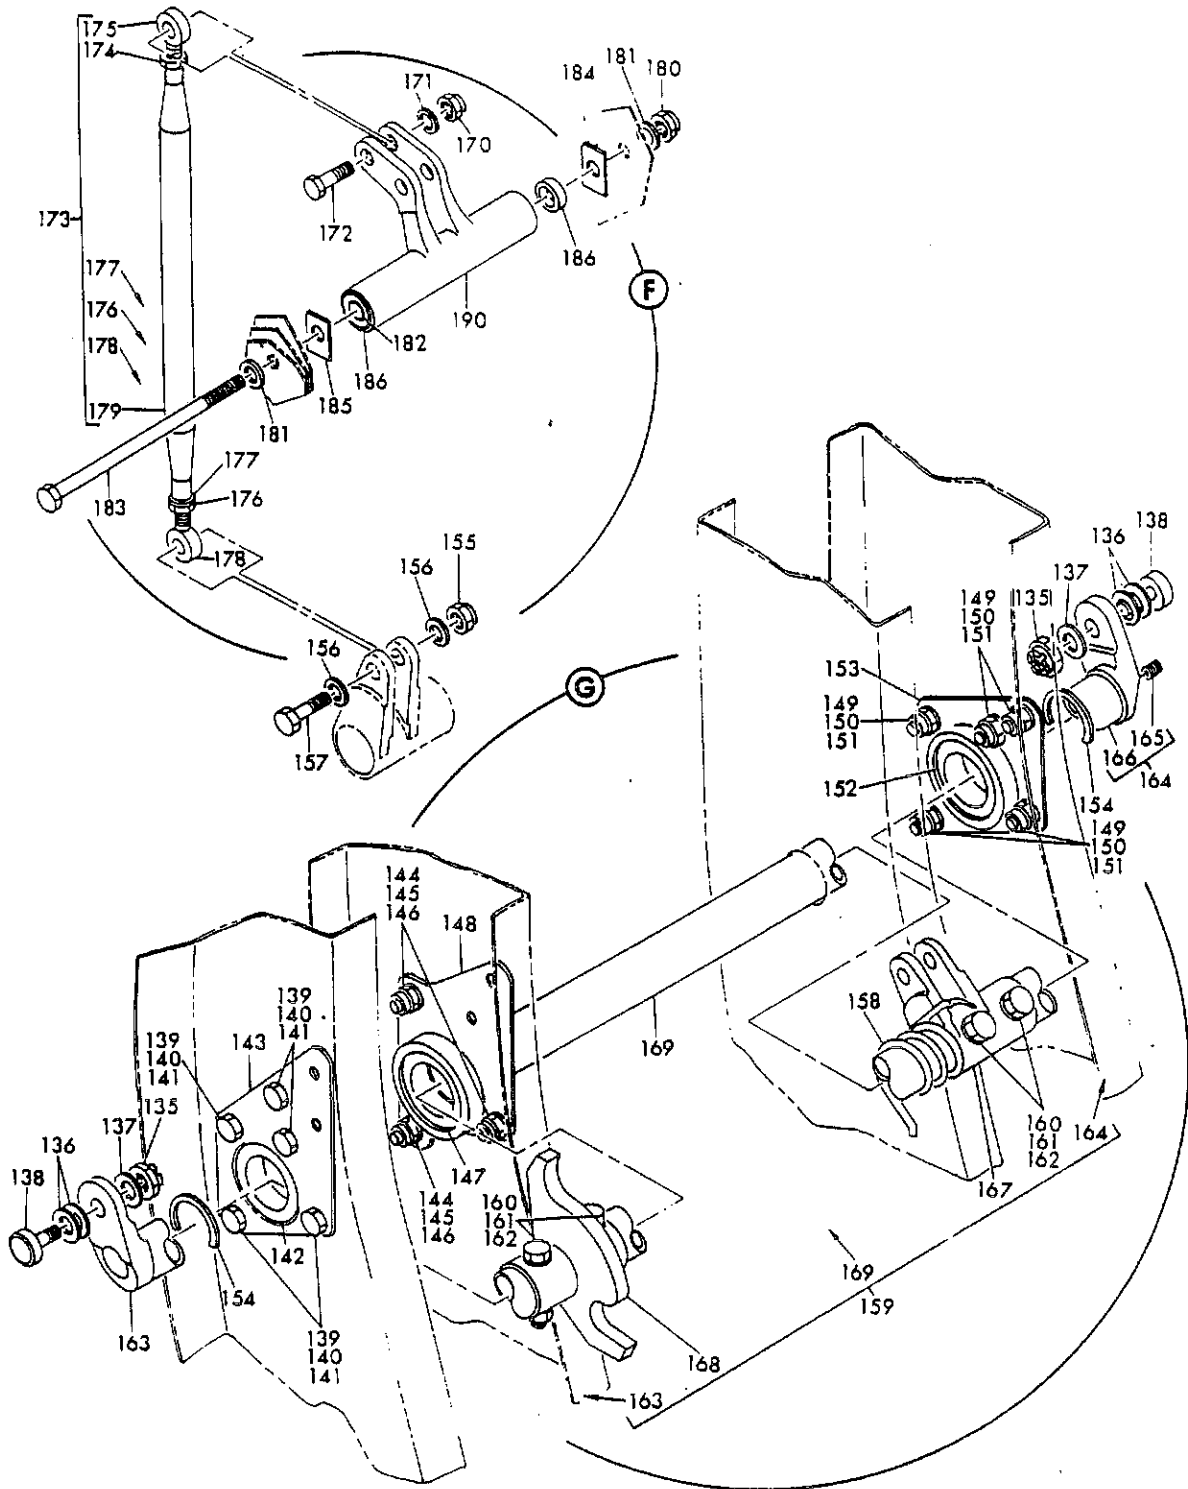


FIGURE 44. DOOR INSTL, STATION 990.45 OUTWARD OPENING (SHEET 5)

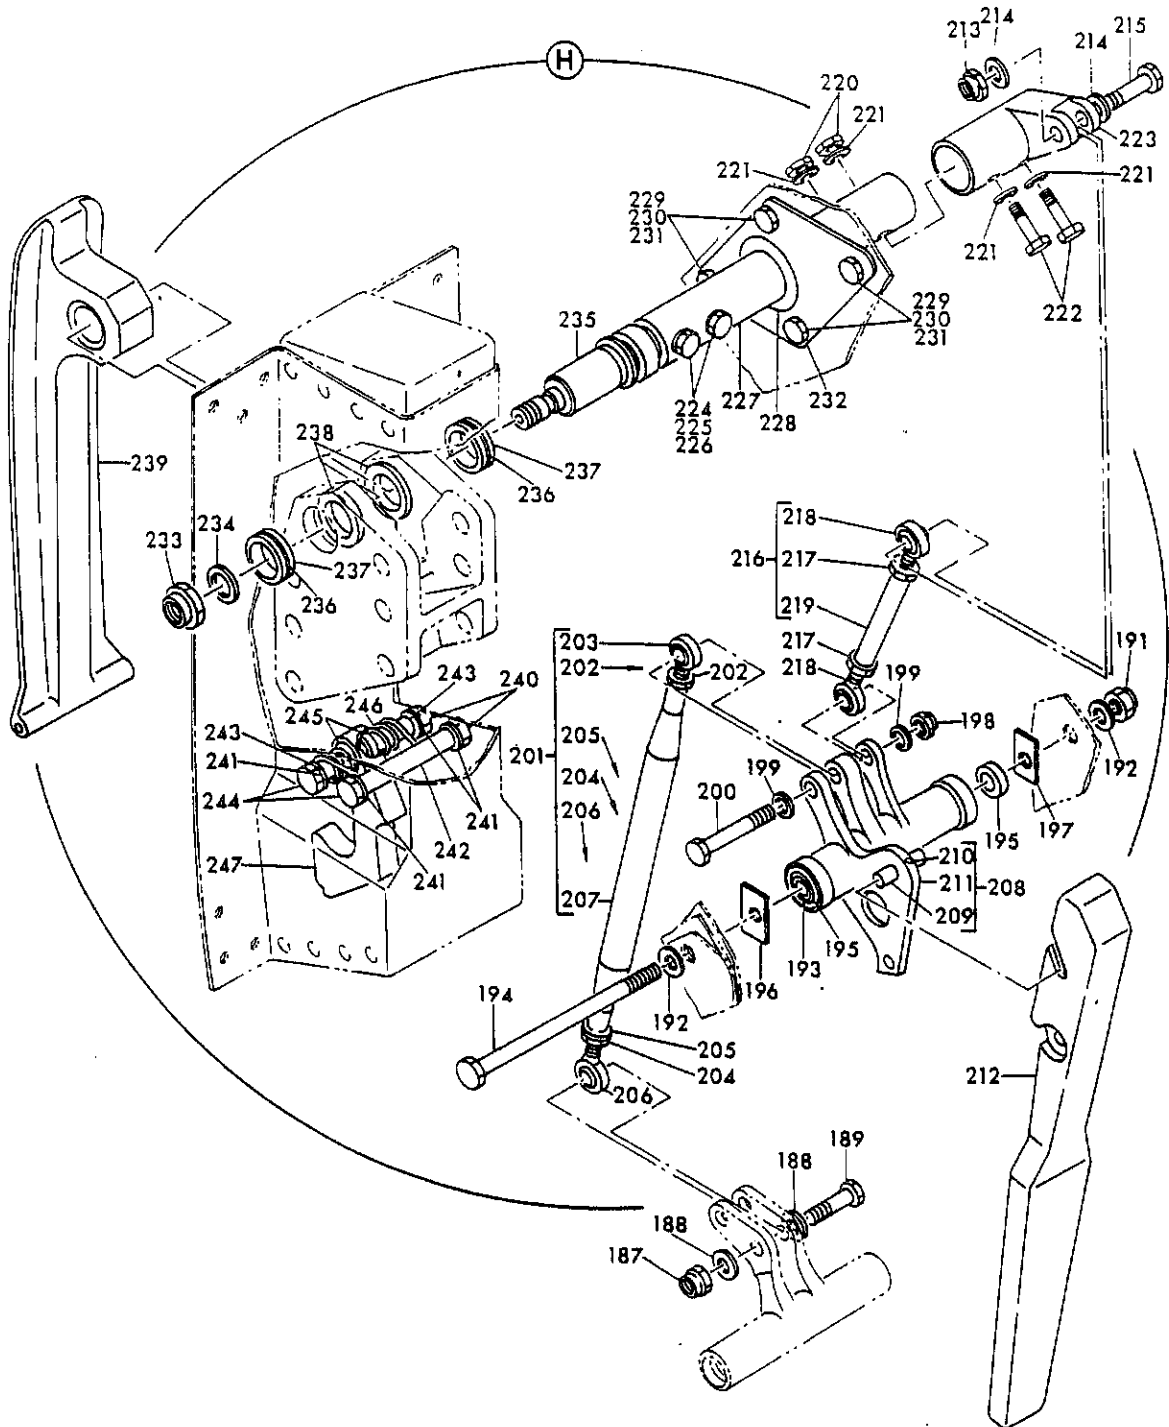


FIGURE 44. DOOR INSTL, STATION 990.45 OUTWARD OPENING (SHEET 6)

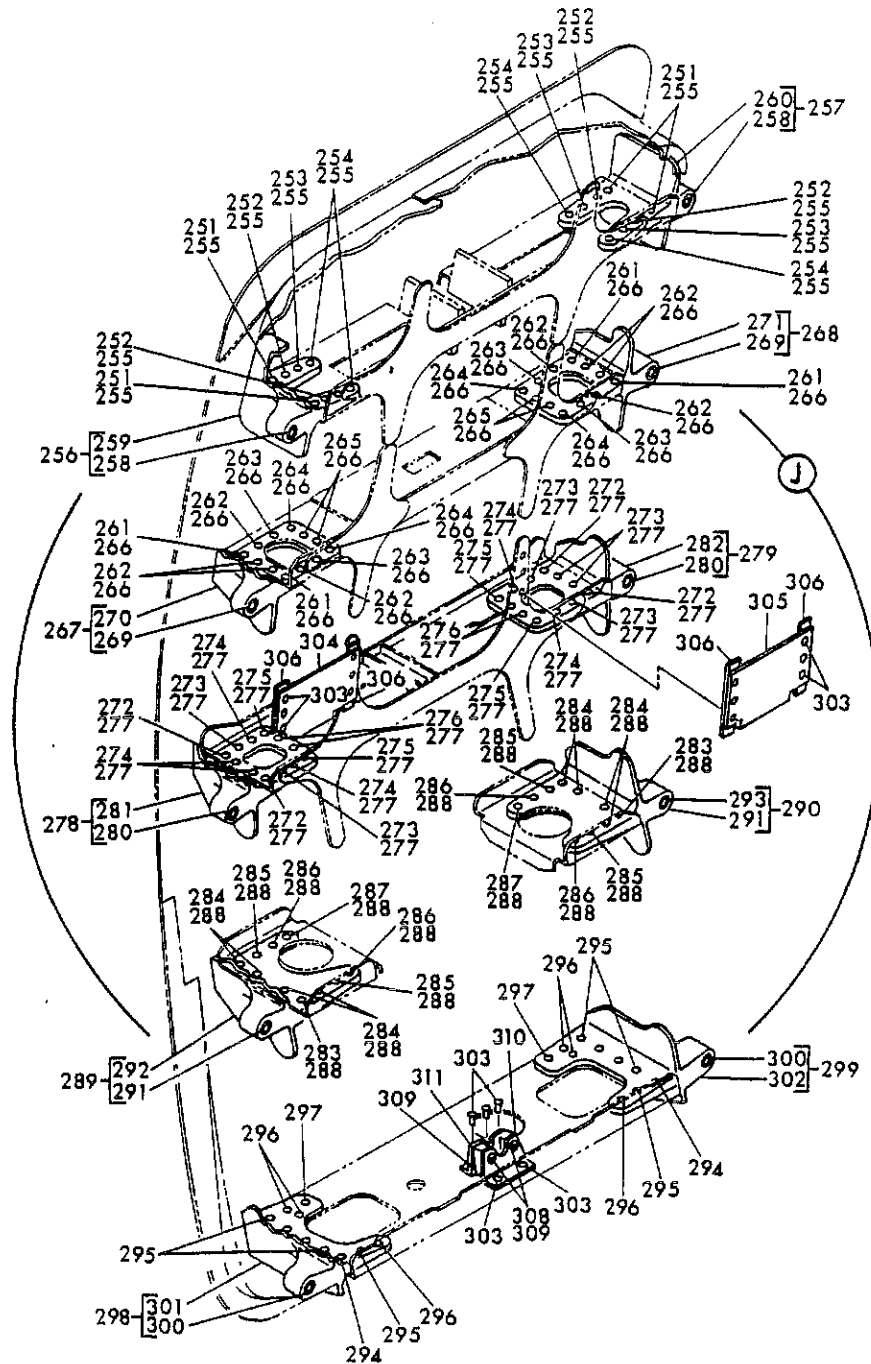


FIGURE 44. DOOR INSTL, STATION 990.45 OUTWARD OPENING (SHEET 7)

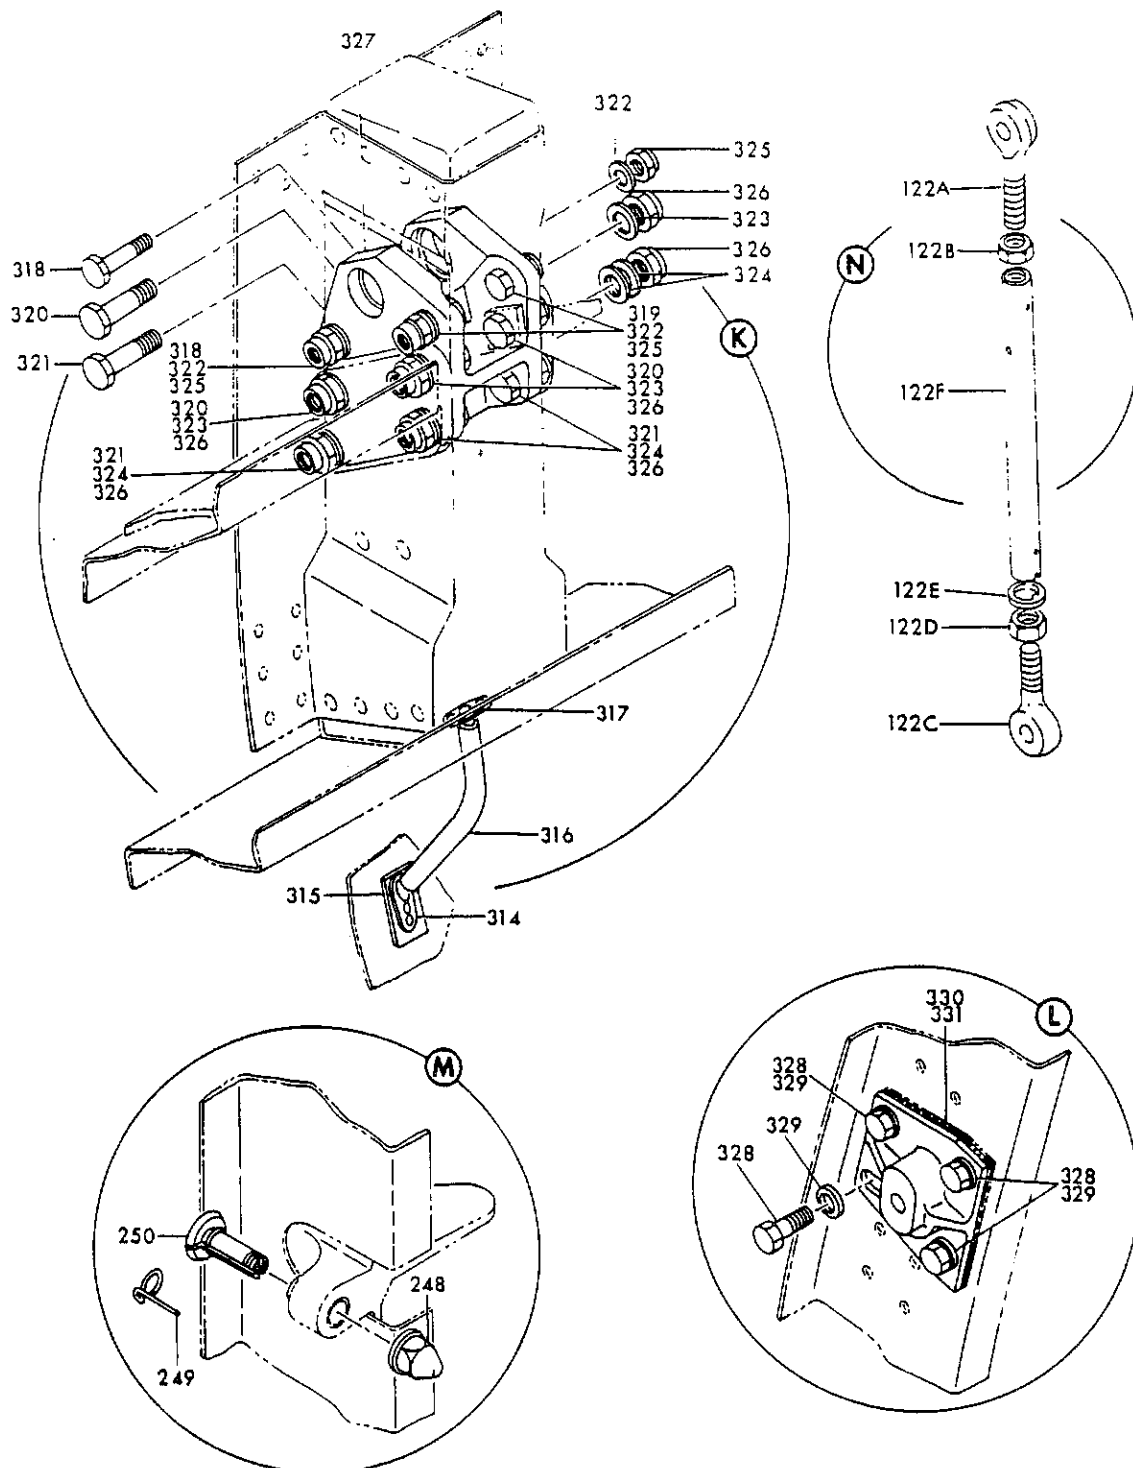


FIGURE 44. DOOR INSTL. STATION 990.45 OUTWARD OPENING (SHEET 8)

NOV 21/90

52-04-44

DETAILED PARTS LIST
52-04-44
PAGE 7



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF	UNITS
				FROM TO	PER ASSY
R R R R	44	65-72970-1	DOOR INSTL, STATION, STATION 990.45 OUTWARD OPENING . . (SEE 53-1, FIG. 3, ITEM 31 AND 53-2, FIG. 3, ITEM 66)	0150 5299	RF
	1	65-72970-1 MS27253-1	DOOR INSTL, STATION, STATION 990.45 OUTWARD OPENING . . . PLATE, IDENTIFICATION ATTACHING PARTS . RIVET	0151	1 1 4
		BACR15BB3D	-----*		
	1A	BACN10JC5	. NUT		8
	2	AN960-516L	. WASHER.		8
	3	AN960-516	. WASHER.		8
	4	AN960PD816	. WASHER.		16
	5	BACB30NF5-22	. BOLT.		4
	6	BACB30NF5-36	. BOLT.		4
	7	NAS74A5E007P	. BUSHING		8
	8	NAS74A5E008P	. BUSHING		8
	9	NAS74A5E103P	. BUSHING		4
	10	65-72970-2	. DOOR ASSY		2
		65-73977-1	. . . SUPPORT INSTL, EMERGENCY EXIT LINING.		1
	11	NAS514P1032-10	. . . SCREW		18
	12	NAS514P1032-16	. . . SCREW		4
	13	65-73977-21	. . . SUPPORT ASSY. (OPTIONAL 65-73977-17)		1
	13	65-73977-17	. . . SUPPORT ASSY. (OPTIONAL TO 65-73977-21)		1
	13	65-73977-19	 SUPPORT, (USED ON 65-73977-17).		1
	13	65-73977-23	 SUPPORT, (USED ON 65-73977-21).		1
	14	65-73977-22	 SUPPORT ASSY. (OPTIONAL 65-73977-18)		1
	14	65-73977-18	 SUPPORT ASSY. (OPTIONAL TO 65-73977-22)		1
	14	65-73977-20	 SUPPORT, (USED ON 65-73977-18).		1
	14	65-73977-24	 SUPPORT, (USED ON 65-73977-22).		1
	15	65-73977-15	 SUPPORT ASSY, UPPER		1
	15	65-73977-16	 SUPPORT		1
	16	65-73977-14	. . . SPACER.		4
	17	65-73977-13	. . . SPACER.		4
	18	BACB30NE3-6	. . . BOLT.		2
	19	AN960PD10L	. . . WASHER.		2
	20	69-54444-2	. . . CATCH ASSY, UPPER TRIM.		1
	21	69-58276-1	. . . SUPPORT, STOP		1
		65-72971-1	. . . MECHANISM INSTL, EMERGENCY EXIT		1
	22	BACN10JC5	. . . NUT		2
	23	BACB30NF5-36	. . . BOLT.		2
	24	AN960-516	. . . WASHER.		2
	25	AN960PD816	. . . WASHER.		8
	26	NAS74A5E008P	. . . BUSHING		4
	27	NAS74A5E014P	. . . BUSHING		2
	28	BACN10JC6	. . . NUT		2
	29	BACB30NF6-14	. . . BOLT.		2
	30	AN960PD616L	. . . WASHER.		4
	31	69-49929-1	. . . LINK ASSY, SNUBBER.		2
	32	69-49929-2	. . . LINK ASSY, SNUBBER.		2
	33	NAS77A8-27P	. . . BUSHING		1
	34	69-49929-3	 LINK, (USED ON 69-49929-1).		1
	35	69-49929-4	 LINK, (USED ON 69-49929-2).		1
	36	BACN10JC5	. . . NUT		2
	37	BACB30NE5-76	. . . BOLT.		2
	38	AN960PD516L	. . . WASHER.		4
	39	NAS43D05-241	. . . SPACER.		2
	40	BACB10A683	. . . BEARING		4
	41	65-72971-2	. . . SHIM. ATTACHING PARTS		4
		MS20426D3	. . . RIVET		8
			-----*		
	42	BACN10JC4	. . . NUT		4
	43	AN960PD416L	. . . WASHER.		4
	44	BACB30LU4-11	. . . BOLT.		4
	45	BACB10A661	. . . BEARING		4
	46	69-49946-2	. . . IDLER, SNUBBER SUPPORT LOWER.		1
	47	69-49946-1	. . . IDLER, SNUBBER SUPPORT LOWER.		1
	48	MS20392-2C13	. . . PIN		2
	49	AN96010L	. . . WASHER.		2
	50	69-58167-1	. . . RELEASE ASSY.		2

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
44	MS2047006		ATTACHING PARTS RIVET		4
51	MS16562-7		PIN		1
52	69-52659-1		BUTTON		1
53	69-53142-1		PIN		1
54	MS24585-1228		SPRING		1
55	69-58168-1		HOUSING		1
56	AN960PD416L		WASHER		2
57	MS20392-3C21		PIN		2
58	NAS509-6		NUT		2
59	NAS513-6		WASHER		2
60	69-49953-1		SCREW, ADJUSTING		2
61	BACN10JC4		NUT		2
62	AN960PD416L		WASHER		4
63	NAS43DD4-243		SPACER		2
64	BACB30NF4-76		BOLT		2
65	65-72971-2		SHIM		2
	MS2042603		ATTACHING PARTS RIVET		4
66	BACB10A661		BEARING		4
67	69-52657-2		PAWL, LATCHING		1
68	69-52657-1		PAWL, LATCHING		1
69	BACN10JC6		NUT		2
70	AN960PD616		WASHER		4
71	BACB30NE6-38		BOLT		2
72	BACB10A543		BEARING		4
73	NAS74A6-008		BUSHING		2
74	65-64918-1		FITTING ASSY		2
75	NAS77A8-26P		BUSHING		4
76	65-64918-2		FITTING		1
77	2-541501-1		SNUBBER, (V97415)		2
78	BACN10JC4		NUT		2
79	BACB30NE4-76		BOLT		2
80	AN960PD416		WASHER		4
81	NAS43DD4-245		SPACER		2
82	BACB10A661		BEARING		4
83	65-72971-2		SHIM		2
	MS2042603		ATTACHING PARTS RIVET		4
84	69-49945-1		IDLER, SNUBBER SUPPORT UPPER		2
	65-73491-1		DOOR INSTL, PRESSURE RELIEF		1
85	65-65626-1		FITTING, FRAME		1
	BACR15CE5		ATTACHING PARTS RIVET		18
86	BACS40R08D38F		SHIM		2
	MS2047006		ATTACHING PARTS RIVET		8
87	69-53462-1		RETAINER, SEAL		1
	MS2042603		ATTACHING PARTS RIVET		9
88	69-53461-1		SEAL		1
89	65-62483-1		DOOR ASSY, PRESSURE RELIEF		1
90	BACB10A689		BEARING		1
91	65-62483-2		DOOR		1
92	BACN10JC4		NUT		2
93	AN960PD416		WASHER		1
94	BACB30NE4-11		BOLT		2
95	BACB10A689		BEARING		1
96	BACN10JC3		NUT		1
97	AN960PD10		WASHER		1
98	NAS75-3-004		SPACER		1
99	BACB30NF3-5		BOLT		1
100	3-94308		FITTING ASSY, MALE COMPRESSION SPRING		1
101	BACB10D158		BEARING		1
102	3-94308-1		FITTING		1
103	BACN10JC3		NUT		1
104	AN960PD10		WASHER		1
105	BACB30NF3-10		BOLT		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
44	106	BACB10D102	.	.	.	BEARING	.	.		1
	107	3-94309-2	.	.	.	FITTING ASSY, FEMALE COMPRESSION SPRING	.	.		1
	108	NAS76A5-014P	.	.	.	BUSHING	.	.		1
	109	3-94309-3	.	.	.	FITTING	.	.		1
	110	AN960PD816	.	.	.	WASHER	.	.		1
	111	3-94319	.	.	.	SPRING	.	.		1
	112	BACN10JC3	.	.	.	NUT	.	.		2
	113	AN960PD10	.	.	.	WASHER	.	.		2
	114	BACB30NF3-3	.	.	.	BOLT	.	.		2
	115	69-53402-1	.	.	.	RETAINER, SPRING	.	.		1
	116	BACN10JC4	.	.	.	NUT	.	.		1
	117	AN960PD416	.	.	.	WASHER	.	.		1
	118	BACB30NE4-13	.	.	.	BOLT	.	.		1
	119	BACN10JC4	.	.	.	NUT	.	.		1
	120	AN960PD416	.	.	.	WASHER	.	.		1
	121	BACB30NE4-11	.	.	.	BOLT	.	.		1
	122	65-73493-3	.	.	.	ROD ASSY, CONTROL	.	.		1
	122A	BACB10AD5LK	.	.	.	ROD END	.	.		1
	122B	AN316-6R	.	.	.	NUT	.	.		1
	122C	BACB10AD5L	.	.	.	ROD END	.	.		1
	122D	NAS509L6	.	.	.	NUT	.	.		1
	122E	NAS1193-6C	.	.	.	WASHER	.	.		1
	122F	65-73493-6	.	.	.	TUBE	.	.		1
	123	BACN10JC4	.	.	.	NUT	.	.		1
	124	AN960PD416	.	.	.	WASHER	.	.		1
	125	NAS43DD4-234	.	.	.	SPACER	.	.		1
	126	BACB30NE4-76	.	.	.	BOLT	.	.		1
	127	BACB10A661	.	.	.	BEARING	.	.		2
	128	BACS40R08C19F	.	.	.	SHIM	.	.		1
	129	BACS40R08C22F	.	.	.	SHIM	.	.		1
		MS20426D6	.	.	.	ATTACHING PARTS RIVET	.	.		2
			.	.	.	-----	.	.		
	130	AN320-3	.	.	.	NUT	.	.		1
	131	AN960PD10L	.	.	.	WASHER	.	.		1
	132	BACS12CA3-15	.	.	.	SCREW	.	.		1
	133	BACB10B255R	.	.	.	BEARING	.	.		1
	134	69-53400-1	.	.	.	IDLER, CRANK	.	.		1
	135	AN320-5	.	.	.	NUT	.	.		2
	136	AN960C516L	.	.	.	WASHER	.	.		4
	137	AN960PD516	.	.	.	WASHER	.	.		2
	138	BACB10AF5F5H	.	.	.	CAM	.	.		2
	139	BACN10JC3	.	.	.	NUT	.	.		5
	140	AN960PD10	.	.	.	WASHER	.	.		5
	141	BACB30NF3-3	.	.	.	BOLT	.	.		5
	142	BACB10A827	.	.	.	BEARING	.	.		1
	143	69-49948-2	.	.	.	HOUSING	.	.		1
	144	BACN10JC3	.	.	.	NUT	.	.		3
	145	AN960PD10	.	.	.	WASHER	.	.		3
	146	BACB30NF3-6	.	.	.	BOLT	.	.		3
	147	BACB10A827	.	.	.	BEARING	.	.		1
	148	69-49948-5	.	.	.	HOUSING	.	.		1
	149	BACN10JC3	.	.	.	NUT	.	.		5
	150	AN960PD10L	.	.	.	WASHER	.	.		10
	151	BACB30NF3-3	.	.	.	BOLT	.	.		5
	152	BACB10A827	.	.	.	BEARING	.	.		1
	153	69-49948-3	.	.	.	HOUSING	.	.		1
	154	66-15332-1	.	.	.	SPACER	.	.		AR
	155	BACN10JC4	.	.	.	NUT	.	.		1
	156	AN960PD416	.	.	.	WASHER	.	.		2
	157	BACB30NE4-15	.	.	.	BOLT	.	.		1
	158	69-53495-1	.	.	.	SPRING, TORSION TORQUE TUBE	.	.		1
	159	65-73489-1	.	.	.	TUBE ASSY, TORQUE	.	.		1
	160	BACN10JC4	.	.	.	NUT	.	.		4
	161	AN960PD416	.	.	.	WASHER	.	.		8
	162	BACB30NE4-18	.	.	.	BOLT	.	.		4
	163	69-49935-3	.	.	.	CRANK	.	.		1
	164	69-49935-1	.	.	.	CRANK ASSY	.	.		1
	165	MS21209F1-15	.	.	.	INSERT	.	.		1
	166	69-49935-2	.	.	.	CRANK	.	.		1
	167	69-49937-1	.	.	.	CRANK	.	.		1
	168	69-53401-1	.	.	.	CAM	.	.		1
	169	69-58165-1	.	.	.	TUBE	.	.		1
	170	BACN10JC4	.	.	.	NUT	.	.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
44	171	AN960PD416L	WASHER.		1
	172	BACB3ONE4-14	BOLT.		1
	173	65-73493-1	ROD ASSY, CONTROL		1
	174	AN316-5L	NUT		1
	175	33-2009-04	ROD, END (V77896) (OPTIONAL TO ARL4E138 (V50294))		1
	175	ARL4E138	ROD, END (V50294) (OPTIONAL 33-2009-04 (V77896))		1
	176	NAS509-5	NUT		1
	177	NAS1193-5C	WASHER.		1
	178	35-2009-04	ROD, END (V77896) (OPTIONAL TO AR4E138W (V50294))		1
	178	AR4E138W	ROD, END (V50294) (OPTIONAL 35-2009-04 (V77896))		1
	179	65-73493-4	TUBE.		1
	180	BACN10JC4	NUT		1
	181	AN960PD416L	WASHER.		2
	182	NAS430D4-242	SPACER.		1
	183	BACB3ONE4-76	BOLT.		1
	184	65-72971-4	SHIM.		1
	185	65-72971-2	SHIM.		1
		MS20426D3	ATTACHING PARTS RIVET		4
	186	BACB10A661	BEARING		2
	187	BACN10JC4	NUT		1
	188	AN960PD416L	WASHER.		2
	189	BACB3ONE4-14	BOLT.		1
	190	69-49943-2	IDLER, CRANK.		1
	191	BACN10JC5	NUT		1
	192	AN960PD516L	WASHER.		2
	193	NAS430D5-242	SPACER.		1
	194	BACB3ONE5-76	BOLT.		1
	195	BACB10A683	BEARING		2
	196	65-72971-2	SHIM.		1
	197	65-72971-3	SHIM.		1
		MS20426D3	ATTACHING PARTS RIVET		4
	198	BACN10JC4	NUT		1
	199	AN960PD416	WASHER.		2
	200	BACB3ONE4-24	BOLT.		1
	201	65-73493-1	ROD ASSY, CONTROL		1
	202	AN316-5L	NUT		1
	203	33-2009-04	ROD, END (V77896) (OPTIONAL TO ARL4E138 (V50294))		1
	203	ARL4E138	ROD, END (V50294) (OPTIONAL 33-2009-04 (V77896))		1
	204	NAS509-5	NUT		1
	205	NAS1193-5C	WASHER.		1
	206	35-2009-04	ROD, END (V77896) (OPTIONAL TO AR4E138W (V50294))		1
	206	AR4E138W	ROD, END (V50294) (OPTIONAL 35-2009-04 (V77896))		1
	207	65-73493-4	TUBE.		1
	208	69-52656-3	CRANK ASSY, INSIDE HANDLE IDLER		1
	209	69-52656-7	PIN		1
	210	MS16562-25	SPRING.		1
	211	69-52656-5	CRANK		1
	212	65-65954-1	HANDLE, INNER		1
	213	BACN10JC4	NUT		1
	214	AN960PD416L	WASHER.		2
	215	BACB3ONE4-14	BOLT.		1
	216	65-73493-2	ROD ASSY, CONTROL		1
	217	AN316-5R	NUT		2
	218	31-2009-04	ROD, END (V77896) (OPTIONAL TO AR4E138 (V50294))		2
	218	AR4E138	ROD, END (V50294) (OPTIONAL 31-2009-04 (V77896))		2
	219	65-73493-5	TUBE.		1
	220	BACN10JC4	NUT		2
	221	AN960PD416	WASHER.		4
	222	BACB3ONE4-20	BOLT.		2
	223	69-58096-1	CRANK		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
44 224	BACN10JC4	.	NUT		2
225	AN960PD416	.	WASHER.		4
226	BAC830NE4-16	.	BOLT.		2
227	69-58165-3	.	TUBE, TORQUE.		1
228	BACB10A827	.	BEARING		1
229	BACN10JC3	.	NUT		4
230	AN960PD10	.	WASHER.		4
231	BAC830NF3-6	.	BOLT.		4
232	69-49948-3	.	HOUSING, BEARING.		1
233	BACN10JC8	.	NUT		1
234	AN960PD816L	.	WASHER.		1
235	69-58095-1	.	SHAFT		1
236	BACR12BE211	.	RING.		2
237	69-49939-1	.	COLLAR.		1
238	BACB10A28DD	.	BEARING		2
239	65-73490-2	.	HANDLE, EXTERNAL.		1
240	BACN10JC4	.	NUT		2
241	AN960PD416L	.	WASHER.		4
242	NAS430D4-152	.	SPACER.		1
243	NAS430D4-58	.	SPACER.		2
244	BACB30NE4-40	.	BOLT.		2
245	BACB10A661	.	BEARING		2
246	69-52651-1	.	SPRING.		1
247	69-49940-1	.	TRIGGER		1
248	69-58656-1	.	SEAL, PROTECTOR		10
249	66-16691-1	.	PIN, SPRING		10
250	69-54808-2	.	PIN, STOP		10
	65-72972-1	.	BEAM INSTL, EMERGENCY EXIT STOP		1
251	BACB30GW6-9	.	BOLT.		4
252	BACB30GW6-8	.	BOLT.		4
253	BACB30GW6-7	.	BOLT.		4
254	BACB30GW6-6	.	BOLT.		4
255	BACC30K	.	COLLAR.		16
256	69-58091-1	.	FITTING ASSY.		1
257	69-58091-6	.	FITTING ASSY.		1
258	66-12688-5	.	BUSHING		1
259	69-58091-3	.	FITTING, (USED ON 69-58091-1)		1
260	69-58091-8	.	FITTING, (USED ON 69-58091-6)		1
	65-72972-2	.	BEAM INSTL, EMERGENCY EXIT STOP		1
261	BACB30GW6-8	.	BOLT.		4
262	BACB30GW6-7	.	BOLT.		8
263	BACB30GW6-6	.	BOLT.		4
264	BACB30GW6-5	.	BOLT.		4
265	BACB30GW6-3	.	BOLT.		4
266	BACC30K	.	COLLAR.		24
267	65-64273-3	.	FITTING ASSY.		1
268	65-64273-4	.	FITTING ASSY.		1
269	66-12688-5	.	BUSHING		1
270	65-64273-13	.	FITTING, (USED ON 65-64273-3)		1
271	65-64273-14	.	FITTING, (USED ON 65-64273-4)		1
	65-72972-3	.	BEAM INSTL, EMERGENCY EXIT STOP		1
272	BACB30GW6-8	.	BOLT.		4
273	BACB30GW6-7	.	BOLT.		8
274	BACB30GW6-6	.	BOLT.		4
275	BACB30GW6-5	.	BOLT.		4
276	BACB30GW6-4	.	BOLT.		4
277	BACC30K	.	COLLAR.		24
278	65-64273-5	.	FITTING ASSY.		1
279	65-64273-6	.	FITTING ASSY.		1
280	66-12688-5	.	BUSHING		1
281	65-64273-15	.	FITTING, (USED ON 65-64273-5)		1
282	65-64273-16	.	FITTING, (USED ON 65-64273-6)		1
	65-72972-4	.	BEAM INSTL, EMERGENCY EXIT STOP		1
283	BACB30GW6-8	.	BOLT.		2
284	BACB30GW6-7	.	BOLT.		8
285	BACB30GW6-6	.	BOLT.		4
286	BACB30GW6-5	.	BOLT.		4
287	BACB30GW6-4	.	BOLT.		2
288	BACC30K	.	COLLAR.		20
289	65-64273-7	.	FITTING ASSY.		1
290	65-64273-8	.	FITTING ASSY.		1
291	66-12688-5	.	BUSHING		1
292	65-64273-17	.	FITTING, (USED ON 65-64273-7)		1
293	65-64273-18	.	FITTING, (USED ON 65-64273-8)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
44	65-72972-5	.	.	BEAM INSTL, EMERGENCY EXIT STOP	.	.	.	.		1
294	BACB30GW6-9	.	.	BOLT.	.	.	.	.		2
295	BACB30GW6-8	.	.	BOLT.	.	.	.	.		10
296	BACB30GW6-7	.	.	BOLT.	.	.	.	.		6
297	BACB30GW6-6	.	.	BOLT.	.	.	.	.		2
298	65-64273-9	.	.	FITTING ASSY.	.	.	.	.		1
299	65-64273-10	.	.	FITTING ASSY.	.	.	.	.		1
300	66-12688-5	.	.	BUSHING	.	.	.	.		1
301	65-64273-19	.	.	FITTING, (USED ON 65-64273-9)	.	.	.	.		1
302	65-64273-20	.	.	FITTING, (USED ON 65-64273-10)	.	.	.	.		1
	65-74446-1	.	.	SUPPORT INSTL, ESCAPE SLIDE COMPARTMENT	.	.	.	.		1
303	MS20470D6	.	.	RIVET	.	.	.	.		11
304	69-58439-1	.	.	SUPPORT ASSY, UPPER	.	.	.	.		1
304	69-58439-3	.	.	SUPPORT	.	.	.	.		1
305	69-58439-2	.	.	SUPPORT ASSY, UPPER	.	.	.	.		1
305	69-58439-4	.	.	SUPPORT	.	.	.	.		1
306	69-9052-1	.	.	SHIM.	.	.	.	.		4
307	BACB30LU3-12	.	.	BOLT.	.	.	.	.		2
308	BACN10JC3	.	.	NUT	.	.	.	.		2
309	66-24273-1	.	.	STOP, DOOR MOUNTED.	.	.	.	.		1
310	69-55008-1	.	.	BRACKET	.	.	.	.		1
311	69-55007-1	.	.	BRACKET	.	.	.	.		1
312	65-73486-1	.	.	DEPRESSOR INSTL, EMERGENCY EXIT	.	.	.	.		1
313	65-72974-1	.	.	INTERCOSTAL INSTL, EMERGENCY EXIT	.	.	.	.		1
	65-73488-1	.	.	PAN INSTL, EMERGENCY EXIT	.	.	.	.		1
314	69-52698-1	.	.	FITTING ASSY, HANDLE PAN DRAIN.	.	.	.	.		1
		.	.	ATTACHING PARTS	.	.	.	.		
	BACR15CE5D	.	.	RIVET	.	.	.	.		2
		.	.	-----*	.	.	.	.		
315	65-73488-6	.	.	SPACER.	.	.	.	.		1
316	65-73488-5	.	.	HOSE.	.	.	.	.		1
317	66-4742	.	.	FITTING ASSY, HINGE CAVITY DRAIN.	.	.	.	.		1
		.	.	ATTACHING PARTS	.	.	.	.		
	MS20426D4	.	.	RIVET	.	.	.	.		2
		.	.	-----*	.	.	.	.		
318	BACB30NE4-8	.	.	BOLT.	.	.	.	.		2
319	BACB30NE4-7	.	.	BOLT.	.	.	.	.		2
320	BACB30NE5-13	.	.	BOLT.	.	.	.	.		4
321	BACB30NE5-11	.	.	BOLT.	.	.	.	.		4
322	AN960PD416L	.	.	WASHER.	.	.	.	.		6
323	AN960PD516	.	.	WASHER.	.	.	.	.		4
324	AN960PD516L	.	.	WASHER.	.	.	.	.		8
325	BACN10GW4	.	.	NUT	.	.	.	.		4
326	BACN10GW5	.	.	NUT	.	.	.	.		8
327	69-58164-1	.	.	HOUSING, EXTERNAL HANDLE BEARING.	.	.	.	.		1
328	BACB30NE4-9	.	.	BOLT.	.	.	.	.		8
329	AN960PD416	.	.	WASHER.	.	.	.	.		8
330	69-49941-1	.	.	PIN, GUIDE.	.	.	.	.		1
331	69-49942-2	.	.	PIN, GUIDE.	.	.	.	.		1
332	65-72973-1	.	.	FRAME INSTL, EMERGENCY EXIT	.	.	.	.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

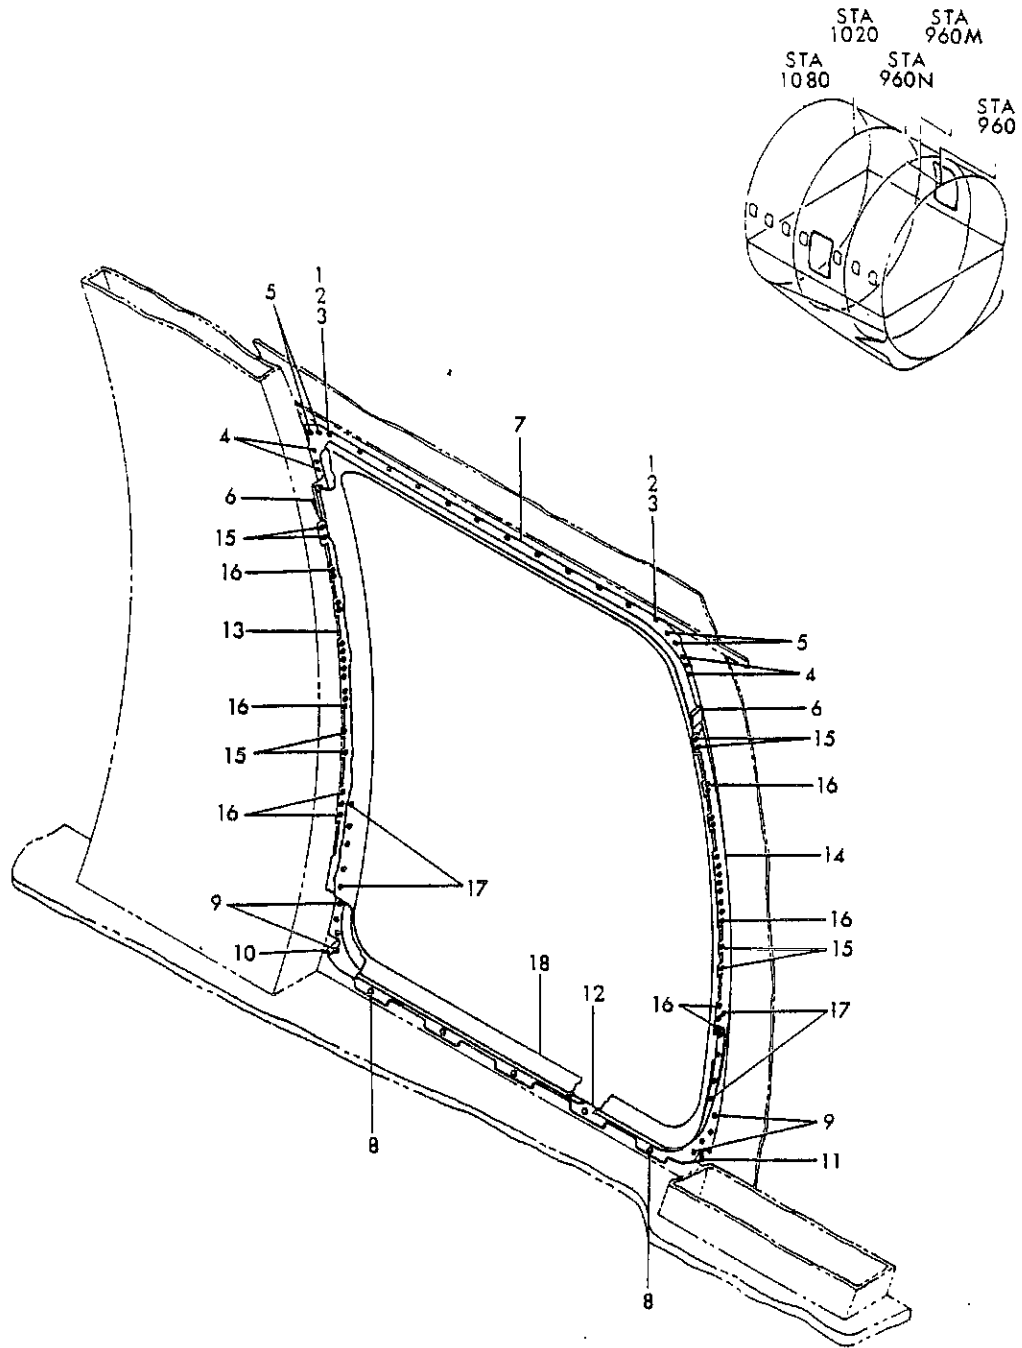


FIGURE 45. SEAL INSTALLATION, STATION 990 EMERGENCY EXIT OUTWARD OPENING DOOR KIT



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
45	65-74224-1	SEAL INSTL, STATION 990 EMERGENCY EXIT OUTWARD OPENING DOOR (SEE 53-1, FIG. 3, ITEM 33)	5151	RF
	65-74224-13	SEAL INSTL, STATION 990.45 EMERGENCY EXIT KIT (SEE FIG. 7, ITEM 6)	5299	RF
1	BACB30FN6-8	. BOLT.	5199	12
2	BACC30M6	. COLLAR.	5199	12
3	AN960PD10	. WASHER.	5199	12
4	BACR15CE5D	. RIVET.	5199	6
5	BACR15CE6D	. RIVET.	5199	4
6	90-9195-1770	. FILLER, TAPERED	5199	2
7	65-74224-3	. RETAINER ASSY	5199	1
8	NAS583-9	. SCREW	5199	5
9	BACR15CE6D	. RIVET.	5199	8
10	65-74224-11	. FILLER.	5199	1
11	65-74224-12	. FILLER.	5199	1
12	65-74224-2	. RETAINER ASSY	5199	1
13	65-74224-9	. RETAINER, SIDE.	5199	1
14	65-74224-10	. RETAINER, SIDE.	5199	1
		ATTACHING PARTS		
15	MS20470D5	. RIVET.	5199	8
16	MS20470D4	. RIVET.	5199	30
17	BACR15CE4D	. RIVET.	5199	10
		*-----		
18	10-61498-3	. SEAL.	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

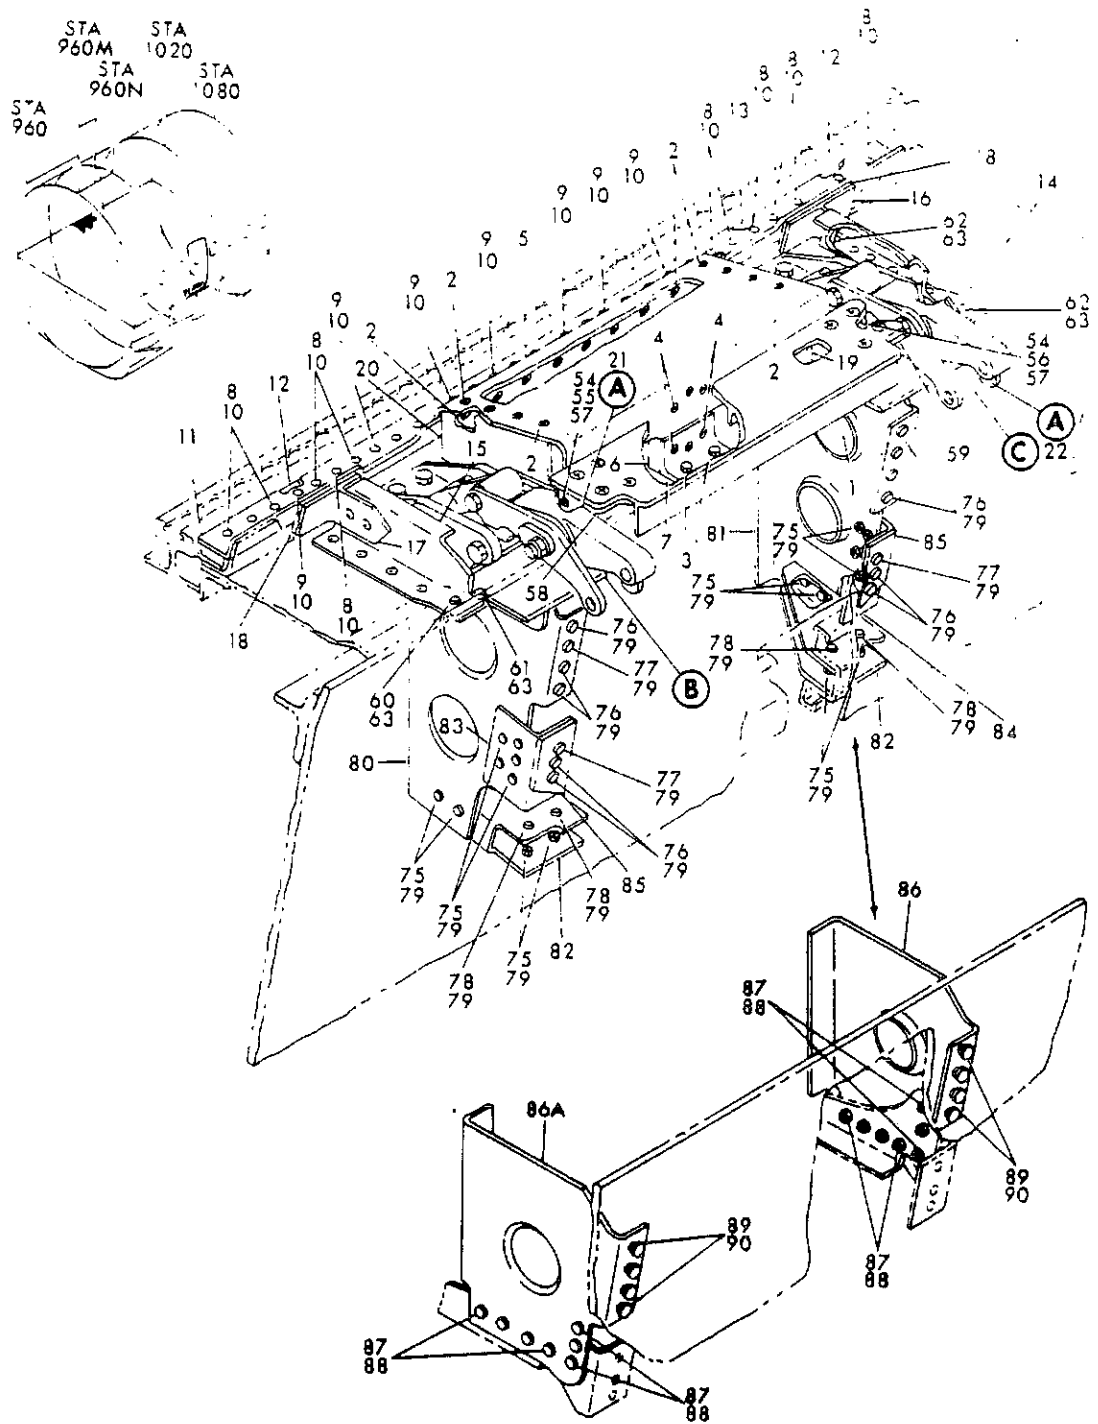


FIGURE 46. HINGE INSTL, STATION 990 OUTWARD OPENING DOOR LOWER SILL KIT (SHEET 1)

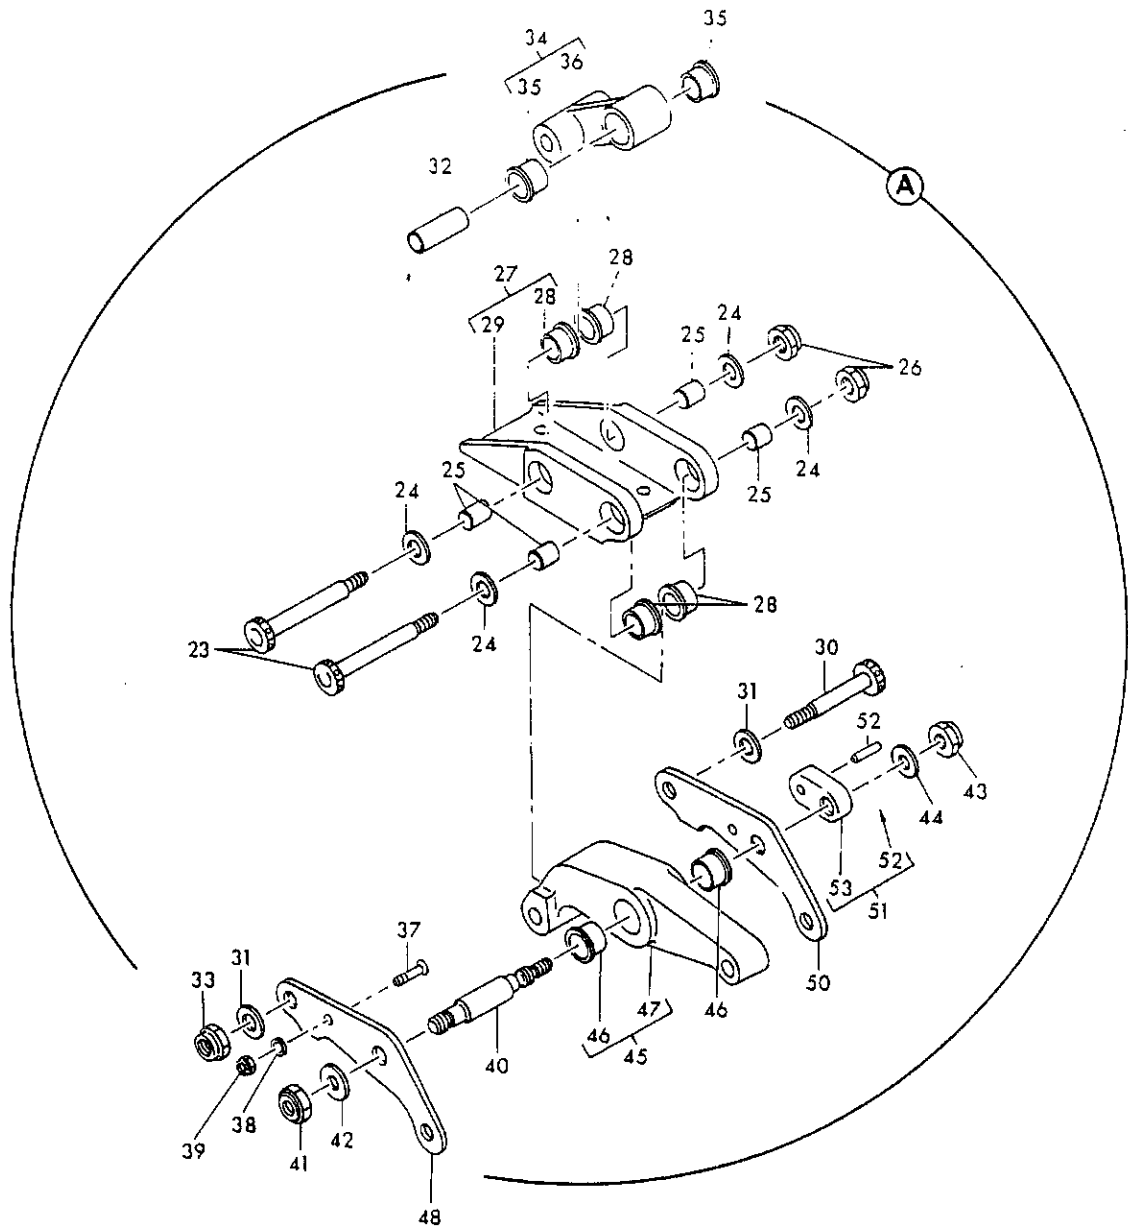


FIGURE 46. HINGE INSTL, STATION 990 OUTWARD OPENING DOOR LOWER SILL KIT (SHEET 2)

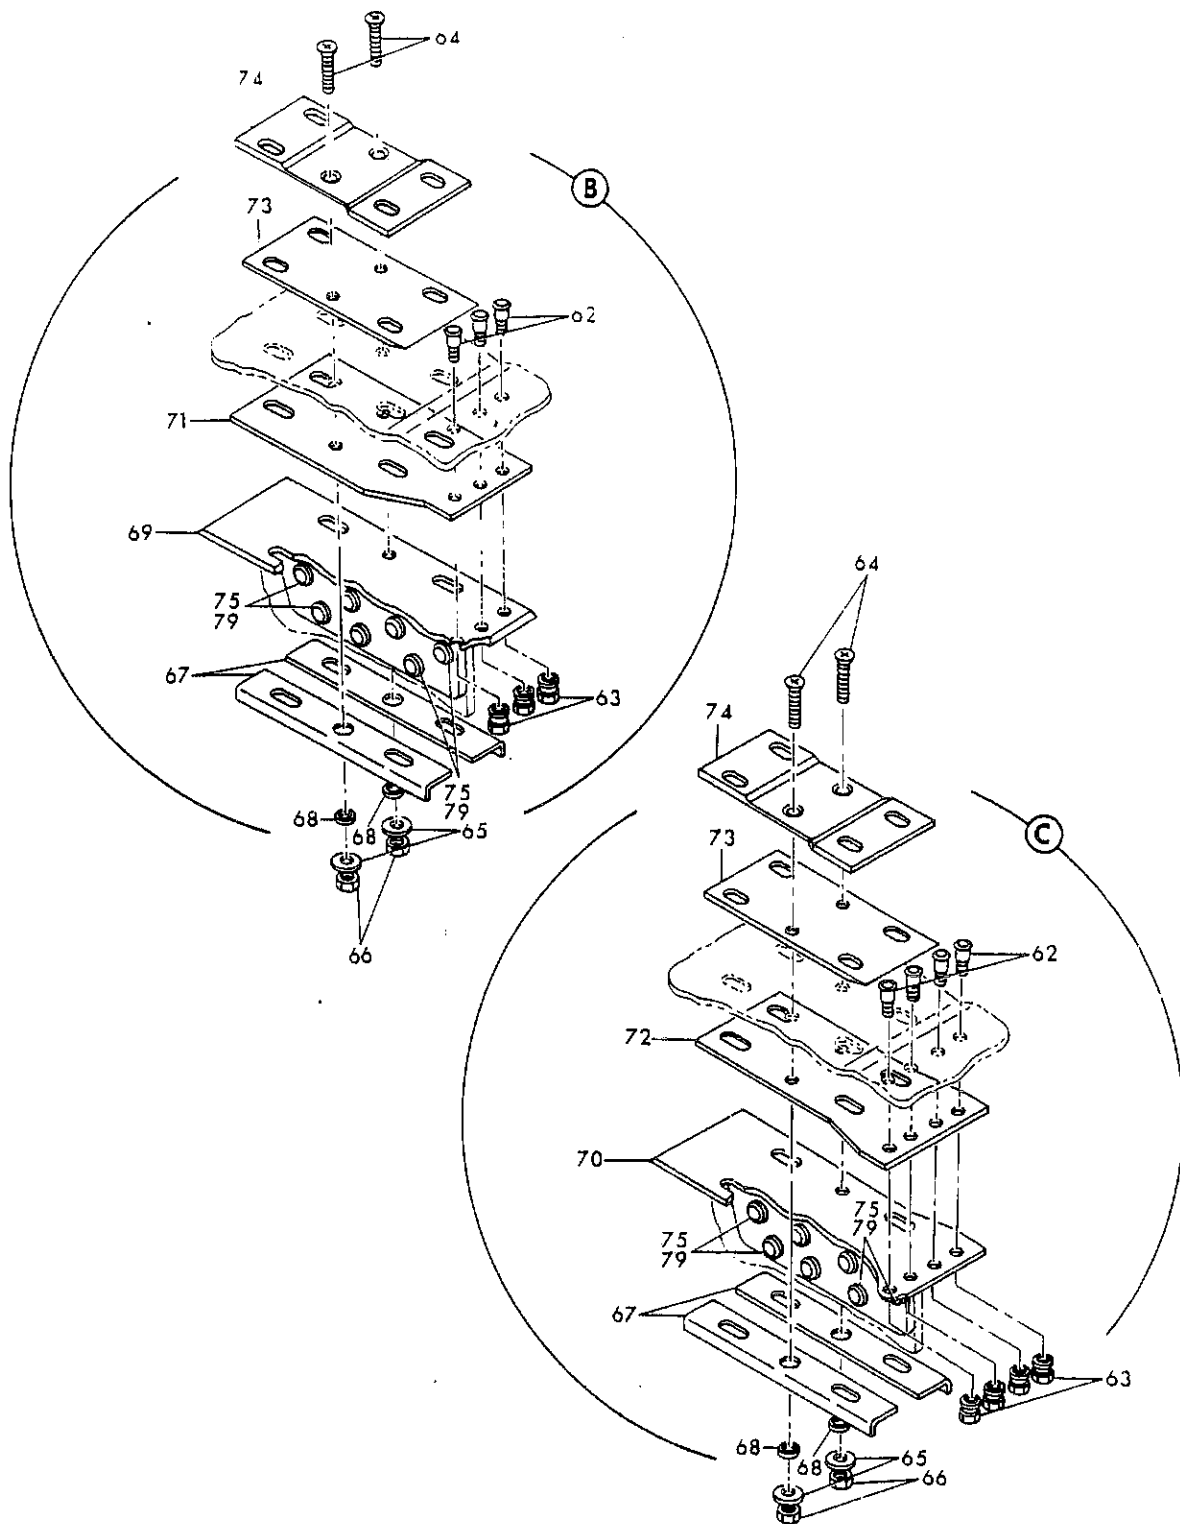


FIGURE 46. HINGE INSTL, STATION 990 OUTWARD OPENING DOOR LOWER SILL KIT (SHEET 3)

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
46	65-73487-1	HINGE INSTL, STATION 990 OUTWARD OPENING DOOR (LH) (SEE 53-1, FIG. 3, ITEM 32)							5151	RF
	65-73487-2	HINGE INSTL, STATION 990 OUTWARD OPENING DOOR (RH) (SEE 53-1, FIG. 3, ITEM 32)							5151	RF
1	69-58093-1	. SUPPORT							5151	1
		ATTACHING PARTS								
	BACB30LU3-4	. BOLT.							5151	8
	AN960C10	. WASHER.							5151	8
	BACN10JC3	. NUT							5151	8
2	BACB30LU3-2	. BOLT.							5151	16
3	BACB30NE3-6X	. BOLT.							5151	2
4	BACB30LU3-2	. BOLT.							5151	6
5	69-58092-6	. STEP.							5151	1
6	69-58677-2	. CHANNEL.							5151	1
7	69-58677-1	. ANGLE.							5151	1
8	BACB30FP6-12	. BOLT.							5151	11
9	BACB30FP6-10	. BOLT.							5151	7
10	BACC30M6	. COLLAR.							5151	18
11	69-58297-4	. ANGLE ASSY.							5151	1
12	90-9195-822	. FILLER, TAPERED							5151	2
13	90-9195-320	. FILLER, TAPERED							5151	1
14	69-58296-1	. STIFFENER							5151	1
15	69-58296-2	. STIFFENER							5151	1
16	69-58452-1	. TEE							5151	1
17	69-58452-2	. TEE							5151	1
18	69-58447-5	. FILLER.							5151	2
19	69-58092-7	. SUPPORT ASSY.							5151	1
20	69-58092-8	. SUPPORT ASSY.							5151	1
21	65-64265-6	. HINGE ASSY, EMERGENCY EXIT.							5151	1
22	65-64265-5	. HINGE ASSY, EMERGENCY EXIT.							5151	1
		ATTACHING PARTS								
	BACB30NE4-10	. BOLT.							5151	8
	AN960PD416L	. WASHER.							5151	8
23	BACB30NE3-38	. BOLT.							5151	2
24	AN960PD516L	. WASHER.							5151	4
25	NAS73-5E006	. SPACER.							5151	4
26	NAS679A5	. NUT							5151	2
27	69-49928-1	. BRACKET ASSY, ESCAPE HATCH.							5151	1
28	NAS77A8-27P	. BUSHING							5151	4
29	69-49928-2	. BRACKET							5151	1
30	BACB30NE5-25	. BOLT.							5151	1
31	AN960PD516L	. WASHER.							5151	2
32	NAS73-5E103	. SPACER.							5151	1
33	NAS679A5	. NUT							5151	1
34	69-49926-1	. LINK ASSY, ESCAPE HATCH END							5151	1
35	NAS77A8-45P	. BUSHING							5151	2
36	69-49926-2	. LINK.							5151	1
37	BACB30LH3-5	. BOLT.							5151	1
38	AN960PD10L	. WASHER.							5151	1
39	NAS679A3W	. NUT							5151	1
40	69-52578-1	. SHAFT, ECCENTRIC.							5151	1
41	NAS679A6	. NUT							5151	1
42	AN960PD416	. WASHER.							5151	1
43	NAS679A4W	. NUT							5151	1
44	AN960PD616	. WASHER.							5151	1
45	69-49925-3	. LINK ASSY, ESCAPE HATCH CENTER.							5151	1
46	NAS77A9-45P	. BUSHING							5151	2
47	69-49925-4	. LINK, CENTER.							5151	1
48	69-49924-5	. LINK, SIDE (USED ON 65-64265-5)							5151	1
48	69-49924-6	. LINK, SIDE (USED ON 65-64265-6)							5151	1
50	69-49924-4	. LINK, SIDE.							5151	1
51	69-52577-3	. KEY ASSY, ECCENTRIC SHAFT							5151	1
52	NAS607-3-4P	. PIN							5151	1
53	69-52577-4	. KEY							5151	1
54	BACB30LU3-4	. BOLT.							5151	2
55	AN960C10	. WASHER.							5151	1
56	AN960C6	. WASHER.							5151	1
57	BACN10JC3	. NUT							5151	2
58	69-53412-1	. ANGLE							5151	1
59	69-53412-2	. ANGLE							5151	1
60	BACB30FP6-4	. BOLT.							5151	1
61	BACB30FP6-4	. BOLT.							5151	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
46	62	BACB30FP6-6	.	BOLT.	.	.	.	.	5151	13
	63	BACC30M6	.	COLLAR.	.	.	.	.	5151	15
	64	BACB30LU3-8	.	BOLT.	.	.	.	.	5151	4
	65	BACW10P43AL	.	WASHER.	.	.	.	.	5151	4
	66	BACN10JC3	.	NUT	.	.	.	.	5151	4
	67	69-58297-2	.	ANGLE ASSY, LOWER SILL.	.	.	.	.	5151	4
	68	NAS43DD3-4	.	SPACER.	.	.	.	.	5151	4
	69	69-58094-1	.	TEE, (LH)	.	.	.	.	5151	1
	69	69-58094-2	.	TEE, (RH)	.	.	.	.	5151	1
	70	69-58094-3	.	TEE, (LH)	.	.	.	.	5151	1
	70	69-58094-4	.	TEE, (RH)	.	.	.	.	5151	1
	71	69-58447-1	.	FILLER.	.	.	.	.	5151	1
	72	69-58447-2	.	FILLER.	.	.	.	.	5151	1
	73	69-58447-3	.	FILLER.	.	.	.	.	5151	2
	74	69-49927-1	.	PLATE, SERRATED	.	.	.	.	5151	2
	75	BACB30FM6-4	.	BOLT.	.	.	.	.	5151	32
	76	BACB30FN6-6	.	BOLT.	.	.	.	.	5151	11
	77	BACB30FQ6-6	.	BOLT.	.	.	.	.	5151	3
	78	BACB30FP6-4	.	BOLT.	.	.	.	.	5151	4
	79	BACC30M6	.	COLLAR.	.	.	.	.	5151	50
	80	69-58295-2	.	SUPPORT	.	.	.	.	5151	1
	81	69-58295-1	.	SUPPORT	.	.	.	.	5151	1
	82	69-58295-3	.	CHANNEL	.	.	.	.	5151	2
	83	69-58295-5	.	ANGLE	.	.	.	.	5151	1
	84	69-58295-4	.	ANGLE	.	.	.	.	5151	1
	85	69-58447-4	.	FILLER.	.	.	.	.	5151	2
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

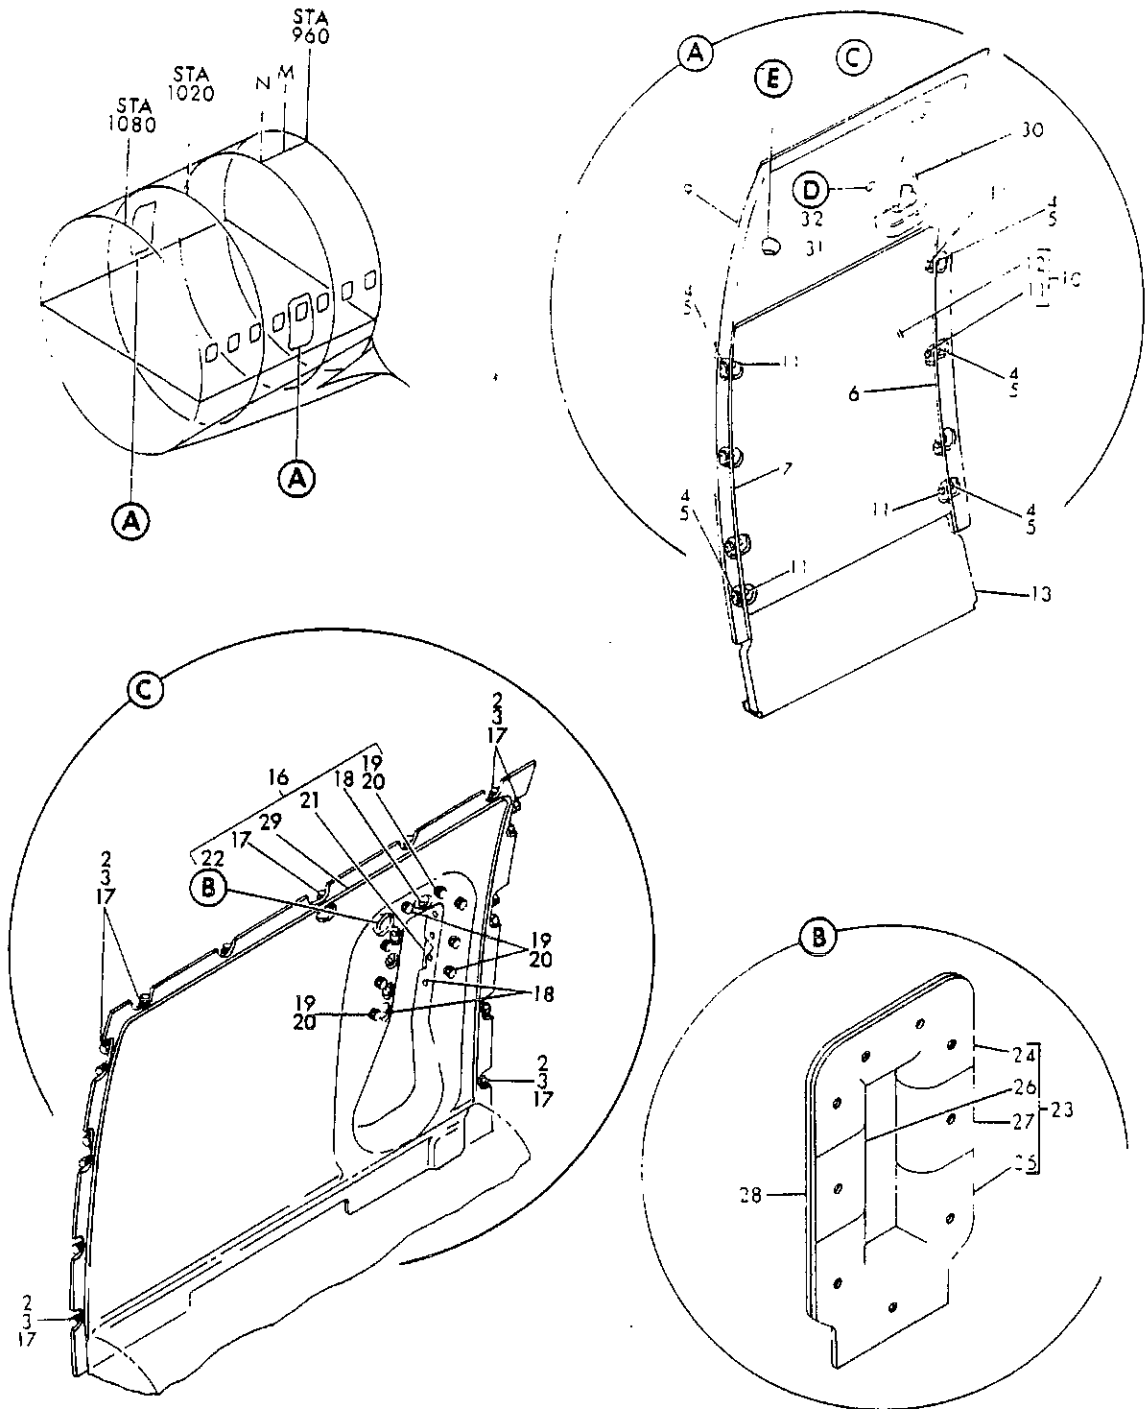


FIGURE 47. LINING INSTL, STATION 990 OUTWARD OPENING EMERGENCY EXIT (SHEET 1)

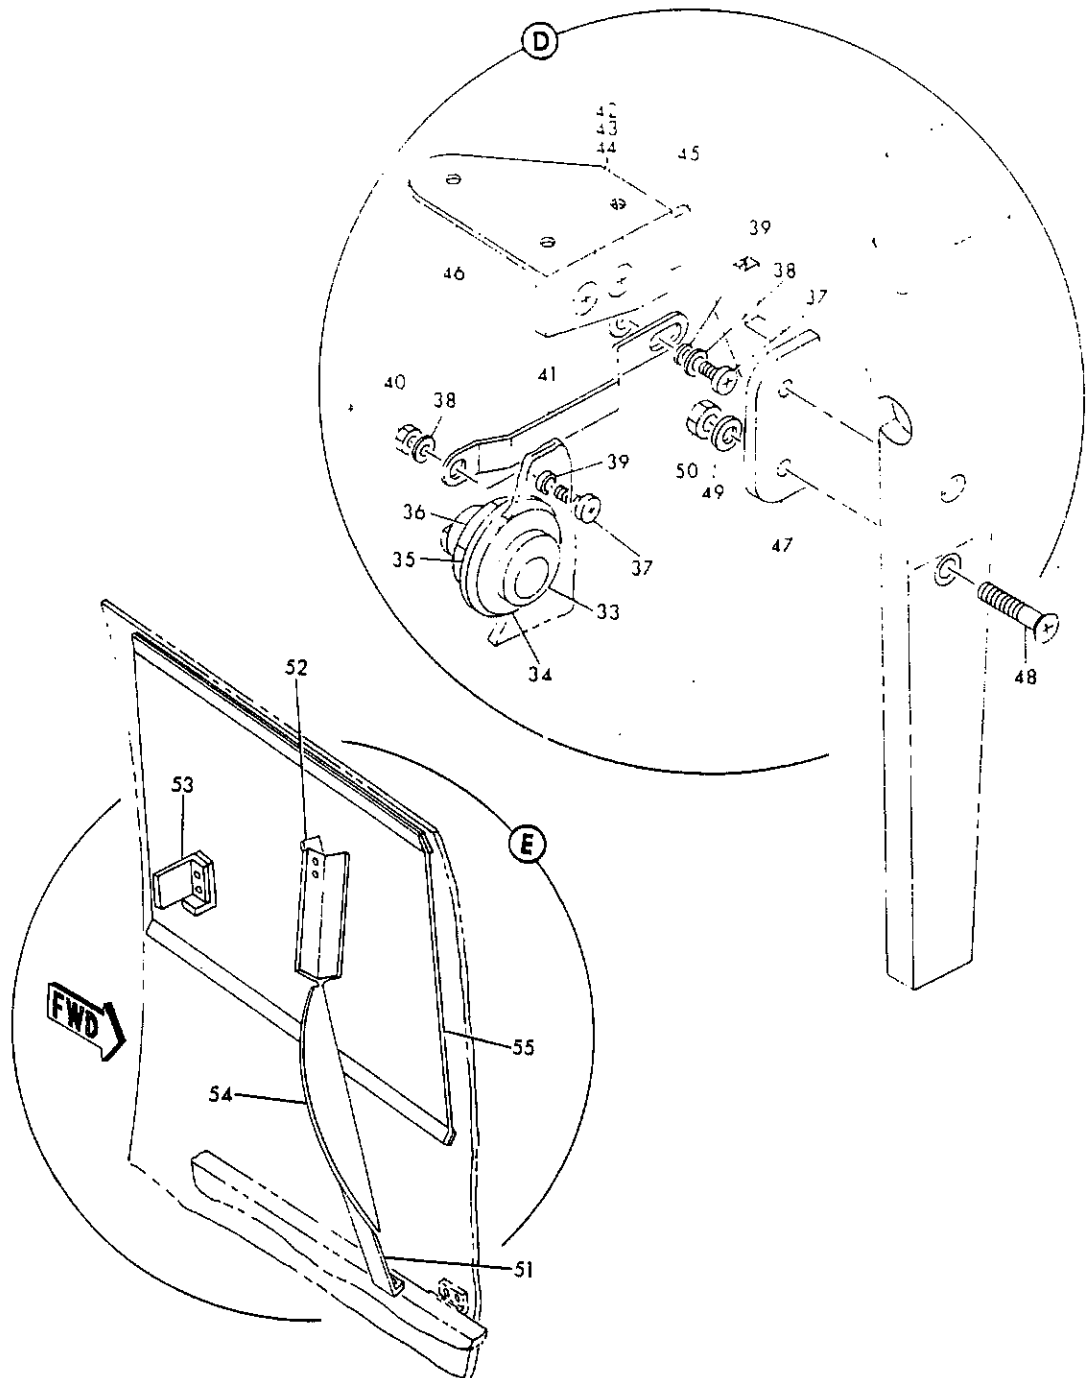


FIGURE 47. LINING INSTL, STATION 990 OUTWARD OPENING EMERGENCY EXIT (SHEET 2)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
47	65-73972-3	LINING INSTL, STATION 990 OUTWARD OPENING EMERGENCY . . EXIT (SEE 25-10, FIG. 31P, ITEM 19, 25-10, FIG. 31Q, ITEM 16, 25-10, FIG. 33D, ITEM 28, 25-10, FIG. 35C, ITEM 19, 25-10, FIG. 35D, ITEM 16, 25-10, FIG. 35S, ITEM 245A, 25-10, FIG. 35T, ITEM 186A, 25-10, FIG. 35Y, ITEM 295 AND 25-10, FIG. 35Z, ITEM 189)	5199	RF
2	NAS602-8P	. SCREW	5199	17
3	AN960PD8L	. WASHER.	5199	17
4	BACS12C83-8	. SCREW	5199	8
5	AN960PD10L	. WASHER.	5199	8
		ATTACHING PARTS		
	BACR15BA303	. RIVET	5199	84

9	65-73973-4A	. SEAL.	5199	1
16	65-73974-11L	. LINING ASSY	5199	1
17	NAS1068A08	. NUT	5199	17
18	MS2042603	. RIVET	5199	9
19	NAS600-5P	. SCREW	5199	8
20	AN960PD4L	. WASHER.	5199	8
21	69-55012-3	. SUPPORT ASSY.	5199	1
22	65-68846-1	. RETAINER ASSY	5199	1
23	65-68846-2	. . . BULB ASSY	5199	1
24	65-68846-3	. . . TRIM, (ALTERED FROM BAC SPEC. NO.; 10-60754-32-4-5)	5199	1
25	65-68846-4	. . . TRIM, (ALTERED FROM BAC SPEC. NO.; 10-60754-32-4-5)	5199	1
26	65-68846-5	. . . TRIM, (ALTERED FROM BAC SPEC. NO.; 10-60754-32-6-5)	5199	1
27	65-68846-6	. . . TRIM, (ALTERED FROM BAC SPEC. NO.; 10-60754-6-5)	5199	1
28	69-55084-1	. . . RETAINER.	5199	1
29	65-73974-13L	. . PANEL, (ALTERED FROM; 69-17020-9030)	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 05
DOOR WARNING SYSTEM

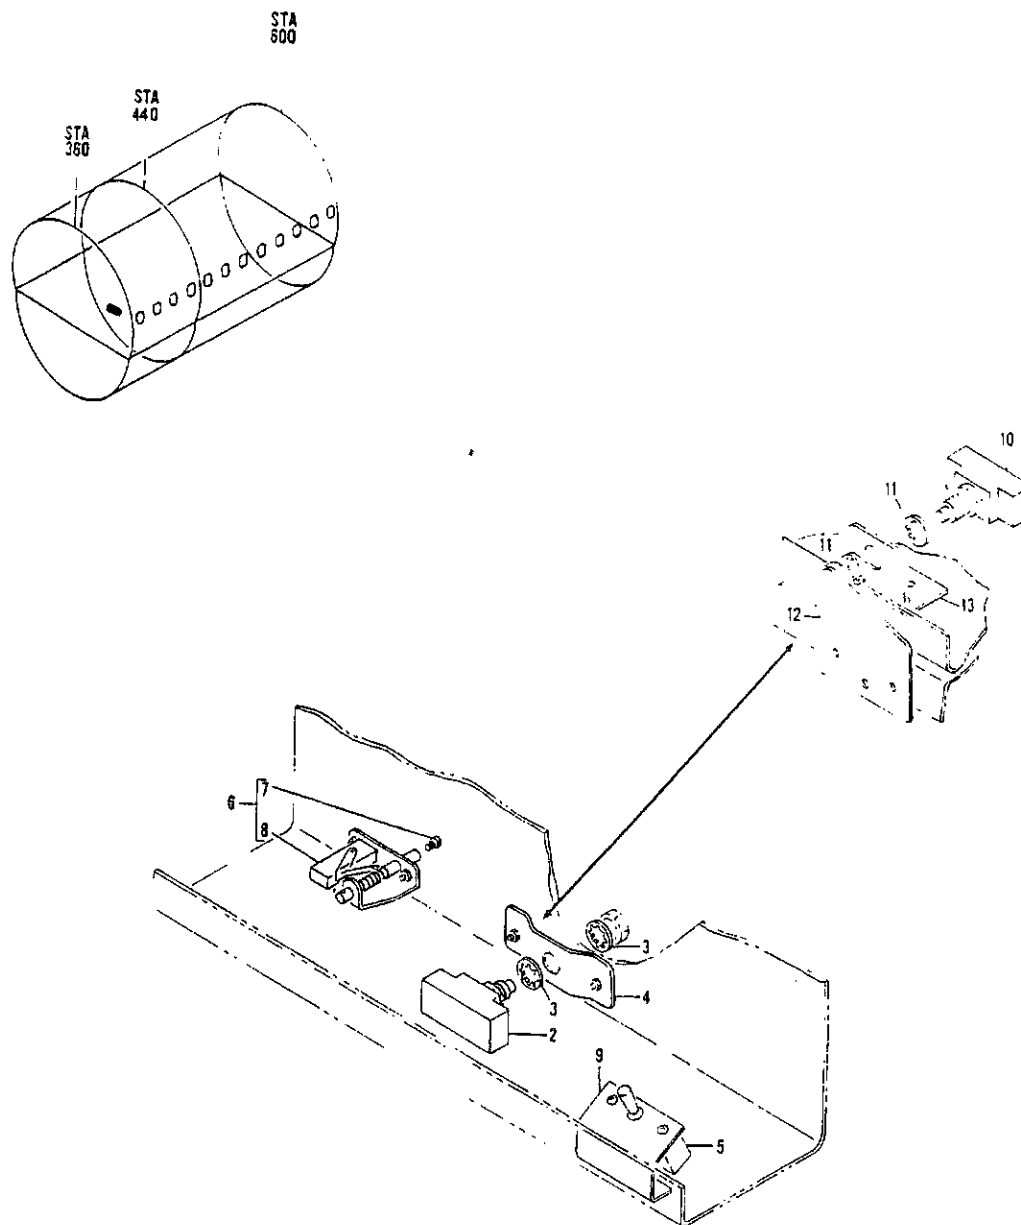


FIGURE 1. SWITCH INSTL, STATION 400 CARGO DOOR



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
1	65-3782-5		SWITCH INSTL, STATION 400 CARGO DOOR.		
R			. SWITCH INSTL, STATION 400 CARGO DOOR (DOORS ONLY) . . .	5199	RF
R			(SEE 24-3, FIG. 2, ITEM 9A)		
R	65-3782-4		. SWITCH INSTL, STATION 400 CARGO DOOR (DOORS ONLY) . . .	0150	RF
R			(SEE 24-3, FIG. 2, ITEM 9A)		
R	2	A4-70G3-14	. . SWITCH, ACTUATOR (V81640)	0150	1
R			(OPTIONAL BZ2RQ1A2 (V91929))		
R	2	A4-70G3-11	. . SWITCH, ACTUATOR (V81640)	0150	1
R			(OPTIONAL BZ2RQ1A2 (V91929))		
R	2	BZ2RQ1A2	. . SWITCH, ACTUATOR (V91929)	0150	1
R			(OPTIONAL TO A4-70G3-11 (V81640) AND		
R			A4-70G3-14 (V81640))		
R	3	MS35333-43S	. . WASHER.	0150	2
R	4	63-1804	. . BRACKET, STATION 400 SWITCH SUPPORT	0150	1
R			ATTACHING PARTS		
R		NAS601-6P	. . SCREW	0150	2
R		NAS679A06W	. . NUT	0150	2
R			*-----*		
R	5	BACS30CG8	. . SWITCH.		1
R			ATTACHING PARTS		
R		NAS601-6P	. . SCREW		2
R			*-----*		
R	6	C2-38	. . SWITCH, INTERLOCK (V81640).	0150	1
R			(OPTIONAL 3AC41 (V91929)) (FOR REPLACEMENT		
R			ORDER C2-1021-1 (V81640))		
R	6	3AC41	. . SWITCH, INTERLOCK (V91929).	0150	1
R			(OPTIONAL TO C2-38 (V81640)) (FOR REPLACEMENT		
R			ORDER C2-1021-1 (V81640))		
R	6	C2-1021-1	. . SWITCH, INTERLOCK (V81640).	0150	1
R			(REPLACEMENT FOR 63-2466-1, 3AC41 (V91929)		
R			C2-38 (V81640))		
R			ATTACHING PARTS		
R		NAS601-6P	. . SCREW	0150	2
R		BACN10FX61	. . NUT	0150	2
R			*-----*		
R	9	63-1826	. . ANGLE, SWITCH SUPPORT		1
R			FOR REFERENCE TO OTHER SWITCH DETAILS, SEE NHA. . . .		
R		65-8630	. SWITCH INSTL, STATION 400 CARGO DOOR (SEE 24-3, FIG.	5199	RF
R			2, ITEM 9)		
R	10	A4-70G3-14	. . SWITCH, ACTUATOR (V81640)	5199	1
R			(OPTIONAL BZ2RQ1A2 (V91929))		
R	10	A4-70G3-11	. . SWITCH, ACTUATOR (V81640)	5199	1
R			(OPTIONAL BZ2RQ1A2 (V91929))		
R	10	BZ2RQ1A2	. . SWITCH, ACTUATOR (V91929)	0150	1
R			(OPTIONAL TO A4-70G3-11 (V81640) AND		
R			A4-70G3-14 (V81640))		
R	11	MS35333-121	. . WASHER.	5199	2
R	12	66-8618	. . PLATE, STATION 400 SWITCH STRIKER	5199	1
R	13	66-8618-1	. . BRACKET, STATION 400 SWITCH	5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

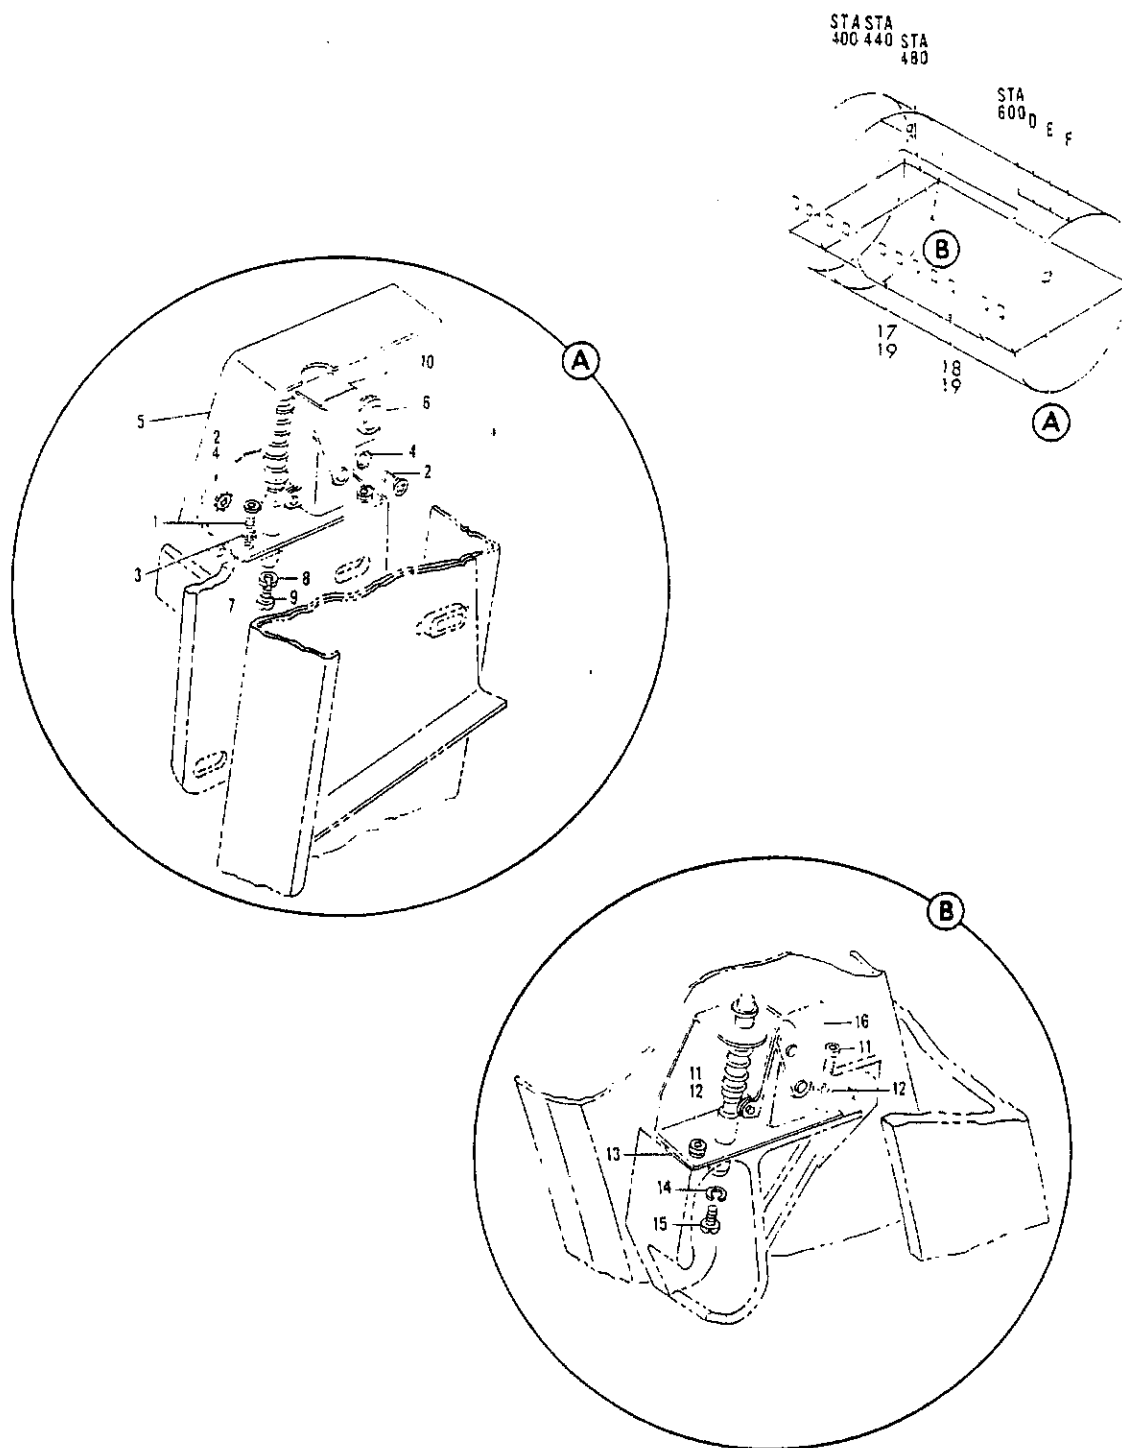


FIGURE 2. SWITCH INSTL, FORWARD CARGO AND GALLEY DOOR AND UPPER CARGO DOOR

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2	69-47062		SWITCH INSTL, FORWARD CARGO AND GALLEY DOOR AND UPPER . CARGO DOOR LOCKED POSITION INDICATOR		RF
1	BACS12AE4		. SWITCH INSTL, FORWARD CARGO DOOR (SEE 24-3, FIG. 2, . ITEM 10)		2
1	BACS12AE6		. . SCREW (OPTIONAL BACS12AE6 WITH C2-38)		2
2	NASS14P632-4		. . SCREW		2
3	AN935-6		. . WASHER		2
4	AN936D6		. . WASHER		2
5	63-1354-1		. . COVER, DOOR SWITCH.		1
6	NAS557-4A		. . GROMMET		1
7	66-36034		. . SHIM, WARNING LAMINATED (USED WITH C2-38)		AR
8	AN935-6		. . WASHER, (USED WITH C2-38)		AR
9	AN515C6-5		. . SCREW, (USED WITH C2-38)		AR
10	C2-38		. . SWITCH, INTERLOCK (V81640) (OPTIONAL AND FOR REPLACEMENT ORDER C2-1021-1 (V81640))		1
10	C2-1021-1		. . SWITCH, INTERLOCK (V81640) (OPTIONAL TO AND REPLACEMENT FOR C2-38 (V81640))		1
	69-17056		. SWITCH INSTL, FORWARD GALLEY DOOR WARNING (SEE 24-3, FIG. 2, ITEM 11)		RF
11	BACS12AE4		. . SCREW		2
12	AN935-6		. . WASHER		2
13	66-36034		. . SHIM, WARNING LAMINATED (USED WITH C2-38)		AR
14	AN935-6		. . WASHER, (USED WITH C2-38)		AR
15	AN515C6-5		. . SCREW, (USED WITH C2-38)		AR
16	C2-38		. . SWITCH, INTERLOCK (V81640) (OPTIONAL AND FOR REPLACEMENT ORDER C2-1021-1 (V81640))		1
16	C2-1021-1		. . SWITCH, INTERLOCK (V81640) (OPTIONAL TO AND REPLACEMENT FOR C2-38 (V81640))		1
17	69-24441-1		. SWITCH INSTL, UPPER CARGO DOOR LOCKED POSITION. . . . INDICATOR (SEE 24-3, FIG. 2, ITEM 10A)		RF
18	69-24441-2		. SWITCH INSTL, UPPER CARGO DOOR LOCKED POSITION. . . . INDICATOR (SEE 24-3, FIG. 2, ITEM 10B)		RF
19	H11-1009		. . SWITCH, SEALED (V81640)		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

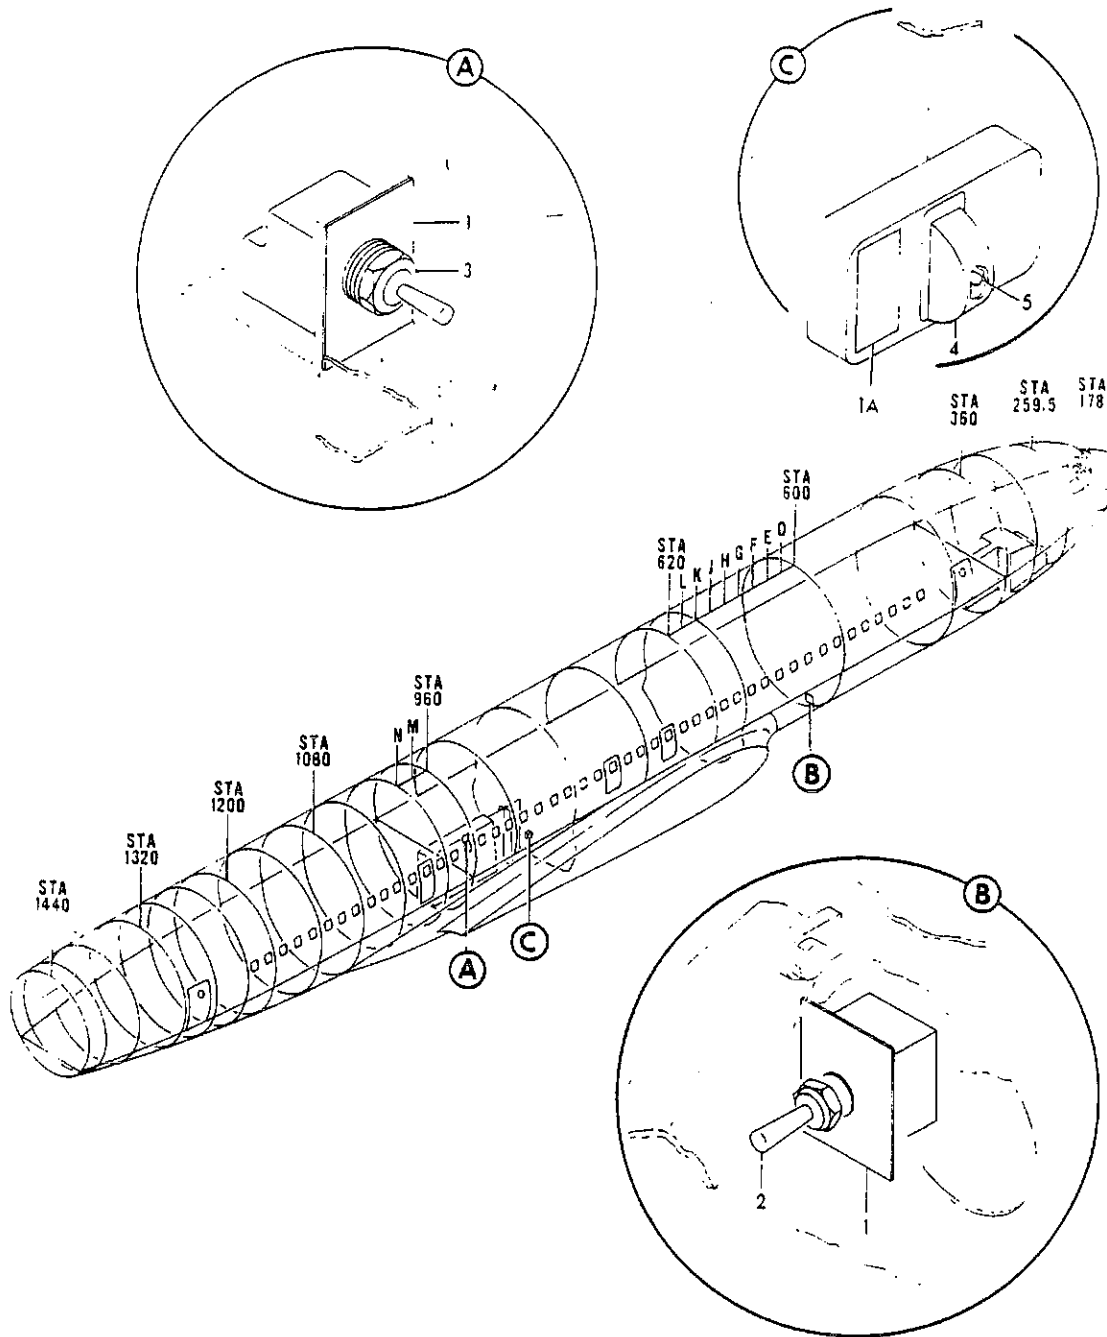


FIGURE 2A. SWITCH INSTL, MAIN CARGO DOOR HAND PUMP

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
2A	65-53200-2	SWITCH INSTL, MAIN CARGO DOOR HAND PUMP (SEE 24-3, FIG. 2, ITEM 11B)								RF
1	BACMBV28	. SCOTCH-CAL, BLOCKING VALVE OPEN								1
3	MS24523-30	. SWITCH.								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

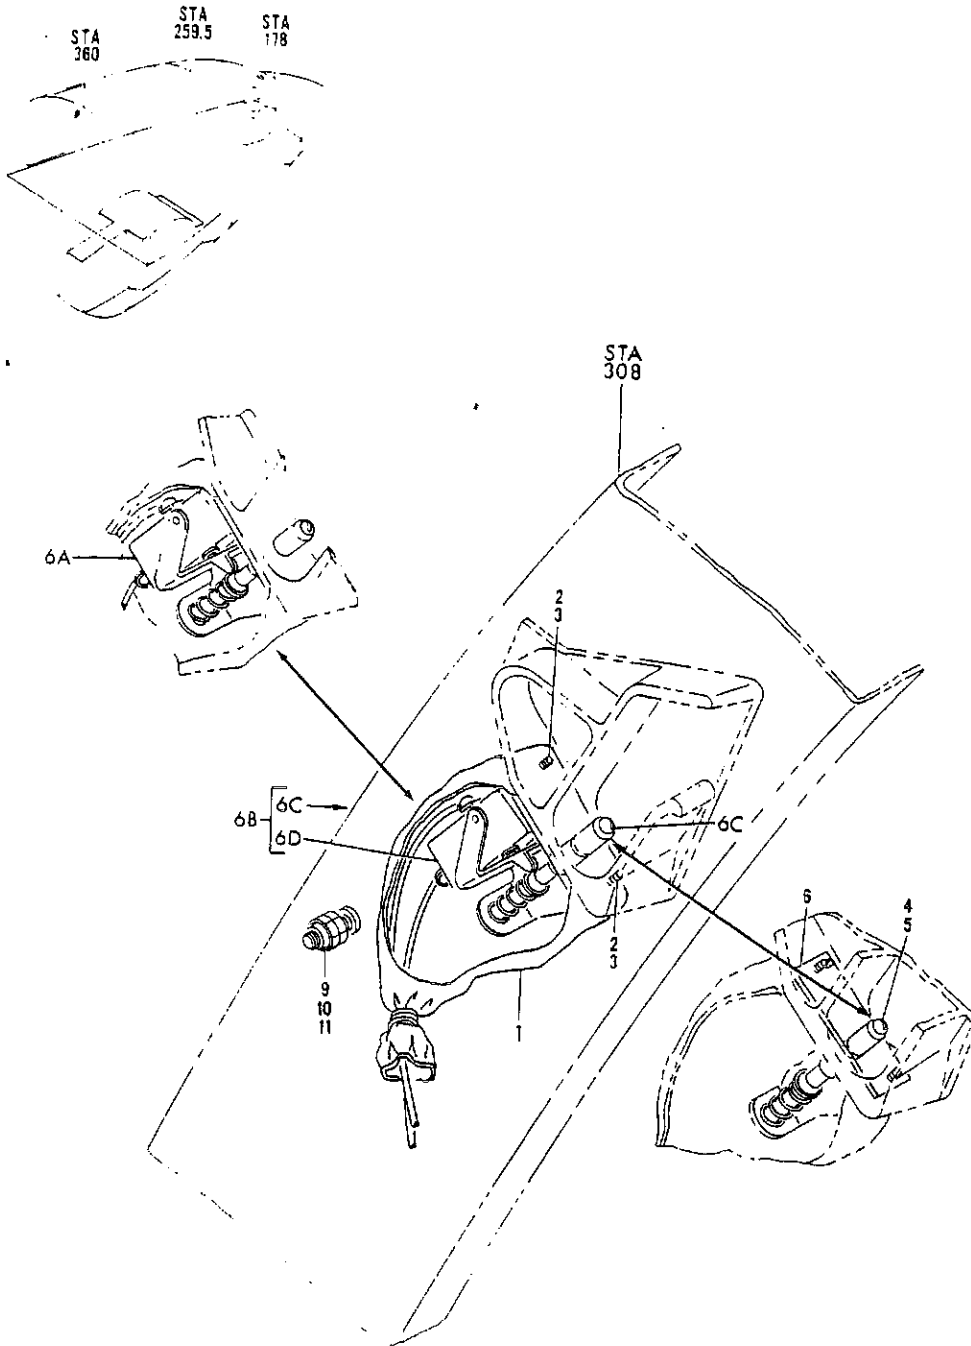


FIGURE 3. SWITCH INSTL, FORWARD ENTRY DOOR

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
3	69-17023	SWITCH INSTL, FORWARD ENTRY DOOR WARNING (SEE 24-3, . . . FIG. 1A, ITEM 19, 24-3, FIG. 18, ITEM 18 AND 24-3, FIG. 1C, ITEM 17)								RF
1	69-17023-1	. COVER, FORWARD ENTRY DOOR WARNING SWITCH.								1
2	MS24677-6	. SCREW (OPTIONAL MS24677-7)								2
2	MS24677-7	. SCREW (OPTIONAL TO MS24677-6)								2
3	MS35338-41	. WASHER.								2
4	NAS601-5	. SCREW								AR
5	MS35338-41	. WASHER.								AR
6	66-36034	. SHIM, LAMINATED								AR
6A	C2-1021-1	. SWITCH, INTERLOCK (V81640).								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

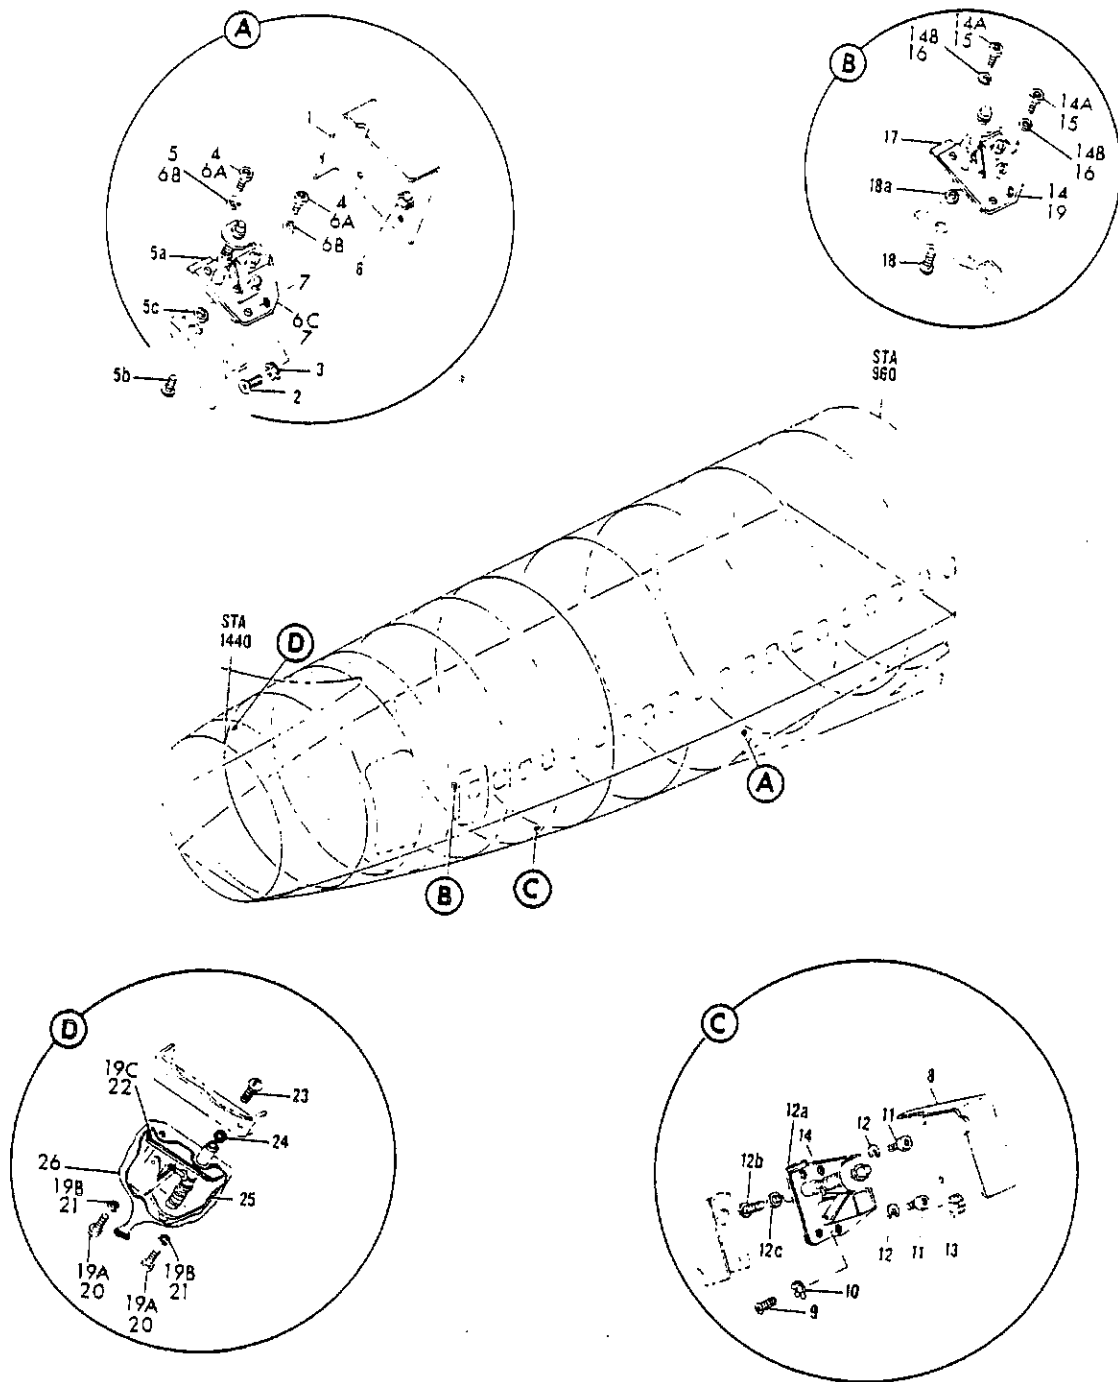


FIGURE 4. SWITCH INSTL, CENTER CARGO, AFT CARGO, AFT GALLEY AND AFT ENTRY DOOR

BOEING **707** Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
4			SWITCH INSTL, CENTER CARGO, AFT CARGO, AFT GALLEY AND AFT ENTRY DOOR		
	69-17055		SWITCH INSTL, CENTER CARGO DOOR WARNING (SEE 24-3, . FIG. 3, ITEM 5)		RF
1	63-1354-1		COVER ASSY, DOOR SWITCH		1
2	NAS514P632-4		ATTACHING PARTS		2
3	AN936D6		SCREW		2
			WASHER		
4	BACS12AE4		SCREW		2
			(OPTIONAL BACS12AE6 WITH C2-38)		
4	BACS12AE6		SCREW, (USED WITH C2-38)		2
			(OPTIONAL TO BACS12AE4)		
5	AN935-6		WASHER		2
5A	66-36034		SHIM, LAMINATED (USED WITH C2-38)		AR
5B	AN515C6-5		SCREW, (USED WITH C2-38)		AR
5C	AN935-6		WASHER, (USED WITH C2-38)		AR
6	NAS557-4A		GROMMET		1
7	C2-38		SWITCH, INTERLOCK (V81640)		1
			(OPTIONAL AND FOR REPLACEMENT ORDER C2-1021-1 (V81640))		
7	C2-1021-1		SWITCH, INTERLOCK (V81640)		1
			(OPTIONAL TO AND REPLACEMENT FOR C2-38 (V81640), 76-6001 (V04426))		
7	76-6001		SWITCH, (V04426)		1
			(OPTIONAL AND FOR REPLACEMENT ORDER C2-1021-1 (V81640))		
	69-47079		SWITCH INSTL, AFT CARGO DOOR WARNING (SEE 24-3, FIG. 3, ITEM 6)		RF
8	63-1354-1		COVER ASSY, DOOR SWITCH		1
			ATTACHING PARTS		
9	NAS514P632-4		SCREW		2
10	AN936D6		WASHER		2
			SCREW		2
			WASHER		2
12A	66-36034		SHIM, LAMINATED (USED WITH C2-38)		AR
12B	AN515C6-5		SCREW, (USED WITH C2-38)		AR
12C	AN935-6		WASHER, (USED WITH C2-38)		AR
13	NAS557-4A		GROMMET		1
14	C2-38		SWITCH, INTERLOCK (ELECTRO SNAP)		1
			(OPTIONAL AND FOR REPLACEMENT ORDER C2-1021-1 (V81640))		
14	C2-1021-1		SWITCH, INTERLOCK (V81640)		1
			(OPTIONAL TO AND REPLACEMENT FOR C2-38 (ELECTRO SNAP))		
	69-44018		SWITCH INSTL, AFT GALLEY DOOR (SEE 24-3, FIG. 3, . . . ITEM 7)		RF
15	BACS12AE4		SCREW		2
			(OPTIONAL BACS12AE6 WITH C2-38)		
15	BACS12AE6		SCREW, (USED WITH C2-38)		2
			(OPTIONAL TO BACS12AE4)		
16	AN935-6		WASHER		2
17	66-36034		SHIM, WARNING LAMINATED (USED WITH C2-38)		AR
18	AN515C6-5		SCREW, (USED WITH C2-38)		AR
18A	AN935-6		WASHER, (USED WITH C2-38)		AR
19	C2-38		SWITCH, INTERLOCK (V81640)		1
			(OPTIONAL AND FOR REPLACEMENT ORDER C2-1021-1 (V81640))		
19	C2-1021-1		SWITCH, INTERLOCK (V81640)		1
			(OPTIONAL TO AND REPLACEMENT FOR C2-38 (V81640))		
	69-44019		SWITCH INSTL, AFT ENTRY DOOR (SEE 24-3, FIG. 3, ITEM 8)		RF
20	BACS12AE4		SCREW		2
			(OPTIONAL BACS12AE6 WITH C2-38)		
20	BACS12AE6		SCREW, (USED WITH C2-38)		2
			(OPTIONAL TO BACS12AE4)		
21	AN935-6		WASHER		2
22	66-36034		SHIM, WARNING LAMINATED (USED WITH C2-38)		AR
23	AN515C6-5		SCREW, (USED WITH C2-38)		AR
24	AN935-6		WASHER, (USED WITH C2-38)		AR

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
4	25	C2-38	. . SWITCH, INTERLOCK (V81640). (OPTIONAL AND FOR REPLACEMENT ORDER C2-1021-1 (V81640))								1
	25	C2-1021-1	. . SWITCH, INTERLOCK (V81640). (OPTIONAL TO AND REPLACEMENT FOR C2-38 (V81640))								1
	26	69-44019-1	. . COVER, AFT ENTRY DOOR SWITCH.								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

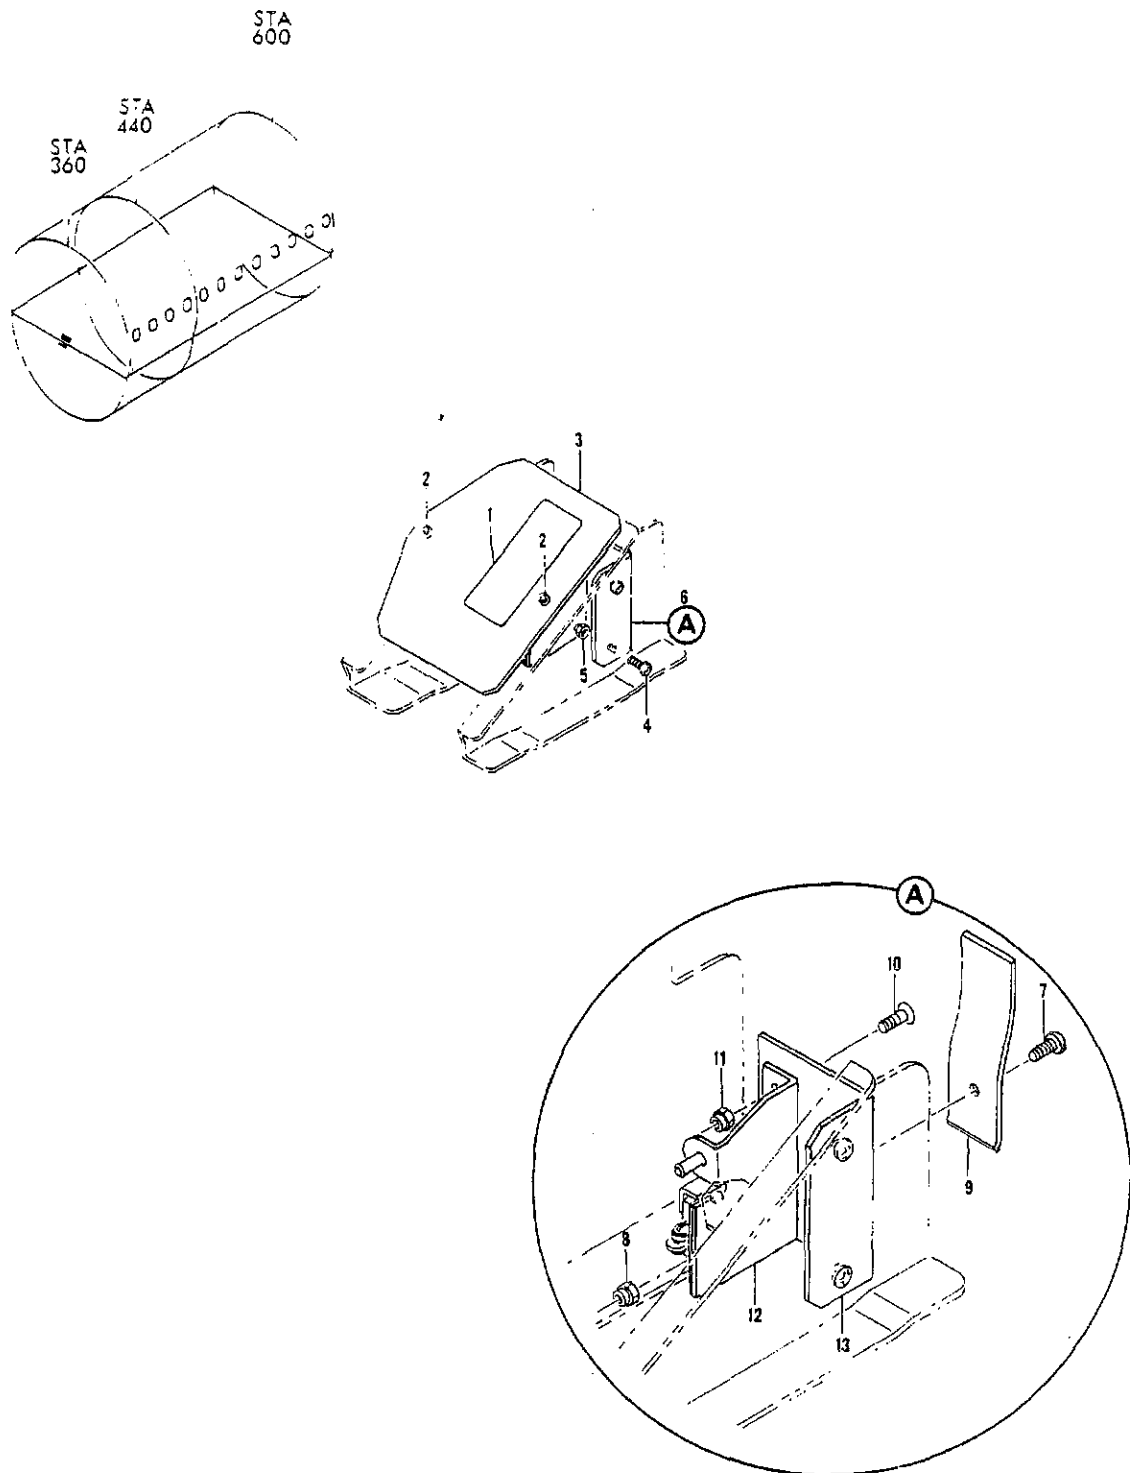


FIGURE 5. SWITCH INSTL, RADIO ACCESS DOOR



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
5	69-47056	SWITCH INSTL, RADIO ACCESS DOOR (SEE 24-3, FIG. 2, . . . ITEM 13)		RF
1	BACM10S10-3RV	. MARKER, ALUMINUM FOIL RADIO ACCESS DOOR WARNING . . . SWITCH		1
2	NAS603-6P	. SCREW		2
3	63-1755-1	. COVER, RADIO ACCESS DOOR SWITCH		1
4	NAS603-6P	. SCREW		2
5	NAS679A3W	. NUT		2
6	69-47056-1	. SWITCH ASSY, RADIO ACCESS DOOR.		1
7	NAS603-5P	. . SCREW		1
8	NAS679A06W	. . NUT		1
9	63-1777	. . SPRING, RADIO ACCESS DOOR SWITCH.		1
10	NAS514P632-4	. . SCREW		1
11	NAS679A06W	. . NUT		1
12	C2-38	. . SWITCH, INTERLOCK (V81640). (OPTIONAL AND FOR REPLACEMENT ORDER C2-1021-1 (V81640))		1
12	C2-1021-1	. . SWITCH, INTERLOCK (V81640). (OPTIONAL TO AND REPLACEMENT FOR C2-38 (V81640))		1
13	63-1755-2	. . ANGLE, RADIO ACCESS DOOR SWITCH SUPPORT		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

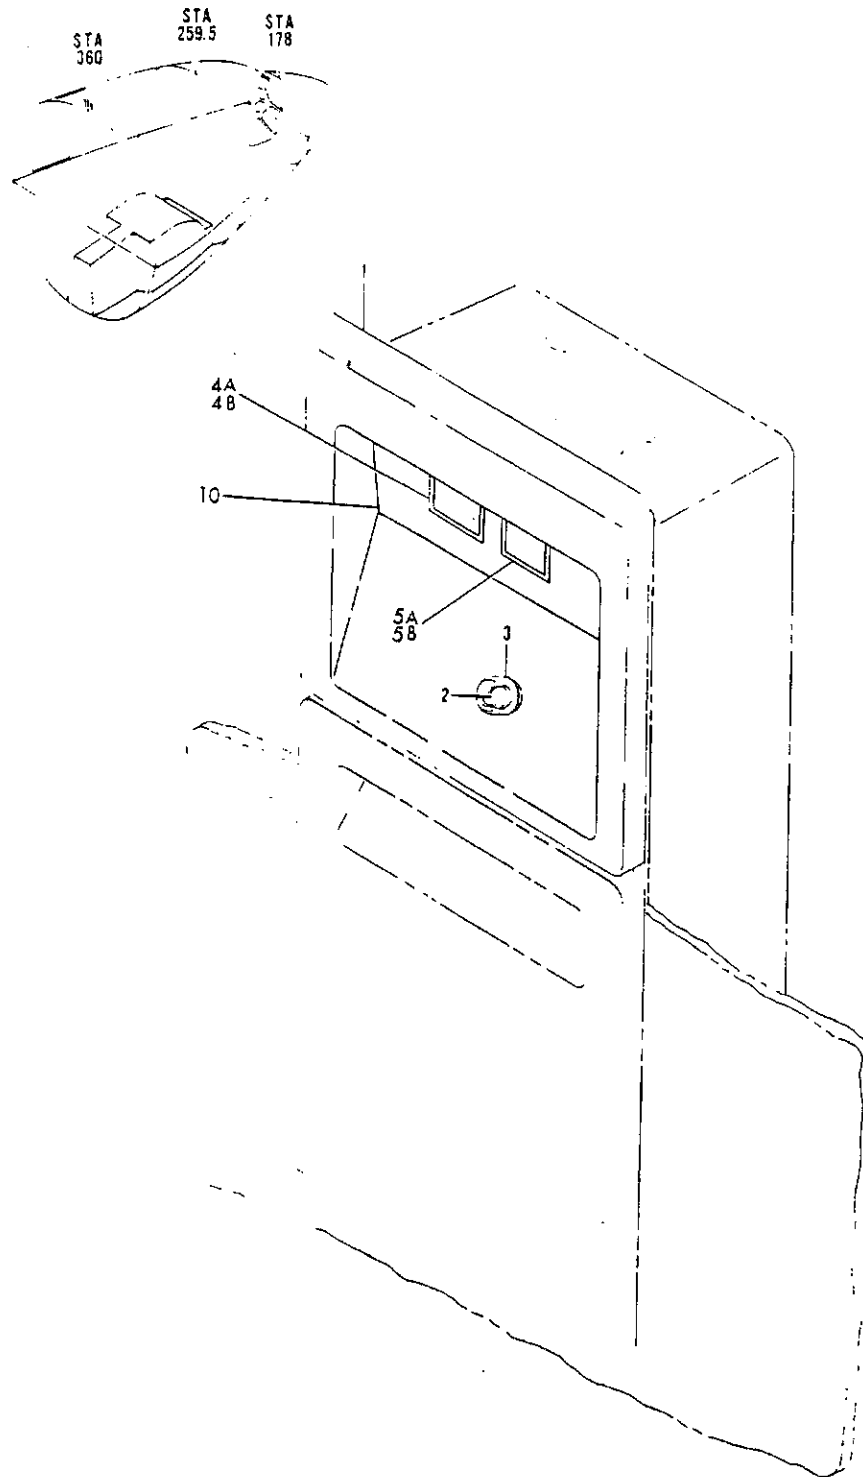


FIGURE 10. PANEL INSTL, CARGO ATTENDANTS (DOORS (DOOR WARNING SYSTEM) ONLY)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF	UNITS
			FROM TO	PER ASSY
R R R R R R R R R R	10 65-36748-19	PANEL INSTL, CARGO ATTENDANTS (DOORS (DOOR WARNING. . . SYSTEM) ONLY) (SEE 25-18, FIG. 11B, ITEM 30, 25-18, FIG. 14M, ITEM 47, 25-18, FIG. 15, ITEM 45, 25-18, FIG. 15A, ITEM 50, 25-18, FIG. 15G, ITEM 48, 25-18, FIG. 15H, ITEM 40, 25-18, FIG. 16, ITEM 46, 25-18, FIG. 16G, ITEM 47, 25-18, FIG. 16H, ITEM 50, 25-18, FIG. 16K, ITEM 50, 25-18, FIG. 16M, ITEM 49, 25-18, FIG. 16N, ITEM 49, 25-18, FIG. 17C, ITEM 54, 25-18, FIG. 17D, ITEM 58, 25-18, FIG. 17F, ITEM 52, 25-18, FIG. 17H, ITEM 40, 25-18, FIG. 17J, ITEM 41, 25-18, FIG. 17K, ITEM 52, 25-18, FIG. 17L, ITEM 52, 25-18, FIG. 17M, ITEM 54, 25-18, FIG. 17N, ITEM 40, 25-18, FIG. 17P, ITEM 50, 25-18, FIG. 17Q, ITEM 38, 25-18, FIG. 17R, ITEM 38, 25-18, FIG. 17S, ITEM 47, 25-18, FIG. 17T, ITEM 47, 25-18, FIG. 17V, ITEM 50, 25-18, FIG. 17W, ITEM 42, 25-18, FIG. 17X, ITEM 47, 25-18, FIG. 17Y, ITEM 55 AND 25-18, FIG. 17Z, ITEM 47)	0150	RF
	65-36748-30	PANEL INSTL, CARGO ATTENDANTS (DOORS (DOOR WARNING. . . SYSTEM) ONLY) (SEE 25-10, FIG. 33D, ITEM 47)	5199	RF
	1 65-36748-4	. COVER ASSY, (DOORS ONLY).	0150	RF
	1 65-36748-29	. COVER ASSY, (DOORS ONLY).	5199	RF
	2 ST8130-4ARP	. . LIGHT, INDICATOR (V81590)	5199	1
	3 MS25231-313	. . LAMP.	5199	1
		. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA		
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

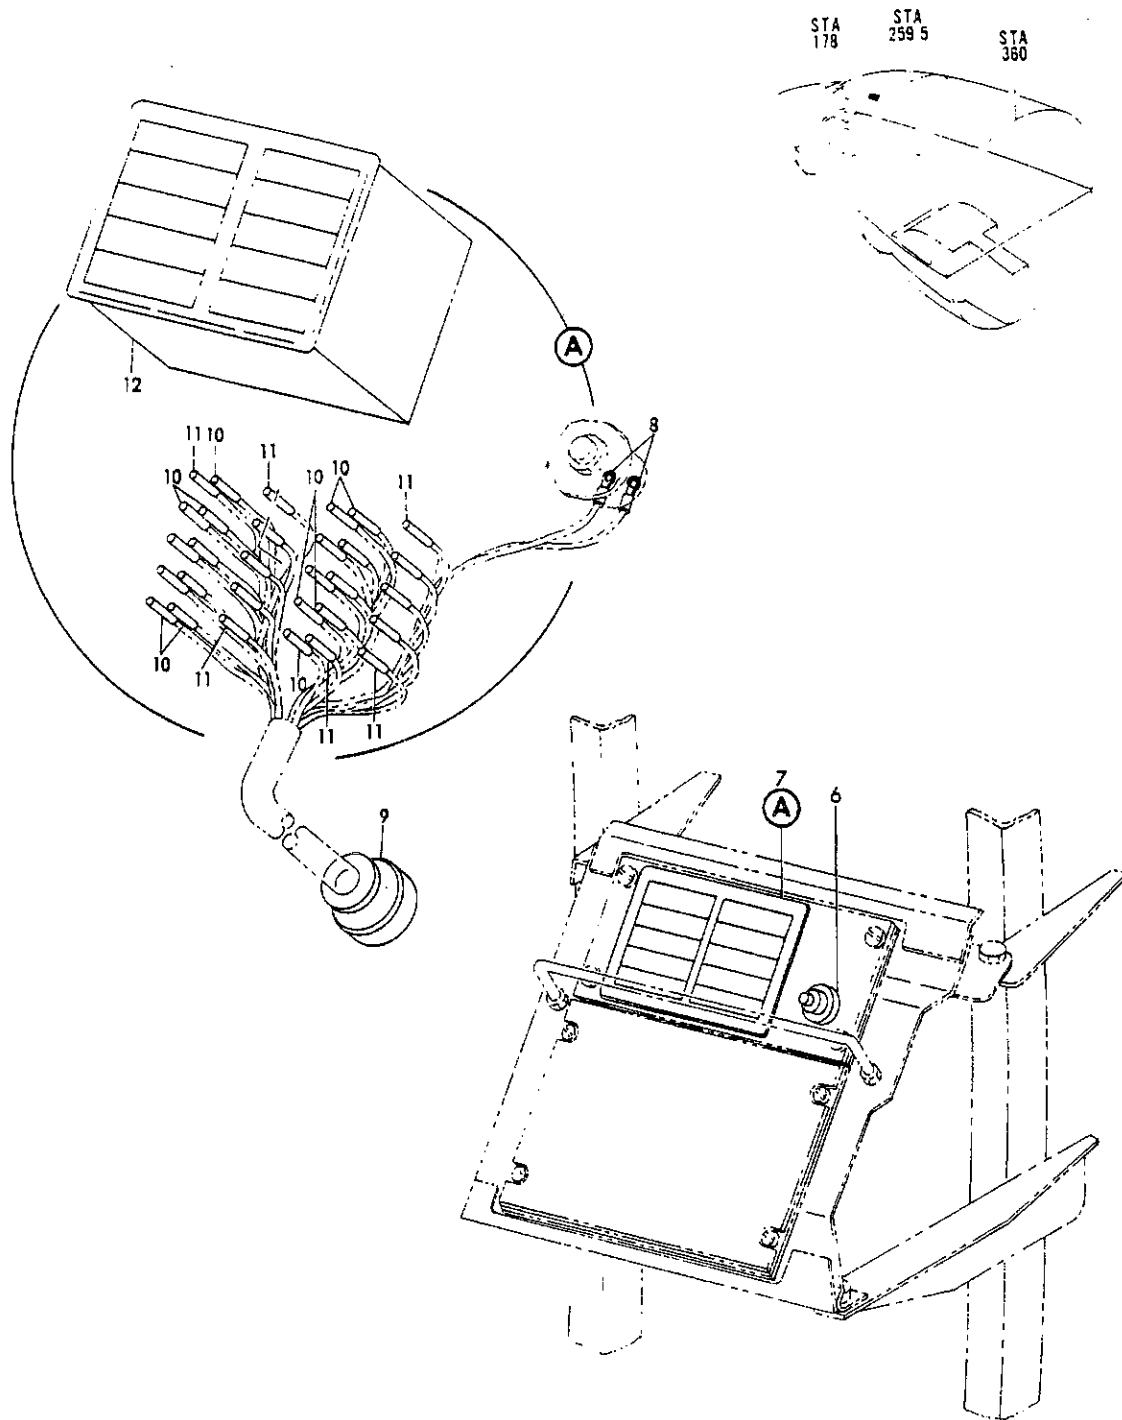


FIGURE 20. PANEL INSTL, COPILOTS AUXILIARY EQUIPMENT (DOORS ONLY)

 BOEING
707
PARTS CATALOG (MAINTENANCE)

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R R	20	65-64127-2	PANEL INSTL, COPILOTS AUXILIARY EQUIPMENT (DOORS. ONLY) (DELETED BY MOD 7211.019-225) (SEE 25-5, FIG. 14E, ITEM 3)	0150 RF
		391-34-50-57974-001	PANEL INSTL, COPILOTS AUXILIARY EQUIPMENT (DOORS. ONLY) (VS2500) (65-64127-2 MODIFIED BY MOD 7211.019-225) (SEE 25-5, FIG. 14E, ITEM 3)	0150 RF
		69-33354-5	. PANEL ASSY, DOOR WARNING ANNUNCIATOR (DOORS ONLY) . . .	0150 RF
	6	D201W3JA	. . SWITCH, (V81640).	0150 1
	7	69-26820-1	. . ANNUNCIATOR ASSY.	0150 1
	8	36151	. . . TERMINAL, (V00779).	0150 2
	9	69-6R22-14P100	. . . PLUG, (AMERICAN PHENOLIC CORP). (OPTIONAL MS3456W22-14P)	0150 1
	9	MS3456W22-14P	. . . PLUG. (OPTIONAL TO 69-6R22-14P100)	0150 1
	10	BACT12A14	. . . TERMINAL.	0150 18
	11	BACT12A18	. . . TERMINAL.	0150 12
	12	205-1035-3	. . . PANEL, (V96182)	0150 1
			. FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	0150
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

RAF
NOV 21/00

52-05-20

DETAILED PARTS LIST
52-05-20
PAGE 1

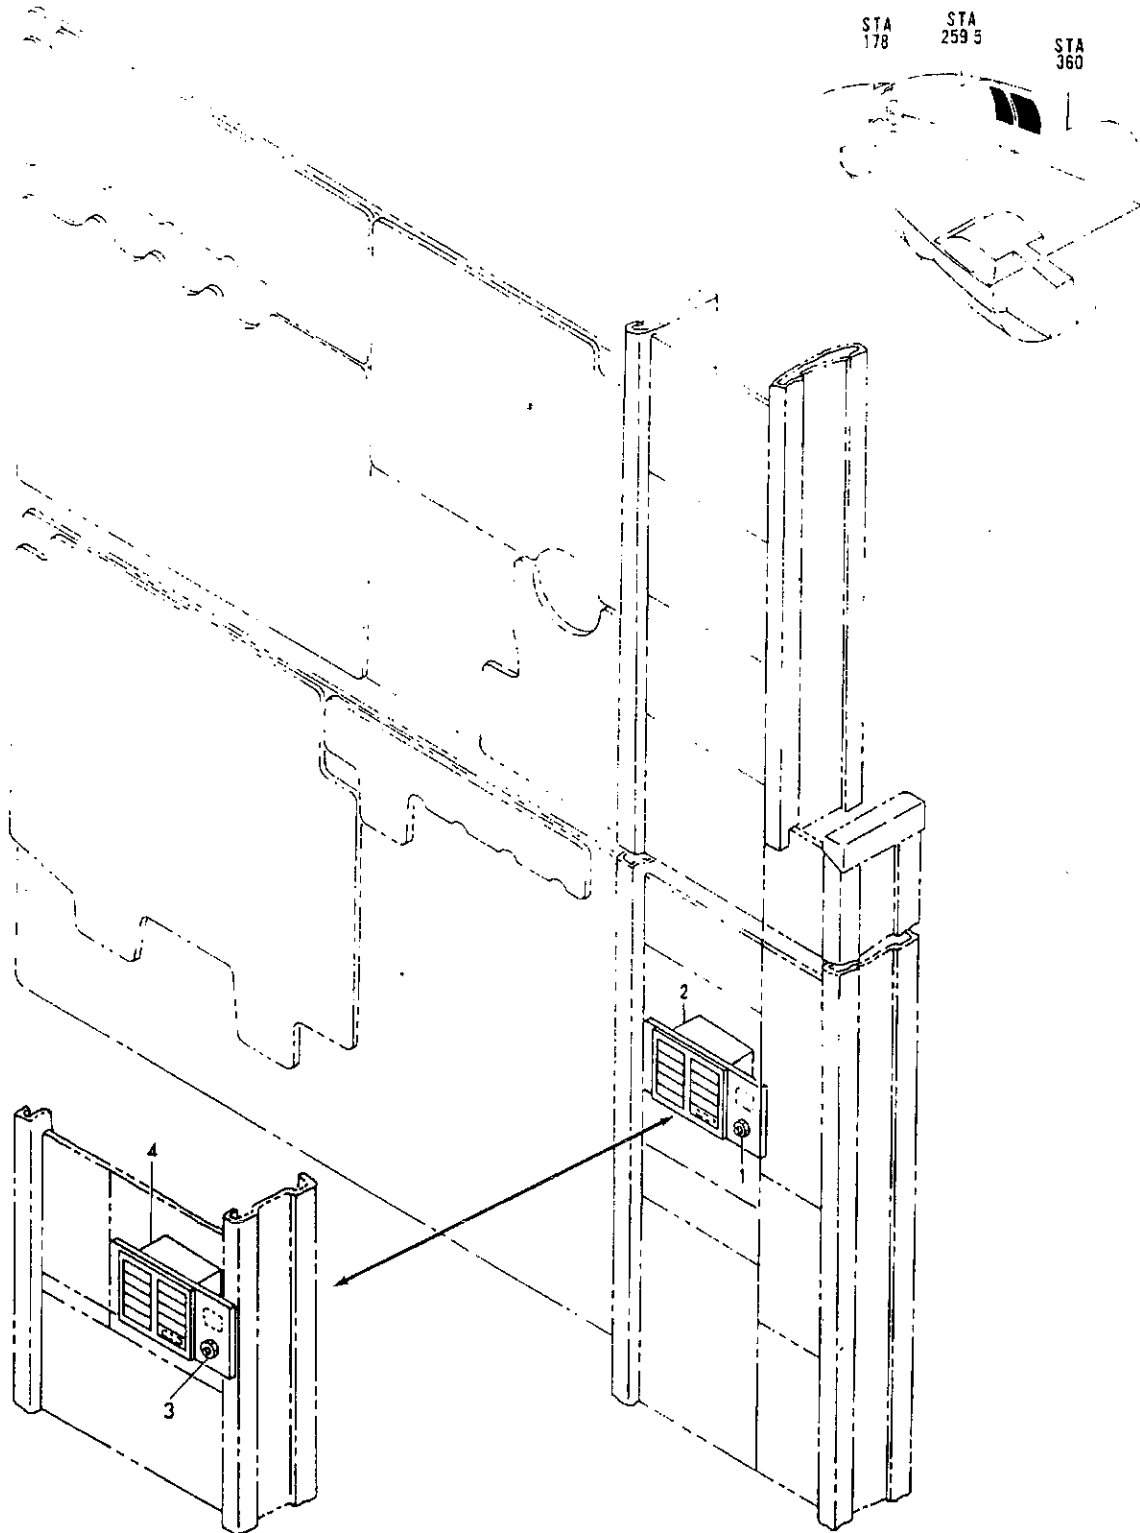


FIGURE 24. PANEL INSTL, FLIGHT ENGINEERS AUXILIARY (DOORS ONLY)

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7 NOMENCLATURE	EFF	UNITS
			FROM TO	PER ASSY
24	65-58957-1	PANEL INSTL, FLIGHT ENGINEERS AUXILIARY (DOORS ONLY). (SEE 25-1, FIG. 18, ITEM 8, 25-1, FIG. 1F, ITEM 7, 25-1, FIG. 2D, ITEM 6 AND 25-1, FIG. 2E, ITEM 83)	5199	RF
	69-46160-10	MODULE ASSY, DOOR WARNING ANNUNCIATOR (M456) (DOORS ONLY)	5199	RF
	1 D20011-01	SWITCH, (V81640).	5199	1
	2 205-1035-11	ANNUNCIATOR ASSY, (V96182).	5199	1
		FOR REFERENCE TO OTHER PANEL DETAILS, SEE NHA	5199	
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

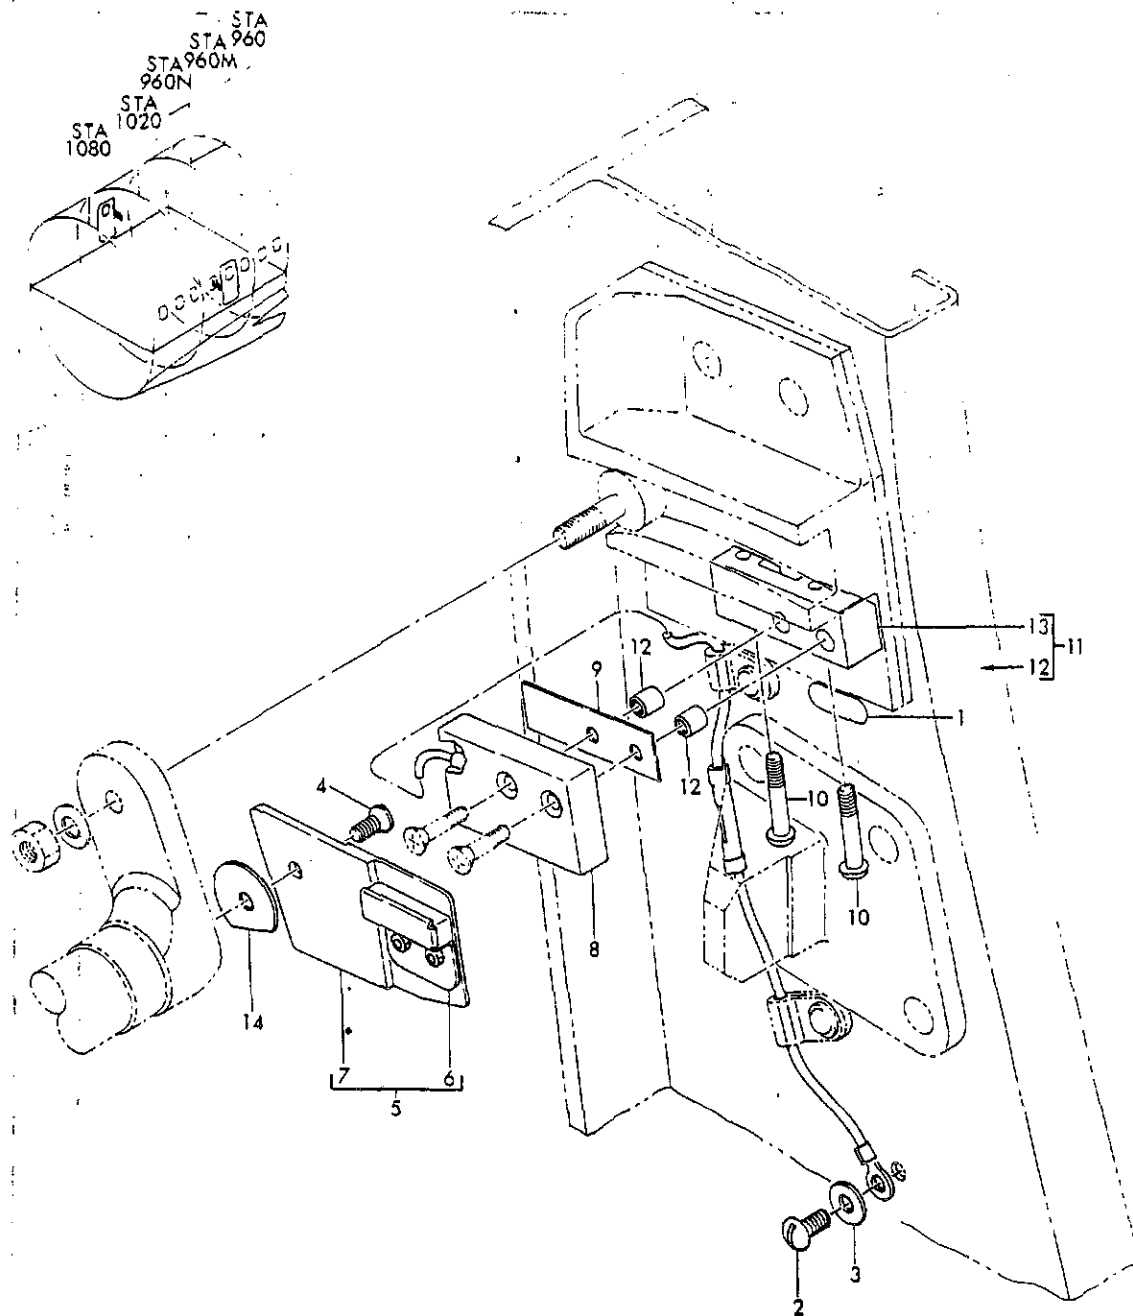


FIGURE 26. SWITCH INSTL, EMERGENCY EXIT DOOR WARNING KIT



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
26	65-74472-1	SWITCH INSTL, STATION 990 EMERGENCY EXIT DOOR KIT (LH) (SEE 24-03, FIG. 3, ITEM 36)	5199	RF
	65-74472-2	SWITCH INSTL, STATION 990 EMERGENCY EXIT DOOR KIT (RH) (SEE 24-03, FIG. 3, ITEM 36A)	5199	RF
1	BAC27CEE543	. DECAL, S893 (LH).	5199	1
1	BAC27CEE544	. DECAL, S894 (RH).	5199	1
2	NAS603-10P	. SCREW	5199	1
3	NAS1197-10	. WASHER.	5199	1
4	NAS514P1032-6	. SCREW	5199	1
5	65-74472-3	. ACTUATOR ASSY, ARM.	5199	1
6	F74741-2	. BAR ASSY, SENSED MAGNET (V97424). (BAC SPEC DWG 10-61355-5)	5199	1
		ATTACHING PARTS		
	NAS514P440-4	. SCREW	5199	2
	BACN10JCO4	. NUT	5199	2
		-----*		
7	69-58062-1	. ARM	5199	1
8	F74741-1	. SWITCH, REED (V97424) (BAC SPEC DWG 10-61355-4)	5199	1
		ATTACHING PARTS		
	BACB30LU06-5	. BOLT.	5199	2
		-----*		
9	BACS47G9A29	. SHIM.	5199	AR
10	BACB30LK06-8	. BOLT.	5199	2
11	69-58062-2	. BLOCK ASSY, MOUNTING.	5199	1
12	MS21208C06-10	. INSERT.	5199	2
13	69-58062-3	. BLOCK	5199	1
14	69-58062-4	. SHIM.	5199	AR
MISSING ITEM NUMBERS ARE NOT APPLICABLE				