

BOEING 707 PARTS CATALOG (MAINTENANCE)

CHAPTER 54

NACELLES

TABLE OF CONTENTS

SECTION

FIGURE

54-01 NACELLE STRUTS


DRAIN INSTL, FAN ENGINE	31
FITTING INSTL, NACELLE FAIRING	33
PLUMBING INSTL, INBOARD NACELLE STRUT NO. 2 STRUT DRAIN	29A
PLUMBING INSTL, INBOARD NACELLE STRUT NO. 3 STRUT DRAIN	29B
PLUMBING INSTL, OUTBOARD NACELLE STRUT NO. 1 STRUT DRAIN	14A
PLUMBING INSTL, OUTBOARD NACELLE STRUT NO. 4 STRUT DRAIN	15A
RECEPTACLE INSTL, NACELLE FAIRING AFT LATCH PIN	32
SPAR INSTL, INBOARD STRUT LOWER	25
SPAR INSTL, OUTBOARD STRUT LOWER	10
STRUCTURE ASSY, INBOARD NACELLE STRUT	24
STRUCTURE ASSY, OUTBOARD NACELLE STRUT	9
STRUT ASSY, NO. 1 OUTBOARD NACELLE EQUIPMENT	6B
STRUT ASSY, NO. 1 OUTBOARD NACELLE EQUIPMENT	6C
STRUT ASSY, NO. 2 INBOARD NACELLE EQUIPMENT	21B
STRUT ASSY, NO. 2 INBOARD NACELLE EQUIPMENT	21C
STRUT ASSY, NO. 3 INBOARD NACELLE EQUIPMENT	21B
STRUT ASSY, NO. 3 INBOARD NACELLE EQUIPMENT	21C
STRUT ASSY, NO. 4 OUTBOARD NACELLE EQUIPMENT	6B
STRUT ASSY, NO. 4 OUTBOARD NACELLE EQUIPMENT	6C
STRUT INSTL, NO. 1 OUTBOARD NACELLE	3
STRUT INSTL, NO. 2 INBOARD NACELLE	18
STRUT INSTL, NO. 3 INBOARD NACELLE	18
STRUT INSTL, NO. 4 OUTBOARD NACELLE	3

54-02 NACELLE ACCESS PANELS AND SKINS

DOOR INSTL, OUTBOARD NACELLE STRUT	11
FAIRING INSTL, INBOARD STRUT SADDLE	11
FAIRING INSTL, OUTBOARD STRUT SADDLE	11
PANEL INSTL, NO. 1 AND NO. 4 OUTBOARD NACELLE STRUT TO WING ACCESS	2
PANEL INSTL, NO. 2 AND 3 INBOARD NACELLE STRUT TO WING ACCESS	3
PANEL INSTL, NO. 2 INBOARD NACELLE STRUT TO WING LH SIDE ACCESS	4
PANEL INSTL, NO. 3 INBOARD NACELLE STRUT TO WING RH SIDE ACCESS	4
SKIN INSTL, INBOARD NACELLE STRUT LH SIDE	10
SKIN INSTL, INBOARD NACELLE STRUT RH SIDE	10
SKIN INSTL, OUTBOARD NACELLE STRUT LH SIDE	7
SKIN INSTL, OUTBOARD NACELLE STRUT RH SIDE	7
STRAP INSTL, INBOARD STRUT ACCESS PANEL TO FAIRING ATTACH	14
STRAP INSTL, OUTBOARD STRUT ACCESS PANEL TO FAIRING ATTACH	14

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 01
NACELLE STRUTS

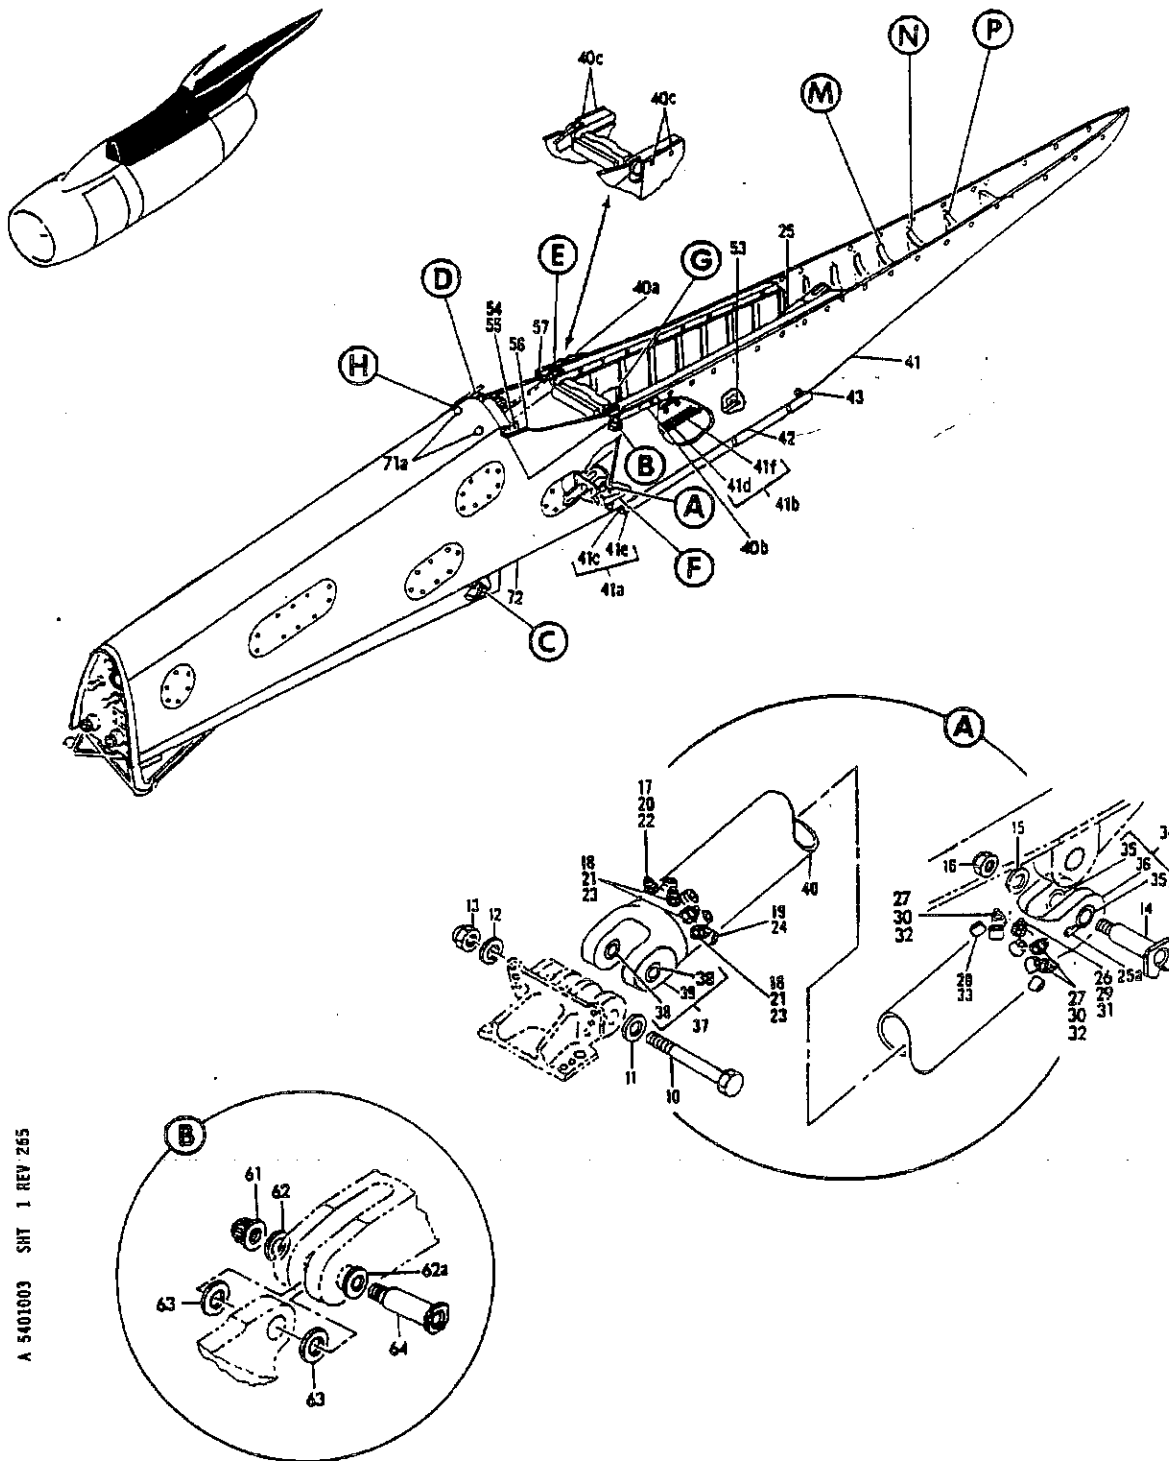

A 5401003 SHT 1 REV 265

FIGURE 3. STRUT INSTL. NO.1 AND NO.4 OUTBOARD MACELLE (SHEET 1)

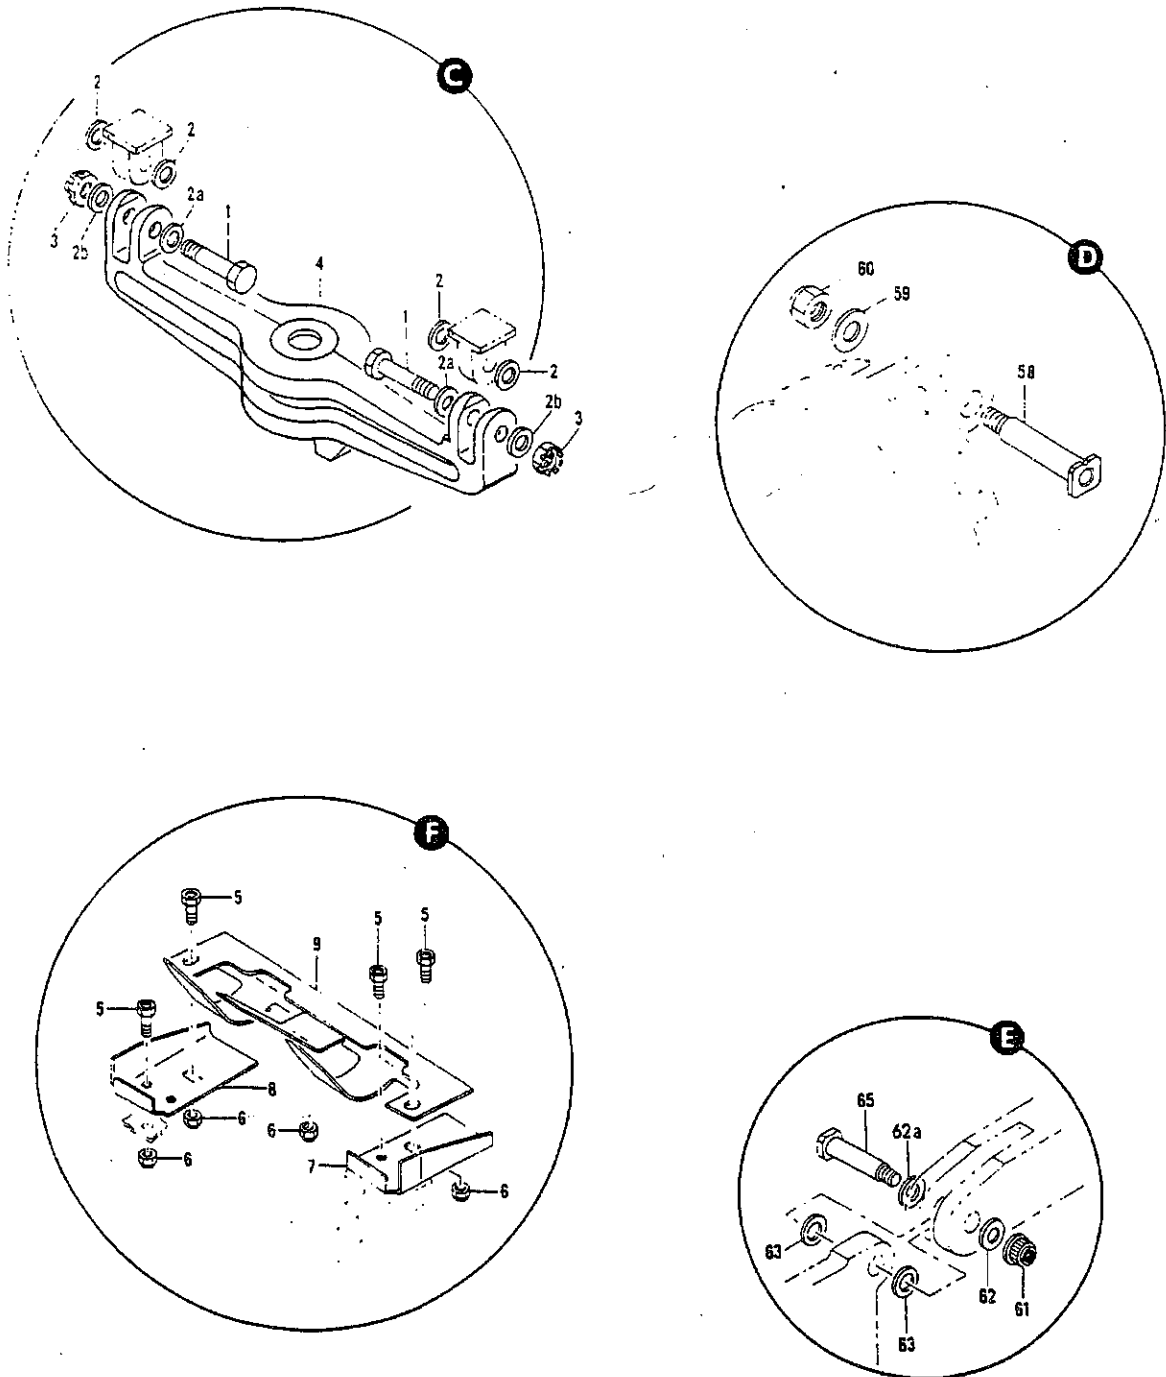


FIGURE 3. STRUT INSTL. NO. 1 AND 4 OUTBOARD NACELLE (SHEET 2)

NOV 21/90

54-01-3

DETAILED PARTS LIST
54-01-3
PAGE 1



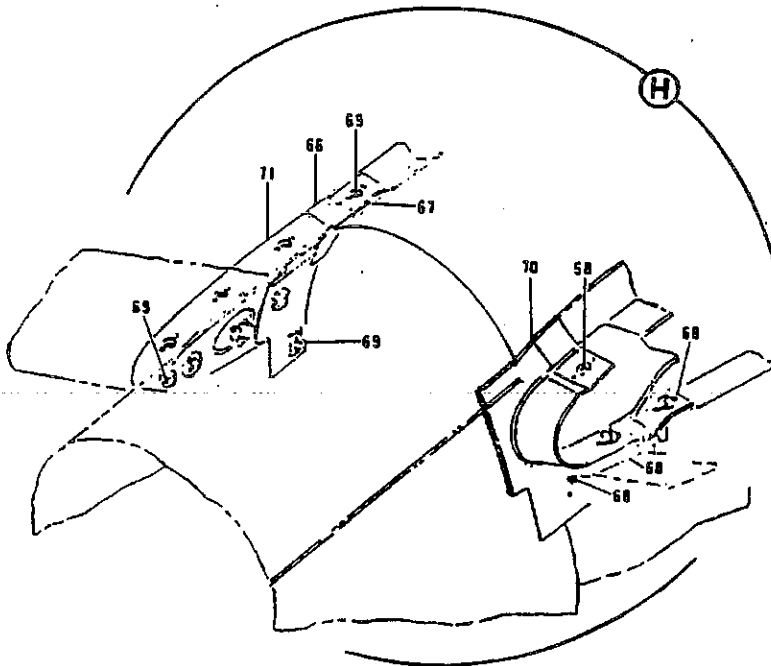


FIGURE 3. STRUT INSTL. NO.1 AND NO.4 OUTBOARD NACELLE (SHEET 3)

A 5401003 SHY 3 REV 265

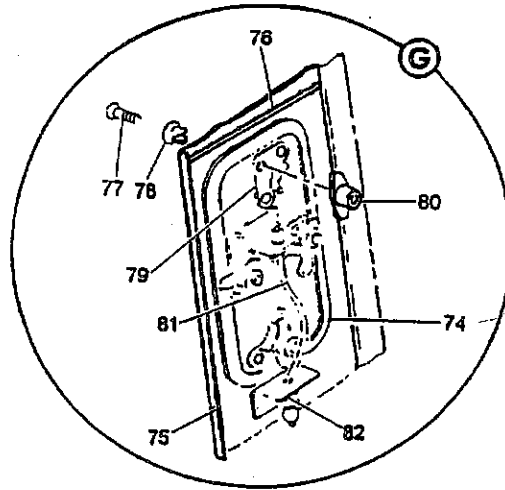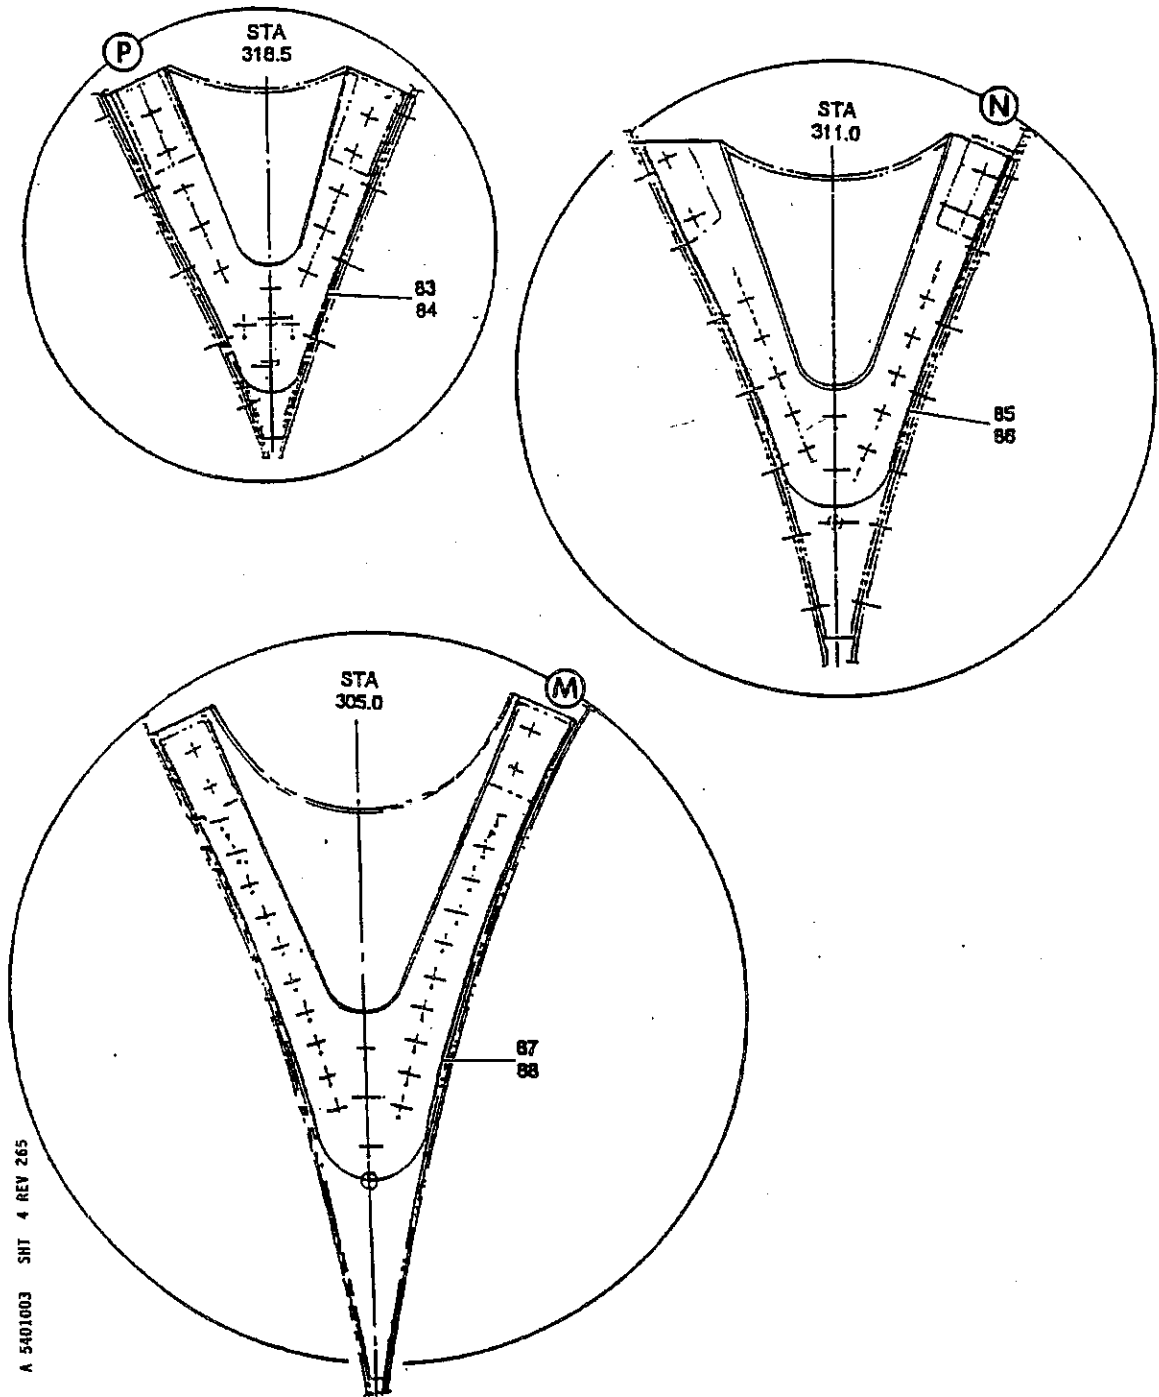

A 5401003 SHT 4 REV 265

FIGURE 3. STRUT INSTL. NO.1 AND NO.4 OUTBOARD NACELLE (SHEET 4)

NOV 21/94

54-01-3

DETAILED PARTS LIST
 54-01-3
 PAGE 3



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3	65-10617-37	STRUT INSTL, NO. 1 OUTBOARD NACELLE	5199	1
	65-10617-7	STRUT INSTL, NO. 1 OUTBOARD NACELLE	0150	1
	65-10617-38	STRUT INSTL, NO. 4 OUTBOARD NACELLE	5199	1
	65-10617-8	STRUT INSTL, NO. 4 OUTBOARD NACELLE	0150	1
1	66-1928-1	. BOLT, REAR ENGINE MOUNT		2
2	66-1995	. SHIM, AFT ENGINE MOUNT		AR
		(OPTIONALS 66-1995-1, -2, -3)		
2	66-1995-1	. SHIM, AFT ENGINE MOUNT		AR
		(OPTIONAL TO 66-1995, -2, -3)		
2	66-1995-2	. SHIM, AFT ENGINE MOUNT		AR
		(OPTIONAL TO 66-1995, -1, -3)		
2	66-1995-3	. SHIM, AFT ENGINE MOUNT		AR
		(OPTIONAL TO 66-1995, -1, -2)		
2A	AN960-816	. WASHER		AR
2B	AN960-816	. WASHER, (OPTIONAL AN960-816L)		AR
3	AN320-8	. NUT		2
4	65-11633-4	. BRACKET, REAR ENGINE MOUNT SUPPORT		1
5	NAS1103-3W	. BOLT		6
6	NAS679A3W	. NUT		6
7	66-2044-3	. CLIP, OUTBOARD STRUT LOWER SPAR SEALING (LH)		1
8	66-2044-4	. CLIP, OUTBOARD STRUT LOWER SPAR SEALING (RH)		1
9	66-2152	. SEAL ASSY, OUTBOARD NACELLE STRUT		1
10	NAS1116-90W	. BOLT		1
11	AN960D1616	. WASHER		1
12	AN960-1616L	. WASHER		1
13	NAS1022A16	. NUT		1
14	65-23413-20	. BOLT, OUTBOARD STRUT STATIC PIN JOINT		1
15	60-6961-2	. WASHER, ENGINE NACELLE STRUT INSTALLATION	0150	1
15	60-6961-2	. WASHER, ENGINE NACELLE STRUT INSTALLATION	5199	1
		(OPTIONAL AND FOR REPLACEMENT ORDER 60-6961-6)		
15	60-6961-6	. WASHER, ENGINE NACELLE STRUT INSTALLATION	5199	1
		(OPTIONAL TO AND REPLACEMENT FOR 60-6961-2)		
16	BACN108Y516	. NUT		1
17	NAS1106-13W	. BOLT		6
18	NAS1107-13W	. BOLT		3
19	BACB30AL12-9	. BOLT		9
20	AN960PD616	. WASHER		6
21	AN960PD716	. WASHER		3
22	NAS679A6	. NUT		6
23	NAS679A7	. NUT		3
24	NAS1080D12	. COLLAR		9
25	69-11796-2	. BRACE ASSY, OUTBOARD NACELLE STRUT DIAGONAL		1
25A	66-11438	. . BLOCK, NACELLE STRUT UPPER DIAGONAL BRACE FITTING		1
26	NAS1106-11W	. BOLT		6
27	NAS1107-11W	. BOLT		3
28	BACB30AL12-9	. BOLT		9
29	AN960PD616	. WASHER		6
30	AN960PD716	. WASHER		3
31	NAS679A6	. NUT		6
32	NAS679A7	. NUT		3
33	NAS1080D12	. COLLAR		9
34	69-2018-2	. . FITTING ASSY, OUTBOARD NACELLE STRUT DIAGONAL BRACE		1
		UPPER		
35	65-27303-10	. . . BUSHING, NACELLE STRUT OUTBOARD ATTACHMENT		2
		FITTING		
36	69-2018-1	. . . FITTING, OUTBOARD NACELLE STRUT DIAGONAL BRACE		1
		UPPER		
37	65-13761-2	. . FITTING ASSY, OUTBOARD NACELLE STRUT DIAGONAL BRACE		1
		LOWER		
38	65-27303-22	. . . BUSHING, NACELLE STRUT OUTBOARD ATTACHMENT		2
		FITTING		
39	65-13761-1	. . . FITTING, OUTBOARD NACELLE STRUT DIAGONAL BRACE		1
		LOWER		
40	69-11799	. . TUBE, OUTBOARD NACELLE STRUT DIAGONAL BRACE		1
40A	65-60900-3	. STRAP INSTL, STRUT ACCESS PANEL TO FAIRING ATTACH		1
		(SEE 54-2, FIG. 14)		
40B	65-60900-4	. STRAP INSTL, STRUT ACCESS PANEL TO FAIRING ATTACH		1
		(SEE 54-2, FIG. 14)		
41	65-10619-39	. FAIRING ASSY, OUTBOARD NACELLE STRUT TRAILING EDGE		1
		(NACELLE NO. 1)		
41	65-10619-40	. FAIRING ASSY, OUTBOARD NACELLE STRUT TRAILING EDGE		1
		(NACELLE NO. 4)		
		ATTACHING PARTS		
	NAS517-3-3	. SCREW		38

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
3 42	5-85636-3109	. . FAIRING ASSY, NO. 1 OUTBOARD NACELLE STRUT TRAILING EDGE (NACELLE NO. 1)								1
42	5-85636-3110	. . FAIRING ASSY, NO. 4 OUTBOARD NACELLE STRUT TRAILING EDGE (NACELLE NO. 4)								1
43	60-2250-2002	. . . FITTING, DRAIN. (OPTIONAL 66-1490-2000)								1
43	66-1490-2000	. . . FITTING, DRAIN. (OPTIONAL TO 60-2250-2002)								1
	69-20000-15	. . . DOOR INSTL, OUTBOARD STRUT TRAILING EDGE ACCESS . (NACELLE NO. 1)								1
	69-20000-16	. . . DOOR INSTL, OUTBOARD STRUT TRAILING EDGE ACCESS . (NACELLE NO. 4)								1
44	69-20000-20	. . . DOOR ASSY, OUTBOARD STRUT TRAILING EDGE ACCESS								1
45	NAS514P428-B	 SCREW								4
46	66-10344-1	 NUT, NACELLE ACCESS DOOR ROTARY LATCH								4
47	66-25039	 BLOCK, NACELLE ACCESS DOOR ROTARY LATCH ANCHOR								4
48	63-9651-1	 INDICATOR, NACELLE ACCESS DOOR ROTARY LATCH .								4
50	69-20000-17	 DOOR, OUTBOARD STRUT TRAILING EDGE ACCESS . .								1
51	BACC13G333-60C	 CABLE ASSY.								1
	BACT14B3	 TERMINAL.								2
52	BACW10B1	 WASHER.								1
53	69-19001-1	. . DRAIN ASSY, NACELLE STRUT MID-SPAR FUEL (NACELLE . NO. 1) (SEE 28-7, FIG. 5)								1
53	69-19001-2	. . DRAIN ASSY, NACELLE STRUT MID-SPAR FUEL (NACELLE . NO. 4) (SEE 28-7, FIG. 5)								1
54	BACS20A5C	. SPRING.								1
55	BACS18X56	. SPACER.								1
56	5-88792-3041	. PANEL INSTL, NO. 1 OUTBOARD NACELLE STRUT TO WING LH SIDE ACCESS (NACELLE NO. 1) (SEE 54-2, FIG. 2)								1
56	5-88792-3042	. PANEL INSTL, NO. 4 OUTBOARD NACELLE STRUT TO WING RH SIDE ACCESS (NACELLE NO. 4) (SEE 54-2, FIG. 2)								1
57	5-88792-3043	. PANEL INSTL, NO. 1 OUTBOARD NACELLE STRUT TO WING RH SIDE ACCESS (NACELLE NO. 1) (SEE 54-2, FIG. 2)								1
57	5-88792-3044	. PANEL INSTL, NO. 4 OUTBOARD NACELLE STRUT TO WING LH SIDE ACCESS (NACELLE NO. 4) (SEE 54-2, FIG. 2)								1
58	65-23413-24	. BOLT, OUTBOARD STRUT STATIC PIN JOINT								1
59	60-6961-3	. WASHER, ENGINE NACELLE STRUT INSTALLATION							0150	1
59	60-6961-3	. WASHER, ENGINE NACELLE STRUT INSTALLATION (OPTIONAL AND FOR REPLACEMENT ORDER 60-6961-7)							5199	1
59	60-6961-7	. WASHER, ENGINE NACELLE STRUT INSTALLATION (OPTIONAL TO AND REPLACEMENT FOR 60-6961-3)							5199	1
60	BACN10BY512	. NUT								1
61	BACN10B12L	. NUT								2
62	AN960D1216	. WASHER.								2
63	66-1051	. SHIM, SUPPORT HANGER. (OPTIONALS 66-1051-1, -2, -3, -4 AND -5)								AR
63	66-1051-1	. SHIM, SUPPORT HANGER. (OPTIONAL TO 66-1051)								AR
63	66-1051-2	. SHIM, SUPPORT HANGER. (OPTIONAL TO 66-1051)								AR
63	66-1051-3	. SHIM, SUPPORT HANGER. (OPTIONAL TO 66-1051)								AR
63	66-1051-4	. SHIM, SUPPORT HANGER. (OPTIONAL TO 66-1051)								AR
63	66-1051-5	. SHIM, SUPPORT HANGER. (OPTIONAL TO 66-1051)								AR
63	66-1051-6	. SHIM, SUPPORT HANGER. (OPTIONALS 66-1051-7, -8, -9, -10 AND -11)								1
63	66-1051-7	. SHIM, SUPPORT HANGER. (OPTIONAL TO 66-1051-6)								1
63	66-1051-8	. SHIM, SUPPORT HANGER. (OPTIONAL TO 66-1051-6)								1
63	66-1051-9	. SHIM, SUPPORT HANGER. (OPTIONAL TO 66-1051-6)								1
63	66-1051-10	. SHIM, SUPPORT HANGER. (OPTIONAL TO 66-1051-6)								1
63	66-1051-11	. SHIM, SUPPORT HANGER. (OPTIONAL TO 66-1051-6)								1
64	65-23413-31	. BOLT, STATIC PIN JOINT.								1
65	65-23413-32	. BOLT, STATIC PIN JOINT.								1
	65-20736-1	. ANGLE INSTL, NO. 1 OUTBOARD NACELLE WING STRUT. . . . ATTACHMENT LH (NACELLE NO. 1)								1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3	65-20736-2	.	ANGLE INSTL, NO. 4 OUTBOARD NACELLE WING STRUT. ATTACHMENT RH (NACELLE NO. 4)		1
	65-20736-4	.	ANGLE INSTL, NO. 4 OUTBOARD NACELLE WING STRUT. ATTACHMENT LH (NACELLE NO. 4)		1
	65-20736-3	.	ANGLE INSTL, NO. 1 OUTBOARD NACELLE WING STRUT. ATTACHMENT RH (NACELLE NO. 1)		1
66	65-20736-10	.	COVER ASSY, OUTBOARD STRUT WING ANGLE GAP (USED ON 65-20736-4)		1
66	65-20736-9	.	COVER ASSY, OUTBOARD STRUT WING ANGLE GAP (USED ON 65-20736-3)		1
R	391-89-70-72458-003	.	ENGINE NO. 1 NACELLE MOD, (WING INSTL L.H.) (VS2500)	0150	1
R	391-89-70-72458-004	.	ENGINE NO. 4 NACELLE MOD, (WING INSTL R.H.) (VS2500)	0150	1
R	67	BACG20ZC200	GROMMET		1
	68	BACS20A5P	SPRING, (USED ON 65-20736-1 AND -2)		5
	69	BACS20A5P	SPRING, (USED ON 65-20736-3 AND -4)		9
		BACS18X56	ATTACHING PARTS		
		BACS18X56	SPACER, (USED ON 65-20736-1 AND -2)		2
		MS20426D3	SPACER, (USED ON 65-20736-3 AND -4)		1
			RIVET		28
	70	65-20736-15	ANGLE, NO. 1 OUTBOARD NACELLE WING STRUT ATTACHMENT (USED ON 65-20736-1)		1
	70	65-20736-16	ANGLE, NO. 4 OUTBOARD NACELLE WING STRUT ATTACHMENT (USED ON 65-20736-2)		1
	71	65-20736-14	ANGLE, NO. 4 OUTBOARD NACELLE WING STRUT ATTACHMENT (USED ON 65-20736-4)		1
	71	65-20736-13	ANGLE, NO. 1 OUTBOARD NACELLE WING STRUT ATTACHMENT (USED ON 65-20736-3)		1
		NAS517-3-4	ATTACHING PARTS		
		AN960PD10L	SCREW		9
		NAS679A3W	WASHER.		9
			NUT		9
	72	65-2488-3093	STRUT ASSY, EQUIPMENT (NACELLE NO. 1) (SEE FIG. 6C)	5199	1
	72	65-2488-3059	STRUT ASSY, NO. 1 OUTBOARD NACELLE EQUIPMENT. (NACELLE NO. 1) (SEE FIG. 6B)	0150	1
	72	65-2488-3094	STRUT ASSY, EQUIPMENT (NACELLE NO. 4) (SEE FIG. 6C)	5199	1
	72	65-2488-3060	STRUT ASSY, NO. 4 OUTBOARD NACELLE EQUIPMENT. (NACELLE NO. 4) (SEE FIG. 6B)	0150	1
R	74	391-89-70-72458-101	DOOR ASSY, (VS2500)	0150	1
R	75	391-89-70-72458-105	FRAME, (VS2500)	0150	2
R	76	391-89-70-72458-107	SPACER, (VS2500).	0150	2
R	77	NAS514P428-8	SCREW	0150	4
R	78	63-9651-1	INDICATOR, NACELLE ACCESS DOOR ROTARY LATCH	0150	4
R	79	66-25039	ROTARY LATCH ANCHOR.	0150	4
R	80	66-10344-1	NUT	0150	4
R	81	BACC13G333-60C	CABLE ASSY.	0150	1
R	82	BACT14B3	TERMINAL.	0150	1
R	82	BACW10B1	WASHER.	0150	1
R	83	391-89-70-72458-109	DOUBLER, (FOR L.H. ONLY) (VS2500)	0150	1
R	84	391-89-70-72458-110	DOUBLER, (FOR R.H. ONLY) (VS2500)	0150	1
R	85	391-89-70-72458-111	DOUBLER, (FOR L.H. ONLY) (VS2500)	0150	1
R	86	391-89-70-72458-112	DOUBLER, (FOR R.H. ONLY) (VS2500)	0150	1
R	87	391-89-70-72458-113	DOUBLER, (FOR L.H. ONLY) (VS2500)	0150	1
R	88	391-89-70-72458-114	DOUBLER, (FOR R.H. ONLY) (VS2500)	0150	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

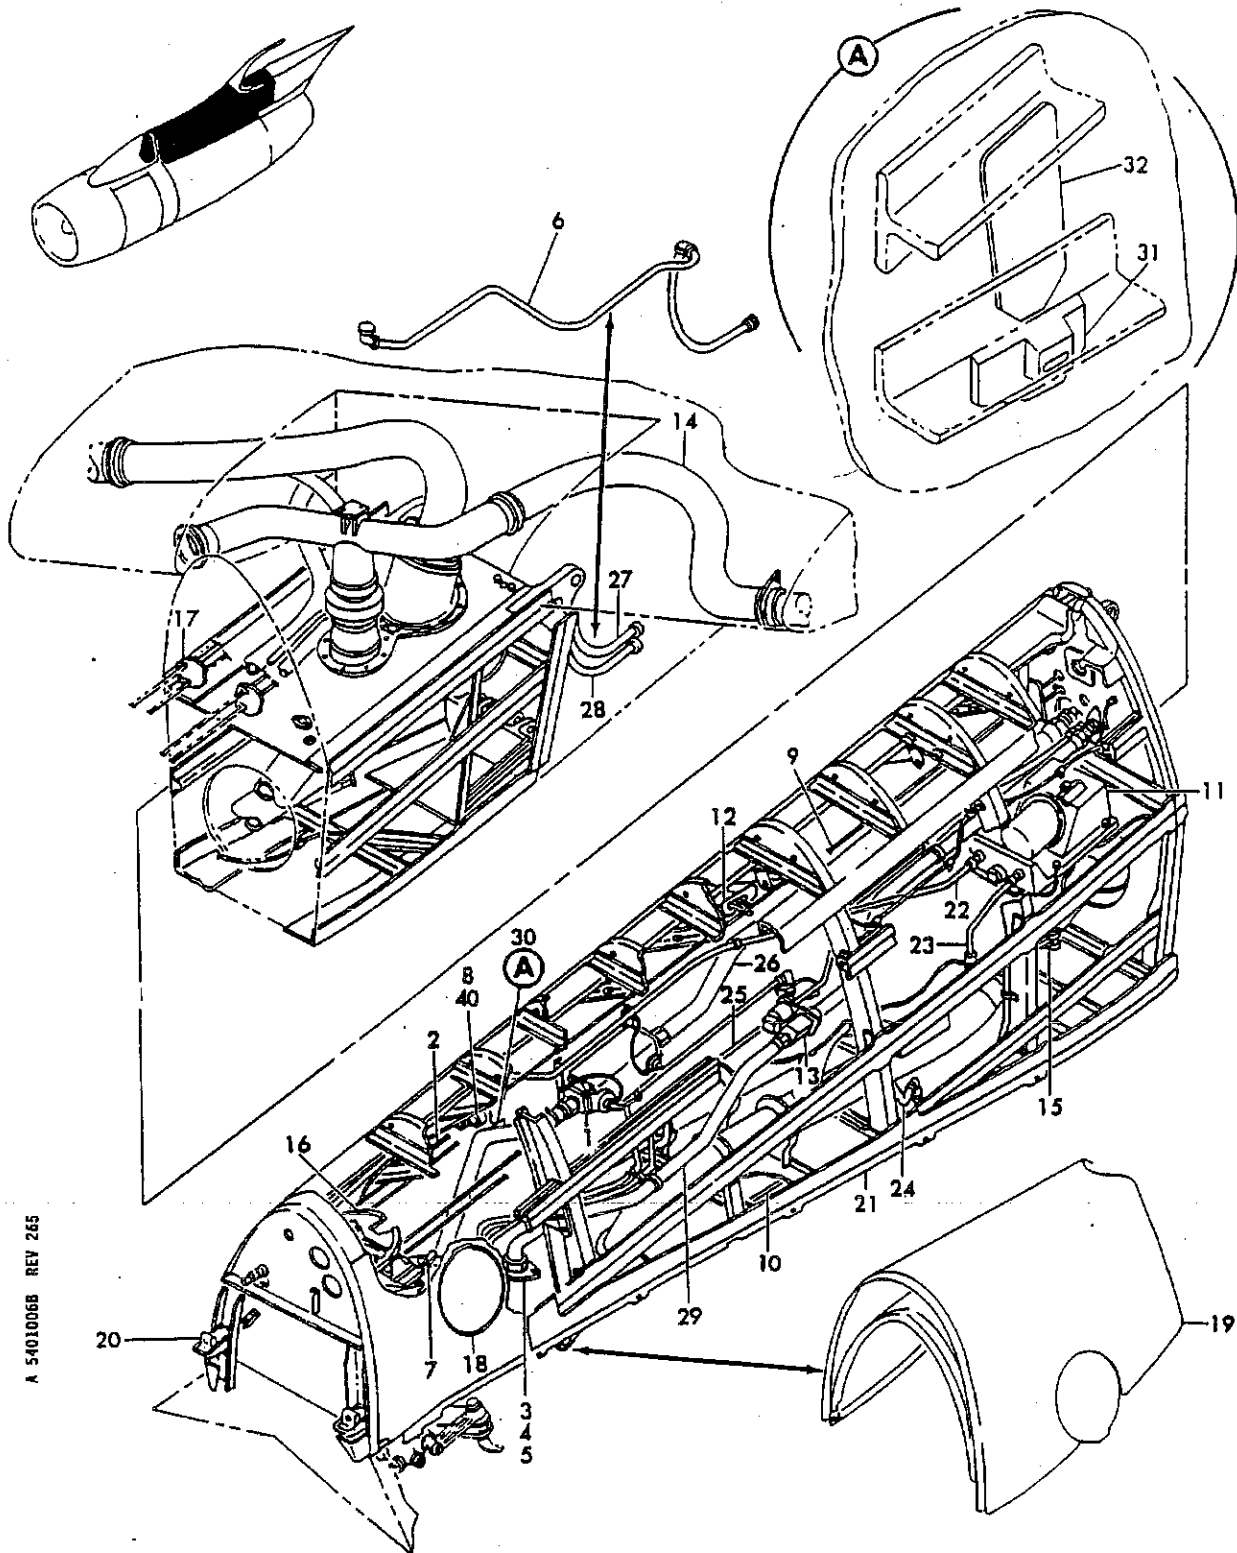


FIGURE 6B. STRUT ASSY, NO.1 OUTBOARD NACELLE EQUIPMENT

A 5401006B REV 265



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
68	65-2488-3059	STRUT ASSY, NO. 1 OUTBOARD NACELLE EQUIPMENT (SEE FIG. 3, ITEM 72)	0150	RF
	65-2488-3060	STRUT ASSY, NO. 4 OUTBOARD NACELLE EQUIPMENT (SEE FIG. 3, ITEM 72)	0150	RF
1	65-14511-15	. FLOWMETER INSTL, OUTBOARD FAN ENGINE FUEL (SEE 28-5, FIG. 11A AND 12A)	0150	1
2	50-8709-779	. CONTROL INSTL, SECTION 79 ENGINE THROTTLES LH (NACELLE NO. 1) (SEE 76-1, FIG. 5)	0150	1
2	50-8709-879	. CONTROL INSTL, SECTION 79 ENGINE THROTTLES RH (NACELLE NO. 4) (SEE 76-1, FIG. 5)	0150	1
3	65-31487-10	. FITTING INSTL, NACELLE STRUT LOWER SPAR PLUMBING. . . . ENGINE INDICATING, (SEE 77-1, FIG. 14 AND 14E). . . . FUEL, (SEE 28-1, FIG. 10 AND 10A AND 28-5, FIG. 11A AND 12A)	0150 0150 0150	1
4	69-30211-3	. WATER INJECTION, (SEE 82-1, FIG. 21 AND 21A). . . . CAP INSTL, NACELLE STRUT THRUST REVERSER (NACELLE NO. 1) (SEE 78-2, FIG. 17A)	0150 0150	1
5	69-30211-1	. CAP INSTL, NACELLE STRUT WATER INJECTION (SEE 82-1, FIG. 21A)	0150	1
8	65-11612-1	. ELECTRICAL INSTL, OUTBOARD NACELLE STRUT (NACELLE NO. 1) (SEE 24-2, FIG. 7)	0150	1
8	65-11612	. ELECTRICAL INSTL, OUTBOARD NACELLE STRUT (NACELLE NO. 4) (SEE 24-2, FIG. 7)	0150	1
10	65-43740-2	. DETECTOR INSTL, KIDDE SHROUDED OUTBOARD STRUT MOUNTED FIRE (SEE 26-1, FIG. 15B)	0150	1
11	65-15667-10	. TRANSMITTER INSTL, FAN ENGINE OUTBOARD STRUT PRESSURE RATIO (SEE 77-1, FIG. 7)	0150	1
12	65-27482-2	. PROBE INSTL, OUTBOARD NACELLE STRUT PT2 PRESSURE. . . RATIO (SEE 77-1, FIG. 7)	0150	1
13	65-11649-3	. SPACER INSTL, WATER INJECTION SHUTOFF VALVE REPLACEMENT (SEE 82-1, FIG. 6)	0150	1
14	65-11897-25	. DUCT INSTL, OUTBOARD STRUT AIR CONDITIONING AND WING THERMAL ANTI-ICING LH (NACELLE NO. 1)	0150	1
14	65-11897-26	. DUCT INSTL, OUTBOARD STRUT AIR CONDITIONING AND WING THERMAL ANTI-ICING RH (NACELLE NO. 4)	0150	1
		. . AIR CONDITIONING, (SEE 21-1, FIG. 5). ICE AND RAIN PROTECTION, (SEE 30-1, FIG. 5)	0150 0150	
15	65-10612	. FOLLOW-UP INSTL, AFT THRUST REVERSER (SEE 78-2, FIG. 8)	0150	1
16	65-10610-1	. CONTROL INSTL, FAN ENGINE OUTBOARD NACELLE STRUT. . . ENGINE (SEE 76-1, FIG. 10)	0150	1
17	69-11153-1	. SEAL INSTL, OUTBOARD NACELLE STRUT ENGINE CONTROL . . (NACELLE NO. 1) (SEE 76-1, FIG. 18)	0150	1
17	69-11153-2	. SEAL INSTL, OUTBOARD NACELLE STRUT ENGINE CONTROL . . (NACELLE NO. 4) (SEE 76-1, FIG. 18)	0150	1
18	69-10869-1	. DOOR INSTL, OUTBOARD NACELLE STRUT (NACELLE NO. 1). . (SEE 54-2, FIG. 11)	0150	1
19	65-10614-27	. FAIRING INSTL, OUTBOARD NACELLE STRUT SADDLE (NACELLE NO. 4) (SEE 54-2, FIG. 11)	0150	1
21	65-2494-3019	. STRUCTURE ASSY, OUTBOARD NACELLE STRUT (SEE FIG. 9)	0150	1
22	65-11904-449	. PLUMBING INSTL, OUTBOARD NACELLE STRUT PT2 PRESSURE. . RATIO (SEE 77-1, FIG. 14B)	0150	1
23	65-11904-411	. PLUMBING INSTL, OUTBOARD NACELLE STRUT PT7 PRESSURE. . RATIO (SEE 77-1, FIG. 14E)	0150	1
24	65-10540-3	. PLUMBING INSTL, OUTBOARD FAN ENGINE THRUST REVERSER . (SEE 78-2, FIG. 17A)	0150	1
25	65-11904-405	. PLUMBING INSTL, OUTBOARD NACELLE STRUT FIRE PROTECTION (SEE 26-2, FIG. 3A)	0150	1
27	65-11904-703	. PLUMBING INSTL, OUTBOARD NACELLE STRUT NO. 1 STRUT. . DRAIN (NACELLE NO. 1) (SEE FIG. 14A)	0150	1
28	65-11904-705	. PLUMBING INSTL, OUTBOARD NACELLE STRUT NO. 4 STRUT. . DRAIN (NACELLE NO. 4) (SEE FIG. 15A)	0150	1
29	65-11904-399	. PLUMBING INSTL, OUTBOARD NACELLE STRUT WATER. . . . INJECTION (SEE 82-1, FIG. 21A)	0150	1
	361-89-90-74340-003	. ENGINE NO. 1 PYLON ELECTRICAL PASS THRU INSTL, . . . (L.H.) (A/R ONLY) (VS2500) (ADDED BY RAF 7211.019-225) (SEE 24-02, FIG. 7, ITEM 31)	0150	1
	361-89-90-74340-004	. ENGINE NO. 4 PYLON ELECTRICAL PASS THRU INSTL, . . . (R.H.) (A/R ONLY) (VS2500) (ADDED BY RAF 7211.019-225) (SEE 24-02, FIG. 7, ITEM 31)	0150	1
40	SEAL INSTL	. . SEAL INSTL, (ADDED BY RAF 7211.019-225) (SEE. . . 24-02, FIG. 7, ITEMS 31, 32, 33)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

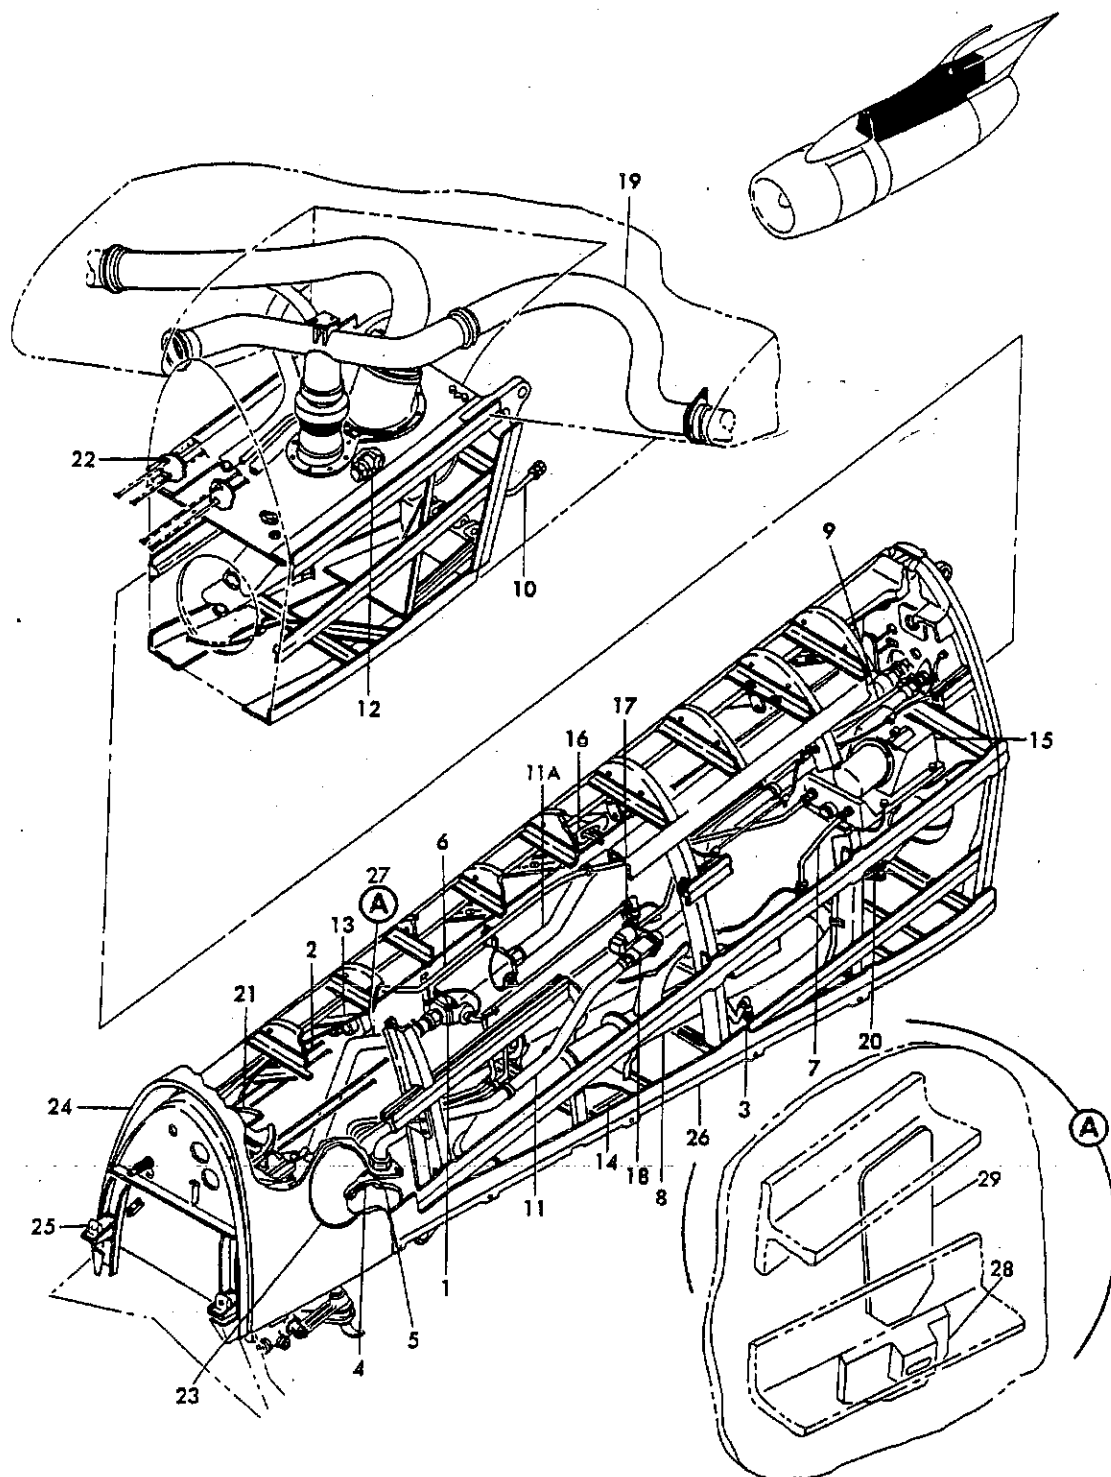


FIGURE 6C. STRUT ASSY, NO. 1 AND 4 OUTBOARD NACELLE EQUIPMENT



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
6C	65-2488-3093	STRUT ASSY, NO. 1 OUTBOARD NACELLE EQUIPMENT (SEE FIG. 3, ITEM 72)	5199	RF
	65-2488-3094	STRUT ASSY, NO. 4 OUTBOARD NACELLE EQUIPMENT (SEE FIG. 3, ITEM 72)	5199	RF
1	65-13125-33	. FLOWMETER INSTL, OUTBOARD FAN ENGINE FUEL (SEE 28-5, FIG. 12A)	5199	1
2	50-8709-779	. CONTROL INSTL, SECTION 79 ENGINE THROTTLES LH (NACELLE NO. 1) (SEE 76-1, FIG. 5)	5199	1
2	50-8709-879	. CONTROL INSTL, SECTION 79 ENGINE THROTTLES RH (NACELLE NO. 4) (SEE 76-1, FIG. 5)	5199	1
3	65-31487-12	. FITTING INSTL, OUTBOARD NACELLE STRUT LOWER SPAR. . . PLUMBING	5199	1
		. . ENGINE INDICATING, (SEE 77-1, FIG. 14 AND 14E) . . .	5199	
		. . FUEL, (SEE 28-1, FIG. 10 AND 28-5, FIG. 11A, 12A. . AND 12B)	5199	
4	69-30211-3	. CAP INSTL, OUTBOARD NACELLE STRUT THRUST REVERSER . . (NACELLE NO. 1) (SEE 78-2, FIG. 17A)	5199	1
6	65-11904-449	. PLUMBING INSTL, OUTBOARD NACELLE STRUT PT2 PRESSURE . RATIO (SEE 77-1, FIG. 14B)	5199	1
7	65-11904-411	. PLUMBING INSTL, OUTBOARD NACELLE STRUT PT7 PRESSURE . RATIO (SEE 77-1, FIG. 14E)	5199	1
9	65-11904-405	. PLUMBING INSTL, OUTBOARD NACELLE STRUT FIRE PROTECTION (SEE 26-2, FIG. 3A)	5199	1
10	65-11904-703	. PLUMBING INSTL, OUTBOARD NACELLE STRUT NO. 1 STRUT. . DRAIN (NACELLE NO. 1) (SEE FIG. 14A)	5199	1
10	65-11904-705	. PLUMBING INSTL, OUTBOARD NACELLE STRUT NO. 4 STRUT. . DRAIN (NACELLE NO. 4) (SEE FIG. 15A)	5199	1
13	65-11612-1	. ELECTRICAL INSTL, OUTBOARD NACELLE STRUT (NACELLE NO. 1) (SEE 24-2, FIG. 7)	5199	1
13	65-11612	. ELECTRICAL INSTL, OUTBOARD NACELLE STRUT (NACELLE NO. 4) (SEE 24-2, FIG. 7)	5199	1
14	65-43740-2	. DETECTOR INSTL, KIDDE SHROUDED OUTBOARD NACELLE STRUT MOUNTED FIRE (SEE 26-1, FIG. 15B)	5151	1
14	65-43740-4	. DETECTOR INSTL, KIDDE SHROUDED OUTBOARD NACELLE STRUT MOUNTED FIRE (SEE 26-1, FIG. 15B)	5299	1
15	65-15667-10	. TRANSMITTER INSTL, FAN ENGINE OUTBOARD STRUT PRESSURE RATIO (SEE 77-1, FIG. 7)	5199	1
16	65-27482-2	. PROBE INSTL, OUTBOARD NACELLE STRUT PT2 PRESSURE. . . RATIO (SEE 77-1, FIG. 7)	5199	1
19	65-11897-25	. DUCT INSTL, OUTBOARD NACELLE STRUT AIR CONDITIONING . AND WING THERMAL ANTI-ICING LH (NACELLE NO. 1)	5199	1
19	65-11897-26	. DUCT INSTL, OUTBOARD NACELLE STRUT AIR CONDITIONING . AND WING THERMAL ANTI-ICING RH (NACELLE NO. 4)	5199	1
		. . AIR CONDITIONING, (SEE 21-1, FIG. 5)	5199	
		. . ICE AND RAIN PROTECTION, (SEE 30-1, FIG. 5)	5199	
20	65-10612	. FOLLOW-UP INSTL, AFT THRUST REVERSER (SEE 78-2, FIG. 8)	5199	1
21	65-10610-1	. CONTROL INSTL, FAN ENGINE OUTBOARD NACELLE STRUT. . . ENGINE (SEE 76-1, FIG. 10)	5199	1
22	69-11153-1	. SEAL INSTL, OUTBOARD NACELLE STRUT ENGINE CONTROL . . (NACELLE NO. 1) (SEE 76-1, FIG. 18)	5199	1
22	69-11153-2	. SEAL INSTL, OUTBOARD NACELLE STRUT ENGINE CONTROL . . (NACELLE NO. 4) (SEE 76-1, FIG. 18)	5199	1
23	69-10869-1	. DOOR INSTL, OUTBOARD NACELLE STRUT (NACELLE NO. 1). . (SEE 54-2, FIG. 11)	5199	1
24	65-10614-27	. FAIRING INSTL, OUTBOARD NACELLE STRUT SADDLE (NACELLE NO. 4) (SEE 54-2, FIG. 11)	5199	1
25	65-33550-1	. RECEPTACLE INSTL, OUTBOARD NACELLE FAIRING AFT LATCH PIN (SEE FIG. 32)	5199	1
26	65-2494-3019	. STRUCTURE ASSY, OUTBOARD NACELLE STRUT (SEE FIG. 9)	5199	1
27	69-25962-1	. GUIDE BLOCK INSTL, MANUAL OVER-RIDE STARTER VALVE . . OUTBOARD ENGINE	5199	1
28	66-18951-2	. . BLOCK, GUIDE.	5199	1
29	66-19170-2	. . PLATE, SCUFF.	5199	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

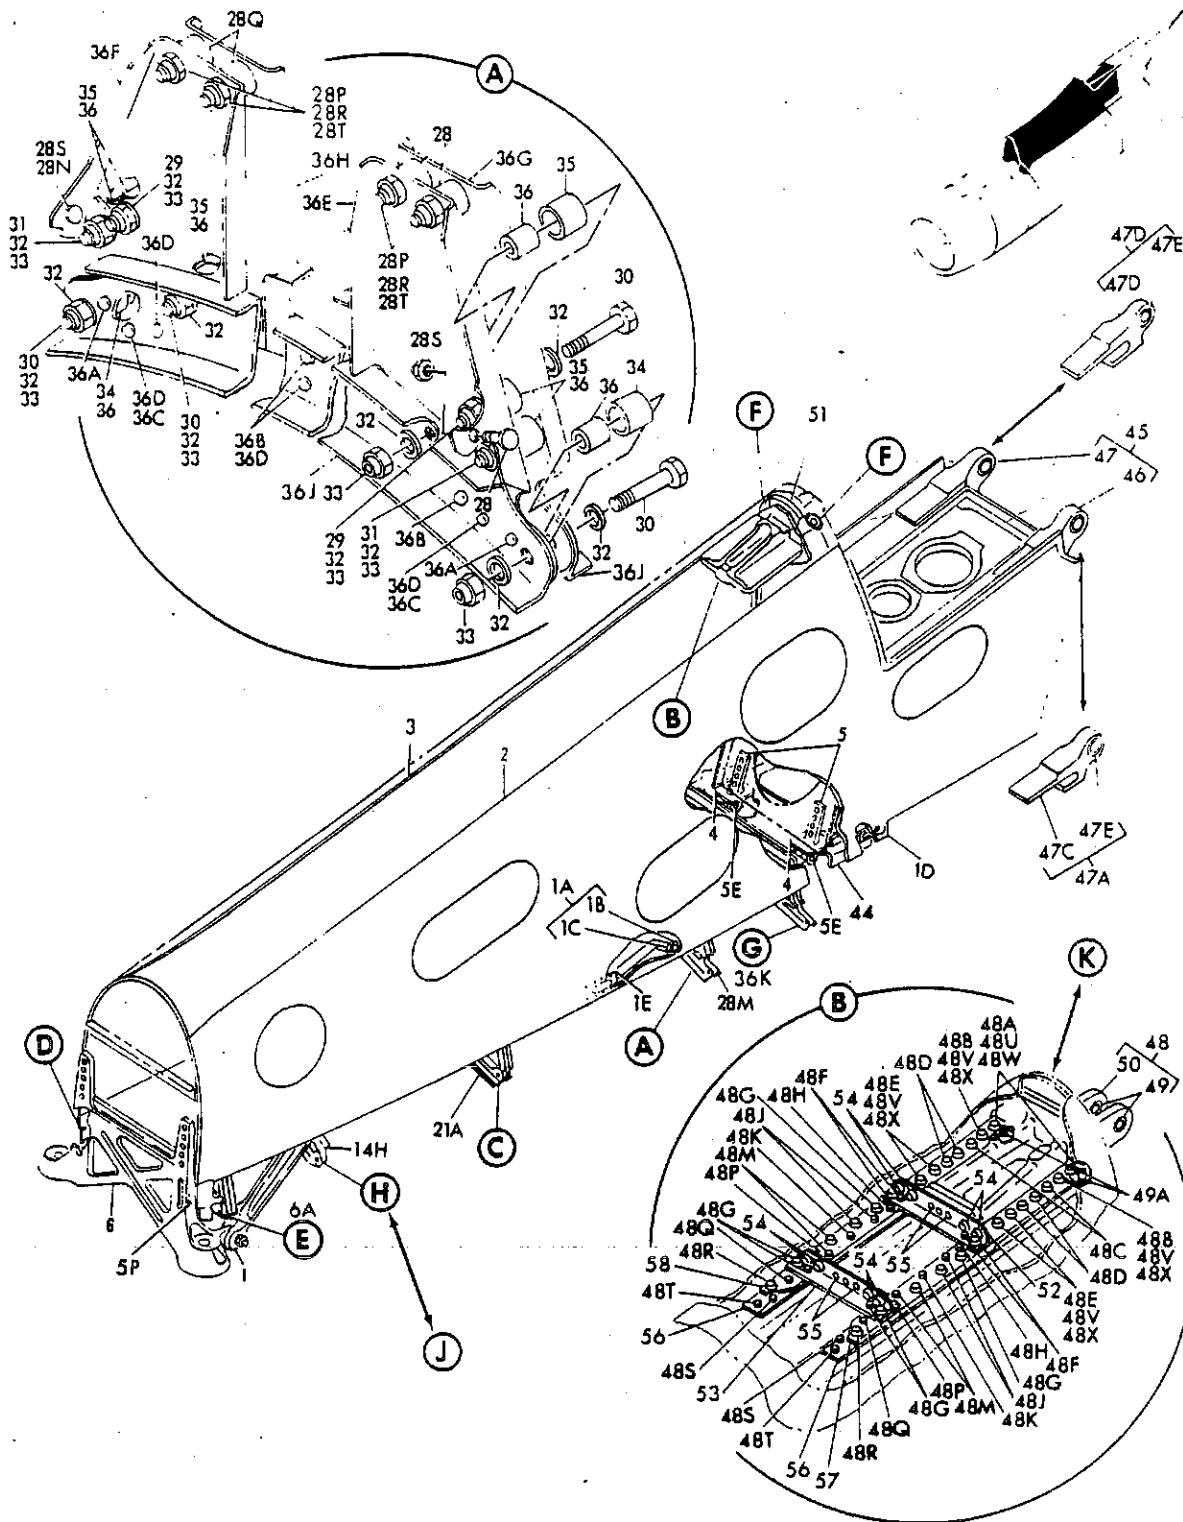


FIGURE 9. STRUCTURE ASSY, OUTBOARD NACELLE STRUT (SHEET 1)

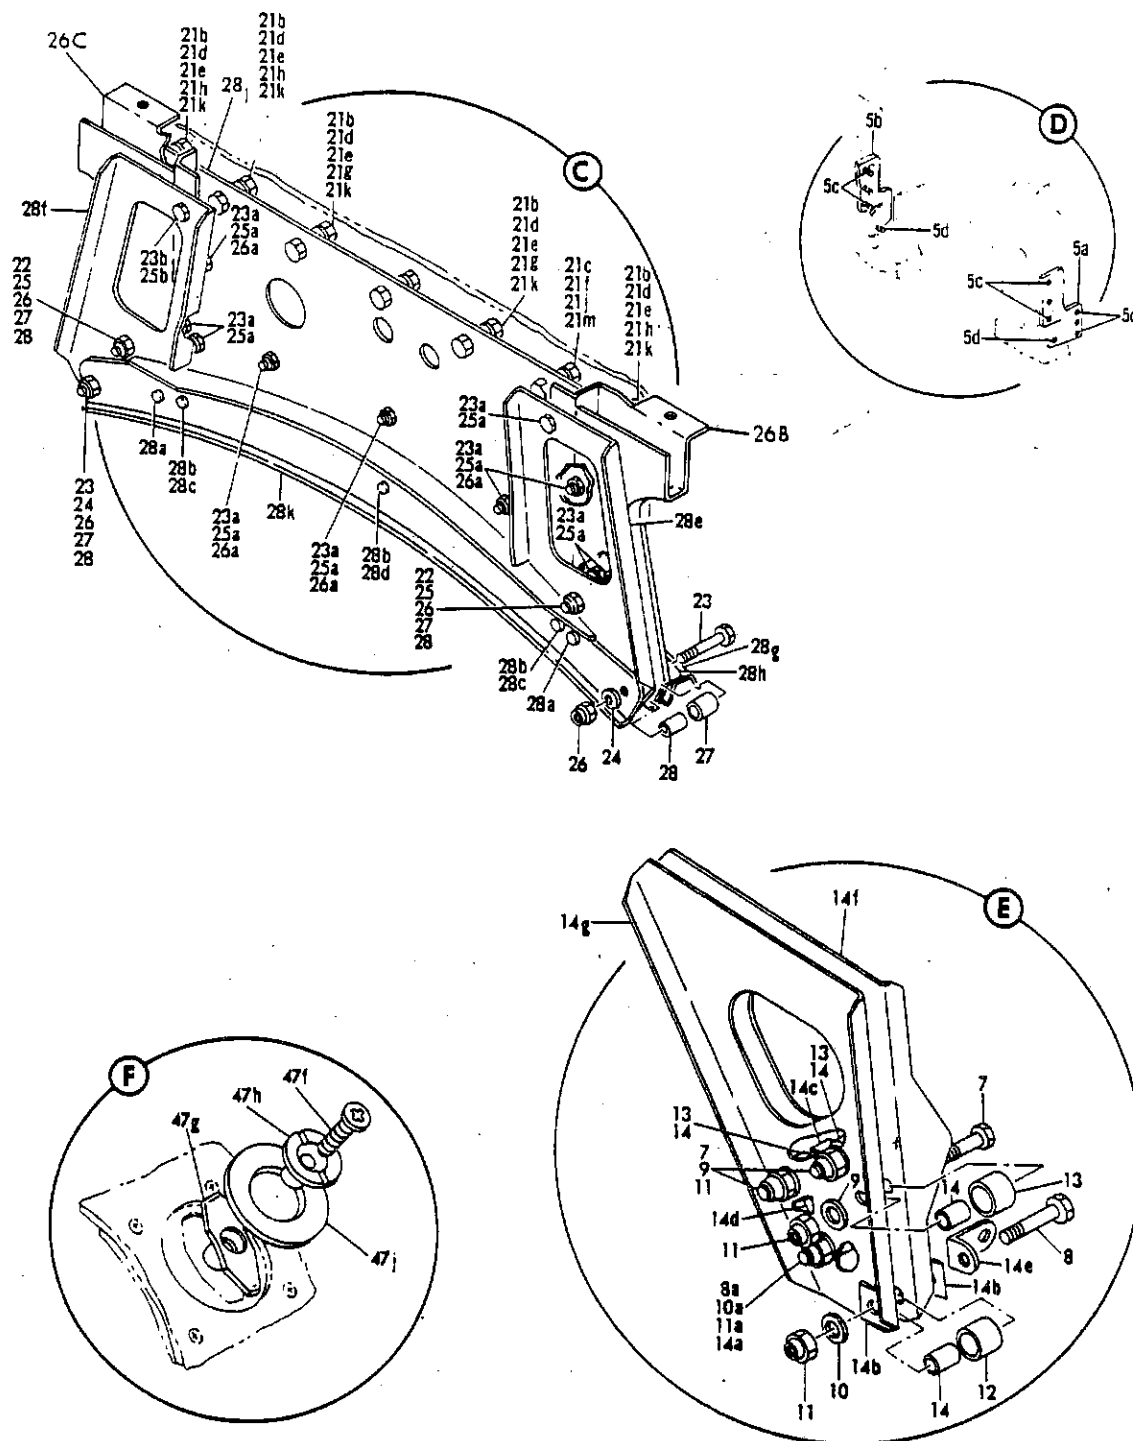


FIGURE 9. STRUCTURE ASSY, OUTBOARD NACELLE STRUT (SHEET 2)

NOV 21/90

54-01-9

DETAILED PARTS LIST
54-01-9
PAGE 1

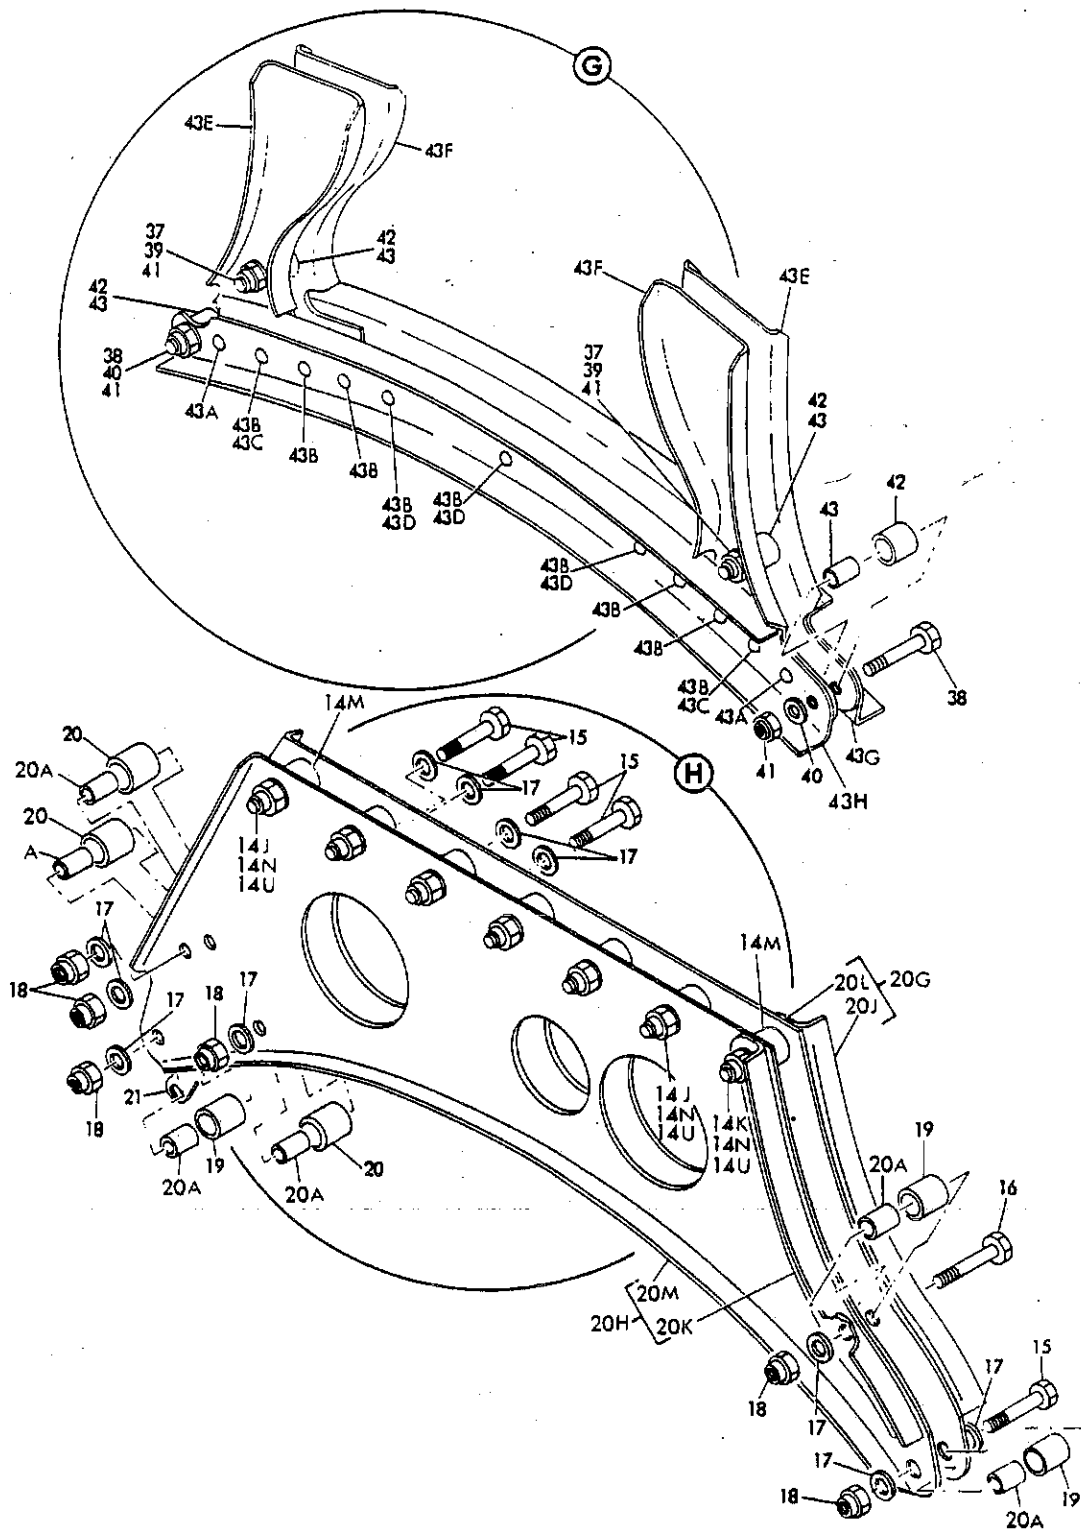


FIGURE 9. STRUCTURE ASSY, OUTBOARD NACELLE STRUT (SHEET 3)


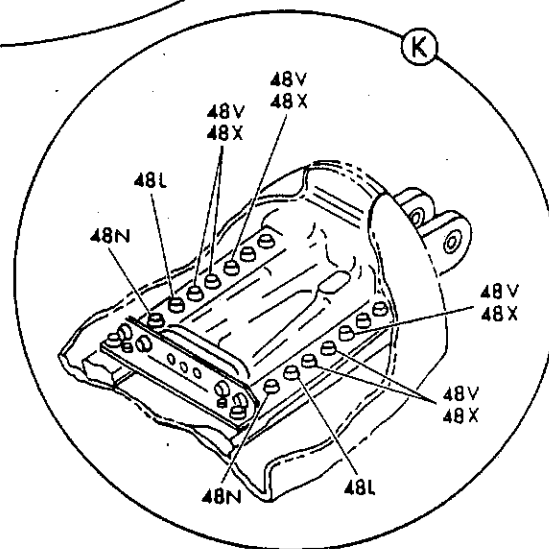


FIGURE 9. STRUCTURE ASSY, OUTBOARD NACELLE STRUT (SHEET 4)

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
9	65-2494-3019		STRUCTURE ASSY, OUTBOARD NACELLE STRUT (SEE FIG. 6A, . ITEM 27, FIG. 6B, ITEM 21 AND FIG. 6C, ITEM 26)		RF
1	65-2498-2		. FITTING, FORWARD ENGINE MOUNT THRUST LINK		1
	NAS1112-21		. ATTACHING PARTS		2
	MS20002C12		. BOLT.		2
	AN960-1216L		. WASHER.		2
	NAS1022A12		. WASHER.		2
			. NUT		2
	69-12393-9		. INLET INSTL, DRAIN TANK COMBUSTION CHAMBER VENT . . .	0150	1
			(DELETED BY SB 3097)		
1A	69-12393-8		. . OUTLET ASSY, DRAIN TANK COMBUSTION CHAMBER VENT . .	0150	1
			INLET		
1B	MS21921-8		. . . NUT	0150	1
1C	MS21922-8		. . . SLEEVE.	0150	1
	69-31625-1		. SKIN INSTL, NACELLE STRUT ADJUSTABLE LH		1
	69-31625-2		. SKIN INSTL, NACELLE STRUT ADJUSTABLE RH		1
1D	66-21532-1		. . SKIN, NACELLE STRUT ADJUSTABLE.		1
			ATTACHING PARTS		
	NAS517-3-2		. . SCREW		2
	65-97198-5		. COVER, PLATE (ADDED BY SB 3097)	0150	1
			ATTACHING PARTS		
	BACR15BA4D4		. RIVET, (ADDED BY SB 3097)	0150	8
2	65-2497-82		. SKIN INSTL, LH SIDE (SEE 54-2, FIG. 7)		1
3	65-2497-83		. SKIN INSTL, RH SIDE (SEE 54-2, FIG. 7)		1
	65-2543-3032		. RIB INSTL, CLOSURE.		1
4	66-10522		. . PLATE, AFT ENGINE MOUNT		2
			ATTACHING PARTS		
	NAS1104-8W		. . BOLT.		4
	NAS1104-10W		. . BOLT.		4
	NAS620-416		. . WASHER.		8
	NAS679A4W		. . NUT		8
5	65-11602-8		. . FITTING, AFT ENGINE MOUNT		2
			ATTACHING PARTS		
	BACB30HC10-9		. . BOLT.		2
	BACB30HC10-10		. . BOLT.		2
	BACB30HC10-11		. . BOLT.		2
	BACB30HC10-12		. . BOLT.		2
	NAS1080-10		. . COLLAR.		8
	64-1061-3010		. BULKHEAD INSTL, STATION 136 FORWARD ENGINE MOUNT. . .		1
5A	69-10872-7		. . SKIN, BULKHEAD LH		1
5B	69-10872-8		. . SKIN, BULKHEAD RH		1
			ATTACHING PARTS		
5C	NAS517-3-1		. . SCREW		9
5D	NAS517-3-9		. . SCREW		2
	204-70123-3		. . PIN LOCATOR, FORWARD FAIRING (LH)		1
	204-70123-4		. . PIN LOCATOR, FORWARD FAIRING (RH)		1
5G	64-1061-3804		. . SHIM.		2
5H	204-70079-1		. . CHANNEL, STATION 136 FORWARD ENGINE MOUNT BULKHEAD SUPPORT (LH)		1
	204-70079-2		. . CHANNEL, STATION 136 FORWARD ENGINE MOUNT BULKHEAD SUPPORT (RH)		1
			ATTACHING PARTS		
	NAS1218-3-4		. . BOLT.		4
5J	AN316C5R		. . NUT		8
5K	BACW10BP5APU		. . WASHER.		4
5L	BACN10GW5A		. . NUT		4
5M	9-66304-6		. . BOLT, COWL LATCH ENGINE NACELLE U		2
5N	NAS1218-3-5		. . BOLT.		4
	66-11166-802		. . SUPPORT ASSY, SKIN.		1
5P	66-11166-800		. . SUPPORT		1
6	65-10693-2		. . FITTING, NACELLE STATION 136 FORWARD ENGINE MOUNT .		1
			ATTACHING PARTS		
	NAS1107-13W		. . BOLT, (DELETED BY SB 3425).		8
	BACB30NF7-13X		. . BOLT, (ADDED BY SB 3425).		8
	NAS1107-14W		. . BOLT, (DELETED BY SB 3425).		2
	BACB30NF7-14X		. . BOLT, (ADDED BY SB 3425).		2
	AN960-716L		. . WASHER.		10

MISSING ITEM NUMBERS ARE NOT APPLICABLE

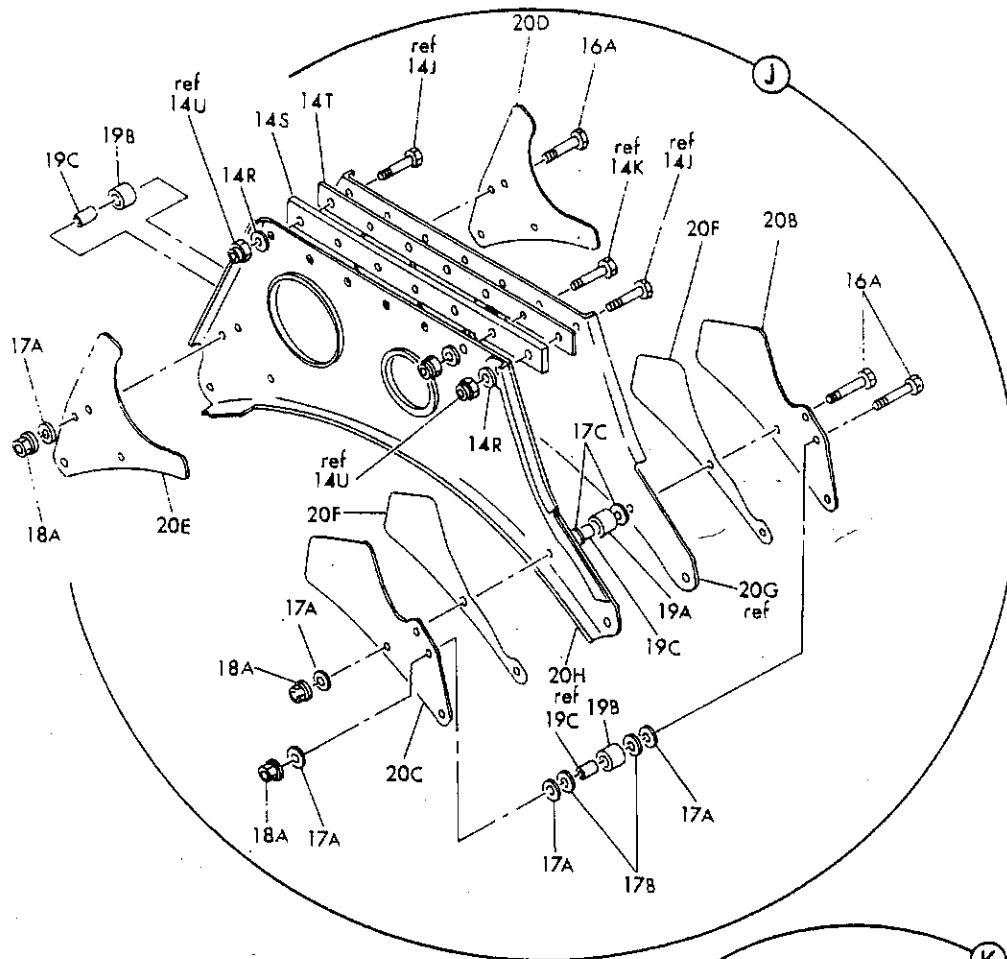

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R R R R R	9	NAS679A7 NUT, (DELETED BY SB 3425)		10
		BACN10JC7 NUT, (ADDED BY SB 3425)		10
		BACB30AL6-7 BOLT, (DELETED BY SB 3425)		11
		BACB30MC6-7 BOLT, (ADDED BY SB 3425)		11
		BACC30AR6 COLLAR, (DELETED BY SB 3425)		11
		BACC30X6 COLLAR, (ADDED BY SB 3425)		11

	6A	SUPPORT INSTL, STATION 139.74 SIDE COWL PANEL HINGE .		1
		SUPPORT ASSY, STATION 139.74 SIDE COWL PANEL HINGE		1
		ATTACHING PARTS		
		BOLT.		3
		SPACER.		3
		WASHER.		3
		NUT		3

	7	NAS1104-9W BOLT.		3
	8	NAS1104-12W BOLT.		1
	8A	NAS1103-10W BOLT.		1
	9	AN960PD416 WASHER.		3
	10	AN960PD416L WASHER.		1
	10A	AN960PD10 WASHER.		1
	11	NAS679A4W NUT		4
	11A	NAS679A3W NUT		1
	12	69-10452-2 ROLLER, FAN ENGINE SIDE COWL PANEL HINGE.		1
	13	69-10452-3 ROLLER, FAN ENGINE SIDE COWL PANEL HINGE.		3
	14	69-10452-4 SPACER, FAN ENGINE SIDE COWL PANEL HINGE.		4
	14A	NAS43DD6-27 SPACER.		1
	14B	65-11665-6 FILLER, STATION 139.74 SIDE COWL PANEL HINGE.		2
	14E	65-11665-802 CLIP, STATION 139.74 SIDE COWL PANEL HINGE.		1
	14F	65-11665-3 BRACKET		1
	14G	65-11665-4 BRACKET		1
	14H	65-11666 SUPPORT INSTL, STATION 151.43 SIDE COWL HINGE .		1
		SUPPORT ASSY, STATION 151.43 SIDE COWL HINGE.		1
		ATTACHING PARTS		
	14J	NAS1104-9W BOLT.		6
	14K	NAS1104-10W BOLT.		1
	14M	NAS43DD4-22 SPACER.		7
	14N	AN960PD416L WASHER.		13
	14P	NAS679A4W NUT		7

	15	NAS1104-9W BOLT.		5
	16	NAS1104-10W BOLT.		1
	17	AN960PD416L WASHER.		11
	18	NAS679A4W NUT		6
	19	69-10452-2 ROLLER, FAN ENGINE SIDE COWL PANEL HINGE.		3
	20	69-10452-3 ROLLER, FAN ENGINE SIDE COWL PANEL HINGE.		3
	20A	69-10452-4 SPACER, FAN ENGINE SIDE COWL PANEL HINGE.		6
	20B	65-11666-3 ANGLE ASSY.		1
	20C	65-11666-4 ANGLE ASSY.		1
	20D	65-11666-7 ANGLE, (USED ON 65-11666-3)		1
	20E	65-11666-8 ANGLE, (USED ON 65-11666-4)		1
	20F	65-11666-5 WEB, (USED ON 65-11666-3)		1
	20G	65-11666-6 WEB, (USED ON 65-11666-4)		1
	21	66-12867-2 BRACKET, TUBE SUPPORT		1
		ATTACHING PARTS		
		NAS508M6 RIVET		4

	21A	65-11667-81 SUPPORT INSTL, STATION 173.50 SIDE COWL PANEL HINGE .		1
		65-11667-74 SUPPORT ASSY, STATION 173.50 SIDE COWL PANEL HINGE		1
		ATTACHING PARTS		
	21B	NAS1104-8W BOLT.		6
	21G	AN960PD416 WASHER.		3
	21H	AN960PD416L WASHER.		3
	21K	NAS679A4W NUT		6

	22	NAS1104-8W BOLT.		2
	23	NAS1104-10W BOLT.		2
	23A	NAS1103-2W BOLT.		10
	24	AN960PD416 WASHER.		2
	25	AN960PD416L WASHER.		2
	26	NAS679A4W NUT		4
	26A	NAS679A3W NUT		5
	26B	65-11667-9 SEAL ASSY, FIRE (LH SIDE)		1
	26C	65-11667-10 SEAL ASSY, FIRE (RH SIDE)		1
		MISSING ITEM NUMBERS ARE NOT APPLICABLE		



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
9	27	69-10452-2	..	..	..	..	..	..		4
	28	69-10452-4	..	..	..	..	..	..		4
	28A	MS20427M5	..	..	..	..	..	..		2
	28B	NAS508M6	..	..	..	..	..	..		3
	28C	NAS42DD6-27	..	..	..	..	..	..		2
	28D	NAS42DD6-30	..	..	..	..	..	..		1
	28F	65-11667-6	..	..	..	..	..	..		1
	28G	65-11667-20	..	..	..	..	..	..		1
	28H	65-11667-19	..	..	..	..	..	..		1
	28J	65-11667-78	..	..	..	..	..	..		1
	28K	66-10364	..	..	..	..	..	..		1
		65-11668	..	..	..	..	..	..		1
	28M	65-11668-1	..	..	..	..	..	..		1
		SUPPORT INSTL, STATION 198.70 SIDE COWL PANEL HINGE	..	..	..	..	..	..		
		SUPPORT ASSY, STATION 198.70 SIDE COWL PANEL HINGE	..	..	..	..	..	..		
		ATTACHING PARTS	..	..	..	..	..	..		
	28N	NAS1103-2W	..	..	..	..	..	..		2
	28P	NAS1103-9W	..	..	..	..	..	..		4
	28Q	NAS43DD4-22	..	..	..	..	..	..		4
	28R	AN960PD416	..	..	..	..	..	..		4
	28S	NAS679A3W	..	..	..	..	..	..		2
	28T	NAS679A4W	..	..	..	..	..	..		4
		NUT	..	..	..	..	..	..		
		NUT	..	..	..	..	..	..		
		-----*	..	..	..	..	..	..		
	29	NAS1104-9W	..	..	..	..	..	..		2
	30	NAS1104-10W	..	..	..	..	..	..		4
	31	NAS1104-12W	..	..	..	..	..	..		2
	32	AN960PD416L	..	..	..	..	..	..		12
	33	NAS679A4W	..	..	..	..	..	..		8
		NUT	..	..	..	..	..	..		
	34	69-10452-2	..	..	..	..	..	..		2
	35	69-10452-3	..	..	..	..	..	..		6
	36	69-10452-4	..	..	..	..	..	..		8
	36A	MS20427M5	..	..	..	..	..	..		2
	36B	NAS508M6	..	..	..	..	..	..		6
	36C	NAS42DD6-27	..	..	..	..	..	..		2
	36D	NAS42DD6-33	..	..	..	..	..	..		2
	36E	65-11668-3	..	..	..	..	..	..		1
	36F	65-11668-4	..	..	..	..	..	..		1
	36G	65-11668-11	..	..	..	..	..	..		1
	36H	65-11668-12	..	..	..	..	..	..		1
	36J	65-11668-2	..	..	..	..	..	..		2
		TIE, TENSION.	..	..	..	..	..	..		
		SUPPORT INSTL, STATION 210.88 SIDE COWL PANEL HINGE	..	..	..	..	..	..		1
	36K	65-11669	..	..	..	..	..	..		1
		SUPPORT ASSY, STATION 210.88 SIDE COWL PANEL HINGE	..	..	..	..	..	..		1
		ATTACHING PARTS	..	..	..	..	..	..		
		BOLT.	..	..	..	..	..	..		4
		SPACER.	..	..	..	..	..	..		4
		WASHER.	..	..	..	..	..	..		4
		NUT	..	..	..	..	..	..		4
		-----*	..	..	..	..	..	..		
	37	NAS1104-9W	..	..	..	..	..	..		2
	38	NAS1104-10W	..	..	..	..	..	..		2
	39	AN960PD416	..	..	..	..	..	..		2
	40	AN960PD416L	..	..	..	..	..	..		2
	41	NAS679A4W	..	..	..	..	..	..		4
		NUT	..	..	..	..	..	..		
	42	69-10452-2	..	..	..	..	..	..		4
	43	69-10452-4	..	..	..	..	..	..		4
	43A	MS20427M5	..	..	..	..	..	..		2
	43B	NAS508M6	..	..	..	..	..	..		9
	43C	NAS42DD6-27	..	..	..	..	..	..		2
	43D	NAS42DD6-33	..	..	..	..	..	..		3
	43E	65-11669-5	..	..	..	..	..	..		2
	43F	65-11669-6	..	..	..	..	..	..		2
	43G	66-10364	..	..	..	..	..	..		1
	43H	66-10364	..	..	..	..	..	..	0150	1
	43H	66-10364-1	..	..	..	..	..	..	5199	1
		TIE, TENSION.	..	..	..	..	..	..		
	44	64-1068-3000	..	..	..	..	..	..		1
	45	64-1062-3040	..	..	..	..	..	..		1
	47A	65-2534-9	..	..	..	..	..	..		1
	47B	65-2534-10	..	..	..	..	..	..		1
		ATTACHING PARTS	..	..	..	..	..	..		
		BOLT.	..	..	..	..	..	..		4
		BOLT.	..	..	..	..	..	..		4
		BOLT.	..	..	..	..	..	..		4
		BOLT.	..	..	..	..	..	..		4
		BOLT.	..	..	..	..	..	..		4
		BOLT.	..	..	..	..	..	..		4
		COLLAR.	..	..	..	..	..	..		20
		-----*	..	..	..	..	..	..		
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
9	47C	65-2534-7		1
	47D	65-2534-8		1
	47E	65-27303-26		2
R		64-1071-43		1
R		64-1071-54		1
		65-58472-1		1
	47F	NAS514P428-10		2
	47G	66-10344-1		2
	47H	63-9651-1		2
	47J	65-58472-3		2
	48	65-13347-3		1
		FITTING, (LH)		
		FITTING, (RH)		
		BUSHING		
		AIR CONDITIONING, (SEE 21-1, FIG. 10)		
		ICE AND RAIN PROTECTION, (SEE 30-1, FIG. 7)		
		SPAR INSTL, FRONT	0150	1
		SPAR INSTL, FRONT	5199	1
		HOLE INSTL, INSPECTION		1
		SCREW		2
		NUT, LATCH		2
		INDICATOR		2
		CAP		2
		FITTING ASSY, OUTBOARD NACELLE FRONT SPAR		1
		ATTACHING PARTS		
R	48A	BACB30NF7-19		2
R	48A	NAS1107-13W		2
R	48A	BACB30NF8-19		2
R	48B	BACB30NF7-19		2
R	48C	BACB30NF7-19		2
R	48D	BACB30NF7-19		4
R	48E	NAS1107-17W		4
R	48E	BACB30NF7		4
R	48F	BACB30DX6-19X		4
R	48G	BACB30DX6-18X		6
R	48H	BACB30DX6-18		2
R	48J	BACB30DX6-17X		4
R	48K	BACB30DX6-16X		2
R	48L	NAS1107-17W		4
R	48M	BACB30DX6-15X		4
R	48N	NAS1107-17W		2
R	48N	BACB30NF8-19		2
R	48P	BACB30DX6-14X		2
R	48Q	BACB30DX6-13X		2
R	48R	BACB30DX8-12		2
R	48S	BACB30DX6-11X		2
R	48T	BACB30DX6-10X		2
R	48U	AN960PD716		2
R	48U	AN960PD716		2
R	48U	AN960PD816		2
R	48V	AN960PD716		12
R	48V	AN960PD716		12
R	48V	AN960PD816		12
R	48W	BACN10JC7		2
R	48W	NAS679A7		2
R	48W	BACN10JC8		2
R	48X	BACN10JC7		12
R	48X	NAS679A7		12
R	48X	BACN10JC8		12
		WASHER		
		WASHER, (DELETED BY SB 2958)		
		WASHER, (ADDED BY SB 2958)		
		WASHER		
		WASHER, (DELETED BY SB 2958)		
		WASHER, (ADDED BY SB 2958)		
		NUT		
		NUT, (DELETED BY SB 2958)		
		NUT, (ADDED BY SB 2958)		
		NUT		
		NUT, (DELETED BY SB 2958)		
		NUT, (ADDED BY SB 2958)		
		BUSHING, OUTBOARD NACELLE STRUT ATTACH FITTING		
		BUSHING, (ADDED BY SB 2958)		
		FITTING, OUTBOARD NACELLE FRONT SPAR	0150	2
		ANGLE, OUTBOARD NACELLE STRUT FRONT SPAR		1
		ATTACHING PARTS		
		RIVET		5
		RIVET		5
		ANGLE, (ADDED BY SB 2958)	0150	1
		ANGLE, (ADDED BY SB 2958)	0150	1
		ATTACHING PARTS		
		BOLT		4
		RIVET	0450	3
		SHIM, (ADDED BY SB 2958)	0150	2
		STRAP, (ADDED BY SB 2958)	0150	1
		STRAP, (ADDED BY SB 2958)	0150	1
		MISSING ITEM NUMBERS ARE NOT APPLICABLE		

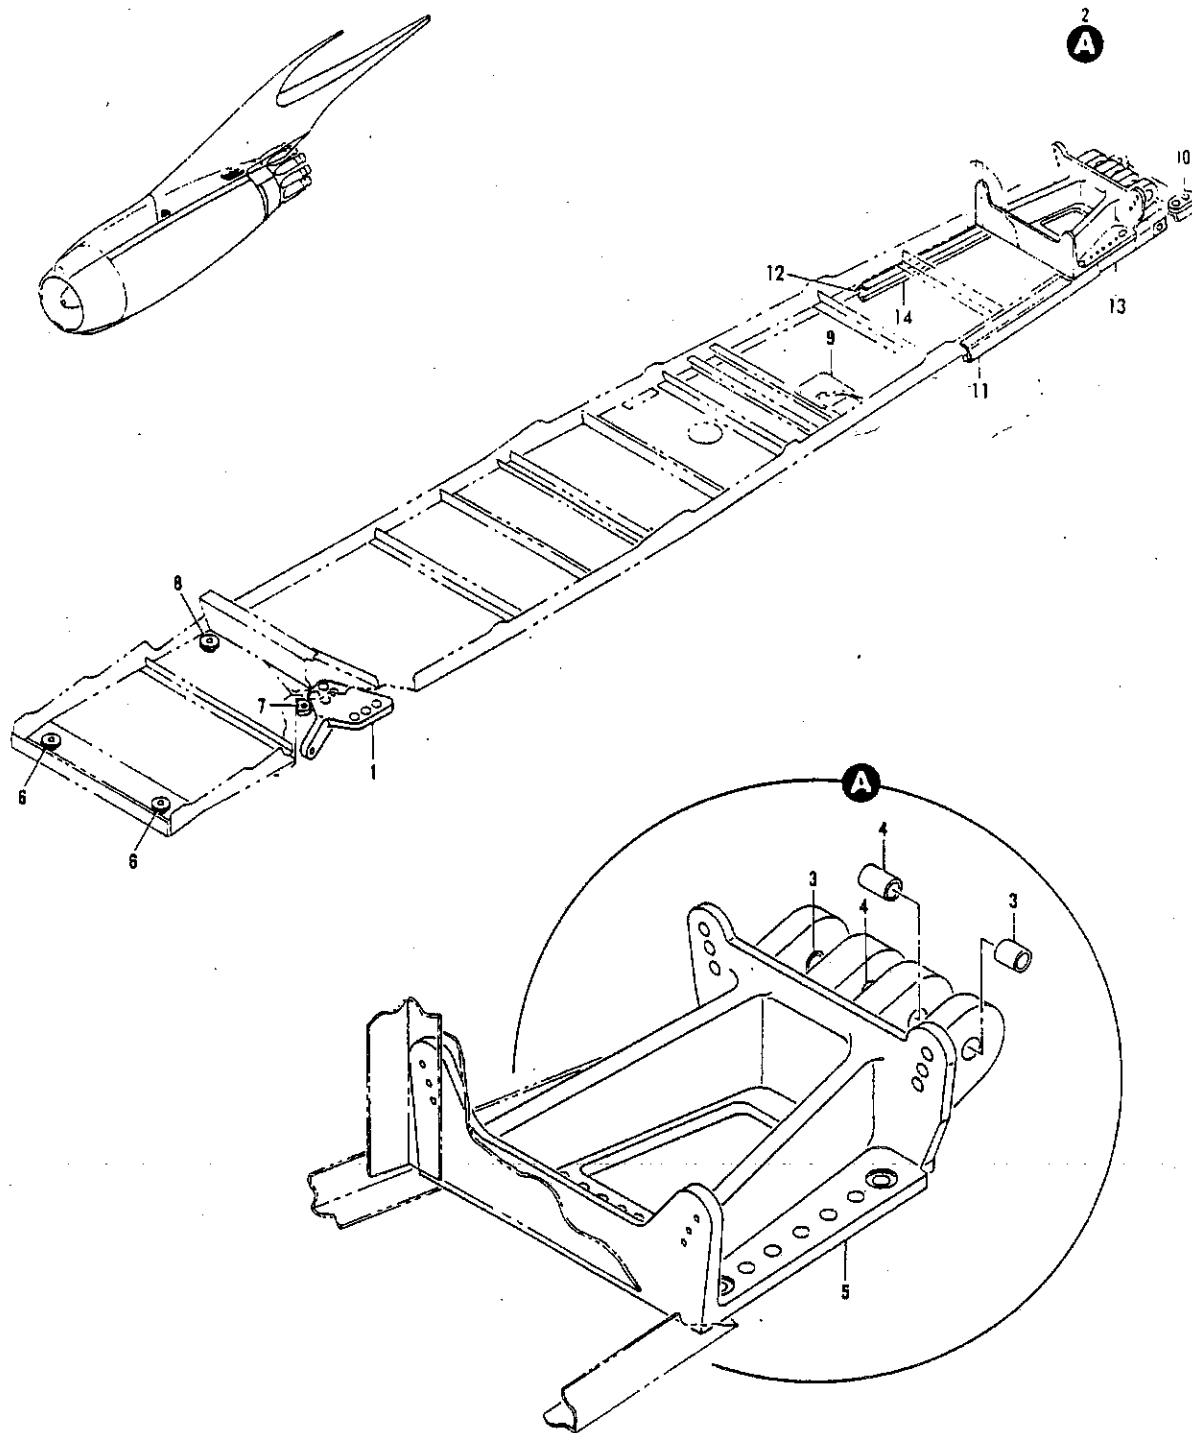


FIGURE 10. SPAR INSTL, OUTBOARD STRUT LOWER

BOEING **707**
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
10	64-1068-3000	SPAR INSTL, OUTBOARD STRUT LOWER (SEE FIG. 9, ITEM. . . 44)		RF
1	65-11760-4	. FITTING, THRUST CONNECTION FORWARD ENGINE MOUNT . . . ATTACHING PARTS		1
	MS20007-13	. BOLT.		6
	MS20007-11	. BOLT.		1
	MS20002-7	. WASHER.		7
	MS20002C7	. WASHER.		7
	BACN108-L7L	. NUT		7
2	65-13349-3	. FITTING ASSY, OUTBOARD NACELLE STRUT LOWER SPAR . . . ATTACHMENT		1
3	65-27303-13	. . BUSHING, OUTBOARD NACELLE STRUT ATTACHMENT FITTING		2
4	65-27303-14	. . BUSHING, OUTBOARD NACELLE STRUT ATTACHMENT FITTING		2
5	65-13349-1	. . FITTING, OUTBOARD NACELLE STRUT LOWER SPAR. ATTACHMENT		1
6	BACF22J8C	. FITTING		2
7	BACF22J8C	. FITTING		1
8	BACF22J8C	. FITTING		1
9	AN7510C2	. PLATE		1
	NAS508M3	ATTACHING PARTS . RIVET		4
10	65-15557	. STOP ASSY, OUTBOARD STRUT AFT THRUST REVERSER SLEEVE (SEE 78-2, FIG. 20) ATTACHING PARTS		1
	BACR15AY16-16	. RIVET		4
	BACR15AY16-15	. RIVET		2
	NAS179-16	. COLLAR.		6
11	69-31271-13	. ANGLE, SEAL		1
12	69-31271-14	. ANGLE, SEAL		1
13	69-31271-15	. SUPPORT, SEAL		1
14	69-31271-16	. SUPPORT, SEAL		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE


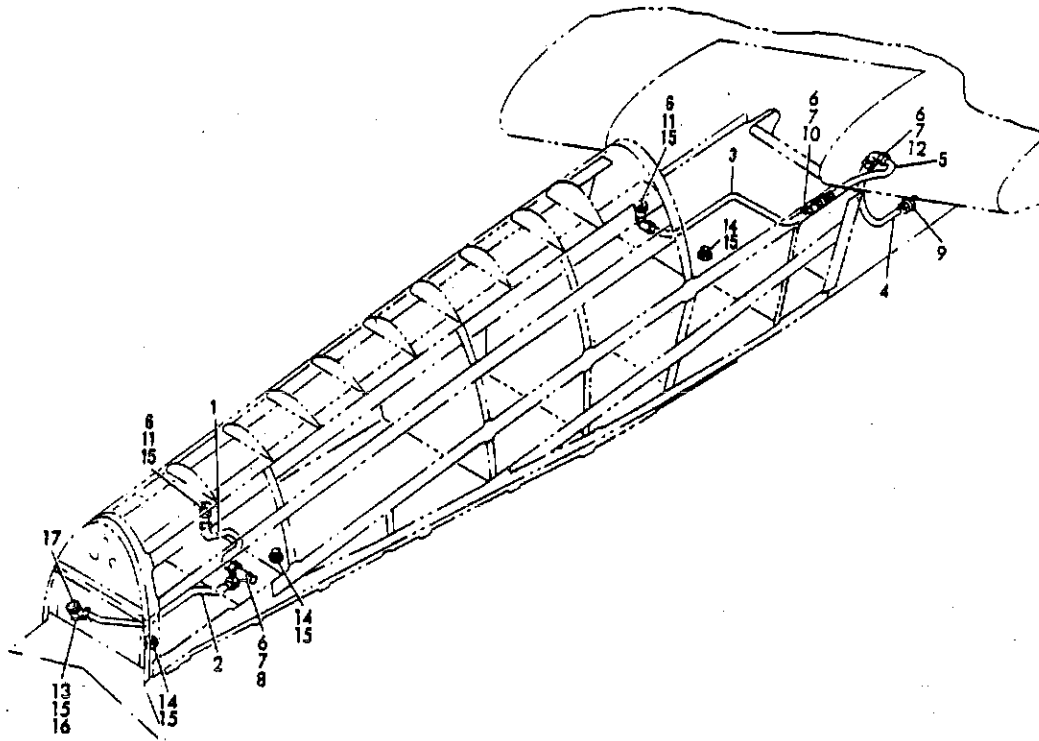


FIGURE 14A. PLUMBING INSTL, OUTBOARD NACELLE STRUT NO. 1 STRUT DRAIN

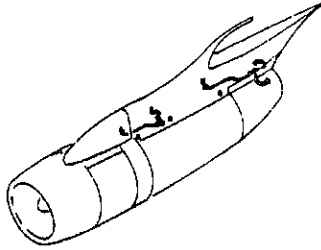

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
14A	65-11904-703	PLUMBING INSTL, OUTBOARD NACELLE STRUT NO. 1 STRUT. . . DRAIN (NACELLE NO. 1) (SEE FIG. 6A, ITEM 7, FIG. 6B, ITEM 6 AND FIG. 6C, ITEM 10)		RF
1	65-11904-804	. TUBE ASSY, STRUT DRAIN 1/2 .028 AISI304		1
2	65-11904-814	. TUBE ASSY, STRUT DRAIN 1/2 IN. .028 AISI304		1
	MS21921-8	. . NUT		2
	BACS13AP8	. . SLEEVE, (OPTIONAL MS21922-8).		2
3	65-11904-75	. TUBE ASSY, STRUT DRAIN 1/2 .028 AISI304		1
4	65-11904-94	. TUBE ASSY, STRUT DRAIN 1/2 IN. .028 AISI304		1
	MS21921D8	. . NUT		2
	BACS13AP8	. . SLEEVE, (OPTIONAL MS21922-8).		2
5	10-60104-15	. HOSE ASSY, STRUT DRAIN FIREPROOF. (OPTIONAL BAC SPEC NO. 10-60104-12)		1
5	10-60104-12	. HOSE ASSY, STRUT DRAIN FIREPROOF. (OPTIONAL TO BAC SPEC NO. 10-60104-15)		1
6	AN924-8	. NUT		5
7	AN960-1216	. WASHER.		3
8	MS21909-8	. TEE		1
9	MS21902-8	. UNION		1
10	MS21924-8	. UNION		1
11	MS21907-8	. ELBOW		2
12	MS21908-8	. ELBOW		1
13	NAS1239-8	. ELBOW		1
14	AN814-8	. PLUG AND BLEEDER.		3
15	MS29512-08	. PACKING		6
16	MS29513-113	. PACKING		1
17	NAS551H8	. BOLT.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



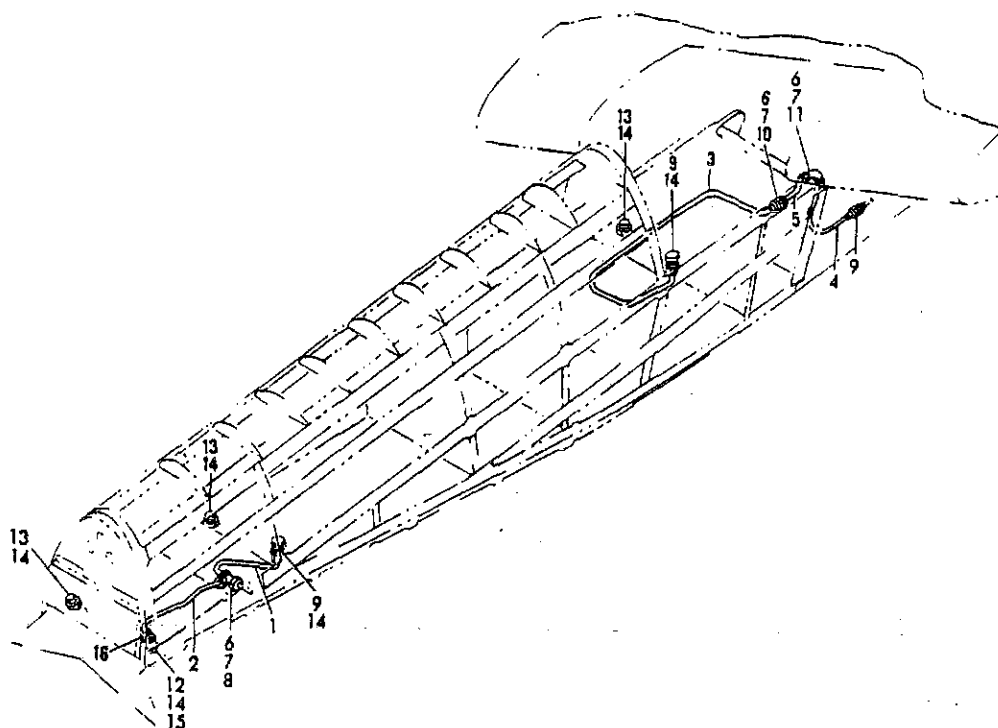


FIGURE 15A. PLUMBING INSTL, OUTBOARD NACELLE STRUT NO. 4 STRUT DRAIN

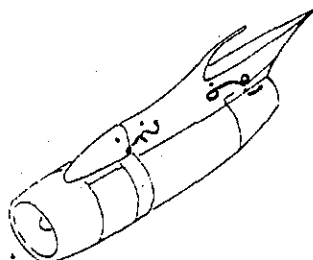


PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
15A	65-11904-705	PLUMBING INSTL, OUTBOARD NACELLE STRUT NO. 4 STRUT. . . DRAIN (NACELLE NO. 4) (SEE FIG. 6A, ITEM 7, FIG. 6B, ITEM 6 AND FIG. 6C, ITEM 10)								RF
1	65-11904-170	. TUBE ASSY, STRUT DRAIN 1/2 .028 AISI304								1
	MS21921-8	. . . NUT								2
	BACS13AP8	. . . SLEEVE, (OPTIONAL MS21922-8).								2
2	65-11904-815	. TUBE ASSY, STRUT DRAIN 1/2 IN. .028 AISI304								1
3	65-11904-76	. TUBE ASSY, STRUT DRAIN 1/2 .028 AISI304								1
4	65-11904-95	. TUBE ASSY, STRUT DRAIN 1/2 IN. .028 AISI304								1
	MS21921D8	. . . NUT								2
	BACS13AP8	. . . SLEEVE, (OPTIONAL MS21922-8).								2
5	10-60104-15	. HOSE ASSY, STRUT DRAIN FIREPROOF. (OPTIONAL BAC SPEC NO. 10-60104-12)								1
5	10-60104-12	. HOSE ASSY, STRUT DRAIN FIREPROOF. (OPTIONAL TO BAC SPEC NO. 10-60104-15)								1
6	AN924-8	. NUT								3
7	AN960-1216	. WASHER.								3
8	MS21909-8	. TEE								1
9	MS21902-8	. UNION								3
10	MS21924-8	. UNION								1
11	MS21908-8	. ELBOW								1
12	NAS1239-8	. ELBOW								1
13	AN814-8	. PLUG AND BLEEDER.								3
14	MS29512-08	. PACKING								6
15	MS29513-113	. PACKING								1
16	NAS551H8	. BOLT.								1
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

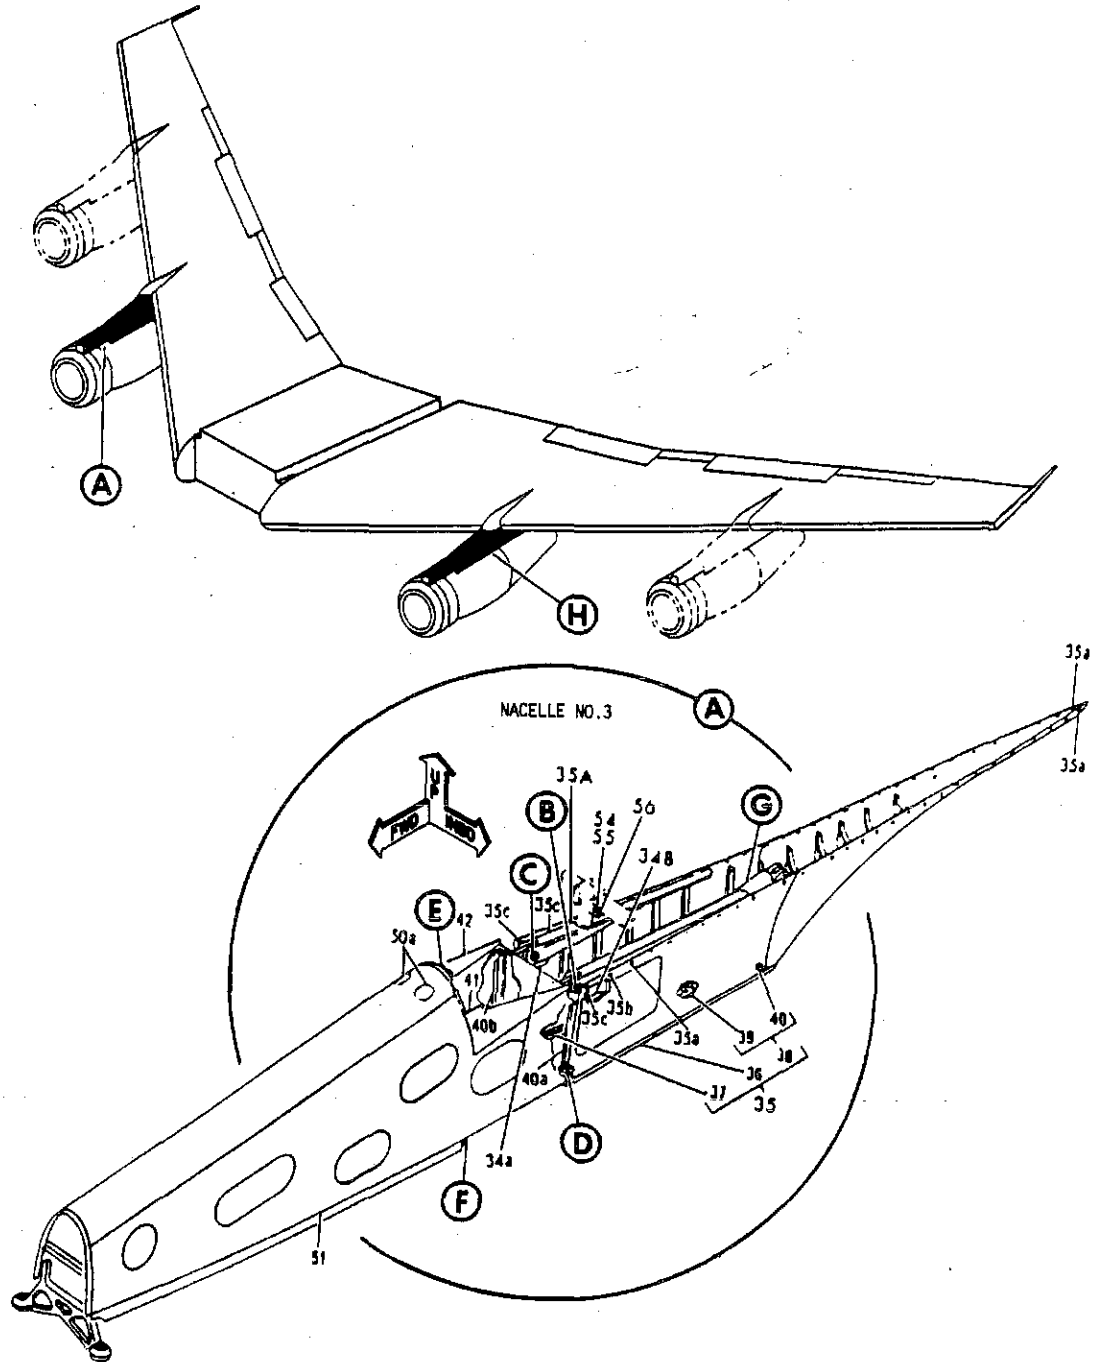


A 5401018 SHT 1 REV 267

FIGURE 18. STRUT INSTL. NO.2 AND NO 3. INBOARD NACELLE (SHEET 1)

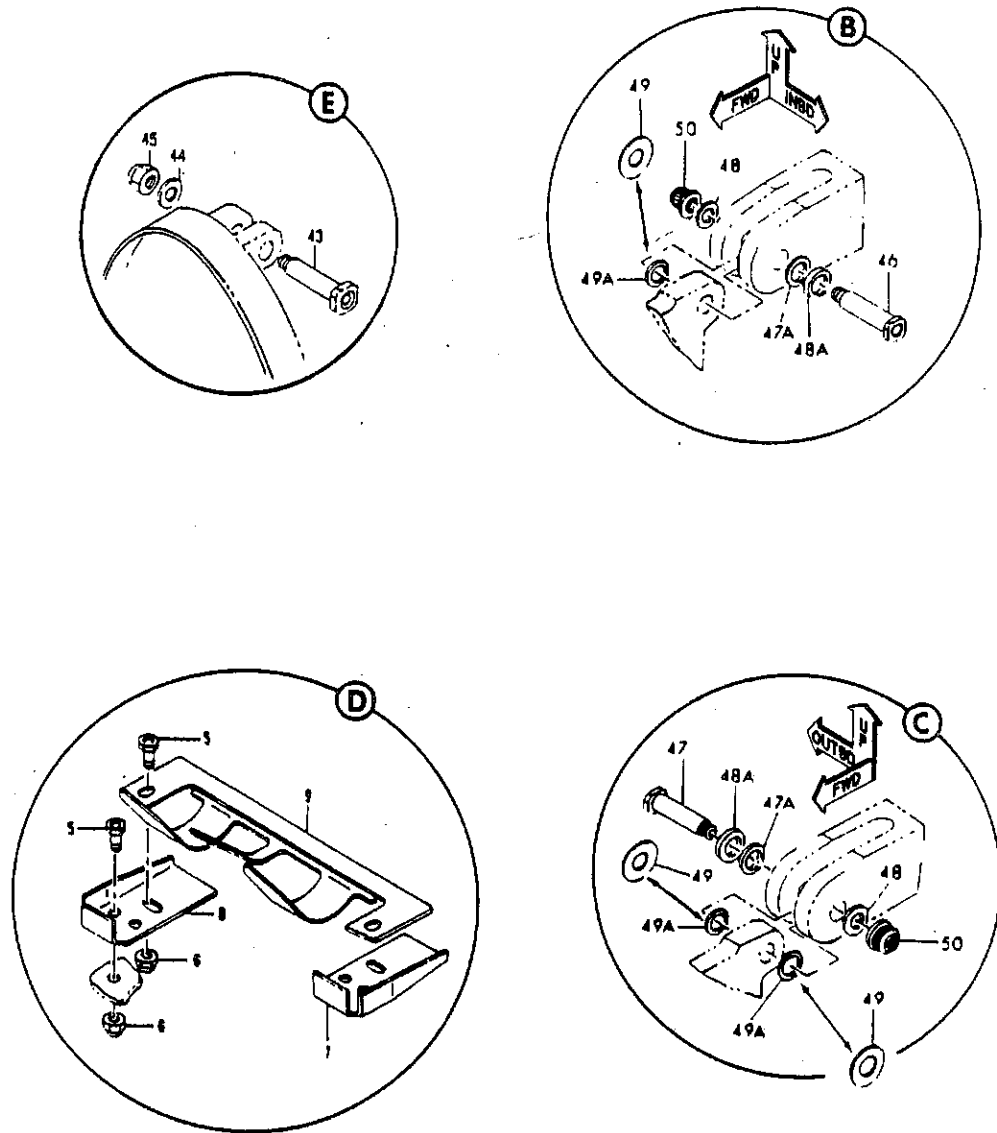


A 5401018 SHT 2 REV 267

FIGURE 18. STRUT INSTL. NO.2 AND NO 3, INBOARD NACELLE (SHEET 2)

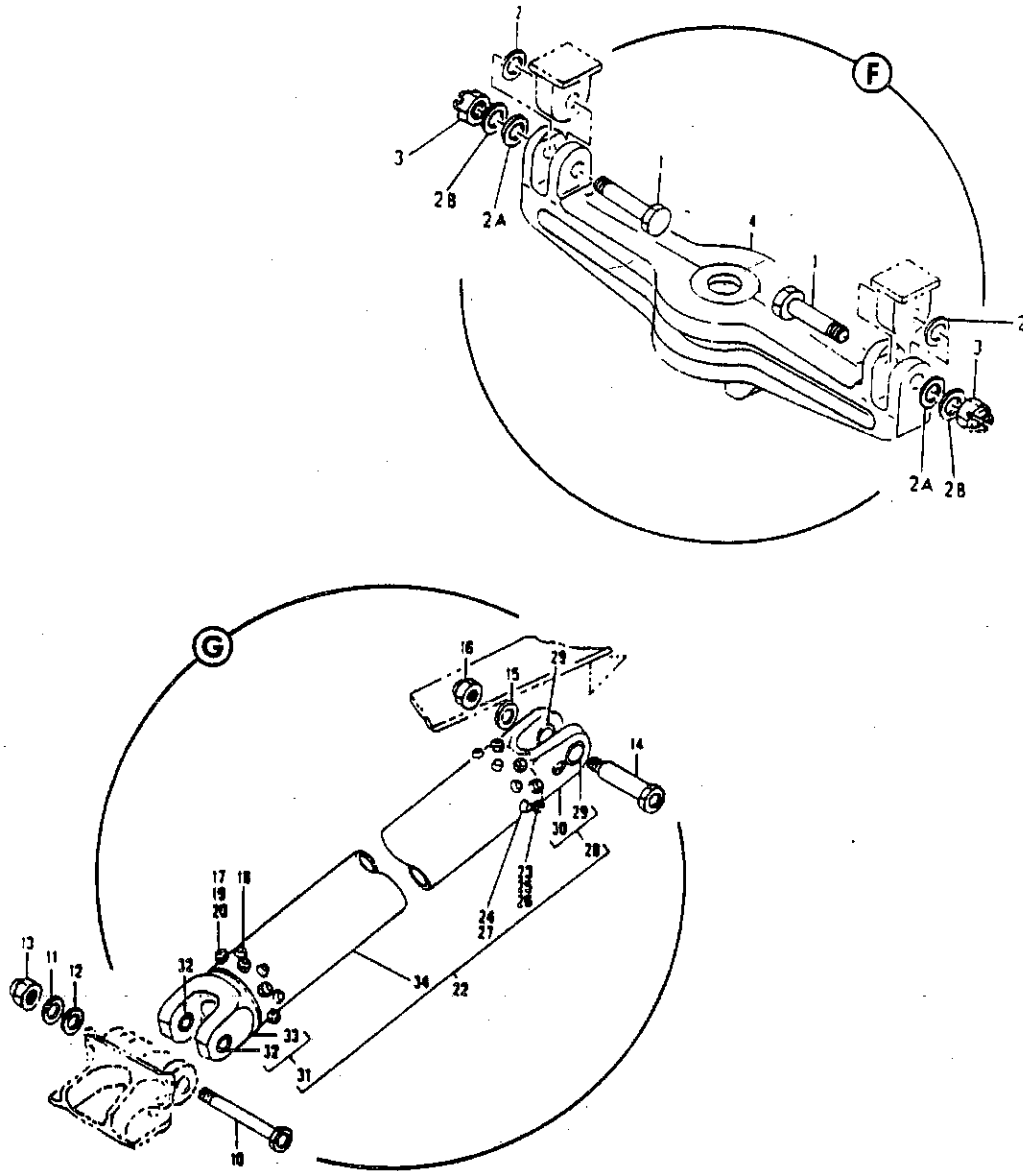


A 5401018 SHT 3 REV 267

FIGURE 18. STRUT INSTL. NO.2 AND NO 3. INBOARD NACELLE (SHEET 3)

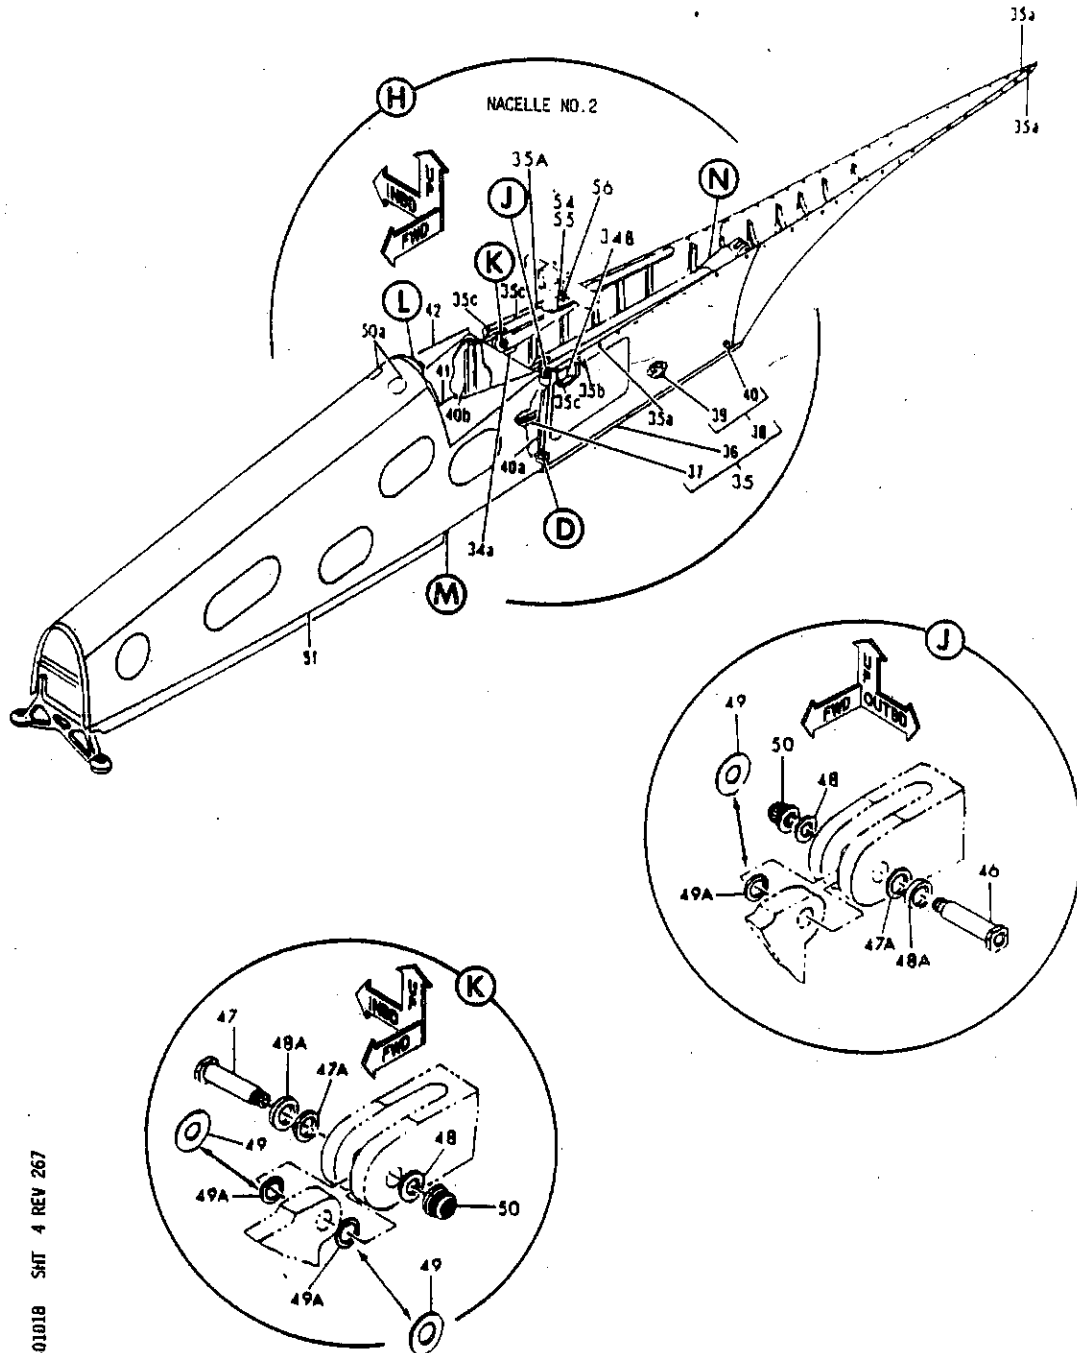

A 5401018 SHIT 4 REV 267

FIGURE 18. STRUT INSTL. NO.2 AND NO 3. INBOARD NACELLE (SHEET 4)

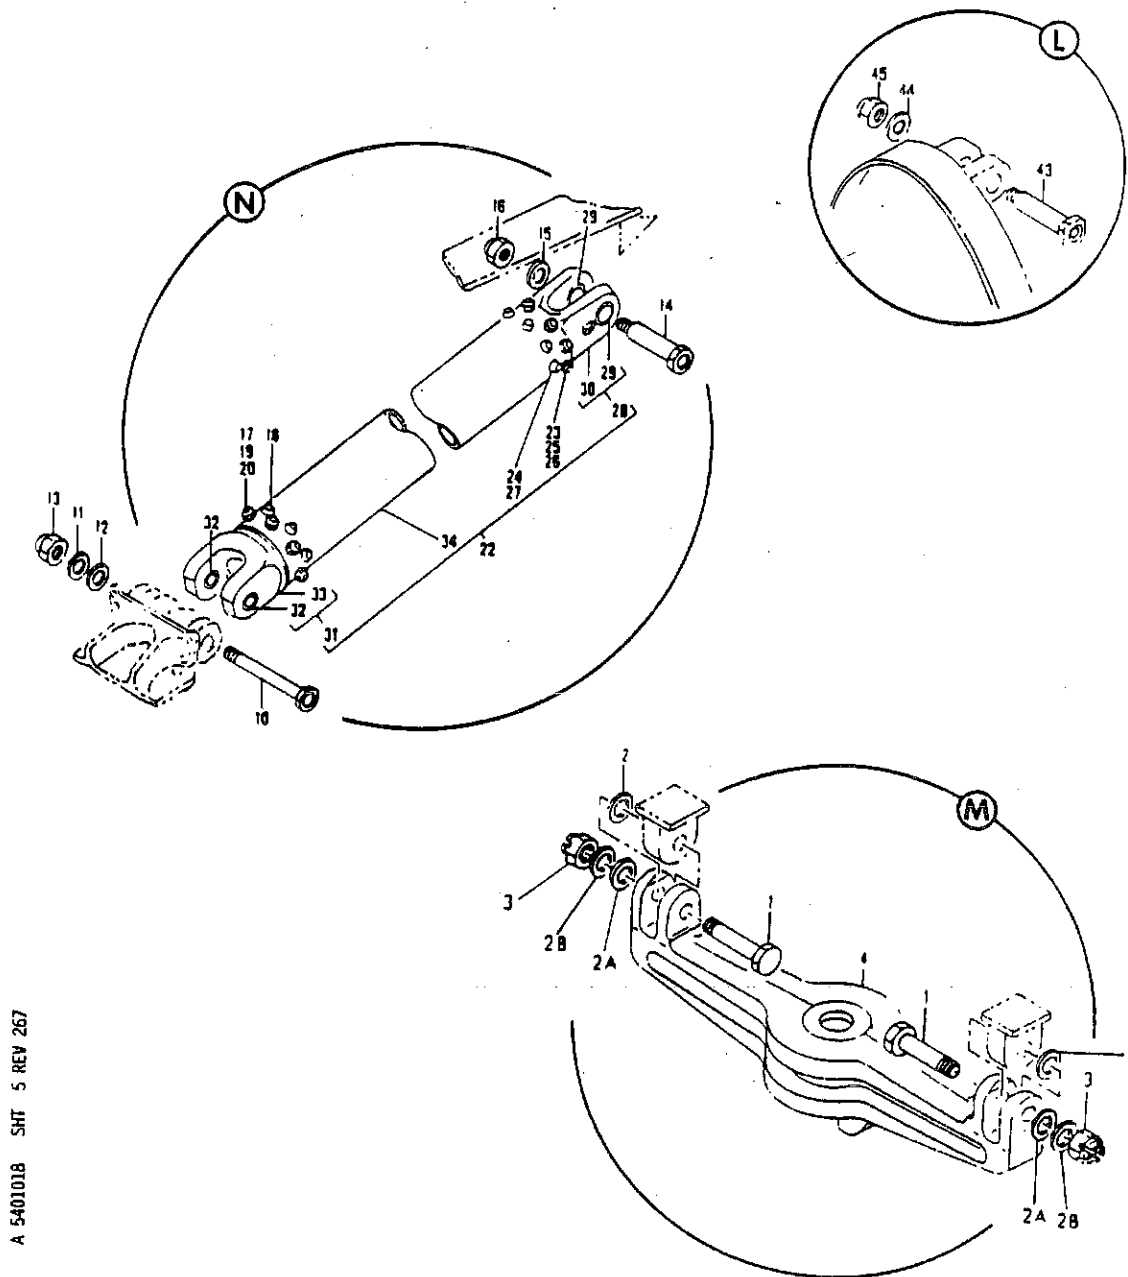

A 5401018 SHT 5 REV 267

FIGURE 18. STRUT INSTL. NO.2 AND NO 3. INBOARD NACELLE (SHEET 5)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
18	65-10616-37	STRUT INSTL, NO. 2 INBOARD NACELLE.	5199	1
	65-10616-7	STRUT INSTL, NO. 2 INBOARD NACELLE.	0150	1
	65-10616-38	STRUT INSTL, NO. 3 INBOARD NACELLE.	5199	1
	65-10616-8	STRUT INSTL, NO. 3 INBOARD NACELLE.	0150	1
1	66-1928-1	. BOLT, REAR ENGINE MOUNT		2
2	66-1995	. SHIM, AFT ENGINE MOUNT.		AR
2	66-1995-1	. SHIM, AFT ENGINE MOUNT.		AR
2	66-1995-2	. SHIM, AFT ENGINE MOUNT.		AR
2	66-1995-3	. SHIM, AFT ENGINE MOUNT.		AR
2A	AN960-816	. WASHER.		AR
2B	AN960-816L	. WASHER.		AR
3	AN320-8	. NUT		2
4	65-11633-4	. BRACKET, REAR ENGINE MOUNT SUPPORT.		1
5	NAS1103-3W	. BOLT.		6
6	NAS679A3W	. NUT		6
7	66-2070-9	. ANGLE, INBOARD NACELLE STRUT LOWER SPAR DRIP (LH)		1
8	66-2070-10	. ANGLE, INBOARD NACELLE STRUT LOWER SPAR DRIP (RH)		1
9	66-2437-3000	. SEAL ASSY, INBOARD NACELLE STRUT.		1
10	NAS1114-68W	. BOLT.		1
11	AN960D1416	. WASHER.		1
12	AN960-1416L	. WASHER.		1
13	NAS1022A14	. NUT		1
14	65-23413-12	. BOLT, INBOARD STRUT STATIC PIN JOINT.		1
15	60-6961	. WASHER, ENGINE NACELLE STRUT INSTALLATION	0150	1
15	60-6961	. WASHER, ENGINE NACELLE STRUT INSTALLATION (OPTIONAL AND FOR REPLACEMENT ORDER 60-6961-4)	5199	1
15	60-6961-4	. WASHER, ENGINE NACELLE STRUT INSTALLATION (OPTIONAL TO AND REPLACEMENT FOR 60-6961)	5199	1
16	NAS1022A14	. NUT		1
17	NAS1106-10W	. BOLT.		9
18	BACB30AL12-8	. BOLT.		9
19	AN960D616L	. WASHER.		9
20	NAS679A6	. NUT		9
21	NAS1080D12	. COLLAR.		9
21A	69-11789-2	. BRACE ASSY, INBOARD NACELLE STRUT DIAGONAL.		1
21B	66-11438-1	. . BLOCK, INBOARD NACELLE STRUT DIAGONAL BRACE		1
22	69-2005-1	. . BRACE ASSY, INBOARD NACELLE STRUT DIAGONAL.		1
23	NAS1106-10W	. . BOLT.		9
24	BACB30AL12-8	. . BOLT.		9
25	AN960D616L	. . WASHER.		9
26	AN364D624	. . NUT		9
27	BACC30AF12	. . COLLAR.		9
28	65-2526-4	. . . FITTING ASSY, INBOARD NACELLE STRUT DIAGONAL.		1
		BRACE UPPER		
29	65-27303-8	 BUSHING, INBOARD NACELLE STRUT ATTACHMENT		2
		FITTING UPPER		
30	65-2526-1	 FITTING, INBOARD NACELLE STRUT DIAGONAL BRACE		1
		UPPER		
31	65-2527-3	 FITTING ASSY, INBOARD NACELLE STRUT DIAGONAL.		1
		BRACE LOWER		
32	65-27303-21	 BUSHING, INBOARD NACELLE STRUT ATTACHMENT		2
		FITTING LOWER		
33	65-2527-1	 FITTING, INBOARD NACELLE STRUT DIAGONAL BRACE		1
		LOWER		
34	69-2017	. . . TUBE, INBOARD NACELLE STRUT DIAGONAL BRACE.		1
34A	65-60900-1	. STRAP INSTL, INBOARD STRUT ACCESS PANEL TO FAIRING.		1
		ATTACH (SEE 54-2, FIG. 14)		
34B	65-60900-2	. STRAP INSTL, INBOARD STRUT ACCESS PANEL TO FAIRING.		1
		ATTACH (SEE 54-2, FIG. 14)		
35	65-10618-35	. FAIRING ASSY, INBOARD NACELLE STRUT TRAILING EDGE .		1
		(REWORK) (NACELLE NO. 2)		
35	65-10618-36	. FAIRING ASSY, INBOARD NACELLE STRUT TRAILING EDGE .		1
		(REWORK) (NACELLE NO. 3)		
		ATTACHING PARTS		
35A	NAS517-3-3	. SCREW		56
35C	NAS221-6	. SCREW		3
		-----*		
38	5-85626-3167	. . FAIRING ASSY, INBOARD NACELLE STRUT TRAILING EDGE .		1
		(NACELLES ONLY) (REWORKED BY DWG NO. 65-10618)		
		(NACELLE NO. 2) (SEE 26-2, FIG. 23)		
38	5-85626-3168	. . FAIRING ASSY, INBOARD NACELLE STRUT TRAILING EDGE .		1
		(NACELLES ONLY) (REWORKED BY DWG NO. 65-10618)		
		(NACELLE NO. 3) (SEE 26-2, FIG. 23)		

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING
Intercontinental
777
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
18 39	69-19001-1	. . .	DRAIN ASSY, NACELLE STRUT MID-SPAR FUEL (NACELLE NO. 2) (SEE 28-7, FIG. 5)							1
39	69-19001-2	. . .	DRAIN ASSY, NACELLE STRUT MID-SPAR FUEL (NACELLE NO. 3) (SEE 28-7, FIG. 5)							1
40	60-2250-2002	. . .	FITTING, DRAIN. (OPTIONAL 66-1490-2000)							1
40	66-1490-2000	. . .	FITTING, DRAIN. (OPTIONAL TO 60-2250-2002)							1
40A	5-85626-3169	. . .	SEAL ASSY, INBOARD STRUT TRAILING EDGE FAIRING. (LH) (USED ON 5-85626-3167)							1
40A	5-85626-3170	. . .	SEAL ASSY, INBOARD STRUT TRAILING EDGE FAIRING. (LH) (USED ON 5-85626-3168)							1
40B	5-85626-3171	. . .	SEAL ASSY, INBOARD STRUT TRAILING EDGE FAIRING. (RH) (USED ON 5-85626-3167)							1
40B	5-85626-3172	. . .	SEAL ASSY, INBOARD STRUT TRAILING EDGE FAIRING. (RH) (USED ON 5-85626-3168)							1
	AN426-4	. . .	ATTACHING PARTS RIVET							2
	AN426-5	. . .	RIVET							38
41	5-87839-3071	. . .	FIRE PROTECTION, (SEE 26-2, FIG. 23). PANEL INSTL, NO. 2 INBOARD NACELLE STRUT TO WING LH SIDE ACCESS (NACELLE NO. 2) (SEE 54-2, FIG. 4)							1
41	5-87839-3004	. . .	PANEL INSTL, NO. 3 INBOARD NACELLE STRUT TO WING LH SIDE ACCESS (NACELLE NO. 3) (SEE 54-2, FIG. 3)							1
42	5-87839-3003	. . .	PANEL INSTL, NO. 2 INBOARD NACELLE STRUT TO WING RH SIDE ACCESS (NACELLE NO. 2) (SEE 54-2, FIG. 3)							1
42	5-87839-3072	. . .	PANEL INSTL, NO. 3 INBOARD NACELLE STRUT TO WING RH SIDE ACCESS (NACELLE NO. 3) (SEE 54-2, FIG. 4)							1
43	65-23413-23	. . .	BOLT, INBOARD STRUT STATIC PIN JOINT.						0151	1
43	204-70265-2	. . .	BOLT.						5299	1
44	60-6961-1	. . .	WASHER, ENGINE NACELLE STRUT INSTALLATION. (DELETED BY SB 3173)						0150	1
44	BACW10BP16P	. . .	WASHER, (ADDED BY SB 3173).						0150	1
44	BACW10BP14P	. . .	WASHER.						5299	1
44	60-6961-1	. . .	WASHER, ENGINE NACELLE STRUT INSTALLATION. (OPTIONAL AND FOR REPLACEMENT ORDER 60-6961-5)						5151	1
44	60-6961-5	. . .	WASHER, ENGINE NACELLE STRUT INSTALLATION. (OPTIONAL TO AND REPLACEMENT FOR 60-6961-1)						5151	1
45	NAS1022A14	. . .	NUT						5199	1
45	NAS1022A14	. . .	NUT, (DELETED BY SB 3173)						0150	1
45	BACN10BY514	. . .	NUT, (ADDED BY SB 3173)						0150	1
46	65-23413-29	. . .	BOLT, STATIC PIN JOINT OUTBD (NACELLE NO. 2).							1
46	65-23413-30	. . .	BOLT, STATIC PIN JOINT INBD (NACELLE NO. 3)							1
47	65-23413-30	. . .	BOLT, STATIC PIN JOINT INBD (NACELLE NO. 2)							1
47	65-23413-29	. . .	BOLT, STATIC PIN JOINT OUTBD (NACELLE NO. 3).							1
48	AN960D1216	. . .	WASHER.						5199	2
48	AN960D1216	. . .	WASHER. (OPTIONAL BACW10BR314 (ADDED BY SB 3173))						0150	2
48	BACW10BR314	. . .	WASHER, (ADDED BY SB 3173). (OPTIONAL TO AN960D1216)						0150	2
49	66-1044-6	. . .	SHIM, SUPPORT HANGER.						5199	AR
49	66-1044-6	. . .	SHIM, SUPPORT HANGER (ADDED BY SB 3183)						0150	AR
49	66-1044-7	. . .	SHIM, SUPPORT HANGER.						5199	AR
49	66-1044-7	. . .	SHIM, SUPPORT HANGER (ADDED BY SB 3183)						0150	AR
49	66-1044-8	. . .	SHIM, SUPPORT HANGER.						5199	AR
49	66-1044-8	. . .	SHIM, SUPPORT HANGER (ADDED BY SB 3183)						0150	AR
49	66-1044-9	. . .	SHIM, SUPPORT HANGER.						5199	AR
49	66-1044-9	. . .	SHIM, SUPPORT HANGER (ADDED BY SB 3183)						0150	AR
49	66-1044-10	. . .	SHIM, SUPPORT HANGER.						5199	AR
49	66-1044-10	. . .	SHIM, SUPPORT HANGER (ADDED BY SB 3183)						0150	AR
49	66-1044-11	. . .	SHIM, SUPPORT HANGER.						5199	AR
49	66-1044-11	. . .	SHIM, SUPPORT HANGER (ADDED BY SB 3183)						0150	AR
49A	66-1044	. . .	SHIM, SUPPORT HANGER.						5199	AR
49A	66-1044	. . .	SHIM, SUPPORT HANGER (DELETED BY SB 3183)						0150	AR
49A	66-1044-1	. . .	SHIM, SUPPORT HANGER.						5199	AR
49A	66-1044-1	. . .	SHIM, SUPPORT HANGER (DELETED BY SB 3183)						0150	AR
49A	66-1044-2	. . .	SHIM, SUPPORT HANGER.						5199	AR
49A	66-1044-2	. . .	SHIM, SUPPORT HANGER (DELETED BY SB 3183)						0150	AR
49A	66-1044-3	. . .	SHIM, SUPPORT HANGER.						5199	AR
49A	66-1044-3	. . .	SHIM, SUPPORT HANGER (DELETED BY SB 3183)						0150	AR
49A	66-1044-4	. . .	SHIM, SUPPORT HANGER.						5199	AR
49A	66-1044-4	. . .	SHIM, SUPPORT HANGER (DELETED BY SB 3183)						0150	AR
49A	66-1044-5	. . .	SHIM, SUPPORT HANGER.						5199	AR

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
			1	2	3	4	5	6	7		
18	49A	66-1044-5	. SHIM, SUPPORT HANGER (DELETED BY SB 3183)							0150	AR
	50	BACN10B12L	. NUT								2
	51	65-2510-3059	. STRUT ASSY, EQUIPMENT (NACELLE NO. 2) (REWORKED BY.							0150	1
			SB 3183) (SEE FIG. 21B)								
	51	65-2510-3060	. STRUT ASSY, EQUIPMENT (NACELLE NO. 3) (REWORKED BY.							0150	1
			SB 3183) (SEE FIG. 21B)								
	51	65-2510-3093	. STRUT ASSY, EQUIPMENT (NACELLE NO. 2) (SEE FIG. 21C)							5199	1
	51	65-2510-3094	. STRUT ASSY, EQUIPMENT (NACELLE NO. 3) (SEE FIG. 21C)							5199	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE											

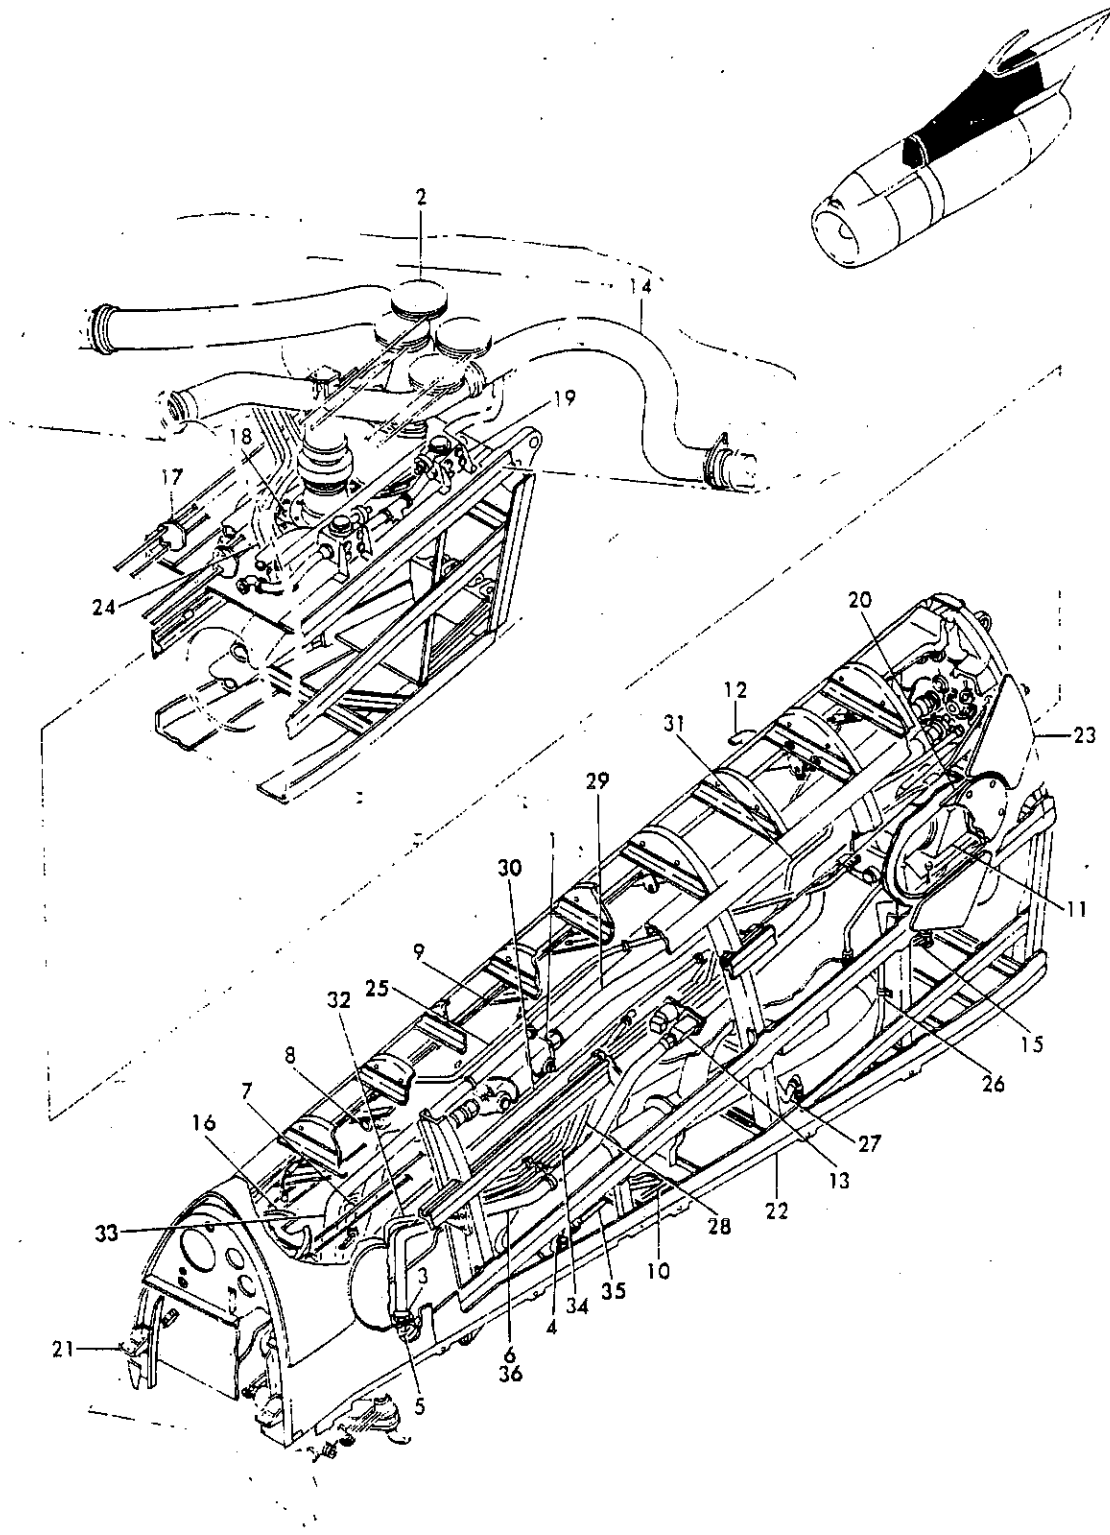


FIGURE 21B. STRUT ASSY, NO. 2 AND 3 INBOARD NACELLE EQUIPMENT



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
R 21B	65-2510-3059	STRUT ASSY, NO. 2 INBOARD NACELLE EQUIPMENT (REWORKED BY SB 3183) (SEE FIG. 18, ITEM 51)	0150	RF
R	65-2510-3060	STRUT ASSY, NO. 3 INBOARD NACELLE EQUIPMENT (REWORKED BY SB 3183) (SEE FIG. 18, ITEM 51)	0150	RF
R	1 65-14511-16	. FLOWMETER INSTL, INBOARD FAN ENGINE FUEL (SEE 28-5, FIG. 11A)	0150	1
R	2 50-8709-777	. CONTROL INSTL, SECTION 77 ENGINE THROTTLES LH (NACELLE NO. 2) (SEE 76-1, FIG. 7)	0150	1
R	2 50-8709-877	. CONTROL INSTL, SECTION 77 ENGINE THROTTLES RH (NACELLE NO. 3) (SEE 76-1, FIG. 7)	0150	1
R	3 65-31487-9	. FITTING INSTL, NACELLE STRUT LOWER SPAR PLUMBING. . . . ENGINE INDICATING, (SEE 77-1, FIG. 14 AND 14E). . . . FUEL, (SEE 28-1, FIG. 10 AND 10A AND 28-5, FIG. 11A AND 12A)	0150 0150 0150	1
R		. . HYDRAULIC POWER, (SEE 29-1, FIG. 14, 14A, 14B AND 14D)	0150	
R	5 69-30211-1	. . WATER INJECTION, (SEE 82-1, FIG. 22 AND 22A) . . . CAP INSTL, NACELLE STRUT WATER INJECTION (SEE 82-1, FIG. 22A)	0150 0150	1
R	8 65-11611	. ELECTRICAL INSTL, INBOARD STRUT (SEE 24-2, FIG. 10)	0150	1
R	10 65-43740-1	. DETECTOR INSTL, KIDDE SHROUDED INBOARD STRUT MOUNTED FIRE (SEE 26-1, FIG. 158)	0150	1
R	11 65-15667-11	. TRANSMITTER INSTL, FAN ENGINE INBOARD STRUT PRESSURE RATIO (SEE 77-1, FIG. 7)	0150	1
R	12 65-27482-1	. PROBE INSTL, INBOARD NACELLE STRUT PRESSURE RATIO . . (SEE 77-1, FIG. 7)	0150	1
R	13 65-11649-2	. SPACER INSTL, WATER INJECTION SHUTOFF VALVE REPLACEMENT (SEE 82-1, FIG. 6)	0150	1
R	14 65-11898-13	. DUCT INSTL, INBOARD NACELLE STRUT AIR CONDITIONING. . AND WING THERMAL ANTI-ICING LH (NACELLE NO. 2)	0150	1
R	14 65-11898-14	. DUCT INSTL, INBOARD NACELLE STRUT AIR CONDITIONING. . AND WING THERMAL ANTI-ICING RH (NACELLE NO. 3)	0150	1
R		. . AIR CONDITIONING, (SEE 21-1, FIG. 9)	0150	
R	15 65-10612	. . ICE AND RAIN PROTECTION, (SEE 30-1, FIG. 11) FOLLOW-UP INSTL, AFT THRUST REVERSER (SEE 78-2, FIG. 8)	0150 0150	1
R	16 65-10610	. CONTROL INSTL, FAN ENGINE INBOARD NACELLE STRUT . . . ENGINE (SEE 76-1, FIG. 13)	0150	1
R	17 69-11152-1	. SEAL INSTL, INBOARD NACELLE STRUT ENGINE CONTROL. . . (NACELLE NO. 2) (SEE 76-1, FIG. 18)	0150	1
R	17 69-11152-2	. SEAL INSTL, INBOARD NACELLE STRUT ENGINE CONTROL. . . (NACELLE NO. 3) (SEE 76-1, FIG. 18)	0150	1
R	18 69-12379	. FILTER INSTL, INBOARD FAN ENGINE HYDRAULIC RETURN . . (SEE 29-1, FIG. 15)	0150	1
R	19 65-11903	. VALVE AND TUBING INSTL, NO. 2 STRUT FIRE EXTINGUISHER (NACELLE NO. 2) (SEE 26-2, FIG. 13)	0150	1
R	19 65-11903-1	. VALVE AND TUBING INSTL, NO. 3 STRUT FIRE EXTINGUISHER (NACELLE NO. 3) (SEE 26-2, FIG. 14)	0150	1
R	22 65-2516-3030	. STRUCTURE ASSY, INBOARD NACELLE STRUT (REWORKED BY SB 3183) (SEE FIG. 24)	0150	1
R	25 65-11904-448	. PLUMBING INSTL, INBOARD NACELLE STRUT PT2 PRESSURE. . RATIO (SEE 77-1, FIG. 14B)	0150	1
R	26 65-11904-410	. PLUMBING INSTL, INBOARD NACELLE STRUT PT7 PRESSURE. . RATIO (SEE 77-1, FIG. 14E)	0150	1
R	27 65-10540-2	. PLUMBING INSTL, INBOARD FAN ENGINE THRUST REVERSER. . (SEE 78-2, FIG. 17B)	0150	1
R	28 65-11904-402	. PLUMBING INSTL, INBOARD NACELLE STRUT FIRE PROTECTION (SEE 26-2, FIG. 7A)	0150	1
R	30 65-58888-1	. RETURN LINE INSTL, HYDRAULIC (SEE 29-1, FIG. 14A) . .	0150	1
R	31 65-58889-1	. RESERVOIR PRESSURE LINE INSTL, HYDRAULIC (NACELLE NO. 2) (SEE 29-1, FIG. 14B)	0150	1
R	31 65-58889-2	. RESERVOIR PRESSURE LINE INSTL, HYDRAULIC (NACELLE NO. 3) (SEE 29-1, FIG. 14B)	0150	1
R	32 65-58887-1	. PRESSURE LINE INSTL, HYDRAULIC (SEE 29-1, FIG. 14C) .	0150	1
R	33 65-58886-1	. SUPPLY LINE INSTL, HYDRAULIC (SEE 29-1, FIG. 14D) . .	0150	1
R	34 65-11904-702	. PLUMBING INSTL, INBOARD NACELLE STRUT NO. 2 STRUT . . DRAIN (NACELLE NO. 2) (SEE FIG. 29A)	0150	1
R	34 65-11904-704	. PLUMBING INSTL, INBOARD NACELLE STRUT NO. 3 STRUT . . DRAIN (NACELLE NO. 3) (SEE FIG. 29B)	0150	1
R	36 65-11904-701	. PLUMBING INSTL, INBOARD NACELLE STRUT WATER INJECTION (SEE 82-1, FIG. 22A)	0150	1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

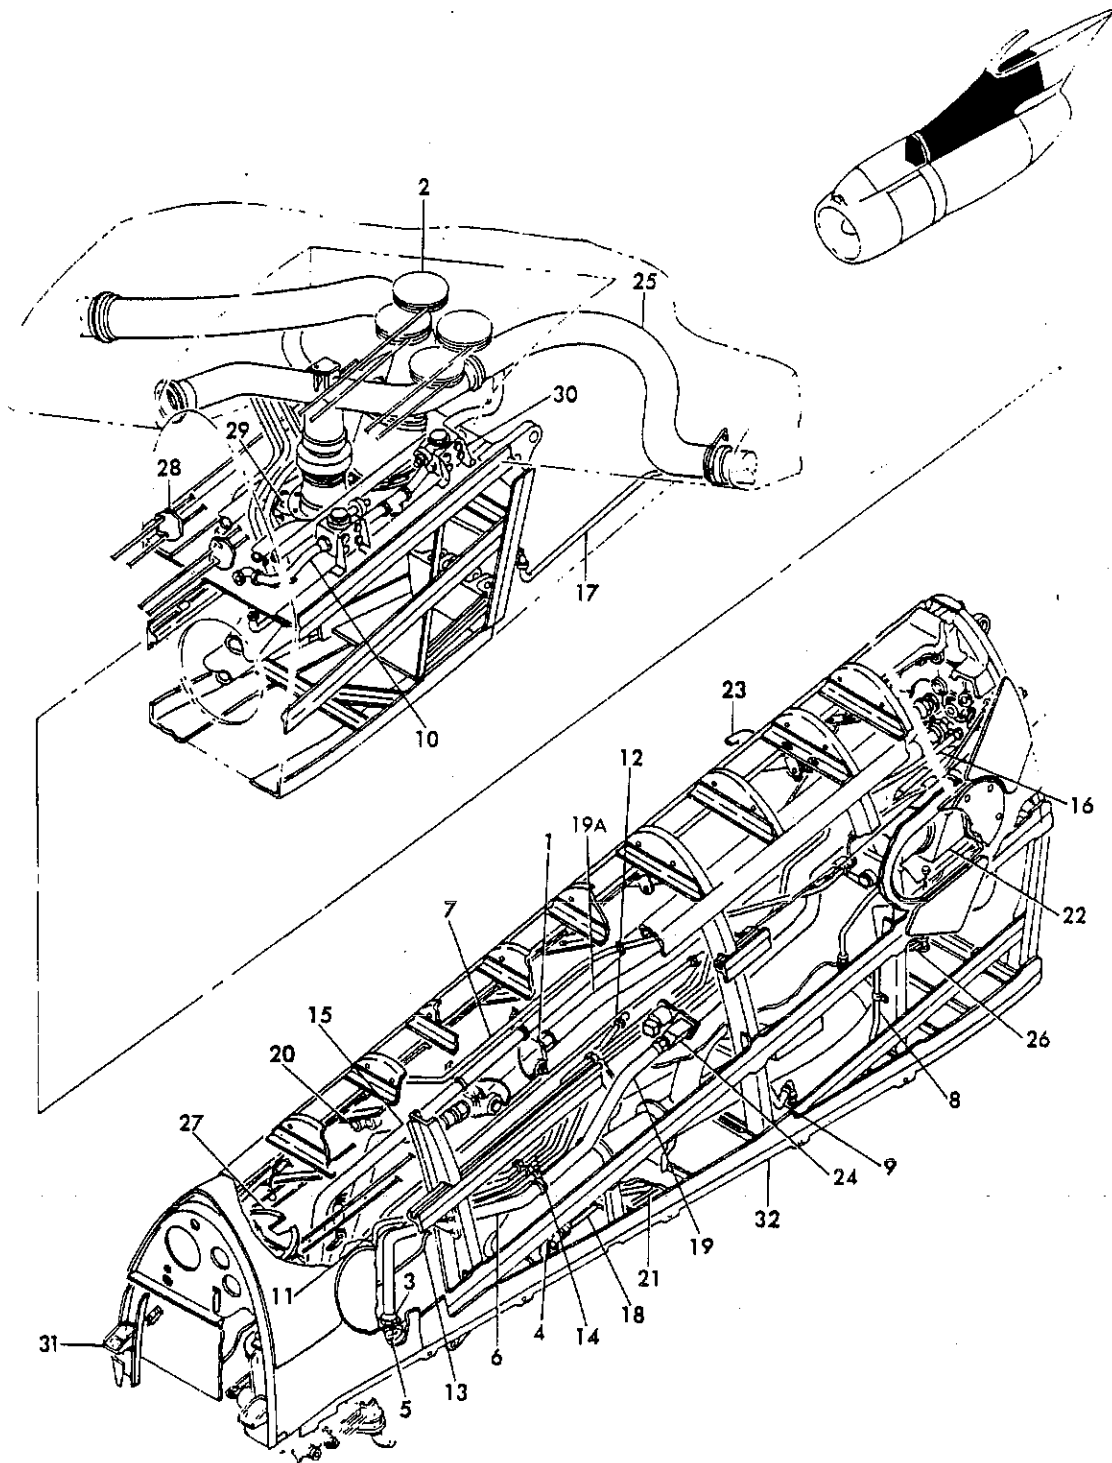


FIGURE 21C. STRUT ASSY, NO. 2 AND 3 INBOARD NACELLE EQUIPMENT

BOEING *777*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
21C	65-2510-3093	STRUT ASSY, NO. 2 INBOARD NACELLE EQUIPMENT (SEE FIG. 18, ITEM 51)	5299	RF
	65-2510-3094	STRUT ASSY, NO. 3 INBOARD NACELLE EQUIPMENT (SEE FIG. 18, ITEM 51)	5299	RF
1	65-13125-34	. FLOWMETER INSTL, FAN ENGINE FUEL (SEE 28-5, FIG. 12A)	5199	1
2	50-8709-777	. CONTROL INSTL, SECTION 77 ENGINE THROTTLES LH (NACELLE NO. 2) (SEE 76-1, FIG. 7)	5199	1
2	50-8709-877	. CONTROL INSTL, SECTION 77 ENGINE THROTTLES RH (NACELLE NO. 3) (SEE 76-1, FIG. 7)	5199	1
3	65-31487-11	. FITTING INSTL, LOWER SPAR PLUMBING	5199	1
		. . ENGINE INDICATING, (SEE 77-1, FIG. 14 AND 14E)	5199	
		. . FUEL, (SEE 28-5, FIG. 11A, 12A AND 12B)	5199	
		. . HYDRAULIC POWER, (SEE 29-1, FIG. 14A, 14B, 14C AND 14D)	5199	
7	65-11904-448	. PLUMBING INSTL, PT2 PRESSURE RATIO (SEE 77-1, FIG. 14B)	5199	1
8	65-11904-410	. PLUMBING INSTL, PT7 PRESSURE RATIO (SEE 77-1, FIG. 14E)	5199	1
9	65-10540-2	. PLUMBING INSTL, THRUST REVERSER (SEE 78-2, FIG. 17B)	5199	1
10	65-11904-402	. PLUMBING INSTL, FIRE PROTECTION (SEE 26-2, FIG. 7A)	5199	1
12	65-58888-1	. RETURN LINE INSTL, HYDRAULIC (SEE 29-1, FIG. 14A)	5199	1
13	65-58889-1	. RESERVOIR PRESSURE LINE INSTL, HYDRAULIC (NACELLE NO. 2) (SEE 29-1, FIG. 14B)	5199	1
13	65-58889-2	. RESERVOIR PRESSURE LINE INSTL, HYDRAULIC (NACELLE NO. 3) (SEE 29-1, FIG. 14B)	5199	1
14	65-58887-1	. PRESSURE LINE INSTL, HYDRAULIC (SEE 29-1, FIG. 14C)	5199	1
15	65-58886-1	. SUPPLY LINE INSTL, HYDRAULIC (SEE 29-1, FIG. 14D)	5199	1
16	65-11904-702	. PLUMBING INSTL, NO. 2 DRAIN (NACELLE NO. 2) (SEE FIG. 29A)	5199	1
17	65-11904-704	. PLUMBING INSTL, NO. 3 DRAIN (NACELLE NO. 3) (SEE FIG. 29B)	5199	1
18	65-11904-503	. PLUMBING INSTL, AIR START (SEE 80-1, FIG. 8A)	5199	1
20	65-11611	. ELECTRICAL INSTL, (SEE 24-2, FIG. 10)	5199	1
21	65-43740-1	. DETECTOR INSTL, KIDDE SHROUDED MOUNTED FIRE (SEE 26-1, FIG. 15B)	5151	1
21	65-43740-3	. DETECTOR INSTL, KIDDE SHROUDED MOUNTED FIRE (SEE 26-1, FIG. 15B)	5299	1
22	65-15667-11	. TRANSMITTER INSTL, FAN ENGINE PRESSURE RATIO (SEE 77-1, FIG. 7)	5199	1
23	65-27482-1	. PROBE INSTL, PRESSURE RATIO (SEE 77-1, FIG. 7)	5199	1
25	65-11898-13	. DUCT INSTL, AIR CONDITIONING AND WING THERMAL ANTI-ICING LH (NACELLE NO. 2)	5199	1
25	65-11898-14	. DUCT INSTL, AIR CONDITIONING AND WING THERMAL ANTI-ICING RH (NACELLE NO. 3)	5199	1
		. . AIR CONDITIONING, (SEE 21-1, FIG. 9)	5199	
		. . ICE AND RAIN PROTECTION, (SEE 30-1, FIG. 11)	5199	
26	65-10612	. FOLLOW-UP INSTL, AFT THRUST REVERSER (SEE 78-2, FIG. 8)	5199	1
27	65-10610	. CONTROL INSTL, FAN ENGINE (SEE 76-1, FIG. 13)	5199	1
28	69-11152-1	. SEAL INSTL, ENGINE CONTROL (NACELLE NO. 2) (SEE 76-1, FIG. 18)	5199	1
28	69-11152-2	. SEAL INSTL, ENGINE CONTROL (NACELLE NO. 3) (SEE 78-1, FIG. 18)	5199	1
29	69-12379	. FILTER INSTL, FAN ENGINE HYDRAULIC RETURN (SEE 29-1, FIG. 15)	5199	1
30	65-11903-18	. VALVE AND TUBING INSTL, NO. 2 STRUT FIRE EXTINGUISHER (NACELLE NO. 2) (SEE 26-2, FIG. 13)	5199	1
30	65-11903-19	. VALVE AND TUBING INSTL, NO. 3 STRUT FIRE EXTINGUISHER (NACELLE NO. 3) (SEE 26-2, FIG. 14)	5199	1
31	65-33550-1	. RECEPTACLE INSTL, FARING AFT LATCH PIN (SEE FIG. 32)	5199	1
32	65-2516-3030	. STRUCTURE ASSY, (SEE FIG. 24)	5299	1
32	65-2516-3030	. STRUCTURE ASSY, (REWORKED BY SB 3183) (SEE FIG. 24)	5151	1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

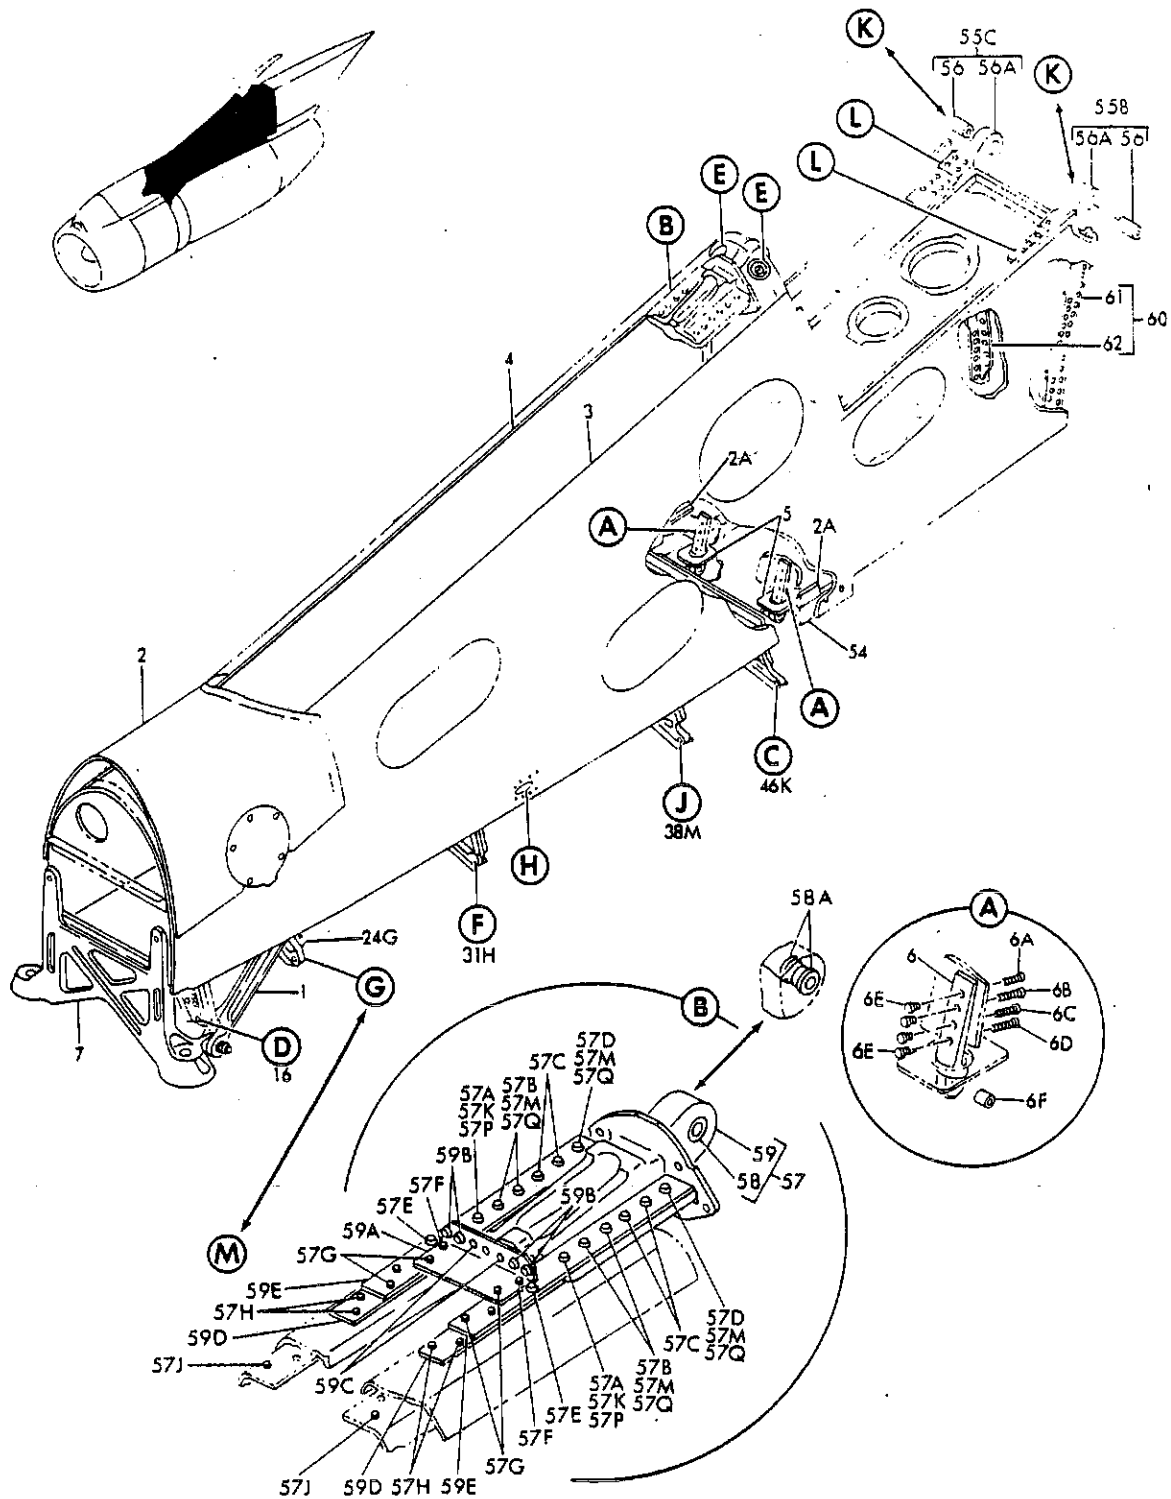


FIGURE 24. STRUCTURE ASSY, INBOARD NACELLE STRUT (SHEET 1)

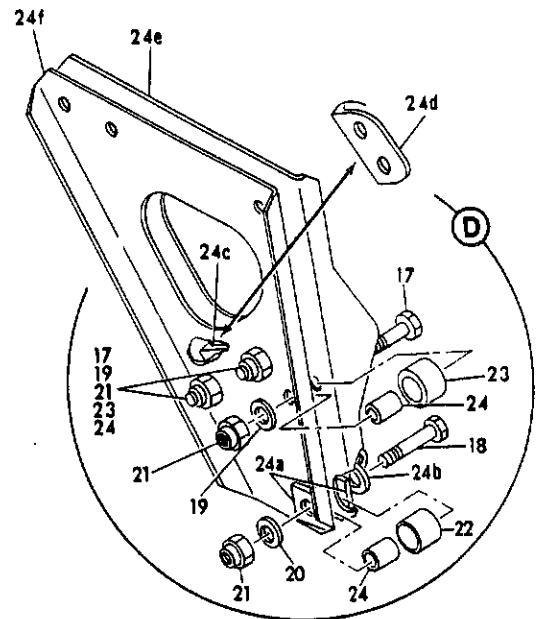
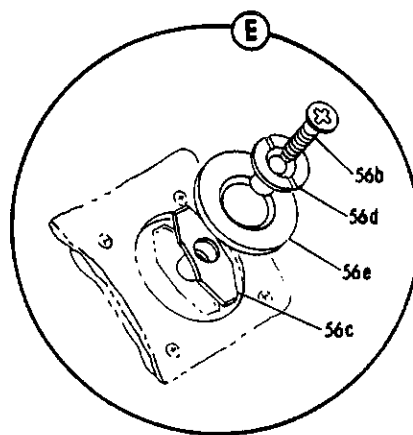
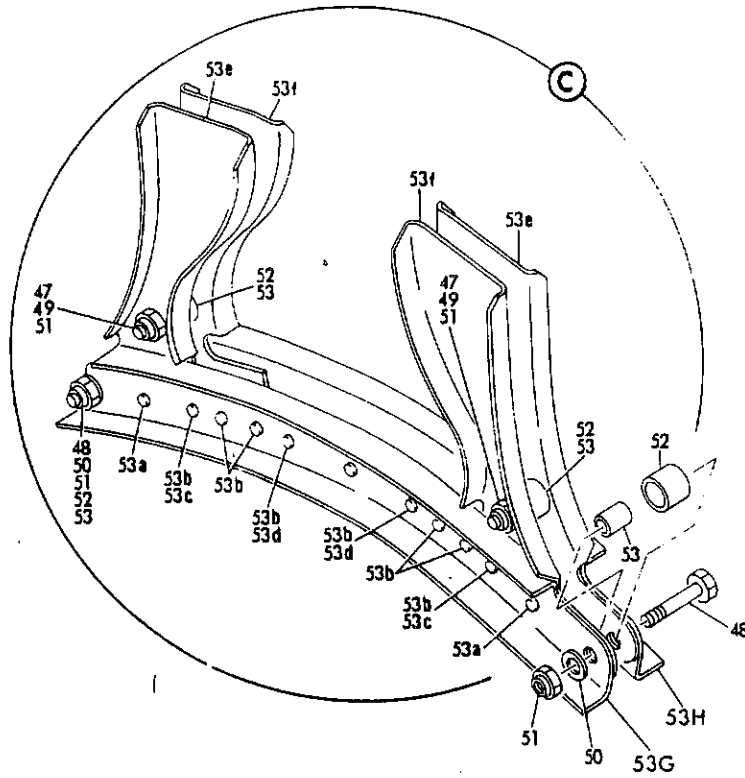


FIGURE 24. STRUCTURE ASSY, INBOARD NACELLE STRUT (SHEET 2)

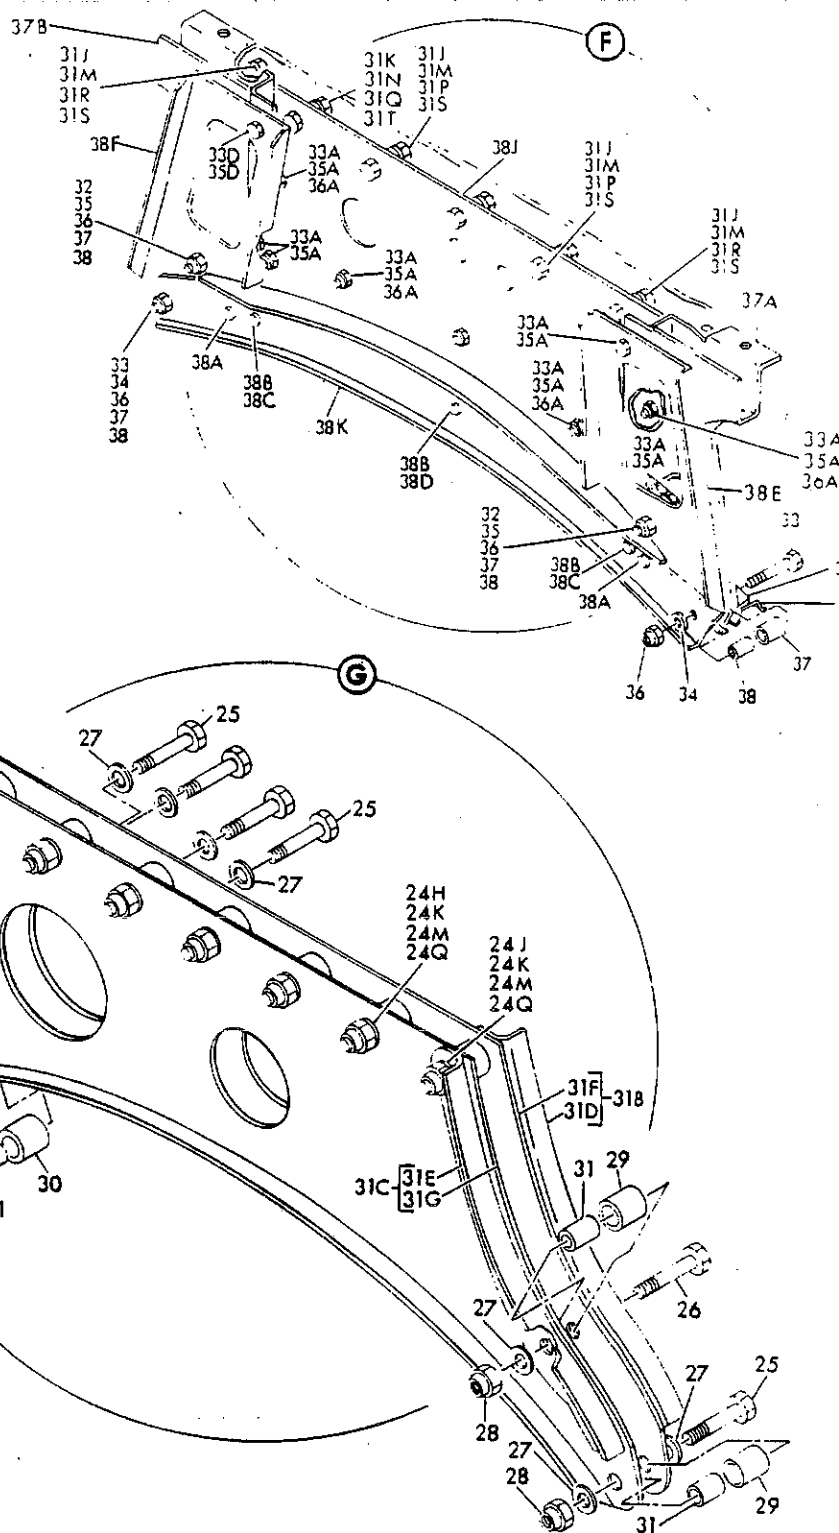


FIGURE 24. STRUCTURE ASSY, INBOARD NACELLE STRUT (SHEET 3)

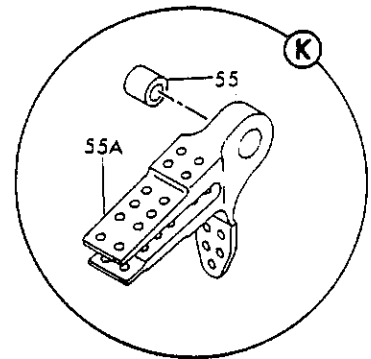
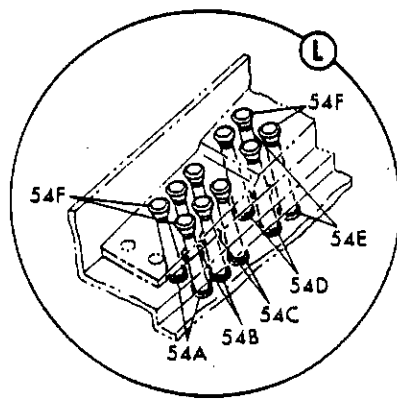
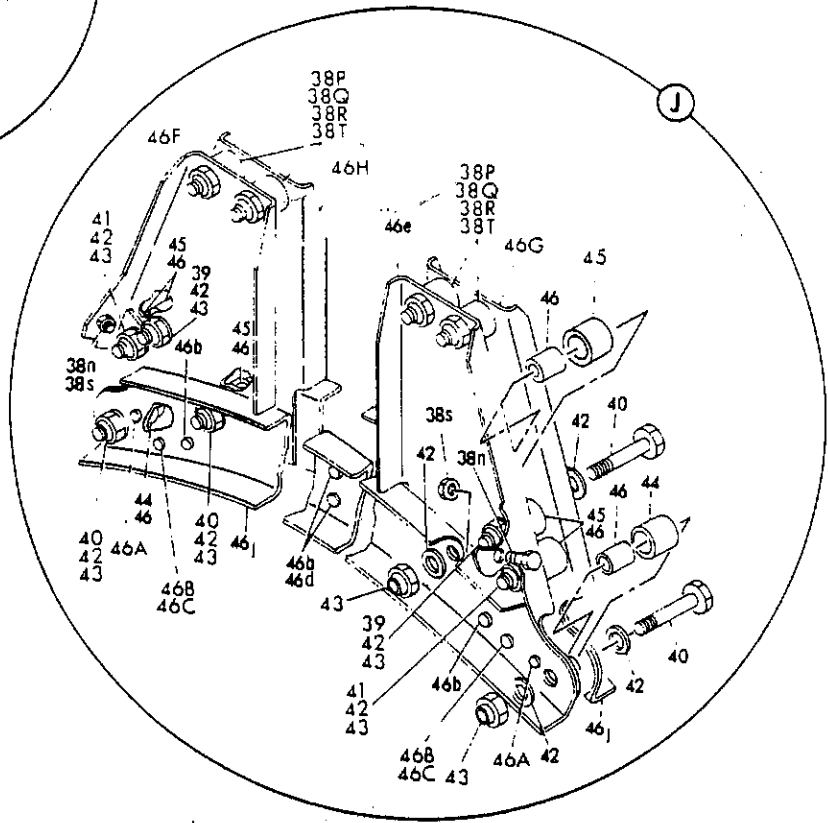
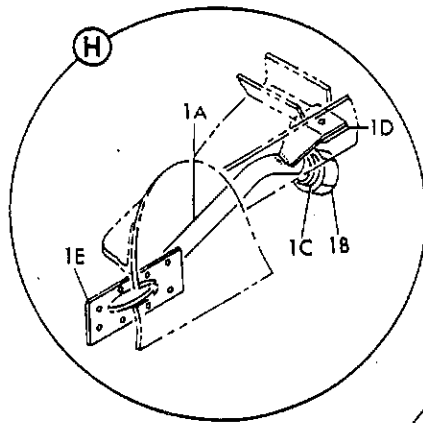


FIGURE 24. STRUCTURE ASSY, INBOARD NACELLE STRUT (SHEET 4)

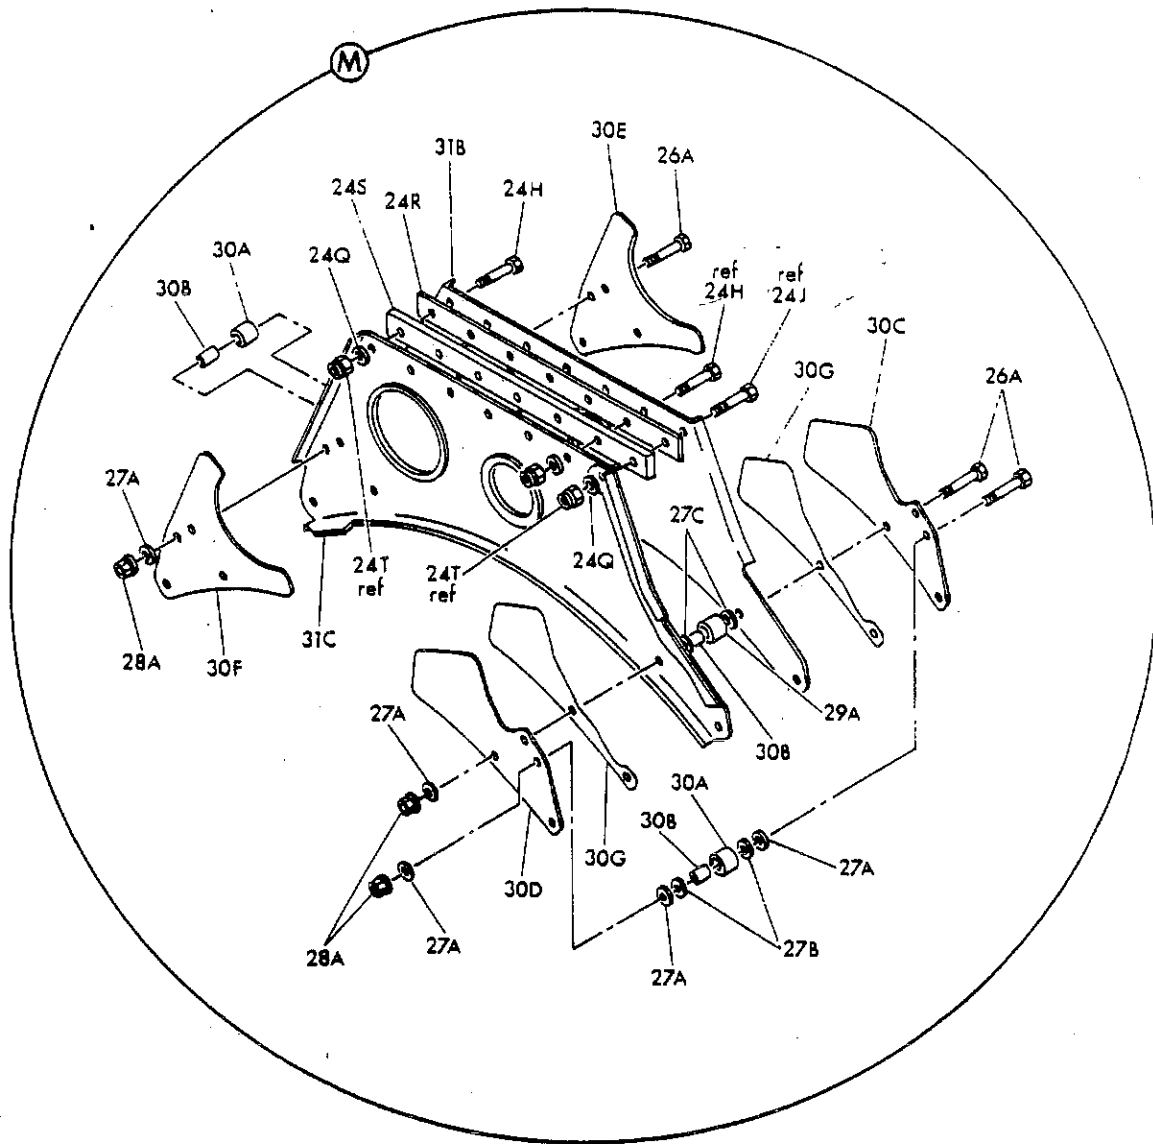


FIGURE 24. STRUCTURE ASSY, INBOARD NACELLE STRUT (SHEET 5)

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
24	65-2516-3030	STRUCTURE ASSY, INBOARD NACELLE STRUT (SEE FIG. 21A, . ITEM 23, FIG. 21B, ITEM 22 AND FIG. 21C, ITEM 32)	5299	RF
	65-2516-3030	STRUCTURE ASSY, INBOARD NACELLE STRUT (SEE FIG. 21A, . ITEM 23, FIG. 21B, ITEM 22 AND FIG. 21C, ITEM 32) (REWORKED BY SB 3183)	0151	RF
1	65-2498-2	. FITTING, ENGINE FORWARD MOUNT THRUST LINK		1
	NAS1112-21W	. ATTACHING PARTS		2
	AN960-1216L	. BOLT.		2
	MS20002C12	. WASHER.		2
	NAS1022A12	. WASHER.		2
		. NUT		2
	69-12393-9			
1A	69-12393-8	. OUTLET INSTL, DRAIN TANK COMBUSTION CHAMBER VENT. . . (DELETED BY SB 3097)	0150	1
	MS20426D4	. . OUTLET ASSY, DRAIN TANK COMBUSTION CHAMBER VENT . . ATTACHING PARTS	0150	1
		. RIVET	0150	8
1B	MS21921-8			
1C	MS21922-8	. . NUT	0150	1
1D	69-12393-6	. . SLEEVE	0150	1
1E	65-97198-5	. . FILLER, DRAIN TANK COMBUSTION CHAMBER VENT OUTLET . . PLATE, COVER (ADDED BY SB 3097)	0150	1
	BACR15BA4D4	. ATTACHING PARTS	0150	1
		. RIVET	0150	8
2	65-10614-26			
	69-31625-1	. FAIRING INSTL, SADDLE (SEE 54-2, FIG. 11)		1
	69-31625-2	. SKIN INSTL, NACELLE STRUT ADJUSTABLE LH		1
2A	66-21532-1	. SKIN INSTL, NACELLE STRUT ADJUSTABLE RH		1
	NAS517-3-2	. SKIN, NACELLE STRUT ADJUSTABLE.		2
		. ATTACHING PARTS		8
		. SCREW		
3	65-2518-80			
4	65-2518-81	. SKIN INSTL, LH SIDE (SEE 54-2, FIG. 10)		1
	65-2542-3039	. SKIN INSTL, RH SIDE (SEE 54-2, FIG. 10)		1
5	66-10522	. RIB INSTL, CLOSURE.		1
	NAS1104-7W	. PLATE, AFT ENGINE MOUNT		2
	NAS1104-9W	. ATTACHING PARTS		4
	NAS620-416	. BOLT.		4
	NAS620-416L	. BOLT.		4
	NAS679A4W	. WASHER.		4
		. WASHER.		4
		. NUT		8
6	65-11602-7			
6A	BACB30HC10-9	. FITTING, AFT ENGINE MOUNT		2
6B	BACB30HC10-10	. ATTACHING PARTS		2
6C	BACB30HC10-11	. BOLT.		2
6D	BACB30HC10-12	. BOLT.		2
6E	NAS1080-10	. BOLT.		2
		. COLLAR.		8
7	64-1064-3020			
	65-10693-2	. BULKHEAD INSTL, STATION 136 FORWARD ENGINE MOUNT. . . . FITTING, NACELLE STATION 136 FORWARD ENGINE MOUNT . . ATTACHING PARTS		1
	NAS1107-13W	. BOLT, (DELETED BY SB 3425).		8
	BACB30NF7-13X	. BOLT, (ADDED BY SB 3425).		8
	NAS1107-14W	. BOLT, (DELETED BY SB 3425).		2
	BACB30NF7-14X	. BOLT, (ADDED BY SB 3425).		2
	BACB30ALT6-7	. BOLT, (DELETED BY SB 3425).		11
	BACB30MC6-7	. BOLT, (ADDED BY SB 3425).		11
	AN960-716L	. WASHER.		10
	BACC30AR6	. COLLAR, (DELETED BY SB 3425).		11
	BACC30X6	. COLLAR, (ADDED BY SB 3425).		11
	NAS679A7	. NUT, (DELETED BY SB 3425).		10
	BACN10JC7	. NUT, (ADDED BY SB 3425).		10
16	65-11665			
	65-11665-1	. SUPPORT INSTL, STATION 139.74 SIDE COWL PANEL HINGE . . . SUPPORT ASSY, STATION 139.74 SIDE COWL PANEL HINGE ATTACHING PARTS		1
	NAS1104-9W	. BOLT.		3
	NAS1103-2W	. BOLT.		1
	NAS43DD4-22	. SPACER.		3
	AN960PD416	. WASHER.		3
	AN960PD10	. WASHER.		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
24	NAS679A4W NAS679A3W	. . . NUT NUT			3 1

17	NAS1104-9W	. . . BOLT.			3
18	NAS1104-12W	. . . BOLT.			1
19	AN960PD416	. . . WASHER.			3
20	AN960PD416L	. . . WASHER.			1
21	NAS679A4W	. . . NUT			4
22	69-10452-2	. . . ROLLER, FAN ENGINE SIDE COWL PANEL HINGE.			1
23	69-10452-3	. . . ROLLER, FAN ENGINE SIDE COWL PANEL HINGE.			3
24	69-10452-4	. . . SPACER, FAN ENGINE SIDE COWL PANEL HINGE.			4
24A	65-11665-6	. . . FILLER, STATION 139.74 SIDE COWL PANEL HINGE.			2
		SUPPORT			
24B	65-11665-802	. . . CLIP, STATION 139.74 SIDE COWL PANEL HINGE.			1
		SUPPORT			
24E	65-11665-3	. . . BRACKET			1
24F	65-11665-4	. . . BRACKET			1
	65-11666	. . . SUPPORT INSTL, STATION 151.43 SIDE COWL HINGE			1
24G	65-11666-1	. . . SUPPORT ASSY, STATION 151.43 SIDE COWL HINGE.			1
		ATTACHING PARTS			
24H	NAS1104-9W	. . . BOLT.			6
24J	NAS1104-10W	. . . BOLT.			1
24K	NAS43DD4-22	. . . SPACER.			7
24M	AN960PD416L	. . . WASHER.			13
24N	NAS679A4W	. . . NUT			7

25	NAS1104-9W	. . . BOLT.			5
26	NAS1104-10W	. . . BOLT.			1
27	AN960PD416L	. . . WASHER.			11
28	NAS679A4W	. . . NUT			6
29	69-10452-2	. . . ROLLER, FAN ENGINE SIDE COWL PANEL HINGE.			3
30	69-10452-3	. . . ROLLER, FAN ENGINE SIDE COWL PANEL HINGE.			3
31	69-10452-4	. . . SPACER, FAN ENGINE SIDE COWL PANEL HINGE.			6
31A	66-12867-2	. . . BRACKET, TUBE SUPPORT			1
		ATTACHING PARTS			
	NAS508M6	. . . RIVET			2

31B	65-11666-3	. . . ANGLE ASSY.			1
31C	65-11666-4	. . . ANGLE ASSY.			1
31D	65-11666-7	. . . ANGLE, (USED ON 65-11666-3)			1
31E	65-11666-8	. . . ANGLE, (USED ON 65-11666-4)			1
31F	65-11666-5	. . . WEB, (USED ON 65-11666-3)			1
31G	65-11666-6	. . . WEB, (USED ON 65-11666-4)			1
	65-11667-80	. . . SUPPORT INSTL, STATION 173.50 SIDE COWL PANEL HINGE			1
31H	65-11667-73	. . . SUPPORT ASSY, STATION 173.50 SIDE COWL PANEL HINGE			1
		ATTACHING PARTS			
31J	NAS1104-8W	. . . BOLT.			6
31M	NAS43DD4-18	. . . SPACER.			6
31P	AN960PD416	. . . WASHER.			3
31R	AN960PD416L	. . . WASHER.			3
31S	NAS679A4W	. . . NUT			6

32	NAS1104-8W	. . . BOLT.			2
33	NAS1104-10W	. . . BOLT.			2
33A	NAS1103-2W	. . . BOLT.			10
33B	NAS1103-9W	. . . SCREW			1
34	AN960PD416	. . . WASHER.			2
35	AN960PD416L	. . . WASHER.			2
35A	AN960PD10	. . . WASHER.			10
35B	AN960PD410L	. . . WASHER.			1
36	NAS679A4W	. . . NUT			4
36A	NAS679A3W	. . . NUT			5
37	69-10452-2	. . . ROLLER, FAN ENGINE SIDE COWL PANEL HINGE.			4
37A	65-11667-7	. . . SEAL ASSY-FIRE.			1
37B	65-11667-8	. . . SEAL ASSY-FIRE.			1
38	69-10452-4	. . . SPACER, FAN ENGINE SIDE COWL PANEL HINGE.			4
38A	MS20427M5	. . . RIVET			2
38B	NAS508M6	. . . RIVET			3
38C	NAS42DD6-27	. . . SPACER.			2
38D	NAS42DD6-30	. . . SPACER.			1
38E	65-11667-79	. . . BRACKET			1
38F	65-11667-6	. . . BRACKET			1
38G	65-11667-19	. . . ANGLE, FIRE SEAL.			1
38H	65-11667-20	. . . CHANNEL, FIRE SEAL.			1

MISSING ITEM NUMBERS ARE NOT APPLICABLE



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
24	55C	65-2536-26 . . . FITTING ASSY, (RH) (ADDED BY SB 3183) (OPTIONAL TO 65-2536-16)	0151	1
56	65-27303-31	. . . BUSHING	5299	1
56	65-27303-27	. . . BUSHING, ATTACH FITTING	0103	1
56	65-27303-27	. . . BUSHING, ATTACH FITTING (DELETED BY SB 3183)	0151	1
56	65-27303-32	. . . BUSHING, ATTACH FITTING (ADDED BY SB 3183)	0151	1
56A	65-2536-23	. . . FITTING, (LH ONLY)	5299	1
56A	65-2536-7	. . . FITTING, (LH ONLY)	5151	1
56A	65-2536-7	. . . FITTING, (LH ONLY) (DELETED BY SB 3183)	0151	1
56A	65-2536-8	. . . FITTING, (RH ONLY)	5151	1
56A	65-2536-24	. . . FITTING, (RH ONLY)	5299	1
56A	65-2536-8	. . . FITTING, (RH ONLY) (DELETED BY SB 3183)	0151	1
56A	65-2536-19	. . . FITTING, (USED ON 65-2536-15) (ADDED BY SB 3183) (OPTIONAL 65-2536-27)	0151	1
56A	65-2536-27	. . . FITTING, (USED ON 65-2536-25) (ADDED BY SB 3183) (OPTIONAL TO 65-2536-19)	0151	1
56A	65-2536-20	. . . FITTING, (USED ON 65-2536-16) (ADDED BY SB 3183) (OPTIONAL 65-2536-28)	0151	1
56A	65-2536-28	. . . FITTING, (USED ON 65-2536-26) (ADDED BY SB 3183) (OPTIONAL TO 65-2536-20)	0151	1
	64-1070-35	. . . AIR CONDITIONING, (SEE 21-1, FIG. 11)		
	64-1070-45	. . . ICE AND RAIN PROTECTION, (SEE 30-1, FIG. 13)		
	65-58472-2	. . . SPAR INSTL, FRONT	0150	1
	NAS514P428-10	. . . SPAR INSTL, FRONT	5199	1
56B	66-10344-1	. . . HOLE INSTL, INSPECTION		1
56C	63-9651-1	. . . SCREW		2
56D	65-58472-3	. . . NUT, LATCH		2
56E	65-42128-1	. . . INDICATOR		2
57	65-42128-7	. . . CAP		2
57	BACB30NF7-11	. . . FITTING ASSY, INBOARD FRONT SPAR	0151	1
57A	NAS1107-9W	. . . FITTING ASSY, INBOARD FRONT SPAR	5299	1
57A	BACB30NF8-11	. . . ATTACHING PARTS		
57B	BACB30NF7-11	. . . BOLT	5199	2
57B	NAS1107-9W	. . . BOLT, (DELETED BY SB 2958)	0150	2
57B	BACB30NF7-11X	. . . BOLT, (ADDED BY SB 2958)	0150	2
57C	BACB30NF7-11	. . . BOLT	5199	4
57C	NAS1107-10W	. . . BOLT, (DELETED BY SB 2958)	0150	4
57C	BACB30NF7-11X	. . . BOLT, (ADDED BY SB 2958)	0150	4
57D	BACB30NF7-12	. . . BOLT	5199	2
57D	NAS1107-10W	. . . BOLT, (DELETED BY SB 2958)	0150	2
57D	BACB30NF7-12X	. . . BOLT, (ADDED BY SB 2958)	0150	2
57E	BACB30CT6-10X	. . . BOLT, (ADDED BY SB 2958)	0150	2
57F	BACB30DX6-11X	. . . BOLT, (ADDED BY SB 2958)	0150	2
57G	BACB30DX6-9X	. . . BOLT, (ADDED BY SB 2958)	0150	6
57H	BACB30DX6-7X	. . . BOLT, (ADDED BY SB 2958)	0150	4
57J	BACB30DX8-5	. . . BOLT, (ADDED BY SB 2958)	0150	2
57K	AN960PD716	. . . WASHER	5199	2
57K	AN960PD716	. . . WASHER, (DELETED BY SB 2958)	0150	2
57K	AN960PD816	. . . WASHER, (ADDED BY SB 2958)	0150	2
57M	AN960PD716	. . . WASHER	5199	10
57M	AN960PD716	. . . WASHER, (DELETED BY SB 2958)	0150	10
57M	BACW10BN71AP	. . . WASHER, (ADDED BY SB 2958)	0150	10
57P	BACN10JC7	. . . NUT	5199	2
57P	NAS679A7	. . . NUT, (DELETED BY SB 2958)	0150	2
57P	BACN10JC8	. . . NUT, (ADDED BY SB 2958)	0150	2
57Q	BACN10JC7	. . . NUT	5199	10
57Q	NAS679A7	. . . NUT, (DELETED BY SB 2958)	0150	10
57Q	BACN10JC7	. . . NUT, (ADDED BY SB 2958)	0150	10
58	65-27303-5	. . . BUSHING, INBOARD NACELLE STRUT ATTACH FITTING	0151	1
58A	204-70231-1	. . . BUSHING	5299	2
59	65-42128-4	. . . FITTING, INBOARD FRONT SPAR	0151	1
59	65-42128-8	. . . FITTING, INBOARD FRONT SPAR	5299	1
59A	69-62147-10	. . . ANGLE, (ADDED BY SB 2958)	0150	1
59D	BACS40C23-109	. . . SHIM, (ADDED BY SB 2958)	0150	2
59E	69-61514-4	. . . STRAP, (ADDED BY SB 2958)	0150	2
60	65-2547-32	. . . BULKHEAD INSTL, TORQUE		1
61	65-2547-33	. . . CHORD, LH		1
62	65-2547-34	. . . CHORD, RH		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

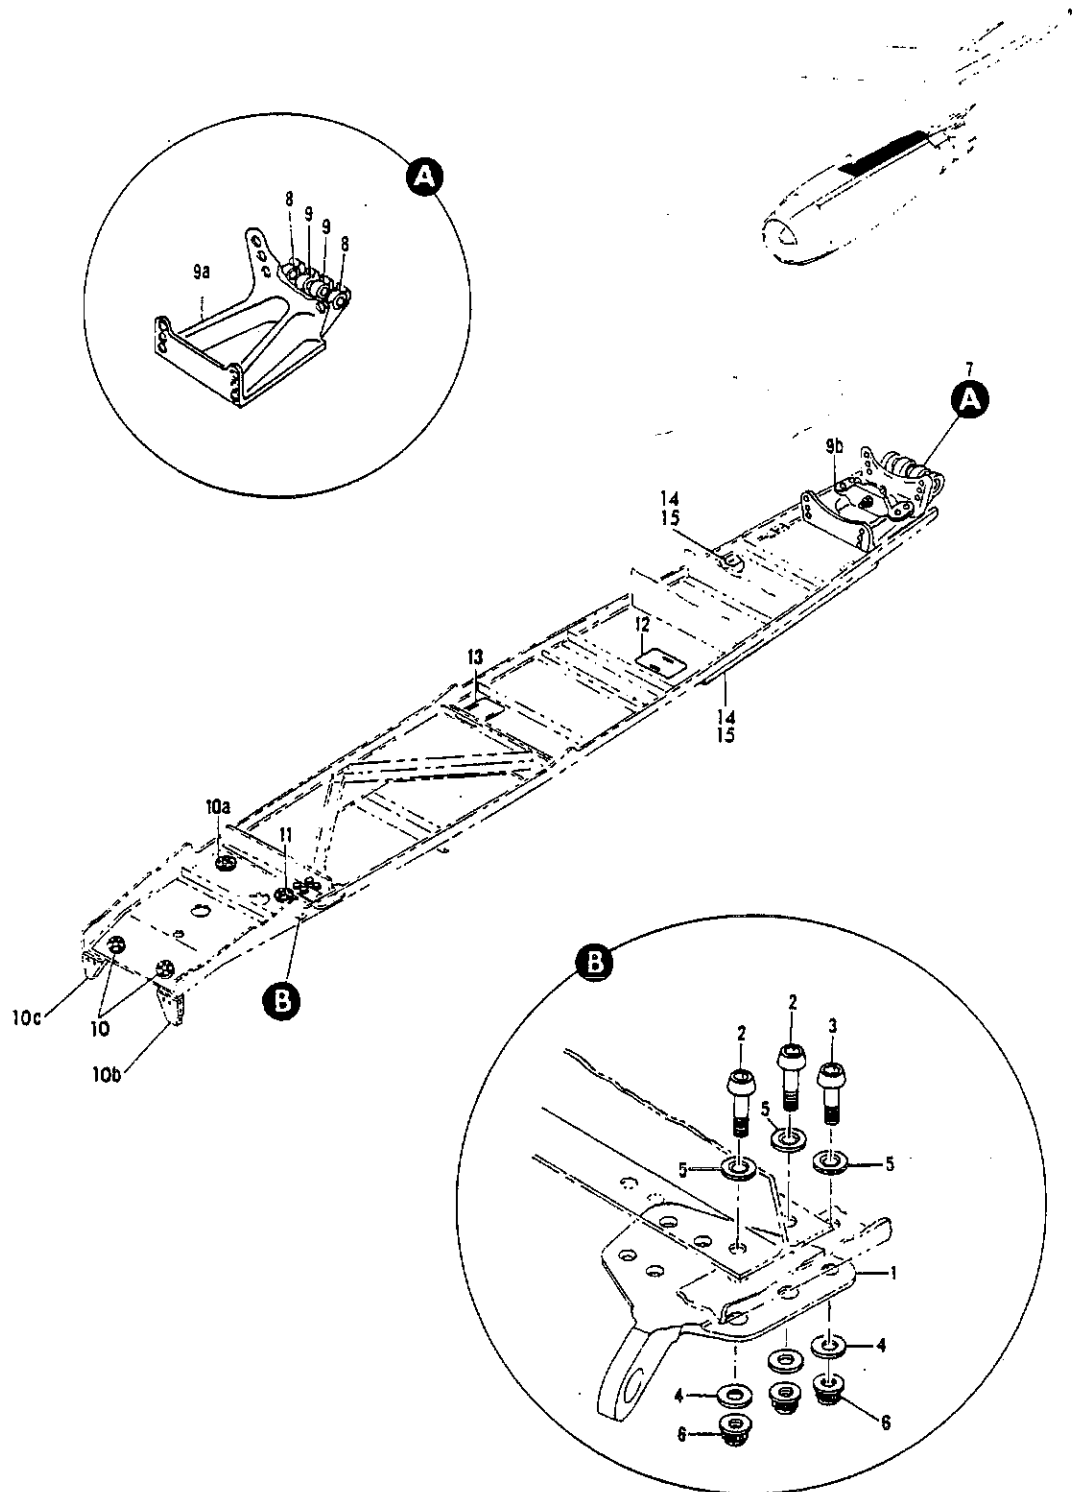


FIGURE 25. SPAR INSTL, INBOARD STRUT LOWER

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
		1 2 3 4 5 6 7		
25	1	64-1072-3000 65-11760-3		RF
	2	MS20007-13		1
	3	MS20007-10		6
	4	MS20002-7		1
	5	MS20002C7		7
	6	BACN10B-L7L		7
	7	65-13348-3		1
	8	65-27303-11		2
	9	65-27303-12		2
	9A	65-13348-1		1
	9B	69-12658		1
		BACR15AY16-16 NAS179-16		4
	10	BACF22J8C		2
	10A	BACF22J8C		1
	10B	66-10621-9		1
	10C	66-10621-10		1
	11	BACF22J8C		1
	13	AN7510C2		1
		NAS308M3		4
	14	69-31271-11		1
	14	69-31271-12		1
	15	69-31271-9		1
	15	69-31271-10		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE				


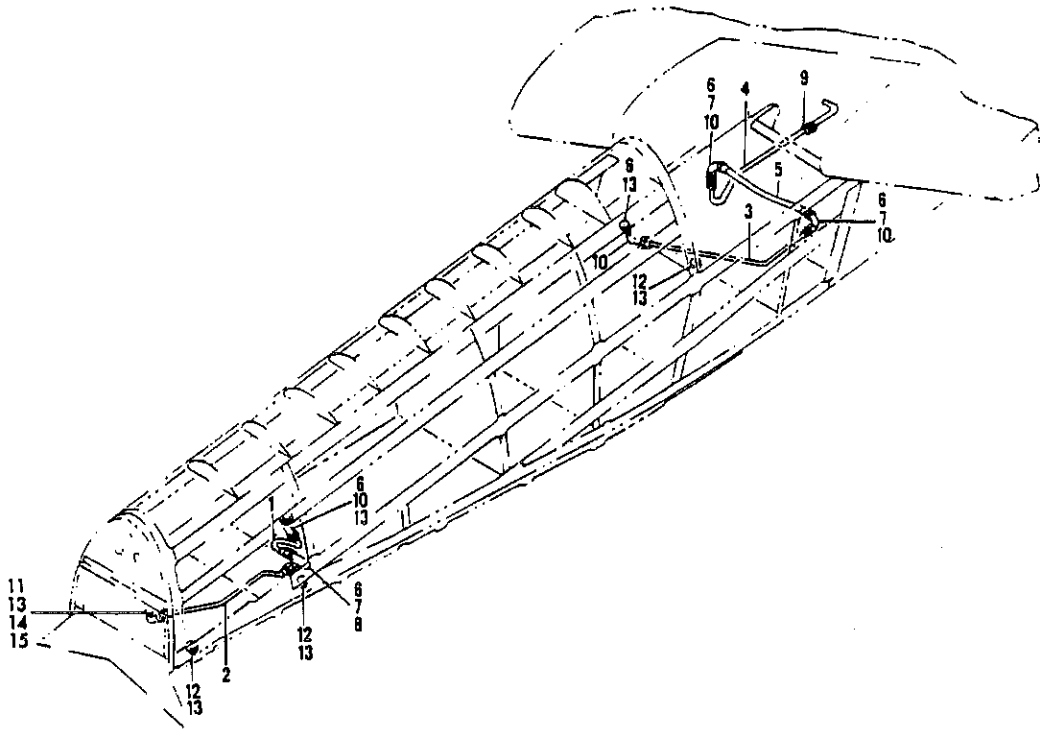


FIGURE 29A. PLUMBING INSTL. INBOARD NACELLE STRUT NO. 2 STRUT DRAIN

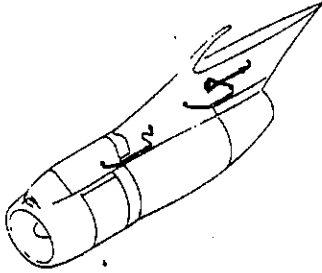

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
29A	65-11904-702		PLUMBING INSTL, INBOARD NACELLE STRUT NO. 2 STRUT DRAIN (NACELLE NO. 2) (SEE FIG. 21A, ITEM 33, FIG. 21B ITEM 34 AND FIG. 21C, ITEM 16)		RF
1	65-11904-162		. TUBE ASSY, STRUT DRAIN 1/2 .028 AISI304		1
2	65-11904-814		. TUBE ASSY, STRUT DRAIN 1/2 IN. .028 AISI304		1
	MS21921-8		. NUT		2
	BACS13AP8		. SLEEVE, (OPTIONAL MS21922-8).		2
3	65-11904-101		. TUBE ASSY, STRUT DRAIN 1/2 .028 AISI304		1
4	65-11904-77		. TUBE ASSY, STRUT DRAIN 1/2 .028 AISI304		1
	MS21921D8		. NUT		2
	BACS13AP8		. SLEEVE, (OPTIONAL MS21922-8).		2
5	10-60104-15		. HOSE ASSY, STRUT DRAIN FIREPROOF. (OPTIONAL BAC SPEC NO. 10-60104-12)		1
5	10-60104-12		. HOSE ASSY, STRUT DRAIN FIREPROOF. (OPTIONAL TO BAC SPEC NO. 10-60104-15)		1
6	AN924-8		. NUT		5
7	AN960-1216		. WASHER.		3
8	MS21909-8		. TEE		1
9	MS21902-8		. UNION		1
10	MS21907-8		. ELBOW		4
11	NAS1239-8		. ELBOW		1
12	AN814-8		. PLUG AND BLEEDER.		3
13	MS29512-08		. PACKING		6
14	MS29513-113		. PACKING		1
15	NAS551H8		. BOLT.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					

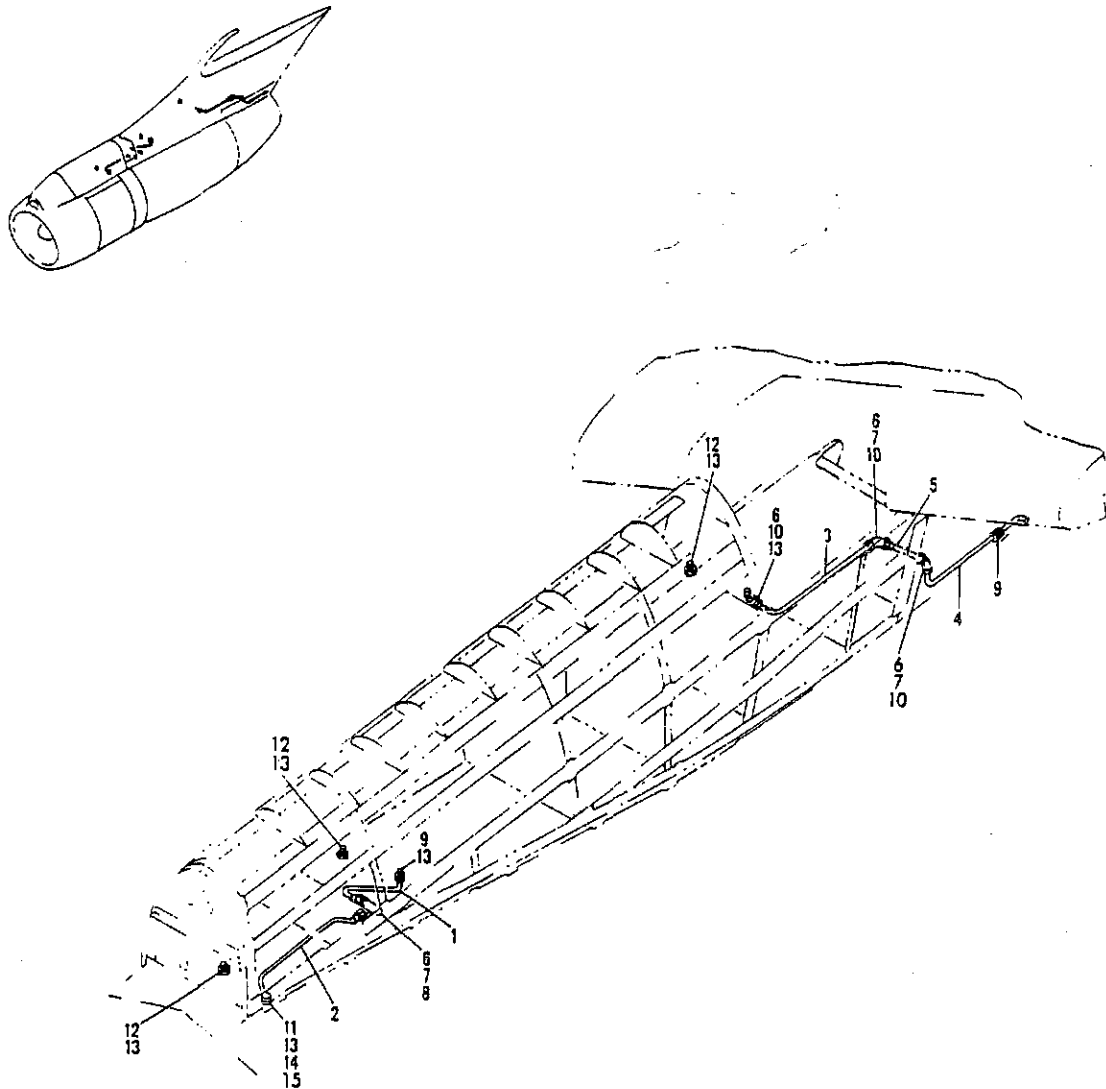


FIGURE 29B. PLUMBING INSTL, INBOARD NACELLE STRUT NO. 3 STRUT DRAIN (NACELLE NO. 3)



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
29B	65-11904-704		PLUMBING INSTL, INBOARD NACELLE STRUT NO. 3 STRUT DRAIN (NACELLE NO. 3) (SEE FIG. 21A, ITEM 33, FIG. 21B, ITEM 34 AND FIG. 21C, ITEM 17)		RF
1	65-11904-170		. TUBE ASSY, STRUT DRAIN 1/2 .028 AISI304		1
	MS21921-8		. . NUT		2
	BACS13AP8		. . SLEEVE, (OPTIONAL MS21922-8).		2
2	65-11904-815		. TUBE ASSY, STRUT DRAIN 1/2 IN. .028 AISI304		1
3	65-11904-102		. TUBE ASSY, STRUT DRAIN 1/2 .028 AISI304		1
4	65-11904-78		. TUBE ASSY, STRUT DRAIN 1/2 .028 AISI304		1
	MS21921D8		. . NUT		2
	BACS13AP8		. . SLEEVE, (OPTIONAL MS21922-8).		2
5	10-60104-16		. HOSE ASSY, STRUT DRAIN FIREPROOF. (OPTIONAL BAC SPEC NO. 10-60104-13)		1
5	10-60104-13		. HOSE ASSY, STRUT DRAIN FIREPROOF. (OPTIONAL TO BAC SPEC NO. 10-60104-16)		1
6	AN924-8		. NUT		4
7	AN960-1216		. WASHER.		3
8	MS21909-8		. TEE		1
9	MS21902-8		. UNION		2
10	MS21907-8		. ELBOW		3
11	NAS1239-8		. ELBOW		1
12	AN814-8		. PLUG AND BLEEDER.		3
13	MS29512-08		. PACKING		6
14	MS29513-113		. PACKING		1
15	NAS551H8		. BOLT.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					


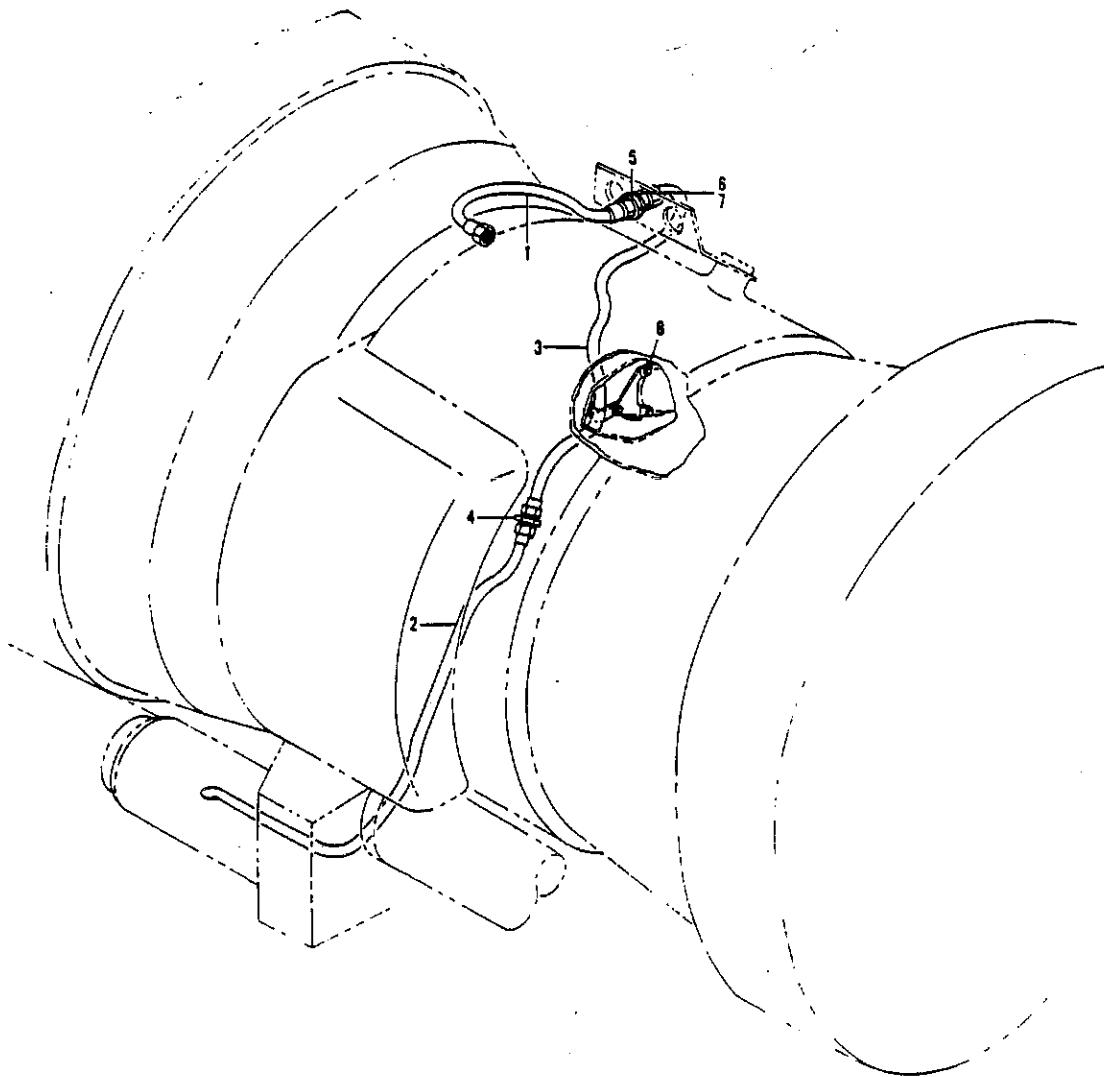


FIGURE 31. DRAIN INSTL. FAN ENGINE (INACELLES ONLY)

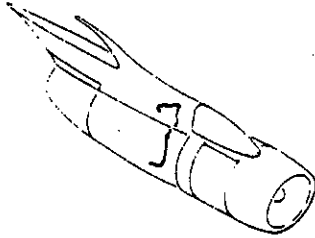

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R R R R	31	65-11660-89	DRAIN INSTL, FAN ENGINE (NACELLES ONLY) (SEE 71-1, FIG. 5E, ITEM 53, 71-1, FIG. 5G, ITEM 48 AND 71-1, FIG. 5H, ITEM 41)	0150 RF
		65-11660-99	DRAIN INSTL, FAN ENGINE (NACELLES ONLY) (SEE 71-1, FIG. 5G, ITEM 48 AND 71-1, FIG. 5H, ITEM 41)	5199 RF
	1	10-60104-21	. HOSE ASSY, STRUT DRAIN FIREPROOF.	1
	2	65-11660-87	. TUBE ASSY, STRUT DRAIN 1/2 .028 AISI304 (OPTIONALS. . AISI321, AISI347)	1
		MS21921-8	. . NUT	1
		8AC513AP8	. . SLEEVE, (OPTIONAL MS21922-8).	1
	3	65-11660-88	. TUBE ASSY, STRUT DRAIN 1/2 .028 AISI304 (OPTIONALS. . AISI321, AISI347)	1
		MS21921-8	. . NUT	2
		8AC513AP8	. . SLEEVE, (OPTIONAL MS21922-8).	2
	4	MS21902-8	. UNION	1
	5	MS21924-8	. UNION	1
	6	AN960-1216L	. WASHER.	1
	7	AN924-8	. NUT	1
	8	66-11243-1	. BRACKET, WATER INLET PRESSURE REGULATOR	1
		MS9035-09	ATTACHING PARTS	1
		AN960C516	. BOLT.	1
			. WASHER.	1
			-----*	
			. FOR REFERENCE TO OTHER DRAIN DETAILS, SEE NHA	
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

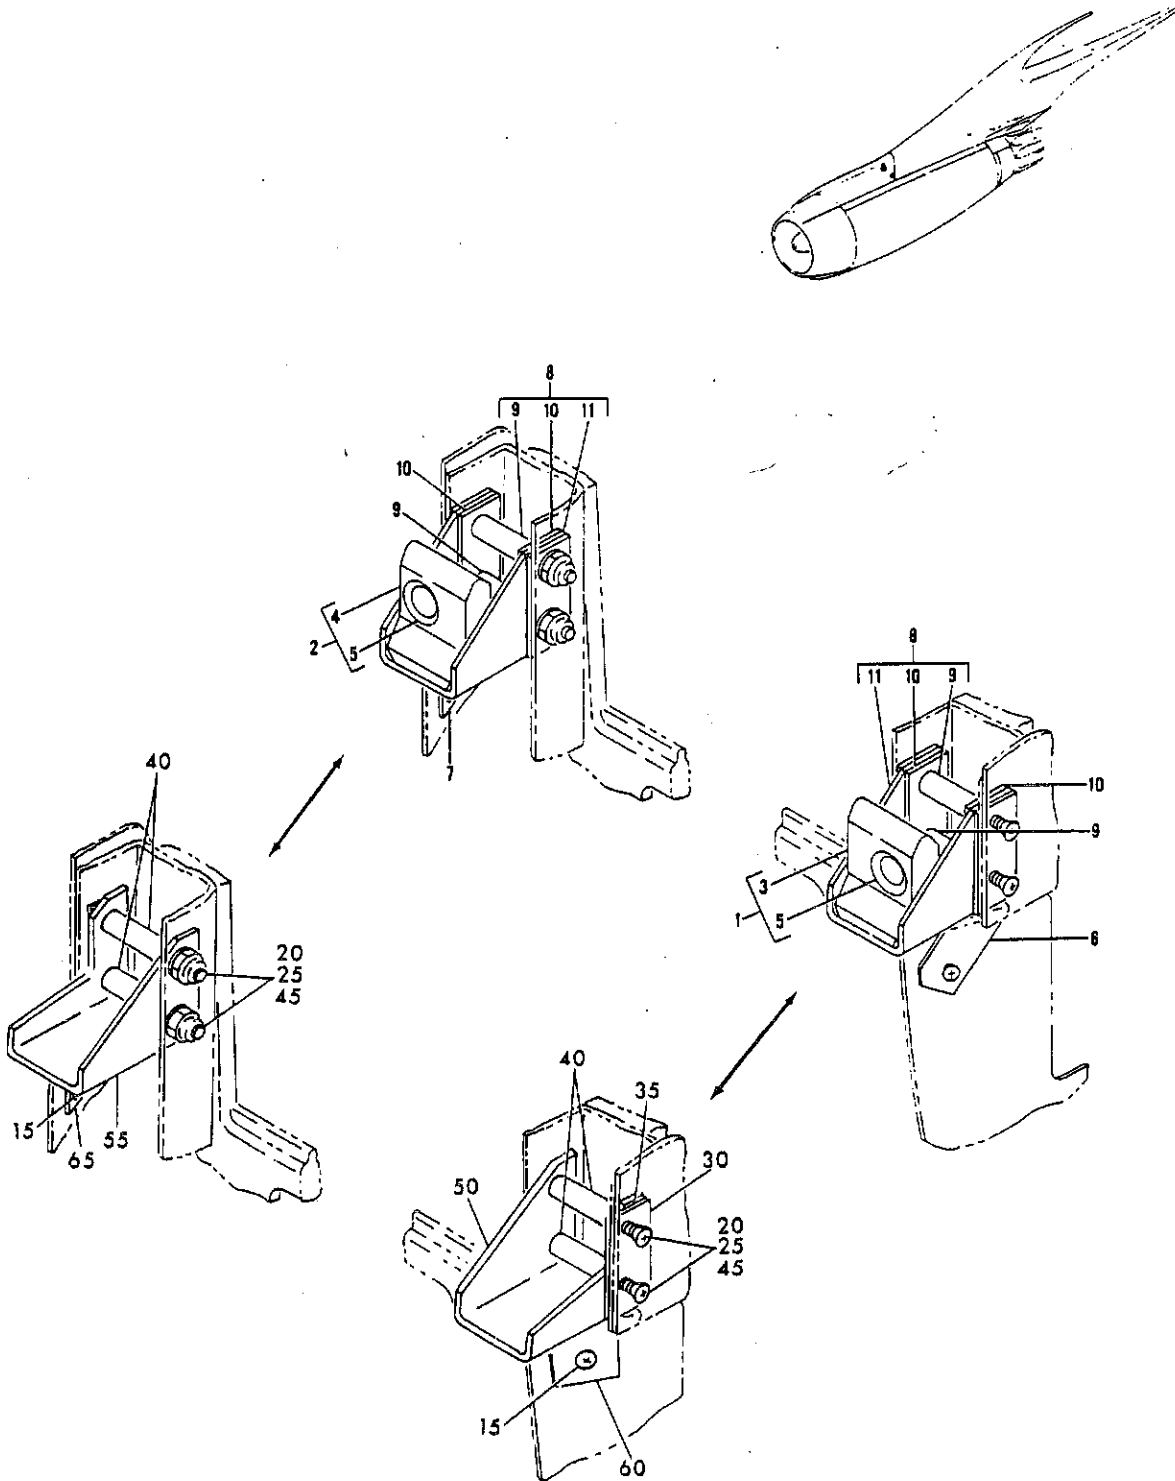


FIGURE 32. RECEPTACLE INSTL. NACELLE FAIRING AFT LATCH PIN

PARTS CATALOG

FIGURE & ITEM NO.		MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
R R						

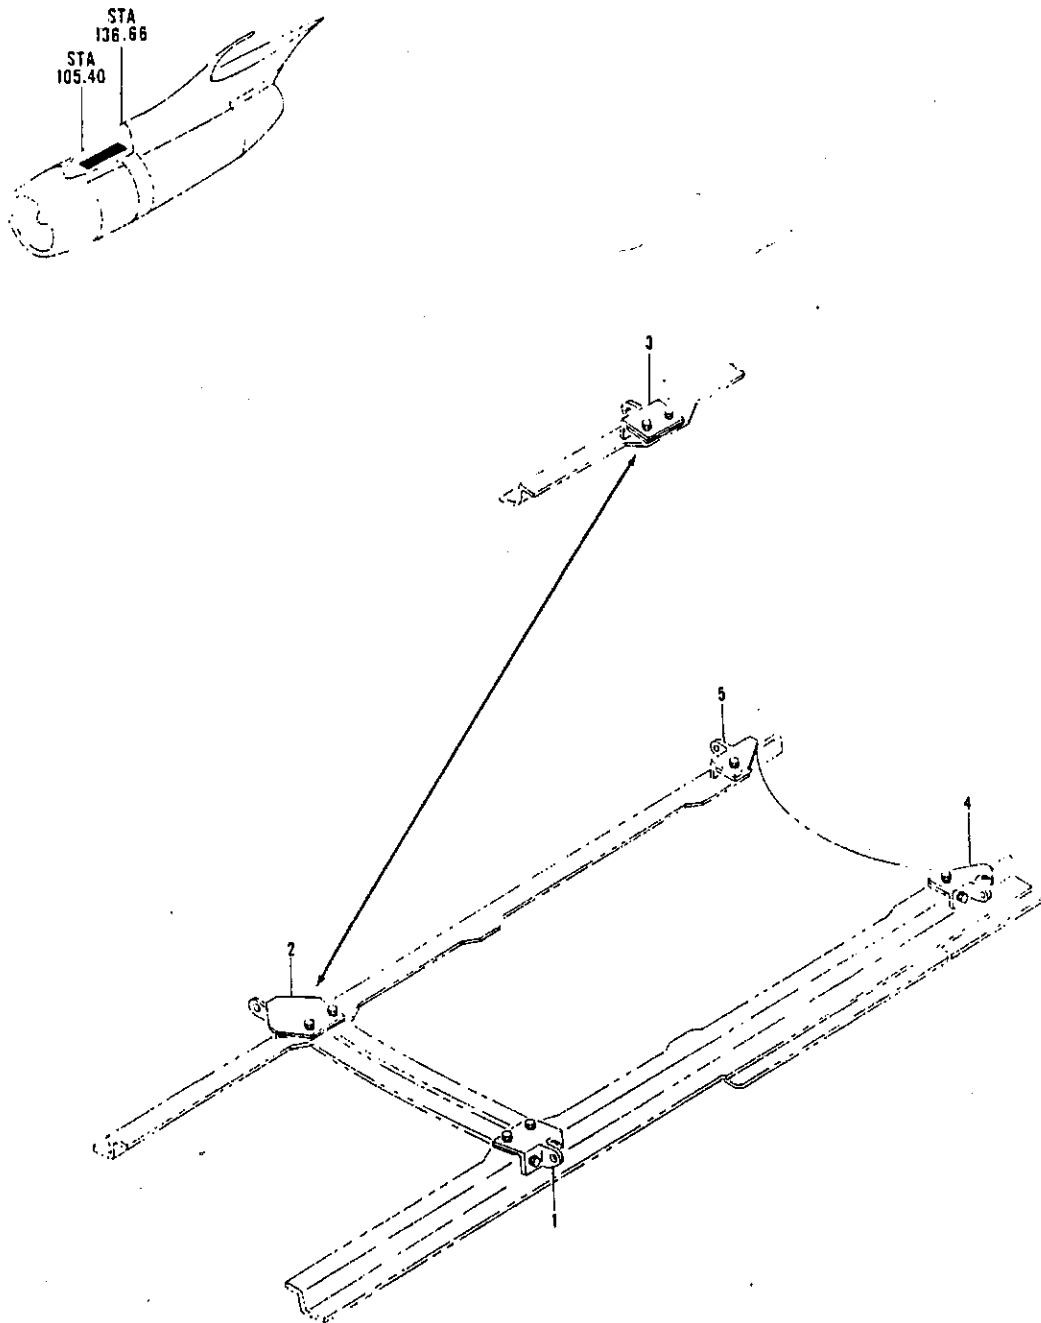


FIGURE 33. FITTING INSTL, NACELLE FAIRING

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING *707* *Intercontinental*
PARTS CATALOG

SECTION 02
NACELLE ACCESS PANELS AND SKINS

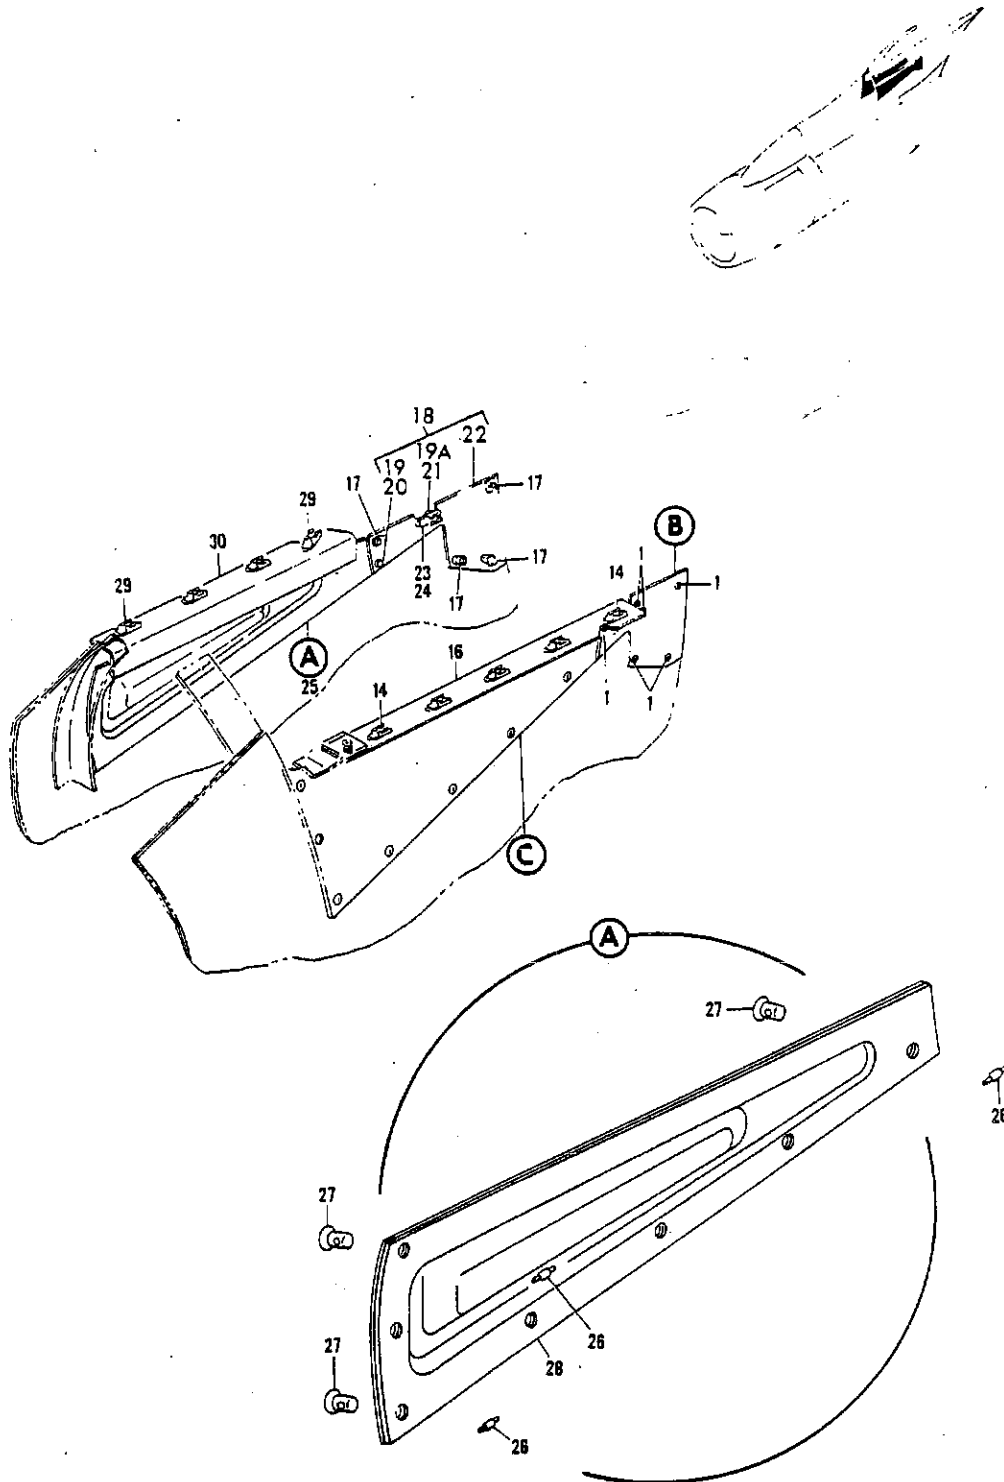


FIGURE 2. PANEL INSTL. NO. 1 AND 4 OUTBOARD NACELLE STRUT TO WING ACCESS (SHEET 1)

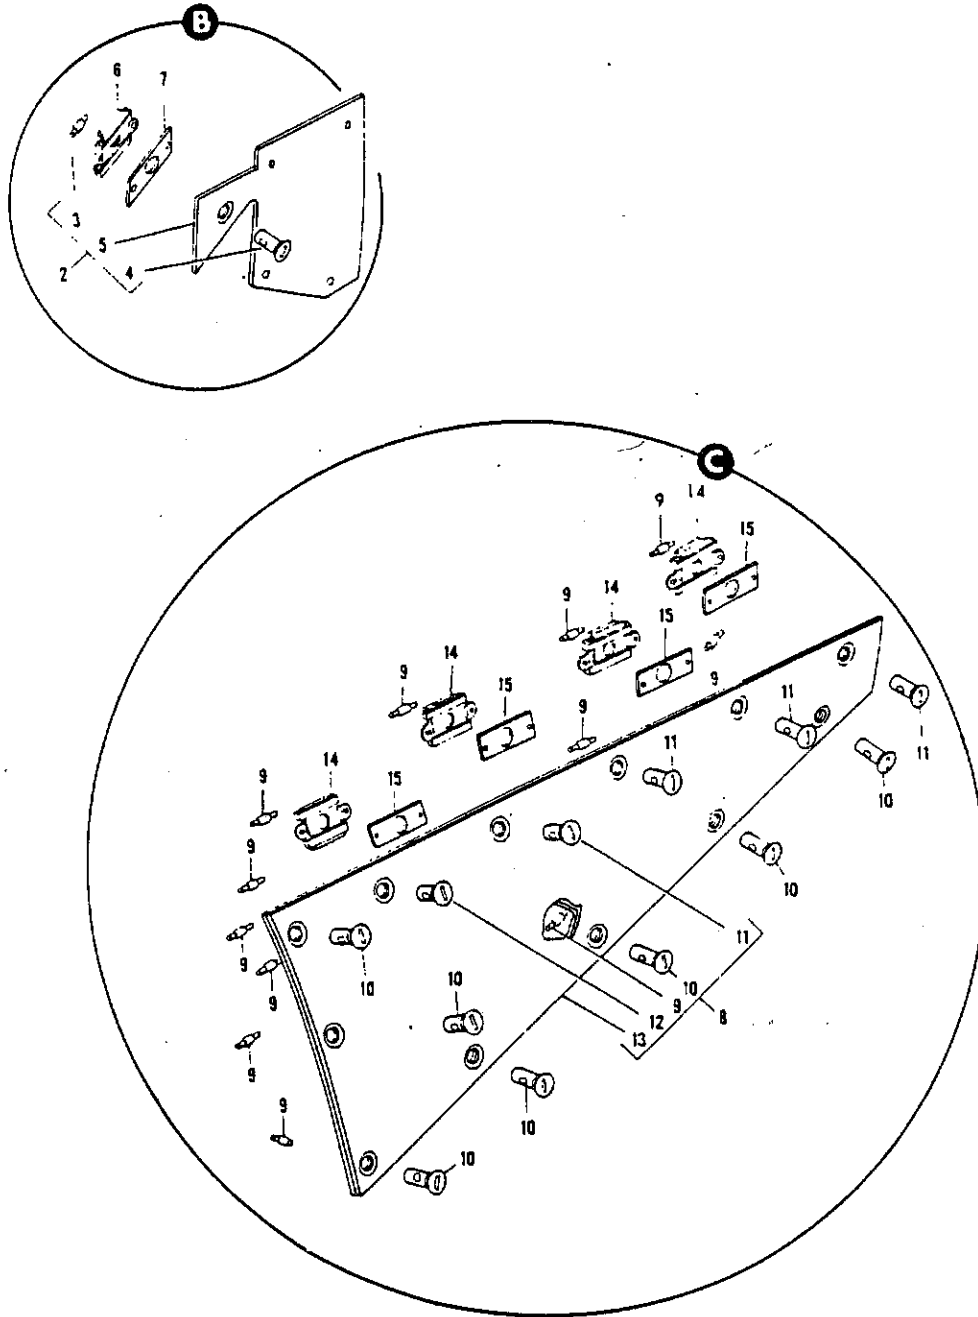


FIGURE 2. PANEL INSTL. NO. 1 AND 4 OUTBOARD NACELLE STRUT TO WING ACCESS (SHEET 2)

NOV 21/90

54-02-2

DETAILED PARTS LIST
54-02-2
PAGE 1



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
2		PANEL INSTL, NO. 1 AND NO. 4 OUTBOARD NACELLE STRUT TO WING ACCESS		
	5-88792-3041	. PANEL INSTL, NO. 1 OUTBOARD NACELLE STRUT TO WING LH SIDE ACCESS (SEE 54-1, FIG. 3, ITEM 56)		RF
	5-88792-3042	. PANEL INSTL, NO. 4 OUTBOARD NACELLE STRUT TO WING RH SIDE ACCESS (SEE 54-1, FIG. 3, ITEM 56)		RF
1	NAS514P1032-B	. . . SCREW		6
2	5-88792-3113	. . . DOOR ASSY, (NACELLE NO. 1)		1
2	5-88792-3114	. . . DOOR ASSY, (NACELLE NO. 4)		1
3	BACP18A5	. . . PIN		1
4	BACS2185FH21	. . . STUD.		1
5	5-88792-3065	. . . SKIN, OUTBOARD NACELLE STRUT TO WING LH SIDE. . . ACCESS PANEL (NACELLE NO. 1)		1
5	5-88792-3066	. . . SKIN, OUTBOARD NACELLE STRUT TO WING RH SIDE. . . ACCESS PANEL (NACELLE NO. 4)		1
6	BACS20A5P	. . . SPRING.		1
7	BACS18X56	. . . SPACER.		1
8	5-88792-3097	. . . PANEL ASSY, OUTBOARD NACELLE STRUT TO WING LH SIDE ACCESS (NACELLE NO. 1)		1
8	5-88792-3098	. . . PANEL ASSY, OUTBOARD NACELLE STRUT TO WING RH SIDE ACCESS (NACELLE NO. 4)		1
9	BACP18A5	. . . PIN		12
10	BACS2185FH27	. . . STUD.		7
11	BACS2185FH26	. . . STUD.		4
12	BACS2185FH32	. . . STUD.		1
13	5-88792-3101	. . . SPOTWELD ASSY, OUTBOARD NACELLE STRUT TO WING LH SIDE ACCESS PANEL (NACELLE NO. 1)		1
13	5-88792-3102	. . . SPOTWELD ASSY, OUTBOARD NACELLE STRUT TO WING RH SIDE ACCESS PANEL (NACELLE NO. 4)		1
14	BACS20A5P	. . . SPRING.		9
15	BACS18X56	. . . SPACER.		4
16	5-88792-3057	. . . ANGLE, OUTBOARD NACELLE STRUT TO WING LH SIDE . . . ACCESS PANEL WING ATTACHMENT (NACELLE NO. 1)		1
16	5-88792-3058	. . . ANGLE, OUTBOARD NACELLE STRUT TO WING RH SIDE . . . ACCESS PANEL WING ATTACHMENT (NACELLE NO. 4)		1
	MS20426D5	ATTACHING PARTS . . . RIVET		4
	5-88792-3043	. . . PANEL INSTL, NO. 1 OUTBOARD NACELLE STRUT TO WING RH SIDE ACCESS (SEE 54-1, FIG. 3, ITEM 57)		RF
	5-88792-3044	. . . PANEL INSTL, NO. 4 OUTBOARD NACELLE STRUT TO WING LH SIDE ACCESS (SEE 54-1, FIG. 3, ITEM 57)		RF
17	NAS514P1032-B	. . . SCREW		4
18	5-88792-3117	. . . DOOR ASSY, (NACELLE NO. 1)		1
18	5-88792-3118	. . . DOOR ASSY, (NACELLE NO. 4)		1
19	BACP18A5	. . . PIN		1
20	BACS2185FH21	. . . STUD.		1
22	5-88792-23	. . . SKIN, OUTBOARD NACELLE STRUT TO WING RH SIDE. . . ACCESS PANEL (NACELLE NO. 1)		1
22	5-88792-24	. . . SKIN, OUTBOARD NACELLE STRUT TO WING LH SIDE. . . ACCESS PANEL (NACELLE NO. 4)		1
23	BACS20A5P	. . . SPRING.		1
24	BACS18X56	. . . SPACER.		1
25	5-88792-3099	. . . PANEL ASSY, OUTBOARD NACELLE STRUT TO WING RH SIDE ACCESS (NACELLE NO. 1)		1
25	5-88792-3100	. . . PANEL ASSY, OUTBOARD NACELLE STRUT TO WING LH SIDE ACCESS (NACELLE NO. 4)		1
26	BACP18A5	. . . PIN		7
27	BACS2185FH24	. . . STUD.		7
28	5-88792-3103	. . . SPOTWELD ASSY, OUTBOARD NACELLE STRUT TO WING RH SIDE ACCESS PANEL (NACELLE NO. 1)		1
28	5-88792-3104	. . . SPOTWELD ASSY, OUTBOARD NACELLE STRUT TO WING LH SIDE ACCESS PANEL (NACELLE NO. 4)		1
29	BACS20A5P	. . . SPRING.		4
30	5-88792-3071	. . . ANGLE, OUTBOARD NACELLE STRUT TO WING RH SIDE . . . ACCESS PANEL WING ATTACHMENT (NACELLE NO. 1)		1
30	5-88792-3072	. . . ANGLE, OUTBOARD NACELLE STRUT TO WING LH SIDE . . . ACCESS PANEL WING ATTACHMENT (NACELLE NO. 4)		1
	MS20426D5	ATTACHING PARTS . . . RIVET		19

MISSING ITEM NUMBERS ARE NOT APPLICABLE

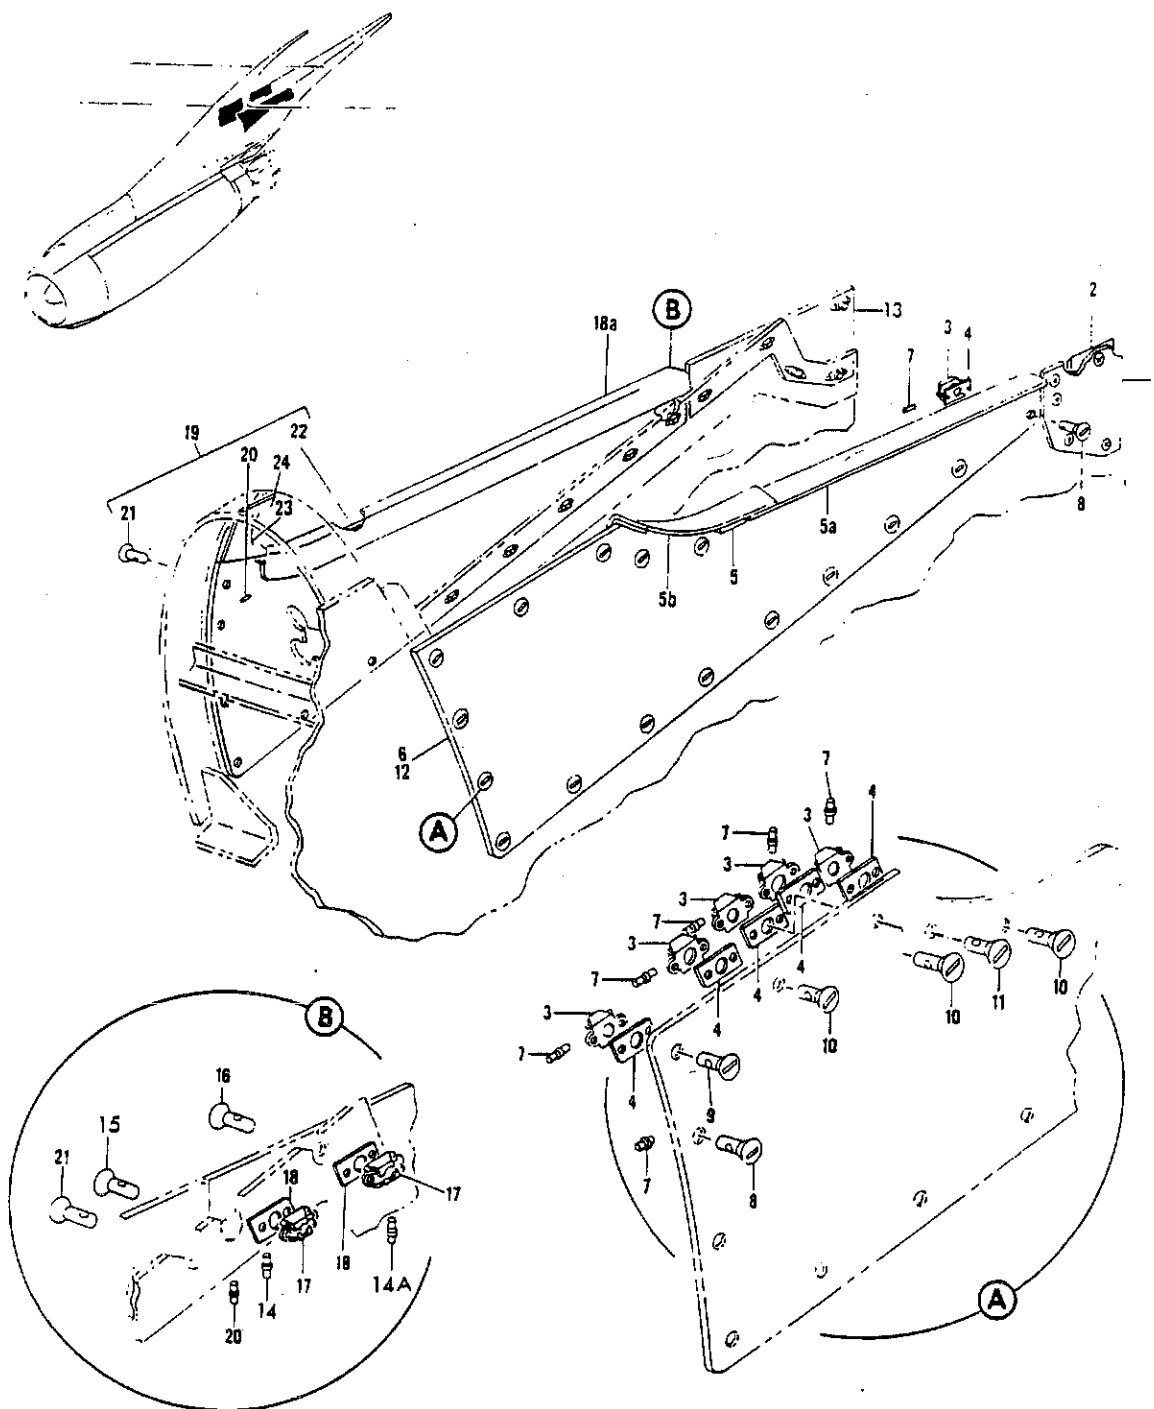


FIGURE 3. PANEL INSTL, NO. 2 AND 3 INBOARD NACELLE STRUT TO WING ACCESS

BOEING *Intercontinental*
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
3		PANEL INSTL, NO. 2 AND 3 INBOARD NACELLE STRUT TO WING ACCESS		
	5-87839-3003	. PANEL INSTL, NO. 2 INBOARD NACELLE STRUT TO WING RH . SIDE ACCESS (SEE 54-1, FIG. 16, ITEM 39, 54-1, FIG. 17, ITEM 39 AND 54-1, FIG. 18, ITEM 42)		RF
	5-87839-3004	. PANEL INSTL, NO. 3 INBOARD NACELLE STRUT TO WING LH . SIDE ACCESS (SEE 54-1, FIG. 16, ITEM 39, 54-1, FIG. 17, ITEM 39 AND 54-1, FIG. 18, ITEM 41)		RF
13	5-87839-51	. . DOOR ASSY, (NACELLE NO. 2)		1
13	5-87839-52	. . DOOR ASSY, (NACELLE NO. 3)		1
	NAS514P1032-8	. . ATTACHING PARTS . . SCREW		4
14	BACP18A5	. . . PIN		1
15	BACS21B5FH23	. . . STUD.		1
17	BACS20A5P	. . . SPRING		2
18	BACS18X56	. . . SPACER.		2
18A	5-87839-3027	. . ANGLE, INBOARD NACELLE STRUT TO WING RH SIDE ACCESS PANEL WING ATTACH (NACELLE NO. 2)		1
18A	5-87839-3028	. . ANGLE, INBOARD NACELLE STRUT TO WING LH SIDE ACCESS PANEL WING ATTACH (NACELLE NO. 3)		1
19	5-87839-3107	. . PANEL ASSY, INBOARD NACELLE STRUT TO WING RH SIDE . ACCESS (NACELLE NO. 2)		1
19	5-87839-3108	. . PANEL ASSY, INBOARD NACELLE STRUT TO WING LH SIDE . ACCESS (NACELLE NO. 3)		1
20	BACP18A5	. . . PIN		11
21	BACS21B5FH27	. . . STUD.		11
22	5-87839-3103	. . . SPOTWELD ASSY, INBOARD NACELLE STRUT TO WING RH . SIDE ACCESS PANEL (NACELLE NO. 2)		1
22	5-87839-3104	. . . SPOTWELD ASSY, INBOARD NACELLE STRUT TO WING LH . SIDE ACCESS PANEL (NACELLE NO. 3)		1
	9-64064-3001	. . CAP INSTL, INBOARD NACELLE STRUT TO WING PANEL. . . (NACELLE NO. 2)		1
	9-64064-3002	. . CAP INSTL, INBOARD NACELLE STRUT TO WING PANEL. . . (NACELLE NO. 3)		1
23	9-64064-2005	. . . CAP, INBOARD NACELLE STRUT TO WING PANEL (NACELLE NO. 2)		1
23	9-64064-2006	. . . CAP, INBOARD NACELLE STRUT TO WING PANEL (NACELLE NO. 3)		1
		. . ATTACHING PARTS		
	BACB30AB3-3	. . . BOLT.		2
	AN960-10L	. . . WASHER.		2
	NAS679A3W	. . . NUT		2
24	9-64064-2004	. . . DOUBLER, INBOARD NACELLE STRUT TO WING PANEL CAP (NACELLE NO. 3)		1
24	9-64064-2003	. . . DOUBLER, INBOARD NACELLE STRUT TO WING PANEL CAP (NACELLE NO. 2)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE


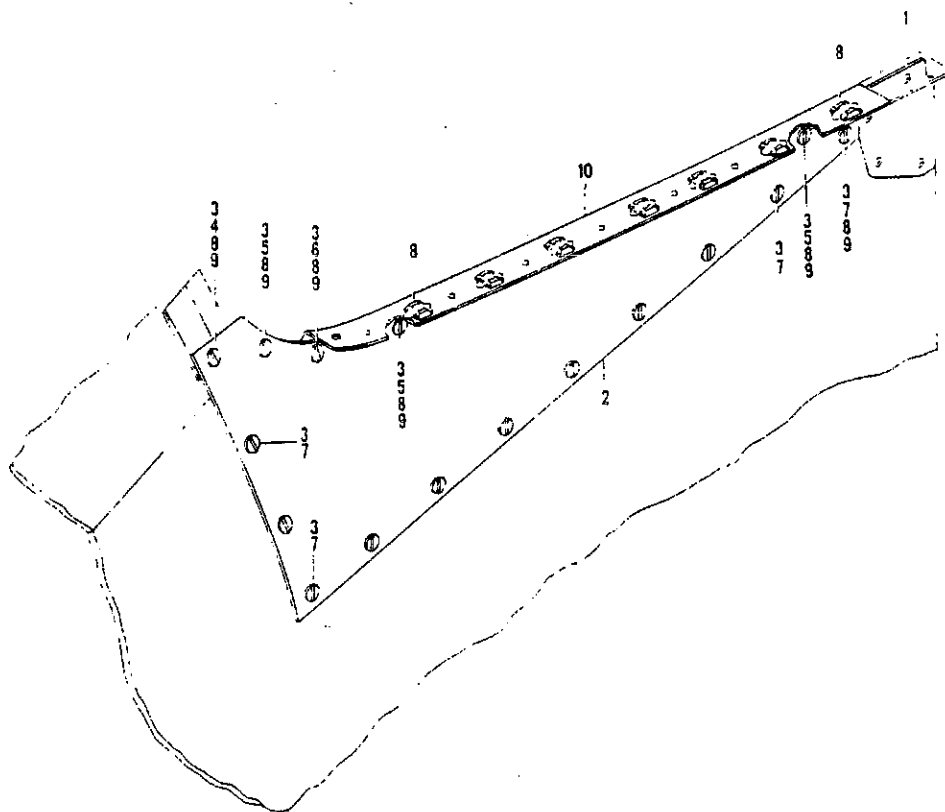


FIGURE 1. PANEL INST. 1, 2 AND 3 INBOARD NACELLE STRUT TO WING ACCESS

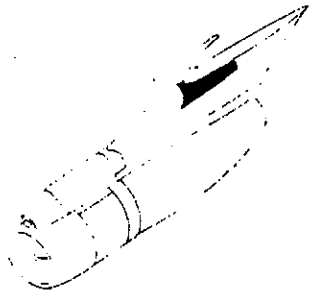

PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFF FROM TO	UNITS PER ASSY
4	5-87839-3071	PANEL INSTL, NO. 2 INBOARD NACELLE STRUT TO WING LH . . SIDE ACCESS (SEE 54-1, FIG. 18, ITEM 41)		RF
	5-87839-3072	PANEL INSTL, NO. 3 INBOARD NACELLE STRUT TO WING RH . . SIDE ACCESS (SEE 54-1, FIG. 18, ITEM 42)		RF
1	5-87839-49	. DOOR ASSY, PANEL (NACELLE NO. 2)		1
1	5-87839-50	. DOOR ASSY, PANEL (NACELLE NO. 3)		1
	NAS514P1032-8	. ATTACHING PARTS . SCREW		5
2	5-87839-3109	. PANEL ASSY, INBOARD NACELLE STRUT TO WING LH SIDE . . ACCESS (NACELLE NO. 2)		1
2	5-87839-3110	. PANEL ASSY, INBOARD NACELLE STRUT TO WING RH SIDE . . ACCESS (NACELLE NO. 3)		1
3	BACP18A5	. . PIN		20
4	BACS21B5FH33	. . STUD.		1
5	BACS21B5FH26	. . STUD.		7
6	BACS21B5FH34	. . STUD.		1
7	BACS21B5FH27	. . STUD.		11
8	BACS20A5P	. SPRING.		17
9	BACS18X56	. SPACER.		10
10	5-87839-3083	. ANGLE, INBOARD NACELLE STRUT TO WING ACCESS PANEL . . WING LH SIDE ATTACH (NACELLE NO. 2)		1
10	5-87839-3084	. ANGLE, INBOARD NACELLE STRUT TO WING ACCESS PANEL . . WING RH SIDE ATTACH (NACELLE NO. 3)		1
	MS20426D5	. ATTACHING PARTS . RIVET		7
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

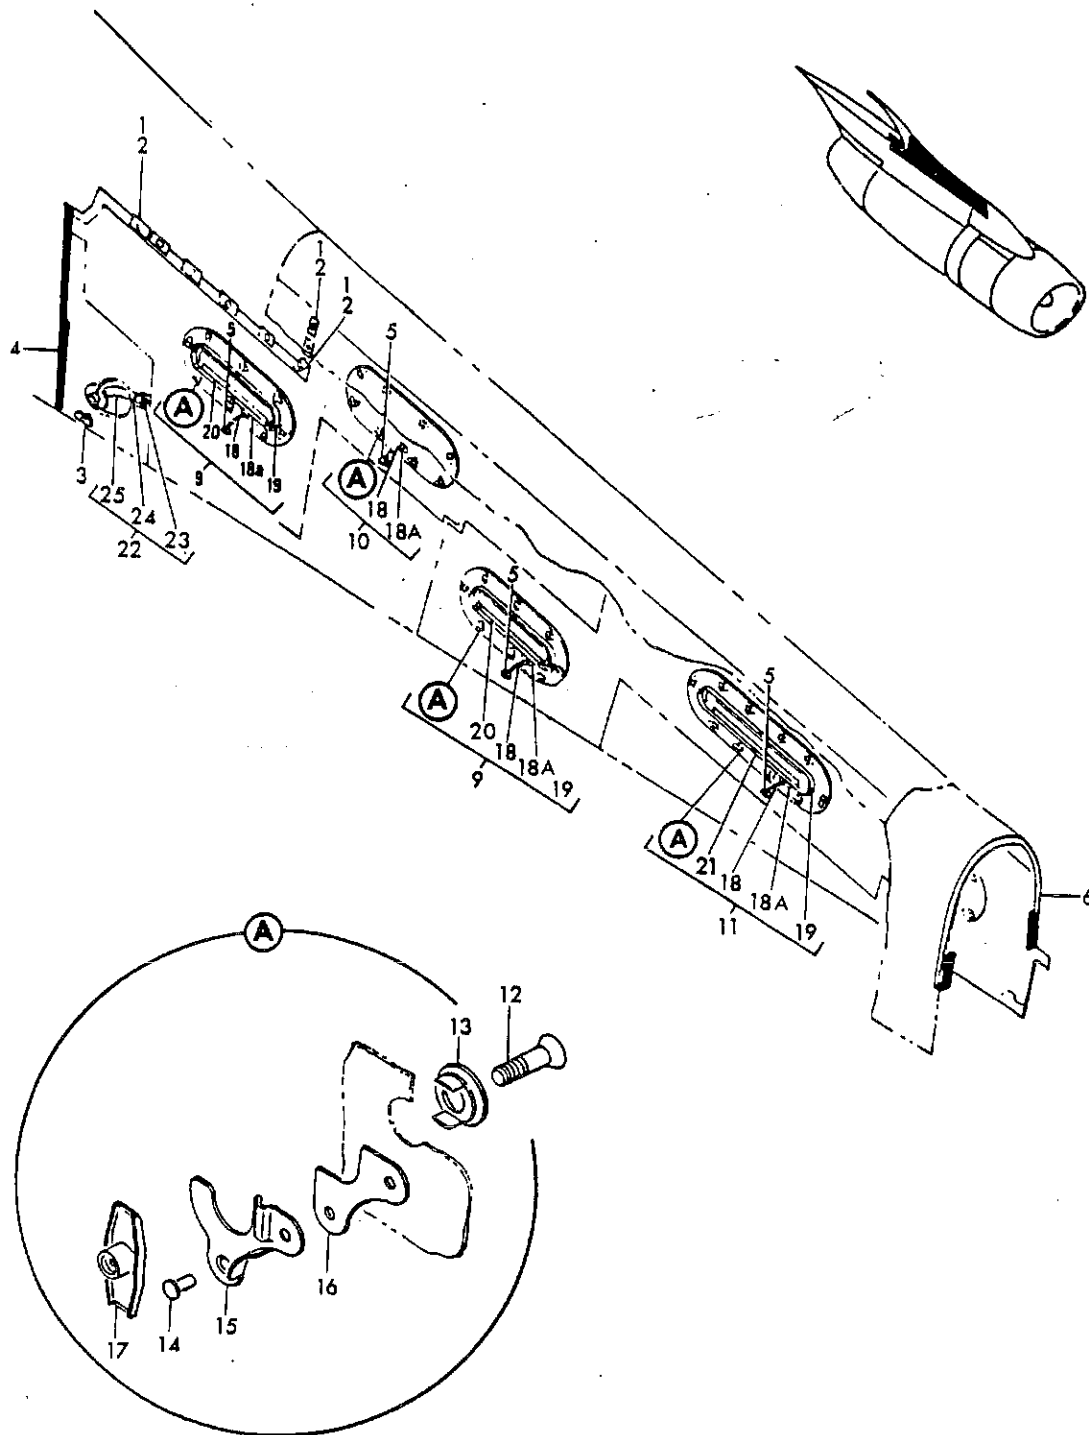


FIGURE 7. SKIN INSTL, OUTBOARD NACELLE STRUT



PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
7	65-2497-82		SKIN INSTL, OUTBOARD NACELLE STRUT LH SIDE (SEE 54-1, FIG. 9, ITEM 2)		RF
	65-2497-83		SKIN INSTL, OUTBOARD NACELLE STRUT RH SIDE (SEE 54-1, FIG. 9, ITEM 3)		RF
1	BACS18X56		. SPACER.		8
2	99947P130		. SPRING, (V61864).		8
3	66-1490-2000		. FITTING, NACELLE STRUT DRAIN.		1
	MS20426A4		. ATTACHING PARTS		
			. RIVET.		2
4	65-2497-90		. STRIP, RUB.		1
5	BACN1081		. WASHER, (LH ONLY).		4
6	65-2497-98		. STRIP, RUB.		1
9	65-23371-43		. DOOR ASSY, OUTBOARD NACELLE STRUT PRESSURE RELIEF ACCESS (LH ONLY)		2
10	69-11163-3		. DOOR ASSY, STATION 207 OUTBOARD NACELLE STRUT ACCESS (LH ONLY)		1
11	65-23371-42		. DOOR ASSY, OUTBOARD NACELLE STRUT PRESSURE RELIEF ACCESS (LH ONLY)		1
12	NASS14P428-8		. . SCREW, (USED ON 69-11164, 69-11163, -2, -3, ... 65-23371-4 AND -43)		8
12	NASS14P428-8		. . SCREW, (USED ON 69-10877, 65-23371-3 AND -42)		10
13	63-9651		. . INDICATOR, NACELLE ACCESS DOOR ROTARY LATCH (USED ON 69-11164, 69-11163 AND 65-23371-43)		8
13	63-9651-1		. . INDICATOR, NACELLE ACCESS DOOR ROTARY LATCH (USED ON 65-23371-4, 69-11163-2 AND -3)		8
13	63-9651-1		. . INDICATOR, NACELLE ACCESS DOOR ROTARY LATCH (USED ON 65-23371-3 AND -42)		10
14	MS20426D4		. . RIVET, (USED ON 69-11163, -2, -3, 65-23371-4 AND -43)		16
14	MS20426D4		. . RIVET, (USED ON 65-23371-3 AND -42)		20
15	66-25039		. . BLOCK, NACELLE ACCESS DOOR ROTARY LATCH (USED ON. . 69-11164, 65-23371-4 AND -43)		8
15	66-25039		. . BLOCK, NACELLE ACCESS DOOR ROTARY LATCH (USED ON. . 69-10877, 65-23371-3 AND -42)		10
15	66-25039		. . BLOCK, NACELLE ACCESS DOOR ROTARY LATCH ANCHOR. . . (USED ON 69-11163, -2, -3)		8
15	66-25039-1		. . BLOCK, NACELLE ACCESS DOOR ROTARY LATCH ANCHOR. . . (OPTIONAL TO 66-25039-1)		8
16	66-25040-1		. . PLATE, NACELLE ACCESS DOOR ROTARY LATCH (USED ON. . 69-11163, -2, -3, 65-23371-4 AND -43)		8
16	66-25040-1		. . PLATE, NACELLE ACCESS DOOR ROTARY LATCH (USED ON. . 69-10877, 65-23371-3 AND -42)		10
17	66-10344		. . NUT, NACELLE ACCESS DOOR ROTARY LATCH (USED ON. . 69-11164, 69-11163, -2, 65-23371-4 AND -43)		8
17	66-10344		. . NUT, NACELLE ACCESS DOOR ROTARY LATCH (USED ON. . 69-10877, 65-23371-3 AND -42)		10
17	66-10344-1		. . NUT, NACELLE ACCESS DOOR ROTARY LATCH (USED ON. . 69-11163-3)		8
18	BACS21C040-6		. . STUD.		1
18A	66-2009		. . RETAINER, DOOR ATTACHMENT NACELLE STRUT ACCESS. . . ATTACHING PARTS		1
	MS20426A4		. . RIVET, (USED ON 69-11163, -2, -3, 65-23371-3, -4, -42 AND -43)		2
19	MS20470A2		. . RIVET, (USED ON 65-23371-3, -4, -42 AND -43). . . .		4
20	65-22950-4		. . DOOR ASSY, PRESSURE RELIEF (USED ON 65-23371-4. . . AND -43)		1
21	65-22950-1		. . DOOR ASSY, (USED ON 65-23371-3 AND -42)		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

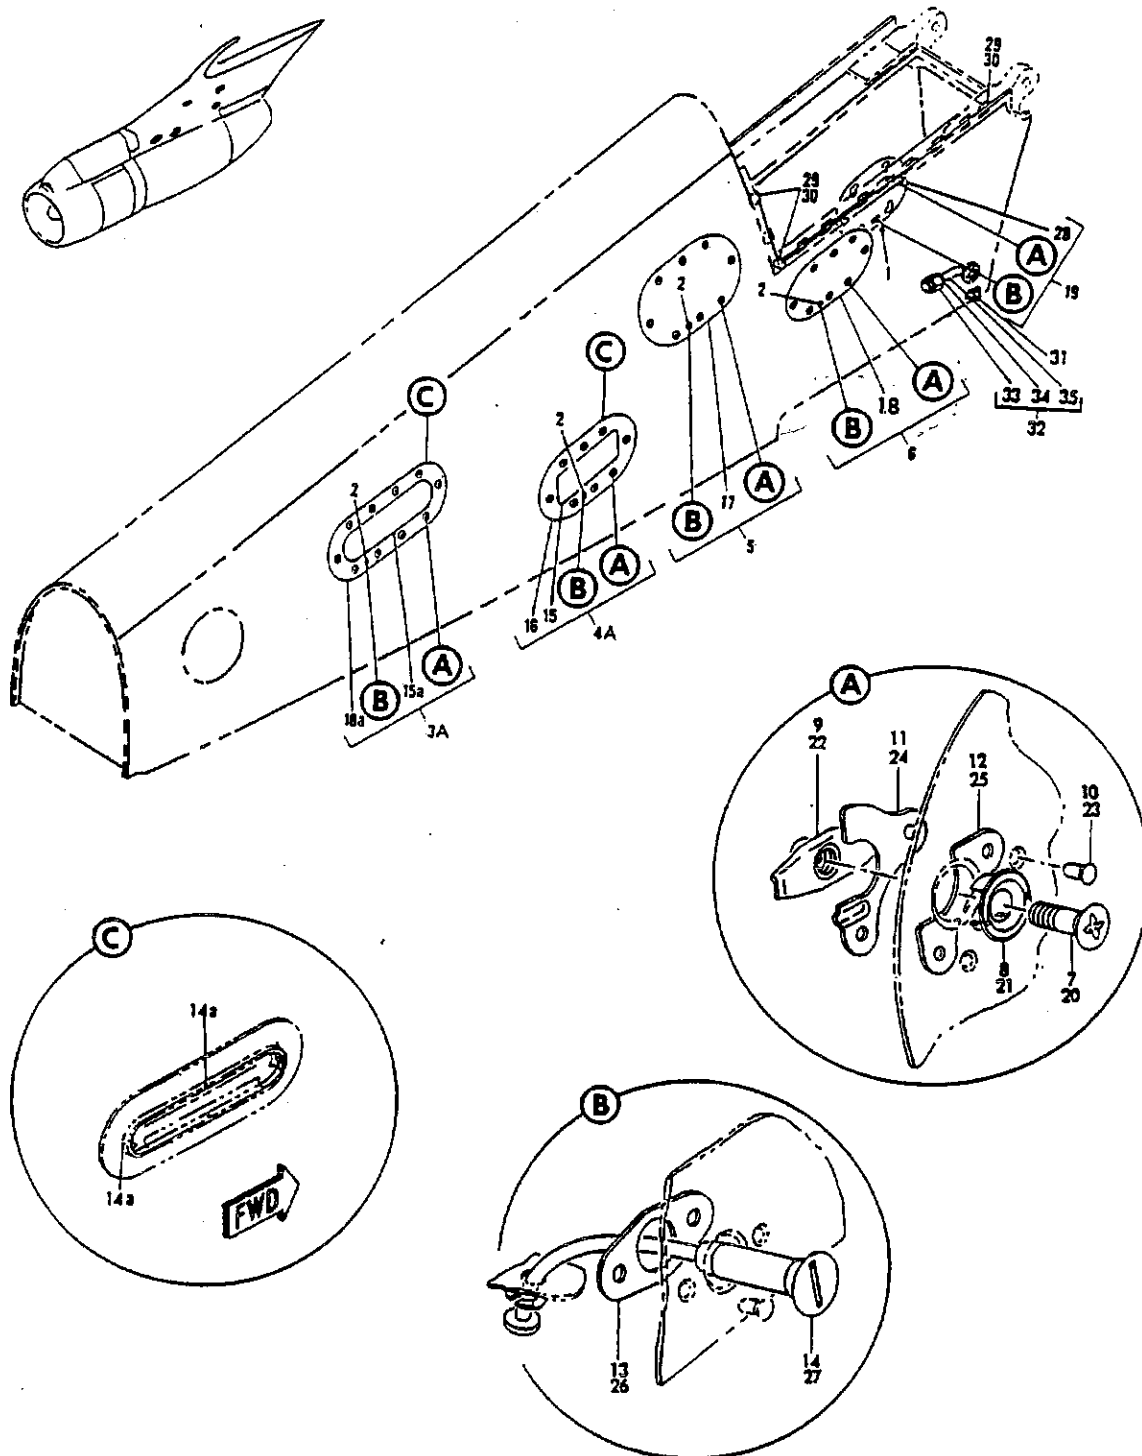


FIGURE 10. SKIN INSTL. INBOARD NACELLE STRUT

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
10	65-2518-80	SKIN INSTL, INBOARD NACELLE STRUT LH SIDE (SEE 54-1, . . . FIG. 24, ITEM 3)		RF
	65-2518-81	SKIN INSTL, INBOARD NACELLE STRUT RH SIDE (SEE 54-1, . . . FIG. 24, ITEM 4)		RF
1	BACW1081	. WASHER.		1
2	BACW1081	. WASHER, (LH ONLY)		4
3	65-23371-40	. DOOR ASSY, PRESSURE RELIEF ACCESS (LH ONLY)		1
4	65-23371-41	. DOOR ASSY, PRESSURE RELIEF ACCESS (LH ONLY)		1
5	69-11159-5	. DOOR ASSY, STATION 207 INBOARD NACELLE STRUT ACCESS . (LH ONLY)		1
6	69-11161-3	. DOOR ASSY, STATION 226 INBOARD NACELLE STRUT ACCESS . (LH ONLY)		1
7	NAS514P428-8	. . SCREW, (USED ON 65-23371-1, -40 AND 69-10878-3) . .		10
7	NAS514P428-8	. . SCREW, (USED ON 65-23371-2, -41, 69-11160, ... 69-11161, -2 AND -3)		8
7	BACB30FL4-1	. . SCREW, (USED ON 69-11159, -2 AND -5)		8
8	63-9651-1	. . INDICATOR, NACELLE ACCESS DOOR ROTARY LATCH (USED . ON 65-23371-2, -41, 69-11159-2, -5, 69-11161-2 AND -3)		8
8	63-9651-1	. . INDICATOR, NACELLE ACCESS DOOR ROTARY LATCH (USED . ON 65-23371-1 AND -40)		10
9	66-10344-1	. . NUT, NACELLE ACCESS DOOR ROTARY LATCH (USED ON. . . 65-23371-40)		10
9	66-10344-1	. . NUT, NACELLE ACCESS DOOR ROTARY LATCH (USED ON. . . 65-23371-41, 69-11159-5 AND 69-11161-3)		8
10	MS2042604	. . RIVET, (USED ON 65-23371-1, -40 AND 69-10878-3) . .		20
10	MS2042604	. . RIVET, (USED ON 65-23371-2, -41, 69-11159, -2, -5, 69-11161, -2 AND -3)		16
11	66-25039	. . BLOCK, NACELLE ACCESS DOOR ROTARY LATCH ANCHOR. . . (USED ON 65-23371-1, -40 AND 69-10878-3)		10
11	66-25039	. . BLOCK, NACELLE ACCESS DOOR ROTARY LATCH ANCHOR. . . (USED ON 65-23371-2, -41, 69-11160)		8
11	66-25039	. . BLOCK, NACELLE ACCESS DOOR ROTARY LATCH ANCHOR. . . (USED ON 69-11161, -2, -3, 69-11159, -2 AND -5) (OPTIONAL TO 66-25039-1)		8
11	66-25039-1	. . BLOCK, NACELLE ACCESS DOOR ROTARY LATCH ANCHOR. . . (USED ON 69-11161, -2, -3, 69-11159, -2 AND -5) (OPTIONAL 66-25039)		8
12	66-25040-1	. . PLATE, NACELLE ACCESS DOOR ROTARY LATCH SHIM (USED ON 65-23371-1, -40 AND 69-10878-3)		10
12	66-25040-1	. . PLATE, NACELLE ACCESS DOOR ROTARY LATCH SHIM (USED ON 65-23371-2, -41, 69-11160, 69-11159, -2 AND -5)		8
12	66-25040-3	. . PLATE, NACELLE ACCESS DOOR ROTARY LATCH SHIM (USED ON 69-11161, -2 AND -3)		8
13	66-2009	. . RETAINER, NACELLE STRUT ACCESS DOOR ATTACHMENT. . . ATTACHING PARTS		1
	MS20426A4	. . RIVET, (NOT USED ON 69-11160)		2
14	BACS21C040-8	. . STUD.		1
14A	MS20470A2	. . RIVET, (USED ON 65-23371-1, -2, -40, -41 AND. 69-10878-3)		4
15	69-10750-3	. . DOOR ASSY, PRESSURE RELIEF (USED ON 65-23371-2. . . AND -41)		1
15A	65-22950-1	. . DOOR ASSY, PRESSURE RELIEF (USED ON 65-23371-1. . . AND -40)		1
16	65-23371-12	. . DOOR ASSY, PRESSURE RELIEF ACCESS (USED ON. 65-23371-2 AND -41)		1
17	69-11159-1	. . DOOR, STATION 207 INBOARD NACELLE STRUT ACCESS. . . (USED ON 69-11159, -2 AND -5)		1
18	69-11161-1	. . DOOR, STATION 226 INBOARD NACELLE STRUT ACCESS. . . (USED ON 69-11161, -2 AND -3)		1
18A	65-23371-9	. . DOOR ASSY, PRESSURE RELIEF ACCESS (USED ON. 65-23371-1 AND -40)		1
19	69-11162-3	. DOOR ASSY, INBOARD NACELLE STRUT ACCESS RH (RH ONLY)		1
20	NAS514P428-8	. . SCREW		6
21	63-9651-1	. . INDICATOR, NACELLE ACCESS DOOR ROTARY LATCH (USED . ON 69-11162-2 AND -3)		6
22	66-10344-1	. . NUT, NACELLE ACCESS DOOR ROTARY LATCH		6
23	MS2042604	. . RIVET		12
24	66-25039	. . BLOCK, NACELLE ACCESS DOOR ROTARY LATCH ANCHOR. . .		6
25	66-25040-3	. . PLATE, NACELLE ACCESS DOOR ROTARY LATCH SHIM. . . .		6
26	66-2009	. . RETAINER, NACELLE STRUT ACCESS DOOR ATTACHMENT. . .		1

MISSING ITEM NUMBERS ARE NOT APPLICABLE

BOEING **707**
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE							EFF FROM TO	UNITS PER ASSY
		1	2	3	4	5	6	7		
10		ATTACHING PARTS								
	MS20426A4	. . RIVET								2
		-----*								
27	BACS21C040-8	. . STUD.								1
28	69-11162-1	. . DOOR, INBOARD NACELLE STRUT ACCESS RH								1
29	BACS20A5P	. SPRING.								11
30	BACS18X56	. SPACER.								11
		ATTACHING PARTS								
	MS20426A4	. RIVET								22
		-----*								
31	66-1490-2000	. FITTING, NACELLE STRUT DRAIN.								1
		ATTACHING PARTS								
	MS20426A4	. RIVET								2
		-----*								
MISSING ITEM NUMBERS ARE NOT APPLICABLE										

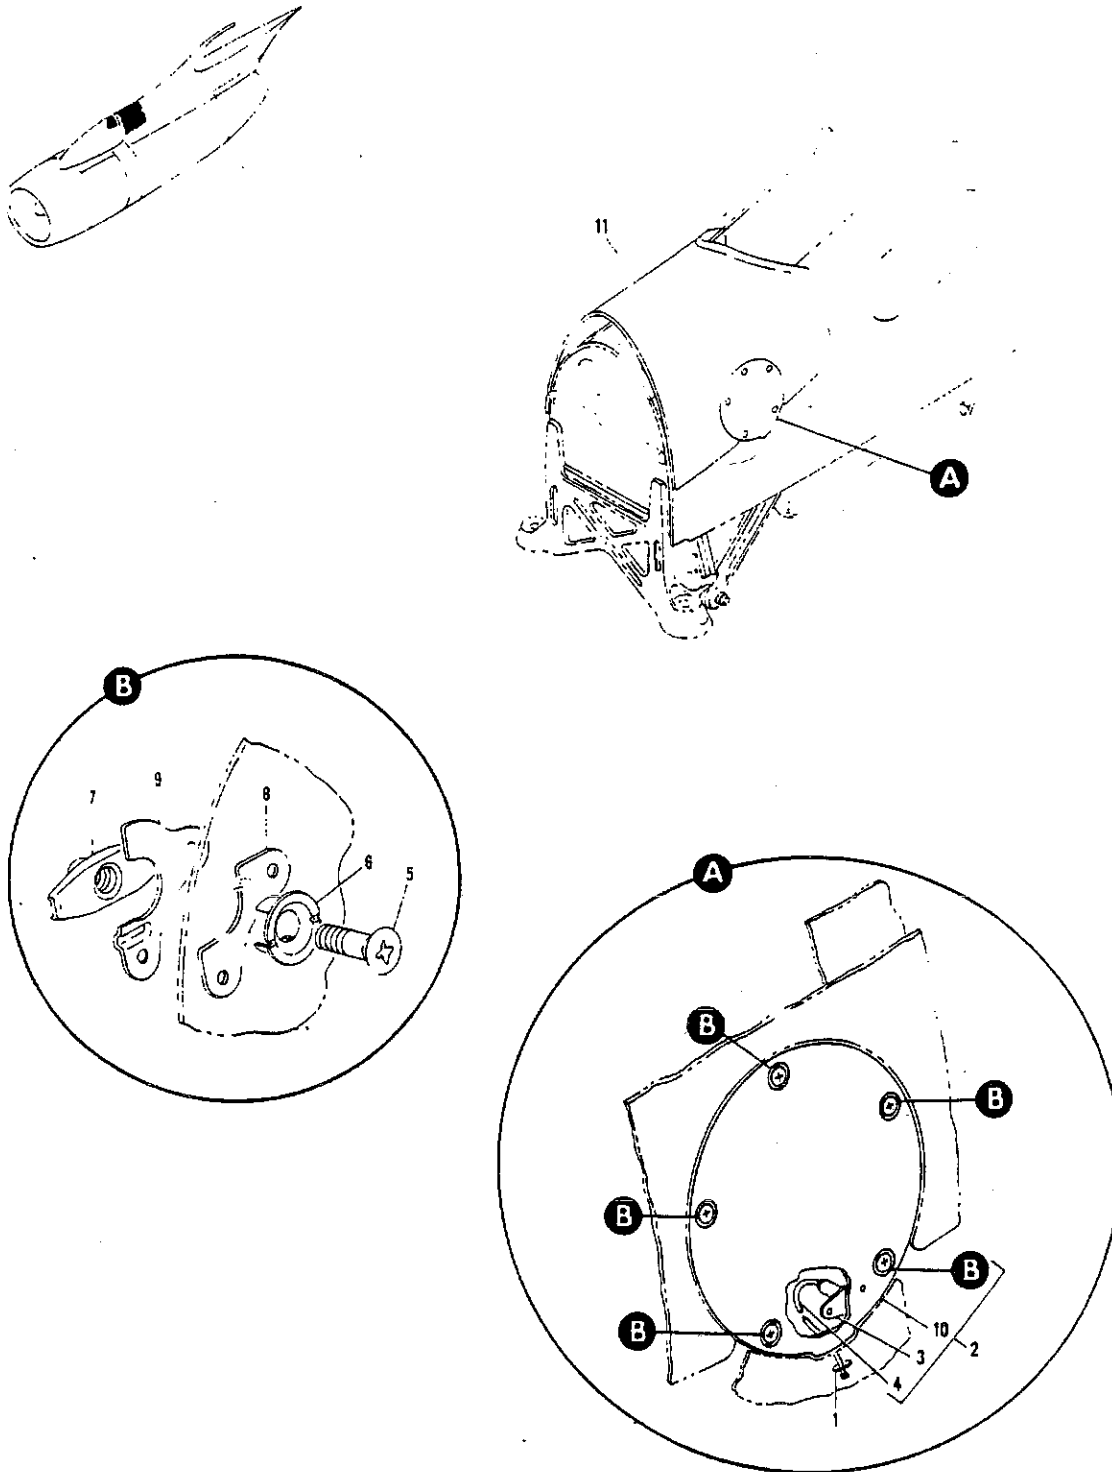


FIGURE 11. FAIRING INSTL, STRUT SADDLE
DOOR INSTL, NACELLE STRUT

BOEING
Intercontinental
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
11	69-10869-1	DOOR INSTL, OUTBOARD NACELLE STRUT (NACELLE NO. 1) (SEE 54-1, FIG. 6A, ITEM 23, 54-1, FIG. 6B, ITEM 18 AND 54-1, FIG. 6C, ITEM 23)		RF
	65-10614-26	FAIRING INSTL, INBOARD STRUT SADDLE (NACELLES NO. 2 AND 3) (SEE 54-1, FIG. 24, ITEM 2)		RF
	65-10614-27	FAIRING INSTL, OUTBOARD STRUT SADDLE (NACELLE NO. 4). . (SEE 54-1, FIG. 6A, ITEM 25, 54-1, FIG. 6B, ITEM 19 AND 54-1, FIG. 6C, ITEM 24)		RF
1	BACW1081	. WASHER.		1
2	69-11165-3	. DOOR ASSY, STATION 146 NACELLE STRUT ACCESS.		1
3	66-2009	. . RETAINER, NACELLE STRUT ACCESS DOOR ATTACHMENT. . .		1
	MS20426A4	. . ATTACHING PARTS . . RIVET		2
4	BACS21C040-8	. . STUD.		1
5	NAS514P428-8	. . SCREW		5
6	63-9651-1	. . INDICATOR, NACELLE ACCESS DOOR ROTARY LATCH (USED ON 69-11165-2 AND -3)		5
7	66-10344-1	. . NUT, NACELLE ACCESS DOOR ROTARY LATCH (USED ON. . . 69-11165-3)		5
8	66-25040-1	. . SHIM, NACELLE ACCESS DOOR ROTARY LATCH PLATE. . . .		5
9	66-25039	. . BLOCK, NACELLE ACCESS DOOR ROTARY LATCH ANCHOR. . .		5
10	69-11165-1	. . DOOR, STATION 146 INBOARD NACELLE STRUT ACCESS. . .		1
11	65-10614-32	. FAIRING ASSY, (NACELLES NO. 2 AND 3).		1
11	65-10614-33	. FAIRING ASSY, (NACELLE NO. 4)		1
	NAS517-3-2	. . ATTACHING PARTS . . SCREW, (NACELLES NO. 2 AND 3)		17
	NAS517-3-2	. . SCREW, (NACELLE NO. 4).		15
	NAS517-3-3	. . SCREW, (NACELLES NO. 2 AND 3)		3
	NAS517-3-3	. . SCREW, (NACELLE NO. 4).		4
	NAS687A3	. . NUT, (NACELLES NO. 2, 3 AND 4).		6
	NAS686A3	. . NUT, (NACELLES NO. 2 AND 3)		13
	NAS686A3	. . NUT, (NACELLE NO. 4).		11
	NAS680A3	. . NUT, (NACELLES NO. 2, 3 AND 4).		2
MISSING ITEM NUMBERS ARE NOT APPLICABLE				

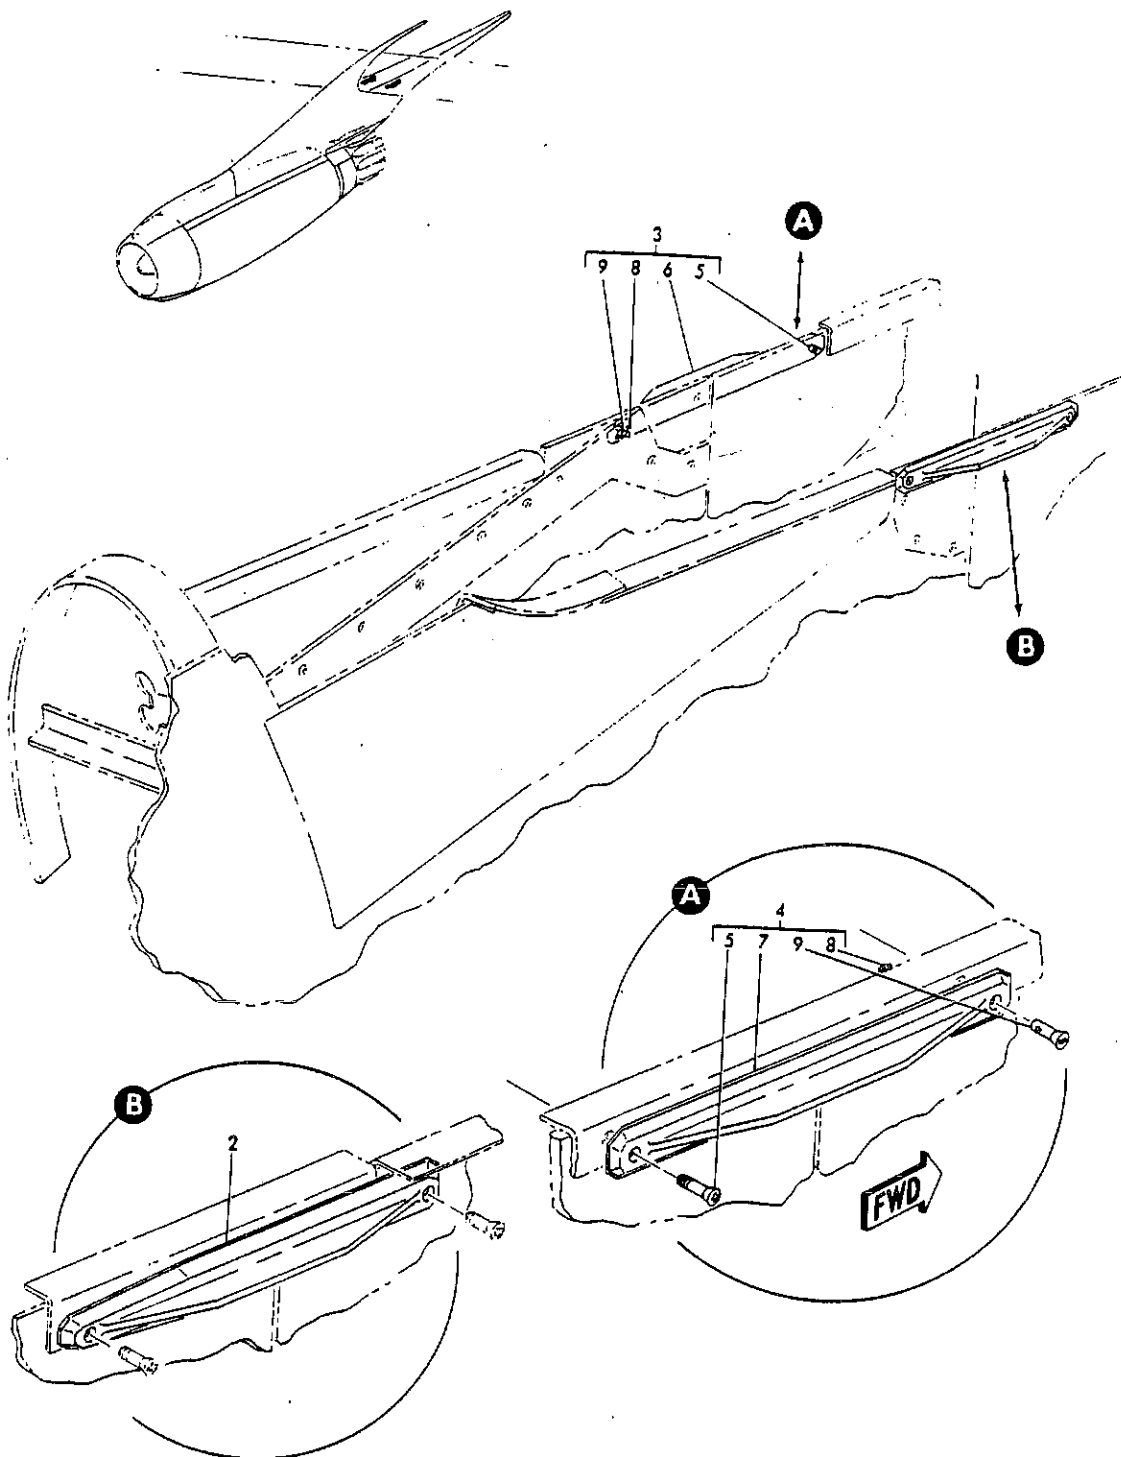


FIGURE 14. STRAP INSTL. STRUT ACCESS PANEL TO FAIRING ATTACH

BOEING
Intercontinental
707
PARTS CATALOG

FIGURE & ITEM NO.	MANUFACTURER'S PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFF FROM TO	UNITS PER ASSY
14	65-60900-1		STRAP INSTL, INBOARD STRUT ACCESS PANEL TO FAIRING. . .		RF
			ATTACH (SEE 54-1, FIG. 16, ITEM 42, 54-1, FIG. 17, ITEM 1 AND 54-1, FIG. 18, ITEM 34A)		
	65-60900-2		STRAP INSTL, INBOARD STRUT ACCESS PANEL TO FAIRING. . .		RF
			ATTACH (SEE 54-1, FIG. 16, ITEM 43, 54-1, FIG. 17, ITEM 1A AND 54-1, FIG. 18, ITEM 34B)		
	65-60900-3		STRAP INSTL, OUTBOARD STRUT ACCESS PANEL TO FAIRING. . .		RF
			ATTACH (SEE 54-1, FIG. 1, ITEM 28B, 54-1, FIG. 2, ITEM 1A AND 54-1, FIG. 3, ITEM 40A)		
	65-60900-4		STRAP INSTL, OUTBOARD STRUT ACCESS PANEL TO FAIRING. . .		RF
			ATTACH (SEE 54-1, FIG. 1, ITEM 28C, 54-1, FIG. 2, ITEM 1B AND 54-1, FIG. 3, ITEM 40B)		
1	69-48184-2		. STRAP, (USED ON 65-60900-2)		1
2	69-48184-4		. STRAP, (USED ON 65-60900-4)		1
			ATTACHING PARTS		
	NAS517-3-5		. SCREW		8
			-----*		
3	65-60900-5		. STRAP ASSY, (USED ON 65-60900-1)		1
4	65-60900-6		. STRAP ASSY, (USED ON 65-60900-3)		1
5	NAS517-3-5		. . SCREW		1
6	69-48184-1		. . STRAP, (USED ON 65-60900-5)		1
7	69-48184-3		. . STRAP, (USED ON 65-60900-6)		1
8	BACP18A5		. . PIN		1
9	BACS2185PH40		. . STUD.		1
MISSING ITEM NUMBERS ARE NOT APPLICABLE					